



Key to basic wiring diagram for 1976 North American models

1	Battery	36	Ventilator fan motor	70	Seat belt contact, left
2	Alternator	37	Radiator fan motor	72	Warning light, seat belts
3	Voltage regulator	38	Radiator fan relay	73	Service outlet, ignition setting
4	Starter motor	39	Radiator fan thermostat contact	74	Resistance, low speed, fan
5	Ignition coil	40	Horn	76	8-pin connector
6	Ignition distributor	41	Horn contact	79	Vacuum contact
8	Light relay	42	Brake warning contact	80	Buzzer
9	Headlight dimmer/flasher switch	43	Handbrake contact	82	Belt relay
10	Light switch	44	Oil warning contact	85	EGR control lamp
11	High beam	45	Temperature transmitter	86	EGR contact
12	Dimmed beam	46	Fuel level transmitter	89	Start inhibitor relay
13	Front parking light	47	Combination instrument: fuel gauge, fuel warning light, temperature gauge, oil warning light, ignition light, brake warning light, high beam indicator light, direction indicator repeater	90	Start inhibitor and back-up light contact
14	Tail light			91	Gear indicator light
15	Number plate light	48	Cigarette lighter	92	Thermo-time switch
16	Resistance switch, instrument panel illumination	49	Clock	93	Air flow sensor switch
17	Switch light	50	Interior light, door pillar	94	Cold start valve
18	Instrument panel light	51	Interior light, rear view mirror	95	Auxiliary air valve
19	Glove compartment and heater control light	52	Ignition switch light	96	Warm-up regulator
20	Ignition	53	Interior lighting switch	101	Safety relay
21	Ignition relay	54	Door contact, interior lighting	102	Pump relay
22	Fuse box	55	Luggage boot light	103	Fuel pump
24	Direction indicator switch	56	Luggage boot light contact	105	Side position light
25	Hazard warning signal switch	57	3-pin connector	107	Key contact
26	Hazard warning signal repeater	58	12-pin connector	110	Tachometer
27	Direction indicator lights, left	59	2-pin connector	112	Electronic flasher unit
28	Direction indicator lights, right	60	1-pin connector	113	Relay for electrically heated rear window
29	Stop light contact	61	Wiper and washer system switch	115	Electrically heated rear window
30	Stop lights	62	Windscreen wiper	116	Switch, electrically heated rear window
31	Reversing lights contact	63	Washer motor		
32	Reversing lights	64	Seat heating element with thermostat		
35	Ventilator fan switch				


Colour Code

BL	Blue
BR	Brown
GL	Yellow
GN	Green
GR	Grey
RD	Red
SV	Black
VT	White
BL/VT	Blue/White
BR/VT	Brown/White
GN/VT	Green/White
RD/VT	Red/White

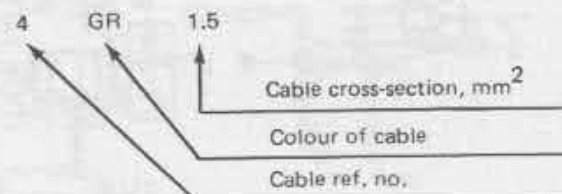

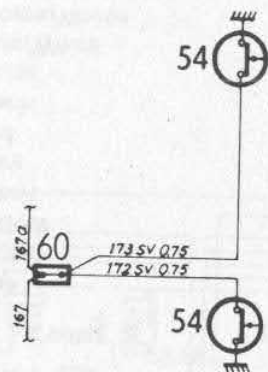


DETAILS OF WIRING DIAGRAM, 4-DOOR CARS

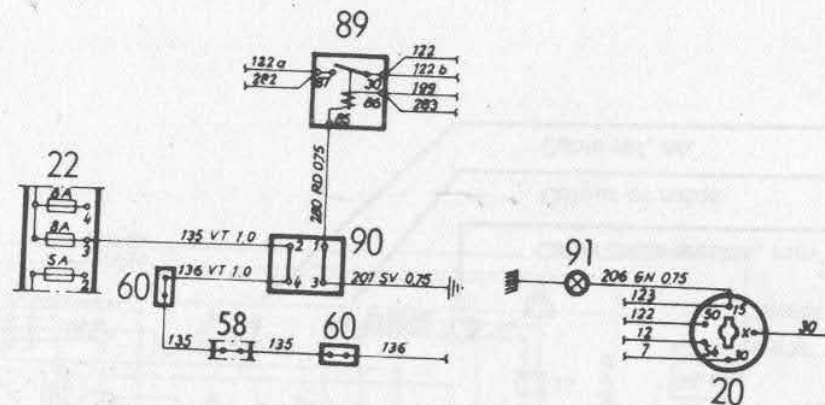


31 Back up light contact replaced by 1 pole jointing case


DETAILS OF WIRING DIAGRAM, AUTOMATIC TRANSMISSION

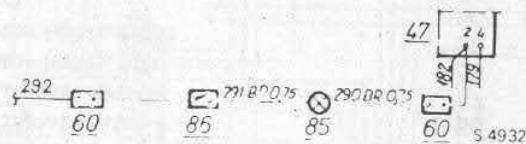


DETAILS OF WIRING DIAGRAM, EGR SYSTEM

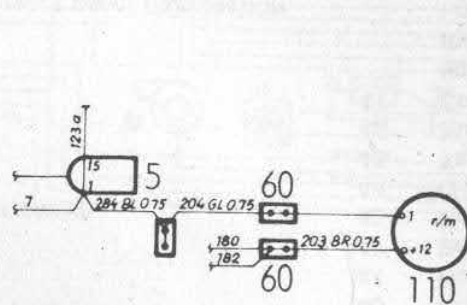

DETAILS OF WIRING DIAGRAM, SAAB 99 EMS

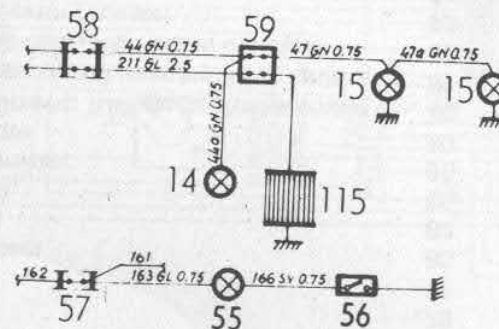

DETAILS OF WIRING DIAGRAM, SAAB 99 WAGONBACK

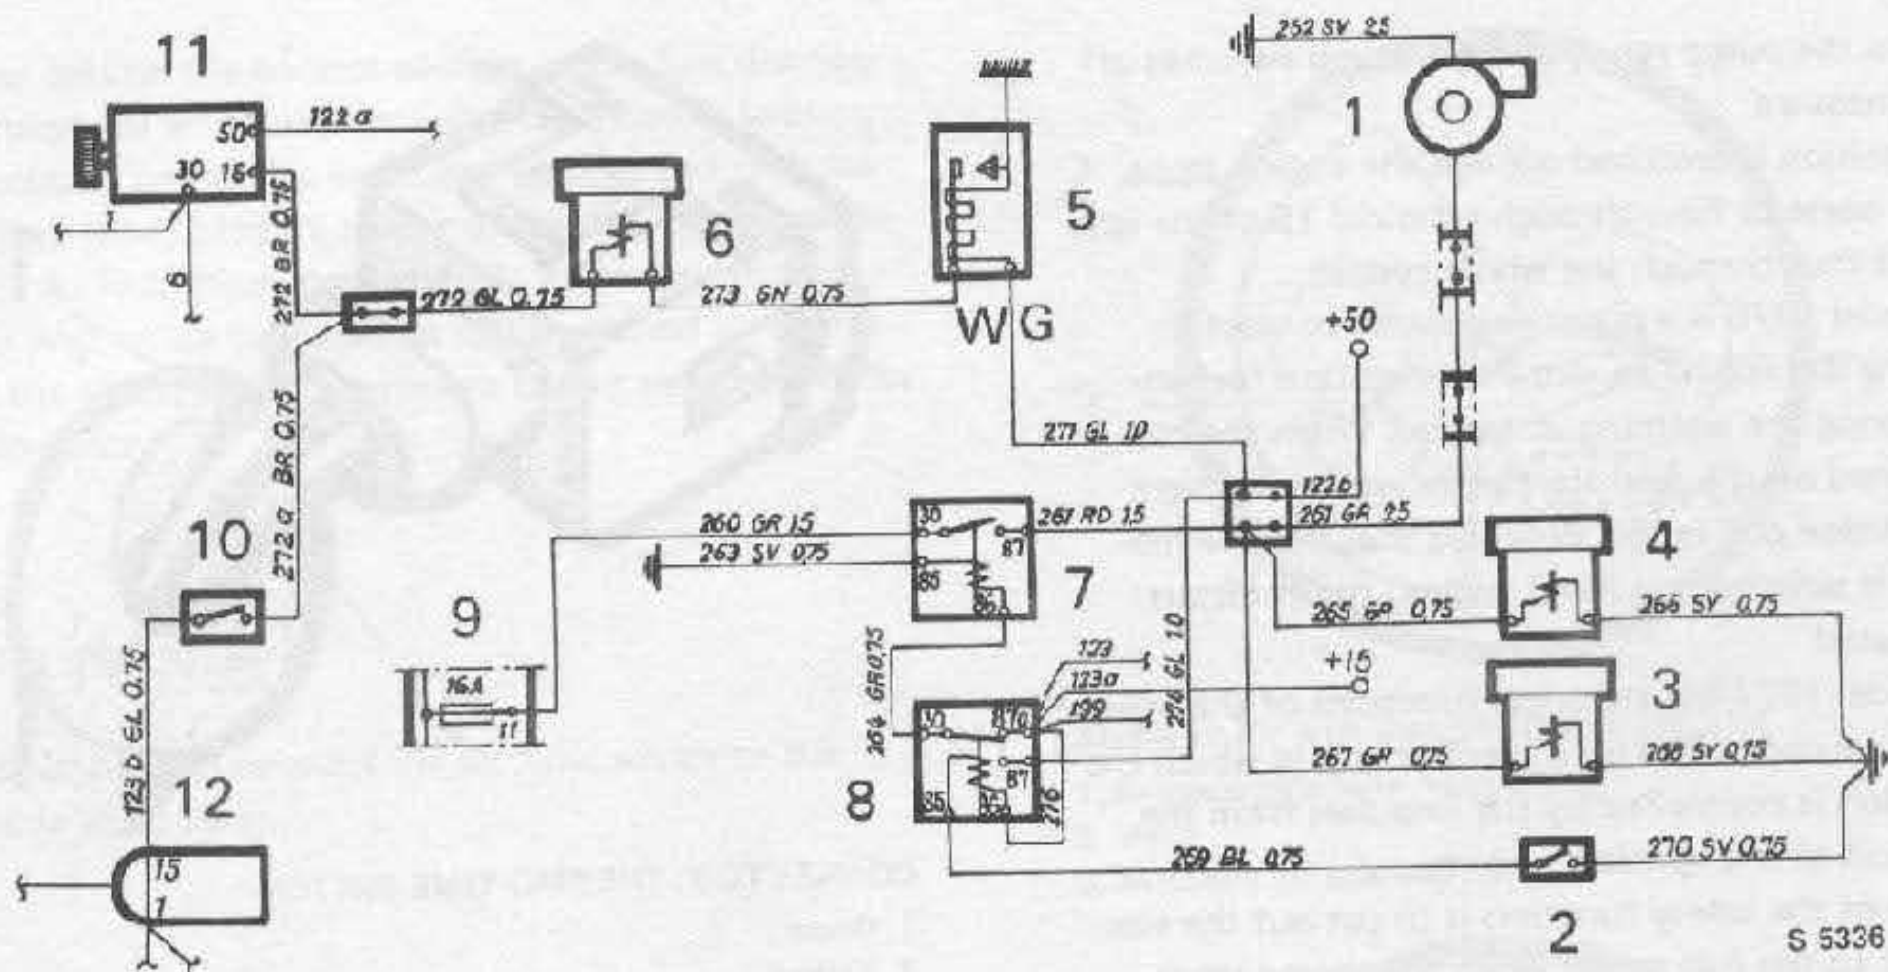

S 5336

ELECTRICAL SYSTEM, MODEL 1976

1. Fuel pump
2. Contact, air flow sensor
3. Coil, warm-up regulator
4. Coil, auxiliary air valve

5. Thermo-time switch
6. Cold start valve
7. Fuel pump relay
8. Safety relay

9. Fuse
10. Pressure impulse contact
11. Starter
12. Ignition coil



WIRING DIAGRAM, SAAB 99 GLE, MODEL 1978

