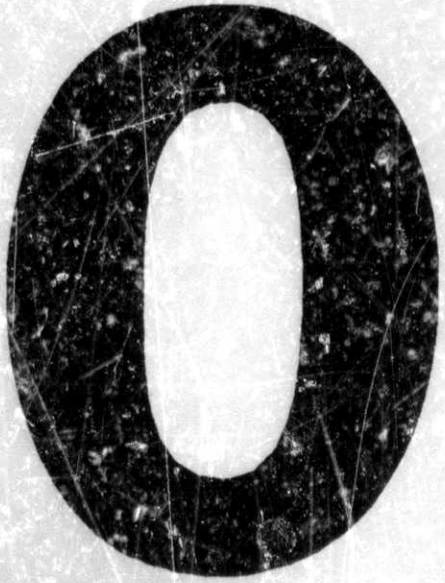


General
Allmänt
Generalidades

SAAB 900

900 1990-1993
900 CV 1990-1994

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 170027

© Saab Automobile AB 199-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	5-A02

0	General Allmänt Generalidades
2	Engine Motor Motor
3 A B	Electrical system, instruments Elektriskt system, instrument Sistema elétrico, instrumentos
4	Transmission Kraftöverföring Transmisión
5	Brakes Bromsar Frenos
6	Front assembly, steering Framvagn, styrinrättning Tren delantero, dirección
7	Suspension, wheels Fjädringssystem, hjul Suspensión, ruedas
8 A B C	Body Kaross Caroccería
9	Tools, labels Verktyg, etiketter Herramientas, etiquetas
10	Numerical register Nummerregister Indice numérico

GENERAL

INTRODUCTION	1-A05
ABBREVIATIONS	1-A06
MODEL IDENTIFICATION	1-A09
CHASSIS NUMBER	1-A11
ENGINE AND GEARBOX NUMBER	1-A13
STOCK-KEEPING LEVEL	1-A14
INSTRUCTIONS	1-A17
COLOUR MARKING SPRING	1-B01

ALLMÄNT

INLEDNING	1-A05
FÖRKORTNINGAR	1-A06
MODELLIDENTIFIKATION	1-A09
CHASSINUMMER	1-A11
MOTOR- OCH VÄXELLÅDSNUMMER	1-A13
LAGERHÅLLNINGSNIVÅ	1-A15
ANVISNINGAR	1-A17
FÄRGMÄRKNING FJÄDER	1-B01

GENERALIDADES

INTRODUCCION	1-A05
ABREVIACIONES	1-A07
IDENTIFICACION DEL MODELO	1-A09
NUM. DE CHASIS	1-A11
NUM. DE MOTOR Y CAJA DE CAMBIOS	1-A13
NIVEL DE ALMACENAJE	1-A16
INSTRUCCIONES	1-A17
MARCACIÓN DE COLOR RESORTE	1-B01

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

This Parts Catalogue is applicable to the 1990-1993 models of the Saab 900. Saab 900 CV 1990-1994. It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering uphlstery.

Parts may be listed in this catalogue that are no longer available from SAAB warehouses, but of which importers or dealers may have stock. These articles are indicated by the term "No Longer Serviced" or **NLS** being included in the notes column. If there is a replacing part no. it is shown after NLS (NLS - use 7519132)

Denna reservdelskatalog för Saab 900 omfattar årsmodellerna 1990-1993, Saab 900 CV 1990-1994. Den kommer att hållas aktuell genom att nya fiche ges ut. Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.

I denna katalog kan finnas artiklar som inte längre finns tillgängliga från SAAB's lager men som kan finnas tillgängliga hos importör eller återförsäljare. Dessa artiklar är märkta i anmärkningskolumnen med **NLS** (No Longer Serviced). Finns ersättande artikel skrivs art. nr efter NLS (NLS - use 7519132)

Este catálogo de piezas de recambio del Saab 900 comprende los modelos de los anos 1990-1993, Saab 900 CV 1990-1994, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, que indicar el tipo del coche clave color de la tapicería.

En este catálogo pueden existir artículos no existentes ya en la actualidad en el almacén de SAAB, pero disponibles todavía en algunos casos on las dependencias del importador o concesionario. Estos artículos han sido marcados con **NLS** (No Longer Serviced) en la columna dedicada a las observaciones. En caso de existir un artículo sustitutorio, el número del mismo se escribe inmediatamente después de NLS (NLS - use 7519132).

A	Automatic transmission	Automatisk växellåda
ABS	Anti block system	Låsningsfria bromsar
AC	Air Conditioning	Luftkonditionering
APC	Automatic Performance Control	Automatisk laddtryckskontroll
B201	2,0 l engine with single cam	2,0 l motor med en kamaxel
B202	2,0 l engine with twin cam	2,0 l motor med två kamaxlar
B212	2,1 l engine with twin cam	2,1 l motor med två kamaxlar
B202S	2,0 l turbo engine with twin cam, without charge cooler	2,0 l turbomotor med två kamaxlar, utan laddluftkyl
C	Carburetor	Förgasare
CK	Combi Coupé, 3 or 5 D	Combi-Coupé, 3 eller 5 D
CL	Central locking	Centrallås
CV	Convertible	Cabriolet
D	Door	Dörr
EAS	Electrically adjustable seat	Elmanövrerad stol
EGR	Exhaust Gas Recirculation	Avgasrecirkulation
ELCD	Evaporative Loss Control Device	Slutet bränslesystem
EM	Electrical mirrors	Elmanövrerade backspeglar
EW	Electrical window regulators	Elmanövrerade fönsterhissar
HP	Horse Power	Hästkraft
I	Fuel injection	Motor med bränsleinsprutning
KW	Kilo Watt	Kilo Watt
L	Length	Längd
LH	Left hand	Vänster
LHD	Left hand drive	Vänsterstyrd
M	Manual transmission	Manuell växellåda
MM	Millimetre	Millimeter
RH	Right hand	Höger
RHD	Right hand drive	Högerstyrd
SN	Sedan, 2 or 4 D	Sedan, 2 eller 4 D
SR	Sun roof	Soltucka
X	Quantity as required	Antal efter behov

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

A	Caja de cambios automatico
ABS	Frenos antibloqueo
AC	Acondiciona miento de aire
APC	Control automatico de presion de alimentacion
B201	Motor de 2,0 litros con un eje de levas
B202	Motor de 2,0 litros con dos ejes de levas
B212	Motor de 2,1 litros con dos ejes de levas
B202S	Motor de 2,0 litros con turbo y dos ejes de levas sin entriamiento de aire de admision
C	Carburador
CK	Combi coupé, 3 ó 5 D
CL	Cerradura
CV	Cabriolet
D	Puerta
EAS	Asientos maniobra eléctrica
EGR	Recirculation de los gase de escape
ELCD	Sistema de combustible cerrado
EM	Espejos retrovisores elétricos
EW	Levantacristales eléctricos
HP	Caballo de vapor
I	Motor de inyeccion
KW	Kilowattio
L	Longitud
LH	Lado izquierdo
LHD	Tracción a la izquierda
M	Caja de cambios manual
MM	Millimetros
RH	Lado derecho
RHD	Volante a la derecha
SN	Sedan, 2 ó 4 D
SR	Techo corredizo
X	Cantidad segun necesidad

AU	Australia	Australien	Australia
BE	Belgium	Belgien	Bélgica
CA	Canada	Canada	Canadá
CH	Switzerland	Schweiz	Suiza
DK	Denmark	Danmark	Dinamarca
DT	Germany	Tyskland	Alemania
EU	Europe	Europa	Europa
FE	Far East	Fjärran Östern	Extremo Oriente
FI	Finland	Finland	Finlandia
FR	France	Frankrike	Francia
GB	Great Britain	England	Gran Bretana
IT	Italy	Italien	Italia
JP	Japan	Japan	Japón
LA	Latin Amerika	Latinamerika	Amérika Latina
ME	Middle East	Mellersta Östern	Próximo Oriente
NO	Norway	Norge	Noruega
PA	Pacific	Stilla-havsområdet	Zona del Pacífico
SE	Sweden	Sverige	Suecia
SG	Singapore	Singapore	Singapur
TW	Taiwan	Taiwan	Taiwan
UC	USA-California	USA-Kalifornien	EE.UU. Californi.
UF	USA-Federal	USA-Federalt	EE.UU., Federal
US	USA	USA	EE.UU

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-G02**
4	**Transmission**	**3-A02**
5	**Brakes**	**3-D02**
6	**Front assembly, Steering**	**3-F02**
7	**Suspension, Wheels**	**3-H02**
8A	**Body, external**	**4-A02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
9	**Tool, Labels**	**5-L02**
10	**Numerical register**	**6-A02**

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	5-A02




Engine number
Motornummer
Número de motor

Gear box number, manual transmission
Växellådsnummer, manuell växellåda
Número de caja de cambios,
caja manual

Gear box number, automatic transmission
Växellådsnummer, automatisk växellåda
Número de caja de cambios,
caja automática

1991-

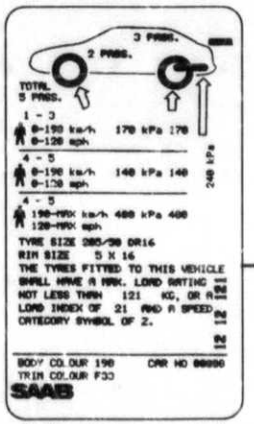


Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería


1990




Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería



Body number
Karossnummer
Número de carroceria



Chassis number
Chassinummer
Número de chasis

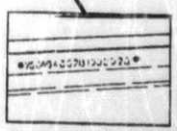

Chassis number stamped
on the body
Chassinumret är instansat
i karossen
Número de chasis estampado
en la carroceria

Vehicle Identification Number, VIN (chassis number)

YS3 A C 5 5 L X M 1 000001

Manufacturer Tillverkare Fabricante	Saab Automobile AB
Product line Produktline Producto	Saab 900
Series Modellserie Serie	A -Z = internal use only
Body type Karosstyp Carrocería	2-5 = 2-5 door Sedan or Combi Coupe 7 = 2 door Convertible
Gear box Växellåda Cambio	5 = 5-speed, manual 6 = 3-speed, automatic
Engine type Motortyp Motor	C = B201 C L = B202 Turbo D = B202 I S = B202 Turbo without charge cooler E = B212 I J = B201 I
Check number Kontrollsiffra Cifra de control	0 - 9 or X
Model year Årsmodell Modelo de ano	L = 1990 M = 1991
Assembly plant Tillverkningsort Lugar de Montaje	1 = Arlöv, Sweden 5 = Malmö, Sweden 7 = Nystad, Finland 9 = Trollhättan, Sweden, line C
Serial number Tillverkningsnummer Número de serie	000001-

1990

YS3AL36L8L3000001-YS3AL36L7L3007862

YS3AD35L4L5000001-YS3AC46D3L5005304

YS3AD35L9L7000001-YS3AC55D4L7029218

1991

YS3AC55D3M2500001-YS3AC55E1M2500488

YS3AC35E2M3000001-YS3AL36L1M3000004

YS3AC46E6M7000001-YS3AL75L2M7022269

YS3AC45EXM5000001-YS3AD35L8M5014243

1992

YS3AZ35L7N2000001-YS3AC55E7N2024457

YS3AD55L0N7000001-YS3AD76L5N7013983

YS3AD46L5N5000001-YS3AL35L1N5000012


1993

YS3AC36E1P2000001-YS3AD35L6P2019835

YS3AD75L2P7000001-YS3AD76SXP7006352

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

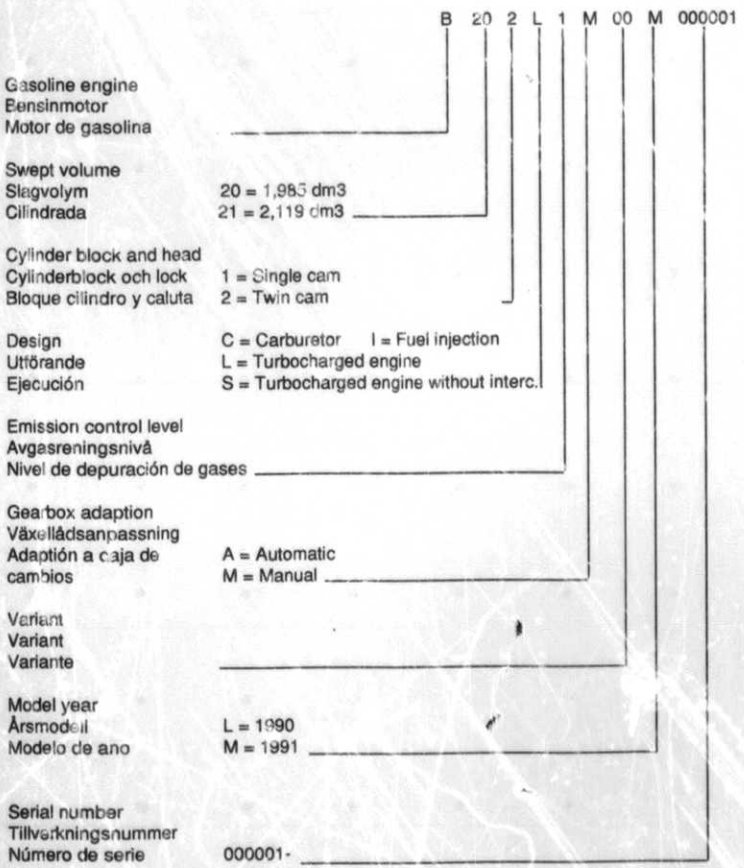

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column bellow.

Stock-keeping level 1	Parts for service and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts fromrecommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Oulet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Oulet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Automobile central stores in Nyköping, Sweden

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicarbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar ur lagerhållningsnivå 1-2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder artiklar ur lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saab Automobiles centrallager i Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los concepros siguientes.

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc
Nivel 6	Artículos de poco movimiento en grado extremo

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente

Nivel 1	Tallares y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precesente, con capacidad para servicio y reparaciones que requieren arículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén pricipalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y alguns concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Saab Automobile almacén central en Nyköping, Suecia.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Microfiche layouts

Each microfiche card has a heading which provides information on:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Transmission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Car modell
2. Model years included on the microfiche. Edition and date.
3. Catalogue groups included on the microfiche.
4. Microfiche part number and language variant.
5. Microfiche card number.

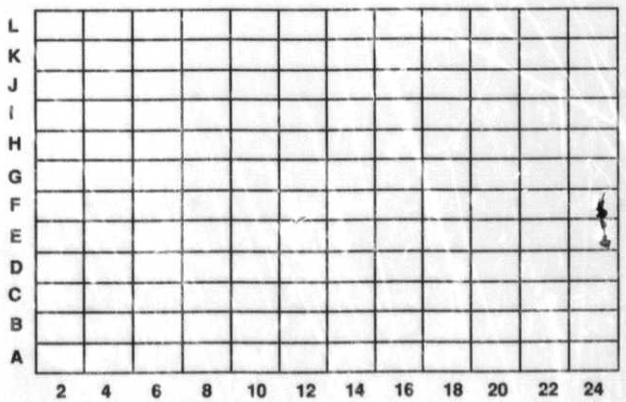

The microfiche card contains 12x12 boxes with illustration and text pages.
Each horizontal line has a letter combination and each vertical column has a digit combination.
Each box is thus given an alpha-numeric coordinate.

Microfichens uppläggning

Varje microfichekort har ett rubrikfält som ger information om:

1. Bilmodell
2. Årsmodeller som microfichen innehåller. Utgåva och datum.
3. Kataloggrupper som finns på kortet.
4. Microfichens artikelnummer och språkvariant.
5. Microfichekortets nummer.


Microfichekortet innehåller 12x12 rutor med bild och textsidor.
Varje horisontell rad har en bokstavsbeteckning och varje vertikal rad en sifferbeteckning.
Varje ruta får på detta sätt en koordinatbeteckning bokstav-siffra.

Disposición de la microficha

Cada tarjeta de microficha cuenta con un encabezamiento que proporciona la siguiente información:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Transmission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Modelo del automóvil.
2. Años de modelos contenidos en la microficha. Edición y fecha.
3. Grupos de catálogo incluídos en la microficha.
4. Número de artículo y variante de idioma de la microficha.
5. Número de tarjeta de la microficha.

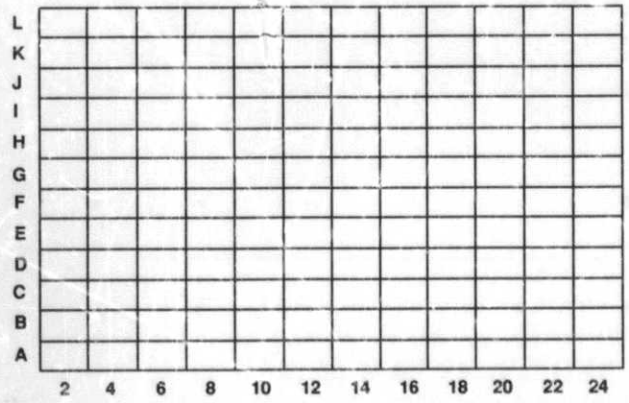

Cada tarjeta contiene 12x12 casillas con páginas de figuras y de texto.
Cada línea horizontal cuenta con una denominación alfabética y cada columna verticale con una numérica.
Cada casilla obtiene de esta manera una coordenada alfa-numérica.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


Illustration page
Each text section has an illustration page. The illustration page is repeated as long as the text section in question is continued.

A complete unit is marked with a ring around the item number.

A kit can be indicated through the item number poiting to several parts.

A kit can also be indicated through the item number being repeated several times.

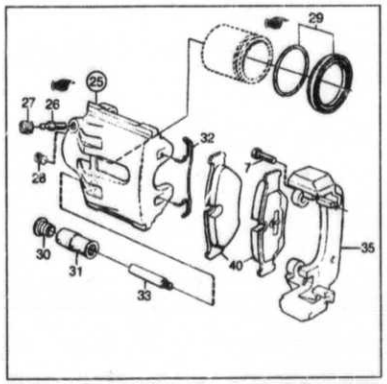

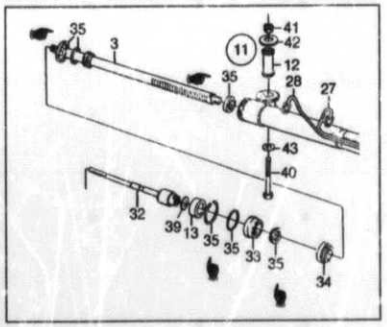

Bildsida
Varje textsida har en bildsida. Bildsidan upprepas så länge resp. textavsnitt varar.

Komplett enhet markeras med en ring runt positionsnumret.

En sats kan visas genom att positionsnumret pekar på flera delar.

En sats kan också visas genom att positionsnumret upprepas flera gånger.

Las páginas con figuras
A cada sección de texto le corresponde una página con una figura. Esta página se repite hasta que el texto en cuestión haya finalizado.

Cada unidad completa se marca con un círculo alrededor del número de posición.


Un juego puede ser indicado con el número de posición señalando hacia las distintas piezas.

Un juego puede también ser indicado repitiendo varias veces el número de posición.

Deviations for certain markets or alternative designs are sometimes indicated in a box.

Avvikelser för vissa marknader eller alternativa utföranden visas ibland i ruta.


Las posibles distintas ejecuciones para algunos mercados, o diseños alternativos, son mostrados a veces en recuadros en una casilla.

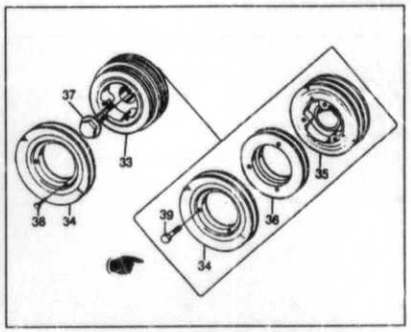

Adjecent parts are indicated on certain illustrations by means of dotted lines or with a rhomb and a note on the text page indicates where you can find the part.

På vissa bilder tecknas *närliggande artiklar* in med prickad linje eller med en romb och en not på textsidan visar var du kan finna artikeln.

Las piezas adyacentes han sido dibujadas en algunas ilustraciones con líneas punteadas o con un rombo, indicando una nota en la página de texto donde puede encontrarse la pieza.

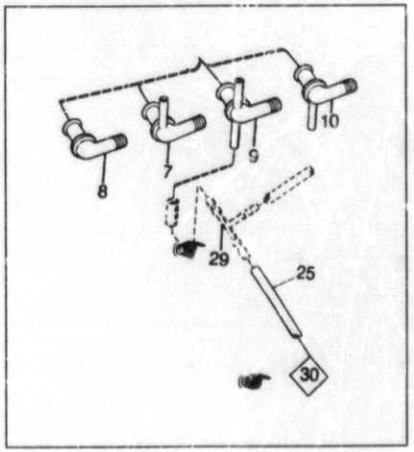


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Text page
Las páginas con texto


Text sida

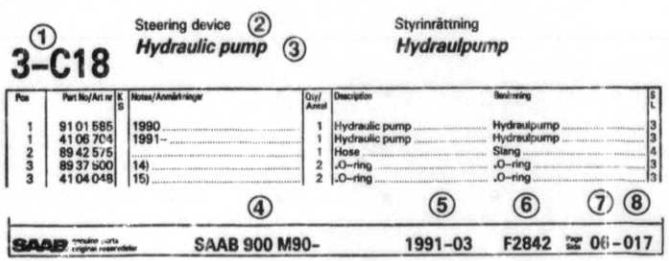

1. Microfiche coordinate for the retrieval system, 3-C18 where 3 is the serial number of the microfiche card, C is the microfiche line and 18 is the microfiche column.
2. Subgroup titel in English and Swedish.
3. Section title in English and Swedish.
4. Car model and model years included in the microfiche card.
5. Date (for internal use).
6. Illustration number (for internal use).
7. Main group.
8. Page number within main group.

1. Fichekoordinat för söksystemet, 3-C18 där 3 är fichekortets löpnummer, C är horisontell ficherad och 18 vertikal ficherad.
2. Undergruppstitel på engelska och svenska.
3. Avsnittstitel på engelska och svenska.
4. Bilmodell och årsmodeller som fichekortet täcker.
5. Datum (för internt bruk).
6. Illustrations nummer (för internt bruk).
7. Huvudgrupp.
8. Sidnummer inom huvudgruppen.

1. Coordenada de la microficha para el sistema de búsqueda, 3-C18 en la que 3 es el número de serie de la tarjeta, C es la línea de la microficha y 18 la columna de la misma.
2. Titulo del subgrupo en inglés y sueco.
3. Titulo de la sección en inglés y sueco.
4. Modelos y años de automóviles incluidos en la tarjeta.
5. Fecha (para uso interno).
6. Número de la figura (para uso interno).
7. Groupo principal.
8. Número de página dentro del grupo principal.

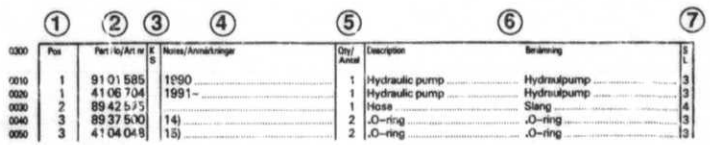

1. Item numbers for the part illustrated on the illustration page. Note that the item can be repeated.
   The item is specified in most cases with digits but digit + letter combinations can also occur.
2. Part numbers. A dot to the left of the part number indicates that the number has been added since the preceding edition.
3. An "S" in this column indicates that the part is included in a kit.
4. Comments column. Limitations and restrictions of various kinds are indicated here.
   To permit part numbers which have expired to be identified, the old numbers is written in parentheses.
5. Quantity column.
6. Names in English and Swedish. A dot in front of the name indicates that the part is included in the immediately superior article. For example: item 3 is included in item 2 and accompanies item 2 when item 2 is purchased.
7. Stock keeping level.

1. Positionsnummer på den illustrerade artikeln på bildsidan. Observera att position kan upprepas.
   Positionen anges i de flesta fall med siffror men även siffra + bokstav kan förekomma.
2. Artikelnummer. En punkt till vänster om artikelnumret visar att numret tillkommit sedan föregående utgåva.
3. Ett "S" i kolumnen markerar att artikeln ingår i en sats.
4. Anmärkningskolumn, här anges begränsningar och restriktioner av olika slag.
   För att kunna identifiera utgångna artikelnummer skrivs det gamla numret ut inom parentes.
5. Antalskolumn.
6. Benämning på engelska och svenska. Punktmarkering framför benämningen anger att artikeln ingår i närmast överordnad artikel. Ex: pos 3 ingår i pos 2 och medföljer vid köp av pos 2.
7. Lagerhållningsnivå.

1. Números de posición de la pieza presentada en la página con figura. Observar que esta pieza puede aparecer varias veces.
   La posición se indica en la mayoría de los casos con cifras aunque también pueden aparecer combinaciones alfanuméricas.
2. Números de artículo. Un punto a la izquierda del número de artículo indica que este número ha sido añadido después de la edición precedente.
3. Una "S" en la columna indica que el artículo forma parte de un juego.

4. Columna para observaciones. En esta se indican las distintas limitaciones y restricciones.
   Para poder identificar un número de artículo suprimido, los números antiguos aparecen entre paréntesis.
5. Columna de cantidad.
6. Denominaciones en inglés y sueco. La marcación punteada delante de la denominación indica que el artículo forma parte del artículo inmediatamente superior. Por ejemplo: el art. 3 forma parte del art. 2 y es incluido al comprar el art. 2.
7. Nivel de almacenamiento.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Master and group indexes

The catalogue is divided into 12 main groups. The master index which is located on the top righthand corner on each microfiche box, indicates the coordinate at which each main group begins.

Master- och gruppindex

Katalogen är indelad i 12 huvudgrupper. Masterindex, som finns i övre höger hörn på varje ficheruta, anger på vilken koordinat varje huvudgrupp börjar.

Indices principal y de groupo

El catálogo se divide en 12 grupos principales. El índice principal, situado en la esquina superior derecha de cada recuadro de la microficha, indica la coordenada de comienzo de cada grupo principal.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3	Electrical system, Instruments	2-A02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-C02
7	Suspension, Wheels	3-E02
8A	Body, external	3-F02
8B	Body, internal	4-A02
8C	Body, heating and ventilation	4-G02
9	Tools, Labels	4-I02
10	Numerical register	4-J02

The main groups are subdivided into subgroups. The group index indicates the coordinate at which the subgroups begin.

Huvudgrupperna är indelade i undergrupper. Gruppindex anger på vilken koordinat undergrupperna börjar.

Los grupos principales están divididos en subgrupos. El índice de grupo indica la coordenada de comienzo de los distintos subgrupos.

2 GROUP INDEX

Engine body	1-B10
Lubrication system	1-C16
Fuel system	1-D02
Inlet and exhaust system	1-D24
Cooling system	1-F18
Engine control	1-G18
Supercharging system	1-G20
Kits	1-H02

Numerical register
Registro numérico

Nummerregister

4-K23 *Numerical register*

Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
9833385	08A	089	3-H18	9841958	03	055	2-C08	9867856	08B	071	4-C24	9881665	08B	077	4-D06
9833476	08B	093	4-D22	9843608	08B	113	4-E18	9867996	08B	075	4-D04	9881906	08B	117	4-E22
9833494	08B	093	4-D22	9847377	08A	089	3-H18	9868977	08B	059	4-C12	9921913	08A	111	3-I16
9833492	08B	093	4-D22	9847385	08A	089	3-H18	9868977	08B	073	4-D02	9881921	08A	111	3-I16
9833500	08B	093	4-D22	9848169	08B	127	4-F08	9868985	05B	059	4-C12	9882051	08B	079	4-D08

On the last microfiche card there is a numerical register with coordinate reference to the page where the part number is located.
En la última tarjeta de la microficha exista un registro numérico que mediante coorde-

På sista fichekortet i katalogen finns ett nummerregister med koordinathänvisning till den sida som artikelnumret finns på.

nadas indica la página donde aparece el número de artículo.

New parts
Artículos nuevos

Nya artiklar

4-K24 *New parts*

Nya artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
4069829	03	117	2-E22	4175923	03	053	2-C06								
4069929	03	145	3-G02	4175949	03	085	2-D14								
4084935	08B	013	4-A14	4195954	09	005	4-I06								
4084913	08B	011	4-A12	4283198	0C	017	3-C18								
4084950	08B	011	4-A12	4350427	08C	099	4-G10								

In the end of the numerical register there is a register for additional parts since the preceding edition.
Al final del registro numérico existe un registro sobre los artículos aparecidos desde

I slutet av nummerregistret finns ett register på nytillkomna artiklar sedan föregående utgåva.
la edición precedente.

Deleted parts
Artículos suprimidos

Utgångna artiklar

4-L02 *Deleted parts*

Utgångna artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
6952717															
7587280															
8243980															
8244006															
8486318															


Last in the numerical register there is a register for parts that has been deleted since the preceding edition.
Al final del registro numérico existe en registro de los artículos suprimidos desde la edición precedente.

Sist i nummerregistret finns ett register på artiklar som utgått sedan föregående utgåva.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Colour marking spring
Färgmärkning fjäder
Marcación de color resorte

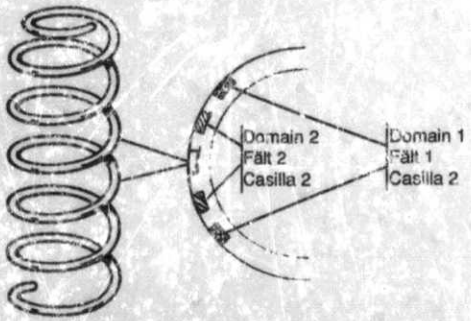

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02



Engine
Motor
Motor

TABLE OF CONTENTS

Engine body			
Engine suspension		2 : 9	1-C10
Engine suspension, hydraulic		2 : 11	1-C12
Cylinder head B201		2 : 13	1-C14
Cylinder head B202, B212		2 : 17	1-C18
Cylinder block		2 : 21	1-C22
Short engine		2 : 23	1-C24
Transmission cover, belt pulley		2 : 25	1-D02
Transmission		2 : 27	1-D04
Piston B201		2 : 29	1-D06
Piston B202		2 : 31	1-D08
Piston B212		2 : 33	1-D10
Crankshaft, connecting rod, flywheel		2 : 35	1-D12
Lubrication system			
Oil pump, oil filter		2 : 37	1-D14
Oil pipes, turbo		2 : 39	1-D16
Fuel system			
Carburettor		2 : 41	1-D18
Air cleaner, B201C		2 : 43	1-D20
Air cleaner, B201I		2 : 45	1-D22
Air cleaner, B202		2 : 47	1-D24
Air cleaner, B212		2 : 49	1-E02
Fuel pump, hoses, B201C		2 : 53	1-E06
Filler pipe, hoses		2 : 55	1-E08
Fuel tank, lines and hoses, B201C		2 : 57	1-E10
Fuel tank, lines and hoses, B201I		2 : 59	1-E12
Fuel tank, lines and hoses, B202 and B212		2 : 61	1-E14
Fuel pump, B201I		2 : 63	1-E16
Fuel pump, B202 and B212		2 : 65	1-E18
Mixing regulator, B201		2 : 67	1-E20
Air mass meter, B202		2 : 71	1-E24
Air mass meter, B212		2 : 75	1-F04
Evaporative loss control device (ELCD)		2 : 77	1-F06
Inlet and exhaust system			
Inlet manifold, B201C		2 : 79	1-F08
Inlet manifold, B201I		2 : 81	1-F10
Inlet manifold, B202 and B212		2 : 83	1-F12
Throttle valve housing, B201I		2 : 85	1-F14
Auxiliary air regulator, B201I		2 : 87	1-F16
Throttle valve housing, B202 and B212		2 : 89	1-F18
Auxiliary reg, B202		2 : 93	1-F22
Automatic idling speed control system		2 : 95	1-F24
Exhaust manifold, B201C and I		2 : 97	1-G02
Exhaust manifold, B202I and B212I		2 : 99	1-G04
Exhaust manifold, B202 Turbo		2 : 101	1-G06
EGR system, B201C		2 : 103	1-G08
EGR system, B202		2 : 105	1-G10
EGR system, electronic		2 : 107	1-G12
Lambda sonde system		2 : 109	1-G14
Exhaust system, B201C and I		2 : 111	1-G16
Exhaust system, B201I with catalytic converter		2 : 113	1-G18
Exhaust system, B202I		2 : 115	1-G20
Exhaust system, B202I with catalytic converter		2 : 117	1-G22
Exhaust system, B212I with catalytic converter		2 : 119	1-G24
Exhaust system, Turbo		2 : 121	1-H02
Exhaust system, Turbo with catalytic converter		2 : 123	1-H04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Cooling system
Radiator, etc ..... 2 : 125 1-H06
Fan, etc ..... 2 : 127 1-H08
Water hoses, B201 ..... 2 : 129 1-H10
Water hoses, B202 and B212 ..... 2 : 131 1-H12
Air oil cooler, engine and automatic transmission ..... 2 : 133 1-H14
Fluid oil cooler, automatic transmission ..... 2 : 135 1-H16
Charge cooler ..... 2 : 137 1-H18
Coolant pump ..... 2 : 139 1-H20
Thermostat, B201 ..... 2 : 141 1-H22
Thermostat, B202 and B212 ..... 2 : 143 1-H24
Engine control
Accelerator control ..... 2 : 145 1-I02
Supercharging system
Turbocharger ..... 2 : 147 1-I04
APC system ..... 2 : 1 1-I08
Complete sets
Engine ..... 2 : 153 1-I10

INNEHÅLLSFÖRTECKNING

Motorkropp
Motorupphängning ..... 2 : 9 1-C10
Motorupphängning, hydraulisk ..... 2 : 11 1-C12
Cylinderhuvud B201 ..... 2 : 13 1-C14
Cylinderhuvud B202, B212 ..... 2 : 17 1-C18
Cylinderblock ..... 2 : 21 1-C22
Grundmotor ..... 2 : 23 1-C24
Transmissionskåpa, remskiva ..... 2 : 25 1-D02
Transmission ..... 2 : 27 1-D04
Kolvar B201 ..... 2 : 29 1-D06
Kolvar B202 ..... 2 : 31 1-D08
Kolvar B212 ..... 2 : 33 1-D10
Vevaxel, vevstake, svänghjul ..... 2 : 35 1-D12
Smörjsystem
Oljepump, oljefilter ..... 2 : 37 1-D14
Oljerör, Turbo ..... 2 : 39 1-D16
Bränslesystem
Förgasare ..... 2 : 41 1-D18
Luftrenare, B201C ..... 2 : 43 1-D20
Luftrenare, B201I ..... 2 : 45 1-D22
Luftrenare, B202 ..... 2 : 47 1-D24
Luftrenare, B212 ..... 2 : 49 1-E02
Bränslepump, slangar, B201C ..... 2 : 53 1-E06
Påfyllningsrör, slangar ..... 2 : 55 1-E08
Bränsletank, bränsleledningar, B201C ..... 2 : 57 1-E10
Bränsletank, bränsleledningar, B201I ..... 2 : 59 1-E12
Bränsletank, bränsleledningar, B202 och B212 ..... 2 : 61 1-E14
Bränslepump, B201I ..... 2 : 63 1-E16
Bränslepump, B202 och B212 ..... 2 : 65 1-E18
Blandningsregulator, B201 ..... 2 : 67 1-E20
Luftmassamätare, B202 ..... 2 : 71 1-E24
Luftmassamätare, B212 ..... 2 : 75 1-F04
Slutet bränslesystem (ELCD) ..... 2 : 77 1-F06
Inlopps- och avgassystem
Inloppsrör, B201C ..... 2 : 79 1-F08
Inloppsrör, B201I ..... 2 : 81 1-F10
Insugningsrör, B202 och B212 ..... 2 : 83 1-F12
Spjällhus, B201I ..... 2 : 85 1-F14
Tillsatsluftslid, B201I ..... 2 : 87 1-F16
Spjällhus, B202 och B212 ..... 2 : 89 1-F18
Tillsatsluftslid, B202 ..... 2 : 93 1-F22
Automatisk tomgångsreglering ..... 2 : 95 1-F24
Avgassamlare, B201C och I ..... 2 : 97 1-G02
Avgassamlare, B202I och B212I ..... 2 : 99 1-G04
Avgassamlare, B202 Turbo ..... 2 : 101 1-G06
ECR-system, B201C ..... 2 : 103 1-G08
EGR-system, B202 ..... 2 : 105 1-G10
EGR-system, elektroniskt ..... 2 : 107 1-G12
Lambdasondsystem ..... 2 : 109 1-G14
Avgassystem, B201C och I ..... 2 : 111 1-G16
Avgassystem, B201I med katalytisk reaktor ..... 2 : 113 1-G18
Avgassystem, B202I ..... 2 : 115 1-G20
Avgassystem, B202I med katalytisk reaktor ..... 2 : 117 1-G22
Avgassystem, B212I med katalytisk reaktor ..... 2 : 119 1-G24
Avgassystem, Turbo ..... 2 : 121 1-H02
Avgassystem, Turbo med katalytisk reaktor ..... 2 : 123 1-H04

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 2-G02
4 Transmission 3-A02
5 Brakes 3-D02
6 Front assembly, Steering 3-F02
7 Suspension, Wheels 3-H02
8A Body, external 4-A02
8B Body, internal 5-A02
8C Body, heating and ventilation 5-J02
9 Tool, Labels 5-L02
10 Numerical register 6-A02

2 GROUP INDEX

Engine body 1-C10
Lubrication system 1-D14
Fuel system 1-D18
Inlet and exhaust system 1-F08
Cooling system 1-H06
Engine control 1-I02
Supercharging system 1-I04
Complete sets 1-I10

1-C05

Kylsystem
- Kylare, etc ... 2 : 125 1-H06
- Fläkt, etc ... 2 : 127 1-H08
- Vattenslangar, B201 ... 2 : 129 1-H10
- Vattenslangar, B202 och B212 ... 2 : 131 1-H12
- Luftoljekylare, motor och automatväxellåda ... 2 : 133 1-H14
- Kylvätskeoljekylare, automatväxellåda ... 2 : 135 1-H16
- Laddluftkylare ... 2 : 137 1-H18
- Kylvätskepump ... 2 : 139 1-H20
- Termostat, B201 ... 2 : 141 1-H22
- Termostat, B202 och B212 ... 2 : 143 1-H24

Motorreglage
- Gasreglage ... 2 : 145 1-I02

Överladdningssystem
- Turbokompressor ... 2 : 147 1-I04
- APC-system ... 2 : 151 1-I08

Satser
- Motor ... 2 : 153 1-I10

1-C06

SUMARIO

Cuerpo del motor
- Soportes del motor ... 2 : 9 1-C10
- Soportes del motor, hidraulico ... 2 : 11 1-C12
- Culata B201 ... 2 : 13 1-C14
- Culata B202, B212 ... 2 : 17 1-C18
- Bloque de cilindros ... 2 : 21 1-C22
- Motor de base ... 2 : 23 1-C24
- Tapa de distribucion, polea de correa ... 2 : 25 1-D02
- Distribucion ... 2 : 27 1-D04
- Pistones B201 ... 2 : 29 1-D06
- Pistones B202 ... 2 : 31 1-D08
- Pistones B212 ... 2 : 33 1-D10
- Ciguenal, bielas, volante ... 2 : 35 1-D12

Sistema de engrase
- Bomba de aceite, filtro de aceite ... 2 : 37 1-D14
- Tubo de aceite, Turbo ... 2 : 39 1-D16

Sistema de combustible
- Carburador ... 2 : 41 1-D18
- Depurador de aire, B201C ... 2 : 43 1-D20
- Depurador de aire, B201I ... 2 : 45 1-D22
- Depurador de aire, B202 ... 2 : 47 1-D24
- Depurador de aire, B212 ... 2 : 49 1-E02
- Bomba de combustible, mangueras, B201C ... 2 : 53 1-E06
- Tubo de llenado, mangueras ... 2 : 55 1-E08
- Desposito de combustible, conductos de combustible, B201C ... 2 : 57 1-E10
- Desposito de combustible, conductos de cobustible, B201I ... 2 : 59 1-E12
- Desposito de combustible, conductos de cobustible, B202 y B212 ... 2 : 61 1-E14
- Bomba de combustible, B201I ... 2 : 63 1-E16
- Bomba de combustible B202 y B212 ... 2 : 65 1-E18
- Regulador de mezcla, B201 ... 2 : 67 1-E20
- Medidor de flujo de air B202 ... 2 : 71 1-E24
- Medidor de flujo de air B212 ... 2 : 75 1-F04
- Sistema cerrado de combustible (ELCD) ... 2 : 77 1-F06

Sistema de admision y de escape
- Colector de admision, B201C ... 2 : 79 1-F08
- Colector de admision, B201I ... 2 : 81 1-F10
- Colector de admision, B202 y B212 ... 2 : 83 1-F12
- Caja de mariposa, B201I ... 2 : 85 1-F14
- Regulador de aire adicional, B201I ... 2 : 87 1-F16
- Caja de mariposa, B202 y B212 ... 2 : 89 1-F18
- Regulador de aire adicional ... 2 : 93 1-F22
- Regulacion automatica de ralenti, B202 ... 2 : 95 1-F24
- Colector de escape, B201C y I ... 2 : 97 1-G02
- Colector de escape, B202I y B212I ... 2 : 99 1-G04
- Colector de escape, B202Turbo ... 2 : 101 1-G06
- Sistema EGR, B201C ... 2 : 103 1-G08
- Sistema EGR, B202 ... 2 : 105 1-G10
- Sistema EGR, elletronica ... 2 : 107 1-G12
- Sistema de sonda lambda ... 2 : 109 1-G14
- Sistema de escape, B201C y I ... 2 : 111 1-G16
- Sistema de escape, B201I con reactor catalituco ... 2 : 113 1-G18
- Sistema de escape, B202I ... 2 : 115 1-G20
- Sistema de escape, B202I con reactor catalituco ... 2 : 117 1-G22
- Sistema de escape, B212I con reactor catalituco ... 2 : 119 1-G24
- Sistema de escape, Turbo ... 2 : 121 1-H02
- Sistema de escape, Turbo con reactor catalituco ... 2 : 123 1-H04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-C07


0042	**Sistema de refrigeracion**		
1340	Radiador, etc	2 : 125	1-H06
1350	Ventilador, etc	2 : 127	1-H08
1360	Mangueras de agua, B201	2 : 129	1-H10
1365	Mangueras de agua, B202 y B212	2 : 131	1-H12
1370	Radiador de aceite a aire, motor y caja de cambios automatica	2 : 133	1-H14
1380	Radiador de aceite a agua, caja de cambios automatica	2 : 135	1-H16
1390	Radiador de aire de alimentacion	2 : 137	1-H18
1400	Bomba de agua	2 : 139	1-H20
1410	Termostato, B201	2 : 141	1-H22
1420	Termostato, B202 y B212	2 : 143	1-H24
1430	**Mandos del motor**		
1440	Mando de acelerador	2 : 145	1-I02
1450	**Sistema de sobrealimentacion**		
1460	Turbocompresor	2 : 147	1-I04
1470	Sistema APC	2 : 151	1-I08
1480	**Juegos completos**		
1490	Motor	2 : 153	1-I10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Iniet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

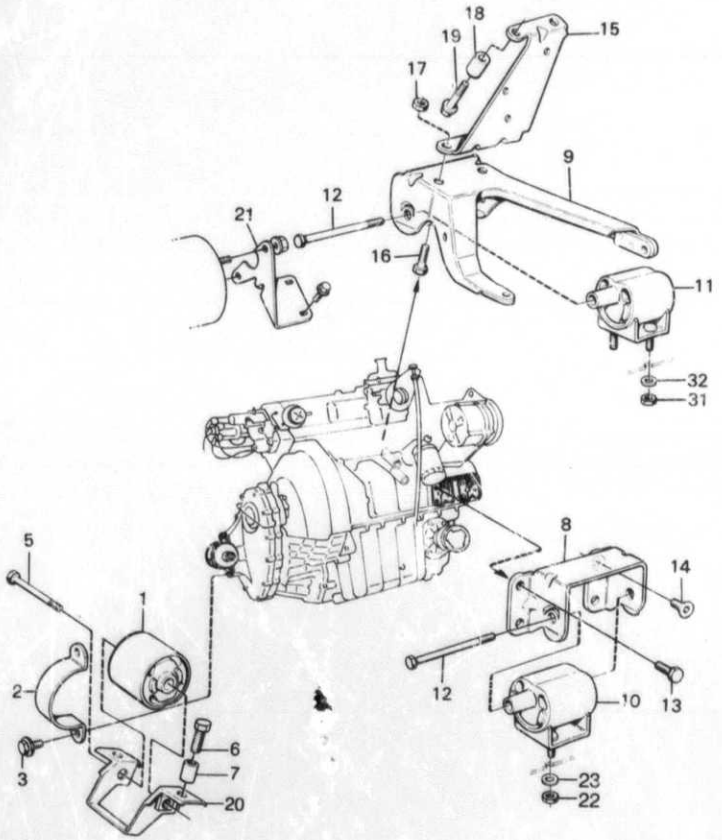

F1257 AAC90


0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	83 39 608			1	Engine pad	Motorkudde	3
0040	2	83 39 632			1	Cap	Överfall	6
0060	3	79 78 224			2	Screw	Skruv	5
0100	5	80 98 394			1	Screw	Skruv	5
0120	6	79 78 224			2	Screw	Skruv	5
0140	7	75 44 265			2	Bushing	Bussning	3
0160	8	93 23 759		LH	1	Engine anchorage	Motorfäste	
0180	9	93 24 930		RH	1	Engine anchorage	Motorfäste	
0190	9	93 67 988		RH, B202I	1	Engine anchorage	Motorfäste	4
0215	10	93 69 307		LH	1	Engine pad	Motorkudde	3
0220	10	75 43 408		LH, B202I	1	Engine pad	Motorkudde	
0235	11	93 69 315		RH	1	Engine pad	Motorkudde	3
0237	11	75 43 416		RH, B202I	1	Engine pad	Motorkudde	3
0240	12	75 43 432			2	Screw	Skruv	5
0260	13	80 82 935			2	Screw	Skruv	5
0280	14	93 [illegible]6 415			2	Screw	Skruv	5
0320	15	93 [illegible]3 742			1	Engine anchorage	Motorfäste	5
0330	15	93 [illegible]7 996		B202I	1	Engine anchorage	Motorfäste	4
0350	16	79 [illegible]0 131			2	Screw	Skruv	5
0370	17	81 [illegible] 243			2	Nut	Mutter	5
0380	18	83 [illegible]6 859			2	Sleeve	Hylsa	6
0400	19	80 83 941			2	Screw	Skruv	5
0415	20	75 49 579			1	Bracket	Fäste	6
0430	21	75 32 161			1	Stay	Stag	6
0650	22	81 51 235			4	Nut	Mutter	5
0660	23	80 29 9[illegible]5		-1992	4	Washer	Bricka	5
0662	23	• 91 66 372		1993-	4	Washer		5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

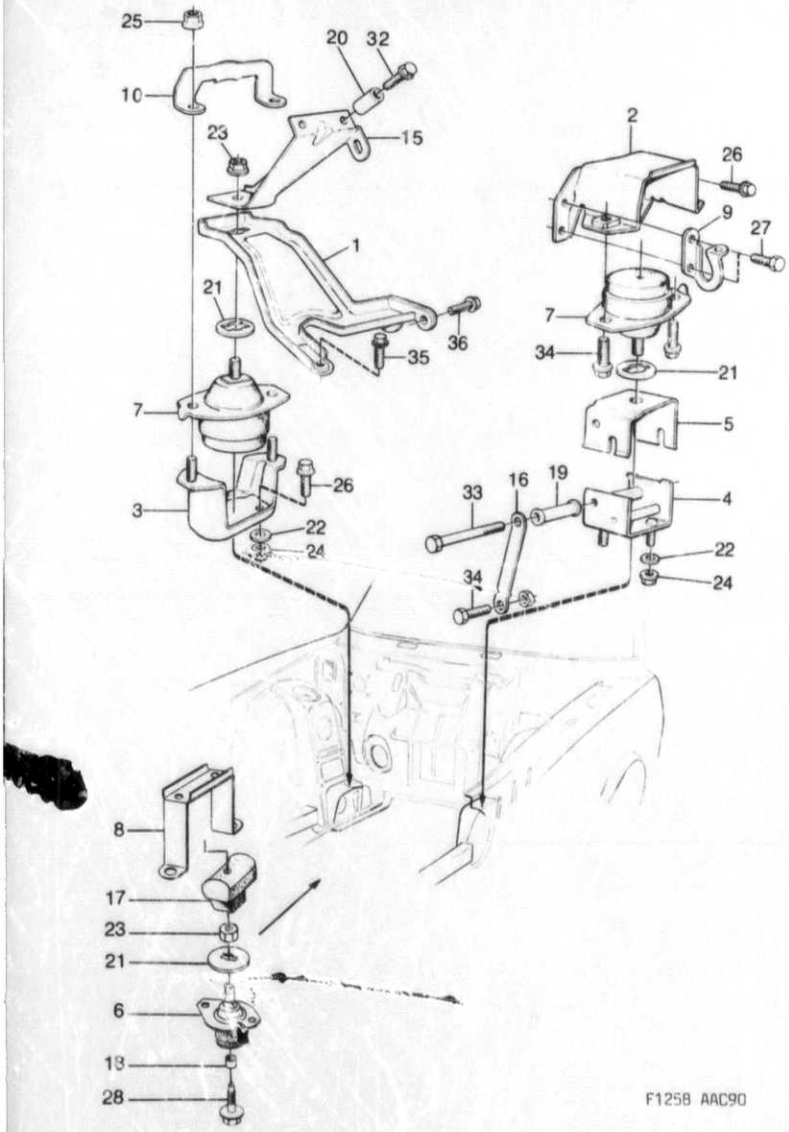


0120	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 47 284		RH	1	Bracket	Konsol	4
0020	2	75 43 978		LH	1	Bracket	Konsol	4
0030	3	75 44 026		RH	1	Bracket	Fäste	5
0040	4	75 43 994		LH	1	Bracket	Fäste	5
0050	5	75 43 986			1	Attaching brace	Fästbygel	6
0060	6	75 45 668			1	Housing	Isolator	3
0070	7	75 45 650			2	Housing	Isolator	3
0080	8	75 44 042			1	Limiter	Begränsare	5
0090	9	75 44 901		US, CA	1	Limiter	Begränsare	5
0100	10	75 44 034		US, CA	1	Limiter	Begränsare	5
0110	15	75 44 992		B201	1	Stay	Stag	4
0120	15	75 44 018		B202	1	Stay	Stag	4
0130	16	75 44 893		US, CA	1	Stay	Stag	5
0140	17	75 44 083			1	Absorber	Dämpare	
0150	18	75 44 265			2	Bushing	Bussning	3
0160	19	75 44 273		US, CA	1	Spacer	Distans	3
0170	20	83 56 859			2	Sleeve	Hylsa	6
0180	21	75 47 656			4	Washer	Bricka	5
0190	22	60 29 985		-1992	4	Washer	Bricka	5
0192	22	• 91 66 372		1993-	4	Washer	Bricka	5
0200	23	79 71 765		-1991	3	Nut	Mutter	5
0210	23	79 79 552		1992-	3	Nut	Mutter	5
0220	24	81 51 235			4	Nut	Mutter	5
0230	25	79 69 306			2	Lock nut	Låsmutter	5
0240	26	79 67 938			4	Screw	Skruv	5
0250	26	79 67 938		US, CA	2	Screw	Skruv	5
0260	27	79 73 779		US, CA	2	Screw	Skruv	5
0270	28	79 78 224			2	Screw	Skruv	5
0280	32	80 83 941			2	Screw	Skruv	5
0290	33	79 77 473		US, CA	1	Screw	Skruv	5
0300	33	79 77 267			1	Screw	Skruv	5
0310	34	79 70 353		US, CA	2	Screw	Skruv	5
0320	34	79 70 353			2	Screw	Skruv	5
0330	35	93 46 370			1	Screw	Skruv	5
0340	36	83 56 917			1	Screw	Skruv	5
0350	37	79 72 748		US, CA	1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

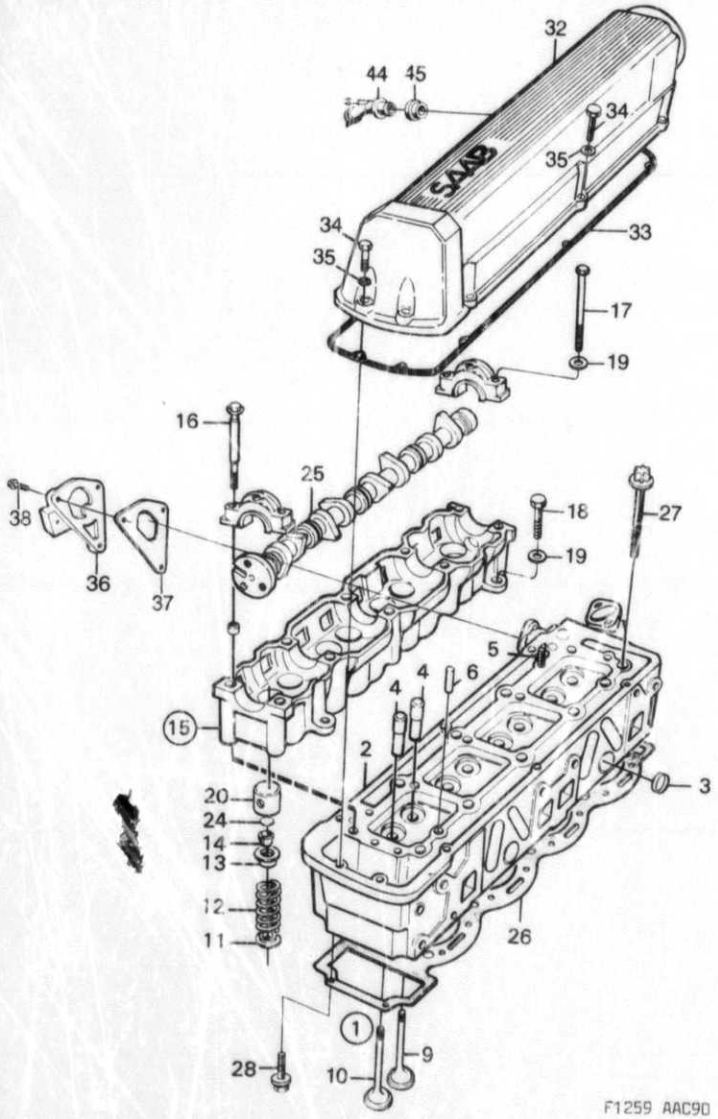

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0037	1	*75 21 180*		7), C NLS - USE 7896905	1	Cylinder head	Cylinderlock	6
0040	1	75 22 360		7), I	1	Cylinder head	Cylinderlock	6
0080	2	75 21 198		C	1	.Cylinder head	.Cylinderlock	5
0085	2	75 22 741		I	1	.Cylinder head	.Cylinderlock	5
0095	3	75 88 320			2	..Sealing washer	..Tätningsbricka	3
0100	4	83 50 944		STD	8	..Valve guide	..Ventilstyrning	2
0106	4	91 19 934		36)	8	..Valve guide	..Ventilstyrning	2
0110	5	80 34 761			1	..Pin	..Pinne	5
0120	6	80 34 662			1	..Locating pin	..Styrpinne	3
0170	9	83 46 884		38)	4	.Inlet valve	.Inloppsventil	3
0190	10	83 62 295		39), C	4	.Valve	.Ventil	2
0200	10	93 07 356		20,39), I	4	.Valve	.Ventil	2
0220	11	83 46 900			8	.Washer	.Bricka	4
0240	12	93 51 800			8	.Valve spring	.Ventilfjäder	3
0250	13	83 46 926			8	.Washer	.Bricka	4
0260	14	83 47 262			16	.Valve cone	.Knaster	2
0270	15	93 08 453			1	Camshaft bridge	Kamaxelbrygga	5
0280	16	83 56 396			2	.Screw	.Skruv	5
0290	17	83 48 401			8	.Screw	.Skruv	5
0305	18	*80 82 976*		NLS - USE 8083933	2	.Screw	.Skruv	5
0310	19	91 66 372		(8029985)	10	.Washer	.Bricka	5
0320	20	83 46 942			8	Tappet	Ventillyftare	
0330	24	83 08 215		1,78 MM	X	Adjusting washer	Justerbricka	2
0350	24	83 08 223		1,83 MM	X	Adjusting washer	Justerbricka	2
0370	24	83 08 231		1,88 MM	X	Adjusting washer	Justerbricka	2
0390	24	83 08 249		1,93 MM	X	Adjusting washer	Justerbricka	2
0410	24	83 08 256		1,98 MM	X	Adjusting washer	Justerbricka	2
0430	24	83 08 264		2,03 MM	X	Adjusting washer	Justerbricka	2
0450	24	83 08 272		2,08 MM	X	Adjusting washer	Justerbricka	2
0470	24	83 08 280		2,13 MM	X	Adjusting washer	Justerbricka	2
0490	24	83 08 298		2,18 MM	X	Adjusting washer	Justerbricka	2
0510	24	83 08 306		2,24 MM	X	Adjusting washer	Justerbricka	2
0520	24	75 24 275		2,27 MM	X	Adjusting washer	Justerbricka	2
0530	24	75 24 291		2,29 MM	X	Adjusting washer	Justerbricka	2
0540	24	75 24 317		2,31 MM	X	Adjusting washer	Justerbricka	2
0550	24	75 24 333		2,33 MM	X	Adjusting washer	Justerbricka	2
0560	24	75 24 358		2,35 MM	X	Adjusting washer	Justerbricka	2
0570	24	75 24 374		2,37 MM	X	Adjusting washer	Justerbricka	2
0580	24	75 24 390		2,39 MM	X	Adjusting washer	Justerbricka	2
0590	24	75 24 416		2,41 MM	X	Adjusting washer	Justerbricka	2
0600	24	75 24 432		2,43 MM	X	Adjusting washer	Justerbricka	2
0610	24	75 24 457		2,45 MM	X	Adjusting washer	Justerbricka	2
0620	24	75 24 473		2,47 MM	X	Adjusting washer	Justerbricka	2
0630	24	75 24 499		2,49 MM	X	Adjusting washer	Justerbricka	2
0640	24	75 24 515		2,51 MM	X	Adjusting washer	Justerbricka	2
0650	24	75 24 531		2,53 MM	X	Adjusting washer	Justerbricka	2
0660	24	75 24 556		2,55 MM	X	Adjusting washer	Justerbricka	2
0670	24	75 24 572		2,57 MM	X	Adjusting washer	Justerbricka	2
0680	24	75 24 598		2,59 MM	X	Adjusting washer	Justerbricka	2
0690	24	75 24 614		2,61 MM	X	Adjusting washer	Justerbricka	2
0700	24	75 24 630		2,63 MM	X	Adjusting washer	Justerbricka	2
0710	24	75 24 655		2,65 MM	X	Adjusting washer	Justerbricka	2
0720	24	75 24 671		2,67 MM	X	Adjusting washer	Justerbricka	2
0730	24	75 24 697		2,69 MM	X	Adjusting washer	Justerbricka	2
0740	24	75 24 713		2,71 MM	X	Adjusting washer	Justerbricka	2
0750	24	75 24 739		2,73 MM	X	Adjusting washer	Justerbricka	2
0760	24	75 24 754		2,75 MM	X	Adjusting washer	Justerbricka	2


7. Also available as exchange unit. Finns även som utbytesenhet.
20. Scrapping of Sodium-filled exhaust valves, see section 214 Service Manual. Skrotning av sodium-fyllda avgasventiler, se avsnitt 214 i Verkstadshandbok.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

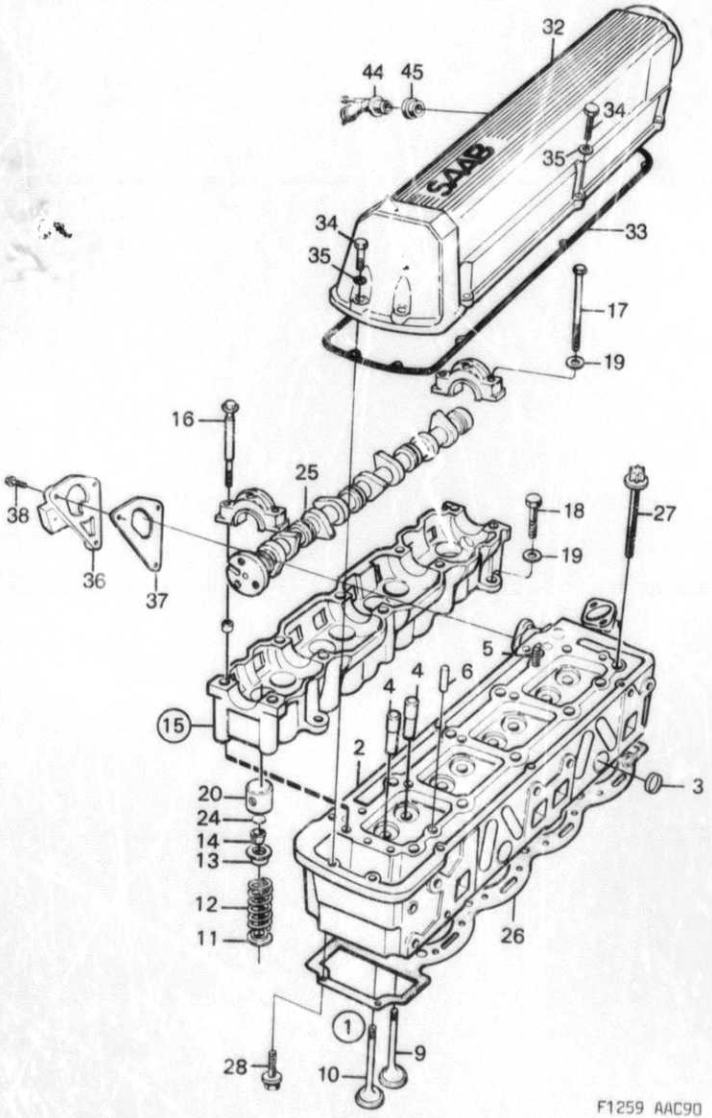

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0770	24	75 24 770		2,77 MM	X	Adjusting washer	Justerbricka	2
0780	24	75 24 796		2,79 MM	X	Adjusting washer	Justerbricka	2
0790	24	75 24 812		2,81 MM	X	Adjusting washer	Justerbricka	2
0800	24	75 24 838		2,83 MM	X	Adjusting washer	Justerbricka	2
0810	24	75 24 853		2,85 MM	X	Adjusting washer	Justerbricka	2
0860	25	75 63 14[illegible]			1	Camshaft	Kamaxel	5
0882	26	75 85 037			1	Gasket	Packning	2
0885	26	78 56 594		1,7 MM	1	Gasket	Packning	2
0895	27	75 18 343			10	Screw	Skruv	5
0905	28	81 25 189			2	Screw	Skruv	5
0948	32	74 86 780			1	Valve cover	Ventilkåpa	5
0960	33	93 55 991			1	Gasket	Packning	1
0960	34	80 97 941			8	Screw	Skruv	5
0970	35	• 91 66 364		(8025951)	8	Washer	Bricka	5
0980	36	93 08 693			1	Cover	Lock	4
0995	37	75 66 458			1	Gasket	Packning	2
1000	38	81 25 189			3	Screw	Skruv	5
1040	44	83 60 240			1	Nipple	Nippel	5
1055	45	75 15 190			1	Bushing	Bussning	5
1056								
1070		93 37 213		24), C	X	Gasket kit	Packningsats	3
1071				See page 2-153, 1-I10				
1080		93 37 221		24), I	X	Gasket kit	Packningsats	3
1081				See page 2-153, 1-I10				
1090		93 37 239		C	X	Gasket kit	Sotningssats	2
1091				See page 2-153, 1-I10				
1100		93 37 247		I	X	Gasket kit	Sotningssats	
1101				See page 2-153, 1-I10				
1120		88 17 728		See page 2-157, 1-I14	X	Valve adjustment kit	Ventiljusteringssats	2


24. Engine. Motor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

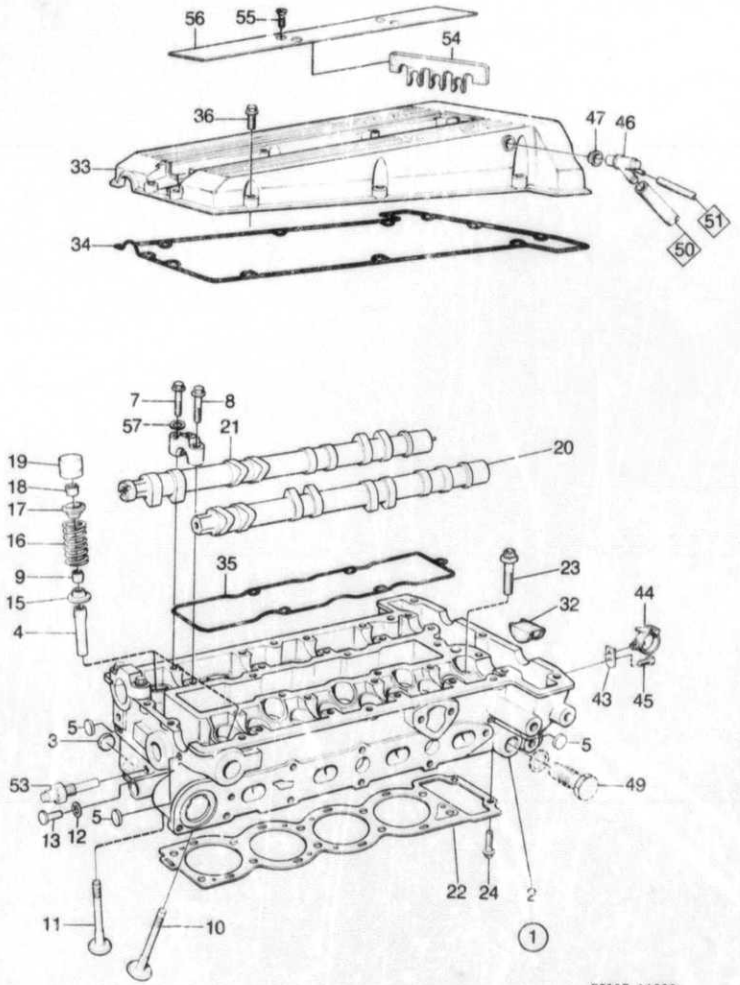

0175	Pos	Part No/Art nr	X S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 07 376		7), B202	1	Cylinder head	Cylinderhuvud	5
0020	1	*91 15 346*		7), B212 NLS - USE 9129669	1	Cylinder head	Cylinderhuvud	5
0030	2	91 07 053		B202	1	.Cylinder head	.Cylinderlock	5
0040	2	91 15 353		B212	1	.Cylinder head	.Cylinderlock	5
0050	3	75 88 320			2	..Sealing washer	..Tätningsbricka	3
0060	4	75 60 154		B202	16	..Valve guide	..Ventilstyrning	4
0070	4	74 80 577		B212	16	..Valve guide	..Ventilstyrning	4
0080	4	75 69 734		36), B202	16	..Valve guide	..Ventilstyrning	2
0090	4	91 19 942		36), B212	16	..Valve guide	..Ventilstyrning	2
0100	5	81 23 143			3	..Plug	..Plugg	3
0110	7	81 25 213			12	..Screw	..Skruv	5
0120	8	75 85 847			8	..Screw	..Skruv	5
0130	9	75 00 713			16	.Seal	.Tätning	3
0140	10	*75 62 002*		B202 NLS - USE 7484801	8	.Inlet valve	.Inloppsventil	3
0150	10	74 84 801		B212	8	.Inlet valve	.Inloppsventil	3
0160	11	*75 00 085*		-1991 NLS - USE 9136250	8	.Exhaust valve	.Avgasventil	2
0170	11	91 36 250		1992-	8	.Exhaust valve	.Avgasventil	2
0180	12	*81 23 721*		NLS - USE 7563042	1	.Plug	.Propp	5
0190	13	*83 26 712*		NLS - USE 4181162	1	.Seal	.Tätning	5
0200	15	75 05 134			16	.Washer	.Bricka	4
0210	16	*93 58 391*		-1991 NLS - USE 9129651	16	.Spring	.Fjäder	3
0220	16	91 29 651		1992-	16	.Spring	.Fjäder	3
0230	17	75 01 349			16	.Washer	.Bricka	4
0240	18	75 15 547			32	.Valve cone	.Knaster	2
0250	19	*93 57 716*		119) NLS - USE 9134420	16	Tappet	Ventillyftare	
0260	19	91 34 420		120)	16	Tappet	Ventillyftare	3
0270	20	75 60 808		38), TURBO	1	Camshaft	Kamaxel	5
0280	20	75 61 467		38), I	1	Camshaft	Kamaxel	5
0290	21	75 60 964		39)	1	Camshaft	Kamaxel	5
0300	22	*75 61 301*		B202 NLS - USE 9169079	1	Cylinder head gasket	Cylinderhuvudpackning	2
0310	22	87 87 111		B212	1	Gasket	Packning	2
0320	23	*75 18 335*		80) NLS - USE 9129909	10	Screw	Skruv	5
0330	23	91 29 909		81)	10	Screw	Skruv	5
0340	24	81 25 189			2	Screw	Skruv	5
0350	32	75 00 069	S	40)	3	Plug	Plugg	2
0360	33	*91 16 062*		57) NLS - USE 7858756	1	Valve cover	Ventilkåpa	5
0370	33	78 58 756		58)	1	Valve cover	Ventilkåpa	5
0380	34	*75 58 056*	S	40) NLS - USE 7569304	1	Gasket	Packning	1
0390	34	75 69 304	S	41)	1	Gasket	Packning	1
0400	35	75 23 962	S		1	Gasket	Packning	1
0410	36	75 60 931			16	Screw	Skruv	5
0420	43	75 11 975			2	Bracket	Konsol	5
0430	44	75 12 015			2	Tensioning band	Spännband	5
0440	45	*80 82 919*		NLS - USE 8082935	2	Screw	Skruv	5
0450	46	75 17 048			1	Nipple	Nippel	5
0460	47	75 15 190			1	Bushing	Bussning	5
0470	49			See page 2-027, 1-D04		Chain tensioner	Kedjespännare	
0480	50			See page 2-143, 1-H24		Hose	Slang	
0490	51			See page 2-083, 1-F12		Hose	Slang	


7. Also available as exchange unit. Finns även som utbytesenhet.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.
40. Engine -L015906.
41. Engine L015907-.
57. Engine -L050918.
58. Engine L050919-.
80. Engine -M038386.
81. Engine M038387-.
119. Engine -N238284.
120. Engine N238285-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

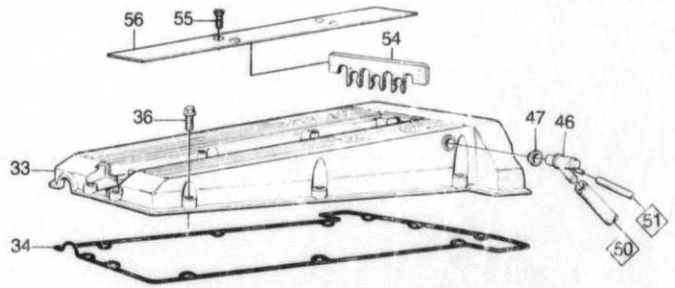

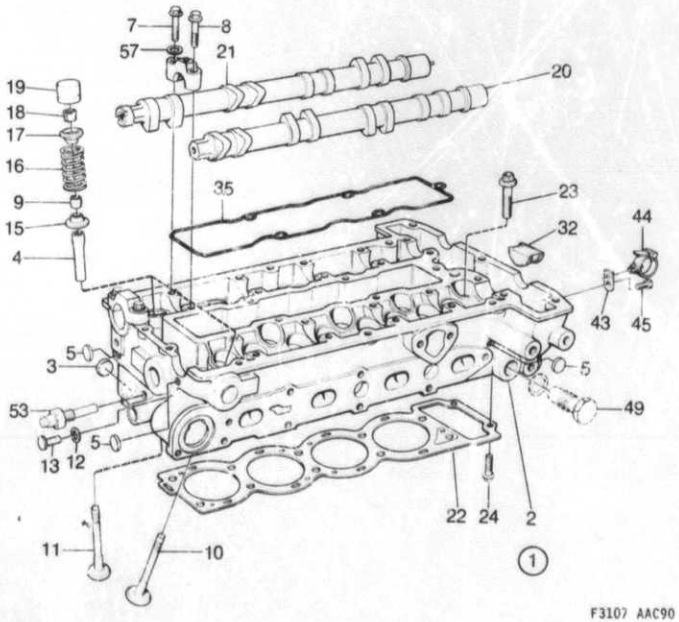

F3107 AAC90

0175	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty Antal	Description	Benämning	S L
0500	53	*88 00 914*		47) NLS - USE 9108291	1	Sensor	Givare	2
0510	53	*88 59 233*		48,-1990) NLS - USE 9108291	1	Sensor	Givare	2
0520	53	91 08 291		1991-	1	Sensor	Givare	2
0530	54			See page 3A-015, 2-A16		Retainer	Hållare	
0540	55	75 86 837		57)	4	Screw	Skruv	5
0550	55	88 57 872		58)	4	Screw	Skruv	5
0560	56	75 85 532			1	Cover	Lock	3
0570	57	91 14 885			16	Sealing washer	Tätningsbricka	5
0580								
0590		*88 18 254*		40)	X	Gasket kit	Packningssats	1
0600				See page 2-153, 1-I10				
0600				NLS - USE 9321464				
0610		93 21 464		41)	X	Gasket kit	Packningssats	1
0620				See page 2-153, 1-I10				
0630		88 19 831		B202	X	Gasket kit	Sotningssats	2
0640				See page 2-153, 1-I10				
0650		93 21 597		B212	X	Gasket kit	Sotningssats	2
0660				See page 2-153, 1-I10				


40. Engine -L015906.
41. Engine L015907-.
47. Engine -L030814.
48. Engine L030815-.
57. Engine -L050918.
58. Engine L050919-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D16
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

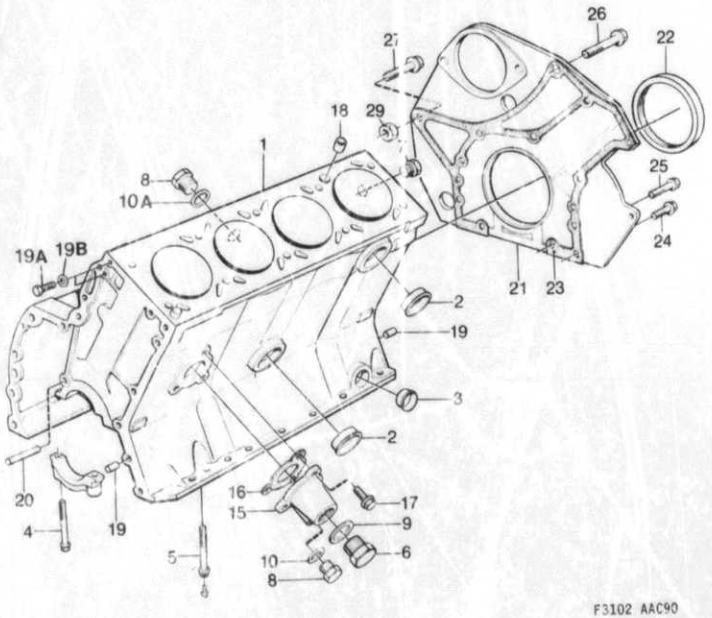

F3102 AAC90

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 826			1	Cylinder bloc	Cylinderblock	6
0020	1	75 16 834		TURBO	1	Cylinder block	Cylinderblock	6
0030	1	91 16 294		B212	1	Cylinder block	Cylinderblock	6
0040	2	91 16 757			2	.Sealing washer	.Tätningsbricka	3
0050	3	75 88 320			1	.Sealing washer	.Tätningsbricka	3
0060	4	83 52 502			6	.Screw	.Skruv	5
0070	5	93 08 537		25)	4	.Screw	.Skruv	5
0080	6	81 23 788			1	.Plug	.Propp	6
0090	7	83 48 047			1	.Plug	.Propp	5
0100	8	*81 23 721*		NLS - USE 7563042	2	.Plug	.Propp	5
0110	9	91 16 856			1	.Gasket	.Packning	4
0120	10	*83 26 712*		NLS - USE 4161162	2	.Seal	.Tätning	5
0130	10A	*83 26 712*		NLS - USE 4161162	2	.Seal	.Tätning	5
0140	10A	81 24 141		B212	2	.Seal	.Tätning	5
0150	15	*75 81 259*		-1991 NLS - USE 9144684	1	.Cover	.Lock	3
0160	15	91 44 684		1992-	1	.Cover	.Lock	3
0170	16	75 23 897			1	.Gasket	.Packning	4
0180	17	81 25 189			3	.Screw	.Skruv	5
0190	18	83 46 470			2	.Guide	.Styrning	
0200	19	83 66 007			4	.Guide	.Styrning	5
0210	19A	91 66 273		-1991, B212,(8019895)	2	.Screw	.Skruv	5
0220	19B	*80 73 223*		-1991, B212 NLS - USE 9166380	2	.Washer	.Bricka	5
0230	20			See page 2-027, 1-D04	1	.Pin	.Pinne	
0240	21	75 16 255			1	End piece	Gavelstycke	5
0250	22	*53 50 158*		-1991 NLS - USE 8787764	1	.Seal	.Tätning	2
0260	22	87 87 764		1992-	1	.Seal	.Tätning	2
0270	23	*75 63 661*		113) NLS - USE 9321795	1	Gasket	Packning	4
0280	23	93 21 795		114)	X	Flange sealant	Flänstätning	5
0290				See page 2-165, 1-I22				
0300	24	81 25 169			9	Screw	Skruv	5
0310	25	81 25 197			2	Screw	Skruv	5
0320	26	81 50 500			1	Screw	Skruv	5
0330	27	81 50 534		C	1	Screw	Skruv	5
0340	27	81 50 559			1	Screw	Skruv	5
0350	29	81 51 086			1	Nut	Mutter	5

25. Main bearing 2 and 3. Ramlager 2 och 3.
113. Engine -N312959.
114. Engine N312960-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-C24

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		87 88 218		7), B201	1	Engine	Motor	5
0011		87 88 226		4,7), B201I	1	Engine	Motor	5
0012		87 88 242		7), B202I	1	Engine	Motor	5
0020		78 72 682		7), B212I	1	Engine	Motor	5
0030		87 88 259		7), B202TURBO,B202S	1	Engine	Motor	5
0100						.Cylinder block	.Cylinderblock	
0110						.Crankshaft	.Vevaxel	
0120						.Connecting rod	.Vevstake	
0130						.Piston	.Kolv	
0140						.Timing gear casing	.Transmissionskåpa	
0150						.Transmission	.Transmission	
0160						.End plate	.Gavelplatta	
0170						.Pulley	.Remskiva	
0180						.Oil pump	.Oljepump	
0190						.Coolant pump	.Kylvätskepump	

4. With catalytic converter. Med katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-D02 Transmission cover, belt pulley

Transmissionskåpa, remskiva

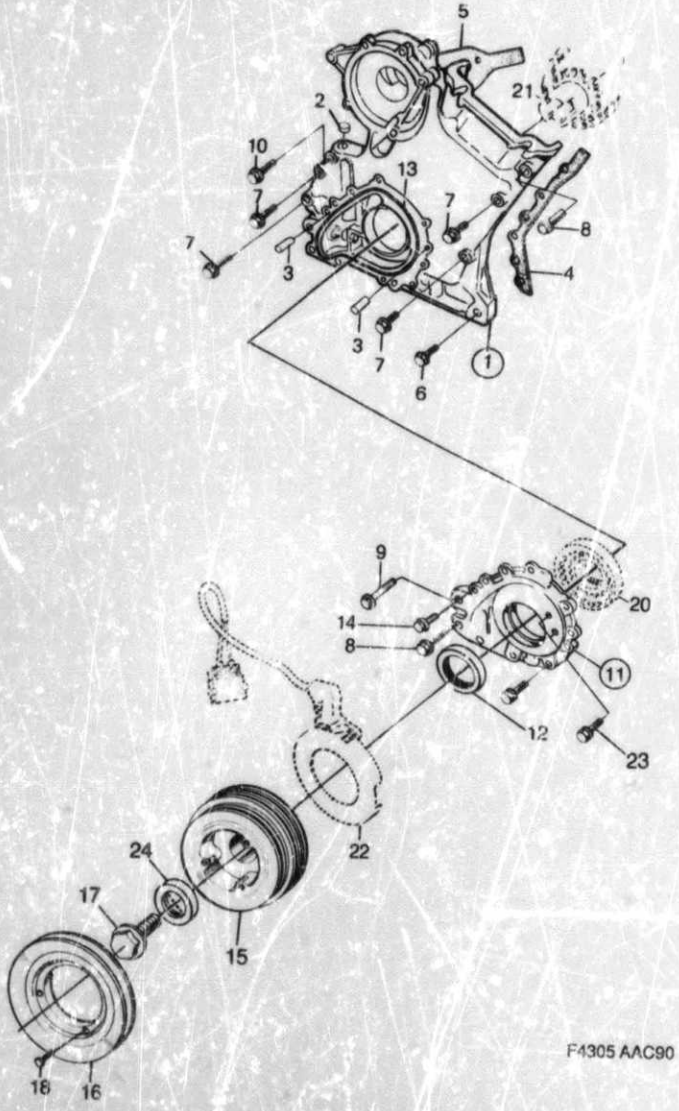

F4305 AAC90

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 19 358			1	Cover	Kåpa	5
0020	2	81 23 176			1	▲Plug	▲Plugg	6
0030	3	*80 34 456*		-1992 NLS - USE 7949696	2	Pin	Pinne	5
0032	3	79 49 695		1993-	2	Pin	Pinne	5
0050	4	*75 63 646*		113) NLS - USE 9321795	1	Gasket	Packning	2
0052	4	93 21 795		114)	X	Flange sealant	Fläntätning	5
0060				See page 2-165, 1-I22				
0080	5	*91 17 060*		113) NLS - USE 9321795	1	Gasket	Packning	2
0082	5	93 21 795		114)	X	Flange sealant	Fläntätning	5
0085				See page 2-165, 1-I22				
0090	6	83 56 917			1	Screw	Skruv	5
0100	7	81 25 239			4	Screw	Skruv	5
0110	8	81 25 247			2	Screw	Skruv	5
0120	9	81 25 262			1	Screw	Skruv	5
0130	10	93 54 960			1	Screw	Skruv	5
0150	11	75 86 993			1	Oil pump housing	Oljepumphus	6
0160	12	93 09 204			1	▲Seal	▲Tätning	2
0170	13	*83 69 829*		-1991 NLS - USE 9125824	1	Seal	Tätning	3
0175	13	91 25 824		1992-	1	O-ring	O-ring	2
0180	14	81 25 049			8	Screw	Skruv	5
0190	15	*75 19 390*		1990 NLS - USE 3107665	1	Pulley	Remskiva	4
0195	15	91 07 665		1991-, TURBO	1	Pulley	Remskiva	4
0200	15	*74 84 983*		1990, B202I NLS - USE 8789315, 9117201	1	Pulley	Remskiva	4
0202	15	87 89 315		1991-, I	1	Pulley	Remskiva	4
0210	16	93 30 184		AC	1	Pulley	Remskiva	4
0220	17	83 48 534		1990	1	Screw	Skruv	5
0225	17	91 16 443		1991-	1	Screw	Skruv	5
0230	18	80 19 945		AC	3	Screw	Skruv	5
0240	20			See page 2-037, 1-D14		Pump kit	Pumpsats	
0250	21			See page 2-027, 1-D04		Chain gear	Kedjehjul	
0260	22			See page 3-000, 0-000		Sensor	Givare	
0270	23	87 88 150		-1990	2	Screw	Skruv	5
0275	23	91 27 43?		1991-	2	Screw	Skruv	5
0280	24	78 56 172		1991-	1	Spacer	Distans	5

113. Engine -N312959.
114. Engine N312960-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-D04

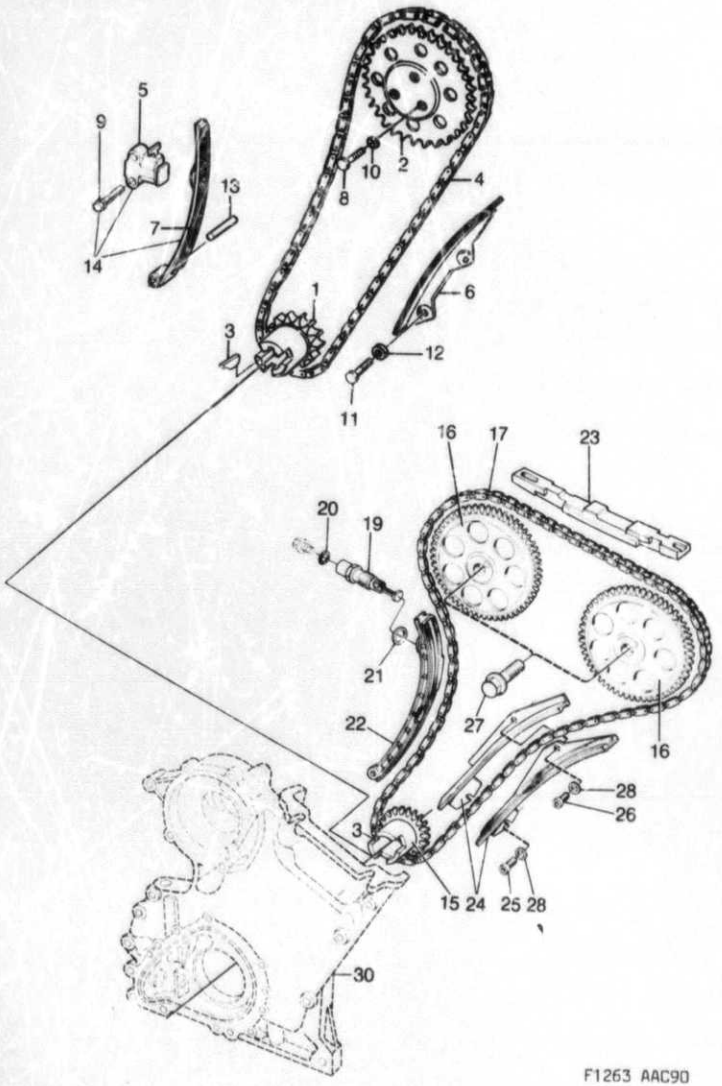

F1263 AAC90


0330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 18 632		B201	1	Chain gear	Kedjehjul	4
0020	2	75 63 166		B201	1	Chain gear	Kedjehjul	4
0030	3	83 47 122		1990	1	Key	Kil	5
0040	3	91 16 864		1991-	1	Key	Kil	5
0050	4	93 59 779		B201	1	Chain	Kedja	3
0060	5	93 58 672		B201	1	Chain tensioner	Kedjesträckare	3
0070	6	75 07 155		B201	1	Chain control	Kedjestyrning	3
0080	7	93 58 680		B201	1	Chain control	Kedjestyrning	3
0090	8	80 82 935		B201	3	Screw	Skruv	5
0100	9	81 25 064		B201	2	Screw	Skruv	5
0110	10	91 66 372		B201, (8029985)	3	Washer	Bricka	5
0120	11	91 66 273		B201, (8019895)	4	Screw	Skruv	5
0130	12	91 66 364		B201, (8029951)	4	Washer	Bricka	5
0140	13	80 34 761		B201	1	Pin	Pinne	5
0150	14	88 17 405		B201	X	Chain tensioner	Kedjesträckare	3
0160				See page 2-157, 1-I14				
0170	15	75 18 640		B202, B212	1	Chain gear	Kedjehjul	4
0180	16	75 00 127		B202 B212	2	Chain gear	Kedjehjul	5
0190	17	75 00 697		B202, B212	1	Chain	Kedja	3
0200	17	93 21 837		B202, B212, ALTERNATIV	1	Chain	Kedja	3
0210						Open, with chain link	Öppen, med kedjelänk	
0211								
0220	19	75 85 086		B202, B212	1	Chain tensioner	Kedjesträckare	3
0230	20	*81 09 571*		B202, B212 NLS - USE 8048670	1	O-ring	O-ring	2
0240	21	75 08 690		B202, B212	1	Seal	Tätning	5
0250	22	*91 17 805*		1990, B202, B212 NLS - USE 8858276	1	Chain control	Kedjestyrning	3
0260	22	*91 33 513*		1991, B202, B212 NLS - USE 8858276	1	Chain control	Kedjestyrning	3
0270	22	88 58 276		1992-, B202, B212	1	Chain control	Kedjestyrning	3
0280	23	88 59 324		B202, B212	1	Chain control	Kedjestyrning	3
0290	24	*88 59 092*		-1990, B202, B212 NLS - USE 9133505	1	Chain control	Kedjestyrning	3
0300	24	91 33 505		1991-, B202, B212	1	Chain control	Kedjestyrning	3
0310	25	91 66 299		B202, B212, (8019929)	1	Screw	Skruv	5
0320	26	91 66 307		B202, B212, (8019960)	1	Screw	Skruv	5
0330	27	91 07 541		B202, B212	2	Screw	Skruv	5
0340	28	80 29 951		B202, B212	2	Washer	Bricka	5
0350	30			See page 2-025, 1-D02	2	Cover	Kåpa	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GRO' ., INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

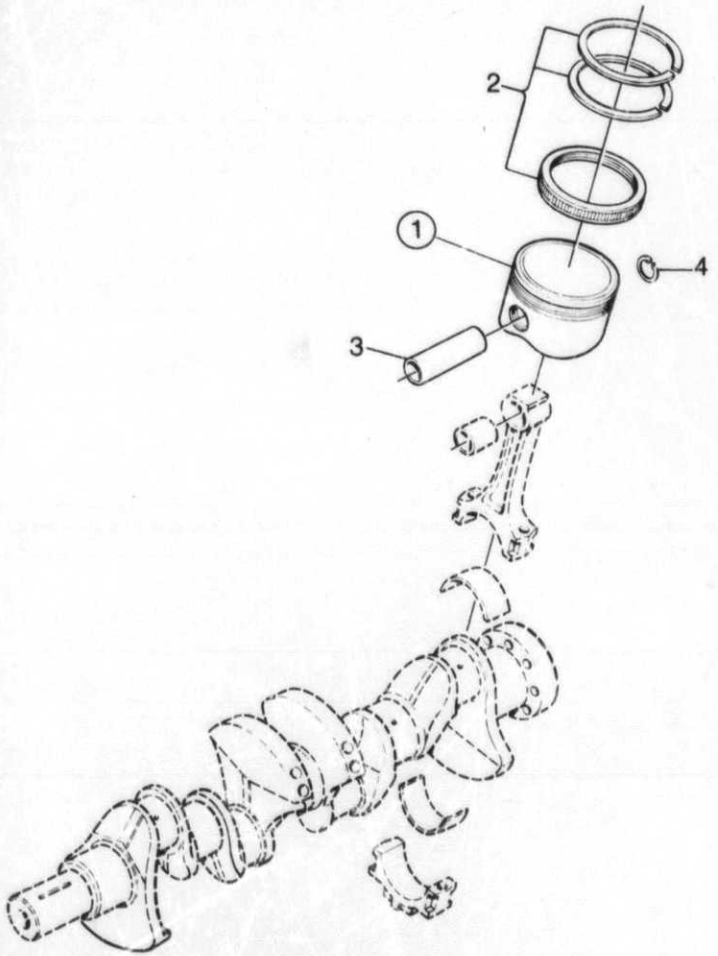

F2238 AAC90

Engine body
1-D06 Piston B201

Motorkropp
Kolv B201

	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0350								
0362	1	91 18 233		CLASS AB, C, MAHLE	4	Piston	Kolv	5
0340	1	75 20 745		CLASS AB, I FOR SE, EU, HEPOLITE	4	Piston	Kolv	5
0350								
0361	1	*75 20 802*		US, CLASS AB,MAHLE NLS - USE 9118084	4	Piston	Kolv	5
0361								
0362	1	91 18 084		17),CLASS AB, MAHLE	4	Piston	Kolv	5
0381								
0401	1	91 18 241		CLASS B, C, MAHLE	4	Piston	Kolv	5
0420	1	75 20 752		CLASS B, I FOR SE, EU, HEPOLITE	4	Piston	Kolv	5
0421								
0431	1	*75 20 810*		US, CLASS B, MAHLE NLS - USE 9118092	4	Piston	Kolv	5
0431								
0432	1	91 18 092		17), CLASS B, MAHLE	4	Piston	Kolv	5
0441								
0451	1	91 18 258		CLASS C, C, MAHLE	4	Piston	Kolv	5
0470	1	75 20 760		CLASS C, I, SE, EU, HEPOLITE	4	Piston	Kolv	5
0471								
0481	1	*75 20 828*		US, CLASS C,MAHLE NLS - USE 9118100	4	Piston	Kolv	5
0481								
0482	1	91 18 100		17), CLASS C, MAHLE	4	Piston	Kolv	5
0491								
0505	1	91 18 266		36), 0,50 MM, C, MAHLE	4	Piston	Kolv	5
0506								
0520	1	75 20 703		36), 0,50MM, I, KARL-SCHMIDT	4	Piston	Kolv	5
0530								
0572	1	*75 20 836*		36), US, 0,50MM MAHLE NLS - USE 9118118	4	Piston	Kolv	5
0573								
0576	1	91 18 118		17,36), 0,50 MM, MAHLE	4	Piston	Kolv	5
0577								
0591								
0605	1	91 18 274		36),1,0 MM, C, MAHLE	4	Piston	Kolv	5
0606								
0620	1	75 20 711		36),1,0MM, I, KARL-SCHMIDT	4	Piston	Kolv	5
0630								
0672	1	75 20 844		36), US, 1,0MM MAHLE	4	Piston	Kolv	5
0673								
0675	1	91 18 126		17,36), 1,0 MM, MAHLE	4	Piston	Kolv	5
0676								
0691								
0700	2	75 20 513		STD	4	▪Piston ring kit	▪Kolvringsats	3
0710	2	75 20 521		36), 0,50MM	4	▪Piston ring kit	▪Kolvringsats	3
0730	2	75 20 539		36), 1,0MM	4	▪Piston ring kit	▪Kolvringsats	3
0731								
0750	3	83 46 983		L=73MM	4	Gudgeon pin	Kolvtapp	5
0760	4	83 47 577			8	Lock ring	Låsring	5


17. For I with catalytic converter. För I med katalytisk reaktor.
36. Oversize. Överdimension.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

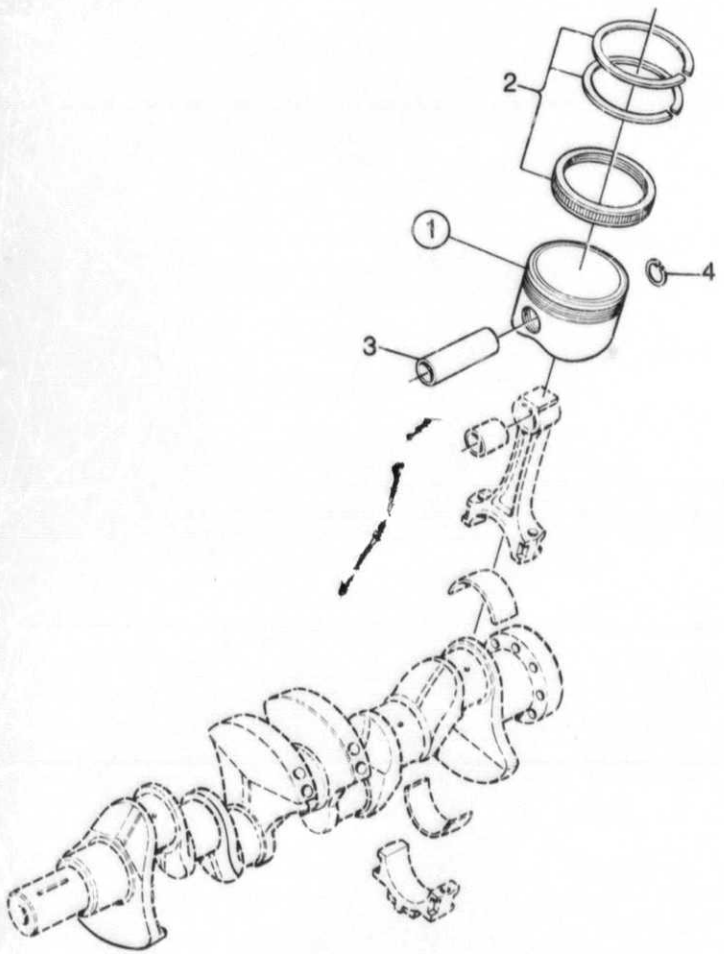

F2239 AAC90

Engine body

1-D08

Piston
B202

Motorkropp

Kolv
B202

0360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 24 895		74), TURBO, CLASS AB	4	Piston	Kolv	5
0020	1	91 15 841		75), TURBO, CLASS AB	4	Piston	Kolv	5
0052	1	91 15 841		US, TURBO, CLASS AB	4	Piston	Kolv	5
0060	1	75 20 927		I, CLASS AB	4	Piston	Kolv	5
0065								
0070	1	75 24 903		74), TURBO, CLASS B	4	Piston	Kolv	5
0080	1	91 15 858		75), TURBO, CLASS B	4	Piston	Kolv	5
0112	1	91 15 858		US, TURBO, CLASS B	4	Piston	Kolv	5
0120	1	75 20 935		I, CLASS B	4	Piston	Kolv	5
0125								
0130	1	75 24 911		74), TURBO, CLASS C	4	Piston	Kolv	5
0140	1	91 15 866		75), TURBO, CLASS C	4	Piston	Kolv	5
0172	1	91 15 866		US, TURBO, CLASS C	4	Piston	Kolv	5
0180	1	75 20 943		I, CLASS C	4	Piston	Kolv	5
0185								
0190	1	75 24 929		36,74), 0,50MM, TURBO	4	Piston	Kolv	5
0200	1	*91 15 874*		36,75), 0,50MM, TURBO	4	Piston	Kolv	5
0200				NLS - USE 7524929				
0242	1	*91 15 874*		36), 0,50MM, US, TURBO	4	Piston	Kolv	5
0242				NLS - USE 7524929				
0250	1	75 20 950		36), 0,50MM, I	4	Piston	Kolv	5
0265								
0270	1	75 24 937		36,74),1,0MM, TURBO	4	Piston	Kolv	5
0280	1	91 15 882		36,75),1,0MM, TURBO	4	Piston	Kolv	5
0322	1	91 15 882		36),1,0MM, US, TURBO	4	Piston	Kolv	5
0330	1	75 20 968		36),1,0MM, I	4	Piston	Kolv	5
0335								
0340	2	75 20 513		STD		.Piston ring kit	.Kolvringsats	3
0350	2	75 20 521		36), 0,50MM		.Piston ring kit	.Kolvringsats	3
0360	2	75 20 539		36), 1,0MM	4	.Piston ring kit	.Kolvringsats	3
0365	3	83 46 983		L=73MM	4	Gudgeon pin	Kolvtapp	5
0370	3	75 68 942		46), L=68MM	4	Gudgeon pin	Kolvtapp	5
0380	4	83 47 577			8	Lock ring	Låsring	5


36. Oversize. Överdimension.
46. For pistons 9115841, 9115858, 9115866, 9115874, 9115882. För kolvar 9115841, 9115858, 9115866, 9115874, 9115882.
74. Engine --M028368.
75. Engine M028369--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

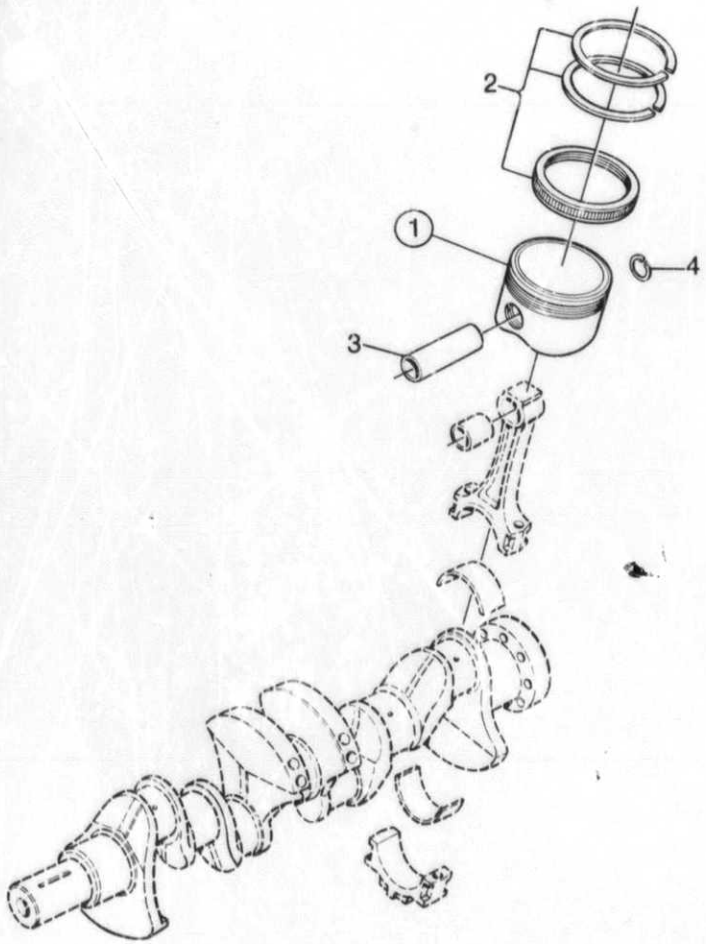

F3104 AAC90

0365	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 26 434*		76), CLASS A NLS - USE 9133968	4	Piston	Kolv	5
0065	1	91 33 968		77), CLASS A	4	Piston	Kolv	5
0070	1	*91 26 442*		76), CLASS B NLS - USE 9133976	4	Piston	Kolv	5
0125	1	91 33 976		77), CLASS B	4	Piston	Kolv	5
0130	1	*91 26 459*		76), CLASS C NLS - USE 9133984	4	Piston	Kolv	5
0185	1	91 33 984		77), CLASS C	4	Piston	Kolv	5
0190	1	*91 26 467*		36,76), 0,50MM NLS - USE 9133992	4	Piston	Kolv	5
0265	1	91 33 992		36,77), 0,50MM	4	Piston	Kolv	5
0270	1	*91 26 475*		36,76), 1,0MM NLS - USE 9134008	4	Piston	Kolv	5
0335	1	91 34 008		36,77), 1,0MM	4	Piston	Kolv	5
0340	2	93 21 472		STD	4	.Piston ring kit	.Kolvringsats	3
0350	2	93 21 480		36), 0,50MM	4	.Piston ring kit	.Kolvringsats	3
0360	2	93 21 498		36), 1,0MM	4	.Piston ring kit	.Kolvringsats	3
0365	3	75 63 934		L=60MM	4	Gudgeon pin	Kolvtapp	5
0380	4	88 59 514			8	Lock ring	Låsring	5


36. Oversize. Överdimension.
76. Engine --M030866.
77. Engine M030867--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

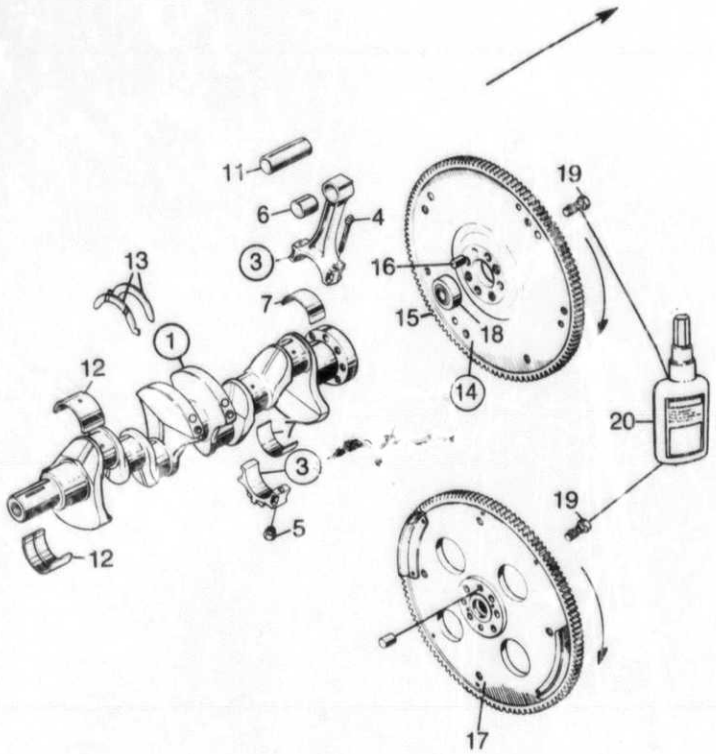

F5457 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	93 21 589		1990	1	Crankshaft	Vevaxel	6
	87 87 228		PART OF 9321589	1	.Crankshaft	.Vevaxel	6
	78 56 172		PART OF 9321589	1	.Spacer	.Distans	5
	91 16 443		PART OF 9321589	1	.Screw	.Skruv	5
	91 16 864		PART OF 9321589	1	.Key	.Kil	5
1	87 87 228		1991-	1	Crankshaft	Vevaxel	6
3	75 62 259			4	Connecting rod	Vevstake	5
4	75 21 255			8	.Screw	.Skruv	5
5	75 62 275			8	.Nut	.Mutter	5
6	83 47 676			4	.Bushing	.Bussning	5
7	83 47 650			8	Con.bearing	Vevstakslager	
					Red	Röd	
7	83 55 349			8	Con.bearing	Vevstakslager	
					Blue	Blå	
7	83 49 938		37), 0,25MM	8	Con.bearing	Vevstakslager	4
					Yellow	Gul	
7	83 55 356		37), 0,25MM	8	Con.bearing	Vevstakslager	
					Green	Grön	
7	83 49 946		37), 0,50MM	8	Con.bearing	Vevstakslager	4
					White	Vit	
7	83 55 364		37), 0,50MM	8	Con.bearing	Vevstakslager	4
					Brown	Brun	
7	83 49 953		37), 0,75MM	8	Con.bearing	Vevstakslager	4
7	83 49 961		37), 1,0MM	8	Con.bearing	Vevstakslager	4
12	83 50 936			10	Main bearing	Ramlager	5
					Red	Röd	
12	83 55 315			10	Main bearing	Ramlager	5
					Blue	Blå	
12	83 50 977		37), 0,25MM	10	Main bearing	Ramlager	5
					Yellow	Gul	
12	83 55 323		37), 0,25MM	10	Main bearing	Ramlager	5
					Green	Grön	
12	83 50 985		37), 0,50MM	10	Main bearing	Ramlager	5
					White	Vit	
12	83 55 331		37), 0,50MM	10	Main bearing	Ramlager	5
					Brown	Brun	
12	83 50 993		37), 0,75MM	10	Main bearing	Ramlager	5
12	83 51 009		37), 1,0 MM	10	Main bearing	Ramlager	5
13	83 47 270			2	Thrust washer	Tryckbricka	4
14	83 62 386			1	Flywheel	Svänghjul	5
14	74 87 184		TURBO	1	Flywheel	Svänghjul	5
15	83 65 058			1	.Gear ring	.Kuggkrans	5
16	80 34 142		1990	1	.Pin	.Pinne	5
16	80 34 928		1991-	1	Pin	Pinne	5
17	75 61 186		1990, A	1	Companion disc	Medbringarskiva	4
17	93 50 034		1991-, A	1	Companion disc	Medbringarskiva	4
18	83 46 868			1	Ball bearing	Kullager	4
19	88 59 191			7	Screw	Skruv	5
19	88 59 209		A	7	Screw	Skruv	2
20	74 96 292		50 ML	X	Nut lock	Gängsäkring	5
					strong	stark	
					red	röd	

37. Undersize. Underdimension.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


Lubrication system

1-D14

Oil pump, oil filter,

Smörjsystem

Oljepump, oljefilter,

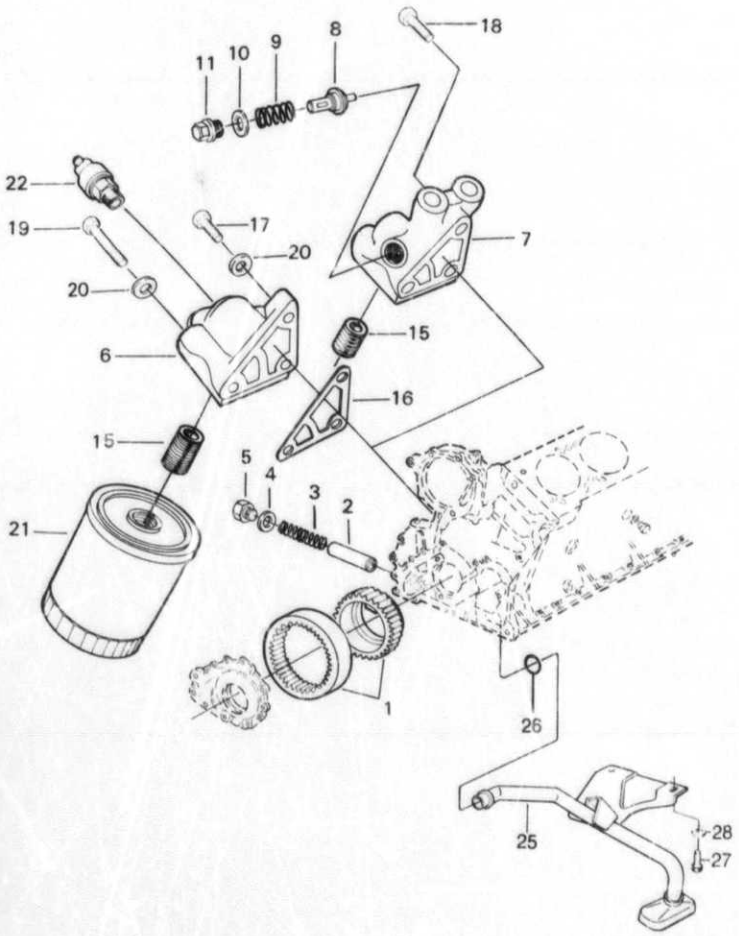

F2235 AAC90

0400	Pos.	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 17 561*		-1991	1	Pump kit	Pumpsats	5
0011				See page 2-161, 1-I18				
0011				NLS - USE 9321779				
0013	1	93 21 779		1992-	1	Pump kit	Pumpsats	5
0014				See page 2-161, 1-I18				
0020	2	75 08 328			1	Brake piston	Bromskolv	6
0030	3	93 09 998			1	Spring	Fjäder	6
0040	4	93 55 389			1	Gasket	Packning	4
0050	5	93 10 004			1	Plug	Propp	5
0060	6	75 60 048		I	1	Intermediate section	Mellanstycke	6
0070	7	75 60 071		TURBO	1	Intermediate section	Mellanstycke	6
0080	8	93 01 540			1	.Thermostat	.Termostat	2
0090	9	93 00 591			1	.Spring	.Fjäder	5
0100	10	91 09 182			1	.Gasket	.Packning	4
0110	11	75 20 372			1	.Plug	.Propp	5
0120	15	83 48 609			1	Junction pipe	Skarvrör	6
0130	16	75 66 433			1	Gasket	Packning	4
0140	17	81 25 197			1	Screw	Skruv	5
0150	17	81 25 197			1	Screw	Skruv	5
0160	19	81 25 304			2	Screw	Skruv	5
0170	21	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
0180	22	91 12 459			1	Oil pressure sensor	Oljetrycksgivare	3
0190	25	75 26 874		M	1	Oil pipe	Oljesugrör	6
0200	25	75 26 502		A	1	Oil pipe	Oljesugrör	6
0210	26	79 72 698			1	O-ring	O-ring	2
0220	27	*80 82 919*		NLS - USE 8082935	2	Screw	Skruv	5
0230	28	79 16 497			2	Washer	Bricka	5
0240								
0250		88 17 348		B201	X	Service kit	Servicesats	1
0260				See page 2-161, 1-I18				
0270		88 19 864		-1991, B202I, B212I	X	Service kit	Servicesats	1
0280				See page 2-161, 1-I18				
0282		93 21 746		1992-, B202I, B212I	X	Service kit	Servicesats	1
0283				See page 2-161, 1-I18				
0290		88 17 686		B202TURBO	X	Service kit	Servicesats	1
0300				See page 2-161, 1-I18				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-D16

Oil pipe
Oljerör

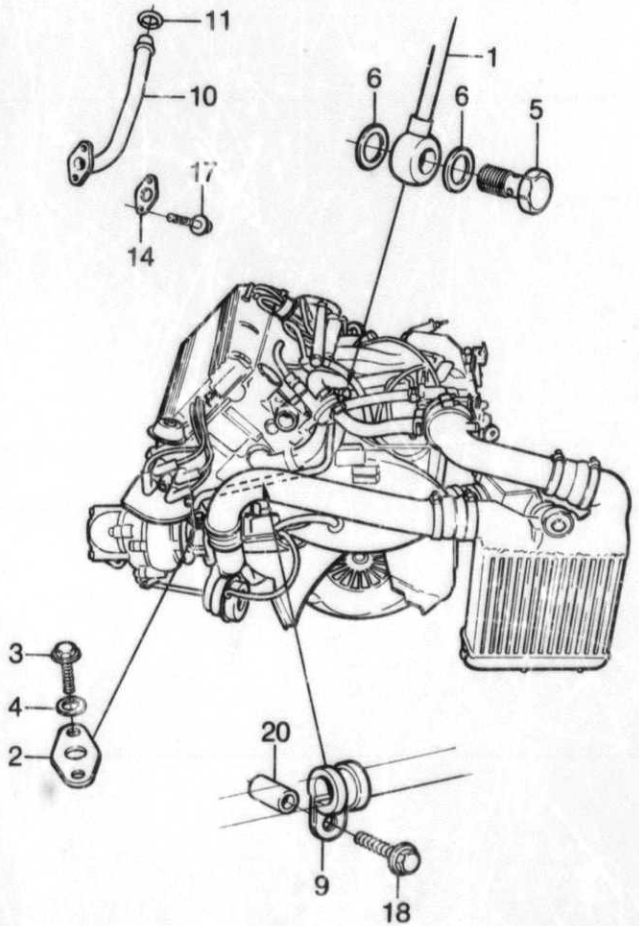

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0035	1	88 59 480			1	Tube	Rör	5
0042	2	75 07 700			1	Gasket	Packning	4
0070	3	81 25 163			1	Screw	Skruv	5
0080	4	80 29 985		-1992	2	Washer	Bricka	5
0082	4	• 91 66 372		1993-	2	Washer	Bricka	5
0100	5	81 23 903			1	Banjo screw	Banjoskruv	5
0120	6	81 24 141			2	Seal	Tätning	5
0140	9	17 54 506			2	Clamp	Klammer	5
0155	10	75 05 256			1	Oil pipe	Oljerör	4
0156	11	75 02 263			1	O-ring	O-ring	2
0190	14	75 18 970			1	Gasket	Packning	4
0272	17	81 25 163			2	Screw	Skruv	5
0275	18	81 25 205			1	Screw	Skruv	5
0290	20	75 19 481			1	Spacer sleeve	Distanshylsa	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-D18

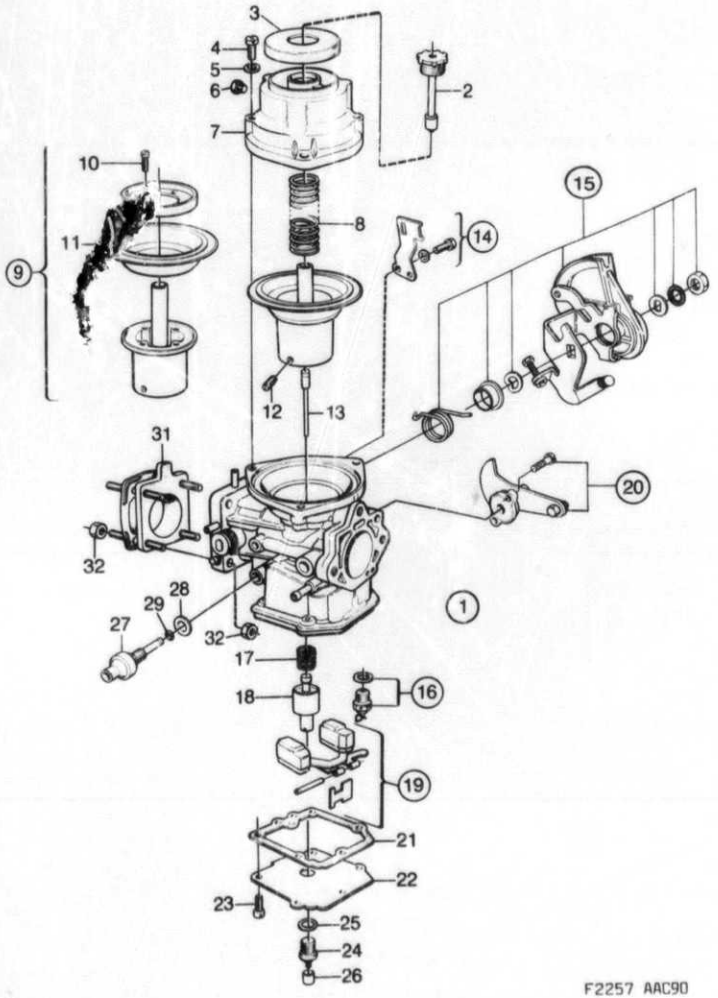

0510	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0020	1	75 81 093			1	Carburettor	Förgasare	5
0050	2	75 84 725			1	.Damping piston	.Dämpkolv	4
0060	3	75 84 717			1	.Cover	.Lock	6
0070	4	75 84 691			1	.Screw	.Skruv	5
0080	5	75 84 709			3	.Washer	.Bricka	5
0090	6	75 84 683			1	.Screw	.Skruv	5
0100	7	75 84 675			1	.Carburettor cover	.Förgasarlock	6
0120	8	75 84 667			1	.Spring	.Fjäder	5
0130	9	75 84 618			1	.Piston	.Kolv	5
0140	10	75 84 634			4	..Screw	..Skruv	5
0150	11	75 84 626			1	..Diaphragm	..Membran	1
0160	12	75 84 659			1	.Screw	.Skruv	5
0170	13	75 84 642			1	.Metering needle	.Bränslenål	4
0180	14	75 84 733			1	.Bracket	.Fäste	6
0190	15	75 84 493			1	.Lever	.Hävarm	5
0200	16	75 84 535			1	.Float valve	.Flottörventil	3
0210	17	75 84 519			1	.Spring	.Fjäder	3
0220	18	75 84 527			1	.Nozzle	.Munstycke	4
0230	19	75 84 543			1	.Float	.Flottör	5
0240	20	75 84 501			1	.Choke	.Choke	6
0250	21	75 84 550			1	.Gasket	.Packning	3
0260	22	75 84 568			1	.Cover	.Lock	6
0270	23	75 84 600			6	.Screw	.Skruv	5
0280	24	75 84 576			1	.Adjustment screw	.Justerskruv	3
0290	25	75 84 584			1	.O-ring	.O-ring	2
0300	26	75 37 806			1	.Plug	.Plugg	5
0310	27	75 84 741			1	.Valve	.Ventil	5
0320	28	75 84 758			1	.Gasket	.Packning	4
0330	29	75 84 766			1	.O-ring	.O-ring	2
0340	30	75 84 485			1	.Fuel filter	.Bränslefilter	5
0350	31	75 81 473			1	Flange	Fläns	6
0370	32	81 51 326			8	Nut	Mutter	5
0375	33	93 15 466			1	Valve	Ventil	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-Fu2
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Fuel system

1-D20 Air cleaner carburettor engine

Bränslesystem

Luftrenare förgasarmotor

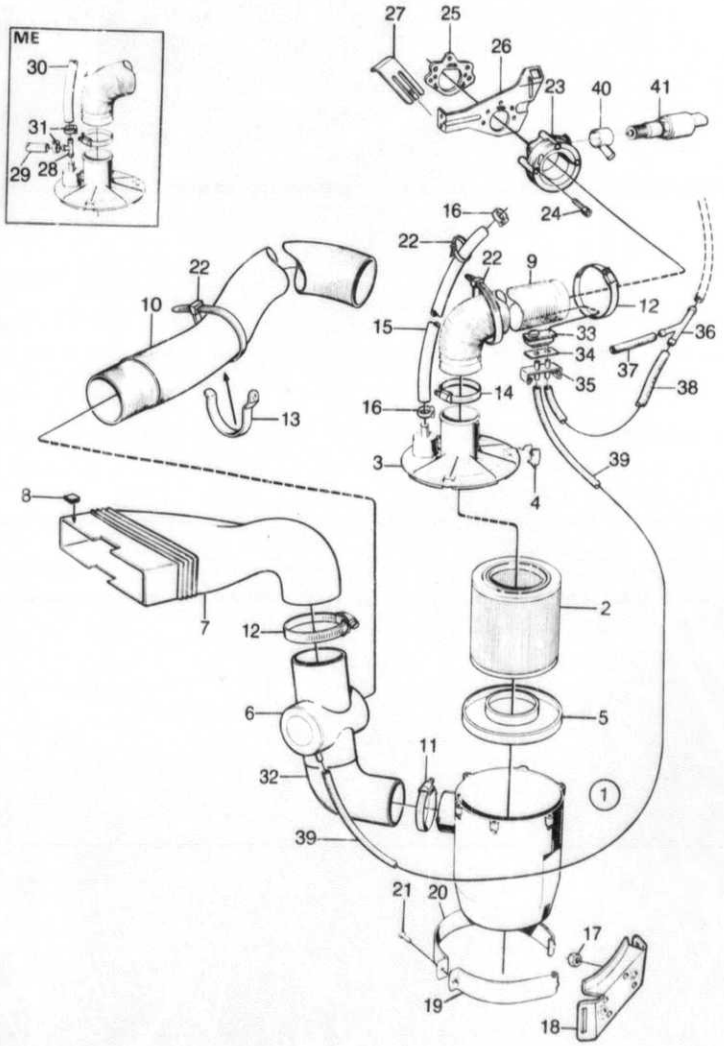

F1269 AAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	83 17 893			1	Air cleaner	Luftrenare	5
0030	2	93 18 502			1	.Air filter	.Luftfilter	1
0040	3	83 27 678			1	.Cover	.Lock	6
0050	4	83 18 339			3	.Clamp	.Klammer	5
0060	5	83 17 919			1	.Insert	.Insats	6
0070	6	75 29 852			1	Throttle body	Spjällhus	5
0090	7	75 36 576			1	Tube	Rör	5
0100	8	93 19 526			4	Clamp	Klammer	5
0110	9	75 28 698			1	Pipe end	Stos	5
0154	10	75 29 845			1	Hose	Slang	3
0165	10	75 29 183		EU, GB	1	Hose	Slang	3
0180	11	79 70 148			2	Hose clamp	Slangklamma	5
0190	12	79 70 163			2	Hose clamp	Slangklamma	5
0210	13	93 41 173			1	Clamp	Klammer	5
0220	14	83 27 561			1	Clamp	Klammer	5
0230	15	83 26 480			1	Hose	Slang	4
0250	16	79 70 064			2	Hose clamp	Slangklamma	5
0262	17	81 51 227			2	Nut	Mutter	5
0270	18	92 88 432			1	Bracket	Fäste	5
0280	19	83 21 044			1	Tensioning band	Spännband	5
0290	20	83 21 051			1	Tensioning band	Spännband	5
0300	21	80 19 945			1	Screw	Skruv	5
0500	22	79 71 880			2	Tensioning band	Spännband	4
0540	23	75 80 244			1	Flange	Fläns	6
0560	24	80 98 139			3	Screw	Skruv	5
0585	25	75 06 959			2	Gasket	Packning	4
0627	26	75 80 574			1	Bracket	Fäste	6
0630	27	93 62 542			1	Plate	Platta	6
0670	28	83 17 828		ME	1	Nipple	Nippel	5
0680	29	75 26 429		ME	1	Hose	Slang	4
0690	30	75 26 411		ME	1	Hose	Slang	4
0700	31	79 75 543		ME	2	Hose clamp	Slangklamma	5
0710	32	75 29 860			1	Pipe end	Stos	5
0725	33	75 36 931			1	Vacuum valve	Vakuumventil	5
0730	34	75 29 886			1	Seal	Tätning	5
0740	35	75 29 894			1	Clip	Clips	5
0750	36	85 09 002			1	Tube	Rör	2
0760	37	91 36 243		L=40 MM	1	Vaccum hose	Vakuumslang	5
0775	38	91 36 243		L=400 MM	1	Vaccum hose	Vakuumslang	5
0780	39	91 36 243		L=670 MM	1	Vaccum hose	Vakuumslang	5
0800	40	75 90 582			1	Nipple	Nippel	5
0810	41	75 81 317			1	Solenoid valve	Magnetventil	3
0820								
0830		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-D22 Air cleaner B201 I / Luftrenare B201 I

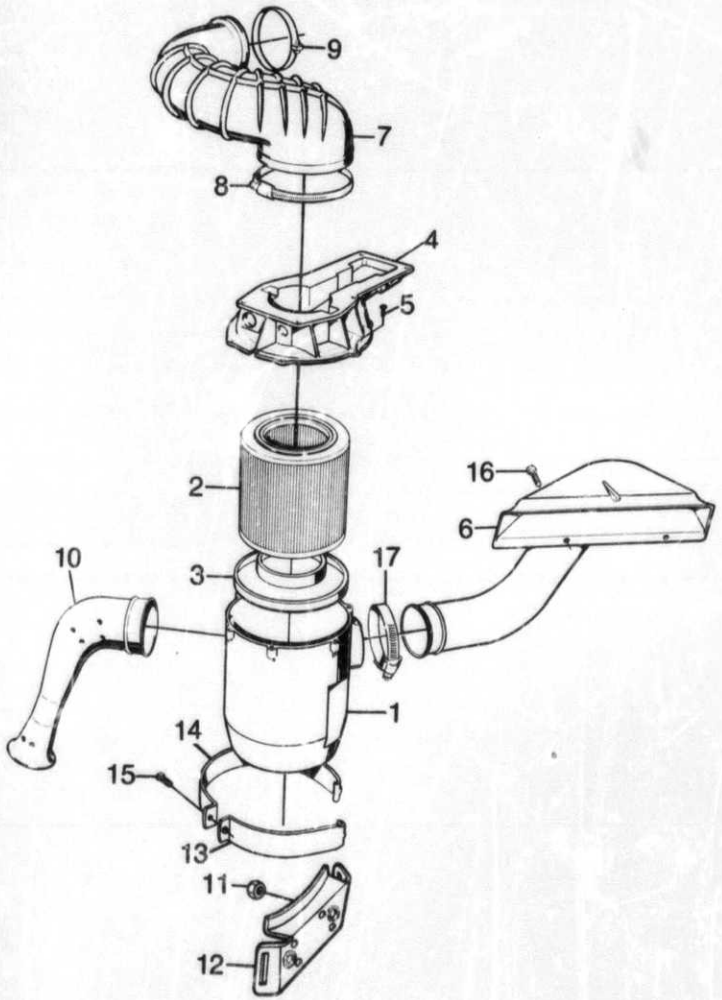

F2867 AAC90

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0060	1	75 12 999			1	Air cleaner	Luftrenare	6
0070	2	93 18 502			1	Air filter	Luftfilter	1
0075	3	83 17 919			1	Insert	Insats	6
0100	4	83 34 631			1	Adapter	Mellandel	3
0220	5	79 22 370			6	Screw	Skruv	5
0255	6	89 78 306			1	Tube	Rör	5
0300	7	83 86 351			1	Connector	Anslutning	5
0350	8	79 70 189			1	Clamp	Klammer	5
0360	9	79 70 155			1	Hose clamp	Slangklamma	5
0375	10	75 33 870		4)	1	Air inlet	Luftintag	5
0382	11	81 51 227			2	Nut	Mutter	5
0390	12	92 88 432			1	Bracket	Fäste	5
0400	13	83 21 044			1	Tensioning band	Spännband	5
0410	14	83 21 051			1	Tensioning band	Spännband	5
0420	15	80 19 945			1	Screw	Skruv	5
0430	16	*79 74 769*		NLS - USE 7922891	2	Screw	Skruv	5
0440	17	79 70 148			1	Hose clamp	Slangklamma	5


4. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

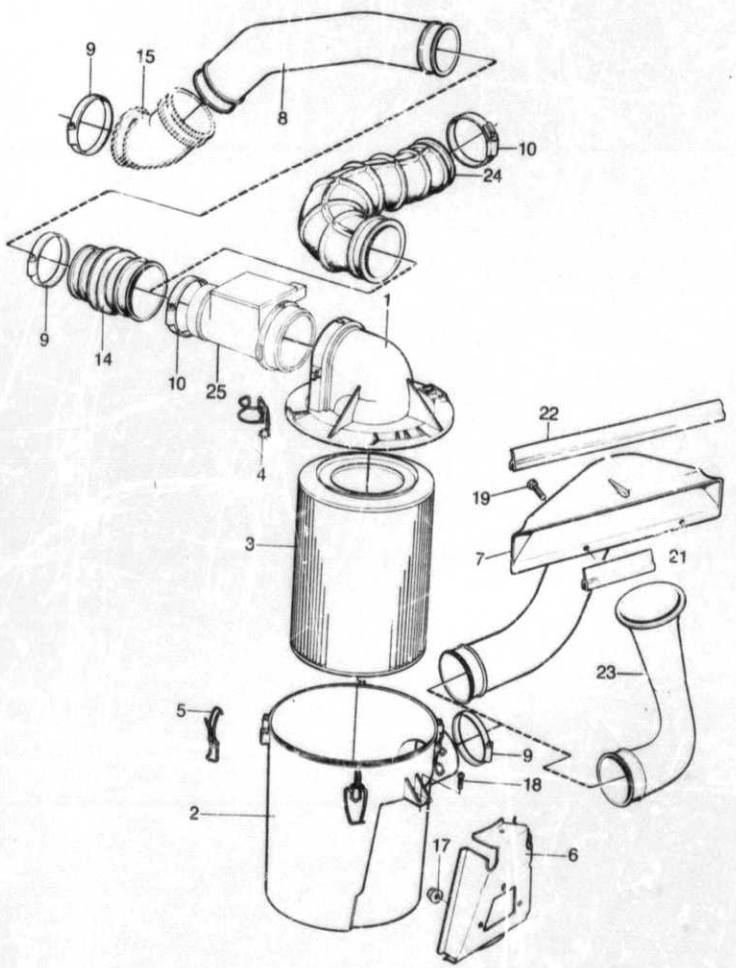

0675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	75 12 957			1	Air cleaner housing	Luftrenarhus	6
0040	2	75 12 973			1	Air cleaner housing	Luftrenarhus	6
0060	3	75 14 722			1	Air filter	Luftfilter	1
0070	4	93 75 601			2	Clamp	Klammer	6
0080	5	93 77 920			4	Clamp	Klammer	6
0097	6	89 77 803			1	Retainer	Hållare	5
0105	7	89 78 306		TURBO	1	Tube	Rör	5
0110	8	75 14 615		61),TURBO	1	Intake manifold	Inloppsrör	5
0111	8	40 22 562		62),TURBO	1	Intake manifold	Inloppsrör	5
0112	8	40 16 085		21,61), TURBO	1	Intake manifold	Inloppsrör	5
0113	8	40 22 547		21,62), TURBO	1	Intake manifold	Inloppsrör	5
0120	9	79 70 148			2	Hose clamp	Slangklamma	5
0130	10	79 70 155			2	Hose clamp	Slangklamma	5
0145	14	89 77 795		TURBO	1	Hose	Slang	5
0150	15			See page 2-147, 1-I04		Hose	Slang	
0172	17	81 51 227			3	Nut	Mutter	5
0180	18	79 72 839			1	Screw	Skruv	5
0190	19	79 74 769		TURBO NLS - USE 7922891	2	Screw	Skruv	5
0212	21	75 39 125			1	Rubber moulding	Gummilist	4
0220	22	75 28 342		TURBO	1	Rubber moulding	Gummilist	4
0230	23	75 33 870		I	1	Air inlet	Luftintag	5
0240	24	75 25 215		I	1	Hose	Slang	4
0250	25			See page 2-071, 1-E24		Mass air flow sensor	Luftmassamätare	


21. Cars with electronic EGR. Bilar med elektronisk EGR.
61. Ch. -L5004733.
62. Ch. L5004734-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

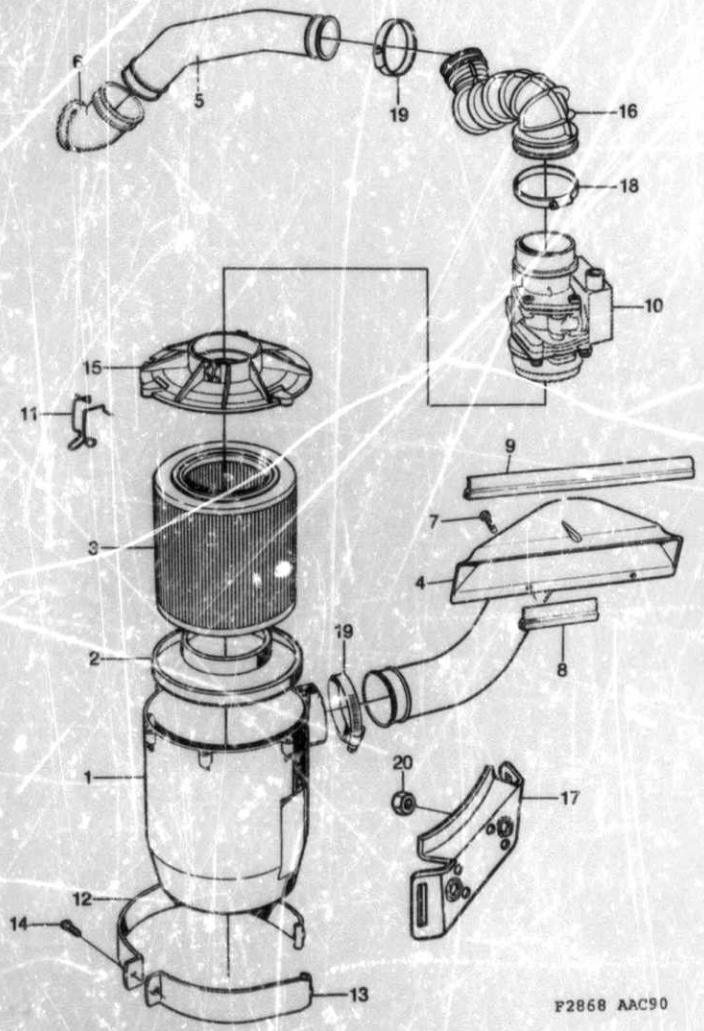

0680	Pos	Part No/Art nr	K S	Note/ Anmärkningar	Qty/ Antal	Description	Benämning	S L
0045	1	75 12 999			1	Air cleaner	Luftrenare	6
0050	2	83 17 919			1	Insert	Insats	6
0055	3	93 18 502			1	Air filter	Luftfilter	1
0105	4	89 78 306			1	Tube	Rör	5
0110	5	75 14 615		61)	1	Intake manifold	Inloppsrör	5
0111	5	40 22 562		62)	1	Intake manifold	Inloppsrör	5
0115	5	40 19 378		61),B202S	1	Intake manifold	Inloppsrör	5
0116	5	40 22 554		62),B202S	1	Intake manifold	Inloppsrör	5
0150	6			See page 2-147, 1-I04		Hose	Slang	
0195	7	79 22 891			2	Screw	Skruv	5
0212	8	75 39 125			1	Rubber moulding	Gummilist	4
0225	9	75 28 284			1	Rubber moulding	Gummilist	4
0250	10			See page 2-071, 1-E24		Mass air flow sensor	Luftmassamätare	
0260	11	83 18 339			3	Clamp	Klammer	5
0270	12	83 21 051			1	Tensioning band	Spännband	5
0280	13	83 21 044			1	Tensioning band	Spännband	5
0290	14	80 19 945			1	Screw	Skruv	5
0300	15	89 76 482			1	Cover	Lock	6
0320	16	89 76 508			1	Air inlet	Luftintag	6
0330	17	92 88 432			1	Bracket	Fäste	5
0340	18	79 70 163			1	Hose clamp	Slangklamma	5
0350	19	79 70 148			1	Hose clamp	Slangklamma	5
0360	20	81 51 227			2	Nut	Mutter	5

61. Ch. -L5004733.
62. Ch. L5004734-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-E04 Air cleaner / Luftrenare

B212

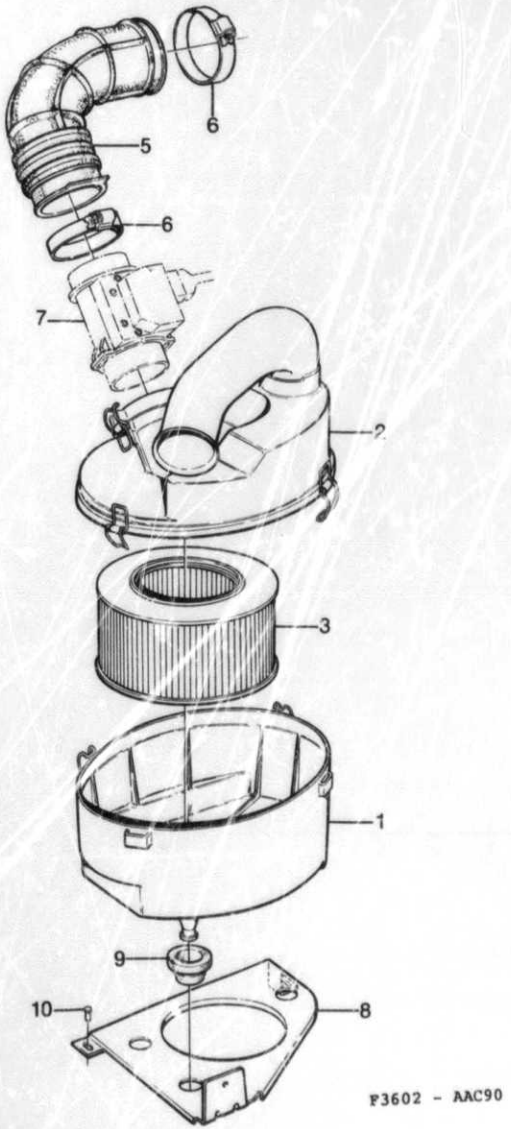

0690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 23 404			1	Air cleaner housing	Luftrenarhus	6
0020	2	40 23 412			1	Air cleaner housing	Luftrenarhus	6
0030	3	40 23 420			1	Air filter	Luftfilter	1
0050	5	40 23 438			1	Hose	Slang	4
0060	6	79 70 155			2	Hose clamp	Slangklamma	5
0070	7			See page 2-075, 1-F04	1	Mass air flow sensor	Luftmassamätare	
0080	8	40 23 396			1	Bracket	Fäste	5
0090	9	75 12 593			3	Rubber bushing	Gummibussning	5
0100	10	79 72 490			3	Rivet	Nit	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-E06

Fuel pump carburettor engine

Bränslepump förgasarmotor

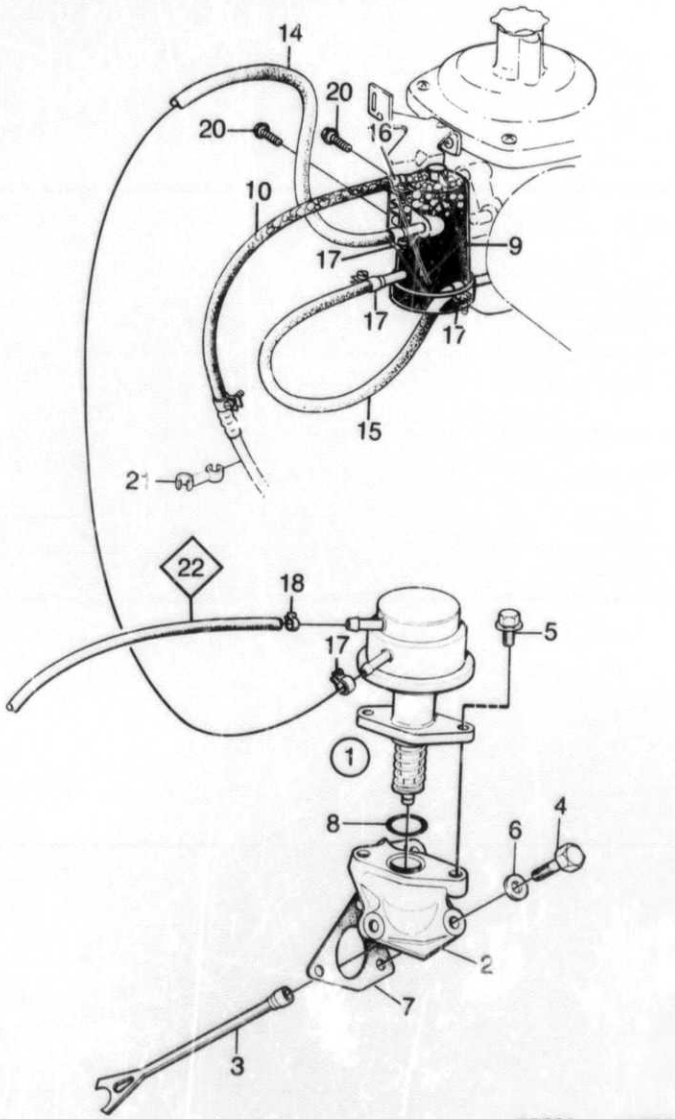

F3601 - AAC90

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0040	1	75 22 733			1	Fuel pump	Bränslepump	2
0100	2	93 06 705			1	Intermediate section	Mellanstycke	6
0110	3	93 12 927			1	Push rod	Tryckstång	5
0120	4	91 66 331		(8082968)	3	Screw	Skruv	5
0130	5	81 25 163			2	Screw	Skruv	5
0140	6	91 66 372		(8029985)	3	Washer	Bricka	5
0152	7	75 66 458			1	Gasket	Packning	2
0160	8	80 46 617			1	Seal	Tätning	3
0190	9	75 86 795			1	Separator	Avskiljare	6
0250	10	93 63 284			1	Hose	Slang	4
0270	14	75 04 160			1	Fuel hose	Bränsleslang	4
0310	15	*75 04 111*		NLS	1	Hose	Slang	4
0340	16	83 59 275		-1990	2	Hose clamp	Slangklamma	5
0350	16	79 68 308		1991-	2	Hose clamp	Slangklamma	5
0355				ALT TO 8975237				
0360	17	75 03 758			4	Hose clamp	Slangklamma	5
0380	18	79 68 308			1	Hose clamp	Slangklamma	5
0390	20	75 81 333			2	Screw	Skruv	5
0400	21	93 45 257			1	Clip	Clips	5
0410	22			See page 2-057, 1-E10		Hose	Slang	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Fuel system

1-E08 Filler pipe Hose

Bränslesystem

Påfyllningsrör
Slang

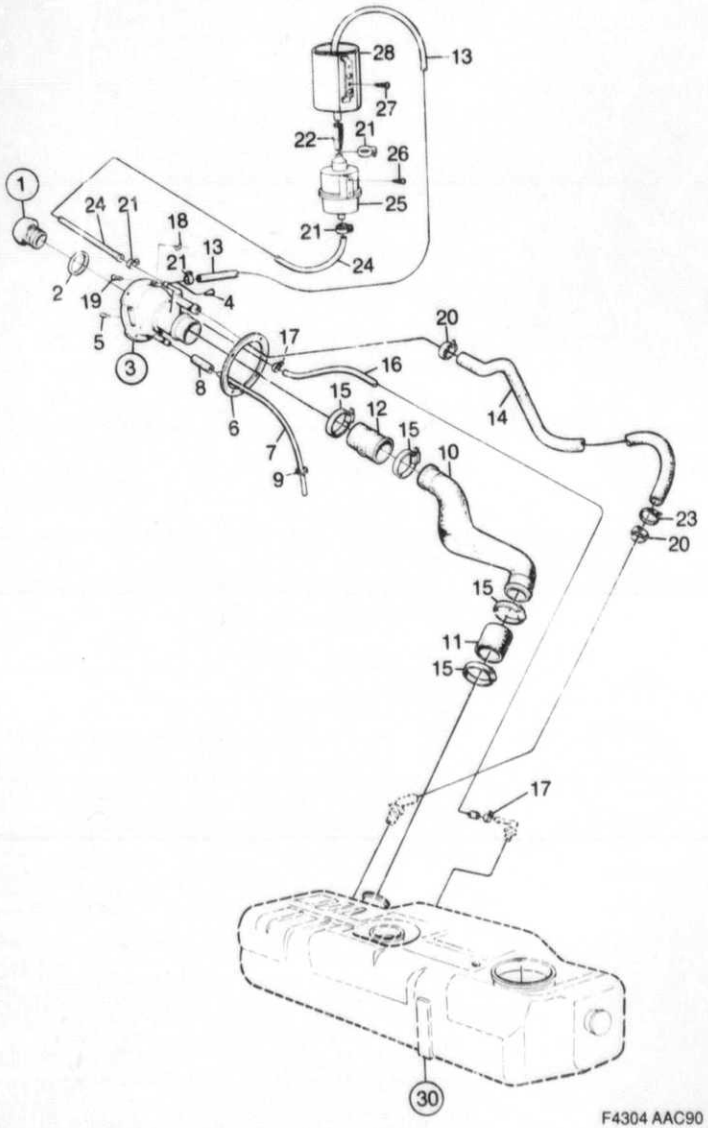

F4304 AAC90

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	*89 82 209*		NLS - USE 4391058	1	Filler cap	Tanklock	2
0030	2	75 11 751			1	.Gasket	.Packning	4
0040	3	75 30 553		5)	1	Filler pipe	Påfyllningsrör	5
0050	3	93 35 118		4)	1	Filler pipe	Påfyllningsrör	5
0060	4	75 36 840		ELCD	1	.Plastic plug	.Plastplugg	5
0070	5	83 15 475			2	.Stop	.Stopp	5
0080	6	93 49 838			1	.Gasket	.Packning	4
0090	7	83 23 941			1	Draining pipe	Dräneringsrör	6
0100	8	93 63 284		18) L=52 MM	1	Hose	Slang	4
0110	9	79 61 329			1	Grommet	Genomföring	5
0120	10	89 82 498		82)	1	Filler pipe	Påfyllningsrör	5
0125	10	41 58 069		83)	1	Filler pipe	Påfyllningsrör	5
0130	11	75 25 421			1	Hose	Slang	4
0140	12	75 25 439		51)	1	Hose	Slang	4
0145	12	75 25 421		52)	1	Hose	Slang	4
0150	13	75 28 920		SN	1	Hose	Slang	5
0160	13	75 28 912		CK	1	Hose	Slang	5
0162	13	*40 19 345*		CV NLS - USE 4023800	1	Cable	Ledning	5
0180	14	75 39 133			1	Hose	Slang	5
0190	15	79 70 130			4	Hose clamp	Slangklamma	5
0200	16	40 18 354			1	Hose	Slang	5
0210	17	83 32 587			2	Hose clamp	Slangklamma	5
0222	18	89 78 371			4	Nut	Mutter	5
0230	19	79 70 536			4	Screw	Skruv	6
0240	20	79 70 072			2	Hose clamp	Slangklamma	5
0250	21	79 68 308			4	Hose clamp	Slangklamma	5
0260	22	83 34 880			1	Hose	Slang	5
0270	23	79 71 872			1	Tensioning band	Spännband	5
0290	24	75 39 976		CK	1	Hose	Slang	5
0300	24	93 63 243		SN	1	Hose	Slang	5
0310	25	93 18 361			1	Valve	Ventil	5
0321	26	79 22 347		1990	2	Screw	Skruv	5
0322	26	*79 77 416*		1991- NLS - USE 7922347	2	Screw	Skruv	5
0330	27	79 72 359			2	Screw	Skruv	5
0340	28	83 33 007			1	Protecting cap	Skyddskåpa	5
0350	30					SEE SECTION FUEL TANK	SE AVSNITT BRÄNSLETANK	
0360		93 62 781		L=10M	X	Hose	Slang	2

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
51. Ch. --L3003531, --L5000619, --L7009220.
52. Ch. L3003532--, L5000620--, L7009221--.
92. Ch. --M5001203, --M7029123.
83. Ch M5001204--, M7029124--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-J04
Complete sets	1-J10

Fuel system

1-E10 Fuel tank carburettor engine

Bränslesystem

Bränsletank förgasarmotor

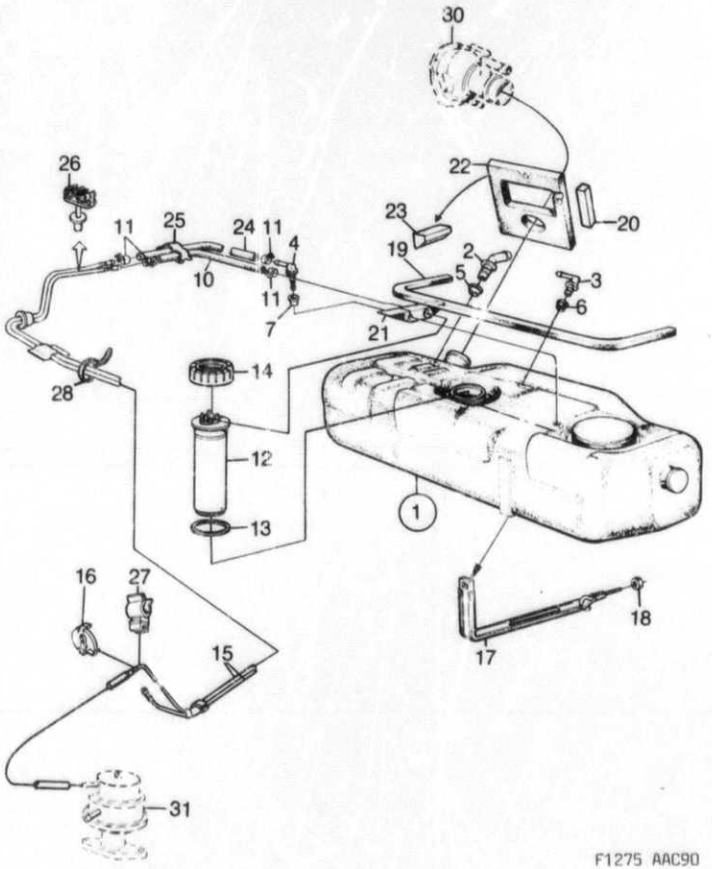

F1275 AAC90

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	89 82 159			1	Tank	Tank	6
0040	2	93 29 491			1	.Nipple	.Nippel	4
0050	3	93 28 857			1	.Connector	.Anslutning	4
0070	4	93 78 357			1	.Nipple	.Nippel	4
0080	5	93 24 021			1	.Bushing	.Bussning	5
0090	6	83 25 656			1	.Bushing	.Bussning	4
0110	7	93 24 021			1	.Bushing	.Bussning	5
0120	10	93 63 250		11), L=520 MM	1	Hose	Slang	5
0130	11	79 68 308			4	Hose clamp	Slangklamma	5
0140	12	93 61 957			1	Fuel transmitter	Bränslegivare	3
0160	13	93 92 689			1	Gasket	Packning	3
0170	14	93 93 950			1	Nut	Mutter	4
0190	15	89 76 417			1	Fuel pipe	Bränsleledning	5
0200	16	83 28 346			1	Bracket	Hållare	6
0210	17	40 15 145			2	Tensioning band	Spännband	6
0220	18	91 66 406		(8074288)	2	Nut	Mutter	5
0230	19	*40 18 347*		NLS - USE 4019824	1	Seal	Tätning	5
0240	20	*85 72 752*		NLS - USE 8585325	2	Bracket	Hållare	5
0250	21	*93 29 855*		NLS	2	Seal	Tätning	5
0260	22	40 15 608			1	Seal	Tätning	5
0270	23	*93 34 632*		NLS	1	Seal	Tätning	6
0280	24	93 63 359		L=715 MM	1	Hose	Slang	5
0290	25	93 49 945			2	Clip	Clips	5
0300	26	79 63 895			2	Tube clamp	Rörklamma	4
0310	27	75 11 256			1	Clamp	Klammer	5
0320	28	79 71 872			2	Tensioning band	Spännband	5
0330	30			See page 2-055, 1-E08		Filler pipe	Påfyllningsrör	
0340	31			See page 2-053, 1-E06		Fuel pump	Bränslepump	
0350		93 62 781		L=10M	X	Hose	Slang	2


11. Manufactured by 93 62 781. Tillverkad av 93 62 781.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F05
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

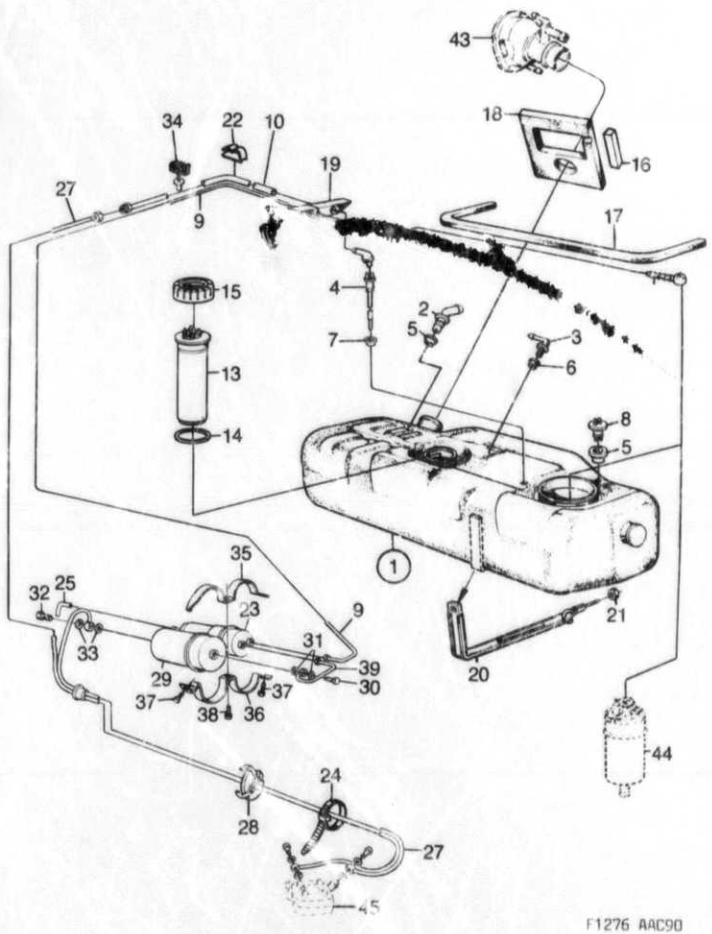

F1276 AAC90

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 118			1	Tank	Tank	6
0040	2	93 29 491			1	.Nipple	.Nippel	4
0050	3	93 28 857			1	.Connector	.Anslutning	4
0070	4	89 76 961			1	.Nipple	.Nippel	4
0080	5	93 24 021			2	.Bushing	.Bussning	5
0090	6	83 25 656			1	.Bushing	.Bussning	4
0100	7	93 24 021			1	.Bushing	.Bussning	5
0110	8			See page 3A-077, 2-D06		Cable harness	Ledningsnät	
0120	9	89 77 308			1	Fuel pipe	Bränsleledning	5
0130	10	89 76 359			1	Fuel pipe	Bränsleledning	5
0160	13	89 80 393			1	Fuel transmitter	Bränslegivare	3
0170	14	93 92 689			1	Gasket	Packning	3
0180	15	93 93 950			1	Nut	Mutter	4
0190	16	*85 72 752*		NLS - USE 8585325	2	Bracket	Hållare	5
0200	17	*40 18 347*		NLS - USE 4019824	1	Seal	Tätning	5
0210	18	40 15 608			1	Seal	Tätning	5
0220	19	89 76 375			1	Seal	Tätning	5
0230	20	40 15 145			2	Tensioning band	Spännband	6
0240	21	91 66 406		(8074288)	2	Nut	Mutter	5
0250	22	93 49 945			2	Clip	Clips	5
0260	23	75 25 181			1	Fuel accumulator	Bränsleackumulator	5
0270	24	79 71 872			3	Tensioning band	Spännband	5
0280	25	93 28 899			1	Protective pipe	Skyddsrör	6
0300	27	89 77 654			1	Fuel pipe	Bränsleledning	5
0310	28	83 28 346			1	Bracket	Hållare	6
0320	29	89 78 561			1	Fuel filter	Bränslefilter	2
0330	30	*83 22 927*		NLS - USE 4374211	1	Banjo bolt	Hålbult	5
0340	31	80 81 961			2	Seal	Tätning	5
0350	32	*83 19 915*		NLS - USE 4374203	1	Banjo bolt	Hålbult	5
0360	33	*89 81 979*		NLS - USE 4443883	2	Seal	Tätning	5
0370	34	79 63 895			2	Tube clamp	Rörklamma	4
0380	35	89 77 316			1	Tensioning band	Spännband	5
0390	36	89 77 324			1	Tensioning band	Spännband	5
0405	37	79 23 014			2	Screw	Skruv	5
0410	38	79 75 774			1	Screw	Skruv	5
0420	39	89 77 290			1	Fuel pipe	Bränsleledning	5
0430	43			See page 2-055, 1-E08		Filler pipe	Påfyllningsrör	
0440	44			See page 2-063, 1-E16		Fuel pump	Bränslepump	
0450	45			See page 2-067, 1-E20		Volumeter	Mängdmätare	
0460		93 62 781		L=10M	X	Hose	Slang	2

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Fuel system

1-E14 Fuel tank B202 and B212

Bränslesystem

Bränsletank B202 och B212

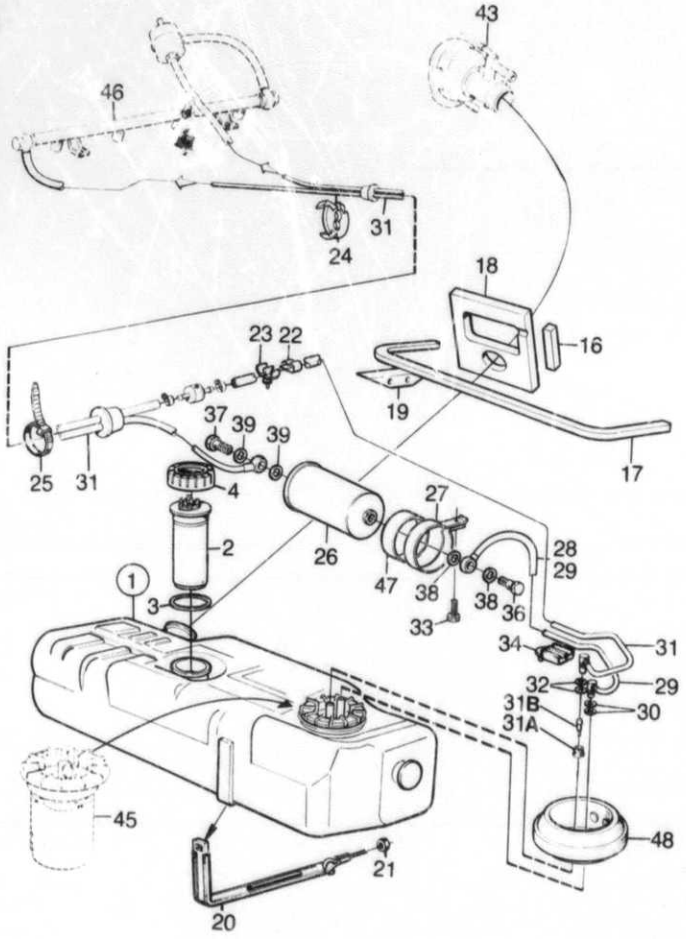

F4303 AAC90

0807	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 126			1	Tank	Tank	6
0020	2	89 80 393			1	Fuel transmitter	Bränslegivare	3
0030	3	93 92 689			1	Gasket	Packning	3
0040	4	93 93 950			1	Nut	Mutter	4
0050	16	*85 72 752*		NLS - USE 8585325	2	Bracket	Hållare	5
0060	17	40 19 824			1	Seal	Tätning	5
0070	18	40 15 608			1	Seal	Tätning	5
0080	19	*93 29 855*		NLS	1	Seal	Tätning	5
0090	20	40 15 145			2	Tensioning band	Spännband	6
0100	21	80 74 288		-1992	2	Nut	Mutter	5
0102	21	91 66 406		1993-	2	Nut	Mutter	5
0110	22	93 49 945			2	Clip	Clips	5
0120	23	79 63 895			2	Tube clamp	Rörklamma	4
0130	24	83 28 346			1	Bracket	Hållare	6
0140	25	79 71 872			2	Tensioning band	Spännband	5
0150	26	*93 33 790*		-1991 NLS - USE 4163853	1	Fuel filter	Bränslefilter	2
0160	26	*89 78 405*		22), -1991 NLS - USE 4163853	1	Fuel filter	Bränslefilter	2
0165	26	41 63 853		1992-	1	Fuel filter	Bränslefilter	2
0170	27	75 26 650			1	Bracket	Fäste	6
0180	29	40 15 715		63)	1	Fuel pipe	Bränsleledning	5
0182	29	41 61 741		64)	1	Fuel pipe	Bränsleledning	5
0210	30	79 74 546			2	▲O-ring	▲O-ring	2
0220	31	40 15 731		17),SE,EU,CA	1	Fuel pipe	Bränsleledning	5
0230	31	40 15 723			1	Fuel pipe	Bränsleledning	5
0240	31A	89 77 779			1	▲Non-return valve	▲Backventil	6
0250	31B	89 77 761			1	▲Valve peg	▲Ventilkägla	6
0260	32	79 74 546			2	▲O-ring	▲O-ring	2
0270	33	79 23 014			1	Screw	Skruv	5
0280	34	*93 82 870*		NLS - USE 8978827	3	Clamp	Klamma	5
0290	36	*83 22 927*		-1991 NLS - USE 4374211	1	Banjo bolt	Hålbult	5
0292	36	43 74 211		1992-	1	Banjo bolt	Hålbult	5
0300	37	*83 19 915*		-1991 NLS - USE 4374203	1	Banjo bolt	Hålbult	5
0302	37	43 74 203		1992-	1	Banjo bolt	Hålbult	5
0310	38	89 81 961		121)	2	Seal	Tätning	5
0315	38	41 61 162		122)	2	Seal	Tätning	5
0320	39	*89 81 979*		121) NLS - USE 4443883	2	Seal	Tätning	5
0325	39	41 59 265		122)	2	Seal	Tätning	5
0330	43			See page 2-055, 1-E08		Filler pipe	Påfyllningsrör	
0340	45			See page 2-065, 1-E18		Fuel pump	Bränslepump	
0350	46			See page 2-071, 1-E24		Tube	Rör	
0360	47	89 77 811		22,109)	1	Spacer	Mellanlägg	6
0370	48	40 20 673		1990	1	Seal	Tätning	3
0372	48	41 60 305		1991-	1	Seal	Tätning	3
0380								
0390		93 62 781		L=10M	X	Hose	Slang	2


17. For I with catalytic converter. För I med katalytisk reaktor.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.
63. Ch. --L3007856, --L5003011, --L7021650.
64. Ch. L3007857--, L5003012--, L7021651--.
109. Ch.--N2001190, --N7001363.
121. Ch --N2017745.
122. Ch N2017746--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

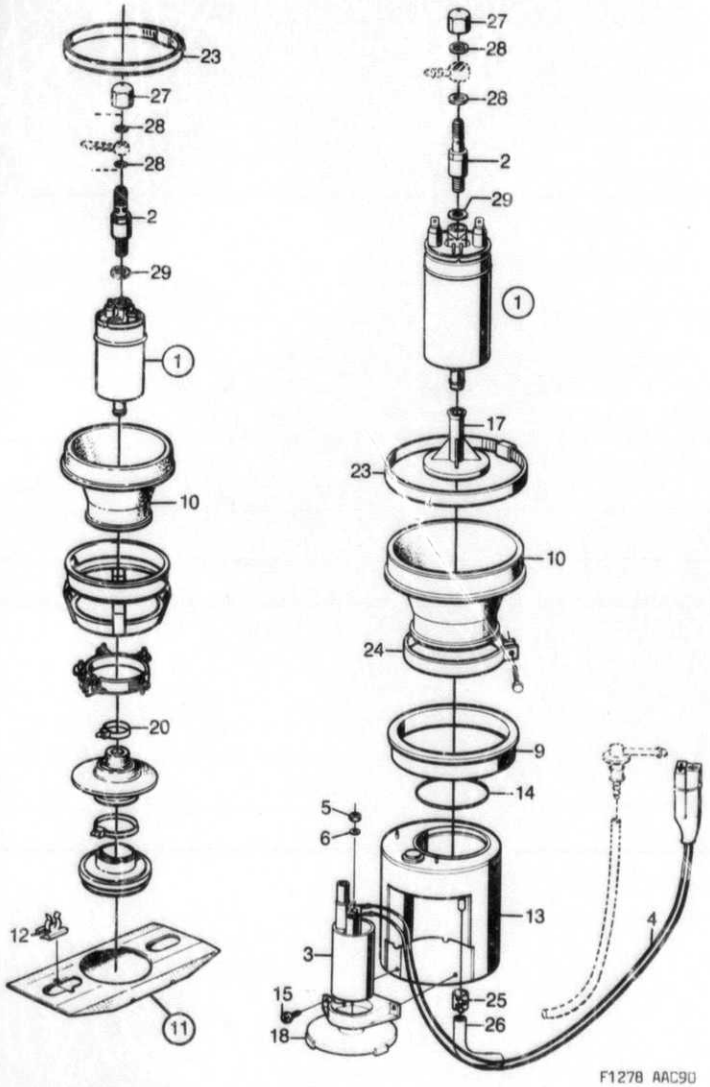

F1278 AAC90

0810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	75 36 923			1	Fuel pump	Bränslepump	5
0030	2	93 37 510			1	.Valve	.Ventil	3
0050	3	75 26 163		4),US, CA, AU, JA, ME, FE	1	Fuel pump	Bränslepump	5
0051								
0060	4	93 63 540			1	.Cable harness	.Ledningsnät	6
0080	5	79 73 993			2	.Nut	.Mutter	5
0100	6	79 10 516			2	.Washer	.Bricka	5
0140	9	93 49 614			1	Support ring	Stödring	6
0150	10	93 19 971			1	Seal	Tätning	5
0160	11	93 62 153			1	Reservoir	Behållare	5
0170	12	93 24 211			1	.Clip	.Clips	5
0185	13	75 13 666			1	Reservoir	Behållare	5
0190	14	93 49 655			1	O-ring	O-ring	2
0200	15	79 73 613			2	Screw	Skruv	5
0220	17	93 65 958			1	Strainer	Sil	4
0230	18	93 86 491			1	Strainer	Sil	4
0255	20	79 71 864			1	Tensioning band	Spännband	5
0290	23	93 31 554			1	Hose clamp	Slangklamma	5
0300	24	93 22 660			1	Clamp	Klämma	5
0330	25	79 77 879			1	Hose clamp	Slangklamma	5
0350	26	89 75 484			1	Return pipe	Returrör	5
0370	27	93 61 668			1	Cap nut	Kupolmutter	5
0395	28	*89 81 979*		NLS - USE 4443683	2	Seal	Tätning	5
0400	29	93 37 528			1	Washer	Bricka	5

4. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-E18

Fuel pump
B202 and B212

Bränslepump
B202 och B212

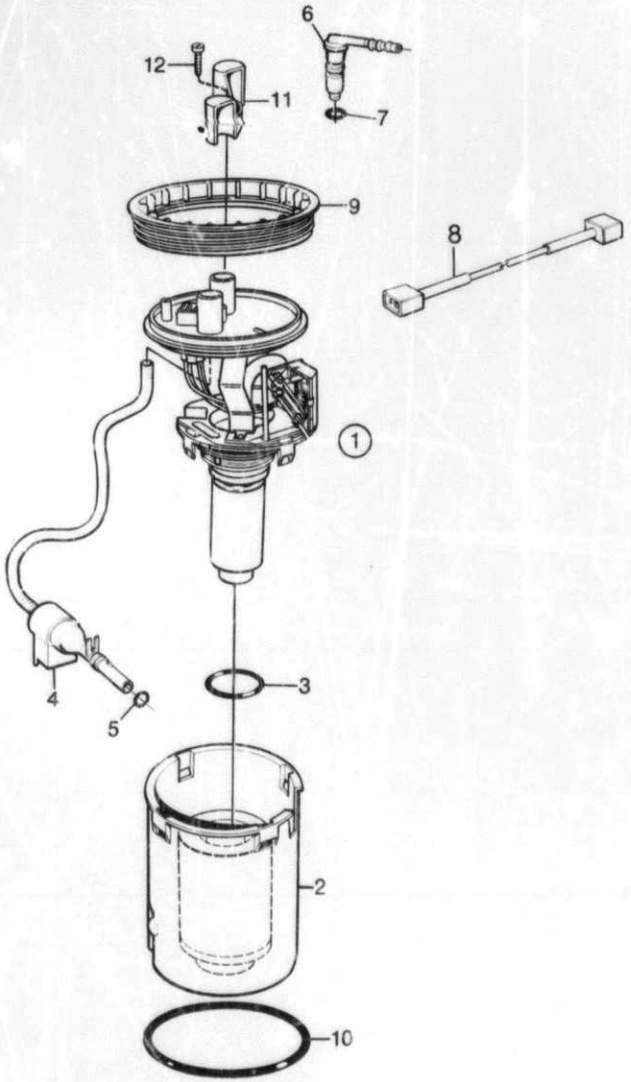

F4710 AAC90

0830	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 23 057*		63),I NLS - USE 9321621	1	Fuel pump	Bränslepump	5
0020	1	*40 23 214*		63),TURBO NLS - USE 9321621	1	Fuel pump	Bränslepump	5
0030	1	93 21 621		64)	1	Fuel pump	Bränslepump	5
0040	2	89 80 021		63)	1	.Reservoir	.Behållare	5
0050	3	75 91 902		63)	1	..O-ring	..O-ring	2
0060	4	89 80 047		63)	1	.Ejector unit	.Ejektorenhet	5
0070	5	93 94 602			1	..O-ring	..O-ring	2
0080	6	41 61 766		64)	1	.Non-return valve	.Backventil	3
0090	7	79 74 546		64)	1	.O-ring	.O-ring	2
0100	8	43 93 484		PART OF 9321621	1	.Connection	.Skarv	5
0110	9	41 56 550			1	Cover	Lock	6
0120	10	41 56 469		1990	1	Seal	Tätning	6
0130	10	41 60 511		1991-	1	Seal	Tätning	6
0140	11	93 94 626		125)	1	Lock brace	Låsbygel	5
0150	11	93 94 628		126)	1	Lock brace	Låsbygel	5
0160	12	79 71 344			1	Screw	Skruv	5

63. Ch. --L3007856, --L5003011, --L7021650.
64. Ch. L3007857--, L5003012--, L7021651--.
125. Ch. --P2008817.
126. Ch. P2008818--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-E20

Mixing regulator B201 I

Blandningsregulator B201 I

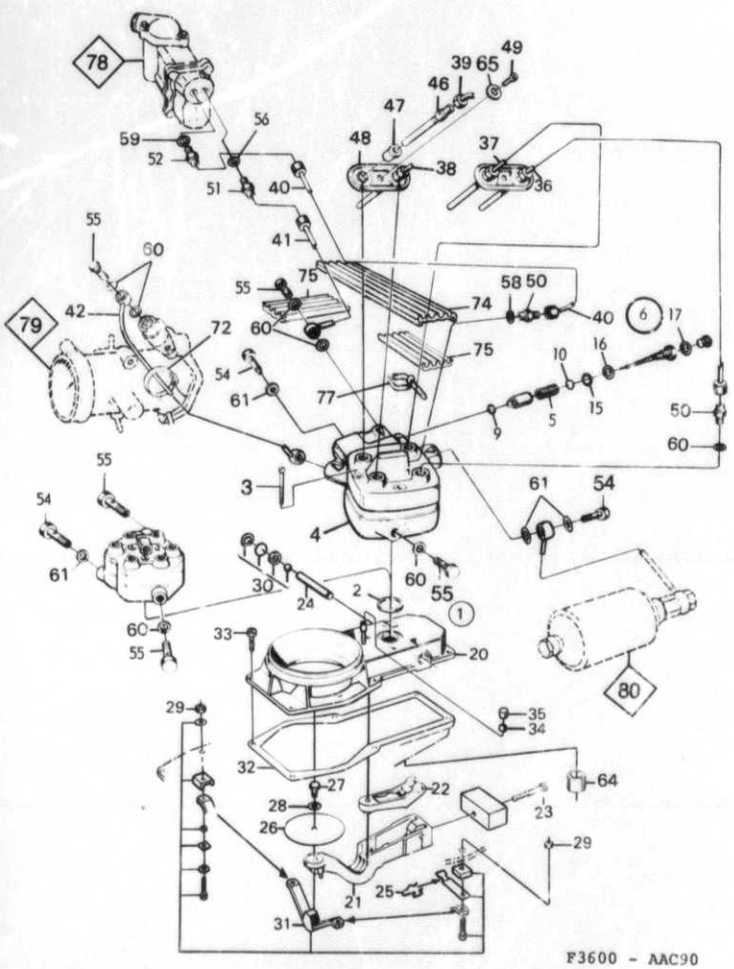

F3600 - AAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*89 81 557*		1,5) NLS - USE 8981565, 8981573	1	Volumeter	Mängdmätare	5
0035	1	*93 44 896*		4) NLS - USE 7525231, 8322360, 8981987, 9345778, 9345786	1	Volumeter	Mängdmätare	
0040	2	93 15 151			1	. Seal	. Tätning	4
0060	3	83 22 380			3	. Screw	. Skruv	5
0085	4	89 81 565		5)	1	. Volumeter	. Mängdmätare	4
0090	4	93 45 778		4,7)	1	. Volumeter	. Mängdmätare	4
0110	5	93 15 185			1	.. Spring	.. Fjäder	5
0130	6	93 15 177			1	.. Valve	.. Ventil	3
0140	9	75 11 413			1	... O-ring	... O-ring	2
0150	10	93 15 193		0,1 MM	X	... Washer	... Bricka	3
0160	10	93 15 201		0,15 MM	X	... Washer	... Bricka	3
0170	10	93 15 219		0,3 MM	X	... Washer	... Bricka	3
0180	10	93 15 227		0,4 MM	X	... Washer	... Bricka	3
0190	10	93 15 235		0,5 MM	X	... Washer	... Bricka	3
0200	15	93 15 243			X	... O-ring	... O-ring	3
0210	16	75 11 421			1	... Ring	... Ring	3
0220	17	*83 24 006*		NLS - USE 8981987	1	... Seal	... Tätning	5
0235	20	89 81 573		5)	1	. Volumeter	. Mängdmätare	5
0240	20	93 45 786		4)	1	. Volumeter	. Mängdmätare	5
0260	21	*93 02 951*		NLS	1	.. Lever	.. Hävarm	6
0270	22	83 38 394			1	.. Arm	.. Arm	6
0280	23	*83 38 402*		NLS	1	.. Screw	.. Skruv	
0290	24	*83 22 539*		NLS	1	.. Pin	.. Pinne	5
0300	25	83 38 410			1	.. Clamp	.. Klammer	5
0310	26	83 22 554		5)	1	.. Valve disc	.. Ventilskiva	6
0320	26	93 15 292		4)	1	.. Valve disc	.. Ventilskiva	6
0330	27	83 38 436			1	.. Screw	.. Skruv	5
0340	28	83 22 570			1	.. Washer	.. Bricka	5
0350	29	*83 22 588*		NLS	2	.. Nut	.. Mutter	5
0360	30	83 22 604			1	.. Bearing bushing	.. Lagerbussning	6
0370	31	83 22 612			1	.. Brace	.. Bygel	6
0380	32	83 23 024			1	Gasket	Packning	3
0390	33	80 59 594			6	Screw	Skruv	5
0400	34	93 48 913		CA	1	Ball	Kula	5
0410	35	83 33 700		6)	1	Plug	Plugg	5
0411						Red	Röd	
0420	35	83 34 187		6), ME, AU	1	Plug	Plugg	5
0430						Black	Svart	
0450	35	93 37 734		4,6)	1	Plug	Plugg	5
0451						Black	Svart	
0480	36	75 35 040			1	Injection pipe	Insprutningsledning	3
0500	37	75 35 057			1	Injection pipe	Insprutningsledning	5
0520	38	75 35 065			1	Injection pipe	Insprutningsledning	5
0540	39	75 35 073			1	Injection pipe	Insprutningsledning	5
0550	40	75 35 180			1	Fuel pipe	Bränsleledning	5
0600	40	75 35 214		15)	1	Fuel pipe	Bränsleledning	5
0610	41			See page 2-109, 1-G14	1	Fuel pipe	Bränsleledning	
0630	41	75 35 198			1	Fuel pipe	Bränsleledning	5
0670	42	75 35 172			1	Fuel pipe	Bränsleledning	5
0680	42	75 35 206		14)	1	Fuel pipe	Bränsleledning	5
0685	46	93 10 152		72)	4	Injectionsvalve	Insprutningsventil	2

1. Not as separate spare part. Ej som separat reservdel.
4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
6. See Service Manual. Se Verkstadshandbok.
7. Also available as exchange unit. Finns även som utbytesenhet.
14. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
15. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
72. Engine –L047570.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
3	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-E22 Mixing regulator B201 I

Blandningsregulator B201 I

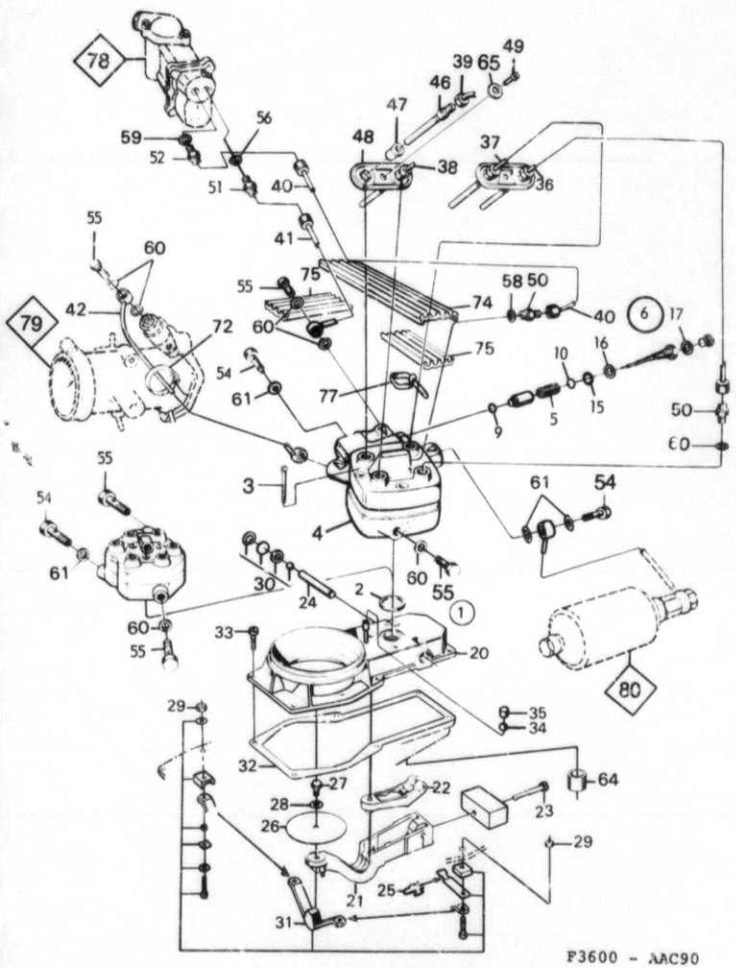

0690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0695	46	78 56 354		73)	4	Injectionsvalve	Insprutningsventil	2
0700	47	83 57 709			1	.Bushing	.Bussning	2
0710	48	83 57 691			2	Bracket	Fäste	6
0720	49	80 98 048			2	Screw	Skruv	5
0730	50	75 25 231			5	Nipple	Nippel	5
0740	51	75 25 223			1	Nipple	Nippel	3
0750	52	75 25 249			1	Nipple	Nippel	3
0760	54	*83 19 915*		NLS - USE 4374203	3	Banjo bolt	Hålbult	5
0770	55	83 20 319		US	4	Banjo bolt	Hålbult	5
0780	55	83 20 319		EU	3	Banjo bolt	Hålbult	5
0790	56	83 24 022			1	Gasket	Packning	2
0800	58	*83 24 006*		NLS - USE 8981987	1	Seal	Tätning	5
0810	59	83 24 030			1	Gasket	Packning	3
0835	60	89 81 987			12	Seal	Tätning	5
0875	61	*89 81 979*		NLS - USE 4443883	6	Seal	Tätning	5
0930	64	93 00 525			1	Plug	Plugg	5
0940	65	91 66 372		(8029985)	2	Washer	Bricka	5
0960	74	92 41 793			1	Clip	Clips	5
0970	75	75 35 032			2	Tube clamp	Rörklamma	5
0980	77	79 71 864			1	Tensioning band	Spännband	5
0985	78			See page 2-141, 1-H22		Warming regulator	Varmkörningsregulator	
0996	79			See page 2-085, 1-F14		Throttle body	Spjällhus	
0987	80			See page 2-059, 1-E12		Fuel filter	Bränslefilter	
0990								
1000		93 21 662		See page 2-157, 1-I14	X	Injectionsvalve	Insprutningsvalve	2


73. Engine L047571-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

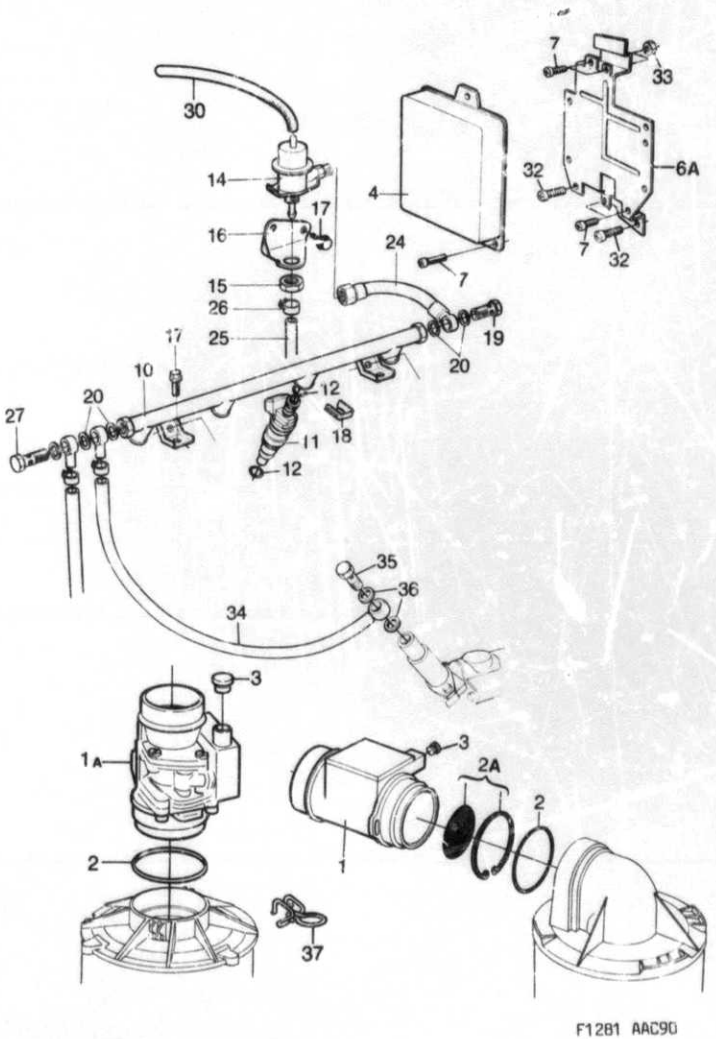

F1281 AAC90

0860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 38 655		4,7)	1	Mass air flow sensor	Luftmassamätare	4
0020	1	89 78 280		5)	1	Mass air flow sensor	Luftmassamätare	4
0030	1A	89 77 621		22)	1	Mass air flow sensor	Luftmassamätare	4
0040	2A	75 35 446			1	Service kit	Servicesats	5
0050	2	79 74 306			1	O-ring	O-ring	3
0060	2	79 78 729		22)	1	O-ring	O-ring	2
0070	3	75 25 710			1	Plug	Plugg	5
0080	3	75 25 702		22)	1	Plug	Plugg	5
0090								
0100	4	74 87 119		5,7), TURBO	1	Electronic unit	Elektronikenhet	3
0110	4	91 17 789		1990,5,7,22), TURBO	1	Electronic unit	Elektronikenhet	3
0120	4	78 72 328		1991-,5,7,22), TURBO	1	Electronic unit	Elektronikenhet	3
0130	4	*91 19 454*		4,7,111), TURBO NLS - USE 4300083	1	Electronic unit	Elektronikenhet	3
0140	4	91 19 462		4,7,21,111), TURBO	1	Electronic unit	Elektronikenhet	3
0150	4	43 00 083		4,7,112), TURBO	1	Electronic unit	Elektronikenhet	3
0160	4	89 77 639		1990,4,7,22), TURBO	1	Electronic unit	Elektronikenhet	3
0170	4	*87 89 661*		1990,4,7,22), B202S NLS - USE 7872336	1	Electronic unit	Elektronikenhet	3
0180	4	78 72 336		1991-,4,7,22),TURBO, B202S	1	Electronic unit	Elektronikenhet	3
0190								
0200								
0210	4	91 14 703		5,7), B202I, M	1	Electronic unit	Elektronikenhet	3
0220	4	89 75 443		5,7), B202I, A	1	Electronic unit	Elektronikenhet	3
0230	4	91 19 447		4,7), B202I	1	Electronic unit	Elektronikenhet	3
0240	4	91 19 462		4,7,21), B202I	1	Electronic unit	Elektronikenhet	3
0250								
0260	6A	40 23 107			1	Bracket	Fäste	5
0270	6A	93 98 207		CV	1	Bracket	Fäste	5
0280	7	80 59 396		14)	3	Screw	Skruv	5
0290	7	79 77 283		16)	3	Screw	Skruv	5
0300	7	79 77 283		4)	4	Screw	Skruv	5
0310	7	79 77 283		22)	4	Screw	Skruv	5
0320	10	75 06 611			1	Tube	Rör	6
0330	11	74 87 010		TURBO	4	Injectionsvalve	Insprutningsventil	2
0340	11	74 85 022		1990,22)	4	Injectionsvalve	Insprutningsventil	2
0350	11	78 72 351		1991-,22)	4	Injectionsvalve	Insprutningsventil	2
0360	11	74 87 028		I	4	Injectionsvalve	Insprutningsventil	2
0370	12	75 61 210			9	O-ring	O-ring	2
0380								
0390	14	75 68 041			1	Regulator	Regulator	5
0400	14	74 85 030		22)	1	Regulator	Regulator	5
0410	14	91 65 911		22), 185HP(137KW)	1	Regulator	Regulator	5
0420	14	75 64 123		17)	1	Regulator	Regulator	5
0430	14	75 64 131		15)	1	Regulator	Regulator	5
0440	14	75 68 041		15), 185HP(137KW)	1	Regulator	Regulator	5
0450								
0460	15	81 51 177			1	Nut	Mutter	5
0470	16	74 85 964			1	Bracket	Konsol	5
0480	17	81 25 148			4	Screw	Skruv	5
0490	18	93 56 486			4	Clamp	Klammer	5
0500	19	81 23 895			1	Screw	Skruv	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
14. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
15. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
16. For I without catalytic converter. För I utan katalytisk reaktor.
17. For I with catalytic converter. För I med katalytisk reaktor.
21. Cars with electronic EGR. Bilar med elektronisk EGR.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.
111. Ch.-M2002859, -M7002781.
112. Ch.M2002860-, M7002782-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-K04
Complete sets	1-L10

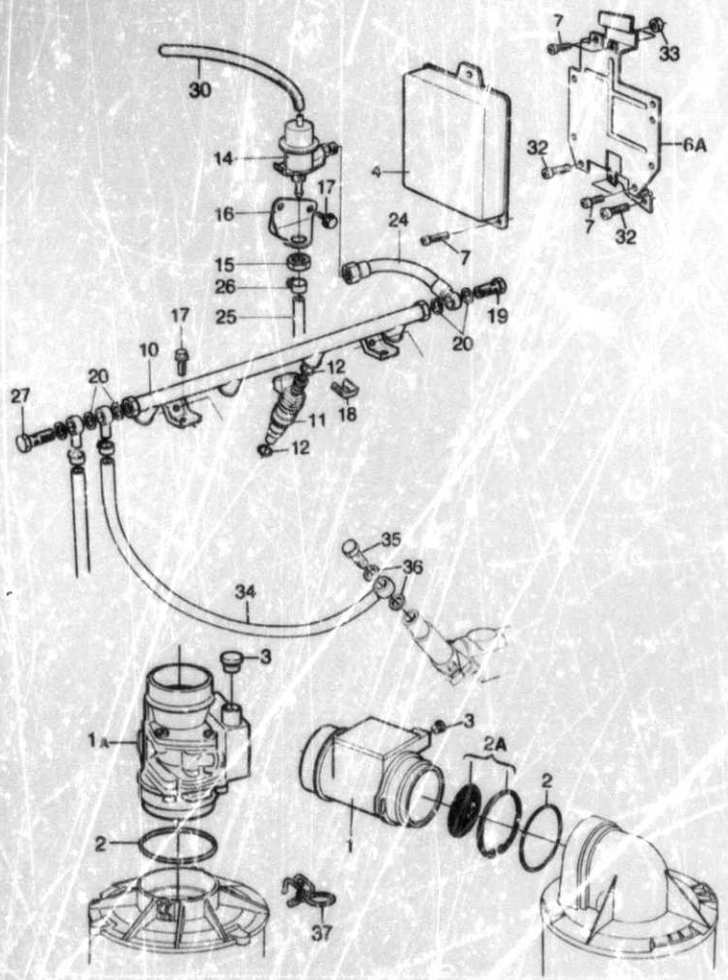

F1281 4AC90

0860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	20	*89 81 979*		NLS - USE 4443883	4	Seal	Tätning	5
0520	24	75 64 339			1	Hose	Slang	5
0530	25	75 11 702			1	Hose	Slang	5
0540	26	79 68 308			2	Hose clamp	Slangklamma	5
0550	27	*83 19 915*		NLS - USE 4374203	1	Banjo bolt	Hålbult	5
0560	30	91 36 243		17), L=565 MM	1	Vaccum hose	Vakuumslang	5
0570	32	79 22 818			2	Screw	Skruv	5
0580	32	79 22 891		LUCAS	2	Screw	Skruv	5
0590	33	79 73 365			2	Nut	Mutter	5
0600	34	89 81 342		17), SE, EU, CA	1	Fuel pipe	Bränsleledning	5
0610	35	83 20 319		17), SE, EU, CA	1	Banjo bolt	Hålbult	5
0620	36	89 81 987		17), SE, EU, CA	2	Seal	Tätning	5
0630	37	89 76 490			2	Clamp	Klämmer	6
0640								
0650		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

17. For I with catalytic converter. För I med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F04

Mass air flow sensor
B212

Luftmassamätare
B212

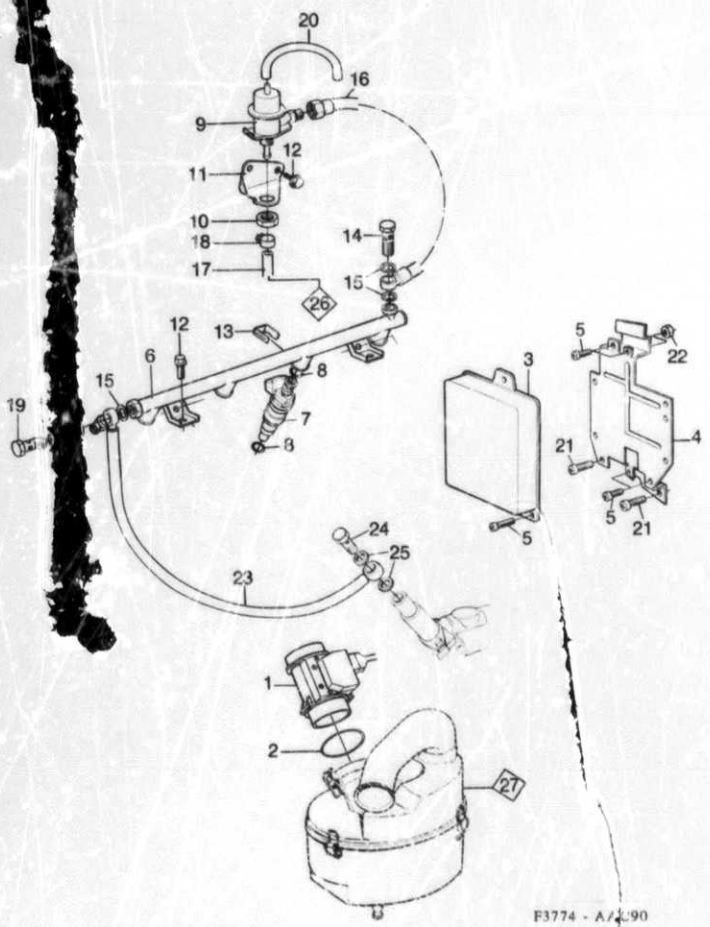

0870	Pos	Part No Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 13 838			1	Mass air flow sensor	Luftmassamätare	4
0050	2	41 56 295			1	O-ring	O-ring	3
0160	3	87 88 507		1991,4,7)	1	Electronic unit	Elektronikenhet	3
0162	3	91 28 117		1992-,4,7)	1	Electronic unit	Elektronikenhet	3
0180	4	40 23 107			1	Bracket	Fäste	5
0200	5	90 59 396		14)	3	Screw	Skruv	5
0210	5	79 77 283		16)	3	Screw	Skruv	5
0220	5	79 77 283		4)	4	Screw	Skruv	5
0240	6	88 50 936			1	Tube	Rör	6
0250	7	87 88 523			4	Injectionsvalve	Insprutningsventil	2
0280	8	75 61 210			9	O-ring	O-ring	2
0290	9	74 86 921			1	Regulator	Regulator	5
0330	10	81 51 177			1	Nut	Mutter	5
0350	11	88 59 951			1	Bracket	Konsol	5
0360	12	81 25 148			4	Screw	Skruv	5
0370	13	93 56 486			4	Clamp	Klammer	5
0380	14	81 23 895			1	Screw	Skruv	5
0390	15	*83 26 704*		NLS - USE 4443883	4	Seal	Tätning	5
0400	16	87 88 382			1	Hose	Slang	5
0410	17	75 13 989			1	Hose	Slang	5
0420	18	83 32 587			2	Hose clamp	Slangklamma	5
0430	19	*83 19 915*		NLS - USE 4374203	1	Banjo bolt	Hålbult	5
0440	20	*83 64 416*		NLS	1	Hose	Slang	2
0450	21	79 22 818			2	Screw	Skruv	5
0460	22	79 73 365			2	Nut	Mutter	5
0470	23	89 81 342		17), SE, EU, CA	1	Fuel pipe	Bränsleledning	5
0480	24	83 20 319		17), SE, EU, CA	1	Banjo bolt	Hålbult	5
0490	25	89 81 987		17), SE, EU, CA	2	Seal	Tätning	5
0500	26			See page 2-061, 1-E14		Hose	Slang	
0510	27			See page 2-051, 1-E04		Air cleaner housing	Luftrenarhus	

4. With catalytic converter. Med katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
14. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
16. For I without catalytic converter. För I utan katalytisk reaktor.
17. For I with catalytic converter. För I med katalytisk reaktor.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F06

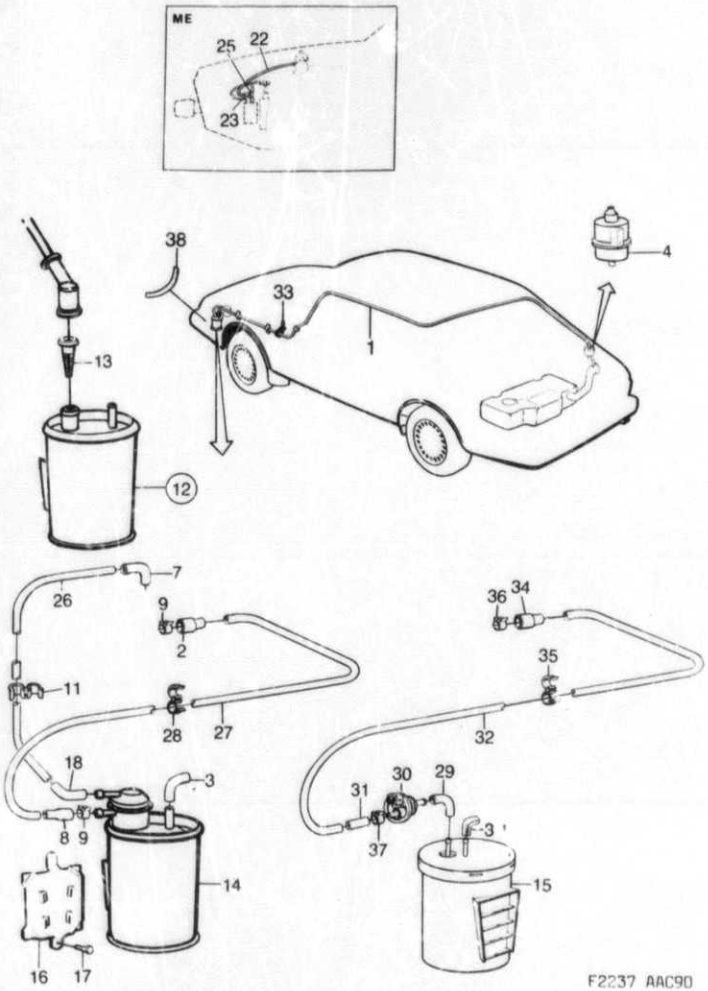

0900	Pos	Part No/Art nr	K S	Not-s/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	93 04 775			1	Hose	Slang	5
0025	1	40 23 800		CV	1	Hose	Slang	5
0040	2	89 82 100		B201	1	Hose	Slang	5
0055	3	*40 18 586*		NLS - USE 7539240	1	Hose	Slang	5
0060	4			See page 2-055, 1-E08		Valve	Ventil	
0090	7	*75 33 383*		NLS - USE 7539240	1	Hose	Slang	5
0105	8	89 82 100		B201	1	Hose	Slang	5
0110	9	79 77 879		B201	2	Hose clamp	Slangklamma	5
0118	11	89 81 649		B201 I	1	Clamp	Klammer	5
0120	12	83 23 008		C, ME	1	Carbon filter	Kolfilter	3
0130	13	*83 14 494*		NLS	1	▪Hose	▪Slang	
0150	14	75 32 054			1	Carbon filter	Kolfilter	3
0155	15	75 39 216			1	Carbon filter	Kolfilter	3
0160	16	93 00 302			1	Bracket	Fäste	5
0170	17	79 61 691		1990	2	Rivet	Nit	5
0175	17	98 49 514		1991-	2	Rivet	Nit	5
0185	18	*75 33 383*		B201 NLS - USE 7539240	1	Hose	Slang	5
0220	22	75 34 480		ME	1	Hose	Slang	5
0225	23	83 32 520		ME	1	▪Manifold	▪Grenrör	4
0230	24	75 25 389		ME	1	Hose	Slang	5
0295	26	89 81 599		B201	1	Hose	Slang	5
0306	27	89 81 870		B201	1	Hose	Slang	5
0312	28	75 39 984			1	Clamp	Klammer	5
0345	29	*40 18 586*		B202 NLS - USE 7539240	1	Hose	Slang	5
0360	30	75 39 257		B202	1	Tank ventilation valve	Tankurluftningsventil	5
0390	31	75 39 349		B202	1	Hose	Slang	5
0405	32	89 81 888		B202	1	Tube	Rör	4
0420	33	79 71 864			1	Tensioning band	Spännband	5
0445	34	89 82 100		B202	1	Hose	Slang	5
0460	35	75 39 984		B202	1	Clamp	Klammer	5
0470	36	79 77 879		B202	1	Hose clamp	Slangklamma	5
0480	37	79 73 522		B202	1	Hose clamp	Slangklamma	5
0482	38	95 19 737			1	Protecting moulding	Skyddslist	5
0484								
1000		93 62 781		L=10 M	X	Hose	Slang	2

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F08

Inlet manifold
B201 C

Inloppsrör
B201 C

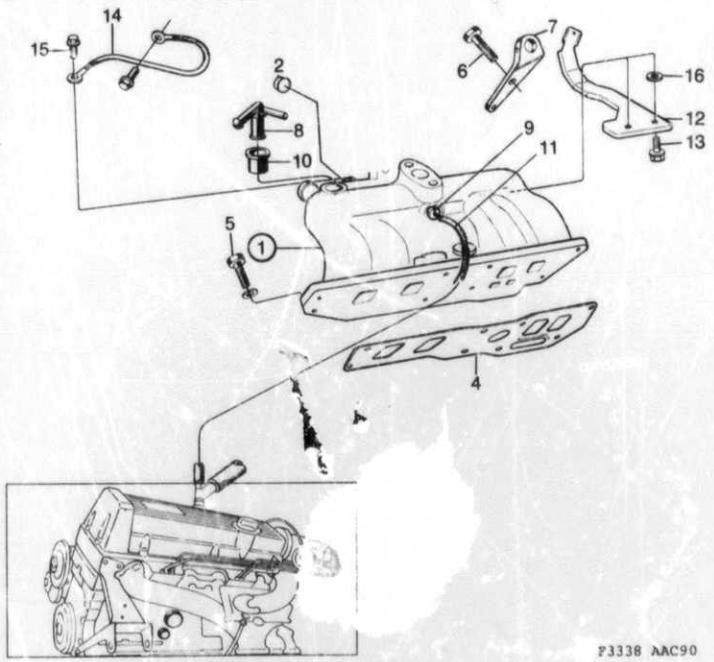

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 81 440			1	Intake manifold	Inloppsrör	6
0020	2	81 23 168			1	▪ Plug	▪ Plugg	4
0030	3	93 59 480			4	▪ Stud	▪ Pinnskruv	5
0040	4	75 69 346			1	Gasket	Packning	2
0050	5	81 25 197			6	Screw	Skruv	5
0060	6	81 25 205			2	Screw	Skruv	5
0070	7	75 61 509			1	Lifting eye	Lyftögla	5
0080	8	93 12 802			1	Nipple	Nippel	4
0090	9	83 08 850			1	Nipple	Nippel	5
0100	10	75 15 208			1	Bushing	Bussning	5
0110	11	91 36 243		L=215 MM	1	Vaccum hose	Vakuumslang	5
0120	12	75 64 057			1	Bracket	Konsol	5
0130	13	81 25 007			2	Screw	Skruv	5
0140	14	75 64 859			1	Cable	Ledning	6
0150	15	80 97 859			1	Screw	Skruv	5
0160	16	75 85 581			2	Spacer	Distans	5
0170								
0180		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F10

Inlet manifold / *Inloppsrör*

B201 I / *B201 I*

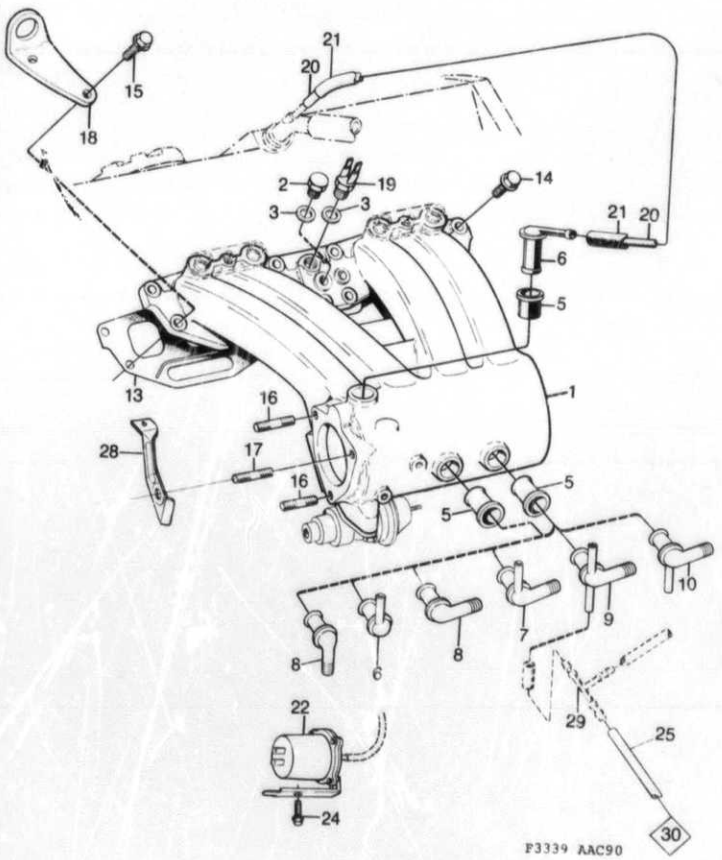

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 62 242			1	Intake manifold	Inloppsrör	6
0020	2	*81 23 721*		A NLS - USE 7563042	1	Plug	Propp	5
0030	3	*83 26 712*		NLS - USE 4161162	1	Seal	Tätning	5
0040	5	75 15 208			3	Bushing	Bussning	5
0050	6	83 59 937			2	Nipple	Nippel	4
0060	7	93 12 802			1	Nipple	Nippel	4
0070	8	83 57 543			1	Nipple	Nippel	4
0080	9	75 22 477			1	Nipple	Nippel	4
0090	10	74 87 556			1	Nipple	Nippel	4
0100	13	75 82 315			1	Gasket	Packning	2
0110	14	81 25 197			6	Screw	Skruv	5
0120	15	81 25 205			2	Screw	Skruv	5
0130	15	*80 82 976*		AC NLS - USE 8083933	2	Screw	Skruv	5
0140	16	80 05 928			2	Stud	Pinnskruv	5
0150	17	80 05 910			1	Stud	Pinnskruv	5
0160	18	75 61 509			1	Lifting eye	Lyftögla	5
0170	19	75 06 322		4), EU	1	Thermo contact	Termokontakt	3
0180	20	91 36 243		L=410 MM	1	Vaccum hose	Vakuumslang	5
0190	21	75 14 375			1	Hose	Slang	4
0200	22	40 19 352		4)	1	Pressure impulse contact	Tryckimpulskontakt	5
0210	22	89 79 189		5)	1	Pressure impulse contact	Tryckimpulskontakt	5
0220	24	79 75 196			1	Screw	Skruv	5
0230	25	91 36 243		L=500 MM	1	Vaccum hose	Vakuumslang	5
0240	28	75 80 095			1	Bracket	Fäste	5
0250	29			See page 2-151, 1-I08		Pipe	Rör	
0260	30			See page 2-141, 1-H22		Thermostat housing	Termostathus	
0270								
0280		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F12

Inlet manifold
B202 and B212

Inloppsrör
B202 och B212

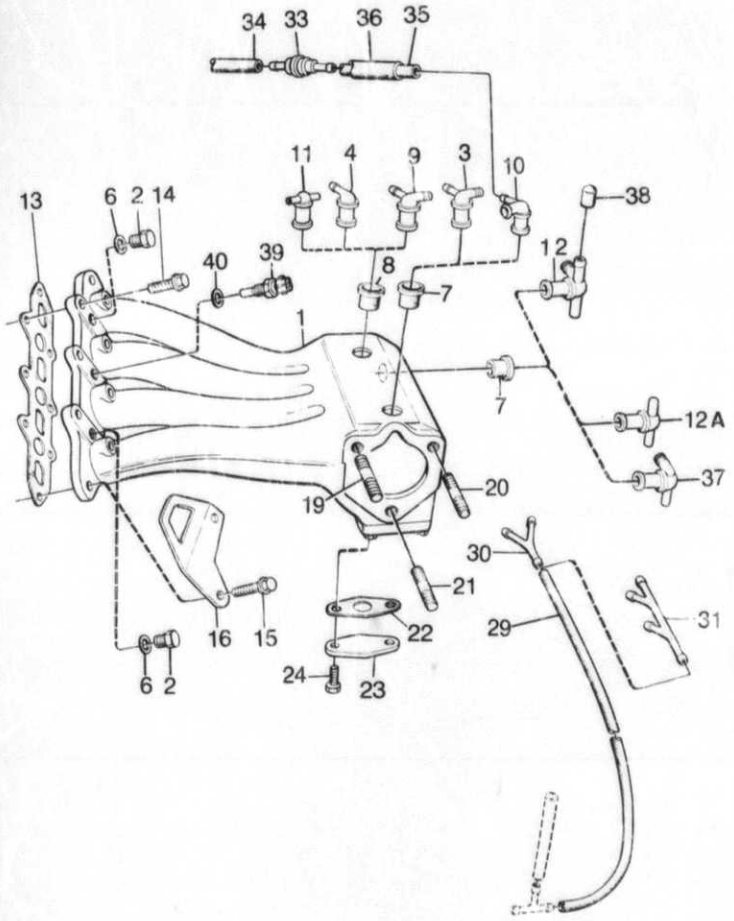

F3340 AAC90

1075	Pos	Par No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 87 553		B202	1	Intake manifold	Inloppsrör	6
0020	1	88 58 219		B212	1	Intake manifold	Inloppsrör	6
0030	2	*81 23 721*		NLS - USE 7563042	2	Plug	Propp	5
0040	3	93 12 802		B212	1	Nipple	Nippel	4
0050	4	83 59 937		B212	1	Nipple	Nippel	4
0060	6	*83 26 712*		NLS - USE 4161162	2	Seal	Tätning	5
0070	7	75 15 208			2	Bushing	Bussning	5
0080	8	75 61 228		B202	1	Bushing	Bussning	5
0090	8	75 15 208		4), B202	1	Bushing	Bussning	5
0100	8	75 15 208		B212	1	Bushing	Bussning	5
0110	9	93 12 802		B202	1	Nipple	Nippel	4
0120	10	75 23 038		B202	1	Nipple	Nippel	4
0130	11	91 16 088		B202S	1	Nipple	Nippel	4
0140	12	75 22 477			1	Nipple	Nippel	4
0150	12A	91 16 088			1	Nipple	Nippel	4
0160	13	75 84 436		B202	1	Gasket	Packning	2
0170	13	*75 84 451*		B212 NLS - USE 9126277	1	Gasket	Packning	2
0180	14	81 25 197			6	Screw	Skruv	5
0190	15	81 25 205			2	Screw	Skruv	5
0200	16	91 08 655			1	Lifting eye	Lyftögla	5
0210	19	80 05 928		-1991, B202	1	Stud	Pinnskruv	5
0215	19	80 05 910		1992-, B202	1	Stud	Pinnskruv	5
0220	19	80 05 910		B212	1	Stud	Pinnskruv	5
0230	20	80 05 928			1	Stud	Pinnskruv	5
0240	21	80 05 910		B202	1	Stud	Pinnskruv	5
0250	21	80 05 936		B212	1	Stud	Pinnskruv	5
0260	22	75 07 973		B212	1	Gasket	Packning	4
0270	23	93 58 177		B212	1	Flange	Fläns	6
0280	24	80 19 895		-1992, B212	2	Screw	Skruv	5
0285	24	91 66 273		1993-, B212	2	Screw	Skruv	5
0290	29	91 36 243		L=670 MM	1	Vaccum hose	Vakuumslang	5
0300	30	85 09 002			1	Tube	Rör	2
0310	31	85 10 091		M, SE, US	1	Manifold	Grenrör	2
0320	33	75 21 313		TURBO	1	Non-return valve	Backventil	6
0330	34	91 36 243		TURBO, L=40 MM	1	Vaccum hose	Vakuumslang	5
0340	35	75 60 212		I	1	Hose	Slang	4
0350	35	*83 64 416*		TURBO NLS	1	Hose	Slang	2
0360	36	75 60 220		I	1	Hose	Slang	4
0370	36	75 14 383		TURBO	1	Hose	Slang	4
0380	37	74 87 556			1	Nipple	Nippel	4
0390	38	*83 60 463*		NLS - USE 8335614	1	Plug	Plugg	6
0400	39	93 57 021			1	Temperature sensor	Temperaturgivare	2
0410	39	74 85 006		22)	1	Temperature sensor	Temperaturgivare	2
0420	40	*89 81 979*		NLS - USE 4443883	1	Seal	Tätning	5
0430								
0440		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

4. With catalytic converter. Med katalytisk reaktor.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F14

Throttle valve housing
B201 I

Spjällhus
B201 I

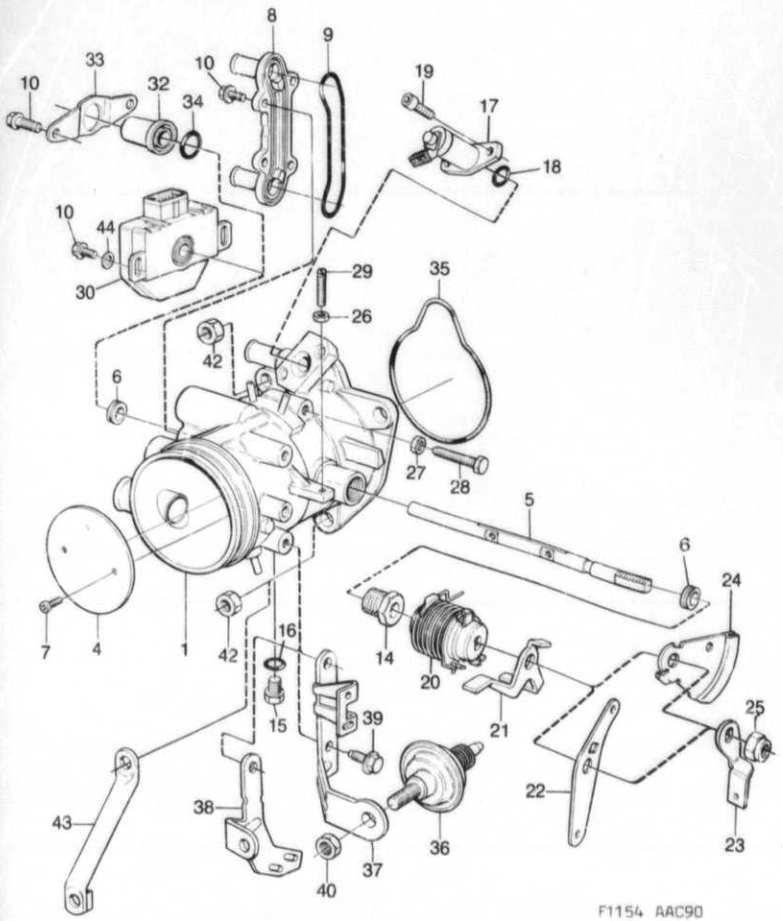

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 84 694		35)	1	Throttle body	Spjällhus	6
0020	1	74 84 702		4)	1	Throttle body	Spjällhus	6
0030	4	83 53 484			1	Shutter	Spjäll	6
0040	5	*75 04 673*		55) NLS - USE 8057259, 9107624	1	Shutter shaft	Spjällaxel	6
0040								
0050	5	*78 72 807*		56) NLS - USE 9107624	1	Shutter shaft	Spjällaxel	6
0060	6	83 57 345		4), A	2	Seal	Tätning	5
0070	7	80 59 073		55)	2	Screw	Skruv	5
0080	7	80 57 259		56)	2	Screw	Skruv	5
0090	8	75 05 423			1	Cover	Lock	5
0100	9	75 06 264			1	O-ring	O-ring	2
0110	10	75 07 080			6	Screw	Skruv	5
0120	10	75 07 080		4)	4	Screw	Skruv	5
0130	14	93 59 050			1	Plug	Plugg	5
0140	15	75 62 739			1	Plug	Plugg	5
0150	16	*80 46 559*		-1992 NLS - USE 7974546	1	O-ring	O-ring	2
0155	16	79 70 361		1993-	1	O-ring	O-ring	2
0160	17	93 12 471			1	Starter valve	Startventil	4
0170	18	80 46 542			1	O-ring	O-ring	2
0180	19	75 07 072			2	Screw	Skruv	5
0190	20	75 16 974			1	Return spring	Returfjäder	5
0200	21	*75 62 390*		SE, EU NLS - USE 7583859	1	Lever	Hävarm	6
0210	22	75 64 396		A	1	Lever	Hävarm	5
0220	23	75 62 010			1	Lever	Hävarm	6
0230	24	93 09 261		M	1	Cam disc	Kamskiva	5
0240	25	80 74 288		-1992	1	Nut	Mutter	5
0245	25	91 66 406		1993-	1	Nut	Mutter	5
0250	26	81 51 045			1	Nut	Mutter	5
0260	27	81 51 052			1	Nut	Mutter	5
0270	28	83 57 378			1	Screw	Skruv	5
0280	29	*80 07 486*		NLS - USE 4087706	1	Set screw	Stoppskruv	5
0290	30	75 01 612		4), A	1	Potentiometer	Potentiometer	6
0300	32	75 07 098			1	Cover	Lock	5
0310	33	75 07 106			1	Bracket	Fäste	5
0320	34	80 48 629			1	O-ring	O-ring	2
0330	35	75 21 875			1	O-ring	O-ring	4
0340	36	93 11 895			1	Absorber	Dämpare	3
0350	37	75 18 889			1	Bracket	Konsol	5
0360	39	75 62 044		4), M	1	Bracket	Konsol	5
0370	39	79 71 294			2	Screw	Skruv	5
0380	40	80 69 015			1	Nut	Mutter	5
0390	42	81 51 326			3	Nut	Mutter	5
0400	43	75 17 402			1	Stay	Stag	6
0410	44	*80 29 956*		4), -1992 NLS - USE 9166356	2	Washer	Bricka	5
0420	44	91 66 356		4), 1993-	2	Washer	Bricka	5

4. With catalytic converter. Med katalytisk reaktor.
35. For cars with EGR. För bilar med EGR.
55. Engine -L048146.
56. Engine L048147-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F16 Auxiliary air regulator B201 I — Tillsatsluftslid B201 I

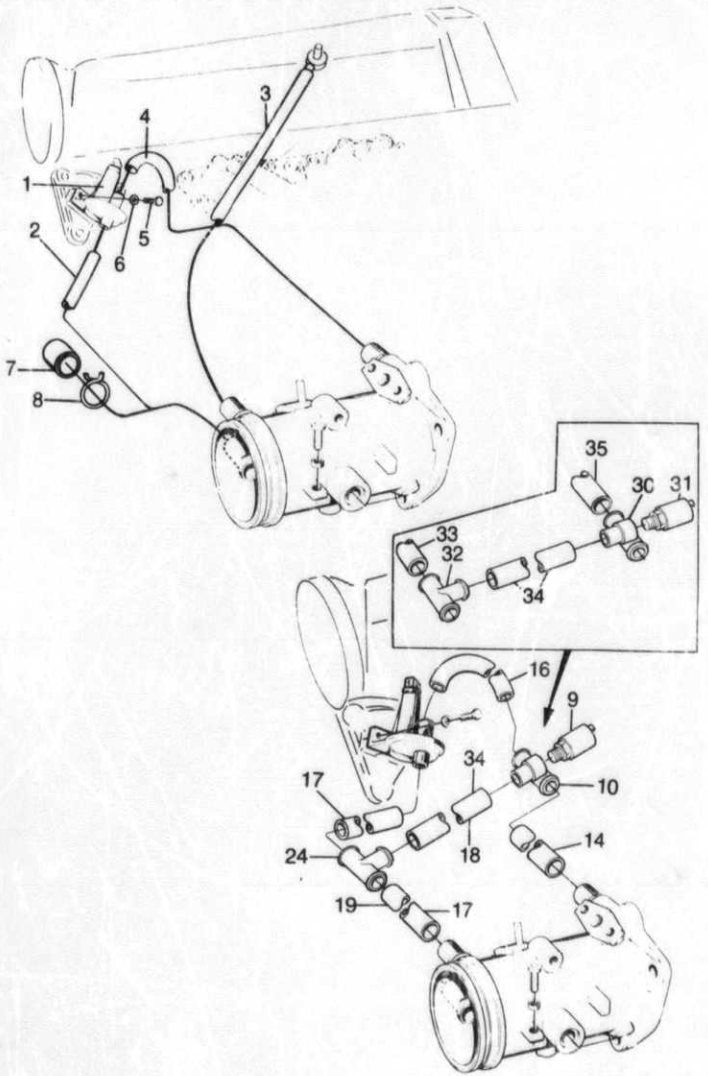

1125 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025 1	91 14 86[illegible]			1	Air valve	Luftventil	4
0040 2	93 08 982			1	Hose	Slang	4
0050 3	83 60 414			1	Hose	Slang	4
0060 4	93 08 941			1	Hose	Slang	4
0070 5	93 50 653			2	Screw	Skruv	5
0080 6	80 29 951		-1992	2	Washer	Bricka	5
0085 6	91 66 364		1993-	2	Washer	Bricka	5
0090 7	93 00 625			1	Plug	Plugg	5
0100 8	79 35 208			1	Hose clamp	Slangklamma	5
0110 9	83 34 005		AC	1	Solenoid valve	Magnetventil	3
0140 10	75 28 144			1	T-pipe	T-rör	5
0180 14	75 26 049		AC	1	Hose	Slang	4
0190 14	*75 27 591*		A, ME, FE NLS	1	Hose	Slang	4
0230 16	75 26 031		AC	1	Hose	Slang	4
0260 17	75 26 056		AC	1	Hose	Slang	4
0270 17	75 26 056		A, ME, FE	2	Hose	Slang	4
0290 18	93 67 525		AC	1	Hose	Slang	4
0330 19	75 26 064		AC	1	Hose	Slang	4
0380 24	83 17 828		AC	1	Nipple	Nippel	5
0430 30	75 28 144		A, ME, FE	1	T-pipe	T-rör	5
0440 31	83 34 005		A, ME, FE	1	Solenoid valve	Magnetventil	3
0450 32	83 17 828		A, ME, FE	1	Nipple	Nippel	5
0460 33	93 67 463		A, ME, FE	1	Hose	Slang	4
0470 34	93 67 525		A, ME, FE	2	Hose	Slang	4
0480 35	*75 27 583*		A, ME, FE NLS	1	Hose	Slang	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F18

Throttle valve housing
B202 and E212

Spjällhus
B202 och B212

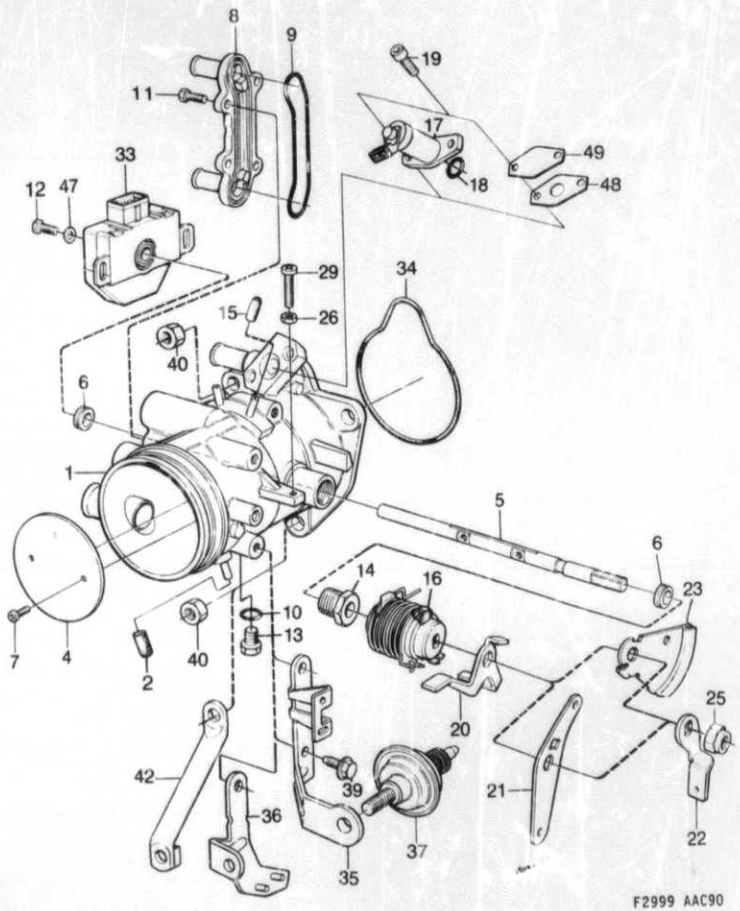

1178	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*74 87 267*		4), 1990, TURBO NLS - USE 9109588	1	Throttle body	Spjällhus	6
0020	1	91 19 868		4), 1990, TURBO, UC	1	Throttle body	Spjällhus	6
0030	1	91 09 588		4), 1991-, TURBO	1	Throttle body	Spjällhus	6
0040	1	74 84 710		4), 1990, B202 I	1	Throttle body	Spjällhus	6
0050	1	91 09 406		4), 1991-, B202 I	1	Throttle body	Spjällhus	6
0060	1	78 71 361		4), B212 I	1	Throttle body	Spjällhus	6
0070	1	78 71 379		4), B212 I, US	1	Throttle body	Spjällhus	6
0080								
0090	1	*74 87 267*		5), 1990, TURBO NLS - USE 9109588	1	Throttle body	Spjällhus	6
0100	1	91 09 422		5), 1991-, TURBO	1	Throttle body	Spjällhus	6
0110	1	74 85 915		5), B202 I	1	Throttle body	Spjällhus	6
0120								
0130	2	*83 60 463*		1990, UC NLS - USE 8335614	1	Plug	Plugg	6
0140	4	83 53 484			1	Shutter	Spjäll	6
0150	5	*75 04 673*		55), B202 NLS - USE 8057259, 9107624	1	Shutter shaft	Spjällaxel	6
0160	5	*78 72 807*		56), B202 NLS - USE 9107624	1	Shutter shaft	Spjällaxel	6
0170	5	91 28 224		B212	1	Shutter shaft	Spjällaxel	6
0180	6	83 57 345			2	Seal	Tätning	5
0190	7	80 59 073		55)	2	Screw	Skruv	5
0200	7	80 57 259		56)	2	Screw	Skruv	5
0210	8	75 05 423			1	Cover	Lock	5
0220	9	75 06 264			1	O-ring	O-ring	2
0230	10	*80 46 559*		-1992 NLS - USE 7974546	1	O-ring	O-ring	2
0235	10	79 74 546		1993-	1	O-ring	O-ring	2
0240	11	75 07 080			4	Screw	Skruv	5
0250	12	75 07 080		B202	2	Screw	Skruv	5
0260	12	*74 82 490*		1991, B212 NLS - USE 9127440	2	Screw	Skruv	5
0265	12	75 07 080		1992-, B212	2	Screw	Skruv	5
0270	13	75 62 739			1	Plug	Plugg	5
0280	14	93 59 050			1	Plug	Plugg	5
0290	15	83 35 614		US	1	Plug	Propp	4
0300	15	*83 60 463*		1991-, JP NLS - USE 8335614	1	Plug	Plugg	6
0310	16	75 16 974			1	Return spring	Returfjäder	5
0320	17	74 86 129		4), I, SE, EU, CA	1	Starter valve	Startventil	4
0330	18	80 46 542		4), I, SE, EU, CA	1	O-ring	O-ring	2
0340	19	75 07 072			2	Screw	Skruv	5
0350	20	75 83 859			1	Lever	Hävarm	6
0360	21	75 64 396		A	1	Lever	Hävarm	5
0370	22	75 62 010			1	Lever	Hävarm	6
0380	23	93 09 261		M	1	Cam disc	Kamskiva	5
0390	25	80 74 288		-1992	1	Nut	Mutter	5
0395	25	91 66 406		1993-	1	Nut	Mutter	5
0400	26	81 51 045			1	Nut	Mutter	5
0410	29	*80 07 486*		NLS - USE 4087706	1	Set screw	Stoppskruv	5
0420	33	75 01 612		B202	1	Potentiometer	Potentiometer	6
0430	33	74 86 723		22), B202	1	Potentiometer	Potentiometer	6
0440	33	88 57 195		B212	1	Potentiometer	Potentiometer	6
0450	34	75 21 875			1	O-ring	O-ring	4
0460	35	75 18 889			1	Bracket	Konsol	5
0470	36	75 62 044		US	1	Bracket	Konsol	5
0480	36	87 67 780		EU, ME	1	Bracket	Konsol	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.
55. Engine --L048146.
56. Engine L048147--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F20

Throttle valve housing
B202 and B212

Spjällhus
B202 och B212

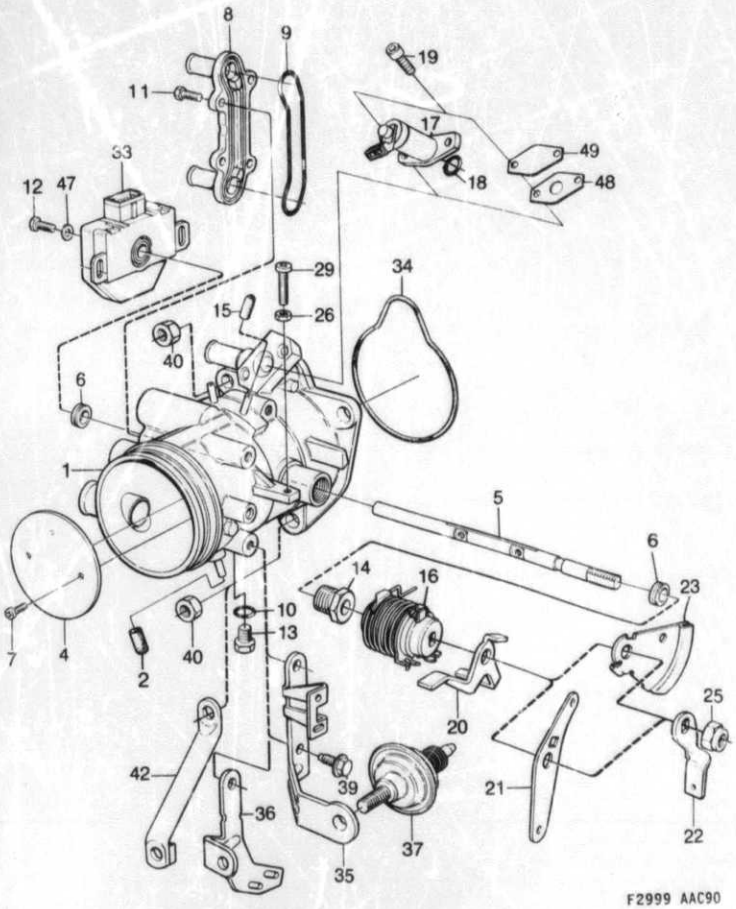

1178

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	37	93 14 501		1	Absorber	Dämpare	3
0500	39	79 71 294		2	Screw	Skruv	5
0510	40	81 51 326		3	Nut	Mutter	5
0520	42	75 17 402		1	Stay	Stag	6
0530	47	*80 29 936*	-1992, US NLS - USE 9166356	2	Washer	Bricka	5
0535	47	91 66 356	1993-, US	2	Washer	Bricka	5
0540	48	75 86 878		1	Gasket	Packning	4
0550	49	75 86 860		1	Flange	Fläns	4

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F22 Auxiliary air regulator B202

Tillsatsluftslid B202

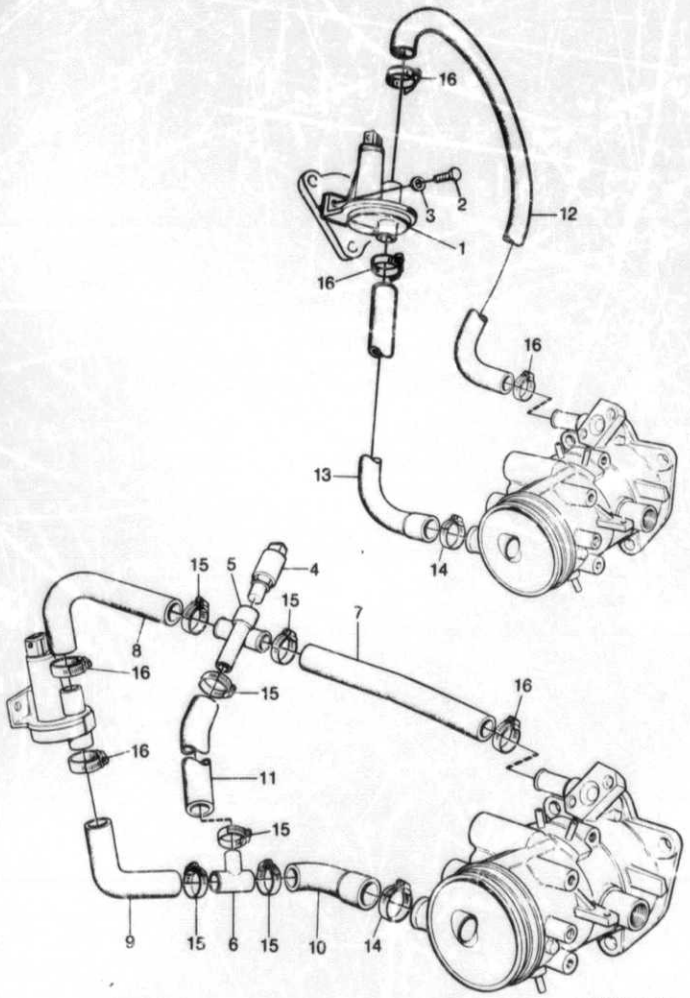

F1157 AAC90

1180	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	83 57 832			1	Air valve	Luftventil	4
0020	1	93 13 909		5), I, EU	1	Air valve	Luftventil	4
0030	2	93 50 653			2	Screw	Skruv	5
0040	3	80 29 951		-1992	2	Washer	Bricka	5
0045	3	91 66 364		1993-	2	Washer	Bricka	5
0050	4	83 34 005		AC	1	Solenoid valve	Magnetventil	3
0060	5	75 28 144		AC	1	T-pipe	T-rör	5
0070	6	83 17 828		AC	1	Nipple	Nippel	5
0080	7	75 26 361		AC	1	Hose	Slang	6
0090	8	75 26 379		AC	1	Hose	Slang	6
0100	9	75 26 346		AC	1	Hose	Slang	6
0110	10	75 26 353		AC	1	Hose	Slang	6
0120	11	75 26 338		AC	1	Hose	Slang	6
0130	12	75 02 800			1	Hose	Slang	4
0140	12	75 87 181		22)	1	Hose	Slang	4
0150	13	75 02 818			1	Hose	Slang	4
0160	13	75 17 923		22)	1	Hose	Slang	4
0170	14	79 70 072			1	Hose clamp	Slangklamma	5
0180	15	79 75 543		AC	6	Hose clamp	Slangklamma	5
0190	16	79 70 064			3	Hose clamp	Slangklamma	5
0200								
0210		86 05 081		5), AC, TURBO, EU	1	Idling speed increase kit	Tomgångshöjningssats	4
0220				See page 8C-025, 5-K02				

5. Without catalytic converter. Utan katalytisk reaktor.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-F24 Automatic idling speed control system

Automatisk tomgångsreglering

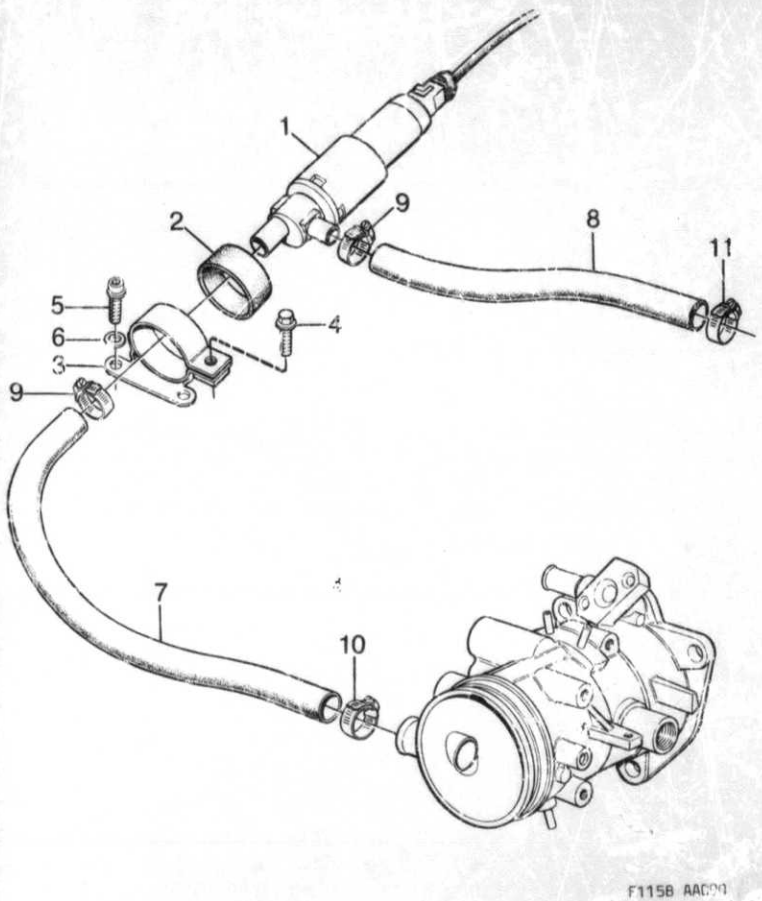

1190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	L
0010	1	75 86 019		B202	1	Control valve	Reglerventil	4
0020	1	74 85 634		22), B202	1	Control valve	Reglerventil	4
0030	1	88 57 179		B212	1	Control valve	Reglerventil	4
0040	2	75 69 0b6		B202	1	Rubber ring	Gummiring	5
0050	2	78 57 998		B212	1	Rubber ring	Gummiring	5
0060	3	74 80 916			1	Bracket	Fäste	6
0070	4	81 25 023			1	Screw	Skruv	5
0080	5	93 50 653			2	Screw	Skruv	5
0090	6	80 29 951		-1992	2	Washer	Bricka	5
0095	6	91 66 364		1993-	2	Washer	Bricka	5
0100	7	*75 83 867*		-1991, B202 NLS - USE 9126505	1	Hose	Slang	4
0105	7	91 28 505		4)1992-, B202 I	1	Hose	Slang	4
0107	7	91 28 505		1992-, B202 TURBO, US	1	Hose	Slang	4
0110	7	75 17 923		-1991, B212	1	Hose	Slang	4
0115	7	91 28 497		1992-, B212, B202S, B202 TURBO	1	Hose	Slang	4
0120	8	75 87 173		B202	1	Hose	Slang	4
0130	8	75 87 181		B212	1	Hose	Slang	4
0140	9	*79 63 549*		TURBO NLS - USE 79/70080	2	Hose clamp	Slangklamma	5
0150	9	79 63 531		22)	2	Hose clamp	Slangklamma	5
0160	10	79 63 531		TURBO	1	Hose clamp	Slangklamma	5
0170	11	79 63 523		TURBO	1	Hose clamp	Slangklamma	5

4. With catalytic converter. Med katalytisk reaktor.
22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-C02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F06
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-J04
Complete sets	1-J10

1-G02

Exhaust manifold
B201 C and I

Avgassamlare
B201 C och I

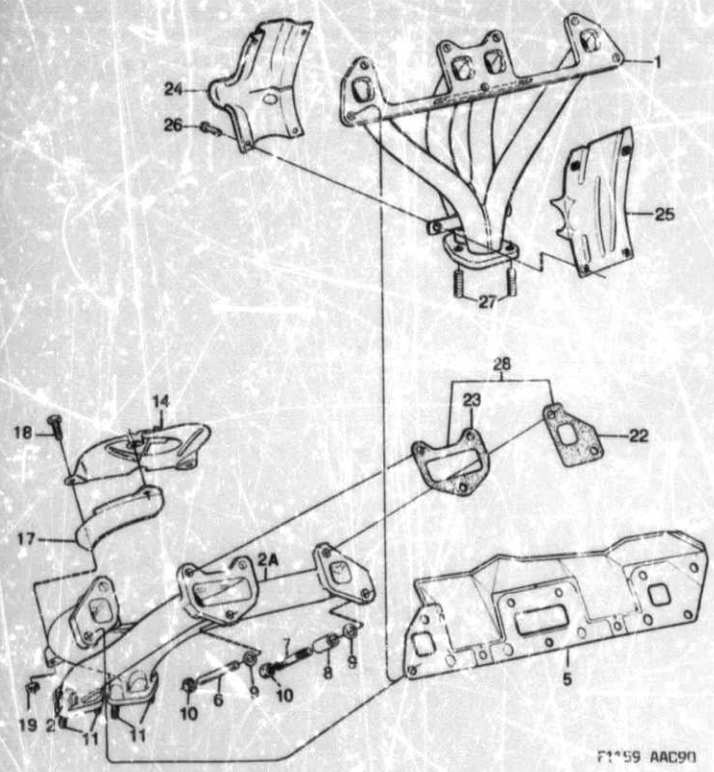

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 83 464		35)	1	Exhaust manifold	Avgassamlare	3
0020	1	74 83 464		4), I, A	1	Exhaust manifold	Avgassamlare	3
0030	2	83 56 420		34)	1	Exhaust manifold	Avgassamlare	3
0040	2	83 56 420		4), I, M	1	Exhaust manifold	Avgassamlare	3
0050	2A	75 08 583		34)	1	Exhaust manifold	Avgassamlare	3
0060	2A	75 08 583		2), I	1	Exhaust manifold	Avgassamlare	3
0070	5	75 61 772			1	Gasket	Packning	2
0080	6	*75 19 010*		NLS - USE 7985146	3	Stud screw	Pinnbult	5
0090	7	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0095	7	79 85 161		1993-	4	Stud screw	Pinnbult	5
0100	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0110	9	80 73 249			7	Washer	Bricka	5
0120	10	88 59 878			7	Nut	Mutter	3
0130	11	83 60 943			4	Stud screw	Pinnbult	5
0140	14	83 23 214		EU	1	Cover	Kåpa	5
0150	17	93 29 442		EU	1	Splash guard	Stänkskydd	4
0160	18	80 21 917		I	3	Screw	Skruv	5
0170	18	80 19 978			3	Screw	Skruv	5
0180	19	81 51 227			1	Nut	Mutter	5
0190	22	75 88 940			2	Gasket	Packning	2
0200	23	75 88 957			1	Gasket	Packning	2
0210	24	75 34 456		35), C	1	Cover	Kåpa	3
0220	25	75 28 524		35), C	1	Cover	Kåpa	3
0230	26	79 72 623		35), C	4	Screw	Skruv	5
0240	27	80 00 622			3	Stud	Pinnskruv	5
0250								
0260	28	98 19 146		See page 2-163, 1-I20	X	Gasket kit	Packningsats	2
0270		88 17 280		23)	X	Screw kit	Skruvsats	5

2. Front. Främre.
4. With catalytic converter. Med katalytisk reaktor.
23. For exhaust manifold. För avgassamlare.
34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G04 Exhaust manifold B202 I and B212 I

Avgassamlare B202 I och B212 I

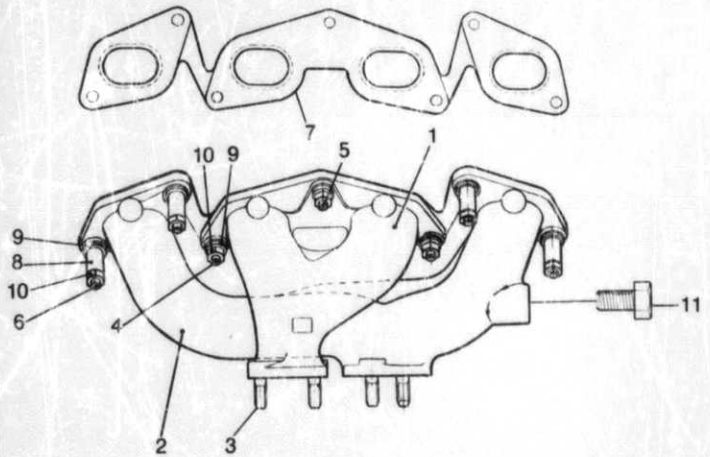

F2215 AAC90

1275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 83 784		1990	1	Exhaust manifold	Avgassamlare	3
0020	1	91 18 019		1991-	1	Exhaust manifold	Avgassamlare	3
0030	2	75 62 515		1990	1	Exhaust manifold	Avgassamlare	3
0040	2	91 18 027		1991-	1	Exhaust manifold	Avgassamlare	3
0050	3	83 60 943			4	Stud screw	Pinnbult	5
0060	4	*75 19 010*		NLS - USE 7985146	2	Stud screw	Pinnbult	5
0070	5	*75 19 010*		NLS - USE 7985146	1	Stud screw	Pinnbult	5
0080	6	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0085	6	79 85 161		1993-	4	Stud screw	Pinnbult	5
0090	7	75 18 996			1	Gasket	Packning	2
0100	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0110	9	80 73 249			7	Washer	Bricka	5
0120	10	86 59 878			7	Nut	Mutter	3
0130	11	81 23 739			1	Plug	Propp	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G06 Exhaust manifold B202 Turbo

1-G06 Avgassamlare B202 Turbo

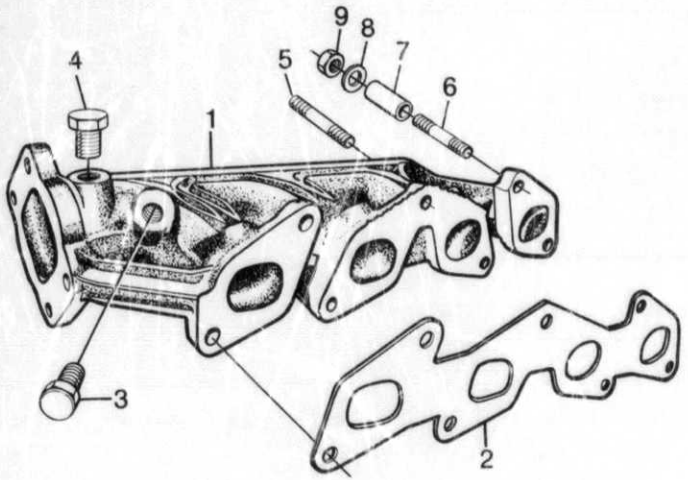

F3775 - AAC90

1280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 115			1	Exhaust manifold	Avgassamlare	3
0020	2	75 18 996			1	Gasket	Packning	2
0030	3	81 23 739			1	Plug	Propp	5
0040	4	81 23 747			1	Plug	Propp	5
0050	5	*75 19 010*		NLS - USE 7985146	3	Stud screw	Pinnbult	5
0060	6	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0065	6	79 85 161		1993-	4	Stud screw	Pinnbult	5
0070	7	93 06 812			4	Spacer sleeve	Distanshylsa	3
0080	8	80 73 249			7	Washer	Bricka	5
0090	9	88 59 878			7	Nut	Mutter	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G08

EGR system
B201 C

EGR-system
B201 C

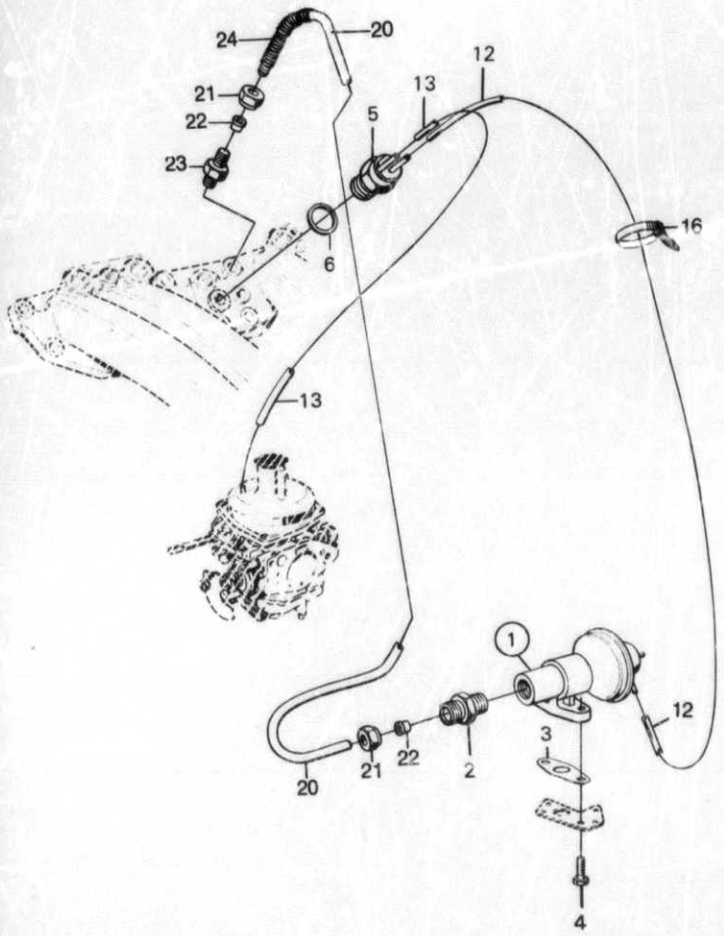

F2857 AAC90

1310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 50 224		49)	1	EGR-valve	EGR-ventil	3
0020	1	88 59 977		50)	1	EGR-valve	EGR-ventil	3
0030	2	93 51 495			1	Nipple	Nippel	6
0040	3	75 07 973			1	Gasket	Packning	4
0050	4	*80 19 929*		-1992 NLS - USE 9166299	2	Screw	Skruv	5
0055	4	91 66 299		1993-	2	Screw	Skruv	5
0060	5	93 14 162			1	Valve	Ventil	3
0070	6	*83 26 712*		NLS - USE 4161162	1	Seal	Tätning	5
0080	12	91 36 243		49), L=170 MM	1	Vaccum hose	Vakuumslang	5
0090	12	91 36 243		50), L=160 MM	1	Vaccum hose	Vakuumslang	5
0100	13	91 36 243		L=290 MM	1	Vaccum hose	Vakuumslang	5
0110	16	*18 00 259*		1990 NLS - USE 8153611	1	Tensioning band	Spännband	5
0120	16	81 53 611		1991-	1	Tensioning band	Spännband	5
0130	20	75 04 012			1	EGR-pipe	EGR-rör	5
0140	21	81 45 559			2	Nut	Mutter	5
0150	22	81 32 235			2	Ferrule	Skärring	5
0160	23	81 31 989			1	Nipple	Nippel	5
0170	24	75 04 046			1	Protection	Skydd	6
0180								
0190		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


49. Engine -L041162.
50. Engine L041163-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	5-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

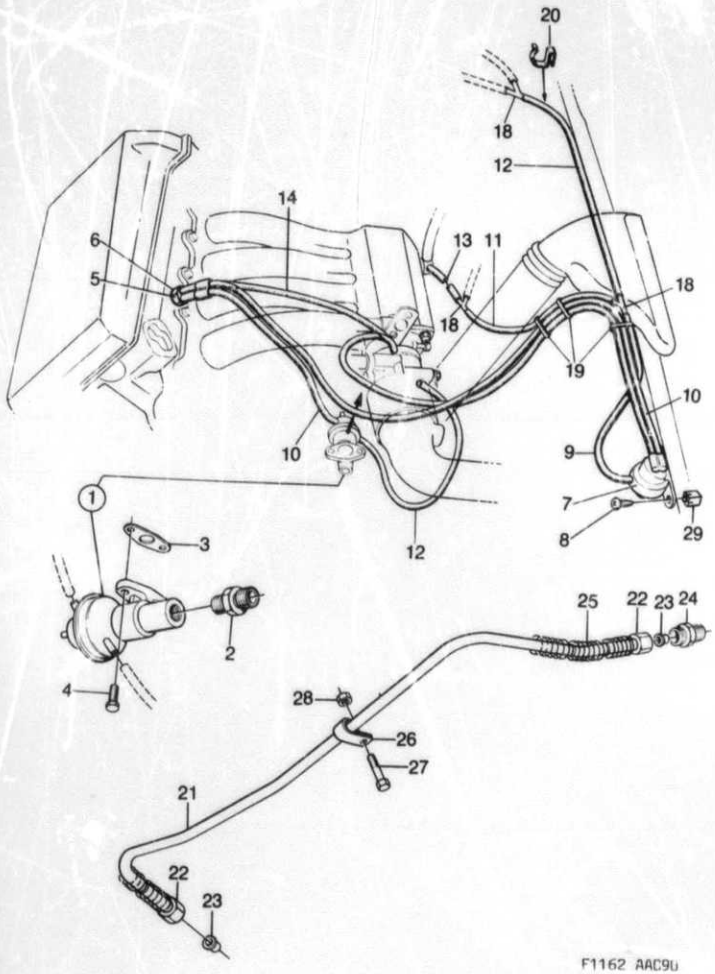

F1162 AAC90

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	*93 50 216*		5,49), I NLS - USE 8859969	1	EGR-valve	EGR-ventil	3
0020	1	88 59 969		5,50), I	1	EGR-valve	EGR-ventil	3
0030	1	93 50 224		5,49), TURBO	1	EGR-valve	EGR-ventil	3
0040	1	88 59 977		5,50), TURBO	1	EGR-valve	EGR-ventil	3
0050	2	91 14 679		I	1	Nipple	Nippel	6
0060	2	75 06 652		TURBO	1	Nipple	Nippel	6
0070	3	75 07 973			1	Gasket	Packning	4
0080	4	*80 19 929*		-1992 NLS - USE 9166299	2	Screw	Skruv	5
0085	4	91 66 299		1993-	2	Screw	Skruv	5
0090	5	75 04 897			1	Valve	Ventil	3
0100	6	81 24 141			1	▲Seal	▲Tätning	5
0110	7	75 28 425			1	Signal transducer	Signalomvandlare	5
0120	8	80 59 412			2	Screw	Skruv	5
0130	9	91 36 243		L=220 MM	1	Vaccum hose	Vakuumslang	5
0140	10	91 36 243		49), L=330 MM	1	Vaccum hose	Vakuumslang	5
0150	10	91 36 243		50), I, L=330 MM	1	Vaccum hose	Vakuumslang	5
0160	10	91 36 243		50,-1990),TURBO, L=330MM	1	Vaccum hose	Vakuumslang	5
0170	10	91 36 243		1991-, TURBO, L=360 MM	1	Vaccum hose	Vakuumslang	5
0180	11	91 36 243		L=335 MM	1	Vaccum hose	Vakuumslang	5
0190	12	91 36 243		L=410 MM	2	Vaccum hose	Vakuumslang	5
0200	13	91 36 243		L=40 MM	1	Vaccum hose	Vakuumslang	5
0210	14	91 36 243		L=410 MM	1	Vaccum hose	Vakuumslang	5
0220	18	85 09 002			3	Tube	Rör	2
0230	19	79 71 872			3	Tensioning band	Spännband	5
0240	20	79 33 443			4	Clip	Clips	5
0250	21	75 20 133			1	EGR-pipe	EGR-rör	6
0260	21	74 87 168		I	1	EGR-pipe	EGR-rör	6
0270	22	*81 28 969*		NLS - USE 8145559	2	Nut	Mutter	
0280	23	81 32 235			2	Ferrule	Skärring	5
0290	24	81 31 989			1	Nipple	Nippel	5
0300	25	75 08 385			1	Protection	Skydd	6
0310	26	75 15 836		104)	1	Clamp	Klammer	6
0320	27	*80 21 933*		-1992 NLS - USE 9166315	1	Screw	Skruv	5
0325	27	91 66 315		1993-	1	Screw	Skruv	5
0330	28	81 51 227			1	Nut	Mutter	5
0340	29	79 73 456			2	Expanding nut	Expandermutter	5
0350								
0360		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

5. Without catalytic converter. Utan katalytisk reaktor.
49. Engine --L041162.
50. Engine L041163--.
104. Engine --M050346

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G12

EGR system
Electronic

EGR-system
Elektroniskt

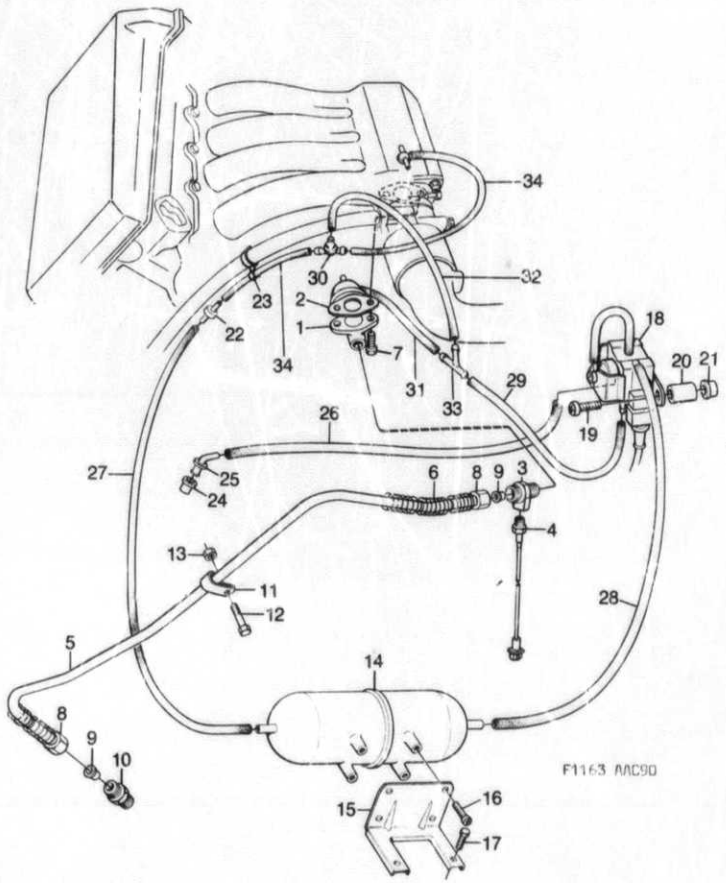

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 88 721			1	EGR-valve	EGR-ventil	3
0020	2	75 07 973			1	Gasket	Packning	4
0030	3	91 19 728			1	Nipple	Nippel	6
0040	4	91 19 512			1	Sensor	Givare	5
0050	5	75 20 133			1	EGR-pipe	EGR-rör	6
0060	6	75 08 385			2	Protection	Skydd	6
0070	7	*80 19 929*		-1992 NLS - USE 9166299	2	Screw	Skruv	5
0075	7	91 66 299		1993-	2	Screw	Skruv	5
0080	8	81 45 559			2	Nut	Mutter	5
0090	9	81 32 235			2	Ferrule	Skärring	5
0100	10	81 31 989			1	Nipple	Nippel	5
0110	11	75 15 836			1	Clamp	Klammer	6
0120	12	*80 21 933*		-1992 NLS - USE 9166315	1	Screw	Skruv	5
0125	12	91 66 315		1993-	1	Screw	Skruv	5
0130	13	81 51 227			1	Nut	Mutter	5
0140	14	40 15 996			1	Vacuum tank	Vakuumtank	5
0150	15	40 16 069			1	Bracket	Fäste	6
0160	16	79 73 613			4	Screw	Skruv	5
0170	17	79 69 223			2	Screw	Skruv	5
0180	18	91 19 504			1	Timing valve	Taktventil	5
0190	19	40 19 493			2	Screw	Skruv	5
0200	20	40 16 051			2	Spacer tube	Distansrör	5
0210	21	79 73 456			2	Expanding nut	Expandermutter	5
0220	22	40 23 297			1	Non-return valve	Backventil	5
0230	23	73 98 233			1	Clamp	Klammer	5
0240	24	40 16 002			1	Bushing	Bussning	6
0250	25	40 16 036			1	Nipple	Nippel	4
0260	26	91 36 243		L=500 MM	1	Vaccum hose	Vakuumslang	5
0270	27	91 36 243		L=290 MM	1	Vaccum hose	Vakuumslang	5
0280	28	91 36 243		L=400 MM	1	Vaccum hose	Vakuumslang	5
0290	29	91 36 243		L=550 MM	1	Vaccum hose	Vakuumslang	5
0300	30	40 23 701			1	Delivery valve	Tryckventil	5
0310	31	91 36 243		L=50 MM	1	Vaccum hose	Vakuumslang	5
0320	32	91 36 243		L=400 MM	1	Vaccum hose	Vakuumslang	5
0330	33	85 09 002			1	Tube	Rör	2
0340	34	91 36 243		L=115 MM	2	Vaccum hose	Vakuumslang	5
0350								
0360		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G14

Lambda sonde system
Lamdasondsystem

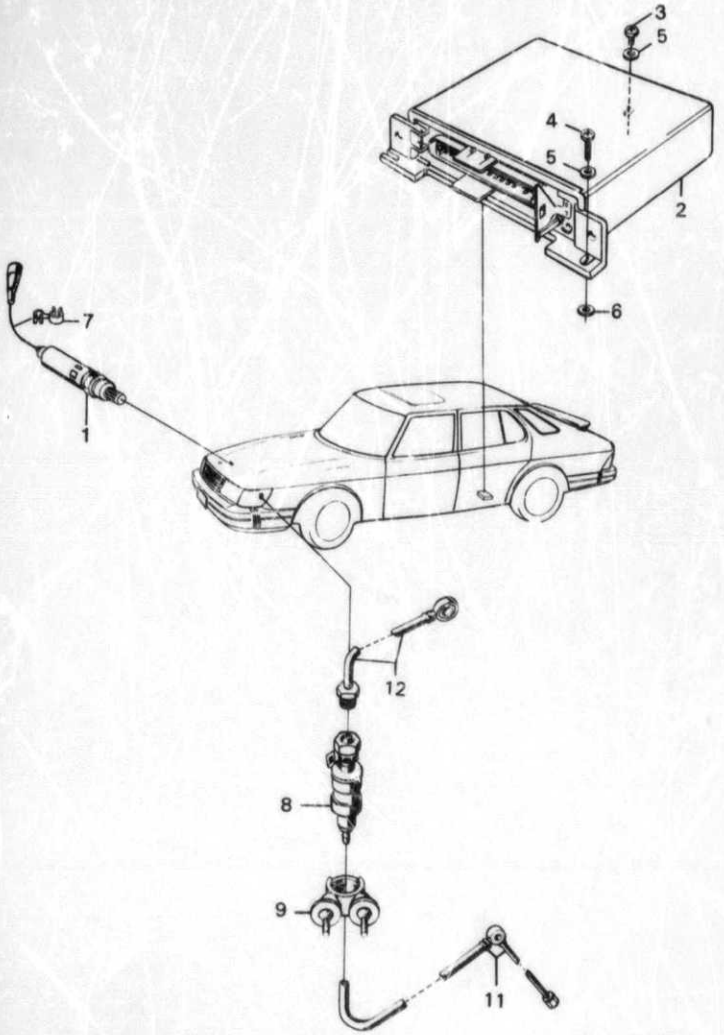

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 92 762			1	Lambda sonde	Lambdasond	4
0020	1	74 85 600		22)	1	Lambda sonde	Lambdasond	4
0030	2	75 36 915			1	Electronic unit	Elektroenhet	3
0040	3	79 22 354			1	Screw	Skruv	5
0050	4	79 72 763		NLS	2	Screw	Skruv	5
0060	5	79 16 489			3	Washer	Bricka	5
0070	6	92 30 293			3	Washer	Bricka	5
0080	7	73 98 415			1	Clamp	Klämma	5
0090	8	83 28 783			1	Timing valve	Taktventil	4
0100	9	83 29 153			1	Cushion	Kudde	5
0110	11	75 35 164			1	Fuel pipe	Bränsleledning	5
0120	12	75 26 809			1	Fuel pipe	Bränsleledning	5

22. Cars with Lucas injection system. Bilar med Lucas insprutningssystem.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G16

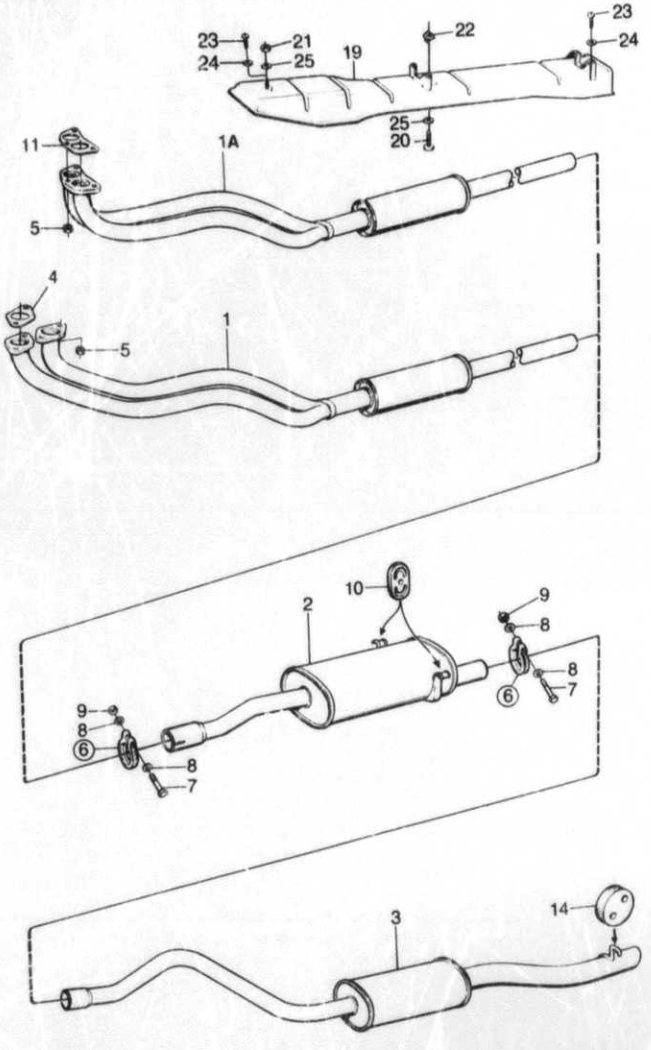

1460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 27 385		34)	1	Silencer	Ljuddämpare	1
0020	1A	75 28 078		35)	1	Silencer	Ljuddämpare	1
0030	2	93 49 143			1	Silencer	Ljuddämpare	1
0040	3	75 36 196			1	Silencer	Ljuddämpare	1
0050	4	83 87 672			2	Gasket	Packning	1
0060	5	*79 67 870*		34) NLS - USE 7979503	4	Nut	Mutter	5
0070	5	*79 67 870*		35) NLS - USE 7979503	3	Nut	Mutter	5
0080	6	83 86 450			2	Clamp	Klammer	1
0090	7	80 84 014			1	. Screw	. Skruv	5
0100	8	*93 19 047*		NLS	2	. Washer	. Bricka	
0110	9	81 51 060			1	. Nut	. Mutter	5
0120	10	93 28 105			2	Rubber mounting	Gummiupphängning	1
0130	11	75 28 136		35)	1	Gasket	Packning	1
0140	14	93 65 404			1	Rubber mounting	Gummiupphängning	1
0150	19	*93 49 804*		42) NLS - USE 4021598, 7119845, 7923014	1	Heat shield	Värmesköld	3
0150								
0160	19	40 21 598		43)	1	Heat shield	Värmesköld	3
0170	20	93 68 218			2	Screw	Skruv	5
0180	21	81 51 235		42)	1	Nut	Mutter	5
0190	22	79 70 429			2	Cage nut	Korgmutter	5
0200	23	79 22 503		42)	2	Screw	Skruv	5
0210	23	79 22 503		43)	3	Screw	Skruv	5
0220	24	80 29 951		42)	2	Washer	Bricka	5
0230	24	80 29 951		43)-1992	3	Washer	Bricka	5
0235	24	91 66 364		1993-	3	Washer	Bricka	5
0240	25	80 29 985		42)	3	Washer	Bricka	5
0250	25	80 29 985		43)	2	Washer	Bricka	5
0260								
0270		88 19 690		See page 2-163, 1-I20	X	Silencer kit	Ljuddämparsats	2
0280		75 38 440		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0285		88 18 577		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0290		93 21 555		See page 2-153, 1-I10	X	Mounting kit	Monteringssats	2
0300								
0310		43 93 740		127), I, IT	X	Catalytic converter kit	Katalysatorsats	4
0320				See page 2-165, 1-I22				
0330								
0340		43 93 757		128), I, IT	X	Catalytic converter kit	Katalysatorsats	4
0350				See page 2-165, 1-I22				

34. For cars without EGR. För bilar utan EGR.
35. For cars with EGR. För bilar med EGR.
42. Ch. --L7005217.
43. Ch. L7005218--.
127. With cast exhaust manifold. Med gjuten avgassamlare.
128. With sheet metal exhaust manifold. Med plåtavgassamlare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G18

B201 I
With catalytic converter

B201 I
Med katalytisk reaktor

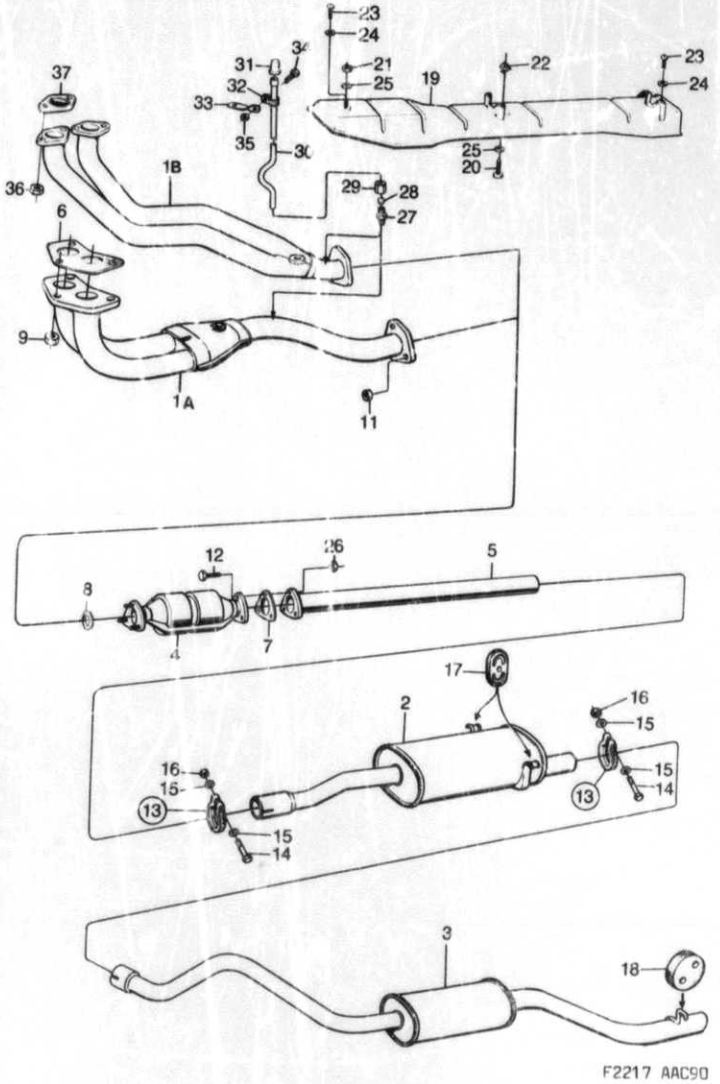

1500	Pos	Part No/Art nr	K S	Notes-Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1B	89 80 278		M	1	Exhaust pipe	Avgasrör	2
0020	1A	75 39 117		A	1	Exhaust pipe	Avgasrör	2
0030								
0040	1B	89 80 443		M, CH	1	Exhaust pipe	Avgasrör	2
0050	1A	89 76 763		A, CH	1	Exhaust pipe	Avgasrör	2
0060								
0070	2	93 49 143			1	Silencer	Ljuddämpare	1
0080	3	75 36 196			1	Silencer	Ljuddämpare	1
0090	4	93 32 461			1	TW catalytic converter	Katalysator	4
0095	4	44 40 061		IT	1	TW catalytic converter	Katalysator	4
0100	5	93 33 840			1	Exhaust pipe	Avgasrör	1
0110	6	75 28 136		A	1	Gasket	Packning	1
0120	7	40 24 089			1	Gasket	Packning	3
0130	8	83 28 726			1	Ring	Ring	3
0140	9	79 79 503		A	3	Nut	Mutter	5
0150	11	81 51 235			3	Nut	Mutter	5
0160	12	79 67 789			3	Screw	Skruv	5
0170	13	83 86 450	S		1	Clamp	Klammer	1
0180	14	80 84 014			1	▪Screw	▪Skruv	5
0190	15	*93 19 047*		NLS	2	▪Washer	▪Bricka	
0200	16	81 51 060			1	▪Nut	▪Mutter	5
0210	17	93 28 105			2	Rubber mounting	Gummiupphängning	1
0220	18	93 65 404			1	Rubber mounting	Gummiupphängning	1
0230	19	*93 49 804*		42) NLS - USE 4021598, 7119845, 7923014	1	Heat shield	Värmesköld	3
0240	19	40 21 598		43)	1	Heat shield	Värmesköld	3
0250	20	93 38 218			2	Screw	Skruv	5
0260	21	81 51 235		42)	1	Nut	Mutter	5
0270	22	79 70 429			2	Cage nut	Korgmutter	5
0280	23	79 72 503		42)	2	Screw	Skruv	5
0290	23	79 72 503		43)	3	Screw	Skruv	5
0300	24	80 29 951		42)		Washer	Bricka	5
0310	24	80 29 951		43)-1992	3	Washer	Bricka	5
0315	24	91 46 364		1993-	3	Washer	Bricka	5
0320	25	80 29 965		42)	3	Washer	Bricka	5
0330	25	80 29 985		43)	2	Washer	Bricka	5
0340	26	79 74 264			3	Nut	Mutter	5
0350	27	81 21 963		CH	1	Nipple	Nippel	5
0360	28	81 32 219		CH	1	Ferrule	Skärring	5
0370	29	81 45 534		CH	1	Fitting nut	Kopplingsmutter	5
0380	30	*89 80 468*		M, CH NLS	1	Tube	Rör	9
0390	30	89 76 789		A, CH	1	Tube	Rör	9
0400	31	89 76 680		CH	1	Cover	Huv	3
0410	32	79 69 355		CH	1	Clamp	Klammer	5
0420	33	89 76 797		CH	1	Bracket	Fäste	5
0430	34	79 69 223		CH	1	Screw	Skruv	5
0440	35	79 71 658		CH	1	Nut	Mutter	5
0450	36	79 78 620			4	Nut	Mutter	3
0460	37	89 80 328			2	Gasket	Packning	1
0470								
0480		88 19 690		See page 2-163, 1-I20	X	Silencer kit	Ljuddämparsats	2
0490		88 18 577		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0500		93 21 555		See page 2-153, 1-I10	X	Mounting kit	Monteringssats	2

42. Ch. -L7005217.
43. Ch. L7005218-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-G20

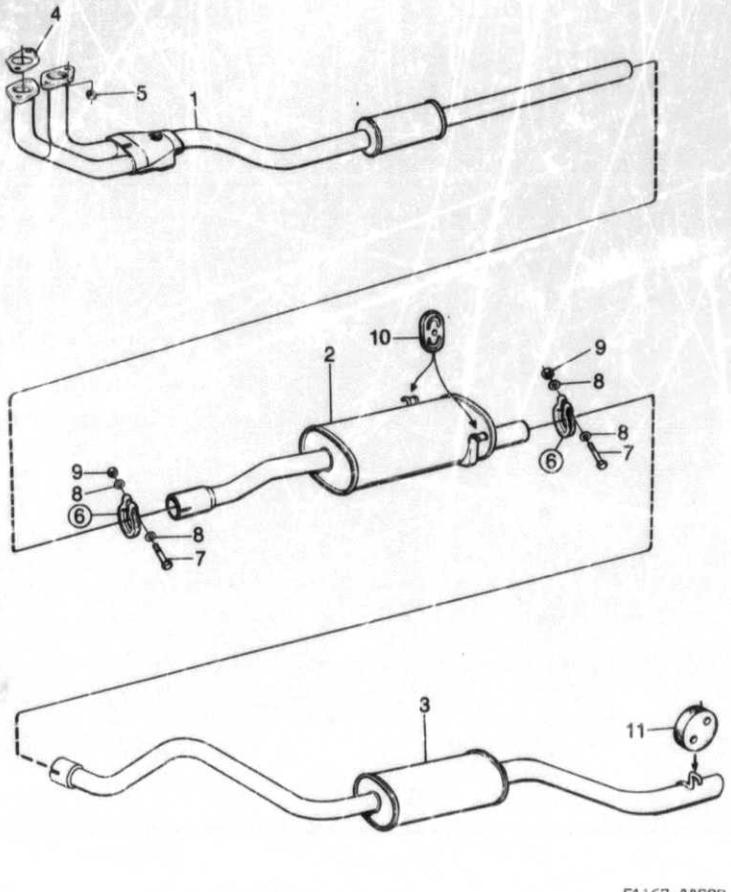

F1167 AAC90

1515	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 63 631			1	Silencer	Ljuddämpare	1
0020	2	93 49 143			1	Silencer	Ljuddämpare	1
0030	3	75 36 196			1	Silencer	Ljuddämpare	1
0040	4	89 80 328			2	Gasket	Packning	1
0050	5	*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0060	6	83 86 450			2	Clamp	Klämmer	1
0070	7	80 84 014			1	▪Screw	▪Skruv	5
0080	8	*93 19 047*		NLS	2	▪Washer	▪Bricka	
0090	9	81 51 060			1	▪Nut	▪Mutter	5
0100	10	93 28 105			2	Rubber mounting	Gummiupphängning	1
0110	11	93 65 404			1	Rubber mounting	Gummiupphängning	1
0120								
0130		88 19 690		See page 2-163, 1-I20	X	Silencer kit	Ljuddämparsats	2
0135		88 18 577		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0140		93 21 555		See page 2-153, 1-I10	X	Mounting kit	Monteringssats	2
0150								
0160		43 93 765		IT	X	Catalytic converter kit	Katalysatorsats	4
0170				See page 2-165, 1-I22				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Exhaust system

1-G22


B202 I

With catalytic converter

Avgassystem

B202 I

Med katalytisk reaktor

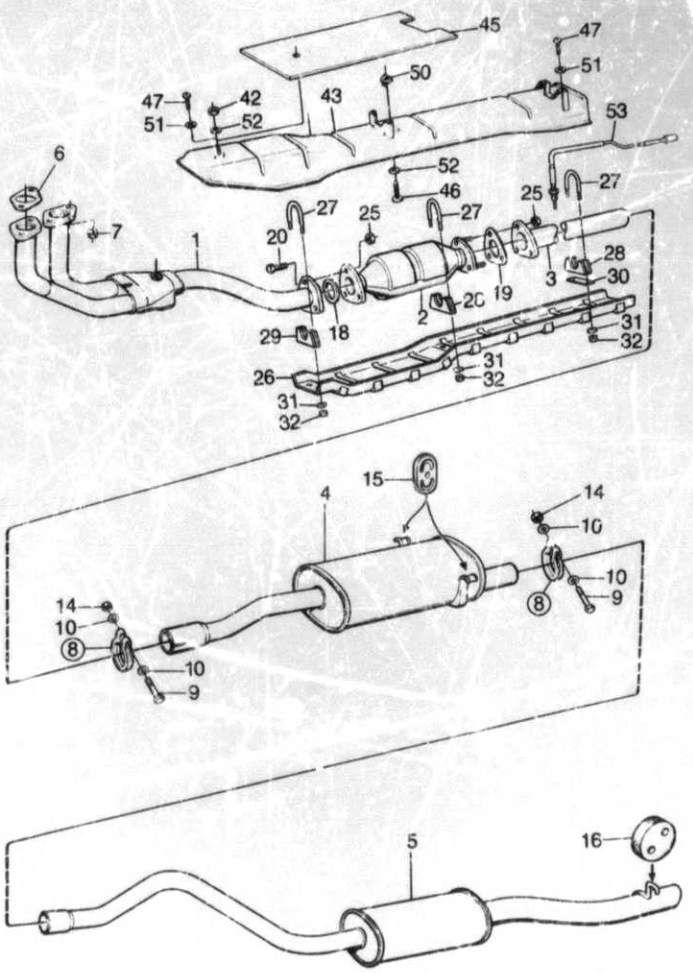

F4285 AAC90

1520	Pos	Part No/Art nr	Anm/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	Ä/L
0010	1	93 64 107			1	Exhaust pipe	Avgasrör	2
0020	2	*75 33 532*		NLS - USE 7533797	1	TW catalytic converter	Katalysator	4
0025	2	44 40 046		-1991, IT	1	TW catalytic converter	Katalysator	4
0030	3	75 33 904			1	Exhaust pipe	Avgasrör	1
0040	3	41 57 111		JP	1	Exhaust pipe	Avgasrör	1
0050	4	93 49 143			1	Silencer	Ljuddämpare	1
0060	5	75 33 196			1	Silencer	Ljuddämpare	1
0070	6	89 80 328			2	Gasket	Packning	1
0080	7	*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0090	8	83 86 460			2	Clamp	Klammer	1
0100	9	80 84 014			1	Screw	Skruv	5
0110	10	*93 19 047*		NLS	2	Washer	Bricka	5
0120	14	81 51 060			1	Nut	Mutter	5
0130	15	93 28 105			2	Rubber mounting	Gummiupphängning	1
0140	16	93 65 404			1	Rubber mounting	Gummiupphängning	1
0150	18	83 28 726			1	Ring	Ring	3
0160	19	40 24 089			1	Gasket	Packning	3
0170	20	79 67 789			3	Screw	Skruv	5
0180	25	81 51 235			6	Nut	Mutter	5
0190	26	41 57 079		JP	1	Heat shield	Värmesköld	9
0200	27	41 57 137		JP	3	Brace	Bygel	9
0210	28	41 57 129		JP	2	Yoke bracket	Bygelfäste	6
0220	29	41 57 145		JP	1	Yoke bracket	Bygelfäste	6
0230	30	41 57 152		JP	2	Spacer	Mellanlägg	6
0240	31	80 29 985		JP	6	Washer	Bricka	5
0250	32	*79 65 767*		JP NLS - USE 7968415	6	Lock nut	Låsmutter	5
0260	42	81 51 235		42)	1	Nut	Mutter	5
0270	43	*93 49 804*		42) NLS - USE 4021598, 7119845, 7923014	1	Heat shield	Värmesköld	3
0280	43	40 21 598		43)	1	Heat shield	Värmesköld	3
0290	45			See page 8P 023, 5-A24	1	Heat shield	Värmesköld	
0300	46	93 68 218			2	Screw	Skruv	5
0310	47	79 22 503		42)	2	Screw	Skruv	5
0320	47	79 22 503		43)	3	Screw	Skruv	5
0330	50	79 70 429			2	Cage nut	Korgmutter	5
0340	51	80 29 951		42)	2	Washer	Bricka	5
0350	51	80 29 951		43)-1992	3	Washer	Bricka	5
0355	51	91 66 364		1993-	3	Washer	Bricka	5
0360	52	80 29 985		42)	3	Washer	Bricka	5
0370	52	80 29 985		43)	2	Washer	Bricka	5
0375	53	41 60 271		1992-, JP	1	Sensor	Givare	9
0380								
0390		88 19 690		See page 2-163, 1-I20	X	Silencer kit	Ljuddämparsats	2
0400		75 38 440		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0405		88 18 577		See page 2-163, 1-I20	X	Mounting kit	Monteringssats	2
0410		93 21 555		See page 2-153, 1-I10	X	Mounting kit	Monteringssats	2


42. Ch. -L7005217.
43. Ch. L7005218-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-E06
Cooling system	1-J06
Engine control	1-I02
Supercharging system	1-I04
Complete set	1-I10

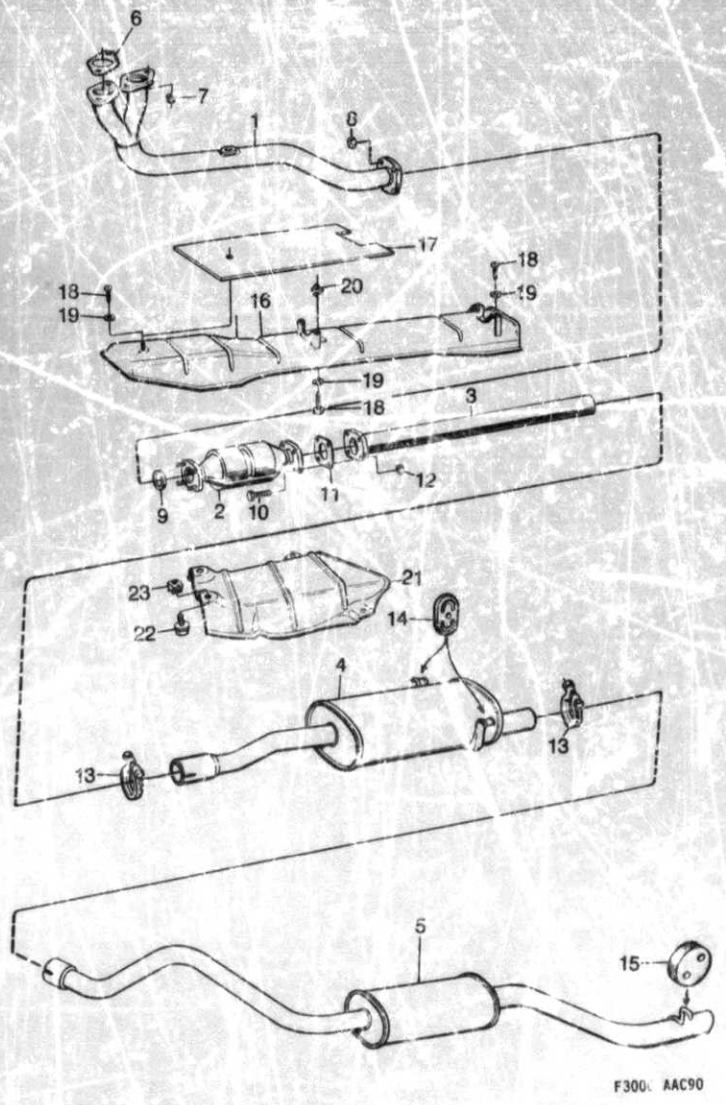

F300(AAC90

1-G24

Exhaust system
B212 I
With catalytic converter

Avgassystem
B212 I
Med katalytisk reaktor


1523	Pos	Part No/Art no	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	41 19 281		1	Exhaust pipe	Avgasrör	2
0020	2	75 33 540		1	TWI catalytic converter	Katalysator	4
0030	3	41 17 182		1	Exhaust pipe	Avgasrör	1
0040	4	93 48 143		1	Silencer	Ljuddämpare	1
0050	5	75 36 196		1	Silencer	Ljuddämpare	1
0060	6	39 80 328		2	Gasket	Packning	1
0070	7	79 67 870	NLS - USE 7979503	4	Nut	Mutter	5
0080	8	80 74 196		4	Nut	Mutter	5
0090	9	83 34 971	NLS - USE 9316407	1	Seal	Tätning	3
0100	10	79 67 789		4	Screw	Skruv	5
0110	11	40 24 121		1	Gasket	Packning	3
0120	12	79 74 264		4	Nut	Mutter	5
0130	13	83 98 450		2	Clamp	Klammer	1
0140	14	93 28 105		2	Rubber mounting	Gummiupphängning	1
0150	15	93 65 404		1	Rubber mounting	Gummiupphängning	1
0160	16	40 21 590		1	Heat shield	Värmeskold	3
0170	17		See page 8B-023, 5-A24	1	Heat shield	Värmeskold	
0180	18	79 22 503		3	Screw	Skruv	5
0190	19	90 23 951		3	Washer	Bricka	5
0200	20	79 70 479		2	Cage nut	Korgmutter	5
0210	21	75 11 645		1	Heat shield	Värmeskold	1
0220	22	75 25 953		4	Screw	Skruv	1
0230	23	79 70 429		4	Cage nut	Korgmutter	5
0240							
0250		88 19 690	See page 2-163, 1-120	X	Silencer kit	Ljuddämparsats	2
0260		93 21 555	See page 2-153, 1-110	X	Mounting kit	Monteringssats	2

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly Steering	3-F0[illegible]
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L[illegible]
10	Numerical register	6-A[illegible]

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

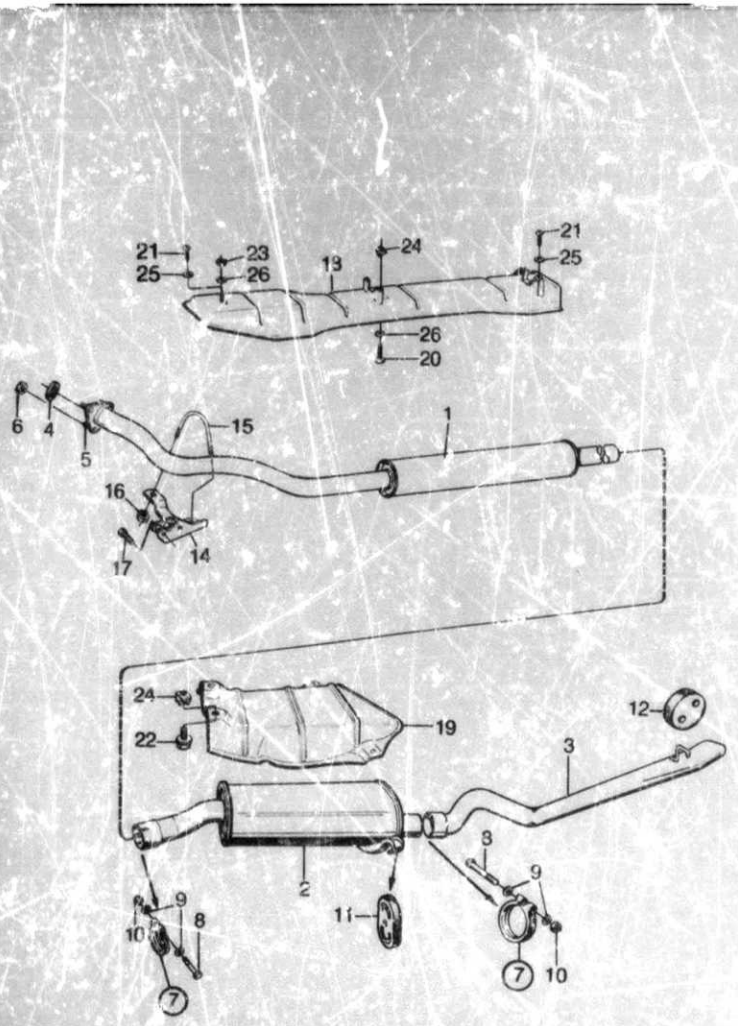

Exhaust system
1--H02
Turbo

Avgassystem
Turbo

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 63 649			1	Silencer	Ljuddämpare	1
0020	2	93 49 192			1	Silencer	Ljuddämpare	1
0030	3	75 35 925			1	Exhaust pipe	Avgasrör	
0040	4	93 16 407			1	Seal	Tätning	3
0050	5	*83 67 856*		NLS - USE 7520224	3	Stud	Pinnskruv	5
0060	6	*79 65 767*		NLS - USE 7968415	3	Lock nut	Låsmutter	5
0070	7	83 36 406			2	Clamp	Klammer	1
0080	8	80 84 030			1	▪Screw	▪Skruv	5
0090	9	*93 19 047*		NLS	2	▪Washer	▪Bricka	
0100	10	81 51 235			1	▪Nut	▪Mutter	5
0110	11	93 28 105			2	Rubber mounting	Gummiupphängning	1
0120	12	93 65 404			1	Rubber mounting	Gummiupphängning	1
0130	14	75 26 916		12)	1	Stay	Stag	5
0140	15	93 17 058	S		1	Brace	Bygel	
0150	16	*79 65 767*	S	NLS - USE 7968415	2	Lock nut	Låsmutter	5
0160	17	80 82 968		-1992	2	Screw	Skruv	5
0165	17	91 66 331		1993-	2	Screw	Skruv	5
0170	18	*93 49 804*		42) NLS - USE 4021598, 7119845, 7923014	1	Heat shield	Värmesköld	3
0170								
0180	18	40 21 598		43)	1	Heat shield	Värmesköld	3
0190	19	75 11 645			1	Heat shield	Värmesköld	3
0200	20	93 08 218			2	Screw	Skruv	5
0210	21	79 22 503		42)	2	Screw	Skruv	5
0220	21	79 22 503		43)	3	Screw	Skruv	5
0230	22	75 28 953			4	Screw	Skruv	5
0240	23	81 51 235		42)	1	Nut	Mutter	5
0250	24	79 70 429			6	Cage nut	Korgmutter	5
0260	25	80 29 951		42)	2	Washer	Bricka	5
0270	25	80 29 951		43)-1992	3	Washer	Bricka	5
0275	25	91 66 364		1993-	3	Washer	Bricka	5
0280	26	80 29 985		42)	3	Washer	Bricka	5
0290	26	80 29 985		43)	2	Washer	Bricka	5
0300								
0310		83 19 708		See page 2-163, 1-F90	X	Silencer kit	Ljuddämparsats	2
0320		75 38 440		See page 2-165, 1-H20	X	Mounting kit	Monteringssats	2
0330		93 21 563		See page 2-153, 1-H10	X	Mounting kit	Monteringssats	2
0340								
0350		43 93 781		B202, I[illegible]	X	Catalytic converter kit	Katalysatorsats	4
0360				See page 2-165, 1-I22				

12. For service measure, use stay 75252b4, lock plate 7514631 and screw 8082992. För serviceändamål, använd stag 7525264, låsplåt 7514631 och skruv 8082992.
42. Ch. -L7005217.
43. Ch. L7005218-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-J04
Complete sets	1-J10

1-H04

Exhaust system
Turbo
With catalytic converter

Avgassystem
Turbo
Med katalytisk reaktor

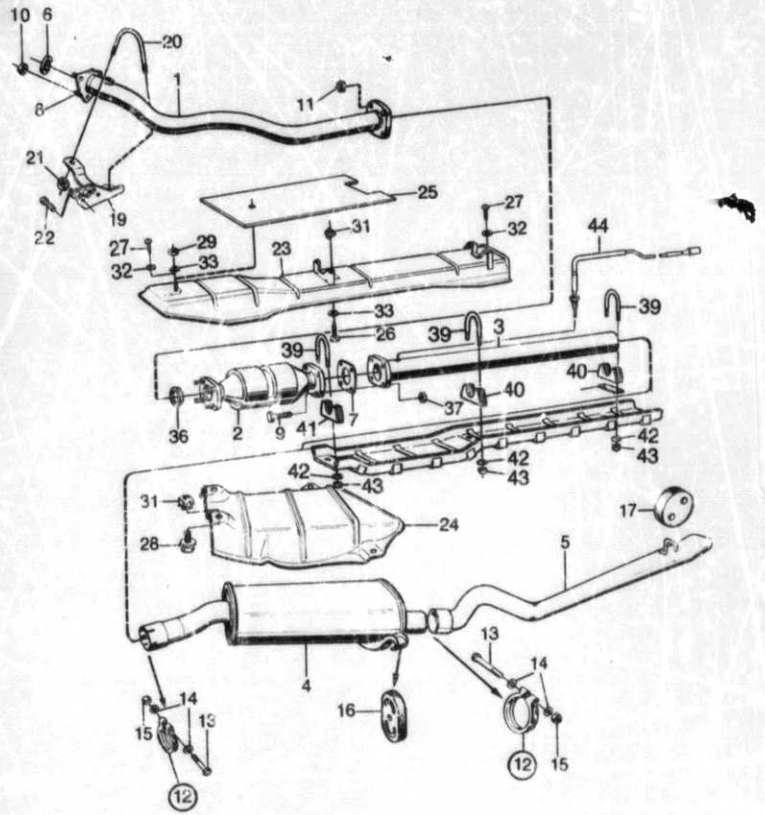

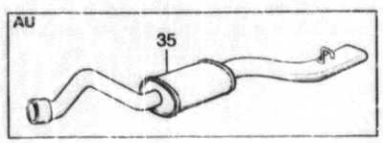

F3773 - AAC90

1530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 33 896			1	Exhaust pipe	Avgasrör	2
0020	2	75 33 540			1	TW catalytic converter	Katalysator	4
0025	2	75 33 540		-1991, IT	1	TW catalytic converter	Katalysator	4
0030	3	93 33 857			1	Exhaust pipe	Avgasrör	1
0040	3	41 57 087		JP	1	Exhaust pipe	Avgasrör	1
0050	4	93 49 192			1	Silencer	Ljuddämpare	1
0060	5	75 35 925			1	Exhaust pipe	Avgasrör	
0070	6	93 16 407			1	Seal	Tätning	3
0080	7	40 24 1[illegible]			1	Gasket	Packning	3
0090	8	*83 67 856*		NLS - USE 7520224	3	Stud	Pinnskruv	5
0100	9	79 67 78[illegible]			4	Screw	Skruv	5
0110	10	*79 65 767*		NLS - USE 7968415	3	Lock nut	Låsmutter	5
0120	11	81 51 235			4	Nut	Mutter	5
0130	12	83 36 406			2	Clamp	Klammer	1
0140	13	80 84 030			1	,Screw	,Skruv	5
0150	14	*83 19 047*		NLS	2	,Washer	,Bricka	
0160	15	81 51 235			1	,Nut	,Mutter	5
0170	16	93 28 105			2	Rubber mounting	Gummiupphängning	1
0180	17	93 65 404			1	Rubber mounting	Gummiupphängning	1
0190	19	75 26 916		12)	1	Stay	Stag	5
0200	20	93 17 058	S		1	Brace	Bygel	
0210	21	*79 65 767*	S	NLS - USE 7968415	2	Lock nut	Låsmutter	5
0220	22	80 62 968		-1992	2	Screw	Skruv	5
0225	22	91 66 331		1993-	2	Screw	Skruv	5
0230	23	*93 49 804*		42) NLS - USE 4021598, 7119845, 7923014	1	Heat shield	Värmesköld	3
0230								
0240	23	40 21 598		43)	1	Heat shield	Värmesköld	3
0250	24	75 11 645			1	Heat shield	Värmesköld	3
0260	25			See page 8B-023, 5-A24	1	Heat shield	Värmesköld	
0270	26	93 68 218			2	Screw	Skruv	5
0280	27	79 22 503		42)	2	Screw	Skruv	5
0290	27	79 22 503		43)	3	Screw	Skruv	5
0300	28	75 28 953			4	Screw	Skruv	5
0310	29	81 51 235		42)	1	Nut	Mutter	5
0320	31	79 70 429			6	Cage nut	Korgmutter	5
0330	32	80 29 951		42)	2	Washer	Bricka	5
0340	32	80 29 951		43)-1992	3	Washer	Bricka	5
0345	32	91 66 364		1993-	3	Washer	Bricka	5
0350	33	80 29 985		42)	3	Washer	Bricka	5
0360	33	80 29 985		43)	2	Washer	Bricka	5
0370	35	75 36 063		AU	1	Silencer	Ljuddämpare	3
0380	36	*83 34 971*		NLS - USE 9316407	1	Seal	Tätning	3
0390	37	79 74 264			4	Nut	Mutter	5
0400	38	41 57 079		JP	1	Heat shield	Värmesköld	9
0410	39	40 24 295		JP	3	Brace	Bygel	9
0420	40	40 24 303		JP	2	Yoke bracket	Bygelfäste	6
0430	41	41 57 095		JP	1	Yoke bracket	Bygelfäste	6
0440	42	80 29 985		JP	6	Washer	Bricka	5
0450	43	*79 65 767*		JP NLS - USE 7968415	6	Lock nut	Låsmutter	5
0460	44	41 60 271		1992-, JP	1	Sensor	Givare	9
0470								
0480		88 19 708		See page 2-163, 1-H20	X	Silencer kit	Ljuddämparsats	2
0490		75 38 440		See page 2-163, 1-H20	X	Mounting kit	Monteringssats	2
0500		93 21 563		See page 2-153, 1-H10	X	Mounting kit	Monteringssats	2

12. For service measure, use stay 7525264, lock plate 7514631 and screw 8082992. För serviceändamål, använd stag 7525264, låsplåt 7514631 och skruv 8082992.
42. Ch. -L7005217.
43. Ch. L7005218-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-H06

Radiator, etc
Kylare, etc

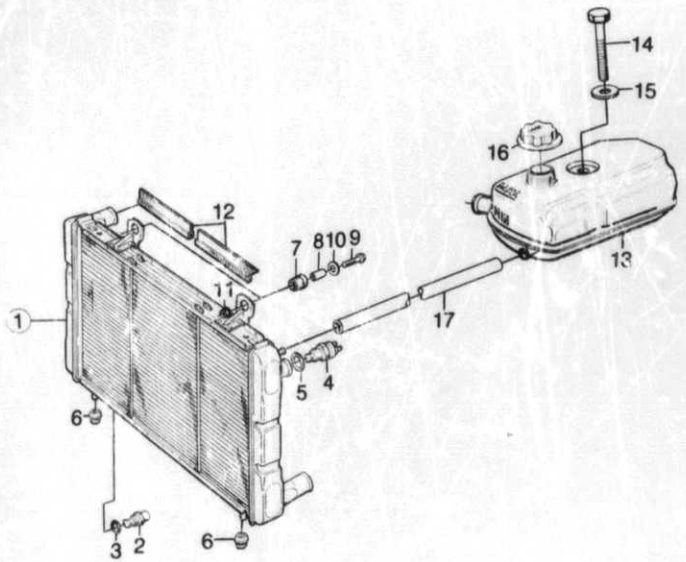

F4286 AAC90

1550	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	75 49 280			1	Radiator	Kylare	4
0020	1	75 49 298		TURBO	1	Radiator	Kylare	4
0030	2	75 49 389			1	. Drain valve	. Avtappningsventil	5
0040	3	79 75 725			1	.. O-ring	.. O-ring	2
0050	4	*95 26 518*		-1991 NLS - USE 4086708	1	. Thermo contact	. Termokontakt	2
0060	4	40 86 708		1992-	1	. Thermo contact	. Termokontakt	2
0070	5	83 30 268			1	. Seal	. Tätning	5
0080	6	83 39 657			2	Rubber bushing	Gummibussning	4
0090	7	75 13 724			2	Rubber bushing	Gummibussning	4
0100	8	75 13 716			2	Spacer	Distans	4
0110	9	79 75 436			2	Screw	Skruv	5
0120	10	79 75 469			2	Washer	Bricka	5
0130	11	79 71 658			2	Nut	Mutter	5
0140	12	41 20 069			2	Sealing strip	Tätningslist	4
0170								
0180	13	75 49 876			1	Expansion tank	Expansionstank	3
0190	14	80 84 055			1	Screw	Skruv	-
0200	15	83 71 650			1	Washer	Bricka	-
0210	16	75 77 323			1	Cover	Lock	3
0220	17			B201		Hose	Slang	
0230				See page 2-129, 1-H10				
0240	17			B202, B212		Hose	Slang	
0250				See page 2-131, 1-H12				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-H08

Fan, etc
Fläkt, etc

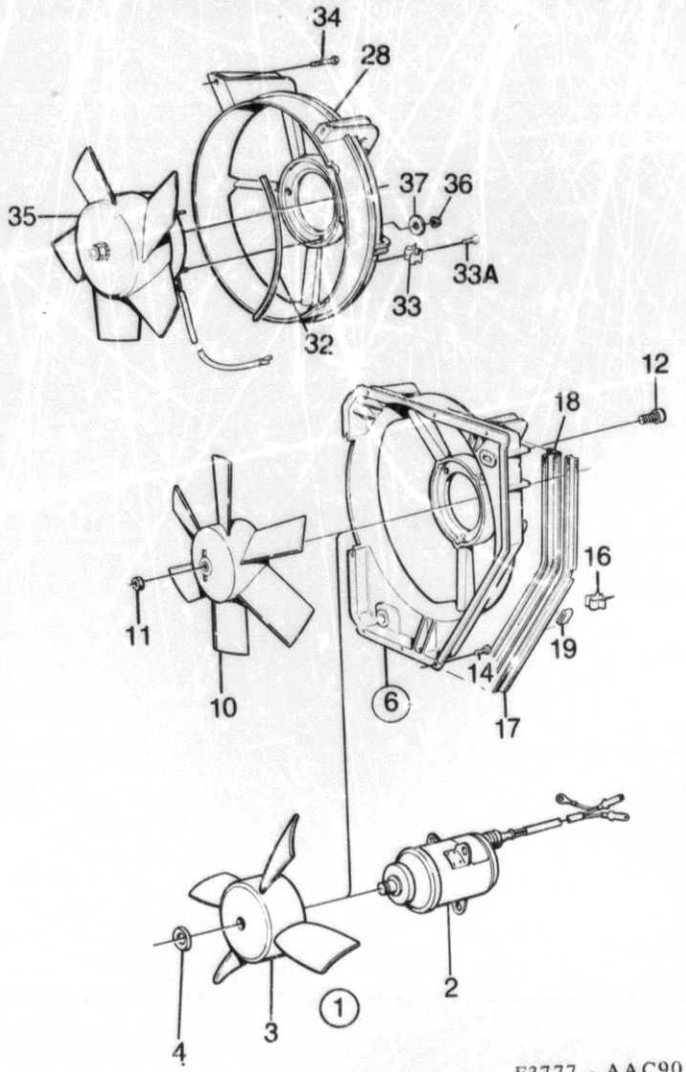

F3777 - AAC90

1560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 42 772		30), C, I, RH	1	Fan unit	Fläktenhet	4
0020	2	75 41 717		1,60), NLS - USE 7542772	1	.Fan motor	.Fläktmotor	4
0030	3	75 41 725		1,60)	1	.Fan blade	.Fläktblad	4
0040	4	75 41 733		1,60)	1	.Clip	.Clips	5
0050	6	40 27 777		C, I, RH	1	Fan shroud	Fläktkåpa	4
0060	10	83 30 896			1	Fan unit	Fläktenhet	4
0070	11	79 14 690			1	Nut	Mutter	5
0080	12	79 71 294			3	Screw	Skruv	5
0090	14	40 27 660			6	Screw	Skruv	5
0100	14	79 72 789		ME	9	Screw	Skruv	5
0110	16	71 55 500			1	Clamp	Klammer	5
0120	17	83 37 875			1	Strip	List	6
0130	18	75 44 216			1	Strip	List	4
0140	19	93 02 787			2	Clip	Clips	3
0150	28	75 48 688		105) LH, C, I, AC	1	Fan shroud	Fläktkåpa	4
0155	28	83 37 859		106) LH, C, I, AC	1	Fan shroud	Fläktkåpa	4
0160	28	75 48 688		105) RH, TURBO	1	Fan shroud	Fläktkåpa	4
0165	28	83 37 859		106) RH, TURBO	1	Fan shroud	Fläktkåpa	4
0170	28	75 48 688		105) LH/RH, TURBO, AC	2	Fan shroud	Fläktkåpa	4
0175	28	83 37 859		106) LH/RH, TURBO, AC	2	Fan shroud	Fläktkåpa	4
0180	32	93 02 803		TURBO	1	Strip	List	5
0190	33	40 29 211		65), C, I, AC	1	Clamp	Klammer	5
0200	33	40 29 211		65), TURBO	1	Clamp	Klammer	5
0210	33	40 29 211		65), TURBO, AC	2	Clamp	Klammer	5
0220	33A	40 27 660		66,105), C, I, AC	1	Screw	Skruv	5
0225	33A	79 75 444		106), C, I, AC	1	Screw	Skruv	5
0230	33A	40 27 660		66,105), TURBO	1	Screw	Skruv	5
0235	33A	79 75 444		106), TURBO	1	Screw	Skruv	5
0240	33A	40 27 660		66,105), TURBO, AC	2	Screw	Skruv	5
0245	33A	79 75 444		106), TURBO, AC	2	Screw	Skruv	5
0250	34	79 75 444		C, I, AC	3	Screw	Skruv	5
0260	34	79 75 444		TURBO	2	Screw	Skruv	5
0270	34	75 75 444		TURBO, AC	4	Screw	Skruv	5
0280	34	79 72 789		TURBO, ME	6	Screw	Skruv	5
0290	35	75 48 191		105) LH, C, I, AC	1	Fan unit	Fläktenhet	4
0295	35	85 94 764		106) LH, C, I, AC	1	Fan unit	Fläktenhet	4
0300	35	75 48 191		105) RH, TURBO	1	Fan unit	Fläktenhet	4
0305	35	85 94 764		106) RH, TURBO	1	Fan unit	Fläktenhet	4
0310	35	75 48 191		105) LH/RH, TURBO, AC	2	Fan unit	Fläktenhet	4
0315	35	85 94 764		106) LH/RH, TURBO, AC	2	Fan unit	Fläktenhet	4
0320	36	79 74 298		105) C, I, AC	3	Nut	Mutter	5
0325	36	80 74 270		106) C, I, AC	3	Lock nut	Låsmutter	3
0330	36	79 74 298		105) TURBO	3	Nut	Mutter	5
0335	36	80 74 270		106) TURBO	3	Lock nut	Låsmutter	3
0340	36	79 74 298		105) TURBO, AC	6	Nut	Mutter	5
0345	36	80 74 270		106) TURBO, AC	6	Lock nut	Låsmutter	3
0360	37	70 60 999		106) I, AC	3	Washer	Bricka	5
0380	37	70 60 999		106) TURBO	3	Washer	Bricka	5
0400	37	70 60 999		106) TURBO, AC	6	Washer	Bricka	5


1. Not as separate spare part. Ej som separat reservdel.
60. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.
65. Ch. --L5004053, --L70247889.
66. Ch. L5004054-, L7024790--.
105. Ch. --M2500115, --M7019899
106. Ch. M2500116-, M7019900--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

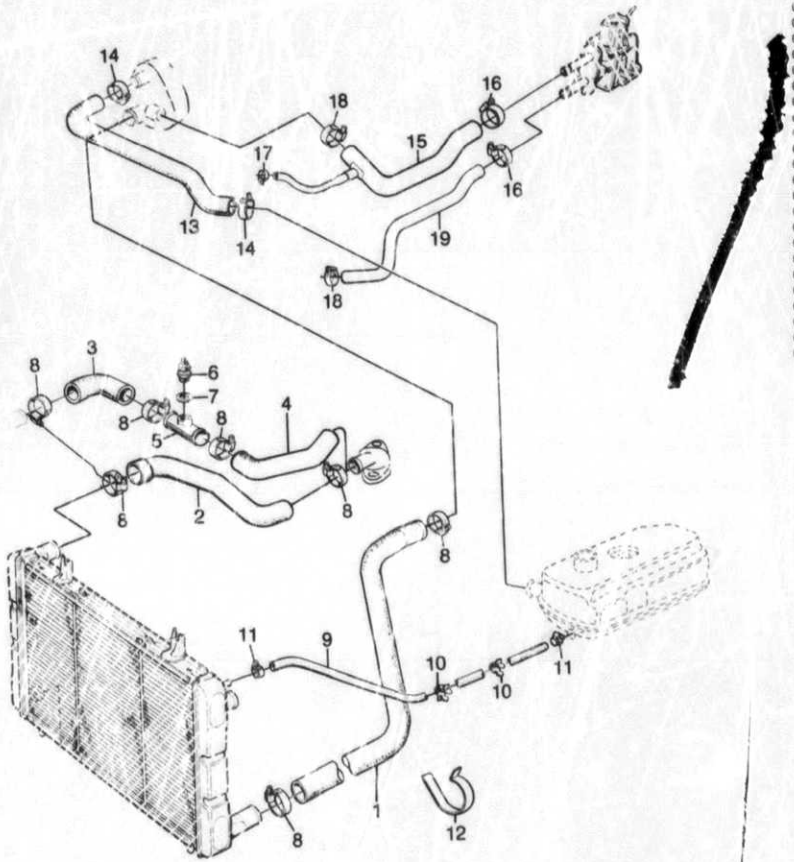

F4287 AAC90

Table	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 64 795			1	Hose	Slang	3
0020	2	75 40 420			1	Hose	Slang	2
0030	3	93 32 818		AC	1	Hose	Slang	2
0040	4	75 43 259		AC	1	Hose	Slang	5
0050	5	93 32 826		AC	1	Pipe	Rör	5
0060	6	*95 52 878*		AC NLS - USE 4086724	1	Contact	Kontakt	2
0070	6	95 26 534		AC, ME	1	Thermo contact	Termokontakt	2
0080	7	83 30 268		AC	1	Seal	Tätning	5
0090	8	79 70 106			7	Hose clamp	Slangklamma	5
0100								
0110	9	40 29 153			1	Hose	Slang	3
0120	10	85 36 419			2	Clip	Clips	5
0130	11	79 70 031			2	Hose clamp	Slangklamma	5
0140	12	93 44 524		M	1	Bracket	Hållare	5
0150								
0160	13	93 49 382			1	Hose	Slang	3
0170	14	79 70 098			2	Hose clamp	Slangklamma	5
0180	15	93 24 609		59), C, SE, EU, ME, FE	1	Hose	Slang	4
0190	15	75 20 174		4,59), I, SE, EU, ME, FE	1	Hose	Slang	3
0200	15	75 13 435		59), I, SE, EU, ME, FE	1	Hose	Slang	4
0210	16	*79 63 556*		NLS - USE 7970098	2	Hose clamp	Slangklamma	5
0220	17	79 70 056			1	Hose clamp	Slangklamma	5
0230	18	*79 63 549*		NLS - USE 7970080	2	Hose clamp	Slangklamma	5
0240	19	93 24 658		59), C	1	Hose	Slang	3
0250	19	93 24 666		59), I	1	Hose	Slang	3


4. With catalytic converter. Med katalytisk reaktor.
59. For cars with by-pass valve, see ST No 854-043. För bilar med by-passventil, se ST No 854-043.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

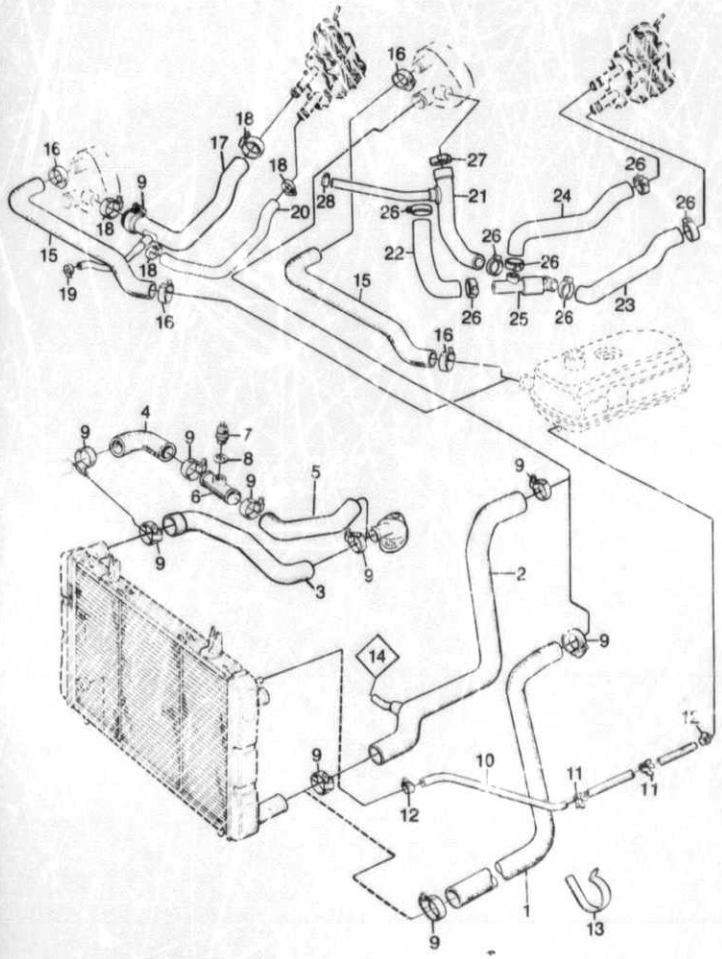

Cooling system
Kylsystem

1-H12

Water hoses, etc
B202 and B212

Vattenslangar, etc
B202 och B212

1575

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	75 12 817		I	1	Hose	Slang	3
2	40 29 849		TURBO	1	Hose	Slang	3
3	93 69 950			1	Hose	Slang	2
4	75 46 161		AC	1	Hose	Slang	
5	75 46 179		AC	1	Hose	Slang	
6	93 32 826		AC	1	Pipe	Rör	5
6	93 45 091		AC, ME	1	Tube	Rör	5
7	95 26 534		1990, AC, ME	1	Thermo contact	Termokontakt	2
7	*95 26 526*		-1991, AC NLS - USE 4086724	1	Thermo contact	Termokontakt	2
7	40 86 724		1992-, AC	1	Thermo contact	Termokontakt	2
8	83 30 268		AC	1	Seal	Tätning	5
9	79 70 106			6	Hose clamp	Slangklamma	5
10	40 29 153			1	Hose	Slang	3
11	85 36 419			2	Clip	Clips	5
12	79 70 031			2	Hose clamp	Slangklamma	5
13	93 44 524		M	1	Bracket	Hållare	5
14			See page 2-147, 1-I04		Turbocharger	Turbokompressor	
15	93 49 382			1	Hose	Slang	3
16	79 70 098			2	Hose clamp	Slangklamma	5
17	75 41 527		59,107)	1	Hose	Slang	4
17	75 13 435		59,107), I, US	1	Hose	Slang	4
18	79 70 098		59,107)	2	Hose clamp	Slangklamma	5
19	79 70 056		59,107), I	1	Hose clamp	Slangklamma	5
19	79 70 049		59,107), TURBO	1	Hose clamp	Slangklamma	5
20	75 45 544		59,107)	1	Hose	Slang	4
21	42 84 311		108), I	1	Hose	Slang	4
21	42 84 436		108), TURBO	1	Hose	Slang	4
22	42 84 303		108)	1	Hose	Slang	4
23	41 21 695		108)	1	Hose	Slang	5
24	41 21 703		108)	1	Hose	Slang	5
25	40 73 706		108)	1	By-pass valve	By-passventil	5
26	79 70 080		108)	2	Hose clamp	Slangklamma	5
27	79 70 098		108)	1	Hose clamp	Slangklamma	5
28	79 70 056		108), I	1	Hose clamp	Slangklamma	5
28	79 70 049		108), TURBO	1	Hose clamp	Slangklamma	5

59. For cars with by-pass valve, see ST No 854-043. För bilar med by-passventil, se ST No 854-043.
107. Ch.-M2500244, -M7021037.
108. Ch.M2500245-, M7021038-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
8A	Electrical, general	2-A02
8B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D1_
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


Cooling system

1-H14

Air oil cooler
Engine and aut. transm.

Kylsystem

Luftoljekylare
Motor och automatlåda

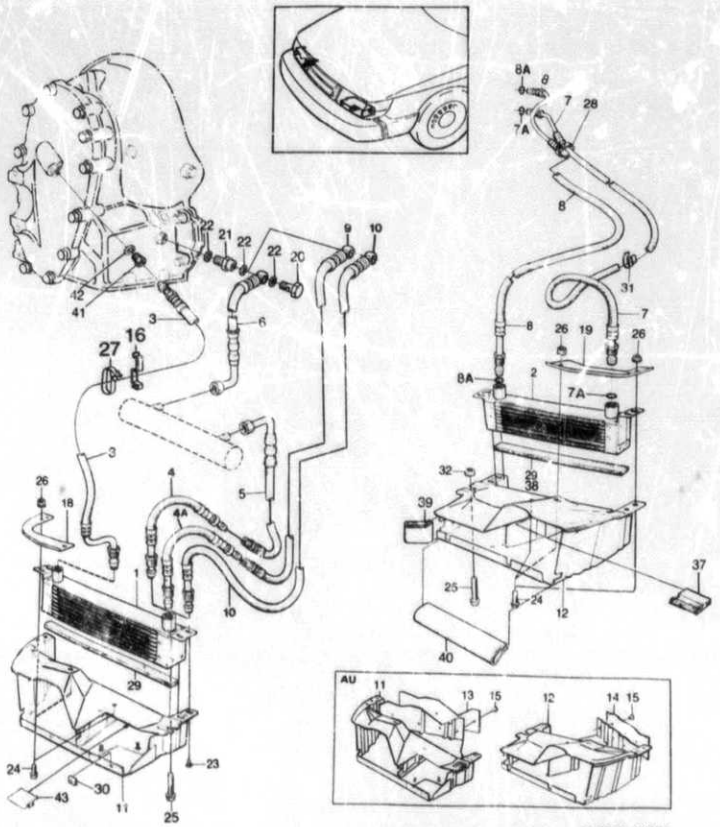

1623	Pos	Part No/Art nr	K S	Notes/Anm.Anteckningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 46 963		A	1	Oil cooler	Oljekylare	4
0020	2	75 46 567			1	Oil cooler engine	Oljekylare motor	4
0025								
0030	3	75 49 868		A	1	Hydraulic hose	Hydraulslang	3
0040	4	*75 47 847*		A NLS	1	Hydraulic hose	Hydraulslang	3
0050	4A	*75 47 847*		44), A NLS	1	Hydraulic hose	Hydraulslang	3
0060	5	75 44 372		A	1	Hydraulic hose	Hydraulslang	4
0070	6	75 46 385		A	1	Hydraulic hose	Hydraulslang	4
0080	7	75 46 476			1	Hydraulic hose engine	Hydraulslang motor	3
0085								
0090	7A	79 77 580			2	▪O-ring	▪O-ring	2
0100	8	75 46 484			1	Hydraulic hose engine	Hydraulslang motor	3
0105								
0110	8A	79 77 580			2	▪O-ring	▪O-ring	2
0120	9	75 47 821		44), A	1	Hydraulic hose	Hydraulslang	3
0130	10	41 18 204		45), A	1	Hydraulic hose	Hydraulslang	3
0140	11	75 46 922		RH	1	Cassette	Kassett	5
0150	11	75 47 029		RH, AU	1	Cassette	Kassett	5
0160	12	75 46 773		LH	1	Cassette	Kassett	5
0170	12	75 47 003		LH, AU	1	Cassette	Kassett	5
0180	13	75 44 448		67)	1	▪Baffle	▪Stänkskydd	
0190	14	75 44 430		68)	1	▪Baffle	▪Stänkskydd	4
0200	15	82 35 178			8	▪Pop rivet	▪Popnit	5
0210	16	42 79 287		1991-, A	2	Hose retainer	Slanghållare	5
0220	18	75 40 313		A	1	Stiffening bar	Förstyvningsskena	3
0230	19	75 40 305			1	Stiffening bar engine	Förstyvningsskena motor	5
0235								
0240	20	*93 01 532*		115) NLS - USE 4374211	1	Banjo screw	Banjoskruv	5
0245	20	*83 22 927*		116) NLS - USE 4374211	1	Banjo bolt	Hålbult	5
0250	21	75 40 032			1	Nipple	Nippel	5
0260	22	89 81 961		-1992	3	Seal	Tätning	5
0265	22	41 61 162		1993-	3	Seal	Tätning	5
0270	23	79 22 891			4	Screw	Skruv	5
0280	24	80 59 586			8	Screw	Skruv	5
0290	25	79 74 447			2	Screw	Skruv	5
0300	26	79 71 658			8	Nut	Mutter	5
0310	27	79 71 880		1990, A	3	Tensioning band	Spännband	4
0320	28	79 71 880			1	Tensioning band engine	Spännband motor	4
0325								
0330	29	75 41 519			1	Seal	Tätning	4
0340	30	79 75 741			4	Nut	Mutter	5
0350	31	75 42 715		ENGINE	1	Clip	Clips	5
0360	32	79 75 220			2	Nut	Mutter	5
0370	37	75 48 787			1	Seal	Tätning	4
0380	38	75 46 955			1	Seal	Tätning	4
0390	39	75 48 795			1	Seal	Tätning	4
0400	40	75 48 803			1	Seal	Tätning	4
0410	41	75 46 971			1	Nipple	Nippel	5
0420	42	75 99 426			1	Seal	Tätning	4
0430	43	75 48 787			1	Seal	Tätning	4
0440								
0450		93 37 270		See page 2-157, 1-I14	X	Oil cooler kit engine	Oljekylarsats motor	4
0460								
0465								
0470		*93 20 268*		A	X	Conversion kit	Konverteringssats	3
0480				See page 4-059, 3-C12				
0490				NLS				


44. Ch. --L5000072, --L7003959.
45. Ch. L5000073--, L7003960--.
67. Part of 75 47 029. Del av 75 47 029.
68. Part of 75 47 003. Del av 75 47 003.
115. Ch --N2006153.
116. Ch N2006154--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

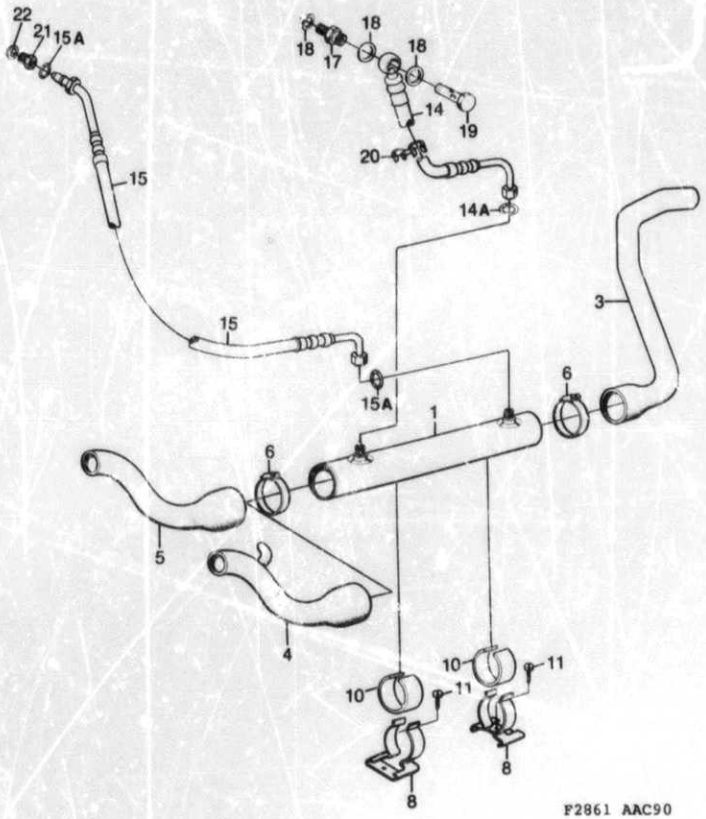

F2861 AAC90

Cooling system
Kylsystem

1--H16 Coolant oil cooler Automatic transmission

Kylvätskeoljekylare Automatväxellåda

1650	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 47 730			1	Oil cooler	Oljekylare	4
0020	3	93 63 615			1	Hose	Slang	
0030	4	75 48 829		53), TURBO	1	Hose	Slang	3
0040	4	41 21 802		54), TURBO	1	Hose	Slang	3
0050	5	*75 48 811*		53), I NLS - USE 4121810	1	Hose	Slang	3
0060	5	41 21 810		54), I	1	Hose	Slang	3
0070	6	79 70 130	S		2	Hose clamp	Slangklamma	5
0080	8	75 40 917			2	Bracket	Hållare	5
0090	10	93 01 383			2	Rubber spacer	Gummimellanlägg	4
0100	11	79 22 891			2	Screw	Skruv	5
0110	14	75 47 813			1	Hydraulic hose	Hydraulslang	3
0120	14A	79 77 680			2	O-ring	O-ring	2
0130	15	75 47 805			1	Hydraulic hose	Hydraulslang	4
0140	15A	79 77 580			1	O-ring	O-ring	2
0150	17	75 40 032			1	Nipple	Nippel	5
0160	18	89 81 961			3	Seal	Tätning	5
0170	19	*93 01 532*		NLS - USE 4374211	1	Banjo screw	Banjoskruv	5
0180	20	75 59 768			1	Clip	Clips	5
0190	21	75 46 971			1	Nipple	Nippel	5
0200	22	75 99 426			1	Seal	Tätning	4

53. Ch. --L3006202. --L7022116.
54. Ch. L3006203--, L7022117--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-H18

Charge cooler — Laddluftkylare

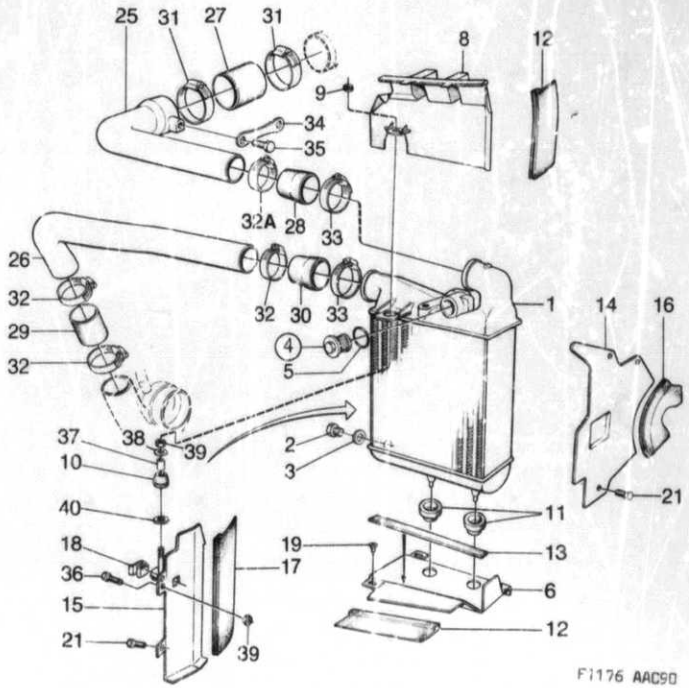

1660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	75 99 418			1	Charge air cooler	Laddluftkylare	4
0030	2	75 40 610			1	Plug	Plugg	5
0040	3	75 40 628			1	Gasket	Packning	2
0050	4	75 50 023			1	Valve	Ventil	2
0060	5	79 72 797			1	O-ring	O-ring	2
0070	6	75 13 070			1	Bracket	Fäste	5
0080	8	75 44 505			1	Bracket	Fäste	5
0090	9	95 73 966			1	Bushing	Bussning	4
0100	10	75 43 762			1	Rubber bushing	Gummibussning	5
0110	11	75 12 593			2	Rubber bushing	Gummibussning	5
0120	12	75 13 096			2	Seal	Tätning	2
0130	13	75 13 112			1	Seal	Tätning	2
0150	14	75 47 623			1	Plate	Plåt	5
0170	14	75 47 631		US	1	Plate	Plåt	5
0180	15	75 43 846			1	Side plate	Sidoplåt	5
0190	16	75 12 775			1	Seal	Tätning	2
0200	17	75 12 742			1	Seal	Tätning	2
0210	18	79 58 861			1	Clamp	Klammer	5
0235	19	79 72 490			3	Rivet	Nit	5
0240	21	79 73 159			4	Screw	Skruv	5
0255	25	89 77 787			1	Tube	Rör	5
0265	26	89 78 314			1	Tube	Rör	5
0270	27	75 26 262			1	Hose	Slang	5
0285	28	89 76 037			1	Hose	Slang	5
0290	29	75 26 288			1	Hose	Slang	5
0300	30	75 26 841			1	Hose	Slang	5
0310	31	79 70 155			2	Hose clamp	Slangklamma	5
0320	32	79 70 130			3	Hose clamp	Slangklamma	5
0327	32A	79 70 148			1	Hose clamp	Slangklamma	5
0330	33	79 70 148			2	Hose clamp	Slangklamma	5
0340	34	75 06 645			2	Striker plate	Låsbleck	3
0350	35	79 72 807			2	Screw	Skruv	5
0360	36	79 65 544			1	Screw	Skruv	5
0370	37	75 44 356			1	Spacer tube	Distansrör	5
0380	38	79 75 469			1	Washer	Bricka	5
0390	39	79 71 658			2	Nut	Mutter	5
0400	40	75 49 041			1	Spacer washer	Distansbricka	4


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-H20

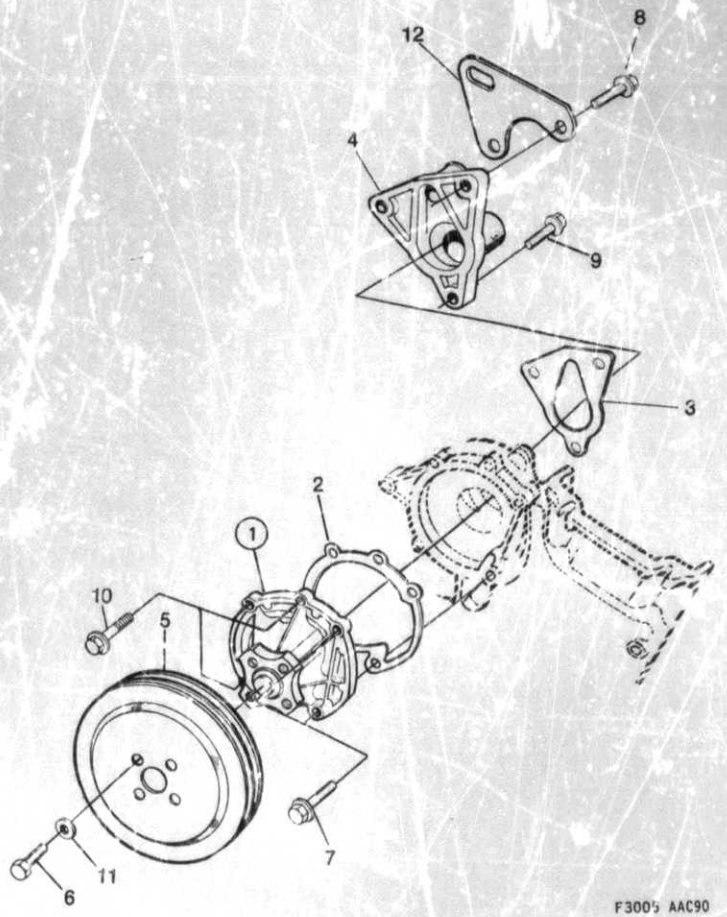

1700	Pos	Part No/Art nr	K S	Num/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 900		7)	1	Coolant pump	Kylvätskepump	2
0015				See page 2-157, 1-H14				
0020	2	75 66 516			1	*Gasket	*Packning	2
0030	3	75 63 687			1	*Gasket	*Packning	2
0040	4	93 55 181			1	Cover	Lock	4
0050	5	75 01 943			1	Pulley	Remskiva	6
0060	6	*80 19 903*		NLS - USE 9166281	4	Screw	Skruv	5
0070	7	81 25 262			2	Screw	Skruv	5
0080	8	81 25 205			2	Screw	Skruv	5
0090	9	81 25 197			1	Screw	Skruv	5
0100	10	81 25 197			3	Screw	Skruv	5
0110	11	*80 73 223*		-1992 NLS - USE 9166380	4	Washer	Bricka	5
0115	11	91 66 380		1993-	4	Washer	Bricka	5
0120	12	93 13 222			1	Brace	Bygel	6


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

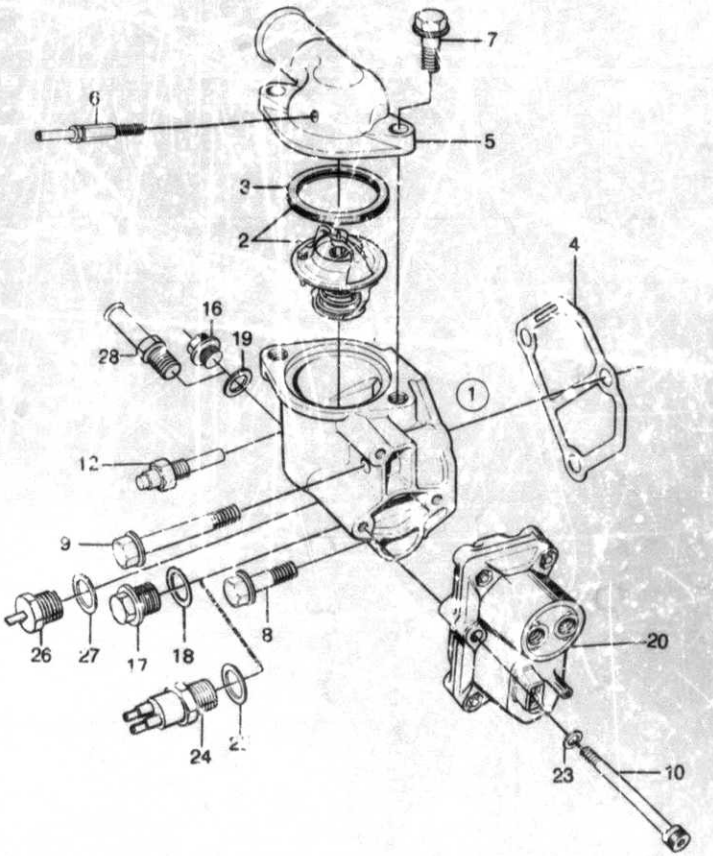

F1178 AAC90

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 11 697		I	1	Thermostat housing	Termostathus	5
0020	1	83 89 512		89° C	1	Thermostat kit	Termostatsats	1
00	2	93 20 284		69), 92° C	1	Thermostat kit	Termostatsats	6
0040	2	93 36 835		82° C, ME, FE	1	Thermostat kit	Termostatsats	2
0050	3	83 52 682	S		1	Gasket	Packning	2
0060	4	75 66 532			1	Gasket	Packning	2
0070	5	83 69 985			1	Cover	Lock	5
0080	6	93 07 497		47)	1	Valve	Ventil	5
0090	6	81 59 225		48)	1	Valve	Ventil	5
0100	7	90 82 968		-1992	2	Screw	Skruv	5
0105	7	91 66 331		1993-	2	Screw	Skruv	5
0110	8	81 25 205			2	Screw	Skruv	5
0120	9	81 25 262			1	Screw	Skruv	5
0130	10	93 50 661			2	Screw	Skruv	5
0140	12	88 00 914		47) NLS - USE 9108 291	1	Sensor	Givare	2
0150	12	86 59 233		48) NLS - USE 9108 291	1	Sensor	Givare	2
0160	16	87 23 721		NLS - USE 7563047	1	Plug	Propp	5
0170	17	87 23 721		NLS - USE 7563047	1	Plug	Propp	5
0180	18	81 24 141			1	Seal	Tätning	5
0190	19	81 24 141			1	Seal	Tätning	5
0200	20	91 17 877		I	1	Warming up regulator	Varmkörningsregulator	3
0210	23	80 29 951		-1992	2	Washer	Bricka	5
0215	23	91 66 304		1993-	2	Washer	Bricka	5
0220	24	88 57 443			1	Thermo monitor	Temperaturvakt	2
0230	25	81 24 141			1	Seal	Tätning	5
0240	26	93 61 362			1	Thermo time sensor	Termotidgivare	3
0250	27	81 24 141			1	Seal	Tätning	5
0260	28	74 86 806			1	Nipple	Nippel	5

47. Engine -L030814.
48. Engine L030815-.
69. Cold markets. Kalla marknader.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, control housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

Cooling system

1-H24 Thermostat, etc B202 and B212

Kylsystem

Termostat, etc 9202 och B212

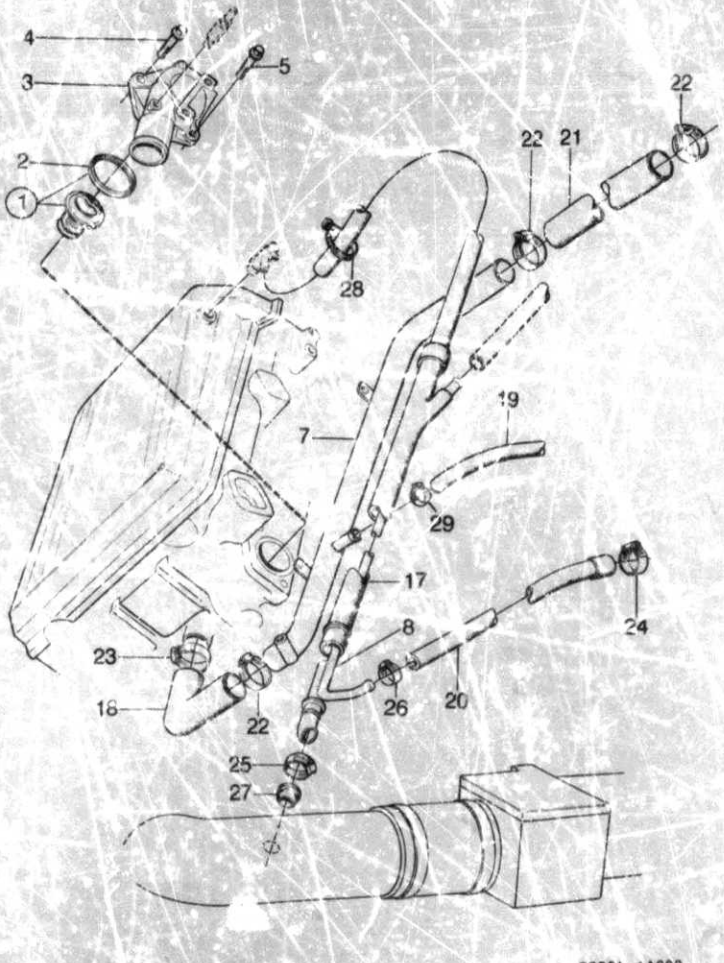

1775	Pos	Part No/Art nr	K S	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 298		B9*C	1	Thermostat kit	Termostatsats	1
0020	1	88 17 538		B2*C	1	Thermostat kit	Termostatsats	1
0030	2	93 92 692			1	Gasket	Packning	2
0040	3	91 17 516			1	Cover	Lock	5
0050	4	81 21 199			2	Screw	Skruv	5
0060	4	81 25 199		TURBO	1	Screw	Skruv	5
0070	5	81 25 197		1990, TURBO	1	Screw	Skruv	5
0080	5	81 25 199		1991-, TURBO	1	Screw	Skruv	5
0090	7	74 80 753			1	Water pipe	Vattenrör	5
0100	8	88 59 540		TURBO	1	Tube	Rör	5
0110	17	75 17 014		TURBO	1	Hose	Slang	4
0120	17	75 23 913			1	Hose	Slang	2
0130	18	75 04 824			1	Hose	Slang	5
0140	19	74 82 953			1	Hose	Slang	5
0150	20	75 19 531		TURBO	1	Hose	Slang	4
0160	21			See page 2-131, 1-H12	1	Hose	Slang	
0170	22			See page 2-131, 1-H12	3	Hose clamp	Slangklamma	
0180	23	79 70 098			1	Hose clamp	Slangklamma	5
0190	24	79 70 056		TURBO	1	Hose clamp	Slangklamma	5
0200	25	79 63 523		TURBO	1	Hose clamp	Slangklamma	5
0210	26	79 70 049		TURBO	1	Hose clamp	Slangklamma	5
0220	27	75 17 147		TURBO	1	Bushing	Bussning	5
0230	28	*18 00 259*		1990 NLS - USE 8153611	1	Tensioning band	Spännband	5
0240	28	81 53 611		1991-		Tensioning band	Spännband	5
0250	29	79 70 056		TURBO	2	Hose clamp	Slangklamma	5
0260	29	79 63 515		B212	2	Hose clamp	Slangklamma	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-I02

Accelerator control
Gasreglage

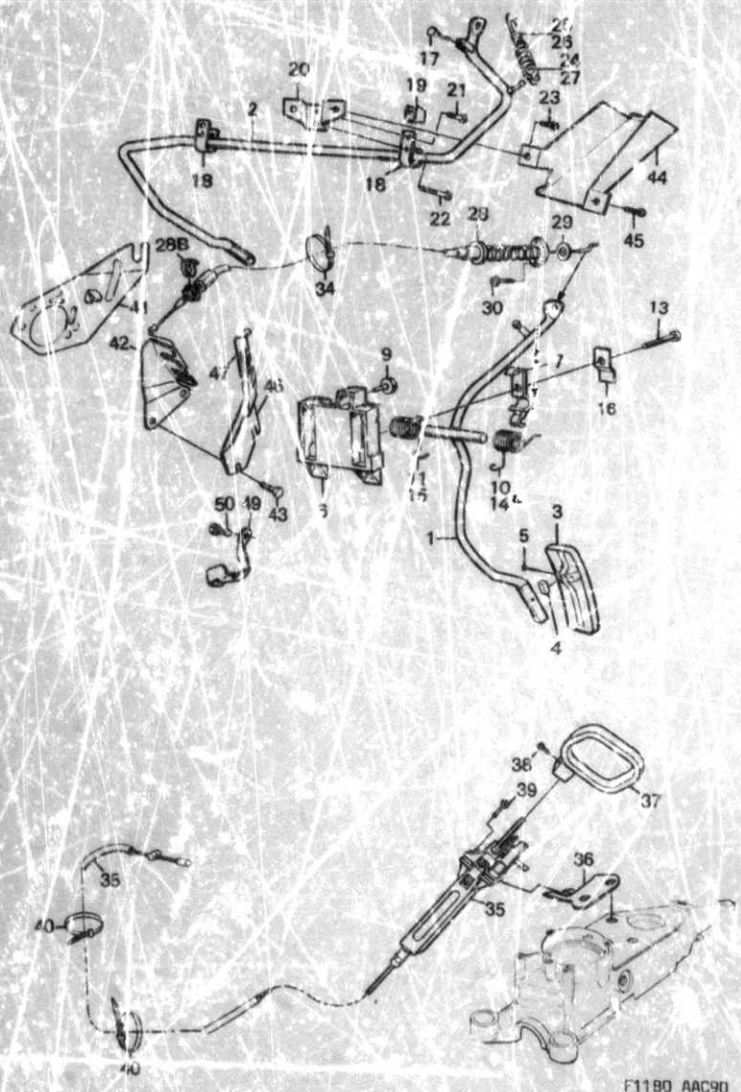

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 90 913			1	Accelerator arm	Gaspedalarm	6
0030	2	89 86 192		RHD	1	Accelerator arm	Gaspedalarm	6
0040	3	71 83 965			1	Pedal plate	Pedalplatta	6
0060	4	71 83 973			1	Spacer	Mellanlägg	6
0070	5	79 58 770			1	Rivet	Nit	5
0080	6	89 35 389			1	Bracket	Konsol	6
0090	7	89 35 397			2	Cap	Överfall	6
0100	9	82 06 203			1	Plug	Plugg	5
0110	10	89 41 601		M	1	Spring	Fjäder	
0120	11	89 41 619		M	1	Spring	Fjäder	5
0130	13	80 97 933			2	Screw	Skruv	5
0140	14	89 39 480		A	1	Spring	Fjäder	5
0150	15	89 39 488		A	1	Spring	Fjäder	5
0160	16	89 40 587			2	Brace	Bygel	6
0170	17	70 35 801		RHD	1	Buffer	Buffert	3
0180	18	*89 41 528*		RHD NLS	2	Brace	Bygel	6
0190	19	89 41 536		RHD	2	Lug	Klack	6
0200	20	*89 41 155*		RHD NLS	1	Bracket	Fäste	6
0210	21	79 22 891		RHD	2	Screw	Skruv	5
0220	22	79 22 933		RHD	2	Screw	Skruv	5
0230	23	80 59 552		RHD	2	Screw	Skruv	5
0240	24	89 41 544		RHD, M	1	Spring	Fjäder	5
0250	25	*89 41 551*		RHD, M NLS	1	Spring	Fjäder	5
0260	26	*89 41 569*		RHD, A NLS	1	Spring	Fjäder	5
0270	27	*89 41 577*		RHD, A NLS	1	Spring	Fjäder	5
0300	28	75 23 102		I, M	1	Cable	Kabel	3
0310	28	75 37 525		C, M	1	Cable	Kabel	3
0320	28	75 33 110		A	1	Cable	Kabel	3
0330	28B	75 33 136			1	Locking ring	Säkringsring	5
0350	29	93 16 142			1	Seal	Tätning	6
0370	30	79 22 438			2	Screw	Skruv	5
0400	34	79 71 864			1	Tensioning band	Spännband	5
0420	35	75 37 269			1	Choke control	Chokereglage	3
0430	36	93 48 004			1	Stay	Stag	6
0440	37	93 47 956			1	Handle	Handtag	
0450	38	79 73 589			1	Screw	Skruv	5
0460	39	79 22 818			1	Screw	Skruv	5
0470	40	79 71 880		C	2	Tensioning band	Spännband	4
0480	41	75 06 934			1	Bracket	Hållare	5
0490	42	75 20 349		I	1	Bracket	Fäste	6
0500	43	*80 19 903*		NLS - USE 9166281	2	Screw	Skruv	5
0510	44	89 43 391		RHD	1	Plate	Plåt	6
0520	45	79 22 420			1	Screw	Skruv	5
0530	46	75 21 123			1	Bracket	Konsol	6
0540	47			See page 4-013, 3-A14		Plate	Platta	
0560	49	75 81 432		C, A	1	Bracket	Fäste	6
0570	50	80 97 875		C, A	2	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-C02
4	Transmission	3-A02
5	Brakes	3-J02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-G18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-I04

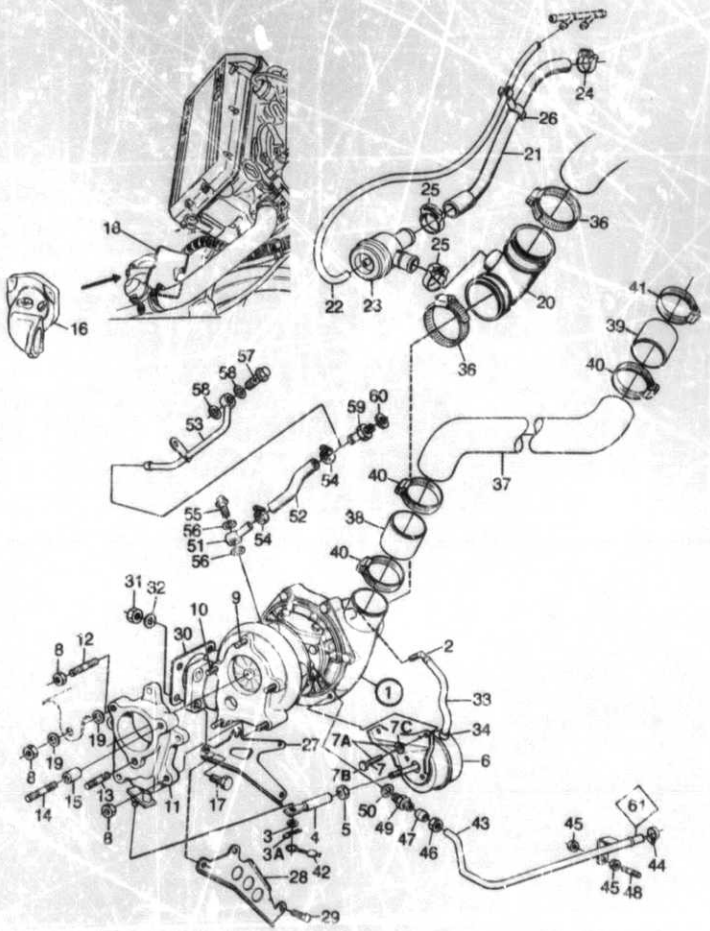

F4421 AAC90

1860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 19 306		4,7,103), EU	1	Turbocharger	Turbokompressor	4
0020	1	74 86 038		4,7,103), 1990, US	1	Turbocharger	Turbokompressor	4
0030	1	91 19 306		4,7,103), 1991-, US	1	Turbocharger	Turbokompressor	4
0040	1	91 19 033		4,7,103), US AERO (SPG)	1	Turbocharger	Turbokompressor	4
0050	1	87 89 778		4,7,103), B202S	1	Turbocharger	Turbokompressor	4
0060	1	91 19 033		5,7,103), EU, ME	1	Turbocharger	Turbokompressor	4
0070	2	87 87 319		83)	1	.Nipple	.Nippel	3
0080	2	75 65 708		85)	1	.Nipple	.Nippel	3
0090	2	87 87 301		87)	1	.Nipple	.Nippel	3
0100	3	93 50 505			1	.E-circlip	.Spårryttare	2
0110	3A	89 25 067		86)	1	.Lock needle	.Låsnål	5
0120	4	93 56 338		89)	1	.End piece	.Ändstycke	3
0130	5	93 50 570		89)	1	.Nut	.Mutter	5
0140	6	93 21 431		86)	1	.Pressure regulator	.Tryckregulator	4
0150	6	93 21 449		84)	1	.Pressure regulator	.Tryckregulator	4
0160	6	93 21 720		85)	1	.Pressure regulator	.Tryckregulator	4
0170	6	88 19 955		87)	1	.Pressure regulator	.Tryckregulator	4
0180	7	93 50 471		89)	6	.Screw	.Skruv	5
0190	7A	87 88 754		83)	1	.Screw	.Skruv	5
0200	7A	*87 87 277*		88) NLS - USE 8788754	2	..Screw	..Skruv	5
0210	7B	*87 87 285*		84) NLS - USE 8788764	2	..Washer	..Bricka	5
0220	8	75 19 432		85)	4	.Nut	.Mutter	5
0230	8	75 19 432		87)	8	.Nut	.Mutter	5
0240	9	75 65 716		88)	5	.Stud	.Pinnskruv	5
0250	9	75 65 716		89)	1	.Stud	.Pinnskruv	5
0260	10	75 66 653		89)	4	.Stud	.Pinnskruv	5
0270	11	87 87 335		88)	1	.Cover	.Lock	5
0280	11	75 65 724		89)	1	.Cover	.Lock	4
0290	12	75 20 215			1	Screw	Skruv	5
0300	13	75 20 208			1	Screw	Skruv	5
0310	14	75 20 190			1	Stud	Pinnskruv	5
0320	15	83 67 864			2	Sleeve	Hylsa	4
0330	16	75 17 378			1	Flange coupling	Flänskoppling	4
0340	16	75 24 168		US	1	Flange coupling	Flänskoppling	4
0350	17	91 48 744			4	Screw	Skruv	5
0360	18	75 17 089			1	Heat shield	Strålningsskydd	5
0370	19	80 29 985			2	Washer	Bricka	5
0380	20	75 28 995			1	Hose	Slang	5
0390	21	75 33 185			1	Hose	Slang	5
0400	22	91 36 243		L=670 MM	1	Vaccum hose	Vakuumslang	5
0410	23	*93 90 022*		123,129) NLS - USE 4391157	1	Valve	Ventil	2
0412	23	43 91 157		124,129)	1	Valve	Ventil	2
0420	24	79 70 064			1	Hose clamp	Slangklamma	5
0430	25	*79 77 234*		117) NLS - USE 7970098	2	Hose clamp	Slangklamma	5
0440	25	79 70 098		118)	2	Hose clamp	Slangklamma	5
0450	26	73 98 233			1	Clamp	Klammer	5
0460	27	75 13 674		A	1	Stay	Stag	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
84. Part of 91 19 306. Del av 91 19 306.
85. Part of 74 86 038. Del av 74 86 038.
86. Part of 91 19 033. Del av 91 19 033.
87. Part of 87 89 778. Del av 87 89 778.
88. Part of 91 19 033 and 91 19 306. Del av 91 19 033 och 91 19 306.
89. Part of 74 86 038 and 87 89 778. Del av 74 86 038 och 87 89 778.
103. With basic charging pressure. Med grundladdtryck.
117. Ch -N2005415.
118. Ch N2005416-.
123. Ch -N2020180 -N7010472.
124. Ch N2020181-, N7010473-.
129. See SI 241-1415. Se SI 241-1415.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

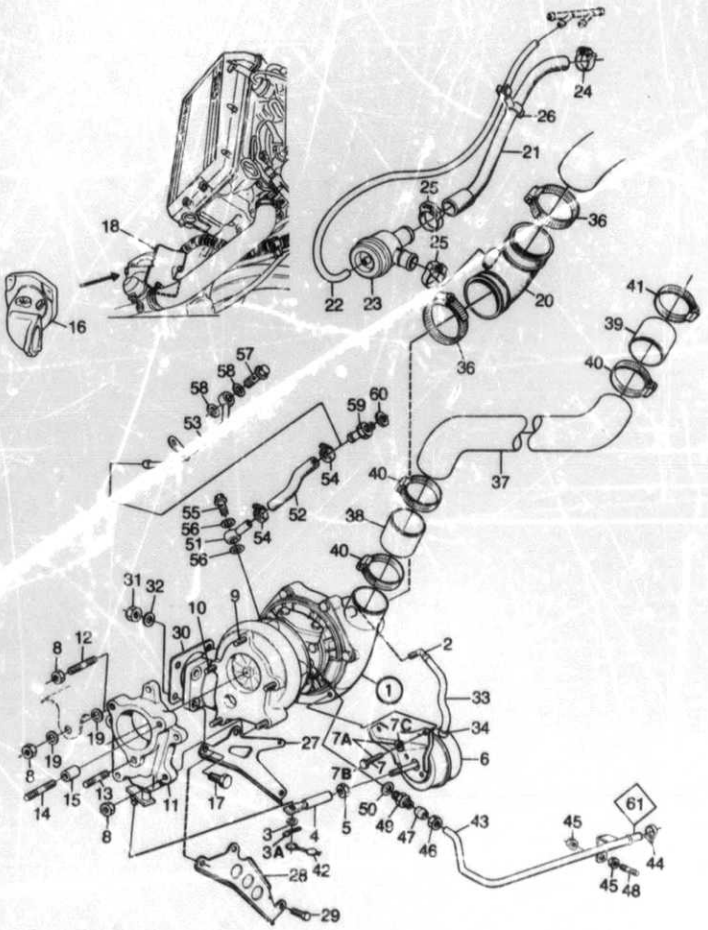

1860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	28	75 13 682		M	1	Stay	Stag	
0480	29	*90 82 976*		A NLS - USE 8083933	2	Screw	Skruv	5
0490	29	80 83 941		M	2	Screw	Skruv	5
0500	30	83 66 762			1	Gasket	Packning	2
0510	31	75 19 291			4	Nut	Mutter	5
0520	32	*80 30 009*		-1992 NLS - USE 7985179	4	Washer	Bricka	5
0525	32	79 85 179		1993-	4	Washer	Bricka	5
0530	33	93 50 372		87)	1	Hose	Slang	3
0540	34	93 50 380			2	Clamp	Klammer	5
0550	34	79 73 522		87)	2	Hose clamp	Slangklamma	5
0560	36	79 70 148			2	Hose clamp	Slangklamma	5
0570	37	40 22 190		B202S	1	Tube	Rör	2
0580	38	75 26 288		B202S	1	Hose	Slang	5
0590	39	40 22 182		B202S	1	Hose	Slang	2
0600	40	79 70 130		B202S	3	Hose clamp	Slangklamma	5
0610	41	79 70 155		B202S	1	Hose clamp	Slangklamma	5
0620								
0630	42	88 18 569		See page 2-153, 1-I10	X	Sealing kit	Plomberingssats	2
0640								
0650	43	75 49 918		M	1	Tube	Rör	5
0660	43	75 49 926		A	1	Tube	Rör	5
0670	44	79 70 049			1	Hose clamp	Slangklamma	5
0680	45	79 67 953			4	Nut	Mutter	5
0690	46	81 45 542			1	Nut	Mutter	5
0700	47	81 32 227			1	Ferrule	Skärring	5
0710	48	75 49 991		M	2	Stud	Pinnskruv	5
0720	48	75 99 509		A	2	Stud	Pinnskruv	5
0730	49	75 84 790			1	Nipple	Nippel	5
0740	50	81 24 158			1	Gasket	Packning	2
0750	51	75 88 718		1990	1	Tube	Rör	5
0760	51	78 59 903		1991-	1	Tube	Rör	5
0770	52	74 82 953		1990	1	Hose	Slang	5
0780	52	78 59 911		1991-	1	Hose	Slang	5
0790	53	74 81 427		1990	1	Water pipe	Vattenrör	5
0800	54	79 63 515			2	Hose clamp	Slangklamma	5
0810	55	75 83 628			1	Screw	Skruv	5
0820	56	81 24 158			2	Gasket	Packning	2
0830	57	81 23 903		1990	1	Banjo screw	Banjoskruv	5
0840	58	81 24 141		1990	2	Seal	Tätning	5
0850	59	74 86 806		1991-	1	Nipple	Nippel	5
0860	60	*83 26 712*		1991- NLS - USE 4161162	1	Seal	Tätning	5
0870								
0880	61			See page 2-131, 1-H12		Water hoses, etc	Vattenslangar, etc	
0890								
0900		91 36 243		L=5000 MM	X	Vacuum hose	Vakuumslang	5

87. Part of 87 89 778. Del av 87 89 778.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

1-108

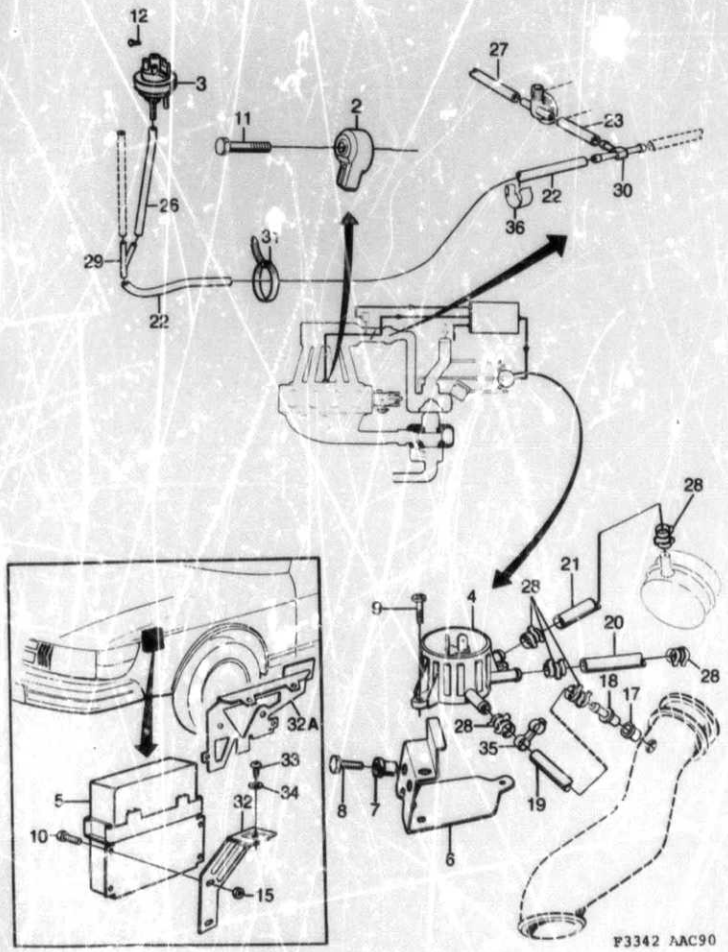

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	75 68 801			1	Knock sensor	Knacksensor	3
0020	3	93 42 064			1	Pressure sensor	Tryckgivare	3
0030	4	75 17 477			1	Solenoid valve	Magnetventil	3
0040	5	75 66 599		4)	1	Electronic unit	Elektronikenhet	3
0050	5	88 57 427		4), -1991, AERO (SPG), US, CA	1	Electronic unit	Elektronikenhet	3
0055					1			
0060	5	75 24 127		5)	1	Electronic unit	Elektronikenhet	3
0070	5	91 19 330		BE, 157 HP (116 KW)	1	Electronic unit	Elektronikenhet	3
0075	5	75 83 172		4,7) 175 HP (129 KW)	1	Electronic unit	Elektronikenhet	3
0078	5	43 93 971		185 HP (137 KW)	1	Electronic unit	Elektronikenhet	3
0080	6	93 42 239			1	Bracket	Konsol	5
0090	7	79 73 456			2	Expanding nut	Expandermutter	5
0100	8	80 19 721		1990	2	Screw	Skruv	5
0110	8	*79 78 360*		1991- NLS - USE 8029944, 8059420	2	Screw	Skruv	5
0120	9	79 22 800			2	Screw	Skruv	5
0130	10	80 19 713			4	Screw	Skruv	5
0140	11	81 25 197			1	Screw	Skruv	5
0150	12	79 72 359			2	Screw	Skruv	5
0160	15	79 73 365			4	Nut	Mutter	5
0170	17	83 25 656			1	Bushing	Bussning	4
0180	18	*93 42 270*		NLS - USE 4160263	1	Nipple	Nippel	3
0190	19	75 25 777			1	Hose	Slang	3
0200	20	75 10 266			1	Hose	Slang	3
0210	21	93 42 619			1	Hose	Slang	3
0220	22	91 36 243		L=500 MM	1	Vaccum hose	Vakuumslang	5
0230	23	91 36 243		L=30 MM	1	Vaccum hose	Vakuumslang	5
0240	23	91 36 243		B202S, L=1250 MM	1	Vaccum hose	Vakuumslang	5
0250	26	91 36 243		L=90 MM	2	Vaccum hose	Vakuumslang	5
0260	27	91 36 243		L=1670 MM	1	Vaccum hose	Vakuumslang	5
0270	28	79 73 522			6	Hose clamp	Slangklamma	5
0280	29	86 09 002			1	Tube	Rör	2
0290	30	83 66 791			1	Pipe	Rör	4
0300	31	79 71 880			2	Tensioning band	Spännband	4
0310	32	75 25 744			2	Bracket	Konsol	5
0320	32A			ABS	1	Bracket	Konsol	
0330				See page 3A-069, 2-C22				
0340	33	80 59 396		78)	2	Screw	Skruv	5
0350	33	98 49 514		79)	2	Rivet	Nit	5
0360	34	80 29 944			2	Washer	Bricka	5
0370	35	73 98 399			1	Clamp	Klammer	5
0380	36	79 33 443			2	Clip	Clips	5
0390								
0400		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
78. Ch –M5008239, –M7015802
79. Ch M5008240–, M7015803–.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H05
Engine control	1-J02
Supercharging system	1-I04
Complete sets	1-I10


1-I10

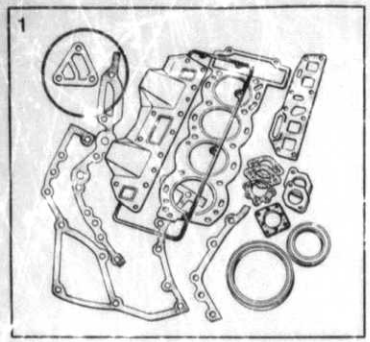


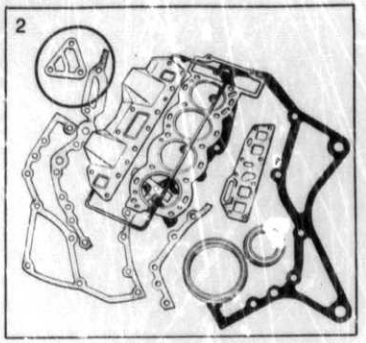

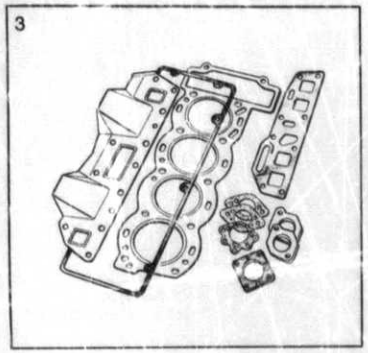

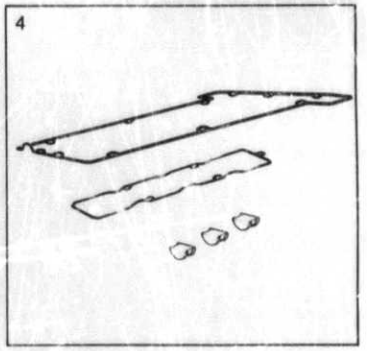

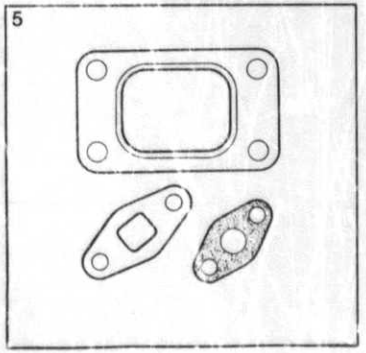

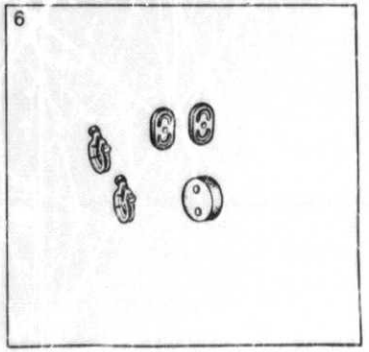

F3593 - AAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0010	1	93 37 213		C	X	Gasket kit	Packningssats	3
0020		75 85 037			1	.Gasket	.Packning	2
0030		93 55 991			1	.Gasket	.Packning	1
0040		75 89 039			1	.Gasket	.Packning	2
0050		*93 50 158*		NLS - USE 8787764	1	.Seal	.Tätning	2
0060		93 09 204			1	.Seal	.Tätning	2
0070		*91 17 847*		NLS - USE 9321795	1	.Gasket	.Packning	2
0080		*91 17 839*		NLS - USE 9321795	1	.Gasket	.Packning	2
0090		75 69 346			1	.Gasket	.Packning	2
0100		75 61 772			1	.Gasket	.Packning	2
0110		75 66 433			1	.Gasket	.Packning	4
0120		91 25 824			1	.O-ring	.O-ring	2
0130		75 88 981			1	.Gasket	.Packning	4
0140		75 88 916		T	2	.Gasket	.Packning	4
0150		83 74 639		C	1	.Gasket	.Packning	4
0160		83 36 877		T	2	.Gasket	.Packning	4
0170								
0180	2	93 37 221		B201I	X	Gasket kit	Packningssats	3
0190		75 85 037			1	.Gasket	.Packning	2
0200		93 55 991			1	.Gasket	.Packning	1
0210		75 89 039			1	.Gasket	.Packning	2
0220		*93 50 158*		NLS - USE 8787764	1	.Seal	.Tätning	2
0230		93 09 204			1	.Seal	.Tätning	2
0240		*91 17 847*		NLS - USE 9321795	1	.Gasket	.Packning	2
0250		75 82 315			1	.Gasket	.Packning	2
0260		75 61 772			1	.Gasket	.Packning	2
0270		75 66 433			1	.Gasket	.Packning	4
0271		*75 63 661*		NLS - USE 9321795	1	.Gasket	.Packning	4
0272		*91 17 839*		NLS - USE 9321795	1	.Gasket	.Packning	2
0280		91 25 824			1	.O-ring	.O-ring	2
0290								
0291	3	93 37 247		B201I	1	Gasket kit	Sotningssats	
0292		75 85 037			1	.Gasket	.Packning	2
0293		93 55 991			1	.Gasket	.Packning	1
0294		75 82 315			1	.Gasket	.Packning	2
0295		75 61 772			1	.Gasket	.Packning	2
0296								
0300	3	88 19 831		B202	X	Gasket kit	Sotningssats	2
0310		75 84 436			1	.Gasket	.Packning	2
0320		75 18 996			1	.Gasket	.Packning	2
0330		75 85 045			1	.Gasket	.Packning	2
0340		93 21 464			1	.Gasket kit	.Packningsats	1
0350								
0360	3	93 21 597		B212	X	Gasket kit	Sotningssats	2
0370		75 18 996			1	.Gasket	.Packning	2
0380		87 87 111			1	.Gasket	.Packning	2
0390		91 26 277			1	.Gasket	.Packning	2
0400		93 21 464			1	.Gasket kit	.Packningsats	1
0410								
0420	4	*88 18 254*		40), B202 NLS - USE 9321464	X	Gasket kit	Packningsats	1
0430		75 00 069			3	.Plug	.Plugg	2
0440		*75 88 056*		NLS - USE 7569304	1	.Gasket	.Packning	1
0450		75 23 962			1	.Gasket	.Packning	1
0460								
0470	4	93 21 464		41), B202,B212	X	Gasket kit	Packningsats	1
0480		75 69 304			1	.Gasket	.Packning	1
0490		75 23 962			1	.Gasket	.Packning	1
0500								
0510	5	88 17 264		TURBO	X	Gasket kit	Packningsats	2
0520		83 66 262			1	.Gasket	.Packning	2

40. Engine -L015906.
41. Engine L015907-.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


1-I12

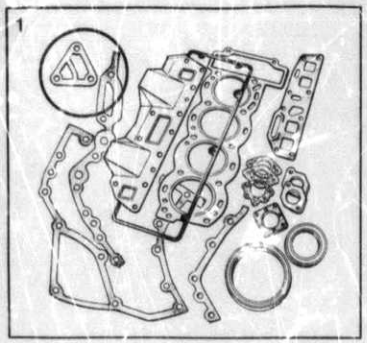

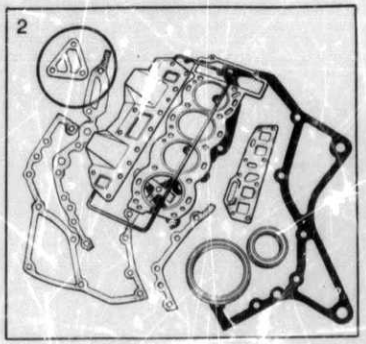

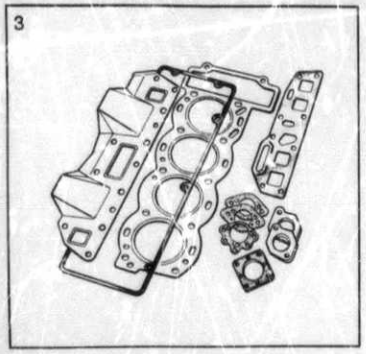

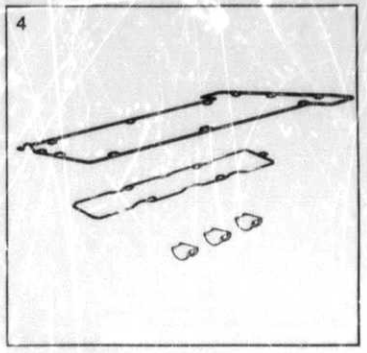

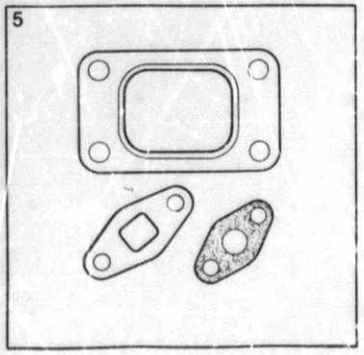



F3593 - AAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Anta	Description	Benämning	S L
0530		75 07 700			1	.Gasket	.Packning	4
0540		75 18 970			1	.Gasket	.Packning	4
0550								
0560	6	93 21 555		C, I	X	Mounting kit	Monteringssats	2
0570		83 86 450			2	.Clamp	.Klammer	1
0580		93 28 105			2	.Rubber mounting	.Gummiupphängning	1
0590		93 65 404			1	.Rubber mounting	.Gummiupphängning	1
0600								
0610	6	93 21 563		TURBO	X	Mounting kit	Monteringssats	2
0620		83 36 406			2	.Clamp	.Klammer	1
0630		93 28 105			2	.Rubber mounting	.Gummiupphängning	1
0640		93 65 404			1	.Rubber mounting	.Gummiupphängning	1

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


1-I14


Engine
Motor

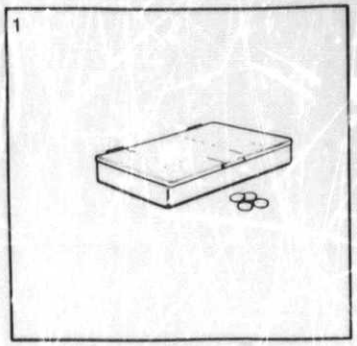


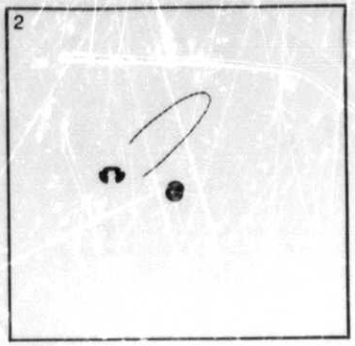

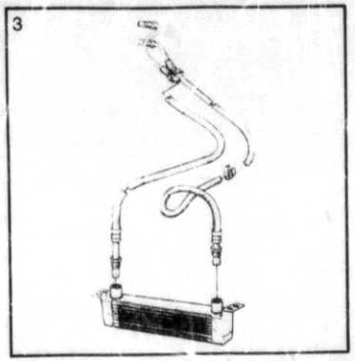

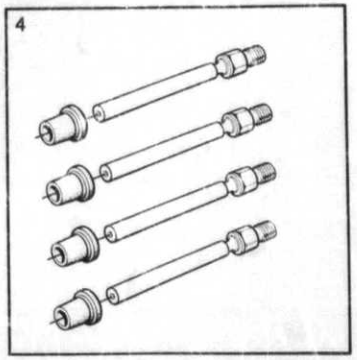

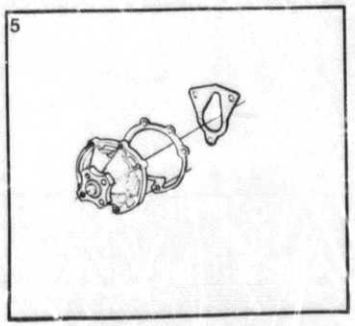

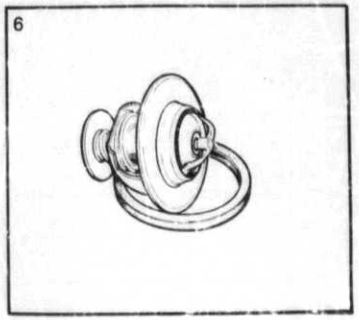

F4290 AAC90

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 728			X	Valve adjustment kit	Ventiljusteringssats	2
0020		83 92 003		1)	3	.Box	.Låda	6
0030		83 08 215		1,78 MM	5	.Adjusting washer	.Justerbricka	2
0040		83 08 223		1,83 MM	5	.Adjusting washer	.Justerbricka	2
0050		83 08 231		1,88 MM	5	.Adjusting washer	.Justerbricka	2
0060		83 08 249		1,93 MM	5	.Adjusting washer	.Justerbricka	2
0070		83 08 256		1,98 MM	5	.Adjusting washer	.Justerbricka	2
0080		83 08 264		2,03 MM	5	.Adjusting washer	.Justerbricka	2
0090		83 08 272		2,08 MM	5	.Adjusting washer	.Justerbricka	2
0100		83 08 280		2,13 MM	5	.Adjusting washer	.Justerbricka	2
0110		83 08 298		2,18 MM	5	.Adjusting washer	.Justerbricka	2
0120		83 08 306		2,24 MM	5	.Adjusting washer	.Justerbricka	2
0130		75 24 275		2,27 MM	5	.Adjusting washer	.Justerbricka	2
0140		75 24 291		2,29 MM	5	.Adjusting washer	.Justerbricka	2
0150		75 24 317		2,31 MM	5	.Adjusting washer	.Justerbricka	2
0160		75 24 333		2,33 MM	5	.Adjusting washer	.Justerbricka	2
0170		75 24 358		2,35 MM	5	.Adjusting washer	.Justerbricka	2
0180		75 24 374		2,37 MM	5	.Adjusting washer	.Justerbricka	2
0190		75 24 390		2,39 MM	5	.Adjusting washer	.Justerbricka	2
0200		75 24 416		2,41 MM	5	.Adjusting washer	.Justerbricka	2
0210		75 24 432		2,43 MM	5	.Adjusting washer	.Justerbricka	2
0220		75 24 457		2,45 MM	5	.Adjusting washer	.Justerbricka	2
0230		75 24 473		2,47 MM	5	.Adjusting washer	.Justerbricka	2
0240		75 24 499		2,49 MM	5	.Adjusting washer	.Justerbricka	2
0250		75 24 515		2,51 MM	5	.Adjusting washer	.Justerbricka	2
0260		75 24 531		2,53 MM	5	.Adjusting washer	.Justerbricka	2
0270		75 24 556		2,55 MM	5	.Adjusting washer	.Justerbricka	2
0280		75 24 572		2,57 MM	5	.Adjusting washer	.Justerbricka	2
0290		75 24 598		2,59 MM	5	.Adjusting washer	.Justerbricka	2
0300		75 24 614		2,61 MM	5	.Adjusting washer	.Justerbricka	2
0310		75 24 630		2,63 MM	5	.Adjusting washer	.Justerbricka	2
0320		75 24 655		2,65 MM	5	.Adjusting washer	.Justerbricka	2
0330		75 24 671		2,67 MM	5	.Adjusting washer	.Justerbricka	2
0340		75 24 697		2,69 MM	5	.Adjusting washer	.Justerbricka	2
0350		75 24 713		2,71 MM	5	.Adjusting washer	.Justerbricka	2
0360		75 24 739		2,73 MM	5	.Adjusting washer	.Justerbricka	2
0370		75 24 754		2,75 MM	5	.Adjusting washer	.Justerbricka	2
0380		75 24 770		2,77 MM	5	.Adjusting washer	.Justerbricka	2
0390		75 24 796		2,79 MM	5	.Adjusting washer	.Justerbricka	2
0400		75 24 812		2,81 MM	5	.Adjusting washer	.Justerbricka	2
0410		75 24 838		2,83 MM	5	.Adjusting washer	.Justerbricka	2
0420		75 24 853		2,85 MM	5	.Adjusting washer	.Justerbricka	2
0430								
0440	2	88 18 569		TURBO	X	Sealing kit	Plomberingssats	2
0450		81 17 020		1)	1	.Sealing wire	.Plomberingstråd	2
0455		81 17 038		1)	1	.Seal	.Plomb	2
0460		89 25 067			1	.Lock needle	.Låsnål	5
0461		93 50 505			1	.E-circlip	.Spårryttare	2
0470								
0480	3	93 37 270			X	Oil cooler kit engine	Oljekylarsats motor	4
0485								
0490		93 01 482			1	.Oil cooler	.Oljekylare	4
0500		*93 01 532*		115) NLS - USE 4374211	2	.Banjo screw	.Banjoskruv	5
0505		*83 22 927*		116) NLS - USE 4374211	2	.Banjo bolt	.Hålbult	5
0510		*83 26 712*		NLS - USE 4161162	4	.Seal	.Tätning	5
0520		93 26 216			2	.Hydraulic hose	.Hydraulslang	3
0530		*93 08 883*		NLS - USE 7503464, 7543630, 7543648	1	.Intermediate section	.Mellanstycke	6
0530								
0540		*93 08 180*		NLS - USE 7566433	1	.Gasket	.Packning	4
0550		79 22 420			4	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
115. Ch -N2006153.
116. Ch N2006154-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


1-I16


Engine
Motor

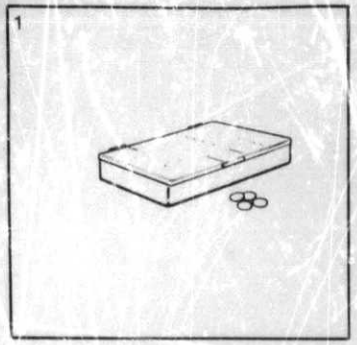


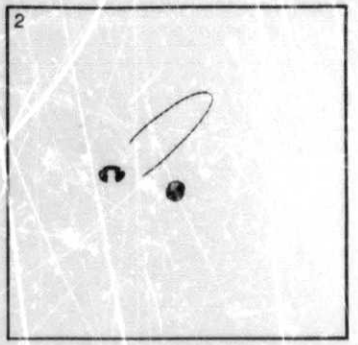

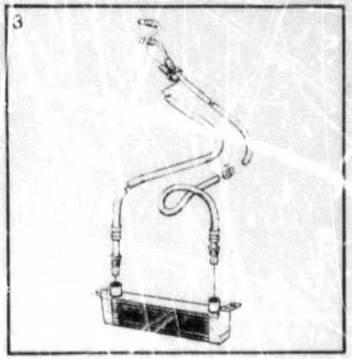

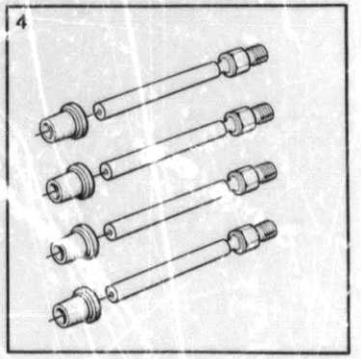

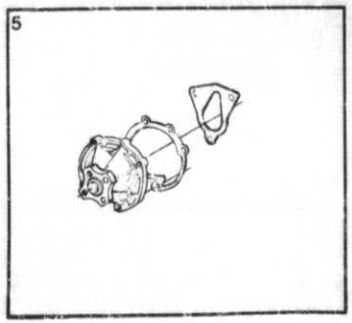

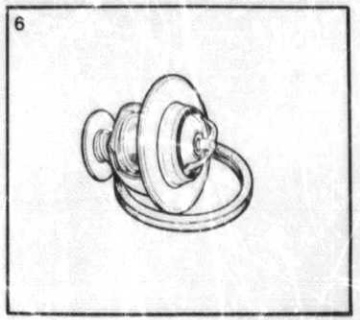

F4290 AAC90

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550								
0570	4	93 21 662		B201	X	Injectionsvalve	Insprutningsventil	2
0580		78 56 354			4	. Injectionsvalve	. Insprutningsventil	2
0590		83 57 709			4	. Bushing	. Bussning	2
0600								
0610	5	88 17 900		7)	X	Coolant pump	Kylvätskepump	2
0620		*75 07 460*		1) NLS - USE 9127218	1	. Coolant pump	. Kylvätskepump	2
0630		*93 53 442*		NLS - USE 7566516	1	. Gasket	. Packning	2
0640		*93 54 978*		NLS - USE 7563887	1	. Gasket	. Packning	2
0650								
0660	6	83 89 512		89° C	X	Thermostat kit	Termostatsats	1
0670		83 62 352		1)	1	. Thermostat	. Termostat	6
0680		83 52 692			1	. Gasket	. Packning	2
0690								
0700	6	93 20 284		92° C	X	Thermostat kit	Termostatsats	6
0710		93 16 662		1)	1	. Thermostat	. Termostat	2
0720		83 52 692			1	. Gasket	. Packning	2
0730								
0740	6	93 36 835		82° C, ME, FE	X	Thermostat kit	Termostatsats	2
0750		93 12 059		1)	1	. Thermostat	. Termostat	2
0760		83 52 692			1	. Gasket	. Packning	2
0770								
0780	6	93 37 551		1990, 82° C, US TURBO FOR EU	X	Thermostat kit	Termostatsats	1
0790								
0800		75 02 297		1)	1	. Thermostat	. Termostat	2
0810		83 52 692			1	. Gasket	. Packning	2
0820								
0830	6	88 17 298		89° C, B202	X	Thermostat kit	Termostatsats	1
0840		91 66 687		1), (7505241)	1	. Thermostat	. Termostat	1
0850		83 52 692			1	. Gasket	. Packning	2
0860								
0870	6	88 17 538		82° C, B202	X	Thermostat kit	Termostatsats	1
0880		75 17 345		1)	1	. Thermostat	. Termostat	1
0890		83 52 692			1	. Gasket	. Packning	2


1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-H04
Complete sets	1-I10

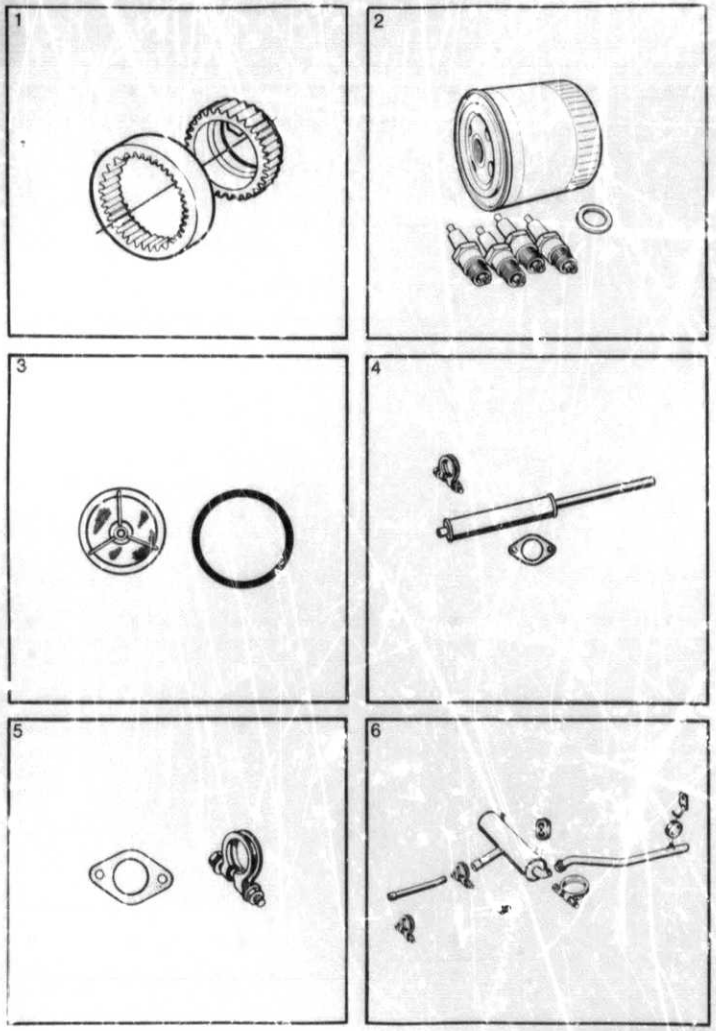

F1186 AAC90

2650	Pos	Part No/Art.no	K S	Notes/Anmärkningar	Oprl Antal	Description	Benämning	S L
0010	1	*88 17 561*		-1991 NLS - USE 9321779	X	Pump kit	Pumpsats	5
0020		75 15 588		1)	1	. Pump rotor	. Pumphjul	5
0030		*75 15 596*		1) NLS - USE 9127366	1	. Pump rotor	. Pumphjul	5
0040								
0041	1	93 21 778		1992-	X	Pump kit	Pumpsats	5
0042		75 15 589		1)	1	. Pump rotor	. Pumphjul	5
0043		91 27 365		1)	1	. Pump rotor	. Pumphjul	5
0044								
0050	2	88 17 348		B201	X	Service kit	Servicesats	1
0060		*93 09 576*		NLS - USE 9144445	1	. Filter	. Filter	1
0070		87 18 439			1	. Gasket	. Packning	1
0080		83 50 076			4	. Spark plug	. Tändstift	1
0090								
0100	2	88 17 686		B202 TURBO	X	Service kit	Servicesats	1
0110		93 20 383		1)	1	. Oil filter	. Oljefilter	1
0120		87 18 439			1	. Gasket	. Packning	1
0125		75 22 709			1	. Gasket	. Packning	
0130		*75 68 900*		NLS - USE 8813302	4	. Spark plug kit	. Tändstiftsats	1
0140								
0160	2	88 19 864		-1991, B202I, B212I	X	Service kit	Servicesats	1
0170		75 22 709			1	Gasket	Packning	1
0175		87 18 439			1	Gasket	Packning	3
0176		91 16 365			4	Spark plug	Tändstift	1
0180		93 20 383		1)	1	Oil filter	Oljefilter	1
0181								
0182	2	93 21 746		1992-, B202I, B212I	X	Service kit	Servicesats	1
0183		87 28 057			1	Gasket	Packning	3
0186		91 36 276			4	Spark plug	Tändstift	1
0186		93 20 383		1)	1	Oil filter	Oljefilter	1
0190								
0200	3	93 36 858			X	Fuel filter	Bränslefilter	1
0210		*93 50 604*		NLS	1	. Fuel filter	. Bränslefilter	4
0220		93 50 620			1	. Gasket	. Packning	2
0230								
0240	4	88 17 835			X	Silencer kit	Ljuddämparsats	1
0250		75 33 615			1	. Silencer	. Ljuddämpare	1
0260		83 86 450			2	. Clamp	. Klammer	1
0270		83 87 672			2	. Gasket	. Packning	1
0280				75/651595	1	. Assembly instruction	. Monteringsanvisning	
0290								
0300	5	88 18 197		C	X	Mounting kit	Monteringssats	2
0310		83 86 450			2	. Clamp	. Klammer	1
0320		83 87 672			2	. Gasket	. Packning	1
0330								
0340	6	88 17 850		C	X	Silencer kit	Ljuddämparsats	1
0350		75 33 631			1	. Silencer	. Ljuddämpare	1
0360		75 33 623			1	. Tube	. Rör	2
0370		83 86 450			2	. Clamp	. Klammer	1
0380		83 84 323			1	. Clamp	. Klammer	1
0390		93 28 105			2	. Rubber mounting	. Gummiupphängning	1
0400		93 65 727			1	. Exhaust pipe	. Avgasrör	
0410		93 65 404			1	. Rubber mounting	. Gummiupphängning	1
0420		93 60 093			1	. Bracket	. Konsol	5
0430				75/661595	1	. Assembly instruction	. Monteringsanvisning	


1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F06
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10

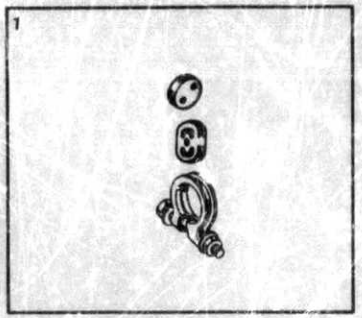


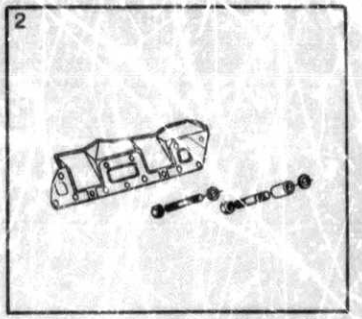



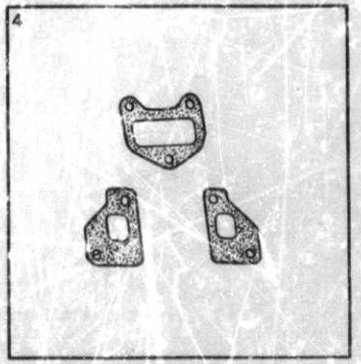

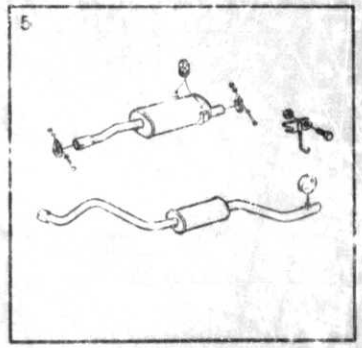

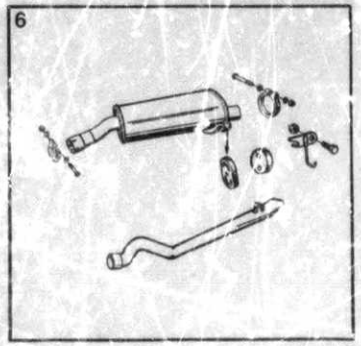

F2865 AAC90

2700	Pos	Part No/Artikelnr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0010	1	88 18 577			X	Mounting kit	Monteringssats	2
0020		83 86 450			2	.Clamp	.Klammer	1
0030		83 84 323			1	.Clamp	.Klammer	1
0040		93 28 105			2	.Rubber mounting	.Gummiupphängning	1
0050		93 65 404			1	.Rubber mounting	.Gummiupphängning	1
0060								
0070	2	88 17 280			X	Screw kit	Skruvsats	5
0080		*93 06 804*		NLS - USE 7985146	3	.Clamp	.Klammer	5
0090		75 21 081			1	.Stud	.Pinnskruv	5
0100		79 85 161		(9350588)	4	.Stud screw	.Pinnbult	5
0110		*93 06 820*		NLS - USE 9169277	7	.Nut	.Mutter	3
0120		93 06 81[illegible]			4	.Spacer sleeve	.Distanshylsa	3
0130		80 73 24[illegible]			7	.Washer	.Bricka	5
0140		75 61 77[illegible]			1	.Gasket	.Packning	2
0150								
0160	3	88 17 405			X	Chain tensioner	Kedjesträckare	3
0170		93 58 672			1	.Chain tensioner	.Kedjesträckare	3
0180		93 58 680			1	.Chain control	.Kedjestyrning	3
0190		81 25 064			2	.Screw	.Skruv	5
0200								
0210	4	88 19 146			X	Gasket kit	Packningsats	2
0220		*88 19 112*		NLS - USE 7588940	2	.Gasket	.Packning	2
0230		*88 19 120*		NLS - USE 7588957	1	.Gasket	.Packning	2
0240								
0250	5	88 19 690		C, I	X	Silencer kit	Ljuddämparsats	2
0260		93 49 143			1	.Silencer	.Ljuddämpare	1
0270		75 36 196			1	.Silencer	.Ljuddämpare	1
0280		75 38 440			1	.Mounting kit	.Monteringssats	2
0290		75 37 145			1	..Bracket	..Upphängning	5
0300		79 70 353			2	..Screw	..Skruv	5
0310		79 78 620			2	..Nut	..Mutter	3
0320		83 86 450			2	.Clamp	.Klammer	1
0330		93 28 105			2	.Rubber mounting	.Gummiupphängning	1
0340		93 65 404			1	.Rubber mounting	.Gummiupphängning	1
0350		93 21 555			1	.Mounting kit	.Monteringssats	2
0360		83 86 450			2	..Clamp	..Klammer	1
0370		93 28 105			2	..Rubber mounting	..Gummiupphängning	1
0380		93 65 404			1	..Rubber mounting	..Gummiupphängning	1
0390								
0400	6	88 [illegible] 708		TURBO	X	Silencer kit	Ljuddämparsats	2
0410		93 49 192			1	.Silencer	.Ljuddämpare	1
0420		75 35 925			1	.Exhaust pipe	.Avgasrör	
0430		75 38 440			1	.Mounting kit	.Monteringssats	2
0440		75 37 145			1	..Bracket	..Upphängning	5
0450		79 70 353			2	..Screw	..Skruv	5
0460		79 78 620			2	..Nut	..Mutter	3
0470		83 86 406			2	.Clamp	.Klammer	1
0480		93 28 105			2	.Rubber mounting	.Gummiupphängning	1
0490		93 65 404			1	.Rubber mounting	.Gummiupphängning	1
0500		93 21 563			1	.Mounting kit	.Monteringssats	2
0510		83 86 406			2	..Clamp	..Klammer	1
0520		93 28 105			2	..Rubber mounting	..Gummiupphängning	1
0530		93 65 404			1	..Rubber mounting	..Gummiupphängning	1


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F08
Cooling system	1-H06
Engine control	1-I02
Supercharging system	1-I04
Complete sets	1-I10


1-122

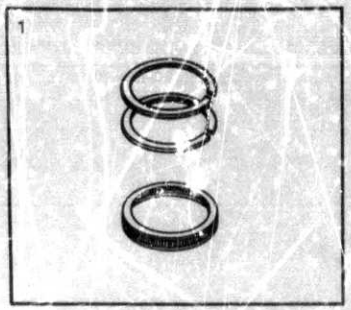


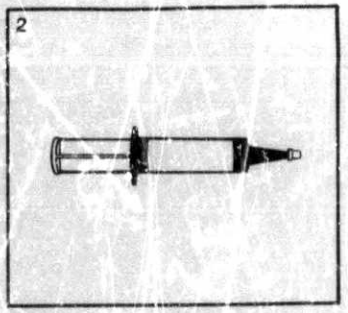

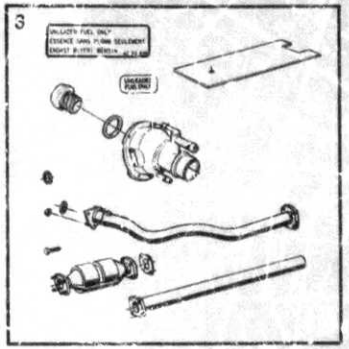

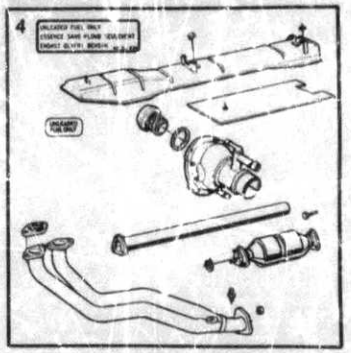

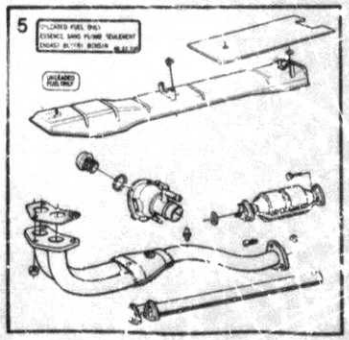

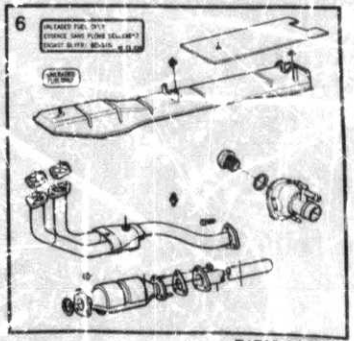

F4709 AAC90

2750	Pos	Part No/Art.no	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 20 51		STD	X	Piston ring kit	Kolvringsats	3
0020	1	93 21 47		STD, B212	X	Piston ring kit	Kolvringsats	3
0030								
0040	1	75 20 57	1	36), 0,50MM	X	Piston ring kit	Kolvringsats	3
0050	1	93 21 4 0		36), 0,50MM. B212	X	Piston ring kit	Kolvringsats	3
0060								
0070	1	75 20 [illegible]39		36), 1,00MM	X	Piston ring kit	Kolvringsats	3
0080	1	93 21 [illegible]38		36), 1,00MM, B212	X	Piston ring kit	Kolvringsats	3
0090								
0100	2	93 2[illegible] 795		25ML	X	Flange sealant	Flänstätning	5
0110								
0130	3	43 [illegible]3 781		B202 TURBO, IT	X	Catalytic converter kit	Katalysatorsats	4
0140		40 [illegible]3 636			1	.Label	.Etikett	4
0150		40 24 121			1	.Gasket	.Packning	3
0160		[illegible] 40 038			1	.TW catalytic converter	.Katalysator	4
0170		7[illegible]33 896			1	.Exhaust pipe	.Avgasrör	2
0180		79 67 789			4	.Screw	.Skruv	5
0190		7[illegible]68 415			3	.Lock nut	.Låsmutter	3
0200		80 74 106			6	.Nut	.Mutter	5
0210		93 16 407			1	.Seal	.Tätning	3
0220		43 91 058			1	.Filler cap	.Tanklock	2
0230		93 16 407			1	.Seal	.Tätning	3
0240		93 33 857			1	.Exhaust pipe	.Avgasrör	1
0250		93 35 118			1	.Filler pipe	.Påfyllningsrör	5
0260		96 59 764			1	.Text plate	.Textskylt	5
0270		95 40 774			1	.Heat shield	.Värmesköld	3
0280		93 21 92[illegible]			1	.Assembly instruction	.Monteringsanvisning	9
0290								
0300	+	43 93 740		127), B201 I, IT	X	Catalytic converter kit	Katalysatorsats	4
0310		40 21 598			1	.Heat shield	.Värmesköld	3
0320		40 23 636			1	.Label	.Etikett	4
0330		40 24 089			1	.Gasket	.Packning	3
0340		44 40 061			1	.TW catalytic converter	.Katalysator	4
0350		79 22 503			3	.Screw	.Skruv	5
0360		79 67 789			3	.Screw	.Skruv	5
0370		79 70 429			2	.Cage nut	.Korgmutter	5
0380		79 78 620			4	.Nut	.Mutter	3
0390		80 29 951			3	.Washer	.Bricka	5
0400		80 29 985			2	.Washer	.Bricka	5
0410		80 74 106			6	.Nut	.Mutter	5
0420		81 23 747			1	.Plug	.Propp	5
0430		83 28 726			1	.Ring	.Ring	3
0440		89 80 278			1	.Exhaust pipe	.Avgasrör	2
0450		89 80 328			2	.Gasket	.Packning	1
0460		43 91 058			1	.Filler cap	.Tanklock	2
0470		93 33 840			1	.Exhaust pipe	.Avgasrör	1
0480		93 35 118			1	.Filler pipe	.Påfyllningsrör	5
0490		53 89 218			2	.Screw	.Skruv	5
0500		96 59 764			1	.Text plate	.Textskylt	5
0510		95 40 774			1	.Heat shield	.Värmesköld	3
0520		93 21 92[illegible]			1	.Assembly instruction	.Monteringsanvisning	9
0530								
0540	5	43 93 757		128), B201 I, IT	X	Catalytic converter kit	Katalysatorsats	4
0550		40 21 598			1	.Heat shield	.Värmesköld	3
0560		40 23 636			1	.Label	.Etikett	4
0570		40 24 089			1	.Gasket	.Packning	3
0580		44 40 061			1	.TW catalytic converter	.Katalysator	4
0590		75 28 136			1	.Gasket	.Packning	1
0600		75 39 117			1	.Exhaust pipe	.Avgasrör	2
0610		79 22 503			3	.Screw	.Skruv	5


36. Oversize. Överdimension.
127. With cast exhaust manifold. Med gjuten avgassamlare.
128. With sheet metal exhaust manifold. Med plåtavgassamlare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, control housing	2-G0[illegible]
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-D18
Inlet and exhaust system	1-F06
Cooling system	1-H06
Engine control	1-J02
Supercharging system	1-J04
Complete sets	1-[illegible]0

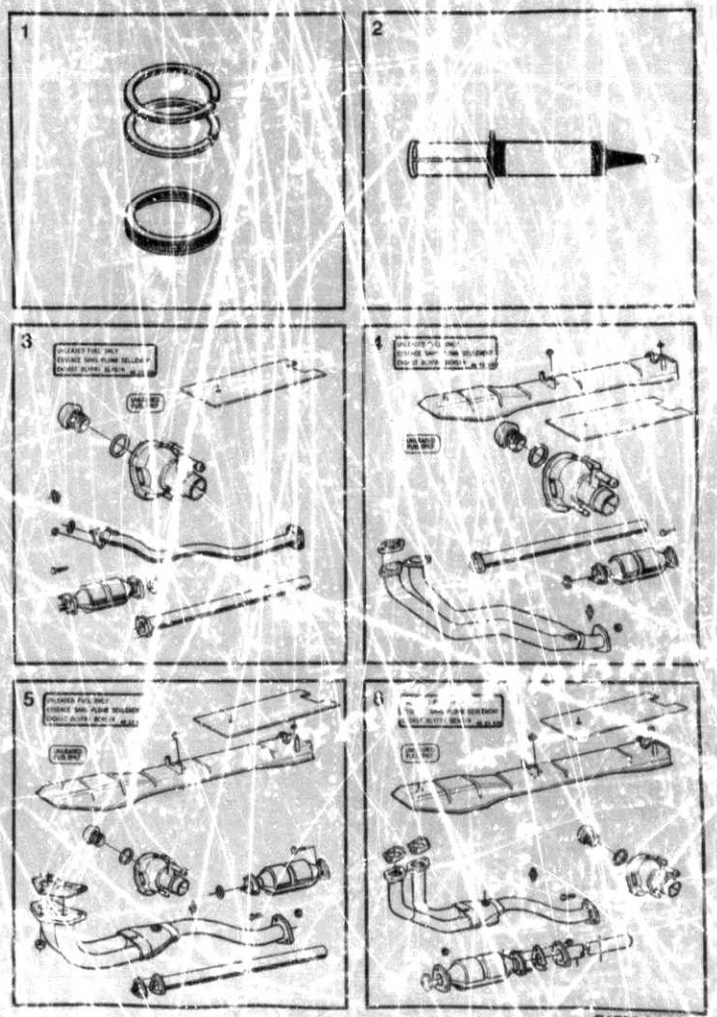

Pos	Part No/Artikelnr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	79 67 789			3	Screw	Skruv	5
0630	79 70 429			2	Cage nut	Korgmutter	5
0640	79 79 503			3	Nut	Mutter	5
0650	80 29 951			3	Washer	Bricka	5
0660	80 29 985			2	Washer	Bricka	5
0670	80 74 106			6	Nut	Mutter	5
0680	81 23 747			1	Plug	Propp	5
0690	83 28 726			1	Ring	Ring	3
0700	43 91 058			1	Filler cap	Tanklock	2
0710	93 33 840			1	Exhaust pipe	Avgasrör	1
0720	93 35 118			1	Filler pipe	Påfyllningsrör	5
0730	94 68 218			2	Screw	Skruv	5
0740	96 59 764			1	Text plate	Textskylt	5
0750	95 40 774			1	Heat shield	Värmesköld	3
0760	93 21 928			1	Assembly instruction	Monteringsanvisning	9
0770							
0780	43 93 765		B202i, IT	X	Catalytic converter kit	Katalysatorsats	4
0790	40 21 598			1	Heat shield	Värmesköld	3
0800	40 23 636			1	Label	Etikett	4
0810	40 21 085			1	Gasket	Packning	3
0820	44 40 046			1	TWC catalyst converter	Katalysator	4
0830	75 33 904			1	Exhaust pipe	Avgasrör	1
0840	79 22 503			3	Screw	Skruv	5
0850	79 67 789			3	Screw	Skruv	5
0860	79 70 429			2	Cage nut	Korgmutter	5
0870	79 79 503			4	Nut	Mutter	5
0880	80 29 951			3	Washer	Bricka	5
0890	80 29 985			2	Washer	Bricka	5
0900	80 74 106			6	Nut	Mutter	5
0910	81 23 747			1	Plug	Propp	5
0920	83 28 726			1	Ring	Ring	3
0930	89 80 328			2	Gasket	Packning	1
0940	43 91 058			1	Filler cap	Tanklock	2
0950	93 35 118			1	Filler pipe	Påfyllningsrör	5
0960	93 64 407			1	Exhaust pipe	Avgasrör	2
0970	93 68 218			2	Screw	Skruv	5
0980	96 59 764			1	Text plate	Textskylt	5
0990	95 40 774			1	Heat shield	Värmesköld	3
1000	93 21 928			1	Assembly instruction	Monteringsanvisning	9

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-B02
4	Transmission	3-A02
5	Brakes	3-B02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D14
Fuel system	1-F18
Inlet and exhaust system	1-F28
Cooling system	1-J06
Engine control	1-J02
Supercharging system	1-J04
Complete sets	1-110

2-A02

3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

TABLE OF CONTENTS

Battery		
Battery	3A : 5	2-A06
Alternator		
Alternator, Bosch 70A	3A : 7	2-A08
Alternator, Bosch 80A	3A : 9	2-A10
Starter		
Starter	3A : 11	2-A12
Ignition system		
EZK	3A : 13	2-A14
Ignition leads, spark plugs etc	3A : 15	2-A16
Distributor Bosch, B201	3A : 17	2-A18
Distributor Bosch, B202 I, B212 I	3A : 19	2-A20
Distributor Bosch, B202 Turbo	3A : 21	2-A22
Lighting		
Headlights	3A : 23	2-A24
Headlights, sealed beam	3A : 25	2-B02
Lamp cluster	3A : 27	2-B04
Tail lamp, CK	3A : 29	2-B06
Tail lamp, SN	3A : 33	2-B10
Stop light, high mounted	3A : 35	2-B12
Other lights	3A : 37	2-B14
Electrical equipment, other		
Signal horn	3A : 39	2-B16
Signal button	6 : 11	3-F12
Windshield wipers	3A : 41	2-B18
Headlight wipers	3A : 45	2-B22
Windshield- and headlight washer	3A : 47	2-B24
Central lock	3A : 49	2-C02
Switches	3A : 51	2-C04
Speed control system	3A : 55	2-C08
Operating device	3A : 59	2-C12
AIR-BAG	3A : 63	2-C16
Motor aerial, loudspeaker	3A : 65	2-C18
Theft alarm, CV	3A : 67	2-C20
Electrical system, ABS	3A : 69	2-C22
Wiring and fuses		
Wiring 1990	3A : 71	2-C24
Wiring 1991	3A : 83	2-D12
Wiring 1992	3A : 93	2-D22
Wiring 1993-	3A : 103	2-E08
Clamps	3A : 111	2-E16
Pushings, screws, etc	3A : 113	2-E18
Mounting kit, body	3A : 115	2-E20
Mounting kit, floor	3A : 119	2-E24
Mounting kit, doors	3A : 121	2-F02
Distribution box, relays and fuses	3A : 123	2-F04
Instruments	3A : 129	2-F10
Complete sets		
Electrical system	3A : 133	2-F14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A03

INNEHÅLLSFÖRTECKNING

Batteri		
Batteri	3A : 5	2-A06
Generator		
Generator, Bosch 70A	3A : 7	2-A08
Generator, Bosch 80A	3A : 9	2-A10
Startmotor		
Startmotor	3A : 11	2-A12
Tändsystem		
EZK	3A : 13	2-A14
Tändkablar, tändstift etc	3A : 15	2-A16
Tändfördelare Bosch, B201	3A : 17	2-A18
Tändfördelare Bosch, B202 I, B212 I	3A : 19	2-A20
Tändfördelare Bosch, B202 Turbo	3A : 21	2-A22
Belysning		
Strålkastare	3A : 23	2-A24
Strålkastare, sealed beam	3A : 25	2-B02
Kombinationslykta	3A : 27	2-B04
Baklykta, CK	3A : 29	2-B06
Baklykta, SN	3A : 33	2-B10
Stopplykta, högt monterad	3A : 35	2-B12
Övrig belysning	3A : 37	2-B14
Övrig elektrisk utrustning		
Signalhorn	3A : 39	2-B16
Signalkontakt	6 : 11	3-F12
Vindrutetorkare	3A : 41	2-B18
Strålkastartorkare	3A : 45	2-B22
Vindrute- och strålkastarspolare	3A : 47	2-B24
Centrallås	3A : 49	2-C02
Strömställare	3A : 51	2-C04
Farthållnings system	3A : 55	2-C08
Manöverdon	3A : 59	2-C12
AIR-BAG	3A : 63	2-C16
Motorantenn, högtalare	3A : 65	2-C18
Stöldlarm, CV	3A : 67	2-C20
Elektriskt system, ABS	3A : 69	2-C22
Ledningar och säkringar		
Ledningar 1990	3A : 71	2-C24
Ledningar 1991	3A : 83	2-D12
Ledningar 1992	3A : 93	2-D22
Ledningar 1993-	3A : 103	2-E08
Klammor	3A : 111	2-E16
Bussningar, skruvar etc	3A : 113	2-E18
Monteringsdetaljer, kaross	3A : 115	2-E20
Monteringsdetaljer, golv	3A : 119	2-E24
Monteringsdetaljer, dörrar	3A : 121	2-F02
El-central, reläer och säkringar	3A : 123	2-F04
Instrument	3A : 129	2-F10
Satser		
Elektriskt system	3A : 133	2-F14

2-A04

SUMARIO

Batteria		
Bateria	3A : 5	2-A06
Alternador		
Alternador, Bosch 70A	3A : 7	2-A08
Alternador, Bosch 80A	3A : 9	2-A10
Motor de arranque		
Motor de arranque	3A : 11	2-A12
Sistema de encendido		
EZK	3A : 13	2-A14
Cables encendido, bujias etc	3A : 15	2-A16
Distribuidor, Bosch, B201	3A : 17	2-A18
Distribuidor, Bosch, B202 I, B212 I	3A : 19	2-A20
Distribuidor, Bosch, B202 Turbo	3A : 21	2-A22
Alumbrado		
Faros	3A : 23	2-A24
Faros, sealed beam	3A : 25	2-B02
Faro combinado	3A : 27	2-B04
Piloto trasero, CK	3A : 29	2-B06
Piloto trasero, SN	3A : 33	2-B10
Lampara de paro montada	3A : 35	2-B12
Otro alumbrado	3A : 37	2-B14
Otro equipo electrico		
Senal acustica	3A : 39	2-B16
Contacto de senal acustica	6 : 11	3-F12
Limpiaparabrisas	3A : 41	2-B18
Limpiacristales de faro	3A : 45	2-B22
Lavaparabrisas y lavacristales de faro	3A : 47	2-B24
Cerradura central	3A : 49	2-C02
Contactos	3A : 51	2-C04
Control de velocidad de crucero	3A : 55	2-C08
Dispositivos de mando	3A : 59	2-C12
AIR-BAG	3A : 63	2-C16
Motor de antena, altavoz	3A : 65	2-C18
Alarma antirobo, CV	3A : 67	2-C20
Sistema electrico, ABS	3A : 69	2-C22
Conductos y fusibles		
Conductos 1990	3A : 71	2-C24
Conductos 1991	3A : 83	2-D12
Conductos 1992	3A : 93	2-D22
Conductos 1993-	3A : 103	2-E08
Abrazaderas	3A : 111	2-E16
Casquillos, tornillos etc	3A : 113	2-E18
Equipo de montaje, caroceria	3A : 115	2-E20
Equipo de montaje, piso	3A : 119	2-E24
Equipo de montaje, puertas	3A : 121	2-F02
Central electrica, reles y fusibili	3A : 123	2-F04
Instrumentos	3A : 129	2-F10
Juegos completos		
Sistema electrico	3A : 133	2-F14


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	1
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A06 Battery Batteri

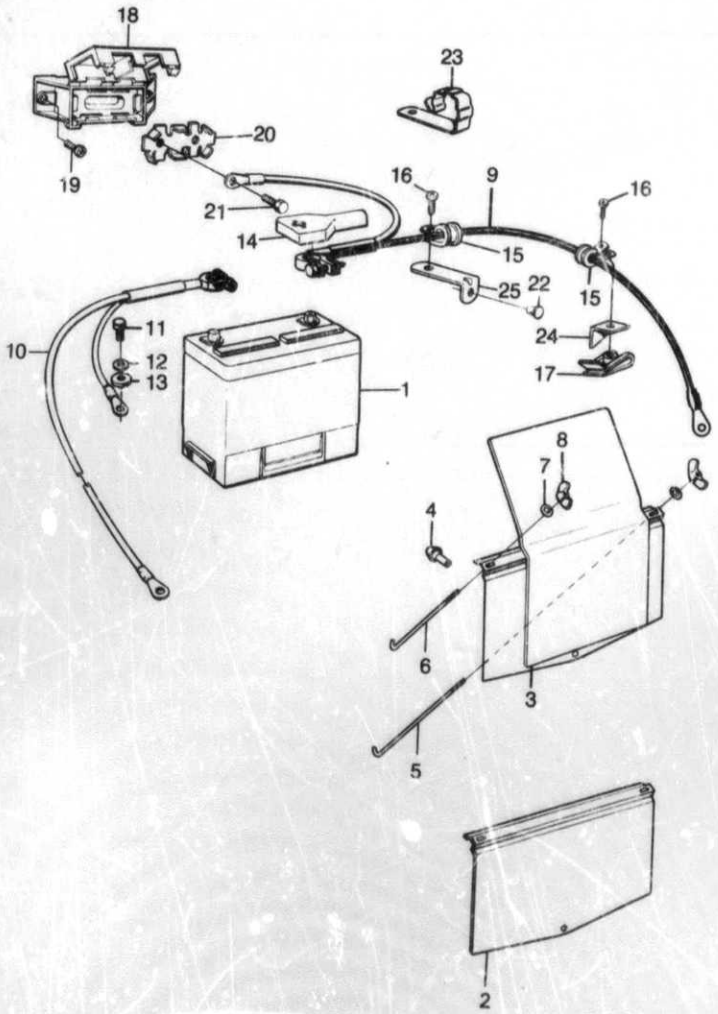

0100	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1					Battery	Batteri	
0020						SEE ACCESSORIES CATALOGUE	SE TILLBEHÖRSKATALOG	
0030	2	85 51 582			1	Protection	Skydd	5
0040	3	85 94 897		TURBO	1	Heat shield	Strålningsskydd	5
0050	4	71 13 970			1	₄Plug	₄Plugg	5
0060	5	85 72 737		3)	1	Catch	Hake	5
0070	5	85 51 616		3), TURBO	1	Catch	Hake	5
0080	6	85 72 745		2)	1	Catch	Hake	5
0090	6	85 51 616		2), TURBO	1	Catch	Hake	5
0100	7	79 15 564			2	Star washer	Taggbricka	5
0110	8	79 70 460			2	Nut	Mutter	5
0120	9	95 55 624		M, +	1	Cable	Kabel	5
0130	9	95 55 764		A, +	1	Cable	Kabel	5
0140	9	95 55 632		TURBO, M, +	1	Cable	Kabel	5
0150	9	95 55 772		TURBO, A, +	1	Cable	Kabel	5
0160	10	91 21 526			1	Ground cable	Jordkabel	4
0170	11	85 84 666			1	Screw	Skruv	5
0180	12	85 84 674			1	Washer	Bricka	5
0190	13	85 84 682			1	Washer	Bricka	5
0200	14	95 18 424			1	Cover	Kåpa	6
0210	15	85 66 135		TURBO	3	Clamp	Klammer	5
0220	15	*85 66 143*		AC NLS	1	Clamp	Klammer	5
0230	16	82 86 296			2	Screw	Skruv	5
0240	16	*82 67 205*		TURBO NLS - USE 7972466	3	Screw	Skruv	5
0250	17	82 67 098			2	Clip	Clips	5
0260	18	40 61 891			1	Bracket	Hållare	5
0270	19	*79 74 769*		NLS - USE 7922891	2	Screw	Skruv	5
0280	20	95 03 053			1	Casing	Förgreningshus	3
0290	21	80 19 895		-1992	2	Screw	Skruv	5
0295	21	91 66 273		1993-	2	Screw	Skruv	5
0300	22	82 35 178			3	Pop rivet	Popnit	5
0310	23	85 28 564			3	Clamp	Klammer	5
0320	24	85 94 368			1	Bracket	Konsol	6
0330	25	95 59 782			2	Bracket	Konsol	6

2. Front. Främre.
3. Rear. Bakre.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A08

Generator
Bosch 70A

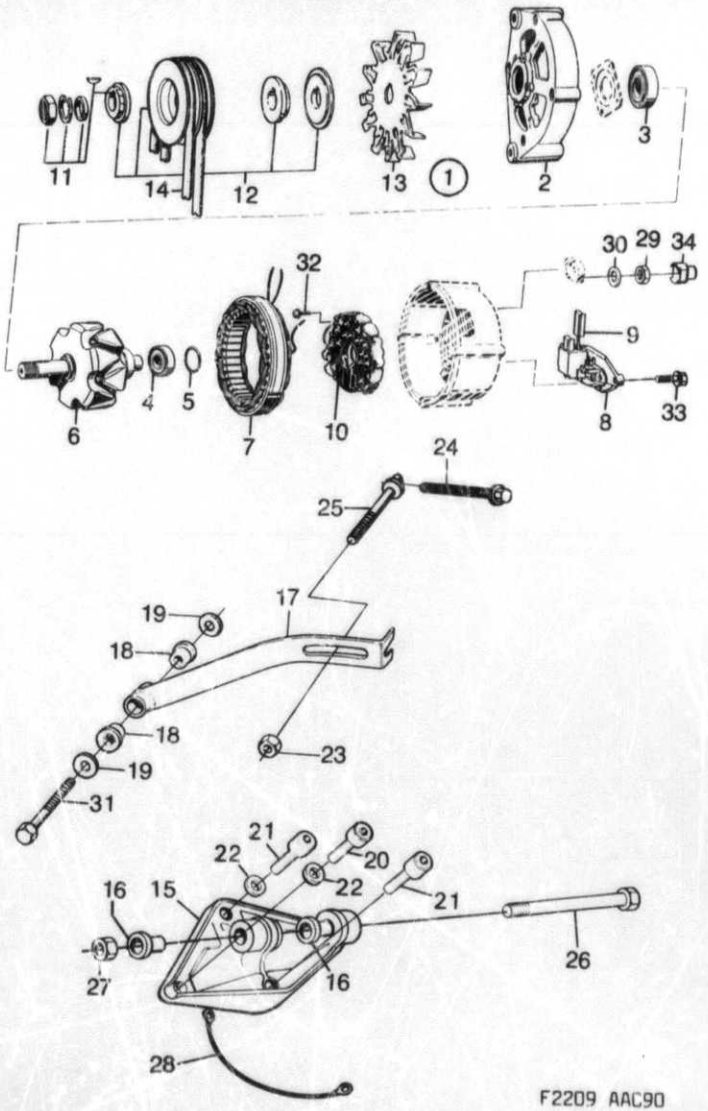

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 35 251		7)	1	Generator	Generator	5
0020	2	85 91 075			1	.Bearing	.Drivlager	6
0030	3	85 90 911			1	.Ball bearing	.Kullager	3
0040	4	85 72 034			1	.Ball bearing	.Kullager	6
0050	5	85 65 590			1	.O-ring	.O-ring	4
0060	6	85 71 887			1	.Rotor	.Rotor	6
0070	7	85 71 861			1	.Stator	.Stator	6
0080	8	85 90 649			1	.Regulator	.Regulator	2
0090	9	*85 72 638*		NLS - USE 9515180	1	..Brush set	..Borstsats	3
0100	10	95 55 301			1	.Rectifier	.Likriktare	6
0110	11	85 90 994			1	.Part kit rotor	.Delsats rotor	6
0111								
0120	12	*85 86 075*		NLS - USE 9563412	1	Pulley	Remskiva	5
0130	13	85 87 248			1	Fan disc	Fläktskiva	6
0140	14	75 11 728			1	V-belt	Kilrem	1
0150	15	75 41 436			1	Bracket	Fäste	4
0160	16	75 41 451			2	Rubber bushing	Gummibussning	6
0170	17	75 06 272			1	Stay	Stag	5
0180	18	93 54 770			2	Rubber bushing	Gummibussning	4
0190	19	73 11 772			2	Washer	Bricka	5
0200	20	80 98 089			1	Screw	Skruv	5
0210	21	80 98 113			2	Screw	Skruv	5
0220	22	80 29 985			2	Washer	Bricka	5
0230	23	81 51 243			1	Nut	Mutter	5
0240	24	73 99 769			1	Screw	Skruv	5
0250	25	75 49 488			1	Adjustment screw	Justerskruv	5
0260	26	79 79 255			1	Screw	Skruv	5
0270	27	81 51 243			1	Nut	Mutter	5
0285	28	41 11 076			1	Ground cable	Jordkabel	6
0290	29	81 51 235			1	Nut	Mutter	5
0300	30	79 33 849		88)	1	Washer	Bricka	5
0305	30	*73 11 764*		89) NLS - USE 7399835	1	Washer	Bricka	5
0310	31	93 54 960			1	Screw	Skruv	5
0320	32	95 13 599			2	Screw	Skruv	5
0330	33	85 71 986			2	Screw	Skruv	5
0340	34	91 24 645		89), B+	1	Plastic cover	Plastskydd	6

7. Also available as exchange unit. Finns även som utbytesenhet
88. Ch -L3001352, -L5000340, -L7006068.
89. Ch L3001353-, L5000341-, L7006069-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A10

Generator
Bosch 80A

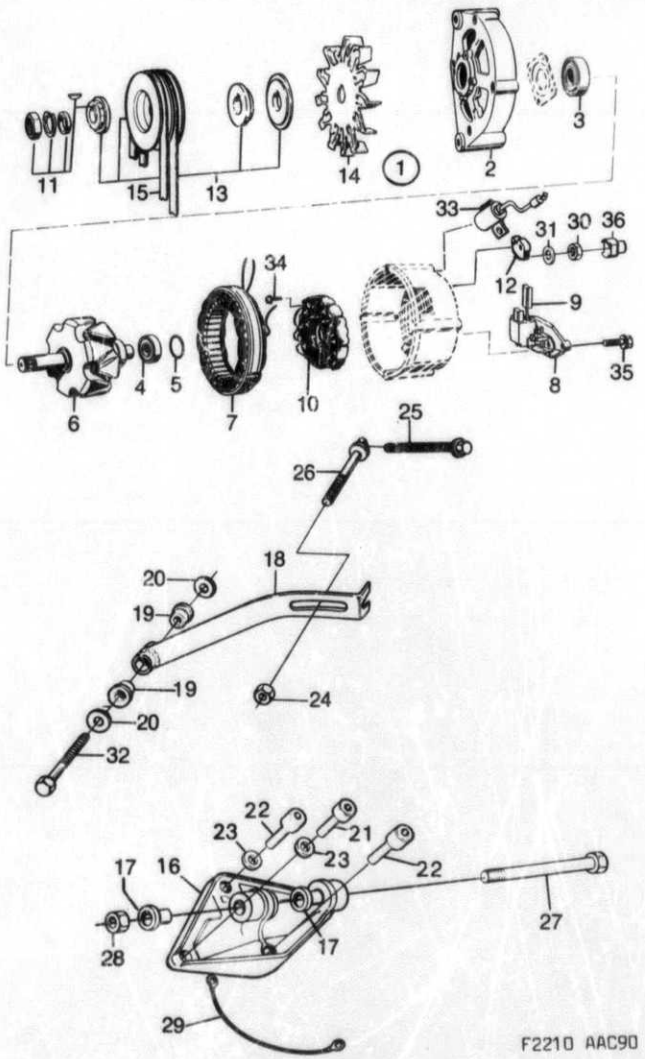

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 62 752		7)	1	Generator	Generator	5
0020	2	95 13 763			1	.Bearing	.Drivlager	6
0030	3	95 13 128		2)	1	.Ball bearing	.Kullager	3
0040	4	95 13 185		3)	1	.Ball bearing	.Kullager	6
0050	5	95 13 193			1	.O-ring	.O-ring	4
0060	6	95 13 144			1	.Rotor	.Rotor	6
0070	7	95 13 169			1	.Stator	.Stator	6
0080	8	85 90 549			1	.Regulator	.Regulator	2
0090	9	95 15 180		See page 3A-133, 2-F14	1	..Brush set	..Borstsats	3
0100	10	95 13 177			1	.Rectifier	.Likriktare	6
0110	11	85 90 994			1	.Part kit rotor	.Delsats rotor	6
0111								
0120	12	85 93 329		B+	1	.Protection	.Skydd	6
0130	13	95 63 412			1	Pulley	Remskiva	5
0140	14	85 87 248			1	Fan disc	Fläktskiva	6
0150	15	75 11 728			1	V-belt	Kilrem	1
0160	16	75 41 436			1	Bracket	Fäste	4
0170	17	75 41 451			2	Rubber bushing	Gummibussning	6
0180	18	75 06 272			1	Stay	Stag	5
0190	19	93 54 770			2	Rubber bushing	Gummibussning	4
0200	20	73 11 772			2	Washer	Bricka	5
0210	21	80 98 089			1	Screw	Skruv	5
0220	22	80 98 113			2	Screw	Skruv	5
0230	23	80 29 985			2	Washer	Bricka	5
0240	24	81 51 243			1	Nut	Mutter	5
0250	25	73 99 769			1	Screw	Skruv	5
0260	26	75 49 488			1	Adjustment screw	Justerskruv	5
0270	27	79 79 255			1	Screw	Skruv	5
0280	28	81 51 243			1	Nut	Mutter	5
0295	29	41 11 076			1	Ground cable	Jordkabel	6
0300	30	81 51 235			1	Nut	Mutter	5
0310	31	79 33 849		88)	1	Washer	Bricka	5
0315	31	*73 11 764*		89) NLS - USE 7399835	1	Washer	Bricka	5
0320	32	93 54 960			1	Screw	Skruv	5
0330	33	95 23 184			1	Capacitor	Kondensator	4
0340	34	95 13 599			6	Screw	Skruv	5
0350	35	85 71 986			2	Screw	Skruv	5
0360	36	91 24 645		89), B+	1	Plastic cover	Plastskydd	6

2. Front. Främre.
3. Rear. Bakre.
7. Also available as exchange unit. Finns även som utbytesenhet.

88. Ch -L3001352, -L5000340, -L7006068.
89. Ch L3001353-, L5000341-, L7006069-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A12 Starter motor — Startmotor

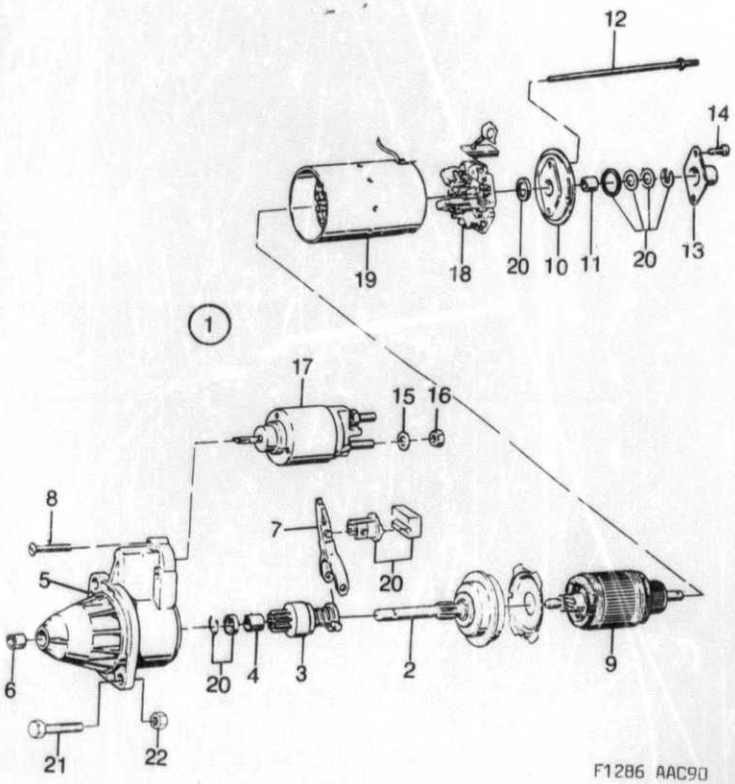

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 17 299		7)	1	Starter motor	Startmotor	5
0020	2	75 35 255			1	.Planetary gear	.Planetväxel	5
0030	3	41 60 099			1	.Drive gear	.Drev	3
0040	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0050	5	41 60 149			1	.Gear house	.Drevhus	6
0060	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0070	7	75 27 765			1	.Engagement lever	.Kopplingsarm	6
0080	8	75 35 271			3	.Screw	.Skruv	5
0090	9	41 60 123			1	.Rotor	.Rotor	5
0100	10	75 35 297			1	.Ball bearing	.Kullager	6
0110	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0120	12	75 35 305			2	.Screw	.Skruv	5
0130	13	75 35 313			1	.Cap	.Kapsel	6
0140	14	75 35 321			2	.Screw	.Skruv	5
0150	15	75 27 849			1	.Washer	.Bricka	5
0160	16	75 35 339			1	.Nut	.Mutter	5
0170	17	75 27 856			1	.Actuator solenoid	.Manövermagnet	3
0180	18	75 27 864			1	.Plate	.Platta	6
0190	19	75 27 872			1	.Casing	.Hus	6
0200	20	75 27 880			1	.Kit	.Sats	6
0210	21	79 76 939			2	Screw	Skruv	5
0220	22	79 75 220			2	Nut	Mutter	5

7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A14

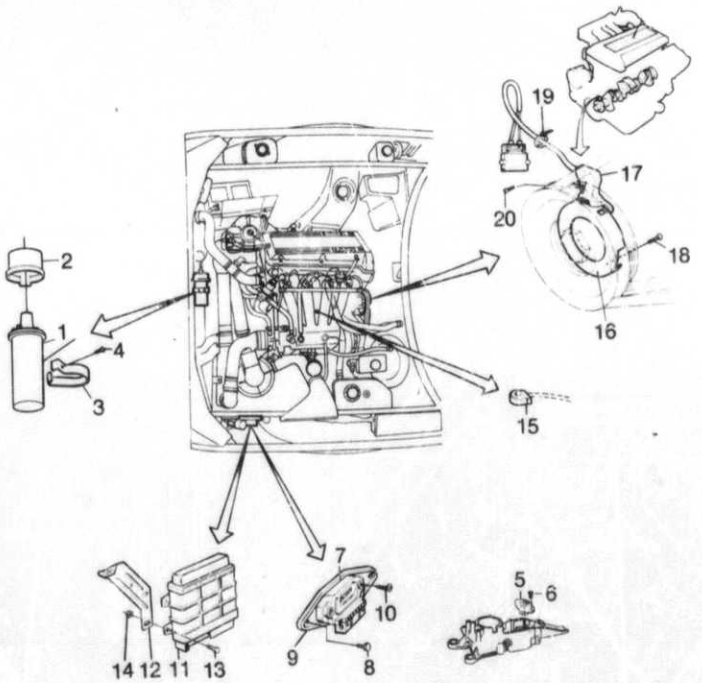

F4422 AAC90

0300	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 73 834			1	Ignition coil	Tändspole	4
0020	2	85 66 374			1	Protecting casing	Skyddskåpa	4
0030	3	85 52 598			1	Bracket	Fäste	5
0040	4	80 19 945			1	Screw	Skruv	5
0050								
0060	5			See page 3A-059, 2-C12	1	Contact	Kontakt	
0070						starter switch	tändningslås	
0080	6			See page 3A-059, 2-C12	2	Screw	Skruv	
0090								
0100	7	*75 03 600*		98), B202 I NLS - USE 4023149	1	Power unit	Effektsteg	5
0110	7	40 23 149		99)-1990, B202 I	1	Power unit	Effektsteg	5
0120	7	40 23 149		1991-, B202 I, B212 I	1	Power unit	Effektsteg	5
0130	7	89 80 534		TURBO	1	Power unit	Effektsteg	5
0140	8	79 22 933		1990, I	2	Screw	Skruv	5
0150	8	84 26 199		1991-, B202 I, B212 I	2	Screw	Skruv	5
0160	9	85 74 816		I	1	Cooling body	Kylkropp	5
0170	10	79 75 519		I	2	Screw	Skruv	5
0180								
0190	11	74 84 504		4,7), B202 I, EZK	1	Electronic unit	Elektronikenhet	5
0200	11	78 72 302		-1991,4,7), B212 I, EZK	1	Electronic unit	Elektronikenhet	5
0210	11	91 28 125		1992-,4,7), B212 I, EZK	1	Electronic unit	Elektronikenhet	5
0220	11	74 84 512		5,7), B202 I, M, EZK	1	Electronic unit	Elektronikenhet	5
0230	11	74 84 520		5,7),B202 I, A, EZK	1	Electronic unit	Elektronikenhet	5
0240	12	75 25 744		B202 I, B212 I	2	Bracket	Konsol	6
0250	13	80 19 713		B202 I	6	Screw	Skruv	5
0260	14	79 73 365		B202 I	6	Nut	Mutter	5
0270	14	79 73 365		B212 I	4	Nut	Mutter	5
0280								
0290	15			See page 2-151, 1-I08		Knock sensor	Knacksensor	
0300								
0310	16	91 17 979		4,114), B202 I	1	Aperture disc	Bländarskiva	4
0320	16	91 17 201		4,115), B202 I, B212 I	1	Aperture disc	Bländarskiva	4
0330	30	74 84 546		4), B202 I, B212 I	1	Sensor	Givare	4
0340	18	*91 14 455*		4), B202 I, B212 I NLS - USE 9127440	3	Screw	Skruv	5
0350	19	*18 00 259*		4), B202 I, B212 I NLS - USE 8153611	1	Tensioning band	Spännband	5
0360	20	*91 14 455*		4), 1990, B202 I, B212 I NLS - USE 9127440	2	Screw	Skruv	5
0370	20	91 27 440		4), 1991-, B202 I, B212 I	2	Screw	Skruv	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
98. Ch - L3006719, --L5001864, --L7018986
99. Ch L3006720--, L5001865--, L7018987--.
114. Engine --L74038.
115. Engine L74039--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

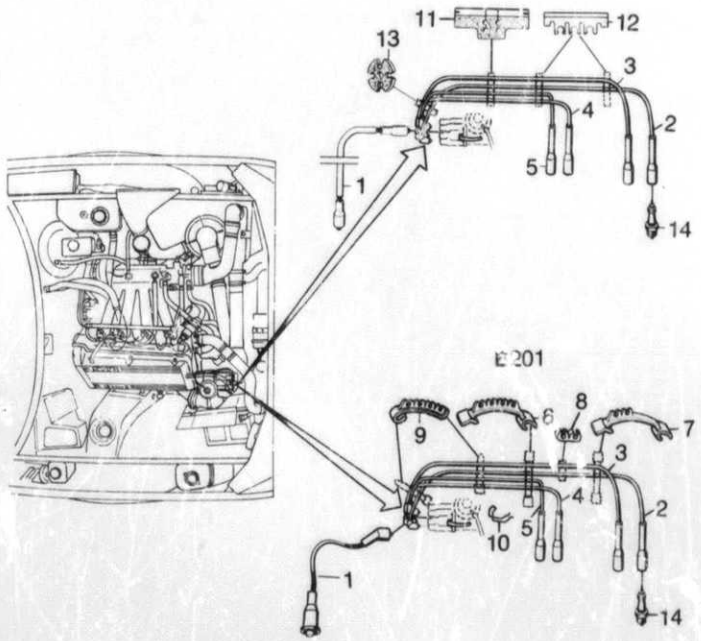

F4423 AAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 11 157	S	1990, B201	1	Ignition lead	Tändkabel	3
0020						ignition coil	tändspole	
0030	1	75 10 548	S	B202, B212 I	1	Ignition lead	Tändkabel	3
0040						ignition coil	tändspole	
0050								
0060	2	75 61 061	S	1990, B201	1	Ignition lead	Tändkabel	3
0070						cylinder 1	cylinder 1	
0080	2	75 04 483	S	B202, B212	1	Ignition lead	Tändkabel	3
0090						cylinder 1	cylinder 1	
0100								
0110	3	75 61 079	S	1990, B201	1	Ignition lead	Tändkabel	3
0120						cylinder 2	cylinder 2	
0130	3	75 04 491	S	B202, B212	1	Ignition lead	Tändkabel	3
0140						cylinder 2	cylinder 2	
0150								
0160	4	75 61 087	S	1990, B201	1	Ignition lead	Tändkabel	3
0170						cylinder 3	cylinder 3	
0180	4	75 04 509	S	B202, B212	1	Ignition lead	Tändkabel	3
0190						cylinder 3	cylinder 3	
0200								
0210	5	75 61 095	S	1990, B201	1	Ignition lead	Tändkabel	3
0220						cylinder 4	cylinder 4	
0230	5	75 04 517	S	B202, B212	1	Ignition lead	Tändkabel	3
0240						cylinder 4	cylinder 4	
0250								
0260	6	93 58 086			1	Retainer	Hållare	2
0270	7	93 58 094			1	Retainer	Hållare	2
0280	8	93 53 673			1	Bracket	Hållare	2
0290	9	93 58 102			2	Retainer	Hållare	2
0300	10	93 53 905		TURBO	1	Clamp	Klammer	6
0310								
0320	11	75 04 525		B202, B212	1	Retainer	Hållare	2
0330	12	75 85 540		B202, B212	2	Retainer	Hållare	2
0340	13	75 06 793		B202, B212	1	Retainer	Hållare	2
0350								
0360	14	93 50 076	S	B201, NGK BP6ES	4	Spark plug	Tändstift	1
0370	14	91 16 385		-1991, B202 I, B212 I, NGK BCP5ES,	4	Spark plug	Tändstift	1
0380								
0390	14	91 36 276		1992-, B202 I, B212 I, NGK BCP5EV,	4	Spark plug	Tändstift	1
0400								
0410	14	88 19 302		B202 TURBO, NGK BCP7EV	4	Spark plug	Tändstift	1
0420								
0440		93 37 346		B201	X	Kit ignition cables	Tändkabelsats	
0450				See page 3A-133, 2-F14				
0460		88 17 314		B202, B212 I	X	Kit ignition cables	Tändkabelsats	3
0470				See page 3A-133, 2-F14				
0480								
0490		88 19 278		B201, NGK BP6ES,	X	Spark plug kit	Tändstiftsats	1
0500				See page 3A-137, 2-F18				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A18

Ignition distributor
Tändfördelare
B201

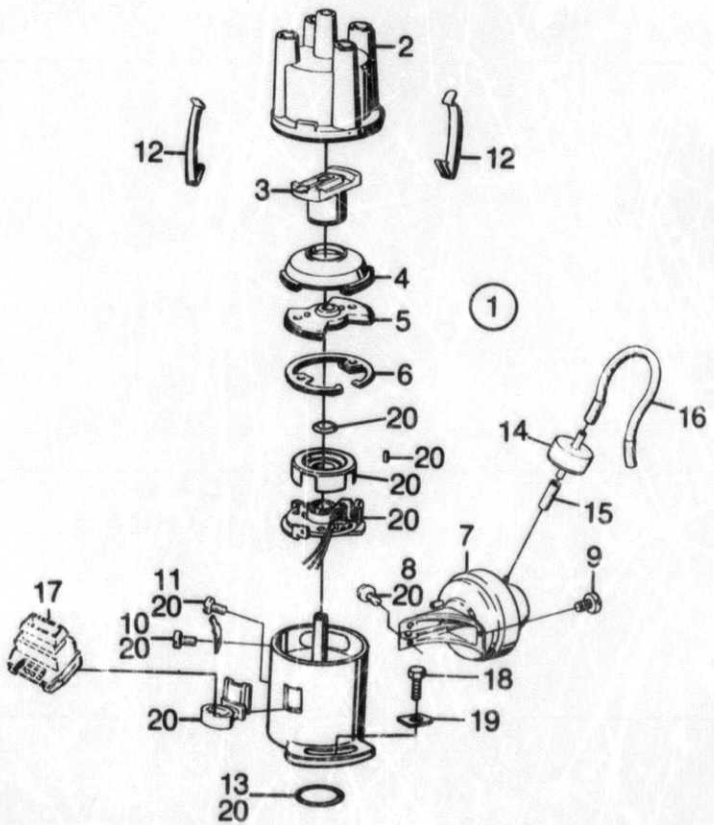

0430	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 85 774			1	Ignition distributor	Tändfördelare	5
0020	1	74 85 766		4), I	1	Ignition distributor	Tändfördelare	5
0030	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0040	3	93 55 488			1	.Rotor	.Rotor	3
0050	4	93 51 610		*	1	.Dust cover	.Dammskydd	3
0060	5	75 64 800			1	.Bearing shield	.Lagersköld	5
0070	6	*93 51 636*		NLS	1	.Lock ring	.Låsring	5
0080	7	75 18 541		23)	1	.Regulator	.Regulator	4
0090	7	93 55 512		24)	1	.Regulator	.Regulator	4
0100	8	93 55 470			1	.Screw	.Skruv	5
0110	9	93 05 053			1	.Screw	.Skruv	5
0120	10	93 55 470			1	.Screw	.Skruv	5
0130	11	93 55 470			2	.Screw	.Skruv	5
0140	12	93 51 594			2	.Spring	.Fjäder	5
0150	13	93 51 750			1	Seal	Tätning	6
0160	14	93 44 276		CH, EU, TURBO A, AU, CH	1	Valve	Ventil	2
0170						brown, 2 sec.	brun, 2 sek	
0180	15	91 36 243		L=30 MM	1	Vaccum hose	Vakuumslang	5
0190	16	91 36 243		L=530 MM	1	Vaccum hose	Vakuumslang	5
0200	17	85 93 907		See page 3B-017, 2-G18	1	Contact housing	Kontakthus	4
0210	17	93 21 761		23)	1	Connector housing	Kontakthus	4
0220	18	*80 19 929*		-1992 NLS - USE 9166299	3	Screw	Skruv	5
0230	18	91 66 299		1993-	3	Screw	Skruv	5
0240	19	93 08 990			3	Washer	Bricka	6
0250	20	74 86 822		See page 3A-133, 2-F14	X	Repair kit	Reparationssats	5
0260								
0270		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


4. With catalytic converter. Med katalytisk reaktor.
23. For ignition distributor 74 85 774. För fördelare 74 85 774.
24. For ignition distributor 74 85 766. För fördelare 74 85 766.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

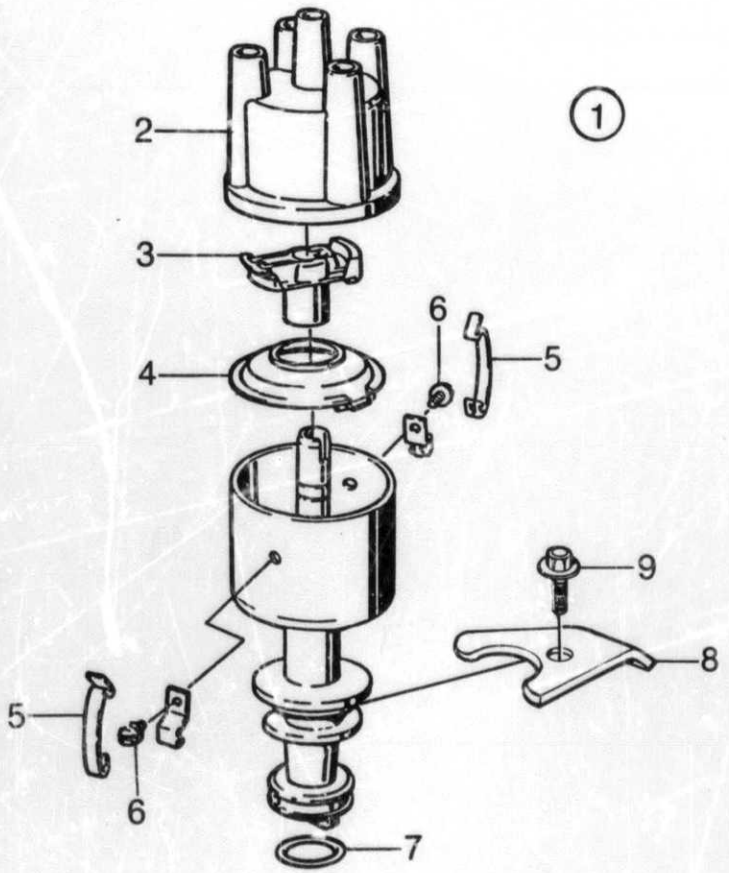

0435	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 84 439			1	Ignition distributor	Tändfördelare	5
0020	2	75 01 216			1	. Distributor cap	. Fördelarlock	2
0030	3	75 64 420			1	. Rotor	. Rotor	3
0040	4	75 19 135			1	. Cover	. Lock	6
0050	5	75 19 085			2	. Spring	. Fjäder	5
0060	6	75 19 101			2	. Screw	. Skruv	5
0070	7	75 19 143			1	. O-ring	. O-ring	6
0080	8	83 62 287			1	Bracket	Hållare	5
0090	9	*80 82 950*		-1992 NLS - USE 9166323	1	Screw	Skruv	5
0100	9	91 66 323		1993-	1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

Ignition system

2-A22 Ignition distributor B202 Turbo

Tändsystem

Tändfördelare B202 Turbo

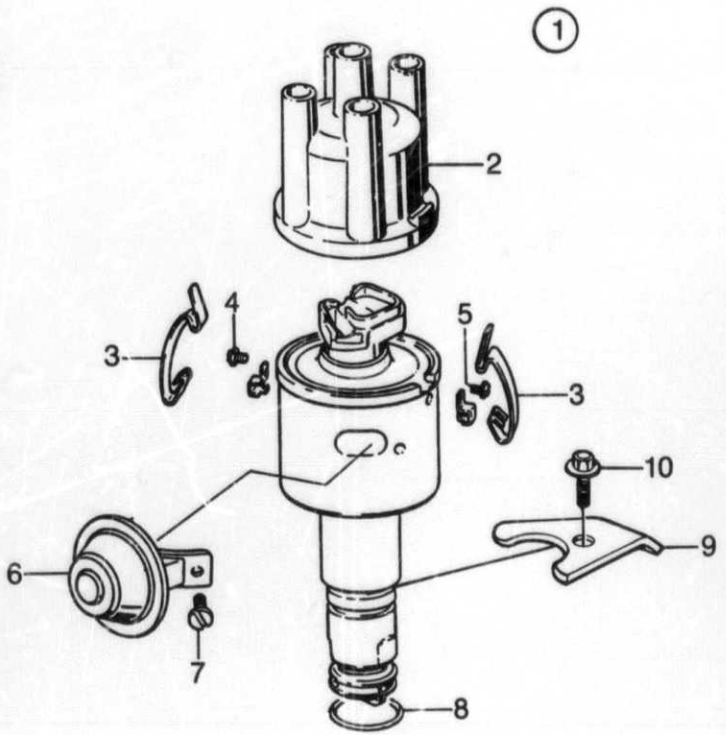

F3351 AAC90

0440	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 81 393			1	Ignition distributor	Tändfördelare	5
0020	1	88 57 617		B202S	1	Ignition distributor	Tändfördelare	5
0030	1	88 57 617		AERO (SPG), US	1	Ignition distributor	Tändfördelare	5
0035	1	88 57 617		185 HP, (137 KW)	1	Ignition distributor	Tändfördelare	5
0040	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0050	3	75 19 085			2	.Spring	.Fjäder	5
0060	4	75 19 127			1	.Screw	.Skruv	5
0070	5	75 19 119		27)	1	.Screw	.Skruv	5
0080	5	75 19 101		28)	1	.Screw	.Skruv	5
0090	6	75 64 438			1	.Regulator	.Regulator	4
0100	7	91 19 561		27)	1	.Screw	.Skruv	5
0110	7	75 19 101		28)	1	.Screw	.Skruv	5
0120	8	75 19 143			1	.O-ring	.O-ring	6
0130	9	83 62 287			1	Bracket	Hållare	5
0140	10	*80 82 950*		-1992 NLS - USE 9166323	1	Screw	Skruv	5
0150	10	91 66 323		1993-	1	Screw	Skruv	5

27. For ignition distributor 74 81 393. För fördelare 74 81 393.
28. For ignition distributor 88 57 617. För fördelare 88 57 617.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-A24

Headlamp
Strålkastare

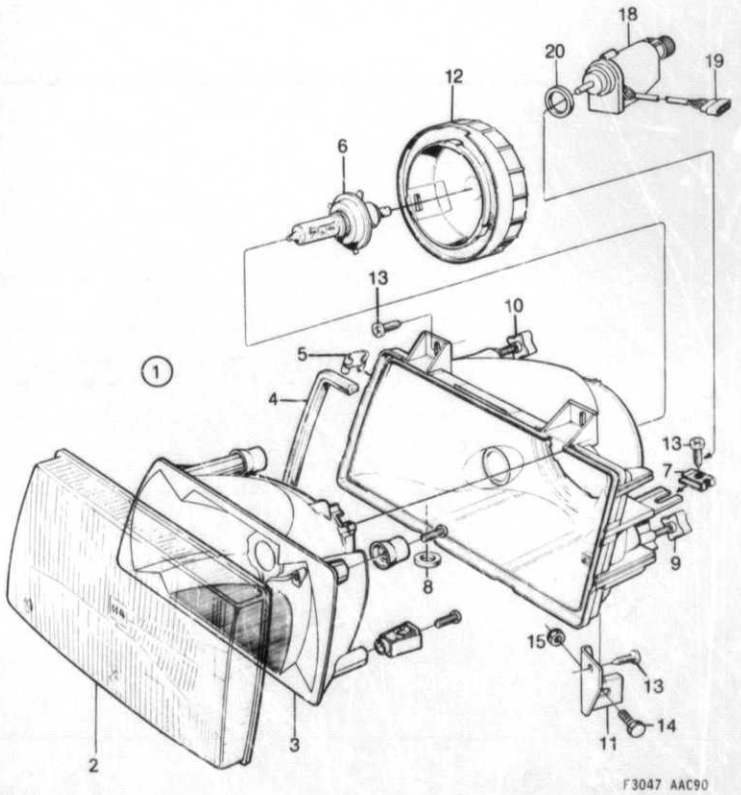

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 20 130		LH	1	Headlamp	Strålkastare	4
0020	1	91 20 148		RH	1	Headlamp	Strålkastare	4
0030	1	91 20 155		29), LH	1	Headlamp	Strålkastare	4
0040	1	91 20 163		29), RH	1	Headlamp	Strålkastare	4
0050	2	95 56 655		LH	1	.Glass	.Strålkastarglas	3
0060	2	95 56 663		RH	1	.Glass	.Strålkastarglas	3
0070	2	95 58 032		29), LH	1	.Glass	.Strålkastarglas	3
0080	2	95 58 040		29), RH	1	.Glass	.Strålkastarglas	3
0090	3	91 20 171		LH	1	.Reflector	.Reflektor	3
0100	3	91 20 189		RH	1	.Reflector	.Reflektor	3
0110	3	91 20 197		29), LH	1	.Reflector	.Reflektor	3
0120	3	91 20 205		29), RH	1	.Reflector	.Reflektor	3
0130	4	95 56 697			1	.Seal	.Tätning	4
0140	5	95 56 705			9	.Clip	.Clips	5
0150	6	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0160	7	85 50 824			2	.Clip	.Clips	3
0170	8	85 50 840			1	.Bushing	.Bussning	3
0180	9	95 56 713			1	.Setting screw	.Inställningsskruv	2
0190	10	95 56 721			1	.Setting screw	.Inställningsskruv	2
0200	11	95 56 812		LH	1	Attaching bracket	Fästvinkel	3
0210	11	95 56 820		RH	1	Attaching bracket	Fästvinkel	3
0220	12	85 39 710			2	Sealing cover	Tätningslock	4
0230	13	79 73 159			4	Screw	Skruv	5
0240	14	79 69 223			2	Screw	Skruv	5
0250	15	79 71 658			2	Nut	Mutter	5
0260	16	95 51 219			2	Stop	Anslag	5
0270	17	79 22 800			2	Screw	Skruv	5
0280	18	40 12 738			2	Electric motor headlamp levelling	Elmotor ljuslängdsreglering	3
0281								
0290	19	95 03 327			1	.Contact housing	.Kontakthus	4
0300	20	95 29 090			1	.Sealing ring	.Tätningsring	9

29. For left hand traffic. För vänstertrafik.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B02

Headlamp, sealed beam
Strålkastare, sealed beam

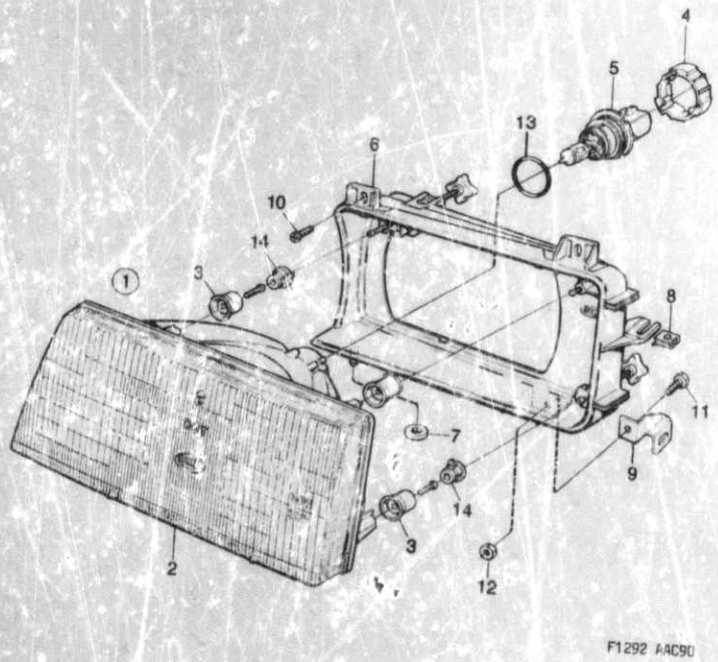

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S I
0010	1	95 56 010		1990, LH	1	Headlamp	Strålkastare	4
0020	1	95 56 028		1990, RH	1	Headlamp	Strålkastare	4
0025	1	40 92 870		1991-, LH	1	Headlamp	Strålkastare	4
0026	1	40 92 888		1991-, RH	1	Headlamp	Strålkastare	4
0030	2	95 57 018		1990, LH	1	.Headlamp insert	.Strålkastarinsats	3
0040	2	95 57 026		1990, RH	1	.Headlamp insert	.Strålkastarinsats	3
0045	2	40 93 019		1991-, LH	1	.Headlamp insert	.Strålkastarinsats	1
0046	2	40 93 027		1991-, RH	1	.Headlamp insert	.Strålkastarinsats	1
0050	3	95 57 158			3	..Clamping sleeve	..Klämhylsa	3
0060	4	95 12 393			1	.Lock ring	.Låsring	3
0070	5	95 12 401		40/238 301 006	1	.Bulb	.Glödlampa	1
0080	6	95 57 075		LH	1	.Attaching frame	.Fästram	3
0090	6	95 57 083		RH	1	.Attaching frame	.Fästram	3
0100	7	85 50 840			1	.Bushing	.Bussning	3
0110	8	85 50 824			1	.Clip	.Clips	3
0120	9	95 56 820		LH	1	Attaching bracket	Fästvinkel	3
0130	9	95 56 812		RH	1	Attaching bracket	Fästvinkel	3
0140	10	79 73 159			4	Screw	Skruv	5
0150	11	79 69 223			2	Screw	Skruv	5
0160	12	79 71 658			2	Nut	Mutter	5
0170	13	95 14 811		US	2	Protection	Skydd	4
0180	14	95 12 328			1	Bearing sleeve	Lagerhylsa	3

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B04

Lamp cluster
Kombinationslykta

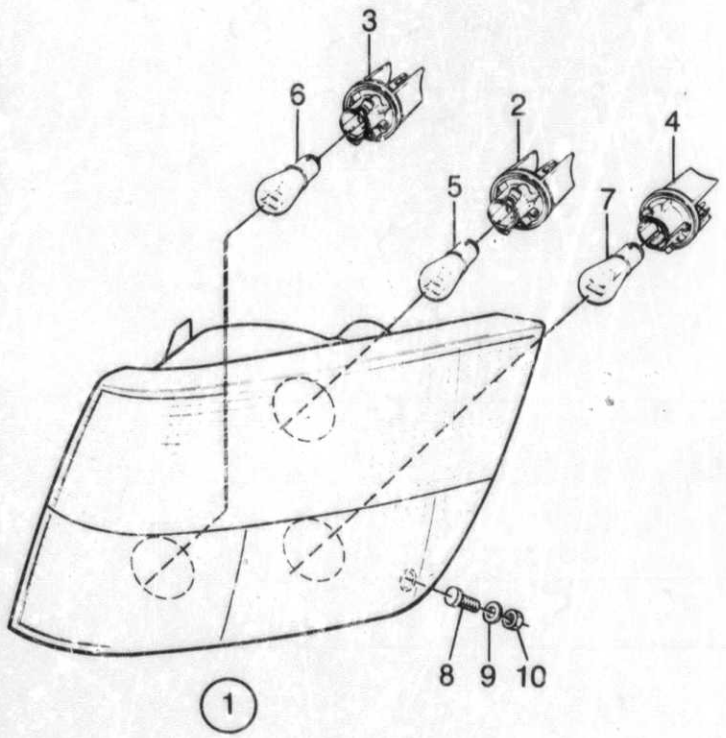

F1293 AAC90

0555	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 14 916		120), LH	1	Direction indicator	Blinklykta	2
0020	1	40 14 924		120), RH	1	Direction indicator	Blinklykta	2
0030								
0040	1	40 14 932		121), LH	1	Direction indicator	Blinklykta	2
0050	1	40 14 940		121), RH	1	Direction indicator	Blinklykta	2
0051								
0070	1	40 14 957		122), LH	1	Direction indicator	Blinklykta	2
0080	1	40 14 965		122), RH	1	Direction indicator	Blinklykta	2
0100	2	95 56 986			2	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0101								
0110	2	95 56 994		30)	2	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0120								
0130								
0140	3	95 56 986			2	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0141								
0150	3	95 56 994		30)	2	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0160								
0170								
0180	4	95 56 986			2	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0190								
0195								
0200	5	71 54 719		40/238 290 001	2	.Bulb direction indicator	.Glödlampa blinklykta	1
0210								
0220	5	85 32 756		30), 40/ 238 291 009	2	.Bulb direction indicator	.Glödlampa blinklykta	1
0230								
0250								
0260	6	71 54 727		40/238 254 007	2	.Bulb position lamp	.Glödlampa positionslykta	1
0270								
0280	6	85 32 756		30), 40/238 291 009	2	.Bulb position lamp	.Glödlampa positionslykta	1
0290								
0310								
0320	7	71 54 719		40/238 291 009	2	.Bulb reverse lamp	.Glödlampa backlampa	1
0330								
0340	7	85 35 692		30), 40/238 304 000	2	.Bulb reverse lamp	.Glödlampa backlampa	1
0350								
0370								
0380	8	79 22 438			4	Screw	Skruv	5
0390	9	85 44 801			4	Washer	Bricka	3
0400	10	73 98 423			4	Nut	Mutter	5

30. For 40 14 957 and 40 14 965. För 40 14 957 och 40 14 965.
120. With position light. Med positionsljus.
121. With position light and side back up light. Med positionsljus och sidobackljus.
122. With position light/corner light and back up light. Med positionsljus/hörnljus och sidobackljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

Lighting

2-B06 Tail lamp CK

Belysning

Baklykta CK

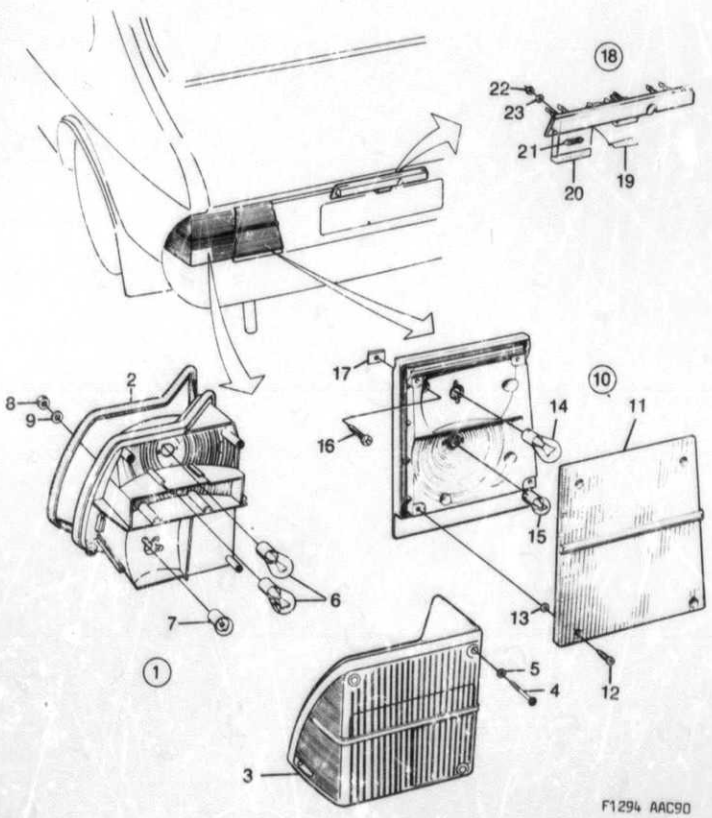

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*85 85 333*		92), LH NLS - USE 9122813	1	Tail lamp	Baklykta	3
0010								
0015	1	91 22 813		93), LH	1	Tail lamp	Baklykta	3
0020	1	*85 85 341*		92), RH NLS - USE 9122821	1	Tail lamp	Baklykta	3
0020								
0025	1	91 22 821		93), RH	1	Tail lamp	Baklykta	3
0030								
0040	1	*85 85 358*		92), LH, US, CA, JP NLS - USE 9122839	1	Tail lamp	Baklykta	3
0040								
0045	1	91 22 839		93)-1991, LH, US, CA, JP	1	Tail lamp	Baklykta	3
0047	1	91 22 839		1992-, LH, US, CA, PA	1	Tail lamp	Baklykta	3
0050	1	*85 85 366*		92), RH, US, CA, JP NLS - USE 9122847	1	Tail lamp	Baklykta	3
0050								
0055	1	91 22 847		93)-1991, RH, US, CA, JP	1	Tail lamp	Baklykta	3
0057	1	91 22 847		1992-, RH, US, CA, PA	1	Tail lamp	Baklykta	3
0060	2	85 61 284			1	.Seal	.Tätning	5
0070	3	*85 85 416*		92), LH NLS - USE 9122995	1	.Lens	.Lyktglas	2
0070								
0075	3	91 22 995		93), LH	1	.Lens	.Lyktglas	2
0080	3	*85 85 424*		92), RH NLS - USE 9123001	1	.Lens	.Lyktglas	2
0080								
0085	3	91 23 001		93), RH	1	.Lens	.Lyktglas	2
0090	3	*85 85 432*		92), LH, US, CA, JP NLS - USE 9123019	1	.Lens	.Lyktglas	2
0090								
0095	3	91 23 019		93)-1991, LH, US, CA, JP	1	.Lens	.Lyktglas	2
0097	3	91 23 019		1992-, LH, US, CA, PA	1	.Lens	.Lyktglas	2
0100	3	*85 85 440*		92), RH, US, CA, JP NLS - USE 9123027	1	.Lens	.Lyktglas	2
0100								
0105	3	91 23 027		93)-1991, RH, US, CA, JP	1	.Lens	.Lyktglas	2
0107	3	91 23 027		1992-, RH, US, CA, PA	1	.Lens	.Lyktglas	2
0110	4	79 74 025			4	..Screw	..Skruv	5
0120	5	85 60 591			4	..Washer	..Bricka	5
0130	6	71 54 719		40/238 290 001	4	.Bulb	.Glödlampa	1
0140	6	85 35 692		US, 40/238 304 000	4	.Bulb	.Glödlampa	1
0150	7	*85 37 672*		40/238 292 007 NLS - USE 4320594	2	.Bulb	.Glödlampa	1
0150								
0160	7	85 32 756		US, 40/238 291 009	2	.Bulb	.Glödlampa	1
0170	8	81 51 227			4	Nut	Mutter	5
0180	9	80 29 951		-1992	4	Washer	Bricka	5
0187	9	91 66 364		1993-	4	Washer	Bricka	5
0190	10	40 60 679		LH	1	Lamp rear door	Lykta bakdörr	3
0195								
0200	10	40 60 687		RH	1	Lamp rear door	Lykta bakdörr	3
0210								
0211								
0220	10	40 60 695		31), LH	1	Lamp rear door	Lykta bakdörr	3
0230								
0240	10	40 60 703		31), RH	1	Lamp rear door	Lykta bakdörr	3
0250								
0255								
0260	11	85 85 457		LH	1	.Lens	.Lyktglas	2
0270	11	85 85 465		RH	1	.Lens	.Lyktglas	2
0280								
0290	11	85 85 473		31), LH	1	.Lens	.Lyktglas	2
0300	11	85 85 481		31), RH	1	.Lens	.Lyktglas	2
0310								
0320	12	79 74 025			4	..Screw	..Skruv	5
0330	13	85 60 591			4	..Washer	..Bricka	5
0340	14	71 54 719		40/238 290 001	2	.Bulb	.Glödlampa	1
0350	15	71 54 727		40/238 254 007	2	.Bulb	.Glödlampa	1

31. With rear fog light. Med dimbaklykta.
92. Ch -L3002670, -L5000289, -L7005857.
93. Ch L3002671-, L5000290-, L7005858-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

Lighting

2-B08 Tail lamp CK

Belysning

Baklykta CK

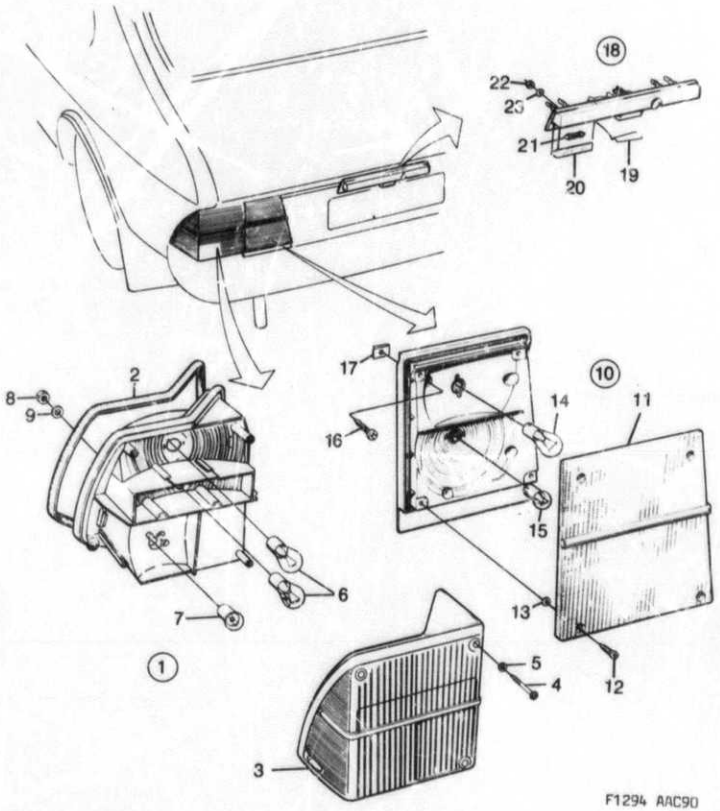

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0360	16	79 22 388			8	Screw	Skruv	5
0370	17	94 27 014			8	Clip nut	Clipsmutter	3
0380	18	*40 60 216*		96) NLS - USE 4093381	1	Lighting	Belysning	5
0385	18	40 93 381		97)	1	Lighting	Belysning	5
0390	19	85 63 918			1	. Spring	. Fjäder	5
0400	20	40 60 323			2	. Lens	. Lyktglas	3
0410	21	70 84 197			2	. Bulb	. Glödlampa	1
0420	22	81 51 219			5	Nut	Mutter	5
0430	23	70 88 073			3	Washer	Bricka	5

96 Ch –L3003884, –L5000611, –L7007447.
97. Ch L3003885–, L5000612–, L7007448–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-C02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B10 Tail lamp / Baklykta

SN

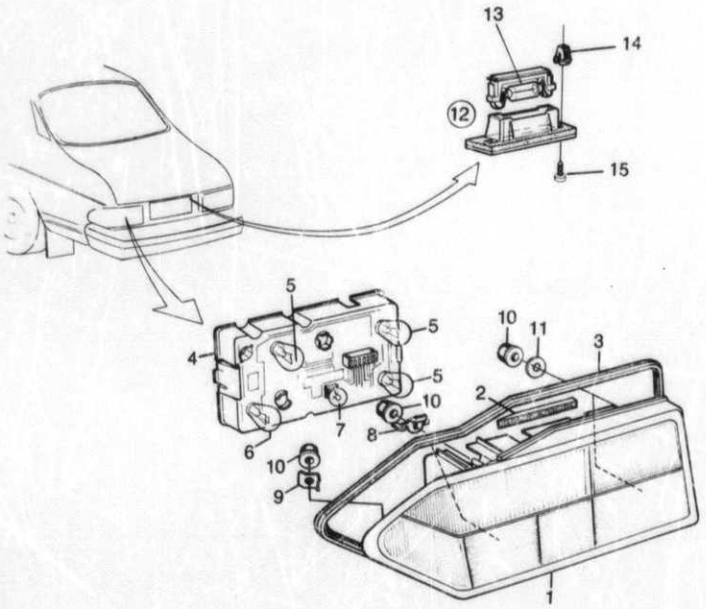

F1295 AAC90

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 85 853		LH	1	Tail lamp	Baklykta	3
0020	1	85 85 861		RH	1	Tail lamp	Baklykta	3
0030	1	85 85 879		31), LH	1	Tail lamp	Baklykta	3
0040	1	85 85 887		31), RH	1	Tail lamp	Baklykta	3
0050	1	85 85 895		-1991, LH, US, CA, JP	1	Tail lamp	Baklykta	3
0060	1	85 85 903		-1991, RH, US, CA, JP	1	Tail lamp	Baklykta	3
0063	1	85 85 895		1992-, LH, US, CA, PA	1	Tail lamp	Baklykta	3
0065	1	85 85 903		1992-, RH, US, CA, PA	1	Tail lamp	Baklykta	3
0070	2	85 74 535		LH	1	.Seal	.Tätning	5
0080	2	85 74 543		RH	1	.Seal	.Tätning	5
0090	3	85 77 785			1	.Seal	.Tätning	5
0100	4	85 85 978		LH	1	Rear section	Bakstycke	5
0110	4	85 85 986		RH	1	Rear section	Bakstycke	5
0120	5	71 54 719		40/238 290 001	3	Bulb	Glödlampa	1
0130	5	85 35 692		US, 40/238 304 000	1	Bulb	Glödlampa	1
0140	6	*85 37 672*		40/238 292 007 NLS - USE 4320594	1	Bulb	Glödlampa	1
0150	6	85 32 756		US, 40/238 291 009	1	Bulb	Glödlampa	1
0160	7	71 54 727		40/238 254 007	1	Bulb	Glödlampa	1
0170	7	85 52 325		US, 40/238 254 015	1	Bulb	Glödlampa	1
0180	8	85 66 416			4	Bracket	Fäste	6
0190	9	85 66 424			2	Bracket	Fäste	6
0200	10	79 73 365			10	Nut	Mutter	5
0210	11	79 16 489			4	Washer	Bricka	5
0220	12	85 67 653			2	Lighting	Belysning	5
0230	13	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0240	14	40 13 165			4	Clip	Clips	5
0250	15	79 22 230			4	Screw	Skruv	5


31. With rear fog light. Med dimbaklykta.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

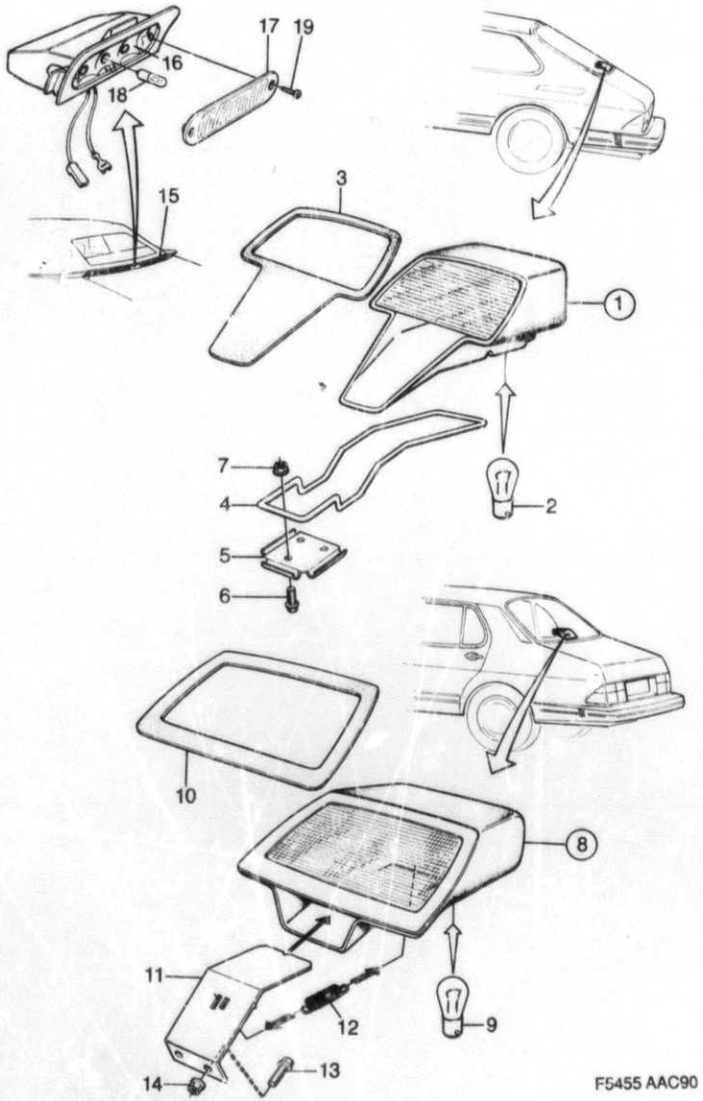

F5455 AAC90

Lighting

2-B12

Stop light
High mounted

Belysning

Stopplykta
Högt monterad

0675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 67 223		CK	1	Stop light	Stopplykta	3
0020	2	85 35 692		40/238 304 000	1	. Bulb	. Glödlampa	1
0030	3	95 14 233			1	. Seal	. Tätning	3
0040	4	95 55 327		CK	1	Tensioner	Spännare	6
0050	5	95 53 132		CK	1	Clamping-piece	Klämstycke	6
0060	6	80 19 895		-1992, CK	3	Screw	Skruv	5
0065	6	91 66 273		1993-, CK	3	Screw	Skruv	5
0070	7	79 74 728		CK	3	Cage nut	Korgmutter	5
0080								
0090	8	85 98 286		1990, SN	1	Stop light	Stopplykta	3
0095	8	43 41 194		1991-, SN	1	Stop light	Stopplykta	3
0100	9	85 35 692		40/238 304 000	1	. Bulb	. Glödlampa	1
0110	10	95 51 953			1	. Seal	. Tätning	3
0120	11	40 90 031		SN	1	Bracket	Konsol	6
0130	12	95 53 512		SN	1	. Spring	. Fjäder	6
0140	13	82 86 296		SN	2	Screw	Skruv	5
0150	14	79 74 728		SN	2	Cage nut	Korgmutter	5
0160								
0170	15			CV		Spoiler	Spoiler	
0175				See page 8A-095, 4-D24				
0178	16	69 36 306			1	. Reflector	. Reflektor	6
0180	17	69 97 183			1	. Lens	. Lyktglas	2
0190	18	95 12 880		40/238 300 008	3	. Bulb	. Glödlampa	1
0200	19	69 36 314			2	. Screw	. Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B14

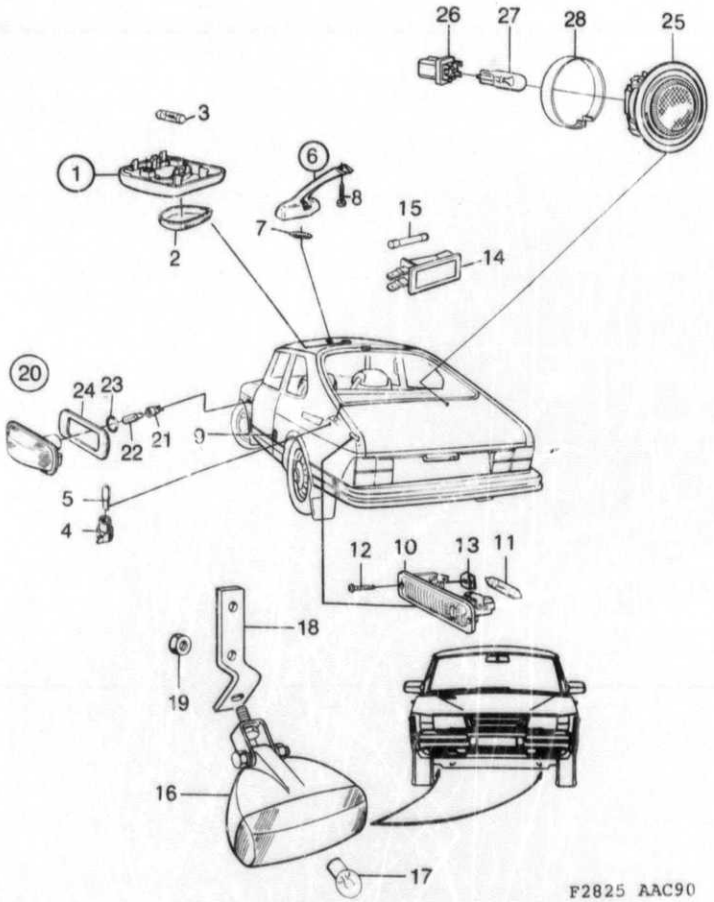

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 60 398			1	Dome lamp	Taklampa	4
0020	2	40 60 406			1	.Lamp lens	.Lampglas	6
0030	3	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
0040	4	85 09 697			1	Bulb socket	Lamphållare	5
0041						starter switch	tändningslås	
0050	5	85 00 613		40/238 286 009	1	Bulb	Glödlampa	2
0060	6	95 54 411			1	Lamp	Lampa	5
0070						rear view mirror	backspegel	
0080	6	95 54 411		CV	1	Lamp	Lampa	5
0090						rear view mirror	backspegel	
0100	7	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0110	8	79 75 329			1	Screw	Skruv	5
0120	9	85 83 593			2	Reflex	Reflex	5
0130	10	85 77 801			1	Lamp	Lampa	3
0131						boot	bagagerum	
0140	11	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
0150	12	79 70 346			2	Screw	Skruv	5
0160	13	79 72 771			2	Clip nut	Clipsmutter	5
0170	14	95 69 948			1	Lighting	Belysning	4
0171						glove compartment	handskfack	
0180	15	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0190	16	*85 61 409*		DK NLS	2	Position lamp	Positionslykta	9
0200	17	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0210	18	*85 61 375*		LH, DK NLS	1	Bracket	Fäste	6
0220	18	*85 61 383*		RH, DK NLS	1	Bracket	Fäste	6
0230	19	81 51 235		DK	2	Nut	Mutter	5
0240	20	91 24 132			2	Side light	Sidolampa	3
0250	21	95 21 857			1	.Bulb socket	.Lamphållare	6
0260	22	95 12 880		40/238 300 008	1	.Bulb	.Glödlampa	1
0270	23	95 12 898			1	.Gasket	.Packning	6
0280	24	91 24 140			1	.Seal	.Tätning	6
0290	25	98 23 683		CV	2	Lamp	Lampa	6
0300	26	95 97 006		CV	2	Bracket	Hållare	6
0310	27	95 12 880		CV, 40/238 300 008	2	Bulb	Glödlampa	1
0320	28	98 24 939		CV	2	Clamp	Klammer	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B16

Horn
Signalhorn

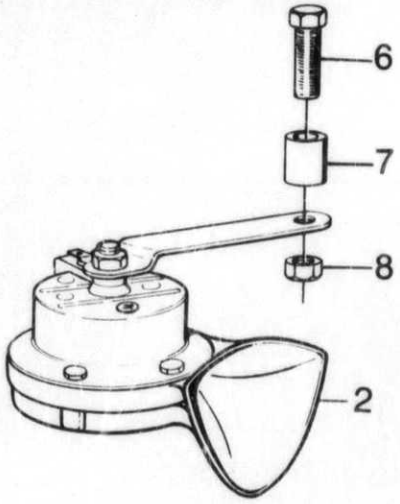

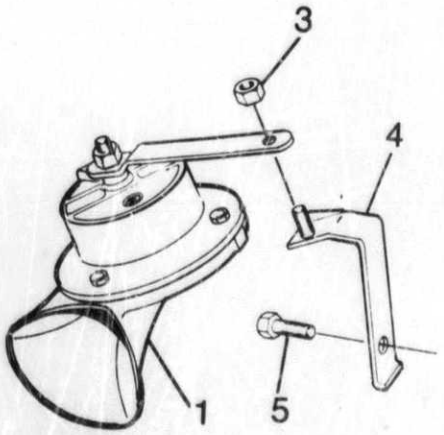

F1298 AAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 29 421			1	Horn	Signalhorn	4
0015						low tone	låg ton	
0020	2	95 29 413			1	Horn	Signalhorn	4
0025						high tone	hög ton	
0030	3	81 51 235			2	Nut	Mutter	5
0040	4	95 68 064			1	Bracket	Konsol	6
0050	5	80 19 895		-1992	1	Screw	Skruv	5
0055	5	* 91 66 273		1993-	1	Screw	Skruv	5
0060	6	79 70 015			1	Screw	Skruv	5
0070	7	95 57 885			1	Spacer sleeve	Distanshylsa	5
0080	8	80 74 288		-1992	1	Nut	Mutter	5
0090	8	* 91 66 406		1993-	1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B18

Windscreen wiper

Vindrutetorkare

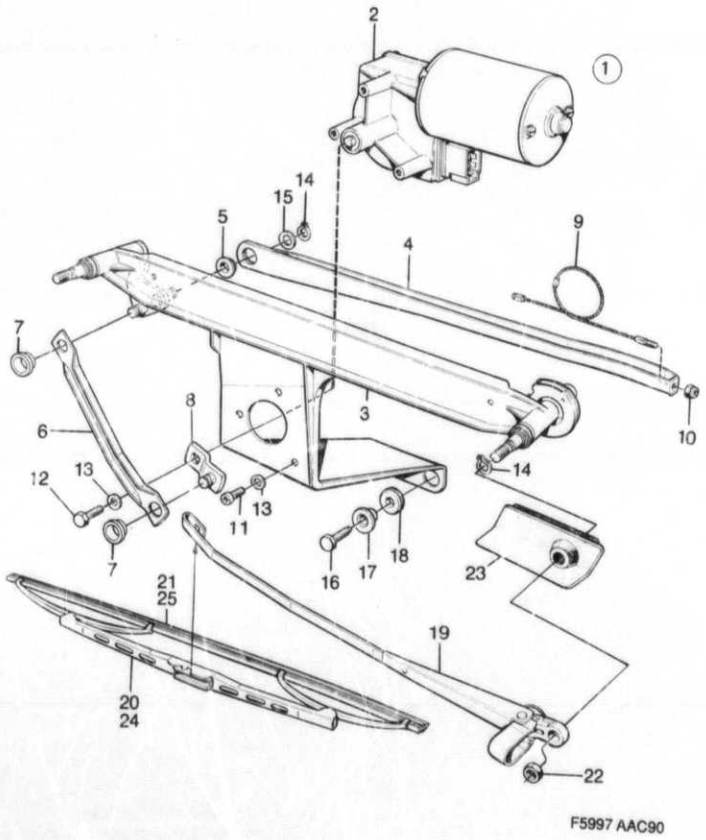

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 462			1	Electric motor	Elmotor	4
0020	2	85 44 686			1	.Drive gear	.Drev	5
0030	3	85 44 470			1	Beam	Balk	5
0040	3	85 58 124		RHD	1	Beam	Balk	5
0050	4	85 44 504			1	Carrier arm	Medbringararm	5
0060	4	85 58 132		RHD	1	Carrier arm	Medbringararm	5
0070	5	85 04 029			1	.Bushing	.Bussning	3
0080	6	85 44 512			1	Connecting rod	Vevstake	5
0090	6	85 58 140		RHD	1	Connecting rod	Vevstake	5
0100	7	85 59 320			2	.Bushing	.Bussning	3
0110	8	85 44 520			1	Crank arm	Vevarm	5
0120	8	85 61 466		RHD	1	Crank arm	Vevarm	5
0130	9	85 44 538			1	Cable	Lina	3
0140	10	80 74 270			1	Lock nut	Låsmutter	3
0150	11	80 59 396			3	Screw	Skruv	5
0160	12	80 19 895		-1992	1	Screw	Skruv	5
0165	12	91 66 273		1993-	1	Screw	Skruv	5
0170	13	80 29 951		-1992	4	Washer	Bricka	5
0175	13	91 66 364		1993-	4	Washer	Bricka	5
0180	14	79 63 135			3	E-circlip	Spårryttare	3
0190	15	85 44 702			1	Washer	Bricka	5
0200	16	85 58 074			4	Screw	Skruv	5
0210	17	85 44 413			4	Sleeve	Hylsa	5
0220	18	85 44 421			2	Bushing	Bussning	3
0230	19	85 53 810		LH	1	Wiper arm	Torkararm	3
0240	19	85 53 828		RH	1	Wiper arm	Torkararm	3
0250	19	85 58 090		LH, RHD	1	Wiper arm	Torkararm	3
0255	19	85 58 108		RH, RHD	1	Wiper arm	Torkararm	3
0260	19	95 53 306		LH, CV	1	Wiper arm	Torkararm	3
0270	19	95 53 314		RH, CV	1	Wiper arm	Torkararm	3
0290	19	95 59 352		LH, RHD, CV	1	Wiper arm	Torkararm	3
0300	19	95 59 345		RH, RHD, CV	1	Wiper arm	Torkararm	3
0310	20	45 21 209		(8557480, 4172888)	2	Wiper blade	Torkarblad	
0330	20	40 60 745		11), 1990	2	Wiper blade	Torkarblad	1
0340	20	41 72 896		11), 1991-	2	Wiper blade	Torkarblad	1
0350	20	95 55 202		CV	2	Wiper blade	Torkarblad	1
0360	21	*85 53 844*	S	1), 1990 NLS - USE 4250163	1	.Profile	.Profil	2
0370	21	42 50 163	S	1), 1991-	1	.Profile	.Profil	2
0380	21	40 60 752	S	1,11), 1990	1	.Profile	.Profil	2
0390	21	42 50 155	S	1,11), 1991-	1	.Profile	.Profil	2
0400	21	95 55 962	S	1), CV	1	.Profile	.Profil	2
0410	22	81 51 235			2	Nut	Mutter	5
0420	23	85 44 439		LH	1	Cover	Täcklock	4
0430	23	85 44 736		RH	1	Cover	Täcklock	4
0440	24	*85 47 499*		1990	X	Wiper blade kit	Torkarbladssats	1
0450				See page 3A-133, 2-F14				
0450				NLS - USE 8548216				
0460	24	85 48 216		1991-	X	Wiper blade kit	Torkarbladssats	1
0470				See page 3A-133, 2-F14				
0480	24	85 47 747		11), 1990	X	Wiper blade kit	Torkarbladssats	6
0490				See page 3A-133, 2-F14				
0500	24	85 48 224		11), 1991-	X	Wiper blade kit	Torkarbladssats	1
0510				See page 3A-133, 2-F14				
0520	25	85 46 319		1990	X	Profiled rubber kit	Gummiprofilsats	2
0530				See page 3A-133, 2-F14				
0540	25	85 48 190		1991-	X	Profiled rubber kit	Gummiprofilsats	2
0550				See page 3A-133, 2-F14				
0560	25	85 47 754		11), 1990	X	Profiled rubber kit	Gummiprofilsats	2
0570				See page 3A-133, 2-F14				

1. Not as separate spare part. Ej som separat reservdel.
11. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B20

Windscreen wiper

Vindrutetorkare

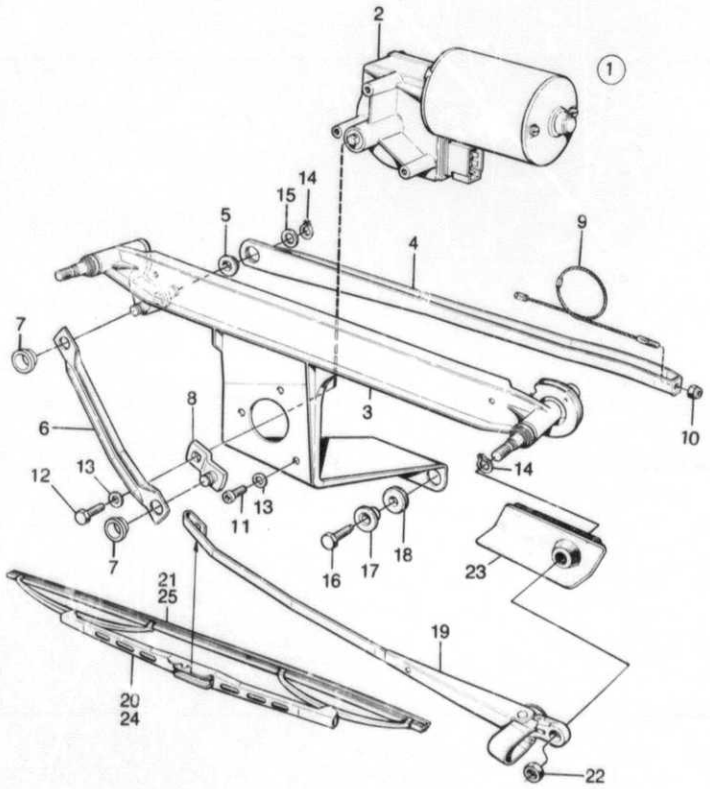

F5997 AAC90

0800	Pos	Part no/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	25	85 48 208		11), 1991-	X	Profiled rubber kit	Gummiprofilsats	2
0590				See page 3A-133, 2-F14				
0600	25	85 47 655		CV	X	Profiled rubber kit	Gummiprofilsats	2
0610				See page 3A-133, 2-F14				

11. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B22

Headlamp wiper
Strålkastartorkare

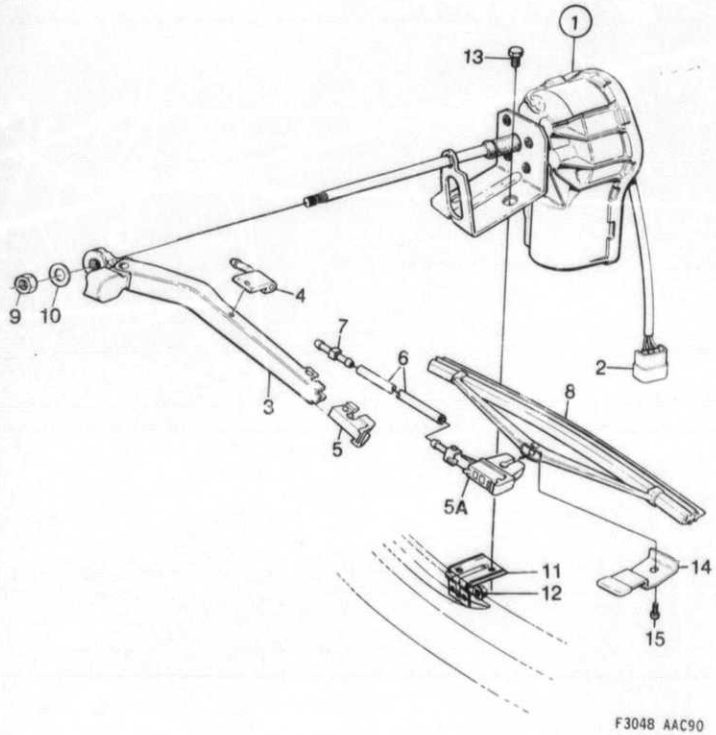

F3048 AAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*95 56 200*		1990, LH NLS - USE 4095790	1	Wiper motor	Torkarmotor	3
0020	1	*95 56 218*		1990, RH NLS - USE 4095816	1	Wiper motor	Torkarmotor	3
0025	1	40 95 790		1991-, LH	1	Wiper motor	Torkarmotor	3
0030	1	40 95 816		1991-, RH	1	Wiper motor	Torkarmotor	3
0035	1	40 93 126		1991-, LH, US	1	Wiper motor	Torkarmotor	3
0037	1	40 93 134		1991-, RH, US	1	Wiper motor	Torkarmotor	3
0040	2	95 03 327		See page 3B-017, 2-G18	1	. Contact housing 3-pole, male	. Kontakthus 3-polig, stift	4
0070	3	95 56 291		LH	1	Wiper arm	Torkararm	4
0080	3	95 56 283		RH	1	Wiper arm	Torkararm	4
0087	3	95 64 303		LH, US	1	Wiper arm	Torkararm	4
0088	3	95 64 295		RH, US	1	Wiper arm	Torkararm	4
0090	4	95 09 118		LH	1	. Nozzle	. Munstycke	2
0100	4	95 09 126		RH	1	. Nozzle	. Munstycke	2
0110	5	95 58 149			1	. Adapter	. Adapter	5
0111	5A	91 23 217		LH, US	1	. Adapter	. Adapter	5
0112	5A	91 23 225		RH, US	1	. Adapter	. Adapter	5
0115	6	42 54 603		US, L=130 MM	1	. Hose	. Slang	5
0117	7	40 14 783		US	1	. Junction pipe	. Skarvrör	2
0120	8	91 20 882	S		2	Wiper blade	Torkarblad	2
0140	9	80 29 548			2	Nut	Mutter	5
0150	10	79 72 284			2	Washer	Bricka	5
0155	11	95 56 242			2	Bracket	Konsol	5
0200	12	79 71 658			4	Nut	Mutter	5
0210	13	80 19 895		-1992	4	Screw	Skruv	5
0212	13	91 66 273		1993-	4	Screw	Skruv	5
0215	14	95 51 219			2	Stop	Anslag	5
0217	15	79 22 800			2	Screw	Skruv	5
0220		85 47 408		See page 3A-133, 2-F14	X	Wiper blade kit	Torkarbladssats	2

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-B24

Washer unit — *Spolaranläggning*

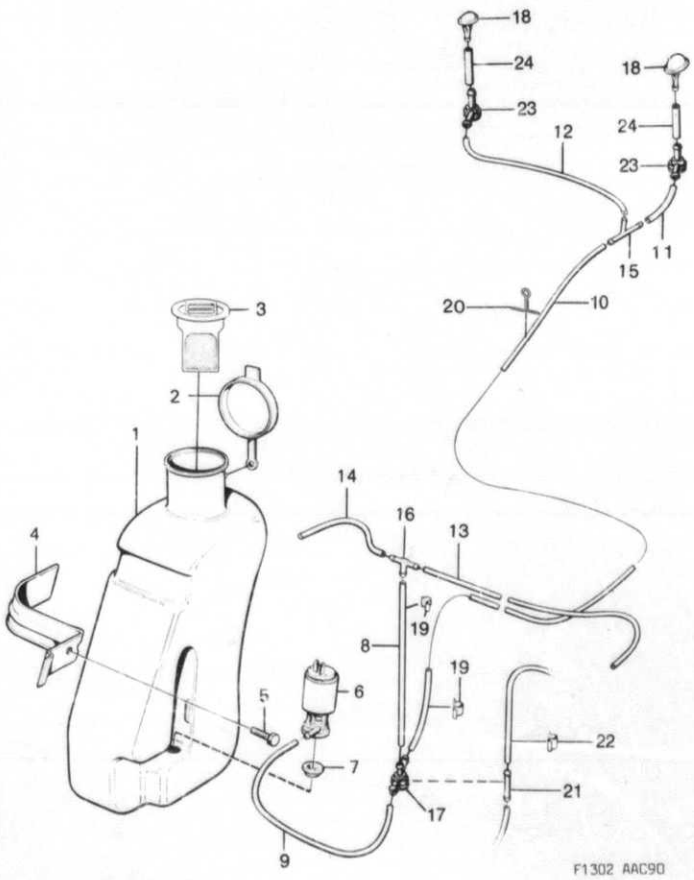

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 66 902		-1992	1	Washer fluid reservoir	Spolarburk	3
0015	1	40 61 867		20), -1992	1	Washer fluid reservoir	Spolarburk	3
0017	1	40 61 867		1993-	1	Washer fluid reservoir	Spolarburk	3
0020	2	85 18 557			1	.Cover	.Lock	2
0030	3	95 66 332			1	.Filter	.Filter	4
0040	4	40 60 661			1	Bracket	Fäste	5
0050	5	80 19 945			1	Screw	Skruv	5
0060	6	95 06 379			1	Washer pump	Spolarpump	2
0070	7	95 28 795			1	Rubber bushing	Gummibussning	3
0080	8	85 33 341			1	Hose	Slang	5
0090	9	85 33 374			1	Hose	Slang	5
0100	10	85 60 732			1	Hose	Slang	5
0110	11	85 52 044			1	Hose	Slang	5
0120	12	85 60 740			1	Hose	Slang	5
0130	13	85 44 785			1	Hose	Slang	5
0140	14	85 44 793			1	Hose	Slang	5
0150	15	85 09 002			1	Tube	Rör	2
0160	16	85 44 660			1	T-pipe	T-rör	2
0170	17	95 69 013			1	Valve	Ventil	3
0185	18	85 04 144		-1991	2	Nozzle	Munstycke	2
0190	18	42 54 645		1992-	2	Nozzle	Munstycke	2
0200	19	71 56 409			2	Clamp	Klammer	5
0210	20	85 08 392			2	Bracket	Hållare	5
0220	21	85 08 848		12)	1	Junction pipe	Skarvrör	5
0230	22	79 33 443		12)	2	Clip	Clips	5
0240	23	85 73 669			2	Valve	Ventil	
0250	24	85 73 677			2	Hose	Slang	5


12. For cars without headlight wipers. För bilar utan strålkastartorkare.
20. AIR-BAG.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

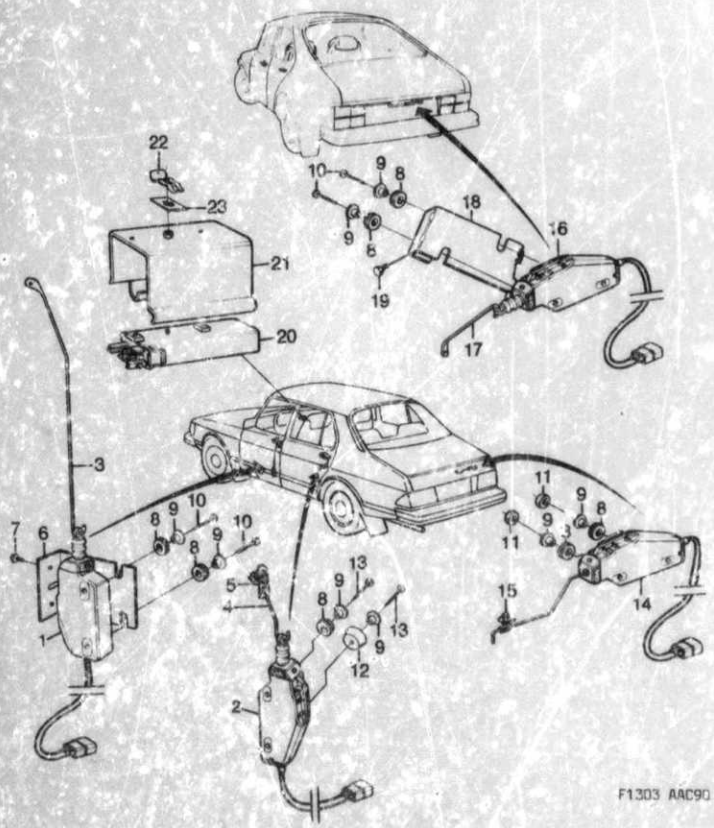

Electric equipment, other

2-C02

Central lock

Övr. elektrisk utrustning

Centrallås

0930	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 91 216		-1991	1	Control device	Styrdon	3
0011	1	85 91 216		1992-	1	Control device	Styrdon	3
0012	1	85 91 216		66,136), 1992-, CV	1	Control device	Styrdon	3
0013	1	85 91 224		66,135), 1992-, CV	1	Electric motor	Elmotor	3
0020				See page 8A-069, 4-C22		Door lock	Dörrlås	
0030	2	85 91 224			3	Electric motor	Elmotor	3
0040	3	85 98 245		LH	1	Pull rod front door	Dragstång framdörr	
0050	3	85 98 252		RH	1	Pull rod front door	Dragstång framdörr	
0060	4	85 78 221			2	Pull rod rear door	Dragstång bakdörr	5
0070	5	84 61 675			2	Clip	Clips	5
0080	6	85 98 211		LH, 4SN, 5CK	1	Bracket	Konsol	6
0090	6	95 51 151		RH, 4SN, 5CK	1	Bracket	Konsol	6
0100	6	85 98 229		LH, 2SN, 3CK	1	Bracket	Konsol	6
0110	6	85 98 237		RH, 2SN, 3CK	1	Bracket	Konsol	6
0120	7	80 59 537			4	Screw	Skruv	5
0130	8	85 73 986			8	Bushing	Bussning	4
0140	9	85 73 958			8	Sleeve	Hylsa	5
0150	10	79 73 597			6	Screw	Skruv	5
0160	11	80 74 098		4SN	2	Nut	Mutter	5
0170	12	70 65 541			2	Sleeve	Hylsa	3
0180	13	79 73 597			4	Screw	Skruv	5
0190	14	85 91 232		4SN	1	Electric motor	Elmotor	3
0200	15	85 77 710			1	Clip	Clips	5
0210	16	95 91 224		CK	1	Electric motor	Elmotor	3
0220	17	85 74 501		CK	1	Pull rod	Dragstång	5
0230	18	85 75 391		CK	1	Bracket	Konsol	6
0240	19	79 72 441		CK	2	Screw	Skruv	5
0250	20	95 29 975			1	Electronic unit	Elektronikenhet	3
0260	21	95 64 170			1	Attaching brace	Fästbygel	6
0270	22	85 65 856			1	Clip	Clips	6
0280	23	95 64 345			1	Spacer washer	Distansbricka	5
0290				See page 8A-077, 4-D06		Cover	Lock	
0300				C, 3CK	X	Central lock	Centrallås	
0310				See page 8A-153, 4-G10				
0320				I, 3CK	X	Central lock	Centrallås	
0330				See page 8A-153, 4-G10				
0340				C, 5CK	X	Central lock	Centrallås	
0350				See page 8A-153, 4-G10				
0360				I, 5CK	X	Central lock	Centrallås	
0370				See page 8A-153, 4-G10				
0380				C, 4SN	X	Central lock	Centrallås	
0390				See page 8A-153, 4-G10				
0400				I, 4SN	X	Central lock	Centrallås	
0410				See page 8A-153, 4-G10				
0420				C, 2SN	X	Central lock	Centrallås	
0430				See page 8A-153, 4-G10				
0440				I, 2SN	X	Central lock	Centrallås	
0450				See page 8A-153, 4-G10				

66. Drivers side. Förarsida.
135. With anti theft system. Med stöldlarm.
136. Without anti theft system. Utan stöldlarm.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C04

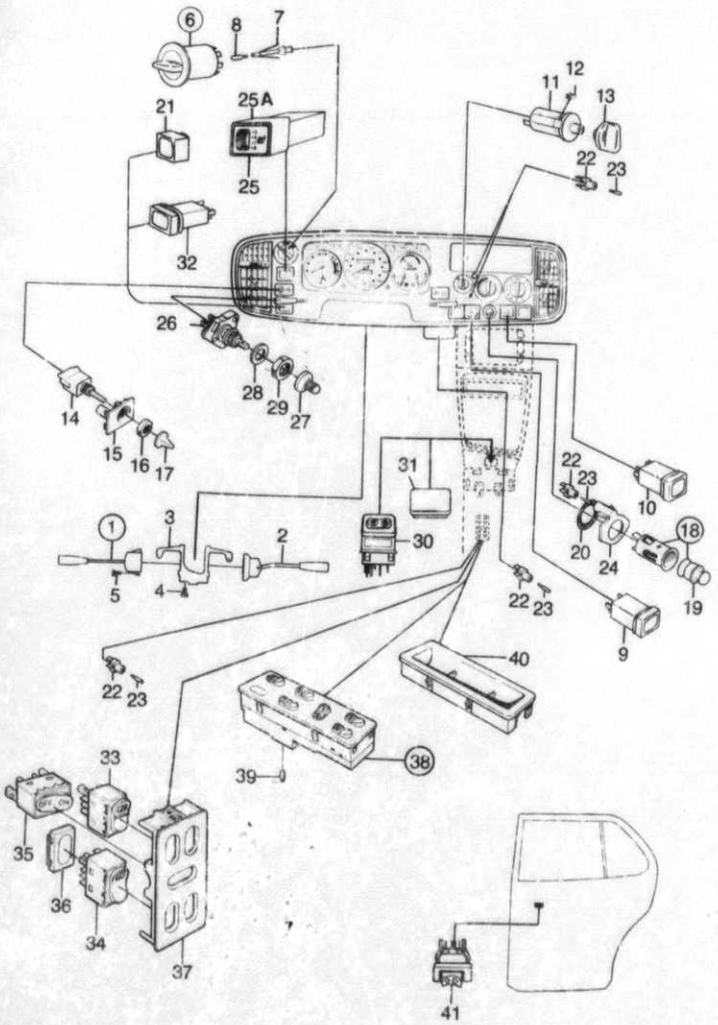

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*85 90 820*		NLS - USE 8590812	1	Switch	Strömställare	2
0020						direction indicator	blinkers	
0030	1	85 90 812		-1991, US, CA, JP	1	Switch	Strömställare	
0040						direction indicator	blinkers	
0045	1	85 90 812		1992-, US, CA	1	Switch	Strömställare	
0046						direction indicator	blinkers	
0050	1	95 65 623		13)	1	Switch	Strömställare	4
0060						direction indicator	blinkers	
0070	2	85 90 853			1	Switch	Strömställare	3
0080						windscreen wiper	vindrutetorkare	
0090	2	85 96 140		12), 1990	1	Switch	Strömställare	3
0100						windscreen wiper	vindrutetorkare	
0110	3	85 53 927			1	Bracket	Konsol	6
0120	3	91 22 573		20,107)	1	Bracket	Konsol	6
0125	3	41 73 654		20,108)	1	Bracket	Konsol	6
0130	4	79 22 800			2	Screw	Skruv	5
0140	5	79 72 219			4	Screw	Skruv	5
0150	6	85 90 838			1	Switch	Strömställare	3
0160						light switch	ljusomkopplare	
0170	7	85 53 356			1	▪Bracket	▪Hållare	4
0180	8	85 00 613		40/238 286 009	1	▪Bulb	▪Glödlampa	2
0190	9	95 23 721			1	Switch	Strömställare	3
0200						rear window	bakruta	
0210	9	95 23 820		US, ME, FE	1	Switch	Strömställare	3
0220						rear window	bakruta	
0230	9	95 23 788		AC	1	Switch	Strömställare	3
0240	9	95 23 846			1	Switch	Strömställare	3
0250						recirculation	recirkulation	
0260	10	95 12 641			1	Switch	Strömställare	3
0270						warning flasher	varningsblinklykta	
0280	11	85 50 360			1	Switch	Strömställare	3
0290						fan	fläkt	
0300	12	72 86 271			1	Clip	Clips	5
0310	13	94 79 866			1	Knob	Vred	5
0320						fan	fläkt	
0330	14	85 31 204		EM	2	Switch	Strömställare	3
0340	15	85 41 856			2	Bracket	Hållare	5
0350	16	85 28 358			2	Nut	Mutter	5
0360	17	85 79 492			2	Button	Knapp	5
0370	18	85 74 469			1	Cigarette lighter	Cigarettändare	4
0380	19	*85 59 213*		NLS - USE 8559221	1	▪Lighter unit	▪Tändarenhet	4
0390	20	85 32 426			1	Clip	Clips	5
0400	21	95 68 122			4	Button	Knapp	5
0410	22	85 09 697			4	Bulb socket	Lamphållare	5
0420	23	85 61 425		40/238 286 017	4	Lamp	Lampa	4
0430	24	85 41 864			1	Lighting	Belysning	6
0440						cigarette lighter	cigarettändare	
0450	25	95 18 820		66), -1992	1	Switch	Strömställare	3
0460						heating pad	värmedyna	
0462	25	▪ 44 39 014		66), 1993-	1	Switch	Strömställare	3
0463						heating pad	värmedyna	
0465	25A	40 84 554		70)	X	Switch button	Strömställarknapp	5
0467				See page 3A-137, 2-F18		kit	sats	
0470	25	40 63 152			1	Switch	Strömställare	3
0480						headlamp levelling	ljuslängdsreglering	
0490	26	85 93 733		US, CA, JP, ME	1	Rheostat	Reostat	3

12. For cars without headlight wipers. För bilar utan strålkastartorkare.
13. With speed control system. Med fartkontrollsystem.
20. AIR-BAG.
66. Drivers side. Förarsida.
70. Rheostat. Reostat.
107. Ch -L3007487, -L5002778, -L7021283.
108. Ch L3007488-, L5002779-, L7022184-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C06

Switch
Strömställare

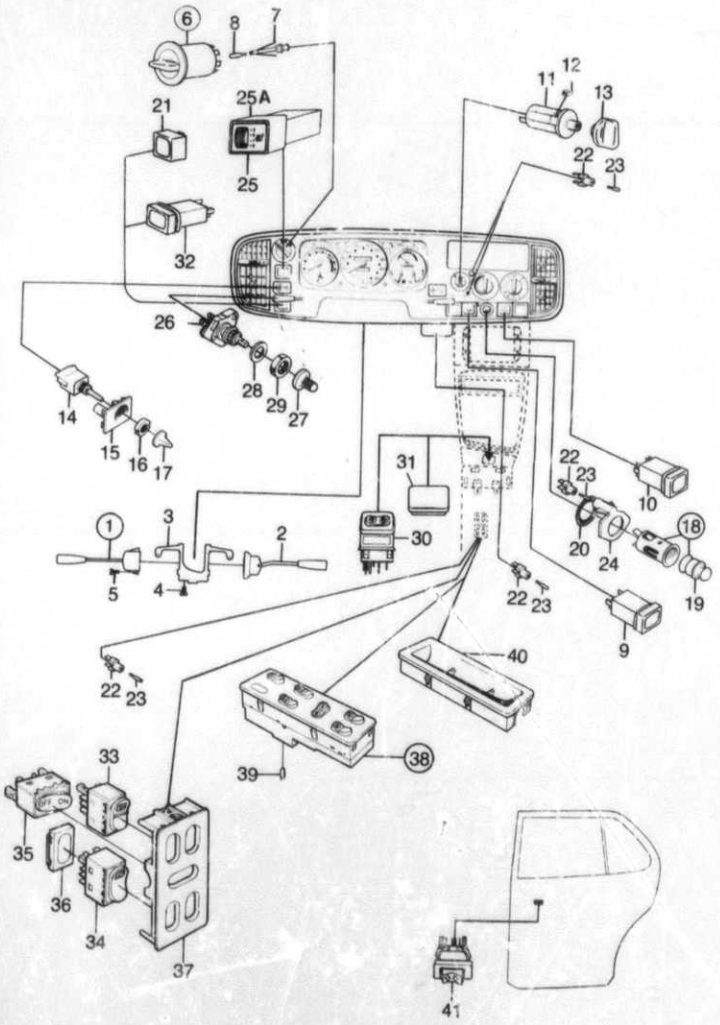

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
27	85 93 394		US, CA, JP, ME	1	Button	Knapp	5
28	85 81 068		US, CA, JP, ME	1	Washer	Bricka	5
29	85 79 898		US, CA, JP, ME	1	Nut	Mutter	5
30	95 50 617		1990, EL-SR	1	Switch sun roof	Strömställare soltak	3
30	95 97 386		CV	1	Switch folding top	Strömställare sufflett	3
31	95 51 987		67)	1	Cover	Täcklock	5
32	95 23 747			1	Switch rear fog light	Strömställare dimbaklykta	3
32	95 23 762		US	1	Switch front fog light	Strömställare dimstrålkastare	3
32	95 23 804		US, CA	1	Switch spotlight	Strömställare exraljus	3
33	95 12 310		2), 1990, LH	1	Switch window lift	Strömställare fönsterhiss	3
33	95 01 859		2), 1990, RH	1	Switch window lift	Strömställare fönsterhiss	3
33	95 01 859		2), 1990, LH, RHD	1	Switch window lift	Strömställare fönsterhiss	3
33	95 12 310		2), 1990, RH, RHD	1	Switch window lift	Strömställare fönsterhiss	3
34	95 01 867		3), 1990	2	Switch window lift	Strömställare fönsterhiss	3
35	95 01 875		1990	1	Switch window lift	Strömställare fönsterhiss	3
36	91 25 212		1990, 3CK	3	Cover washer	Täckbricka	5
37	95 01 917		1990	1	Frame	Ram	6
38	41 08 502		1991-, 3CK	1	Switch window lift	Strömställare fönsterhiss	3
38	41 08 510		106), 1991-, 3CK	1	Switch window lift	Strömställare fönsterhiss	3
38	91 24 660		1991-, 4SN, 5CK	1	Switch window lift	Strömställare fönsterhiss	3
38	91 24 652		106), 1991-, 4SN, 5CK	1	Switch window lift	Strömställare fönsterhiss	3
38	91 24 686		116), 1991-	1	Switch sun roof	Strömställare soltak	3
38	95 98 269		1991-, CV	1	Switch window lift	Strömställare fönsterhiss	3
39	40 69 373			1	Bulb	Glödlampa	4
40			See page 8B-019, 5-A20		Coin box	Myntfack	
41	95 01 909		3)	2	Switch window lift	Strömställare fönsterhiss	3

2. Front. Främre.
3. Rear. Bakre.
67. For cars without el. sun roof. För bilar utan el. soltak.
106. For cars with el. sun roof. För bilar med el. soltak.
116. For cars with manual window regulators and el.sun roof. För bilar med manuella fönsterhissar och el.soltak.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C08

Speed control system
Farthållningssystem

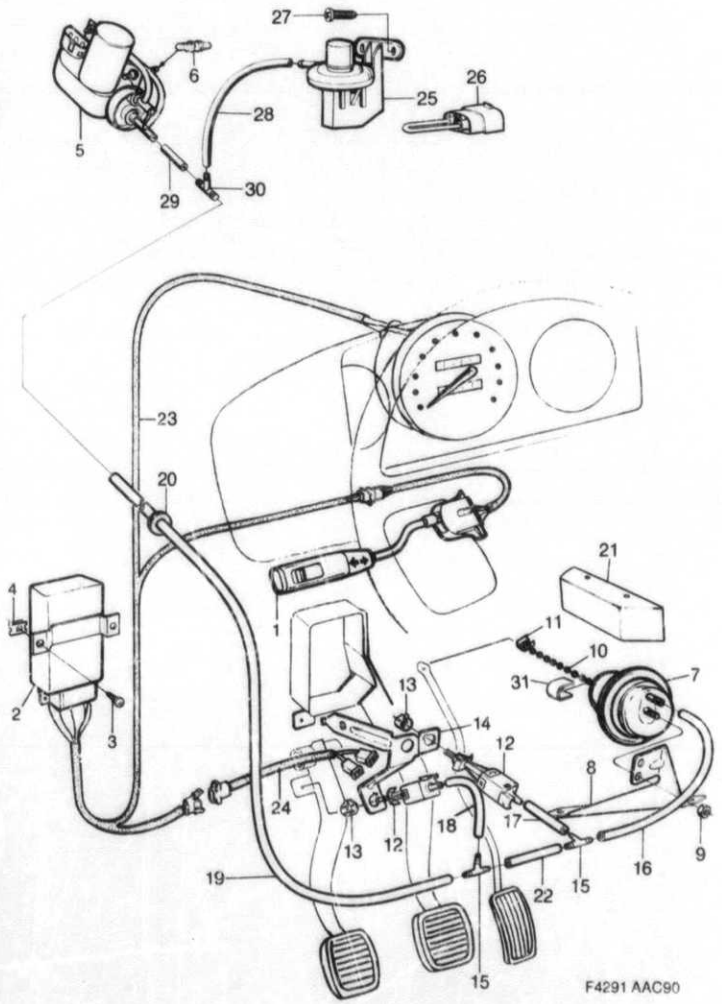

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 3A-051, 2-C04	1	Switch	Omkopplare	
0020	2	95 60 905		-1991	1	Electronic unit	Elektronikenhet	5
0025	2	41 08 643		1992-	1	Electronic unit	Elektronikenhet	5
0030	3	79 22 818			2	Screw	Skruv	5
0040	4	79 72 573			2	Clip nut	Clipsmutter	5
0050	5	85 87 024			1	Vacuum pump	Vakuumpump	5
0060	6	95 55 194			3	Bracket	Upphängning	6
0070	7	95 12 302			1	Vacuum regulator	Vakuumregulator	5
0080	8	95 68 882			1	Bracket	Konsol	6
0090	9	80 74 288		-1992	1	Nut	Mutter	5
0095	9	91 66 406		1993-	1	Nut	Mutter	5
0100	10	40 61 909			1	Chain	Kedja	6
0110	11	*85 87 099*		148) NLS - USE 4433827	1	Clamp	Klammer	6
0115	11	44 33 827		149)	1	Clamp	Klammer	6
0120	12	*41 08 676*		1990, M NLS - USE 4350443	2	Contact	Kontakt	3
0123	12	43 50 443		1991-, M	2	Contact	Kontakt	3
0125	12	*41 08 676*		1990, A NLS - USE 4350443	1	Contact	Kontakt	3
0126	12	43 50 443		1991-, A	1	Contact	Kontakt	3
0130	13	85 30 917			2	Clip	Clips	5
0140	14	95 63 149			1	Bracket	Konsol	6
0150	14	41 08 759		14,143)	1	Bracket	Konsol	6
0155	14	44 28 348		14,144)	1	Bracket	Konsol	6
0160	15	85 09 002			2	Tube	Rör	2
0170	16	95 66 415			1	Hose	Slang	5
0180	17	95 66 381			2	Hose	Slang	5
0190	18	*85 87 354*		NLS - USE 9566381	2	Hose	Slang	5
0200	19	95 66 548		L=1200 MM	1	Hose	Slang	5
0210	20	79 78 042			1	Bushing	Bussning	6
0220	21	85 87 255			1	Protection	Skydd	6
0230	22	*85 87 347*		NLS - USE 9566399	1	Hose	Slang	5
0240	22	95 66 399		M	1	Hose	Slang	5
0250	23	95 68 742		130)	1	Cable harness	Ledningsnät	5
0260	23	95 68 536		1990, TURBO, SE, FI, EU, ME, FE, JP	1	Cable harness	Ledningsnät	5
0270								
0275	23	41 75 915		131)-1991, TURBO, SE, FI, EU, ME, FE, JP	1	Cable harness	Ledningsnät	5
0276								
0280	23	95 68 536		1991-,130), B212 I, TURBO, SE,FI,EU,ME,FE,JP	1	Cable harness	Ledningsnät	5
0290								
0295	23	41 75 915		131)-1991, B212 I, TURBO, SE,FI,EU,ME,FE,JP	1	Cable harness	Ledningsnät	5
0296								
0297	23	41 75 972		1992-, LHD	1	Cable harness	Ledningsnät	5
0298								
0299	23	95 68 759		130), RHD	1	Cable harness	Ledningsnät	5
0300	23	40 67 484		1990-,130), TURBO, RHD	1	Cable harness	Ledningsnät	5
0305	23	41 75 923		131)-1991, TURBO, RHD	1	Cable harness	Ledningsnät	5
0310	23	40 67 484		1991-,130),B212 I,TURBO, RHD	1	Cable harness	Ledningsnät	5
0311								
0315	23	41 75 923		131)-1991, B212 I, TURBO, RHD	1	Cable harness	Ledningsnät	5
0316								
0325	23	41 75 980		1992-, RHD	1	Cable harness	Ledningsnät	5
0326								
0330	24	91 20 239		-1991, M	1	Cable harness contact	Ledningsnät kontakt	5
0340								

14. For cars with ABS brake system. För bilar med ABS bromsar.
130. Ch --M5004703, --M7010506.
131. Ch M5004704--, M7010507--.
143. Ch --P2000984.
144. Ch P2000985--.
148. Ch --P1034114.
149. Ch P1034115--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C10

Speed control system — *Farthållningssystem*

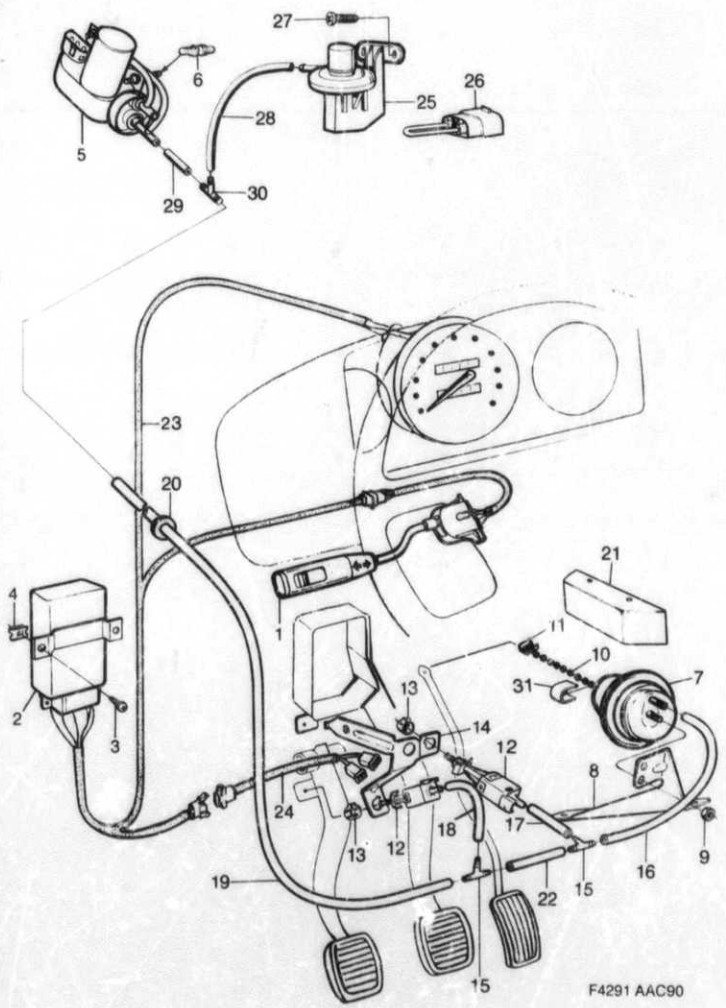

F4291 AAC90

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0345	24	41 75 998		1992-, M	1	Cable harness	Ledningsnät	5
0346						contact	kontakt	
0350	24	91 20 247		-1991, A	1	Cable harness	Ledningsnät	5
0360						contact	kontakt	
0365	24	41 76 004		1992-, A	1	Cable harness	Ledningsnät	5
0366						contact	kontakt	
0370	25	85 98 195		B202, B212 I	1	Vacuum switch	Vakuumkontakt	5
0380	25	95 64 865		B202 TURBO	1	Vacuum switch	Vakuumkontakt	5
0390	26	85 98 526		15), B202, B212 I	1	Cable harness	Ledningsnät	4
0400	27	79 22 818		B202, B212 I	2	Screw	Skruv	5
0410	28	95 66 415		B202, B212 I	1	Hose	Slang	5
0420	28	95 66 423		TURBO	1	Hose	Slang	5
0430	29	*85 87 354*		B202, B212 I NLS - USE 9566381	1	Hose	Slang	5
0440	29	95 66 381		TURBO	1	Hose	Slang	5
0450	30	85 87 107		B20., B212 I	1	Manifold	Grenrör	2
0460	31	40 63 384		137)	1	Chain coupling	Kedjelås	9

15. Without speed control system. Utan fartkontrollsystem.
137. Ch N2001396-, N7002986-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C12

Actuator

Manöverdon

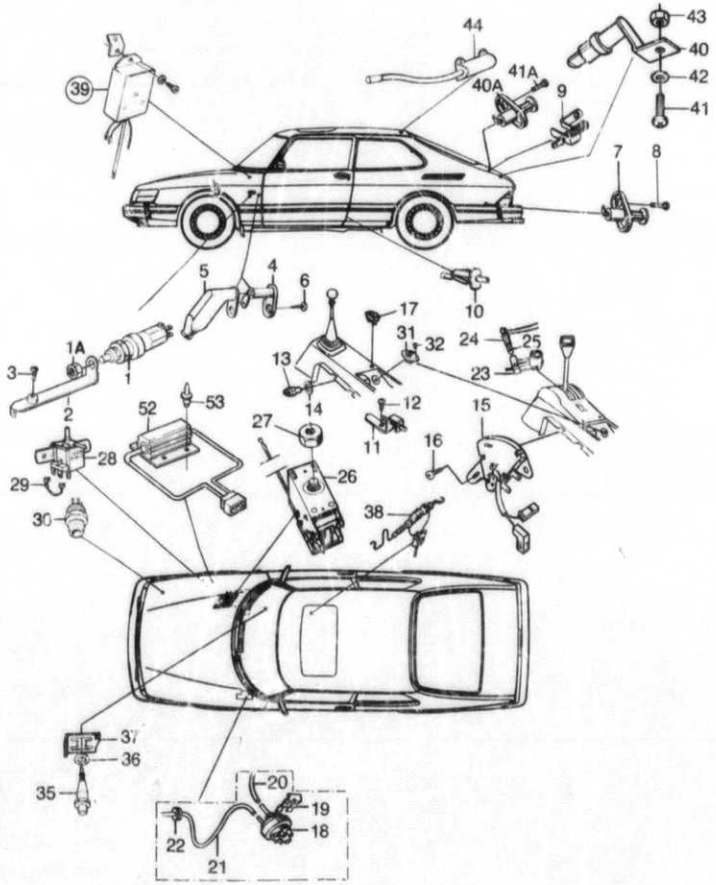

F4706 AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 48 802		143)	1	Brake light switch	Bromsljuskontakt	3
0030	1	85 77 702		144)	1	Brake light switch	Bromsljuskontakt	3
0050	1A	85 66 259		144)	1	Nut	Mutter	5
0060	2	95 63 149		143)	1	Bracket	Konsol	6
0070	2	44 28 355		144)	1	Bracket	Konsol	6
0080	2	41 08 742		14,143)	1	Bracket	Hållare	6
0090	2	44 28 330		14,144)	1	Bracket	Konsol	6
0100	3	*79 71 757*		NLS - USE 7528953	1	Screw	Skruv	5
0110	4	85 77 793			2	Contact	Kontakt	3
0120						front door	framdörr	
0130	5	85 68 883			2	Protection	Skydd	4
0140	6	79 21 885			2	Plate screw	Plåtskruv	5
0150	7	85 73 107			1	Contact	Kontakt	3
0160						tail gate	bagagerumsdörr	
0170	8	79 21 885			1	Plate screw	Plåtskruv	5
0180	9	85 69 220		4SN	1	Contact	Kontakt	3
0190						boot lid	bagagerumslucka	
0200	10	85 22 492			1	Contact	Kontakt	3
0210						rear door	bakdörr	
0220	11	85 22 492			1	Contact	Kontakt	3
0230						handbrake	handbroms	
0240	12	79 22 362			1	Screw	Skruv	5
0250	13	95 09 480		M	1	Contact	Kontakt	3
0260						reverse lamp	backlampa	
0270	14	83 11 904		1990, M	1	Washer	Bricka	5
0280	14	80 30 017		1991-, M	1	Washer	Bricka	5
0290	15	95 56 135		4,16), B201, A	1	Contact	Kontakt	3
0300						gear position	växelläge	
0310	15	95 56 135		5), B202, A	1	Contact	Kontakt	3
0320						gear position	växelläge	
0330	15	95 56 143		5,15), B201, A	1	Contact	Kontakt	3
0340						gear position	växelläge	
0350	15	95 64 733		4), B201 I, A	1	Contact	Kontakt	3
0360						gear position	växelläge	
0370	15	95 64 733		4), B202, B212 I, A	1	Contact	Kontakt	3
0380						gear position	växelläge	
0390	15	95 64 733		5), 1991-, B202 TURBO, A	1	Contact	Kontakt	3
0400						gear position	växelläge	
0410	16	80 59 545		A	2	Screw	Skruv	5
0420	17	95 59 766			1	Switch	Strömställare	3
0430						interior illum.	innerbelysning	
0440	18	41 13 049		B202S	1	Pressure monitor	Tryckvakt	2
0450	18	85 94 632		5), B202 TURBO	1	Pressure monitor	Tryckvakt	2
0460	19	85 65 855			1	Clip	Clips	6
0470	20			See page 3A-129, 2-F10		Pressure monitor	Tryckvakt	
0480	21	85 33 358		L=350 MM	1	Hose	Slang	5
0490	22	79 61 337			1	Bushing	Bussning	6
0500	23	95 60 962		A	1	Retainer	Hållare	6
0510	24	85 78 775		A	1	Bulb socket	Lamphållare	4
0520	25	85 00 613		A	1	Bulb	Glödlampa	2
0530	26	85 93 766		AC, SANKYO	1	Switch	Brytare	4
0540	27	85 66 598		AC, SANKYO	1	Nut	Mutter	5
0550	28	85 91 117		AC, SANKYO	1	Solenoid valve	Magnetventil	4
0560	29	95 50 468			1	Resistor	Motstånd	3
0570	30	*85 72 331*		AC NLS - USE 4086724	1	Thermo contact	Termokontakt	2

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
14. For cars with ABS brake system. För bilar med ABS bromsar.
15. Without speed control system. Utan fartkontrollsystem.
16. For cars without catalytic converter and with speed control system. För bilar utan katalysator och med fartkontrollsystem.
143. Ch -P2000984.
144. Ch P2000985-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C14

Actuator
Manöverdon

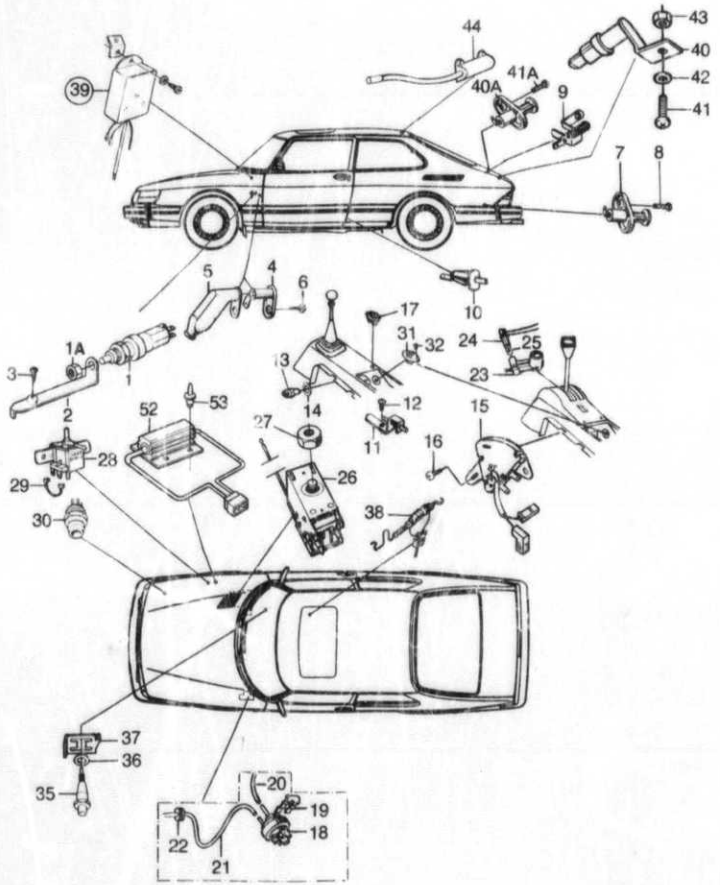

F4706 AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	31	85 67 505			1	Contact starter switch	Kontakt tändningslås	4
0590								
0600	32	79 34 300			2	Screw	Skruv	5
0610	36	98 41 958			1	Washer	Bricka	5
0620	36	98 41 958			1	Washer	Bricka	5
0630	37	*85 59 304*		NLS	1	Clip	Clips	5
0640	38	85 99 516		-1990	2	Contact front seat	Kontakt framstol	5
0650								
0660	38	95 05 652		1991-,146)	2	Contact front seat	Kontakt framstol	5
0670								
0680	38	95 05 652		66,147)	1	Contact front seat	Kontakt framstol	5
0690								
0700	39	85 91 109		1990, ME	1	Warning flare	Varningsfyr	5
0710								
0720	40	95 05 694		141), CV	1	Contact boot lid	Kontakt bagagerumslucka	3
0730								
0740	40A	85 77 793		142), CV	1	Contact boot lid	Kontakt bagagerumslucka	3
0750								
0760	41	79 46 742		141), CV	1	Screw	Skruv	5
0770	41A	79 70 536		142), CV	1	Screw	Skruv	6
0780	42	79 15 556		141), CV	1	Star washer	Taggbricka	5
0790	43	79 72 573		141), CV	1	Clip nut	Clipsmutter	5
0800	44	*69 51 594*		150), CV NLS	1	Contact	Kontakt	4
0810	52	74 85 642		4,21), B202 TURBO, SE, GB, EU	1	Resistor	Motstånd	5
0820								
0830	52	74 85 642		5,21), B202 TURBO	1	Resistor	Motstånd	5
0840	53	79 61 659		21)	2	Rivet	Nit	5
0850								
0860		85 48 802		See page 3A-137, 2-F18	X	Brake light switch kit	Bromsljuskontakt sats	3
0870								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
21. Cars with LUCAS injection system. För bilar med LUCAS insprutningssystem.
66. Drivers side. Förarsida.
141. Ch --N7009233.
142. Ch N7009234--.
146. Ch --N2019457, --N7011869.
147. Ch N2019458--, N7011870--.
150. Se SI 346-1387.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C16

Air-bag

Airbag

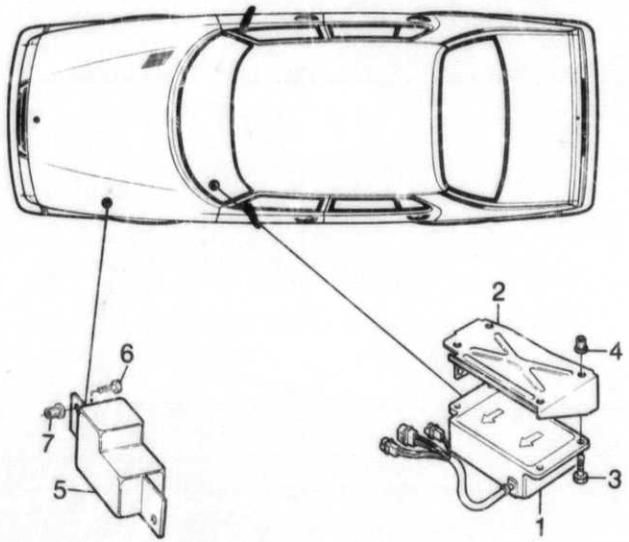

F4279 AAC90

1005	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*95 69 906*		109) NLS - USE 4116695	1	Electronic unit	Elektronikenhet	5
0020	1	41 16 695		7,110)	1	Electronic unit	Elektronikenhet	5
0030	2	95 42 291			1	Bracket	Konsol	5
0040	3	73 99 520			6	Screw	Skruv	5
0050	4	73 99 454		113)	4	Nut	Mutter	5
0060								
0070	5	*40 78 390*		117), LH NLS - USE 4079174	1	Sensor	Sensor	5
0080	5	*40 78 408*		117), RH NLS - USE 4079182	1	Sensor	Sensor	5
0090	5	40 79 174		118), LH	1	Sensor	Sensor	5
0100	5	40 79 182		118), RH	1	Sensor	Sensor	5
0110	6	73 99 520			4	Screw	Skruv	5
0120	7	73 99 454			4	Nut	Mutter	5

7. Also available as exchange unit. Finns även som utbytesenhet.
109. Ch --L3007487, --L5002782, --L7021182.
110. Ch L3007488-, L5002783-, L7021183-.
113. Ch --L3007862, --L5000600.
117. Ch --M5002084, --M7004710.
118. Ch M5002085-, M7004711-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C18

Electrical aerial
Loudspeaker

Motorantenn
Högtalare

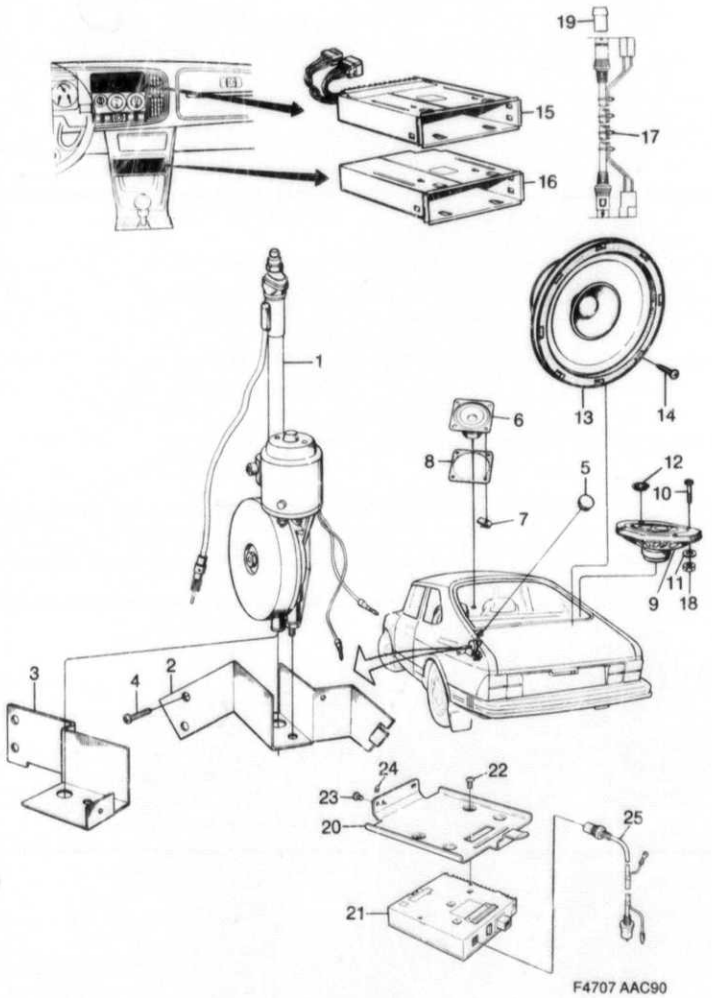

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	95 26 419		-1992	1	Antenna	Antenn	5
1	40 86 732		1993-	1	Antenna	Antenn	5
2	85 94 350		CK	1	Bracket	Fäste	5
3	85 94 343		-1991, SN, CV	1	Bracket	Fäste	5
3	85 94 343		1992-, SN	1	Bracket	Fäste	5
3	95 98 640		1992-, CV	1	Bracket	Konsol	5
4	79 22 891			2	Screw	Skruv	5
5	95 50 476			1	Plug	Plugg	5
6	85 87 644			2	Loudspeaker	Högtalare	4
6	40 67 989		-1991, US	2	Loudspeaker	Högtalare	4
6	40 85 189		1992-, US, CA	2	Loudspeaker	Högtalare	4
6	95 97 204		-1991, CV	2	Loudspeaker	Högtalare	4
6	95 97 204		1992-, CV, SE, EU, PA	2	Loudspeaker	Högtalare	4
6	85 87 644		CV, RHD	2	Loudspeaker	Högtalare	4
7	85 78 262			8	Clip	Clips	5
8	95 09 076			2	Spacer	Distans	5
9	95 51 235			2	Loudspeaker	Högtalare	4
9	40 67 997		-1991, US	2	Loudspeaker	Högtalare	4
9	40 83 150		1992-, US, CA	2	Loudspeaker	Högtalare	4
10	79 22 859		SN	8	Screw	Skruv	5
10	80 19 572		-1992, CK	8	Screw	Skruv	5
10	80 19 598		1993-, CK	8	Screw	Skruv	5
10	80 19 598		CK, US	8	Screw	Skruv	5
11	80 73 090		1993-, CK	8	Washer	Bricka	5
12	79 71 518		CK	8	Lock washer	Spärrbricka	5
13	95 97 212		3), -1991, CV	2	Loudspeaker	Högtalare	4
13	95 97 212		3), 1992-, CV	2	Loudspeaker	Högtalare	4
13	41 68 563		3), 1992-, CV, US, CA	2	Loudspeaker	Högtalare	4
14	79 71 500		CV	8	Screw	Skruv	5
15	*40 65 397*		102), US NLS - USE 4111100	1	Cage with amplifier	Korg med förstärkare	5
15	41 11 100		103)-1991, US	1	Cage with amplifier	Korg med förstärkare	5
15	40 83 036		1992-, US, CA	1	Cage with amplifier	Korg med förstärkare	5
15	40 65 405		-1991, CV, US	1	Cage with amplifier	Korg med förstärkare	5
16	95 27 979		-1991, US	1	Cage equalizer	Korg equalizer	5
16	40 83 044		1992-, US, CA	1	Cage equalizer	Korg equalizer	5
17	95 28 217		-1991, US	1	Cable radio-equalizer	Kabel radio-equalizer	5
17	40 83 168		1992-, US, CA	1	Cable radio-equalizer	Kabel radio-equalizer	5
18	79 77 903		CK, US	8	Nut	Mutter	5
19	40 85 197		1992-, US, CA	1	Contact	Kontakt	9
20	95 98 509		1992-, CV, US, CA	1	Bracket	Konsol	5
21	40 83 051		3), 1992-, US, CA	1	Amplifier	Förstärkare	5
22	79 78 356		1992-, US, CA	2	Screw	Skruv	5
23	79 22 354		1992-, CV, US, CA	2	Screw	Skruv	5
24	79 67 995		1992-, CV, US, CA	2	Clip nut	Clipsmutter	3
25	40 85 270		1992-, US, CA	1	Cable radio-amplifier	Ledning radio-förstärkare	5

3. Rear. Bakre.
102. Ch --L3007073, --L5002241, --L7020432.
103. Ch L3007074-, L5002242-, L7020433-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14


Electric equipment, other

2-C20

Anti theft system
Convertible

Övr. elektrisk utrustning

Stöldlarm
Cabriolet

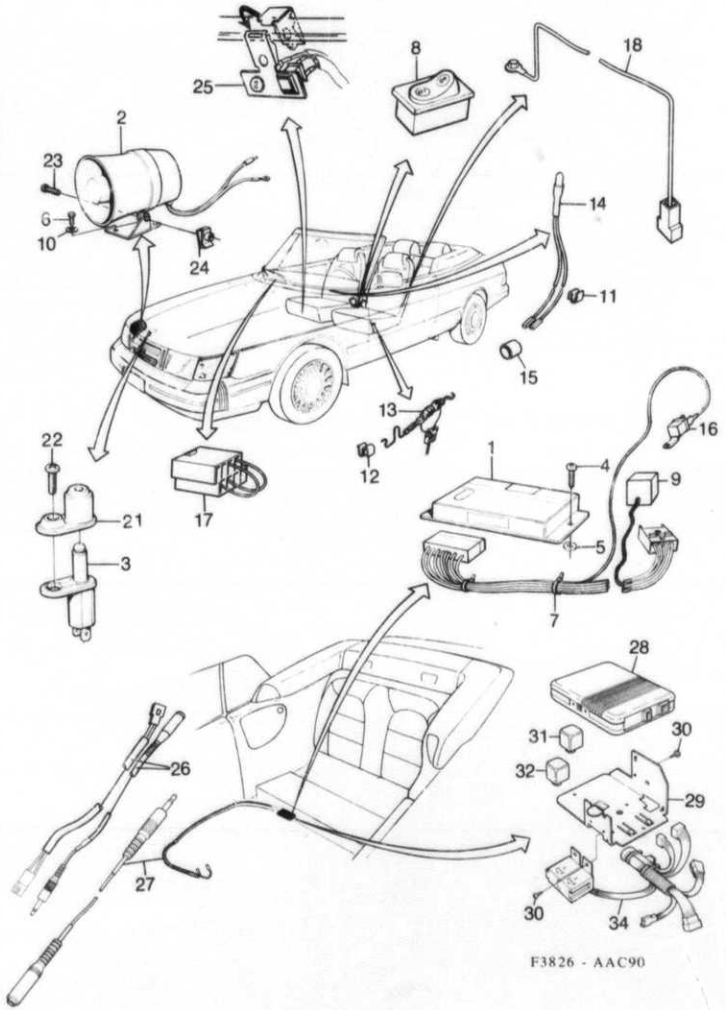

F3826 - AAC90

1030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 96 891		1990	1	Electronic unit	Elektronikenhet	5
0020	2	*95 98 103*		-1991 NLS - USE 9598541	1	Horn	Signalhorn	4
0030	2	95 98 541		1992-	1	Horn	Signalhorn	4
0040	3	95 14 860			1	Contact	Kontakt	3
0050	4	79 65 684		1990	2	Screw	Skruv	6
0060	5	80 29 951		1990	2	Washer	Bricka	5
0070	6	79 22 891		-1991	1	Screw	Skruv	5
0080	6	79 22 503		1992-	1	Screw	Skruv	5
0090	7	79 71 864		1990	3	Tensioning band	Spännband	5
0100	8	95 97 147		1990	1	Switch	Strömställare	3
0110	8	95 96 875		1991	1	Switch	Strömställare	3
0120	8	95 98 434		1992-	1	Switch	Strömställare	3
0130	9	95 97 154		1990	1	Motion detector	Chockdetektor	9
0140	10	80 29 951		1992	1	Washer	Bricka	5
0145	10	91 66 372		1993-	1	Washer	Bricka	5
0150	11	85 02 643			1	Clamp	Klämma	5
0160	12	85 13 574		1990	2	Clip	Clips	6
0170	13	85 99 516		1990	2	Contact	Kontakt	5
0180	14	95 97 170			1	Diode	Diod	9
0190	15	95 97 188			1	Bracket	Hållare	9
0200	16			See page 3A-123, 2-F04		Relay	Relä	
0210	17	95 98 848		1992-	1	Cable harness	Ledningsnät	5
0220						instrument panel	instrumentpanel	
0225	18	95 98 855		1992-	1	Cable harness	Ledningsnät	5
0227						rear seat	baksäte	
0230	21	95 12 229			1	Protection	Skyddshölje	3
0240	22	79 22 891			1	Screw	Skruv	5
0250	23	97 78 952		-1991	1	Screw	Skruv	5
0260	24	82 67 098		-1991	1	Clip	Clips	5
0270	25	95 98 574		119)	1	Microphone	Mikrofon	5
0280	26	95 98 566		119)-1991	1	Cable harness	Ledningsnät	5
0290	27	95 98 756		1992-	1	Cable harness	Ledningsnät	5
0300								
0310	28	95 98 624		1992-	1	Electronic unit	Elektronikenhet	5
0311				1)	2	. Sending unit	. Sändenhet	
0312				1)	2	. Protection	. Skydd	
0313				1)	1	. Antenna	. Antenn	
0320	29	95 98 798		1992-	1	Bracket	Konsol	5
0330	30	79 72 219		1992-	2	Screw	Skruv	5
0340	31			1992-		Relay	Relä	
0350				See page 3A-123, 2-F04				
0360	32			1992-		Relay	Relä	
0370				See page 3A-123, 2-F04				
0380	33	79 75 758		1992-	2	Screw	Skruv	5
0390	34	95 98 814		1992-	1	Cable harness	Ledningsnät	5

1. Not as separate spare part. Ej som separat reservdel.
119. Ch M7001729-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-C22 Electrical system ABS

Elektriskt system ABS

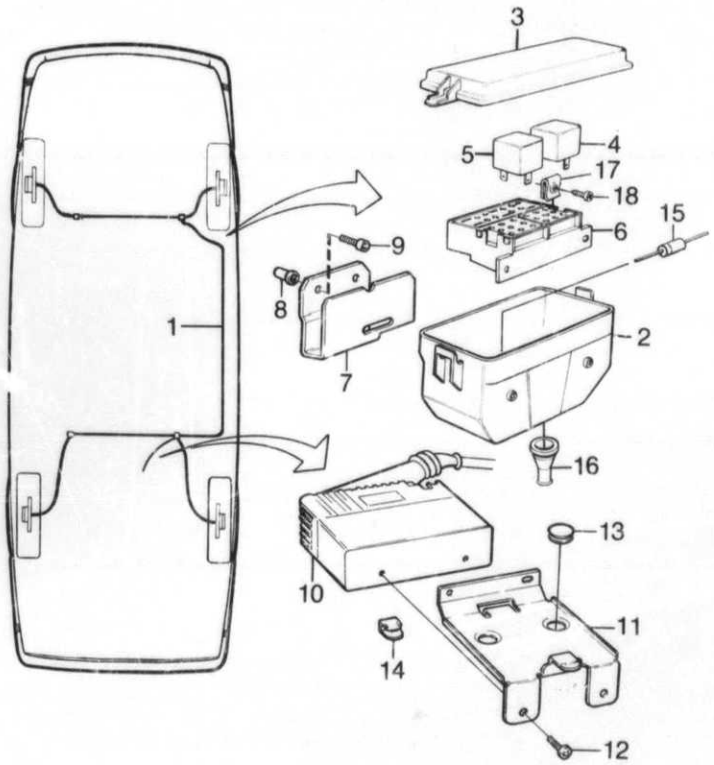

F5456 AAC90

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 63 202		1990	1	Cable harness	Ledningsnät	6
0015	1	41 10 441		1991-	1	Cable harness	Ledningsnät	6
0020	2	41 11 118				,Box	,Box	4
0030	3	91 24 611			1	Cover	Lock	5
0040	4	95 22 822			1	Relay pump	Relä pump	5
0041								
0050	5	85 33 176			1	Relay main relay	Relä huvudrelä	3
0051								
0060	6	91 25 543			1	Contact housing	Kontakthus	4
0070	7	40 63 327			1	Bracket	Hållare	6
0090	8	*69 38 393*		NLS - USE 7399629	2	Nut	Mutter	5
0100	9	80 59 578			2	Screw	Skruv	5
0110	10	40 02 176		7)	1	Electronic unit	Elektronikenhet	4
0115	11	40 98 190			1	Bracket	Konsol	6
0120	11	91 96 072		CV	1	Bracket	Konsol	5
0130	12	79 75 444		CV	2	Screw	Skruv	5
0140	13	92 68 186			2	Plug	Plugg	5
0150	14	40 04 404		SN, CK	1	Clamp	Klammer	5
0160	15	44 24 172			2	Diode	Diod	5
0170	16	95 19 745			1	Protection	Skydd	4
0180	17	79 68 001			2	Clip nut	Clipsmutter	5
0190	18	79 70 601			2	Screw	Skruv	5


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

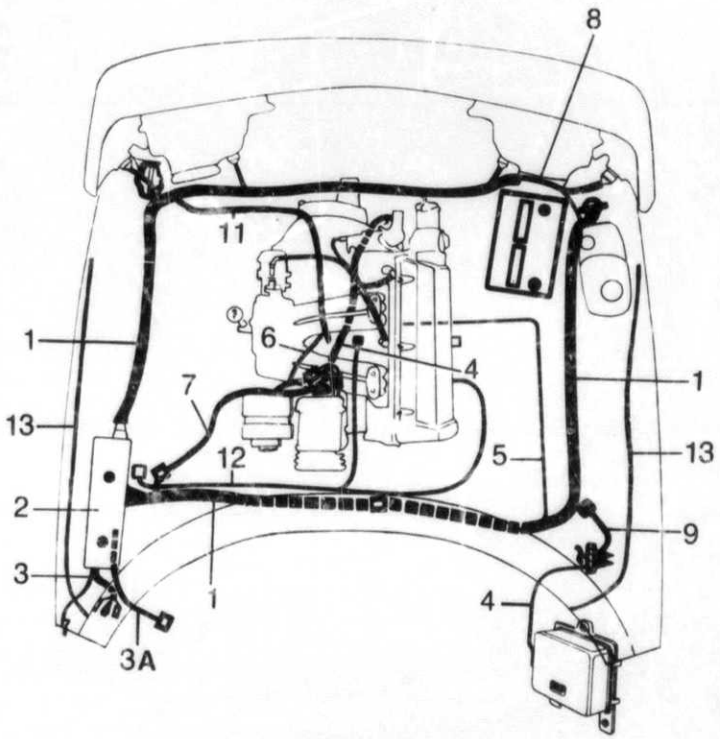

F1310 AAC90

1045	Pos	Part No/Art nr	T. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 65 215		B201 C, FI, EU, ME, FE	1	Cable harness front	Ledningsnät främre	5
0020								
0050								
0060	1	40 65 223		100), B201 I, FI, EU, GB	1	Cable harness front	Ledningsnät främre	5
0070								
0080	1	41 16 711		101), B201 I, LHD	1	Cable harness front	Ledningsnät främre	5
0090								
0100	1	41 16 729		101), B201 I, RHD	1	Cable harness front	Ledningsnät främre	5
0110								
0120								
0130	1	40 65 231		4,100), B201 I, SE, FI, GB, EU	1	Cable harness front	Ledningsnät främre	5
0140								
0150	1	41 16 737		4,101), B201 I, LHD	1	Cable harness front	Ledningsnät främre	5
0160								
0190								
0200	1	40 65 249		100), B202 I, FI, EU, GB, ME, FE	1	Cable harness front	Ledningsnät främre	5
0210								
0220	1	41 16 752		101), B202 I, LHD	1	Cable harness front	Ledningsnät främre	5
0230								
0240	1	41 16 760		101), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0250								
0260								
0270	1	40 65 256		4,100), B202 I, SE, FI, EU, GB, AU, JP, FE	1	Cable harness front	Ledningsnät främre	5
0280								
0290	1	41 16 778		4,101), B202 I, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0300								
0310	1	41 16 786		4,101), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0320								
0330								
0340	1	40 68 623		100), B202S, SE, FI, GB, EU, ME, FE	1	Cable harness front	Ledningsnät främre	5
0350								
0360	1	41 16 810		101), B202S, SE, FI, EU	1	Cable harness front	Ledningsnät främre	5
0370								
0380								
0390	1	40 65 280		100), B202 TURBO, SE, FI, GB, EU, ME, FE	1	Cable harness front	Ledningsnät främre	5
0400								
0410	1	41 16 828		101), B202 TURBO, LHD, SE, FI, EU, FE	1	Cable harness front	Ledningsnät främre	5
0420								
0430	1	41 16 836		101), B202 TURBO, RHD, GB, FE	1	Cable harness front	Ledningsnät främre	5
0440								
0450								
0460	1	40 65 264		100), I, US	1	Cable harness front	Ledningsnät främre	5
0470								
0480	1	41 16 794		101), I, US	1	Cable harness front	Ledningsnät främre	5
0490								
0500	1	40 65 306		100), TURBO, US	1	Cable harness front	Ledningsnät främre	5
0510								
0520	1	41 16 885		101), TURBO, US	1	Cable harness front	Ledningsnät främre	5
0530								
0540								
0550	1	40 65 272		100), I, CA	1	Cable harness front	Ledningsnät främre	5
0560								
0570	1	41 16 802		101), I, CA	1	Cable harness front	Ledningsnät främre	5
0580								
0590	1	40 65 314		100), TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0600								
0610	1	41 16 869		101), TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0620								

4. With catalytic converter. Med katalytisk reaktor.
100. Ch -L3006623, -L5001914, -L7016864.
101. Ch L3006624-, L5001915-, L7016865-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D02

Front and engine 1990

Främre och motor 1990

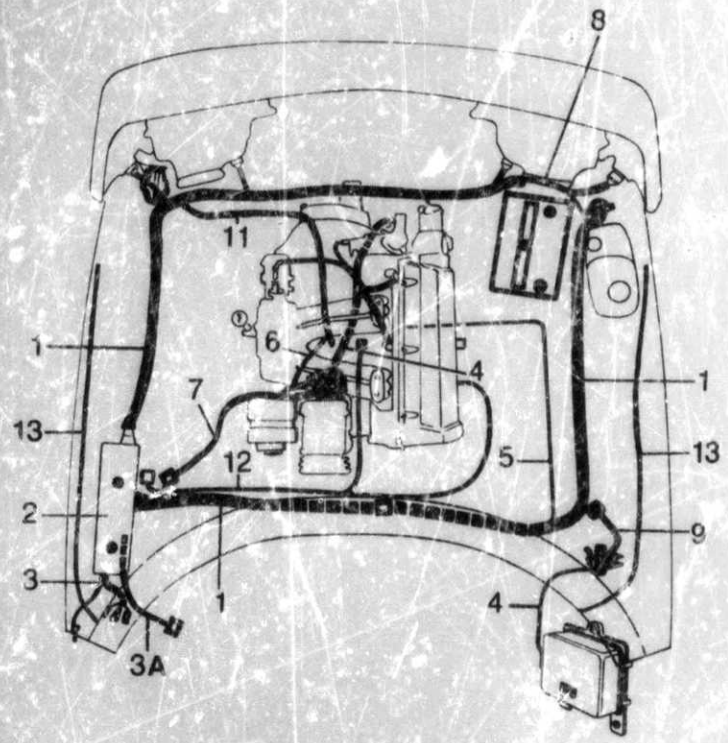

1045	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	1	41 10 961		34,100), TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0650	1	41 16 877		34,101), TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0680	1	40 65 238		100), B202 TURBO, JP, AU	1	Cable harness front	Ledningsnät främre	5
0700	1	41 16 844		101), B202 TURBO, LHD,JP	1	Cable harness front	Ledningsnät främre	5
0720	1	41 16 851		101), B202 TURBO, RHD, JP, AU	1	Cable harness front	Ledningsnät främre	5
0731	1	95 98 376		101), CV	1	Cable harness front	Ledningsnät främre	5
0750	2	40 67 344		100)	1	Cable harness fuse-relay	Ledningsnät säkring-relä	5
0780	3	40 67 351		100), B201, LHD	1	Cable harness electrical distribut.unit	Ledningsnät elcentral	5
0800	3	40 68 383		100), B201, RHD	1	Cable harness electrical distribut.unit	Ledningsnät elcentral	5
0820	3	40 67 369		100), B202, LHD	1	Cable harness electrical distribut.unit	Ledningsnät elcentral	5
0840	3	40 68 391		100), B202, RHD	1	Cable harness electrical distribut.unit	Ledningsnät elcentral	5
0860	3	95 97 550		100), CV	1	Cable harness electrical distribut.unit	Ledningsnät elcentral	5
0910	4	40 67 401		B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0930	4	40 63 532		4,21), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0950	4	95 68 825		4), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0970	4	40 67 419		TURBO, UC	1	Cable harness engine	Ledningsnät motor	3
0990	4	91 21 757		B202 I	1	Cable harness engine	Ledningsnät motor	3
1010	4	95 68 825		4), B202	1	Cable harness engine	Ledningsnät motor	3
1030	5	85 69 386			1	Cable lambda sonde	Ledning lambdasond	6
1060	6	95 55 905		B+	1	Cable	Kabel	6
1080	7	85 94 467		B201, AC,	1	Cable harness idling speed increase	Ledningsnät tomgångshöjning	6
1110	8	95 57 505		AC, SE, FI, EU, GB	1	Cable harness idling speed increase	Ledningsnät tomgångshöjning	5
1160	9	95 61 655		18), AC, SE, FI, EU, GB, AU, ME, FE	1	Cable harness switch	Ledningsnät strömställare	5
1190	11	95 61 804			1	Cable harness knock-sensor	Ledningsnät knacksensor	6

4. With catalytic converter. Med katalytisk reaktor.
18. With recirculation. Med recirkulation.
21. Cars with LUCAS injection system. För bilar med LUCAS insprutningssystem.
34. Cars with electronic EGR. Bilar med elektronisk EGR.
100. Ch --L3006623, --L5001914, --L7016864.
101. Ch L3006624--, L5001915--, L7016865--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D04. Front and engine 1990

Främre och motor 1990

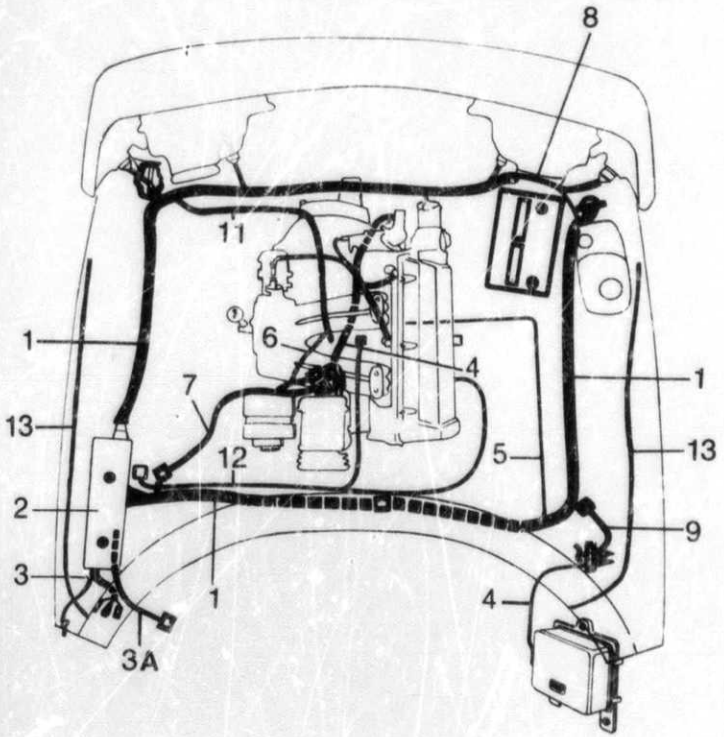

F1310 AAC90

1045	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty/ Antal	Description	Benämning	S L
1210	12	74 78 159		5,68), LH2.2	1	Cable harness	Ledningsnät	6
1220				See page 2-165, 1-I22				
1230								
1240	13	40 61 875		AIR-BAG, LH	1	Cable harness sensor	Ledningsnät sensor	5
1250								
1260	13	40 60 646		AIR-BAG, RH	1	Cable harness sensor	Ledningsnät sensor	5
1270								


5. Without catalytic converter. Utan katalytisk reaktor.
68. Part of choke kit 89 82 423. Del av choke sats 89 82 423.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

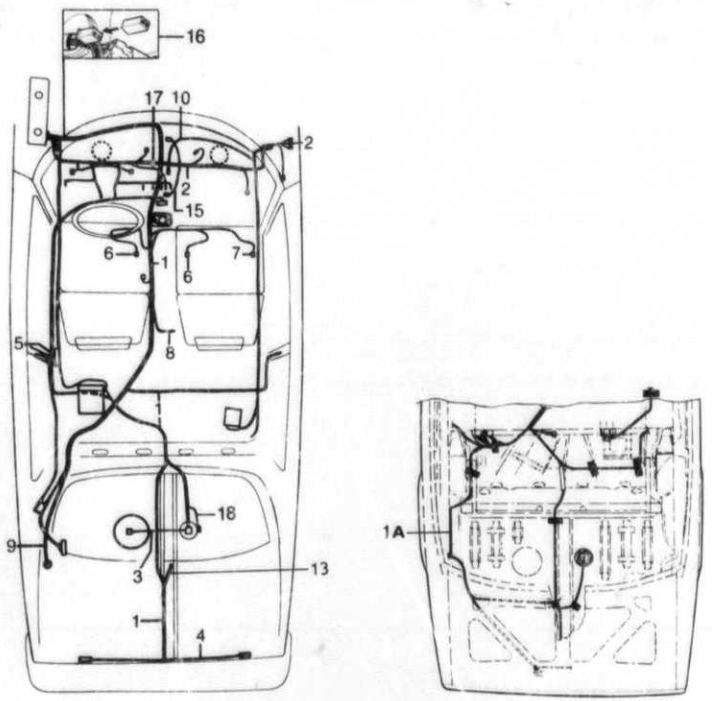

F4426 AAC90

1047	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 65 520		B201 CK, C, FI, EU, I, SE, FI, EU	1	Cable harness rear	Ledningsnät bakre	5
0020								
0030	1	*40 65 538*		B201 CK, I, RHD, SE, GB NLS	1	Cable harness rear	Ledningsnät bakre	5
0040								
0041								
0050	1	40 65 603		CK, SE, FI, EU, ME, FE, JP	1	Cable harness rear	Ledningsnät bakre	5
0060								
0070	1	40 65 611		CK, RHD, SE, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0080								
0081								
0090	1	40 65 488		B201 C, SN, FI, EU, I, SE, FI, EU	1	Cable harness rear	Ledningsnät bakre	5
0100								
0110	1	40 65 561		SN, SE, FI, ME, FE, JP	1	Cable harness rear	Ledningsnät bakre	5
0120								
0130	1	40 65 579		SN, RHD, SE, GB, EU, JP, AU	1	Cable harness rear	Ledningsnät bakre	5
0140								
0150	1	*40 65 496*		B201 I, SN, RHD, SE, GB NLS	1	Cable harness rear	Ledningsnät bakre	5
0160								
0161								
0170	1	40 65 629		SN, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0180								
0190	1	40 65 637		CK, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0200								
0201								
0210	1A	95 98 095		CV, SE, FI, EU, JP	1	Cable harness rear	Ledningsnät bakre	5
0220								
0230	1A	95 98 160		CV, GB, FE, AU	1	Cable harness rear	Ledningsnät bakre	5
0240								
0250	1A	95 98 087		CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0260								
0270								
0290	2	40 65 322		B201, SE, FI, EU	1	Cable harness instrument	Ledningsnät instrument	5
0300								
0310	2	40 65 355		B201, RHD, GB	1	Cable harness instrument	Ledningsnät instrument	5
0320								
0330	2	40 65 330		B202, SE, FI, EU, FE, ME	1	Cable harness instrument	Ledningsnät instrument	5
0340								
0350	2	40 65 348		B202, TURBO, SE, FI, EU, FE, ME	1	Cable harness instrument	Ledningsnät instrument	5
0360								
0370	2	40 65 330		JP	1	Cable harness instrument	Ledningsnät instrument	5
0380								
0390	2	*40 65 363*		B202, RHD, SE, GB, FE, AU, JP NLS	1	Cable harness instrument	Ledningsnät instrument	5
0400								
0410	2	40 65 371		B202, TURBO, RHD, SE, GB, FE	1	Cable harness instrument	Ledningsnät instrument	5
0420								
0430	2	*40 65 363*		B202, TURBO, RHD, JP, AU NLS	1	Cable harness instrument	Ledningsnät instrument	5
0440								
0450	2	40 65 389		US, CA	1	Cable harness instrument	Ledningsnät instrument	5
0460								
0470	2	*40 60 638*		20,104), US NLS - USE 4113379	1	Cable harness instrument	Ledningsnät instrument	5
0480								
0490	2	41 13 379		20,105), US	1	Cable harness instrument	Ledningsnät instrument	5
0500								
0510								
0520	3	95 59 386			1	Cable harness fuel pump	Ledningsnät bränslepump	6
0530								
0540	3	40 39 746		B202	1	Cable harness fuel pump	Ledningsnät bränslepump	3
0550								
0560								

20. AIR-BAG.
104. Ch --L3006996, --L5002508, - L7019004.
105. Ch L3006997--, L5002509--, L7019005--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D08 Instruments and rear 1990

Instrument och bakre 1990

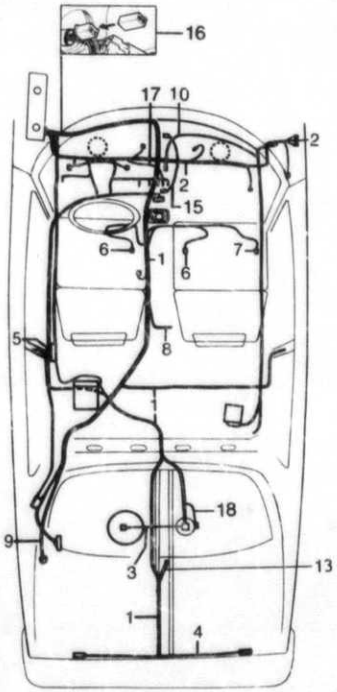

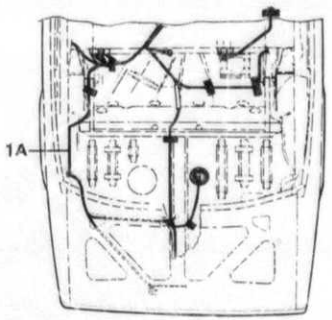

F4426 AAC90

1047	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	4	40 69 241		SN, CV	1	Cable harness tail lamp	Ledningsnät baklykta	6
0590	4	40 66 312		31), SN, SE, FI, EU, ME, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
0620	4	40 66 312		31), CV, SE, FI, EU, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
0650	4	40 66 320		31), RHD, SN, CV, GB, AU, JP, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
0680	5	95 57 760			1	Cable harness interior illum.	Ledningsnät innerbelysning	6
0710	6	85 70 210		66)	1	Cable harness heating pad	Ledningsnät värmedyna	5
0730	6	40 68 839		69)	1	Cable harness heating pad	Ledningsnät värmedyna	5
0750	6	40 68 847		70)	1	Cable harness heating pad	Ledningsnät värmedyna	5
0780	7	85 70 236			1	Cable harness seat belt warning	Ledningsnät bältesvarning	6
0810	8	85 93 295		ME	1	Cable harness seat belt warning	Ledningsnät bältesvarning	6
0840	9	95 64 477		83)	1	Cable harness antenna	Ledningsnät antenn	5
0860	9	41 08 551		84)	1	Cable harness antenna	Ledningsnät antenn	5
0890	10			See page 3A-055, 2-C08	1	Cable harness speed control system	Ledningsnät farthållningssystem	
1020	13	95 53 553		SN	1	Cable harness high mounted stop light	Ledningsnät högt monterad stopplykta	5
1050	15			US See page 3A-065, 2-C18		Cable harness radio-equalizer	Ledningsnät radio-equalizer	
1080	16	95 69 740		GB, IT	1	Cable harness control lamp	Ledningsnät kontrollampa	5
1100	17	40 66 338			1	Cable ashtray	Kabel askkopp	6
1130	18	91 22 086		C	1	Cable harness tank sensor	Ledningsnät tankgivare	6

31. With rear fog light. Med dimbaklykta.
66. Drivers side. Förarsida.
69. Drivers side and passenger side. Förarsida och passagerarsida.
70. Rheostat. Reostat.
83. Ch –L3000891, –L7003841.
84. Ch L3000892–, L7003842–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D10 Doors 1990

Dörrar 1990

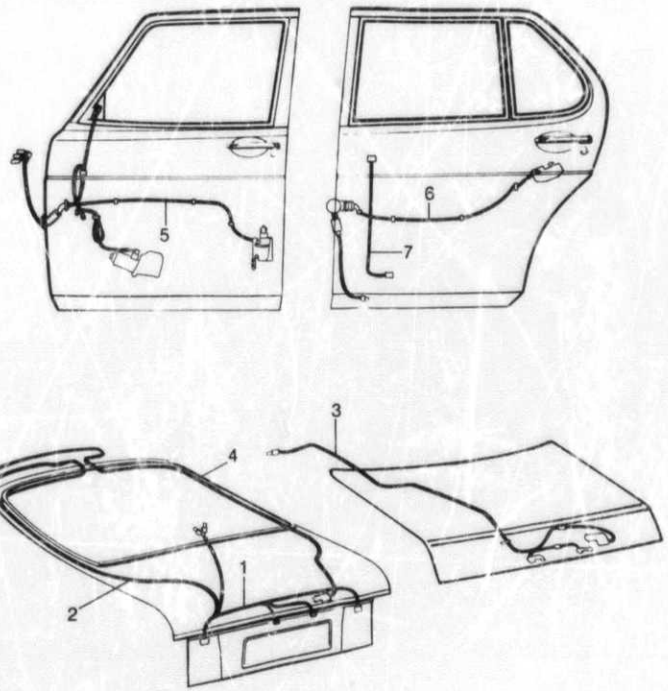

F1312 AAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description / Benämning	SL
1	40 67 328		71)	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
1	40 67 294		31,72), SE, FI, EU, FE	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
1	40 67 302		31,72), RHD, GB, AU, JP, FE	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
1	40 68 912		72)	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
2	40 67 336			1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
2	40 68 912		72)	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	6
3	40 68 433		SN	1	Cable harness / Ledningsnät boot lid / bagagerumslucka	6
3	95 96 586		CV	1	Cable harness / Ledningsnät boot lid / bagagerumslucka	6
4	40 67 310		CL, CK	1	Cable harness / Ledningsnät tail gate / bagagerumsdörr	5
5	85 91 257		66), EM, EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
5	95 64 675		66,73), EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
5	95 97 444		66), CV, EM, EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
5	85 91 265		74), EM, EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
5	95 64 683		73,74), EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
5	95 97 451		74), CV, EM, EW, CL	1	Cable harness / Ledningsnät front door / framdörr	5
6	85 91 281		CL	2	Cable harness / Ledningsnät rear door / bakdörr	5
7	85 91 489		EW	2	Cable harness / Ledningsnät rear door / bakdörr	5
7	85 91 497		EW, CL	2	Cable harness / Ledningsnät rear door / bakdörr	5


31. With rear fog light. Med dimbaklykta.
66. Drivers side. Förarsida.
71. Without rear fog light. Utan dimbaklykta.
72. High mounted stop light. Högt monterat stoppljus.
73. Electrically heated EM. Eluppvärmd EM.
74. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

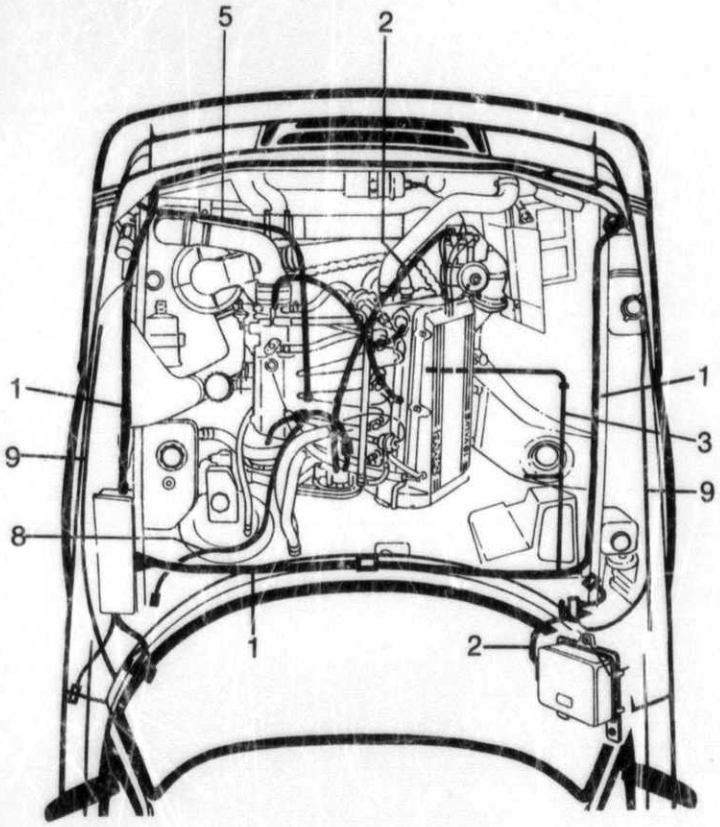

F3053 AAC90

1055	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 73 233		4,127), B202 I	1	Cable harness front	Ledningsnät främre	5
0025	1	41 75 022		4,128,129), B202 I	1	Cable harness front	Ledningsnät främre	5
0030	1	41 73 266		4,127), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0045	1	41 75 055		4,128,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0050	1	41 73 241		5,127), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0065	1	41 75 030		5,128,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0080	1	41 73 282		4,127), B212 I, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0095	1	41 75 071		4,128,129), B212 I, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0100	1	41 73 290		4,127), B212 I, RHD	1	Cable harness front	Ledningsnät främre	5
0115	1	41 75 089		4,128,129), B212 I, RHD	1	Cable harness front	Ledningsnät främre	5
0130	1	41 73 258		4,127), B202 I, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0141	1	41 75 048		4,128,129), B202 I, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0160	1	41 73 324		127), B202S	1	Cable harness front	Ledningsnät främre	5
0175	1	41 75 113		128,129), B202S	1	Cable harness front	Ledningsnät främre	5
0180	1	41 73 332		127), B202S, RHD	1	Cable harness front	Ledningsnät främre	5
0195	1	41 75 121		128,129), B202S, RHD	1	Cable harness front	Ledningsnät främre	5
0210	1	41 73 340		127), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0225	1	41 75 139		128,129), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0230	1	41 73 357		127), B202 TURBO, RHD	1	Cable harness front	Ledningsnät främre	5
0245	1	41 75 147		128,129),B202 TURBO, RHD	1	Cable harness front	Ledningsnät främre	5
0260	1	41 73 308		127), B212 I, US	1	Cable harness front	Ledningsnät främre	5
0275	1	41 75 097		128,129), B212 I, US	1	Cable harness front	Ledningsnät främre	5
0280	1	41 73 365		127), B202 TURBO, US	1	Cable harness front	Ledningsnät främre	5
0295	1	41 75 154		128,129), B202 TURBO, US	1	Cable harness front	Ledningsnät främre	5
0310	1	41 73 316		127), B212 I, CA	1	Cable harness front	Ledningsnät främre	5
0325	1	41 75 105		128,129), B212 I, CA	1	Cable harness front	Ledningsnät främre	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
127. Ch --M5004703, --M7010506.
128. Ch M5004704--, M7010507--.
129. With electrical distribution unit. Med elcentral.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

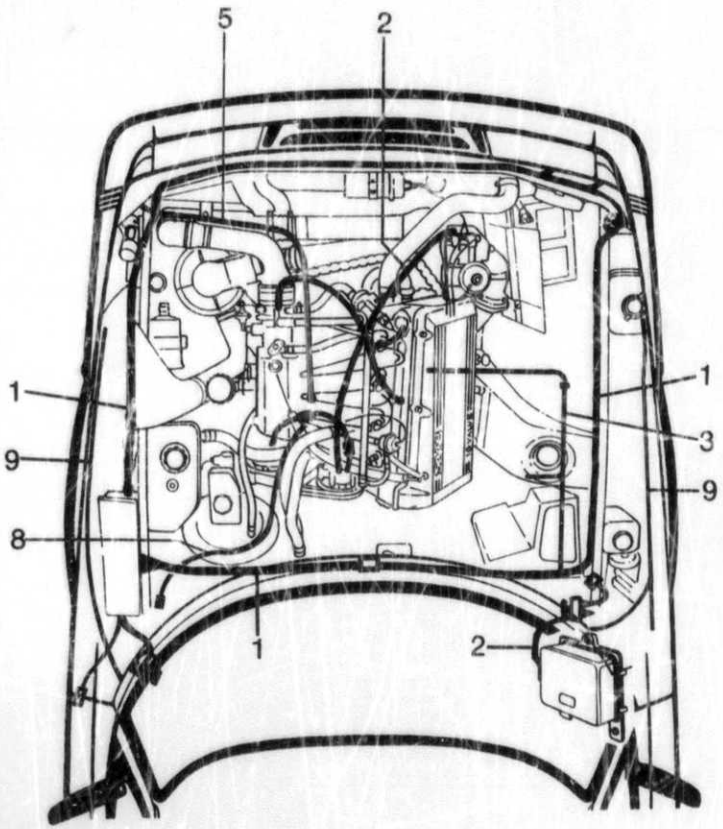

F3053 AAC90

1055	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0330	1	41 73 373		127), B202 TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0340								
0345	1	41 75 162		128,129). B202 TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0346								
0350								
0360	2	41 10 458		4), B202 I	1	Cable harness engine	Ledningsnät motor	3
0370								
0380	2	91 21 757		5), B202 I	1	Cable harness engine	Ledningsnät motor	3
0390								
0400	2	41 10 045		4), B212 I	1	Cable harness engine	Ledningsnät motor	3
0410								
0420								
0430	2	41 10 060		4), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0440								
0450	2	41 10 078		5), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0460								
0470								
0500	2	41 10 466		B202 TURBO, US	1	Cable harness engine	Ledningsnät motor	3
0510								
0520	3	85 69 386			1	Cable lambda sonde	Ledning lambdasond	6
0530								
0540								
0550	4	95 55 905		B+	1	Cable	Kabel	6
0560								
0570	5	95 61 804			1	Cable harness knock-sensor	Ledningsnät knacksensor	6
0580								
0610								
0670	8	74 78 159		5,68), LH2.2 See page 2-165, 1-I22	1	Cable harness	Ledningsnät	6
0680								
0690								
0700	9	40 61 875		AIR-BAG, LH	1	Cable harness sensor	Ledningsnät sensor	5
0710								
0720	9	40 60 646		AIR-BAG, RH	1	Cable harness sensor	Ledningsnät sensor	5
0730								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
68. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
127. Ch --M5004703, --M7010506.
128. Ch M5004704--, M7010507--.
129. With electrical distribution unit. Med elcentral.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D16

Instruments and rear 1991

Instrument och bakre 1991

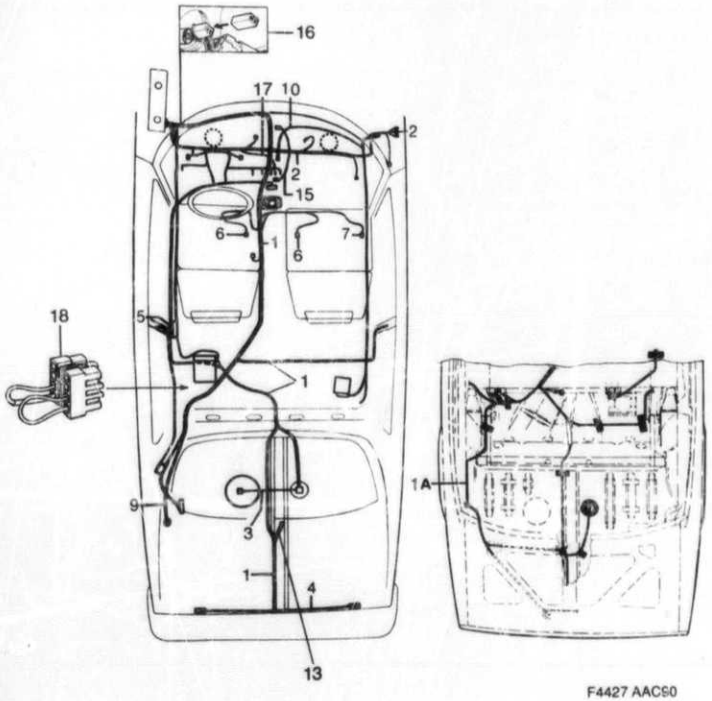

F4427 AAC90

1057	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 10 276		127), SN, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0030	1	41 75 832		128), SN, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0060	1	41 10 292		127), CK, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0080	1	41 75 857		128), CK, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0110	1	41 10 300		127), SN, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0130	1	41 75 865		128), SN, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0150	1	41 10 318		127), CK, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0170	1	41 75 873		128), CK, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0200	1A	95 98 285		124), CV, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0220	1A	95 98 665		125), CV, SE, FI, EU, GB, FE, AU, JP	1	Cable harness rear	Ledningsnät bakre	5
0240	1A	95 98 293		124), CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0260	1A	95 98 673		125), CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0290	2	41 10 177		127), B202 I, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0310	2	41 75 758		128), B202 I, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0330	2	41 10 185		127), B202 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0350	2	41 75 766		128), B202 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0380	2	41 10 219		127), B212 I	1	Cable harness instrument	Ledningsnät instrument	5
0400	2	41 75 790		128), B212 I	1	Cable harness instrument	Ledningsnät instrument	5
0420	2	41 10 227		127), B212 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0440	2	41 75 808		128), B212 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0470	2	41 10 219		127), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0490	2	41 75 790		128), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0510	2	41 10 227		127), B202 TURBO, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0530	2	41 75 808		128), B202 TURBO, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0560	2	41 10 193		127), US	1	Cable harness instrument	Ledningsnät instrument	5


124. Ch -M7010506.
125. Ch M7010507-.
127. Ch -M5004703, -M7010506.
128. Ch M5004704-, M7010507-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

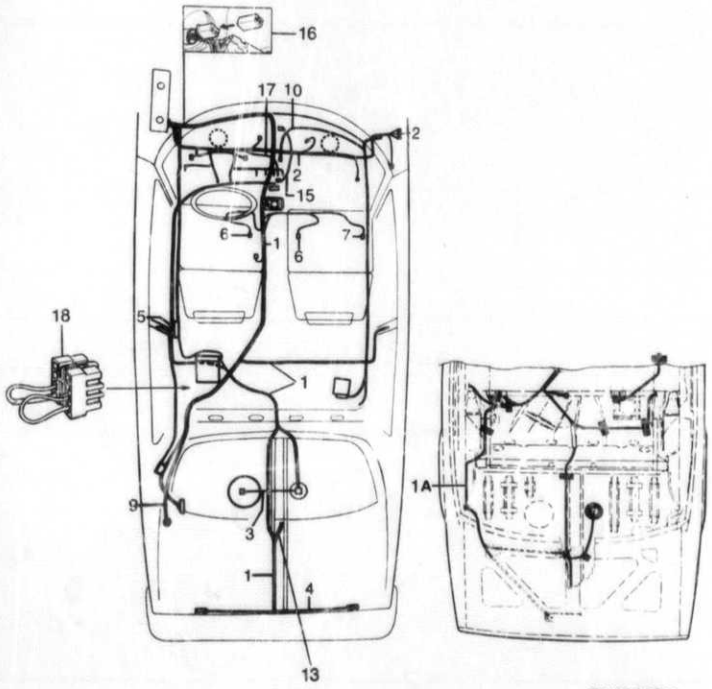

F4427 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2	41 75 774		128), US	1	Cable harness instrument	Ledningsnät instrument	5
2	41 10 201		127), CA	1	Cable harness instrument	Ledningsnät instrument	5
2	41 75 782		128), CA	1	Cable harness instrument	Ledningsnät instrument	5
3	40 69 746			1	Cable harness fuel pump	Ledningsnät bränslepump	3
4	40 69 241		SN, CV	1	Cable harness tail lamp	Ledningsnät baklykta	6
4	40 66 312		31), SN, CV, SE, FI, EU, TW	1	Cable harness tail lamp	Ledningsnät baklykta	5
4	40 66 320		31), RHD, SN, CV, GB, AU, JP, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
5	95 57 760			1	Cable harness interior illum.	Ledningsnät innerbelysning	6
6	95 24 323			1	Cable harness heating pad	Ledningsnät värmedyna	5
7	41 73 688			1	Cable harness seat belt warning	Ledningsnät bältesvarning	6
9	95 64 477		83)	1	Cable harness antenna	Ledningsnät antenn	5
9	41 08 551		84)	1	Cable harness antenna	Ledningsnät antenn	5
10			See page 3A-055, 2-C08	1	Cable harness speed control system	Ledningsnät farthållningssystem	
13	95 53 553		SN	1	Cable harness high mounted stop light	Ledningsnät högt monterad stopplykta	5
15			US See page 3A-065, 2-C18		Cable harness radio-equalizer	Ledningsnät radio-equalizer	
16	95 69 740		GB, IT	1	Cable harness control lamp	Ledningsnät kontrollampa	5
17	40 66 338			1	Cable ashtray	Kabel askkopp	6
18	41 10 326		112)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
18	41 10 342		70)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
18	41 10 334		70), RHD	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5

31. With rear fog light. Med dimbaklykta.
70. Rheostat. Reostat.
83. Ch -L3000891, -L7003841.
84. Ch L3000892-, L7003842-.
112. Thermostat. Termostat.
127. Ch -M5004703, -M7010506.
128. Ch M5004704-, M7010507-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D20

Doors 1991

Dörrar 1991

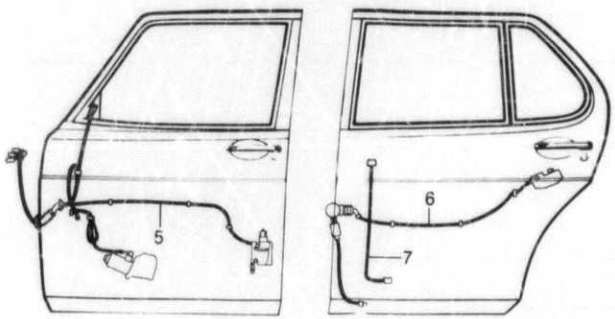

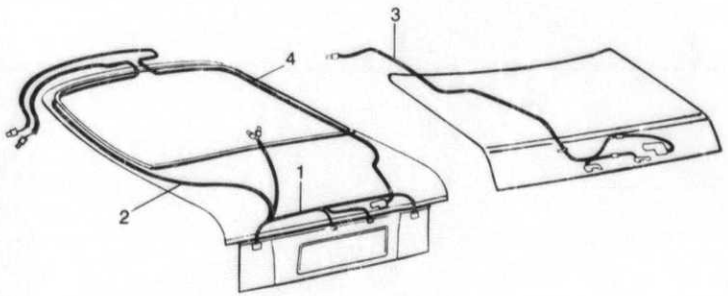

F3055 AAC90

1059	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	40 67 328		71)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0040								
0050	1	40 67 294		31), SE, FI, EU	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0060								
0070	1	40 67 302		31), RHD, GB, AU, JP, FE	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0080								
0090	1	40 68 912		72)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0100								
0110								
0120	2	40 67 336			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0130								
0140	2	40 68 912		72)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150								
0160								
0170	3	40 68 433		127), CL, SN	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0180								
0185	3	41 75 949		128), CL, SN	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0186								
0187	3	95 96 586		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0188								
0190								
0200	4	40 67 310		133), CL, CK	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	5
0210								
0215	4	43 50 302		134), CL, CK	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	5
0216								
0220								
0230	5	85 91 257		66), EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0240								
0250	5	95 64 675		66,73), EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0260								
0270	5	95 97 444		66), CV, EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0280								
0290	5	85 91 265		74), EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0300								
0310	5	95 64 683		73,74), EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0320								
0330	5	95 97 451		74), CV, EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0340								
0350								
0360	6	85 91 281		CL	2	Cable harness rear door	Ledningsnät bakdörr	5
0370								
0380								
0390	7	85 91 489		EW	2	Cable harness rear door	Ledningsnät bakdörr	5
0400								
0410	7	85 91 497		EW, CL	2	Cable harness rear door	Ledningsnät bakdörr	5
0420								


31. With rear fog light. Med dimbaklykta.
66. Drivers side. Förarsida.
71. Without rear fog light. Utan dimbaklykta.
72. High mounted stop light. Högt monterat stoppljus.
73. Electrically heated EM. Eluppvärmd EM.
74. Passenger side. Passagerarsida
127. Ch --M5004703, --M7010506.
128. Ch M5004704--, M7010507--.
133. Ch --M5010114.
134. Ch M5010115--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

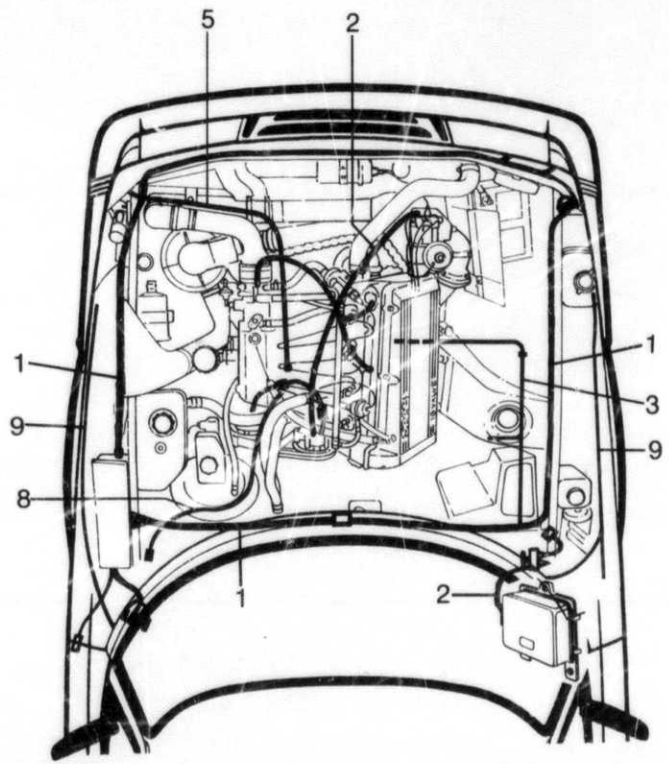

F3828 - AAC90

Wiring and fuses

2-D22

Front and engine

1992

Ledningar och säkringar

Främre och motor

1992

1061	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 75 022		4,129), B202 I	1	Cable harness front	Ledningsnät främre	5
0030	1	41 75 055		4,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0050	1	41 75 030		5,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0080	1	41 75 071		129), B212 I, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0100	1	41 75 089		129), B212 I, RHD	1	Cable harness front	Ledningsnät främre	5
0130	1	41 75 048		4,129), B202 I, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0160	1	41 75 113		129), B202S	1	Cable harness front	Ledningsnät främre	5
0180	1	41 75 121		129), B202S, RHD	1	Cable harness front	Ledningsnät främre	5
0210	1	41 75 139		129), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0230	1	41 75 147		129),B202 TURBO, RHD	1	Cable harness front	Ledningsnät främre	5
0260	1	41 75 097		129), B212 I, US	1	Cable harness front	Ledningsnät främre	5
0280	1	41 75 154		129), B202 TURBO, US	1	Cable harness front	Ledningsnät främre	5
0310	1	41 75 105		129), B212 I, CA	1	Cable harness front	Ledningsnät främre	5
0330	1	41 75 162		129), B202 TURBO, CA	1	Cable harness front	Ledningsnät främre	5
0360	2	41 10 458		4), B202 I	1	Cable harness engine	Ledningsnät motor	3
0380	2	91 21 757		5), B202 I	1	Cable harness engine	Ledningsnät motor	3
0400	2	41 76 301		B212 I	1	Cable harness engine	Ledningsnät motor	3
0430	2	41 10 060		4), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0450	2	41 10 078		5), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0480	2	41 10 466		B202 TURBO, UC	1	Cable harness engine	Ledningsnät motor	3
0500	3	85 69 386			1	.Cable lambda sonde	.Ledning lambdasond	6
0530	4	95 55 905		B+	1	Cable	Kabel	6
0550	5	95 61 804			1	Cable harness knock-sensor	Ledningsnät knacksensor	6
0580	8	74 78 159		5,68), LH2.2 See page 2-165, 1-I22	1	Cable harness	Ledningsnät	6

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor
68. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
129. With electrical distribution unit. Med elcentral.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-D24

Front and engine 1992

Främre och motor 1992

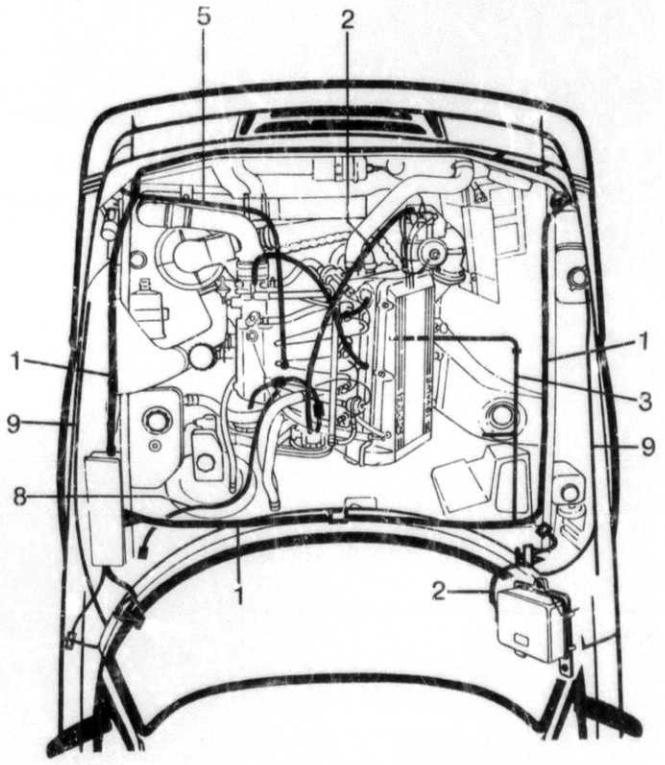

F3828 - AAC90


1061	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600								
0610	9	40 61 875		AIR-BAG, LH	1	Cable harness sensor	Ledningsnät sensor	5
0620								
0630	9	40 60 646		AIR-BAG, RH	1	Cable harness sensor	Ledningsnät sensor	5
0640								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

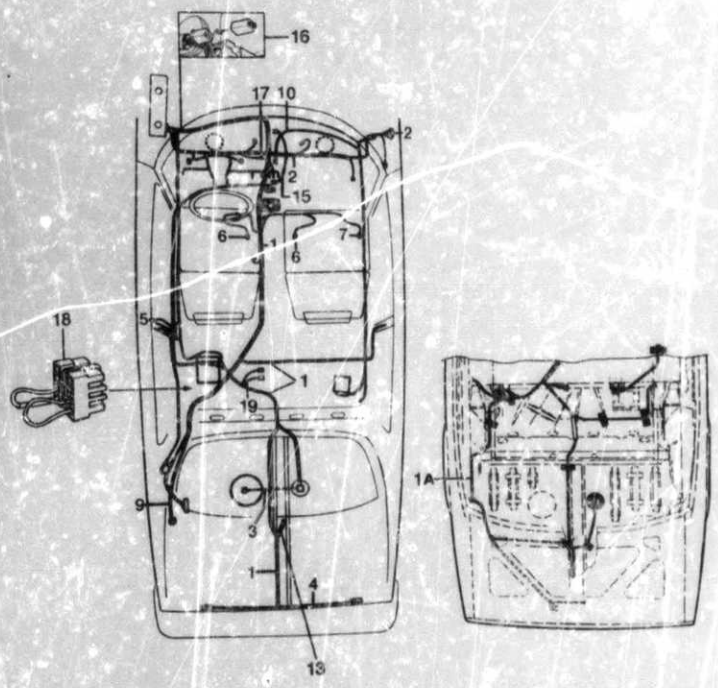

F4428 AAC 90

2-E02

Wiring and fuses
Instruments and rear
1992

Ledningar och säkringar
Instrument och bakre
1992

1063	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 319		SN, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0020								
0030	1	41 76 335		CK, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0040								
0050								
0060	1	41 76 343		SN, US CA	1	Cable harness rear	Ledningsnät bakre	5
0070								
0080	1	41 76 360		CK, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0090								
0100								
0110	1A	95 98 681		141), CV, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0120								
0125	1A	95 97 907		142), CV, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0127								
0130	1A	95 98 699		141), CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0140								
0141	1A	95 97 899		142), CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0143								
0150								
0160	2	41 75 758		B202 I, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0170								
0180	2	43 53 801		20), B202 I, SE, EU, PA	1	Cable harness instrument	Ledningsnät instrument	5
0190								
0200	2	41 75 766		B202 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0210								
0220								
0230	2	41 75 790		B212 I	1	Cable harness instrument	Ledningsnät instrument	5
0240								
0250	2	43 53 819		20), B212 I, EU	1	Cable harness instrument	Ledningsnät instrument	5
0260								
0270	2	41 75 808		B212 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0280								
0290								
0300	2	41 75 790		B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0310								
0320	2	43 53 819		20), B202 TURBO, SE, EU, PA	1	Cable harness instrument	Ledningsnät instrument	5
0330								
0340	2	41 75 808		B202 TURBO, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0350								
0360								
0370	2	41 75 774		US, CA	1	Cable harness instrument	Ledningsnät instrument	5
0380								
0390								
0400	3	40 69 746			1	Cable harness fuel pump	Ledningsnät bränslepump	3
0410								
0420								
0430	4	40 69 241		SN, CV	1	Cable harness tail lamp	Ledningsnät baklykta	6
0440								
0450	4	40 66 312		31), SN, CV, SE, FI, EU, TW	1	Cable harness tail lamp	Ledningsnät baklykta	5
0460								
0470								
0480	4	40 66 320		31), RHD, SN, CV, GB, AU, JP, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
0490								
0500								
0510	5	95 57 760			1	Cable harness interior illum.	Ledningsnät innerbelysning	6
0520								
0530								
0540	6	95 24 323			1	Cable harness heating pad	Ledningsnät värmedyna	5
0550								


20. AIR-BAG.
31. With rear fog light. Med dimbaklykta.
141. Ch -N7009233.
142. Ch N7009234-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

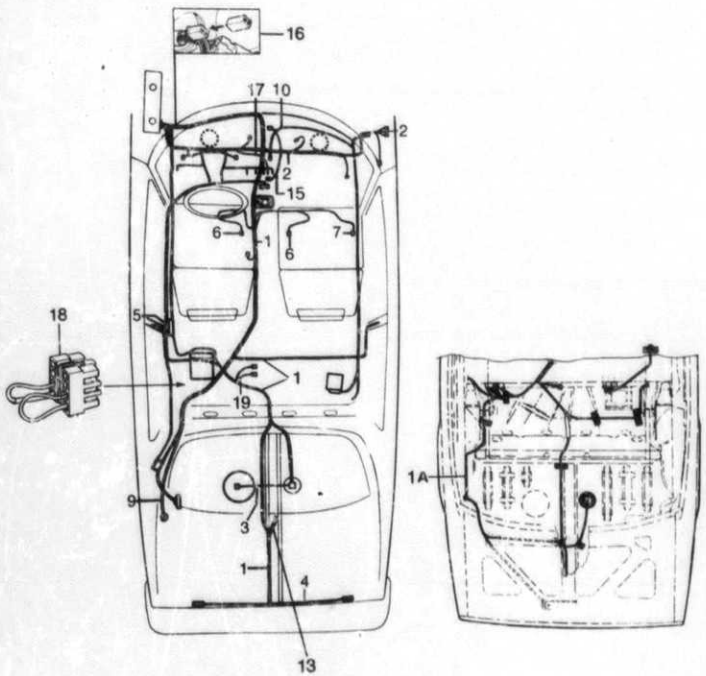

F4428 AAC90

1063	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	6	43 50 393		74)	1	Cable harness heating pad	Ledningsnät värmedyna	5
0570								
0580								
0590	7	41 73 638			1	Cable harness seat belt warning	Ledningsnät bältesvarning	6
0600								
0610								
0620	9	41 08 551			1	Cable harness antenna	Ledningsnät antenn	5
0630								
0640								
0650	10			See page 3A-055, 2-C08	1	Cable harness speed control system	Ledningsnät farthållningssystem	
0660								
0670								
0710	13	95 53 553		SN	1	Cable harness high mounted stop light	Ledningsnät högt monterad stopplykta	5
0720								
0730								
0740	15			US		Cable harness	Ledningsnät	
0750				See page 3A-065, 2-C18		radio-equalizer	radio-equalizer	
0760								
0770	16	95 69 740		GB, IT	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0780								
0790	17	40 66 338			1	Cable ashtray	Kabel askkopp	6
0800								
0810								
0820	18	41 10 326		112)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0830								
0840	18	41 10 342		70)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0850								
0860	18	41 10 334		70), RHD	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0870								
0880								
0890	19	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0900								

70. Rheostat. Reostat.
74. Passenger side. Passagerarsida.
112. Thermostat. Termostat.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E06 Doors 1992 / Dörrar 1992

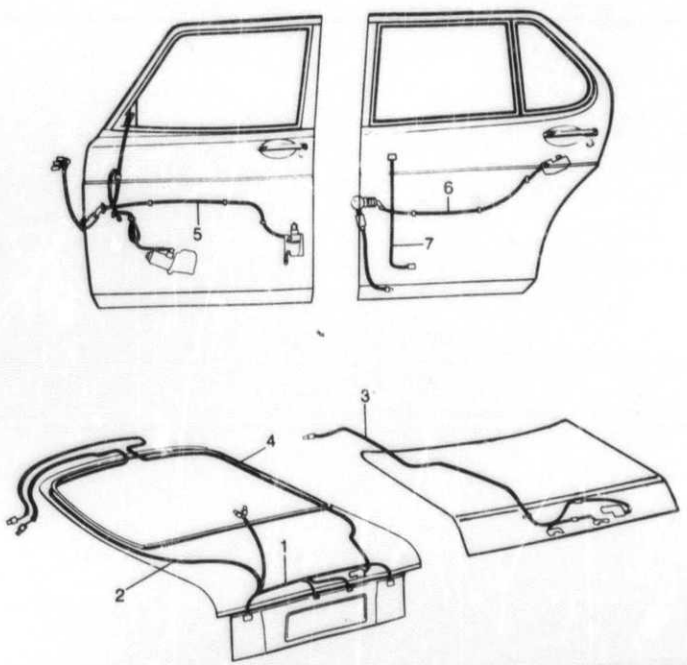

F3830 - AAC90

1065	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 328		71)	1	Cable harness	Ledningsnät	6
0020						tail gate	bagagerumsdörr	
0030	1	40 67 294		31), SE, FI, EU	1	Cable harness	Ledningsnät	6
0040						tail gate	bagagerumsdörr	
0050	1	40 67 302		31), RHD, GB, AU, JP, FE	1	Cable harness	Ledningsnät	6
0060						tail gate	bagagerumsdörr	
0070	1	40 68 912		72)	1	Cable harness	Ledningsnät	6
0080						tail gate	bagagerumsdörr	
0090								
0100	2	40 67 336			1	Cable harness	Ledningsnät	6
0110						tail gate	bagagerumsdörr	
0120	2	40 68 912		72)	1	Cable harness	Ledningsnät	6
0130						tail gate	bagagerumsdörr	
0140								
0150	3	41 75 949		SN	1	Cable harness	Ledningsnät	6
0160						boot lid	bagagerumslucka	
0170	3	95 96 586		141), CV	1	Cable harness	Ledningsnät	6
0180						boot lid	bagagerumslucka	
0185	3	95 97 915		142), CV	1	Cable harness	Ledningsnät	6
0187						boot lid	bagagerumslucka	
0190								
0200	4	43 50 302		CL, CK	1	Cable harness	Ledningsnät	5
0210						tail gate	bagagerumsdörr	
0220								
0230	5	85 91 257		66), EM, EW, CL	1	Cable harness	Ledningsnät	5
0240						front door	framdörr	
0250	5	95 64 675		66,73), EW, CL	1	Cable harness	Ledningsnät	5
0260						front door	framdörr	
0270	5	85 91 265		74), EM, EW, CL	1	Cable harness	Ledningsnät	5
0280						front door	framdörr	
0290	5	95 64 683		73,74), EW, CL	1	Cable harness	Ledningsnät	5
0300						front door	framdörr	
0310	5	95 97 451		135), CV, EM, EW, CL	2	Cable harness	Ledningsnät	5
0320						front door	framdörr	
0330								
0340	6	85 91 281		CL	2	Cable harness	Ledningsnät	5
0350						rear door	bakdörr	
0360								
0370	7	85 91 489		EW	2	Cable harness	Ledningsnät	5
0380						rear door	bakdörr	
0390	7	85 91 497		EW, CL	2	Cable harness	Ledningsnät	5
0400						rear door	bakdörr	

31. With rear fog light. Med dimbaklykta.
66. Driver's side. Förarsida.
71. Without rear fog light. Utan dimbaklykta.
72. High mounted stop light. Högt monterat stoppljus.
73. Electrically heated EM. Eluppvärmd EM.
74. Passenger side. Passagerarsida.
135. With anti theft system. Med stöldlarm.
141. Ch -N7009233
142. Ch N7009234-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E08

Front and engine 1993-

Främre och motor 1993-

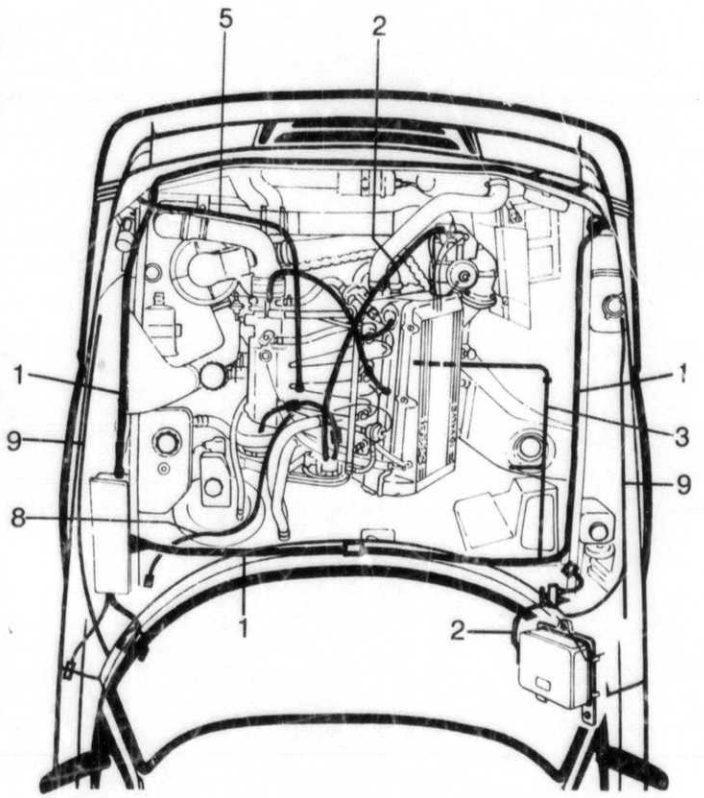

F4429 AAC90

1067	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 75 022		4,129), B202 I	1	Cable harness front	Ledningsnät främre	5
0030	1	41 75 055		4,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0050	1	41 75 030		5,129), B202 I, RHD	1	Cable harness front	Ledningsnät främre	5
0080	1	41 75 071		129), B212 I, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0100	1	41 75 089		129), B212 I, RHD	1	Cable harness front	Ledningsnät främre	5
0130	1	41 75 048		4,129), B202 I, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0160	1	41 75 113		129), B202S	1	Cable harness front	Ledningsnät främre	5
0180	1	41 75 121		129), B202S, RHD	1	Cable harness front	Ledningsnät främre	5
0210	1	41 75 139		129), B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness front	Ledningsnät främre	5
0230	1	41 75 147		129),B202 TURBO, RHD	1	Cable harness front	Ledningsnät främre	5
0260	1	41 75 097		129), B212 I, US, CA	1	Cable harness front	Ledningsnät främre	5
0280	1	41 75 154		129), B202 TURBO, US, CA	1	Cable harness front	Ledningsnät främre	5
0360	2	41 10 458		4), B202 I	1	Cable harness engine	Ledningsnät motor	3
0380	2	91 21 757		5), B202 I	1	Cable harness engine	Ledningsnät motor	3
0400	2	41 76 301		B212 I	1	Cable harness engine	Ledningsnät motor	3
0430	2	41 10 060		4), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0450	2	41 10 078		5), B202 TURBO	1	Cable harness engine	Ledningsnät motor	3
0480	2	41 10 466		B202 TURBO, UC	1	Cable harness engine	Ledningsnät motor	3
0500	3	85 69 386			1	Cable lambda sonde	Ledning lambdasond	6
0530	4	95 55 905		B+	1	Cable	Kabel	6
0550	5	95 61 804			1	Cable harness knock-sensor	Ledningsnät knacksensor	6
0580	8	74 78 159		5,68), LH2.2 See page 2-165, 1-I22	1	Cable harness	Ledningsnät	6
0610	9	40 61 875		AIR-BAG, LH	1	Cable harness sensor	Ledningsnät sensor	5
0630	9	40 60 646		AIR-BAG, RH	1	Cable harness sensor	Ledningsnät sensor	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
68. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
129. With electrical distribution unit. Med elcentral.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

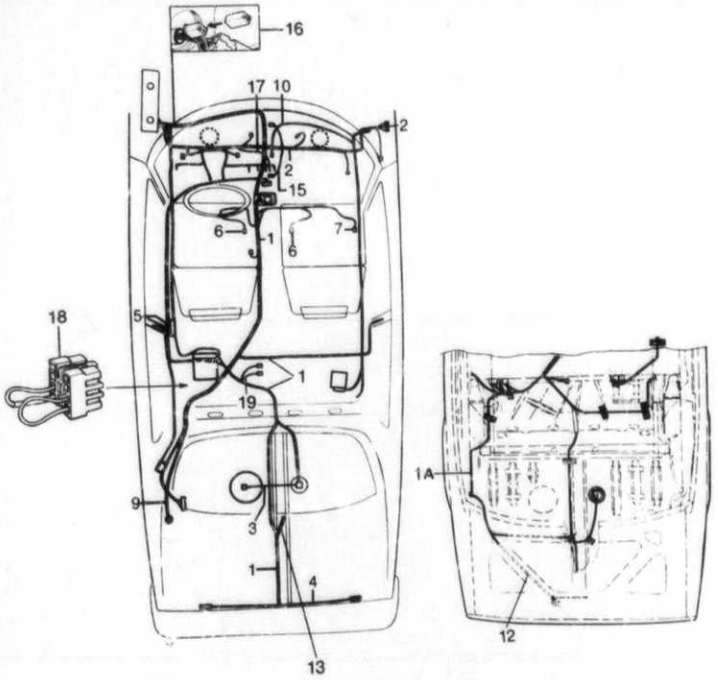

F4430 AAC90

1069	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 319		SN, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0020								
0030	1	41 76 335		CK, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0040								
0050								
0060	1	41 76 343		SN, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0070								
0080	1	41 76 350		CK, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0090								
0100								
0110	1A	95 97 907		CV, SE, EU, GB, PA, AU	1	Cable harness rear	Ledningsnät bakre	5
0120								
0130	1A	95 97 899		CV, US, CA	1	Cable harness rear	Ledningsnät bakre	5
0140								
0150								
0160	2	41 75 758		B202 I, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0170								
0180	2	43 53 801		20), B202 I, SE, EU, PA	1	Cable harness instrument	Ledningsnät instrument	5
0190								
0200	2	41 75 766		B202 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0210								
0220								
0230	2	41 75 790		B212 I	1	Cable harness instrument	Ledningsnät instrument	5
0240								
0250	2	43 53 819		20), B212 I, EU	1	Cable harness instrument	Ledningsnät instrument	5
0260								
0270	2	41 75 808		B212 I, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0280								
0290								
0300	2	41 75 790		B202 TURBO, SE, FI, EU, JP, TW	1	Cable harness instrument	Ledningsnät instrument	5
0310								
0320	2	43 53 819		20), B202 TURBO, SE, EU, PA	1	Cable harness instrument	Ledningsnät instrument	5
0330								
0340	2	41 75 808		B202 TURBO, RHD	1	Cable harness instrument	Ledningsnät instrument	5
0350								
0360								
0370	2	41 75 774		US, CA	1	Cable harness instrument	Ledningsnät instrument	5
0380								
0390								
0400	3	40 69 746			1	Cable harness fuel pump	Ledningsnät bränslepump	3
0410								
0420								
0430	4	40 69 241		SN, CV	1	Cable harness tail lamp	Ledningsnät baklykta	6
0440								
0450	4	40 66 312		31), SN, CV, SE, FI, EU, TW	1	Cable harness tail lamp	Ledningsnät baklykta	5
0460								
0470								
0480	4	40 66 320		31), RHD, SN, CV, GB, AU, JP, FE	1	Cable harness tail lamp	Ledningsnät baklykta	5
0490								
0500								
0510	5	95 57 760			1	Cable harness interior illum.	Ledningsnät innerbelysning	6
0520								
0530								
0540	6	95 24 323			1	Cable harness heating pad	Ledningsnät värmedyna	6
0550								
0560	6	43 50 393		74)	1	Cable harness heating pad	Ledningsnät värmedyna	5
0570								
0580								
0590	7	41 73 688			1	Cable harness seat belt warning	Ledningsnät bältesvarning	6
0600								

20. AIR-BAG.
31. With rear fog light. Med dimbaklykta.
74. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E12

Instruments and rear
1993-

Instrument och bakre
1993-

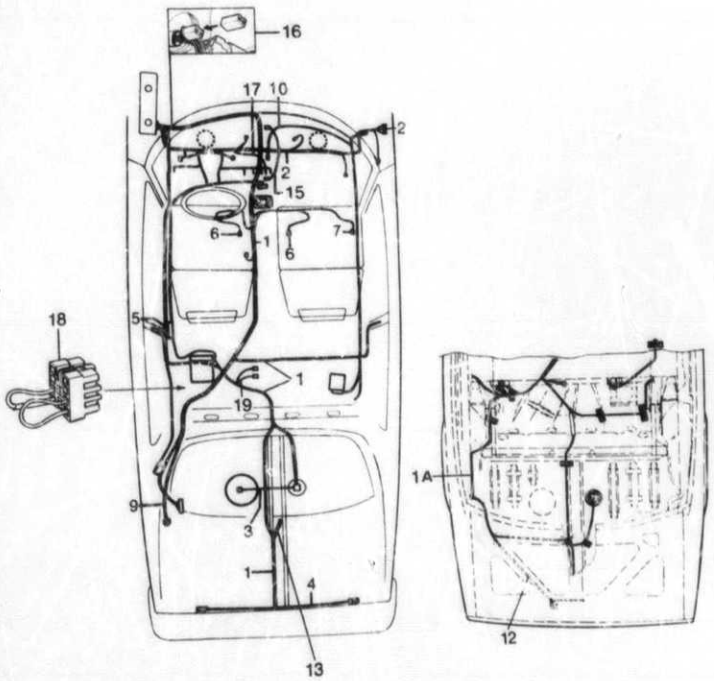

F4430 AAC90

1069	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610								
0620	9	41 08 551			1	Cable harness antenna	Ledningsnät antenn	5
0630								
0640								
0650	10			See page 3A-055, 2-C08	1	Cable harness speed control system	Ledningsnät farthållningssystem	
0660								
0670								
0710	13	95 53 553		SN	1	Cable harness high mounted stop light	Ledningsnät högt monterad stopplykta	5
0720								
0730								
0740	15			US		Cable harness	Ledningsnät	
0750				See page 3A-065, 2-C18		radio-equalizer	radio-equalizer	
0760								
0770	16	95 69 740		GB, IT	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0780								
0790	17	40 66 338			1	Cable ashtray	Kabel askkopp	6
0800								
0810								
0820	18	41 10 326		112)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0830								
0840	18	41 10 342		70)	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0850								
0860	18	41 10 334		70), RHD	1	Cable harness adjustment, heated seat	Ledningsnät inställning, stolvärme	5
0870								
0880								
0890	19	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0900								

70. Rheostat. Reostat.
112. Thermostat. Termostat.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E14

Doors
1993-

Dörrar
1993-

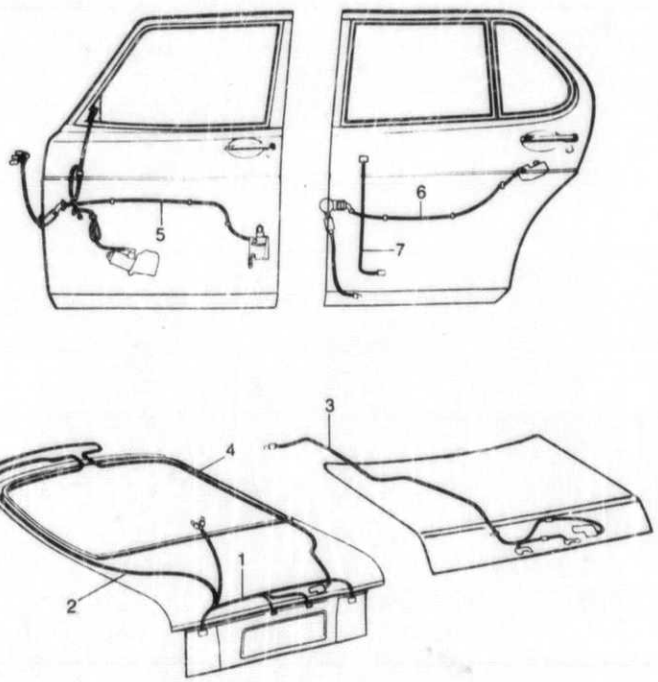

F4431 AAC90

1071	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	40 67 328		71)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0040								
0050	1	40 67 294		31), SE, FI, EU	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0060								
0070	1	40 67 302		31), RHD, GB, AU, JP, FE	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0080								
0090	1	40 68 912		72)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0100								
0110								
0120	2	40 67 336			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0130								
0140	2	40 68 912		72)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150								
0160								
0185	3	41 75 949		SN	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0186								
0187	3	95 97 915		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	5
0188								
0190								
0215	4	43 50 302		CL, CK	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	5
0216								
0220								
0230	5	85 91 257		66), EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0240								
0250	5	95 64 67 5		66,73), EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0260								
0290	5	85 91 265		74), EM, EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0300								
0310	5	95 64 683		73,74), EW, CL	1	Cable harness front door	Ledningsnät framdörr	5
0320								
0330	5	95 97 451		135), CV, EM, EW, CL	2	Cable harness front door	Ledningsnät framdörr	5
0340								
0350								
0360	6	85 91 281		CL	2	Cable harness rear door	Ledningsnät bakdörr	5
0370								
0380								
0390	7	85 91 489		EW	2	Cable harness rear door	Ledningsnät bakdörr	5
0400								
0410	7	85 91 497		EW, CL	2	Cable harness rear door	Ledningsnät bakdörr	5
0420								

31. With rear fog light. Med dimbaklykta.
66. Drivers side. Förarsida.
71. Without rear fog light. Utan dimbaklykta.
72. High mounted stop light. Högt monterat stoppljus.
73. Electrically heated EM. Eluppvärmd EM.
74. Passenger side. Passagerarsida.
135. With anti theft system. Med stöldlarm.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E16

Clamps
Klammor

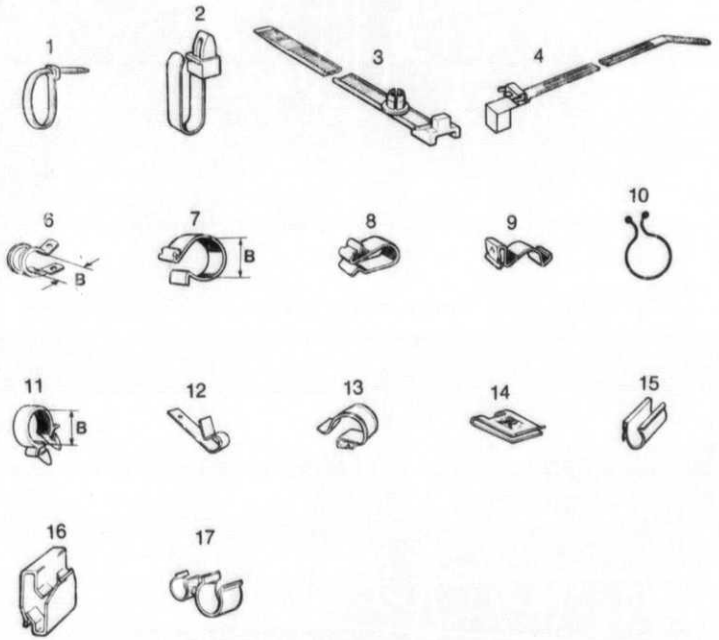

F2829 AAC90

109U	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	79 71 864		L=118 MM	X	Tensioning band	Spännband	5
0030	1	*85 17 104*		L=118 MM NLS - USE 7971864	X	Tensioning band	Spännband	4
0035	1	79 71 872		L=160 MM	X	Tensioning band	Spännband	5
0038	1	79 71 880		L=259 MM	X	Tensioning band	Spännband	4
0039	1	79 71 898		L=304 MM	X	Tensioning band	Spännband	5
0040	1	79 71 906		L=339 MM	X	Tensioning band	Spännband	5
0060	2	85 52 663		L=200 MM, ∅ 6,5 MM	X	Tensioning band	Spännband	5
0070	3	75 12 015		L=120 MM, ∅ 7 MM	X	Tensioning band	Spännband	5
0080	4	91 24 603		L=120 MM	X	Tensioning band	Spännband	5
0090								
0100	6	*85 66 143*		B=11,1 MM NLS	X	Clamp	Klammer	5
0110	6	79 69 348		B=6,4 MM	X	Clamp	Klammer	5
0120	6	79 69 363		B=9,5 MM	X	Clamp	Klammer	5
0130	6	79 69 454		B=20 MM	X	Clamp	Klammer	5
0140	7	79 33 443		B=7 MM	X	Clip	Clips	5
0150	7	71 08 491		B=10 MM	X	Clamp	Klammer	5
0160	7	92 28 149		2), B=16 MM	X	Clip cable harness	Clips ledningsnät	5
0170								
0180	8	71 56 409			X	Clamp	Klammer	5
0190	8	79 51 783			X	Clamp	Klammer	5
0200	9	*85 58 066*		NLS	X	Clip	Clips	5
0210	10	85 13 574			X	Clip front seat	Clips framstol	6
0220								
0230	11	93 65 164		B=12,5 MM	X	Clip	Clips	5
0240	11	85 30 917		B=16 MM	X	Clip	Clips	5
0250	12	85 28 564			X	Clamp	Klammer	5
0260	13	85 53 737			X	Clip brake servo	Clips bromsservo	5
0270								
0280	13	85 53 737			X	Clip instrument member	Clips instrumentbalk	5
0290								
0300	13	85 53 737			X	Clip contact housing, radio	Clips kontakthus, radio	5
0310								
0320	14	79 33 682			X	Spring nut	Fjädermutter	3
0330	15	71 21 239			X	Clamp	Klammer	5
0340	16	95 18 515		3)	X	Clip cable harness	Clips ledningsnät	5
0350								
0353	17	75 39 984			X	Clamp knock-sensor	Klammer knacksensor	5
0354								

2. Front. Främre.
3. Rear. Bakre.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E18

Bushings, screws etc

Bussningar, skruvar etc

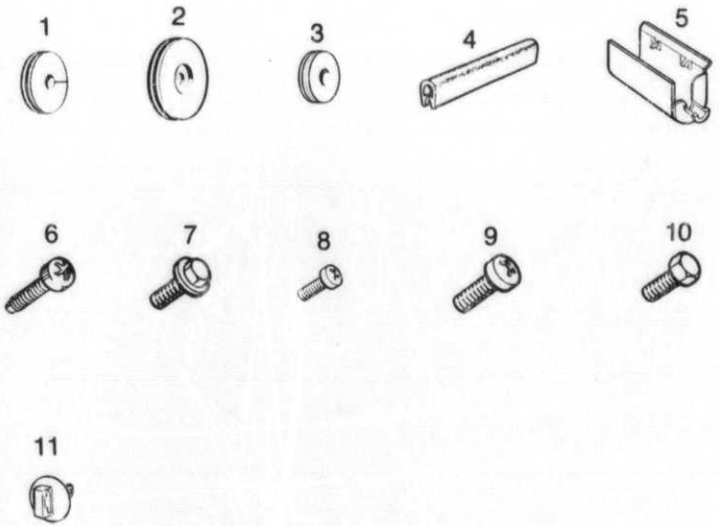

F2830 AAC90

1092	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	73 26 093		∅ 25 MM	X	Bushing	Bussning	5
0020	2	73 09 370		∅ 20 MM	2	Bushing	Bussning	
0030						horn	signalhorn	
0040	3	79 33 518		∅ 14 MM	X	Bushing	Bussning	5
0050	4	75 35 487		L= 40 MM	X	Protecting moulding	Skyddslist	5
0060	4	75 91 035		L= 55 MM	X	Protecting moulding	Skyddslist	5
0070	4	85 64 973		L= 75 MM	X	Protecting moulding	Skyddslist	6
0080	4	85 99 565		L= 78 MM	X	Protecting moulding	Skyddslist	4
0090	4	82 78 558		L= 90 MM	X	Protecting moulding	Skyddslist	5
0100	4	89 30 349		L=100 MM	X	Protecting moulding	Skyddslist	5
0110	4	95 19 737		L=140 MM	X	Protecting moulding	Skyddslist	5
0120	4	*84 97 471*		L=150 MM NLS - USE 8564973	X	Protecting moulding	Skyddslist	6
0130	4	40 63 517		L=200 MM	X	Protecting moulding	Skyddslist	4
0140	4	40 63 525		L=320 MM	X	Protecting moulding	Skyddslist	4
0150						ground	jord	
0160	5	*85 79 575*		APC NLS	1	Protection	Skydd	4
0170								
0180	6	79 22 818			X	Screw	Skruv	5
0190						ground	jord	
0200	7	79 72 144		2)	X	Screw	Skruv	5
0210						cable harness	ledningsnät	
0220	7	79 73 555		2)	X	Screw	Skruv	5
0230						cable harness	ledningsnät	
0240	8	80 59 545		2)	X	Screw	Skruv	5
0250						cable harness	ledningsnät	
0260	8	80 59 552			X	Screw	Skruv	5
0270	8	80 59 578			X	Screw	Skruv	5
0280						cable harness	ledningsnät	
0290	9	73 99 520			X	Screw	Skruv	5
0300						cable harness	ledningsnät	
0310	10	79 73 704			X	Screw	Skruv	5
0320						ground	jord	
0330	11	41 08 320		B202	1	Bracket	Hållare	4

2. Front. Främre.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E20

Mounting details
Body

Monteringsdetaljer
Kaross

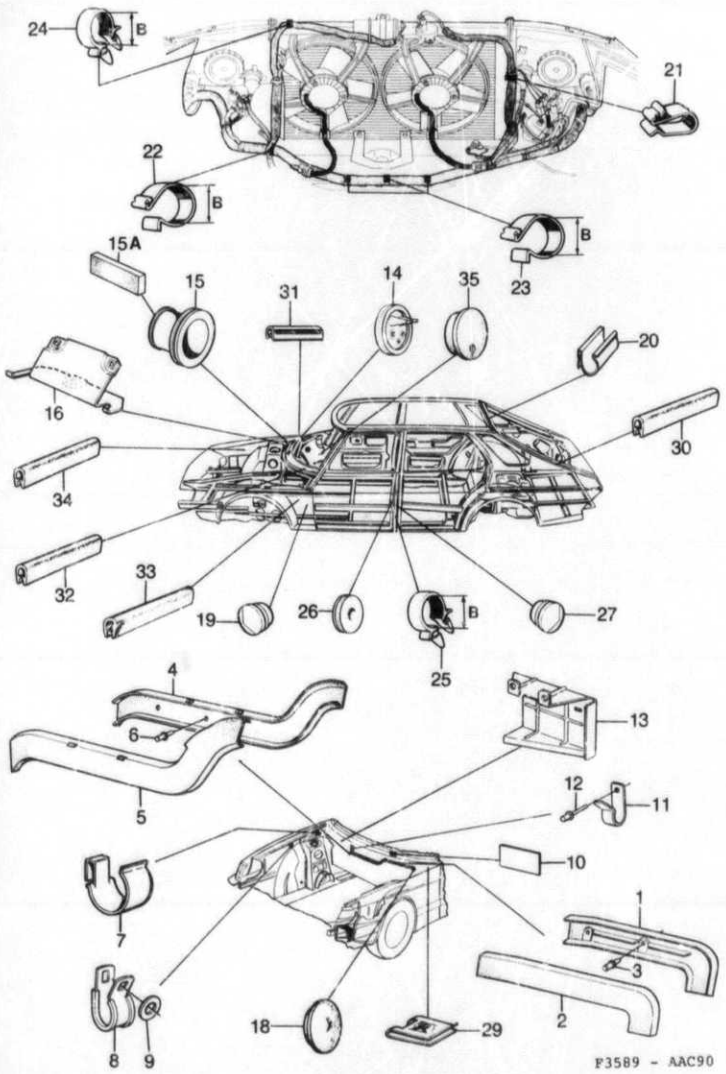

1096	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 62 725		LH	1	Cable protection cowl	Kabelskydd torped	4
0030	2	40 62 733		LH	1	Cover cowl	Lock torped	4
0050	3	82 35 178			3	Pop rivet	Popnit	5
0060	4	40 62 527		RH	1	Cable protection cowl	Kabelskydd torped	4
0080	5	40 62 535		RH	1	Cover cowl	Lock torped	4
0100	6	79 61 683			5	Rivet	Nit	5
0110	7	79 33 443		20), 1990	1	Clip cable harness, sensor	Clips ledningsnät, sensor	5
0125	7	71 08 491		20), 1991-	1	Clamp cable harness, sensor	Klammer ledningsnät, sensor	5
0130	8	79 69 355		20), 1990	1	Clamp cable harness, sensor	Klammer ledningsnät, sensor	5
0145	8	79 69 363		20), 1991-	1	Clamp cable harness, sensor	Klammer ledningsnät, sensor	5
0150	9	80 29 951		20,75), -1992	1	Washer	Bricka	5
0155	9	91 66 372		20,75), 1993-	1	Washer	Bricka	5
0160	10	85 40 452		20)	1	Wear protection steering column	Skavskydd rattställ	6
0180	11	85 28 564		14)	1	Clamp	Klammer	5
0190	12	82 35 178		14)	1	Pop rivet	Popnit	5
0200	13	95 64 014		4,86), B201	1	Bracket relay	Hållare relä	4
0220	13	40 68 581		4,87), 1990, B201	1	Bracket relay	Hållare relä	4
0240	14	85 52 713		RH, ∅ 65 MM	1	Grommet wheel housing	Genomföring hjulhus	5
0260	15	40 61 719		RH, ∅ 74 MM	1	Grommet wheel housing	Genomföring hjulhus	6
0275	15A	40 62 048		126)	1	Foam plastic	Skumplast	6
0280	16	95 53 280			1	Bracket cable harness	Hållare ledningsnät	5
0300	18	82 04 760		2)	1	Plug cable harness	Plugg ledningsnät	5
0320	19	85 75 599		-1991, ∅ 30 MM	2	Plug front door	Plugg framdörr	5
0340	20	71 21 239		SN	4	Clamp high mounted stop light	Klammer högt monterad stopplykta	5
0360	21	71 56 409			2	Clamp radiator member	Klammer kylarbalk	5
0380	22	85 09 127			1	Clip front member	Clips frontbalk	5
0400	23	85 53 737		B=16 MM	2	Clip front member	Clips frontbalk	5
0420	24	85 30 917		B=16 MM	X	Clip ignition coil	Clips tändspole	5
0440	25	93 65 164		B=12,5 MM	2	Clip door pillar	Clips dörrstolpe	5
0460	26	*79 33 567*		∅ 22 MM NLS	2	Bushing door pillar	Bussning dörrstolpe	6
0480	27	82 41 325		∅ 28 MM	2	Plug door pillar	Plugg dörrstolpe	5


2. Front. Främre.
4. With catalytic converter. Med katalytisk reaktor.
14. For cars with ABS brake system. För bilar med ABS bromsar.
20. AIR-BAG.
75. For 79 69 355. För 79 69 355.
86. Ch -L7003959.
87. Ch L7003960-.
126. For grommet 41 61 719. För genomföring 40 61 719.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

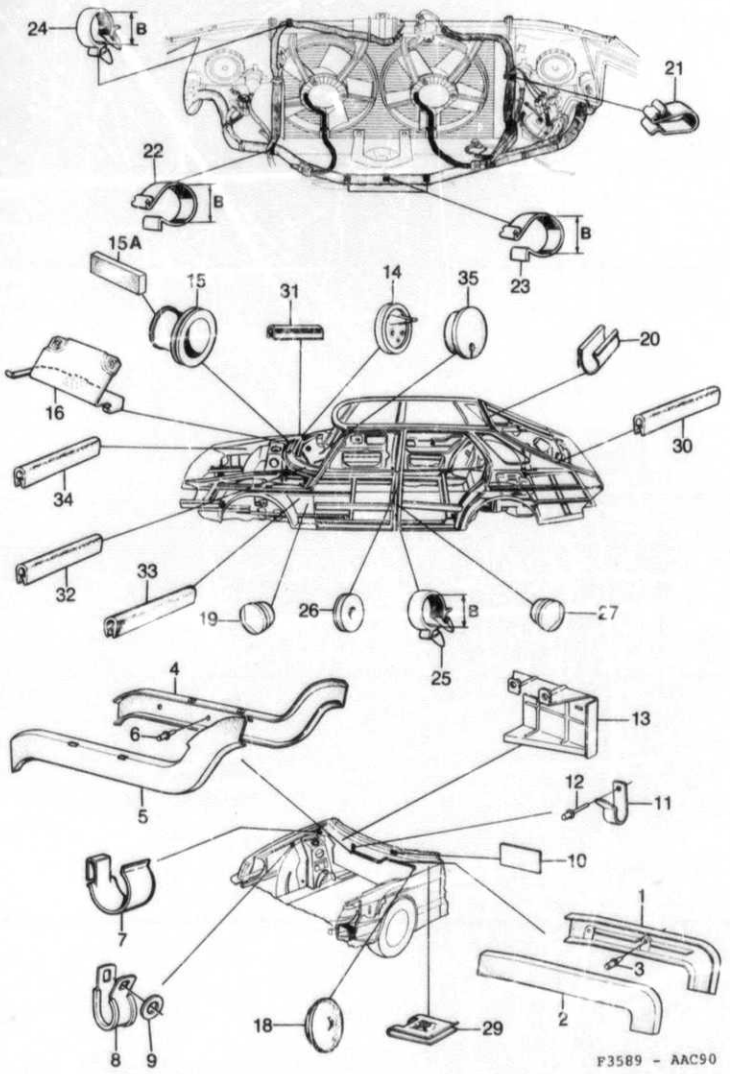

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Ch/Ant	Description	Benämning	SL
29	79 33 682			X	Spring nut instrument member	Fjädermutter instrumentbalk	3
30	*84 97 471*		L=150 MM NLS - USE 8564973	X	Protecting moulding cable harness	Skyddslist ledningsnät	6
31	95 19 737		L=140 MM	X	Protecting moulding cable harness	Skyddslist ledningsnät	5
32	85 64 973		L= 75 MM	X	Protecting moulding cable harness	Skyddslist ledningsnät	6
33	75 35 487		L= 40 MM	X	Protecting moulding cable harness	Skyddslist ledningsnät	5
34	75 91 035		2,20,90), L=55 MM	X	Protecting moulding sensor	Skyddslist sensor	5
34	95 19 737		2,20,91), L=140 MM	X	Protecting moulding sensor	Skyddslist sensor	5
35	40 62 352		1991, Ø 30 MM	1	Bushing cable harness	Bussning ledningsnät	6
35	41 75 394		1992-, Ø 90 MM	1	Bushing cable harness	Bussning ledningsnät	6
35	40 62 360		14), 1991-, Ø 90 MM	1	Bushing cable harness	Bussning ledningsnät	6

2. Front. Främre.
14. For cars with ABS brake system. För bilar med ABS bromsar.
20. AIR-BAG.
90. Ch -L7003031.
91. Ch L7003032-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-E24

Mounting details
Floor

Monteringsdetaljer
Golv

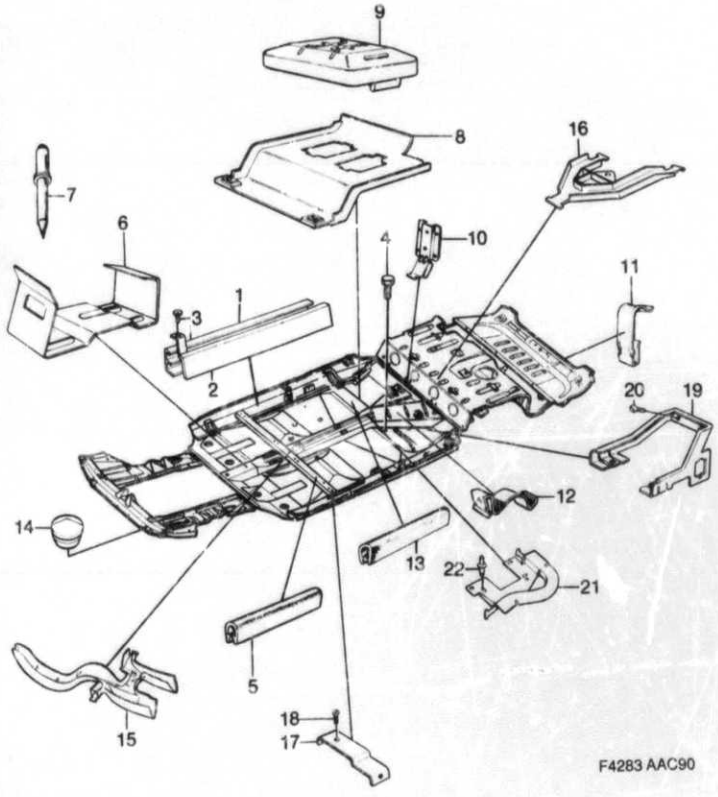

1097	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 10 581		1990, RH	1	Protection sill	Skyddshölje tröskel	4
0020								
0025	1	41 09 575		1991-, RH	1	Protection sill	Skyddshölje tröskel	4
0026								
0030	2	40 69 303		1990, RH	1	Protecting casing	Skyddskåpa	4
0035	2	40 69 324		1991-, RH	1	Protecting casing	Skyddskåpa	4
0040	3	95 65 417			1	Rivet	Nit	3
0050								
0060	4	80 59 578		14), 1990	1	Screw ground	Skruv jord	5
0070								
0075	4	80 59 578		111), 1991-	1	Screw ground	Skruv jord	5
0076								
0080								
0090	5	89 30 349		L=100 MM	X	Protecting moulding	Skyddslist	5
0100								
0110	6	*95 63 354*		3)	1	Attaching brace cable harness	Fästbygel ledningsnät	5
0120				NLS				
0130	7	79 72 490			1	Rivet	Nit	5
0140								
0150	8	95 69 799		B202, B212 I	1	Bracket test connection	Hållare testuttag	4
0160								
0170	9	40 60 836		B202, B212 I	1	Cover test connection	Lock testuttag	4
0180								
0190								
0200	10	85 69 360		3)	1	Protecting plate cable harness	Skyddsplåt ledningsnät	5
0210								
0220								
0230	11	85 85 325		3)	X	Clamp cable harness	Klämma ledningsnät	5
0240								
0250								
0260	12	*85 58 066*		3)	2	Clip cable harness	Clips ledningsnät	5
0270				NLS				
0280								
0290	13	89 30 349		L=100 MM	1	Protecting moulding rear seat	Skyddslist baksäte	5
0300								
0310								
0320	14	71 55 708		Ø 38 MM	1	Plug	Plugg	5
0330								
0340	15	41 08 890			1	Duct tunnel	Kanal tunnel	4
0350								
0360								
0370	16	41 08 973			1	Duct boot	Kanal bagagerum	4
0380								
0390								
0400	17	41 09 567		1991-	2	Bracket cable harness	Konsol ledningsnät	4
0410								
0420	18	79 22 891		1991-	2	Screw	Skruv	5
0430								
0440	19	41 73 662		1991-	1	Relay retainer	Relähållare	4
0460	20	79 71 294		1991-	2	Screw	Skruv	5
0470	21	41 08 981		132)	1	Duct cable harness	Kanal ledningsnät	4
0480								
0490	22	79 72 474		132)	2	Pop rivet	Popnit	3

3. Rear. Bakre.
14. For cars with ABS brake system. För bilar med ABS bromsar.
111. For cars without ABS brake system. För bilar utan ABS bromsar.
132. Ch M5007280- M7016191-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F02

Mounting details
Doors

Monteringsdetaljer
Dörrar

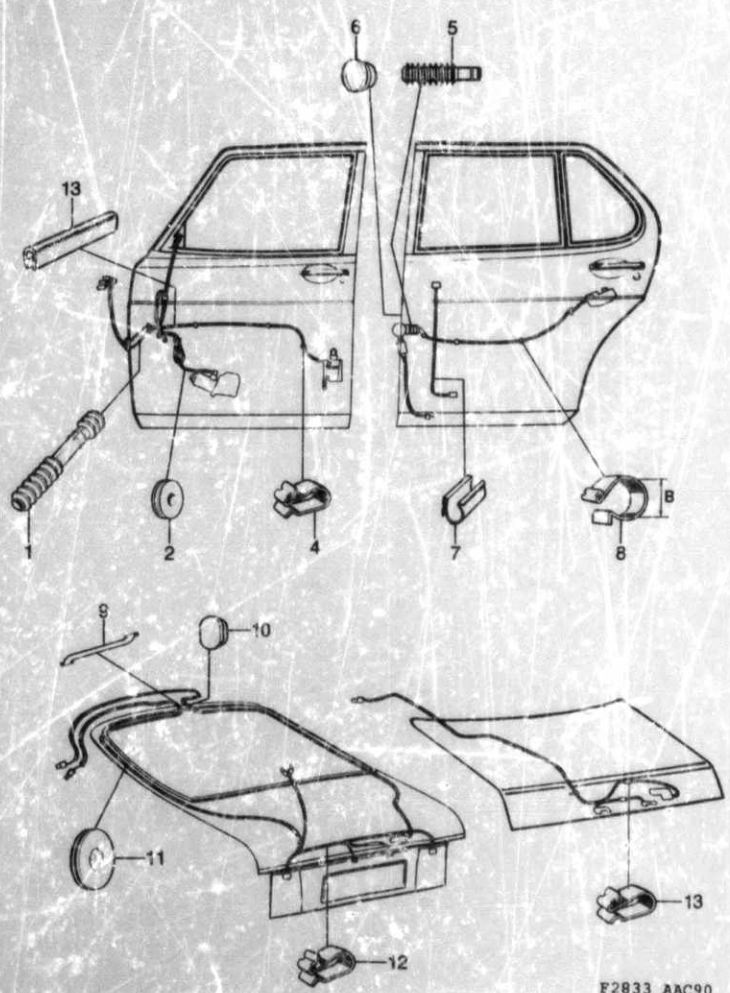

F2833 AAC90

1098	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 74 410			2	Bellows	Bälg	6
0020	2	*79 33 567*		-1991, CV, Ø 22 MM NLS	2	Bushing	Bussning	6
0030	3	82 78 558		L=90 MM	2	Protecting moulding	Skyddslist	5
0040	4	71 56 409			X	Clamp	Klammer	5
0050								
0060	5	85 74 824			2	Bellows	Bälg	6
0070	6	70 38 342		-1991, Ø 20 MM	2	Plug	Plugg	5
0080	7	71 21 239			2	Clamp	Klammer	5
0090	8	79 33 443		B=7 MM	X	Clip	Clips	5
0100								
0110	9	85 61 433			2	Grommet	Genomföring	6
0120	10	85 75 581		-1991, Ø 25 MM	2	Plug	Plugg	5
0130	11	*79 61 980*		NLS	1	Bushing	Bussning	5
0140	12	71 56 409			X	Clamp	Klammer	5
0150								
0160	13	71 56 409			4	Clamp	Klammer	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F04

Electrical distribut.unit
Relays and fuses

Elcentral
Reläer och säkringar

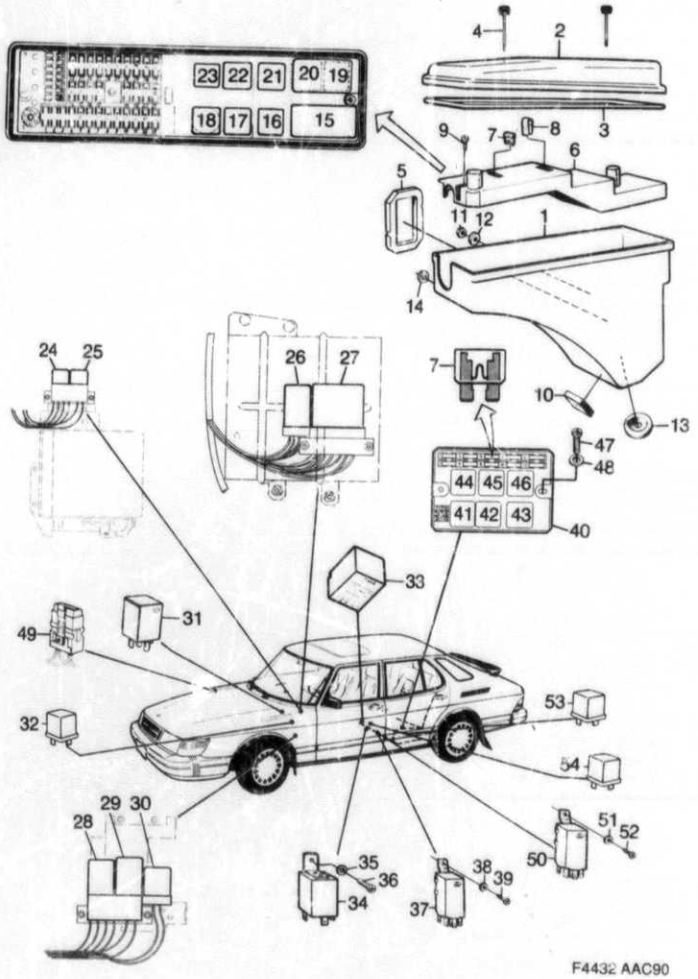

F4432 AAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 98 773		130)	1	Lower section	Underdel	5
0020						electrical distribut.unit	elcentral	
0025	1	41 17 370		131)	1	Lower section	Underdel	5
0026						electrical distribut.unit	elcentral	
0030	2	40 69 761		1990, B201, SE, FI, EU, GB, ME, FE	1	Cover	Lock	5
0040						electrical distribut.unit	elcentral	
0050	2	40 69 787		1990, B202, SE, FI, GB, ME, FE, AU, JP	1	Cover	Lock	5
0060						electrical distribut.unit	elcentral	
0070	2	41 73 944		1991-	1	Cover	Lock	5
0080						electrical distribut.unit	elcentral	
0090	2	40 69 803		1990, B202, US, CA	1	Cover	Lock	5
0100						electrical distribut.unit	elcentral	
0110	2	41 73 969		1991-, US, CA	1	Cover	Lock	5
0120						electrical distribut.unit	elcentral	
0130	3	85 53 265			1	.Seal	.Tätning	6
0140	4	85 71 663			2	.Screw	.Skruv	
0150	5	85 52 671			1	Seal	Tätning	6
0160	6	95 59 790			1	Socket	Sockel	6
0170	7	79 74 637		10A	X	Fuse	Säkring	1
0180	7	79 74 645		15A	X	Fuse	Säkring	1
0190	7	79 74 652		20A	X	Fuse	Säkring	1
0200	7	79 74 660		25A	X	Fuse	Säkring	1
0210	7	79 74 678		30A	X	Fuse	Säkring	1
0220	8	85 87 636			1	Fuse clip	Säkringsklämma	5
0230	9	79 22 909			2	Screw	Skruv	5
0240	10	85 51 392			1	Seal	Tätning	6
0250	11	79 71 658			3	Nut	Mutter	5
0260	12	85 37 623			2	Washer	Bricka	3
0270	13	79 62 004			1	Bushing	Bussning	
0275	14	79 16 489		138)	1	Washer	Bricka	5
0280	15	95 66 647		SE, CA	1	Relay	Relä	2
0290						light	ljus	
0300	15	95 53 546		1990	1	Relay	Relä	2
0310						light	ljus	
0320	15	95 66 647		1991-	1	Relay	Relä	2
0330						light	ljus	
0340	16	85 22 310		1990	1	Relay	Relä	3
0350						rear window	bakruta	
0360	16	95 19 133		76), 1990	1	Relay	Relä	4
0370						rear window	bakruta	
0380	16			1991-	1	Relay	Relä	
0390						extra	extra	
0395	16	85 22 310		145)	1	Relay	Relä	3
0397						starter relay	startrelä	
0400	17	85 22 310			1	Relay	Relä	3
0410						front fog light	dimstrålkastare	
0420	18	95 22 061			1	Relay	Relä	5
0430						starter switch	tändningslås	
0440	19	95 50 948		1990, B201 I	1	Relay	Relä	3
0450						fuel pump	bränslepump	
0460	19	95 56 390		1990, CA	1	Relay	Relä	9
0470						daylight driving lights	varselljus	
0475	19	95 56 390		1991-, US, CA	1	Relay	Relä	9
0476						daylight driving lights	varselljus	
0480	20	85 22 310		SE, FI, EU, GB	1	Relay	Relä	3
0490						cooling fan	kylfläkt	
0500	20	95 63 339		76), 1990, ME, FE, AU, US, CA, JP	1	Relay	Relä	4
0510						cooling fan	kylfläkt	


76. Timer relay. Tidrelä.
130. Ch -M5004703. -M7010506.
131. Ch M5004704-, M7010507-.
138. Ch N2000715-, N7002858-.
145. Ch P2006845-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

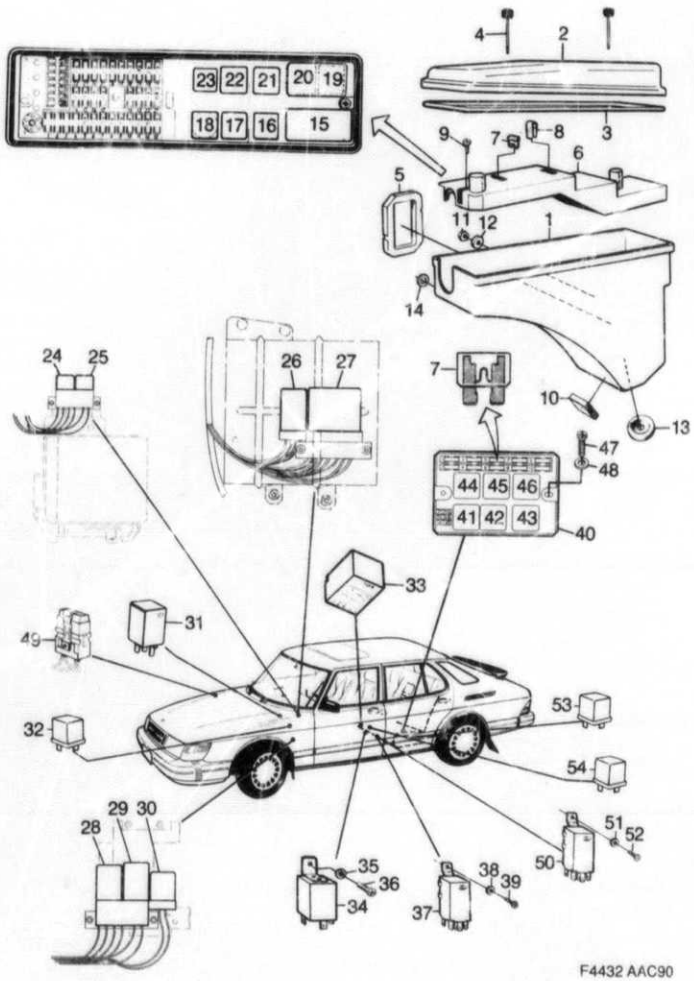

1200 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520 20	85 22 310		1991-, FE, AU, US, JP,CA	1	Relay cooling fan	Relä kylfläkt	3
0540 21	85 36 401		21), 1990, AC	1	Relay compressor cooling fan	Relä kompressor kylfläkt	3
0570 21	*95 13 219*		1990, AC NLS - USE 4179925	1	Relay compressor cooling fan	Relä kompressor kylfläkt	5
0600 21	85 36 401		21), 1991-, B202 TURBO, AC	1	Relay compressor cooling fan	Relä kompressor kylfläkt	3
0630 21	85 36 401		1991-, B212 I, AC	1	Relay compressor cooling fan	Relä kompressor kylfläkt	3
0660 21	*95 13 219*		1991-, 139), B202, AC NLS - USE 4179925	1	Relay compressor cooling fan	Relä kompressor kylfläkt	5
0682 21	41 79 925		140), B202, AC	1	Relay compressor cooling fan	Relä kompressor kylfläkt	5
0690 22	85 36 401		21), 1990, AC	1	Relay cooling fan	Relä kylfläkt	3
0710 22	85 72 190		1990, AC	1	Relay cooling fan	Relä kylfläkt	3
0730 22	85 36 401		21), 1991-, B202 TURBO, AC	1	Relay cooling fan	Relä kylfläkt	3
0750 22	85 36 401		1991-, B212 I, AC	1	Relay cooling fan	Relä kylfläkt	3
0770 22	85 72 190		1991-, B202, AC	1	Relay cooling fan	Relä kylfläkt	3
0790 23	85 22 310			1	Relay horn	Relä signalhorn	3
0810 24	85 36 401		RH, B202, B212	1	Relay fuel pump	Relä bränslepump	3
0830 25	85 36 401		RH, B202, B212 See page 2-071, 1-E24	1	Relay LH-system	Relä LH-system	3
0850 26	95 61 044		4), 1990, B201 TURBO, SE, EU	1	Relay full load levelleling	Relä fullastupprikning	4
0870 27	85 84 732		4,94), B201 I	1	Relay transient enrichment	Relä accelerationsupprikning	5
0890 27	40 69 282		4,95)-1990, B201 I	1	Relay transient enrichment	Relä accelerationsupprikning	5
0910 28	85 73 560		1990, LH, ME, FE	1	Buzzer coolant	Summer kylvätska	5
0930 28	85 83 627		1991-, LH	1	Flasher relay	Blinkrelä	2
0940 29	85 83 627		1990, LH	1	Flasher relay	Blinkrelä	2
0950 29	85 53 463		1991-, LH	1	Relay intermittent wiper	Relä intervalltorkare	6
0970 30	85 53 463		1990, LH	1	Relay intermittent wiper	Relä intervalltorkare	6
0990 30	85 73 560		1991-, LH, FE	1	Buzzer coolant	Summer kylvätska	5
1010 31	85 99 425		4), 1990, B201, I, M	1	Relay retardation	Relä retardation	5
1030 32	85 22 310		4,68), LH2.2 See page 2-165, 1-I22	1	Relay	Relä	3
1040							

4. With catalytic converter. Med katalytisk reaktor.
21. Cars with LUCAS injection system. För bilar med LUCAS insprutningssystem.
68. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
94. Ch --L7005234.
95. Ch L7005235-.
139. Ch --N2015562.
140. Ch N2015563-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F08

Electrical distribut.unit — Elcentral
Relays and fuses — Reläer och säkringar

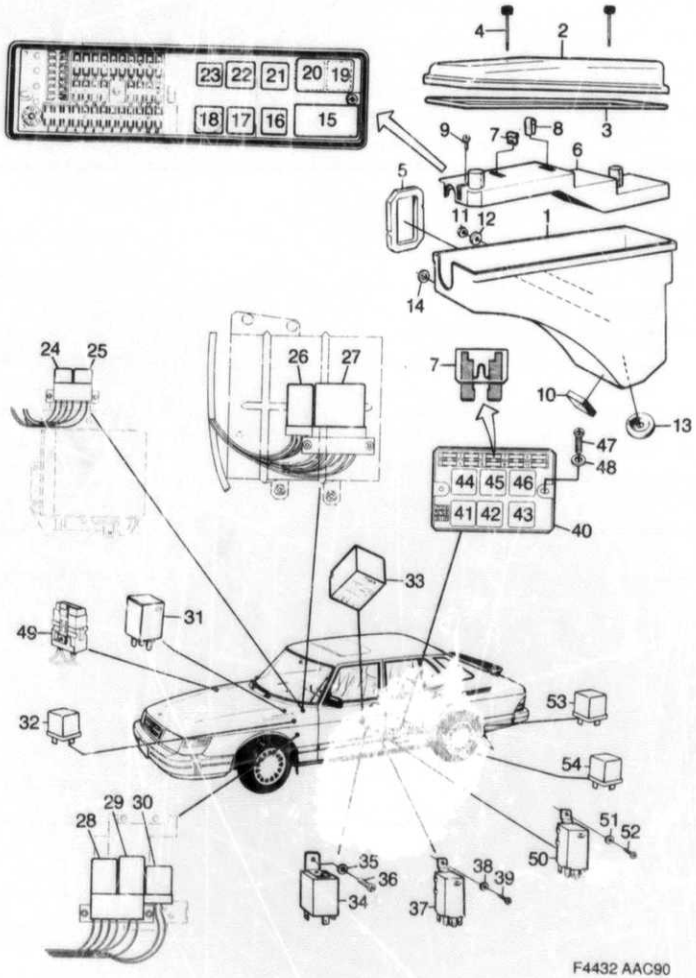

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1050	33	95 12 823		1990, EW	1	Relay	Relä	5
1060	34	85 89 319		76), 1990	1	Relay	Relä	
1070						interior illum.	innerbelysning	
1080	35	79 15 556		1990	1	Star washer	Taggbricka	5
1090	36	79 22 891		1990	1	Screw	Skruv	5
1100	37	95 67 017		US, CA, JP	1	Buzzer	Summer	5
1110						seat belt warning	bältesvarning	
1120	38	79 22 420		US, CA, JP	1	Screw	Skruv	5
1130	39	79 15 556		US, CA, JP	1	Star washer	Taggbricka	5
1140	40	41 11 460		1991-	1	Bracket	Hållare	4
1145	41	95 12 823		1990, EW, CV	1	Relay	Relä	5
1150	41	95 63 313		1991-	1	Buzzer	Summer	5
1160						seat belt warning	bältesvarning	
1170	42	95 15 099		76), 1990, CV	1	Relay	Relä	4
1172						interior illum.	innerbelysning	
1180	42	85 22 310		1991-	1	Relay	Relä	3
1190						rear window	bakruta	
1200	42	95 19 133		76), 1991-	1	Relay	Relä	4
1210						rear window	bakruta	
1230	43			1991-	1	Relay	Relä	
1240						extra	extra	
1250	43	95 96 560		CV	1	Relay	Relä	9
1260						folding top	sufflett	
1270	44			1991-	1	Relay	Relä	
1280						extra	extra	
1290	44	95 96 560		CV	1	Relay	Relä	9
1300						folding top	sufflett	
1305	45	95 63 313		1990, CV	1	Buzzer	Summer	5
1310	45	95 15 099		76), 1991-	1	Relay	Relä	4
1320						interior illum.	innerbelysning	
1330	46	95 56 390		1990, CV	1	Relay	Relä	9
1331						theft alarm	stöldlarm	
1340	46	95 22 061		1991-	1	Relay	Relä	5
1350						starter switch	tändningslås	
1380	47	79 22 891		1990, CV	2	Screw	Skruv	5
1382	47	79 73 159		1991-, CV	2	Screw	Skruv	5
1385	47	79 22 354		1991-	2	Screw	Skruv	5
1390	48	*79 68 506*		1990, CV NLS	2	Star washer	Taggbricka	5
1400	49	85 64 007		1990, CV	1	Fuse holder	Säkringshållare	4
1410						roof control	takmanövrering	
1420	49	95 98 467		1991-, CV	1	Fuse holder	Säkringshållare	4
1430						roof control	takmanövrering	
1440	50	41 13 163		1992-, P	1	Relay	Relä	3
1450						overheated catalytic conv	överhettad katalysator	
1460	51	79 22 891		1992-, JP	1	Screw	Skruv	5
1470	52	79 15 556		1992-, JP	1	Star washer	Taggbricka	5
1480	53	95 56 390		135), 1992-, CV	1	Relay	Relä	9
1490						starter inhibitor	startspärr	
1500	54	85 36 401		135), 1992-, CV	1	Relay	Relä	3
1510						flasher unit	blinkdon	

76. Timer relay. Tidrelä.
135. With anti theft system. Med stöldlarm.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F10

Instrument

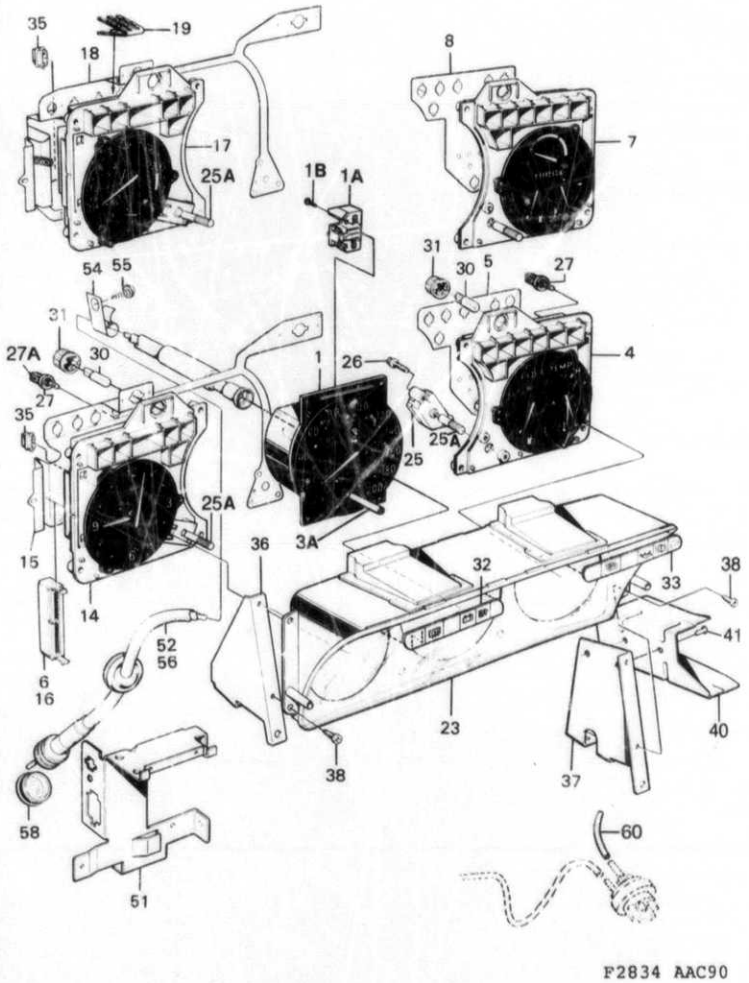

F2834 AAC90

1250	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 08 841		7), 200 KM/H, C, W=0,64	1	Speedometer	Hastighetsmätare	4
0020	1	41 08 858		7), -1991, 200 KM/H, I,	1	Speedometer	Hastighetsmätare	4
0030				W=0,65				
0040	1	40 83 903		7), 1992-, 200 KM/H,	1	Speedometer	Hastighetsmätare	4
0050				W=0,65				
0060								
0070	1	41 08 866		7), -1991, 240 KM/H,	1	Speedometer	Hastighetsmätare	4
0080				I, CA, AU, TURBO, W=0,65				
0090	1	40 83 911		7), 1992-, 240 KM/H,	1	Speedometer	Hastighetsmätare	4
0100				W=0,65				
0110	1	41 08 882		-1991,125 MPH, US,W=1,05	1	Speedometer	Hastighetsmätare	4
0120	1	40 83 937		1992-, 125 MPH, W=1,05	1	Speedometer	Hastighetsmätare	4
0130	1	41 11 084		1991-, 140 MPH, W=1,05,	1	Speedometer	Hastighetsmätare	4
0140				AERO (SPG), US				
0150	1	41 08 874		-1991,140 MPH, GB,W=1,04	1	Speedometer	Hastighetsmätare	4
0160	1	40 83 929		1992-, 140 MPH, W=1,04	1	Speedometer	Hastighetsmätare	4
0170	1A	41 08 270			1	.Sensor	.Givare	5
0180	1B	95 67 082			2	.Screw	.Skruv	5
0190	3A	85 50 774			1	.Button	.Knapp	3
0200								
0210	4	95 66 019		7), -1991, I, B202S	1	Combined instrument	Kombinationsinstrument	4
0220	4	40 83 966		7), 1992-, I, B202S	1	Combined instrument	Kombinationsinstrument	4
0230	4	40 61 297		20), -1991, I, US	1	Combined instrument	Kombinationsinstrument	4
0240	4	95 66 027		-1991, I, GB	1	Combined instrument	Kombinationsinstrument	4
0250	4	40 83 994		1992-, I, US, GB	1	Combined instrument	Kombinationsinstrument	4
0260	5	41 08 593		-1991	1	.Electric foil	.Elfolie	5
0270	5	41 08 940		20), -1991	1	.Electric foil	.Elfolie	5
0280	5	41 08 940		1992-	1	.Electric foil	.Elfolie	5
0290	6	85 52 382			1	.Casing	.Hus	4
0300	7	95 66 035		7), -1991, TURBO	1	Combined instrument	Kombinationsinstrument	4
0310	7	40 83 952		7), 1992-, TURBO	1	Combined instrument	Kombinationsinstrument	4
0320	7	40 61 305		20), -1991, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0330	7	95 66 043		-1991, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0340	7	40 83 960		TURBO, 1992-, US, GB	1	Combined instrument	Kombinationsinstrument	4
0350	8	41 08 593		-1991	1	.Electric foil	.Elfolie	5
0360	8	41 08 940		20), -1991	1	.Electric foil	.Elfolie	5
0370	8	41 08 940		1992-	1	.Electric foil	.Elfolie	5
0380	14	95 60 731		7)	1	Clock	Klocka	6
0390	15	95 60 772			1	.Electric foil	.Elfolie	5
0400	16	85 52 382			1	.Casing	.Hus	4
0410	17	95 66 092		7), -1991	1	Tachometer	Varvräknare	4
0420	17	40 83 887		7), 1992-	1	Tachometer	Varvräknare	4
0430	18	95 65 698			1	.Electric foil	.Elfolie	5
0440	19	85 58 298			1	.Clamp	.Klammer	5
0450	23	85 39 298			1	Casing	Hus	6
0460	25	85 81 472		-1991	1	Rheostat	Reostat	
0470	25	40 84 406		1992-	1	Rheostat	Reostat	3
0480	25A	85 52 275			2	Button	Knapp	3
0490	26	79 07 918			2	Screw	Skruv	5
0500	27	85 66 853			14	Bulb	Glödlampa	4
0510	27A	85 68 693		40/238 286 017	1	Bulb	Glödlampa	4
0520						charge regulator	laddningsregulator	
0530	30	88 53 772		NLS - USE 9505116	2	Bulb	Glödlampa	4
0540	31	95 29 231			2	Bulb socket	Lamphållare	4
0550	32	95 60 152		1990, LH, C	1	Symbol plate	Symboltavla	6
0560	32	95 60 509		-1991, LH, I, TURBO	1	Symbol plate	Symboltavla	6
0565	32	40 84 505		1992-, LH	1	Symbol plate	Symboltavla	6
0570	33	95 65 896		-1991, RH	1	Symbol plate	Symboltavla	6
0580	33	95 65 904		-1991, RH, CA, AU	1	Symbol plate	Symboltavla	6
0590	33	40 61 081		-1991, 20), RH, US	1	Symbol plate	Symboltavla	6
0610	33	40 84 521		1992-, RH	1	Disc	Skiva	6

7. Also available as exchange unit. Finns även som utbytesenhet.
20. AIR-BAG.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F12

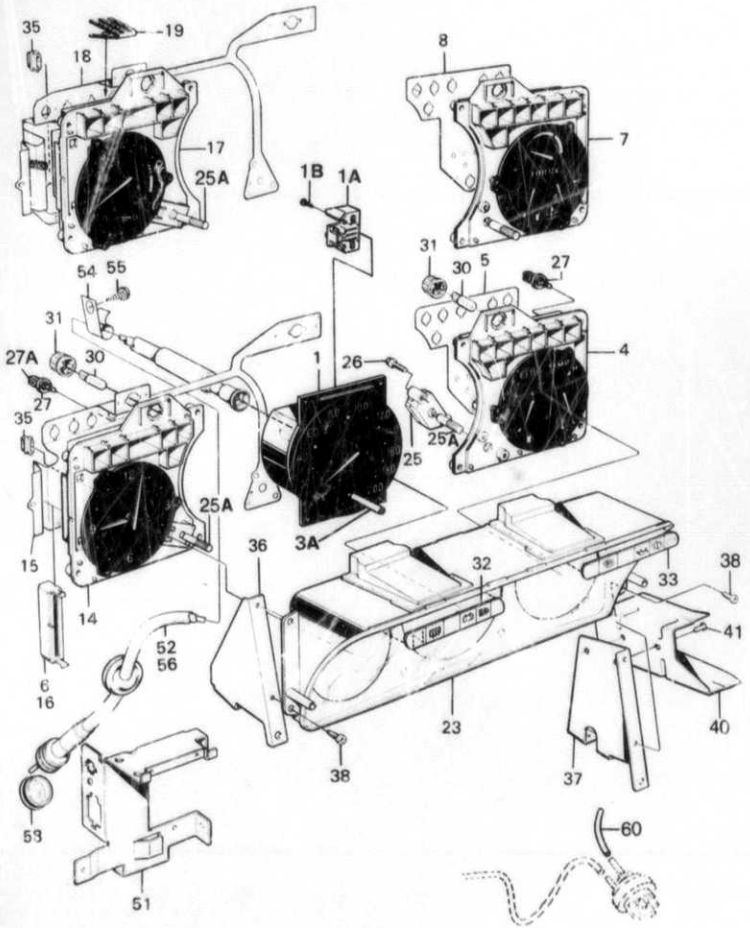

F2834 AAC90

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	33	40 84 513		1992-, RH, US	1	Disc	Skiva	6
0625	33	40 84 513		1993-, RH, CA	1	Disc	Skiva	6
0630	35	85 52 283			1	Clamp	Klammer	5
0640	36	85 50 519		LH	1	Bracket	Fäste	5
0650	36	85 79 625		LH, RHD	1	Bracket	Fäste	5
0660	37	85 79 617		RH	1	Bracket	Fäste	5
0670	37	41 09 542		RH, RHD	1	Bracket	Fäste	5
0680	38	79 22 347			4	Screw	Skruv	5
0690	40	91 25 238		LH, RHD	1	Guide moulding	Styrlist	5
0700	40	91 25 220		RH	1	Guide moulding	Styrlist	5
0710	41	82 39 733			2	Rivet	Nit	3
0720	51	*85 85 176*		NLS	1	Bracket	Konsol	6
0730	52	95 67 454			1	Speed wire	Mätarkabel	2
0740	54	41 08 668			1	Clip	Clips	6
0750	56	95 67 462		RHD	1	Speed wire	Mätarkabel	2
0760	58	82 41 325			1	Plug	Plugg	5
0770	60	85 33 374		TURBO	1	Hose	Slang	5
0780	60	85 33 440		TURBO RHD	1	Hose	Slang	3


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14


2-F14

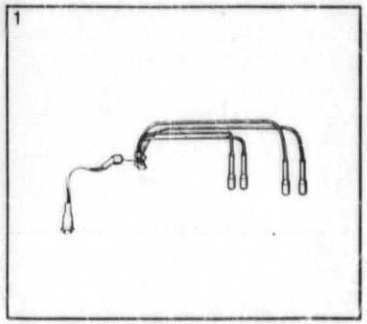


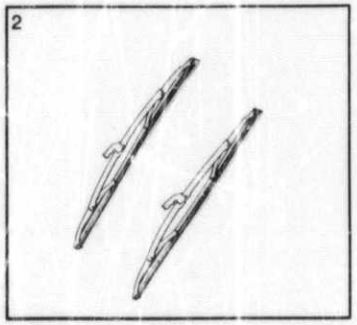



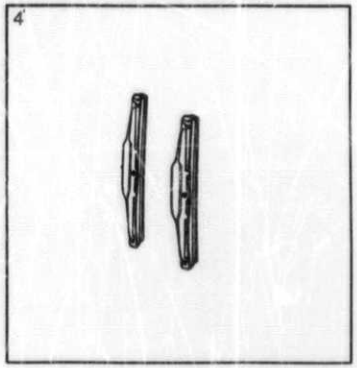

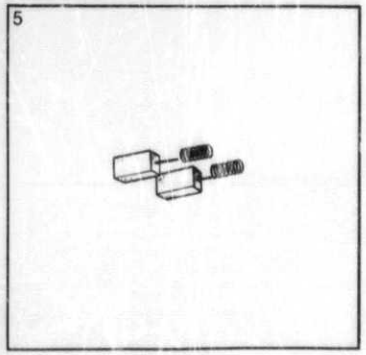

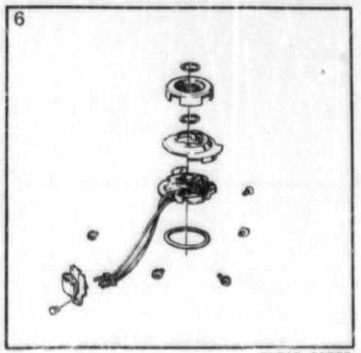

F1318 AAC90

1500	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	93 37 346		B201	X	Kit ignition cables	Tändkabelsats	
0020		75 11 157			1	.Ignition lead ignition coil	.Tändkabel tändspole	3
0025								
0030		*93 55 926*		NLS - USE 7561061	1	.Ignition lead cylinder 1	.Tändkabel cylinder 1	3
0031								
0040		*93 55 934*		NLS - USE 7561079	1	.Ignition lead cylinder 2	.Tändkabel cylinder 2	3
0041								
0050		*93 55 942*		NLS - USE 7561087	1	.Ignition lead cylinder 3	.Tändkabel cylinder 3	3
0051								
0060		*93 55 959*		NLS - USE 7561095	1	.Ignition lead cylinder 4	.Tändkabel cylinder 4	3
0061								
0070								
0080	1	88 17 314		B202, B212 I	X	Kit ignition cables	Tändkabelsats	3
0090		75 10 548			1	.Ignition lead ignition coil	.Tändkabel tändspole	3
0091								
0100		75 04 483			1	.Ignition lead cylinder 1	.Tändkabel cylinder 1	3
0101								
0110		75 04 491			1	.Ignition lead cylinder 2	.Tändkabel cylinder 2	3
0111								
0120		75 04 509			1	.Ignition lead cylinder 3	.Tändkabel cylinder 3	3
0121								
0130		75 04 517			1	.Ignition lead cylinder 4	.Tändkabel cylinder 4	3
0131								
0140								
0150	2	*85 47 499*		1990	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	1
0160				NLS - USE 8548216				
0170		85 57 480			2	.Wiper blade	.Torkarblad	1
0180								
0190	2	85 48 216		1991-	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	1
0200								
0210		41 72 888			2	.Wiper blade	.Torkarblad	1
0220		42 50 163			1	..Profile	..Profil	2
0230								
0240	2	85 47 747		11), 1990	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	6
0250								
0260		40 60 745			2	.Wiper blade	.Torkarblad	1
0270								
0280	2	85 48 224		11), 1991-	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	1
0290								
0300		41 72 896			2	.Wiper blade	.Torkarblad	1
0310		42 50 155			1	..Profile	..Profil	2
0320								
0330	3	85 46 319		1990	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0340								
0350		*85 53 844*		1) NLS - USE 4250163	2	.Profile	.Profil	2
0360								
0370	3	85 48 190		1991-	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0380								
0390		42 50 163		1)	2	.Profile	.Profil	2
0400								
0410	3	85 47 754		11), 1990	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0420								
0430		40 60 752		1)	2	.Profile	.Profil	2
0440								
0450	3	85 48 208		11), 1991-	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0460								
0470		42 50 155		1)	2	.Profile	.Profil	2
0480								
0490	3	85 47 655		CV	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0500								
0510		95 55 962		1)	2	.Profile	.Profil	2

1. Not as separate spare part. Ej som separat reservdel.
11. Synthetic rubber. Syntetiskt gummi.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F16

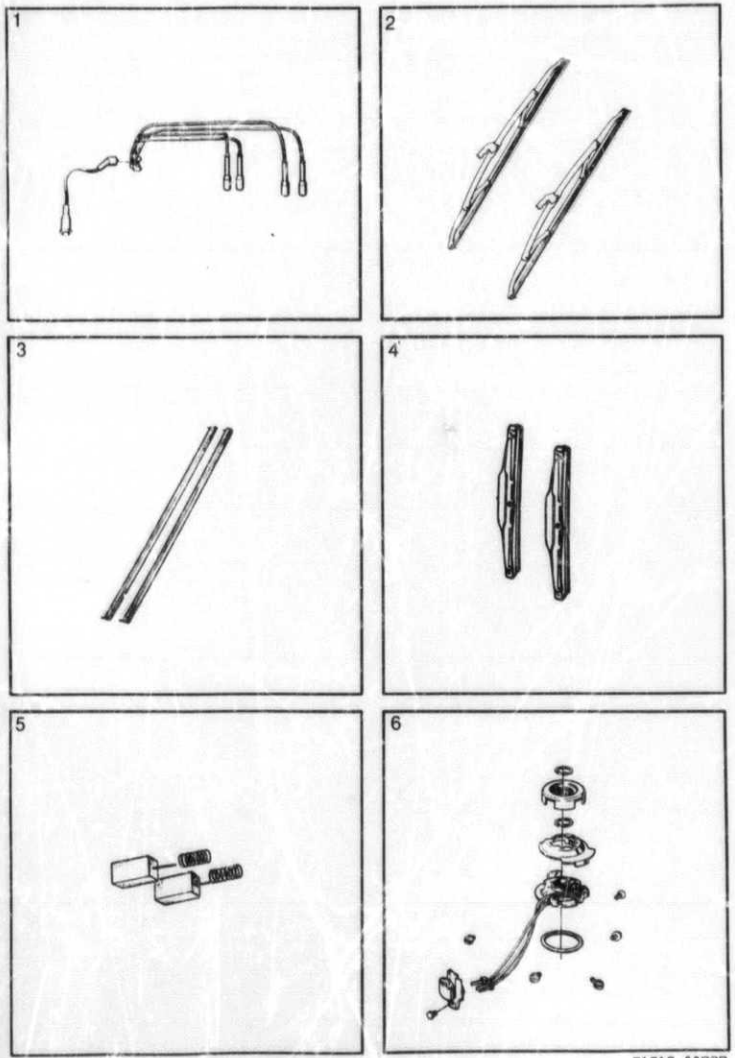

F1318 AAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1500								
0520								
0530	4	85 47 408			X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0540								
0550		91 20 882			2	. Wiper blade	. Torkarblad	2
0560								
0570	5	95 15 180			X	Brush set alternator	Borstsats generator	3
0580								
0590								
0600	6	74 86 822		123)	X	Repair kit ignition distributor	Reparationssats tändfördelare	5
0610								

123. For ignition distributor 74 85 774 and 74 85 766. För fördelare 74 85 774 och 74 85 766.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

2-F18

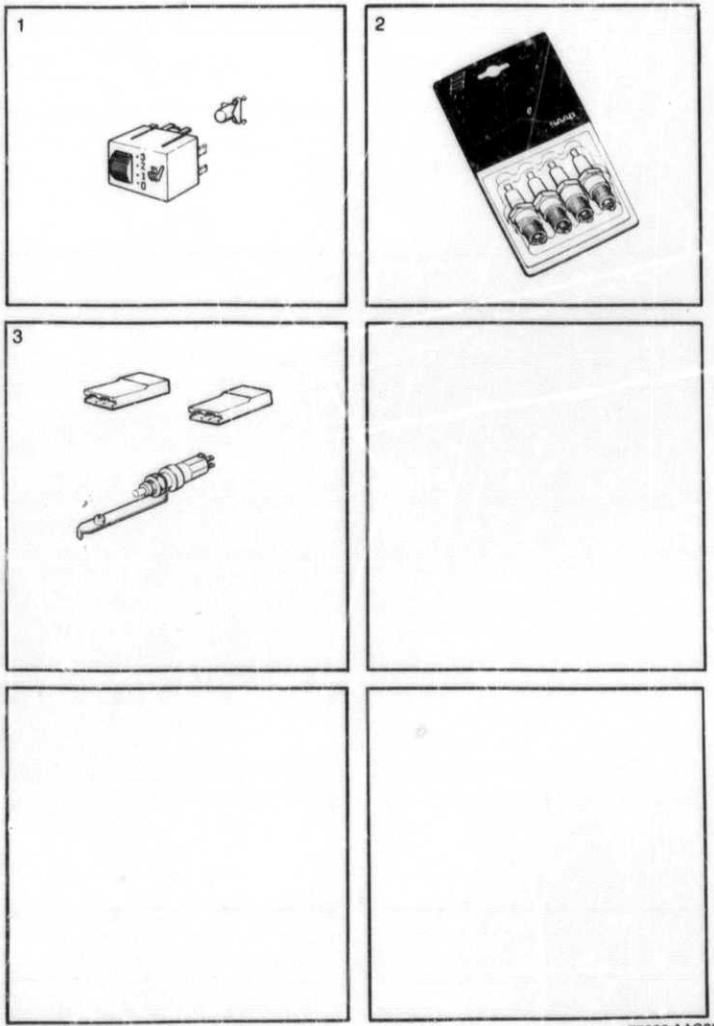

F5998 AAC90

1510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 84 554		70)	X	Switch button kit	Strömställarknapp sats	5
0020								
0030								
0040	2	88 19 278		B201, NGK BP6ES	X	Spark plug kit	Tändstiftsats	1
0050		83 50 076			4	. Spark plug	. Tändstift	1
0060								
0070	3	85 48 802			X	Brake light switch	Bromsljuskontakt	3
0080		85 16 916			2	. Insulation	. Isolering	4
0090		85 66 259			1	. Nut	. Mutter	5
0100		85 77 702			1	. Brake light switch	. Bromsljuskontakt	3
0110		86 78 070			1	. Assembly instruction	. Monteringsanvisning	9

70. Rheostat. Reostat.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A12
Ignition system	2-A14
Lighting	2-A24
Electrical equipment, other	2-B16
Wiring and fuses	2-C24
Complete sets	2-F14

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

2-G02

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140

TABLE OF CONTENTS

Connectors		
Connectors etc, 1990	3B : 5	2-G06
Connectors etc, 1991	3B : 33	2-H10
Connectors etc, 1992-	3B : 63	2-I16
Cable terminals		
Cable terminals, 1990	3B : 91	2-J20
Cable terminals, 1991	3B : 101	2-K06
Cable terminals, 1992-	3B : 111	2-K16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G03

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1990	3B : 5	2-G06
Kontakthus etc, 1991	3B : 33	2-H10
Kontakthus etc, 1992-	3B : 63	2-I16

Ledningsskor

Ledningsskor, 1990	3B : 91	2-J20
Ledningsskor, 1991	3B : 101	2-K06
Ledningsskor, 1992-	3B : 111	2-K16

2-G04

SUMARIO

Contactores

Contactores etc, 1990	3B : 5	2-G06
Contactores etc, 1991	3B : 33	2-H10
Contactores etc, 1992-	3B : 63	2-I16

Terminales de cable


Terminales de cable, 1990	3B : 91	2-J20
Terminales de cable, 1991	3B : 101	2-K06
Terminales de cable, 1992-	3B : 111	2-K16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

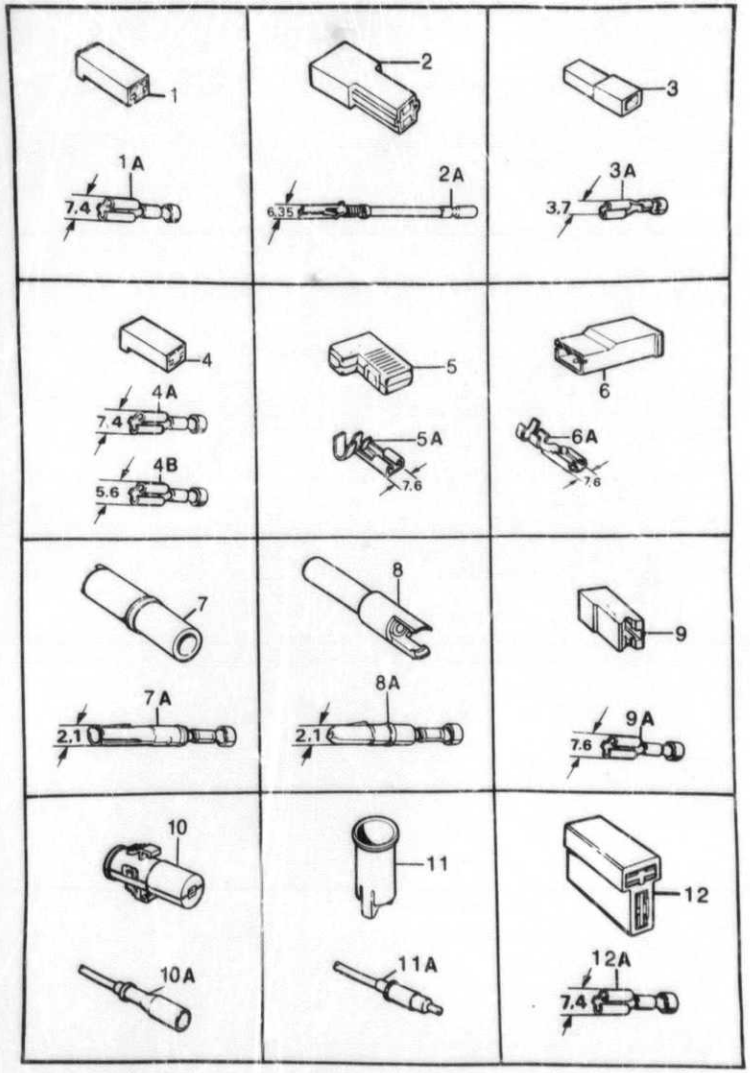

F1452 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 112		REAR DEMIST, FUSE BOX, EL-WINDOW REGULATOR, BELT-KEY WARNING, BRAKE BRAKE PEDAL SWITCH SPEED CONTROL, THERMO SWITCH, GROUND EL-MIRROR	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1A	85 22 534		AREA, 1,8-2,5 MM2	X	Cable terminal	Kabelsko	5
2	71 55 120		APC, FUSE BOX, EL-PAD, EL-HEATED MIRROR, BY-PASS A, JOINT PIECE CABLE NETWORK DOOR/REAR, CABLE NETWORK NUMBER-PLATE, BRAKE LIGHT, RELAY LIGHT, DIM LIGHT EL-CENTRAL, SPEED CONT-ROL,	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
2A	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5
3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4	85 33 184		LOUDSPEAKER, STARTER,	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
4A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4B	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 21 692		WINDOW REGULATOR, IDLE COMPENSATION, IGNITION COIL, THERMO SWITCH, IGNITION LOCK, IDLE COMPENSATION, SOLENOID VALVE IDLE COMPENSATION AC	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
6	85 41 229		JOINT PIECE, LUGGAGE COMPARTMENT LIGHT, TAIL LIGHT, ALTERNATOR, MAIN SWITCH, THROTTLE HOUSE VENTILATION, FUEL SHUT OFF, SWITCH LUGGAGE COMPARTMENT, BY-PASS A, LIGHT GLOVE BOX, MAIN SWITCH FAN, SWITCH AC, SPEED CONTROL, LIGHT ISTRUMENTS, SWITCH CORNERING LIGHT, SWITCH DIRECTION INDICATOR, LIGHT NUMBER PLATE,	X	Sleeve 1-pole, female	Isoleringshylsa 1-polig, hylsa	5
6A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
6A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
7	85 16 932		JOINT PIECE CABLE HARNESS REAR/ENGINE	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
7A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
8	85 16 940		GEAR BOX A, JOINT PIECE CABLE HARNESS ENGINE/ REAR	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
8A	85 22 591		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G08

Contact housing etc
1990

Kontakthus etc
1990

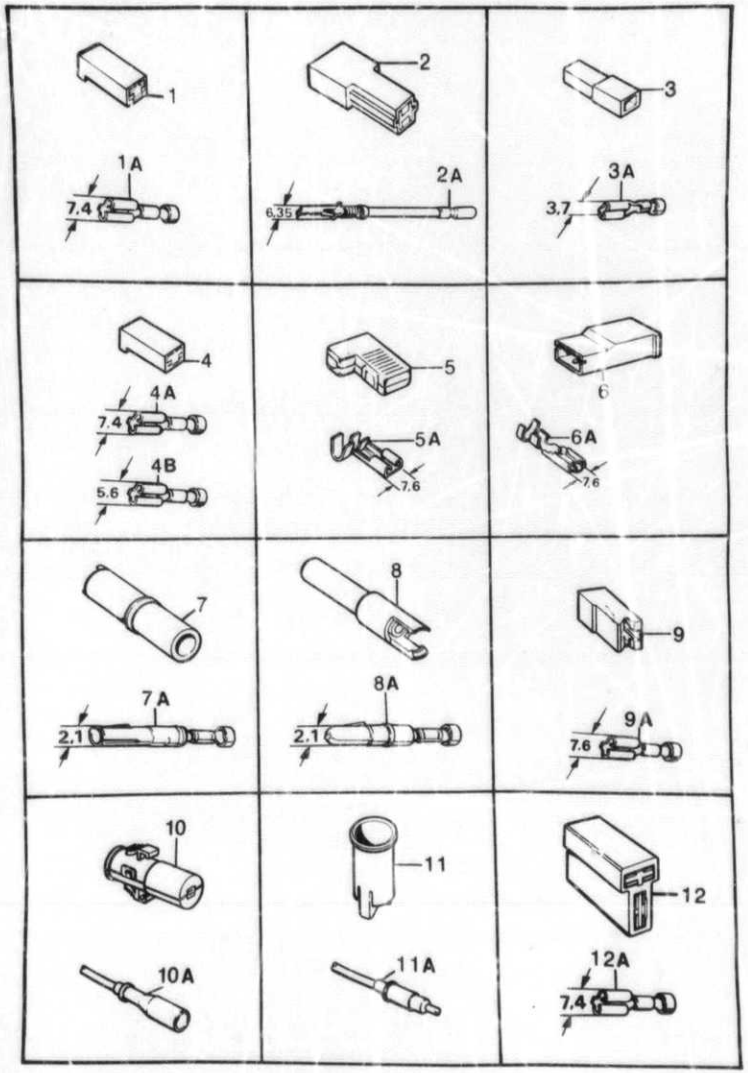

F1452 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
9	85 21 544		STARTER	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
9A	*85 59 205*		AREA, 4,0-6,0 MM2 NLS	X	Cable terminal	Kabelsko	5
10	95 03 418		AC COMPRESSOR, JOINT PIECE FUEL PUMP, JOINT PIECE CABLE HARNESS INSTRUMENTS/DOORS, JOINT CABLE HARNESS ENGINE/ FRONT	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
10A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
11	95 03 426		JOINT PIECE CABLE HARNESS FRONT/ENGINE, RELAY COMPRESSOR AC	X	Connector housing 1-pole, male	Skarvhus 1-polig, stift	4
11A	85 47 770		AREA 0,2-2,5	X	Connector	Skarvstycke	5
11A	85 47 788		AREA 2,0-4,0 MM2	X	Connector	Skarvstycke	5
12	71 55 096		TEST CONNECTOR LAMBDA, SWITCH BRAKE LIGHT, FAN	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
12A	85 22 534		AREA, 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
12A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G10

Contact housing etc
1990

Kontakthus etc
1990

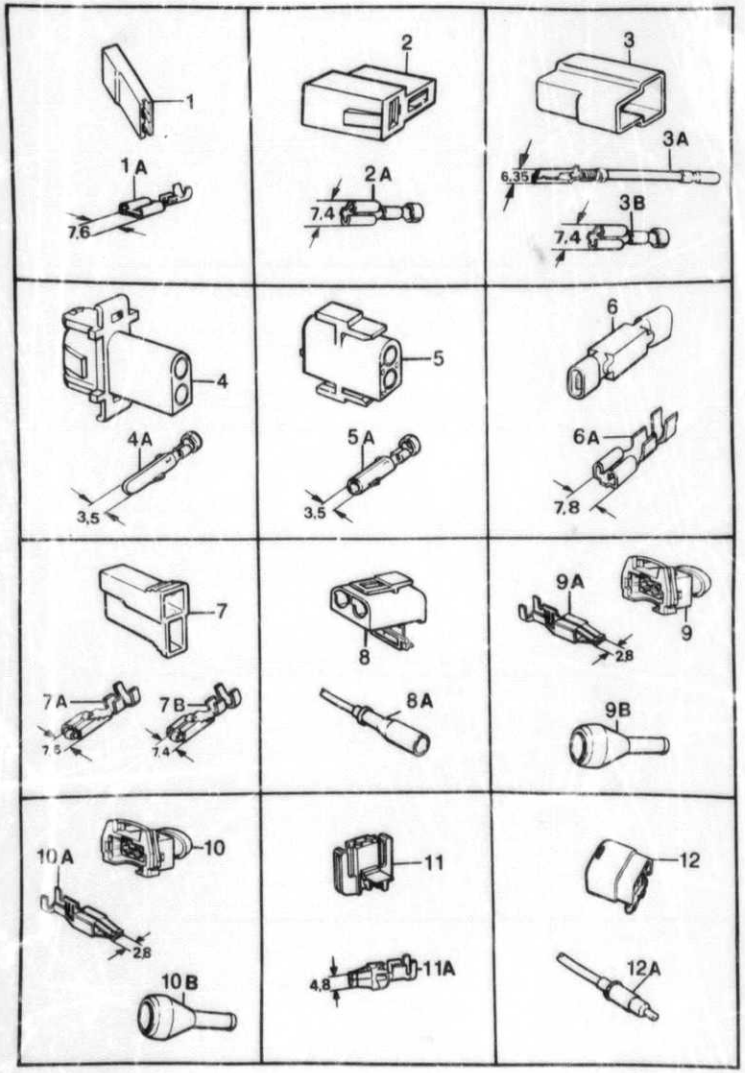

F1453 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 16 916		BRAKE LIGHT SWITCH, THERMO SWITCH, STARTER, VACUUM SWITCH, JOINT PIECE CABLE HARNESS REAR/BELT WARNING, FUSE, THEFT ALARM, JOINT PIECE REAR SEAT, IGNITION PULS, PRESSURE SWITCH AC, OIL GUARD, PRESSURE GUARD TURBO, PRESSURE GUARD, ANTI FREES THERMOSTAT, VALVE RECIRCULATION, SWITCH HAND BRAKE, LIGHT IGNITION LOCK, CHOKE CONTROL, LIGHT CIGARETTE LIGHTER, LIGHT CONTROLS, GEAR INDICATOR A, SWITCH IDLE COMPENSATOR, GROUD	X	Insulation 2-pole, male	Isolering 2-polig, stift	4
1A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1A	85 14 036		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
2	85 58 538		FUEL PUMP, FUSE BOX, JOINT PIECE CABLE HARNESS FRONT/ELCENTRAL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
2A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3	85 58 546		JOINT PIECE, FUSE BOX	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
3A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
3B	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
4	85 61 623		ELECTRIC PAD, NUMBER PLATE LIGHT, CENTRAL LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
4A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
4A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5	85 61 631		SWITCH SEAT CONTACT	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
5A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
6	85 30 966		DIOD HOLDER	X	Diode 2-pole, female	Diod 2-polig, hylsa	5
6A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
7	95 74 949		CIGARETTE LIGHTER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7B	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
8	95 03 319		VACUUM SWITCH APC, AC FAN MOTOR, WASHER MOTOR, SOLENOID VALVE AC, MOTOR COOLING FAN, BRAKE FLUID LEVEL, HORN, BY-PASS COLD START, SIDE DIRECT INDICATION, FOG LIGHT, VACUUM SWITCH, RESISTOR, JOINT PIECE CABLE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Eiectrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G12

Contact housing etc
1990

Kontakthus etc
1990

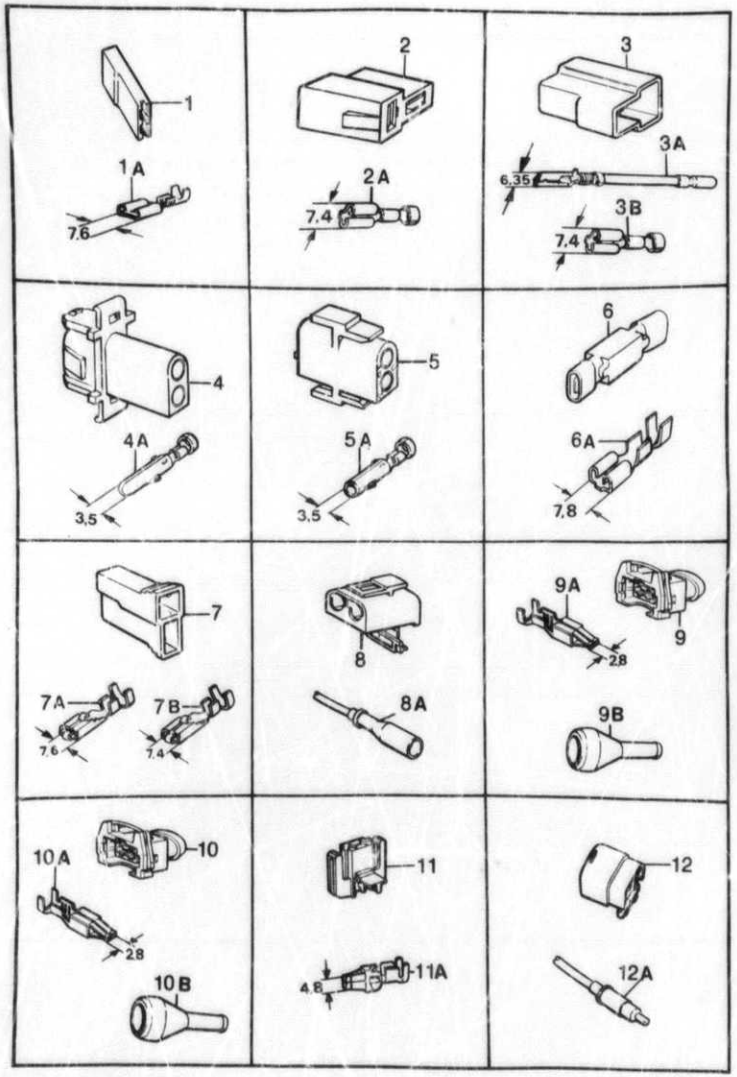

F1453 AAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0150								
0620				HARNESS REAR/DOORS FRONT JOINT PIECE CABLE HARNESS REAR/FUEL PUMP COOLING FAN AC, FOR CABLE HARNESS 95 98 376				
0630								
0640								
0650								
0660								
0670	8A	78 74 498			X	Connection	Skarv	5
0680	8A	85 47 804		AREA 2,5-4,0	X	Connector	Skarvstycke	5
0690								
0700	9	85 93 899		AUXILIARY AIR VALVE, THERMO TIME SWITCH, GIUDE PRESSURE VALVE, STARTER VALVE, INJECTION VALVE, TIMING VALVE, PREHEATED LAMBDA SOND, COLD STARTING VALVE, MAIN VALVE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0710								
0720								
0730								
0740								
0750								
0760								
0770								
0780	9A	91 20 957		AREA, 1,0,-2,5 MM2	X	Cable terminal	Kabelsko	5
0790	9B	85 21 619			X	Protection	Skydd	4
0800								
0810	10	85 93 915		MOTOR TEMP SENSOR, TANK VENTILATION, INTERIOR LIGHT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0820								
0830								
0840	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0850	10B	85 71 382			X	Protection	Skydd	4
0860								
0870	11	91 24 157		EL -ANTENNA, HIGH MOUNTED STOP LIGHT, EL-SUN ROOF	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0880								
0890	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0900								
0910	12	95 01 685		FUEL PUMP, LEVEL GUARD	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0920								
0930	12A	85 47 788		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0940	12A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G14 Contact housing etc 1990

Kontakthus etc 1990

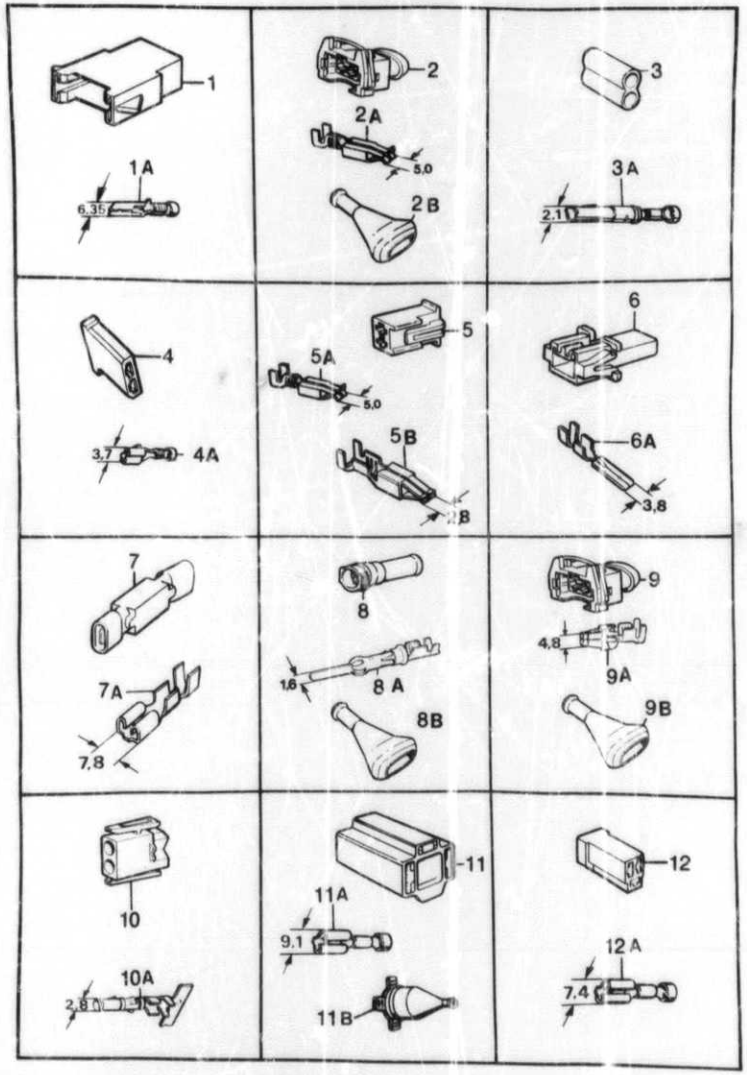

F1454 AAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 69 829		JOINT PIECE CABLE HARNESS REAR/BRAKE LIGHT	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0030	1A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0050	2	85 97 064		KNOCK SENSOR, TEMP SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0070	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0080	2B	85 71 382			X	Protection	Skydd	4
0100	3	85 53 869		SENSOR SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0120	3A	85 22 583		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0140	4	83 78 630		PEDALS SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0160	4A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0180	5	91 23 548		SPEED CONTROL, PARKING LIGHT INDICATOR, LIGHT ASH TRAY,STEERING WHEEL, JOINT PIECE CABLE HARNESS ENGINE/INSTRUMENTS, JOINT PIECE CABLE HARNESS REAR/ABS, JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, JOINT PIECE CABLE HARNESS REAR/NUMBERPLATE LIGHT, JOINT PIECE CABLE HARNESS REAR/TAIL LIGHT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0310	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0320	5B	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0340	6	95 18 713		SENSOR SPEED CONTROL US, JOINT PIECE CABLE HARNESS INSTRUMENTS/ENGINE, JOINT PIECE CABLE HARNESS REAR/TAIL LIGHTS, JOINT PIECE CABLE HARNESS REAR/ABS, JOINT PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR, JOINT PIECE CABLE HARNESS REAR/NUMBER PLATE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0450	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0470	7	85 74 881		COMPRESSOR AC, CABLE HARNESS AC/RELAY ENGINE	X	Diode 2-pole, female	Diod 2-polig, hylsa	5
0490	7A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
0510	8	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0530	8A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0540	8B	85 79 955			X	Protection	Skydd	4
0560	9	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0580	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0590	9B	85 79 955			X	Protection	Skydd	4
0610	10	95 25 809		STEERING WHEEL AIR-BAG	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0630	10A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	6-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G16

Contact housing etc 1990

Kontakthus etc 1990

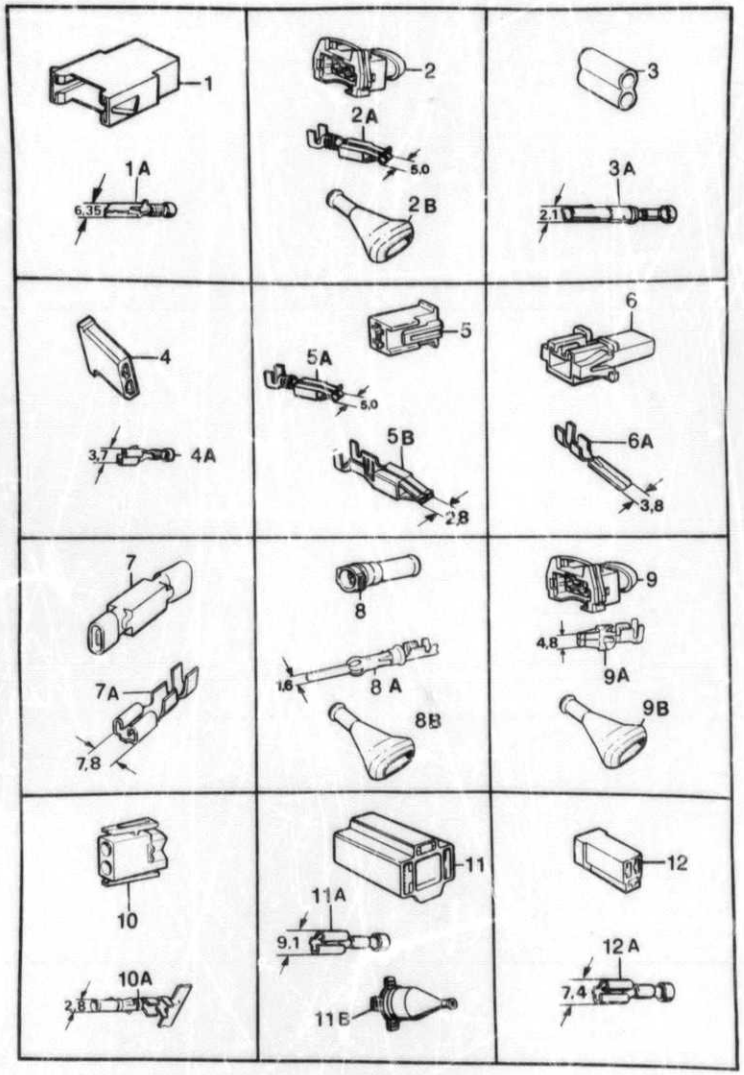

F1454 AAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640								
0650	11	71 55 021		HEADLIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	5
0660								
0670	11A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0680	11B	85 52 721			X	Cable protection	Kabelskydd	4
0690								
0700	12	73 42 892		LIMP HOME, JOINT PIECE	X	Connector housing 3-pole, female	Skarvhus 3-polig, hylsa	4
0710				CABLE NETWORK DOOR/REAR, TEST CONNECTOR ENGINE				
0720								
0730	12A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G18 Contact housing etc 1990

Kontakthus etc 1990

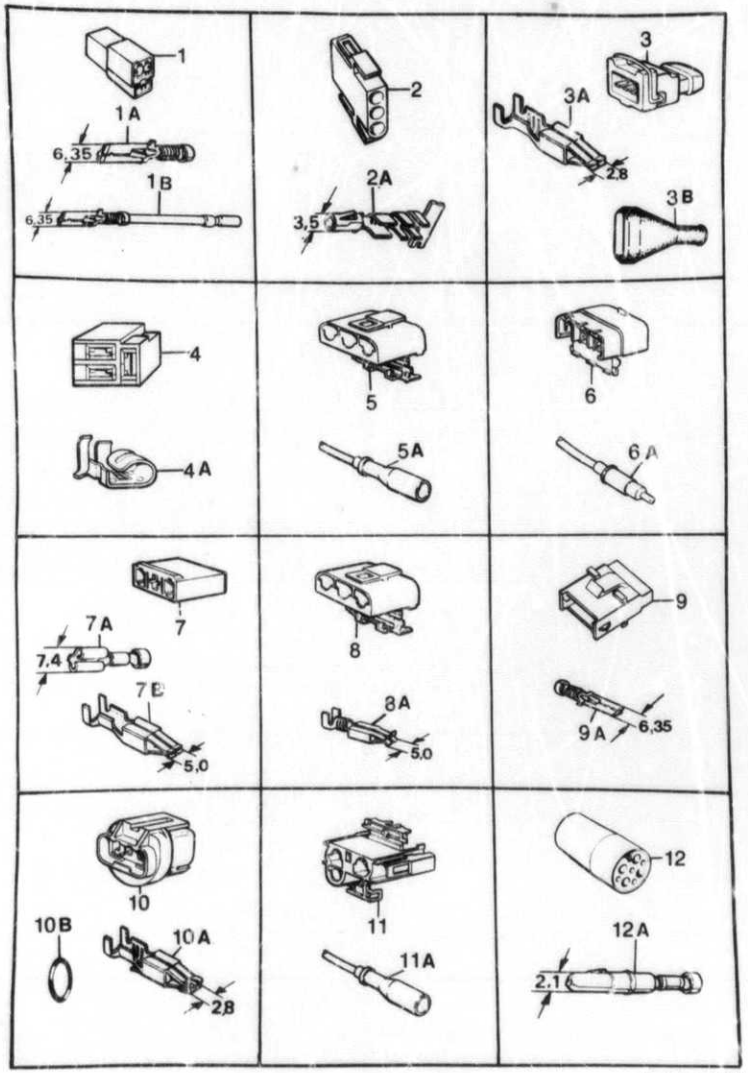

F1455 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	73 42 900		JOINT PIECE CABLE HARNESS REAR/REAR DOORS	X	Connector housing 3-pole, male	Skarvhus 3-polig, stift	4
1A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
1B	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5
2	85 64 916		EL-PAD	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
2A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
3	85 93 907		DISTRIBUTOR, SENSOR THROTTLE ANGEL	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3B	85 79 955			X	Protection	Skydd	4
4	85 82 116		FUEL TANK TRANSMITTER	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
4A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, CRANKSHAFT SENSOR, JOINT PIECE CABLE HARNESS ENGINE/FRONT, HEADLIGHT LEVELLING, JOINT PIECE CABLE HARNESS FRONT/ABS, JOINT PIECE CABLE HARNESS REAR/FRONT DOORS, JOINT PIECE CABLE HARNESS REAR/FUEL TANK TRANSMITTER, SENSOR AIR-BAG	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
5A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
6	95 03 327		JOINT PIECE CABLE HARNESS FRONT/ENGINE, JOINT PIECE CABLE HARNESS REAR/TANK SENSOR, CONTROL LAMP ABS	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
6A	85 47 770			X	Connector	Skarvstycke	5
7	95 07 658		INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
7B	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
8	91 24 165		JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, COMBINED INSTRUMENT, SENSOR SPEED CONTROL, JOINT PICE CABLE HARNESS REAR/SEAT, CODE FUEL MIXTURE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
8A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
9	95 03 012		EL-PAD	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
9A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
10	95 14 803		HEAD LIGHT US, JOINT PIECE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
10B	95 14 811			X	Protection	Skydd	4

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G20 Contact housing etc 1990

Kontakthus etc 1990

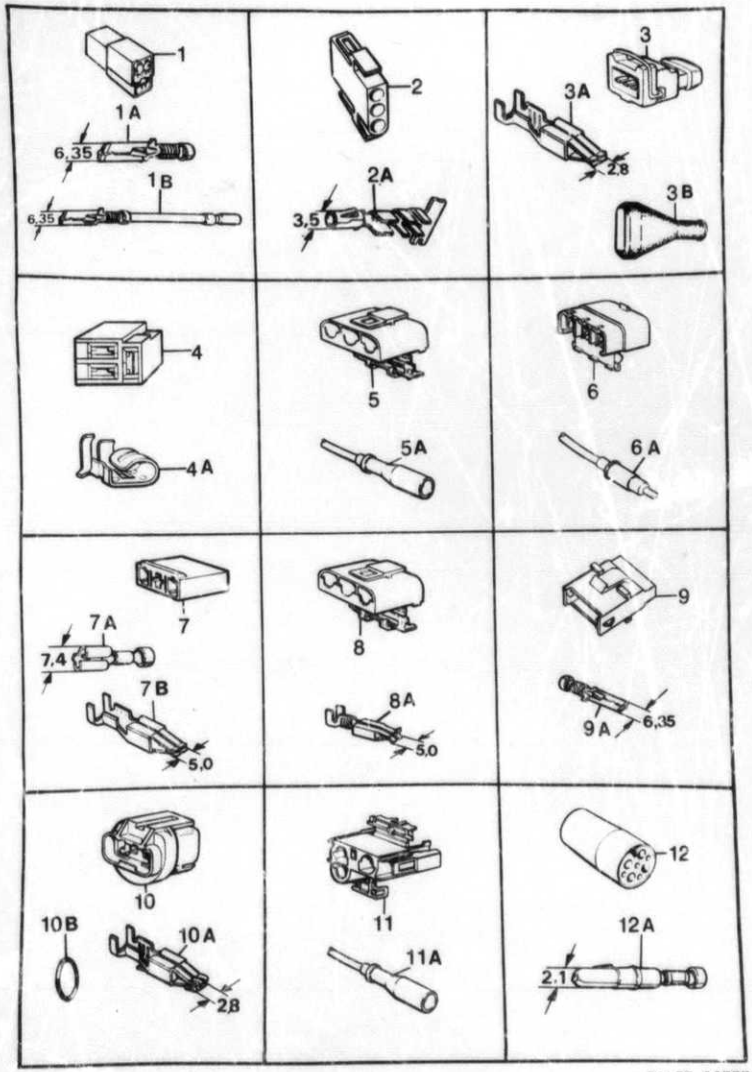

F1455 AAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0250								
0650	11	95 19 679		PARKING LIGHT, DIRECTION	X	Contact housing	Kontakthus	4
0660				LIGHT,SIDE BACK-UP LIGHT		3-pole, female	3-polig, hylsa	
0670	11A	78 74 498			X	Connection	Skarv	5
0680	11A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0690								
0700	12	85 30 081		CENTRAL LOCK, JOINT	X	Contact housing	Kontakthus	4
0710				PIECE CABLE NETWORK		4-pole, male	4-polig, stift	
0720				DOOR/REAR				
0730	12A	*85 03 161*		AREA, 0,5-1,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0730				USE 8522591				
0740	12A	85 16 817		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G22

Contact housing etc
1990

Kontakthus etc
1990

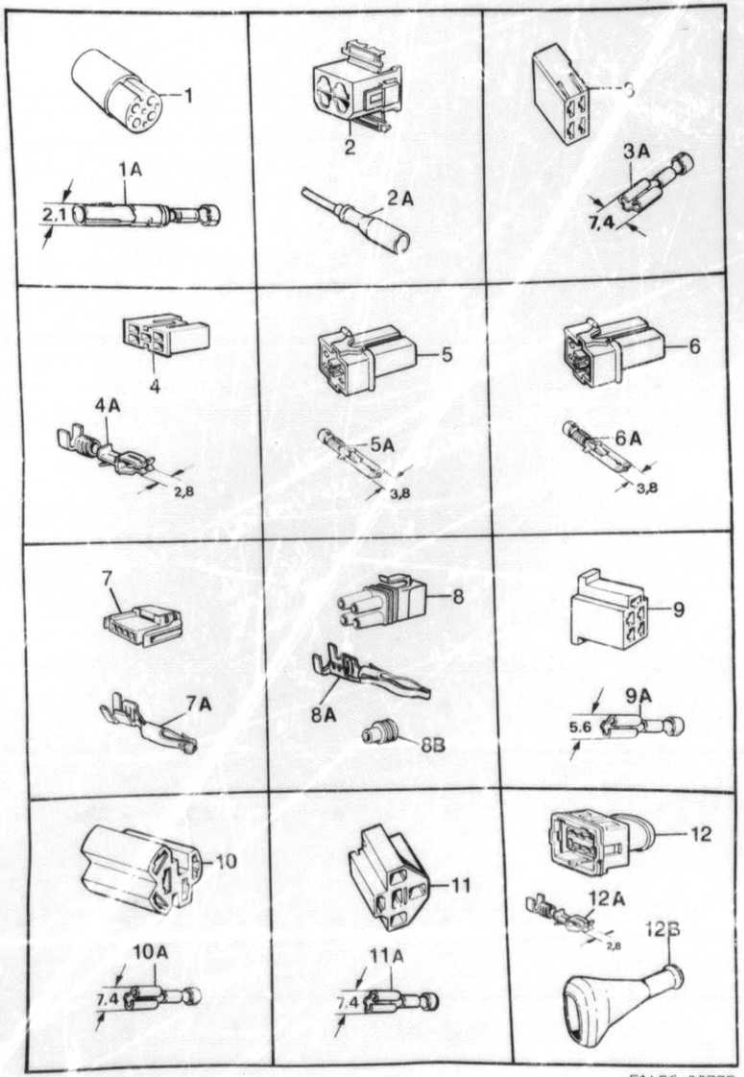

F1456 AAC90

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 30 099		ELECTRIC MIRROR, JOINT PIECE CABLE HARNESS REAR/REAR DOORS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0040	1A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0110	2	95 03 434		JOINT PIECE CABLE HARNESS INSTRUMENTS/DOORS FRONT, FUEL PUMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0130	2A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0150	3	85 21 536		TEST CONNECTION EZK	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0170	3A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190	4	91 23 555		IGNITION PULS/CHECK ENGINE, CONTROL SPEED CONTROL, JOINT PIECE CABLE HARNESS ENGINE/ INSTRUMENTS, JOINT PIECE CABLE HARNESS SENSOR/ AIR-BAG	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0220	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0230	4A	40 63 087		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0240	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0260	5	95 18 739		JOINT PIECE CABLE HARNESS ENGINE/INSTRUMENT, JOINT PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR, JOINT PIECE CABLE HARNESS AIR-BAG/SENSOR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0320	5A	95 29 074		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0330	5A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0350	6	40 61 495		JOINT PIECE CABLE HARNESS AIR-BAG/SENSOR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0370	6A	95 29 074		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0380	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	7	40 61 503		JOINT PIECE CABLE HARNESS AIR-BAG/SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0420	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	7A	40 63 087		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450	8	95 64 584		AUXILIARY AIR VALVE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0470	8A	95 64 600		AREA, 0,5-0,8 MM2	X	Cable terminal	Kabelsko	5
0480	8B	95 64 592			X	Seal	Tätning	5
0500	9	85 16 890		WINDSHIELD WIPER MOTOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0520	9A	85 22 567		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0540	10	85 44 397		SWITCH HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0560	10A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	10A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-G24 Contact housing etc 1990

Kontakthus etc 1990

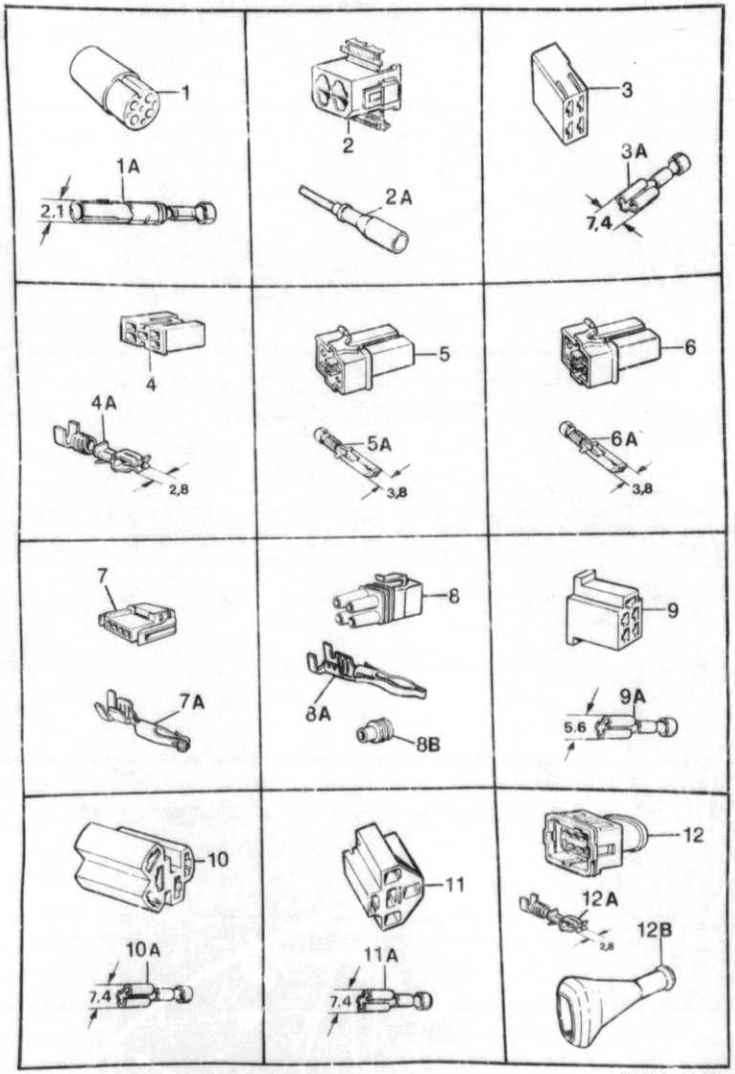

F1456 AAC90


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämnin	S L
0590	11	85 33 697		RESISTOR HEATING FAN,	X	Contact housing	Kontakthus	4
0600				SPEED CONTROL, TIME		5-pole, female	5-polig, hylsa	
0610				RELAY INTERIOR LIGHT,				
0620				RELAY WINDOW REGULATOR,				
0630				RELAY FLASHER, IGNITION				
0640				LOCK, RELAY CONVERTIBLE,				
0650				TIME RELAY INTERIOR				
0660				LIGHT DELAY, ONE TOUCH				
0670	11A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0680	11A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0690								
0700	12	95 19 455		LEVEL ABS	X	Contact housing	Kontakthus	4
0710						5-pole, female	5-polig, hylsa	
0720	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0730	12B	95 19 430			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

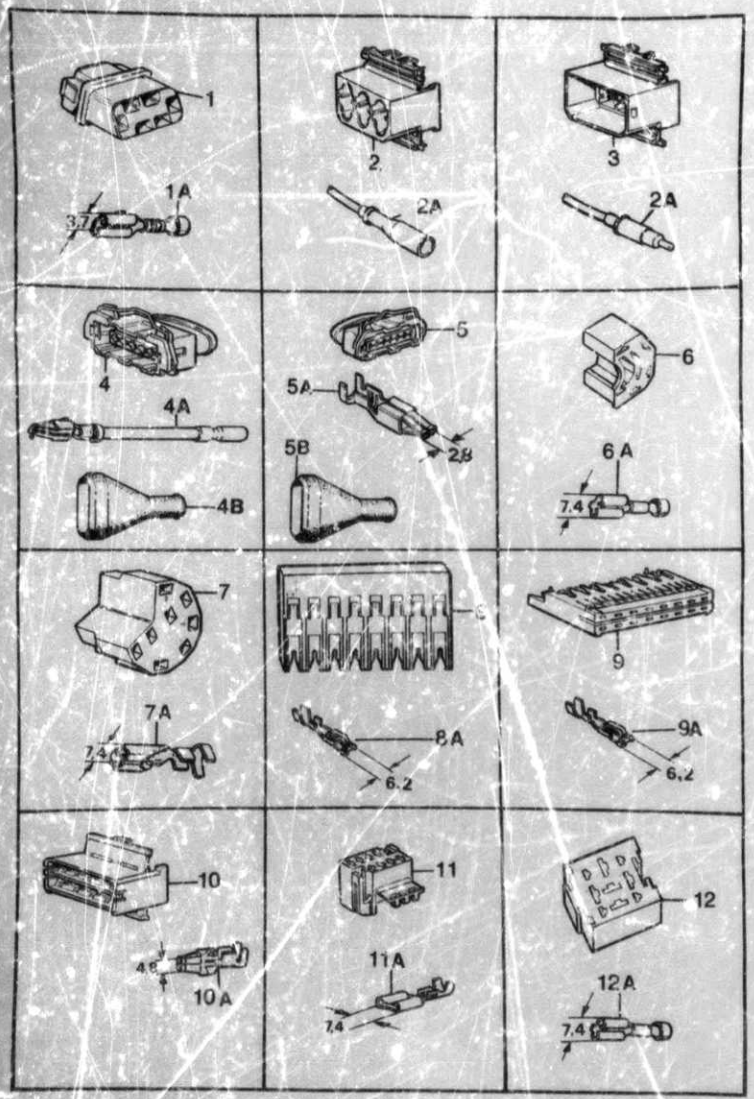

F3059 AAC90

Wiring and fuses

2 -H02 Contact housing etc 1990

Ledningar och säkringar

Kontakthus etc 1990

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 40 569		SWITCH ELECTRIC MIRROR	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
1A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
2	95 03 475		LH 2.4,JOINT PIECE CABLE NETWORK ENGINE/FRONT	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
2A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
3	95 06 668		JOINT PIECE CABLE NETWORK MOTOR/FRONT	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
3A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5
4	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
4A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
4B	85 82 082			X	Protection	Skydd	4
5	85 93 949		ELECTRONIC UNIT IGNITION SYSTEM, POWER STAGE, VALVE	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5B	85 74 048			X	Protection	Skydd	4
6	85 33 705		SWITCH WINDSHIELD WIPER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
6A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6A	79 69 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
7	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
8	85 68 735		SW, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
8A	85 68 768			X	Cable terminal	Kabelsko	5
9	85 68 842		FOR 8568735, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
9A	85 68 768		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
10	85 33 655		ELECTRONIC UNIT SPEED CONTROL	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
10A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
11	91 24 090		CONTROL UNIT THEFT ALARM SWITCH WINDOW REGULATOR, EL-SUN ROOF, EL-WINDOW ON/OFF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
11A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
11A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
12	85 71 390		JOINT PIECE COWL, RELAY BELT/KEY WARNING	X	Bracket 9-pole, female	Hållare 9-polig, hylsa	4
12A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	5-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H04

Contact housing etc
1990

Kontakthus etc
1990

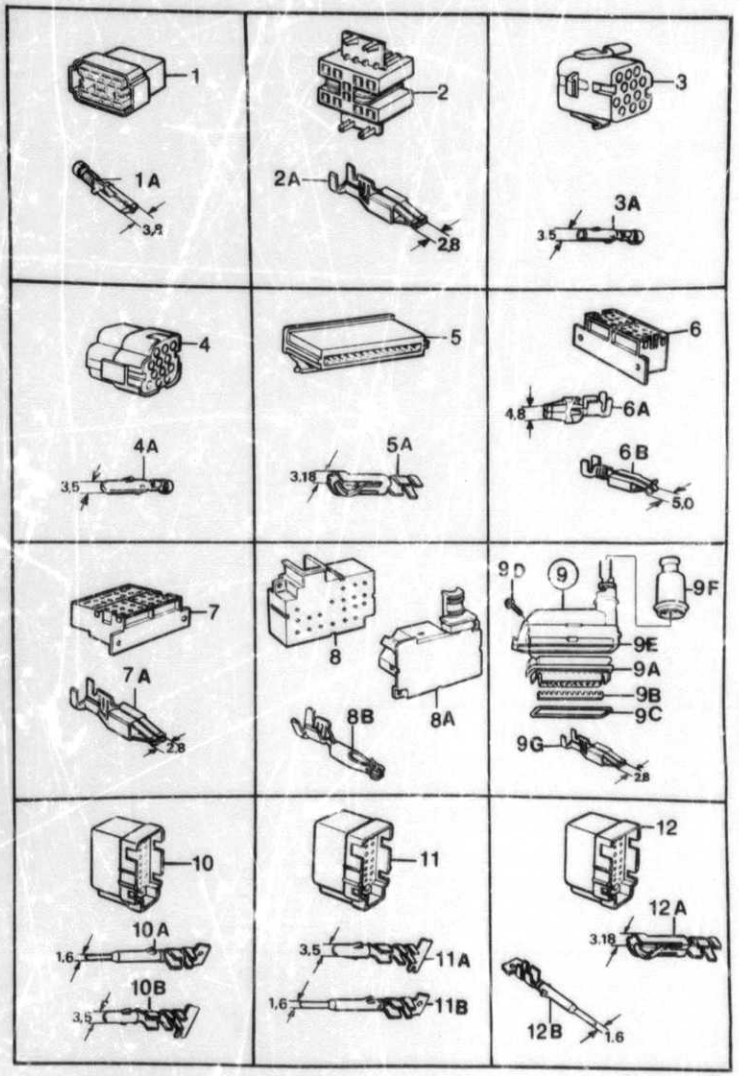

F1458 AAC90

0400	Pos	Part No Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 22 557		RADIO, TEST MOTOR ELECTRONIC, JOINT PIECE CABLE HARNESS REAR/INSTRUMENTS, JOINT PIECE CABLE HARNESS AIR-BAG/INSTRUMENTS	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0070	1A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0090	2	91 23 399		RADIO, EL-PAD DRIVER, SWITCH REAR DEMIST, SWITCH FOG LIGHT, SWITCH RECIRCULATION, SWITCH AC, SWITCH FLASHER, REOSTAT EL-PAD DRIVER, SWITCH FOG LIGHT FRONT EXTRA, JOINT PIECE CABLE HARNESS REAR/INSTRUMENT, JOINT PIECE CABLE HARNESS INSTRUMENT/AIR-BAG, SWITCH HEADLIGHT LEVELLING, TEST CONNECTOR AIR-BAG	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0230	2A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0240	2A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0260	3	85 53 497		COWL	X	Connector housing 12-pole, female	Skarvhus 12-polig, hylsa	4
0280	3A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0290	3A	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0310	4	85 53 505		JOINT PIECE CABLE HARNESS REAR/INSTRUMENTS	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0330	4A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	5	85 44 348		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0370	5A	85 60 278		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0390	6	91 24 199		MAIN RELAY, RELAY FUEL PUMP, TIME RELAY, COWL, RELAY INSTRUMENT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0420	6A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	6B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0450	7	91 25 643		ABS, RELAY MAIN/ENGINE	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0470	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0480	7A	91 20 791		AREA, 2,0-4,5 MM2	X	Cable terminal	Kabelsko	5
0500	8	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0520	8A	95 27 763			X	Contact housing	Kontakthus	4
0530	8B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0550	9	85 86 802		APC, EZK	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0570	9A	85 87 420			1	.Contact housing	.Kontakthus	4
0580	9B	85 87 438		1)	1	.Striker plate	.Låsbleck	5
0590	9C	85 87 453		1)	1	.Seal	.Tätning	5
0600	9D	85 87 487		1)	1	.Screw	.Skruv	5
0610	9E	85 87 503		1)	1	.Cover	.Kåpa	4

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H06

Contact housing etc
1990

Kontakthus etc
1990

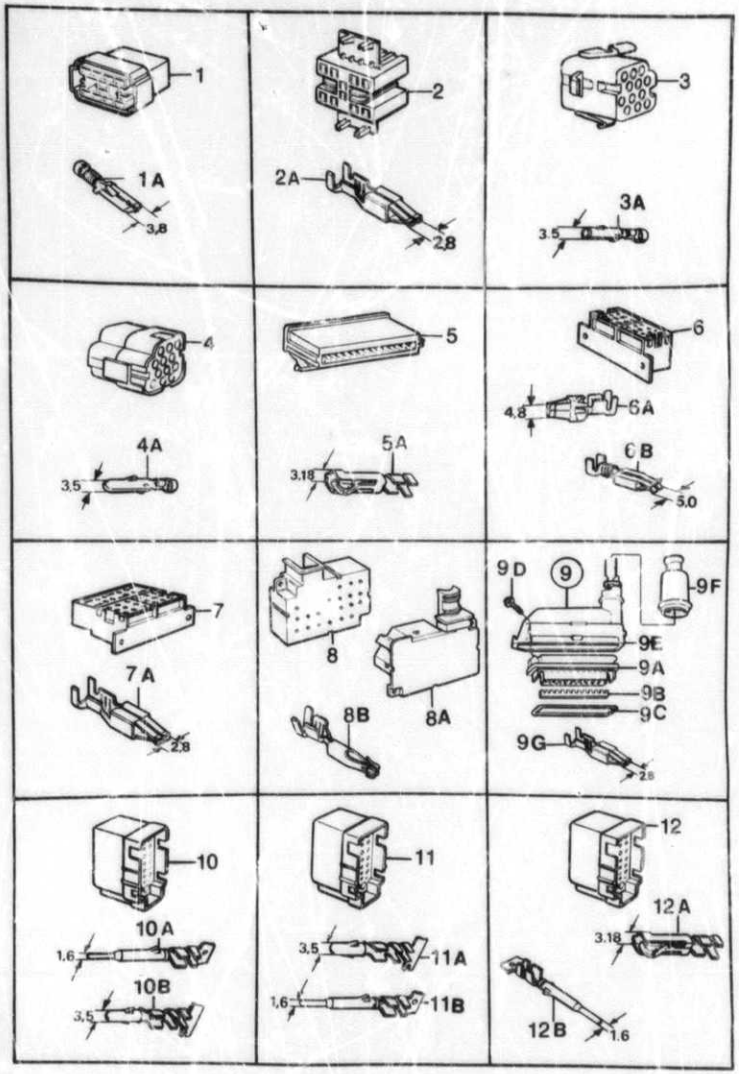

F1458 AAC90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	9F	85 87 511		1)	1	Rubber protection	Gummiskydd	4
0630	9G	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0640								
0650	10	85 44 215		WHITE, COWL, JOINT PIECE CABLE HARNESS REAR/EL-DISTRIBUT. UNIT	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0670								
0680	10A	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0690	10A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0700	10B	85 44 322		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0710								
0720	11	85 44 231		RED, COWL, JOINT PIECE CABLE HARNESS EL-DISTRIBUTION UNIT/INSTRUMENTS	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0740								
0750	11A	85 44 322		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0760	11B	85 93 956		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0770	11B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0780								
0790	12	85 44 256		BLACK, COWL, JOINT PIECE CABLE HARNESS INSTRUMENTS/FRONT	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0800								
0810								
0820	12A	85 93 956		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0830	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0840	12B	85 82 603		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H08 Contact housing etc 1990

Kontakthus etc 1990

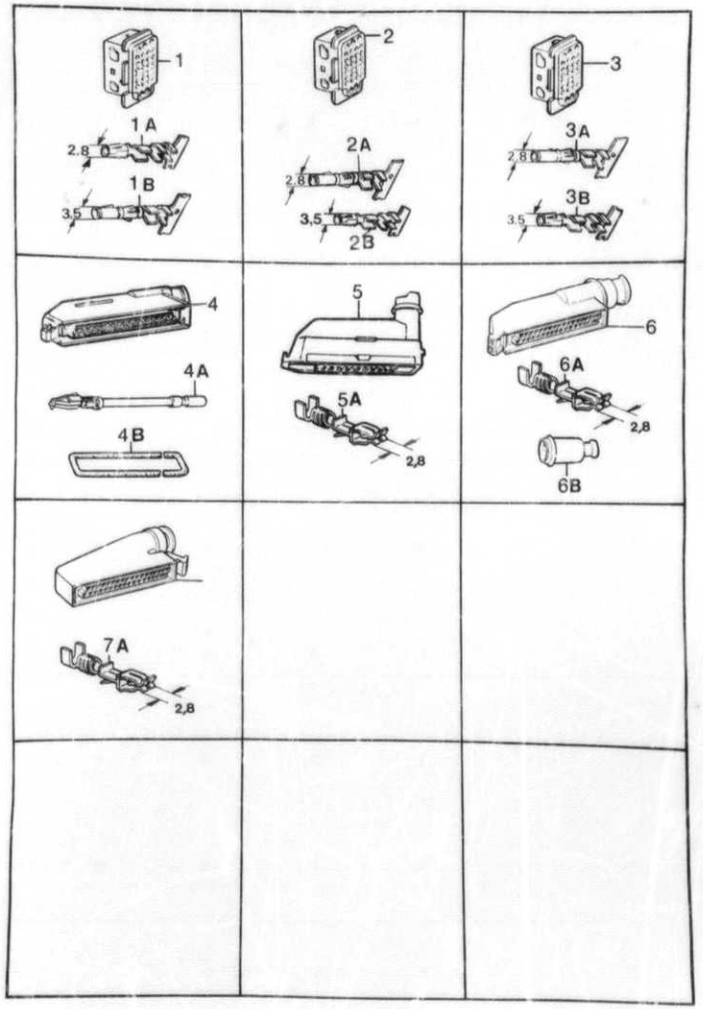

F1459 AAC98

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 249		JOINT PIECE CABLE HAR-	X	Contact housing	Kontakthus	4
0020				NESS FRONT/INSTRUMENTS		29-pole, female	29-polig, hylsa	
0030	1A	*85 21 726*		AREA, 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0030				USE 8567075				
0040	1B	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	85 44 207		JOINT PIECE CABLE HAR-	X	Contact housing	Kontakthus	4
0070				NESS EL-DISTRIBUT. UNIT/		29-pole, female	29-polig, hylsa	
0080				REAR				
0090	2A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0100	2B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0110	2C	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	3	85 44 223		JOINT PIECE CABLE HAR-	X	Contact housing	Kontakthus	4
0140				NESS REAR/EL-DISTR. UNIT		29-pole, female	29-polig, hylsa	
0150	3A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0160	3B	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0170	3B	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0180								
0190	4	85 39 363		ELECTRONIC UNIT LAMBDA	X	Contact housing	Kontakthus	4
0200						35-pole, female	35-polig, hylsa	
0210	4A	85 22 617		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0220	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0230	4B	95 64 204			X	Seal	Tätning	5
0240								
0250	5	95 61 093		ELECTRONIC UNIT LH	X	Contact housing	Kontakthus	4
0260						35-pole, female	35-polig, hylsa	
0270	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0280								
0290	6	40 68 441		ELECTRONIC UNIT ABS	X	Contact housing	Kontakthus	4
0300						35-pole, female	35-polig, hylsa	
0310	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0320	6B	85 87 511			X	Rubber protection	Gummiskydd	4
0330								
0340	7	95 64 618		ELECTRONIC UNIT LUCAS	X	Contact housing	Kontakthus	4
0350				IGNITION SYSTEM		40-pole, female	40-polig, hylsa	
0360	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H10

Contact housing etc
1991

Kontakthus etc
1991

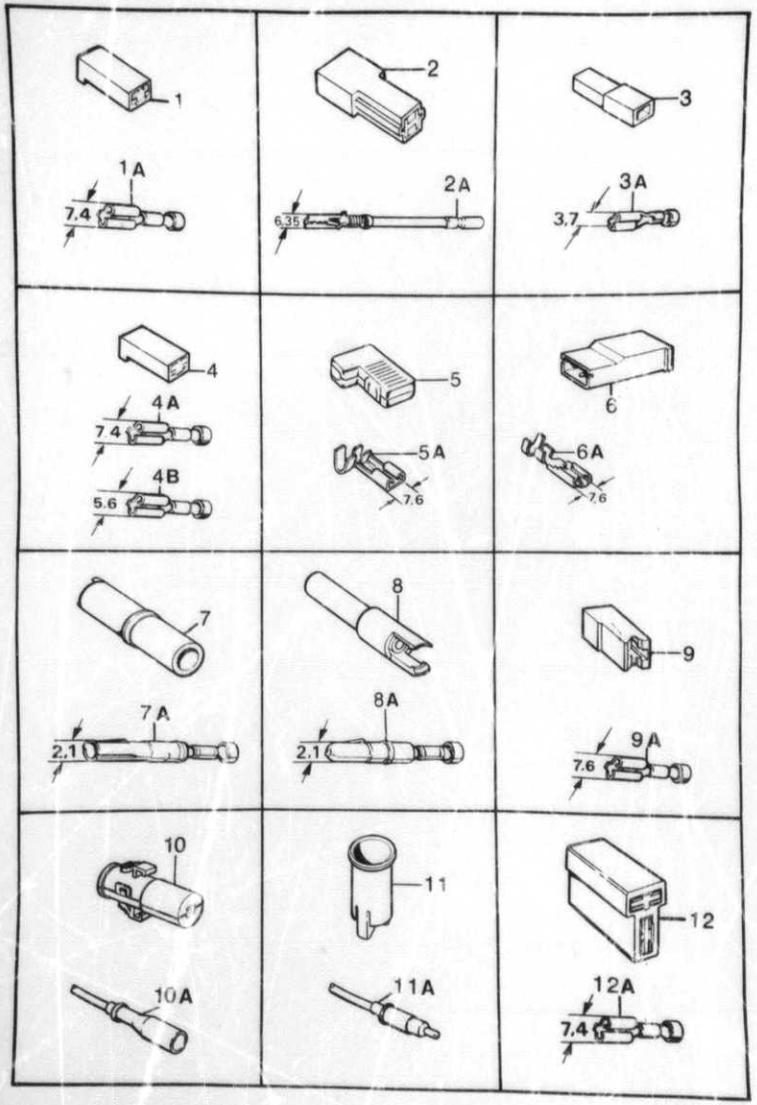

F3060 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 112		REAR DEMIST, FUSE BOX, EL-WINDOW REGULATOR, BRAKE PEDAL SWITCH SPEED CONTROL, THERMO SWITCH, TEST SOCKET ENGINE	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1A	85 22 534		AREA, 1,8-2,5 MM2	X	Cable terminal	Kabelsko	5
2	71 55 120		APC, FUSE BOX, EL-PAD, EL-HEATED MIRROR, BY-PASS A, JOINT PIECE CABLE NETWORK DOOR/REAR, CABLE NETWORK NUMBER-PLATE, BRAKE LIGHT, RELAY LIGHT, DIM LIGHT EL-CENTRAL, SPEED CONTROL,	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
2A	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5
3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4	85 33 184		LOUDSPEAKER, STARTER, INTERIOR LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
4A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4B	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 21 692		WINDOW REGULATOR, IDLE COMPENSATION, IGNITION COIL, THERMO SWITCH, IGNITION LOCK, IDLE COMPENSATION, SOLENOID VALVE IDLE COMPENSATION AC	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
6	85 41 229		JOINT PIECE, LUGGAGE COMPARTMENT LIGHT, TAIL LIGHT, ALTERNATOR, MAIN SWITCH, THROTTLE HOUSE VENTILATION, SWITCH LUGGAGE COMPARTMENT, COMPARTMENT, LIGHT GLOVE BOX, MAIN SWITCH FAN, SWITCH AC, REAR DEMIST, LIGHT ISTRUMENTS, SWITCH DIRECTION INDICATOR, LIGHT NUMBER PLATE, LIGHT CIGAPETTE LIGHTER, REAR FOG LIGHT, LIGHT ASH TRAY	X	Sleeve 1-pole, female	Isoleringshylsa 1-polig, hylsa	5
6A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
6A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
7	85 16 932		JOINT PIECE CABLE HARNESS REAR/ENGINE	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
7A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
8	85 16 940		GEAR BOX A, JOINT PIECE CABLE HARNESS ENGINE/ REAR	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
8A	85 22 591		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H12

Contact housing etc
1991

Kontakthus etc
1991

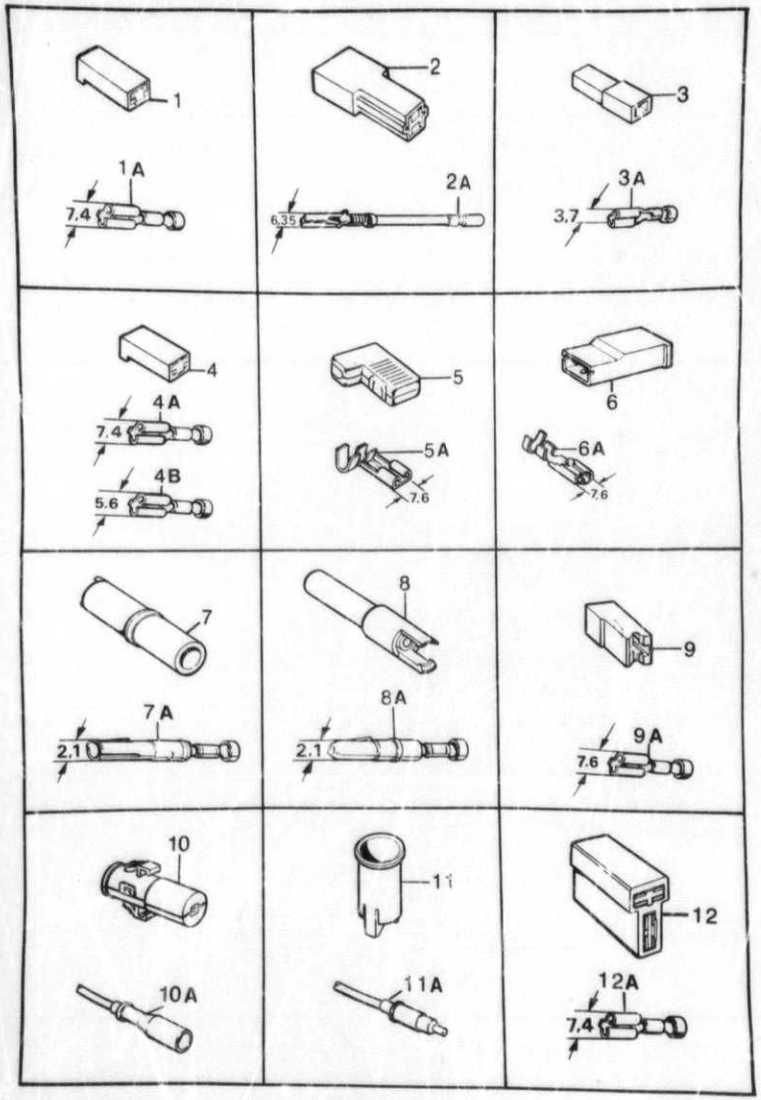

F3060 AAC90

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	9	85 21 544		STARTER	X	Contact housing	Kontakthus	4
0660						1-pole, female	1-polig, hylsa	
0670	9A	*85 59 205*		AREA, 4,0-6,0 MM2 NLS	X	Cable terminal	Kabelsko	5
0680								
0690	10	95 03 418		AC COMPRESSOR, JOINT PIECE CABLE HARNESS INSTRUMENTS/DOORS, JOINT CABLE HARNESS ENGINE/ FRONT	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0740	10A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0750								
0760	11	95 03 426		JOINT PIECE CABLE HARNESS FRONT/ENGINE, RELAY COMPRESSOR AC, EL-HEATED MIRROR, JOINT PIECE REAR CABLE HARNESS	X	Connector housing 1-pole, male	Skarvhus 1-polig, stift	4
0810	11A	85 47 770		AREA 0,2-2,5	X	Connector	Skarvstycke	5
0820	11A	85 47 788		AREA 2,0-4,0 MM2	X	Connector	Skarvstycke	5
0830								
0840	12	71 55 096		TEST CONNECTOR LAMBDA, SWITCH BRAKE LIGHT, FAN, SPOT LIGHT, COMBINED INSTRUMENT	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
0880	12A	85 22 534		AREA, 0,5-2,1 MM2	X	Cable terminal	Kabelsko	5
0890	12A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H14

Contact housing etc 1991

Kontakthus etc 1991

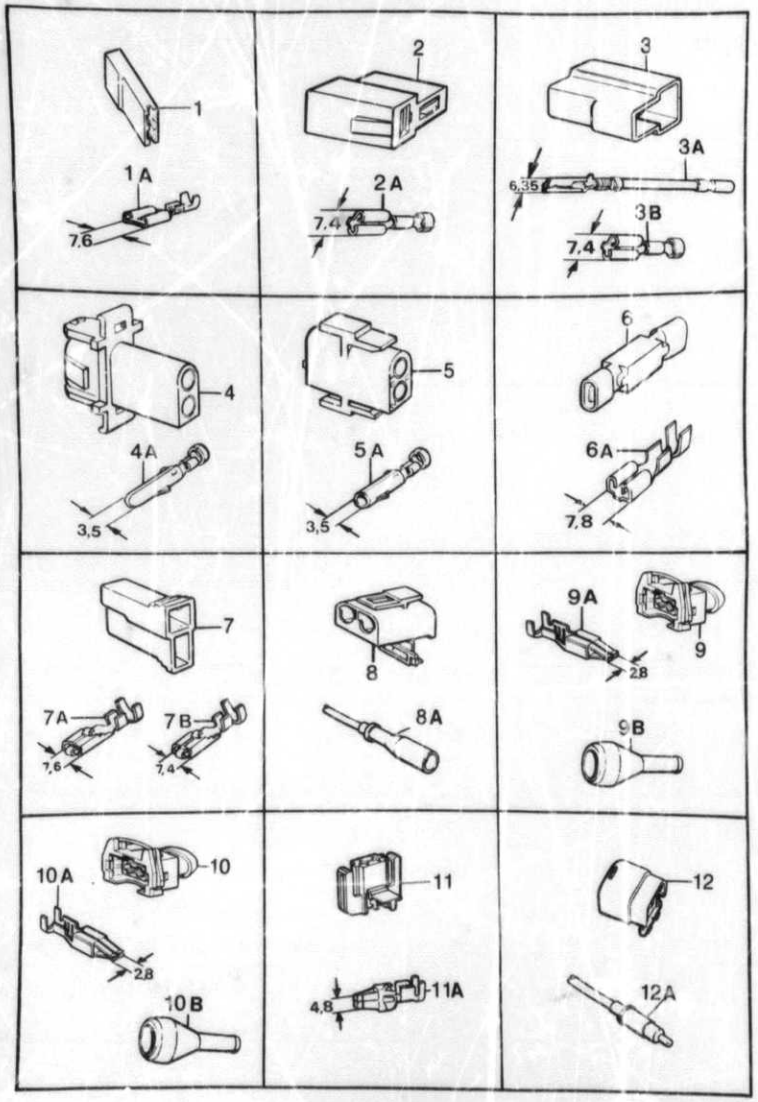

F3061 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 16 916		BRAKE LIGHT SWITCH, THERMO SWITCH, STARTER, VACUUM SWITCH, JOINT PIECE CABLE HARNESS REAR/BELT WARNING, FUSE, THEFT ALARM, JOINT PIECE REAR SEAT, IGNITION PULS, PRESSURE SWITCH AC, OIL GUARD, PRESSURE GUARD TURBO, PRESSURE GUARD, ANTI FREES THERMOSTAT, VALVE RECIRCULATION, SWITCH HAND BRAKE, LIGHT IGNITION LOCK, CHOKE CONTROL, LIGHT CIGARETTE LIGHTER, LIGHT CONTROLS, SWITC IDLE COMPENSATOR, GROUND, ELECTRONIC UNIT SPEED CONTROL	X	Insulation 2-pole, male	Isolering 2-polig, stift	4
1A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1A	85 14 036		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
2	85 58 538		FUEL PUMP, FUSE BOX	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
2A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3	85 58 546		JOINT PIECE, FUSE BOX	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
3A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
3B	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
4	85 61 623		ELECTRIC PAD, NUMBER PLATE LIGHT, CENTRAL LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
4A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
4A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5	85 61 631		TRUNK LID, CENTRAL LOCK TRUNK LID	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
5A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
6	85 30 966		DIOD HOLDER	X	Diode 2-pole, female	Diod 2-polig, hylsa	5
6A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
7	85 74 949		CIGARETTE LIGHTER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7B	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
8	95 03 319		VACUUM SWITCH APC, AC FAN MOTOR, WASHER MOTOR, SOLENOID VALVE AC, MOTOR COOLING FAN, BRAKE FLUID LEVEL, HORN, BY-PASS COLD START, SIDE DIRECT INDICATION, FOG LIGHT, VACUUM SWITCH, RESISTOR, JOINT PIECE CABLE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G05
Cable terminals	2-J20

2-H16

Contact housing etc 1991

Kontakthus etc 1991

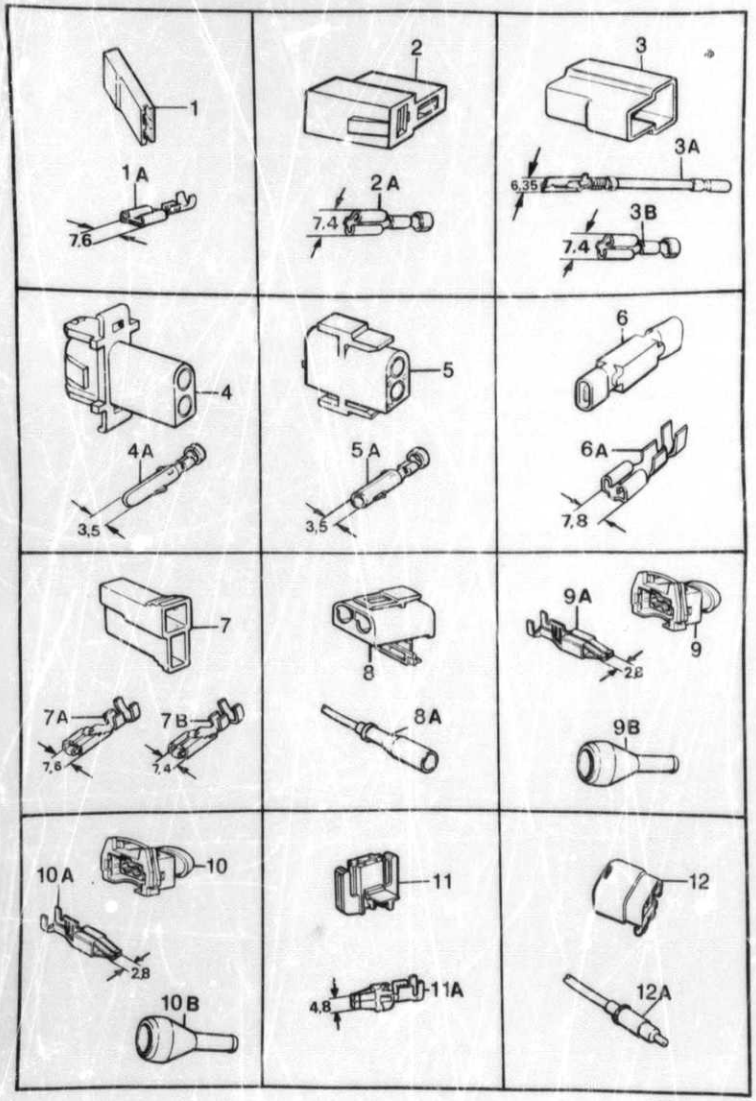

F3061 AAC90

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620				HARNESS REAR/DOORS FRONT COOLING FAN AC, HORN HORN ANTI THEFT ALARM, JOINT PIECE FUEL PUMP, FOR CABLE HARNESS 95 98 376				
0630								
0640								
0650								
0660								
0670								
0680	8A	78 74 498			X	Connection	Skarv	5
0690	8A	85 47 804		AREA 2,5-4,0	X	Connector	Skarvstycke	5
0700								
0710	9	85 93 899		AUXILIARY AIR VALVE,	X	Contact housing	Kontakthus	4
0720				THERMO TIME SWITCH,		2-pole, female	2-polig, hylsa	
0730				GIUDE PRESSURE VALVE,				
0740				STARTER VALVE, INJECTION				
0750				VALVE, TIMING VALVE,				
0760				PREHEATED LAMBDA SOND,				
0770				COLD STARTING VALVE,				
0780				MAIN VALVE				
0790	9A	91 20 957		AREA, 1,0,-2,5 MM2	X	Cable terminal	Kabelsko	5
0800	9B	85 21 619			X	Protection	Skydd	4
0810								
0820	10	85 93 915		MOTOR TEMP SENSOR, TANK	X	Contact housing	Kontakthus	4
0830				VENTILATION, INTERIOR		2-pole, female	2-polig, hylsa	
0840				LIGHT				
0850	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0860	10B	85 71 382			X	Protection	Skydd	4
0870								
0880	11	91 24 157		EL-ANTENNA, HIGH MOUNTED	X	Contact housing	Kontakthus	4
0890				STOP LIGHT, EL-SUN ROOF,		2-pole, female	2-polig, hylsa	
0900				ANTI THEFT ALARM, BOOT				
0910				LIGHT				
0920	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0930								
0940	12	95 01 685		FUEL PUMP, LEVEL GUARD	X	Contact housing	Kontakthus	4
0950						2-pole, male	2-polig, stift	
0960	12A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H18

Contact housing etc
1991

Kontakthus etc
1991

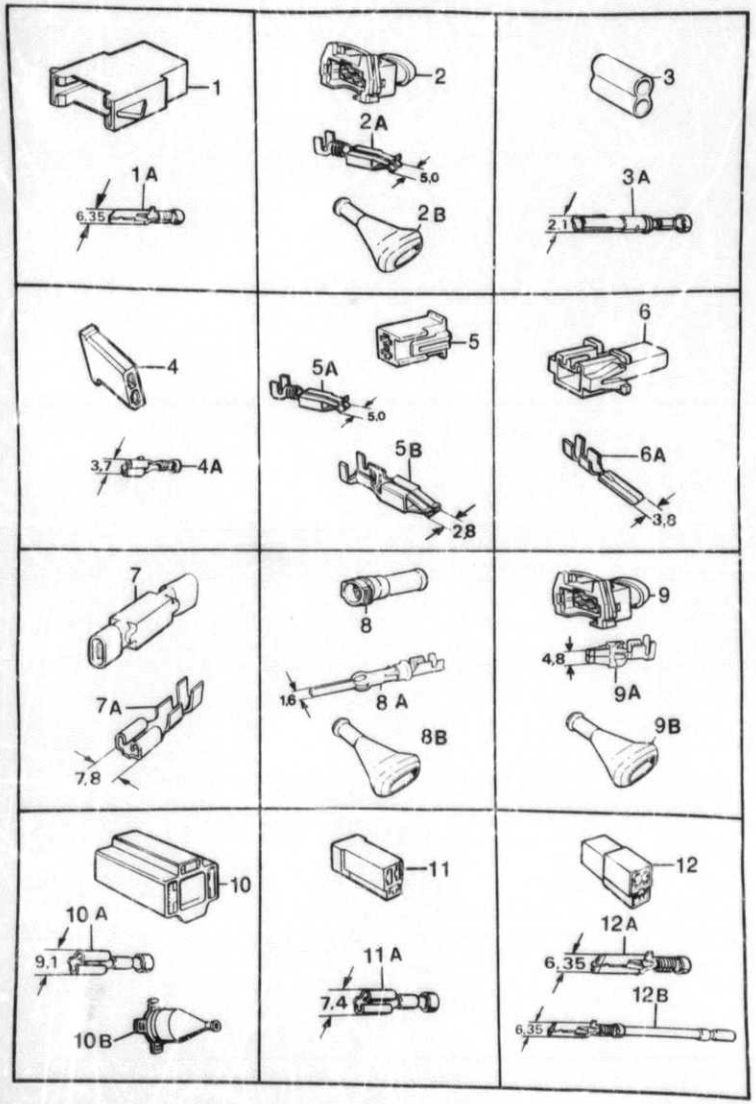

F3062 AAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 69 829		JOINT PIECE CABLE HARNESS REAR/BRAKE LIGHT ANTI THEFT ALARM	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0040	1A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0060	2	85 97 064		KNOCK SENSOR, TEMP SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0080	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0090	2B	85 71 382			X	Protection	Skydd	4
0110	3	85 53 869		SENSOR SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0130	3A	85 22 583		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0150	4	83 78 630		PEDALS SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0170	4A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0190	5	91 23 548		SPEED CONTROL, PARKING LIGHT INDICATOR, LIGHT ASH TRAY, INTERIOR LIGHT JOINT PIECE CABLE HARNESS ENGINE/INSTRUMENTS, JOINT PIECE CABLE HARNESS REAR/ABS, JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, JOINT PIECE CABLE HARNESS REAR/NUMBERPLATE LIGHT, JOINT PIECE CABLE HARNESS REAR/TAIL LIGHT, ANTI THEFT ALARM, JOINT JOINT PIECE TEMP WARNING DIAGNOSTIC SOCKET	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0350	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	5B	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0380	6	95 18 713		SENSOR SPEED CONTROL US, JOINT PIECE CABLE HARNESS INSTRUMENTS/ENGINE, JOINT PIECE CABLE HARNESS REAR/TAIL LIGHTS, JOINT PIECE CABLE HARNESS REAR/ABS, JOINT PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR,	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0470	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0490	7	85 74 881		COMPRESSOR AC, CABLE HARNESS AC/RELAY ENGINE, ABS	X	Diode 2-pole, female	Diod 2-polig, hylsa	5
0520	7A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
0540	8	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0560	8A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	8B	85 79 955			X	Protection	Skydd	4
0590	9	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0610	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0620	9B	85 79 955			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H20

Contact housing etc
1991

Kontakthus etc
1991

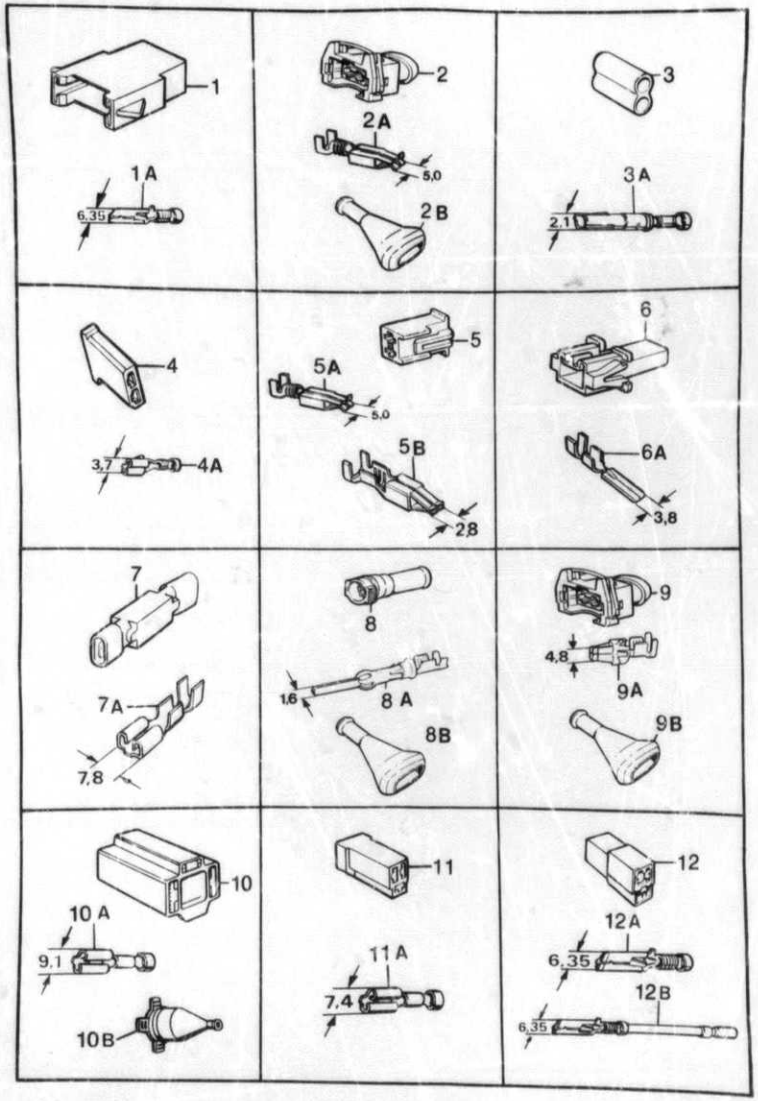

F3062 AAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	10	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0650						3-pole, female	3-polig, hylsa	
0660	10A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0670	10B	85 52 721			X	Cable protection	Kabelskydd	4
0680								
0690	11	73 42 892		LIMP-HOME, JOINT PIECE	X	Connector housing	Skarvhus	4
0700				CABLE NETWORK DOOR/REAR		3-pole, female	3-polig, hylsa	
0710	11A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0720								
0730	12	73 42 900		JOINT PIECE CABLE HAR-	X	Connector housing	Skarvhus	4
0740				NESS REAR/REAR DOORS		3-pole, male	3-polig, stift	
0750	12A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0760	12B	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H22

Contact housing etc
1991

Kontakthus etc
1991

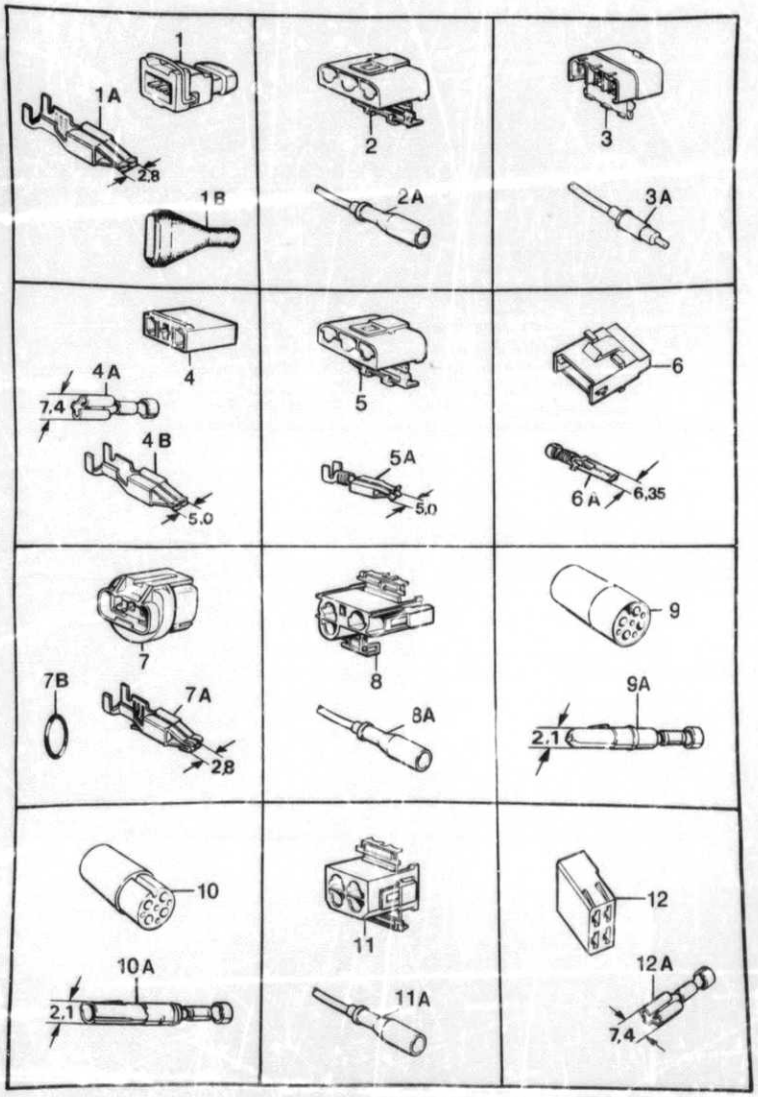

F3063 AA0.90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 93 907		DISTRIBUTOR, SENSOR THROTTLE ANGEL	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
1B	85 79 955			X	Protection	Skydd	4
2	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, CRANKSHAFT SENSOR, JOINT PIECE CABLE HARNESS ENGINE/FRONT, HEADLIGHT LEVELLING, JOINT PIECE CABLE HARNESS FRONT/ABS, JOINT PIECE CABLE HARNESS REAR/FRONT DOORS, JOINT PIECE CABLE HARNES REAR/ FUEL TANK TRANSMITTER, SENSOR AIR-BAG	X	Contact housing 3-pole female	Kontakthus 3-polig, hylsa	4
2A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
3	95 03 327		JOINT PIECE CABLE HARNESS FRONT/ENGINE, JOINT PIECE CABLE HARNESS REAR/TANK SENSOR, CONTROL LAMP ABS	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
3A	85 47 770			X	Connector	Skarvstycke	5
4	95 07 658		INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
4A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
4B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
4B	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
5	91 24 165		JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, COMBINED INSTRUMENT, SENSOR SPEED CONTROL, CODE FUEL MIXTURE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
5A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
6	95 03 012		EL-PAD	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
6A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
7	95 14 803		LOAD LIGHT US, JOINT PIECE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
7B	95 14 811			X	Protection	Skydd	4
8	95 19 670		PARKING LIGHT, DIRECTION LIGHT,SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
8A	78 74 498			X	Connection	Skarv	5
8A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
9	85 30 081		CENTRAL LOCK, JOINT PIECE CABLE NETWORK DOOR/REAR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
9A	*85 03 161*		AREA, 0,5-1,0 MM2 NLS - USE 8522591	X	Cable terminal	Kabelsko	5
9A	85 16 817		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
10	85 30 099		ELECTRIC MIRROR, JOINT PIECE CABLE HARNESS REAR/REAR DOORS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
10A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-H24

Contact housing etc 1991

Kontakthus etc 1991

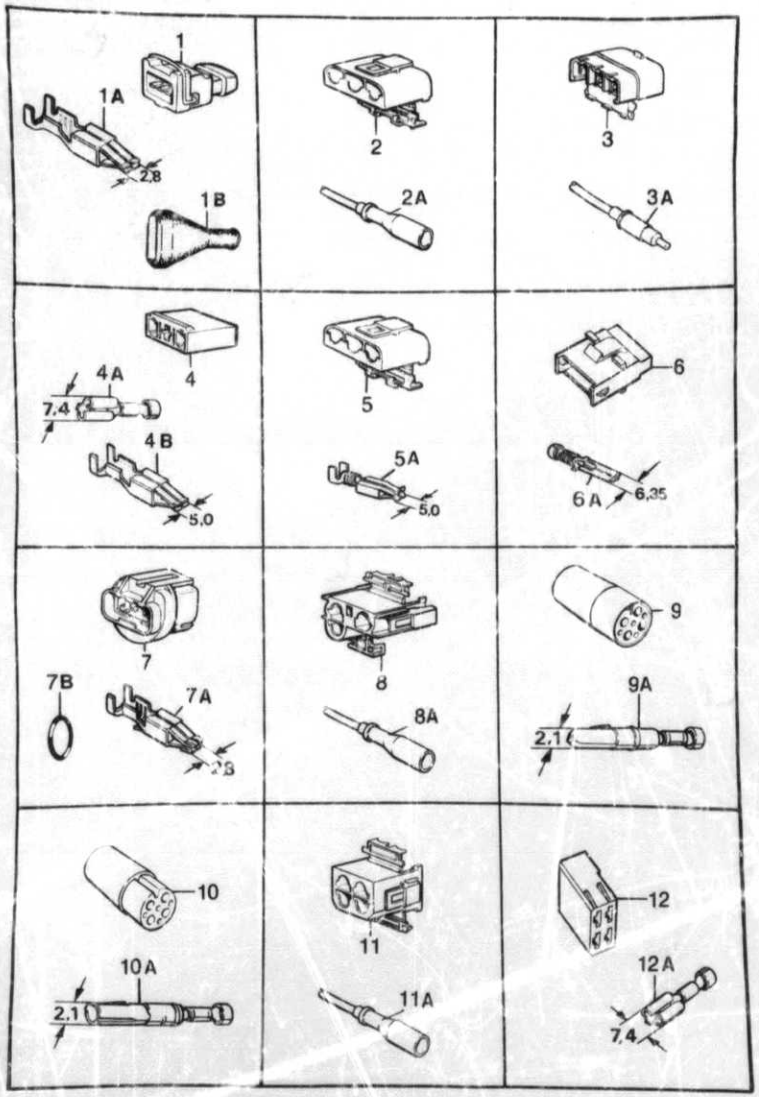


0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	11	95 03 434		JOINT PIECE CABLE HARNESS INSTRUMENTS/DOORS FRONT, FUEL PUMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0660								
0670								
0680	11A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0690								
0700	12	85 21 536		TEST CONNECTION EZK	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0710								
0720	12A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

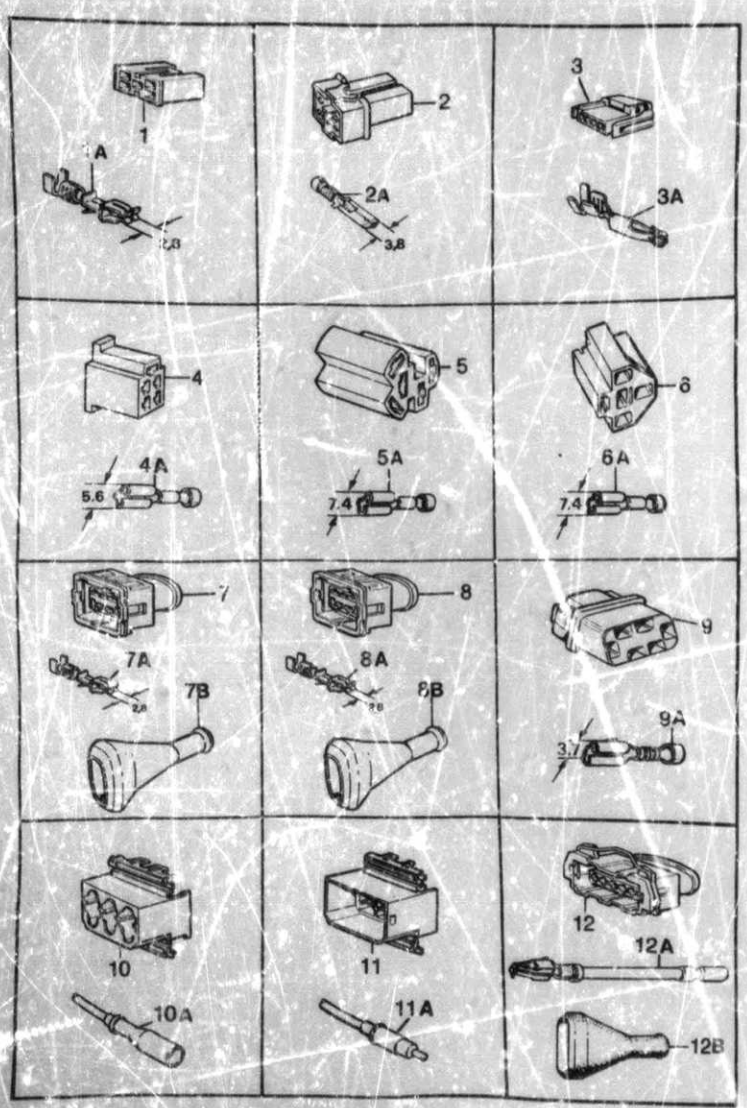

F3064 AAC90


0700	Pos	Part No/Art nr	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 555		IGNITION PULS/CHECK ENGINE, CONTROL SPEED CONTROL, JOINT PIECE CABLE HARNESS ENGINE/ INSTRUMENTS, JOINT PIECE CABLE HARNESS SENSOR/ AIR-BAG	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0080	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0090	1A	40 63 087		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0110	2	95 18 719		JOINT PIECE CABLE HARNESS ENGINE/INSTRUMENT, JOINT PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0160	2A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0180	3	40 61 503		JOINT PIECE CABLE HARNESS AIR-BAG/SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0200	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210	3A	40 63 087		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0230	4	85 16 890		WINDSHIELD WIPER MOTOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0250	4A	85 22 567		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0270	5	85 44 397		SWITCH HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0290	5A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0300	5A	79 68 058		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0320	6	85 33 607		RESISTOR HEATING FAN, SPEED CONTROL,ONE TOUCH, RELAY FLASHER, IGNITION LOCK, RELAY CONVERTIBLE, TIME RELAY INTERIOR LIGHT DELAY, RELAY ANTI THEFT ALARM	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0390	6A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	6A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0420	7	95 19 455		LEVEL ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0440	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450	7B	95 19 430			X	Protection	Skydd	4
0470	8	95 19 414		PRESSURE SWITCH	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0490	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0500	8B	95 19 430			X	Protection	Skydd	4
0520	9	85 40 569		SWITCH ELECTRIC MIRROR	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0540	9A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0560	10	95 03 475		LH 2,4,JOINT PIECE CABLE NETWORK ENGINE/FRONT	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0580	10A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0600	11	95 06 668		JOINT PIECE CABLE NETWORK MOTOR/FRONT	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0620	11A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5
0640	12	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

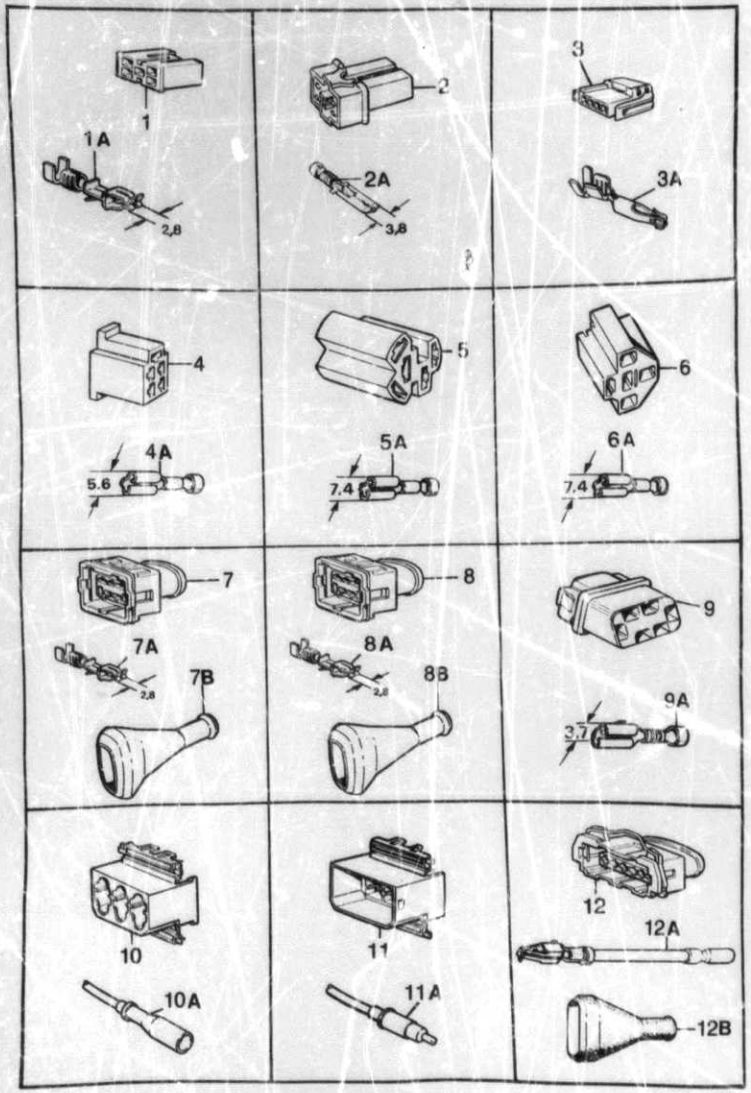

F3064 AAC90

0700	Pos	Part No/Art nr	K S	Note / Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660	12A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0670	12B	85 82 082			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
9B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-106

Contact housing etc
1991

Kontakthus etc
1991

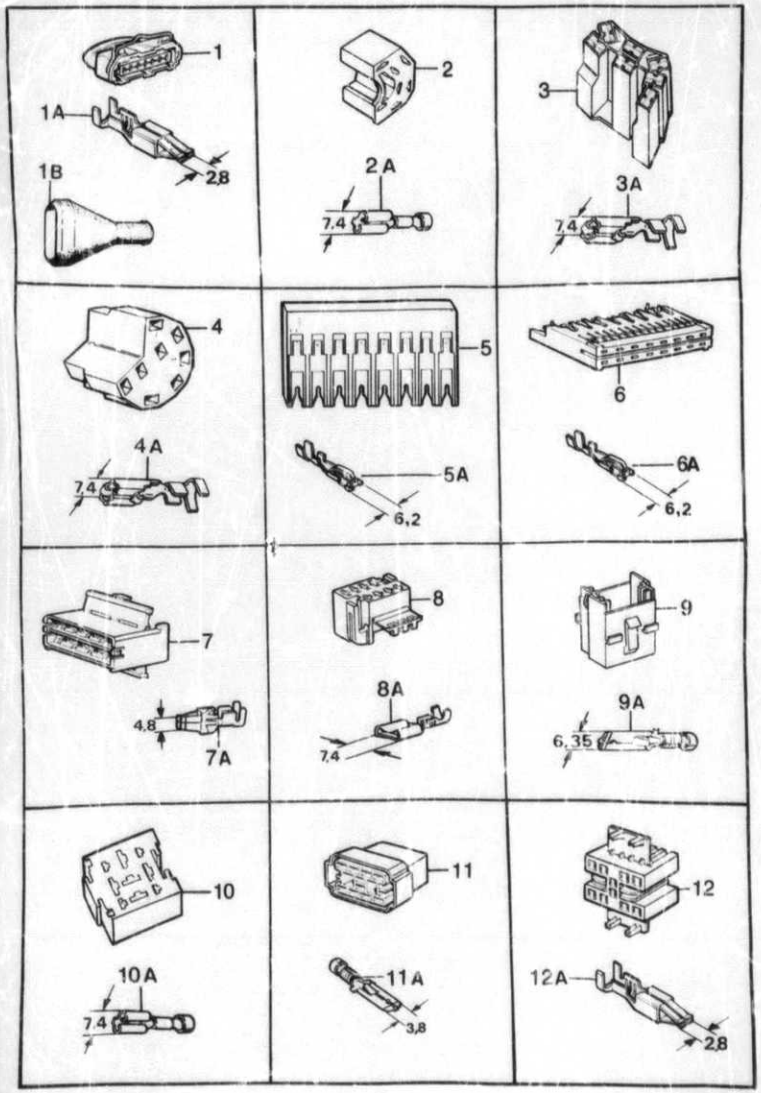

F3065 AAC90

0750


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 93 949		ELECTRONIC UNIT IGNITION SYSTEM, POWER STAGE,	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0040	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	1B	85 74 048			X	Protection	Skydd	4
0070	2	85 33 705		SWITCH WINDSHIELD WIPER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0090	2A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0100	2A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0120	3	41 13 122		SWITCH DIRECTION INDICATOR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	1
0140	3A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0160	4	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0180	4A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0200	5	85 68 735		SN, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0220	5A	85 68 768		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0240	6	85 68 842		FOR 8568735, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0260	6A	85 68 768		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0280	7	85 33 655		ELECTRONIC UNIT SPEED CONTROL	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0300	7A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0320	8	91 24 090		CONTROL UNIT THEFT ALARM	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0340	8A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0350	8A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0370	9	91 24 181		EL-PAD	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
0390	9A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0400	9A	85 22 542		AREA, 0,8-2,5 MM2	X	Cable terminal	Kabelsko	5
0420	10	85 71 390		JOINT PIECE COWL	X	Bracket 9-pole, female	Hållare 9-polig, hylsa	4
0440	10A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0460	11	91 22 557		RADIO, TEST MOTOR ELECTRONIC, JOINT PIECE CABLE HARNESS REAR/INSTRUMENTS, JOINT PIECE CABLE HARNESS AIR-BAG/INSTRUMENTS, ADJUSTMENT HEATED SEAT	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0530	11A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0550	12	91 23 399		RADIO, EL-PAD DRIVER, SWITCH REAR DEMIST, SWITCH FOG LIGHT, SWITCH RECIRCULATION, SWITCH AC, SWITCH FLASHER, REOSTAT EL-PAD DRIVER, SWITCH FOG LIGHT FRONT EXTRA, JOINT PIECE CABLE HARNESS REAR/INSTRUMENT,	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

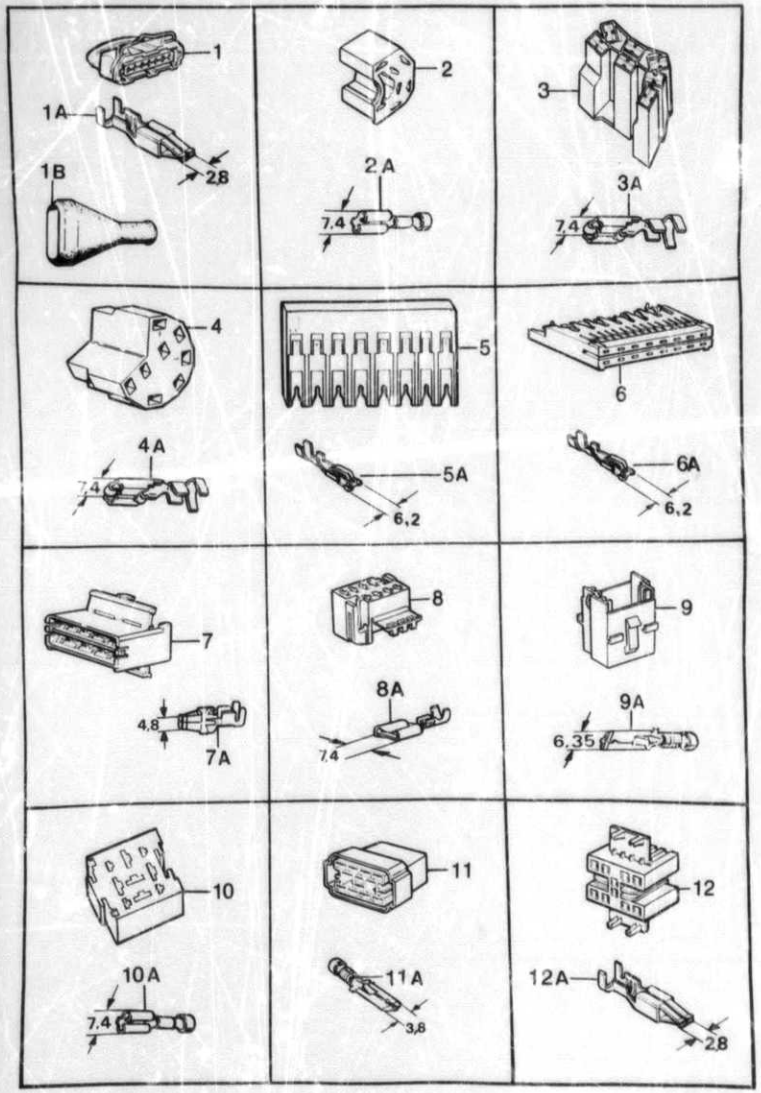

F3065 AAC90


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640			JOINT PIECE CABLE HARNESS INSTRUMENT/AIR-BAG, SWITCH HEADLIGHT LEVELLING, TEST CONNECTOR AIR-BAG				
0690	12A 91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0700	12A *95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, content housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

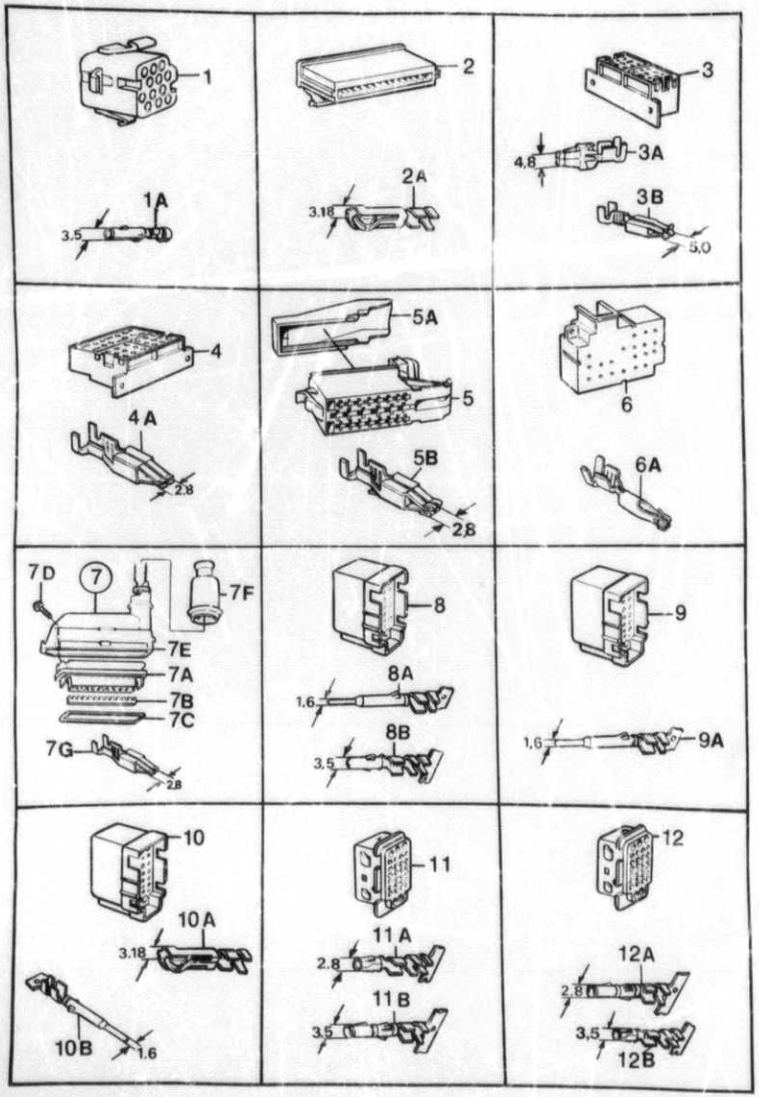

F3066 AAC90

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 53 497		COWL	X	Connector housing 12-pole, female	Skarvhus 12-polig, hylsa	4
0030	1A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0060	2	85 44 348		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0080	2A	85 60 278		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	91 24 199		MAIN RELAY, RELAY FUEL PUMP, TIME RELAY, COWL, RELAY INSTRUMENT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0130	3A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0140	3B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0160	4	91 25 543		ABS, RELAY MAIN/ENGINE	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0180	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190	4A	91 20 791		AREA, 2,0-4,5 MM2	X	Cable terminal	Kabelsko	5
0210	5	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0230	5A	40 67 617			X	Cover	Kåpa	4
0240	5B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0260	6	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0280	6A	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0300	7	85 86 802		APC, EZK	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0320	7A	85 87 420			1	. Contact housing	. Kontakthus	4
0330	7B	85 87 438		1)	1	. Striker plate	. Låsbleck	5
0340	7C	85 87 453		1)	1	. Seal	. Tätning	5
0350	7D	85 87 487		1)	1	. Screw	. Skruv	5
0360	7E	85 87 503		1)	1	. Cover	. Kåpa	4
0370	7F	85 87 511		1)	1	. Rubber protection	. Gummiskydd	4
0380	7G	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0400	8	85 44 215		WHITE, COWL, JOINT PIECE CABLE HARNESS REAR/EL-DISTRIBUT. UNIT	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0430	8A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0440	8B	85 44 322		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0460	9	85 44 231		RED, COWL	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0480	9A	85 93 956		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0490	9A	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0510	10	85 44 256		BLACK, COWL, JOINT PIECE CABLE HARNESS INSTRUMENTS/FRONT	X	Contact housing 29-pole, male	Kontakthus 29-polig stift	4
0540	10A	85 93 956		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0550	10B	85 93 964		AREA, 0,0-1,5 MM2	X	Cable terminal	Kabelsko	5
0560	10B	85 82 603		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0580	11	85 44 249		JOINT PIECE CABLE HARNESS FRONT/INSTRUMENTS	X	Contact housing 29-pole, female	Kontakthus 29-polig, hylsa	4
0600	11A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0610	11A	*85 21 726*		AREA, 0,5-1,5 MM2 NLS - USE 8567075	X	Cable terminal	Kabelsko	5


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

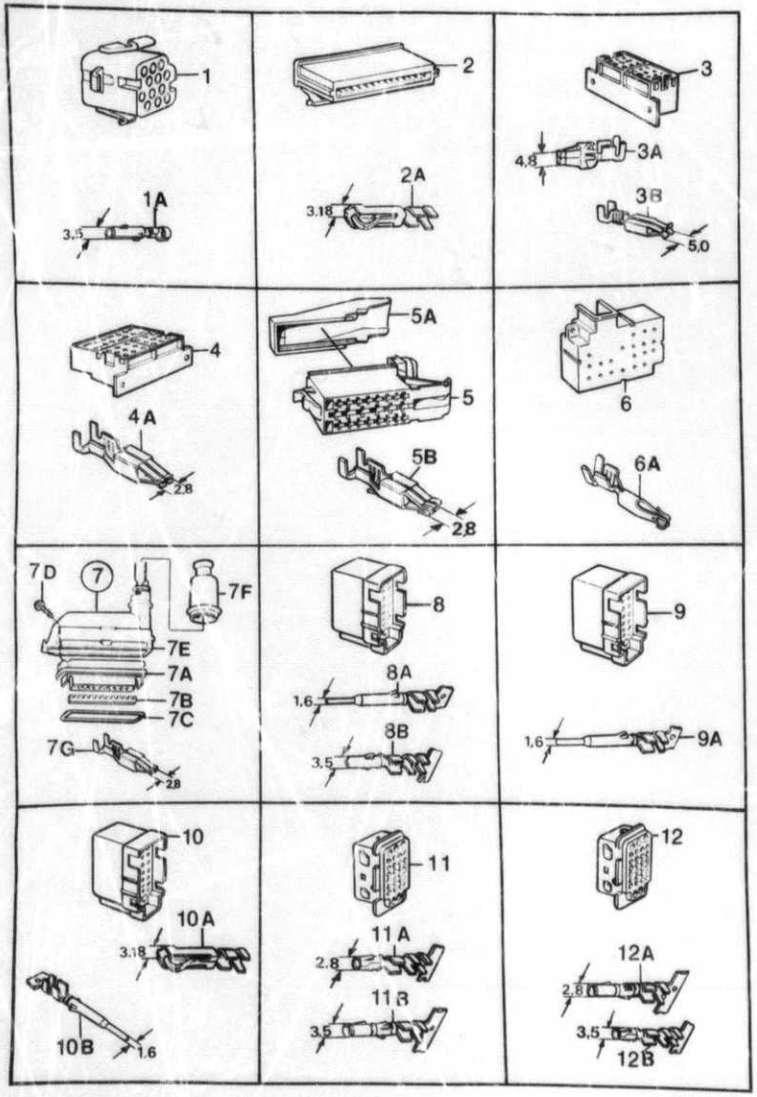

F3066 AAC90


0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	11B	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0630								
0640	12	85 44 207		JOINT PIECE CABLE HARNESS EL-DISTRIBUT. UNIT/ REAR	X	Contact housing 29-pole, female	Kontakthus 29-polig, hylsa	4
0650								
0660								
0670	12A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0680	12B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0690	12B	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

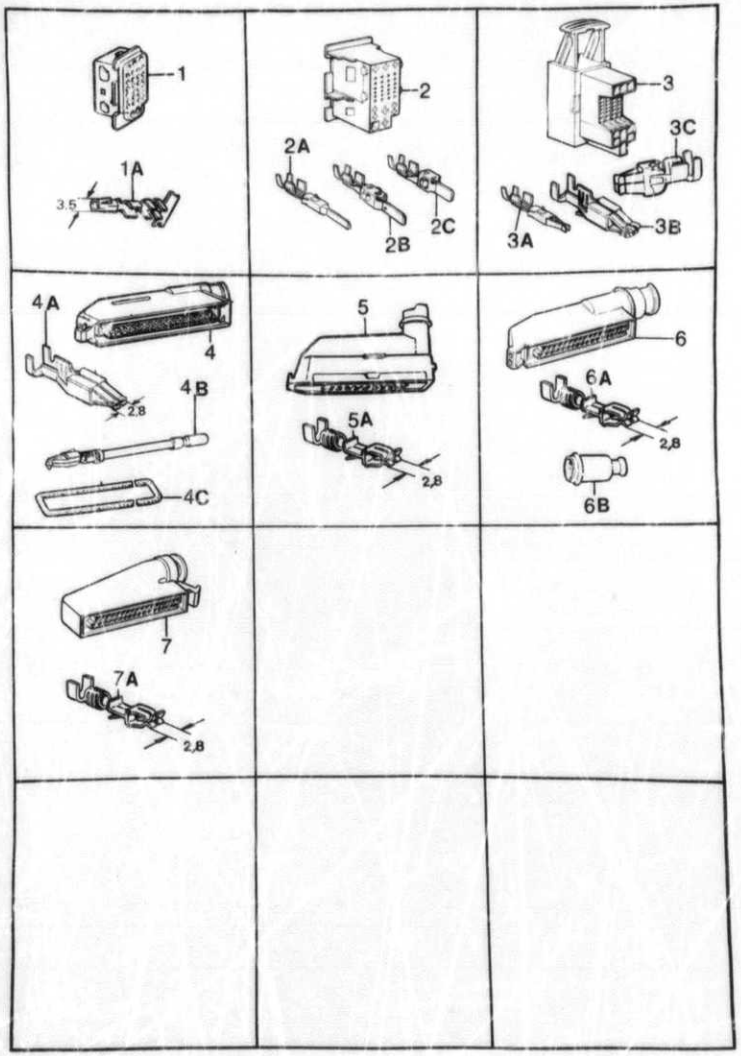

F3591 - AAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 223		JOINT PIECE CABLE HARNESS REAR/EL-DISTR. UNIT	X	Contact housing 29-pole, female	Kontakthus 29-polig, hylsa	4
0030	1A	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0050	2	41 73 803		CONNECTOR REAR CABLE HARNESS, CONNECTOR CABLE HARNESS INSTRUMENTS	X	Contact housing 33-pole, male	Kontakthus 33-polig, stift	4
0080	2A	41 15 457		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0090	2B	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0100	2C	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0120	3	41 73 852		CONNECTOR REAR CABLE HARNESS, CONNECTOR CABLE HARNESS INSTRUMENTS	X	Contact housing 33-pole, female	Kontakthus 33-polig, hylsa	4
0150	3A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0160	3B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0170	3C	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190	4	85 39 363		ELECTRONIC UNIT LAMBDA	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0210	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0220	4B	85 22 617		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0230	4C	95 64 204			X	Seal	Tätning	5
0250	5	95 61 093		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0270	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290	6	40 68 441		ELECTRONIC UNIT ABS	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0310	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0320	6B	85 87 511			X	Rubber protection	Gummiskydd	4
0340	7	95 64 618		ELECTRONIC UNIT LUCAS IGNITION SYSTEM	X	Contact housing 40-pole, female	Kontakthus 40-polig, hylsa	4
0360	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-I16

Contact housing etc
1992-

Kontakthus etc
1992-

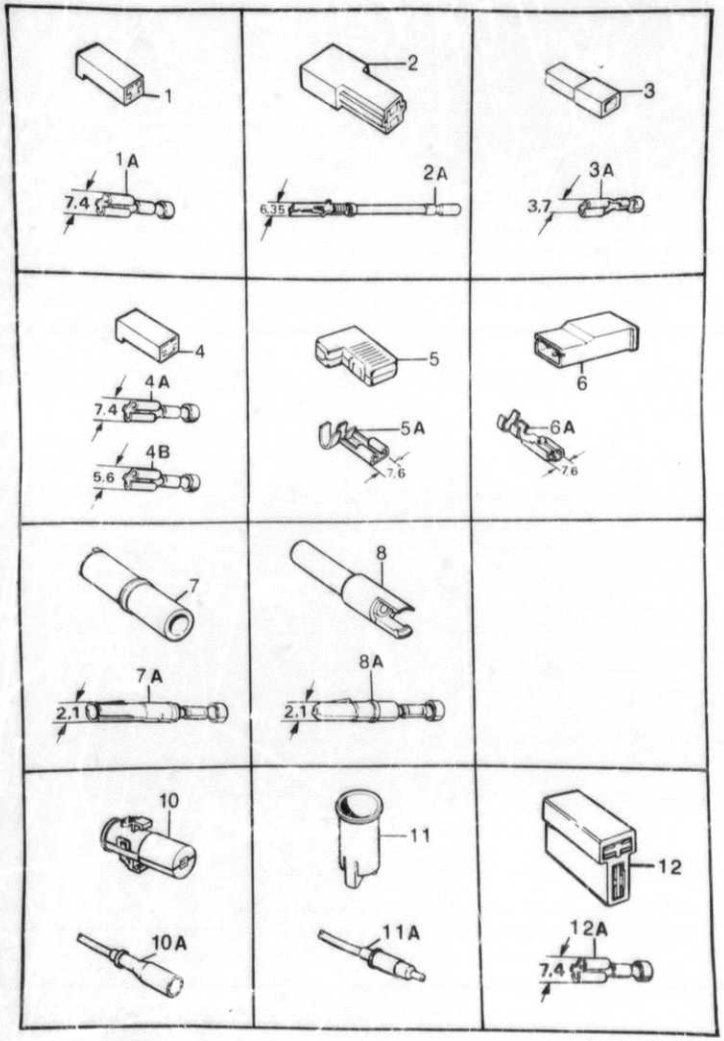

F3832 - AAC90

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		REAR DEMIST, FUSE BOX,	X	Contact housing	Kontakthus	4
0020				JOINT PIECE, BRAKE PEDAL		1-pole, female	1-polig, hylsa	
0030				SWITCH SPEED CONTROL,				
0040				TEST SOCKET ENGINE				
0050	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0060	1A	85 22 534		AREA, 1,8-2,5 MM2	X	Cable terminal	Kabelsko	5
0070								
0080	2	71 55 120		APC, FUSE BOX, EL-PAD,	X	Contact housing	Kontakthus	4
0090				EL-HEATED MIRROR,		1-pole, male	1-polig, stift	
0100				BY-PASS A, JOINT PIECE				
0110				CABLE NETWORK DOOR/REAR,				
0120				CABLE NETWORK NUMBER-				
0130				PLATE, BRAKE LIGHT,				
0140				RELAY LIGHT, DIM LIGHT				
0150				EL-CENTRAL, PLUS, REAR				
0160				CABLE HARNESS				
0170	2A	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5
0180								
0190	3	85 30 115		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0200						1-pole, female	1-polig, hylsa	
0210	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0220								
0230	4	85 33 184		LOUDSPEAKER, INTERIOR	X	Contact housing	Kontakthus	4
0240				LIGHT		1-pole, female	1-polig, hylsa	
0250	4A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0260	4B	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0270								
0280	5	85 21 692		WINDOW REGULATOR, IDLE	X	Contact housing	Kontakthus	4
0290				COMPENSATION, IGNITION		1-pole, female	1-polig, hylsa	
0300				COIL, PARKING LIGHT,				
0310				IGNITION LOCK, SOLENOID				
0320				VALVE IDLE COMPENSATION				
0330				AC				
0340	5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	6	85 41 229		JOINT PIECE, LUGGAGE	X	Sleeve	Isoleringshylsa	5
0370				COMPARTMENT LIGHT, TAIL		1-pole, female	1-polig, hylsa	
0380				LIGHT, ALTERNATOR, MAIN				
0390				SWITCH, THROTTLE HOUSE				
0400				VENTILATION, SWITCH				
0410				LUGGAGE COMPARTMENT,				
0420				COMPARTMENT, LIGHT GLOVE				
0430				BOX, MAIN SWITCH FAN,				
0440				SWITCH AC, REAR DEMIST,				
0450				LIGHT ISTRUMENTS, SWITCH				
0460				DIRECTION INDICATOR,				
0470				LIGHT NUMBER PLATE,				
0480				LIGHT ASH TRAY				
0490	6A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0510								
0520	7	85 16 932		JOINT PIECE CABLE	X	Contact housing	Kontakthus	4
0530				HARNESS REAR/ENGINE		1-pole, female	1-polig, hylsa	
0540	7A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	8	85 16 940		GEAR BOX A, JOINT PIECE	X	Contact housing	Kontakthus	4
0570				CABLE HARNESS ENGINE/		1-pole, male	1-polig, stift	
0580				REAR				
0590	8A	85 22 591		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0600								
0610	10	95 03 418		AC COMPRESSOR, JOINT	X	Connector housing	Skarvhus	4
0620				PIECE CABLE HARNESS		1-pole, female	1-polig, hylsa	
0630				INSTRUMENTS/DOORS, JOINT				
0640				CABLE HARNESS ENGINE/				
0650				FRONT				
0660	10A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-I18

Contact housing etc
1992-

Kontakthus etc
1992-

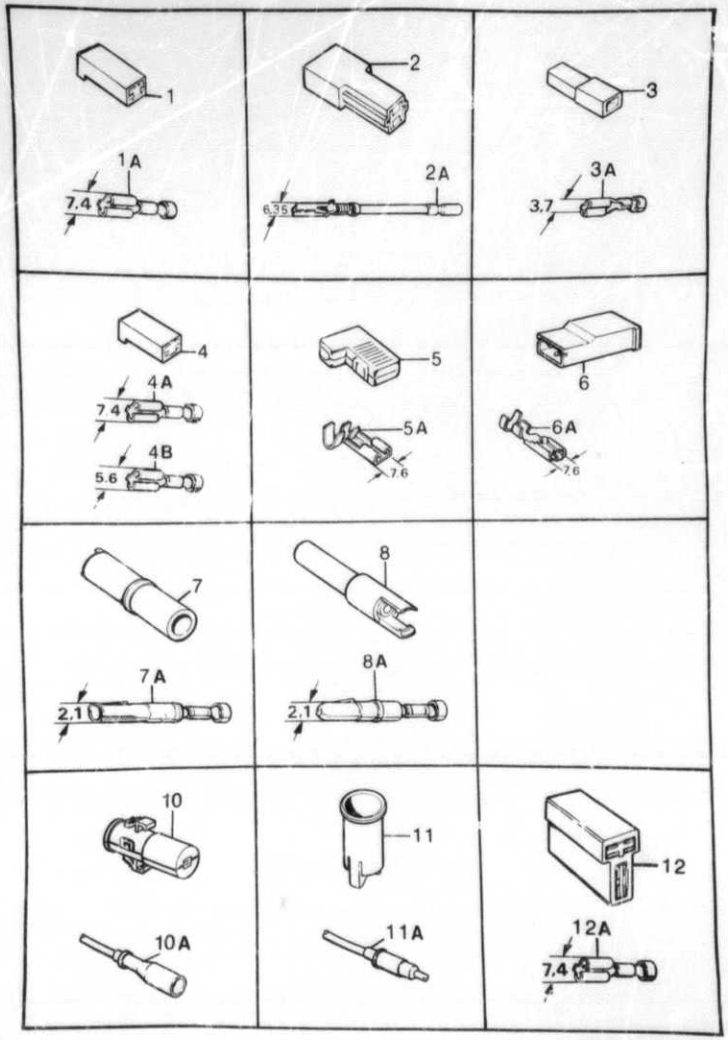

F3832 - AAC90

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0670								
0680	11	95 03 426		JOINT PIECE CABL..	X	Connector housing	Skarvhus	4
0690				HARNESS FRONT/ENGINE, EL-HEATED MIRROR		1-pole, male	1-polig, stift	
0700								
0710	11A	85 47 770		AREA 0,2-2,5	X	Connector	Skarvstycke	5
0720	11A	85 47 788		AREA 2,0-4,0 MM2	X	Connector	Skarvstycke	5
0730								
0740	12	71 55 096		COMBINED INSTRUMENTS, SWITCH BRAKE LIGHT, FAN,	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
0750								
0760	12A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	8-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-I20

Contact housing etc
1992-

Kontakthus etc
1992-

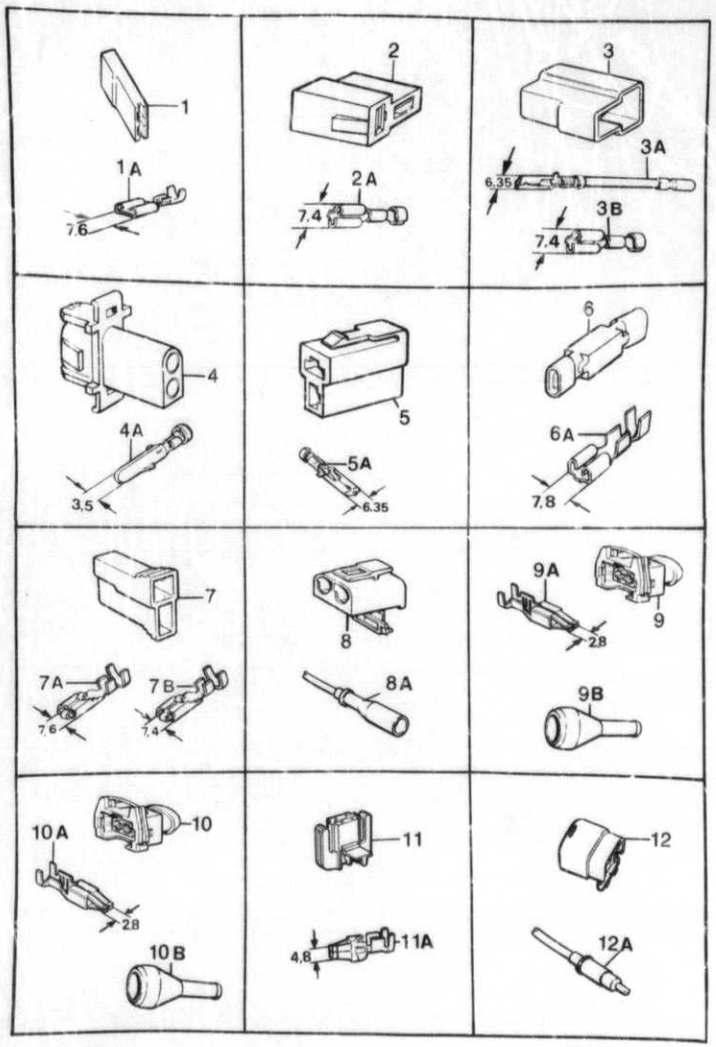

F3833 - AAC90


0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 16 916		BRAKE LIGHT SWITCH,	X	Insulation	Isolering	4
0020				STARTER, DOME LIGHT,		2-pole, male	2-polig, stift	
0030				VACUUM SWITCH, JOINT				
0040				PIECE CABLE HARNESS				
0050				REAR/BELT WARNING, FUSE,				
0060				JOINT PIECE REAR SEAT,				
0070				IGNITION PULS, PRESSURE				
0080				SWITCH AC, OIL GUARD,				
0090				PRESSURE GUARD TURBO,				
0100				PRESSURE GUARD, ANTI				
0110				FREEZE THERMOSTAT, VALVE				
0120				RECIRCULATION, SWITCH				
0130				HAND BRAKE, LIGHT IGNI-				
0140				TION LOCK CHOKE CONTROL,				
0150				LIGHT CIGARETTE LIGHTER,				
0160				SWITCH IDLE COMPENSATOR,				
0170				GEAR INDICATOR AUTOMAT,				
0180				GROUND				
0190	1A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0200	1A	85 14 036		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210								
0220	2	85 58 538		FUEL PUMP, FUSE BOX	X	Contact housing	Kontakthus	4
0230						2-pole, female	2-polig, hylsa	
0240	2A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0250								
0260	3	85 58 546		JOINT PIECE, FUSE BOX	X	Contact housing	Kontakthus	4
0270						2-pole, male	2-polig, stift	
0280	3A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290	3A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	4	85 61 623		ELECTRIC PAD, NUMBER	X	Contact housing	Kontakthus	4
0320				PLATE LIGHT, CENTRAL		2-pole, male	2-polig, stift	
0330				LOCK				
0340	4A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	4A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360								
0370	5	43 50 427		FAN UNIT	X	Connector housing	Kontakthus	4
0380						2-pole, female	2-polig, hylsa	
0390	5A	*71 55 187*		AREA, 0,8-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
0400								
0410	6	85 30 966		DIOD HOLDER	X	Diode	Diod	5
0420						2-pole, female	2-polig, hylsa	
0430	6A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
0440								
0450	7	85 74 949		CIGARETTE LIGHTER	X	Contact housing	Kontakthus	4
0460						2-pole, female	2-polig, hylsa	
0470	7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0471	7B	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0480								
0490	8	95 03 319		VACUUM SWITCH APC, AC	X	Contact housing	Kontakthus	4
0500				FAN MOTOR, WASHER MOTOR,		2-pole, female	2-polig, hylsa	
0510				SOLENOID VALVE AC, MOTOR				
0520				COOLING FAN, BRAKE FLUID				
0530				LEVEL, HORN, BY-PASS				
0540				COLD START, SIDE DIRECT				
0550				INDICATION, FOG LIGHT,				
0560				VACUUM SWITCH, RESISTOR,				
0570				JOINT PIECE CABLE				
0580				HARNESS REAR/DOORS FRONT				
0590				EL-WINDOW REGULATOR				
0600				FRONT, CENTRAL LOCK,				
0610				JOINT PIECE FUEL PUMP,				
0620				FOR CABLE HARNESS				
0630				95 98 376				
0640	8A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

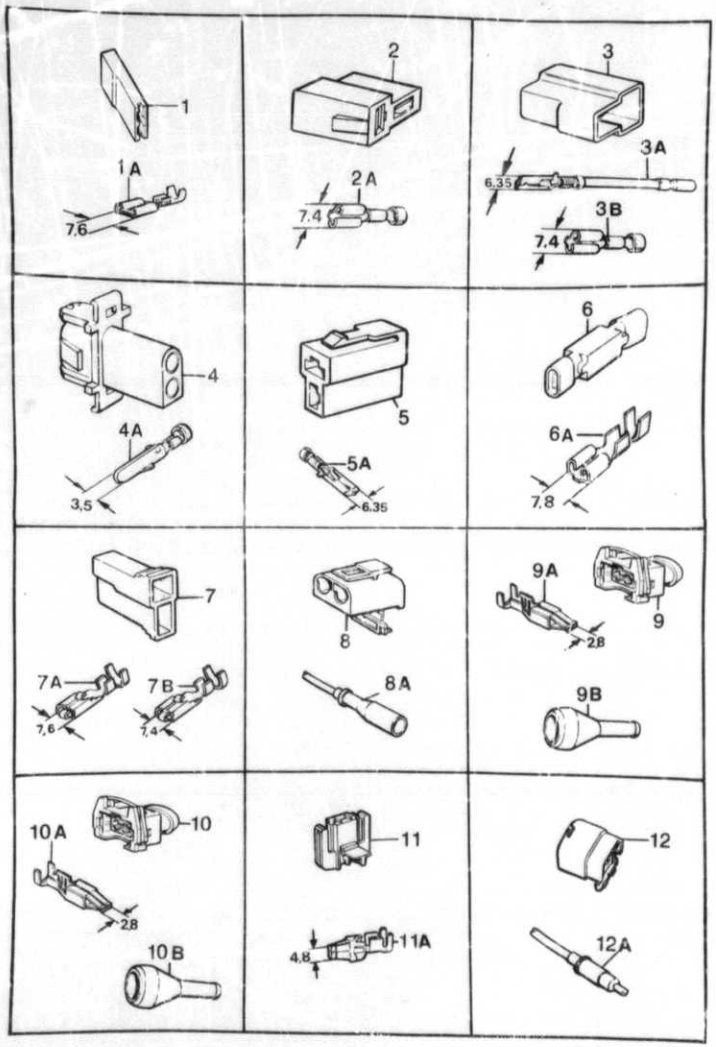

F3833 - AAC90

0950	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	8A	85 47 796		AREA 0,2-2,5	X	Connector	Skarvstycke	5
0660	8A	85 47 804		AREA 2,5-4,0	X	Connector	Skarvstycke	5
0670								
0680	9	85 93 899		AUXILIARY AIR VALVE,	X	Contact housing	Kontakthus	4
0690				MAIN VALVE, INJECTION		2-pole, female	2-polig, hylsa	
0700				VALVE, TIMING VALVE,				
0710				PREHEATED LAMBDA SOND,				
0720				COLD STARTING VALVE,				
0730	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0740	9B	85 21 619			X	Protection	Skydd	4
0750								
0760	10	85 93 915		MOTOR TEMP SENSOR, TANK	X	Contact housing	Kontakthus	4
0770				VENTILATION, INTERIOR		2-pole, female	2-polig, hylsa	
0780				LIGHT				
0790	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0800	10B	85 71 382			X	Protection	Skydd	4
0810								
0820	11	91 24 157		EL-ANTENNA, HIGH MOUNTED	X	Contact housing	Kontakthus	4
0830				STOP LIGHT, EL-SUN ROOF,		2-pole, female	2-polig, hylsa	
0840				BOOT LIGHT, DOME LIGHT				
0850	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0860								
0870	12	95 01 685		FUEL PUMP, LEVEL GUARD	X	Contact housing	Kontakthus	4
0880						2-pole, male	2-polig, stift	
0890	12A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-124

Contact housing etc
1992-

Kontakthus etc
1992-

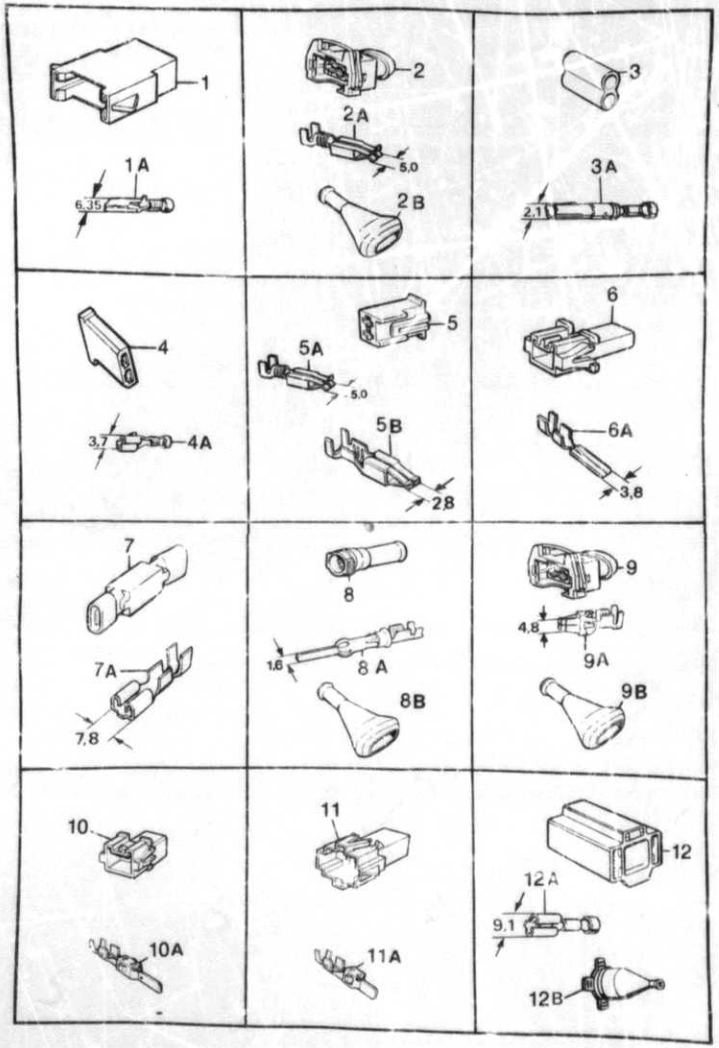

F3834 - AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 69 829		JOINT PIECE CABLE HARNESS REAR/BRAKE LIGHT ANTI THEFT ALARM	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0040	1A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0060	2	85 97 064		KNOCK SENSOR, TEMP SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0080	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0090	2B	85 71 382			X	Protection	Skydd	4
0110	3	85 53 869		SENSOR SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0130	3A	85 22 583		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0150	4	83 78 630		PEDALS SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0170	4A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0190	5	91 23 548		SPEED CONTROL, PARKING LIGHT INDICATOR, LIGHT ASH TRAY, JOINT PIECE CABLE HARNESS ENGINE/INSTRUMENTS, JOINT PIECE CABLE HARNESS REAR/ABS, JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, JOINT PIECE CABLE HARNESS REAR STEERING WHEEL,BOOT LID, JOINT PIECE CABLE HARNESS REAR/TAIL LIGHT, ANTI THEFT ALARM, JOINT JOINT PIECE TEMP WARNING DIAGNOSTIC SOCKET	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0350	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	5B	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0380	6	95 18 713		JOINT PIECE CABLE HARNESS REAR/TAIL LIGHTS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0400	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	7	85 74 881		COMPRESSOR AC, CABLE HARNESS AC/RELAY ENGINE, ABS	X	Diode 2-pole, female	Diod 2-polig, hylsa	5
0450	7A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
0470	8	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0490	8A	95 19 39		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	8B	85 79 955			X	Protection	Skydd	4
0530	9	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0540	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0550	9B	85 79 955			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J02

Contact housing etc 1992-

Kontakthus etc 1992-

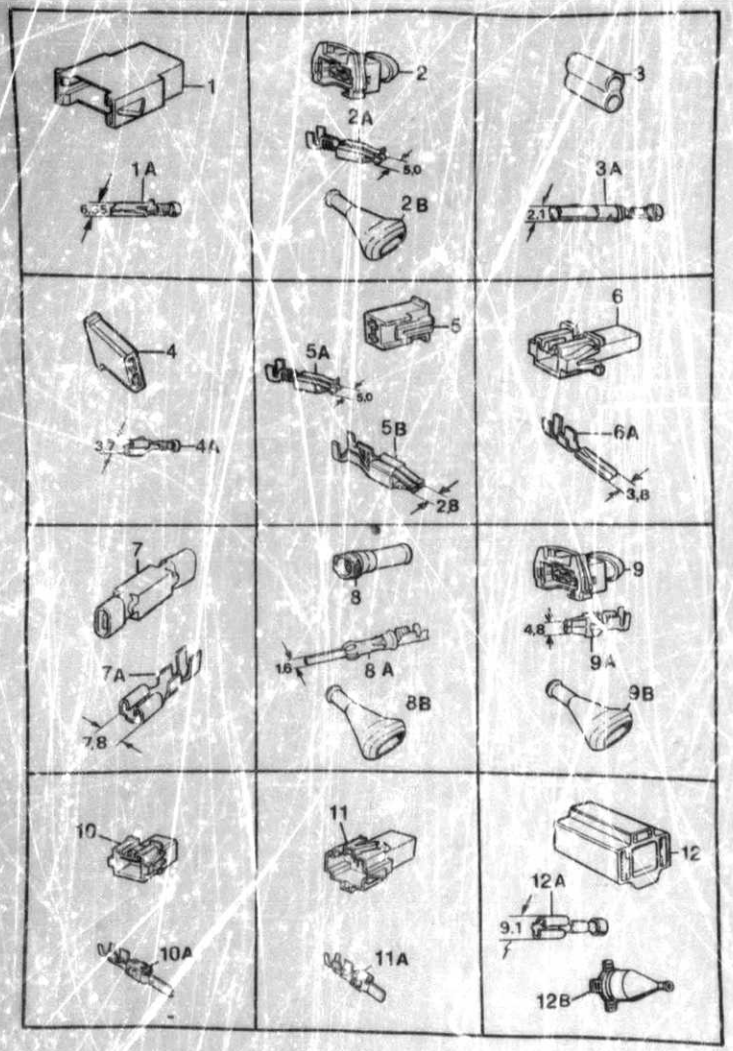

F3834 - AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	10	41 17 164		JOINT PIECE CABLE HARN-	X	Connector housing	Kontakthus	4
0580				NESS REAR/ABS, JOINT		2-pole, male	2-polig, stift	
0590				PIECE CABLE HARNESS				
0600				ENGINE, SENSOR, NUMBER				
0610				PLATE LIGHT, JOINT PIECE				
0620				CABLE HARNESS INSTRUMENT				
0630				JOINT PIECE CABLE HAR-				
0640				NESS REAR, CENTRAL LOCK				
0650				BOOT LID				
0660	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0670								
0680	11	41 17 590		JOINT PIECE CABLE HARN-	X	Connector housing	Kontakthus	4
0690				NESS REAR		2-pole, male	2-polig, stift	
0700	11A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0710								
0720	12	71 56 021		HEADLIGHT	X	Connector housing	Kontakthus	5
0730						3-pole, female	3-polig, hylsa	
0740	12A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0750	12B	85 52 721			X	Cable protection	Kabelskydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J04

Contact housing etc 1992-

Kontakthus etc 1992-

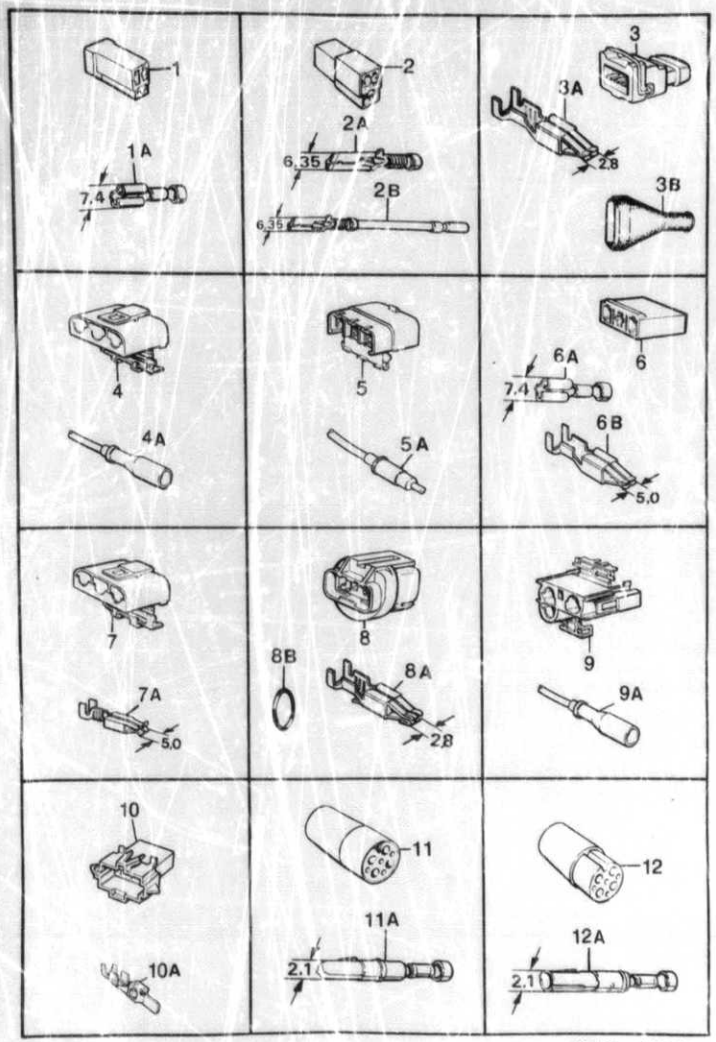

F3835 - AAC90


1050	Pos	Part No Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	73 42 892		LIMP-HOME, JOINT PIECE CABLE NETWORK DOOR/REAR	X	Connector housing 3-pole, female	Skarvhus 3-polig, hylsa	4
0030	1A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	2	73 42 900		JOINT PIECE CABLE HARNESS REAR/REAR DOORS	X	Connector housing 3-pole, male	Skarvhus 3-polig, stift	4
0070	2A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0080	2B	85 22 542		AREA, 1,5 MM2	X	Cable terminal	Kabelsko	5
0100	3	85 93 907		DISTRIBUTOR, SENSOR THROTTLE ANGEL	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0120	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0130	3B	85 79 955			X	Protection	Skydd	4
0150	4	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, CRANKSHAFT SENSOR, JOINT PIECE CABLE HARNESS ENGINE/FRONT, HEADLIGHT LEVELLING, JOINT PIECE CABLE HARNESS FRONT/ABS, JOINT PIECE CABLE HARNESS REAR/FRONT DOORS, JOINT PIECE CABLE HARNESS REAR/ FUEL TANK TRANSMITTER, SENSOR AIR-BAG	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0270	4A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0290	5	95 03 327		JOINT PIECE CABLE HARNESS FRONT/ENGINE, JOINT PIECE CABLE HARNESS REAR/TANK SENSOR, CONTROL LAMP ABS	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0340	5A	85 47 770			X	Connector	Skarvstycke	5
0360	6	95 07 658		INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0380	6A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0390	6B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0400	6B	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0420	7	91 24 165		JOINT PIECE CABLE HARNESS REAR/TRUNK DOOR, COMBINED INSTRUMENT, CODE FUEL MIXTURE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0460	7A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0480	8	95 14 803		HEAD LIGHT US, JOINT PIECE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0500	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0510	8B	95 14 811			X	Protection	Skydd	4
0530	9	95 19 679		PARKING LIGHT, DIRECTION LIGHT,SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0550	9A	78 74 498			X	Connection	Skarv	5
0560	9A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0580	10	41 17 669		EL-SEAT	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0600	10A	41 15 590		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0620	11	85 30 081		CENTRAL LOCK, JOINT PIECE CABLE NETWORK DOOR/REAR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-J02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

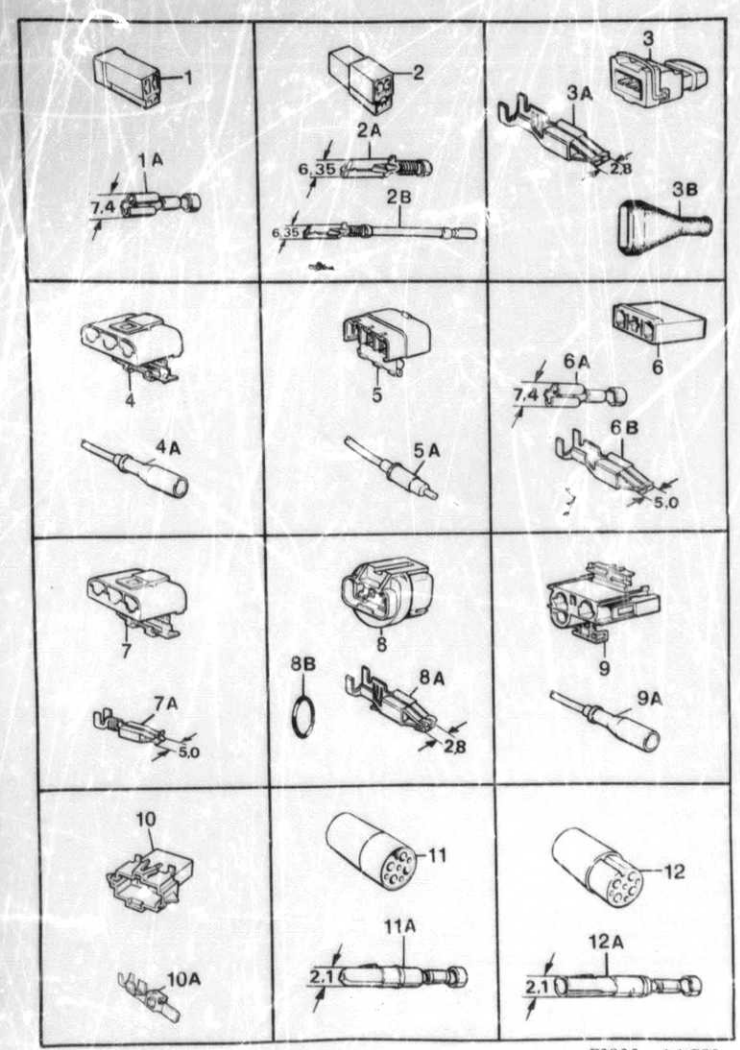

F3835 - AAC90

1050	Pos	Part No/Art nr	I. S.	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	11A	*85 03 161*		AREA, 0,5-1,0 MM2 NLS - USE 8522591	X	Cable terminal	Kabelsko	5
0650	11A	85 16 817		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0670								
0680	12	8[illegible] 30 099		ELECTRIC MIRROR, JOINT PIECE CABLE HARNESS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0690				REAR/REAR DOORS				
0700								
0710	12A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2--J08

Contact housing etc
1992-

Kontakthus etc
1992-

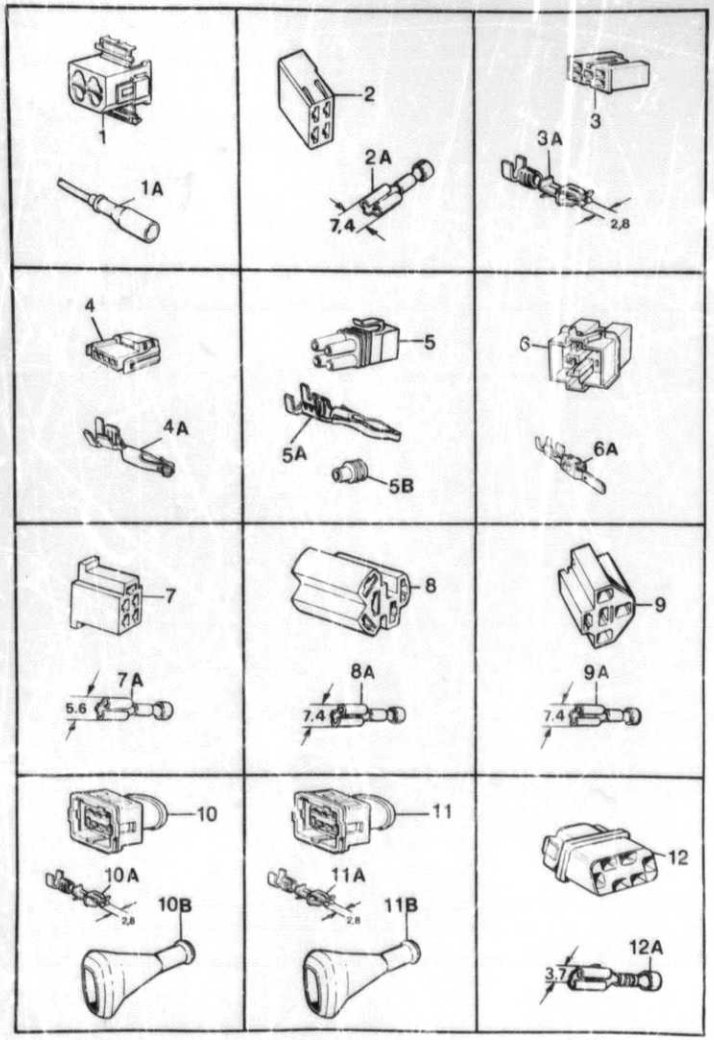

F3836 - AAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 434		JOINT PIECE CABLE HARNESS INSTRUMENTS/DOORS FRONT, FUEL PUMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0040	1A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
0060	2	85 21 536		TEST CONNECTION EZK	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0080	2A	85 22 534		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0100	3	91 23 555		IGNITION PULS/CHECK ENGINE, CONTROL SPEED CONTROL, JOINT PIECE CABLE HARNESS ENGINE/ INSTRUMENTS, JOINT PIECE CABLE HARNESS SENSOR/ AIR-BAG, JOINT PIECE CABLE HARNESS PEDALS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0180	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190	3A	40 63 087		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210	4	40 61 503		JOINT PIECE CABLE HARNESS AIR-BAG/SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0230	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0240	4A	40 63 067		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0260	5	95 64 584		AUXILIAR AIR VALVE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0280	5A	95 64 600		AREA, 0,5-0,8 MM2	X	Cable terminal	Kabelsko	5
0290	5B	95 64 592			X	Seal	Tätning	5
0310	6	41 17 263		JOINT PIECE CABLE HARNESS ENGINE, JOINT PIECE CABLE HARNESS SPEED CONTROL	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0350	6A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0370	7	85 16 890		WINDSHIELD WIPER MOTOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0390	7A	85 22 567		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0410	8	85 44 397		SWITCH HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0430	8A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0440	8A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0460	9	85 33 697		RESISTOR HEATING FAN, SPEED CONTROL,ONE TOUCH, RELAY FLASHER, IGNITION LOCK, RELAY CONVERTIBLE, TIME RELAY INTERIOR LIGHT DELAY	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0520	9A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0530	9A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0550	10	95 19 455		LEVEL ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0570	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0580	10B	95 19 430			X	Protection	Skydd	4
0600	11	95 19 414		PRESSURE SWITCH	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0620	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0630	11B	95 19 430			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
5	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J10

Contact housing etc
1992-

Kontakthus etc
1992-

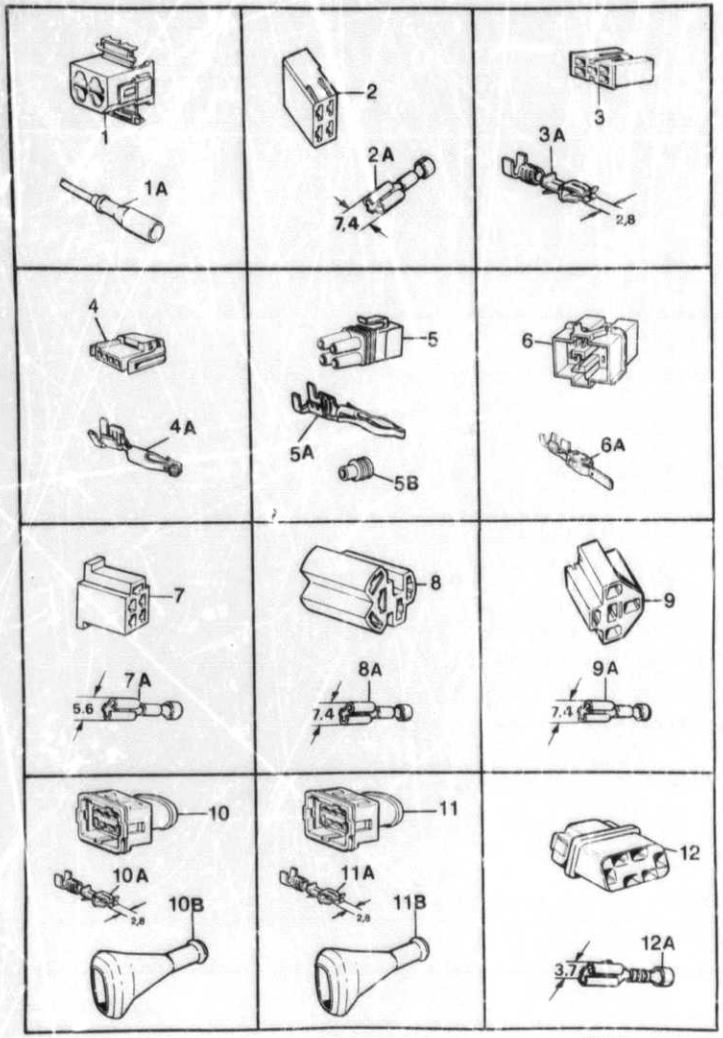

F3836 - AAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	12	85 40 569		SWITCH ELECTRIC MIRROR	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0660 0670	12A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
2A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J12

Contact housing etc 1992-

Kontakthus etc 1992-

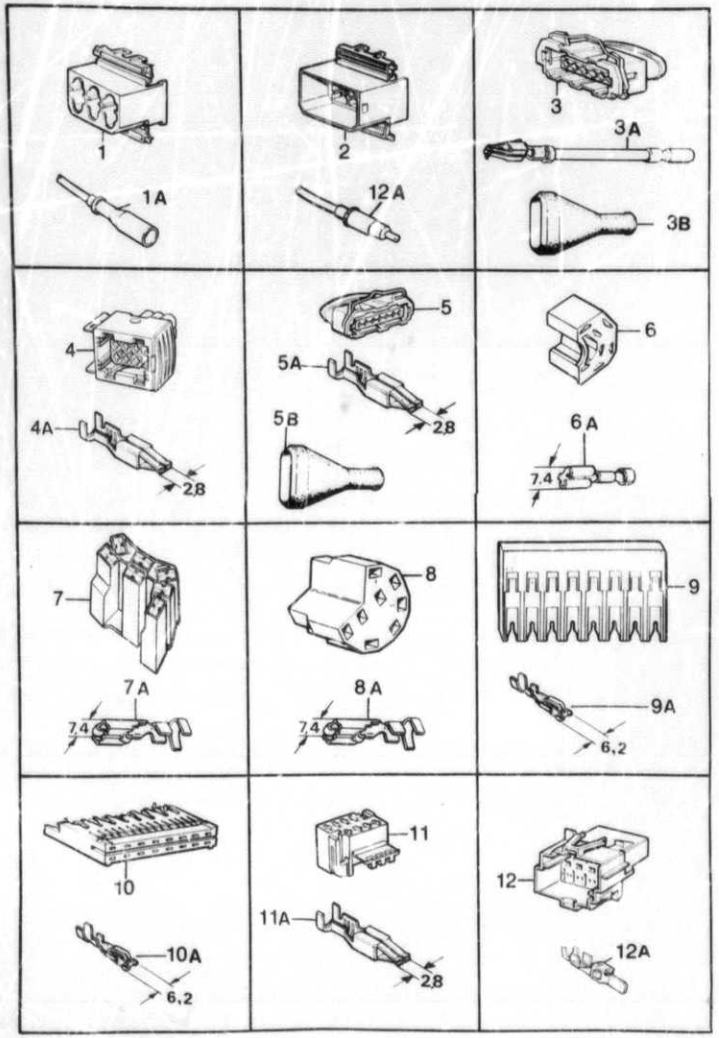

F3837 - AAC90

Pos	Part No/Art nr	X S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	95 03 475		LH 2.4,JOINT PIECE CABLE NETWORK ENGINE/FRONT	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
1A	85 47 804		AREA 2,5-4,0 MM2	X	Connector	Skarvstycke	5
2	95 06 668		JOINT PIECE CABLE NETWORK MOTOR/FRONT	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
2A	85 47 770		AREA 0,2-2,5 MM2	X	Connector	Skarvstycke	5
3	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
3A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
3B	85 82 082			X	Protection	Skydd	4
4	41 13 809		AMPLIFIER	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5	43 54 833	•	ELECTRONIC UNIT IGNITION SYSTEM, POWER STAGE	X	Connector housing 7-pole, female	Kontakthus 7-polig, hylsa	4
5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5B	85 74 048			X	Protection	Skydd	4
6	85 33 705		SWITCH WINDSHIELD WIPER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
6A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
7	41 76 772		SWITCH DIRECTION INDICATOR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
7A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
7A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
8	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
8A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
9	85 68 735		SN, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
9A	85 68 768		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
10	85 68 842		FOR 8568735, TAIL LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
10A	85 68 768		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
11	91 24 090		CONTROL UNIT THEFT ALARM	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
12	41 17 768		EL-PAD	X	Connector housing 8-pole, male	Kontakthus 8-polig, stift	4
12A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J14

Contact housing etc 1992-

Kontakthus etc 1992-

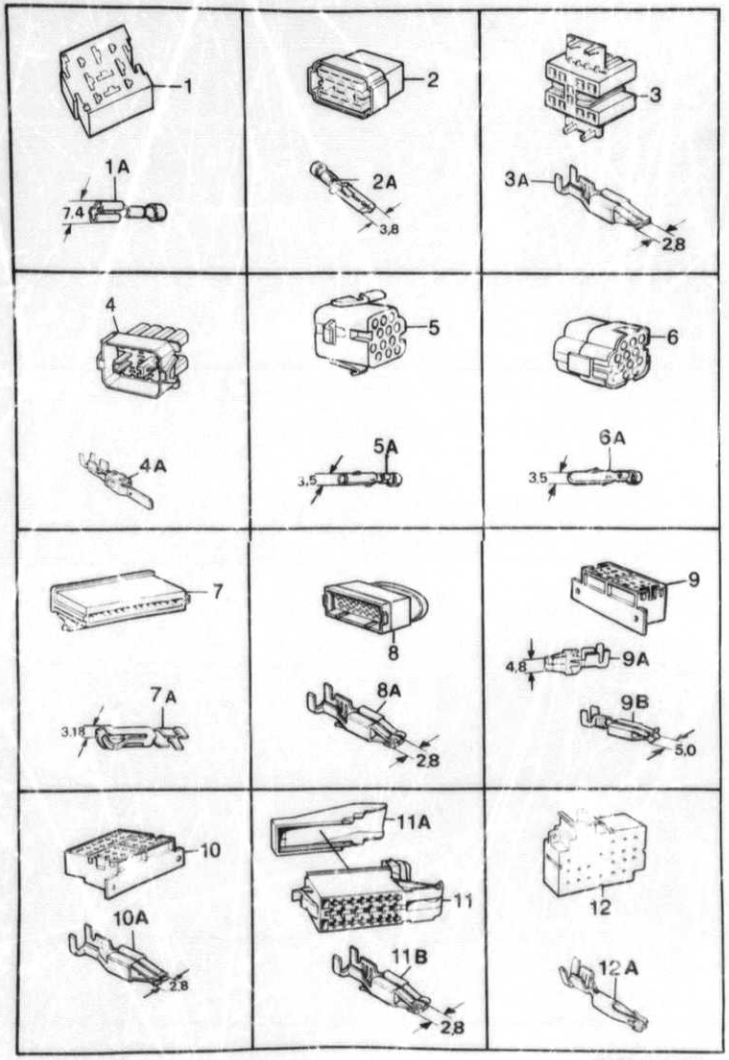

F4284 AAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 71 390		JOINT PIECE COWL	X	Bracket	Hållare	4
0020						9-pole, female	9-polig, hylsa	
0030	1A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	91 22 557		JOINT PIECE CABLE HARNESS REAR/INSTRUMENTS, JOINT PIECE CABLE HARNESS AIR-BAG/INSTRUMENTS	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0060								
0070								
0080								
0090	2A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0100								
0110	3	91 23 399		RADIO, EL-PAD DRIVER, SWITCH REAR DEMIST, SWITCH FOG LIGHT, SWITCH FLASHER,SWITCH FOG LIGHT FRONT EXTRA, JOINT PIECE CABLE HARNESS REAR/INSTRUMENT, JOINT PIECE CABLEHARNESS INSTRUMENT/ AIR-BAG, SWITCH HEAD-LIGHT LEVELLING, TEST TEST CONNECTOR AIR-BAG	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0120								
0130								
0140								
0150								
0160								
0170								
0180								
0190								
0200								
0210								
0220	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0230	3A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0240								
0250	4	41 17 461		RADIO, INSTRUMENTS, TEST ENGINE ELCTRONIC, ADJUSTMENT EL-PAD	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0260								
0270								
0280	4A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290								
0300	5	85 53 497		COWL	X	Connector housing 12-pole, female	Skarvhus 12-polig, hylsa	4
0310								
0320	5A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0330	5A	85 44 306		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0340								
0350	6	85 53 505		INSTRUMENTS	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0360								
0370	6A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0380								
0390	7	85 44 348		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0400								
0410	7A	85 60 278		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0420								
0430	8	41 09 278		ELECTRONIC UNIT SPEED CONTROL	X	Connector housing 15-pole, female	Kontakthus 15-polig, hylsa	4
0440								
0450	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0460								
0470	9	91 24 199		MAIN RELAY, RELAY FUEL PUMP, COWL, RELAY INSTRUMENTS	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0480								
0490								
0500	9A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0510	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0520	9B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0530								
0540	10	91 25 543		ABS, RELAY MAIN/ENGINE	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0550								
0560	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0570	10A	91 20 791		AREA, 2,0-4,5 MM2	X	Cable terminal	Kabelsko	5
0580								
0590	11	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0600								
0610	11A	40 67 617			X	Cover	Kåpa	4
0620	11B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0630								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J16

Contact housing etc 1992-

Kontakthus etc 1992-

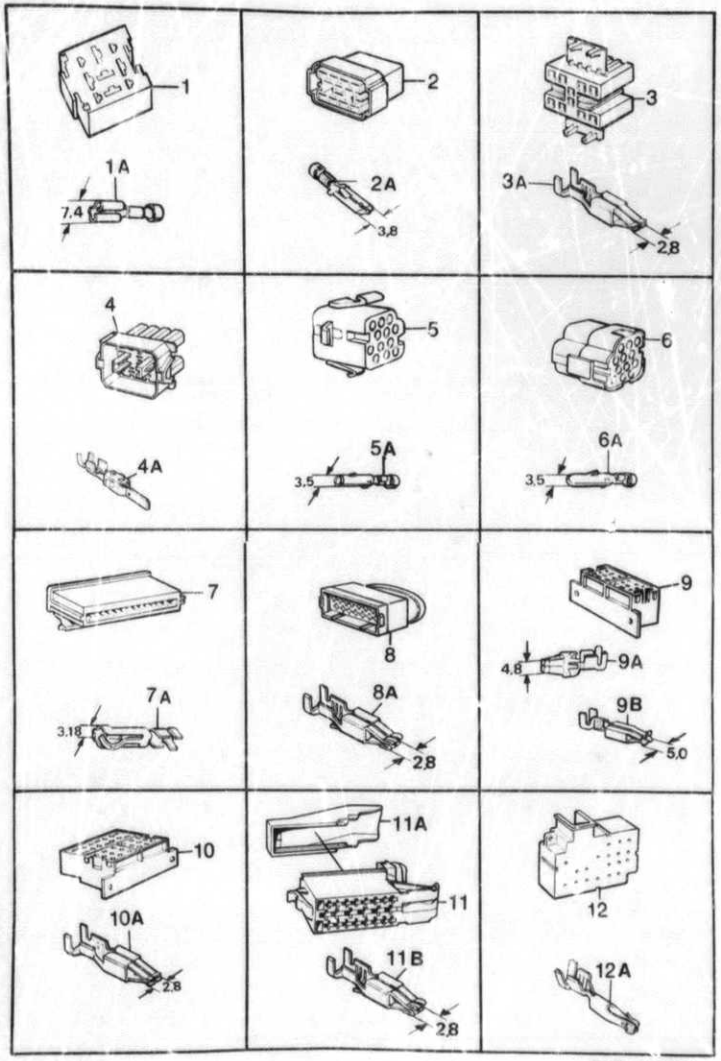

F4284 AAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0650								
0660	12A	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J18

Contact housing etc 1992-

Kontakthus etc 1992-

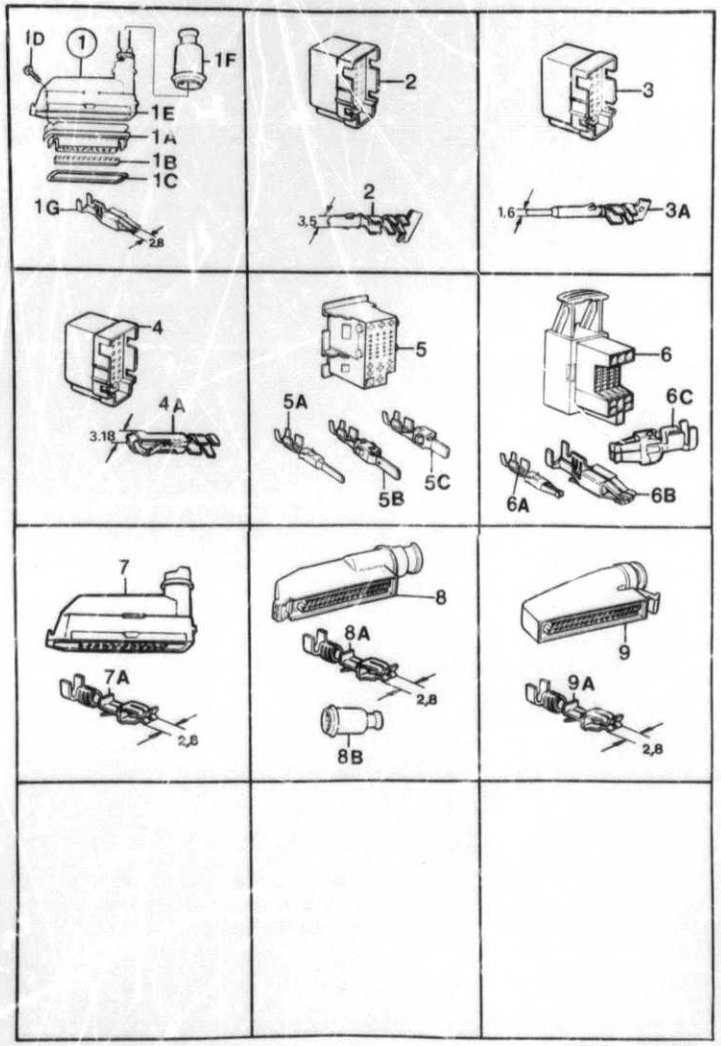

F3839 - AAC90

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 41 76 582		APC, EZK	X	Connector housing	Kontakthus	4
0020						25-pole, female	25-polig, hylsa	
0030	1A	85 87 420			1	.Contact housing	.Kontakthus	4
0040	1B	85 87 438		1)	1	.Striker plate	.Låsbleck	5
0050	1C	85 87 453		1)	1	.Seal	.Tätning	5
0060	1D	85 87 487		1)	1	.Screw	.Skruv	5
0070	1E	85 87 503		1)	1	.Cover	.Kåpa	4
0080	1F	85 87 511		1)	1	.Rubber protection	.Gummiskydd	4
0090	1G	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0100								
0110	2	85 44 215		WHITE, COWL	X	Contact housing	Kontakthus	4
0120						29-pole, male	29-polig stift	
0130	2A	85 44 322		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0140								
0150	3	85 44 231		RED, COWL	X	Contact housing	Kontakthus	4
0160						29-pole, male	29-polig stift	
0170	3A	85 93 956		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0180	3A	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	4	85 44 256		BLACK, COWL	X	Contact housing	Kontakthus	4
0210						29-pole, male	29-polig stift	
0220	4A	85 93 956		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230								
0240	5	41 73 803		CONNECTOR REAR CABLE HARNESS, CONNECTOR CABLE HARNESS INSTRUMENTS	X	Contact housing	Kontakthus	4
0250						33-pole, male	33-polig, stift	
0260								
0270	5A	41 15 457		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0280	5B	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290	5C	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	6	41 73 852		CONNECTOR REAR CABLE HARNESS, CONNECTOR CABLE HARNESS INSTRUMENTS	X	Contact housing	Kontakthus	4
0320						33-pole, female	33-polig, hylsa	
0330								
0340	6A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0350	6B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	6C	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0370								
0380	7	95 61 093		ELECTRONIC UNIT LH	X	Contact housing	Kontakthus	4
0390						35-pole, female	35-polig, hylsa	
0400	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0410								
0420	8	40 68 441		ELECTRONIC UNIT ABS	X	Contact housing	Kontakthus	4
0430						35-pole, female	35-polig, hylsa	
0440	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450	8B	85 87 511			X	Rubber protection	Gummiskydd	4
0460								
0470	9	95 64 618		ELECTRONIC UNIT LUCAS IGNITION SYSTEM	X	Contact housing	Kontakthus	4
0480						40-pole, female	40-polig, hylsa	
0490	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J20

Cable terminal
1990

Ledningssko
1990

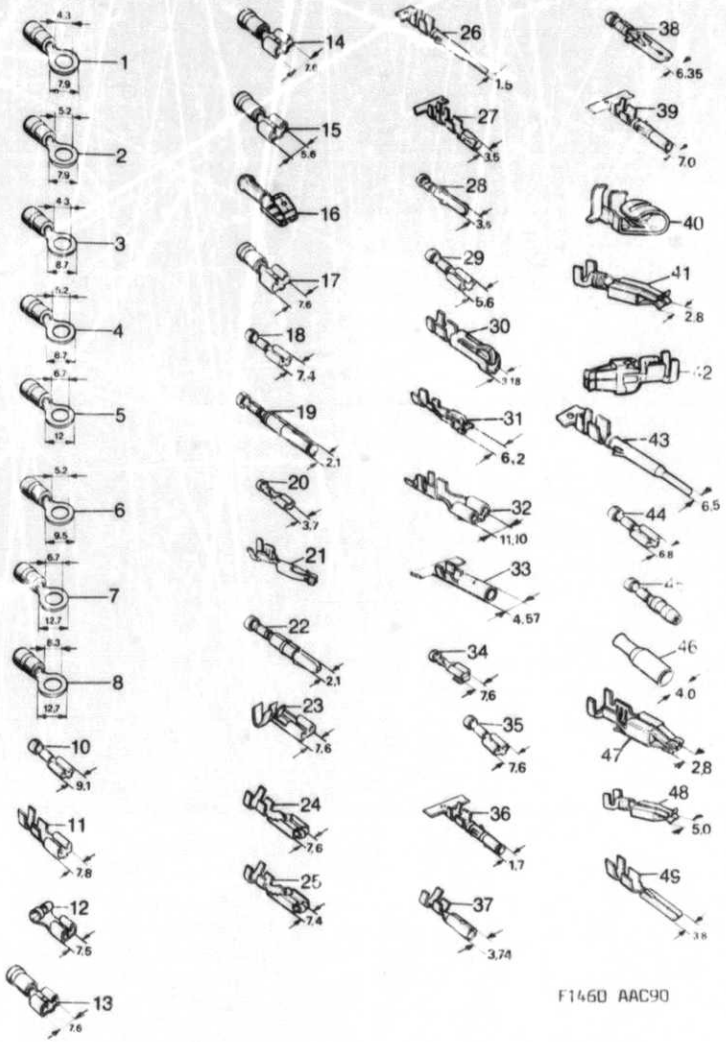

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		47), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		47), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		40), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		40), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		40), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	71 55 658		41), 40/253 210 009	X	Cable terminal	Kabelsko	5
0070	7	78 29 666		41), 40/253 211 007	X	Cable terminal	Kabelsko	5
0080	8	78 29 674		41), 40/253 212 005	X	Cable terminal	Kabelsko	5
0090								
0100	10	85 82 413		61), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
0110								
0120	11	71 55 716		45), FOR THERMO SWITCH, DOME LIGHT, FUSE BOX, LIGHT CONTROLS, LAMP SAFETY BELT WARNING, DOOR SWITCH, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0130								
0140								
0150								
0160								
0170								
0180	12	*71 96 710*		44), FOR THERMO SWITCH, DOOR SWITCH NLS	X	Cable terminal	Kabelsko	5
0190								
0200	13	78 29 609		47), 40/253 168 009	X	Cable terminal	Kabelsko	5
0210	14	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0220	15	*78 29 633*		40), 40/253 197 008, FOR HEADLIGHT NLS	X	Contact housing	Kontakthus	5
0230								
0240	16	78 29 641		40)	X	Manifold	Förgrening	3
0250	17	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0260	18	79 68 068		48), FOR EL-CENTRAL, FOR CONTACT HOUSING, 7155096, 8533705,8544397	X	Cable terminal	Kabelsko	5
0270								
0280								
0290	18	*79 72 029*		38), IN FUSE BOX, FUEL PUMP, IN CONTACT HOUSING 7155096, 8533697 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0300								
0310								
0320	18	*85 82 397*		38), FOR APC, FUSE BOX, FOR CONTACT HOUSING, 7155120 NLS	X	Cable terminal	Kabelsko	5
0330								
0340								
0350	18	85 82 546		48),FOR CONTACT HOUSING 7342892	X	Cable terminal	Kabelsko	5
0360								
0370	19	85 22 583		51),FOR CONTACT HOUSING 8516932, 8553869,8590192	X	Cable terminal	Kabelsko	5
0380								
0390	20	85 30 107		44), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0400								
0410	20	*85 09 846*		54),FOR CONTACT HOUSING 8378630, 8540569,8571390 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0420								
0420								
0430	21	95 27 771		FOR CONTACT HOUSING, 9577763	X	Cable terminal	Kabelsko	5
0440								
0450	22	85 16 817		44), FOR CONTACT HOUSING 8530081	X	Cable terminal	Kabelsko	5
0460								

38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
51. Area 0,8-3,0 MM2.
54. Area 0,5-1,4 MM2.
61. Area 1,3-3,4 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-J22 Cable terminal 1990

Ledningssko 1990

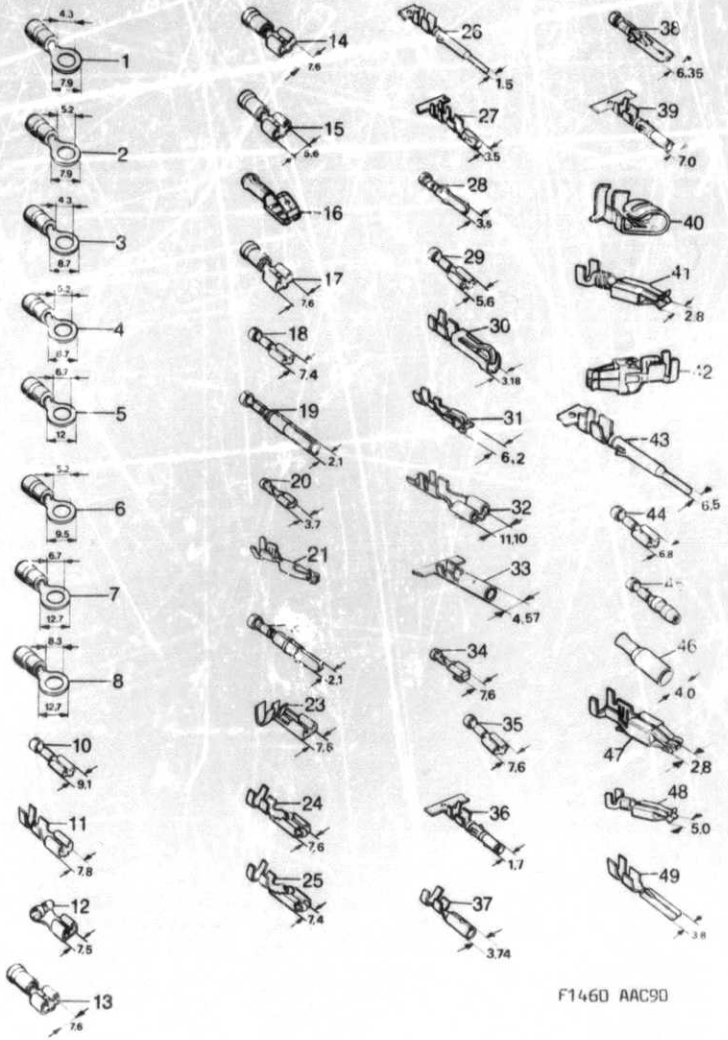

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	24	85 60 476		44) FORGROUND, TAIL LIGHT, THERMOSTAT AC, LOW PRESSURE SWITCH, MICRO SWITCH, JOINT PIECE INTERIOR LIGHT, TRUNK LID, FOR CONTACT HOUSING, 8541229,8544363	X	Cable terminal	Kabelsko	5
0540	25	85 41 211		56), FOR FUSE BOX, FAN UNIT, JOINT PIECE, LIGHT GLOVE BOX, MICRO SWITCH, THERMOSTAT AC, FOR CONTACT HOUSING, 8541229, 8544363,8574949	X	Cable terminal	Kabelsko	5
0600	25	85 60 476		57), JOINT PIECE,GROUND, THERMOSTAT AC, LOW PRESSURE SWITCH, TAIL LIGHT, MICRO SWITCH,FOR CONTACT FOR HOUSING, 8541229,8544363 8574949,9507658	X	Cable terminal	Kabelsko	5
0670	26	85 82 595		58), FOR FUSE BOX, FOR CONTACT HOUSING, 8544223, 853497 8561631	X	Cable terminal	Kabelsko	5
0700	26	85 93 356		38),FOR CONTACT HOUSING 8544231	X	Cable terminal	Kabelsko	5
0720	26	95 19 398		38),FOR CONTACT HOUSING 9519406	X	Cable terminal	Kabelsko	5
0740	27	85 44 306		59),FOR EL-CENTRAL, FOR CONTACT HOUSING 8544207, 8544223	X	Cable terminal	Kabelsko	5
0770	27	85 82 595		58), FOR FUSE BOX, THEFT ALARM, HORN FOR CONTACT HOUSING, 8544249	X	Cable terminal	Kabelsko	
0800	28	85 82 603		58), FOR FUSE BOX, JOINT PIECE INSTRUMENT, JOINT PIECE COWL, AC, FOR CONTACT HOUSING, 8544215, 8544231,8544256 8553505, 8561623	X	Cable terminal	Kabelsko	5
0860	28	85 44 322		58),FOR CONTACT HOUSING 8544215, 8544231	X	Cable terminal	Kabelsko	5
0890	29	85 82 439		47),FOR PRESSURE SWITCH, FOR CONTACT HOUSING, 8533184	X	Cable terminal	Kabelsko	5
0910	29	85 22 567		42), FOR STARTER, FOR CONTACT HOUSING, 8516890	X	Cable terminal	Kabelsko	5
0930	30	85 60 278		44), FOR CONTACT HOUSING 8544348	X	Cable terminal	Kabelsko	5
0950	31	85 68 768		44), FOR CONTACT HOUSING 8568842, 8568735	X	Cable terminal	Kabelsko	5
0970	32	85 69 139		48), FUSE BOX	X	Cable terminal	Kabelsko	5
0980	32	85 88 188		64), EL-DISTRIBUTION UNIT	X	Cable terminal	Kabelsko	5
0990								

38. Area 1,0-2,5 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
64. Area 6,0-10,0 MM2.

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 2-G02
4 Transmission 3-A02
5 Brakes 3-D02
6 Front assembly, Steering 3-F02
7 Suspension, Wheels 3-H02
8A Body, external 4-A02
8B Body, internal 5-A02
8C Body, heating and ventilation 5-J02
9 Tool, Labels 5-L02
10 Numerical register 6-A02


3B GROUP INDEX

Connectors 2-G06
Cable terminals 2-J20

2-J24

Cable terminal
1990

Ledningssko
1990

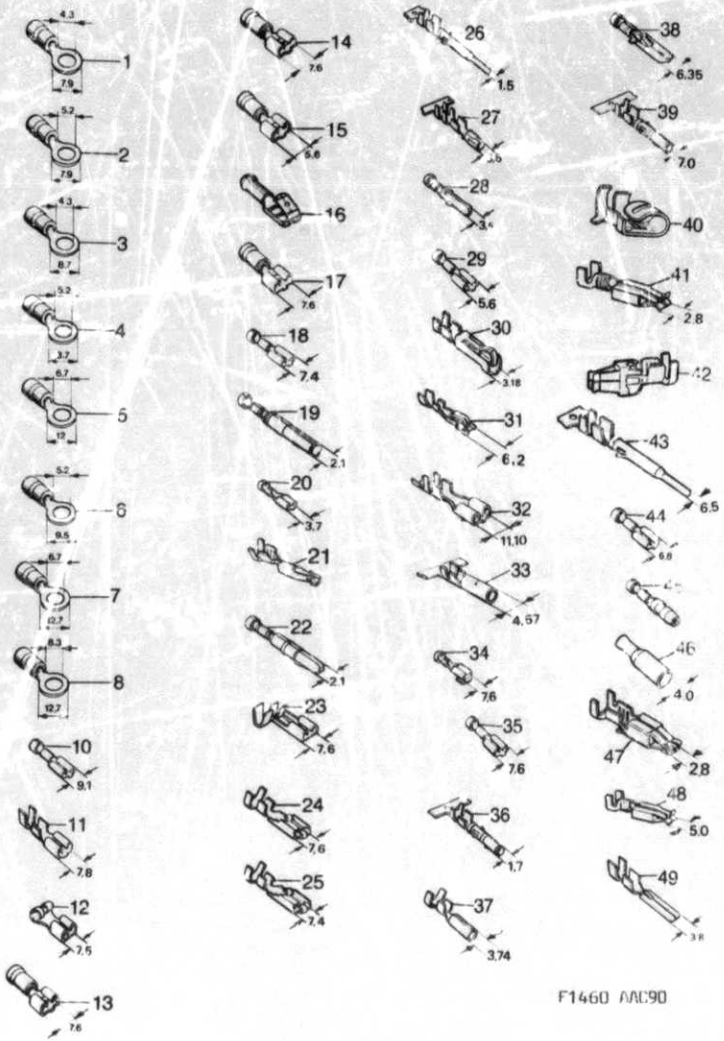

F1460 AAC90

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1000	33	85 72 596		54), COMPRESSOR	X	Cable terminal	Kabelsko	5
1010	34	85 03 286		46), FUSE BOX	X	Cable terminal	Kabelsko	5
1020	35	*85 59 205*		48), FUSE BOX. FOR CONTACT HOUSING 9124090 NLS	X	Cable terminal	Kabelsko	5
1040	35	85 14 036		38), LIGHT CONTROLS, FUSE BOX, FOR CONTACT HOUSING, 8516916,8521544	X	Cable terminal	Kabelsko	5
1070	36	85 79 393		38), FUSE BOX	X	Cable terminal	Kabelsko	5
1080	36	85 87 560		39),FOR CONTACT HOUSING 8544207, 8544223	X	Cable terminal	Kabelsko	5
1100	36	95 25 817		53),FOR CONTACT HOUSING 8525809	X	Cable terminal	Kabelsko	5
1120	37	79 71 708		47), FUSE BOX, FOR CONTACT HOUSING, 7155112 8533705	X	Cable terminal	Kabelsko	5
1150	38	85 16 957		48),FOR CONTACT HOUSING 8558546	X	Cable terminal	Kabelsko	5
1170	38	85 22 542		43), JOINT PIECE CABLE HARNESS TRUNK/REAR EL-PAD, SWITCH SEAT, FOR CONTACT HOUSING, 9502758 9502758, 9503012	X	Cable terminal	Kabelsko	5
1220	38	85 93 089		44), FOR EL-PAD, DRIVERS SEAT, FOR CONTACT HOUSING, 9503012	X	Cable terminal	Kabelsko	5
1250	39	85 87 552		47),FOR CONTACT HOUSING, 8544207, 8544223,8544249	X	Cable terminal	Kabelsko	5
1270	40	85 82 090		47), FOR SWITCH WINDOW REGULATOR, JOINT PIECE, REGULATOR, FOR CONTACT HOUSING, 8582116	X	Cable terminal	Kabelsko	5
1310	41	91 20 775		44),FOR CONTACT HOUSING, 8544249	X	Cable terminal	Kabelsko	5
1330	42	91 20 783		38),FOR CONTACT HOUSING 9124199	X	Cable terminal	Kabelsko	5
1350	43	85 93 964		47), FOR FUSE BOX, JOINT PIECE CABLE HARNESS SPEED CONTROL/FRONT FOR CONTACT HOUSING 8544215, 8544231	X	Cable terminal	Kabelsko	5
1400	44	91 20 791		56), FOR CONTACT HOUSING 8539363, 8544256,9124165 9124191, 9125543,9507658 9519422	X	Cable terminal	Kabelsko	5
1440	45	85 81 951		46), FOR THEFT ALARM	X	Cable terminal	Kabelsko	3
1450	46	85 82 579		47), HORN	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
43. Area 0,6-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
53. Area 0,2-0,56 MM2
54. Area 0,5-1,4 MM2.
56. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K02

Cable terminal
1990

Ledningssko
1990

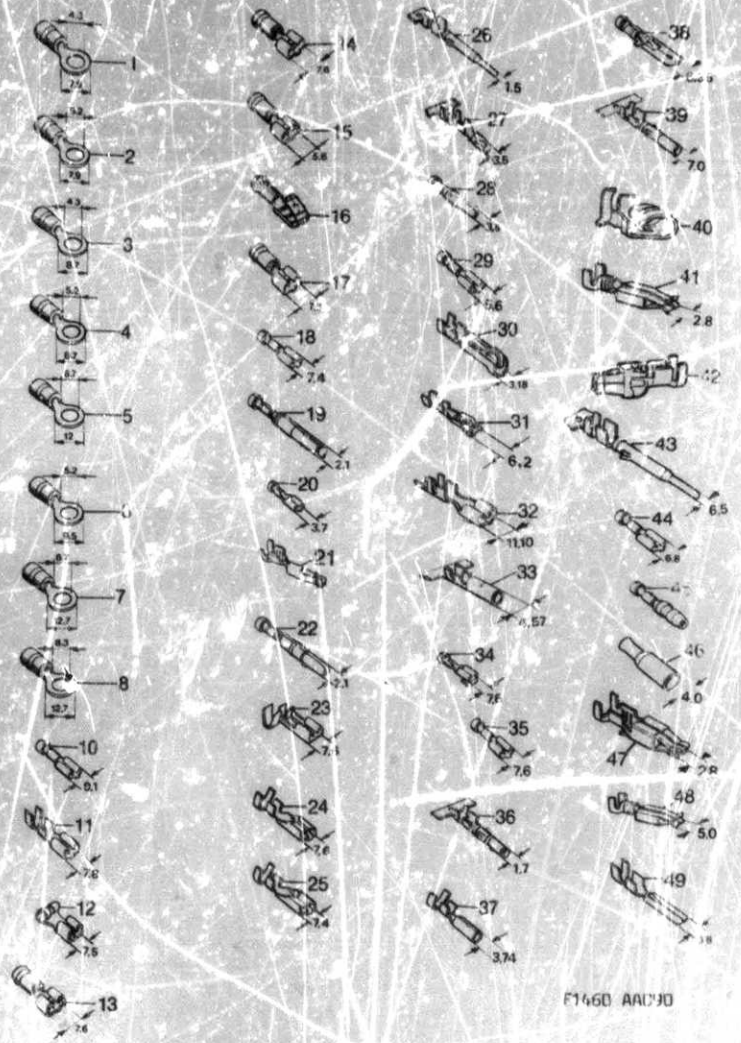

2000	Pos	Part No/Artikel	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S I
1460	47	91 20 957		38), FUSE BOX JOINT PIECE CABLE HARNESS TRUNK DOOR/RUNK DOOR, FOR CONTACT HOUSING, 4068441, 8519414,8593899 8593907, 8593915,8593931 8593949, 8597064,9121955 9121185, 9514803,9515455 9561093,9564618	X	Cable terminal	Kabelsko	5
1470								
1480								
1490								
1500								
1510								
1520								
1530								
1540								
1550	48	95 21 972		44), JOINT PIECE COWL FOR CONTACT HOUSING, 9124199, 9521972	X	Cable terminal	Kabelsko	5
1560								
1570								
1580	48	95 21 998		56), FOR FUSE BOX	X	Cable terminal	Kabelsko	5
1590	49	95 52 109		62), JOINT PIECE CABLE HARNESS TRUNK/REAR 9122557, 9124199,9518713 9518739	X	Cable terminal	Kabelsko	5
1600								
1610								
1620								

38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Trim, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K04

Cable terminal
1990

Ledningssko
1990

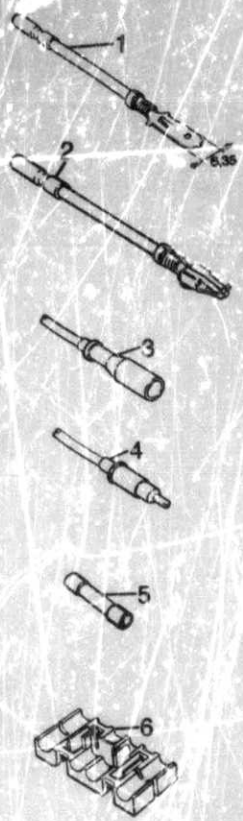

F1461 AAC90

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0050	1	85 22 542		43), FOR FUSE BOX, JOINT PIECE, FOR CONTACT HOUSING, 7155104 7155120, 7342900,8558546	X	Cable terminal	Kabelsko	5
0060	2	85 22 617		43), JOINT PIECE, FOR CONTACT HOUSING, 8533821	X	Cable terminal	Kabelsko	5
0070	3	85 47 756		65), AC COMPRESSOR, MOTOR CENTRAL LOCK, MOTOR CENTRAL LOCK LID, MOTOR COOLING FAN, FOR CONTACT HOUSING, 9519679	X	Connector	Skarvstycke	5
0120	3	85 47 804		56), FOR CONTACT HOUSING, 9503277, 9503319,9503418 9503434, 9503475,9519679	X	Connector	Skarvstycke	5
0150	4	85 47 770		65), FOR JOINT PIECE, FOR CONTACT HOUSING, 9501685, 9503327,9503426 9506668	X	Connector	Skarvstycke	5
0190	4	85 47 788		56), FOR JOINT PIECE, JOINT PIECE CABLE HARNESS DOOR/EL-DISTRIBUTION UNIT, FOR CONTACT HOUSING, 9501685,9503425 9506668	X	Connector	Skarvstycke	5
0250	5	71 55 140		40), 40/253 188 007	X	Connector housing	Skarvhus	5
0260	5	71 55 203		35), 40/253 164 008	X	Connector housing	Skarvhus	5
0270	5	71 55 633		41), 40/253 221 006	X	Connector housing	Skarvhus	5
0280	6	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
43. Area 0,8-2,5 MM2.
46. Area 0,8-2,1 MM2.
56. Area 2,5-4,0 MM2.
65. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labour	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K06

Cable terminal
1991

Ledningssko
1991

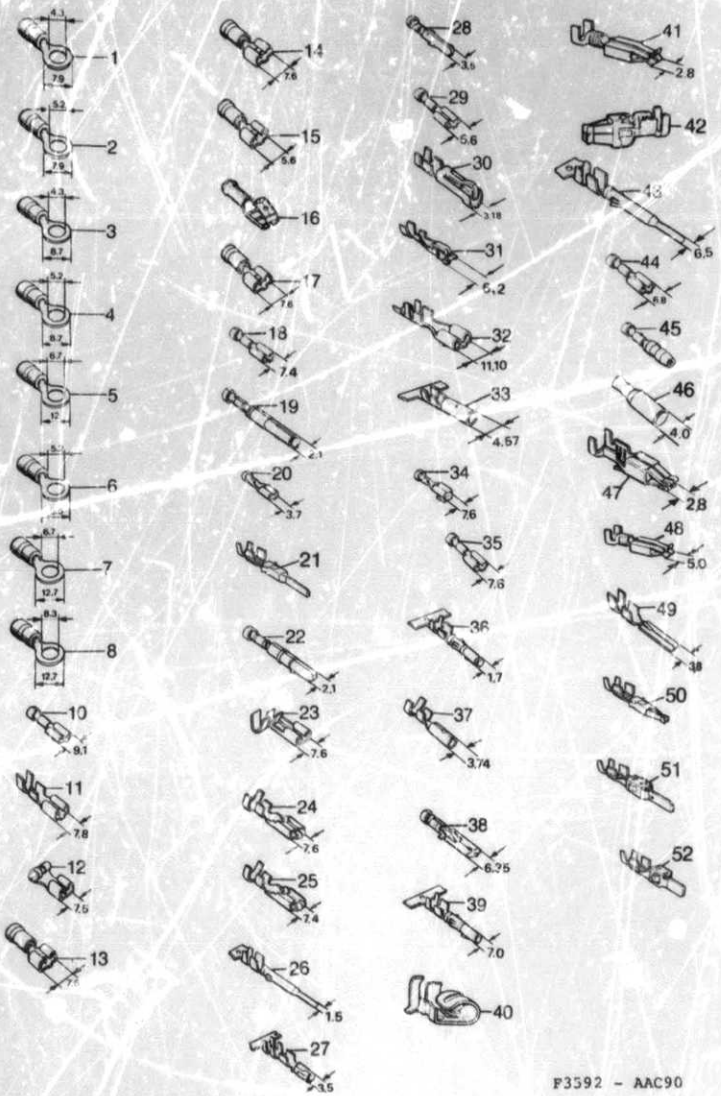

2190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		47), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		47), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		40), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		40), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		40), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	71 55 658		41), 40/253 210 009	X	Cable terminal	Kabelsko	5
0070	7	78 29 666		41), 40/253 211 007	X	Cable terminal	Kabelsko	5
0080	8	78 29 674		41), 40/253 212 005	X	Cable terminal	Kabelsko	5
0090								
0100	10	85 82 413		61), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
0110								
0120	11	71 55 716		45), FOR THERMO SWITCH, DOME LIGHT, FUSE BOX, LIGHT CONTROLS, LAMP SAFETY BELT WARNING, DOOR SWITCH, FOR CONTACT HOUSING 851691б	X	Cable terminal	Kabelsko	5
0180	12	*71 96 710*		44), FOR THERMO SWITCH NLS	X	Cable terminal	Kabelsko	5
0190	13	78 29 609		47), 40/253 168 009	X	Cable terminal	Kabelsko	5
0200	14	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0210	15	*78 29 633*		40), 40/253 197 008, FOR HEADLIGHT NLS	X	Contact housing	Kontakthus	5
0220								
0230	16	78 29 641		40)	X	Manifold	Förgrening	3
0240	17	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0250	18	78 68 068		48), FOR EL-CENTRAL, FOR CONTACT HOUSING, 7155096, 8533705,8544397	X	Cable terminal	Kabelsko	5
0280	18	*79 72 029*		38), IN FUSE BOX, FUEL PUMP, IN CONTACT HOUSING 7155096, 8533697 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0310	18	*85 82 397*		38), FOR APC, FUSE BOX, FOR CONTACT HOUSING, 7155120 NLS	X	Cable terminal	Kabelsko	5
0340	18	85 82 546		48),FOR CONTACT HOUSING 7342892	X	Cable terminal	Kabelsko	5
0360	18	85 22 534		47), FOR CONTACT HOUSING 7155096, 8530099	X	Cable terminal	Kabelsko	5
0380	19	85 22 583		51), FOR CONTACT HOUSING 8516932, 8553869,8590192	X	Cable terminal	Kabelsko	5
0400	20	85 30 107		44), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0420	20	*85 09 846*		54), FOR CONTACT HOUSING 8378630, 8540569,8571390 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0440	21	41 15 457		44), FOR CONTACT HOUSING 4173803	X	Cable terminal	Kabelsko	5
0460	22	85 16 817		44), FOR CONTACT HOUSING 8530081	X	Cable terminal	Kabelsko	5
0480	23	85 22 526		38), FOR CONTACT HOUSING 8521692	X	Cable terminal	Kabelsko	5
0490								

38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
51. Area 0,8-3,4 MM2.
54. Area 0,5-1,4 MM2.
61. Area 1,3-3,4 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K08

Cable terminal 1991

Ledningssko 1991

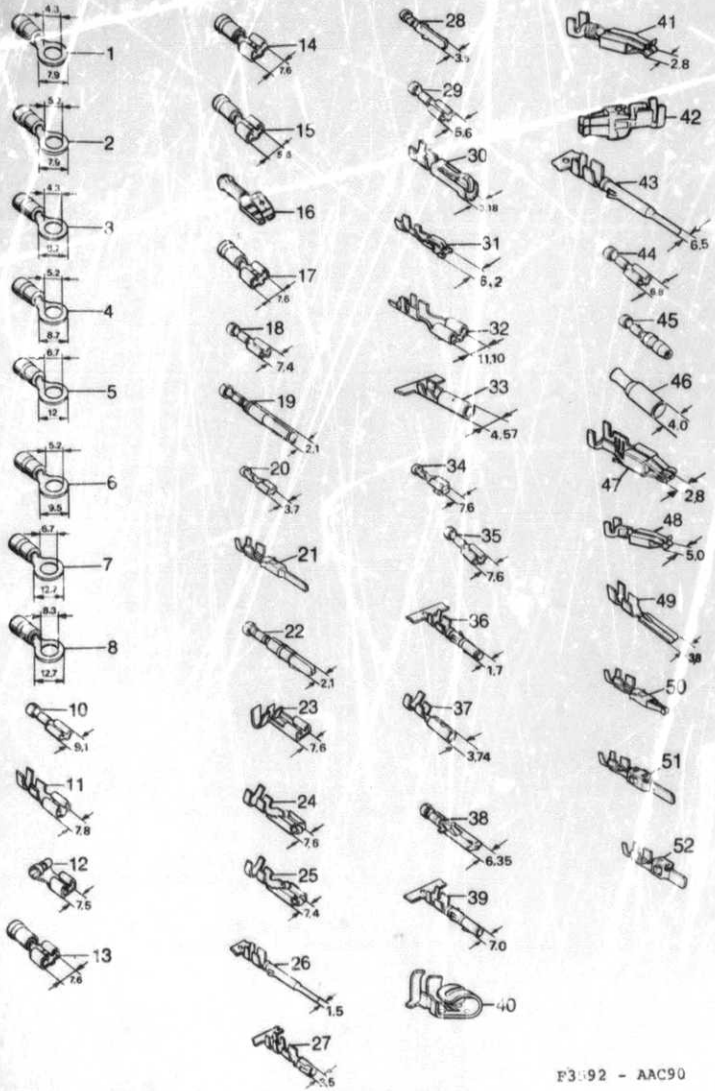

P3592 - AAC90

2K0	Pos	Part No	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	24	85 60 476		44), FOR GROUND TAIL LIGHT, THERMOSTAT AC, LOW PRESSURE SWITCH, MICRO SWITCH, JOINT PIECE INTERIOR LIGHT, TRUNK LID, FOR CONTACT HOUSING, 8541229,8544363 4113122	X	Cable terminal	Kabelsko	5
0580	25	85 41 211		58), FOR FUSE BOX, FAN UNIT, JOINT PIECE, MICRO SWITCH, THERMOSTAT AC, FOR CONTACT HOUSING, 8541229	X	Cable terminal	Kabelsko	5
0630	25	85 60 476		57), JOINT PIECE,GROUND, THERMOSTAT AC, LOW PRESSURE SWITCH, TAIL LIGHT, MICRO SWITCH,FOR CONTACT FOR HOUSING, 8541229,8544363 8574949,9507658	X	Cable terminal	Kabelsko	5
0700	26	85 82 595		58), FOR FUSE BOX, FOR CONTACT HOUSING, 853497, 8544207,8544249 8561631	X	Cable terminal	Kabelsko	5
0740	26	95 19 398		38), FOR CONTACT HOUSING 9519406	X	Cable terminal	Kabelsko	5
0760	27	85 44 306		59), FOR EL-CENTRAL, FOR CONTACT HOUSING 8544207, 8544223	X	Cable terminal	Kabelsko	5
0790	27	85 82 595		58), FOR FUSE BOX, THEFT ALARM, HORN, FOR CONTACT HOUSING, 8544249	X	Cable terminal	Kabelsko	5
0820	28	95 82 603		58), FOR FUSE BOX, JOINT PIECE INSTRUMENT, JOINT PIECE COWL, AC, FOR CONTACT HOUSING, 8544215, 8544256,8553505 8561623	X	Cable terminal	Kabelsko	5
0880	28	85 44 322		58), FOR CONTACT HOUSING 8544215	X	Cable terminal	Kabelsko	5
0900	28	*85 44 314*		58), FOR INSTRUMENTS NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0910	29	85 82 439		47),FOR PRESSURE SWITCH, FOR CONTACT HOUSING, 8533184	X	Cable terminal	Kabelsko	5
0940	29	85 22 567		42), FOR STARTER, FOR CONTACT HOUSING, 8516890	X	Cable terminal	Kabelsko	5
0960	30	85 60 278		44), FOR CONTACT HOUSING 8544348	X	Cable terminal	Kabelsko	5
0980	31	85 68 768		44), FOR CONTACT HOUSING 8568842, 8568735	X	Cable terminal	Kabelsko	5
1000	32	85 69 139		48), FUSE BOX	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

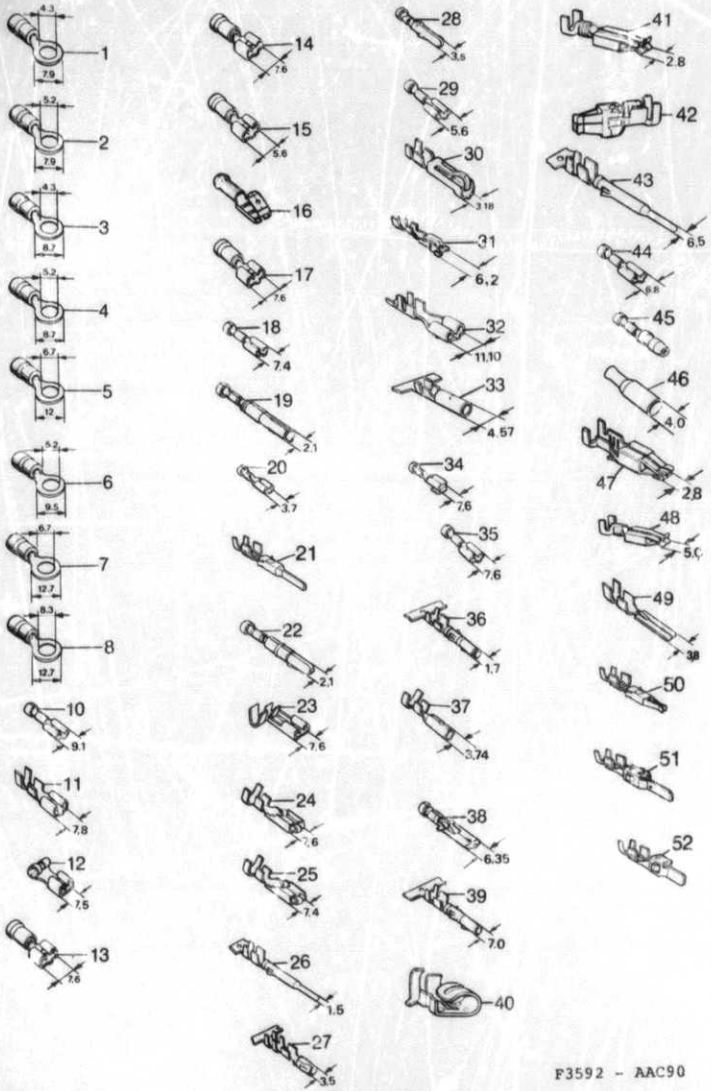

F3592 - AAC90

Pos	Part No/Art nr	Y S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
32	85 88 188		64), EL-DISTRIBUTION UNIT	X	Cable terminal	Kabelsko	5
33	85 72 596		54), COMPRESSOR	X	Cable terminal	Kabelsko	5
34	85 03 286		46), FUSE BOX	X	Cable terminal	Kabelsko	5
35	*85 59 205*		48), FOR CONTACT HOUSING 9124090 NLS	X	Cable terminal	Kabelsko	5
35	85 14 036		38), LIGHT CONTROLS, FUSE BOX, FOR CONTACT HOUSING, 8516916,8521544	X	Cable terminal	Kabelsko	5
36	85 79 393		38), FUSE BOX	X	Cable terminal	Kabelsko	5
36	85 87 560		38), FOR CONTACT HOUSING 8544207, 8544249	X	Cable terminal	Kabelsko	5
37	79 71 708		47), FUSE BOX, FOR CONTACT HOUSING, 7155096 7155112	X	Cable terminal	Kabelsko	5
38	85 16 957		48), FOR CONTACT HOUSING 8558546	X	Cable terminal	Kabelsko	5
38	85 22 542		43), JOINT PIECE CABLE HARNESS TRUNK/REAR, EL-PAD, SWITCH SEAT, FOR CONTACT HOUSING. 9124181 9502758, 9502758,9503012	X	Cable terminal	Kabelsko	5
38	85 93 089		44), FOR CONTACT HOUSING 9124181	X	Cable terminal	Kabelsko	5
39	85 87 552		47), FOR CONTACT HOUSING 8544207, 8544223,8544249 9559790	X	Cable terminal	Kabelsko	5
40	85 82 090		47), FOR SWITCH WINDOW REGULATOR, JOINT PIECE	X	Cable terminal	Kabelsko	5
41	91 20 775		44), FOR CONTACT HOUSING 8544249	X	Cable terminal	Kabelsko	5
42	91 20 783		38), FOR CONTACT HOUSING 4173803, 4173852,9124199	X	Cable terminal	Kabelsko	5
43	85 93 964		47), FOR FUSE BOX, JOINT PIECE CABLE HARNESS SPEED CONTROL/FRONT FOR CONTACT HOUSING 8544231, 8544256	X	Cable terminal	Kabelsko	5
44	91 20 791		56), FOR CONTACT HOUSING 9124165, 9124191,9125543 9507658, 9519422	X	Cable terminal	Kabelsko	5
45	85 81 951		46), FOR THEFT ALARM	X	Cable terminal	Kabelsko	3
46	85 82 579		47), HORN	X	Cable terminal	Kabelsko	5
47	91 20 957		38), FUSE BOX, JOINT PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR, FOR CONTACT HOUSING, 4060893, 4068441,4173803 4173852, 8519414,8539363 8586802, 8593899,8593907 8593915, 8593931,8597064 9123955, 9514803,9519455 9561093, 9564618	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
54. Area 0,5-1,4 MM2.
56. Area 2,5-4,0 MM2.
64. Area 6,0-10,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K12

Cable terminal
1991

Ledningssko
1991

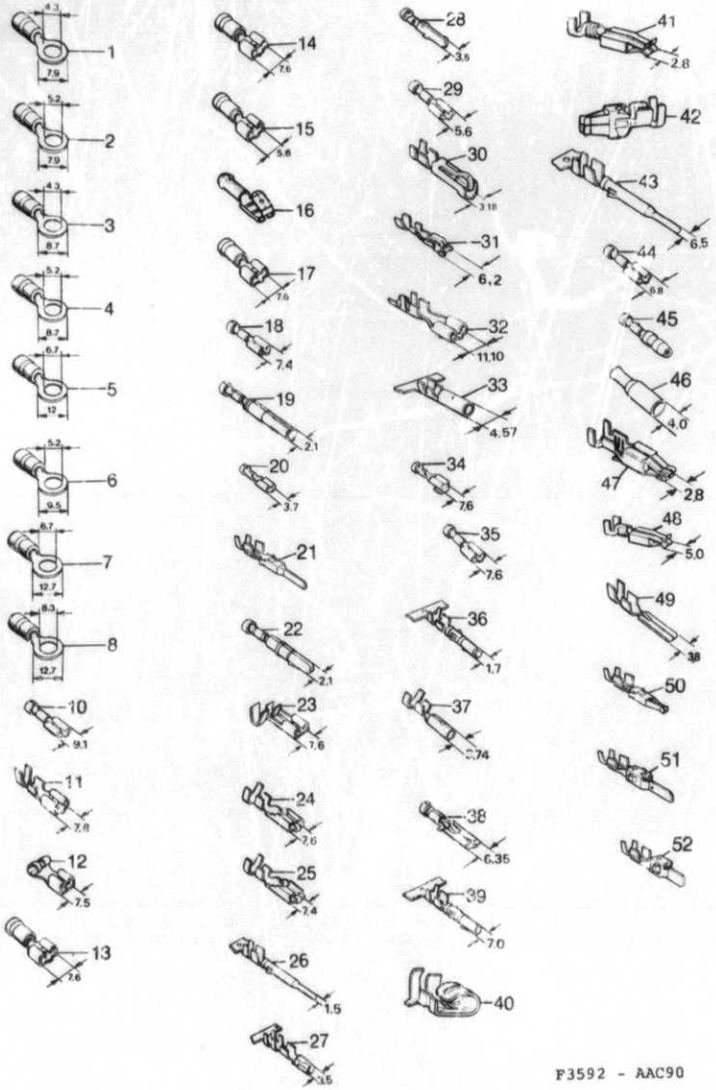

F3592 - AAC90

∠100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Anta.	Description	Benämning	S L
1540	48	95 21 972		44), JOINT PIECE COWL, FOR CONTACT HOUSING, 9124199, 9521972	X	Cable terminal	Kabelsko	5
1550								
1560								
1570	48	95 21 998		56), FOR FUSE BOX	X	Cable terminal	Kabelsko	5
1580	49	95 52 100		62), JOINT PIECE CABLE HARNESS TRUNK/REAR, 9122557, 9124199,9518713 9518739	X	Cable terminal	Kabelsko	5
1590								
1600								
1610								
1620	50	41 15 499		44), FOR CONTACT HOUSING 4173852	X	Cable terminal	Kabelsko	5
1630								
1640	51	41 15 077		38), FOR CONTACT HOUSING 4173803	X	Cable terminal	Kabelsko	5
1650								
1660	52	41 15 580		38), FOR CONTACT HOUSING 4173803	X	Cable terminal	Kabelsko	5
1670								

38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K14 Cable terminal 1991

Ledningssko 1991

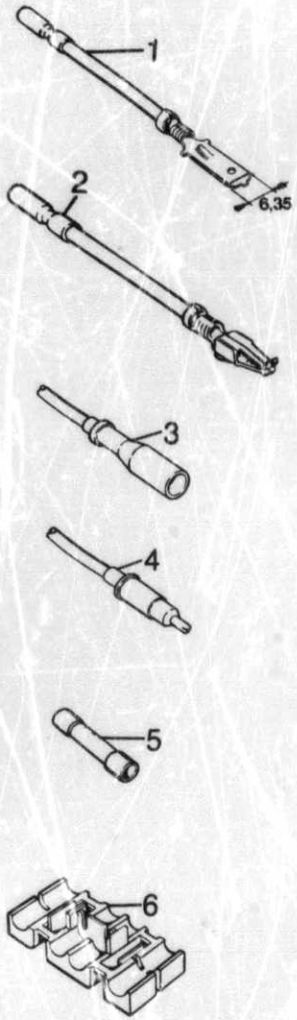

F3069 AAC90

2150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 22 542		43), FOR FUSE BOX,	X	Cable terminal	Kabelsko	5
0020				JOINT PIECE, FOR CONTACT				
0030				HOUSING, 7155104,7155120				
0040				7342900, 8558546,9124181				
0050	2	85 22 617		43), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0060				CONTACT HOUSING, 8[illegible]821				
0070	3	85 47 796		65), AC COMPRESSOR,	X	Connector	Skarvstycke	5
0080				MOTOR CENTRAL LOCK,				
0090				MOTOR CENTRAL LOCK LID,				
0100				MOTOR COOLING FAN, FOR				
0110				CONTACT HOUSING, 9519679				
0120	3	85 47 804		56), FOR CONTACT HOUSING,	X	Connector	Skarvstycke	5
0130				9503277, 9503418,9503434				
0140				9503475, 9519679				
0150	4	85 47 770		65), FOR JOINT PIECE,	X	Connector	Skarvstycke	5
0160				FOR CONTACT HOUSING,				
0170				9501685, 9503426,9506668				
0190	4	85 47 788		56), FOR JOINT PIECE,	X	Connector	Skarvstycke	5
0200				JOINT PIECE CABLE HAR-				
0210				NESS DOOR/EL-DISTRIBU-				
0220				TION UNIT, FOR CONTACT				
0230				HOUSING, 9503426,9506668				
0250	5	71 55 146		40), 40/253 188 007	X	Connector housing	Skarvhus	5
0260	5	71 55 203		35), 40/253 164 008	X	Connector housing	Skarvhus	5
0270	5	71 55 633		41), 40/253 221 006	X	Connector housing	Skarvhus	5
0280	6	85 21 668		43)	X	Cable joint	Ledningsförbindning	3


35. Area 0,3-1,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
43. Area 0,8-2,5 MM2.
46. Area 0,8-2,1 MM2.
56. Area 2,5-4,0 MM2.
65. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

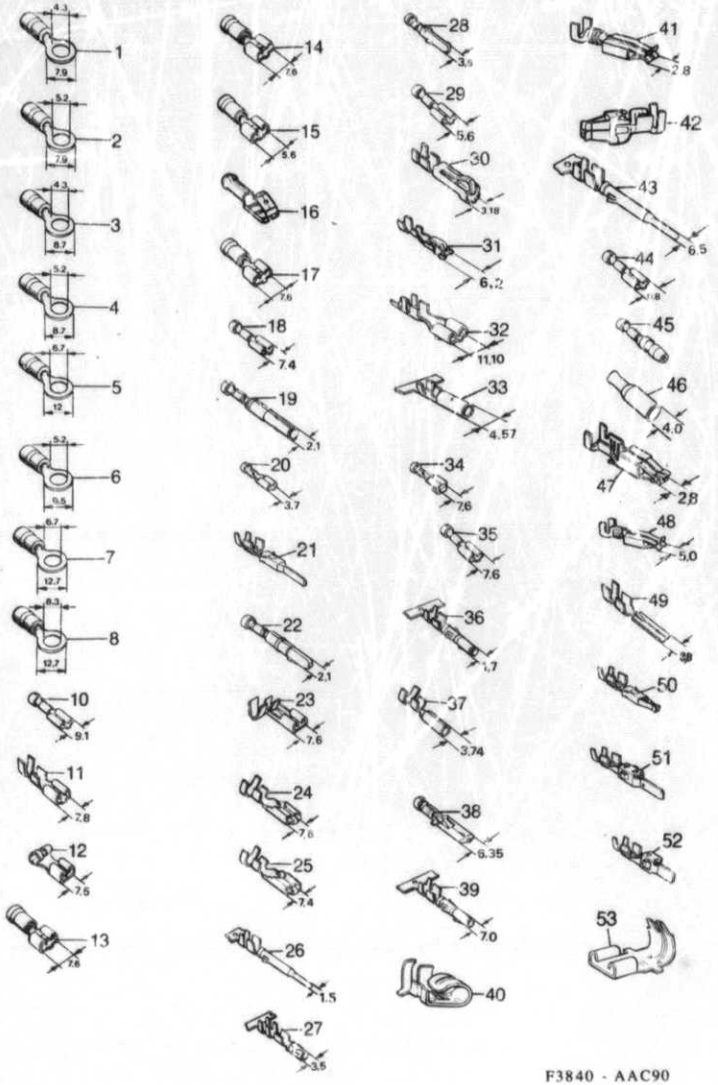

F3840 - AAC90

Wiring and fuses

2-K16

Cable terminal 1992-

Ledningar och säkringar

Ledningssko 1992-

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	3 L
0010	1	71 55 211		47), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		47), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		40), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		40), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		40), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	71 55 658		41), 40/253 210 009	X	Cable terminal	Kabelsko	5
0070	7	78 29 666		41), 40/253 211 007	X	Cable terminal	Kabelsko	5
0080	8	78 29 674		41), 40/253 212 005	X	Cable terminal	Kabelsko	5
0090								
0100	10	85 82 413		61), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
0110								
0120	11	71 55 716		45), THERMO SWITCH, DOME LIGHT, FUSE BOX, LAMP SAFETY BELT WARNING HIGH MOUNTED STOP LIGHT, DOOR SWITCH, EL-DISTRIBUTION UNIT, TEMP, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0130								
0140								
0150								
0160								
0170								
0180								
0190	12	*71 96 710*		44), THERMO SWITCH, DOOR SWITCH NLS	X	Cable terminal	Kabelsko	5
0200								
0210	13	78 29 609		47), 40/253 168 009	X	Cable terminal	Kabelsko	5
0220	14	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0230	15	*78 29 633*		40), 40/253 197 008, HEADLIGHT NLS	X	Contact housing	Kontakthus	5
0240								
0250	16	78 29 641		40)	X	Manifold	Förgrening	3
0260	17	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0270	18	79 68 068		48),EL-DISTRIBUTION UNIT FOR CONTACT HOUSING, 7155096, 8533705,8544397	X	Cable terminal	Kabelsko	5
0280								
0290	18	*79 72 029*		38), IN FUSE BOX, FUEL PUMP,FOR CONTACT HOUSING 7155096, 8533697 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0300								
0310								
0320								
0330	18	*85 92 397*		38), APC, FOR CONTACT HOUSING 7155120 NLS	X	Cable terminal	Kabelsko	5
0340								
0350	18	85 81 546		48), FOR CONTACT HOUSING 7342892	X	Cable terminal	Kabelsko	5
0360								
0370	18	85 22 534		47), REAR DEMIST, FOR CONTACT HOUSING 4176772	X	Cable terminal	Kabelsko	5
0380								
0390	19	85 22 563		51), FOR CONTACT HOUSING 8516932, 8530099,8553869 8590132	X	Cable terminal	Kabelsko	5
0400								
0410								
0420	20	85 30 107		44), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0430								
0440	20	*85 09 846*		54), FOR CONTACT HOUSING 4378630, 8540569,8571390 N S - USE 8522575	X	Cable terminal	Kabelsko	5
0450								
0460	21	41 15 457		44), JOINT PIECE, FOR CONTACT HOUSING 4173803, 4173852	X	Cable terminal	Kabelsko	5
0470								
0480								
0490	22	85 16 817		44), FOR CONTACT HOUSING 8530081	X	Cable terminal	Kabelsko	5
0500								


38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
51. Area 0,8-3,4 MM2.
54. Area 0,5-1,4 MM2.
61. Area 1,3-3,4 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating, and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

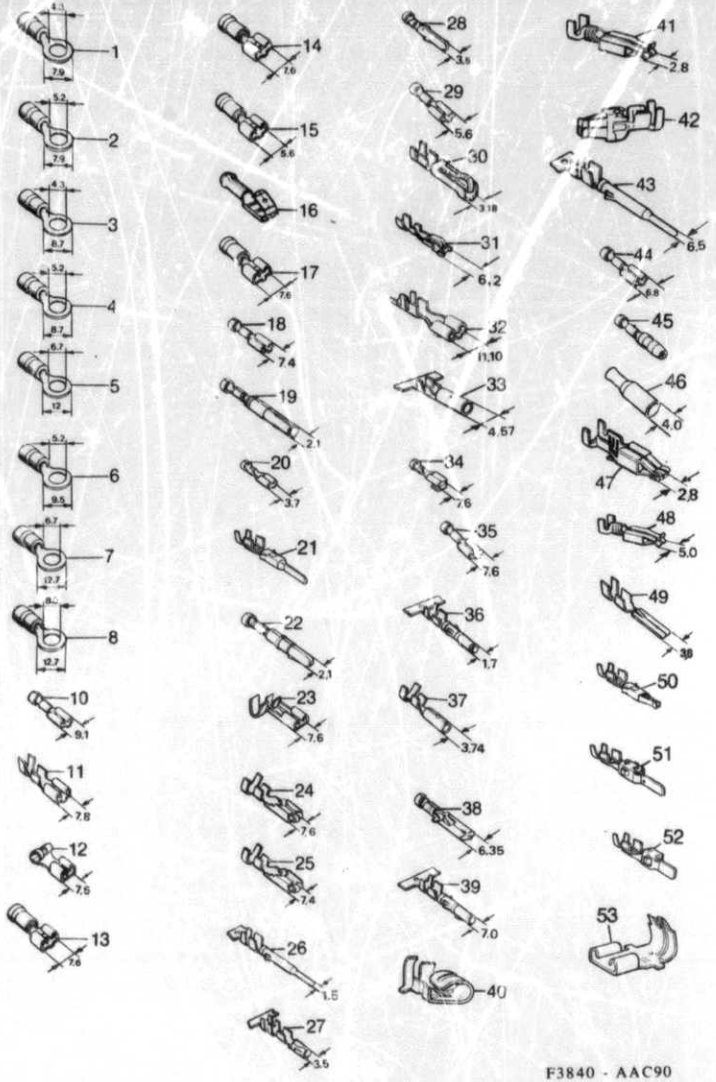

F3840 - AAC90

Wiring and fuses

2-K18

Cable terminal

1992-

Ledningar och säkringar

Ledningssko

1992-

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	23	85 22 526		38), THERMOSTAT, FOR CONTACT HOUSING 8521692	X	Cable terminal	Kabelsko	5
0520	24	85 60 476		44), NUMBER PLATE LIGHT, THERMOSTAT AC,LOW PRESSURE SWITCH, TRUNK LID, MICRO SWITCH, JOINT PIECE INTERIOR LIGHT, FOR CONTACT HOUSING 4173772, 8541229,8544363	X	Cable terminal	Kabelsko	5
0600	25	85 41 211		56), FOR FUSE BOX, FAN UNIT, JOINT PIECE, MICRO SWITCH, THERMOSTAT AC	X	Cable terminal	Kabelsko	5
0630	25	85 60 476		57), JOINT PIECE,GROUND, THERMOSTAT AC, LOW PRESSURE SWITCH, TAIL LIGHT, MICRO SWITCH,FOR CONTACT FOR HOUSING, 8541229,8544363 8574949,9507658	X	Cable terminal	Kabelsko	5
0700	26	85 82 595		58), FOR CONTACT HOUSING 853497	X	Cable terminal	Kabelsko	5
0720	26	95 19 398		38), FOR CONTACT HOUSING 9519406	X	Cable terminal	Kabelsko	5
0740	27	85 44 306		59), EL-CENTRAL, FOR CONTACT HOUSING 8553497	X	Cable terminal	Kabelsko	5
0760	27	85 82 595		58), THEFT ALARM, HORN	X	Cable terminal	Kabelsko	5
0780	28	85 82 603		58), JOINT PIECE INSTRUMENTS, JOINT PIECECOWL, AC, FOR CONTACT HOUSING 8553505, 8561623	X	Cable terminal	Kabelsko	5
0820	28	*85 44 314*		58), INSTRUMENTS NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0830	29	85 22 567		42), STARTER, FOR CONTACT HOUSING, 8516890	X	Cable terminal	Kabelsko	5
0850	30	85 60 278		44), FOR CONTACT HOUSING 8544348	X	Cable terminal	Kabelsko	5
0870	31	85 68 768		44), FOR CONTACT HOUSING 8568842, 8568735	X	Cable terminal	Kabelsko	5
0890	32	85 69 139		48), FUSE BOX	X	Cable terminal	Kabelsko	5
0900	32	85 88 188		64), EL-DISTRIBUTION UNIT	X	Cable terminal	Kabelsko	5
0920	33	85 72 596		54), COMPRESSOR	X	Cable terminal	Kabelsko	5
0930	34	85 03 286		46), FUSE BOX	X	Cable terminal	Kabelsko	5
0940	35	*85 59 205*		48), FOR CONTACT HOUSING 9124090 NLS	X	Cable terminal	Kabelsko	5
0960	35	85 14 036		38), LIGHT CONTROLS, FUSE BOX, FOR CONTACT HOUSING, 8516916,8521544	X	Cable terminal	Kabelsko	5
0990	36	85 79 393		38), FUSE BOX	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
48. Area 4,0-6,0 MM2.
54. Area 0,5-1,4 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
64. Area 6,0-10,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

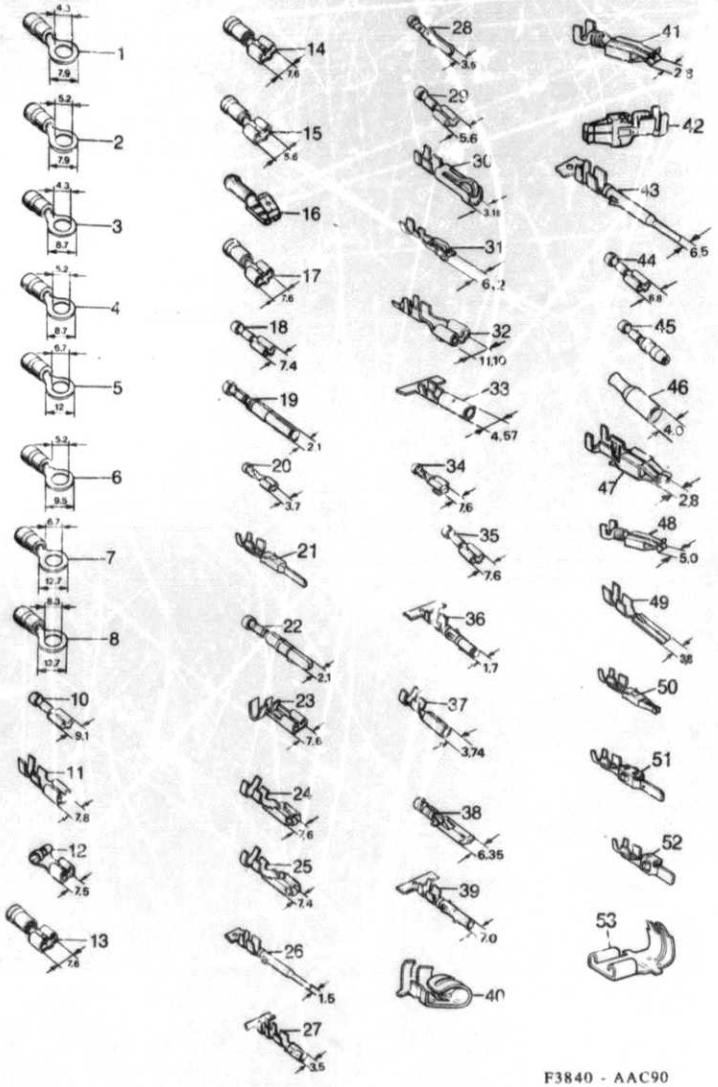

F3840 - AAC90

Wiring and fuses

2-K20

Cable terminal

1992-

Ledningar och säkringar

Ledningssko

1992-

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1000	37	79 71 708		47), FUSE BOX, FOR	X	Cable terminal	Kabelsko	5
1010				CONTACT HOUSING, 7155096 7155112, 8530705				
1020	38	85 22 542		43), EL-PAD, SWITCH SEAT	X	Cable terminal	Kabelsko	5
1030				FOR CONTACT HOUSING, 9502758, 9502758				
1040	39	85 87 552		47), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1050				9559790				
1060	40	85 82 090		47), FOR SWITCH WINDOW	X	Cable terminal	Kabelsko	5
1070				REGULATOR, JOINT PIECE				
1080	41	91 20 775		44), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1090				8544249				
1100	42	91 20 783		38), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1110				4173803, 4173852,9124199				
1120	43	85 93 964		47), FUSE BOX, FOR	X	Cable terminal	Kabelsko	5
1130				CONTACT HOUSING 8544231				
1140	44	91 20 791		56), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1150				4173803, 9124165,9124191				
1160				9125543, 9507655,9519422				
1170	45	85 81 951		46), FOR THEFT ALARM	X	Cable terminal	Kabelsko	3
1180	46	85 82 579		47), HORN	X	Cable terminal	Kabelsko	5
1190	47	91 20 957		38), FUSE BOX, JOINT	X	Cable terminal	Kabelsko	5
1200				PIECE CABLE HARNESS TRUNK DOOR/TRUNK DOOR, FOR CONTACT HOUSING, 4068441, 4109278,4113809 4173803, 4069274,4173852 8519414, 8586802,8593899 8593907, 85938 11,8597064 9123955, 9124199 9514803 9519455, 9561093,9564618				
1210	48	95 21 972		44), JOINT PIECE COWL, FOR CONTACT HOUSING, 9124199, 9521972	X	Cable terminal	Kabelsko	5
1220	48	95 21 998		56), FOR FUSE BOX	X	Cable terminal	Kabelsko	5
1230	49	95 52 100		62), JOINT PIECE CABLE	X	Cable terminal	Kabelsko	5
1240				HARNESS TRUNK/REAR, FOR CONTACT HOUSING 9124199				
1250	50	41 15 499		44), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1260				4173803, 4173852				
1270	50	95 64 600		50), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1280				8564584				
1290	51	41 15 077		38), JOINT PIECE CABLE	X	Cable terminal	Kabelsko	5
1300				HARNESS REAR,FOR CONTACT HOUSING 4117164,4117263, 4117461, 4173803,4173852				
1310	52	41 15 580		38), JOINT PIECE CABLE	X	Cable terminal	Kabelsko	5
1320				HARNESS REAR,FOR CONTACT HOUSING 4117560, 4117669 4117768, 4173803,4173852				
1330	53	41 17 388		49), FOR CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1340				8503377				
1350								
1360								
1370								
1380								
1390								
1391								
1392								
1400								
1410								
1411								
1420								
1440								
1450								
1460								
1470								
1471								
1472								

38. Area 1,0-2,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
47. Area 0,5-1,5 MM2.
49. Area 3,0-5,0 MM2.
50. Area 0,5-0,8 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-D02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

2-K22

Cable terminal
1992-

Ledningssko
1992-

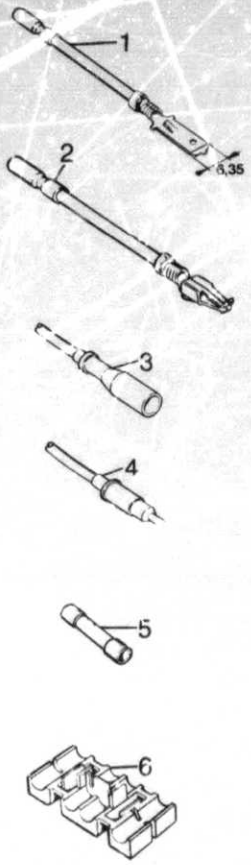

225C	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S i
0010	1	85 22 542		43), FOR FUSE BOX,	X	Cable terminal	Kabelsko	5
0020				JOINT PIECE, FOR CONTACT HOUSING, 7155104,7155120 7342900, 8558546				
0030								
0040								
0050	2	85 22 617		43), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0060				CONTACT HOUSING, 8533821				
0070	3	85 47 796		65), AC COMPRESSOR,	X	Connector	Skarvstycke	5
0080				MOTOR CENTRAL LOCK, MOTOR CENTRAL LOCK LID, MOTOR COOLING FAN, FOR CONTACT HOUSING, 9503319 9519679				
0090								
0100								
0110								
0111								
0120	3	85 47 804		56), FOR CONTACT HOUSING,	X	Connector	Skarvstycke	5
0130				9503277, 9503418,9503434 9503475, 9519679				
0140								
0150	4	85 47 770		65), FOR JOINT PIECE,	X	Connector	Skarvstycke	5
0160				FOR CONTACT HOUSING, 9501685, 9503426,9506668				
0170								
0190	4	85 47 788		56), FOR JOINT PIECE,	X	Connector	Skarvstycke	5
0200				JOINT PIECE CABLE HARNESS DOOR/EL-DISTRIBUTION UNIT, FOR CONTACT HOUSING, 9503426,9506668				
0210								
0220								
0230								
0250	5	71 55 146		40), 40/253 186 007	X	Connector housing	Skarvhus	5
0260	5	71 55 203		35), 40/253 164 008	X	Connector housing	Skarvhus	5
0270	5	71 55 633		41), 40/253 221 006	X	Connector housing	Skarvhus	5
0280	6	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
43. Area 0,8-2,5 MM2.
46. Area 0,8-2,1 MM2.
56. Area 2,5-4,0 MM2.
65. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool Labels	5-L02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	2-G06
Cable terminals	2-J20

3-A02



Transmission
Kraftöverföring
Transmisión

TABLE OF CONTENTS

Clutch			
Clutch, clutch disc		4 : 5	3-A06
Clutch control			
Pedal, master cylinder		4 : 7	3-A08
Gear box, manual			
Gear box assy		4 : 9	3-A10
Primary gear case		4 : 11	3-A12
Gear box case, oil pan		4 : 13	3-A14
Release bearing, slave cylinder		4 : 17	3-A18
Shafts, gears		4 : 19	3-A20
Differential. Also for automatic gear box		4 : 27	3-B04
Gear box control, manual			
Gear shift lever		4 : 29	3-B06
Drive shafts, outer universal joint. Also for automatic gear box		4 : 33	3-B10
Gear box, automatic			
Gear box assy		4 : 35	3-B12
Converter housing, converter		4 : 37	3-B14
Servos, covers, plugs		4 : 39	3-B16
Gears, pinion, etc		4 : 43	3-B20
Control system, Part 1		4 : 49	3-C02
Control system, Part 2		4 : 51	3-C04
Controls in gear box		4 : 53	3-C06
Differential		4 : 27	3-B04
Gear box control, automatic			
Gear selector lever		4 : 55	3-C08
Drive shafts, outer universal joint		4 : 33	3-B10
Rear axle, See group 7			
Kits			
Transmission		4 : 57	3-C10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool. Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A03

INNEHÅLLSFÖRTECKNING

Koppling		
Koppling, lamell	4 : 5	3-A06
Kopplingsmanövrering		
Pedal, huvudcylinder	4 : 7	3-A08
Växellåda, manuell		
Växellåda kpl	4 : 9	3-A10
Primärväxelhus	4 : 11	3-A12
Växellådshus, oljesump	4 : 13	3-A14
Urtrampningslager, slavcylinder	4 : 17	3-A18
Axlar, kugghjul	4 : 19	3-A20
Differential. Även för automatisk växellåda	4 : 27	3-B04
Växellådsmanövrering, manuell		
Växelspak	4 : 29	3-B06
Drivaxlar, yttre knut. Även för automatisk växellåda	4 : 33	3-B10
Växellåda, automatisk		
Växellåda kpl	4 : 35	3-B12
Momentomvandlarhus, momentomvandlare	4 : 37	3-B14
Servo, kåpor, pluggar	4 : 39	3-B16
Drev, pinjong, etc	4 : 43	3-B20
Kontrollsystem, Del 1	4 : 49	3-C02
Kontrollsystem, Del 2	4 : 51	3-C04
Reglage i växellådshus	4 : 53	3-C06
Differential, inre knut	4 : 27	3-B04
Växellådsmanövrering, automatisk		
Växelväljarspak	4 : 55	3-C08
Drivaxlar, yttre knut	4 : 33	3-B10
Bakaxel, Se grupp 7		
Satser		
Kraftöverföring	4 : 57	3-C10

3-A04

SUMARIO

Embrague		
Embrague, disco de embrague	4 : 5	3-A06
Mando de embrague		
Pedal, cilindro principal	4 : 7	3-A08
Caja de cambios, manual		
Caja de cambios, compl.	4 : 9	3-A10
Caja de engranaje primario	4 : 11	3-A12
Carter de caja de cambios	4 : 13	3-A14
Cojinete de empuje, cilindro esclavo	4 : 17	3-A18
Ejes, engranajes	4 : 19	3-A20
Diferencial. M y A	4 : 27	3-B04
Mandos del cambio, manual		
Palanca	4 : 29	3-B06
Eje de accionamiento, junta homocinetica exterior, M y A	4 : 33	3-B10
Caja de cambios, automatica		
Caja de cambios, compl.	4 : 35	3-B12
Convertidor, carter de convertidor de par	4 : 37	3-B14
Servoasistencia, tapas, tapones	4 : 39	3-B16
Engranaje principal, engranajes planetarios, pinon de a taque y corona	4 : 43	3-B20
Sistema de control, 1a parte	4 : 49	3-C02
Sistema de control, 2a parte	4 : 51	3-C04
Mando de caja de cambios	4 : 53	3-C06
Diferencial y junta homocinetica interior	4 : 27	3-B04
Mandos del cambio, automatica		
Palanca selectora	4 : 55	3-C08
Eje de accionamiento, junta homocinetica exterior	4 : 33	3-B10
Eje trasero, Ver grupo 7		
Juegos completos		
Transmision	4 : 57	3-C10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10


Clutch

3-A06

Clutch, clutch disc

Koppling

Koppling, lamell

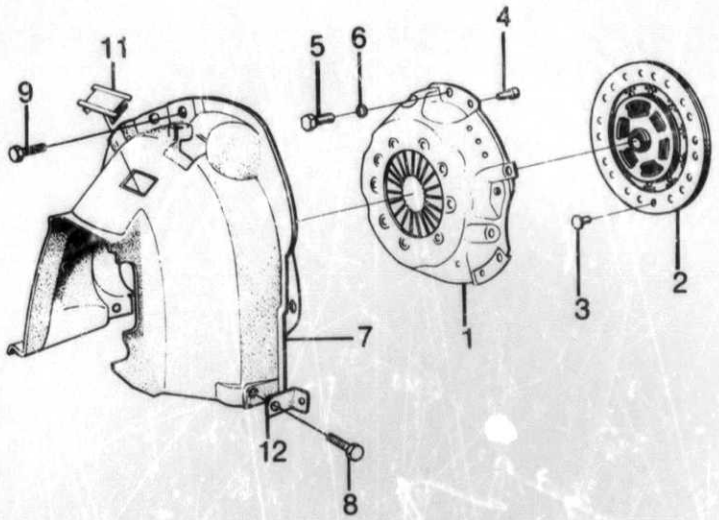

F1189 AAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 28 123	S	7), I	1	Pressure plate	Tryckskiva	2
0020	1	87 27 190	S	7), TURBO	1	Pressure plate	Tryckskiva	2
0030	2	87 22 324	S	I	1	Clutch disc	Lamell	2
0040	2	87 27 208	S	TURBO	1	Clutch disc	Lamell	2
0050	3	*83 00 469*	S	NLS	20	Rivet	Nit	5
0060	4	*79 49 712*		23) NLS - USE 8034472	3	Pin	Pinne	5
0070	4	80 34 472		24)	3	Pin	Pinne	5
0080	5	80 82 968		-1992	6	Screw	Skruv	5
0085	5	91 66 331		1993-	6	Screw	Skruv	5
0090	5	79 70 288		B202 TURBO	6	Screw	Skruv	5
0100	6	83 80 982			6	Washer	Bricka	5
0110	7	93 62 658			1	Cover	Kåpa	5
0120	8	80 82 943			1	Screw	Skruv	5
0130	9	79 72 466			3	Screw	Skruv	5
0140	11	83 38 899			1	Cover	Lock	5
0150	12	85 52 655			1	Bracket	Hållare	6
0160								
0170		*83 80 214*		See page 4-057, 3-C10	1	Clutch lining	Lamellbelägg	
0170				NLS				
0180		88 18 098		I	X	Clutch kit	Kopplingssats	6
0190				See page 4-061, 3-C14				
0200		87 81 304		TURBO	X	Clutch kit	Kopplingssats	6
0210				See page 4-061, 3-C14				

7. Also available as exchange unit. Finns även som utbytesenhet.
23. Ch. --M5001443, --M7000978.
24. Ch. M5001444--, M7000979--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A08

Pedal, master cylinder
Pedal, huvudcylinder

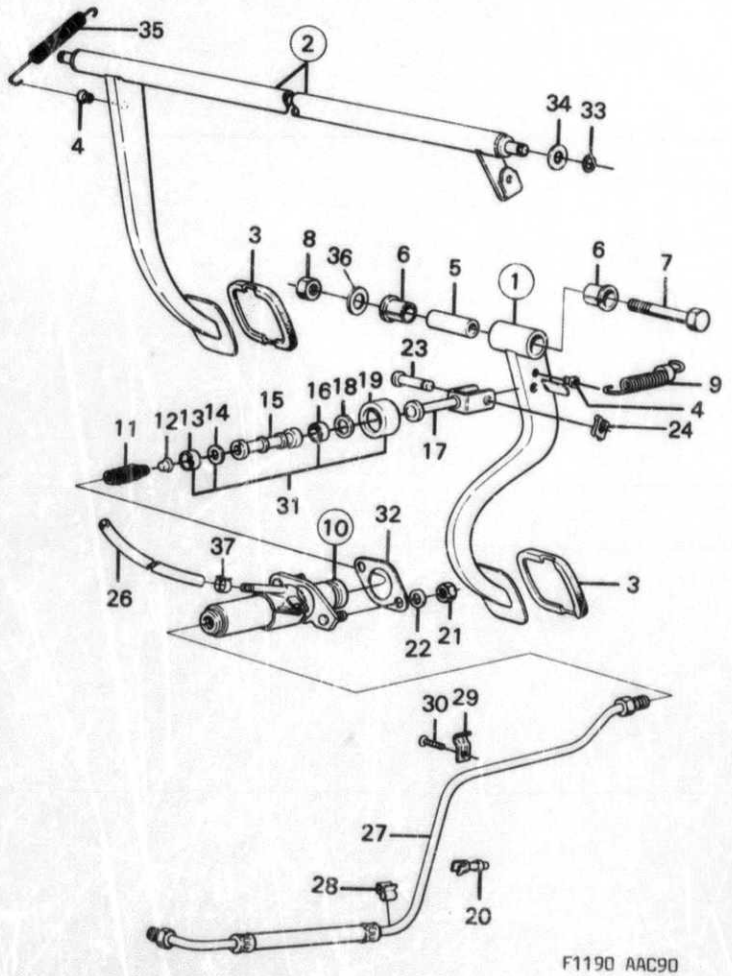

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 05 933			1	Clutch pedal	Kopplingspedal	6
0020	2	91 05 891		RHD	1	Pedal arm	Pedalarm	6
0030	3	89 16 272			1	.Pedal pad	.Pedalgummi	5
0040	4	84 07 983			1	.Bushing	.Bussning	4
0050	5	89 24 490			1	Spacer tube	Distansrör	4
0060	6	89 62 128			2	Bearing bushing	Lagerbussning	4
0070	7	79 73 571			1	Screw	Skruv	5
0080	8	*81 51 474*		NLS - USE 7977812	1	Lock nut	Låsmutter	5
0090	9	89 35 751			1	Spring	Fjäder	5
0100	10	89 44 977			1	Clutch cylinder	Kopplingscylinder	2
0110	11	89 86 622			1	.Spring	.Fjäder	3
0120	12	89 45 156			1	.Spring support	.Fjäderstöd	5
0130	13	89 45 248	S		1	.Gasket	.Packning	5
0140	14	89 45 255	S		1	.Washer	.Bricka	5
0150	15	89 45 263			1	.Piston	.Kolv	6
0160	16	89 40 769	S		1	.Gasket	.Packning	5
0170	17	89 35 371			1	.Push rod	.Stötstång	5
0180	18	73 13 232			1	.Lock ring	.Låsring	5
0190	19	73 13 240	S		1	.Seal	.Tätning	6
0200	20	79 63 887			1	Tube clamp	Rörklamma	5
0210	21	81 51 235			2	Nut	Mutter	5
0220	22	79 33 849			2	Washer	Bricka	5
0230	23	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0240	24	82 52 553			1	Clip	Clips	5
0250	26	*89 27 139*		-1991 NLS - USE 4281531	1	Hose	Slang	5
0255	26	42 81 531		1992	1	Hose	Slang	5
0257	26	43 85 076		1993-	1	Hose	Slang	5
0260	26	40 27 801		-1992, ABS	1	Hose	Slang	5
0265	26	43 85 084		1993-, ABS	1	Hose	Slang	5
0270	27	89 35 124			1	Clutch hose	Kopplingsslang	2
0280	28	73 98 746			2	Clamp	Klammer	5
0290	29	83 71 551			1	Tube clamp	Rörklamma	
0300	30	79 22 891			1	Screw	Skruv	5
0310	31	89 93 156		See page 4-057, 3-C10	1	Repair kit	Reparationssats	1
0320	32	89 41 478			1	Gasket	Packning	5
0330	33	79 63 135		RHD, A	1	E-circlip	Spårryttare	3
0340	34	80 29 993		RHD, A	1	Washer	Bricka	5
0350	35	89 41 312		RHD	1	Spring	Fjäder	3
0360	36	80 29 993			1	Washer	Bricka	5
0370	37	79 73 605			2	Hose clamp	Slangklamma	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A10

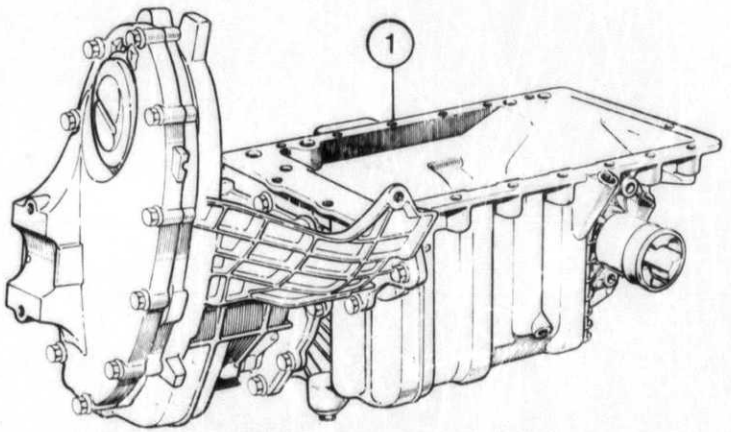

F1191 AAC90

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*87 26 432*		7) 1990 MARKED: GM 45712	1	Gearbox	Växellåda	5
0010				NLS - USE 8729196				
0020	1	*87 26 390*		7) 1990 MARKED: GM 45612	1	Gearbox	Växellåda	5
0020				NLS - USE 8729147				
0030	1	*87 26 507*		7) 1990 MARKED: GM 55804	1	Gearbox	Växellåda	5
0030				NLS - USE 8728891				
0040	1	87 26 465		7) 1990 MARKED: GM 55704	1	Gearbox	Växellåda	5
0050	1	87 29 196		7) 1991- MARKED:GM 45714	1	Gearbox	Växellåda	5
0060	1	87 29 147		7) 1991- MARKED:GM 45614	1	Gearbox	Växellåda	5
0070	1	87 28 891		7) 1991- MARKED:GM 55806	1	Gearbox	Växellåda	5
0080	1	87 29 238		7) 1991- MARKED:GM 55706	1	Gearbox	Växellåda	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A12

Primary gear case

Primärväxelhus

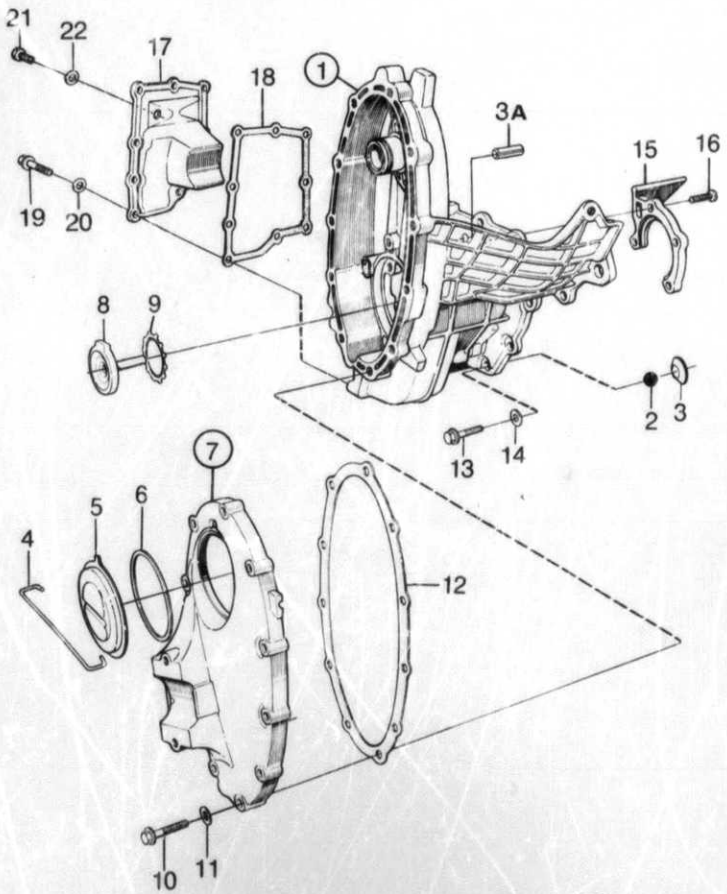

0229	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-009, 3-A10		Gear box, manual	Växellåda, manuell	
0020	1	87 26 374		1990	1	.Gear housing	.Primärväxelhus	6
0030	1	87 28 859		1991-	1	.Gear housing	.Primärväxelhus	6
0040	2	87 13 604		1)	1	..Ball	..Kula	5
0050	3	87 15 351		1)	1	..Spring disc	..Fjädertallrik	4
0060	3A	80 49 876		1991-	1	..Roll pin	..Spännstift	5
0070	4	87 10 303			1	.Brace	.Bygel	5
0080	5	87 10 956			1	.Cover	.Lock	
0090	6	87 13 216			1	.Gasket	.Packning	
0100	7	87 21 185		GM 45612, 45712, 45614, GM 45714	1	.Cover	.Lock	5
0110								
0120	7	87 26 895		GM 55704, 55804, 55706, GM 55806	1	.Cover	.Lock	5
0130								
0140	8	87 21 201			1	..Oil collector	..Oljeskopa	5
0150	9	87 21 235			1	..Lock ring	..Låsring	5
0160	10	*80 83 958*		1990 NLS - USE 8125213	11	.Screw	.Skruv	5
0170	10	81 25 213		1991-	11	.Screw	.Skruv	5
0180	11	80 29 985		1990	11	.Washer	.Bricka	5
0190	12	*87 25 012*	S	42) NLS - USE 8732380	1	.Gasket	.Packning	4
0195	12	87 32 390	S	43)	1	.Gasket	.Packning	4
0200	13	80 83 933		1990	10	.Screw	.Skruv	5
0210	13	81 25 197		1991-	10	.Screw	.Skruv	5
0220	14	80 29 985		1990	10	.Washer	.Bricka	5
0230	15	87 19 494			1	.Bearing shield	.Lagersköld	6
0240	16	87 21 334			4	.Screw	.Skruv	5
0250	17	87 21 821			1	.Cover	.Lock	5
0260	18	*87 25 020*	S	42) NLS - USE 8732398	1	.Gasket	.Packning	4
0265	18	87 32 398	S	43)	1	.Gasket	.Packning	4
0270	19	80 83 933		1990	9	.Screw	.Skruv	5
0280	19	81 25 197		1991-	9	.Screw	.Skruv	5
0290	20	80 29 985		1990	9	.Washer	.Bricka	5
0300	21	87 23 405			1	.Screw	.Skruv	5
0310	22	81 24 133			1	.Gasket	.Packning	5
0320		74 96 003		See page 4-063, 3-C16	1	Gasket kit	Packningsats	5

1. Not as separate spare part. Ej som separat reservdel.
42. Gear box --A20164
43. Gear box A20165--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A14

Gear box case, oil pan
Växellådshus, oljesump

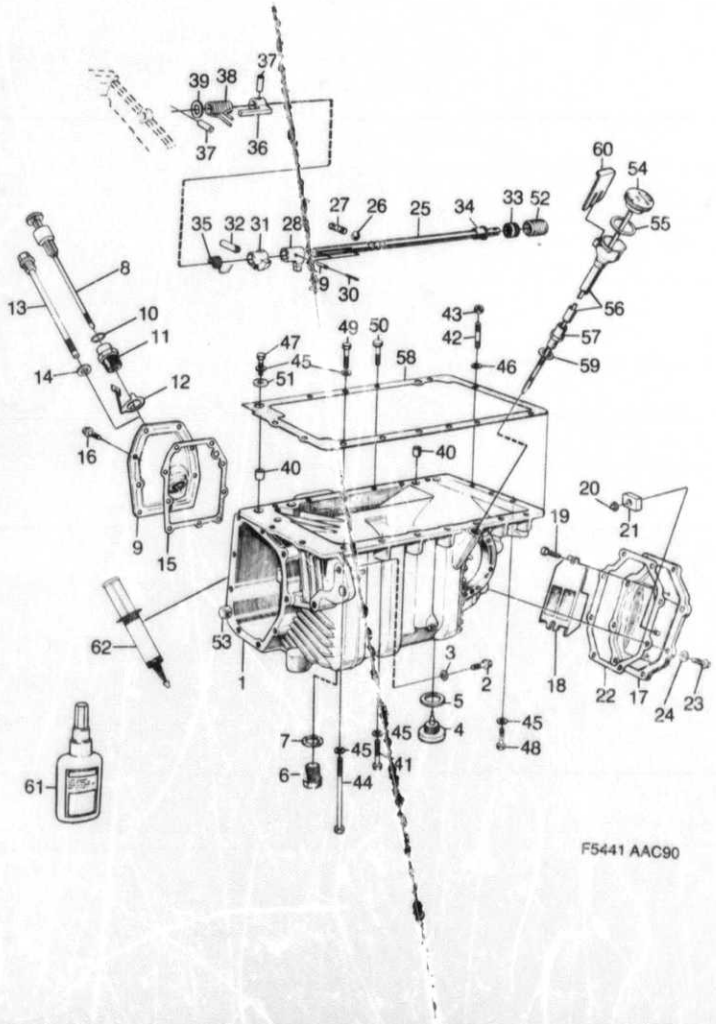

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-009, 3-A10		Gear box, manual	Växellåda, manuell	
0020	1	87 26 309		1990	1	.Gearbox housing	.Växellådshus	6
0030	1	*87 28 875*		1991-,44) NLS - USE 8733362	1	.Gearbox housing	.Växellådshus	6
0035	1	87 33 362		45)	1	.Gearbox housing	.Växellådshus	6
0040	2	80 82 968		1990	1	.Screw	.Skruv	5
0050	2	81 25 189		1991-	1	.Screw	.Skruv	5
0060	3	80 29 985		1990	1	.Washer	.Bricka	5
0070	4	87 17 407		27)	1	.Drain plug	.Avtappningspropp	6
0080	5	87 17 415		27)	1	.Gasket	.Packning	4
0090	6	*87 11 871*		13) NLS - USE 8731762	1	.Drain plug	.Avtappningspropp	1
0100	6	*87 28 065*		14), -1990 NLS - USE 8731762	1	.Drain plug	.Avtappningspropp	1
0110	6	87 31 762		1991-	1	.Drain plug	.Avtappningspropp	1
0120	7	87 18 439		13)	1	.Gasket	.Packning	3
0130	7	87 28 057		14)	1	.Gasket	.Packning	3
0140	8	*87 28 396*		19) NLS - USE 8124182, 8729345	1	.Dipstick	.Mätsticka	3
0150	9	87 28 149			1	.Cover	.Lock	6
0160	10	81 09 647		19)	1	.O-ring	.O-ring	2
0170	11	87 26 770		19)	1	.Nipple	.Nippel	3
0180	12	87 27 737		19)	1	.Spring	.Fjäder	5
0190	13	87 29 345		20)	1	.Dipstick	.Mätsticka	3
0200	14	81 24 182		20)	1	.Gasket	.Packning	2
0210	15	87 28 677			1	.Gasket	.Packning	3
0220	16	79 70 015		1990	9	.Screw	.Skruv	5
0230	16	81 25 197		1991-	9	.Screw	.Skruv	5
0240	17	*87 27 729*		1990 NLS - USE 8729303	1	.Cover	.Lock	5
0250	17	87 29 303		1991-	1	.Cover	.Lock	5
0260	18	87 27 711			1	..Filter	..Filter	5
0270	19	80 19 945			2	..Screw	..Skruv	5
0280	20	79 77 507		1991-	1	..Washer	..Bricka	5
0290	21	87 27 745		1991-	1	..Magnet	..Magnet	3
0300	22	87 28 651			1	.Gasket	.Packning	3
0310	23	80 83 933		1990	8	.Screw	.Skruv	5
0320	23	81 25 197		1991-	8	.Screw	.Skruv	5
0330	24	80 29 985		1990	8	.Washer	.Bricka	5
0340	25	87 22 803			1	.Gear rod	.Växelstång	5
0350	26	83 41 257			1	.Ball	.Kula	5
0360	27	87 19 775			1	.Spring	.Fjäder	5
0370	28	*83 43 014*		1990 NLS - USE 8729808	1	.Companion flange	.Medbringare	L
0380	28	87 29 808		1991-	1	.Companion flange	.Medbringare	L
0390	29	80 49 553			2	.Roll pin	.Spännstift	5
0400	30	79 56 154			1	.Roll pin	.Spännstift	5
0410	31	87 12 945			1	.Catch	.Spärr	6
0420	32	87 12 952			1	.Pin	.Tapp	5
0430	33	*83 44 335*		NLS - USE 8730764	1	.Seal	.Tätning	4
0440	34	87 11 608			1	.Bushing	.Bussning	
0450	35	87 13 166			1	.Spring	.Fjäder	5
0460	36	87 22 720			1	.Companion flange	.Medbringare	5
0470	37	80 49 553			2	.Roll pin	.Spännstift	5
0480	38	87 22 829		1990	1	.Spring	.Fjäder	5
0490	38	87 29 790		1991-	1	.Spring	.Fjäder	5
0500	39	87 22 837			1	.Washer	.Bricka	4
0510	40	83 00 725			2	Sleeve	Hylsa	4
0520	41	*80 83 958*		NLS - USE 8125213	6	Screw	Skruv	5

13. Gear box --A07248, --B03480.
14. Gear box A07249--, B03490--.
19. Gear box --B8762.
20. Gear box B8763--.
27. Gear box --B27830.
44. Gear box --A50303
45. Gear box A50304--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A16

Gear box case, oil pan
Växellådshus, oljesump

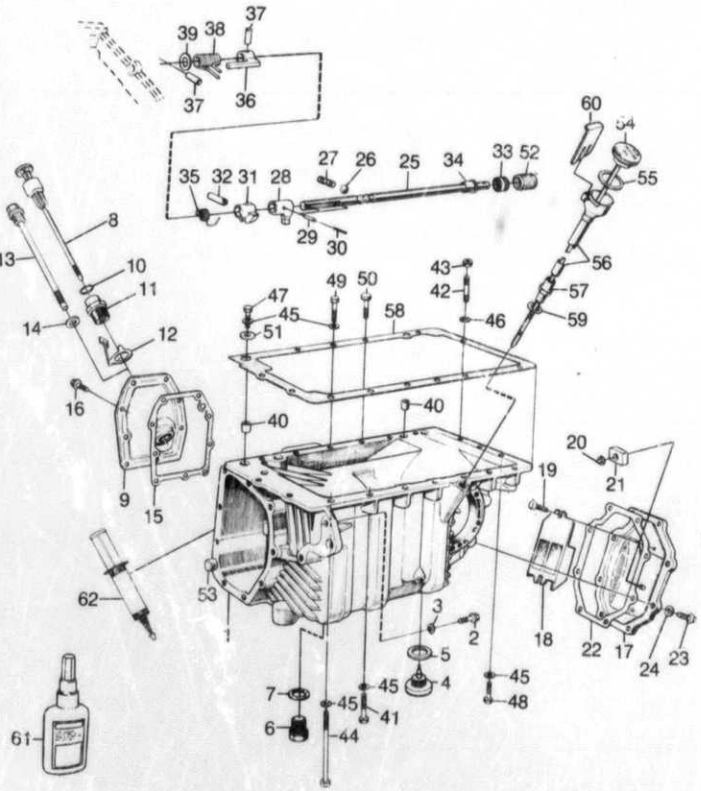

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	42	80 05 928			1	Stud	Pinnskruv	5
0540	43	81 51 235			1	Nut	Mutter	5
0550	44	79 65 569			1	Screw	Skruv	5
0560	45	80 29 985		-1992	14	Washer	Bricka	5
0565	45	91 66 372		1993-	14	Washer	Bricka	5
0570	46	*93 28 824*		NLS - USE 8981987	1	Seal	Tätning	5
0580	47	93 46 354			1	Screw	Skruv	5
0590	48	80 82 968		-1992	1	Screw	Skruv	5
0595	48	91 66 331		1993-	1	Screw	Skruv	5
0600	49	93 46 362			5	Screw	Skruv	5
0610	50	93 46 370			1	Screw	Skruv	5
0620	51	70 61 328			1	Washer	Bricka	5
0630	52	41 18 238			1	Sealing bellows	Tätningsbälg	4
0640	53	87 23 967			2	Guide pin	Styrstift	5
0650	54	75 14 201			1	Dipstick	Oljesticka	3
0670	55	93 61 544			1	„Ring-gland	„Packningsring	4
0680	56	93 68 200			1	Oil filler	Oljepåfyllning	6
0690	57	93 61 452			1	Nipple	Nippel	6
0700	58	*75 10 241*		NLS - USE 7514946	1	Gasket	Packning	3
0730		81 52 381		300 ML	X	Flange sealant	Flänstätning	3
0750	59	93 61 627			1	Washer	Bricka	5
0760	60	93 62 542			1	Plate	Platta	6
0770	61	74 96 284		50 ML	X	Hydraulic sealant	Gängtätning	5
0775	62	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0780		74 96 003		See page 4-063, 3-C16	1	Gasket kit	Packningssats	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A18 Release bearing, slave cylinder / Urtrampningslager, slavcylinder

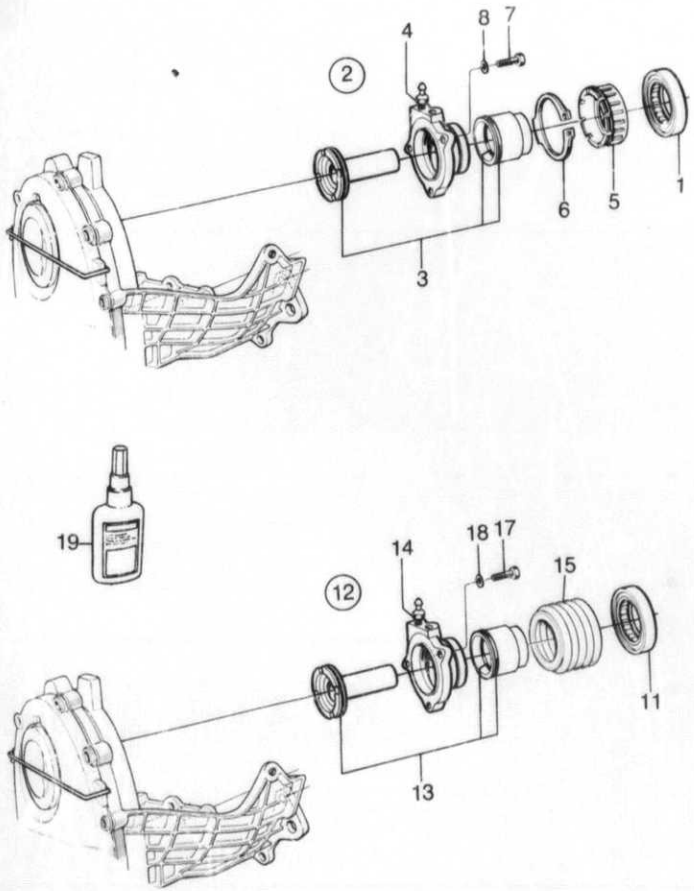

F5442 AAC90

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 21 995			1	Release bearing	Urtrampningslager	2
0020	2	*87 22 209*		NLS - USE 8729840	1	Slave cylinder	Slavcylinder	2
0030	3	87 81 072		See page 4-057, 3-C10	1	.Sealing kit	.Tätningssats	1
0040	4	87 11 053			1	.Nipple	.Nippel	6
0050	5	87 22 100			1	.Seal	.Tätning	6
0060	6	87 14 420			1	.Retaining ring	.Spårring	5
0070	7	73 99 959			3	Screw	Skruv	5
0080	8	80 29 951		-1992	3	Washer	Bricka	5
0085	8	91 66 364		1993-	3	Washer	Bricka	5
0090								
0100	11	87 21 995			1	Release bearing	Urtrampningslager	2
0110	12	87 29 840		137), 1993-	1	Slave cylinder	Slavcylinder	2
0120	13	87 81 072		See page 4-057, 3-C10	1	.Sealing kit	.Tätningssats	1
0130	14	87 11 053			1	.Nipple	.Nippel	6
0140	15	87 29 618			1	.Dust cover	.Dammskydd	6
0160	17	73 99 959			3	Screw	Skruv	5
0170	18	91 66 364			3	Washer	Bricka	5
0180	19	74 96 284		50 ML	X	Hydraulic sealant	Gängtätning	5

137. Only as spare part. Endast som reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A20

Shafts, gears

Axlar, kugghjul

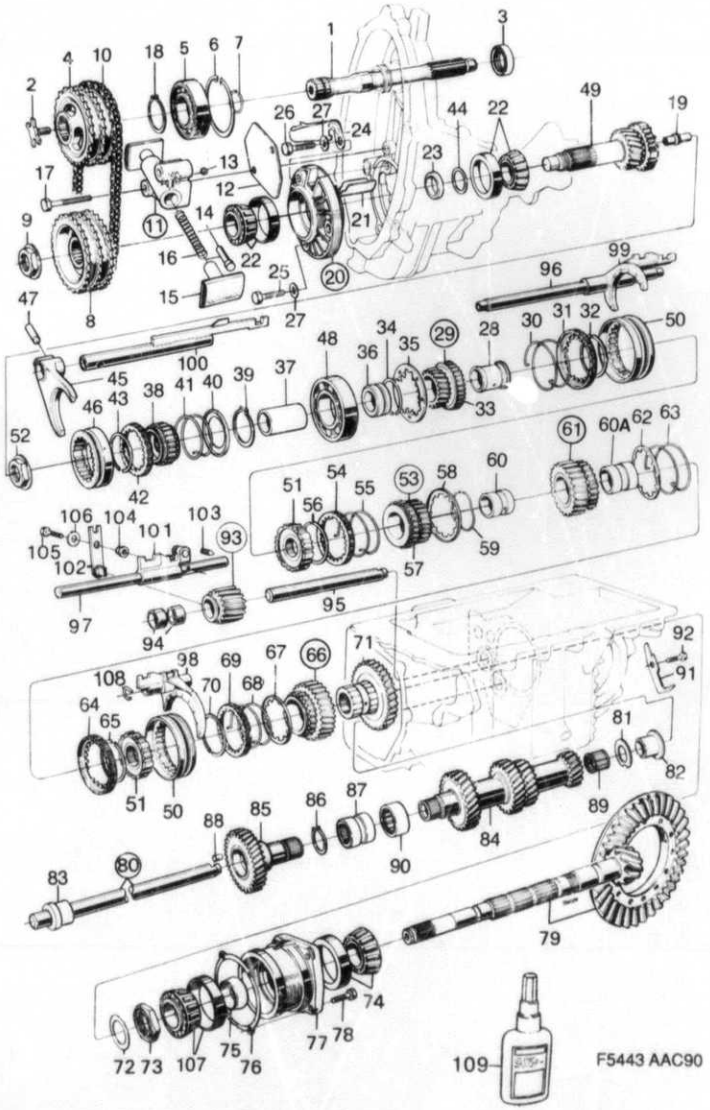

	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-009, 3-A10		Gear box, manual	Växellåda, manuell	
0020	1	87 11 350			1	.Clutch shaft	.Lamellaxel	3
0030	2	87 11 038			1	.Screw	.Skruv	3
0040	3	87 10 881			1	.Seal	.Tätning	2
0050	4	87 11 343		GM 45612, 45614	1	.Chain link	.Kedjelänk	5
0060						31 cogs	31 kuggar	
0070	4	87 28 594		GM 45712, 55704, 45714,	1	.Chain gear	.Kedjehjul	5
0080				55706		32 cogs	32 kuggar	
0090	4	87 26 010		17), GM 55804	1	.Chain link	.Kedjelänk	5
0100						33 cogs	33 kuggar	
0110	4	87 28 578		18), GM 55804, 55806	1	.Chain link	.Kedjelänk	5
0120						33 cogs	33 kuggar	
0130	5	87 10 865			1	.Roller bearing	.Rullager	
0140	6	87 11 376			1	.Retaining ring	.Spårring	4
0150	7	87 04 777			1	.Lock ring	.Låsring	3
0160	8	87 15 831		GM 45612, 45614	1	.Chain gear	.Kedjehjul	5
0170						26 cogs	26 kuggar	
0180	8	87 28 602		GM 45712, 55704, 45714,	1	.Chain gear	.Kedjehjul	5
0190				55706		25 cogs	25 kuggar	
0200	8	87 28 586		GM 55804, 55806, 45714,	1	.Chain gear	.Kedjehjul	5
0210				55706		24 cogs	24 kuggar	
0220	9	87 12 770			1	.Nut	.Mutter	5
0230	10	87 11 590			3	.Chain	.Kedja	5
0240	11	87 13 570			1	.Chain tensioner	.Kedjesträckare	5
0250	12	87 13 513			1	..Plate	..Platta	4
0260	13	87 13 554			1	..Ball	..Kula	
0270	14	87 13 539			1	..Plug	..Plugg	3
0280	15	87 13 497			2	..Tightener shoe	..Sträckarsko	5
0290	16	87 13 521			2	..Spring	..Fjäder	5
0300	17	87 22 555			2	..Screw	..Skruv	5
0310	18	80 47 839			1	.Retaining ring	.Spårring	5
0320	19	87 13 158			1	.Tube	.Rör	6
0330	20	87 26 523			1	.Bearing housing	.Lagerhus	6
0340	21	87 13 596			1	..Oil collector	..Oljeskopa	5
0350	22	87 12 838			2	.Roller bearing	.Rullager	3
0360	23	87 26 184		5,28MM	X	.Spacer ring	.Distansring	5
0370	23	87 26 192		5,29MM	X	.Spacer ring	.Distansring	5
0380	23	87 26 200		5,30MM	X	.Spacer ring	.Distansring	5
0390	23	87 26 218		5,31MM	X	.Spacer ring	.Distansring	5
0400	24	87 13 588			1	.Oil collector	.Oljeskopa	5
0410	25	80 83 933		1990-	2	.Screw	.Skruv	5
0420	25	81 25 189		1991-	2	.Screw	.Skruv	5
0430	26	87 19 320			1	.Screw	.Skruv	5
0440	27	80 29 985		1990-	2	.Washer	.Bricka	5
0450	28	87 13 026			1	.Bearing bushing	.Lagerbussning	4
0460	29	87 26 580		1990-	1	.Gear	.Kugghjul	4
0470						4	4	
0480	29	87 28 982		1991-	1	.Gear	.Kugghjul	4
0490						4	4	
0500	30	87 00 429			1	..Locking spring	..Spärrfjäder	4
0510	31	87 19 924		1990-	1	..Ring	..Ring	3
0520	31	87 28 529		1991-	1	..Ring	..Ring	3
0530	32	87 04 942			1	..Retaining ring	..Spårring	4
0540	33	87 26 598		1990-	1	..Gear	..Kugghjul	4
0550						4	4	
0560	33	87 28 990		1991-	1	..Gear	..Kugghjul	4
0570						4	4	
0580	34	87 26 325			1	...Lock ring	...Låsring	4
0590	35	87 26 150		1990-	1	...Guide ring	...Styrring	4
0600	35	87 28 750		1991-	1	...Guide ring	...Styrring	4
0610	36	87 12 762			1	.Spacer bushing	.Distansbussning	

17. Gear box --07266.
18. Gear box 07267-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A22

Shafts, gears
Axlar, kugghjul

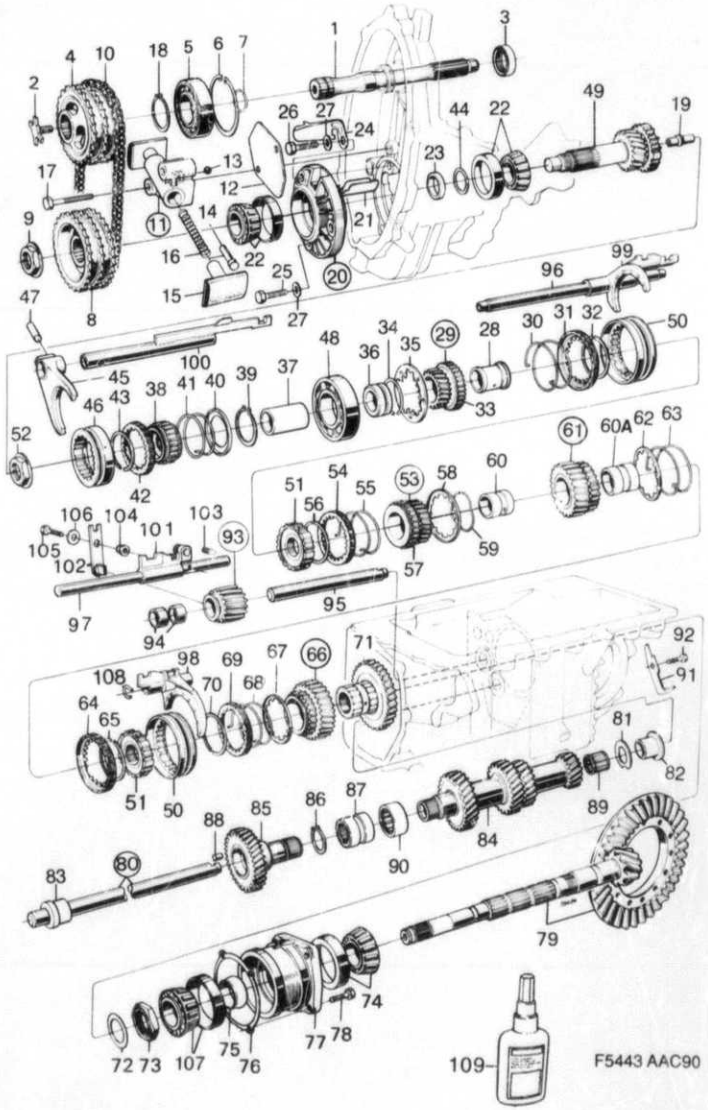

0340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	37	87 13 406			1	.Spacer sleeve	.Distanshylsa	4
0630	38	87 18 389			1	.Clutch hub	.Kopplingsnav	
0640	39	80 47 854			1	..Retaining ring	..Spärring	5
0650	40	87 12 598			1	.Guide ring	.Styrring	4
0660						5	5	
0670	41	87 15 005			1	.Locking spring	.Spärrfjäder	4
0680						5	5	
0690	42	83 44 772			1	.Synchromesh	.Synkronisering	
0700	43	87 12 606			1	.Lock ring	.Låsring	5
0710	44	87 12 994		0,20MM	X	.Adjusting washer	.Justerbricka	5
0720	44	87 13 448		0,25MM	X	.Adjusting washer	.Justerbricka	5
0730	44	87 13 455		0,30MM	X	.Adjusting washer	.Justerbricka	5
0740	45	87 21 839			1	.Gear selector fork	.Växelförargaffel	5
0750	46	87 12 580			1	.Sleeve	.Muff	5
0760	47	80 34 985			1	.Pin	.Pinne	5
0770	48	87 00 767			1	.Ball bearing	.Kullager	3
0780	49	87 26 341		1990	1	.Shaft	.Axel	6
0790	49	87 28 719		1991-	1	.Shaft	.Axel	6
0800	50	87 20 419		1990	2	.Sleeve	.Muff	5
0810	50	87 28 487		1991-	2	.Sleeve	.Muff	5
0820	51	87 12 150			2	.Synchromesh	.Synkronisering	5
0830	52	87 18 371			1	.Nut	.Mutter	5
0840	53	87 26 564		15)	1	.Gear	.Kugghjul	4
0850						3	3	
0860	53	87 28 636		16), -1990	1	.Gear	.Kugghjul	4
0870						3	3	
0880	53	87 28 958		1991-	1	.Gear	.Kugghjul	4
0890						3	3	
0900	54	87 19 916		1990	1	..Ring	..Ring	3
0910	54	87 28 461		1991-	1	..Ring	..Ring	3
0920	55	87 00 429		1990	1	..Locking spring	..Spärrfjäder	4
0930	55	87 29 667		1991-	1	..Locking spring	..Spärrfjäder	6
0940	56	87 04 942			1	..Retaining ring	..Spärring	4
0950	57	87 26 572		1,15)	1	..Gear	..Kugghjul	4
0960						3	3	
0970	57	87 28 644		1,16), -1990	1	..Gear	..Kugghjul	4
0980						3	3	
0990	57	87 28 966		1), 1991-	1	..Gear	..Kugghjul	4
1000						3	3	
1010	58	87 26 143		15)	1	...Guide ring	...Styrring	4
1020	58	87 28 610		16)	1	...Guide ring	...Styrring	4
1030	59	87 26 317			1	...Lock ring	...Låsring	4
1040	60	87 26 739			1	.Bearing bushing	.Lagerbussning	4
1050	60A	87 60 205			1	.Bearing bushing	.Lagerbussning	4
1060	61	87 26 556		1990	1	.Gear	.Kugghjul	4
1070						2	2	
1080	61	87 28 941		1991-	1	.Gear	.Kugghjul	4
1090						2	2	
1100	62	87 00 361			1	..Guide ring	..Styrring	4
1110	63	87 15 120		1990	1	..Locking spring	..Spärrfjäder	6
1120	63	87 11 103		1991-	1	..Locking spring	..Spärrfjäder	6
1130	64	87 19 916		1990	1	..Ring	..Ring	3
1140	64	87 28 461		1991-	1	..Ring	..Ring	3
1150	65	87 04 942			1	..Retaining ring	..Spärring	4
1160	66	87 26 549		1990	1	.Gear	.Kugghjul	4
1170						1	1	
1180	66	87 28 925		1991-	1	.Gear	.Kugghjul	4
1190						1	1	
1200	67	87 00 361			1	..Guide ring	..Styrring	4
1210	68	87 11 103			1	..Locking spring	..Spärrfjäder	6

1. Not as separate spare part. Ej som separat reservdel.
15. Gear box -A07880, -B02615.
16. Gear box A07881-, B02616-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-A24

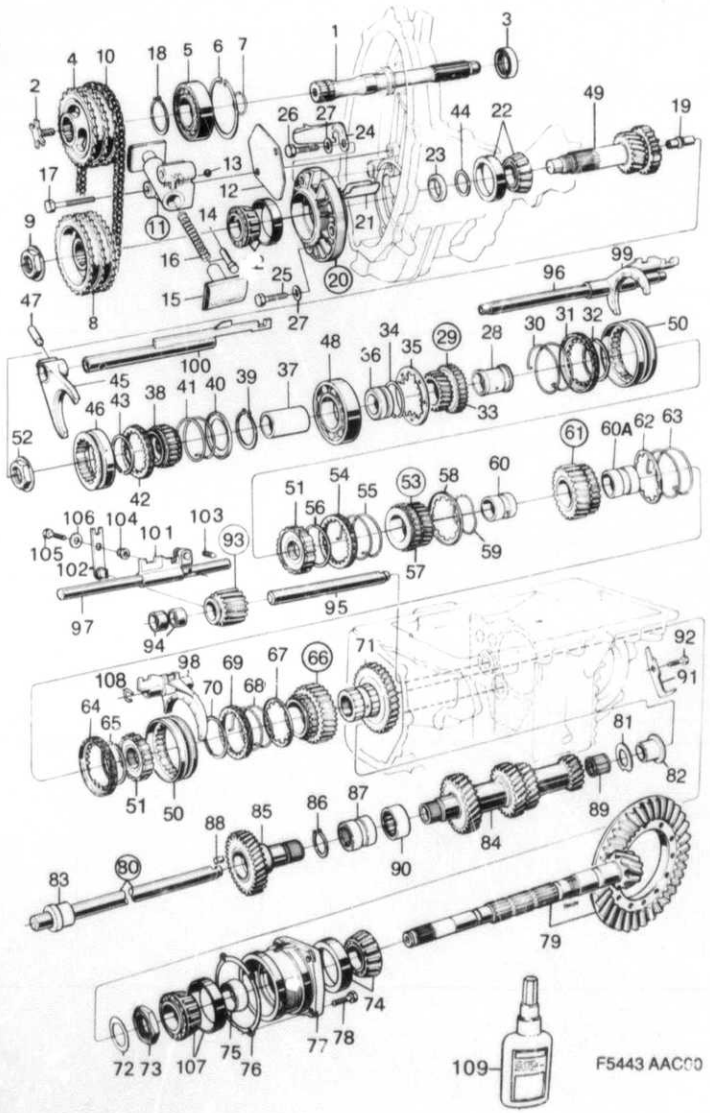

0340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1220	69	87 19 924		1990-	1	..Ring	..Ring	3
1230	69	87 28 529		1991-	1	..Ring	..Ring	3
1240	70	87 04 942			1	..Retaining ring	..Spårring	4
1250	71	87 26 093			1	.Gear	.Kugghjul	4
1260						R	R	
1270	72	87 03 340		0,3MM	X	.Shim	.Shim	5
1280	72	87 03 357		0,4MM	X	.Shim	.Shim	5
1290	72	87 03 365		0,5MM	X	.Shim	.Shim	5
1300	73	87 02 359			1	.Nut	.Mutter	3
1310	74	*87 27 422*		11) NLS - USE 8729113	1	.Roller bearing	.Rullager	3
1320	74	87 29 113		12)	1	.Roller bearing	.Rullager	3
1330	75	87 26 168	S		1	.Sleeve	.Hylsa	4
1340	76	87 26 259		0,10MM	X	.Adjusting washer	.Justerbricka	5
1350	76	87 26 267		0,15MM	X	.Adjusting washer	.Justerbricka	5
1360	76	87 26 275		0,30MM	X	.Adjusting washer	.Justerbricka	5
1370	76	87 26 283		0,50MM	X	.Adjusting washer	.Justerbricka	5
1380	77	87 26 721			1	.Bearing housing	.Lagerhus	5
1390	78	87 27 505			4	.Screw	.Skruv	5
1400	79	87 26 531			1	.Final drive	.Slutväxel	5
1410	80	87 26 333			1	.Shaft	.Axel	6
1420	81	87 26 077			1	.Thrust washer	.Tryckbricka	4
1430	82	87 26 085			1	.Inner race	.Innerbana	3
1440	83	87 26 051			1	.Inner race	.Innerbana	4
1450	84	87 26 069		15)	1	.Gear	.Kugghjul	5
1460	84	87 27 844		16), -1990	1	.Gear	.Kugghjul	5
1470	84	87 28 743		1991-	1	.Gear	.Kugghjul	5
1480	85	87 25 137		1990-	1	.Gear	.Kugghjul	4
1490	85	87 28 701		1991-	1	.Gear	.Kugghjul	4
1500	86	87 28 198			1	.Retaining ring	.Spårring	5
1510	87	87 12 655			1	.Sleeve	.Hylsa	4
1520	88	87 14 693			15	.Roller	.Rulle	4
1530	89	87 26 887			1	.Needle bearing	.Nållager	3
1540	90	87 12 853			1	.Needle bearing	.Nållager	4
1550	91	87 00 114			1	.Lock plate	.Låsplatta	3
1560	92	87 18 843			1	.Screw	.Skruv	5
1570	93	87 04 348			1	.Gear	.Kugghjul	4
1580						R	R	
1590	94	87 15 229			2	..Bushing	..Bussning	3
1600	95	87 00 130			1	.Shaft	.Axel	6
1610						R	R	
1620	96	87 00 585		1990-	1	.Shift rail	.Växelföraraxel	6
1630	96	87 29 014		1991-	1	.Shift rail	.Växelföraraxel	6
1640	97	87 21 318			1	.Shift rail	.Växelföraraxel	6
1650						R	R	
1660	98	87 13 091		1990-	1	.Gear selector fork	.Växelförargaffel	5
1670						1/2	1/2	
1680	98	87 28 552		1991-	1	.Gear selector fork	.Växelförargaffel	5
1690						1/2	1/2	
1700	99	87 00 619		1990-	1	.Gear selector fork	.Växelförargaffel	5
1710						3/4	3/4	
1720	99	87 28 560		1991-	1	.Gear selector fork	.Växelförargaffel	5
1730						3/4	3/4	
1740	100	87 13 638			1	.Gear selector fork	.Växelförargaffel	5
1750						5	5	
1760	101	87 12 929			1	.Gear selector fork	.Växelförargaffel	5
1770						R	R	
1780	102	87 02 045			1	.Lever	.Hävarm	
1790	103	81 17 715			1	.Roll pin	.Spännstift	5
1800	104	87 13 000			1	.Bearing sleeve	.Lagerhylsa	4

11. Gear box --A07769, --B02533.
12. Gear box A07770--, B02534--.
15. Gear box --A07880, --B02615.
16. Gear box A07881--, B02616--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B02

Shafts, gears — Axlar, kugghjul

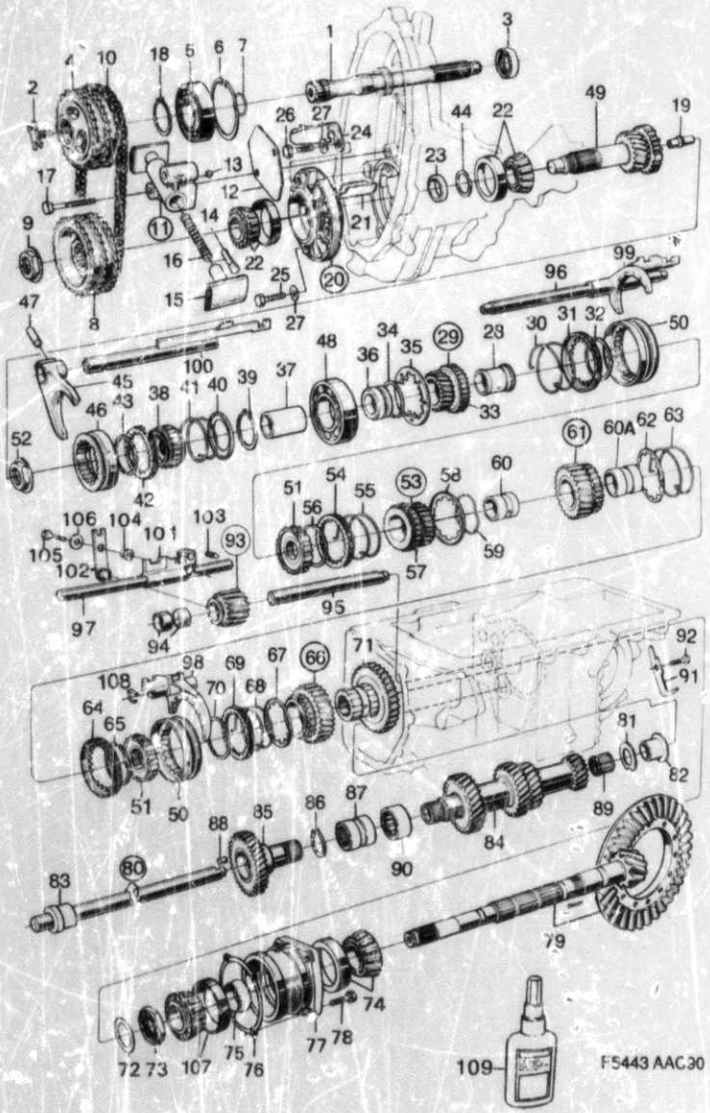

0340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1810	105	87 15 062			1	.Screw	.Skruv	5
1820	106	80 29 969			1	.Washer	.Bricka	5
1830	107	*87 25 194*		11) NLS - USE 8729105	1	.Roller bearing	.Rullager	3
1840	107	87 29 105		12)	1	.Roller bearing	.Rullager	3
1850	108	87 29 030		1991-	1	.Lock ring	.Låsring	3
1860	109	74 96 276		50 ML	X	Nut lock	Gängsäkring	5
1870						strong	stark	
1880						green	grön	
1890	109	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
1900						normal	normal	
1910						blue	blå	

11. Gear box --A07769, --B02533.
12. Gear box A07770--, B02534--.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automati-	3-C08
Kits	3-C10

3-B04

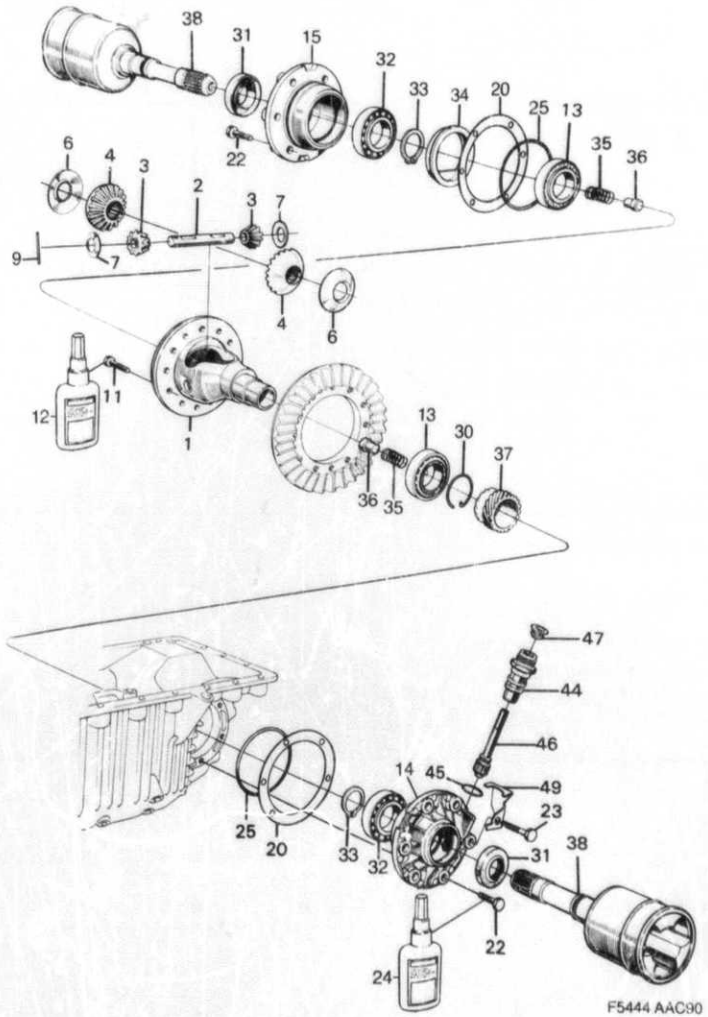

F5444 AAC90

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-009, 3-A10		Gear box, manual	Växellåda, manuell	
0020				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0030	1	87 19 890			1	.Differential housing	.Differentialhus	5
0040	2	87 19 940			1	.Differential shaft	.Differentialaxel	5
0050	3	87 29 394			2	.Differential pinion	.Differentialdrev	4
0060	4	87 29 386			2	.Differential side gear	.Differentialhjul	4
0070	6	87 19 882		1990	2	.Washer	.Bricka	3
0080	6	87 31 796		1991-	2	.Washer	.Bricka	3
0090	7	*87 19 874*		1990 NLS - USE 8731788	2	.Washer	.Bricka	3
0100	7	87 31 788		1991-	2	.Washer	.Bricka	3
0110	9	80 49 702			1	.Cotter pin	.Fjäderpinne	5
0120	11	87 18 140			12	.Screw	.Skruv	5
0121	12	74 96 268		50 ML	X	.Nut lock normal blue	.Gängsäkring normal blå	5
0122								
0123								
0130	13	*87 08 836*		1990 NLS - USE 8704389	2	.Pinion bearing	.Pinjonglager	3
0140	13	87 04 389		1991-	2	.Roller bearing	.Rullager	3
0150	14	87 11 160		LH	1	.Bearing seat	.Lagersäte	5
0160	15	87 04 280		RH	1	.Bearing seat	.Lagersäte	5
0170	20	83 41 604	S	0,10MM	X	.Shim	.Shim	5
0180	20	83 41 612	S	0,15MM	X	.Shim	.Shim	5
0190	20	83 41 620	S	0,30MM	X	.Shim	.Shim	5
0200	20	83 41 638	S	0,50MM	X	.Shim	.Shim	5
0210	22	80 83 941		1990	11	.Screw	.Skruv	5
0220	22	87 22 548		1991-	11	.Screw	.Skruv	5
0230	23	80 83 974		1990	1	.Screw	.Skruv	5
0240	23	87 22 555		1991-	1	.Screw	.Skruv	5
0245	24	74 96 284		50 ML	X	.Hydraulic sealant	.Gängtätning	5
0250	25	87 28 156			2	.O-ring	.O-ring	2
0260	30	87 04 421			1	.Stop ring	.Stoppring	5
0270	31	*87 04 298*		1990 NLS - USE 8731804	2	.Sealing collar	.Tätningskrage	5
0275	31	87 31 804		1991-	2	.Sealing collar	.Tätningskrage	5
0280	32	87 04 306			2	.Ball bearing	.Kullager	3
0290	33	87 28 193		M	2	.Retaining ring	.Spårring	5
0360	33	*79 15 200*		1990, A NLS - USE 87 28 198	2	.Lock ring	.Låsring	5
0300								
0310	33	87 28 198		1991-, A	2	.Retaining ring	.Spårring	5
0320	34	87 10 360			1	.Washer	.Bricka	5
0330	35	87 04 314			2	.Spring	.Fjäder	4
0340	36	87 04 322			2	.Plunger	.Plunge	5
0350	37	87 04 413			1	.Drive gear	.Drev	5
0360	38	87 22 472			2	.Companion flange	.Medbringare	3
0370	44	87 24 866			1	.Sleeve	.Hylsa	5
0380	45	87 11 707			1	.O-ring	.O-ring	5
0390	46	87 23 900			1	.Gear	.Kugghjul	5
0400	47	87 24 874			1	.Seal	.Tätning	4
0410	49	87 11 723			1	.Lock plate	.Låsplåt	6
0420		74 96 003		M	1	.Gasket kit	.Packningssats	5
0430				See page 4-063, 3-C16				

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-G02**
4	**Transmission**	**3-A02**
5	**Brakes**	**3-D02**
6	**Front assembly, Steering**	**3-F02**
7	**Suspension, Wheels**	**3-H02**
8A	**Body, external**	**4-A02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
9	**Tool, Labels**	**5-L02**
10	**Numerical register**	**6-A02**

4 GROUP INDEX

Clutch	**3-A06**
Clutch control	**3-A08**
Gear box, manual	**3-A10**
Gear box control, manual	**3-B06**
Gear box, automatic	**3-B12**
Gear box control, automatic	**3-C08**
Kits	**3-C10**

3--B06

Gear shift lever — Växelspak

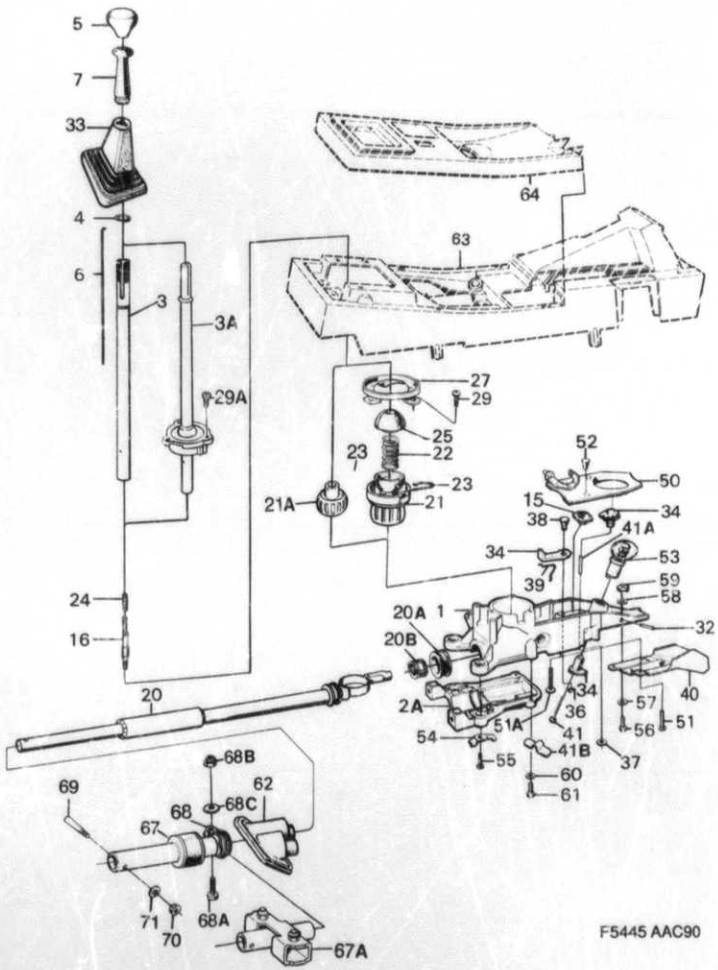

F5445 AAC90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 47 816			1	Gear shift housing	Växelspakshus	5
0020	2A	75 40 727			1	Gear shift housing	Växelspakshus	5
0030	3	93 48 541		1990	1	Gear lever	Växelspak	
0040	3A	42 79 493		1991-	1	Gear lever	Växelspak	5
0050	4	79 51 379			1	Retaining ring	Spårring	5
0060	5	75 44 828			1	Knob	Knopp	
0065	5	42 81 242		1992-, 40/136 300 027	1	Knob	Knopp	5
0066						leather	läder	
0070	6	83 33 197			1	Release rod	Spärrstång	3
0080	7	93 31 539			1	Companion flange	Medbringare	5
0085	7			1,138)	1	Companion flange	Medbringare	
0086						leather	läder	
0087	15			See page 3A-059, 2-C12		Contact	Kontakt	
0090	16	93 48 558			1	Catch pin	Spärrtopp	4
0100	20	75 47 334			1	Gear rod	Växelstång	5
0110	20A	83 75 156			1	.Bushing	.Bussning	5
0120	20B	83 73 078			1	.Plastic bushing	.Plastbussning	5
0130	21	93 48 665		1990	1	Companion flange	Medbringare	3
0140	21A	41 20 036		1991-	1	Companion flange	Medbringare	3
0150	22	93 26 380		1990	1	Spring	Fjäder	5
0160	23	83 75 024			1	Pin	Sprint	5
0170	24	87 01 385			1	Spring	Fjäder	5
0180	25	83 75 990		1990	1	Bearing shell	Lagerskål	5
0190	27	93 49 408		1990	1	Bearing shell	Lagerskål	5
0200	29	98 35 737		1990	3	Screw	Skruv	5
0210	29A	40 87 110		1991-	3	Screw	Skruv	5
0220	32	83 74 555			1	Plug	Propp	5
0230	33	93 44 300			1	Gaiter	Damask	5
0235	33	93 98 215			1	Gaiter	Damask	6
0236						leather	läder	
0260	34	93 37 445		See page 4-059, 3-C12	1	Gear	Kuggdrev	5
0270	35	93 42 734		US, CA, JP	1	Pin	Tapp	5
0280	36	79 51 353			2	Lock ring	Låsring	5
0290	37	80 29 985		-1992	1	Washer	Bricka	5
0295	37	91 66 372		1993-	1	Washer	Bricka	5
0300	38	*83 78 275*		NLS - USE 9320987	1	Pin	Tapp	5
0310	39	75 42 913			1	Spring	Fjäder	3
0320	40	93 42 338			1	Stay	Stag	3
0330	41	93 42 353		US, CA, JP	1	Pin	Stift	4
0340	41A	93 42 361		US, CA, JP	1	Pin	Stift	4
0350	41B	75 49 256		US, CA, JP	1	Brace	Bygel	3
0360	50	83 75 339			1	Cover	Lock	6
0370	51	80 59 487			2	Screw	Skruv	5
0380	51A	*80 57 697*		NLS - USE 8059487	1	Screw	Skruv	
0390	52	93 61 163			3	Nut	Mutter	5
0400	53	82 83 798			1	Lock cylinder	Låscylinder	2
0410	54	83 74 753			2	Adjusting washer	Justerbricka	
0420	55	93 22 785			2	Screw	Skruv	5
0430	56	93 24 708			1	Screw	Skruv	5
0440	57	70 61 328			1	Washer	Bricka	5
0450	58	79 33 823			3	Washer	Bricka	5
0460	59	83 73 714			3	Nut	Mutter	5
0470	60	79 33 823			2	Washer	Bricka	5
0480	61	79 34 797			2	Screw	Skruv	5
0490	62	40 27 603			1	Gaiter	Damask	5
0500	63			See page 8B-017, 5-A18		Cover	Kåpa	
0510	64			See page 8B-017, 5-A18		Cover	Kåpa	
0520	67	75 42 038		25)	1	Joint	Knutkoppling	5

1. Not as separate spare part. Ej som separat reservdel.
25. Ch. --M5007180, --M7008139.
138. Part of: 9398215 Ingår i: 9398215

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B08

Gear shift lever
Växelspak

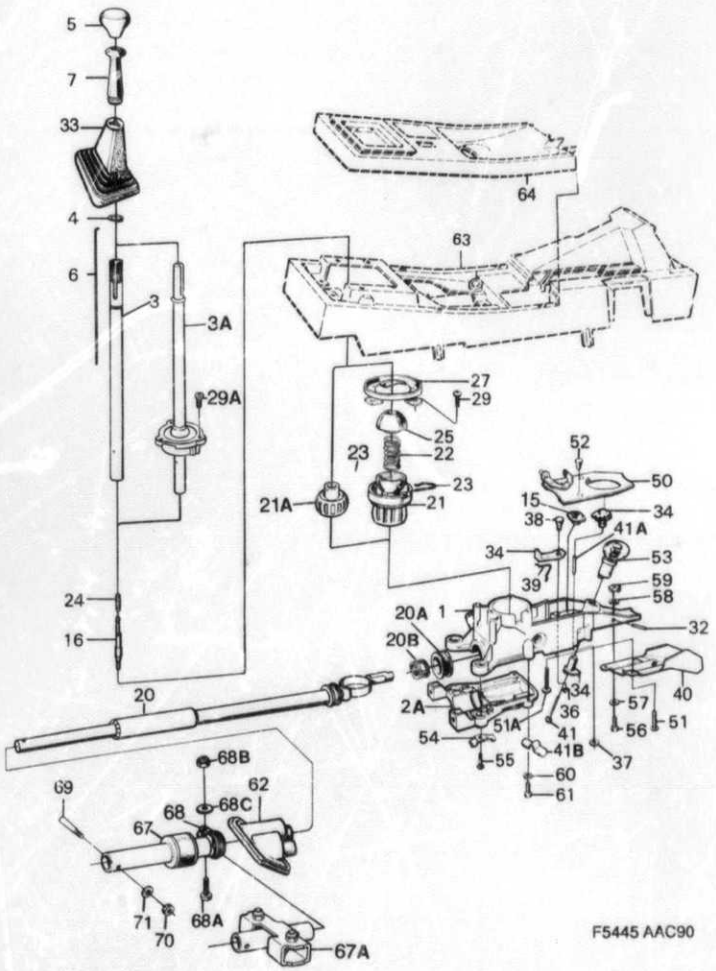

F5445 AAC90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	67A	42 79 634		26)	1	Joint	Knutkoppling	5
0540	68	93 48 533			1	Clamp	Klammer	5
0550	68A	75 41 907			1	Screw	Skruv	5
0560	68B	79 75 501			1	Nut	Mutter	5
0570	68C	80 29 985		-1992	1	Washer	Bricka	5
0575	68C	91 66 372		1993-	1	Washer	Bricka	5
0580	69	83 75 172			1	Pin	Pinne	3
0590	70	83 35 002			1	Nut	Mutter	5
0600	71	80 29 944			1	Washer	Bricka	5

26. Ch. M5007181--, M7008140--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B10

Drive shafts, outer universal joint

Drivaxlar, yttre knut

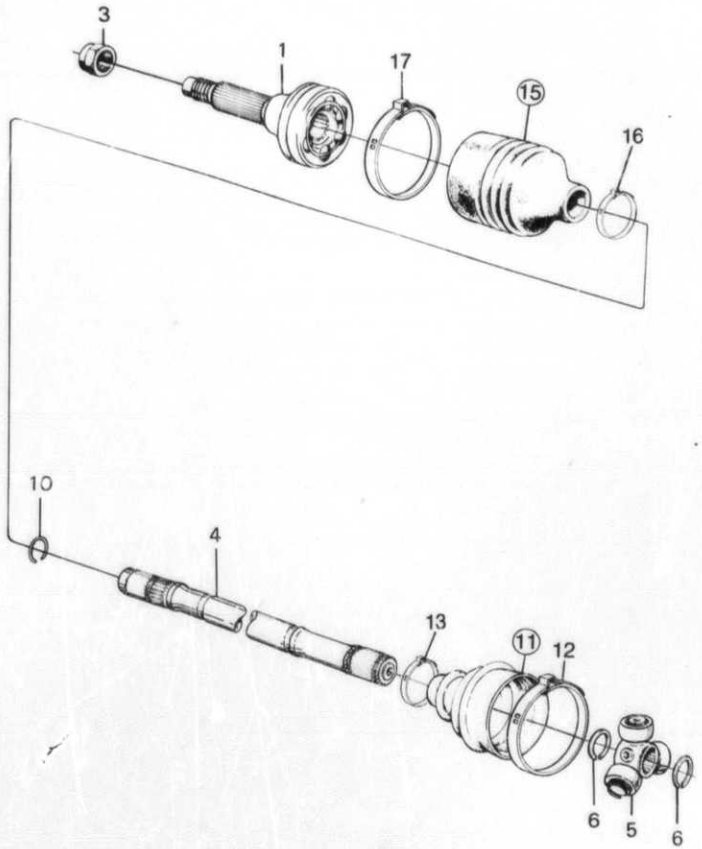

F4292 AAC90

0450	Pos	Part No/Art nr	K S	Noter/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 02 880		7)	2	Universal joint	Drivknut	4
0020	1	40 00 659		7), ABS	2	Universal joint	Drivknut	4
0030	3	89 65 360			2	Lock nut	Låsmutter	3
0040	4	91 02 823		21,7), LH	1	Drive shaft	Drivaxel	5
0050	4	41 06 159		22,7), LH	1	Drive shaft	Drivaxel	5
0060	4	91 02 831		21,7), RH	1	Drive shaft	Drivaxel	5
0070	4	41 06 142		22,7), RH	1	Drive shaft	Drivaxel	5
0080	5	89 50 628		7)	2	Companion flange	Medbringare	3
0090	6	89 50 636			2	Lock ring	Låsring	5
0100	10	89 21 520			2	Lock ring	Låsring	5
0110	11	*89 61 872*		See page 4-057, 3-C10	2	Bellows kit	Bälgsats	3
0110				NLS - USE 8993636				
0120	12	89 72 886	S		1	.Clamp	.Klämma	5
0130	13	41 95 822	S		1	.Clamp	.Klämma	3
0150	15	89 93 628		See page 4-057, 3-C10	2	Bellows kit	Bälgsats	2
0155	16	41 95 822	S	-1991	1	.Clamp	.Klämma	3
0160	16	44 25 534	S	1992-	1	.Clamp	.Klämma	3
0170	17	40 00 667	S		1	.Clamp	.Klämma	5

7. Also available as exchange unit. Finns även som utbytesenhet.
21. Ch. -L3007044, -L5002359.
22. Ch. L3007045-, L5002360-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

Gear box assy
3-B12
Automatic

Växellåda kpl
Automatisk

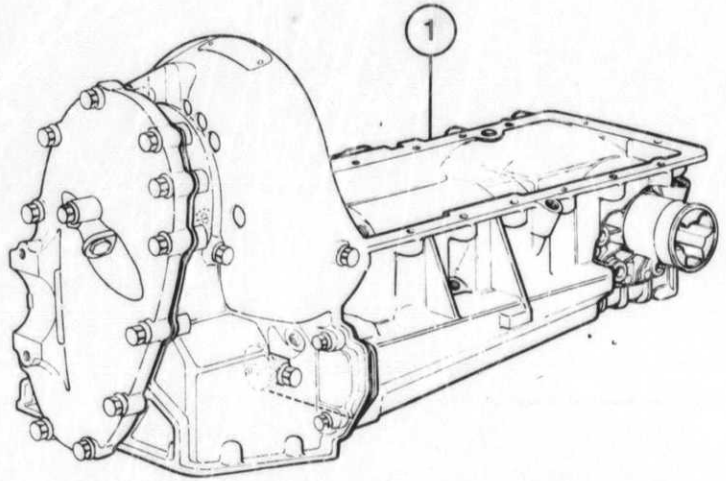

F1199 AAC90

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 49 611*		7), 1990	1	Gearbox	Växellåda	5
0020				MARKED: GA 33308, BW 013				
0020				NLS - USE 4118329				
0030	1	*75 49 652*		7), 1990	1	Gearbox	Växellåda	5
0040				MARKED: GA 53408, BW 014				
0040				NLS - USE 4118550				
0050	1	41 18 329		7), 1991	1	Gearbox	Växellåda	5
0060				MARKED: GA 33309, BW 015				
0065	1	41 18 329		7), 1992, GB	1	Gearbox	Växellåda	5
0066				MARKED: GA 33309, BW 015				
0070	1	41 18 550		7), 1991-	1	Gearbox	Växellåda	5
0080				MARKED: GA 53409, BW 016				
0090	1	42 80 897		7), 1992-	1	Gearbox	Växellåda	5
0100				MARKED: GA 33409, BW 017				


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

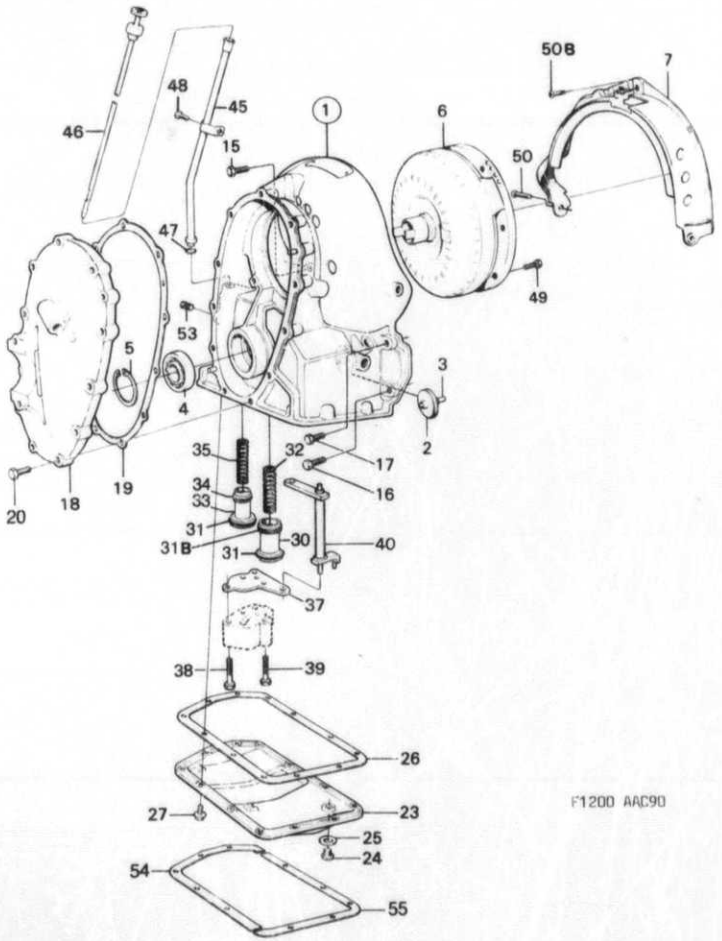

0525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	93 69 976			1	.Converter shell	.Momentomvandlarhus	5
0030	2	87 08 778			1	..Pulley wheel	..Brytskiva	
0040	3	87 05 428			1	..Shaft	..Axel	
0050	4	93 35 670			1	..Ball bearing	..Kullager	4
0060	5	93 35 688			1	..Lock ring	..Låsring	5
0070	6	93 62 898			1	.Torque converter	.Momentomvandlare	5
0080	7	93 62 666			1	.Cover	.Kåpa	5
0090	15	80 82 968		-1992	5	.Screw	.Skruv	5
0095	15	91 66 331		1993-	5	.Screw	.Skruv	5
0100	16	80 82 992			2	.Screw	.Skruv	5
0110	17	80 82 984			3	.Screw	.Skruv	5
0120	18	75 46 278			1	.Cover	.Lock	5
0130	19	93 35 407	S	1990	1	.Seal	.Tätning	3
0140	19	41 21 414		1991-	1	.Seal	.Tätning	3
0150	20	80 83 933	S		11	.Screw	.Skruv	5
0160	23	40 29 468			1	.Sump	.Oljesump	5
0170	24	87 08 380			1	.Plug	.Plugg	5
0180	25	41 18 527			1	.Washer	.Bricka	4
0190	26	40 29 443			1	.Seal	.Tätning	3
0200	27	40 29 526			12	.Screw	.Skruv	5
0210	30	93 69 992			1	.Piston	.Kolv	5
0220	31	93 34 665			2	.Seal	.Tätning	5
0230	31B	75 10 001			1	.Ring	.Ring	2
0240	32	75 42 244			1	.Spring	.Fjäder	5
0250	33	93 34 681			1	.Piston	.Kolv	5
0260	34	93 34 699			1	.Seal	.Tätning	5
0270	35	93 34 707		1990	1	.Spring	.Fjäder	5
0280	35	41 21 224		1991-	1	.Spring	.Fjäder	5
0290	37	93 46 057			1	.Plate	.Platta	5
0300	38	93 39 979			2	.Screw	.Skruv	5
0310	39	*93 39 987*		NLS	1	.Screw	.Skruv	5
0320	40	93 34 772			1	.Lever	.Hävarm	6
0330	45	75 49 819			1	.Oil filler	.Oljepåfyllning	6
0340	46	40 28 387			1	.Dipstick	.Oljesticka	3
0350	47	83 08 371			1	.O-ring	.O-ring	2
0360	48	80 82 935			1	.Screw	.Skruv	5
0370	49	79 79 123			8	.Screw	.Skruv	5
0380	50	80 82 943			1	.Screw	.Skruv	5
0390	50B	79 72 466			3	.Screw	.Skruv	5
0400	53	93 17 165			1	.Plug	.Plugg	5
0410	54	40 29 484			1	.Frame	.Ram	9
0420	55	40 29 492			1	.Frame	.Ram	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B16

Servos, covers, plugs

Servo, kåpor, pluggar

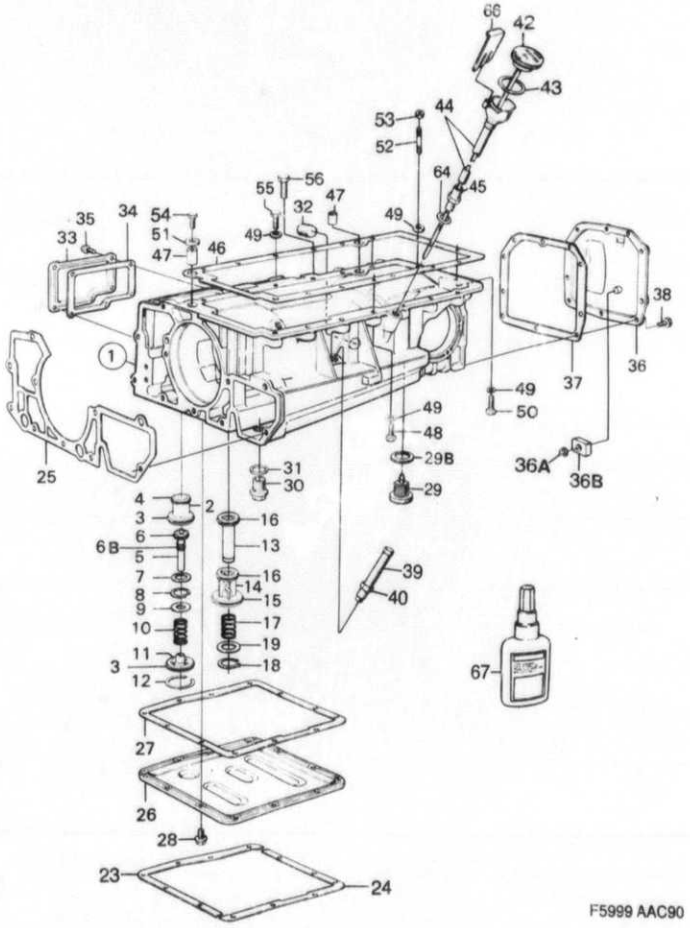

F5999 AAC90

0580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	75 42 277		1990, GA 33308	1	.Gearbox housing	.Växellådshus	6
0030	1	75 54 264		1990, GA 53408	1	.Gearbox housing	.Växellådshus	6
0040	1	*41 21 281*		1991-	1	.Gearbox housing	.Växellådshus	6
0050	2	75 42 293		1990, GA 33308	1	..Piston	..Kolv	6
0060	2	93 35 738		1990, GA 53408	1	..Piston	..Kolv	6
0070	2	75 42 285		1991-	1	..Piston	..Kolv	6
0080	3	87 06 111	S		2	..O-ring	..O-ring	2
0090	4	83 25 151			1	..O-ring	..O-ring	2
0100	5	75 42 301			1	..Pivot pin	..Lagertapp	6
0110	6	75 42 954			1	..Seal	..Tätning	3
0120	6B	93 35 753		1990-	1	..Spring	..Fjäder	
0130	7	93 35 787			1	..Pressure plate	..Tryckplatta	5
0140	8	93 35 795			1	..Lock ring	..Låsring	5
0150	9	93 35 803			1	..Pressure plate	..Tryckplatta	5
0160	10	93 35 811			1	..Spring	..Fjäder	5
0170	11	93 35 829			1	..Piston	..Kolv	6
0180	12	93 34 806			1	..Lock ring	..Låsring	5
0190	13	75 42 319		1990-	1	..Piston	..Kolv	6
0210	14	75 42 327		1990-	1	..Piston	..Kolv	6
0215	14	41 21 182		1991-	1	..Piston	..Kolv	6
0220	15	87 09 610			1	..O-ring	..O-ring	2
0230	16	87 06 129			2	..O-ring	..O-ring	2
0240	17	*75 42 335*		1990 NLS	1	..Spring	..Fjäder	5
0250	18	93 48 988		1990-	1	..Lock ring	..Låsring	
0260	19	*93 41 330*		1990 NLS	2	.Washer	.Bricka	5
0270	23	40 29 500			1	.Frame	.Ram	5
0280	24	40 29 518			1	.Frame	.Ram	5
0290	25	93 34 780		1990-	1	.Gasket	.Packning	3
0300	25	41 21 380		1991-	1	.Gasket	.Packning	5
0310	26	40 29 476			1	.Sump	.Oljesump	5
0320	27	40 29 450			1	.Gasket	.Packning	3
0330	28	40 29 526			12	.Screw	.Skruv	5
0340	29	87 17 407			1	.Drain plug	.Avtappningspropp	6
0350	29B	87 17 415			1	.Gasket	.Packning	4
0360	30	*87 11 871*		1990 NLS - USE 8731762	1	.Drain plug	.Avtappningspropp	1
0370	30	87 31 762		1991-	1	.Drain plug	.Avtappningspropp	1
0380	31	87 18 439	S	1990-	1	.Gasket	.Packning	3
0390	31	87 28 057	S	1991-	1	.Gasket	.Packning	3
0400	32	87 10 857			1	.Plug	.Plugg	3
0410	33	40 28 940			1	.Cover	.Lock	5
0420	34	75 42 665	S		1	.Gasket	.Packning	3
0425	35	*80 19 903*		-1992 NLS - USE 9166281	5	.Screw	.Skruv	5
0430	35	91 66 281		1993-	5	.Screw	.Skruv	5
0440	36	*87 22 035*		1990 NLS - USE 8729683	1	.Cover	.Lock	5
0450	36	87 29 683		1991- (8729329)	1	.Cover	.Lock	5
0460	36A	79 77 507		1991-	1	..Washer	..Bricka	5
0470	36B	87 27 745		1991-	1	..Magnet	..Magnet	3
0480	37	87 28 669			1	.Gasket	.Packning	3
0490	38	81 25 197			10	.Screw	.Skruv	5
0500	39	87 06 152			1	.Adjustment screw	.Justerskruv	6
0510	40	87 06 160			1	.Nut	.Mutter	
0530	42	75 14 201			1	Dipstick	Oljesticka	3
0540	43	93 61 544			1	Ring-gland	Packningsring	4
0550	44	93 68 200			1	Oil filler	Oljepåfyllning	6
0560	45	93 61 452			1	Nipple	Nippel	6
0570	46	*75 10 241*	S	NLS - USE 7514946	1	Gasket	Packning	3
0600		81 52 381		300 ML	X	Flange sealant	Flänstätning	3
0620	47	83 00 725			2	Sleeve	Hylsa	4
0630	48	*80 83 958*		NLS - USE 8125213	7	Screw	Skruv	5
0640	49	80 29 935		-1992	14	Washer	Bricka	5
0645	49	91 66 372		1993-	14	Washer	Bricka	5
0650	50	80 82 968		1990-	1	Screw	Skruv	5
0660	50	*80 83 958*		1991- NLS - USE 8125213	1	Screw	Skruv	5
0670	51	70 61 328			1	Washer	Bricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B18

Servos, covers, plugs

Servo, kåpor, pluggar

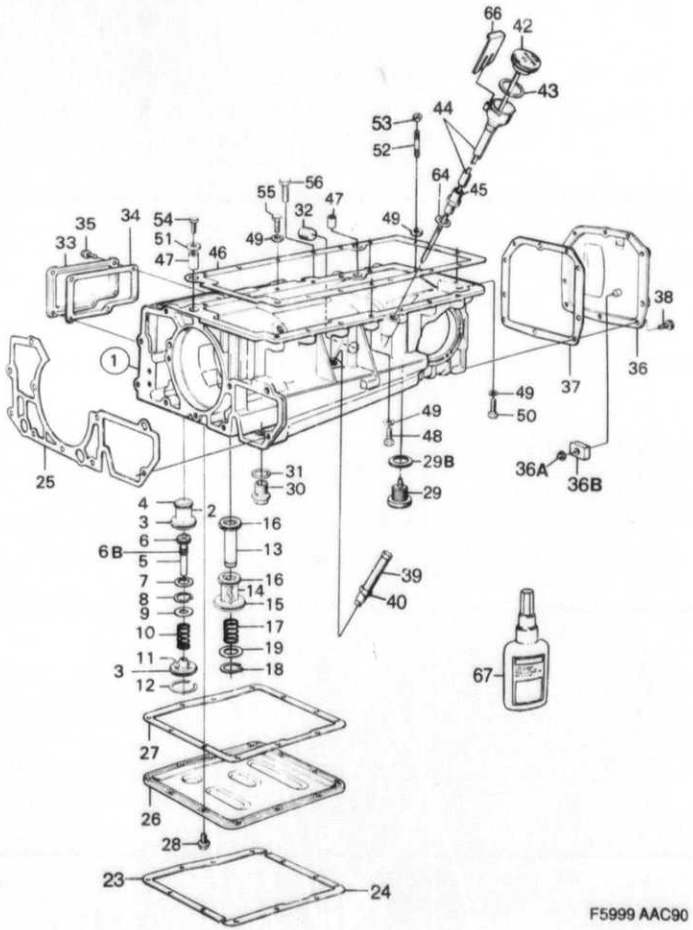

F5999 AAC90

0580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0680	52	80 05 928			1	Stud	Pinnskruv	5
0690	53	81 51 235			1	Nut	Mutter	5
0700	54	93 46 354			1	Screw	Skruv	5
0710	55	93 46 362			5	Screw	Skruv	5
0720	56	93 46 370			1	Screw	Skruv	5
0730	64	93 61 627			1	Washer	Bricka	5
0740	66	93 62 542			1	Plate	Platta	6
0745	67	74 96 284		50 ML	X	Hydraulic sealant	Gängtätning	5
0750								
0760		93 35 563		See page 4-057, 3-C10	X	Gasket kit	Packningsats	2

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B20

Gears, pinion, etc

Drev, pinjong, etc

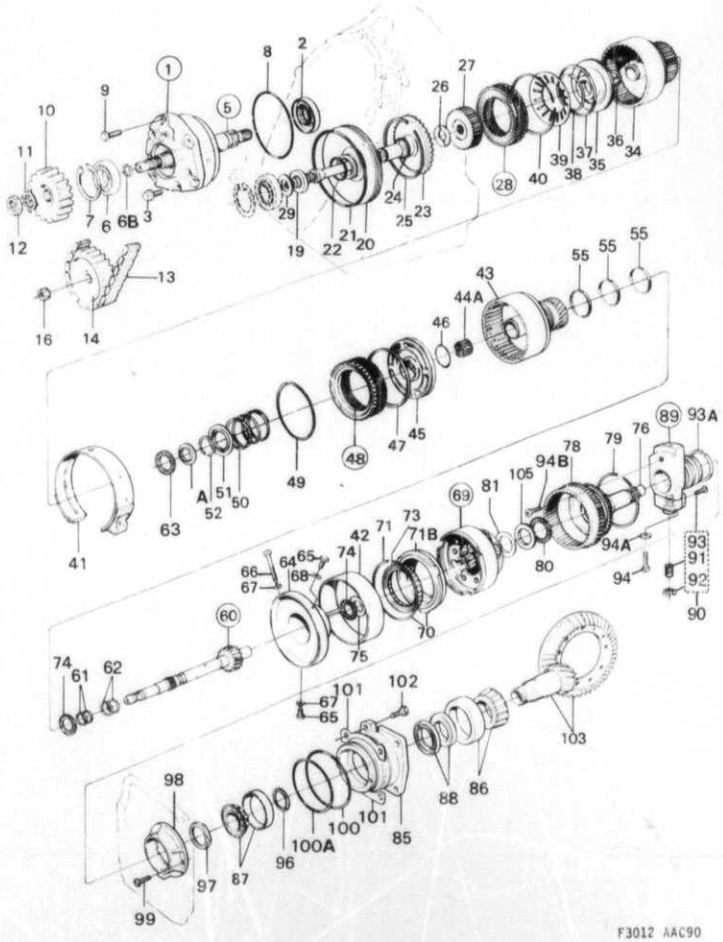

0625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	93 64 498			1	.Oil pump	.Oljepump	5
0030	2	93 35 696			1	..Seal	..Tätning	2
0040	3	87 05 659			5	..Screw	..Skruv	
0050	5	93 62 286			1	.Shaft	.Axel	5
0060	6	*87 05 436*		NLS - USE 7031305	1	..Ball bearing	..Kullager	
0070	6B	93 62 294			1	..Seal	..Tätning	3
0080	7	87 05 444			1	.Clip	.Clips	5
0090	8	87 05 725	S		1	.O-ring	.O-ring	2
0100	9	80 82 943			3	.Screw	.Skruv	5
0110	10	93 62 906		GA 33308, 33309	1	.Chain gear 40 cogs	.Kedjehjul 40 kuggar	5
0120								
0130	10	93 35 027		GA 53408, 53409, 33409	1	.Chain gear 41 cogs	.Kedjehjul 41 kuggar	5
0140								
0150	11	93 38 005			1	.Washer	.Bricka	5
0160	12	93 38 013			1	.Nut	.Mutter	5
0170	13	93 35 050			1	.Chain	.Kedja	5
0180	14	93 62 914		GA 33308, 33309	1	.Chain gear 37 cogs	.Kedjehjul 37 kuggar	5
0190								
0200	14	93 64 522		GA 53408, 53409, 33409	1	.Chain gear 36 cogs	.Kedjehjul 36 kuggar	5
0210								
0220	16	93 64 514			1	.Nut	.Mutter	5
0230	19	93 34 990			1	.Washer	.Bricka	5
0240	20	93 34 756			1	.Cover	.Lock	5
0250	21	93 44 219	S		1	.Seal	.Tätning	3
0260	22	93 34 764	S		1	.O-ring	.O-ring	3
0270	23	93 64 589			1	.Shaft	.Axel	5
0280	24	93 44 227	S		3	.Seal	.Tätning	3
0290	25	87 06 491			1	.Lock ring	.Låsring	5
0300	26	75 40 909	S		1	.Washer	.Bricka	5
0310	27	87 09 446			1	.Clutch hub	.Kopplingsnav	6
0320	28	75 43 051		See page 4-063, 3-C16	1	.Disc kit	.Lamellsats	2
0330	29	93 35 019	S	0,25MM	X	.Shim	.Shim	5
0340	29	93 35 001		0,50MM	X	.Shim	.Shim	5
0350	34	75 42 434			1	.Cylinder	.Cylinder	5
0360	35	87 08 786			1	.Piston	.Kolv	5
0370	36	87 06 327	S		1	.O-ring	.O-ring	2
0380	37	87 06 335	S		1	.Ring	.Ring	3
0390	38	87 06 343			1	.Ring	.Ring	5
0400	39	93 03 751	S		2	.Spring	.Fjäder	5
0410	40	87 06 491	S		1	.Lock ring	.Låsring	5
0420	41	75 43 028			1	.Brake lining	.Bromsband	3
0430	42	75 49 595			1	.Brake lining	.Bromsband	3
0440	43	75 42 897			1	.Drum	.Trumma	5
0450	44A	87 06 582			1	.Needle bearing	.Nållager	5
0460	45	93 36 041			1	.Piston	.Kolv	5
0470	46	87 06 129	S		1	.O-ring	.O-ring	2
0480	47	87 06 616	S		1	.Seal	.Tätning	3
0490	48	93 35 472		GA 53408, 53409	1	.Disc kit	.Lamellsats	2
0500				See page 4-059, 3-C12				
0510	48	93 44 110		GA 33308, 33309, 33409	1	.Disc kit	.Lamellsats	2
0520				See page 4-059, 3-C12				
0530	49	87 06 491		1,2MM	1	.Lock ring	.Låsring	5
0540	49	87 06 368		0,9MM	2	.Lock ring	.Låsring	5
0550	49	93 49 002		1,7MM	1	.Locking	.Låsning	5
0560	50	87 06 665		GA 53408	1	.Spring	.Fjäder	5
0565	50	75 42 475		GA 33308, 33309, 53409, 33409	1	.Spring	.Fjäder	5
0570								
0580	51	87 06 673			1	.Seat	.Säte	
0590	52	87 06 681			1	.Lock ring	.Låsring	
0600	55	87 06 707	S		3	.Seal	.Tätning	3
0610	60	93 64 605	S	1990	1	.Sun gear	.Solhjul	6
0620	60	41 21 323		1991-	1	.Sun gear	.Solhjul	5
0630	61	93 64 373	S		2	..Seal	..Tätning	5
0640	62	93 61 551	S		2	.Seal	.Tätning	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B22

Gears, pinion, etc
Drev, pinjong, etc

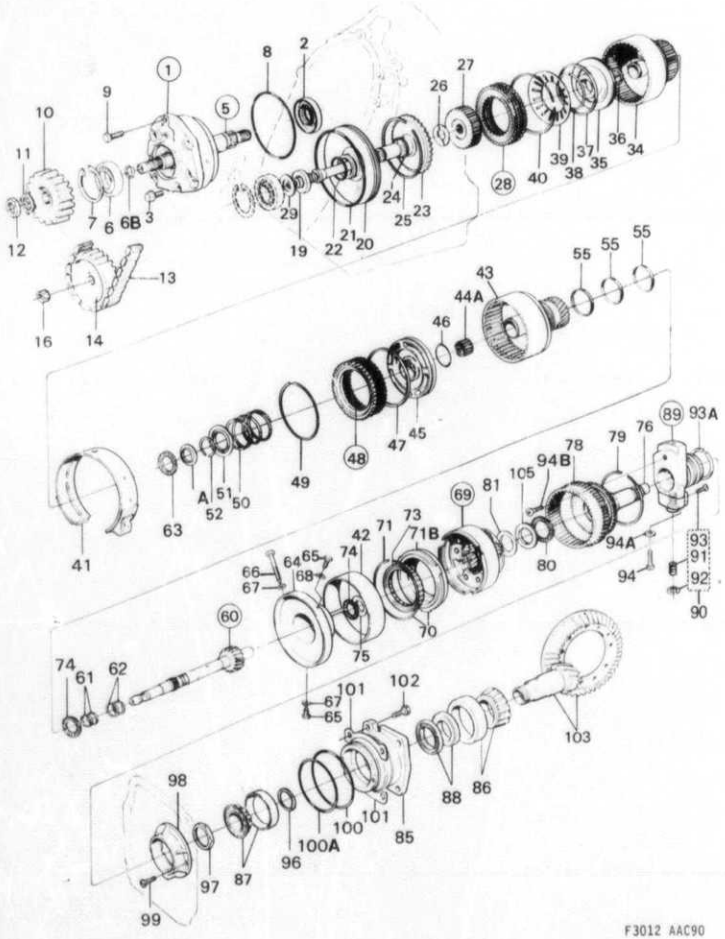

0625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	63	93 69 216	S		1	.Needle bearing	.Nållager	5
0660	63A	93 69 208			1	.Washer	.Bricka	5
0670	64	75 42 483		1990	1	.Bearing sleeve	.Lagerhylsa	5
0680	64	41 21 232		1991-	1	.Bearing sleeve	.Lagerhylsa	5
0690	65	75 46 260			2	.Screw	.Skruv	5
0700	66	87 06 848			1	.Screw	.Skruv	
0710	67	87 06 855	S		2	.Lock washer	.Låsbricka	5
0720	68	87 06 855	S		1	.Lock washer	.Låsbricka	5
0730	69	93 64 647			1	.Planetary gear	.Planetväxel	6
0740	70	93 45 984		See page 4-059, 3-C12	1	..Free wheel	..Frihjul	6
0750	71	87 05 170			1	...Locking wire	...Låstråd	
0760	71B	93 44 250			1	...Bearing carrier	...Lagerhållare	5
0770	73	87 07 051			1	.Clutch	.Koppling	6
0780	74	87 09 347			1	.Needle bearing	.Nållager	5
0790	75	93 34 889	S		1	.Bearing race	.Lagerbana	6
0800	76	93 34 939			1	.Shaft	.Axel	6
0810	78	75 42 491			1	.Ring gear	.Ringdrev	5
0820	79	87 07 457			1	.Lock ring	.Låsring	5
0830	80	83 25 334	S		1	.Needle bearing	.Nållager	5
0840	81	87 08 703	S	0,25MM, MAX 3 OFF	X	.Shim	.Shim	4
0850	85	93 36 074			1	.Pinion bearing housing	.Pinjonglagerhus	6
0860	86	93 35 522			1	.Pinion bearing kit	.Pinjonglagersats	4
0870	87	93 35 514			1	.Pinion bearing kit	.Pinjonglagersats	4
0880	88	93 36 116	S		2	.Seal	.Tätning	3
0890	89	93 62 864		1990	1	.Regulator	.Regulator	5
0900	89	93 62 864		1991, GA 33309	1	.Regulator	.Regulator	5
0910	89	41 21 273		1991-, GA 53409, 33409	1	.Regulator	.Regulator	5
0920	90	93 62 880		1990	1	..Regulator kit	..Regulatorsats	5
0930	90	93 62 880		1991, GA 33309	1	..Regulator kit	..Regulatorsats	5
0940	90	41 21 240		1991-, GA 53409, 33409	1	..Regulator kit	..Regulatorsats	5
0950	91	*87 07 234*		1990 NLS	1	...Spring	...Fjäder	
0960	91	*87 07 234*		1991, GA 33309 NLS	1	...Spring	...Fjäder	
0970	91	41 21 349		1),1991-,GA 53409, 33409	1	...Spring	...Fjäder	
0980	92	*87 08 851*		NLS	1	...Clamping ring	...Spännring	5
0990	93	*87 07 275*		NLS	2	...Screw	...Skruv	
1000	93A	93 34 947	S		3	...Seal	...Tätning	3
1010	94	83 25 722			2	...Screw	...Skruv	5
1020	94A	79 33 823		1)	2	...Washer	...Bricka	5
1030	94B	93 44 102			1	.Screw	.Skruv	5
1040	96	93 41 009		2,850MM	X	.Shim	.Shim	5
1050	96	93 41 017		2,925MM	X	.Shim	.Shim	5
1060	96	93 41 025		3,000MM	X	.Shim	.Shim	5
1070	96	93 41 033		3,075MM	X	.Shim	.Shim	5
1080	96	93 41 041		3,150MM	X	.Shim	.Shim	5
1090	96	93 41 058		3,225MM	X	.Shim	.Shim	5
1100	96	93 41 066		3,300MM	X	.Shim	.Shim	5
1110	96	93 41 074		3,375MM	X	.Shim	.Shim	5
1120	96	93 41 082		3,450MM	X	.Shim	.Shim	5
1130	96	93 41 090		3,525MM	X	.Shim	.Shim	5
1140	96	93 41 108		3,600MM	X	.Shim	.Shim	5
1150	96	93 41 116		3,675MM	X	.Shim	.Shim	5
1160	96	93 41 124		3,750MM	X	.Shim	.Shim	5
1170	97	93 36 140			1	.Nut	.Mutter	5
1180	98	93 36 157			1	.Casing	.Hus	5
1190	99	93 36 132			2	.Screw	.Skruv	5
1200	100	93 34 913	S		1	.Seal	.Tätning	2
1210	100A	93 62 310			1	.O-ring	.O-ring	3
1220	101	93 34 962	S	0,004", (0,10 MM)	X	.Shim	.Shim	5
1230	101	93 34 970	S	0,006", (0,15 MM)	X	.Shim	.Shim	5
1240	101	93 34 988	S	0,012", (0,30 MM)	X	.Shim	.Shim	5
1250	102	75 11 884			4	.Screw	.Skruv	5
1260	103	87 27 018			1	.Final drive	.Slutväxel	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-B24

Gears, pinion, etc

Drev, pinjong, etc

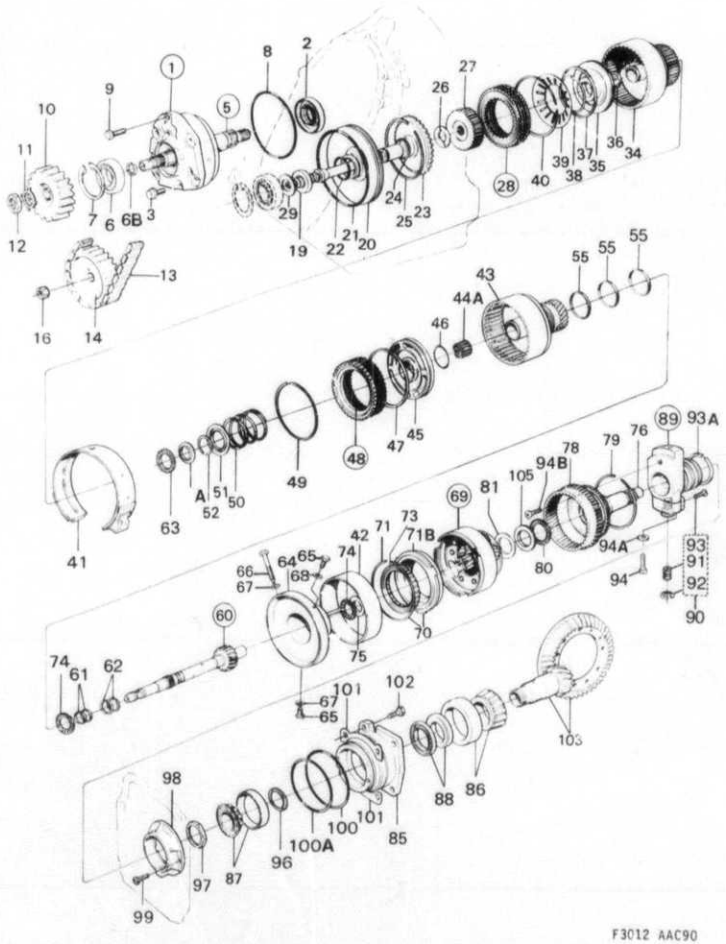


0625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1270	105	83 25 342			1	.Washer	.Bricka	
1280								
1290		93 64 613		See page 4-061, 3-C14	X	Planetary gear kit	Planetväxelsats	6
1300		75 40 891		See page 4-061, 3-C14	X	Thrust washer kit	Axiallagersats	5
1310		75 42 673		See page 4-061, 3-C14	X	Sealing kit	Tätningssats	3
1320		93 65 172		See page 4-063, 3-C16	X	Oil ring set	Oljeringsats	3
1330		*93 69 729*		NLS	X	Spring kit	Fjädersats	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

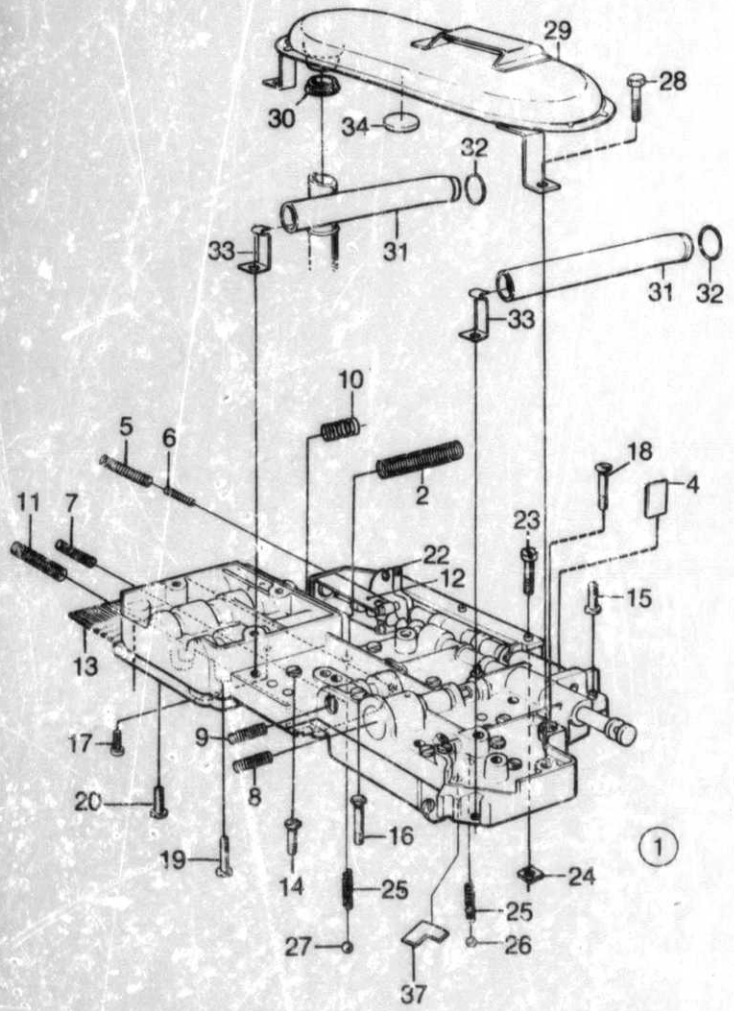

F1203 AAC90

Gear box, automatic
3-C02
Control system
Part 1

Växellåda, automatisk
Kontrollsystem
Del 1

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	75 42 517		GA 33308	1	.Valve housing	.Ventilhus	5
0030	1	41 21 497		GA 33309, 33409	1	.Valve housing	.Ventilhus	5
0040	1	75 42 525		GA 53408	1	.Valve housing	.Ventilhus	5
0050	1	41 21 331		GA 53409	1	.Valve housing	.Ventilhus	5
0060	2	75 42 533	S	1990	1	..Spring	..Fjäder	6
0070	2	41 21 406		1991-	1	..Spring	..Fjäder	6
0080	4	*87 07 747*		NLS	1	..Stop	..Stopp	
0090	5	*87 07 721*	S	NLS	1	..Spring	..Fjäder	
0100	6	*87 07 754*	S	NLS	1	..Spring	..Fjäder	6
0110	7	*87 07 929*	S	NLS	1	..Spring	..Fjäder	
0120	8	75 42 541		28)	1	..Spring	..Fjäder	6
0130	8	75 42 574		29)	1	..Spring	..Fjäder	6
0140	8	75 42 558		30)	1	..Spring	..Fjäder	6
0150	8	75 42 566		31)	1	..Spring	..Fjäder	6
0160	9	75 42 830		GA 33308	1	..Spring	..Fjäder	6
0170	9	*87 07 788*		GA 53408, 53409, 33309, 33409 NLS	1	..Spring	..Fjäder	6
0175								
0180	10	75 42 822		1990	1	..Spring	..Fjäder	5
0190	10	41 21 398		1991-	1	..Spring	..Fjäder	5
0200	11	87 07 952			1	..Spring	..Fjäder	6
0210	12	75 11 371			1	..Bracket	..Konsol	6
0220	13	75 46 252			1	..Plate	..Platta	6
0230	14	87 08 026			1	..Screw	..Skruv	
0240	15	87 07 887			1	..Screw	..Skruv	
0250	16	75 42 616			1	..Screw	..Skruv	5
0260	17	75 42 624			1	..Screw	..Skruv	5
0270	18	*87 09 479*		NLS	2	..Screw	..Skruv	
0280	19	87 08 026			6	..Screw	..Skruv	
0290	20	87 07 887			6	..Screw	..Skruv	
0300	22	93 00 286			1	..Cam	..Kam	4
0310	23	93 64 431			2	..Screw	..Skruv	5
0320	24	93 17 439			2	..Nut	..Mutter	5
0330	25	75 42 590			2	..Spring	..Fjäder	5
0340	26	*87 05 691*		NLS	1	..Ball	..Kula	
0350	27	75 42 608			1	..Ball	..Kula	5
0360	28	87 08 695			1	.Screw	.Skruv	
0370	29	*75 44 125*		NLS - USE 4277455, 9317348	1	.Oil filter	.Oljefilter	3
0380	30	93 17 348			1	.Seal	.Tätning	3
0390	31	93 61 064			2	.Tube	.Rör	6
0400	32	87 05 733			2	.O-ring	.O-ring	2
0410	33	93 61 072			2	.Clip	.Clips	5
0420	34	87 06 414			1	.Magnet	.Magnet	3
0430	37	75 47 946		1990	1	.Clip	.Clips	5
0440	37	75 46 690		1991-	1	.Clip	.Clips	5
0450								
0460		75 42 681		GA 33308	X	Spring kit	Fjädersats	5
0470				See page 4-063, 3-C16				
0480		41 21 448		GA 33309, 33409, 53409	X	Spring kit	Fjädersats	5
0490				See page 4-063, 3-C16				
0500		*75 42 699*		GA 53408	X	Spring kit	Fjädersats	5
0510				See page 4-063, 3-C16				
0510				NLS				


28. Marked: green Märkt: grön
29. Marked: yellow Märkt: gul
30. Alternative marked: red Alternativ, märkt: röd
31. Alternative, marked: orange Alternativ, märkt: orange

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B05
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

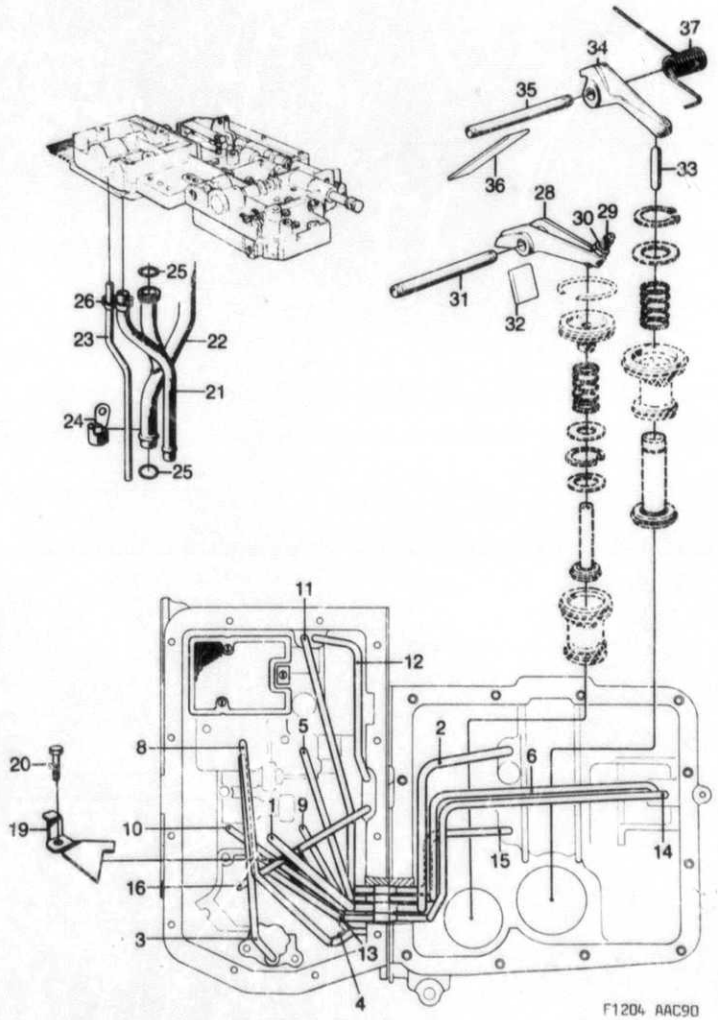

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	75 42 632			1	. Tube	. Rör	5
0030	2	93 35 241			1	. Tube	. Rör	6
0040	3	75 42 640			1	. Tube	. Rör	5
0050	4	93 35 266			1	. Tube	. Rör	6
0060	5	93 35 324			1	. Tube	. Rör	6
0070	6	93 35 340			1	. Tube	. Rör	6
0080	8	75 42 657			1	. Tube	. Rör	5
0090	9	93 35 290			1	. Tube	. Rör	6
0100	10	93 35 308			1	. Tube	. Rör	6
0110	11	93 35 357			1	. Tube	. Rör	6
0120	12	93 35 365			1	. Tube	. Rör	6
0130	13	75 10 423			1	. Tube	. Rör	6
0140	14	75 10 431			1	. Tube	. Rör	5
0150	15	93 35 373			1	. Tube	. Rör	6
0160	16	93 35 381			1	. Tube	. Rör	6
0170	19	93 48 178			1	. Stay	. Stag	5
0180	20	93 62 328			1	. Screw	. Skruv	5
0190	21	87 09 164			1	. Tube	. Rör	4
0200	22	75 42 251			1	. Tube	. Rör	5
0210	23	93 34 749			1	. Tube	. Rör	6
0220	24	83 32 595			1	. Clamp	. Klammer	5
0230	25	87 05 733	S		2	. O-ring	. O-ring	2
0240	26	87 08 760			1	. Clip	. Clips	
0250	28	87 06 038			1	. Arm	. Arm	6
0260	29	87 06 046			1	. Adjustment screw	. Justerskruv	
0270	30	93 34 814			1	. Nut	. Mutter	5
0280	31	87 06 061			1	. Pin	. Pinne	6
0290	32	93 47 949			1	. Pressure plate	. Tryckplatta	5
0300	33	87 06 103			1	. Push rod	. Stötstång	
0310	34	93 34 822		1990-	1	. Lever	. Hävarm	6
0315	34	41 21 208		1991-	1	. Lever	. Hävarm	6
0320	35	87 06 061			1	. Pin	. Pinne	6
0330	36	87 05 220			1	. Link	. Länk	5
0340	37	75 44 844			1	. Spring	. Fjäder	5
0350								
0360		75 11 470		See page 4-063, 3-C16	1	Pipe set	Rörsats	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-C06

Controls in gear box

Reglage i växellådshus

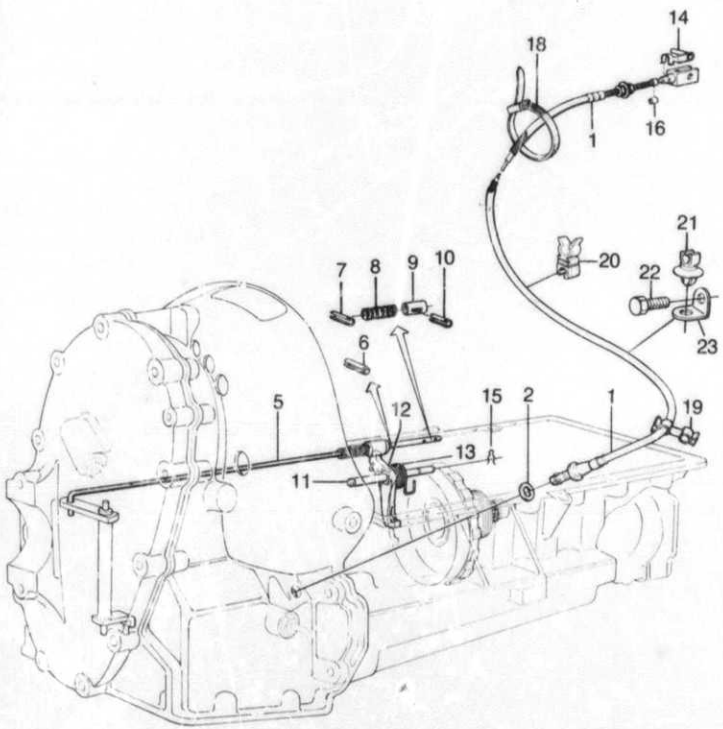

F3013 AAC90

0725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-035, 3-B12		Gear box, automatic	Växellåda, automatisk	
0020	1	93 36 207			1	.Cable	.Kabel	4
0030	2	93 62 856	S		1	.O-ring	.O-ring	5
0040	5	75 42 962		32)	1	.Gear rod	.Växelstång	5
0050	5	75 42 970		33)	1	.Gear rod	.Växelstång	5
0060	5	75 42 938		34)	1	.Gear rod	.Växelstång	5
0070	6	87 06 210			1	.Pin	.Pinne	5
0080	7	*93 17 694*		1) NLS	1	.Pin	.Pinne	
0090	8	*93 17 785*		NLS	1	.Spring	.Fjäder	
0100	9	93 17 793			1	.Sleeve	.Hylsa	5
0110	10	93 17 801			1	.Pin	.Pinne	5
0120	11	75 11 553			1	.Pin	.Pinne	5
0130	12	75 42 343		28)	1	.Catch	.Spärr	4
0140	12	75 42 350		35)	1	.Catch	.Spärr	4
0150	12	75 42 368		36)	1	.Catch	.Spärr	4
0160	12	75 42 376		38)	1	.Catch	.Spärr	4
0170	12	75 42 384		37)	1	.Catch	.Spärr	4
0180	13	93 34 863		1990	1	.Spring	.Fjäder	5
0190	13	41 21 364		1991-	1	.Spring	.Fjäder	5
0200	14	83 08 389			1	.Clip	.Clips	5
0210	15	75 11 561			1	.Bracket	.Hållare	5
0220	16	*87 09 305*		NLS	1	.Cable stop	.Kabelstopp	5
0230	18	*83 74 357*		-1990 NLS - USE 7971880	1	.Tensioning band	.Spännband	5
0240	19	93 45 257			1	.Clip	.Clips	5
0250	20	75 11 256		-1990	1	.Clamp	.Klammer	5
0260	21	40 00 543			1	Clamp	Klammer	5
0270	22	79 22 891			1	Screw	Skruv	5
0280	23	89 40 652			1	Brace	Bygel	5

1. Not as separate spare part. Ej som separat reservdel.
28. Marked: green Märkt: grön
32. Marked: 2 lugs Märkt: 2 flänsar
33. Marked: 4 lugs Märkt: 4 flänsar
34. Marked: 6 lugs Märkt: 6 flänsar
35. Marked: white Märkt: vit
36. Marked: blue Märkt: blå
37. Marked: violet Märkt: lila
38. Marked: red Märkt: röd

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-C08

Gear selector lever — *Växelväljarspak*

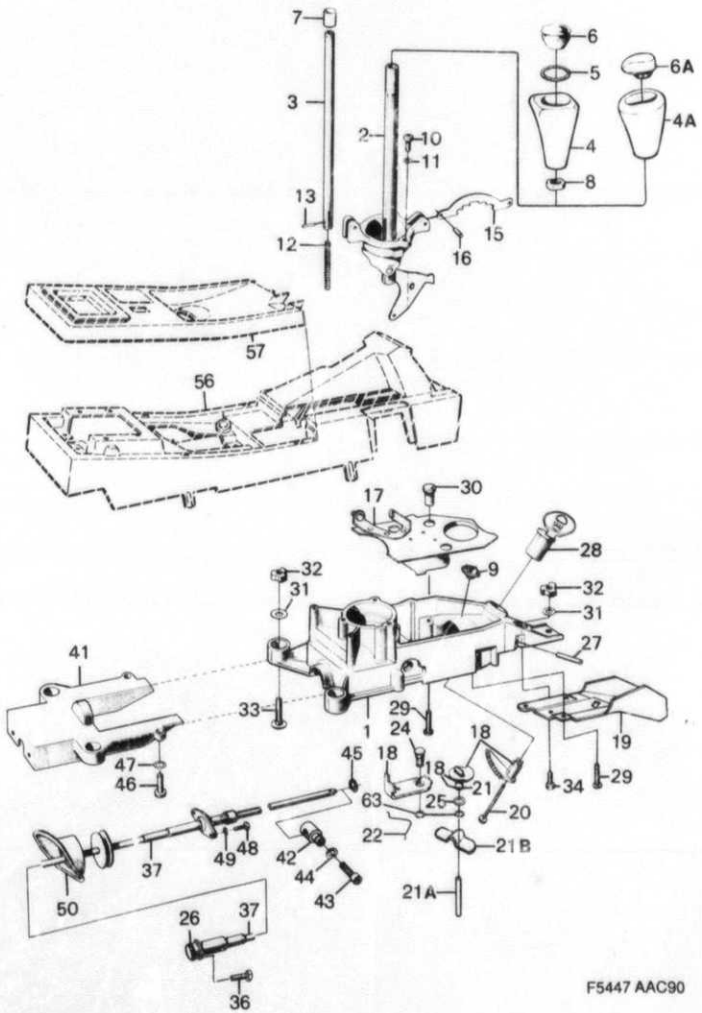

F5447 AAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 47 816			1	Gear shift housing	Växelspakshus	5
0020	2	93 49 549			1	Gear lever	Växelspak	
0030	3	93 01 797			1	Tube	Rör	5
0040	4	83 17 869		1990	1	Knob	Knopp	5
0050	4A	40 29 427		1991-	1	Knob	Knopp	5
0060	5	83 38 766		1990	1	Ring	Ring	5
0070	6	93 31 521		1990	1	Button	Knapp	4
0080	6A	40 29 435		1991-	1	Button	Knapp	4
0090	7	83 75 925		1990	1	Ring	Ring	3
0100	8	93 49 564			1	Lock nut	Låsmutter	5
0105	9			03A-1000		Contact	Kontakt	
0110	10	80 59 420			3	Screw	Skruv	5
0120	11	79 69 975			3	Washer	Bricka	5
0130	12	93 01 631			1	Spring	Fjäder	5
0140	13	93 18 197			1	Needle bearing	Nållager	6
0150	15	93 00 211			1	Catch	Spärr	5
0160	16	79 56 105			2	Pin	Stift	5
0170	17	*83 75 404*		NLS	1	Cover	Lock	6
0180	18	93 20 987		See page 4-059, 3-C12	1	Gear	Kuggdrev	3
0190	19	93 42 338			1	Stay	Stag	3
0200	20	93 42 353		US, CA, JP	1	Pin	Stift	4
0210	21	93 42 734			1	Pin	Tapp	5
0220	21A	93 42 361		US, CA, JP	1	Pin	Stift	4
0230	21B	75 49 256		US, CA, JP	1	Brace	Bygel	3
0240	22	75 42 913			1	Spring	Fjäder	3
0250	24	*83 78 275*		NLS - USE 9320987	1	Pin	Tapp	5
0260	25	80 29 985		-1992	1	Washer	Bricka	5
0265	25	91 66 372		1993-	1	Washer	Bricka	5
0270	26	79 82 945	S		1	O-ring	O-ring	2
0280	27	83 74 555			1	Plug	Propp	5
0290	28	*83 15 582*		NLS - USE 8283798	1	Lock cylinder with 2 keys	Låscylinder med 2 nycklar	
0300								
0310	29	80 59 487			3	Screw	Skruv	5
0320	30	93 61 163			3	Nut	Mutter	5
0330	31	79 33 823			3	Washer	Bricka	5
0340	32	83 73 714			3	Nut	Mutter	5
0350	33	93 22 785			2	Screw	Skruv	5
0360	34	93 24 708		1990, I	1	Screw	Skruv	5
0370	36	79 69 223			1	Screw	Skruv	5
0380	37	93 39 243			1	Gear selector	Växelväljare	3
0390	41	93 01 698			1	Bracket	Fäste	3
0400	42	93 00 203			1	Nipple	Nippel	3
0410	43	93 18 908			1	Screw	Skruv	5
0420	44	79 36 016			1	E-circlip	Spårryttare	5
0430	45	79 35 984			1	E-circlip	Spårryttare	5
0440	46	79 34 771			2	Screw	Skruv	5
0450	47	79 33 823			2	Washer	Bricka	5
0460	48	79 34 318			2	Screw	Skruv	5
0470	49	*79 33 807*		NLS	2	Washer	Bricka	5
0480	50	75 49 165			1	Gaiter	Damask	5
0490	56			1990		Cover	Kåpa	
0500				See page 8B-017, 5-A18				
0510	56			1991-		Cover	Kåpa	
0520				See page 8B-019, 5-A20				
0530	57			See page 8B-017, 5-A18		Cover	Kåpa	
0540	63	79 51 353			2	Lock ring	Låsring	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX


Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10


Complete set
3-C10
Transmission


Satser
Kraftöverföring

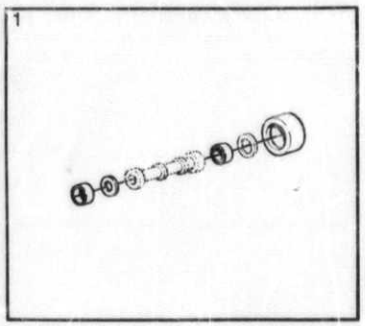


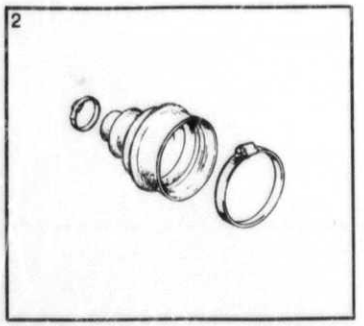

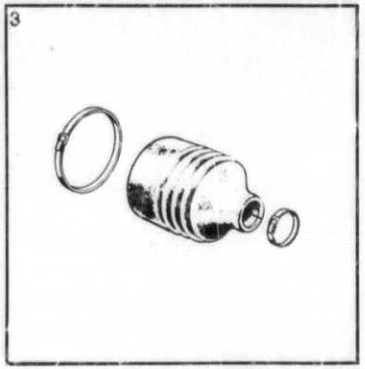

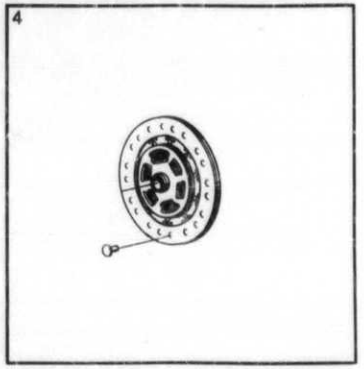

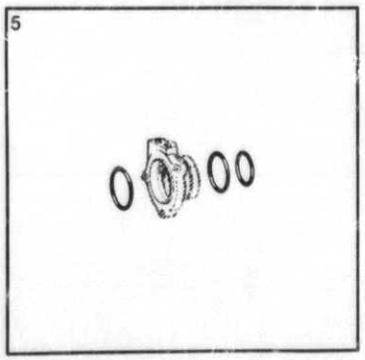

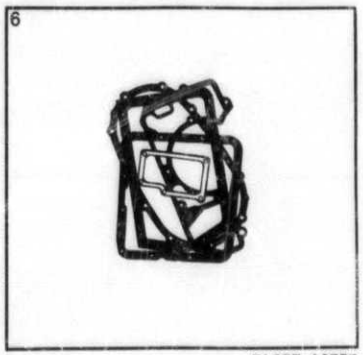

F1207 AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 156			X	Repair kit	Reparationssats	1
0020						master cylinder	huvudcylinder	
0030		89 03 304			1	.Gasket	.Packning	
0040		89 45 248			1	.Gasket	.Packning	5
0050		*73 13 182*		NLS	1	.Washer	.Bricka	
0060		89 45 255			1	.Washer	.Bricka	5
0070		89 40 769			1	.Gasket	.Packning	5
0080		73 13 240			1	.Seal	.Tätning	6
0090								
0100	2	89 93 073			X	Bellows kit	Bälgsats	3
0110						universal joint	drivknut	
0120		89 41 270		1)	1	.Bellows	.Bälg	3
0130		79 70 163			1	.Hose clamp	.Slangklamma	5
0140		70 48 465			1	.Band iron	.Bandjärn	5
0150		70 48 473			1	.Clamp	.Klammer	3
0160								
0170	2	*89 61 872*		B202 TURBO AND CARS	X	Bellows kit	Bälgsats	3
0180				WITH A NLS - USE 8993636		drive shaft	drivaxel	
0190		89 55 007		1)	1	.Bellows	.Bälg	3
0200		71 67 117			2	.Band iron	.Bandjärn	3
0210		70 48 473			2	.Clamp	.Klammer	3
0220								
0230	3	89 93 628			X	Bellows kit	Bälgsats	2
0240						universal joint	drivknut	
0250		40 02 747		1)	1	.Bellows	.Bälg	2
0260		71 67 117			2	.Band iron	.Bandjärn	3
0270		70 48 473			2	.Clamp	.Klammer	3
0280								
0290	4	*83 80 214*		NLS	X	Clutch lining	Lamellbelägg	
0300		*83 07 688*		1) NLS	2	.Clutch lining	.Lamellbelägg	5
0310		*83 00 469*		NLS	20	.Rivet	.Nit	5
0320								
0330	5	87 81 072			X	Sealing kit	Tätningssats	1
0340						slave cylinder	slavcylinder	
0350		87 11 806			1	.O-ring	.O-ring	2
0360		87 22 118		1)	1	.Seal	.Tätning	3
0370		87 22 126		1)	1	.Seal	.Tätning	3
0380								
0390	6	93 35 563		A	X	Gasket kit	Packningsats	2
0400		93 34 780			1	.Gasket	.Packning	3
0410		93 35 407			1	.Seal	.Tätning	3
0420		93 35 423			1	.Seal	.Tätning	3
0430		93 35 456			1	.Gasket	.Packning	3
0440		*87 08 398*		NLS - USE 4118527	1	.Washer	.Bricka	4

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10


Complete set
3-C12
Transmission


Satser
Kraftöverföring

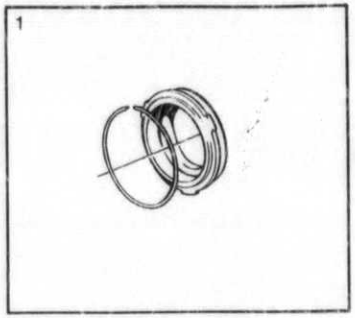

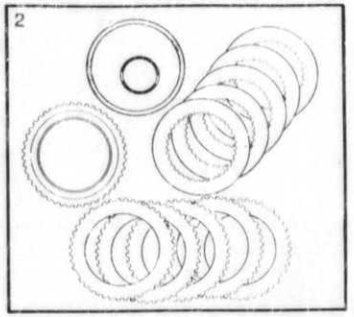



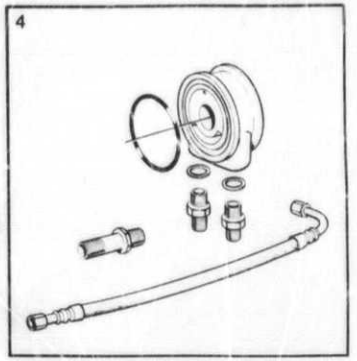

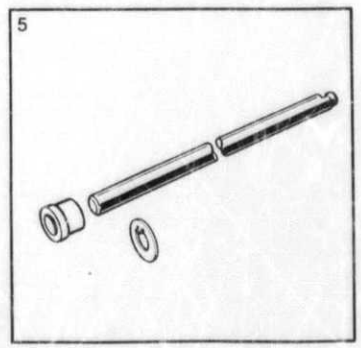

F1208 AAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 45 984		A	X	Free wheel	Frihjul	6
0020		87 05 162		1)	1	.Free wheel race	.Frihjulsring	
0030		87 05 170			1	.Locking wire	.Låstråd	
0040								
0050	2	93 44 110		A, GA 3308,33309,33409	X	Disc kit	Lamellsats	2
0060		93 44 078		1)	4	.Clutch disc	.Lamell	
0070		87 06 624		1)	2	.Clutch disc	.Lamell	
0080		87 06 632		1)	2	.Clutch disc	.Lamell	
0090		*93 23 361*		1) NLS	2	.Clutch disc	.Lamell	5
0100		83 24 139		1)	1	.Clutch disc	.Lamell	
0110		87 06 616			1	.Seal	.Tätning	3
0120		87 06 129			1	.O-ring	.O-ring	2
0130		93 19 153		1)	1	.Washer	.Bricka	5
0140								
0150	2	93 35 472		A, GA53408, 53409	X	Disc kit	Lamellsats	2
0160		93 44 078		1)	5	.Clutch disc	.Lamell	
0170		87 06 624		1)	3	.Clutch disc	.Lamell	
0180		87 06 632		1)	3	.Clutch disc	.Lamell	
0190		*93 23 361*		1) NLS	2	.Clutch disc	.Lamell	5
0200		83 24 139		1)	1	.Clutch disc	.Lamell	
0210		87 06 616			1	.Seal	.Tätning	3
0220		87 06 129			1	.O-ring	.O-ring	2
0230		93 19 153		1)	1	.Washer	.Bricka	5
0240								
0250	3	93 20 987		A	X	Gear	Kuggdrev	3
0260						gear lever lock	växelspakslås	
0270		*83 25 797*		NLS - USE 9320987	1	.Gear	.Kugghjul	
0280		40 28 361			1	.Drive gear	.Drev	4
0290		75 48 910			1	.Lock tab	.Låstunga	6
0300		93 42 734			1	.Pin	.Tapp	5
0310		*83 78 275*		NLS - USE 9320987	1	.Pin	.Tapp	5
0320		*83 75 974*		NLS - USE 7542913	1	.Spring	.Fjäder	
0330		79 51 353			1	.Lock ring	.Låsring	5
0340								
0350	3	93 37 445		M	X	Gear	Kuggdrev	5
0360						gear lever lock	växelspakslås	
0370		*83 25 797*		NLS - USE 9320987	1	.Gear	.Kugghjul	
0380		40 28 361			1	.Drive gear	.Drev	4
0390		93 47 758			1	.Lock tab	.Låstunga	
0400		93 42 734			1	.Pin	.Tapp	5
0410		*83 78 275*		NLS - USE 9320987	1	.Pin	.Tapp	5
0420		*83 75 974*		NLS - USE 7542913	1	.Spring	.Fjäder	
0430		79 51 353			2	.Lock ring	.Låsring	5
0440								
0450	4	*93 20 268*		39) NLS	X	Conversion kit	Konverteringssats	3
0460		93 01 425			1	.Hydraulic hose	.Hydraulslang	4
0470		83 14 395			2	.Seal	.Tätning	4
0480		93 03 678			2	.Nipple	.Nippel	5
0490		79 67 912			1	.O-ring	.O-ring	2
0500		83 14 445			1	.Adapter	.Adapter	5
0510		83 14 452			1	.Screw	.Skruv	5
0520								
0530	5	93 37 437			X	Countershaft	Mellanaxel	6
0540		87 12 630			1	.Shaft	.Axel	6
0550		87 18 645			1	.Thrust washer	.Tryckbricka	4
0560		87 12 887			1	.Thrust washer	.Tryckbricka	4
0570								
0580	5	93 21 266			X	Countershaft	Mellanaxel	6
0590		87 12 630			1	.Shaft	.Axel	6
0600		87 12 887			1	.Thrust washer	.Tryckbricka	4

1. Not as separate spare part. Ej som separat reservdel.
39. Transmission cooling into engine cooling (water). Växellådskylning till motorkylning (vatten).

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

Complete set
3-C14
Transmission

Satser
Kraftöverföring

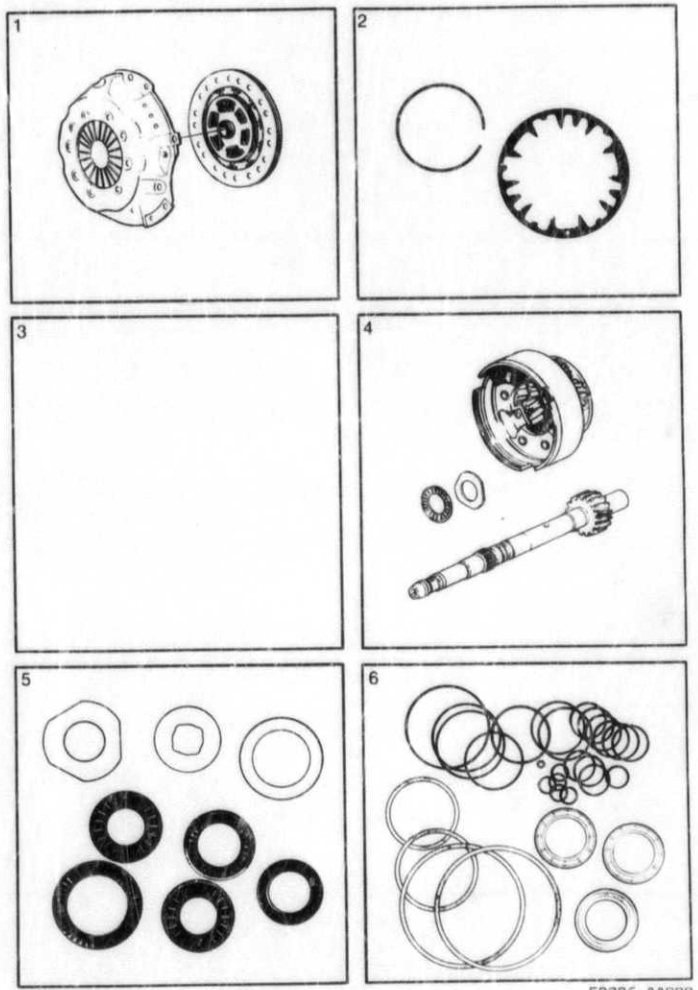

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 18 098		I	X	Clutch kit	Kopplingssats	6
0020		87 28 123			1	. Pressure plate	. Tryckskiva	2
0030		87 22 324			1	. Clutch disc	. Lamell	2
0040								
0050	1	87 81 304		TURBO	X	Clutch kit	Kopplingssats	6
0060		87 27 190			1	. Pressure plate	. Tryckskiva	2
0070		87 27 208			1	. Clutch disc	. Lamell	2
0080								
0090	2	87 81 155			X	Guide ring	Styrring	4
0100		87 04 033		1)	1	. Guide ring	. Styrring	4
0110		87 03 993		1)	1	. Lock ring	. Låsring	4
0120								
0130	4	93 64 613			X	Planetary gear kit	Planetväxelsats	6
0140								
0150	5	75 40 89			X	Thrust washer kit	Axiallagersats	5
0160								
0170	6	75 42 673			X	Sealing kit	Tätningssats	3

1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10

3-C16

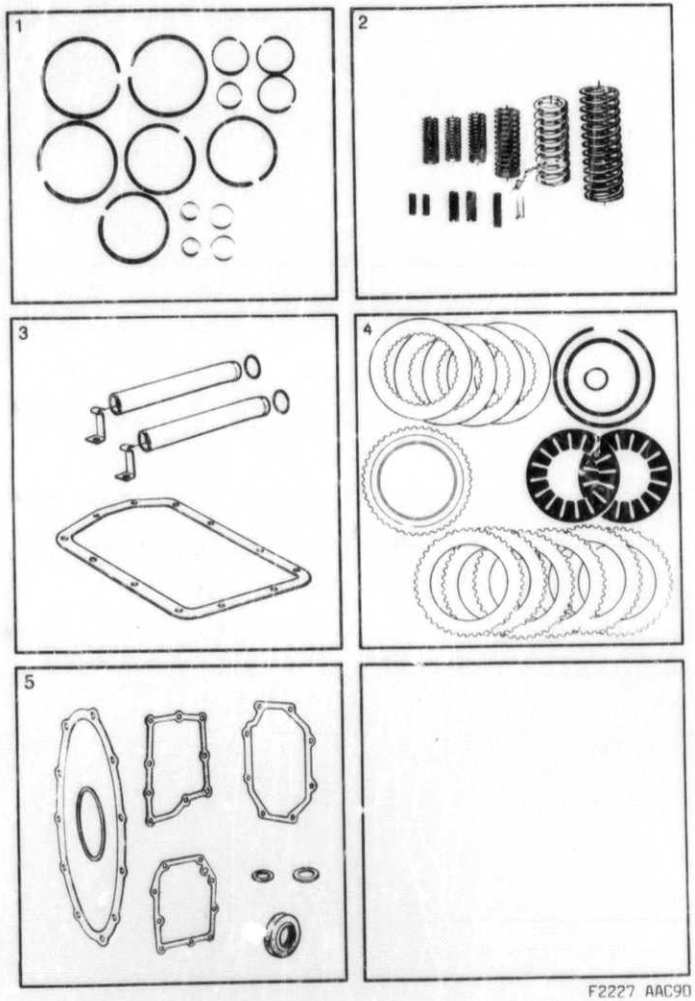

F2227 AAC90

1150	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	93 65 172			X	Oil ring set	Oljeringsats	3
0020								
0030	2	75 42 681		1990, VALVE BODY	X	Spring kit valve body	Fjädersats ventilhus	5
0040								
0050								
0060	2	*75 42 699*		1990, VALVE BODY NLS	X	Spring kit valve body	Fjädersats ventilhus	5
0070								
0080								
0090	2	41 21 448		1991-, VALVE BODY	X	Spring kit valve body	Fjädersats ventilhus	5
0100								
0110								
0150	3	75 11 470			X	Pipe set	Rörsats	6
0160								
0170	4	75 43 051		2)	X	Disc kit	Lamellsats	2
0180								
0190	5	74 96 003			X	Gasket kit	Packningsats	5
0200		81 09 647			1	.O-ring	.O-ring	2
0210		*83 44 335*		NLS - USE 8730764	1	.Seal	.Tätning	4
0220		87 31 804			2	.Sealing collar	.Tätningskrage	5
0230		87 11 707			1	.O-ring	.O-ring	5
0240		87 13 216			1	.Gasket	.Packning	
0250		87 17 415			1	.Gasket	.Packning	4
0260		87 18 439			1	.Gasket	.Packning	3
0270		87 24 874			1	.Seal	.Tätning	4
0280		*87 25 012*		NLS - USE 8732380	1	.Gasket	.Packning	4
0290		*87 25 020*		NLS - USE 8732398	1	.Gasket	.Packning	4
0300		87 28 156			2	.O-ring	.O-ring	2
0310		87 28 651			1	.Gasket	.Packning	3
0320		87 28 677			1	.Gasket	.Packning	3
0330		93 61 627			1	.Washer	.Bricka	5

2. Front Främre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-A06
Clutch control	3-A08
Gear box, manual	3-A10
Gear box control, manual	3-B06
Gear box, automatic	3-B12
Gear box control, automatic	3-C08
Kits	3-C10



Brakes
Bromsar
Frenos

0041
0020
0040
0060
0080
0100
0140

TABLE OF CONTENTS

0160	**Front wheel brake**	5 : 5	3-D06
0180	**Rear wheel brake**	5 : 7	3-D08
0200	**Footbrake system**		
0220	Master cylinder and power brake unit	5 : 9	3-D10
0230	Hydraulic unit ABS	5 : 11	3-D12
0240	Brake lines	5 : 13	3-D14
0250	Brake lines ABS, front	5 : 15	3-D16
0255	Brake lines ABS, rear	5 : 17	3-D18
0260	Brake operation	5 : 19	3-D20
0280	**Parking brake system**	5 : 21	3-D22
0290	**Complete sets**		
0295	Brakes	5 : 23	3-D24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D03

0042

0300
0320
0340
0360
0380
0420
0440
0460
0480
0500
0510
0520
0530
0535
0540
0560
0570
0575
0580
0600
0620
1180
1200
1240
1260
1280
1300
1320
1330
1340
1350
1355
1360
1380
1390
1395
1400
1410
1420

INNEHÅLLSFÖRTECKNING

Framhjulsbroms	5 : 5	3-D06
Bakhjulsbroms	5 : 7	3-D08
Fotbromssystem		
Huvudcylinder och vacuumservo	5 : 9	3-D10
Hydraulenhet ABS	5 : 11	3-D12
Bromsledningar	5 : 13	3-D14
Bromsledningar ABS, fram	5 : 15	3-D16
Bromsledningar ABS, bak	5 : 17	3-D18
Bromsmanövrering	5 : 19	3-D20
Parkeringsbromssystem	5 : 21	3-D22
Satser		
Bromsar	5 : 23	3-D24

SUMARIO

Freno del	5 : 5	3-D06
Freno tras	5 : 7	3-D08
Sistema de freno de pie		
Cylindro principal y servoasistencia	5 : 9	3-D10
Unidad hydraulico ABS	5 : 11	3-D12
Conductos de freno	5 : 13	3-D14
Conductos de freno ABS, Del	5 : 15	3-D16
Conductos de freno ABS, Tras	5 : 17	3-D18
Mando de freno de pie	5 : 19	3-D20
Sistema de freno de mano	5 : 21	3-D22
Juegos completos		
Frenos	5 : 23	3-D24


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D06 Front wheel brake — Framhjulsbroms

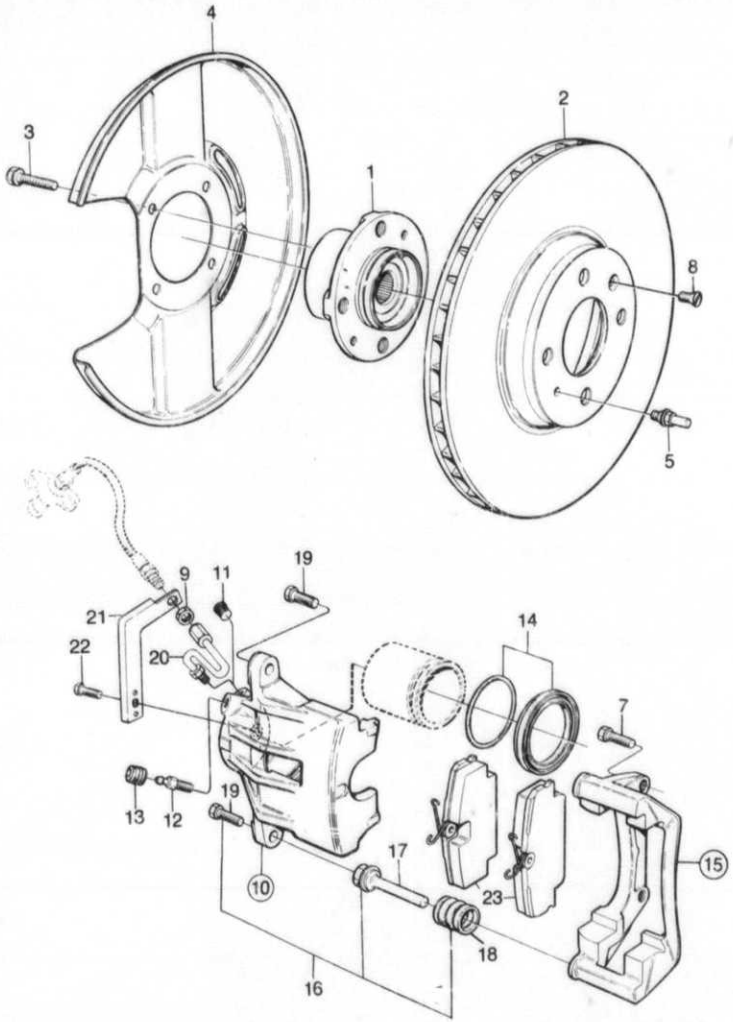

F3751 - AAC90

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 04 159			2	Wheel hub	Hjulnav	4
0020	2	40 02 150			2	Brake disc	Bromsskiva	3
0030	3	79 78 794			8	Screw	Skruv	5
0040	4	91 00 884			2	Protecting plate	Skyddsplåt	6
0050	5	89 68 588			2	Pin	Pinne	4
0060	7	89 53 283			4	Screw	Skruv	5
0070	8	80 56 160			2	Screw	Skruv	5
0080	9	79 79 511			2	Nut	Mutter	5
0090	10	91 02 971		7), LH	1	Brake housing	Bromshus	4
0100	10	91 02 989		7), RH	1	Brake housing	Bromshus	4
0110	11	89 55 973			2	.Plug	.Plugg	6
0120	12	89 55 072			2	.Bleed screw	.Luftningsskruv	2
0130	13	89 55 080			2	.Protecting casing	.Skyddskåpa	3
0140	14	89 61 799		See page 5-023, 3-D24	2	.Gasket kit	.Packningsats	2
0150	15	89 67 713			2	Retainer	Hållare	5
0160	16	89 61 807		See page 5-023, 3-D24	1	.Bellows kit	.Bälgsats	3
0170	17	*89 55 114*		1) NLS - USE 8961807	2	..Slide pin	..Glidpinne	3
0180	18	*89 55 130*		1) NLS	2	..Protecting casing	..Skyddskåpa	6
0190	19	89 55 122	S		4	..Screw	..Skruv	5
0200	20	91 02 997		LH	1	Brake pipe	Bromsrör	4
0210	20	91 03 037		RH	1	Brake pipe	Bromsrör	4
0220	21	91 02 856		LH	1	Bracket	Konsol	6
0230	21	91 02 864		RH	1	Bracket	Konsol	6
0240	22	79 72 441			2	Screw	Skruv	5
0250	23	• 89 93 974		19), SE, EU	1	Brake pad kit	Bromsklotssats	
0260				See page 5-025, 3-E02				
0270	23	89 93 719		19), ME, FE, JP, AU	1	Brake pad kit	Bromsklotssats	1
0280				See page 5-025, 3-E02				
0290	23	41 07 116		19,20)	1	Brake pad kit	Bromsklotssats	1
0300				See page 5-025, 3-E02				

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
19. See SI 500-1017 Se SI 500-1017
20. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D08 Rear wheel brake — Bakhjulsbroms

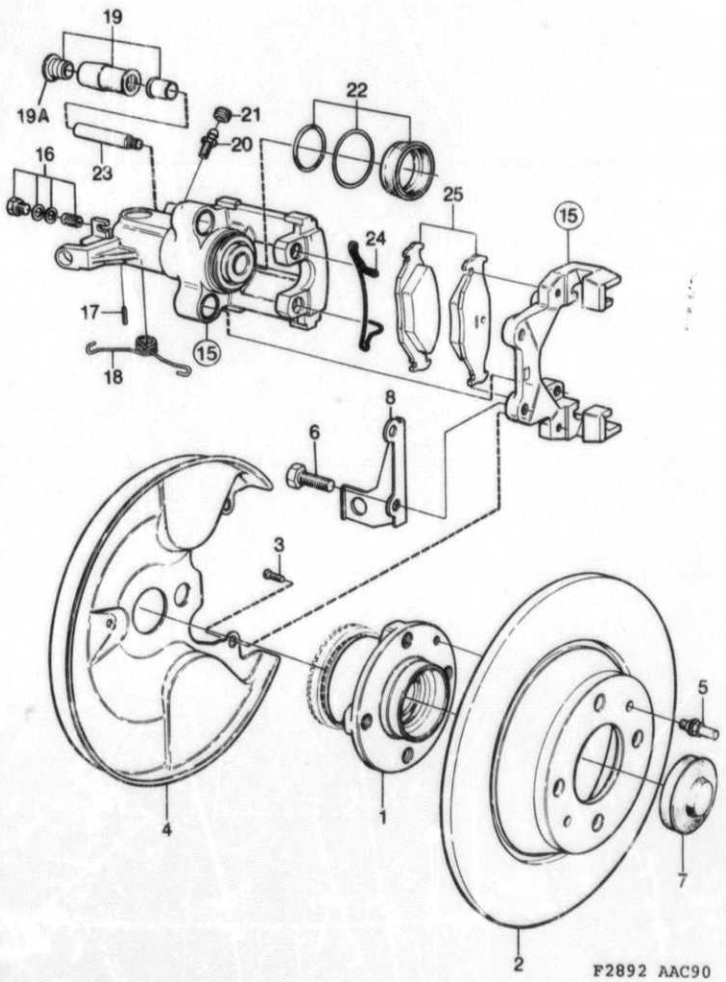

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0012	1	89 71 095			2	Wheel hub with bearing	Hjulnav med lager	5
0030	1	89 73 406		ABS	2	Wheel hub with bearing	Hjulnav med lager	4
0060	2	89 70 717			2	Brake disc	Bromsskiva	3
0080	3	79 72 441			6	Screw	Skruv	5
0100	4	89 54 547			2	Protecting plate	Skyddsplåt	6
0120	5	89 68 588			2	Pin	Pinne	4
0140	6	89 70 428			4	Screw	Skruv	5
0200	7	89 52 665			2	Cap	Kapsel	2
0201	8	91 01 635		LH	1	Bracket	Hållare	5
0202	8	91 01 643		RH	1	Bracket	Hållare	5
0220	15	89 70 618		7), LH	1	Brake housing	Bromshus	5
0260	15	89 70 626		7), RH	1	Brake housing	Bromshus	5
0300	16	41 07 793		See page 5-027, 3-E04	1	.Adjuster kit	.Justeringssats	4
0320	17	89 55 437			1	.Pin	.Pinne	3
0340	18	89 55 395		LH	1	.Spring	.Fjäder	3
0360	18	89 55 403		RH	1	.Spring	.Fjäder	3
0380	19	*89 55 445*		See page 5-023, 3-D24 NLS - USE 4467064	4	.Guide	.Styrning	6
0390	19A	89 55 478			4	..Cover	..Lock	3
0400	20	89 55 411			2	.Bleed screw	.Luftningsskruv	2
0420	21	*89 55 429*		NLS - USE 8908576	2	.Protecting casing	.Skyddskåpa	6
0440	22	89 61 849		See page 5-023, 3-D24	2	.Gasket kit	.Packningsats	4
0460	23	89 55 486			4	.Slide pin	.Glidpinne	3
0470	24	89 70 816			2	.Spring	.Fjäder	3
0480	25	89 68 026		See page 5-023, 3-D24	1	Brake pad kit	Bromsklotssats	1


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

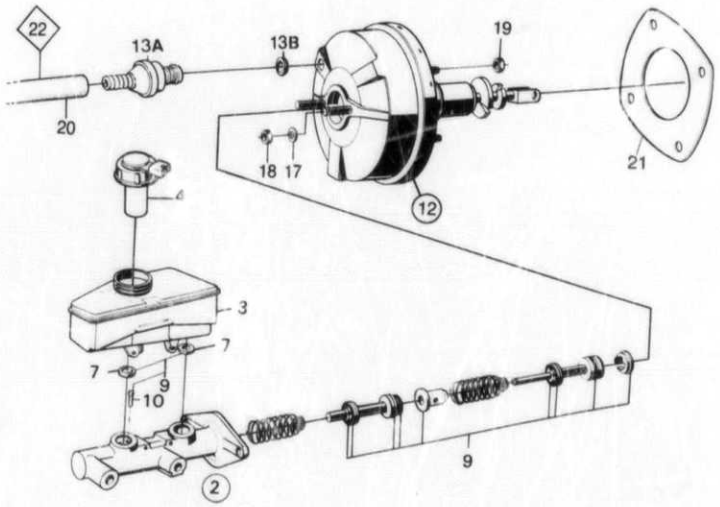

F4293 AAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0072	2	91 02 575			1	Master cylinder	Huvudcylinder	4
0082	3	91 02 849			1	.Reservoir	.Behållare	5
0102	4	91 02 591			1	..Level warner	..Nivåvarnare	5
0162	7	*89 86 911*		-1991 NLS - USE 4425229	2	..Gasket	..Packning	4
0170	7	44 25 229		1992-	2	..Gasket	..Packning	4
0202	9	89 65 329		See page 5-023, 3-D24	1	.Sealing kit	.Tätningssats	4
0222	10	89 65 808			1	.Pin	.Pinne	4
0242	12	91 02 609			1	Vacuum servo	Vakuumservo	5
0262	13A	89 86 705			1	.Non-return valve	.Backventil	4
0264	13B	89 86 713			1	.Seal	.Tätning	6
0340	17	79 10 565			2	Washer	Bricka	5
0370	18	81 51 243			2	Nut	Mutter	5
0380	19	80 74 288			4	Nut	Mutter	5
0402	20	89 39 993		B201	1	Vacuum hose cut to 335 mm	Vakuumslang kapas till 335 mm	5
0403								
0410	20	89 39 993		B202	1	Vacuum hose cut to 290 mm	Vakuumslang kapas till 290 mm	5
0411								
0460	21	89 58 357			1	Seal	Tätning	6
0470	22			See page 2-079, 1-F08		Intake manifold	Inloppsrör	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D12

Hydraulic unit ABS

Hydraulenhet ABS

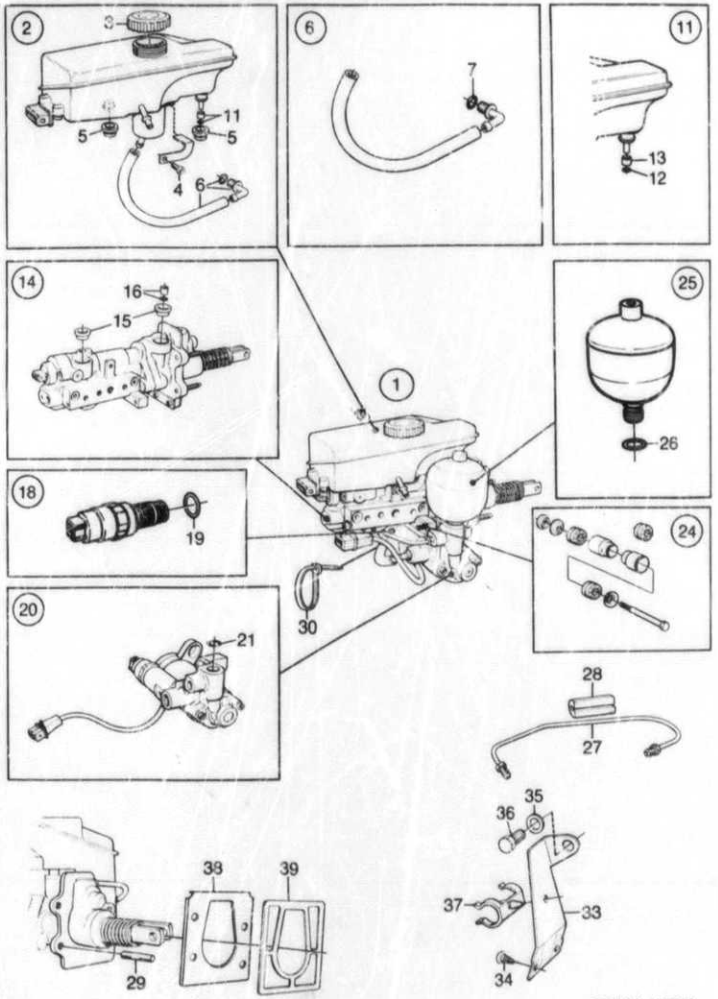

P3369 AAC90

0225	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	91 04 407			1	Hydraulic unit	Hydraulenhet	6
0040	2	40 00 279		See page 5-025, 3-E02	1	.Reservoir	.Behållare	5
0060	3	89 66 152		16)	1	..Cover	..Lock	4
0070	3	41 07 819		17), 1992	1	..Cover	..Lock	4
0075	3	44 25 690		1993-	1	..Cover	..Lock	4
0080	4	89 66 368			1	..Screw	..Skruv	5
0100	5	89 66 335			2	..Rubber bushing	..Gummibussning	6
0120	6	40 02 861		See page 5-025, 3-E02	1	..Hose kit	..Slangsats	5
0121	7	40 03 117			1	...O-ring	...O-ring	5
0131	11	89 67 390		See page 5-027, 3-E04	1	..O-ring kit	..O-ringsats	2
0132	12	*89 66 687*		1) NLS - USE 8967390	1	...O-ring	...O-ring	4
0133	13	*89 66 939*		1) NLS - USE 8967390	1	...Sleeve	...Hylsa	6
0140	14	40 02 879		See page 5-027, 3-E04	1	.Master cylinder kit	.Huvudcylindersats	6
0180	15	89 66 335			2	..Rubber bushing	..Gummibussning	6
0200	16	89 67 390		See page 5-027, 3-E04	1	..O-ring kit	..O-ringsats	2
0220	18	89 67 309		See page 5-025, 3-E02	1	.Pressure monitor	.Tryckvakt	4
0221	19	89 67 325			1	..O-ring	..O-ring	2
0260	20	40 02 887		See page 5-027, 3-E04	1	.Pump kit	.Pumpsats	6
0280	21	89 67 234			1	..O-ring	..O-ring	2
0340	24	40 02 895		See page 5-025, 3-E02	1	.Suspension kit	.Upphängningssats	5
0420	25	40 02 267		See page 5-025, 3-E02	1	.Accumulator	.Ackumulator	5
0440	26	89 67 234			1	..O-ring	..O-ring	2
0460	27	91 04 837			1	.Delivery pipe	.Tryckrör	5
0470	28	*40 02 093*		NLS - USE 8993644	1	.Absorber	.Dämpare	5
0480	29	91 04 795			4	.Stud	.Pinnskruv	5
0490	30	79 71 880			1	Tensioning band	Spännband	4
0700	33	91 05 123			1	Stay	Stag	5
0720	34	79 22 891			2	Screw	Skruv	5
0740	35	80 29 985		-1992	1	Washer	Bricka	5
0750	35	91 66 372		1993-	1	Washer	Bricka	5
0760	36	*80 82 919*		1990 NLS - USE 8082935	1	Screw	Skruv	5
0770	36	80 82 935		1991-	1	Screw	Skruv	5
0780	37	91 05 297		1990	1	Bracket	Hållare	5
0800	38	91 05 701			1	Cover plate	Täckplåt	5
0820	39	91 05 719			1	Seal	Tätning	4

1. Not as separate spare part. Ej som separat reservdel.
16. Ch. -L3007862, -L5003806, -L7024193
17. Ch. L5003807-, L7024194-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D14

Brake lines
Bromsledningar

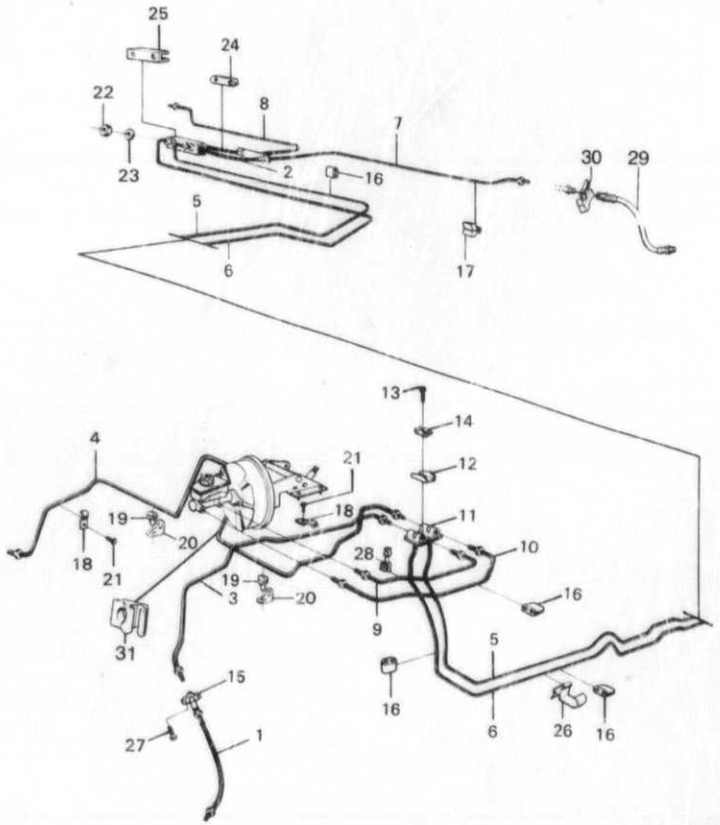

F3079 AAC90

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 40 819			2	Brake hose	Bromsslang	4
0040	2	89 31 784			2	Brake hose	Bromsslang	4
0085	3	89 46 014		LH	1	Brake pipe	Bromsrör	5
0137	4	40 03 992		RH	1	Brake pipe	Bromsrör	5
0142	5	91 01 726		LH	1	Brake pipe	Bromsrör	6
0157	5	91 96 049		1990, LH, CV	1	Brake pipe	Bromsrör	6
0158	5	91 96 148		1991-, LH, CV	1	Brake pipe	Bromsrör	6
0162	6	91 01 734		RH	1	Brake pipe	Bromsrör	6
0180	6	91 96 056		1990, RH, CV	1	Brake pipe	Bromsrör	6
0190	6	91 96 130		1991-, RH, CV	1	Brake pipe	Bromsrör	6
0220	7	91 01 767		LH	1	Brake pipe	Bromsrör	3
0260	8	91 01 783		RH	1	Brake pipe	Bromsrör	3
0272	9	91 02 203			1	Brake pipe	Bromsrör	5
0292	10	91 02 245			1	Brake pipe	Bromsrör	5
0300	11	89 28 947			1	Nipple	Nippel	5
0320	12	*89 29 671*		NLS	1	Stiffening plate	Förstyvningsplåt	6
0340	13	80 97 859			1	Screw	Skruv	5
0360	14	*89 33 335*		NLS	1	Seal	Tätning	5
0380	15	89 28 756			2	Nipple	Nippel	5
0400	16	89 08 162			X	Pipe bracket	Rörhållare	5
0420	17	89 19 490			3	Spacer piece	Distansklots	5
0440	18	89 07 966			2	Tube clamp	Rörklamma	5
0460	19	89 40 132			2	Clamp	Klämma	5
0480	20			See page 8B-021, 5-A22		Brace	Bygel	
0500	21	79 22 891			3	Screw	Skruv	5
0520	22	*83 15 558*		NLS - USE 7979511	2	Nut	Mutter	5
0540	23	79 33 856			2	Washer	Bricka	5
0560	24	*89 29 259*		NLS	1	Bracket	Hållare	6
0580	25	89 91 739			1	Lock plate	Låsplåt	6
0600	26	89 31 461			1	Clamp	Klammer	5
0620	27	79 22 891			7	Screw	Skruv	5
0640	28	*89 39 670*		LHD NLS	1	Clamp	Klammer	5
0660	29	91 01 650			2	Brake hose	Bromsslang	4
0680	30	89 52 699			2	Bracket	Hållare	5
0700	31	89 59 538			1	Tube clamp	Rörklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX


Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

Footbrake system

3-D16 Brake lines ABS front

Fotbromssystem

Bromsledningar ABS fram

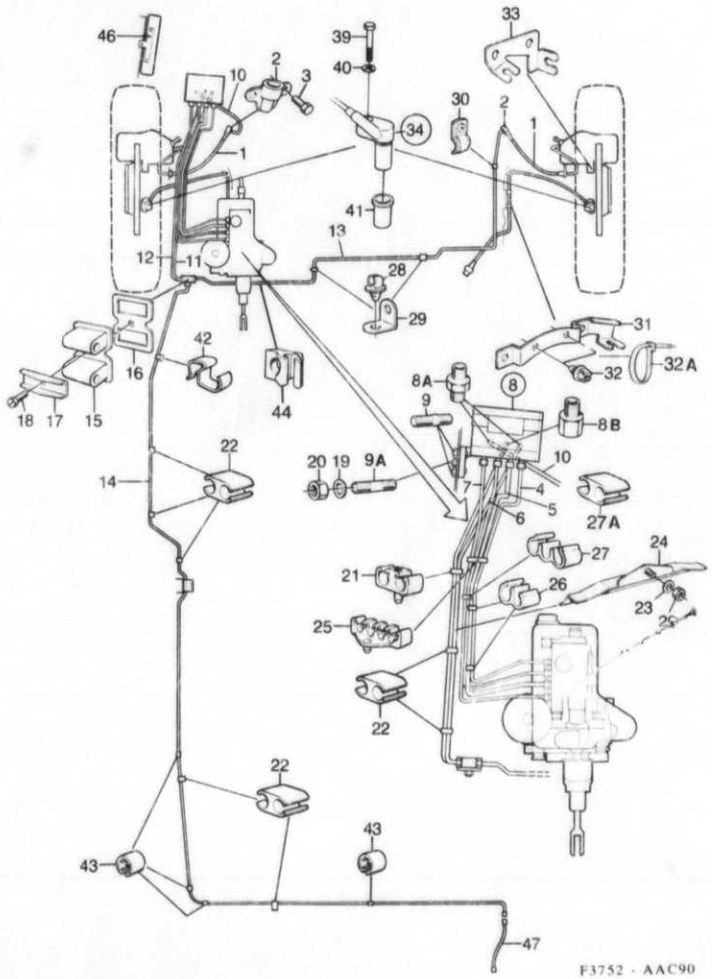


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 40 819			2	Brake hose	Bromsslang	4
0020	2	89 28 756			2	Nipple	Nippel	5
0030	3	79 22 891			4	Screw	Skruv	5
0040	4	91 04 308		LH	1	Brake pipe	Bromsrör	5
0050	5	91 04 282			1	Brake pipe	Bromsrör	5
0051						rear	bakre	
0060	6	91 04 266			1	Brake pipe	Bromsrör	5
0061						return	retur	
0070	7	91 04 241		RH	1	Brake pipe	Bromsrör	5
0080	8	91 04 951			1	Valve body	Ventilblock	4
0090	8A	89 66 376			2	.Intermediate section	.Mellanstycke	5
0100	8B	89 66 384			1	.Intermediate section	.Mellanstycke	5
0110	9	40 00 477			2	.Stud	.Pinnskruv	5
0120	9A	40 00 899			1	.Stud	.Pinnskruv	5
0130	10	91 04 365		LH	1	Brake pipe	Bromsrör	5
0140	11	91 04 324		RH	1	Brake pipe	Bromsrör	5
0150	12	91 04 340			1	Brake pipe	Bromsrör	5
0151						rear	bakre	
0160	13	40 03 992		RH	1	Brake pipe	Bromsrör	5
0170	14	91 01 734			1	Brake pipe	Bromsrör	6
0175	14	91 96 056		1990, CV	1	Brake pipe	Bromsrör	6
0177	14	91 96 130		1991-, CV	1	Brake pipe	Bromsrör	6
0180	15	91 04 399			1	Nipple	Nippel	5
0190	16	*89 33 335*		NLS	1	Seal	Tätning	5
0200	17	*89 29 671*		NLS	1	Stiffening plate	Förstyvningsplåt	6
0210	18	80 97 859			1	Screw	Skruv	5
0220	19	70 61 328			3	Washer	Bricka	5
0230	20	80 74 288			5	Nut	Mutter	5
0240	21	89 59 520			X	Tube clamp	Rörklamma	5
0250	22	89 08 162			X	Pipe bracket	Rörhållare	5
0260	23	79 73 977			1	Washer	Bricka	5
0270	24	91 06 097			1	Protecting plate	Skyddsplåt	6
0280	25	91 06 147			1	Tube clamp	Rörklamma	5
0290	26	91 06 139			2	Tube clamp	Rörklamma	5
0300	27	91 06 121		1990	2	Tube clamp	Rörklamma	5
0305	27A	89 08 162		1991-	3	Pipe bracket	Rörhållare	5
0310	28	89 40 132			2	Clamp	Klämma	5
0320	29	89 40 652			2	Brace	Bygel	5
0330	30	89 07 966			2	Tube clamp	Rörklamma	5
0340	31	91 06 741		LH	1	Holder	Hållare	6
0350	31	91 06 758		RH	1	Holder	Hållare	6
0360	32	40 00 543		-1990	4	Clamp	Klammer	5
0365	32A	95 28 019		1991-	4	Tensioning band	Spännband	5
0370	33	*91 06 766*		LH NLS - USE 9105222	1	Holder	Hållare	6
0380	33	*91 06 774*		RH NLS - USE 9105230	1	Holder	Hållare	6
0390	34	40 01 517		LH	1	Sensor	Givare	3
0400	34	40 01 525		RH	1	Sensor	Givare	3
0450	39	80 21 917			2	Screw	Skruv	5
0460	40	80 29 951		-1992	2	Washer	Bricka	5
0465	40	91 66 364		1993-	2	Washer	Bricka	5
0470	41	89 65 63-			2	Sleeve	Hylsa	5
0480	42	89 31 461			1	Clamp	Klammer	5
0490	43	89 65 097			X	Tube clamp	Rörklamma	5
0495	44	89 59 538			1	Tube clamp	Rörklamma	5
0500	46			See page 3A-069, 2-C22		Electronic unit	Elektronikenhet	
0510	47			See page 5-017, 3 D18		Brake hose	Bromsslang	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

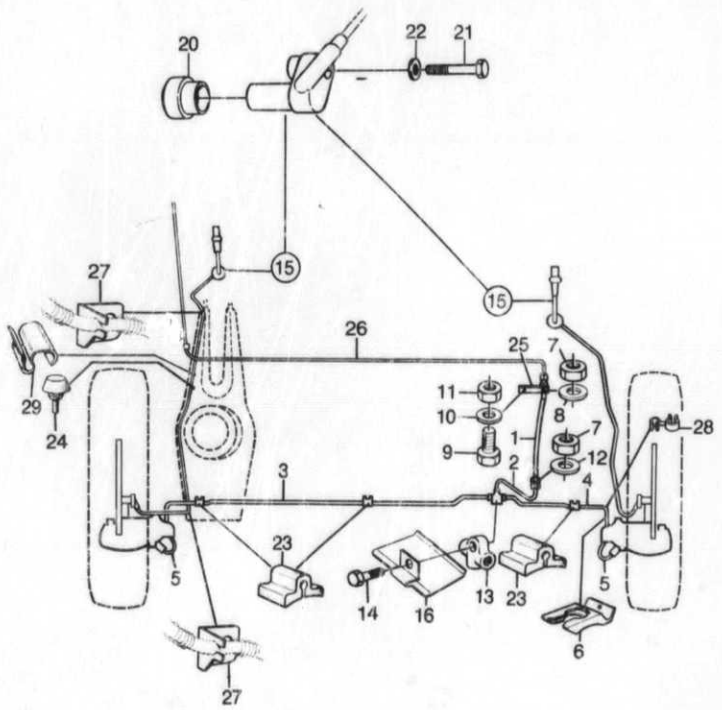

F3371 AAC90

0270	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0000	1	89 31 784			1	Brake hose	Bromsslang	4
0030	2	91 05 354			1	Brake pipe	Bromsrör	6
0040	3	91 05 032		LH	1	Brake pipe	Bromsrör	6
0050	4	91 05 016		RH	1	Brake pipe	Bromsrör	6
0060	5	91 01 650			2	Brake hose	Bromsslang	4
0070	6	89 52 699			2	Bracket	Hållare	5
0080	7	79 79 511			2	Nut	Mutter	5
0090	8	79 33 856			1	Washer	Bricka	5
0100	9	80 82 935			1	Screw	Skruv	5
0110	10	*73 11 764*		NLS - USE 7399835	1	Washer	Bricka	5
0120	11	80 74 106		1990-	1	Nut	Mutter	5
0125	11	*79 65 767*		1991- NLS - USE 7968415	1	Lock nut	Låsmutter	5
0130	12	79 33 856			1	Washer	Bricka	5
0140	13	89 64 686			1	T-piece	T-stycke	5
0145	14	80 82 968		-1992	1	Screw	Skruv	5
0150	14	91 66 331		1993-	1	Screw	Skruv	5
0160	15	40 01 533		LH	1	Sensor	Givare	3
0170	15	40 01 541		RH	1	Sensor	Givare	3
0180	16	41 06 472			1	Protecting plate	Skyddsplåt	6
0220	20	89 63 019			2	Sleeve	Hylsa	5
0230	21	80 21 925			2	Screw	Skruv	5
0240	22	80 29 951		-1992	2	Washer	Bricka	5
0245	22	91 66 364		1993-	2	Washer	Bricka	5
0250	23	89 19 490			3	Spacer piece	Distansklots	5
0260	24	89 44 795			2	Rubber plug	Gummiplugg	5
0270	25	89 91 739			1	Lock plate	Låsplåt	6
0280	26			See page 5-015, 3-D16		Brake pipe	Bromsrör	
0290	27	91 05 305		LH	2	Bracket	Hållare	6
0300	27	91 05 313		RH	2	Bracket	Hållare	6
0310	28	73 99 660			2	Clamp	Klammer	5
0320	29	89 31 461			4	Clamp	Klammer	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D20

Brake operation
Bromsmanövrering

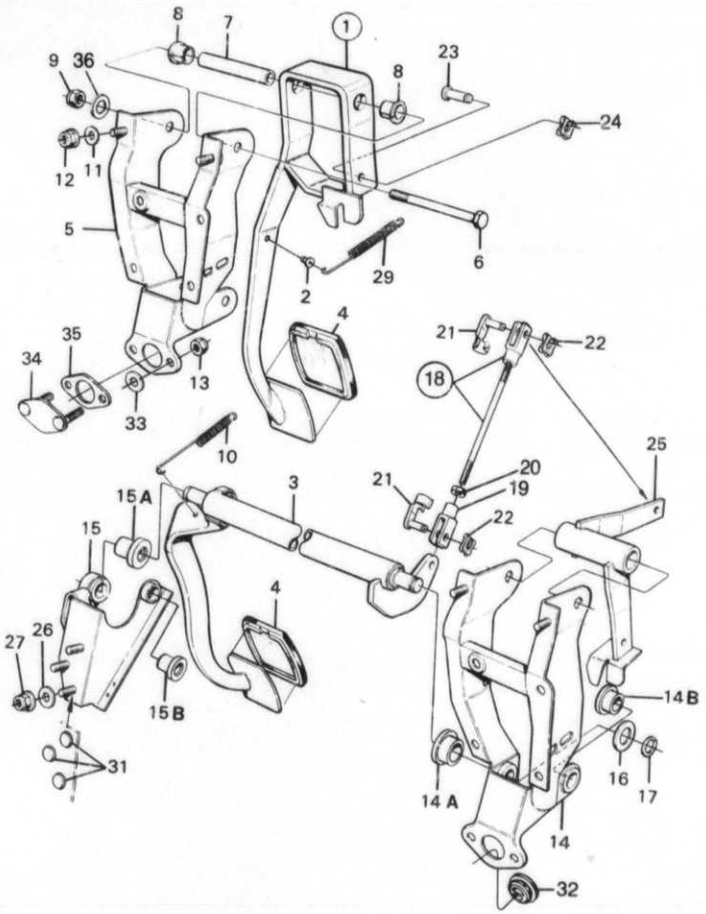

F1218 AAC90

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	89 91 473			1	Brake pedal	Bromspedal	6
0035	1	91 04 472		ABS	1	Brake pedal	Bromspedal	6
0050	1	89 91 499		A	1	Brake pedal	Bromspedal	6
0055	1	91 05 768		A, ABS	1	Brake pedal	Bromspedal	6
0060	2	84 07 983			1	.Bushing	.Bussning	4
0080	3	89 38 136		RHD	1	Brake pedal	Bromspedal	6
0120	3	89 41 635		RHD, A	1	Brake pedal	Bromspedal	6
0160	4	89 16 272			1	.Pedal pad	.Pedalgummi	5
0180	4	89 56 393		A	1	.Pedal pad	.Pedalgummi	5
0210	5	89 44 407			1	Bracket	Konsol	6
0215	5	41 03 784		ABS	1	Bracket	Konsol	6
0230	6	79 79 248			1	Screw	Skruv	5
0240	7	89 35 132			1	Spacer tube	Distansrör	5
0270	8	89 48 051			2	Bearing bushing	Lagerbussning	4
0290	9	*81 51 474*		NLS - USE 7977812	1	Lock nut	Låsmutter	5
0300	10	89 41 320		RHD	1	Spring	Fjäder	6
0320	11	89 29 531			2	Sealing washer	Tätningsbricka	5
0340	12	79 71 922			2	Nut	Mutter	3
0360	13	80 74 288			6	Nut	Mutter	5
0370	14	89 44 373		LH, RHD	1	Bracket	Konsol	6
0381	14	91 05 925		LH, RHD, ABS	1	Bracket	Konsol	6
0382	14A	*89 12 115*		NLS	1	.Bushing	.Bussning	6
0384	14B	*89 37 625*		NLS	1	.Bushing	.Bussning	4
0400	15	89 38 359		RH, RHD	1	Bracket	Konsol	6
0402	15A	*89 12 115*		NLS	1	.Bushing	.Bussning	6
0404	15B	*89 37 625*		NLS	1	.Bushing	.Bussning	4
0420	16	80 30 066		RHD	1	Washer	Bricka	5
0440	17	80 47 722		RHD	1	Lock ring	Låsring	5
0460	18	40 03 976		RHD	1	Rod	Stång	6
0480	19	*89 24 557*		RHD NLS	1	.Fork	.Gaffel	6
0510	20	81 51 060		RHD	1	.Nut	.Mutter	5
0520	21	89 33 509		RHD	2	Clip	Clips	5
0540	22	82 52 553		RHD	2	Clip	Clips	5
0560	23	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0580	24	82 52 553			1	Clip	Clips	5
0625	25	89 91 382		RHD	1	Countershaft	Mellanaxel	6
0630	25	91 05 560		RHD, ABS	1	Countershaft	Mellanaxel	6
0640	26	89 29 531		RHD	3	Sealing washer	Tätningsbricka	5
0660	27	79 71 922		RHD	3	Nut	Mutter	3
0700	29	89 35 751			1	Spring	Fjäder	5
0710	29	41 91 813		-1991, ABS	1	Spring	Fjäder	6
0720	29	41 99 964		1992-, ABS	1	Spring	Fjäder	6
0740	31	71 63 066			3	Plug	Plugg	5
0760	32	*89 28 699*		A NLS	1	Rubber plug	Gummiplugg	6
0780	33	89 29 531		A	2	Sealing washer	Tätningsbricka	5
0800	34	*89 42 021*		NLS - USE 8971582	1	Plate	Plåt	2
0820	35	89 41 478		A	1	Gasket	Packning	5
0830	36	80 29 993		1990	1	Washer	Bricka	5
0840	36	80 29 993		1991-	2	Washer	Bricka	5
0850	36	80 29 993		1991-, AIR-BAG	1	Washer	Bricka	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-D22 Parking brake system — Parkeringsbromssystem

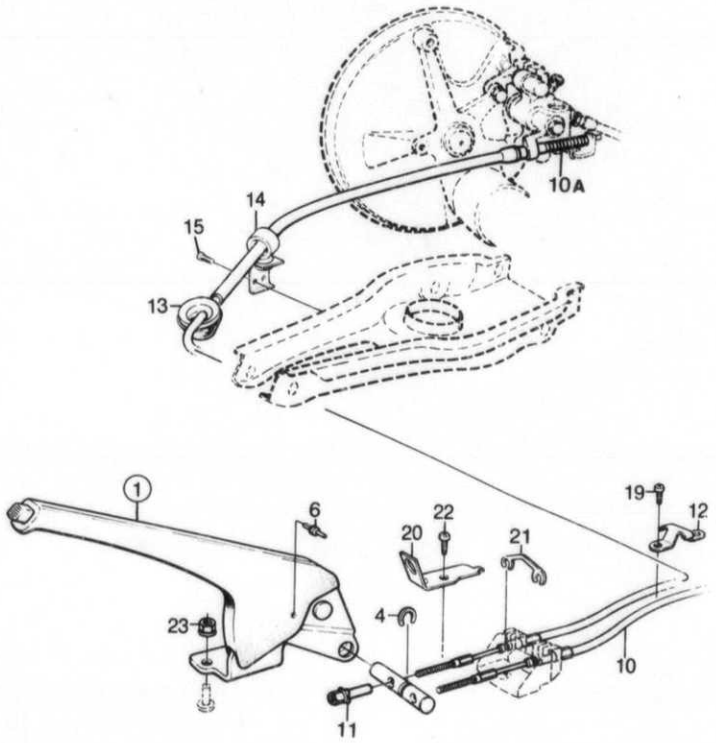

F1219 AAC90

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	41 03 206		1990	1	Handbrake lever	Handbromsspak	5
0030	1	41 95 350		1991-	1	Handbrake lever	Handbromsspak	5
0060	4	91 01 239			1	.Retaining ring	.Spårring	5
0120	6	97 08 066			2	.Pop rivet	.Popnit	5
0200	10	*91 01 445*		18), 1990 NLS	2	Parking brake cable	Parkeringsbromswire	4
0203	10	*91 01 445*		18), 1990, CV, LH NLS	1	Parking brake cable	Parkeringsbromswire	4
0205	10	*91 04 134*		1990, CV, RH NLS - USE 9196163	1	Parking brake cable	Parkeringsbromswire	4
0207	10	41 05 789		1991-, LH	1	Parking brake cable	Parkeringsbromswire	4
0208	10	91 96 163		1991-, RH	1	Parking brake cable	Parkeringsbromswire	4
0210	10A	89 54 455			1	.Bellows	.Bälg	2
0220	11	91 01 221			2	Adjusting nut	Justermutter	3
0240	12	91 01 528		1990	1	Clamp	Klammer	5
0250	12	41 07 298		1991-	1	Clamp	Klammer	5
0260	13	91 05 651		13)	2	Grommet	Genomföring	2
0280	14	89 67 655		13)	2	Bracket	Hållare	6
0300	15	79 72 805			4	Screw	Skruv	5
0380	19	79 72 805		1990	2	Screw	Skruv	5
0390	19	79 22 891		1991-	2	Screw	Skruv	5
0400	20	40 04 826			1	Bracket	Konsol	4
0420	21	91 01 833			1	Clamp	Klammer	5
0440	22	79 22 891		1990	1	Screw	Skruv	5
0450	22	79 22 800		1991-	1	Screw	Skruv	5
0460	23	79 67 953			2	Nut	Mutter	5

13. Part of: 4105789, 9196163 Ingår i: 4105789, 9196163
18. Superseded by 41 05 789 LH and 91 96 163 RH Ersatt av 41 05 789 V och 91 96 163 H

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


5 GROUP INDEX


Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24


Complete set
3-D24
Brakes


Satser
Bromsar

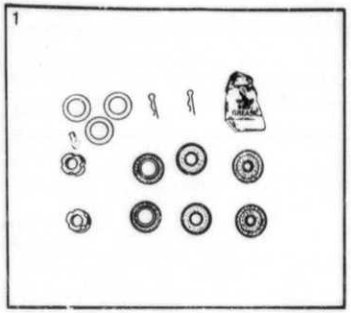

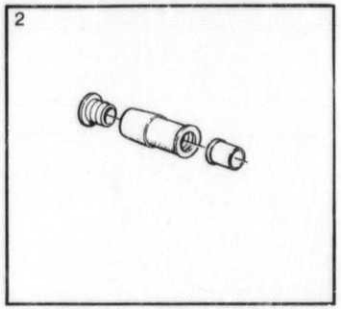

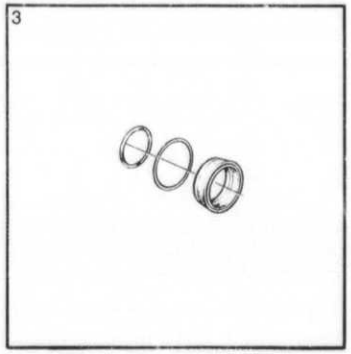

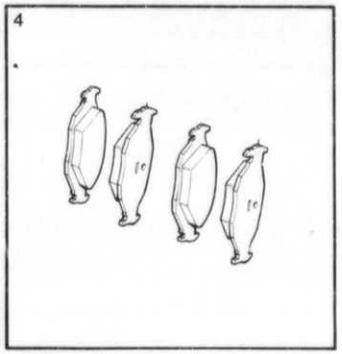

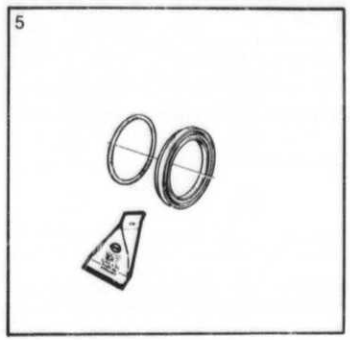



F3753 - AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 65 329			X	Sealing kit master cylinder	Tätningssats huvudcylinder	4
0020		89 65 782		1)	1	.Piston	.Kolv	6
0030		89 86 994		1)	1	.Seal	.Tätning	6
0040		89 86 986			1	.Seal	.Tätning	6
0050		89 65 808			1	.Pin	.Pinne	4
0060		89 87 018		1)	1	.Sealing ring	.Tätningsring	6
0070		*89 86 911*		1) NLS - USE 4425229	2	.Gasket	.Packning	4
0080								
0090	2	*89 55 445*		NLS - USE 4467064	X	Guide	Styrning	6
0100		89 55 452		1)	2	.Bushing	.Bussning	6
0110		89 55 460		1)	2	.Sleeve	.Hylsa	6
0120		89 55 478			2	.Cover	.Lock	3
0130								
0140	3	89 61 849			X	Gasket kit rear brake	Packningsats bakbroms	4
0160		89 55 288		1)	1	.Seal	.Tätning	6
0170		89 55 296		1)	1	.Gaiter	.Damask	6
0180		89 55 239		1)	1	.Ring	.Ring	6
0190								
0200	4	89 68 026			X	Brake pad kit rear brake	Bromsklotssats bakbroms	1
0220		*89 67 101*		1) NLS	2	.Brake pad	.Bromsklots	1
0230		*89 67 119*		1) NLS	2	.Brake pad	.Bromsklots	1
0240								
0250	5	89 61 799			X	Gasket kit front brake	Packningsats frambroms	2
0270		89 55 056		1)	1	.Gaiter	.Damask	6
0280		89 55 064		1)	1	.Seal	.Tätning	6
0290		89 55 155		1)	1	.Grease	.Fett	6
0300								
0310	6	89 61 807			X	Bellows kit front brake	Bälgsats frambroms	3
0330		89 55 122			2	.Screw	.Skruv	5
0335		*89 55 114*		1) NLS - USE 8961807	2	.Slide pin	.Gliidpinne	3
0340		*89 55 130*		1) NLS	2	.Protecting casing	.Skyddskåpa	6
0350		89 55 148		1)	X	.Grease	.Fett	6

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


5 GROUP INDEX


Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24


Complete set
3-E02
Brakes


Satser
Bromsar

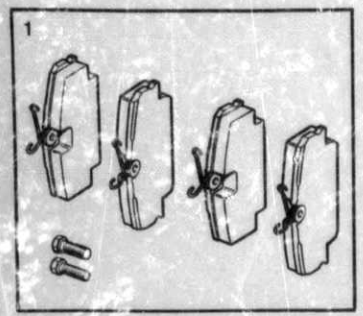


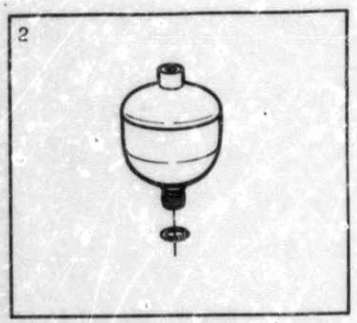

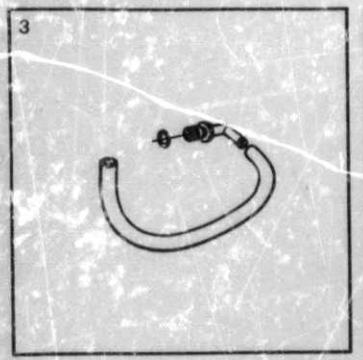

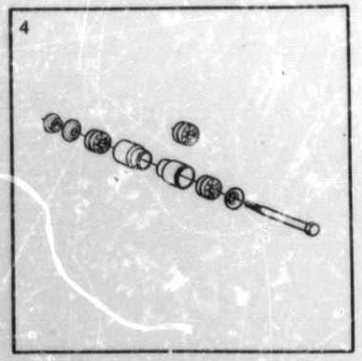

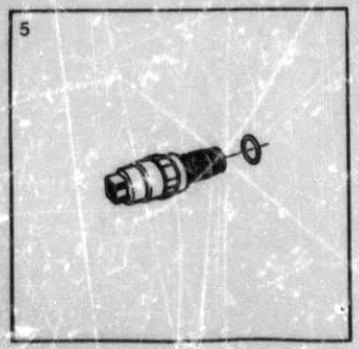

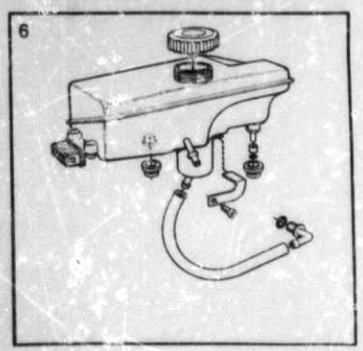

F1221 AAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0051	1	89 93 719		19)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0053		41 05 433		1)	4	. Brake pad	. Bromsklots	1
0054		89 55 122			2	. Screw	. Skruv	5
0060	1	41 07 116		19,20)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0080		41 05 433		1)	4	. Brake pad	. Bromsklots	1
0090		89 55 122			2	. Screw	. Skruv	5
0140	2	40 02 267			X	Accumulator	Ackumulator	5
0150		*40 01 814*		1) NLS	1	. Accumulator	. Ackumulator	5
0160		89 67 234			1	. O-ring	. O-ring	2
0170		89 66 707		1)	1	. Label	. Etikett	6
0190	3	40 02 861			X	Hose kit	Slangsats	5
0210		*91 04 746*		1) NLS	1	. Hose	. Slang	
0220		*91 04 738*		1) NLS	1	. Nipple	. Nippel	
0225		40 03 117			1	. O-ring	. O-ring	5
0250	4	40 02 896			X	Suspension kit	Upphängningssats	5
0260		89 66 736		1)	1	. Bracket	. Upphängning	5
0270		*91 04 811*		1) NLS	2	. Bracket	. Upphängning	5
0280		91 04 829		1)	1	. Screw	. Skruv	5
0290		*89 66 251*		1) NLS	2	. Washer	. Bricka	5
0300		*91 04 944*		1) NLS	2	. Sleeve	. Hylsa	6
0301		*40 03 083*		1) NLS	1	. Spacer	. Distans	5
0310	5	89 67 309			X	Pressure monitor	Tryckvakt	4
0330		89 66 180		1)	1	. Pressure monitor	. Tryckvakt	4
0340		89 67 325			1	. O-ring	. O-ring	2
0360	6	40 00 279			X	Reservoir	Behållare	5
0370		*44 25 716*		1) NLS	1	. Reservoir	. Behållare	5
0380		89 66 368			1	. Screw	. Skruv	5
0390		44 25 690			1	. Cover	. Lock	4
0400		*91 04 993*		1) NLS	1	. Holder	. Hållare	5
0410		89 66 335			2	. Rubber bushing	. Gummibussning	6
0420		40 02 861			1	. Hose kit	. Slangsats	5
0425		89 67 390			1	. O-ring kit	. O-ringsats	2

1. Not as separate spare part. Ej som separat reservdel.
19. See SI 500-1017 Se SI 500-1017
20. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24


Complete set

Satser

3-E04

Brakes

Bromsar

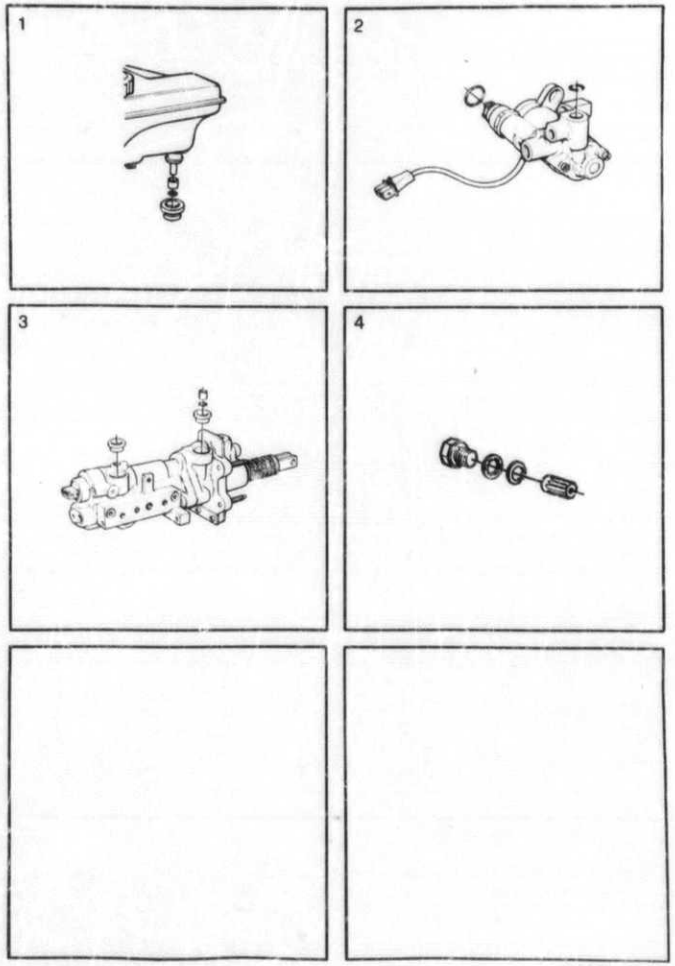

F2230 AAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 67 390			X	O-ring kit	O-ringsats	2
0020		*89 66 681*		NLS - USE 8967390	1	.O-ring	.O-ring	4
0030		*89 66 939*		NLS - USE 8967390	1	.Sleeve	.Hylsa	6
0040								
0050	2	40 02 887			X	Pump kit	Pumpsats	6
0070		*40 03 091*		1) NLS	1	.Pump motor	.Pumpmotor	6
0080		89 67 234			1	.O-ring	.O-ring	2
0110								
0120	3	40 02 879			X	Master cylinder kit	Huvudcylindersats	6
0140		*91 04 787*		1) NLS	1	.Master cylinder	.Huvudcylinder	6
0170		89 66 335			2	.Rubber bushing	.Gummibussning	6
0180		89 67 390			1	.O-ring kit	.O-ringsats	2
0190								
0200	4	41 07 793			1	Adjuster kit rear brake	Justeringssats bakbroms	4
0205								
0210		41 07 801		1)	1	.Washer	.Bricka	5
0220		*89 55 304*		1) NLS - USE 4107793	1	.Adjustment screw	.Justerskruv	5
0230		89 55 312		1)	1	.Screw	.Skruv	5
0240		*89 70 147*		1) NLS - USE 4107793	1	.Stop ring	.Stoppring	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-D06
Rear wheel brake	3-D08
Footbrake system	3-D10
Parking brake system	3-D22
Complete sets	3-D24

3-F02

0041

6

Front assembly, Steering
Framvagn, Styrinrättning
Tren: delantero, Dirección

0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0115
0120
0130
0140
0150
0160
0170
0180

TABLE OF CONTENTS

Front wheel suspension		
Front wheel suspension	6 : 5	3-F06
Steering device		
Steering wheel shaft	6 : 9	3-F10
Steering wheel, horn button	6 : 11	3-F12
Power steering gear	6 : 13	3-F14
Pump	6 : 19	3-F20
Complete sets		
Front wheel suspension, steering device	6 : 25	3-G02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F03

0042
0010
0020
0030
0180
0190
0200
0210
0220
0230
0240
0255
0260
0270
0280
0290
0300
0310
0590
0600
0610
0620
0630
0640
0650
0665
0670
0680
0690
0700
0710
0720

INNEHÅLLSFÖRTECKNING

Framvagn		
Framvagn	6 : 5	3-F06
Styrinrättning		
Rattstång	6 : 9	3-F10
Ratt, signalknapp	6 : 11	3-F12
Servostyrväxel	6 : 13	3-F14
Pump	6 : 19	3-F20
Satser		
Framvagn, styrinrättning	6 : 25	3-G02

SUMARIO

Tren delantero		
Tren delantero	6 : 5	3-F06
Direccion		
Columna de direccion	6 : 9	3-F10
Volante, boton bocina	6 : 11	3-F12
Servomecanismo de direccion	6 : 13	3-F14
Bomba	6 : 19	3-F20
Juegos completos		
Mecanismos delanteros, direccin, cambio en el volante	6 : 25	3-G02


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F06 Front wheel suspension Framvagn

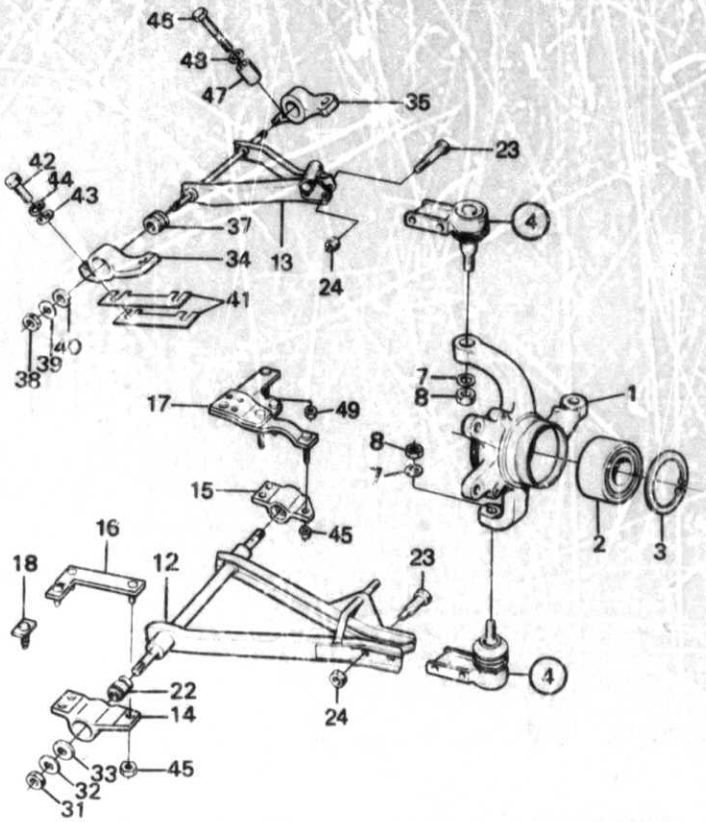

F4546 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qnt/Antal	Description	Benämning	S L
1	91 01 031		LH	1	Steering knuckle housing	Styrspindelhus	5
1	91 01 049		RH	1	Steering knuckle housing	Styrspindelhus	5
1	91 02 096		LH ABS	1	Steering knuckle housing	Styrspindelhus	5
1	91 02 104		RH ABS	1	Steering knuckle housing	Styrspindelhus	5
2	91 04 209			2	Wheel bearing	Hjullager	2
3	79 72 581			4	Retaining ring	Spärring	6
4	89 93 341		See page 6-025, 3-G02	4	End piece	Ändstycke	2
7	80 73 124	S		4	Washer	Bricka	5
8	79 18 733	S		4	Lock nut	Låsmutter	5
12	89 34 739		12) -1991, LH NLS - USE 4199576	1	Swivel arm	Svängarm	4
12	89 34 796		12) -1991, RH NLS - USE 4199584	1	Swivel arm	Svängarm	4
12	41 99 576		12) 1992-, LH	1	Swivel arm	Svängarm	4
12	41 99 584		12) 1992-, RH	1	Swivel arm	Svängarm	4
13	89 41 015		13) LH	1	Swivel arm	Svängarm	4
13	89 41 023		13) RH	1	Swivel arm	Svängarm	4
14	89 33 970		2) LH	1	Bearing anchorage	Lagerfäste	5
14	89 33 988		2) RH	1	Bearing anchorage	Lagerfäste	5
15	89 34 002		3) LH	1	Bearing anchorage	Lagerfäste	5
15	89 34 010		3) RH	1	Bearing anchorage	Lagerfäste	5
16	89 39 274		2) LH	1	Bracket	Fäste	5
16	89 39 282		2) RH	1	Bracket	Fäste	5
17	89 35 736		3) LH	1	Bracket	Fäste	6
17	89 35 744		3) RH	1	Bracket	Fäste	6
18	89 38 823		2) LH	1	Bracket	Fäste	5
18	89 38 856		2) RH	1	Bracket	Fäste	5
22	71 84 443			4	Bushing	Bussning	2
23	89 90 012			8	Screw	Skruv	5
24	79 69 308	S		8	Lock nut	Låsmutter	5
31	79 04 113			4	Nut	Mutter	5
32	70 71 938			4	Lock washer	Låsbricka	5
33	70 70 642			4	Washer	Bricka	5
34	71 75 441		2) LH	1	Bearing anchorage	Lagerfäste	5
35	71 75 433		3) LH	1	Bearing anchorage	Lagerfäste	3
35	73 37 330		3) LH, ALT. TO 7175433	1	Bearing anchorage	Lagerfäste	5
34	71 75 433		2) RH	1	Bearing anchorage	Lagerfäste	3
35	71 75 441		3) RH	1	Bearing anchorage	Lagerfäste	5
35	73 37 348		3) RH, ALT. TO 7175441	1	Bearing anchorage	Lagerfäste	5
37	71 83 603			4	Bushing	Bussning	2
38	79 04 097			4	Nut	Mutter	5
39	70 70 626			4	Lock washer	Låsbricka	6
40	70 70 667			4	Washer	Bricka	6
41	70 71 061		0,5 MM	X	Shim	Shim	5
41	70 71 079		1,0 MM	X	Shim	Shim	5
41	70 71 087		2,0 MM	X	Shim	Shim	5
42	79 78 794		16)	7	Screw	Skruv	5
42	79 78 307		17) -1990	7	Screw	Skruv	5
42	79 78 323		1991-	7	Screw	Skruv	5
43	80 73 108		16)	7	Washer	Bricka	5
44	88 02 175		16)	7	Spring washer	Fjäderbricka	5
45	79 71 765			12	Nut	Mutter	5
46	80 83 222		16)	1	Screw	Skruv	5
46	79 82 549		17) -1991 NLS - USE 7982085, 8073108	1	Screw	Skruv	5
46	79 82 564		1992-	1	Screw	Skruv	5
47	89 41 403			1	Spacer tube	Distansrör	5

2. Front Främre
3. Rear Bakre
12. Lower Nedre
13. Upper Övre
16. Ch. --L3007882, - L5004095, --L7017203
17. Ch. L5004096-, L7017204--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A01

6 GROUP INDEX

Front wheel suspension	3-F00
Steering device	3-F10
Complete sets	3-G02

3-F08 *Front wheel suspension* *Framvagn*

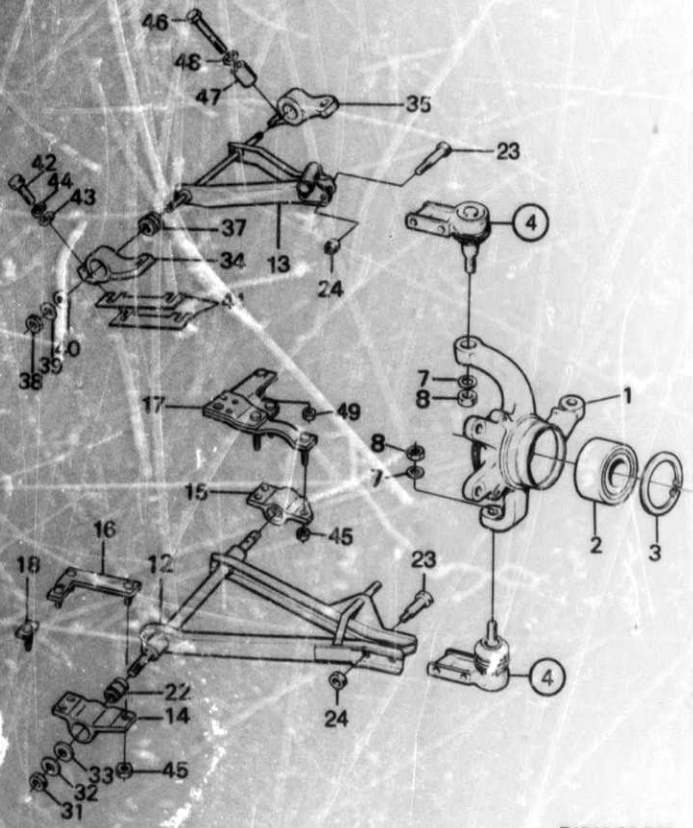

F4546 AAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	48	88 02 175		16)	1	Spring washer	Fjäderbricka	5
0600	49	79 77 812			2	Lock nut	Låsmutter	5

16. Ch. --L3007862, --L5004095, --L7017203

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F10

Steering shaft
Rattstång

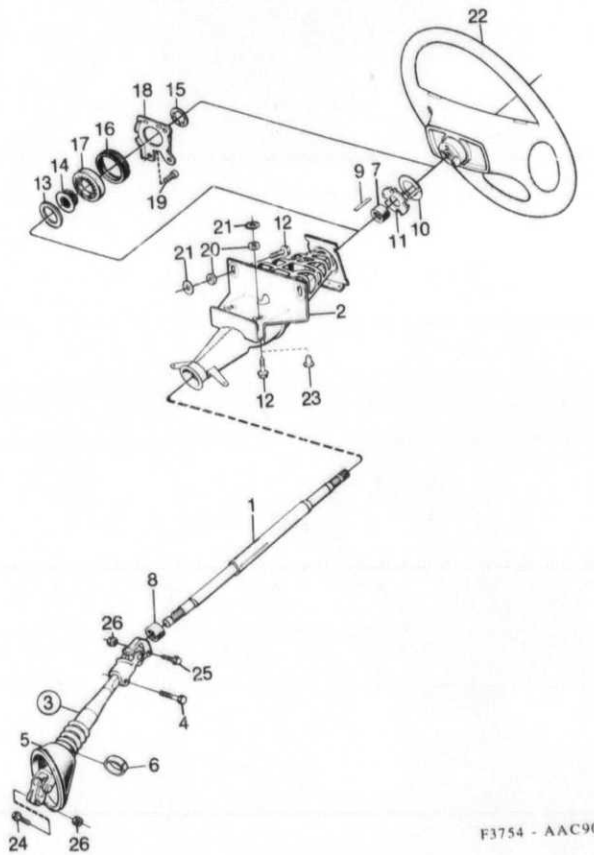

F3754 - AAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 04 768			1	Steering shaft	Rattstång	5
0020	1	91 04 647		AIR-BAG	1	Steering shaft	Rattstång	5
0030	2	89 34 952			1	Column cage	Rattställsbur	6
0040	2	91 06 626		AIR-BAG	1	Column cage	Rattställsbur	6
0050	3	40 01 798			1	Countershaft	Mellanaxel	5
0055	4	73 99 975			1	▪Screw	▪Skruv	5
0060	5	40 03 240		1990	1	▪Bellows	▪Bälg	5
0065	5	41 06 993		1991-	1	▪Bellows	▪Bälg	5
0070	6	89 47 988		1990	1	▪Bearing	▪Lagring	3
0075	6	41 06 985		1991-	1	▪Bearing	▪Lagring	3
0080	7	89 35 025		13)	1	Needle bearing	Nållager	5
0090	8	89 36 163		12)	1	Needle bearing	Nållager	5
0100	9	89 40 645			1	Ground plate	Jordningsbleck	5
0110	10	89 36 411			1	Contact ring	Kontaktring	5
0120	11	89 36 403			1	Retainer	Hållare	5
0130	12	89 39 340			4	Screw	Skruv	5
0140	13	40 00 360		AIR-BAG	1	Washer	Bricka	5
0141	14	89 72 374		AIR-BAG	1	Bushing	Bussning	3
0142	15	89 54 281		AIR-BAG	1	Lock ring	Låsring	5
0143	16	89 50 172		AIR-BAG	1	Ring	Ring	5
0144	17	89 50 701		AIR-BAG	1	Ball bearing	Kullager	6
0145	18	91 06 329		AIR-BAG	1	Plate	Platta	5
0146	19	79 22 347		AIR-BAG	1	Screw	Skruv	5
0160	20	89 39 332			4	Washer	Bricka	3
0170	20	89 39 332		RHD 4,8 MM	2	Washer	Bricka	3
0180	20	*89 45 032*		RHD 7,8 MM NLS	2	Washer	Bricka	3
0190	21	89 41 114			4	Ring	Ring	3
0200	22			See page 6-011, 3-F12		Steering wheel	Ratt	
0280	23	89 41 205			4	Seal	Tätning	5
0310	24	79 72 334			1	Hexagon screw	Sexkantsskruv	5
0320	25	79 67 789			1	Screw	Skruv	5
0330	26	79 68 415			2	Lock nut	Låsmutter	3

12. Lower Nedre
13. Upper Övre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02


Steering device

3-F12

Steering wheel
Horn button

Styrinrättning

Ratt
Signalknapp

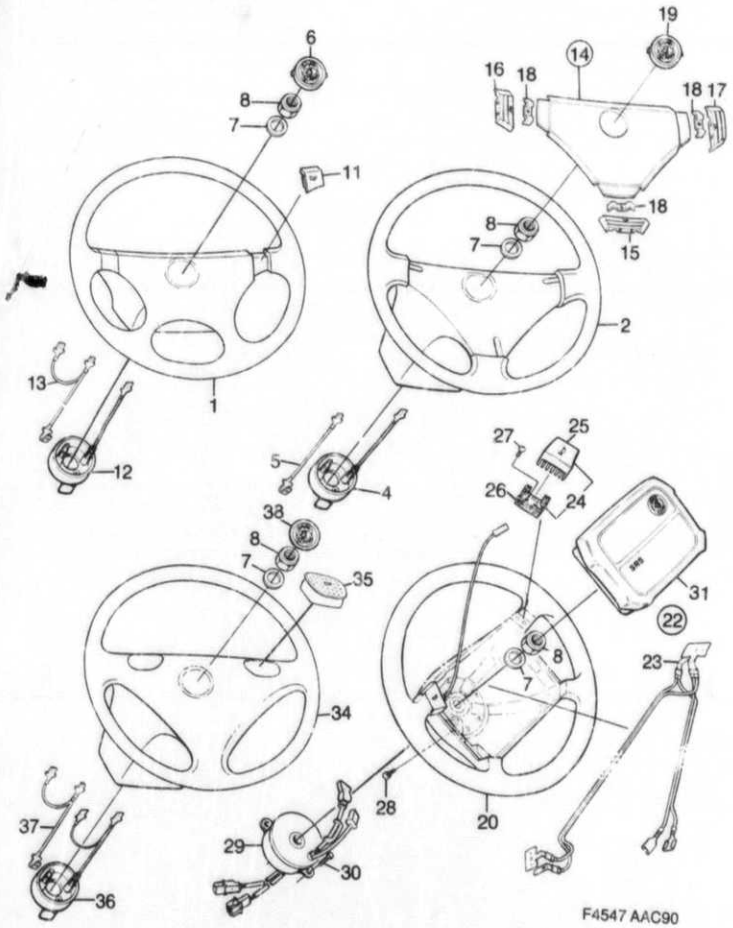

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 65 477			1	Steering wheel	Ratt	5
0020						four spoke	fyrekrad	
0030	2	*89 73 547*		28), -1991	1	Steering wheel	Ratt	5
0040				NLS		three spoke, sport design	treekrad, sport design	
0050	2	89 71 715		-1991	1	Steering wheel	Ratt	5
0060						three spoke,leather	treekrad,läder	
0100	4	89 87 232		-1991	1	Companion flange	Medbringare	6
0110	5	89 87 273		-1991	1	Cable	Kabel	5
0120	6	89 89 659			1	Emblem	Emblem	3
0140	7	80 30 058			1	Washer	Bricka	5
0150	8	89 54 315			1	Nut	Mutter	5
0220	11	89 61 096		LH	1	Horn button	Signalknapp	5
0230	11	89 61 104		RH	1	Horn button	Signalknapp	5
0240	12	89 88 313			1	Companion flange	Medbringare	5
0250	13	89 88 420			1	Ground cable	Jordkabel	5
0260	14	89 90 376		-199[illegible]	1	Steering wheel pad	Rattkudde	3
0270	15	89 90 962		-1991	1	.Horn button	.Signalknapp	6
0280	16	89 90 970		-1991	1	.Horn button	.Signalknapp	6
0290	17	89 90 988		-1991	1	.Horn button	.Signalknapp	6
0300	18	89 87 406		-1991	3	.Contact plate	.Kontaktplatta	6
0310	19	89 90 103		-1991	1	.Emblem	.Emblem	3
0320								
0321	20	40 02 945		25)	1	Steering wheel	Ratt	5
0325	20	40 00 154		25)	1	Steering wheel	Ratt	5
0326						leather	läder	
0350	22	40 03 398		25)	1	.Cable	.Kabel	6
0360	23	*40 00 139*		1,25) NLS	1	..Cable	..Kabel	6
0365	24	43 68 627		25), -1992	1	..Horn button	..Signalknapp	
0370	24	40 03 372		25), 1993-, LH	1	...Horn button	...Signalknapp	6
0380	24	40 03 380		25), 1993-, RH	1	...Horn button	...Signalknapp	6
0390	25	40 02 622		1,25), LH	1	....Horn button	....Signalknapp	6
0400	25	40 02 630		1,25), RH	1	....Horn button	....Signalknapp	6
0410	26	89 68 679		1,25)	1	....Housing	....Hus	6
0420	27	89 68 703		25)	4	.Screw	.Skruv	5
0430	28	89 68 315		25)	2	.Screw	.Skruv	5
0440	29	*91 05 610*		25), 1990 NLS - USE 4310918	1	Contact unit	Kontaktenhet	6
0450	29	43 10 918		25), 1991-	1	Contact unit	Kontaktenhet	6
0460	30	79 65 684		25)	2	Screw	Skruv	6
0462	31	*40 02 960*		25,30), -1991 NLS	1	Airbag module	Airbagmodul	5
0463	31	43 13 714		25), 1992-	1	Airbag module	Airbagmodul	5
0470								
0480	34	41 03 438		1992-	1	Steering wheel	Ratt	5
0490						three spoke, sport design	treekrad, sport design	
0510	34	41 03 446		1992-	1	Steering wheel	Ratt	5
0520						three spoke,leather	treekrad,läder	
0530	35	41 94 007		1992-, LH	1	.Horn button	.Signalknapp	6
0540	35	41 94 015		1992-, RH	1	.Horn button	.Signalknapp	6
0550	36	41 93 983		1992-	1	.Companion flange	.Medbringare	6
0560	37	41 94 064		1992-	1	.Cable	.Kabel	5
0570	38	41 90 823		1992	1	Emblem	Emblem	3
0580	38	44 16 087		1993-	1	Emblem	Emblem	3

1. Not as separate spare part. Ej som separat reservdel.
25. AIR-BAG.
28. Superseded by 4103438 and 4416087. Ersatt av 4103438 och 4416087.
30. Superseded by 4313714. Ersatt av 4313714.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F14

Power steering gear

Servostyrväxel

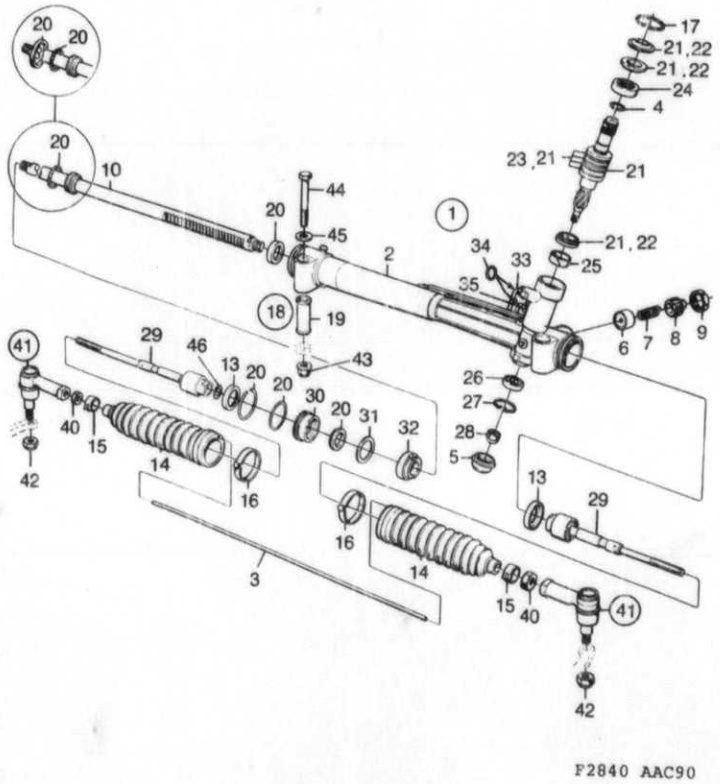

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 06 295*		7,14) NLS - USE 4106688	1	Steering gear	Styrväxel	4
0020	1	41 06 688		7,15)	1	Steering gear	Styrväxel	4
0030	1	*89 93 545*		29,14) NLS - USE 8993693	1	Steering gear	Styrväxel	4
0040	1	89 93 693		29,15)	1	Steering gear	Styrväxel	4
0050	1	*91 06 303*		7,14) RHD NLS - USE 4106696	1	Steering gear	Styrväxel	4
0060	1	41 06 696		7,15) RHD	1	Steering gear	Styrväxel	4
0070	2	*91 06 154*		1,14) NLS - USE 4004867	1	.Steering gear	.Styrväxel	4
0080	2	40 04 867		1,15)	1	.Steering gear	.Styrväxel	4
0090	3	89 36 700			1	..Tube	..Rör	4
0100	4	89 36 890	S		1	..Lock ring	..Låsring	5
0110	5	89 36 999			1	..Cap	..Kapsel	2
0120	6	*89 37 005*		NLS - USE 4199923	1	..Plunger	..Plunge	4
0130	7	91 01 858			1	..Spring	..Fjäder	6
0140	8	89 37 021			1	..Screw	..Skruv	5
0150	9	89 37 039			1	..Lock nut	..Låsmutter	3
0160	10	91 06 022		14)	1	..Rack	..Kuggstång	6
0170	10	41 06 514		15)	1	..Rack	..Kuggstång	6
0180	10	91 06 030		14), RHD	1	..Rack	..Kuggstång	6
0190	10	41 06 522		15), RHD	1	..Rack	..Kuggstång	6
0200	13	89 36 684	S		2	..Ring	..Ring	4
0210								
0220	14	89 93 099	S		2	..Bellows	..Bälg	3
0230		89 37 146	S	1)	1	...Bellows	...Bälg	6
0240	15	89 37 161			1	...Clamp	...Klämma	5
0250	16	44 24 057	S	(8937153)	1	...Clamp	...Klammer	5
0260								
0270	17	89 36 908	S		1	..Lock ring	..Låsring	5
0280	18	89 93 511			1	..Rubber bushing kit	..Gummibussningssats	3
0290	19	89 34 119			2	...Rubber bushing	...Gummibussning	3
0300								
0310	20	41 06 613			1	..Sealing kit rack	..Tätningssats kuggstång	3
0320								
0330	16	44 24 057	S	(8937153)	1	...Clamp	...Klammer	5
0340		41 06 506	S	1)	1	...Seal	...Tätning	3
0350		41 03 974	S	1)	1	...Seal	...Tätning	3
0360		41 06 498	S	1)	1	...O-ring	...O-ring	3
0370		89 70 873	S	1)	1	...Piston ring	...Kolvring	5
0380		41 03 958	S	1)	1	...O-ring	...O-ring	3
0390		89 37 070	S	1)	1	...Piston ring	...Kolvring	5
0400		89 36 676	S	1)	1	...Lock ring	...Låsring	5
0410								
0420	21	41 06 621		14), LHD	1	..Repair kit pinion	..Reparationssats pinjong	4
0430								
0440		89 36 791	S	1)	1	...Valve	...Ventil	
0450		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0460		41 04 022	S	1)	1	...Seal	...Tätning	3
0470		41 03 990	S	1)	1	...Seal	...Tätning	3
0480	25	89 36 619	S		1	...Bushing	...Bussning	3
0490		41 04 592	S	1)	1	...Seal	...Tätning	3
0500								
0510	21	41 06 639		15), LHD	1	..Repair kit pinion	..Reparationssats pinjong	4
0520								
0530		41 04 071	S	1)	1	...Valve	...Ventil	3
0540		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0550		41 04 022	S	1)	1	...Seal	...Tätning	3
0560		41 03 990	S	1)	1	...Seal	...Tätning	3
0570	25	41 04 030	S		1	...Bushing	...Bussning	3

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
14. Ch. -L3004087, -L5000813, -L7011584
15. Ch. L3004088-, L5000814-, L7011585-
29. Only for cars that will be repaired in USA Endast för bilar som repareras i USA


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F16

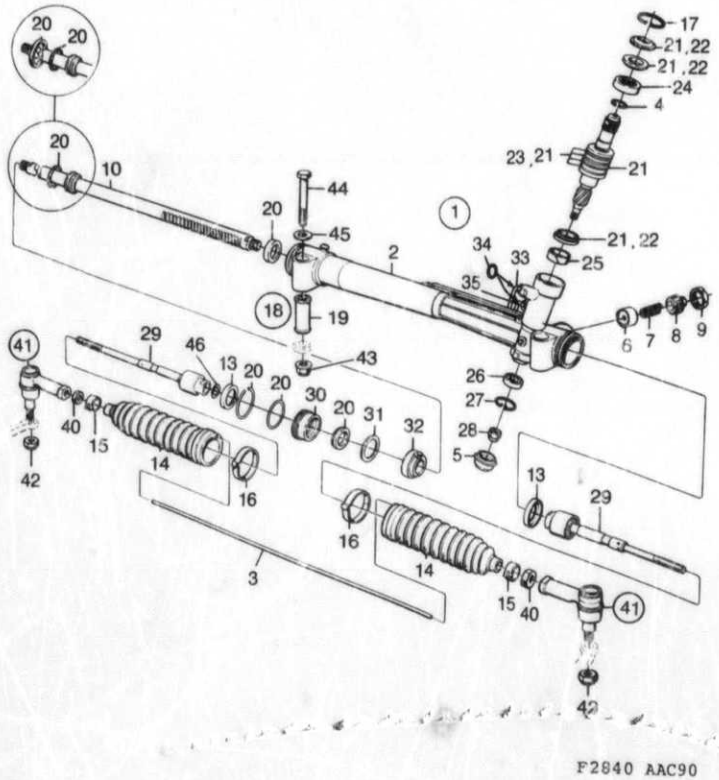

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580		41 04 006	S	1)	1	...Seal	...Tätning	3
0590								
0600	21	41 06 647		14), RHD	1	..Repair kit pinion	..Reparationssats pinjong	4
0610								
0620		89 39 175	S	1)	1	...Valve	...Ventil	
0630		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0640		41 04 022	S	1)	1	...Seal	...Tätning	3
0650		41 03 990	S	1)	1	...Seal	...Tätning	3
0660	25	89 36 619	S		1	...Bushing	...Bussning	3
0670		41 04 592	S	1)	1	...Seal	...Tätning	3
0680								
0690	21	41 06 654		15), RHD	1	..Repair kit pinion	..Reparationssats pinjong	4
0700								
0710		41 04 089	S	1)	1	...Valve	...Ventil	3
0720		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0730		41 04 022	S	1)	1	...Seal	...Tätning	3
0740		41 03 990	S	1)	1	...Seal	...Tätning	3
0750	25	41 04 030	S		1	...Bushing	...Bussning	3
0760		41 04 006	S	1)	1	...Seal	...Tätning	3
0770								
0780	22	41 04 493		14)	1	..Sealing kit pinion	..Tätningssats pinjong	3
0790								
0800		41 04 022	S	1)	1	...Seal	...Tätning	3
0810		41 03 990	S	1)	1	...Seal	...Tätning	3
0820		41 04 592	S	1)	1	...Seal	...Tätning	3
0830								
0840	22	41 04 501		15)	1	..Sealing kit pinion	..Tätningssats pinjong	3
0850								
0860		41 04 022	S	1)	1	...Seal	...Tätning	3
0870		41 03 990	S	1)	1	...Seal	...Tätning	3
0880		41 04 006	S	1)	1	...Seal	...Tätning	3
0890								
0900	23	41 04 519			1	..Sealing kit pinion	..Tätningssats pinjong	3
0910								
0920		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0930								
0940	24	89 36 932			1	..Needle bearing	..Nållager	6
0950	25	89 36 619		14)	1	..Bushing	..Bussning	3
0960	25	41 04 030		15)	1	..Bushing	..Bussning	3
0970	26	89 36 965			1	..Ball bearing	..Kullager	6
0980	27	89 36 973			1	..Lock ring	..Låsring	5
0990	28	41 04 162			1	..Lock nut	..Låsmutter	5
1000								
1010	29	89 88 941			1	..Steering rod	..Styrstag	4
1020		89 88 933	S	1)	1	...Steering rod	...Styrstag	3
1030	13	89 36 684	S		1	...Ring	...Ring	4
1040	16	44 24 057	S	(8937153)	1	...Clamp	...Klammer	5
1050								
1060	30	89 38 995			1	..End plate	..Gavel	5
1070	31	89 40 579			1	..Washer	..Bricka	5
1080	32	89 36 643			1	..End plate	..Gavel	5
1090								
1100	33	41 06 589		LHD	1	..Pipe set long	..Rörsats långt	4
1110								
1120		91 06 220	S	1)	1	...Pipe	...Rör	
1130	34	41 04 014	S		2	...O-ring	...O-ring	3
1140								
1150	33	41 06 605		RHD	1	..Pipe set long	..Rörsats långt	4
1160								
1170		91 06 279	S	1)	1	...Tube	...Rör	4

1. Not as separate spare part. Ej som separat reservdel.
14. Ch. --L3004087, --L5000813, --L7011584
15. Ch. L3004088--, L5000814--, L7011585--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F18

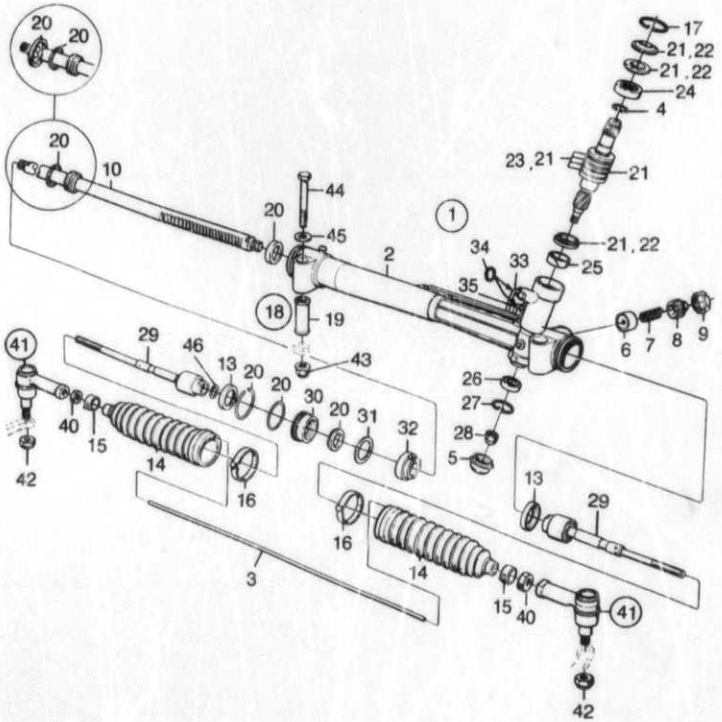

F2840 AAC90

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1180	34	41 04 014	S		2	...O-ring	...O-ring	3
1190								
1200	35	41 06 571		LHD	1	..Pipe set short	..Rörsats kort	4
1210								
1220		91 06 212	S	1)	1	...Pipe	...Rör	
1230	34	41 04 014	S		2	...O-ring	...O-ring	3
1240								
1250	35	41 06 597		RHD	1	..Pipe set short	..Rörsats kort	4
1260								
1270		91 06 287	S	1)	1	...Tube	...Rör	4
1280	34	41 04 014	S		2	...O-ring	...O-ring	3
1290								
1300	40	91 05 735			2	Nut	Mutter	5
1310	41	89 93 560		See page 6-025, 3-G02	1	Drag link end	Styrstagsända	2
1320	42	81 51 482			1	.Lock nut	.Låsmutter	5
1330	43	79 71 765			2	Nut	Mutter	5
1340	44	89 34 242			2	Screw	Skruv	5
1350	45	89 34 259			2	Washer	Bricka	5
1360	46	89 46 360			X	Spacer washer	Distansbricka	5
1370		89 93 552		See page 6-025, 3-G02	X	Steering gear kit power steering	Styrväxelsats servostyrning	4
1380								


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

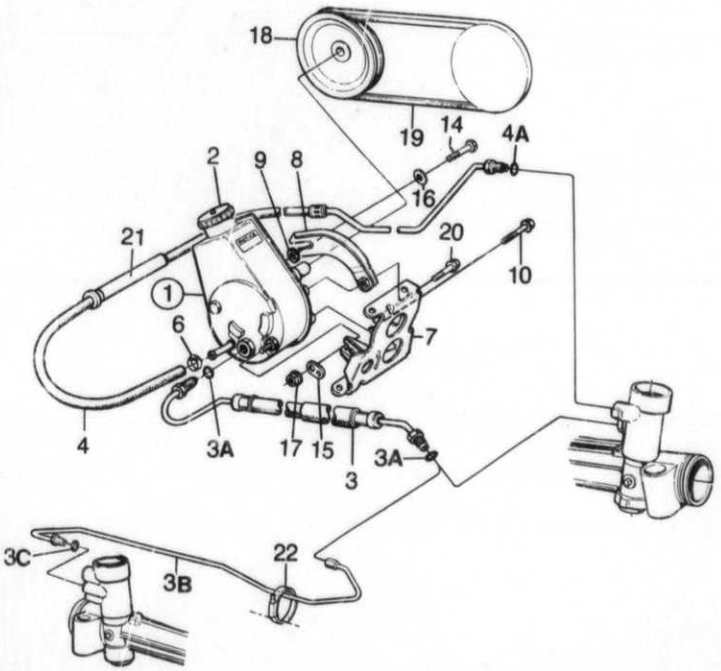

F2841 AAC90

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 01 577*		11) NLS - USE 4106712	1	Hydraulic pump	Hydraulpump	3
0030	2	89 43 979			1	.Cover	.Lock	4
0040	3	89 42 575			1	Hose	Slang	4
0050	3A	*89 37 500*	S	14) NLS - USE 4104048	2	.O-ring	.O-ring	3
0060	3A	41 04 048	S	15)	2	.O-ring	.O-ring	3
0070	3B	89 40 678		RHD	1	Delivery pipe	Tryckrör	4
0080	3C	*89 37 500*	S	14), RHD NLS - USE 4104048	1	.O-ring	.O-ring	3
0090	3C	79 77 580	S	15), RHD	1	.O-ring	.O-ring	2
0100	4	89 46 333			1	Hose	Slang	4
0110	4	89 48 341		RHD	1	Hose	Slang	4
0120	4A	*89 37 500*	S	14) NLS - USE 4104048	1	.O-ring	.O-ring	3
0130	4A	79 77 580	S	15)	1	.O-ring	.O-ring	2
0170	6	*79 63 507*		NLS - USE 7970049	1	Hose clamp	Slangklamma	5
0180	7	93 25 705			1	Bracket	Fäste	3
0190	8	93 25 713			1	Stay	Stag	3
0200	9	93 24 914			1	Spacer ring	Distansring	6
0210	10	*79 67 946*		NLS - USE 7979131	1	Screw	Skruv	5
0220	14	81 48 215			1	Screw	Skruv	5
0230	15	93 38 542			1	Washer	Bricka	5
0240	16	80 73 108			1	Washer	Bricka	5
0250	17	79 67 979			1	Nut	Mutter	5
0260	18	89 86 051			1	Pulley	Remskiva	3
0270	19	93 61 791			1	V-belt	Kilrem	1
0280	20	80 82 927			1	Screw	Skruv	5
0290	21	89 44 001			1	Sleeve	Hylsa	5
0300	22	79 70 130		RHD	1	Hose clamp	Slangklamma	5
0310		*89 89 840*		See page 6-025, 3-G02	X	Gasket kit	Packningsats	4
0310				NLS - USE 4104873				

11. Cars without rear hydraulic engine support Bilar utan hydrauliska bakre motorfästen
14. Ch. -L3004087, -L5000813, -L7011584
15. Ch. L3004088-, L5000814-, L7011585-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F22

Hydraulic pump
Hydraulpump

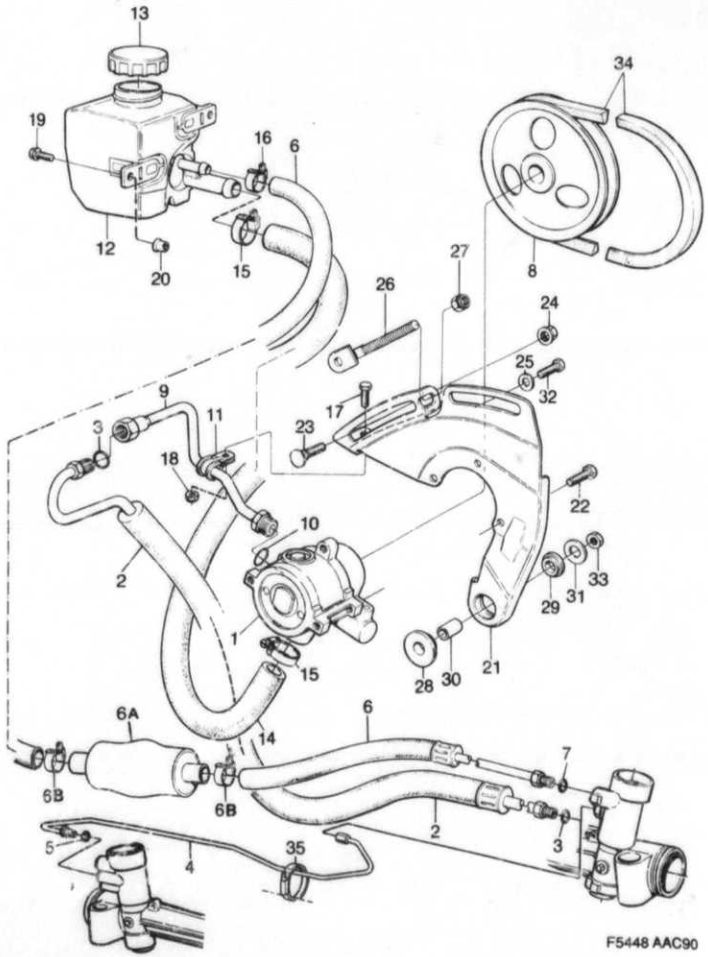

0300	Pos	Part No/Art nr	k. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 01 585*		1990 NLS - USE 4106704	1	Hydraulic pump	Hydraulpump	3
0020	1	41 06 704		1991-	1	Hydraulic pump	Hydraulpump	3
0030	2	89 42 575			1	Hose	Slang	4
0040	3	*89 37 500*		14) NLS - USE 4104048	2	.O-ring	.O-ring	3
0050	3	41 04 048		15)	2	.O-ring	.O-ring	3
0060	4	89 40 678		RHD	1	Delivery pipe	Tryckrör	4
0070	5	*89 37 500*		14), RHD NLS - USE 4104048	1	.O-ring	.O-ring	3
0080	5	79 77 580		15), RHD	1	.O-ring	.O-ring	2
0090	6	*89 85 830*		18) NLS - USE 4199519	1	Hose	Slang	4
0095	6	*41 94 577*		19)-1991 NLS - USE 4199519	1	Hose	Slang	4
0097	6	41 99 519		1992-	1	Hose	Slang	4
0100	6	*89 85 848*		-1991, RHD NLS - USE 4199527	1	Hose	Slang	4
0105	6	41 99 527		1992-, RHD	1	Hose	Slang	4
0106	6A	41 94 445		1992-	1	.Filter	.Filter	
0107	6B	79 70 049		1992-	2	.Hose clamp	.Slangklamma	5
0110	7	*89 37 500*		14) NLS - USE 4104048	1	.O-ring	.O-ring	3
0120	7	79 77 580		15)	1	.O-ring	.O-ring	2
0130	8	89 85 947			1	Pulley	Remskiva	
0140	9	91 02 559			1	Junction pipe	Skarvrör	4
0150	10	*89 37 500*		14) NLS - USE 4104048	1	.O-ring	.O-ring	3
0160	10	79 77 580		15)	1	.O-ring	.O-ring	2
0170	11	79 69 363			1	Clamp	Klammer	5
0180	12	*89 86 069*		26) NLS - USE 4197380, 9104555	1	Reservoir	Behållare	4
0185	12	91 04 555		27)	1	Reservoir	Behållare	4
0190	13	*89 56 385*		26) NLS - USE 4197380	1	Cover	Lock	5
0195	13	41 97 380		27)	1	Cover	Lock	5
0200	14	91 03 201			1	Hose	Slang	5
0210	15	79 63 531		-1991	2	Hose clamp	Slangklamma	5
0215	15	79 70 072		1992-	2	Hose clamp	Slangklamma	5
0220	16	*79 63 507*		-1991 NLS - USE 7970049	1	Hose clamp	Slangklamma	5
0225	16	79 70 049		1992-	1	Hose clamp	Slangklamma	5
0230	17	*80 19 911*		NLS - USE 7399603	1	Screw	Skruv	5
0240	18	80 73 512			1	Lock nut	Låsmutter	3
0250	19	79 74 694			2	Screw	Skruv	5
0260	20	92 23 082			2	Nut	Mutter	5
0270	21	75 47 482			1	Bracket	Fäste	3
0280	22	80 82 935			3	Screw	Skruv	5
0290	23	93 69 844			1	Screw	Skruv	5
0300	24	79 67 953			1	Nut	Mutter	5
0305	25	80 73 249		22)	1	Washer	Bricka	5
0310	25	80 29 985		23),-1992	1	Washer	Bricka	5
0312	25	91 66 372		1993-	1	Washer	Bricka	5
0315	26	75 12 247		20)	1	Screw	Skruv	5
0320	26	42 83 198		21)	1	Screw	Skruv	6
0330	27	80 74 288			1	Nut	Mutter	5
0340	28	93 65 909			1	Rubber bushing	Gummibussning	4
0350	29	93 65 917			1	Rubber bushing	Gummibussning	4
0360	30	83 56 859			1	Sleeve	Hylsa	6
0370	31	80 73 124			1	Washer	Bricka	5

14. Ch. --L3004087, --L5000813, --L7011584
15. Ch. L3004088--, L5000814--, L7011585--
18. Ch. --M5003287, --M7008139
19. Ch. M5003288--, M7008140--
20. Ch. --M5007560, --M7016370
21. Ch. M5007561--, M7016371--
22. Ch. --M5009667, --M7016370
23. Ch. M5009668--, M7016371--
26. Ch. --N2009559, --N7006305
27. Ch. N2009560--, N7006306--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-F24

Hydraulic pump

Hydraulpump

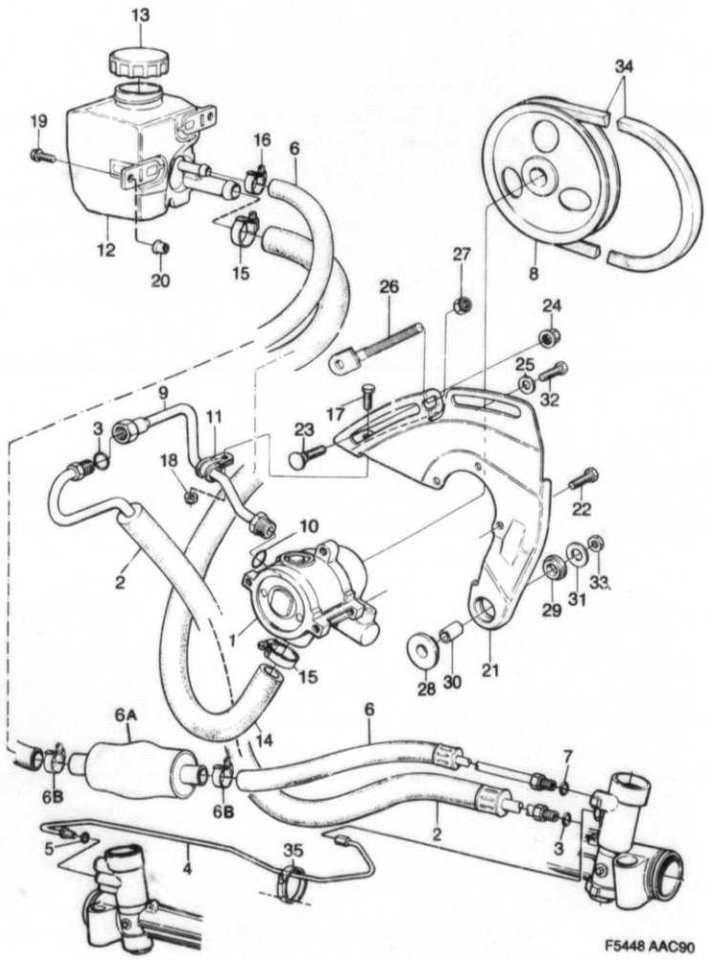

F5448 AAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0300								
0380	32	80 82 943			1	Screw	Skruv	5
0385	32	80 82 943		22), AC	1	Screw	Skruv	5
0388	32	80 82 968		23),-1992, AC	1	Screw	Skruv	5
0389	32	91 66 331		1993-, AC	1	Screw	Skruv	5
0390	33	79 67 953			1	Nut	Mutter	5
0400	34	83 39 921			1	V-belt	Kilrem	1
0410	35	79 70 130		RHD	1	Hose clamp	Slangklamma	5
0420		*89 89 857*		1990	X	Gasket kit	Packningsats	4
0430				See page 6-025, 3-G02		hydraulic pump	hydraulpump	
0430				NLS - USE 4104766				
0440		41 04 766		1991-	X	Sealing kit	Tätningssats	3
0450				See page 6-025, 3-G02		hydraulic pump	hydraulpump	


22. Ch. --M5009667, --M7016370
23. Ch. M5009668--, M7016371--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

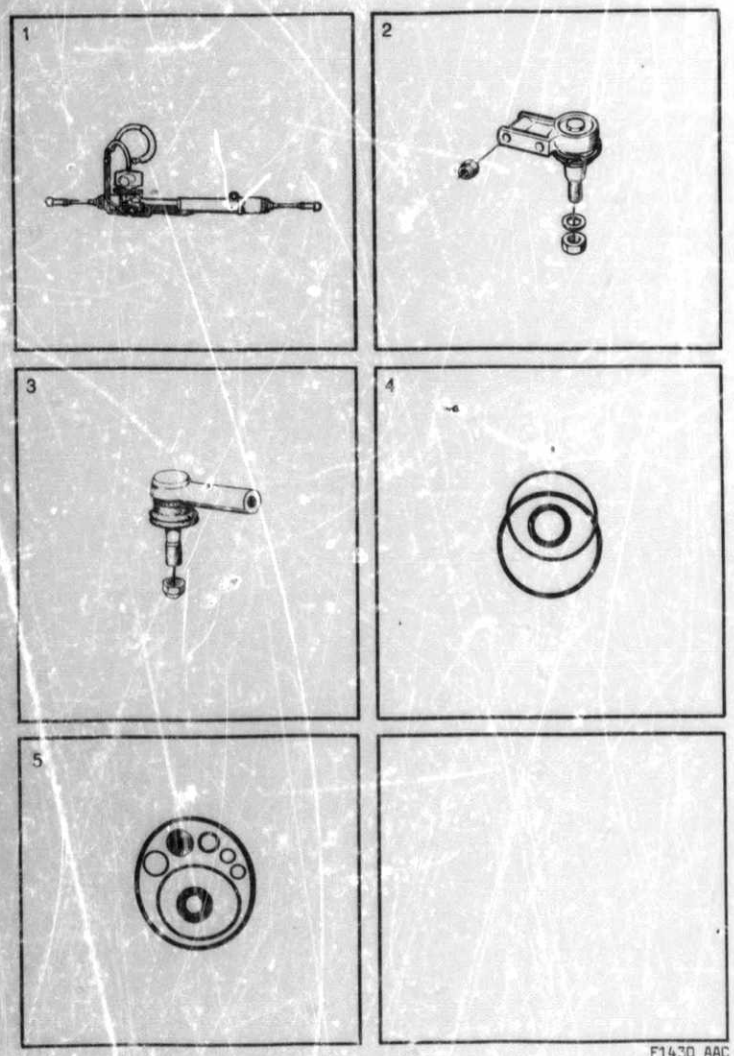

F1430 AAC

Complete sets — Satser

3-G02 Fore carriage / Steering device — Framvagn / Styrinrättning

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 552		LHD	X	Steering gear kit power steering	Styrväxelsats servostyrning	4
0020								
0030		*91 06 295*		NLS - USE 4106688	1	.Steering gear	.Styrväxel	4
0040		89 34 242			2	.Screw	.Skruv	5
0050		89 34 259			2	.Washer	.Bricka	5
0060		79 71 765			2	.Nut	.Mutter	5
0070		79 67 979			2	.Nut	.Mutter	5
0080		*91 01 577*		NLS - USE 4106712	1	.Hydraulic pump	.Hydraulpump	3
0090		89 86 051			1	.Pulley	.Remskiva	3
0100		*79 63 507*		NLS - USE 7970049	1	.Hose clamp	.Slangklamma	5
0110		89 42 575			1	.Hose	.Slang	4
0120		89 48 333			1	.Hose	.Slang	4
0130		79 70 130			1	.Hose clamp	.Slangklamma	5
0140		89 44 001			1	.Sleeve	.Hylsa	5
0150		93 61 791			1	.V-belt	.Kilrem	1
0160		93 25 705			1	.Bracket	.Fäste	3
0170		93 25 713			1	.Stay	.Stag	3
0180		93 24 914			1	.Spacer ring	.Distansring	6
0190		*79 67 946*		NLS - USE 7979131	1	.Screw	.Skruv	5
0200		*80 83 156*		NLS - USE 8148215	1	.Screw	.Skruv	5
0210		93 38 542			1	.Washer	.Bricka	5
0220		91 05 735			2	.Nut	.Mutter	5
0230		80 82 927			1	.Screw	.Skruv	5
0240		89 37 617			X	.Oil	.Olja	6
0250								
0260	2	89 93 321			X	End piece	Ändstycke	2
0270		*89 85 384*		1) NLS - USE 8993321	1	.End piece	.Ändstycke	2
0280		89 93 677		1)	1	.Nut set	.Muttersats	4
0290								
0300	3	89 93 560			X	Drag link end	Styrstagsända	2
0310		89 90 178		1)	1	.Drag link end	.Styrstagsända	2
0320		81 51 482			1	.Lock nut	.Låsmutter	5
0330								
0340	4	*89 89 857*		1990	X	Gasket kit hydraulic pump	Packningsats hydraulpump	4
0350				NLS - USE 4104766				
0360				1)	1	.O-ring	.O-ring	
0370				1)	1	.O-ring	.O-ring	
0380				1)	1	.O-ring	.O-ring	
0390								
0400	4	41 04 766		1991-	X	Sealing kit hydraulic pump	Tätningssats hydraulpump	3
0410								
0420		41 04 709		1)	1	.O-ring	.O-ring	2
0430		41 04 717		1)	1	.O-ring	.O-ring	3
0440		41 04 725		1)	1	.O-ring	.O-ring	3
0450		41 04 733		1)	1	.O-ring	.O-ring	3
0460		41 04 741		1)	1	.Seal	.Tätning	3
0470								
0480	5	*89 89 840*		11), B201	X	Gasket kit hydraulic pump	Packningsats hydraulpump	4
0490				NLS - USE 4104873				
0500				1)	1	.O-ring	.O-ring	
0510				1)	2	.O-ring	.O-ring	
0520				1)	1	.O-ring	.O-ring	
0530				1)	1	.Sealing ring	.Tätningsring	
0540				1)	1	.Sealing ring	.Tätningsring	
0550				1)	2	.Sealing ring	.Tätningsring	
0560				1)	2	.Sealing ring	.Tätningsring	
0570				1)	1	.Sealing ring	.Tätningsring	
0580				1)	1	.Magnet	.Magnet	

1. Not as separate spare part. Ej som separat reservdel.
11. Cars without rear hydraulic engine support Bilar utan hydrauliska bakre motorfästen

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	3-F06
Steering device	3-F10
Complete sets	3-G02

3-H02



Suspension, Wheels
Fjädringssystem, Hjul
Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0120
0130
0140
0160
0170
0175

TABLE OF CONTENTS

Front suspension	7 : 5	3-H06
Wheel	7 : 7	3-H08
Rear suspension	7 : 9	3-H10
Rear axle	7 : 11	3-H12
Complete sets		
Suspension system, wheels	7 : 13	3-H14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

3-H03

0042
0020
0040
0060
0240
0260
0280
0290
0300
0320
0330
0335
0340
0360
0380
0700
0720
0740
0760
0770
0780
0800
0810
0820

INNEHÅLLSFÖRTECKNING

Främre fjädring	7 : 5	3-H06
Hjul	7 : 7	3-H08
Bakre fjädring	7 : 9	3-H10
Bakaxel	7 : 11	3-H12
Satser		
Fjädringssystem, hjul	7 : 13	3-H14

SUMARIO

Suspension Del	7 : 5	3-H06
Ruedas	7 : 7	3-H08
Suspension Tras	7 : 9	3-H10
Eje Tras	7 : 11	3-H12
Juegos cómpletos		
Suspension ruedas	7 : 13	3-H14


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

3-H06 Front suspension Främre fjädring

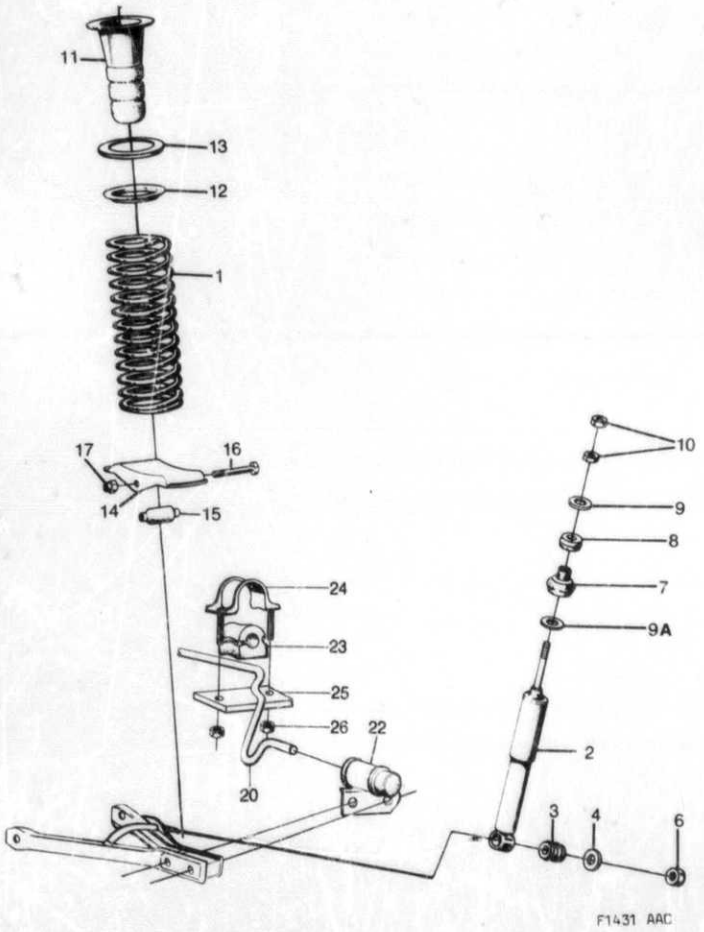

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	89 45 784		I	2	Spring	Fjäder	5
			S	2	black/white	svart/vit	
			CV, I, M	2			
1	89 45 776		I, A + AC, SR, ABS, AIR-BAG, EAS	2	Spring	Fjäder	5
					green/light green	grön/ljusgrön	
			CV, I, M + AC	2			
			CV, I, A	2			
			CV, TURBO, M	2			
			S, M + AC, SR, ABS, AIR-BAG, EAS	2			
			TURBO, M	2			
1	89 45 800		S, A + AC, SR, ABS, AIR-BAG, EAS	2	Spring	Fjäder	5
					yellow/red	gul/röd	
			CV, TURBO, M + AC	2			
			CV, TURBO, A	2			
			TURBO, A	2			
1	89 89 881		CV, TURBO, A + AC, ABS, AIR-BAG, EAS	2	Spring	Fjäder	5
					pink/brown	rosa/brun	
1	91 01 932			2	Spring	Fjäder	5
					sport-package	sportpaket	
2	89 93 438		15) See page 7-013, 3-H14	2	Shock absorber kit	Stötdämparsats	1
2	89 93 479		15,18) See page 7-013, 3-H14	2	Shock absorber kit	Stötdämparsats	1
2	91 02 781		15) See page 7-013, 3-H14	2	Shock absorber kit	Stötdämparsats	1
					sport-package	sportpaket	
3	89 32 840			2	.Bushing	.Bussning	
4	89 20 019	S		2	.Washer	.Bricka	5
6	79 04 089	S		2	.Nut	.Mutter	5
7	89 39 423	S	16)	2	.Bushing	.Bussning	1
8	91 00 025	S	17)	2	.Bushing	.Bussning	1
9	89 85 954	S	17)	2	.Washer	.Bricka	5
9A	89 48 226	S	16)	2	.Washer	.Bricka	5
10	79 79 511	S		4	.Nut	.Mutter	5
11	91 01 882		17)	2	Buffer	Buffert	5
12	89 19 862			2	Spring support	Fjäderstöd	6
12	89 21 108		11)	2	Spring support	Fjäderstöd	6
13	89 33 889			2	Spacer ring	Distansring	6
14	89 19 870			2	Spring support	Fjäderstöd	6
15	89 31 974			2	Bushing	Bussning	3
16	79 03 743			2	Screw	Skruv	5
17	79 40 463			2	Nut	Mutter	3
20	89 88 289			1	Anti-roll bar	Krängningshämmare	6
22	89 62 656		LH	1	Bracket	Konsol	5
22	89 62 664		RH	1	Bracket	Konsol	5
23	89 90 087			2	Rubber bushing	Gummibussning	3
24	89 89 915			2	Cap	Överfall	5
25	89 89 907			2	Base	Underlägg	5
26	79 74 371			4	Nut	Mutter	5

11. All cars with A and 5D with M Bilar med A och 5D med M
15. Gasfilled Gasfyllda
16. Lower Nedre
17. Upper Övre
18. Cars with stabilizer Bilar med krängningshämmare


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

3-H08 *Wheel* *Hjul*

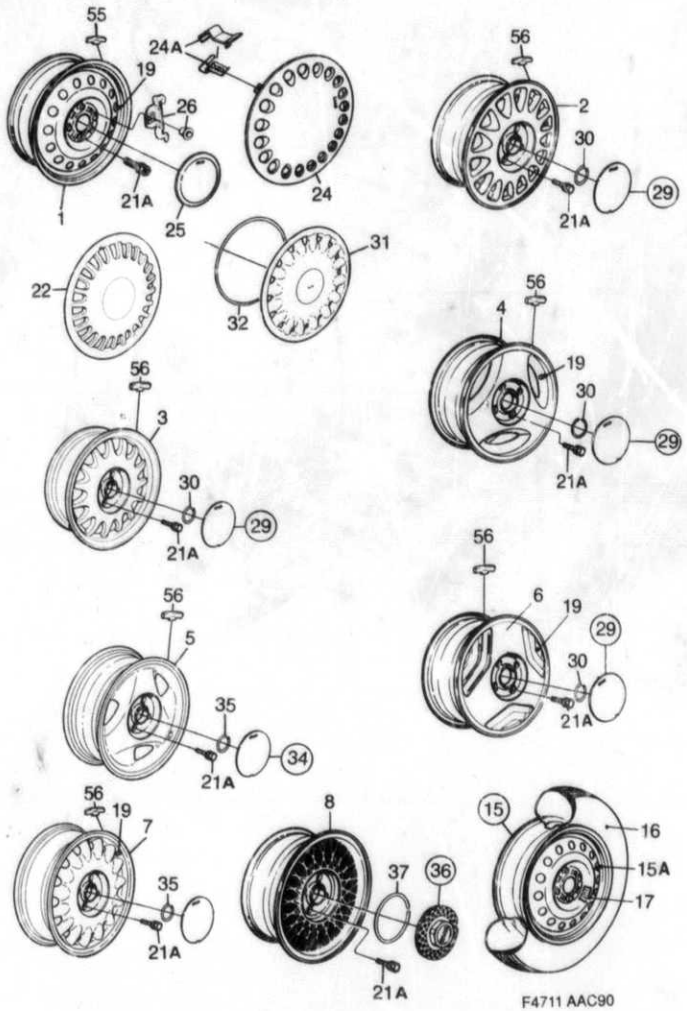

F4711 AAC90

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 60 254		1990, 5,5"	4	Wheel	Hjul	4
0020						steel-wheel	stålhjul	
0030	1	*89 62 367*		-1991, 5,5"	4	Wheel	Hjul	4
0040				NLS - USE 8962375		steel-wheel,black	stålhjul,svart	
0050	1	89 62 375		1992-, 5,5"	4	Wheel	Hjul	4
0060						steel-wheel,black	stålhjul,svart	
0070	2	91 03 524		-1991,5,5",40/105123301	4	Wheel	Hjul	4
0080	3	40 02 382		1992-,5,5",40/105124804	4	Wheel	Hjul	4
0090	4	91 03 219		19) -1991, 5,5"	4	Wheel	Hjul	4
0100				40/105 123 103				
0110	5	40 04 750		1991-, LH, 5,5",	2	Wheel	Hjul	4
0120				40/105 124 507		silver	silver	
0130	5	40 04 743		1991-, RH, 5,5",	2	Wheel	Hjul	4
0140				40/105 124 606		silver	silver	
0150	5	44 24 651		1993-, LH, 5,5",	2	Wheel	Hjul	4
0160				40/400 100 517		grey	grå	
0170	5	44 24 644		1993-, RH, 5,5",	2	Wheel	Hjul	4
0180				40/400 100 525		grey	grå	
0190	6	*91 03 870*		5,5", 1990	4	Wheel	Hjul	4
0200				40/105 122 600		sport-package	sportpaket	
0210	7	40 04 594		1992-,5,5",40/105124101	4	Wheel	Hjul	4
0220	8	40 02 408		1992-, 6", 40/105123616	4	Wheel	Hjul	4
0230	15	*41 06 373*		-1991 NLS - USE 4106365	1	Wheel	Hjul	5
0240	15	41 06 365		1992-	1	Wheel	Hjul	5
0250	15A	89 39 555		(60) 900043	1	.Valve	.Ventil	4
0260	16	91 04 498			1	.Tyre	.Däck	6
0270	17	40 02 358			1	.Label	.Etikett	5
0280	19	89 39 555		(60) 900043	5	Valve	Ventil	4
0290	21A	89 65 907			16	Wheel screw	Hjulskruv	2
0300	22	89 72 663			4	Wheel cap	Hjulkapsel	2
0310						plastic	plast	
0320	24	89 72 812		1990	4	Wheel cap	Hjulkapsel	2
0330						sheet metal	plåt	
0340	24A	89 73 422		1990	1	.Clamp kit	.Klammersats	2
0350				See page 7-013, 3-H14				
0360	25	89 87 596		1990	4	Wheel cap	Hjulkapsel	2
0370	26	91 01 510		1990	8	Clamp kit	Klammersats	2
0380	29	89 87 620		40/105123400	4	Wheel cap	Hjulkapsel	2
0390	30	89 87 802			1	.Spring ring	.Fjäderring	2
0400	31	41 05 391		1992-	4	Wheel cap	Hjulkapsel	2
0410	32	41 93 587		1992-	1	.Clamping ring	.Spännring	2
0420	34	41 04 287		1991-, 40/105124119	4	Wheel cap	Hjulkapsel	2
0430						silver	silver	
0440	34	44 25 450		1993-, 40/400100541	4	Wheel cap	Hjulkapsel	2
0450						grey	grå	
0460	35	89 87 802			1	.Spring ring	.Fjäderring	2
0470	36	41 99 360		1992-, 40/105122352	4	Wheel cap	Hjulkapsel	2
0480	37	41 99 386			1	.Clamping ring	.Spännring	2
0490	55	89 48 143		12) 10 G (45)3009768	X	Balancing weight	Balanseringsvikt	2
0500	55	89 48 150		12) 20 G (45)3006384	X	Balancing weight	Balanseringsvikt	2
0510	55	89 17 395		12) 30 G (45)3006392	X	Balancing weight	Balanseringsvikt	2
0520	55	89 48 168		12) 40 G (45)3006418	X	Balancing weight	Balanseringsvikt	2
0530	55	89 48 176		12) 50 G (45)3006426	X	Balancing weight	Balanseringsvikt	2
0540	55	89 17 411		12) 60 G (45)3006434	X	Balancing weight	Balanseringsvikt	2
0550	56	89 47 798		13) 10 G (45)3021052	X	Balancing weight	Balanseringsvikt	2
0560	56	89 47 806		13) 20 G (45)3021078	X	Balancing weight	Balanseringsvikt	2
0570	56	89 47 814		13) 30 G (45)3021094	X	Balancing weight	Balanseringsvikt	2
0580	56	89 47 822		13) 40 G (45)3021110	X	Balancing weight	Balanseringsvikt	2
0590	56	89 47 830		13) 50 G (45)3021136	X	Balancing weight	Balanseringsvikt	2
0600	56	89 47 848		13) 60 G (45)3021151	X	Balancing weight	Balanseringsvikt	2

12. For steel wheel För stålhjul
13. For aluminium wheel För aluminiumhjul
19. Cars with aero-kit Bilar med aero-kit


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

3-H10 Rear suspension — Bakre fjädring

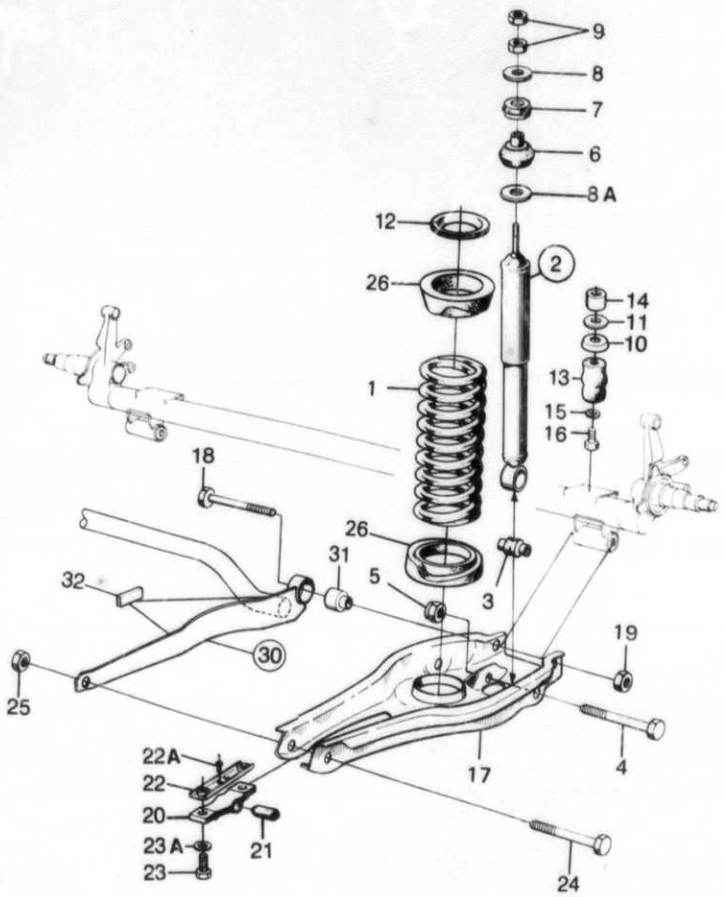

F4295 AAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0009	1	89 45 818		LH	1	Spring	Fjäder	5
0010	1	89 41 502		RH	1	Spring	Fjäder	5
0020	1	89 45 826		ME, FE	2	Spring	Fjäder	5
0030	1	91 01 940			2	Spring	Fjäder	5
0031						sport-package	sportpaket	
0061	2	89 93 446		15)	2	Shock absorber kit	Stötdämparsats	1
0062				See page 7-013, 3-H14				
0120	2	89 93 487		15,18)	2	Shock absorber kit	Stötdämparsats	1
0130				See page 7-013, 3-H14				
0140	2	91 02 799		15)	2	Shock absorber kit	Stötdämparsats	1
0150				See page 7-013, 3-H14		sport-package	sportpaket	
0160	3	89 47 939			2	.Bearing bushing	.Lagerbussning	1
0170	4	89 38 466	S		2	.Screw	.Skruv	5
0190	5	81 51 482	S		2	.Lock nut	.Låsmutter	5
0200	6	89 39 423	S	16)	2	.Bushing	.Bussning	1
0220	7	91 00 025	S	17)	2	.Bushing	.Bussning	1
0230	8	89 85 954	S	17)	2	.Washer	.Bricka	5
0240	8A	89 48 226	S	16)	2	.Washer	.Bricka	5
0260	9	79 79 511	S		4	.Nut	.Mutter	5
0265	10	86 58 924			2	Washer	Bricka	6
0270	11	89 58 779			2	Washer	Bricka	5
0280	12	89 33 897			2	Spacer ring	Distansring	4
0290	13	89 22 445			2	Buffer	Buffert	5
0300	14	*89 47 152*		20) NLS - USE 4107413	2	Spacer	Mellanlägg	3
0305	14	41 07 413		21)	2	Spacer	Mellanlägg	3
0310	15	79 10 599			2	Washer	Bricka	5
0320	16	79 75 063		20)	2	Screw	Skruv	5
0325	16	79 82 812		21)	2	Screw	Skruv	5
0330	17	89 36 304		LH	1	Spring link	Fjäderlänk	4
0340	17	89 47 210		RH	1	Spring link	Fjäderlänk	4
0350	18	*79 79 396*		NLS - USE 7979594	2	Screw	Skruv	5
0360	18	*80 84 451*		18) NLS - USE 7982168	2	Screw	Skruv	5
0380	18	79 82 168		18)	2	Screw	Skruv	5
0410	19	81 51 482			2	Lock nut	Låsmutter	5
0420	20	89 47 269		2)	2	Bearing anchorage	Lagerfäste	5
0430	21	89 35 298			2	.Bushing	.Bussning	3
0440	22	89 89 899			2	Nut plate	Mutterplatta	6
0450	22A	79 75 717			2	Rivet	Nit	5
0460	23	89 90 079			4	Bolt	Bult	5
0470	23A	80 30 017			4	Washer	Bricka	5
0490	24	79 82 044			2	Screw	Skruv	5
0500	24	79 82 150		18)	2	Screw	Skruv	5
0550	25	81 51 482			2	Lock nut	Låsmutter	5
0560	26	89 35 330			4	Spring support	Fjäderstöd	4
0570	30	89 88 297		3)	1	Anti-roll bar	Krängningshämmare	6
0590	31	89 89 980			2	.Bushing	.Bussning	3
0600	32	89 89 998		18)	4	Rubber moulding	Gummilist	3

2. Front Främre
3. Rear Bakre
15. Gasfilled Gasfyllda
16. Lower Nedre
17. Upper Övre
18. Cars with stabilizer Bilar med krängningshämmare
20. Ch. --L3006387, --L5001598, --L7016858
21. Ch. L3006388--, L5001599--, L7016859--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

3-H12 Rear axle Bakaxel

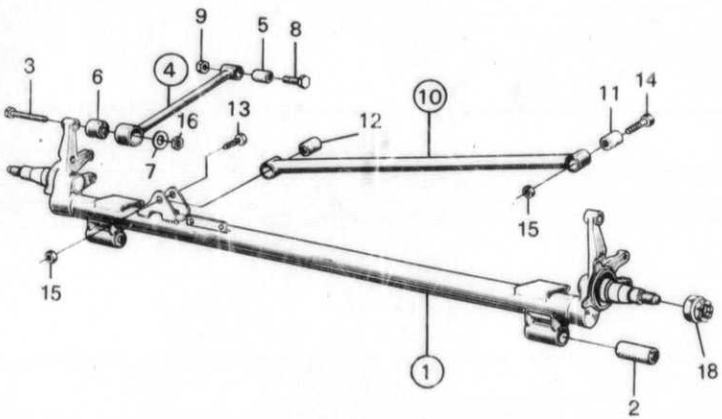

F1434 AAC


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0050	1	91 05 859			1	Rear axle	Bakaxel	4
0060	2	89 35 306			2	.Bushing	.Bussning	3
0090	3	*79 79 487*		NLS - USE 7979586	2	Screw	Skruv	5
0115	4	91 03 102			2	Stay	Stag	4
0125	5	89 56 468			2	.Bushing	.Bussning	3
0145	6	91 03 110			2	.Bushing	.Bussning	3
0165	7	89 52 277			2	Washer	Bricka	5
0197	8	79 82 002			2	Screw	Skruv	5
0210	9	79 77 812			2	Lock nut	Låsmutter	5
0220	10	89 32 071			1	Stay	Stag	5
0240	11	89 32 014			1	.Bushing	.Bussning	4
0260	12	89 30 307			1	.Bushing	.Bussning	4
0280	13	89 42 005			1	Screw	Skruv	5
0290	14	89 30 299			1	Screw	Skruv	5
0300	15	79 40 455			2	Nut	Mutter	3
0325	16	*80 73 538*		NLS - USE 7977812	2	Lock nut	Låsmutter	5
0380	18	89 65 360			2	Lock nut	Låsmutter	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

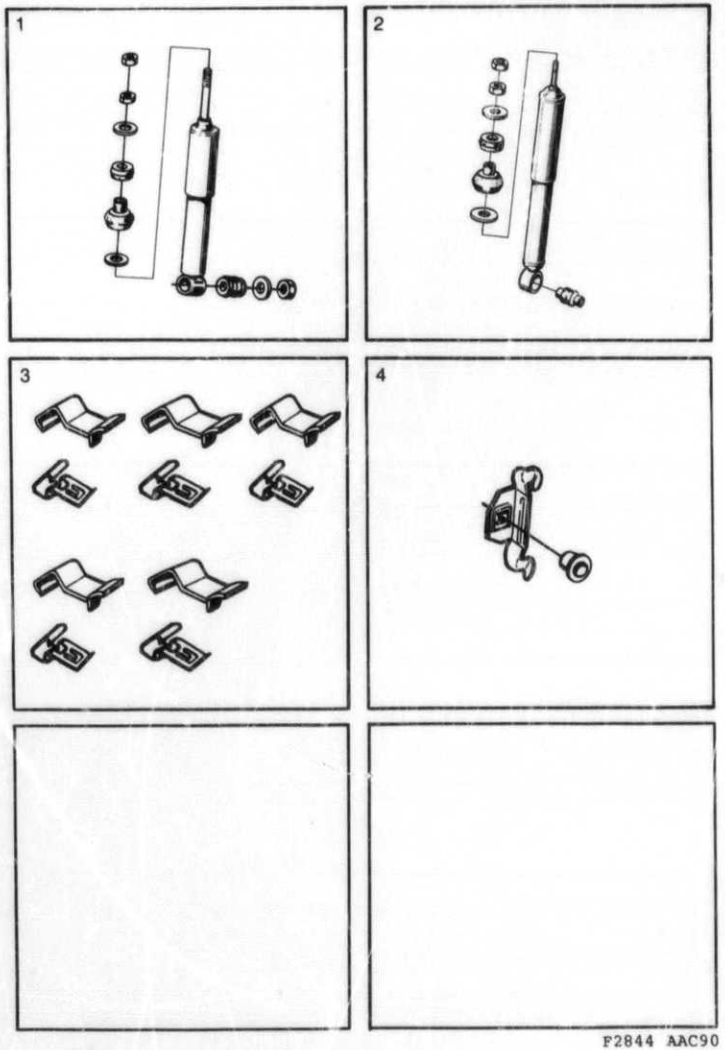

F2844 AAC90

Complete sets
3-H14
Suspension system
Wheel

Satser
Fjädringssystem
Hjul

1000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	89 93 438		2,15)	X	Shock absorber kit	Stötdämparsats	1
0030		89 91 028		1)	1	.Shock absorber	.Stötdämpare	6
0050		89 20 019			1	.Washer	.Bricka	5
0060		89 85 954			1	.Washer	.Bricka	5
0070		79 04 089			1	.Nut	.Mutter	5
0080		89 39 423		16)	1	.Bushing	.Bussning	1
0090		91 00 025		17)	1	.Bushing	.Bussning	1
0100		79 79 511			2	.Nut	.Mutter	5
0110		89 48 226			1	.Washer	.Bricka	5
0120								
0370	1	89 93 479		2,15,18)	X	Shock absorber kit	Stötdämparsats	1
0390		89 91 713		1)	1	.Shock absorber	.Stötdämpare	6
0410		89 20 019			1	.Washer	.Bricka	5
0420		89 85 954			1	.Washer	.Bricka	5
0430		79 04 089			1	.Nut	.Mutter	5
0440		89 39 423		16)	1	.Bushing	.Bussning	1
0450		91 00 025		17)	1	.Bushing	.Bussning	1
0460		79 79 511			2	.Nut	.Mutter	5
0470		89 48 226			1	.Washer	.Bricka	5
0480								
0490	1	91 02 781		2,15,18)	X	Shock absorber kit sport-package	Stötdämparsats sportpaket	1
0510		91 02 427		1)	1	.Shock absorber	.Stötdämpare	
0520		89 32 840			1	.Bushing	.Bussning	
0530		89 20 019			1	.Washer	.Bricka	5
0540		89 85 954			1	.Washer	.Bricka	5
0550		79 04 089			1	.Nut	.Mutter	5
0560		89 39 423		16)	1	.Bushing	.Bussning	1
0570		91 00 025		17)	1	.Bushing	.Bussning	1
0580		79 79 511			2	.Nut	.Mutter	5
0590		89 48 226			1	.Washer	.Bricka	5
0600								
0610	2	89 93 446		3,15)	X	Shock absorber kit	Stötdämparsats	1
0630		89 91 036		1)	1	Shock absorber	Stötdämpare	6
0650		89 38 466			1	.Screw	.Skruv	5
0660		81 51 482			1	.Lock nut	.Låsmutter	5
0670		89 39 423		16)	1	.Bushing	.Bussning	1
0680		91 00 025		17)	1	.Bushing	.Bussning	1
0690		79 79 511			2	.Nut	.Mutter	5
0700		89 48 226			1	.Washer	.Bricka	5
0710		89 85 954			1	.Washer	.Bricka	5
0720								
0940	2	89 93 487		3,15,18)	X	Shock absorber kit	Stötdämparsats	1
0960		89 91 721		1)	1	.Shock absorber	.Stötdämpare	6
0980		89 38 466			1	.Screw	.Skruv	5
0990		81 51 482			1	.Lock nut	.Låsmutter	5
1000		89 39 423		16)	1	.Bushing	.Bussning	1
1010		91 00 025		17)	1	.Bushing	.Bussning	1
1020		79 79 511			2	.Nut	.Mutter	5
1030		89 48 226		16)	1	.Washer	.Bricka	5
1040		89 85 954		17)	1	.Washer	.Bricka	5
1050								
1060	2	91 02 799		3,15,18)	X	Shock absorber kit sport-package	Stötdämparsats sportpaket	1
1070		91 02 435		1)	1	.Shock absorber	.Stötdämpare	
1080		89 47 939			1	.Bearing bushing	.Lagerbussning	1
1090								


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre
15. Gasfilled Gasfyllda
16. Lower Nedre
17. Upper Övre
18. Cars with stabilizer Bilar med krängningshämmare

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

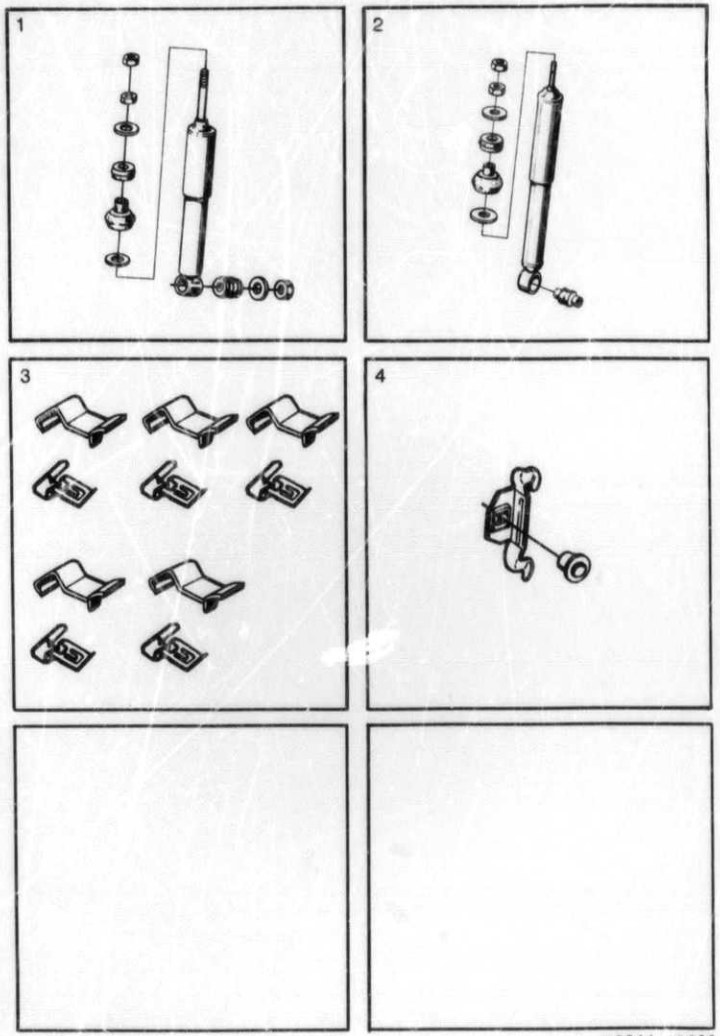

F2844 AAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1100		89 38 466			1	.Screw	.Skruv	5
1110		81 51 482			1	.Lock nut	.Låsmutter	5
1120		89 39 423		16)	1	.Bushing	.Bussning	1
1130		91 00 025		17)	1	.Bushing	.Bussning	1
1140		79 79 511			2	.Nut	.Mutter	5
1150		89 48 226		16)	1	.Washer	.Bricka	5
1160		89 85 954		17)	1	.Washer	.Bricka	5
1170								
1180	3	89 73 422		1990	X	Clamp kit	Klammersats	2
1190		89 72 846		1)	5	.Clip	.Clips	
1200		89 72 853		1)	5	.Plastic cover	.Plastskydd	
1210								
1220	4	91 01 510		1990	X	Clamp kit	Klammersats	2
1230		91 00 546		1)	1	.Clamp	.Klämma	2
1240		91 00 553		1)	1	.Sleeve	.Hylsa	2

1. Not as separate spare part. Ej som separat reservdel.
16. Lower Nedre
17. Upper Övre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	3-H06
Wheel	3-H08
Rear suspension	3-H10
Rear axle	3-H12
Complete sets	3-H14

4-A02

8A

Body, external
Kaross, utvändig
Carrocería, exterior

TABLE OF CONTENTS

Main body			
Front- and center floor		8A : 5	4-A06
Rear floor		8A : 9	4-A10
Roof		8A : 13	4-A14
Sun roof, hand operated		8A : 15	4-A16
Sun roof, electrically operated		8A : 19	4-A20
Top stack cover		8A : 23	4-A24
Rail front, rear and side, 200)		8A : 27	4-B04
Top stack, bow 1,2 and 3		8A : 29	4-B06
Rear rail and bow 4, 200)		8A : 31	4-B08
Rails and bow 4, 201)		8A : 33	4-B10
Hydraulic system		8A : 35	4-B12
Dash panel and front wheel housings		8A : 37	4-B14
Rear wheel housings		8A : 39	4-B16
Valances, model 3Ck		8A : 41	4-B18
Valances, model 5Ck		8A : 43	4-B20
Valances, model 2SN		8A : 45	4-B22
Valances, Convertible		8A : 47	4-B24
Valances, model 4SN		8A : 49	4-C02
Door- and windshield pillars		8A : 51	4-C04
Plugs etc		8A : 53	4-C06
Hood, front, fenders			
Hood, hood hinges and hood lock		8A : 55	4-C08
Front member, grille		8A : 57	4-C10
Front fenders		8A : 59	4-C12
Doors, trunk lid			
Doors, hinges, window regulators, 3CK, 2SN		8A : 61	4-C14
Doors, hinges, window regulators, Convertible		8A : 63	4-C16
Doors, hinges, window regulators, 5CK, 4SN, front door		8A : 65	4-C18
Doors, hinges, window regulators, 5CK, 4SN, rear door		8A : 67	4-C20
Door lock 3CK, 2SN		8A : 69	4-C22
Door lock 5CK, 4SN, front door		8A : 73	4-D02
Door lock 5CK, 4SN, rear door		8A : 75	4-D04
Trunk door, hinges, lock, model CK		8A : 77	4-D06
Trunk lid, hinges, lock, model SN		8A : 81	4-D10
Outside handle, lock cylinder		8A : 83	4-D12
Lock- and lock cylinder sets		8A : 85	4-D14
External details, glass, sealings			
Emblem		8A : 87	4-D16
Side mouldings		8A : 89	4-D18
Air outlet, decor tailgate		8A : 93	4-D22
Spoiler etc.		8A : 95	4-D24
Mirror		8A : 99	4-E04
Aero-Kit		8A : 105	4-E10
Glass and sealings, 3CK, 2SN		8A : 107	4-E12
Glass and sealings, Convertible		8A : 111	4-E16
Glass and sealings, 5CK, 4SN		8A : 115	4-E20
Mud guards		8A : 119	4-E24
Other sealings, 3CK, 2SN		8A : 121	4-F02
Other sealings, Convertible		8A : 123	4-F04
Other sealings, 5CK, 4SN		8A : 127	4-F08
Bumpers and touch-up paint			
Bumper front		8A : 131	4-F12
Bumper rear		8A : 133	4-F14
Touch-up paint, 1-can		8A : 135	4-F16
Touch-up paint, 2-can		8A : 137	4-F18
Touch-up paint, two-coat type		8A : 139	4-F20
Touch-up paint, other paint		8A : 141	4-F22
Complete sets			
Car body, external		8A : 143	4-F24

200. Ch. -M7018384
201. Ch. M7018385-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

INNEHÅLLSFÖRTECKNING

Karosseristomme		
Främre och mittre golv	8A : 5	4-A06
Bakre golv	8A : 9	4-A10
Tak	8A : 13	4-A14
Soltak, handmanövrerat	8A : 15	4-A16
Soltak, el-manövrerat	8A : 19	4-A20
Sufflett	8A : 23	4-A24
Skenor främre, bakre och sido, 200)	8A : 27	4-B04
Sufflettbågar, 1,2 och 3	8A : 29	4-B06
Bakre skena och båge 4, 200)	8A : 31	4-B08
Skenor och båge 4, 201)	8A : 33	4-B10
Hydrauliksystem	8A : 35	4-B12
Torpedplåt och hjulhus, främre	8A : 37	4-B14
Hjulhus, bakre	8A : 39	4-B16
Sidoplåtar, modell 3CK	8A : 41	4-B18
Sidoplåtar, modell 5CK	8A : 43	4-B20
Sidoplåtar, modell 2SN	8A : 45	4-B22
Sidoplåtar, Cabriolet	8A : 47	4-B24
Sidoplåtar, modell 4SN	8A : 49	4-C02
Dörr och vindrutestolpar	8A : 51	4-C04
Pluggar etc	8A : 53	4-C06
Motorhuv, front, skärmar		
Motorhuv, huvgångjärn och huvlås	8A : 55	4-C08
Frontbalk, grill	8A : 57	4-C10
Framskärmar	8A : 59	4-C12
Dörrar, bagagerumslucka		
Dörrar, gångjärn, fönsterhissar, 3CK, 2SN	8A : 61	4-C14
Dörrar, gångjärn, fönsterhissar, Cabriolet	8A : 63	4-C16
Dörrar, gångjärn, fönsterhissar, 5CK, 4SN, framdörr	8A : 65	4-C18
Dörrar, gångjärn, fönsterhissar, 5CK, 4SN, bakdörr	8A : 67	4-C20
Dörrlås 3CK, 2SN	8A : 69	4-C22
Dörrlås 5CK, 4SN, framdörr	8A : 73	4-D02
Dörrlås 5CK, 4SN, bakdörr	8A : 75	4-D04
Bagagerumsdörr, gångjärn, lås, modell CK	8A : 77	4-D06
Bagagerumslucka, gångjärn, lås, modell SN	8A : 81	4-D10
Yttre handtag, låscylinder	8A : 83	4-D12
Lås- och låscylindersatser	8A : 85	4-D14
Utvändiga detaljer, glas, tätningslister		
Emblem	8A : 87	4-D16
Sidodekorlister	8A : 89	4-D18
Luftutsläpp, dekor bakdörr	8A : 93	4-D22
Spoiler	8A : 95	4-D24
Backspeglar	8A : 99	4-E04
Aero-Kit	8A : 105	4-E10
Glas och tätningslister 3CK, 2SN	8A : 107	4-E12
Glas och tätningslister, Cabriolet	8A : 111	4-E16
Glas och tätningslister, 5CK, 4SN	8A : 115	4-E20
Stänkskydd	8A : 119	4-E24
Övriga tätningslister, 3CK, 2SN	8A : 121	4-F02
Övriga tätningslister, Cabriolet	8A : 123	4-F04
Övriga tätningslister, 5CK, 4SN	8A : 127	4-F08
Stötfångare och bättringsfärg		
Stötfångare, främre	8A : 131	4-F12
Stötfångare, bakre	8A : 133	4-F14
Bättringsfärg, 1-komponent	8A : 135	4-F16
Bättringsfärg, 2-komponent	8A : 137	4-F18
Bättringsfärg, tvåskiktstyp	8A : 139	4-F20
Bättringsfärg, övrig färg	8A : 141	4-F22
Satser		
Kaross, utvändig	8A : 143	4-F24

200. Ch. --M7018384
201. Ch. M7018385--

SUMARIO

Cuerpo de la carroceria		
Piso del. y tras.	8A : 5	4-A06
Piso tras.	8A : 9	4-A10
Techo	8A : 13	4-A14
Techo corredizo, maniobra manual	8A : 15	4-A16
Techo corredizo, maniobra electrica	8A : 19	4-A20
Capota	8A : 23	4-A24
Barras, delantera, trasera y lados, 200)	8A : 27	4-B04
Arcs de la capota, 1,2 y 3	8A : 29	4-B06
Barras tras y arco 4, 200)	8A : 31	4-B08
Barras, arco 4, 201)	8A : 33	4-B10
Sistema hidraulico	8A : 35	4-B12
Salipicadero y huercos de rueda, Del	8A : 37	4-B14
Huercos de rueda Tras	8A : 39	4-B16
Placas laterales, modelo, 3Ck	8A : 41	4-B18
Placas laterales, modelo, 5Ck	8A : 43	4-B20
Placas laterales, modelo, 2SN	8A : 45	4-B22
Placas laterales, Cabriolet	8A : 47	4-B24
Placas laterales, modelo, 4SN	8A : 49	4-C02
Montantes de puertas y de parabrisas	8A : 51	4-C04
Tapones etc	8A : 53	4-C06
Capot, plancha frontal, guardabarro		
Capot, bisagras de capot y cerradura de capot	8A : 55	4-C08
Viga del, parilla	8A : 57	4-C10
Guardabarros del	8A : 59	4-C12
Puertas, tapa de cofre		
Puertas, bisagras, levantcristales, 3CK, 2SN	8A : 61	4-C14
Puertas, bisagras, levantcristales, Cabriolet	8A : 63	4-C16
Puertas, bisagras, levantcristales, 5CK, 4SN, delantera	8A : 65	4-C18
Puertas, bisagras, levantcristales, 5CK, 4SN, trasera	8A : 67	4-C20
Cerraduras de puerta 3CK, 2SN	8A : 69	4-C22
Cerraduras de puerta 5CK, 4SN, delantera	8A : 73	4-D02
Cerraduras de puerta 5CK, 4SN, trasera	8A : 75	4-D04
Puerta trasera, bisagras, cerradura modelo CK	8A : 77	4-D06
Tapa de cofre, bisagras, cerradura modelo SN	8A : 81	4-D10
Empunaduras exteriores, cilindros de cerradura	8A : 83	4-D12
Cerraduras y cilindros de cerradura	8A : 85	4-D14
Detalles exteriores, vidrios, juntas		
Emblemas	8A : 87	4-D16
Embellecedores de laterales	8A : 89	4-D18
Salida aire, embellecedores puerta trasera	8A : 93	4-D22
Espoilers	8A : 95	4-D24
Espejos retrovisores	8A : 99	4-E04
Aero-Kit	8A : 105	4-E10
Vidrios y juntas, 3CK, 2SN	8A : 107	4-E12
Vidrios y juntas, Cabriolet	8A : 111	4-E16
Vidrios y juntas, 5CK, 4SN	8A : 115	4-E20
Faldones	8A : 119	4-E24
Otras juntas, 3CK, 2SN	8A : 121	4-F02
Otras juntas, Cabriolet	8A : 123	4-F04
Otras juntas, 5CK, 4SN	8A : 127	4-F08
Parachoques y pintura de retoque		
Parachoques, Del	8A : 131	4-F12
Parachoques, Tras	8A : 133	4-F14
Pintura de retoque, tipo 1-componentes	8A : 135	4-F16
Pintura de retoque, tipo 2-componentes	8A : 137	4-F18
Pintura de retoque, tipo de dos capas	8A : 139	4-F20
Pintura de retoque, otro pintura	8A : 141	4-F22
Juegos completos		
Carosseria, exterior	8A : 143	4-F24

200. Ch. --M7018384
201. Ch. M7018385--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-A06

Front and centre floor

Främre och mittre golv

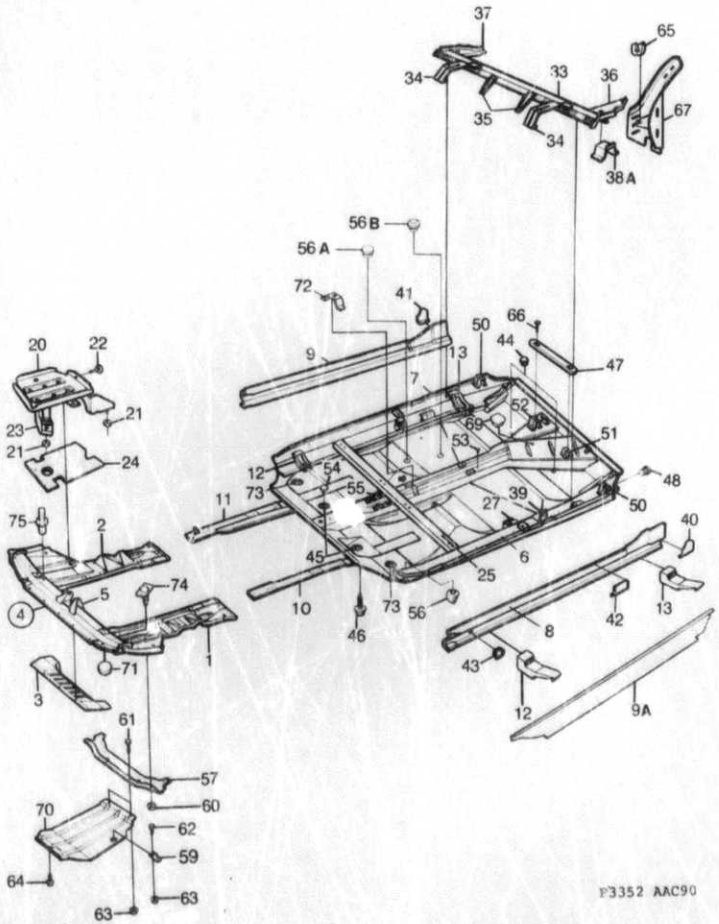

0100	Pos	Part No/Art nr	K S	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		82 66 454		51) 3CK	1	Body	Kaross	6
0020		82 66 462		51) 5CK	1	Body	Kaross	6
0030		92 07 911		51) 2SN	1	Body	Kaross	6
0040		92 06 657		51) 4SN	1	Body	Kaross	6
0050		76 12 146		51)	1	Front section	Framdel	6
0060	1	69 12 331		2) LH	1	Floor	Golv	4
0070	2	69 12 323		2) RH	1	Floor	Golv	4
0080	3	82 74 383		2,163)	1	Plate	Plåt	6
0090	4	69 45 174			1	Beam	Balk	5
0100	5	69 25 515		2)	1	▪Bracket	▪Konsol	5
0110	6	82 74 599		165) LH	1	Sill	Tröskel	6
0120	7	82 74 607		165) RH	1	Sill	Tröskel	6
0130	8	69 26 919		164) 2SN,3CK,CV	1	Sill	Tröskel	6
0140	8	69 26 810		164) 5CK, 4SN	1	Sill	Tröskel	6
0150	9	69 26 927		164) 3CK,2SN,CV	1	Sill	Tröskel	6
0160	9	69 26 828		164) 5CK, 4SN	1	Sill	Tröskel	6
0170	9A	69 33 659		161) -1990, LH, CV	1	Sill	Tröskel	6
0180	9A	69 33 667		161) -1990, RH, CV	1	Sill	Tröskel	6
0190	9A	41 53 250		161) 1991-, LH, CV	1	Sill	Tröskel	6
0200	9A	41 53 268		161) 1991-, RH, CV	1	Sill	Tröskel	6
0210	10	69 15 292		LH	1	Beam	Balk	6
0220	11	69 15 300		RH	1	Beam	Balk	6
0230	12	92 90 776		2) LH	1	Jack support	Domkraftstöd	6
0240	12	92 90 784		2) RH	1	Jack support	Domkraftstöd	6
0250	13	92 90 750		3) LH	1	Jack support	Domkraftstöd	6
0260	13	92 90 768		3) RH	1	Jack support	Domkraftstöd	6
0270	20	*69 14 139*		TURBO NLS - USE 6929475	1	Shelf	Hylla	6
0280	21	79 71 658		TURBO	3	Nut	Mutter	5
0290	22	70 35 801			1	Buffer	Buffert	3
0300	23	92 25 806		TURBO	1	Reinforcement	Förstärkning	4
0310	24	97 13 496		-1991	1	Insulation	Isolering	4
0320	25	69 17 934		2), -1990	1	Beam	Balk	6
0330	25	69 28 337		2), 1991-	1	Beam	Balk	6
0340	27	92 23 967		-1990	2	Bracket	Konsol	6
0350	27	69 28 360		1991-, LH	1	Bracket	Fäste	6
0360	27	69 28 378		1991-, RH	1	Bracket	Fäste	6
0370	33	69 45 422			1	Cross member	Tvärbalk	6
0380	34	92 85 180			2	Support	Stöd	6
0390	35	*92 83 947*		-1990 NLS - USE 4101978	2	Stay	Stag	6
0400	35	41 01 978		1991-	2	Stay	Stag	6
0410	36	92 84 274		LH, 5CK, 4SN	1	Plate	Plåt	6
0420	37	92 84 282		RH, 5CK, 4SN	1	Plate	Plåt	6
0430	38	*92 84 316*		LH NLS	1	Plate	Plåt	6
0440	38	*92 84 324*		RH NLS	1	Plate	Plåt	6
0450	39	82 83 533		5CK, 4SN	2	Bracket	Konsol	6
0460	40	82 42 398		LH, 5CK, 4SN	1	Connector	Anslutning	6
0470	41	82 42 406		RH, 5CK, 4SN	1	Connector	Anslutning	6
0480	42	82 42 554		5CK, 4SN	2	Filling-in plate	Fyllnadsplåt	6
0490	43	82 04 661		5CK, 4SN	4	Plug	Plugg	5
0500	44	82 04 760			2	Plug	Plugg	5
0510	45	73 13 752			2	Cover	Lock	5
0520	46	79 76 921			2	Screw	Skruv	5
0530	47	*76 03 459*		NLS	1	Cover plate	Täckplåt	5
0540	48	92 28 180			2	Draining plug	Dräneringsplugg	5
0550	50	82 05 452			2	Support	Stöd	6
0560	51	*82 05 981*		LH NLS	1	Support	Stöd	5

2. Front Främre
3. Rear Bakre
51. Only latest design, state car colour code Endast senaste design, uppge färgkod
161. Upper Övre
163. Centre Mittre
164. Outer part Ytterdel
165. Inner section Innerdel

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-A08

Front and centre floor
Främre och mittre golv

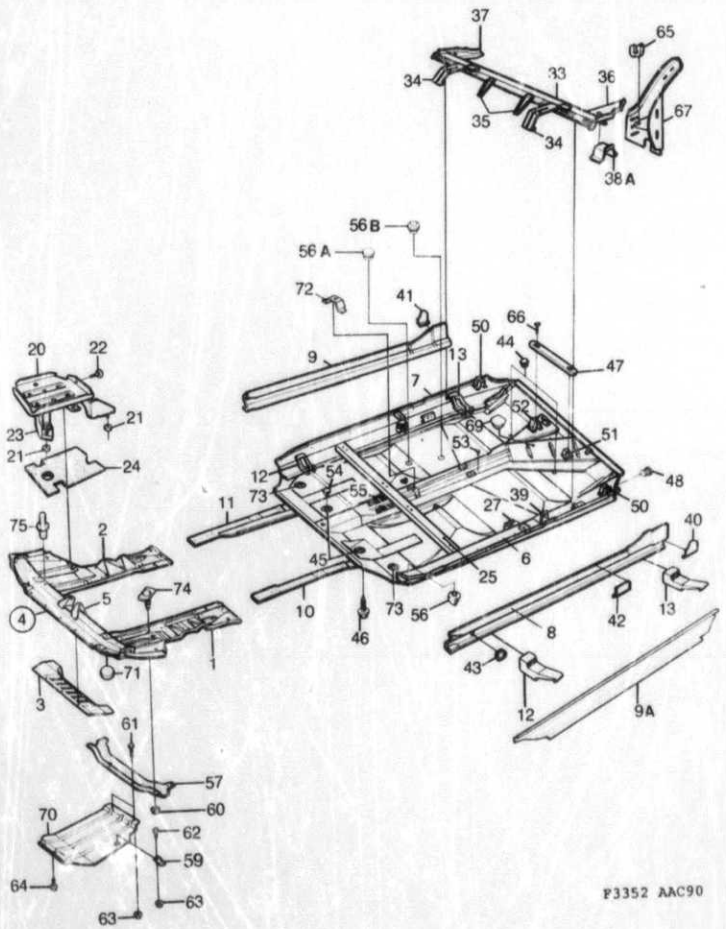

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	52	*82 05 999*		RH NLS	1	Support	Stöd	5
0580	53	*82 39 154*		NLS - USE 8267296	2	Plug	Plugg	5
0590	54	82 39 162			1	Plug	Plugg	5
0600	54	82 39 162		C, I SE, CH	1	Plug	Plugg	5
0610	54	94 92 471		C, I ME	1	Cover	Täcklock	3
0620	55	82 39 170			2	Plug	Plugg	5
0630	55	82 39 170		C, I SE, CH	6	Plug	Plugg	5
0640	56	82 66 876			2	Plug	Plugg	5
0650	56A	82 39 170		C, I ME	4	Plug	Plugg	5
0660	56B	82 67 296		C, I SE, CH	2	Plug	Plugg	5
0670	57	92 30 079			1	Beam	Balk	4
0680	59	82 59 061			1	Plate	Plåt	4
0690	60	79 69 306			2	Lock nut	Låsmutter	5
0700	61	92 31 705			2	Screw	Skruv	5
0710	62	80 82 935			1	Screw	Skruv	5
0720	63	79 67 953			3	Nut	Mutter	5
0730	64	82 62 958		69)	2	Screw	Skruv	5
0740	64	82 62 958		71)	3	Screw	Skruv	5
0750	65	92 21 508			2	Bushing	Bussning	5
0760	66	79 72 474		-1991	2	Pop rivet	Popnit	3
0770	66	79 72 490		1992-	2	Rivet	Nit	5
0780	67	82 87 294		LH	1	Support	Stöd	6
0790	67	82 87 302		RH	1	Support	Stöd	6
0800	68	*92 31 820*		NLS	1	Lock brace	Låsbygel	6
0810	69	82 39 170			4	Plug	Plugg	5
0820	70	*40 07 449*		69) NLS - USE 4008793	1	Protecting plate	Skyddsplåt	4
0830	70	40 08 793		71)	1	Protecting plate	Skyddsplåt	4
0840	71	71 55 708		FOR CARS WITHOUT OIL- AND AIR COOLER	2	Plug	Plugg	5
0850								
0860	72	69 43 740		-1990	1	Bracket	Konsol	6
0870	72	40 99 909		1991-	1	Bracket	Konsol	6
0880	73	69 30 341			2	Cover	Lock	5
0890	74			See page 6-005, 3-F06		Bracket	Konsol	

69. Ch. -L3002177, -L5000250
71. Ch. L3002178-, L5000251-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Car body

Karosskrov

4-A10

Rear floor

Bakre golv

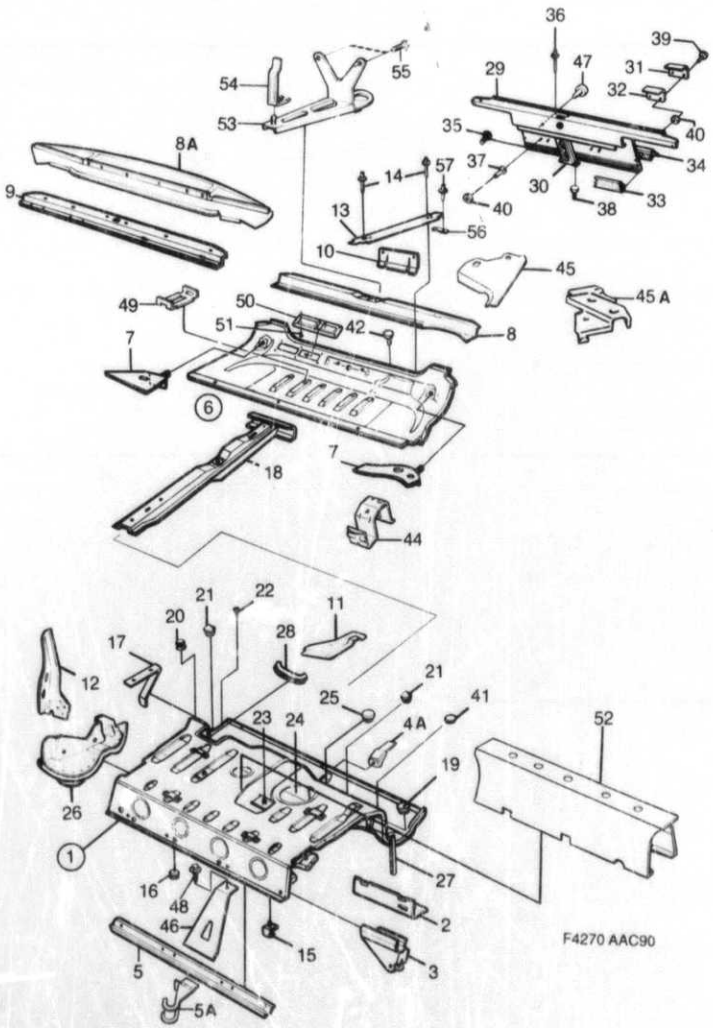

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 45 075			1	Floor	Golv	6
0020	2	69 27 289			1	.Jack support	.Domkraftstöd	6
0030	3	92 21 383			1	.Bracket	.Fäste	6
0040	4A	82 25 872			2	.Bracket	.Fäste	6
0050	5	92 92 640			1	Reinforcement	Förstärkning	6
0060	5A			1)	2	.Hook	.Krok	
0070	6	69 10 608			1	Rear section	Bakdel	5
0080	6	69 10 582		SN, CV	1	Rear section	Bakdel	5
0090	7	82 79 226		LH	1	.Bracket	.Fäste	6
0100	7	92 21 664		RH	1	.Bracket	.Fäste	6
0110	8	76 01 495		3)	1	.Plate	.Plåt	5
0120	8A	92 21 656		SN, CV	1	.Sill	.Tröskel	5
0130	9	92 34 287		3) SN, CV	1	.Crossmember	.Tvärbalk	5
0140	10	92 30 335		SN, CV	1	.Support	.Stöd	5
0150	11	76 01 479			1	Plate	Plåt	5
0160	12	*76 01 701*		LH NLS	1	Plate	Plåt	6
0170	12	*76 01 719*		RH NLS	1	Plate	Plåt	6
0180	13	82 89 993			1	Support member	Stödbalk	6
0190	14	79 72 474		-1991	3	Pop rivet	Popnit	3
0200	14	79 72 490		1992-	3	Rivet	Nit	5
0210	15	*76 01 735*		NLS	2	Bracket	Fäste	6
0220	16	84 59 513			3	Plug	Plugg	5
0230	17	*82 79 457*		NLS	1	Stay	Stag	6
0240	18	69 45 455			1	Support member	Stödbalk	6
0250	19	82 06 096			5	Plug	Plugg	5
0260	20	71 63 066			11	Plug	Plugg	5
0270	21	82 04 760			2	Plug	Plugg	5
0280	22	71 16 452			3	Draining plug	Dräneringsplugg	5
0290	23	*79 65 635*		NLS	2	Nut	Mutter	5
0300	24	82 28 702			1	Seal	Tätning	6
0310	25	71 62 308			1	Plug	Plugg	5
0320	26	82 09 676		LH	1	Spring support	Fjäderstöd	6
0330	26	82 09 884		RH	1	Spring support	Fjäderstöd	6
0340	27	82 62 974			1	Protecting moulding	Skyddslist	6
0350	28	*84 97 471*		US NLS - USE 8564973	1	Protecting moulding	Skyddslist	6
0360	29	41 01 044		SN, CV	1	Rear section	Bakdel	5
0370	30	69 28 998		SN, CV (9220849)	1	Support	Stöd	5
0380	31	92 31 804		SN, CV	2	Seal	Tätning	6
0390	32	92 31 812		SN, CV	2	Washer	Bricka	6
0400	33	92 23 025		SN, CV	1	Seal	Tätning	6
0410	34	92 23 066		SN, CV	1	Seal	Tätning	6
0420	35	92 23 074		SN, CV	4	Screw	Skruv	5
0430	36	92 20 880		SN, CV	4	Rivet	Nit	5
0440	37	73 99 454		SN, CV	4	Nut	Mutter	5
0450	38	82 86 296		SN, CV	2	Screw	Skruv	5
0460	39	80 59 578		SN, CV	4	Screw	Skruv	5
0470	40	79 71 658		SN, CV	8	Nut	Mutter	5
0480	41	92 23 991		SN, CV	2	Bushing	Bussning	5
0490	42	71 63 066		SN, CV	1	Plug	Plugg	5
0500	44	69 19 492			1	Bracket	Hållare	6
0510	45	92 20 971		LH, SN, CV	1	Corner panel	Hörnplåt	5
0520	45	92 20 989		RH, SN, CV	1	Corner panel	Hörnplåt	5
0530	45A	92 22 977		3)	1	Support	Stöd	6
0540	46	92 86 931		LH	1	Stay	Stag	6
0550	46	92 86 949		RH	1	Stay	Stag	6
0560	47	92 31 168		US	1	Plug	Plugg	5
0570	48	92 92 699			2	Screw	Skruv	5
0580	49	92 28 131		-1990	1	Bracket	Hållare	6
0590	49	41 54 571		1991-	1	Bracket	Hållare	6
0600	50			See page 8A-089, 4-D18	1	Air outlet	Luftutsläpp	
0610	51			See page 8A-089, 4-D18	6	Rivet	Nit	

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-A12

Rear floor
Bakre golv

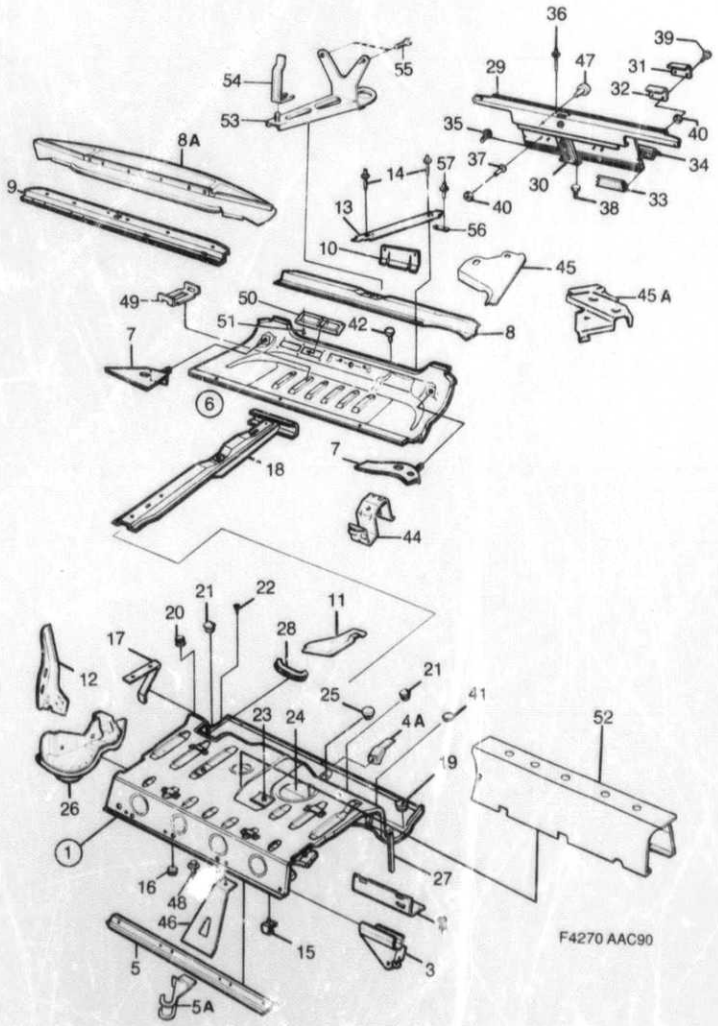

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	52	69 33 626		3) CV	1	Torsion box	Torsionslåda	6
0630	53	69 38 716		3)	1	Towing eye	Dragögla	
0640	54	69 57 443			1	Stay	Stag	6
0650	55	73 98 761			2	Screw	Skruv	5
0660	56	69 44 284			1	Spacer	Mellanlägg	6
0670	57	94 49 752			2	Rivet	Nit	5

3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-A14

Roof
Tak

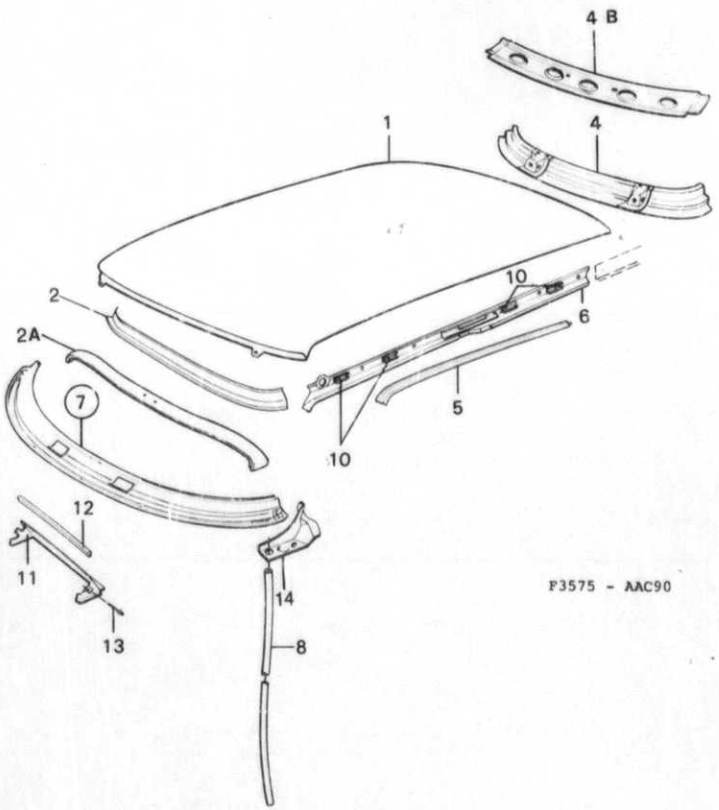

F3575 - AAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	82 74 425			1	Plate	Plåt	5
0040	2	69 26 307		2)	1	Beam	Balk	5
0050	2A	69 33 527		2) CV	1	Beam	Balk	6
0062	4	92 29 949		3)	1	Beam	Balk	6
0065	4B	92 92 442		3) 2SN	1	Beam	Balk	6
0070	4B	92 20 864		3) 4SN	1	Beam	Balk	6
0080	5	76 00 729		LH	1	Water channel	Takränna	5
0100	5	76 00 737		RH	1	Water channel	Takränna	5
0120	5	76 01 313		LH, 5CK, 4SN	1	Water channel	Takränna	5
0140	5	76 01 321		RH, 5CK, 4SN	1	Water channel	Takränna	5
0160	6	*82 09 926*		LH, 3CK, 2SN	1	Beam	Balk	6
0180	6	*82 09 934*		RH, 3CK, 2SN	1	Beam	Balk	6
0190	6	69 27 370		LH, 3CK	1	Beam	Balk	6
0200	6	69 27 388		RH, 3CK	1	Beam	Balk	6
0240	6	82 49 872		LH, 5CK, 4SN	1	Beam	Balk	6
0260	6	82 49 880		RH, 5CK, 4SN	1	Beam	Balk	6
0310	7	92 23 926			1	Beam	Balk	6
0320	8	41 54 258		184)	2	Draining hose	Dräneringsslang	5
0340	10	82 09 967			4	Attaching profile	Fästprofil	6
0360	11	82 28 843			1	Plate	Plåt	5
0380	12	82 33 686			1	Sealing strip	Tätningslist	5
0400	13	79 61 691			2	Rivet	Nit	5
0410	14	92 32 778		LH	1	Reinforcement	Förstärkning	6
0420		92 32 786		RH	1	Reinforcement	Förstärkning	6

2. Front Främre
3. Rear Bakre
184. Ch. M7013469-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Car body

4-A16

Sun roof
Hand-operated

Karosskrov

Soltak
Handmanövrerat

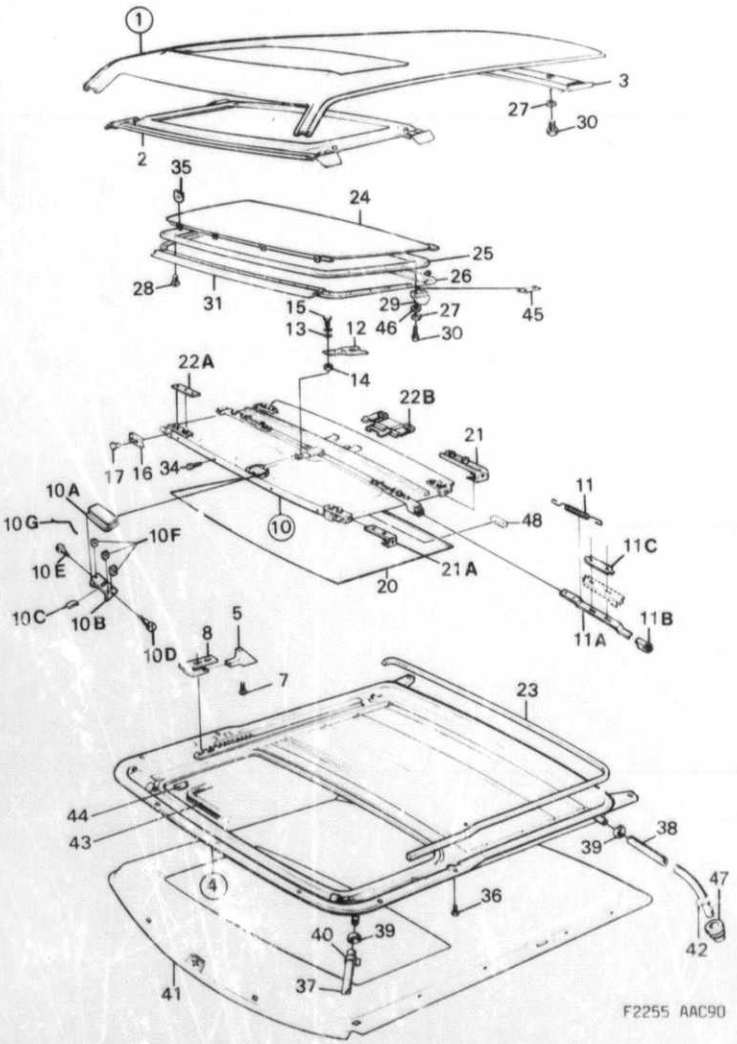

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	82 74 433			1	Plate	Plåt	5
0030	2	82 83 590			1	.Attachment frame	.Insättningsram	6
0040	3	82 83 608			1	.Rib	.Spant	6
0060	4	69 17 223			1	Frame	Ram	6
0070	5	92 93 010			2	.Slide dog	.Glidklack	5
0080	7	82 49 633			2	.Screw	.Skruv	5
0090	8	82 48 270		LH	1	.Spring	.Fjäder	5
0100	8	82 48 288		RH	1	.Spring	.Fjäder	5
0135	10	69 75 064			1	Panel	Panel	5
0150	10A	69 17 322			1	.Cover	.Kåpa	6
0170	10B	69 17 330			1	.Handle	.Handtag	6
0180	10C	82 48 502			1	.Spring	.Fjäder	5
0190	10D	82 48 601		2)	2	.Screw	.Skruv	5
0200	10E	82 48 726		3)	1	.Screw	.Skruv	5
0210	10F	82 49 757			3	.Nut	.Mutter	5
0220	10G	82 48 494			2	.Clamp	.Klämma	5
0230	11	82 48 577			2	.Spring	.Fjäder	5
0240	11A	82 48 775			2	.Catch	.Spärr	5
0250	11B	82 48 437			2	.Slide dog	.Glidklack	5
0260	11C	82 88 599			2	.Striker plate	.Låsbleck	5
0270	12	82 48 585			1	.Lock arm	.Låsarm	6
0280	13	*82 49 724*		NLS	6	.Washer	.Bricka	5
0290	14	82 49 682			2	.Nut	.Mutter	5
0300	15	*82 49 740*		NLS	2	.Screw	.Skruv	5
0320	16	69 17 306			2	.Stop	.Stopp	6
0330	17	82 48 593			4	.Rivet	.Nit	5
0390	20	69 75 031			1	.Upholstery	.Klädsel	6
0410	21	69 37 452		3)	2	.Support	.Stöd	5
0430	21A	69 37 429		2)	2	.Support	.Stöd	5
0450	22A	82 86 429			2	.Washer	.Bricka	5
0460	22B	82 88 193			2	.Spring	.Fjäder	5
0470	23	82 49 526			1	Sealing strip	Tätningslist	5
0490	24	92 89 471			1	Hatch	Lucka	5
0520	25	92 89 505			1	Sealing strip	Tätningslist	5
0550	26	69 17 348			1	Bracket	Hållare	5
0560	27	79 15 549			4	Star washer	Taggbricka	5
0580	28	79 39 804			23	Screw	Skruv	5
0590	29	82 48 619			2	Bracket	Konsol	5
0610	30	80 59 230			4	Screw	Skruv	5
0640	31	69 17 355			1	Bracket	Hållare	5
0690	34	*79 22 289*		NLS - USE 7965684	4	Screw	Skruv	5
0700	35	92 33 537			4	Spacer	Mellanlägg	5
0710	36	*79 71 757*		NLS - USE 7528953	9	Screw	Skruv	5
0720	37	92 23 736		2) -1990	2	Draining hose	Dräneringsslang	5
0722	37	40 98 844		2) 1991-	2	Draining hose	Dräneringsslang	5
0740	38	92 23 744		3) 3CK	2	Draining hose	Dräneringsslang	5
0760	38	92 23 751		3) 5CK	2	Draining hose	Dräneringsslang	5
0780	38	92 27 554		3) SN	2	Draining hose	Dräneringsslang	5
0800	39	79 70 056			4	Hose clamp	Slangklamma	5
0810	40	92 28 149			2	Clip	Clips	5
0820	40	92 28 156		SN	2	Clip	Clips	5
0830	41			See page 6B-141, 5-F22	1	Headlining	Takklädsel	
0840	42	82 66 843			2	Hose clamp	Slangklämma	5
0870	43	98 36 412		87)	1	Strip	List	6
0875	43	98 36 412		88), 2SN	1	Strip	List	6
0877	43	40 57 089		88), 4SN, 3CK, 5CK	1	Strip	List	6
0880	44	94 26 420		87)	4	Clip	Clips	5
0890	45	*80 29 936*		-1992 NLS - USE 9166356	X	Washer	Bricka	5
0895	45	91 66 356		1993-	X	Washer	Bricka	5


2. Front Främre
3. Rear Bakre
87. Ch. -L3004573, -L5001160, -L7011119
88. Ch. L3004574-, L5001161-, L7011120-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

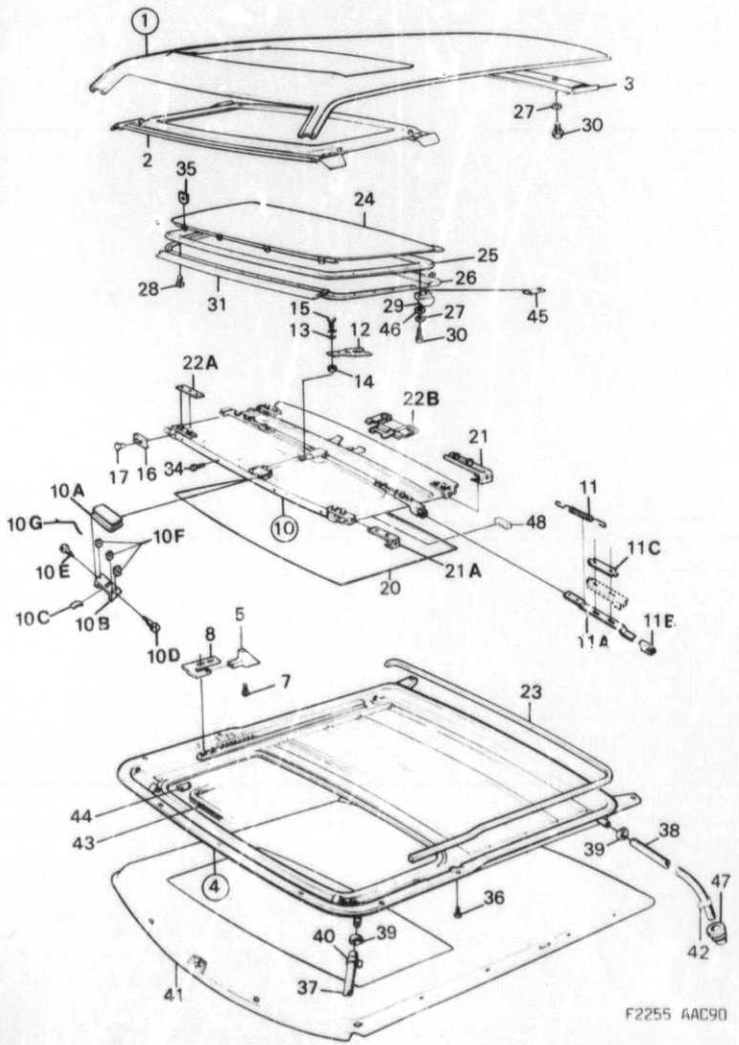

Car body

4-A18

Sun roof
Hand-operated

Karosskrov

Soltak
Handmanövrerat


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0900	46	*80 29 936*		-1992, ALT. TO 8267932	X	Washer	Bricka	5
0900				NLS - USE 9166356				
0905	46	91 66 356		1993-	X	Washer	Bricka	5
0910	47	92 23 991			2	Bushing	Bussning	5
0920	48	69 37 759			2	Absorber	Dämpare	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

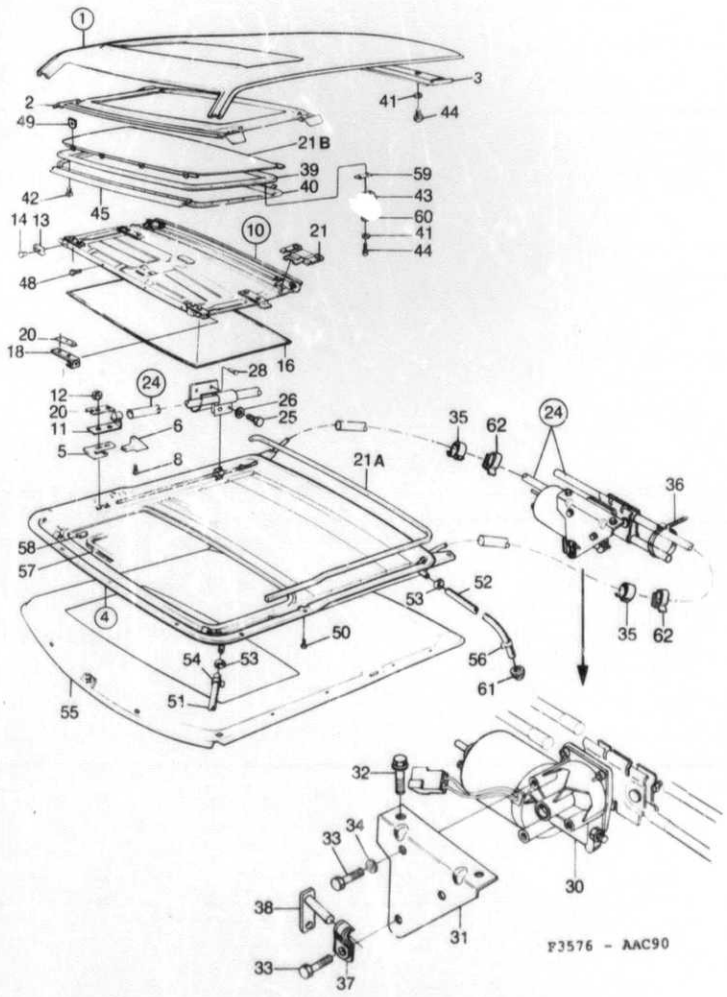

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	82 74 433			1	Plate	Plåt	5
0040	2	82 83 590			1	.Attachment frame	.Insättningsram	6
0060	3	82 83 608			1	.Rib	.Spant	6
0085	4	69 17 389			1	Frame	Ram	6
0124	5	82 48 270		LH	1	.Spring	.Fjäder	5
0125	5	82 48 288		RH	1	.Spring	.Fjäder	5
0130	6	*92 92 913*		NLS - USE 9293010	2	.Slide dog	.Glidklack	5
0150	8	82 49 633			2	.Screw	.Skruv	5
0210	10	69 75 015			1	Panel	Panel	5
0220	11	92 80 736			2	.Connector	.Anslutning	5
0240	12	82 88 029			4	.Nut	.Mutter	5
0265	13	69 17 306			2	.Stop	.Stopp	6
0280	14	92 80 835			4	.Rivet	.Nit	5
0330	16	69 75 031			1	.Upholstery	.Klädsel	6
0360	18	69 37 429			2	.Support	.Stöd	5
0380	19	82 88 029			4	.Nut	.Mutter	5
0400	20	82 86 429			2	.Washer	.Bricka	5
0420	21	82 88 193			2	.Spring	.Fjäder	5
0422	21A	82 49 526			1	Sealing strip	Tätningslist	5
0430	21B	92 89 471			1	Hatch	Lucka	5
0480	24	92 37 439		LH	1	Cable	Wire	4
0520	24	92 37 447		RH	1	Cable	Wire	4
0560	25	92 81 072			4	.Screw	.Skruv	5
0580	26	79 15 549			4	.Star washer	.Taggbricka	5
0620	28	92 81 098			4	Rivet	Nit	5
0660	30	*40 92 862*		246) NLS - USE 4306007, 8019739	1	Electric motor	Elmotor	4
0661	30	43 06 007		247)	1	Electric motor	Elmotor	4
0680	31	76 51 896			1	Bracket	Fäste	5
0700	32	*82 67 205*		NLS - USE 7972466	2	Screw	Skruv	5
0720	33	92 38 148		246)	3	Screw	Skruv	5
0721	33	80 19 739		247)	3	Screw	Skruv	5
0740	34	92 89 604			3	Spacer sleeve	Distanshylsa	5
0760	35	71 08 491			2	Clamp	Klammer	5
0780	36	79 71 880			2	Tensioning band	Spännband	4
0800	37	83 71 551			1	Tube clamp	Rörklamma	
0820	38	92 82 609			1	Crank	Vev	5
0850	39	92 89 505			1	Sealing strip	Tätningslist	5
0875	40	69 17 348			1	Bracket	Hållare	5
0880	41	79 15 549			4	Star washer	Taggbricka	5
0910	42	79 39 804			23	Screw	Skruv	5
0920	43	82 48 619			2	Bracket	Konsol	5
0950	44	80 59 230			4	Screw	Skruv	5
0972	45	69 17 355			1	Bracket	Hållare	5
1020	48	*79 22 289*		NLS - USE 7965684	4	Screw	Skruv	5
1040	49	*82 88 243*		NLS - USE 9297458	4	Spacer	Mellanlägg	4
1060	50	*79 71 757*		NLS - USE 7528953	9	Screw	Skruv	5
1080	51	92 23 736		2) -1990	2	Draining hose	Dräneringsslang	5
1090	51	40 98 844		2) 1991-	2	Draining hose	Dräneringsslang	5
1120	52	92 23 744		3) 3CK	2	Draining hose	Dräneringsslang	5
1160	52	92 23 751		3) 5CK	2	Draining hose	Dräneringsslang	5
1200	52	92 27 554		3) SN	2	Draining hose	Dräneringsslang	5
1240	53	79 70 056			4	Hose clamp	Slangklamma	5
1260	54	92 28 149			2	Clip	Clips	5
1280	54	92 28 156		SN	2	Clip	Clips	5
1320	55			See page 8B-141, 5-F22	1	Headlining	Takklädsel	
1380	56	82 66 843			2	Hose clamp	Slangklämma	5
1410	57	98 36 412			1	Strip	List	6
1420	58	94 26 420			4	Clip	Clips	5

2. Front Främre
3. Rear Bakre
246. Ch. -N2012325
247. Ch. N2012326-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-A22

Sun roof
Electrically operated

Soltak
El-manövrerat

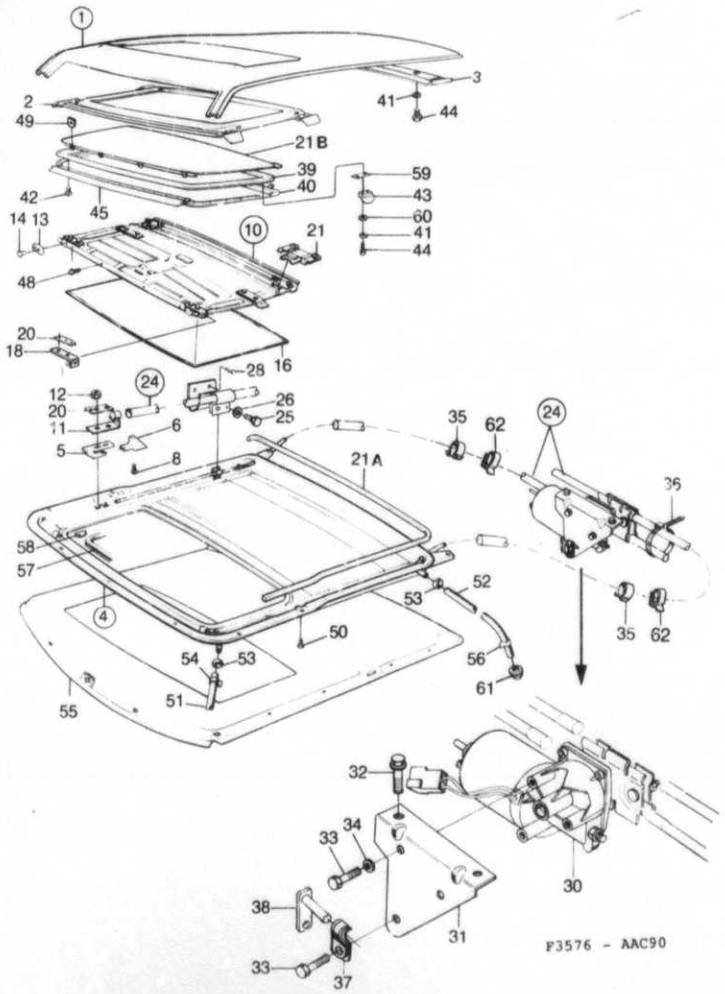

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1440	59	*80 29 936*		-1992 NLS - USE 9166356	X	Washer	Bricka	5
1445	59	91 66 356		1993-	X	Washer	Bricka	5
1460	60	*80 29 936*		-1992, ALT. TO 8267932 NLS - USE 9166356	X	Washer	Bricka	5
1465	60	91 66 356		1993-	X	Washer	Bricka	5
1480	61	92 23 991			2	Bushing	Bussning	5
1490	62	79 58 861		183)	2	Clamp	Klammer	5


183. Ch. M5005514-, M7013689-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

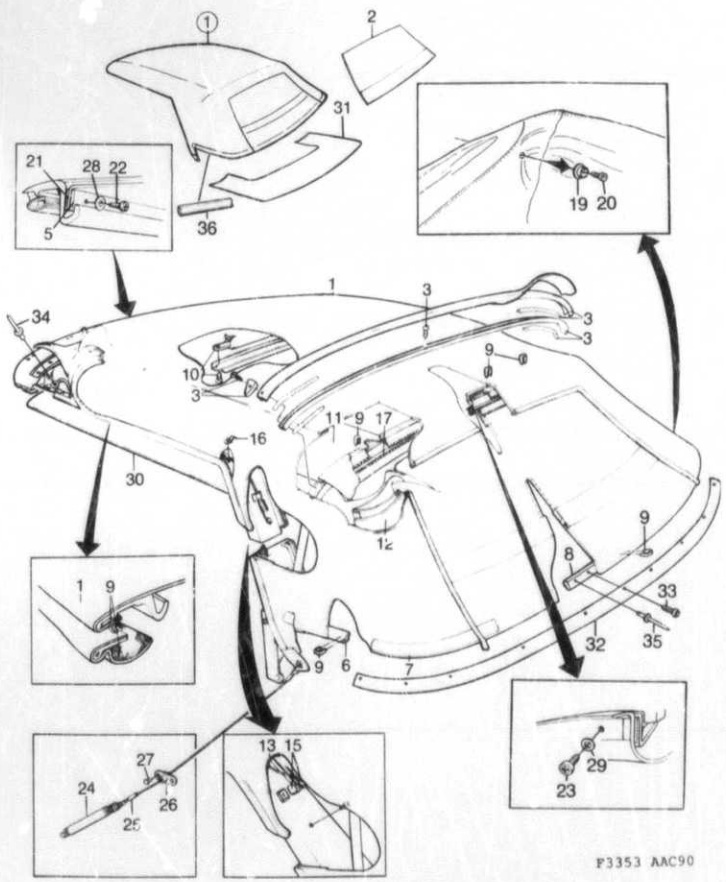

F3353 AAC90

Car body
4-A24
Folding top Convertible

Karosskrov
Sufflett Cabriolet

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		69 99 536		110) HAPPICH	1	Roof	Tak	9
0020		41 54 852		80) HAPPICH	1	Roof	Tak	9
0030		41 54 928		210) HAPPICH	1	Roof	Tak	9
0040	1	*69 97 209*		110) NLS - USE 6952550, 6952576, 6952592	1	.Headlining	.Taktyg	5
0050	1	69 52 550		110) WITHOUT GLASS	1	..Headlining	..Taktyg	5
0060	1	44 07 300		80) WITHOUT GLASS	1	..Headlining	..Taktyg	9
0070	1	44 07 276		210) WITHOUT GLASS	1	..Headlining	..Taktyg	9
0080	2	69 52 576		110)	1	..Rear window	..Bakruta	4
0090	2	41 54 902		80)	1	..Rear window	..Bakruta	4
0100	2	41 54 977		210)	1	..Rear window	..Bakruta	4
0110	3	69 52 592		110)	1	..Decor strip	..Dekorlist	5
0120	3	44 07 318		80)	1	..Decor strip	..Dekorlist	5
0130	3	44 07 284		210)	1	..Decor strip	..Dekorlist	5
0140	5	69 51 719		2)	1	.Support	.Stöd	6
0150	5	69 51 750		CENTRE	2	.Support	.Stöd	6
0160	5	69 51 727		3)	1	.Support	.Stöd	6
0170	6	69 51 917		SIDE, LH	1	.Strip	.List	5
0180	6	69 51 065		SIDE, RH	1	.Strip	.List	5
0190	7	69 51 099		CORNER, LH	1	.Strip	.List	5
0200	7	69 51 081		CORNER, RH	1	.Strip	.List	5
0210	8	69 51 040		3)	1	.Strip	.List	5
0220	9	69 34 285		169)	X	.Staple	.Häftklammer	5
0230	9	69 35 712		169)	X	.Staple	.Häftklammer	5
0240	10	69 50 570			1	.Retainer	.Hållare	5
0250		69 52 451		1)	5	..Screw	..Skruv	5
0260	11	*69 52 956*		-1992, LH NLS - USE 4407375	1	.Base	.Underlägg	5
0270	11	*69 52 949*		-1992, RH NLS - USE 4407375	1	.Base	.Underlägg	5
0275	11	44 07 375		1993-	2	.Base	.Underlägg	5
0280	12	69 53 798		3) LH	1	.Base	.Underlägg	5
0290	12	69 53 780		3) RH	1	.Base	.Underlägg	5
0300	13	69 51 6[illegible]			2	.Cable	.Wire	5
0310	15	69 51 669			2	.Cable anchorage	.Wirefäste	5
0320	16	83 30 917			4	.Clip	.Clips	5
0330	17	69 52 634			1	.Zip fastener	.Dragkedja	5
0340	19	71 46 232			2	.Bracket	.Fäste	5
0350	20	77 22 206			2	.Screw	.Skruv	5
0360	21	81 06 142		2400 MM	1	.Tape	.Tape	5
0370	22	84 40 068			7	.Screw	.Skruv	5
0380	23	71 75 758			7	.Screw	.Skruv	5
0390	24	69 95 252			2	.Tension spring	.Dragfjäder	5
0400	25	69 95 260			2	.Cable	.Wire	5
0410	26	69 95 278			2	.Grommet	.Genomföring	5
0420	27	79 61 642			1	.Rivet	.Nit	5
0430	28	79 73 894			7	.Washer	.Bricka	5
0440	29	79 74 249			1	.Washer	.Bricka	5
0450	30	69 51 701			1	Headlining	Innertak	6
0460	31	69 97 738		NOT AU, CA	1	Cloth	Duk	5
0470	31	69 97 746		AU, CA	1	Cloth	Duk	5
0480	32	98 83 380		107)	1	Strip	List	5
0490	32	41 55 883		108)	1	Strip	List	5
0500	33	98 24 574			12	Screw	Skruv	5


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre
80. Blue Blå
107. Ch. -L7014288
108. Ch. L7014289-
110. Black Svart
169. Package with 5000 staples Förpackning med 5000 häftklammer
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

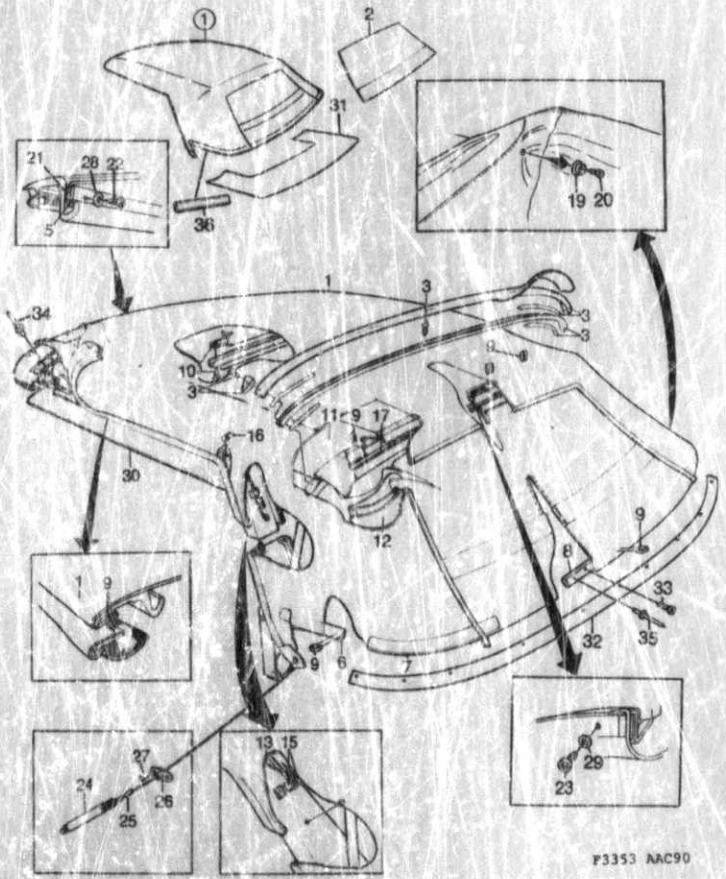

0230 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510 34	69 53 822			2	Rivet	Nit	3
0520 35	79 77 622			29	Rivet	Nit	5
0530 36	41 53 003			2	Retainer	Hållare	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B04

Rail front, rear and side
200) Convertible

Skenor,främre,bakre,sido
200) Cabriolet

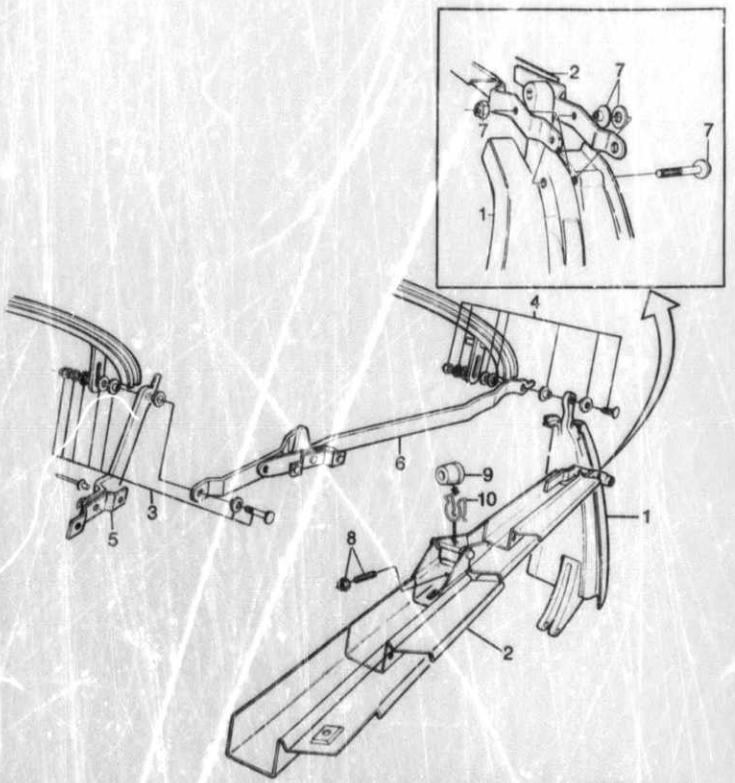

0235	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		69 99 536		110) HAPPICH	1	Roof	Tak	9
0020		41 54 852		80) HAPPICH	1	Roof	Tak	9
0030		41 54 928		210) HAPPICH	1	Roof	Tak	9
0040								
0050	1	69 50 034		3) LH	1	.Beam	.Balk	5
0060	1	69 50 026		3) RH	1	.Beam	.Balk	5
0070	2	69 50 497		2) CENTRE, LH	1	.Beam	.Balk	5
0080	2	69 50 489		2) CENTRE, RH	1	.Beam	.Balk	5
0090	3	69 50 679		BOW NO. 2	2	.Mounting kit	.Monteringssats	5
0100	4	69 50 638		BOW NO. 3	2	.Mounting kit	.Monteringssats	5
0110		69 52 352		1)	1	..Bushing	..Bussning	
0120		69 52 360		1)	2	..Washer	..Bricka	
0130		69 52 378		1)	1	..Washer	..Bricka	
0140		69 52 386		1)	1	..Nut	..Mutter	
0150		69 52 410		1,96)	1	..Screw	..Skruv	
0160		69 52 345		1,97)	1	..Screw	..Skruv	5
0170		69 52 428		1,96)	2	..Bushing	..Bussning	
0180		69 53 103		1,97)	1	..Bushing	..Bussning	5
0190	5	69 50 133		2) LH	1	.Link	.Länk	5
0200	5	69 50 125		2) RH	1	.Link	.Länk	5
0210	6	69 51 321		CENTRE, LH	1	.Link	.Länk	5
0220	6	69 51 313		CENTRE, RH	1	.Link	.Länk	5
0230	7	69 50 646			2	.Mounting kit	.Monteringssats	5
0240		69 52 022		1)	1	..Lock nut	..Låsmutter	
0250		69 52 071		1)	1	..Bushing	..Bussning	
0260		69 52 394		1)	1	..Screw	..Skruv	
0270		69 52 402		1)	1	..Washer	..Bricka	
0280		*69 53 517*		1) NLS	3	..Bushing	..Bussning	5
0290	8	69 51 305			2	.Adjustment screw	.Justerskruv	5
0300		69 52 436		1)	1	..Nut	..Mutter	
0310		69 52 444		1)	1	..Screw	..Skruv	
0320	9	75 13 724		175)	2	.Rubber bushing	.Gummibussning	4
0330	10	41 53 839		175)	2	.Clamp	.Klammer	5


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bak
80. Blue Blå
96. Part of: 6950679 Ingår i: 6950679
97. Part of: 6950638 Ingår i: 6950638
110. Black Svart
175. Ch. M7006668-
200. Ch. -M7018384
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

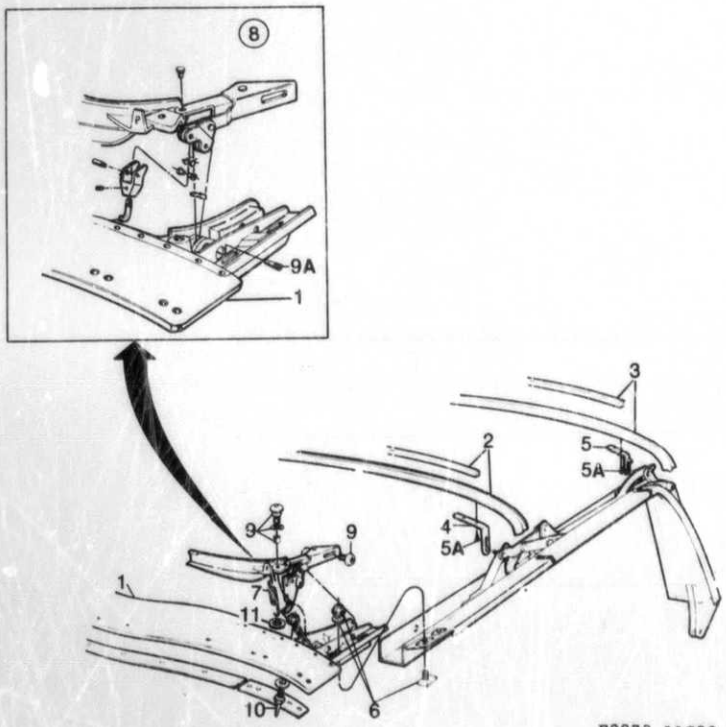

F2873 AAC90

0240	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		69 99 536		110) HAPPICH	1	Roof	Tak	9
0020		41 54 852		80) HAPPICH	1	Roof	Tak	9
0030		41 54 928		210) HAPPICH	1	Roof	Tak	9
0040	1	69 52 758		NUMBER 1	1	.Bow	.Båge	5
0050	2	69 50 166		NUMBER 2	1	.Bow	.Båge	5
0060	3	69 50 521		NUMBER 3	1	.Bow	.Båge	5
0070	4	69 50 042		BOW NO. 2	2	.Bracket	.Fäste	5
0080	5	69 50 141		BOW NO. 3	2	.Bracket	.Fäste	5
0090	5A	69 50 604			2	.Attaching screw	.Fästskruv	5
0100		69 52 121		1)	13	..Screw	..Skruv	5
0110	6	69 50 661		BOW NO. 1	2	.Mounting kit	.Monteringssats	5
0120		69 52 188		1)	1	..Screw	..Skruv	
0130		69 52 196		1)	1	..Washer	..Bricka	
0140		69 52 204		1)	1	..Nut	..Mutter	
0150	7	69 53 921			2	.Spring	.Fjäder	5
0160	8	69 53 319		LH	1	.Lock	.Lås	5
0170	8	69 53 301		RH	1	.Lock	.Lås	5
0180		69 52 246		1)	1	..Hook	..Krok	
0190		69 52 253		1)	1	..Screw	..Skruv	
0200		69 52 261		1)	1	..Pin	..Axeltapp	
0210		69 52 279		1)	1	..Spring	..Fjäder	
0220		69 52 329		1)	1	..Rivet	..Nit	
0230		69 52 287		1)	1	..Bushing	..Bussning	5
0240		69 52 295		1)	1	..Hook attachment	..Krokfäste	
0250		69 52 170			1	..Bolt	..Bult	5
0260	9	69 50 653			2	.Mounting kit	.Monteringssats	5
0270		69 52 139		1)	1	..Washer	..Bricka	
0280		69 52 147		1)	1	..Screw	..Skruv	
0290		69 52 154		1)	1	..Bushing	..Bussning	
0300		69 52 162		1)	1	..Screw	..Skruv	
0310	9A	69 52 170			2	.Bolt	.Bult	5
0320	10	69 52 832			2	.Locating pin	.Styrpinne	5
0330		69 52 196		1)	1	..Washer	..Bricka	5
0340		*69 52 733*		1) NLS	1	..Locating pin	..Styrpinne	5
0350		*69 52 824*		1) NLS	1	..Nut	..Mutter	5
0360	11	69 96 979			2	Washer	Bricka	5
0370								
0380		69 52 618		98)	2	Lock control	Låsreglage	5
0390		69 52 246		1)	1	.Hook	.Krok	
0400		69 52 253		1)	1	.Screw	.Skruv	
0410		69 52 261		1)	1	.Pin	.Axeltapp	
0420		69 52 279		1)	1	.Spring	.Fjäder	
0430		69 52 287		1)	1	.Bushing	.Bussning	5
0440		69 52 295		1)	1	.Hook attachment	.Krokfäste	
0450								
0460		69 51 271		98)	2	Tensioner	Spänndon	5
0470		69 52 246		1)	1	.Hook	.Krok	
0480		69 52 253		1)	1	.Screw	.Skruv	

1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
98. Part of: 6953319, 6953301 Ingår i: 6953319, 6953301
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B08

Rear rail and bow 4 200) Convertible

Bakre skena och båge 4 200) Cabriolet

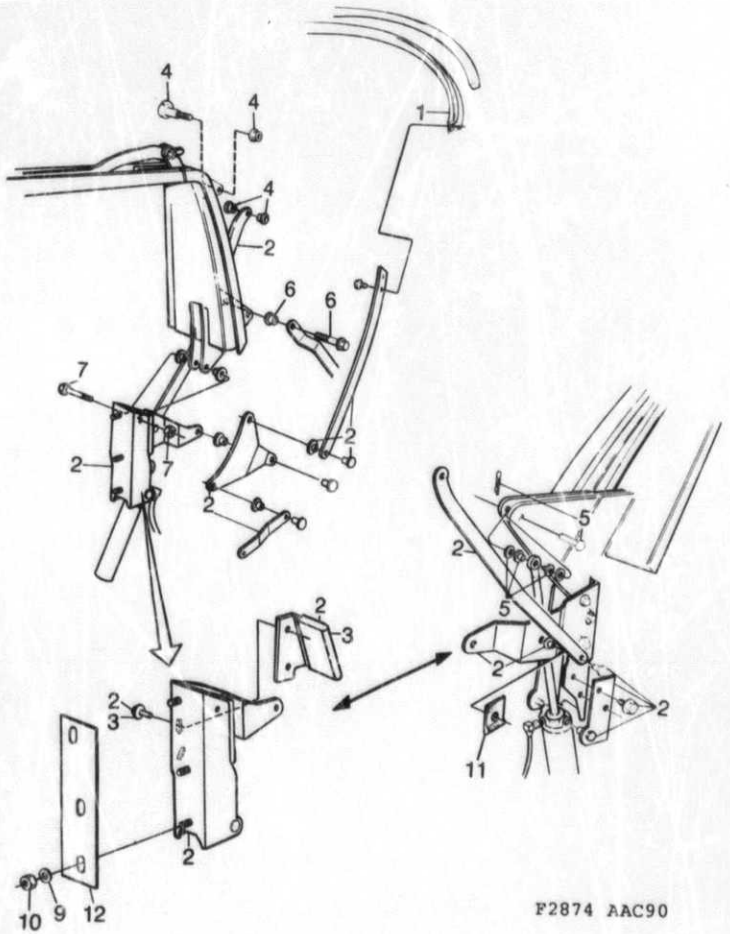

0245	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		69 99 536		110) HAPPICH	1	Roof	Tak	9
0020		41 54 852		80) HAPPICH	1	Roof	Tak	9
0030		41 54 928		210) HAPPICH	1	Roof	Tak	9
0040	1	69 50 158		NUMBER 4	1	.Bow	.Båge	5
0050	2	69 50 513		LH	1	.Support	.Fästkonsol	5
0060	2	69 50 505		RH	1	.Support	.Fästkonsol	5
0070	3	69 50 547		LH	1	.Stop	.Stopp	5
0080		69 52 105		1), LH	1	..Stop lug	..Stoppklack	
0090		69 52 113		1)	2	..Screw	..Skruv	
0100	3	69 50 539		RH	1	.Stop	.Stopp	5
0110		69 52 097		1), RH	1	..Stop lug	..Stoppklack	
0120		69 52 113		1)	2	..Screw	..Skruv	
0130	4	69 50 588		SIDE RAIL	2	.Adjustment screw	.Justerskruv	5
0140		69 52 006		1)	1	..Screw	..Skruv	
0150		69 52 014		1)	2	..Bushing	..Bussning	5
0160		69 52 022		1)	1	..Lock nut	..Låsmutter	
0170	5	69 50 596		HYDRAULIC CYLINDER	2	.Mounting kit	.Monteringssats	5
0180		69 52 030		1)	1	..Shaft	..Axel	5
0190		69 52 048		1)	2	..Bushing	..Bussning	5
0200		92 63 393		1)	2	..Seal	..Tätning	5
0210		92 93 523		1)	1	.Lock needle	.Låsnål	5
0220		93 65 917		1)	1	.Rubber bushing	.Gummibussning	4
0230	6	69 50 612			2	.Mounting kit	.Monteringssats	5
0240		69 52 063		1)	1	..Screw	..Skruv	
0250		69 52 071		1)	1	..Bushing	..Bussning	
0260	7	69 50 620			2	.Mounting kit	.Monteringssats	5
0270		69 52 022		1)	1	..Lock nut	..Låsmutter	
0280		69 52 089		1)	1	..Screw	..Skruv	
0290	9	73 11 772			6	.Washer	.Bricka	5
0300	10	79 71 922			6	.Nut	.Mutter	3
0310	11	92 63 393			2	Seal	Tätning	5
0320	12	69 99 981			X	Adjusting plate	Justerplåt	5

1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
110. Black Svart
200. Ch. -M7018384
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B10

Rails and bow 4
201) Convertible

Skenor och båge 4
201) Cabriolet

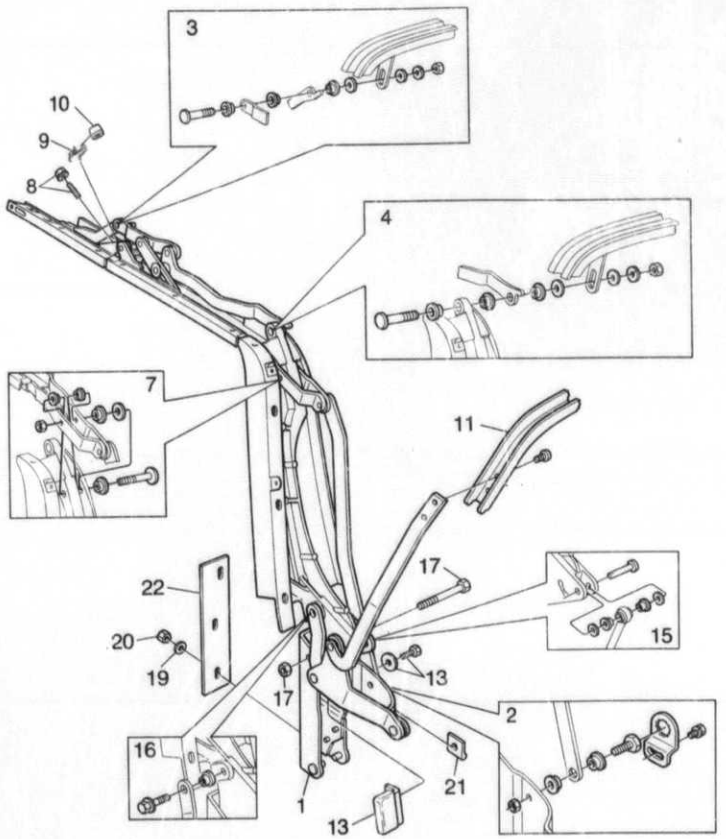

F3746 - AAC90

0247	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		69 99 536		110) HAPPICH	1	Roof	Tak	9
0020		41 54 852		80) HAPPICH	1	Roof	Tak	9
0030		41 54 928		210) HAPPICH	1	Roof	Tak	9
0040								
0050	1	41 54 134		LH	1	.Rail	.Skena	6
0060	1	41 54 126		RH	1	.Rail	.Skena	6
0070	2	41 54 597			1	.Adjustment screw	.Justerskruv	5
0080								
0090	3	69 50 679		BOW NO. 2	2	.Mounting kit	.Monteringssats	5
0100	4	69 50 638		BOW NO. 3	2	.Mounting kit	.Monteringssats	5
0110		69 52 352		1)	1	..Bushing	..Bussning	
0120		69 52 360		1)	2	..Washer	..Bricka	
0130		69 52 378		1)	1	..Washer	..Bricka	
0140		69 52 386		1)	1	..Nut	..Mutter	
0150		69 52 410		1,96)	1	..Screw	..Skruv	
0160		69 52 345		1,97)	1	..Screw	..Skruv	5
0170		69 52 428		1,96)	2	..Bushing	..Bussning	
0180		69 53 103		1,97)	1	..Bushing	..Bussning	5
0190	7	69 50 646			2	.Mounting kit	.Monteringssats	5
0200		69 52 022		1)	1	..Lock nut	..Låsmutter	
0210		69 52 071		1)	1	..Bushing	..Bussning	
0220		69 52 394		1)	1	..Screw	..Skruv	
0230		69 52 402		1)	1	..Washer	..Bricka	
0240		*69 53 517*		1) NLS	3	..Bushing	..Bussning	5
0250	8	69 51 305			2	.Adjustment screw	.Justerskruv	5
0260		69 52 436		1)	1	..Nut	..Mutter	
0270		69 52 444		1)	1	..Screw	..Skruv	
0280	9	41 53 839			2	.Clamp	.Klammer	5
0290	10	75 13 724			2	.Rubber bushing	.Gummibussning	4
0300	11	69 50 153		NUMBER 4	1	.Bow	.Båge	5
0310	13	69 50 547		LH	1	.Stop	.Stopp	5
0320		69 52 105		1) LH	1	..Stop lug	..Stoppklack	
0330		69 52 113		1)	1	..Screw	..Skruv	
0340	13	69 50 539		RH	1	.Stop	.Stopp	5
0350		69 52 097		1) RH	1	..Stop lug	..Stoppklack	
0360		69 52 113		1)	1	..Screw	..Skruv	
0370	15	69 50 596		HYDRAULIC CYLINDER	2	.Mounting kit	.Monteringssats	5
0380		69 52 030		1)	1	..Shaft	..Axel	5
0390		69 52 048		1)	2	..Bushing	..Bussning	5
0400		92 63 393		1)	2	..Seal	..Tätning	5
0410		92 93 523		1)	1	.Lock needle	.Låsnål	5
0420		93 65 917		1)	1	.Rubber bushing	.Gummibussning	4
0430	16	69 50 612			2	.Mounting kit	.Monteringssats	5
0440		69 52 063		1)	1	..Screw	..Skruv	
0450		69 52 071		1)	1	..Bushing	..Bussning	
0460	17	69 50 620			2	.Mounting kit	.Monteringssats	5
0470		69 52 022		1)	1	..Lock nut	..Låsmutter	
0480		69 52 089		1)	1	..Screw	..Skruv	
0490	19	73 11 772			6	.Washer	.Bricka	5
0500	20	79 71 922			6	.Nut	.Mutter	3
0510	21	92 63 393			2	Seal	Tätning	5
0520	22	69 99 981			X	Adjusting plate	Justerplåt	5

1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
96. Part of: 6950679 Ingår i: 6950679
97. Part of: 6950638 Ingår i: 6950638
110. Black Svart
201. Ch. M7018385--
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B12

Hydraulic system
Convertible

Hydrauliksystem
Cabriolet

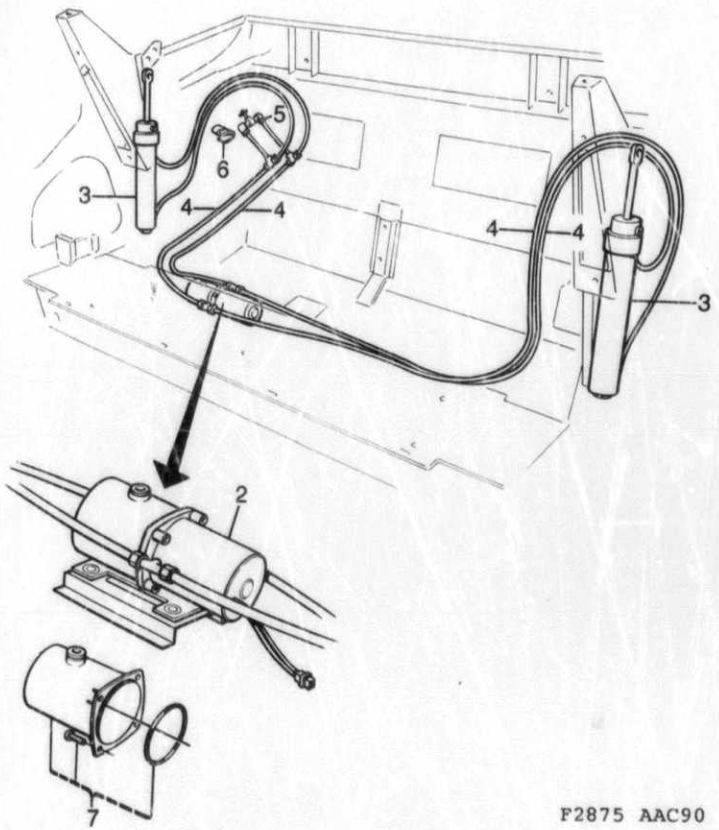

F2875 AAC90

0248	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0050	2	*69 52 808*		119) NLS - USE 4153052	1	Engine	Motor	5
0060	2	41 53 052		120)	1	Engine	Motor	5
0072	3	69 53 905			2	Hydraulic cylinder	Hydraulcylinder	5
0090	4	69 52 782		LH	1	Hose	Slang	5
0110	4	69 52 774		RH	1	Hose	Slang	5
0132	5	69 53 913			1	Valve	Ventil	5
0140	6	79 51 783			2	Clamp	Klammer	5
0160	7	41 53 805			1	Repair kit	Reparationssats	9

119. Ch. -L7021956
120. Ch. L7021957-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B14

Cowl plate
Wheel housing, front

Torpedplåt
Hjulhus, främre

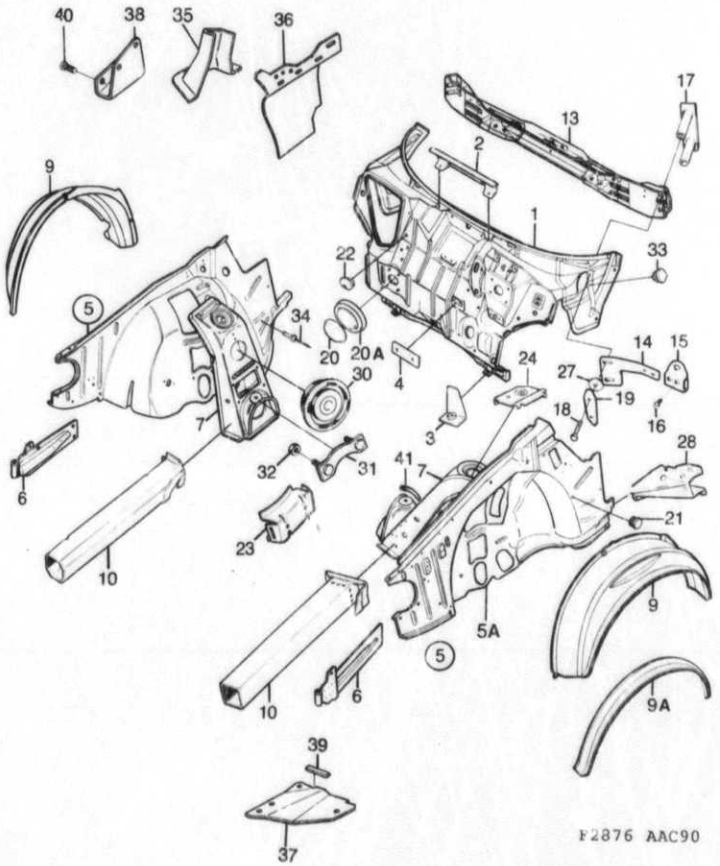

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	82 74 219			1	Plate	Plåt	6
0040	2	40 98 398			1	Bracket	Fäste	5
0060	3	*82 74 235*		NLS	1	Elbow	Vinkel	5
0080	4	*82 74 243*		NLS	1	Washer	Bricka	5
0161	5	69 25 572		LH	1	Wheel housing	Hjulhus	5
0163	5	69 25 580		RH	1	Wheel housing	Hjulhus	5
0174	5A	69 10 913		LH	1	.Wheel housing plate	.Hjulhusplåt	5
0176	5A	69 10 921		RH	1	.Wheel housing plate	.Hjulhusplåt	5
0205	6	69 12 364		LH	1	.Beam	.Balk	3
0207	6	69 12 380		RH	1	.Beam	.Balk	3
0220	7	69 25 531		LH	1	.Bearing bracket	.Lagerkonsol	5
0240	7	69 25 549		RH	1	.Bearing bracket	.Lagerkonsol	5
0300	9	82 74 359		LH	1	Wheel housing	Hjulhus	3
0340	9	82 74 367		RH	1	Wheel housing	Hjulhus	3
0365	9A	78 74 142			2	.Wheel housing plate	.Hjulhusplåt	3
0385	10	69 12 299		LH	1	Beam	Balk	5
0400	10	82 74 706		RH	1	Beam	Balk	5
0500	13	82 61 547			1	Beam	Balk	6
0520	14	82 76 057		LH, US	1	Link	Länk	5
0540	14	82 76 065		RH, US	1	Link	Länk	5
0560	15	82 76 107		US	2	Washer	Bricka	5
0580	16	80 97 883		US	4	Screw	Skruv	5
0600	17	82 60 747			2	Washer	Bricka	5
0620	18	82 62 966			4	Hexagon screw	Sexkantsskruv	5
0640	19	82 62 008			2	Washer	Bricka	5
0660	20	89 39 761			1	Cover	Lock	5
0670	20A	94 36 478			1	Insulation	Isolering	6
0680	21	82 06 096			4	Plug	Plugg	5
0700	22	82 72 494			1	Plug	Plugg	5
0720	23	92 90 149			1	Bracket	Fäste	5
0740	24	82 88 789		LH	1	Bracket	Konsol	4
0823	27	92 34 055			4	Washer	Bricka	5
0840	28	82 86 395		LH	1	Bracket	Konsol	4
0880	28	82 86 403		RH	1	Bracket	Konsol	4
0940	30	82 89 423			2	Cover	Täcklock	5
0960	31	82 62 354			2	Reinforcement	Förstärkning	4
0980	32	79 67 953			4	Nut	Mutter	5
1000	33	85 75 599			1	Plug	Plugg	5
1010	33	95 97 477		1991-, CV	1	Grommet	Genomföring	5
1020	34	79 61 642			4	Rivet	Nit	5
1030	35	69 33 535		LH, CV	1	Bracket	Konsol	5
1040	35	69 33 543		RH, CV	1	Bracket	Konsol	5
1050	36	69 33 634		LH, CV	1	Reinforcement	Förstärkning	5
1060	36	69 33 642		RH, CV	1	Reinforcement	Förstärkning	5
1075	37	*69 42 023*		85) LH, CV NLS - USE 6996987	1	Reinforcement	Förstärkning	5
1080	37	69 96 987		86) LH, CV	1	Reinforcement	Förstärkning	5
1095	37	*69 42 031*		85) RH, CV NLS - USE 6996995	1	Reinforcement	Förstärkning	5
1100	37	69 96 995		86) RH, CV	1	Reinforcement	Förstärkning	5
1110	38	69 35 316		CV	1	Bracket	Fäste	5
1120	39	82 78 558		CV	1	Protecting moulding	Skyddslist	5
1130	40	79 22 891		CV	2	Screw	Skruv	5
1160	41	85 64 973			1	Protecting moulding	Skyddslist	6

85. --L7003164
86. L7003165--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B16

Wheel housing, rear — *Hjulhus, bakre*

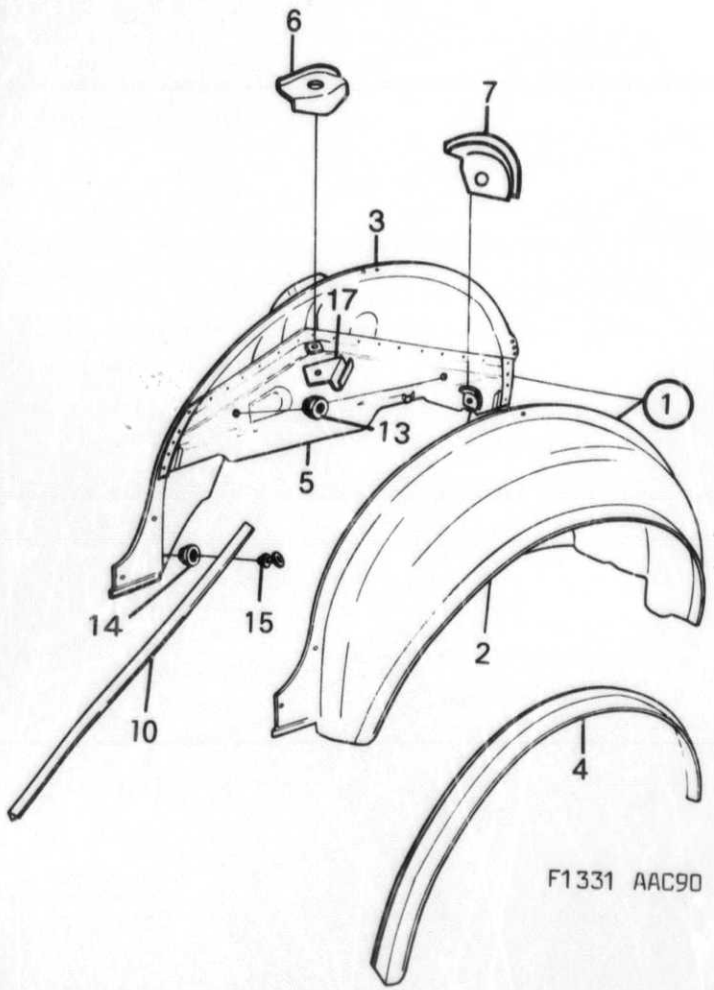

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 72 197		3) LH	1	Wheel housing	Hjulhus	
0020	1	82 72 205		3) RH	1	Wheel housing	Hjulhus	
0030	2	82 74 631		LH	1	.Wheel housing	.Hjulhus	5
0040	2	82 74 649		RH	1	.Wheel housing	.Hjulhus	5
0050	3	69 10 806		LH	1	.Wheel housing	.Hjulhus	6
0060	3	69 10 814		RH	1	.Wheel housing	.Hjulhus	6
0070	4	78 74 159		LH	1	.Wheel housing plate	.Hjulhusplåt	5
0080	4	78 74 167		RH	1	.Wheel housing plate	.Hjulhusplåt	5
0100	5	69 42 312		LH	1	.Wheel house panel	.Hjulhusbalk	5
0120	5	69 42 320		RH	1	.Wheel house panel	.Hjulhusbalk	5
0130	6	92 86 253		LH	1	..Reinforcement	..Förstärkning	5
0140	6	92 86 261		RH	1	..Reinforcement	..Förstärkning	5
0155	7	69 42 296		LH	1	..Bracket	..Konsol	5
0165	7	69 42 304		RH	1	..Bracket	..Konsol	5
0170	10	*82 18 661*		NLS	1	Stay	Stag	5
0180	13	84 59 489			4	Plug	Plugg	5
0190	14	84 59 497			2	Plug	Plugg	5
0200	15	85 07 873			2	Plug	Plugg	5
0210	17	92 30 350		US	1	Protecting plate	Skyddsplåt	5

3. Rear Bakre


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B18 Side plate 3CK / Sidoplåt 3CK

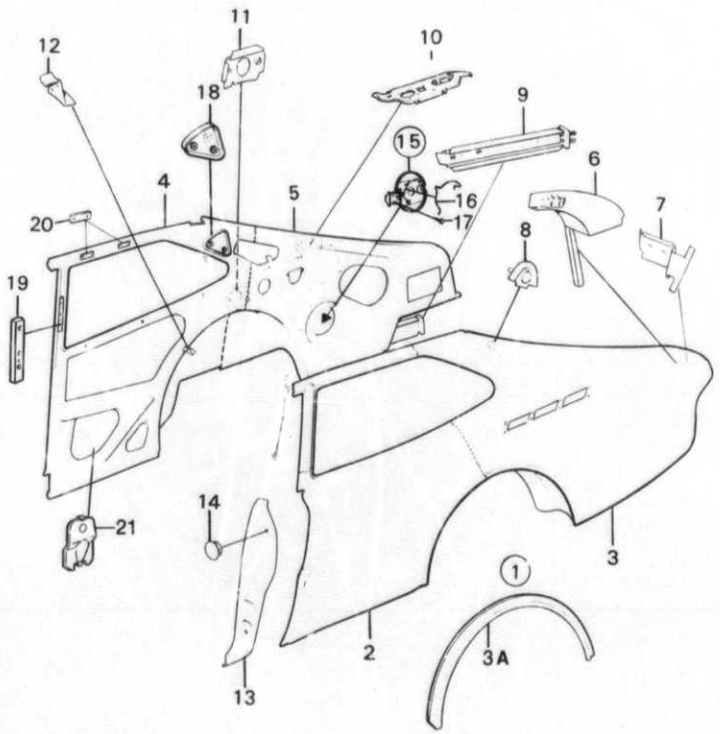

F2241 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0350							
0020	1	*92 29 717*	LH, ALT 9284035 NLS - USE 9284035	1	Side plate	Sidoplåt	4
0060	1	*92 29 725*	RH, ALT 9284043 NLS - USE 9284043	1	Side plate	Sidoplåt	4
0100	2	92 28 230	LH	1	.Side plate	.Sidoplåt	
0140	2	92 28 248	RH	1	.Side plate	.Sidoplåt	4
0180	3	*82 53 155*	LH, ALT 9284050 NLS - USE 9284050	1	.Side plate	.Sidoplåt	4
0220	3	*82 53 163*	RH, ALT 9284068 NLS - USE 9284068	1	.Side plate	.Sidoplåt	4
0245	3A	78 74 118		2	.Mudguard repair part	.Skärmdel	3
0310	4	40 06 656	2) LH	1	Side plate	Sidoplåt	6
0320	4	40 06 664	2) RH	1	Side plate	Sidoplåt	6
0362	5	92 89 059	3) LH	1	Side plate	Sidoplåt	6
0420	5	82 55 242	3) RH	1	Plate	Plåt	6
0460	6	82 85 462	LH (8250573)	1	Plate	Plåt	5
0480	6	82 85 470	RH (8250581)	1	Plate	Plåt	5
0521	7	*92 23 777*	LH NLS - USE 9236654	1	Bracket	Fäste	
0522	7	*92 23 785*	RH NLS - USE 9236662	1	Bracket	Fäste	5
0540	8	82 83 665		2	Bracket	Fäste	5
0581	9	92 21 995	LH	1	Reinforcement	Förstärkning	6
0582	9	92 22 001	RH	1	Reinforcement	Förstärkning	6
0624	10	69 17 116	LH	1	Support	Stöd	6
0625	10	69 17 124	RH	1	Support	Stöd	6
0640	11	82 83 921	LH	1	Bracket	Fäste	6
0660	11	82 83 939	RH	1	Bracket	Fäste	6
0680	12	*76 01 727*	NLS	1	Support	Stöd	
0700	13	76 00 828	LH	1	End plate	Gavel	5
0740	13	76 00 836	RH	1	End plate	Gavel	5
0780	14	70 38 342		1	Plug	Plugg	5
0830	15	82 86 304		1	Cover	Täcklock	5
0840	16	82 62 537		1	.Spring	.Fjäder	5
0860	17	79 72 888		2	Screw	Skruv	5
0880	18	76 01 552	-1990, LH	1	Reinforcement	Förstärkning	6
0900	18	*76 01 560*	-1990, RH NLS	1	Reinforcement	Förstärkning	6
0910	18	40 99 701	1991-, LH	1	Reinforcement	Förstärkning	6
0915	18	40 99 719	1991-, RH	1	Reinforcement	Förstärkning	6
0920	19	40 06 409		2	Washer	Bricka	5
0940	20	82 09 967		4	Attaching profile	Fästprofil	6
0950	21	40 07 001		2	Support	Fästkonsol	5

2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-B20

Side plate
5CK

Sidoplåt
5CK

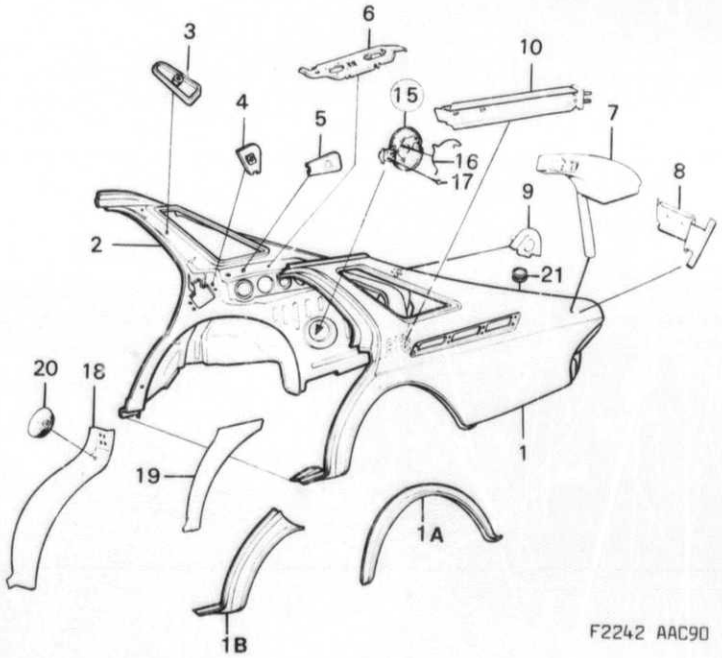

F2242 AAC90


0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 28 214		LH	1	Side plate	Sidoplåt	4
0040	1	92 28 222		RH	1	Side plate	Sidoplåt	4
0045	1A	78 74 118			2	.Mudguard repair part	.Skärmdel	3
0050	1B	78 74 126		LH	1	.Side part	.Sidodel	5
0052	1B	78 74 134		RH	1	.Side part	.Sidodel	5
0060	2	76 01 792		LH	1	Side plate	Sidoplåt	6
0080	2	76 01 800		RH	1	Side plate	Sidoplåt	6
0100	3	82 60 192			2	Bracket	Fäste	6
0120	4	82 60 218		LH	1	Bracket	Fäste	6
0140	4	82 60 226		RH	1	Bracket	Fäste	6
0160	5	82 60 234		LH	2	Bracket	Fäste	6
0180	5	82 60 242		RH	2	Bracket	Fäste	6
0200	6	*92 22 175*		LH NLS	1	Support	Stöd	6
0220	6	92 22 183		RH	1	Support	Stöd	6
0240	7	82 85 462		LH (8250573)	1	Plate	Plåt	5
0260	7	82 85 470		RH (8250581)	1	Plate	Plåt	5
0301	8	92 36 654		LH	1	Bracket	Fäste	5
0302	8	92 36 662		RH	1	Bracket	Fäste	5
0320	9	82 83 665			2	Bracket	Fäste	5
0361	10	*82 87 997*		LH NLS - USE 9221995	1	Reinforcement	Förstärkning	
0362	10	*82 88 003*		RH NLS - USE 9222001	1	Reinforcement	Förstärkning	
0410	15	82 86 304			1	Cover	Täcklock	5
0420	16	82 62 537			1	.Spring	.Fjäder	5
0440	17	79 72 888			2	Screw	Skruv	5
0460	18	76 01 370		LH	1	End plate	Gavel	5
0500	18	76 01 388		RH	1	End plate	Gavel	5
0540	19	*76 01 354*		LH NLS	1	Plate	Plåt	6
0560	19	76 01 362		RH	1	Plate	Plåt	6
0580	20	82 45 888			2	Plug	Plugg	
0600	21	71 63 074			1	Plug	Plugg	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

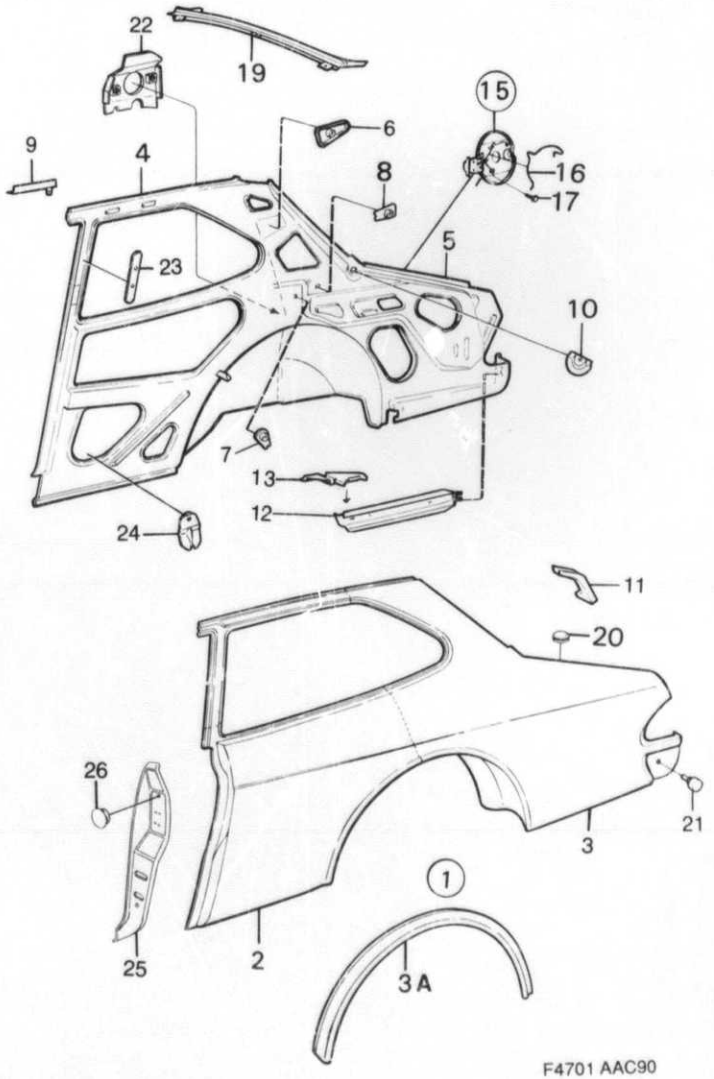

F4701 AAC90

Car body

4-B22 *Side plate 2SN*

Karosskrov

Sidoplåt 2SN

0415	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 44 367		LH	1	Side plate	Sidoplåt	4
0020	1	69 44 375		RH	1	Side plate	Sidoplåt	4
0030	2	69 44 383		LH	1	.Side plate	.Sidoplåt	4
0040	2	69 44 391		RH	1	.Side plate	.Sidoplåt	4
0050	3	92 92 491		LH	1	.Side plate	.Sidoplåt	4
0060	3	92 92 509		RH	1	.Side plate	.Sidoplåt	4
0070	3A	78 74 118			1	.Mudguard repair part	.Skärmdel	3
0080	4	40 06 516		2) LH	1	Side plate	Sidoplåt	6
0090	4	40 06 524		2) RH	1	Side plate	Sidoplåt	6
0100	5	92 92 533		3) LH	1	Side plate	Sidoplåt	6
0110	5	92 92 541		3) RH	1	Side plate	Sidoplåt	6
0120	6	92 20 997			2	Bracket	Fäste	5
0130	7	82 60 218		LH	1	Bracket	Fäste	6
0140	7	82 60 226		RH	1	Bracket	Fäste	6
0150	8	82 60 234		LH	2	Bracket	Fäste	6
0160	8	82 60 242		RH	2	Bracket	Fäste	6
0170	9	*92 22 670*		LH NLS	1	Bracket	Konsol	6
0180	9	92 22 688		RH	1	Bracket	Konsol	6
0190	10	*92 22 696*		LH NLS	1	Bracket	Fäste	6
0200	10	92 22 704		RH	1	Bracket	Fäste	6
0210	11	92 20 955		LH	1	Plate	Plåt	5
0220	11	92 20 963		RH	1	Plate	Plåt	5
0230	12	92 20 930		LH	1	Reinforcement	Förstärkning	5
0240	12	92 20 948		RH	1	Reinforcement	Förstärkning	5
0250	13	82 87 286		2)	1	Support	Stöd	6
0260	15	82 86 304			1	Cover	Täcklock	5
0270	16	82 62 537			1	.Spring	.Fjäder	5
0280	17	79 72 888			2	Screw	Skruv	5
0290	19	69 27 065			1	Beam	Balk	6
0300	20	71 63 074			1	Plug	Plugg	5
0310	21	92 23 686			2	Buffer	Buffert	5
0320	22	82 83 921		LH	1	Bracket	Fäste	6
0330	22	82 83 939		RH	1	Bracket	Fäste	6
0340	23	40 06 417			2	Washer	Bricka	5
0350	24	40 07 001			2	Support	Fästkonsol	5
0360	25	76 00 828		LH	1	End plate	Gavel	5
0370	25	76 00 836		RH	1	End plate	Gavel	5
0380	26	70 38 342			2	Plug	Plugg	5


2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

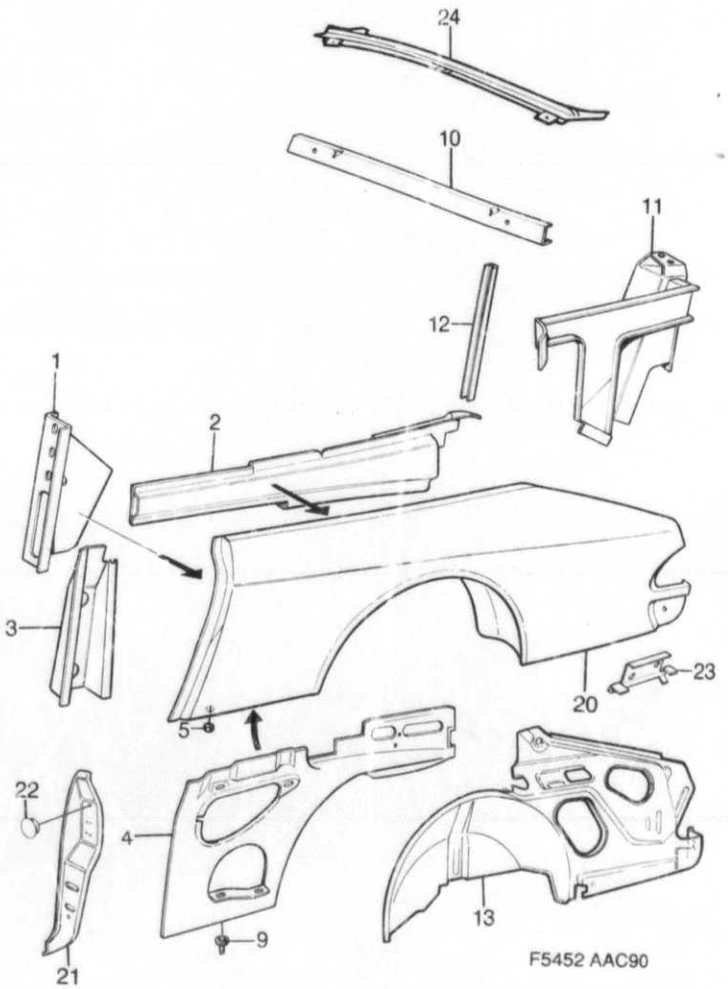

0420	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 33 592*		3,94) LH NLS - USE 4153276	1	Reinforcement	Förstärkning	5
0020	1	41 53 276		3,95) LH	1	Reinforcement	Förstärkning	5
0030	1	*69 33 618*		3,94) RH NLS - USE 4153284	1	Reinforcement	Förstärkning	5
0040	1	41 53 284		3,95) RH	1	Reinforcement	Förstärkning	5
0050	2	*69 33 576*		-1991, LH NLS - USE 4154746	1	Beam	Balk	6
0060	2	*69 33 691*		-1991, RH NLS - USE 4154753	1	Beam	Balk	6
0070	2	41 54 746		1992-, LH	1	Beam	Balk	6
0080	2	41 54 753		1992-, RH	1	Beam	Balk	6
0090	3	69 33 584		LH	1	Reinforcement	Förstärkning	5
0100	3	69 33 600		RH	1	Reinforcement	Förstärkning	5
0110	4	69 33 568		LH	1	Side plate	Sidoplåt	6
0120	4	69 33 683		RH	1	Side plate	Sidoplåt	6
0130	5	82 06 096			2	Plug	Plugg	5
0140	9	71 16 452			2	Draining plug	Dräneringsplugg	5
0150	10	69 97 548			1	Support	Stöd	6
0160	11	69 98 694		LH	1	Frame	Ram	6
0170	11	69 98 702		RH	1	Frame	Ram	6
0180	12	69 97 563			2	Rail	Skena	6
0190	13	41 53 433		LH	1	Side plate	Sidoplåt	6
0200	13	41 53 441		RH	1	Side plate	Sidoplåt	6
0210	20	*69 97 431*		LH NLS - USE 4154225	1	Side plate	Sidoplåt	4
0220	20	*69 97 449*		RH NLS - USE 4154233	1	Side plate	Sidoplåt	4
0230	21	76 00 828		LH	1	End plate	Gavel	5
0240	21	76 00 836		RH	1	End plate	Gavel	5
0250	22	70 38 342			2	Plug	Plugg	5
0260	23	42 95 176			1	Support	Fästkonsol	6
0270	24	45 21 340			1	Beam	Balk	6


3. Rear Bakre
94. Ch. -L7011588
95. Ch. L7011589-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

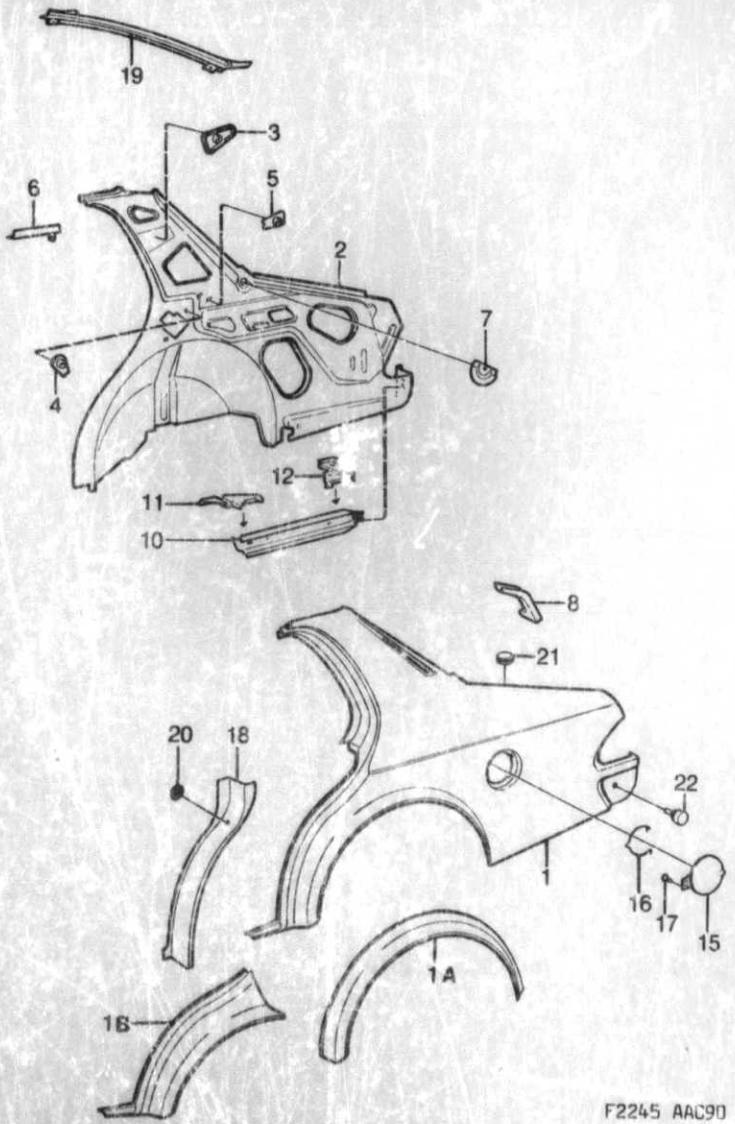

Car body

4-C02

Side plate

4SN

Karosskrov

Sidoplåt

4SN

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 20 898		LH	1	Side plate	Sidoplåt	4
0040	1	92 20 906		RH	1	Side plate	Sidoplåt	4
0045	1A	78 74 118			2	.Mudguard repair part	.Skärmdel	3
0050	1B	78 74 126		LH	1	.Side part	.Sidodel	5
0052	1B	78 74 134		RH	1	.Side part	.Sidodel	5
0062	2	92 89 083		LH	1	Side plate	Sidoplåt	6
0080	2	92 20 922		RH	1	Side plate	Sidoplåt	6
0100	3	92 20 997			2	Bracket	Fäste	5
0120	4	82 60 218		LH	1	Bracket	Fäste	6
0140	4	82 60 226		RH	1	Bracket	Fäste	6
0160	5	82 60 234		LH	2	Bracket	Fäste	6
0180	5	82 60 242		RH	2	Bracket	Fäste	6
0200	6	*92 22 670*		LH NLS	1	Bracket	Konsol	6
0220	6	92 22 688		RH	1	Bracket	Konsol	6
0240	7	*92 22 696*		LH NLS	1	Bracket	Fäste	6
0260	7	92 22 704		RH	1	Bracket	Fäste	6
0280	8	92 20 955		LH	1	Plate	Plåt	5
0300	8	92 20 963		RH	1	Plate	Plåt	5
0320	10	92 20 930		LH	1	Reinforcement	Förstärkning	5
0340	10	92 20 948		RH	1	Reinforcement	Förstärkning	5
0350	11	82 87 286		2)	1	Support	Stöd	6
0355	12	92 22 977		3)	1	Support	Stöd	6
0400	15	82 86 304			1	Cover	Täcklock	5
0440	16	82 62 537			1	.Spring	.Fjäder	5
0480	17	79 72 888			2	Screw	Skruv	5
0480	18	76 01 370		LH	1	End plate	Gavel	5
0520	18	76 01 388		RH	1	End plate	Gavel	5
0560	19	69 27 065			1	Beam	Balk	6
0580	20	82 45 088			2	Plug	Plugg	
0600	21	71 63 074			1	Plug	Plugg	5
0620	22	92 23 686			2	Buffer	Buffert	5

2. Front Främre
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C04

Doorpillars etc
Dörrstolpar etc

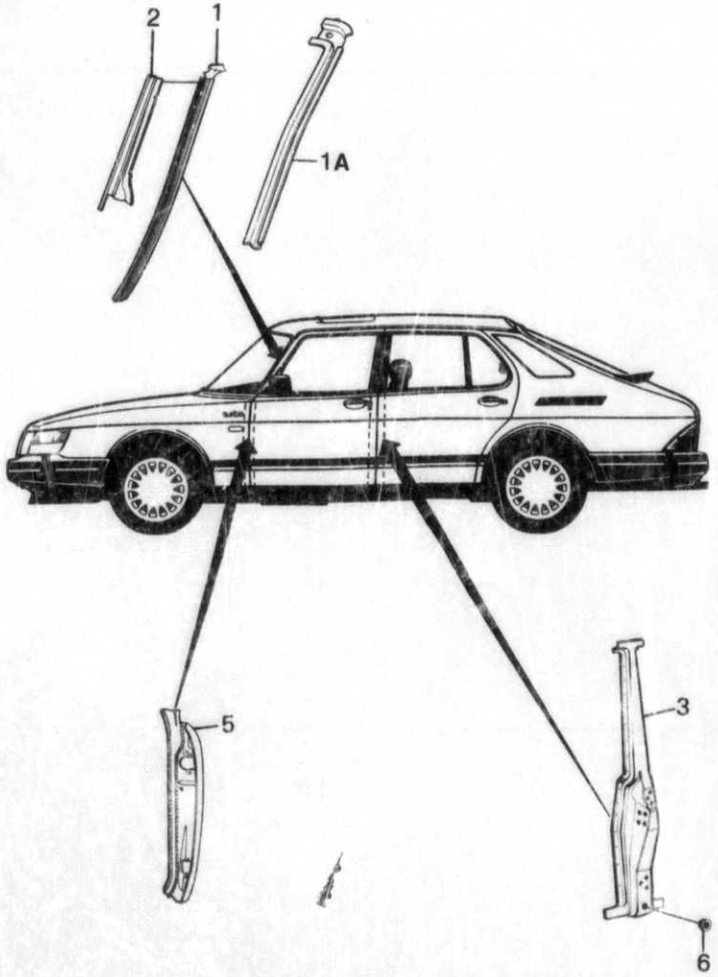

F2877 AAC90

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 98 166		2) LH	1	Pillar	Stolpe	6
0020	1	40 98 174		2) RH	1	Pillar	Stolpe	6
0030	1A	69 33 501		2) LH, CV	1	Pillar	Stolpe	6
0040	1A	69 33 519		2) RH, CV	1	Pillar	Stolpe	6
0050	2	92 93 358		LH	1	. Plate rail	. Plåtskena	5
0060	2	92 93 366		RH	1	. Plate rail	. Plåtskena	5
0070	3	69 45 570		LH 5CK, 4SN	1	Pillar	Stolpe	6
0080	3	69 45 588		RH 5CK, 4SN	1	Pillar	Stolpe	6
0090	5	69 26 372		LH	1	Support	Stöd	6
0100	5	69 26 380		RH	1	Support	Stöd	6
0110	6	84 59 505		-1990, 5CK, 4SN	2	Plug	Plugg	5
0120	6	82 11 344		1991-, 5CK, 4SN	2	Plug	Plugg	5

2. Front Främre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C06

Plugs
Pluggar

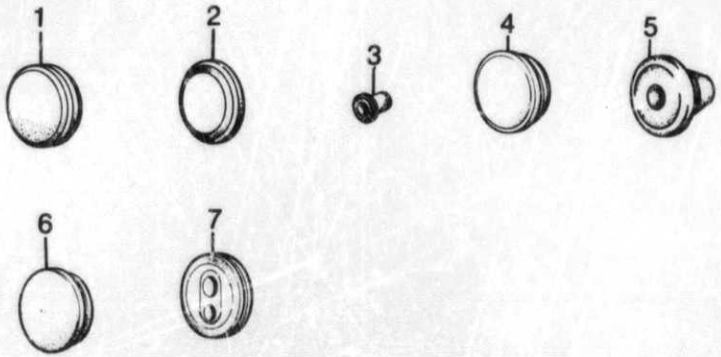

P2878 AAC90

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	70 38 342		HOLE ∅ 22MM	X	Plug	Plugg	5
0020	2	82 06 096		HOLE ∅ 12MM	X	Plug	Plugg	5
0030	3	82 72 635		HOLE ∅ 10MM	X	Plug	Plugg	5
0040	4	82 41 325		HOLE ∅ 22MM	X	Plug	Plugg	5
0050	5	69 30 572		HOLE ∅ 6MM	X	Plug	Plugg	5
0060	6	85 75 599		HOLE ∅ 25MM	X	Plug	Plugg	5
0070	7	75 39 968		HOLE ∅ 25MM	X	Grommet	Genomföring	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C08

Hood, hinges and locks
Huv, gångjärn och lås

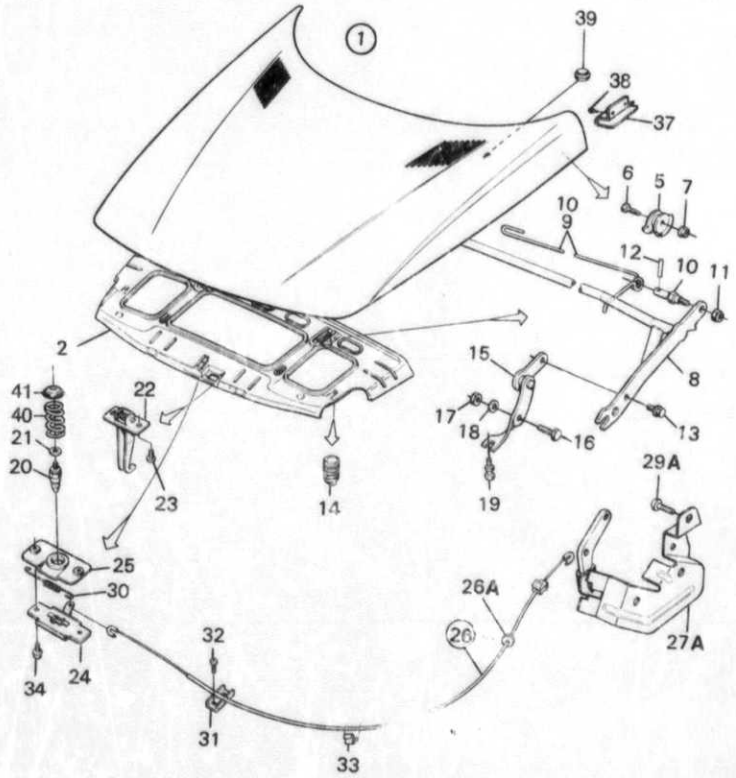

F3355 AAC90

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 15 482			1	Bonnet	Motorhuv	3
0020	2	69 15 474			1	▪Rib	▪Spant	3
0030	5	92 37 009			2	Roller	Rulle	5
0040	6	79 71 724			2	Screw	Skruv	5
0050	7	79 71 658			2	Nut	Mutter	5
0060	8	82 67 601			1	Bonnet hinge	Huvgångjärn	3
0070	9	40 09 379		LH	1	Spring	Fjäder	4
0080	9	40 09 387		RH	1	Spring	Fjäder	4
0090	10	82 61 299			2	Pin	Tapp	5
0100	11	79 67 953			2	Nut	Mutter	5
0110	12	73 99 678			2	Pin	Pinne	5
0120	13	79 72 144			2	Screw	Skruv	5
0130	14	*82 78 343*		-1991 NLS - USE 4304234	2	Buffer	Buffert	4
0140	14	43 04 234		1992-	2	Rubber buffer	Gummibuffert	4
0150	15	82 66 017		LH	1	Bonnet hinge	Huvgångjärn	5
0160	15	82 66 025		RH	1	Bonnet hinge	Huvgångjärn	
0170	16	80 82 943			2	Screw	Skruv	5
0180	17	80 74 288		-1992	2	Nut	Mutter	5
0185	17	91 66 406		1993-	2	Nut	Mutter	5
0190	18	79 33 849			2	Washer	Bricka	5
0200	19	82 86 528			2	Screw	Skruv	5
0210	20	40 09 627			1	Lock pin	Låstapp	4
0220	21	*73 11 764*		NLS - USE 7399835	1	Washer	Bricka	5
0230	22	69 26 950			1	Catch	Hake	3
0240	23	80 59 552			2	Screw	Skruv	5
0250	24	*82 74 946*		117) NLS - USE 4008421	1	Lock	Lås	3
0260	24	40 08 421		118)	1	Lock	Lås	3
0270	25	*82 61 364*		117) NLS - USE 4008439	1	Plate	Plåt	5
0280	25	40 08 439		118)	1	Plate	Plåt	5
0290	26	69 45 521			1	Control cable	Reglagewire	2
0300	26A	79 61 311			1	▪Bushing	▪Bussning	5
0310	27A	82 78 509			1	Control arm	Reglagearm	5
0320	29A	79 22 891			3	Screw	Skruv	5
0330	30	82 75 877			1	Spring	Fjäder	5
0340	31	92 64 508			1	Cap	Överfall	5
0350	32	79 22 446		-1991	2	Screw	Skruv	5
0360	32	79 73 001		1992-	2	Screw	Skruv	5
0370	33	79 33 443			1	Clip	Clips	5
0380	34	82 86 296			2	Screw	Skruv	5
0390	37	92 33 487		RH	1	Guard	Skydd	4
0400	37	92 33 495		LH	1	Guard	Skydd	4
0410	38	79 61 642			4	Rivet	Nit	5
0420	39	82 06 096			1	Plug	Plugg	5
0430	40	69 73 770			1	Return spring	Returfjäder	5
0440	41	69 73 762			1	Washer	Bricka	5

117. Ch. --L3007535, --L7021933
118. Ch. L3007536--, L7021934--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C10

Front member
Grille

Frontbalk
Grill

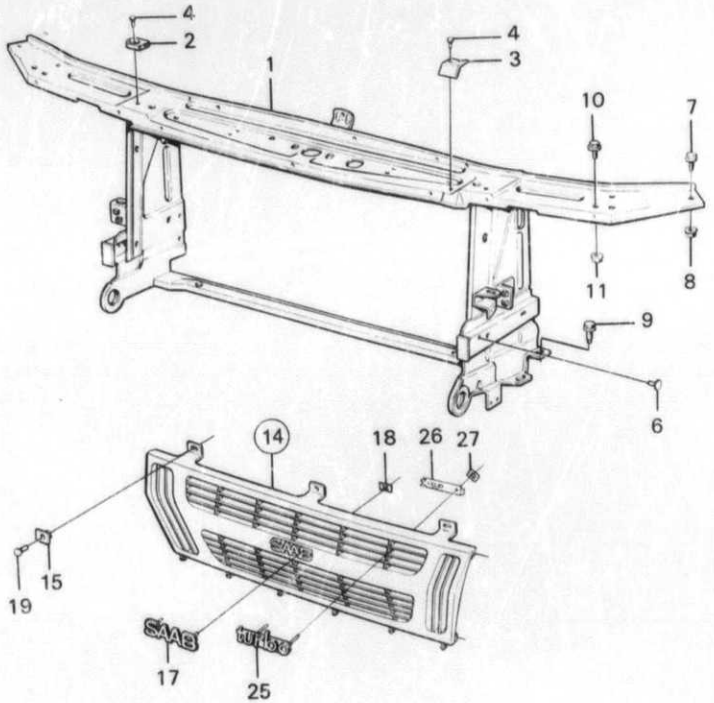

F2246 AAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 37 254			1	Beam	Balk	3
0020	2	82 74 185			2	Buffer	Buffert	5
0030	3	82 66 926			1	Protection	Skydd	6
0040	4	82 85 900			3	Rivet	Nit	
0050	6	82 35 178			2	Pop rivet	Popnit	5
0060	7	79 67 938			6	Screw	Skruv	5
0070	8	79 67 953			6	Nut	Mutter	5
0080	9	92 92 699			4	Screw	Skruv	5
0090	9	92 92 699		WITHOUT OILCOOLER	3	Screw	Skruv	5
0100	10	79 65 544			4	Screw	Skruv	5
0110	11	79 71 658			4	Nut	Mutter	5
0120	14	69 26 778		CHROME PLATED	1	Grille	Grill	3
0130	14	69 26 406		-1991, PAINTED	1	Grille	Grill	3
0140	15	40 89 454			3	.Clip	.Clips	3
0150	17	92 89 869			1	.Emblem	.Emblem	3
0160	17	*69 26 414*		NLS - USE 6956593	1	.Emblem	.Emblem	3
0170	18	79 19 483			2	.Clip	.Clips	5
0180	19	79 22 354			3	Screw	Skruv	5
0190	25	69 26 786		NOT CA	1	Emblem	Emblem	3
0200	26	82 73 815			3	Plate	Platta	
0210	27	79 19 483			6	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C12

Front fender

Framskärm

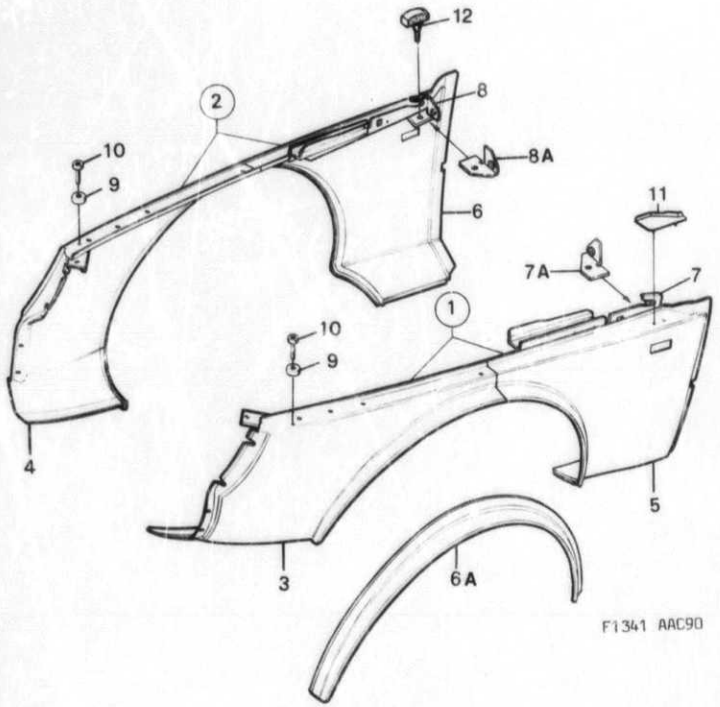

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0045	1	69 21 530		LH	1	Front fender	Framskärm	3
0085	2	69 21 548		RH	1	Front fender	Framskärm	3
0100	3	82 74 854		2) LH	1	.Fender	.Skärm	
0140	4	82 74 862		2) RH	1	.Fender	.Skärm	
0205	5	69 21 555		3) LH	1	.Front fender	.Framskärm	5
0245	6	69 21 563		3) RH	1	.Front fender	.Framskärm	5
0250	6A	76 74 118			2	.Mudguard repair part	.Skärmdel	3
0262	7	92 34 378		LH	1	.Rail	.Skena	4
0270	7A	92 93 473		LH	1	..Attaching plate	..Fästplåt	4
0282	8	92 34 386		RH	1	.Rail	.Skena	4
0290	8A	92 93 481		RH	1	..Attaching plate	..Fästplåt	4
0300	9	82 67 395			4	Buffer	Buffert	5
0320	10	*82 15 683*		NLS - USE 8287666	4	Rivet	Nit	
0360	11	92 33 503		LH	1	Guard	Skydd	3
0380	11	92 33 511		RH	1	Guard	Skydd	3
0400	12	82 11 294			2	Buffer	Buffert	3

2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C14

Doors, hinges, window regulators, 3CK, 2SN

Dörrar, gångjärn,fönsterhissar, 3CK, 2SN

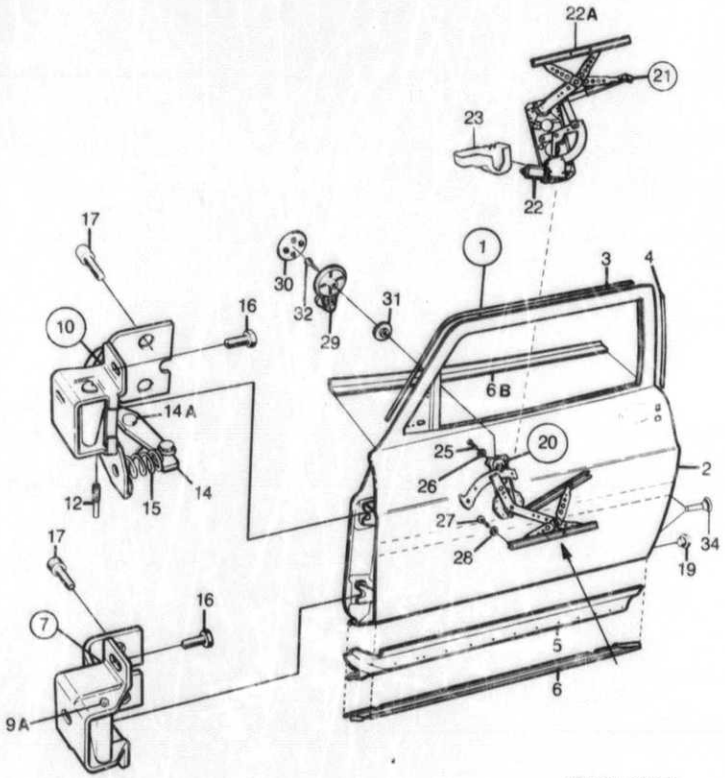

F2879 AAC90

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 25 754		LH	1	Door	Dörr	4
0020	1	69 25 762		RH	1	Door	Dörr	4
0030	2	82 88 714		LH	1	.Door shell	.Dörrplåt	3
0040	2	82 88 722		RH	1	.Door shell	.Dörrplåt	3
0050	3	69 27 198		LH (8224917)	1	.Plate rail	.Plåtskena	5
0060	3	69 27 222		RH (8224925)	1	.Plate rail	.Plåtskena	5
0070	4	82 24 933			2	.Plate rail	.Plåtskena	5
0080	5	82 17 432		165) LH	1	.Door shell	.Dörrplåt	5
0090	5	82 17 440		165) RH	1	.Door shell	.Dörrplåt	5
0100	6	82 15 899		LH	1	.Door shell	.Dörrplåt	5
0110	6	82 15 907		RH	1	.Door shell	.Dörrplåt	5
0120	6B	78 73 508		161,164) LH	1	.Door shell	.Dörrplåt	4
0130	6B	78 73 516		161,164) RH	1	.Door shell	.Dörrplåt	4
0140	7	69 12 570		LH	1	Hinge	Gångjärn	5
0150	7	69 12 588		RH	1	Hinge	Gångjärn	5
0160	9A	82 43 578			2	.Pin	.Tapp	3
0170	10	69 12 596		LH	1	Hinge	Gångjärn	5
0180	10	69 12 604		RH	1	Hinge	Gångjärn	5
0190	12	82 06 393			2	.Pin	.Pinne	3
0200	14	82 07 573		LH	1	.Lever	.Hävarm	6
0210	14	82 07 581		RH	1	.Lever	.Hävarm	6
0220	14A	82 06 476			2	.Pin	.Tapp	3
0230	15	82 06 369			2	.Compression spring	.Tryckfjäder	5
0240	16	79 75 212			12	Screw	Skruv	5
0250	17	*69 13 784*		NLS - USE 6937361	12	Screw	Skruv	5
0260	19	70 38 342			2	Plug	Plugg	5
0270	20	92 92 855		LH	1	Window lift	Fönsterhiss	5
0280	20	92 92 863		RH	1	Window lift	Fönsterhiss	5
0290	21	92 87 038		53) LH	1	Window lift	Fönsterhiss	5
0300	21	92 87 046		53) RH	1	Window lift	Fönsterhiss	5
0310	22	85 67 638		LH	1	.Engine	.Motor	E
0320	22	85 67 646		RH	1	.Engine	.Motor	5
0330	22A	92 87 012		53) LH	1	.Window lift	.Fönsterhiss	5
0340	22A	92 87 020		53) RH	1	.Window lift	.Fönsterhiss	5
0350	23	85 98 047		LH	1	.Protection	.Skydd	5
0360	23	85 98 260		RH	1	.Protection	.Skydd	5
0370	25	80 19 895		-1992	8	Screw	Skruv	5
0375	25	91 66 273		1993-	8	Screw	Skruv	5
0380	26	73 99 819			8	Washer	Bricka	5
0390	28	79 10 540			4	Washer	Bricka	5
0400	29	94 45 651			2	Crank	Vev	4
0410	30	84 76 301			2	Cover	Lock	4
0420	31	94 45 917		FOR UPHOLSTERY PLATE	2	Spacer washer	Distansbricka	5
0430	32	98 35 737			2	Screw	Skruv	5
0440	34	70 35 801		FOR CARS WITHOUT CENTRAL LOCK	4	Buffer	Buffert	3
0450								
0460		85 47 218		-1990, 2SN, 3CK	X	Window lift kit	Fönsterhissats	6
0470				See page 8A-145, 4-G02				
0480		85 48 174		1991-, 2SN, 3CK	X	Window lift kit	Fönsterhissats	6
0490				See page 8A-145, 4-G02				
0500		82 09 694		See page 8A-143, 4-F24	X	Repair kit	Reparationssats	6

53. Electrically operated Elektrisk manövrering
161. Upper Övre
164. Outer part Ytterdel
165. Inner section Innerdel

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C16

Doors, hinges, window regulators, CV

Dörrar, gångjärn,fönster-hissar, CV

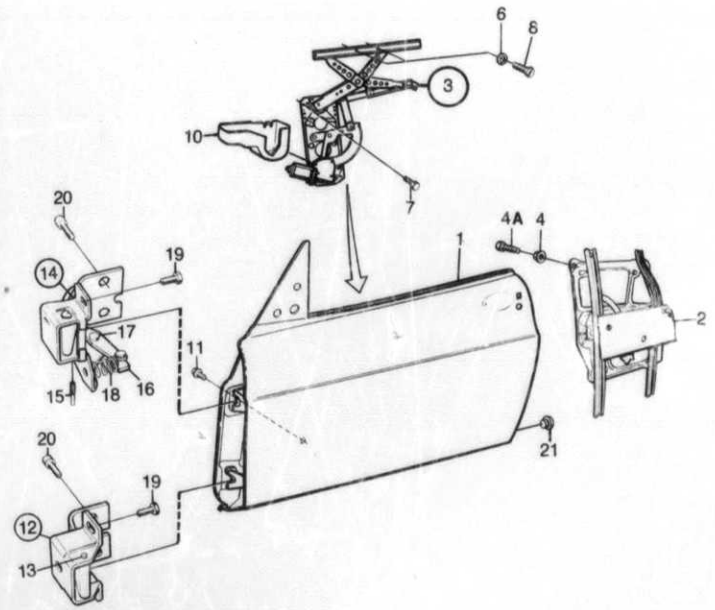

F4703 AAC90

0740	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 99 551		LH	1	Door	Dörr	4
0020	1	69 99 569		RH	1	Door	Dörr	4
0030	2	69 29 756		LH	1	Window lift	Fönsterhiss	5
0040	2	69 29 764		RH	1	Window lift	Fönsterhiss	5
0050	3	69 97 571		LH	1	Window lift	Fönsterhiss	5
0060	3	69 97 589		RH	1	Window lift	Fönsterhiss	5
0070	4	79 67 953			12	Nut	Mutter	5
0075	4A	69 36 397			4	Screw	Skruv	5
0080	6	79 10 540			4	Washer	Bricka	5
0090	7	79 72 441			10	Screw	Skruv	5
0100	8	80 59 537			4	Screw	Skruv	5
0110	10	85 98 047		LH	1	Protection	Skydd	5
0120	10	85 98 260		RH	1	Protection	Skydd	5
0130	11	79 69 223		GLASS ADJUSTMENT	2	Screw	Skruv	5
0140	12	69 12 570		LH	1	Hinge	Gångjärn	5
0150	12	69 12 588		RH	1	Hinge	Gångjärn	5
0160	13	82 43 578			2	▪Pin	▪Tapp	3
0170	14	69 12 596		LH	1	Hinge	Gångjärn	5
0180	14	69 12 604		RH	1	Hinge	Gångjärn	5
0190	15	82 06 393			2	▪Pin	▪Pinne	3
0200	16	82 07 573		LH	1	▪Lever	▪Hävarm	6
0210	16	82 07 581		RH	1	▪Lever	▪Hävarm	6
0220	17	82 06 476			2	▪Pin	▪Tapp	3
0230	18	82 06 369			2	▪Compression spring	▪Tryckfjäder	5
0240	19	79 75 212			12	Screw	Skruv	5
0250	20	*69 13 784*		NLS - USE 6937361	12	Screw	Skruv	5
0260	21	70 38 342			2	Plug	Plugg	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C18

Doors, hinges, window regulators,front,5CK, 4SN

Dörrar, gångjärn,fönsterhissar, fram, 5CK, 4SN

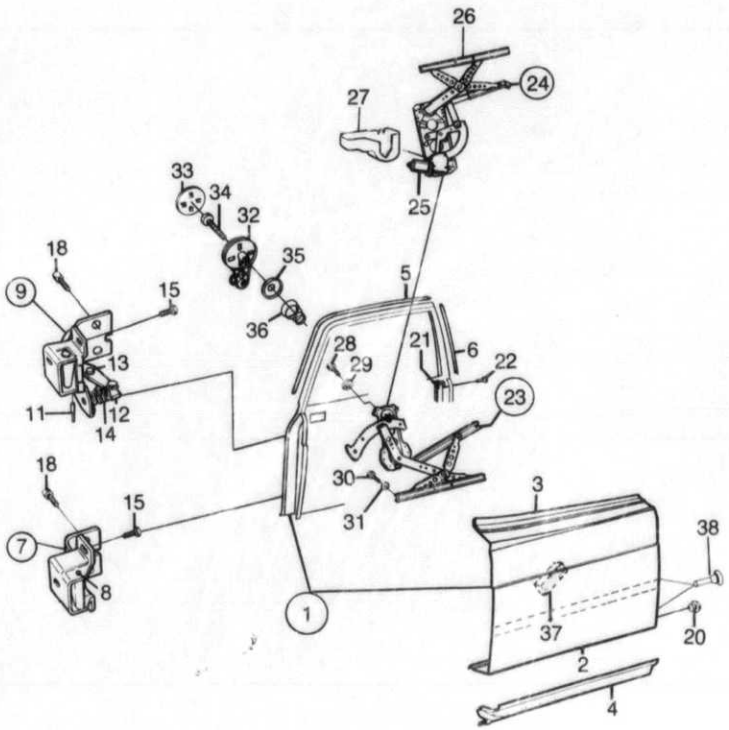

F3577 - AAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 25 739		LH	1	Door	Dörr	4
0020	1	69 25 747		RH	1	Door	Dörr	4
0030	2	82 88 763		LH	1	.Door shell	.Dörrplåt	3
0040	2	82 88 771		RH	1	.Door shell	.Dörrplåt	3
0050	3	78 73 508		161,164) LH	1	.Door shell	.Dörrplåt	4
0060	3	78 73 516		161,164) RH	1	.Door shell	.Dörrplåt	4
0070	4	82 17 432		LH	1	.Door shell	.Dörrplåt	5
0080	4	82 17 440		RH	1	.Door shell	.Dörrplåt	5
0090	5	69 27 198		LH (8224917)	1	.Plate rail	.Plåtskena	5
0100	5	69 27 222		RH (8224925)	1	.Plate rail	.Plåtskena	5
0110	6	82 24 933			2	.Plate rail	.Plåtskena	5
0120	7	69 12 570		LH	1	Hinge	Gångjärn	5
0130	7	69 12 588		RH	1	Hinge	Gångjärn	5
0140	8	82 43 578			2	.Pin	.Tapp	3
0150	9	69 12 596		LH	1	Hinge	Gångjärn	5
0160	9	69 12 604		RH	1	Hinge	Gångjärn	5
0170	11	82 06 393			2	.Pin	.Pinne	3
0180	12	82 07 573		LH	1	.Lever	.Hävarm	6
0190	12	82 07 581		RH	1	.Lever	.Hävarm	6
0200	13	82 06 476			2	.Pin	.Tapp	3
0210	14	82 06 369			2	.Compression spring	.Tryckfjäder	5
0220	15	79 75 212			12	Screw	Skruv	5
0230	18	*69 13 784*		NLS - USE 6937361	12	Screw	Skruv	5
0240	20	70 38 342			4	Plug	Plugg	5
0250	21	76 03 103		LH	1	Profile	Profil	6
0260	21	76 03 111		RH	1	Profile	Profil	6
0270	22	79 71 294			4	Screw	Skruv	5
0280	23	82 74 037		LH	1	Window lift	Fönsterhiss	5
0290	23	82 74 045		RH	1	Window lift	Fönsterhiss	5
0300	24	92 23 694		53) LH	1	Window lift	Fönsterhiss	6
0310	24	92 23 702		53) RH	1	Window lift	Fönsterhiss	6
0320	25	85 67 638		LH	1	.Engine	.Motor	5
0330	25	85 67 646		RH	1	.Engine	.Motor	5
0340	26	92 26 838		LH	1	.Window lift	.Fönsterhiss	5
0350	26	92 26 846		RH	1	.Window lift	.Fönsterhiss	5
0360	27	85 98 047		LH	2	.Protection	.Skydd	5
0370	27	85 98 260		RH	2	.Protection	.Skydd	5
0380	28	80 19 895		-1992	10	Screw	Skruv	5
0385	28	91 66 273		1993-	10	Screw	Skruv	5
0390	29	73 99 819			10	Washer	Bricka	5
0400	30	80 59 529			4	Screw	Skruv	5
0410	31	79 10 540			4	Washer	Bricka	5
0420	32	94 45 651			2	Crank	Vev	4
0430	33	84 76 301			2	Cover	Lock	4
0440	34	98 35 737			2	Screw	Skruv	5
0450	35	94 45 917			2	Spacer washer	Distansbricka	5
0460	36	71 52 796			2	Spring	Fjäder	5
0470	37	*94 58 878*		RHD NLS	2	Spacer	Distans	5
0480	38	70 35 801			4	Buffer	Buffert	3
0490						without central lock	utan centrallås	
0500		85 47 226		-1990, 4SN, 5CK	X	Window lift kit	Fönsterhissats	6
0510				See page 8A-145, 4-G02				
0520		85 48 182		1991-, 4SN, 5CK	X	Window lift kit	Fönsterhissats	6
0530				See page 8A-145, 4-G02				
0540		82 09 694		See page 8A-143, 4-F24	X	Repair kit	Reparationssats	6

53. Electrically operated Elektrisk manövrering
161. Upper Övre
164. Outer part Ytterdel

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C20

Doors, hinges, window regulators, rear, 5CK,4SN

Dörrar, gångjärn,fönsterhissar, bak, 5CK, 4SN

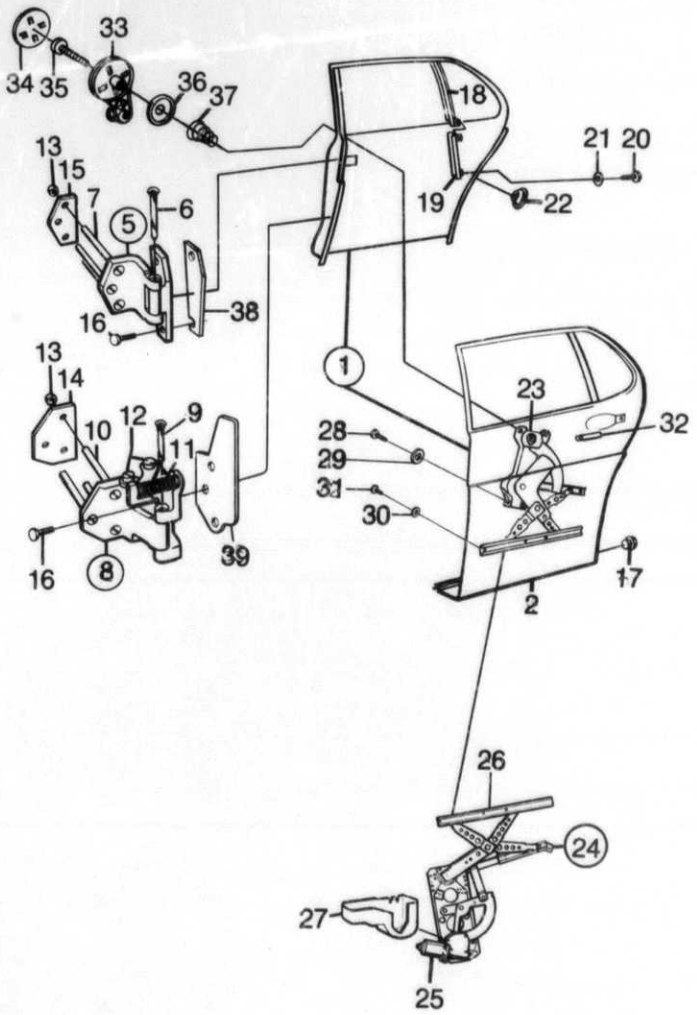

F3578 - AAC90

0755	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0781	1	69 25 853		LH	1	Door	Dörr	
0782	1	69 25 861		RH	1	Door	Dörr	
0830	2	82 86 833		LH	1	.Outer panel	.Ytterplåt	5
0840	2	82 86 841		RH	1	.Outer panel	.Ytterplåt	5
0910	5	92 81 775		LH	1	Hinge	Gångjärn	4
0930	5	92 81 783		RH	1	Hinge	Gångjärn	4
0950	6	*82 05 858*		NLS - USE 8243578	2	.Pin	.Tapp	
0960	7	*82 41 093*		NLS	6	.Screw	.Skruv	
1004	8	92 82 971		LH	1	Hinge	Gångjärn	4
1006	8	92 82 989		RH	1	Hinge	Gångjärn	4
1010	9	82 43 578			2	.Pin	.Tapp	3
1020	10	*82 41 101*		NLS	6	.Screw	.Skruv	
1050	11	*82 43 651*		NLS	1	.Spring	.Fjäder	
1060	12	*82 43 669*		NLS	4	.Knurled bolt	.Räffelbult	
1070	13	79 64 711			12	Nut	Mutter	3
1080	14	*82 41 291*		NLS	2	Washer	Bricka	
1090	15	*82 41 119*		NLS	2	Washer	Bricka	
1101	16	92 30 277			10	Screw	Skruv	5
1110	17	70 38 342			4	Plug	Plugg	5
1120	18	76 15 495		LH	1	Profile	Profil	5
1140	18	76 15 511		RH	1	Profile	Profil	5
1160	19	76 15 545		LH	1	Profile	Profil	5
1180	19	76 15 552		RH	1	Profile	Profil	5
1200	20	79 34 433			4	Screw	Skruv	5
1215	21	90 60 999			4	Washer	Bricka	5
1220	22	92 04 760			2	Plug	Plugg	5
1270	23	92 30 632		LH	1	Window lift	Fönsterhiss	5
1290	23	92 30 640		RH	1	Window lift	Fönsterhiss	5
1361	24	*92 89 372*		53) LH NLS - USE 8567638, 9289356	1	Window lift	Fönsterhiss	5
1364	24	*92 89 380*		53) RH NLS - USE 8567646, 9289364	1	Window lift	Fönsterhiss	5
1370	25	85 67 638		LH	1	.Engine	.Motor	5
1380	25	85 67 646		RH	1	.Engine	.Motor	5
1381	26	92 89 356		LH	1	.Window lift	.Fönsterhiss	5
1384	26	92 89 364		RH	1	.Window lift	.Fönsterhiss	5
1390	27	85 98 047		LH	2	.Protection	.Skydd	5
1395	27	85 98 260		RH	2	.Protection	.Skydd	5
1415	28	80 19 895		-1992	10	Screw	Skruv	5
1416	28	91 66 273		1993-	10	Screw	Skruv	5
1420	29	73 99 819			10	Washer	Bricka	5
1430	30	79 10 540			4	Washer	Bricka	5
1450	31	80 59 529			4	Screw	Skruv	5
1500	32	*92 81 346*		NLS	2	Protection	Skydd	3
1510	33	94 45 651			2	Crank	Vev	4
1530	34	84 76 301			2	Cover	Lock	4
1545	35	98 35 737			2	Screw	Skruv	5
1550	36	94 45 917			2	Spacer washer	Distansbricka	5
1560	37	71 52 796		1990	2	Spring	Fjäder	5
1590	38	92 84 381			2	Spacer	Mellanlägg	3
1600	39	92 84 373			2	Spacer	Mellanlägg	3
1800		85 47 242		-1990 4SN, 5CK	X	Window lift kit	Fönsterhissats	6
1810				See page 8A-145, 4-G02				

53. Electrically operated Elektrisk manövrering

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Doors, trunk lid


4-C22

Door lock
3CK, 2SN

Dörrar, bagagerumslucka

Dörrlås
3CK, 2SN

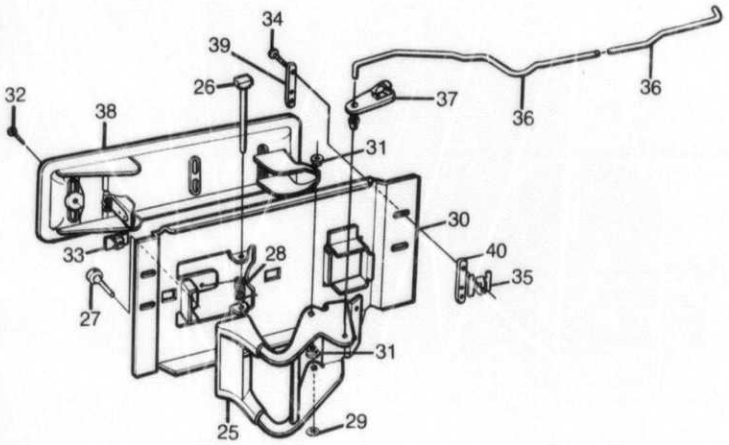

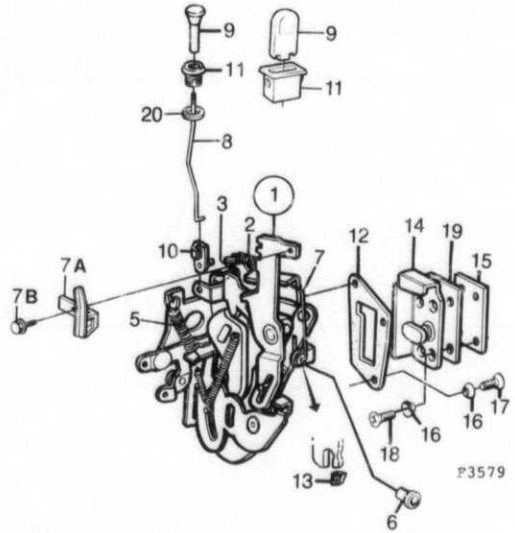

P3579 - AAC90

0760	Pos	Part No/Art nr	k S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	69 49 150		LH	1	Door lock	Dörrlås	4
0040	1	69 49 135		LH, RHD	1	Door lock	Dörrlås	4
0060	1	69 49 143		RH	1	Door lock	Dörrlås	4
0080	1	69 49 168		RH, RHD	1	Door lock	Dörrlås	4
0130	2	82 36 606			2	.Spring	.Fjäder	5
0140	3	84 57 566			2	.Spring	.Fjäder	5
0150	4	92 81 114			4	Tension spring	Dragfjäder	5
0160	5	92 85 602			2	.Spring	.Fjäder	5
0170	6	84 51 825			2	.Bushing	.Bussning	4
0180	7	84 51 817			2	.Link	.Länk	5
0190	7A	82 56 372		LH	1	.Adjusting link	.Justeringslänk	5
0200	7A	82 56 380		RH	1	.Adjusting link	.Justeringslänk	5
0210	7B	92 24 544			2	.Screw	.Skruv	5
0230	8	84 58 713		LH	1	Rod	Stång	5
0240	8	*84 58 721*		RH NLS	1	Rod	Stång	5
0250	8	84 51 478		LH	1	Rod	Stång	5
0260	8	84 51 486		RH	1	Rod	Stång	5
0270	8	69 34 517		LH, CV	1	Rod	Stång	5
0280	8	69 34 525		RH, CV	1	Rod	Stång	5
0290	9	94 46 022			2	Button	Knapp	3
0302	9	40 37 735		CV	2	Lock button	Låsknapp	5
0310	10	84 61 675			2	Clip	Clips	5
0320	11	97 31 498			2	Bushing	Bussning	4
0342	11	91 60 003		CV	2	Bushing	Bussning	4
0350	12	84 56 006			2	Spacer	Mellanlägg	
0360	13	84 56 808			2	Absorber	Dämpare	4
0370	14	82 62 750		LH	1	End plate	Slutbleck	5
0380	14	82 62 768		RH	1	End plate	Slutbleck	5
0390	15	82 41 994			2	Nut plate	Mutterplatta	5
0400	16	79 34 136			14	Washer	Bricka	5
0410	17	80 55 980			6	Screw	Skruv	5
0420	18	79 37 964			8	Screw	Skruv	5
0430	19	84 74 553		-1991	4	Spacer	Mellanlägg	4
0435	19	69 96 813		1992-	X	Spacer	Mellanlägg	4
0440	20	92 31 671		185)	2	Spacer	Mellanlägg	4
0445	20	97 14 122		186)	2	Washer	Bricka	5
0450	25	94 03 056		LH	1	Handle	Handtag	5
0460	25	94 03 064		RH	1	Handle	Handtag	5
0470	26	94 03 072			2	Shaft	Axel	5
0480	27	94 25 174			2	Plug	Plugg	5
0490	28	94 03 080		LH	1	Spring	Fjäder	5
0500	28	94 16 793		RH	1	Spring	Fjäder	5
0510	29	79 68 076			2	Retaining ring	Spårring	5
0520	30	94 07 453		LH	1	Bracket	Konsol	6
0530	30	94 07 461		RH	1	Bracket	Konsol	6
0540	31	94 11 232			4	Bushing	Bussning	4
0550	32	79 67 581		103)	2	Screw	Skruv	5
0555	32	79 65 684		104)	2	Screw	Skruv	6
0560	33	84 54 258			2	Clip	Clips	5
0570	34	*79 22 239*		NLS - USE 7965684	8	Screw	Skruv	5
0580	35	86 01 916			8	Clip nut	Clipsmutter	3
0590	36	82 77 519		LH	1	Rod	Stång	5
0600	36	82 77 527		RH	1	Rod	Stång	5
0610	36	69 97 134		LH, CV	1	Pull rod	Dragstång	5
0620	36	69 97 142		RH, CV	1	Pull rod	Dragstång	5
0630	37	84 53 755			4	Clip	Clips	5
0640	38	*94 03 098*		103) LH NLS - USE 4129094, 7974025	1	Handle	Handtag	5
0640								
0645	38	41 29 094		104) LH	1	Handle	Handtag	5

103. Ch. --L3006406, --L5001379, --L7016634
104. Ch. L3006407--, L5001380--, L7016635--
185. Ch. --M5006784
186. Ch. M5006785--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-C24

Door lock
3CK, 2SN

Dörrlås
3CK, 2SN

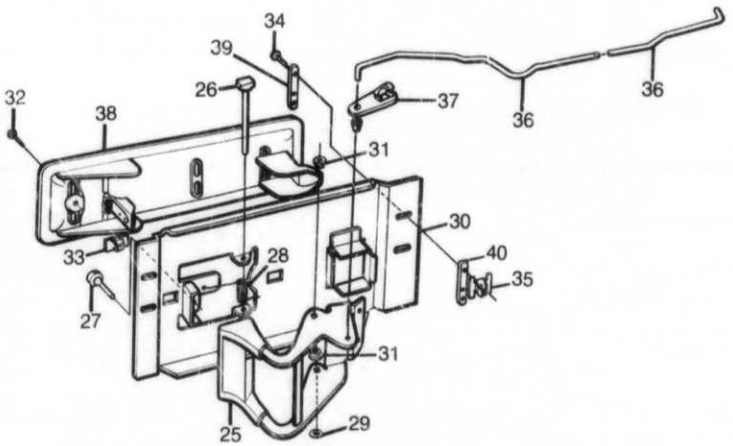

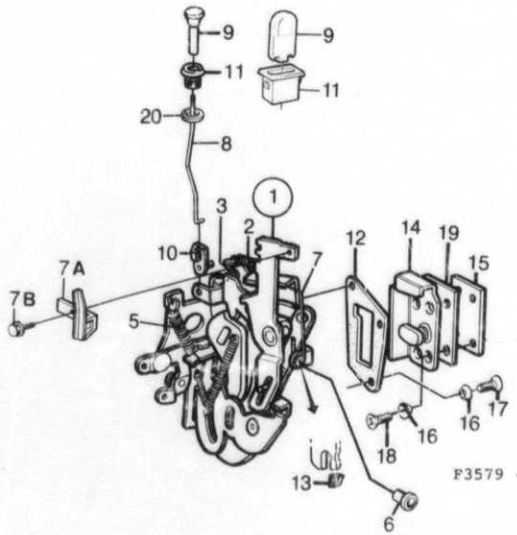

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	38	*94 03 106*		103) RH NLS - USE 4129102, 7974025	1	Handle	Handtag	
0650								
0655	38	41 29 102		104) RH	1	Handle	Handtag	5
0660	39	94 26 404			4	Washer	Bricka	6
0670	40	*98 05 326*		FOR DOOR TRIM WITH UPHOLSTERY PLATE NLS	4	Spacer washer	Distansbricka	5
0680								

103. Ch. --L3006406, --L5001379, --L7016634
104. Ch. L3006407--, L5001380--, L7016635--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D02

Door lock
Front, 4SN, 5CK

Dörrlås
Fram, 4SN, 5CK

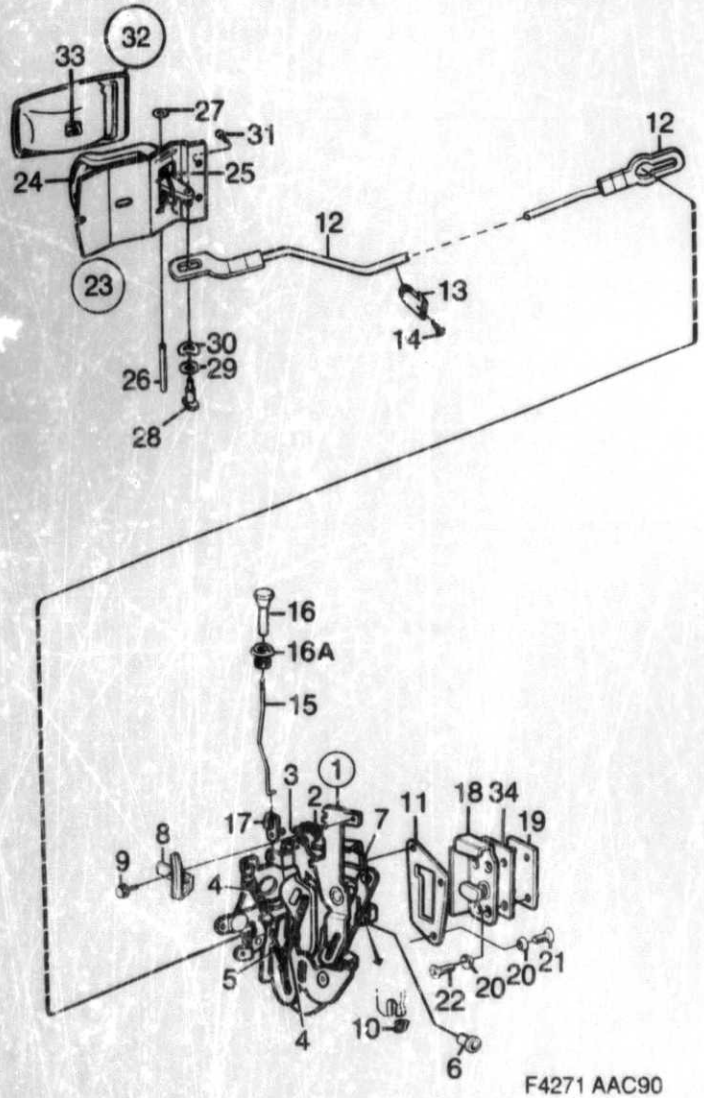

F4271 AACO90

0770	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0045	1	69 49 119		LH	1	Door lock	Dörrlås	4
0105	1	69 49 101		RH	1	Door lock	Dörrlås	4
0145	1	69 49 093		LH, RHD	1	Door lock	Dörrlås	4
0185	1	69 49 127		RH, RHD	1	Door lock	Dörrlås	4
0210	2	82 36 606			2	.Spring	.Fjäder	5
0220	3	84 57 566			2	.Spring	.Fjäder	5
0240	4	92 81 114			4	.Tension spring	.Dragfjäder	5
0260	5	92 85 602			2	.Spring	.Fjäder	5
0270	6	84 51 825			2	.Bushing	.Bussning	4
0280	7	84 51 817			2	.Link	.Länk	5
0290	8	82 56 372		LH	1	.Adjusting link	.Justeringslänk	5
0300	8	82 56 380		RH	1	.Adjusting link	.Justeringslänk	5
0310	9	92 24 544			2	.Screw	.Skruv	5
0320	10	84 56 808			2	Absorber	Dämpare	4
0330	11	84 56 006			2	Spacer	Mellanlägg	
0380	12	92 35 573		LH	1	Control link	Manöverlänk	5
0400	12	92 35 581		RH	1	Control link	Manöverlänk	5
0470	13	92 87 392			2	Guide	Styrning	5
0480	14	79 22 263			4	Screw	Skruv	5
0490	15	84 51 478		LH	1	Rod	Stång	5
0500	15	84 51 486		RH	1	Rod	Stång	5
0510	16	94 46 022			2	Button	Knapp	3
0515	16A	97 31 498			2	Bushing	Bussning	4
0520	17	84 61 675			2	Clip	Clips	5
0530	18	82 62 750		LH	1	End plate	Slutbleck	5
0550	18	82 62 768		RH	1	End plate	Slutbleck	5
0570	19	82 41 994			2	Nut plate	Mutterplatta	5
0580	20	79 34 136			14	Washer	Bricka	5
0600	21	*79 73 480*		NLS - USE 8055980	6	Screw	Skruv	5
0610	22	79 37 956			8	Screw	Skruv	5
0620	23	94 65 121		LH	1	Handle	Handtag	5
0640	23	94 65 139		RH	1	Handle	Handtag	5
0660	24	94 65 113			2	.Handle	.Handtag	5
0670	25	84 03 305			2	.Spring	.Fjäder	5
0680	26	*84 03 396*		NLS	2	.Rivet pin	.Nitstift	
0690	27	79 33 815			2	.Washer	.Bricka	5
0700	28	*84 08 460*		NLS	2	.Rivet	.Nit	5
0710	29	*84 08 478*		NLS	2	.Washer	.Bricka	
0720	30	*97 07 217*		NLS	2	.Washer	.Bricka	5
0730	31	79 22 420			6	Screw	Skruv	5
0740	32	84 45 785			2	Cover	Kåpa	4
0750	33	84 03 529			2	.Clip	.Clips	5
0755	34	84 74 553		-1991	2	Spacer	Mellanlägg	4
0760	34	69 96 813		1992-	X	Spacer	Mellanlägg	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch up paint	4-F12
Complete sets	4-F24

4-D04

Door lock
Rear, 4SN, 5CK

Dörrlås
Bak, 4SN, 5CK

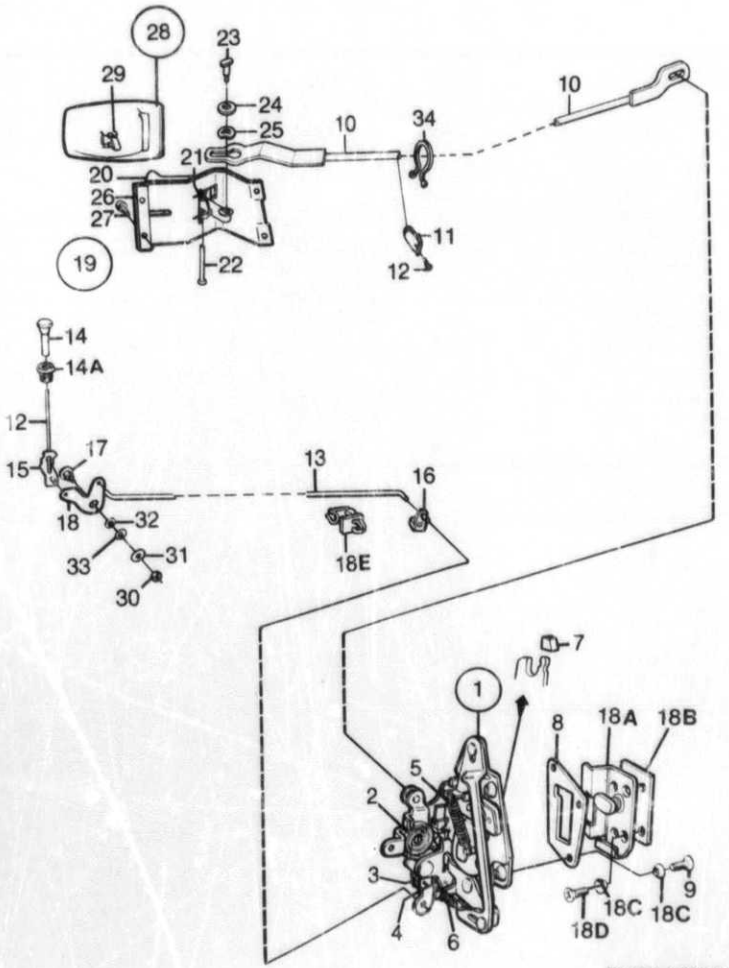

F4272 AAC90

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0805	1	40 10 278		LH	1	Door lock	Dörrlås	4
0825	1	40 10 286		RH	1	Door lock	Dörrlås	4
0840	2	*84 47 997*		NLS - USE 8287138	2	. Spring	. Fjäder	
0850	3	84 48 029			2	. Spring	. Fjäder	5
0860	4	84 57 566			2	. Spring	. Fjäder	5
0870	5	92 81 130			2	. Tension spring	. Dragfjäder	5
0880	6	82 87 153			2	. Spring	. Fjäder	5
0890	7	84 56 808			2	Absorber	Dämpare	4
0900	8	84 56 006			2	Spacer	Mellanlägg	
0920	9	79 73 472			6	Screw	Skruv	5
0970	10	92 35 805		LH	1	Control link	Manöverlänk	5
0990	10	92 35 813		RH	1	Control link	Manöverlänk	5
1060	11	92 87 392			2	Guide	Styrning	5
1070	12	79 22 263			2	Screw	Skruv	5
1080	12	82 67 130			2	Rod	Stång	5
1090	13	84 15 929			2	Rod	Stång	5
1110	14	94 46 022			2	Button	Knapp	3
1115	14A	97 31 498			2	Bushing	Bussning	4
1120	15	71 53 695			4	Clamp	Klammer	5
1130	16	84 53 755			2	Clip	Clips	5
1140	17	84 41 925			2	Screw	Skruv	6
1150	18	84 15 820		LH	1	Lever	Hävarm	6
1160	18	84 15 887		RH	1	Lever	Hävarm	6
1170	18A	82 62 768		LH	1	End plate	Slutbleck	5
1190	18A	82 62 750		RH	1	End plate	Slutbleck	5
1210	18B	82 41 994			2	Nut plate	Mutterplatta	5
1220	18C	79 34 136			14	Washer	Bricka	5
1230	18D	79 37 956			8	Screw	Skruv	5
1240	18E	84 44 614			2	Guide	Styrning	5
1250	19	94 73 802		LH	1	Handle	Handtag	5
1270	19	94 73 810		RH	1	Handle	Handtag	5
1290	20	94 65 113			2	. Handle	. Handtag	5
1300	21	84 03 305			2	. Spring	. Fjäder	5
1310	22	*84 03 396*		NLS	2	. Rivet pin	. Nitstift	
1320	23	*84 08 460*		NLS	2	. Rivet	. Nit	5
1330	24	*84 08 478*		NLS	2	. Washer	. Bricka	
1340	25	*97 07 217*		NLS	2	. Washer	. Bricka	5
1350	26	84 15 994		LH	1	. Base plate	. Bottenplatta	
1360	26	*84 16 000*		RH NLS	1	. Base plate	. Bottenplatta	
1370	27	79 22 420			14	Screw	Skruv	5
1380	28	84 45 785			2	Cover	Kåpa	4
1390	29	84 03 529			2	. Clip	. Clips	5
1400	30	79 10 474			2	Nut	Mutter	5
1410	31	79 15 663			2	Washer	Bricka	5
1420	32	*84 13 742*		NLS	2	Washer	Bricka	
1430	33	84 48 169			4	Plastic washer	Plastbricka	5
1450	34	79 71 864			2	Tensioning band	Spännband	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Doors, trunk lid

Dörrar, bagagerumslucka

4-D06

Trunk door, hinges
Lock

Bagagerumsdörr, gångjärn
Lås

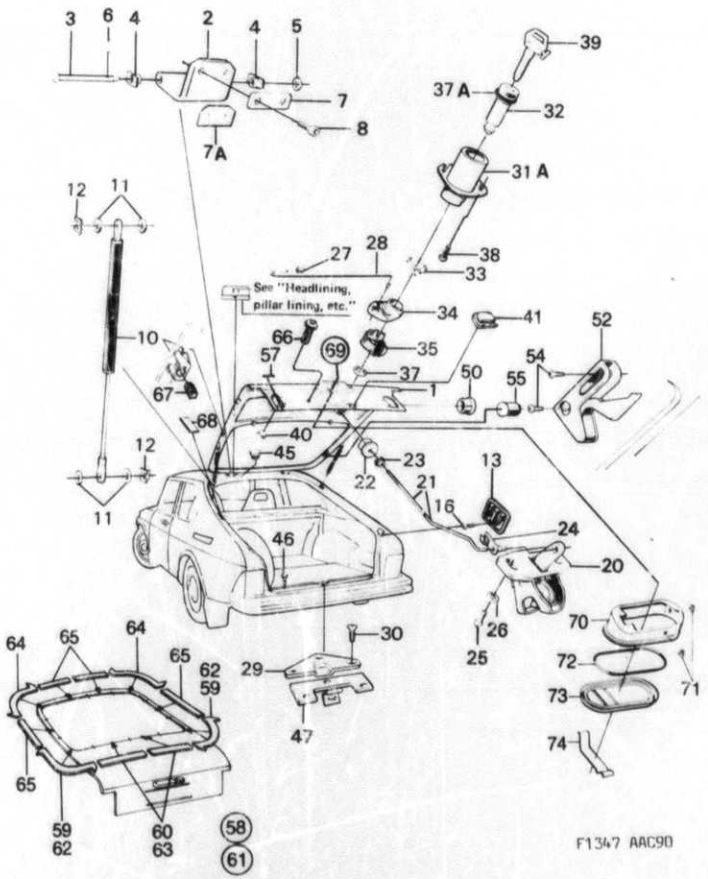

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 27 032			1	Trunk lid	Bagagelucka	4
0020	2	82 51 217			2	Hinge	Gångjärn	5
0030	3	82 52 868			2	Shaft	Axel	5
0040	4	82 88 144			4	Bushing	Bussning	3
0045	5	80 29 985		-1992	2	Washer	Bricka	5
0050	5	91 66 372		1993-	2	Washer	Bricka	5
0060	6	92 93 523			2	Lock needle	Låsnål	5
0070	7	82 52 314			2	Washer	Bricka	5
0080	7A	69 27 339		ZN-TAPE	2	Washer	Bricka	3
0090	8	92 33 719			4	Screw	Skruv	5
0100	10	92 31 796			2	Spring	Fjäder	3
0110	10	92 93 580		FOR CARS WITH REAR SPOILER	2	Spring	Fjäder	3
0120								
0130	11	82 52 363			8	Washer	Bricka	5
0140	12	82 52 553			4	Clip	Clips	5
0150	13	92 92 756			2	Guide	Styrning	5
0170	16	*79 73 373*		NLS - USE 8059396	4	Screw	Skruv	5
0180	20	40 90 130			1	Door lock	Dörrlås	5
0190	21	82 78 863			1	Pull rod	Dragstång	5
0200	22	84 60 172			1	Adjusting nut	Justermutter	5
0210	23	82 85 843			1	Grommet	Genomföring	4
0220	24	84 61 675			1	Clip	Clips	5
0230	25	80 97 883			2	Screw	Skruv	5
0240	26	80 29 969			2	Washer	Bricka	5
0250	27	84 51 825			1	Bushing	Bussning	4
0260	28	92 37 751			1	Control rod	Manöverstång	
0270	29	84 64 539			1	End plate	Slutbleck	5
0280	30	80 55 998			3	Screw	Skruv	5
0290	31A	82 83 772			1	Lock cylinder	Låscylinder	3
0300	32	82 83 780			1	.Lock cylinder	.Låscylinder	5
0310	33	84 51 957			1	.Spring	.Fjäder	5
0320	34	82 86 551			1	.Link	.Länk	5
0330	35	84 51 973			1	.Companion flange	.Medbringare	3
0340	37	84 51 981			1	.Ring	.Ring	4
0350	37A	84 52 252			1	.Seal	.Tätning	4
0360	39	84 70 767			X	Key blank	Nyckelämne	3
0370	40	71 62 308			1	Plug	Plugg	5
0380	41	69 27 677			1	Plug	Plugg	5
0390	45	71 63 066		132)	2	Plug	Plugg	5
0395	45	92 68 160		133)	2	Plug	Plugg	5
0400	46	70 35 801			2	Buffer	Buffert	3
0410	47	92 28 503			1	Washer	Bricka	5
0420	50	92 23 371			2	Cover	Lock	3
0430	52	97 36 935			1	Catch	Spärr	5
0440	54	79 73 647			2	Screw	Skruv	5
0450	55	94 12 636			1	Plug	Plugg	5
0460	57	92 37 272			2	Strip	List	
0470	58	*78 73 714*		TRUNK DOOR NLS	1	Repair kit	Reparationssats	
0490	59	92 84 498			2	.Attaching plate	.Fästplåt	5
0500	60	92 84 514			2	.Attaching plate	.Fästplåt	5
0510	61	78 73 722		TRUNK DOOR	1	Repair kit	Reparationssats	
0530	62	92 84 498			2	.Attaching plate	.Fästplåt	5
0540	63	92 84 514			2	.Attaching plate	.Fästplåt	5
0550	64	*92 84 480*		NLS	2	.Attaching plate	.Fästplåt	5
0560	65	92 84 506			4	.Attaching plate	.Fästplåt	5
0570	66	92 21 987		US	2	Plug	Plugg	5
0592	67	40 06 425	S	-1991	2	Buffer	Buffert	4
0600	67	43 04 234	S	1992-	2	Rubber buffer	Gummibuffert	4
0610	68	69 43 989	S		2	Guard	Skydd	6
0620	69			See page 3A-029, 2-B06		Handle	Handtag	
0630	70	69 41 330			1	Cover	Kåpa	4

132. Ch --L7021016
133. Ch L7021017--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D08

Trunk door, hinges
Lock

Bagagerumsdörr, gångjärn
Lås

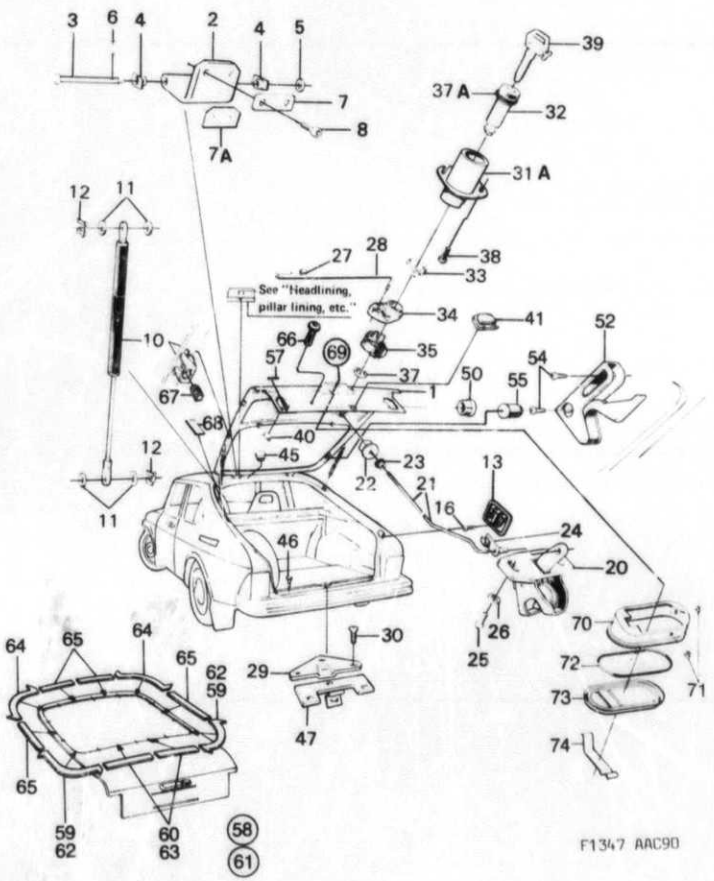

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	70	69 41 819		WITHOUT CENTRAL LOCK	1	Cover	Kåpa	4
0650	71	69 41 298		PART OF 6941330	2	. Grommet	. Genomföring	4
0655	71	69 41 298		PART OF 6941819	1	. Grommet	. Genomföring	4
0660	72	69 41 645			1	. Seal	. Tätning	4
0670	73	69 41 314			1	Cover	Täcklock	4
0680	74	69 41 660			1	Clamp	Klämma	6
0700								
1000		69 16 050		See page 8A-153, 4-G10	X	Buffer	Buffert	5
1010				FOR TRUNK DOOR				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D10

Trunk lid, hinges, lock
Baklucka, gångjärn, lås

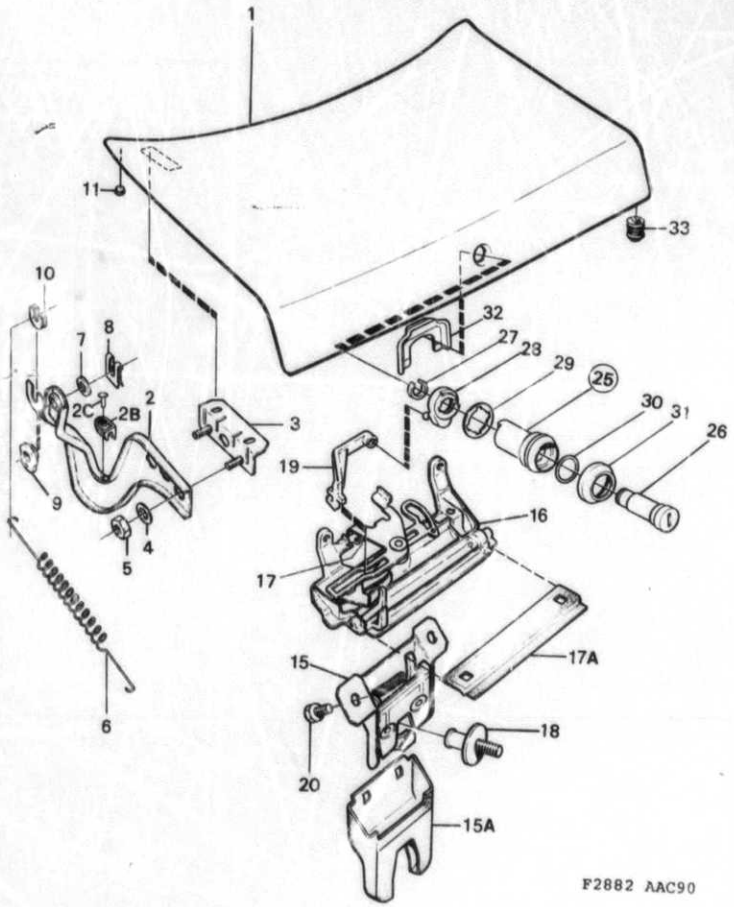

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 44 359			1	Trunk lid	Bagagelucka	4
0020	2	92 22 795		LH	1	Hinge	Gångjärn	5
0030	2	92 22 803		RH	1	Hinge	Gångjärn	5
0040	2B	92 31 515		LH	1	.Stop	.Stopp	5
0050	2B	92 31 523		RH	1	.Stop	.Stopp	5
0060	2C	*82 15 683*		NLS - USE 6287666	2	.Rivet	.Nit	
0070	3	92 22 837			2	Elbow	Vinkel	5
0080	4	70 61 328			8	Washer	Bricka	5
0090	5	79 67 953			8	Nut	Mutter	5
0100	6	69 19 013			2	Spring	Fjäder	5
0110	7	79 16 513			2	Washer	Bricka	5
0120	8	82 57 750			2	Locking	Låsning	5
0130	9	92 25 475			2	Bushing	Bussning	3
0140	10	92 25 483		LH	1	Protection	Skydd	5
0150	10	82 33 736		RH	1	Protection	Skydd	5
0160	10	82 33 736		RH, CV	2	Protection	Skydd	5
0170	11	71 62 308		CV	2	Plug	Plugg	5
0180	15	92 31 267			1	Lock	Lås	4
0190	15A	92 30 889			1	.Protection	.Skydd	6
0200	16	69 41 280			1	Handle	Handtag	5
0210	16	69 41 306		CL	1	Handle	Handtag	5
0220	17	82 89 738			1	.Tension spring	.Dragfjäder	5
0230	17A	69 37 999			1	.Seal	.Tätning	4
0240	18	92 35 078			1	End plate	Slutbleck	5
0250	19	82 89 753			1	Control link	Manöverlänk	5
0260	20	80 59 552			2	Screw	Skruv	5
0270	25	82 83 806			1	Lock cylinder	Låscylinder	5
0280	25	82 83 848		CL	1	Lock cylinder	Låscylinder	5
0290	26	84 86 409			1	.Lock cylinder	.Låscylinder	3
0300	26	*82 83 855*		CL NLS - USE 8486409	1	.Lock cylinder	.Låscylinder	
0310	27	84 51 981			1	.Ring	.Ring	4
0320	28	82 89 878			1	.Companion flange	.Medbringare	3
0330	28	92 33 917		CL	1	.Companion flange	.Medbringare	3
0340	29	82 89 886			1	.Spacer	.Mellanlägg	4
0350	30	84 52 252			1	.Seal	.Tätning	4
0360	31	82 89 894			1	.Cover	.Täcklock	5
0370	32	84 53 227			1	.Clip	.Clips	5
0380	33	*82 62 545*		-1991 NLS - USE 4304234	2	Stop	Stopp	
0390	33	43 04 234		1992-	2	Rubber buffer	Gummibuffert	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D12


Outside handle
Lock cylinder

Ytterhandtag
Låscylinder

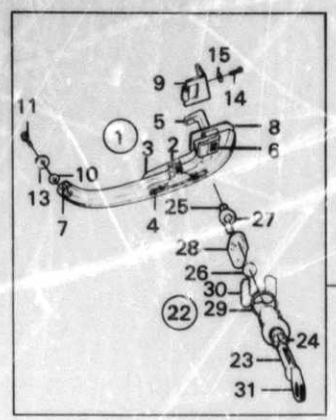





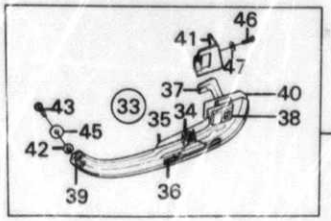

F1349 AAC90

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	82 49 161		-1990	2	Handle	Handtag	5
0030	1	92 27 935		110)	2	Handle	Handtag	5
0040	2	84 78 364			2	.Spring	.Fjäder	5
0060	3	82 49 914			2	.Clasp	.Trycke	5
0080	4	82 38 107			2	.Sliding plane	.Glidbana	5
0100	5	82 49 922			2	.Slide dog	.Glidklack	5
0130	6	69 40 712			2	.Guide	.Styrning	4
0140	7	82 38 115		LH	1	.Plastic bushing	.Plastbussning	4
0160	7	82 38 123		RH	1	.Plastic bushing	.Plastbussning	4
0190	8	69 40 704			2	Guide	Styrning	4
0225	9	69 11 291		LH	1	Bracket	Hållare	5
0230	9	69 11 309		RH	1	Bracket	Hållare	5
0265	9	69 11 275		LH, 5CK, 4SN	1	Bracket	Hållare	5
0270	9	69 11 283		RH, 5CK, 4SN	1	Bracket	Hållare	5
0280	10	84 29 441			2	Spacer	Mellanlägg	4
0310	11	80 59 230			2	Screw	Skruv	5
0360	13	73 98 878			2	Lock washer	Låsbricka	5
0380	14	80 59 578			2	Screw	Skruv	5
0390	14	79 81 921		CV	2	Screw	Skruv	5
0410	15	79 16 489			2	Washer	Bricka	5
0415	15	41 54 373		CV	2	Washer	Bricka	5
0420	22	84 87 597		LH, WITH 2 KEYS	1	Lock cylinder	Låscylinder	5
0460	22	84 87 605		RH, WITH 2 KEYS	1	Lock cylinder	Låscylinder	5
0500	23	84 86 409		WITH 2 KEYS	2	.Lock cylinder	.Låscylinder	3
0540	24	84 52 252			2	.Seal	.Tätning	4
0560	25	84 51 981			2	.Ring	.Ring	4
0580	26	84 51 957			2	.Spring	.Fjäder	5
0600	27	84 51 973			2	.Companion flange	.Medbringare	3
0620	28	84 51 965			2	.Link	.Länk	3
0640	29	84 08 361			2	.Gasket	.Packning	4
0660	30	84 53 227			2	Clip	Clips	5
0680	31	84 70 767			X	Key blank	Nyckelämne	3
0690								
0700	33	82 49 161		3) -1990	2	Handle	Handtag	5
0730	33	92 27 935		3,110)	2	Handle	Handtag	5
0740	34	84 78 364			2	.Spring	.Fjäder	5
0760	35	82 49 914			2	.Clasp	.Trycke	5
0780	36	82 38 107			2	.Sliding plane	.Glidbana	5
0800	37	82 49 922			2	.Slide dog	.Glidklack	5
0830	38	69 40 712			2	.Guide	.Styrning	4
0840	39	82 38 115		LH	1	.Plastic bushing	.Plastbussning	4
0860	39	82 38 123		RH	1	.Plastic bushing	.Plastbussning	4
0890	40	69 40 704			2	Guide	Styrning	4
0901	41	82 86 358			2	Bracket	Hållare	5
0920	42	84 29 441			2	Spacer	Mellanlägg	4
0950	43	80 59 230			2	Screw	Skruv	5
0985	45	73 98 878			2	Lock washer	Låsbricka	5
1000	46	80 55 980			2	Screw	Skruv	5
1020	47	79 34 136			2	Washer	Bricka	5

3. Rear Bakre
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D14


Lock — *Lås*

Lock cylinder set — *Låscylindersats*

1

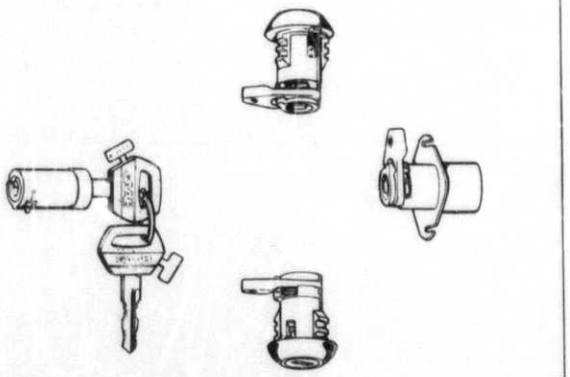

2

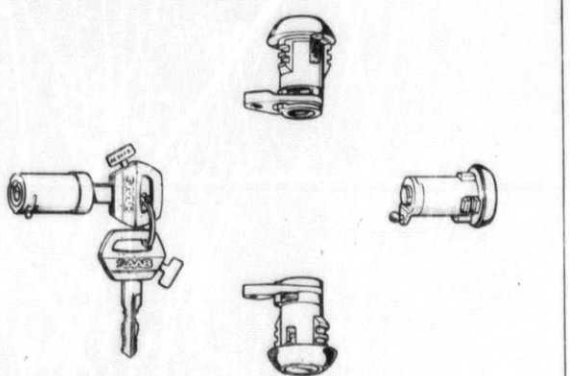

F1350 AAC90

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 27 927		CK	1	Lock cylinder set	Låscylindersats	5
0040				See page 8A-153, 4-G10				
0060								
0080	2	92 28 008		SN	1	Lock cylinder set	Låscylindersats	5
0100				See page 8A-153, 4-G10				
0120								
0140	2	92 31 002		SN, CL	1	Lock cylinder set	Låscylindersats	5
0180				See page 8A-153, 4-G10				
0200								
0220								
0240				64)		Lock	Lås	
0260								
0280								
0300								
0420		92 27 950		DOOR, LH	X	Lock cylinder	Låscylinder	3
0460		92 27 968		DOOR, RH	X	Lock cylinder	Låscylinder	3
0500		82 85 744		CK, TRUNKDOOR	X	Lock cylinder	Låscylinder	5
0540		82 89 852		SN, TRUNKDOOR	X	Lock cylinder	Låscylinder	5
0580		92 31 010		SN, CL, TRUNKDOOR	X	Lock cylinder	Låscylinder	5
0620		93 29 483		IGNITION	X	Lock cylinder	Låscylinder	3
0660		84 78 554			X	Spare key	Reservnyckel	5

64. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nyckel till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D16

Emblem

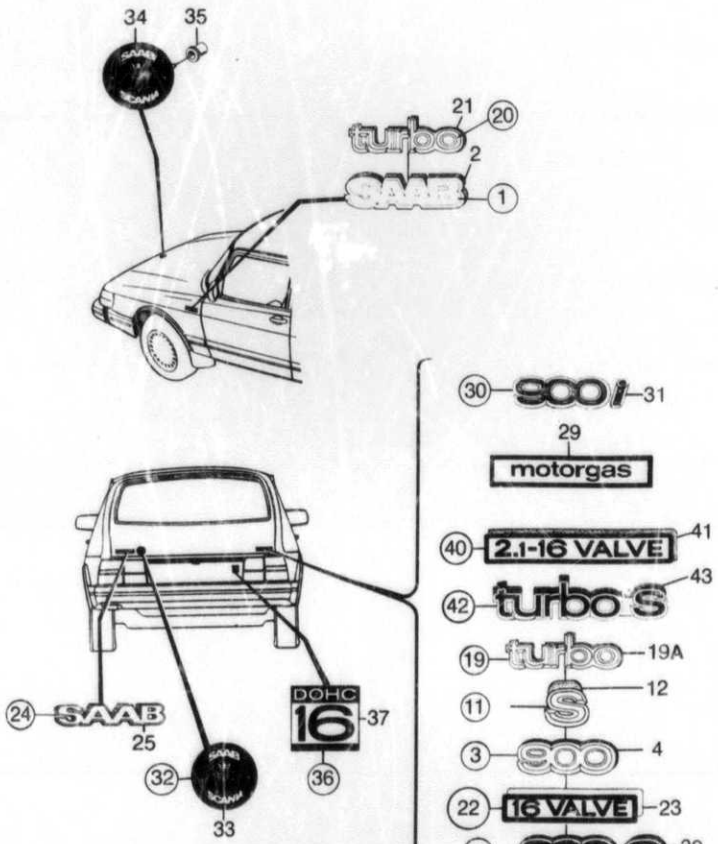

F3073 AAC90


0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 27 729		-1992	2	Emblem	Emblem	3
0020	2	92 27 711		-1992	2	.Tape	.Tape	3
0030	3	92 80 256			1	Emblem	Emblem	3
0040	3	92 23 223		4SN	1	Emblem	Emblem	3
0050	4	82 72 130			1	.Tape	.Tape	3
0060	11	92 80 314		US	1	Emblem	Emblem	3
0070	11	92 27 778		SN, US	1	Emblem	Emblem	3
0080	12	92 27 745		US	1	.Tape	.Tape	3
0090	19	92 80 298			1	Emblem	Emblem	3
0100	19	92 23 124		4SN	1	Emblem	Emblem	3
0110	19A	82 76 776			1	.Tape	.Tape	3
0120	20	92 93 986		-1990	2	Emblem	Emblem	3
0130	21	92 94 083		-1990	2	.Decal tape	.Emblemtejp	3
0140	22	69 17 751		B202 US,CA	1	Emblem	Emblem	3
0150	23	69 17 777		B202 US,CA	1	.Decal tape	.Emblemtejp	3
0160	24	92 80 173			1	Emblem	Emblem	3
0170	24	92 23 207		SN	1	Emblem	Emblem	3
0180	25	82 69 987			1	.Tape	.Tape	3
0190	29	*92 41 035*		NLS	1	Emblem	Emblem	3
0200	30	92 94 059		SN	1	Emblem	Emblem	3
0210	30	69 15 847		CK	1	Emblem	Emblem	
0220	31	92 94 075			1	.Decal tape	.Emblemtejp	3
0230	32	69 41 272		SN	1	Emblem	Emblem	3
0240	32	69 41 264		CK	1	Emblem	Emblem	3
0250	33	69 60 272			1	.Decal tape	.Emblemtejp	3
0260	34	69 11 895			1	Emblem	Emblem	3
0270	35	69 15 706			2	Bushing	Bussning	3
0280	36	92 93 911		B202	1	Emblem	Emblem	3
0290	37	92 93 937		B202	1	.Decal tape	.Emblemtejp	3
0300	38	69 38 112		-1990, SN	1	Emblem	Emblem	3
0310	38	69 38 120		-1990, CK	1	Emblem	Emblem	3
0320	39	69 38 153		-1990	1	.Tape	.Tejp	3
0330	40	41 72 748		1991-, B212	1	Emblem	Emblem	3
0340	41	41 72 763			1	.Decal tape	.Emblemtejp	3
0350	42	42 54 009		1991-, AERO	1	Emblem	Emblem	3
0360	42	41 72 979		1991-, CV AERO	1	Emblem	Emblem	3
0370	43	41 72 995			1	.Decal tape	.Emblemtejp	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

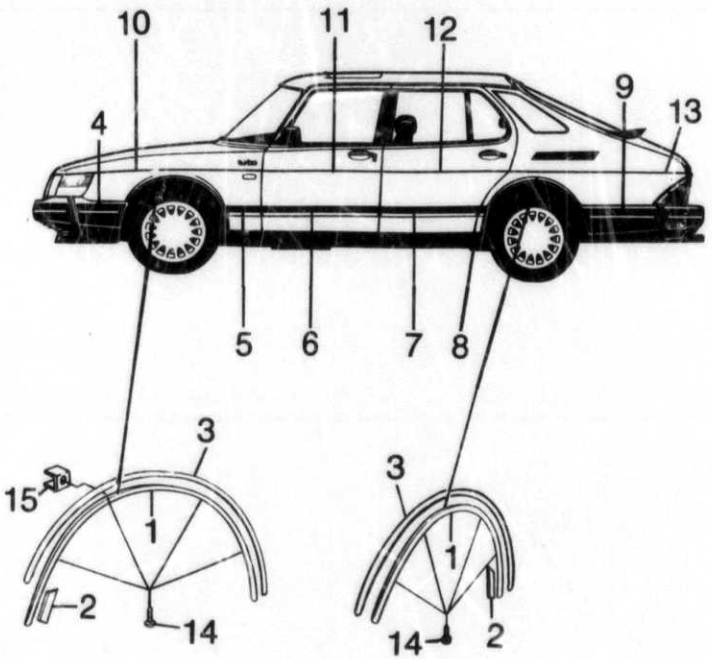

F3582 - AAC90

External details, glass, sealings

4-D18

Side mouldings

Utvändiga detaljer, glas, tätningslister

Sidodekorlist

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 47 857		-1991	4	Decor strip	Dekorlist	2
0020								
0030	1	43 40 709		2) 1992-, LH	1	Decor strip	Dekorlist	2
0040	1	43 40 717		2) 1992-, RH	1	Decor strip	Dekorlist	2
0050	1	43 40 725		3) 1992-, LH	1	Decor strip	Dekorlist	2
0060	1	43 40 733		3) 1992-, RH	1	Decor strip	Dekorlist	2
0070								
0080	1	69 47 857		1992-, US, CA, TW	4	Decor strip	Dekorlist	2
0090								
0100	1	69 18 510		2) AERO, LH	1	Decor strip	Dekorlist	2
0110	1	69 18 528		2) AERO, RH	1	Decor strip	Dekorlist	2
0120	1	69 18 536		3) AERO, LH	1	Decor strip	Dekorlist	2
0130	1	69 18 544		3) AERO, RH	1	Decor strip	Dekorlist	2
0140								
0150	1	43 20 065		1991-,2) JP, LH	1	Decor strip	Dekorlist	2
0160	1	43 20 073		1991-,2) JP, RH	1	Decor strip	Dekorlist	2
0170	1	43 20 081		1991-,3) JP, LH	1	Decor strip	Dekorlist	2
0180	1	43 20 099		1991-,3) JP, RH	1	Decor strip	Dekorlist	2
0190								
0200	2	69 48 798		2)	2	Decor strip	Dekorlist	2
0210	2	69 48 780		3)	2	Decor strip	Dekorlist	2
0220								
0230	3	40 10 104		AERO	4	Attaching strip	Fästlist	2
0240								
0250	4			See page 8A-131, 4-F12		Side part	Sidodel	
0260	5	92 36 894		LH	1	Decor strip	Dekorlist	2
0270	5	92 36 902		RH	1	Decor strip	Dekorlist	2
0280	6	92 36 910		LH, 2SN, 3CK, CV	1	Decor strip	Dekorlist	2
0290	6	92 36 928		RH, 2SN, 3CK, CV	1	Decor strip	Dekorlist	2
0300	6	92 36 993		5CK, 4SN	2	Decor strip	Dekorlist	2
0310	7	92 36 951		LH, 5CK, 4SN	1	Decor strip	Dekorlist	2
0320	7	92 36 969		RH, 5CK, 4SN	1	Decor strip	Dekorlist	2
0330	7	92 36 936		LH, 2SN, 3CK, CV	1	Decor strip	Dekorlist	2
0340	7	92 36 944		RH, 2SN, 3CK, CV	1	Decor strip	Dekorlist	2
0350	8	92 36 977		LH, 5CK, 4SN	1	Decor strip	Dekorlist	2
0360	8	92 36 985		RH, 5CK, 4SN	1	Decor strip	Dekorlist	2
0370	9			See page 8A-133, 4-F14		Side part	Sidodel	
0375								
0380	10	92 88 259		110)	2	Decor strip	Dekorlist	2
0390	10	92 88 267		70)	2	Decor strip	Dekorlist	2
0400	11	82 45 326		110) 3CK, 2SN, CV	2	Decor strip	Dekorlist	2
0410	11	92 82 922		70) 3CK, 2SN, CV	2	Decor strip	Dekorlist	2
0420	11	92 82 153		110) 4SN, 5CK	2	Decor strip	Dekorlist	2
0430	11	92 82 716		70) 4SN, 5CK	2	Decor strip	Dekorlist	2
0440	12	92 82 211		110) LH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0450	12	92 82 229		110) RH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0460	12	92 82 732		70) LH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0470	12	92 82 740		70) RH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0480	13	92 89 224		110) 2SN, 3CK, CV	2	Decor strip	Dekorlist	2
0490	13	92 89 232		70) 2SN, 3CK, CV	2	Decor strip	Dekorlist	2
0500	13	92 89 273		110) LH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0510	13	92 89 281		110) RH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0520	13	92 89 299		70) LH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0530	13	92 89 307		70) RH, 4SN, 5CK	1	Decor strip	Dekorlist	2
0535								
0540	14	79 77 796		AERO	16	Screw	Skruv	5
0550	15	69 41 678		AERO	16	Clip	Clips	5
0560	15	69 41 678		JP	16	Clip	Clips	5


2. Front Främre
3. Rear Bakre
70. Grey Grå
110. Black Svart
199. Ch. M2500001-, N7001863-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

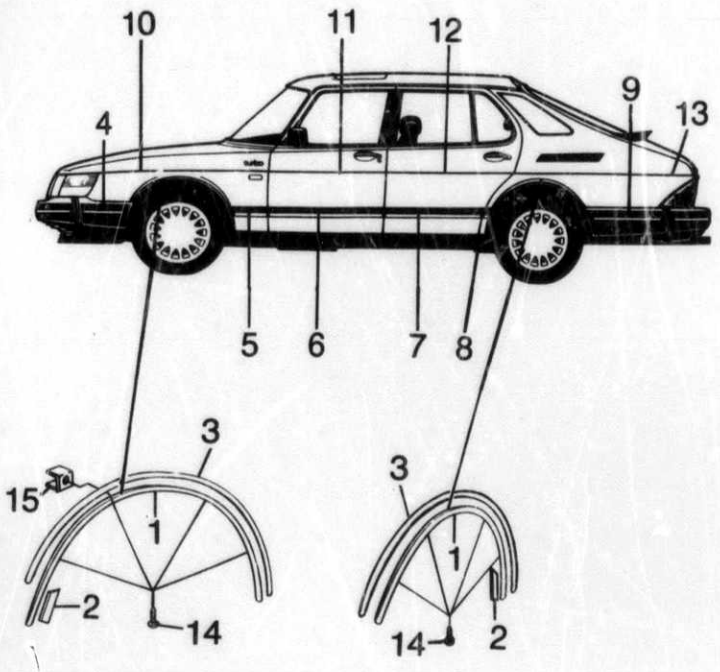

F3582 - AAC90

4-D20

External details, glass, sealings

Side mouldings

Utvändiga detaljer, glas, tätningslister

Sidodekorlist

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0561	15	69 41 678		FOR SIDESHIELD	4	Clip	Clips	5
0570		82 83 715		1 COIL=3M	X	Tape	Tape	3
0580		92 86 188		1 COIL=50M	X	Stripe	Dekortejp	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

External details, glass,

4-D22 *Air outlet, decor rear door*

Utvändiga detaljer, glas

Luftutsläpp, dekor bakdörr

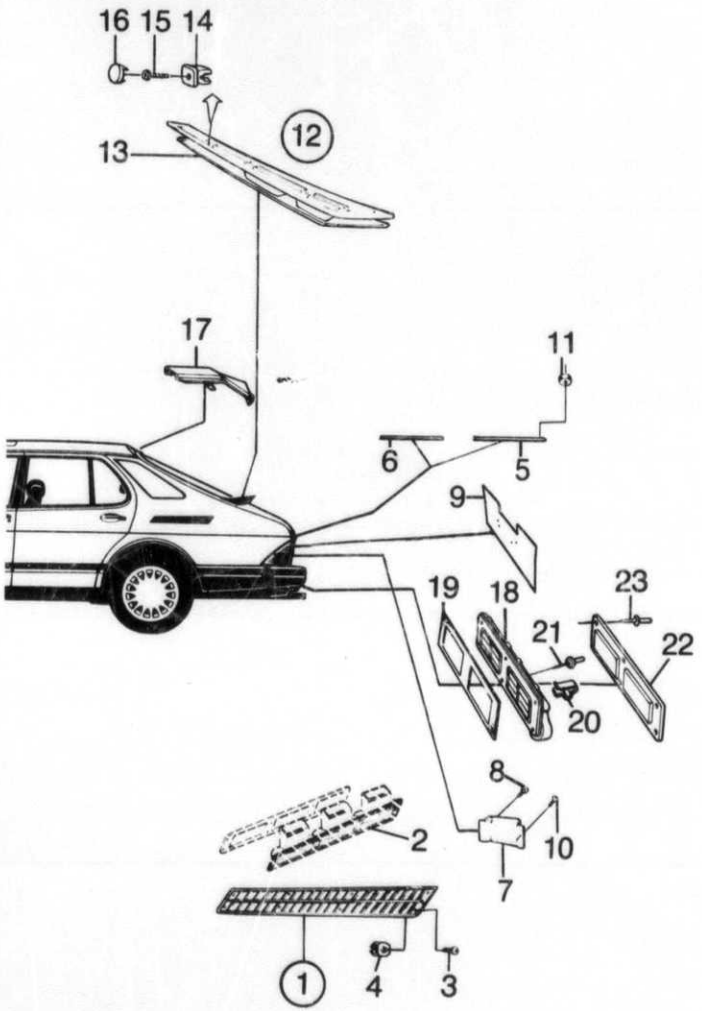

F3583 - AAC90

0955	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0110	1	82 87 179		LH	1	Decor frame	Dekorram	3
0130	1	82 87 187		RH	1	Decor frame	Dekorram	
0145	2			CK		Air outlet	Luftutsläpp	
0147				See page 8C-013, 5-J14				
0150	3	79 74 017			16	Screw	Skruv	5
0160	4	82 51 746			16	Clip	Clips	5
0170	5	92 94 174		LH	1	Strip	List	3
0190	6	92 94 182		RH	1	Strip	List	3
0210	7	69 21 159		US	1	Bracket	Hållare	5
0220	7	69 21 167		SN, US	1	Bracket	Hållare	5
0230	8	79 77 390		US	4	▲Screw	▲Skruv	5
0240	9	92 89 919		110)	1	Decor	Dekor	3
0260	10	80 59 560		US	2	Screw	Skruv	5
0270	11	79 73 365			4	Nut	Mutter	5
1184	12	69 41 777		LH, SN	1	Air outlet	Luftutsläpp	5
1194	12	69 41 785		RH, SN	1	Air outlet	Luftutsläpp	5
1200	13	92 27 539		LH SN	1	▲Sealing strip	▲Tätningslist	3
1210	13	92 27 547		RH SN	1	▲Sealing strip	▲Tätningslist	3
1220	14	92 36 589		SN	8	Clip	Clips	5
1230	15	79 22 230		SN	8	Screw	Skruv	5
1242	16	69 41 793		SN	8	Cover	Täcklock	3
1255	17	69 47 451		LH, CK	1	Protection	Skydd	3
1265	17	69 47 469		RH, CK	1	Protection	Skydd	3
1275	17	69 47 436		LH, SN	1	Decor	Dekor	3
1285	17	69 47 444		RH, SN	1	Decor	Dekor	3
1300	18	69 37 494		SN	1	Air outlet	Luftutsläpp	5
1310	19	92 90 594		SN	1	▲Seal	▲Tätning	5
1320	20	92 93 382		SN	4	▲Retainer	▲Hållare	5
1330	21	82 35 178		SN	6	Pop rivet	Popnit	5
1352	22	69 45 463		CK	1	Cover	Lock	5
1353						with gasket	med packning	
1360	23	82 35 178		CK	6	Pop rivet	Popnit	5
1390		82 83 715		1 COIL=3M	X	Tape	Tape	3
1400		92 86 188		1 COIL=50M	X	Stripe	Dekortejp	5
1420		92 88 127		L=770 MM	X	Tape	Tape	5

110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-D24 *Spoiler*

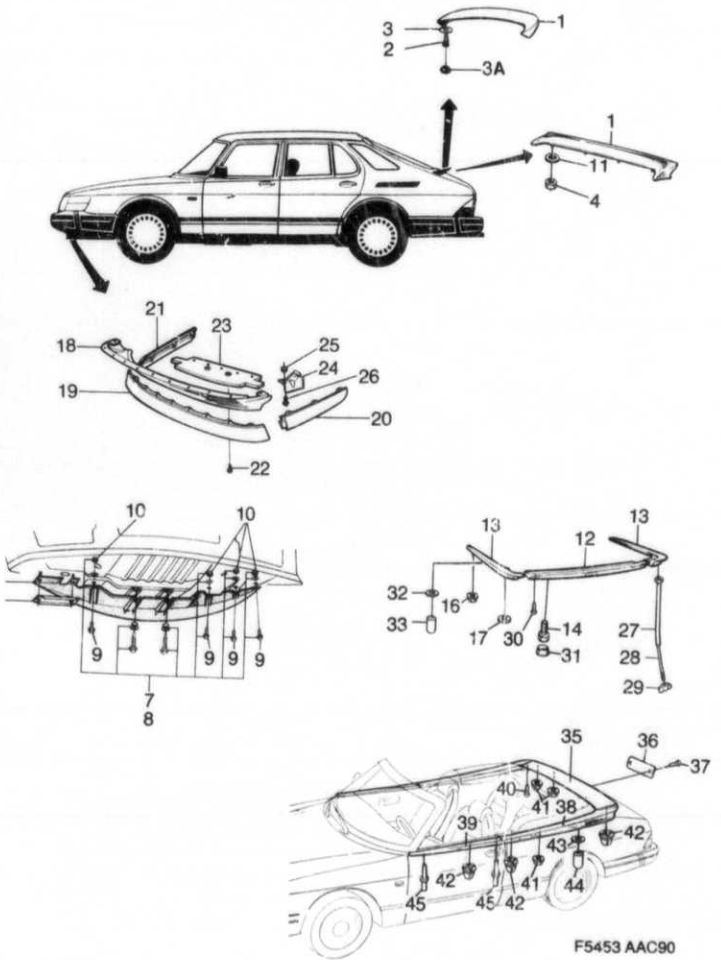

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 88 523		1) CK	1	Spoiler	Spoiler	3
0020				See page 8A-143, 4-F24				
0030	1	92 90 362		1) 4SN	1	Spoiler	Spoiler	3
0040				See page 8A-143, 4-F24				
0050	2	79 22 354		CK	9	Screw	Skruv	5
0060	3	92 28 255		CK	9	Washer	Bricka	5
0070	3A	82 64 962		CK	2	Plug	Plugg	5
0080	4	73 99 423		SN	5	Nut	Mutter	5
0090	6	82 67 403		-1991, ME	1	Diverter	Avledare	4
0100	7	*92 38 205*		ME NLS - USE 6929463	1	Mounting kit	Monteringssats	4
0110	7	69 29 483		ME, ALT TO 9238205	1	Mounting kit	Monteringssats	4
0120	8	92 30 327		TURBO ME	1	Mounting kit	Monteringssats	4
0130	9	79 69 223		-1991	4	.Screw	.Skruv	5
0140	10	79 71 658		-1991	4	.Nut	.Mutter	5
0150	11	92 30 293		SN	5	Washer	Bricka	5
0160	12	69 98 181		-1991, CV	1	Spoiler	Spoiler	3
0170	12	69 98 173		-1991, CV	1	Spoiler	Spoiler	3
0180				WITHOUT STOPLIGHT				
0190	13	69 98 207		-1991, LH, CV	1	Spoiler	Spoiler	3
0200	13	69 98 215		-1991, RH, CV	1	Spoiler	Spoiler	3
0210	14	79 71 658		-1991, CV	2	Nut	Mutter	5
0220	16	79 71 658		81) CV	6	Nut	Mutter	5
0230	16	79 71 658		82) -1991, CV	4	Nut	Mutter	5
0240	17	92 30 293		-1991, CV	6	Washer	Bricka	5
0250	18	92 94 265		110), I	1	Spoiler	Spoiler	3
0260	18	69 39 144		70) TURBO	1	Spoiler	Spoiler	3
0270	19	69 14 709			1	Spoiler	Spoiler	3
0280	20	69 14 717		LH	1	Spoiler	Spoiler	3
0290	21	69 14 725		RH	1	Spoiler	Spoiler	3
0300	22	79 76 988			20	Screw	Skruv	5
0310	22	79 73 225			5	Screw	Skruv	5
0320	23	69 38 369			1	Air shield	Luftskärm	3
0330	24	69 38 799		RH	1	Air shield	Luftskärm	4
0340	25	79 71 658			2	Nut	Mutter	5
0350	26	79 76 947			2	Screw	Skruv	5
0360	27	69 95 211		-1991, LH, CV	1	Bracket	Hållare	5
0370	27	69 95 229		-1991, RH, CV	1	Bracket	Hållare	5
0380	28	69 95 237		-1991, CV	2	Bracket	Hållare	5
0390	29	69 95 377		-1991, CV	2	Wing nut	Vingmutter	5
0400	30	79 70 536		-1991, CV	2	Screw	Skruv	6
0410	31	82 64 962		-1991, CV	2	Plug	Plugg	5
0420	32	69 99 957		82) -1991	2	Lock washer	Spärrbricka	5
0430	33	82 77 667		82) -1991	2	Sleeve	Hylsa	5
0440								
0450	35	41 53 334		1992-, CV	1	Spoiler	Spoiler	3
0460								
0470	35	41 53 383		1992-, CV	1	Spoiler	Spoiler	3
0480				WITHOUT STOPLIGHT				
0490	36	41 53 953		WITHOUT STOPPLIGHT	1	.Lens	.Lyktglas	2
0500	37	69 36 314			2	.Screw	Skruv	5
0510	38	41 53 342		1992-, LH, CV	1	Spoiler	Spoiler	3
0520	38	41 53 359		1992-, RH, CV	1	Spoiler	Spoiler	3
0530	39	41 53 367		1992-, LH, CV	1	Spoiler	Spoiler	3
0540	39	41 53 375		1992-, RH, CV	1	Spoiler	Spoiler	3
0550	40	79 22 354		1992-, CV	2	Screw	Skruv	5
0560	41	79 71 658		1992-, CV	6	Nut	Mutter	5
0570	42	40 13 454		1992-, CV	8	Clip	Clips	5
0580	43	69 99 957		1992-, CV	2	Lock washer	Spärrbricka	5

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
81. Ch. --L7011109
82. Ch. L7011110--
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E02 *Spoiler*

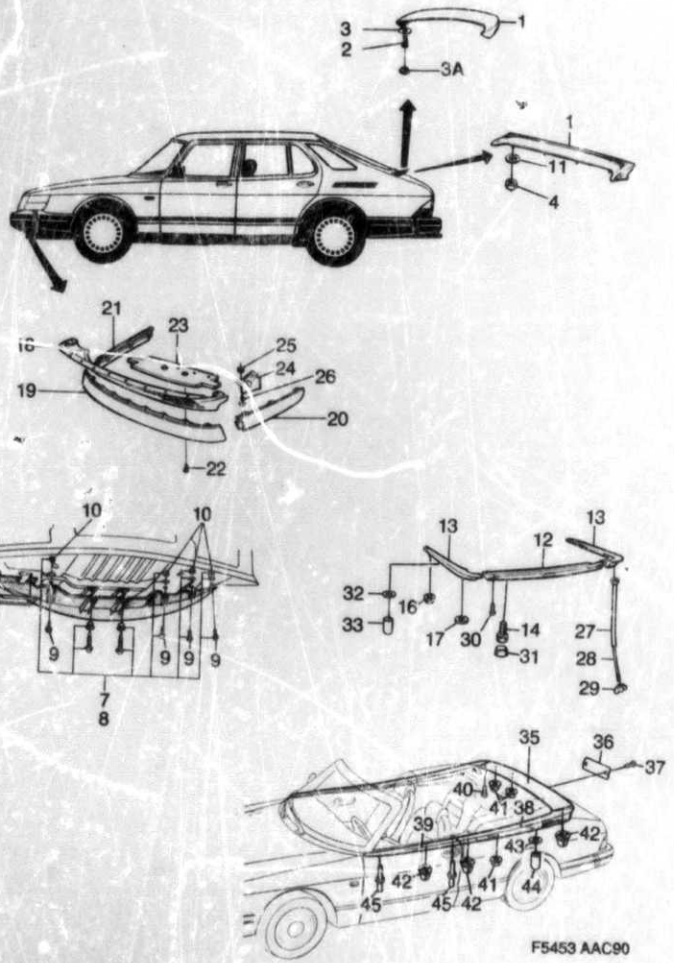

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	44	82 77 667		1992-, CV	2	Sleeve	Hylsa	5
0600	45	41 54 175		1992-, CV	4	Rivet	Nit	5
0610								
0620		92 88 812		See page 8A-143, 4-F24	1	Mounting kit	Monteringssats	3
0630		78 74 381		3) 4SN	1	Spoiler	Spoiler	5
0640				See page 8A-143, 4-F24				
0650		78 73 771		2)	1	Mounting kit	Monteringssats	3
0660				See page 8A-143, 4-F24				
0670		78 73 789		3) CK	1	Spoiler	Spoiler	3
0680				See page 8A-143, 4-F24				

2. Front Främre
3. Rear Bakre


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E04 *External mirror* *Utvändiga backspeglar*

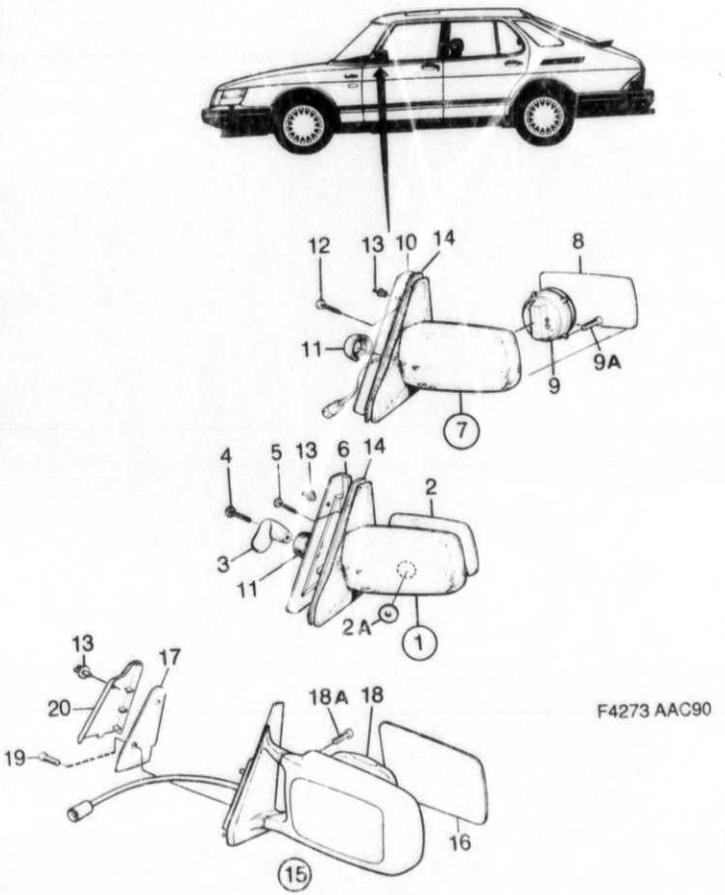

F4273 AAC90

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	98 33 104		LH, WIDE ANGLE	1	Mirror	Spegel	
0020	1	98 33 112		RH, CONVEX GLASS	1	Mirror	Spegel	3
0030	1	98 33 526		LH, JP, CONVEX GLASS	1	Mirror	Spegel	3
0040	1	98 33 120		LH, RHD, CONVEX GLASS	1	Mirror	Spegel	3
0050	1	98 33 138		RH, RHD, CONVEX GLASS	1	Mirror	Spegel	3
0060	1	98 33 161		-1992, LH, US, CA, FLAT GLASS	1	Mirror	Spegel	3
0070								
0080	1	98 33 179		-1992, RH, US, CA, CONVEX GLASS	1	Mirror	Spegel	3
0090								
0100	1	98 33 146		-1991, LH,RHD,FLAT GLASS	1	Mirror	Spegel	3
0110	1	98 33 153		RH, RHD, FLAT GLASS	1	Mirror	Spegel	3
0120	1	98 37 204		RH, RHD, GB, WIDE ANGLE	1	Mirror	Spegel	3
0130	2	98 33 286		LH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
0140	2	98 37 253		RH, RHD, GB, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
0150	2	98 33 326		LH, CONVEX	1	.Mirror glass	.Spegelglas	3
0160	2	98 33 302		RH, CONVEX	1	.Mirror glass	.Spegelglas	3
0170	2	98 33 344		-1992, LH, FLAT	1	.Mirror glass	.Spegelglas	3
0180	2	98 33 369		RH, RHD, FLAT	1	.Mirror glass	.Spegelglas	3
0190	2	98 33 385		-1992, RH, FOR MIRROR 9833179	1	.Mirror glass	.Spegelglas	3
0200								
0210	2A	97 36 950			2	.Gasket	.Packning	5
0220	3	98 47 377		LH	1	Lever	Spak	5
0230	3	98 47 385		RH	1	Lever	Spak	5
0240	4	79 72 789			2	Screw	Skruv	5
0250	5	79 72 813			4	Screw	Skruv	5
0260	6	*94 72 408*		LH NLS - USE 9708116	1	Cover plate	Täckplåt	4
0270	6	*94 72 416*		RH NLS - USE 9708124	1	Cover plate	Täckplåt	4
0280	7	98 33 203		53) LH, WIDE ANGLE	1	Rear view mirror	Backspegel	3
0290	7	98 33 211		53) RH, CONVEX GLASS	1	Rear view mirror	Backspegel	3
0300	7	98 33 229		53) LH, JP, CONVEX GLASS	1	Rear view mirror	Backspegel	3
0310	7	95 91 488		53) LH, HEATED, US, CA, FLAT GLASS	1	Rear view mirror	Backspegel	3
0320								
0330	7	95 91 744		53) RH, HEATED, US, CA, FLAT GLASS	1	Rear view mirror	Backspegel	3
0340								
0350	7	98 33 260		53) -1991, LH, RHD, FLAT GLASS	1	Rear view mirror	Backspegel	3
0360								
0370	7	98 33 278		53) RH, RHD, FLAT GLASS	1	Rear view mirror	Backspegel	3
0380	7	98 33 245		53) LH,RHD, CONVEX GLASS	1	Rear view mirror	Backspegel	3
0390	7	98 33 252		53) RH,RHD, CONVEX GLASS	1	Rear view mirror	Backspegel	3
0400	7	98 37 196		53) RH, RHD, GB, WIDE ANGLE	1	Rear view mirror	Backspegel	3
0410								
0420	8	98 33 559		LH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
0430	8	98 37 246		RH, RHD, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
0440	8	98 33 575		RH, CONVEX	1	.Mirror glass	.Spegelglas	3
0450	8	98 33 591		LH, CONVEX	1	.Mirror glass	.Spegelglas	3
0460	8	98 33 518		-1991, LH, FLAT	1	.Mirror glass	.Spegelglas	3
0470	8	98 33 617		RH, FLAT	1	.Mirror glass	.Spegelglas	3
0480	8	97 97 093		LH, HEATED, FLAT	1	.Mirror glass	.Spegelglas	3
0490	8	97 97 101		RH, HEATED, CONVEX	1	.Mirror glass	.Spegelglas	3
0500	9	94 72 572			2	.Drive unit	.Drivenhet	5
0510	9A	*94 75 666*		NLS - USE 7972813	8	.Screw	.Skruv	5
0520	10	94 72 424		LH	1	Cover	Kåpa	4
0530	10	94 72 432		RH	1	Cover	Kåpa	4
0540	11	94 68 901			2	Seal	Tätning	5
0550	12	79 72 813			4	Screw	Skruv	5
0560	13	94 68 893			2	Clip	Clips	5
0570	14	94 65 436		LH	1	Gasket	Packning	5
0580	14	94 65 444		RH	1	Gasket	Packning	5
0590								

53. Electrically operated Elektrisk manövrering

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E06

External mirror
Utvändiga backspeglar

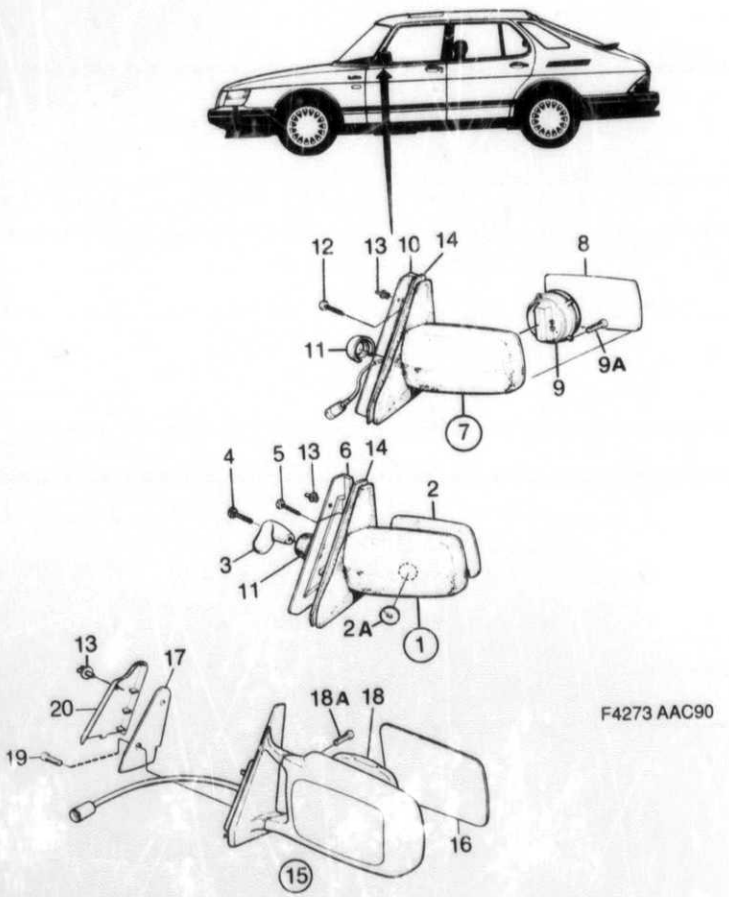

F4273 AAC90

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	15	*95 91 496*		53) -1991 LH	1	Rear view mirror	Backspegel	3
0610				CV, FLAT GLASS				
0620				US, CA, HEATED NLS - USE 4168324				
0630	15	*95 91 736*		53) -1991 RH	1	Rear view mirror	Backspegel	3
0640				CV, CONVEX GLASS				
0650				US, CA, HEATED NLS - USE 4168373				
0660	15	*96 15 287*		53) -1991 LH, CV, JP NLS - USE 4168316	1	Rear view mirror	Backspegel	3
0670	15	*96 15 295*		53) -1991 RH, CV, SE, FI, EU, JP NLS - USE 4168365	1	Rear view mirror	Backspegel	3
0680	15	*96 15 303*		53) -1991 LH, CV	1	Rear view mirror	Backspegel	3
0690				SE, FI, EU NLS - USE 4168308				
0700	15	96 15 311		53) -1991 LH, CV, AU	1	Rear view mirror	Backspegel	3
0710	15	*96 15 329*		53) -1991 RH, CV, AU NLS - USE 4168340	1	Rear view mirror	Backspegel	3
0720	15	*96 15 337*		53) -1991 LH, CV, GB, FE NLS - USE 4168381	1	Rear view mirror	Backspegel	3
0730	15	*96 15 345*		53) -1991 RH, CV, FE NLS - USE 4168332	1	Rear view mirror	Backspegel	3
0740	15	*96 15 352*		53) -1991 RH, CV, GB NLS - USE 4168357	1	Rear view mirror	Backspegel	3
0750								
0760	15	41 68 324		53) 1992- LH	1	Rear view mirror	Backspegel	3
0770				CV, FLAT GLASS				
0780				US, CA, HEATED				
0790	15	41 68 373		53) 1992- RH	1	Rear view mirror	Backspegel	3
0800				CV, CONVEX GLASS				
0810				US, CA, HEATED				
0820	15	41 68 316		53) 1992- LH, CV, JP	1	Rear view mirror	Backspegel	3
0830	15	41 68 365		53) 1992- RH, CV, SE, FI, EU, FE, JP	1	Rear view mirror	Backspegel	3
0840	15	41 68 308		53) 1992- LH, CV	1	Rear view mirror	Backspegel	3
0850				WIDE ANGLE				
0860				SE, FI, EU, JP				
0870	15	41 68 340		53) 1992- RHD, RH, CV, AU	1	Rear view mirror	Backspegel	3
0880	15	41 68 381		53) 1992- RHD, LH, CV, GB, FE, JP, AU	1	Rear view mirror	Backspegel	3
0890	15	41 68 332		53) 1992- RHD, RH, CV, FE, JP	1	Rear view mirror	Backspegel	3
0900	15	41 68 357		53) 1992- RHD, RH, CV GB	1	Rear view mirror	Backspegel	3
0910								
0920								
0930	16	95 91 868		LH, FLAT GLASS CV, US	1	.Mirror glass	.Spegelglas	3
0940	16	95 91 660		RH, CONVEX GLASS CV, US	1	.Mirror glass	.Spegelglas	3
0950	16	96 17 242		LH, CV, JP, GB, FE	1	.Mirror glass	.Spegelglas	3
0960	16	96 17 259		RH, CV, SE, FI, EU, JP, FE	1	.Mirror glass	.Spegelglas	3
0970	16	96 17 275		LH, CV, SE, FI, EU	1	.Mirror glass	.Spegelglas	3
0980	16	96 17 226		-1991, LH, CV, AU	1	.Mirror glass	.Spegelglas	3
0990	16	96 17 242		1992-, LH, CV, AU	1	.Mirror glass	.Spegelglas	3
1000	16	96 17 234		RH, CV, AU	1	.Mirror glass	.Spegelglas	3
1010	16	96 17 283		RH, CV, GB	1	.Mirror glass	.Spegelglas	3
1020	17	98 82 093		CV	2	.Seal	.Tätning	5
1030	18	97 76 584		CV	2	.Drive unit	.Drivenhet	5
1040	18A	*94 75 666*		CV NLS - USE 7972813	8	.Screw	.Skruv	5
1050								
1060								
1070								
1080								
1090								
1100								
1110								
1120								

53. Electrically operated Elektrisk manövrering


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4--E08 External mirror
Utvändiga backspeglar

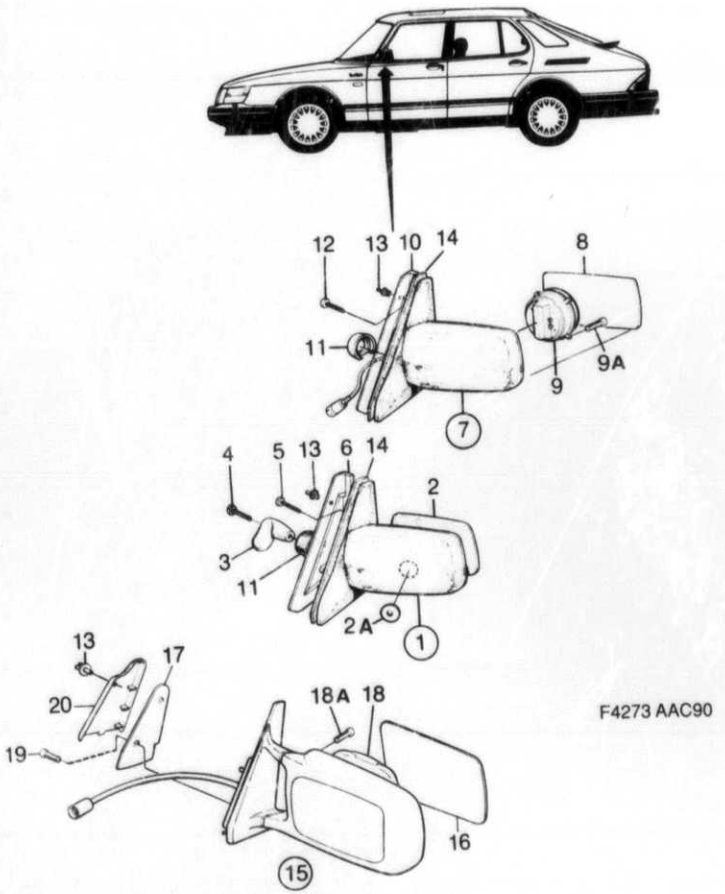

F4273 AAC90

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1130	19	79 72 813		CV	4	Screw	Skruv	5
1140	20	98 83 331		LH, CV	1	Cover	Täcklock	4
1150	20	98 83 349		RH, CV	1	Cover	Täcklock	4
1160		85 46 970		See page 8A-145, 4-G02	X	Rear view mirror kit	Backspegelsats	4
1170		85 46 962		RHD	X	Rear view mirror kit	Backspegelsats	4
1180				See page 8A-145, 4-G02				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E10

External details, glass, sealings
Aero-kit

Utvändiga detaljer, glas, tätningslister
Aero-kit

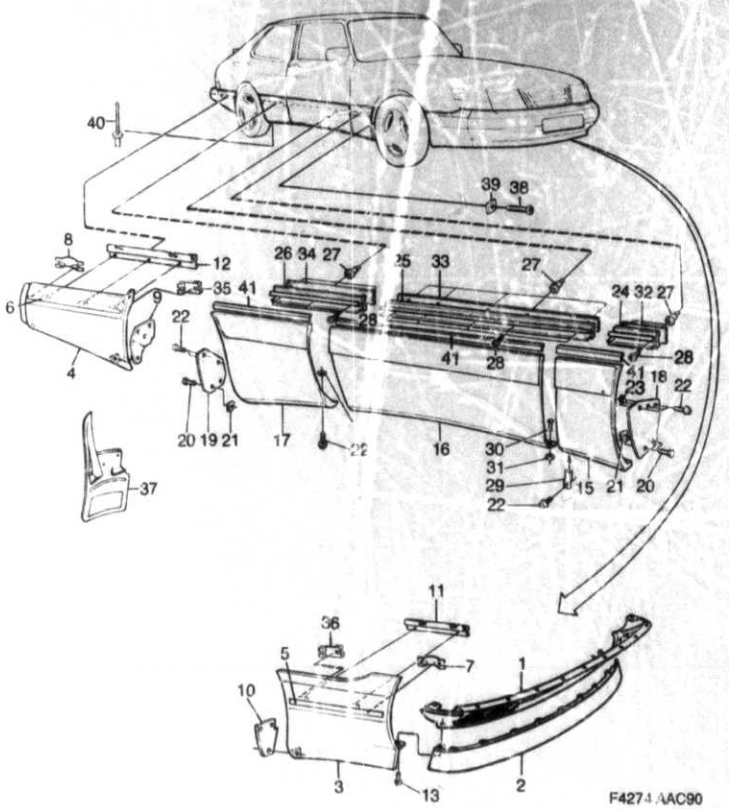


F4274 AAC90

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0020	1	69 39 144		70)	1	Spoiler	Spoiler	3
0040	2	69 14 709			1	Spoiler	Spoiler	3
0070	3	69 42 551		LH	1	Shield	Skydd	2
0080	3	69 42 569		RH	1	Shield	Skydd	2
0100	4	69 15 078		LH	1	Shield	Skydd	2
0110	4	69 38 435		LH, SN, CV	1	Shield	Skydd	2
0120	4	69 15 086		RH	1	Shield	Skydd	2
0130	4	69 38 443		RH, SN, CV	1	Shield	Skydd	2
0140	5	69 40 340			2	Decor strip	Dekorlist	2
0160	6	69 40 373			2	Decor strip	Dekorlist	2
0180	7	69 59 142			2	Spring	Fjäder	2
0200	8	69 59 142			2	Spring	Fjäder	4
0220	9	69 28 220		55) LH	1	End piece	Ändstycke	3
0230	9	69 38 625		55) LH, SN, CV	1	End piece	Ändstycke	3
0240	9	69 28 238		55) RH	1	End piece	Ändstycke	3
0250	9	69 38 633		55) RH, SN, CV	1	End piece	Ändstycke	3
0260	10	69 15 094		LH	1	End piece	Ändstycke	3
0280	10	69 28 303		RH	1	End piece	Ändstycke	3
0300	11	69 37 148		LH	1	Attaching plate	Fästplatta	5
0320	11	69 37 155		RH	1	Attaching plate	Fästplatta	5
0340	12	69 37 346		LH	1	Attaching fitting	Fästbeslag	5
0360	12	69 37 353		RH	1	Attaching fitting	Fästbeslag	5
0380	13	79 76 988			19	Screw	Skruv	6
0420	15	69 12 430		LH	1	Shield	Skydd	2
0440	15	69 12 448		RH	1	Shield	Skydd	2
0460	16	69 12 539		LH	1	Shield	Skydd	2
0480	16	69 12 547		RH	1	Shield	Skydd	2
0500	17	69 11 176		LH	1	Shield	Skydd	2
0520	17	69 11 184		RH	1	Shield	Skydd	2
0540	18	92 85 375			2	End piece	Ändstycke	5
0560	19	92 85 867			2	End piece	Ändstycke	5
0600	20	79 75 774			16	Screw	Skruv	5
0620	21	79 68 001			16	Clip nut	Clipsmutter	5
0640	22	79 75 782			20	Screw	Skruv	5
0650	23	92 30 293			20	Washer	Bricka	5
0660	24	92 93 697		LH	1	Attaching profile	Fästprofil	5
0680	24	69 15 201		RH	1	Attaching profile	Fästprofil	5
0700	25	69 10 830		LH	1	Attaching profile	Fästprofil	5
0720	25	69 10 843		RH	1	Attaching profile	Fästprofil	5
0740	26	92 93 739			2	Attaching profile	Fästprofil	5
0760	27	69 11 804			16	Bushing	Bussning	2
0780	28	79 22 354			16	Screw	Skruv	5
0800	29	69 21 415			2	Brace	Bygel	5
0820	30	69 16 977			12	Blind rivet	Blindnit	5
0840	31	80 73 090			12	Washer	Bricka	5
0860	32	69 19 195			2	Spacer	Mellanlägg	3
0880	33	69 19 849			2	Spacer	Mellanlägg	3
0900	34	69 19 542			2	Spacer	Mellanlägg	3
0960	35	69 40 175		2) LH 3) RH	2	Clamp	Klämmer	5
0962								
0980	36	69 40 183		2) RH 3) LH	2	Clamp	Klämmer	5
0982								
1000	37	69 37 650		LH, AU, JA, CA	1	Baffle	Stänkskydd	3
1020	37	69 37 643		RH, AU, JA, CA	1	Baffle	Stänkskydd	3
1040	38	79 70 601			4	Screw	Skruv	5
1060	39	92 30 293			4	Washer	Bricka	5
1080	40	82 35 178			4	Pop rivet	Popnit	5
1100	41	69 14 352		L=1028 MM, CUT TO SUITABLE LENGTH	X	Strip	List	3
1120								

2. Front Främre
55. For cars without rear mud guard. För bilar utan bakre stänkskydd.
70. Grey Grå

MASTER INDEX
0 General 1-A02
2 Engine 2-A02
2A Electrical, general 2-A02
2B Electrical, harness 2-B02
connectors
3 Transmission 3-A01
5 Brakes 5-A02
6 Front suspension, 6-A02
steering
7 Steering wheel, 7-A02
wheels, tyres
8A Body, general 8-A01
8B Body, panels 8-A02
8C Body, sealing and 8-A02
ventilation
9 Heat, climate 9-A02
10 Numerical register C-A02
8A GROUP INDEX
Main body 4-A06
Hood, front, fenders 4-C08
Doors, trunk lid 4-C14
External details, 4-D16
glass, sealings
Bumpers and touch-up 4-E12
paint
Complete sets 4-F24

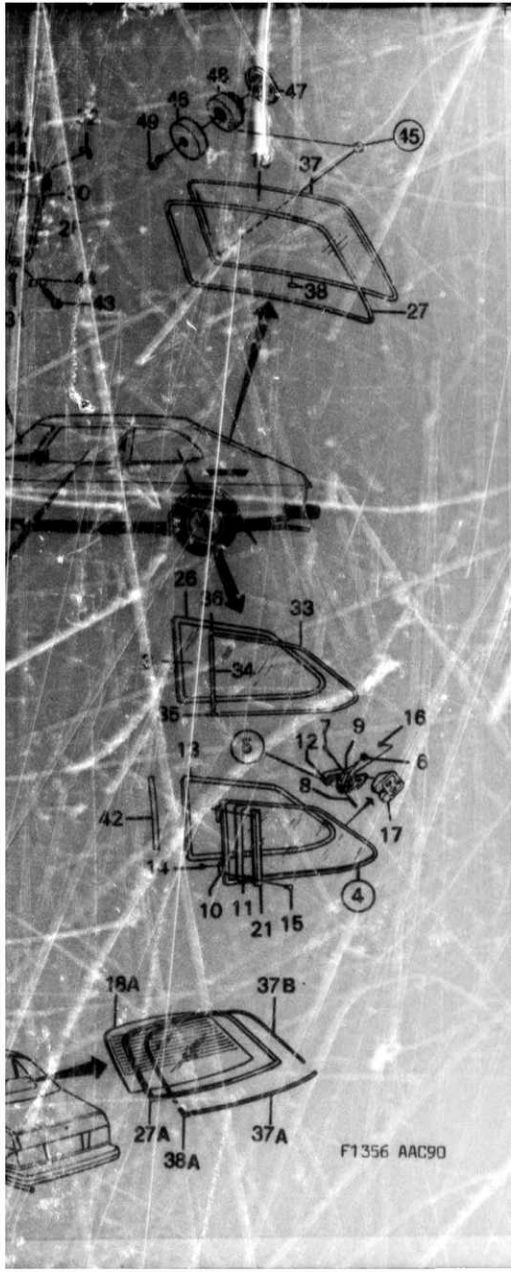

External details, glass, sealings

4-E12

Glass, sealings 3CK, 2SN

Utvändiga detaljer, glas, tätningslister

Glas,tätn. lister 3CK,2SN

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 57 511			1	Windscreen	Vindruta	
0020	1	92 80 439		56)	1	Windscreen	Vindruta	3
0040	2	82 73 633		LH	1	Door window	Dörruta	4
0050	2	92 80 355		56) LH	1	Door window	Dörruta	
0070	2	82 73 641		RH	1	Door window	Dörruta	5
0080	2	92 80 363		56) RH	1	Door window	Dörruta	
0090								
0100	3	82 87 732		LH	1	Side window	Sidoruta	5
0110	3	82 87 740		RH	1	Side window	Sidoruta	5
0120	3	42 51 153		56) LH	1	Side window	Sidoruta	5
0130	3	42 51 146		56) RH	1	Side window	Sidoruta	5
0135								
0140	4	69 41 918		57) LH	1	Side window	Sidoruta	5
0180	4	69 41 926		57) RH	1	Side window	Sidoruta	5
0230	4	69 41 934		56,57) LH	1	Side window	Sidoruta	5
0290	4	69 41 942		56,57) RH	1	Side window	Sidoruta	5
0360	4	69 41 959		56,57) LH, BLACK FRAME	1	Side window	Sidoruta	5
0440	4	69 41 967		56,57) RH, BLACK FRAME	1	Side window	Sidoruta	5
0480	5	84 01 150			2	.Lock	.Lås	4
0490	6	73 40 839			2	..Ball	..Kula	5
0500	7	79 18 279			2	..Roll pin	..Spännstift	5
0510	8	*79 16 253*		NLS	2	..Roll pin	..Spännstift	5
0520	9	*79 48 995*		NLS	2	..Washer	..Bricka	5
0540	10	69 41 892			4	.Hinge	.Gångjärn	5
0550	11	92 86 973		LH	1	.Decor strip	.Dekorlist	4
0570	11	82 86 981		RH	1	.Decor strip	.Dekorlist	4
0570	11	82 88 516		110) LH	1	.Decor strip	.Dekorlist	4
0580	11	82 88 524		110) RH	1	.Decor strip	.Dekorlist	4
0580	12	79 18 279			2	Roll pin	Spännstift	5
0600	13	82 51 639			2	Sealing strip	Tätningslist	5
0610	14	79 36 701		187)	8	Screw	Skruv	
0610	14	92 91 345		187) FOR BLACK DECOR	8	Screw	Skruv	5
0625	14	92 20 880		188)	8	Rivet	Nit	5
0630	15	92 89 844			6	Pop rivet	Popnit	5
0640	16	79 22 446			6	Screw	Skruv	5
0650	17	73 44 476			2	Crash pad	Stötskydd	5
0670	18	92 80 488		56)US,WITHOUT WIPER HOLE	1	Rear window	Bakruta	4
0684	18	69 38 013		FOR WIPER	1	Rear window	Bakruta	4
0686	18	69 38 187		56) FOR WIPER	1	Rear window	Bakruta	4
0690	18A	92 20 161		2SN	1	Rear window	Bakruta	5
0700	18A	92 80 496		56) 2SN	1	Rear window	Bakruta	4
0720	19	69 38 096			2	Window bracket	Rutfäste	5
0730	20	92 87 111			2	Spacer	Mellanlägg	5
0740	21	92 37 033		LH	1	Cover plate	Täckplåt	5
0750	21	92 37 [illegible] 1		RH	1	Cover plate	Täckplåt	5
0760	25	92 93 051			1	Rubber moulding	Gummilist	4
0770	25	69 93 596		AIR-BAG	1	Rubber moulding	Gummilist	4
0780	26	92 86 192		LH	1	Rubber moulding	Gummilist	5
0800	26	92 88 200		RH	1	Rubber moulding	Gummilist	5
0820	27	92 31 499			1	Rubber moulding	Gummilist	4
0840	27A	92 35 516		2SN	1	Rubber moulding	Gummilist	4
0860	28	92 26 481			1	Decor strip	Dekorlist	3
0880	28	82 69 433		110)	1	Decor strip	Dekorlist	3
0900	29	*82 36 762*		NLS - USE 9226473	1	Decor strip	Dekorlist	3
0920	29	82 37 265		110)	1	Decor strip	Dekorlist	3
0940	30	92 26 499			2	Decor strip	Dekorlist	3
0960	30	82 69 425		110)	2	Decor strip	Dekorlist	3
0980	31	92 93 085			2	Connector	Skarvstycke	3


56. Bronze-colour Bronsfärg
57. Opening Öppningsbar
110. Black Svart
187. Ch. --M5002642
188. Ch. M5002643--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

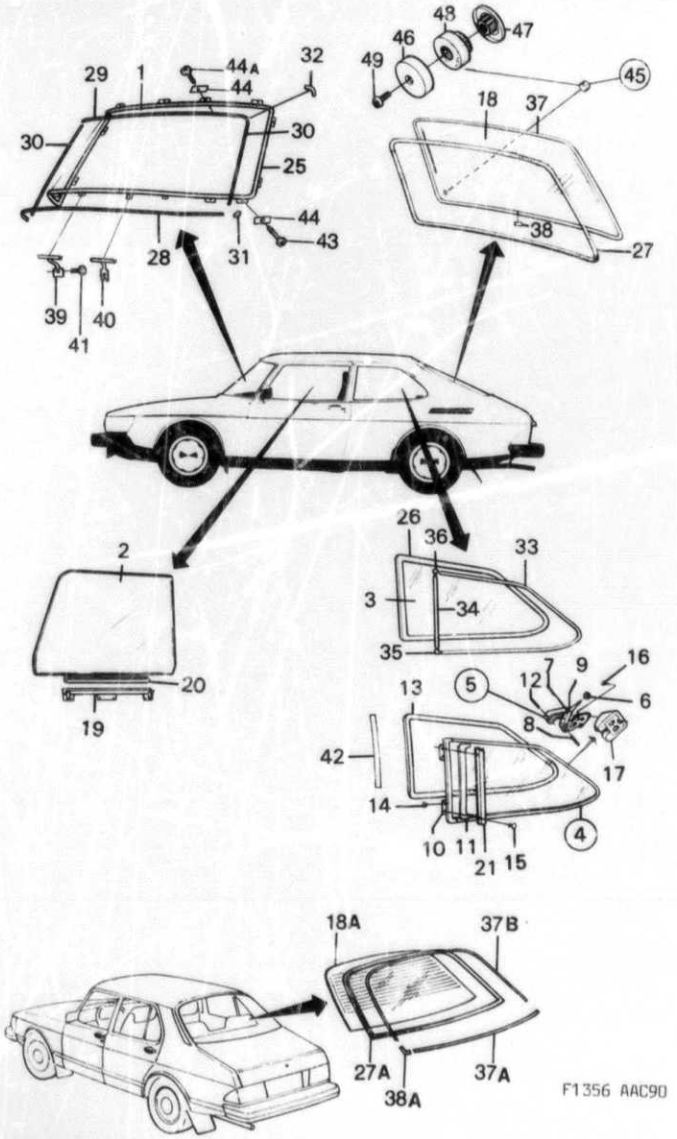

F1356 AAC90

4-E14

External details, glass, sealings

Glass, sealings 3CK, 2SN

Utvändiga detaljer, glas, tätningslister

Glas,tätn. lister 3CK,2SN

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1000	31	69 11 325		110)	2	Connector	Skarvstycke	3
1020	32	92 93 069			2	Connector	Skarvstycke	3
1040	32	69 11 317		110)	2	Connector	Skarvstycke	3
1060	33	82 87 773		LH	1	Decor strip	Dekorlist	4
1080	33	82 87 781		RH	1	Decor strip	Dekorlist	4
1085	33	69 18 171		110) LH	1	Decor strip	Dekorlist	4
1090	33	69 18 189		110) RH	1	Decor strip	Dekorlist	4
1100	34	82 87 799			2	Decor strip	Dekorlist	4
1105	34	69 18 163		110)	2	Decor strip	Dekorlist	4
1120	35	82 87 765			2	Connector	Skarvstycke	3
1125	35	69 18 148		110)	2	Connector	Skarvstycke	3
1130	36	82 87 757			2	Connector	Skarvstycke	3
1135	36	69 18 155		110)	2	Connector	Skarvstycke	3
1140	37	92 33 263			1	Decor strip	Dekorlist	3
1160	37	92 33 271		110)	1	Decor strip	Dekorlist	3
1180	37A	92 26 523		2SN	1	Decor strip	Dekorlist	3
1200	37A	92 22 936		110) 2SN	1	Decor strip	Dekorlist	3
1220	37B	92 26 531		2SN	1	Decor strip	Dekorlist	3
1240	37B	92 22 951		110) 2SN	1	Decor strip	Dekorlist	3
1260	38	92 33 248			1	Connector	Skarvstycke	3
1270	38	92 33 255		110)	1	Connector	Skarvstycke	3
1280	38A	92 22 902		2SN	2	Connector	Skarvstycke	3
1290	38A	92 22 910		110) 2SN	2	Connector	Skarvstycke	3
1300	39	82 75 885		OUTER, AIR-BAG	2	Bracket	Hållare	4
1310	40	82 75 893		CENTRE, AIR-BAG	1	Bracket	Hållare	5
1320	41	79 22 420		AIR-BAG	3	Screw	Skruv	5
1330	42	82 86 312			2	Tape	Tape	5
1340	43	79 67 771		AIR-BAG NLS - USE 7970601	2	Screw	Skruv	5
1340								
1350	44	40 10 138		AIR-BAG	8	Bracket	Hållare	5
1355	44A	73 99 967		AIR-BAG	10	Screw	Skruv	5
1360	45	69 38 195		REAR WINDOW, WITH-OUT WIPER	1	Cover	Lock	5
1370								
1380	46	69 37 973		INNER	1	.Cover	.Lock	
1390	47	69 37 981		OUTER	1	.Cover	.Lock	5
1400	48	69 56 585			1	.Grommet	.Genomföring	
1410	49	79 65 833			1	.Screw	.Skruv	5
1420		92 89 414		1 COIL = 4,4 M	X	Tape	Tape	3

110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


4-E16

External details, glass, sealings

Glass, sealings, CV

Utvändiga detaljer, glas, tätningslister

Glas, tätn.lister, CV

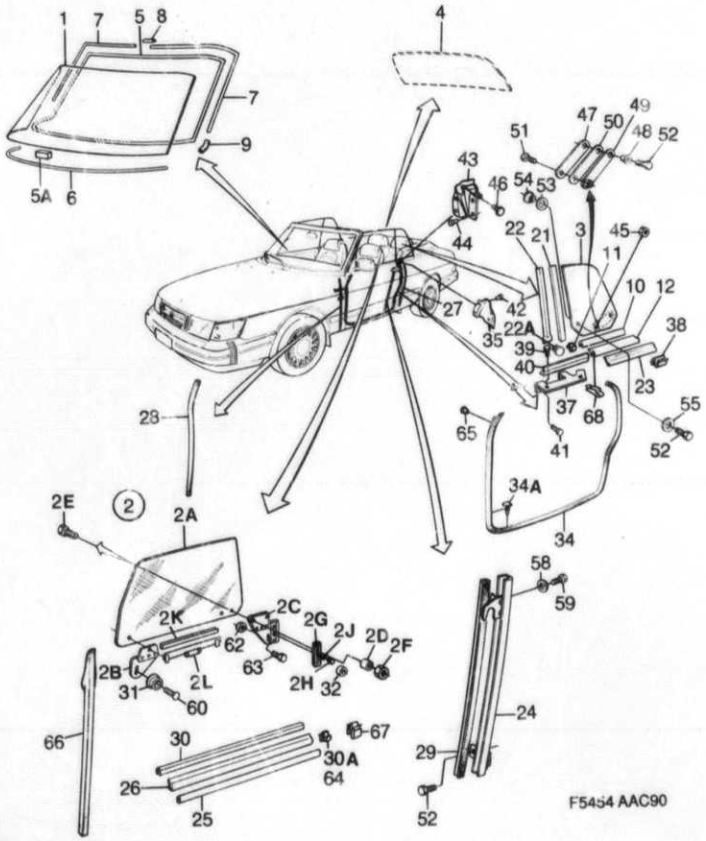

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	82 84 200		COLOURED	1	Windscreen	Vindruta	3
0035				See page 8A-143, 4-F24				
0050	1	82 84 218		AU	1	Windscreen	Vindruta	3
0055				See page 8A-143, 4-F24				
0061	2	69 19 336		LH, COLOURED	1	Door window	Dörruta	4
0062	2	69 19 344		RH, COLOURED	1	Door window	Dörruta	4
0063	2A	*69 98 744*		1) LH NLS - USE 6919336	1	.Door window	.Dörruta	4
0064	2A	69 98 751		1) RH	1	.Door window	.Dörruta	4
0065	2B	69 33 931		1)	1	.Bracket	.Konsol	3
0066	2C	69 34 343		1) LH	1	.Bracket	.Konsol	3
0067	2C	69 34 350		1) RH	1	.Bracket	.Konsol	3
0068	2D	69 34 608		1)	3	.Bushing	.Bussning	5
0069	2E	80 59 396		1)	3	.Screw	.Skruv	5
0071	2F	79 73 365		1)	3	.Nut	.Mutter	5
0072	2G	69 33 972			1	.Ferrule	.Skoning	5
0073	2H	79 68 902			1	.Rivet	.Nit	5
0074	2J	80 29 910			1	.Washer	.Bricka	5
0075	2K	69 35 233			1	.Spacer	.Mellanlägg	5
0076	2L	69 38 096			1	.Window bracket	.Rutfäste	5
0077								
0080	3	69 19 237		LH, COLOURED	1	Side window	Sidoruta	5
0090	3	69 19 245		RH, COLOURED	1	Side window	Sidoruta	5
0100	4			See page 8A-023, 4-A24	1	Rear window	Bakruta	
0110	5	69 35 050		WINDSHIELD	1	Decor strip	Dekorlist	3
0120	5A	92 59 532			X	Spacer	Distans	3
0140	6	69 98 074			1	Strip holder	Hållarlist	4
0170	7	69 98 082		LH	1	Strip holder	Hållarlist	4
0200	7	69 98 090		RH	1	Strip holder	Hållarlist	4
0210	8	92 78 334			1	Connector	Skarvstycke	3
0220	9	69 35 092			2	Clip	Clips	5
0230	10	69 33 121		134)	2	Seal	Tätning	5
0240	10	69 98 843		135)	2	Seal	Tätning	5
0250	10	*69 33 139*		1), INNER NLS - USE 6998843	1	.Seal	.Tätning	5
0260	11	*82 44 964*		134) NLS - USE 6998850	4	.Clip	.Clips	5
0270	11	69 98 850		135)	4	.Clip	.Clips	5
0272	12	69 98 058		LH	1	Seal	Tätning	5
0282	12	69 98 249		RH	1	Seal	Tätning	5
0380	21	69 50 398		LH	1	Holder	Hållare	5
0390	21	69 50 380		RH	1	Holder	Hållare	5
0400	22	69 50 323		LH	1	Sealing strip	Tätningslist	5
0410	22	69 50 315		RH	1	Sealing strip	Tätningslist	5
0415	22A	69 37 460			4	Rivet	Nit	5
0420	23	69 33 261		-1991, LH	1	Decor strip	Dekorlist	4
0430	23	69 33 279		-1991, RH	1	Decor strip	Dekorlist	4
0442	24	69 98 421		LH	1	Guide moulding	Styrlist	5
0452	24	69 98 553		RH	1	Guide moulding	Styrlist	5
0462	25	69 98 645		LH	1	Decor strip	Dekorlist	4
0472	25	69 98 652		RH	1	Decor strip	Dekorlist	4
0482	26	69 98 025		LH	1	Seal	Tätning	4
0484	26	69 98 314		RH	1	Seal	Tätning	4
0490	27	69 33 337			2	Strip	List	3
0500	28	*69 33 352*		76) LH NLS - USE 6999825	1	Strip	List	3
0510	28	*69 34 152*		76) RH NLS - USE 6999825	1	Strip	List	5
0512	28	69 99 825		77)	2	Sealing strip	Tätningslist	3
0520	29	69 34 079			2	Seal	Tätning	6
0530	30	*69 33 154*		74) NLS - USE 6996821	2	Seal	Tätning	4

1. Not as separate spare part. Ej som separat reservdel.
74. Ch. --L7002698
76. Ch. --L7007342
77. Ch. L7007343 -
134. Ch --L7020200
135. Ch L7020201-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


4-E18

External details, glass, sealings

Glass, sealings, CV

Utvändiga detaljer, glas, tätningslister

Glas, tätn.lister, CV

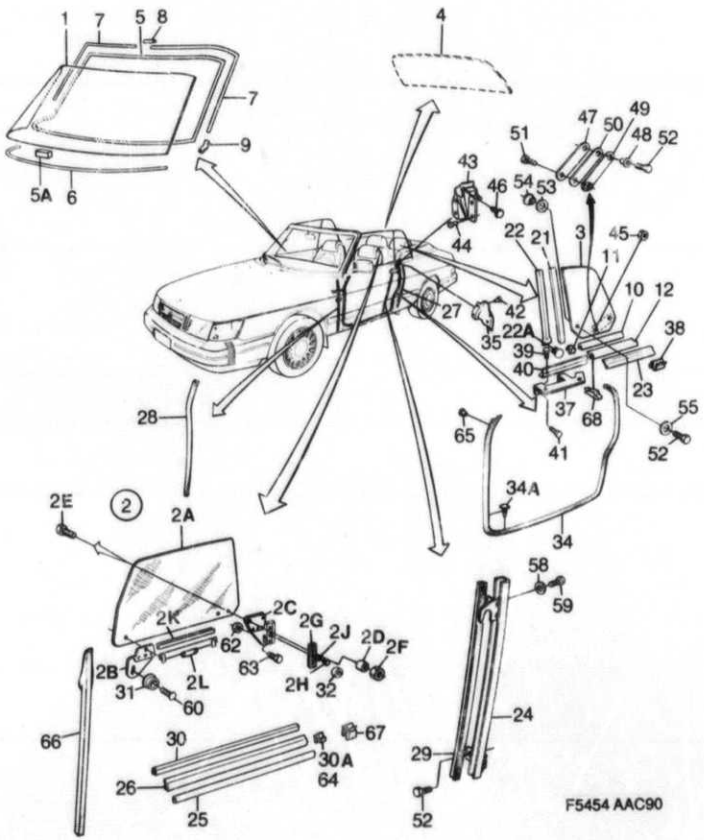

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0532	30	69 96 821		75)	2	Seal	Tätning	4
0535	30A	40 94 082		75)	6	Clip	Clips	5
0542	31	*69 98 124*		83) NLS - USE 6996961	2	Stop	Stopp	5
0545	31	69 96 961		84)	2	Stop	Stopp	5
0550	32	*69 99 124*		83) NLS - USE 6996961	2	Stop	Stopp	5
0560	32	69 96 961		84)	2	Stop	Stopp	5
0580	34	69 34 871		LH	1	Sealing strip	Tätningslist	5
0590	34	69 34 889		RH	1	Sealing strip	Tätningslist	5
0610	34A	69 11 614			34	▪Clip	▪Clips	5
0622	35	69 98 330		LH	1	Seal	Tätning	9
0632	35	69 98 348		RH	1	Seal	Tätning	9
0650	37	69 32 875		LH	1	Reinforcement	Förstärkning	3
0660	37	69 32 883		RH	1	Reinforcement	Förstärkning	3
0670	38	69 35 563			10	Clip	Clips	5
0680	39	80 19 895		-1992	4	Screw	Skruv	5
0682	39	91 66 273		-1992	4	Screw	Skruv	5
0685	40	69 24 559			2	Attaching plate	Fästplåt	3
0690	41	79 75 451			4	Screw	Skruv	5
0700	42	92 55 845			8	Rivet	Nit	5
0720	43	69 52 691		153) LH	1	Seal	Tätning	5
0722	43	41 53 318		154) LH	1	Seal	Tätning	5
0740	43	69 52 683		153) RH	1	Seal	Tätning	5
0742	43	41 53 326		154) RH	1	Seal	Tätning	5
0750	44	69 37 460			4	Rivet	Nit	5
0770	45	81 51 235			16	Nut	Mutter	5
0780	46	69 35 936		153)	2	Clip	Clips	5
0790	47	69 36 330			2	Insert	Inlägg	5
0800	48	69 36 348			2	Spacer	Distans	5
0810	49	69 36 355			2	Brace	Bygel	3
0820	50	69 36 363			2	Insert	Inlägg	5
0830	51	69 36 397			2	Screw	Skruv	5
0940	52	79 69 223			8	Screw	Skruv	5
0850	53	69 36 371			2	Washer	Bricka	5
0860	54	69 36 389			2	Clip	Clips	5
0870	55	73 11 772			2	Washer	Bricka	5
0900	58	69 98 017		-1990	2	Washer	Bricka	5
0910	58	41 54 373		1991-	2	Washer	Bricka	5
0925	59	79 81 921			2	Screw	Skruv	5
0930	60	69 35 852		83)	2	Screw	Skruv	5
0940	60	41 53 227		84)	2	Screw	Skruv	5
0950	62	79 74 298			4	Nut	Mutter	5
0962	63	69 35 852			2	Screw	Skruv	5
0970	64	40 94 082			14	Clip	Clips	5
0990	65	92 55 845			6	Rivet	Nit	5
1000	66	69 53 897		LH	1	Seal	Tätning	5
1010	66	69 53 889		RH	1	Seal	Tätning	5
1040	67	69 98 868			2	Clip	Clips	5
1060	68	69 99 817			2	Clamp	Klammer	5

75. Ch. L7002699--
83. Ch. --L7009038
84. Ch. L7009039--
153. Ch. --L7023446
154. Ch. L7023447--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E20 Glass, sealings 5CK, 4SN — Glas,tätn. lister 5CK,4SN

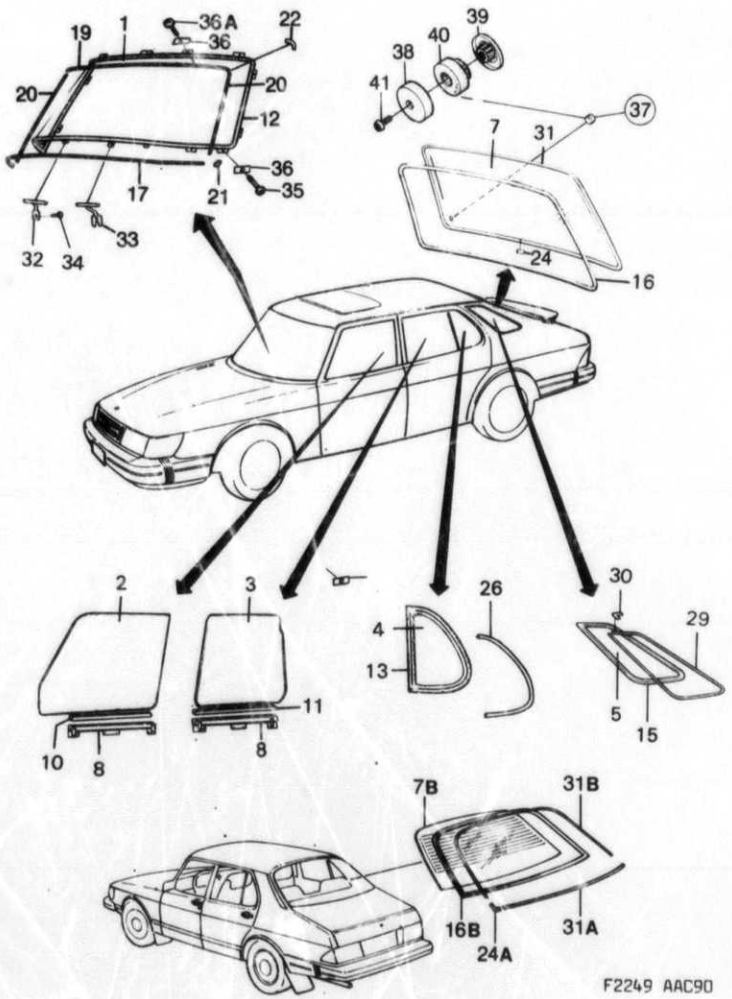

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	82 57 511			1	Windscreen	Vindruta	
1	92 80 439		56)	1	Windscreen	Vindruta	3
2	92 35 094		2) LH	1	Door window	Dörruta	4
2	92 80 371		2,56) LH	1	Door window	Dörruta	3
2	92 35 102		2) RH	1	Door window	Dörruta	5
2	92 80 389		2,56) RH	1	Door window	Dörruta	
3	82 75 356		3) LH	1	Side window	Sidoruta	5
3	92 80 397		3,56) LH	1	Door window	Dörruta	5
3	82 75 364		3) RH	1	Door window	Dörruta	5
3	92 80 405		3,56) RH	1	Door window	Dörruta	
4	82 61 638		3) LH	1	Door window	Dörruta	5
4	82 61 646		3) RH	1	Door window	Dörruta	5
4	92 80 413		3,56) LH	1	Side window	Sidoruta	5
4	92 80 421		3,56) RH	1	Door window	Dörruta	
5	82 60 135		LH	1	Side window	Sidoruta	5
5	82 60 143		RH	1	Side window	Sidoruta	5
5	92 80 462		56) LH	1	Side window	Sidoruta	5
5	92 80 470		56) RH	1	Side window	Sidoruta	5
7	92 80 488		56)US,WITHOUT WIPER HOLE	1	Rear window	Bakruta	4
7	69 38 013			1	Rear window	Bakruta	4
7	69 38 187		56)	1	Rear window	Bakruta	4
7B	92 20 161		4SN	1	Rear window	Bakruta	5
7B	92 80 496		56) 4SN	1	Rear window	Bakruta	4
8	69 38 096			2	Window bracket	Rutfäste	5
10	92 87 111		2)	2	Spacer	Mellanlägg	5
11	92 87 111		3)	2	Spacer	Mellanlägg	5
12	92 93 051			1	Rubber moulding	Gummilist	4
12	69 93 596		US	1	Rubber moulding	Gummilist	4
13	82 49 955		6) LH	1	Rubber moulding Door window	Gummilist Dörruta	5
13	82 49 963		6) RH	1	Rubber moulding Door window	Gummilist Dörruta	5
15	92 87 079		LH	1	Rubber moulding Side window	Gummilist Sidoruta	5
15	92 87 087		RH	1	Rubber moulding Side window	Gummilist Sidoruta	5
16	92 31 499			1	Rubber moulding Rear window	Gummilist Bakruta	4
16B	92 35 516		4SN	1	Rubber moulding Rear window	Gummilist Bakruta	4
17	92 26 481			1	Decor strip Windscreen	Dekorlist Vindruta	3
17	82 69 433		110)	1	Decor strip Windscreen	Dekorlist Vindruta	3
19	*82 36 762*		NLS - USE 9226473	1	Decor strip Windscreen	Dekorlist Vindruta	3
19	82 37 265		110)	1	Decor strip Windscreen	Dekorlist Vindruta	3
20	92 26 499			2	Decor strip Windscreen	Dekorlist Vindruta	3

2. Front Främre
3. Rear Bakre
6. See Service Manual. Se verkstadshandbok.
56. Bronze-colour Bronsfärg
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


4-E22

External details, glass, sealings

Glass, sealings 5CK, 4SN

Utvändiga detaljer, glas, tätningslister

Glas,tätn. lister 5CK,4SN

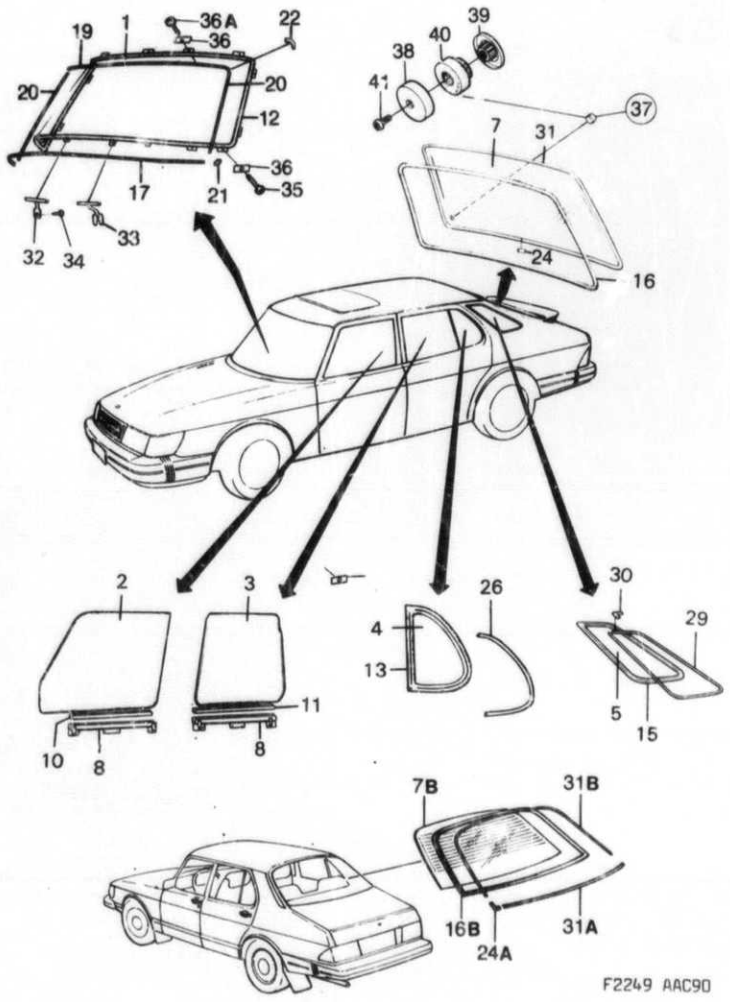

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0800	20	82 69 425		110)	2	Decor strip	Dekorlist	3
0810						Windscreen	Vindruta	
0840	21	92 93 085			2	Connector	Skarvstycke	3
0850						Windscreen	Vindruta	
0860	21	69 11 325		110)	2	Connector	Skarvstycke	3
0870						Windscreen	Vindruta	
0880	22	92 93 069			2	Connector	Skarvstycke	3
0890						Windscreen	Vindruta	
0900	22	69 11 317		110)	2	Connector	Skarvstycke	3
0910						Windscreen	Vindruta	
0920	24	92 33 248			1	Connector	Skarvstycke	3
0930	24	92 33 255		110)	1	Connector	Skarvstycke	3
0940	24A	92 22 902		4SN	2	Connector	Skarvstycke	3
0950	24A	92 22 910		110) 4SN	2	Connector	Skarvstycke	3
0960	26	82 59 855		3) LH	1	Decor strip	Dekorlist	3
0970						Door window	Dörruta	
0980	26	82 59 863		3) RH	1	Decor strip	Dekorlist	3
0990						Door window	Dörruta	
1000	26	92 39 351		3,110) LH	1	Decor strip	Dekorlist	3
1010						Door window	Dörruta	
1020	26	92 39 369		3,110) RH	1	Decor strip	Dekorlist	3
1030						Door window	Dörruta	
1040	29	92 23 439			2	Decor strip	Dekorlist	4
1050						Side window	Sidoruta	
1060	29	82 67 890		110)	2	Decor strip	Dekorlist	4
1070						Side window	Sidoruta	
1080	30	92 23 447			2	Connector	Skarvstycke	3
1090						Side window	Sidoruta	
1100	30	92 23 538		110)	2	Connector	Skarvstycke	3
1110						Side window	Sidoruta	
1120	31	92 33 263			1	Decor strip	Dekorlist	3
1130						Rear window	Bakruta	
1140	31	92 33 271		110)	1	Decor strip	Dekorlist	3
1150						Rear window	Bakruta	
1160	31A	92 26 523		4SN	1	Decor strip	Dekorlist	3
1170						Rear window	Bakruta	
1180	31A	92 22 936		110) 4SN	1	Decor strip	Dekorlist	3
1190						Rear window	Bakruta	
1200	31B	92 26 531		4SN	1	Decor strip	Dekorlist	3
1210						Rear window	Bakruta	
1220	31B	92 22 951		110) 4SN	1	Decor strip	Dekorlist	3
1230						Rear window	Bakruta	
1240	32	82 75 885		OUTER, AIR-BAG	2	Bracket	Hållare	4
1250	33	82 75 893		CENTRE, AIR-BAG	1	Bracket	Hållare	5
1260	34	79 22 420		AIR-BAG	2	Screw	Skruv	5
1270	35	*79 67 771*		AIR-BAG NLS - USE 7970601	2	Screw	Skruv	5
1280	36	40 10 138		AIR-BAG	8	Bracket	Hållare	5
1285	36A	73 99 967		AIR-BAG	10	Screw	Skruv	5
1290	37	69 38 195		REAR WINDOW, WITHOUT WIPER	1	Cover	Lock	5
1300								
1310	38	69 37 973		INNER	1	.Cover	.Lock	
1320	39	69 37 981		OUTER	1	.Cover	.Lock	5
1330	40	69 56 585			1	.Grommet	.Genomföring	
1340	41	79 65 833			1	.Screw	.Skruv	5
1350		92 89 414		1 COIL=4,4 M (9289414)	X	Tape	Tape	3

3. Rear Bakre
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-E24 *Splash guard* *Stänkskydd*

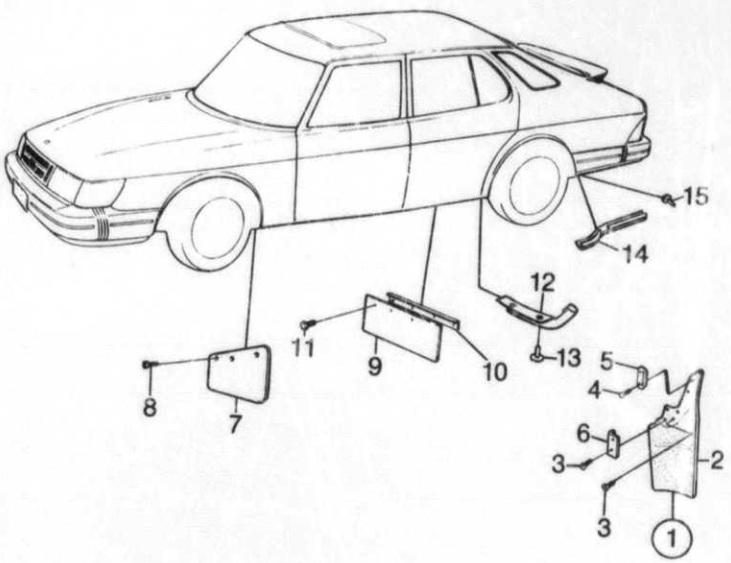

F3358 AAC90

10/90	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	78 74 746		3) LH, CK	1	Baffle	Stänkskydd	3
0020				See page 8A-145, 4-G02				
0030	1	78 74 753		3) RH, CK	1	Baffle	Stänkskydd	3
0040				See page 8A-145, 4-G02				
0050	1	78 74 761		3) LH, SN	1	Baffle	Stänkskydd	3
0060				See page 8A-145, 4-G02				
0070	1	78 74 779		3) RH, SN	1	Baffle	Stänkskydd	3
0080				See page 8A-145, 4-G02				
0090	1	69 39 375		3) LH, RH, CK	1	Baffle	Stänkskydd	3
0100				See page 8A-145, 4-G02				
0110	1	69 39 383		3) LH, RH, SN	1	Baffle	Stänkskydd	3
0120				See page 8A-145, 4-G02				
0130	1	96 98 382		3) LH, AERO	1	Baffle	Stänkskydd	3
0140				See page 8A-145, 4-G02				
0150	1	96 98 390		3) RH, AERO	1	Baffle	Stänkskydd	3
0160				See page 8A-145, 4-G02				
0170	1	96 98 408		3) LH, RH, AERO	1	Baffle	Stänkskydd	3
0180				See page 8A-145, 4-G02				
0190	2	69 37 593		3) LH, CK	1	.Baffle	.Stänkskydd	3
0200	2	69 37 585		3) RH, CK	1	.Baffle	.Stänkskydd	3
0210	2	69 37 478		3) LH, SN	1	.Baffle	.Stänkskydd	3
0220	2	69 37 486		3) RH, SN	1	.Baffle	.Stänkskydd	3
0230	2	69 42 536		3) LH, AERO	1	.Baffle	.Stänkskydd	3
0240	2	69 42 528		3) RH, AERO	1	.Baffle	.Stänkskydd	3
0250	3	79 22 982			6	.Screw	.Skruv	5
0260	3	79 69 314		AERO	2	.Screw	.Skruv	5
0270	4	79 22 974			4	Screw	Skruv	5
0280	5	92 22 613			2	Attaching plate	Fästplåt	3
0290	6	82 27 738			2	Support plate	Stödplatta	6
0300	7	82 88 151		2) LH	1	Baffle	Stänkskydd	4
0310	7	82 88 169		2) RH	1	Baffle	Stänkskydd	4
0320	7	96 98 531		2) 1992-, LH, PA	1	Splash guard kit	Stänkskyddssats	5
0330				See page 8A-143, 4-F24				
0340	7	96 98 549		2) 1992-, RH, PA	1	Splash guard kit	Stänkskyddssats	5
0350				See page 8A-143, 4-F24				
0360	7	92 99 678		2) AERO, LH	1	Baffle	Stänkskydd	4
0370	7	92 99 686		2) AERO, RH	1	Baffle	Stänkskydd	4
0380	8	79 73 050			6	Screw	Skruv	5
0390	8	79 73 209		AERO	6	Screw	Skruv	5
0400	9	82 89 266			2	Bafile	Stänkskydd	5
0410	10	*82 09 413*		NLS	2	Elbow	Vinkel	5
0420	11	79 73 050			8	Screw	Skruv	5
0430	12	82 87 310		LH	1	Rubber protection	Gummiskydd	3
0440	12	82 87 328		RH	1	Rubber protection	Gummiskydd	3
0450	13	82 35 178			4	Pop rivet	Popnit	5
0460	14	69 19 054		58)	2	Protecting moulding	Skyddslist	3
0470	15	*79 61 634*		55) NLS - USE 7977804	10	Rivet	Nit	5

2. Front Främre
3. Rear Bakre
55. For cars without rear mud guard. För bilar utan bakre stänkskydd.
58. For cars with rear mud guard. För bilar med bakre stänkskydd.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C06
Doors, trunk lid	4-C14
External details, glass sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F02

Other sealings 3CK, 2SN
Övriga lister 3CK, 2SN

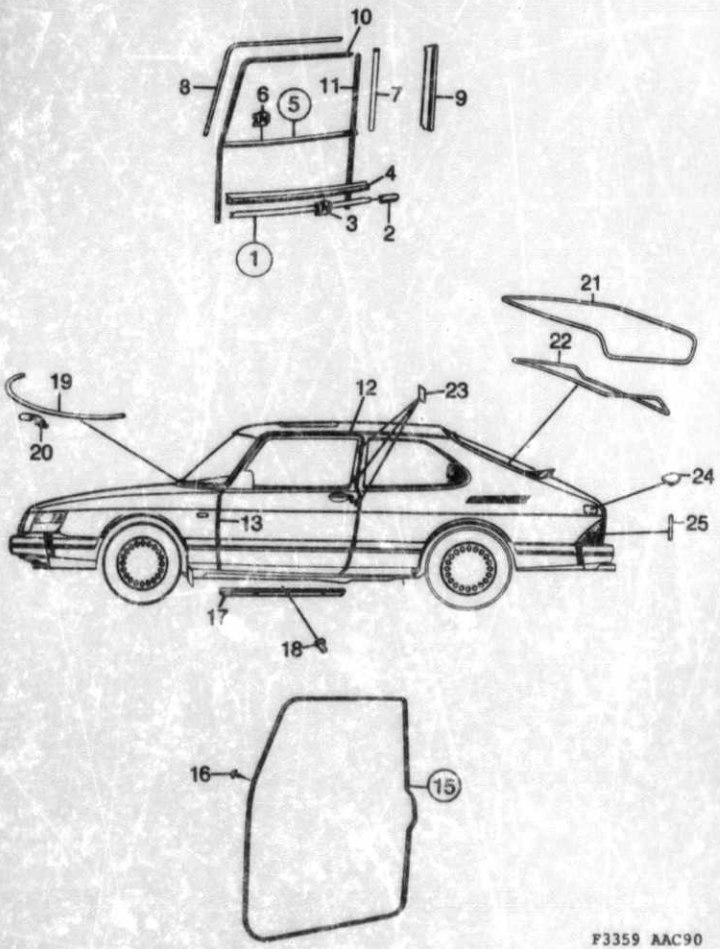

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 26 711		LH	1	Decor strip	Dekorlist	4
0020	1	69 26 729		RH	1	Decor strip	Dekorlist	4
0030	1	69 26 737		110) LH	1	Decor strip	Dekorlist	4
0050	1	69 26 745		110) RH	1	Decor strip	Dekorlist	4
0080	2	69 26 497		LH	1	. End piece	. Ändstycke	4
0100	2	69 26 505		RH	1	. End piece	. Ändstycke	4
0110	3	40 94 082			14	Clip	Clips	5
0120	4	92 37 678			2	Sealing strip	Tätningslist	4
0130	5	92 37 553			2	Sealing strip	Tätningslist	4
0140	6	*82 44 964*		NLS - USE 6998850	6	. Clip	. Clips	5
0150	7	92 84 191		3) LH	1	Decor strip	Dekorlist	3
0160	7	92 84 209		3) RH	1	Decor strip	Dekorlist	3
0170	7	92 39 336		3,110) LH	1	Decor strip	Dekorlist	3
0180	7	92 39 344		3,110) RH	1	Decor strip	Dekorlist	3
0190	8	92 84 175		2) LH	1	Decor strip	Dekorlist	3
0200	8	92 84 183		2) RH	1	Decor strip	Dekorlist	3
0210	8	92 39 153		2,110) LH	1	Decor strip	Dekorlist	3
0220	8	92 39 161		2,110) RH	1	Decor strip	Dekorlist	3
0230	9	92 31 176		110) LH	1	Decor strip	Dekorlist	2
0240	9	92 31 184		110) RH	1	Decor strip	Dekorlist	2
0250	10	82 78 996		2)	2	Sealing strip	Tätningslist	4
0260	11	82 76 479		3)	2	Sealing strip	Tätningslist	4
0270	12	92 92 954		(9292988)	2	Sealing strip	Tätningslist	3
0280								
0290	13	69 11 820		2)	2	Sealing strip	Tätningslist	3
0300								
0310	15	40 96 822		LH	1	Sealing strip	Tätningslist	3
0320	15	40 96 830		RH	1	Sealing strip	Tätningslist	3
0330	16	69 11 614			78	. Clip	. Clips	5
0340	17	*82 86 874*		NLS - USE 9291428	2	Protecting moulding	Skyddslist	3
0350	17	92 91 428			2	Protecting moulding	Skyddslist	3
0360	18	92 35 178			12	Pop rivet	Popnit	5
0370	19	40 90 080			1	Seal	Tätning	3
0380	20	84 07 488			5	Clip	Clips	5
0390	21	82 89 803			1	Sealing strip	Tätningslist	4
0400	22	92 26 028		SN	1	Sealing strip	Tätningslist	4
0950	23	84 06 142		1 COIL=50M	X	Tape	Tape	5
0970	24	*82 47 801*		NLS - USE 9297458	2	Spacer	Mellanlägg	5
0980	25	92 36 605			2	Strip	List	4

2. Front Främre
3. Rear Bakre
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F04

Other sealings CV

Övriga lister CV

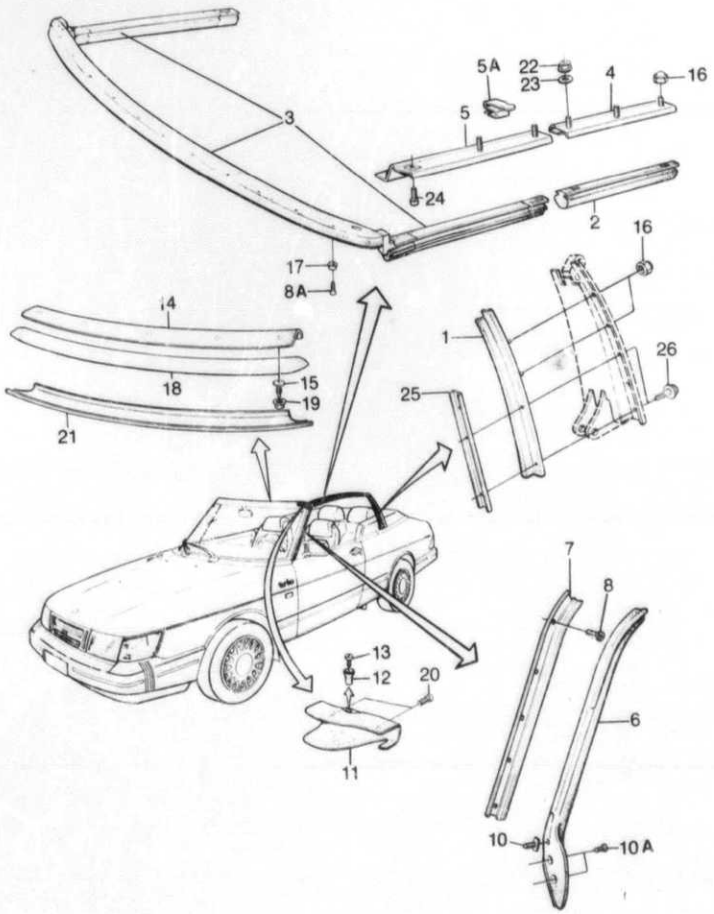

F4275 AAC90

1130	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 50 216*		202) LH NLS - USE 4154043	1	Seal	Tätning	5
0020	1	*69 50 208*		202) RH NLS - USE 4154035	1	Seal	Tätning	5
0030	1	41 54 043		203) LH	1	Seal	Tätning	5
0040	1	41 54 035		203) RH	1	Seal	Tätning	5
0050	2	*69 51 396*		202) LH NLS - USE 4154027	1	Seal	Tätning	5
0060	2	*69 51 388*		202) RH NLS - USE 4154019	1	Seal	Tätning	5
0070	2	41 54 027		203) LH	1	Seal	Tätning	5
0080	2	41 54 019		203) RH	1	Seal	Tätning	5
0090	3	*69 51 370*		67) NLS - USE 4153987, 4153995, 4154001	1	Seal	Tätning	5
0100	3	*69 53 939*		68,202) NLS - USE 4153987	1	Seal	Tätning	5
0110	3	41 53 987		203)	1	Seal	Tätning	5
0120	4	69 51 362		LH	1	Bracket	Hållare	5
0130	4	69 51 354		RH	1	Bracket	Hållare	5
0140	5	41 53 037		LH	1	Bracket	Hållare	5
0150	5	41 53 029		RH	1	Bracket	Hållare	5
0160	5A	69 99 999		167)	2	Clip	Clips	5
0170								
0180	6	69 52 659		67) LH	1	Sealing strip	Tätningslist	5
0190	6	69 52 642		67) RH	1	Sealing strip	Tätningslist	5
0200	6	*69 53 954*		68,202) LH NLS - USE 4154001	1	Sealing strip	Tätningslist	5
0210	6	*69 53 947*		68,202) RH NLS - USE 4153995	1	Sealing strip	Tätningslist	5
0220	6	41 54 001		203) LH	1	Sealing strip	Tätningslist	5
0230	6	41 53 995		203) RH	1	Sealing strip	Tätningslist	5
0240	7	69 52 907		LH	1	Bracket	Hållare	4
0250	7	69 52 899		RH	1	Bracket	Hållare	4
0260								
0270	8	69 97 894			8	Screw	Skruv	5
0280	8A	84 08 882			11	Screw	Skruv	5
0290	8A	*73 98 993*		78) ALT TO 8408882, 7913833 NLS - USE 8840068	11	Screw	Skruv	5
0300								
0310	8A	*79 65 353*		79) NLS - USE 7970601	11	Screw	Skruv	5
0320	10	69 11 614			2	Clip	Clips	5
0330	10A	69 51 784			4	Plastic clip	Plastclips	5
0340	11	91 61 415		3), LH	1	Fitting	Beslag	5
0350	11	91 61 423		3), RH	1	Fitting	Beslag	5
0360	12	98 24 905			2	. Bushing	. Bussning	5
0370	13	79 72 219			2	. Screw	. Skruv	5
0380	14	98 81 913			1	Profile	Profil	6
0390	15	98 81 921			5	Screw	Skruv	
0400	16	85 94 749			8	Nut	Mutter	5
0410	17	79 13 833			11	Washer	Bricka	5
0420	18	69 35 142			1	Protection	Skydd	5
0430	19	79 73 365			5	Nut	Mutter	5
0440	20	79 72 201			4	Screw	Skruv	5
0450	21			See page 8B-141, 5-F22		Upholstery	Klädsel	
0460	22	79 73 365			8	Nut	Mutter	5


3. Rear Bakre
67. Ch. --L7000109
68. Ch. L7000110--
78. Ch. --L7001109
79. Ch. L7001110--
167. Ch L7014501--
202. Ch. --M7019869
203. Ch. M7019870--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

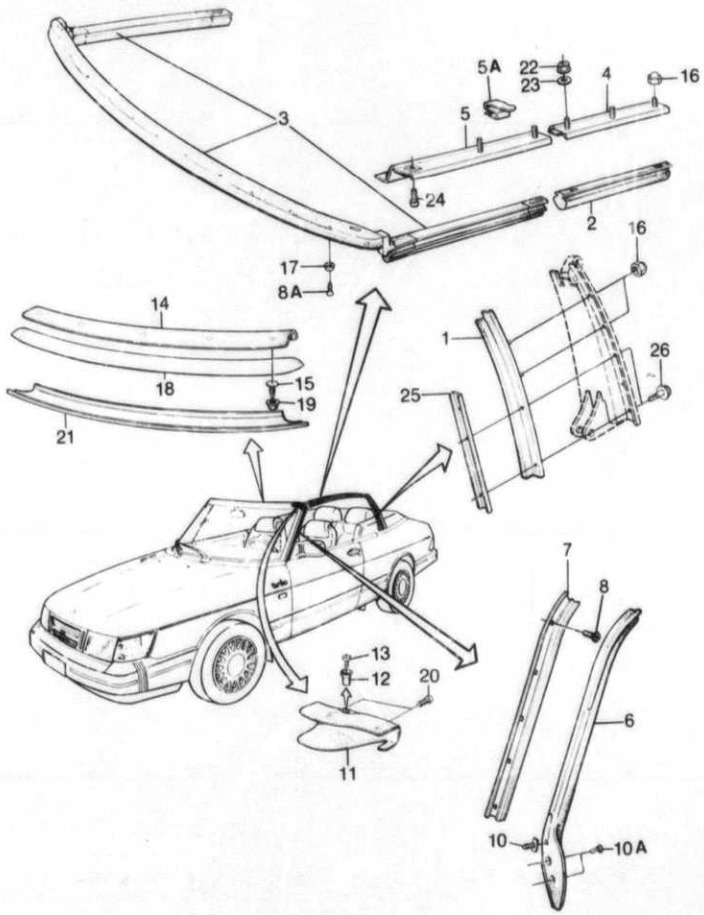

F4275 AAC90

4-F06

External details, glass, sealings

Other sealings CV

Utvändiga detaljer, glas, tätningslister

Övriga lister CV


1130	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	23	79 16 489			10	Washer	Bricka	5
0480	24	79 75 758			2	Screw	Skruv	5
0490	25	41 53 417		1991-	2	Retainer strip	Hållarlist	5
0500	26	95 71 118		1991-	4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

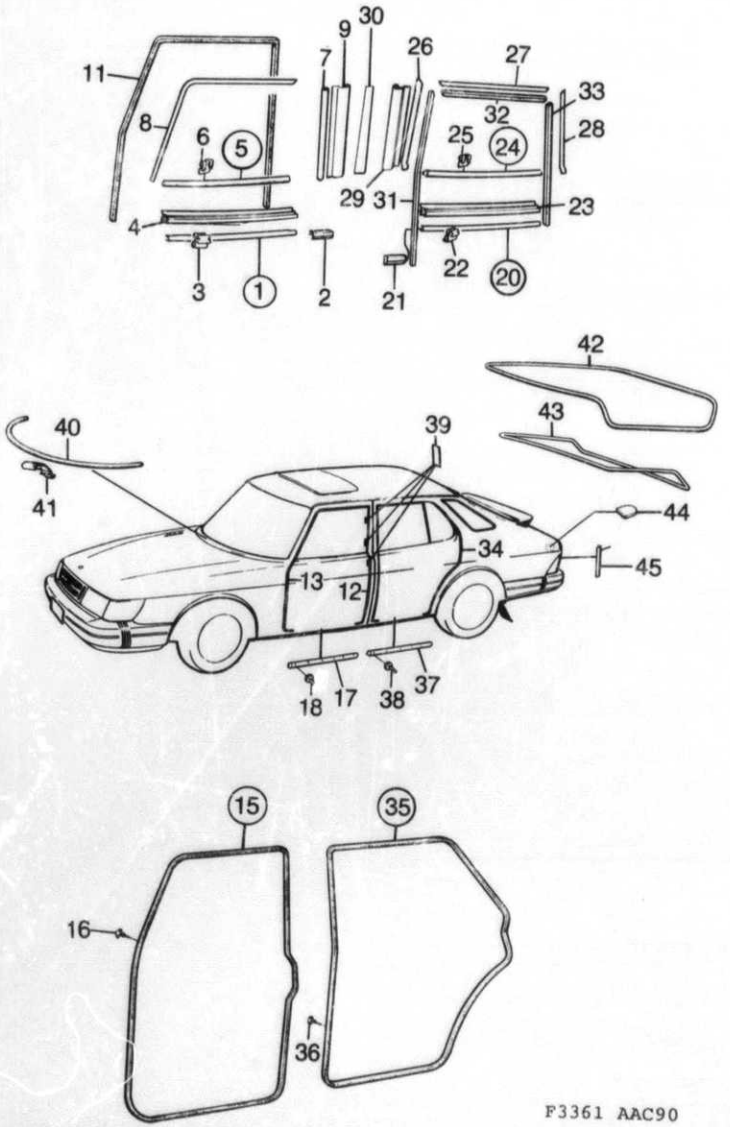

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

4-F08

Other sealings 5CK, 4SN

Övriga lister 5CK, 4SN

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	69 26 679		2) LH	1	Decor strip	Dekorlist	4
0030	1	69 26 687		2) RH	1	Decor strip	Dekorlist	4
0040	1	69 26 695		2,110) LH	1	Decor strip	Dekorlist	4
0050	1	69 26 703		2,110) RH	1	Decor strip	Dekorlist	4
0090	2	69 26 471		2) LH	1	.End piece	.Ändstycke	4
0110	2	69 26 489		2) RH	1	.End piece	.Ändstycke	4
0120	3	40 94 082		2)	18	Clip	Clips	5
0130	4	92 37 686		2)	2	Sealing strip	Tätningslist	4
0150	5	69 25 325		2)	2	Sealing strip	Tätningslist	
0170	6	82 74 573		2)	8	.Clip	.Clips	4
0180	7	92 84 092		2) LH	1	Decor strip	Dekorlist	3
0190	7	92 84 100		2) RH	1	Decor strip	Dekorlist	3
0200	7	92 39 294		2,110) LH	1	Decor strip	Dekorlist	3
0210	7	92 39 302		2,110) RH	1	Decor strip	Dekorlist	3
0220	8	92 84 217		2) LH	1	Decor strip	Dekorlist	3
0230	8	92 84 225		2) RH	1	Decor strip	Dekorlist	3
0240	8	92 39 310		2,110) LH	1	Decor strip	Dekorlist	3
0250	8	92 39 328		2,110) RH	1	Decor strip	Dekorlist	3
0280	9	92 31 192		2) LH	1	Decor strip	Dekorlist	2
0290	9	92 31 200		2) RH	1	Decor strip	Dekorlist	2
0320	11	69 18 130		2)	2	Sealing strip	Tätningslist	4
0350	12	92 92 954		2)	2	Sealing strip	Tätningslist	3
0390	13	92 39 211		2) LH	1	Sealing strip	Tätningslist	3
0410	13	*92 39 229*		2) RH NLS - USE 6911820	1	Sealing strip	Tätningslist	3
0430	13	69 11 820		2) GLE, TURBO	2	Sealing strip	Tätningslist	3
0442	13	69 11 820		2)	2	Sealing strip	Tätningslist	3
0452	15	40 96 863		2) LH	1	Sealing strip	Tätningslist	3
0462	15	40 96 855		2) RH	1	Sealing strip	Tätningslist	3
0490	16	69 11 614		2)	72	.Clip	.Clips	5
0510	17	92 91 436		2)	2	Strip	List	3
0520	18	82 35 178		2)	12	Pop rivet	Popnit	5
0530	20	69 26 638		3) LH	1	Decor strip	Dekorlist	4
0540	20	69 26 646		3) RH	1	Decor strip	Dekorlist	4
0550	20	69 26 653		3,110) LH	1	Decor strip	Dekorlist	4
0560	20	69 26 661		3,110) RH	1	Decor strip	Dekorlist	4
0600	21	69 26 455		3) LH	1	.End piece	.Ändstycke	4
0620	21	69 26 463		3) RH	1	.End piece	.Ändstycke	4
0630	22	*82 78 947*		3) NLS - USE 4094082	8	Clip	Clips	5
0640	23	92 37 694		3)	2	Rubber moulding	Gummilist	4
0660	24	69 25 333		3)	2	Sealing strip	Tätningslist	
0680	25	82 74 573		3)	8	.Clip	.Clips	4
0690	26	69 11 671		3) LH	1	Decor strip	Dekorlist	3
0700	26	69 11 689		3) RH	1	Decor strip	Dekorlist	3
0710	26	69 11 697		3,110) LH	1	Decor strip	Dekorlist	3
0720	26	69 11 705		3,110) RH	1	Decor strip	Dekorlist	3
0730	27	92 84 118		3) LH	1	Decor strip	Dekorlist	3
0740	27	92 84 126		3) RH	1	Decor strip	Dekorlist	3
0750	27	92 39 518		3,110) LH	1	Decor strip	Dekorlist	3
0760	27	92 39 526		3,110) RH	1	Decor strip	Dekorlist	3
0790	28	92 84 159		3) LH	1	Decor strip	Dekorlist	3
0800	28	92 84 167		3) RH	1	Decor strip	Dekorlist	3
0805	28	92 39 716		-1990,3,110) LH	1	Decor strip	Dekorlist	3
0806	28	92 39 724		-1990,3,110) RH	1	Decor strip	Dekorlist	3
0810	28	40 96 996		1991-,3,110) LH	1	Decor strip	Dekorlist	3
0820	28	*40 96 988*		1991-,3,110) RH NLS - USE 9239724	1	Decor strip	Dekorlist	3
0830	29	92 31 218		3) LH	1	Decor strip	Dekorlist	2
0840	29	92 31 226		3) RH	1	Decor strip	Dekorlist	2
0850	30	92 31 234		LH	1	Decor strip	Dekorlist	4

2. Front Främre
3. Rear Bakre
110. Black Svart
199. Ch. M2500001--, N7001863--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F10

Other sealings 5CK, 4SN
Övriga lister 5CK, 4SN

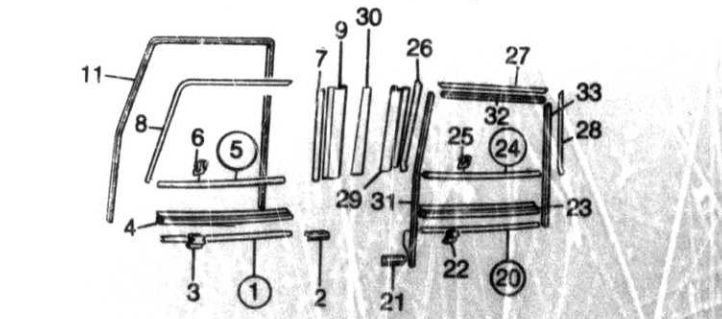

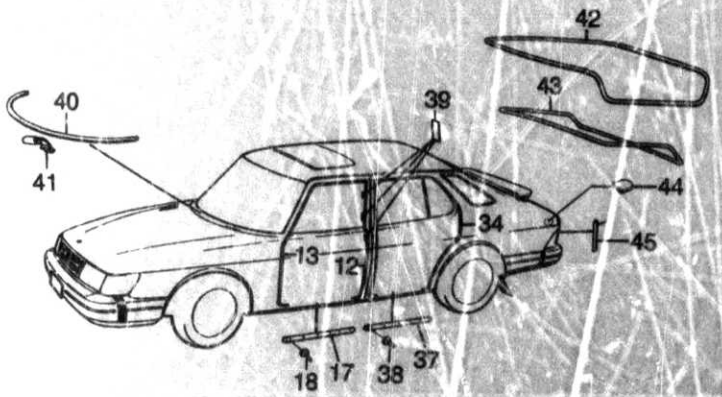

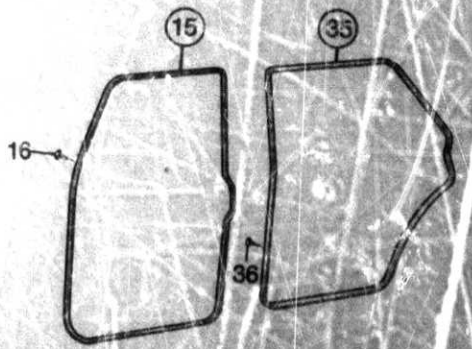

F3361 AAC90

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0860	30	92 31 242		RH	1	Decor strip	Dekorlist	4
0870	31	82 76 503		3)	2	Seal	Tätning	4
0890	32	82 76 511		3)	2	Seal	Tätning	4
0900	33	82 76 529		3)	2	Seal	Tätning	4
0910	34	69 17 785		3) LH	1	Sealing strip	Tätningslist	3
0930	34	69 17 793		3) RH	1	Sealing strip	Tätningslist	3
0950	35	82 86 759		3) LH	1	Sealing strip	Tätningslist	3
1000	35	82 86 767		3) RH	1	Sealing strip	Tätningslist	3
1010	36	69 11 614		3)	74	Clip	Clips	5
1040	37	82 86 890		3)	1	Strip	List	3
1050	38	82 35 178		3)	8	Pop rivet	Poprit	5
1060	39	84 06 142		1 COIL=50M (NO 840624)	X	Tape	Tape	5
1080	40	40 90 030			1	Seal	Tätning	3
1090	41	84 07 488			5	Clip	Clips	5
1100	42	82 89 803			1	Sealing strip	Tätningslist	4
1120	43	92 26 028		4SN	1	Sealing strip	Tätningslist	4
1570	44	82 47 801		NLS - USE 925 7458	2	Spacer	Mellanlägg	3
1580	45	92 26 905			2	Strip	List	4


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	4-A02
8C	Body, heating and ventilation	4-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C02
Doors, uniside	4-C14
External details, glass, sealings	4-D10
Bumpers and touch-up paint	4-F12
Complete cars	4-F24

4–F12 *Bumper, front* *Stötfångare, främre*

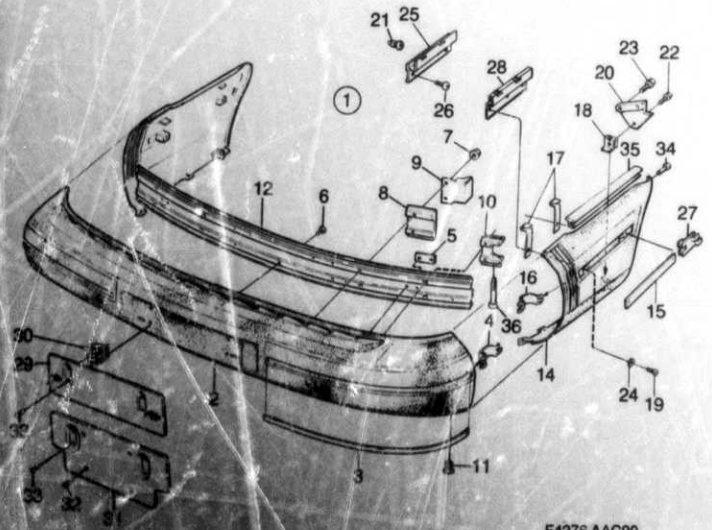

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S I
0010	1	69 14 618		110) I	1	Bumper	Stötfångare	3
0030	1	69 43 906		70) TURBO	1	Bumper	Stötfångare	3
0050	2	69 42 940		110) I	1	.Outer casing	.Hölje	3
0060	2	69 42 957		70) TURBO	1	.Outer casing	.Hölje	3
0070	3	69 19 948			2	.Decor strip	.Dekorlist	3
0080	4	69 59 142			2	.Spring	.Fjäder	4
0090	5	69 38 328			2	.Spacer washer	.Distansbricka	5
0100	6	79 22 420			9	.Screw	.Skruv	5
0110	7	79 67 953			8	.Nut	.Mutter	5
0120	8	82 66 579			2	.Spacer	.Mellanlägg	5
0130	9	82 66 744			2	.Spacer	.Mellanlägg	5
0140	10	82 66 777		LH	1	.Bracket	.Fäste	5
0150	10	82 66 785		RH	1	.Bracket	.Fäste	5
0160	11	92 88 846			9	.Nut	.Mutter	5
0170	12	92 94 281			1	.Attaching rail	.Fästskena	6
0180	13	94 89 758			2	.Washer	.Bricka	5
0200	14	69 42 825		110) LH, I	1	Side part	Sidodel	2
0220	14	69 42 841		70) LH, TURBO	1	Side part	Sidodel	2
0240	14	69 42 833		110) RH, I	1	Side part	Sidodel	2
0260	14	69 42 858		70) RH, TURBO	1	Side part	Sidodel	2
0270	15	69 40 357			2	.Decor strip	.Dekorlist	3
0280	16	69 59 142			1	.Spring	.Fjäder	4
0290	17	69 28 592			2	.Spring	.Fjäder	5
0300	18	79 68 001			1	.Clip nut	.Clipsmutter	5
0310	19	79 72 821			2	.Screw	.Skruv	5
0320	20	69 14 915		LH	1	End piece	Ändstycke	3
0330	20	69 14 923		RH	1	End piece	Ändstycke	3
0340	21	69 11 804			4	Bushing	Bussning	4
0350	22	79 75 774			2	Screw	Skruv	5
0360	23	79 75 790			4	Screw	Skruv	5
0370	24	92 30 293			4	Washer	Bricka	5
0380	25	69 37 148		LH	1	Attaching plate	Fästplatta	5
0390	25	69 37 155		RH	1	Attaching plate	Fästplatta	5
0400	26	79 22 354			4	Screw	Skruv	5
0410	27	69 40 175		2) LH	1	Clamp	Klammer	5
0420	27	69 40 183		2) RH	1	Clamp	Klammer	5
0440	28	69 37 163			2	Attaching profile	Fästprofil	5
0460	29	82 58 428			1	Bracket	Hållare	3
0480	30	79 70 403			2	.Cage nut	.Korgmutter	5
0500	31	69 21 142		US	1	Bracket	Hållare	3
0520	31	69 21 142		CA, JP	1	Bracket	Hållare	3
0540	32	79 77 390			4	.Screw	.Skruv	5
0560	33	80 59 578			4	Screw	Skruv	5
0580	34	79 77 796			2	Screw	Skruv	5
0600	35	69 44 268		LH, CUT TO SUITABLE LENGTH	1	Strip	List	2
0620								
0640	35	69 42 627		RH, CUT TO SUITABLE LENGTH	1	Strip	List	2
0660								
0670	36	82 66 900			2	Screw	Skruv	5

2. Front Främre
70. Grey Grå
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F14 Bumper, rear / Stötfångare, bakre

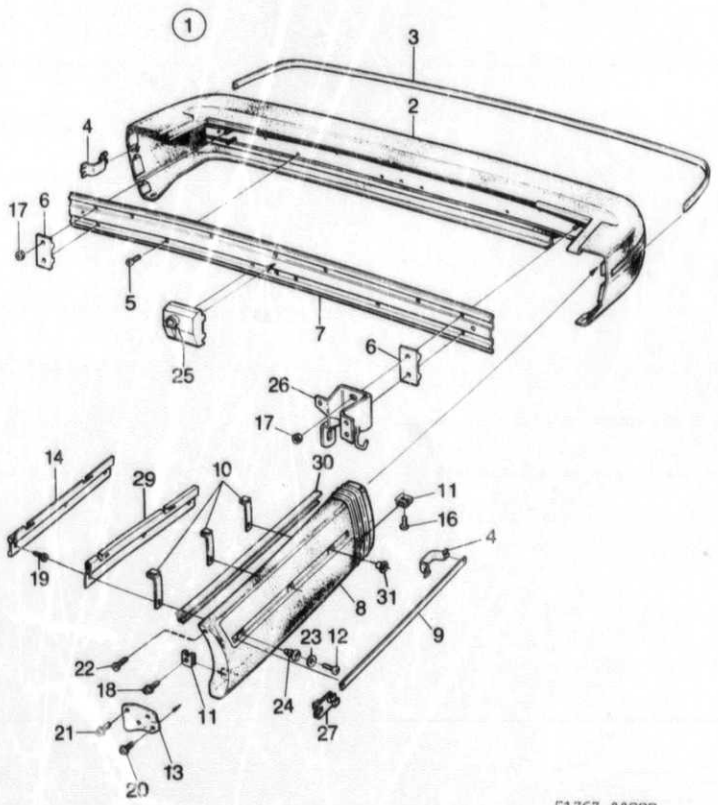

F1363 AAC90

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	69 14 808		110) CK	1	Bumper	Stötfångare	4
0060	1	69 19 906		110) SN, CV	1	Bumper	Stötfångare	4
0100	1	69 40 100		70) CK, TURBO	1	Bumper	Stötfångare	4
0140	1	69 40 084		70) SN, CV, TURBO	1	Bumper	Stötfångare	4
0180	2	69 14 816		110) CK	1	.Outer casing	.Hölje	3
0200	2	69 14 931		110) SN, CV	1	.Outer casing	.Hölje	3
0220	2	69 43 948		70) CK, TURBO	1	.Outer casing	.Hölje	3
0240	2	69 43 914		70) SN, CV, TURBO	1	.Outer casing	.Hölje	3
0260	3	*69 40 381*		NLS - USE 6973945	1	.Decor strip	.Dekorlist	3
0280	4	69 59 142			1	.Spring	.Fjäder	4
0300	5	79 22 438			8	.Screw	.Skruv	5
0320	6	69 40 233			2	.Spacer	.Mellanlägg	5
0340	7	92 94 471			1	.Attaching rail	.Fästskena	6
0372	8	40 88 324		110) LH, CK	1	Side part	Sidodel	2
0392	8	40 88 332		110) RH, CK	1	Side part	Sidodel	2
0410	8	69 42 866		110) LH, SN, CV	1	Side part	Sidodel	2
0430	8	69 42 874		110) RH, SN, CV	1	Side part	Sidodel	2
0452	8	40 88 340		70) LH, CK	1	Side part	Sidodel	2
0472	8	40 88 357		70) RH, CK	1	Side part	Sidodel	2
0485	8	69 42 882		70) LH, SN, CV	1	Side part	Sidodel	2
0510	8	69 42 890		70) RH, SN, CV	1	Side part	Sidodel	2
0520	9	69 40 365			2	.Decor strip	.Dekorlist	3
0540	10	69 28 592			3	.Spring	.Fjäder	5
0560	11	79 68 001			2	.Clip nut	.Clipsmutter	5
0580	12	79 72 821			3	.Screw	.Skruv	5
0600	13	69 28 204		LH, CK	1	End piece	Ändstycke	3
0620	13	69 28 212		RH, CK	1	End piece	Ändstycke	3
0640	13	69 27 784		LH, SN, CV	1	End piece	Ändstycke	3
0660	13	69 27 792		RH, SN, CV	1	End piece	Ändstycke	3
0680	14	69 37 346		LH, CK	1	Attaching fitting	Fästbeslag	5
0700	14	69 37 353		RH, CK	1	Attaching fitting	Fästbeslag	5
0720	14	69 37 304		LH, SN, CV	1	Attaching fitting	Fästbeslag	5
0740	14	69 37 312		RH, SN, CV	1	Attaching fitting	Fästbeslag	5
0800	16	79 22 354			6	Screw	Skruv	5
0820	17	79 67 953			4	Nut	Mutter	5
0840	18	79 69 314			4	Screw	Skruv	5
0860	19	79 72 821			6	Screw	Skruv	5
0880	20	79 75 774			2	Screw	Skruv	5
0900	21	79 75 782			6	Screw	Skruv	5
0920	22	79 77 796			2	Screw	Skruv	5
0940	23	92 30 293			6	Washer	Bricka	5
0960	24	69 11 804			6	Bushing	Bussning	4
0980	25	92 94 539		CK	1	Buffer	Buffert	4
1010	25	69 43 690		SN	1	Buffer	Buffert	4
1020	26	69 38 765		LH, CK	1	Bracket	Fäste	4
1040	26	69 38 773		RH, CK	1	Bracket	Fäste	4
1060	26	69 38 740		LH, SN, CV	1	Bracket	Fäste	4
1080	26	69 38 757		RH, SN, CV	1	Bracket	Fäste	4
1100	27	69 40 183		3) LH	1	Clamp	Klammer	5
1120	27	69 40 175		3) RH	1	Clamp	Klammer	5
1160	29	69 37 288		LH, SN, CV	1	Attaching profile	Fästprofil	5
1180	29	69 37 296		RH, SN, CV	1	Attaching profile	Fästprofil	5
1190	30	69 42 627		LH, CUT TO SUITABLE LENGTH	1	Strip	List	2
1200								
1220	30	69 44 268		RH, CUT TO SUITABLE LENGTH	1	Strip	List	2
1240								
1260	31	85 73 958			2	Sleeve	Hylsa	5

3. Rear Bakre
70. Grey Grå
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F16

Bumpers and touch-up paint
1-can

Stötfångare och bättringsfärg
1-komponent

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	78 20 228		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0030						Black	Svart	
0040	1/4L	78 20 244		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0050						Black	Svart	
0060	1L	96 98 853		-1992, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0070						Cherry red	Cherryröd	
0080	1/4L	96 98 861		-1992, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0090						Cherry red	Cherryröd	
0100	1L	84 87 266		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0110						Cirrus white	Cirrusvit	
0120	1/4L	84 87 274		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0130						Cirrus white	Cirrusvit	
0140	1L	82 84 952		1992-93, BODY COLOUR 233	X	Touch-up paint	Bättringsfärg	3
0150						Carrara white	Carraravit	
0160	1/4L	82 84 960		1992-93, BODY COLOUR 233	X	Touch-up paint	Bättringsfärg	3
0170						Carrara white	Carraravit	
0180	1L	96 98 168		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0190						Embassy blue	Ambassadblå	
0200	1/4L	96 98 176		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0210						Embassy blue	Ambassadblå	
0220	1L	96 98 481		-1991, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0230						Rodonite red	Rodonitröd	
0240	1/4L	96 98 499		-1991, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0250						Rodonite red	Rodonitröd	
0260	1L	82 84 127		-1991, BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0270						Ultramarine	Ultramarin	
0280	1/4L	82 84 135		-1991, BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0290						Ultramarine	Ultramarin	
0300	1L	82 84 291		-1992, BODY COLOUR 219	X	Touch-up paint	Bättringsfärg	3
0310						Talladega	Talladega	
0320	1/4L	82 84 317		-1992, BODY COLOUR 219	X	Touch-up paint	Bättringsfärg	3
0330						Talladega	Talladega	
0340	1L	82 84 168		-1990, BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0350						Ascot grey	Ascotgrå	
0360	1/4L	82 84 176		-1990, BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0370						Ascot grey	Ascotgrå	
0380	1L	82 84 986		1992-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0390						Monte Carlo yellow	Monte Carlogul	
0400	1/4L	82 84 994		1992-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0410						Monte Carlo yellow	Monte Carlogul	
0420	1L	82 85 371		1993-, BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0430						Imola red	Imolaröd	
0440	1/4L	82 85 389		1993-, BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0450						Imola red	Imolaröd	
0460	1/4L	96 98 366		CV	X	Touch-up paint	Bättringsfärg	3
0470						Black 209	Svart 209	
0480						windscreen frame	vindruteram	
0490	1L	84 87 753			X	Thinner	Förtunning	5
0500	5L	84 87 761			X	Thinner	Förtunning	5
0510	1L	*88 16 415*		176), 20-80° NLS	X	Hardener	Härdare	5
0520								
0530						PRIMER	GRUNDFÄRG	
0540	1L	74 97 019			X	Primer	Grundfärg	6
0550						1K-Füllprimer	1K-Füllprimer	
0560	1L	82 85 231			X	Thinner	Förtunning	5
0570						2K-Expressverdünnung	2K-Expressverdünnung	
0580								
0590						FILLER	SPACKEL	
0600	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0610		82 85 496			X	Hardener	Härdare	5
0620	1L	84 87 621			X	Spray filler	Sprutspackel	6

176. For quick through-drying — För snabb genomtorkning

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F18

Bumpers and touch-up paint
2-can

Stötfångare och bättringsfärg
2-komponent

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Q.ty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 879		-1992, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0030						Cherry red	Cherryröd	
0040	1L	84 87 282		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0050						Cirrus white	Cirrusvit	
0060	1L	82 84 978		1992-93, BODY COLOUR 233	X	Touch-up paint	Bättringsfärg	3
0070						Carrara white	Carraravit	
0080	1L	82 84 143		-1991, BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0090						Ultramarine	Ultramarin	
0100	1L	96 98 184		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0110						Embassy blue	Ambassadblå	
0120	1L	97 46 264		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0130						Black	Svart	
0140	1L	96 98 507		-1991, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0150						Rodonite red	Rodonitröd	
0160	1L	82 84 325		-1992, BODY COLOUR 219	X	Touch-up paint	Bättringsfärg	3
0170						Talladega	Talladega	
0180	1L	82 84 184		-1990, BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0190						Ascot grey	Ascotgrå	
0200	1L	82 85 207		1992-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0210						Monte Carlo yellow	Monte Carlogul	
0220	1L	82 85 397		1993-, BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0230						Imola red	Imolaröd	
0240	1L	82 85 231			X	Thinner	Förtunning	5
0250						2K-Expressverdünnung	2K-Expressverdünnung	
0260	1/2L	84 86 300			X	Hardener	Härdare	5
0270						2K-Spezialhärter	2K-Spezialhärter	
0280	1L	84 86 292			X	Hardener	Härdare	5
0290						2K-Spezialhärter	2K-Spezialhärter	
0300								
0310						PRIMER	GRUNDFÄRG	
0320	4L	74 97 001			X	Primer	Grundfärg	6
0330						2K-Toppfüller	2K-Toppfüller	
0340	1/2L	84 86 300			X	Hardener	Härdare	5
0350						2K-Spezialhärter	2K-Spezialhärter	
0360	1L	84 86 292			X	Hardener	Härdare	5
0370						2K-Spezialhärter	2K-Spezialhärter	
0380								
0390						INTERMEDIATE PAINT	MELLANFÄRG	
0400	1L	84 87 712			X	Intermediate paint	Mellanfärg	6
0410						2K-Fillsealer	2K-Fillsealer	
0420						Colourable	Infärgningsbar	
0430	1L	82 85 231			X	Thinner	Förtunning	5
0440						2K-Expressverdünnung	2K-Expressverdünnung	
0450	1/2L	84 86 300			X	Hardener	Härdare	5
0460						2K-Spezialhärter	2K-Spezialhärter	
0470	1L	84 86 292			X	Hardener	Härdare	5
0480						2K-Spezialhärter	2K-Spezialhärter	
0490								
0500						FILLER	SPACKEL	
0510	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0520		82 85 496			X	Hardener	Härdare	5
0530	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F20

Two-coat type
Tvåskiktstyp

1825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						BASE METALLIC COAT	BASMETALLICFÄRG	
0020	1L	96 98 044		-1990, BODY COLOUR 200	X	Touch-up paint	Bättringsfärg	3
0030						Silver	Silver	
0040	1L	96 98 069		-1990, BODY COLOUR 202	X	Touch-up paint	Bättringsfärg	3
0050						Rose quartz	Rosenkvarts	
0060	1L	96 98 093		-1990, BODY COLOUR 204	X	Touch-up paint	Bättringsfärg	3
0070						Odoardo grey	Odoardogrå	
0080	1L	82 84 754		1991-93, BODY COLOUR 223	X	Touch-up paint	Bättringsfärg	3
0090						Odoardo grey	Odoardogrå	
0100	1L	96 98 051		-1990, BODY COLOUR 201	X	Touch-up paint	Bättringsfärg	3
0110						Bronze	Bronze	
0120	1L	96 98 465		-1990, BODY COLOUR 212	X	Touch-up paint	Bättringsfärg	3
0130						Magenta brown	Magentabrun	
0140	1L	82 84 770		1991, BODY COLOUR 222	X	Touch-up paint	Bättringsfärg	3
0150						Magenta brown	Magentabrun	
0160	1L	96 98 101		-1990, BODY COLOUR 205	X	Touch-up paint	Bättringsfärg	3
0170						Malachite green	Malakitgrön	
0180	1L	82 84 150		-1990, BODY COLOUR 216	X	Touch-up paint	Bättringsfärg	3
0190						Beryl green	Beryllgrön	
0200	1L	82 84 762		1991, BODY COLOUR 226	X	Touch-up paint	Bättringsfärg	3
0210						Beryl green	Beryllgrön	
0220	1L	82 84 499		1991-, BODY COLOUR 230	X	Touch-up paint	Bättringsfärg	3
0230						Scarabé green	Scarabégrön	
0240	1L	82 84 887		1992-, BODY COLOUR 235	X	Touch-up paint	Bättringsfärg	3
0250						Green	Eucalyptusgrön	
0260	1L	82 84 309		-1992, BODY COLOUR 220	X	Touch-up paint	Bättringsfärg	3
0270						Iridium blue	Iridiumblå	
0280	1L	82 84 507		1991-, BODY COLOUR 229	X	Touch-up paint	Bättringsfärg	3
0290						Le Mans blue	Le Mans-blå	
0300	1L	82 84 879		1992-93, BODY COLOUR 234	X	Touch-up paint	Bättringsfärg	3
0310						Nocturne blue	Nocturneblå	
0320	1L	82 84 473		1991-, BODY COLOUR 227	X	Touch-up paint	Bättringsfärg	3
0330						Citrin beige	Citrinebeige	
0340	1L	82 84 481		1991-, BODY COLOUR 228	X	Touch-up paint	Bättringsfärg	3
0350						Platana grey	Platanagrå	
0360	1L	82 85 405		1993-, BODY COLOUR 242	X	Touch-up paint	Bättringsfärg	3
0370						Ruby red	Rubinröd	
0380	1L	74 97 100		1993-, BODY COLOUR 248	X	Touch-up paint	Bättringsfärg	3
0390						Black	Svart	
0400	1L	97 46 975			X	Thinner	Förtunning	5
0410								
0420						PRIMER	GRUNDFÄRG	
0430	1L	74 97 019			X	Primer	Grundfärg	6
0440						1K-Füllprimer	1K-Füllprimer	
0450	1L	82 85 231			X	Thinner	Förtunning	5
0460						2K-Expressverdünnung	2K-Expressverdünnung	
0470								
0480						CLEAR ENAMEL	KLARLACK	
0490	1L	84 87 225			X	Clear enamel	Klarlack	3
0500	1L	82 85 231			X	Thinner	Förtunning	5
0510						2K-Expressverdünnung	2K-Expressverdünnung	
0520	1/2L	84 86 300			X	Hardener	Härdare	5
0530						2K-Spezialhärter	2K-Spezialhärter	
0540	1L	84 86 292			X	Hardener	Härdare	5
0550						2K-Spezialhärter	2K-Spezialhärter	
0560								
0570						FILLER	SPACKEL	
0580	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0590		82 85 496			X	Hardener	Härdare	5
0600	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-F22 *Other paint* / *Övrig färg*

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1850								
0010	1/4L	97 46 835		177)	X	Touch-up paint	Bättringsfärg	3
0020						Charcoal grey 176	Antracitgrå 176	
0030	1L	97 46 975			X	Thinner	Förtunning	5
0040								
0050	1/4L	97 46 850		177)	X	Touch-up paint	Bättringsfärg	3
0060						Black 175	Svart 175	
0070	1L	82 85 231			X	Thinner	Förtunning	5
0080						2K-Expressverdünnung	2K-Expressverdünnung	
0090								
0100						PRIMER	GRUNDFÄRG	
0110	1L	82 85 249		177)	X	Primer	Grundfärg	6
0120						1K-Plastic primer	1K-Plastic primer	
0130						ready to spray	sprutfärdig	
0140	1L	82 85 256		177)	X	Primer	Grundfärg	6
0150						1K-Plastic füller	1K-Plastic füller	
0160	1L	97 46 967			X	Thinner	Förtunning	5
0170								
0180						PLASTICIZER	MJUKGÖRARE	
0190	1L	97 46 314		177)	X	Plasticizer	Mjukgörare	6
0200						2K-Elastic adetiv	2K-Elastic adetiv	
0210								
0220	5L	97 46 884		178)	X	Cleaning agent	Rengöringsmedel	6
0230	1KG	82 85 264		178)	X	Filler	Spackel	6
0240	2L	97 46 892		178)	X	Primer	Grundfärg	6
0250	1L	97 46 900		178)	X	Hardener	Härdare	6
0260	1L	97 46 926		178)	X	Intermediate paint	Mellanfärg	6
0270	1L	97 46 934		178)	X	Hardener	Härdare	5
0280	1L	97 46 959		178)	X	Plasticizer	Mjukgörare	6
0290	1L	97 46 652		178)	X	Thinner	Förtunning	5
0300								
0310	5L	84 87 779			X	Cleaning agent	Rengöringsmedel	6
0320						silicon remover	silikonborttagare	
0330	1KG	79 94 510			X	Underseal	Underredsmassa	6
0340	1KG	79 94 882		179)	X	Stone chip interpaint	Stenskottsmellanfärg	6
0350		79 94 890		179)	X	Hardener	Härdare	5
0360	5L	*84 87 787*		180) NLS	X	Thinner	Förtunning	6


177. For plastic För plast
178. For rear spoiler (soft, rubber) För bakre spoiler (mjuk, gummi)
179. 2K, IR-lamp with minimum 100°C 2K, IR-lampa med minst 100°C
180. For cleaning airguns För rengöring av sprutpistoler

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

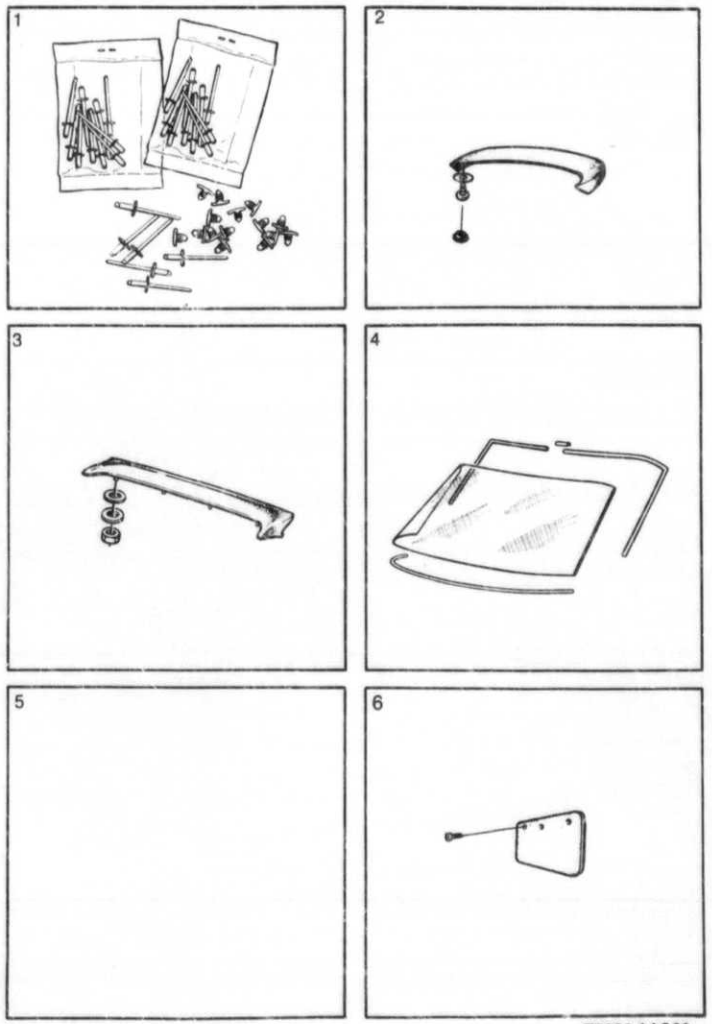

F5996 AAC90

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 09 694			X	Repair kit	Reparationssa'	6
0030		79 77 804			20	.Rivet	.Nit	5
0040		82 33 645			6	.Pop rivet	.Popnit	3
0050		69 11 614			20	.Clip	.Clips	5
0060								
0070	2	78 73 789		3) CK	X	Spoiler	Spoiler	3
0080		92 88 523		1)	1	.Spoiler	.Spoiler	3
0090		79 22 354			14	.Screw	.Skruv	5
0100		92 28 255			14	.Washer	.Bricka	5
0110		82 64 962			2	.Plug	.Plugg	5
0120				75/655407	1	.Assembly instruction	.Monteringsanvisning	
0130								
0140	3	78 74 381		3) 4SN	X	Spoiler	Spoiler	5
0150		92 90 362		1)	1	.Spoiler	.Spoiler	3
0160		73 98 423			5	.Nut	.Mutter	5
0170				75/655399	1	.Assembly instruction	.Monteringsanvisning	
0180								
0190	4	82 84 200		CV, NOT AU	X	Windscreen	Vindruta	3
0200		69 35 050			1	.Decor strip	.Dekorlist	3
0210		69 98 074		LOWER	1	.Strip holder	.Hållarlist	4
0220		69 98 082		LH	1	.Strip holder	.Hållarlist	4
0230		69 98 090		RH	1	.Strip holder	.Hållarlist	4
0240		69 98 108		1) COLOURED	1	.Window	.Ruta	3
0250		92 78 334			1	.Connector	.Skarvstycke	3
0260								
0270	4	82 84 218		CV, AU	X	Windscreen	Vindruta	3
0280		69 35 050			1	.Decor strip	.Dekorlist	3
0290		69 98 074		LOWER	1	.Strip holder	.Hållarlist	4
0300		69 98 082		LH	1	.Strip holder	.Hållarlist	4
0310		69 98 090		RH	1	.Strip holder	.Hållarlist	4
0320		69 98 116		1)	1	.Window	.Ruta	3
0330		92 78 334			1	.Connector	.Skarvstycke	3
0340								
0370	6	96 98 531		1992-, LH, PA	X	Splash guard kit	Stänkskyddssats	5
0380		69 43 830		1)	1	.Baffle	.Stänkskydd	5
0390		79 73 050			3	.Screw	.Skruv	5
0400								
0410	6	96 98 549		199-, RH, PA	X	Splash guard kit	Stänkskyddssats	5
0420		*69 43 838*		1) NLS	1	.Baffle	.Stänkskydd	5
0430		79 73 050			3	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

Complete sets
4-G02
Car body, external

Satser
Kaross, utvändig

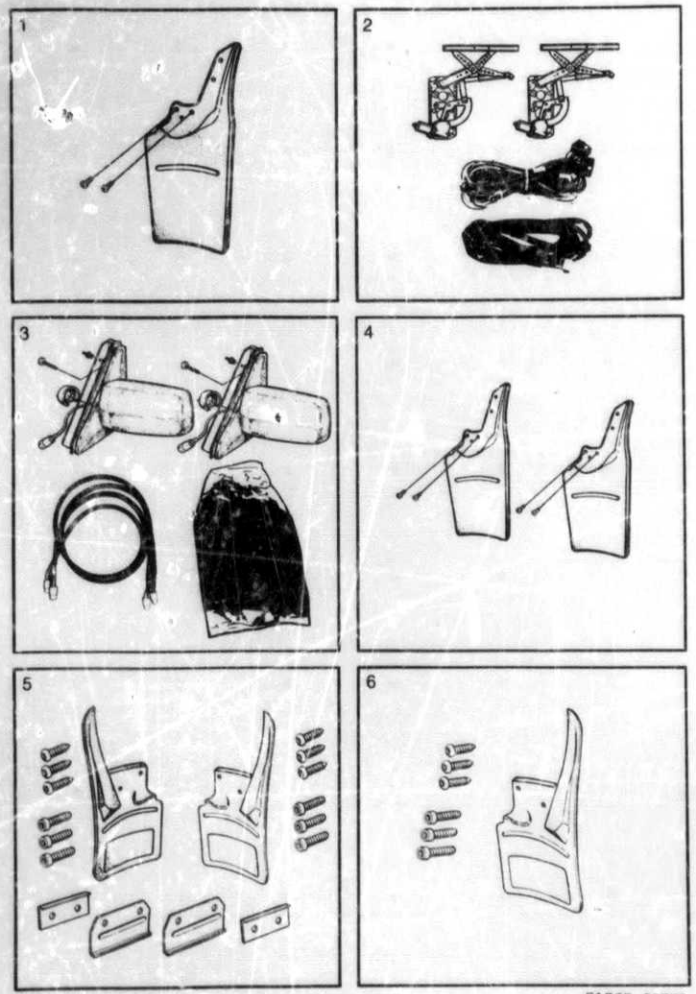

F1365 AAC90

2250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	78 74 746		3) LH, CK	X	Baffle	Stänkskydd	3
0020		69 37 593			1	.Baffle	.Stänkskydd	3
0030		79 22 982			3	.Screw	.Skruv	5
0040								
0050	1	78 74 753		3) RH, CK	X	Baffle	Stänkskydd	3
0060		69 37 585			1	.Baffle	.Stänkskydd	3
0070		79 22 982			3	.Screw	.Skruv	5
0080								
0090	1	78 74 761		3) LH, SN	X	Baffle	Stänkskydd	3
0100		69 37 478			1	.Baffle	.Stänkskydd	3
0110		79 22 982			3	.Screw	.Skruv	5
0120								
0130	1	78 74 779		3) RH, SN	X	Baffle	Stänkskydd	3
0140		69 37 486			1	.Baffle	.Stänkskydd	3
0150		79 22 982			3	.Screw	.Skruv	5
0160								
0170	2	85 47 218		-1990,2,53) I, 3CK, 2SN	X	Window lift kit	Fönsterhissats	6
0180		92 87 038		LH	1	.Window lift	.Fönsterhiss	5
0190		92 87 046		RH	1	.Window lift	.Fönsterhiss	5
0200		85 47 176			1	.Cable harness	.Ledningsnät	5
0210		85 47 044			2	.Cable harness	.Ledningsnät	5
0220		73 26 093			5	.Bushing	.Bussning	5
0230		79 33 443			2	.Clip	.Clips	5
0240		79 71 880			8	.Tensioning band	.Spännband	4
0250		79 72 441			2	.Screw	.Skruv	5
0260		88 17 884			2	.Cover washer	.Täckbricka	6
0270		88 17 892			2	.Clip	.Clips	
0280		95 01 859			1	.Switch	.Strömställare	3
0290		95 12 310			1	.Switch	.Strömställare	3
0300		95 12 823			1	.Relay	.Relä	5
0310		79 73 704			1	.Screw	.Skruv	5
0320		95 01 891			3	.Cover washer	.Täckbricka	5
0330		95 01 917			1	.Frame	.Ram	6
0340		85 21 668			2	.Cable joint	.Ledningsförbindning	3
0342		85 74 824			2	.Bellows	.Bälg	6
0350				75/661850	1	.Assembly instruction	.Monteringsanvisning	
0351								
0353	2	85 48 174		1991-,2,53) I, 3CK, 2SN	X	Window lift kit	Fönsterhissats	6
0354		41 08 502			1	.Switch	.Strömställare	3
0355		40 69 373			1	..Bulb	..Glödlampa	4
0357		79 71 880			6	.Tensioning band	.Spännband	4
0358		79 72 441			2	.Screw	.Skruv	5
0359		79 74 678			1	.Fuse	.Säkring	1
0360		85 91 257			1	.Cable harness	.Ledningsnät	5
0361		85 91 265			1	.Cable harness	.Ledningsnät	5
0362		88 17 884			2	.Cover washer	.Täckbricka	6
0363		88 17 892			2	.Clip	.Clips	
0366		92 87 038		LH	1	.Window lift	.Fönsterhiss	5
0368		92 87 046		RH	1	.Window lift	.Fönsterhiss	5
0371		95 01 685			2	.Contact housing	.Kontakthus	4
0372								
0374	2	85 47 226		-1990,2,53) I, 4SN, 5CK	X	Window lift kit	Fönsterhissats	6
0380		92 23 694		LH	1	.Window lift	.Fönsterhiss	6
0390		92 23 702		RH	1	.Window lift	.Fönsterhiss	6
0400		79 72 441			2	.Screw	.Skruv	5
0410		95 01 917			1	.Frame	.Ram	6
0420		95 12 310			1	.Switch	.Strömställare	3
0425		95 01 869			1	.Switch	.Strömställare	3
0430		95 12 823			1	.Relay	.Relä	5

2. Front Främre
3. Rear Bakre
53. Electrically operated Elektrisk manövrering
199. Ch. M2500001-, N7001863-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

Complete sets
4-G04
Car body, external

Satser
Kaross, utvändig

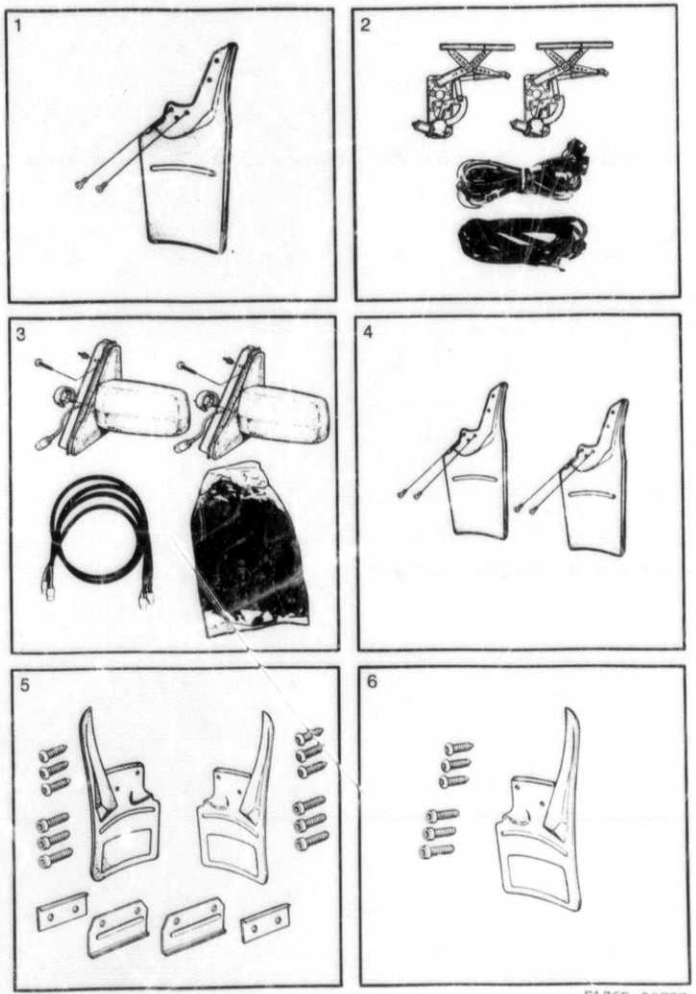

F1365 AAC90

2250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440		79 73 704			1	.Screw	.Skruv	5
0450		95 01 891			3	.Cover washer	.Täckbricka	5
0460		85 47 176			1	.Cable harness	.Ledningsnät	5
0470		85 47 044			2	.Cable harness	.Ledningsnät	5
0480		79 33 443			2	.Clip	.Clips	5
0490		73 26 093			5	.Bushing	.Bussning	5
0500		79 71 880			8	.Tensioning band	.Spännband	4
0510		85 21 668			2	.Cable joint	.Ledningsförbindning	3
0520		88 17 884			2	.Cover washer	.Täckbricka	6
0530		88 17 892			2	.Clip	.Clips	
0535		85 74 824			2	.Bellows	.Bälg	6
0536				75/661850	1	.Assembly instruction	.Monteringsanvisning	
0537								
0539	2	85 48 182		1991-,2,53) I, 4SN, 5CK	X	Window lift kit	Fönsterhissats	6
0540		41 08 502			1	.Switch	.Strömställare	3
0541		40 69 373			1	..Bulb	..Glödlampa	4
0542		79 71 880			6	.Tensioning band	.Spännband	4
0545		79 72 441			2	.Screw	.Skruv	5
0547		79 74 678			1	.Fuse	.Säkring	1
0550		85 91 257			1	.Cable harness	.Ledningsnät	5
0551		85 91 265			1	.Cable harness	.Ledningsnät	5
0553		88 17 884			2	.Cover washer	.Täckbricka	6
0554		88 17 892			2	.Clip	.Clips	
0555		92 23 694		LH	1	.Window lift	.Fönsterhiss	6
0556		92 23 702		RH	1	.Window lift	.Fönsterhiss	6
0557		95 01 685			2	.Contact housing	.Kontakthus	4
0560								
0569	2	85 47 242		-1990,3,53)	X	Window lift kit	Fönsterhissats	6
0570		95 01 867			2	.Switch	.Strömställare	3
0580		95 01 875			1	.Switch	.Strömställare	3
0590		92 89 356		LH	1	.Window lift	.Fönsterhiss	5
0600		92 89 364		RH	1	.Window lift	.Fönsterhiss	5
0610		85 67 638		LH	1	.Engine	.Motor	5
0620		85 67 646		RH	1	.Engine	.Motor	5
0630		79 33 443			6	.Clip	.Clips	5
0640		95 01 909			2	.Switch	.Strömställare	3
0650		85 91 497			2	.Cable harness	.Ledningsnät	5
0660		85 91 489			2	.Cable harness	.Ledningsnät	5
0670		79 71 880			6	.Tensioning band	.Spännband	4
0680		95 03 525			2	.Contact housing	.Kontakthus	4
0690		88 17 884			2	.Cover washer	.Täckbricka	6
0700		88 17 892			2	.Clip	.Clips	
0710				75/661348	1	.Assembly instruction	.Monteringsanvisning	
0720								
0730	3	85 46 970			X	Rear view mirror kit	Backspegelsats	4
0740		98 33 203		LH, WIDE ANGLE	1	.Rear view mirror	.Backspegel	3
0750		98 33 211		RH, CONVEX GLASS	1	.Rear view mirror	.Backspegel	3
0760		94 72 424		LH	1	.Cover	.Kåpa	4
0770		94 72 432		RH	1	.Cover	.Kåpa	4
0780		92 55 845			2	.Rivet	.Nit	5
0790		85 31 204			2	.Switch	.Strömställare	3
0800		85 41 856			2	.Bracket	.Hållare	5
0810		85 28 358			2	.Nut	.Mutter	5
0820		85 79 492			2	.Button	.Knapp	5
0830		85 47 283		DOORS	2	.Cable harness	.Ledningsnät	5
0840		85 47 275		SWITCHES	1	.Cable harness	.Ledningsnät	5
0850		79 71 880			8	.Tensioning band	.Spännband	4
0860		73 26 093			5	.Bushing	.Bussning	5
0870		85 31 212			2	.Cover washer	.Täckbricka	5

2. Front Främre
3. Rear Bakre
53. Electrically operated Elektrisk manövrering
199. Ch. M2500001-, N7001863-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

Complete sets
4-G06
Car body, external

Satser
Kaross, utvändig

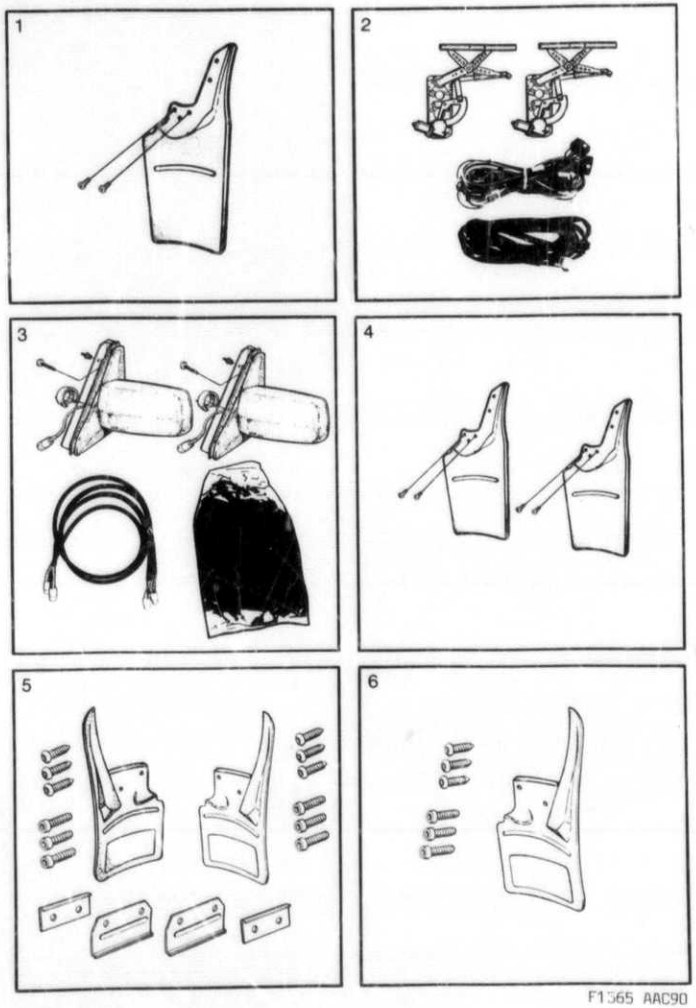

F1565 AAC90

2250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0880		95 03 442		4-POLE	2	.Contact housing	.Kontakthus	4
0890		95 03 434		4-POLE	2	.Contact housing	.Kontakthus	4
0900		80 74 098			1	.Nut	.Mutter	5
0910		85 22 534			1	.Cable terminal	.Kabelsko	5
0920		85 21 668			1	.Cable joint	.Ledningsförbindning	3
0930		80 59 230			1	.Screw	.Skruv	5
0940				75/661447	1	.Assembly instruction	.Monteringsanvisning	
0950								
0960	3	85 46 962		RHD	X	Rear view mirror kit	Backspegelsats	4
0970		98 33 245		LH, CONVEX GLASS	1	.Rear view mirror	.Backspegel	3
0980		98 37 196		RH, WIDE ANGLE	1	.Rear view mirror	.Backspegel	3
0990		94 72 424		LH	1	.Cover	.Kåpa	4
1000		94 72 432		RH	1	.Cover	.Kåpa	4
1010		94 68 893			2	.Clip	.Clips	5
1020		85 31 204			2	.Switch	.Strömställare	3
1030		85 41 856			2	.Bracket	.Hållare	5
1040		85 28 358			2	.Nut	.Mutter	5
1050		85 79 492			2	.Button	.Knapp	5
1060		85 47 283		DOORS	1	.Cable harness	.Ledningsnät	5
1070		85 47 275		SWITCHES	1	.Cable harness	.Ledningsnät	5
1080		79 71 880			8	.Tensioning band	.Spännband	4
1090		73 26 093			5	.Bushing	.Bussning	5
1100		85 31 212			2	.Cover washer	.Täckbricka	5
1110		95 03 442		4-POLE	2	.Contact housing	.Kontakthus	4
1120		95 03 434		4-POLE	2	.Contact housing	.Kontakthus	4
1130		80 74 098			1	.Nut	.Mutter	5
1140		85 22 534			1	.Cable terminal	.Kabelsko	5
1150		85 21 668			1	.Cable joint	.Ledningsförbindning	3
1160		80 59 230			1	.Screw	.Skruv	5
1170				75/661447	1	.Assembly instruction	.Monteringsanvisning	
1172								
1180	4	69 39 375		3) LH, RH, CK	X	Baffle	Stänkskydd	3
1190		69 19 054			2	.Protecting moulding	.Skyddslist	3
1200		69 37 593		LH	1	.Baffle	.Stänkskydd	3
1210		69 37 585		RH	1	.Baffle	.Stänkskydd	3
1220		79 22 974			4	.Screw	.Skruv	5
1230		79 22 982			6	.Screw	.Skruv	5
1240		79 75 774			2	.Screw	.Skruv	5
1250		82 27 738			2	.Support plate	.Stödplatta	6
1260		92 22 613			2	.Attaching plate	.Fästplåt	3
1280		*79 72 896*		NLS - USE 7965684, 8073090	4	.Screw	.Skruv	5
1290								
1300	4	69 39 383		3) LH, RH, SN	X	Baffle	Stänkskydd	3
1310		69 19 054			2	.Protecting moulding	.Skyddslist	3
1320		69 37 478		LH	1	.Baffle	.Stänkskydd	3
1330		69 37 486		RH	1	.Baffle	.Stänkskydd	3
1340		79 22 974			4	.Screw	.Skruv	5
1350		79 22 982			6	.Screw	.Skruv	5
1360		79 75 774			2	.Screw	.Skruv	5
1370		82 27 738			2	.Support plate	.Stödplatta	6
1380		92 22 613			2	.Attaching plate	.Fästplåt	3
1400		*79 72 896*		NLS - USE 7965684, 8073090	4	.Screw	.Skruv	5
1400								
1410								
1420	5	96 98 408		3) LH, RH, AERO	X	Baffle	Stänkskydd	3
1430		69 42 528			1	.Baffle	.Stänkskydd	3
1440		69 42 536			1	.Baffle	.Stänkskydd	3
1450		79 22 974			4	.Screw	.Skruv	5
1460		79 22 982			2	.Screw	.Skruv	5
1470		79 69 314			2	.Screw	.Skruv	5
1480		79 73 050			4	.Screw	.Skruv	5

3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-G08

Car body, external

Kaross, utvändig

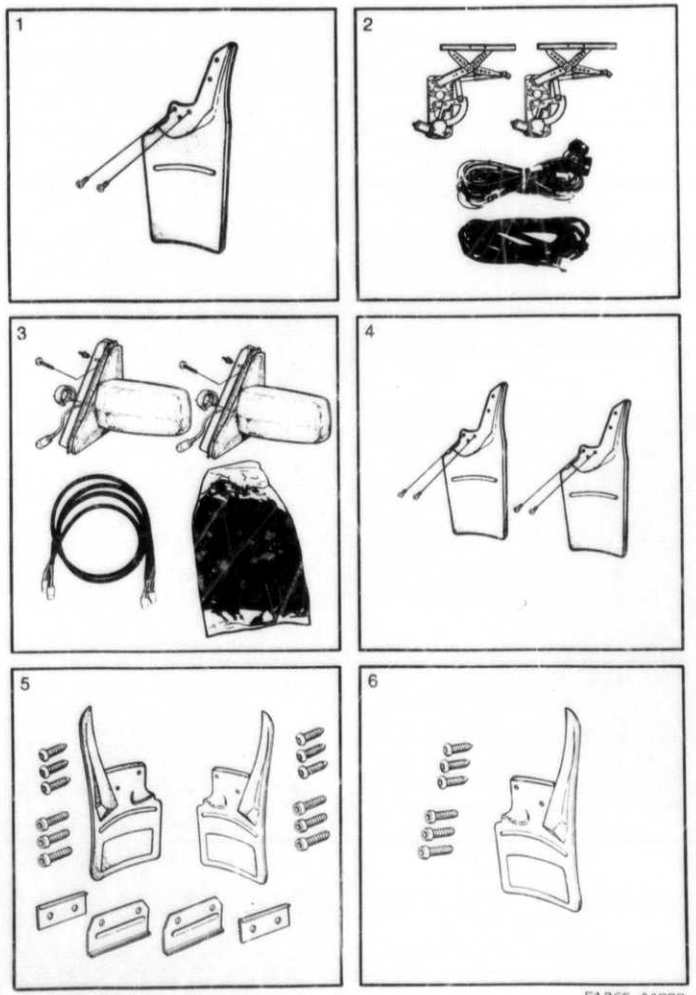

F1365 AAC90

2250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1490		82 27 738			2	. Support plate	. Stödplatta	6
1500		92 22 613			2	. Attaching plate	. Fästplåt	3
1510								
1520	6	96 98 390		3) LH, AERO	1	Baffle	Stänkskydd	3
1530		69 42 536		LH	1	. Baffle	. Stänkskydd	3
1540		79 22 974			2	. Screw	. Skruv	5
1550		79 22 982			1	. Screw	. Skruv	5
1560		79 69 314			1	. Screw	. Skruv	5
1570		79 73 050			2	. Screw	. Skruv	5
1580								
1590	6	96 98 382		3) RH, AERO	X	Baffle	Stänkskydd	3
1600		69 42 528		RH	1	. Baffle	. Stänkskydd	3
1610		79 22 974			2	. Screw	. Skruv	5
1620		79 22 982			1	. Screw	. Skruv	5
1630		79 69 314			1	. Screw	. Skruv	5
1640		79 73 050			2	. Screw	. Skruv	5

3. Rear Bakre


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

4-G10

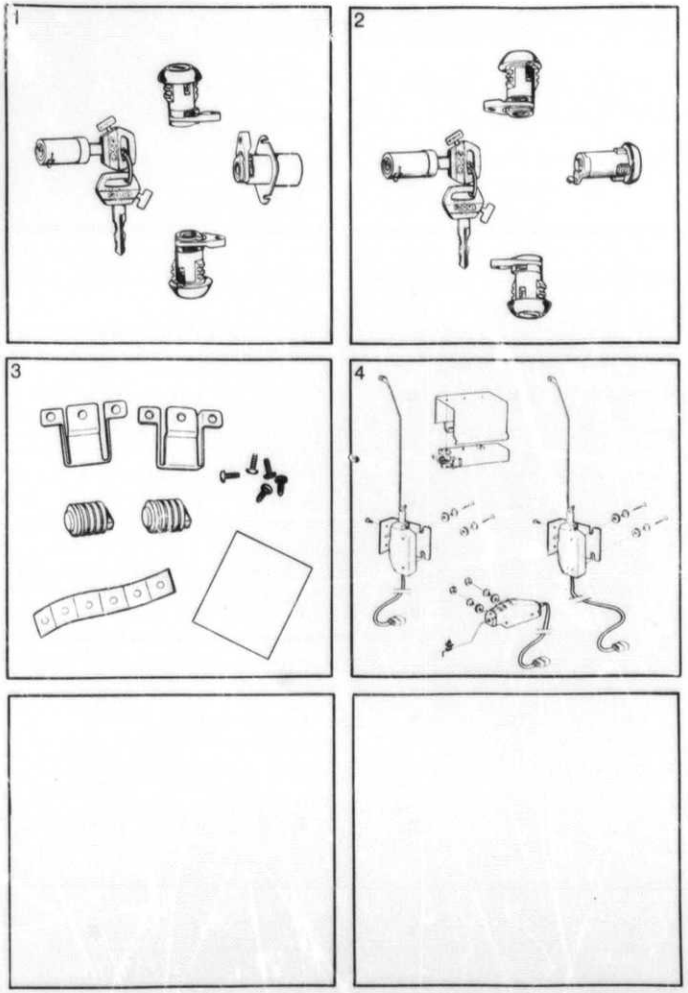

F1366 AAC90

2300	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 27 927		CK	X	Lock cylinder set	Låscylindersats	5
0020								
0030	2	92 28 008		SN	X	Lock cylinder set	Låscylindersats	5
0040								
0050	2	92 31 002		SN, FOR CENTRAL LOCK	X	Lock cylinder set	Låscylindersats	5
0060								
0070	3	69 16 050		CK	X	Buffer	Buffert	5
0080								
0090		*69 14 576*		1) NLS	2	.Bracket	.Hållare	5
0100		*69 14 584*		NLS - USE 4006425	2	.Buffer	.Buffert	4
0110		79 22 727			6	.Screw	.Skruv	5
0120		92 30 293			6	.Washer	.Bricka	5
0130		69 43 989			2	.Guard	.Skydd	6
0140								
0160	4	85 47 127		1990, 3CK, I	X	Central lock	Centrallås	5
0170		85 47 168			1	.Cable harness	.Ledningsnät	5
0180		85 91 273			1	.Cable harness	.Ledningsnät	5
0190		85 91 240			1	.Cable harness	.Ledningsnät	5
0200		85 91 307			1	.Cable harness	.Ledningsnät	5
0210				75/661660	1	.Assembly instruction	.Monteringsanvisning	
0220		85 98 245		LH	1	.Pull rod	.Dragstång	
0230		85 98 252		RH	1	.Pull rod	.Dragstång	
0240		85 98 229		LH	1	.Bracket	.Konsol	6
0250		85 98 237		RH	1	.Bracket	.Konsol	6
0260		85 91 216			1	.Control device	.Styrdon	3
0270		85 91 224			2	.Electric motor	.Elmotor	3
0280		85 73 966			6	.Bushing	.Bussning	4
0290		85 73 958			6	.Sleeve	.Hylsa	5
0300		80 59 537			4	.Screw	.Skruv	5
0310		79 73 597			6	.Screw	.Skruv	5
0320		79 71 880			12	.Tensioning band	.Spännband	4
0330		85 91 422			2	.Protection	.Skydd	4
0340		85 74 501			1	.Pull rod	.Dragstång	5
0350		85 75 391			1	.Bracket	.Konsol	6
0360		79 72 441			2	.Screw	.Skruv	5
0370		85 91 414			1	.Attaching brace	.Fästbygel	6
0380		79 71 344			2	.Screw	.Skruv	5
0390		95 01 685			1	.Contact housing	.Kontakthus	4
0400		95 03 319			5	.Contact housing	.Kontakthus	4
0410		95 03 327			1	.Contact housing	.Kontakthus	4
0420		95 03 277			2	.Contact housing	.Kontakthus	4
0430		85 61 623			1	.Contact housing	.Kontakthus	4
0440		71 08 491			12	.Clamp	.Klammer	5
0450		97 30 995			2	.Clip	.Clips	5
0460		73 26 093			1	.Bushing	.Bussning	5
0470		85 65 855			1	.Clip	.Clips	6
0480		95 29 975			1	.Electronic unit	.Elektronikenhet	3
0490		95 64 170			1	.Attaching brace	.Fästbygel	6
0500		95 64 345			1	.Spacer washer	.Distansbricka	5
0510		85 03 286			1	.Cable terminal	.Kabelsko	5
0520								
0530	4	85 47 150		1990, 2SN, I,	X	Central lock	Centrallås	5
0540		85 47 168			1	.Cable harness	.Ledningsnät	5
0550		85 91 273			1	.Cable harness	.Ledningsnät	5
0560		85 91 240			1	.Cable harness	.Ledningsnät	5
0570		85 46 913			1	.Cable harness	.Ledningsnät	5
0580				75/661652	1	.Assembly instruction	.Monteringsanvisning	
0590		85 98 245		LH	1	.Pull rod	.Dragstång	
0600		85 98 252		RH	1	.Pull rod	.Dragstång	
0610		85 98 229		LH	1	.Bracket	.Konsol	6
0620		85 98 237		RH	1	.Bracket	.Konsol	6
0630		85 91 216			1	.Control device	.Styrdon	3

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


4-G12

Car body, external
Kaross, utvändig

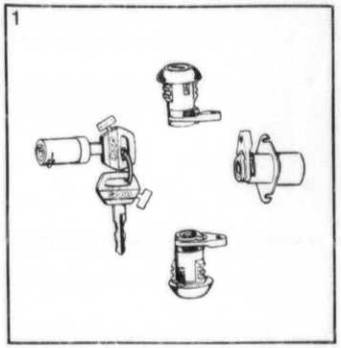

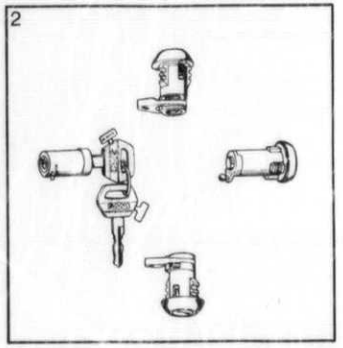

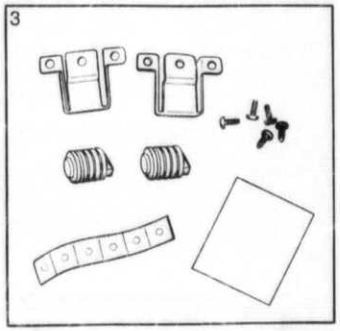

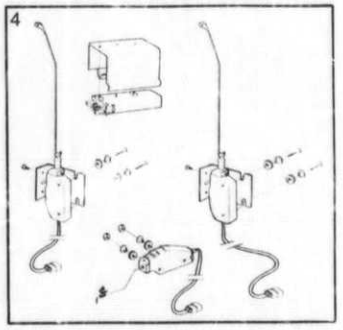

F1366 AAC90

2300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640		85 91 224			1	.Electric motor	.Elmotor	3
0650		85 73 966			6	.Bushing	.Bussning	4
0660		85 73 958			6	.Sleeve	.Hylsa	5
0670		80 59 537			4	.Screw	.Skruv	5
0680		79 73 597			4	.Screw	.Skruv	5
0690		79 71 880			12	.Tensioning band	.Spännband	4
0700		85 91 422			2	.Protection	.Skydd	4
0710		85 91 232			1	.Electric motor	.Elmotor	3
0720		80 74 098			2	.Nut	.Mutter	5
0730		73 26 093			1	.Bushing	.Bussning	5
0740		95 29 975			1	.Electronic unit	.Elektronikenhet	3
0750		85 91 414			1	.Attaching brace	.Fästbygel	6
0760		79 71 344			2	.Screw	.Skruv	5
0770		95 01 685			1	.Contact housing	.Kontakthus	4
0780		95 03 319			5	.Contact housing	.Kontakthus	4
0790		95 03 327			1	.Contact housing	.Kontakthus	4
0800		95 03 277			2	.Contact housing	.Kontakthus	4
0810		85 61 623			1	.Contact housing	.Kontakthus	4
0820		71 08 491			12	.Clamp	.Klammer	5
0830		97 30 995			2	.Clip	.Clips	5
0840		69 41 306			1	.Handle	.Handtag	5
0850		85 65 855			1	.Clip	.Clips	6
0860		95 64 170			1	.Attaching brace	.Fästbygel	6
0870		95 64 345			1	.Spacer washer	.Distansbricka	5
0880		85 03 286			1	.Cable terminal	.Kabelsko	5
0890								
0900	4	85 47 135		1990, 5CK, I	X	Central lock	Centrallås	5
0910		85 47 168			1	.Cable harness	.Ledningsnät	5
0920		85 91 273			1	.Cable harness	.Ledningsnät	5
0930		85 91 240			1	.Cable harness	.Ledningsnät	5
0940		85 91 307			1	.Cable harness	.Ledningsnät	5
0950		85 91 281			2	.Cable harness	.Ledningsnät	5
0960				75/661698	1	.Assembly instruction	.Monteringsanvisning	
0970		85 98 245		LH	1	.Pull rod	.Dragstång	
0980		85 98 252		RH	1	.Pull rod	.Dragstång	
0990		85 98 211		LH	1	.Bracket	.Konsol	6
1000		95 51 151		RH	1	.Bracket	.Konsol	6
1010		85 91 216			1	.Control device	.Styrdon	3
1020		85 91 224			4	.Electric motor	.Elmotor	3
1030		85 73 966			8	.Bushing	.Bussning	4
1040		85 73 958			10	.Sleeve	.Hylsa	5
1050		80 59 537			4	.Screw	.Skruv	5
1060		79 73 597			10	.Screw	.Skruv	5
1070		79 71 880			12	.Tensioning band	.Spännband	4
1080		85 91 422			2	.Protection	.Skydd	4
1090		85 78 221			2	.Pull rod	.Dragstång	5
1100		85 74 501			1	.Pull rod	.Dragstång	5
1110		85 75 391			1	.Bracket	.Konsol	6
1120		70 85 541			2	.Sleeve	.Hylsa	3
1130		84 61 675			2	.Clip	.Clips	5
1140		91 66 273		(8019895)	2	.Screw	.Skruv	5
1150		79 72 607			2	.Screw	.Skruv	5
1160		85 91 414			1	.Attaching brace	.Fästbygel	6
1170		79 71 344			2	.Screw	.Skruv	5
1180		95 01 685			1	.Contact housing	.Kontakthus	4
1190		95 03 319			5	.Contact housing	.Kontakthus	4
1200		95 03 327			1	.Contact housing	.Kontakthus	4
1210		95 03 277			2	.Contact housing	.Kontakthus	4
1220		85 61 623			1	.Contact housing	.Kontakthus	4
1230		71 08 491			12	.Clamp	.Klammer	5
1240		97 30 995			2	.Clip	.Clips	5
1250		73 26 093			1	.Bushing	.Bussning	5
1260		85 03 286			1	.Cable terminal	.Kabelsko	5
1270		85 65 855			1	.Clip	.Clips	6
1280		95 29 975			1	.Electronic unit	.Elektronikenhet	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Complete sets

4-G14

Car body, external

Satser

Kaross, utvändig

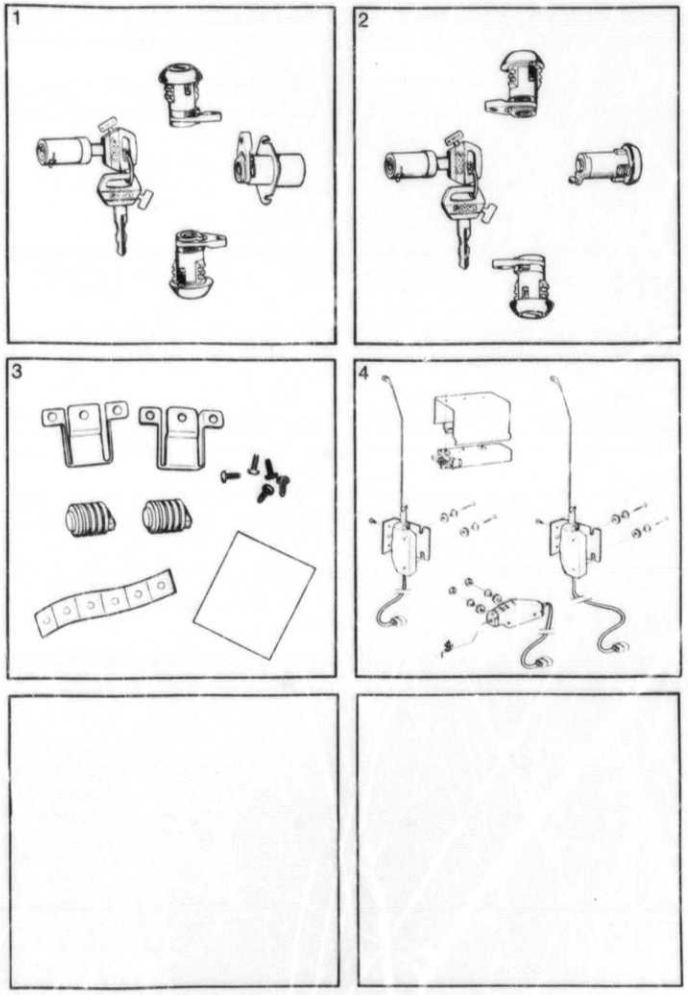

F1366 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
	95 64 170			1	.Attaching brace	.Fästbygel	6
	95 64 345			1	.Spacer washer	.Distansbricka	5
4	85 47 143		1990, 4SN, I	X	Central lock	Centrallås	5
	85 47 168			1	.Cable harness	.Ledningsnät	5
	85 91 273			1	.Cable harness	.Ledningsnät	5
	85 91 240			1	.Cable harness	.Ledningsnät	5
	85 46 913			1	.Cable harness	.Ledningsnät	5
	85 91 281			2	.Cable harness	.Ledningsnät	5
			75/661025	1	.Assembly instruction	.Monteringsanvisning	
	85 98 245		LH	1	.Pull rod	.Dragstång	
	85 98 252		RH	1	.Pull rod	.Dragstång	
	85 98 211		LH	1	.Bracket	.Konsol	6
	95 51 151		RH	1	.Bracket	.Konsol	6
	85 91 216			1	.Control device	.Styrdon	3
	85 91 224			3	.Electric motor	.Elmotor	3
	85 73 966			8	.Bushing	.Bussning	4
	85 73 958			10	.Sleeve	.Hylsa	5
	80 59 537			4	.Screw	.Skruv	5
	79 73 597			8	.Screw	.Skruv	5
	79 71 880			12	.Tensioning band	.Spännband	4
	85 91 422			2	.Protection	.Skydd	4
	85 91 232			1	.Electric motor	.Elmotor	3
	85 78 221			2	.Pull rod	.Dragstång	5
	70 85 541			2	.Sleeve	.Hylsa	3
	84 61 675			2	.Clip	.Clips	5
	80 74 098			2	.Nut	.Mutter	5
	95 29 975			1	.Electronic unit	.Elektronikenhet	3
	85 91 414			1	.Attaching brace	.Fästbygel	6
	79 71 344			2	.Screw	.Skruv	5
	95 01 685			1	.Contact housing	.Kontakthus	4
	95 03 319			5	.Contact housing	.Kontakthus	4
	95 03 327			1	.Contact housing	.Kontakthus	4
	95 03 277			2	.Contact housing	.Kontakthus	4
	85 61 623			1	.Contact housing	.Kontakthus	4
	71 08 491			12	.Clamp	.Klammer	5
	97 30 995			2	.Clip	.Clips	5
	73 26 093			1	.Bushing	.Bussning	5
	85 03 286			1	.Cable terminal	.Kabelsko	5
	85 65 855			1	.Clip	.Clips	6
	95 64 170			1	.Attaching brace	.Fästbygel	6
	69 41 306			1	.Handle	.Handtag	5
	95 64 345			1	.Spacer washer	.Distansbricka	5
4	85 47 085		-1990, 3CK, C	X	Central lock	Centrallås	5
	85 91 216			1	.Control device	.Styrdon	3
	85 91 224			2	.Electric motor	.Elmotor	3
	85 98 245		LH	1	.Pull rod	.Dragstång	
	85 98 252		RH	1	.Pull rod	.Dragstång	
	85 98 229		LH	1	.Bracket	.Konsol	6
	85 98 237		RH	1	.Bracket	.Konsol	6
	80 59 529			4	.Screw	.Skruv	5
	85 73 966			6	.Bushing	.Bussning	4
	85 73 958			6	.Sleeve	.Hylsa	5
	79 73 597			6	.Screw	.Skruv	5
	85 74 501			1	.Pull rod	.Dragstång	5
	85 75 391			1	.Bracket	.Konsol	6
	79 72 441			2	.Screw	.Skruv	5
	95 29 975			1	.Electronic unit	.Elektronikenhet	3
	85 91 414			1	.Attaching brace	.Fästbygel	6
	79 71 344			2	.Screw	.Skruv	5
	85 91 422			2	.Protection	.Skydd	4
	79 71 880			12	.Tensioning band	.Spännband	4
	71 08 491			12	.Clamp	.Klammer	5
	97 30 995			2	.Clip	.Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8A GROUP INDEX


Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


4-G16


Car body, external

Kaross, utvändig

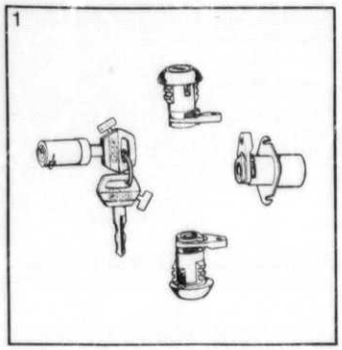

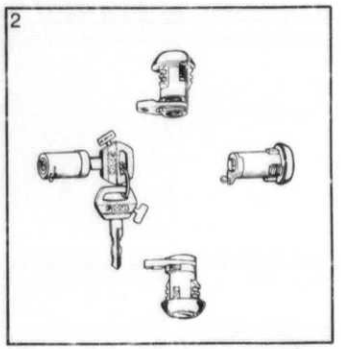

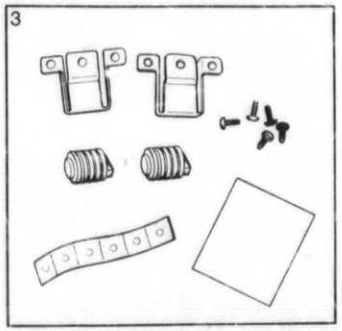

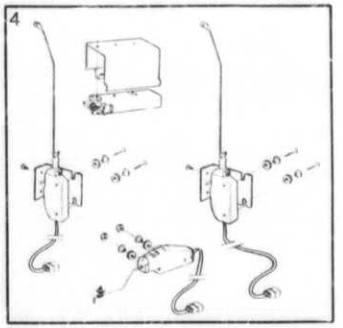

F1366 AAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
2210	85 91 307			1	.Cable harness	.Ledningsnät	5
2220	85 46 939			1	.Cable harness	.Ledningsnät	5
2230	85 91 273			1	.Cable harness	.Ledningsnät	5
2240	85 46 897			1	.Cable harness	.Ledningsnät	5
2250	85 91 240			1	.Cable harness	.Ledningsnät	5
2260	95 01 685			1	.Contact housing	.Kontakthus	4
2270	95 03 277			1	.Contact housing	.Kontakthus	4
2280	95 03 319			2	.Contact housing	.Kontakthus	4
2290	95 03 327			1	.Contact housing	.Kontakthus	4
2300	85 61 623			1	.Contact housing	.Kontakthus	4
2310	73 26 093			1	.Bushing	.Bussning	5
2320	85 03 286			1	.Cable terminal	.Kabelsko	5
2330	85 65 855			1	.Clip	.Clips	6
2340	95 64 170			1	.Attaching brace	.Fästbygel	6
2350	95 64 345			1	.Spacer washer	.Distansbricka	5
2360			75/661017	1	.Assembly instruction	.Monteringsanvisning	
2740							
2750	85 47 119	4	-1990, 2SN, C	X	Central lock	Centrallås	5
2760	85 91 216			1	.Control device	.Styrdon	3
2770	85 91 224			1	.Electric motor	.Elmotor	3
2780	85 91 232			1	.Electric motor	.Elmotor	3
2820	85 98 245		LH	1	.Pull rod	.Dragstång	
2830	85 98 252		RH	1	.Pull rod	.Dragstång	
2840	85 98 229		LH	1	.Bracket	.Konsol	6
2850	85 98 237		RH	1	.Bracket	.Konsol	6
2860	80 59 529			4	.Screw	.Skruv	5
2870	85 73 966			6	.Bushing	.Bussning	4
2880	85 73 958			6	.Sleeve	.Hylsa	5
2890	79 73 597			4	.Screw	.Skruv	5
2900	80 74 098			2	.Nut	.Mutter	5
2910	95 29 975			1	.Electronic unit	.Elektronikenhet	3
2920	85 91 414			1	.Attaching brace	.Fästbygel	6
2930	79 71 344			2	.Screw	.Skruv	5
2940	85 91 422			2	.Protection	.Skydd	4
2950	79 71 880			12	.Tensioning band	.Spännband	4
2960	71 08 491			12	.Clamp	.Klammer	5
2970	97 30 995			2	.Clip	.Clips	5
2980	85 46 913			1	.Cable harness	.Ledningsnät	5
2990	85 46 939			1	.Cable harness	.Ledningsnät	5
3000	85 91 273			1	.Cable harness	.Ledningsnät	5
3010	85 46 897			1	.Cable harness	.Ledningsnät	5
3020	85 91 240			1	.Cable harness	.Ledningsnät	5
3030	95 01 685			1	.Contact housing	.Kontakthus	4
3040	95 03 277			2	.Contact housing	.Kontakthus	4
3050	95 03 319			5	.Contact housing	.Kontakthus	4
3060	95 03 327			1	.Contact housing	.Kontakthus	4
3070	85 61 623			1	.Contact housing	.Kontakthus	4
3080	73 26 093			1	.Bushing	.Bussning	5
3090	85 03 286			1	.Cable terminal	.Kabelsko	5
3100			75/661009	1	.Assembly instruction	.Monteringsanvisning	
3110	85 65 855			1	.Clip	.Clips	6
3120	95 64 170			1	.Attaching brace	.Fästbygel	6
3130	95 64 345			1	.Spacer washer	.Distansbricka	5
3510							
3520	85 47 093	4	-1990, 5CK, C	X	Central lock	Centrallås	5
3530	85 91 216			1	.Control device	.Styrdon	3
3540	85 91 224			4	.Electric motor	.Elmotor	3
3570	85 98 245		LH	1	.Pull rod	.Dragstång	
3580	85 98 252		RH	1	.Pull rod	.Dragstång	
3590	85 78 221			2	.Pull rod	.Dragstång	5
3600	84 61 675			2	.Clip	.Clips	5
3620	85 98 211		LH	1	.Bracket	.Konsol	6
3630	95 51 151		RH	1	.Bracket	.Konsol	6
3640	80 59 529			4	.Screw	.Skruv	5
3650	85 73 966			8	.Bushing	.Bussning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Complete sets

4-G18

Car body, external

Satser

Kaross, utvändig

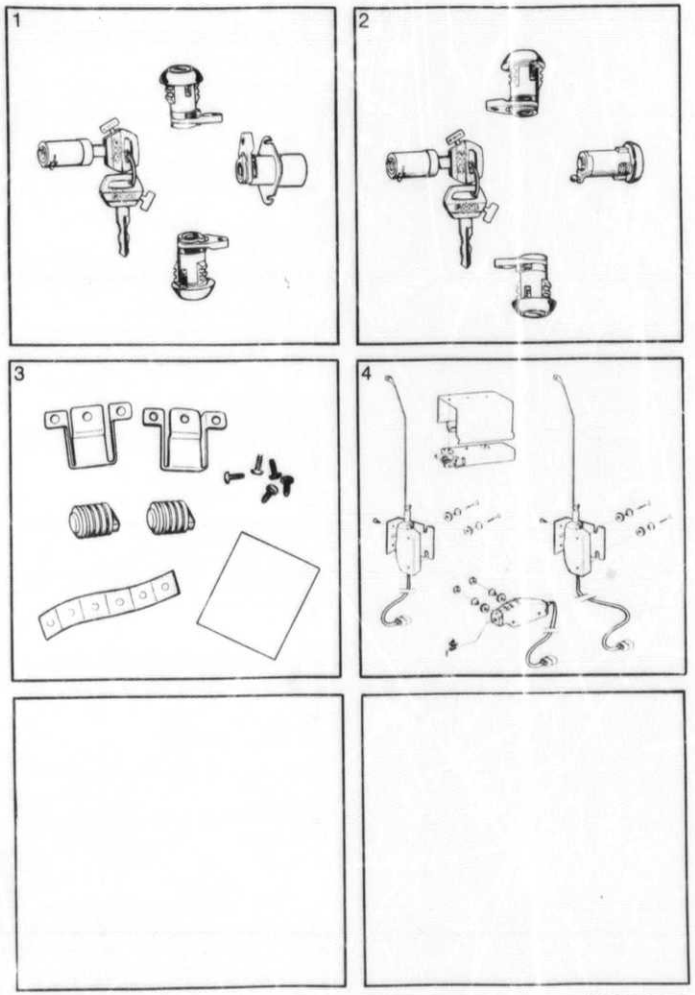

F1366 AAC90

2300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
3660		85 73 958			10	.Sleeve	.Hylsa	5
3670		79 73 597			10	.Screw	.Skruv	5
3680		70 85 541			2	.Sleeve	.Hylsa	3
3690		85 74 501			1	.Pull rod	.Dragstång	5
3700		85 75 391			1	.Bracket	.Konsol	6
3710		79 72 441			2	.Screw	.Skruv	5
3720		85 91 414			1	.Attaching brace	.Fästbygel	6
3730		79 71 344			2	.Screw	.Skruv	5
3740		85 91 422			2	.Protection	.Skydd	4
3750		79 71 880			12	.Tensioning band	.Spännband	4
3760		71 08 491			12	.Clamp	.Klammer	5
3770		97 30 995			2	.Clip	.Clips	5
3780		85 91 281			2	.Cable harness	.Ledningsnät	5
3790		95 29 975			1	.Electronic unit	.Elektronikenhet	3
3800		85 91 307			1	.Cable harness	.Ledningsnät	5
3810		85 46 939			1	.Cable harness	.Ledningsnät	5
3820		85 91 273			1	.Cable harness	.Ledningsnät	5
3830		85 46 905			1	.Cable harness	.Ledningsnät	5
3840		85 91 240			1	.Cable harness	.Ledningsnät	5
3850		95 01 685			1	.Contact housing	.Kontakthus	4
3860		95 03 277			2	.Contact housing	.Kontakthus	4
3870		95 03 319			5	.Contact housing	.Kontakthus	4
3880		95 03 327			1	.Contact housing	.Kontakthus	4
3890		85 61 623			1	.Contact housing	.Kontakthus	4
3900		73 26 093			1	.Bushing	.Bussning	5
3910		85 03 286			1	.Cable terminal	.Kabelsko	5
3920		85 65 855			1	.Clip	.Clips	6
3930		95 64 170			1	.Attaching brace	.Fästbygel	6
3940		95 64 345			1	.Spacer washer	.Distansbricka	5
3950				75/661033	1	.Assembly instruction	.Monteringsanvisning	
3960								
4390	4	85 47 101		-1990, 4SN, C	X	Central lock	Centrallås	5
4400		85 91 216			1	.Control device	.Styrdon	3
4410		85 91 224			3	.Electric motor	.Elmotor	3
4420		85 91 232			1	.Electric motor	.Elmotor	3
4450		85 98 245		LH	1	.Pull rod	.Dragstång	
4460		85 98 252		RH	1	.Pull rod	.Dragstång	
4470		85 78 221			2	.Pull rod	.Dragstång	5
4480		84 61 675			2	.Clip	.Clips	5
4500		85 98 211		LH	1	.Bracket	.Konsol	6
4510		95 51 151		RH	1	.Bracket	.Konsol	6
4520		80 59 529			4	.Screw	.Skruv	5
4530		85 73 966			8	.Bushing	.Bussning	4
4540		85 73 958			10	.Sleeve	.Hylsa	5
4550		79 73 597			8	.Screw	.Skruv	5
4560		80 74 098			2	.Nut	.Mutter	5
4570		70 85 541			2	.Sleeve	.Hylsa	3
4580		*85 91 208*		NLS - USE 8565855,	1	.Electronic unit	.Elektronikenhet	3
4580				9529975, 9564170,				
4580				9564345				
4590		85 91 414			1	.Attaching brace	.Fästbygel	6
4600		79 71 344			2	.Screw	.Skruv	5
4610		85 91 422			4	.Protection	.Skydd	4
4620		79 71 880			12	.Tensioning band	.Spännband	4
4630		71 08 491			12	.Clamp	.Klammer	5
4640		97 30 995			2	.Clip	.Clips	5
4650		85 91 281			2	.Cable harness	.Ledningsnät	5
4660		85 46 939			1	.Cable harness	.Ledningsnät	5
4670		85 91 273			1	.Cable harness	.Ledningsnät	5
4680		85 46 905			1	.Cable harness	.Ledningsnät	5
4690		85 46 913			1	.Cable harness	.Ledningsnät	5
4700		85 91 240			1	.Cable harness	.Ledningsnät	5
4710		95 01 685			1	.Contact housing	.Kontakthus	4
4720		95 03 277			2	.Contact housing	.Kontakthus	4
4730		95 03 319			5	.Contact housing	.Kontakthus	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24


Complete sets

4-G20

Car body, external

Satser

Kaross, utvändig

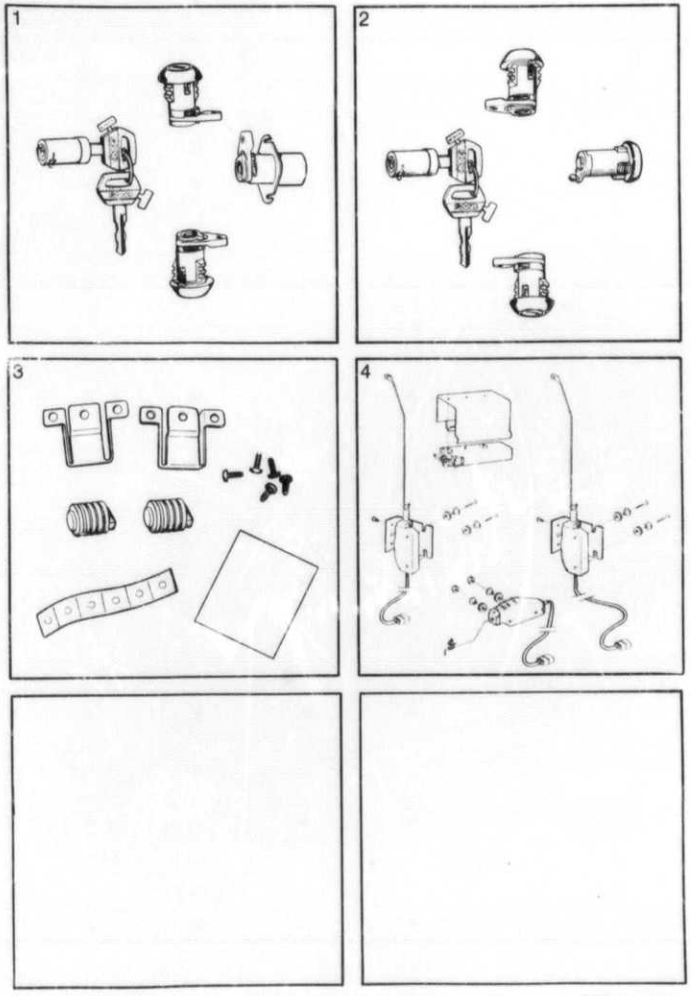

F1366 AAC90

2300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
4740		95 03 327			1	. Contact housing	. Kontakthus	4
4750		85 61 623			1	. Contact housing	. Kontakthus	4
4760		73 26 093			1	. Bushing	. Bussning	5
4770		85 03 286			1	. Cable terminal	. Kabelsko	5
4780				75/661025	1	. Assembly instruction	. Monteringsanvisning	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension. Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8A GROUP INDEX

Main body	4-A06
Hood, front, fenders	4-C08
Doors, trunk lid	4-C14
External details, glass, sealings	4-D16
Bumpers and touch-up paint	4-F12
Complete sets	4-F24

8B

Body, internal
Kaross, invändig
Carrocería, inferior

5-A02

TABLE OF CONTENTS

0041	**Instrument panel**		
0040	Instrument panel, panel upper, instrument plate	8B : 5	5-A06
0050	Instrument panel, panel outlet	8B : 9	5-A10
0260	Instrument panel, panel lower	8B : 11	5-A12
0270	Instrumentpanel, centre console	8B : 15	5-A16
0275	Cover, gear shift lever 1990	8B : 17	5-A18
0280	Cover, gear shift lever 1991-	8B : 19	5-A20
0290	**Upholstery**		
0300	Insulation	8B : 21	5-A22
0310	Sound insulation	8B : 23	5-A24
0580	Covers, medium luxury degree, Parallel pattern 1990	8B : 25	5-B02
0590	Covers, high luxury degree, Horizon pattern 1990	8B : 27	5-B04
0600	Covers, high luxury degree, Contour design 1990	8B : 29	5-B06
0700	Covers, medium luxury degree, Parallel pattern 1991	8B : 33	5-B10
0710	Covers, high luxury degree, Horizon pattern 1991	8B : 35	5-B12
0720	Covers, high luxury degree, Contour design 1991	8B : 39	5-B16
0790	Covers, medium luxury degree, Parallel pattern 1992	8B : 45	5-B22
0800	Covers, high luxury degree, Horizon pattern 1992	8B : 51	5-C04
0810	Covers, high luxury degree, Contour design 1992	8B : 59	5-C12
0811	Covers, medium luxury degree, Parallel pattern 1993	8B : 65	5-C18
0812	Covers, high luxury degree, Horizon pattern 1993	8B : 67	5-C20
0813	Covers, high luxury degree, Contour design 1993-	8B : 71	5-C24
0820	Door and side trim, 2SN, 3CK, CV 1990	8B : 77	5-D06
0821	Door trim etc. 4SN, 5CK 1990	8B : 85	5-D14
0822	Door and side trim, 3CK, CV 1991	8B : 89	5-D18
0823	Door trim etc. 4SN, 5CK 1991	8B : 99	5-E04
0824	Door and side trim, 3CK, CV 1992	8B : 103	5-E08
0825	Door trim etc. 4SN, 5CK 1992	8B : 113	5-E18
0826	Door and side trim, 3CK, CV 1993-	8B : 117	5-E22
0830	Door trim etc. 4SN, 5CK 1993	8B : 127	5-F08
0860	Upholstery luggage compartment	8C : 131	5-F12
0870	Wheel housing lining carpets etc. 1990	8B : 133	5-F14
0871	Wheel housing lining carpets etc. 1991	8B : 135	5-F16
0872	Wheel housing lining carpets etc. 1992	8B : 137	5-F18
0980	Wheel housing lining carpets etc. 1993-	8B : 139	5-F20
0985	Headlining, pillar linning, etc	8B : 141	5-F22
1020	**Other interior equipment**		
1030	Front seats Part 1 1990	8B : 147	5-G04
1040	Front seats Part 2 1990	8B : 151	5-G08
1050	Front seats Part 3 1990	8B : 153	5-G10
1055	Front seats Part 1 1991-	8B : 155	5-G12
1060	Front seats Part 2 1991-	8B : 159	5-G16
1065	Front seats Part 3 1991-	8B : 163	5-G20
1070	Front seats Part 1, electrically adjustable	8B : 165	5-G22
1075	Front seats Part 2, electrically adjustable	8B : 169	5-H02
1110	Front seats Part 3, electrically adjustable	8B : 173	5-H06
1120	Rear seat, seat cushion	8B : 175	5-H08
1130	Rear seat, back cushion	8B : 177	5-H10
1140	Rear seat, Convertible	8B : 181	5-H14
1150	Equipment luggage compartment	8B : 183	5-H15
1160	Scuff plate protector	8B : 185	5-H18
1170	Other interior equipment	8B : 187	5-H20
1180	Shelf	8B : 189	5-H22
1200	Safety belt, 3CK, 2SN, front seat	8B : 195	5-I04
1210	Safety belt, 5CK,4SN, front seat	8B : 197	5-I06
1420	Safety belt, rear seat	8B : 199	5-I08
1430	**Complete sets:**		
	Car body, internal	8B : 203	5-I12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A03

INNEHÅLLSFÖRTECKNING

Instrumentpanel		
Instrumentpanel, panel övre, instrumentplatta	8B : 5	5-A06
Instrumentpanel, panelutsläpp	8B : 9	5-A10
Instrumentpanel, underdel	8B : 11	5-A12
Instrumentpanel, mittkonsol	8B : 15	5-A16
Kåpa, växelspak 1990	8B : 17	5-A18
Kåpa, växelspak 1991-	8B : 19	5-A20
Klädsel		
Isolering	8B : 21	5-A22
Ljudisolering	8B : 23	5-A24
Klädselpåsar, medellyxgrad, Parallellmönster 1990	8B : 25	5-B02
Klädselpåsar, hög lyxgrad, Horisontmönster 1990	8B : 27	5-B04
Klädselpåsar, hög lyxgrad, Contourdesign 1990	8B : 29	5-B06
Klädselpåsar, medellyxgrad, Parallellmönster 1991	8B : 33	5-B10
Klädselpåsar, hög lyxgrad, Horisontmönster 1991	8B : 35	5-B12
Klädselpåsar, hög lyxgrad, Contourdesign 1991	8B : 39	5-B16
Klädselpåsar, medellyxgrad, Parallellmönster 1992	8B : 45	5-B22
Klädselpåsar, hög lyxgrad, Horisontmönster 1992	8B : 51	5-C04
Klädselpåsar, hög lyxgrad, Contourdesign 1992	8B : 59	5-C12
Klädselpåsar, medellyxgrad, Parallellmönster 1993	8B : 65	5-C18
Klädselpåsar, hög lyxgrad, Horisontmönster 1993	8B : 67	5-C20
Klädselpåsar, hög lyxgrad, Contourdesign 1993-	8B : 71	5-C24
Dörr och sidklädsel, 2SN, 3CK, CV 1990	8B : 77	5-D06
Dörrklädsel etc. 4SN, 5CK 1990	8B : 85	5-D14
Dörr och sidklädsel, 3CK, CV 1991	8B : 89	5-D18
Dörrklädsel etc. 4SN, 5CK 1991	8B : 99	5-E04
Dörr och sidklädsel, 3CK, CV 1992	8B : 103	5-E08
Dörrklädsel etc. 4SN, 5CK 1992	8B : 113	5-E18
Dörr och sidklädsel, 3CK, CV 1993-	8B : 117	5-E22
Dörrklädsel etc. 4SN, 5CK 1993	8B : 127	5-F08
Klädsel bagagerum	8B : 131	5-F12
Hjulhusklädsel, mattor etc. 1990	8B : 133	5-F14
Hjulhusklädsel, mattor etc. 1991	8B : 135	5-F16
Hjulhusklädsel, mattor etc. 1992	8B : 137	5-F18
Hjulhusklädsel, mattor etc. 1993-	8B : 139	5-F20
Takklädsel, stolpklädsel. etc	8B : 141	5-F22
Övrig invändig utrustning		
Stolar Del 1 1990	8B : 147	5-G04
Stolar Del 2 1990	8B : 151	5-G08
Stolar Del 3 1990	8B : 153	5-G10
Stolar Del 1 1991-	8B : 155	5-G12
Stolar Del 2 1991-	8B : 159	5-G16
Stolar Del 3 1991-	8B : 163	5-G20
Stolar Del 1, elmanövrerade	8B : 165	5-G22
Stolar Del 2, elmanövrerade	8B : 169	5-H02
Stolar Del 3, elmanövrerade	8B : 173	5-H06
Baksäte, sittdyna	8B : 175	5-H08
Baksäte, ryggdyna	8B : 177	5-H10
Baksäte, Cabriolet	8B : 181	5-H14
Utrustning bagagerum	8B : 183	5-H16
Tröskelskydd	8B : 185	5-H18
Övrig invändig utrustning	8B : 187	5-H20
Hatthylla	8B : 189	5-H22
Bilbälte 3CK, 2SN, framsäte	8B : 195	5-I04
Bilbälte 5CK,4SN, framsäte	8B : 197	5-I06
Bilbälte, baksäte	8B : 199	5-I08
Satser:		
Kaross, invändig	8B : 203	5-I12

5-A04

SUMARIO

Tablero de instrumentos		
Tablero de instrumentos, panel superior, place de instrumentos	8B : 5	5-A06
Tablero de instrumentos, boquilla de panel	8B : 9	5-A10
Tablero de instrumentos, parte inferior	8B : 11	5-A12
Tablero de instrumentos, soporte central	8B : 15	5-A16
Tapa de palanca de cambios 1990	8B : 17	5-A18
Tapa de palanca de cambios 1991-	8B : 19	5-A20
Tapiceria		
Aislamiento	8B : 21	5-A22
Aislation de sonido	8B : 23	5-A24
Fundas de asiento, semi-lujo, muestra en Parallel 1990	8B : 25	5-B02
Fundas de asiento, grand-lujo, muestra en Horizon 1990	8B : 27	5-B04
Fundas de asiento, grand-lujo, diseno Contour 1990	8B : 29	5-B06
Fundas de asiento, semi-lujo, muestra en Parallel 1991	8B : 33	5-B10
Fundas de asiento, grand-lujo, muestra en Horizon 1991	8B : 35	5-B12
Fundas de asiento, grand-lujo, diseno Contour 1991	8B : 39	5-B16
Fundas de asiento, semi-lujo, muestra en Parallel 1992	8B : 45	5-B22
Fundas de asiento, grand-lujo, muestra en Horizon 1992	8B : 51	5-C04
Fundas de asiento, grand-lujo, diseno Contour 1992	8B : 59	5-C12
Fundas de asiento, semi-lujo, muestra en Parallel 1993	8B : 65	5-C18
Fundas de asiento, grand-lujo, muestra en Horizon 1993	8B : 67	5-C20
Fundas de asiento, grand-lujo, diseno Contour 1993-	8B : 71	5-C24
Puertas y tapiceria, 2SN, 3CK, CV 1990	8B : 77	5-D06
Tapiceria de puerta, etc, 4SN, 5CK 1990	8B : 85	5-D14
Puertas y tapiceria, 3CK, CV 1991	8B : 89	5-D18
Tapiceria de puerta, etc, 4SN, 5CK 1991	8B : 99	5-E04
Puertas y tapiceria, 3CK, CV 1992	8B : 103	5-E08
Tapiceria de puerta, etc, 4SN, 5CK 1992	8B : 113	5-E18
Puertas y tapiceria, 3CK, CV 1993-	8B : 117	5-E22
Tapiceria de puerta, etc, 4SN, 5CK 1993	8B : 127	5-F08
Tapiceria compartimento de equipajes	8B : 131	5-F12
Tapiceria, el de huecos de rueda, alfombras, etc 1990	8B : 133	5-F14
Tapiceria, el de huecos de rueda, alfombras, etc 1991	8B : 135	5-F16
Tapiceria, el de huecos de rueda, alfombras, etc 1992	8B : 137	5-F18
Tapiceria, el de huecos de rueda, alfombras, etc 1993-	8B : 139	5-F20
Tapiceria del techo, de los montantes, etc	8B : 141	5-F22
Otro equipo interior		
Asientos Del 1a parte 1990	8B : 147	5-G04
Asientos Del 2a parte 1990	8B : 151	5-G08
Asientos Del 3a parte 1990	8B : 153	5-G10
Asientos Del 1a parte 1991-	8B : 155	5-G12
Asientos Del 2a parte 1991-	8B : 159	5-G16
Asientos Del 3a parte 1991-	8B : 163	5-G20
Asientos Del 1a parte, maniobra electrica	8B : 165	5-G22
Asientos Del 2a parte, maniobra electrica	8B : 169	5-H02
Asientos Del 3a parte, maniobra electrica	8B : 173	5-H06
Asientos Tras. almohadillado del cojin	8B : 175	5-H08
Asientos Tras, cojin del respaldo	8B : 177	5-H10
Asientos Tras. Cabriolet	8B : 181	5-H14
Compartimento para equipo	8B : 183	5-H16
Proteccion de umbral	8B : 185	5-H18
Otro equipo interior	8B : 187	5-H20
Tablilla trassera	8B : 189	5-H22
Cinturon de seguridad, 3CK, 2SN, Del	8B : 195	5-I04
Cinturon de seguridad, 5CK,4SN, Del	8B : 197	5-I06
Cinturon de seguridad, Tras	8B : 199	5-I08
Juegos completos:		
Carosseria, interior	8B : 203	5-I12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Instrument panel

5-A06

Panel upper instrument plate

Instrumentpanel

Panel övre, instrumentplatta

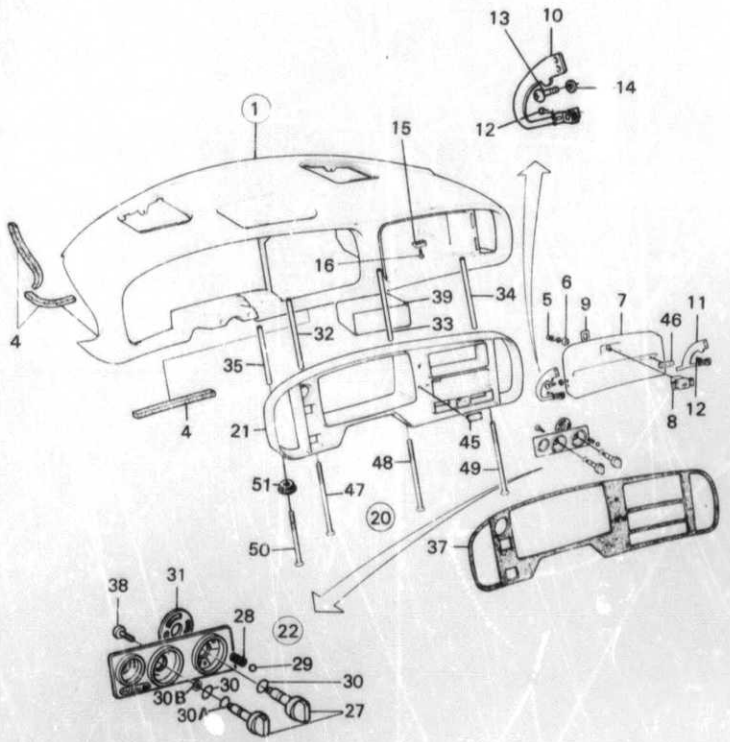

0500	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0017	1	*95 40 592*		110), -1991 NLS - USE 4082830	1	Panel	Panel	6
0017								
0020	1	40 82 830		110), 1992-	1	Panel	Panel	6
0027	1	40 36 273		60), -1991	1	Panel	Panel	6
0030	1	*98 41 610*		110), -1991, RHD NLS - USE 4082848	1	Panel	Panel	6
0030								
0035	1	40 82 848		110), 1992-, RHD	1	Panel	Panel	6
0040	1	98 41 594		60), -1991, RHD	1	Panel	Panel	6
0050	4	94 25 851			5	.Felt	.Filt	5
0060	5	94 25 869			2	.Buffer	.Buffert	5
0070	6	94 34 499			2	.Absorber	.Dämpare	5
0080	7	*94 85 574*		110), -1991 NLS - USE 4082855	1	.Glove compartment lid	.Handskfacklucka	5
0080								
0090	7	40 82 855		110), 1992-	1	.Glove compartment lid	.Handskfacklucka	5
0095	7	40 30 862		60), -1991	1	.Glove compartment lid	.Handskfacklucka	5
0100	7	*98 41 701*		110), -1991, RHD NLS - USE 4082863	1	.Glove compartment lid	.Handskfacklucka	5
0100								
0105	7	40 82 863		110), 1992-, RHD	1	.Glove compartment lid	.Handskfacklucka	5
0110	7	98 41 685		60), -1991, RHD	1	.Glove compartment lid	.Handskfacklucka	5
0120	8	82 62 602			1	.Lock	.Lås	3
0140	9	82 62 610			1	.Clip	.Clips	5
0155	10	96 11 708		LH		.Hinge	.Gångjärn	4
0165	11	96 11 682		RH	1	.Hinge	.Gångjärn	4
0175	10	96 11 682		LH RHD	1	.Hinge	.Gångjärn	4
0185	11	96 11 708		RH RHD	1	.Hinge	.Gångjärn	4
0190	12	*79 61 634*		NLS - USE 7977804	4	.Rivet	.Nit	5
0200	13	98 41 941			4	.Screw	.Skruv	5
0210	14	*79 34 102*		NLS	4	.Washer	.Bricka	6
0220	15	97 08 108			1	.Striker plate	.Låsbleck	5
0225	15	44 37 331		1993-, RHD	1	.Striker plate	.Låsbleck	5
0230	16	79 67 763			2	.Screw	.Skruv	5
0240	20	*97 14 775*		-1991 NLS - USE 4082988	1	Instrument plate	Instrumentplatta	6
0245	20	40 82 988		1992-	1	Instrument plate	Instrumentplatta	6
0250	20	97 14 783		-1991, RHD	1	Instrument plate	Instrumentplatta	6
0255	20	40 82 996		1992-, RHD	1	Instrument plate	Instrumentplatta	6
0260	21	*97 14 825*		-1991 NLS - USE 4083002	1	.Instrument plate	.Instrumentplatta	6
0265	21	40 83 002		1992-	1	.Instrument plate	.Instrumentplatta	6
0267	21	86 74 731		1992-, 40/136103504	1	.Instrument plate wood	.Instrumentplatta trä	6
0268								
0269	21	86 74 681		1992-, US,CA, 40/136103702	1	.Instrument plate wood	.Instrumentplatta trä	6
0271								
0274	21	*97 14 833*		-1991, RHD NLS - USE 4083010	1	.Instrument plate	.Instrumentplatta	6
0274								
0275	21	40 83 010		1992-, RHD	1	.Instrument plate	.Instrumentplatta	6
0277	21	86 74 863		1992-, RHD, 40/136103603	1	.Instrument plate wood	.Instrumentplatta trä	6
0278								
0280	22	94 79 941			1	.Control panel	.Reglageplatta	5
0290	27	94 81 425			2	..Knob	..Vred	6
0300	28	94 20 035			2	..Spring	..Fjäder	5
0310	29	94 20 043			2	..Ball	..Kula	5
0320	30	79 36 008			2	..E-circlip	..Spårryttare	5
0330	30A	43 18 200			2	..O-ring	..O-ring	2
0340	30B	80 29 951		-1992	1	..Washer	..Bricka	5
0345	30B	91 66 364		1993-	1	..Washer	..Bricka	5
0350	31	94 25 844			1	..Washer	..Bricka	6
0360	32	94 22 874			1	.Sleeve	.Hylsa	5
0370	33	94 22 882			1	.Sleeve	.Hylsa	5
0380	34	94 22 890			1	.Sleeve	.Hylsa	5
0390	35	94 29 721			1	.Sleeve	.Hylsa	5
0400	37	97 14 791			1	.Lining	.Beklädnad	5
0410	37	97 14 809		RHD	1	.Lining	.Beklädnad	5

60. Red Röd
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Instrument panel

5--A08 Panel upper instrument plate

Instrumentpanel

Panel övre, instrumentplatta

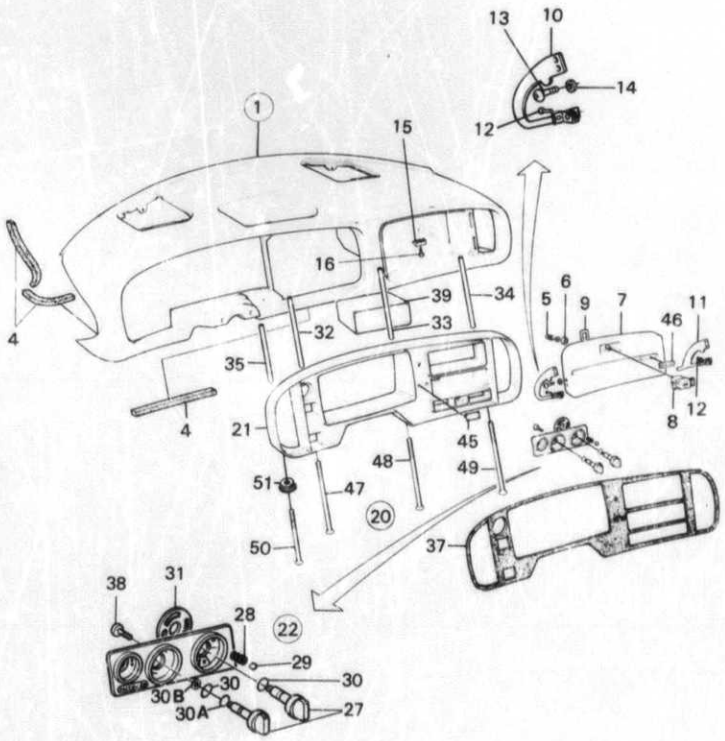

F1223 AAC90

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	38	79 71 393			2	.Screw	.Skruv	5
0430	39	97 14 817			1	Storage tray	Förvaringsfack	6
0440	45	94 25 679		-1992, "UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0441								
0445	45	96 59 764		1993-, "UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0446								
0450	45	40 81 808		"PREMIUM UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0451								
0460	45	96 82 535		1990, "ENDAST BLYFRI BENSIN"	1	Text plate	Textskylt	5
0470								
0480	45	96 82 543		"NUR BLEIREIES BENZIN"	1	Text plate	Textskylt	5
0500	45	96 82 550		"ESSENCE SANS PLOMB SEULEMENT"	1	Text plate	Textskylt	5
0510								
0520	46	94 68 885		-1991, "900", RHD	1	Emblem	Emblem	3
0530	47	41 55 636			1	Screw	Skruv	5
0535	47	94 34 606		RHD	1	Screw	Skruv	5
0540	48	96 18 299			1	Screw	Skruv	5
0545	48	*94 34 614*		RHD NLS - USE 4155636	1	Screw	Skruv	5
0550	49	96 18 315			1	Screw	Skruv	5
0555	49	94 34 622		RHD	1	Screw	Skruv	5
0560	50	96 18 281			1	Screw	Skruv	5
0565	50	94 22 858		RHD	1	Screw	Skruv	5
0600	51	96 80 224		NOT RHD	4	Plastic washer	Plastbricka	5
0900		97 46 694		See page 8B-203, 5-I12	X	Control set	Reglagesats	3
0920								
0950		96 99 257		110), -1991	1	.Panel kit	.Panelsats	6
0960				See page 8B-203, 5-I12				

110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A10

Panel outlet

Panelutsläpp

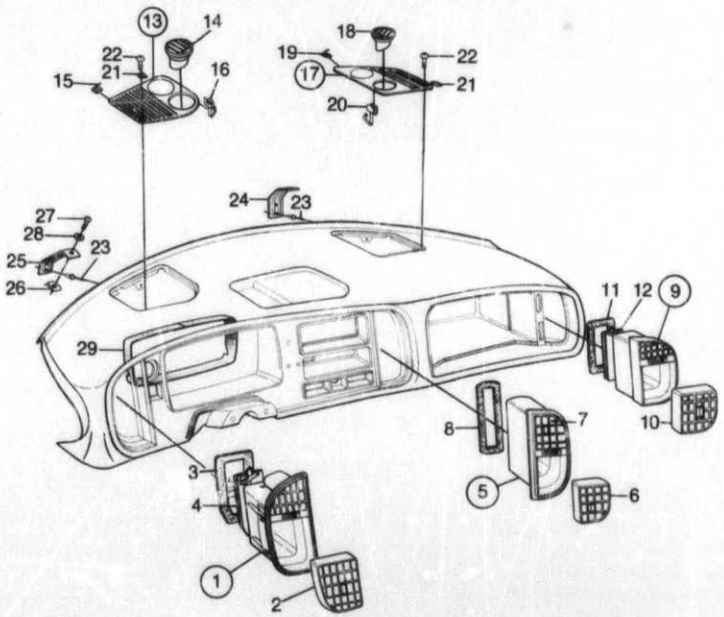

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-005, 5-A06		Instrument plate	Instrumentplatta	
0020	1	94 01 357		LH	1	.Panel outlet	.Panelutsläpp	5
0030	1	94 20 415		RH, RHD	1	.Panel outlet	.Panelutsläpp	5
0040	2	94 18 237		LH	1	..Air deflector	..Luftledare	5
0050	2	94 20 431		RH, RHD	1	..Air deflector	..Luftledare	5
0060	3	94 18 328			1	..Seal	..Tätning	5
0070	4	94 18 310		LH, LHD	1	..Shutter	..Spjäll	5
0080	5	94 18 476		CENTER	1	.Panel outlet	.Panelutsläpp	5
0090	6	94 18 559			1	..Air deflector	..Luftledare	5
0100	6	94 18 492		RHD	1	..Air deflector	..Luftledare	5
0110	7	94 18 492			1	..Air deflector	..Luftledare	5
0120	7	94 18 559		RHD	1	..Air deflector	..Luftledare	5
0130	8	94 19 060			1	..Seal	..Tätning	5
0140	9	94 01 381		RH	1	Panel outlet	Panelutsläpp	5
0150	9	94 20 340		LH RHD	1	Panel outlet	Panelutsläpp	5
0160	10	94 18 351		RH	1	.Air deflector	.Luftledare	5
0170	10	94 20 365		LH RHD	1	.Air deflector	.Luftledare	5
0180	11	94 18 435			1	.Seal	.Tätning	5
0190	12	94 18 427		RH, LHD	1	.Shutter	.Spjäll	5
0200	13	98 37 485		110), LH	1	Loudspeaker grille	Högtalargaller	5
0210	13	98 35 620		60), -1991, LH	1	Loudspeaker grille	Högtalargaller	5
0220	13	98 41 818		110), LH RHD	1	Loudspeaker grille	Högtalargaller	5
0230	13	98 41 776		60), -1991, LH RHD	1	Loudspeaker grille	Högtalargaller	5
0240	14	94 22 676		LH	1	.Nozzle	.Munstycke	5
0250	15	94 22 056			2	.Clip	.Clips	5
0260	16	94 61 047			1	.Clip	.Clips	5
0270	17	*98 37 493*		110), 1990, RH NLS - USE 4169801	1	Loudspeaker grille	Högtalargaller	5
0275	17	41 69 801		110), 1991-, RH	1	Loudspeaker grille	Högtalargaller	5
0280	17	98 35 638		60), -1991, RH	1	Loudspeaker grille	Högtalargaller	5
0290	17	98 41 826		110), RH RHD	1	Loudspeaker grille	Högtalargaller	5
0300	17	98 41 784		60), -1991, RH RHD	1	Loudspeaker grille	Högtalargaller	5
0310	18	94 22 684		RH	1	.Nozzle	.Munstycke	5
0320	19	94 22 056			2	.Clip	.Clips	5
0330	20	94 61 047			1	.Clip	.Clips	5
0340	21	94 61 435			4	Clip nut	Clipsmutter	3
0350	22	79 68 084			4	Screw	Skruv	5
0360	23	98 49 514			6	Rivet	Nit	5
0370	24	97 23 321			1	Bracket	Konsol	
0380	25	*94 25 422*		LH NLS	1	Bracket	Fäste	5
0395	25	41 55 628		RH	1	Bracket	Fäste	5
0390	26	94 27 014			2	Clip nut	Clipsmutter	3
0400	27	79 22 370			2	Screw	Skruv	5
0410	28	70 88 073			2	Washer	Bricka	5
0420	29	94 45 990			1	Seal	Tätning	5

60. Red Röd
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Instrument panel
Panel lower

Instrumentpanel
Underdel

5-A12

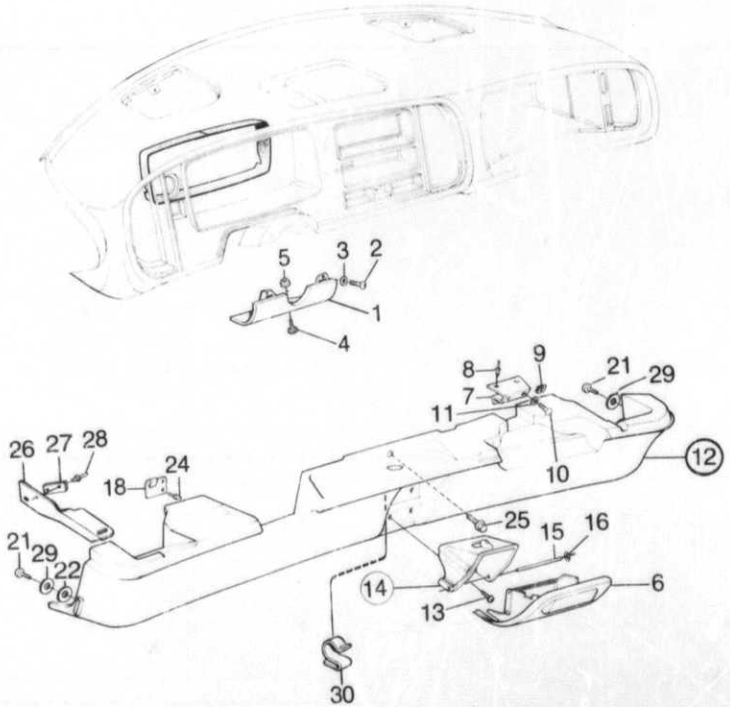

0525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 42 093		110)	1	Steering column cover	Rattlagerkåpa	6
0020	1	40 36 281		60), -1991	1	Steering column cover	Rattlagerkåpa	6
0030	1	40 79 760		110,123), AIRBAG	1	Steering column cover	Rattlagerkåpa	6
0035	1	40 80 065		110,124)), AIRBAG	1	Steering column cover	Rattlagerkåpa	6
0040	1	40 79 844		60,123), AIRBAG	1	Steering column cover	Rattlagerkåpa	6
0045	1	40 80 107		60,124), -1991, AIRBAG	1	Steering column cover	Rattlagerkåpa	6
0050	1	95 40 295		110), RHD	1	Steering column cover	Rattlagerkåpa	6
0060	1	95 40 303		60), -1991, RHD	1	Steering column cover	Rattlagerkåpa	6
0070	2	79 75 386		1990	2	Screw	Skruv	5
0075	2	79 65 833		1991-	2	Screw	Skruv	5
0080	3	94 23 666			2	Washer	Bricka	5
0090	4	94 23 658			1	Special screw	Snabbskruv	5
0100	5	84 52 898			1	Quick nut	Snabbmutter	3
0110	6	94 17 551		1990	1	Ashtray	Askkopp	5
0120	7	*94 25 406*		NLS	1	Bracket	Fäste	5
0130	7	94 25 612		RHD	1	Bracket	Fäste	5
0140	8	79 72 516			4	Rivet	Nit	5
0150	9	94 27 014			2	Clip nut	Clipsmutter	3
0160	10	79 22 354			2	Screw	Skruv	5
0170	11	79 16 489			2	Washer	Bricka	5
0171	12	40 83 580		210), 1992-	1	Panel	Panel	6
0172	12	40 83 598		210), 1992-, RHD	1	Panel	Panel	6
0173								
0175	12	96 82 592		80)	1	Panel	Panel	6
0190	12	96 82 600		80), RHD	1	Panel	Panel	6
0196								
0200	12	96 89 795		60), -1991	1	Panel	Panel	6
0210	12	96 89 803		60), -1991, RHD	1	Panel	Panel	6
0216								
0220	12	95 33 134		90)	1	Panel	Panel	6
0230	12	95 33 167		90), RHD	1	Panel	Panel	6
0236								
0240	12	98 74 041		70)	1	Panel	Panel	6
0248	12	98 74 082		70), RHD	1	Panel	Panel	6
0251								
0253	12	41 32 585		100)	1	Panel	Panel	6
0256	12	41 32 627		100), RHD	1	Panel	Panel	6
0260								
0261	12	40 84 927		54,210), 1992-	1	Panel	Panel	6
0262								
0270	12	40 79 323		54,60,123)	1	Panel	Panel	6
0275	12	*40 79 851*		54,60,124),-1990 NLS - USE 4084943	1	Panel	Panel	6
0277	12	40 84 943		54,60,),1991	1	Panel	Panel	6
0278								
0280	12	40 79 356		54,90,123)	1	Panel	Panel	6
0285	12	*40 79 877*		54,90,124),-1990	1	Panel	Panel	6
0287	12	40 84 950		54,90,),1991-	1	Panel	Panel	6
0288								
0290	12	40 79 349		54,80,123)	1	Panel	Panel	6
0295	12	40 79 869		54,80,124),-1990	1	Panel	Panel	6
0297	12	40 84 976		54,80,),1991-	1	Panel	Panel	6
0298								

54. AIR-BAG
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
123. Ch. -L3007487, -L5002782, -L7021085
124. Ch. L3007488-, L5002783-, L7021086-
210. Light beige Ljus beige


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A14

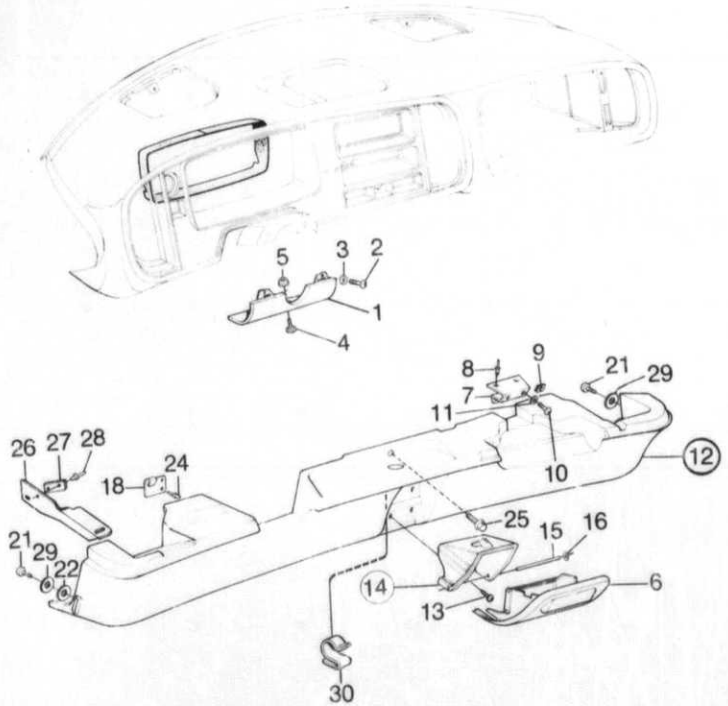

F3251 AAC90

0525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0300	12	40 79 331		54,70,123)	1	Panel	Panel	6
0303	12	*40 79 885*		54,70,124),-1990	1	Panel	Panel	6
0304	12	40 84 968		54,70,),1991-	1	Panel	Panel	6
0305								
0306	12	41 32 601		54,100),1990	1	Panel	Panel	6
0307	12	40 84 935		54,100),1991-	1	Panel	Panel	6
0310	13	79 22 818			4	.Screw	.Skruv	5
0320	14	94 11 661		1990	1	.Ashtray housing	.Askkoppshus	6
0330	15	94 23 526		1990	1	..Shaft	..Axel	6
0340	16	*94 45 875*		1990 NLS	2	..Washer	..Bricka	5
0350	18	94 25 430		LH	1	Bracket	Fäste	5
0360	18	*94 26 495*		RH NLS	1	Bracket	Fäste	5
0390	21	*73 99 421*		NLS - USE 7972466	2	Screw	Skruv	5
0400	22	85 37 623		CV	1	Washer	Bricka	3
0420	24	79 72 516			4	Rivet	Nit	5
0430	25	82 86 296			1	Screw	Skruv	5
0440	26	94 57 565		1990, LH	1	Bracket	Fäste	5
0445	26	41 66 856		1991-, LH	1	Bracket	Fäste	5
0450	26	*94 58 894*		1990, LH RHD NLS - USE 4166864	1	Bracket	Fäste	5
0455	26	41 66 864		1991-, LH RHD	1	Bracket	Fäste	5
0460	27	94 59 025			1	Washer	Bricka	5
0470	28	79 61 642		-1991	2	Rivet	Nit	5
0475	28	79 72 490		1992-	2	Rivet	Nit	5
0480	29	97 14 122			2	Washer	Bricka	5
0490	30	79 33 443			1	Clip	Clips	5

54. AIR-BAG
70. Grey Grå
100. Light grey Ljus grå
123. Ch. -L3007487, -L5002782, -L7021085
124. Ch. L3007488-, L5002783-, L7021086-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Instrument panel

5-A16

Centre console

Instrumentpanel

Mittkonsol

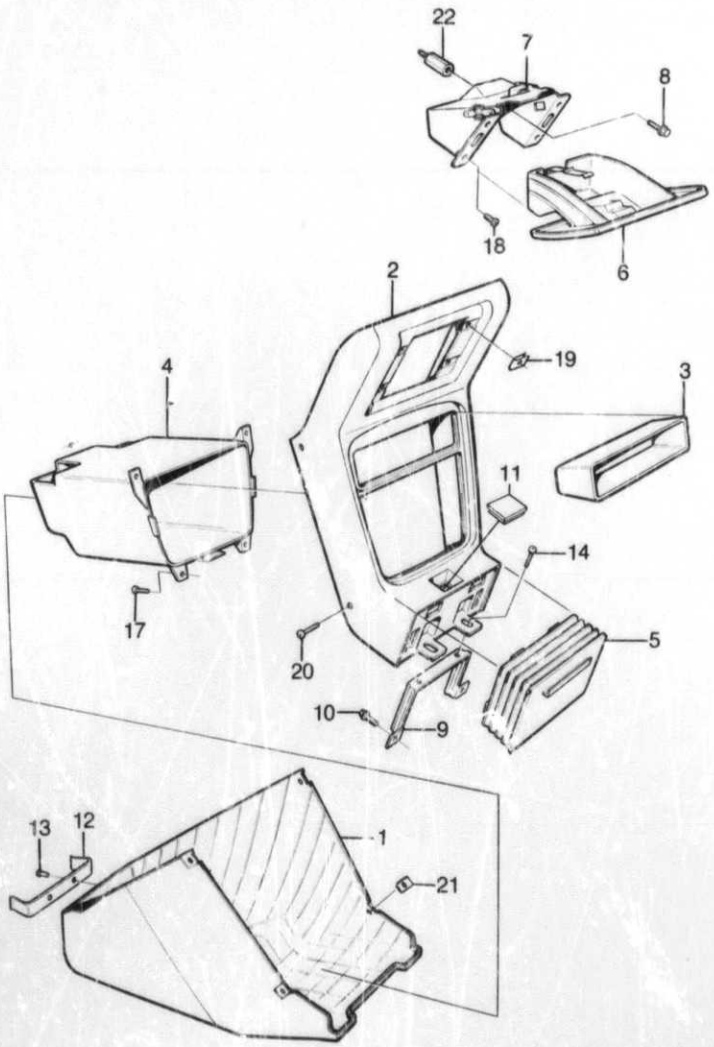

F3595 - AAC90

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 83 721		210), 1992-	1	Framework	Stomme	6
0020	1	40 83 739		210), 1992-, RHD	1	Framework	Stomme	6
0025	1	95 33 233		90)	1	Framework	Stomme	6
0035	1	95 33 282		90), RHD	1	Framework	Stomme	6
0055	1	98 29 201		60), -1991	1	Framework	Stomme	6
0060	1	*98 29 219*		60), -1991, RHD NLS	1	Framework	Stomme	6
0072	1	96 82 394		80)	1	Framework	Stomme	6
0080	1	96 82 402		80), RHD	1	Framework	Stomme	6
0090	1	98 71 146		70)	1	Framework	Stomme	6
0095	1	98 71 260		70), RHD	1	Framework	Stomme	6
0096								
0097	1	40 83 747		54,210), 1992-	1	Framework	Stomme	6
0100	1	96 13 712		54,60), -1991	1	Framework	Stomme	6
0107	1	95 33 332		54,90)	1	Framework	Stomme	6
0112	1	96 82 386		54,80)	1	Framework	Stomme	6
0115	1	96 13 746		54,70)	1	Framework	Stomme	6
0140	2	98 57 947			1	Front section	Framstycke	6
0160	2	98 57 962		RHD	1	Front section	Framstycke	6
0180	3	97 14 817			1	Storage tray	Förvaringsfack	6
0200	4	97 23 347			1	Storage tray	Förvaringsfack	6
0220	4	97 23 354		RHD	1	Storage tray	Förvaringsfack	6
0260	5	*98 28 096*		1990 NLS - USE 4078382	1	Intermediate section	Mellanstycke	6
0270	5	40 78 382		1991-	1	Intermediate section	Mellanstycke	6
0280	6	97 16 598			1	Ashtray	Askkopp	6
0300	6	97 23 263		RHD	1	Ashtray	Askkopp	6
0325	7	98 34 243			1	Bracket	Konsol	6
0340	8	82 86 296			1	Screw	Skruv	5
0360	9	97 16 614			1	Bracket	Konsol	
0380	10	79 72 466			2	Screw	Skruv	5
0400	11			See page 3A-051, 2-C04	1	Cover	Täcklock	
0420	12	97 16 556			1	Bracket	Konsol	6
0440	13	79 61 642			2	Rivet	Nit	5
0460	14	79 72 946			2	Screw	Skruv	5
0520	17	79 71 351			4	Screw	Skruv	5
0540	18	84 08 882			4	Screw	Skruv	5
0560	19	79 68 555			4	Clip nut	Clipsmutter	3
0580	20	79 69 314			4	Screw	Skruv	5
0600	21	79 68 001			4	Clip nut	Clipsmutter	5
0620	22	97 23 313			1	Bracket	Fäste	5

54. AIR-BAG
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A18

Cover, gear shift lever

Kåpa, växelspak

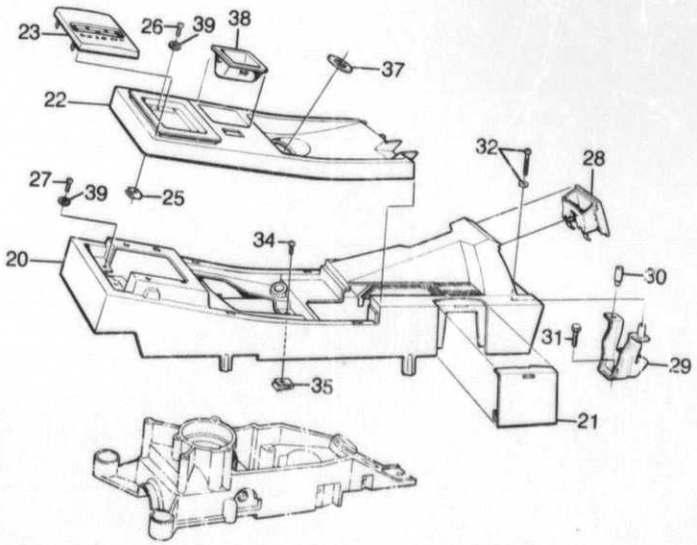

F2231 AAC90

0540	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	20	94 93 842			1	Lower section	Underdel	6
0030	20	98 28 435		12)	1	Lower section	Underdel	6
0050	20	98 35 042		ME	1	Lower section	Underdel	6
0070	20	98 35 059		12) ME	1	Lower section	Underdel	6
0110	20	98 23 519			1	Lower section	Underdel	6
0111						CV with theft alarm	CV med stöldlarm	
0112								
0130	21	97 06 805			1	▪Cover	▪Täcklock	6
0140	22	98 70 106		C	1	Cover	Lock	6
0150	22	98 70 114		I	1	Cover	Lock	6
0160	22	98 70 080		C, A	1	Cover	Lock	6
0170	22	98 70 098		I, A	1	Cover	Lock	6
0180	23	94 93 750		A	1	Indicator cover	Indikatorkåpa	
0190	25	79 68 001			2	Clip nut	Clipsmutter	5
0200	26	79 22 362			2	Screw	Skruv	5
0210	27	79 34 318			2	Screw	Skruv	5
0220	28	94 93 800			1	Ashtray	Askkopp	6
0235	29	96 85 520			1	Bracket	Konsol	6
0240	30	97 27 504			2	Nut	Mutter	3
0250	31	*82 67 205*		NLS - USE 7972466	1	Screw	Skruv	5
0265	32	79 75 337			2	Screw	Skruv	5
0272	34	*79 22 289*		NLS - USE 7965684	1	Screw	Skruv	5
0277	35	79 72 730			1	Clip nut	Clipsmutter	3
0280	37	97 32 249			1	Light guide	Ljusledare	5
0290	38	97 36 273			1	Coin box	Myntfack	6
0300	39	60 29 944			2	Washer	Bricka	5

12. For electrical window regulator För elektrisk fönsterhiss

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Instrument panel

5-A20

Cover, gear shift lever
1991–

Instrumentpanel

Kåpa, växelspak
1991–

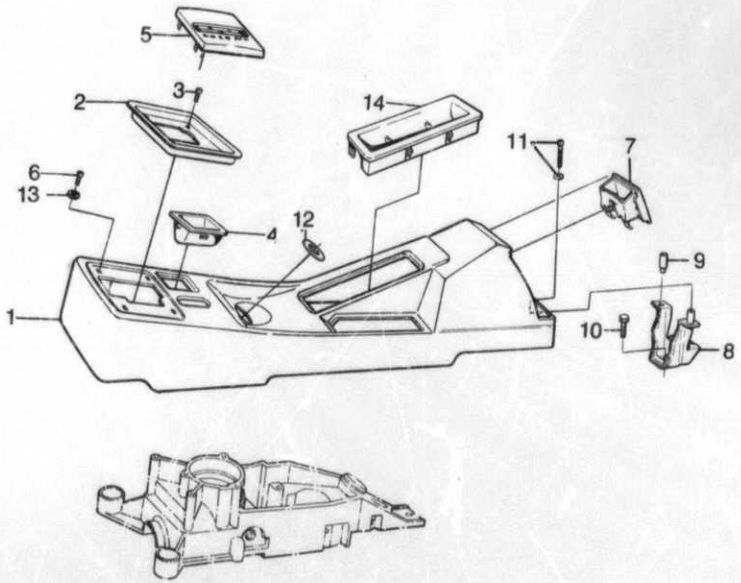

F3372 AAC90

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 78 283			1	Centre console	Mittkonsol	6
0020	1	* 41 68 142		1992–, CV, US, CA	1	Centre console	Mittkonsol	6
0050	2	40 78 317			1	Bracket	Konsol	6
0060	3	40 84 679			4	Screw	Skruv	5
0070	4	97 36 273			1	Coin box	Myntfack	6
0080	5	94 93 750		A	1	Indicator cover	Indikatorkåpa	
0090	6	79 72 193			2	Screw	Skruv	5
0100	7	94 93 800			1	Ashtray	Askkopp	6
0110	8	96 85 520			1	Bracket	Konsol	6
0120	9	97 27 504			2	Nut	Mutter	3
0135	10	80 59 578			1	Screw	Skruv	5
0140	11	79 75 337			2	Screw	Skruv	5
0150	12	97 32 249			1	Light guide	Ljusledare	5
0160	13	80 29 944			2	Washer	Bricka	5
0170	14	91 24 678			1	Coin box	Myntfack	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A22

Insulation
Isolering

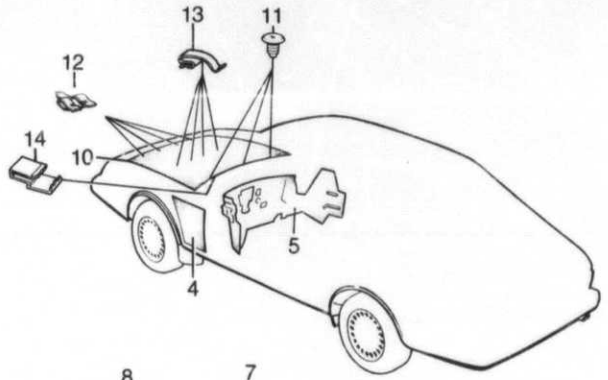

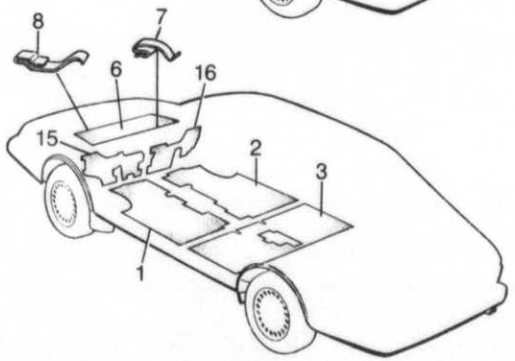

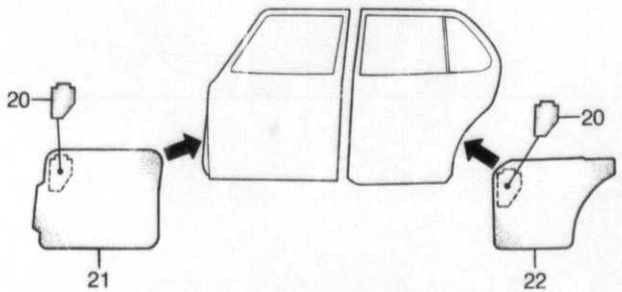

F4712 AAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	98 49 811		1990, LH	1	Insulation	Isolering	6
0020	1	96 86 023		LH, B202, B212	1	Insulation	Isolering	6
0030	2	98 49 829		1990, RH	1	Insulation	Isolering	6
0040	2	96 86 031		RH, B202, B212	1	Insulation	Isolering	6
0050	3	96 74 847		1990, I	1	Insulation	Isolering	6
0055	3	41 28 443		1991-, I	1	Insulation	Isolering	6
0060	4	94 49 877		1990, LH, I	1	Insulation	Isolering	6
0080	4	96 85 694		1990, RH, I	1	Insulation	Isolering	6
0100	5	*40 42 032*		1990 NLS - USE 4257788	1	Insulation	Isolering	6
0105	5	42 57 788		1991-	1	Insulation	Isolering	6
0110	6	97 03 414		1990	1	Bonnet insulation	Huvisolering	3
0120	7	97 06 573		1990	4	Clip	Clips	5
0130	8	98 57 921		1990	4	Clamp	Klammer	6
0140	10	*95 34 439*		B201 NLS - USE 4058061	1	Bonnet insulation	Huvisolering	3
0145	10	*40 42 735*		151), B202 NLS - USE 4058061	1	Bonnet insulation	Huvisolering	3
0150	10	40 58 061		152), B202, B212	1	Bonnet insulation	Huvisolering	3
0160	11	97 60 497		151)	3	Clamp	Klämma	6
0165	11	97 60 497		152)	11	Clamp	Klämma	6
0170	12	97 22 075		151)	4	Clamp	Klämma	5
0180	13	97 06 573		151)	4	Clip	Clips	5
0190	14	94 92 885		151)	1	Clip	Clips	5
0200	15	40 53 294		LH, I	1	Insulation	Isolering	6
0210	16	96 88 672		RH	1	Insulation	Isolering	6
0220	20	92 35 342		4SN, 5CK	4	Water drainage	Vattenavledare	5
0230	21	40 48 997		LH, 2SN, 3CK, CV	1	Water drainage	Vattenavledare	5
0240	21	40 49 003		RH, 2SN, 3CK, CV	1	Water drainage	Vattenavledare	5
0250	21	40 49 011		LH, 4SN, 5CK	1	Water drainage	Vattenavledare	5
0260	21	40 49 029		RH, 4SN, 5CK	1	Water drainage	Vattenavledare	5
0270	22	96 17 358		LH, 4SN, 5CK	1	Water drainage	Vattenavledare	5
0280	22	96 17 341		RH, 4SN, 5CK	1	Water drainage	Vattenavledare	5
0290		79 93 462			X	Tape for water drainage 1 coil = 2800 mm	Tape för vattenavledare 1 rulle = 2800 mm	5
0300								
0301								

151. Ch. --L3007862, --L5003479, --L7023008
152. Ch. L5003480--, L7023009--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-A24

Sound insulation
Ljudisolering

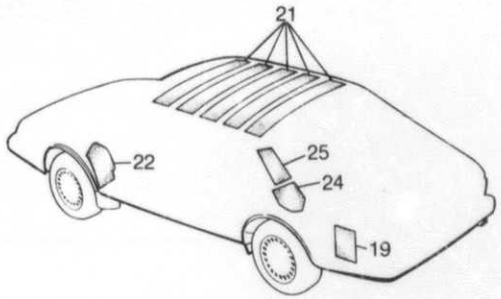

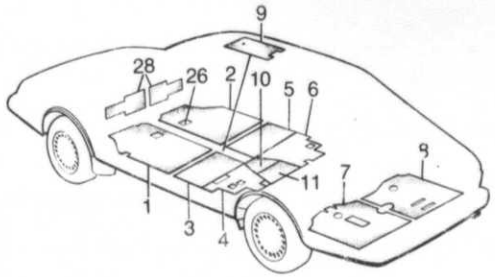

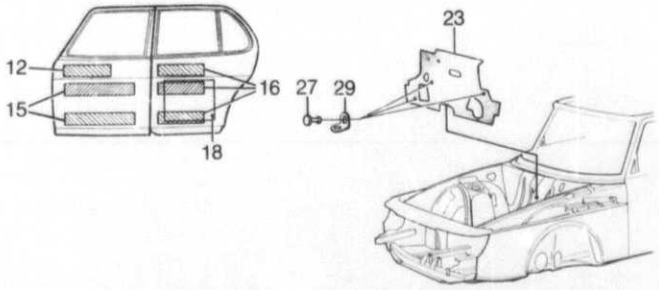

F3757 - AAC90

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	94 38 193		-1991, LH	1	Insulating mat	Isoleringsmatta	6
0015	1	42 65 906		1992-, LH	1	Insulating mat	Isoleringsmatta	6
0020	2	94 38 201		RH	1	Insulating mat	Isoleringsmatta	6
0030	3	95 40 782		1990, LH	1	Insulating mat	Isoleringsmatta	6
0031	3	42 65 468		1991-, LH	1	Damper mat	Dämpmatta	6
0032	4	42 66 615		1991-, LH	1	Damper mat	Dämpmatta	6
0040	5	*40 48 351*		1990, RH NLS - USE 4265468	1	Insulating mat	Isoleringsmatta	6
0042	5	42 65 468		1991-, RH	1	Damper mat	Dämpmatta	6
0045	6	40 48 344		RH	1	Insulating mat	Isoleringsmatta	6
0050	7	96 81 339		1990, LH	1	Insulating mat	Isoleringsmatta	6
0055	7	41 55 891		1991-, LH	1	Insulating mat	Isoleringsmatta	6
0060	8	*96 81 347*		1990, RH NLS - USE 4170049	1	Insulating mat	Isoleringsmatta	6
0065	8	41 70 049		1991-, RH	1	Insulating mat	Isoleringsmatta	6
0070	9	95 40 774		13)	1	Heat shield	Värmesköld	3
0080	10	84 90 625			1	Insulating mat	Isoleringsmatta	6
0090	11	84 90 641			1	Insulating mat	Isoleringsmatta	6
0100	12	40 52 817		-1991	2	Damper mat	Dämpmatta	5
0130	15	40 55 539		-1991	4	Damper mat	Dämpmatta	5
0135	15	95 44 834		1992-	6	Damper mat	Dämpmatta	5
0140	16	40 52 817		-1991	6	Damper mat	Dämpmatta	5
0142	16	95 44 834		1992-	6	Damper mat	Dämpmatta	5
0145	18	84 38 400		1990	2	Cardboard	Pappskiva	6
0150	18	95 44 834		1991-	2	Damper mat	Dämpmatta	5
0160	19	84 61 063			2	Cardboard	Pappskiva	6
0170	21	97 57 691			5	Damper mat	Dämpmatta	5
0180	21	97 57 691		SR	1	Damper mat	Dämpmatta	5
0190	22	94 25 653		1990, LH	1	Insulation	Isolering	6
0200	22	94 25 661		1990, RH	1	Insulation	Isolering	6
0205	22	40 53 773		1991-	2	Damper mat	Dämpmatta	5
0210	23	40 45 712			1	Insulation	Isolering	6
0220	24	*84 28 211*		LH, 3CK, 4SN NLS	1	Insulation	Isolering	6
0230	24	84 28 237		RH, 3CK, 4SN	1	Insulation	Isolering	6
0240	25	*84 28 203*		LH, 4SN NLS	1	Insulation	Isolering	6
0250	25	84 28 229		RH, 4SN	1	Insulation	Isolering	6
0260	26	84 90 575			2	Insulating mat	Isoleringsmatta	6
0270	27	94 43 920			7	Rivet	Nit	5
0280	28	94 50 974			2	Foam plastic	Skumplast	6
0290	29	89 40 652			2	Brace	Bygel	5


13. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

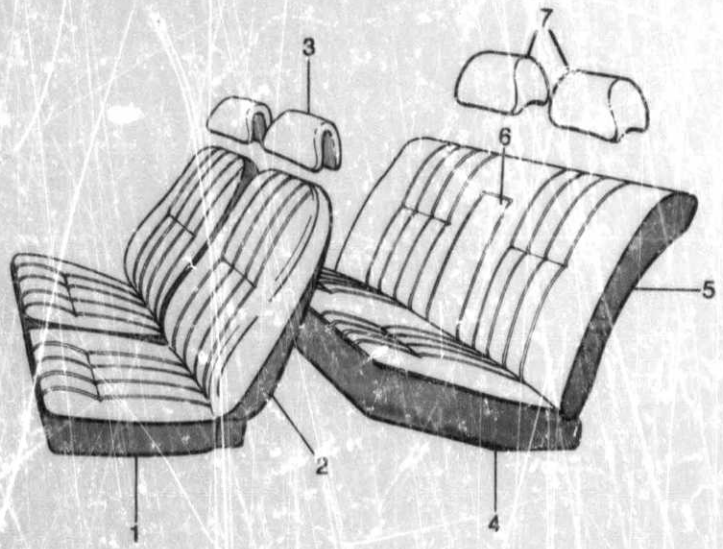

F2847 AAC90

Upholstery

5-B02

Covers 1990
Parallel pattern

Klädsel

Klädselpåsar 1990
Parallellmönster

1300	Pos	Part No/Art nr	L S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41				
0020	1	95 39 495		60)	2	Seat cover	Sitspåse	6
0030	2	95 39 545		60)	2	Back cover	Ryggpåse	6
0040	3	95 39 594		60)	2	Head restraint cover	Nackstödspåse	6
0050	4	95 38 752		60), 2SN, 3CK	1	Seat cover	Sitspåse	6
0060	4	95 38 794		60), 4SN, 5CK	1	Seat cover	Sitspåse	6
0070	5	95 38 836		60)	1	Back cover	Ryggpåse	6
0080	5	95 41 384		60,14)	1	Back cover	Ryggpåse	6
0090	6	95 39 420		60)	1	Arm rest cover	Armstödspåse	6
0100	7	*95 94 607*		60) NLS - USE 9699620	2	Head restraint cover	Nackstödspåse	6
0110				TRIM COLOUR E41				
0120	1	95 39 529		70)	2	Seat cover	Sitspåse	6
0130	2	95 39 578		70)	2	Back cover	Ryggpåse	6
0140	3	95 39 628		70)	2	Head restraint cover	Nackstödspåse	6
0150	4	95 38 778		70), 2SN, 3CK	1	Seat cover	Sitspåse	6
0160	4	95 38 810		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0170	5	95 38 851		70)	1	Back cover	Ryggpåse	6
0180	5	95 41 392		70,14)	1	Back cover	Ryggpåse	6
0190	6	95 39 453		70)	1	Arm rest cover	Armstödspåse	6
0200	7	*95 94 615*		70) NLS - USE 9699638	2	Head restraint cover	Nackstödspåse	6
0210				TRIM COLOUR F41				
0220	1	95 39 511		80)	2	Seat cover	Sitspåse	6
0230	2	95 39 560		80)	2	Back cover	Ryggpåse	6
0240	3	95 39 610		80)	2	Head restraint cover	Nackstödspåse	6
0250	4	95 38 760		80), 2SN, 3CK	1	Seat cover	Sitspåse	6
0260	4	95 38 802		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0270	5	95 38 844		80)	1	Back cover	Ryggpåse	6
0280	5	95 41 400		80,14)	1	Back cover	Ryggpåse	6
0290	6	95 39 446		80)	1	Arm rest cover	Armstödspåse	6
0300	7	*95 94 623*		80) NLS - USE 9699646	2	Head restraint cover	Nackstödspåse	6
0310				TRIM COLOUR G41				
0320	1	95 39 503		90)	2	Seat cover	Sitspåse	6
0330	2	95 39 552		90)	2	Back cover	Ryggpåse	6
0340	3	95 39 602		90)	2	Head restraint cover	Nackstödspåse	6
0350	4	95 38 703		90), 2SN, 3CK	1	Seat cover	Sitspåse	6
0360	4	95 38 695		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0370	5	95 38 711		90)	1	Back cover	Ryggpåse	6
0380	5	95 41 418		90,14)	1	Back cover	Ryggpåse	6
0390	6	95 39 438		90)	1	Arm rest cover	Armstödspåse	6
0400	7	*95 94 631*		90) NLS - USE 9699653	2	Head restraint cover	Nackstödspåse	6

14. With arm rest Med armstöd
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-B04

Covers 1990
Horizon pattern

Klädselpåsar 1990
Horisontmönster

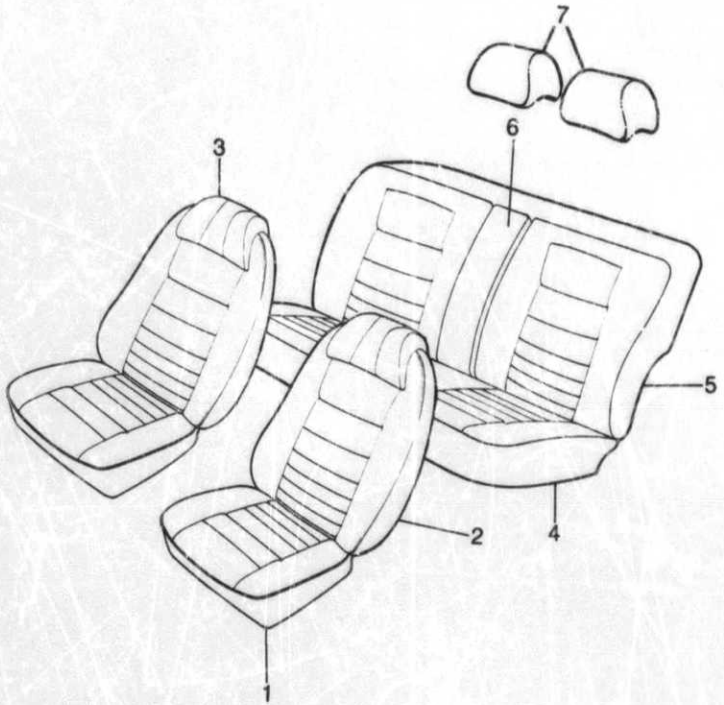

F2848 AAC90

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C44				
0011	1	95 41 004		60)	2	Seat cover	Sitspåse	6
0015	1	95 39 792		60,21)	2	Seat cover	Sitspåse	6
0030	2	95 39 693		60)	2	Back cover	Ryggpåse	6
0035	2	95 39 842		60,21)	2	Back cover	Ryggpåse	6
0050	3	95 39 584		60)	2	Head restraint cover	Nackstödspåse	6
0055	3	95 39 891		60,21)	2	Head restraint cover	Nackstödspåse	6
0070	4	95 38 976		60), 2SN, 3CK	1	Seat cover	Sitspåse	6
0075	4	95 39 271		60,21), 2SN, 3CK	1	Seat cover	Sitspåse	6
0080	4	95 39 024		60), 4SN, 5CK	1	Seat cover	Sitspåse	6
0085	4	95 39 321		60,21), 4SN 5CK	1	Seat cover	Sitspåse	6
0090	5	95 39 370		60)	1	Back cover	Ryggpåse	6
0110	6	95 39 420		60)	1	Arm rest cover	Armstödspåse	6
0120	7	*95 94 607*		60) NLS - USE 9699620	2	Head restraint cover	Nackstödspåse	6
0320				TRIM COLOUR E44				
0340	1	95 41 038		70)	2	Seat cover	Sitspåse	6
0345	1	95 39 826		70,21)	2	Seat cover	Sitspåse	6
0360	2	95 39 727		70)	2	Back cover	Ryggpåse	6
0365	2	95 39 875		70,21)	2	Back cover	Ryggpåse	6
0380	3	95 39 628		70)	2	Head restraint cover	Nackstödspåse	6
0385	3	95 39 925		70,21)	2	Head restraint cover	Nackstödspåse	6
0400	4	95 39 008		70), 2SN, 3CK	1	Seat cover	Sitspåse	6
0405	4	95 39 305		70,21), 2SN, 3CK	1	Seat cover	Sitspåse	6
0410	4	95 39 057		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0415	4	95 39 354		70,21), 4SN, 5CK	1	Seat cover	Sitspåse	6
0420	5	95 39 404		70)	1	Back cover	Ryggpåse	6
0440	6	95 39 453		70)	1	Arm rest cover	Armstödspåse	6
0450	7	*95 94 615*		70) NLS - USE 9699638	2	Head restraint cover	Nackstödspåse	6
0650				TRIM COLOUR F44				
0670	1	95 41 020		80)	2	Seat cover	Sitspåse	6
0675	1	95 39 818		80,21)	2	Seat cover	Sitspåse	6
0690	2	95 39 719		80)	2	Back cover	Ryggpåse	6
0695	2	95 39 867		80,21)	2	Back cover	Ryggpåse	6
0710	3	95 39 610		80)	2	Head restraint cover	Nackstödspåse	6
0715	3	95 39 917		80,21)	2	Head restraint cover	Nackstödspåse	6
0730	4	95 38 992		80), 2SN, 3CK	1	Seat cover	Sitspåse	6
0735	4	95 39 297		80,21), 2SN, 3CK	1	Seat cover	Sitspåse	6
0740	4	95 39 040		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0745	4	95 39 347		80,21), 4SN, 5CK	1	Seat cover	Sitspåse	6
0750	5	95 39 396		80)	1	Back cover	Ryggpåse	6
0770	6	95 39 446		80)	1	Arm rest cover	Armstödspåse	6
0780	7	*95 94 623*		80) NLS - USE 9699646	2	Head restraint cover	Nackstödspåse	6
0800								
0900				TRIM COLOUR G44				
1000	1	95 41 012		90)	2	Seat cover	Sitspåse	6
1005	1	95 39 800		90,21)	2	Seat cover	Sitspåse	6
1020	2	95 39 701		90)	2	Back cover	Ryggpåse	6
1025	2	95 39 859		90,21)	2	Back cover	Ryggpåse	6
1040	3	95 39 602		90)	2	Head restraint cover	Nackstödspåse	6
1045	3	95 39 909		90,21)	2	Head restraint cover	Nackstödspåse	6
1060	4	95 38 984		90), 2SN, 3CK	1	Seat cover	Sitspåse	6
1063	4	95 39 032		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
1065	4	95 39 289		90,21), 2SN, 3CK	1	Seat cover	Sitspåse	6
1070	4	95 39 339		90,21), 4SN, 5CK	1	Seat cover	Sitspåse	6
1080	5	95 39 388		90)	1	Back cover	Ryggpåse	6
1100	6	95 39 438		90)	1	Arm rest cover	Armstödspåse	6
1110	7	*95 94 631*		90) NLS - USE 9699653	2	Head restraint cover	Nackstödspåse	6


21. With pocket Med ficka
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

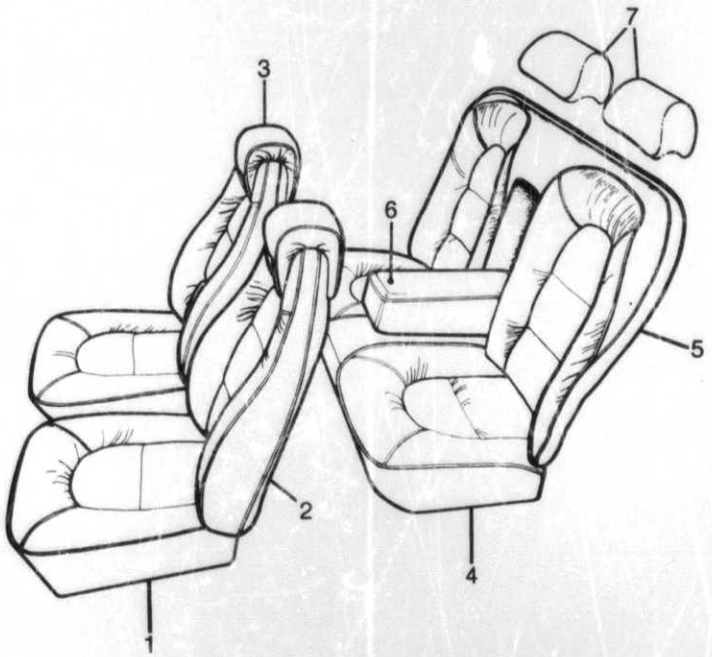

F1231 AAC90

Upholstery

5-B06

Covers 1990
Contour design

Klädsel

Klädselpåsar 1990
Contour design

1302	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C33				
0020	1	95 30 361		60)	2	Seat cover	Sitspåse	6
0030	2	95 30 379		60)	2	Back cover	Ryggpåse	6
0050	3	96 47 074		60)	2	Head restraint cover	Nackstödspåse	6
0070	4	95 30 700		60), 2SN, 3CK	1	Seat cover	Sitspåse	6
0075	4	96 46 134		60), CV	1	Seat cover	Sitspåse	6
0080	4	95 30 759		60), 4SN, 5CK	1	Seat cover	Sitspåse	6
0090	5	95 30 650		60)	1	Back cover	Ryggpåse	6
0095	5	96 46 142		60), CV	1	Back cover	Ryggpåse	6
0110	6	95 30 734		60)	1	Arm rest cover	Armstödspåse	6
0120	7	*95 79 566*		60) NLS - USE 9699539	2	Head restraint cover	Nackstödspåse	6
0125	7	96 46 647		60), CV	2	Head restraint cover	Nackstödspåse	6
0135				TRIM COLOUR C43				
0140	1	91 62 223		60), CV	2	Seat cover	Sitspåse	6
0150	2	91 62 199		60), CV	2	Back cover	Ryggpåse	6
0160	3	95 39 891		60), CV	2	Head restraint cover	Nackstödspåse	6
0170	4	91 62 280		60), CV	1	Seat cover	Sitspåse	6
0180	5	91 62 256		60), CV	1	Back cover	Ryggpåse	6
0190	7	91 62 397		60), CV	2	Head restraint cover	Nackstödspåse	6
0310				TRIM COLOUR E33				
0320	1	98 66 351		70)	2	Seat cover	Sitspåse	6
0340	2	98 67 789		70)	2	Back cover	Ryggpåse	6
0360	3	*96 47 447*		70) NLS - USE 4167409	2	Head restraint cover	Nackstödspåse	6
0380	4	98 76 541		70), 2SN, 3CK	1	Seat cover	Sitspåse	6
0385	4	98 34 289		70), CV	1	Seat cover	Sitspåse	6
0390	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0400	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0405	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0420	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0422	7	*95 79 574*		70) NLS - USE 9699547	2	Head restraint cover	Nackstödspåse	6
0425	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0427				TRIM COLOUR E43				
0431	1	91 62 231		70), CV	2	Seat cover	Sitspåse	6
0432	2	91 62 207		70), CV	2	Back cover	Ryggpåse	6
0433	3	95 39 925		70), CV	2	Head restraint cover	Nackstödspåse	6
0434	4	91 62 298		70), CV	1	Seat cover	Sitspåse	6
0435	5	91 62 264		70), CV	1	Back cover	Ryggpåse	6
0436	7	91 62 405		70), CV	2	Head restraint cover	Nackstödspåse	6
0440				TRIM COLOUR F33				
0450	1	40 39 749		80)	2	Seat cover	Sitspåse	6
0470	2	40 39 756		80)	2	Back cover	Ryggpåse	6
0490	3	40 39 764		80)	2	Head restraint cover	Nackstödspåse	6
0510	4	40 40 200		80), 2SN, 3CK	1	Seat cover	Sitspåse	6
0520	4	40 40 630		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0530	5	40 40 218		80)	1	Back cover	Ryggpåse	6
0550	6	40 40 226		80)	1	Arm rest cover	Armstödspåse	6
0560	7	40 39 624		80)	2	Head restraint cover	Nackstödspåse	6
0570								


80. Red Röd
70. Grey Grå
80. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

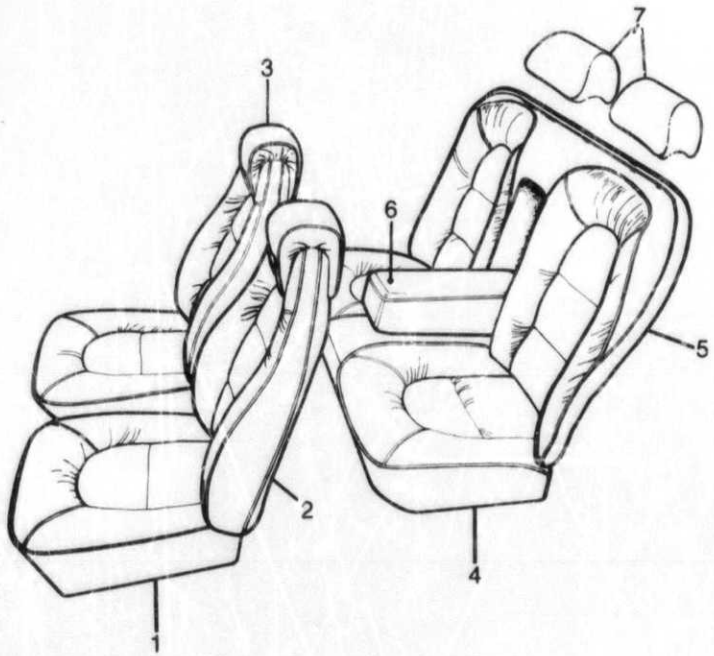

F1231 AAC90

1302	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630				TRIM COLOUR G33				
0639	1	95 35 840		90)	2	Seat cover	Sitspåse	6
0650	2	95 35 857		90)	2	Back cover	Ryggpåse	6
0670	3	*96 48 239*		90) NLS - USE 4313482	2	Head restraint cover	Nackstödspåse	6
0690	4	95 37 846		90), 2SN, 3CK	1	Seat cover	Sitspåse	6
0695	4	98 24 368		90), CV	1	Seat cover	Sitspåse	6
0700	4	95 37 838		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0710	5	95 37 853		90)	1	Back cover	Ryggpåse	6
0720	5	98 24 376		90), CV	1	Back cover	Ryggpåse	6
0730	6	95 37 861		90)	1	Arm rest cover	Armstödspåse	6
0735	7	*95 85 951*		90) NLS - USE 9699554	2	Head restraint cover	Nackstödspåse	6
0740	7	96 48 486		90), CV	2	Head restraint cover	Nackstödspåse	6
0745				TRIM COLOUR G43				
0751	1	91 62 249		90), CV	2	Seat cover	Sitspåse	6
0752	2	91 62 215		90), CV	2	Back cover	Ryggpåse	6
0753	3	95 39 909		90), CV	2	Head restraint cover	Nackstödspåse	6
0754	4	91 62 306		90), CV	1	Seat cover	Sitspåse	6
0755	5	91 62 272		90), CV	1	Back cover	Ryggpåse	6
0756	7	91 62 413		90), CV	2	Head restraint cover	Nackstödspåse	6
0758				TRIM COLOUR H33				
0760	1	40 45 894		100)	2	Seat cover	Sitspåse	6
0780	2	40 45 902		100)	2	Back cover	Ryggpåse	6
0800	3	*91 61 019*		100) NLS - USE 4313490	2	Head restraint cover	Nackstödspåse	6
0820	4	40 46 611		100), 2SN, 3CK	1	Seat cover	Sitspåse	6
0830	4	91 61 035		100), CV	1	Seat cover	Sitspåse	6
0840	4	40 48 328		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0850	5	40 46 629		100)	1	Back cover	Ryggpåse	6
0860	5	91 61 043		100), CV	1	Back cover	Ryggpåse	6
0870	6	40 46 637		100)	1	Arm rest cover	Armstödspåse	6
0875	7	40 53 609		100)	2	Head restraint cover	Nackstödspåse	6
0880	7	91 61 324		100), CV	2	Head restraint cover	Nackstödspåse	6


90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

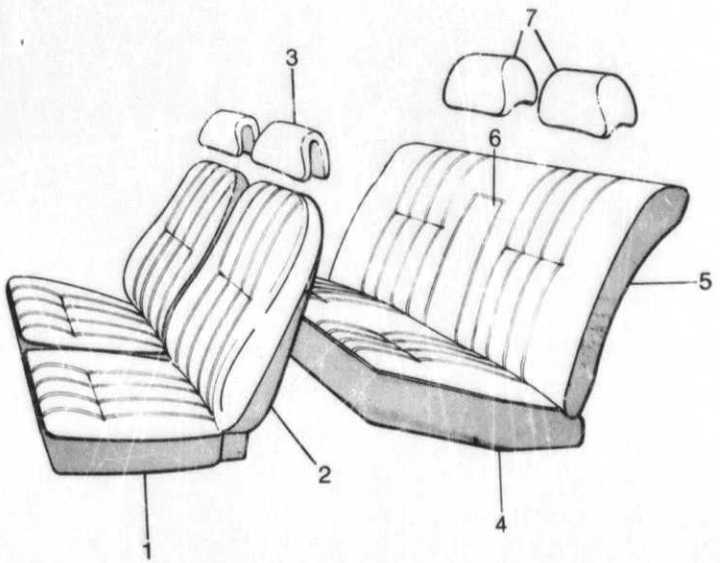

F3081 AAC90

Upholstery

5-B10

Covers 1991
Parallel pattern

Klädsel

Klädselpåsar 1991
Parallellmönster

1310

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41				
0015	1	41 27 643		60), LH	1	Seat cover	Sitspåse	6
0020	1	41 27 650		60), RH	1	Seat cover	Sitspåse	6
0030	2	41 27 668		60)	2	Back cover	Ryggpåse	6
0040	3	42 56 640		60)	2	Head restraint cover	Nackstödspåse	6
0050	4	95 38 752		60), 3CK	1	Seat cover	Sitspåse	6
0060	4	95 38 794		60), 4SN, 5CK	1	Seat cover	Sitspåse	6
0070	5	95 38 836		60)	1	Back cover	Ryggpåse	6
0080	5	95 41 384		60,14)	1	Back cover	Ryggpåse	6
0090	6	95 39 420		60)	1	Arm rest cover	Armstödspåse	6
0100	7	96 99 620		60), (9594607)	2	Head restraint cover	Nackstödspåse	6
0115				TRIM COLOUR E41				
0120	1	41 31 488		70), LH	1	Seat cover	Sitspåse	6
0130	1	41 31 496		70), RH	1	Seat cover	Sitspåse	6
0140	2	41 31 546		70)	2	Back cover	Ryggpåse	6
0150	3	42 56 657		70)	2	Head restraint cover	Nackstödspåse	6
0160	4	95 38 778		70), 3CK	1	Seat cover	Sitspåse	6
0170	4	95 38 810		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0180	5	95 38 851		70)	1	Back cover	Ryggpåse	6
0190	5	95 41 392		70,14)	1	Back cover	Ryggpåse	6
0200	6	95 39 453		70)	1	Arm rest cover	Armstödspåse	6
0210	7	96 99 638		70), (9594615)	2	Head restraint cover	Nackstödspåse	6
0225				TRIM COLOUR F41				
0230	1	41 31 504		80), LH	1	Seat cover	Sitspåse	6
0240	1	41 31 512		80), RH	1	Seat cover	Sitspåse	6
0250	2	41 31 553		80)	2	Back cover	Ryggpåse	6
0260	3	42 56 665		80)	2	Head restraint cover	Nackstödspåse	6
0270	4	95 38 760		80), 3CK	1	Seat cover	Sitspåse	6
0280	4	95 38 802		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0290	5	95 38 844		80)	1	Back cover	Ryggpåse	6
0300	5	95 41 400		80,14)	1	Back cover	Ryggpåse	6
0310	6	95 39 446		80)	1	Arm rest cover	Armstödspåse	6
0320	7	96 99 646		80), (9594623)	2	Head restraint cover	Nackstödspåse	6
0335				TRIM COLOUR G41				
0340	1	41 31 520		90), LH	1	Seat cover	Sitspåse	6
0350	1	41 31 538		90), RH	1	Seat cover	Sitspåse	6
0360	2	41 31 561		90)	2	Back cover	Ryggpåse	6
0370	3	42 56 673		90)	2	Head restraint cover	Nackstödspåse	6
0380	4	95 38 703		90), 3CK	1	Seat cover	Sitspåse	6
0390	4	95 38 695		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0400	5	95 38 711		90)	1	Back cover	Ryggpåse	6
0410	5	95 41 418		90,14)	1	Back cover	Ryggpåse	6
0420	6	95 39 438		90)	1	Arm rest cover	Armstödspåse	6
0430	7	96 99 653		90), (9594631)	2	Head restraint cover	Nackstödspåse	6
0445				TRIM COLOUR H41				
0450	1	41 27 676		100), LH	1	Seat cover	Sitspåse	6
0460	1	41 27 684		100), RH	1	Seat cover	Sitspåse	6
0470	2	41 27 692		100)	2	Back cover	Ryggpåse	6
0480	3	41 27 700		100)	2	Head restraint cover	Nackstödspåse	6
0490	4	41 32 437		100), 3CK	1	Seat cover	Sitspåse	6
0500	4	41 32 445		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0510	5	41 32 460		100)	1	Back cover	Ryggpåse	6
0520	5	41 32 478		100,14)	1	Back cover	Ryggpåse	6
0530	6	41 32 486		100)	1	Arm rest cover	Armstödspåse	6
0540	7	41 32 536		100)	2	Head restraint cover	Nackstödspåse	6
0550								

14. With arm rest Med armstöd
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Upholstery

5-B12

Covers 1991
Horizon pattern

Klädsel

Klädselpåsar 1991
Horisontmönster

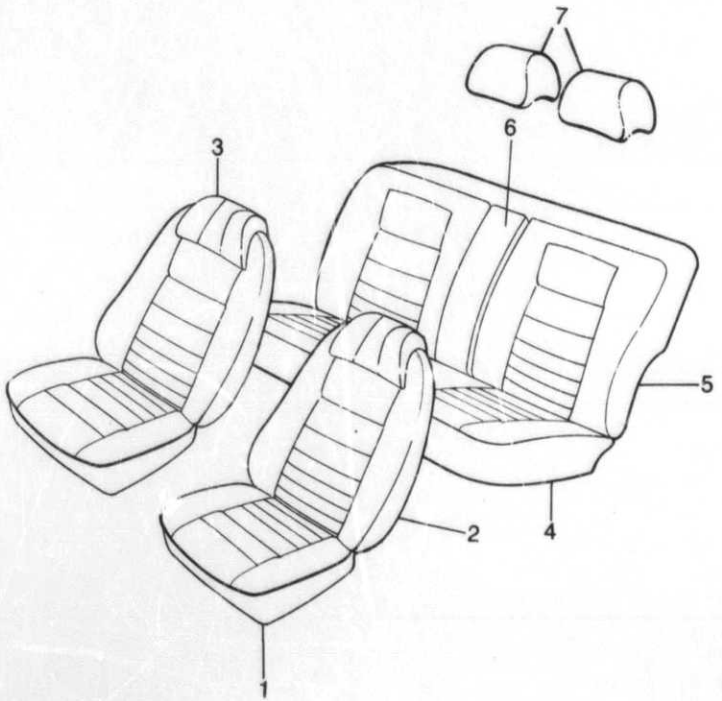

F3082 AAC90

1311	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C44				
0020	1	41 27 783		60,228), LH	1	Seat cover	Sitspåse	6
0030	1	41 27 791		60,228), RH	1	Seat cover	Sitspåse	6
0040	1	41 27 718		60,229), LH	1	Seat cover	Sitspåse	6
0050	1	41 27 726		60,229), RH	1	Seat cover	Sitspåse	6
0060	2	41 27 809		60,228)	2	Back cover	Ryggpåse	6
0070	2	41 27 734		60,229)	2	Back cover	Ryggpåse	6
0080	3	42 56 640		60)	2	Head restraint cover	Nackstödspåse	6
0090	4	95 38 976		60,230), 3CK	1	Seat cover	Sitspåse	6
0100	4	95 39 271		60,231), 3CK	1	Seat cover	Sitspåse	6
0110	4	95 39 024		60,230), 4SN, 5CK	1	Seat cover	Sitspåse	6
0120	4	95 39 321		60,231), 4SN, 5CK	1	Seat cover	Sitspåse	6
0130	5	95 39 370		60)	1	Back cover	Ryggpåse	6
0140	6	95 39 420		60)	1	Arm rest cover	Armstödspåse	6
0150	7	96 99 620		60), (9594607)	2	Head restraint cover	Nackstödspåse	6
0160				TRIM COLOUR E44				
0170	1	41 33 740		70,228), LH	1	Seat cover	Sitspåse	6
0180	1	41 33 757		70,228), RH	1	Seat cover	Sitspåse	6
0190	1	41 30 373		70,229), LH	1	Seat cover	Sitspåse	6
0200	1	41 30 381		70,229), RH	1	Seat cover	Sitspåse	6
0210	2	41 33 815		70,228)	2	Back cover	Ryggpåse	6
0220	2	41 31 264		70,229)	2	Back cover	Ryggpåse	6
0230	3	42 56 657		70)	2	Head restraint cover	Nackstödspåse	6
0240	4	95 39 008		70,230), 3CK	1	Seat cover	Sitspåse	6
0250	4	95 39 305		70,231), 3CK	1	Seat cover	Sitspåse	6
0260	4	95 39 057		70,230), 4SN, 5CK	1	Seat cover	Sitspåse	6
0270	4	95 39 354		70,231), 4SN, 5CK	1	Seat cover	Sitspåse	6
0280	5	95 39 404		70)	1	Back cover	Ryggpåse	6
0290	6	95 39 453		70)	1	Arm rest cover	Armstödspåse	6
0300	7	96 99 638		70), (9594615)	2	Head restraint cover	Nackstödspåse	6
0310				TRIM COLOUR F44				
0320	1	41 33 765		80,228), LH	1	Seat cover	Sitspåse	6
0330	1	41 33 773		80,228), RH	1	Seat cover	Sitspåse	6
0340	1	41 30 399		80,229), LH	1	Seat cover	Sitspåse	6
0350	1	41 31 207		80,229), RH	1	Seat cover	Sitspåse	6
0360	2	41 33 823		80,228)	2	Back cover	Ryggpåse	6
0370	2	41 31 272		80,229)	2	Back cover	Ryggpåse	6
0380	3	42 56 665		80)	2	Head restraint cover	Nackstödspåse	6
0390	4	95 38 992		80,230), 3CK	1	Seat cover	Sitspåse	6
0400	4	95 39 297		80,231), 3CK	1	Seat cover	Sitspåse	6
0410	4	95 39 040		80,230), 4SN, 5CK	1	Seat cover	Sitspåse	6
0420	4	95 39 347		80,231), 4SN, 5CK	1	Seat cover	Sitspåse	6
0430	5	95 39 396		80)	1	Back cover	Ryggpåse	6
0440	6	95 39 446		80)	1	Arm rest cover	Armstödspåse	6
0450	7	96 99 646		80), (9594623)	2	Head restraint cover	Nackstödspåse	6
0460								

60. Red Röd
70. Grey Grå
80. Blue Blå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-B14

Covers 1991
Horizon pattern

Klädselpåsar 1991
Horisontmönster

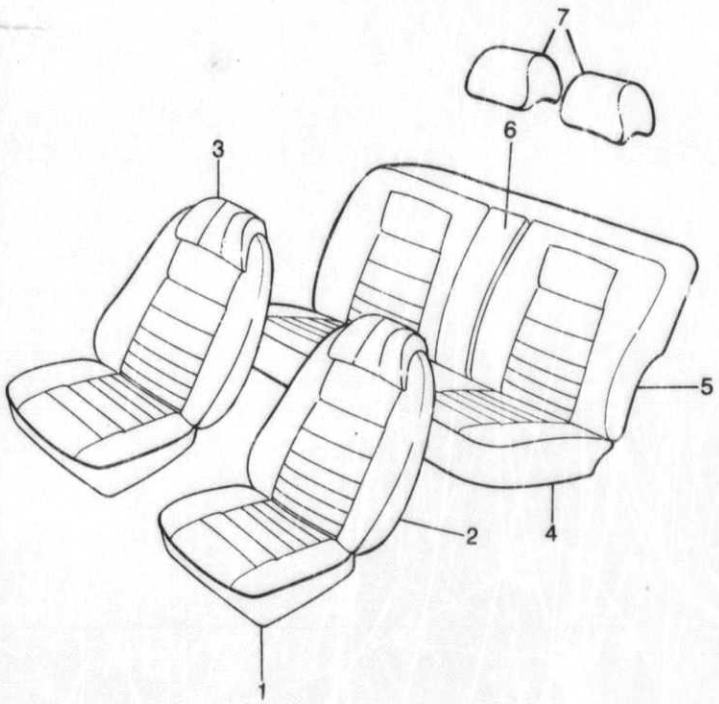

F3082 AAC90

1311	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470				TRIM COLOUR G44				
0480	1	41 [illegible]3 781		90,228), LH	1	Seat cover	Sitspåse	6
0490	1	41 [illegible]3 799		90,228), RH	1	Seat cover	Sitspåse	6
0500	1	41 [illegible]1 215		90,229), LH	1	Seat cover	Sitspåse	6
0510	1	41 [illegible]1 223		90,229), RH	1	Seat cover	Sitspåse	6
0520	2	41 [illegible]3 831		90,228)	2	Back cover	Ryggpåse	6
0530	2	41 [illegible]1 280		90,229)	2	Back cover	Ryggpåse	6
0540	3	[illegible]6 673		90)	2	Head restraint cover	Nackstödspåse	6
0550	4	[illegible]38 964		90,230), 3CK	1	Seat cover	Sitspåse	6
0560	[illegible]	95 39 032		90,230), 4SN, 5CK	1	Seat cover	Sitspåse	6
0570	[illegible]	95 39 289		90,231), 3CK	1	Seat cover	Sitspåse	6
0580	4	95 39 339		90,231), 4SN, 5CK	1	Seat cover	Sitspåse	6
0590	5	95 39 388		90)	1	Back cover	Ryggpåse	6
0600	6	95 39 438		90)	1	Arm rest cover	Armstödspåse	6
0610	7	96 99 653		90), (9594631)	2	Head restraint cover	Nackstödspåse	6
0620				TRIM COLOUR H44				
0630	1	41 27 817		100,228), LH	1	Seat cover	Sitspåse	6
0640	1	41 27 825		100,228), RH	1	Seat cover	Sitspåse	6
0650	1	41 27 742		100,229), LH	1	Seat cover	Sitspåse	6
0660	1	41 27 759		100,229), RH	1	Seat cover	Sitspåse	6
0670	2	41 27 833		100,228)	2	Back cover	Ryggpåse	6
0680	2	41 27 767		100,229)	2	Back cover	Ryggpåse	6
0690	3	41 27 700		100)	2	Head restraint cover	Nackstödspåse	6
0700	4	41 32 411		100,230), 3CK	1	Seat cover	Sitspåse	6
0710	4	41 32 403		100,230), 4SN, 5CK	1	Seat cover	Sitspåse	6
0720	4	41 32 429		100,231), 3CK	1	Seat cover	Sitspåse	6
0730	4	41 32 544		100,231), 4SN, 5CK	1	Seat cover	Sitspåse	6
0740	5	41 32 452		100)	1	Back cover	Ryggpåse	6
0750	6	41 32 486		100)	1	Arm rest cover	Armstödspåse	6
0760	7	41 32 536		100)	2	Head restraint cover	Nackstödspåse	6

90. Yellow Gul
100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-B16

Covers 1991
Contour design

Klädselpåsar 1991
Contour design

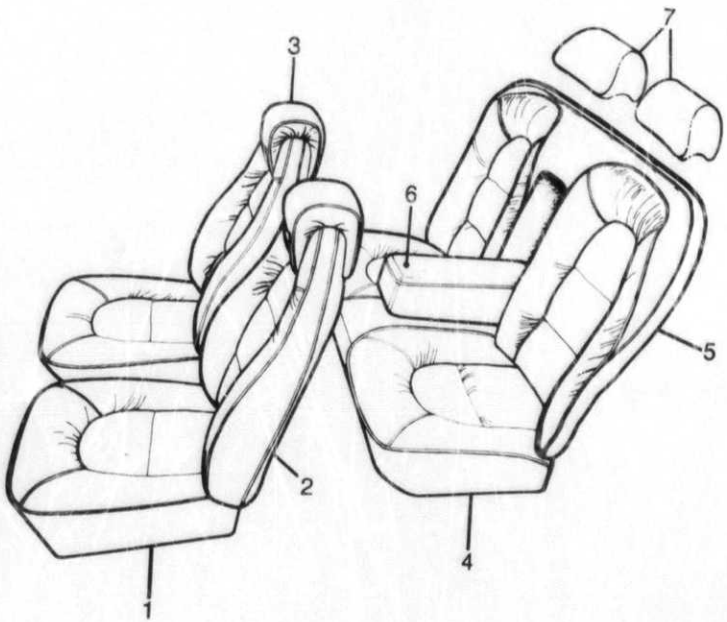

F3083 AAC90

1312	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C33				
0015	1	41 35 836		60), LH	1	Seat cover	Sitspåse	6
0020	1	41 35 844		60), RH	1	Seat cover	Sitspåse	6
0030	2	41 35 786		60)	2	Back cover	Ryggpåse	6
0040	3	*41 67 193*		60,193) NLS - USE 4313706	2	Head restraint cover	Nackstödspåse	6
0045	3	43 13 706		60,194)	2	Head restraint cover	Nackstödspåse	6
0050	4	95 30 700		60), 3CK	1	Seat cover	Sitspåse	6
0060	4	41 67 763		60), CV	1	Seat cover	Sitspåse	6
0070	4	95 30 759		60), 4SN, 5CK	1	Seat cover	Sitspåse	6
0080	5	95 30 650		60)	1	Back cover	Ryggpåse	6
0090	5	96 46 142		60), CV	1	Back cover	Ryggpåse	6
0100	6	95 30 734		60)	1	Arm rest cover	Armstödspåse	6
0110	7	96 99 539		60), (9579566)	2	Head restraint cover	Nackstödspåse	6
0120	7	96 46 647		60), CV	2	Head restraint cover	Nackstödspåse	6
0130				TRIM COLOUR C43				
0140	1	41 66 757		60), LH, CV	1	Seat cover	Sitspåse	6
0150	1	41 66 765		60), RH, CV	1	Seat cover	Sitspåse	6
0160	2	41 66 799		60), CV	2	Back cover	Ryggpåse	6
0170	3	42 56 640		60), CV	2	Head restraint cover	Nackstödspåse	6
0180	4	41 67 722		60), CV	1	Seat cover	Sitspåse	6
0190	5	91 62 256		60), CV	1	Back cover	Ryggpåse	6
0200	7	91 62 397		60), CV	2	Head restraint cover	Nackstödspåse	6
0210				TRIM COLOUR E33				
0220	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0230	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0240	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0250	3	41 67 409		70,193)	2	Head restraint cover	Nackstödspåse	6
0255	3	43 13 474		70,194)	2	Head restraint cover	Nackstödspåse	6
0260	4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
0270	4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
0280	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0290	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0300	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0310	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0320	7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
0330	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0345				TRIM COLOUR E43				
0350	1	41 66 773		70), LH, CV	1	Seat cover	Sitspåse	6
0360	1	41 66 781		70), RH, CV	1	Seat cover	Sitspåse	6
0370	2	41 66 807		70), CV	2	Back cover	Ryggpåse	6
0380	3	42 56 657		70), CV	2	Head restraint cover	Nackstödspåse	6
0390	4	41 67 730		70), CV	1	Seat cover	Sitspåse	6
0400	5	91 62 264		70), CV	1	Back cover	Ryggpåse	6
0410	7	91 62 405		70), CV	2	Head restraint cover	Nackstödspåse	6
0415								


60. Red Röd
70. Grey Grå
193. Ch. -M5000874
194. Ch. M5000875-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

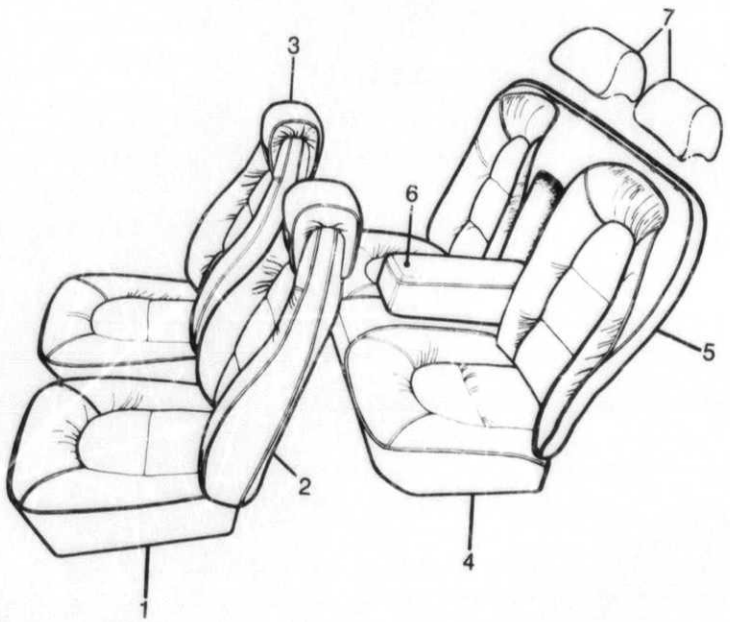

F3083 AAC90

Upholstery

5-B18

Covers 1991
Contour design

Klädsel

Klädselpåsar 1991
Contour design

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR E53				
1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
2	41 35 935		70)	2	Back cover	Ryggpåse	6
3	41 67 409		70,193)	2	Head restraint cover	Nackstödspåse	6
3	43 13 474		70,194)	2	Head restraint cover	Nackstödspåse	6
4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	98 76 574		70)	1	Back cover	Ryggpåse	6
5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR F33				
1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
2	41 35 810		80)	2	Back cover	Ryggpåse	6
3	42 56 616		80,193)	2	Head restraint cover	Nackstödspåse	6
3	43 13 102		80,194)	2	Head restraint cover	Nackstödspåse	6
4	40 40 200		80), 3CK	1	Seat cover	Sitspåse	6
4	40 40 630		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	40 40 218		80)	1	Back cover	Ryggpåse	6
6	40 40 226		80)	1	Arm rest cover	Armstödspåse	6
7	40 39 624		80)	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR G33				
1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
2	41 35 802		90)	2	Back cover	Ryggpåse	6
3	*41 67 417*		90,193) NLS - USE 4313482	2	Head restraint cover	Nackstödspåse	6
3	43 13 482		90,194)	2	Head restraint cover	Nackstödspåse	6
4	95 37 846		90), 3CK	1	Seat cover	Sitspåse	6
4	41 67 789		90), CV	1	Seat cover	Sitspåse	6
4	95 37 838		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	95 37 853		90)	1	Back cover	Ryggpåse	6
5	98 24 376		90), CV	1	Back cover	Ryggpåse	6
6	95 37 861		90)	1	Arm rest cover	Armstödspåse	6
7	96 99 554		90), (9585951)	2	Head restraint cover	Nackstödspåse	6
7	96 48 486		90), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR G43				
1	41 66 872		90), LH, CV	1	Seat cover	Sitspåse	6
1	41 66 880		90), RH, CV	1	Seat cover	Sitspåse	6
2	41 66 815		90), CV	2	Back cover	Ryggpåse	6
3	42 56 673		90), CV	2	Head restraint cover	Nackstödspåse	6
4	41 67 748		90), CV	1	Seat cover	Sitspåse	6
5	91 62 272		90), CV	1	Back cover	Ryggpåse	6
7	91 62 413		90), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR H33				
1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	*41 67 425*		100,193) NLS - USE 4313490	2	Head restraint cover	Nackstödspåse	6


70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
193. CH. -M5000874
194. Ch. M5000875-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

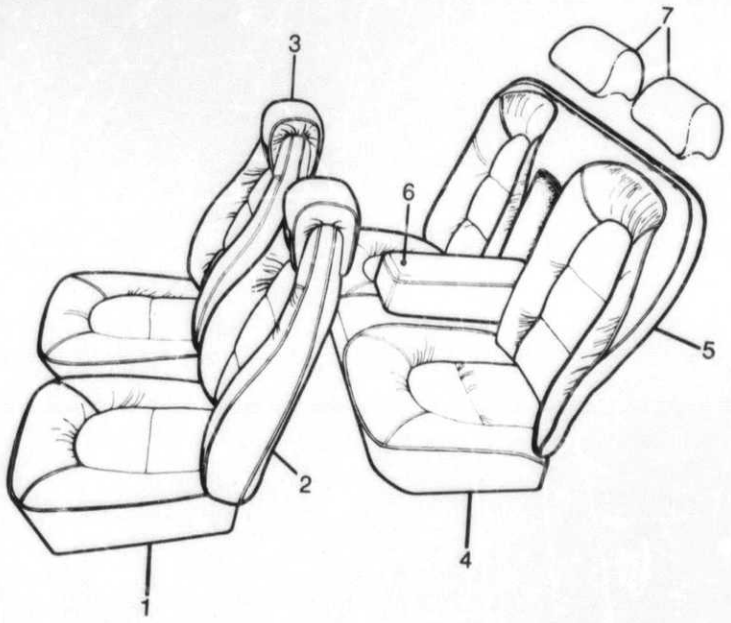

F3083 AAC90

1312

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR H33				
0905	3	43 13 490	100,194)	2	Head restraint cover	Nackstödspåse	6
0910	4	40 46 611	100), 3CK	1	Seat cover	Sitspåse	6
0920	4	41 68 159	100), CV	1	Seat cover	Sitspåse	6
0930	4	40 48 328	100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0940	5	40 46 629	100)	1	Back cover	Ryggpåse	6
0950	5	91 61 043	100), CV	1	Back cover	Ryggpåse	6
0960	6	40 46 637	100)	1	Arm rest cover	Armstödspåse	6
0970	7	40 53 609	100)	2	Head restraint cover	Nackstödspåse	6
0980	7	91 61 324	100), CV	2	Head restraint cover	Nackstödspåse	6
0995			TRIM COLOUR H43				
1000	1	41 66 898	100), LH, CV	1	Seat cover	Sitspåse	6
1010	1	41 66 906	100), RH, CV	1	Seat cover	Sitspåse	6
1020	2	41 66 823	100), CV	2	Back cover	Ryggpåse	6
1030	3	41 27 700	100), CV	2	Head restraint cover	Nackstödspåse	6
1040	4	41 67 797	100), CV	1	Seat cover	Sitspåse	6
1050	5	41 68 019	100), CV	1	Back cover	Ryggpåse	6
1060	7	41 68 092	100), CV	2	Head restraint cover	Nackstödspåse	6
1075			TRIM COLOUR H53				
1080	1	42 59 131	100), LH	1	Seat cover	Sitspåse	6
1090	1	42 59 149	100), RH	1	Seat cover	Sitspåse	6
1100	2	42 59 156	100)	2	Back cover	Ryggpåse	6
1110	3	*41 67 425*	100,193) NLS - USE	2	Head restraint cover	Nackstödspåse	6
1110			4313490				
1115	3	43 13 490	100,194)	2	Head restraint cover	Nackstödspåse	6
1120	4	40 46 611	100), 3CK	1	Seat cover	Sitspåse	6
1130	4	41 68 159	100), CV	1	Seat cover	Sitspåse	6
1140	4	40 48 328	100), 4SN, 5CK	1	Seat cover	Sitspåse	6
1150	5	40 46 629	100)	1	Back cover	Ryggpåse	6
1160	5	91 61 043	100), CV	1	Back cover	Ryggpåse	6
1170	6	40 46 637	100)	1	Arm rest cover	Armstödspåse	6
1180	7	40 53 609	100)	2	Head restraint cover	Nackstödspåse	6
1190	7	91 61 324	100), CV	2	Head restraint cover	Nackstödspåse	6

100. Light grey Ljus grå
193. CH. --M5000874
194. Ch. M5000875--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-B22 Covers 1992 Parallel pattern

Klädsel

Klädselpåsar 1992 Parallellmönster

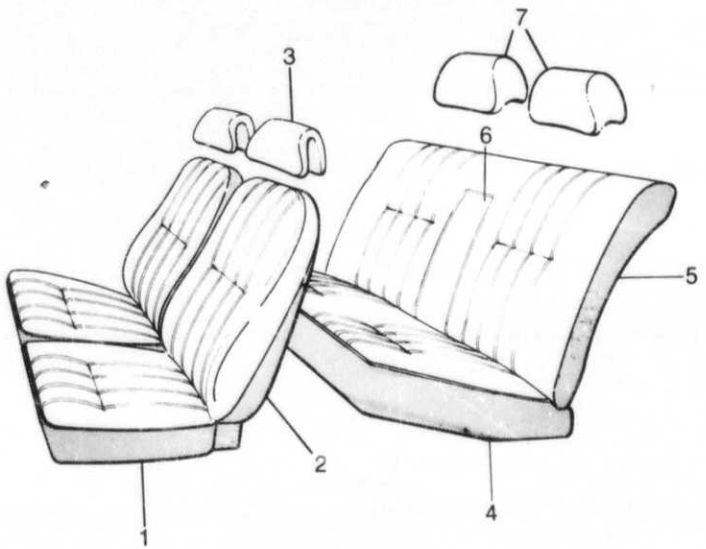

F3758 - AAC90

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41				
0020	1	42 92 090		210,235), LH	1	Seat cover	Sitspåse	6
0030	1	42 92 082		210,235), RH	1	Seat cover	Sitspåse	6
0040	2	42 92 116		210,235)	2	Back cover	Ryggpåse	6
0050	3	42 89 021		210,235)	2	Head restraint cover	Nackstödspåse	6
0060	4	42 92 975		210,235), 3CK	1	Seat cover	Sitspåse	6
0070	4	43 08 011		210,235), 4SN, 5CK	1	Seat cover	Sitspåse	6
0080	5	42 92 983		210,235)	1	Back cover	Ryggpåse	6
0090	5	43 08 045		210,14,235)	1	Back cover	Ryggpåse	6
0100	6	43 08 052		210,235)	1	Arm rest cover	Armstödspåse	6
0110	7	43 08 953		210,235)	2	Head restraint cover	Nackstödspåse	6
0120				TRIM COLOUR J41				
0130	1	43 16 279		210,236), LH	1	Seat cover	Sitspåse	6
0140	1	43 16 295		210,236), RH	1	Seat cover	Sitspåse	6
0150	2	43 16 287		210,236)	2	Back cover	Ryggpåse	6
0160	3	43 16 576		210,236)	2	Head restraint cover	Nackstödspåse	6
0170	4	43 17 624		210,236), 3CK	1	Seat cover	Sitspåse	6
0180	4	43 17 715		210,236), 4SN, 5CK	1	Seat cover	Sitspåse	6
0190	5	43 17 632		210,236)	1	Back cover	Ryggpåse	6
0200	5	43 17 855		210,14,236)	1	Back cover	Ryggpåse	6
0210	6	43 17 863		210,236)	1	Arm rest cover	Armstödspåse	6
0220	7	44 13 464		210,236)	2	Head restraint cover	Nackstödspåse	6
0230				TRIM COLOUR E41				
0240	1	41 31 488		70,233), LH	1	Seat cover	Sitspåse	6
0250	1	41 31 496		70,233), RH	1	Seat cover	Sitspåse	6
0260	2	41 31 546		70,233)	2	Back cover	Ryggpåse	6
0270	3	42 56 657		70,233)	2	Head restraint cover	Nackstödspåse	6
0280	4	95 38 778		70,233), 3CK	1	Seat cover	Sitspåse	6
0290	4	95 38 810		70,233), 4SN, 5CK	1	Seat cover	Sitspåse	6
0300	5	95 38 851		70,233)	1	Back cover	Ryggpåse	6
0310	5	95 41 392		70,14,233)	1	Back cover	Ryggpåse	6
0320	6	95 39 453		70,233)	1	Arm rest cover	Armstödspåse	6
0330	7	96 99 638		70,233), (9594315)	2	Head restraint cover	Nackstödspåse	6
0340				TRIM COLOUR E41				
0350	1	43 16 154		70,234), LH	1	Seat cover	Sitspåse	6
0360	1	43 16 170		70,234), RH	1	Seat cover	Sitspåse	6
0370	2	43 16 162		70,234)	2	Back cover	Ryggpåse	6
0380	3	43 16 493		70,234)	2	Head restraint cover	Nackstödspåse	6
0390	4	43 17 566		70,234), 3CK	1	Seat cover	Sitspåse	6
0400	4	43 17 681		70,234), 4SN, 5CK	1	Seat cover	Sitspåse	6
0410	5	43 17 574		70,234)	1	Back cover	Ryggpåse	6
0420	5	43 17 731		70,14,234)	1	Back cover	Ryggpåse	6
0430	6	43 17 749		70,234)	1	Arm rest cover	Armstödspåse	6
0440	7	44 13 258		70,234)	2	Head restraint cover	Nackstödspåse	6

14. With arm rest Med armstöd
70. Grey Grå
210. Light beige Ljus beige
233. Ch. --N2014828, --N7005304
234. Ch. N2014829--, N7005305--
235. Ch. --N2016702, --N7010104
236. Ch. N2016703--, N7010105--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-B24

Covers 1992
Parallel pattern

Klädselpåsar 1992
Parallellmönster

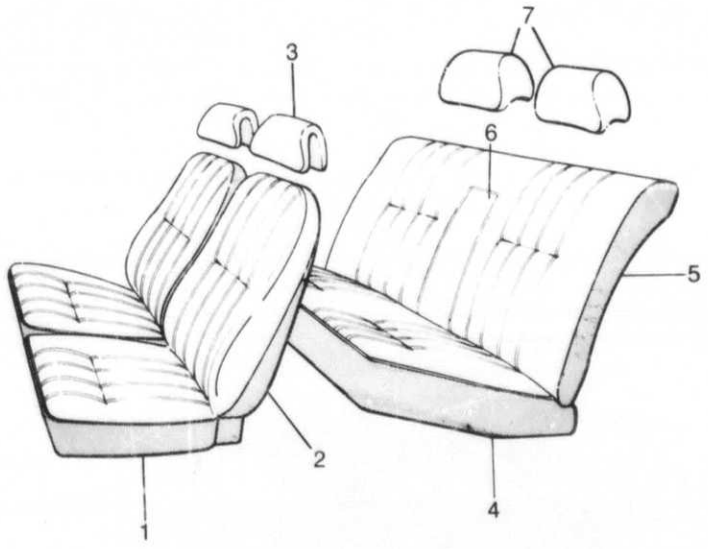

F3758 - AAC90

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450				TRIM COLOUR F41				
0460	1	41 31 504		80,237), LH	1	Seat cover	Sitspåse	6
0470	1	41 31 512		80,237), RH	1	Seat cover	Sitspåse	6
0480	2	41 31 553		80,237)	2	Back cover	Ryggpåse	6
0490	3	42 56 665		80,237)	2	Head restraint cover	Nackstödspåse	6
0500	4	95 38 760		80,237), 3CK	1	Seat cover	Sitspåse	6
0510	4	95 38 802		80,237), 4SN, 5CK	1	Seat cover	Sitspåse	6
0520	5	95 38 844		80,237)	1	Back cover	Ryggpåse	6
0530	5	95 41 400		80,14,237)	1	Back cover	Ryggpåse	6
0540	6	95 39 446		80,237)	1	Arm rest cover	Armstödspåse	6
0550	7	96 99 646		80,237), (9594623)	2	Head restraint cover	Nackstödspåse	6
0560				TRIM COLOUR F41				
0570	1	43 16 188		80,238), LH	1	Seat cover	Sitspåse	6
0580	1	43 16 204		80,238), RH	1	Seat cover	Sitspåse	6
0590	2	43 16 196		80,238)	2	Back cover	Ryggpåse	6
0600	3	43 16 378		80,238)	2	Head restraint cover	Nackstödspåse	6
0610	4	43 17 541		80,238), 3CK	1	Seat cover	Sitspåse	6
0620	4	43 17 640		80,238), 4SN, 5CK	1	Seat cover	Sitspåse	6
0630	5	43 17 558		80,238)	1	Back cover	Ryggpåse	6
0640	5	43 17 764		80,14,238)	1	Back cover	Ryggpåse	6
0650	6	43 17 772		80,238)	1	Arm rest cover	Armstödspåse	6
0660	7	44 13 274		80,238)	2	Head restraint cover	Nackstödspåse	6
0670				TRIM COLOUR G41				
0680	1	41 31 520		90,239), LH	1	Seat cover	Sitspåse	6
0690	1	41 31 538		90,239), RH	1	Seat cover	Sitspåse	6
0700	2	41 31 561		90,239)	2	Back cover	Ryggpåse	6
0710	3	42 56 673		90,239)	2	Head restraint cover	Nackstödspåse	6
0720	4	95 38 703		90,239), 3CK	1	Seat cover	Sitspåse	6
0730	4	95 38 695		90,239), 4SN, 5CK	1	Seat cover	Sitspåse	6
0740	5	95 38 711		90,239)	1	Back cover	Ryggpåse	6
0750	5	95 41 418		90,14,239)	1	Back cover	Ryggpåse	6
0760	6	95 39 438		90,239)	1	Arm rest cover	Armstödspåse	6
0770	7	96 99 653		90,239), (9594631)	2	Head restraint cover	Nackstödspåse	6
0780				TRIM COLOUR G41				
0790	1	43 16 212		90,240), LH	1	Seat cover	Sitspåse	6
0800	1	43 16 238		90,240), RH	1	Seat cover	Sitspåse	6
0810	2	43 16 220		90,240)	2	Back cover	Ryggpåse	6
0820	3	43 16 410		90,240)	2	Head restraint cover	Nackstödspåse	6
0830	4	43 17 582		90,240), 3CK	1	Seat cover	Sitspåse	6
0840	4	43 17 699		90,240), 4SN, 5CK	1	Seat cover	Sitspåse	6
0850	5	43 17 590		90,240)	1	Back cover	Ryggpåse	6
0860	5	43 17 798		90,14,240)	1	Back cover	Ryggpåse	6
0870	6	43 17 806		90,240)	1	Arm rest cover	Armstödspåse	6
0880	7	44 13 290		90,240)	2	Head restraint cover	Nackstödspåse	6

14. With arm rest Med armstöd
80. Blue Blå
90. Yellow Gul
237. Ch. --N2011684, --N7008775
238. Ch. N2011685--, N7008776--
239. Ch. --N2012316, --N7008863
240. Ch. N2012317--, N7008864--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-C02

Covers 1992
Parallel pattern

Klädselpåsar 1992
Parallellmönster

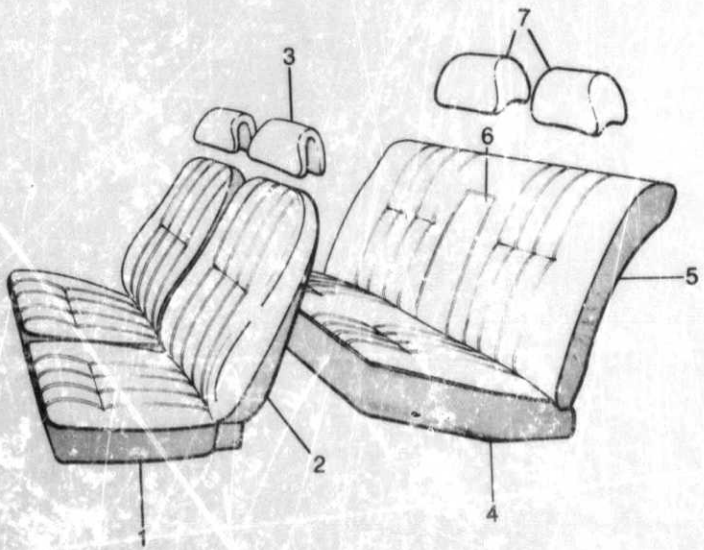

F3758 - AAC90

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0890				TRIM COLOUR H41				
0900	1	41 27 676		100,241), LH	1	Seat cover	Sitspåse	6
0910	1	41 27 684		100,241), RH	1	Seat cover	Sitspåse	6
0920	2	41 27 692		100,241)	2	Back cover	Ryggpåse	6
0930	3	41 27 700		100,241)	2	Head restraint cover	Nackstödspåse	6
0940	4	41 32 437		100,241), 3CK	1	Seat cover	Sitspåse	6
0950	4	41 32 445		100,241), 4SN, 5CK	1	Seat cover	Sitspåse	6
0960	5	41 32 460		100,241)	1	Back cover	Ryggpåse	6
0970	5	41 32 478		100,14,241)	1	Back cover	Ryggpåse	6
0980	6	41 32 486		100,241)	1	Arm rest cover	Armstödspåse	6
0990	7	41 32 536		100,241)	2	Head restraint cover	Nackstödspåse	6
1000								
1010				TRIM COLOUR H41				
1020	1	43 16 246		100,242), LH	1	Seat cover	Sitspåse	6
1030	1	43 16 261		100,242), RH	1	Seat cover	Sitspåse	6
1040	2	43 16 253		100,242)	2	Back cover	Ryggpåse	6
1050	3	43 16 451		100,242)	2	Head restraint cover	Nackstödspåse	6
1060	4	43 17 608		100,242), 3CK	1	Seat cover	Sitspåse	6
1070	4	43 17 707		100,242), 4SN, 5CK	1	Seat cover	Sitspåse	6
1080	5	43 17 616		100,242)	1	Back cover	Ryggpåse	6
1090	5	43 17 822		100,14,242)	1	Back cover	Ryggpåse	6
1100	6	43 17 830		100,242)	1	Arm rest cover	Armstödspåse	6
1110	7	44 13 316		100,242)	2	Head restraint cover	Nackstödspåse	6


14. With arm rest Med armstöd
100. Light grey Ljus grå
241. Ch. -N2010295, -N7006890
242. Ch. N2010296-, N7006891-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

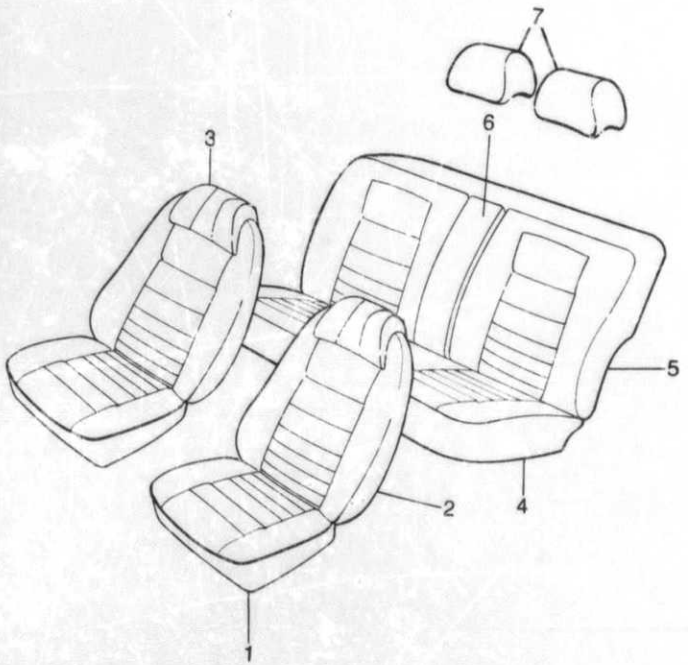

F3759 - AAC90

1321	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J44				
0020	1	42 89 096		210,228,235), LH	1	Seat cover	Sitspåse	6
0030	1	42 89 088		210,228,235), RH	1	Seat cover	Sitspåse	6
0040	1	42 88 999		210,229,235), LH	1	Seat cover	Sitspåse	6
0050	1	42 88 981		210,229,235), RH	1	Seat cover	Sitspåse	6
0060	2	42 89 120		210,228,235)	2	Back cover	Ryggpåse	6
0070	2	42 89 005		210,229,235)	2	Back cover	Ryggpåse	6
0080	3	42 89 021		210,235)	2	Head restraint cover	Nackstödspåse	6
0090	4	43 08 177		210,230,235), 3CK	1	Seat cover	Sitspåse	6
0100	4	43 08 102		210,231,235), 3CK	1	Seat cover	Sitspåse	6
0110	4	43 08 201		210,230,235), 4SN, 5CK	1	Seat cover	Sitspåse	6
0120	4	43 08 144		210,231,235), 4SN, 5CK	1	Seat cover	Sitspåse	6
0130	5	43 08 110		210,235)	1	Back cover	Ryggpåse	6
0140	6	43 08 052		210,235)	1	Arm rest cover	Armstödspåse	6
0150	7	43 08 953		210,235)	2	Head restraint cover	Nackstödspåse	6
0160				TRIM COLOUR J44				
0170	1	43 16 550		210,228,236), LH	1	Seat cover	Sitspåse	6
0180	1	43 16 584		210,228,236), RH	1	Seat cover	Sitspåse	6
0190	1	43 16 592		210,229,236), LH	1	Seat cover	Sitspåse	6
0200	1	43 16 626		210,229,236), RH	1	Seat cover	Sitspåse	6
0210	2	43 16 568		210,228,236)	2	Back cover	Ryggpåse	6
0220	2	43 16 600		210,229,236)	2	Back cover	Ryggpåse	6
0230	3	43 16 576		210,236)	2	Head restraint cover	Nackstödspåse	6
0240	4	44 13 068		210,230,236), 3CK	1	Seat cover	Sitspåse	6
0250	4	43 17 947		210,231,236), 3CK	1	Seat cover	Sitspåse	6
0260	4	44 13 308		210,230,236), 4SN, 5CK	1	Seat cover	Sitspåse	6
0270	4	44 13 001		210,231,236), 4SN, 5CK	1	Seat cover	Sitspåse	6
0280	5	43 17 954		210,236)	1	Back cover	Ryggpåse	6
0290	6	43 17 863		210,236)	1	Arm rest cover	Armstödspåse	6
0300	7	44 13 464		210,236)	2	Head restraint cover	Nackstödspåse	6
0310				TRIM COLOUR E44				
0320	1	41 33 740		70,228,233), LH	1	Seat cover	Sitspåse	6
0330	1	41 33 757		70,228,233), RH	1	Seat cover	Sitspåse	6
0340	1	41 30 373		70,229,233), LH	1	Seat cover	Sitspåse	6
0350	1	41 30 381		70,229,233), RH	1	Seat cover	Sitspåse	6
0360	2	41 33 815		70,228,233)	2	Back cover	Ryggpåse	6
0370	2	41 31 264		70,229,233)	2	Back cover	Ryggpåse	6
0380	3	42 56 657		70,233)	2	Head restraint cover	Nackstödspåse	6
0390	4	95 39 008		70,230,233), 3CK	1	Seat cover	Sitspåse	6
0400	4	95 39 305		70,231,233), 3CK	1	Seat cover	Sitspåse	6
0410	4	95 39 057		70,230,233), 4SN, 5CK	1	Seat cover	Sitspåse	6
0420	4	95 39 354		70,231,233), 4SN, 5CK	1	Seat cover	Sitspåse	6
0430	5	95 39 404		70,233)	1	Back cover	Ryggpåse	6
0440	6	95 39 453		70,233)	1	Arm rest cover	Armstödspåse	6
0450	7	96 99 638		70,233), (9594615)	2	Head restraint cover	Nackstödspåse	6

70. Grey Grå
210. Light beige Ljus beige
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg
233. Ch. --N2014828, --N7005304
235. Ch. --N2016702, --N7010104
236. Ch. N2016703--, N7010105--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-C06

Covers 1992
Horizon pattern

Klädselpåsar 1992
Horisontmönster

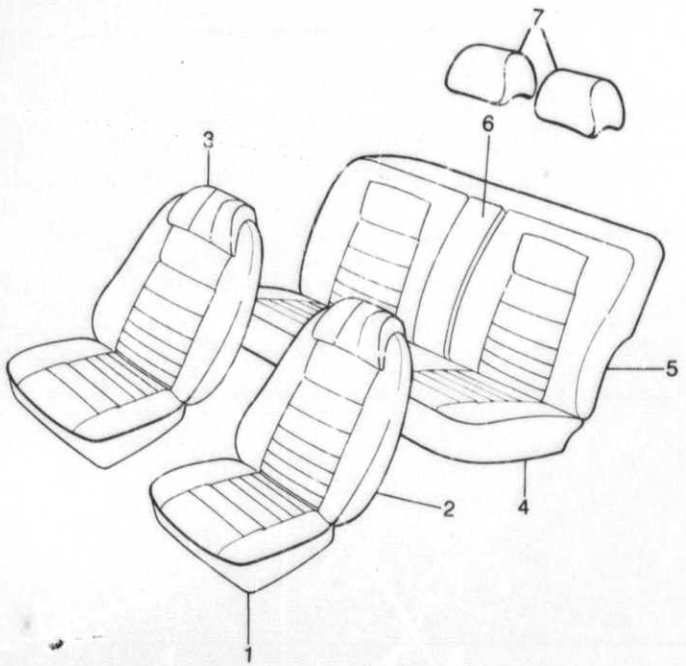

F3759 - AAC90

i321	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460				TRIM COLOUR E44				
0470	1	43 16 477		70,228,234), LH	1	Seat cover	Sitspåse	6
0480	1	43 16 501		70,228,234), RH	1	Seat cover	Sitspåse	6
0490	1	43 17 160		70,229,234), LH	1	Seat cover	Sitspåse	6
0500	1	43 17 186		70,229,234), RH	1	Seat cover	Sitspåse	6
0510	2	43 16 485		70,228,234)	2	Back cover	Ryggpåse	6
0520	2	43 17 178		70,229,234)	2	Back cover	Ryggpåse	6
0530	3	43 16 493		70,234)	2	Head restraint cover	Nackstödspåse	6
0540	4	44 13 241		70,230,234), 3CK	1	Seat cover	Sitspåse	6
0550	4	44 13 142		70,231,234), 3CK	1	Seat cover	Sitspåse	6
0560	4	44 13 084		70,230,234), 4SN, 5CK	1	Seat cover	Sitspåse	6
0570	4	44 13 209		70,231,234), 4SN, 5CK	1	Seat cover	Sitspåse	6
0580	5	44 13 092		70,234)	1	Back cover	Ryggpåse	6
0590	6	43 17 749		70,234)	1	Arm rest cover	Armstödspåse	6
0600	7	44 13 258		70,234)	2	Head restraint cover	Nackstödspåse	6
0610								
0620				TRIM COLOUR F44				
0630	1	41 33 765		80,228,237), LH	1	Seat cover	Sitspåse	6
0640	1	41 33 773		80,228,237), RH	1	Seat cover	Sitspåse	6
0650	1	41 30 399		80,229,237), LH	1	Seat cover	Sitspåse	6
0660	1	41 31 207		80,229,237), RH	1	Seat cover	Sitspåse	6
0670	2	41 33 823		80,228,237)	2	Back cover	Ryggpåse	6
0680	2	41 31 272		80,229,237)	2	Back cover	Ryggpåse	6
0690	3	42 56 665		80,237)	2	Head restraint cover	Nackstödspåse	6
0700	4	95 38 992		80,230,237), 3CK	1	Seat cover	Sitspåse	6
0710	4	95 39 297		80,231,237), 3CK	1	Seat cover	Sitspåse	6
0720	4	95 39 040		80,230,237), 4SN, 5CK	1	Seat cover	Sitspåse	6
0730	4	95 39 347		80,231,237), 4SN, 5CK	1	Seat cover	Sitspåse	6
0740	5	95 39 396		80,237)	1	Back cover	Ryggpåse	6
0750	6	95 39 446		80,237)	1	Arm rest cover	Armstödspåse	6
0760	7	96 99 646		80,237), (9594623)	2	Head restraint cover	Nackstödspåse	6
0770				TRIM COLOUR F44				
0780	1	43 16 634		80,228,238), LH	1	Seat cover	Sitspåse	6
0790	1	43 16 667		80,228,238), RH	1	Seat cover	Sitspåse	6
0800	1	43 16 352		80,229,238), LH	1	Seat cover	Sitspåse	6
0810	1	43 16 386		80,229,238), RH	1	Seat cover	Sitspåse	6
0820	2	43 16 642		80,228,238)	2	Back cover	Ryggpåse	6
0830	2	43 16 360		80,229,238)	2	Back cover	Ryggpåse	6
0840	3	43 16 378		80,238)	2	Head restraint cover	Nackstödspåse	6
0850	4	44 13 027		80,230,238), 3CK	1	Seat cover	Sitspåse	6
0860	4	43 17 921		80,231,238), 3CK	1	Seat cover	Sitspåse	6
0870	4	44 13 282		80,230,238), 4SN, 5CK	1	Seat cover	Sitspåse	6
0880	4	43 17 962		80,231,238), 4SN, 5CK	1	Seat cover	Sitspåse	6
0890	5	43 17 970		80,238)	1	Back cover	Ryggpåse	6
0900	6	43 17 772		80,238)	1	Arm rest cover	Armstödspåse	6
0910	7	44 13 274		80,238)	2	Head restraint cover	Nackstödspåse	6


70. Grey Grå
80. Blue Blå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg
234. Ch. N2014829–, N7005305–
237. Ch. –N2011684, –N7008775
238. Ch. N2011685–, N7008776–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

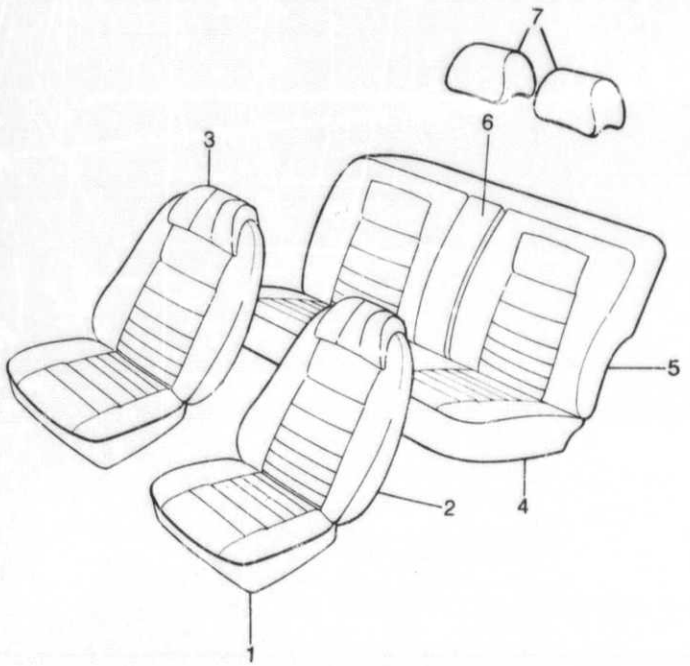

F3759 - AAC90

1321	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920				TRIM COLOUR G44				
0930	1	41 33 781		90,228,239), LH	1	Seat cover	Sitspåse	6
0940	1	41 33 799		90,228,239), RH	1	Seat cover	Sitspåse	6
0950	1	41 31 215		90,229,239), LH	1	Seat cover	Sitspåse	6
0960	1	41 31 223		90,229,239), RH	1	Seat cover	Sitspåse	6
0970	2	41 33 831		90,228,239)	2	Back cover	Ryggpåse	6
0980	2	41 31 280		90,229,239)	2	Back cover	Ryggpåse	6
0990	3	42 56 673		90,239)	2	Head restraint cover	Nackstödspåse	6
1000	4	95 38 984		90,230,239), 3CK	1	Seat cover	Sitspåse	6
1010	4	95 39 032		90,230,239), 4SN, 5CK	1	Seat cover	Sitspåse	6
1020	4	95 39 289		90,231,239), 3CK	1	Seat cover	Sitspåse	6
1030	4	95 39 339		90,231,239), 4SN, 5CK	1	Seat cover	Sitspåse	6
1040	5	95 39 388		90,239)	1	Back cover	Ryggpåse	6
1050	6	95 39 438		90,239)	1	Arm rest cover	Armstödspåse	6
1060	7	96 99 653		90,239), (9594631)	2	Head restraint cover	Nackstödspåse	6
1070				TRIM COLOUR G44				
1080	1	43 16 675		90,228,240), LH	1	Seat cover	Sitspåse	6
1090	1	43 16 709		90,228,240), RH	1	Seat cover	Sitspåse	6
1100	1	43 16 394		90,229,240), LH	1	Seat cover	Sitspåse	6
1110	1	43 16 428		90,229,240), RH	1	Seat cover	Sitspåse	6
1120	2	43 16 683		90,228,240)	2	Back cover	Ryggpåse	6
1130	2	43 16 402		90,229,240)	2	Back cover	Ryggpåse	6
1140	3	43 16 410		90,240)	2	Head restraint cover	Nackstödspåse	6
1150	4	44 13 043		90,230,240), 3CK	1	Seat cover	Sitspåse	6
1160	4	44 13 100		90,230,240), 4SN, 5CK	1	Seat cover	Sitspåse	6
1170	4	44 13 167		90,231,240), 3CK	1	Seat cover	Sitspåse	6
1180	4	44 13 225		90,231,240), 4SN, 5CK	1	Seat cover	Sitspåse	6
1190	5	44 13 050		90,240)	1	Back cover	Ryggpåse	6
1200	6	43 17 806		90,240)	1	Arm rest cover	Armstödspåse	6
1210	7	44 13 290		90,240)	2	Head restraint cover	Nackstödspåse	6
1220				TRIM COLOUR H44				
1230	1	41 27 817		100,228,241), LH	1	Seat cover	Sitspåse	6
1240	1	41 27 825		100,228,241), RH	1	Seat cover	Sitspåse	6
1250	1	41 27 742		100,229,241), LH	1	Seat cover	Sitspåse	6
1260	1	41 27 759		100,229,241), RH	1	Seat cover	Sitspåse	6
1270	2	41 27 833		100,228,241)	2	Back cover	Ryggpåse	6
1280	2	41 27 767		100,229,241)	2	Back cover	Ryggpåse	6
1290	3	41 27 700		100,241)	2	Head restraint cover	Nackstödspåse	6
1300	4	41 32 411		100,230,241), 3CK	1	Seat cover	Sitspåse	6
1310	4	41 32 403		100,230,241), 4SN, 5CK	1	Seat cover	Sitspåse	6
1320	4	41 32 429		100,231,241), 3CK	1	Seat cover	Sitspåse	6
1330	4	41 32 544		100,231,241), 4SN, 5CK	1	Seat cover	Sitspåse	6
1340	5	41 32 452		100,241)	1	Back cover	Ryggpåse	6
1350	6	41 32 486		100,241)	1	Arm rest cover	Armstödspåse	6
1360	7	41 32 536		100,241)	2	Head restraint cover	Nackstödspåse	6

90. Yellow Gul
100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg
239. Ch. --N2012316, --N7008863
240. Ch. N2012317--, N7008864--
241. Ch. --N2010295, --N7006890

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Upholstery

5-C10

Covers 1992
Horizon pattern

Klädsel

Klädselpåsar 1992
Horisontmönster

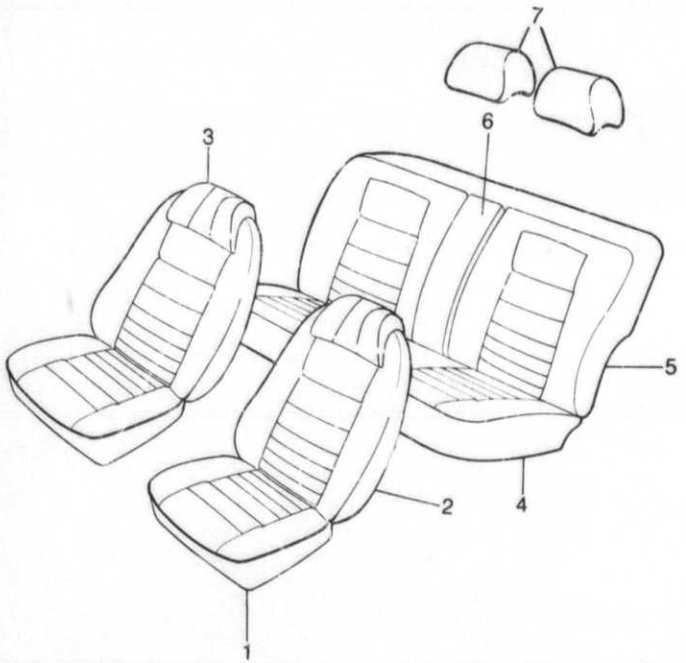

F3759 - AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR H44				
1	43 16 519		100,228,242), LH	1	Seat cover	Sitspåse	6
1	43 16 543		100,228,242), RH	1	Seat cover	Sitspåse	6
1	43 16 436		100,229,242), LH	1	Seat cover	Sitspåse	6
1	43 16 469		100,229,242), RH	1	Seat cover	Sitspåse	6
2	43 16 527		100,228,242)	2	Back cover	Ryggpåse	6
2	43 16 444		100,229,242)	2	Back cover	Ryggpåse	6
3	43 16 451		100,242)	2	Head restraint cover	Nackstödspåse	6
4	44 13 266		100,230,242), 3CK	1	Seat cover	Sitspåse	6
4	44 13 126		100,230,242), 4SN, 5CK	1	Seat cover	Sitspåse	6
4	44 13 183		100,231,242), 3CK	1	Seat cover	Sitspåse	6
4	43 17 988		100,231,242), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	43 17 996		100,242)	1	Back cover	Ryggpåse	6
6	43 17 830		100,242)	1	Arm rest cover	Armstödspåse	6
7	44 13 316		100,242)	2	Head restraint cover	Nackstödspåse	6


100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
230. For seat cushion with upholstery made by cloth/coated fabric För sittdyna med klädsel av tyg/vävplast
231. For seat cushion with upholstery made by cloth/cloth För sittdyna med klädsel av tyg/tyg
242. Ch. N2010296–, N7006891–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

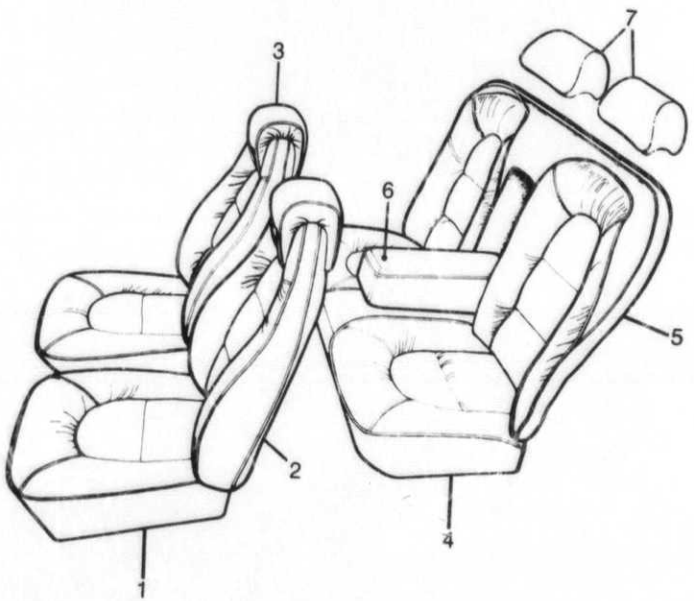

F3760 - AAC90

1322	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J33				
0020	1	42 88 692		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 684		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 718		210)	2	Back cover	Ryggpåse	6
0050	3	43 13 508		210)	2	Head restraint cover	Nackstödspåse	6
0060	4	43 08 300		210), 3CK	1	Seat cover	Sitspåse	6
0070	4	41 69 934		210), CV	1	Seat cover	Sitspåse	6
0080	4	43 08 441		210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0090	5	43 08 326		210)	1	Back cover	Ryggpåse	6
0100	5	41 69 942		210), CV	1	Back cover	Ryggpåse	6
0110	6	43 08 342		210)	1	Arm rest cover	Armstödspåse	6
0120	7	43 08 888		210)	2	Head restraint cover	Nackstödspåse	6
0130	7	41 69 991		210), CV	2	Head restraint cover	Nackstödspåse	6
0140				TRIM COLOUR J43				
0150	1	41 69 835		210,235), LH, CV	1	Seat cover	Sitspåse	6
0160	1	41 69 843		210,235), RH, CV	1	Seat cover	Sitspåse	6
0170	2	41 69 850		210,235), CV	2	Back cover	Ryggpåse	6
0180	3	42 86 021		210,235), CV	2	Head restraint cover	Nackstödspåse	6
0190	4	41 69 876		210,235), CV	1	Seat cover	Sitspåse	6
0200	5	41 69 868		210,235), CV	1	Back cover	Ryggpåse	6
0210	7	41 69 983		210,235), CV	2	Head restraint cover	Nackstödspåse	6
0220				TRIM COLOUR J43				
0230	1	44 13 670		210,236), LH, CV	1	Seat cover	Sitspåse	6
0240	1	44 13 688		210,236), RH, CV	1	Seat cover	Sitspåse	6
0250	2	44 13 662		210,236), CV	2	Back cover	Ryggpåse	6
0260	3	43 16 576		210,236), CV	2	Head restraint cover	Nackstödspåse	6
0270	4	44 13 779		210,236), CV	1	Seat cover	Sitspåse	6
0280	5	44 13 787		210,236), CV	1	Back cover	Ryggpåse	6
0290	7	44 13 506		210,236), CV	2	Head restraint cover	Nackstödspåse	6
0300				TRIM COLOUR E33				
0310	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0320	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0330	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0340	3	43 13 474		70)	2	Head restraint cover	Nackstödspåse	6
0350	4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
0360	4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
0370	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0380	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0390	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0400	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0410	7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
0420	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0430				TRIM COLOUR E43				
0440	1	41 66 773		70,233), LH, CV	1	Seat cover	Sitspåse	6
0450	1	41 66 781		70,233), RH, CV	1	Seat cover	Sitspåse	6
0460	2	41 66 807		70,233), CV	2	Back cover	Ryggpåse	6
0470	3	42 56 657		70,233), CV	2	Head restraint cover	Nackstödspåse	6
0480	4	41 67 730		70,233), CV	1	Seat cover	Sitspåse	6
0490	5	91 62 264		70,233), CV	1	Back cover	Ryggpåse	6
0500	7	91 62 405		70,233), CV	2	Head restraint cover	Nackstödspåse	6
0505								
0510				TRIM COLOUR E43				
0520	1	44 13 522		70,234), LH, CV	1	Seat cover	Sitspåse	6
0530	1	44 13 530		70,234), RH, CV	1	Seat cover	Sitspåse	6
0540	2	44 13 514		70,234), CV	2	Back cover	Ryggpåse	6
0550	3	*44 13 548*		70,234), CV NLS - USE 4256657	2	Head restraint cover	Nackstödspåse	6
0560								

70. Grey Grå
210. Light beige Ljus beige
233. Ch. -N2014828, -N7005304
234. Ch. N2014829-, N7005305-
235. Ch. -N2016702, -N7010104
236. Ch. N2016703-, N7010105-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Upholstery

5-C14

Covers 1992
Contour design

Klädsel

Klädselpåsar 1992
Contour design

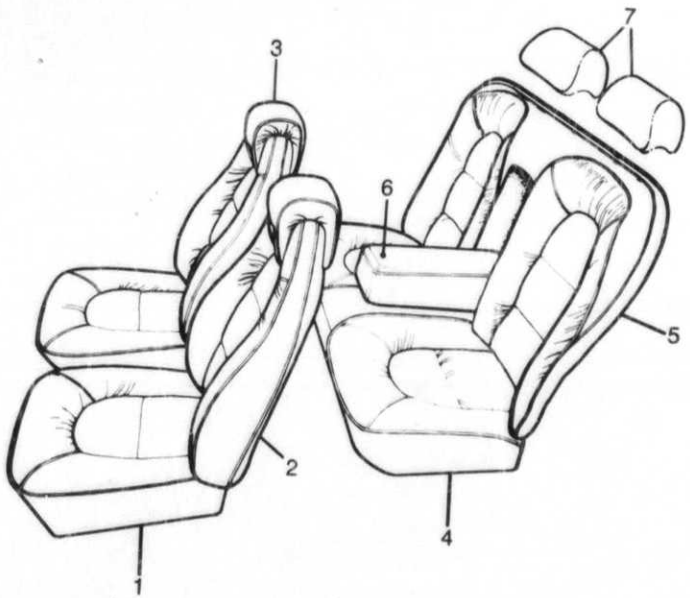

F3760 - AAC90

1322	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				TRIM COLOUR E43				
0560	4	44 13 712		70,234), CV	1	Seat cover	Sitspåse	6
0570	5	44 13 720		70,234), CV	1	Back cover	Ryggpåse	6
0580	7	44 13 472		70,234), CV	2	Head restraint cover	Nackstödspåse	6
0590								
				TRIM COLOUR E53				
0600	1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
0610	1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
0620	2	41 35 935		70)	2	Back cover	Ryggpåse	6
0630	3	43 13 474		70)	2	Head restraint cover	Nackstödspåse	6
0640	4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
0650	4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
0660	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0670	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0680	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0690	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0700	7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
0710	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0720								
				TRIM COLOUR F33				
0730	1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
0740	1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
0750	2	41 35 810		80)	2	Back cover	Ryggpåse	6
0760	3	43 13 102		80)	2	Head restraint cover	Nackstödspåse	6
0770	4	40 40 200		80), 3CK	1	Seat cover	Sitspåse	6
0780	4	40 40 630		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0790	5	40 40 218		80)	1	Back cover	Ryggpåse	6
0800	6	40 40 226		80)	1	Arm rest cover	Armstödspåse	6
0810	7	40 39 624		80)	2	Head restraint cover	Nackstödspåse	6
0820								
				TRIM COLOUR G33				
0830	1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
0840	1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
0850	2	41 35 802		90)	2	Back cover	Ryggpåse	6
0860	3	43 13 482		90)	2	Head restraint cover	Nackstödspåse	6
0870	4	95 37 846		90), 3CK	1	Seat cover	Sitspåse	6
0880	4	41 67 789		90), CV	1	Seat cover	Sitspåse	6
0890	4	95 37 838		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0900	5	95 37 853		90)	1	Back cover	Ryggpåse	6
0910	5	98 24 376		90), CV	1	Back cover	Ryggpåse	6
0920	6	95 37 861		90)	1	Arm rest cover	Armstödspåse	6
0930	7	96 99 554		90), (9585951)	2	Head restraint cover	Nackstödspåse	6
0940	7	96 48 486		90), CV	2	Head restraint cover	Nackstödspåse	6
0945								
0950				TRIM COLOUR G43				
0960	1	41 66 872		90,239), LH, CV	1	Seat cover	Sitspåse	6
0970	1	41 66 880		90,239), RH, CV	1	Seat cover	Sitspåse	6
0980	2	41 66 815		90,239), CV	2	Back cover	Ryggpåse	6
0990	3	42 56 673		90,239), CV	2	Head restraint cover	Nackstödspåse	6
1000	4	41 67 748		90,239), CV	1	Seat cover	Sitspåse	6
1010	5	91 62 272		90,239), CV	1	Back cover	Ryggpåse	6
1020	7	91 62 413		90,239), CV	2	Head restraint cover	Nackstödspåse	6
1025								
1030				TRIM COLOUR G43				
1040	1	44 13 571		90,240), LH, CV	1	Seat cover	Sitspåse	6
1050	1	44 13 589		90,240), RH, CV	1	Seat cover	Sitspåse	6
1060	2	44 13 563		90,240), CV	2	Back cover	Ryggpåse	6
1070	3	43 16 410		90,240), CV	2	Head restraint cover	Nackstödspåse	6
1080	4	44 13 738		90,240), CV	1	Seat cover	Sitspåse	6
1090	5	44 13 746		90,240), CV	1	Back cover	Ryggpåse	6
1100	7	44 13 480		90,240), CV	2	Head restraint cover	Nackstödspåse	6


70. Grey Grå
80. Blue Blå
90. Yellow Gul
234. Ch. -N2014829-, N7005305--
239. Ch. -N2012316, --N7008863
240. Ch. -N2012317--, N7008864--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

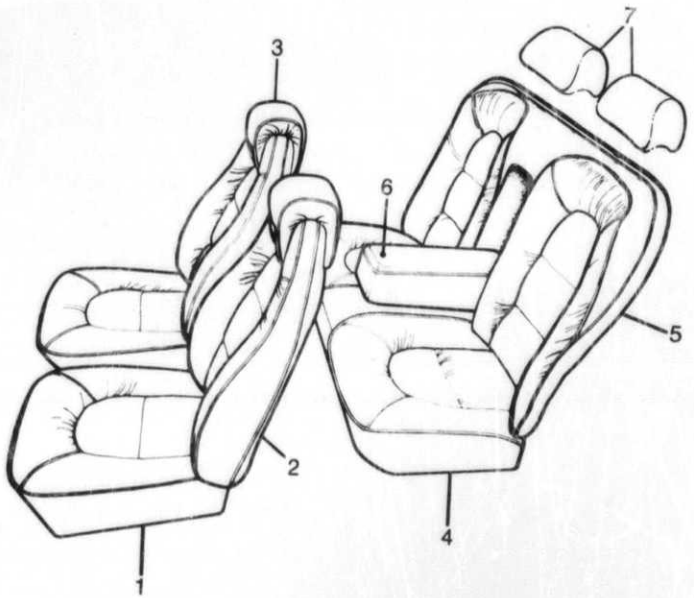

F3760 - AAC90

Upholstery
5-C16
Covers 1992
Contour design

Klädsel
Klädselpåsar 1992
Contour design

1322	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1110				TRIM COLOUR H33				
1120	1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1130	1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
1140	2	41 35 828		100)	2	Back cover	Ryggpåse	6
1150	3	43 13 490		100)	2	Head restraint cover	Nackstödspåse	6
1160	4	40 46 611		100), 3CK	1	Seat cover	Sitspåse	6
1170	4	41 68 159		100), CV	1	Seat cover	Sitspåse	6
1180	4	40 48 328		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
1190	5	40 46 629		100)	1	Back cover	Ryggpåse	6
1200	5	91 61 043		100), CV	1	Back cover	Ryggpåse	6
1210	6	40 46 637		100)	1	Arm rest cover	Armstödspåse	6
1220	7	40 53 609		100)	2	Head restraint cover	Nackstödspåse	6
1230	7	91 61 324		100), CV	2	Head restraint cover	Nackstödspåse	6
1240				TRIM COLOUR H43				
1250	1	41 66 898		100,241), LH, CV	1	Seat cover	Sitspåse	6
1260	1	41 66 906		100,241), RH, CV	1	Seat cover	Sitspåse	6
1270	2	41 66 823		100,241), CV	2	Back cover	Ryggpåse	6
1280	3	41 27 700		100,241), CV	2	Head restraint cover	Nackstödspåse	6
1290	4	41 67 797		100,241), CV	1	Seat cover	Sitspåse	6
1300	5	41 68 019		100,241), CV	1	Back cover	Ryggpåse	6
1310	7	41 68 092		100,241), CV	2	Head restraint cover	Nackstödspåse	6
1320				TRIM COLOUR H43				
1330	1	44 13 621		100,242), LH, CV	1	Seat cover	Sitspåse	6
1340	1	44 13 639		100,242), RH, CV	1	Seat cover	Sitspåse	6
1350	2	44 13 613		100,242), CV	2	Back cover	Ryggpåse	6
1360	3	43 16 451		100,242), CV	2	Head restraint cover	Nackstödspåse	6
1370	4	44 13 753		100,242), CV	1	Seat cover	Sitspåse	6
1380	5	44 13 761		100,242), CV	1	Back cover	Ryggpåse	6
1390	7	44 13 498		100,242), CV	2	Head restraint cover	Nackstödspåse	6
1400				TRIM COLOUR H53				
1410	1	42 59 131		100), LH	1	Seat cover	Sitspåse	6
1420	1	42 59 149		100), RH	1	Seat cover	Sitspåse	6
1430	2	42 59 156		100)	2	Back cover	Ryggpåse	6
1440	3	43 13 490		100)	2	Head restraint cover	Nackstödspåse	6
1450	4	40 46 611		100), 3CK	1	Seat cover	Sitspåse	6
1460	4	41 68 159		100), CV	1	Seat cover	Sitspåse	6
1470	4	40 48 328		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
1480	5	40 46 629		100)	1	Back cover	Ryggpåse	6
1490	5	91 61 043		100), CV	1	Back cover	Ryggpåse	6
1500	6	40 46 637		100)	1	Arm rest cover	Armstödspåse	6
1510	7	40 53 609		100)	2	Head restraint cover	Nackstödspåse	6
1520	7	91 61 324		100), CV	2	Head restraint cover	Nackstödspåse	6


100. Light grey Ljus grå
241. Ch. -N2010295, -N7006890
242. Ch. N2010296-, N7006891-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

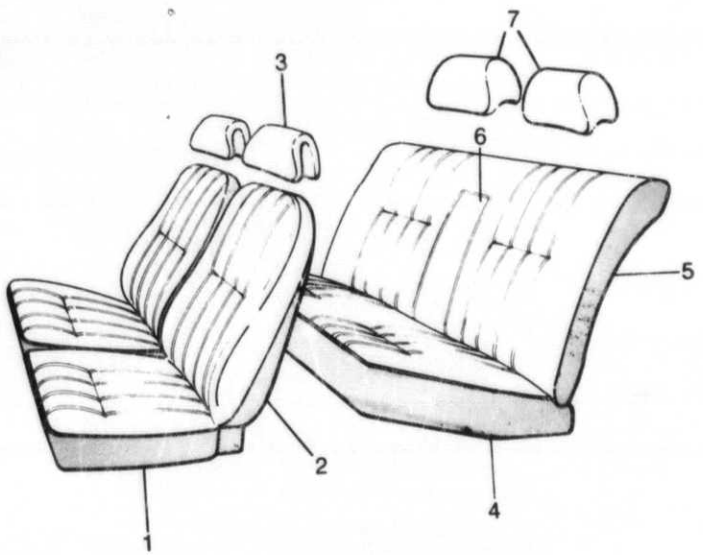

F4548 AAC90

1330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41				
0020	1	43 16 279		210), LH	1	Seat cover	Sitspåse	6
0030	1	43 16 295		210), RH	1	Seat cover	Sitspåse	6
0040	2	43 16 287		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	
0060	4	43 17 624		210), 3CK	1	Seat cover	Sitspåse	6
0070	4	43 17 715		210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0080	5	43 17 632		210)	1	Back cover	Ryggpåse	6
0090	5	43 17 855		210,14)	1	Back cover	Ryggpåse	6
0100	6	43 17 863		210)	1	Arm rest cover	Armstödspåse	6
0110	7	44 13 464		210)	2	Head restraint cover	Nackstödspåse	6
0120				TRIM COLOUR E41				
0130	1	43 16 154		70), LH	1	Seat cover	Sitspåse	6
0140	1	43 16 170		70), RH	1	Seat cover	Sitspåse	6
0150	2	43 16 162		70)	2	Back cover	Ryggpåse	6
0160	3	44 74 060		70)	2	Head restraint cover	Nackstödspåse	6
0170	4	43 17 566		70), 3CK	1	Seat cover	Sitspåse	6
0180	4	43 17 681		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0190	5	43 17 574		70)	1	Back cover	Ryggpåse	6
0200	5	43 17 731		70,14)	1	Back cover	Ryggpåse	6
0210	6	43 17 749		70)	1	Arm rest cover	Armstödspåse	6
0220	7	44 13 258		70)	2	Head restraint cover	Nackstödspåse	6
0230				TRIM COLOUR F41				
0240	1	43 16 188		80), LH	1	Seat cover	Sitspåse	6
0250	1	43 16 204		80), RH	1	Seat cover	Sitspåse	6
0260	2	43 16 196		80)	2	Back cover	Ryggpåse	6
0270	3	44 74 052		80)	2	Head restraint cover	Nackstödspåse	6
0280	4	43 17 541		80), 3CK	1	Seat cover	Sitspåse	6
0290	4	43 17 640		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0300	5	43 17 558		80)	1	Back cover	Ryggpåse	6
0310	5	43 17 764		80,14)	1	Back cover	Ryggpåse	6
0320	6	43 17 772		80)	1	Arm rest cover	Armstödspåse	6
0330	7	44 13 274		80)	2	Head restraint cover	Nackstödspåse	6
0340				TRIM COLOUR G41				
0350	1	43 16 212		90), LH	1	Seat cover	Sitspåse	6
0360	1	43 16 238		90), RH	1	Seat cover	Sitspåse	6
0370	2	43 16 220		90)	2	Back cover	Ryggpåse	6
0380	3	44 74 045		90)	2	Head restraint cover	Nackstödspåse	
0390	4	43 17 582		90), 3CK	1	Seat cover	Sitspåse	6
0400	4	43 17 699		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0410	5	43 17 590		90)	1	Back cover	Ryggpåse	6
0420	5	43 17 798		90,14)	1	Back cover	Ryggpåse	6
0430	6	43 17 806		90)	1	Arm rest cover	Armstödspåse	6
0440	7	44 13 290		90)	2	Head restraint cover	Nackstödspåse	6
0450				TRIM COLOUR H41				
0460	1	43 16 246		100), LH	1	Seat cover	Sitspåse	6
0470	1	43 16 261		100), RH	1	Seat cover	Sitspåse	6
0480	2	43 16 253		100)	2	Back cover	Ryggpåse	6
0490	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	
0500	4	43 17 608		100), 3CK	1	Seat cover	Sitspåse	6
0510	4	43 17 707		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0520	5	43 17 616		100)	1	Back cover	Ryggpåse	6
0530	5	43 17 822		100,14)	1	Back cover	Ryggpåse	6
0540	6	43 17 830		100)	1	Arm rest cover	Armstödspåse	6
0550	7	44 13 316		100)	2	Head restraint cover	Nackstödspåse	6


14. With arm rest Med armstöd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

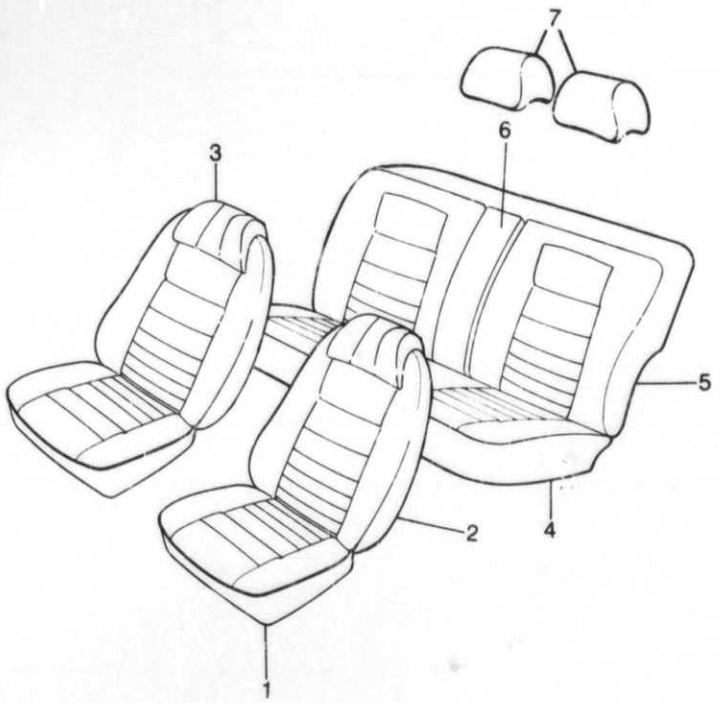

F4549 AAC90

Upholstery

5-C20

Covers 1993
Horizon pattern

Klädsel

Klädselpåsar 1993
Horisontmönster

1331

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010			TRIM COLOUR J44				
0020	1	43 16 592	210), LH	1	Seat cover	Sitspåse	6
0030	1	43 16 626	210), RH	1	Seat cover	Sitspåse	6
0040	2	43 16 600	210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029	210)	2	Head restraint cover	Nackstödspåse	
0060	4	43 17 947	210), 3CK	1	Seat cover	Sitspåse	6
0070	4	44 13 001	210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0080	5	43 17 954	210)	1	Back cover	Ryggpåse	6
0090	6	43 17 863	210)	1	Arm rest cover	Armstödspåse	6
0100	7	44 13 464	210)	2	Head restraint cover	Nackstödspåse	6
0110			TRIM COLOUR J74				
0120	1	43 16 550	210), LH	1	Seat cover	Sitspåse	6
0130	1	43 16 584	210), RH	1	Seat cover	Sitspåse	6
0140	2	43 16 568	210)	2	Back cover	Ryggpåse	6
0150	3	44 74 029	210)	2	Head restraint cover	Nackstödspåse	
0160	4	44 13 068	210), 3CK	1	Seat cover	Sitspåse	6
0170	4	44 13 308	210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0180	5	43 17 954	210)	1	Back cover	Ryggpåse	6
0190	6	43 17 863	210)	1	Arm rest cover	Armstödspåse	6
0200	7	44 13 464	210)	2	Head restraint cover	Nackstödspåse	6
0210			TRIM COLOUR E44				
0220	1	43 17 160	70), LH	1	Seat cover	Sitspåse	6
0230	1	43 17 186	70), RH	1	Seat cover	Sitspåse	6
0240	2	43 17 178	70)	2	Back cover	Ryggpåse	6
0250	3	44 74 060	70)	2	Head restraint cover	Nackstödspåse	6
0260	4	44 13 142	70), 3CK	1	Seat cover	Sitspåse	6
0270	4	44 13 209	70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0280	5	44 13 092	70)	1	Back cover	Ryggpåse	6
0290	6	43 17 749	70)	1	Arm rest cover	Armstödspåse	6
0300	7	44 13 258	70)	2	Head restraint cover	Nackstödspåse	6
0310			TRIM COLOUR E74				
0320	1	43 16 477	70), LH	1	Seat cover	Sitspåse	6
0330	1	43 16 501	70), RH	1	Seat cover	Sitspåse	6
0340	2	43 16 485	70)	2	Back cover	Ryggpåse	6
0350	3	44 74 060	70)	2	Head restraint cover	Nackstödspåse	6
0360	4	44 13 241	70), 3CK	1	Seat cover	Sitspåse	6
0370	4	44 13 084	70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0380	5	44 13 092	70)	1	Back cover	Ryggpåse	6
0390	6	43 17 749	70)	1	Arm rest cover	Armstödspåse	6
0400	7	44 13 258	70)	2	Head restraint cover	Nackstödspåse	6
0410			TRIM COLOUR F44				
0420	1	43 16 352	80), LH	1	Seat cover	Sitspåse	6
0430	1	43 16 386	80), RH	1	Seat cover	Sitspåse	6
0440	2	43 16 360	80)	2	Back cover	Ryggpåse	6
0450	3	44 74 052	80)	2	Head restraint cover	Nackstödspåse	6
0460	4	43 17 921	80), 3CK	1	Seat cover	Sitspåse	6
0470	4	43 17 962	80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0480	5	43 17 970	80)	1	Back cover	Ryggpåse	6
0490	6	43 17 772	80)	1	Arm rest cover	Armstödspåse	6
0500	7	44 13 274	80)	2	Head restraint cover	Nackstödspåse	6
0510			TRIM COLOUR F74				
0520	1	43 16 634	80), LH	1	Seat cover	Sitspåse	6
0530	1	43 16 667	80), RH	1	Seat cover	Sitspåse	6
0540	2	43 16 642	80)	2	Back cover	Ryggpåse	6
0550	3	44 74 052	80)	2	Head restraint cover	Nackstödspåse	6
0560	4	44 13 027	80), 3CK	1	Seat cover	Sitspåse	6
0570	4	44 13 282	80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0580	5	43 17 970	80)	1	Back cover	Ryggpåse	6
0590	6	43 17 772	80)	1	Arm rest cover	Armstödspåse	6
0600	7	44 13 274	80)	2	Head restraint cover	Nackstödspåse	6


70. Grey Grå
80. Blue Blå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A0.
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

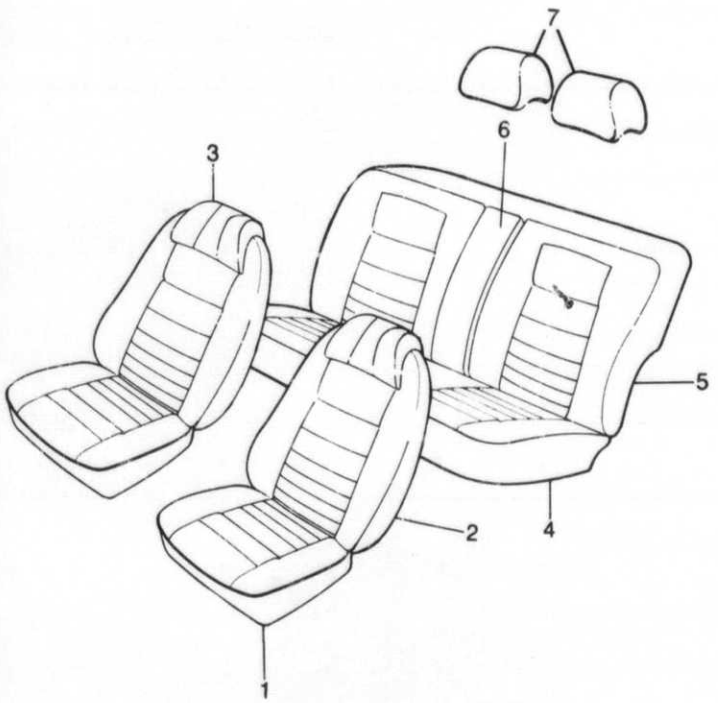

F4549 AAC90

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610				TRIM COLOUR G44				
0620	1	43 16 394		90), LH	1	Seat cover	Sitspåse	6
0630	1	43 16 428		90), RH	1	Seat cover	Sitspåse	6
0640	2	43 16 402		90)	2	Back cover	Ryggpåse	6
0650	3	44 74 045		90)	2	Head restraint cover	Nackstödspåse	
0660	4	44 13 167		90), 3CK	1	Seat cover	Sitspåse	6
0670	4	44 13 225		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0680	5	44 13 050		90)	1	Back cover	Ryggpåse	6
0690	6	43 17 806		90)	1	Arm rest cover	Armstödspåse	6
0700	7	44 13 290		90)	2	Head restraint cover	Nackstödspåse	6
0710				TRIM COLOUR G74				
0720	1	43 16 675		90), LH	1	Seat cover	Sitspåse	6
0730	1	43 16 709		90), RH	1	Seat cover	Sitspåse	6
0740	2	43 16 683		90)	2	Back cover	Ryggpåse	6
0750	3	44 74 045		90)	2	Head restraint cover	Nackstödspåse	
0760	4	44 13 043		90), 3CK	1	Seat cover	Sitspåse	6
0770	4	44 13 100		90), 3CK	1	Seat cover	Sitspåse	6
0780	5	44 13 050		90)	1	Back cover	Ryggpåse	6
0790	6	43 17 806		90)	1	Arm rest cover	Armstödspåse	6
0800	7	44 13 290		90)	2	Head restraint cover	Nackstödspåse	6
0810				TRIM COLOUR H44				
0820	1	43 16 436		100), LH	1	Seat cover	Sitspåse	6
0830	1	43 16 469		100), RH	1	Seat cover	Sitspåse	6
0840	2	43 16 444		100)	2	Back cover	Ryggpåse	6
0850	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	
0860	4	44 13 183		100), 3CK	1	Seat cover	Sitspåse	6
0870	4	43 17 988		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0880	5	43 17 996		100)	1	Back cover	Ryggpåse	6
0890	6	43 17 830		100)	1	Arm rest cover	Armstödspåse	6
0900	7	44 13 316		100)	2	Head restraint cover	Nackstödspåse	6
0910				TRIM COLOUR H74				
0920	1	43 16 519		100), LH	1	Seat cover	Sitspåse	6
0930	1	43 16 543		100), RH	1	Seat cover	Sitspåse	6
0940	2	43 16 527		100)	2	Back cover	Ryggpåse	6
0950	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	
0960	4	44 13 266		100), 3CK	1	Seat cover	Sitspåse	6
0970	4	44 13 126		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
0980	5	43 17 996		100)	1	Back cover	Ryggpåse	6
0990	6	43 17 830		100)	1	Arm rest cover	Armstödspåse	6
1000	7	44 13 316		100)	2	Head restraint cover	Nackstödspåse	6

90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Upholstery

5-C24

Covers 1993- Contour design

Klädsel

Klädselpåsar 1993- Contour design

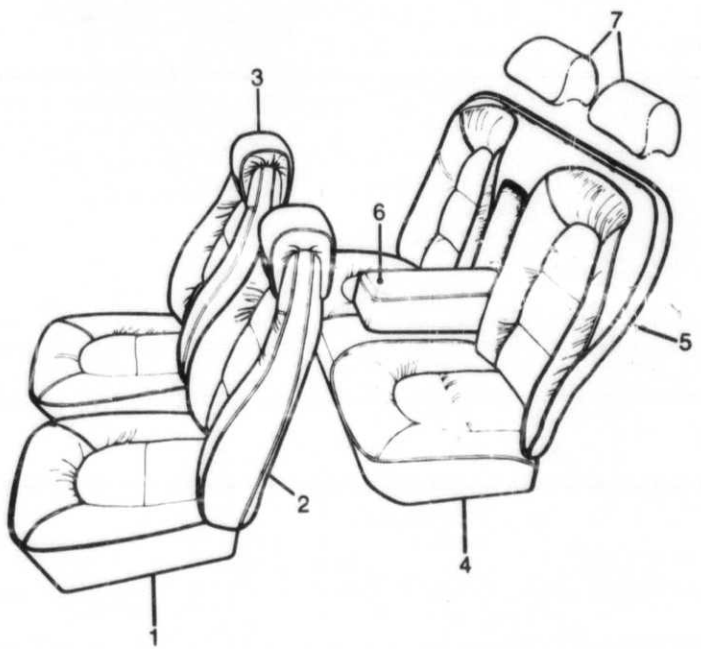

F4550 AAC90

1332	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J33				
0020	1	42 88 692		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 684		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 718		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 136		210)	2	Head restraint cover	Nackstödspåse	6
0060	4	43 08 300		210), 3CK	1	Seat cover	Sitspåse	6
0070	4	41 69 934		210), CV	1	Seat cover	Sitspåse	6
0080	4	43 08 441		210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0090	5	43 08 326		210)	1	Back cover	Ryggpåse	6
0100	5	41 69 942		210), CV	1	Back cover	Ryggpåse	6
0110	6	43 08 342		210)	1	Arm rest cover	Armstödspåse	6
0120	7	43 08 888		210)	2	Head restraint cover	Nackstödspåse	6
0130	7	41 69 991		210), CV	2	Head restraint cover	Nackstödspåse	6
0140				TRIM COLOUR J23				
0150	1	44 16 889		210), LH	1	Seat cover	Sitspåse	6
0160	1	44 16 913		210), RH	1	Seat cover	Sitspåse	6
0170	2	44 16 897		210)	2	Back cover	Ryggpåse	6
0180	3	44 74 078		210)	2	Head restraint cover	Nackstödspåse	6
0190	4	44 16 970		210), 4SN, 5CK	1	Seat cover	Sitspåse	6
0200	5	44 16 988		210)	1	Back cover	Ryggpåse	6
0210	6	44 16 996		210)	2	Arm rest cover	Armstödspåse	6
0220	7	44 17 069		210)	2	Head restraint cover	Nackstödspåse	6
0230				TRIM COLOUR J43				
0240	1	44 13 670		210), LH, CV	1	Seat cover	Sitspåse	6
0250	1	44 13 688		210), RH, CV	1	Seat cover	Sitspåse	6
0260	2	44 13 662		210), CV	2	Back cover	Ryggpåse	6
0270	3	44 74 029		210), CV	2	Head restraint cover	Nackstödspåse	
0280	4	44 13 779		210), CV	1	Seat cover	Sitspåse	6
0290	5	44 13 787		210), CV	1	Back cover	Ryggpåse	6
0300	7	44 13 506		210), CV	2	Head restraint cover	Nackstödspåse	6
0310				TRIM COLOUR E33				
0320	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0330	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0340	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0350	3	44 74 144		70)	2	Head restraint cover	Nackstödspåse	6
0360	4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
0370	4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
0380	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0390	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0400	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0410	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0420	7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
0430	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0440				TRIM COLOUR E23				
0450	1	44 16 848		70), LH	1	Seat cover	Sitspåse	6
0460	1	44 16 871		70), RH	1	Seat cover	Sitspåse	6
0470	2	44 16 855		70)	2	Back cover	Ryggpåse	6
0480	3	44 74 110		70)	2	Head restraint cover	Nackstödspåse	6
0490	4	44 16 947		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0500	5	44 16 954		70)	1	Back cover	Ryggpåse	6
0510	6	44 16 962		70)	1	Arm rest cover	Armstödspåse	6
0520	7	44 17 077		70)	2	Head restraint cover	Nackstödspåse	6
0530								
0540				TRIM COLOUR E43				
0550	1	44 13 522		70), LH, CV	1	Seat cover	Sitspåse	6
0560	1	44 13 530		70), RH, CV	1	Seat cover	Sitspåse	6
0570	2	44 13 514		70), CV	2	Back cover	Ryggpåse	6
0580	3	*44 13 548*		70), CV NLS - USE 4256657	2	Head restraint cover	Nackstödspåse	6
0590								


70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

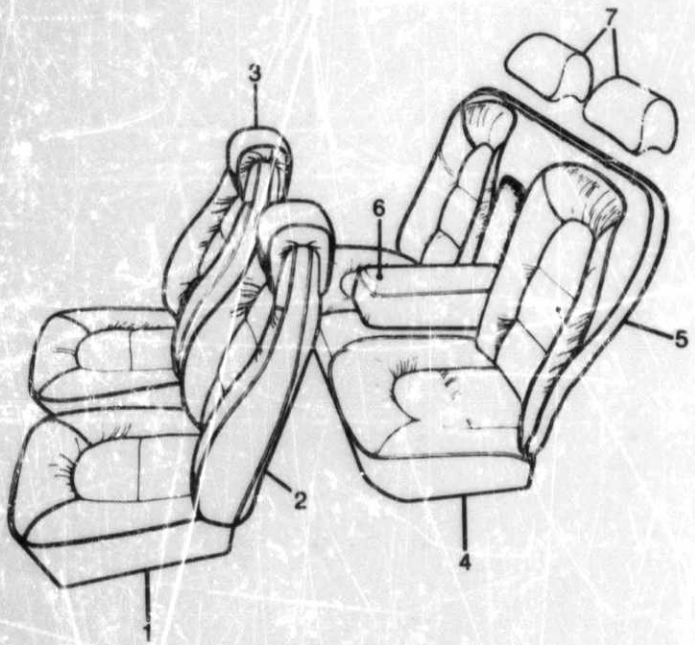

F4550 AAC90

Upholstery

5-D02

Covers 1993- Contour design

Klädsel

Klädselpåsar 1993- Contour design

1332	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				TRIM COLOUR E43				
0590	4	44 13 712		70), CV	1	Seat cover	Sitspåse	6
0600	5	44 13 720		70), CV	1	Back cover	Ryggpåse	6
0610	7	44 13 472		70), CV	2	Head restraint cover	Nackstödspåse	6
0620				TRIM COLOUR E53				
0630	1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
0640	1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
0650	2	41 35 935		70)	2	Back cover	Ryggpåse	6
0660	3	44 74 144		70)	2	Head restraint cover	Nackstödspåse	6
0670	4	98 76 541		70), 3CK	1	Seat cover	Sitspåse	6
0680	4	41 67 771		70), CV	1	Seat cover	Sitspåse	6
0690	4	98 76 558		70), 4SN, 5CK	1	Seat cover	Sitspåse	6
0700	5	98 76 574		70)	1	Back cover	Ryggpåse	6
0710	5	96 46 167		70), CV	1	Back cover	Ryggpåse	6
0720	6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
0730	7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6
0740	7	96 47 462		70), CV	2	Head restraint cover	Nackstödspåse	6
0750				TRIM COLOUR F33				
0760	1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
0770	1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
0780	2	41 35 810		80)	2	Back cover	Ryggpåse	6
0790	3	44 74 169		80)	2	Head restraint cover	Nackstödspåse	6
0800	4	40 40 200		80), 3CK	1	Seat cover	Sitspåse	6
0810	4	40 40 630		80), 4SN, 5CK	1	Seat cover	Sitspåse	6
0820	5	40 40 218		80)	1	Back cover	Ryggpåse	6
0830	6	40 40 226		80)	1	Arm rest cover	Armstödspåse	6
0840	7	40 39 624		80)	2	Head restraint cover	Nackstödspåse	6
0850				TRIM COLOUR G33				
0860	1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
0870	1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
0880	2	41 35 802		90)	2	Back cover	Ryggpåse	6
0890	3	44 74 177		90)	2	Head restraint cover	Nackstödspåse	6
0900	4	95 37 846		90), 3CK	1	Seat cover	Sitspåse	6
0910	4	41 67 789		90), CV	1	Seat cover	Sitspåse	6
0920	4	95 37 838		90), 4SN, 5CK	1	Seat cover	Sitspåse	6
0930	5	95 37 853		90)	1	Back cover	Ryggpåse	6
0940	5	98 24 376		90), CV	1	Back cover	Ryggpåse	6
0950	6	95 37 861		90)	1	Arm rest cover	Armstödspåse	6
0960	7	96 99 554		90), (9585951)	2	Head restraint cover	Nackstödspåse	6
0970	7	96 48 486		90), CV	2	Head restraint cover	Nackstödspåse	6
0980				TRIM COLOUR G38				
0990	1	44 74 771		90), LH, CV	1	Seat cover	Sitspåse	6
1000	1	44 74 789		90), RH, CV	1	Seat cover	Sitspåse	6
1010	2	44 74 797		90), CV	2	Back cover	Ryggpåse	6
1020	3	44 74 177		90), CV	2	Head restraint cover	Nackstödspåse	6
1030	4	44 74 821		90), CV	1	Seat cover	Sitspåse	6
1040	5	44 74 839		90), CV	1	Back cover	Ryggpåse	6
1050	7	96 48 486		90), CV	2	Head restraint cover	Nackstödspåse	6
1060								

70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-D04 Covers 1993- Contour design

Klädsel

Klädselpåsar 1993- Contour design

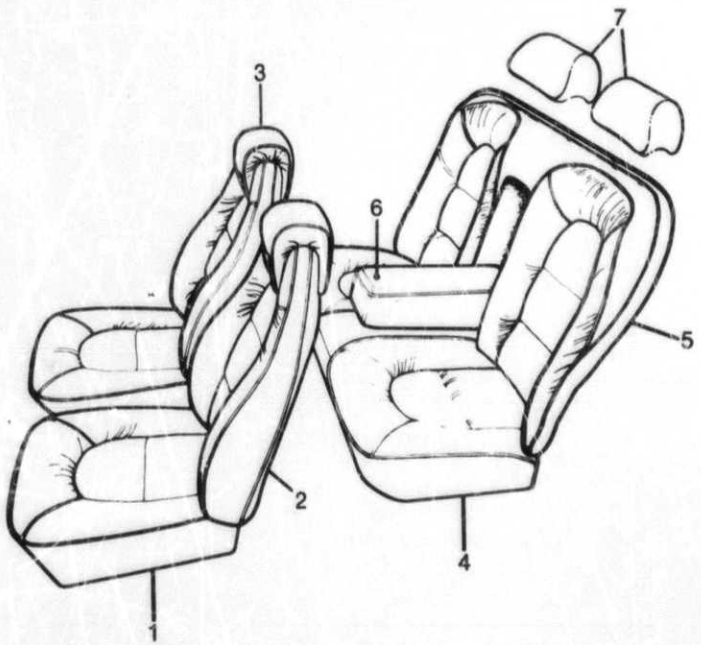

F4550 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR G43				
1	44 13 571		90), LH, CV	1	Seat cover	Sitspåse	6
1	44 13 589		90), RH, CV	1	Seat cover	Sitspåse	6
2	44 13 563		90), CV	2	Back cover	Ryggpåse	6
3	44 74 045		90), CV	2	Head restraint cover	Nackstödspåse	
4	44 13 738		90), CV	1	Seat cover	Sitspåse	6
5	44 13 746		90), CV	1	Back cover	Ryggpåse	6
7	44 13 480		90), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR H33				
1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
4	40 46 611		100), 3CK	1	Seat cover	Sitspåse	6
4	41 68 159		100), CV	1	Seat cover	Sitspåse	6
4	40 48 328		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	40 46 629		100)	1	Back cover	Ryggpåse	6
5	91 61 043		100), CV	1	Back cover	Ryggpåse	6
6	40 46 637		100)	1	Arm rest cover	Armstödspåse	6
7	40 53 609		100)	2	Head restraint cover	Nackstödspåse	6
7	91 61 324		100), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR H43				
1	44 13 621		100), LH, CV	1	Seat cover	Sitspåse	6
1	44 13 639		100), RH, CV	1	Seat cover	Sitspåse	6
2	44 13 613		100), CV	2	Back cover	Ryggpåse	6
3	44 74 037		100), CV	2	Head restraint cover	Nackstödspåse	
4	44 13 753		100), CV	1	Seat cover	Sitspåse	6
5	44 13 761		100), CV	1	Back cover	Ryggpåse	6
7	44 13 498		100), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR H53				
1	42 59 131		100), LH	1	Seat cover	Sitspåse	6
1	42 59 149		100), RH	1	Seat cover	Sitspåse	6
2	42 59 156		100)	2	Back cover	Ryggpåse	6
3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
4	40 46 611		100), 3CK	1	Seat cover	Sitspåse	6
4	41 68 159		100), CV	1	Seat cover	Sitspåse	6
4	40 48 328		100), 4SN, 5CK	1	Seat cover	Sitspåse	6
5	40 46 629		100)	1	Back cover	Ryggpåse	6
5	91 61 043		100), CV	1	Back cover	Ryggpåse	6
6	40 46 637		100)	1	Arm rest cover	Armstödspåse	6
7	40 53 609		100)	2	Head restraint cover	Nackstödspåse	6
7	91 61 324		100), CV	2	Head restraint cover	Nackstödspåse	6
			TRIM COLOUR K63				
1	44 16 624		70), LH	1	Seat cover	Sitspåse	6
1	44 16 657		70), RH	1	Seat cover	Sitspåse	6
2	44 16 632		70)	2	Back cover	Ryggpåse	6
3	44 74 144		70)	2	Head restraint cover	Nackstödspåse	6
4	44 16 665		70), 3CK	1	Seat cover	Sitspåse	6
5	44 16 673		70)	1	Back cover	Ryggpåse	6
6	98 76 582		70)	1	Arm rest cover	Armstödspåse	6
7	96 99 547		70), (9579574)	2	Head restraint cover	Nackstödspåse	6


70. Grey Grå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

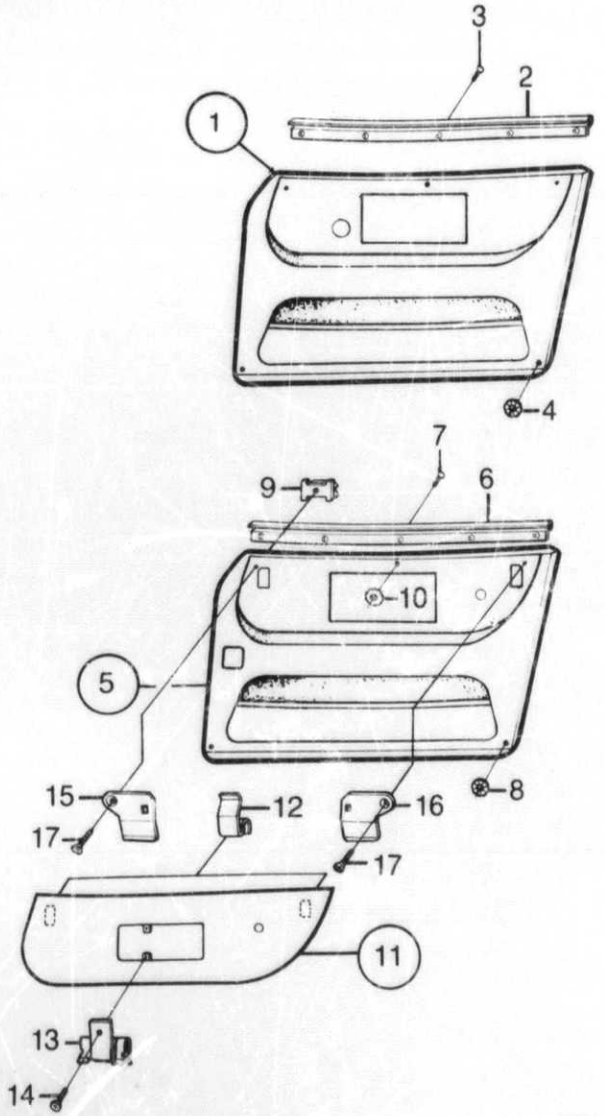

Upholstery

5-D06

Door trim 1990
Front, 2SN, 3CK, CV

Klädsel

Dörrklädsel 1990
Fram, 2SN, 3CK, CV

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 25 019		22), LH	1	Door trim	Dörrklädsel	6
0020	1	41 25 027		22), RH	1	Door trim	Dörrklädsel	6
0030	1	41 25 084		23), LH	1	Door trim	Dörrklädsel	6
0040	1	41 25 100		23), RH	1	Door trim	Dörrklädsel	6
0050	1	41 25 134		24), LH	1	Door trim	Dörrklädsel	6
0060	1	41 25 126		24), RH	1	Door trim	Dörrklädsel	6
0070	1	41 25 050		25), LH	1	Door trim	Dörrklädsel	6
0080	1	41 25 076		25), RH	1	Door trim	Dörrklädsel	6
0090	2	98 31 991		LH	1	.Strip	.List	6
0100	2	98 32 007		RH	1	.Strip	.List	6
0110	3	94 25 232			10	.Screw	.Skruv	5
0120	4	97 04 883		60)	10	Plastic washer	Plastbricka	5
0130	4	98 67 896		110)	10	Plastic washer	Plastbricka	5
0140	4	96 85 132		80)	10	Plastic washer	Plastbricka	5
0150	4	95 34 637		90)	10	Plastic washer	Plastbricka	5
0160								
0170						DOOR TRIM FOR UPHOLSTERY PLATE	DÖRRKLÄDSEL FÖR KLÄDSELPLATTA	
0180								
0190	5	41 25 167		26), LH	1	Door trim	Dörrklädsel	6
0200	5	41 25 175		26), RH	1	Door trim	Dörrklädsel	6
0210	5	*41 28 898*		26), LH, CV	1	Door trim	Dörrklädsel	6
0220	5	41 28 906		26), RH, CV	1	Door trim	Dörrklädsel	6
0230								
0240	5	*41 25 191*		27), LH NLS - USE 4136164	1	Door trim	Dörrklädsel	6
0240								
0250	5	*41 25 241*		27), RH NLS - USE 4136172	1	Door trim	Dörrklädsel	6
0250								
0260	5	*41 28 914*		27), LH, CV	1	Door trim	Dörrklädsel	6
0270	5	*41 28 922*		27), RH, CV	1	Door trim	Dörrklädsel	6
0280								
0290	5	*41 25 266*		28), LH NLS - USE 4136149	1	Door trim	Dörrklädsel	6
0290								
0300	5	*41 25 274*		28), RH NLS - USE 4136156	1	Door trim	Dörrklädsel	6
0300								
0310								
0320	5	*41 25 290*		29), LH NLS - USE 4136123	1	Door trim	Dörrklädsel	6
0320								
0330	5	41 25 308		29), RH	1	Door trim	Dörrklädsel	6
0340	5	*41 28 930*		29), LH, CV	1	Door trim	Dörrklädsel	6
0350	5	*41 28 948*		29), RH, CV	1	Door trim	Dörrklädsel	6
0360								
0370	6	98 31 991		LH	1	.Strip	.List	6
0380	6	98 32 007		RH	1	.Strip	.List	6
0390	7	94 25 232			10	.Screw	.Skruv	5
0400	7	79 72 201		CV	10	.Screw	.Skruv	5
0410	8	97 04 883		60)	4	Plastic washer	Plastbricka	5
0420	8	98 67 896		110)	4	Plastic washer	Plastbricka	5
0430	8	96 85 132		80)	4	Plastic washer	Plastbricka	5
0440	8	95 34 637		90)	4	Plastic washer	Plastbricka	5
0450	9	86 01 916			4	Clip nut	Clipsmutter	3
0460	10	79 16 497			2	Washer	Bricka	5


22. Trim colour C41, red Trim colour C41, röd
23. Trim colour E41, grey Trim colour E41, grå
24. Trim colour F41, blue Trim colour F41, blå
25. Trim colour G41, yellow Trim colour G41, gul
26. Trim colour C41, C44, C33, C43, red Trim colour C41, C44, C33, C43, röd
27. Trim colour E41, E44, E33, H33, grey Trim colour E41, E44, E33, H33, grå
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

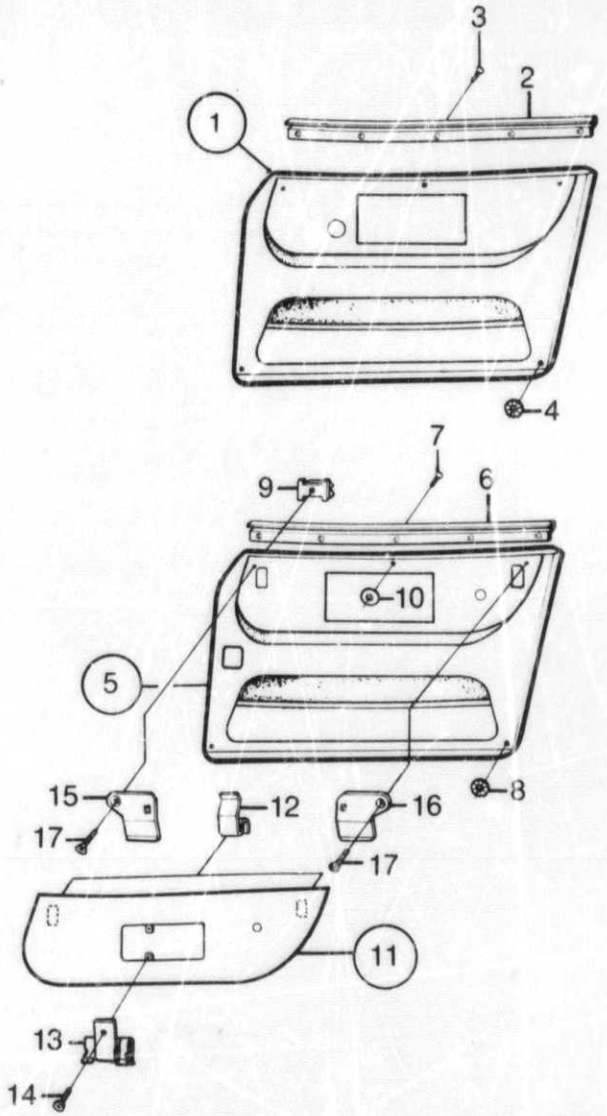

Upholstery

5-D08

Door trim 1990
Front, 2SN, 3CK, CV

Klädsel

Dörrklädsel 1990
Fram, 2SN, 3CK, CV

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470								
0480	11	41 26 694		26), LH	1	Upholstery plate	Klädselplatta	6
0490	11	41 26 702		26), RH	1	Upholstery plate	Klädselplatta	6
0500	11	41 26 546		12,26), LH	1	Upholstery plate	Klädselplatta	6
0510	11	41 26 553		12,26), RH	1	Upholstery plate	Klädselplatta	6
0520								
0530	11	41 26 751		27), LH	1	Upholstery plate	Klädselplatta	6
0540	11	41 26 769		27), RH	1	Upholstery plate	Klädselplatta	6
0550	11	41 26 561		12,27), LH	1	Upholstery plate	Klädselplatta	6
0560	11	41 26 579		12,27), RH	1	Upholstery plate	Klädselplatta	6
0570								
0580	11	41 26 785		28), LH	1	Upholstery plate	Klädselplatta	6
0590	11	41 26 777		28), RH	1	Upholstery plate	Klädselplatta	6
0600	11	41 26 603		12,28), LH	1	Upholstery plate	Klädselplatta	6
0610	11	41 26 611		12,28), RH	1	Upholstery plate	Klädselplatta	6
0620								
0630	11	41 26 835		29), LH	1	Upholstery plate	Klädselplatta	6
0640	11	41 26 843		29), RH	1	Upholstery plate	Klädselplatta	6
0650	11	41 26 660		12,29), LH	1	Upholstery plate	Klädselplatta	6
0660	11	41 26 678		12,29), RH	1	Upholstery plate	Klädselplatta	6
0670								
0680	12	98 12 058			4	.Clamp	.Klämma	5
0690	13	98 30 050			4	.Clamp	.Klämma	5
0700	14	79 22 206			X	Screw	Skruv	5
0710	15	98 12 033		LH	2	Clamp	Klämma	6
0720	16	98 12 041		RH	2	Clamp	Klämma	6
0730	17	79 72 201			10	Screw	Skruv	5


12. For electrical window regulator — För elektrisk fönsterhiss
26. Trim colour C41, C44, C33, C43, red — Trim colour C41, C44, C33, C43, röd
27. Trim colour E41, E44, E33, H33, grey — Trim colour E41, E44, E33, H33, grå
28. Trim colour F41, F44, F74, F33, blue — Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow — Trim colour G41, G44, G74, G33, G38, G43, gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

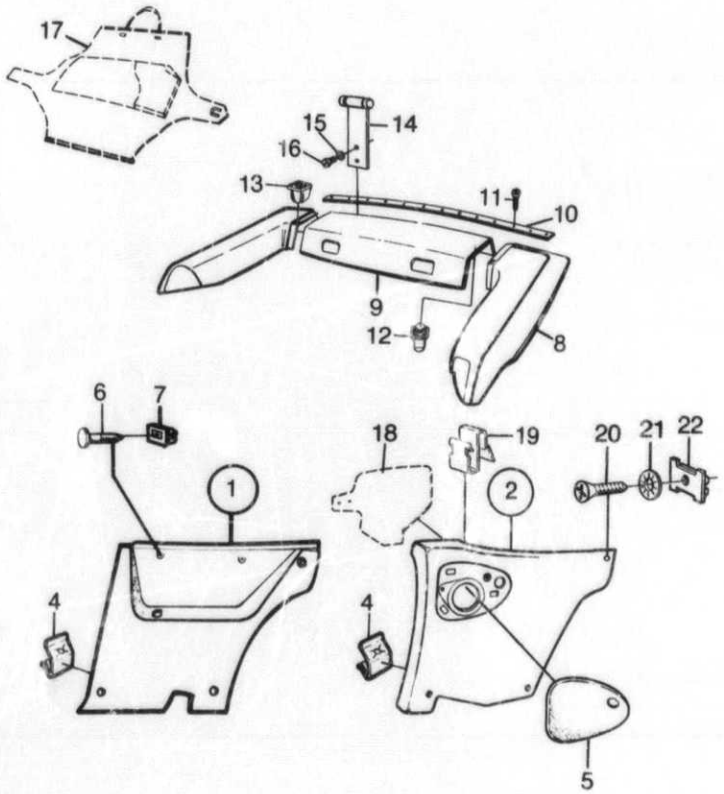

F2849 AAC90

1401	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0011				TRIM COLOUR C41,C44,C33				
0020	1	40 37 826		60), LH	1	Side lining	Sidklädsel	6
0030	1	40 37 834		60), RH	1	Side lining	Sidklädsel	6
0040	2	91 62 777		60,148), LH, CV	1	Side lining	Sidklädsel	6
0045	2	41 67 466		60,149), LH, CV	1	Side lining	Sidklädsel	6
0050	2	91 62 785		60,148), RH, CV	1	Side lining	Sidklädsel	6
0055	2	41 67 474		60,149), RH, CV	1	Side lining	Sidklädsel	6
0111				TRIM COLOUR E41, E44				
0112				E33, H33				
0120	1	40 37 842		70), LH	1	Side lining	Sidklädsel	6
0130	1	40 37 859		70), RH	1	Side lining	Sidklädsel	6
0140	2	*91 62 793*		70,148), LH, CV	1	Side lining	Sidklädsel	6
0145	2	41 67 482		70,149), LH, CV	1	Side lining	Sidklädsel	6
0150	2	91 62 801		70,148), RH, CV	1	Side lining	Sidklädsel	6
0155	2	41 67 490		70,149), RH, CV	1	Side lining	Sidklädsel	6
0211				TRIM COLOUR F41,F44,F33				
0220	1	40 37 867		80), LH	1	Side lining	Sidklädsel	6
0230	1	40 37 875		80), RH	1	Side lining	Sidklädsel	6
0311				TRIM COLOUR G41,G44,G33				
0320	1	40 37 883		90), LH	1	Side lining	Sidklädsel	6
0330	1	40 37 891		90), RH	1	Side lining	Sidklädsel	6
0340	2	*91 62 819*		90,148), LH, CV	1	Side lining	Sidklädsel	6
0345	2	41 67 094		90,149), LH, CV	1	Side lining	Sidklädsel	6
0350	2	*91 62 827*		90,148), RH, CV	1	Side lining	Sidklädsel	6
0360	2	41 67 102		90,149), RH, CV	1	Side lining	Sidklädsel	6
0400	4	94 00 334			X	•Clip	•Clips	3
0410								
0570	5	91 62 892		60), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0590	5	91 62 900		60), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0620	5	91 62 918		70), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0640	5	91 62 926		70), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0670	5	91 62 934		90), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0690	5	91 62 942		90), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0700								
0710	6	97 05 906		60)	X	Special screw	Snabbskruv	5
0720	6	98 67 821		110)	X	Special screw	Snabbskruv	5
0730	6	96 84 549		80)	X	Special screw	Snabbskruv	5
0740	6	95 37 002		90)	X	Special screw	Snabbskruv	5
0750	7	84 52 898			X	Quick nut	Snabbmutter	3
0760								
0770	8	98 24 699		60), LH, CV	1	Top cover	Sufflettkåpa	5
0790	8	98 24 707		60), RH, CV	1	Top cover	Sufflettkåpa	5
0820	8	98 84 586		70), LH, CV	1	Top cover	Sufflettkåpa	5
0840	8	98 84 594		70), RH, CV	1	Top cover	Sufflettkåpa	5
0870	8	98 24 673		90), LH, CV	1	Top cover	Sufflettkåpa	5
0890	8	98 24 681		90), RH, CV	1	Top cover	Sufflettkåpa	5
0920	9	98 24 723		60), CV	1	Top cover	Sufflettkåpa	5
0940	9	98 84 578		70), CV	1	Top cover	Sufflettkåpa	5
0960	9	98 24 715		90), CV	1	Top cover	Sufflettkåpa	5
0980								
0990	10			See page 8A-023, 4-A24	1	Strip	List	
1000	11			See page 8A-023, 4-A24	12	Screw	Skruv	
1010	12	98 83 422		CV	2	Clip	Clips	5
1020	13	98 83 430		CV	2	Clip	Clips	5
1021	14	98 84 107		CV	2	Strip	Band	5
1022	15	84 28 997		CV	4	Washer	Bricka	5


60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
110. Black Svart
148. Ch. --L7023446
149. Ch. L7023447--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

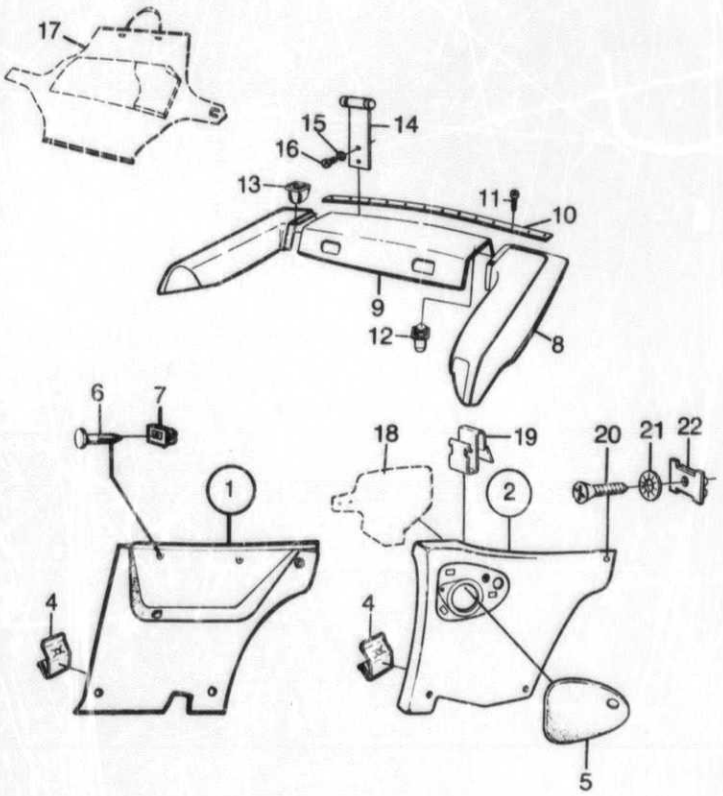

F2849 AAC90

Upholstery

5-D12

Side trim 1990

Rear, 2SN, 3CK, CV

Klädsel

Sidklädsel 1990

Bak, 2SN, 3CK, CV

1401	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1023	16	79 22 206		CV	4	Screw	Skruv	5
1024	17			See page 8B-183, 5-H16		Storage sack	Förvaringspåse	
1030	18			LH, CV	1	Protection	Skydd	
1040				See page 8B-195, 5-I04				
1050	18			RH, CV	1	Protection	Skydd	
1060				See page 8B-195, 5-I04				
1070	19	69 98 850		CV	2	Clip	Clips	5
1080	20	79 72 201		CV	10	Screw	Skruv	5
1090	21	97 11 961		90), CV	10	Plastic washer	Plastbricka	5
1100	21	97 04 883		60), CV	10	Plastic washer	Plastbricka	5
1110	21	98 67 896		110), CV	10	Plastic washer	Plastbricka	5
1120	22	86 01 916		CV	10	Clip nut	Clipsmutter	3


60. Red Röd
90. Yellow Gul
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

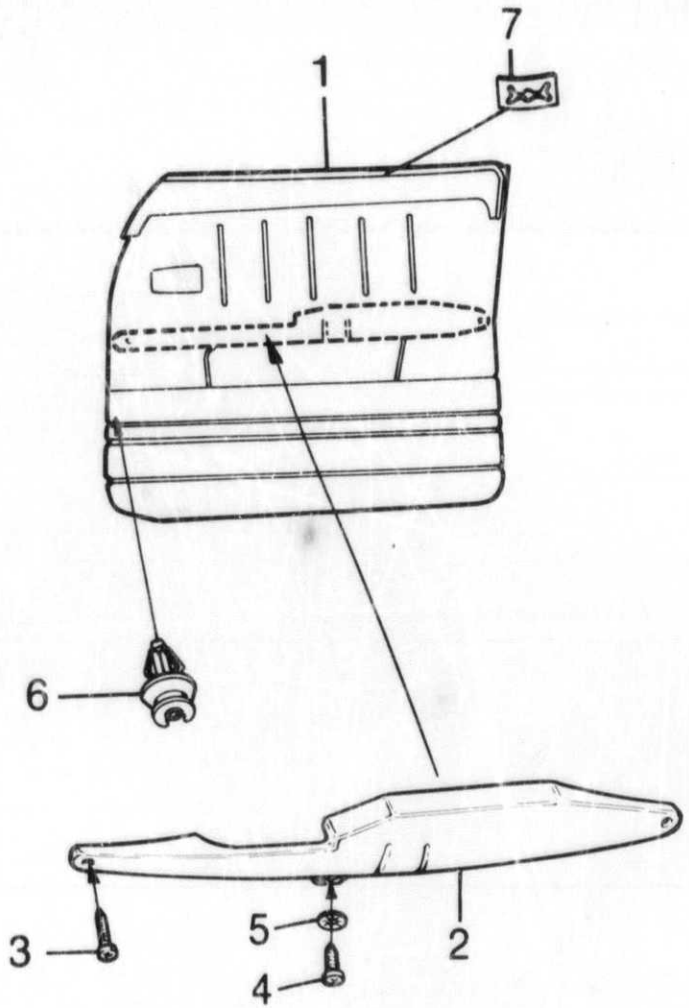

F1234 AAC90

Upholstery

5-D14

Door trim 1990
Front, 4SN, 5CK

Klädsel

Dörrklädsel 1990
Fram, 4SN, 5CK

1402	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C41,C44,C33				
0025	1	41 25 340		60), LH	1	Door trim	Dörrklädsel	6
0030	1	41 25 357		60), RH	1	Door trim	Dörrklädsel	6
0040	1	41 25 902		60,12), LH	1	Door trim	Dörrklädsel	6
0050	1	41 25 910		60,12), RH	1	Door trim	Dörrklädsel	6
0060	2	98 50 967		60), LH	1	Arm rest	Armstöd	6
0070	2	98 50 975		60), RH	1	Arm rest	Armstöd	6
0100				TRIM COLOUR E41, E44				
0101				E33, H33				
0105	1	41 25 662		70), LH	1	Door trim	Dörrklädsel	6
0110	1	41 25 670		70), RH	1	Door trim	Dörrklädsel	6
0120	1	41 25 985		70,12), LH	1	Door trim	Dörrklädsel	6
0130	1	41 25 993		70,12), RH	1	Door trim	Dörrklädsel	6
0140	2	98 68 977		70), LH	1	Arm rest	Armstöd	6
0150	2	98 68 985		70), RH	1	Arm rest	Armstöd	6
0180				TRIM COLOUR F41,F44,F33				
0185	1	41 25 746		80), LH	1	Door trim	Dörrklädsel	6
0190	1	41 25 753		80), RH	1	Door trim	Dörrklädsel	6
0200	1	41 26 066		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	41 26 074		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 481		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 499		80), RH	1	Arm rest	Armstöd	6
0260				TRIM COLOUR G41,G44,G33	1			
0265	1	41 25 829		90), LH	1	Door trim	Dörrklädsel	6
0270	1	41 25 837		90), RH	1	Door trim	Dörrklädsel	6
0280	1	41 26 140		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	41 26 157		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 905		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 913		90), RH	1	Arm rest	Armstöd	6
0320								
0330	3	79 22 396			4	Screw	Skruv	5
0340	4	79 34 797			2	Screw	Skruv	5
0350	5	79 15 564			2	Star washer	Taggbricka	5
0360	6	94 73 869			20	Clip	Clips	5
0370	7	84 88 447			10	Clip	Clips	5


12. For electrical window regulator — För elektrisk fönsterhiss
60. Red — Röd
70. Grey — Grå
80. Blue — Blå
90. Yellow — Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

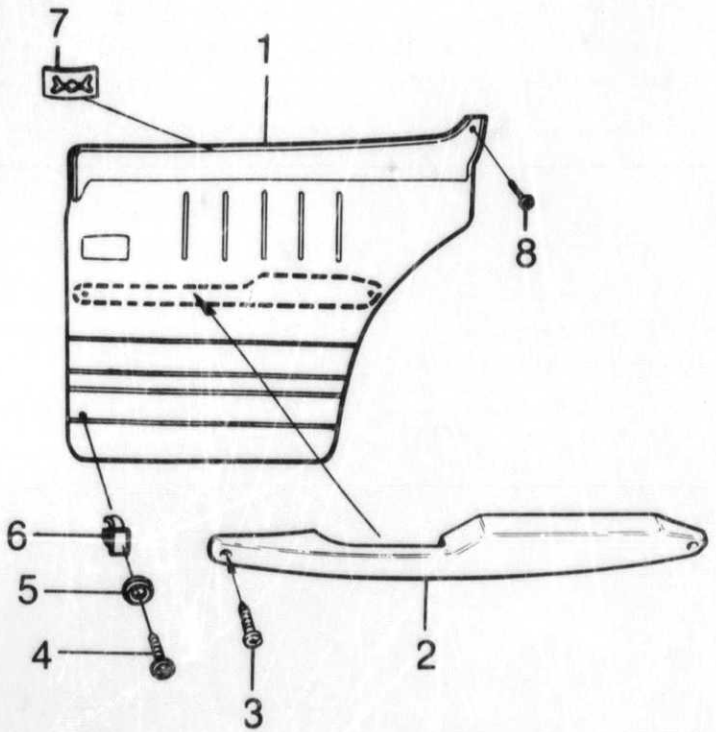

F1235 AAC90

1403	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C41,C44,C33				
0025	1	41 26 868		60), LH	1	Door trim	Dörrklädsel	6
0030	1	41 26 884		60), RH	1	Door trim	Dörrklädsel	6
0040	1	41 27 437		60,12), LH	1	Door trim	Dörrklädsel	6
0050	1	41 27 445		60,12), RH	1	Door trim	Dörrklädsel	6
0060	2	98 50 983		60), LH	1	Arm rest	Armstöd	6
0070	2	98 50 991		60), RH	1	Arm rest	Armstöd	6
0100				TRIM COLOUR E41, E44 E33, H33				
0105	1	41 26 959		70), LH	1	Door trim	Dörrklädsel	6
0110	1	41 26 967		70), RH	1	Door trim	Dörrklädsel	6
0120	1	41 27 353		70,12), LH	1	Door trim	Dörrklädsel	6
0130	1	41 27 361		70,12), RH	1	Door trim	Dörrklädsel	6
0140	2	98 68 993		70), LH	1	Arm rest	Armstöd	6
0150	2	98 69 009		70), RH	1	Arm rest	Armstöd	6
0160				TRIM COLOUR F41,F44,F33				
0185	1	41 27 031		80), LH	1	Door trim	Dörrklädsel	6
0190	1	41 27 049		80), RH	1	Door trim	Dörrklädsel	6
0200	1	41 27 270		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	41 27 288		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 507		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 515		80), RH	1	Arm rest	Armstöd	6
0260				TRIM COLOUR G41,G44,G33				
0265	1	41 27 114		90), LH	1	Door trim	Dörrklädsel	6
0270	1	41 27 122		90), RH	1	Door trim	Dörrklädsel	6
0280	1	41 27 197		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	41 27 205		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 921		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 939		90), RH	1	Arm rest	Armstöd	6
0320								
0330	3	79 22 396			8	Screw	Skruv	5
0340	4	84 10 961			2	Screw	Skruv	5
0350	5	97 04 383		60)	2	Plastic washer	Plastbricka	5
0360	5	98 67 896		110)	2	Plastic washer	Plastbricka	5
0370	5	96 85 132		80)	2	Plastic washer	Plastbricka	5
0380	5	95 34 637		90)	2	Plastic washer	Plastbricka	5
0390	6	86 01 916			6	Clip nut	Clipsmutter	3
0400	7	84 88 447			10	Clip	Clips	5
0410	8	79 77 796			2	Screw	Skruv	5


12. For electrical window regulator — För elektrisk fönsterhiss
60. Red — Röd
70. Grey — Grå
80. Blue — Blå
90. Yellow — Gul
110. Black — Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

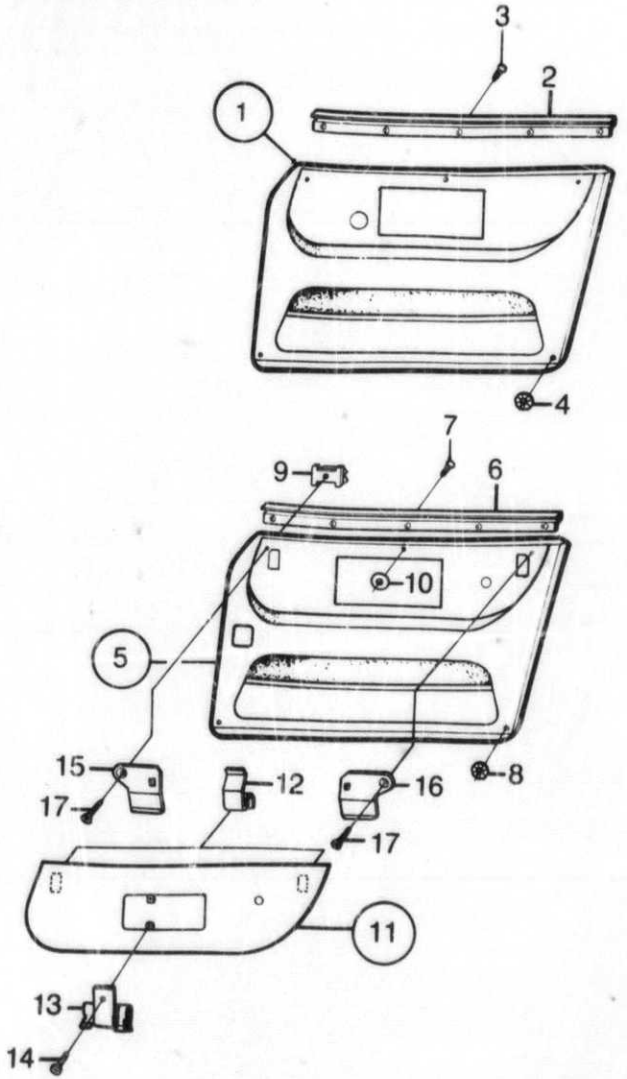

F3084 AAC90

1404	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 25 019		22), LH	1	Door trim	Dörrklädsel	6
0020	1	41 25 027		22), RH	1	Door trim	Dörrklädsel	6
0030	1	41 25 084		23), LH	1	Door trim	Dörrklädsel	6
0040	1	41 25 100		23), RH	1	Door trim	Dörrklädsel	6
0050	1	41 25 134		24), LH	1	Door trim	Dörrklädsel	6
0060	1	41 25 126		24), RH	1	Door trim	Dörrklädsel	6
0070	1	41 25 050		25), LH	1	Door trim	Dörrklädsel	6
0080	1	41 25 076		25), RH	1	Door trim	Dörrklädsel	6
0090	1	41 39 150		127), LH	1	Door trim	Dörrklädsel	6
0100	1	41 39 168		127), RH	1	Door trim	Dörrklädsel	6
0110	2	98 31 991		LH	1	▪Strip	▪List	6
0120	2	98 32 007		RH	1	▪Strip	▪List	6
0130	3	94 25 232			10	▪Screw	▪Skruv	5
0140	4	97 04 883		60)	10	Plastic washer	Plastbricka	5
0150	4	98 67 896		110)	10	Plastic washer	Plastbricka	5
0160	4	96 85 132		80)	10	Plastic washer	Plastbricka	5
0170	4	95 34 637		90)	10	Plastic washer	Plastbricka	5
0175	4	40 56 198		100)	10	Plastic washer	Plastbricka	5
0180								
0190						DOOR TRIM FOR UPHOLSTERY PLATE	DÖRRKLÄDSEL FÖR KLÄDSELPLATTA	
0200								
0210	5	41 25 167		26), LH	1	Door trim	Dörrklädsel	6
0220	5	41 25 175		26), RH	1	Door trim	Dörrklädsel	6
0223	5	41 67 367		26,126), LH	1	Door trim	Dörrklädsel	6
0226	5	41 67 375		26,126), RH	1	Door trim	Dörrklädsel	6
0230	5	41 55 016		26), LH, CV	1	Door trim	Dörrklädsel	6
0240	5	41 55 024		26), RH, CV	1	Door trim	Dörrklädsel	6
0250	5	91 63 296		26,126), LH, CV	1	Door trim	Dörrklädsel	6
0260	5	91 63 304		26,126), RH, CV	1	Door trim	Dörrklädsel	6
0270								
0280	5	*41 25 191*		129), LH NLS - USE 4136164	1	Door trim	Dörrklädsel	6
0290	5	*41 25 241*		129), RH NLS - USE 4136172	1	Door trim	Dörrklädsel	6
0293	5	41 67 383		129,126), LH	1	Door trim	Dörrklädsel	6
0296	5	41 67 391		129,126), RH	1	Door trim	Dörrklädsel	6
0300	5	41 55 032		129), LH, CV	1	Door trim	Dörrklädsel	6
0310	5	*41 55 040*		129), RH, CV	1	Door trim	Dörrklädsel	6
0320	5	*91 63 411*		129,126), LH, CV	1	Door trim	Dörrklädsel	6
0330	5	*91 63 429*		129,126), RH, CV	1	Door trim	Dörrklädsel	6
0340								
0350	5	*41 25 266*		28), LH NLS - USE 4136149	1	Door trim	Dörrklädsel	6
0360	5	*41 25 274*		28), RH NLS - USE 4136156	1	Door trim	Dörrklädsel	6
0363	5	41 68 837		28,126), LH	1	Door trim	Dörrklädsel	6
0366	5	41 68 845		28,126), RH	1	Door trim	Dörrklädsel	6
0370								


22. Trim colour C41, red Trim colour C41, röd
23. Trim colour E41, grey Trim colour E41, grå
24. Trim colour F41, blue Trim colour F41, blå
25. Trim colour G41, yellow Trim colour G41, gul
26. Trim colour C41, C44, C33, C43, red Trim colour C41, C44, C33, C43, röd
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
60. Red Röd
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
127. Trim colour H41, light grey Trim colour H41, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

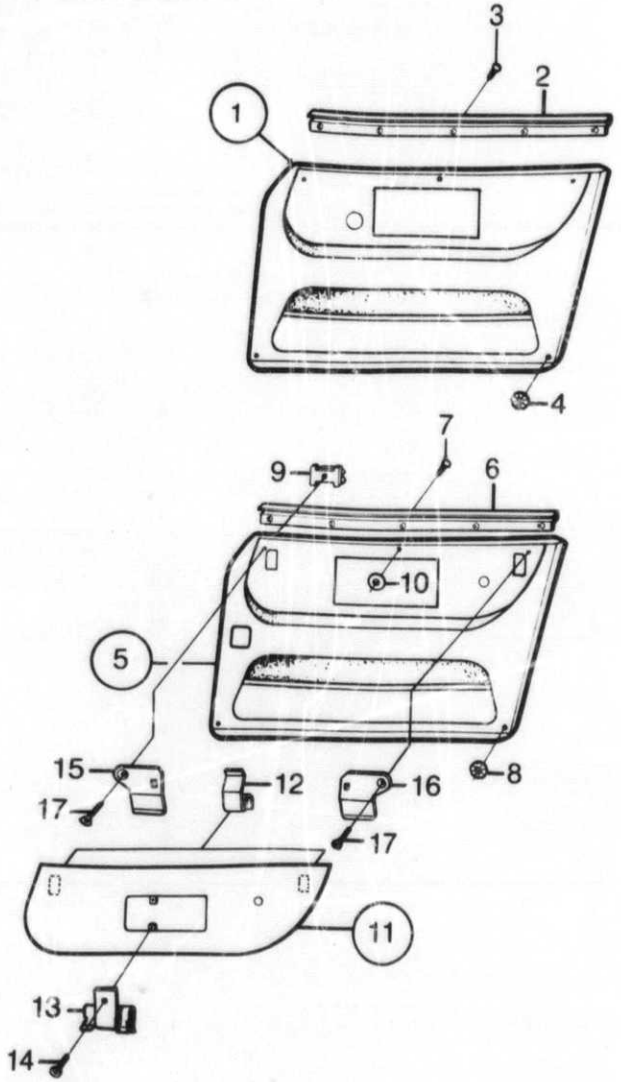

F3084 AAC90

1404	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0380	5	*41 25 290*		29), LH NLS - USE 4136123	1	Door trim	Dörrklädsel	6
0380								
0390	5	41 25 308		29), RH	1	Door trim	Dörrklädsel	6
0393	5	*41 67 805*		29,126), LH	1	Door trim	Dörrklädsel	6
0396	5	*41 67 813*		29,126), RH	1	Door trim	Dörrklädsel	6
0400	5	*41 55 057*		29), LH, CV	1	Door trim	Dörrklädsel	6
0410	5	*41 55 065*		29), RH, CV	1	Door trim	Dörrklädsel	6
0420	5	*91 63 510*		29,126), LH, CV	1	Door trim	Dörrklädsel	6
0430	5	*91 63 528*		29,126), RH, CV	1	Door trim	Dörrklädsel	6
0440								
0450	5	*41 39 010*		128), LH	1	Door trim	Dörrklädsel	6
0460	5	*41 39 028*		128), RH	1	Door trim	Dörrklädsel	6
0463	5	41 67 821		128,126), LH	1	Door trim	Dörrklädsel	6
0466	5	*41 67 839*		128,126), RH	1	Door trim	Dörrklädsel	6
0470	5	*41 55 073*		128), LH, CV	1	Door trim	Dörrklädsel	6
0480	5	*41 55 081*		128), RH, CV	1	Door trim	Dörrklädsel	6
0490	5	*91 63 619*		128,126), LH, CV	1	Door trim	Dörrklädsel	6
0500	5	91 63 627		128,126), RH, CV	1	Door trim	Dörrklädsel	6
0510								
0520	6	98 31 991		LH	1	.Strip	.List	6
0530	6	98 32 007		RH	1	.Strip	.List	6
0540	7	94 25 232			10	.Screw	.Skruv	5
0550	7	79 72 201		CV	10	.Screw	.Skruv	5
0560	8	97 04 883		60)	4	Plastic washer	Plastbricka	5
0570	8	98 67 896		110)	4	Plastic washer	Plastbricka	5
0580	8	96 85 132		80)	4	Plastic washer	Plastbricka	5
0590	8	95 34 637		90)	4	Plastic washer	Plastbricka	5
0595	8	40 56 198		100)	4	Plastic washer	Plastbricka	5
0600	9	86 01 916			X	Clip nut	Clipsmutter	3
0610	10	79 16 497			2	Washer	Bricka	5
0615	10	80 29 985		CV	3	Washer	Bricka	5
0620								
0630	11	41 26 694		26), LH	1	Upholstery plate	Klädselplatta	6
0640	11	41 26 702		26), RH	1	Upholstery plate	Klädselplatta	6
0650	11	41 26 546		12,26), LH	1	Upholstery plate	Klädselplatta	6
0660	11	41 26 553		12,26), RH	1	Upholstery plate	Klädselplatta	6
0670	11	41 67 227		12,26,126), LH	1	Upholstery plate	Klädselplatta	6
0680	11	41 67 235		12,26,126), RH	1	Upholstery plate	Klädselplatta	6
0690								
0700	11	41 26 751		129), LH	1	Upholstery plate	Klädselplatta	6
0710	11	41 26 769		129), RH	1	Upholstery plate	Klädselplatta	6
0720	11	41 26 561		12,129), LH	1	Upholstery plate	Klädselplatta	6
0730	11	41 26 579		12,129), RH	1	Upholstery plate	Klädselplatta	6
0740	11	41 67 243		12,129,126), LH	1	Upholstery plate	Klädselplatta	6
0750	11	41 67 250		12,129,126), RH	1	Upholstery plate	Klädselplatta	6
0760								
0770	11	41 26 785		28), LH	1	Upholstery plate	Klädselplatta	6
0780	11	41 26 777		28), RH	1	Upholstery plate	Klädselplatta	6
0790	11	41 26 603		12,28), LH	1	Upholstery plate	Klädselplatta	6
0800	11	41 26 611		12,28), RH	1	Upholstery plate	Klädselplatta	6

12. For electrical window regulator För elektrisk fönsterhiss
26. Trim colour C41, C44, C33, C43, red Trim colour C41, C44, C33, C43, röd
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
60. Red Röd
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-D22

Door trim 1991
Front, 3CK, CV

Dörrklädsel 1991
Fram, 3CK, CV

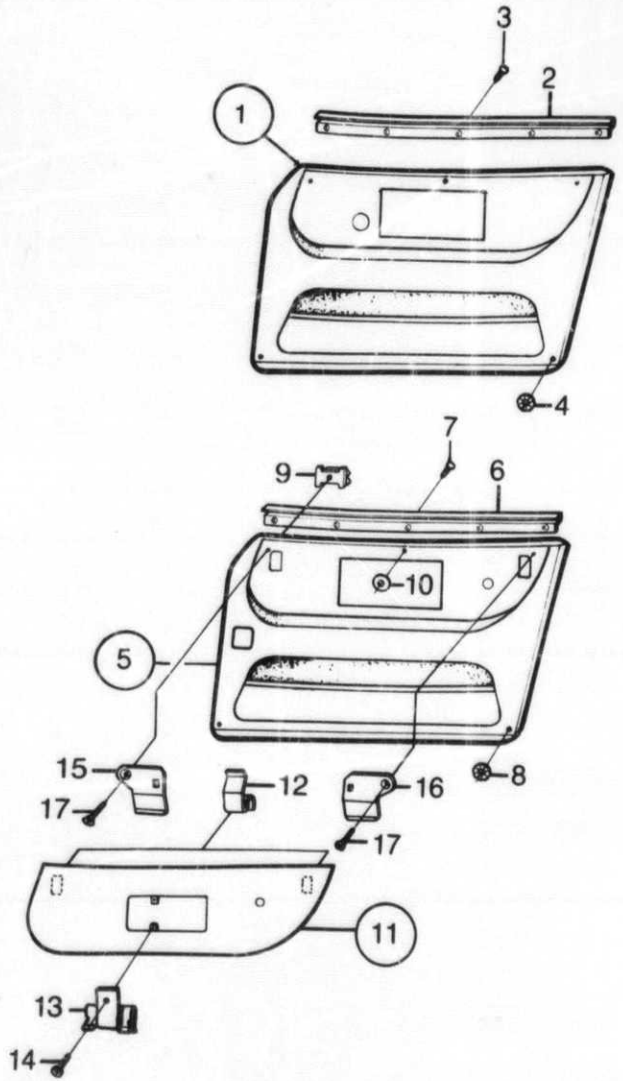

F3084 AAC90

1404	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0803	11	41 69 694		12,28,126), LH	1	Upholstery plate	Klädselplatta	6
0806	11	41 69 702		12,28,126), RH	1	Upholstery plate	Klädselplatta	6
0810								
0820	11	41 26 835		29), LH	1	Upholstery plate	Klädselplatta	6
0830	11	41 26 843		29), RH	1	Upholstery plate	Klädselplatta	6
0840	11	41 26 660		12,29), LH	1	Upholstery plate	Klädselplatta	6
0850	11	41 26 678		12,29), RH	1	Upholstery plate	Klädselplatta	6
0860	11	41 67 268		12,29,126), LH	1	Upholstery plate	Klädselplatta	6
0870	11	41 67 276		12,29,126), RH	1	Upholstery plate	Klädselplatta	6
0880								
0890	11	41 38 814		128), LH	1	Upholstery plate	Klädselplatta	6
0900	11	41 38 806		128), RH	1	Upholstery plate	Klädselplatta	6
0910	11	41 38 855		12,128), LH	1	Upholstery plate	Klädselplatta	6
0920	11	41 38 848		12,128), RH	1	Upholstery plate	Klädselplatta	6
0930	11	41 67 284		12,128,126), LH	1	Upholstery plate	Klädselplatta	6
0940	11	41 67 292		12,128,126), RH	1	Upholstery plate	Klädselplatta	6
0950								
0960	12	98 12 058			4	▪Clamp	▪Klämma	5
0970	13	98 30 050			4	▪Clamp	▪Klämma	5
0980	14	79 22 206			X	Screw	Skruv	5
0990	15	98 12 033		LH	2	Clamp	Klämma	6
1000	16	98 12 041		RH	2	Clamp	Klämma	6
1010	17	79 72 201			10	Screw	Skruv	5


12. For electrical window regulator För elektrisk fönsterhiss
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

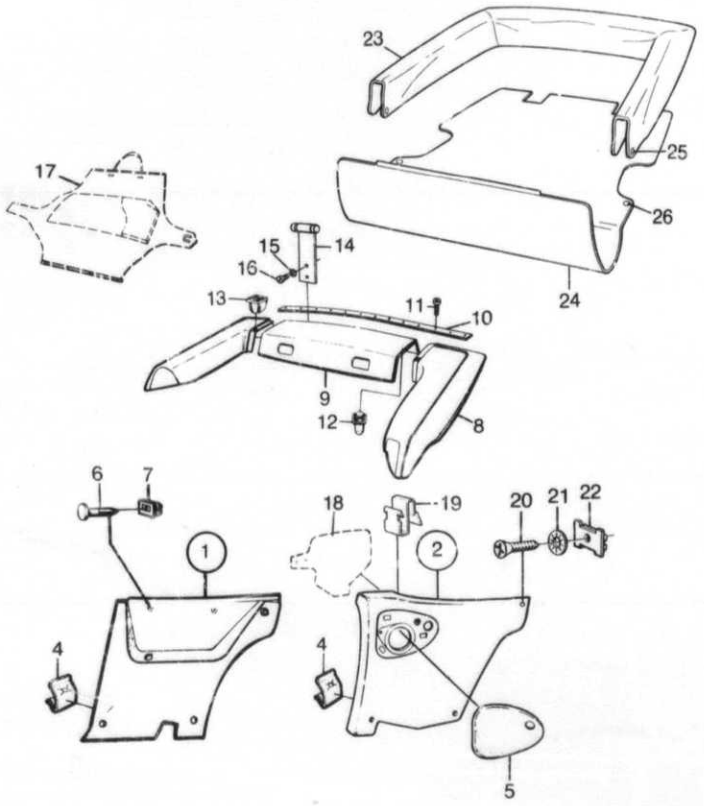

F3761 - AAC90

1405	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41, C44,				
0020				C33, C43				
0030	1	40 37 826		60), LH	1	Side lining	Sidklädsel	6
0040	1	40 37 834		60), RH	1	Side lining	Sidklädsel	6
0050	2	41 67 466		60), LH, CV	1	Side lining	Sidklädsel	6
0060	2	41 67 474		60), RH, CV	1	Side lining	Sidklädsel	6
0070				TRIM COLOUR E41, E44,				
0080				E33, E43, E53				
0090	1	40 37 842		70), LH	1	Side lining	Sidklädsel	6
0100	1	40 37 859		70), RH	1	Side lining	Sidklädsel	6
0110	2	41 67 482		70), LH, CV	1	Side lining	Sidklädsel	6
0120	2	41 67 490		70), RH, CV	1	Side lining	Sidklädsel	6
0130				TRIM COLOUR F41,F44,F33				
0140	1	40 37 867		80), LH	1	Side lining	Sidklädsel	6
0150	1	40 37 875		80), RH	1	Side lining	Sidklädsel	6
0160				TRIM COLOUR G41, G44,				
0170				G33, G43				
0180	1	40 37 883		90), LH	1	Side lining	Sidklädsel	6
0190	1	40 37 891		90), RH	1	Side lining	Sidklädsel	6
0200	2	41 67 094		90), LH, CV	1	Side lining	Sidklädsel	6
0210	2	41 67 102		90), RH, CV	1	Side lining	Sidklädsel	6
0220				TRIM COLOUR H41, H44,				
0230				H33, H43, H53				
0240	1	41 37 337		100), LH	1	Side lining	Sidklädsel	6
0250	1	41 37 329		100), RH	1	Side lining	Sidklädsel	6
0260	2	41 67 508		100), LH, CV	1	Side lining	Sidklädsel	6
0270	2	41 67 516		100), RH, CV	1	Side lining	Sidklädsel	6
0280	4	94 00 334			X	•Clip	•Clips	3
0290								
0300	5	91 62 892		60), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0310	5	91 62 900		60), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0320	5	91 62 918		70), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0330	5	91 62 926		70), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0340	5	91 62 934		90), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0350	5	91 62 942		90), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0360	5	41 66 385		100), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0370	5	41 66 393		100), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0380								
0390	6	97 05 906		60)	X	Special screw	Snabbskruv	5
0400	6	98 67 821		110)	X	Special screw	Snabbskruv	5
0410	6	96 84 549		80)	X	Special screw	Snabbskruv	5
0420	6	95 37 002		90)	X	Special screw	Snabbskruv	5
0430	6	41 37 345		100)	X	Special screw	Snabbskruv	5
0440	7	84 52 898			X	Quick nut	Snabbmutter	3
0450								
0460	8	98 24 699		60), LH, CV	1	Top cover	Sufflettkåpa	5
0470	8	98 24 707		60), RH, CV	1	Top cover	Sufflettkåpa	5
0480	8	98 84 586		70), LH, CV	1	Top cover	Sufflettkåpa	5
0490	8	98 84 594		70), RH, CV	1	Top cover	Sufflettkåpa	5
0500	8	98 24 673		90), LH, CV	1	Top cover	Sufflettkåpa	5
0510	8	98 24 681		90), RH, CV	1	Top cover	Sufflettkåpa	5
0520	9	98 24 723		60), CV	1	Top cover	Sufflettkåpa	5
0530	9	98 84 578		70), CV	1	Top cover	Sufflettkåpa	5
0540	9	98 24 715		90), CV	1	Top cover	Sufflettkåpa	5
0550								
0560	10			See page 8A-023, 4-A24	1	Strip	List	
0570	11			See page 8A-023, 4-A24	12	Screw	Skruv	

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-H12

5-E02

Side trim 1991
Rear, 3CK, CV

Sidklädsel 1991
Bak, 3CK, CV

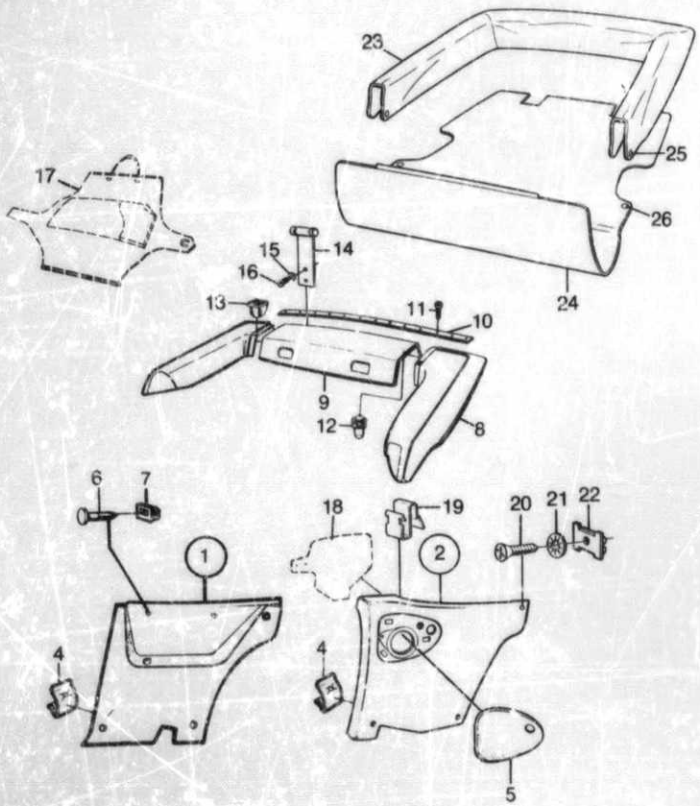

F3761 - AAC90

1405	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	12	98 83 422		CV	2	Clip	Clips	5
0590	13	98 83 430		CV	2	Clip	Clips	5
0600	14	98 84 107		CV	2	Strip	Band	5
0610	15	84 28 997		CV	4	Washer	Bricka	5
0620	16	79 22 206		CV	4	Screw	Skruv	5
0630	17			See page 8B-183, 5-H16		Storage sack	Förvaringspåse	
0640	18			LH, CV	1	Protection	Skydd	
0650				See page 8B-195, 5-I04				
0660	18			RH, CV	1	Protection	Skydd	
0670				See page 8B-195, 5-I04				
0680	19	69 98 850		CV	2	Clip	Clips	5
0690	20	79 72 201		CV	10	Screw	Skruv	5
0700	21	97 11 961		90), CV	10	Plastic washer	Plastbricka	5
0710	21	97 04 883		60), CV	10	Plastic washer	Plastbricka	5
0720	21	98 67 896		110), CV	10	Plastic washer	Plastbricka	5
0730	21	40 56 198		100), CV	10	Plastic washer	Plastbricka	5
0740	22	86 01 916		CV	10	Clip nut	Clipsmutter	3
0750	23	41 70 320		CV	1	Top cover protection	Suflattskydd	5
0760	24	41 70 304		CV	1	Wind cover	Vindskydd	5
0770	25	41 70 338		CV	1	Mounting kit	Monteringssats	5
0780				See page 8B-203, 5-I12				
0790	26	41 70 312		CV	1	Mounting kit	Monteringssats	5
0800				See page 8B-203, 5-I12				


60. Red Röd
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

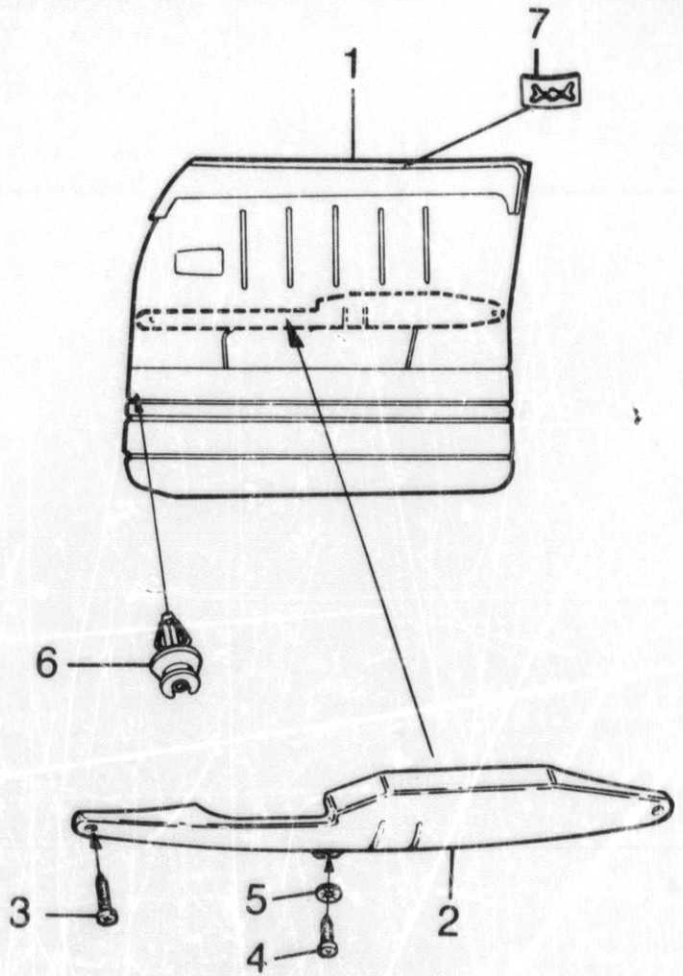

F3086 AAC90

Upholstery

5-E04

Door trim 1991
Front, 4SN, 5CK

Klädsel

Dörrklädsel 1991
Fram, 4SN, 5CK

1406	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41, C44,				
0020				C33, C43				
0030	1	41 25 340		60), LH	1	Door trim	Dörrklädsel	6
0040	1	41 25 357		60), RH	1	Door trim	Dörrklädsel	6
0050	1	41 25 902		60,12), LH	1	Door trim	Dörrklädsel	6
0060	1	41 25 910		60,12), RH	1	Door trim	Dörrklädsel	6
0070	2	98 50 967		60), LH	1	Arm rest	Armstöd	6
0080	2	98 50 975		60), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41, E44,				
0100				E33, E43, E53				
0110	1	41 25 662		70), LH	1	Door trim	Dörrklädsel	6
0120	1	41 25 670		70), RH	1	Door trim	Dörrklädsel	6
0130	1	41 25 985		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	41 25 993		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 977		70), LH	1	Arm rest	Armstöd	6
0160	2	98 68 985		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F33				
0180	1	41 25 746		80), LH	1	Door trim	Dörrklädsel	6
0190	1	41 25 753		80), RH	1	Door trim	Dörrklädsel	6
0200	1	41 26 066		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	41 26 074		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 481		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 499		80), RH	1	Arm rest	Armstöd	6
0240				TRIM COLOUR G41, G44,				
0250				G33, G43				
0260	1	41 25 829		90), LH	1	Door trim	Dörrklädsel	6
0270	1	41 25 837		90), RH	1	Door trim	Dörrklädsel	6
0280	1	41 26 140		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	41 26 157		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 905		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 913		90), RH	1	Arm rest	Armstöd	6
0320				TRIM COLOUR H41, H44,				
0330				H33, H43, H53				
0340	1	41 55 677		100), LH	1	Door trim	Dörrklädsel	6
0350	1	41 55 685		100), RH	1	Door trim	Dörrklädsel	6
0360	1	41 55 735		100,12), LH	1	Door trim	Dörrklädsel	6
0370	1	41 55 776		100,12), RH	1	Door trim	Dörrklädsel	6
0380	2	41 37 295		100), LH	1	Arm rest	Armstöd	6
0390	2	41 37 287		100), RH	1	Arm rest	Armstöd	6
0400								
0410	3	79 22 396			4	Screw	Skruv	5
0420	4	79 34 797			2	Screw	Skruv	5
0430	5	79 15 564			2	Star washer	Taggbricka	5
0440	6	94 73 869			20	Clip	Clips	5
0450	7	84 88 447			10	Clip	Clips	5


12. For electrical window regulator För elektrisk fönsterhiss
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

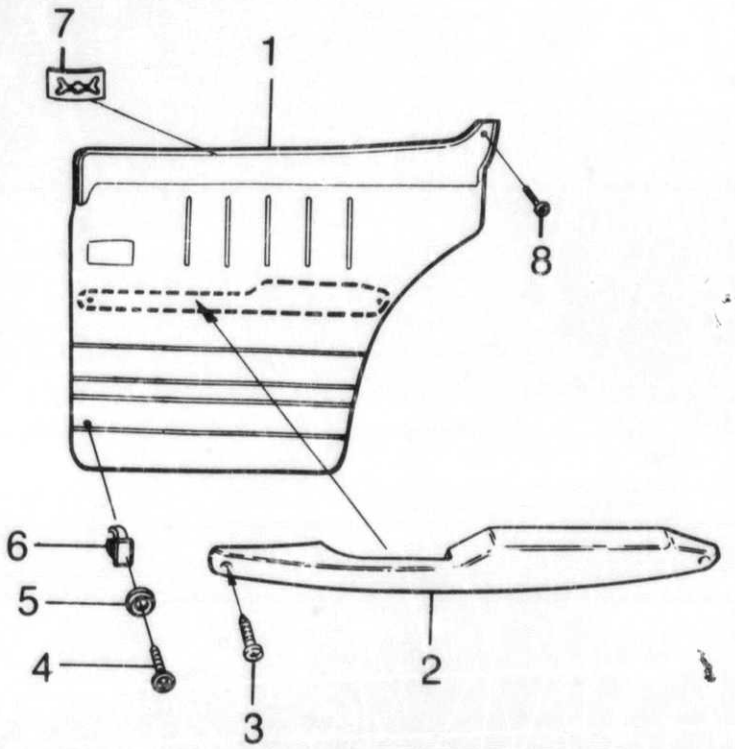

F3087 AAC90

Upholstery
5-E06
Door trim 1991
Rear, 4SN, 5CK

Klädsel
Dörrklädsel 1991
Bak, 4SN, 5CK

1407	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41, C44,				
0020				C33, C43				
0030	1	41 26 868		60), LH	1	Door trim	Dörrklädsel	6
0040	1	41 26 884		60), RH	1	Door trim	Dörrklädsel	6
0050	1	41 27 437		60,12), LH	1	Door trim	Dörrklädsel	6
0060	1	41 27 445		60,12), RH	1	Door trim	Dörrklädsel	6
0070	2	98 50 983		60), LH	1	Arm rest	Armstöd	6
0080	2	98 50 991		60), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41, E44,				
0100				E33, E43, E53				
0110	1	41 26 959		70), LH	1	Door trim	Dörrklädsel	6
0120	1	41 26 967		70), RH	1	Door trim	Dörrklädsel	6
0130	1	41 27 353		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	41 27 361		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 993		70), LH	1	Arm rest	Armstöd	6
0160	2	98 69 009		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F33				
0180	1	41 27 031		80), LH	1	Door trim	Dörrklädsel	6
0190	1	41 27 049		80), RH	1	Door trim	Dörrklädsel	6
0200	1	41 27 270		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	41 27 288		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 507		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 515		80), RH	1	Arm rest	Armstöd	6
0240				TRIM COLOUR G41, G44				
0250				G33, G43				
0260	1	41 27 114		90), LH	1	Door trim	Dörrklädsel	6
0270	1	41 27 122		90), RH	1	Door trim	Dörrklädsel	6
0280	1	41 27 197		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	41 27 205		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 921		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 939		90), RH	1	Arm rest	Armstöd	6
0320				TRIM COLOUR H41, H44,				
0330				H33, H43, H53				
0340	1	41 66 294		100), LH	1	Door trim	Dörrklädsel	6
0350	1	41 66 302		100), RH	1	Door trim	Dörrklädsel	6
0360	1	41 66 211		100,12), LH	1	Door trim	Dörrklädsel	6
0370	1	41 66 203		100,12), RH	1	Door trim	Dörrklädsel	6
0380	2	41 37 378		100), LH	1	Arm rest	Armstöd	6
0390	2	41 37 386		100), RH	1	Arm rest	Armstöd	6
0400								
0410	3	79 22 396			8	Screw	Skruv	5
0420	4	79 70 320			2	Screw	Skruv	5
0430	5	97 04 883		60)	2	Plastic washer	Plastbricka	5
0440	5	98 67 896		110)	2	Plastic washer	Plastbricka	5
0450	5	96 85 132		80)	2	Plastic washer	Plastbricka	5
0460	5	95 34 637		90)	2	Plastic washer	Plastbricka	5
0470	5	40 56 198		100)	2	Plastic washer	Plastbricka	5
0480	6	86 01 916			6	Clip nut	Clipsmutter	3
0490	7	84 88 447			10	Clip	Clips	5
0500	8	79 77 796			2	Screw	Skruv	5


12. For electrical window regulator — För elektrisk fönsterhiss
60. Red — Röd
70. Grey — Grå
80. Blue — Blå
90. Yellow — Gul
100. Light grey — Ljus grå
110. Black — Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

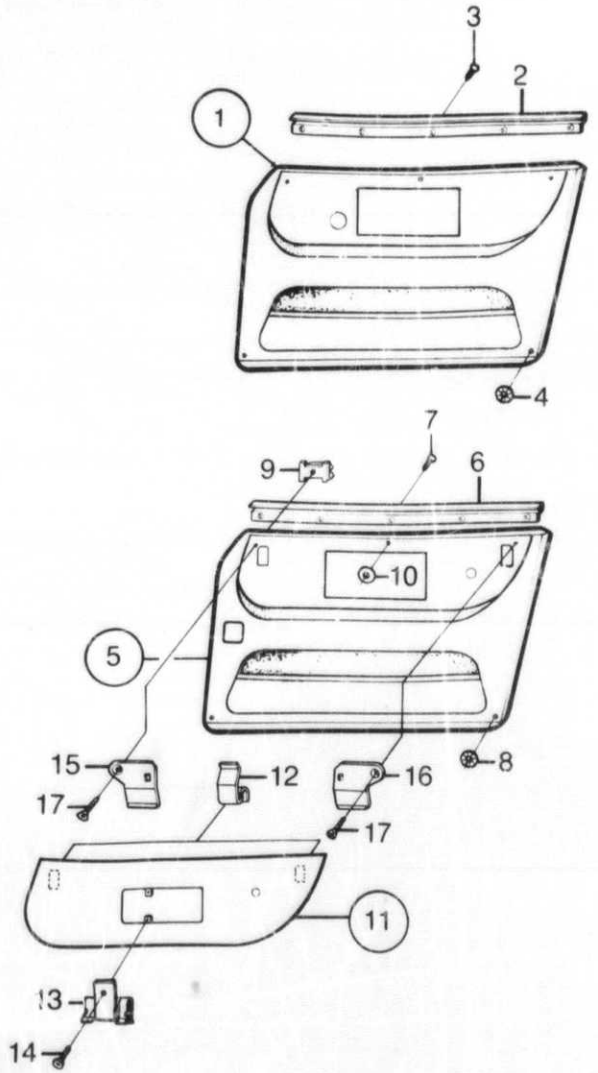

F3762 - AAC90

Upholstery

5-E08

Door trim 1992
Front, 3CK, CV

Klädsel

Dörrklädsel 1992
Fram, 3CK, CV

1408	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 62 713		192), LH	1	Door trim	Dörrklädsel	6
0020	1	42 62 705		192), RH	1	Door trim	Dörrklädsel	6
0030	1	41 36 065		23), LH	1	Door trim	Dörrklädsel	6
0040	1	41 36 073		23), RH	1	Door trim	Dörrklädsel	6
0050	1	41 36 024		24), LH	1	Door trim	Dörrklädsel	6
0060	1	41 36 032		24), RH	1	Door trim	Dörrklädsel	6
0070	1	41 36 081		25), LH	1	Door trim	Dörrklädsel	6
0080	1	41 36 099		25), RH	1	Door trim	Dörrklädsel	6
0090	1	41 37 246		127), LH	1	Door trim	Dörrklädsel	6
0100	1	41 36 578		127), RH	1	Door trim	Dörrklädsel	6
0110	2	98 31 991		LH	1	. Strip	. List	6
0120	2	98 32 007		RH	1	. Strip	. List	6
0130	3	94 25 232			10	. Screw	. Skruv	5
0140	4	42 62 887		210)	10	Plastic washer	Plastbricka	5
0150	4	98 67 896		110)	10	Plastic washer	Plastbricka	5
0160	4	96 85 132		80)	10	Plastic washer	Plastbricka	5
0170	4	95 34 637		90)	10	Plastic washer	Plastbricka	5
0175	4	40 56 198		100)	10	Plastic washer	Plastbricka	5
0180								
0190						DOOR TRIM FOR UPHOLSTERY PLATE	DÖRRKLÄDSEL FÖR KLÄDSELPLATTA	
0200								
0210	5	42 62 739		191), LH	1	Door trim	Dörrklädsel	6
0220	5	42 62 721		191), RH	1	Door trim	Dörrklädsel	6
0223	5	42 65 617		191,126), LH	1	Door trim	Dörrklädsel	6
0226	5	42 65 625		191,126), RH	1	Door trim	Dörrklädsel	6
0230	5	41 69 181		191), LH, CV	1	Door trim	Dörrklädsel	6
0240	5	41 69 199		191), RH, CV	1	Door trim	Dörrklädsel	6
0250	5	41 69 553		191,126), LH, CV	1	Door trim	Dörrklädsel	6
0260	5	41 69 561		191,126), RH, CV	1	Door trim	Dörrklädsel	6
0270								
0280	5	41 36 164		129), LH	1	Door trim	Dörrklädsel	6
0290	5	41 36 172		129), RH	1	Door trim	Dörrklädsel	6
0293	5	42 65 690		129,126), LH	1	Door trim	Dörrklädsel	6
0296	5	42 65 708		129,126), RH	1	Door trim	Dörrklädsel	6
0300	5	41 69 371		129), LH, CV	1	Door trim	Dörrklädsel	6
0310	5	41 69 389		129), RH, CV	1	Door trim	Dörrklädsel	6
0320	5	41 69 595		129,126), LH, CV	1	Door trim	Dörrklädsel	6
0330	5	41 69 603		129,126), RH, CV	1	Door trim	Dörrklädsel	6
0340								
0350	5	41 36 149		28), LH	1	Door trim	Dörrklädsel	6
0360	5	41 36 156		28), RH	1	Door trim	Dörrklädsel	6
0363	5	42 65 658		28,126), LH	1	Door trim	Dörrklädsel	6
0366	5	42 65 666		28,126), RH	1	Door trim	Dörrklädsel	6
0370								
0380	5	41 36 123		29), LH	1	Door trim	Dörrklädsel	6
0390	5	41 36 131		29), RH	1	Door trim	Dörrklädsel	6
0393	5	42 65 674		29,126), LH	1	Door trim	Dörrklädsel	6


23. Trim colour E41, grey Trim colour E41, grå
24. Trim colour F41, blue Trim colour F41, blå
25. Trim colour G41, yellow Trim colour G41, gul
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
127. Trim colour H41, light grey Trim colour H41, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå
191. Trim colour J41, J44, J74, J33, J23, J43, ljus beige Trim colour J41, J44, J74, J33, J23, J43, light beige
192. Trim colour J41, light beige Trim colour J41, ljus beige
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

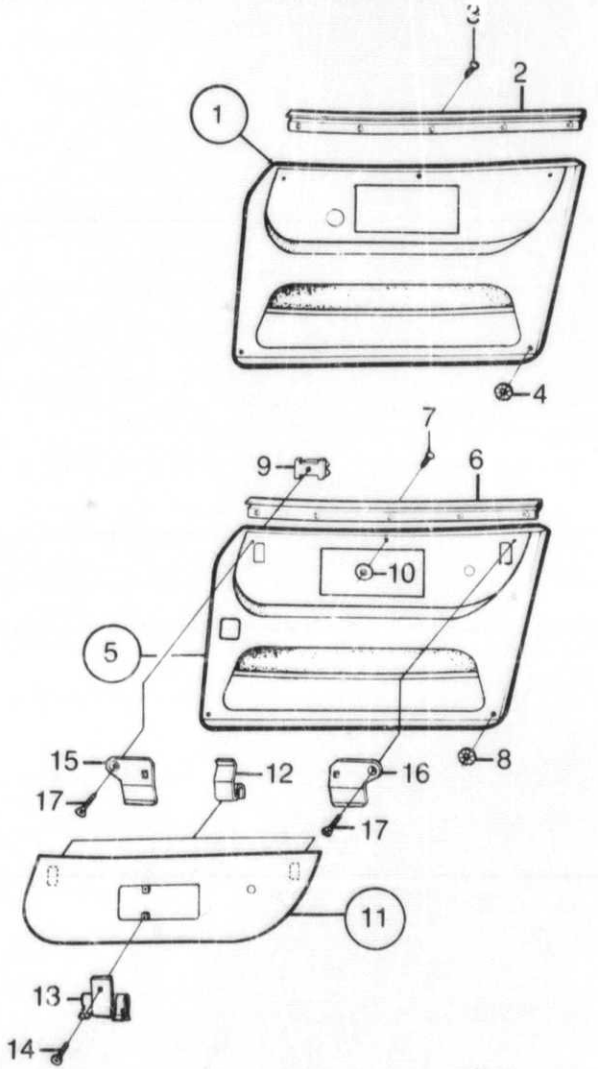

F3762 - AAC90

Upholstery
5-E10
Door trim 1992
Front, 3CK, CV

Klädsel
Dörrklädsel 1992
Fram, 3CK, CV

1408	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0396	5	42 65 682		29,126), RH	1	Door trim	Dörrklädsel	6
0400	5	41 69 421		29), LH, CV	1	Door trim	Dörrklädsel	6
0410	5	41 69 439		29), RH, CV	1	Door trim	Dörrklädsel	6
0420	5	41 69 611		29,126), LH, CV	1	Door trim	Dörrklädsel	6
0430	5	41 69 629		29,126), RH, CV	1	Door trim	Dörrklädsel	6
0440								
0450	5	41 36 719		128), LH	1	Door trim	Dörrklädsel	6
0460	5	41 36 727		128), RH	1	Door trim	Dörrklädsel	6
0463	5	42 65 633		128,126), LH	1	Door trim	Dörrklädsel	6
0466	5	42 65 641		128,126), RH	1	Door trim	Dörrklädsel	6
0470	5	41 69 504		128), LH, CV	1	Door trim	Dörrklädsel	6
0480	5	41 69 512		128), RH, CV	1	Door trim	Dörrklädsel	6
0490	5	41 69 637		128,126), LH, CV	1	Door trim	Dörrklädsel	6
0500	5	41 69 645		128,126), RH, CV	1	Door trim	Dörrklädsel	6
0510								
0520	6	98 31 991		LH	1	.Strip	.List	6
0530	6	98 32 007		RH	1	.Strip	.List	6
0540	7	94 25 232			10	.Screw	.Skruv	5
0550	7	79 72 201		CV	10	.Screw	.Skruv	5
0560	8	42 62 887		210)	4	Plastic washer	Plastbricka	5
0570	8	98 67 896		110)	4	Plastic washer	Plastbricka	5
0580	8	96 85 132		80)	4	Plastic washer	Plastbricka	5
0590	8	95 34 637		90)	4	Plastic washer	Plastbricka	5
0595	8	40 56 198		100)	4	Plastic washer	Plastbricka	5
0600	9	86 01 916			X	Clip nut	Clipsmutter	3
0610	10	79 16 497			2	Washer	Bricka	5
0615	10	80 29 985		CV	3	Washer	Bricka	5
0620								
0630	11	42 63 257		191), LH	1	Upholstery plate	Klädselplatta	6
0640	11	42 63 240		191), RH	1	Upholstery plate	Klädselplatta	6
0650	11	42 63 273		12,191), LH	1	Upholstery plate	Klädselplatta	6
0660	11	42 63 265		12,191), RH	1	Upholstery plate	Klädselplatta	6
0670	11	42 65 757		12,191,126), LH	1	Upholstery plate	Klädselplatta	6
0680	11	42 65 765		12,191,126), RH	1	Upholstery plate	Klädselplatta	6
0690								
0700	11	41 36 818		129), LH	1	Upholstery plate	Klädselplatta	6
0710	11	41 36 826		129), RH	1	Upholstery plate	Klädselplatta	6
0720	11	41 36 891		12,129), LH	1	Upholstery plate	Klädselplatta	6
0730	11	41 36 909		12,129), RH	1	Upholstery plate	Klädselplatta	6
0740	11	42 66 037		12,129,126), LH	1	Upholstery plate	Klädselplatta	6
0750	11	42 66 029		12,129,126), RH	1	Upholstery plate	Klädselplatta	6
0760								
0770	11	41 36 834		28), LH	1	Upholstery plate	Klädselplatta	6
0780	11	41 36 842		28), RH	1	Upholstery plate	Klädselplatta	6
0790	11	41 36 917		12,28), LH	1	Upholstery plate	Klädselplatta	6
0800	11	41 36 925		12,28), RH	1	Upholstery plate	Klädselplatta	6
0803	11	42 66 052		12,28,126), LH	1	Upholstery plate	Klädselplatta	6
0806	11	42 66 045		12,28,126), RH	1	Upholstery plate	Klädselplatta	6
0810								
0820	11	41 36 859		29), LH	1	Upholstery plate	Klädselplatta	6


12. For electrical window regulator För elektrisk fönsterhiss
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå
191. Trim colour J41, J44, J74, J33, J23, J43, ljus beige Trim colour J41, J44, J74, J33, J23, J43, light beige
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

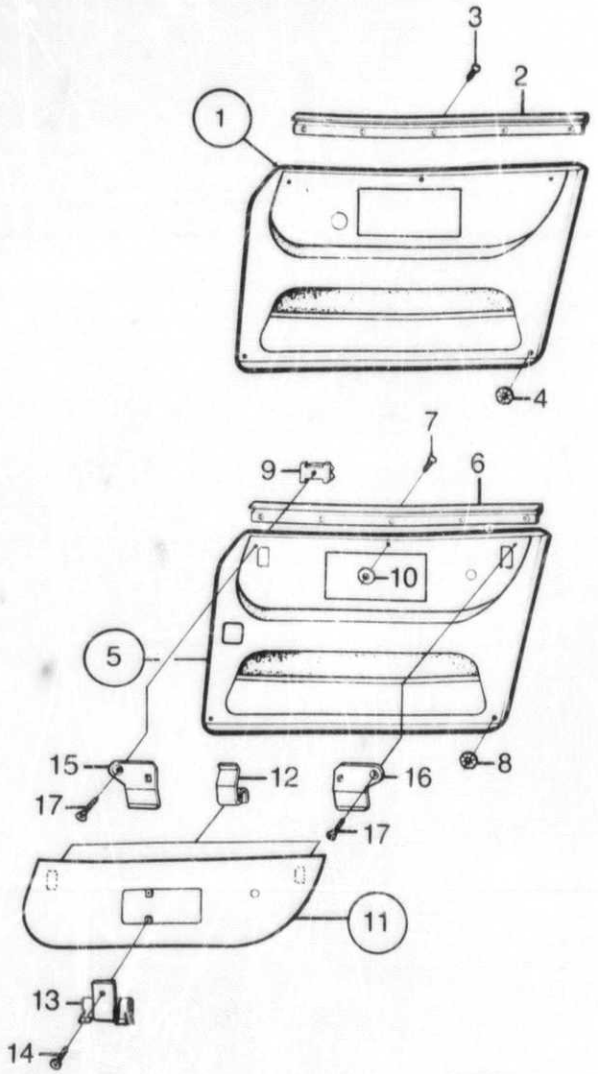

F3762 - AAC90

1408	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	11	41 36 867		29), RH	1	Upholstery plate	Klädselplatta	6
0840	11	41 36 933		12,29), LH	1	Upholstery plate	Klädselplatta	6
0850	11	41 36 941		12,29), RH	1	Upholstery plate	Klädselplatta	6
0860	11	42 66 078		12,29,126), LH	1	Upholstery plate	Klädselplatta	6
0870	11	42 66 060		12,29,126), RH	1	Upholstery plate	Klädselplatta	6
0880								
0890	11	41 37 170		128), LH	1	Upholstery plate	Klädselplatta	6
0900	11	41 37 188		128), RH	1	Upholstery plate	Klädselplatta	6
0910	11	41 37 139		12,128), LH	1	Upholstery plate	Klädselplatta	6
0920	11	41 37 147		12,128), RH	1	Upholstery plate	Klädselplatta	6
0930	11	42 66 094		12,128,126), LH	1	Upholstery plate	Klädselplatta	6
0940	11	42 66 086		12,128,126), RH	1	Upholstery plate	Klädselplatta	6
0950								
0960	12	98 12 058			4	▪Clamp	▪Klämma	5
0970	13	98 30 050			4	▪Clamp	▪Klämma	5
0980	14	79 22 206			X	Screw	Skruv	5
0990	15	98 12 033		LH	2	Clamp	Klämma	6
1000	16	98 12 041		RH	2	Clamp	Klämma	6
1010	17	79 72 201			10	Screw	Skruv	5

12. For electrical window regulator För elektrisk fönsterhiss
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-E14

Side trim 1992
Rear, 3CK, CV

Sidklädsel 1992
Bak, 3CK, CV

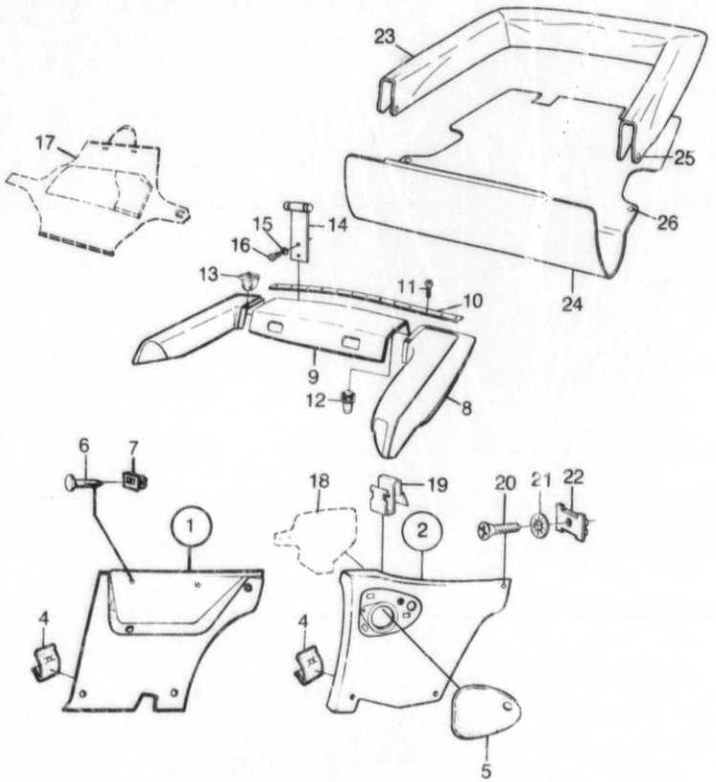

F3763 - AAC90

1403	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41, J44,				
0020				J33, J43				
0030	1	42 60 717		210), LH	1	Side lining	Sidklädsel	6
0040	1	42 60 709		210), RH	1	Side lining	Sidklädsel	6
0050	2	41 69 033		210), LH, CV	1	Side lining	Sidklädsel	6
0060	2	41 69 041		210), RH, CV	1	Side lining	Sidklädsel	6
0070				TRIM COLOUR E41, E44,				
0080				E33, E43, E53				
0090	1	40 37 842		70), LH	1	Side lining	Sidklädsel	6
0100	1	40 37 859		70), RH	1	Side lining	Sidklädsel	6
0110	2	41 68 936		70), LH, CV	1	Side lining	Sidklädsel	6
0120	2	41 68 944		70), RH, CV	1	Side lining	Sidklädsel	6
0130				TRIM COLOUR F41,F44,F33				
0140	1	40 37 867		80), LH	1	Side lining	Sidklädsel	6
0150	1	40 37 875		80), RH	1	Side lining	Sidklädsel	6
0160				TRIM COLOUR G41, G44,				
0170				G33, G43				
0180	1	40 37 883		90), LH	1	Side lining	Sidklädsel	6
0190	1	40 37 891		90), RH	1	Side lining	Sidklädsel	6
0200	2	41 68 878		90), LH, CV	1	Side lining	Sidklädsel	6
0210	2	41 68 886		90), RH, CV	1	Side lining	Sidklädsel	6
0220				TRIM COLOUR H41, H44,				
0230				H33, H43, H53				
0240	1	41 37 337		100), LH	1	Side lining	Sidklädsel	6
0250	1	41 37 329		100), RH	1	Side lining	Sidklädsel	6
0260	2	41 69 017		100), LH, CV	1	Side lining	Sidklädsel	6
0270	2	41 69 025		100), RH, CV	1	Side lining	Sidklädsel	6
0280	4	94 00 334			X	.Clip	.Clips	3
0290								
0300	5	41 68 738		210), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0310	5	41 68 746		210), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0320	5	41 68 670		70), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0330	5	41 68 688		70), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0340	5	41 68 696		90), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0350	5	41 68 704		90), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0360	5	41 68 712		100), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0370	5	41 68 720		100), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0380								
0390	6	42 61 541		210)	X	Special screw	Snabbskruv	5
0400	6	98 67 821		110)	X	Special screw	Snabbskruv	5
0410	6	96 84 549		80)	X	Special screw	Snabbskruv	5
0420	6	95 37 002		90)	X	Special screw	Snabbskruv	5
0430	6	41 37 345		100)	X	Special screw	Snabbskruv	5
0440	7	84 52 898			X	Quick nut	Snabbmutter	3
0450								
0460	8	41 68 571		210), LH, CV	1	Top cover	Suffiettkåpa	5
0470	8	41 68 589		210), RH, CV	1	Top cover	Suffiettkåpa	5
0480	8	98 84 586		70), LH, CV	1	Top cover	Suffiettkåpa	5
0490	8	98 84 594		70), RH, CV	1	Top cover	Suffiettkåpa	5
0500	8	98 24 673		90), LH, CV	1	Top cover	Suffiettkåpa	5
0510	8	98 24 681		90), RH, CV	1	Top cover	Suffiettkåpa	5
0520	9	41 68 449		210), CV	1	Top cover	Suffiettkåpa	5
0530	9	98 84 578		70), CV	1	Top cover	Suffiettkåpa	5
0540	9	98 24 715		90), CV	1	Top cover	Suffiettkåpa	5
0550								
0560	10			See page 8A-023, 4-A24	1	Strip	List	
0570	11			See page 8A-023, 4-A24	12	Screw	Skruv	


70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

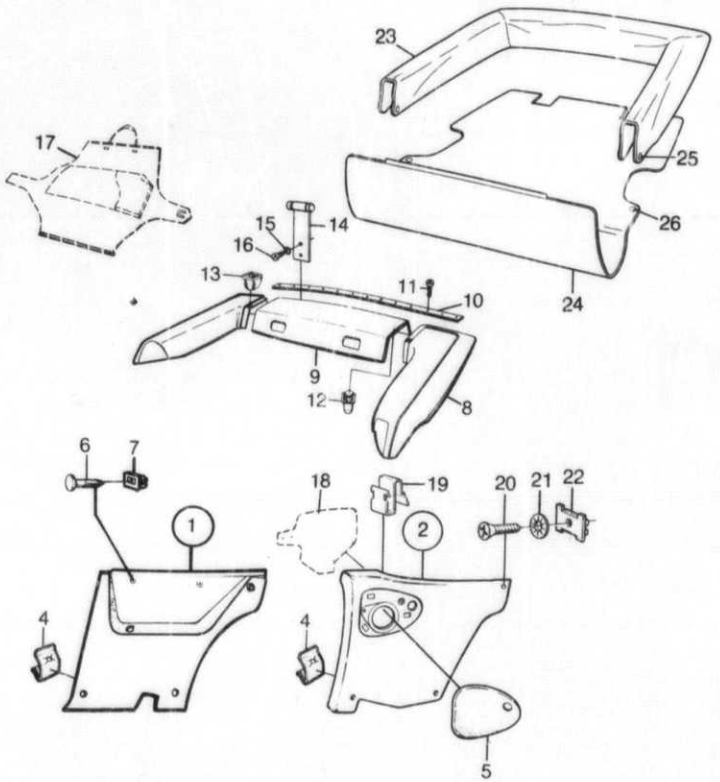

F3763 - AAC90

1409	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	12	98 83 422		CV	2	Clip	Clips	5
0590	13	98 83 430		CV	2	Clip	Clips	5
0600	14	98 84 107		CV	2	Strip	Band	5
0610	15	84 28 997		CV	4	Washer	Bricka	5
0620	16	79 22 206		CV	4	Screw	Skruv	5
0630	17			See page 8B-183, 5-H16		Storage sack	Förvaringspåse	
0640	18			LH, CV	1	Protection	Skydd	
0650				See page 8B-195, 5-I04				
0660	18			RH, CV	1	Protection	Skydd	
0670				See page 8B-195, 5-I04				
0680	19	69 98 850		CV	2	Clip	Clips	5
0690	20	79 72 201		CV	10	Screw	Skruv	5
0700	21	97 11 961		90), CV	10	Plastic washer	Plastbricka	5
0710	21	42 62 887		210), CV	10	Plastic washer	Plastbricka	5
0720	21	98 67 896		110), CV	10	Plastic washer	Plastbricka	5
0730	21	40 56 198		100), CV	10	Plastic washer	Plastbricka	5
0740	22	86 01 916		CV	10	Clip nut	Clipsmutter	3
0750	23	41 70 320		CV	1	Top cover protection	Suffettskydd	5
0760	24	41 70 304		CV	1	Wind cover	Vindskydd	5
0770	25	41 70 338		CV	1	Mounting kit	Monteringssats	5
0780				See page 8B-203, 5-I12				
0790	26	41 70 312		CV	1	Mounting kit	Monteringssats	5
0800				See page 8B-203, 5-I12				


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

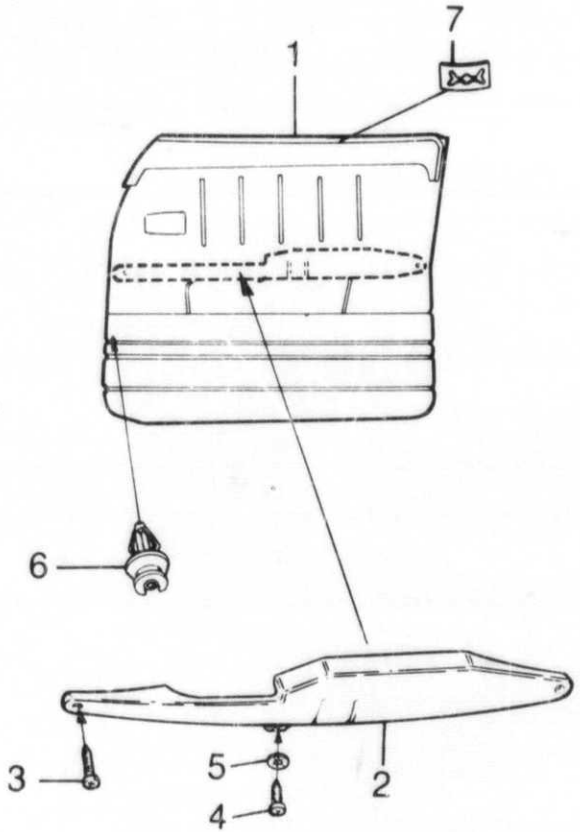

F3764 - AAC90

1410	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41, J44,				
0020				J33, J43				
0030	1	42 62 457		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 62 440		210), RH	1	Door trim	Dörrklädsel	6
0050	1	42 62 473		210,12), LH	1	Door trim	Dörrklädsel	6
0060	1	42 62 465		210,12), RH	1	Door trim	Dörrklädsel	6
0070	2	42 63 216		210), LH	1	Arm rest	Armstöd	6
0080	2	42 63 208		210), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41, E44,				
0100				E33, E43, E53				
0110	1	91 59 872		70), LH	1	Door trim	Dörrklädsel	6
0120	1	91 59 880		70), RH	1	Door trim	Dörrklädsel	6
0130	1	91 56 498		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	91 56 506		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 977		70), LH	1	Arm rest	Armstöd	6
0160	2	98 68 985		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F33				
0180	1	91 59 757		80), LH	1	Door trim	Dörrklädsel	6
0190	1	91 59 765		80), RH	1	Door trim	Dörrklädsel	6
0200	1	91 56 399		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	91 56 407		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 481		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 499		80), RH	1	Arm rest	Armstöd	6
0240				TRIM COLOUR G41, G44,				
0250				G33, G43				
0260	1	91 59 971		90), LH	1	Door trim	Dörrklädsel	6
0270	1	91 59 989		90), RH	1	Door trim	Dörrklädsel	6
0280	1	91 56 597		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	91 56 605		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 905		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 913		90), RH	1	Arm rest	Armstöd	6
0320				TRIM COLOUR H41, H44,				
0330				H33, H43, H53				
0340	1	91 56 696		100), LH	1	Door trim	Dörrklädsel	6
0350	1	91 56 704		100), RH	1	Door trim	Dörrklädsel	6
0360	1	91 56 894		100,12), LH	1	Door trim	Dörrklädsel	6
0370	1	91 56 902		100,12), RH	1	Door trim	Dörrklädsel	6
0380	2	41 37 295		100), LH	1	Arm rest	Armstöd	6
0390	2	41 37 287		100), RH	1	Arm rest	Armstöd	6
0400								
0410	3	79 22 396			4	Screw	Skruv	5
0420	4	79 34 797			2	Screw	Skruv	5
0430	5	79 15 564			2	Star washer	Taggbricka	5
0440	6	94 73 869			20	Clip	Clips	5
0450	7	84 88 447			10	Clip	Clips	5

12. For electrical window regulator För elektrisk fönsterhiss
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-E20 Door trim 1992 Rear, 4SN, 5CK

Klädsel

Dörrklädsel 1992 Bak, 4SN, 5CK

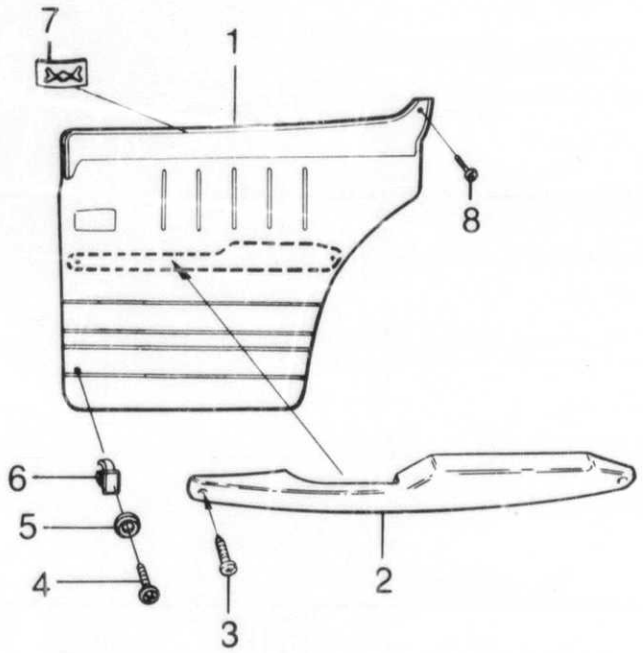

F3765 - AAC90

1411	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41, J44,				
0020				J33, J43				
0030	1	42 62 911		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 62 903		210), RH	1	Door trim	Dörrklädsel	6
0050	1	42 62 937		210,12), LH	1	Door trim	Dörrklädsel	6
0060	1	42 62 929		210,12), RH	1	Door trim	Dörrklädsel	6
0070	2	42 63 158		210), LH	1	Arm rest	Armstöd	6
0080	2	42 63 141		210), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41, E44,				
0100				E33, E43, E53				
0110	1	91 64 971		70), LH	1	Door trim	Dörrklädsel	6
0120	1	91 64 989		70), RH	1	Door trim	Dörrklädsel	6
0130	1	91 59 492		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	91 59 500		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 993		70), LH	1	Arm rest	Armstöd	6
0160	2	98 69 009		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F33				
0180	1	91 59 070		80), LH	1	Door trim	Dörrklädsel	6
0190	1	91 59 088		80), RH	1	Door trim	Dörrklädsel	6
0200	1	91 59 393		80,12), LH	1	Door trim	Dörrklädsel	6
0210	1	91 59 401		80,12), RH	1	Door trim	Dörrklädsel	6
0220	2	96 84 507		80), LH	1	Arm rest	Armstöd	6
0230	2	96 84 515		80), RH	1	Arm rest	Armstöd	6
0240				TRIM COLOUR G41, G44				
0250				G33, G43				
0260	1	91 59 237		90), LH	1	Door trim	Dörrklädsel	6
0270	1	91 59 245		90), RH	1	Door trim	Dörrklädsel	6
0280	1	91 59 575		90,12), LH	1	Door trim	Dörrklädsel	6
0290	1	91 59 583		90,12), RH	1	Door trim	Dörrklädsel	6
0300	2	95 36 921		90), LH	1	Arm rest	Armstöd	6
0310	2	95 36 939		90), RH	1	Arm rest	Armstöd	6
0320				TRIM COLOUR H41, H44,				
0330				H33, H43, H53				
0340	1	91 56 977		100), LH	1	Door trim	Dörrklädsel	6
0350	1	91 56 985		100), RH	1	Door trim	Dörrklädsel	6
0360	1	91 57 132		100,12), LH	1	Door trim	Dörrklädsel	6
0370	1	91 57 140		100,12), RH	1	Door trim	Dörrklädsel	6
0380	2	41 37 378		100), LH	1	Arm rest	Armstöd	6
0390	2	41 37 386		100), RH	1	Arm rest	Armstöd	6
0400								
0410	3	79 22 396			8	Screw	Skruv	5
0420	4	79 70 320			2	Screw	Skruv	5
0430	5	42 62 887		210)	2	Plastic washer	Plastbricka	5
0440	5	98 67 896		110)	2	Plastic washer	Plastbricka	5
0450	5	96 85 132		80)	2	Plastic washer	Plastbricka	5
0460	5	95 34 637		90)	2	Plastic washer	Plastbricka	5
0470	5	40 56 198		100)	2	Plastic washer	Plastbricka	5
0480	6	86 01 916			6	Clip nut	Clipsmutter	3
0490	7	84 88 447			10	Clip	Clips	5
0500	8	79 77 796			2	Screw	Skruv	5


12. For electrical window regulator För elektrisk fönsterhiss
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

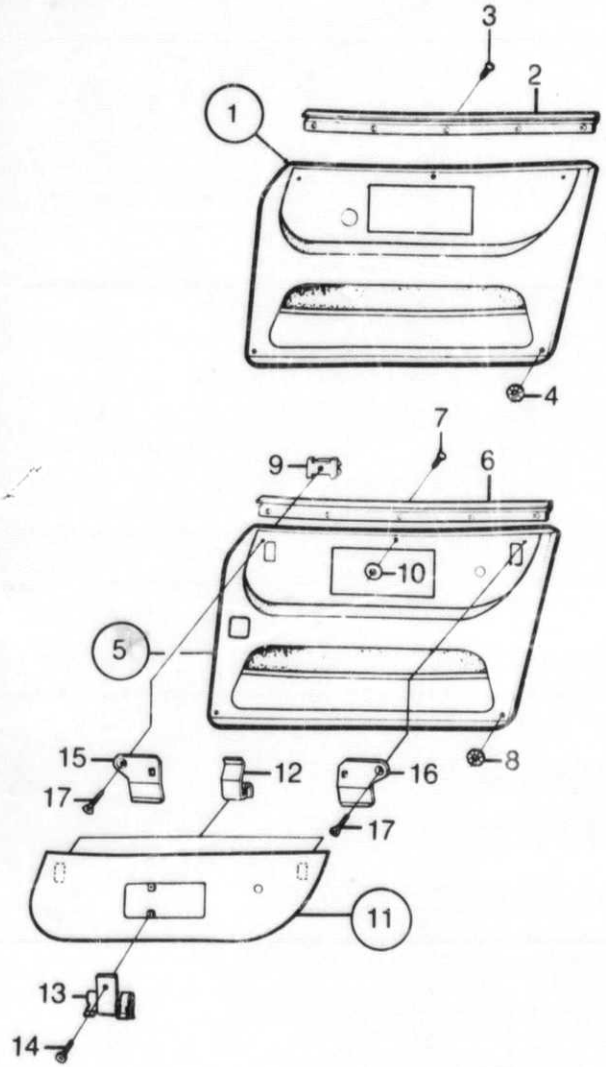

F4551 AAC90

1412	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 62 713		192), LH	1	Door trim	Dörrklädsel	6
0020	1	42 62 705		192), RH	1	Door trim	Dörrklädsel	6
0030	1	41 36 065		23), LH	1	Door trim	Dörrklädsel	6
0040	1	41 36 073		23), RH	1	Door trim	Dörrklädsel	6
0050	1	41 36 024		24), LH	1	Door trim	Dörrklädsel	6
0060	1	41 36 032		24), RH	1	Door trim	Dörrklädsel	6
0070	1	41 36 081		25), LH	1	Door trim	Dörrklädsel	6
0080	1	41 36 099		25), RH	1	Door trim	Dörrklädsel	6
0090	1	41 37 246		127), LH	1	Door trim	Dörrklädsel	6
0100	1	41 36 578		127), RH	1	Door trim	Dörrklädsel	6
0110	2	98 31 991		LH	1	•Strip	•List	6
0120	2	98 32 007		RH	1	•Strip	•List	6
0130	3	94 25 232			10	•Screw	•Skruv	5
0140	4	42 62 887		210)	10	Plastic washer	Plastbricka	5
0150	4	98 67 896		110)	10	Plastic washer	Plastbricka	5
0160	4	96 85 132		80)	10	Plastic washer	Plastbricka	5
0170	4	95 34 637		90)	10	Plastic washer	Plastbricka	5
0175	4	40 56 198		100)	10	Plastic washer	Plastbricka	5
0180								
0190						DOOR TRIM FOR UPHOLSTERY PLATE	DÖRRKLÄDSEL FÖR KLÄDSELPLATTA	
0200								
0210	5	42 62 739		191), LH	1	Door trim	Dörrklädsel	6
0220	5	42 62 721		191), RH	1	Door trim	Dörrklädsel	6
0223	5	42 65 617		191,126), LH	1	Door trim	Dörrklädsel	6
0226	5	42 65 625		191,126), RH	1	Door trim	Dörrklädsel	6
0230	5	41 69 181		191), LH, CV	1	Door trim	Dörrklädsel	6
0240	5	41 69 199		191), RH, CV	1	Door trim	Dörrklädsel	6
0250	5	41 69 553		191,126), LH, CV	1	Door trim	Dörrklädsel	6
0260	5	41 69 561		191,126), RH, CV	1	Door trim	Dörrklädsel	6
0270								
0280	5	41 36 164		129), LH	1	Door trim	Dörrklädsel	6
0290	5	41 36 172		129), RH	1	Door trim	Dörrklädsel	6
0293	5	42 65 690		129,126), LH	1	Door trim	Dörrklädsel	6
0296	5	42 65 708		129,126), RH	1	Door trim	Dörrklädsel	6
0300	5	41 69 371		129), LH, CV	1	Door trim	Dörrklädsel	6
0310	5	41 69 389		129), RH, CV	1	Door trim	Dörrklädsel	6
0320	5	41 69 595		129,126), LH, CV	1	Door trim	Dörrklädsel	6
0330	5	41 69 603		129,126), RH, CV	1	Door trim	Dörrklädsel	6
0340								
0350	5	41 36 149		28), LH	1	Door trim	Dörrklädsel	6
0360	5	41 36 156		28), RH	1	Door trim	Dörrklädsel	6
0363	5	42 65 658		28,126), LH	1	Door trim	Dörrklädsel	6
0366	5	42 65 666		28,126), RH	1	Door trim	Dörrklädsel	6
0370								
0380	5	41 36 123		29), LH	1	Door trim	Dörrklädsel	6
0390	5	41 36 131		29), RH	1	Door trim	Dörrklädsel	6
0393	5	42 65 674		29,126), LH	1	Door trim	Dörrklädsel	6

23. Trim colour E41, grey Trim colour E41, grå
24. Trim colour F41, blue Trim colour F41, blå
25. Trim colour G41, yellow Trim colour G41, gul
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F14, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
127. Trim colour H41, light grey Trim colour H41, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå
191. Trim colour J41, J44, J74, J33, J23, J43, ljus beige Trim colour J41, J44, J74, J33, J23, J43, light beige
192. Trim colour J41, light beige Trim colour J41, ljus beige
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-E24 Door trim 1993- Front, 3CK, CV

Klädsel

Dörrklädsel 1993- Fram, 3CK, CV

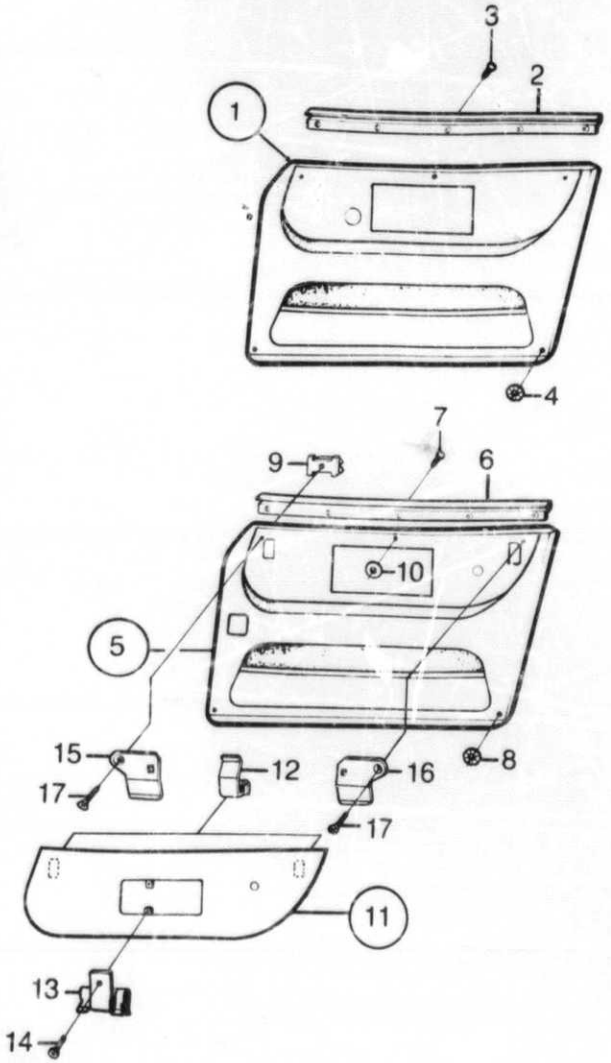

F4551 AAC90

1412	Pos	Part No/Art.nr	K	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0396	5	42 65 682		(29,126), RH	1	Door trim	Dörrklädsel	6
0400	5	41 69 421		29), LH, CV	1	Door trim	Dörrklädsel	6
0410	5	41 69 439		29), RH, CV	1	Door trim	Dörrklädsel	6
0420	5	41 69 611		29,126), LH, CV	1	Door trim	Dörrklädsel	6
0430	5	41 69 629		29,126), RH, CV	1	Door trim	Dörrklädsel	6
0440								
0450	5	41 36 719		128), LH	1	Door trim	Dörrklädsel	6
0460	5	41 36 727		128), RH	1	Door trim	Dörrklädsel	6
0463	5	42 65 633		128,126), LH	1	Door trim	Dörrklädsel	6
0466	5	42 65 641		128,126), RH	1	Door trim	Dörrklädsel	6
0470	5	41 69 504		128), LH, CV	1	Door trim	Dörrklädsel	6
0480	5	41 69 512		128), RH, CV	1	Door trim	Dörrklädsel	6
0490	5	41 69 637		128,126), LH, CV	1	Door trim	Dörrklädsel	6
0500	5	41 69 645		128,126), RH, CV	1	Door trim	Dörrklädsel	6
0510								
0520	6	98 31 991		LH	1	.Strip	.List	6
0530	6	98 32 007		RH	1	.Strip	.List	6
0540	7	94 25 232			10	.Screw	.Skruv	5
0550	7	79 72 201		CV	10	.Screw	.Skruv	5
0560	8	42 62 887		210)	4	Plastic washer	Plastbricka	5
0570	8	98 67 896		110)	4	Plastic washer	Plastbricka	5
0580	8	96 85 132		80)	4	Plastic washer	Plastbricka	5
0590	8	95 34 637		90)	4	Plastic washer	Plastbricka	5
0595	8	40 56 128		100)	4	Plastic washer	Plastbricka	5
0600	9	86 01 916			X	Clip nut	Clipsmutter	3
0610	10	79 16 497			2	Washer	Bricka	5
0617	10	91 66 372		CV	3	Washer	Bricka	5
0620								
0630	11	42 63 257		191), LH	1	Upholstery plate	Klädselplatta	6
0640	11	42 63 240		191), RH	1	Upholstery plate	Klädselplatta	6
0650	11	42 63 273		12,191), LH	1	Upholstery plate	Klädselplatta	6
0660	11	42 63 265		12,191), RH	1	Upholstery plate	Klädselplatta	6
0670	11	42 65 757		12,191,126), LH	1	Upholstery plate	Klädselplatta	6
0680	11	42 65 765		12,191,126), RH	1	Upholstery plate	Klädselplatta	6
0690								
0700	11	41 36 818		129), LH	1	Upholstery plate	Klädselplatta	6
0710	11	41 36 826		129), RH	1	Upholstery plate	Klädselplatta	6
0720	11	41 36 891		12,129), LH	1	Upholstery plate	Klädselplatta	6
0730	11	41 36 909		12,129), RH	1	Upholstery plate	Klädselplatta	6
0740	11	42 66 037		12,129,126), LH	1	Upholstery plate	Klädselplatta	6
0750	11	42 66 029		12,129,126), RH	1	Upholstery plate	Klädselplatta	6
0753	11	42 72 704		12,126), LH, TRIM COLOUR K63	1	Upholstery plate	Klädselplatta	6
0754								
0756	11	42 72 712		12,126), RH, TRIM COLOUR K63	1	Upholstery plate	Klädselplatta	6
0757								
0760								
0770	11	41 36 834		28), LH	1	Upholstery plate	Klädselplatta	6
0780	11	41 36 842		28), RH	1	Upholstery plate	Klädselplatta	6
0790	11	41 36 917		12,28), LH	1	Upholstery plate	Klädselplatta	6
0800	11	41 36 925		12,28), RH	1	Upholstery plate	Klädselplatta	6


12. For electrical window regulator För elektrisk fönsterhiss
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
126. For door trim with leather insert. För dörrklädsel med läderinlägg
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå
129. Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grey Trim colour E41, E44, E74, E33, E23, E43, E53, K63, grå
191. Trim colour J41, J44, J74, J33, J23, J43, ljus beige Trim colour J41, J44, J74, J33, J23, J43, light beige
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

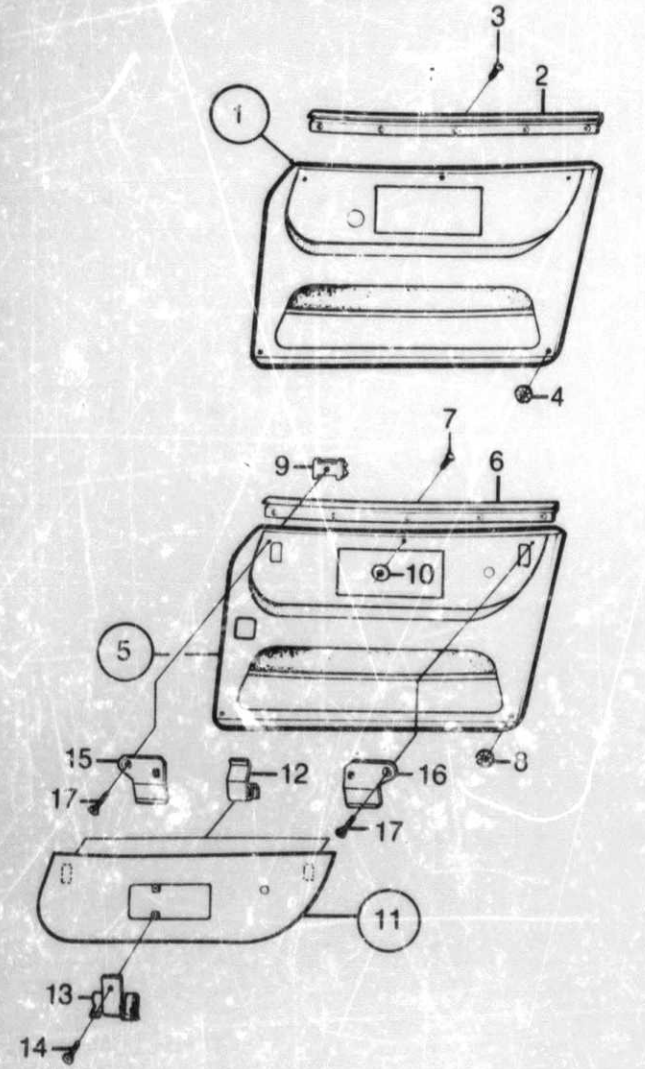

F4551 AAC90

Upholstery

5-F02 Door trim 1993- Front, 3CK, CV

Klädsel

Dörrklädsel 1993- Fram, 3CK, CV

1412	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0803	11	42 66 052		12,28,126), LH	1	Upholstery plate	Klädselplatta	6
0805	11	42 66 045		12,28,126), RH	1	Upholstery plate	Klädselplatta	6
0810								
0820	11	41 36 859		29), LH	1	Upholstery plate	Klädselplatta	6
0830	11	41 36 867		29), RH	1	Upholstery plate	Klädselplatta	6
0840	11	41 36 933		12,29), LH	1	Upholstery plate	Klädselplatta	6
0850	11	41 36 941		12,29), RH	1	Upholstery plate	Klädselplatta	6
0860	11	42 66 078		12,29,126), LH	1	Upholstery plate	Klädselplatta	6
0870	11	42 66 060		12,29,126), RH	1	Upholstery plate	Klädselplatta	6
0880								
0890	11	41 37 170		128), LH	1	Upholstery plate	Klädselplatta	6
0900	11	41 37 188		128), RH	1	Upholstery plate	Klädselplatta	6
0910	11	41 37 139		12,128), LH	1	Upholstery plate	Klädselplatta	6
0920	11	41 37 147		12,128), RH	1	Upholstery plate	Klädselplatta	6
0930	11	42 66 094		12,128,126), LH	1	Upholstery plate	Klädselplatta	6
0940	11	42 66 086		12,128,126), RH	1	Upholstery plate	Klädselplatta	6
0950								
0960	12	98 12 058			4	Clamp	Klämma	5
0970	13	98 30 050			4	Clamp	Klämma	5
0980	14	79 22 206			X	Screw	Skruv	5
0990	15	98 12 033		LH	2	Clamp	Klämma	6
1000	16	98 12 041		RH	2	Clamp	Klämma	6
1010	17	79 72 201			10	Screw	Skruv	5


12. For electrical window regulator För elektrisk fönsterhiss
28. Trim colour F41, F44, F74, F33, blue Trim colour F41, F44, F74, F33, blå
29. Trim colour G41, G44, G74, G33, G38, G43, yellow Trim colour G41, G44, G74, G33, G38, G43, gul
126. For door trim with leather insert. För dörrklädsel med läderinlägg.
128. Trim colour H41, H44, H74, H33, H43, H53, light grey Trim colour H41, H44, H74, H33, H43, H53, ljusgrå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

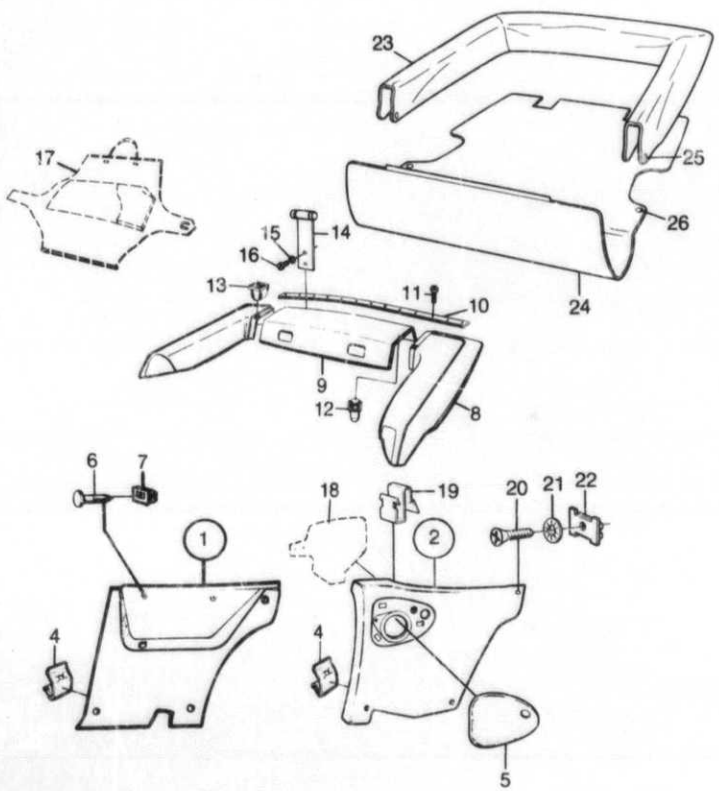

F4552 AAC90

1413	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41,J44,J74,				
0020				J23, J33, J43, J83				
0030	1	42 60 717		210), LH	1	Side lining	Sidklädsel	6
0040	1	42 60 709		210), RH	1	Side lining	Sidklädsel	6
0050	2	41 69 033		210), LH, CV	1	Side lining	Sidklädsel	6
0060	2	41 69 041		210), RH, CV	1	Side lining	Sidklädsel	6
0070				TRIM COLOUR E41,E44,E74,				
0080				E23, E33, E43, E53, K63				
0090	1	40 37 842		70), LH	1	Side lining	Sidklädsel	6
0100	1	40 37 859		70), RH	1	Side lining	Sidklädsel	6
0110	2	41 68 936		70), LH, CV	1	Side lining	Sidklädsel	6
0120	2	41 68 944		70), RH, CV	1	Side lining	Sidklädsel	6
0130				TRIM COLOUR F41,F44,F74,				
0140				F33				
0150	1	40 37 867		80), LH	1	Side lining	Sidklädsel	6
0160	1	40 37 875		80), RH	1	Side lining	Sidklädsel	6
0170				TRIM COLOUR G41,G44,G74,				
0180				G33, G38, G43				
0190	1	40 37 883		90), LH	1	Side lining	Sidklädsel	6
0200	1	40 37 891		90), RH	1	Side lining	Sidklädsel	6
0210	2	41 68 878		90), LH, CV	1	Side lining	Sidklädsel	6
0220	2	41 68 886		90), RH, CV	1	Side lining	Sidklädsel	6
0230				TRIM COLOUR H41,H44,H74,				
0240				H33, H43, H53				
0250	1	41 37 337		100), LH	1	Side lining	Sidklädsel	6
0260	1	41 37 329		100), RH	1	Side lining	Sidklädsel	6
0270	2	41 69 017		100), LH, CV	1	Side lining	Sidklädsel	6
0280	2	41 69 025		100), RH, CV	1	Side lining	Sidklädsel	6
0290	4	94 00 334			X	▪Clip	▪Clips	3
0300								
0310	5	41 68 738		210), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0320	5	41 68 746		210), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0330	5	41 68 670		70), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0340	5	41 68 688		70), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0350	5	41 68 696		90), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0360	5	41 68 704		90), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0370	5	41 68 712		100), LH, CV	1	Loudspeaker grille	Högtalargaller	5
0380	5	41 68 720		100), RH, CV	1	Loudspeaker grille	Högtalargaller	5
0390								
0400	6	42 61 541		210)	X	Special screw	Snabbskruv	5
0410	6	98 67 821		110)	X	Special screw	Snabbskruv	5
0420	6	96 84 549		80)	X	Special screw	Snabbskruv	5
0430	6	95 37 002		90)	X	Special screw	Snabbskruv	5
0440	6	41 37 345		100)	X	Special screw	Snabbskruv	5
0450	7	84 52 898			X	Quick nut	Snabbmutter	3
0460						▼		
0470	8	41 68 571		210), LH, CV	1	Top cover	Sufflettkåpa	5
0480	8	41 68 589		210), RH, CV	1	Top cover	Sufflettkåpa	5
0490	8	98 84 586		70), LH, CV	1	Top cover	Sufflettkåpa	5
0500	8	98 84 594		70), RH, CV	1	Top cover	Sufflettkåpa	5
0510	8	98 24 673		90), LH, CV	1	Top cover	Sufflettkåpa	5
0520	8	98 24 681		90), RH, CV	1	Top cover	Sufflettkåpa	5
0530	9	41 68 449		210), CV	1	Top cover	Sufflettkåpa	5
0540	9	98 84 578		70), CV	1	Top cover	Sufflettkåpa	5
0550	9	98 24 715		90), CV	1	Top cover	Sufflettkåpa	5
0560								
0570	10			See page 8A-023, 4-A24	1	Strip	List	


70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

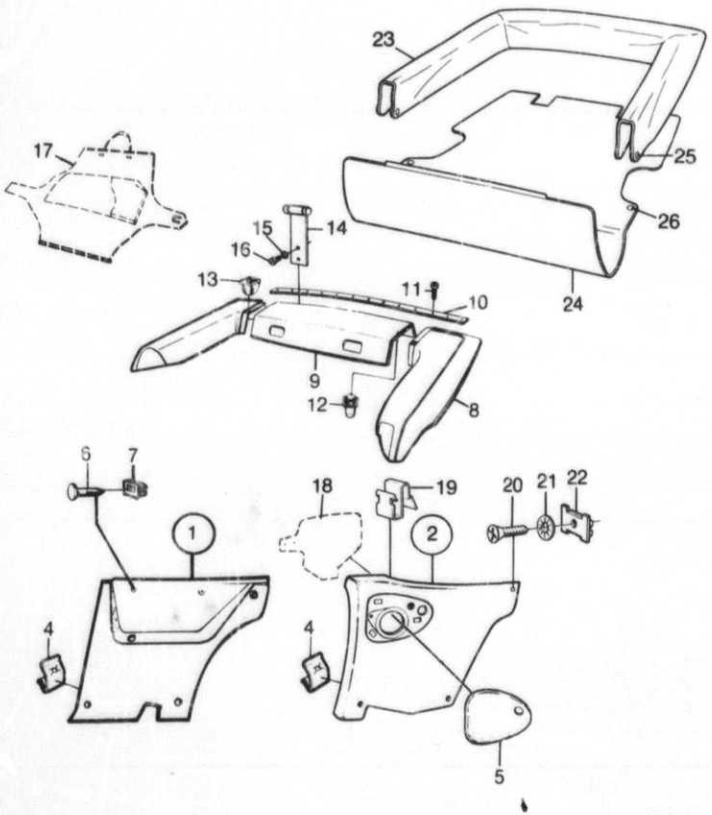

F4552 AAC90

1413 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580 11			See page 8A-023, 4-A24	12	Screw	Skruv	
0590 12	98 83 422		CV	2	Clip	Clips	5
0600 13	98 83 430		CV	2	Clip	Clips	5
0610 14	98 84 107		CV	2	Strip	Band	5
0620 15	84 28 997		CV	4	Washer	Bricka	5
0630 16	79 22 206		CV	4	Screw	Skruv	5
0640 17			See page 8B-183, 5-H16		Storage sack	Förvaringspåse	
0650 18			LH, CV	1	Protection	Skydd	
0660			See page 8B-195, 5-I04				
0670 18			RH, CV	1	Protection	Skydd	
0680			See page 8B-195, 5-I04				
0690 19	69 98 850		CV	2	Clip	Clips	5
0700 20	79 72 201		CV	10	Screw	Skruv	5
0710 21	97 11 961		90), CV	10	Plastic washer	Plastbricka	5
0720 21	42 62 887		210), CV	10	Plastic washer	Plastbricka	5
0730 21	98 67 896		110), CV	10	Plastic washer	Plastbricka	5
0740 21	40 56 198		100), CV	10	Plastic washer	Plastbricka	5
0750 22	86 01 916		CV	10	Clip nut	Clipsmutter	3
0760 23	41 70 320		CV	1	Top cover protection	Suffettskydd	5
0770 24	41 70 304		CV	1	Wind cover	Vindskydd	5
0780 25	41 70 338		CV	1	Mounting kit	Monteringssats	5
0790			See page 8B-203, 5-I12				
0800 26	41 70 312		CV	1	Mounting kit	Monteringssats	5
0810			See page 8B-203, 5-I12				


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

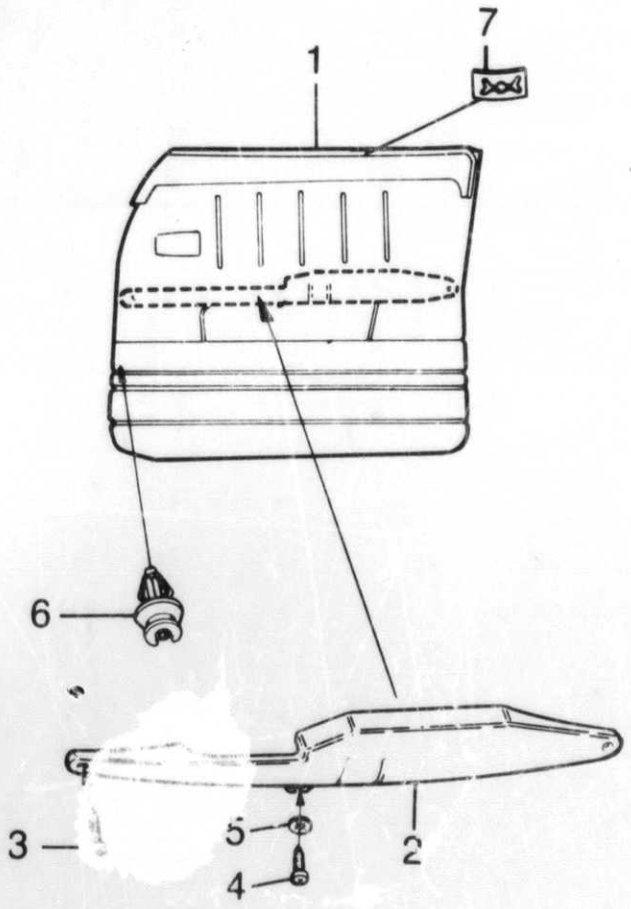

F4553 AAC90

1414	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41,J44,J74,				
0020				J23, J33, J43, J83				
0030	1	42 62 457		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 62 440		210), RH	1	Door trim	Dörrklädsel	6
0050	1	42 62 473		210,12), LH	1	Door trim	Dörrklädsel	6
0060	1	42 62 465		210,12), RH	1	Door trim	Dörrklädsel	6
0070	2	42 63 216		210), LH	1	Arm rest	Armstöd	6
0080	2	42 63 208		210), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41,E44,E74,				
0100				E23, E33, E43, E53, K63				
0110	1	91 59 872		70), LH	1	Door trim	Dörrklädsel	6
0120	1	91 59 880		70), RH	1	Door trim	Dörrklädsel	6
0130	1	91 56 498		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	91 56 506		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 977		70), LH	1	Arm rest	Armstöd	6
0160	2	98 68 985		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F74,				
0180				F33				
0190	1	91 59 757		80), LH	1	Door trim	Dörrklädsel	6
0200	1	91 59 765		80), RH	1	Door trim	Dörrklädsel	6
0210	1	91 56 399		80,12), LH	1	Door trim	Dörrklädsel	6
0220	1	91 56 407		80,12), RH	1	Door trim	Dörrklädsel	6
0230	2	96 84 481		80), LH	1	Arm rest	Armstöd	6
0240	2	96 84 499		80), RH	1	Arm rest	Armstöd	6
0250				TRIM COLOUR G41,G44,G74,				
0260				G33, G38, G43				
0270	1	91 59 971		90), LH	1	Door trim	Dörrklädsel	6
0280	1	91 59 989		90), RH	1	Door trim	Dörrklädsel	6
0290	1	91 56 597		90,12), LH	1	Door trim	Dörrklädsel	6
0300	1	91 56 605		90,12), RH	1	Door trim	Dörrklädsel	6
0310	2	95 36 905		90), LH	1	Arm rest	Armstöd	6
0320	2	95 36 913		90), RH	1	Arm rest	Armstöd	6
0330				TRIM COLOUR H41,H44,H74,				
0340				H33, H43, H53				
0350	1	91 56 696		100), LH	1	Door trim	Dörrklädsel	6
0360	1	91 56 704		100), RH	1	Door trim	Dörrklädsel	6
0370	1	91 56 894		100,12), LH	1	Door trim	Dörrklädsel	6
0380	1	91 56 902		100,12), RH	1	Door trim	Dörrklädsel	6
0390	2	41 37 295		100), LH	1	Arm rest	Armstöd	6
0400	2	41 37 287		100), RH	1	Arm rest	Armstöd	6
410								
0420	3	79 22 396			4	Screw	Skruv	5
0430	4	79 34 797			2	Screw	Skruv	5
0440	5	79 15 564			2	Star washer	Taggbricka	5
0450	6	94 73 869			20	Clip	Clips	5
0460	7	84 88 447			10	Clip	Clips	5

12. For electrical window regulator För elektrisk fönsterhiss
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-F10 Door trim 1993 Rear, 4SN, 5CK

Klädsel

Dörrklädsel 1993 Bak, 4SN, 5CK

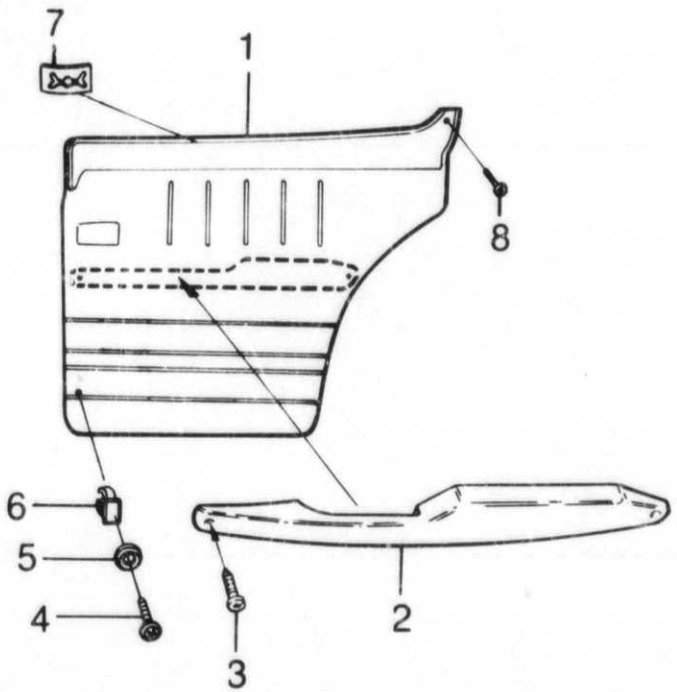

F4554 AAC90

1415	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41,J44,J74,				
0020				J23, J33, J43, J83				
0030	1	42 62 911		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 62 903		210), RH	1	Door trim	Dörrklädsel	6
0050	1	42 62 937		210,12), LH	1	Door trim	Dörrklädsel	6
0060	1	42 62 929		210,12), RH	1	Door trim	Dörrklädsel	6
0070	2	42 63 158		210), LH	1	Arm rest	Armstöd	6
0080	2	42 63 141		210), RH	1	Arm rest	Armstöd	6
0090				TRIM COLOUR E41,E44,E74,				
0100				E23, E33, E43, E53, K63				
0110	1	91 64 971		70), LH	1	Door trim	Dörrklädsel	6
0120	1	91 64 989		70), RH	1	Door trim	Dörrklädsel	6
0130	1	91 59 492		70,12), LH	1	Door trim	Dörrklädsel	6
0140	1	91 59 500		70,12), RH	1	Door trim	Dörrklädsel	6
0150	2	98 68 993		70), LH	1	Arm rest	Armstöd	6
0160	2	98 69 009		70), RH	1	Arm rest	Armstöd	6
0170				TRIM COLOUR F41,F44,F74,				
0180				F33				
0190	1	91 59 070		80), LH	1	Door trim	Dörrklädsel	6
0200	1	91 59 088		80), RH	1	Door trim	Dörrklädsel	6
0210	1	91 59 393		80,12), LH	1	Door trim	Dörrklädsel	6
0220	1	91 59 401		80,12), RH	1	Door trim	Dörrklädsel	6
0230	2	96 84 507		80), LH	1	Arm rest	Armstöd	6
0240	2	96 84 515		80), RH	1	Arm rest	Armstöd	6
0250				TRIM COLOUR G41,G44,G74,				
0260				G33, G38, G43				
0270	1	91 59 237		90), LH	1	Door trim	Dörrklädsel	6
0280	1	91 59 245		90), RH	1	Door trim	Dörrklädsel	6
0290	1	91 59 575		90,12), LH	1	Door trim	Dörrklädsel	6
0300	1	91 59 583		90,12), RH	1	Door trim	Dörrklädsel	6
0310	2	95 36 921		90), LH	1	Arm rest	Armstöd	6
0320	2	95 36 939		90), RH	1	Arm rest	Armstöd	6
0330				TRIM COLOUR H41,H44,H74,				
0340				H33, H43, H53				
0350	1	91 56 977		100), LH	1	Door trim	Dörrklädsel	6
0360	1	91 56 985		100), RH	1	Door trim	Dörrklädsel	6
0370	1	91 57 132		100,12), LH	1	Door trim	Dörrklädsel	6
0380	1	91 57 140		100,12), RH	1	Door trim	Dörrklädsel	6
0390	2	41 37 378		100), LH	1	Arm rest	Armstöd	6
0400	2	41 37 386		100), RH	1	Arm rest	Armstöd	6
0410								
0420	3	79 22 396			8	Screw	Skruv	5
0430	4	79 70 320			2	Screw	Skruv	5
0440	5	42 62 887		210)	2	Plastic washer	Plastbricka	5
0450	5	98 67 896		110)	2	Plastic washer	Plastbricka	5
0460	5	96 85 132		80)	2	Plastic washer	Plastbricka	5
0470	5	95 34 637		90)	2	Plastic washer	Plastbricka	5
0480	5	40 56 198		100)	2	Plastic washer	Plastbricka	5
0490	6	86 01 916			6	Clip nut	Clipsmutter	3
0500	7	84 88 447			10	Clip	Clips	5
0510	8	79 77 796			2	Screw	Skruv	5

12. For electrical window regulator — För elektrisk fönsterhiss
70. Grey — Grå
80. Blue — Blå
90. Yellow — Gul
100. Light grey — Ljus grå
110. Black — Svart
210. Light beige — Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

Upholstery

5-F12 *Luggage compartment*

Klädsel

Bagagerum

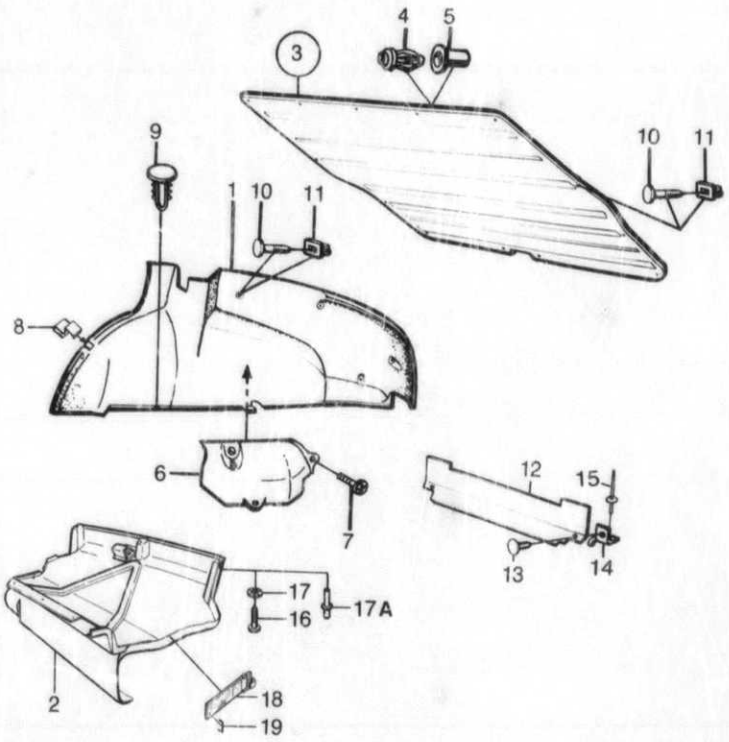

F3088 AAC90

1423	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	98 09 732		LH, 2SN	1	Side lining	Sidklädsel	6
0030	1	98 09 740		RH, 2SN	1	Side lining	Sidklädsel	6
0050	1	97 40 739		LH, 4SN	1	Side lining	Sidklädsel	6
0070	1	94 73 117		RH, 4SN	1	Side lining	Sidklädsel	6
0130	1	94 64 876		LH, CK	1	Side lining	Sidklädsel	6
0150	1	94 64 884		RH, CK	1	Side lining	Sidklädsel	6
0190	1	98 24 897		LH, CV	1	Side lining	Sidklädsel	6
0210	1	98 81 665		RH, CV	1	Side lining	Sidklädsel	6
0230								
0275	2	96 45 367		1990, CV	1	Upholstery	Klädsel	6
0277	2	41 70 130		1991-, CV	1	Upholstery	Klädsel	6
0280	3	98 78 588			1	Upholstery	Klädsel	6
0300	4	94 73 869			5	Clip	Clips	5
0310	5	94 73 877			5	Sleeve	Hylsa	5
0330	6	94 64 843			1	Cover	Kåpa	
0340	7	79 22 420			3	Screw	Skruv	5
0350	8	94 92 885		4SN, 5CK	6	Clip	Clips	5
0370	9	84 83 893			3	Clip	Clips	5
0380	10	94 64 926			17	Special screw	Snabbskruv	5
0400	10	94 64 926		CV	11	Special screw	Snabbskruv	5
0420	11	84 52 898			29	Quick nut	Snabbmutter	3
0430	11	84 52 898		CV	11	Quick nut	Snabbmutter	3
0470	12	95 31 336		SN, CV	1	Upholstery	Klädsel	6
0480	13	84 83 893			2	Clip	Clips	5
0490	14	94 90 954		SN	2	Bracket	Konsol	6
0510	15	79 72 490		SN	2	Rivet	Nit	5
0520	16	79 70 536		1990, CV	6	Screw	Skruv	6
0530	17	79 73 894		1990, CV	6	Washer	Bricka	5
0535	17A	41 70 353		1991, CV	6	Blind rivet	Blindnit	5
0537	17A	82 35 178		1992-, CV	6	Pop rivet	Popnit	5
0540	18	98 24 434		CV	2	Bracket	Fäste	5
0550	19	*73 74 218*		CV NLS	4	Staple	Häftklammer	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F14

Carpets 1990
Mattor 1990

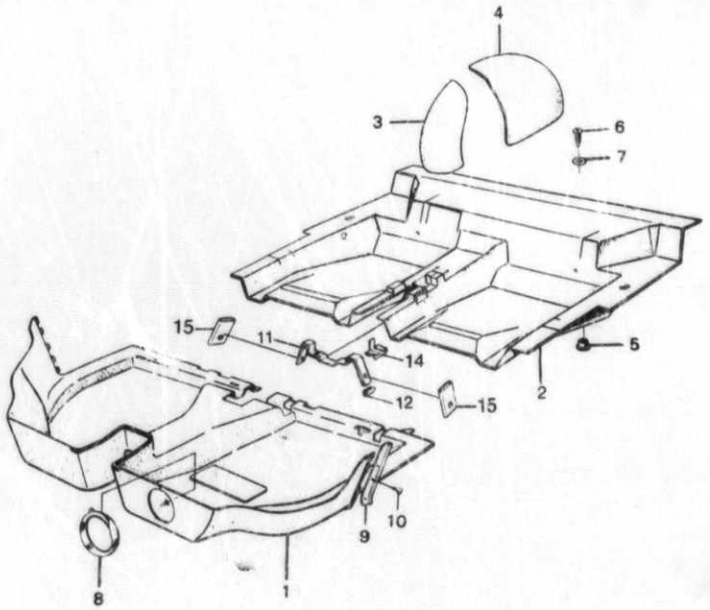

F2233 AAC90

1424	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C41,C44,C33				
0025	1	96 86 700		60)	1	Carpet	Matta	6
0030	1	96 86 783		60), RHD	1	Carpet	Matta	6
0040	1	98 80 709		60), CV	1	Carpet	Matta	6
0050	1	98 80 733		60), CV, RHD	1	Carpet	Matta	6
0060	2	40 42 495		60), 2SN, 3CK	1	Carpet	Matta	6
0070	2	40 42 586		60), 4SN, 5CK	1	Carpet	Matta	6
0080	2	96 47 165		60), CV	1	Carpet	Matta	6
0110				TRIM COLOUR E41, E44,				
0111				E33, H33				
0115	1	96 86 742		70)	1	Carpet	Matta	6
0120	1	96 86 825		70), RHD	1	Carpet	Matta	6
0130	1	98 82 051		70), CV	1	Carpet	Matta	6
0140	1	98 23 857		70), CV, RHD	1	Carpet	Matta	6
0150	2	40 42 537		70), 2SN, 3CK	1	Carpet	Matta	6
0160	2	40 42 602		70), 4SN, 5CK	1	Carpet	Matta	6
0170	2	96 47 181		70), CV	1	Carpet	Matta	6
0200				TRIM COLOUR F41,F44,F33				
0205	1	96 86 395		80)	1	Carpet	Matta	6
0210	1	96 86 403		80), RHD	1	Carpet	Matta	6
0220	2	40 42 511		80), 2SN, 3CK	1	Carpet	Matta	6
0230	2	40 42 594		80), 4SN, 5CK	1	Carpet	Matta	6
0260				TRIM COLOUR G41,G44,G33				
0265	1	95 37 150		90)	1	Carpet	Matta	6
0270	1	95 37 135		90), RHD	1	Carpet	Matta	6
0280	1	96 48 023		90), CV	1	Carpet	Matta	6
0290	1	96 48 031		90), CV, RHD	1	Carpet	Matta	6
0300	2	40 42 552		90), 2SN, 3CK	1	Carpet	Matta	6
0310	2	40 42 610		90), 4SN, 5CK	1	Carpet	Matta	6
0320	2	96 47 991		90), CV	1	Carpet	Matta	6
0330								
0340	3	84 68 175		LH	1	Wheel housing cover	Hjulhusklädsel	6
0350	3	84 68 183		RH	1	Wheel housing cover	Hjulhusklädsel	6
0360	4	84 68 191		LH	1	Wheel housing cover	Hjulhusklädsel	6
0370	4	84 68 209		RH	1	Wheel housing cover	Hjulhusklädsel	6
0380	5	73 46 232		2SN, 3CK	2	Bracket	Fäste	5
0390	6	79 22 206		2SN, 3CK	2	Screw	Skruv	5
0400	7	70 88 073		2SN, 3CK	2	Washer	Bricka	5
0410	8	*94 32 030*		NLS	1	Bracket	Hållare	5
0420	8	94 32 048		CV, RHD	1	Bracket	Hållare	5
0430	9	94 71 897		LH	1	Attaching plate	Fästplåt	5
0440	9	94 71 905		RH	1	Attaching plate	Fästplåt	5
0450	9	96 80 634		CV, LH	1	Attaching plate	Fästplåt	5
0460	9	98 80 642		CV, RH	1	Attaching plate	Fästplåt	5
0470	10	79 70 312			6	Screw	Skruv	5
0480	10	79 70 262		CV	4	Screw	Skruv	5
0490	11	40 50 555			1	Bracket	Konsol	6
0500	12	82 62 974			1	Protecting moulding	Skyddslist	6
0510	14	84 77 507			2	Clip	Clips	5
0520	15	95 42 242			1	Protection	Skydd	5
0530	15	95 42 242		ABS	2	Protection	Skydd	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F16

Carpets 1991
Mattor 1991

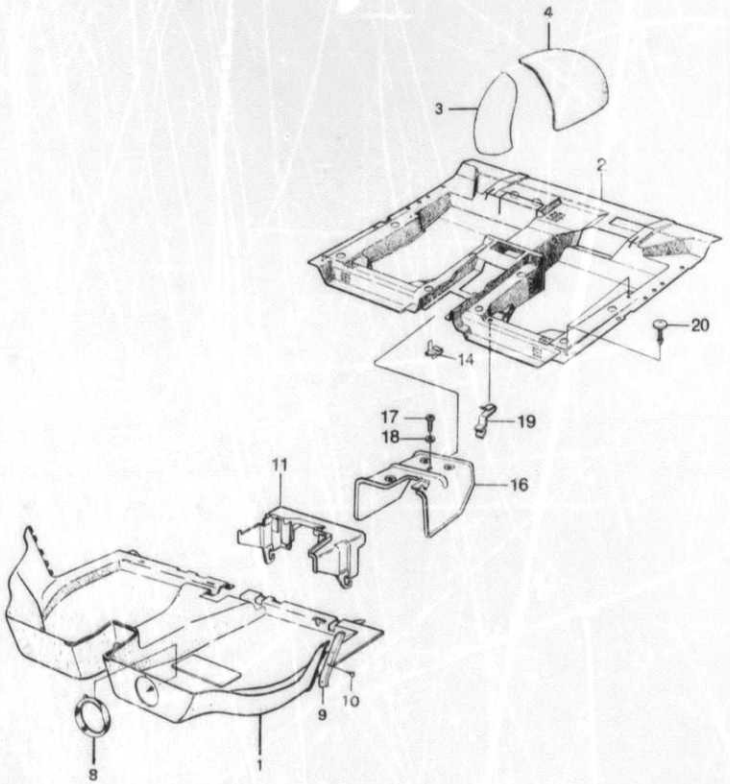

F3089 AAC90

1425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C41,C44, C33, C43				
0020								
0025	1	41 28 708		60)	1	Carpet	Matta	6
0030	1	41 28 740		60), RHD	1	Carpet	Matta	6
0040	1	91 60 508		60), CV	1	Carpet	Matta	6
0050	1	91 60 516		60), CV, RHD	1	Carpet	Matta	6
0060	2	41 27 569		60)	1	Carpet	Matta	6
0100				TRIM COLOUR E41, E44, E33, E43, E53, H41, H44, H33, H43, H53				
0110								
0115								
0117	1	41 28 716		70,100)	1	Carpet	Matta	6
0120	1	41 28 757		70,100), RHD	1	Carpet	Matta	6
0130	1	91 60 524		70,100), CV	1	Carpet	Matta	6
0140	1	91 60 532		70,100), CV, RHD	1	Carpet	Matta	6
0150	2	41 27 585		70,100)	1	Carpet	Matta	6
0200				TRIM COLOUR F41,F44,F33				
0205	1	41 28 724		80)	1	Carpet	Matta	6
0210	1	41 28 765		80), RHD	1	Carpet	Matta	6
0220	2	41 27 577		80)	1	Carpet	Matta	6
0250				TRIM COLOUR G41, G44, G33, G43				
0260								
0265	1	41 28 732		90)	1	Carpet	Matta	6
0270	1	41 28 773		90), RHD	1	Carpet	Matta	6
0280	1	91 60 540		90), CV	1	Carpet	Matta	6
0290	1	91 60 557		90), CV, RHD	1	Carpet	Matta	6
0300	2	41 27 593		90)	1	Carpet	Matta	6
0330								
0340	3	84 68 175		LH	1	Wheel housing cover	Hjulhusklädsel	6
0350	3	84 68 183		RH	1	Wheel housing cover	Hjulhusklädsel	6
0360	4	84 68 191		LH	1	Wheel housing cover	Hjulhusklädsel	6
0370	4	84 68 209		RH	1	Wheel housing cover	Hjulhusklädsel	6
0410	8	*94 32 030*		NLS	1	Bracket	Hållare	5
0420	8	94 32 048		CV, RHD	1	Bracket	Hållare	5
0430	9	94 71 897		LH	1	Attaching plate	Fästplåt	5
0440	9	94 71 905		RH	1	Attaching plate	Fästplåt	5
0450	9	98 80 634		CV, LH	1	Attaching plate	Fästplåt	5
0460	9	98 80 642		CV, RH	1	Attaching plate	Fästplåt	5
0470	10	79 70 312			6	Screw	Skruv	5
0480	10	79 70 262		CV	4	Screw	Skruv	5
0490	11	98 64 430			1	Bracket	Konsol	5
0510	14	84 77 507			2	Clip	Clips	5
0540	16	40 57 360			1	Cable protection	Kabelskydd	4
0550	17	79 22 503			3	Screw	Skruv	5
0560	18	80 29 951			3	Washer	Bricka	5
0570	19	95 36 228			2	Carpet retainer	Matthållare	5
0580	20	96 68 120		60)	4	Clip	Clips	5
0590	20	96 68 153		70)	4	Clip	Clips	5
0600	20	96 75 646		80)	4	Clip	Clips	5
0610	20	95 80 846		90)	4	Clip	Clips	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F18

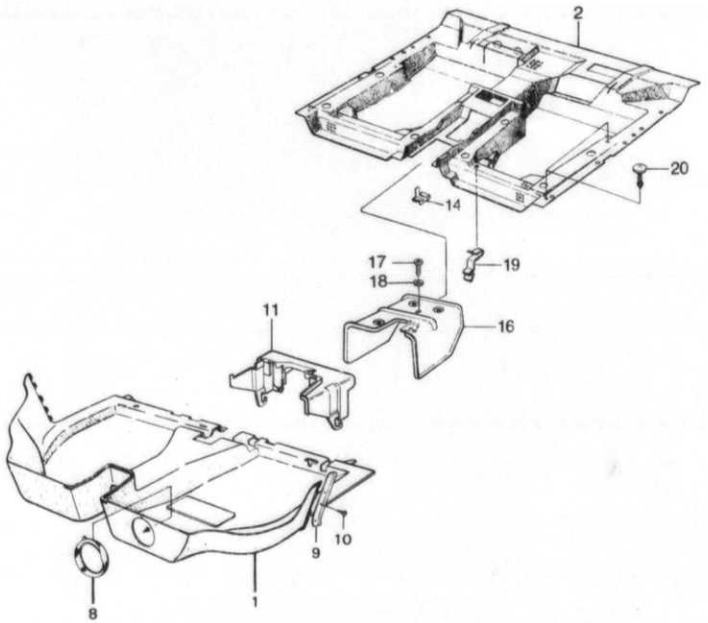

F3766 - AAC90

1426	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41, J44, J33, J43				
0020								
0025	1	42 60 766		210)	1	Carpet	Matta	6
0030	1	42 60 790		210), RHD	1	Carpet	Matta	6
0040	1	41 68 506		210), CV	1	Carpet	Matta	6
0050	1	41 68 514		210), CV, RHD	1	Carpet	Matta	6
0060	2	42 60 816		210)	1	Carpet	Matta	6
0100				TRIM COLOUR E41, E44, E33, E43, E53, H41, H44, H33, H43, H53				
0110								
0115								
0117	1	41 28 716		70,100)	1	Carpet	Matta	6
0120	1	41 28 757		70,100), RHD	1	Carpet	Matta	6
0130	1	91 60 524		70,100), CV	1	Carpet	Matta	6
0140	1	91 60 532		70,100), CV, RHD	1	Carpet	Matta	6
0150	2	41 27 585		70,100)	1	Carpet	Matta	6
0200				TRIM COLOUR F41,F44,F33				
0205	1	41 28 724		80)	1	Carpet	Matta	6
0210	1	41 28 765		80), RHD	1	Carpet	Matta	6
0220	2	41 27 577		80)	1	Carpet	Matta	6
0250				TRIM COLOUR G41, G44, G33, G43				
0260								
0265	1	41 28 732		90)	1	Carpet	Matta	6
0270	1	41 28 773		90), RHD	1	Carpet	Matta	6
0280	1	91 60 540		90), CV	1	Carpet	Matta	6
0290	1	91 60 557		90), CV, RHD	1	Carpet	Matta	6
0300	2	41 27 593		90)	1	Carpet	Matta	6
0330								
0410	8	*94 32 030*		NLS	1	Bracket	Hållare	5
0420	8	94 32 048		CV, RHD	1	Bracket	Hållare	5
0430	9	94 71 897		LH	1	Attaching plate	Fästplåt	5
0440	9	94 71 905		RH	1	Attaching plate	Fästplåt	5
0450	9	98 80 634		CV, LH	1	Attaching plate	Fästplåt	5
0460	9	98 80 642		CV, RH	1	Attaching plate	Fästplåt	5
0470	10	79 70 312			6	Screw	Skruv	5
0480	10	79 70 262		CV	4	Screw	Skruv	5
0490	11	98 64 430			1	Bracket	Konsol	5
0510	14	84 77 507			2	Clip	Clips	5
0540	16	40 57 360			1	Cable protection	Kabelskydd	4
0550	17	79 22 503			3	Screw	Skruv	5
0560	18	80 29 951			3	Washer	Bricka	5
0570	19	95 36 228			2	Carpet retainer	Matthållare	5
0580	20	42 60 824		210)	4	Clip	Clips	5
0590	20	96 68 153		70)	4	Clip	Clips	5
0600	20	96 75 646		80)	4	Clip	Clips	5
0610	20	95 80 846		90)	4	Clip	Clips	5

70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F20

Carpets 1993-

Mattor 1993-

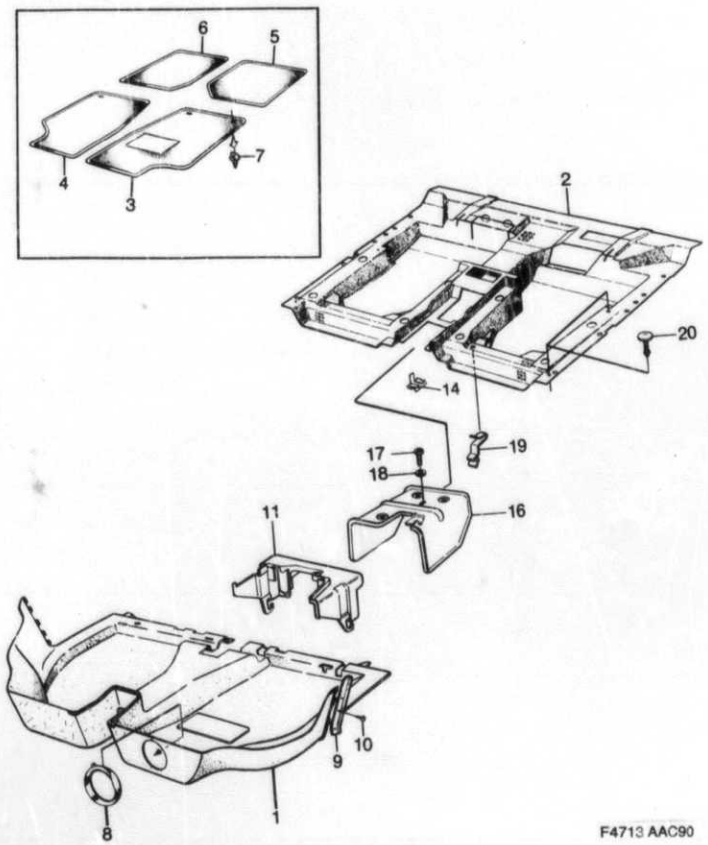

F4713 AAC90

1427	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J41,J44,J74,				
0020				J23, J33, J43, J83				
0030	1	42 60 766		210)	1	Carpet	Matta	6
0040	1	42 60 790		210), RHD	1	Carpet	Matta	6
0050	1	41 68 506		210), CV	1	Carpet	Matta	6
0060	1	41 68 514		210), CV, RHD	1	Carpet	Matta	6
0070	2	42 60 816		210)	1	Carpet	Matta	6
0080				TRIM COLOUR E41,E44,E74,				
0090				E23,E33,E43,E53,H41,H44,				
0100				H74, H33, H43, H53, K63				
0110	1	41 28 716		70)	1	Carpet	Matta	6
0120	1	41 28 757		70), RHD	1	Carpet	Matta	6
0130	1	91 60 524		70), CV	1	Carpet	Matta	6
0140	1	91 60 532		70), CV, RHD	1	Carpet	Matta	6
0150	2	41 27 585		70)	1	Carpet	Matta	6
0160	3	44 85 553		70), LH	1	Carpet	Matta	6
0170	3	44 85 678		70), LH, RHD	1	Carpet	Matta	6
0180	4	44 85 561		70), RH	1	Carpet	Matta	6
0190	4	44 85 686		70), RH, RHD	1	Carpet	Matta	6
0200	5	44 85 579		70), LH	1	Carpet	Matta	6
0210	6	44 85 587		70), RH	1	Carpet	Matta	6
0220				TRIM COLOUR F41,F44,F74,				
0230				F33				
0240	1	41 28 724		80)	1	Carpet	Matta	6
0250	1	41 28 765		80), RHD	1	Carpet	Matta	6
0260	2	41 27 577		80)	1	Carpet	Matta	6
0270				TRIM COLOUR G41,G44,G74,				
0280				G33, G38, G43				
0290	1	41 28 732		90)	1	Carpet	Matta	6
0300	1	41 28 773		90), RHD	1	Carpet	Matta	6
0310	1	91 60 540		90), CV	1	Carpet	Matta	6
0320	1	91 60 557		90), CV, RHD	1	Carpet	Matta	6
0330	2	41 27 593		90)	1	Carpet	Matta	6
0340	3	44 86 965		90), LH	1	Carpet	Matta	6
0350	3	44 86 981		90), LH, RHD	1	Carpet	Matta	6
0360	4	44 86 973		90), RH	1	Carpet	Matta	6
0370	4	44 86 999		90), RH, RHD	1	Carpet	Matta	6
0380	5	44 87 005		90), LH	1	Carpet	Matta	6
0390	6	44 87 013		90), RH	1	Carpet	Matta	6
0400								
0410	7	42 69 932			4	Bracket	Fäste	6
0420	8	*94 32 030*		NLS	1	Bracket	Hållare	5
0430	8	94 32 048		CV, RHD	1	Bracket	Hållare	5
0440	9	94 71 897		LH	1	Attaching plate	Fästplåt	5
0450	9	94 71 905		RH	1	Attaching plate	Fästplåt	5
0460	9	98 80 634		CV, LH	1	Attaching plate	Fästplåt	5
0470	9	98 80 642		CV, RH	1	Attaching plate	Fästplåt	5
0480	10	79 70 312			6	Screw	Skruv	5
0490	10	79 70 262		CV	4	Screw	Skruv	5
0500	11	98 64 430			1	Bracket	Konsol	5
0510	14	84 77 507			2	Clip	Clips	5
0520	16	40 57 360			1	Cable protection	Kabelskydd	4
0530	17	79 22 503			3	Screw	Skruv	5
0540	18	91 66 364			3	Washer	Bricka	5
0550	19	95 36 228			2	Carpet retainer	Matthållare	5
0560	20	42 60 824		210)	4	Clip	Clips	5
0570	20	96 68 153		70)	4	Clip	Clips	5
0580	20	96 75 646		80)	4	Clip	Clips	5
0590	20	95 80 846		90)	4	Clip	Clips	5

70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F22

Head- and pillar lining
Takklädsel,stolpklädsel

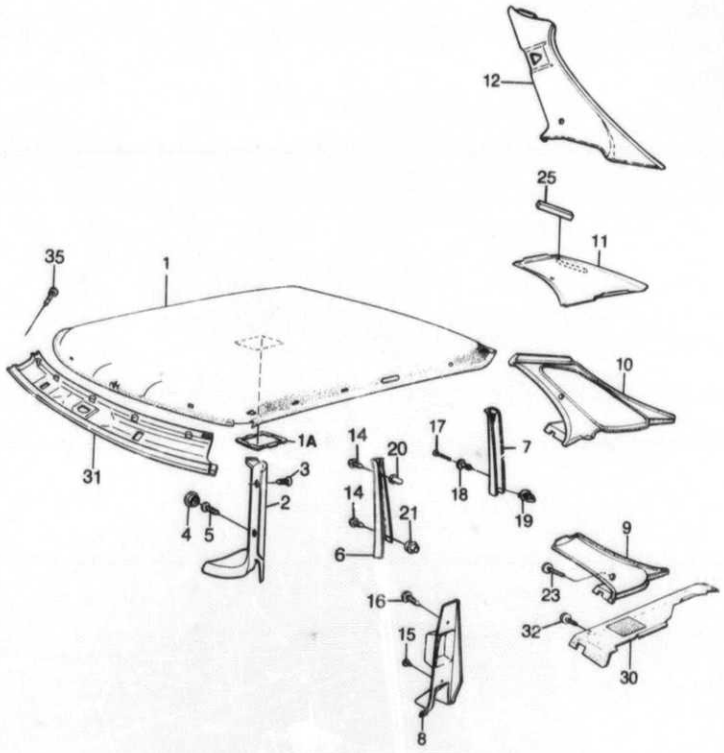

F2851 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*95 36 251*		-1992, 3CK NLS - USE 4272985	1	Head lining	Takklädsel	6
1	42 72 985		1993-, 3CK	1	Head lining	Takklädsel	6
1	*95 36 376*		-1992, 5CK NLS - USE 4272993	1	Head lining	Takklädsel	6
1	42 72 993		1993-, 5CK	1	Head lining	Takklädsel	6
1	*95 36 392*		87), 3CK, SR NLS - USE 4057089, 4273009	1	Head lining	Takklädsel	6
1	*40 56 909*		88), -1992, 3CK, SR NLS - USE 4273009	1	Head lining	Takklädsel	6
1	42 73 009		1993-, 3CK, SR	1	Head lining	Takklädsel	6
1	*95 36 350*		111), 5CK, SR NLS - USE 4057089, 4273017	1	Head lining	Takklädsel	6
1	*40 56 933*		112), 5CK, SR NLS - USE 4273017	1	Head lining	Takklädsel	6
1	*95 36 350*		113), 5CK, SR NLS - USE 4057089, 4273017	1	Head lining	Takklädsel	6
1	*40 56 933*		114), -1992, 5CK, SR NLS - USE 4273017	1	Head lining	Takklädsel	6
1	42 73 017		1993-, 5CK, SR	1	Head lining	Takklädsel	6
1	95 36 277		4SN	1	Head lining	Takklädsel	6
1	*95 36 335*		89), 4SN, SR NLS - USE 4056925, 4057089	1	Head lining	Takklädsel	6
1	40 56 925		91), 4SN, SR	1	Head lining	Takklädsel	6
1	95 36 236		2SN	1	Head lining	Takklädsel	6
1	95 36 293		2SN, SR	1	Head lining	Takklädsel	6
1A	97 56 974			1	▲Protection	▲Skydd	6
1B			CV See page 8A-023, 4-A24	1	Head lining	Takklädsel	
2	40 42 982		110), 1990, LH	1	Crash pad	Stötskydd	6
2	40 42 990		110), 1990, RH	1	Crash pad	Stötskydd	6
2	42 59 560		110), 1991-, LH	1	Crash pad	Stötskydd	6
2	42 59 578		110), 1991-, RH	1	Crash pad	Stötskydd	6
2	40 43 071		110), LH, RHD	1	Crash pad	Stötskydd	6
2	40 43 089		110), RH, RHD	1	Crash pad	Stötskydd	6
2	41 55 297		CV, LH	1	Crash pad	Stötskydd	6
2	41 55 305		CV, RH	1	Crash pad	Stötskydd	6
2	41 55 313		LH, RHD, CV	1	Crash pad	Stötskydd	6
2	41 55 321		RH, RHD, CV	1	Crash pad	Stötskydd	6
3	96 68 153		CV	2	Clip	Clips	5
4	40 44 053		110)	4	Cover washer	Täckbricka	5
5	79 71 294			4	Screw	Skruv	5
6	95 42 002		LH, 2SN, 3CK	1	Crash pad	Stötskydd	6
6	95 42 010		RH, 2SN, 3CK	1	Crash pad	Stötskydd	6
7	95 34 025		LH, 4SN, 5CK	1	Crash pad	Stötskydd	6
7	95 34 033		RH, 4SN, 5CK	1	Crash pad	Stötskydd	6
8	95 42 127		1990, LH, 4SN, 5CK	1	Crash pad	Stötskydd	6
8	*95 42 135*		1990, RH, 4SN, 5CK NLS - USE 4255303	1	Crash pad	Stötskydd	6
8	42 55 295		1991-, LH, 4SN, 5CK	1	Crash pad	Stötskydd	6
8	42 55 303		1991-, RH, 4SN, 5CK	1	Crash pad	Stötskydd	6
9	95 36 517		1990, LH, 3CK	1	Crash pad	Stötskydd	6

87. Ch. --L3004573, --L5001160, --L7011119
88. Ch. L3004574--, L5001161--, L7011120--
89. Ch. --L3004573, --L5002086, --L7014423
91. Ch. L3004574--, L5002087--, L7014424--
110. Black Svart
111. Ch. --L7009796
112. Ch. L7009797--L7011467
113. Ch. L7011468--L7012748
114. Ch. L7012749--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-F24

Head- and pillar lining

Takklädsel,stolpklädsel

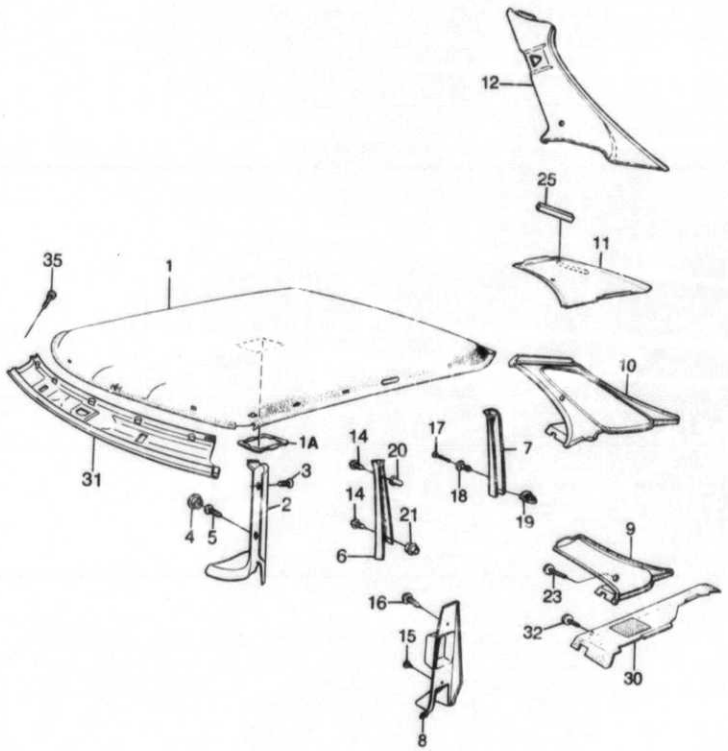

F2851 AAC90

1428	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0450	9	95 36 533		1990, RH, 3CK	1	Crash pad	Stötskydd	6
0460	9	40 58 434		1991-, LH, 3CK	1	Crash pad	Stötskydd	6
0470	9	40 58 442		1991-, RH, 3CK	1	Crash pad	Stötskydd	6
0480	9	95 36 590		34), 1990, LH, 3CK	1	Crash pad	Stötskydd	6
0490	9	95 36 616		34), 1990, RH, 3CK	1	Crash pad	Stötskydd	6
0500	9	40 58 459		34), 1991-, LH, 3CK	1	Crash pad	Stötskydd	6
0510	9	40 58 467		34), 1991-, RH, 3CK	1	Crash pad	Stötskydd	6
0520	10	95 36 772		LH, 5CK	1	Crash pad	Stötskydd	6
0530	10	95 37 572		RH, 5CK	1	Crash pad	Stötskydd	6
0540	11	95 36 673		LH, 4SN	1	Crash pad	Stötskydd	6
0550	11	95 36 699		RH, 4SN	1	Crash pad	Stötskydd	6
0560	12	95 36 418		LH, 2SN	1	Crash pad	Stötskydd	6
0570	12	95 36 434		RH, 2SN	1	Crash pad	Stötskydd	6
0580	12	95 36 459		34), LH, 2SN	1	Crash pad	Stötskydd	6
0590	12	95 36 475		34), RH, 2SN	1	Crash pad	Stötskydd	6
0600	14	95 48 389		2SN, 3CK	4	Clip	Clips	5
0610	15	97 30 995		4SN, 5CK	2	Clip	Clips	5
0620	16	79 73 001		1990, 4SN, 5CK	2	Screw	Skruv	5
0630	16	79 73 001		1991-, 4SN, 5CK	4	Screw	Skruv	5
0640	17	84 76 061		4SN, 5CK	4	Rivet	Nit	5
0650	18	84 76 079		4SN, 5CK	4	Rivet	Nit	
0660	19	84 05 870			2	Clip	Clips	5
0670	20	95 45 906		2SN, 3CK	2	Sleeve	Hylsa	5
0680	21	40 39 715		2SN, 3CK	2	Clip	Clips	5
0690	23	84 54 522			2	Special screw	Snabbskruv	5
0700	25	83 28 817		2SN, 4SN	2	Sealing strip	Tätningslist	5
0710	30	42 61 038		210), 1992-, 3CK, LH	1	Upholstery	Klädsel	5
0720	30	42 61 020		210), 1992-, 3CK, RH	1	Upholstery	Klädsel	5
0730								
0740	30	95 35 659		90,142), 3CK, LH	1	Upholstery	Klädsel	5
0750	30	40 44 749		90,143), -1991, 3CK, LH	1	Upholstery	Klädsel	5
0760	30	42 65 393		90), 1992-, 3CK, LH	1	Upholstery	Klädsel	5
0770	30	95 35 667		90,142), 3CK, RH	1	Upholstery	Klädsel	5
0780	30	40 44 756		90,143), -1991, 3CK, RH	1	Upholstery	Klädsel	5
0790	30	42 65 385		90), 1992-, 3CK, RH	1	Upholstery	Klädsel	5
0800								
0810	30	96 84 085		60,140), 3CK, LH	1	Upholstery	Klädsel	5
0820	30	40 44 228		60,141), -1991, 3CK, LH	1	Upholstery	Klädsel	5
0830	30	96 84 093		60,140), 3CK, RH	1	Upholstery	Klädsel	5
0840	30	40 44 236		60,141), -1991, 3CK, RH	1	Upholstery	Klädsel	5
0850								
0860	30	96 84 101		80,144), 3CK, LH	1	Upholstery	Klädsel	5
0870	30	40 44 400		80,145), -1991, 3CK, LH	1	Upholstery	Klädsel	5
0880	30	42 65 377		80), 1992-, 3CK, LH	1	Upholstery	Klädsel	5
0890	30	96 84 119		80,144), 3CK, RH	1	Upholstery	Klädsel	5
0900	30	40 44 418		80,145), -1991, 3CK, RH	1	Upholstery	Klädsel	5
0910	30	42 65 369		80), 1992-, 3CK, RH	1	Upholstery	Klädsel	5
0920								
0930	30	98 77 341		70,146), 3CK, LH	1	Upholstery	Klädsel	5

34. Opening rear side window Öppningsbar sidoruta
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
140. Ch. --L3007099, --L5002246, --L7018264
141. Ch. L3007100--, L5002247--, L7018265--
142. Ch. --L3006864, --L5002161, --L7021863
143. Ch. L3006865--, L5002162--, L7021864--
144. Ch. --L3007191, --L5002297, --L7022156
145. Ch. L3007192--, L5002298--, L7022157--
146. Ch. --M5002700, --L7018419
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Upholstery

5-G02

Head- and pillar lining

Klädsel

Takklädsel,stolpklädsel

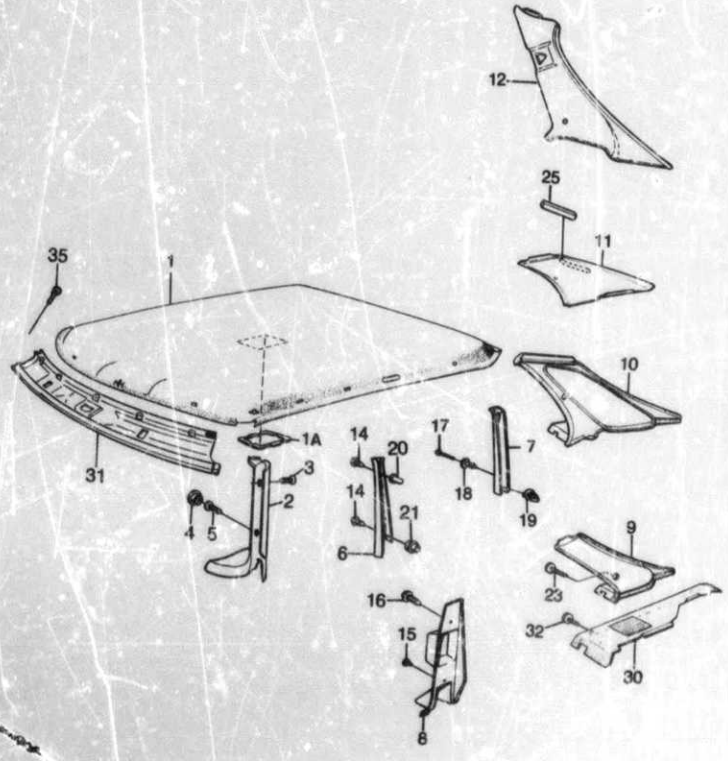

F2851 AAC90

1428	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0940	30	40 44 640		70,147), 3CK, LH	1	Upholstery	Klädsel	5
0950	30	98 77 358		70,146), 3CK, RH	1	Upholstery	Klädsel	5
0960	30	40 44 657		70,147), 3CK, RH	1	Upholstery	Klädsel	5
0970								
0980	30	41 41 313		100), 3CK, LH	1	Upholstery	Klädsel	5
0990	30	41 41 321		100), 3CK, RH	1	Upholstery	Klädsel	5
1000								
1010	30	42 61 079		210), 1992-, 5CK, LH	1	Upholstery	Klädsel	5
1020	30	42 61 061		210), 1992-, 5CK, RH	1	Upholstery	Klädsel	5
1030								
1040	30	95 35 675		90,142), 5CK, LH	1	Upholstery	Klädsel	5
1050	30	40 44 707		90,143), -1991, 5CK, LH	1	Upholstery	Klädsel	5
1060	30	42 65 435		90), 1992-, 5CK, LH	1	Upholstery	Klädsel	5
1070	30	95 35 683		90,142), 5CK, RH	1	Upholstery	Klädsel	5
1080	30	40 44 715		90,143), -1991, 5CK, RH	1	Upholstery	Klädsel	5
1090	30	42 65 427		90), 1992-, 5CK, RH	1	Upholstery	Klädsel	5
1100								
1110	30	96 84 127		60,140), 5CK, LH	1	Upholstery	Klädsel	5
1120	30	40 44 244		60,141), -1991, 5CK, LH	1	Upholstery	Klädsel	5
1130	30	96 84 135		60,140), 5CK, RH	1	Upholstery	Klädsel	5
1140	30	40 44 251		60,141), -1991, 5CK, RH	1	Upholstery	Klädsel	5
1150								
1160	30	96 84 143		80,144), 5CK, LH	1	Upholstery	Klädsel	5
1170	30	40 44 343		80,145), -1991, 5CK, LH	1	Upholstery	Klädsel	5
1180	30	42 65 419		80), 1992-, 5CK, LH	1	Upholstery	Klädsel	5
1190	30	96 84 150		80,144), 5CK, RH	1	Upholstery	Klädsel	5
1200	30	40 44 350		80,145), -1991, 5CK, RH	1	Upholstery	Klädsel	5
1210	30	42 65 401		80), 1992-, 5CK, RH	1	Upholstery	Klädsel	5
1220								
1230	30	98 77 424		70,146), 5CK, LH	1	Upholstery	Klädsel	5
1240	30	40 44 582		70,147), 5CK, LH	1	Upholstery	Klädsel	5
1250	30	98 77 432		70,146), 5CK, RH	1	Upholstery	Klädsel	5
1260	30	40 44 590		70,147), 5CK, RH	1	Upholstery	Klädsel	5
1270								
1280	30	41 41 339		100), 5CK, LH	1	Upholstery	Klädsel	5
1290	30	41 41 347		100), 5CK, RH	1	Upholstery	Klädsel	5
1300								
1310	31	98 81 210		CV	1	Upholstery	Klädsel	6
1320	32	42 61 160		210), 1992-	4	Clip	Clips	5
1330	32	95 35 691		90)	4	Clip	Clips	5
1340	32	97 34 583		60), -1991	4	Clip	Clips	5
1350	32	96 84 403		80)	4	Clip	Clips	5
1360	32	98 77 457		110)	4	Clip	Clips	5
1370	35			See page 8A-123, 4-F04	4	Screw	Skruv	

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
140. Ch. --L3007099, --L5002246, --L7018264
141. Ch. L3007100--, L5002247--, L7018265--
142. Ch. --L3006864, --L5002161, --L7021863
143. Ch. L3006865--, L5002162--, L7021864--
144. Ch. --L3007191, --L5002297, --L7022156
145. Ch. L3007192--, L5002298--, L7022157--
146. Ch. --M5002700, --L7018419
147. Ch. M5002701--, L7018420--
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G04 Front seats Part 1 1990

Stolar Del 1 1990

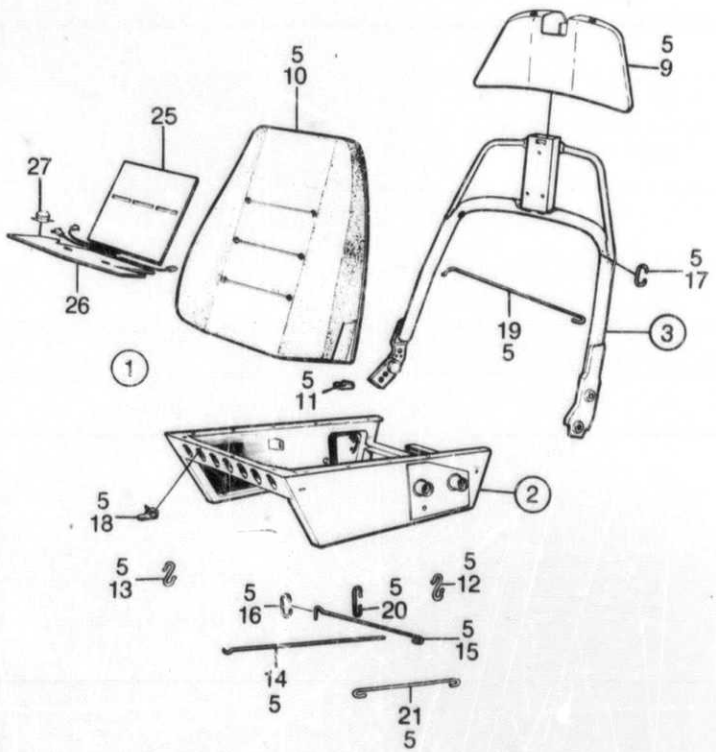

F1239 AAC90

1450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 98 564		37,204), LH, 2SN, 3CK	1	Seat	Stol	6
0020	1	96 98 572		37,204), RH, 2SN, 3CK	1	Seat	Stol	6
0030	1	96 98 580		37,204)RH, RHD, 2SN, 3CK	1	Seat	Stol	6
0040	1	96 98 598		37,204)LH, RHD, 2SN, 3CK	1	Seat	Stol	6
0050	1	96 98 606		37,204), LH, 4SN, 5CK	1	Seat	Stol	6
0060	1	96 98 614		37,204), RH, 4SN, 5CK	1	Seat	Stol	6
0070	1	96 98 622		37,204)RH, RHD, 4SN, 5CK	1	Seat	Stol	6
0080	1	96 98 630		37,204)LH, RHD, 4SN, 5CK	1	Seat	Stol	6
0090								
0100	1	96 98 648		39,204) LH, 2SN, 3CK, CV	1	Seat	Stol	6
0110	1	96 98 655		39,204) RH, 2SN, 3CK, CV	1	Seat	Stol	6
0120	1	96 98 663		39,204)RH,RHD,2SN,3CK,CV	1	Seat	Stol	6
0130	1	96 98 671		39,204)LH,RHD,2SN,3CK,CV	1	Seat	Stol	6
0140	1	96 98 689		39,204), LH, 4SN, 5CK	1	Seat	Stol	6
0150	1	96 98 697		39,204), RH, 4SN, 5CK	1	Seat	Stol	6
0160	1	96 98 705		39,204)RH, RHD, 4SN, 5CK	1	Seat	Stol	6
0170	1	96 98 713		39,204)LH, RHD, 4SN, 5CK	1	Seat	Stol	6
0180								
0190	1	96 98 721		38,204), LH, 2SN, 3CK	1	Seat	Stol	6
0200	1	96 98 739		38,204), RH, 2SN, 3CK	1	Seat	Stol	6
0210	1	96 98 747		38,204)RH, RHD, 2SN, 3CK	1	Seat	Stol	6
0220	1	96 98 754		38,204)LH, RHD, 2SN, 3CK	1	Seat	Stol	6
0230	1	96 98 762		38,204), LH, 4SN, 5CK	1	Seat	Stol	6
0240	1	96 98 770		38,204), RH, 4SN, 5CK	1	Seat	Stol	6
0250	1	96 98 788		38,204)RH, RHD, 4SN, 5CK	1	Seat	Stol	6
0260	1	96 98 796		38,204)LH, RHD, 4SN, 5CK	1	Seat	Stol	6
0270								
0280	2	40 43 170		37,38,150) LH	1	.Seat frame	.Sitsram	6
0290	2	40 43 220		37,38,150) RH	1	.Seat frame	.Sitsram	6
0300	2	40 43 279		37,38,150) RH, RHD	1	.Seat frame	.Sitsram	6
0310	2	40 43 295		37,38,150) LH, RHD	1	.Seat frame	.Sitsram	6
0320	2	40 43 311		39,150) LH	1	.Seat frame	.Sitsram	6
0330	2	40 43 329		39,150) RH	1	.Seat frame	.Sitsram	6
0340	2	40 43 337		39,150) RH, RHD	1	.Seat frame	.Sitsram	6
0350	2	40 43 345		39,150) LH, RHD	1	.Seat frame	.Sitsram	6
0360								
0370	3	98 12 249		150), LH, 2SN, 3CK	1	.Backrest frame	.Ryggram	6
0380	3	98 12 256		150), RH, 2SN, 3CK	1	.Backrest frame	.Ryggram	6
0390	3	98 12 264		150), LH, 4SN, 5CK	1	.Backrest frame	.Ryggram	6
0400	3	98 12 272		150), RH, 4SN, 5CK	1	.Backrest frame	.Ryggram	6
0410	5	96 14 520		41)	1	.Mounting kit	.Monteringssats	6
0420				See page 8B-203, 5-I12				
0430	5	95 30 155		36)	1	.Mounting kit	.Monteringssats	6
0440				See page 8B-203, 5-I12				
0450	5	96 14 546		35)	1	.Mounting kit	.Monteringssats	6
0460				See page 8B-203, 5-I12				
0470	9	97 02 465			1	..Cover	..Kåpa	6
0480	10	96 88 458			1	..Backrest cushion	..Ryggdyna	6
0490	10	98 57 731		35)	1	..Backrest cushion	..Ryggdyna	6
0500	11	94 59 975		36,41)	4	..Clip	..Clips	5
0510	12	97 69 209		36) 40 MM	6	..Hook	..Krok	5
0520	13	97 69 217		36,41) 30 MM	X	..Hook	..Krok	5
0530	14	97 26 795			2	..Cover rod	..Klädselbåge	5
0540	15	98 49 530		41)	1	..Wire rod	..Trådten	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
37. Trim colour C41, E41, F41, G41, J41
38. Trim colour C44, E44, F44, G44, J44, C43, E43, G43, J43
39. Trim colour C33, E33, F33, G33, H33, J33
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
150. See following sections for contents Se följande avsnitt för ingående artiklar
204. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets	5-I12

5-G06 Front seats Part 1 1990

Stolar Del 1 1990

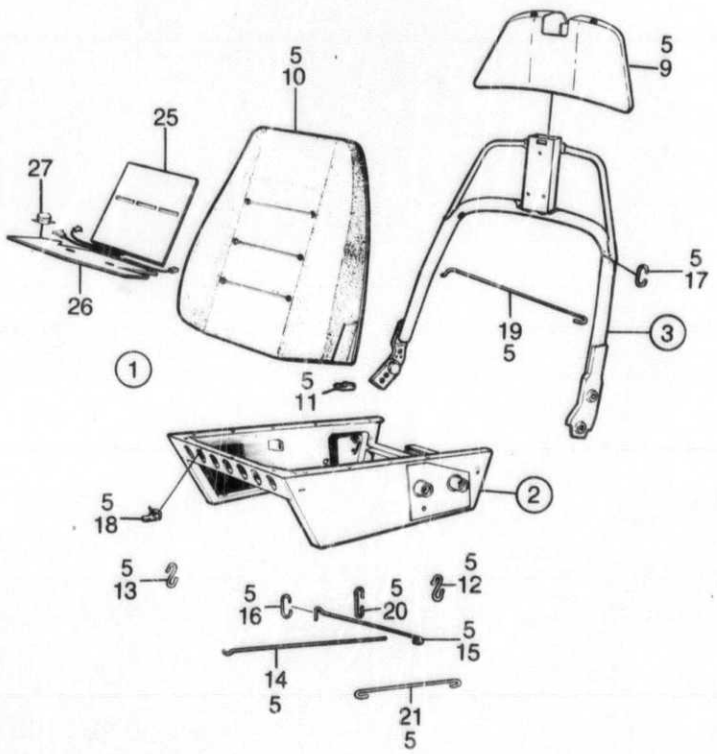

F1239 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
16	94 50 685			X	..Clamp	..Klammer	5
17	94 50 685			X	..Clamp	..Klammer	5
18	84 00 350			10	..Clip	..Clips	5
19	98 49 530		41)	X	..Wire rod	..Trådten	5
20	97 69 209		36) 40 MM	6	..Hook	..Krok	5
21	95 84 731		36)	2	..Wire rod	..Trådten	5
25	95 63 123		36,41)	1	.Heating pad	.Värmedyna	4
25	95 69 955		35)	1	.Heating pad	.Värmedyna	4
26	40 63 749		36,41)	1	.Heating pad	.Värmedyna	4
26	40 63 731		35)	1	.Heating pad	.Värmedyna	4
26	95 63 115		42,36,41)	1	.Heating pad	.Värmedyna	4
26	95 61 440		42,35)	1	.Heating pad	.Värmedyna	4
27	95 24 745			1	..Thermostat	..Termostat	3
	96 14 512		See page 8B-203, 5-I12	1	.Mounting kit	.Monteringssats	6
	96 14 561		See page 8B-153, 5-G10	1	.Mounting kit	.Monteringssats	6


35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
42. For seats with adjustable heating För stolar med justerbar värme

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

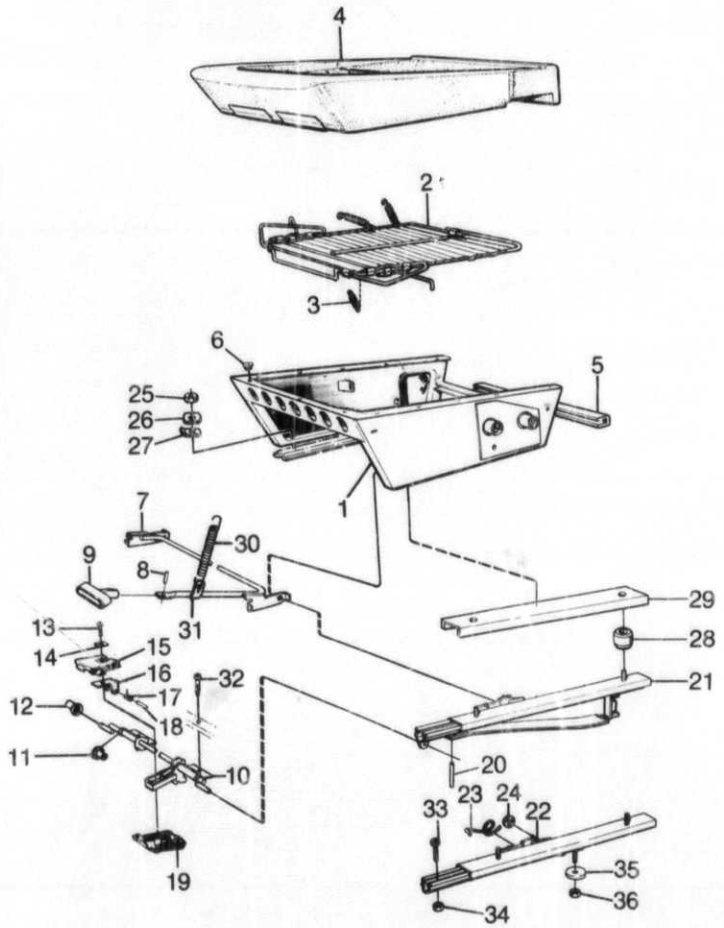

F5449 AAC90

1455	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-147, 5-G04		Seat	Stol	
0020				See page 8B-147, 5-G04		.Seat frame	.Sitsram	
0030	1	40 43 196		LH	1	..Seat frame	..Sitsram	6
0040	1	40 43 246		RH	1	..Seat frame	..Sitsram	6
0060	2	98 78 562			1	..Wire matting	..Resårmatta	6
0080	3	98 37 402			10	..Spring	..Fjäder	6
0090	4	96 88 441		36,41)	1	..Seat cushion	..Sittdyna	6
0095	4	96 82 014		35)	1	..Seat cushion	..Sittdyna	6
0100	5	*94 04 831*		NLS	1	..Crash pad	..Stötskydd	6
0110	6	84 07 983			10	..Bushing	..Bussning	4
0120	7	97 18 297		LH	1	..Control arm	..Reglagearm	6
0130	7	97 18 305		RH	1	..Control arm	..Reglagearm	6
0140	8	79 46 148			1	..Roll pin	..Spännstift	5
0150	9	94 65 956		LH	1	..Handle	..Handtag	5
0160	9	94 88 131		RH	1	..Handle	..Handtag	5
0170	10	97 18 602		LHD	1	..Adjusting shaft	..Justeraxel	6
0180	10	97 18 610		RHD	1	..Adjusting shaft	..Justeraxel	6
0190	11	94 88 370			4	...Bushing	...Bussning	5
0200	12	94 73 349			2	..Bushing	..Bussning	5
0210	13	79 70 262			1	..Screw	..Skruv	5
0220	14	84 25 126			1	..Washer	..Bricka	5
0230	15	84 25 035			1	..Upper part	..Överhalva	5
0240	16	84 25 100			1	..Arm	..Arm	5
0250	17	97 29 724			1	..Spring	..Fjäder	6
0260	18	84 26 173			1	..Pin	..Pinne	5
0270	19	84 25 043			1	..Lower half	..Underhalva	5
0280	20	79 56 212			1	..Roll pin	..Spännstift	5
0290	21	98 33 476		43), LH	1	..Seat rail	..Stolskena	6
0300	21	98 33 484		43), RH	1	..Seat rail	..Stolskena	6
0310	21	98 33 492		43), LH, RHD	1	..Seat rail	..Stolskena	6
0320	21	98 33 500		43), RH, RHD	1	..Seat rail	..Stolskena	6
0330	22	97 18 479		44), LH	1	..Seat rail	..Stolskena	6
0340	22	97 18 487		44), RH	1	..Seat rail	..Stolskena	6
0350	23	94 76 169		LH	1	...Spring	...Fjäder	6
0360	23	94 76 177		RH	1	...Spring	...Fjäder	6
0370	24	94 76 185			1	...Lock washer	...Låsbricka	5
0380	25	81 51 235			4	..Nut	..Mutter	5
0390	26	94 89 758			2	..Washer rear	..Bricka bak	5
0400	27	94 89 766			2	..Washer front	..Bricka fram	5
0405	28	94 73 364			4	..Spacer	..Distans	5
0407	29	94 89 337			2	..Reinforcing bracket	..Förstärkningsprofil	5
0410	30	89 35 751			1	.Spring	.Fjäder	5
0420	31	98 33 971			1	.Clip	.Clips	5
0430	32	97 18 131			2	.Hex. socket screw	.Insexskruv	5
0440	33	97 18 131		44)	2	.Hex. socker screw	.Insexskruv	5
0450	34	98 49 795		44)	1	.Nut	.Mutter	5
0460	35	89 39 449		44)	2	.Washer	.Bricka	5
0470	36	80 74 288		44)	2	.Nut	.Mutter	5


35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
43. Driver seat Förarstol
44. Passenger seat Passagerarstol

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

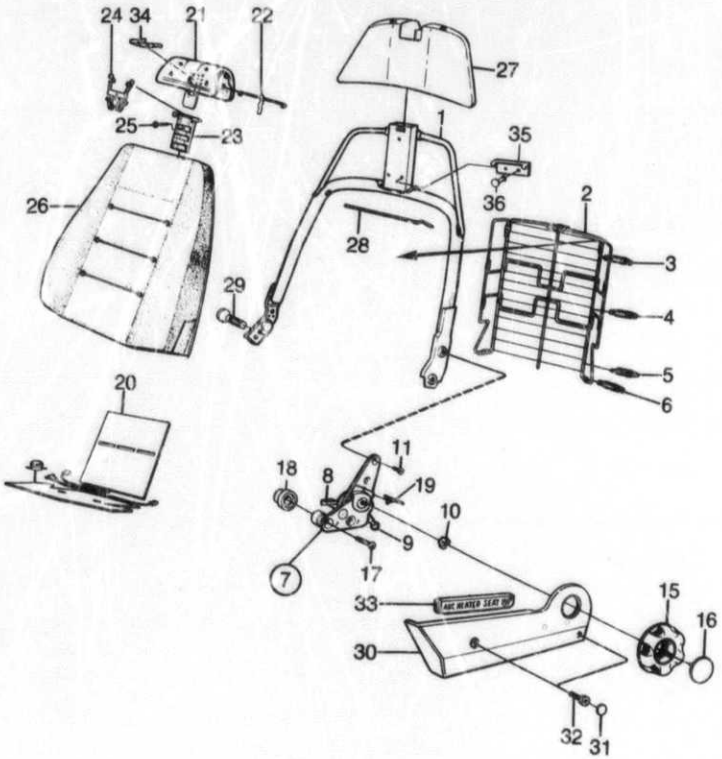

F2853 AAC90

1460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-147, 5-G04	1	Seat	Stol	
0020				See page 8B-147, 5-G04	1	.Backrest frame	.Ryggram	
0030	1	97 46 124		LH	1	..Backrest frame	..Ryggram	6
0040	1	98 12 322		RH	1	..Backrest frame	..Ryggram	6
0050	2	98 78 570			1	..Wire matting	..Resårmatta	6
0070	3	98 37 410			2	..Spring	..Fjäder	6
0080	4	98 37 428			2	..Spring	..Fjäder	6
0090	5	98 37 436			2	..Spring	..Fjäder	6
0100	6	98 37 444			2	..Spring	..Fjäder	6
0110	7	98 35 190		LH, 2SN, 3CK, CV	1	..Reclining seat fitting	..Liggsitsbeslag	6
0120	7	98 35 208		RH, 2SN, 3CK, CV	1	..Reclining seat fitting	..Liggsitsbeslag	6
0130	7	94 56 765		LH, 4SN, 5CK	1	..Reclining seat fitting	..Liggsitsbeslag	6
0140	7	94 56 773		RH, 4SN, 5CK	1	..Reclining seat fitting	..Liggsitsbeslag	6
0150	8	94 87 828		2SN, 3CK	1	...Button	...Knapp	3
0160	9	94 87 810		2SN, 3CK	1	...Button	...Knapp	3
0170	10	94 41 270			1	...Lock washer	...Låsbricka	5
0180	11	79 74 744			2	..Screw	..Skruv	5
0190	15	98 51 601			1	.Steering wheel	.Ratt	5
0195	15	97 04 511		CV	1	.Steering wheel	.Ratt	5
0200	16	98 51 619			1	.Cover	.Täcklock	6
0205	16	94 37 021		CV	1	.Cover	.Täcklock	6
0210	17	97 15 525			2	.Screw	.Skruv	5
0220	18	94 78 066			2	.Washer	.Bricka	5
0230	19	98 37 022			2	.Hook	.Krok	5
0240	20			See page 8B-147, 5-G04		.Heating pad	.Värmedyna	
0255	21	95 42 168			1	.Head restraint	.Nackstöd	6
0260	22	94 59 868			2	.Wire rod	.Trådten	6
0275	23	40 31 563			1	.Sleeve	.Hylsa	5
0280	24	97 96 848			1	.Locking spring	.Spärrfjäder	5
0290	25	79 22 396			1	.Screw	.Skruv	5
0300	26			See page 8B-147, 5-G04		.Backrest cushion	.Ryggdyna	
0310	27			See page 8B-147, 5-G04		.Cover	.Kåpa	
0320	28	94 16 181			1	.Wire rod	.Trådten	5
0335	29	79 81 921			2	.Screw	.Skruv	5
0365	30	95 35 261		90), LH	1	.Cover	.Kåpa	6
0366	30	95 35 279		90), RH	1	.Cover	.Kåpa	6
0390	30	98 13 270		60), LH	1	.Cover	.Kåpa	6
0400	30	98 13 288		60), RH	1	.Cover	.Kåpa	6
0430	30	96 81 891		80), LH	1	.Cover	.Kåpa	6
0440	30	96 81 909		80), RH	1	.Cover	.Kåpa	6
0450	30	98 65 775		110), LH	1	.Cover	.Kåpa	6
0460	30	98 65 783		110), RH	1	.Cover	.Kåpa	6
0480								
0485	31	95 35 287		90)	2	.Cover	.Täcklock	3
0500	31	97 06 466		60)	2	.Cover	.Täcklock	3
0520	31	96 81 917		80)	2	.Plug	.Plugg	3
0530	31	98 65 767		110)	2	.Cover	.Täcklock	3
0535	32	79 70 536			2	.Screw	.Skruv	6
0540	33	98 29 409		"AUTO HEATED SEAT"	1	.Sign	.Skylt	5
0550	34	95 45 104			1	.Clamp	.Klämma	5
0560	35	97 26 779		35)	1	.Attaching bracket	.Fästvinkel	5
0570	36	79 61 642		35)	2	.Rivet	.Nit	5


35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

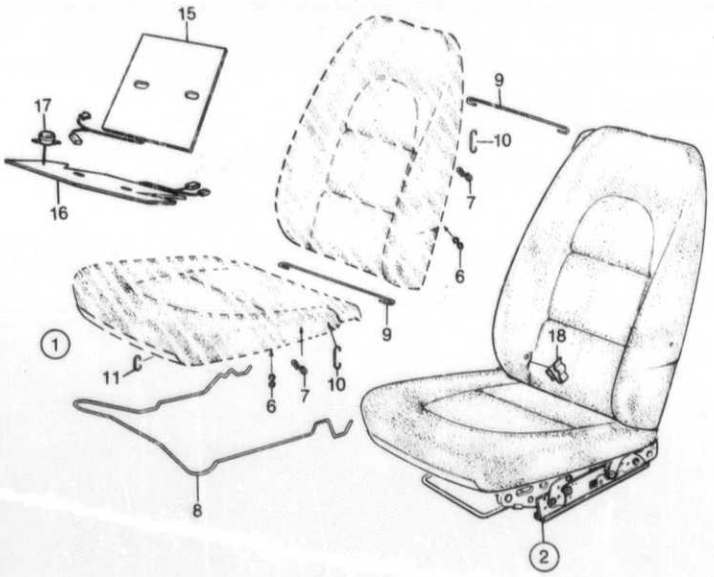

F5450 AAC90

1465	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 68 205		41,204), LH, 3CK	1	Seat	Stol	6
0020	1	43 68 320		41,204), RH, 3CK	1	Seat	Stol	6
0030	1	43 68 262		41,204), LH, 4SN, 5CK	1	Seat	Stol	6
0040	1	43 68 387		41,204), RH, 4SN, 5CK	1	Seat	Stol	6
0050								
0060	1	43 68 338		41,204), LH, RHD, 3CK	1	Seat	Stol	6
0070	1	43 68 213		41,204), RH, RHD, 3CK	1	Seat	Stol	6
0080	1	43 68 395		41,204) LH, RHD, 4SN,5CK	1	Seat	Stol	6
0090	1	43 68 270		41,204) RH, RHD, 4SN,5CK	1	Seat	Stol	6
0100								
0110	1	43 68 189		36,205), LH, 3CK	1	Seat	Stol	6
0120	1	43 68 304		36,205), RH, 3CK	1	Seat	Stol	6
0130	1	43 68 247		36,205), LH, 4SN, 5CK	1	Seat	Stol	6
0140	1	43 68 361		36,205), RH, 4SN, 5CK	1	Seat	Stol	6
0150								
0160	1	43 68 312		36,205), LH, RHD, 3CK	1	Seat	Stol	6
0170	1	43 68 197		36,205), RH, RHD, 3CK	1	Seat	Stol	6
0180	1	43 68 379		36,205) LH, RHD, 4SN,5CK	1	Seat	Stol	6
0190	1	43 68 254		36,205) RH, RHD, 4SN,5CK	1	Seat	Stol	6
0200								
0210	1	43 68 163		35,204), LH, 3CK	1	Seat	Stol	6
0220	1	43 68 288		35,204), RH, 3CK	1	Seat	Stol	6
0230	1	43 68 221		35,204), LH, 4SN, 5CK	1	Seat	Stol	6
0240	1	43 68 346		35,204), RH, 4SN, 5CK	1	Seat	Stol	6
0250								
0260	1	43 68 296		35,204), LH, RHD, 3CK	1	Seat	Stol	6
0270	1	43 68 171		35,204), RH, RHD, 3CK	1	Seat	Stol	6
0280	1	43 68 353		35,204) LH, RHD, 4SN,5CK	1	Seat	Stol	6
0290	1	43 68 239		35,204) RH, RHD, 4SN,5CK	1	Seat	Stol	6
0300								
0310	1	96 99 497		35,204), LH, CV	1	Seat	Stol	6
0320	1	96 99 489		35,204), RH, CV	1	Seat	Stol	6
0330	1	96 99 505		35,204), LH, RHD, CV	1	Seat	Stol	6
0340	1	96 99 471		35,204), RH, RHD, CV	1	Seat	Stol	6
0350								
0360	2	40 59 960		36,41,150) LH, 3CK	1	.Seat frame	.Stolram	6
0370	2	41 23 048		36,41,150) RH, 3CK	1	.Seat frame	.Stolram	6
0380	2	40 59 978		36,41,150) RH, RHD, 3CK	1	.Seat frame	.Stolram	6
0390	2	41 23 055		36,41,150) LH, RHD, 3CK	1	.Seat frame	.Stolram	6
0400	2	40 59 846		36,41,150) LH, 4SN, 5CK	1	.Seat frame	.Stolram	6
0410	2	40 59 929		36,41,150) RH, 4SN, 5CK	1	.Seat frame	.Stolram	6
0420	2	40 59 853		36,41,150)RH,RHD,4SN,5CK	1	.Seat frame	.Stolram	6
0430	2	40 59 937		36,41,150)LH,RHD,4SN,5CK	1	.Seat frame	.Stolram	6
0440								
0450	2	40 59 986		35,150) LH, 3CK	1	.Seat frame	.Stolram	6
0460	2	41 23 063		35,150) RH, 3CK	1	.Seat frame	.Stolram	6
0470	2	42 55 139		35,150) LH, CV	1	.Seat frame	.Stolram	6
0480	2	42 55 170		35,150) RH, CV	1	.Seat frame	.Stolram	6
0490	2	40 59 994		35,150) RH, RHD, 3CK	1	.Seat frame	.Stolram	6
0500	2	41 23 071		35,150) LH, RHD, 3CK	1	.Seat frame	.Stolram	6
0510	2	42 55 154		35,150) RH, RHD, CV	1	.Seat frame	.Stolram	6
0520	2	42 55 196		35,150) LH, RHD, CV	1	.Seat frame	.Stolram	6
0530	2	40 59 861		35,150) LH, 4SN, 5CK	1	.Seat frame	.Stolram	6
0540	2	40 59 945		35,150) RH, 4SN, 5CK	1	.Seat frame	.Stolram	6

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
150. See following sections for contents Se följande avsnitt för ingående artiklar
204. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).
205. State upholstery colour, ch No, the type of heating pad (the rmostat or rheostat) and if the seat is with or without pocket. Uppge klädselfärg, ch nr, vilken typ av värmedyna (termostat eller reostat) och om stolen är med eller utan ficka.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A26
Other interior equipment	5-G04
Complete sets:	5-I12

5-G14

Front seats Part 1 1991-

Stolar Del 1 1991-

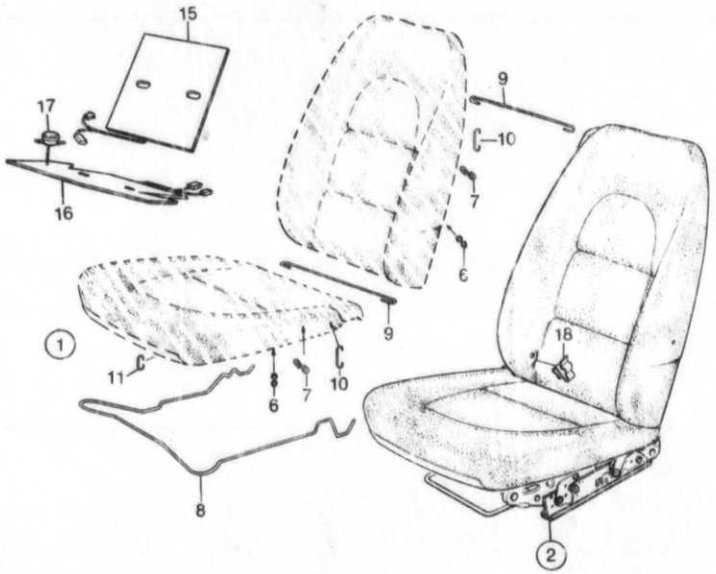

F5450 AAC90

1465	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	2	40 59 879		35,150)RH, RHD, 4SN, 5CK	1	.Seat frame	.Stolram	6
0560	2	40 59 952		35,150)LH, RHD, 4SN, 5CK	1	.Seat frame	.Stolram	6
0570								
0580	6	97 69 225		35), 20 MM	X	.Hook	.Krok	5
0590	7	97 69 217		30 MM	X	.Hook	.Krok	5
0600	8	40 55 117		LH	1	.Cover rod	.Klädselbåge	5
0610	8	41 23 394		RH	1	.Cover rod	.Klädselbåge	5
0620	9	97 81 592			2	.Cover rod	.Klädselbåge	5
0630	10	97 69 209		40 MM	X	.Hook	.Krok	5
0640	11	94 50 685			X	.Clamp	.Klammer	5
0650	15	95 19 877		36,41), -1992	1	.Heating pad	.Värmedyna	4
0660	15	40 83 028		36,41), 1993-	1	.Heating pad	.Värmedyna	4
0670	15	95 69 955		35)	1	.Heating pad	.Värmedyna	4
0680	16	40 63 871		42,36,41)	1	.Heating pad	.Värmedyna	4
0690	16	40 63 855		42,35)	1	.Heating pad	.Värmedyna	4
0700	16	40 63 863		36,41)	1	.Heating pad	.Värmedyna	4
0710	16	40 63 848		35)	1	.Heating pad	.Värmedyna	4
0720	17	95 24 745			1	..Thermostat	..Termostat	3
0730	18	*92 67 782*		3CK, CV NLS	1	.Cable clamp	.Kabelklämma	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
42. For seats with adjustable heating För stolar med justerbar värme
150. See following sections for contents Se följande avsnitt för ingående artiklar

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G16

Front seats Part 2 1991-

Stolar Del 2 1991-

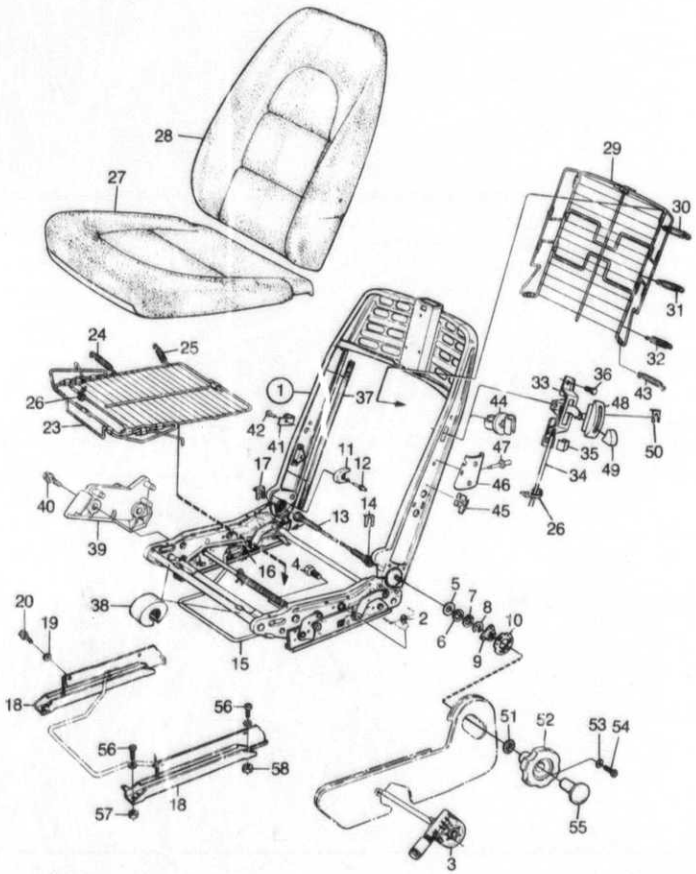

F3767 - AAC90

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-155, 5-G12		Seat	Stol	
0020				See page 8B-155, 5-G12		.Seat frame	.Stolram	
0030	1	41 23 113		LH, 3CK, CV	1	..Seat frame	..Stolram	6
0040	1	41 31 744		RH, 3CK, CV	1	..Seat frame	..Stolram	6
0050	1	41 23 121		RH, RHD, 3CK, CV	1	..Seat frame	..Stolram	6
0060	1	41 31 728		LH, RHD, 3CK, CV	1	..Seat frame	..Stolram	6
0070								
0080	1	41 23 089		LH, 4SN, 5CK	1	..Seat frame	..Stolram	6
0090	1	41 23 105		RH, 4SN, 5CK	1	..Seat frame	..Stolram	6
0100	1	41 23 097		RH, RHD, 4SN, 5CK	1	..Seat frame	..Stolram	6
0110	1	41 31 736		LH, RHD, 4SN, 5CK	1	..Seat frame	..Stolram	6
0120								
0130	2	96 78 434		43)	2	...Stop ring	...Stoppring	5
0140	3	96 58 584		43)	1	...Control	...Reglage	6
0150	3	96 58 592		43), RHD	1	...Control	...Reglage	6
0160	4	80 19 713		43)	2	...Screw	...Skruv	5
0170	5	95 86 967			1	...Washer	...Bricka	5
0180	6	95 86 975			1	...Ring	...Ring	5
0190	7	95 86 983			1	...Washer	...Bricka	5
0200	8	79 36 016			1	...E-circlip	...Spårryttare	5
0210	9	95 85 613			1	...Brake	...Broms	6
0220	10	40 43 394			1	...Spring clamp	...Fjäderklämma	6
0230	11	40 52 742		LH, 3CK, CV	1	...Cover	...Kåpa	6
0240	11	40 52 734		RH, 3CK, CV	1	...Cover	...Kåpa	6
0245	12	79 61 741		3CK, CV	2	...Rivet	...Nit	5
0250	13	95 38 687		3CK, CV	1	...Shaft	...Axel	6
0260	13	95 86 249		4SN, 5CK	1	...Shaft	...Axel	6
0270	14	97 77 327			2	...E-circlip	...Spårryttare	5
0280	15	96 59 012		43)	1	...Shaft	...Axel	6
0290	15	96 59 020		44)	1	...Shaft	...Axel	6
0300	16	73 98 282			2	...Washer	...Bricka	5
0310	17	79 63 143		43)	1	...E-circlip	...Spårryttare	5
0315	18			43,172)	1	...Seat rail	...Stolskena	
0320	18	41 34 672		44), LH	1	...Seat rail	...Stolskena	6
0330	18	41 34 680		44), RH	1	...Seat rail	...Stolskena	6
0340	19	79 16 497		44)	4	...Washer	...Bricka	5
0350	20	79 72 623		44)	4	...Screw	...Skruv	5
0360	23	40 32 934			1	..Wire matting	..Resårmatta	6
0370	24	96 73 146			6	..Spring	..Fjäder	6
0380	25	96 73 435			2	..Spring	..Fjäder	6
0390	26	79 71 872			X	..Tensioning band	..Spännband	5
0400	27	*96 96 618*		36,41), -1992 NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
0400								
0405	27	44 16 525		36,41), 1993-	1	..Seat cushion	..Sittdyna	6
0410	27	96 77 014		35)	1	..Seat cushion	..Sittdyna	6
0420	28	*96 96 600*		36,41) NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
0430	28	96 18 687		35), 3CK	1	..Backrest cushion	..Ryggdyna	6
0440	28	42 56 319		35), CV	1	..Backrest cushion	..Ryggdyna	6
0450	28	97 58 715		35), 4SN, 5CK	1	..Backrest cushion	..Ryggdyna	6
0460	29	96 97 525			1	..Wire matting	..Resårmatta	6
0470	30	97 59 069			2	..Spring	..Fjäder	6
0480	31	97 59 077			2	..Spring	..Fjäder	6
0490	32	97 71 205			2	..Spring	..Fjäder	6
0500	33	*96 18 836*		198), 3CK NLS - USE 4313607	1	..Release mechanism	..Frigörningsmekanism	6
0500								

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
43. Driver seat Förarstol
44. Passenger seat Passagerarstol
172. Part of pos 1 seat frame Ingår i pos 1 stolram
198. Ch. -N7001862

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G18

Front seats Part 2 1991-

Stolar Del 2 1991-

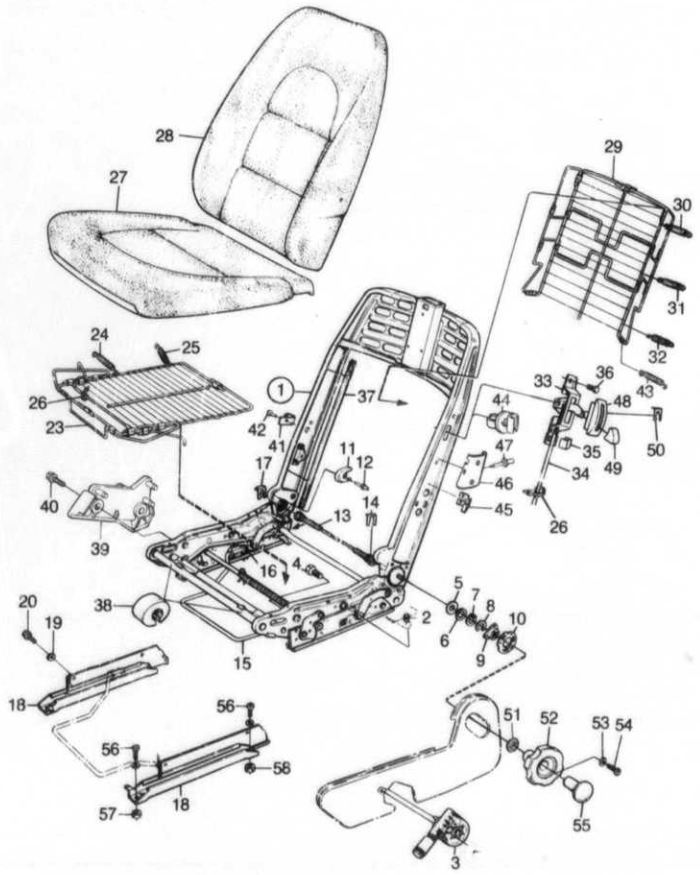

F3767 - AAC90

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0505	33	43 13 607		199), 3CK	1	..Release mechanism	..Frigörningsmekanism	6
0510	33	*41 42 030*		196), CV NLS - USE 4313607	1	..Release mechanism	..Frigörningsmekanism	6
0515	33	43 13 607		197), CV	1	..Release mechanism	..Frigörningsmekanism	6
0520	34	98 74 504		3CK	1	..Cable	..Wire	5
0522	34			1,196,245), CV	1	..Cable	..Wire	
0525	34	41 70 072		197), CV	1	..Cable	..Wire	6
0530	35	95 42 077		3CK, CV	X	..Cable holder	..Kabelhållare	5
0540	36	79 74 330		3CK	2	..Screw	..Skruv	5
0550	36	82 35 178		CV	2	..Pop rivet	..Popnit	5
0560	37	95 41 533		3CK, CV	2	..Protecting moulding	..Skyddslist	6
0570	37	96 71 835		4SN, 5CK	2	..Protecting moulding	..Skyddslist	6
0580	38	40 33 486			2	..Rubber spacer	..Gummidistans	5
0590	39	41 42 832		181), LH	1	..Support	..Stöd	6
0600	39	41 42 824		181), RH	1	..Support	..Stöd	6
0610	40	79 22 354		181)	2	..Screw	..Skruv	5
0620	41	97 78 895			2	..Brace	..Bygel	5
0630	42	79 72 516			2	..Rivet	..Nit	5
0635	42	79 72 516		CV	1	..Rivet	..Nit	5
0640	43	41 34 219		3CK, CV	2	..Spring	..Fjäder	6
0650	43	97 59 069		4SN, 5CK	2	..Spring	..Fjäder	6
0660	44	84 44 614		196), CV	1	..Guide	..Styrning	5
0670	45	42 56 517		196), CV	1	..Brace	..Bygel	5
0680	46	41 42 022		196), CV	1	..Cap	..Skydd	6
0690	47	79 72 490		196), CV	2	..Rivet	..Nit	5
0700	48	98 74 801		3CK, CV	1	.Slide	.Slid	6
0710	49	98 74 819		3CK, CV	1	.Knob	.Knopp	3
0720	50	96 86 841		3CK, CV	1	.Clamp	.Klämma	5
0730	51	95 89 045			1	.Reinforcement	.Förstärkning	5
0740	52	95 46 946			1	.Hand wheel	.Ratt	5
0745	52	41 68 118		CV	1	.Hand wheel	.Ratt	5
0750	53	80 29 951		-1992	1	.Washer	.Bricka	5
0755	53	91 66 364		1993-	1	.Washer	.Bricka	5
0760	54	80 59 560			1	.Screw	.Skruv	5
0770	55	98 51 619			1	.Cover	.Täcklock	6
0780	56	41 34 003			4	.Screw	.Skruv	5
0790	57	79 77 846			2	.Cage nut	.Korgmutter	6
0800	58	96 19 032			1	.Nut inner	.Mutter inre	5
0810								
0820	58	96 19 040			1	.Nut outer	.Mutter yttre	5
0830								

1. Not as separate spare part. Ej som separat reservdel.
181. Ch. --M5006484, --M7013293
196. Ch. --M7018049
197. Ch. M7018050--
199. Ch. M2500001--, N7001863--
245. Part of: 4142030 Ingår i: 4142030

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G20

Front seats Part 3 1991-

Stolar Del 3 1991-

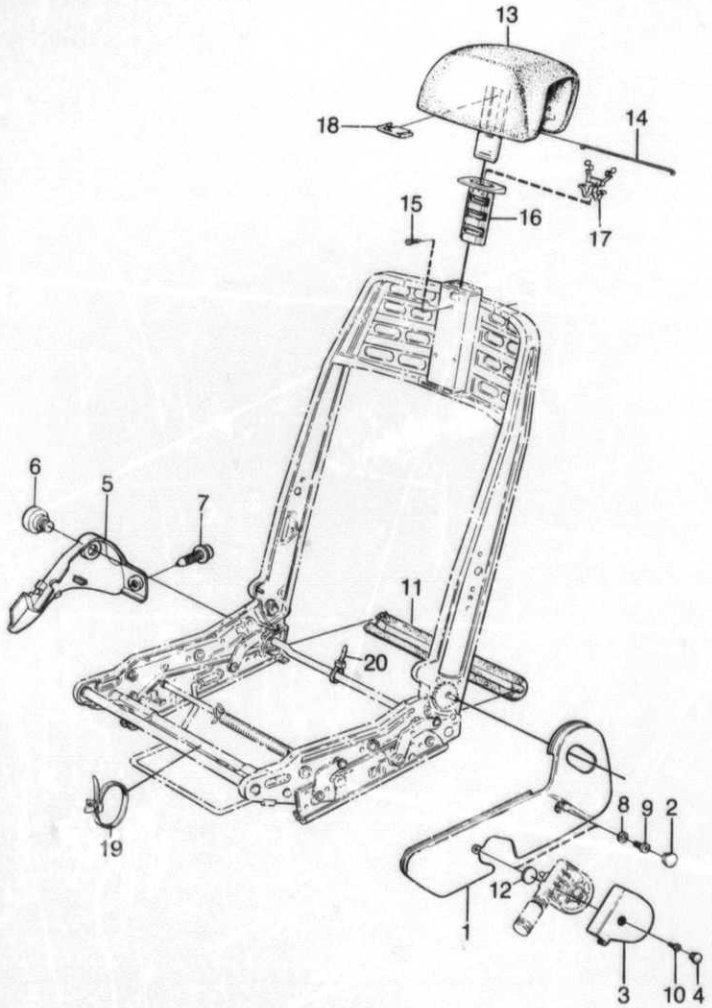

F3092 AAC90

1475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-155, 5-G12		Seat	Stol	
0020	1	41 23 451		43)	1	.Cover	.Kåpa	6
0025	1	41 23 576		44)	1	.Cover	.Kåpa	6
0030	1	41 23 493		43), RHD	1	.Cover	.Kåpa	6
0050	1	41 23 535		44), RHD	1	.Cover	.Kåpa	6
0100								
0110	2	42 59 750		43)	1	.Cover	.Täcklock	6
0115	2	42 59 750		44)	2	.Cover	.Täcklock	6
0200	3	98 93 009		43)	1	.Cover	.Kåpa	6
0210	3	98 93 017		43), RHD	1	.Cover	.Kåpa	6
0240	4	98 93 033		43)	1	.Cover	.Täcklock	6
0280								
0290	5	41 29 342		LH	1	.Cover	.Kåpa	6
0295	5	41 26 850		RH	1	.Cover	.Kåpa	6
0300	6	41 34 227			1	.Screw	.Skruv	5
0305	7	79 72 821			1	.Screw	.Skruv	5
0410								
0420	8	80 29 951		-1992,44)	2	.Washer	.Bricka	5
0425	8	91 66 364		1993-,44)	2	.Washer	.Bricka	5
0430	9	80 59 537		43)	2	.Screw	.Skruv	5
0440	9	79 71 294		44)	2	.Screw	.Skruv	5
0450	10	79 22 354		43)	1	.Screw	.Skruv	5
0460	11	97 92 391			1	.Crash pad	.Stötskydd	6
0470	12	98 92 654		43)	1	.Cover	.Täcklock	3
0527	13	41 23 386			1	.Head restraint	.Nackstöd	6
0530	14	94 59 868			2	.Wire rod	.Trådten	6
0540	15	79 22 396			1	.Screw	.Skruv	5
0555	16	40 31 563			1	.Sleeve	.Hylsa	5
0560	17	97 96 848			1	.Locking spring	.Spärrfjäder	5
0570	18	95 45 104			1	.Clamp	.Klämma	5
0580	19	85 52 663			X	.Tensioning band	.Spännband	5
0590	20	79 71 872			X	.Tensioning band	.Spännband	5

43. Driver seat Förarstol
44. Passenger seat Passagerarstol
199. Ch. M2500001-, N7001863-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G22

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

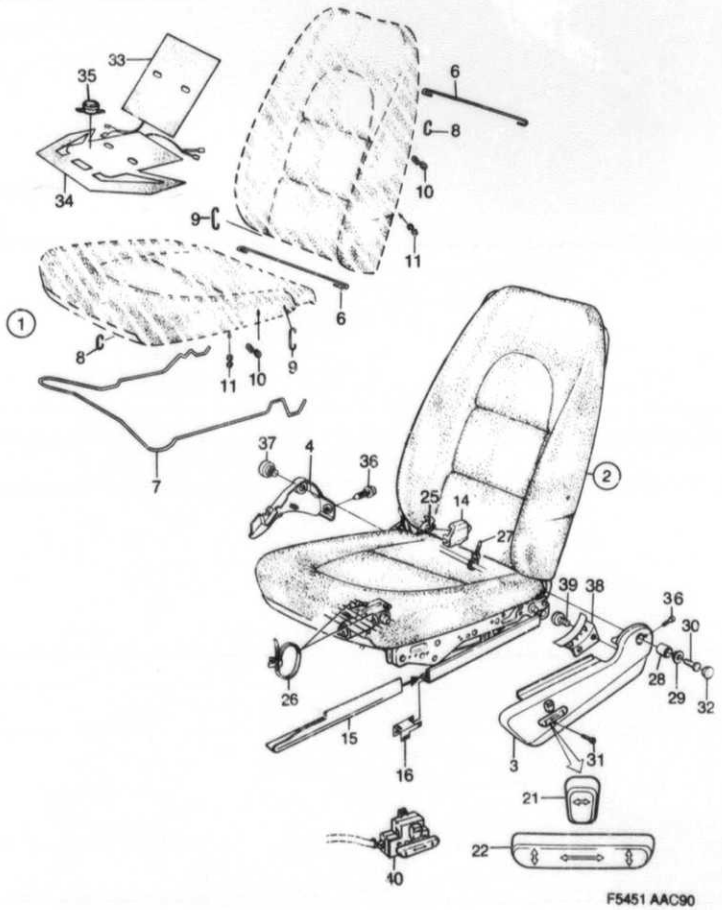

F5451 AAC90

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 68 429		41,204), LH, 3CK	1	Seat	Stol	6
0020	1	43 68 452		41,204), RH, 3CK	1	Seat	Stol	6
0030	1	43 68 486		41,204), LH, 4SN, 5CK	1	Seat	Stol	6
0040	1	43 68 510		41,204), RH, 4SN, 5CK	1	Seat	Stol	6
0050								
0060	1	43 68 411		36,205), LH, 3CK	1	Seat	Stol	6
0070	1	43 68 445		36,205), RH, 3CK	1	Seat	Stol	6
0080	1	43 68 478		36,205), LH, 4SN, 5CK	1	Seat	Stol	6
0090	1	43 68 502		36,205), RH, 4SN, 5CK	1	Seat	Stol	6
0100								
0110	1	43 68 403		35,204), LH, 3CK	1	Seat	Stol	6
0120	1	43 68 437		35,204), RH, 3CK	1	Seat	Stol	6
0130	1	43 68 460		35,204), LH, 4SN, 5CK	1	Seat	Stol	6
0140	1	43 68 494		35,204), RH, 4SN, 5CK	1	Seat	Stol	6
0150								
0160	1	96 99 455		35,204), LH, CV	1	Seat	Stol	6
0170	1	96 99 463		35,204), RH, CV	1	Seat	Stol	6
0180								
0190	2	41 23 352		36,41,150), LH, 3CK	1	.Seat frame	.Stolram	6
0200	2	41 23 360		36,41,150), RH, 3CK	1	.Seat frame	.Stolram	6
0210	2	41 23 311		36,41,150), 4SN, 5CK	1	.Seat frame	.Stolram	6
0220	2	41 23 337		35,150), LH, 3CK	1	.Seat frame	.Stolram	6
0230	2	41 23 345		35,150), RH, 3CK	1	.Seat frame	.Stolram	6
0240	2	42 55 097		35,150), LH, CV	1	.Seat frame	.Stolram	6
0250	2	42 55 113		35,150), RH, CV	1	.Seat frame	.Stolram	6
0260	2	41 23 295		35,150), 4SN, 5CK	1	.Seat frame	.Stolram	6
0270								
3280	3	95 92 403		LH	1	.Cover	.Kåpa	6
0290	3	95 92 452		RH	1	.Cover	.Kåpa	6
0300	4	41 29 342		LH	1	.Cover	.Kåpa	6
0310	4	41 26 850		RH	1	.Cover	.Kåpa	6
0320	6	97 81 592			2	.Cover rod	.Klädselbåge	5
0330	7	40 55 117		LH	1	.Cover rod	.Klädselbåge	5
0340	7	41 23 394		RH	1	.Cover rod	.Klädselbåge	5
0350	8	94 50 685			X	.Clamp	.Klammer	5
0360	9	97 69 209		40 MM	X	.Hook	.Krok	5
0370	10	97 69 217		30 MM	X	.Hook	.Krok	5
0380	11	97 69 225		20 MM	X	.Hook	.Krok	5
0390	14	40 34 054		LH	1	.Cover	.Kåpa	5
0400	14	40 34 047		RH	1	.Cover	.Kåpa	5
0410	15	96 95 909		LH	1	.Cover	.Kåpa	6
0420	15	96 95 917		RH	1	.Cover	.Kåpa	6
0430	16	41 24 228		LHD	1	.Stop bracket drivers seat	.Stoppkonsol förarstol	5
0440								
0450	16	40 59 671		LHD	1	.Stop bracket passenger seat	.Stoppkonsol passagerarstol	5
0460								
0470	21	95 65 003			1	.Button	.Knapp	5
0480	22	95 65 011			1	.Button	.Knapp	5
0490	25	*92 67 782*		3CK, CV NLS	1	.Cable clamp	.Kabelklämma	5
0500	26	85 52 663			3	.Tensioning band	.Spännband	5
0510	27	79 71 872			4	.Tensioning band	.Spännband	5
0520	28	84 58 598			2	.Sleeve	.Hylsa	5
0530	29	96 18 232			1	.Spacer	.Distans	5
0540	30	80 59 412			1	.Screw	.Skruv	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
150. See following sections for contents Se följande avsnitt för ingående artiklar
204. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).
205. State upholstery colour, ch No, the type of heating pad (the rmostat or rheostat) and if the seat is with or without pocket. Uppge klädselfärg, ch nr, vilken typ av värmedyna (termostat eller reostat) och om stolen är med eller utan ficka.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-G24

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

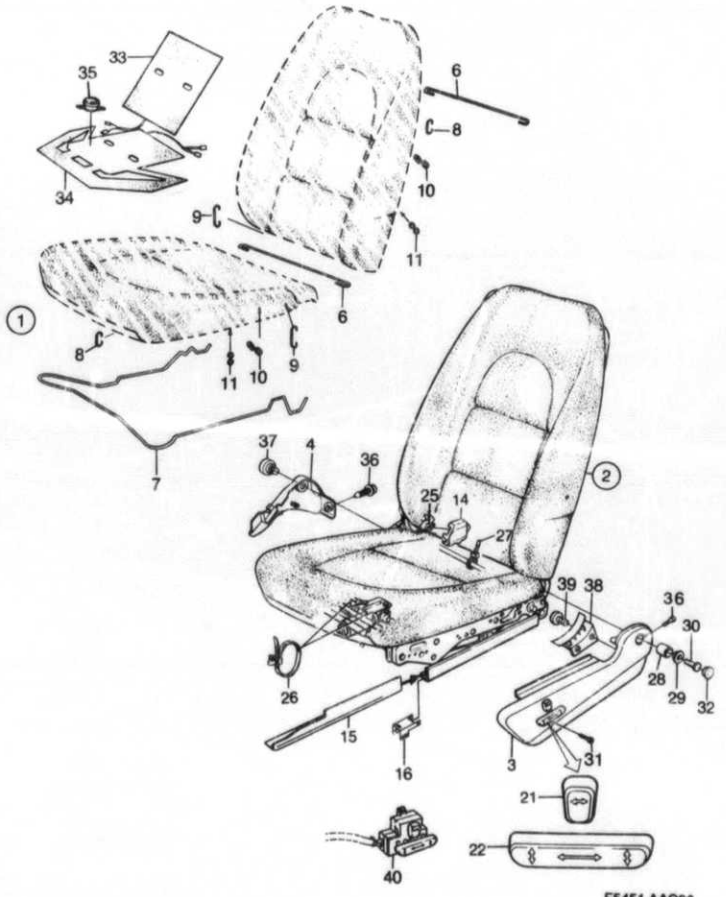

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	31	79 71 401			1	.Screw	.Skruv	5
0560	32	95 92 700			1	.Cover	.Täcklock	6
0570	33	95 19 877		36,41)	1	.Heating pad	.Värmedyna	4
0580	33	95 69 955		35)	1	.Heating pad	.Värmedyna	4
0590	34	40 63 871		42,36,41)	1	.Heating pad	.Värmedyna	4
0600	34	40 63 855		42,35)	1	.Heating pad	.Värmedyna	4
0610	34	40 63 863		36,41)	1	.Heating pad	.Värmedyna	4
0620	34	40 63 848		35)	1	.Heating pad	.Värmedyna	4
0630	35	95 24 745			1	..Thermostat	..Termostat	3
0640	36	79 72 321			2	.Screw	.Skruv	5
0650	37	41 34 227			1	.Screw	.Skruv	5
0660	38	41 23 691		LH	1	.Cover	.Täcklock	4
0670	38	41 23 733		RH	1	.Cover	.Täcklock	4
0680	39	40 87 102			2	.Screw	.Skruv	5
0690	40			See page 8B-169, 5-H02	1	.Switch	.Strömställare	

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
42. For seats with adjustable heating För stolar med justerbar värme

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H02

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

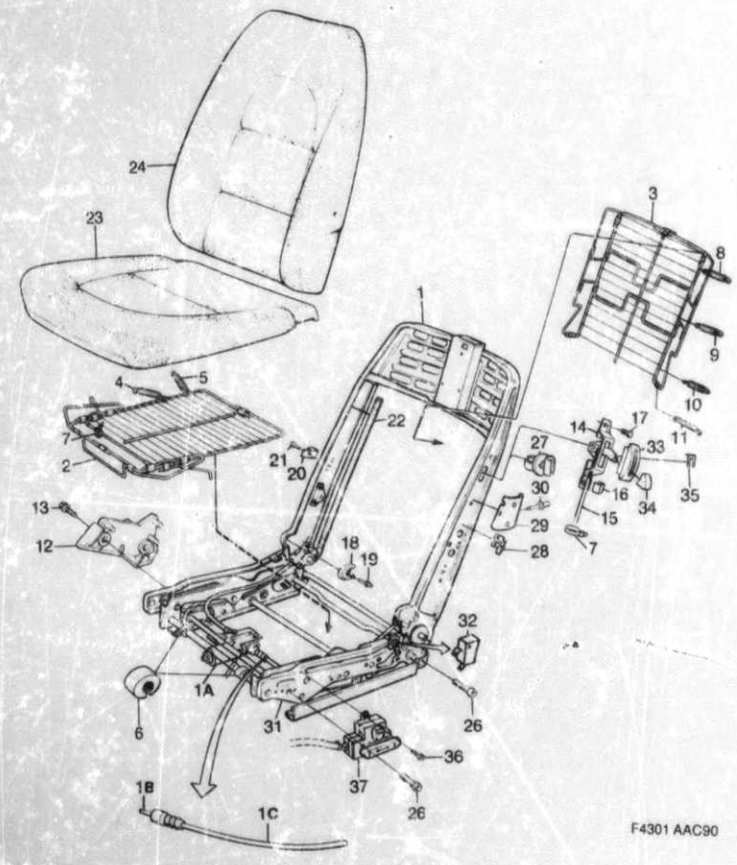

F4301 AAC90

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-165, 5-G22		Seat	Stol	
0020				See page 8B-165, 5-G22		.Seat frame	.Stolram	
0030	1	41 23 378		3CK, CV	1	..Seat frame	..Stolram	6
0040	1	41 31 751		4SN, 5CK	1	..Seat frame	..Stolram	6
0050	1A	96 95 768			1	...Electric motor	...Elmotor	
0060	1B	95 79 715		LH	1	...Drive shaft	...Drivaxel	6
0070	1B	95 42 317		RH	1	...Drive shaft	...Drivaxel	6
0080	1C	95 42 309			2	...Outer casing	...Hölje	6
0090	2	40 32 934			1	..Wire matting	..Resårmatta	6
0100	3	96 97 525			1	..Wire matting	..Resårmatta	6
0110	4	96 73 146			6	..Spring	..Fjäder	6
0120	5	96 73 435			2	..Spring	..Fjäder	6
0130	6	40 33 486			2	..Rubber spacer	..Gummidistans	5
0140	7	79 71 872			X	..Tensioning band	..Spännband	5
0150	8	97 59 069			2	..Spring	..Fjäder	6
0160	9	97 59 077			2	..Spring	..Fjäder	6
0170	10	97 71 205			2	..Spring	..Fjäder	6
0180	11	41 34 219		3CK, CV	2	..Spring	..Fjäder	6
0190	11	97 59 069		4SN, 5CK	2	..Spring	..Fjäder	6
0200	12	41 42 832		LH	1	..Support	..Stöd	6
0210	12	41 42 824		RH	1	..Support	..Stöd	6
0220	13	79 22 354			2	..Screw	..Skruv	5
0230	14	*96 18 836*		198), 3CK NLS - USE 4313607	1	..Release mechanism	..Frigörningsmekanism	6
0240	14	43 13 607		199), 3CK	1	..Release mechanism	..Frigörningsmekanism	6
0250	14	*41 42 030*		196), CV NLS - USE 4313607	1	..Release mechanism	..Frigörningsmekanism	6
0260	14	43 13 607		197), CV	1	..Release mechanism	..Frigörningsmekanism	6
0270	15	98 74 504		3CK	1	..Cable	..Wire	5
0280	15	41 70 072		197), CV	1	..Cable	..Wire	6
0290	16	95 42 077		3CK, CV	X	..Cable holder	..Kabelhållare	5
0300	17	79 74 330		3CK	2	..Screw	..Skruv	5
0310	17	92 35 178		CV	2	..Pop rivet	..Popnit	5
0320	18	40 52 742		LH, 3CK, CV	1	..Cover	..Kåpa	6
0330	18	40 52 734		RH, 3CK, CV	1	..Cover	..Kåpa	6
0340	19	79 61 741		3CK, CV	2	..Rivet	..Nit	5
0350	20	97 78 895			2	..Brace	..Bygel	5
0360	21	79 72 516			2	..Rivet	..Nit	5
0370	21	79 72 516		CV	1	..Rivet	..Nit	5
0380	22	95 41 533		3CK, CV	2	..Protecting moulding	..Skyddslist	6
0390	22	96 71 835		4SN, 5CK	2	..Protecting moulding	..Skyddslist	6
0400	23	*96 96 618*		36,41), -1992 NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
0410	23	44 16 525		36,41), 1993-	1	..Seat cushion	..Sittdyna	6
0420	23	96 77 014		35)	1	..Seat cushion	..Sittdyna	6
0430	24	*96 96 600*		36,41) NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
0440	24	96 18 687		35), 3CK	1	..Backrest cushion	..Ryggdyna	6
0450	24	42 56 319		35), CV	1	..Backrest cushion	..Ryggdyna	6
0460	24	97 58 345		35), 4SN 5CK	1	..Backrest cushion	..Ryggdyna	6
0470	26	80 59 826			4	..Screw	..Skruv	5
0480	27	84 44 614		196), CV	1	..Guide	..Styrning	5
0490	28	42 56 517		196), CV	1	..Brace	..Bygel	5
0500	29	41 42 022		196), CV	1	..Cap	..Skydd	6
0510	30	79 72 490		196), CV	2	..Rivet	..Nit	5
0520	31			See page 8B-173, 5-H06		..Seat frame	..Stolschassi	
0530	32	40 36 299			1	.Switch	.Brytare	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
196. Ch. --M7018049
197. Ch. M7018050--
198. Ch. --N7001862
199. Ch. M2500001--, N7001863--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H04

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

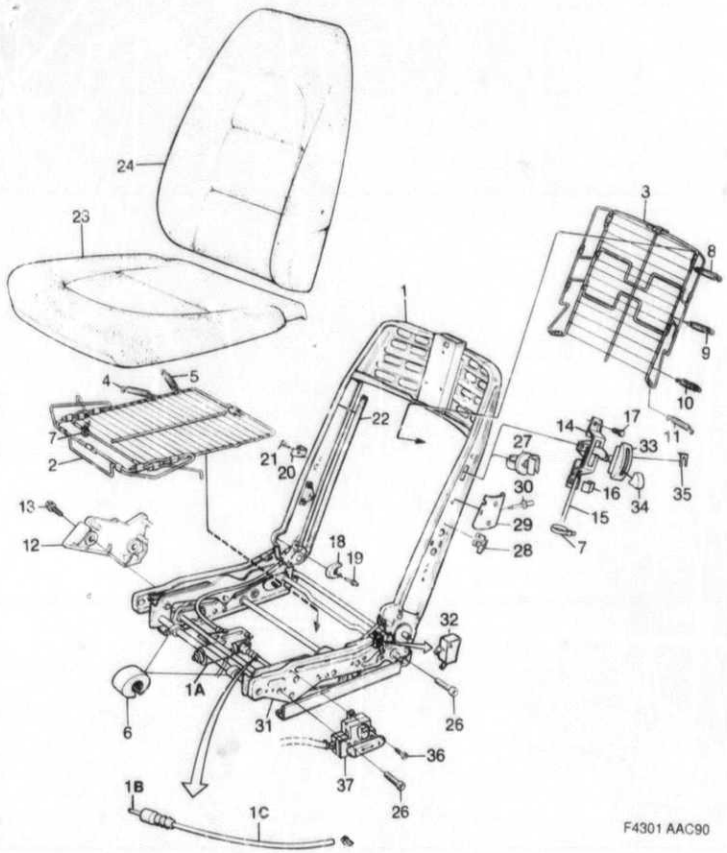

F4301 AAC90

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	33	98 74 801		3CK, CV	1	. Slide	. Slid	3
0550	34	98 74 819		3CK, CV	1	. Knob	. Knopp	5
0560	35	96 86 841		3CK, CV	1	. Clamp	. Klämma	5
0570	36	79 22 354			3	. Screw	. Skruv	5
0580	37	41 17 081		LH	1	. Switch	. Strömställare	5
0590	37	41 17 073		RH	1	. Switch	. Strömställare	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H06

Front seats Part 3
Electrically adjustable

Stolar Del 3
Elmanövrerade

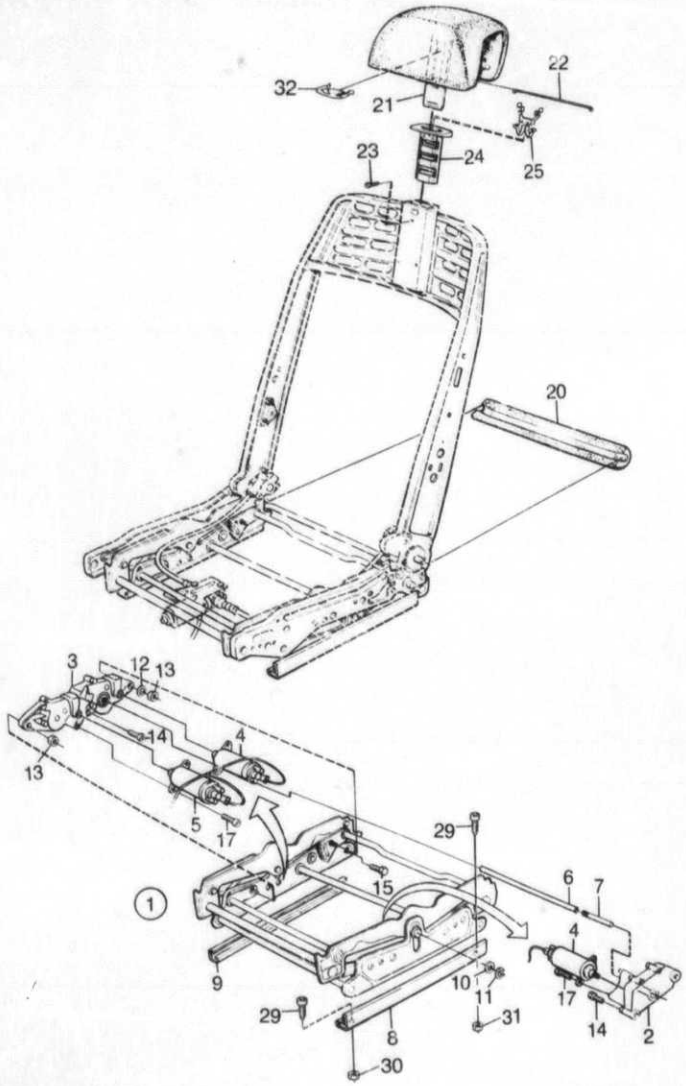

F3095 AAC90

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-165, 5-G22		Seat	Stol	
0020				See page 8B-165, 5-G22		.Seat frame	.Stolram	
0030	1	*41 33 146*		1991 NLS - USE 4312625	1	..Seat frame	..Stolschassi	5
0035	1	43 12 625		1992-	1	..Seat frame	..Stolschassi	5
0040	2	96 95 321			1	...Gear	...Växel	6
0050	3	96 95 354			1	...Gear	...Växel	6
0060	4	40 54 078			2	...Electric motor	...Elmotor	6
0070	5	40 54 086			1	...Electric motor	...Elmotor	6
0080	6	95 79 772			1	...Shaft	...Axel	6
0090	7	95 79 780			1	...Shaft	...Axel	6
0100	8	41 33 153		LH	1	...Rail	...Skena	6
0110	9	41 33 161		RH	1	...Rail	...Skena	6
0120	10	95 86 165			2	...Washer	...Bricka	5
0130	11	95 86 173			2	...E-circlip	...Spårryttare	5
0140	12	95 79 764			2	...Spacer washer	...Distansbricka	5
0150	13	95 86 132			4	...Nut	...Mutter	5
0160	14	95 86 157			3	...Screw	...Skruv	5
0170	15	95 86 181			4	...Screw	...Skruv	5
0180	17	95 86 207			6	...Screw	...Skruv	5
0190	20	97 92 391			1	.Crash pad	.Stötskydd	6
0200	21	41 23 386			1	.Head restraint	.Nackstöd	6
0210	22	94 59 868			2	.Wire rod	.Trådten	6
0220	23	79 22 396			1	.Screw	.Skruv	5
0230	24	40 31 563			1	.Sleeve	.Hylsa	5
0240	25	97 96 848			1	.Locking spring	.Spärrfjäder	5
0250	29	41 34 003			4	.Screw	.Skruv	5
0260	30	79 77 846			2	.Cage nut	.Korgmutter	6
0270	31	96 19 032			1	.Nut inner	.Mutter inre	5
0280								
0290	31	96 19 040			1	.Nut outer	.Mutter yttre	5
0300								
0310	32	95 45 104			1	.Clamp	.Klämma	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H08

Rear seat — Baksäte
Seat cushion — Sittdyna

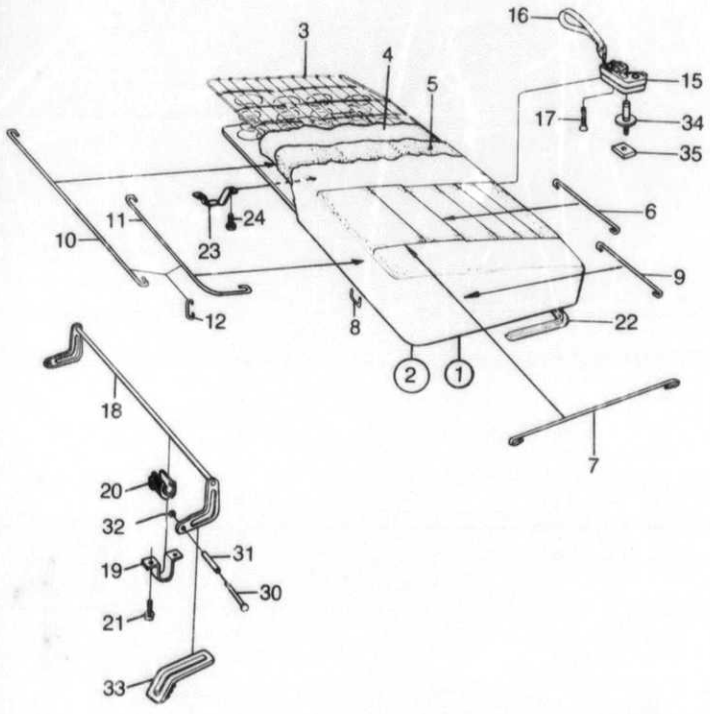

F1245 AAC90

1515	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 09 494		40,41) 2SN, 3CK	1	Seat cushion	Sittdyna	6
0020	1	97 09 502		40,41) 4SN, 5CK	1	Seat cushion	Sittdyna	6
0030	1	96 99 232		40,36) 2SN, 3CK	1	Seat cushion	Sittdyna	6
0040	1	96 99 240		40,36) 4SN, 5CK	1	Seat cushion	Sittdyna	6
0050	1	97 24 626		40,35) 2SN, 3CK	1	Seat cushion	Sittdyna	6
0060	1	97 24 634		40,35) 4SN, 5CK	1	Seat cushion	Sittdyna	6
0070								
0080	2	96 14 629		41,45) 2SN, 3CK	1	.Seat cushion	.Sittdyna	6
0090	2	96 14 637		41,45) 4SN, 5CK	1	.Seat cushion	.Sittdyna	6
0100	2	96 88 813		36,45) 2SN, 3CK	1	.Seat cushion	.Sittdyna	6
0110	2	96 88 821		36,45) 4SN, 5CK	1	.Seat cushion	.Sittdyna	6
0120	3	40 53 815		36,41) 2SN, 3CK	1	..Spring housing	..Resårhus	6
0130	3	40 53 823		36,41) 4SN, 5CK	1	..Spring housing	..Resårhus	6
0140	3	40 53 799		35) 2SN, 3CK	1	..Spring housing	..Resårhus	6
0150	3	40 53 807		35) 4SN, 5CK	1	..Spring housing	..Resårhus	6
0160	4	96 88 540		36,41)	1	..Padding	..Vadd	5
0170	5	94 71 178		41) 2SN, 3CK	1	..Foam plastic cushion	..Skumplastdyna	6
0180	5	94 71 210		41) 4SN, 5CK	1	..Foam plastic cushion	..Skumplastdyna	6
0190	5	97 21 523		35) 2SN, 3CK	1	..Foam plastic cushion	..Skumplastdyna	6
0200	5	97 21 531		35) 4SN, 5CK	1	..Foam plastic cushion	..Skumplastdyna	6
0210	5	96 88 482		36) 2SN, 3CK	1	..Foam plastic cushion	..Skumplastdyna	6
0220	5	96 88 516		36) 4SN, 5CK	1	..Foam plastic cushion	..Skumplastdyna	6
0230	6	97 21 481		36)	2	..Wire rod	..Trådten	5
0240	7	95 84 731		36)	4	..Wire rod	..Trådten	5
0250	8	84 38 467			X	..Staple	..Häftklammer	5
0260	9	94 16 181		41)	2	..Wire rod	..Trådten	5
0270	10	94 75 955		41) 2SN, 3CK	1	..Wire rod	..Trådten	5
0280	11	94 21 314		41) 4SN, 5CK	2	..Wire rod	..Trådten	5
0290	12	94 50 685		41)	X	..Clamp	..Klammer	5
0300	15	97 35 861			1	.Lock	.Lås	5
0310	16	97 36 075			1	.Strip	.Band	5
0320	17	79 73 720			2	.Screw	.Skruv	5
0330	18	97 19 717			1	.Link arm	.Länkarm	6
0340	19	*97 19 790*		65) NLS - USE 4048260, 4048278	2	.Cap	.Överfall	6
0350	19	40 48 278		66)	2	.Cap	.Överfall	6
0360	20	*97 19 808*		65) NLS - USE 4048260, 4048278	2	.Bushing	.Bussning	6
0370	20	40 48 260		66)	2	.Bushing	.Bussning	6
0380	21	79 77 283			4	.Screw	.Skruv	5
0390	22	94 75 393			1	.Strip	.List	
0400	23	94 92 117			2	.Support	.Stöd	5
0410	24	79 77 283			4	.Screw	.Skruv	5
0420	30	97 36 190			2	Pin	Axeltapp	5
0430	31	97 36 216			2	Sleeve	Hylsa	5
0440	32	79 71 518			2	Lock washer	Spärrbricka	5
0450	33	97 29 716			2	Insert	Insats	6
0460	34	97 32 231			1	End plate	Slutbleck	6
0470	35	97 24 733			1	Nut	Mutter	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
40. State upholstery colour and ch No Uppge klädselfärg och ch nr
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
45. Without upholstery Utan klädsel
65. Ch. -L3000807, -L7000000
66. Ch. L3000808-, L7000001-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H10

Rear seat
Back cushion

Baksäte
Ryggdyna

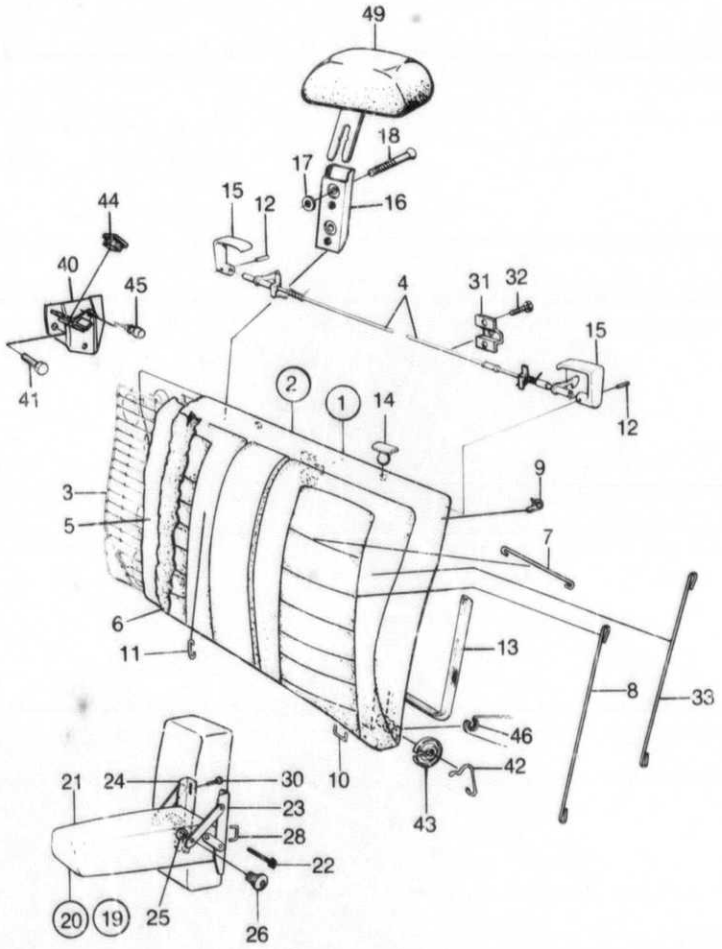

F4297 AAC90

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 323		40,41)	1	Backrest cushion	Ryggdyna	6
0011						without arm rest	utan armstöd	
0015	1	96 99 273		40,41)	1	Backrest cushion	Ryggdyna	6
0030	1	96 99 224		40,36)	1	Backrest cushion	Ryggdyna	6
0040	1	98 43 608		40,35)	1	Backrest cushion	Ryggdyna	6
0041								
0043	2	96 14 686		41,45)	1	.Backrest cushion	.Ryggdyna	6
0044						without arm rest	utan armstöd	
0045	2	95 93 260		41,45)	1	.Backrest cushion	.Ryggdyna	6
0050	2	96 88 839		36,45)	1	.Backrest cushion	.Ryggdyna	6
0070	3	40 53 450		41)	1	..Spring housing	..Resårhus	6
0071						without arm rest	utan armstöd	
0075	3	40 53 468		41)	1	..Spring housing	..Resårhus	6
0090	3	40 53 468		36)	1	..Spring housing	..Resårhus	6
0100	3	40 53 831		35)	1	..Spring housing	..Resårhus	6
0110	4	98 33 542			1	...Shaft	...Axel	5
0120	5	96 88 557		36,41)	1	..Padding	..Vadd	5
0125	6	94 75 914		41)	1	..Foam plastic cushion	..Skumplastdyna	6
0126						without arm rest	utan armstöd	
0127	6	95 93 278		41)	1	..Foam plastic cushion	..Skumplastdyna	6
0130	6	98 29 672		35)	1	..Foam plastic cushion	..Skumplastdyna	6
0140	6	96 88 581		36)	1	..Foam plastic cushion	..Skumplastdyna	6
0150	7	97 21 481		36)	2	..Wire rod	..Trådten	5
0160	8	95 79 244		36)	4	..Wire rod	..Trådten	5
0170	9	84 00 350			2	..Clip	..Clips	5
0180	10	84 38 467			X	..Staple	..Häftklammer	5
0185	11	*98 49 498*		41)	4	..Clamp	..Klammer	5
0186				NLS - USE 9450685		without arm rest	utan armstöd	
0190	11	94 50 685			4	..Clamp	..Klammer	5
0200	12	79 18 261			2	..Spring pin	..Rörpinne	5
0210	13	94 91 739			2	..Strip	..List	5
0220	14	98 07 215		35)	2	..Protection	..Skydd	6
0230	15	94 87 836		LH	1	..Handle	..Handtag	6
0240	15	94 87 844		RH	1	..Handle	..Handtag	6
0260	16	95 32 466		35,36)	2	..Bracket	..Fäste	5
0275	17	73 99 835		35,36)	4	..Washer	..Bricka	5
0280	18	79 72 755		35,36)	4	..Screw	..Skruv	5
0290	19	98 27 718		40)	1	..Arm rest	..Armstöd	6
0300	20	98 60 305		45)	1	...Arm rest	...Armstöd	6
0310	21	97 27 892			1	....Arm rest	....Armstöd	6
0330	22	94 45 909			1	....Clamp	....Trådbygel	6
0340	23	94 77 860		LH	1	....Linkage	....Länksystem	6
0350	24	94 77 878		RH	1	....Linkage	....Länksystem	6
0360	25	84 57 541			4	....Washer	....Bricka	5
0370	26	40 55 133			4	....Shoulder screw	....Ansatsskruv	5
0390	28	84 38 467			X	....Staple	....Häftklammer	5
0400	30	*80 19 903*		-1992 NLS - USE 9166281	4	..Screw	..Skruv	5
0405	30	91 66 281		1993-	4	..Screw	..Skruv	5
0410	31	96 49 138		AU	1	..Bracket	..Fäste	6
0415	31	96 49 500		CA	1	..Bracket	..Fäste	6
0430	32	*80 82 976*		AU NLS - USE 8083933	2	..Screw	..Skruv	5
0435	32	80 83 933		CA	2	..Screw	..Skruv	5
0437	33	94 16 181		41)	2	..Wire rod	..Trådten	5
0440	40	40 40 754		LH 2SN, 3CK	1	Bracket	Konsol	5
0460	40	40 40 770		LH 4SN, 5CK	1	Bracket	Konsol	5
0480	40	40 40 762		RH 2SN, 3CK	1	Bracket	Konsol	5
0500	40	40 40 788		RH 4SN, 5CK	1	Bracket	Konsol	5
0520	41	84 99 204		2SN, 3CK	4	Screw	Skruv	5

35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
40. State upholstery colour and ch No Uppge klädselfärg och ch nr
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"
45. Without upholstery Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H12

Rear seat
Back cushion

Baksäte
Ryggdyna

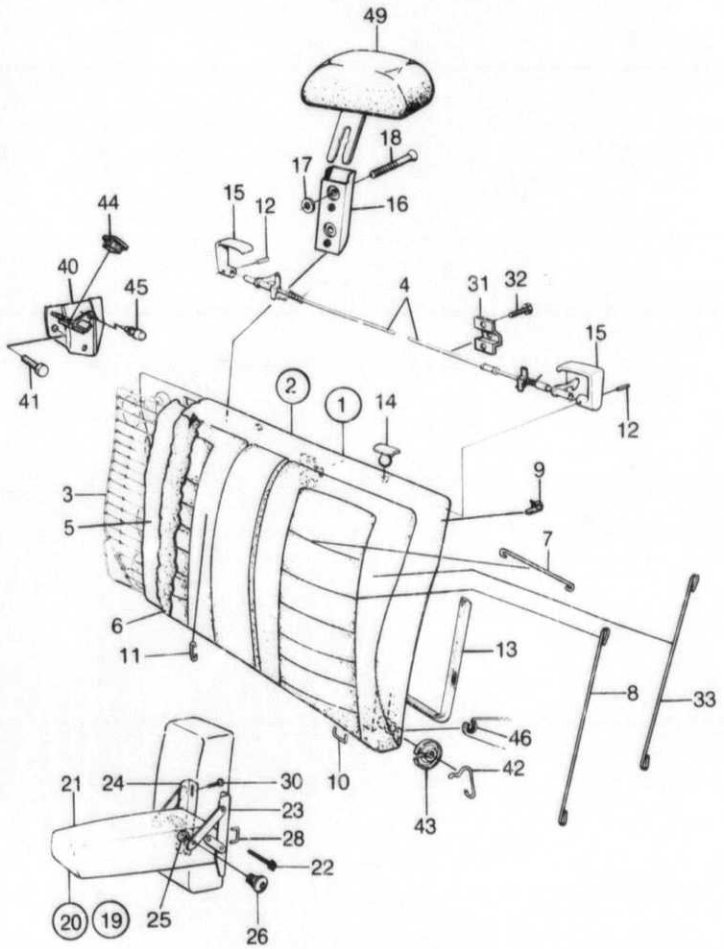

F4297 AAC90

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0525	41	84 99 204		4SN, 5CK	6	Screw	Skruv	5
0530	42	94 94 691		LH	1	Lock spring	Låsfjäder	6
0540	42	94 94 709		RH	1	Lock spring	Låsfjäder	6
0550	43	94 89 485			2	Spacer washer	Distansbricka	5
0560	44	40 50 761			2	Sleeve	Hylsa	5
0580	45	*96 18 273*		1990 NLS - USE 4170114	2	Absorber	Dämpare	5
0585	45	41 70 114		1991-	2	Absorber	Dämpare	5
0587	46			See page 8A-005, 4-A06		Bushing	Bussning	
0590	49					SEE ACCESSORIES CATALOGUE	SE TILLBEHÖRSKATALOG	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H14

Rear seat
CV

Baksäte
CV

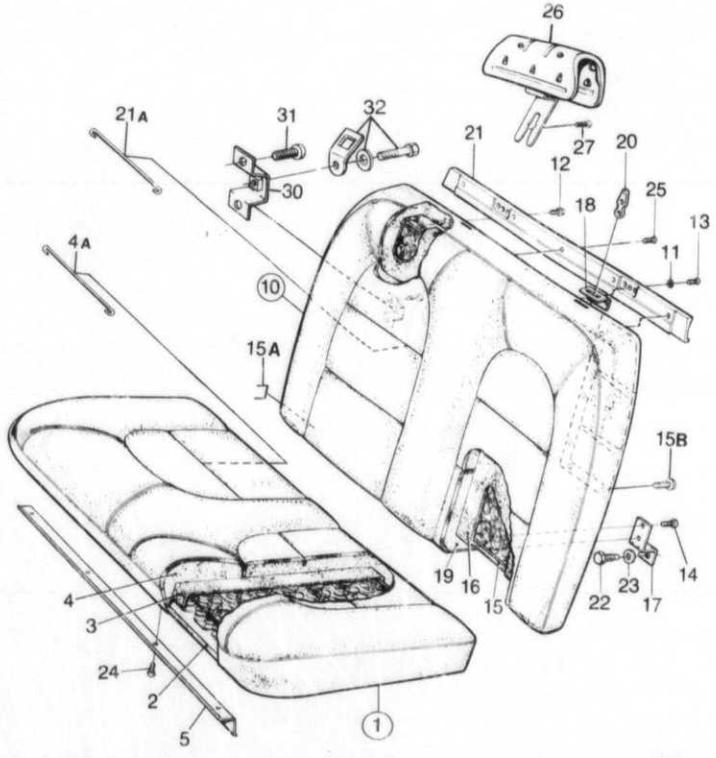

F3769 - AAC90

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	98 80 378		40)	1	Seat cushion	Sittdyna	6
0065	2	96 47 272		1990	1	.Spring housing	.Resårhus	6
0070	2	41 55 461		1991-	1	.Spring housing	.Resårhus	6
0080	3	98 80 519			1	.Padding	.Vadd	6
0100	4	98 82 630			1	.Foam plastic cushion	.Skumplastdyna	6
0110	4A	97 21 499			2	.Wire rod	.Trådten	5
0120	5	91 60 326		1990	1	Attaching profile	Fästprofil	5
0160								
0180	10	98 80 345		40)	1	Backrest cushion	Ryggdyna	6
0200	11	79 13 833			2	.Washer	.Bricka	5
0230	12	79 65 684			9	.Screw	.Skruv	6
0250	13	79 67 581			2	.Screw	.Skruv	5
0260	14	*80 19 911*		NLS - USE 7399603	4	.Screw	.Skruv	5
0318	15	96 45 391			1	.Spring housing	.Resårhus	6
0325	15A	*94 90 764*		NLS	X	.Staple	.Häftklammer	5
0330	15B	79 22 214			10	.Screw	.Skruv	5
0335	16	98 80 584			1	.Padding	.Vadd	6
0350	17	96 49 195			2	.Bracket	.Konsol	6
0360	18	98 82 143			2	.Grommet	.Genomföring	5
0380	19	96 47 348			1	.Foam plastic cushion	.Skumplastdyna	6
0400	20	98 83 174			2	.Strap	.Stropp	5
0430	21	96 45 334			1	.Support	.Stöd	6
0435	21A	97 21 499			2	.Wire rod	.Trådten	5
0440	22	84 99 204			2	Screw	Skruv	5
0460	23	80 30 017			2	Washer	Bricka	5
0480	24	79 74 694		1990	4	Screw	Skruv	5
0517	25	69 37 361			2	Screw	Skruv	5
0520	26	98 81 806		40)	2	Head restraint	Nackstöd	6
0532	27	96 49 799			2	Screw	Skruv	5
0537	27	91 60 052		AU, CA	2	Screw	Skruv	5
0550	30	96 49 138		AU	2	Bracket	Fäste	6
0555	30	96 49 500		CA	2	Bracket	Fäste	6
0565	31	80 82 935		AU, CA	4	Screw	Skruv	5
0570	32	95 93 542		-1991, CA	1	Attaching washer	Fästbricka	6
0580	32	95 93 534		1992-, CA	1	Attaching washer	Fästbricka	6

40. State upholstery colour and ch No Uppge klädselfärg och ch nr

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-H2

5-H16 Equipment luggage compartment

Utrustning bagagerum

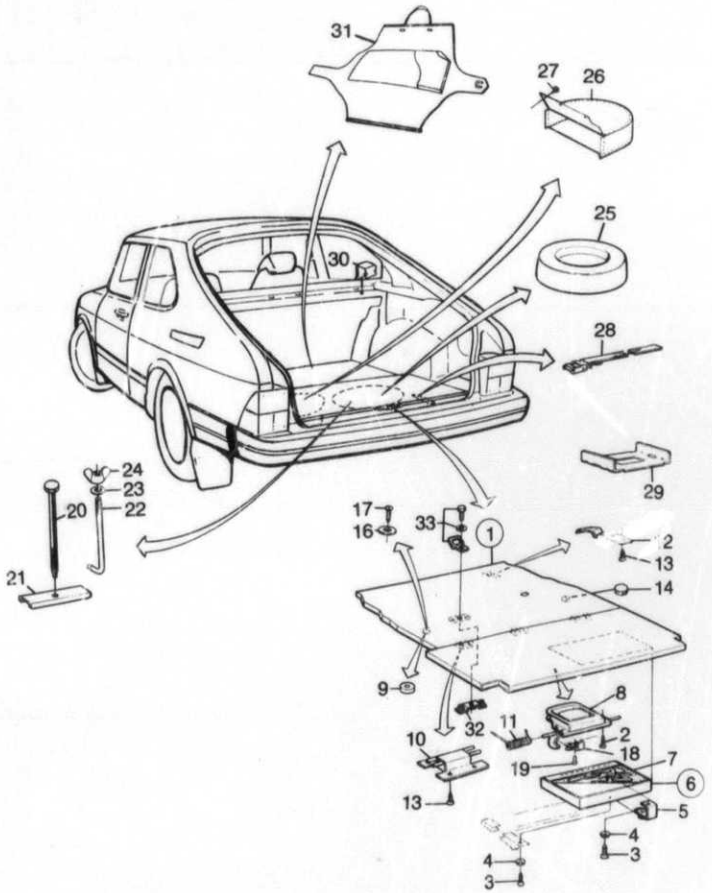

1580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0350	1	*95 33 977*		46), 1990 NLS - USE 4269734	1	Floor	Golv	5
0380	1	41 28 344		46), 1991	1	Floor	Golv	5
0390	1	42 69 734		46), 1992-	1	Floor	Golv	5
0400	1	95 33 985		47), 1990	1	Floor	Golv	5
0420	1	96 45 615		1990, CV	1	Floor	Golv	5
0430	1	41 66 849		1991, CV	1	Floor	Golv	5
0435	1	42 69 742		1992-, CV	1	Floor	Golv	5
0445	2	80 59 248			2	.Screw	.Skruv	5
0448	2	79 11 522		72), CV	2	.Screw	.Skruv	5
0446	2	80 59 248		73), CV	2	.Screw	.Skruv	5
0455	3	84 08 882			6	.Screw	.Skruv	5
0465	4	84 13 429			6	.Washer	.Bricka	5
0470	5	94 92 026			2	.Strap	.Stropp	5
0490	6	*95 33 621*		1990 NLS - USE 4129839	1	.Tool box	.Verktygslåda	5
0495	6	41 29 839		1991	1	.Tool box	.Verktygslåda	5
0500	6	42 69 692		1992-	1	.Tool box	.Verktygslåda	5
0510	7	95 33 613		1990	1	..Bracket	..Hållare	5
0515	7	41 29 821		1991	1	..Bracket	..Hållare	5
0517	7	42 69 429		1992-	1	..Bracket	..Hållare	5
0520	8	96 57 123			1	.Lock	.Lås	6
0530	9	96 87 443			2	.Bushing	.Bussning	5
0540	10	97 64 853			3	.Hinge	.Gångjärn	5
0550	11	97 74 282			1	.Spring	.Fjäder	6
0560	12	98 79 321			2	.Clamp	.Klämma	6
0570	13	97 75 230			16	.Screw	.Skruv	5
0575	14	98 64 109			2	.Plug	.Plugg	5
0580	16	96 87 450			2	Washer	Bricka	5
0590	17	84 10 961			2	Screw	Skruv	5
0600	18	96 17 879			1	Lock plate	Låsplåt	6
0610	19	98 49 514			2	Rivet	Nit	5
0620	20	98 26 595			1	Screw	Skruv	5
0630	21	97 33 338			1	Washer	Bricka	5
0640	22	98 79 461		ME	1	Hook	Krok	6
0660	23	79 16 497		ME	1	Washer	Bricka	5
0670	24	79 70 478		ME	1	Wing nut	Vingmutter	5
0680	25	98 79 479		ME	1	Spare wheel cover	Reservhjulsskydd	6
0705	26	91 60 276		CV	1	Spare wheel cover	Reservhjulsskydd	6
0710	27	84 83 893		CV	3	Clip	Clips	5
0720	28	*94 92 612*		170) NLS - USE 4141784	1	Strap	Låsband	5
0730	28	41 41 784		171,206)	1	Strap	Låsband	5
0735	28	41 69 751		207)	1	Strap	Låsband	5
0740	29			See page 8A-009, 4-A10	1	Bracket warning triangle	Hållare varningstriangel	
0741								
0760	30	*84 68 134*		5CK NLS	2	Clip	Clips	5
0780	31	*96 45 698*		-1991, CV NLS - USE 4170387	1	Storage sack	Förvaringspåse	5
0780								
0782	31	41 70 387		1992-, CV	1	Storage sack	Förvaringspåse	5
0785	32	*94 94 733*		AU NLS	2	Bracket	Fäste	
0790	32	95 37 606		CA	2	Bracket	Fäste	5
0800	33	95 93 534		CA, AU	1	Attaching washer	Fästbricka	6

46. For cars with 4" spare wheel För bilar med 4" reservhjul
47. For cars with 5,5" spare wheel För bilar med 5,5" reservhjul
72. Ch. --L7003112
73. Ch. L7003113--
170. Ch. --N2001347, --M3000004, --M5014243, --M7004741
171. Ch. M7004742--
206. Ch. --M7022099
207. Ch. N2001348--, M7022100--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H18

Scuff plate protector

Tröskelskydd

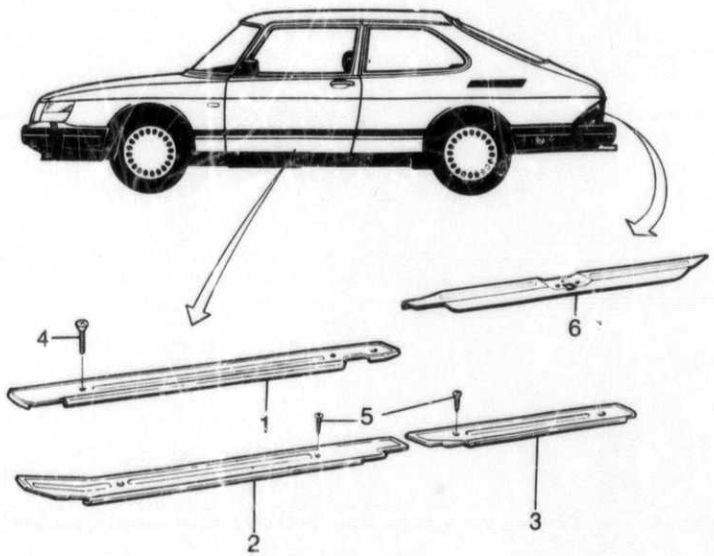

F1249 AAC90

1590	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0040	1	96 12 961		LH, 2SN, 3CK	1	Sill protection	Tröskelskydd	5
0097	1	96 83 657		RH, 2SN, 3CK	1	Sill protection	Tröskelskydd	5
0100	1	98 80 808		1990, CV	2	Sill protection	Tröskelskydd	5
0110	1	91 60 649		1991-, CV	2	Sill protection	Tröskelskydd	5
0150	2	96 12 953		LH, 4SN, 5CK	1	Sill protection	Tröskelskydd	5
0207	2	96 83 640		RH, 4SN, 5CK	1	Sill protection	Tröskelskydd	5
0280	3	41 24 129		LH, 4SN, 5CK	1	Sill protection	Tröskelskydd	5
0300	3	41 24 137		RH, 4SN, 5CK	1	Sill protection	Tröskelskydd	5
0370	4	79 70 320		2SN, 3CK	8	Screw	Skruv	5
0380	5	79 70 320		4SN, 5CK	10	Screw	Skruv	5
0400	6	94 15 480			1	Sill protection	Tröskelskydd	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H20 *Other interior equipment* *Övrig invändig utrustning*

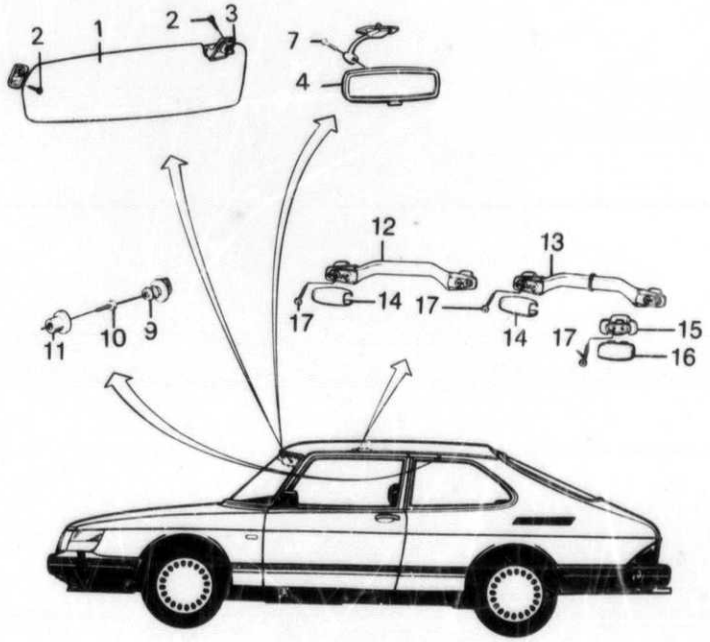

F1250 AAC90

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	98 49 837		LH	1	Sun visor	Solskydd	5
0050	1	96 48 734		LH, CV	1	Sun visor	Solskydd	5
0065	1	96 49 823		RH, RHD, CV	1	Sun visor	Solskydd	5
0090	1	98 49 860		243), RH	1	Sun visor	Solskydd	5
0091						with mirror	med spegel	
0100	1	42 71 748		244), RH	1	Sun visor	Solskydd	5
0101						with mirror	med spegel	
0145	1	96 49 807		RH, CV	1	Sun visor	Solskydd	5
0146						with mirror	med spegel	
0165	1	96 49 815		LH, RHD, CV	1	Sun visor	Solskydd	5
0166						with mirror	med spegel	
0170	1	98 49 845		RH, JP	1	Sun visor	Solskydd	5
0210	1	98 49 852		243), LH, RHD	1	Sun visor	Solskydd	5
0211						with mirror	med spegel	
0220	1	42 71 730		244), LH, RHD	1	Sun visor	Solskydd	5
0221						with mirror	med spegel	
0230	1	98 49 837		LH, RHD, AU	1	Sun visor	Solskydd	5
0260	1	98 49 845		RH, RHD	1	Sun visor	Solskydd	5
0270	2	79 73 951			6	Screw	Skruv	5
0290	2	79 70 536		CV	6	Screw	Skruv	6
0310	3	98 36 495		LH	1	Support	Stöd	5
0320	3	98 36 503		RH	1	Support	Stöd	5
0330	3	98 82 655		CV	2	Support	Stöd	5
0350	4	95 89 110			1	Mirror	Spegel	4
0370	4	95 89 110		CV	1	Mirror	Spegel	4
0380	7	80 59 248			1	Screw	Skruv	5
0410	9	98 36 404		2SN, 3CK	2	Clothes hook	Klädkrok	5
0420	10	79 73 951		2SN, 3CK	2	Screw	Skruv	5
0440	11	98 36 396		2SN, 3CK	2	Sleeve	Hylsa	5
0460	12	98 36 305			1	Curve handle	Kurvhandtag	5
0470	12	98 36 347		SR	1	Curve handle	Kurvhandtag	5
0490	13	98 36 313			2	Curve handle	Kurvhandtag	5
0500	13	98 36 354		SR	2	Curve handle	Kurvhandtag	5
0510	14	98 36 362			2	Cover	Kåpa	5
0520	15	98 36 370			2	Spacer	Distans	6
0530	16	98 36 388			2	Cover	Kåpa	6
0540	17	79 73 969			16	Screw	Skruv	5

243. Ch. --P2006081
244. Ch. P2006082--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H22

Shelf
Hatthylla

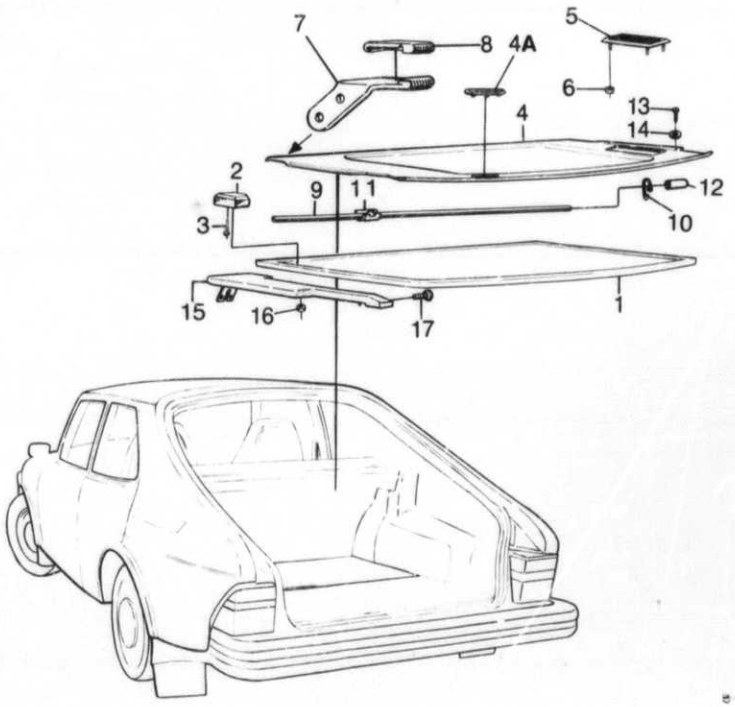

F1251 AAC90

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 60 923		210), 1992-, 3CK, 5CK	1	Rear shelf	Hatthylla	5
0020	1	95 37 440		90,142), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0030	1	40 45 316		90,143), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0040	1	96 83 921		60,140), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0050	1	40 44 871		60,141),-1991, 3CK, 5CK	1	Rear shelf	Hatthylla	5
0060	1	96 83 939		80,144), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0070	1	40 44 988		80,145), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0080	1	98 66 138		70,146), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0090	1	40 45 209		70,147), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0100	1	41 41 214		100), 3CK, 5CK	1	Rear shelf	Hatthylla	5
0110	2	42 60 949		210)	2	.Stop	.Stopp	5
0120	2	97 41 976		90)	2	.Stop	.Stopp	5
0130	2	97 41 968		60), -1991	2	.Stop	.Stopp	5
0140	2	96 80 901		80)	2	.Stop	.Stopp	5
0150	2	94 59 850		110)	2	.Stop	.Stopp	5
0160	3	84 10 961			4	.Screw	.Skruv	5
0170								
0180	4	*95 37 481*		90,138), 2SN NLS - USE 4045266	1	Rear shelf	Hatthylla	5
0180								
0190	4	40 45 266		90,139), 2SN	1	Rear shelf	Hatthylla	5
0200	4	95 37 499		90,49,138), 2SN	1	Rear shelf	Hatthylla	5
0210	4	40 45 274		90,49,139), 2SN	1	Rear shelf	Hatthylla	5
0220								
0230	4	*96 83 806*		60,138), 2SN NLS - USE 4044814	1	Rear shelf	Hatthylla	5
0230								
0240	4	40 44 814		60,139), 2SN	1	Rear shelf	Hatthylla	5
0250	4	96 83 848		60,49,138), 2SN	1	Rear shelf	Hatthylla	5
0260	4	40 44 822		60,49,139), 2SN	1	Rear shelf	Hatthylla	5
0270								
0280	4	*96 83 822*		80,138), 2SN NLS - USE 4044962	1	Rear shelf	Hatthylla	5
0280								
0290	4	40 44 962		80,139), 2SN	1	Rear shelf	Hatthylla	5
0300	4	96 83 863		80,49,138), 2SN	1	Rear shelf	Hatthylla	5
0310	4	40 44 970		80,49,139), 2SN	1	Rear shelf	Hatthylla	5
0320								
0330	4	*96 18 562*		70,138), 2SN NLS - USE 4045134	1	Rear shelf	Hatthylla	5
0330								
0340	4	40 45 134		70,139), 2SN	1	Rear shelf	Hatthylla	5
0350	4	96 18 414		70,49,138), 2SN	1	Rear shelf	Hatthylla	5
0360	4	40 45 118		70,49,139), 2SN	1	Rear shelf	Hatthylla	5
0370								
0380	4	42 60 915		210), 1992-, 4SN	1	Rear shelf	Hatthylla	5
0390	4	42 60 980		210,49), 1992-, 4SN	1	Rear shelf	Hatthylla	5
0400								
0410	4	95 37 432		90,138), 4SN	1	Rear shelf	Hatthylla	5

49. With loudspeaker Med högtalare
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
138. Ch. --M5001965, --L7020732
139. Ch. M5001966--, L7020733--
140. Ch. --L3007099, --L5002246, --L7018264
141. Ch. L3007100--, L5002247--, L7018265--
142. Ch. --L3006864, --L5002161, --L7021863
143. Ch. L3006865--, L5002162--, L7021864--
144. Ch. --L3007191, --L5002297, --L7022156
145. Ch. L3007192--, L5002298--, L7022157--
146. Ch. --M5002700, --L7018419
147. Ch. M5002701--, L7018420--
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-H24

Shelf
Hatthylla

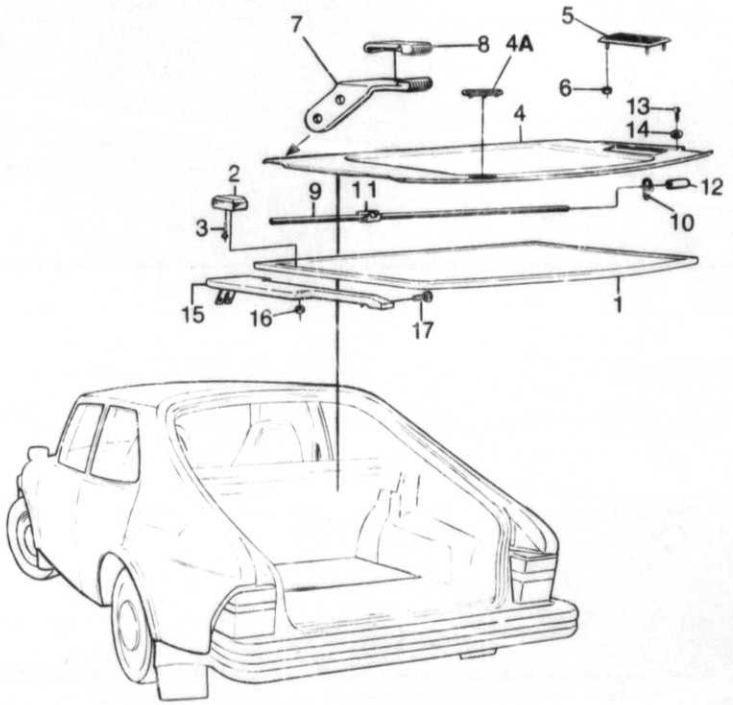

F1251 AAC90

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	4	40 45 282		90,139), 4SN	1	Rear shelf	Hatthylla	5
0430	4	*95 37 473*		90,49,138), 4SN NLS - USE 4045258	1	Rear shelf	Hatthylla	5
0440	4	40 45 258		90,49,139), 4SN	1	Rear shelf	Hatthylla	5
0460	4	*96 83 814*		60,138), 4SN NLS - USE 4044848	1	Rear shelf	Hatthylla	5
0470	4	40 44 848		60,139), -1991, 4SN	1	Rear shelf	Hatthylla	5
0480	4	96 83 897		60,49,138), 4SN	1	Rear shelf	Hatthylla	5
0490	4	40 44 806		60,49,139), -1991, 4SN	1	Rear shelf	Hatthylla	5
0510	4	*96 83 830*		80,138), 4SN NLS - USE 4044921	1	Rear shelf	Hatthylla	5
0520	4	40 44 921		80,139), 4SN	1	Rear shelf	Hatthylla	5
0530	4	*96 83 913*		80,49,138), 4SN NLS - USE 4044954	1	Rear shelf	Hatthylla	5
0540	4	40 44 954		80,49,139), 4SN	1	Rear shelf	Hatthylla	5
0560	4	*98 66 179*		70,138), 4SN NLS - USE 4045175	1	Rear shelf	Hatthylla	5
0570	4	40 45 175		70,139), 4SN	1	Rear shelf	Hatthylla	5
0580	4	*98 66 211*		70,49,138), 4SN NLS - USE 4045142	1	Rear shelf	Hatthylla	5
0590	4	40 45 142		70,49,139), 4SN	1	Rear shelf	Hatthylla	5
0610	4	41 41 206		100), 4SN	1	Rear shelf	Hatthylla	5
0620	4	41 41 248		100,49), 4SN	1	Rear shelf	Hatthylla	5
0640	4A	95 37 515		90), 2SN	4	.Grille	.Galler	5
0650	4A	96 18 588		60), 2SN	4	.Grille	.Galler	5
0660	4A	96 83 988		80), 2SN	4	.Grille	.Galler	5
0670	4A	96 18 612		70), 2SN	4	.Grille	.Galler	5
0680	5	95 40 576		90), -1991, 2SN, 4SN	2	Loudspeaker grille	Högtalargaller	5
0690	5	95 40 139		60), -1991, 2SN, 4SN	2	Loudspeaker grille	Högtalargaller	5
0700	5	95 40 147		80), -1991, 2SN, 4SN	2	Loudspeaker grille	Högtalargaller	5
0710	5	95 40 162		110), -1991, 2SN, 4SN	2	Loudspeaker grille	Högtalargaller	5
0720	5	95 40 162		110), 1992-, 4SN	2	Loudspeaker grille	Högtalargaller	5
0730	6	79 77 903		2SN, 4SN	8	Nut	Mutter	5
0740	7	97 33 569		LH	1	Stop lug	Stoppklack	6
0750	7	97 33 577		RH	1	Stop lug	Stoppklack	6
0760	8	42 61 053		210), 1992-, LH	1	Cover	Kåpa	5
0770	8	42 61 046		210), 1992-, RH	1	Cover	Kåpa	5
0780	8	95 35 709		90), LH	1	Cover	Kåpa	5
0790	8	95 35 717		90), RH	1	Cover	Kåpa	5
0800	8	97 41 893		60), -1991, LH	1	Cover	Kåpa	5
0810	8	97 41 901		60), -1991, RH	1	Cover	Kåpa	5
0820	8	96 80 885		80), LH	1	Cover	Kåpa	5
0830	8	96 80 893		80), RH	1	Cover	Kåpa	5
0840	8	98 77 606		110), LH	1	Cover	Kåpa	5
0850	8	98 77 614		110), RH	1	Cover	Kåpa	5
0860	9	98 48 169		SN	1	Tube	Rör	5
0870	10	98 48 177		SN	2	Spring	Fjäder	5
0880	11	94 85 897		SN	3	Clamp	Klammer	5

49. With loudspeaker Med högtalare
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
138. Ch. --M5001965, --L7020732
139. Ch. M5001966--, L7020733--
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-I02

Shelf

Hatthylla

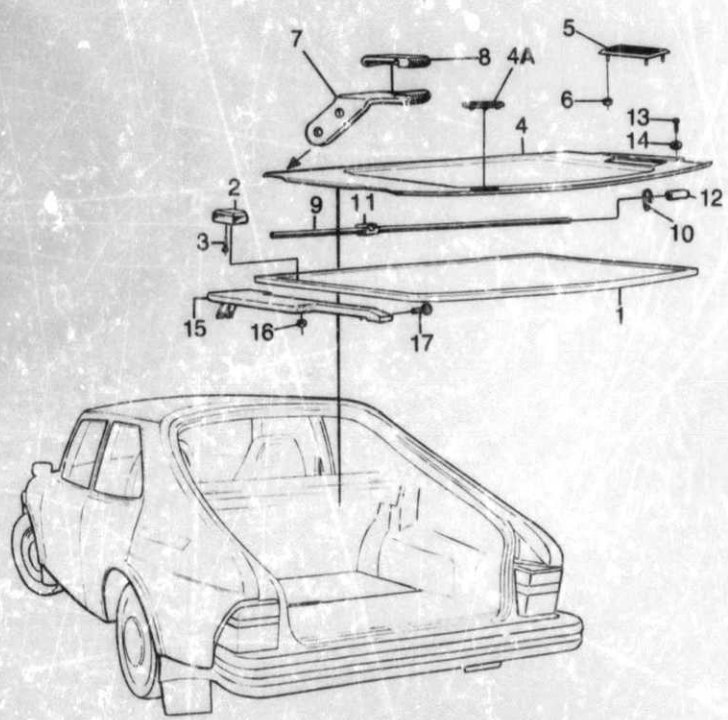

F1251 AAC90

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Descriptic	Benämning	S L
0890	12	98 48 185		SN	2	Sleeve	Hylsa	5
0900	13	79 72 508		SN	4	Screw	Skruv	5
0910	14	70 45 776		SN	4	Washer	Bricka	5
0920	15	84 67 370		LH, CK	1	Support	Stöd	5
0930	15	84 67 688		RH, CK	1	Support	Stöd	5
0940	16	79 65 775		CK	4	Nut	Mutter	5
0950	17	98 77 457			4	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-104

Safety belt, front seat
2SN, 3CK, CV

Bilbälte framsäte
2SN, 3CK, CV

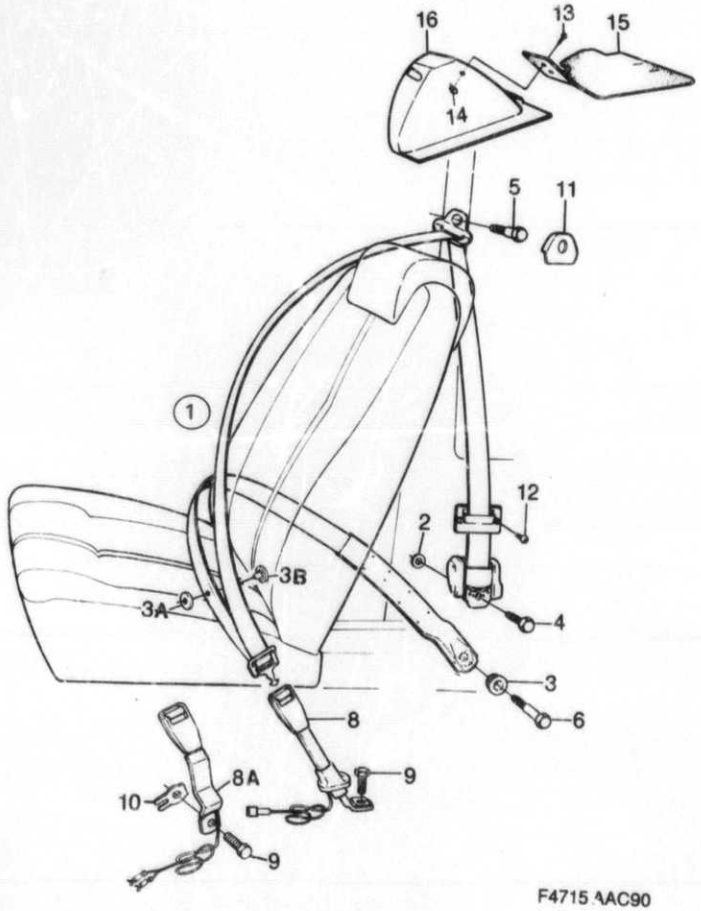

F4715 AAC90

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 82 139		115), LH	1	Seat belt	Säkerhetsbälte	3
0020	1	96 82 147		115), RH	1	Seat belt	Säkerhetsbälte	3
0030	1	40 77 665		116), -1990, LH	1	Seat belt	Säkerhetsbälte	3
0040	1	40 77 673		116), -1990, RH	1	Seat belt	Säkerhetsbälte	3
0050	1	40 80 446		1991-, LH	1	Seat belt	Säkerhetsbälte	3
0060	1	40 80 453		1991-, RH	1	Seat belt	Säkerhetsbälte	3
0070	1	*96 49 658*		1990, LH, CV NLS - USE 4166716	1	Seat belt	Säkerhetsbälte	6
0080	1	*96 49 666*		1990, RH, CV NLS - USE 4166724	1	Seat belt	Säkerhetsbälte	6
0090	1	41 66 716		1991-, LH, CV	1	Seat belt	Säkerhetsbälte	6
0100	1	41 66 724		1991-, RH, CV	1	Seat belt	Säkerhetsbälte	6
0110	2	40 77 509		CV	1	.Washer	.Bricka	5
0120	3	*94 22 346*		NLS	1	.Bearing sleeve	.Lagerhylsa	5
0130	3A	96 17 846			1	.Button	.Knapp	5
0140	3B	96 17 853			1	.Button	.Knapp	5
0150	4	84 99 204			2	Screw	Skruv	5
0160	4	84 99 238		CV	1	.Screw	.Skruv	6
0170	5	96 81 735			2	Screw	Skruv	5
0180	5	84 99 204		CV	1	.Screw	.Skruv	5
0190	6	94 85 020			2	Screw	Skruv	6
0200	8	96 11 724		115), LH	1	Belt catch	Bältlås	5
0210	8	40 77 616		116), -1990, LH	1	Belt catch	Bältlås	5
0220	8	96 11 732		115), RH	1	Belt catch	Bältlås	5
0230	8	40 77 624		116), -1990, RH	1	Belt catch	Bältlås	5
0240	8	96 11 732		115), LH, RHD, JP	1	Belt catch	Bältlås	5
0250	8	40 77 624		116), -1990, LH, RHD, JP	1	Belt catch	Bältlås	5
0260	8	96 11 740		115), RH, US, CA, JP	1	Belt catch	Bältlås	5
0270	8	40 77 632		116), -1990,RH, US,CA,JP	1	Belt catch	Bältlås	5
0280	8A	40 79 950		1991-	2	Belt catch	Bältlås	5
0290	8A	40 79 943		125), 1991-	2	Belt catch	Bältlås	5
0300	9	84 99 204			1	.Screw	.Skruv	5
0310	9	95 86 827		125), 1991-	1	.Screw	.Skruv	5
0320	10	40 42 974		125), 1991-	1	Reinforcement	Förstärkning	6
0330	11	40 31 399			2	Cover	Kåpa	5
0340	12	84 10 961			4	Screw	Skruv	5
0350	13	79 70 536		CV	4	Screw	Skruv	6
0360	14	86 01 916		CV	4	Clip nut	Clipsmutter	3
0370	15	98 24 830		LH, CV	1	Protection	Skydd	6
0380	15	98 24 848		RH, CV	1	Protection	Skydd	6
0390	16	96 48 999		LH	1	Cover	Kåpa	4
0400	16	96 49 005		RH	1	Cover	Kåpa	4
0410	16	96 48 957		195), LH	1	Cover	Kåpa	
0420	16	96 48 965		195), RH	1	Cover	Kåpa	

115. Ch. -L3000081, -L5000002, -L7000105
116. Ch. L3000082-, L5000003-, L7000106-
125. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
195. For cars with wind cover over the rear seat. — För bilar med vindskydd över baksätet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-106

Safety belt, front seat
4SN, 5CK

Bilbälte framsäte
4SN, 5CK

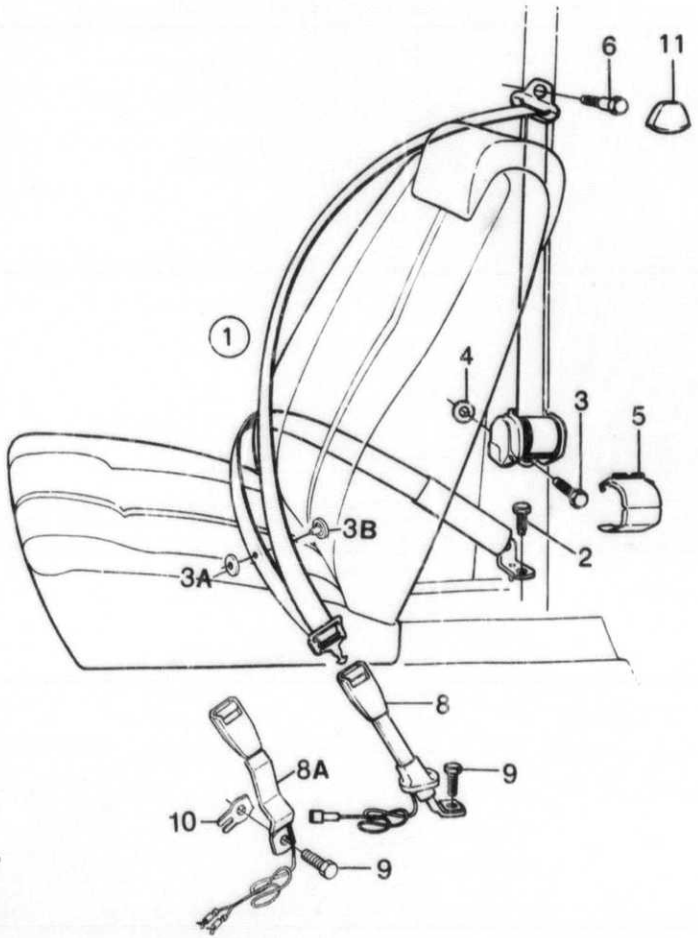

F4716 AAC90

1675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 05 054		115), LH	1	Seat belt	Säkerhetsbälte	3
0020	1	97 05 062		115), RH	1	Seat belt	Säkerhetsbälte	3
0030	1	40 77 640		116), LH	1	Seat belt	Säkerhetsbälte	3
0040	1	40 77 699		116), RH	1	Seat belt	Säkerhetsbälte	3
0050	1	40 77 681		116), LH, RHD	1	Seat belt	Säkerhetsbälte	3
0060	1	40 77 657		116), RH, RHD	1	Seat belt	Säkerhetsbälte	3
0070	2	84 99 204			2	·Screw	·Skruv	5
0080	3	84 99 238			2	·Screw	·Skruv	6
0090	3A	96 17 846			1	·Button	·Knapp	5
0100	3B	96 17 853			1	·Button	·Knapp	5
0110	4	80 30 017		115)	2	·Washer	·Bricka	5
0120	4	40 77 509		116)	2	·Washer	·Bricka	5
0130	5	94 50 990		115)	2	·Cover	·Kåpa	4
0140	6	96 81 735			2	Screw	Skruv	5
0150	8	96 11 724		115), LH	1	Belt catch	Bältlås	5
0160	8	40 77 616		116), -1990, LH	1	Belt catch	Bältlås	5
0170	8	96 11 732		115), RH	1	Belt catch	Bältlås	5
0180	8	40 77 624		116), -1990, RH	1	Belt catch	Bältlås	5
0190	8	96 11 732		115), LH, RHD, JP	1	Belt catch	Bältlås	5
0200	8	40 77 624		116), -1990, LH, RHD, JP	1	Belt catch	Bältlås	5
0210	8	96 11 740		115), RH, US, CA, JP	1	Belt catch	Bältlås	5
0220	8	40 77 632		116), -1990,RH, US,CA,JP	1	Belt catch	Bältlås	5
0230	8A	40 79 950		1991-	2	Belt catch	Bältlås	5
0240	8A	40 79 943		125), 1991-	2	Belt catch	Bältlås	5
0250	9	84 99 204			1	·Screw	·Skruv	5
0260	9	95 86 827		125), 1991-	1	·Screw	·Skruv	5
0270	10	40 42 974		125), 1991-	2	Reinforcement	Förstärkning	6
0280	11	96 18 935			2	Cover	Kåpa	5

115. Ch. -L3000081, -L5000002, -L7000105
116. Ch. L3000082-, L5000003-, L7000106-
125. For cars with electrically adjustable seats För bilar med elmanövrerade stolar

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-108

Safety belt, rear seat
Bilbälte, baksäte

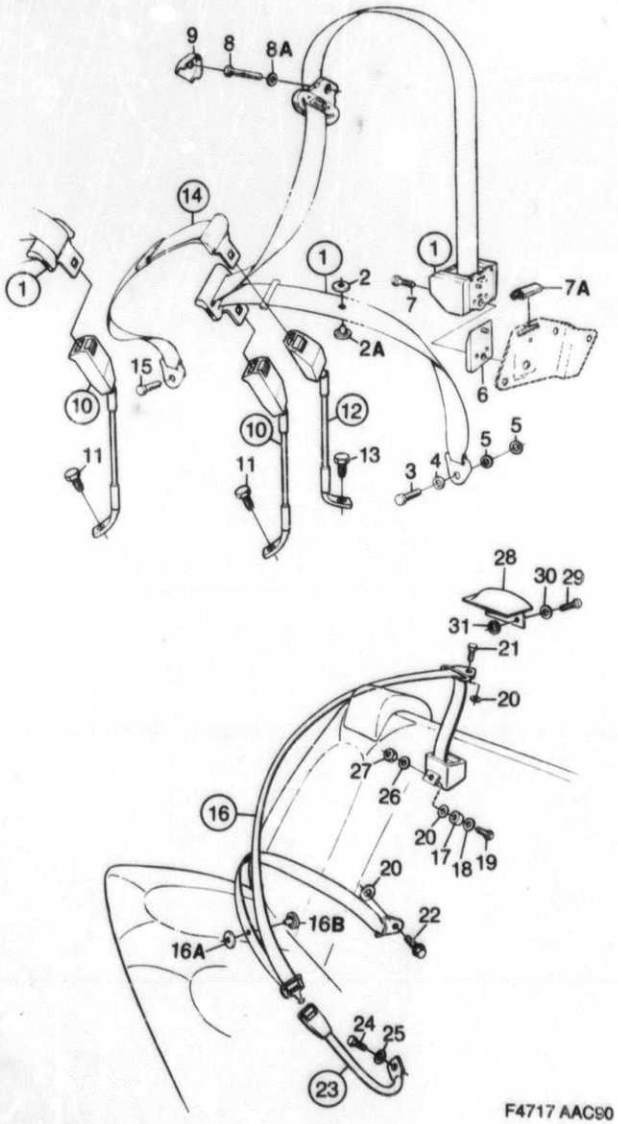

F4717 AAC90

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	97 31 969		115), LH, 2SN, 3CK	1	Seat belt	Säkerhetsbälte	5
0030	1	95 40 394		116), -1990, LH, 2SN,3CK	1	Seat belt	Säkerhetsbälte	5
0035	1	40 80 503		1991-, LH, 2SN, 3CK	1	Seat belt	Säkerhetsbälte	5
0040	1	97 31 977		115), RH, 2SN, 3CK	1	Seat belt	Säkerhetsbälte	5
0050	1	95 40 402		116), -1990, RH, 2SN,3CK	1	Seat belt	Säkerhetsbälte	5
0055	1	40 80 511		1991-, RH, 2SN, 3CK	1	Seat belt	Säkerhetsbälte	5
0060	1	97 31 084		115), LH, 4SN, 5CK	1	Seat belt	Säkerhetsbälte	5
0070	1	95 40 410		116), -1990, LH, 4SN,5CK	1	Seat belt	Säkerhetsbälte	5
0075	1	40 80 529		1991-, LH, 4SN, 5CK	1	Seat belt	Säkerhetsbälte	5
0080	1	97 31 092		115), RH, 4SN, 5CK	1	Seat belt	Säkerhetsbälte	5
0085	1	95 40 428		116), -1990, RH, 4SN,5CK	1	Seat belt	Säkerhetsbälte	5
0090	1	40 80 537		1991-, RH, 4SN, 5CK	1	Seat belt	Säkerhetsbälte	5
0100	2	96 17 846			1	.Button	.Knapp	5
0101	2A	96 17 853			1	.Button	.Knapp	5
0102	3	84 99 238			2	.Screw	.Skruv	6
0120	4	80 30 017		115), 2SN, 3CK	2	.Washer	.Bricka	5
0130	4	40 77 509		116), 2SN, 3CK	2	.Washer	.Bricka	5
0140	5	*94 57 490*		NLS	2	.Spacer sleeve	.Distanshylsa	5
0160	6	94 22 411		4SN, 5CK	2	.Spacer washer	.Distansbricka	5
0180	7	84 99 238		4SN, 5CK	2	.Screw	.Skruv	6
0200	7	84 99 204		2SN, 3CK	2	.Screw	.Skruv	5
0210	7A	40 34 385		116), 4SN, 5CK	2	Guide moulding	Styrlist	6
0220	8	97 24 717			2	Screw	Skruv	5
0225	8	94 85 020		2SN, 3CK	2	Screw	Skruv	6
0230	8A	73 98 340		2SN	2	Washer	Bricka	5
0240	9	94 85 657		115)	2	Cover	Kåpa	5
0250	9	40 31 399		116)	2	Cover	Kåpa	5
0260	10	98 11 001		115), LH	1	Belt catch	Bältlås	6
0270	10	95 40 352		116), LH	1	Belt catch	Bältlås	6
0300	10	98 11 019		115), RH	1	Belt catch	Bältlås	6
0310	10	95 40 360		116), RH	1	Belt catch	Bältlås	6
0340	11	84 99 238			3	.Screw	.Skruv	6
0360	12	98 10 961		115)	1	Belt catch	Bältlås	6
0370	12	95 40 378		116)	1	Belt catch	Bältlås	6
0400	13	84 99 238			1	.Screw	.Skruv	6
0425	14	96 11 674		115)	1	Lap belt	Höftbälte	5
0430	14	95 40 386		116)	1	Lap belt	Höftbälte	5
0440	15	84 99 204			1	.Screw	.Skruv	5
0460	16	96 45 235		173), CV	2	Seat belt	Säkerhetsbälte	5
0470	16	41 55 578		174), CV	2	Seat belt	Säkerhetsbälte	5
0480	16A	96 17 846		CV	1	.Button	.Knapp	5
0481	16B	96 17 853		CV	1	.Button	.Knapp	5
0482	17	96 46 290		CV	1	.Spacer sleeve	.Distanshylsa	5
0500	18	80 30 017		173), CV	1	.Washer	.Bricka	5
0510	18	40 77 509		174), CV	1	.Washer	.Bricka	5
0520	19	96 46 308		CV	1	.Screw	.Skruv	5
0540	20	98 50 876		173), CV	2	.Lock washer	.Låsbricka	5
0560	21	84 99 204		CV	1	.Screw	.Skruv	5
0580	22	73 99 165		173), CV	1	.Screw	.Skruv	5
0590	22	84 99 238		174), CV	1	.Screw	.Skruv	6
0600	23	96 45 250		173), CV, LH	1	Belt catch	Bältlås	6
0620	23	96 45 268		173), CV, RH	1	Belt catch	Bältlås	6
0630	23	41 55 594		174), CV	2	Belt catch	Bältlås	6
0640	24	84 99 238		CV	1	.Screw	.Skruv	6
0660	25	98 50 876		173), CV	1	.Lock washer	.Låsbricka	5
0670	25	40 77 509		174), CV	1	.Washer	.Bricka	5
0680	26	89 09 632		CV	2	Washer	Bricka	5
0700	27	91 60 664		CV	2	Nut	Mutter	5

115. Ch. -L3000081, -L5000002, -L7000105
116. Ch. L3000082-, L5000003-, L7000106-
173. Ch. -M7006120
174. Ch. M7006121-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

5-I10

Safety belt, rear seat

Bilbälte, baksäte

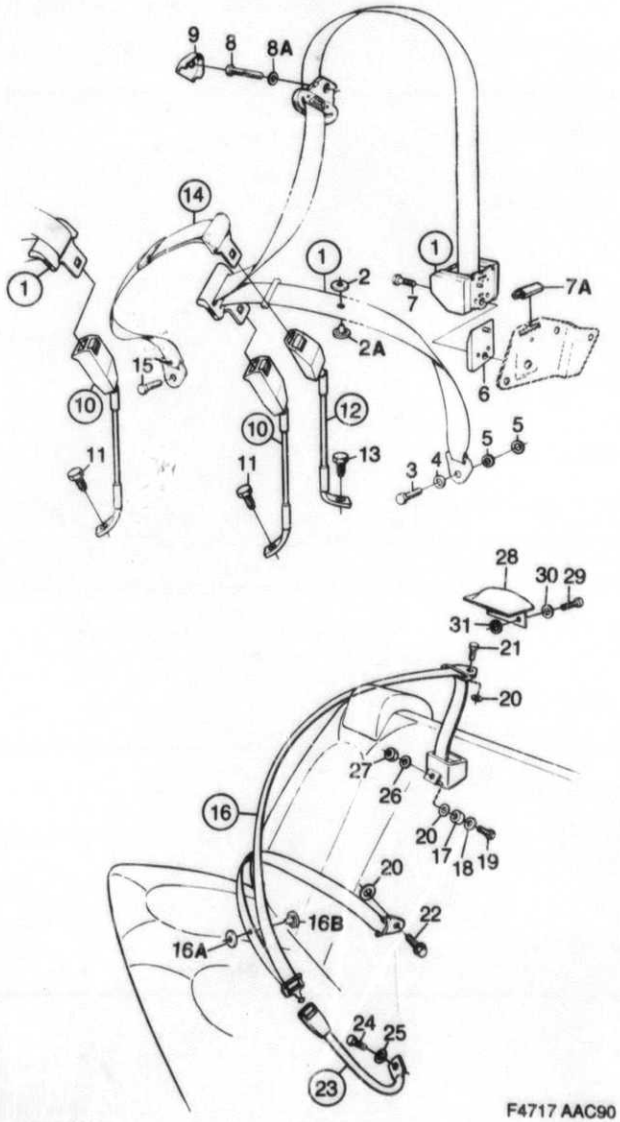

F4717 AAC90

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0720	28	69 97 472		105), CV, LH	1	Cover	Kåpa	6
0730	28	91 60 334		106), CV, LH	1	Cover	Kåpa	6
0740	28	69 97 480		105), CV, RH	1	Cover	Kåpa	6
0750	28	91 60 342		106), CV, RH	1	Cover	Kåpa	6
0760	29	73 99 637		CV	4	Screw	Skruv	5
0780	30	79 74 249		CV	4	Washer	Bricka	5
0800	31	79 15 564		CV	4	Star washer	Taggbricka	5

105. Ch. --L7015006
106. Ch. L7015007--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Complete set
5-I12
Car body, internal


Satser
Kaross, invändig

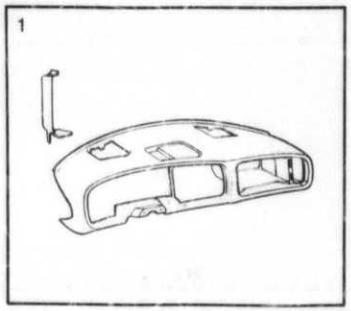


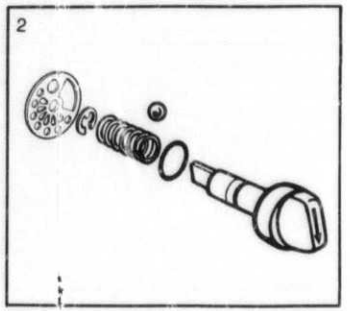

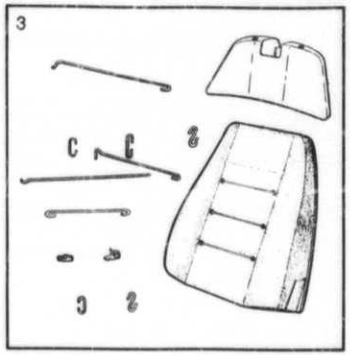

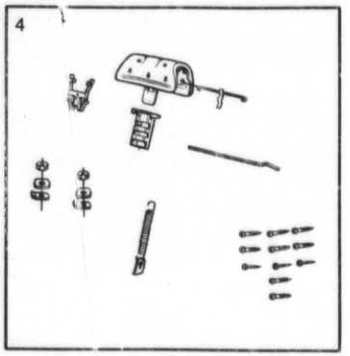

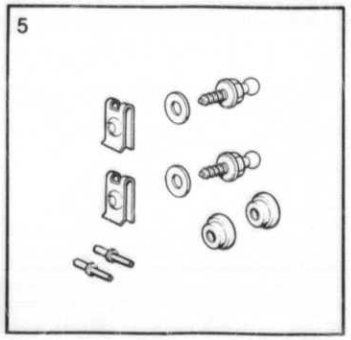

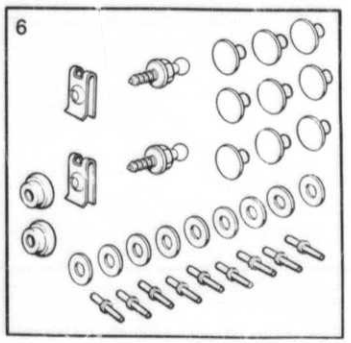

F3770 - AAC90

2500	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 257			1	Panel kit	Panelsats	6
0020		*96 11 336*		NLS - USE 4082830	1	.Panel	.Panel	6
0030		*96 11 534*		LH NLS - USE 4259560	1	.Crash pad	.Stötskydd	6
0050		96 11 559		RH	1	.Crash pad	.Stötskydd	6
0070		96 80 224			4	.Plastic washer	.Plastbricka	5
0080		96 18 299			3	.Screw	.Skruv	5
0090		*94 34 614*		NLS - USE 4155636	1	.Screw	.Skruv	5
0100		96 18 315			1	.Screw	.Skruv	5
0110		96 18 281			1	.Screw	.Skruv	5
0120								
0130	2	97 46 694			X	Control set	Reglagesats	3
0160		94 81 425			1	.Knob	.Vred	6
0170		79 36 008			1	.E-circlip	.Spårryttare	5
0180		94 20 043			1	.Ball	.Kula	5
0190		94 20 035			1	.Spring	.Fjäder	5
0200		94 25 844			1	.Washer	.Bricka	6
0210		79 72 078			1	.O-ring	.O-ring	2
0220								
0310	3	96 14 520		41), 1990	2	Mounting kit	Monteringssats	6
0320		97 26 795			2	.Cover rod	.Klädselbåge	5
0330		84 00 350			10	.Clip	.Clips	5
0340		94 50 685			3	.Clamp	.Klammer	5
0350		95 84 749			2	.Wire rod	.Trådten	5
0360		97 02 465			1	.Cover	.Kåpa	6
0370		96 88 458			1	.Backrest cushion	.Ryggdyna	6
0380		97 69 217			2	.Hook	.Krok	5
0390		94 59 975			4	.Clip	.Clips	5
0400								
0410	3	95 30 155		36), 1990	2	Mounting kit	Monteringssats	6
0420		97 26 795			2	.Cover rod	.Klädselbåge	5
0430		84 00 350			10	.Clip	.Clips	5
0440		94 50 685			4	.Clamp	.Klammer	5
0450		96 94 969		1)	2	.Wire rod	.Trådten	5
0460		97 02 465			1	.Cover	.Kåpa	6
0470		96 88 458			1	.Backrest cushion	.Ryggdyna	6
0480		97 69 209			6	.Hook	.Krok	5
0490		97 69 217			4	.Hook	.Krok	5
0500		97 69 225			4	.Hook	.Krok	5
0510		94 59 975			4	.Clip	.Clips	5
0520		95 84 715		1)	2	.Wire rod	.Trådten	5
0530		95 84 731			2	.Wire rod	.Trådten	5
0540								
0550	3	96 14 546		35), 1990	2	Mounting kit	Monteringssats	6
0560		97 26 795			2	.Cover rod	.Klädselbåge	5
0570		84 00 350			10	.Clip	.Clips	5
0580		94 50 685			4	.Clamp	.Klammer	5
0590		97 02 465			1	.Cover	.Kåpa	6
0600		98 57 731			1	.Backrest cushion	.Ryggdyna	6
0610		97 26 779		1)	1	.Attaching bracket	.Fästvinkel	5
0620		79 61 642			1	.Rivet	.Nit	5
0630		97 40 663		1)	1	.Elastic	.Resårband	6
0640								
0880	4	96 14 512		1990	2	Mounting kit	Monteringssats	6
0890		97 18 131			2	.Hex. socket screw	.Insexskruv	5
0900		79 70 536			2	.Screw	.Skruv	6
0910		79 81 921			2	.Screw	.Skruv	5
0920		79 22 396			1	.Screw	.Skruv	5
0930		97 15 525			2	.Screw	.Skruv	5
0940		80 74 288			1	.Nut	.Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
35. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
41. For cars with upholstery "PARALLEL" För bilar med klädsel "PARALLELL"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12


Complete set


5-I14


Car body, internal


Satser


Kaross, invändig

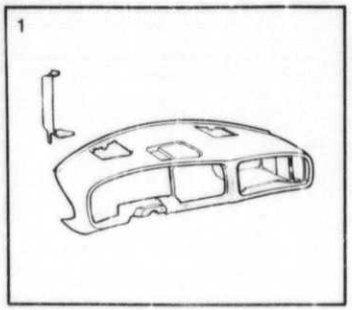


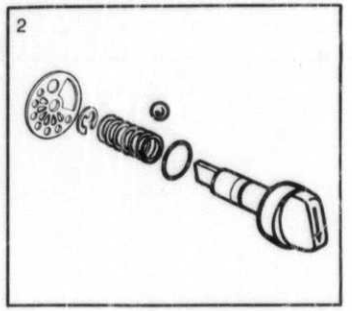

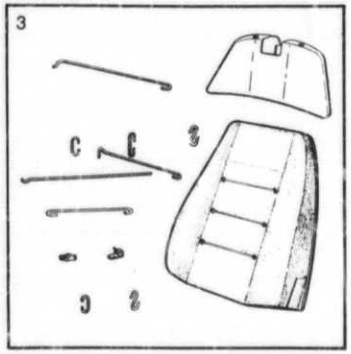

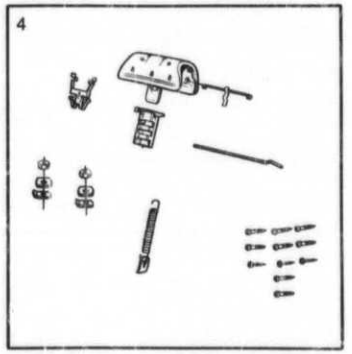

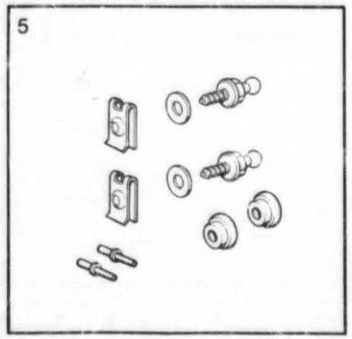

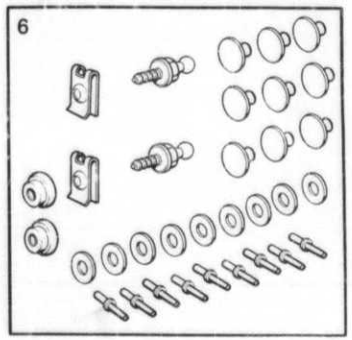

F3770 - AAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0950		89 39 449			1	.Washer	.Bricka	5
0960		98 49 795			1	.Nut	.Mutter	5
0970		98 09 690			1	.Framework	.Stomme	6
0980		94 59 868			1	.Wire rod	.Trådten	6
0990		40 31 563			1	.Sleeve	.Hylsa	5
1000		97 96 848			1	.Locking spring	.Spärrfjäder	5
1010		98 33 971			1	.Clip	.Clips	5
1020		89 35 751			1	.Spring	.Fjäder	5
1030		94 16 181			1	.Wire rod	.Trådten	5
1040								
1050	5	41 70 312		CV	1	Mounting kit	Monteringssats	5
1060				1)	2	.Push button	.Tryckknapp	
1070		84 29 441			2	.Spacer	.Mellanlägg	4
1080		*79 72 045*		NLS - USE 7961659	2	.Rivet	.Nit	5
1090				1)	2	.Fastener	.Fästelement	
1100				1)	2	.Clip nut	.Clipsmutter	
1110								
1120	6	41 70 338		CV	1	Mounting kit	Monteringssats	5
1130				1)	9	.Push button	.Tryckknapp	
1135				1)	2	.Push button	.Tryckknapp	
1140		84 29 441			9	.Spacer	.Mellanlägg	4
1150		*79 72 045*		NLS - USE 7961659	9	.Rivet	.Nit	5
1160				1)	2	.Fastener	.Fästelement	
1170				1)	2	.Clip nut	.Clipsmutter	
1180		98 49 514			2	.Rivet	.Nit	5
1190				1)	2	.Washer	.Bricka	

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A22
Other interior equipment	5-G04
Complete sets:	5-I12

8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041

TABLE OF CONTENTS

0010	**Heating and ventilation system**		
0020	Heater core, water valve etc	8C : 5	5-J06
0030	Fan unit, air filter etc	8C : 7	5-J08
0040	Draft channels, control etc Part 1	8C : 11	5-J12
0050	Draft channels, control etc Part 2	8C : 13	5-J14
1260	Vacuum system	8C : 15	5-J16
1270	Air conditioning, compressor part B201 (Sanden)	8C : 17	5-J18
1280	Air conditioning, compressor part B202, B212 (Sanden)	8C : 19	5-J20
1290	Air conditioning, evaporator part (Sanden)	8C : 21	5-J22
1300	**Complete sets**		
1310	Car body, heating and ventilation	8C : 25	5-K02

1320
1330
1340
1380
1400

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

0042
1350
1360
1380
1400
1420
2700
2710
2720
2730
2740
2750
2760
2770
2780
2820
2840
4280
7005
7006
7010
7020
7030
7040
7050
7060
7070
7080
7090
7170
7180

INNEHÅLLSFÖRTECKNING

Värme- och ventilationssystem

Värmeväxlare, värmekran etc	8C : 5	5-J06
Fläktenhet, luftfilter etc	8C : 7	5-J08
Fördelningskanaler, reglage etc del 1	8C : 11	5-J12
Fördelningskanaler, reglage etc del 2	8C : 13	5-J14
Vacuumsystem	8C : 15	5-J16
Luftkonditionering, kompressordel B201 (Sanden)	8C : 17	5-J18
Luftkonditionering, kompressordel B202, B212 (Sanden)	8C : 19	5-J20
Luftkonditionering, förångardel (S anden)	8C : 21	5-J22

Satser

Kaross, värme och ventilation	8C : 25	5-K02

SUMARIO

Sistema de calefaccion y ventilacion

Cambiador de calor, valvua de agua etc	8C : 5	5-J06
Ventilador de la calleaccion, filtr o de aire	8C : 7	5-J08
Canales de distribucion, del piso etc 1a parte	8C : 11	5-J12
Canales de distribucion, del piso etc 2a parte	8C : 13	5-J14
Sistema de vacio	8C : 15	5-J16
Aire acondicionado, unidad de compresor B201 (Sanden)	8C : 17	5-J18
Aire acondicionado, unidad de compresor B202, B212 (Sanden)	8C : 19	5-J20
Aire acondicionado, unidad de evadorador (Sanden)	8C : 21	5-J22

Juegos completos

Carosseria, calefaccion y ventilation	8C : 25	5-K02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-J06

Heat exchanger
Water valve

Värmeväxlare
Värmekran

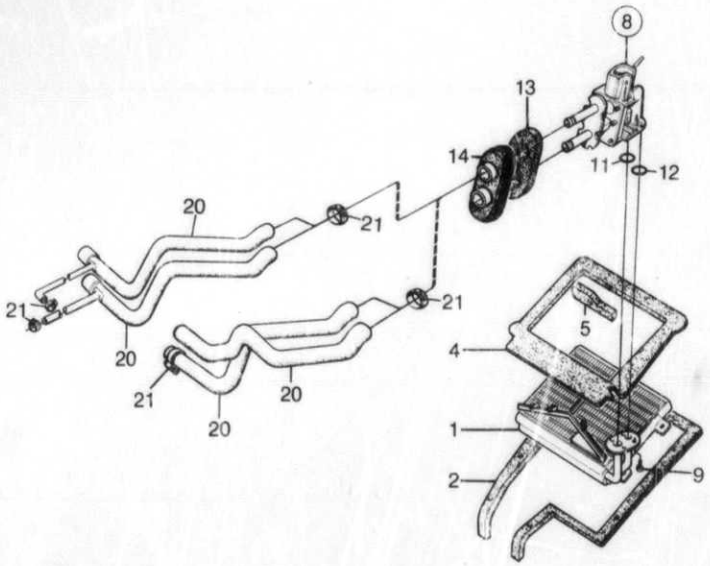

F1368 AAC90

1851	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	94 82 555			1	Heat exchanger	Värmeväxlare	4
0020	2			See page 8C-011, 5-J12		Seal	Tätning	
0030	4	94 01 001			1	Seal	Tätning	5
0040	5	94 01 084			1	Seal	Tätning	5
0050	8	*97 46 322*		-1991	1	Water valve	Värmekran	9
0060				See page 8C-025, 5-K02				
0060				NLS - USE 8605388				
0070	8	86 05 388		1992-	1	Water valve	Värmekran	9
0080				See page 8C-025, 5-K02				
0090	9	80 97 750			4	.Screw	.Skruv	5
0100	11	94 79 213			1	.O-ring	.O-ring	2
0110	12	94 79 221			1	.O-ring	.O-ring	
0120	13	94 45 438			1	Insulation	Isolering	6
0130	14	40 73 805			1	Seal	Tätning	5
0140	20			B201		Water hose	Vattenslang	
0150				See page 2-129, 1-H10				
0160	20			B202, B212		Water hose	Vattenslang	
0170				See page 2-131, 1-H12				
0180	21					Hose clamp	Slangklämma	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX


Heating and ventilation system	5-J06
Complete sets	5-K02

Heating and ventilation

5-J08 Fan unit Air filter

Värme och ventilation

Fläktenhet
Luftfilter

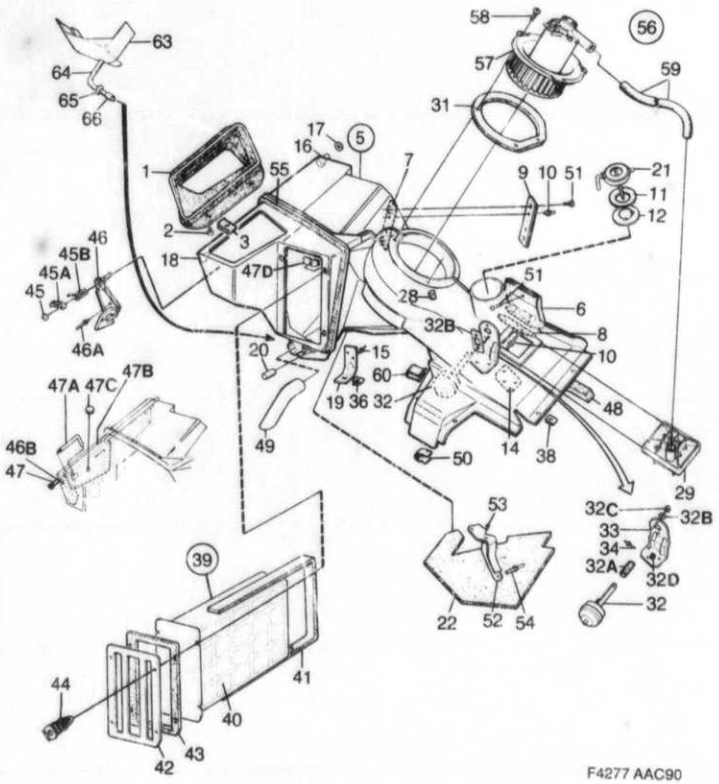

F4277 AAC90

1855	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	94 00 623			1	Air inlet	Luftintag	5
0020	2	79 22 354			4	Screw	Skruv	5
0030	3	94 26 909			4	Nut	Mutter	3
0040								
0050	5	*40 72 583*		-1990 NLS - USE 4074290	1	Heater housing	Värmehus	5
0060	5	40 74 290		1991-	1	Heater housing	Värmehus	5
0070	5	40 72 591		AC	1	Heater housing	Värmehus	5
0080	6	*94 00 714*		LH NLS	1	.Bracket	.Konsol	6
0090	7	*94 61 278*		RH NLS	1	.Bracket	.Konsol	6
0100	8	*94 17 874*		LH NLS	1	.Plate	.Plåt	6
0110	9	*94 61 260*		RH NLS	1	.Plate	.Plåt	5
0120	10	79 72 052			5	.Rivet	.Nit	5
0130	11	94 17 916			1	.Seal	.Tätning	5
0140	12	94 22 767			1	.Throttle disc	.Spjällskiva	5
0150	14	*94 26 008*		NLS	1	.Plate	.Plåt	6
0160	15	*79 72 045*		NLS - USE 7961659	4	.Rivet	.Nit	5
0170	16	94 00 805			1	.Bearing	.Lagring	5
0180	17	*94 42 203*		NLS	1	.Clamp	.Klämmer	5
0190	18	71 62 308			1	.Plug	.Plugg	5
0200	19	*94 01 282*		NLS	1	.Bracket	.Konsol	6
0210	20	94 81 912			1	.Plug	.Plugg	5
0220	21	94 17 908			1	.Throttle disc	.Spjällskiva	5
0230	22	94 82 175			1	.Insulation	.Isolering	6
0240	28	79 68 555			3	.Clip nut	.Clipsmutter	3
0250	29	95 58 784			1	.Resistor	.Motstånd	5
0260	31	94 18 070			1	.Seal	.Tätning	5
0270	32	94 79 924			1	.Vacuum servo	.Vakuumservo	5
0280	32A	*94 44 811*		NLS	1	.Protection	.Skydd	5
0290	32B	94 50 487			1	.Washer	.Bricka	5
0300	32C	79 40 406			2	.Nut	.Mutter	5
0310	32D	94 41 221			1	.Clip	.Clips	5
0320	33	*94 17 924*		NLS	1	.Bracket	.Konsol	6
0330	34	*79 72 045*		NLS - USE 7961659	3	.Rivet	.Nit	5
0340	36	79 33 682			1	.Spring nut	.Fjädermutter	3
0350	38	94 41 239			5	.Clip nut	.Clipsmutter	3
0360								
0370	39	*94 79 981*		-1990 NLS - USE 4072427, 4072617	1	.Air filter	.Luftfilter	2
0380	40	94 01 126		-1990	1	..Filter	..Filter	2
0390	41	94 18 054		-1990	1	..Seal	..Tätning	5
0400	42	94 81 060		-1990	1	..Seal	..Tätning	5
0410	43	94 18 062		-1990	1	..Cover	..Täcklock	6
0420	44	94 79 973		-1990	4	..Clamp	..Klämma	6
0430								
0440	40	40 72 427		1991-	1	.Air filter	.Luftfilter	2
0450	42	40 72 617		1991-	1	.Cover	.Täcklock	6
0460	43	40 72 625		1991-	1	..Seal	..Tätning	5
0470	44	94 79 973		1991-	2	..Clamp	..Klämma	6
0480								
0490	45	40 73 748		AC	1	.Clip	.Clips	5
0500	45A	94 00 896		AC	1	.Lever	.Hävarm	6
0510	45B	94 20 274		AC	1	.Spring	.Fjäder	5
0520	46	94 20 282		AC	1	.Bracket	.Konsol	6
0530	46A	*79 72 326*		AC NLS - USE 7972490	3	.Rivet	.Nit	5
0540	46B	94 38 250		AC	1	.Dolly plate	.Mothållsplåt	6
0550	47	94 22 403		AC	1	.Pivot pin	.Lagertapp	5
0560	47A	94 20 241		AC	1	.Shaft	.Axel	6
0570	47B	94 81 680		AC	1	.Shutter	.Spjäll	5
0580	47C	71 63 074		AC	2	.Plug	.Plugg	5
0590	47D	94 65 600		AC	4	.Nut	.Mutter	3
0600								
0610	48	94 01 159			1	Seal	Tätning	5
0620	49	40 70 413			1	Draining hose	Dräneringsslang	5
0630	50	94 51 253			2	Clip	Clips	5
0640	51	80 59 602			3	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-J10

Fan unit
Air filter

Fläktenhet
Luftfilter

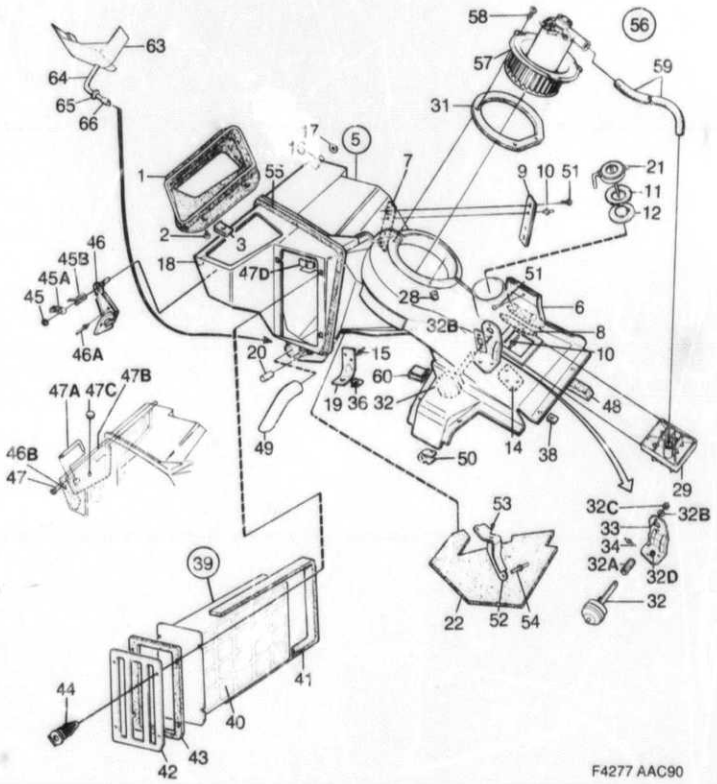

1855	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	52	*94 32 964*		NLS	1	Bracket	Konsol	6
0660	53	82 09 009		-1991	1	Buffer	Buffert	5
0670	53	93 88 588		1992-	1	Plug	Plugg	1
0680	54	79 61 709		-1991	2	Rivet	Nit	5
0690	54	82 35 178		1992-	2	Pop rivet	Popnit	5
0700	55	94 81 789			1	Seal	Tätning	5
0710								
0720	56	*86 05 172*		-1990 NLS - USE 8605248	1	Fan motor kit	Fläktmotorsats	4
0730	56	86 05 248		1991-	1	Fan motor kit	Fläktmotorsats	4
0740	57	40 73 474		1) -1990	1	.Fan unit	.Fläktenhet	4
0750	57	43 82 362		1)(4073698)1991-	1	.Fan unit	.Fläktenhet	4
0760		43 50 427		1991-	1	.Connector housing	.Kontakthus	4
0770		*71 55 187*		1991- NLS	1	.Cable terminal	.Kabelsko	5
0780	58	79 22 735			3	Screw	Skruv	5
0790	59	85 57 001			1	Hose	Slang	6
0800	60	94 62 557			1	Clip	Clips	5
0810	63	94 81 839			1	Cover	Kåpa	6
0820	64	93 63 276			1	Fuel hose	Bränsleslang	5
0830	65	82 45 888			1	Plug	Plugg	
0840	66	94 81 904			1	Non-return valve	Backventil	


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

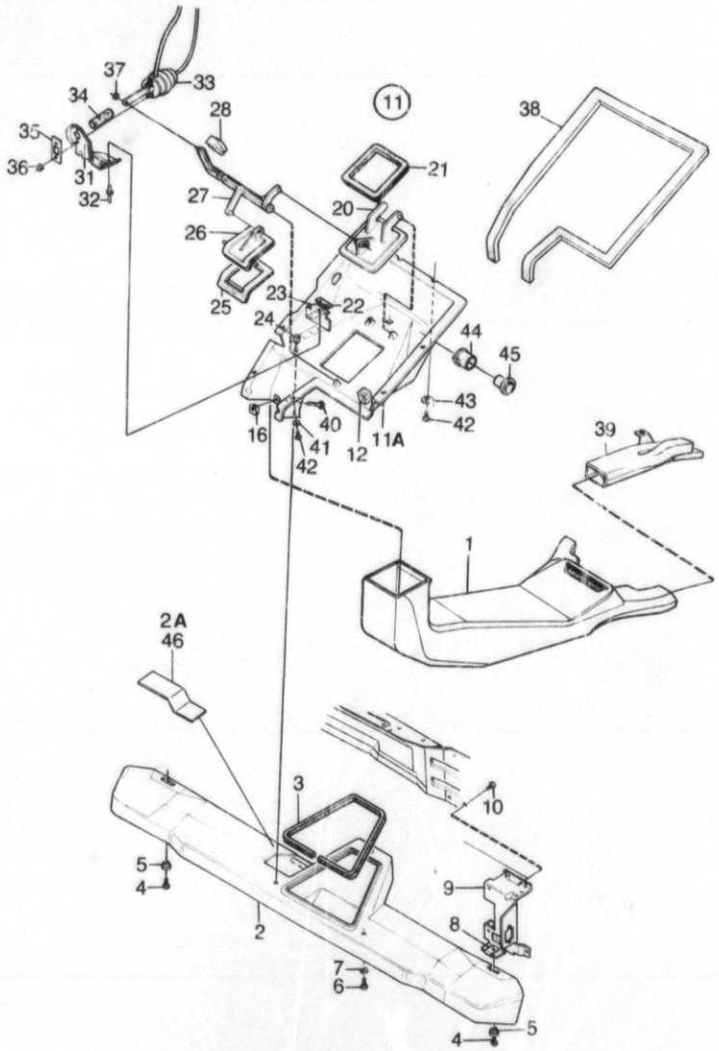

F3076 AAC90

1860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	94 79 999		-1990	1	Heat duct	Värmekanal	6
0030	1	94 81 938		1991-	1	Heat duct	Värmekanal	6
0060	2	94 80 211		-1990	1	Duct	Kanal	6
0065	2	41 66 831		1991-	1	Duct	Kanal	6
0070	2A	*86 02 542*		1991-,155) NLS	2	.Spacer	.Mellanlägg	6
0080	3	94 18 088			1	Seal	Tätning	5
0100	4	79 22 362			2	Screw	Skruv	5
0120	5	85 44 801			2	Washer	Bricka	3
0140	6	80 59 578			3	Screw	Skruv	5
0160	7	80 29 951		-1992	3	Washer	Bricka	5
0170	7	91 66 364		1993-	3	Washer	Bricka	5
0180	8	79 33 682			2	Spring nut	Fjädermutter	3
0200	9			See page 3A-129, 2-F10		Bracket	Konsol	
0270	10	79 22 347			2	Screw	Skruv	5
0221								
0222	11	40 72 609			1	Lower section	Underdel	5
0225	11	40 73 813		AC	1	Lower section	Underdel	9
0240	11A	94 00 946			1	.Lower section	.Underdel	6
0260	12	94 40 405			1	.Seal	.Tätning	5
0340	16	94 61 070			2	.Clip	.Clips	5
0420	20	94 00 961			1	.Throttle disc	.Spjällskiva	5
0440	21	94 00 979			1	.Seal	.Tätning	5
0460	22	94 69 164			1	.Seal	.Tätning	5
0480	23	94 69 156			2	.Guide rail	.Ledskena	6
0500	24	79 70 411			3	.Nut	.Mutter	5
0520	25	94 18 021			1	.Seal	.Tätning	6
0540	26	94 18 013			1	.Throttle disc	.Spjällskiva	5
0570	27	94 82 522			1	.Shaft	.Axel	6
0580	28	94 17 981			1	.Washer	.Bricka	5
0610	31	*94 17 973*		NLS	1	.Bracket	.Konsol	6
0620	32	79 72 490			2	.Rivet	.Nit	5
0630	33	94 22 940			1	.Vacuum servo	.Vakuumservo	5
0635	33	94 80 534		AC	1	.Vacuum servo	.Vakuumservo	5
0640	34	*94 44 811*		NLS	1	.Protection	.Skydd	5
0645	35	94 50 487			1	.Washer	.Bricka	5
0650	36	79 40 406			2	.Nut	.Mutter	5
0660	37	94 41 221			1	.Clip	.Clips	5
0665	38	94 18 039			1	.Seal	.Tätning	5
0666								
0667	39	94 81 946		1991-, LH	1	Air outlet	Luftutsläpp	6
0668	39	94 81 953		1991-, RH	1	Air outlet	Luftutsläpp	6
0670	40	79 22 354			2	Screw	Skruv	5
0680	41	80 29 951		-1992	5	Washer	Bricka	5
0685	41	91 66 364		1993-	5	Washer	Bricka	5
0690	42	79 22 370			7	Screw	Skruv	5
0700	43	*94 79 353*		NLS	2	Washer	Bricka	5
0710	44	94 65 303			2	Connector	Anslutning	5
0720	45	*94 80 252*		ME,FE NLS	2	Plug	Plugg	5
0730	46	*86 02 542*		-1990 NLS	1	Spacer	Mellanlägg	6

155. Part of: 4166831 Ingår i: 4166831
199. Ch. M2500001-, N7001863-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-J14

Control
Duct, part 2

Reglage
Kanal, del 2

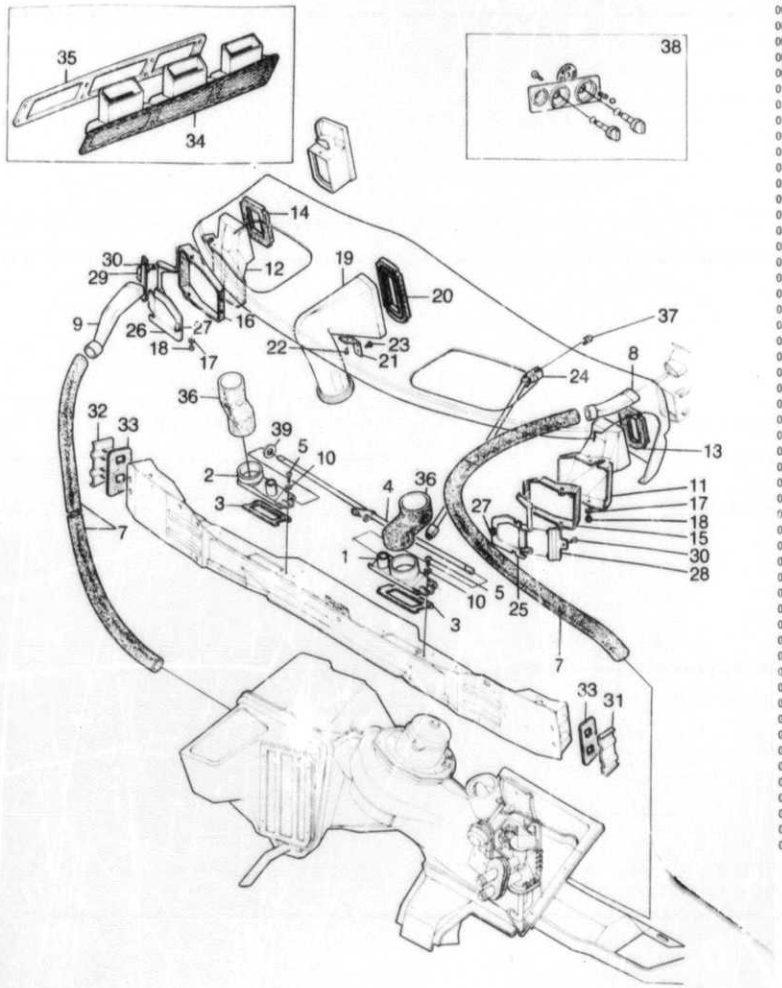

1900	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0020	1	94 18 138		LH	1	Throttle body	Spjällhus	6
0030	1	*94 80 153*		LH, ME, FE NLS	1	Throttle body	Spjällhus	6
0040	2	94 18 146		RH	1	Throttle body	Spjällhus	6
0050	2	*94 80 187*		RH, ME, FE NLS	1	Throttle body	Spjällhus	6
0060	3	94 01 712			2	Seal	Tätning	5
0070	4	94 23 112			1	Shaft	Axel	6
0110	5	79 22 420			4	Screw	Skruv	5
0130	7	94 01 340			2	Hose	Slang	6
0140	7	94 01 332		ME, FE	2	Hose	Slang	6
0150	8	94 26 792		LH	1	Connector	Anslutning	6
0160	8	94 45 776		LH, RHD	1	Connector	Anslutning	6
0170	9	94 26 784		RH	1	Connector	Anslutning	6
0180	9	94 26 792		RH, RHD	1	Connector	Anslutning	6
0190	10	80 29 951		-1992	4	Washer	Bricka	5
0195	10	91 66 364		1993-	4	Washer	Bricka	5
0200	11	94 18 344		LH	1	Air duct	Luftkanal	5
0210	11	94 20 399		LH, RHD	1	Air duct	Luftkanal	5
0220	12	94 18 450		RH	1	Air duct	Luftkanal	5
0230	12	94 20 464		RH, RHD	1	Air duct	Luftkanal	5
0240	13	94 01 373		LH	1	Seal	Tätning	5
0250	13	94 20 407		LH, RHD	1	Seal	Tätning	5
0260	14	94 18 468		RH	1	Seal	Tätning	5
0270	14	94 20 472		RH, RHD	1	Seal	Tätning	5
0280	15	94 79 643		LH	1	Seal	Tätning	5
0290	16	94 79 668		RH	1	Seal	Tätning	5
0300	17	80 29 951		-1992	6	Washer	Bricka	5
0305	17	91 66 356		1993-	6	Washer	Bricka	5
0310	18	94 41 213			6	Screw	Skruv	5
0340	19	94 79 908			1	Connector	Anslutning	6
0350	19	94 79 916		RHD	1	Connector	Anslutning	6
0360	20	94 01 431			1	Seal	Tätning	5
0380	21	94 01 449			1	Bracket	Konsol	6
0400	22	79 61 642			2	Rivet	Nit	5
0420	23	79 22 420			2	Screw	Skruv	5
0510	24	94 22 965			1	Control	Reglage	5
0520	24	94 44 738		RHD	1	Control	Reglage	5
0530	25	94 73 919		LH	1	Throttle disc	Spjällskiva	5
0540	26	94 73 901		RH	1	Throttle disc	Spjällskiva	5
0550	27	94 73 943			2	Spacer	Distans	5
0560	28	*94 26 214*		LH NLS	1	Bearing	Lagring	5
0570	29	*94 26 206*		RH NLS	1	Bearing	Lagring	5
0580	30	*80 98 030*		NLS - USE 7975063	2	Screw	Skruv	5
0660	31	*94 26 693*		LH NLS	1	Cover	Lock	5
0670	32	*94 26 701*		RH NLS	1	Cover	Lock	5
0680	33	94 26 727			2	Seal	Tätning	5
0690	34	92 88 150		LH, 3CK, 5CK	1	Air outlet	Luftutsläpp	5
0700	34	92 88 168		RH, 3CK, 5CK	1	Air outlet	Luftutsläpp	5
0710	34			4SN		Air outlet	Luftutsläpp	
0720				See page 8A-089, 4-D18				
0740	35	92 88 119		LH, 3CK, 5CK	1	.Seal	.Tätning	5
0750	35	40 71 478		RH, 3CK, 5CK	1	.Seal	.Tätning	5
0790	36	94 79 650			2	Duct	Kanal	5
0855	37	96 21 897			2	Bracket	Hållare	5
0880	38			See page 88-005, 5-A06		Control panel	Reglagepanel	
0900	39	85 50 840		168)	1	Bushing	Bussning	3

168. Ch. L7023212--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-J16

Vacuum system

Vacuumsystem

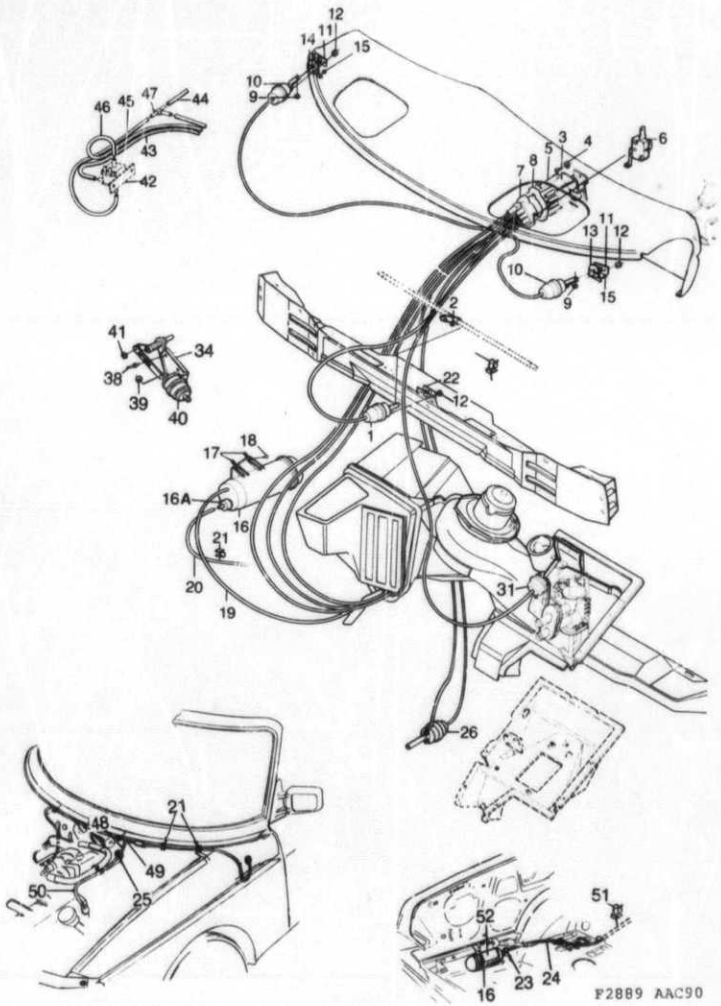

1910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	94 20 290			1	Vacuum servo	Vakuumservo	5
0020	2	94 41 221			1	Clip	Clips	5
0030	3	79 71 393			3	Screw	Skruv	5
0040	4	79 16 489			1	Washer	Bricka	5
0070	5	40 70 454			1	Selector	Selektor	3
0090	6	40 62 964			2	▪Switch	▪Brytare	3
0120	7	94 82 480			1	Vacuum line	Vakuumledning	5
0130	8	94 44 605			1	Washer	Bricka	6
0140	9	94 41 221			2	Clip	Clips	5
0150	10	94 30 968			2	Vacuum servo	Vakuumservo	5
0160	11	94 50 487			2	Washer	Bricka	5
0170	12	79 40 406			4	Nut	Mutter	5
0180	13	*94 26 651*		LH NLS	1	Bracket	Konsol	6
0190	14	94 26 644		RH	1	Bracket	Konsol	6
0200	15	79 61 709			4	Rivet	Nit	5
0210	16	94 37 906			1	Vacuum tank	Vakuumtank	5
0220	16A	86 05 107			1	▪Non-return valve kit	▪Backventilsats	5
0230	17	94 37 955			2	▪Nut	▪Mutter	3
0240	18	79 22 891			2	Screw	Skruv	5
0250	19	94 20 092			1	Hose	Slang	4
0255	19	93 98 421		CV	1	Hose	Slang	4
0260	20	91 36 243		-1990, L=1470 MM	1	Vaccum hose	Vakuumslang	5
0270	20	91 36 243		I, L=1670 MM	1	Vaccum hose	Vakuumslang	5
0280	21	79 33 443			4	Clip	Clips	5
0285	21	79 33 443		CV	5	Clip	Clips	5
0290	22	94 73 828			1	Protecting casing	Skyddskåpa	5
0292	23	93 98 405		CV	2	Hose	Slang	4
0294	24	93 98 413		CV	1	Hose	Slang	4
0296	25	93 26 752		CV	1	Non-return valve	Backventil	5
0300	26			See page 8C-011, 5-J12		Vacuum servo	Vakuumservo	
0360	31			See page 8C-007, 5-J08		Vacuum servo	Vakuumservo	
0390	34			See page 8C-007, 5-J08		Bracket	Konsol	
0440	39	79 40 398		AC	2	Lock nut	Låsmutter	5
0450	40	94 20 266		AC	1	Vacuum servo	Vakuumservo	5
0460	41	94 41 221		AC	1	Clip	Clips	5
0580	42			See page 3A-059, 2-C12		Solenoid valve	Magnetventil	
0600	43	94 20 308		AC	1	Vacuum hose	Vakuumslang	4
0620	44	94 82 571		AC	1	Vacuum hose	Vakuumslang	4
0640	45	94 82 563		AC	3	Vacuum hose	Vakuumslang	4
0670	46	94 82 589		AC	1	Vacuum hose	Vakuumslang	4
0680						Heater housing	Värmehus	
0690	47	83 66 791		AC	2	Pipe	Rör	4
0700	48	91 36 243		101) CV, L=70 MM	1	Vaccum hose	Vakuumslang	5
0705	48	91 36 243		102) CV, L=30 MM	1	Vaccum hose	Vakuumslang	5
0710	49	85 44 660		CV	1	T-pipe	T-rör	2
0720	50	91 36 243		CV, L=400 MM	1	Vaccum hose	Vakuumslang	5
0730	51	93 24 211		CV	1	Clip	Clips	5
0740	52	96 56 901		CV	1	Spacer	Mellanlägg	6
0750								
0760		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


101. Ch. -L7014818
102. Ch. L7014819-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

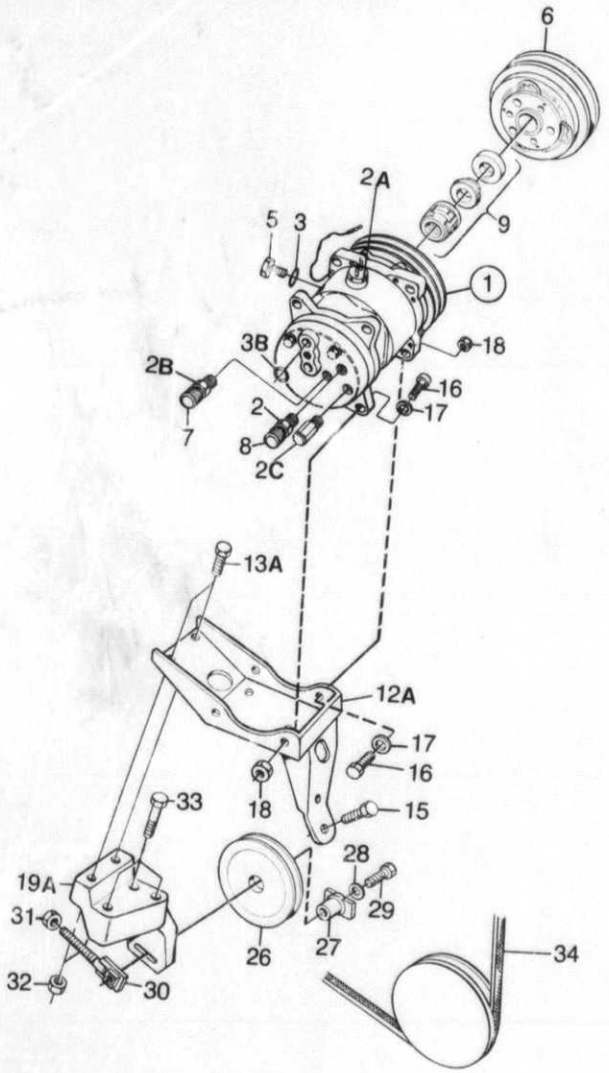

F3364 AAC90

1960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0055	1	*40 70 827*		121) NLS - USE 4073995	1	Compressor	Kompressor	6
0057	1	40 73 995		122)	1	Compressor	Kompressor	6
0060	2	40 71 411			1	.Valve	.Ventil	5
0075	2A	94 81 995			1	.Switch	.Brytare	4
0077	2B	94 82 225			1	.Valve	.Ventil	5
0080	2C	40 70 835			1	.Valve	.Ventil	5
0110	3	94 82 217			1	.Seal	.Tätning	6
0117	3B	79 72 318			2	.O-ring	.O-ring	2
0120	5	94 82 209			1	.Plug	.Plugg	5
0160	6	94 81 987			1	.Clutch	.Koppling	6
0170	7	40 71 593		156)	1	.Plug	.Plugg	5
0180	8	40 71 585		110)	1	.Plug	.Plugg	5
0185	9	40 74 944		121)	1	.Sealing kit	.Tätningssats	6
0190								
0275	12A	75 49 439			1	Bracket	Fäste	6
0290	13A	79 75 238			2	Screw	Skruv	5
0310	15	93 39 615			1	Screw	Skruv	5
0320	16	79 75 030			4	Screw	Skruv	5
0330	17	80 73 108			4	Washer	Bricka	5
0340	18	79 67 979			4	Nut	Mutter	5
0370	19A	75 43 556			1	Arm	Arm	5
0440	26	*93 25 663*		92) NLS - USE 4118964	1	.Pulley	.Remskiva	5
0445	26	41 18 964		93)	1	.Pulley	.Remskiva	5
0450	27	75 43 614			1	.Pin	.Axeltapp	5
0460	28	79 77 440			1	.Washer	.Bricka	5
0470	29	80 83 974			1	Screw	Skruv	5
0480	30	75 43 606			1	Screw	Skruv	
0490	31	79 71 922			1	Nut	Mutter	3
0500	32	79 67 953			2	Nut	Mutter	5
0510	33	79 75 238			3	Screw	Skruv	5
0540	34	93 67 020			1	V-belt	Kilrem	1
0550		94 82 043			1	Oil	Olja	4
0680				See page 8C-023, 5-J24	X	Air conditioning kit	Luftkonditioneringssats	


92. Ch. --L3004661, --L7008879
93. Ch. L3004662--, L7008880--
110. Black Svart
121. Ch. --L3007201, --L5002593, --L7021118
122. Ch. L3007202--, L5002594--, L7021119--
156. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

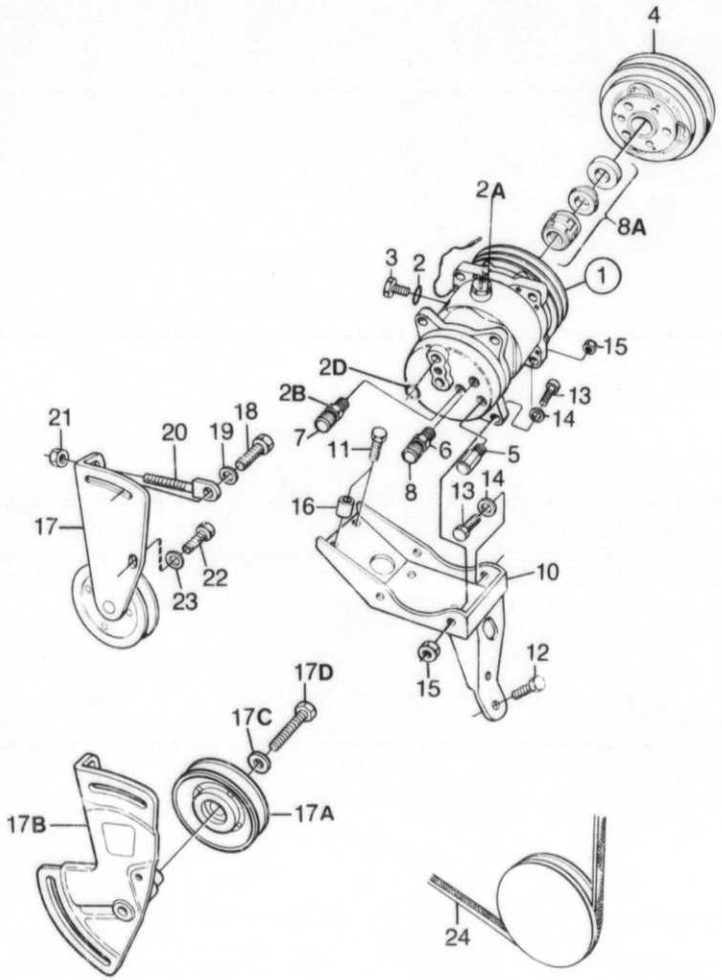

F3749 - AAC90

1965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 70 827*		121) NLS - USE 4073995	1	Compressor	Kompressor	6
0020	1	40 73 995		122) -1990	1	Compressor	Kompressor	6
0030	1	40 71 718		1991-	1	Compressor	Kompressor	6
0040	2	94 82 217			1	.Seal	.Tätning	6
0050	2A	94 81 995			1	.Switch	.Brytare	4
0060	2B	94 82 225			1	.Valve	.Ventil	5
0070	2D	79 72 318			2	.O-ring	.O-ring	2
0080	3	94 82 209			1	.Plug	.Plugg	5
0090	4	94 81 987			1	.Clutch	.Koppling	6
0100	5	40 70 835			1	.Valve	.Ventil	5
0110	6	40 71 411			1	.Valve	.Ventil	5
0120	7	40 71 593		156)	1	.Plug	.Plugg	5
0130	8	40 71 585		110)	1	.Plug	.Plugg	5
0140	8A	40 74 944		121)	1	.Sealing kit	.Tätningssats	6
0150								
0160	10	75 49 439		-1990	1	Bracket	Fäste	6
0170	10	41 18 774		1991-	1	Bracket	Fäste	6
0180	11	80 98 113			2	Screw	Skruv	5
0190	12	93 39 615			1	Screw	Skruv	5
0200	13	79 75 030			4	Screw	Skruv	5
0210	14	80 73 108			4	Washer	Bricka	5
0220	15	79 67 979			4	Nut	Mutter	5
0230	16	83 56 859			2	Sleeve	Hylsa	6
0240	17	75 42 228		189)	1	Tension pulley	Spännrulle	5
0250	17A	41 18 964		190)	1	Pulley	Remskiva	5
0260	17B	41 19 780		190)	1	Tensioning arm	Spännarm	6
0270	17C	80 73 108		190)	1	Washer	Bricka	5
0280	17D	93 45 232		190)	1	Lock screw	Låsskruv	5
0290	18	80 82 968		-1992	1	Screw	Skruv	5
0295	18	91 66 331		1993-	1	Screw	Skruv	5
0300	19	80 29 985		-1992	1	Washer	Bricka	5
0305	19	91 66 372		1993-	1	Washer	Bricka	5
0310	20	75 12 247		189)	1	Screw	Skruv	5
0320	20	42 83 198		190)	1	Screw	Skruv	6
0330	21	80 74 288		-1992	1	Nut	Mutter	5
0335	21	91 66 406		1993-	1	Nut	Mutter	5
0340	22	80 82 943			1	Screw	Skruv	5
0350	23	80 73 249		189)	1	Washer	Bricka	5
0360	23	80 29 985		190)-1992	1	Washer	Bricka	5
0365	23	91 66 372		1993-	1	Washer	Bricka	5
0370	24	93 67 020			1	V-belt	Kilrem	1
0380		94 82 043			1	Oil	Olja	4
0390				See page 8C-023, 5-J24	X	Air conditioning kit	Luftkonditioneringssats	


110. Black Svart
121. Ch. --L3007201, --L5002593, --L7021118
122. Ch. L3007202--, L5002594--, L7021119--
156. Brown Brun
189. Ch. --M5009667, --M7016370
190. Ch. M5009668--, M7016371--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

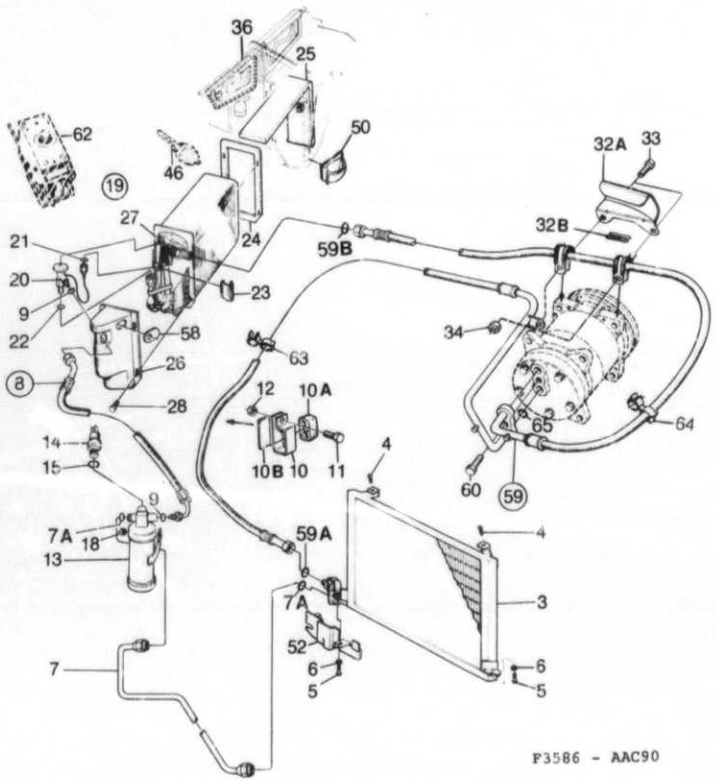

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	3	*40 70 918*		-1991 NLS - USE 4382396	1	Condenser	Kondensor	5
0020	3	43 82 396		1992-	1	Condenser	Kondensor	5
0030	4	80 59 578			2	Screw	Skruv	5
0040	5	79 22 420		-1991	2	Screw	Skruv	5
0050	5	79 73 001		1992-	2	Screw	Skruv	5
0060	6	80 29 951		-1991	2	Washer	Bricka	5
0070	7	94 82 035			1	Tube	Rör	5
0080	7A	*79 72 086*		NLS - USE 4318028	2	.O-ring	.O-ring	2
0090	8	94 82 027			1	Hose	Slang	5
0100	9	*79 72 086*		NLS - USE 4318028	2	.O-ring	.O-ring	2
0110	10	94 81 458			1	Clamp	Klammer	5
0120	10A	94 81 441			1	Spacer	Mellanlägg	5
0130	10B	94 81 664			1	Base	Underlägg	5
0140	11	*80 19 911*		NLS - USE 7399603	1	Screw	Skruv	5
0150	12	81 51 227			1	Nut	Mutter	5
0160	13	40 70 934			1	Reservoir	Behållare	4
0170	14	94 80 005			1	.Contact	.Kontakt	5
0180	15	*94 73 851*		NLS - USE 4073979	1	.O-ring	.O-ring	2
0190	18	81 51 235			1	Nut	Mutter	5
0200	19	94 80 955			1	Evaporator	Förångare	5
0210	20	94 80 914			1	.Valve	.Ventil	5
0220	21	79 72 078			1	.O-ring	.O-ring	2
0230	22	*79 72 094*		NLS - USE 4318036	1	.O-ring	.O-ring	2
0240	23	96 29 197			1	.Clamp	.Klamma	5
0250	24	94 80 245			1	.Seal	.Tätning	4
0260	25	*94 79 627*		NLS	1	.Seal	.Tätning	4
0270	26	94 81 185			1	.Cover	.Kåpa	5
0280	27	94 01 944			1	.Insulation	.Isolering	4
0290	28	79 22 461			4	Screw	Skruv	5
0300	32A	94 81 961	S	-1990	1	Brace	Bygel	5
0310	32A	40 72 492	S	1991-	1	Brace	Bygel	5
0320	32B	75 35 487	S		1	Protecting moulding	Skyddslist	5
0330	33	79 77 499			2	Screw	Skruv	5
0340	34	80 73 512			2	Lock nut	Låsmutter	3
0350	36			See page 8C-007, 5-J08		Shutter	Spjäll	
0360	46			See page 8C-015, 5-J16		Vacuum servo	Vakuumservo	
0370	50	*94 79 940*		RHD NLS	1	Clamp	Klamma	5
0380	52	94 82 399			1	Guard	Skydd	5
0390	58	94 81 193			1	Grommet	Genomföring	4
0400	59	94 82 365		I, TURBO	1	Hose	Slang	5
0410	59A	*79 72 094*		NLS - USE 4318036	1	.O-ring	.O-ring	2
0420	59B	*79 72 482*		NLS - USE 4318044	1	.O-ring	.O-ring	2
0430	60	73 99 280		1987-	1	Screw	Skruv	5
0440	62			See page 3A-059, 2-C12		Thermo switch	Termobrytare	
0450	63	73 98 373			1	Clamp	Klammer	5
0460	64	73 98 530			1	Clamp	Klammer	5
0470	65			See page 8C-017, 5-J18	2	O-ring	O-ring	
0480				See page 8C-019, 5-J20				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-J24

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2100							
0010	*96 98 283*		1990, B202 I	X	Air conditioning kit	Luftkonditioneringssats	6
0020			See page 8C-025, 5-K02				
0020			NLS - USE 8605198				
0030	*86 05 149*		1990, B202 TURBO	X	Air conditioning kit	Luftkonditioneringssats	6
0040			See page 8C-025, 5-K02				
0040			NLS - USE 8605198				
0050	96 98 291		1990, B201	X	Air conditioning kit	Luftkonditioneringssats	6
0060			See page 8C-025, 5-K02				
0070	86 05 081		5), 1990, B202I EU	X	Idling speed increase kit	Tomgångshöjningssats	4
0080			See page 8C-025, 5-K02				
0090							
0100							
0110	86 05 198		1991	X	Air conditioning kit	Luftkonditioneringssats	6
0120			See page 8C-025, 5-K02				
0130	86 05 081		5), 1991, B202I EU	X	Idling speed increase kit	Tomgångshöjningssats	4
0140			See page 8C-025, 5-K02				
0150							
0160							
0170	86 05 198		1992	X	Air conditioning kit	Luftkonditioneringssats	6
0180			See page 8C-025, 5-K02				
0190	86 05 081		5), 1992, B202I EU	X	Idling speed increase kit	Tomgångshöjningssats	4
0200			See page 8C-025, 5-K02				


5. Without catalytic converter. Utan katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

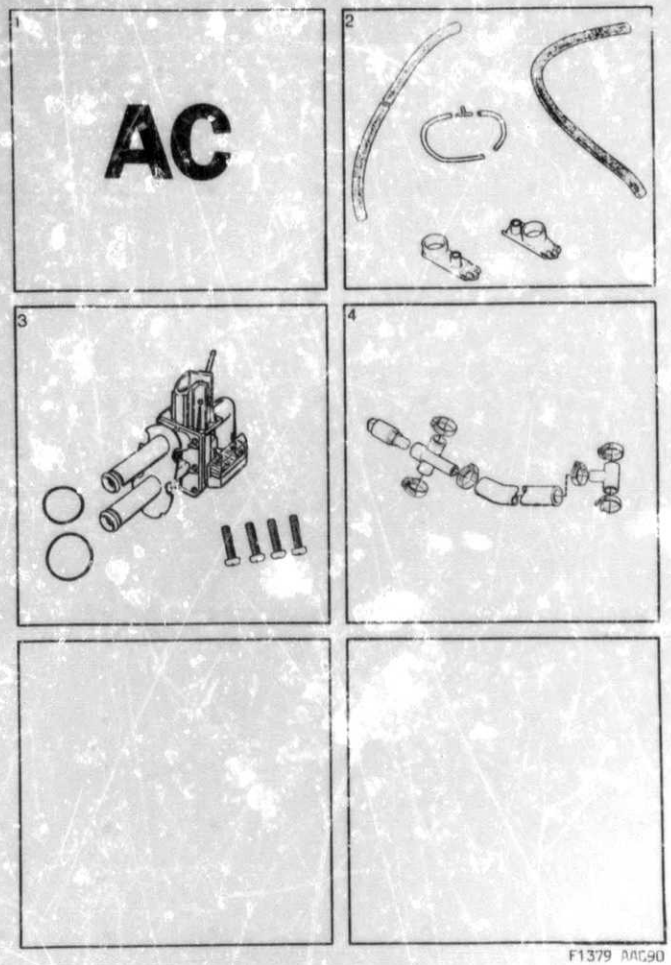

Complete sets

5-K02

Body
Heating and ventilation

Satser

Kaross
Värme och ventilation


2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*86 05 149*		-1990, B202 TURBO NLS - USE 8605198	X	Air conditioning kit	Luftkonditioneringssats	6
0020		40 27 660			3	.Screw	.Skruv	5
0030		40 29 211			1	.Clamp	.Klammer	5
0040		*40 70 827*		NLS - USE 4073995	1	.Compressor	.Kompressor	6
0060		40 70 934			1	.Reservoir	.Behållare	4
0065		43 82 396			1	.Condenser	.Kondensor	5
0070		71 63 074			2	.Plug	.Plugg	5
0080		73 98 373			1	.Clamp	.Klammer	5
0090		73 98 530			1	.Clamp	.Klammer	5
0100		73 99 280			1	.Screw	.Skruv	5
0110		75 12 247			1	.Screw	.Skruv	5
0120		75 35 487			1	.Protecting moulding	.Skyddslist	5
0130		75 42 228			1	.Tension pulley	.Spännrulle	5
0140		75 48 191			1	.Fan unit	.Fläktenhet	4
0150		75 48 688			1	.Fan shroud	.Fläktkåpa	4
0160		75 49 439			1	.Bracket	.Fäste	6
0170		79 22 420			2	.Screw	.Skruv	5
0180		79 22 461			4	.Screw	.Skruv	5
0190		79 40 398			2	.Lock nut	.Låsmutter	5
0200		79 65 809			1	.Clip	.Clips	5
0210		79 67 979			4	.Nut	.Mutter	5
0220		79 70 015			2	.Screw	.Skruv	5
0230		79 70 106			2	.Hose clamp	.Slangklamma	5
0240		79 71 872			2	.Tensioning band	.Spännband	5
0250		79 72 490			3	.Rivet	.Nit	5
0260		79 73 365			2	.Nut	.Mutter	5
0270		79 74 298			3	.Nut	.Mutter	5
0280		79 74 678			1	.Fuse	.Säkring	1
0290		79 75 070			4	.Screw	.Skruv	5
0300		79 77 499			2	.Screw	.Skruv	5
0310		80 19 713			2	.Screw	.Skruv	5
0320		*80 19 911*		NLS - USE 7399603	1	.Screw	.Skruv	5
0330		80 19 945			3	.Screw	.Skruv	5
0340		91 66 356		(8029951)	2	.Washer	.Bricka	5
0350		91 66 372		(8029985)	1	.Washer	.Bricka	5
0360		80 59 578			2	.Screw	.Skruv	5
0370		80 73 108			4	.Washer	.Bricka	5
0380		80 73 249			1	.Washer	.Bricka	5
0390		80 73 512			2	.Lock nut	.Låsmutter	3
0400		80 74 106			1	.Nut	.Mutter	5
0410		91 66 406		(8074288)	1	.Nut	.Mutter	5
0420		80 82 943			1	.Screw	.Skruv	5
0430		91 66 331		(8082968)	1	.Screw	.Skruv	5
0440		80 98 113			2	.Screw	.Skruv	5
0450		81 51 227			1	.Nut	.Mutter	5
0460		83 30 268			1	.Seal	.Tätning	5
0470		83 56 859			2	.Sleeve	.Hylsa	6
0480		85 36 401			2	.Relay	.Relä	3
0490		85 66 598			1	.Nut	.Mutter	5
0500		85 91 117			1	.Solenoid valve	.Magnetventil	4
0510		85 93 766			1	.Switch	.Brytare	4
0520		85 99 565			1	.Protecting moulding	.Skyddslist	4
0530		93 30 184			1	.Pulley	.Remskiva	4
0540		93 32 826			1	.Pipe	.Rör	5
0550		93 39 615			1	.Screw	.Skruv	5
0560		93 67 020			1	.V-belt	.Kilrem	1
0570		94 00 896			1	.Lever	.Hävarm	6
0580		94 20 241			1	.Shaft	.Axel	6
0590		94 20 266			1	.Vacuum servo	.Vakuumservo	5
0600		94 20 274			1	.Spring	.Fjäder	5
0610		94 20 282			1	.Bracket	.Konsol	6
0620		94 20 308			2	.Vacuum hose	.Vakuumslang	4
0630		94 22 403			1	.Pivot pin	.Lagertapp	5
0640		94 38 250			1	.Dolly plate	.Mothållsplåt	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

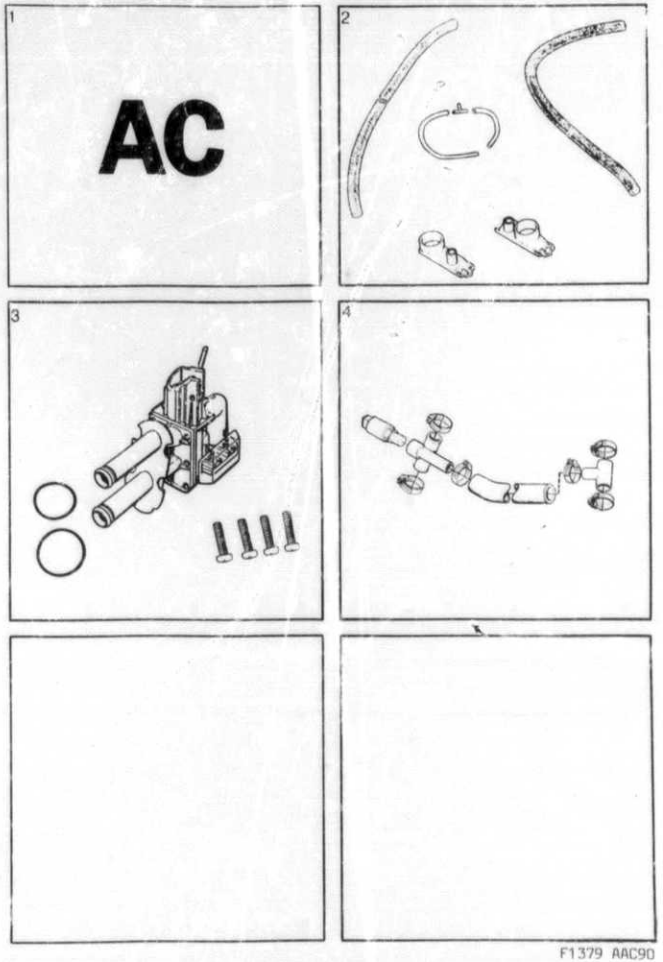

Complete sets
5-K04
Body
Heating and ventilation

Satser
Kaross
Värme och ventilation


2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650		94 41 221			1	.Clip	.Clips	5
0660		94 65 600			4	.Nut	.Mutter	3
0670		94 80 542			1	.Plug	.Plugg	5
0680		94 80 575			2	.T-pipe	.T-rör	5
0690		94 80 955			1	.Evaporator	.Förångare	5
0700		94 81 441			1	.Spacer	.Mellanlägg	5
0710		94 81 458			1	.Clamp	.Klammer	5
0720		94 81 664			1	.Base	.Underlägg	5
0730		94 81 680			1	.Shutter	.Spjäll	5
0740		94 81 961			1	.Brace	.Bygel	5
0750		94 82 027			1	.Hose	.Slang	5
0760		94 82 035			1	.Tube	.Rör	5
0770		94 82 365			1	.Hose	.Slang	5
0780		94 82 399			1	.Guard	.Skydd	5
0790		94 82 563			1	.Vacuum hose	.Vakuumslang	4
0800		94 82 571			3	.Vacuum hose	.Vakuumslang	4
0810		95 03 426			1	.Connector housing	.Skarvhus	4
0820		95 23 788			1	.Switch	.Strömställare	3
0830		95 23 846			1	.Switch	.Strömställare	3
0840		*95 26 526*		NLS - USE 4086724	1	.Thermo contact	.Termokontakt	2
0850		95 50 468			1	.Resistor	.Motstånd	3
0860		95 55 913			1	.Clip	.Clips	5
0870		96 31 300			1	.Label	.Etikett	5
0880								
0890	1	96 98 291		-1990, B201 i, TURBO	X	Air conditioning kit	Luftkonditioneringssats	6
0900		40 27 660			3	.Screw	.Skruv	5
0910		40 29 211			2	.Clamp	.Klammer	5
0920		43 82 396			1	.Condenser	.Kondensor	5
0930		71 63 074			2	.Plug	.Plugg	5
0940		73 98 373			1	.Clamp	.Klammer	5
0950		73 98 530			1	.Clamp	.Klammer	5
0960		73 99 280			1	.Screw	.Skruv	5
0970		73 99 603			1	.Screw	.Skruv	5
0980		75 26 338			1	.Hose	.Slang	6
0990		75 28 144			1	.T-pipe	.T-rör	5
1000		75 35 487			1	.Protecting moulding	.Skyddslist	5
1010		75 43 556			1	.Arm	.Arm	5
1020		75 43 606			1	.Screw	.Skruv	
1030		75 43 614			1	.Pin	.Axeltapp	5
1040		75 48 191			1	.Fan unit	.Fläktenhet	4
1050		75 48 688			1	.Fan shroud	.Fläktkåpa	4
1060		75 49 439			1	.Bracket	.Fäste	6
1070		79 22 420			2	.Screw	.Skruv	5
1080		79 22 461			4	.Screw	.Skruv	5
1090		79 40 398			2	.Lock nut	.Låsmutter	5
1100		79 65 809			1	.Clip	.Clips	5
1110		79 67 953			2	.Nut	.Mutter	5
1120		79 67 979			4	.Nut	.Mutter	5
1130		79 70 015			2	.Screw	.Skruv	5
1140		79 70 106			2	.Hose clamp	.Slangklamma	5
1150		79 71 872			3	.Tensioning band	.Spännband	5
1160		79 71 880			13	.Tensioning band	.Spännband	4
1170		79 71 922			1	.Nut	.Mutter	3
1180		79 73 365			2	.Nut	.Mutter	5
1190		79 74 298			1	.Nut	.Mutter	5
1200		79 74 678			1	.Fuse	.Säkring	1
1210		79 75 030			4	.Screw	.Skruv	5
1220		79 75 238			5	.Screw	.Skruv	5
1230		79 75 543			6	.Hose clamp	.Slangklamma	5
1240		79 77 440			1	.Washer	.Bricka	5
1250		79 77 499			2	.Screw	.Skruv	5
1260		80 19 713			2	.Screw	.Skruv	5
1270		80 19 945			3	.Screw	.Skruv	5
1280		81 51 227		(8029555)	1	.Nut	.Mutter	5
1290		91 66 364		(8029951)	2	.Washer	.Bricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

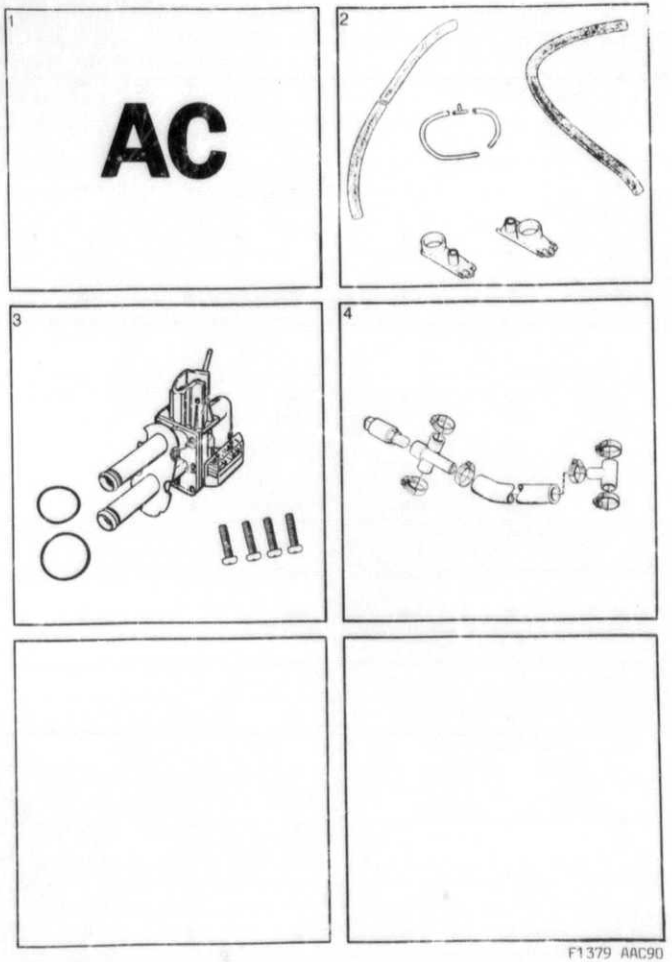

Complete sets — Satser

5-K06

Body — *Kaross*

Heating and ventilation — *Värme och ventilation*

2600	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
1300		80 59 578			2	.Screw	.Skruv	5
1310		80 73 108			4	.Washer	.Bricka	5
1320		80 73 512			2	.Lock nut	.Låsmutter	3
1330		80 74 106			1	.Nut	.Mutter	5
1340		80 83 974			1	.Screw	.Skruv	5
1350		83 17 828			1	.Nipple	.Nippel	5
1360		83 30 268			1	.Seal	.Tätning	5
1370		83 34 005			1	.Solenoid valve	.Magnetventil	3
1380		85 66 598			1	.Nut	.Mutter	5
1390		85 72 190		AC-FAN	1	.Relay	.Relä	3
1400		85 91 117		RECIRCULATION	1	.Solenoid valve	.Magnetventil	4
1410		85 93 766			1	.Switch	.Brytare	4
1420		41 18 964			1	.Pulley	.Remskiva	5
1430		93 30 184			1	.Pulley	.Remskiva	4
1440		93 32 828			1	.Pipe	.Rör	5
1450		93 39 615			1	.Screw	.Skruv	5
1460		93 67 020			1	.V-belt	.Kilrem	1
1470		94 00 896			1	.Lever	.Hävarm	6
1480		94 20 241			1	.Shaft	.Axel	6
1490		94 20 266			1	.Vacuum servo	.Vakuumservo	5
1500		94 20 274			1	.Spring	.Fjäder	5
1510		94 20 282			1	.Bracket	.Konsol	6
1520		94 20 308			1	.Vacuum hose	.Vakuumslang	4
1530		94 22 403			1	.Pivot pin	.Lagertapp	5
1540		94 38 250			1	.Dolly plate	.Mothållsplåt	6
1550		94 41 221			1	.Clip	.Clips	5
1560		94 65 600			4	.Nut	.Mutter	3
1570		96 31 300			1	.Label	.Etikett	5
1580		94 80 542			1	.Plug	.Plugg	5
1590		94 80 575			2	.T-pipe	.T-rör	5
1600		94 80 955		ALT 9480583	1	.Evaporator	.Förångare	5
1610		94 81 441			1	.Spacer	.Mellanlägg	5
1620		94 81 458			1	.Clamp	.Klammer	5
1630		94 81 664			1	.Base	.Underlägg	5
1640		94 81 680			1	.Shutter	.Spjäll	5
1650		94 81 961			1	.Brace	.Bygel	5
1660		*94 81 979*		NLS - USE 4073995	1	.Compressor	.Kompressor	6
1670		94 82 027			1	.Hose	.Slang	5
1680		94 82 035			1	.Tube	.Rör	5
1690		*94 82 068*		NLS - USE 4383550	1	.Reservoir	.Behållare	4
1700		94 82 365			1	.Hose	.Slang	5
1710		94 82 399			1	.Guard	.Skydd	5
1720		94 82 563			1	.Vacuum hose	.Vakuumslang	4
1730		94 82 571			3	.Vacuum hose	.Vakuumslang	4
1740		95 03 418			1	.Connector housing	.Skarvhus	4
1750		95 03 426			1	.Connector housing	.Skarvhus	4
1760		*95 13 219*		COMPR COOLING FAN NLS - USE 4179925	1	.Relay	.Relä	5
1760								
1770		95 23 788		AC	1	.Switch	.Strömställare	3
1780		95 23 846		RECIRCULATION	1	.Switch	.Strömställare	3
1790		*95 26 526*		COOLING WATER NLS - USE 4086724	1	.Thermo contact	.Termokontakt	2
1790								
1800		95 50 468			1	.Resistor	.Motstånd	3
1810		95 55 913			1	.Clip	.Clips	5
1820		95 57 505		ENGINE HOUSE	1	.Cable harness	.Ledningsnät	5
1830		95 61 655		INSTRUMENT PANEL	1	.Cable harness	.Ledningsnät	5
1840		79 72 490			3	.Rivet	.Nit	5
1850								
1860	1	*96 98 283*		-1990, B202, I NLS - USE 8605198	X	Air conditioning kit	Luftkonditioneringssats	6
1860								
1870		40 27 660			3	.Screw	.Skruv	5
1880		40 29 211			1	.Clamp	.Klammer	5
1890		*40 70 918*		NLS - USE 4382396	1	.Condenser	.Kondensor	5
1900		71 63 074			2	.Plug	.Plugg	5
1910		73 98 373			1	.Clamp	.Klammer	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

Complete sets — Satser

5-K08 Body Heating and ventilation — Kaross Värme och ventilation

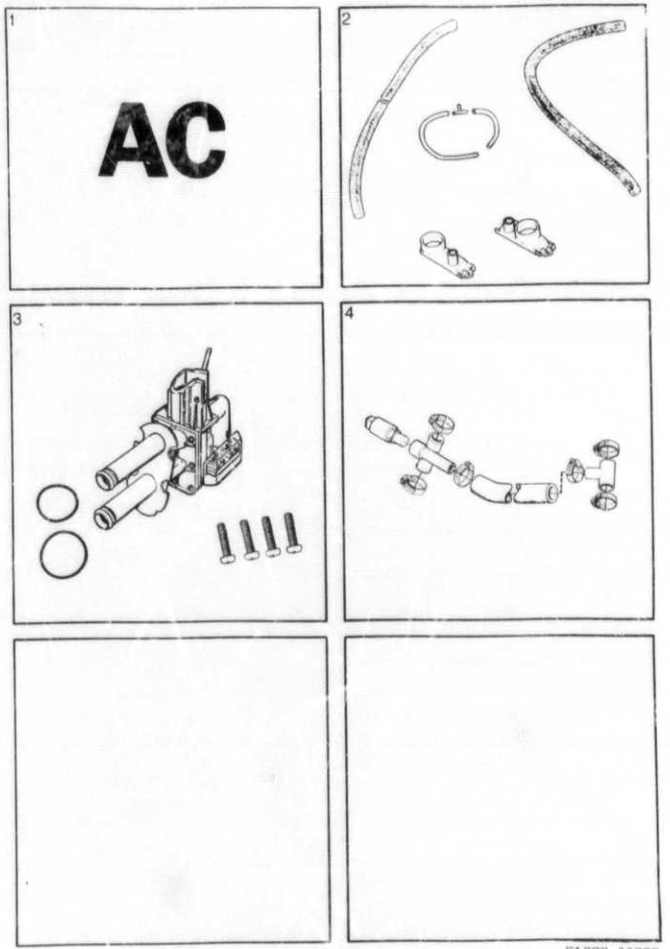


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1920	73 98 530			1	.Clamp	.Klammer	5
1930	73 99 280			1	.Screw	.Skruv	5
1940	73 99 603			1	.Screw	.Skruv	5
1950	75 12 247			1	.Screw	.Skruv	5
1960	75 35 487			1	.Protecting moulding	.Skyddslist	5
1970	75 42 228			1	.Tension pulley	.Spännrulle	5
1980	75 48 191			1	.Fan unit	.Fläktenhet	4
1990	75 48 688			1	.Fan shroud	.Fläktkåpa	4
2000	75 49 439			1	.Bracket	.Fäste	6
2010	79 22 420			2	.Screw	.Skruv	5
2020	79 22 461			4	.Screw	.Skruv	5
2030	79 40 398			2	.Lock nut	.Låsmutter	5
2040	79 65 809			1	.Clip	.Clips	5
2050	79 67 979			4	.Nut	.Mutter	5
2060	79 70 015			2	.Screw	.Skruv	5
2070	79 70 106			2	.Hose clamp	.Slangklamma	5
2080	79 71 872			2	.Tensioning band	.Spännband	5
2090	79 73 365			2	.Nut	.Mutter	5
2100	79 74 298			1	.Nut	.Mutter	5
2110	79 74 678			1	.Fuse	.Säkring	1
2120	79 75 030			4	.Screw	.Skruv	5
2130	79 77 499			2	.Screw	.Skruv	5
2140	80 19 713			2	.Screw	.Skruv	5
2150	80 19 945			3	.Screw	.Skruv	5
2160	81 51 227			1	.Nut	.Mutter	5
2170	91 66 364		(8029561)	2	.Washer	.Bricka	5
2180	91 66 372		(8029985)	1	.Washer	.Bricka	5
2190	80 59 578			2	.Screw	.Skruv	5
2200	80 73 108			4	.Washer	.Bricka	5
2210	80 73 249			1	.Washer	.Bricka	5
2220	80 73 512			2	.Lock nut	.Låsmutter	3
2230	80 74 106			1	.Nut	.Mutter	5
2240	91 66 406		(8074288)	1	.Nut	.Mutter	5
2250	80 82 943			1	.Screw	.Skruv	5
2260	91 66 331		(8082968)	1	.Screw	.Skruv	5
2270	80 98 113			2	.Screw	.Skruv	5
2280	83 30 268			1	.Seal	.Tätning	5
2290	83 56 859			2	.Sleeve	.Hylsa	6
2300	85 66 598			1	.Nut	.Mutter	5
2310	85 72 190		AC-FAN	1	.Relay	.Relä	3
2320	85 91 117		RECIRCULATION	1	.Solenoid valve	.Magnetventil	4
2330	85 93 766			1	.Switch	.Brytare	4
2340	85 99 565			1	.Protecting moulding	.Skyddslist	4
2350	93 30 184			1	.Pulley	.Remskiva	4
2360	93 32 829			1	.Pipe	.Rör	5
2370	93 39 615			1	.Screw	.Skruv	5
2380	93 67 020			1	.V-belt	.Kilrem	1
2390	94 00 896			1	.Lever	.Hävarm	6
2400	94 20 241			1	.Shaft	.Axel	6
2410	94 20 266			1	.Vacuum servo	.Vakuumservo	5
2420	94 20 274			1	.Spring	.Fjäder	5
2430	94 20 282			1	.Bracket	.Konsol	6
2440	94 20 308			1	.Vacuum hose	.Vakuumslang	4
2450	94 22 403			1	.Pivot pin	.Lagertapp	5
2460	94 38 250			1	.Dolly plate	.Mothållsplåt	6
2470	94 41 221			1	.Clip	.Clips	5
2480	94 65 600			4	.Nut	.Mutter	3
2490	96 31 300			1	.Label	.Etikett	5
2500	94 80 542			1	.Plug	.Plugg	5
2510	94 80 575			2	.T-pipe	.T-rör	5
2520	94 80 955		ALT 9480583	1	.Evaporator	.Förångare	5
2530	94 81 441			1	.Spacer	.Mellanlägg	5
2540	94 81 458			1	.Clamp	.Klammer	5
2550	94 81 664			1	.Base	.Underlägg	5
2560	94 81 680			1	.Shutter	.Spjäll	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

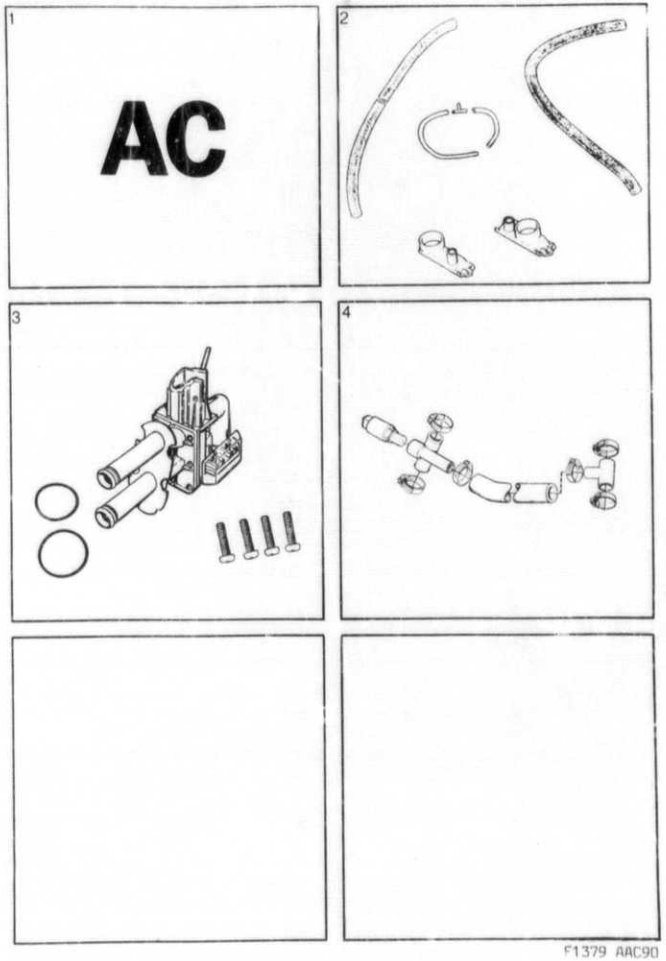

Complete sets

5-K10

Body
Heating and ventilation

Satser

Kaross
Värme och ventilation

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
	94 81 961			1	.Brace	.Bygel	5
	94 81 979		NLS - USE 4073995	1	.Compressor	.Kompressor	6
	94 82 027			1	.Hose	.Slang	5
	94 82 035			1	.Tube	.Rör	5
	94 82 068		NLS - USE 4383550	1	.Reservoir	.Behållare	4
	94 82 365			1	.Hose	.Slang	5
	94 82 399			1	.Guard	.Skydd	5
	94 82 563			1	.Vacuum hose	.Vakuumslang	4
	94 82 571			3	.Vacuum hose	.Vakuumslang	4
	95 03 426			1	.Connector housing	.Skarvhus	4
	95 13 219		COMPR COOLING FAN NLS - USE 4179925	1	.Relay	.Relä	5
	95 23 788		AC	1	.Switch	.Strömställare	3
	95 23 846		RECIRCULATION	1	.Switch	.Strömställare	3
	95 26 526		COOLING WATER NLS - USE 4086724	1	.Thermo contact	.Termokontakt	2
	95 50 468			1	.Resistor	.Motstånd	3
	95 55 913			1	.Clip	.Clips	5
	79 72 490			3	.Rivet	.Nit	5
1	86 05 198		1991-, B202, B212	X	Air conditioning kit	Luftkonditioneringssats	6
	40 27 660			2	.Screw	.Skruv	5
	40 29 211			1	.Clamp	.Klammer	5
	40 70 918		NLS - USE 4382396	1	.Condenser	.Kondensor	5
	40 70 934			1	.Reservoir	.Behållare	4
	40 71 718			1	.Compressor	.Kompressor	6
	40 72 492			1	.Brace	.Bygel	5
	40 73 748			1	.Clip	.Clips	5
	40 74 522			1	.Label	.Etikett	5
	40 74 530			1	.Label	.Etikett	5
	41 18 774			1	.Bracket	.Fäste	6
	41 18 964			1	.Pulley	.Remskiva	5
	41 19 780			1	.Tensioning arm	.Spännarm	6
	42 83 198			2	.Screw	.Skruv	6
	71 63 074			2	.Plug	.Plugg	5
	73 98 373			1	.Clamp	.Klammer	5
	73 98 530			1	.Clamp	.Klammer	5
	73 99 280			1	.Screw	.Skruv	5
	75 48 191			1	.Fan unit	.Fläktenhet	4
	75 48 688			1	.Fan shroud	.Fläktkåpa	4
	79 22 420			2	.Screw	.Skruv	5
	79 22 461			4	.Screw	.Skruv	5
	79 40 398			2	.Lock nut	.Låsmutter	5
	79 67 979			4	.Nut	.Mutter	5
	79 70 015			2	.Screw	.Skruv	5
	79 70 106			2	.Hose clamp	.Slangklamma	5
	79 71 864			1	.Tensioning band	.Spännband	5
	79 71 872			2	.Tensioning band	.Spännband	5
	79 72 490			3	.Rivet	.Nit	5
	79 73 365			2	.Nut	.Mutter	5
	79 74 298			3	.Nut	.Mutter	5
	79 74 678			1	.Fuse	.Säkring	1
	79 75 030			4	.Screw	.Skruv	5
	79 77 499			2	.Screw	.Skruv	5
	80 19 713			2	.Screw	.Skruv	5
	80 19 945			4	.Screw	.Skruv	5
	91 66 364		(8029951)	2	.Washer	.Bricka	5
	91 66 372		(8029935)	1	.Washer	.Bricka	5
	80 59 578			2	.Screw	.Skruv	5
	80 73 108			5	.Washer	.Bricka	5
	80 73 512			2	.Lock nut	.Låsmutter	3
	80 74 106			1	.Nut	.Mutter	5
	91 66 406		(8074288)	1	.Nut	.Mutter	5
	80 82 943			1	.Screw	.Skruv	5
	91 66 331		(8082968)	1	.Screw	.Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX


Heating and ventilation system	5-J06
Complete sets	5-K02

Complete sets

5-K12 Body Heating and ventilation

Satser

Kaross
Värme och ventilation

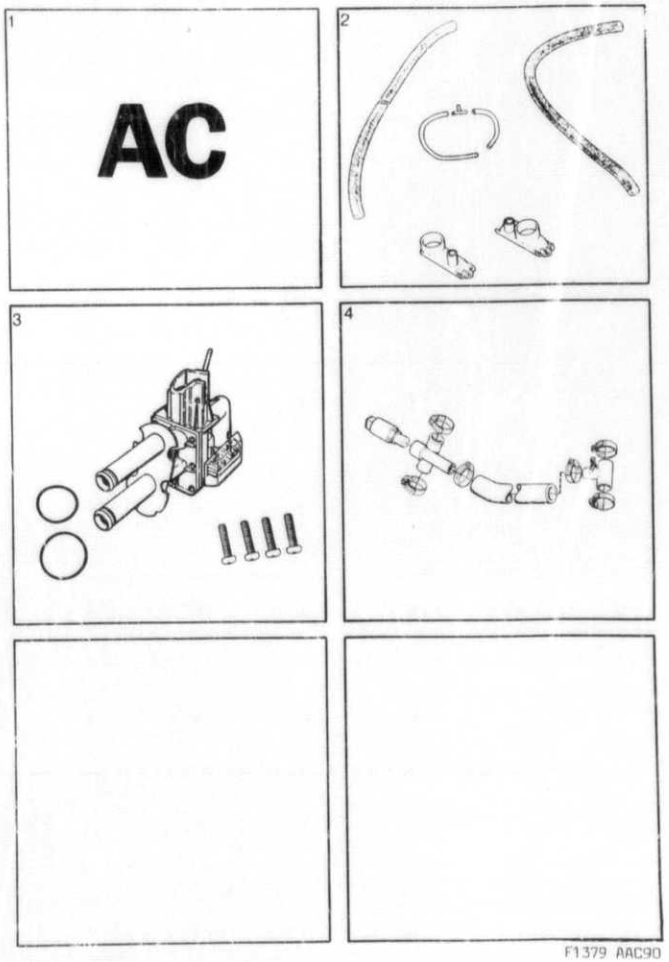

F1379 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
	80 98 113			2	.Screw	.Skruv	5
	81 51 227			1	.Nut	.Mutter	5
	83 30 268			1	.Seal	.Tätning	5
	83 56 859			2	.Sleeve	.Hylsa	6
	83 66 791			2	.Pipe	.Rör	4
	85 36 401			2	.Relay	.Relä	3
	85 66 598			1	.Nut	.Mutter	5
	85 72 190			1	.Relay	.Relä	3
	85 91 117			1	.Solenoid valve	.Magnetventil	4
	85 93 766			1	.Switch	.Brytare	4
	85 99 565			1	.Protecting moulding	.Skyddslist	4
	93 30 184			1	.Pulley	.Remskiva	4
	93 32 826			1	.Pipe	.Rör	5
	93 39 615			1	.Screw	.Skruv	5
	93 45 232			1	.Lock screw	.Låsskruv	5
	93 67 020			1	.V-belt	.Kilrem	1
	94 00 896			1	.Lever	.Hävarm	6
	94 20 241			1	.Shaft	.Axel	6
	94 20 266			1	.Vacuum servo	.Vakuumservo	5
	94 20 274			1	.Spring	.Fjäder	5
	94 20 282			1	.Bracket	.Konsol	6
	94 20 308			1	.Vacuum hose	.Vakuumslang	4
	94 22 403			1	.Pivot pin	.Lagertapp	5
	94 38 250			1	.Dolly plate	.Mothållsplåt	6
	94 41 221			1	.Clip	.Clips	5
	94 65 600			4	.Nut	.Mutter	3
	94 80 542			1	.Plug	.Plugg	5
	94 80 955			1	.Evaporator	.Förångare	5
	94 81 441			1	.Spacer	.Mellanlägg	5
	94 81 458			1	.Clamp	.Klammer	5
	94 81 664			1	.Base	.Underlägg	5
	94 81 680			1	.Shutter	.Spjäll	5
	94 82 027			1	.Hose	.Slang	5
	94 82 035			1	.Tube	.Rör	5
	94 82 365			1	.Hose	.Slang	5
	94 82 399			1	.Guard	.Skydd	5
	94 82 563			3	.Vacuum hose	.Vakuumslang	4
	94 82 571			1	.Vacuum hose	.Vakuumslang	4
	94 82 589			1	.Vacuum hose	.Vakuumslang	4
	95 03 426			1	.Connector housing	.Skarvhus	4
	95 13 219		NLS - USE 4179925	1	.Relay	.Relä	5
	95 23 788			1	.Switch	.Strömställare	3
	95 23 846			1	.Switch	.Strömställare	3
	95 26 526		NLS - USE 4086724	1	.Thermo contact	.Termokontakt	2
	95 50 468			1	.Resistor	.Motstånd	3
	95 55 913			1	.Clip	.Clips	5
2	*97 46 249*		ME, FE NLS	X	Defroster jet	Defroster	6
	94 80 153		LH NLS	1	.Throttle body	.Spjällhus	6
	94 80 187		RH NLS	1	.Throttle body	.Spjällhus	6
	94 01 332			2	.Hose	.Slang	6
	94 80 252		NLS	1	.Plug	.Plugg	5
	94 80 278		NLS - USE 9482563	2	.Vacuum hose	.Vakuumslang	4
	83 66 791			1	.Pipe	.Rör	4
	79 58 770			1	.Rivet	.Nit	5
	71 63 074			2	.Plug	.Plugg	5
3	*97 46 322*		-1991 NLS - USE 8605388	X	Water valve	Värmekran	9
	94 80 997		1) NLS - USE 4074407	1	.Water valve	.Värmekran	4
	94 79 213			1	.O-ring	.O-ring	2
	94 79 221			1	.O-ring	.O-ring	
	80 97 750			4	.Screw	.Skruv	5


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

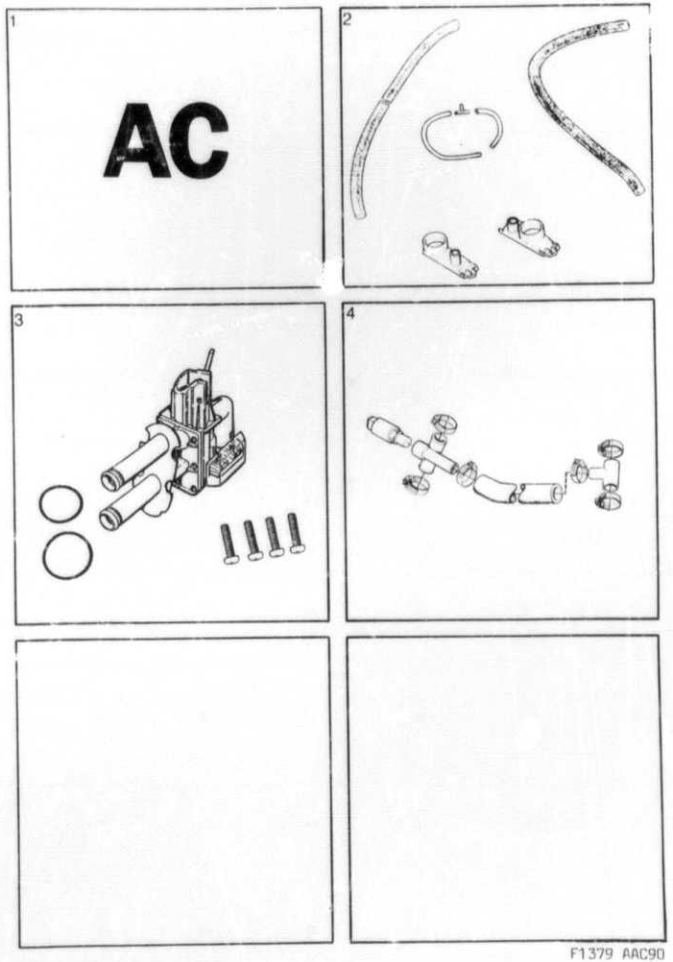

F1379 AAC90

Pos	Part No/Art nr	k S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
3830	3	86 05 338	1992-	X	Water valve	Värmekran	9
3840		40 74 407	1)	1	.Water valve	.Värmekran	4
3850		94 79 213		1	.O-ring	.O-ring	2
3860		94 79 221		1	.O-ring	.O-ring	
3870		80 97 750		4	.Screw	.Skruv	5
3890	4	86 05 081	5) B202 I,B212 I, EU	1	Idling speed increase kit	Tomgångshöjningssats	4
3900		75 26 338		1	.Hose	.Slang	6
3910		75 28 144		1	.T-pipe	.T-rör	5
3920		79 75 543		6	.Hose clamp	.Slangklamma	5
3930		83 17 828		1	.Nipple	.Nippel	5
3940		83 34 005		1	.Solenoid valve	.Magnetventil	3
3950		94 82 571		3	.Vacuum hose	.Vakuumslang	4

1. Not as separate spare part. Ej som separat reservdel.
5. Without catalytic converter. Utan katalytisk reaktor.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06
Complete sets	5-K02

5-L02

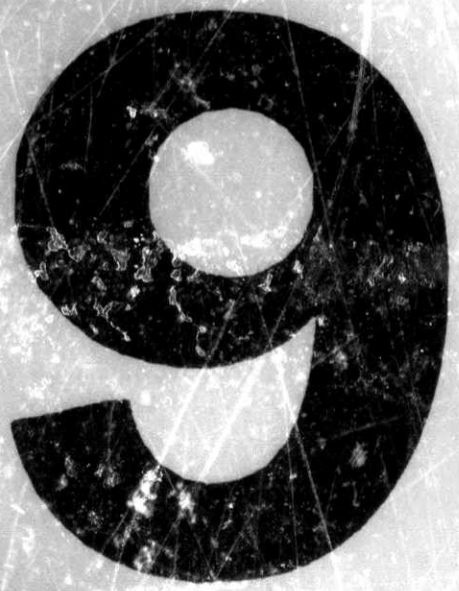

Tool, Labels
Verktyg, Etiketter
Herramient, Etiquetas

0041
0020
0040
0060
0080
0100
0120
0130
0140
0150
0160

CONTENTS.

Tool kit	9 : 5	5-L06
Labels		
Labels, part 1	9 : 7	5-L08
Labels, part 2	9 : 9	5-L10
Labels, part 3	9 : 13	5-L14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

0042
0020
0040
0060
0180
0200
0220
0230
0240
0250
0260
0460
0480
0500
0520
0540
0560
0570
0580
0590
0600

INNEHÅLLSFÖRTECKNING.

Verktygssats	9 : 5	5-L06
Etiketter		
Etiketter, del 1	9 : 7	5-L08
Etiketter, del 2	9 : 9	5-L10
Etiketter, del 3	9 : 13	5-L14

SUMARIO.

Bolsa de herramientas	9 : 5	5-L06
Etiquetas		
Etiquetas, 1a parte	9 : 7	5-L08
Etiquetas, 2a parte	9 : 9	5-L10
Etiquetas, 3a parte	9 : 13	5-L14


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

5-L06 *Tool kit* *Verktygsats*

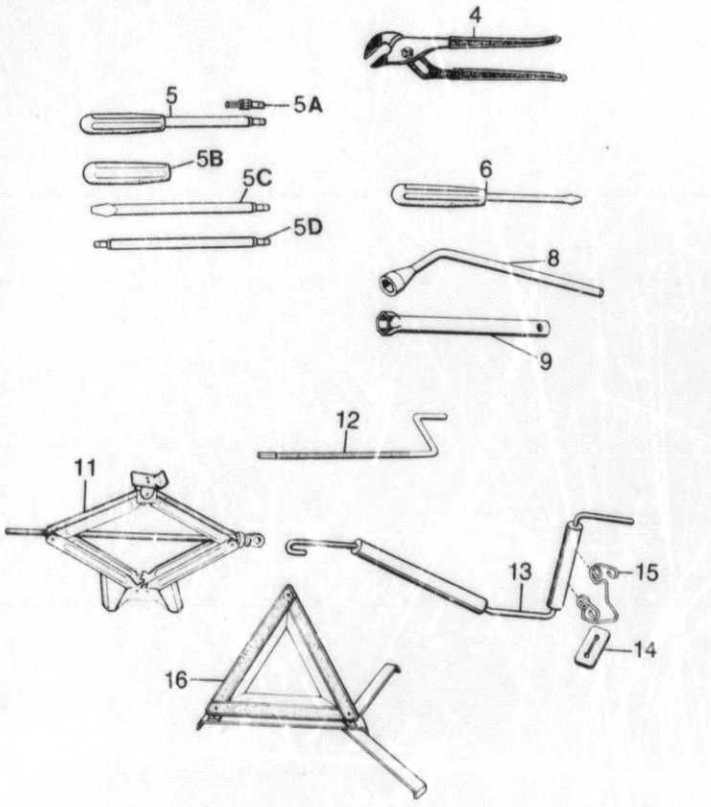

F4556 AAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	4	*89 61 732*		1990 NLS - USE 4195954	1	Pliers	Tång	5
0040	4	41 95 954		1991-	1	Pliers	Tång	5
0050	5	89 91 549		20), TORX	1	Screwdriver	Skruvmejsel	5
0060	5A	89 91 564		20), TORX 25/30	1	Screwdriver insert	Skruvmejselinsats	5
0070	5A	89 71 087		20), TORX 10/20	1	Screwdriver insert	Skruvmejselinsats	5
0071	5B	41 98 883		21)	1	Handle	Skaft	5
0072	5C	41 98 891		21), TORX 25	1	Screw driver bit	Mejselspets	5
0073	5D	41 98 909		21), TORX 10/20	1	Screw driver bit	Mejselspets	5
0090	6	70 37 492		20)	1	Screwdriver	Skruvmejsel	5
0100	8	73 48 287		WHEEL NUT	1	Socket wrench	Hylsnyckel	4
0120	9	85 31 198		B201	1	Spark plug spanner	Tändstiftnyckel	4
0130	9	*89 86 663*		B202, B212 NLS - USE 4193157	1	Spark plug spanner	Tändstiftnyckel	4
0130								
0160	11	89 61 740			1	Jack	Domkraft	4
0170	12	95 48 363			1	Crank	Vev	6
0171						Front seat	framstol	
0180	13	89 64 991			1	Crank	Vev	4
0190	14	89 71 566			2	Vibration damper	Vibrationsdämpare	5
0200	15	89 71 574			2	Attaching spring	Fästfjäder	5
0220	16	95 26 963		1990	1	Warning triangle	Varningstriangel	6
0230	16	42 66 003		1991-	1	Warning triangle	Varningstriangel	6

20. Ch. --N2015247, --N7009056
21. Ch. N2015248--, N7009057--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

5-L08 Labels Part 1

Etiketter Del 1

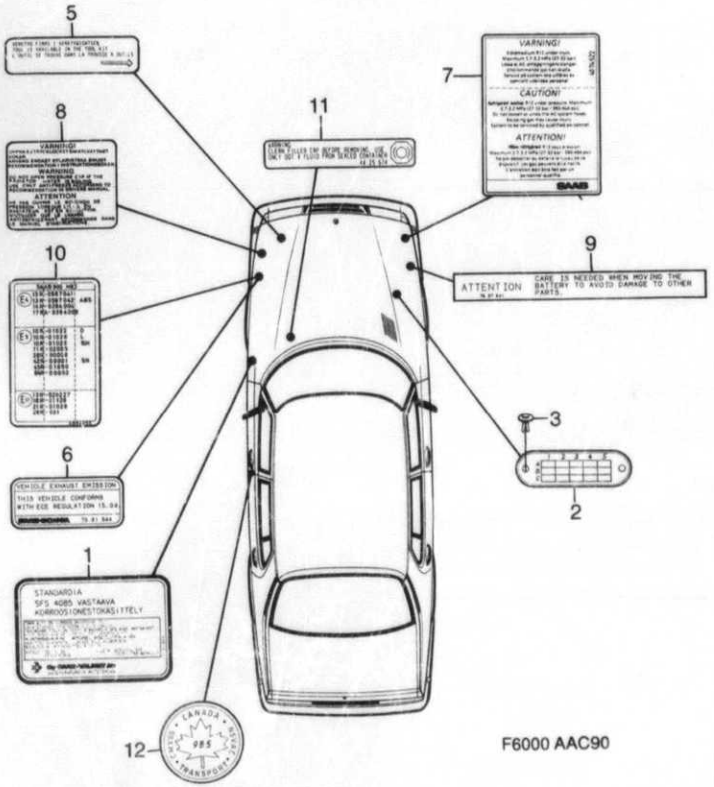

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	41 53 813		CORR-PROTECTION, FI	1	Label	Etikett	6
2	92 83 722		CAMPAIGN	1	Sign	Skylt	5
3	79 73 258			2	Rivet	Nit	5
5	75 43 424		TOOL, B202	1	Label	Etikett	5
6	75 31 544		-1992, ECE REGULATION FE	1	Label	Etikett	4
6	43 92 304		1993-, ECE REGULATION FE	1	Label	Etikett	4
7	96 31 300		18), FREONGAS	1	Label	Etikett	5
7	40 74 522		19), -1991, FREONGAS	1	Label	Etikett	5
8	40 17 596		COOLING WATER	1	Label	Etikett	5
8	93 41 439		COOLING WATER, FI	1	Label	Etikett	5
9	75 27 633		BATTERY,TURBO CA	1	Label	Etikett	4
9	75 27 641		BATTERY, TURBO SE, GB	1	Label	Etikett	4
9	75 27 641		BATTERY, TURBO JP	1	Label	Etikett	4
10	69 44 110		ECE-APPROVALS	1	Label	Etikett	6
10	40 89 074		4), 1990, ECE-APPROVALS	1	Label	Etikett	6
10	40 94 843		4), 1991, ECE-APPROVALS	1	Label	Etikett	6
10	43 20 578		1992, ECE-APPROVALS	1	Label	Etikett	6
10	43 44 321		1993, ECE-APPROVALS	1	Label	Etikett	6
10	44 48 940		1994, ECE-APPROVALS, CV	1	Label	Etikett	6
11	44 25 674		1993-, CLEAN FILLER CAP	1	Label	Etikett	5
12	• 44 81 339		CA	1	Label	Etikett	6

4. With catalytic converter. Med katalytisk reaktor.
18. Ch. -L3007133, -L5002436, -L7019419
19. Ch. L3007134-, L5002437-, L7019420-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

5-L10 Labels Part 2 — Etiketter Del 2

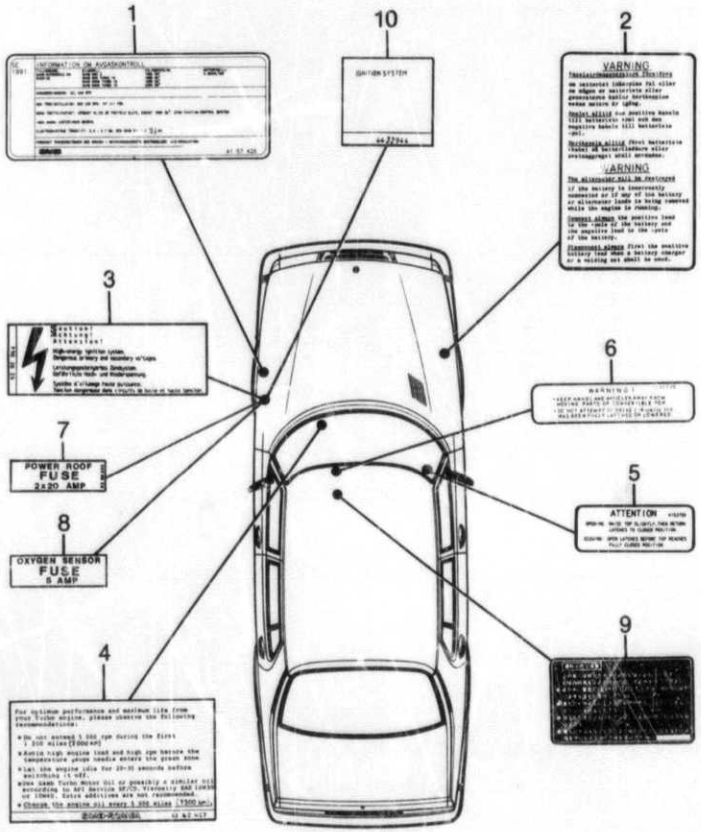

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 21 416		13,16) B201, I, SE,FI,DK	1	Label	Etikett	4
0020	1	*41 60 933*		13,17) B201, I, SE,FI,DK	1	Label	Etikett	4
0030	1	40 19 162		13,16) B202, I, SE,FI,DK	1	Label	Etikett	4
0040	1	41 60 941		13,17), -1990, B202, I, SE, FI, DK	1	Label	Etikett	4
0050								
0060	1	41 57 418		13), 1991, I, SE,FI,DK	1	Label	Etikett	4
0070	1	40 23 305		13,16) TURBO, SE, FI, DK	1	Label	Etikett	4
0080	1	41 60 958		13,17), -1990, TURBO, SE, FI, DK	1	Label	Etikett	4
0090								
0100	1	41 57 426		13), 1991, TURBO, SE, FI, DK	1	Label	Etikett	4
0110								
0120	1	41 61 576		13), 1992, SE, FI, DK	1	Label	Etikett	4
0130	1	43 74 393		13), 1993, SE, FI, DK	1	Label	Etikett	4
0140	1	44 41 556		13), 1994, SE,FI,DK, CV	1	Label	Etikett	4
0150								
0160	1	41 57 731		13,16), I, US,JP	1	Label	Etikett	4
0170	1	41 61 022		13,17),-1990, I, US, JP	1	Label	Etikett	4
0180	1	41 57 582		13), 1991, I, US, JP	1	Label	Etikett	4
0190	1	41 61 667		13), 1992, I, US, JP	1	Label	Etikett	4
0200	1	43 93 674		13), 1993, I, US, JP	1	Label	Etikett	4
0210	1	44 41 440		13), 1994, I, US, JP, CV	1	Label	Etikett	4
0220	1	40 18 677		13,16) TURBO US, JP	1	Label	Etikett	4
0230	1	41 61 014		13,17),-1990,TURBO US,JP	1	Label	Etikett	4
0240	1	41 57 590		13), 1991, TURBO, US, JP	1	Label	Etikett	4
0250	1	43 74 252		13), 1992, TURBO, US,JP	1	Label	Etikett	4
0260	1	43 93 682		13), 1993, TURBO, US,JP	1	Label	Etikett	4
0270	1	44 41 457		13),1994,TURBO,US,JP, CV	1	Label	Etikett	4
0280								
0290	1	43 92 700		13), 1990, TURBO, UC	1	Label	Etikett	4
0300	1	43 92 718		13), 1991, TURBO, UC,	1	Label	Etikett	4
0310								
0320	1	40 18 735		13,16), I, CA	1	Label	Etikett	4
0330	1	41 60 966		13,17),-1990, I, CA	1	Label	Etikett	4
0340	1	41 57 558		13), 1991, I, CA	1	Label	Etikett	4
0350	1	41 61 592		13), 1992, I, CA	1	Label	Etikett	4
0360	1	43 74 419		13), 1993, I, CA	1	Label	Etikett	4
0370	1	*44 41 465*		13), 1994, I, CA, CV	1	Label	Etikett	4
0380	1	40 18 743		13,16), TURBO CA	1	Label	Etikett	4
0390	1	41 60 974		13,17),-1990, TURBO, CA	1	Label	Etikett	4
0400	1	41 57 566		13), 1991, TURBO, CA	1	Label	Etikett	4
0410	1	41 61 600		13), 1992, TURBO, CA	1	Label	Etikett	4
0420	1	43 74 427		13), 1993, TURBO, CA	1	Label	Etikett	4
0430	1	44 41 473		13), 1994, TURBO, CA, CV	1	Label	Etikett	4
0440	1	40 23 354		13,16) TURBO CA, WITH ELECTRONIC EGR	1	Label	Etikett	4
0450								
0460	1	41 60 982		13,17),-1990, TURBO, CA WITH ELECTRONIC EGR	1	Label	Etikett	4
0470								
0480								
0490	1	40 18 776		13,16), I, AU	1	Label	Etikett	4
0500	1	41 60 990		13,17),-1990, I, AU	1	Label	Etikett	4
0510	1	41 57 434		13), 1991, B212 I, AU	1	Label	Etikett	4
0520	1	41 61 626		13), 1992, B212 I, AU	1	Label	Etikett	4
0530	1	43 74 435		13), 1993, B212 I, AU	1	Label	Etikett	4
0540	1	44 41 564		13),1994, B212 I, AU, CV	1	Label	Etikett	4
0550	1	40 18 784		13,16), TURBO, AU	1	Label	Etikett	4
0560	1	*41 61 006*		13,17),-1990, TURBO, AU	1	Label	Etikett	4
0570	1	41 61 527		13), 1991, TURBO, AU	1	Label	Etikett	4
0580	1	41 61 634		13), 1992, TURBO, AU	1	Label	Etikett	4

13. Exhaust emission control device Avgasrening
16. Ch. -L3007133, -L5002436, -L70194219
17. Ch. L3007134-, L5002437-, L7019420-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

5-L12 Labels Part 2 — Etiketter Del 2

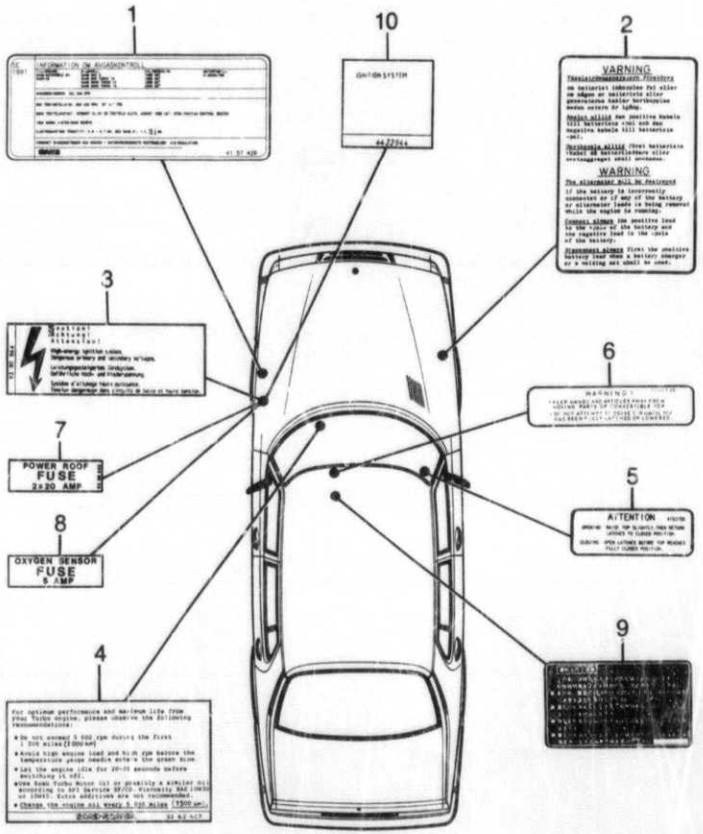

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	1	43 74 443		13), 1993, TURBO, AU	1	Label	Etikett	4
0600	1	44 41 572		13), 1994, TURBO, AU, CV	1	Label	Etikett	4
0610								
0620	2	85 06 941		1990, ALTERTNATOR BOSCH, SWEDISH-ENGLISH	1	Label	Etikett	5
0640	2	85 06 925		1990, ALTERNATOR BOSCH, SWEDISH-FINNISH	1	Label	Etikett	6
0650	2	95 50 583		1990, ALTERNATOR, FRENCH	1	Label	Etikett	5
0670								
0680	3	93 90 964		4) IGNITION SYSTEM TURBO AU, EU	1	Label	Etikett	4
0700	3	93 90 964		4) IGNITION SYSTEM SE, FI, JP, GB B202	1	Label	Etikett	4
0710								
0730	4	93 62 419		TURBO, SWEDISH TEXT	1	Label	Etikett	5
0740	4	93 62 427		TURBO, ENGLISH TEXT	1	Label	Etikett	5
0750	4	93 62 435		TURBO, GERMAN TEXT	1	Label	Etikett	5
0760	4	*93 62 443*		TURBO, FINNICH TEXT NLS	1	Label	Etikett	5
0770	4	*93 62 450*		TURBO, FRENCH TEXT NLS	1	Label	Etikett	5
0780	4	*93 62 468*		TURBO, ITALIAN TEXT NLS	1	Label	Etikett	5
0790	4	*93 69 364*		TURBO, SPANISH TEXT NLS	1	Label	Etikett	5
0800	4	75 91 167		TURBO, US, JP	1	Label	Etikett	4
0810								
0820	5	41 53 755		ATTENTION, CV	2	Label	Etikett	5
0830								
0840	6	69 40 530		WARNING, CV ENGLISH TEXT	1	Label	Etikett	5
0850	6	69 40 522		WARNING,CV SWEDISH TEXT	1	Label	Etikett	5
0860	6	96 49 732		WARNING, CV GERMEN TEXT	1	Label	Etikett	5
0870	6	69 40 555		WARNING CV FRENCH TEXT	1	Label	Etikett	5
0880								
0890	7	95 97 220		1990, POWER ROOF CV, FUSE 25AMP	1	Label	Etikett	5
0910	7	95 98 533		1991-, POWER ROOF CV, FUSE 25AMP	1	Label	Etikett	5
0930								
0940	8	95 97 238		4) OXYGEN SENSOR, CV, FUSE 5 AMP	1	Label	Etikett	5
0960								
0970	9	41 56 618		1991-, JP, WARNING OVER-HEATED CATALYTIC CONVERT	1	Label	Etikett	5
0990								
1000	10	44 32 944		1993-, IGNITION SYSTEM	1	Label	Etikett	5

4. With catalytic converter. Med katalytisk reaktor.
13. Exhaust emission control device Avgasrening

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08

5-L14 Labels Part 3

Etiketter Del 3

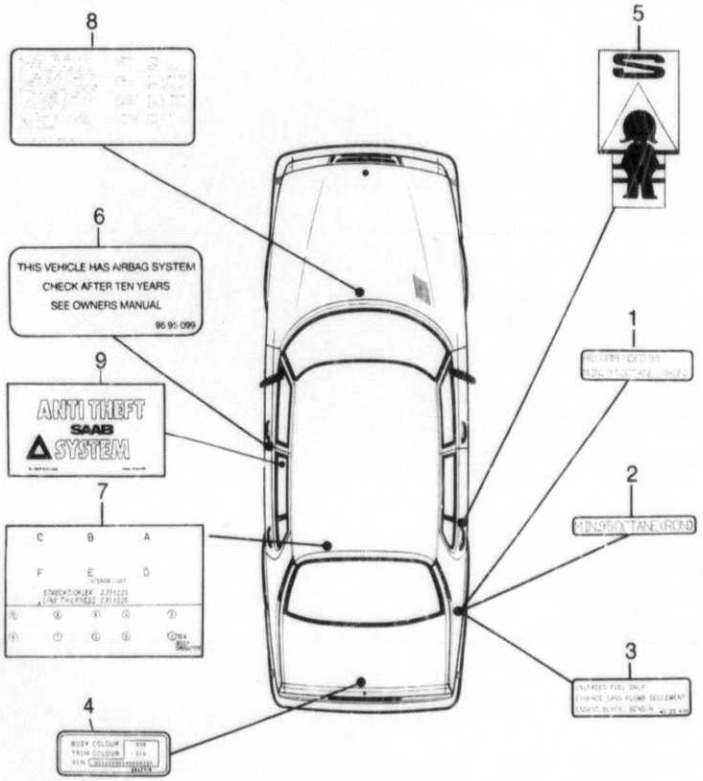

F4300 AAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	93 91 111		11,5), 98 MIN 91 OCTANE	1	Label	Etikett	4
2	75 37 756		11), 1990, C, MIN 95 OCTANE	1	Label	Etikett	4
3	40 23 636		12,4)	1	Label	Etikett	4
3	40 23 644		12,4), AU	1	Label	Etikett	4
3	40 22 141		12), DK	1	Label	Etikett	4
3	40 23 651		11) -1991, US,CA, TURBO AERO, PREMIUM UNLEADED FUEL ONLY	1	Label	Etikett	4
3	40 23 651		11) 1992, GB, TURBO AERO PREMIUM UNLEADED FUEL ONLY	1	Label	Etikett	4
3	43 92 312		11) 1993-, TURBO AERO, PREMIUM UNLEADED FUEL ONLY RON98	1	Label	Etikett	4
3	44 40 269		11) 1993-, PREMIUM UNLEADED FUEL ONLY RON95	1	Label	Etikett	4
4	69 42 619		14,15), 1990, BLANK, REPLACEMENT LABEL	1	Label	Etikett	6
5	84 45 637		CHILD LOCK	1	Label	Etikett	5
6	96 95 099		AIR-BAG SYSTEM	1	Label	Etikett	5
7	95 98 038		1990, RELAY CV	1	Label	Etikett	5
7	95 98 400		1991-, RELAY	1	Label	Etikett	5
7	95 98 988		1992-, CV, RELAY	1	Label	Etikett	5
8	94 82 548		1990, FREON,RECOMMENDED CHARGE	1	Label	Etikett	5
8	40 74 530		1991, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
8	43 18 747		1992-, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
9	95 98 632		1992-, ANTI THEFT SYSTEM	1	Label	Etikett	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
11. Fuel Bränsle
12. Unleaded fuel only Endast blyfri bensin
14. Trim colour Trim colour
15. Body colour Body colour

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

9 GROUP INDEX

Tool kit	5-L06
Labels	5-L08



Numerical register
Nummerregister
Indice numérico

Part No / Art nr	Gr	Page / Sida	Grid / Koord
17 54 506	02	039	1-D16
18 00 259	02	103	1-G08
18 00 259	02	143	1-H24
18 00 258	03A	013	2-A14
40 00 139	06	011	3-F12
40 00 154	06	011	3-F12
40 00 279	05	011	3-D12
40 00 279	05	025	3-E02
40 00 360	06	009	3-F10
40 00 477	05	015	3-D16
40 00 543	04	053	3-C06
40 00 543	05	015	3-D16
40 00 659	04	033	3-B10
40 00 667	04	033	3-B10
40 00 899	05	015	3-D16
40 01 517	05	015	3-D16
40 01 525	05	015	3-D16
40 01 553	05	017	3-D18
40 01 541	05	017	3-D18
40 01 798	06	009	3-F10
40 01 814	05	025	3-E02
40 02 093	05	011	3-D12
40 02 150	05	005	3-D06
40 02 176	03A	069	2-C22
40 02 267	05	011	3-D12
40 02 267	05	025	3-E02
40 02 358	07	007	3-H08
40 02 382	07	007	3-H08
40 02 408	07	007	3-H08
40 02 622	06	011	3-F12
40 02 630	06	011	3-F12
40 02 747	04	057	3-C10
40 02 861	05	011	3-D12
40 02 861	05	025	3-E02
40 02 879	05	011	3-D12
40 02 879	05	027	3-E04
40 02 887	05	027	3-E04
40 02 895	05	011	3-D12
40 02 895	05	025	3-E02
40 02 945	06	011	3-F12
40 02 960	06	011	3-F12
40 03 083	05	025	3-E02
40 03 091	05	027	3-E04
40 03 117	05	011	3-D12
40 03 117	05	025	3-E02
40 03 240	06	009	3-F10
40 03 272	06	011	3-F12
40 03 380	06	011	3-F12
40 03 398	06	011	3-F12
40 03 976	05	019	3-D20
40 03 992	05	013	3-D14
40 03 992	05	015	3-D16
40 04 404	03A	069	2-C22
40 04 594	07	007	3-H08
40 04 743	07	007	3-H08
40 04 750	07	007	3-H08
40 04 768	06	009	3-F10
40 04 826	05	021	3-D22
40 04 867	06	013	3-F14
40 06 409	08A	041	4-B18
40 06 417	08A	045	4-B22
40 06 425	08A	077	4-D06
40 06 516	08A	045	4-B22
40 06 524	08A	045	4-B22
40 06 656	08A	041	4-B18
40 06 664	08A	041	4-B18
40 07 001	08A	041	4-B18
40 07 001	08A	045	4-B22
40 07 449	08A	007	4-A08
40 08 421	08A	055	4-C08
40 08 439	08A	055	4-C08
40 08 793	08A	007	4-A08
40 09 379	08A	055	4-C08
40 09 387	08A	055	4-C08
40 09 627	08A	055	4-C08
40 10 104	08A	089	4-D18
40 10 138	08A	109	4-E14
40 10 138	08A	117	4-E22
40 10 278	08A	075	4-D04
40 10 286	08A	075	4-D04
40 12 738	03A	023	2-A24
40 13 165	03A	033	2-B10
40 13 454	08A	095	4-D24
40 14 783	03A	045	2-B22
40 14 916	03A	027	2-B04
40 14 924	03A	027	2-B04
40 14 932	03A	027	2-B04
40 14 940	03A	027	2-B04
40 14 957	03A	027	2-B04
40 14 965	03A	027	2-B04
40 15 145	02	057	1-E10
40 15 145	02	059	1-E12
40 15 145	02	061	1-E14
40 15 608	02	057	1-E10
40 15 608	02	059	1-E12
40 15 608	02	061	1-E14
40 15 715	02	061	1-E14
40 15 723	02	061	1-E14
40 15 731	02	061	1-E14
40 15 996	02	107	1-G12
40 16 002	02	107	1-G12
40 16 036	02	107	1-G12
40 16 051	02	107	1-G12
40 16 069	02	107	1-G12
40 16 085	02	047	1-D24
40 17 182	02	119	1-G24
40 17 299	03A	011	2-A12
40 17 596	09	007	5-L08
40 18 347	02	057	1-E10
40 18 347	02	059	1-E12
40 18 354	02	055	1-E08
40 18 586	02	077	1-F06
40 18 677	09	009	5-L10
40 18 735	09	009	5-L10
40 18 743	09	009	5-L10
40 18 776	09	009	5-L10
40 18 784	09	009	5-L10
40 19 162	09	009	5-L10
40 19 345	02	055	1-E08
40 19 352	02	081	1-F10
40 19 378	02	049	1-E02
40 19 493	02	107	1-G12
40 19 824	02	061	1-E14
40 20 673	02	061	1-E14
40 21 416	09	009	5-L10
40 21 598	02	111	1-G16
40 21 598	02	113	1-G18
40 21 598	02	117	1-G22
40 21 598	02	119	1-G24
40 21 598	02	121	1-H02
40 21 598	02	123	1-H04
40 21 598	02	165	1-I22
40 21 598	02	167	1-I24
40 22 141	09	013	5-L14
40 22 182	02	149	1-I06
40 22 190	02	149	1-I06
40 22 547	02	047	1-D24
40 22 554	02	049	1-E02
40 22 562	02	047	1-D24
40 22 562	02	049	1-E02
40 23 057	02	065	1-E18
40 23 107	02	071	1-E24
40 23 107	02	075	1-F04
40 23 149	03A	013	2-A14
40 23 214	02	065	1-E18
40 23 297	02	107	1-G12
40 23 305	09	009	5-L10
40 23 354	09	009	5-L10
40 23 396	02	051	1-E04
40 23 404	02	051	1-E04
40 23 412	02	051	1-E04
40 23 420	02	051	1-E04
40 23 438	02	051	1-E04
40 23 636	02	165	1-I22
40 23 636	02	167	1-I24
40 23 636	09	013	5-L14
40 23 644	09	013	5-L14
40 23 651	09	013	5-L14
40 23 701	02	107	1-G12
40 23 800	02	077	1-F06
40 24 089	02	113	1-G18
40 24 089	02	117	1-G22
40 24 089	02	165	1-I22
40 24 089	02	167	1-I24
40 24 121	02	119	1-G24
40 24 121	02	123	1-H04
40 24 121	02	165	1-I22
40 24 295	02	123	1-H04
40 24 303	02	123	1-H04
40 27 603	04	029	3-B06
40 27 660	02	127	1-H08
40 27 660	08C	025	5-K02
40 27 660	08C	027	5-K04
40 27 660	08C	029	5-K06
40 27 660	08C	033	5-K10
40 27 777	02	127	1-H08
40 27 801	04	007	3-A08
40 28 361	04	059	3-C12
40 28 387	04	037	3-B14
40 28 940	04	039	3-B16
40 29 153	02	129	1-H10
40 29 153	02	131	1-H12
40 29 211	02	127	1-H08
40 29 211	08C	025	5-K02
40 29 211	08C	027	5-K04
40 29 211	08C	029	5-K06
40 29 211	08C	033	5-K10
40 29 427	04	055	3-C08
40 29 435	04	055	3-C09
40 29 443	04	037	3-B14
40 29 450	04	039	3-B16
40 29 468	04	037	3-B14
40 29 476	04	039	3-B16
40 29 484	04	037	3-B14
40 29 492	04	037	3-B14
40 29 500	04	039	3-B16
40 29 518	04	039	3-B16
40 29 526	04	037	3-B14
40 29 526	04	039	3-B16
40 29 849	02	131	1-H12
40 30 862	08B	005	5-A06
40 31 399	08B	195	5-I04
40 31 399	08B	199	5-I08
40 31 563	08B	153	5-G10
40 31 563	08B	163	5-G20
40 31 563	08B	173	5-H06
40 31 563	08B	205	5-I14
40 32 934	08B	159	5-G16
40 32 934	08B	169	5-H02
40 33 486	08B	161	5-G18
40 33 486	08B	169	5-H02
40 34 047	08B	165	5-G22
40 34 054	08B	165	5-G22
40 34 385	08B	199	5-I08
40 36 273	08B	005	5-A06
40 36 281	08B	011	5-A12
40 36 299	08B	169	5-H02
40 37 735	08A	069	4-C22
40 37 826	08B	081	5-D10
40 37 826	08B	095	5-D24
40 37 834	08B	081	5-D10
40 37 834	08B	095	5-D24
40 37 842	08B	081	5-D10
40 37 842	08B	095	5-D24
40 37 842	08B	109	5-E14
40 37 842	08B	123	5-F04
40 37 859	08B	081	5-D10
40 37 859	08B	095	5-D24
40 37 859	08B	109	5-E14
40 37 859	08B	123	5-F04
40 37 867	08B	081	5-D10
40 37 867	08B	095	5-D24
40 37 867	08B	109	5-E14
40 37 867	08B	123	5-F04
40 37 875	08B	081	5-D10
40 37 875	08B	095	5-D24
40 37 875	08B	109	5-E14
40 37 875	08B	123	5-F04
40 37 883	08B	081	5-D10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A03 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 37 883	08B	095	5-D24
40 37 883	08B	109	5-E14
40 37 883	08B	123	5-F04
40 37 891	08B	081	5-D10
40 37 891	08B	095	5-D24
40 37 891	08B	109	5-E14
40 37 891	08B	123	5-F04
40 39 624	08B	029	5-B06
40 39 624	08B	041	5-B18
40 39 624	08B	061	5-C14
40 39 624	08B	073	5-D02
40 39 715	08B	143	5-F24
40 39 749	08B	029	5-B06
40 39 756	08B	029	5-B06
40 39 764	08B	029	5-B06
40 40 200	08B	029	5-R06
40 40 200	08B	041	5-B18
40 40 200	08B	061	5-C14
40 40 200	08B	073	5-D02
40 40 218	08B	029	5-B06
40 40 218	08B	041	5-B18
40 40 218	08B	061	5-C14
40 40 218	08B	073	5-D02
40 40 226	08B	029	5-B06
40 40 226	08B	041	5-B18
40 40 226	08B	061	5-C14
40 40 226	08B	073	5-D02
40 40 630	08B	029	5-B06
40 40 630	08B	041	5-B18
40 40 630	08B	061	5-C14
40 40 630	08B	073	5-D02
40 40 754	08B	177	5-H10
40 40 762	08B	177	5-H10
40 40 770	08B	177	5-H10
40 40 788	08B	177	5-H10
40 42 032	08B	021	5-A22
40 42 495	08B	133	5-F14
40 42 511	08B	133	5-F14
40 42 537	08B	133	5-F14
40 42 552	08B	133	5-F14
40 42 586	08B	133	5-F14
40 42 594	08B	133	5-F14
40 42 602	08B	133	5-F14
40 42 610	08B	133	5-F14
40 42 735	08B	021	5-A22
40 42 974	08B	195	5-I04
40 42 974	08B	197	5-I06
40 42 982	08B	141	5-F22
40 42 990	08B	141	5-F22
40 43 071	08B	141	5-F22
40 43 089	08B	141	5-F22
40 43 170	08B	147	5-G04
40 43 196	08B	151	5-G08
40 43 220	08B	147	5-C04
40 43 246	08B	151	5-G08
40 43 279	08B	147	5-G04
40 43 295	08B	147	5-G04
40 43 311	08B	147	5-G04
40 43 329	08B	147	5-G04
40 43 337	08B	147	5-G04
40 43 345	08B	147	5-G04
40 43 394	08B	159	5-G16
40 44 053	08B	141	5-F22
40 44 228	08B	143	5-F24
40 44 236	08B	143	5-F24
40 44 244	08B	145	5-G02
40 44 251	08B	145	5-G02
40 44 343	08B	145	5-G02
40 44 350	08B	145	5-G02
40 44 400	08B	143	5-F24
40 44 418	08B	143	5-F24
40 44 582	08B	145	5-G02
40 44 590	08B	145	5-G02
40 44 640	08B	145	5-G02
40 44 657	08B	145	5-G02
40 44 707	08B	145	5-G02
40 44 715	08B	145	5-G02
40 44 749	08B	143	5-F24
40 44 756	08B	143	5-F24
40 44 806	08B	191	5-H24
40 44 921	08B	191	5-H24
40 44 954	08B	191	5-H24
40 44 962	08B	189	5-H22
40 44 970	08B	189	5-H22
40 44 988	08B	189	5-H22
40 45 118	08B	189	5-H22
40 45 134	08B	189	5-H22
40 45 142	08B	191	5-H24
40 45 175	08B	191	5-H24
40 45 209	08B	189	5-H22
40 45 258	08B	191	5-H24
40 45 266	08B	189	5-H22
40 45 274	08B	189	5-H22
40 45 282	08B	191	5-H24
40 45 316	08B	189	5-H22
40 45 712	08B	023	5-A24
40 45 894	08B	031	5-B08
40 45 902	08B	031	5-B08
40 46 611	08B	031	5-B08
40 46 611	08B	043	5-B20
40 46 611	08B	063	5-C16
40 46 611	08B	075	5-D04
40 46 629	08B	031	5-B08
40 46 629	08B	043	5-B20
40 46 629	08B	063	5-C16
40 46 629	08B	075	5-D04
40 46 637	08B	031	5-B08
40 46 637	08B	043	5-B20
40 46 637	08B	063	5-C16
40 46 637	08B	075	5-D04
40 48 260	08B	175	5-H08
40 48 278	08B	175	5-H08
40 48 328	08B	031	5-B08
40 48 328	08B	043	5-B20
40 48 328	08B	063	5-C16
40 48 328	08B	075	5-D04
40 48 344	08B	023	5-A24
40 48 351	08B	023	5-A24
40 48 997	08B	021	5-A22
40 49 003	08B	021	5-A22
40 49 011	08B	021	5-A22
40 49 029	08B	021	5-A22
40 50 555	08B	133	5-F14
40 50 761	08B	179	5-H12
40 52 734	08B	159	5-G16
40 52 734	08B	169	5-H02
40 52 742	08B	159	5-G16
40 52 742	08B	169	5-H02
40 52 817	08B	023	5-A24
40 53 294	08B	021	5-A22
40 53 450	08B	177	5-H10
40 53 468	08B	177	5-H10
40 53 609	08B	031	5-B08
40 53 609	08B	043	5-B20
40 53 609	08B	063	5-C16
40 53 609	08B	075	5-D04
40 53 773	08B	023	5-A24
40 53 799	08B	175	5-H08
40 53 807	08B	175	5-H08
40 53 815	08B	175	5-H08
40 53 823	08B	175	5-H08
40 53 831	08B	177	5-H10
40 54 078	08B	173	5-H06
40 54 086	08B	173	5-H06
40 55 117	08B	157	5-G14
40 55 117	08B	165	5-G22
40 55 133	08B	177	5-H10
40 55 539	08B	023	5-A24
40 56 198	08B	089	5-D18
40 56 198	08B	091	5-D20
40 56 198	08B	097	5-E02
40 56 198	08B	101	5-E06
40 56 198	08B	103	5-E08
40 56 198	08B	105	5-E10
40 56 198	08B	111	5-E16
40 56 198	08B	115	5-E20
40 56 198	08B	117	5-E22
40 56 198	08B	119	5-E24
40 56 198	08B	125	5-F06
40 56 198	08B	129	5-F10
40 56 909	08B	141	5-F22
40 56 925	08B	141	5-F22
40 56 933	08B	141	5-F22
40 57 089	08A	015	4-A16
40 57 360	08B	135	5-F16
40 57 360	08B	137	5-F18
40 57 360	08B	139	5-F20
40 58 051	08B	021	5-A22
40 58 434	08B	143	5-F24
40 58 442	08B	143	5-F24
40 58 459	08B	143	5-F24
40 58 467	08B	143	5-F24
40 59 671	08B	165	5-G22
40 59 846	08B	155	5-G12
40 59 853	08B	155	5-G12
40 59 861	08B	155	5-G12
40 59 879	08B	157	5-G14
40 59 929	08B	155	5-G12
40 59 937	08B	155	5-G12
40 59 945	08B	155	5-G12
40 59 952	08B	157	5-G14
40 59 960	08B	155	5-G12
40 59 978	08B	155	5-G12
40 59 986	08B	155	5-G12
40 59 994	08B	155	5-G12
40 60 216	03A	031	2-B08
40 60 323	03A	031	2-B08
40 60 398	03A	037	2-B14
40 60 406	03A	037	2-B14
40 60 638	03A	077	2-D06
40 60 646	03A	075	2-D04
40 60 646	03A	085	2-D14
40 60 646	03A	095	2-D24
40 60 646	03A	103	2-E08
40 60 661	03A	047	2-B24
40 60 679	03A	029	2-B06
40 60 687	03A	029	2-B06
40 60 695	03A	029	2-B06
40 60 703	03A	029	2-B06
40 60 745	03A	041	2-B18
40 60 745	03A	133	2-F14
40 60 752	03A	041	2-B18
40 60 752	03A	133	2-F14
40 60 836	03A	119	2-E24
40 60 893	03B	057	2-I10
40 60 893	03B	085	2-J14
40 61 081	03A	129	2-F10
40 61 297	03A	129	2-F10
40 61 305	03A	129	2-F10
40 61 495	03B	021	2-G22
40 61 503	03B	021	2-G22
40 61 503	03B	049	2-I02
40 61 503	03B	079	2-J08
40 61 719	03A	115	2-E20
40 61 867	03A	047	2-B24
40 61 875	03A	075	2-D04
40 61 875	03A	085	2-D14
40 61 875	03A	095	2-D24
40 61 875	03A	103	2-E08
40 61 891	03A	005	2-A06
40 61 909	03A	055	2-C08
40 62 048	03A	115	2-E20
40 62 352	03A	117	2-E22
40 62 360	03A	117	2-E22
40 62 527	03A	115	2-E20
40 62 535	03A	115	2-E20
40 62 725	03A	115	2-E20
40 62 733	03A	115	2-E20
40 62 964	08C	015	5-J16
40 63 087	03B	021	2-G22
40 63 087	03B	049	2-I02
40 63 087	03B	079	2-J08
40 63 152	03A	051	2-C04
40 63 202	03A	069	2-C22
40 63 327	03A	069	2-C22
40 63 384	03A	057	2-C10

6-A04 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 63 517	03A	113	2-E18
40 63 525	03A	113	2-E18
40 63 582	03A	073	2-D02
40 63 731	08B	149	5-G06
40 63 749	08B	149	5-G06
40 63 848	08B	157	5-G14
40 63 848	08B	167	5-G24
40 63 855	08B	157	5-G14
40 63 855	08B	167	5-G24
40 63 863	08B	157	5-G14
40 63 863	08B	167	5-G24
40 63 871	08B	157	5-G14
40 63 871	08B	167	5-G24
40 65 215	03A	071	2-C24
40 65 223	03A	071	2-C24
40 65 231	03A	071	2-C24
40 65 249	03A	071	2-C24
40 65 256	03A	071	2-C24
40 65 264	03A	071	2-C24
40 65 272	03A	071	2-C24
40 65 280	03A	071	2-C24
40 65 298	03A	073	2-D02
40 65 306	03A	071	2-C24
40 65 314	03A	071	2-C24
40 65 322	03A	077	2-D06
40 65 330	03A	077	2-D06
40 65 348	03A	077	2-D06
40 65 355	03A	077	2-D06
40 65 363	03A	077	2-D06
40 65 371	03A	077	2-D06
40 65 389	03A	077	2-D06
40 65 397	03A	065	2-C18
40 65 405	03A	065	2-C18
40 65 488	03A	077	2-D06
40 65 496	03A	077	2-D06
40 65 520	03A	077	2-D06
40 65 538	03A	077	2-D06
40 65 561	03A	077	2-D06
40 65 579	03A	077	2-D06
40 65 603	03A	077	2-D06
40 65 611	03A	077	2-D06
40 65 629	03A	077	2-D06
40 65 637	03A	077	2-D06
40 66 312	03A	079	2-D08
40 66 312	03A	089	2-D18
40 66 312	03A	097	2-E02
40 66 312	03A	105	2-E10
40 66 320	03A	079	2-D08
40 66 320	03A	089	2-D18
40 66 320	03A	097	2-E02
40 66 320	03A	105	2-E10
40 66 338	03A	079	2-D08
40 66 338	03A	089	2-D18
40 66 338	03A	099	2-E04
40 66 338	03A	107	2-E12
40 67 294	03A	081	2-D10
40 67 294	03A	091	2-D20
40 67 294	03A	101	2-E06
40 67 294	03A	109	2-E14
40 67 294	03A	081	2-D10
40 67 302	03A	091	2-D20
40 67 302	03A	101	2-E06
40 67 302	03A	109	2-E14
40 67 310	03A	081	2-D10
40 67 310	03A	091	2-D20
40 67 328	03A	081	2-D10
40 67 328	03A	091	2-D20
40 67 328	03A	101	2-E06
40 67 328	03A	109	2-E14
40 67 336	03A	081	2-D10
40 67 336	03A	091	2-D20
40 67 336	03A	101	2-E06
40 67 336	03A	109	2-E14
40 67 344	03A	073	2-D02
40 67 351	03A	073	2-D02
40 67 369	03A	073	2-D02
40 67 401	03A	073	2-D02
40 67 419	03A	073	2-D02
40 67 484	03A	055	2-C08
40 67 617	03B	057	2-I10
40 67 617	03B	085	2-J14
40 67 989	03A	065	2-C18
40 67 997	03A	065	2-C18
40 68 383	03A	073	2-D02
40 68 391	03A	073	2-D02
40 68 433	03A	081	2-D10
40 68 433	03A	091	2-D20
40 68 441	03B	031	2-H08
40 68 441	03B	061	2-I14
40 68 441	03B	089	2-J18
40 68 581	03A	115	2-E20
40 68 623	03A	071	2-C24
40 68 839	03A	079	2-D08
40 68 847	03A	079	2-D08
40 68 912	03A	081	2-D10
40 68 912	03A	091	2-D20
40 68 912	03A	101	2-E06
40 68 912	03A	109	2-E14
40 69 241	03A	079	2-D08
40 69 241	03A	089	2-D18
40 69 241	03A	097	2-E02
40 69 241	03A	105	2-E10
40 69 282	03A	125	2-F06
40 69 308	03A	119	2-E24
40 69 324	03A	119	2-E24
40 69 373	03A	053	2-C06
40 69 375	08A	145	4-G02
40 69 373	08A	147	4-G04
40 69 746	03A	077	2-D06
40 69 746	03A	089	2-D18
40 69 746	03A	097	2-E02
40 69 746	03A	105	2-E10
40 69 761	03A	123	2-F04
40 69 787	03A	123	2-F04
40 69 803	03A	123	2-F04
40 69 829	03B	013	2-G14
40 69 829	03B	041	2-H18
40 69 829	03B	071	2-I24
40 70 413	08C	007	5-J08
40 70 454	08C	015	5-J16
40 70 827	08C	017	5-J18
40 70 827	08C	019	5-J20
40 70 827	08C	025	5-K02
40 70 835	08C	017	5-J18
40 70 835	08C	019	5-J20
40 70 918	08C	021	5-J22
40 70 918	08C	029	5-K06
40 70 918	08C	033	5-K10
40 70 934	08C	021	5-J22
40 70 934	08C	025	5-K02
40 70 934	08C	033	5-K10
40 71 411	08C	017	5-J18
40 71 411	08C	019	5-J20
40 71 478	08C	013	5-J14
40 71 585	08C	017	5-J18
40 71 585	08C	019	5-J20
40 71 593	08C	017	5-J18
40 71 593	08C	019	5-J20
40 71 718	08C	019	5-J20
40 71 718	08C	033	5-K10
40 72 427	08C	007	5-J08
40 72 492	08C	021	5-J22
40 72 492	08C	033	5-K10
40 72 583	08C	007	5-J08
40 72 591	08C	007	5-J08
40 72 609	08C	011	5-J12
40 72 617	08C	007	5-J08
40 72 625	08C	007	5-J08
40 73 474	08C	009	5-J10
40 73 706	02	131	1-H12
40 73 748	08C	007	5-J08
40 73 748	08C	033	5-K10
40 73 805	08C	005	5-J06
40 73 813	08C	011	5-J12
40 73 995	08C	017	5-J18
40 73 995	08C	019	5-J20
40 74 290	08C	007	5-J08
40 74 407	08C	037	5-K14
40 74 522	08C	033	5-K10
40 74 522	09	007	5-L08
40 74 530	08C	033	5-K10
40 74 530	09	013	5-L14
40 74 944	08C	017	5-J18
40 74 944	08C	019	5-J20
40 77 509	08B	195	5-I04
40 77 509	08B	197	5-I06
40 77 509	08B	199	5-I08
40 77 516	08B	195	5-I04
40 77 516	08B	197	5-I06
40 77 624	08B	197	5-I06
40 77 624	08B	195	5-I04
40 77 632	08B	195	5-I04
40 77 632	08B	197	5-I06
40 77 640	08B	197	5-I06
40 77 657	08B	197	5-I06
40 77 665	08B	195	5-I04
40 77 673	08B	195	5-I04
40 77 681	08B	197	5-I06
40 77 699	08B	197	5-I06
40 78 285	08B	019	5-A20
40 78 317	08B	019	5-A20
40 78 382	08B	015	5-A16
40 78 390	03A	063	2-C16
40 78 408	03A	063	2-C16
40 79 174	03A	063	2-C16
40 79 182	03A	063	2-C16
40 79 323	08B	011	5-A12
40 79 331	08B	013	5-A14
40 79 349	03B	011	5-A12
40 79 356	08B	011	5-A12
40 79 760	08B	011	5-A12
40 79 844	08B	011	5-A12
40 79 851	08B	011	5-A12
40 79 869	08B	011	5-A12
40 79 877	08B	011	5-A12
40 79 885	08B	013	5-A14
40 79 943	08B	195	5-I04
40 79 943	08B	197	5-I06
40 79 950	08B	195	5-I04
40 79 950	08B	197	5-I06
40 80 065	08B	011	5-A12
40 80 107	08B	011	5-A12
40 80 446	08B	195	5-I04
40 80 453	08B	195	5-I04
40 80 503	08B	199	5-I08
40 80 511	08B	199	5-I08
40 80 529	08B	199	5-I08
80 537	08B	199	5-I08
40 81 836	08B	007	5-A08
40 82 830	08B	005	5-A06
40 82 848	08B	005	5-A06
40 82 855	08B	005	5-A06
40 87 863	08B	005	5-A06
40 82 988	08B	005	5-A06
40 82 996	08B	005	5-A06
40 83 002	08B	005	5-A06
40 83 010	08B	005	5-A06
40 83 028	08B	157	5-G14
40 83 036	03A	065	2-C18
40 83 044	03A	065	2-C18
40 83 051	03A	065	2-C18
40 83 150	03A	065	2-C18
40 83 168	03A	065	2-C18
40 83 580	08B	011	5-A12
40 83 598	08B	011	5-A12
40 83 721	08B	015	5-A16
40 83 739	08B	015	5-A16
40 83 747	08B	015	5-A16
40 83 887	03A	129	2-F10
40 83 903	03A	129	2-F10
40 83 911	03A	129	2-F10
40 83 929	03A	129	2-F10
40 83 937	03A	129	2-F10
40 83 952	03A	129	2-F10
40 83 960	03A	129	2-F10
40 83 986	03A	129	2-F10
40 83 994	03A	129	2-F10
40 84 406	03A	129	2-F10
40 84 505	03A	129	2-F10
40 84 513	03A	131	2-F12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A05 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 84 521	03A	129	2-F10
40 84 554	03A	051	2-C04
40 84 554	03A	137	2-F18
40 84 679	08B	019	5-A20
40 84 927	08B	011	5-A12
40 84 935	08B	013	5-A14
40 84 943	08B	011	5-A12
40 84 950	08B	011	5-A12
40 84 968	08B	013	5-A14
40 84 976	08B	011	5-A12
40 85 189	03A	065	2-C18
40 85 197	03A	065	2-C18
40 85 270	03A	065	2-C18
40 86 708	02	125	1-H06
40 86 724	02	131	1-H12
40 86 732	03A	065	2-C18
40 87 102	08B	167	5-G24
40 87 110	04	029	3-B06
40 88 324	08A	133	4-F14
40 88 332	08A	133	4-F14
40 88 340	08A	133	4-F14
40 88 357	08A	133	4-F14
40 89 074	09	007	5-L08
40 89 454	08A	057	4-C10
40 90 031	03A	035	2-B12
40 90 080	08A	121	4-F02
40 90 080	08A	129	4-F10
40 90 130	08A	077	4-D06
40 92 862	08A	019	4-A20
40 92 870	03A	025	2-B02
40 92 888	03A	025	2-B02
40 93 019	03A	025	2-B02
40 93 027	03A	025	2-B02
40 93 126	03A	045	2-B22
40 93 134	03A	045	2-B22
40 93 381	03A	031	2-B08
40 94 082	08A	113	4-E18
40 94 082	08A	121	4-F02
40 94 082	08A	127	4-F08
40 94 843	09	00	5-L08
40 95 790	03A	045	2-B22
40 95 816	03A	045	2-B22
40 96 822	08A	121	4-F02
40 96 830	08A	121	4-F02
40 96 855	08A	127	4-F08
40 96 863	08A	127	4-F08
40 96 988	08A	127	4-F08
40 96 996	08A	127	4-F08
40 98 166	08A	051	4-C04
40 98 174	08A	051	4-C04
40 98 190	03A	069	2-C22
40 98 398	08A	037	4-B14
40 98 844	08A	015	4-A16
40 98 844	08A	019	4-A20
40 99 701	08A	041	4-B18
40 99 719	08A	041	4-B18
40 99 909	08A	007	4-A08
41 01 044	08A	009	4-A10
41 01 978	08A	005	4-A06
41 03 206	05	021	3-D22
41 03 438	06	011	3-F12
41 03 446	06	011	3-F12
41 03 784	05	019	3-D20
41 03 958	06	013	3-F14
41 03 974	06	013	3-F14
41 03 990	06	013	3-F14
41 03 990	06	015	3-F16
41 04 006	06	015	3-F16
41 04 014	06	015	3-F16
41 04 014	06	017	3-F18
41 04 022	06	013	3-F14
41 04 022	06	015	3-F16
41 04 030	06	013	3-F14
41 04 030	06	015	3-F16
41 04 048	06	019	3-F20
41 04 048	06	021	3-F22
41 04 071	06	013	3-F14
41 04 069	06	015	3-F16
41 04 162	06	015	3-F16
41 04 287	07	007	3-H08
41 04 493	06	015	3-F16
41 04 501	06	015	3-F16
41 04 519	06	015	3-F16
41 04 592	06	013	3-F14
41 04 592	06	015	3-F16
41 04 709	06	025	3-G02
41 04 717	06	025	3-G02
41 04 725	06	025	3-G02
41 04 733	06	025	3-G02
41 04 741	06	025	3-G02
41 04 766	06	023	3-F24
41 04 766	06	[illegible]	3-G02
41 05 391	07	[illegible]	3-H08
41 05 433	05	025	3-E02
41 05 789	05	021	3-D22
41 06 142	04	033	3-B10
41 06 159	04	033	3-B10
41 06 365	07	007	3-H08
41 06 373	07	007	3-H08
41 06 472	05	017	3-D18
41 06 498	06	013	3-F14
41 06 506	06	013	3-F14
41 06 514	06	013	3-F14
41 06 522	06	013	3-F14
41 06 571	06	017	3-F18
41 06 589	06	015	3-F16
41 06 597	06	017	3-F18
41 06 605	06	015	3-F16
41 06 613	06	013	3-F14
41 06 621	06	013	3-F14
41 06 639	06	013	3-F14
41 06 647	06	015	3-F16
41 06 654	06	015	3-F16
41 06 688	06	013	3-F14
41 06 696	06	013	3-F14
41 06 704	06	021	3-F22
41 06 985	06	009	3-F10
41 06 993	06	009	3-F10
41 07 116	05	005	3-D06
41 07 116	05	025	3-E02
41 07 298	05	021	3-D22
41 07 413	07	009	3-H10
41 07 793	05	007	3-D08
41 07 793	05	027	3-E04
41 07 801	05	027	3-E04
41 07 819	05	011	3-D12
41 08 270	03A	129	2-F10
41 08 320	03A	113	2-E18
41 08 502	03A	089	2-D18
41 08 502	08A	145	4-G02
41 08 502	08A	147	4-G04
41 08 510	03A	053	2-C06
41 08 551	03A	079	2-D08
41 08 551	03A	089	2-D18
41 08 551	03A	099	2-E04
41 08 551	03A	107	2-E12
41 08 593	03A	129	2-F10
41 08 643	03A	055	2-C08
41 08 668	03A	131	2-F12
41 08 676	03A	055	2-C08
41 08 742	03A	059	2-C12
41 08 759	03A	055	2-C08
41 08 841	03A	129	2-F10
41 08 858	03A	129	2-F10
41 08 866	03A	129	2-F10
41 08 874	03A	129	2-F10
41 08 882	03A	129	2-F10
41 08 890	03A	119	2-E24
41 08 940	03A	129	2-F10
41 08 973	03A	119	2-E24
41 08 981	03A	119	2-E24
41 09 273	03B	085	2-J14
41 09 342	03A	131	2-F12
41 09 567	03A	119	2-E24
41 09 575	03A	119	2-E24
41 10 045	03A	085	2-D14
41 10 060	03A	085	2-D14
41 10 060	03A	093	2-D22
41 10 060	03A	103	2-E08
41 10 078	03A	085	2-D14
41 10 078	03A	093	2-D22
41 10 078	03A	103	2-E08
41 10 177	03A	087	2-D16
41 10 185	03A	087	2-D16
41 10 193	03A	087	2-D16
41 10 201	03A	089	2-D18
41 10 219	03A	087	2-D16
41 10 227	03A	087	2-D16
41 10 276	03A	087	2-D16
41 10 292	03A	087	2-D16
41 10 300	03A	087	2-D16
41 10 318	03A	087	2-D16
41 10 326	03A	089	2-D18
41 10 326	03A	099	2-E04
41 10 326	03A	107	2-E12
41 10 334	03A	089	2-D18
41 10 334	03A	099	2-E04
41 10 334	03A	107	2-E12
41 10 342	03A	089	2-D18
41 10 342	03A	099	2-E04
41 10 342	03A	107	2-E12
41 10 441	03A	069	2-C22
41 10 458	03A	085	2-D14
41 10 458	03A	093	2-D22
41 10 458	03A	103	2-E08
41 10 466	03A	085	2-D14
41 10 466	03A	093	2-D22
41 10 466	03A	103	2-E08
41 10 581	03A	119	2-E24
41 10 961	03A	073	2-D02
41 11 076	03A	007	2-A08
41 11 076	03A	009	2-A10
41 11 084	03A	129	2-F10
41 11 100	03A	065	2-C18
41 11 118	03A	069	2-C22
41 11 480	03A	127	2-F08
41 13 049	03A	059	2-C12
41 13 122	03B	053	2-I06
41 13 163	03A	127	2-F08
41 13 379	03A	077	2-D06
41 13 809	03B	083	2-J12
41 15 077	03B	061	2-I14
41 15 077	03B	073	2-J02
41 15 077	03B	079	2-J08
41 15 077	03B	085	2-J14
41 15 077	03B	089	2-J18
41 15 077	03B	107	2-K12
41 15 457	03B	089	2-J18
41 15 457	03B	101	2-K06
41 15 457	03B	111	2-K16
41 15 457	03B	061	2-I14
41 15 499	03B	089	2-J18
41 15 499	03B	107	2-K12
41 15 499	03B	115	2-K20
41 15 580	03B	061	2-I14
41 15 580	03B	073	2-J02
41 15 580	03B	075	2-J04
41 15 580	03B	083	2-J12
41 15 580	03B	089	2-J18
41 15 580	03B	107	2-K12
41 15 580	03B	115	2-K20
41 16 695	03A	063	2-C16
41 16 711	03A	071	2-C24
41 16 729	03A	071	2-C24
41 16 737	03A	071	2-C24
41 16 752	03A	071	2-C24
41 16 760	03A	071	2-C24
41 16 778	03A	071	2-C24
41 16 786	03A	071	2-C24
41 16 794	03A	071	2-C24
41 16 802	03A	071	2-C24
41 16 810	03A	071	2-C24
41 16 828	03A	071	2-C24
41 16 836	03A	071	2-C24
41 16 844	03A	073	2-D02
41 16 851	03A	073	2-D02
41 16 869	03A	071	2-C24
41 16 877	03A	073	2-D02

6-A06 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 16 885	03A	071	2-C24
41 17 073	08B	171	5-H04
41 17 081	08B	171	5-H04
41 17 164	03B	073	2-J02
41 17 263	03B	079	2-J08
41 17 370	03A	123	2-F04
41 17 388	03B	115	2-K20
41 17 461	03B	085	2-J14
41 17 560	03B	073	2-J02
41 17 669	03B	075	2-J04
41 17 768	03B	083	2-J12
41 18 204	02	133	1-H14
41 18 238	04	015	3-A16
41 18 329	04	035	3-B12
41 18 527	04	037	3-B14
41 18 550	04	035	3-B12
41 18 774	08C	019	5-J20
41 18 774	08C	033	5-K10
41 18 964	08C	017	5-J18
41 18 964	08C	019	5-J20
41 18 964	08C	029	5-K06
41 18 964	08C	033	5-K10
41 19 780	08C	019	5-J20
41 19 780	08C	033	5-K10
41 20 036	04	029	3-B06
41 20 069	02	125	1-H06
41 21 182	04	039	3-B16
41 21 208	04	051	3-C04
41 21 224	04	037	3-B14
41 21 232	04	045	3-B22
41 21 240	04	045	3-B22
41 21 273	04	045	3-B22
41 21 281	04	039	3-B16
41 21 323	04	043	3-B20
41 21 331	04	049	3-C02
41 21 349	04	045	3-B22
41 21 364	04	053	3-C06
41 21 380	04	039	3-B16
41 21 398	04	049	3-C02
41 21 406	04	049	3-C02
41 21 414	04	037	3-B14
41 21 448	04	049	3-C02
41 21 448	04	063	3-C16
41 21 497	04	049	3-C02
41 21 695	02	131	1-H12
41 21 703	02	131	1-H12
41 21 802	02	135	1-H16
41 21 810	02	135	1-H16
41 23 048	08B	155	5-G12
41 23 055	08B	155	5-G12
41 23 063	08B	155	5-G12
41 23 071	08B	155	5-G12
41 23 089	08B	159	5-G16
41 23 097	08B	159	5-G16
41 23 105	08B	159	5-G16
41 23 113	08B	159	5-G16
41 23 121	08B	159	5-G16
41 23 295	08B	165	5-G22
41 23 311	08B	165	5-G22
41 23 337	08B	165	5-G22
41 23 345	08B	165	5-G22
41 23 352	08B	165	5-G22
41 23 360	08B	165	5-G22
41 23 378	08B	169	5-H02
41 23 386	08B	163	5-G20
41 23 386	08B	173	5-H06
41 23 394	08B	157	5-G14
41 23 394	08B	165	5-G22
41 23 451	08B	163	5-G20
41 23 493	08B	163	5-G20
41 23 535	08B	163	5-G20
41 23 576	08B	163	5-G20
41 23 691	08B	167	5-G24
41 23 733	08B	167	5-G24
41 23 998	08B	185	5-H18
41 24 129	08B	185	5-H18
41 24 137	08B	185	5-H18
41 24 228	08B	165	5-G22
41 25 019	08B	077	5-D06
41 25 019	08B	089	5-D18
41 25 027	08B	077	5-D06
41 25 027	08B	089	5-D18
41 25 050	08B	077	5-D06
41 25 050	08B	089	5-D18
41 25 076	08B	077	5-D06
41 25 076	08B	089	5-D18
41 25 084	08B	077	5-D06
41 25 084	08B	089	5-D18
41 25 100	08B	077	5-D06
41 25 100	08B	089	5-D18
41 25 126	08B	077	5-D06
41 25 126	08B	089	5-D18
41 25 134	08B	077	5-D06
41 25 134	08B	089	5-D18
41 25 167	08B	077	5-D06
41 25 167	08B	089	5-D18
41 25 175	08B	077	5-D06
41 25 175	08B	089	5-D18
41 25 191	08B	077	5-D06
41 25 191	08B	089	5-D18
41 25 241	08B	077	5-D06
41 25 241	08B	089	5-D18
41 25 266	08B	077	5-D06
41 25 266	08B	089	5-D18
41 25 274	08B	077	5-D06
41 25 274	08B	089	5-D18
41 25 290	08B	077	5-D06
41 25 290	08B	091	5-D20
41 25 308	08B	077	5-D06
41 25 308	08B	091	5-D20
41 25 340	08B	085	5-D14
41 25 340	08B	099	5-E04
41 25 357	08B	085	5-D14
41 25 357	08B	099	5-E04
41 25 662	08B	085	5-D14
41 25 662	08B	099	5-E04
41 25 670	08B	085	5-D14
41 25 670	08B	099	5-E04
41 25 746	08B	085	5-D14
41 25 746	08B	099	5-E04
41 25 753	08B	085	5-D14
41 25 753	08B	099	5-E04
41 25 829	08B	085	5-D14
41 25 829	08B	099	5-E04
41 25 837	08B	085	5-D14
41 25 837	08B	099	5-E04
41 25 902	08B	085	5-D14
41 25 902	08B	099	5-E04
41 25 910	08B	085	5-D14
41 25 910	08B	099	5-E04
41 25 985	08B	085	5-D14
41 25 985	08B	099	5-E04
41 25 993	08B	085	5-D14
41 25 993	08B	099	5-E04
41 26 066	08B	085	5-D14
41 26 066	08B	099	5-E04
41 26 074	08B	085	5-D14
41 26 074	08B	099	5-E04
41 26 140	08B	085	5-D14
41 26 140	08B	099	5-E04
41 26 157	08B	085	5-D14
41 26 157	08B	099	5-E04
41 26 546	08B	079	5-D08
41 26 546	08B	091	5-D20
41 26 553	08B	079	5-D08
41 26 553	08B	091	5-D20
41 26 561	08B	079	5-D08
41 26 561	08B	091	5-D20
41 26 579	08B	079	5-D08
41 26 579	08B	091	5-D20
41 26 603	08B	079	5-D08
41 26 603	08B	091	5-D20
41 26 611	08B	079	5-D08
41 26 611	08B	091	5-D20
41 26 660	08B	079	5-D08
41 26 660	08B	093	5-D22
41 26 678	08B	079	5-D08
41 26 678	08B	093	5-D22
41 26 694	08B	079	5-D08
41 26 694	08B	091	5-D20
41 26 702	08B	079	5-D08
41 26 702	08B	091	5-D20
41 26 751	08B	079	5-D08
41 26 751	08B	091	5-D20
41 26 769	08B	079	5-D08
41 26 769	08B	091	5-D20
41 26 777	08B	079	5-D08
41 26 777	08B	091	5-D20
41 26 785	08B	079	5-D08
41 26 785	08B	091	5-D20
41 26 835	08B	079	5-D08
41 26 835	08B	093	5-D22
41 26 843	08B	079	5-D08
41 26 843	08B	093	5-D22
41 26 850	08B	163	5-G20
41 26 850	08B	165	5-G22
41 26 868	08B	087	5-D16
41 26 868	08B	101	5-E06
41 26 884	08B	087	5-D16
41 26 884	08B	101	5-E06
41 26 959	08B	087	5-D16
41 26 959	08B	101	5-E06
41 26 967	08B	087	5-D16
41 26 967	08B	101	5-E06
41 27 031	08B	087	5-D16
41 27 031	08B	101	5-E06
41 27 049	08B	087	5-D16
41 27 049	08B	101	5-E06
41 27 114	08B	087	5-D16
41 27 114	08B	101	5-E06
41 27 122	08B	087	5-D16
41 27 122	08B	101	5-E06
41 27 197	08B	087	5-D16
41 27 197	08B	101	5-E06
41 27 205	08B	087	5-D16
41 27 205	08B	101	5-E06
41 27 270	08B	087	5-D16
41 27 270	08B	101	5-E06
41 27 288	08B	087	5-D16
41 27 288	08B	101	5-E06
41 27 353	08B	087	5-D16
41 27 353	08B	101	5-E06
41 27 361	08B	087	5-D16
41 27 361	08B	101	5-E06
41 27 437	08B	087	5-D16
41 27 437	08B	101	5-E06
41 27 445	08B	087	5-D16
41 27 445	08B	101	5-E06
41 27 569	08B	135	5-F16
41 27 577	08B	135	5-F16
41 27 577	08B	137	5-F18
41 27 577	08B	139	5-F20
41 27 585	08B	135	5-F16
41 27 585	08B	137	5-F18
41 27 585	08B	139	5-F20
41 27 593	08B	135	5-F16
41 27 593	08B	137	5-F18
41 27 593	08B	139	5-F20
41 27 643	08B	033	5-B10
41 27 650	08B	033	5-B10
41 27 668	08B	033	5-B10
41 27 676	08B	033	5-B10
41 27 676	08B	049	5-C02
41 27 684	08B	033	5-B10
41 27 684	08B	049	5-C02
41 27 692	08B	033	5-B10
41 27 692	08B	049	5-C02
41 27 700	08B	033	5-B10
41 27 700	08B	037	5-B14
41 27 700	08B	043	5-B20
41 27 700	08B	049	5-C02
41 27 700	08B	055	5-C08
41 27 700	08B	063	5-C16
41 27 718	08B	035	5-B12
41 27 726	08B	035	5-B12
41 27 734	08B	035	5-B12
41 27 742	08B	037	5-B14
41 27 742	08B	055	5-C08
41 27 759	08B	037	5-B14
41 27 759	08B	055	5-C08
41 27 767	08B	037	5-B14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A07 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 27 767	08B	055	5-C08
41 27 783	08B	035	5-B12
41 27 791	08B	035	5-B12
41 27 809	08B	035	5-B12
41 27 817	08B	037	5-B14
41 27 817	08B	055	5-C08
41 27 825	08B	037	5-B14
41 27 825	08B	055	5-C08
41 27 833	08B	037	5-B14
41 27 833	08B	055	5-C08
41 28 344	08B	183	5-H16
41 28 443	08B	021	5-A22
41 28 708	08B	135	5-F16
41 28 716	08B	135	5-F16
41 28 716	08B	137	5-F18
41 28 716	08B	139	5-F20
41 28 724	08B	135	5-F16
41 28 724	08B	137	5-F18
41 28 724	08B	139	5-F20
41 28 732	08B	135	5-F16
41 28 732	08B	137	5-F18
41 28 732	08B	139	5-F20
41 28 740	08B	135	5-F16
41 28 757	08B	135	5-F16
41 28 757	08B	137	5-F18
41 28 757	08B	139	5-F20
41 28 765	08B	135	5-F16
41 28 765	08B	137	5-F18
41 28 765	08B	139	5-F20
41 28 773	08B	135	5-F16
41 28 773	08B	137	5-F18
41 28 773	08B	139	5-F20
41 28 898	08B	077	5-D06
41 28 906	08B	077	5-D06
41 28 914	08B	077	5-D06
41 28 922	08B	077	5-D06
41 28 930	08B	077	5-D06
41 28 948	08B	077	5-D06
41 29 094	08A	069	4-C22
41 29 102	08A	071	4-C24
41 29 342	08B	163	5-G20
41 29 342	08B	165	5-G22
41 29 821	08B	183	5-H16
41 29 839	08B	183	5-H16
41 30 373	08B	035	5-B12
41 30 373	08B	051	5-C04
41 30 381	08B	035	5-B12
41 30 381	08B	051	5-C04
41 30 399	08B	035	5-B12
41 30 399	08B	053	5-C06
41 31 207	08B	035	5-B12
41 31 207	08B	053	5-C06
41 31 215	08B	037	5-B14
41 31 215	08B	055	5-C08
41 31 223	08B	037	5-B14
41 31 223	08B	055	5-C08
41 31 264	08B	035	5-B12
41 31 264	08B	051	5-C04
41 31 272	08B	035	5-B12
41 31 272	08B	053	5-C06
41 31 280	08B	037	5-B14
41 31 280	08B	055	5-C08
41 31 488	08B	033	5-B10
41 31 488	08B	045	5-B22
41 31 496	08B	033	5-B10
41 31 496	08B	045	5-B22
41 31 504	08B	033	5-B10
41 31 504	08B	047	5-B24
41 31 512	08B	033	5-B10
41 31 512	08B	047	5-B24
41 31 520	08B	033	5-B10
41 31 520	08B	047	5-B24
41 31 538	08B	033	5-B10
41 31 538	08B	047	5-B24
41 31 546	08B	033	5-B10
41 31 546	08B	045	5-B22
41 31 553	08B	033	5-B10
41 31 553	08B	047	5-B24
41 31 561	08B	033	5-B10
41 31 561	08B	047	5-B24
41 31 728	08B	159	5-G16
41 31 736	08B	159	5-G16
41 31 744	08B	159	5-G16
41 31 751	08B	169	5-H02
41 32 403	08B	037	5-B14
41 32 403	08B	055	5-C08
41 32 411	08B	037	5-B14
41 32 411	08B	055	5-C08
41 32 429	08B	037	5-B14
41 32 429	08B	055	5-C08
41 32 437	08B	033	5-B10
41 32 437	08B	049	5-C02
41 32 445	08B	033	5-B10
41 32 445	08B	049	5-C02
41 32 452	08B	037	5-B14
41 32 452	08B	055	5-C08
41 32 460	08B	033	5-B10
41 32 460	08B	049	5-C02
41 32 478	08B	033	5-B10
41 32 478	08B	049	5-C02
41 32 486	08B	033	5-B10
41 32 486	08B	037	5-B14
41 32 486	08B	049	5-C02
41 32 486	08B	055	5-C08
41 32 536	08B	033	5-B10
41 32 536	08B	037	5-B14
41 32 536	08B	049	5-C02
41 32 536	08B	055	5-C08
41 32 544	08B	037	5-B14
41 32 544	08B	055	5-C08
41 32 585	08B	011	5-A12
41 32 601	08B	013	5-A14
41 32 627	08B	011	5-A12
41 33 146	08B	173	5-H06
41 33 153	08B	173	5-H06
41 33 161	08B	173	5-H06
41 33 740	08B	035	5-B12
41 33 740	08B	051	5-C04
41 33 757	08B	035	5-B12
41 33 757	08B	051	5-C04
41 33 765	08B	035	5-B12
41 33 765	08B	053	5-C06
41 33 773	08B	035	5-B12
41 33 773	08B	053	5-C06
41 33 781	08B	037	5-B14
41 33 781	08B	055	5-C08
41 33 799	08B	037	5-B14
41 33 799	08B	055	5-C08
41 33 815	08B	035	5-B12
41 33 815	08B	051	5-C04
41 33 823	08B	035	5-B12
41 33 823	08B	053	5-C06
41 33 831	08B	037	5-B14
41 33 831	08B	055	5-C08
41 34 003	08B	161	5-G18
41 34 003	08B	173	5-H06
41 34 219	08B	161	5-G18
41 34 219	08B	169	5-H02
41 34 227	08B	163	5-G20
41 34 227	08B	167	5-G24
41 34 672	08B	159	5-G16
41 34 680	08B	159	5-G16
41 35 786	08B	039	5-B16
41 35 794	08B	039	5-B16
41 35 794	08B	059	5-C12
41 35 794	08B	071	5-C24
41 35 802	08B	041	5-B18
41 35 802	08B	061	5-C14
41 35 802	08B	073	5-D02
41 35 810	08B	041	5-B18
41 35 810	08B	061	5-C14
41 35 810	08B	073	5-D02
41 35 828	08B	041	5-B18
41 35 828	08B	063	5-C16
41 35 828	08B	075	5-D04
41 35 836	08B	039	5-B16
41 35 844	08B	039	5-B16
41 35 851	08B	039	5-B16
41 35 851	08B	059	5-C12
41 35 851	08B	071	5-C24
41 35 869	08B	039	5-B16
41 35 869	08B	059	5-C12
41 35 869	08B	071	5-C24
41 35 877	08B	041	5-B18
41 35 877	08B	061	5-C14
41 35 877	08B	073	5-D02
41 35 893	08B	041	5-B18
41 35 893	08B	061	5-C14
41 35 893	08B	073	5-D02
41 35 901	08B	041	5-B18
41 35 901	08B	061	5-C14
41 35 901	08B	073	5-D02
41 35 919	08B	041	5-B18
41 35 919	08B	063	5-C16
41 35 919	08B	075	5-D04
41 35 927	08B	041	5-B18
41 35 927	08B	063	5-C16
41 35 927	08B	075	5-D04
41 35 935	08B	041	5-B18
41 35 935	08B	061	5-C14
41 35 935	08B	073	5-D02
41 35 943	08B	041	5-B18
41 35 943	08B	061	5-C14
41 35 943	08B	073	5-D02
41 35 950	08B	041	5-B18
41 35 950	08B	061	5-C14
41 35 950	08B	073	5-D02
41 36 024	08B	103	5-E08
41 36 024	08B	117	5-E22
41 36 032	08B	103	5-E08
41 36 032	08B	117	5-E22
41 36 065	08B	103	5-E08
41 36 065	08B	117	5-E22
41 36 073	08B	103	5-E08
41 36 073	08B	117	5-E22
41 36 081	08B	103	5-E08
41 36 081	08B	117	5-E22
41 36 099	08B	103	5-E08
41 36 099	08B	117	5-E22
41 36 123	08B	103	5-E08
41 36 123	08B	117	5-E22
41 36 131	08B	103	5-E08
41 36 131	08B	117	5-E22
41 36 149	08B	103	5-E08
41 36 149	08B	117	5-E22
41 36 156	08B	103	5-E08
41 36 156	08B	117	5-E22
41 36 164	08B	103	5-E08
41 36 164	08B	117	5-E22
41 36 172	08B	103	5-E08
41 36 172	08B	117	5-E22
41 36 578	08B	103	5-E08
41 36 578	08B	117	5-E22
41 36 719	08B	105	5-E10
41 36 719	08B	119	5-E24
41 36 727	08B	105	5-E10
41 36 727	08B	119	5-E24
41 36 818	08B	105	5-E10
41 36 818	08B	119	5-E24
41 36 826	08B	105	5-E10
41 36 826	08B	119	5-E24
41 36 834	08B	105	5-E10
41 36 834	08B	119	5-E24
41 36 842	08B	105	5-E10
41 36 842	08B	119	5-E24
41 36 859	08B	105	5-E10
41 36 859	08B	121	5-F02
41 36 867	08B	107	5-E12
41 36 867	08B	121	5-F02
41 36 891	08B	105	5-E10
41 36 891	08B	119	5-E24
41 36 909	08B	105	5-E10
41 36 909	08B	119	5-E24
41 36 917	08B	105	5-E10
41 36 917	08B	119	5-E24
41 36 925	08B	105	5-E10
41 36 925	08B	119	5-E24

6-A08 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 36 933	08B	107	5-E12
41 36 933	08B	121	5-F02
41 36 941	08B	107	5-E12
41 36 941	08B	121	5-F02
41 37 139	08B	107	5-E12
41 37 139	08B	121	5-F02
41 37 147	08B	107	5-E12
41 37 147	08B	121	5-F02
41 37 170	08B	107	5-E12
41 37 170	08B	121	5-F02
41 37 188	08B	107	5-E12
41 37 188	08B	121	5-F02
41 37 246	08B	103	5-E08
41 37 246	08B	117	5-E22
41 37 287	08B	099	5-E04
41 37 287	08B	113	5-E18
41 37 287	08B	127	5-F08
41 37 295	08B	099	5-E04
41 37 295	08B	113	5-E18
41 37 295	08B	127	5-F08
41 37 329	08B	095	5-D24
41 37 329	08B	109	5-E14
41 37 329	08B	123	5-F04
41 37 337	08B	095	5-D24
41 37 337	08B	109	5-E14
41 37 337	08B	123	5-F04
41 37 345	08B	095	5-D24
41 37 345	08B	109	5-E14
41 37 345	08B	123	5-F04
41 37 378	08B	101	5-E06
41 37 378	08B	115	5-E20
41 37 378	08B	129	5-F10
41 37 386	08B	101	5-E06
41 37 386	08B	115	5-E20
41 37 386	08B	129	5-F10
41 38 806	08B	093	5-D22
41 38 814	08B	093	5-D22
41 38 848	08B	093	5-D22
41 38 855	08B	093	5-D22
41 39 010	08B	091	5-D20
41 39 028	08B	091	5-D20
41 39 150	08B	089	5-D18
41 39 168	08B	089	5-D18
41 41 206	08B	191	5-H24
41 41 214	08B	189	5-H22
41 41 248	08B	191	5-H24
41 41 313	08B	145	5-G02
41 41 321	08B	145	5-G02
41 41 339	08B	145	5-G02
41 41 347	08B	145	5-G02
41 41 784	08B	183	5-H16
41 42 022	08B	161	5-G18
41 42 022	08B	169	5-H02
41 42 030	08B	161	5-G18
41 42 030	08B	169	5-H02
41 42 824	08B	161	5-G18
41 42 824	08B	169	5-H02
41 42 832	08B	161	5-G18
41 42 832	08B	169	5-H02
41 53 003	08A	025	4-B02
41 53 029	08A	123	4-F04
41 53 037	08A	123	4-F04
41 53 052	08A	035	4-B12
41 53 227	08A	113	4-E18
41 53 250	08A	005	4-A06
41 53 268	08A	005	4-A06
41 53 276	08A	047	4-B24
41 53 284	08A	047	4-B24
41 53 318	08A	113	4-E18
41 53 326	08A	113	4-E18
41 53 334	08A	095	4-D24
41 53 342	08A	095	4-D24
41 53 359	08A	095	4-D24
41 53 367	08A	095	4-D24
41 53 375	08A	095	4-D24
41 53 383	08A	095	4-D24
41 53 417	08A	125	4-F06
41 53 433	08A	047	4-B24
41 53 441	08A	047	4-B24
41 53 755	09	011	5-L12
41 53 805	08A	035	4-B12
41 53 813	09	007	5-L08
41 53 839	08A	027	4-B04
41 53 839	08A	033	4-B10
41 53 953	08A	095	4-D24
41 53 987	08A	123	4-F04
41 53 995	08A	123	4-F04
41 54 001	08A	123	4-F04
41 54 019	08A	123	4-F04
41 54 027	08A	123	4-F04
41 54 035	08A	123	4-F04
41 54 043	08A	123	4-F04
41 54 126	08A	033	4-B10
41 54 134	08A	033	4-B10
41 54 175	08A	097	4-E02
41 54 258	08A	013	4-A14
41 54 373	08A	083	4-D12
41 54 373	08A	113	4-E18
41 54 571	08A	009	4-A10
41 54 597	08A	033	4-B10
41 54 746	08A	047	4-B24
41 54 753	08A	047	4-B24
41 54 852	08A	023	4-A24
41 54 852	08A	027	4-B04
41 54 852	08A	029	4-B06
41 54 852	08A	031	4-B08
41 54 852	08A	033	4-B10
41 54 902	08A	023	4-A24
41 54 928	08A	023	4-A24
41 54 928	08A	027	4-B04
41 54 928	08A	029	4-B06
41 54 928	08A	031	4-B08
41 54 928	08A	033	4-B10
41 54 977	08A	023	4-A24
41 55 016	08B	089	5-D18
41 55 024	08B	089	5-D18
41 55 032	08B	089	5-D18
41 55 040	08B	089	5-D18
41 55 057	08B	091	5-D20
41 55 065	08B	091	5-D20
41 55 073	08B	091	5-D20
41 55 081	08B	091	5-D20
41 55 297	08B	141	5-F22
41 55 305	08B	141	5-F22
41 55 313	08B	141	5-F22
41 55 321	08B	141	5-F22
41 55 461	08B	161	5-H14
41 55 578	08B	139	5-I08
41 55 594	08B	139	5-I08
41 55 628	08B	009	5-A10
41 55 636	08B	007	5-A08
41 55 677	08B	099	5-E04
41 55 685	08B	099	5-E04
41 55 735	08B	099	5-E04
41 55 776	08B	099	5-E04
41 55 883	08A	023	4-A24
41 55 891	08B	023	5-A24
41 56 295	02	075	1-F04
41 56 469	02	065	1-E18
41 56 550	02	065	1-E18
41 56 618	09	011	5-L12
41 57 079	02	117	1-G22
41 57 079	02	123	1-H04
41 57 087	02	123	1-H04
41 57 095	02	123	1-H04
41 57 111	02	117	1-G22
41 57 129	02	117	1-G22
41 57 137	02	117	1-G22
41 57 145	02	117	1-G22
41 57 152	02	117	1-G22
41 57 418	09	009	5-L10
41 57 426	09	009	5-L10
41 57 434	09	009	5-L10
41 57 558	09	009	5-L10
41 57 566	09	009	5-L10
41 57 582	09	009	5-L10
41 57 590	09	009	5-L10
41 57 731	09	009	5-L10
41 58 069	02	055	1-E08
41 59 265	02	061	1-E14
41 59 281	02	119	1-G24
41 60 098	03A	011	2-A12
41 60 123	03A	011	2-A12
41 60 149	03A	011	2-A12
41 60 271	02	117	1-G22
41 60 271	02	123	1-H04
41 60 305	02	061	1-E14
41 60 511	02	065	1-E18
41 60 933	09	009	5-L10
41 60 941	09	009	5-L10
41 60 958	09	009	5-L10
41 60 966	09	009	5-L10
41 60 974	09	009	5-L10
41 60 982	09	009	5-L10
41 60 990	09	009	5-L10
41 61 006	09	009	5-L10
41 61 014	09	009	5-L10
41 61 022	09	009	5-L10
41 61 162	02	061	1-E14
41 61 162	02	133	1-H14
41 61 527	09	009	5-L10
41 61 576	09	009	5-L10
41 61 592	09	009	5-L10
41 61 600	09	009	5-L10
41 61 626	09	009	5-L10
41 61 634	09	009	5-L10
41 61 667	09	009	5-L10
41 61 741	02	061	1-E14
41 61 766	02	065	1-E18
41 63 853	02	061	1-E14
41 66 203	08B	101	5-E06
41 66 211	08B	101	5-E06
41 66 294	08B	101	5-E06
41 66 302	08B	101	5-E06
41 66 385	08B	095	5-D24
41 66 393	08B	095	5-D24
41 66 716	08B	195	5-I04
41 66 724	08B	195	5-I04
41 66 757	08B	039	5-B16
41 66 765	08B	039	5-B16
41 66 773	08B	039	5-B16
41 66 773	08B	059	5-C12
41 66 781	08B	039	5-B16
41 66 781	08B	059	5-C12
41 66 799	08B	039	5-B16
41 66 807	08B	039	5-B16
41 66 807	08B	059	5-C12
41 66 815	08B	041	5-B18
41 66 815	08B	061	5-C14
41 66 823	08B	043	5-B20
41 66 823	08B	063	5-C16
41 66 831	08B	011	5-J12
41 66 849	08B	183	5-H16
41 66 856	08B	013	5-A14
41 66 864	08B	013	5-A14
41 66 872	08B	041	5-B18
41 66 872	08B	061	5-C14
41 66 880	08B	041	5-B18
41 66 880	08B	061	5-C14
41 66 898	08B	043	5-B20
41 66 898	08B	063	5-C16
41 66 906	08B	043	5-B20
41 66 906	08B	063	5-C16
41 67 094	08B	081	5-D10
41 67 094	08B	095	5-D24
41 67 102	08B	081	5-D10
41 67 102	08B	095	5-D24
41 67 193	08B	039	5-B16
41 67 227	08B	091	5-D20
41 67 235	08B	091	5-D20
41 67 243	08B	091	5-D20
41 67 250	08B	091	5-D20
41 67 268	08B	093	5-D22
41 67 276	08B	093	5-D22
41 67 284	08B	093	5-D22
41 67 292	08B	093	5-D22
41 67 367	08B	089	5-D18
41 67 375	08B	089	5-D18
41 67 383	08B	089	5-D18
41 67 391	08B	089	5-D18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A09 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 67 409	08B	039	5-B16
41 67 409	08B	041	5-B18
41 67 417	08B	041	5-B18
41 67 425	08B	041	5-B18
41 67 425	08B	043	5-B20
41 67 466	08B	081	5-D10
41 67 466	08B	095	5-D24
41 67 474	08B	081	5-D10
41 67 474	08B	095	5-D24
41 67 482	08B	081	5-D10
41 67 482	08B	095	5-D24
41 67 490	08B	081	5-D10
41 67 490	08B	095	5-D24
41 67 508	08B	095	5-D24
41 67 516	08B	095	5-D24
41 67 722	08B	039	5-B16
41 67 730	08B	039	5-B16
41 67 730	08B	059	5-C12
41 67 748	08B	041	5-B18
41 67 748	08B	061	5-C14
41 67 763	08B	039	5-B16
41 67 771	08B	039	5-B16
41 67 771	08B	041	5-B18
41 67 771	08B	059	5-C12
41 67 771	08B	061	5-C14
41 67 771	08B	071	5-C24
41 67 771	08B	073	5-D02
41 67 789	08B	041	5-B18
41 67 789	08B	061	5-C14
41 67 785	08B	073	5-D02
41 67 797	08B	043	5-B20
41 67 797	08B	063	5-C16
41 67 805	08B	091	5-D20
41 67 813	08B	091	5-D20
41 67 821	08B	091	5-D20
41 67 839	08B	091	5-D20
41 68 019	08B	043	5-B20
41 68 019	08B	063	5-C16
41 68 092	08B	043	5-B20
41 68 092	08B	063	5-C16
41 68 118	08B	161	5-G18
41 68 142	08B	019	5-A20
41 68 159	08B	043	5-B20
41 68 159	08B	063	5-C16
41 68 159	08B	075	5-D04
41 68 308	08A	101	4-E06
41 68 316	08A	101	4-E06
41 68 324	08A	101	4-E06
41 68 332	08A	101	4-E06
41 68 340	08A	101	4-E06
41 68 357	08A	101	4-E06
41 68 365	08A	101	4-E06
41 68 373	08A	101	4-E06
41 68 381	08A	101	4-E06
41 68 449	08B	109	5-E14
41 68 449	08B	123	5-F04
41 68 506	08B	137	5-F18
41 68 506	08B	139	5-F20
41 68 514	08B	137	5-F18
41 68 514	08B	139	5-F20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 68 563	03A	065	2-C18
41 68 571	08B	109	5-E14
41 68 571	08B	123	5-F04
41 68 589	08B	109	5-E14
41 68 589	08B	123	5-F04
41 68 670	08B	109	5-E14
41 68 670	08B	123	5-F04
41 68 688	08B	109	5-E14
41 68 688	08B	123	5-F04
41 68 696	08B	109	5-E14
41 68 696	08B	123	5-F04
41 68 704	08B	109	5-E14
41 68 704	08B	123	5-F04
41 68 712	08B	109	5-E14
41 68 712	08B	123	5-F04
41 68 720	08B	109	5-E14
41 68 720	08B	123	5-F04
41 68 738	08B	109	5-E14
41 68 738	08B	123	5-F04
41 68 746	08B	109	5-E14
41 68 746	08B	123	5-F04
41 68 837	08B	089	5-D18
41 68 845	08B	089	5-D18
41 68 878	08B	109	5-E14
41 68 878	08B	123	5-F04
41 68 886	08B	109	5-E14
41 68 886	08B	123	5-F04
41 68 936	08B	109	5-E14
41 68 936	08B	123	5-F04
41 68 944	08B	109	5-E14
41 68 944	08B	123	5-F04
41 69 017	08B	109	5-E14
41 69 017	08B	123	5-F04
41 69 025	08B	109	5-E14
41 69 025	08B	123	5-F04
41 69 033	08B	109	5-E14
41 69 033	08B	123	5-F04
41 69 041	08B	109	5-E14
41 69 041	08B	123	5-F04
41 69 181	08B	103	5-E08
41 69 181	08B	117	5-E22
41 69 199	08B	103	5-E08
41 69 199	08B	117	5-E22
41 69 371	08B	103	5-E08
41 69 371	08B	117	5-E22
41 69 389	08B	103	5-E08
41 69 389	08B	117	5-E22
41 69 421	08B	105	5-E10
41 69 421	08B	119	5-E24
41 69 439	08B	105	5-E10
41 69 439	08B	119	5-E24
41 69 504	08B	105	5-E10
41 69 504	08B	119	5-E24
41 69 512	08B	105	5-E10
41 69 512	08B	119	5-E24
41 69 553	08B	103	5-E08
41 69 553	08B	117	5-E22
41 69 561	08B	103	5-E08
41 69 561	08B	117	5-E22
41 69 595	08B	103	5-E08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 69 595	08B	117	5-E22
41 69 603	08B	103	5-E08
41 69 603	08B	117	5-E22
41 69 611	08B	105	5-E10
41 69 611	08B	119	5-E24
41 69 629	08B	105	5-E10
41 69 629	08B	119	5-E24
41 69 637	08B	105	5-E10
41 69 637	08B	119	5-E24
41 69 645	08B	105	5-E10
41 69 645	08B	119	5-E24
41 69 694	08B	093	5-D22
41 69 702	08B	093	5-D22
41 69 751	08B	183	5-H16
41 69 801	08B	009	5-A10
41 69 835	08B	059	5-C12
41 69 843	08B	059	5-C12
41 69 850	08B	059	5-C12
41 69 868	08B	059	5-C12
41 69 876	08B	059	5-C12
41 69 934	08B	059	5-C12
41 69 934	08B	071	5-C24
41 69 942	08B	059	5-C12
41 69 942	08B	071	5-C24
41 69 983	08B	059	5-C12
41 69 991	08B	059	5-C12
41 69 991	08B	071	5-C24
41 70 049	08B	023	5-A24
41 70 072	08B	161	5-G18
41 70 072	08B	169	5-H02
41 70 114	08B	179	5-H12
41 70 130	08B	131	5-F12
41 70 304	08B	097	5-E02
41 70 304	08B	111	5-E16
41 70 304	08B	125	5-F06
41 70 312	08B	097	5-E02
41 70 312	08B	111	5-E16
41 70 312	08B	125	5-F06
41 70 312	08B	205	5-I14
41 70 320	08B	097	5-E02
41 70 320	08B	111	5-E16
41 70 320	08B	125	5-F06
41 70 338	08B	097	5-E02
41 70 338	08B	111	5-E16
41 70 338	08B	125	5-F06
41 70 338	08B	205	5-I14
41 70 353	08B	131	5-F12
41 70 387	08B	183	5-H16
41 72 748	08A	087	4-D16
41 72 763	08A	087	4-D16
41 72 888	03A	133	2-F14
41 72 896	03A	041	2-B18
41 72 896	03A	133	2-F14
41 72 979	08A	087	4-D16
41 72 995	08A	087	4-D16
41 73 233	03A	083	2-D12
41 73 241	03A	083	2-D12
41 73 258	03A	083	2-D12
41 73 266	03A	083	2-D12
41 73 282	03A	083	2-D12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 73 290	03A	083	2-D12
41 73 308	03A	083	2-D12
41 73 316	03A	083	2-D12
41 73 324	03A	083	2-D12
41 73 332	03A	083	2-D12
41 73 340	03A	083	2-D12
41 73 357	03A	083	2-D12
41 73 365	03A	083	2-D12
41 73 373	03A	085	2-D14
41 73 654	03A	051	2-C04
41 73 662	03A	119	2-E24
41 73 688	03A	089	2-D18
41 73 688	03A	099	2-E04
41 73 688	03A	105	2-E10
41 73 803	03B	061	2-I14
41 73 803	03B	089	2-J18
41 73 852	03B	061	2-I14
41 73 852	03B	089	2-J18
41 73 944	03A	123	2-F04
41 73 969	03A	123	2-F04
41 74 959	03A	099	2-E04
41 74 959	03A	107	2-E12
41 75 022	03A	083	2-D12
41 75 022	03A	093	2-D22
41 75 022	03A	103	2-E08
41 75 030	03A	083	2-D12
41 75 030	03A	093	2-D22
41 75 030	03A	103	2-E08
41 75 048	03A	083	2-D12
41 75 048	03A	093	2-D22
41 75 048	03A	103	2-E08
41 75 055	03A	083	2-D12
41 75 055	03A	093	2-D22
41 75 055	03A	103	2-E08
41 75 071	03A	083	2-D12
41 75 071	03A	093	2-D22
41 75 071	03A	103	2-E08
41 75 089	03A	083	2-D12
41 75 089	03A	093	2-D22
41 75 089	03A	103	2-E08
41 75 097	03A	083	2-D12
41 75 097	03A	093	2-D22
41 75 097	03A	103	2-E08
41 75 105	03A	083	2-D12
41 75 105	03A	093	2-D22
41 75 113	03A	083	2-D12
41 75 113	03A	093	2-D22
41 75 113	03A	103	2-E08
41 75 121	03A	083	2-D12
41 75 121	03A	093	2-D22
41 75 121	03A	103	2-E08
41 75 139	03A	083	2-D12
41 75 139	03A	093	2-D22
41 75 139	03A	103	2-E08
41 75 147	03A	083	2-D12
41 75 147	03A	093	2-D22
41 75 147	03A	103	2-E08
41 75 154	03A	083	2-D12
41 75 154	03A	093	2-D22
41 75 154	03A	103	2-E08

6-A10 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 75 162	03A	085	2-D14
41 75 162	03A	093	2-D22
41 75 394	03A	117	2-E22
41 75 758	03A	087	2-D16
41 75 758	03A	097	2-E02
41 75 758	03A	105	2-E10
41 75 766	03A	087	2-D16
41 75 766	03A	097	2-E02
41 75 766	03A	105	2-E10
41 75 774	03A	089	2-D18
41 75 774	03A	097	2-E02
41 75 774	03A	105	2-E10
41 75 782	03A	089	2-D18
41 75 790	03A	087	2-D16
41 75 790	03A	097	2-E02
41 75 790	03A	105	2-E10
41 75 808	03A	087	2-D16
41 75 808	03A	097	2-E02
41 75 808	03A	105	2-E10
41 75 832	03A	087	2-D16
41 75 857	03A	087	2-D16
41 75 865	03A	087	2-D16
41 75 873	03A	087	2-D16
41 75 915	03A	055	2-C08
41 75 923	03A	055	2-C08
41 75 949	03A	091	2-D20
41 75 949	03A	101	2-E06
41 75 949	03A	109	2-E14
41 75 972	03A	055	2-C08
41 75 980	03A	055	2-C08
41 75 998	03A	057	2-C10
41 76 004	03A	057	2-C10
41 76 301	03A	093	2-D22
41 76 301	03A	103	2-E08
41 76 319	03A	097	2-E02
41 76 319	03A	105	2-E10
41 76 335	03A	097	2-E02
41 76 335	03A	105	2-E10
41 76 343	03A	097	2-E02
41 76 343	03A	105	2-E10
41 76 350	03A	097	2-E02
41 76 350	03A	105	2-E10
41 76 582	03B	089	2-J18
41 76 772	03B	083	2-J12
41 79 925	03A	125	2-F06
41 90 823	06	011	3-F12
41 91 813	05	019	3-D20
41 93 587	07	007	3-H08
41 93 983	06	011	3-F12
41 94 007	06	011	3-F12
41 94 015	06	011	3-F12
41 94 064	06	011	3-F12
41 94 445	06	021	3-F22
41 94 577	06	021	3-F22
41 95 350	05	021	3-D22
41 95 822	04	033	3-B10
41 95 954	09	005	5-L06
41 97 380	06	021	3-F22
41 98 883	09	005	5-L06
41 98 891	09	005	5-L06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
41 98 909	09	005	5-L06
41 99 360	07	007	3-H08
41 99 386	07	007	3-H08
41 99 519	06	021	3-F22
41 99 527	06	021	3-F22
41 99 576	06	005	3-F06
41 99 584	06	005	3-F06
41 99 964	05	019	3-D20
42 50 155	03A	041	2-B18
42 50 155	03A	133	2-F14
42 50 163	03A	041	2-B18
42 50 163	03A	133	2-F14
42 51 146	08A	107	4-E12
42 51 153	08A	107	4-E12
42 54 009	08A	087	4-D16
42 54 603	03A	045	2-B22
42 54 645	03A	047	2-B24
42 55 097	08B	165	5-G22
42 55 113	08B	165	5-G22
42 55 139	08B	155	5-G12
42 55 154	08B	155	5-G12
42 55 170	08B	155	5-G12
42 55 196	08B	155	5-G12
42 55 295	08B	141	5-F22
42 55 303	08B	141	5-F22
42 56 319	08B	159	5-G16
42 56 319	08B	169	5-H02
42 56 517	08B	161	5-G18
42 56 517	08B	169	5-H02
42 56 616	08B	041	5-B18
42 56 640	08B	033	5-B10
42 56 640	08B	035	5-B12
42 56 640	08B	039	5-B16
42 56 657	08B	033	5-B10
42 56 657	08B	035	5-B12
42 56 657	08B	039	5-B16
42 56 657	08B	045	5-B22
42 56 657	08B	051	5-C04
42 56 657	08B	059	5-C12
42 56 665	08B	033	5-B10
42 56 665	08B	035	5-B12
42 56 665	08B	047	5-B24
42 56 665	08B	053	5-C06
42 56 673	08B	023	5-B10
42 56 673	08B	037	5-B14
42 56 673	08B	041	5-B18
42 56 673	08B	047	5-B24
42 56 673	08B	055	5-C08
42 56 673	08B	061	5-C14
42 57 788	08B	021	5-A22
42 59 131	08B	043	5-B20
42 59 131	08B	063	5-C16
42 59 131	08B	075	5-D04
42 59 149	08B	043	5-B20
42 59 149	08B	063	5-C16
42 59 149	08B	075	5-D04
42 59 156	08B	043	5-B20
42 59 156	08B	063	5-C16
42 59 156	08B	075	5-D04
42 59 560	08B	141	5-F22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 59 578	08B	141	5-F22
42 59 750	08B	163	5-G20
42 60 709	08B	109	5-E14
42 60 709	08B	123	5-F04
42 60 717	08B	109	5-E14
42 60 717	08B	123	5-F04
42 60 766	08B	137	5-F18
42 60 766	08B	139	5-F20
42 60 790	08B	137	5-F18
42 60 790	08B	139	5-F20
42 60 816	08B	137	5-F18
42 60 816	08B	139	5-F20
42 60 824	08B	137	5-F18
42 60 824	08B	139	5-F20
42 60 915	08B	189	5-H22
42 60 923	08B	189	5-H22
42 60 949	08B	189	5-H22
42 60 980	08B	189	5-H22
42 61 020	08B	143	5-F24
42 61 038	08B	143	5-F24
42 61 046	08B	191	5-H24
42 61 053	08B	191	5-H24
42 61 061	08B	145	5-G02
42 61 079	08B	145	5-G02
42 61 160	08B	145	5-G02
42 61 541	08B	109	5-E14
42 61 541	08B	123	5-F04
42 62 440	08B	113	5-E18
42 62 440	08B	127	5-F08
42 62 457	08B	113	5-E18
42 62 457	08B	127	5-F08
42 62 465	08B	113	5-E18
42 62 465	08B	127	5-F08
42 62 473	08B	113	5-E18
42 62 473	08B	127	5-F08
42 62 705	08B	103	5-E08
42 62 705	08B	117	5-E22
42 62 713	08B	103	5-E08
42 62 713	08B	117	5-E22
42 62 721	08B	103	5-E08
42 62 721	08B	117	5-E22
42 62 739	08B	103	5-E08
42 62 739	08B	117	5-E22
42 62 887	08B	103	5-E08
42 62 887	08B	105	5-E10
42 62 887	08B	111	5-E16
42 62 887	08B	115	5-E20
42 62 887	08B	117	5-E22
42 62 887	08B	119	5-E24
42 62 887	08B	125	5-F06
42 62 887	08B	129	5-F10
42 62 903	08B	115	5-E20
42 62 903	08B	129	5-F10
42 62 911	08B	115	5-E20
42 62 911	08B	129	5-F10
42 62 929	08B	115	5-E20
42 62 929	08B	129	5-F10
42 62 937	08B	115	5-E20
42 62 937	08B	129	5-F10
42 63 141	08B	115	5-E20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 63 141	08B	129	5-F10
42 63 158	08B	115	5-E20
42 63 158	08B	129	5-F10
42 63 208	08B	113	5-E18
42 63 208	08B	127	5-F08
42 63 216	08B	113	5-E18
42 63 216	08B	127	5-F08
42 63 240	08B	105	5-E10
42 63 240	08B	119	5-E24
42 63 257	08B	105	5-E10
42 63 257	08B	119	5-E24
42 63 265	08B	105	5-E10
42 63 265	08B	119	5-E24
42 63 273	08B	105	5-E10
42 63 273	08B	119	5-E24
42 65 369	08B	143	5-F24
42 65 377	08B	143	5-F24
42 65 385	08B	143	5-F24
42 65 393	08B	143	5-F24
42 65 401	08B	145	5-G02
42 65 419	08B	145	5-G02
42 65 427	08B	145	5-G02
42 65 435	08B	145	5-G02
42 65 468	08B	023	5-A24
42 65 617	08B	103	5-E08
42 65 617	08B	117	5-E22
42 65 625	08B	103	5-E08
42 65 625	08B	117	5-E22
42 65 633	08B	105	5-E10
42 65 633	08B	119	5-E24
42 65 641	08B	105	5-E10
42 65 641	08B	119	5-E24
42 65 658	08B	103	5-E08
42 65 658	08B	117	5-E22
42 65 666	08B	103	5-E08
42 65 666	08B	117	5-E22
42 65 674	08B	103	5-E08
42 65 674	08B	117	5-E22
42 65 682	08B	105	5-E10
42 65 682	08B	119	5-E24
42 65 690	08B	103	5-E08
42 65 690	08B	117	5-E22
42 65 708	08B	103	5-E08
42 65 708	08B	117	5-E22
42 65 757	08B	105	5-E10
42 65 757	08B	119	5-E24
42 65 765	08B	105	5-E10
42 65 765	08B	119	5-E24
42 65 906	08B	023	5-A24
42 66 003	09	005	5-L06
42 66 029	08B	105	5-E10
42 66 029	08B	119	5-E24
42 66 037	08B	105	5-E10
42 66 037	08B	119	5-E24
42 66 045	08B	105	5-E10
42 66 045	08B	121	5-F02
42 66 052	08B	105	5-E10
42 66 052	08B	121	5-F02
42 66 060	08B	107	5-E12
42 66 060	08B	121	5-F02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 66 078	08B	107	5-E12
42 66 078	08B	121	5-F02
42 66 086	08B	107	5-E12
42 66 086	08B	121	5-F02
42 66 094	08B	107	5-E12
42 66 094	08B	121	5-F02
42 66 615	08B	023	5-A24
42 69 429	08B	183	5-H16
42 69 692	08B	183	5-H16
42 69 734	08B	183	5-H16
42 69 742	08B	183	5-H16
42 69 932	08B	139	5-F20
42 71 730	08B	187	5-H20
42 71 748	08B	187	5-H20
42 72 704	08B	119	5-E24
42 72 712	08B	119	5-E24
42 72 985	08B	141	5-F22
42 72 993	08B	141	5-F22
42 73 009	08B	141	5-F22
42 73 017	08B	141	5-F22
42 79 287	02	133	1-H14
42 79 493	04	029	3-B06
42 79 634	04	031	3-B08
42 80 897	04	035	3-B12
42 81 242	04	029	3-B06
42 81 531	04	007	3-A08
42 83 198	06	021	3-F22
42 83 198	08C	019	5-J20
42 83 198	08C	033	5-K10
42 84 303	02	131	1-H12
42 84 311	02	131	1-H12
42 84 436	02	131	1-H12
42 88 684	08B	059	5-C12
42 88 684	08B	071	5-C24
42 88 692	08B	059	5-C12
42 88 692	08B	071	5-C24
42 88 718	08B	059	5-C12
42 88 718	08B	071	5-C24
42 88 981	08B	051	5-C04
42 88 999	08B	051	5-C04
42 89 005	08B	051	5-C04
42 89 021	08B	045	5-B22
42 89 021	08B	051	5-C04
42 89 021	08B	059	5-C12
42 89 088	08B	051	5-C04
42 89 096	08B	051	5-C04
42 89 120	08B	051	5-C04
42 92 082	08B	045	5-B22
42 92 090	08B	045	5-B22
42 92 116	08B	045	5-B22
42 92 975	08B	045	5-B22
42 92 983	08B	045	[illegible]
42 95 176	08A	047	[illegible]
43 00 083	02	071	1-E24
43 04 234	08A	055	4-C08
43 04 234	08A	077	4-D06
43 04 234	08A	081	4-D10
43 06 007	08A	019	4-A20
43 08 011	08B	045	5-B22
43 08 045	08B	045	5-B22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 08 052	08B	045	5-B22
43 08 052	08B	051	5-C04
43 08 102	08B	051	5-C04
43 08 110	08B	051	5-C04
43 08 144	08B	051	5-C04
43 08 177	08B	051	5-C04
43 08 201	08B	051	5-C04
43 08 300	08B	059	5-C12
43 08 300	08B	071	5-C24
43 08 326	08B	059	5-C12
43 08 326	08B	071	5-C24
43 08 342	08B	059	5-C12
43 08 342	08B	071	5-C24
43 08 441	08B	059	5-C12
43 08 441	08B	071	5-C24
43 08 888	08B	059	5-C12
43 08 888	08B	071	5-C24
43 08 953	08B	045	5-B22
43 08 953	08B	051	5-C04
43 10 918	06	011	3-F12
43 12 625	08B	173	5-H06
43 13 102	08B	041	5-B18
43 13 102	08B	061	5-C14
43 13 474	08B	039	5-B16
43 13 474	08B	041	5-B18
43 13 474	08B	059	5-C12
43 13 474	08B	061	5-C14
43 13 482	08B	041	5-B18
43 13 482	08B	061	5-C14
43 13 490	08B	043	5-B20
43 13 490	08B	063	5-C16
43 13 508	08B	059	5-C12
43 13 607	08B	161	5-G18
43 13 607	08B	169	5-H02
43 13 706	08B	039	5-B16
43 13 714	06	011	3-F12
43 16 154	08B	045	5-B22
43 16 154	08B	065	5-C18
43 16 162	08B	045	5-B22
43 16 162	08B	065	5-C18
43 16 170	08B	045	5-B22
43 16 170	08B	065	5-C18
43 16 188	08B	047	5-B24
43 16 188	08B	065	5-C18
43 16 196	08B	047	5-B24
43 16 196	08B	065	5-C18
43 16 204	08B	047	5-B24
43 16 204	08B	065	5-C18
43 16 212	08B	047	5-B24
43 16 212	08B	065	5-C18
43 16 220	08B	047	5-B24
43 16 220	08B	065	5-C18
43 16 238	08B	047	5-B24
43 16 238	08B	065	5-C18
43 16 246	08B	049	5-C02
43 16 246	08B	065	5-C18
43 16 253	08B	049	5-C02
43 16 253	08B	065	5-C18
43 16 261	08B	049	5-C02
43 16 261	08B	065	5-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 16 279	08B	045	5-B22
43 16 279	08B	065	5-C18
43 16 287	08B	045	5-B22
43 16 287	08B	065	5-C18
43 16 295	08B	045	5-B22
43 16 295	08B	065	5-C18
43 16 352	08B	053	5-C06
43 16 352	08B	067	5-C20
43 16 360	08B	053	5-C06
43 16 360	08B	067	5-C20
43 16 378	08B	047	5-B24
43 16 378	08B	053	5-C06
43 16 386	08B	053	5-C06
43 16 386	08B	067	5-C20
43 16 394	08B	055	5-C08
43 16 394	08B	069	5-C22
43 16 402	08B	055	5-C08
43 16 402	08B	069	5-C22
43 16 410	08B	047	5-B24
43 16 410	08B	055	5-C08
43 16 410	08B	061	5-C14
43 16 428	08B	055	5-C08
43 16 428	08B	069	5-C22
43 16 436	08B	057	5-C10
43 16 436	08B	069	5-C22
43 16 444	08B	057	5-C10
43 16 444	08B	069	5-C22
43 16 451	08B	049	5-C02
43 16 451	08B	057	5-C10
43 16 451	08B	063	5-C16
43 16 469	08B	057	5-C10
43 16 469	08B	069	5-C22
43 16 477	08B	053	5-C06
43 16 477	08B	067	5-C20
43 16 485	08B	053	5-C06
43 16 485	08B	067	5-C20
43 16 493	08B	045	5-B22
43 16 493	08B	053	5-C06
43 16 501	08B	053	5-C06
43 16 501	08B	067	5-C20
43 16 519	08B	057	5-C10
43 16 519	08B	069	5-C22
43 16 527	08B	057	5-C10
43 16 527	08B	069	5-C22
43 16 543	08B	057	5-C10
43 16 543	08B	069	5-C22
43 16 550	08B	051	5-C04
43 16 550	08B	067	5-C20
43 16 568	08B	051	5-C04
43 16 568	08B	067	5-C20
43 16 576	08B	045	5-B22
43 16 576	08B	051	5-C04
43 16 576	08B	059	5-C12
43 16 584	08B	051	5-C04
43 16 584	08B	067	5-C20
43 16 592	08B	051	5-C04
43 16 592	08B	067	5-C20
43 16 600	08B	051	5-C04
43 16 600	08B	067	5-C20
43 16 626	08B	051	5-C04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 16 626	08B	067	5-C20
43 16 634	08B	053	5-C06
43 16 634	08B	067	5-C20
43 16 642	08B	053	5-C06
43 16 642	08B	067	5-C20
43 16 667	08B	053	5-C06
43 16 667	08B	067	5-C20
43 16 675	08B	055	5-C08
43 16 675	08B	069	5-C22
43 16 683	08B	055	5-C08
43 16 683	08B	069	5-C22
43 16 709	08B	055	5-C08
43 16 709	08B	069	5-C22
43 17 160	08B	053	5-C06
43 17 160	08B	067	5-C20
43 17 178	08B	053	5-C06
43 17 178	08B	067	5-C20
43 17 186	08B	053	5-C06
43 17 186	08B	067	5-C20
43 17 541	08B	047	5-B24
43 17 541	08B	065	5-C18
43 17 558	08B	047	5-B24
43 17 558	08B	065	5-C18
43 17 566	08B	045	5-B22
43 17 566	08B	065	5-C18
43 17 574	08B	045	5-B22
43 17 574	08B	065	5-C18
43 17 582	08B	047	5-B24
43 17 582	08B	065	5-C18
43 17 590	08B	047	5-B24
43 17 590	08B	065	5-C18
43 17 608	08B	049	5-C02
43 17 608	08B	065	5-C18
43 17 616	08B	049	5-C02
43 17 616	08B	065	5-C18
43 17 624	08B	045	5-B22
43 17 624	08B	065	5-C18
43 17 632	08B	045	5-B22
43 17 632	08B	065	5-C18
43 17 640	08B	047	5-B24
43 17 640	08B	065	5-C18
43 17 681	08B	045	5-B22
43 17 681	08B	065	5-C18
43 17 699	08B	047	5-B24
43 17 699	08B	065	5-C18
43 17 707	08B	049	5-C02
43 17 707	08B	065	5-C18
43 17 715	08B	045	5-B22
43 17 715	08B	065	5-C18
43 17 731	08B	045	5-B22
43 17 731	08B	065	5-C18
43 17 749	08B	045	5-B22
43 17 749	08B	053	5-C06
43 17 749	08B	065	5-C18
43 17 749	08B	067	5-C20
43 17 764	08B	047	5-B24
43 17 764	08B	065	5-C18
43 17 772	08B	047	5-B24
43 17 772	08B	053	5-C06
43 17 772	08B	065	5-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 17 772	08B	067	5-C20
43 17 798	08B	047	5-B24
43 17 798	08B	065	5-C18
43 17 806	08B	047	5-B24
43 17 806	08B	055	5-C08
43 17 806	08B	065	5-C18
43 17 806	08B	069	5-C22
43 17 822	08B	049	5-C02
43 17 822	08B	065	5-C18
43 17 830	08B	049	5-C02
43 17 830	08B	057	5-C10
43 17 830	08B	065	5-C18
43 17 830	08B	069	5-C22
43 17 855	08B	045	5-B22
43 17 855	08B	065	5-C18
43 17 863	08B	045	5-B22
43 17 863	08B	051	5-C04
43 17 863	08B	065	5-C18
43 17 863	08B	067	5-C20
43 17 921	08B	053	5-C06
43 17 921	08B	067	5-C20
43 17 947	08B	051	5-C04
43 17 947	08B	067	5-C20
43 17 954	08B	051	5-C04
43 17 954	08B	067	5-C20
43 17 962	08B	053	5-C06
43 17 962	08B	067	5-C20
43 17 970	08B	053	5-C06
43 17 970	08B	067	5-C20
43 17 988	08B	057	5-C10
43 17 988	08B	069	5-C22
43 17 996	08B	057	5-C10
43 17 996	08B	069	5-C22
43 18 200	08B	005	5-A06
43 18 747	09	013	5-L14
43 20 065	08A	089	4-D18
43 20 073	08A	089	4-D18
43 20 081	08A	089	4-D18
43 20 099	08A	089	4-D18
43 20 578	09	007	5-L08
43 40 709	08A	089	4-D18
43 40 717	08A	089	4-D18
43 40 725	08A	089	4-D18
43 40 733	08A	089	4-D18
43 41 194	03A	035	2-B12
43 44 321	09	007	5-L08
43 50 302	03A	091	2-D20
43 50 302	03A	101	2-E06
43 50 302	03A	109	2-E14
43 50 393	03A	099	2-E04
43 50 393	03A	105	2-E10
43 50 427	03B	067	2-I20
43 50 427	08C	009	5-J10
43 50 443	03A	055	2-C08
43 53 801	03A	097	2-E02
43 53 801	03A	105	2-E10
43 53 819	03A	097	2-E02
43 53 819	03A	105	2-E10
43 54 833	03B	083	2-J12
43 68 163	08B	155	5-G12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 68 171	08B	155	5-G12
43 68 189	08B	155	5-G12
43 68 197	08B	155	5-G12
43 68 205	08B	155	5-G12
43 68 213	08B	155	5-G12
43 68 221	08B	155	5-G12
43 68 239	08B	155	5-G12
43 68 247	08B	155	5-G12
43 68 254	08B	155	5-G12
43 68 262	08B	155	5-G12
43 68 270	08B	155	5-G12
43 68 288	08B	155	5-G12
43 68 296	08B	155	5-G12
43 68 304	08B	155	5-G12
43 68 312	08B	155	5-G12
43 68 320	08B	155	5-G12
43 68 338	08B	155	5-G12
43 68 346	08B	155	5-G12
43 68 353	08B	155	5-G12
43 68 361	08B	155	5-G12
43 68 379	08B	155	5-G12
43 68 387	08B	155	5-G12
43 68 395	08B	155	5-G12
43 68 403	08B	165	5-G22
43 68 411	08B	165	5-G22
43 68 429	08B	165	5-G22
43 68 437	08B	165	5-G22
43 68 445	08B	165	5-G22
43 68 452	08B	165	5-G22
43 68 460	08B	165	5-G22
43 68 478	08B	165	5-G22
43 68 486	08B	165	5-G22
43 68 494	08B	165	5-G22
43 68 502	08B	165	5-G22
43 68 510	08B	165	5-G22
43 68 627	06	011	3-F12
43 74 203	02	061	1-E14
43 74 211	02	061	1-E14
43 74 252	09	009	5-L10
43 74 393	09	009	5-L10
43 74 419	09	009	5-L10
43 74 427	09	009	5-L10
43 74 435	09	009	5-L10
43 74 443	09	011	5-L12
43 82 362	08C	009	5-J10
43 82 396	08C	021	5-J22
43 82 396	08C	025	5-K02
43 82 396	08C	027	5-K04
43 85 076	04	007	3-A08
43 85 084	04	007	3-A08
43 91 058	02	165	1-I22
43 91 058	02	167	1-I24
43 91 157	02	147	1-I04
43 92 304	09	007	5-L08
43 92 312	09	013	5-L14
43 92 700	09	009	5-L10
43 92 718	09	009	5-L10
43 93 484	02	065	1-E18
43 93 674	09	009	5-L10
43 93 682	09	009	5-L10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 93 740	02	111	1-G16
43 93 740	02	165	1-I22
43 93 757	02	111	1-G16
43 93 757	02	165	1-I22
43 93 765	02	115	1-G20
43 93 765	02	167	1-I24
43 93 781	02	121	1-H02
43 93 781	02	165	1-I22
43 93 971	02	151	1-I08
44 07 276	08A	023	4-A24
44 07 284	08A	023	4-A24
44 07 300	08A	023	4-A24
44 07 318	08A	023	4-A24
44 07 375	08A	023	4-A24
44 13 001	08B	051	5-C04
44 13 001	08B	067	5-C20
44 13 027	08B	053	5-C06
44 13 027	08B	067	5-C20
44 13 043	08B	055	5-C08
44 13 043	08B	069	5-C22
44 13 050	08B	055	5-C08
44 13 050	08B	069	5-C22
44 13 068	08B	051	5-C04
44 13 068	08B	067	5-C20
44 13 084	08B	053	5-C06
44 13 084	08B	067	5-C20
44 13 092	08B	053	5-C06
44 13 092	08B	067	5-C20
44 13 100	08B	055	5-C08
44 13 100	08B	069	5-C22
44 13 126	08B	057	5-C10
44 13 126	08B	069	5-C22
44 13 142	08B	053	5-C06
44 13 142	08B	067	5-C20
44 13 167	08B	055	5-C08
44 13 167	08B	069	5-C22
44 13 183	08B	057	5-C10
44 13 183	08B	069	5-C22
44 13 209	08B	053	5-C06
44 13 209	08B	067	5-C20
44 13 225	08B	055	5-C08
44 13 225	08B	069	5-C22
44 13 241	08B	053	5-C06
44 13 241	08B	067	5-C20
44 13 258	08B	045	5-B22
44 13 258	08B	053	5-C06
44 13 258	08B	065	5-C18
44 13 258	08B	067	5-C20
44 13 266	08B	057	5-C10
44 13 266	08B	069	5-C22
44 13 274	08B	047	5-B24
44 13 274	08B	053	5-C06
44 13 274	08B	065	5-C18
44 13 274	08B	067	5-C20
44 13 282	08B	053	5-C06
44 13 282	08B	067	5-C20
44 13 290	08B	047	5-B24
44 13 290	08B	055	5-C08
44 13 290	08B	065	5-C18
44 13 290	08B	069	5-C22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 13 308	08B	051	5-C04
44 13 308	08B	067	5-C20
44 13 316	08B	049	5-C02
44 13 316	08B	057	5-C10
44 13 316	08B	065	5-C18
44 13 316	08B	069	5-C22
44 13 464	08B	045	5-B22
44 13 464	08B	051	5-C04
44 13 464	08B	065	5-C18
44 13 464	08B	067	5-C20
44 13 472	08B	061	5-C14
44 13 472	08B	073	5-D02
44 13 480	08B	061	5-C14
44 13 480	08B	075	5-D04
44 13 498	08B	063	5-C16
44 13 498	08B	075	5-D04
44 13 506	08B	059	5-C12
44 13 506	08B	071	5-C24
44 13 514	08B	059	5-C12
44 13 514	08B	071	5-C24
44 13 522	08B	059	5-C12
44 13 522	08B	071	5-C24
44 13 530	08B	059	5-C12
44 13 530	08B	071	5-C24
44 13 548	08B	059	5-C12
44 13 548	08B	071	5-C24
44 13 563	08B	061	5-C14
44 13 563	08B	075	5-D04
44 13 571	08B	061	5-C14
44 13 571	08B	075	5-D04
44 13 589	08B	061	5-C14
44 13 589	08B	075	5-D04
44 13 613	08B	063	5-C16
44 13 613	08B	075	5-D04
44 13 621	08B	063	5-C16
44 13 621	08B	075	5-D04
44 13 639	08B	063	5-C16
44 13 639	08B	075	5-D04
44 13 662	08B	059	5-C12
44 13 662	08B	071	5-C24
44 13 670	08B	059	5-C12
44 13 670	08B	071	5-C24
44 13 688	08B	059	5-C12
44 13 688	08B	071	5-C24
44 13 712	08B	061	5-C14
44 13 712	08B	073	5-D02
44 13 720	08B	061	5-C14
44 13 720	08B	073	5-D02
44 13 738	08B	061	5-C14
44 13 738	08B	075	5-D04
44 13 746	08B	061	5-C14
44 13 746	08B	075	5-D04
44 13 753	08B	063	5-C16
44 13 753	08B	075	5-D04
44 13 761	08B	063	5-C16
44 13 761	08B	075	5-D04
44 13 779	08B	059	5-C12
44 13 779	08B	071	5-C24
44 13 787	08B	059	5-C12
44 13 787	08B	071	5-C24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 16 087	06	011	3-F12
44 16 525	08B	159	5-G16
44 16 525	08B	169	5-H02
44 16 624	08B	075	5-D04
44 16 632	08B	075	5-D04
44 16 657	08B	075	5-D04
44 16 665	08B	075	5-D04
44 16 673	08B	075	5-D04
44 16 848	08B	071	5-C24
44 16 855	08B	071	5-C24
44 16 871	08B	071	5-C24
44 16 889	08B	071	5-C24
44 16 897	08B	071	5-C24
44 16 913	08B	071	5-C24
44 16 947	08B	071	5-C24
44 16 954	08B	071	5-C24
44 16 962	08B	071	5-C24
44 16 [illegible]	08B	071	5-C24
44 16 988	08B	071	5-C24
44 16 996	08B	071	5-C24
44 17 069	08B	071	5-C24
44 17 077	08B	071	5-C24
44 24 057	06	013	3-F14
44 24 057	06	015	3-F16
44 24 172	03A	069	2-C22
44 24 644	07	007	3-H08
44 24 651	07	007	3-H08
44 25 229	05	009	3-D10
44 25 450	07	007	3-H08
44 25 534	04	033	3-B10
44 25 674	09	007	5-L08
44 25 690	05	011	3-D12
44 25 690	05	025	3-E02
44 25 716	05	025	3-E02
44 28 330	03A	059	2-C12
44 28 348	03A	055	2-C08
44 28 355	03A	059	2-C12
44 32 944	09	011	5-L12
44 33 827	03A	055	2-C08
44 37 331	08B	005	5-A06
44 39 014	03A	051	2-C04
44 40 038	02	165	1-I22
44 40 046	02	117	1-G22
44 40 046	02	167	1-I24
44 40 061	02	113	1-G18
44 40 061	02	165	1-I22
44 40 269	09	013	5-L14
44 41 440	09	009	5-L10
44 41 457	09	009	5-L10
44 41 465	09	009	5-L10
44 41 473	09	009	5-L10
44 41 556	09	009	5-L10
44 41 564	09	009	5-L10
44 41 572	09	011	5-L12
44 48 940	09	007	5-L08
44 74 029	08B	065	5-C18
44 74 029	08B	067	5-C20
44 74 029	08B	071	5-C24
44 74 037	08B	065	5-C18
44 74 037	08B	069	5-C22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 74 037	08B	075	5-D04
44 74 045	08B	065	5-C18
44 74 045	08B	069	5-C22
44 74 045	08B	075	5-D04
44 74 052	08B	065	5-C18
44 74 052	08B	067	5-C20
44 74 060	08B	065	5-C18
44 74 060	08B	067	5-C20
44 74 078	08B	071	5-C24
44 74 110	08B	071	5-C24
44 74 136	08B	071	5-C24
44 74 144	08B	071	5-C24
44 74 144	08B	073	5-D02
44 74 144	08B	075	5-D04
44 74 151	08B	075	5-D04
44 74 169	08B	073	5-D02
44 74 177	08B	073	5-D02
44 74 771	08B	073	5-D02
44 74 789	08B	073	5-D02
44 74 797	08B	073	5-D02
44 74 821	08B	073	5-D02
44 74 839	08B	073	5-D02
44 81 339	09	007	5-L08
44 85 553	08B	139	5-F20
44 85 561	08B	139	5-F20
44 85 579	08B	139	5-F20
44 85 587	08B	139	5-F20
44 85 678	08B	139	5-F20
44 85 686	08B	139	5-F20
44 86 965	08B	139	5-F20
44 86 973	08B	139	5-F20
44 86 981	08B	139	5-F20
44 86 999	08B	139	5-F20
44 87 005	08B	139	5-F20
44 87 013	08B	139	5-F20
45 21 209	03A	041	2-B18
45 21 340	08A	047	4-B24
69 10 582	08A	009	4-A10
69 10 608	08A	009	4-A10
69 10 806	08A	039	4-B16
69 10 814	08A	039	4-B16
69 10 830	08A	105	4-E10
69 10 848	08A	105	4-E10
69 10 913	08A	037	4-B14
69 10 921	08A	037	4-B14
69 11 176	08A	105	4-E10
69 11 184	08A	105	4-E10
69 11 275	08A	083	4-D12
69 11 283	08A	083	4-D12
69 11 291	08A	083	4-D12
69 11 309	08A	083	4-D12
69 11 317	08A	109	4-E14
69 11 317	08A	117	4-E22
69 11 325	08A	109	4-E14
69 11 325	08A	117	4-E22
69 11 614	08A	113	4-E18
69 11 614	08A	121	4-F02
69 11 614	08A	123	4-F04
69 11 614	08A	127	4-F08
69 11 614	08A	129	4-F10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 11 614	08A	143	4-F24
69 11 671	08A	127	4-F08
69 11 689	08A	127	4-F08
69 11 697	08A	127	4-F08
69 11 705	08A	127	4-F08
69 11 804	08A	105	4-E10
69 11 804	08A	131	4-F12
69 11 804	08A	133	4-F14
69 11 820	08A	121	4-F02
69 11 820	08A	127	4-F08
69 11 895	08A	087	4-D16
69 12 299	08A	037	4-B14
69 12 323	08A	005	4-A06
69 12 331	08A	005	4-A06
69 12 364	08A	037	4-B14
69 12 380	08A	037	4-B14
69 12 430	08A	105	4-E10
69 12 448	08A	105	4-E10
69 12 539	08A	105	4-E10
69 12 547	08A	105	4-E10
69 12 570	08A	061	4-C14
69 12 570	08A	063	4-C16
69 12 570	08A	065	4-C18
69 12 588	08A	061	4-C14
69 12 588	08A	063	4-C16
69 12 588	08A	065	4-C18
69 12 596	08A	061	4-C14
69 12 596	08A	063	4-C16
69 12 596	08A	065	4-C18
69 12 604	08A	061	4-C14
69 12 604	08A	063	4-C16
69 12 604	08A	065	4-C18
69 13 784	08A	061	4-C14
69 13 784	08A	063	4-C16
69 13 784	08A	065	4-C18
69 14 139	08A	005	4-A06
69 14 352	08A	105	4-E10
69 14 576	08A	153	4-G10
69 14 584	08A	153	4-G10
69 14 618	08A	131	4-F12
69 14 709	08A	095	4-D24
69 14 709	08A	105	4-E10
69 14 717	08A	095	4-D24
69 14 725	08A	095	4-D24
69 14 808	08A	133	4-F14
69 14 816	08A	133	4-F14
69 14 915	08A	131	4-F12
69 14 923	08A	131	4-F12
69 14 931	08A	133	4-F14
69 15 078	08A	105	4-E10
69 15 086	08A	105	4-E10
69 15 094	08A	105	4-E10
69 15 201	08A	105	4-E10
69 15 292	08A	005	4-A06
69 15 300	08A	005	4-A06
69 15 474	08A	055	4-C08
69 15 482	08A	055	4-C08
69 15 706	08A	087	4-D16
69 15 [illegible]47	08A	087	4-D16
69 16 050	08A	079	4-D08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 16 050	08A	153	4-G10
69 16 977	08A	105	4-E10
69 17 116	08A	041	4-B18
69 17 124	08A	041	4-B18
69 17 223	08A	015	4-A16
69 17 306	08A	015	4-A16
69 17 306	08A	019	4-A20
69 17 322	08A	015	4-A16
69 17 330	08A	015	4-A16
69 17 348	08A	015	4-A16
69 17 348	08A	019	4-A20
69 17 355	08A	015	4-A16
69 17 355	08A	019	4-A20
69 17 389	08A	019	4-A20
69 17 751	08A	087	4-D16
69 17 777	08A	087	4-D16
69 17 785	08A	129	4-F10
69 17 793	08A	129	4-F10
69 17 934	08A	005	4-A06
69 18 130	08A	127	4-F08
69 18 148	08A	109	4-E14
69 18 155	08A	109	4-E14
69 18 163	08A	109	4-E14
69 18 171	08A	109	4-E14
69 18 189	08A	109	4-E14
69 18 510	08A	089	4-D18
69 18 528	08A	089	4-D18
69 18 536	08A	089	4-D18
69 18 544	08A	089	4-D18
69 19 013	08A	081	4-D10
69 19 054	08A	119	4-E24
69 19 054	08A	149	4-G06
69 19 195	08A	105	4-E10
69 19 237	08A	111	4-E16
69 19 245	08A	111	4-E16
69 19 336	08A	111	4-E16
69 19 344	08A	111	4-E16
69 19 492	08A	009	4-A10
69 19 542	08A	105	4-E10
69 19 849	08A	105	4-E10
69 19 906	08A	133	4-F14
69 19 948	08A	131	4-F12
69 21 142	08A	131	4-F12
69 21 159	08A	093	4-D22
69 21 167	08A	093	4-D22
69 21 415	08A	105	4-E10
69 21 530	08A	059	4-C12
69 21 548	08A	059	4-C12
69 21 555	08A	059	4-C12
69 21 563	08A	059	4-C12
69 24 559	08A	113	4-E18
69 25 325	08A	127	4-F08
69 25 333	08A	127	4-F08
69 25 515	08A	005	4-A06
69 25 531	08A	037	4-B14
69 25 549	08A	037	4-B14
69 25 572	08A	037	4-B14
69 25 580	08A	037	4-B14
69 25 739	08A	065	4-C18
69 25 747	08A	065	4-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 25 754	08A	061	4-C14
69 25 762	08A	061	4-C14
69 25 853	08A	067	4-C20
69 25 861	08A	067	4-C20
69 26 307	08A	013	4-A14
69 26 372	08A	051	4-C04
69 26 380	08A	051	4-C04
69 26 406	08A	057	4-C10
69 26 414	08A	057	4-C10
69 26 455	08A	127	4-F08
69 26 463	08A	127	4-F08
69 26 471	08A	127	4-F08
69 26 489	08A	127	4-F08
69 26 497	08A	121	4-F02
69 26 505	08A	121	4-F02
69 26 638	08A	127	4-F08
69 26 646	08A	127	4-F08
69 26 653	08A	127	4-F08
69 26 661	08A	127	4-F08
69 26 679	08A	127	4-F08
69 26 687	08A	127	4-F08
69 26 695	08A	127	4-F08
69 26 703	08A	127	4-F08
69 26 711	08A	121	4-F02
69 26 729	08A	121	4-F02
69 26 737	08A	121	4-F02
69 26 745	08A	121	4-F02
69 26 778	08A	057	4-C10
69 26 786	08A	057	4-C10
69 26 810	08A	005	4-A06
69 26 828	08A	005	4-A06
69 26 919	08A	005	4-A06
69 26 927	08A	005	4-A06
69 26 950	08A	055	4-C08
69 27 032	08A	077	4-D06
69 27 065	08A	045	4-B22
69 27 065	08A	049	4-C02
69 27 198	08A	061	4-C14
69 27 198	08A	065	4-C18
69 27 222	08A	061	4-C14
69 27 222	08A	065	4-C18
69 27 289	08A	009	4-A10
69 27 339	08A	077	4-D06
69 27 370	08A	013	4-A14
69 27 388	08A	013	4-A14
69 27 677	08A	077	4-D06
69 27 784	08A	133	4-F14
69 27 792	08A	133	4-F14
69 28 204	08A	133	4-F14
69 28 212	08A	133	4-F14
69 28 220	08A	105	4-E10
69 28 238	08A	105	4-E10
69 28 303	08A	105	4-E10
69 28 337	08A	005	4-A06
69 28 360	08A	005	4-A06
69 28 378	08A	005	4-A06
69 28 592	08A	131	4-F12
69 28 592	08A	133	4-F14
69 28 998	08A	009	4-A10
69 29 483	08A	095	4-D24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 29 756	08A	063	4-C16
69 29 764	08A	063	4-C16
69 30 341	08A	007	4-A08
69 30 572	08A	053	4-C06
69 32 875	08A	113	4-E18
69 32 883	08A	113	4-E18
69 33 121	08A	111	4-E16
69 33 139	08A	111	4-E16
69 33 154	08A	111	4-E16
69 33 261	08A	111	4-E16
69 33 279	08A	111	4-E16
69 33 337	08A	111	4-E16
69 33 352	08A	111	4-E16
69 33 501	08A	051	4-C04
69 33 519	08A	051	4-C04
69 33 527	08A	013	4-A14
69 33 535	08A	037	4-B14
69 33 543	08A	037	4-B14
69 33 568	08A	047	4-B24
69 33 576	08A	047	4-B24
69 33 584	08A	047	4-B24
69 33 592	08A	047	4-B24
69 33 600	08A	047	4-B24
69 33 618	08A	047	4-B24
69 33 626	08A	011	4-A12
69 33 634	08A	037	4-B14
69 33 642	08A	037	4-B14
69 33 659	08A	005	4-A06
69 33 667	08A	005	4-A06
69 33 683	08A	047	4-B24
69 33 691	08A	047	4-B24
69 33 931	08A	111	4-E16
69 33 972	08A	111	4-E16
69 34 079	08A	111	4-E16
69 34 152	08A	111	4-E16
69 34 285	08A	023	4-A24
69 34 343	08A	111	4-E16
69 34 350	08A	111	4-E16
69 34 517	08A	069	4-C22
69 34 525	08A	069	4-C22
69 34 608	08A	111	4-E16
69 34 871	08A	113	4-E18
69 34 889	08A	113	4-E18
69 35 050	08A	111	4-E16
69 35 050	08A	143	4-F24
69 35 092	08A	111	4-E16
69 35 142	08A	123	4-F04
69 35 233	08A	111	4-E16
69 35 316	08A	037	4-B14
69 35 563	08A	113	4-E18
69 35 712	08A	023	4-A24
69 35 852	08A	113	4-E18
69 35 936	08A	113	4-E18
69 36 306	03A	035	2-B12
69 36 314	03A	035	2-B12
69 36 314	08A	095	4-D24
69 36 330	08A	113	4-E18
69 36 348	08A	113	4-E18
69 36 355	08A	113	4-E18
69 36 363	08A	113	4-E18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 36 371	08A	113	4-E18
69 36 389	08A	113	4-E18
69 36 397	08A	063	4-C16
69 36 397	08A	113	4-E18
69 37 148	08A	105	4-E10
69 37 148	08A	131	4-F12
69 37 155	08A	105	4-E10
69 37 155	08A	131	4-F12
69 37 163	08A	131	4-F12
69 37 254	08A	057	4-C10
69 37 288	08A	133	4-F14
69 37 296	08A	133	4-F14
69 37 304	08A	133	4-F14
69 37 312	08A	133	4-F14
69 37 346	08A	105	4-E10
69 37 346	08A	133	4-F14
69 37 353	08A	105	4-E10
69 37 353	08A	133	4-F14
69 37 361	08B	181	5-H14
69 37 429	08A	015	4-A16
69 37 429	08A	019	4-A20
69 37 452	08A	015	4-A16
69 37 460	08A	111	4-E16
69 37 460	08A	113	4-E18
69 37 478	08A	119	4-E24
69 37 478	08A	145	4-G02
69 37 478	08A	149	4-G06
69 37 486	08A	119	4-E24
69 37 486	08A	145	4-G02
69 37 486	08A	149	4-G06
69 37 494	08A	093	4-D22
69 37 585	08A	119	4-E24
69 37 585	08A	145	4-G02
69 37 585	08A	149	4-G06
69 37 593	08A	119	4-E24
69 37 593	08A	145	4-G02
69 37 593	08A	149	4-G06
69 37 643	08A	105	4-E10
69 37 650	08A	105	4-E10
69 37 759	08A	017	4-A18
69 37 973	08A	109	4-E14
69 37 973	08A	117	4-E22
69 37 981	08A	109	4-E14
69 37 981	08A	117	4-E22
69 37 999	08A	081	4-D10
69 38 013	08A	107	4-E12
69 38 013	08A	115	4-E20
69 38 096	08A	107	4-E12
69 38 096	08A	111	4-E16
69 38 096	08A	115	4-E20
69 38 112	08A	087	4-D16
69 38 120	08A	087	4-D16
69 38 153	08A	087	4-D16
69 38 167	08A	107	4-E12
69 38 167	08A	115	4-E20
69 38 195	08A	109	4-E14
69 38 195	08A	117	4-E22
69 38 328	08A	131	4-F12
69 38 369	08A	095	4-D24
69 38 393	03A	069	2-C22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 38 435	08A	105	4-E10
69 38 443	08A	105	4-E10
69 38 625	08A	105	4-E10
69 38 633	08A	105	4-E10
69 38 716	08A	011	4-A12
69 38 740	08A	133	4-F14
69 38 757	08A	133	4-F14
69 38 765	08A	133	4-F14
69 38 773	08A	133	4-F14
69 38 799	08A	095	4-D24
69 38 823	06	005	3-F06
69 38 856	06	005	3-F06
69 39 144	08A	095	4-D24
69 39 144	08A	105	4-E10
69 39 375	08A	119	4-E24
69 39 375	08A	149	4-G06
69 39 383	08A	119	4-E24
69 39 383	08A	149	4-G06
69 40 084	08A	133	4-F14
69 40 100	08A	133	4-F14
69 40 175	08A	105	4-E10
69 40 175	08A	131	4-F12
69 40 175	08A	133	4-F14
69 40 183	08A	105	4-E10
69 40 183	08A	131	4-F12
69 40 183	08A	133	4-F14
69 40 233	08A	133	4-F14
69 40 340	08A	105	4-E10
69 40 357	08A	131	4-F12
69 40 365	08A	133	4-F14
69 40 373	08A	105	4-E10
69 40 381	08A	133	4-F14
69 40 522	09	011	5-L12
69 40 530	09	011	5-L12
69 40 555	09	011	5-L12
69 40 704	08A	083	4-D12
69 40 712	08A	083	4-D12
69 41 264	08A	087	4-D16
69 41 272	08A	087	4-D16
69 41 280	08A	081	4-D10
69 41 298	08A	079	4-D08
69 41 306	08A	081	4-D10
69 41 306	08A	155	4-G12
69 41 306	08A	157	4-G14
69 41 314	08A	079	4-D08
69 41 330	08A	077	4-D06
69 41 345	08A	079	4-D08
69 41 660	08A	079	4-D08
69 41 678	08A	089	4-D18
69 41 678	08A	091	4-D20
69 41 777	08A	093	4-D22
69 41 785	08A	093	4-D22
69 41 793	08A	093	4-D22
69 41 819	08A	079	4-D08
69 41 892	08A	107	4-E12
69 41 918	08A	107	4-E12
69 41 926	08A	107	4-E12
69 41 934	08A	107	4-E12
69 41 942	08A	107	4-E12
69 41 959	08A	107	4-E12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A15 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 41 967	08A	107	4-E12
69 42 023	08A	037	4-B14
69 42 031	08A	037	4-B14
69 42 296	08A	039	4-B16
69 42 304	08A	039	4-B16
69 42 312	08A	039	4-B16
69 42 320	08A	039	4-B16
69 42 528	08A	119	4-E24
69 42 528	08A	149	4-G06
69 42 528	08A	151	4-G08
69 42 536	08A	119	4-E24
69 42 536	08A	149	4-G06
69 42 536	08A	151	4-G08
69 42 551	08A	105	4-E10
69 42 569	08A	105	4-E10
69 42 619	09	013	5-L14
69 42 627	08A	131	4-F12
69 42 627	08A	133	4-F14
69 42 825	08A	131	4-F12
69 42 833	08A	131	4-F12
69 42 841	08A	131	4-F12
69 42 858	08A	131	4-F12
69 42 866	08A	133	4-F14
69 42 874	08A	133	4-F14
69 42 882	08A	133	4-F14
69 42 890	08A	133	4-F14
69 42 940	08A	131	4-F12
69 42 957	08A	131	4-F12
69 43 690	08A	133	4-F14
69 43 740	08A	007	4-A08
69 43 880	08A	143	4-F24
69 43 898	08A	143	4-F24
69 43 906	08A	131	4-F12
69 43 914	08A	133	4-F14
69 43 948	08A	133	4-F14
69 43 [illegible]9	08A	077	4-D06
69 43 9[illegible]9	08A	153	4-G10
69 44 110	09	007	5-L08
69 44 268	08A	131	4-F12
69 44 268	08A	133	4-F14
69 44 28[illegible]	08A	011	4-A12
69 44 358	08A	081	4-D10
69 44 367	08A	045	4-B22
69 44 375	08A	045	4-B22
69 44 383	08A	045	4-B22
69 44 391	08A	045	4-B22
69 45 075	08A	009	4-A10
69 45 174	08A	005	4-A06
69 45 422	08A	005	4-A06
69 45 455	08A	009	4-A10
69 45 463	08A	093	4-D22
69 45 521	08A	055	4-C08
69 45 570	08A	051	4-C04
69 45 588	08A	051	4-C04
69 47 436	08A	093	4-D22
69 47 444	08A	093	4-D22
69 47 451	08A	093	4-D22
69 47 469	08A	093	4-D22
69 47 857	08A	089	4-D18
69 48 780	08A	089	4-D18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 48 798	08A	089	4-D18
69 49 093	08A	073	4-D02
69 49 101	08A	073	4-D02
69 49 119	08A	073	4-D02
69 49 127	08A	073	4-D02
69 49 135	08A	069	4-C22
69 49 143	08A	069	4-C22
69 49 150	08A	069	4-C22
69 49 168	08A	069	4-C22
69 50 026	08A	027	4-B04
69 50 034	08A	027	4-B04
69 50 042	08A	029	4-B06
69 50 125	08A	027	4-B04
69 50 133	08A	027	4-B04
69 50 141	08A	029	4-B06
69 50 158	08A	031	4-B08
69 50 158	08A	033	4-B10
69 50 166	08A	029	4-B06
69 50 208	08A	123	4-F04
69 50 216	08A	123	4-F04
69 50 315	08A	111	4-E16
69 50 323	08A	111	4-E16
69 50 380	08A	111	4-E16
69 50 398	08A	111	4-E16
69 50 489	08A	027	4-B04
69 50 497	08A	027	4-B04
69 50 505	08A	031	4-B08
69 50 513	08A	031	4-B08
69 50 521	08A	029	4-B06
69 50 539	08A	031	4-B08
69 50 539	08A	033	4-B10
69 50 547	08A	031	4-B08
69 50 547	08A	033	4-B10
69 50 570	08A	023	4-A24
69 50 588	08A	031	4-B08
69 50 596	08A	031	4-B08
69 50 596	08A	033	4-B10
69 50 604	08A	029	4-B06
69 50 612	08A	031	4-B08
69 50 612	08A	033	4-B10
69 50 620	08A	031	4-B08
69 50 620	08A	033	4-B10
69 50 638	08A	027	4-B04
69 50 638	08A	033	4-B10
69 50 646	08A	027	4-B04
69 50 646	08A	033	4-B10
69 50 653	08A	029	4-B06
69 50 661	08A	029	4-B06
69 50 679	08A	027	4-B04
69 50 679	08A	033	4-B10
69 51 016	08A	023	4-A24
69 51 040	08A	023	4-A24
69 51 065	08A	023	4-A24
69 51 081	08A	023	4-A24
69 51 099	08A	023	4-A24
69 51 271	08A	029	4-B06
69 51 305	08A	027	4-B04
69 51 305	08A	033	4-B10
69 51 313	08A	027	4-B04
69 51 321	08A	027	4-B04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 51 354	08A	123	4-F04
69 51 362	08A	123	4-F04
69 51 370	08A	123	4-F04
69 51 388	08A	123	4-F04
69 51 396	08A	123	4-F04
69 51 594	03A	061	2-C14
69 51 669	08A	023	4-A24
69 51 701	08A	023	4-A24
69 51 719	08A	023	4-A24
69 51 727	08A	023	4-A24
69 51 750	08A	023	4-A24
69 51 784	08A	123	4-F04
69 51 917	08A	023	4-A24
69 52 006	08A	031	4-B08
69 52 014	08A	031	4-B08
69 52 022	08A	027	4-B04
69 52 022	08A	031	4-B08
69 52 022	08A	033	4-B10
69 52 030	08A	031	4-B08
69 52 030	08A	033	4-B10
69 52 048	08A	031	4-B08
69 52 048	08A	033	4-B10
69 52 063	08A	031	4-B08
69 52 063	08A	033	4-B10
69 52 071	08A	027	4-B04
69 52 071	08A	031	4-B08
69 52 071	08A	033	4-B10
69 52 089	08A	031	4-B08
69 52 089	08A	033	4-B10
69 52 097	08A	031	4-B08
69 52 097	08A	033	4-B10
69 52 105	08A	031	4-B08
69 52 105	08A	033	4-B10
69 52 113	08A	031	4-B08
69 52 113	08A	033	4-B10
69 52 121	08A	029	4-B06
69 52 139	08A	029	4-B06
69 52 147	08A	029	4-B06
69 52 154	08A	029	4-B06
69 52 162	08A	029	4-B06
69 52 170	08A	029	4-B06
69 52 188	08A	029	4-B06
69 52 196	08A	029	4-B06
69 52 204	08A	029	4-B06
69 52 246	08A	029	4-B06
69 52 253	08A	029	4-B06
69 52 261	08A	029	4-B06
69 52 279	08A	029	4-B06
69 52 287	08A	029	4-B06
69 52 295	08A	029	4-B06
69 52 329	08A	029	4-B06
69 52 345	08A	027	4-B04
69 52 345	08A	033	4-B10
69 52 352	08A	027	4-B04
69 52 352	08A	033	4-B10
69 52 360	08A	027	4-B04
69 52 360	08A	033	4-B10
69 52 378	08A	027	4-B04
69 52 378	08A	033	4-B10
69 52 386	08A	027	4-B04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 52 386	08A	033	4-B10
69 52 394	08A	027	4-B04
69 52 394	08A	033	4-B10
69 52 402	08A	027	4-B04
69 52 402	08A	033	4-B10
69 52 410	08A	027	4-B04
69 52 410	08A	033	4-B10
69 52 428	08A	027	4-B04
69 52 428	08A	033	4-B10
69 52 436	08A	027	4-B04
69 52 436	08A	033	4-B10
69 52 444	08A	027	4-B04
69 52 444	08A	033	4-B10
69 52 451	08A	023	4-A24
69 52 550	08A	023	4-A24
69 52 576	08A	023	4-A24
69 52 592	08A	023	4-A24
69 52 618	08A	029	4-B06
69 52 634	08A	023	4-A24
69 52 642	08A	123	4-F04
69 52 659	08A	123	4-F04
69 52 683	08A	113	4-E18
69 52 691	08A	113	4-E18
69 52 733	08A	029	4-B06
69 52 758	08A	029	4-B06
69 52 774	08A	035	4-B12
69 52 782	08A	035	4-B12
69 52 808	08A	035	4-B12
69 52 824	08A	029	4-B06
69 52 832	08A	029	4-B06
69 52 899	08A	123	4-F04
69 52 907	08A	123	4-F04
69 52 949	08A	023	4-A24
69 52 956	08A	023	4-A24
69 53 103	08A	027	4-B04
69 53 103	08A	033	4-B10
69 53 301	08A	029	4-B06
69 53 319	08A	029	4-B06
69 53 517	08A	027	4-B04
69 53 517	08A	033	4-B10
69 53 780	08A	023	4-A24
69 53 798	08A	023	4-A24
69 53 822	08A	025	4-B02
69 53 889	08A	113	4-E18
69 53 897	08A	113	4-E18
69 53 905	08A	035	4-B12
69 53 913	08A	035	4-B12
69 53 921	08A	029	4-B06
69 53 939	08A	123	4-F04
69 53 947	08A	123	4-F04
69 53 954	08A	123	4-F04
69 56 585	08A	109	4-E14
69 56 585	08A	117	4-E22
69 57 443	08A	011	4-A12
69 59 142	08A	105	4-E10
69 59 142	08A	131	4-F12
69 59 142	08A	133	4-F14
69 60 272	08A	087	4-D16
69 73 762	08A	055	4-C08
69 73 770	08A	055	4-C08

6-A16 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 75 015	08A	019	4-A20
69 75 031	08A	015	4-A16
69 75 031	08A	019	4-A20
69 75 064	08A	015	4-A16
69 93 596	08A	107	4-E12
69 93 596	08A	115	4-E20
69 95 211	08A	095	4-D24
69 95 229	08A	095	4-D24
69 95 237	08A	095	4-D24
69 95 252	08A	023	4-A24
69 95 260	08A	023	4-A24
69 95 278	08A	023	4-A24
69 95 377	08A	095	4-D24
69 96 813	08A	069	4-C22
69 96 813	08A	073	4-D02
69 96 821	08A	113	4-E18
69 96 961	08A	113	4-E18
69 96 979	08A	029	4-B06
69 96 987	08A	037	4-B14
69 96 995	08A	037	4-B14
69 97 134	08A	069	4-C22
69 97 142	08A	069	4-C22
69 97 183	03A	035	2-B12
69 97 209	08A	023	4-A24
69 97 431	08A	047	4-B24
69 97 449	08A	047	4-B24
69 97 472	08B	201	5-I10
69 97 480	08B	201	5-I10
69 97 548	08A	047	4-B24
69 97 563	08A	047	4-B24
69 97 571	08A	063	4-C16
69 97 589	08A	063	4-C16
69 97 738	08A	023	4-A24
69 97 746	08A	023	4-A24
69 97 894	08A	123	4-F04
69 98 017	08A	113	4-E18
69 98 025	08A	111	4-E16
69 98 058	08A	111	4-E16
69 98 074	08A	111	4-E16
69 98 074	08A	143	4-F24
69 98 082	08A	111	4-E16
69 98 082	08A	143	4-F24
69 98 090	08A	111	4-E16
69 98 090	08A	143	4-F24
69 98 108	08A	143	4-F24
69 98 116	08A	143	4-F24
69 98 124	08A	113	4-E18
69 98 173	08A	095	4-D24
69 98 181	08A	095	4-D24
69 98 207	08A	095	4-D24
69 98 215	08A	095	4-D24
69 98 249	08A	111	4-E16
69 98 314	08A	111	4-E16
69 98 330	08A	113	4-E18
69 98 348	08A	113	4-E18
69 98 421	08A	111	4-E16
69 98 553	08A	111	4-E16
69 98 645	08A	111	4-E16
69 98 652	08A	111	4-E16
69 98 694	08A	047	4-B24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 98 702	08A	047	4-B24
69 98 744	08A	111	4-E16
69 98 751	08A	111	4-E16
69 98 843	08A	111	4-E16
69 98 850	08A	111	4-E16
69 98 850	08B	083	5-D12
69 98 850	08B	097	5-E02
69 98 850	08B	111	5-E16
69 98 850	08B	125	5-F06
69 98 868	08A	113	4-E18
69 99 536	08A	023	4-A24
69 99 536	08A	027	4-B04
69 99 536	08A	029	4-B06
69 99 536	08A	031	4-B08
69 99 536	08A	033	4-B10
69 99 551	08A	063	4-C16
69 99 569	08A	063	4-C16
69 99 817	08A	113	4-E18
69 99 825	08A	111	4-E16
69 99 957	08A	095	4-D24
69 99 981	08A	031	4-B08
69 99 981	08A	033	4-B10
69 99 999	08A	123	4-F04
70 35 801	02	145	1-I02
70 35 801	08A	005	4-A06
70 35 801	08A	061	4-C14
70 35 801	08A	065	4-C18
70 35 801	08A	077	4-D06
70 37 492	09	005	5-L06
70 38 342	03A	121	2-F02
70 38 342	08A	041	4-B18
70 38 342	08A	045	4-B22
70 38 342	08A	047	4-B24
70 38 342	08A	053	4-C06
70 38 342	08A	061	4-C14
70 38 342	08A	063	4-C16
70 38 342	08A	065	4-C18
70 38 342	08A	067	4-C20
70 45 776	08B	193	5-I02
70 48 465	04	057	3-C10
70 48 473	04	057	3-C10
70 60 999	02	127	1-H08
70 60 999	08A	067	4-C20
70 61 328	04	015	3-A16
70 61 328	04	029	3-B06
70 61 328	04	039	3-B16
70 61 328	05	015	3-D16
70 61 328	08A	081	4-D10
70 70 626	06	005	3-F06
70 70 642	06	005	3-F06
70 70 667	06	005	3-F06
70 71 061	06	005	3-F06
70 71 079	06	005	3-F06
70 71 087	06	005	3-F06
70 71 939	06	005	3-F06
70 84 197	03A	031	2-B08
70 84 197	03A	033	2-B10
70 84 197	03A	037	2-B14
70 85 541	03A	049	2-C02
70 85 541	08A	155	4-G12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
70 85 541	08A	157	4-G14
70 85 541	08A	161	4-G18
70 88 073	03A	031	2-B08
70 88 073	08B	009	5-A10
70 88 073	08B	133	5-F14
71 08 491	03A	111	2-E16
71 08 491	03A	115	2-E20
71 08 491	08A	019	4-A20
71 08 491	08A	153	4-G10
71 08 491	08A	155	4-G12
71 08 491	08A	157	4-G14
71 08 491	08A	159	4-G16
71 08 491	08A	161	4-G18
71 13 970	03A	005	2-A06
71 16 452	08A	009	4-A10
71 16 452	08A	047	4-B24
71 17 880	03B	091	2-J20
71 17 880	03B	101	2-K06
71 17 880	03B	111	2-K16
71 21 239	03A	111	2-E16
71 21 239	03A	115	2-E20
71 21 239	03A	121	2-F02
71 52 796	08A	065	4-C18
71 52 796	08A	067	4-C20
71 53 695	08A	075	4-D04
71 54 719	03A	027	2-B04
71 54 719	03A	029	2-B06
71 54 719	03A	033	2-B10
71 54 727	03A	027	2-B04
71 54 727	03A	029	2-B06
71 54 727	03A	033	2-B10
71 54 727	03A	037	2-B14
71 55 021	03B	015	2-G16
71 55 021	03B	043	2-H20
71 55 021	03B	073	2-J02
71 55 096	03B	007	2-G08
71 55 096	03B	035	2-H12
71 55 096	03B	065	2-I18
71 55 112	03B	005	2-G06
71 55 112	03B	033	2-H10
71 55 112	03B	063	2-I16
71 55 120	03B	005	2-G06
71 55 120	03B	033	2-H10
71 55 120	03B	063	2-I16
71 55 146	03B	099	2-K04
71 55 146	03B	109	2-K14
71 55 146	03B	117	2-K22
71 55 187	03B	067	2-I20
71 55 187	08C	009	5-J10
71 55 203	03B	099	2-K04
71 55 203	03B	109	2-K14
71 55 203	03B	117	2-K22
71 55 211	03B	091	2-J20
71 55 211	03B	101	2-K06
71 55 211	03B	111	2-K16
71 55 229	03B	091	2-J20
71 55 229	03B	101	2-K06
71 55 229	03B	111	2-K16
71 55 237	03B	091	2-J20
71 55 237	03B	101	2-K06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
71 55 237	03B	111	2-K16
71 55 500	02	127	1-H08
71 55 633	03B	099	2-K04
71 55 633	03B	109	2-K14
71 55 633	03B	117	2-K22
71 55 658	03B	091	2-J20
71 55 658	03B	101	2-K06
71 55 658	03B	111	2-K16
71 55 708	03A	119	2-E24
71 55 708	08A	007	4-A08
71 55 716	03B	009	2-G10
71 55 716	03B	013	2-G14
71 55 716	03B	037	2-H14
71 55 716	03B	041	2-H18
71 55 716	03B	067	2-I20
71 55 716	03B	071	2-I24
71 55 716	03B	091	2-J20
71 55 716	03B	101	2-K06
71 55 716	03B	111	2-K16
71 56 409	03A	047	2-B24
71 56 409	03A	111	2-E16
71 56 409	03A	115	2-E20
71 56 409	03A	121	2-F02
71 62 308	08A	009	4-A10
71 62 308	08A	077	4-D06
71 62 308	08A	081	4-D10
71 62 308	08C	007	5-J08
71 63 066	05	019	3-D20
71 63 066	08A	009	4-A10
71 63 066	08A	077	4-D06
71 63 074	08A	043	4-B20
71 63 074	08A	045	4-B22
71 63 074	08A	049	4-C02
71 63 074	08C	007	5-J08
71 63 074	08C	025	5-K02
71 63 074	08C	027	5-K04
71 63 074	08C	029	5-K06
71 63 074	08C	033	5-K10
71 63 074	08C	035	5-K12
71 63 603	06	005	3-F06
71 67 117	04	057	3-C10
71 75 433	06	005	3-F06
71 75 441	06	005	3-F06
71 83 965	02	145	1-I02
71 83 973	02	145	1-I02
71 84 443	06	005	3-F06
71 96 710	03B	091	2-J20
71 96 710	03B	101	2-K06
71 96 710	03B	111	2-K16
72 86 271	03A	051	2-C04
73 09 370	03A	113	2-E18
73 11 764	03A	007	2-A08
73 11 764	03A	009	2-A10
73 11 764	05	017	3-D18
73 11 764	08A	055	4-C08
73 11 772	03A	007	2-A08
73 11 772	03A	009	2-A10
73 11 772	08A	031	4-B08
73 11 772	08A	033	4-B10
73 11 772	08A	113	4-E18

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-G02**
4	**Transmission**	**3-A02**
5	**Brakes**	**3-D02**
6	**Front assembly, Steering**	**3-F02**
7	**Suspension, Wheels**	**3-H02**
8A	**Body, external**	**4-A02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
9	**Tool, Labels**	**5-L02**
10	**Numerical register**	**6-A02**

Part No Art nr	Gr Gr	Page Sida	Grid Koord
73 13 182	04	057	3-C10
73 13 232	04	007	3-A08
73 13 240	04	007	3-A08
73 13 240	04	057	3-C10
73 13 752	08A	005	4-A06
73 26 093	03A	113	2-E18
73 26 093	08A	145	4-G02
73 26 093	08A	147	4-G04
73 26 093	08A	149	4-G06
73 26 093	08A	153	4-G10
73 26 093	08A	155	4-G12
73 26 093	08A	157	4-G14
73 26 093	08A	159	4-G16
73 26 093	08A	161	4-G18
73 26 093	08A	163	4-G20
73 37 330	06	005	3-F06
73 37 348	06	005	3-F06
73 40 839	08A	107	4-E12
73 42 892	03B	015	2-G16
73 42 892	03B	043	2-H20
73 42 892	03B	075	2-J04
73 42 900	03B	017	2-G18
73 42 900	03B	045	2-H20
73 42 900	03B	075	2-J04
73 44 476	08A	107	4-E12
73 46 232	08A	023	4-A24
73 46 232	08B	133	5-F14
73 48 287	09	005	5-L06
73 74 218	08B	131	5-F12
73 98 233	02	107	1-G12
73 98 233	02	147	1-I04
73 98 282	08B	159	5-G16
73 98 340	08B	199	5-I08
73 98 373	08C	021	5-J22
73 98 373	08C	025	5-K02
73 98 373	08C	027	5-K04
73 98 373	08C	029	5-K06
73 98 373	08C	033	5-K10
73 98 399	02	151	1-I08
73 98 415	02	109	1-G14
73 98 423	03A	027	2-B04
73 98 423	08A	095	4-D24
73 98 423	08A	143	4-F24
73 98 530	08C	021	5-J22
73 98 530	08C	025	5-K02
73 98 530	08C	027	5-K04
73 98 530	08C	031	5-K08
73 98 530	08C	033	5-K10
73 98 746	04	007	3-A08
73 98 761	08A	011	4-A12
73 98 876	08A	083	4-D12
73 98 993	08A	123	4-F04
73 99 165	08B	199	5-I08
73 99 280	08C	021	5-J22
73 99 280	08C	025	5-K02
73 99 280	08C	027	5-K04
73 99 280	08C	031	5-K08
73 99 280	08C	033	5-K10
73 99 421	08B	013	5-A14
73 99 454	03A	063	2-C16
73 99 454	09A	009	4-A10
73 99 520	03A	063	2-C16
73 99 520	03A	113	2-E18
73 99 603	08C	027	5-K04
73 99 603	08C	031	5-K08
73 99 637	08B	201	5-I10
73 99 660	05	017	3-D18
73 99 678	08A	055	4-C08
73 99 769	03A	007	2-A08
73 99 769	03A	009	2-A10
73 99 819	08A	061	4-C14
73 99 819	08A	065	4-C18
73 99 819	08A	067	4-C20
73 99 835	08B	177	5-H10
73 99 959	04	017	3-A18
73 99 967	08A	109	4-E14
73 99 967	08A	117	4-E22
73 99 975	06	009	3-F10
74 78 159	03A	075	2-D04
74 78 159	03A	085	2-D14
74 78 159	03A	093	2-D22
74 78 159	03A	103	2-E08
74 80 577	02	017	1-C18
74 80 759	02	143	1-H24
74 80 916	02	095	1-F24
74 81 393	03A	021	2-A22
74 81 427	02	149	1-I06
74 82 490	02	089	1-F18
74 82 953	02	143	1-H24
74 82 953	02	149	1-I06
74 83 464	02	097	1-G02
74 84 439	03A	019	2-A20
74 84 504	03A	013	2-A14
74 84 512	03A	013	2-A14
74 84 520	03A	013	2-A14
74 84 546	03A	013	2-A14
74 84 694	02	085	1-F14
74 84 702	02	085	1-F14
74 84 710	02	089	1-F18
74 84 801	02	017	1-C18
74 84 983	02	025	1-D02
74 85 006	02	083	1-F12
74 85 022	02	071	1-E24
74 85 030	02	071	1-E24
74 85 600	02	109	1-G14
74 85 634	02	095	1-F24
74 85 642	03A	061	2-C14
74 85 766	03A	017	2-A18
74 85 774	03A	017	2-A18
74 85 915	02	089	1-F18
74 85 964	02	071	1-E24
74 86 038	02	147	1-I04
74 86 129	02	089	1-F18
74 86 723	02	089	1-F18
74 86 780	02	015	1-C16
74 86 806	02	141	1-H22
74 86 806	02	149	1-I06
74 86 822	03A	017	2-A18
74 86 822	03A	135	2-F16
74 86 921	02	075	1-F04
74 87 010	02	071	1-E24
74 87 028	02	071	1-E24
74 87 119	02	071	1-E24
74 87 168	02	105	1-G10
74 87 184	02	035	1-D12
74 87 267	02	089	1-F18
74 87 556	02	081	1-F10
74 87 556	02	083	1-F12
74 96 003	04	011	3-A12
74 96 003	04	015	3-A16
74 96 003	04	027	3-B04
74 96 003	04	063	3-C16
74 96 268	04	025	3-B02
74 96 268	04	027	3-B04
74 96 276	04	025	3-B02
74 96 284	04	015	3-A16
74 96 284	04	017	3-A18
74 96 284	04	027	3-B04
74 96 284	04	041	3-B18
74 96 292	02	035	1-D12
74 97 001	08A	137	4-F18
74 97 019	08A	135	4-F16
74 97 019	08A	139	4-F20
74 97 100	08A	139	4-F20
75 00 069	02	017	1-C18
75 00 069	02	153	1-I10
75 00 085	02	017	1-C18
75 00 127	02	027	1-D04
75 00 697	02	027	1-D04
75 00 713	02	017	1-C18
75 01 216	03A	017	2-A18
75 01 216	03A	019	2-A20
75 01 216	03A	021	2-A22
75 01 349	02	017	1-C18
75 01 612	02	085	1-F14
75 01 642	02	089	1-F18
75 01 943	02	139	1-H20
75 02 263	02	039	1-D16
75 02 297	02	159	1-I16
75 02 800	02	093	1-F22
75 02 818	02	093	1-F22
75 03 600	03A	013	2-A14
75 03 758	02	053	1-E06
75 04 012	02	103	1-G08
75 04 046	02	103	1-G08
75 04 111	02	053	1-E06
75 04 160	02	053	1-E06
75 04 483	03A	015	2-A16
75 04 483	03A	133	2-F14
75 04 491	03A	015	2-A16
75 04 491	03A	133	2-F14
75 04 509	03A	015	2-A16
75 04 509	03A	133	2-F14
75 04 517	03A	015	2-A16
75 04 517	03A	133	2-F14
75 04 525	03A	015	2-A16
75 04 624	02	143	1-H24
75 04 673	02	085	1-F14
75 04 673	02	089	1-F18
75 04 697	02	105	1-G10
75 05 134	02	017	1-C18
75 05 258	02	039	1-D16
75 05 423	02	085	1-F14
75 05 423	02	089	1-F18
75 06 264	02	085	1-F14
75 06 264	02	089	1-F18
75 06 272	03A	007	2-A08
75 06 272	03A	009	2-A10
75 06 322	02	081	1-F10
75 06 611	02	071	1-E24
75 06 645	02	137	1-H18
75 06 652	02	105	1-G10
75 06 793	03A	015	2-A16
75 06 934	02	145	1-I02
75 06 959	02	043	1-D20
75 07 072	02	085	1-F14
75 07 072	02	089	1-F18
75 07 080	02	085	1-F14
75 07 080	02	089	1-F18
75 07 098	02	085	1-F14
75 07 106	02	085	1-F14
75 07 155	02	027	1-D04
75 07 460	02	159	1-I16
75 07 700	02	039	1-D16
75 07 700	02	155	1-I12
75 07 973	02	083	1-F12
75 07 973	02	103	1-G08
75 07 973	02	105	1-G10
75 07 973	02	107	1-G12
75 08 328	02	037	1-D14
75 08 385	02	105	1-G10
75 08 385	02	107	1-G12
75 08 583	02	097	1-G02
75 08 690	02	027	1-D04
75 10 001	04	037	3-B14
75 10 241	04	015	3-A16
75 10 241	04	039	3-B16
75 10 266	02	151	1-I08
75 10 423	04	051	3-C04
75 10 431	04	051	3-C04
75 10 548	03A	015	2-A16
75 10 548	03A	133	2-F14
75 11 157	03A	015	2-A16
75 11 157	03A	133	2-F14
75 11 256	02	057	1-E10
75 11 256	04	053	3-C06
75 11 371	04	049	3-C02
75 11 413	02	067	1-E20
75 11 421	02	067	1-E20
75 11 470	04	051	3-C04
75 11 470	04	063	3-C16
75 11 553	04	053	3-C06
75 11 561	04	053	3-C06
75 11 645	02	119	1-G24
75 11 645	02	121	1-H02
75 11 645	02	123	1-H04
75 11 702	02	073	1-F02
75 11 728	03A	007	2-A08
75 11 728	03A	009	2-A10
75 11 751	02	055	1-E08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 11 884	04	045	3-B22
75 11 975	02	017	1-C18
75 12 015	02	017	1-C18
75 12 015	03A	111	2-E16
75 12 247	06	021	3-F22
75 12 247	08C	019	5-J20
75 12 247	08C	025	5-K02
75 12 247	08C	031	5-K08
75 12 593	02	051	1-E04
75 12 593	02	137	1-H18
75 12 742	02	137	1-H18
75 12 775	02	137	1-H18
75 12 817	02	131	1-H12
75 12 957	02	047	1-D24
75 12 973	02	047	1-D24
75 12 999	02	045	1-D22
75 12 999	02	049	1-E02
75 13 070	02	137	1-H18
75 13 096	02	137	1-H18
75 13 112	02	137	1-H18
75 13 435	02	129	1-H10
75 13 435	02	131	1-H12
75 13 666	02	063	1-E16
75 13 674	02	147	1-I04
75 13 682	02	149	1-I06
75 13 716	02	125	1-H06
75 13 724	02	125	1-H06
75 13 724	08A	027	4-B04
75 13 724	08A	033	4-B10
75 13 989	02	075	1-F04
75 14 201	04	015	3-A16
75 14 201	04	039	3-B16
75 14 375	02	081	1-F10
75 14 383	02	083	1-F12
75 14 615	02	047	1-D24
75 14 615	02	049	1-E02
75 14 722	02	047	1-D24
75 15 190	02	015	1-C16
75 15 190	02	017	1-C18
75 15 208	02	079	1-F08
75 15 208	02	081	1-F10
75 15 208	02	083	1-F12
75 15 547	02	017	1-C18
75 15 588	02	161	1-I18
75 15 596	02	161	1-I18
75 15 836	02	105	1-G10
75 15 836	02	107	1-G12
75 16 115	02	101	1-G06
75 16 255	02	021	1-C22
75 16 826	02	021	1-C22
75 16 834	02	021	1-C22
75 16 974	02	085	1-F14
75 16 974	02	089	1-F18
75 17 014	02	143	1-H24
75 17 048	02	017	1-C18
75 17 089	02	147	1-I04
75 17 147	02	143	1-H24
75 17 345	02	159	1-I16
75 17 378	02	147	1-I04
75 17 402	02	085	1-F14
75 17 402	02	091	1-F20
75 17 477	02	151	1-I08
75 17 923	02	093	1-F22
75 17 923	02	095	1-F24
75 18 335	02	017	1-C18
75 18 343	02	015	1-C16
75 18 541	03A	017	2-A18
75 18 632	02	027	1-D04
75 18 640	02	027	1-D04
75 18 889	02	085	1-F14
75 18 889	02	089	1-F18
75 18 970	02	039	1-D16
75 18 970	02	155	1-I12
75 18 996	02	099	1-G04
75 18 996	02	101	1-G06
75 18 996	02	153	1-I10
75 19 010	02	097	1-G02
75 19 010	02	099	1-G04
75 19 010	02	101	1-G06
75 19 085	03A	019	2-A20
75 19 085	03A	021	2-A22
75 19 101	03A	019	2-A20
75 19 101	03A	021	2-A22
75 19 119	03A	021	2-A22
75 19 127	03A	021	2-A22
75 19 135	03A	019	2-A20
75 19 143	03A	019	2-A20
75 19 143	03A	021	2-A22
75 19 291	02	149	1-I06
75 19 358	02	025	1-D02
75 19 390	02	025	1-D02
75 19 432	02	147	1-I04
75 19 481	02	039	1-D16
75 19 531	02	143	1-H24
75 20 133	02	105	1-G10
75 20 133	02	107	1-G12
75 20 174	02	129	1-H10
75 20 190	02	147	1-I04
75 20 208	02	147	1-I04
75 20 216	02	147	1-I04
75 20 349	02	145	1-I02
75 20 372	02	037	1-D14
75 20 513	02	029	1-D06
75 20 513	02	031	1-D08
75 20 513	02	165	1-I22
75 20 521	02	029	1-D06
75 20 521	02	031	1-D08
75 20 521	02	165	1-I22
75 20 539	02	029	1-D06
75 20 539	02	031	1-D08
75 20 539	02	165	1-I22
75 20 703	02	029	1-D06
75 20 711	02	029	1-D06
75 20 745	02	029	1-D06
75 20 752	02	029	1-D06
75 20 760	02	029	1-D06
75 20 802	02	029	1-D06
75 20 810	02	029	1-D06
75 20 828	02	029	1-D06
75 20 836	02	029	1-D06
75 20 844	02	029	1-D06
75 20 927	02	031	1-D08
75 20 935	02	031	1-D08
75 20 943	02	031	1-D08
75 20 950	02	031	1-D08
75 20 968	02	031	1-D08
75 21 081	02	163	1-I20
75 21 123	02	145	1-I02
75 21 180	02	013	1-C14
75 21 198	02	013	1-C14
75 21 255	02	035	1-D12
75 21 313	02	083	1-F12
75 21 875	02	085	1-F14
75 21 875	02	089	1-F18
75 22 360	02	013	1-C14
75 22 477	02	081	1-F10
75 22 477	02	083	1-F12
75 22 709	02	161	1-I18
75 22 733	02	053	1-E06
75 22 741	02	013	1-C14
75 23 038	02	083	1-F12
75 23 897	02	021	1-C22
75 23 913	02	143	1-H24
75 23 962	02	017	1-C18
75 23 962	02	153	1-I10
75 24 127	02	151	1-I08
75 24 168	02	147	1-I04
75 24 275	02	013	1-C14
75 24 275	02	157	1-I14
75 24 291	02	013	1-C14
75 24 291	02	157	1-I14
75 24 317	02	013	1-C14
75 24 317	02	157	1-I14
75 24 333	02	013	1-C14
75 24 333	02	157	1-I14
75 24 358	02	013	1-C14
75 24 358	02	157	1-I14
75 24 374	02	013	1-C14
75 24 374	02	157	1-I14
75 24 390	02	013	1-C14
75 24 390	02	157	1-I14
75 24 416	02	013	1-C14
75 24 416	02	157	1-I14
75 24 432	02	013	1-C14
75 24 432	02	157	1-I14
75 24 457	02	013	1-C14
75 24 457	02	157	1-I14
75 24 473	02	013	1-C14
75 24 473	02	157	1-I14
75 24 499	02	013	1-C14
75 24 499	02	157	1-I14
75 24 515	02	013	1-C14
75 24 515	02	157	1-I14
75 24 531	02	013	1-C14
75 24 531	02	157	1-I14
75 24 556	02	013	1-C14
75 24 556	02	157	1-I14
75 24 572	02	013	1-C14
75 24 572	02	157	1-I14
75 24 598	02	013	1-C14
75 24 598	02	157	1-I14
75 24 614	02	013	1-C14
75 24 614	02	157	1-I14
75 24 630	02	013	1-C14
75 24 630	02	157	1-I14
75 24 655	02	013	1-C14
75 24 655	02	157	1-I14
75 24 671	02	013	1-C14
75 24 671	02	157	1-I14
75 24 697	02	013	1-C14
75 24 697	02	157	1-I14
75 24 713	02	013	1-C14
75 24 713	02	157	1-I14
75 24 739	02	013	1-C14
75 24 739	02	157	1-I14
75 24 754	02	013	1-C14
75 24 754	02	157	1-I14
75 24 770	02	015	1-C16
75 24 770	02	157	1-I14
75 24 796	02	015	1-C16
75 24 796	02	157	1-I14
75 24 812	02	015	1-C16
75 24 812	02	157	1-I14
75 24 838	02	015	1-C16
75 24 838	02	157	1-I14
75 24 853	02	015	1-C16
75 24 853	02	157	1-I14
75 24 895	02	031	1-D08
75 24 903	02	031	1-D08
75 24 911	02	031	1-D08
75 24 929	02	031	1-D08
75 24 937	02	031	1-D08
75 25 181	02	059	1-E12
75 25 215	02	047	1-D24
75 25 223	02	069	1-E22
75 25 231	02	069	1-E22
75 25 249	02	069	1-E22
75 25 389	02	077	1-F06
75 25 421	02	055	1-E08
75 25 439	02	055	1-E08
75 25 702	02	071	1-E24
75 25 710	02	071	1-E24
75 25 744	02	151	1-I08
75 25 744	03A	013	2-A14
75 25 777	02	151	1-I08
75 26 031	02	087	1-F16
75 26 049	02	087	1-F16
75 26 056	02	087	1-F16
75 26 064	02	087	1-F16
75 26 163	02	063	1-E16
75 26 262	02	137	1-H18
75 26 288	02	137	1-H18
75 26 288	02	149	1-I06
75 26 338	02	093	1-F22
75 26 338	08C	037	5-K14
75 26 346	02	093	1-F22
75 26 353	02	093	1-F22
75 26 361	02	093	1-F22
75 26 379	02	093	1-F22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6–A19 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 26 411	02	043	1-D20
75 26 429	02	043	1-D20
75 26 502	02	037	1-D14
75 26 650	02	061	1-E14
75 26 809	02	109	1-G14
75 26 841	02	137	1-H18
75 26 874	02	037	1-D14
75 26 916	02	121	1-H02
75 26 916	02	123	1-H04
75 27 385	02	111	1-G16
75 27 583	02	087	1-F16
75 27 591	02	087	1-F16
75 27 633	09	007	5-L08
75 27 641	09	007	5-L08
75 27 732	03A	011	2-A12
75 27 757	03A	011	2-A12
75 27 765	03A	011	2-A12
75 27 807	03A	011	2-A12
75 27 849	03A	011	2-A12
75 27 856	03A	011	2-A12
75 27 864	03A	011	2-A12
75 27 872	03A	011	2-A12
75 27 880	03A	011	2-A12
75 28 078	02	111	1-G16
75 28 136	02	111	1-G16
75 28 136	02	113	1-G18
75 28 136	02	165	1-I22
75 28 144	02	087	1-F16
75 28 144	02	093	1-F22
75 28 144	08C	027	5-K04
75 28 144	08C	037	5-K14
75 28 284	02	049	1-E02
75 28 342	02	047	1-D24
75 28 425	02	105	1-G10
75 28 524	02	097	1-G02
75 28 698	02	043	1-D20
75 28 912	02	055	1-E08
75 28 920	02	055	1-E08
75 28 953	02	119	1-G24
75 28 953	02	121	1-H02
75 28 953	02	123	1-H04
75 28 995	02	147	1-I04
75 29 183	02	043	1-D20
75 29 845	02	043	1-D20
75 29 852	02	043	1-D20
75 29 860	02	043	1-D20
75 29 886	02	043	1-D20
75 29 894	02	043	1-D20
75 30 553	02	055	1-E08
75 31 544	09	007	5-L08
75 32 054	02	077	1-F06
75 32 161	02	009	1-C10
75 33 102	02	145	1-I02
75 33 110	02	145	1-I02
75 33 136	02	145	1-I02
75 33 185	02	147	1-I04
75 33 383	02	077	1-F06
75 33 532	02	117	1-G22
75 33 540	02	119	1-G24
75 33 540	02	123	1-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 33 615	02	161	1-I18
75 33 623	02	161	1-I18
75 33 631	02	161	1-I18
75 33 870	02	045	1-D22
75 33 870	02	047	1-D24
75 33 896	02	123	1-H04
75 33 896	02	165	1-I22
75 33 904	02	117	1-G22
75 33 904	02	167	1-I24
75 34 456	02	097	1-G02
75 34 480	02	077	1-F06
75 35 032	02	067	1-E22
75 35 040	02	067	1-E20
75 35 057	02	067	1-E20
75 35 065	02	067	1-E20
75 35 073	02	067	1-E20
75 35 164	02	109	1-G14
75 35 172	02	067	1-E20
75 35 180	02	067	1-E20
75 35 198	02	067	1-E20
75 35 206	02	067	1-E20
75 35 214	02	067	1-E20
75 35 255	03A	011	2-A12
75 35 271	03A	011	2-A12
75 35 297	03A	011	2-A12
75 35 305	03A	011	2-A12
75 35 313	03A	011	2-A12
75 35 321	03A	011	2-A12
75 35 339	03A	011	2-A12
75 35 446	02	071	1-E24
75 35 487	03A	113	2-E18
75 35 487	03A	117	2-E22
75 35 487	08C	021	5-J22
75 35 487	08C	025	5-K02
75 35 487	08C	027	5-K04
75 35 487	08C	031	5-K08
75 35 925	02	121	1-H02
75 35 925	02	123	1-H04
75 35 925	02	163	1-I20
75 36 063	02	123	1-H04
75 36 196	02	111	1-G16
75 36 196	02	113	1-G18
75 36 196	02	115	1-G20
75 36 196	02	117	1-G22
75 36 196	02	119	1-G24
75 36 196	02	163	1-I20
75 36 576	02	043	1-D20
75 36 840	02	055	1-E08
75 36 915	02	109	1-G14
75 36 923	02	063	1-E16
75 36 931	02	043	1-D20
75 37 145	02	163	1-I20
75 37 269	02	145	1-I02
75 37 525	02	145	1-I02
75 37 756	09	013	5-L14
75 37 806	02	041	1-D18
75 38 440	02	111	1-G16
75 38 440	02	117	1-G22
75 38 440	02	121	1-H02
75 38 440	02	123	1-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 38 440	02	163	1-I20
75 38 655	02	071	1-E24
75 39 117	02	113	1-G18
75 39 117	02	165	1-I22
75 39 125	02	047	1-D24
75 39 125	02	049	1-E02
75 39 133	02	055	1-E08
75 39 216	02	077	1-F06
75 39 257	02	077	1-F06
75 39 349	02	077	1-F06
75 39 968	08A	053	4-C06
75 39 976	02	055	1-E08
75 39 984	02	077	1-F06
75 39 984	03A	111	2-E16
75 40 032	02	133	1-H14
75 40 032	02	135	1-H16
75 40 305	02	133	1-H14
75 40 313	02	133	1-H14
75 40 420	02	129	1-H10
75 40 610	02	137	1-H18
75 40 628	02	137	1-H18
75 40 727	04	029	3-B06
75 40 891	04	047	3-B24
75 40 891	04	061	3-C14
75 40 909	04	043	3-B20
75 40 917	02	135	1-H16
75 41 436	03A	007	2-A08
75 41 436	03A	009	2-A10
75 41 451	03A	007	2-A08
75 41 451	03A	009	2-A10
75 41 519	02	133	1-H14
75 41 527	02	131	1-H12
75 41 717	02	127	1-H08
75 41 725	02	127	1-H08
75 41 733	02	127	1-H08
75 41 907	04	031	3-B08
75 42 038	04	029	3-B06
75 42 228	08C	019	5-J20
75 42 228	08C	025	5-K02
75 42 228	08C	031	5-K08
75 42 244	04	037	3-B14
75 42 251	04	051	3-C04
75 42 277	04	039	3-B16
75 42 285	04	039	3-B16
75 42 293	04	039	3-B16
75 42 301	04	039	3-B16
75 42 319	04	039	3-B16
75 42 327	04	039	3-B16
75 42 335	04	039	3-B16
75 42 343	04	053	3-C06
75 42 350	04	053	3-C06
75 42 368	04	053	3-C06
75 42 376	04	053	3-C06
75 42 384	04	053	3-C06
75 42 434	04	043	3-B20
75 42 475	04	043	3-B20
75 42 483	04	045	3-B22
75 42 491	04	045	3-B22
75 42 517	04	049	3-C02
75 42 525	04	049	3-C02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 42 533	04	049	3-C02
75 42 541	04	049	3-C02
75 42 558	04	049	3-C02
75 42 566	04	049	3-C02
75 42 574	04	049	3-C02
75 42 590	04	049	3-C02
75 42 608	04	049	3-C02
75 42 616	04	049	3-C02
75 42 624	04	049	3-C02
75 42 632	04	051	3-C04
75 42 640	04	051	3-C04
75 42 657	04	051	3-C04
75 42 665	04	039	3-B16
75 42 673	04	047	3-B24
75 42 673	04	061	3-C14
75 42 681	04	049	3-C02
75 42 681	04	063	3-C16
75 42 699	04	049	3-C02
75 42 699	04	063	3-C16
75 42 715	02	133	1-H14
75 42 772	02	127	1-H08
75 42 822	04	049	3-C02
75 42 830	04	049	3-C02
75 42 897	04	043	3-B20
75 42 913	04	029	3-B06
75 42 913	04	055	3-C08
75 42 954	04	039	3-B16
75 42 962	04	053	3-C06
75 42 970	04	053	3-C06
75 42 988	04	053	3-C06
75 43 028	04	043	3-B20
75 43 051	04	043	3-B20
75 43 051	04	063	3-C16
75 43 259	02	129	1-H10
75 43 408	02	009	1-C10
75 43 416	02	009	1-C10
75 43 424	09	007	5-L08
75 43 432	02	009	1-C10
75 43 556	08C	017	5-J18
75 43 556	08C	027	5-K04
75 43 606	08C	017	5-J18
75 43 606	08C	027	5-K04
75 43 614	08C	017	5-J18
75 43 614	08C	027	5-K04
75 43 762	02	137	1-H18
75 43 846	02	137	1-H18
75 43 978	02	011	1-C12
75 43 986	02	011	1-C12
75 43 994	02	011	1-C12
75 44 018	02	011	1-C12
75 44 026	02	011	1-C12
75 44 034	02	011	1-C12
75 44 042	02	011	1-C12
75 44 083	02	011	1-C12
75 44 125	04	049	3-C02
75 44 216	02	127	1-H08
75 44 265	02	009	1-C10
75 44 265	02	011	1-C12
75 44 273	02	011	1-C12
75 44 356	02	137	1-H18

6–A20 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 44 372	02	133	1-H14
75 44 430	02	133	1-H14
75 44 448	02	133	1-H14
75 44 505	02	137	1-H18
75 44 828	04	029	3-B06
75 44 844	04	051	3-C04
75 44 893	02	011	1-C12
75 44 901	02	011	1-C12
75 44 992	02	011	1-C12
75 45 544	02	131	1-H12
75 45 650	02	011	1-C12
75 45 668	02	011	1-C12
75 46 161	02	131	1-H12
75 46 179	02	131	1-H12
75 46 252	04	049	3-C02
75 46 260	04	045	3-B22
75 46 278	04	037	3-B14
75 46 385	02	133	1-H14
75 46 476	02	133	1-H14
75 46 484	02	133	1-H14
75 46 567	02	133	1-H14
75 46 690	04	049	3-C02
75 46 773	02	133	1-H14
75 46 922	02	133	1-H14
75 46 955	02	133	1-H14
75 46 963	02	133	1-H14
75 46 971	02	133	1-H14
75 46 971	02	135	1-H16
75 47 003	02	133	1-H14
75 47 029	02	133	1-H14
75 47 284	02	011	1-C12
75 47 334	04	029	3-B06
75 47 482	06	021	3-F22
75 47 623	02	137	1-H18
75 47 631	02	137	1-H18
75 47 656	02	011	1-C12
75 47 730	02	135	1-H16
75 47 805	02	135	1-H16
75 47 813	02	135	1-H16
75 47 821	02	133	1-H14
75 47 847	02	133	1-H14
75 47 946	04	049	3-C02
75 48 191	02	127	1-H08
75 48 191	08C	025	5-K02
75 48 191	08C	027	5-K04
75 48 191	08C	031	5-K08
75 48 191	08C	033	5-K10
75 48 688	02	127	1-H08
75 48 688	08C	025	5-K02
75 48 688	08C	027	5-K04
75 48 688	08C	031	5-K08
75 48 688	08C	033	5-K10
75 48 787	02	133	1-H14
75 48 795	02	133	1-H14
75 48 803	02	133	1-H14
75 48 811	02	135	1-H16
75 48 829	02	135	1-H16
75 48 910	04	059	3-C12
75 49 041	02	137	1-H18
75 49 165	04	055	3-C08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 49 256	04	029	3-B06
75 49 256	04	055	3-C08
75 49 280	02	125	1-H06
75 49 298	02	125	1-H06
75 49 389	02	125	1-H06
75 49 439	08C	017	5-J18
75 49 439	08C	019	5-J20
75 49 439	08C	025	5-K02
75 49 439	08C	027	5-K04
75 49 439	08C	031	5-K08
75 49 488	03A	007	2-A08
75 49 488	03A	009	2-A10
75 49 579	02	009	1-C10
75 49 595	04	043	3-B20
75 49 611	04	035	3-B12
75 49 652	04	035	3-B12
75 49 819	04	037	3-B14
75 49 868	02	133	1-H14
75 49 876	02	125	1-H06
75 49 918	02	149	1-I06
75 49 926	02	149	1-I06
75 49 991	02	149	1-I06
75 50 023	02	137	1-H18
75 54 264	04	039	3-B16
75 59 768	02	135	1-H16
75 60 048	02	037	1-D14
75 60 071	02	037	1-D14
75 60 154	02	017	1-C18
75 60 212	02	083	1-F12
75 60 220	02	083	1-F12
75 60 808	02	017	1-C18
75 60 931	02	017	1-C18
75 60 964	02	017	1-C18
75 61 061	03A	015	2-A16
75 61 079	03A	015	2-A16
75 61 087	03A	015	2-A16
75 61 095	03A	015	2-A16
75 61 186	02	035	1-D12
75 61 210	02	071	1-E24
75 61 210	02	075	1-F04
75 61 228	02	083	1-F12
75 61 301	02	017	1-C18
75 61 467	02	017	1-C18
75 61 509	02	079	1-F08
75 61 509	02	081	1-F10
75 61 772	02	097	1-G02
75 61 772	02	153	1-I10
75 61 772	02	163	1-I20
75 62 002	02	017	1-C18
75 62 010	02	085	1-F14
75 62 010	02	089	1-F18
75 62 044	02	085	1-F14
75 62 044	02	089	1-F18
75 62 242	02	081	1-F10
75 62 259	02	035	1-D12
75 62 275	02	035	1-D12
75 62 390	02	085	1-F14
75 62 515	02	099	1-G04
75 62 739	02	085	1-F14
75 62 739	02	089	1-F18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 63 141	02	015	1-C16
75 63 166	02	027	1-D04
75 63 646	02	025	1-D02
75 63 661	02	021	1-C22
75 63 661	02	153	1-I10
75 63 687	02	139	1-H20
75 64 057	02	079	1-F08
75 64 123	02	071	1-E24
75 64 131	02	071	1-E24
75 64 339	02	073	1-F02
75 64 396	02	085	1-F14
75 64 396	02	089	1-F18
75 64 420	03A	019	2-A20
75 64 438	03A	021	2-A22
75 64 800	03A	017	2-A18
75 64 859	02	079	1-F08
75 65 658	02	147	1-I04
75 65 708	02	147	1-I04
75 65 716	02	147	1-I04
75 65 724	02	147	1-I04
75 66 433	02	037	1-D14
75 66 433	02	153	1-I10
75 66 458	02	015	1-C16
75 66 458	02	053	1-E06
75 66 516	02	139	1-H20
75 66 532	02	141	1-H22
75 66 599	02	151	1-I08
75 68 041	02	071	1-E24
75 68 801	02	151	1-I08
75 68 900	02	161	1-I18
75 68 934	02	033	1-D10
75 68 942	02	031	1-D08
75 69 056	02	095	1-F24
75 69 304	02	017	1-C18
75 69 304	02	153	1-I10
75 69 346	02	079	1-F08
75 69 346	02	153	1-I10
75 69 734	02	017	1-C18
75 77 323	02	125	1-H06
75 80 095	02	081	1-F10
75 80 244	02	043	1-D20
75 80 574	02	043	1-D20
75 80 582	02	043	1-D20
75 81 093	02	041	1-D18
75 81 259	02	021	1-C22
75 81 317	02	043	1-D20
75 81 333	02	053	1-E06
75 81 432	02	145	1-I02
75 81 440	02	079	1-F08
75 81 473	02	041	1-D18
75 82 315	02	081	1-F10
75 82 315	02	153	1-I10
75 83 172	02	151	1-I08
75 83 628	02	149	1-I06
75 83 784	02	099	1-G04
75 83 859	02	089	1-F18
75 83 867	02	095	1-F24
75 84 436	02	083	1-F12
75 84 436	02	153	1-I10
75 84 451	02	083	1-F12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 84 485	02	041	1-D18
75 84 493	02	041	1-D18
75 84 501	02	041	1-D18
75 84 519	02	041	1-D18
75 84 527	02	041	1-D18
75 84 535	02	041	1-D18
75 84 543	02	041	1-D18
75 84 550	02	041	1-D18
75 84 568	02	041	1-D18
75 84 576	02	041	1-D18
75 84 584	02	041	1-D18
75 84 600	02	041	1-D18
75 84 618	02	041	1-D18
75 84 626	02	041	1-D18
75 84 634	02	041	1-D18
75 84 642	02	041	1-D18
75 84 659	02	041	1-D18
75 84 667	02	041	1-D18
75 84 675	02	041	1-D18
75 84 683	02	041	1-D18
75 84 691	02	041	1-D18
75 84 709	02	041	1-D18
75 84 717	02	041	1-D18
75 84 725	02	041	1-D18
75 84 733	02	041	1-D18
75 84 741	02	041	1-D18
75 84 758	02	041	1-D18
75 84 766	02	041	1-D18
75 84 790	02	149	1-I06
75 85 037	02	015	1-C16
75 85 037	02	153	1-I10
75 85 045	02	153	1-I10
75 85 086	02	027	1-D04
75 85 532	02	019	1-C20
75 85 540	03A	015	2-A16
75 85 581	02	079	1-F08
75 85 847	02	017	1-C18
75 86 019	02	095	1-F24
75 86 795	02	053	1-E06
75 86 837	02	019	1-C20
75 86 860	02	091	1-F20
75 86 878	02	091	1-F20
75 86 993	02	025	1-D02
75 87 173	02	095	1-F24
75 87 181	02	093	1-F22
75 87 181	02	095	1-F24
75 87 553	02	083	1-F12
75 88 056	02	017	1-C18
75 88 056	02	153	1-I10
75 88 320	02	013	1-C14
75 88 320	02	017	1-C18
75 88 320	02	021	1-C22
75 88 718	02	149	1-I06
75 88 916	02	153	1-I10
75 88 940	02	097	1-G02
75 88 957	02	097	1-G02
75 88 981	02	153	1-I10
75 89 039	02	153	1-I10
75 91 035	03A	113	2-E18
75 91 035	03A	117	2-E22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
75 91 167	09	011	5-L12
75 91 902	02	065	1-E18
75 99 418	02	137	1-H18
75 99 426	02	133	1-H14
75 99 426	02	135	1-H16
75 99 509	02	149	1-I06
76 00 729	08A	013	4-A14
76 00 737	08A	013	4-A14
76 00 828	08A	041	4-B18
76 00 828	08A	045	4-B22
76 00 828	08A	047	4-B24
76 00 836	08A	041	4-B18
76 00 836	08A	045	4-B22
76 00 836	08A	047	4-B24
76 01 313	08A	013	4-A14
76 01 321	08A	013	4-A14
76 01 354	08A	043	4-B20
76 01 362	08A	043	4-B20
76 01 370	08A	043	4-B20
76 01 370	08A	049	4-C02
76 01 388	08A	043	4-B20
76 01 388	08A	049	4-C02
76 01 479	08A	009	4-A10
76 01 495	08A	009	4-A10
76 01 552	08A	041	4-B18
76 01 560	08A	041	4-B18
76 01 701	08A	009	4-A10
76 01 719	08A	009	4-A10
76 01 727	08A	041	4-B18
76 01 735	08A	009	4-A10
76 01 792	08A	043	4-B20
76 01 800	08A	043	4-B20
76 03 103	08A	065	4-C18
76 03 111	08A	065	4-C18
76 03 459	08A	005	4-A06
76 12 146	08A	005	4-A06
76 15 495	08A	067	4-C20
76 15 511	08A	067	4-C20
76 15 545	08A	067	4-C20
76 15 552	08A	067	4-C20
76 51 896	08A	019	4-A20
78 20 228	08A	135	4-F16
78 20 244	08A	135	4-F16
78 29 609	03B	091	2-J20
78 29 609	03B	101	2-K06
78 29 609	03B	111	2-K16
78 29 617	03B	091	2-J20
78 29 617	03B	101	2-K06
78 29 617	03B	111	2-K16
78 29 625	03B	091	2-J20
78 29 625	03B	101	2-K06
78 29 625	03B	111	2-K16
78 29 633	03B	091	2-J20
78 29 633	03B	101	2-K06
78 29 633	03B	111	2-K16
78 29 641	03B	091	2-J20
78 29 641	03B	101	2-K06
78 29 641	03B	111	2-K16
78 29 666	03B	091	2-J20
78 29 666	03B	101	2-K06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
78 29 666	03B	111	2-K16
78 29 674	03B	091	2-J20
78 29 674	03B	101	2-K06
78 29 674	03B	111	2-K16
78 29 682	03B	091	2-J20
78 29 682	03B	101	2-K06
78 29 682	03B	111	2-K16
78 56 172	02	025	1-D02
78 56 172	02	035	1-D12
78 56 354	02	069	1-E22
78 56 354	02	159	1-I16
78 56 594	02	015	1-C16
78 57 998	02	095	1-F24
78 58 756	02	017	1-C18
78 59 903	02	149	1-I06
78 59 911	02	149	1-I06
78 71 361	02	089	1-F18
78 71 379	02	089	1-F18
78 72 302	03A	013	2-A14
78 72 328	02	071	1-E24
78 72 336	02	071	1-E24
78 72 351	02	071	1-E24
78 72 682	02	023	1-C24
78 72 807	02	085	1-F14
78 72 807	02	089	1-F18
78 73 508	08A	061	4-C14
78 73 508	08A	065	4-C18
78 73 516	08A	061	4-C14
78 73 516	08A	065	4-C18
78 73 714	08A	077	4-D06
78 73 722	08A	077	4-D06
78 73 771	08A	097	4-E02
78 73 789	08A	097	4-E02
78 73 789	08A	143	4-F24
78 74 118	08A	041	4-B18
78 74 118	08A	043	4-B20
78 74 118	08A	045	4-B22
78 74 118	08A	049	4-C02
78 74 118	08A	059	4-C12
78 74 126	08A	043	4-B20
78 74 126	08A	049	4-C02
78 74 134	08A	043	4-B20
78 74 134	08A	049	4-C02
78 74 142	08A	037	4-B14
78 74 159	08A	039	4-B16
78 74 167	08A	039	4-B16
78 74 381	08A	097	4-E02
78 74 381	08A	143	4-F24
78 74 498	03B	011	2-G12
78 74 498	03B	019	2-G20
78 74 498	03B	039	2-H16
78 74 498	03B	045	2-H22
78 74 498	03B	067	2-I20
78 74 498	03B	075	2-J04
78 74 746	08A	119	4-E24
78 74 746	08A	145	4-G02
78 74 753	08A	119	4-E24
78 74 753	08A	145	4-G02
78 74 761	08A	119	4-E24
78 74 761	08A	145	4-G02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
78 74 779	08A	119	4-E24
78 74 779	08A	145	4-G02
79 03 743	07	005	3-H06
79 04 089	07	005	3-H06
79 04 089	07	013	3-H14
79 04 097	06	005	3-F06
79 04 113	06	005	3-F06
79 07 918	03A	129	2-F10
79 10 474	08A	075	4-D04
79 10 516	02	063	1-E16
79 10 540	08A	061	4-C14
79 10 540	08A	063	4-C16
79 10 540	08A	065	4-C18
79 10 540	08A	067	4-C20
79 10 565	05	009	3-D10
79 10 599	07	009	3-H10
79 11 522	08B	183	5-H16
79 13 833	08A	123	4-F04
79 13 833	08B	181	5-H14
79 14 690	02	127	1-H08
79 15 200	04	027	3-B04
79 15 549	08A	015	4-A16
79 15 549	08A	019	4-A20
79 15 556	03A	061	2-C14
79 15 556	03A	127	2-F08
79 15 564	03A	005	2-A06
79 15 564	08B	085	5-D14
79 15 564	08B	099	5-E04
79 15 564	08B	113	5-E18
79 15 564	08B	127	5-F08
79 15 564	08B	201	5-I10
79 15 663	08A	075	4-D04
79 16 489	02	109	1-G14
79 16 489	03A	033	2-B10
79 16 489	03A	123	2-F04
79 16 489	08A	083	4-D12
79 16 489	08A	125	4-F06
79 16 489	08B	011	5-A12
79 16 489	08C	015	5-J16
79 16 497	02	037	1-D14
79 16 497	08B	077	5-D06
79 16 497	08B	091	5-D20
79 16 497	08B	105	5-E10
79 16 497	08B	119	5-E24
79 16 497	08B	159	5-G16
79 16 497	08B	183	5-H16
79 16 513	08A	081	4-D10
79 18 253	08A	107	4-E12
79 18 261	08B	177	5-H10
79 18 279	08A	107	4-E12
79 18 733	06	005	3-F06
79 19 483	08A	057	4-C10
79 21 885	03A	059	2-C12
79 22 206	08A	023	4-A24
79 22 206	08B	079	5-D08
79 22 206	08B	083	5-D12
79 22 206	08B	093	5-D22
79 22 206	08B	097	5-E02
79 22 206	08B	107	5-E12
79 22 206	08B	111	5-E16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 22 206	08B	121	5-F02
79 22 206	08B	125	5-F06
79 22 206	08B	133	5-F14
79 22 214	08B	181	5-H14
79 22 230	03A	033	2-B10
79 22 230	08A	093	4-D22
79 22 263	08A	073	4-D02
79 22 263	08A	075	4-D04
79 22 289	08A	015	4-A16
79 22 289	08A	019	4-A20
79 22 289	08A	069	4-C22
79 22 289	08B	017	5-A18
79 22 347	02	055	1-E08
79 22 347	03A	131	2-F12
79 22 347	06	009	3-F10
79 22 347	08C	011	5-J12
79 22 354	02	109	1-G14
79 22 354	03A	065	2-C18
79 22 354	03A	127	2-F08
79 22 354	08A	057	4-C10
79 22 354	08A	095	4-D24
79 22 354	08A	105	4-E10
79 22 354	08A	131	4-F12
79 22 354	08A	133	4-F14
79 22 354	08A	143	4-F24
79 22 354	08B	011	5-A12
79 22 354	08B	161	5-G18
79 22 354	08B	163	5-G20
79 22 354	08B	169	5-H02
79 22 354	08B	171	5-H04
79 22 354	08C	007	5-J08
79 22 354	08C	011	5-J12
79 22 362	03A	059	2-C12
79 22 362	08B	017	5-A18
79 22 362	08C	011	5-J12
79 22 370	02	045	1-D22
79 22 370	08B	009	5-A10
79 22 370	08C	011	5-J12
79 22 388	03A	031	2-B08
79 22 396	08B	085	5-D14
79 22 396	08B	087	5-D16
79 22 396	08B	099	5-E04
79 22 396	08B	101	5-E06
79 22 396	08B	113	5-E18
79 22 396	08B	115	5-E20
79 22 396	08B	127	5-F08
79 22 396	08B	129	5-F10
79 22 396	08B	153	5-G10
79 22 396	08B	163	5-G20
79 22 396	08B	173	5-H06
79 22 396	08B	203	5-I12
79 22 420	02	145	1-I02
79 22 420	02	157	1-I14
79 22 420	03A	127	2-F08
79 22 420	08A	073	4-D02
79 22 420	08A	075	4-D04
79 22 420	08A	109	4-E14
79 22 420	08A	117	4-E22
79 22 420	08A	131	4-F12
79 22 420	08B	131	5-F12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 22 420	08C	013	5-J14
79 22 420	08C	021	5-J22
79 22 420	08C	025	5-K02
79 22 420	08C	027	5-K04
79 22 420	08C	031	5-K08
79 22 420	08C	033	5-K10
79 22 438	02	145	1-I02
79 22 438	03A	027	2-B04
79 22 438	08A	133	4-F14
79 22 446	08A	055	4-C08
79 22 446	08A	107	4-E12
79 22 461	08C	021	5-J22
79 22 461	08C	025	5-K02
79 22 461	08C	027	5-K04
79 22 461	08C	031	5-K08
79 22 461	08C	033	5-K10
79 22 503	02	111	1-G16
79 22 503	02	113	1-G18
79 22 503	02	117	1-G22
79 22 503	02	119	1-G24
79 22 503	02	121	1-H02
79 22 503	02	123	1-H04
79 22 503	02	165	1-I22
79 22 503	02	167	1-I24
79 22 503	03A	067	2-C20
79 22 503	08B	135	5-F16
79 22 503	08B	137	5-F18
79 22 503	08B	139	5-F20
79 22 727	08A	153	4-G10
79 22 735	08C	009	5-J10
79 22 800	02	151	1-I08
79 22 800	03A	023	2-A24
79 22 800	03A	045	2-B22
79 22 800	03A	051	2-C04
79 22 800	05	021	3-D22
79 22 818	02	073	1-F02
79 22 818	02	075	1-F04
79 22 818	02	145	1-I02
79 22 818	03A	055	2-C08
79 22 818	03A	057	2-C10
79 22 818	03A	113	2-E18
79 22 818	08B	013	5-A14
79 22 859	03A	065	2-C18
79 22 891	02	049	1-E02
79 22 891	02	073	1-F02
79 22 891	02	133	1-H14
79 22 891	02	135	1-H16
79 22 891	02	145	1-I02
79 22 891	03A	065	2-C18
79 22 891	03A	067	2-C20
79 22 891	03A	119	2-E24
79 22 891	03A	127	2-F08
79 22 891	04	007	3-A08
79 22 891	04	053	3-C06
79 22 891	05	011	3-D12
79 22 891	05	013	3-D14
79 22 891	05	015	3-D16
79 22 891	05	021	3-D22
79 22 891	08A	037	4-B14
79 22 891	08A	055	4-C08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 22 891	08C	015	5-J16
79 22 909	03A	123	2-F04
79 22 933	02	145	1-I02
79 22 933	03A	013	2-A14
79 22 974	08A	119	4-E24
79 22 974	08A	149	4-G06
79 22 974	08A	151	4-G08
79 22 982	08A	119	4-E24
79 22 982	08A	145	4-G02
79 22 982	08A	149	4-G06
79 22 982	08A	151	4-G08
79 23 014	02	059	1-E12
79 23 014	02	061	1-E14
79 33 443	02	105	1-G10
79 33 443	02	151	1-I08
79 33 443	03A	047	2-B24
79 33 443	03A	111	2-E16
79 33 443	03A	115	2-E20
79 33 443	03A	121	2-F02
79 33 443	08A	055	4-C08
79 33 443	08A	145	4-G02
79 33 443	08A	147	4-G04
79 33 443	08B	013	5-A14
79 33 443	08C	015	5-J16
79 33 518	03A	113	2-E18
79 33 567	03A	115	2-E20
79 33 567	03A	121	2-F02
79 33 682	03A	111	2-E16
79 33 682	03A	117	2-E22
79 33 682	08C	007	5-J08
79 33 682	08C	011	5-J12
79 33 807	04	055	3-C08
79 33 815	08A	073	4-D02
79 33 823	04	029	3-B06
79 33 823	04	045	3-B22
79 33 823	04	055	3-C08
79 33 849	03A	007	2-A08
79 33 849	03A	009	2-A10
79 33 849	04	007	3-A08
79 33 849	08A	055	4-C08
79 33 856	05	013	3-D14
79 33 856	05	017	3-D18
79 34 102	08B	005	5-A06
79 34 136	08A	069	4-C22
79 34 136	08A	073	4-D02
79 34 136	08A	075	4-D04
79 34 136	08A	083	4-D12
79 34 300	03A	061	2-C14
79 34 318	04	055	3-C08
79 34 318	08B	017	5-A18
79 34 433	08A	067	4-C20
79 34 771	04	055	3-C08
79 34 797	04	029	3-B06
79 34 797	08B	085	5-D14
79 34 797	08B	099	5-E04
79 34 797	08B	113	5-E18
79 34 797	08B	127	5-F08
79 35 208	02	087	1-F16
79 35 984	04	055	3-C08
79 36 008	08B	005	5-A06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 36 008	08B	203	5-I12
79 36 016	04	055	3-C08
79 36 016	08B	159	5-G16
79 36 701	08A	107	4-E12
79 37 956	08A	073	4-D02
79 37 956	08A	075	4-D04
79 37 964	08A	069	4-C22
79 39 804	08A	015	4-A16
79 39 804	08A	019	4-A20
79 40 398	08C	015	5-J16
79 40 398	08C	025	5-K02
79 40 398	08C	027	5-K04
79 40 398	08C	031	5-K08
79 40 398	08C	033	5-K10
79 40 406	08C	007	5-J08
79 40 406	08C	011	5-J12
79 40 406	08C	015	5-J16
79 40 455	07	011	3-H12
79 40 463	07	005	3-H06
79 46 148	08B	151	5-G08
79 46 742	03A	061	2-C14
79 48 995	08A	107	4-E12
79 49 696	02	025	1-D02
79 49 712	04	005	3-A06
79 51 353	04	029	3-B06
79 51 353	04	055	3-C08
79 51 353	04	059	3-C12
79 51 379	04	029	3-B06
79 51 783	03A	111	2-E16
79 51 783	08A	035	4-B12
79 56 105	04	055	3-C08
79 56 154	04	013	3-A14
79 56 212	08B	151	5-G08
79 58 770	02	145	1-I02
79 58 770	08C	035	5-K12
79 58 861	02	137	1-H18
79 58 861	08A	021	4-A22
79 61 311	08A	055	4-C08
79 61 329	02	055	1-E08
79 61 337	03A	059	2-C12
79 61 634	08A	119	4-E24
79 61 634	08B	005	5-A06
79 61 642	08A	023	4-A24
79 61 642	08A	037	4-B14
79 61 642	08A	055	4-C08
79 61 642	08B	013	5-A14
79 61 642	08B	015	5-A16
79 61 642	08B	153	5-G10
79 61 642	08B	203	5-I12
79 61 642	08C	013	5-J14
79 61 659	03A	061	2-C14
79 61 683	03A	115	2-E20
79 61 691	02	077	1-F06
79 61 691	08A	013	4-A14
79 61 709	08C	009	5-J10
79 61 709	08C	015	5-J16
79 61 741	08B	159	5-G16
79 61 741	08B	169	5-H02
79 61 980	03A	121	2-F02
79 62 004	03A	123	2-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 63 135	03A	041	2-B18
79 63 135	04	007	3-A08
79 63 143	08B	159	5-G16
79 63 507	06	019	3-F20
79 63 507	06	021	3-F22
79 63 507	06	025	3-G02
79 63 515	02	143	1-H24
79 63 515	02	149	1-I06
79 63 523	02	095	1-F24
79 63 523	02	143	1-H24
79 63 531	02	095	1-F24
79 63 531	06	021	3-F22
79 63 549	02	095	1-F24
79 63 549	02	129	1-H10
79 63 556	02	129	1-H10
79 63 887	04	007	3-A08
79 63 895	02	057	1-E10
79 63 895	02	059	1-E12
79 63 895	02	061	1-E14
79 64 711	08A	067	4-C20
79 65 353	08A	123	4-F04
79 65 544	02	137	1-H18
79 65 544	08A	057	4-C10
79 65 569	04	015	3-A16
79 65 635	08A	009	4-A10
79 65 684	03A	067	2-C20
79 65 684	06	011	3-F12
79 65 684	08A	069	4-C22
79 65 684	08B	181	5-H14
79 65 767	02	117	1-G22
79 65 767	02	121	1-H02
79 65 767	02	123	1-H04
79 65 767	05	017	3-D18
79 65 775	08B	193	5-I02
79 65 809	08C	025	5-K02
79 65 809	08C	027	5-K04
79 65 809	08C	031	5-K08
79 65 833	08A	109	4-E14
79 65 833	08A	117	4-E22
79 65 833	08B	011	5-A12
79 67 581	08A	069	4-C22
79 67 581	08B	181	5-H14
79 67 763	08B	005	5-A06
79 67 771	08A	109	4-E14
79 67 771	08A	117	4-E22
79 67 789	02	113	1-G18
79 67 789	02	117	1-G22
79 67 789	02	119	1-G24
79 67 789	02	123	1-H04
79 67 789	02	165	1-I22
79 67 789	02	167	1-I24
79 67 789	06	009	3-F10
79 67 870	02	111	1-G16
79 67 870	02	115	1-G20
79 67 870	02	117	1-G22
79 67 870	02	119	1-G24
79 67 912	04	059	3-C12
79 67 938	02	011	1-C12
79 67 938	08A	057	4-C10
79 67 946	06	019	3-F20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-A23 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 67 946	06	025	3-G02
79 67 953	02	149	1-I06
79 67 953	05	021	3-D22
79 67 9[illegible]	06	021	3-F22
79 67 9[illegible]	06	023	3-F24
79 67 953	08A	007	4-A08
79 67 953	08A	037	4-B14
79 67 953	08A	055	4-C08
79 67 953	08A	057	4-C10
79 67 953	08A	063	4-C16
79 67 953	08A	081	4-D10
79 67 953	08A	131	4-F12
79 67 953	08A	133	4-F14
79 67 953	08C	017	5-J18
79 67 953	08C	027	5-K04
79 67 979	06	019	3-F20
79 67 979	06	025	3-G02
79 67 979	08C	017	5-J18
79 67 979	08C	019	5-J20
79 67 979	08C	025	5-K02
79 67 979	08C	027	5-K04
79 67 979	08C	031	5-K08
79 67 979	08C	033	5-K10
79 67 995	03A	065	2-C18
79 68 001	03A	069	2-C22
79 68 001	08A	105	4-E10
79 68 001	08A	131	4-F12
79 68 001	08A	133	4-F14
79 68 001	08B	015	5-A16
79 68 001	08B	017	5-A18
79 68 068	03B	007	2-G08
79 68 068	03B	021	2-G22
79 68 068	03B	023	2-G24
79 68 068	03B	025	2-H02
79 68 068	03B	035	2-H12
79 68 068	03B	049	2-I02
79 68 068	03B	053	2-I06
79 68 068	03B	065	2-I18
79 68 068	03B	079	2-J08
79 68 068	03B	083	2-J12
79 68 068	03B	091	2-J20
79 68 068	03B	101	2-K06
79 58 068	03B	111	2-K16
79 68 076	08A	069	4-C22
79 68 084	08B	009	5-A10
79 68 308	02	053	1-E06
79 68 308	02	055	1-E08
79 68 308	02	057	1-E10
79 68 308	02	073	1-F02
79 68 415	02	165	1-I22
79 68 415	06	009	3-F10
79 68 508	03A	127	2-F08
79 68 555	08B	015	5-A16
79 68 555	08C	007	5-J08
79 68 902	08A	111	4-E16
79 69 223	02	107	1-G12
79 69 223	02	113	1-G18
79 69 223	03A	023	2-A24
79 69 223	03A	025	2-B02
79 69 223	04	055	3-C08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 69 223	08A	063	4-C16
79 69 223	08A	095	4-D24
79 69 223	08A	113	4-E18
79 69 306	02	011	1-C12
79 69 306	06	005	3-F06
79 69 306	08A	007	4-A08
79 69 314	08A	119	4-E24
79 69 314	08A	133	4-F14
79 69 314	08A	149	4-G06
79 69 314	08A	151	4-G08
79 69 314	08B	015	5-A16
79 69 348	03A	111	2-E16
79 69 355	02	113	1-G18
79 69 355	03A	115	2-E20
79 69 363	03A	111	2-E16
79 69 363	03A	115	2-E20
79 69 363	06	021	3-F22
79 69 454	03A	111	2-E16
79 69 975	04	055	3-C08
79 70 015	03A	039	2-B16
79 70 015	04	013	3-A14
79 70 015	08C	025	5-K02
79 70 015	08C	027	5-K04
79 70 015	08C	031	5-K08
79 70 015	08C	033	5-K10
79 70 031	02	129	1-H10
79 70 031	02	131	1-H12
79 70 049	02	131	1-H12
79 70 049	02	143	1-H24
79 70 049	02	149	1-I06
79 70 049	06	021	3-F22
79 70 056	02	129	1-H10
79 70 056	02	131	1-H12
79 70 056	02	143	1-H24
79 70 056	08A	015	4-A16
79 70 056	08A	019	4-A20
79 70 064	02	043	1-D20
79 70 064	02	093	1-F22
79 70 064	02	147	1-I04
79 70 072	02	055	1-E08
79 70 072	02	093	1-F22
79 70 072	06	021	3-F22
79 70 080	02	131	1-H12
79 70 098	02	129	1-H10
79 70 098	02	131	1-H12
79 70 098	02	143	1-H24
79 70 098	02	147	1-I04
79 70 106	02	129	1-H10
79 70 106	02	131	1-H12
79 70 106	08C	025	5-K02
79 70 106	08C	027	5-K04
79 70 106	08C	031	5-K08
79 70 106	08C	033	5-K10
79 70 130	02	055	1-E08
79 70 130	02	135	1-H16
79 70 130	02	137	1-H18
79 70 130	02	149	1-I06
79 70 130	06	019	3-F20
79 70 130	06	023	3-F24
79 70 130	06	025	3-G02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 70 148	02	043	1-D20
79 70 148	02	045	1-D22
79 70 148	02	047	1-D24
79 70 148	02	049	1-E02
79 70 148	02	137	1-H18
79 70 148	02	149	1-I06
79 70 155	02	045	1-D22
79 70 155	02	047	1-D24
79 70 155	02	051	1-E04
79 70 155	02	137	1-H18
79 70 155	02	149	1-I06
79 70 163	02	043	1-D20
79 70 163	02	049	1-E02
79 70 163	04	057	3-C10
79 70 189	02	045	1-D22
79 70 262	08B	133	5-F14
79 70 262	08B	135	5-F16
79 70 262	08B	137	5-F18
79 70 262	08B	139	5-F20
79 70 262	08B	151	5-G08
79 70 288	04	005	3-A06
79 70 312	08B	133	5-F14
79 70 312	08B	135	5-F16
79 70 312	08B	137	5-F18
79 70 312	08B	139	5-F20
79 70 320	08B	101	5-E06
79 70 320	08B	115	5-E20
79 70 320	08B	129	5-F10
79 70 320	08B	185	5-H18
79 70 346	03A	037	2-B14
79 70 353	02	011	1-C12
79 70 353	02	163	1-I20
79 70 361	02	085	1-F14
79 70 403	08A	131	4-F12
79 70 411	08C	011	5-J12
79 70 429	02	111	1-G16
79 70 429	02	113	1-G18
79 70 429	02	117	1-G22
79 70 429	02	119	1-G24
79 70 429	02	121	1-H02
79 70 429	02	123	1-H04
79 70 429	02	165	1-I22
79 70 429	02	167	1-I24
79 70 460	03A	005	2-A06
79 70 478	08B	183	5-H16
79 70 536	02	055	1-E08
79 70 536	03A	061	2-C14
79 70 536	08A	095	4-D24
79 70 536	08B	131	5-F12
79 70 536	08B	153	5-G10
79 70 536	08B	187	5-H20
79 70 536	08B	195	5-I04
79 70 536	08B	203	5-I12
79 70 601	03A	069	2-C22
79 70 601	08A	105	4-E10
79 71 294	02	085	1-F14
79 71 294	02	091	1-F20
79 71 294	02	127	1-H08
79 71 294	03A	119	2-E24
79 71 294	08A	065	4-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 71 294	08B	141	5-F22
79 71 294	08B	163	5-G20
79 71 344	02	065	1-E18
79 71 344	08A	153	4-G10
79 71 344	08A	155	4-G12
79 71 344	08A	157	4-G14
79 71 344	08A	159	4-G16
79 71 344	08A	161	4-G18
79 71 351	08B	015	5-A16
79 71 393	08B	007	5-A08
79 71 393	08C	015	5-J16
79 71 401	08B	167	5-G24
79 71 500	03A	065	2-C18
79 71 518	03A	065	2-C18
79 71 518	08B	175	5-H08
79 71 658	02	113	1-G18
79 71 658	02	125	1-H06
79 71 658	02	133	1-H14
79 71 658	02	137	1-H18
79 71 658	03A	023	2-A24
79 71 658	03A	025	2-B02
79 71 658	03A	045	2-B22
79 71 658	03A	123	2-F04
79 71 658	08A	005	4-A06
79 71 658	08A	009	4-A10
79 71 658	08A	055	4-C08
79 71 658	08A	057	4-C10
79 71 658	08A	095	4-D24
79 71 708	03B	005	2-G06
79 71 708	03B	025	2-H02
79 71 708	03B	033	2-H10
79 71 708	03B	053	2-I06
79 71 708	03B	063	2-I16
79 71 708	03B	095	2-J24
79 71 708	03B	105	2-K10
79 71 708	03B	115	2-K20
79 71 724	08A	055	4-C08
79 71 757	03A	059	2-C12
79 71 757	08A	015	4-A16
79 71 757	08A	019	4-A20
79 71 765	02	011	1-C12
79 71 765	06	005	3-F06
79 71 765	06	017	3-F18
79 71 765	06	025	3-G02
79 71 864	02	063	1-E16
79 71 864	02	069	1-E22
79 71 864	02	077	1-F06
79 71 864	02	145	1-I02
79 71 864	03A	007	2-C20
79 71 864	03A	111	2-E16
79 71 864	08A	075	4-D04
79 71 864	08C	033	5-K10
79 71 872	02	055	1-E08
79 71 872	02	057	1-E10
79 71 872	02	059	1-E12
79 71 872	02	061	1-E14
79 71 872	02	105	1-G10
79 71 872	03A	111	2-E16
79 71 872	08B	159	5-G16
79 71 872	08B	163	5-G20

6-A24 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 71 872	08B	165	5-G22
79 71 872	08B	169	5-H02
79 71 872	08C	025	5-K02
79 71 872	08C	027	5-K04
79 71 872	08C	031	5-K08
79 71 872	08C	033	5-K10
79 71 880	02	043	1-D20
79 71 880	02	133	1-H14
79 71 880	02	145	1-I02
79 71 880	02	151	1-I08
79 71 880	03A	111	2-E16
79 71 880	05	011	3-D12
79 71 880	08A	019	4-A20
79 71 880	08A	145	4-G02
79 71 880	08A	147	4-G04
79 71 880	08A	149	4-G06
79 71 880	08A	153	4-G10
79 71 880	08A	155	4-G12
79 71 880	08A	157	4-G14
79 71 880	08A	159	4-G16
79 71 880	08A	161	4-G18
79 71 880	08C	027	5-K04
79 71 898	03A	111	2-E16
79 71 906	03A	111	2-E16
79 71 922	05	019	3-D20
79 71 922	08A	031	4-B08
79 71 922	08A	033	4-B10
79 71 922	08C	017	5-J18
79 71 922	08C	027	5-K04
79 72 029	03B	091	2-J20
79 72 029	03B	101	2-K06
79 72 029	03B	111	2-K16
79 72 045	08B	205	5-I14
79 72 045	08C	007	5-J08
79 72 052	08C	007	5-J08
79 72 078	08B	203	5-I12
79 72 078	08C	021	5-J22
79 72 086	08C	021	5-J22
79 72 094	08C	021	5-J22
79 72 144	03A	113	2-E18
79 72 144	03A	055	4-C08
79 72 193	08B	019	5-A20
79 72 201	08A	123	4-F04
79 72 201	08B	077	5-D06
79 72 201	08B	079	5-D08
79 72 201	08B	083	5-D12
79 72 201	08B	091	5-D20
79 72 201	08B	093	5-D22
79 72 201	08B	097	5-E02
79 72 201	08B	105	5-E10
79 72 201	08B	107	5-E12
79 72 201	08B	111	5-E16
79 72 201	08B	119	5-E24
79 72 201	08B	121	5-F02
79 72 201	08B	125	5-F06
79 72 219	03A	051	2-C04
79 72 219	03A	067	2-C20
79 72 219	08A	123	4-F04
79 72 284	03A	045	2-B22
79 72 318	08C	017	5-J18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 72 318	08C	019	5-J20
79 72 326	08C	007	5-J08
79 72 334	06	009	3-F10
79 72 359	02	055	1-E08
79 72 359	02	151	1-I08
79 72 441	03A	049	2-C02
79 72 441	05	005	3-D06
79 72 441	05	007	3-D08
79 72 441	08A	063	4-C16
79 72 441	08A	145	4-G02
79 72 441	08A	147	4-G04
79 72 441	08A	153	4-G10
79 72 441	08A	157	4-G14
79 72 441	08A	161	4-G18
79 72 466	04	005	3-A06
79 72 466	04	037	3-B14
79 72 466	08B	015	5-A16
79 72 474	03A	119	2-E24
79 72 474	08A	007	4-A08
79 72 474	08A	009	4-A10
79 72 482	08C	021	5-J22
79 72 490	02	051	1-E04
79 72 490	02	137	1-H18
79 72 490	03A	119	2-E24
79 72 490	08A	007	4-A08
79 72 490	08A	009	4-A10
79 72 490	08B	013	5-A14
79 72 490	08B	131	5-F12
79 72 490	08B	161	5-G18
79 72 490	08B	169	5-H02
79 72 490	08C	011	5-J12
79 72 490	08C	025	5-K02
79 72 490	08C	029	5-K06
79 72 490	08C	033	5-K10
79 72 508	08B	193	5-I02
79 72 516	08B	011	5-A12
79 72 516	08B	013	5-A14
79 72 516	08B	161	5-G18
79 72 516	08B	169	5-H02
79 72 573	03A	035	2-C08
79 72 573	03A	061	2-C14
79 72 581	06	005	3-F06
79 72 607	02	137	1-H18
79 72 607	08A	155	4-G12
79 72 623	02	097	1-G02
79 72 623	08B	159	5-G16
79 72 698	02	037	1-D14
79 72 730	08B	01[illegible]	5-A18
79 72 748	02	011	1-C12
79 72 755	08B	177	5-H10
79 72 763	02	109	1-G14
79 72 771	03A	037	2-B14
79 72 789	02	127	1-H08
79 72 789	08A	099	4-E04
79 72 797	02	137	1-H18
79 72 805	05	021	3-D22
79 72 813	08A	099	4-E04
79 72 813	08A	103	4-E08
79 72 821	08A	131	4-F12
79 72 821	08A	133	4-F14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 72 821	08B	163	5-G20
79 72 821	08B	167	5-G24
79 72 839	02	047	1-D24
79 72 888	08A	041	4-B18
79 72 888	08A	043	4-B20
79 72 888	08A	045	4-B22
79 72 888	08A	049	4-C02
79 72 896	08A	149	4-G06
79 72 946	08B	015	5-A16
79 73 001	08A	055	4-C08
79 73 001	08B	143	5-F24
79 73 001	08C	021	5-J22
79 73 050	08A	119	4-E24
79 73 050	08A	143	4-F24
79 73 050	08A	149	4-G06
79 73 050	08A	151	4-G08
79 73 159	02	137	1-H18
79 73 159	03A	023	2-A[illegible]
79 73 159	03A	025	2-B02
79 73 159	03A	127	2-F08
79 73 209	08A	119	4-E24
79 73 225	08A	095	4-D24
79 73 258	09	007	5-L08
79 73 365	02	073	1-F02
79 73 365	02	075	1-F04
79 73 365	02	151	1-I08
79 73 365	03A	013	2-A14
79 73 365	03A	033	2-B10
79 73 365	08A	093	4-D22
79 73 365	08A	111	4-E16
79 73 365	08A	123	4-F04
79 73 365	08C	025	5-K02
79 73 365	08C	027	5-K04
79 73 365	08C	031	5-K08
79 73 365	08C	033	5-K10
79 73 373	08A	077	4-D06
79 73 456	02	105	1-G10
79 73 456	02	107	1-G12
79 73 456	02	151	1-I08
79 73 472	08A	075	4-D04
79 73 480	08A	073	4-D02
79 73 522	02	077	1-F06
79 73 522	02	149	1-I06
79 73 522	02	151	1-I08
79 73 555	03A	113	2-E18
79 73 571	04	007	3-A08
79 73 589	02	145	1-I02
79 73 597	03A	049	2-C02
79 73 597	08A	153	4-G10
79 73 597	08A	155	4-G12
79 73 597	08A	157	4-G14
79 73 597	08A	159	4-G16
79 73 597	08A	161	4-G18
79 73 605	04	007	3-A08
79 73 613	02	063	1-E16
79 73 613	02	107	1-G12
79 73 647	08A	077	4-D06
79 73 704	03A	113	2-E18
79 73 704	08A	145	4-G02
79 73 704	08A	147	4-G04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 73 720	08B	175	5-H08
79 73 779	02	011	1-C12
79 73 894	08A	023	4-A24
79 73 894	08B	131	5-F12
79 73 951	08B	187	5-H20
79 73 969	08B	187	5-H20
79 73 977	05	015	3-D16
79 73 993	02	063	1-E16
79 74 017	08A	093	4-D22
79 74 025	03A	029	2-B06
79 74 249	08A	023	4-A24
79 74 249	08B	201	5-I10
79 74 264	02	113	1-G18
79 74 264	02	119	1-G24
79 74 264	02	123	1-H04
79 74 298	02	127	1-H08
79 74 298	08A	113	4-E18
79 74 298	08C	025	5-K02
79 74 298	08C	027	5-K04
79 74 298	08C	031	5-K08
79 74 298	08C	033	5-K10
79 74 306	02	071	1-E24
79 74 330	08B	161	5-G18
79 74 330	08B	169	5-H02
79 74 371	07	005	3-H06
79 74 447	02	133	1-H14
79 74 546	02	061	1-E14
79 74 546	02	065	1-E18
79 74 546	02	089	1-F18
79 74 637	03A	123	2-F04
79 74 645	03A	123	2-F04
79 74 652	03A	123	2-F04
79 74 660	03A	123	2-F04
79 74 678	03A	123	2-F04
79 74 678	08A	145	4-G02
79 74 678	08A	147	4-G04
79 74 678	08C	025	5-K02
79 74 678	08C	027	5-K04
79 74 678	08C	031	5-K08
79 74 678	08C	033	5-K10
79 74 694	06	021	3-F22
79 74 694	08B	181	5-H14
79 74 728	03A	035	2-B12
79 74 744	08B	153	5-G10
79 74 769	02	045	1-D22
79 74 769	02	047	1-D24
79 74 769	03A	005	2-A06
79 75 030	08C	017	5-J18
79 75 030	08C	019	5-J20
79 75 030	08C	025	5-K02
79 75 030	08C	027	5-K04
79 75 030	08C	031	5-K08
79 75 030	08C	033	5-K10
79 75 063	07	009	3-H10
79 75 196	02	081	1-F10
79 75 212	08A	061	4-C14
79 75 212	08A	063	4-C16
79 75 212	08A	065	4-C18
79 75 220	02	133	1-H14
79 75 220	03A	011	2-A12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 75 238	08C	017	5-J18
79 75 238	08C	027	5-K04
79 75 329	03A	037	2-B14
79 75 337	08B	017	5-A18
79 75 337	08B	019	5-A20
79 75 386	08B	011	5-A12
79 75 436	02	125	1-H06
79 75 444	02	127	1-H08
79 75 444	03A	069	2-C22
79 75 451	08A	113	4-E18
79 75 469	02	125	1-H06
79 75 469	02	137	1-H18
79 75 501	04	031	3-B08
79 75 519	03A	013	2-A14
79 75 543	02	043	1-D20
79 75 543	02	093	1-F22
79 75 543	08C	027	5-K04
79 75 543	08C	037	5-K14
79 75 717	07	009	3-H10
79 75 725	02	125	1-H06
79 75 741	02	133	1-H14
79 75 758	03A	067	2-C20
79 75 758	08A	023	4-A24
79 75 758	08A	125	4-F06
79 75 774	02	059	1-E12
79 75 774	08A	105	4-E10
79 75 774	08A	131	4-F12
79 75 774	08A	133	4-F14
79 75 774	08A	149	4-G06
79 75 782	08A	105	4-E10
79 75 782	08A	133	4-F14
79 75 790	08A	131	4-F12
79 76 921	08A	005	4-A06
79 76 939	03A	011	2-A12
79 76 947	08A	095	4-D24
79 76 988	08A	095	4-D24
79 76 988	08A	105	4-E10
79 77 234	02	147	1-I04
79 77 267	02	011	1-C12
79 77 283	02	071	1-E24
79 77 283	02	075	1-F04
79 77 283	08B	175	5-H08
79 77 390	08A	093	4-D22
79 77 390	08A	131	4-F12
79 77 416	02	055	1-E08
79 77 440	08C	017	5-J18
79 77 440	08C	027	5-K04
79 77 473	02	011	1-C12
79 77 499	08C	021	5-J22
79 77 499	08C	025	5-K02
79 77 499	08C	027	5-K04
79 77 499	08C	031	5-K06
79 77 499	08C	033	5-K10
79 77 507	04	013	3-A14
79 77 507	04	039	3-B16
79 77 580	02	133	1-H14
79 77 580	02	135	1-H16
79 77 580	06	019	3-F20
79 77 580	06	021	3-F22
79 77 622	08A	025	4-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 77 796	08A	089	4-D18
79 77 796	08A	131	4-F12
79 77 796	08A	133	4-F14
79 77 796	08B	087	5-D16
79 77 796	08B	101	5-E06
79 77 796	08B	115	5-E20
79 77 796	08B	129	5-F10
79 77 804	08A	143	4-F24
79 77 812	06	007	3-F08
79 77 812	07	011	3-H12
79 77 846	08B	161	5-G18
79 77 846	08B	173	5-H06
79 77 879	02	063	1-E16
79 77 879	02	077	1-F06
79 77 903	03A	065	2-C18
79 77 903	08B	191	5-H24
79 78 042	03A	055	2-C08
79 78 224	02	009	1-C10
79 78 224	02	011	1-C12
79 78 307	06	005	3-F06
79 78 323	06	005	3-F06
79 78 356	03A	065	2-C18
79 78 380	02	151	1-I08
79 78 620	02	113	1-G18
79 78 620	02	163	1-I20
79 78 620	02	165	1-I22
79 78 729	02	071	1-E24
79 78 794	05	005	3-D06
79 78 794	06	005	3-F06
79 79 123	04	037	3-B14
79 79 131	02	009	1-C10
79 79 248	05	019	3-D20
79 79 255	03A	007	2-A08
79 79 255	03A	009	2-A10
79 79 396	07	009	3-H10
79 79 487	07	011	3-H12
79 79 503	02	113	1-G18
79 79 503	02	167	1-I24
79 79 511	05	005	3-D06
79 79 511	05	017	3-D18
79 79 511	07	005	3-H06
79 79 511	07	009	3-H10
79 79 511	07	013	3-H14
79 79 511	07	015	3-H16
79 79 552	02	011	1-C12
79 81 921	08A	083	4-D12
79 81 921	08A	113	4-E18
79 81 921	08B	153	5-G10
79 81 921	08B	203	5-I12
79 82 002	07	011	3-H12
79 82 044	07	009	3-H10
79 82 150	07	009	3-H10
79 82 168	07	009	3-H10
79 82 549	06	005	3-F06
79 82 564	06	005	3-F06
79 82 812	07	009	3-H10
79 82 945	04	055	3-C08
79 85 161	02	097	1-G02
79 85 161	02	099	1-G04
79 85 161	02	101	1-G06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 85 161	02	163	1-I20
79 85 179	02	149	1-I06
79 93 462	08B	021	5-A22
79 94 510	08A	141	4-F22
79 94 882	08A	141	4-F22
79 94 890	08A	141	4-F22
80 00 622	02	097	1-G02
80 05 910	02	081	1-F10
80 05 910	02	083	1-F12
80 05 928	02	081	1-F10
80 05 928	02	083	1-F12
80 05 928	04	015	3-A16
80 05 928	04	041	3-B18
80 05 936	02	083	1-F12
80 07 486	02	085	1-F14
80 07 486	02	089	1-F18
80 19 572	03A	065	2-C18
80 19 598	03A	065	2-C18
80 19 713	02	151	1-I08
80 19 713	03A	013	2-A14
80 19 713	08B	159	5-G16
80 19 713	08C	025	5-K02
80 19 713	08C	027	5-K04
80 19 713	08C	031	5-K08
80 19 713	08C	033	5-K10
80 19 721	02	151	1-I08
80 19 739	08A	019	4-A20
80 19 895	02	083	1-F12
80 19 895	03A	005	2-A06
80 19 895	03A	035	2-B12
80 19 895	03A	039	2-B16
80 19 895	03A	041	2-B18
80 19 895	03A	045	2-B22
80 19 895	08A	061	4-C14
80 19 895	08A	065	4-C18
80 19 895	08A	067	4-C20
80 19 895	08A	113	4-E18
80 19 903	02	139	1-H20
80 19 903	02	145	1-I02
80 19 903	04	039	3-B16
80 19 903	08B	177	5-H10
80 19 911	06	021	3-F22
80 19 911	08B	181	5-H14
80 19 911	08C	021	5-J22
80 19 911	08C	025	5-K02
80 19 929	02	103	1-G08
80 19 929	02	105	1-G10
80 19 929	02	107	1-G12
80 19 929	03A	017	2-A18
80 19 945	02	025	1-D02
80 19 945	02	043	1-D20
80 19 945	02	045	1-D22
80 19 945	02	049	1-E02
80 19 945	03A	013	2-A14
80 19 945	03A	047	2-B24
80 19 945	04	013	3-A14
80 19 945	08C	025	5-K02
80 19 945	08C	027	5-K04
80 19 945	08C	031	5-K08
80 19 945	08C	033	5-K10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 19 978	02	097	1-G02
80 21 917	02	097	1-G02
80 21 917	05	015	3-D16
80 21 925	05	017	3-D18
80 21 933	02	105	1-G10
80 21 933	02	107	1-G12
80 29 548	03A	045	2-B22
80 29 910	08A	111	4-E16
80 29 936	02	085	1-F14
80 29 936	02	091	1-F20
80 29 936	08A	015	4-A16
80 29 936	08A	017	4-A18
80 29 936	08A	021	4-A22
80 29 944	02	151	1-I08
80 29 944	04	031	3-B08
80 29 944	08B	017	5-A18
80 29 944	08B	019	5-A20
80 29 951	02	027	1-D04
80 29 951	02	087	1-F16
80 29 951	02	093	1-F22
80 29 951	02	095	1-F24
80 29 951	02	111	1-G16
80 29 951	02	113	1-G18
80 29 951	02	117	1-G22
80 29 951	02	119	1-G24
80 29 951	02	121	1-H02
80 29 951	02	123	1-H04
80 29 951	02	141	1-H22
80 29 951	02	165	1-I22
80 29 951	02	167	1-I24
80 29 951	03A	029	2-B06
80 29 951	03A	041	2-B18
80 29 951	03A	067	2-C20
80 29 951	03A	115	2-E20
80 29 951	04	017	3-A18
80 29 951	05	015	3-D16
80 29 951	05	017	3-D18
80 29 951	08B	005	5-A06
80 29 951	08B	135	5-F16
80 29 951	08B	137	5-F18
80 29 951	08B	161	5-G18
80 29 951	08B	163	5-G20
80 29 951	08C	011	5-J12
80 29 951	08C	013	5-J14
80 29 951	08C	021	5-J22
80 29 969	04	025	3-B02
80 29 969	08A	077	4-D06
80 29 985	02	009	1-C10
80 29 985	02	011	1-C12
80 29 985	02	039	1-D16
80 29 985	02	111	1-G16
80 29 985	02	113	1-G18
80 29 985	02	117	1-G22
80 29 985	02	121	1-H02
80 29 985	02	123	1-H04
80 29 985	02	147	1-I04
80 29 985	02	165	1-I22
80 29 985	02	167	1-I24
80 29 985	03A	007	2-A08
80 29 985	03A	009	2-A10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 29 985	04	011	3-A12
80 29 985	04	013	3-A14
80 29 985	04	015	3-A16
80 29 985	04	019	3-A20
80 29 985	04	029	3-B06
80 29 985	04	031	3-B08
80 29 985	04	039	3-B16
80 29 985	04	055	3-C08
80 29 985	05	011	3-D12
80 29 985	06	021	3-F22
80 29 985	08A	077	4-D06
80 29 985	08B	091	5-D20
80 29 985	08B	105	5-E10
80 29 985	08C	019	5-J20
80 29 993	04	007	3-A08
80 29 993	05	019	3-D20
80 30 009	02	149	1-I06
80 30 017	03A	059	2-C12
80 30 017	07	009	3-H10
80 30 017	08B	181	5-H14
80 30 017	08B	197	5-I06
80 30 017	08B	199	5-I08
80 30 058	06	011	3-F12
80 30 066	05	019	3-D20
80 34 142	02	035	1-D12
80 34 456	02	025	1-D02
80 34 472	04	005	3-A06
80 34 662	02	013	1-C14
80 34 761	02	013	1-C14
80 34 761	02	027	1-D04
80 34 928	02	035	1-D12
80 34 985	04	021	3-A22
80 46 542	02	085	1-F14
80 46 542	02	089	1-F18
80 46 559	02	085	1-F14
80 46 559	02	089	1-F18
80 46 617	02	053	1-E06
80 47 722	05	019	3-D20
80 47 839	04	019	3-A20
80 47 854	04	021	3-A22
80 48 829	02	085	1-F14
80 49 553	04	013	3-A14
80 49 702	04	027	3-B04
80 49 876	04	011	3-A12
80 55 980	08A	069	4-C22
80 55 980	08A	083	4-D12
80 55 998	08A	077	4-D06
80 56 160	05	005	3-D06
80 57 259	02	085	1-F14
80 57 259	02	089	1-F18
80 57 697	04	029	3-B06
80 59 073	02	085	1-F14
80 59 073	02	089	1-F18
80 59 230	08A	015	4-A16
80 59 230	08A	019	4-A20
80 59 230	08A	083	4-D12
80 59 230	08A	149	4-G06
80 59 248	08B	183	5-H16
80 59 248	08B	187	5-H20
80 59 396	02	071	1-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 59 396	02	075	1-F04
80 59 396	02	151	1-I08
80 59 396	03A	041	2-B18
80 59 396	08A	111	4-E16
80 59 412	02	105	1-G10
80 59 412	08B	165	5-G22
80 59 420	04	055	3-C08
80 59 487	04	029	3-B06
80 59 487	04	055	3-C08
80 59 529	08A	065	4-C18
80 59 529	08A	067	4-C20
80 59 529	08A	157	4-G14
80 59 529	08A	159	4-G16
80 59 529	08A	161	4-G18
80 59 537	03A	049	2-C02
80 59 537	08A	063	4-C16
80 59 537	08A	153	4-G10
80 59 537	08A	155	4-G12
80 59 537	08A	157	4-G14
80 59 537	08B	163	5-G20
80 59 545	03A	059	2-C12
80 59 545	03A	113	2-E18
80 59 552	02	145	1-I02
80 59 552	03A	113	2-E18
80 59 552	08A	055	4-C08
80 59 552	08A	081	4-D10
80 59 560	08A	093	4-D22
80 59 560	08B	161	5-G18
80 59 578	03A	069	2-C22
80 59 578	03A	113	2-E18
80 59 578	03A	119	2-E24
80 59 578	08A	009	4-A10
80 59 578	08A	083	4-D12
80 59 578	08A	131	4-F12
80 59 578	08B	019	5-A20
80 59 578	08C	011	5-J12
80 59 578	08C	021	5-J22
80 59 578	08C	025	5-K02
80 59 578	08C	029	5-K06
80 59 578	08C	031	5-K08
80 59 578	08C	033	5-K10
80 59 586	02	133	1-H14
80 59 594	02	067	1-E20
80 59 602	08C	007	5-J08
80 59 826	08B	169	5-H02
80 69 015	02	085	1-F14
80 73 090	03A	065	2-C18
80 73 090	08A	105	4-E10
80 73 108	06	005	3-F06
80 73 108	06	019	3-F20
80 73 108	08C	017	5-J18
80 73 108	08C	019	5-J20
80 73 108	08C	025	5-K02
80 73 108	08C	029	5-K06
80 73 108	08C	031	5-K08
80 73 108	08C	033	5-K10
80 73 124	06	005	3-F06
80 73 124	06	021	3-F22
80 73 223	02	021	1-C22
80 73 223	02	139	1-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 73 249	02	097	1-G02
80 73 249	02	099	1-G04
80 73 249	02	101	1-G06
80 73 249	02	163	1-I20
80 73 249	06	021	3-F22
80 73 249	08C	019	5-J20
80 73 249	08C	025	5-K02
80 73 249	08C	031	5-K08
80 73 512	06	021	3-F22
80 73 512	08C	021	5-J22
80 73 512	08C	025	5-K02
80 73 512	08C	029	5-K06
80 73 512	08C	031	5-K08
80 73 512	08C	033	5-K10
80 73 538	07	011	3-H12
80 74 098	03A	049	2-C02
80 74 098	08A	149	4-G06
80 74 098	08A	155	4-G12
80 74 098	08A	157	4-G14
80 74 098	08A	159	4-G16
80 74 098	08A	161	4-G18
80 74 106	02	119	1-G24
80 74 106	02	165	1-I22
80 74 106	02	167	1-I24
80 74 106	05	017	3-D18
80 74 106	08C	025	5-K02
80 74 106	08C	029	5-K06
80 74 106	08C	031	5-K08
80 74 106	08C	033	5-K10
80 74 270	02	127	1-H08
80 74 270	03A	041	2-B18
80 74 288	02	061	1-E14
80 74 288	02	085	1-F14
80 74 288	02	089	1-F18
80 74 288	03A	039	2-B16
80 74 288	03A	055	2-C08
80 74 288	05	009	3-D10
80 74 288	05	015	3-D16
80 74 288	05	019	3-D20
80 74 288	06	021	3-F22
80 74 288	08A	055	4-C08
80 74 288	08B	151	5-G08
80 74 288	08B	203	5-I12
80 74 288	08C	019	5-J20
80 82 919	02	017	1-C18
80 82 919	02	037	1-D14
80 82 919	05	011	3-D12
80 82 927	06	019	3-F20
80 82 927	06	025	3-G02
80 82 935	02	009	1-C10
80 82 935	02	027	1-D04
80 82 935	04	037	3-B14
80 82 935	05	011	3-D12
80 82 935	05	017	3-D18
80 82 935	06	021	3-F22
80 82 935	08A	007	4-A08
80 82 935	08B	181	5-H14
80 82 943	04	005	3-A06
80 82 943	04	037	3-B14
80 82 943	04	043	3-B20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 82 943	06	023	3-F24
80 82 943	08A	055	4-C08
80 82 943	08C	019	5-J20
80 82 943	08C	025	5-K02
80 82 943	08C	031	5-K08
80 82 943	08C	033	5-K10
80 82 950	03A	019	2-A20
80 82 950	03A	021	2-A22
80 82 968	02	121	1-H02
80 82 968	02	123	1-H04
80 82 968	02	141	1-H22
80 82 968	04	005	3-A06
80 82 968	04	013	3-A14
80 82 968	04	015	3-A16
80 82 968	04	037	3-B14
80 82 968	04	039	3-B16
80 82 968	05	017	3-D18
80 82 968	06	023	3-F24
80 82 968	08C	019	5-J20
80 82 976	02	013	1-C14
80 82 976	02	081	1-F10
80 82 976	02	149	1-I06
80 82 976	08B	177	5-H10
80 82 984	04	037	3-B14
80 82 992	04	037	3-B14
80 83 156	06	025	3-G02
80 83 222	06	005	3-F06
80 83 933	04	011	3-A12
80 83 933	04	013	3-A14
80 83 933	04	019	3-A20
80 83 933	04	037	3-B14
80 83 933	08B	177	5-H10
80 83 941	02	009	1-C10
80 83 941	02	011	1-C12
80 83 941	02	149	1-I06
80 83 941	04	027	3-B04
80 83 958	04	011	3-A12
80 83 958	04	013	3-A14
80 83 958	04	039	3-B16
80 83 974	04	027	3-B04
80 83 974	08C	017	5-J18
80 83 974	08C	029	5-K06
80 84 014	02	111	1-G16
80 84 014	02	113	1-G18
80 84 014	02	115	1-G20
80 84 014	02	117	1-G22
80 84 030	02	121	1-H02
80 84 030	02	123	1-H04
80 84 055	02	125	1-H06
80 84 451	07	009	3-H10
80 97 750	08C	005	5-J06
80 97 750	08C	035	5-K12
80 97 750	08C	037	5-K14
80 97 859	02	079	1-F08
80 97 859	05	013	3-D14
80 97 859	05	015	3-D16
80 97 875	02	145	1-I02
80 97 883	08A	037	4-B14
80 97 883	08A	077	4-D06
80 97 933	02	145	1-I02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-B03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 97 941	02	015	1-C16
80 98 030	08C	013	5-J14
80 98 048	02	069	1-E22
80 98 089	03A	007	2-A08
80 98 089	03A	009	2-A10
80 98 113	03A	007	2-A08
80 98 113	03A	009	2-A10
80 98 113	08C	019	5-J20
80 98 113	08C	025	5-K02
80 98 113	08C	031	5-K08
80 98 113	08C	035	5-K12
80 98 139	02	043	1-D20
80 98 394	02	009	1-C10
81 09 571	02	027	1-D04
81 09 647	04	013	3-A14
81 09 647	04	063	3-C16
81 17 020	02	157	1-I14
81 17 038	02	157	1-I14
81 17 715	04	023	3-A24
81 23 143	02	017	1-C18
81 23 168	02	079	1-F08
81 23 176	02	025	1-D02
81 23 721	02	017	1-C18
81 23 721	02	021	1-C22
81 23 721	02	081	1-F10
81 23 721	02	083	1-F12
81 23 721	02	141	1-H22
81 23 739	02	099	1-G04
81 23 739	02	101	1-G06
81 23 747	02	101	1-G06
81 23 747	02	165	1-J22
81 23 747	02	167	1-J24
81 23 788	02	021	1-C22
81 23 895	02	071	1-E24
81 23 895	02	075	1-F04
81 23 903	02	039	1-D16
81 23 903	02	149	1-I06
81 24 133	04	011	3-A12
81 24 141	02	021	1-C22
81 24 141	02	039	1-D16
81 24 141	02	105	1-G10
81 24 141	02	141	1-H22
81 24 141	02	149	1-I06
81 24 158	02	149	1-I08
81 24 182	04	013	3-A14
81 25 007	02	079	1-F08
81 25 023	02	095	1-F24
81 25 049	02	025	1-D02
81 25 064	02	027	1-D04
81 25 064	02	163	1-J20
81 25 148	02	071	1-E24
81 25 148	02	075	1-F04
81 25 163	02	039	1-D16
81 25 163	02	053	1-E06
81 25 189	02	015	1-C16
81 25 189	02	017	1-C18
81 25 189	02	021	1-C22
81 25 189	02	143	1-H24
81 25 189	04	013	3-A14
81 25 189	04	019	3-A20
81 25 197	02	021	1-C22
81 25 197	02	037	1-D14
81 25 197	02	079	1-F08
81 25 197	02	081	1-F10
81 25 197	02	083	1-F12
81 25 197	02	139	1-H20
81 25 197	02	143	1-H24
81 25 197	02	151	1-I08
81 25 197	04	011	3-A12
81 25 197	04	013	3-A14
81 25 197	04	039	3-B16
81 25 205	02	039	1-D16
81 25 205	02	079	1-F08
81 25 205	02	081	1-F10
81 25 205	02	083	1-F12
81 25 205	02	139	1-H20
81 25 205	02	141	1-H22
81 25 213	02	017	1-C18
81 25 213	04	011	3-A12
81 25 239	02	025	1-D02
81 25 247	02	025	1-D02
81 25 262	02	025	1-D02
81 25 262	02	139	1-H20
81 25 262	02	141	1-H22
81 25 304	02	037	1-D14
81 28 969	02	105	1-G10
81 31 963	02	113	1-G18
81 31 989	02	103	1-G08
81 31 989	02	105	1-G10
81 31 989	02	107	1-G12
81 32 219	02	113	1-G18
81 32 227	02	149	1-I06
81 32 235	02	103	1-G08
81 32 235	02	105	1-G10
81 32 235	02	107	1-G12
81 45 534	02	113	1-G18
81 45 542	02	149	1-I06
81 45 559	02	103	1-G08
81 45 559	02	107	1-G12
81 48 215	06	019	3-F20
81 48 744	02	147	1-I04
81 50 500	02	021	1-C22
81 50 534	02	021	1-C22
81 50 559	02	021	1-C22
81 51 045	02	085	1-F14
81 51 045	02	089	1-F18
81 51 052	02	085	1-F14
81 51 060	02	111	1-G16
81 51 060	02	113	1-G18
81 51 060	02	115	1-G20
81 51 060	02	117	1-G22
81 51 060	05	019	3-D20
81 51 086	02	021	1-C22
81 51 177	02	071	1-E24
81 51 177	02	075	1-F04
81 51 219	03A	031	2-B08
81 51 227	02	043	1-D20
81 51 227	02	045	1-D22
81 51 227	02	047	1-D24
81 51 227	02	049	1-E02
81 51 227	02	097	1-G02
81 51 227	02	105	1-G10
81 51 227	02	107	1-G12
81 51 227	03A	029	2-B06
81 51 227	08C	021	5-J22
81 51 227	08C	025	5-K02
81 51 227	08C	027	5-K04
81 51 227	08C	031	5-K08
81 51 227	08C	035	5-K12
81 51 235	02	009	1-C10
81 51 235	02	011	1-C12
81 51 235	02	111	1-G16
81 51 235	02	113	1-G18
81 51 235	02	117	1-G22
81 51 235	02	121	1-H02
81 51 235	02	123	1-H04
81 51 235	03A	007	2-A08
81 51 235	03A	009	2-A10
81 51 235	03A	037	2-B14
81 51 235	03A	039	2-B16
81 51 235	03A	041	2-B18
81 51 235	04	007	3-A08
81 51 235	04	015	3-A16
81 51 235	04	041	3-B18
81 51 235	08A	113	4-E18
81 51 235	08B	151	5-G08
81 51 235	08C	021	5-J22
81 51 243	02	009	1-C10
81 51 243	03A	007	2-A08
81 51 243	03A	009	2-A10
81 51 243	05	009	3-D10
81 51 326	02	041	1-D18
81 51 326	02	085	1-F14
81 51 326	02	091	1-F20
81 51 474	04	007	3-A08
81 51 474	05	019	3-D20
81 51 482	06	017	3-F18
81 51 482	06	025	3-G02
81 51 482	07	009	3-H10
81 51 482	07	013	3-H14
81 51 482	07	015	3-H16
81 52 381	04	015	3-A16
81 52 381	04	039	3-B16
81 53 611	02	103	1-G08
81 53 611	02	143	1-H24
82 04 661	08A	005	4-A06
82 04 760	03A	115	2-E20
82 04 760	08A	005	4-A06
82 04 760	08A	009	4-A10
82 04 760	08A	067	4-C20
82 05 452	08A	005	4-A06
82 05 858	08A	067	4-C20
82 05 981	08A	005	4-A06
82 05 999	08A	007	4-A08
82 06 096	08A	009	4-A10
82 06 096	08A	037	4-B14
82 06 096	08A	047	4-B24
82 06 096	08A	053	4-C06
82 06 096	08A	055	4-C08
82 06 203	02	145	1-I02
82 06 369	08A	061	4-C14
82 06 369	08A	063	4-C16
82 06 369	08A	065	4-C18
82 06 393	08A	065	4-C18
82 06 393	08A	063	4-C16
82 06 476	08A	061	4-C14
82 06 476	08A	063	4-C16
82 06 476	08A	065	4-C18
82 07 573	08A	061	4-C14
82 07 573	08A	063	4-C16
82 07 573	08A	065	4-C18
82 07 581	08A	061	4-C14
82 07 581	08A	063	4-C16
82 07 581	08A	065	4-C18
82 09 009	08C	009	5-J10
82 09 413	08A	119	4-E24
82 09 694	08A	061	4-C14
82 09 694	08A	065	4-C18
82 09 694	08A	143	4-F24
82 09 876	08A	009	4-A10
82 09 884	08A	009	4-A10
82 09 926	08A	013	4-A14
82 09 934	08A	013	4-A14
82 09 967	08A	013	4-A14
82 09 967	08A	041	4-B18
82 11 294	08A	059	4-C12
82 11 344	08A	051	4-C04
82 15 683	08A	059	4-C12
82 15 683	08A	081	4-D10
82 15 899	08A	061	4-C14
82 15 907	08A	061	4-C14
82 17 432	08A	061	4-C14
82 17 432	08A	065	4-C18
82 17 440	08A	061	4-C14
82 17 440	08A	065	4-C18
82 18 661	08A	039	4-B16
82 24 933	08A	061	4-C14
82 24 933	08A	065	4-C18
82 25 872	08A	009	4-A10
82 27 738	08A	115	4-E24
82 27 738	08A	149	4-G06
82 27 738	08A	151	4-G08
82 28 702	08A	009	4-A10
82 28 843	08A	013	4-A14
82 33 645	08A	143	4-F24
82 33 686	08A	013	4-A14
82 33 736	08A	081	4-D10
82 35 178	02	133	1-H14
82 35 178	03A	005	2-A08
82 35 178	03A	115	2-E20
82 35 178	08A	013	4-A14
82 35 178	08A	057	4-C10
82 35 178	08A	093	4-D22
82 35 178	08A	105	4-E10
82 35 178	08A	119	4-E24
82 35 178	08A	121	4-F02
82 35 178	08A	127	4-F08
82 35 178	08A	129	4-F10
82 35 178	08B	131	5-F12
82 35 178	08B	161	5-G18

6-B04 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 35 178	08B	169	5-H02
82 35 178	08C	009	5-J10
82 36 606	08A	069	4-C22
82 36 606	08A	073	4-D02
82 36 762	08A	107	4-E12
82 36 762	08A	115	4-E20
82 37 265	08A	107	4-E12
82 37 265	08A	115	4-E20
82 38 107	08A	083	4-D12
82 38 115	08A	083	4-D12
82 38 123	08A	083	4-D12
82 38 154	08A	007	4-A08
82 39 162	08A	007	4-A08
82 39 170	08A	007	4-A08
82 39 733	03A	131	2-F12
82 41 093	08A	067	4-C20
82 41 101	08A	067	4-C20
82 41 119	08A	067	4-C20
82 41 291	08A	067	4-C20
82 41 325	03A	115	2-E20
82 41 325	03A	131	2-F12
82 41 325	08A	053	4-C06
82 41 994	08A	069	4-C22
82 41 994	08A	073	4-D02
82 41 994	08A	075	4-D04
82 42 398	08A	005	4-A06
82 42 406	08A	005	4-A06
82 42 554	08A	005	4-A06
82 43 578	08A	061	4-C14
82 43 578	08A	063	4-C16
82 43 578	08A	065	4-C18
82 43 578	08A	067	4-C20
82 43 651	08A	067	4-C20
82 43 669	08A	067	4-C20
82 44 964	08A	111	4-E16
82 44 964	08A	121	4-F02
82 45 326	08A	089	4-D18
82 45 888	08A	043	4-B20
82 45 888	08A	049	4-C02
82 45 888	08C	009	5-J10
82 47 801	08A	121	4-F02
82 47 801	08A	129	4-F10
82 48 270	08A	015	4-A16
82 48 270	08A	019	4-A20
82 48 288	08A	015	4-A16
82 48 288	08A	019	4-A20
82 48 337	08A	015	4-A16
82 48 494	08A	015	4-A16
82 48 502	08A	015	4-A16
82 48 577	08A	015	4-A16
82 48 585	08A	015	4-A16
82 48 593	08A	015	4-A16
82 48 601	08A	015	4-A16
82 48 619	08A	015	4-A16
82 48 627	08A	019	4-A20
82 48 635	08A	015	4-A16
82 48 775	08A	015	4-A16
82 49 161	08A	063	4-C16
82 49 526	08A	015	4-A16
82 49 526	08A	019	4-A20
82 49 633	08A	015	4-A16
82 49 633	08A	019	4-A20
82 49 682	08A	015	4-A16
82 49 724	08A	015	4-A16
82 49 740	08A	015	4-A16
82 49 757	08A	015	4-A16
82 49 872	08A	013	4-A14
82 49 880	08A	013	4-A14
82 49 914	08A	083	4-D12
82 49 922	08A	083	4-D12
82 49 955	08A	115	4-E20
82 49 963	08A	115	4-E20
82 51 217	08A	077	4-D06
82 51 639	08A	107	4-E12
82 51 746	08A	093	4-D22
82 51 314	08A	077	4-D06
82 52 363	08A	077	4-D06
82 52 552	04	007	3-A08
82 52 563	05	019	3-D20
82 52 763	08A	077	4-D06
82 52 868	08A	077	4-D06
82 53 155	08A	041	4-B18
82 53 163	08A	041	4-B18
82 55 242	08A	041	4-B18
82 56 372	08A	069	4-C22
82 56 372	08A	073	4-D02
82 56 380	08A	069	4-C22
82 56 380	08A	073	4-D02
82 57 511	08A	107	4-E12
82 57 511	08A	115	4-E20
82 57 750	08A	081	4-D10
82 58 428	08A	131	4-F12
82 59 061	08A	007	4-A08
82 59 855	08A	117	4-E22
82 59 863	08A	117	4-E22
82 60 135	08A	115	4-E20
82 60 143	08A	115	4-E20
82 60 192	08A	043	4-B20
82 60 218	08A	043	4-B20
82 60 218	08A	045	4-B22
82 60 218	08A	049	4-C02
82 60 218	08A	045	4-B22
82 60 226	08A	043	4-B20
82 60 226	08A	045	4-B22
82 60 226	08A	049	4-C02
82 60 234	08A	043	4-B20
82 60 234	08A	045	4-B22
82 60 234	08A	049	4-C02
82 60 242	08A	043	4-B20
82 60 242	08A	045	4-B22
82 60 242	08A	049	4-C02
82 60 747	08A	037	4-B14
82 61 299	08A	055	4-C08
82 61 364	08A	055	4-C08
82 61 547	08A	037	4-B14
82 61 638	08A	115	4-E20
82 61 646	08A	115	4-E20
82 62 008	08A	037	4-B14
82 62 354	08A	037	4-B14
82 62 537	08A	041	4-B18
82 62 537	08A	043	4-B20
82 62 557	08A	045	4-B22
82 62 537	08A	049	4-C02
82 62 545	08A	081	4-D10
82 62 602	08B	005	5-A06
82 62 610	08B	005	5-A06
82 62 750	08A	069	4-C22
82 62 750	08A	073	4-D02
82 62 750	08A	075	4-D04
82 62 768	08A	069	4-C22
82 62 768	08A	073	4-D02
82 62 768	08A	075	4-D04
82 62 958	08A	007	4-A08
82 62 966	08A	037	4-B14
82 62 974	08A	049	4-C10
82 62 974	08B	133	5-F14
82 64 962	08A	095	4-D24
82 64 962	08A	143	4-F24
82 66 017	08A	055	4-C08
82 66 025	08A	055	4-C08
82 66 454	08A	005	4-A06
82 66 462	08A	005	4-A06
82 66 579	08A	131	4-F12
82 66 744	08A	131	4-F12
82 66 777	08A	131	4-F12
82 66 926	08A	057	4-C10
82 66 785	08A	131	4-F12
82 66 843	08A	015	4-A16
82 66 843	08A	019	4-A20
82 66 876	08A	007	4-A08
82 66 900	08A	131	4-F12
82 67 098	03A	005	2-A06
82 67 098	03A	067	2-C20
82 67 130	08A	075	4-D04
82 67 205	03A	005	2-A06
82 67 205	08A	019	4-A20
82 67 205	08B	017	5-A18
82 67 296	08A	007	4-A08
82 67 395	08A	059	4-C12
82 67 403	08A	095	4-D24
82 67 601	08A	055	4-C08
82 67 890	08A	117	4-E22
82 69 425	08A	107	4-E12
82 69 425	08A	117	4-E22
82 69 433	08A	107	4-E12
82 69 453	08A	115	4-E20
82 69 987	08A	087	4-D16
82 72 130	08A	087	4-D16
82 72 197	08A	039	4-B16
82 72 205	08A	039	4-B16
82 72 494	08A	037	4-B14
82 72 635	08A	053	4-C06
82 73 633	08A	107	4-E12
82 73 641	08A	107	4-E12
82 73 815	08A	057	4-C10
82 74 037	08A	065	4-C18
82 74 045	08A	065	4-C18
82 74 185	08A	057	4-C10
82 74 219	08A	037	4-B14
82 74 235	08A	037	4-B14
82 74 243	08A	037	4-B14
82 74 359	08A	037	4-B14
82 74 367	08A	037	4-B14
82 74 383	08A	005	4-A06
82 74 425	08A	013	4-A14
82 74 433	08A	015	4-A16
82 74 433	08A	019	4-A20
82 74 573	08A	127	4-F08
82 74 599	08A	005	4-A06
82 74 607	08A	005	4-A06
82 74 631	08A	039	4-B16
82 74 649	08A	039	4-B16
82 74 706	08A	037	4-B14
82 74 854	08A	059	4-C12
82 74 862	08A	059	4-C12
82 74 946	08A	055	4-C08
82 75 358	08A	115	4-E20
82 75 364	08A	115	4-E20
82 75 877	08A	055	4-C08
82 75 885	08A	109	4-E14
82 75 885	08A	117	4-E22
82 75 893	08A	109	4-E14
82 75 893	08A	117	4-E22
82 76 057	08A	037	4-B14
82 76 065	08A	037	4-B14
82 76 107	08A	037	4-B14
82 76 479	08A	121	4-F02
82 76 503	08A	129	4-F10
82 76 511	08A	129	4-F10
82 76 529	08A	129	4-F10
82 76 776	08A	087	4-D16
82 77 519	08A	069	4-C22
82 77 527	08A	069	4-C22
82 77 667	08A	095	4-D24
82 77 667	08A	097	4-E02
82 78 343	08A	055	4-C08
82 78 509	08A	055	4-C08
82 78 558	03A	113	2-E18
82 78 558	03A	121	2-F02
82 78 558	08A	037	4-B14
82 78 863	08A	077	4-D06
82 78 947	08A	127	4-F08
82 78 996	08A	121	4-F02
82 79 226	08A	009	4-A10
82 79 457	08A	009	4-A10
82 83 533	08A	005	4-A06
82 83 590	08A	015	4-A16
82 83 590	08A	019	4-A20
82 83 608	08A	015	4-A16
82 83 608	08A	019	4-A20
82 83 655	08A	041	4-B18
82 83 665	08A	043	4-B20
82 83 715	08A	091	4-D20
82 83 715	08A	093	4-D22
82 83 772	08A	077	4-D06
82 83 780	08A	077	4-D06
82 83 798	04	029	3-B06
82 83 806	08A	081	4-D10
82 83 848	08A	081	4-D10
82 83 855	08A	081	4-D10
82 83 921	08A	041	4-B18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-B05 Numerical register / Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 83 921	08A	045	4-B22
82 83 939	08A	041	4-B18
82 83 939	08A	045	4-B22
82 83 947	08A	005	4-A06
82 84 127	08A	135	4-F16
82 84 135	08A	135	4-F16
82 84 143	08A	137	4-F18
82 84 150	08A	139	4-F20
82 84 168	08A	135	4-F16
82 84 176	08A	135	4-F16
82 84 184	08A	137	4-F18
82 84 200	08A	111	4-E16
82 84 200	08A	143	4-F24
82 84 218	08A	111	4-E16
82 84 218	08A	143	4-F24
82 84 291	08A	135	4-F16
82 84 309	08A	139	4-F20
82 84 317	08A	135	4-F16
82 84 325	08A	137	4-F18
82 84 473	08A	139	4-F20
82 84 481	08A	139	4-F20
82 84 499	08A	139	4-F20
82 84 507	08A	139	4-F20
82 84 754	08A	139	4-F20
82 84 762	08A	139	4-F20
82 84 770	08A	139	4-F20
82 84 879	08A	139	4-F20
82 84 887	08A	139	4-F20
82 84 952	08A	135	4-F16
82 84 960	08A	135	4-F16
82 84 978	08A	137	4-F18
82 84 986	08A	135	4-F16
82 84 994	08A	135	4-F16
82 85 207	08A	137	4-F18
82 85 231	08A	135	4-F16
82 85 231	08A	137	4-F18
82 85 231	08A	139	4-F20
82 85 231	08A	141	4-F22
82 85 249	08A	141	4-F22
82 85 256	08A	141	4-F22
82 85 264	08A	141	4-F22
82 85 371	08A	135	4-F16
82 85 389	08A	135	4-F16
82 85 397	08A	137	4-F18
82 85 405	08A	139	4-F20
82 85 462	08A	041	4-B18
82 85 462	08A	043	4-B20
82 85 470	08A	041	4-B18
82 85 470	08A	043	4-B20
82 85 488	08A	135	4-F16
82 85 488	08A	137	4-F18
82 85 488	08A	139	4-F20
82 85 496	08A	135	4-F16
82 85 496	08A	137	4-F18
82 85 496	08A	139	4-F20
82 85 744	08A	085	4-D14
82 85 843	08A	077	4-D06
82 85 900	08A	057	4-C10
82 86 296	03A	005	2-A06
82 86 296	03A	035	2-B12
82 86 296	08A	009	4-A10
82 86 296	08A	055	4-C08
82 86 296	08B	013	5-A14
82 86 296	08B	015	5-A16
82 86 304	08A	041	4-B18
82 86 304	08A	043	4-B20
82 86 304	08A	045	4-B22
82 86 304	08A	049	4-C02
82 86 312	08A	109	4-E14
82 86 395	08A	037	4-B14
82 86 403	08A	037	4-B14
82 86 429	08A	015	4-A16
82 86 429	08A	019	4-A20
82 86 528	08A	055	4-C08
82 86 551	08A	077	4-D06
82 86 759	08A	129	4-F10
82 86 767	08A	129	4-F10
82 86 833	08A	067	4-C20
82 86 841	08A	067	4-C20
82 86 858	08A	083	4-D12
82 86 874	08A	121	4-F02
82 86 890	08A	129	4-F10
82 86 973	08A	107	4-E12
82 86 981	08A	107	4-E12
82 87 153	08A	075	4-D04
82 87 179	08A	093	4-D22
82 87 187	08A	093	4-D22
82 87 286	08A	045	4-B22
82 87 286	08A	049	4-C02
82 87 294	08A	007	4-A08
82 87 302	08A	007	4-A08
82 87 310	08A	119	4-E24
82 87 328	08A	119	4-E24
82 87 732	08A	107	4-E12
82 87 740	08A	107	4-E12
82 87 757	08A	109	4-E14
82 87 765	08A	109	4-E14
82 87 773	08A	109	4-E14
82 87 781	08A	109	4-E14
82 87 799	08A	109	4-E14
82 87 997	08A	043	4-B20
82 88 003	08A	043	4-B20
82 88 029	08A	019	4-A20
82 88 144	08A	077	4-D06
82 88 151	08A	119	4-E24
82 88 169	08A	119	4-E24
82 88 193	08A	015	4-A16
82 88 193	08A	019	4-A20
82 88 243	08A	019	4-A20
82 88 516	08A	107	4-E12
82 88 524	08A	107	4-E12
82 88 599	08A	015	4-A16
82 88 714	08A	061	4-C14
82 88 722	08A	061	4-C14
82 88 763	08A	065	4-C18
82 88 771	08A	065	4-C18
82 88 789	08A	037	4-B14
82 89 266	08A	119	4-E24
82 89 423	08A	037	4-B14
82 89 738	08A	081	4-D10
82 89 753	08A	081	4-D10
82 89 803	08A	121	4-F02
82 89 803	08A	129	4-F10
82 89 852	08A	085	4-D14
82 89 878	08A	081	4-D10
82 89 886	08A	081	4-D10
82 89 894	08A	081	4-D10
82 89 993	08A	009	4-A10
83 00 469	04	005	3-A06
83 00 469	04	057	3-C10
83 00 725	04	013	3-A14
83 00 725	04	039	3-B16
83 07 688	04	057	3-C10
83 08 215	02	013	1-C14
83 08 215	02	157	1-I14
83 08 223	02	013	1-C14
83 08 223	02	157	1-I14
83 08 231	02	013	1-C14
83 08 231	02	157	1-I14
83 08 249	02	013	1-C14
83 08 249	02	157	1-I14
83 08 256	02	013	1-C14
83 08 256	02	157	1-I14
83 08 264	02	013	1-C14
83 08 264	02	157	1-I14
83 08 272	02	013	1-C14
83 08 272	02	157	1-I14
83 08 280	02	013	1-C14
83 08 280	02	157	1-I14
83 08 298	02	013	1-C14
83 08 298	02	157	1-I14
83 08 306	02	013	1-C14
83 08 306	02	157	1-I14
83 08 371	04	037	3-B14
83 08 389	04	053	3-C06
83 08 850	02	079	1-F08
83 11 904	03A	059	2-C12
83 14 395	04	059	3-C12
83 14 445	04	059	3-C12
83 14 452	04	059	3-C12
83 14 494	02	077	1-F06
83 15 475	02	055	1-E08
83 15 558	05	013	3-D14
83 15 582	04	055	3-C08
83 17 828	02	043	1-D20
83 17 828	02	087	1-F16
83 17 828	02	093	1-F22
83 17 828	08C	029	5-K06
83 17 828	08C	037	5-K14
83 17 869	04	055	3-C08
83 17 893	02	043	1-D20
83 17 919	02	043	1-D20
83 17 919	02	045	1-D22
83 17 919	02	049	1-E02
83 18 339	02	049	1-E02
83 19 915	02	059	1-E12
83 19 915	02	061	1-E14
83 19 915	02	069	1-E22
83 19 915	02	073	1-F02
83 19 915	02	075	1-F04
83 20 319	02	069	1-E22
83 20 319	02	073	1-F02
83 20 319	02	075	1-F04
83 21 044	02	043	1-D20
83 21 044	02	045	1-D22
83 21 044	02	049	1-E02
83 21 051	02	043	1-D20
83 21 051	02	045	1-D22
83 21 051	02	049	1-E02
83 22 390	02	067	1-E20
83 22 539	02	067	1-E20
83 22 554	02	067	1-E20
83 22 570	02	067	1-E20
83 22 588	02	067	1-E20
83 22 604	02	067	1-E20
83 22 612	02	067	1-E20
83 22 927	02	059	1-E12
83 22 927	02	061	1-E14
83 22 927	02	133	1-H14
83 22 927	02	157	1-I14
83 23 008	02	077	1-F06
83 23 024	02	067	1-E20
83 23 214	02	097	1-G02
83 23 941	02	055	1-E08
83 24 006	02	067	1-E20
83 24 006	02	069	1-E22
83 24 022	02	069	1-E22
83 24 030	02	069	1-E22
83 24 139	04	059	3-C12
83 25 151	04	039	3-B16
83 25 334	04	045	3-B22
83 25 342	04	047	3-B24
83 25 656	02	057	1-E10
83 25 656	02	059	1-E12
83 25 656	02	151	1-I08
83 25 722	04	045	3-B22
83 25 797	04	059	3-C12
83 26 480	02	043	1-D20
83 26 704	02	075	1-F04
83 26 712	02	017	1-C18
83 26 712	02	021	1-C22
83 26 712	02	081	1-F10
83 26 712	02	083	1-F12
83 26 712	02	103	1-G08
83 26 712	02	149	1-I06
83 26 712	02	157	1-I14
83 27 561	02	043	1-D20
83 27 678	02	043	1-D20
83 28 346	02	059	1-E12
83 28 346	02	061	1-E14
83 28 726	02	113	1-G18
83 28 726	02	117	1-G22
83 28 726	02	165	1-I22
83 28 726	02	167	1-I24
83 28 783	02	109	1-G14
83 28 817	08B	143	5-F24
83 29 153	02	109	1-G14
83 30 268	02	125	1-H06

6-B06 Numerical register / Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
83 30 268	02	129	1-H10
83 30 268	02	131	1-H12
83 30 268	08C	025	5-K02
83 30 268	08C	029	5-K06
83 30 268	08C	031	5-K08
83 30 268	08C	035	5-K12
83 30 896	02	127	1-H08
83 32 520	02	077	1-F06
83 32 587	02	055	1-E08
83 32 587	02	075	1-F04
83 32 595	04	051	3-C04
83 33 007	02	055	1-E08
83 33 197	04	029	3-B06
83 33 700	02	067	1-E20
83 34 005	02	087	1-F16
83 34 005	02	093	1-F22
83 34 005	08C	029	5-K06
83 34 005	08C	037	5-K14
83 34 187	02	067	1-E20
83 34 821	02	045	1-D22
83 34 880	02	055	1-E08
83 34 971	02	119	1-G24
83 34 971	02	123	1-H04
83 35 002	04	031	3-B08
83 35 614	02	089	1-F18
83 36 406	02	121	1-H02
83 36 406	02	123	1-H04
83 36 406	02	155	1-I12
83 36 406	02	163	1-I20
83 36 877	02	153	1-I10
83 37 859	02	127	1-H08
83 37 875	02	127	1-H08
83 38 394	02	067	1-E20
83 38 402	02	067	1-E20
83 38 410	02	067	1-E20
83 38 436	02	067	1-E20
83 38 766	04	055	3-C08
83 38 899	04	005	3-A06
83 39 608	02	009	1-C10
83 39 632	02	009	1-C10
83 39 657	02	125	1-H06
83 39 921	06	023	3-F24
83 41 257	04	013	3-A14
83 41 604	04	027	3-B04
83 41 612	04	027	3-B04
83 41 620	04	027	3-B04
83 41 638	04	027	3-B04
83 43 014	04	013	3-A14
83 44 335	04	013	3-A14
83 44 335	04	063	3-C16
83 44 772	04	021	3-A22
83 46 470	02	021	1-C22
83 46 868	02	035	1-D12
83 46 884	02	013	1-C14
83 46 900	02	013	1-C14
83 46 926	02	013	1-C14
83 46 942	02	013	1-C14
83 46 983	02	029	1-D06
83 46 983	02	031	1-D08
83 47 122	02	027	1-D04
83 47 262	02	013	1-C14
83 47 270	02	035	1-D12
83 47 577	02	029	1-D06
83 47 577	02	031	1-D08
83 47 650	02	035	1-D12
83 47 676	02	035	1-D12
83 48 047	02	021	1-C22
83 48 401	02	013	1-C14
83 48 534	02	025	1-D02
83 48 609	02	037	1-D14
83 49 938	02	035	1-D12
83 49 946	02	035	1-D12
83 49 953	02	035	1-D12
83 49 961	02	035	1-D12
83 50 076	02	161	1-I18
83 50 076	03A	015	2-A16
83 50 076	03A	137	2-F18
83 50 936	02	035	1-D12
83 50 944	02	013	1-C14
83 50 977	02	035	1-D12
83 50 985	02	035	1-D12
83 50 993	02	035	1-D12
83 51 009	02	035	1-D12
83 52 502	02	021	1-C22
83 52 692	02	141	1-H22
83 52 692	02	143	1-H24
83 52 692	02	159	1-I16
83 53 484	02	085	1-F14
83 53 484	02	089	1-F18
83 55 315	02	035	1-D12
83 55 323	02	035	1-D12
83 55 331	02	035	1-D12
83 55 349	02	035	1-D12
83 55 356	02	035	1-D12
83 55 364	02	035	1-D12
83 56 396	02	013	1-C14
83 56 420	02	097	1-G02
83 56 859	02	009	1-C10
83 56 859	02	011	1-C12
83 56 859	06	021	3-F22
83 56 859	08C	019	5-J20
83 56 859	08C	025	5-K02
83 56 859	08C	031	5-K08
83 56 859	08C	035	5-K12
83 56 917	02	011	1-C12
83 56 917	02	025	1-D02
83 57 345	02	085	1-F14
83 57 345	02	089	1-F18
83 57 378	02	085	1-F14
83 57 543	02	081	1-F10
83 57 691	02	069	1-E22
83 57 709	02	069	1-E22
83 57 709	02	159	1-I16
83 57 832	02	093	1-F22
83 59 275	02	053	1-E06
83 59 937	02	081	1-F10
83 59 937	02	083	1-F12
83 60 240	02	015	1-C16
83 60 414	02	087	1-F16
83 60 463	02	083	1-F12
83 60 463	02	089	1-F18
83 60 943	02	097	1-G02
83 60 943	02	099	1-G04
83 61 362	02	141	1-H22
83 62 287	03A	019	2-A20
83 62 287	03A	021	2-A22
83 62 295	02	013	1-C14
83 62 352	02	159	1-I16
83 62 386	02	035	1-D12
83 64 416	02	075	1-F04
83 64 416	02	083	1-F12
83 65 058	02	035	1-D12
83 66 007	02	021	1-C22
83 66 262	02	149	1-I06
83 66 262	02	153	1-I10
83 66 791	02	151	1-I08
83 66 791	08C	015	5-J16
83 66 791	08C	035	5-K12
83 67 856	02	121	1-H02
83 67 856	02	123	1-H04
83 67 864	02	147	1-I04
83 69 829	02	025	1-D02
83 69 985	02	141	1-H22
83 71 551	04	007	3-A08
83 71 551	08A	019	4-A20
83 71 650	02	125	1-H06
83 73 078	04	029	3-B06
83 73 714	04	029	3-B06
83 73 714	04	055	3-C08
83 74 357	04	053	3-C06
83 74 555	04	029	3-B06
83 74 555	04	055	3-C08
83 74 639	02	153	1-I10
83 74 753	04	029	3-B06
83 75 024	04	029	3-B06
83 75 156	04	029	3-B06
83 75 172	04	031	3-B08
83 75 339	04	029	3-B06
83 75 404	04	055	3-C08
83 75 925	04	055	3-C08
83 75 974	04	059	3-C12
83 75 990	04	029	3-B06
83 78 275	04	029	3-B06
83 78 275	04	055	3-C08
83 78 275	04	059	3-C12
83 78 630	03B	013	2-G14
83 78 630	03B	041	2-H18
83 78 630	03B	071	2-I24
83 80 214	04	005	3-A06
83 80 214	04	057	3-C10
83 80 982	04	005	3-A06
83 84 323	02	161	1-I18
83 84 323	02	163	1-I20
83 86 351	02	045	1-D22
83 86 450	02	111	1-G16
83 86 450	02	113	1-G18
83 86 450	02	115	1-G20
83 86 450	02	117	1-G22
83 86 450	02	119	1-G24
83 86 450	02	155	1-I12
83 86 450	02	161	1-I18
83 86 450	02	163	1-I20
83 87 672	02	111	1-G16
83 87 672	02	161	1-I18
83 89 512	02	141	1-H22
83 89 512	02	159	1-I16
83 92 003	02	157	1-I14
84 00 350	08B	149	5-G06
84 00 350	08B	177	5-H10
84 00 350	08B	203	5-I12
84 01 150	08A	107	4-E12
84 03 305	08A	073	4-D02
84 03 305	08A	075	4-D04
84 03 396	08A	073	4-D02
84 03 396	08A	075	4-D04
84 03 529	08A	073	4-D02
84 03 529	08A	075	4-D04
84 05 870	08B	143	5-F24
84 06 142	08A	023	4-A24
84 06 142	08A	121	4-F02
84 07 488	08A	129	4-F10
84 07 488	08A	121	4-F02
84 07 488	08A	129	4-F10
84 07 933	04	007	3-A08
84 07 983	05	019	3-D20
84 07 983	08B	151	5-G08
84 08 361	08A	083	4-D12
84 08 460	08A	073	4-D02
84 08 460	08A	075	4-D04
84 08 478	08A	073	4-D02
84 08 478	08A	075	4-D04
84 08 882	08A	123	4-F04
84 08 882	08B	015	5-A16
84 08 882	08B	183	5-H16
84 10 961	08B	087	5-D16
84 10 961	08B	183	5-H16
84 10 961	08B	189	5-H22
84 10 961	08B	195	5-I04
84 13 429	08B	183	5-H16
84 13 742	08A	075	4-D04
84 15 820	08A	075	4-D04
84 15 887	08A	075	4-D04
84 15 929	08A	075	4-D04
84 15 994	08A	075	4-D04
84 16 000	08A	075	4-D04
84 25 035	08B	151	5-G08
84 25 043	08B	151	5-G08
84 25 100	08B	151	5-G08
84 25 126	08B	151	5-G08
84 26 173	08B	151	5-G08
84 26 199	03A	013	2-A14
84 28 203	08B	023	5-A24
84 28 211	08B	023	5-A24
84 28 229	08B	023	5-A24
84 28 237	08B	023	5-A24
84 28 997	08B	081	5-D10
84 28 997	08B	097	5-E02
84 28 997	08B	111	5-E16
84 28 997	08B	125	5-F06
84 29 441	08A	083	4-D12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, heating and ventilation	5-A02
8C		5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
84 29 441	08B	205	5-I14
84 38 400	08B	023	5-A24
84 38 467	08B	175	5-H08
84 38 467	08B	177	5-H10
84 41 925	08A	075	4-D04
84 44 614	08A	075	4-D04
84 44 614	08B	161	5-G18
84 44 614	08B	169	5-H02
84 45 637	09	013	5-L14
84 45 785	08A	073	4-D02
84 45 785	08A	075	4-D04
84 47 997	08A	075	4-D04
84 48 029	08A	075	4-D04
84 48 169	08A	075	4-D04
84 51 478	08A	069	4-C22
84 51 478	08A	073	4-D02
84 51 486	08A	069	4-C22
84 51 486	08A	073	4-D02
84 51 817	08A	069	4-C22
84 51 817	08A	073	4-D02
84 51 825	08A	069	4-C22
84 51 825	08A	073	4-D02
84 51 825	08A	077	4-D06
84 51 957	08A	077	4-D06
84 51 957	08A	083	4-D12
84 51 965	08A	083	4-D12
84 51 973	08A	077	4-D06
84 51 973	08A	083	4-D12
84 51 981	08A	077	4-D06
84 51 981	08A	081	4-D10
84 51 981	08A	083	4-D12
84 52 252	08A	077	4-D06
84 52 252	08A	081	4-D10
84 52 252	08A	083	4-D12
84 52 898	08B	011	5-A12
84 52 898	08B	081	5-D10
84 52 898	08B	095	5-D24
84 52 898	08B	109	5-E14
84 52 898	08B	123	5-F04
84 52 898	08B	131	5-F12
84 53 227	08A	081	4-D10
84 53 227	08A	083	4-D12
84 53 755	08A	069	4-C22
84 53 755	08A	075	4-D04
84 54 258	08A	069	4-C22
84 54 522	08B	143	5-F24
84 56 006	08A	069	4-C22
84 56 006	08A	073	4-D02
84 56 006	08A	075	4-D04
84 56 808	08A	069	4-C22
84 56 808	08A	073	4-D02
84 56 808	08A	075	4-D04
84 57 541	08B	177	5-H10
84 57 566	08A	069	4-C22
84 57 566	08A	073	4-D02
84 57 566	08A	075	4-D04
84 58 598	08B	165	5-G22
84 58 713	08A	069	4-C22
84 58 721	08A	039	4-C22
84 59 48[illegible]	03A	039	4-D16
84 59 497	08A	039	4-B16
84 59 505	08A	051	4-C04
84 59 513	08A	009	4-A10
84 60 172	08A	077	4-D06
84 61 063	08B	023	5-A24
84 61 675	03A	049	2-C02
84 61 675	08A	069	4-C22
84 61 675	08A	073	4-D02
84 61 675	08A	077	4-D06
84 61 675	08A	155	4-G12
84 61 675	08A	157	4-G14
84 61 675	08A	159	4-G16
84 61 675	08A	161	4-G18
84 64 539	08A	077	4-D06
84 67 870	08B	193	5-I02
84 67 888	08B	193	5-I02
84 68 134	08B	183	5-H16
84 68 175	08B	133	5-F14
84 68 175	08B	135	5-F16
84 68 183	08B	133	5-F14
84 68 183	08B	135	5-F16
84 68 191	08B	133	5-F14
84 68 191	08B	135	5-F16
84 68 209	08B	133	5-F14
84 68 209	08B	135	5-F16
84 70 767	08A	077	4-D06
84 70 767	08A	083	4-D12
84 74 553	08A	069	4-C22
84 74 553	08A	073	4-D02
84 76 061	08B	143	5-F24
84 76 079	08B	143	5-F24
84 76 301	08A	061	4-C14
84 76 301	08A	065	4-C18
84 76 301	08A	067	4-C20
84 77 507	08B	133	5-F14
84 77 507	08B	135	5-F16
84 77 507	08B	137	5-F18
84 77 507	08B	139	5-F20
84 78 364	08A	083	4-D12
84 78 554	08A	085	4-D14
84 83 893	08B	131	5-F12
84 83 893	08B	183	5-H16
84 86 292	08A	137	4-F18
84 86 292	08A	139	4-F20
84 86 300	08A	137	4-F18
84 86 300	08A	139	4-F20
84 86 409	08A	081	4-D10
84 86 409	08A	083	4-D12
84 87 225	08A	139	4-F20
84 87 266	08A	135	4-F16
84 87 274	08A	135	4-F16
84 87 282	08A	137	4-F18
84 87 597	08A	083	4-D12
84 87 605	08A	083	4-D12
84 87 621	08A	135	4-F16
84 87 621	08A	137	4-F18
84 87 621	08A	139	4-F20
84 87 712	08A	137	4-F18
84 87 753	08A	135	4-F16
84 87 761	08A	135	4-F16
84 87 779	08A	141	4-F22
84 87 787	08A	141	4-F22
84 88 447	08B	085	5-D14
84 88 447	08B	087	5-D16
84 88 447	08B	099	5-E04
84 88 447	08B	101	5-E06
84 88 447	08B	113	5-E18
84 88 447	08B	115	5-E20
84 88 447	08B	127	5-F08
84 88 447	08B	129	5-F10
84 90 575	08B	023	5-A24
84 90 625	08B	023	5-A24
84 90 641	08B	023	5-A24
84 97 471	03A	113	2-E18
84 97 471	03A	117	2-E22
84 97 471	08A	009	4-A10
84 99 204	08B	177	5-H10
84 99 204	08B	179	5-H12
84 99 204	08B	181	5-H14
84 99 204	08B	195	5-I04
84 99 204	08B	197	5-I06
84 99 204	08B	199	5-I08
84 99 238	08B	195	5-I04
84 99 238	08B	197	5-I06
84 99 238	08B	199	5-I08
85 00 613	03A	037	2-B14
85 00 613	03A	051	2-C04
85 00 613	03A	059	2-C12
85 01 264	03A	037	2-B14
85 02 643	03A	067	2-C20
85 03 161	03B	019	2-G20
85 03 161	03B	045	2-H22
85 03 161	03B	077	2-J06
85 03 286	03B	095	2-J24
85 03 286	03B	105	2-K10
85 03 286	03B	113	2-K18
85 03 286	08A	153	4-G10
85 03 286	08A	155	4-G12
85 03 286	08A	157	4-G14
85 03 286	08A	159	4-G16
85 03 286	08A	161	4-G18
85 03 286	08A	163	4-G20
85 04 029	03A	041	2-B18
85 04 144	03A	047	2-B24
85 06 925	09	011	5-L12
85 06 941	09	011	5-L12
85 07 873	08A	039	4-B16
85 08 392	03A	047	2-B24
85 08 848	03A	047	2-B24
85 09 002	02	043	1-D20
85 09 002	02	083	1-F12
85 09 002	02	105	1-G10
85 09 002	02	107	1-G12
85 09 002	02	151	1-I08
85 09 002	03A	047	2-B24
85 09 002	03A	055	2-C08
85 09 127	03A	115	2-E20
85 09 697	03A	037	2-B14
85 09 697	03A	051	2-C04
85 09 846	03B	091	2-J20
85 09 846	03B	101	2-K06
85 09 846	03B	111	2-K16
85 10 091	02	083	1-F12
85 10 851	03A	023	2-A24
85 13 574	03A	067	2-C20
85 13 574	03A	111	2-E16
85 14 036	03B	009	2-G10
85 14 036	03B	037	2-H14
85 14 036	03B	067	2-I20
85 14 036	03B	095	2-J24
85 14 036	03B	105	2-K10
85 14 036	03B	113	2-K18
85 16 817	03B	019	2-G20
85 16 817	03B	045	2-H22
85 16 817	03B	077	2-J06
85 16 817	03B	091	2-J20
85 16 817	03B	101	2-K06
85 16 817	03B	111	2-K16
85 16 890	03B	021	2-G22
85 16 890	03B	049	2-I02
85 16 890	03B	079	2-J08
85 16 916	03A	137	2-F18
85 16 916	03B	009	2-G10
85 16 916	03B	037	2-H14
85 16 916	03B	067	2-I20
85 16 932	03B	005	2-G06
85 16 932	03B	033	2-H10
85 16 932	03B	063	2-I16
85 16 940	03B	005	2-G06
85 16 940	03B	033	2-H10
85 16 940	03B	063	2-I16
85 16 957	03B	009	2-G10
85 16 957	03B	017	2-G18
85 16 957	03B	037	2-H14
85 16 957	03B	043	2-H20
85 16 957	03B	075	2-J04
85 16 957	03B	095	2-J24
85 16 957	03B	105	2-K10
85 17 104	03A	111	2-E16
85 18 557	03A	047	2-B24
85 21 536	03B	021	2-G22
85 21 536	03B	047	2-H24
85 21 536	03B	079	2-J08
85 21 544	03B	007	2-G08
85 21 544	03B	035	2-H12
85 21 619	03B	011	2-G12
85 21 619	03B	039	2-H16
85 21 619	03B	069	2-I22
85 21 668	03B	099	2-K04
85 21 668	03B	109	2-K14
85 21 668	03B	117	2-K22
85 21 668	08A	145	4-G02
85 21 668	08A	147	4-G04
85 21 668	08A	149	4-G06
85 21 692	03B	005	2-G06
85 21 692	03B	033	2-H10
85 21 692	03B	063	2-I16
85 21 726	03B	031	2-H08
85 21 726	03B	057	2-I10
85 22 310	03A	123	2-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 22 310	03A	125	2-F06
85 22 310	03A	127	2-F08
85 22 492	03A	059	2-C12
85 22 526	03B	005	2-G06
85 22 526	03B	033	2-H10
85 22 526	03B	063	2-I16
85 22 526	03B	101	2-K06
85 22 526	03B	113	2-K18
85 22 534	03B	005	2-G06
85 22 534	03B	007	2-G08
85 22 534	03B	009	2-G10
85 22 534	03B	015	2-G16
85 22 534	03B	021	2-G22
85 22 534	03B	023	2-G24
85 22 534	03B	025	2-H02
85 22 534	03B	033	2-H10
85 22 534	03B	035	2-H12
85 22 534	03B	037	2-H14
85 22 534	03B	043	2-H20
85 22 534	03B	047	2-H24
85 22 534	03B	049	2-I02
85 22 534	03B	053	2-I06
85 22 534	03B	063	2-I16
85 22 534	03B	067	2-I20
85 22 534	03B	075	2-J04
85 22 534	03B	079	2-J08
85 22 534	03B	083	2-J12
85 22 534	03B	085	2-J14
85 22 534	03B	101	2-K06
85 22 534	03B	111	2-K16
85 22 534	08A	149	4-G06
85 22 542	03B	005	2-G06
85 22 542	03B	009	2-G10
85 22 542	03B	013	2-G14
85 22 542	03B	017	2-G18
85 22 542	03B	033	2-H10
85 22 542	03B	037	2-H14
85 22 542	03B	041	2-H18
85 22 542	03B	043	2-H20
85 22 542	03B	045	2-H22
85 22 542	03B	053	2-I06
85 22 542	03B	063	2-I16
85 22 542	03B	067	2-I20
85 22 542	03B	071	2-I24
85 22 542	03B	075	2-J04
85 22 542	03B	095	2-J24
85 22 542	03B	099	2-K04
85 22 542	03B	105	2-K10
85 22 542	03B	109	2-K14
85 22 542	03B	115	2-K20
85 22 542	03B	117	2-K22
85 22 567	03B	021	2-G22
85 22 567	03B	049	2-I02
85 22 567	03B	079	2-J08
85 22 567	03B	093	2-J22
85 22 567	03B	103	2-K08
85 22 567	03B	113	2-K18
85 22 575	03B	013	2-G14
85 22 575	03B	025	2-H02
85 22 575	03B	041	2-H18
85 22 575	03B	049	2-I02
85 22 575	03B	071	2-I24
85 22 575	03B	081	2-J10
85 22 583	03B	005	2-G06
85 22 583	03B	013	2-G14
85 22 583	03B	021	2-G22
85 22 583	03B	033	2-H10
85 22 583	03B	041	2-H18
85 22 583	03B	045	2-H22
85 22 583	03B	063	2-I16
85 22 583	03B	071	2-I24
85 22 583	03B	077	2-J06
85 22 583	03B	091	2-J20
85 22 583	03B	101	2-K06
85 22 583	03B	111	2-K16
85 22 591	03B	005	2-G06
85 22 591	03B	033	2-H10
85 22 591	03B	063	2-I16
85 22 617	03B	025	2-H02
85 22 617	03B	031	2-H08
85 22 617	03B	051	2-I04
85 22 617	03B	061	2-I14
85 22 617	03B	083	2-J12
85 22 617	03B	099	2-K04
85 22 617	03B	109	2-K14
85 22 617	03B	117	2-K22
85 28 358	03A	051	2-C04
85 28 358	08A	147	4-G04
85 28 358	08A	149	4-G06
85 28 564	03A	005	2-A06
85 28 564	03A	111	2-E16
85 28 564	03A	115	2-E20
85 30 081	03B	019	2-G20
85 30 081	03B	045	2-H22
85 30 081	03B	075	2-J04
85 30 099	03B	021	2-G22
85 30 099	03B	045	2-H22
85 30 099	03B	077	2-J06
85 30 107	03B	005	2-G06
85 30 107	03B	033	2-H10
85 30 107	03B	063	2-I16
85 30 107	03B	091	2-J20
85 30 107	03B	101	2-K06
85 30 107	03B	111	2-K16
85 30 115	03B	005	2-G06
85 30 115	03B	033	2-H10
85 30 115	03B	063	2-I16
85 30 917	03A	055	2-C08
85 30 917	03A	111	2-E16
85 30 917	03A	115	2-E20
85 30 917	08A	023	4-A24
85 30 966	03B	009	2-G10
85 30 966	03B	037	2-H14
85 30 966	03B	067	2-I20
85 31 204	03A	051	2-C04
85 31 204	08A	147	4-G04
85 31 204	08A	149	4-G06
85 31 212	08A	147	4-G04
85 31 212	08A	149	4-G06
85 32 426	03A	051	2-C04
85 32 756	03A	027	2-B04
85 32 756	03A	029	2-B06
85 32 756	03A	033	2-B10
85 33 176	03A	069	2-C22
85 33 184	03B	005	2-G06
85 33 184	03B	033	2-H10
85 33 184	03B	063	2-I16
85 33 341	03A	047	2-B24
85 33 358	03A	059	2-C12
85 33 374	03A	047	2-B24
85 33 374	03A	131	2-F12
85 33 440	03A	131	2-F12
85 33 655	03B	025	2-H02
85 33 655	03B	053	2-I06
85 33 697	03B	023	2-G24
85 33 697	03B	049	2-I02
85 33 697	03B	079	2-J08
85 33 705	03B	025	2-H02
85 33 705	03B	053	2-I06
85 33 705	03B	083	2-J12
85 35 692	03A	027	2-B04
85 35 692	03A	029	2-B06
85 35 692	03A	033	2-B10
85 35 692	03A	035	2-B12
85 36 401	03A	125	2-F06
85 36 401	03A	127	2-F08
85 36 401	08C	025	5-K02
85 36 401	08C	035	5-K12
85 36 419	02	129	1-H10
85 36 419	02	131	1-H12
85 37 623	03A	123	2-F04
85 37 623	08B	013	5-A14
85 37 672	03A	029	2-B06
85 37 672	03A	033	2-B10
85 39 298	03A	129	2-F10
85 39 363	03B	031	2-H08
85 39 363	03B	061	2-I14
85 39 710	03A	023	2-A24
85 40 452	03A	115	2-E20
85 40 569	03B	025	2-H02
85 40 569	03B	049	2-I02
85 40 569	03B	081	2-J10
85 41 211	03B	005	2-G06
85 41 211	03B	009	2-G10
85 41 211	03B	025	2-H02
85 41 211	03B	033	2-H10
85 41 211	03B	037	2-H14
85 41 211	03B	067	2-I20
85 41 211	03B	093	2-J22
85 41 211	03B	103	2-K08
85 41 211	03B	113	2-K18
85 41 229	03B	005	2-G06
85 41 229	03B	033	2-H10
85 41 229	03B	063	2-I16
85 41 856	03A	051	2-C04
85 41 856	08A	147	4-G04
85 41 856	08A	149	4-G06
85 41 864	03A	051	2-C04
85 44 207	03B	031	2-H08
85 44 207	03B	059	2-I12
85 44 215	03B	029	2-H06
85 44 215	03B	057	2-I10
85 44 215	03B	089	2-J18
85 44 223	03B	031	2-H08
85 44 223	03B	061	2-I14
85 44 231	03B	029	2-H06
85 44 231	03B	057	2-I10
85 44 231	03B	089	2-J18
85 44 249	03B	031	2-H08
85 44 249	03B	057	2-I10
85 44 256	03B	029	2-H06
85 44 256	03B	057	2-I10
85 44 256	03B	089	2-J18
85 44 306	03B	027	2-H04
85 44 306	03B	031	2-H08
85 44 306	03B	057	2-I10
85 44 306	03B	059	2-I12
85 44 306	03B	061	2-I14
85 44 306	03B	085	2-J14
85 44 306	03B	093	2-J22
85 44 306	03B	103	2-K08
85 44 306	03B	113	2-K18
85 44 314	03B	103	2-K08
85 44 314	03B	113	2-K18
85 44 322	03B	029	2-H06
85 44 322	03B	057	2-I10
85 44 322	03B	089	2-J18
85 44 322	03B	093	2-J22
85 44 322	03B	103	2-K08
85 44 348	03B	027	2-H04
85 44 348	03B	057	2-I10
85 44 348	03B	085	2-J14
85 44 363	03B	025	2-H02
85 44 363	03B	053	2-I06
85 44 363	03B	083	2-J12
85 44 397	03B	021	2-G22
85 44 397	03B	049	2-I02
85 44 397	03B	079	2-J08
85 44 413	03A	041	2-B18
85 44 421	03A	041	2-B18
85 44 439	03A	041	2-B18
85 44 462	03A	041	2-B18
85 44 470	03A	041	2-B18
85 44 504	03A	041	2-B18
85 44 512	03A	041	2-B18
85 44 520	03A	041	2-B18
85 44 538	03A	041	2-B18
85 44 660	03A	047	2-B24
85 44 660	08C	015	5-J16
85 44 686	03A	041	2-B18
85 44 702	03A	041	2-B18
85 44 736	03A	041	2-B18
85 44 785	03A	047	2-B24
85 44 793	03A	047	2-B24
85 44 801	03A	027	2-B04
85 44 801	08C	011	5-J12
85 46 319	03A	041	2-B18
85 46 319	03A	133	2-F14
85 46 897	08A	159	4-G16
85 46 905	08A	161	4-G18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-B09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 46 913	08A	153	4-G10
85 46 913	08A	157	4-G14
85 46 913	08A	159	4-G16
85 46 913	08A	161	4-G18
85 46 939	08A	159	4-G16
85 46 939	08A	161	4-G18
85 46 962	08A	103	4-E08
85 46 962	08A	149	4-G06
85 46 970	08A	103	4-E08
85 46 970	08A	147	4-G04
85 47 044	08A	145	4-G02
85 47 044	08A	147	4-G04
85 47 085	08A	157	4-G14
85 47 093	08A	159	4-G16
85 47 101	08A	161	4-G18
85 47 119	08A	159	4-G16
85 47 127	08A	153	4-G10
85 47 135	08A	155	4-G12
85 47 143	08A	157	4-G14
85 47 150	08A	153	4-G10
85 47 168	08A	153	4-G10
85 47 168	08A	155	4-G12
85 47 168	08A	157	4-G14
85 47 176	08A	145	4-G02
85 47 176	08A	147	4-G04
85 47 218	08A	061	4-C14
85 47 218	08A	145	4-G02
85 47 226	08A	065	4-C18
85 47 226	08A	145	4-G02
85 47 242	08A	067	4-C20
85 47 242	08A	147	4-G04
85 47 275	08A	147	4-G04
85 47 275	08A	149	4-G06
85 47 283	08A	147	4-G04
85 47 283	08A	149	4-G06
85 47 408	03A	045	2-B22
85 47 408	03A	135	2-F16
85 47 499	03A	041	2-B18
85 47 499	03A	133	2-F14
85 47 655	03A	043	2-B20
85 47 655	03A	133	2-F14
85 47 747	03A	041	2-B18
85 47 747	03A	133	2-F14
85 47 754	03A	041	2-B18
85 47 754	03A	133	2-F14
85 47 770	03B	007	2-G08
85 47 770	03B	011	2-G12
85 47 770	03B	017	2-G18
85 47 770	03B	025	2-H02
85 47 770	03B	035	2-H12
85 47 770	03B	039	2-H16
85 47 770	03B	045	2-H22
85 47 770	03B	049	2-I02
85 47 770	03B	065	2-I18
85 47 770	03B	069	2-I22
85 47 770	03B	075	2-J04
85 47 770	03B	083	2-J12
85 47 770	03B	099	2-K04
85 47 770	03B	109	2-K14
85 47 770	03B	117	2-K22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 47 788	03B	007	2-G08
85 47 788	03B	011	2-G12
85 47 788	03B	035	2-H12
85 47 788	03B	065	2-I18
85 47 788	03B	099	2-K04
85 47 788	03B	109	2-K14
85 47 788	03B	117	2-K22
85 47 796	03B	069	2-I22
85 47 796	03B	099	2-K04
85 47 796	03B	109	2-K14
85 47 796	03B	117	2-K22
85 47 804	03B	007	2-G08
85 47 804	03B	011	2-G12
85 47 804	03B	017	2-G18
85 47 804	03B	019	2-G20
85 47 804	03B	021	2-G22
85 47 804	03B	025	2-H02
85 47 804	03B	035	2-H12
85 47 804	03B	039	2-H16
85 47 804	03B	045	2-H22
85 47 804	03B	047	2-H24
85 47 804	03B	049	2-I02
85 47 804	03B	063	2-I16
85 47 804	03B	069	2-I22
85 47 804	03B	075	2-J04
85 47 804	03B	079	2-J08
85 47 804	03B	083	2-J12
85 47 804	03B	099	2-K04
85 47 804	03B	109	2-K14
85 47 804	03B	117	2-K22
85 48 174	08A	061	4-C14
85 48 174	08A	145	4-G02
85 48 182	08A	065	4-C18
85 48 182	08A	147	4-G04
85 48 190	03A	041	2-B18
85 48 190	03A	133	2-F14
85 48 208	03A	043	2-B20
85 48 208	03A	133	2-F14
85 48 216	03A	041	2-B18
85 48 216	03A	133	2-F14
85 48 224	03A	041	2-B18
85 48 224	03A	133	2-F14
85 48 802	03A	059	2-C12
85 48 802	03A	061	2-C14
85 48 802	03A	137	2-F18
85 50 360	03A	051	2-C04
85 50 519	03A	131	2-F12
85 50 774	03A	129	2-F10
85 50 824	03A	023	2-A24
85 50 824	03A	025	2-B02
85 50 840	03A	023	2-A24
85 50 840	03A	025	2-B02
85 50 840	08C	013	5-J14
85 51 392	03A	123	2-F04
85 51 582	03A	005	2-A06
85 51 616	03A	005	2-A06
85 52 044	03A	047	2-B24
85 52 275	03A	129	2-F10
85 52 283	03A	131	2-F12
85 52 325	03A	033	2-B10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 52 382	03A	129	2-F10
85 52 598	03A	013	2-A14
85 52 655	04	005	3-A06
85 52 663	03A	111	2-E16
85 52 663	08B	163	5-G20
85 52 663	08B	165	5-G22
85 52 671	03A	123	2-F04
85 52 713	03A	115	2-E20
85 52 721	03B	015	2-G16
85 52 721	03B	043	2-H20
85 52 721	03B	073	2-J02
85 53 265	03A	123	2-F04
85 53 356	03A	051	2-C04
85 53 463	03A	125	2-F06
85 53 497	03B	027	2-H04
85 53 497	03B	057	2-I10
85 53 497	03B	085	2-J14
85 53 505	03B	027	2-H04
85 53 505	03B	085	2-J14
85 53 737	03A	111	2-E16
85 53 737	03A	115	2-E20
85 53 810	03A	041	2-B18
85 53 828	03A	041	2-B18
85 53 844	03A	041	2-B18
85 53 844	03A	133	2-F14
85 53 869	03B	013	2-G14
85 53 869	03B	041	2-H18
85 53 869	03B	071	2-I24
85 53 927	03A	051	2-C04
85 57 001	08C	009	5-J10
85 57 480	03A	133	2-F14
85 58 066	03A	111	2-E16
85 58 066	03A	119	2-E24
85 58 074	03A	041	2-B18
85 58 090	03A	041	2-B18
85 58 108	03A	041	2-B18
85 58 124	03A	041	2-B18
85 58 132	03A	041	2-B18
85 58 140	03A	041	2-B18
85 58 298	03A	129	2-F10
85 58 538	03B	009	2-G10
85 58 538	03B	037	2-H14
85 58 538	03B	067	2-I20
85 58 546	03B	009	2-G10
85 58 546	03B	037	2-H14
85 58 546	03B	067	2-I20
85 59 205	03B	007	2-G08
85 59 205	03B	035	2-H12
85 59 205	03B	095	2-J24
85 59 205	03B	105	2-K10
85 59 205	03B	113	2-K18
85 59 213	03A	051	2-C04
85 59 304	03A	061	2-C14
85 59 320	03A	041	2-B18
85 60 278	03B	027	2-H04
85 60 278	03B	057	2-I10
85 60 278	03B	085	2-J14
85 60 278	03B	093	2-J22
85 60 278	03B	103	2-K08
85 60 278	03B	113	2-K18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 60 476	03B	005	2-G06
85 60 476	03B	009	2-G10
85 60 476	03B	017	2-G18
85 60 476	03B	025	2-H02
85 60 476	03B	033	2-H10
85 60 476	03B	037	2-H14
85 60 476	03B	045	2-H22
85 60 476	03B	053	2-I06
85 60 476	03B	063	2-I16
85 60 476	03B	067	2-I20
85 60 476	03B	075	2-J04
85 60 476	03B	083	2-J12
85 60 476	03B	093	2-J22
85 60 476	03B	103	2-K08
85 60 476	03B	113	2-K18
85 60 591	03A	029	2-B06
85 60 732	03A	047	2-B24
85 60 740	03A	047	2-B24
85 61 284	03A	029	2-B06
85 61 375	03A	037	2-B14
85 61 383	03A	037	2-B14
85 61 409	03A	037	2-B14
85 61 425	03A	051	2-C04
85 61 433	03A	121	2-F02
85 61 466	03A	041	2-B18
85 61 623	03B	009	2-G10
85 61 623	03B	037	2-H14
85 61 623	03B	067	2-I20
85 61 623	08A	153	4-G10
85 61 623	08A	155	4-G12
85 61 623	08A	157	4-G14
85 61 623	08A	159	4-G16
85 61 623	08A	161	4-G18
85 61 623	08A	163	4-G20
85 61 631	03B	009	2-G10
85 61 631	03B	037	2-H14
85 63 918	03A	031	2-B08
85 64 007	03A	127	2-F08
85 64 916	03B	017	2-G18
85 64 973	03A	113	2-E18
85 64 973	03A	117	2-E22
85 64 973	08A	037	4-B14
85 65 590	03A	007	2-A08
85 65 855	03A	049	2-C02
85 65 855	03A	059	2-C12
85 65 855	08A	153	4-G10
85 65 855	08A	155	4-G12
85 65 855	08A	157	4-G14
85 65 855	08A	159	4-G16
85 65 855	08A	161	4-G18
85 66 125	03A	005	2-A06
85 66 143	03A	005	2-A06
85 66 143	03A	111	2-E16
85 66 259	03A	059	2-C12
85 66 259	03A	137	2-F18
85 66 374	03A	013	2-A14
85 66 416	03A	033	2-B10
85 66 424	03A	033	2-B10
85 66 598	03A	059	2-C12
85 66 598	08C	025	5-K02

6-B10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 66 598	08C	029	5-K06
85 66 598	08C	031	5-K08
85 66 598	08C	035	5-K12
85 66 853	03A	129	2-F10
85 67 505	03A	061	2-C14
85 67 638	08A	061	4-C14
85 67 638	08A	065	4-C18
85 67 638	08A	067	4-C20
85 67 638	08A	147	4-G04
85 67 646	08A	061	4-C14
85 67 646	08A	065	4-C18
85 67 646	08A	067	4-C20
85 67 646	08A	147	4-G04
85 67 653	03A	033	2-B10
85 68 693	03A	129	2-F10
85 68 735	03B	025	2-H02
85 68 735	03B	053	2-I06
85 68 735	03B	083	2-J12
85 68 768	03B	025	2-H02
85 68 768	03B	053	2-I06
85 68 768	03B	083	2-J12
85 68 768	03B	093	2-J22
85 68 768	03B	103	2-K08
85 68 768	03B	113	2-K18
85 68 842	03B	025	2-H02
85 68 842	03B	053	2-I06
85 68 842	03B	083	2-J12
85 68 883	03A	059	2-C12
85 69 139	03B	093	2-J22
85 69 139	03B	103	2-K08
85 69 139	03B	113	2-K18
85 69 220	03A	059	2-C12
85 69 360	03A	119	2-E24
85 69 386	03A	073	2-D02
85 69 386	03A	085	2-D14
85 69 386	03A	093	2-D22
85 69 386	03A	103	2-E08
85 70 210	03A	079	2-D08
85 70 236	03A	079	2-D08
85 71 382	03B	011	2-G12
85 71 382	03B	013	2-G14
85 71 382	03B	039	2-H16
85 71 382	03B	041	2-H18
85 71 382	03B	069	2-I22
85 71 382	03B	071	2-I24
85 71 390	03B	025	2-H02
85 71 390	03B	053	2-I06
85 71 390	03B	085	2-J14
85 71 663	03A	123	2-F04
85 71 861	03A	007	2-A08
85 71 887	03A	007	2-A08
85 71 986	03A	007	2-A08
85 71 986	03A	009	2-A10
85 72 034	03A	007	2-A08
85 72 190	03A	125	2-F06
85 72 190	08C	029	5-K06
85 72 190	08C	031	5-K08
85 72 190	08C	035	5-K12
85 72 331	03A	059	2-C12
85 72 596	03B	095	2-J24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 72 596	03B	105	2-K10
85 72 596	03B	113	2-K18
85 72 638	03A	007	2-A08
85 72 737	03A	005	2-A06
85 72 745	03A	005	2-A06
85 72 752	02	057	1-E10
85 72 752	02	059	1-E12
85 72 752	02	061	1-E14
85 73 107	03A	059	2-C12
85 73 560	03A	125	2-F06
85 73 669	03A	047	2-B24
85 73 677	03A	047	2-B24
85 73 834	03A	013	2-A14
85 73 958	03A	049	2-C02
85 73 958	08A	133	4-F14
85 73 958	08A	153	4-G10
85 73 958	08A	155	4-G12
85 73 958	08A	157	4-G14
85 73 958	08A	159	4-G16
85 73 958	08A	161	4-G18
85 73 966	02	137	1-H18
85 73 966	03A	049	2-C02
85 73 966	08A	153	4-G10
85 73 966	08A	155	4-G12
85 73 966	08A	157	4-G14
85 73 966	08A	159	4-G16
85 73 966	08A	161	4-G18
85 74 048	03B	025	2-H02
85 74 048	03B	053	2-I06
85 74 048	03B	083	2-J12
85 74 410	03A	121	2-F02
85 74 469	03A	051	2-C04
85 74 501	03A	049	2-C02
85 74 501	08A	153	4-G10
85 74 501	08A	155	4-G12
85 74 501	08A	157	4-G14
85 74 501	08A	161	4-G18
85 74 535	03A	033	2-B10
85 74 543	03A	033	2-B10
85 74 816	03A	013	2-A14
85 74 824	03A	121	2-F02
85 74 824	08A	145	4-G02
85 74 824	08A	147	4-G04
85 74 881	03B	013	2-G14
85 74 881	03B	041	2-H18
85 74 881	03B	071	2-I24
85 74 949	03B	009	2-G10
85 74 949	03B	037	2-H14
85 74 949	03B	067	2-I20
85 75 391	03A	049	2-C02
85 75 391	08A	153	4-G10
85 75 391	08A	155	4-G12
85 75 391	08A	157	4-G14
85 75 391	08A	161	4-G18
85 75 581	03A	121	2-F02
85 75 599	03A	115	2-E20
85 75 599	08A	037	4-B14
85 75 599	08A	053	4-C06
85 77 702	03A	059	2-C12
85 77 702	03A	137	2-F18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 77 710	03A	049	2-C02
85 77 785	03A	033	2-B10
85 77 793	03A	059	2-C12
85 77 793	03A	061	2-C14
85 77 801	03A	037	2-B14
85 78 221	03A	049	2-C02
85 78 221	08A	155	4-G12
85 78 221	08A	157	4-G14
85 78 221	08A	159	4-G16
85 78 221	08A	161	4-G18
85 78 262	03A	065	2-C18
85 78 775	03A	059	2-C12
85 79 393	03B	095	2-J24
85 79 393	03B	105	2-K10
85 79 393	03B	113	2-K18
85 79 492	03A	051	2-C04
85 79 492	08A	147	4-G04
85 79 492	08A	149	4-G06
85 79 575	03A	113	2-E18
85 79 617	03A	131	2-F12
85 79 625	03A	131	2-F12
85 79 898	03A	053	2-C06
85 79 955	03B	013	2-G14
85 79 955	03B	017	2-G18
85 79 955	03B	041	2-H18
85 79 955	03B	045	2-H22
85 79 955	03B	071	2-I24
85 79 955	03B	075	2-J04
85 81 068	03A	053	2-C06
85 81 472	03A	129	2-F10
85 81 951	03B	095	2-J24
85 81 951	03B	105	2-K10
85 81 951	03B	115	2-K20
85 82 082	03B	025	2-H02
85 82 082	03B	051	2-I04
85 82 082	03B	083	2-J12
85 82 090	03B	017	2-G18
85 82 090	03B	095	2-J24
85 82 090	03B	105	2-K10
85 82 090	03B	115	2-K20
85 82 116	03B	017	2-G18
85 82 397	03B	091	2-J20
85 82 397	03B	101	2-K06
85 82 397	03B	111	2-K16
85 82 413	03B	015	2-G16
85 82 413	03B	043	2-H20
85 82 413	03B	073	2-J02
85 82 413	03B	091	2-J20
85 82 413	03B	101	2-K06
85 82 413	03B	111	2-K16
85 82 439	03B	005	2-G06
85 82 439	03B	033	2-H10
85 82 439	03B	063	2-I16
85 82 439	03B	093	2-J22
85 82 439	03B	103	2-K08
85 82 546	03B	091	2-J20
85 82 546	03B	101	2-K06
85 82 546	03B	111	2-K16
85 82 579	03B	095	2-J24
85 82 579	03B	105	2-K10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 82 579	03B	115	2-K20
85 82 595	03B	009	2-G10
85 82 595	03B	017	2-G18
85 82 595	03B	027	2-H04
85 82 595	03B	031	2-H08
85 82 595	03B	037	2-H14
85 82 595	03B	057	2-I10
85 82 595	03B	059	2-I12
85 82 595	03B	085	2-J14
85 82 595	03B	093	2-J22
85 82 595	03B	103	2-K08
85 82 595	03B	113	2-K18
85 82 603	03B	009	2-G10
85 82 603	03B	027	2-H04
85 82 603	03B	029	2-H06
85 82 603	03B	037	2-H14
85 82 603	03B	057	2-I10
85 82 603	03B	067	2-I20
85 82 603	03B	085	2-J14
85 82 603	03B	093	2-J22
85 82 603	03B	103	2-K08
85 82 603	03B	113	2-K18
85 83 593	03A	037	2-B14
85 83 627	03A	125	2-F06
85 84 666	03A	005	2-A06
85 84 674	03A	005	2-A06
85 84 682	03A	005	2-A06
85 84 732	03A	125	2-F06
85 85 176	03A	131	2-F12
85 85 325	03A	119	2-E24
85 85 333	03A	029	2-B06
85 85 341	03A	029	2-B06
85 85 358	03A	029	2-B06
85 85 366	03A	029	2-B06
85 85 416	03A	029	2-B06
85 85 424	03A	029	2-B06
85 85 432	03A	029	2-B06
85 85 440	03A	029	2-B06
85 85 457	03A	029	2-B06
85 85 465	03A	029	2-B06
85 85 473	03A	029	2-B06
85 85 481	03A	029	2-B06
85 85 853	03A	033	2-B10
85 85 861	03A	033	2-B10
85 85 879	03A	033	2-B10
85 85 887	03A	033	2-B10
85 85 895	03A	033	2-B10
85 85 903	03A	033	2-B10
85 85 978	03A	033	2-B10
85 85 986	03A	033	2-B10
85 86 075	03A	007	2-A08
85 86 802	03B	027	2-H04
85 86 802	03B	057	2-I10
85 87 024	03A	055	2-C08
85 87 099	03A	055	2-C08
85 87 107	03A	057	2-C10
85 87 248	03A	007	2-A08
85 87 248	03A	009	2-A10
85 87 255	03A	055	2-C08
85 87 347	03A	055	2-C08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6–B11 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 87 354	03A	055	2-C08
85 87 354	03A	057	2-C10
85 87 420	03B	027	2-H04
85 87 420	03B	057	2-I10
85 87 420	03B	089	2-J18
85 87 438	03B	027	2-H04
85 87 438	03B	057	2-I10
85 87 438	03B	089	2-J18
85 87 453	03B	027	2-H04
85 87 453	03B	057	2-I10
85 87 453	03B	089	2-J18
85 87 487	03B	027	2-H04
85 87 487	03B	057	2-I10
85 87 487	03B	089	2-J18
85 87 503	03B	027	2-H04
85 87 503	03B	057	2-I10
85 87 503	03B	089	2-J18
85 87 511	03B	029	2-H06
85 87 511	03B	031	2-H08
85 87 511	03B	057	2-I10
85 87 511	03B	061	2-I14
85 87 511	03B	089	2-J18
85 87 552	03B	031	2-H08
85 87 552	03B	059	2-I12
85 87 552	03B	095	2-J24
85 87 552	03B	105	2-K10
85 87 552	03B	115	2-K20
85 87 560	03B	031	2-H08
85 87 560	03B	057	2-I10
85 87 560	03B	059	2-I12
85 87 560	03B	095	2-J24
85 87 560	03B	105	2-K10
85 87 636	03A	123	2-F04
85 87 644	03A	065	2-C18
85 88 188	03B	093	2-J22
85 88 188	03B	105	2-K10
85 88 188	03B	113	2-K18
85 89 319	03A	127	2-F08
85 90 549	03A	007	2-A08
85 90 549	03A	009	2-A10
85 90 812	03A	051	2-C04
85 90 820	03A	051	2-C04
85 90 838	03A	051	2-C04
85 90 853	03A	051	2-C04
85 90 911	03A	007	2-A08
85 90 994	03A	007	2-A08
85 90 994	03A	009	2-A10
85 91 075	03A	007	2-A08
85 91 109	03A	061	2-C14
85 91 117	03A	059	2-C12
85 91 117	08C	025	5-K02
85 91 117	08C	029	5-K06
85 91 117	08C	031	5-K08
85 91 117	08C	035	5-K12
85 91 208	08A	161	4-G18
85 91 216	03A	049	2-C02
85 91 216	08A	153	4-G10
85 91 216	08A	155	4-G12
85 91 216	08A	157	4-G14
85 91 216	08A	159	4-G16
85 91 216	08A	161	4-G18
85 91 224	03A	049	2-C02
85 91 224	08A	153	4-G10
85 91 224	08A	155	4-G12
85 91 224	08A	157	4-G14
85 91 224	08A	159	4-G16
85 91 224	08A	161	4-G18
85 91 232	03A	049	2-C02
85 91 232	08A	155	4-G12
85 91 232	08A	157	4-G14
85 91 232	08A	159	4-G16
85 91 232	08A	161	4-G18
85 91 240	08A	153	4-G10
85 91 240	08A	155	4-G12
85 91 240	08A	157	4-G14
85 91 240	08A	159	4-G16
85 91 240	08A	161	4-G18
85 91 257	03A	081	2-D10
85 91 257	03A	091	2-D20
85 91 257	03A	101	2-E06
85 91 257	03A	109	2-E14
85 91 257	08A	145	4-G02
85 91 257	08A	147	4-G04
85 91 265	03A	081	2-D10
85 91 265	03A	091	2-D20
85 91 265	03A	101	2-E06
85 91 265	03A	109	2-E14
85 91 265	08A	145	4-G02
85 91 265	08A	147	4-G04
85 91 273	08A	153	4-G10
85 91 273	08A	155	4-G12
85 91 273	08A	157	4-G14
85 91 273	08A	159	4-G16
85 91 273	08A	161	4-G18
85 91 281	03A	081	2-D10
85 91 281	03A	091	2-D20
85 91 281	03A	101	2-E06
85 91 281	03A	109	2-E14
85 91 281	08A	155	4-G12
85 91 281	08A	157	4-G14
85 91 281	08A	161	4-G18
85 91 307	08A	153	4-G10
85 91 307	08A	155	4-G12
85 91 307	08A	159	4-G16
85 91 307	08A	161	4-G18
85 91 414	08A	153	4-G10
85 91 414	08A	155	4-G12
85 91 414	08A	157	4-G14
85 91 414	08A	159	4-G16
85 91 414	08A	161	4-G18
85 91 422	08A	153	4-G10
85 91 422	08A	155	4-G12
85 91 422	08A	157	4-G14
85 91 422	08A	159	4-G16
85 91 422	08A	161	4-G18
85 91 489	03A	081	2-D10
85 91 489	03A	091	2-D20
85 91 489	03A	101	2-E06
85 91 489	03A	109	2-E14
85 91 489	08A	147	4-G04
85 91 497	03A	081	2-D10
85 91 497	03A	091	2-D20
85 91 497	03A	101	2-E06
85 91 497	03A	109	2-E14
85 91 497	08A	147	4-G04
85 93 089	03B	053	2-I06
85 93 089	03B	095	2-J24
85 93 089	03B	105	2-K10
85 93 295	03A	079	2-D08
85 93 329	03A	009	2-A10
85 93 394	03A	053	2-C06
85 93 733	03A	051	2-C04
85 93 766	03A	059	2-C12
85 93 766	08C	025	5-K02
85 93 766	08C	029	5-K06
85 93 766	08C	031	5-K08
85 93 766	08C	035	5-K12
85 93 899	03B	011	2-G12
85 93 899	03B	039	2-H16
85 93 899	03B	069	2-I22
85 93 907	03A	017	2-A18
85 93 907	03B	017	2-G18
85 93 907	03B	045	2-H22
85 93 907	03B	075	2-J04
85 93 915	03B	011	2-G12
85 93 915	03B	039	2-H16
85 93 915	03B	069	2-I22
85 93 931	03B	025	2-H02
85 93 931	03B	049	2-I02
85 93 931	03B	083	2-J12
85 93 949	03B	025	2-H02
85 93 949	03B	053	2-I06
85 93 956	03B	029	2-H06
85 93 956	03B	057	2-I10
85 93 956	03B	089	2-J18
85 93 956	03B	093	2-J22
85 93 964	03B	029	2-H06
85 93 964	03B	057	2-I10
85 93 964	03B	089	2-J18
85 93 964	03B	095	2-J24
85 93 964	03B	105	2-K10
85 93 964	03B	115	2-K20
85 94 343	03A	065	2-C18
85 94 350	03A	065	2-C10
85 94 368	03A	005	2-A06
85 94 467	03A	073	2-D02
85 94 632	03A	059	2-C12
85 94 749	08A	123	4-F04
85 94 764	02	127	1-H08
85 94 897	03A	005	2-A06
85 96 140	03A	051	2-C04
85 97 064	03B	013	2-G14
85 97 064	03B	041	2-H18
85 97 064	03B	071	2-I24
85 98 047	08A	061	4-C14
85 98 047	08A	063	4-C16
85 98 047	08A	065	4-C18
85 98 047	08A	067	4-C20
85 98 195	03A	057	2-C10
85 98 211	03A	049	2-C02
85 98 211	08A	155	4-G12
85 98 211	08A	157	4-G14
85 98 211	08A	159	4-G16
85 98 211	08A	161	4-G18
85 98 229	03A	049	2-C02
85 98 229	08A	153	4-G10
85 98 229	08A	157	4-G14
85 98 229	08A	159	4-G16
85 98 237	03A	049	2-C02
85 98 237	08A	153	4-G10
85 98 237	08A	157	4-G14
85 98 237	08A	159	4-G16
85 98 245	03A	049	2-C02
85 98 245	08A	153	4-G10
85 98 245	08A	155	4-G12
85 98 245	08A	157	4-G14
85 98 245	08A	159	4-G16
85 98 245	08A	161	4-G18
85 98 252	03A	049	2-C02
85 98 252	08A	153	4-G10
85 98 252	08A	155	4-G12
85 98 252	08A	157	4-G14
85 98 252	08A	159	4-G16
85 98 252	08A	161	4-G18
85 98 260	08A	061	4-C14
85 98 260	08A	063	4-C16
85 98 260	08A	065	4-C18
85 98 260	08A	067	4-C20
85 98 286	03A	035	2-B12
85 98 526	03A	057	2-C10
85 98 773	03A	123	2-F04
85 99 425	03A	125	2-F06
85 99 516	03A	061	2-C14
85 99 516	03A	067	2-C20
85 99 565	03A	113	2-E18
85 99 565	08C	025	5-K02
85 99 565	08C	031	5-K08
85 99 565	08C	035	5-K12
86 01 916	08A	069	4-C22
86 01 916	08B	077	5-D06
86 01 916	08B	083	5-D12
86 01 916	08B	087	5-D16
86 01 916	08B	091	5-D20
86 01 916	08B	097	5-E02
86 01 916	08B	101	5-E06
86 01 916	08B	105	5-E10
86 01 916	08B	111	5-E16
86 01 916	08B	115	5-E20
86 01 916	08B	119	5-E24
86 01 916	08B	125	5-F06
86 01 916	08B	129	5-F10
86 01 916	08B	195	5-I04
86 02 542	08C	011	5-J12
86 05 081	02	093	1-F22
86 05 081	08C	023	5-J24
86 05 081	08C	037	5-K14
86 05 107	08C	015	5-J16
86 05 149	08C	023	5-J24
86 05 149	08C	025	5-K02
86 05 172	08C	009	5-J10

6–B12 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
86 05 198	08C	023	5-J24
86 05 198	08C	033	5-K10
86 05 248	08C	009	5-J10
86 05 388	08C	005	5-J06
86 05 388	08C	037	5-K14
86 58 924	07	009	3-H10
86 74 681	08B	005	5-A06
86 74 731	08B	005	5-A06
86 74 863	08B	005	5-A06
86 78 070	03A	137	2-F18
87 00 114	04	023	3-A24
87 00 130	04	023	3-A24
87 00 205	04	021	3-A22
87 00 361	04	021	3-A22
87 00 429	04	019	3-A20
87 00 429	04	021	3-A22
87 00 585	04	023	3-A24
87 00 619	04	023	3-A24
87 00 767	04	021	3-A22
87 01 385	04	029	3-B06
87 02 045	04	023	3-A24
87 02 359	04	023	3-A24
87 03 340	04	023	3-A24
87 03 357	04	023	3-A24
87 03 365	04	023	3-A24
87 03 993	04	061	3-C14
87 04 033	04	061	3-C14
87 04 280	04	027	3-B04
87 04 298	04	027	3-B04
87 04 306	04	027	3-B04
87 04 314	04	027	3-B04
87 04 322	04	027	3-B04
87 04 348	04	023	3-A24
87 04 389	04	027	3-B04
87 04 413	04	027	3-B04
87 04 421	04	027	3-B04
87 04 777	04	019	3-A20
87 04 942	04	019	3-A20
87 04 942	04	021	3-A22
87 04 942	04	023	3-A24
87 05 162	04	059	3-C12
87 05 170	04	045	3-B22
87 05 170	04	059	3-C12
87 05 220	04	051	3-C04
87 05 428	04	037	3-B14
87 05 436	04	043	3-B20
87 05 444	04	043	3-B20
87 05 659	04	043	3-B20
87 05 691	04	049	3-C02
87 05 725	04	043	3-B20
87 05 733	04	049	3-C02
87 05 733	04	051	3-C04
87 06 038	04	051	3-C04
87 06 046	04	051	3-C04
87 06 061	04	051	3-C04
87 06 103	04	051	3-C04
87 06 111	04	039	3-B16
87 06 129	04	039	3-B16
87 06 129	04	043	3-B20
87 06 129	04	059	3-C12
87 06 152	04	039	3-B16
87 06 160	04	039	3-B16
87 06 210	04	053	3-C06
87 06 327	04	043	3-B20
87 06 335	04	043	3-B20
87 06 343	04	043	3-B20
87 06 368	04	043	3-B20
87 06 491	04	043	3-B20
87 06 582	04	043	3-B20
87 06 616	04	043	3-B20
87 06 616	04	059	3-C12
87 06 624	04	059	3-C12
87 06 632	04	059	3-C12
87 06 665	04	043	3-B20
87 06 673	04	043	3-B20
87 06 681	04	043	3-B20
87 06 707	04	043	3-B20
87 06 848	04	045	3-B22
87 06 855	04	045	3-B22
87 07 051	04	045	3-B22
87 07 234	04	045	3-B22
87 07 275	04	045	3-B22
87 07 457	04	045	3-B22
87 07 721	04	049	3-C02
87 07 747	04	049	3-C02
87 07 754	04	049	3-C02
87 07 788	04	049	3-C02
87 07 887	04	049	3-C02
87 07 929	04	049	3-C02
87 07 952	04	049	3-C02
87 08 026	04	049	3-C02
87 08 380	04	037	3-B14
87 08 398	04	057	3-C10
87 08 414	04	049	3-C02
87 08 695	04	049	3-C02
87 08 703	04	045	3-B22
87 08 760	04	051	3-C04
87 08 778	04	037	3-B14
87 08 786	04	043	3-B20
87 08 836	04	027	3-B04
87 08 851	04	045	3-B22
87 09 164	04	051	3-C04
87 09 305	04	053	3-C06
87 09 347	04	045	3-B22
87 09 446	04	043	3-B20
87 09 479	04	049	3-C02
87 09 610	04	039	3-B16
87 10 303	04	011	3-A12
87 10 360	04	027	3-B04
87 10 857	04	039	3-B16
87 10 865	04	019	3-A20
87 10 881	04	019	3-A20
87 10 956	04	011	3-A12
87 11 038	04	019	3-A20
87 11 053	04	017	3-A18
87 11 103	04	021	3-A22
87 11 160	04	027	3-B04
87 11 343	04	019	3-A20
87 11 350	04	019	3-A20
87 11 376	04	019	3-A20
87 11 590	04	019	3-A20
87 11 608	04	013	3-A14
87 11 707	04	027	3-B04
87 11 707	04	063	3-C16
87 11 723	04	027	3-B04
87 11 806	04	057	3-C10
87 11 871	04	013	3-A14
87 11 871	04	039	3-B16
87 12 150	04	021	3-A22
87 12 580	04	021	3-A22
87 12 598	04	021	3-A22
87 12 606	04	021	3-A22
87 12 630	04	059	3-C12
87 12 655	04	023	3-A24
87 12 762	04	019	3-A20
87 12 770	04	019	3-A20
87 12 838	04	019	3-A20
87 12 853	04	023	3-A24
87 12 887	04	059	3-C12
87 12 929	04	023	3-A24
87 12 945	04	013	3-A14
87 12 952	04	013	3-A14
87 12 994	04	021	3-A22
87 13 000	04	023	3-A24
87 13 026	04	019	3-A20
87 13 091	04	023	3-A24
87 13 158	04	019	3-A20
87 13 166	04	013	3-A14
87 13 216	04	011	3-A12
87 13 216	04	063	3-C16
87 13 406	04	021	3-A22
87 13 448	04	021	3-A22
87 13 455	04	021	3-A22
87 13 497	04	019	3-A20
87 13 513	04	019	3-A20
87 13 521	04	019	3-A20
87 13 539	04	019	3-A20
87 13 554	04	019	3-A20
87 13 570	04	019	3-A20
87 13 588	04	019	3-A20
87 13 596	04	019	3-A20
87 13 604	04	011	3-A12
87 13 638	04	023	3-A24
87 14 420	04	017	3-A18
87 14 693	04	023	3-A24
87 15 005	04	021	3-A22
87 15 062	04	025	3-B02
87 15 120	04	021	3-A22
87 15 229	04	023	3-A24
87 15 351	04	011	3-A12
87 15 831	04	019	3-A20
87 17 407	04	013	3-A14
87 17 407	04	039	3-B16
87 17 415	04	013	3-A14
87 17 415	04	039	3-B16
87 17 415	04	063	3-C16
87 18 140	04	027	3-B04
87 18 371	04	021	3-A22
87 18 389	04	021	3-A22
87 18 439	02	161	1-I18
87 18 439	04	013	3-A14
87 18 439	04	039	3-B16
87 18 439	04	063	3-C16
87 18 645	04	059	3-C12
87 18 843	04	023	3-A24
87 19 320	04	019	3-A20
87 19 494	04	011	3-A12
87 19 775	04	013	3-A14
87 19 874	04	027	3-B04
87 19 882	04	027	3-B04
87 19 890	04	027	3-B04
87 19 916	04	021	3-A22
87 19 924	04	019	3-A20
87 19 924	04	023	3-A24
87 19 940	04	027	3-B04
87 20 419	04	021	3-A22
87 21 185	04	011	3-A12
87 21 201	04	011	3-A12
87 21 235	04	011	3-A12
87 21 318	04	023	3-A24
87 21 334	04	011	3-A12
87 21 821	04	011	3-A12
87 21 839	04	021	3-A22
87 21 995	04	017	3-A18
87 22 035	04	039	3-B16
87 22 100	04	017	3-A18
87 22 118	04	057	3-C10
87 22 126	04	057	3-C10
87 22 209	04	017	3-A18
87 22 324	04	005	3-A06
87 22 324	04	061	3-C14
87 22 472	04	027	3-B04
87 22 548	04	027	3-B04
87 22 555	04	019	3-A20
87 22 555	04	027	3-B04
87 22 720	04	013	3-A14
87 22 803	04	013	3-A14
87 22 829	04	013	3-A14
87 22 837	04	013	3-A14
87 23 405	04	011	3-A12
87 23 900	04	027	3-B04
87 23 967	04	015	3-A16
87 24 866	04	027	3-B04
87 24 874	04	027	3-B04
87 24 874	04	063	3-C16
87 25 012	04	011	3-A12
87 25 012	04	063	3-C16
87 25 020	04	011	3-A12
87 25 020	04	063	3-C16
87 25 137	04	023	3-A24
87 25 194	04	025	3-B02
87 26 010	04	019	3-A20
87 26 051	04	023	3-A24
87 26 069	04	023	3-A24
87 26 077	04	023	3-A24
87 26 085	04	023	3-A24
87 26 093	04	023	3-A24
87 26 143	04	021	3-A22
87 26 150	04	019	3-A20
87 26 168	04	023	3-A24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 26 184	04	019	3-A20
87 26 192	04	019	3-A20
87 26 200	04	019	3-A20
87 26 218	04	019	3-A20
87 26 259	04	023	3-A24
87 26 267	04	023	3-A24
87 26 275	04	023	3-A24
87 26 283	04	023	3-A24
87 26 309	04	013	3-A14
87 26 317	04	021	3-A22
87 26 325	04	019	3-A20
87 26 333	04	023	3-A24
87 26 341	04	021	3-A22
87 26 374	04	011	3-A12
87 26 390	04	009	3-A10
87 26 432	04	009	3-A10
87 26 465	04	009	3-A10
87 26 507	04	009	3-A10
87 26 523	04	019	3-A20
87 26 531	04	023	3-A24
87 26 549	04	021	3-A22
87 26 556	04	021	3-A22
87 26 564	04	021	3-A22
87 26 572	04	021	3-A22
87 26 580	04	019	3-A20
87 26 598	04	019	3-A20
87 26 721	04	023	3-A24
87 26 739	04	021	3-A22
87 26 770	04	013	3-A14
87 26 887	04	023	3-A24
87 26 895	04	011	3-A12
87 27 018	04	045	3-B22
87 27 190	04	005	3-A06
87 27 190	04	061	3-C14
87 27 208	04	005	3-A06
87 27 208	04	061	3-C14
87 27 422	04	023	3-A24
87 27 505	04	023	3-A24
87 27 711	04	013	3-A14
87 27 729	04	013	3-A14
87 27 737	04	013	3-A14
87 27 745	04	013	3-A14
87 27 745	04	039	3-B16
87 27 844	04	023	3-A24
87 28 057	02	161	1-I18
87 28 057	04	013	3-A14
87 28 057	04	039	3-B16
87 28 065	04	013	3-A14
87 28 123	04	005	3-A06
87 28 123	04	061	3-C14
87 28 149	04	013	3-A14
87 28 156	04	027	3-B04
87 28 156	04	063	3-C16
87 28 198	04	023	3-A24
87 28 198	04	027	3-B04
87 28 396	04	013	3-A14
87 28 461	04	021	3-A22
87 28 487	04	021	3-A22
87 28 529	04	019	3-A20
87 28 529	04	023	3-A24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 28 552	04	023	3-A24
87 28 560	04	023	3-A24
87 28 578	04	019	3-A20
87 28 586	04	019	3-A20
87 28 594	04	019	3-A20
87 28 602	04	019	3-A20
87 28 610	04	021	3-A22
87 28 636	04	021	3-A22
87 28 644	04	021	3-A22
87 28 651	04	013	3-A14
87 28 651	04	063	3-C16
87 28 669	04	039	3-B16
87 28 677	04	013	3-A14
87 28 677	04	063	3-C16
87 28 701	04	023	3-A24
87 28 719	04	021	3-A22
87 28 743	04	023	3-A24
87 28 750	04	019	3-A20
87 28 859	04	011	3-A12
87 28 875	04	013	3-A14
87 28 891	04	009	3-A10
87 28 925	04	021	3-A22
87 28 941	04	021	3-A22
87 28 958	04	021	3-A22
87 28 966	04	021	3-A22
87 28 982	04	019	3-A20
87 28 990	04	019	3-A20
87 29 014	04	023	3-A24
87 29 030	04	025	3-B02
87 29 105	04	025	3-B02
87 29 113	04	023	3-A24
87 29 147	04	009	3-A10
87 29 196	04	009	3-A10
87 29 238	04	009	3-A10
87 29 303	04	013	3-A14
87 29 345	04	013	3-A14
87 29 386	04	027	3-B04
87 29 394	04	027	3-B04
87 29 618	04	017	3-A18
87 29 667	04	021	3-A22
87 29 683	04	039	3-B16
87 29 790	04	013	3-A14
87 29 808	04	013	3-A14
87 29 840	04	017	3-A18
87 31 762	04	013	3-A14
87 31 762	04	039	3-B16
87 31 788	04	027	3-B04
87 31 796	04	027	3-B04
87 31 804	04	027	3-B04
87 31 804	04	063	3-C16
87 32 380	04	011	3-A12
87 32 398	04	011	3-A12
87 33 362	04	013	3-A14
87 81 072	04	017	3-A18
87 81 072	04	057	3-C10
87 81 155	04	061	3-C14
87 81 304	04	005	3-A06
87 81 304	04	061	3-C14
87 87 111	02	017	1-C18
87 87 111	02	153	1-I10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 87 228	02	035	1-D12
87 87 277	02	147	1-I04
87 87 285	02	147	1-I04
87 87 301	02	147	1-I04
87 87 319	02	147	1-I04
87 87 335	02	147	1-I04
87 87 764	02	021	1-C22
87 87 780	02	089	1-F18
87 88 150	02	025	1-D02
87 88 218	02	023	1-C24
87 88 226	02	023	1-C24
87 88 242	02	023	1-C24
87 88 259	02	023	1-C24
87 88 382	02	075	1-F04
87 88 507	02	075	1-F04
87 88 523	02	075	1-F04
87 88 721	02	107	1-G12
87 88 754	02	147	1-I04
87 89 315	02	025	1-D02
87 89 661	02	071	1-E24
87 89 778	02	147	1-I04
88 00 914	02	019	1-C20
88 00 914	02	141	1-H22
88 02 175	06	005	3-F06
88 02 175	06	007	3-F08
88 16 415	08A	135	4-F16
88 17 264	02	153	1-I10
88 17 280	02	097	1-G02
88 17 280	02	163	1-I20
88 17 298	02	143	1-H24
88 17 298	02	159	1-I16
88 17 314	03A	015	2-A16
88 17 314	03A	133	2-F14
88 17 348	02	037	1-D14
88 17 348	02	161	1-I18
88 17 405	02	027	1-D04
88 17 405	02	163	1-I20
88 17 538	02	143	1-H24
88 17 538	02	159	1-I16
88 17 561	02	037	1-D14
88 17 561	02	161	1-I18
88 17 686	02	037	1-D14
88 17 686	02	161	1-I18
88 17 728	02	015	1-C16
88 17 728	02	157	1-I14
88 17 835	02	161	1-I18
88 17 850	02	161	1-I18
88 17 884	08A	145	4-G02
88 17 884	08A	147	4-G04
88 17 892	08A	145	4-G02
88 17 892	08A	147	4-G04
88 17 900	02	139	1-H20
88 17 900	02	159	1-I16
88 18 098	04	005	3-A06
88 18 098	04	061	3-C14
88 18 197	02	161	1-I18
88 18 254	02	019	1-C20
88 18 254	02	153	1-I10
88 18 569	02	149	1-I06
88 18 569	02	157	1-I14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
88 18 577	02	111	1-G16
88 18 577	02	113	1-G18
88 18 577	02	115	1-G20
88 18 577	02	117	1-G22
88 18 577	02	163	1-I20
88 19 112	02	163	1-I20
88 19 120	02	163	1-I20
88 19 146	02	097	1-G02
88 19 146	02	163	1-I20
88 19 278	03A	015	2-A16
88 19 278	03A	137	2-F18
88 19 302	03A	015	2-A16
88 19 690	02	111	1-G16
88 19 690	02	113	1-G18
88 19 690	02	115	1-G20
88 19 690	02	117	1-G22
88 19 690	02	119	1-G24
88 19 690	02	163	1-I20
88 19 708	02	121	1-H02
88 19 708	02	123	1-H04
88 19 708	02	163	1-I20
88 19 831	02	019	1-C20
88 19 831	02	153	1-I10
88 19 864	02	037	1-D14
88 19 864	02	161	1-I18
88 19 955	02	147	1-I04
86 40 068	08A	023	4-A24
88 53 772	03A	129	2-F10
88 57 179	02	095	1-F24
88 57 195	02	089	1-F18
88 57 427	02	151	1-I08
88 57 443	02	141	1-H22
88 57 617	03A	021	2-A22
88 57 872	02	019	1-C20
88 58 219	02	083	1-F12
88 58 276	02	027	1-D04
88 59 092	02	027	1-D04
88 59 191	02	035	1-D12
88 59 209	02	035	1-D12
88 59 225	02	141	1-H22
88 59 233	02	019	1-C20
88 59 233	02	141	1-H22
88 59 324	02	027	1-D04
88 59 480	02	039	1-D16
88 59 514	02	033	1-D10
88 59 548	02	143	1-H24
88 59 878	02	097	1-G02
88 59 878	02	099	1-G04
88 59 878	02	101	1-G06
88 59 936	02	075	1-F04
88 59 951	02	075	1-F04
88 59 969	02	105	1-G10
88 59 977	02	103	1-G08
88 59 977	02	105	1-G10
89 03 304	04	057	3-C10
89 07 966	05	013	3-D14
89 07 966	05	015	3-D16
89 08 162	05	013	3-D14
89 08 162	05	015	3-D16
89 09 632	08B	199	5-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 12 115	05	019	3-D20
89 16 272	04	007	3-A08
89 16 272	05	019	3-D20
89 17 395	07	007	3-H08
89 17 411	07	007	3-H08
89 19 490	05	013	3-D14
89 19 490	05	017	3-D18
89 19 862	07	005	3-H06
89 19 870	07	005	3-H06
89 20 019	07	005	3-H06
89 20 019	07	013	3-H14
89 21 108	07	005	3-H06
89 21 520	04	033	3-B10
89 22 445	07	009	3-H10
89 24 490	04	007	3-A08
89 24 557	05	019	3-D20
89 25 067	02	147	1-I04
89 25 067	02	157	1-I14
89 27 139	04	007	3-A08
89 28 699	05	019	3-D20
89 28 756	05	013	3-D14
89 28 756	05	015	3-D16
89 28 947	05	013	3-D14
89 29 259	05	013	3-D14
89 29 531	05	019	3-D20
89 29 671	05	013	3-D14
89 29 671	05	015	3-D16
89 30 299	07	011	3-H12
89 30 307	07	011	3-H12
89 30 349	03A	113	2-E18
89 30 349	03A	119	2-E24
89 31 198	09	005	5-L06
89 31 461	05	013	3-D14
89 31 461	05	015	3-D16
89 31 461	05	017	3-D18
89 31 784	05	013	3-D14
89 31 784	05	017	3-D18
89 31 974	07	005	3-H06
89 32 014	07	011	3-H12
89 32 071	07	011	3-H12
89 32 840	07	005	3-H06
89 32 840	07	013	3-H14
89 33 335	05	013	3-D14
89 33 335	05	015	3-D16
89 33 509	05	019	3-D20
89 33 869	07	005	3-H06
89 33 897	07	009	3-H10
89 33 970	06	005	3-F06
89 33 988	06	005	3-F06
89 34 002	06	005	3-F06
89 34 010	06	005	3-F06
89 34 119	06	013	3-F14
89 34 242	06	017	3-F18
89 34 242	06	025	3-G02
89 34 259	06	017	3-F18
89 34 259	06	025	3-G02
89 34 788	06	005	3-F06
89 34 796	06	005	3-F06
89 34 952	06	009	3-F10
89 35 025	06	009	3-F10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 35 124	04	007	3-A08
89 35 132	05	019	3-D20
89 35 298	07	009	3-H10
89 35 306	07	011	3-H12
89 35 330	07	009	3-H10
89 35 371	04	007	3-A08
89 35 389	02	145	1-I02
89 35 397	02	145	1-I02
89 35 736	06	005	3-F06
89 35 744	06	005	3-F06
89 35 751	04	007	3-A08
89 35 751	05	019	3-D20
89 35 751	08B	151	5-G08
89 35 751	08B	205	5-I14
89 36 163	06	009	3-F10
89 36 304	07	009	3-H10
89 36 403	06	009	3-F10
89 36 411	06	009	3-F10
89 36 619	06	013	3-F14
89 36 619	06	015	3-F16
89 36 643	06	015	3-F16
89 36 676	06	013	3-F14
89 36 684	06	013	3-F14
89 36 684	06	015	3-F16
89 36 700	06	013	3-F14
89 36 791	06	013	3-F14
89 36 882	06	013	3-F14
89 36 882	06	015	3-F16
89 36 890	06	013	3-F14
89 36 908	06	013	3-F14
89 36 932	06	015	3-F16
89 36 965	06	015	3-F16
89 36 973	06	015	3-F16
89 36 999	06	013	3-F14
89 37 005	06	013	3-F14
89 37 021	06	013	3-F14
89 37 039	06	013	3-F14
89 37 070	06	013	3-F14
89 37 146	06	013	3-F14
89 37 161	06	013	3-F14
89 37 500	06	019	3-F20
89 37 500	06	021	3-F22
89 37 617	06	025	3-G02
89 37 625	05	019	3-D20
89 38 136	05	019	3-D20
89 38 359	05	019	3-D20
89 38 466	07	009	3-H10
89 38 466	07	013	3-H14
89 38 466	07	015	3-H16
89 38 995	06	015	3-F16
89 39 175	06	015	3-F16
89 39 274	06	005	3-F06
89 39 282	06	005	3-F06
89 39 332	06	009	3-F10
89 39 340	06	009	3-F10
89 39 423	07	005	3-H06
89 39 423	07	009	3-H10
89 39 423	07	013	3-H14
89 39 423	07	015	3-H16
89 39 449	08B	151	5-G08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 39 449	08B	205	5-I14
89 39 480	02	145	1-I02
89 39 498	02	145	1-I02
89 39 555	07	007	3-H08
89 39 670	05	013	3-D14
89 39 761	08A	037	4-B14
89 39 993	05	009	3-D10
89 40 132	05	013	3-D14
89 40 132	05	015	3-D16
89 40 579	06	015	3-F16
89 40 587	02	145	1-I02
89 40 645	06	009	3-F10
89 40 652	04	053	3-C06
89 40 652	05	015	3-D16
89 40 652	08B	023	5-A24
89 40 678	06	019	3-F20
89 40 678	06	021	3-F22
89 40 769	04	007	3-A08
89 40 769	04	057	3-C10
89 40 819	05	013	3-D14
89 40 819	05	015	3-D16
89 41 015	06	005	3-F06
89 41 023	06	005	3-F06
89 41 114	06	009	3-F10
89 41 155	02	145	1-I02
89 41 205	06	009	3-F10
89 41 270	04	057	3-C10
89 41 312	04	007	3-A08
89 41 320	05	019	3-D20
89 41 403	06	005	3-F06
89 41 478	04	007	3-A08
89 41 478	05	019	3-D20
89 41 502	07	009	3-H10
89 41 528	02	145	1-I02
89 41 536	02	145	1-I02
89 41 544	02	145	1-I02
89 41 551	02	145	1-I02
89 41 569	02	145	1-I02
89 41 577	02	145	1-I02
89 41 601	02	145	1-I02
89 41 619	02	145	1-I02
89 41 635	05	019	3-D20
89 42 005	07	011	3-H12
89 42 021	05	019	3-D20
89 42 575	06	019	3-F20
89 42 575	06	021	3-F22
89 42 575	06	025	3-G02
89 43 391	02	145	1-I02
89 43 979	06	019	3-F20
89 44 001	06	019	3-F20
89 44 001	06	025	3-G02
89 44 373	05	013	3-D20
89 44 407	05	019	3-D20
89 44 795	05	017	3-D18
89 44 977	04	007	3-A08
89 45 032	06	009	3-F10
89 45 156	04	007	3-A08
89 45 248	04	007	3-A08
89 45 248	04	057	3-C10
89 45 255	04	007	3-A08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 45 255	04	057	3-C10
89 45 263	04	007	3-A08
89 45 776	07	005	3-H06
89 45 784	07	005	3-H06
89 45 800	07	005	3-H06
89 45 818	07	009	3-H10
89 45 826	07	009	3-H10
89 46 014	05	013	3-D14
89 46 360	06	017	3-F18
89 47 152	07	009	3-H10
89 47 210	07	009	3-H10
89 47 269	07	009	3-H10
89 47 798	07	007	3-H08
89 47 806	07	007	3-H08
89 47 814	07	007	3-H08
89 47 822	07	007	3-H08
89 47 830	07	007	3-H08
89 47 848	07	007	3-H08
89 47 939	07	009	3-H10
89 47 939	07	013	3-H14
89 47 988	06	009	3-F10
89 48 051	05	019	3-D20
89 48 143	07	007	3-H08
89 48 150	07	007	3-H08
89 48 168	07	007	3-H08
89 48 176	07	007	3-H08
89 48 226	07	005	3-H06
89 48 226	07	009	3-H10
89 48 226	07	013	3-H14
89 48 226	07	015	3-H16
89 48 333	06	019	3-F20
89 48 333	06	025	3-G02
89 48 341	06	019	3-F20
89 50 172	06	009	3-F10
89 50 628	04	033	3-B10
89 50 636	04	033	3-B10
89 50 701	06	009	3-F10
89 52 277	07	011	3-H12
89 52 665	05	007	3-D08
89 52 699	05	013	3-D14
89 52 699	05	017	3-D18
89 53 283	05	005	3-D06
89 54 281	06	009	3-F10
89 54 315	06	011	3-F12
89 54 455	05	021	3-D22
89 54 547	05	007	3-D08
89 55 007	04	057	3-C10
89 55 056	05	023	3-D24
89 55 064	05	023	3-D24
89 55 072	05	005	3-D06
89 55 080	05	005	3-D06
89 55 114	05	005	3-D06
89 55 114	05	023	3-D24
89 55 122	05	005	3-D06
89 55 122	05	023	3-D24
89 55 122	05	025	3-E02
89 55 130	05	005	3-D06
89 55 130	05	023	3-D24
89 55 148	05	023	3-D24
89 55 155	05	023	3-D24

MASTER INDEX

- 0 General 1-A02
- 2 Engine 1-C02
- 3A Electrical, general 2-A02
- 3B Electrical, contact housing 2-G02
- 4 Transmission 3-A02
- 5 Brakes 3-D02
- 6 Front assembly, Steering 3-F02
- 7 Suspension, Wheels 3-H02
- 8A Body, external 4-A02
- 8B Body, internal 5-A02
- 8C Body, heating and ventilation 5-J02
- 9 Tool, Labels 5-L02
- 10 Numerical register 6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 55 239	05	023	3-D24
89 55 288	05	023	3-D24
89 55 296	05	023	3-D24
89 55 304	05	027	3-E04
89 55 312	05	027	3-E04
89 55 395	05	007	3-D08
89 55 403	05	007	3-D08
89 55 411	05	007	3-D08
89 55 429	05	007	3-D08
89 55 437	05	007	3-D08
89 55 445	05	007	3-D08
89 55 445	05	023	3-D24
89 55 452	05	023	3-D24
89 55 460	05	023	3-D24
89 55 478	05	007	3-D08
89 55 478	05	023	3-D24
89 55 486	05	007	3-D08
89 55 973	05	005	3-D06
89 56 385	06	021	3-F22
89 56 393	05	019	3-D20
89 56 443	04	007	3-A08
89 56 443	05	019	3-D20
89 56 468	07	011	3-H12
89 58 357	05	009	3-D10
89 58 779	07	009	3-H10
89 59 520	05	015	3-D16
89 59 538	05	013	3-D14
89 59 538	05	015	3-D16
89 60 254	07	007	3-H08
89 61 096	06	011	3-F12
89 61 104	06	011	3-F12
89 61 732	09	005	5-L06
89 61 740	09	005	5-L06
89 61 799	05	005	3-D06
89 61 799	05	023	3-D24
89 61 807	05	005	3-D06
89 61 807	05	023	3-D24
89 61 849	05	007	3-D08
89 61 849	05	023	3-D24
89 61 872	04	033	3-B10
89 61 872	04	057	3-C10
89 62 128	04	007	3-A08
89 62 367	07	007	3-H08
89 62 375	07	007	3-H08
89 62 656	07	005	3-H06
89 62 664	07	005	3-H06
89 63 019	05	017	3-D18
89 64 686	05	017	3-D18
89 64 991	09	005	5-L06
89 65 097	05	015	3-D16
89 65 329	05	009	3-D10
89 65 329	05	023	3-D24
89 65 360	04	033	3-B10
89 65 360	07	011	3-H12
89 65 477	06	011	3-F12
89 65 634	05	015	3-D16
89 65 782	05	023	3-D24
89 65 808	05	009	3-D10
89 65 808	05	023	3-D24
89 65 907	07	007	3-H08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 66 152	05	011	3-D12
89 66 160	05	025	3-E02
89 66 236	05	025	3-E02
89 66 251	05	025	3-E02
89 66 335	05	011	3-D12
89 66 335	05	025	3-E02
89 66 335	05	027	3-E04
89 66 368	05	011	3-D12
89 66 368	05	025	3-E02
89 66 376	05	015	3-D16
89 66 384	05	015	3-D16
89 66 681	05	011	3-D12
89 66 681	05	027	3-E04
89 66 707	05	025	3-E02
89 66 939	05	011	3-D12
89 66 939	05	027	3-E04
89 67 101	05	023	3-D24
89 67 119	05	023	3-D24
89 67 234	05	011	3-D12
89 67 234	05	025	3-E02
89 67 234	05	027	3-E04
89 67 309	05	011	3-D12
89 67 309	05	025	3-E02
89 67 325	05	011	3-D12
89 67 325	05	025	3-E02
89 67 390	05	011	3-D12
89 67 390	05	025	3-E02
89 67 390	05	027	3-E04
89 67 655	05	021	3-D22
89 67 713	05	005	3-D06
89 68 026	05	007	3-D08
89 68 026	05	023	3-D24
89 68 315	06	011	3-F12
89 68 588	05	005	3-D06
89 68 588	05	007	3-D08
89 68 679	06	011	3-F12
89 68 703	06	011	3-F12
89 70 147	05	027	3-E04
89 70 428	05	007	3-D08
89 70 618	05	007	3-D08
89 70 626	05	007	3-D08
89 70 717	05	007	3-D08
89 70 816	05	007	3-D08
89 70 873	06	013	3-F14
89 71 087	09	005	5-L06
89 71 095	05	007	3-D08
89 71 566	09	005	5-L06
89 71 574	09	005	5-L06
89 71 715	06	011	3-F12
89 72 374	06	009	3-F10
89 72 663	07	007	3-H08
89 72 812	07	007	3-H08
89 72 846	07	015	3-H16
89 72 853	07	015	3-H16
89 72 986	04	033	3-B10
89 73 406	05	007	3-D08
89 73 422	07	007	3-H08
89 73 422	07	015	3-H16
89 73 547	06	011	3-F12
89 75 443	02	071	1-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 75 484	02	063	1-E16
89 76 037	02	137	1-H18
89 76 359	02	059	1-E12
89 76 375	02	059	1-E12
89 76 417	02	057	1-E10
89 76 482	02	049	1-E02
89 76 490	02	073	1-F02
89 76 508	02	049	1-E02
89 76 680	02	113	1-G18
89 76 763	02	113	1-G18
89 76 789	02	113	1-G18
89 76 797	02	113	1-G18
89 76 961	02	059	1-E12
89 77 290	02	059	1-E12
89 77 308	02	059	1-E12
89 77 316	02	059	1-E12
89 77 324	02	059	1-E12
89 77 621	02	071	1-E24
89 77 639	02	071	1-E24
89 77 654	02	059	1-E12
89 77 761	02	061	1-E14
89 77 779	02	061	1-E14
89 77 787	02	137	1-H18
89 77 795	02	047	1-D24
89 77 803	02	047	1-D24
89 77 811	02	061	1-E14
89 78 280	02	071	1-E24
89 78 306	02	045	1-D22
89 78 30[illegible]	02	047	1-D24
89 78 30[illegible]	02	049	1-E02
89 78 314	02	137	1-H18
89 78 371	02	055	1-E08
89 78 405	02	061	1-E14
89 78 561	02	059	1-E12
89 79 189	02	081	1-F10
89 80 021	02	065	1-E18
89 80 047	02	065	1-E18
89 80 278	02	113	1-G18
89 80 278	02	165	1-I22
89 80 328	02	113	1-G18
89 80 328	02	115	1-G20
89 80 328	02	117	1-G22
89 80 328	02	119	1-G24
89 80 328	02	165	1-I22
89 80 328	02	167	1-I24
89 80 393	02	059	1-E12
89 80 393	02	061	1-E14
89 80 443	02	113	1-G18
89 80 468	02	113	1-G18
89 80 534	03A	013	2-A14
89 81 342	02	073	1-F02
89 81 342	02	075	1-F04
89 81 557	02	067	1-E20
89 81 565	02	067	1-E20
89 81 573	02	067	1-E20
89 81 598	02	077	1-F06
89 81 649	02	077	1-F06
89 81 870	02	077	1-F06
89 81 888	02	077	1-F06
89 81 961	02	059	1-E12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 81 961	02	061	1-E14
89 81 961	02	133	1-H14
89 81 961	02	135	1-H16
89 81 979	02	059	1-E12
89 81 979	02	061	1-E14
89 81 979	02	063	1-E16
89 81 979	02	069	1-E22
89 81 979	02	073	1-F02
89 81 979	02	083	1-F12
89 81 987	02	069	1-E22
89 81 987	02	073	1-F02
89 81 987	02	075	1-F04
89 82 100	02	077	1-F06
89 82 118	02	059	1-E12
89 82 126	02	061	1-E14
89 82 159	02	057	1-E10
89 82 209	02	055	1-E08
89 82 498	02	055	1-E08
89 85 384	06	025	3-G02
89 85 830	06	021	3-F22
89 85 848	06	021	3-F22
89 85 947	06	021	3-F22
89 85 954	07	005	3-H06
89 85 954	07	009	3-H10
89 85 954	07	013	3-H14
89 85 954	07	015	3-H16
89 86 051	06	019	3-F20
89 86 051	06	025	3-G02
89 86 069	06	021	3-F22
89 86 192	02	145	1-I02
89 86 622	04	007	3-A08
89 86 663	09	005	5-L06
89 86 705	05	009	3-D10
89 86 713	05	009	3-D10
89 86 911	05	009	3-D10
89 86 911	05	023	3-D24
89 86 986	05	023	3-D24
89 86 994	05	023	3-D24
89 87 018	05	023	3-D24
89 87 232	06	011	3-F12
89 87 273	06	011	3-F12
89 87 406	06	011	3-F12
89 87 596	07	007	3-H08
89 87 620	07	007	3-H08
89 87 802	07	007	3-H08
89 88 289	07	005	3-H06
89 88 297	07	009	3-H10
89 88 313	06	011	3-F12
89 88 420	06	011	3-F12
89 88 933	06	015	3-F16
89 88 941	06	015	3-F16
89 89 659	06	011	3-F12
89 89 840	06	019	3-F20
89 89 840	06	025	3-G02
89 89 857	06	023	3-F24
89 89 857	06	025	3-G02
89 89 881	07	005	3-H06
89 89 899	07	009	3-H10
89 89 907	07	005	3-H06
89 89 915	07	005	3-H06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 89 980	07	009	3-H10
89 89 998	07	009	3-H10
89 90 012	06	005	3-F06
89 90 079	07	009	3-H10
89 90 087	07	005	3-H06
89 90 103	06	011	3-F12
89 90 178	06	025	3-G02
89 90 376	06	011	3-F12
89 90 913	02	145	1-I02
89 90 962	06	011	3-F12
89 90 970	06	011	3-F12
89 90 988	06	011	3-F12
89 91 028	07	013	3-H14
89 91 036	07	013	3-H14
89 91 382	05	019	3-D20
89 91 473	05	019	3-D20
89 91 499	05	019	3-D20
89 91 549	09	005	5-L06
89 91 564	09	005	5-L06
89 91 713	07	013	3-H14
89 91 721	07	013	3-H14
89 91 739	05	013	3-D14
89 91 739	05	017	3-D18
89 93 073	04	057	3-C10
89 93 099	06	013	3-F14
89 93 156	04	007	3-A08
89 93 156	04	057	3-C10
89 93 321	06	005	3-F06
89 93 321	06	025	3-G02
89 93 438	07	005	3-H06
89 93 438	07	013	3-H14
89 93 446	07	009	3-H10
89 93 446	07	013	3-H14
89 93 479	07	005	3-H06
89 93 479	07	013	3-H14
89 93 487	07	009	3-H10
89 93 487	07	013	3-H14
89 93 511	06	013	3-F14
89 93 545	06	013	3-F14
89 93 552	06	017	3-F18
89 93 552	06	025	3-G02
89 93 560	06	017	3-F18
89 93 560	06	025	3-G02
89 93 628	04	033	3-B10
89 93 628	04	057	3-C10
89 93 677	06	025	3-G02
89 93 693	06	013	3-F14
89 93 719	05	005	3-D06
89 93 719	05	025	3-E02
89 93 974	05	005	3-D06
91 00 025	07	005	3-H06
91 00 025	07	009	3-H10
91 00 025	07	013	3-H14
91 00 025	07	015	3-H16
91 00 546	07	015	3-H16
91 00 553	07	015	3-H16
91 00 884	05	005	3-D06
91 01 031	06	005	3-F06
91 01 049	06	005	3-F06
91 01 221	05	021	3-D22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 01 239	05	021	3-D22
91 01 445	05	021	3-D22
91 01 510	07	007	3-H08
91 01 510	07	015	3-H16
91 01 528	05	021	3-D22
91 01 577	06	019	3-F20
91 01 577	06	025	3-G02
91 01 585	06	021	3-F22
91 01 635	05	007	3-D08
91 01 643	05	007	3-D08
91 01 650	05	013	3-D14
91 01 650	05	017	3-D18
91 01 726	05	013	3-D14
91 01 734	05	013	3-D14
91 01 734	05	015	3-D16
91 01 767	05	013	3-D14
91 01 783	05	013	3-D14
91 01 833	05	021	3-D22
91 01 858	06	013	3-F14
91 01 882	07	005	3-H06
91 01 932	07	005	3-H06
91 01 940	07	009	3-H10
91 02 096	06	005	3-F06
91 02 104	06	005	3-F06
91 02 203	05	013	3-D14
91 02 245	05	013	3-D14
91 02 427	07	013	3-H14
91 02 435	07	013	3-H14
91 02 559	06	021	3-F22
91 02 575	05	009	3-D10
91 02 591	05	009	3-D10
91 02 609	05	009	3-D10
91 02 781	07	005	3-H06
91 02 781	07	013	3-H14
91 02 799	07	009	3-H10
91 02 799	07	013	3-H14
91 02 823	04	033	3-B10
91 02 831	04	033	3-B10
91 02 849	05	009	3-D10
91 02 856	05	005	3-D06
91 02 864	05	005	3-D06
91 02 880	04	033	3-B10
91 02 971	05	005	3-D06
91 02 989	05	005	3-D06
91 02 997	05	005	3-D06
91 03 037	05	005	3-D06
91 03 102	07	011	3-H12
91 03 110	07	011	3-H12
91 03 201	06	021	3-F22
91 03 219	07	007	3-H08
91 03 524	07	007	3-H08
91 03 870	07	007	3-H08
91 04 134	05	021	3-D22
91 04 159	05	005	3-D06
91 04 209	06	005	3-F06
91 04 241	05	015	3-D16
91 04 266	05	015	3-D16
91 04 282	05	015	3-D16
91 04 308	05	015	3-D16
91 04 324	05	015	3-D16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 04 340	05	015	3-D16
91 04 365	05	015	3-D16
91 04 399	05	015	3-D16
91 04 407	05	011	3-D12
91 04 472	05	019	3-D20
91 04 498	07	007	3-H08
91 04 555	06	021	3-F22
91 04 647	06	009	3-F10
91 04 738	05	025	3-E02
91 04 746	05	025	3-E02
91 04 787	05	027	3-E04
91 04 795	05	011	3-D12
91 04 811	05	025	3-E02
91 04 829	05	025	3-E02
91 04 837	05	011	3-D12
91 04 944	05	025	3-E02
91 04 951	05	015	3-D16
91 04 993	05	025	3-E02
91 05 016	05	017	3-D18
91 05 032	05	017	3-D18
91 05 123	05	011	3-D12
91 05 297	05	011	3-D12
91 05 305	05	017	3-D18
91 05 313	05	017	3-D18
91 05 354	05	017	3-D18
91 05 560	05	019	3-D20
91 05 610	06	011	3-F12
91 05 651	05	021	3-D22
91 05 701	05	011	3-D12
91 05 719	05	011	3-D12
91 05 735	06	017	3-F18
91 05 735	06	025	3-G02
91 05 768	05	019	3-D20
91 05 859	07	011	3-H12
91 05 891	04	007	3-A08
91 05 925	05	019	3-D20
91 05 933	04	007	3-A08
91 06 022	06	013	3-F14
91 06 030	06	013	3-F14
91 06 097	05	015	3-D16
91 06 121	05	015	3-D16
91 06 139	05	015	3-D16
91 06 147	05	015	3-D16
91 06 154	06	013	3-F14
91 06 212	06	017	3-F18
91 06 220	06	015	3-F16
91 06 279	06	015	3-F16
91 06 287	06	017	3-F18
91 06 295	06	013	3-F14
91 06 295	06	025	3-G02
91 06 303	06	013	3-F14
91 06 329	06	009	3-F10
91 06 626	06	009	3-F10
91 06 741	05	015	3-D16
91 06 758	05	015	3-D16
91 06 766	05	015	3-D16
91 06 774	05	015	3-D16
91 07 053	02	017	1-C18
91 07 376	02	017	1-C18
91 07 541	02	027	1-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 07 665	02	025	1-D02
91 08 291	02	019	1-C20
91 08 655	02	083	1-F12
91 09 182	02	037	1-D14
91 09 406	02	089	1-F18
91 09 422	02	089	1-F18
91 09 588	02	089	1-F18
91 12 459	02	037	1-D14
91 13 838	02	075	1-F04
91 14 455	03A	013	2-A14
91 14 679	02	105	1-G10
91 14 703	02	071	1-E24
91 14 869	02	087	1-F16
91 14 877	02	141	1-H22
91 14 885	02	019	1-C20
91 15 346	02	017	1-C18
91 15 353	02	017	1-C18
91 15 841	02	031	1-D08
91 15 858	02	031	1-D08
91 15 866	02	031	1-D08
91 15 874	02	031	1-D08
91 15 882	02	031	1-D08
91 16 062	02	017	1-C18
91 16 088	02	083	1-F12
91 16 294	02	021	1-C22
91 16 385	02	161	1-I18
91 16 385	03A	015	2-A16
91 16 443	02	025	1-D02
91 16 443	02	035	1-D12
91 16 757	02	021	1-C22
91 16 856	02	021	1-C22
91 16 864	02	027	1-D04
91 16 864	02	035	1-D12
91 17 060	02	025	1-D02
91 17 201	03A	013	2-A14
91 17 516	02	143	1-H24
91 17 789	02	071	1-E24
91 17 805	02	027	1-D04
91 17 839	02	153	1-I10
91 17 847	02	153	1-I10
91 17 979	03A	013	2-A14
91 18 019	02	099	1-G04
91 18 027	02	099	1-G04
91 18 084	02	029	1-D06
91 18 092	02	029	1-D06
91 18 100	02	029	1-D06
91 18 118	02	029	1-D06
91 18 126	02	029	1-D06
91 18 233	02	029	1-D06
91 18 241	02	029	1-D06
91 18 258	02	029	1-D06
91 18 266	02	029	1-D06
91 18 274	02	029	1-D06
91 19 033	02	147	1-I04
91 19 306	02	147	1-I04
91 19 330	02	151	1-I08
91 19 447	02	071	1-E24
91 19 454	02	071	1-E24
91 19 462	02	071	1-E24
91 19 504	02	107	1-G12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-B17 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 19 512	02	107	1-G12
91 19 561	03A	021	2-A22
91 19 728	02	107	1-G12
91 19 868	02	089	1-F18
91 19 934	02	013	1-C14
91 19 942	02	017	1-C18
91 20 130	03A	023	2-A24
91 20 148	03A	023	2-A24
91 20 155	03A	023	2-A24
91 20 163	03A	023	2-A24
91 20 171	03A	023	2-A24
91 20 189	03A	023	2-A24
91 20 197	03A	023	2-A24
91 20 205	03A	023	2-A24
91 20 239	03A	055	2-C08
91 20 247	03A	057	2-C10
91 20 668	03B	013	2-G14
91 20 668	03B	041	2-H18
91 20 668	03B	071	2-I24
91 20 775	03B	095	2-J24
91 20 775	03B	105	2-K10
91 20 775	03B	115	2-K20
91 20 783	03B	025	2-H02
91 20 783	03B	027	2-H04
91 20 783	03B	053	2-I06
91 20 783	03B	057	2-I10
91 20 783	03B	061	2-I14
91 20 783	03B	085	2-J14
91 20 783	03B	089	2-J18
91 20 783	03B	095	2-J24
91 20 783	03B	105	2-K10
91 20 783	03B	115	2-K20
91 20 791	03B	011	2-G12
91 20 791	03B	013	2-G14
91 20 791	03B	017	2-G18
91 20 791	03B	021	2-G22
91 20 791	03B	027	2-H04
91 20 791	03B	029	2-H06
91 20 791	03B	031	2-H08
91 20 791	03B	039	2-H16
91 20 791	03B	041	2-H18
91 20 791	03B	045	2-H22
91 20 791	03B	057	2-I10
91 20 791	03B	069	2-I22
91 20 791	03B	071	2-I24
91 20 791	03B	075	2-J04
91 20 791	03B	083	2-J12
91 20 791	03B	085	2-J14
91 20 791	03B	095	2-J24
91 20 791	03B	105	2-K10
91 20 791	03B	115	2-K20
91 20 882	03A	045	2-B22
91 20 882	03A	135	2-F16
91 20 957	03B	011	2-G12
91 20 957	03B	013	2-G14
91 20 957	03B	017	2-G18
91 20 957	03B	021	2-G22
91 20 957	03B	023	2-G24
91 20 957	03B	025	2-H02
91 20 957	03B	027	2-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 20 957	03B	029	2-H06
91 20 957	03B	031	2-H08
91 20 957	03B	039	2-H16
91 20 957	03B	041	2-H18
91 20 957	03B	045	2-H22
91 20 957	03B	049	2-I02
91 20 957	03B	053	2-I06
91 20 957	03B	055	2-I08
91 20 957	03B	057	2-I10
91 20 957	03B	061	2-I14
91 20 957	03B	069	2-I22
91 20 957	03B	071	2-I24
91 20 957	03B	075	2-J04
91 20 957	03B	079	2-J08
91 20 957	03B	083	2-J12
91 20 957	03B	085	2-J14
91 20 957	03B	089	2-J18
91 20 957	03B	097	2-K02
91 20 957	03B	105	2-K10
91 20 957	03B	115	2-K20
91 21 526	03A	005	2-A06
91 21 757	03A	073	2-D02
91 21 757	03A	085	2-D14
91 21 757	03A	093	2-D22
91 21 757	03A	103	2-E08
91 22 086	03A	079	2-D08
91 22 557	03B	027	2-H04
91 22 557	03B	053	2-I06
91 22 557	03B	085	2-J14
91 22 573	03A	051	2-C04
91 22 813	03A	029	2-B06
91 22 821	03A	029	2-B06
91 22 839	03A	029	2-B06
91 22 847	03A	029	2-B06
91 22 895	03A	029	2-B06
91 23 001	03A	029	2-B06
91 23 019	03A	029	2-B06
91 23 027	03A	029	2-B06
91 23 217	03A	045	2-B22
91 23 225	03A	045	2-B22
91 23 399	03B	027	2-H04
91 23 399	03B	053	2-I06
91 23 399	03B	085	2-J14
91 23 548	03B	013	2-G14
91 23 548	03B	041	2-H18
91 23 548	03B	071	2-I24
91 23 555	03B	021	2-G22
91 23 555	03B	049	2-I02
91 23 555	03B	079	2-J08
91 24 090	03B	025	2-H02
91 24 090	03B	053	2-I06
91 24 090	03B	083	2-J12
91 24 132	03A	037	2-B14
91 24 140	03A	037	2-B14
91 24 157	03B	011	2-G12
91 24 157	03B	039	2-H16
91 24 157	03B	069	2-I22
91 24 165	03B	017	2-G18
91 24 165	03B	045	2-H22
91 24 165	03B	075	2-J04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 24 181	03B	053	2-I06
91 24 199	03B	027	2-H04
91 24 199	03B	057	2-I10
91 24 199	03B	085	2-J14
91 24 603	03A	111	2-E16
91 24 611	03A	069	2-C22
91 24 645	03A	007	2-A08
91 24 645	03A	009	2-A10
91 24 652	03A	053	2-C06
91 24 660	03A	053	2-C06
91 24 678	08B	019	5-A20
91 24 686	03A	053	2-C06
91 25 212	03A	053	2-C06
91 25 220	03A	131	2-F12
91 25 238	03A	131	2-F12
91 25 543	03A	069	2-C22
91 25 543	03B	027	2-H04
91 25 543	03B	057	2-I10
91 25 543	03B	085	2-J14
91 25 824	02	025	1-D02
91 25 824	02	153	1-I10
91 26 277	02	153	1-I10
91 26 434	02	033	1-D10
91 26 442	02	033	1-D10
91 26 459	02	033	1-D10
91 26 467	02	033	1-D10
91 26 475	02	033	1-D10
91 27 366	02	161	1-I18
91 27 432	02	025	1-D02
91 27 440	03A	013	2-A14
91 28 117	02	075	1-F04
91 28 125	03A	013	2-A14
91 28 224	02	089	1-F18
91 28 497	02	095	1-F24
91 28 505	02	095	1-F24
91 29 651	02	017	1-C18
91 29 909	02	017	1-C18
91 33 505	02	027	1-D04
91 33 513	02	027	1-D04
91 33 968	02	033	1-D10
91 33 976	02	033	1-D10
91 33 984	02	033	1-D10
91 33 992	02	033	1-D10
91 34 008	02	033	1-D10
91 34 420	02	017	1-C18
91 36 243	02	043	1-D20
91 36 243	02	073	1-F02
91 36 243	02	079	1-F08
91 36 243	02	081	1-F10
91 36 243	02	083	1-F12
91 36 243	02	103	1-G08
91 36 243	02	105	1-G10
91 36 243	02	107	1-G12
91 36 243	02	147	1-I04
91 36 243	02	149	1-I06
91 36 243	02	151	1-I08
91 36 243	03A	017	2-A18
91 36 243	08C	015	5-J16
91 36 250	02	017	1-C18
91 36 276	02	161	1-I18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 36 276	03A	015	2-A16
91 44 684	02	021	1-C22
91 56 399	08B	113	5-E18
91 56 399	08B	127	5-F08
91 56 407	08B	113	5-E18
91 56 407	08B	127	5-F08
91 56 498	08B	113	5-E18
91 56 498	08B	127	5-F08
91 56 506	08B	113	5-E18
91 56 506	08B	127	5-F08
91 56 597	08B	113	5-E18
91 56 597	08B	127	5-F08
91 56 605	08B	113	5-E18
91 56 605	08B	127	5-F08
91 56 696	08B	113	5-E18
91 56 696	08B	127	5-F08
91 56 704	08B	113	5-E18
91 56 704	08B	127	5-F08
91 56 894	08B	113	5-E18
91 56 894	08B	127	5-F08
91 56 902	08B	113	5-E18
91 56 902	08B	127	5-F08
91 56 977	08B	115	5-E20
91 56 977	08B	129	5-F10
91 56 985	08B	115	5-E20
91 56 985	08B	129	5-F10
91 57 132	08B	115	5-E20
91 57 132	08B	129	5-F10
91 57 140	08B	115	5-E20
91 57 140	08B	129	5-F10
91 59 070	08B	115	5-E20
91 59 070	08B	129	5-F10
91 59 088	08B	115	5-E20
91 59 088	08B	129	5-F10
91 59 237	08B	115	5-E20
91 59 237	08B	129	5-F10
91 59 245	08B	115	5-E20
91 59 245	08B	129	5-F10
91 59 393	08B	115	5-E20
91 59 393	08B	129	5-F10
91 59 401	08B	115	5-E20
91 59 401	08B	129	5-F10
91 59 492	08B	115	5-E20
91 59 492	08B	129	5-F10
91 59 500	08B	115	5-E20
91 59 500	08B	129	5-F10
91 59 575	08B	115	5-E20
91 59 575	08B	129	5-F10
91 59 583	08B	115	5-E20
91 59 583	08B	129	5-F10
91 59 757	08B	113	5-E18
91 59 757	08B	127	5-F08
91 59 765	08B	113	5-E18
91 59 765	08B	127	5-F08
91 59 872	08B	113	5-E18
91 59 872	08B	127	5-F08
91 59 880	08B	113	5-E18
91 59 880	08B	127	5-F08
91 59 971	08B	113	5-E18
91 59 971	08B	127	5-F08

6-B18 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 59 989	08B	113	5-E18
91 59 989	08B	127	5-F08
91 60 003	08A	069	4-C22
91 60 052	08B	181	5-H14
91 60 276	08B	183	5-H16
91 60 326	08B	181	5-H14
91 60 334	08B	201	5-I10
91 60 342	08B	201	5-I10
91 60 508	08B	135	5-F16
91 60 516	08B	135	5-F16
91 60 524	08B	135	5-F16
91 60 524	08B	137	5-F18
91 60 524	08B	139	5-F20
91 60 532	08B	135	5-F16
91 60 532	08B	137	5-F18
91 60 532	08B	139	5-F20
91 60 540	08B	135	5-F16
91 60 540	08B	137	5-F18
91 60 540	08B	139	5-F20
91 60 557	08B	135	5-F16
91 60 557	08B	137	5-F18
91 60 557	08B	139	5-F20
91 60 649	08B	185	5-H18
91 60 664	08B	199	5-I08
91 61 019	08B	031	5-B08
91 61 035	08B	031	5-B08
91 61 043	08B	031	5-B08
91 61 043	08B	043	5-B20
91 61 043	08B	063	5-C16
91 61 043	08B	075	5-D04
91 61 324	08B	031	5-B08
91 61 324	08B	043	5-B20
91 61 324	08B	063	5-C16
91 61 324	08B	075	5-D04
91 61 415	08A	123	4-F04
91 61 423	08A	123	4-F04
91 62 199	08B	029	5-B06
91 62 207	08B	029	5-B06
91 62 215	08B	031	5-B08
91 62 223	08B	029	5-B06
91 62 231	08B	029	5-B06
91 62 249	08B	031	5-B08
91 62 256	08B	029	5-B06
91 62 256	08B	039	5-B16
91 62 264	08B	029	5-B06
91 62 264	08B	039	5-B16
91 62 264	08B	059	5-C12
91 62 272	08B	031	5-B08
91 62 272	08B	041	5-B18
91 62 272	08B	061	5-C14
91 62 280	08B	029	5-B06
91 62 298	08B	029	5-B06
91 62 306	08B	031	5-B08
91 62 397	08B	029	5-B06
91 62 397	08B	039	5-B16
91 62 405	08B	029	5-B06
91 62 405	08B	039	5-B16
91 62 405	08B	059	5-C12
91 62 413	08B	031	5-B08
91 62 413	08B	041	5-B18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 62 413	08B	061	5-C14
91 62 777	08B	081	5-D10
91 62 785	08B	081	5-D10
91 62 793	08B	081	5-D10
91 62 801	08B	081	5-D10
91 62 819	08B	081	5-D10
91 62 827	08B	081	5-D10
91 62 892	08B	081	5-D10
91 62 892	08B	095	5-D24
91 62 900	08B	081	5-D10
91 62 900	08B	095	5-D24
91 62 918	08B	081	5-D10
91 62 918	08B	095	5-D24
91 62 926	08B	081	5-D10
91 62 926	08B	095	5-D24
91 62 934	08B	081	5-D10
91 62 934	08B	095	5-D24
91 62 942	08B	081	5-D10
91 62 942	08B	095	5-D24
91 63 296	08B	089	5-D18
91 63 304	08B	089	5-D18
91 63 411	08B	089	5-D18
91 63 429	08B	089	5-D18
91 63 510	08B	091	5-D20
91 63 528	08B	091	5-D20
91 63 619	08B	091	5-D20
91 63 627	08B	091	5-D20
91 64 971	08B	115	5-E20
91 64 971	08B	129	5-F10
91 64 989	08B	115	5-E20
91 64 989	08B	129	5-F10
91 65 911	02	071	1-E24
91 66 273	02	021	1-C22
91 66 273	02	027	1-D04
91 66 273	02	083	1-F12
91 66 273	03A	005	2-A06
91 66 273	03A	035	2-B12
91 66 273	03A	039	2-B16
91 66 273	03A	041	2-B18
91 66 273	03A	045	2-B22
91 66 273	08A	061	4-C14
91 66 273	08A	065	4-C18
91 66 273	08A	067	4-C20
91 66 273	08A	113	4-E18
91 66 273	08A	155	4-G12
91 66 281	04	039	3-B16
91 66 281	08B	177	5-H10
91 66 299	02	027	1-D04
91 66 299	02	103	1-G08
91 66 299	02	105	1-G10
91 66 299	02	107	1-G12
91 66 299	03A	017	2-A18
91 66 307	02	027	1-D04
91 66 315	02	105	1-G10
91 66 315	02	107	1-G12
91 66 323	03A	019	2-A20
91 66 323	03A	021	2-A22
91 66 331	02	053	1-E06
91 66 331	02	121	1-H02
91 66 331	02	123	1-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 66 331	02	141	1-H22
91 66 331	04	005	3-A06
91 66 331	04	015	3-A16
91 66 331	04	037	3-B14
91 66 331	05	017	3-D18
91 66 331	06	023	3-F24
91 66 331	08C	019	5-J20
91 66 331	08C	025	5-K02
91 66 331	08C	031	5-K08
91 66 331	08C	033	5-K10
91 66 356	02	085	1-F14
91 66 356	02	091	1-F20
91 66 356	08A	015	4-A16
91 66 356	08A	017	4-A18
91 66 356	08A	021	4-A22
91 66 356	08C	013	5-J14
91 66 356	08C	025	5-K02
91 66 364	02	015	1-C16
91 66 364	02	027	1-D04
91 66 364	02	087	1-F16
91 66 364	02	093	1-F22
91 66 364	02	095	1-F24
91 66 364	02	111	1-G16
91 66 364	02	113	1-G18
91 66 364	02	117	1-G22
91 66 364	02	121	1-H02
91 66 364	02	123	1-H04
91 66 364	02	141	1-H22
91 66 364	03A	029	2-B06
91 66 364	03A	041	2-B18
91 66 364	04	017	3-A18
91 66 364	05	015	3-D16
91 66 364	05	017	3-D18
91 66 364	08B	005	5-A06
91 66 364	08B	139	5-F20
91 66 364	08B	161	5-G18
91 66 364	08B	163	5-G20
91 66 364	08C	011	5-J12
91 66 364	08C	013	5-J14
91 66 364	08C	027	5-K04
91 66 364	08C	031	5-K08
91 66 364	08C	033	5-K10
91 66 372	02	009	1-C10
91 66 372	02	011	1-C12
91 66 372	02	013	1-C14
91 66 372	02	027	1-D04
91 66 372	02	039	1-D16
91 66 372	02	053	1-E06
91 66 372	02	069	1-E22
91 66 372	03A	067	2-C20
91 66 372	03A	115	2-E20
91 66 372	04	015	3-A16
91 66 372	04	029	3-B06
91 66 372	04	031	3-B08
91 66 372	04	039	3-B16
91 66 372	04	055	3-C08
91 66 372	05	011	3-D12
91 66 372	06	021	3-F22
91 66 372	08A	077	4-D06
91 66 372	08B	119	5-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 66 372	08C	019	5-J20
91 66 372	08C	025	5-K02
91 66 372	08C	031	5-K08
91 66 372	08C	033	5-K10
91 66 380	02	139	1-H20
91 66 406	02	057	1-E10
91 66 406	02	059	1-E12
91 66 406	02	061	1-E14
91 66 406	02	085	1-F14
91 66 406	02	089	1-F18
91 66 406	03A	039	2-B16
91 66 406	03A	055	2-C08
91 66 406	08A	055	4-C08
91 66 406	08C	019	5-J20
91 66 406	08C	025	5-K02
91 66 406	08C	031	5-K08
91 66 406	08C	033	5-K10
91 66 687	02	159	1-I16
91 96 049	05	013	3-D14
91 96 056	05	013	3-D14
91 96 056	05	015	3-D16
91 96 072	03A	069	2-C22
91 96 130	05	013	3-D14
91 96 130	05	015	3-D16
91 96 148	05	013	3-D14
91 96 163	05	021	3-D22
92 06 657	08A	005	4-A06
92 07 911	08A	005	4-A06
92 20 161	08A	107	4-E12
92 20 161	08A	115	4-E20
92 20 864	08A	013	4-A14
92 20 880	08A	009	4-A10
92 20 880	08A	107	4-E12
92 20 898	08A	049	4-C02
92 20 906	08A	049	4-C02
92 20 922	08A	049	4-C02
92 20 930	08A	045	4-B22
92 20 930	08A	049	4-C02
92 20 948	08A	045	4-B22
92 20 948	08A	049	4-C02
92 20 955	08A	045	4-B22
92 20 955	08A	049	4-C02
92 20 963	08A	045	4-B22
92 20 963	08A	049	4-C02
92 20 971	08A	009	4-A10
92 20 989	08A	009	4-A10
92 20 997	08A	045	4-B22
92 20 997	08A	049	4-C02
92 21 383	08A	009	4-A10
92 21 508	08A	007	4-A08
92 21 656	08A	009	4-A10
92 21 664	08A	009	4-A10
92 21 987	08A	077	4-D06
92 21 995	08A	041	4-B18
92 22 001	08A	041	4-B18
92 22 175	08A	043	4-B20
92 22 183	08A	043	4-B20
92 22 613	08A	119	4-E24
92 22 613	08A	149	4-G06
92 22 613	08A	151	4-G08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 22 670	08A	045	4-B22
92 22 670	08A	049	4-C02
92 22 688	08A	045	4-B22
92 22 688	08A	049	4-C02
92 22 696	08A	045	4-B22
92 22 696	08A	049	4-C02
92 22 704	08A	045	4-B22
92 22 704	08A	049	4-C02
92 22 795	08A	081	4-D10
92 22 803	08A	081	4-D10
92 22 837	08A	081	4-D10
92 22 902	08A	109	4-E14
92 22 902	08A	117	4-E22
92 22 910	08A	109	4-E14
92 22 910	08A	117	4-E22
92 22 936	08A	109	4-E14
92 22 936	08A	117	4-E22
92 22 951	08A	109	4-E14
92 22 951	08A	117	4-E22
92 22 977	08A	009	4-A10
92 22 977	08A	049	4-C02
92 23 025	08A	009	4-A10
92 23 066	08A	009	4-A10
92 23 074	08A	009	4-A10
92 23 082	06	021	3-F22
92 23 124	08A	087	4-D16
92 23 207	08A	087	4-D16
92 23 223	08A	087	4-D16
92 23 371	08A	077	4-D06
92 23 439	08A	117	4-E22
92 23 447	08A	117	4-E22
92 23 538	08A	117	4-E22
92 23 686	08A	045	4-B22
92 23 686	08A	049	4-C02
92 23 694	08A	065	4-C18
92 23 694	08A	145	4-G02
92 23 694	08A	147	4-G04
92 23 702	08A	065	4-C18
92 23 702	08A	145	4-G02
92 23 702	08A	147	4-G04
92 23 736	08A	015	4-A16
92 23 736	08A	019	4-A20
92 23 744	08A	015	4-A16
92 23 744	08A	019	4-A20
92 23 751	08A	015	4-A16
92 23 751	08A	019	4-A20
92 23 777	08A	041	4-B18
92 23 785	08A	041	4-B18
92 23 926	08A	013	4-A14
92 23 967	08A	005	4-A06
92 23 991	08A	009	4-A10
92 23 991	08A	017	4-A18
92 23 991	08A	021	4-A22
92 24 544	08A	069	4-C22
92 24 544	08A	073	4-D02
92 25 475	08A	081	4-D10
92 25 483	08A	081	4-D10
92 25 806	08A	005	4-A06
92 26 028	08A	121	4-F02
92 26 028	08A	129	4-F10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 26 481	08A	107	4-E12
92 26 481	08A	115	4-E20
92 26 499	08A	107	4-E12
92 26 499	08A	115	4-E20
92 26 523	08A	109	4-E14
92 26 523	08A	117	4-E22
92 26 531	08A	109	4-E14
92 26 531	08A	117	4-E22
92 26 838	08A	065	4-C18
92 26 846	08A	065	4-C18
92 27 539	08A	093	4-D22
92 27 547	08A	093	4-D22
92 27 554	08A	015	4-A16
92 27 554	08A	019	4-A20
92 27 711	08A	087	4-D16
92 27 729	08A	087	4-D16
92 27 745	08A	087	4-D16
92 27 778	08A	087	4-D16
92 27 927	08A	085	4-D14
92 27 927	08A	153	4-G10
92 27 935	08A	083	4-D12
92 27 950	08A	085	4-D14
92 27 968	08A	085	4-D14
92 28 008	08A	085	4-D14
92 28 008	08A	153	4-G10
92 28 131	08A	009	4-A10
92 28 149	03A	111	2-E16
92 28 149	08A	015	4-A16
92 28 149	08A	019	4-A20
92 28 156	08A	015	4-A16
92 28 156	08A	019	4-A20
92 28 180	08A	005	4-A06
92 28 214	08A	043	4-B20
92 28 222	08A	043	4-B20
92 28 230	08A	041	4-B18
92 28 248	08A	041	4-B18
92 28 255	08A	095	4-D24
92 28 255	08A	143	4-F24
92 28 503	08A	077	4-D06
92 29 717	08A	041	4-B18
92 29 725	08A	041	4-B18
92 29 949	08A	013	4-A14
92 30 079	08A	007	4-A08
92 30 277	08A	067	4-C20
92 30 293	02	109	1-G14
92 30 293	08A	095	4-D24
92 30 293	08A	105	4-E10
92 30 293	08A	131	4-F12
92 30 293	08A	133	4-F14
92 30 293	08A	153	4-G10
92 30 327	08A	095	4-D24
92 30 335	08A	009	4-A10
92 30 350	08A	039	4-B16
92 30 632	08A	067	4-C20
92 30 640	08A	067	4-C20
92 30 889	08A	081	4-D10
92 31 002	08A	085	4-D14
92 31 002	08A	153	4-G10
92 31 010	08A	085	4-D14
92 31 168	08A	009	4-A10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 31 176	08A	121	4-F02
92 31 184	08A	121	4-F02
92 31 192	08A	127	4-F08
92 31 200	08A	127	4-F08
92 31 218	08A	127	4-F08
92 31 226	08A	127	4-F08
92 31 234	08A	127	4-F08
92 31 242	08A	129	4-F10
92 31 267	08A	081	4-D10
92 31 499	08A	107	4-E12
92 31 499	08A	115	4-E20
92 31 515	08A	081	4-D10
92 31 523	08A	081	4-D10
92 31 671	08A	069	4-C22
92 31 705	08A	007	4-A08
92 31 796	08A	077	4-D06
92 31 804	08A	009	4-A10
92 31 812	08A	009	4-A10
92 31 820	08A	007	4-A08
92 32 778	08A	013	4-A14
92 32 786	08A	013	4-A14
92 33 248	08A	109	4-E14
92 33 248	08A	117	4-E22
92 33 255	08A	109	4-E14
92 33 255	08A	117	4-E22
92 33 263	08A	109	4-E14
92 33 263	08A	117	4-E22
92 33 271	08A	109	4-E14
92 33 271	08A	117	4-E22
92 33 487	08A	055	4-C08
92 33 495	08A	055	4-C08
92 33 503	08A	059	4-C12
92 33 511	08A	059	4-C12
92 33 537	08A	015	4-A16
92 33 719	08A	077	4-D06
92 33 917	08A	081	4-D10
92 34 055	08A	037	4-B14
92 34 287	08A	009	4-A10
92 34 378	08A	059	4-C12
92 34 386	08A	059	4-C12
92 35 078	08A	081	4-D10
92 35 094	08A	115	4-E20
92 35 102	08A	115	4-E20
92 35 342	08B	021	5-A22
92 35 516	08A	107	4-E12
92 35 516	08A	115	4-E20
92 35 573	08A	073	4-D02
92 35 581	08A	073	4-D02
92 35 805	08A	075	4-D04
92 35 813	08A	075	4-D04
92 36 589	08A	093	4-D22
92 36 605	08A	121	4-F02
92 36 605	08A	129	4-F10
92 36 654	08A	043	4-B20
92 36 662	08A	043	4-B20
92 36 894	08A	089	4-D18
92 36 902	08A	089	4-D18
92 36 910	08A	089	4-D18
92 36 928	08A	089	4-D18
92 36 936	08A	089	4-D18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 36 944	08A	089	4-D18
92 36 951	08A	089	4-D18
92 36 969	08A	089	4-D18
92 36 977	08A	089	4-D18
92 36 985	08A	089	4-D18
92 36 993	08A	089	4-D18
92 37 009	08A	055	4-C08
92 37 033	08A	107	4-E12
92 37 041	08A	107	4-E12
92 37 272	08A	077	4-D06
92 37 439	08A	019	4-A20
92 37 447	08A	019	4-A20
92 37 553	08A	121	4-F02
92 37 678	08A	121	4-F02
92 37 686	08A	127	4-F08
92 37 694	08A	127	4-F08
92 37 751	08A	077	4-D06
92 38 148	08A	019	4-A20
92 38 205	08A	095	4-D24
92 39 153	08A	121	4-F02
92 39 161	08A	121	4-F02
92 39 211	08A	127	4-F08
92 39 229	08A	127	4-F08
92 39 294	08A	127	4-F08
92 39 302	08A	127	4-F08
92 39 310	08A	127	4-F08
92 39 328	08A	127	4-F08
92 39 336	08A	121	4-F02
92 39 344	08A	121	4-F02
92 39 351	08A	117	4-E22
92 39 369	08A	117	4-E22
92 39 518	08A	127	4-F08
92 39 526	08A	127	4-F08
92 39 716	08A	127	4-F08
92 39 724	08A	127	4-F08
92 41 035	08A	087	4-D16
92 55 845	08A	113	4-E18
92 55 845	08A	147	4-G04
92 59 532	08A	111	4-E16
92 63 393	08A	031	4-B08
92 63 393	08A	033	4-B10
92 64 508	08A	055	4-C08
92 67 782	08B	157	5-G14
92 67 782	08B	165	5-G22
92 68 160	08A	077	4-D06
92 68 186	03A	069	2-C22
92 78 334	08A	111	4-E16
92 78 334	08A	143	4-F24
92 80 173	08A	087	4-D16
92 80 256	08A	087	4-D16
92 80 298	08A	087	4-D16
92 80 314	08A	087	4-D16
92 80 355	08A	107	4-E12
92 80 363	08A	107	4-E12
92 80 371	08A	115	4-E20
92 80 389	08A	115	4-E20
92 80 397	08A	115	4-E20
92 80 405	08A	115	4-E20
92 80 413	08A	115	4-E20
92 80 421	08A	115	4-E20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 80 439	08A	107	4-E12
92 80 439	08A	115	4-E20
92 80 462	08A	115	4-E20
92 80 470	08A	115	4-E20
92 80 488	08A	107	4-E12
92 80 488	08A	115	4-E20
92 80 496	08A	107	4-E12
92 80 496	08A	115	4-E20
92 80 736	08A	019	4-A20
92 80 835	08A	019	4-A20
92 81 072	08A	019	4-A20
92 81 098	08A	019	4-A20
92 81 114	08A	069	4-C22
92 81 114	08A	073	4-D02
92 81 130	08A	075	4-D04
92 81 346	08A	067	4-C20
92 81 775	08A	067	4-C20
92 81 783	08A	067	4-C20
92 82 153	08A	089	4-D18
92 82 211	08A	089	4-D18
92 82 229	08A	089	4-D18
92 82 609	08A	019	4-A20
92 82 716	08A	089	4-D18
92 82 732	08A	089	4-D18
92 82 740	08A	089	4-D18
92 82 922	08A	089	4-D18
92 82 971	08A	067	4-C20
92 82 989	08A	067	4-C20
92 83 722	09	007	5-L08
92 84 092	08A	127	4-F08
92 84 100	08A	127	4-F08
92 84 118	08A	127	4-F08
92 84 126	08A	127	4-F08
92 84 159	08A	127	4-F08
92 84 167	08A	127	4-F08
92 84 175	08A	121	4-F02
92 84 183	08A	121	4-F02
92 84 191	08A	121	4-F02
92 84 209	08A	121	4-F02
92 84 217	08A	127	4-F08
92 84 225	08A	127	4-F08
92 84 274	08A	005	4-A06
92 84 282	08A	005	4-A06
92 84 316	08A	005	4-A06
92 84 324	08A	005	4-A06
92 84 373	08A	067	4-C20
92 84 381	08A	067	4-C20
92 84 480	08A	077	4-D06
92 84 498	08A	077	4-D06
92 84 506	08A	077	4-D06
92 84 514	08A	077	4-D06
92 85 180	08A	005	4-A06
92 85 602	08A	069	4-C22
92 85 602	08A	073	4-D02
92 85 867	08A	105	4-E10
92 85 875	08A	105	4-E10
92 86 188	08A	091	4-D20
92 86 188	08A	093	4-D22
92 86 253	08A	039	4-B16
92 86 261	08A	039	4-B16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 86 931	08A	009	4-A10
92 86 949	08A	009	4-A10
92 87 012	08A	061	4-C14
92 87 020	08A	061	4-C14
92 87 038	08A	061	4-C14
92 87 038	08A	145	4-G02
92 87 046	08A	061	4-C14
92 87 046	08A	145	4-G02
92 87 079	08A	115	4-E20
92 87 087	08A	115	4-E20
92 87 111	08A	107	4-E12
92 87 111	08A	115	4-E20
92 87 392	08A	073	4-D02
92 87 392	08A	075	4-D04
92 88 119	08C	013	5-J14
92 88 127	08A	093	4-D22
92 88 150	08C	013	5-J14
92 88 168	08C	013	5-J14
92 88 192	08A	107	4-E12
92 88 200	08A	107	4-E12
92 88 259	08A	089	4-D18
92 88 267	08A	089	4-D18
92 88 432	02	043	1-D20
92 88 432	02	045	1-D22
92 88 432	02	049	1-E02
92 88 523	08A	095	4-D24
92 88 523	08A	143	4-F24
92 88 812	08A	097	4-E02
92 88 846	08A	131	4-F12
92 89 059	08A	041	4-B18
92 89 083	08A	049	4-C02
92 89 224	08A	089	4-D18
92 89 232	08A	089	4-D18
92 89 273	08A	089	4-D18
92 89 281	08A	089	4-D18
92 89 299	08A	089	4-D18
92 89 307	08A	089	4-D18
92 89 356	08A	067	4-C20
92 89 356	08A	147	4-G04
92 89 364	08A	067	4-C20
92 89 364	08A	147	4-G04
92 89 372	08A	067	4-C20
92 89 380	08A	067	4-C20
92 89 414	08A	109	4-E14
92 89 414	08A	117	4-E22
92 89 471	08A	015	4-A16
92 89 471	08A	019	4-A20
92 89 505	08A	015	4-A16
92 89 505	08A	019	4-A20
92 89 604	08A	019	4-A20
92 89 844	08A	107	4-E12
92 89 869	08A	057	4-C10
92 89 919	08A	093	4-D22
92 90 149	08A	037	4-B14
92 90 362	08A	095	4-D24
92 90 362	08A	143	4-F24
92 90 594	08A	093	4-D22
92 90 750	08A	005	4-A06
92 90 768	08A	005	4-A06
92 90 776	08A	005	4-A06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 90 784	08A	005	4-A06
92 91 345	08A	107	4-E12
92 91 428	08A	121	4-F02
92 91 436	08A	127	4-F08
92 92 442	08A	013	4-A14
92 92 491	08A	045	4-B22
92 92 509	08A	045	4-B22
92 92 533	08A	045	4-B22
92 92 541	08A	045	4-B22
92 92 640	08A	009	4-A10
92 92 699	08A	009	4-A10
92 92 699	08A	057	4-C10
92 92 756	08A	077	4-D06
92 92 855	08A	061	4-C14
92 92 863	08A	061	4-C14
92 92 913	08A	019	4-A20
92 92 954	08A	121	4-F02
92 92 954	08A	127	4-F08
92 93 010	08A	015	4-A16
92 93 051	08A	107	4-E12
92 93 051	08A	115	4-E20
92 93 069	08A	109	4-E14
92 93 069	08A	117	4-E22
92 93 085	08A	107	4-E12
92 93 085	08A	117	4-E22
92 93 358	08A	051	4-C04
92 93 366	08A	051	4-C04
92 93 382	08A	093	4-D22
92 93 473	08A	059	4-C12
92 93 481	08A	059	4-C12
92 93 523	08A	031	4-B08
92 93 523	08A	033	4-B10
92 93 523	08A	077	4-D06
92 93 580	08A	077	4-D06
92 93 697	08A	105	4-E10
92 93 739	08A	105	4-E10
92 93 911	08A	087	4-D16
92 93 937	08A	087	4-D16
92 93 986	08A	087	4-D16
92 94 059	08A	087	4-D16
92 94 075	08A	087	4-D16
92 94 083	08A	087	4-D16
92 94 174	08A	093	4-D22
92 94 182	08A	093	4-D22
92 94 265	08A	095	4-D24
92 94 281	08A	131	4-F12
92 94 471	08A	133	4-F14
92 94 539	08A	133	4-F14
92 99 678	08A	119	4-E24
92 99 686	08A	119	4-E24
93 00 203	04	055	3-C08
93 00 211	04	055	3-C08
93 00 286	04	049	3-C02
93 00 302	02	077	1-F06
93 00 591	02	037	1-D14
93 00 625	02	069	1-E22
93 00 625	02	087	1-F16
93 01 383	02	135	1-H16
93 01 425	04	059	3-C12
93 01 482	02	157	1-I14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 01 532	02	133	1-H14
93 01 532	02	135	1-H16
93 01 532	02	157	1-I14
93 01 540	02	037	1-D14
93 01 631	04	055	3-C08
93 01 698	04	055	3-C08
93 01 797	04	055	3-C08
93 02 787	02	127	1-H08
93 02 803	02	127	1-H08
93 02 951	02	067	1-E20
93 03 678	04	059	3-C12
93 03 751	04	043	3-B20
93 04 775	02	077	1-F06
93 05 053	03A	017	2-A18
93 06 705	02	053	1-E06
93 06 804	02	163	1-I20
93 06 812	02	097	1-G02
93 06 812	02	099	1-G04
93 06 812	02	101	1-G06
93 06 812	02	163	1-I20
93 06 820	02	163	1-I20
93 07 356	02	013	1-C14
93 07 497	02	141	1-H22
93 08 180	02	157	1-I14
93 08 453	02	013	1-C14
93 08 537	02	021	1-C22
93 08 693	02	015	1-C16
93 08 883	02	157	1-I14
93 08 941	02	087	1-F16
93 08 982	02	087	1-F16
93 08 990	03A	017	2-A18
93 09 204	02	025	1-D02
93 09 204	02	153	1-I10
93 09 261	02	085	1-F14
93 09 261	02	089	1-F18
93 09 576	02	037	1-D14
93 09 576	02	161	1-I18
93 09 998	02	037	1-D14
93 10 004	02	037	1-D14
93 10 152	02	067	1-E20
93 11 697	02	141	1-H22
93 11 895	02	085	1-F14
93 12 059	02	159	1-I18
93 12 471	02	085	1-F14
93 12 802	02	079	1-F08
93 12 802	02	081	1-F10
93 12 802	02	083	1-F12
93 12 927	02	053	1-E06
93 13 222	02	139	1-H20
93 13 909	02	093	1-F22
93 14 162	02	103	1-G08
93 14 501	02	091	1-F20
93 15 151	02	067	1-E20
93 15 177	02	067	1-E20
93 15 185	02	067	1-E20
93 15 193	02	067	1-E20
93 15 201	02	067	1-E20
93 15 219	02	067	1-E20
93 15 227	02	067	1-E20
93 15 235	02	067	1-E20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 15 243	02	067	1-E20
93 15 292	02	067	1-E20
93 15 466	02	041	1-D18
93 16 142	02	145	1-I02
93 16 407	02	121	1-H02
93 16 407	02	123	1-H04
93 16 407	02	165	1-I22
93 16 415	02	009	1-C10
93 16 662	02	159	1-I16
93 17 058	02	121	1-H02
93 17 058	02	123	1-H04
93 17 165	04	037	3-B14
93 17 348	04	049	3-C02
93 17 439	04	049	3-C02
93 17 694	04	053	3-C06
93 17 785	04	053	3-C06
93 17 793	04	053	3-C06
93 17 801	04	053	3-C06
93 18 197	04	055	3-C08
93 18 361	02	055	1-E08
93 18 502	02	043	1-D20
93 18 502	02	045	1-D22
93 18 502	02	049	1-E02
93 18 908	04	055	3-C08
93 19 047	02	111	1-G16
93 19 047	02	113	1-G18
93 19 047	02	115	1-G20
93 19 047	02	117	1-G22
93 19 047	02	121	1-H02
93 19 047	02	123	1-H04
93 19 153	04	059	3-C12
93 19 526	02	043	1-D20
93 19 971	02	063	1-E16
93 20 268	02	133	1-H14
93 20 268	04	059	3-C12
93 20 284	02	141	1-H22
93 20 284	02	159	1-I16
93 20 383	02	161	1-I18
93 20 987	04	055	3-C08
93 20 987	04	059	3-C12
93 21 266	04	059	3-C12
93 21 431	02	147	1-I04
93 21 449	02	147	1-I04
93 21 464	02	019	1-C20
93 21 464	02	153	1-I10
93 21 472	02	033	1-D10
93 21 472	02	165	1-I22
93 21 480	02	033	1-D10
93 21 480	02	165	1-I22
93 21 498	02	033	1-D10
93 21 498	02	165	1-I22
93 21 555	02	111	1-G16
93 21 555	02	113	1-G18
93 21 555	02	115	1-G20
93 21 555	02	117	1-G22
93 21 555	02	119	1-G24
93 21 555	02	155	1-I12
93 21 555	02	163	1-I20
93 21 563	02	121	1-H02
93 21 563	02	123	1-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 21 563	02	155	1-I12
93 21 563	02	163	1-I20
93 21 589	02	035	1-D12
93 21 597	02	019	1-C20
93 21 597	02	153	1-I10
93 21 621	02	065	1-E18
93 21 662	02	069	1-E22
93 21 662	02	159	1-I16
93 21 720	02	147	1-I04
93 21 746	02	037	1-D14
93 21 746	02	161	1-I18
93 21 761	03A	017	2-A18
93 21 779	02	037	1-D14
93 21 779	02	161	1-I18
93 21 795	02	021	1-C22
93 21 795	02	025	1-D02
93 21 795	02	165	1-I22
93 21 795	04	015	3-A16
93 21 837	02	027	1-D04
93 21 928	02	165	1-I22
93 21 928	02	167	1-I24
93 22 660	02	063	1-E16
93 22 785	04	029	3-B06
93 22 785	04	055	3-C08
93 23 361	04	059	3-C12
93 23 742	02	009	1-C10
93 23 759	02	009	1-C10
93 24 021	02	057	1-E10
93 24 021	02	059	1-E12
93 24 211	02	063	1-E16
93 24 211	08C	015	5-J16
93 24 609	02	129	1-H10
93 24 658	02	129	1-H10
93 24 666	02	129	1-H10
93 24 708	04	029	3-B06
93 24 708	04	055	3-C08
93 24 914	06	019	3-F20
93 24 914	06	025	3-G02
93 24 930	02	009	1-C10
93 25 663	08C	017	5-J18
93 25 705	06	019	3-F20
93 25 705	06	025	3-G02
93 25 713	06	019	3-F20
93 25 713	06	025	3-G02
93 26 216	02	157	1-I14
93 26 380	04	029	3-B06
93 26 752	08C	015	5-J16
93 28 105	02	111	1-G16
93 28 105	02	113	1-G18
93 28 105	02	115	1-G20
93 28 105	02	117	1-G22
93 28 105	02	119	1-G24
93 28 105	02	121	1-H02
93 28 105	02	123	1-H04
93 28 105	02	155	1-I12
93 28 105	02	161	1-I18
93 28 105	02	163	1-I20
93 28 824	04	015	3-A16
93 28 857	02	057	1-E10
93 28 857	02	059	1-E12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 28 899	02	059	1-E12
93 29 442	02	097	1-G02
93 29 483	08A	085	4-D14
93 29 491	02	057	1-E10
93 29 491	02	059	1-E12
93 29 855	02	057	1-E10
93 29 855	02	061	1-E14
93 30 184	02	025	1-D02
93 30 184	08C	025	5-K02
93 30 184	08C	029	5-K06
93 30 184	08C	031	5-K08
93 30 184	08C	035	5-K12
93 31 521	04	055	3-C08
93 31 539	04	029	3-B06
93 31 554	02	063	1-E16
93 32 461	02	113	1-G18
93 32 818	02	129	1-H10
93 32 826	02	129	1-H10
93 32 826	02	131	1-H12
93 32 826	08C	025	5-K02
93 32 826	08C	029	5-K06
93 32 826	08C	031	5-K08
93 32 826	08C	035	5-K12
93 33 790	02	061	1-E14
93 33 840	02	113	1-G18
93 33 840	02	165	1-I22
93 33 840	02	167	1-I24
93 33 857	02	123	1-H04
93 33 857	02	165	1-I22
93 34 632	02	057	1-E10
93 34 665	04	037	3-B14
93 34 681	04	037	3-B14
93 34 699	04	037	3-B14
93 34 707	04	037	3-B14
93 34 749	04	051	3-C04
93 34 756	04	043	3-B20
93 34 764	04	043	3-B20
93 34 772	04	037	3-B14
93 34 780	04	039	3-B16
93 34 780	04	057	3-C10
93 34 806	04	039	3-B16
93 34 814	04	051	3-C04
93 34 822	04	051	3-C04
93 34 863	04	053	3-C06
93 34 889	04	045	3-B22
93 34 913	04	045	3-B22
93 34 939	04	045	3-B22
93 34 947	04	045	3-B22
93 34 962	04	045	3-B22
93 34 970	04	045	3-B22
93 34 988	04	045	3-B22
93 34 996	04	043	3-B20
93 35 001	04	043	3-B20
93 35 019	04	043	3-B20
93 35 027	04	043	3-B20
93 35 050	04	043	3-B20
93 35 118	02	055	1-E08
93 35 118	02	165	1-I22
93 35 118	02	167	1-I24
93 35 241	04	051	3-C04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 35 266	04	051	3-C04
93 35 290	04	051	3-C04
93 35 308	04	051	3-C04
93 35 324	04	051	3-C04
93 35 340	04	051	3-C04
93 35 357	04	051	3-C04
93 35 365	04	051	3-C04
93 35 373	04	051	3-C04
93 35 381	04	051	3-C04
93 35 407	04	037	3-B14
93 35 407	04	057	3-C10
93 35 423	04	057	3-C10
93 35 456	04	057	3-C10
93 35 472	04	043	3-B20
93 35 472	04	059	3-C12
93 35 514	04	045	3-B22
93 35 522	04	045	3-B22
93 35 563	04	041	3-B18
93 35 563	04	057	3-C10
93 35 670	04	037	3-B14
93 35 688	04	037	3-B14
93 35 696	04	043	3-B20
93 35 738	04	039	3-B16
93 35 753	04	039	3-B16
93 35 787	04	039	3-B16
93 35 795	04	039	3-B16
93 35 803	04	039	3-B16
93 35 811	04	039	3-B16
93 35 829	04	039	3-B16
93 36 041	04	043	3-B20
93 36 074	04	045	3-B22
93 36 116	04	045	3-B22
93 36 132	04	045	3-B22
93 36 140	04	045	3-B22
93 36 157	04	045	3-B22
93 36 207	04	053	3-C06
93 36 835	02	141	1-H22
93 36 835	02	159	1-I16
93 36 868	02	161	1-I18
93 37 213	02	015	1-C16
93 37 213	02	153	1-I10
93 37 221	02	015	1-C16
93 37 221	02	153	1-I10
93 37 239	02	015	1-C16
93 37 247	02	015	1-C16
93 37 247	02	153	1-I10
93 37 270	02	133	1-H14
93 37 270	02	157	1-I14
93 37 346	03A	015	2-A16
93 37 346	03A	133	2-F14
93 37 437	04	059	3-C12
93 37 445	04	029	3-B06
93 37 445	04	059	3-C12
93 37 510	02	063	1-E16
93 37 528	02	063	1-E16
93 37 551	02	159	1-I16
93 37 734	02	067	1-E20
93 38 005	04	043	3-B20
93 38 013	04	043	3-B20
93 38 542	06	019	3-F20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 38 542	06	025	3-G02
93 39 243	04	055	3-C08
93 39 615	08C	017	5-J18
93 39 615	08C	019	5-J20
93 39 615	08C	025	5-K02
93 39 615	08C	029	5-K06
93 39 615	08C	031	5-K08
93 39 615	08C	035	5-K12
93 39 979	04	037	3-B14
93 39 987	04	037	3-B14
93 41 009	04	045	3-B22
93 41 017	04	045	3-B22
93 41 025	04	045	3-B22
93 41 033	04	045	3-B22
93 41 041	04	045	3-B22
93 41 058	04	045	3-B22
93 41 066	04	045	3-B22
93 41 074	04	045	3-B22
93 41 082	04	045	3-B22
93 41 090	04	045	3-B22
93 41 108	04	045	3-B22
93 41 116	04	045	3-B22
93 41 124	04	045	3-B22
93 41 173	02	043	1-D20
93 41 330	04	039	3-B16
93 41 439	09	007	5-L08
93 41 793	02	069	1-E22
93 42 064	02	151	1-I08
93 42 239	02	151	1-I08
93 42 270	02	151	1-I08
93 42 338	04	029	3-B06
93 42 338	04	055	3-C08
93 42 353	04	029	3-B06
93 42 353	04	055	3-C08
93 42 361	04	029	3-B06
93 42 361	04	055	3-C08
93 42 619	02	151	1-I08
93 42 734	04	029	3-B06
93 42 734	04	055	3-C08
93 42 734	04	059	3-C12
93 44 078	04	059	3-C12
93 44 102	04	045	3-B22
93 44 110	04	043	3-B20
93 44 110	04	059	3-C12
93 44 219	04	043	3-B20
93 44 227	04	043	3-B20
93 44 250	04	045	3-B22
93 44 276	03A	017	2-A18
93 44 300	04	029	3-B06
93 44 524	02	129	1-H10
93 44 524	02	131	1-H12
93 44 896	02	067	1-E20
93 45 091	02	131	1-H12
93 45 232	08C	019	5-J20
93 45 232	08C	035	5-K12
93 45 257	02	053	1-E06
93 45 257	04	053	3-C06
93 45 778	02	067	1-E20
93 45 786	02	067	1-E20
93 45 984	04	045	3-B22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 45 984	04	059	3-C12
93 46 057	04	037	3-B14
93 46 354	04	015	3-A16
93 46 354	04	041	3-B18
93 46 362	04	015	3-A16
93 46 362	04	041	3-B18
93 46 370	02	011	1-C12
93 46 370	04	015	3-A16
93 46 370	04	041	3-B18
93 47 758	04	059	3-C12
93 47 816	04	029	3-B06
93 47 816	04	055	3-C08
93 47 949	04	051	3-C04
93 47 956	02	145	1-I02
93 48 004	02	145	1-I02
93 48 178	04	051	3-C04
93 48 533	04	031	3-B08
93 48 541	04	029	3-B06
93 48 558	04	029	3-B06
93 48 665	04	029	3-B06
93 48 913	02	067	1-E20
93 48 988	04	039	3-B16
93 49 002	04	043	3-B20
93 49 143	02	111	1-G16
93 49 143	02	113	1-G18
93 49 143	02	115	1-G20
93 49 143	02	117	1-G22
93 49 143	02	119	1-G24
93 49 143	02	163	1-I20
93 49 192	02	121	1-H02
93 49 192	02	123	1-H04
93 49 192	02	163	1-I20
93 49 382	02	129	1-H10
93 49 382	02	131	1-H12
93 49 408	04	029	3-B06
93 49 549	04	055	3-C08
93 49 564	04	055	3-C08
93 49 614	02	063	1-E16
93 49 655	02	063	1-E16
93 49 804	02	111	1-G16
93 49 804	02	113	1-G18
93 49 804	02	117	1-G22
93 49 804	02	121	1-H02
93 49 804	02	123	1-H04
93 49 838	02	055	1-E08
93 49 945	02	057	1-E10
93 49 945	02	059	1-E12
93 49 945	02	061	1-E14
93 50 034	02	035	1-D12
93 50 158	02	021	1-C22
93 50 158	02	153	1-I10
93 50 216	02	105	1-G10
93 50 224	02	103	1-G08
93 50 224	02	105	1-G10
93 50 372	02	149	1-I06
93 50 380	02	149	1-I06
93 50 471	02	147	1-I04
93 50 505	02	147	1-I04
93 50 505	02	157	1-I14
93 50 570	02	147	1-I04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 50 588	02	097	1-G02
93 50 588	02	099	1-G04
93 50 588	02	101	1-G06
93 50 604	02	161	1-I18
93 50 620	02	161	1-I18
93 50 653	02	087	1-F16
93 50 653	02	093	1-F22
93 50 653	02	095	1-F24
93 50 661	02	141	1-H22
93 51 495	02	103	1-G08
93 51 594	03A	017	2-A18
93 51 610	03A	017	2-A18
93 51 636	03A	017	2-A18
93 51 750	03A	017	2-A18
93 51 800	02	013	1-C14
93 53 442	02	159	1-I16
93 53 673	03A	015	2-A16
93 53 905	03A	015	2-A16
93 54 770	03A	007	2-A08
93 54 770	03A	009	2-A10
93 54 960	02	025	1-D02
93 54 960	03A	007	2-A08
93 54 960	03A	009	2-A10
93 54 978	02	159	1-I16
93 55 181	02	139	1-H20
93 55 389	02	037	1-D14
93 55 470	03A	017	2-A18
93 55 488	03A	017	2-A18
93 55 512	03A	017	2-A18
93 55 926	03A	133	2-F14
93 55 934	03A	133	2-F14
93 55 942	03A	133	2-F14
93 55 959	03A	133	2-F14
93 55 991	02	015	1-C16
93 55 991	02	153	1-I10
93 56 338	02	147	1-I04
93 56 486	02	071	1-E24
93 56 486	02	075	1-F04
93 57 021	02	083	1-F12
93 57 716	02	017	1-C18
93 58 086	03A	015	2-A16
93 58 094	03A	015	2-A16
93 58 102	03A	015	2-A16
93 58 177	02	083	1-F12
93 58 391	02	017	1-C18
93 58 672	02	027	1-D04
93 58 672	02	163	1-I20
93 58 680	02	027	1-D04
93 58 680	02	163	1-I20
93 59 050	02	085	1-F14
93 59 050	02	089	1-F18
93 59 480	02	079	1-F08
93 59 779	02	027	1-D04
93 61 064	04	049	3-C02
93 61 072	04	049	3-C02
93 61 163	04	029	3-B06
93 61 163	04	055	3-C08
93 61 452	04	015	3-A16
93 61 452	04	039	3-B16
93 61 544	04	015	3-A16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 61 544	04	039	3-B16
93 61 551	04	043	3-B20
93 61 627	04	015	3-A16
93 61 627	04	041	3-B18
93 61 627	04	063	3-C16
93 61 668	02	063	1-E16
93 61 791	06	019	3-F20
93 61 791	06	025	3-G02
93 61 957	02	057	1-E10
93 62 153	02	063	1-E16
93 62 286	04	043	3-B20
93 62 294	04	043	3-B20
93 62 310	04	045	3-B22
93 62 328	04	051	3-C04
93 62 419	09	011	5-L12
93 62 427	09	011	5-L12
93 62 435	09	011	5-L12
93 62 443	09	011	5-L12
93 62 450	09	011	5-L12
93 62 468	09	011	5-L12
93 62 542	02	043	1-D20
93 62 542	04	015	3-A16
93 62 542	04	041	3-B18
93 62 658	04	005	3-A06
93 62 666	04	037	3-B14
93 62 781	02	055	1-E08
93 62 781	02	057	1-E10
93 62 781	02	059	1-E12
93 62 781	02	061	1-E14
93 62 781	02	077	1-F06
93 62 856	04	053	3-C06
93 62 864	04	045	3-B22
93 62 880	04	045	3-B22
93 62 898	04	037	3-B14
93 62 906	04	043	3-B20
93 62 914	04	043	3-B20
93 63 243	02	055	1-E08
93 63 250	02	057	1-E10
93 63 276	08C	009	5-J10
93 63 284	02	053	1-E06
93 63 284	02	055	1-E08
93 63 359	02	057	1-E10
93 63 540	02	063	1-E16
93 63 615	02	135	1-H16
93 63 631	02	115	1-G20
93 63 649	02	121	1-H02
93 64 373	04	043	3-B20
93 64 407	02	117	1-G22
93 64 407	02	167	1-I24
93 64 431	04	049	3-C02
93 64 498	04	043	3-B20
93 64 514	04	043	3-B20
93 64 522	04	043	3-B20
93 64 589	04	043	3-B20
93 64 605	04	043	3-B20
93 64 613	04	047	3-B24
93 64 613	04	061	3-C14
93 64 647	04	045	3-B22
93 64 795	02	129	1-H10
93 65 164	03A	111	2-E16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6–B23 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 65 164	03A	115	2-E20
93 65 172	04	047	3-B24
93 65 172	04	063	3-C16
93 65 404	02	111	1-G16
93 65 404	02	113	1-G18
93 65 404	02	115	1-G20
93 65 404	02	117	1-G22
93 65 404	02	119	1-G24
93 65 404	02	121	1-H02
93 65 404	02	123	1-H04
93 65 404	02	155	1-I12
93 65 404	02	161	1-I18
93 65 404	02	163	1-I20
93 65 727	02	161	1-I18
93 65 909	06	021	3-F22
93 65 917	06	021	3-F22
93 65 917	08A	031	4-B08
93 65 917	08A	033	4-B10
93 65 958	02	063	1-E16
93 67 020	08C	017	5-J18
93 67 020	08C	019	5-J20
93 67 020	08C	025	5-K02
93 67 020	08C	029	5-K06
93 67 020	08C	031	5-K08
93 67 020	08C	035	5-K12
93 67 483	02	087	1-F16
93 67 525	02	087	1-F16
93 67 988	02	009	1-C10
93 67 996	02	009	1-C10
93 68 093	02	161	1-I18
93 68 200	04	015	3-A16
93 68 200	04	039	3-B16
93 68 218	02	111	1-G16
93 68 218	02	113	1-G18
93 68 218	02	117	1-G22
93 68 218	02	121	1-H02
93 68 218	02	123	1-H04
93 68 218	02	165	1-I22
93 68 218	02	167	1-I24
93 69 208	04	045	3-B22
93 69 216	04	045	3-B22
93 69 307	02	009	1-C10
93 69 315	02	009	1-C10
93 69 364	09	011	5-L12
93 69 729	04	047	3-B24
93 69 844	06	021	3-F22
93 69 950	02	131	1-H12
93 69 976	04	037	3-B14
93 69 992	04	037	3-B14
93 75 601	02	047	1-D24
93 77 920	02	047	1-D24
93 78 357	02	057	1-E10
93 82 870	02	061	1-E14
93 86 491	02	063	1-E16
93 88 588	08C	009	5-J10
93 90 022	02	147	1-I04
93 90 964	09	011	5-L12
93 91 111	09	013	5-L14
93 92 689	02	057	1-E10
93 92 689	02	059	1-E12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 92 689	02	061	1-E14
93 92 762	02	109	1-G14
93 93 950	02	057	1-E10
93 93 950	02	059	1-E12
93 93 950	02	061	1-E14
93 94 602	02	065	1-E18
93 94 628	02	065	1-E18
93 98 207	02	071	1-E24
93 98 215	04	029	3-B06
93 98 405	08C	015	5-J16
93 98 413	08C	015	5-J16
93 98 421	08C	015	5-J16
94 00 334	08B	081	5-D10
94 00 334	08B	095	5-D24
94 00 334	08B	109	5-E14
94 00 334	08B	123	5-F04
94 00 623	08C	007	5-J08
94 00 714	08C	007	5-J08
94 00 805	08C	007	5-J08
94 00 896	08C	007	5-J08
94 00 896	08C	025	5-K02
94 00 896	08C	029	5-K06
94 00 896	08C	031	5-K08
94 00 896	08C	035	5-K12
94 00 946	08C	011	5-J12
94 00 961	08C	011	5-J12
94 00 979	08C	011	5-J12
94 01 001	08C	005	5-J06
94 01 084	08C	005	5-J06
94 01 126	08C	007	5-J08
94 01 159	08C	007	5-J08
94 01 282	08C	007	5-J08
94 01 332	08C	013	5-J14
94 01 332	08C	035	5-K12
94 01 340	08C	013	5-J14
94 01 357	08B	009	5-A10
94 01 373	08C	013	5-J14
94 01 381	08B	009	5-A10
94 01 431	08C	013	5-J14
94 01 449	08C	013	5-J14
94 01 712	08C	013	5-J14
94 01 944	08C	021	5-J22
94 03 056	08A	069	4-C22
94 03 064	08A	069	4-C22
94 03 072	08A	069	4-C22
94 03 080	08A	069	4-C22
94 03 098	08A	069	4-C22
94 03 106	08A	071	4-C24
94 04 831	08B	151	5-G08
94 07 453	08A	069	4-C22
94 07 461	08A	069	4-C22
94 11 232	08A	069	4-C22
94 11 661	08B	013	5-A14
94 12 636	08A	077	4-D06
94 15 480	08B	185	5-H18
94 16 181	08B	153	5-G10
94 16 181	08B	175	5-H08
94 16 181	08B	177	5-H10
94 16 181	08B	205	5-I14
94 16 793	08A	069	4-C22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 17 551	08B	011	5-A12
94 17 874	08C	007	5-J08
94 17 908	08C	007	5-J08
94 17 916	08C	007	5-J08
94 17 924	08C	007	5-J08
94 17 973	08C	011	5-J12
94 17 981	08C	011	5-J12
94 18 013	08C	011	5-J12
94 18 021	08C	011	5-J12
94 18 039	08C	011	5-J12
94 18 054	08C	007	5-J08
94 18 062	08C	007	5-J08
94 18 070	08C	007	5-J08
94 18 088	08C	011	5-J12
94 18 138	08C	013	5-J14
94 18 146	08C	013	5-J14
94 18 237	08B	009	5-A10
94 18 310	08B	009	5-A10
94 18 328	08B	009	5-A10
94 18 344	08C	013	5-J14
94 18 351	08B	009	5-A10
94 18 427	08B	009	5-A10
94 18 435	08B	009	5-A10
94 18 450	08C	013	5-J14
94 18 468	08C	013	5-J14
94 18 476	08B	009	5-A10
94 18 492	08B	009	5-A10
94 18 559	08B	009	5-A10
94 19 060	08B	009	5-A10
94 20 035	08B	005	5-A06
94 20 035	08B	203	5-I12
94 20 043	08B	005	5-A06
94 20 043	08B	203	5-I12
94 20 092	08C	015	5-J16
94 20 241	08C	007	5-J08
94 20 241	08C	025	5-K02
94 20 241	08C	029	5-K06
94 20 241	08C	031	5-K08
94 20 241	08C	035	5-K12
94 20 266	08C	015	5-J16
94 20 266	08C	025	5-K02
94 20 266	08C	029	5-K06
94 20 266	08C	031	5-K08
94 20 266	08C	035	5-K12
94 20 274	08C	007	5-J08
94 20 274	08C	025	5-K02
94 20 274	08C	029	5-K06
94 20 274	08C	031	5-K08
94 20 274	08C	035	5-K12
94 20 282	08C	007	5-J08
94 20 282	08C	025	5-K02
94 20 282	08C	029	5-K06
94 20 282	08C	031	5-K08
94 20 282	08C	035	5-K12
94 20 290	08C	015	5-J16
94 20 308	08C	015	5-J16
94 20 308	08C	025	5-K02
94 20 308	08C	029	5-K06
94 20 308	08C	031	5-K08
94 20 308	08C	035	5-K12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 20 340	08B	009	5-A10
94 20 365	08B	009	5-A10
94 20 399	08C	013	5-J14
94 20 407	08C	013	5-J14
94 20 415	08B	009	5-A10
94 20 431	08B	009	5-A10
94 20 464	08C	013	5-J14
94 20 472	08C	013	5-J14
94 21 314	08B	175	5-H08
94 22 056	08B	009	5-A10
94 22 346	08B	195	5-I04
94 22 403	08C	007	5-J08
94 22 403	08C	025	5-K02
94 22 403	08C	029	5-K06
94 22 403	08C	031	5-K08
94 22 403	08C	035	5-K12
94 22 411	08B	199	5-I08
94 22 676	08B	009	5-A10
94 22 684	08B	009	5-A10
94 22 767	08C	007	5-J08
94 22 858	08B	007	5-A08
94 22 874	08B	005	5-A06
94 22 882	08B	005	5-A06
94 22 890	08B	005	5-A06
94 22 940	08C	011	5-J12
94 22 965	08C	013	5-J14
94 23 112	08C	013	5-J14
94 23 526	08B	013	5-A14
94 23 658	08B	011	5-A12
94 23 666	08B	011	5-A12
94 25 174	08A	069	4-C22
94 25 232	08B	077	5-D06
94 25 232	08B	089	5-D18
94 25 232	08B	091	5-D20
94 25 232	08B	103	5-E08
94 25 232	08B	105	5-E10
94 25 232	08B	117	5-E22
94 25 232	08B	119	5-E24
94 25 406	08B	011	5-A12
94 25 422	08B	009	5-A10
94 25 430	08B	013	5-A14
94 25 612	08B	011	5-A12
94 25 653	08B	023	5-A24
94 25 661	08B	023	5-A24
94 25 679	08B	007	5-A08
94 25 844	08B	005	5-A06
94 25 844	08B	203	5-I12
94 25 851	08B	005	5-A06
94 25 869	08B	005	5-A06
94 26 008	08C	007	5-J08
94 26 206	08C	013	5-J14
94 26 214	08C	013	5-J14
94 26 404	08A	071	4-C24
94 26 420	08A	015	4-A16
94 26 420	08A	019	4-A20
94 26 495	08B	013	5-A14
94 26 644	08C	015	5-J16
94 26 651	08C	015	5-J16
94 26 693	08C	013	5-J14
94 26 701	08C	013	5-J14

6–B24 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 26 727	08C	013	5-J14
94 26 784	08C	013	5-J14
94 26 792	08C	013	5-J14
94 26 909	08C	007	5-J08
94 27 014	03A	031	2-B08
94 27 014	08B	009	5-A10
94 27 014	08B	011	5-A12
94 29 721	08B	005	5-A06
94 30 968	08C	015	5-J16
94 32 030	08B	133	5-F14
94 32 030	08B	135	5-F16
94 32 030	08B	137	5-F18
94 32 030	08B	139	5-F20
94 32 048	08B	133	5-F14
94 32 048	08B	135	5-F16
94 32 048	08B	137	5-F18
94 32 048	08B	139	5-F20
94 32 964	08C	009	5-J10
94 34 499	08B	005	5-A06
94 34 606	08B	007	5-A08
94 34 614	08B	007	5-A08
94 34 614	08B	203	5-I12
94 34 622	08B	007	5-A08
94 36 478	08A	037	4-B14
94 37 021	08B	153	5-G10
94 37 906	08C	015	5-J16
94 37 955	08C	015	5-J16
94 38 193	08B	023	5-A24
94 38 201	08B	023	5-A24
94 38 250	08C	007	5-J08
94 38 250	08C	025	5-K02
94 38 250	08C	029	5-K06
94 38 250	08C	031	5-K08
94 38 250	08C	035	5-K12
94 40 405	08C	011	5-J12
94 41 213	08C	013	5-J14
94 41 221	08C	007	5-J08
94 41 221	08C	011	5-J12
94 41 221	08C	015	5-J16
94 41 221	08C	027	5-K04
94 41 221	08C	029	5-K06
94 41 221	08C	031	5-K08
94 41 221	08C	035	5-K12
94 41 239	08C	007	5-J08
94 41 270	08B	153	5-G10
94 42 203	08C	007	5-J08
94 43 920	08B	023	5-A24
94 44 605	08C	015	5-J16
94 44 738	08C	013	5-J14
94 44 811	08C	007	5-J08
94 44 811	08C	011	5-J12
94 45 438	08C	005	5-J06
94 45 651	08A	061	4-C14
94 45 651	08A	065	4-C18
94 45 651	08A	067	4-C20
94 45 776	08C	013	5-J14
94 45 875	08B	013	5-A14
94 45 909	08B	177	5-H10
94 45 917	08A	061	4-C14
94 45 917	08A	065	4-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 45 917	08A	067	4-C20
94 45 990	08B	009	5-A10
94 46 022	08A	069	4-C22
94 46 022	08A	073	4-D02
94 46 022	08A	075	4-D04
94 49 752	08A	011	4-A12
94 49 877	08B	021	5-A22
94 50 487	08C	007	5-J08
94 50 487	08C	011	5-J12
94 50 487	08C	015	5-J16
94 50 685	08B	149	5-G06
94 50 685	08B	157	5-G14
94 50 685	08B	165	5-G22
94 50 685	08B	175	5-H08
94 50 685	08B	177	5-H10
94 50 685	08B	203	5-I12
94 50 974	08B	023	5-A24
94 50 990	08B	197	5-I06
94 51 253	08C	007	5-J08
94 56 765	08B	153	5-G10
94 56 773	08B	153	5-G10
94 57 490	08B	199	5-I08
94 57 565	08B	013	5-A14
94 58 878	08A	065	4-C18
94 58 894	08B	013	5-A14
94 59 025	08B	013	5-A14
94 59 850	08B	189	5-H22
94 59 868	08B	153	5-G10
94 59 868	08B	163	5-G20
94 59 868	08B	173	5-H06
94 59 868	08B	205	5-I14
94 59 975	08B	147	5-G04
94 59 975	08B	203	5-I12
94 61 047	08B	009	5-A10
94 61 070	08C	011	5-J12
94 61 260	08C	007	5-J08
94 61 278	08C	007	5-J08
94 61 435	08B	009	5-A10
94 62 557	08C	009	5-J10
94 64 843	08B	131	5-F12
94 64 876	08B	131	5-F12
94 64 884	08B	131	5-F12
94 64 926	08B	131	5-F12
94 65 113	08A	073	4-D02
94 65 113	08A	075	4-D04
94 65 121	08A	073	4-D02
94 65 139	08A	073	4-D02
94 65 303	08C	011	5-J12
94 65 436	08A	099	4-E04
94 65 444	08A	099	4-E04
94 65 600	08C	007	5-J08
94 65 600	08C	027	5-K04
94 65 600	08C	029	5-K06
94 65 600	08C	031	5-K08
94 65 600	08C	035	5-K12
94 65 956	08B	151	5-G08
94 68 885	08B	007	5-A08
94 68 893	08A	099	4-E04
94 68 893	08A	149	4-G06
94 68 901	08A	099	4-E04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 69 156	08C	011	5-J12
94 69 164	08C	011	5-J12
94 71 178	08B	175	5-H08
94 71 210	08B	175	5-H08
94 71 897	08B	133	5-F14
94 71 897	08B	135	5-F16
94 71 897	08B	137	5-F18
94 71 897	08B	139	5-F20
94 71 905	08B	133	5-F14
94 71 905	08B	135	5-F16
94 71 905	08B	137	5-F18
94 71 905	08B	139	5-F20
94 72 408	08A	099	4-E04
94 72 416	08A	099	4-E04
94 72 424	08A	099	4-E04
94 72 424	08A	147	4-G04
94 72 424	08A	149	4-G06
94 72 432	08A	099	4-E04
94 72 432	08A	147	4-G04
94 72 432	08A	149	4-G06
94 72 572	08A	099	4-E04
94 73 117	08B	131	5-F12
94 73 349	08B	151	5-G08
94 73 364	08B	151	5-G08
94 73 802	08A	075	4-D04
94 73 810	08A	075	4-D04
94 73 828	08C	015	5-J16
94 73 851	08C	021	5-J22
94 73 869	08B	085	5-D14
94 73 869	08B	099	5-E04
94 73 869	08B	113	5-E18
94 73 869	08B	127	5-F08
94 73 869	08B	131	5-F12
94 73 877	08B	131	5-F12
94 73 901	08C	013	5-J14
94 73 919	08C	013	5-J14
94 73 943	08C	013	5-J14
94 75 393	08B	175	5-H08
94 75 666	08A	099	4-E04
94 75 666	08A	101	4-E06
94 75 914	08B	177	5-H10
94 75 955	08B	175	5-H08
94 76 169	08B	151	5-G08
94 76 177	08B	151	5-G08
94 76 185	08B	151	5-G08
94 77 860	08B	177	5-H10
94 77 878	08B	177	5-H10
94 78 066	08B	153	5-G10
94 79 213	08C	005	5-J06
94 79 213	08C	035	5-K12
94 79 213	08C	037	5-K14
94 79 221	08C	005	5-J06
94 79 221	08C	035	5-K12
94 79 221	08C	037	5-K14
94 79 353	08C	011	5-J12
94 79 627	08C	021	5-J22
94 79 643	08C	013	5-J14
94 79 650	08C	013	5-J14
94 79 668	08C	013	5-J14
94 79 841	08B	005	5-A06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
94 79 866	03A	051	2-C04
94 79 908	08C	013	5-J14
94 79 916	08C	013	5-J14
94 79 924	08C	007	5-J08
94 79 940	08C	021	5-J22
94 79 973	08C	007	5-J08
94 79 981	08C	007	5-J08
94 79 999	08C	011	5-J12
94 80 005	08C	021	5-J22
94 80 153	08C	013	5-J14
94 80 153	08C	035	5-K12
94 80 187	08C	013	5-J14
94 80 187	08C	035	5-K12
94 80 211	08C	011	5-J12
94 80 245	08C	021	5-J22
94 80 252	08C	011	5-J12
94 80 252	08C	035	5-K12
94 80 278	08C	035	5-K12
94 80 534	08C	011	5-J12
94 80 542	08C	027	5-K04
94 80 542	08C	029	5-K06
94 80 542	08C	031	5-K08
94 80 542	08C	035	5-K12
94 80 575	08C	027	5-K04
94 80 575	08C	029	5-K06
94 80 575	08C	031	5-K08
94 80 914	08C	021	5-J22
94 80 955	08C	021	5-J22
94 80 955	08C	027	5-K04
94 80 955	08C	029	5-K06
94 80 955	08C	031	5-K08
94 80 955	08C	035	5-K12
94 80 997	08C	035	5-K12
94 81 060	08C	007	5-J08
94 81 185	08C	021	5-J22
94 81 193	08C	021	5-J22
94 81 425	08B	005	5-A06
94 81 425	08B	203	5-I12
94 81 441	08C	021	5-J22
94 81 441	08C	027	5-K04
94 81 441	08C	029	5-K06
94 81 441	08C	031	5-K08
94 81 441	08C	035	5-K12
94 81 458	08C	021	5-J22
94 81 458	08C	027	5-K04
94 81 458	08C	029	5-K06
94 81 458	08C	031	5-K08
94 81 458	08C	035	5-K12
94 81 664	08C	021	5-J22
94 81 664	08C	027	5-K04
94 81 664	08C	029	5-K06
94 81 664	08C	031	5-K08
94 81 664	08C	035	5-K12
94 81 680	08C	007	5-J08
94 81 680	08C	027	5-K04
94 81 680	08C	029	5-K06
94 81 680	08C	031	5-K08
94 81 680	08C	035	5-K12
94 81 789	08C	009	5-J10
94 81 839	08C	009	5-J10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-C01 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
94 81 904	08C	009	5-J10
94 81 912	08C	007	5-J08
94 81 938	08C	011	5-J12
94 81 946	08C	011	5-J12
94 81 953	08C	011	5-J12
94 81 961	08C	021	5-J22
94 81 961	08C	027	5-K04
94 81 961	08C	029	5-K06
94 81 961	08C	033	5-K10
94 81 979	08C	029	5-K06
94 81 979	08C	033	5-K10
94 81 987	08C	017	5-J18
94 81 987	08C	019	5-J20
94 81 995	08C	017	5-J18
94 81 995	08C	019	5-J20
94 82 027	08C	021	5-J22
94 82 027	08C	027	5-K04
94 82 027	08C	029	5-K06
94 82 027	08C	033	5-K10
94 82 027	08C	035	5-K12
94 82 035	08C	021	5-J22
94 82 035	08C	027	5-K04
94 82 035	08C	029	5-K06
94 82 035	08C	033	5-K10
94 82 035	08C	035	5-K12
94 82 043	08C	017	5-J18
94 82 043	08C	019	5-J20
94 82 068	08C	029	5-K06
94 82 068	08C	033	5-K10
94 82 175	08C	007	5-J08
94 82 209	08C	017	5-J18
94 82 209	08C	019	5-J20
94 82 217	08C	017	5-J18
94 82 217	08C	019	5-J20
94 82 225	08C	017	5-J18
94 82 225	08C	019	5-J20
94 82 365	08C	021	5-J22
94 82 365	08C	027	5-K04
94 82 365	08C	029	5-K06
94 82 365	08C	033	5-K10
94 82 365	08C	035	5-K12
94 82 399	08C	021	5-J22
94 82 399	08C	027	5-K04
94 82 399	08C	029	5-K06
94 82 399	08C	033	5-K10
94 82 399	08C	035	5-K12
94 82 480	08C	015	5-J16
94 82 522	08C	011	5-J12
94 82 548	09	013	5-L14
94 82 555	08C	005	5-J06
94 82 563	08C	015	5-J16
94 82 563	08C	027	5-K04
94 82 563	08C	029	5-K06
94 82 563	08C	033	5-K10
94 82 563	08C	035	5-K12
94 82 571	08C	015	5-J16
94 82 571	08C	027	5-K04
94 82 571	08C	029	5-K06
94 82 571	08C	033	5-K10
94 82 571	08C	035	5-K12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
94 82 571	08C	037	5-K14
94 82 589	08C	015	5-J16
94 82 589	08C	035	5-K12
94 85 020	08B	195	5-I04
94 85 020	08B	199	5-I08
94 85 574	08B	005	5-A06
94 85 657	08B	199	5-I08
94 85 897	08B	191	5-H24
94 87 810	08B	153	5-G10
94 87 828	08B	153	5-G10
94 87 836	08B	177	5-H10
94 87 844	08B	177	5-H10
94 88 131	08B	151	5-G08
94 88 370	08B	151	5-G08
94 89 337	08B	151	5-G08
94 89 485	08B	179	5-H12
94 89 758	08A	131	4-F12
94 89 758	08B	151	5-G08
94 89 766	08B	151	5-G08
94 90 764	08B	181	5-H14
94 90 954	08B	131	5-F12
94 91 739	08B	177	5-H10
94 92 026	08B	183	5-H16
94 92 117	08B	175	5-H08
94 92 471	08A	007	4-A08
94 92 612	08B	183	5-H16
94 92 885	08B	021	5-A22
94 92 885	08B	131	5-F12
94 93 750	08B	017	5-A18
94 93 750	08B	019	5-A20
94 93 800	08B	017	5-A18
94 93 800	08B	019	5-A20
94 93 842	08B	017	5-A18
94 94 691	08B	179	5-H12
94 94 709	08B	179	5-H12
94 94 733	08B	183	5-H16
95 01 685	03B	011	2-G12
95 01 685	03B	039	2-H16
95 01 685	03B	069	2-I22
95 01 685	08A	145	4-G02
95 01 685	08A	147	4-G04
95 01 685	08A	153	4-G10
95 01 685	08A	155	4-G12
95 01 685	08A	157	4-G14
95 01 685	08A	159	4-G16
95 01 685	08A	161	4-G18
95 01 859	03A	053	2-C06
95 01 859	08A	145	4-G02
95 01 867	03A	053	2-C06
95 01 867	08A	147	4-G04
95 01 875	03A	053	2-C06
95 01 875	08A	147	4-G04
95 01 891	08A	145	4-G02
95 01 891	08A	147	4-G04
95 01 909	03A	053	2-C06
95 01 909	08A	147	4-G04
95 01 917	03A	053	2-C06
95 01 917	08A	145	4-G02
95 03 012	03B	017	2-G18
95 03 012	03B	045	2-H22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 03 053	03A	005	2-A06
95 03 277	03B	017	2-G18
95 03 277	03B	045	2-H22
95 03 277	03B	075	2-J04
95 03 277	08A	153	4-G10
95 03 277	08A	155	4-G12
95 03 277	08A	157	4-G14
95 03 277	08A	159	4-G16
95 03 277	08A	161	4-G18
95 03 319	03B	009	2-G10
95 03 319	03B	037	2-H14
95 03 319	03B	067	2-I20
95 03 319	08A	153	4-G10
95 03 319	08A	155	4-G12
95 03 319	08A	157	4-G14
95 03 319	08A	159	4-G16
95 03 319	08A	161	4-G18
95 03 327	03A	023	2-A24
95 03 327	03A	045	2-B22
95 03 327	03B	017	2-G18
95 03 327	03B	045	2-H22
95 03 327	03B	075	2-J04
95 03 327	08A	153	4-G10
95 03 327	08A	155	4-G12
95 03 327	08A	157	4-G14
95 03 327	08A	159	4-G16
95 03 327	08A	161	4-G18
95 03 327	08A	163	4-G20
95 03 418	03B	007	2-G08
95 03 418	03B	035	2-H12
95 03 418	03B	063	2-I16
95 03 418	08C	029	5-K06
95 03 426	03B	007	2-G08
95 03 426	03B	035	2-H12
95 03 426	03B	065	2-I18
95 03 426	08C	027	5-K04
95 03 426	08C	029	5-K06
95 03 426	08C	033	5-K10
95 03 426	08C	035	5-K12
95 03 434	03B	021	2-G22
95 03 434	03B	047	2-H24
95 03 434	03B	079	2-J08
95 03 434	08A	149	4-G06
95 03 442	08A	149	4-G06
95 03 475	03B	025	2-H02
95 03 475	03B	049	2-I02
95 03 475	03B	083	2-J12
95 03 525	08A	147	4-G04
95 05 652	03A	061	2-C14
95 05 694	03A	061	2-C14
95 06 379	03A	047	2-B24
95 06 668	03B	025	2-H02
95 06 668	03B	049	2-I02
95 06 668	03B	083	2-J12
95 07 658	03B	017	2-G18
95 07 658	03B	045	2-H22
95 07 658	03B	075	2-J04
95 08 714	03B	013	2-G14
95 08 714	03B	027	2-H04
95 08 714	03B	041	2-H18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 08 714	03B	055	2-I08
95 08 714	03B	071	2-I24
95 08 714	03B	085	2-J14
95 09 076	03A	065	2-C18
95 09 118	03A	045	2-B22
95 09 126	03A	045	2-B22
95 09 480	03A	059	2-C12
95 12 229	03A	067	2-C20
95 12 302	03A	055	2-C08
95 12 310	03A	053	2-C06
95 12 310	08A	145	4-G02
95 12 328	03A	025	2-B02
95 12 393	03A	025	2-B02
95 12 401	03A	025	2-B02
95 12 641	03A	051	2-C04
95 12 823	03A	127	2-F08
95 12 823	08A	145	4-G02
95 12 880	03A	035	2-B12
95 12 880	03A	037	2-B14
95 12 898	03A	037	2-B14
95 13 128	03A	009	2-A10
95 13 144	03A	009	2-A10
95 13 169	03A	009	2-A10
95 13 177	03A	009	2-A10
95 13 185	03A	009	2-A10
95 13 193	03A	009	2-A10
95 13 219	03A	125	2-F06
95 13 219	08C	029	5-K06
95 13 219	08C	033	5-K10
95 13 219	08C	035	5-K12
95 13 599	03A	007	2-A08
95 13 599	03A	009	2-A10
95 13 763	03A	009	2-A10
95 14 233	03A	035	2-B12
95 14 303	03B	017	2-G18
95 14 803	03B	045	2-H22
95 14 803	03B	075	2-J04
95 14 811	03A	025	2-B02
95 14 811	03B	017	2-G18
95 14 811	03B	045	2-H22
95 14 811	03B	075	2-J04
95 14 860	03A	067	2-C20
95 15 099	03A	127	2-F08
95 15 180	03A	009	2-A10
95 15 180	03A	135	2-F16
95 18 424	03A	005	2-A06
95 18 515	03A	111	2-E16
95 18 713	03B	013	2-G14
95 18 713	03B	041	2-H18
95 18 713	03B	071	2-I24
95 18 739	03B	021	2-G22
95 18 739	03B	049	2-I02
95 18 820	03A	051	2-C04
95 19 133	03A	123	2-F04
95 19 133	03A	127	2-F08
95 19 398	03B	013	2-G14
95 19 398	03B	041	2-H18
95 19 398	03B	071	2-I24
95 19 398	03B	093	2-J22
95 19 398	03B	103	2-K08

6-C02 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 19 398	03B	113	2-K18
95 19 406	03B	013	2-G14
95 19 406	03B	041	2-H18
95 19 406	03B	071	2-I24
95 19 414	03B	049	2-I02
95 19 414	03B	079	2-J08
95 19 422	03B	013	2-G14
95 19 422	03B	041	2-H18
95 19 422	03B	071	2-I24
95 19 430	03B	023	2-G24
95 19 430	03B	049	2-I02
95 19 430	03B	079	2-J08
95 19 455	03B	023	2-G24
95 19 455	03B	049	2-I02
95 19 455	03B	079	2-J08
95 19 679	03B	019	2-G20
95 19 679	03B	045	2-H22
95 19 679	03B	075	2-J04
95 19 737	02	077	1-F06
95 19 737	03A	113	2-E18
95 19 737	03A	117	2-E22
95 19 745	03A	069	2-C22
95 19 877	08B	157	5-G14
95 19 877	08B	167	5-G24
95 21 857	03A	037	2-B14
95 21 972	03B	017	2-G18
95 21 972	03B	027	2-H04
95 21 972	03B	045	2-H22
95 21 972	03B	057	2-I10
95 21 972	03B	075	2-J04
95 21 972	03B	085	2-J14
95 21 972	03B	097	2-K02
95 21 972	03B	107	2-K12
95 21 972	03B	115	2-K20
95 21 998	03B	097	2-K02
95 21 998	03B	107	2-K12
95 21 998	03B	115	2-K20
95 22 061	03A	123	2-F04
95 22 061	03A	127	2-F08
95 22 822	03A	069	2-C22
95 23 184	03A	009	2-A10
95 23 721	03A	051	2-C04
95 23 747	03A	053	2-C06
95 23 762	03A	053	2-C06
95 23 788	03A	051	2-C04
95 23 788	08C	027	5-K04
95 23 788	08C	029	5-K06
95 23 788	08C	033	5-K10
95 23 788	08C	035	5-K12
95 23 804	03A	053	2-C06
95 23 820	03A	051	2-C04
95 23 846	03A	051	2-C04
95 23 846	08C	027	5-K04
95 23 846	08C	029	5-K06
95 23 846	08C	033	5-K10
95 23 846	08C	035	5-K12
95 24 323	03A	089	2-D18
95 24 323	03A	097	2-E02
95 24 323	03A	105	2-E10
95 24 745	08B	149	5-G06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 24 745	08B	157	5-G14
95 24 745	08B	167	5-G24
95 25 809	03B	013	2-G14
95 25 817	03B	013	2-G14
95 25 817	03B	095	2-J24
95 26 419	03A	065	2-C18
95 26 518	02	125	1-H06
95 26 526	02	131	1-H12
95 26 526	08C	027	5-K04
95 26 526	08C	029	5-K06
95 26 526	08C	033	5-K10
95 26 526	08C	035	5-K12
95 26 534	02	129	1-H10
95 26 534	02	131	1-H12
95 26 963	09	005	5-L06
95 27 755	03B	027	2-H04
95 27 755	03B	057	2-I10
95 27 755	03B	087	2-J16
95 27 763	03B	027	2-H04
95 27 771	03B	027	2-H04
95 27 771	03B	057	2-I10
95 27 771	03B	087	2-J16
95 27 771	03B	091	2-J20
95 27 979	03A	065	2-C18
95 28 019	05	015	3-D16
95 28 217	03A	065	2-C18
95 28 795	03A	047	2-B24
95 29 074	03B	021	2-G22
95 29 090	03A	023	2-A24
95 29 231	03A	129	2-F10
95 29 413	03A	039	2-B16
95 29 421	03A	039	2-B16
95 29 975	03A	049	2-C02
95 29 975	08A	153	4-G10
95 29 975	08A	155	4-G12
95 29 975	08A	157	4-G14
95 29 975	08A	159	4-G16
95 29 975	08A	161	4-G18
95 30 155	08B	147	5-G04
95 30 155	08B	203	5-I12
95 30 361	08B	029	5-B06
95 30 379	08B	029	5-B06
95 30 650	08B	029	5-B06
95 30 650	08B	039	5-B16
95 30 700	08B	029	5-B06
95 30 700	08B	039	5-B16
95 30 734	08B	029	5-B06
95 30 734	08B	039	5-B16
95 30 759	08B	029	5-B06
95 30 759	08B	039	5-B16
95 31 336	08B	131	5-F12
95 32 466	08B	177	5-H10
95 33 134	08B	011	5-A12
95 33 167	08B	011	5-A12
95 33 233	08B	015	5-A16
95 33 282	08B	015	5-A16
95 33 332	08B	015	5-A16
95 33 613	08B	183	5-H16
95 33 621	08B	183	5-H16
95 33 977	08B	183	5-H16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 33 985	08B	183	5-H16
95 34 025	08B	141	5-F22
95 34 033	08B	141	5-F22
95 34 439	08B	021	5-A22
95 34 637	08B	077	5-D06
95 34 637	08B	087	5-D16
95 34 637	08B	089	5-D18
95 34 637	08B	091	5-D20
95 34 637	08B	101	5-E06
95 34 637	08B	103	5-E08
95 34 637	08B	105	5-E10
95 34 637	08B	115	5-E20
95 34 637	08B	117	5-E22
95 34 637	08B	119	5-E24
95 34 637	08B	129	5-F10
95 35 261	08B	153	5-G10
95 35 279	08B	153	5-G10
95 35 287	08B	153	5-G10
95 35 659	08B	143	5-F24
95 35 667	08B	143	5-F24
95 35 675	08B	145	5-G02
95 35 683	08B	145	5-G02
95 35 691	08B	145	5-G02
95 35 709	08B	191	5-H24
95 35 717	08B	191	5-H24
95 35 840	08B	031	5-B08
95 35 857	08B	031	5-B08
95 36 228	08B	135	5-F16
95 36 228	08B	137	5-F18
95 36 228	08B	139	5-F20
95 36 236	08B	141	5-F22
95 36 251	08B	141	5-F22
95 36 277	08B	141	5-F22
95 36 293	08B	141	5-F22
95 36 335	08B	141	5-F22
95 36 350	08B	141	5-F22
95 36 376	08B	141	5-F22
95 36 392	08B	141	5-F22
95 36 418	08B	143	5-F24
95 36 434	08B	143	5-F24
95 36 459	08B	143	5-F24
95 36 475	08B	143	5-F24
95 36 517	08B	141	5-F22
95 36 533	08B	143	5-F24
95 36 590	08B	143	5-F24
95 36 616	08B	143	5-F24
95 36 673	08B	143	5-F24
95 36 699	08B	143	5-F24
95 36 772	08B	143	5-F24
95 36 905	08B	085	5-D14
95 36 905	08B	099	5-E04
95 36 905	08B	113	5-E18
95 36 905	08B	127	5-F08
95 36 913	08B	085	5-D14
95 36 913	08B	099	5-E04
95 36 913	08B	113	5-E18
95 36 913	08B	127	5-F08
95 36 921	08B	087	5-D16
95 36 921	08B	101	5-E06
95 36 921	08B	115	5-E20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 36 921	08B	129	5-F10
95 36 939	08B	087	5-D16
95 36 939	08B	101	5-E06
95 36 939	08B	115	5-E20
95 36 939	08B	129	5-F10
95 37 002	08B	081	5-D10
95 37 002	08B	095	5-D24
95 37 002	08B	109	5-E14
95 37 002	08B	123	5-F04
95 37 135	08B	133	5-F14
95 37 150	08B	133	5-F14
95 37 432	08B	189	5-H22
95 37 440	08B	189	5-H22
95 37 473	08B	191	5-H24
95 37 481	08B	189	5-H22
95 37 499	08B	189	5-H22
95 37 515	08B	191	5-H24
95 37 572	08B	143	5-F24
95 37 606	08B	183	5-H16
95 37 838	08B	031	5-B08
95 37 838	08B	041	5-B18
95 37 838	08B	061	5-C14
95 37 838	08B	073	5-D02
95 37 846	08B	031	5-B08
95 37 846	08B	041	5-B18
95 37 846	08B	061	5-C14
95 37 846	08B	073	5-D02
95 37 853	08B	031	5-B08
95 37 853	08B	041	5-B18
95 37 853	08B	061	5-C14
95 37 853	08B	073	5-D02
95 37 861	08B	031	5-B08
95 37 861	08B	041	5-B18
95 37 861	08B	061	5-C14
95 37 861	08B	073	5-D02
95 38 687	08B	159	5-G16
95 38 695	08B	025	5-B02
95 38 695	08B	033	5-B10
95 38 695	08B	047	5-B24
95 38 703	08B	025	5-B02
95 38 703	08B	033	5-B10
95 38 703	08B	047	5-B24
95 38 711	08B	025	5-B02
95 38 711	08B	033	5-B10
95 38 711	08B	047	5-B24
95 38 752	08B	025	5-B02
95 38 752	08B	033	5-B10
95 38 760	08B	025	5-B02
95 38 760	08B	033	5-B10
95 38 760	08B	047	5-B24
95 38 778	08B	025	5-B02
95 38 778	08B	033	5-B10
95 38 778	08B	045	5-B22
95 38 794	08B	025	5-B02
95 38 794	08B	033	5-B10
95 38 802	08B	025	5-B02
95 38 802	08B	033	5-B10
95 38 802	08B	047	5-B24
95 38 810	08B	025	5-B02
95 38 810	08B	033	5-B10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-DC2
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 38 810	08B	045	5-B22
95 38 836	08B	025	5-B02
95 38 836	08B	033	5-B10
95 38 844	08B	025	5-B02
95 38 844	08B	033	5-B10
95 38 844	08B	047	5-B24
95 38 851	08B	025	5-B02
95 38 851	08B	033	5-B10
95 38 851	08B	045	5-B22
95 38 976	08B	027	5-B04
95 38 976	08B	035	5-B12
95 38 984	08B	027	5-B04
95 38 984	08B	037	5-B14
95 38 984	08B	055	5-C08
95 38 992	08B	027	5-B04
95 38 992	08B	035	5-B12
95 38 992	08B	053	5-C06
95 39 008	08B	027	5-B04
95 39 008	08B	035	5-B12
95 39 008	08B	051	5-C04
95 39 024	08B	027	5-B04
95 39 024	08B	035	5-B12
95 39 032	08B	027	5-B04
95 39 032	08B	037	5-B14
95 39 032	08B	055	5-C08
95 39 040	08B	027	5-B04
95 39 040	08B	035	5-B12
95 39 040	08B	053	5-C06
95 39 057	08B	027	5-B04
95 39 057	08B	035	5-B12
95 39 057	08B	051	5-C04
95 39 271	08B	027	5-B04
95 39 271	08B	035	5-B12
95 39 289	08B	027	5-B04
95 39 289	08B	037	5-B14
95 39 289	08B	055	5-C08
95 39 297	08B	027	5-B04
95 39 297	08B	035	5-B12
95 39 297	08B	053	5-C06
95 39 305	08B	027	5-B04
95 39 305	08B	035	5-B12
95 39 305	08B	051	5-C04
95 39 321	08B	027	5-B04
95 39 321	08B	035	5-B12
95 39 339	08B	027	5-B04
95 39 339	08B	037	5-B14
95 39 339	08B	055	5-C08
95 39 347	08B	027	5-B04
95 39 347	08B	035	5-B12
95 39 347	08B	053	5-C06
95 39 354	08B	027	5-B04
95 39 354	08B	035	5-B12
95 39 354	08B	051	5-C04
95 39 370	08B	027	5-B04
95 39 370	08B	035	5-B12
95 39 388	08B	027	5-B04
95 39 388	08B	037	5-B14
95 39 388	08B	055	5-C08
95 39 396	08B	027	5-B04
95 39 396	08B	035	5-B12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 39 396	08B	053	5-C06
95 39 404	08B	027	5-B04
95 39 404	08B	035	5-B12
95 39 404	08B	051	5-C04
95 39 420	08B	025	5-B02
95 39 420	08B	027	5-B04
95 39 420	08B	033	5-B10
95 39 420	08B	035	5-B12
95 39 438	08B	025	5-B02
95 39 438	08B	027	5-B04
95 39 438	08B	033	5-B10
95 39 438	08B	037	5-B14
95 39 438	08B	047	5-B24
95 39 438	08B	055	5-C08
95 39 446	08B	025	5-B02
95 39 446	08B	027	5-B04
95 39 446	08B	033	5-B10
95 39 446	08B	035	5-B12
95 39 446	08B	047	5-B24
95 39 446	08B	053	5-C06
95 39 453	08B	025	5-B02
95 39 453	08B	027	5-B04
95 39 453	08B	033	5-B10
95 39 453	08B	035	5-B12
95 39 453	08B	045	5-B22
95 39 453	08B	051	5-C04
95 39 495	08B	025	5-B02
95 39 503	08B	025	5-B02
95 39 511	08B	025	5-B02
95 39 529	08B	025	5-B02
95 39 545	08B	025	5-B02
95 39 552	08B	025	5-B02
95 39 560	08B	025	5-B02
95 39 578	08B	025	5-B02
95 39 594	08B	025	5-B02
95 39 594	08B	027	5-B04
95 39 602	08B	025	5-B02
95 39 602	08B	027	5-B04
95 39 610	08B	025	5-B02
95 39 610	08B	027	5-B04
95 39 628	08B	025	5-B02
95 39 628	08B	027	5-B04
95 39 693	08B	027	5-B04
95 39 701	08B	027	5-B04
95 39 719	08B	027	5-B04
95 39 727	08B	027	5-B04
95 39 792	08B	027	5-B04
95 39 800	08B	027	5-B04
95 39 818	08B	027	5-B04
95 39 826	08B	027	5-B04
95 39 842	08B	027	5-B04
95 39 859	08B	027	5-B04
95 39 867	08B	027	5-B04
95 39 875	08B	027	5-B04
95 39 891	08B	027	5-B04
95 39 891	08B	029	5-B06
95 39 909	08B	027	5-B04
95 39 909	08B	031	5-B08
95 39 917	08B	027	5-B04
95 39 925	08B	027	5-B04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 39 925	08B	029	5-B06
95 40 139	08B	191	5-H24
95 40 147	08B	191	5-H24
95 40 162	08B	191	5-H24
95 40 295	08B	011	5-A12
95 40 303	08B	011	5-A12
95 40 352	08B	199	5-I08
95 40 360	08B	199	5-I08
95 40 378	08B	199	5-I08
95 40 386	08B	199	5-I08
95 40 394	08B	199	5-I08
95 40 402	08B	199	5-I08
95 40 410	08B	199	5-I08
95 40 428	08B	199	5-I08
95 40 576	08B	191	5-H24
95 40 592	08B	005	5-A06
95 40 774	02	165	1-I22
95 40 774	02	167	1-I24
95 40 774	08B	023	5-A24
95 40 782	08B	023	5-A24
95 41 004	08B	027	5-B04
95 41 012	08B	027	5-B04
95 41 020	08B	027	5-B04
95 41 038	08B	027	5-B04
95 41 384	08B	025	5-B02
95 41 384	08B	033	5-B10
95 41 392	08B	025	5-B02
95 41 392	08B	033	5-B10
95 41 392	08B	045	5-B22
95 41 400	08B	025	5-B02
95 41 400	08B	033	5-B10
95 41 400	08B	047	5-B24
95 41 418	08B	025	5-B02
95 41 418	08B	033	5-B10
95 41 418	08B	047	5-B24
95 41 533	08B	161	5-G18
95 41 533	08B	169	5-H02
95 42 002	08B	141	5-F22
95 42 010	08B	141	5-F22
95 42 077	08B	161	5-G18
95 42 077	08B	169	5-H02
95 42 093	08B	011	5-A12
95 42 127	08B	141	5-F22
95 42 135	08B	141	5-F22
95 42 168	08B	153	5-G10
95 42 242	08B	133	5-F14
95 42 291	03A	063	2-C16
95 42 309	08B	169	5-H02
95 42 317	08B	169	5-H02
95 44 834	08B	023	5-A24
95 45 104	08B	153	5-G10
95 45 104	08B	163	5-G20
95 45 104	08B	173	5-H06
95 45 906	08B	143	5-F24
95 46 946	08B	161	5-G18
95 48 363	09	005	5-L06
95 48 389	08B	143	5-F24
95 50 468	03A	059	2-C12
95 50 468	08C	027	5-K04
95 50 468	08C	029	5-K06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 50 468	08C	033	5-K10
95 50 468	08C	035	5-K12
95 50 476	03A	065	2-C18
95 50 583	09	011	5-L12
95 50 617	03A	053	2-C06
95 50 948	03A	123	2-F04
95 51 151	03A	049	2-C02
95 51 151	08A	155	4-G12
95 51 151	08A	157	4-G14
95 51 151	08A	159	4-G16
95 51 151	08A	161	4-G18
95 51 219	03A	023	2-A24
95 51 219	03A	045	2-B22
95 51 235	03A	065	2-C18
95 51 953	03A	035	2-B12
95 51 987	03A	053	2-C06
95 52 100	03B	013	2-G14
95 52 100	03B	021	2-G22
95 52 100	03B	027	2-H04
95 52 100	03B	041	2-H18
95 52 100	03B	049	2-I02
95 52 100	03B	053	2-I06
95 52 100	03B	071	2-I24
95 52 100	03B	085	2-J14
95 52 100	03B	097	2-K02
95 52 100	03B	107	2-K12
95 52 100	03B	115	2-K20
95 52 878	02	129	1-H10
95 53 132	03A	035	2-B12
95 53 280	03A	115	2-E20
95 53 306	03A	041	2-B18
95 53 314	03A	041	2-B18
95 53 512	03A	035	2-B12
95 53 546	03A	123	2-F04
95 53 553	03A	079	2-D08
95 53 553	03A	089	2-D18
95 53 553	03A	099	2-E04
95 53 553	03A	107	2-E12
95 54 411	03A	037	2-B14
95 55 194	03A	055	2-C08
95 55 202	03A	041	2-B18
95 55 251	03A	007	2-A08
95 55 301	03A	007	2-A08
95 55 327	03A	035	2-B12
95 55 624	03A	005	2-A06
95 55 632	03A	005	2-A06
95 55 764	03A	005	2-A06
95 55 772	03A	005	2-A06
95 55 905	03A	073	2-D02
95 55 905	03A	085	2-D14
95 55 905	03A	093	2-D22
95 55 905	03A	103	2-E08
95 55 913	08C	027	5-K04
95 55 913	08C	029	5-K06
95 55 913	08C	033	5-K10
95 55 913	08C	035	5-K12
95 55 962	03A	041	2-B18
95 55 962	03A	133	2-F14
95 56 010	03A	025	2-B02
95 56 028	03A	025	2-B02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 56 135	03A	059	2-C12
95 56 143	03A	059	2-C12
95 56 200	03A	045	2-B22
95 56 218	03A	045	2-B22
95 56 242	03A	045	2-B22
95 56 283	03A	045	2-B22
95 56 291	03A	045	2-B22
95 56 390	03A	123	2-F04
95 56 390	03A	127	2-F08
95 56 655	03A	023	2-A24
95 56 663	03A	023	2-A24
95 56 697	03A	023	2-A24
95 56 705	03A	023	2-A24
95 56 713	03A	023	2-A24
95 56 721	03A	023	2-A24
95 56 812	03A	023	2-A24
95 56 812	03A	025	2-B02
95 56 820	03A	023	2-A24
95 56 820	03A	025	2-B02
95 56 986	03A	027	2-B04
95 56 994	03A	027	2-B04
95 57 018	03A	025	2-B02
95 57 026	03A	025	2-B02
95 57 075	03A	025	2-B02
95 57 083	03A	025	2-B02
95 57 158	03A	025	2-B02
95 57 505	03A	073	2-D02
95 57 505	08C	029	5-K06
95 57 760	03A	079	2-D08
95 57 760	03A	089	2-D18
95 57 760	03A	097	2-E02
95 57 760	03A	105	2-E10
95 57 885	03A	039	2-B16
95 58 032	03A	023	2-A24
95 58 040	03A	023	2-A24
95 58 149	03A	045	2-B22
95 58 784	08C	007	5-J08
95 59 345	03A	041	2-B18
95 59 352	03A	041	2-B18
95 59 386	03A	077	2-D06
95 59 766	03A	059	2-C12
95 59 782	03A	005	2-A06
95 59 790	03A	123	2-F04
95 60 152	03A	129	2-F10
95 60 509	03A	129	2-F10
95 60 731	03A	129	2-F10
95 60 772	03A	129	2-F10
95 60 905	03A	055	2-C08
95 60 962	03A	059	2-C12
95 61 044	03A	125	2-F06
95 61 093	03B	031	2-H08
95 61 093	03B	061	2-I14
95 61 093	03B	089	2-J18
95 61 440	08B	149	5-G06
95 61 655	03A	073	2-D02
95 61 655	08C	029	5-K06
95 61 804	03A	073	2-D02
95 61 804	03A	085	2-D14
95 61 804	03A	093	2-D22
95 61 804	03A	103	2-E08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 62 752	03A	009	2-A10
95 63 115	08B	149	5-G06
95 63 123	08B	149	5-G06
95 63 149	03A	055	2-C08
95 63 149	03A	059	2-C12
95 63 313	03A	127	2-F08
95 63 339	03A	123	2-F04
95 63 354	03A	119	2-E24
95 63 412	03A	009	2-A10
95 64 014	03A	115	2-E20
95 64 170	03A	049	2-C02
95 64 170	08A	153	4-G10
95 64 170	08A	155	4-G12
95 64 170	08A	157	4-G14
95 64 170	08A	159	4-G16
95 64 170	08A	161	4-G18
95 64 204	03B	031	2-H08
95 64 204	03B	061	2-I14
95 64 295	03A	045	2-B22
95 64 303	03A	045	2-B22
95 64 345	03A	049	2-C02
95 64 345	08A	153	4-G10
95 64 345	08A	155	4-G12
95 64 345	08A	157	4-G14
95 64 345	08A	159	4-G16
95 64 345	08A	161	4-G18
95 64 477	03A	079	2-D08
95 64 477	03A	089	2-D18
95 64 584	03B	021	2-G22
95 64 584	03B	079	2-J08
95 64 592	03B	021	2-G22
95 64 592	03B	079	2-J08
95 64 600	03B	021	2-G22
95 64 600	03B	079	2-J08
95 64 600	03B	115	2-K20
95 64 618	03B	031	2-H08
95 64 618	03B	061	2-I14
95 64 618	03B	089	2-J18
95 64 675	03A	081	2-D10
95 64 675	03A	091	2-D20
95 64 675	03A	101	2-E06
95 64 675	03A	109	2-E14
95 64 683	03A	081	2-D10
95 64 683	03A	091	2-D20
95 64 683	03A	101	2-E06
95 64 683	03A	109	2-E14
95 64 733	03A	059	2-C12
95 64 865	03A	057	2-C10
95 65 003	08B	165	5-G22
95 65 011	08B	165	5-G22
95 65 417	03A	119	2-E24
95 65 623	03A	051	2-C04
95 65 698	03A	129	2-F10
95 65 896	03A	129	2-F10
95 65 904	03A	129	2-F10
95 66 019	03A	129	2-F10
95 66 027	03A	129	2-F10
95 66 035	03A	129	2-F10
95 66 043	03A	129	2-F10
95 66 092	03A	129	2-F10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 66 332	03A	047	2-B24
95 66 381	03A	055	2-C08
95 66 381	03A	057	2-C10
95 66 399	03A	055	2-C08
95 66 415	03A	055	2-C08
95 66 415	03A	057	2-C10
95 66 423	03A	057	2-C10
95 66 548	03A	055	2-C08
95 66 647	03A	123	2-F04
95 66 902	03A	047	2-B24
95 67 017	03A	127	2-F08
95 67 082	03A	129	2-F10
95 67 223	03A	035	2-B12
95 67 454	03A	131	2-F12
95 67 462	03A	131	2-F12
95 68 064	03A	039	2-B16
95 68 122	03A	051	2-C04
95 68 536	03A	055	2-C08
95 68 742	03A	055	2-C08
95 68 759	03A	055	2-C08
95 68 825	03A	073	2-D02
95 68 882	03A	055	2-C08
95 69 013	03A	047	2-B24
95 69 740	03A	079	2-D08
95 69 740	03A	089	2-D18
95 69 740	03A	099	2-E04
95 69 740	03A	107	2-E12
95 69 799	03A	119	2-E24
95 69 906	03A	063	2-C16
95 69 948	03A	037	2-B14
95 69 955	08B	149	5-G06
95 69 955	08B	157	5-G14
95 69 955	08B	167	5-G24
95 71 118	08A	125	4-F06
95 79 244	08B	177	5-H10
95 79 566	08B	029	5-B06
95 79 574	08B	029	5-B06
95 79 715	08B	169	5-H02
95 79 764	08B	173	5-H06
95 79 772	08B	173	5-H06
95 79 780	08B	173	5-H06
95 80 846	08B	135	5-F16
95 80 846	08B	137	5-F18
95 80 846	08B	139	5-F20
95 84 715	08B	203	5-I12
95 84 731	08B	149	5-G06
95 84 731	08B	175	5-H08
95 84 731	08B	203	5-I12
95 84 749	08B	203	5-I12
95 85 613	08B	159	5-G16
95 85 951	08B	031	5-B08
95 86 132	08B	173	5-H06
95 86 157	08B	173	5-H06
95 86 165	08B	173	5-H06
95 86 173	08B	173	5-H06
95 86 181	08B	173	5-H06
95 86 207	08B	173	5-H06
95 86 249	08B	159	5-G16
95 86 827	08B	195	5-I04
95 86 827	08B	197	5-I06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 86 967	08B	159	5-G16
95 86 975	08B	159	5-G16
95 86 983	08B	159	5-G16
95 89 045	08B	161	5-G18
95 89 110	08B	187	5-H20
95 91 488	08A	099	4-E04
95 91 496	08A	101	4-E06
95 91 660	08A	101	4-E06
95 91 736	08A	101	4-E06
95 91 744	08A	099	4-E04
95 91 868	08A	101	4-E06
95 92 403	08B	165	5-G22
95 92 452	08B	165	5-G22
95 92 700	08B	167	5-G24
95 93 260	08B	177	5-H10
95 93 278	08B	177	5-H10
95 93 534	08B	181	5-H14
95 93 534	08B	183	5-H16
95 93 542	08B	181	5-H14
95 94 607	08B	025	5-B02
95 94 607	08B	027	5-B04
95 94 615	08B	025	5-B02
95 94 615	08B	027	5-B04
95 94 623	08B	025	5-B02
95 94 623	08B	027	5-B04
95 94 631	08B	025	5-B02
95 94 631	08B	027	5-B04
95 96 560	03A	127	2-F08
95 96 586	03A	081	2-D10
95 96 586	03A	091	2-D20
95 96 586	03A	101	2-E06
95 96 875	03A	067	2-C20
95 96 891	03A	067	2-C20
95 97 006	03A	037	2-B14
95 97 147	03A	067	2-C20
95 97 154	03A	067	2-C20
95 97 170	03A	067	2-C20
95 97 188	03A	067	2-C20
95 97 204	03A	065	2-C18
95 97 212	03A	065	2-C18
95 97 220	09	011	5-L12
95 97 238	09	011	5-L12
95 97 386	03A	053	2-C06
95 97 444	03A	081	2-D10
95 97 444	03A	091	2-D20
95 97 451	03A	081	2-D10
95 97 451	03A	091	2-D20
95 97 451	03A	101	2-E06
95 97 451	03A	109	2-E14
95 97 477	08A	037	4-B14
95 97 550	03A	073	2-D02
95 97 899	03A	097	2-E02
95 97 899	03A	105	2-E10
95 97 907	03A	097	2-E02
95 97 907	03A	105	2-E10
95 97 915	03A	101	2-E06
95 97 915	03A	109	2-E14
95 98 038	09	013	5-L14
95 98 087	03A	077	2-D06
95 98 095	03A	077	2-D06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 98 103	03A	067	2-C20
95 98 160	03A	077	2-D06
95 98 269	03A	053	2-C06
95 98 285	03A	087	2-D16
95 98 293	03A	087	2-D16
95 98 376	03A	073	2-D02
95 98 400	09	013	5-L14
95 98 434	03A	067	2-C20
95 98 467	03A	127	2-F08
95 98 509	03A	065	2-C18
95 98 533	09	011	5-L12
95 98 541	03A	067	2-C20
95 98 566	03A	067	2-C20
95 98 574	03A	067	2-C20
95 98 624	03A	067	2-C20
95 98 632	09	013	5-L14
95 98 640	03A	065	2-C18
95 98 665	03A	087	2-D16
95 98 673	03A	087	2-D16
95 98 681	03A	097	2-E02
95 98 699	03A	097	2-E02
95 98 756	03A	067	2-C20
95 98 798	03A	067	2-C20
95 98 814	03A	067	2-C20
95 98 848	03A	067	2-C20
95 98 855	03A	067	2-C20
95 98 988	09	013	5-L14
96 11 336	08B	203	5-I12
96 11 534	08B	203	5-I12
96 11 559	08B	203	5-I12
96 11 674	08B	199	5-I08
96 11 682	08B	005	5-A06
96 11 708	08B	005	5-A06
96 11 724	08B	195	5-I04
96 11 724	08B	197	5-I06
96 11 732	08B	195	5-I04
96 11 732	08B	197	5-I06
96 11 740	08B	195	5-I04
96 11 740	08B	197	5-I06
96 12 953	08B	185	5-H18
96 12 961	08B	185	5-H18
96 13 712	08B	015	5-A16
96 13 746	08B	015	5-A16
96 14 512	08B	149	5-G06
96 14 512	08B	203	5-I12
96 14 520	08B	147	5-G04
96 14 520	08B	203	5-I12
96 14 546	08B	147	5-G04
96 14 546	08B	203	5-I12
96 14 561	08B	149	5-G06
96 14 629	08B	175	5-H08
96 14 637	08B	175	5-H08
96 14 686	08B	177	5-H10
96 15 287	08A	101	4-E06
96 15 295	08A	101	4-E06
96 15 303	08A	101	4-E06
96 15 311	08A	101	4-E06
96 15 329	08A	101	4-E06
96 15 337	08A	101	4-E06
96 15 345	08A	101	4-E06
96 15 352	08A	101	4-E06
96 17 226	08A	101	4-E06
96 17 234	08A	101	4-E06
96 17 242	08A	101	4-E06
96 17 259	08A	101	4-E06
96 17 275	08A	101	4-E06
96 17 283	08A	101	4-E06
96 17 341	08B	021	5-A22
96 17 358	08B	021	5-A22
96 17 846	08B	195	5-I04
96 17 846	08B	197	5-I06
96 17 846	08B	199	5-I08
96 17 853	08B	195	5-I04
96 17 853	08B	197	5-I06
96 17 853	08B	199	5-I08
96 17 879	08B	183	5-H16
96 18 232	08B	165	5-G22
96 18 273	08B	179	5-H12
96 18 281	08B	007	5-A08
96 18 281	08B	203	5-I12
96 18 299	08B	007	5-A08
96 18 299	08B	203	5-I12
96 18 315	08B	007	5-A08
96 18 315	08B	203	5-I12
96 18 414	08B	189	5-H22
96 18 562	08B	189	5-H22
96 18 588	08B	191	5-H24
96 18 612	08B	191	5-H24
96 18 687	08B	159	5-G16
96 18 687	08B	169	5-H02
96 18 836	08B	159	5-G16
96 18 836	08B	169	5-H02
96 18 935	08B	197	5-I06
96 19 032	08B	161	5-G18
96 19 032	08B	173	5-H06
96 19 040	08B	161	5-G18
96 19 040	08B	173	5-H06
96 21 897	08C	013	5-J14
96 29 197	08C	021	5-J22
96 31 300	08C	027	5-K04
96 31 300	08C	029	5-K06
96 31 300	08C	031	5-K08
96 31 300	09	007	5-L08
96 45 235	08B	199	5-I08
96 45 250	08B	199	5-I08
96 45 268	08B	199	5-I08
96 45 334	08B	181	5-H14
96 45 367	08B	131	5-F12
96 45 391	08B	181	5-H14
96 45 615	08B	183	5-H16
96 45 698	08B	183	5-H16
96 46 134	08B	029	5-B06
96 46 142	08B	029	5-B06
96 46 142	08B	039	5-B16
96 46 167	08B	029	5-B06
96 46 167	08B	039	5-B16
96 46 167	08B	041	5-B18
96 46 167	08B	059	5-C12
96 46 167	08B	061	5-C14
96 46 167	08B	071	5-C24
96 46 167	08B	073	5-D02
96 46 290	08B	199	5-I08
96 46 308	08B	199	5-I08
96 46 647	08B	029	5-B06
96 46 647	08B	039	5-B16
96 47 074	08B	029	5-B06
96 47 165	08B	133	5-F14
96 47 181	08B	133	5-F14
96 47 272	08B	181	5-H14
96 47 348	08B	181	5-H14
96 47 447	08B	029	5-B06
96 47 462	08B	029	5-B06
96 47 462	08B	039	5-B16
96 47 462	08B	041	5-B18
96 47 462	08B	059	5-C12
96 47 462	08B	061	5-C14
96 47 462	08B	071	5-C24
96 47 462	08B	073	5-D02
96 47 991	08B	133	5-F14
96 48 023	08B	133	5-F14
96 48 031	08B	133	5-F14
96 48 239	08B	031	5-B08
96 48 486	08B	031	5-B08
96 48 486	08B	041	5-B18
96 48 486	08B	061	5-C14
96 48 486	08B	073	5-D02
96 48 734	08B	187	5-H20
96 48 957	08B	195	5-I04
96 48 965	08B	195	5-I04
96 48 999	08B	195	5-I04
96 49 005	08B	195	5-I04
96 49 138	08B	177	5-H10
96 49 138	08B	181	5-H14
96 49 195	08B	181	5-H14
96 49 500	08B	177	5-H10
96 49 500	08B	181	5-H14
96 49 658	08B	195	5-I04
96 49 666	08B	195	5-I04
96 49 732	09	011	5-L12
96 49 799	08B	181	5-H14
96 49 807	08B	187	5-H20
96 49 815	08B	187	5-H20
96 49 823	08B	187	5-H20
96 56 901	08C	015	5-J16
96 57 123	08B	183	5-H16
96 58 584	08B	159	5-G16
96 58 592	08B	153	5-G16
96 59 012	08B	159	5-G16
96 59 020	08B	159	5-G16
96 59 764	02	165	1-I22
96 59 764	02	167	1-I24
96 59 764	08B	007	5-A08
96 68 120	08B	135	5-F16
96 68 153	08B	135	5-F16
96 68 153	08B	137	5-F18
96 68 153	08B	139	5-F20
96 68 153	08B	141	5-F22
96 71 835	08B	161	5-G18
96 71 835	08B	169	5-H02
96 73 146	08B	159	5-G16
96 73 146	08B	169	5-H02
96 73 435	08B	159	5-G16
96 73 435	08B	169	5-H02
96 74 847	08B	021	5-A22
96 75 646	08B	135	5-F16
96 75 646	08B	137	5-F18
96 75 646	08B	139	5-F20
96 77 014	08B	159	5-G16
96 77 014	08B	169	5-H02
96 78 434	08B	159	5-G16
96 80 224	08B	007	5-A08
96 80 224	08B	203	5-I12
96 80 885	08B	191	5-H24
96 80 893	08B	191	5-H24
96 80 901	08B	189	5-H22
96 81 339	08B	023	5-A24
96 81 347	08B	023	5-A24
96 81 735	08B	195	5-I04
96 81 735	08B	197	5-I06
96 81 891	08B	153	5-G10
96 81 909	08B	153	5-G10
96 81 917	08B	153	5-G10
96 82 014	08B	151	5-G08
96 82 139	08B	195	5-I04
96 82 147	08B	195	5-I04
96 82 386	08B	015	5-A16
96 82 394	08B	015	5-A16
96 82 402	08B	015	5-A16
96 82 535	08B	007	5-A08
96 82 543	08B	007	5-A08
96 82 550	08B	007	5-A08
96 82 592	08B	011	5-A12
96 82 600	08B	011	5-A12
96 83 640	08B	185	5-H18
96 83 657	08B	185	5-H18
96 83 806	08B	189	5-H22
96 83 814	08B	191	5-H24
96 83 822	08B	189	5-H22
96 83 830	08B	191	5-H24
96 83 848	08B	189	5-H22
96 83 863	08B	189	5-H22
96 83 897	08B	191	5-H24
96 83 913	08B	191	5-H24
96 83 921	08B	189	5-H22
96 83 939	08B	189	5-H22
96 83 988	08B	191	5-H24
96 84 085	08B	143	5-F24
96 84 093	08B	143	5-F24
96 84 101	08B	143	5-F24
96 84 119	08B	143	5-F24
96 84 127	08B	145	5-G02
96 84 135	08B	145	5-G02
96 84 143	08B	145	5-G02
96 84 150	08B	145	5-G02
96 84 408	08B	145	5-G02
96 84 481	08B	085	5-D14
96 84 481	08B	099	5-E04
96 84 481	08B	113	5-E18
96 84 481	08B	127	5-F08
96 84 499	08B	085	5-D14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 84 499	08B	099	5-E04
96 84 499	08B	113	5-E18
96 84 499	08B	127	5-F08
96 84 507	08B	087	5-D16
96 84 507	08B	101	5-E06
96 84 507	08B	115	5-E20
96 84 507	08B	129	5-F10
96 84 515	08B	087	5-D16
96 84 515	08B	101	5-E06
96 84 515	08B	115	5-E20
96 84 515	08B	129	5-F10
96 84 549	08B	081	5-D10
96 84 549	08B	095	5-D24
96 84 549	08B	109	5-E14
96 84 549	08B	123	5-F04
96 85 132	08B	077	5-D06
96 85 132	08B	087	5-D16
96 85 132	08B	089	5-D18
96 85 132	08B	091	5-D20
96 85 132	08B	101	5-E06
96 85 132	08B	103	5-E08
96 85 132	08B	105	5-E10
96 85 132	08B	115	5-E20
96 85 132	08B	117	5-E22
96 85 132	08B	119	5-E24
96 85 132	08B	129	5-F10
96 85 520	08B	017	5-A18
96 85 520	08B	019	5-A20
96 85 694	08B	021	5-A22
96 86 023	08B	021	5-A22
96 86 031	08B	021	5-A22
96 86 395	08B	133	5-F14
96 86 403	08B	133	5-F14
96 86 700	08B	133	5-F14
96 86 742	08B	133	5-F14
96 86 783	08B	133	5-F14
96 86 825	08B	133	5-F14
96 86 841	08B	161	5-G18
96 86 841	08B	171	5-H04
96 87 443	08B	183	5-H16
96 87 450	08B	183	5-H16
96 88 441	08B	151	5-G08
96 88 458	08B	147	5-G04
96 88 458	08B	203	5-I12
96 88 482	08B	175	5-H08
96 88 516	08B	175	5-H08
96 88 540	08B	175	5-H08
96 88 557	08B	177	5-H10
96 88 581	08B	177	5-H10
96 88 672	08B	021	5-A22
96 88 813	08B	175	5-H08
96 88 821	08B	175	5-H08
96 88 839	08B	177	5-H10
96 89 795	08B	011	5-A12
96 89 803	08B	011	5-A12
96 94 969	08B	203	5-I12
96 95 099	09	013	5-L14
96 95 321	08B	173	5-H06
96 95 354	08B	173	5-H06
96 95 768	08B	169	5-H02
96 95 909	08B	165	5-G22
96 95 917	08B	165	5-G22
96 96 600	08B	159	5-G16
96 96 600	08B	169	5-H02
96 96 618	08B	159	5-G16
96 96 618	08B	169	5-H02
96 97 525	08B	159	5-G16
96 97 525	08B	169	5-H02
96 98 044	08A	139	4-F20
96 98 051	08A	139	4-F20
96 98 069	08A	139	4-F20
96 98 093	08A	139	4-F20
96 98 101	08A	139	4-F20
96 98 168	08A	135	4-F16
96 98 176	08A	135	4-F16
96 98 184	08A	137	4-F18
96 98 283	08C	023	5-J24
96 98 283	08C	029	5-K06
96 98 291	08C	023	5-J24
96 98 291	08C	027	5-K04
96 98 366	08A	135	4-F16
96 98 382	08A	119	4-E24
96 98 382	08A	151	4-G08
96 98 390	08A	119	4-E24
96 98 390	08A	151	4-G08
96 98 408	08A	119	4-E24
96 98 408	08A	149	4-G06
96 98 465	08A	139	4-F20
96 98 481	08A	135	4-F16
96 98 499	08A	135	4-F16
96 98 507	08A	137	4-F18
96 98 531	08A	119	4-E24
96 98 531	08A	143	4-F24
96 98 549	08A	119	4-E24
96 98 549	08A	143	4-F24
96 98 564	08B	147	5-G04
96 98 572	08B	147	5-G04
96 98 580	08B	147	5-G04
96 98 598	08B	147	5-G04
96 98 606	08B	147	5-G04
96 98 614	08B	147	5-G04
96 98 622	08B	147	5-G04
96 98 630	08B	147	5-G04
96 98 648	08B	147	5-G04
96 98 655	08B	147	5-G04
96 98 663	08B	147	5-G04
96 98 671	08B	147	5-G04
96 98 689	08B	147	5-G04
96 98 697	08B	147	5-G04
96 98 705	08B	147	5-G04
96 98 713	08B	147	5-G04
96 98 721	08B	147	5-G04
96 98 739	08B	147	5-G04
96 98 747	08B	147	5-G04
96 98 754	08B	147	5-G04
96 98 762	08B	147	5-G04
96 98 770	08B	147	5-G04
96 98 788	08B	147	5-G04
96 98 796	08B	147	5-G04
96 98 853	08A	135	4-F16
96 98 861	08A	135	4-F16
96 98 879	08A	137	4-F18
96 99 224	08B	177	5-H10
96 99 232	08B	175	5-H08
96 99 240	08B	175	5-H08
96 99 257	08B	007	5-A08
96 99 257	08B	203	5-I12
96 99 273	08B	177	5-H10
96 99 323	08B	177	5-H10
96 99 455	08B	165	5-G22
96 99 463	08B	165	5-G22
96 99 471	08B	155	5-G12
96 99 489	08B	155	5-G12
96 99 497	08B	155	5-G12
96 99 505	08B	155	5-G12
96 99 539	08B	039	5-B16
96 99 547	08B	039	5-B16
96 99 547	08B	041	5-B18
96 99 547	08B	059	5-C12
96 99 547	08B	061	5-C14
96 99 547	08B	071	5-C24
96 99 547	08B	073	5-D02
96 99 547	08B	075	5-D04
96 99 554	08B	041	5-B18
96 99 554	08B	061	5-C14
96 99 554	08B	073	5-D02
96 99 620	08B	033	5-B10
96 99 620	08B	035	5-B12
96 99 638	08B	033	5-B10
96 99 638	08B	035	5-B12
96 99 638	08B	045	5-B22
96 99 638	08B	051	5-C04
96 99 646	08B	033	5-B10
96 99 646	08B	035	5-B12
96 99 646	08B	047	5-B24
96 99 646	08B	053	5-C06
96 99 653	08B	033	5-B10
96 99 653	08B	037	5-B14
96 99 653	08B	047	5-B24
96 99 653	08B	055	5-C08
97 02 465	08B	147	5-G04
97 02 465	08B	203	5-I12
97 03 414	08B	021	5-A22
97 04 511	08B	153	5-G10
97 04 883	08B	077	5-D06
97 04 883	08B	083	5-D12
97 04 883	08B	087	5-D16
97 04 883	08B	089	5-D18
97 04 883	08B	091	5-D20
97 04 883	08B	097	5-E02
97 04 883	08B	101	5-E06
97 05 054	08B	197	5-I06
97 05 062	08B	197	5-I06
97 05 906	08B	081	5-D10
97 05 906	08B	095	5-D24
97 06 466	08B	153	5-G10
97 06 573	08B	021	5-A22
97 06 805	08B	017	5-A18
97 07 217	08A	073	4-D02
97 07 217	08A	075	4-D04
97 08 066	05	021	3-D22
97 08 108	08B	005	5-A06
97 09 494	08B	175	5-H08
97 09 502	08B	175	5-H08
97 11 961	08B	083	5-D12
97 11 961	08B	097	5-E02
97 11 961	08B	111	5-E16
97 11 961	08B	125	5-F06
97 13 496	08A	005	4-A06
97 14 122	08A	069	4-C22
97 14 122	08B	013	5-A14
97 14 775	08B	005	5-A06
97 14 783	08B	005	5-A06
97 14 791	08B	005	5-A06
97 14 809	08B	005	5-A06
97 14 817	08B	007	5-A08
97 14 817	08B	015	5-A16
97 14 825	08B	005	5-A06
97 14 833	08B	005	5-A06
97 15 525	08B	153	5-G10
97 15 525	08B	203	5-I12
97 16 556	08B	015	5-A16
97 16 598	08B	015	5-A16
97 16 614	08B	015	5-A16
97 18 131	08B	151	5-G08
97 18 131	08B	203	5-I12
97 18 297	08B	151	5-G08
97 18 305	08B	151	5-G08
97 18 479	08B	151	5-G08
97 18 487	08B	151	5-G08
97 18 602	08B	151	5-G08
97 18 610	08B	151	5-G08
97 19 717	08B	175	5-H08
97 19 790	08B	175	5-H08
97 19 808	08B	175	5-H08
97 21 481	08B	175	5-H08
97 21 481	08B	177	5-H10
97 21 499	08B	181	5-H14
97 21 523	08B	175	5-H08
97 21 531	08B	175	5-H08
97 22 075	08B	021	5-A22
97 23 263	08B	015	5-A16
97 23 313	08B	015	5-A16
97 23 321	08B	009	5-A10
97 23 347	08B	015	5-A16
97 23 354	08B	015	5-A16
97 24 626	08B	175	5-H08
97 24 634	08B	175	5-H08
97 24 717	08B	199	5-I08
97 24 733	08B	175	5-H08
97 26 779	08B	153	5-G10
97 26 779	08B	203	5-I12
97 26 795	08B	147	5-G04
97 26 795	08B	203	5-I12
97 27 504	08B	017	5-A18
97 27 504	08B	019	5-A20
97 27 892	08B	177	5-H10
97 29 716	08B	175	5-H08
97 29 724	08B	151	5-G08
97 30 995	08A	153	4-G10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-C07 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
97 30 995	08A	155	4-G12
97 30 995	08A	157	4-G14
97 30 995	08A	159	4-G16
97 30 995	08A	161	4-G18
97 30 995	08B	143	5-F24
97 31 084	08B	199	5-I08
97 31 092	08B	199	5-I08
97 31 498	08A	069	4-C22
97 31 498	08A	073	4-D02
97 31 498	08A	075	4-D04
97 31 969	08B	199	5-I08
97 31 977	08B	199	5-I06
97 32 231	08B	175	5-H08
97 32 249	08B	017	5-A18
97 32 249	08B	019	5-A20
97 33 338	08B	183	5-H16
97 33 569	08B	191	5-H24
97 33 577	08B	191	5-H24
97 34 583	08B	145	5-G02
97 35 861	08B	175	5-H08
97 36 075	08B	175	5-H08
97 36 190	08B	175	5-H08
97 36 216	08B	175	5-H08
97 36 273	08B	017	5-A18
97 36 273	08B	019	5-A20
97 36 935	08A	077	4-D06
97 36 950	08A	099	4-E04
97 40 663	08B	203	5-I12
97 40 739	08B	131	5-F12
97 41 893	08B	191	5-H24
97 41 901	08B	191	5-H24
97 41 968	08B	189	5-H22
97 41 976	08B	189	5-H22
97 46 124	08B	153	5-G10
97 46 249	08C	035	5-K12
97 46 264	08A	137	4-F18
97 46 314	08A	141	4-F22
97 46 322	08C	005	5-J06
97 46 322	08C	035	5-K12
97 46 652	08A	141	4-F22
97 46 694	08B	007	5-A08
97 46 694	08B	203	5-I12
97 46 835	08A	141	4-F22
97 46 850	08A	141	4-F22
97 46 884	08A	141	4-F22
97 46 892	08A	141	4-F22
97 46 900	08A	141	4-F22
97 46 926	08A	141	4-F22
97 46 934	08A	141	4-F22
97 46 959	08A	141	4-F22
97 46 967	08A	141	4-F22
97 46 975	08A	139	4-F20
97 46 975	08A	141	4-F22
97 56 974	08B	141	5-F22
97 57 691	08B	023	5-A24
97 58 715	08B	159	5-G16
97 58 715	08B	169	5-H02
97 59 069	08B	159	5-G16
97 59 069	08B	161	5-G18
97 59 069	08B	169	5-H02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
97 59 077	08B	159	5-G16
97 59 077	08B	169	5-H02
97 60 497	08B	021	5-A22
97 64 853	08B	163	5-H16
97 69 209	08B	147	5-G04
97 69 209	08B	149	5-G06
97 69 209	08B	157	5-G14
97 69 209	08B	165	5-G22
97 69 209	08B	203	5-I12
97 69 217	08B	147	5-G04
97 69 217	08B	157	5-G14
97 69 217	08B	165	5-G22
97 69 217	08B	203	5-I12
97 69 225	08B	157	5-G14
97 69 225	08B	165	5-G22
97 69 225	08B	203	5-I12
97 71 205	08B	159	5-G16
97 71 205	08B	169	5-H02
97 74 282	08B	183	5-H16
97 75 230	08B	183	5-H16
97 76 584	08A	101	4-E06
97 77 327	08B	159	5-G16
97 78 895	08B	161	5-G18
97 78 895	08B	169	5-H02
97 78 952	03A	067	2-C20
97 81 592	08B	157	5-G14
97 81 592	08B	165	5-G22
97 92 391	08B	163	5-G20
97 92 391	08B	173	5-H06
97 96 848	08B	153	5-G10
97 96 848	08B	163	5-G20
97 96 848	08B	173	5-H06
97 96 848	08B	205	5-I14
97 97 093	08A	099	4-E04
97 97 101	08A	099	4-E04
98 05 326	08A	071	4-C24
98 07 215	08B	177	5-H10
98 09 690	08B	205	5-I14
98 09 732	08B	131	5-F12
98 09 740	03B	131	5-F12
98 10 961	08B	199	5-I08
98 11 001	08B	199	5-I08
98 11 019	08B	199	5-I08
98 12 033	08B	079	5-D08
98 12 033	08B	093	5-D22
98 12 033	08B	107	5-E12
98 12 033	08B	121	5-F02
98 12 041	08B	079	5-D08
98 12 041	08B	093	5-D22
98 12 041	08B	107	5-E12
98 12 041	08B	121	5-F02
98 12 058	08B	079	5-D08
98 12 058	08B	093	5-D22
98 12 058	08B	107	5-E12
98 12 058	08B	121	5-F02
98 12 249	08B	147	5-G04
98 12 256	08B	147	5-G04
98 12 264	08B	147	5-G04
98 12 272	08B	147	5-G04
98 12 322	08B	153	5-G10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 13 270	08B	153	5-G10
98 13 288	08B	153	5-G10
98 23 519	08B	017	5-A18
98 23 683	03A	037	2-B14
98 23 857	08B	133	5-F14
98 24 368	08B	031	5-B08
98 24 376	08B	031	5-B08
98 24 376	08B	041	5-B18
98 24 376	08B	061	5-C14
98 24 376	08B	073	5-D02
98 24 434	08B	131	5-F12
98 24 574	08A	023	4-A24
98 24 673	08B	081	5-D10
98 24 673	08B	095	5-D24
98 24 673	08B	109	5-E14
98 24 673	08B	123	5-F04
98 24 681	08B	081	5-D10
98 24 681	08B	095	5-D24
98 24 681	08B	109	5-E14
98 24 681	08B	123	5-F04
98 24 699	08B	081	5-D10
98 24 699	08B	095	5-D24
98 24 707	08B	081	5-D10
98 24 707	08B	095	5-D24
98 24 715	08B	081	5-D10
98 24 715	08B	095	5-D24
98 24 715	08B	109	5-E14
98 24 715	08B	123	5-F04
98 24 723	08B	081	5-D10
98 24 723	08B	095	5-D24
98 24 830	08B	195	5-I04
98 24 848	08B	195	5-I04
98 24 897	08B	131	5-F12
98 24 905	08A	123	4-F04
98 24 939	03A	037	2-B14
98 26 595	08B	183	5-H16
98 27 718	08B	177	5-H10
98 28 096	08B	015	5-A16
98 28 435	08B	017	5-A18
98 29 201	08B	015	5-A16
98 29 219	08B	015	5-A16
98 29 409	08B	153	5-G10
98 29 672	08B	177	5-H10
98 30 050	08B	079	5-D08
98 30 050	08B	093	5-D22
98 30 050	08B	107	5-E12
98 30 050	08B	121	5-F02
98 31 991	08B	077	5-D06
98 31 991	08B	089	5-D18
98 31 991	08B	091	5-D20
98 31 991	08B	103	5-E08
98 31 991	08B	105	5-E10
98 31 991	08B	117	5-E22
98 31 991	08B	119	5-E24
98 32 007	08B	077	5-D06
98 32 007	08B	089	5-D18
98 32 007	08B	091	5-D20
98 32 007	08B	103	5-E08
98 32 007	08B	105	5-E10
98 32 007	08B	117	5-E22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 32 007	08B	119	5-E24
98 33 104	08A	099	4-E04
98 33 112	08A	099	4-E04
98 33 120	08A	099	4-E04
98 33 138	08A	099	4-E04
98 33 146	08A	099	4-E04
98 33 153	08A	099	4-E04
98 33 161	08A	099	4-E04
98 33 179	08A	099	4-E04
98 33 203	08A	099	4-E04
98 33 203	08A	147	4-G04
98 33 211	08A	099	4-E04
98 33 211	08A	147	4-G04
98 33 229	08A	099	4-E04
98 33 245	08A	099	4-E04
98 33 245	08A	149	4-G06
98 33 252	08A	099	4-E04
98 33 260	08A	099	4-E04
98 33 278	08A	099	4-E04
98 33 286	08A	099	4-E04
98 33 302	08A	099	4-E04
98 33 328	08A	099	4-E04
98 33 344	08A	099	4-E04
98 33 369	08A	099	4-E04
98 33 385	08A	099	4-E04
98 33 476	08B	151	5-G08
98 33 484	08B	151	5-G08
98 33 492	08B	151	5-G08
98 33 500	08B	151	5-G08
98 33 518	08A	099	4-E04
98 33 526	08A	099	4-E04
98 33 542	08B	177	5-H10
98 33 559	08A	099	4-E04
98 33 575	08A	099	4-E04
98 33 591	08A	099	4-E04
98 33 617	08A	099	4-E04
98 33 971	08B	151	5-G08
98 33 971	08B	205	5-I14
98 34 243	08B	015	5-A16
98 35 042	08B	017	5-A18
98 35 059	08B	017	5-A18
98 35 190	08B	153	5-G10
98 35 208	08B	153	5-G10
98 35 620	08B	009	5-A10
98 35 638	08B	009	5-A10
98 35 737	04	029	3-B06
98 35 737	08A	061	4-C14
98 35 737	08A	065	4-C18
98 35 737	08A	067	4-C20
98 36 305	08B	187	5-H20
98 36 313	08B	187	5-H20
98 36 347	08B	187	5-H20
98 36 354	08B	187	5-H20
98 36 362	08B	187	5-H20
98 36 370	08B	187	5-H20
98 36 388	08B	187	5-H20
98 36 396	08B	187	5-H20
98 36 404	08B	187	5-H20
98 36 412	08A	015	4-A16
98 36 412	08A	019	4-A20

6-C08 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 36 495	08B	187	5-H20
98 36 503	08B	187	5-H20
98 37 022	08B	153	5-G10
98 37 196	08A	099	4-E04
98 37 196	08A	149	4-G06
98 37 204	08A	099	4-E04
98 37 246	08A	099	4-E04
98 37 253	08A	099	4-E04
98 37 402	08B	151	5-G08
98 37 410	08B	153	5-G10
98 37 428	08B	153	5-G10
98 37 436	08B	153	5-G10
98 37 444	08B	153	5-G10
98 37 485	08B	009	5-A10
98 37 493	08B	009	5-A10
98 41 594	08B	005	5-A06
98 41 610	08B	005	5-A06
98 41 685	08B	005	5-A06
98 41 701	08B	005	5-A06
98 41 776	08B	009	5-A10
98 41 784	08B	009	5-A10
98 41 818	08B	009	5-A10
98 41 826	08B	009	5-A10
98 41 941	08B	005	5-A06
98 41 958	03A	061	2-C14
98 43 608	08B	177	5-H10
98 47 377	08A	099	4-E04
98 47 385	08A	099	4-E04
98 48 169	08B	191	5-H24
98 48 177	08B	191	5-H24
98 48 185	08B	193	5-I02
98 49 498	08B	177	5-H10
98 49 514	02	077	1-F06
98 49 514	02	151	1-I08
98 49 514	08B	009	5-A10
98 49 514	08B	183	5-H16
98 49 514	08B	205	5-I14
98 49 530	08B	147	5-G04
98 49 530	08B	149	5-G06
98 49 795	08B	151	5-G08
98 49 795	08B	205	5-I14
98 49 811	08B	021	5-A22
98 49 829	08B	021	5-A22
98 49 837	08B	187	5-H20
98 49 845	08B	187	5-H20
98 49 852	08B	187	5-H20
98 49 860	08B	187	5-H20
98 50 876	08B	199	5-I08
98 50 967	08B	085	5-D14
98 50 967	08B	099	5-E04
98 50 975	08B	085	5-D14
98 50 975	08B	099	5-E04
98 50 983	08B	087	5-D16
98 50 983	08B	101	5-E06
98 50 991	08B	087	5-D16
98 50 991	08B	101	5-E06
98 51 601	08B	153	5-G10
98 51 619	08B	153	5-G10
98 51 619	08B	161	5-G18
98 57 731	08B	147	5-G04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 57 731	08B	203	5-I12
98 57 921	08B	021	5-A22
98 57 947	08B	015	5-A16
98 57 962	08B	015	5-A16
98 60 305	08B	177	5-H10
98 64 109	08B	183	5-H16
98 64 430	08B	135	5-F16
98 64 430	08B	137	5-F18
98 64 430	08B	139	5-F20
98 65 767	08B	153	5-G10
98 65 775	08B	153	5-G10
98 65 783	08B	153	5-G10
98 66 138	08B	189	5-H22
98 66 179	08B	191	5-H24
98 66 211	08B	191	5-H24
98 66 351	08B	029	5-B06
98 67 789	08B	029	5-B06
98 67 821	08B	081	5-D10
98 67 821	08B	095	5-D24
98 67 821	08B	109	5-E14
98 67 821	08B	123	5-F04
98 67 896	08B	077	5-D06
98 67 896	08B	083	5-D12
98 67 896	08B	087	5-D16
98 67 896	08B	089	5-D18
98 67 896	08B	091	5-D20
98 67 896	08B	097	5-E02
98 67 896	08B	101	5-E06
98 67 896	08B	103	5-E08
98 67 896	08B	105	5-E10
98 67 896	08B	111	5-E16
98 67 896	08B	115	5-E20
98 67 896	08B	117	5-E22
98 67 896	08B	119	5-E24
98 67 896	08B	125	5-F06
98 67 896	08B	129	5-F10
98 68 977	08B	085	5-D14
98 68 977	08B	099	5-E04
98 68 977	08B	113	5-E18
98 68 977	08B	127	5-F08
98 68 985	08B	085	5-D14
98 68 985	08B	099	5-E04
98 68 985	08B	113	5-E18
98 68 985	08B	127	5-F08
98 68 993	08B	087	5-D16
98 68 993	08B	101	5-E06
98 68 993	08B	115	5-E20
98 68 993	08B	129	5-F10
98 69 009	08B	087	5-D16
98 69 009	08B	101	5-E06
98 69 009	08B	115	5-E20
98 69 009	08B	129	5-F10
98 70 080	08B	017	5-A18
98 70 098	08B	017	5-A18
98 70 106	08B	017	5-A18
98 70 114	08B	017	5-A18
98 71 146	08B	015	5-A16
98 71 260	08B	015	5-A16
98 74 041	08B	011	5-A12
98 74 062	08B	011	5-A12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 74 504	08B	161	5-G18
98 74 504	08B	169	5-H02
98 74 801	08B	161	5-G18
98 74 801	08B	171	5-H04
98 74 819	08B	161	5-G18
98 74 819	08B	171	5-H04
98 76 541	08B	029	5-B06
98 76 541	08B	039	5-B16
98 76 541	08B	041	5-B18
98 76 541	08B	059	5-C12
98 76 541	08B	061	5-C14
98 76 541	08B	071	5-C24
98 76 541	08B	073	5-D02
98 76 558	08B	029	5-B06
98 76 558	08B	039	5-B16
98 76 558	08B	041	5-B18
98 76 558	08B	059	5-C12
98 76 558	08B	061	5-C14
98 76 558	08B	071	5-C24
98 76 558	08B	073	5-D02
98 76 574	08B	029	5-B06
98 76 574	08B	039	5-B16
98 76 574	08B	041	5-B18
98 76 574	08B	059	5-C12
98 76 574	08B	061	5-C14
98 76 574	08B	071	5-C24
98 76 574	08B	073	5-D02
98 76 582	08B	029	5-B06
98 76 582	08B	039	5-B16
98 76 582	08B	041	5-B18
98 76 582	08B	059	5-C12
98 76 582	08B	061	5-C14
98 76 582	08B	071	5-C24
98 76 582	08B	073	5-D02
98 76 582	08B	075	5-D04
98 77 341	08B	143	5-F24
98 77 358	08B	145	5-G02
98 77 424	08B	145	5-G02
98 77 432	08B	145	5-G02
98 77 457	08B	145	5-G02
98 77 457	08B	193	5-I02
98 77 606	08B	191	5-H24
98 77 614	08B	191	5-H24
98 78 562	08B	151	5-G08
98 78 570	08B	153	5-G10
98 78 588	08B	131	5-F12
98 79 321	08B	183	5-H16
98 79 461	08B	183	5-H16
98 79 479	08B	183	5-H16
98 80 345	08B	181	5-H14
98 80 378	08B	181	5-H14
98 80 519	08B	181	5-H14
98 80 584	08B	181	5-H14
98 80 634	08B	133	5-F14
98 80 634	08B	135	5-F16
98 80 634	08B	137	5-F18
98 80 634	08B	139	5-F20
98 80 642	08B	133	5-F14
98 80 642	08B	135	5-F16
98 80 642	08B	137	5-F18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 80 642	08B	139	5-F20
98 80 709	08B	133	5-F14
98 80 733	08B	133	5-F14
98 80 808	08B	185	5-H18
98 81 210	08B	145	5-G02
98 81 665	08B	131	5-F12
98 81 806	08B	181	5-H14
98 81 913	08A	123	4-F04
98 81 921	08A	123	4-F04
98 82 051	08B	133	5-F14
98 82 093	08A	101	4-E06
98 82 143	08B	181	5-H14
98 82 630	08B	181	5-H14
98 82 655	08B	187	5-H20
98 83 174	08B	181	5-H14
98 83 331	08A	103	4-E08
98 83 349	08A	103	4-E08
98 83 380	08A	023	4-A24
98 83 422	08B	081	5-D10
98 83 422	08B	097	5-E02
98 83 422	08B	111	5-E16
98 83 422	08B	125	5-F06
98 83 430	08B	081	5-D10
98 83 430	08B	097	5-E02
98 83 430	08B	111	5-E16
98 83 430	08B	125	5-F06
98 84 107	08B	081	5-D10
98 84 107	08B	097	5-E02
98 84 107	08B	111	5-E16
98 84 107	08B	125	5-F06
98 84 289	08B	029	5-B06
98 84 578	08B	081	5-D10
98 84 578	08B	095	5-D24
98 84 578	08B	109	5-E14
98 84 578	08B	123	5-F04
98 84 586	08B	081	5-D10
98 84 586	08B	095	5-D24
98 84 586	08B	109	5-E14
98 84 586	08B	123	5-F04
98 84 594	08B	081	5-D10
98 84 594	08B	095	5-D24
98 84 594	08B	109	5-E14
98 84 594	08B	123	5-F04
98 92 654	08B	163	5-G20
98 93 009	08B	163	5-G20
98 93 017	08B	163	5-G20
98 93 033	08B	163	5-G20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-C10 *New articles* *Nya artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 76 582	03B	089	2-J18
43 54 833	03B	083	2-J12
44 39 014	03A	051	2-C04
44 81 339	09	007	5-L08
89 93 974	05	005	3-D06

Part No Art nr	Gr Gr	Page Sida	Grid Koord

Part No Art nr	Gr Gr	Page Sida	Grid Koord

Part No Art nr	Gr Gr	Page Sida	Grid Koord

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
3C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02

6-C12 *Deleted parts* *Utgångna artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 41 992			
40 42 016			
40 49 888			
40 50 134			
44 87 658			
75 10 258			
82 83 970			
94 22 213			
95 31 674			
95 31 690			
95 32 896			
95 32 904			
95 32 938			
95 32 946			
95 32 979			
95 32 987			
95 33 019			
95 33 027			
95 40 493			
95 40 501			
95 40 519			
95 40 527			
96 95 172			
97 41 489			
98 07 975			
98 51 098			
98 51 411			
98 79 909			

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-G02
4	Transmission	3-A02
5	Brakes	3-D02
6	Front assembly, Steering	3-F02
7	Suspension, Wheels	3-H02
8A	Body, external	4-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9	Tool, Labels	5-L02
10	Numerical register	6-A02