

General
Allmänt
Generalidades

SAAB 900

M 1994-

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 170274

© Saab Automobile AB 1993

AAC94 GB/SE
Jan. 96

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

0	General Allmänt Generalidades
2	Engine Motor Motor
3 A B	Electrical system, instruments Elektriskt system, instrument Sistema elétrico, instrumentos
4	Transmission Kraftöverföring Transmisión
5	Brakes Bromsar Frenos
6	Front assembly, steering Framvagn, styrinrättning Tren delantero, dirección
7	Suspension, wheels Fjädringssystem, hjul Suspensión, ruedas
8 A B C D	Body, external, internal, heat. and ventil., tools, labels Kaross, utv., inv., värme- och vent., verktyg, etiketter Caroccería, ext., inf., calefa. y vent.,herramient, etiquetas
10	Numerical register Nummerregister Indice numérico

GENERAL

INTRODUCTION	1-A05
ABBREVIATIONS	1-A06
MODEL IDENTIFICATION	1-A11
CHASSIS NUMBER	1-A13
ENGINE AND GEARBOX NUMBER	1-A15
STOCK-KEEPING LEVEL	1-A16
INSTRUCTIONS	1-A19
COLOUR MARKING SPRING, -STRUT	1-B03
CODE MARKING VIN PLATE	1-B04

ALLMÄNT

INLEDNING	1-A05
FÖRKORTNINGAR	1-A06
MODELLIDENTIFIKATION	1-A11
CHASSINUMMER	1-A13
MOTOR- OCH VÄXELLÅDSNUMMER	1-A15
LAGERHÅLLNINGSNIVÅ	1-A17
ANVISNINGAR	1-A19
FÄRGMÄRKNING FJÄDER, -BEN	1-B03
KODMÄRKNING CHASSISKYLT	1-B04

GENERALIDADES

INTRODUCCION	1-A05
ABREVIACIONES	1-A08
IDENTIFICACION DEL MODELO	1-A11
NUM. DE CHASIS	1-A13
NUM. DE MOTOR Y CAJA DE CAMBIOS	1-A15
NIVEL DE ALMACENAJE	1-A18
INSTRUCCIONES	1-A20
MARCACIÓN DE COLOR RESORTE, BRAZO-	1-B03
MARCACION DE CODIGO DE NUMERO DE CHASIS	1-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

This Parts Catalogue is applicable to the 1994- models of the Saab 900. It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering uphlstery.

Parts may be listed in this catalogue that are no longer available from SAAB warehouses, but of which importers or dealers may have stock. These articles are indicated by the term "**No Longer Serviced**" or **NLS** being included in the notes column. If there is a replacing part no. it is shown after NLS (NLS - use 7519132)

Denna reservdelskatalog för Saab 900 omfattar årsmodellerna 1994-. Den kommer att hållas aktuell genom att nya fiche ges ut.
Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.

I denna katalog kan finnas artiklar som inte längre finns tillgängliga från SAAB´s lager men som kan finnas tillgängliga hos importör eller återförsäljare. Dessa artiklar är märkta i anmärkningskolumnen med **NLS** (**N**o **L**onger **S**erviced). Finns ersättande artikel skrivs art. nr efter NLS (NLS - use 7519132)

Este catálogo de piezas de recambio del Saab 900 comprende los modelos de los anos 1994-, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, que indicar el tipo del coche clave color de la tapicería.

En este catálogo pueden existir artículos no existentes ya en la actualidad en el almacén de SAAB, pero disponibles todavía en algunos casos en las dependencias del importador o concesionario. Estos artículos han sido marcados con **NLS** (**N**o **L**onger **S**erviced) en la columna dedicada a las observaciones. En caso de existir un artículo sustitutorio, el número del mismo se escribe inmediatamente después de NLS (NLS - use 7519132).

4 CYL	4-cylinder engine	4-cylindrig motor
6 CYL	6-cylinder engine	6-cylindrig motor
A	Automatic transmission	Automatisk växellåda
ABS	Anti block system	Låsningsfria bromsar
AC	Air Conditioning	Luftkonditionering
ACC	Automatic Climate Control	Automatisk klimatkontroll
ACS	Sensonic	Sensonic
AIRBAG 1	Airbag drivers side	Airbag förarsida
AIRBAG 2	Airbag drivers side and passenger side	Airbag förarsida och passagerarsida
AS 2	Audio system, 4x20W	Audio system, 4x20W
AS 3	Audio system, 4x20W + 2x40W	Audio system, 4x20W + 2x40W
B206	2,0 l engine with twin cam	2,0 l motor med två kamaxlar
B204	2,0 l engine with twin cam and two balancer shafts	2,0 l motor med två kamaxlar och två balansaxlar
B204L	2,0 l turbo engine with twin cam and two balancer shafts, with charge cooler	2,0 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl
B234	2,3 l engine with twin cam and two balancer shafts	2,3 l motor med två kamaxlar och två balansaxlar
B258	2,5 l 6-cylinder engine	2,5 l 6-cylindrig motor
CV	Convertible	Cabriolet
CDC	CD changer	CD växlare
CHSEAT	Child seat	Barnstol
CL	Central locking	Centrallås
D	Door	Dörr
DI	Direct ignition	Direkt tändning

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

EAS	Electrically adjustable seat	Elmanövrerad stol
EGR	Exhaust Gas Recirculation	Avgasrecirkulation
ELCD	Evaporative Loss Control Device	Slutet bränslesytem
EM	Electrical mirrors	Elmanövrerade backspeglar
ETS	Electronic Throttle System	Elektroniskt styrd trottel
EW	Electrical window regulators	Elmanövrerade fönsterhissar
I	Fuel injection	Motor med bränsleinsprutning
IAC	Idle speed control	Tomgångsreglering
ICE	Integrated central electronics	Integrerad central elektronik
KW	Kilo Watt	Kilo Watt
L	Length	Längd
LH	Left hand	Vänster
LHD	Left hand drive	Vänsterstyrd
M	Manual transmission	Manuell växellåda
MM	Millimetre	Millimeter
R	Reverse	Backväxel
RH	Right hand	Höger
RHD	Right hand drive	Högerstyrd
SAI	Secondary air injection	Sekundärluft
SR	Sun roof	Sollucka
TCS	Traction Control System for M	Anti spinn system för M
TCM	Transmission control module	Styrdon, A
TTS	Traction control system 6-cyl	Anti spinn system 6-cyl
X	Quantity as required	Antal efter behov

4 CYL	4 cilindros motor
6 CYL	6 cilindros motor
A	Caja de cambios automatico
ABS	Frenos antibloqueo
AC	Acondiciona miento de aire
ACC	Contol automatico de clima
ACS	Sensonic
AIRBAG 1	Airbag lado del conductor
AIRBAG 2	Airbag lado del conductor, lado del pasajero
AS 2	Audio system, 4x20W
AS 3	Audio system, 4x20W + 2x40W
B206	Motor de 2,0 litros con dos ejes de levas
B204	Motor de 2,0 litros con dos ejes de levas y dos ejes equilibradores
B204L	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamiento de aire de admision
B234	Motor de 2,3 litros con dos ejes de levas y dos ejes equilibradores
B258	Motor de 2,5 litros 6 cilindros
CDC	Cargador de discos CD
CHSEAT	Asiento ninos
CL	Cerradura
CV	Cabriolet
D	Puerta
DI	Encendido directo

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

EAS	Asientos maniobra eléctrica
EGR	Recirculation de los gase de escape
ELCD	Sistema de combustible cerrado
EM	Espejos retrovisores elétricos
ETS	Sistema electrónico de aceleración
EW	Levantacristales eléctricos
I	Motor de inyeccion
IAC	Regulacion de ralenti
ICE	Unidad electrónica integrada central
KW	Kilowattio
L	Longitud
LH	Lado izquierdo
LHD	Tracción a la izquierda
M	Caja de cambios manual
MM	Millirnetros
R	Marcha atras
RH	Lado derecho
RHD	Volante a la derecha
SAI	Aire secundario
SR	Techo corredizo
TCS	Sistema de control de tracción para M
TCM	Disp. mando, A
TTS	Sistema de control de tracción 6 sil
X	Cantidad segun necesidad

AR	Argentina	Argentina	Argentina
AU	Australia	Australien	Australia
BE	Belgium	Belgien	Bélgica
BR	Brazil	Brasilien	Brasil
CA	Canada	Canada	Canadá
CH	Switzerland	Schweiz	Suiza
CN	China	Kina	China
CY	Cyprus	Cypern	Chipre
DK	Denmark	Danmark	Dinamarca
DE	Germany	Tyskland	Alemania
EU	Europe	Europa	Europa
FE	Far East	Fjärran Östern	Extremo Oriente
FI	Finland	Finland	Finlandia
FR	France	Frankrike	Francia
GB	Great Britain	England	Gran Bretana
GR	Greece	Grekland	Grecia
HK	Hong Kong	Hong Kong	Hong Kong
IL	Israel	Israel	Israel
IT	Italy	Italien	Italia
JP	Japan	Japan	Japón
KR	Korea	Korea	Corea
LA	Latin America	Latinamerika	Latinoamérica
LB	Lebanon	Libanon	Líbano
ME	Middle East	Mellersta Östern	Próximo Oriente
MT	Malta	Malta	Malta
NO	Norway	Norge	Noruega
PA	Pacific	Stilla-havsområdet	Zona del Pacífico
PR	Puerto Rico	Puerto Rico	Puerto Rico
RU	Russia	Ryssland	Rusia
SE	Sweden	Sverige	Suecia
SG	Singapore	Singapore	Singapur
TH	Thailand	Thailand	Tailandia
TR	Turkey	Turkiet	Turquía
TW	Taiwan	Taiwan	Taiwan
UC	USA-California	USA-Kalifornien	EE.UU. Californi.
UF	USA-Federal	USA-Federalt	EE.UU., Federal
US	USA	USA	EE.UU
ZN	New Zealand	Nya Zeeland	Nueva Zelanda

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

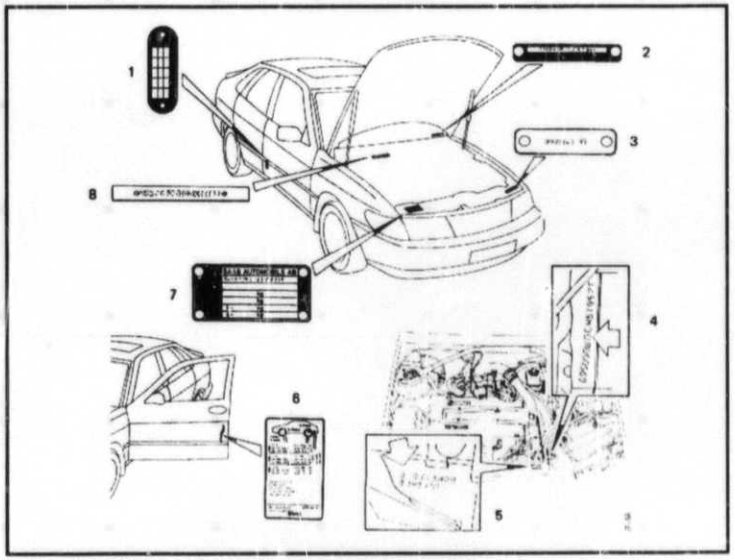


Nameplates and labels

1 Nameplate for modifications (for recalls and the like)
2 Chassis number inside windscreen
3 Body number
4 Gearbox/transmission number
5 Engine number
6 Label for colour codes (upholstery and body) and tyre pressure
7 Chassis number
8 Chassis number (stamped in car body)

Skyltar och etiketter

1 Skylt för modifieringsåtgärder (kampanjskylt)
2 Chassinummer innanför vindruta
3 Karossnummer
4 Växellådsnummer
5 Motornummer
6 Etikett för färgkoder (klädsel och kaross) samt däcktryck
7 Chassinummer
8 Chassinummer (stansat i karossen)

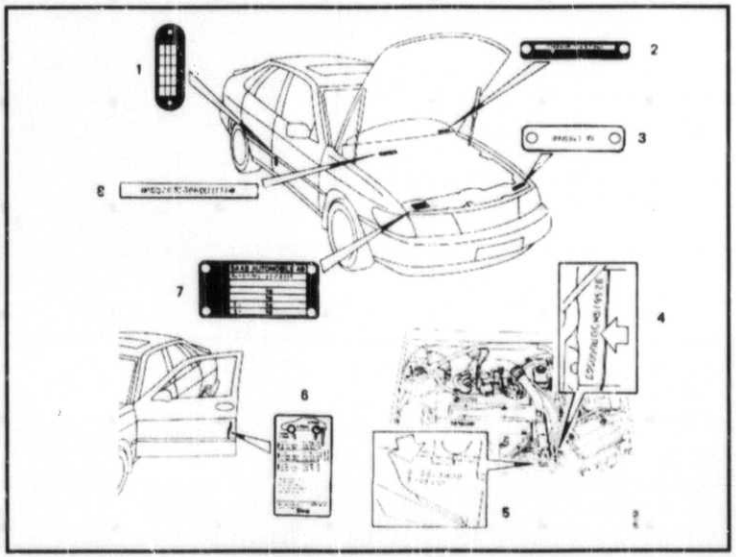


Letreros y etiquetas

1 Letrero de marcasión para las medidas de modificación (letrero de medidas realizadas)
2 Número de chassis en el interior del parabrisas
3 Número de carrocería
4 Número de caja de cambios
5 Número de motor
6 Etiqueta para los códigos de colores (tapizado y carrocería), así como presión de los neumáticos
7 Número de chasis
8 Número de chasis, grabado en carrocería

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Vehicle Identification Number, VIN (chassis number)

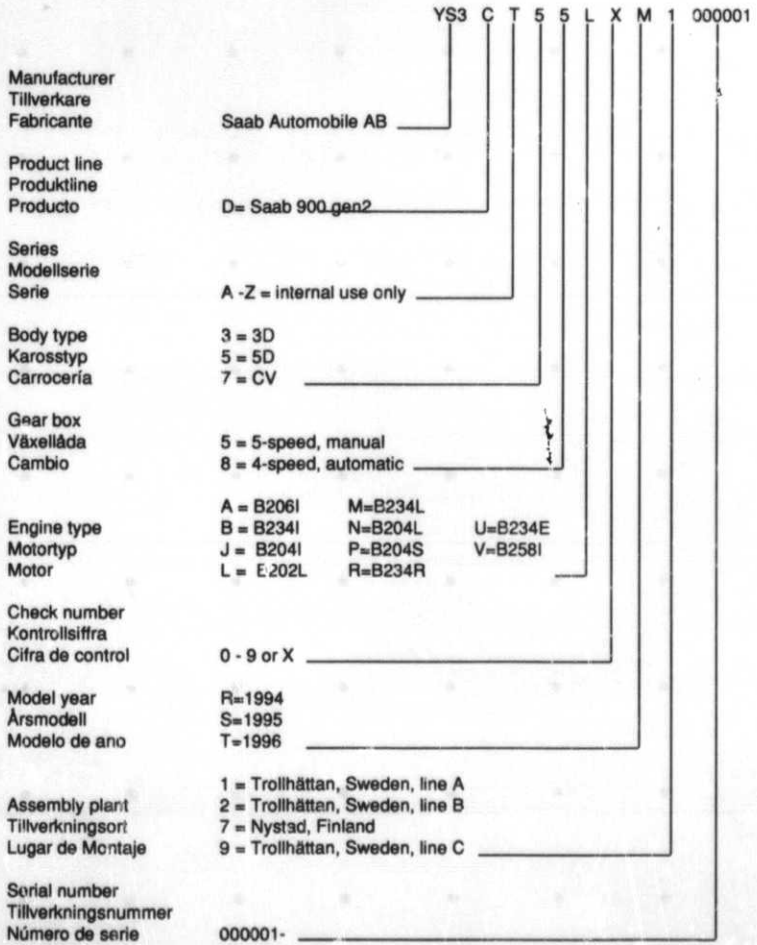

1994

YS3DM55V9R2000001 - YS3DM55B1R2047576

1995

YS3DF58N4S2000001 - YS3DA35J5S2051334
YS3DC75B2S7000001 - YS3DD78B9S7002837
YS3DF75P4S7010001 - YS3DC75J1S7026130

1996


YS3DF58V2T2000001 - YS3DF58NXT2046272
YS3DF78V4T7000001 - YS3DD75J3T7013037

1997

YS3DF58B1V2000001 - YS3DF55NXV2052659
YS3DF78V0V7000001 - YSDDD78B4V7015290

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

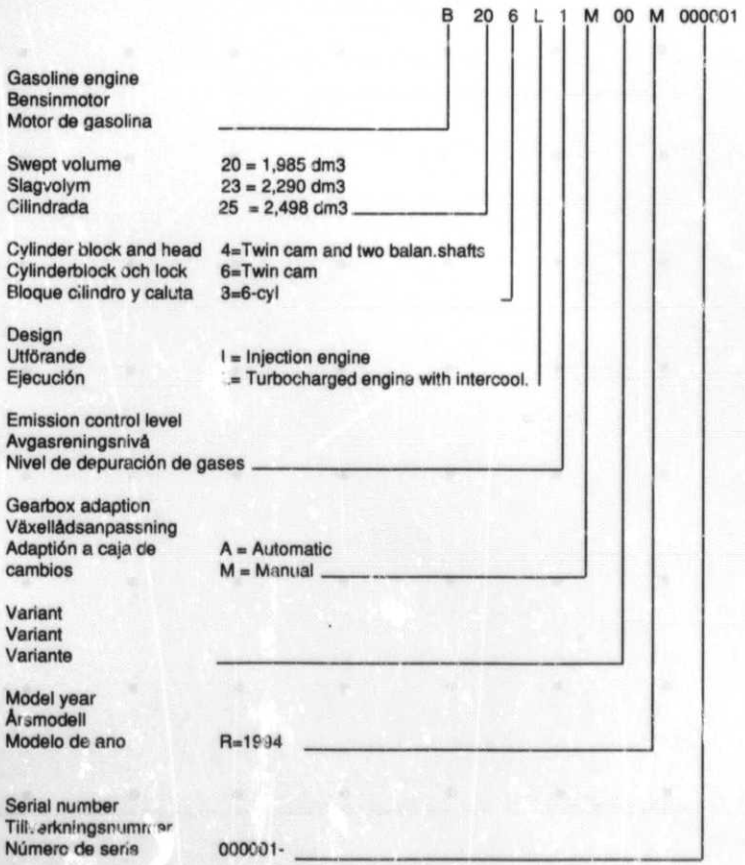

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column bellow.

Stock-keeping level 1	Parts for sevice and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts fromrecommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Oulet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Oulet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Automobile central stores in Nyköping, Sweden

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicarbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar ur lagerhållningsnivå 1-2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder artiklar ur lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saab Automobiles centrallager i Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los concepros siguientes.

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc
Nivel 6	Artículos de poco movimiento en grado extremo

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente

Nivel 1	Tallares y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precesente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén pricipalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y alguns concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Saab Automobile almacén central en Nyköping, Suecia.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Microfiche layouts

Each mircofiche card has a heading which provides information on:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Tranamission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Car modell
2. Model years included on the microfiche. Edition and date.
3. Catalogue groups included on the microfiche.
4. Microfiche part number and language variant.
5. Microfiche card number.

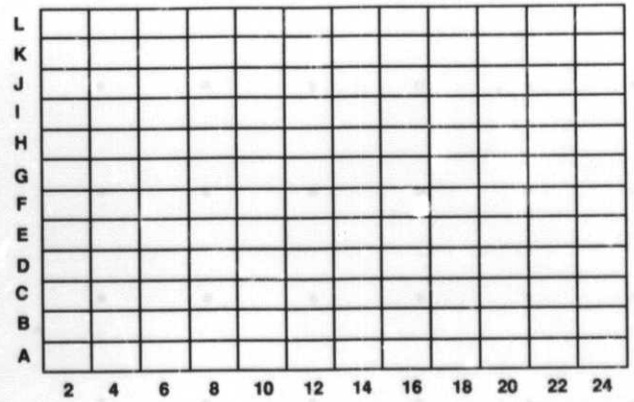

The microfiche card contains 12x12 boxes with illustration and text pages.
Each horizontal line has a letter combination and each vertical column has a digit combination.
Each box is thus given an alpha-numeric coordinate.

Microfichens uppläggning

Varje microfichekort har ett rubrikfält som ger information om:

1. Bilmodell
2. Årsmodeller som microfichen innehåller. Utgåva och datum.
3. Kataloggrupper som finns på kortet.
4. Microfichens artikelnummer och språkvariant.
5. Microfichekortets nummer.


Microfichekortet innehåller 12x12 rutor med bild och textsidor.
Varje horisontell rad har en bokstavsbeteckning och varje vertikal rad en sifferbeteckning.
Varje ruta får på detta sätt en koordinatbeteckning bokstav-siffra.

Disposición de la microficha

Cada tarjeta de microficha cuenta con un encabezamiento que proporciona la siguiente información:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Tranamission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Modelo del automóvil.
2. Años de modelos contenidos en la microficha. Edición y fecha.
3. Grupos de catálogo incluídos en la microficha.
4. Número de artículo y variante de idioma de la microficha.
5. Número de tarjeta de la microficha.

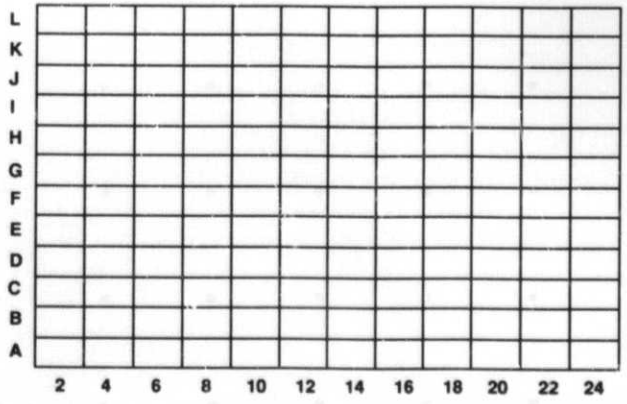

Cada tarjeta contiene 12x12 casillas con páginas de figuras y de texto.
Cada línea horizontal cuenta con una denominación alfabótica y cada columna verticale con una numérica.
Cada casilla obtiene de esta manera una coordenada alfa-numérica.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Illustration page
Each text section has an illustration page. The illustration page is repeated as long as the text section in question is continued.

A complete unit is marked with a ring around the item number.

A kit can be indicated through the item number poiting to several parts.

A kit can also be indicated through the item number being repeated several times.

Bildsida
Varje textsida har en bildsida. Bildsidan uppredas så länge resp. textavsnitt varar.

Komplett enhet markeras med en ring runt positionsnumret.

En sats kan visas genom att positionsnumret pekar på flera delar.


En sats kan också visas genom att positionsnumret upprepas flera gånger.


Las páginas con figuras
A cada sección de texto le corresponde una página con una figura. Esta página se repite hasta que el texto en cuestión haya finalizado.

Cada unidad completa se marca con un círculo alrededor del número de posición.

Un juego puede ser indicado con el número de posición señalando hacia las distintas piezas.

Un juego puede también ser indicado repitiendo varias veces el número de posición.

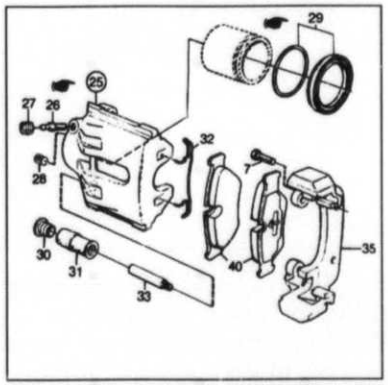


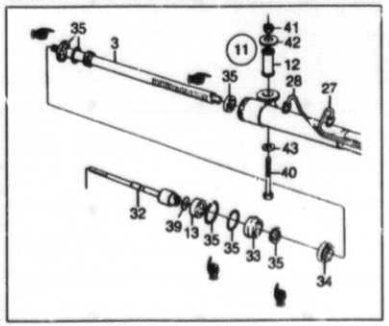

Deviations for certain markets or alternative designs are sometimes indicated in a box.

Avvikelser för vissa marknader eller alternativa utföranden visas ibland i ruta.


Las posibles distintas ejecuciones para algunos mercados, o diseños alternativos, son mostrados a veces en recuadros en una casilla.

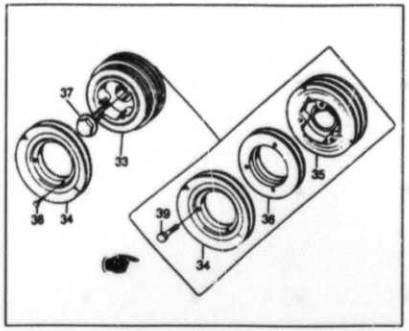

Adjecent parts are indicated on certain illustrations by means of dotted lines or with a rhomb and a note on the text page indicates where you can find the part.

På vissa bilder tecknas *närliggande artiklar* in med prickad linje eller med en romb och en not på textsidan visar var du kan finna artikeln.

Las piezas adyacentes han sido dibujadas en algunas ilustraciones con líneas punteadas o con un rombo, indicando una nota en la página de texto donde puede encontrarse la pieza.

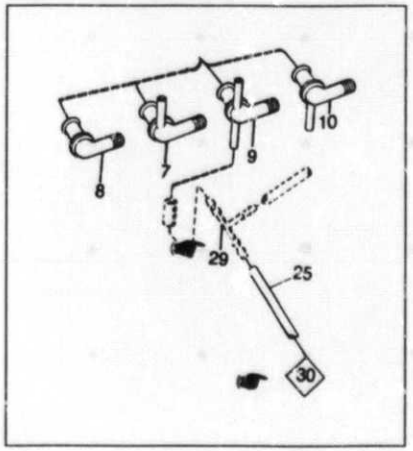


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Text page
Las páginas con texto


Text sida

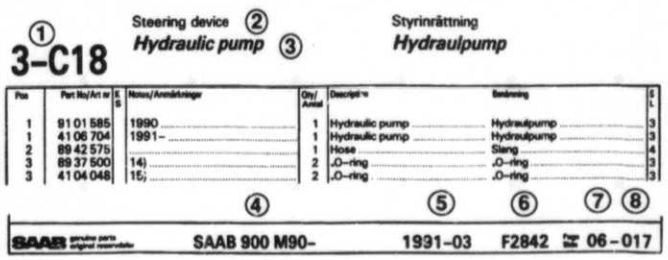

1. Microfiche coordinate for the retrievel system, 3-C18 where 3 is the serial number of the microfiche card, C is the microfiche line and 18 is the microfiche column.
2. Subgroup titel in English and Swedish.
3. Section title in English and Swedish.
4. Car model and model years included in the microfiche card.
5. Date (for internal use).
6. Illustration number (for internal use).
7. Main group.
8. Page number within main group.

1. Fichekoordinat för söksystemet, 3-C18 där 3 är fichekortets löpnummer, C är horisontell ficherad och 18 vertikal ficherad.
2. Undergruppstitel på engelska och svenska.
3. Avsnittstitel på engelska och svenska.
4. Bilmodell och årsmodeller som fichekortet täcker.
5. Datum (för internt bruk).
6. Illustrations nummer (för internt bruk).
7. Huvudgrupp.
8. Sidnummer inom huvudgruppen.

1. Coordenada de la microficha para el sistema de búsqueda, 3-C18 en la que 3 es el número de serie de la tarjeta, C es la línea de la microficha y 18 la columna de la misma.
2. Titulo del subgrupo en inglés y sueco.
3. Titulo de la sección en inglés y sueco.
4. Modelos y años de automóviles incluidos en la tarjeta.
5. Fecha (para uso interno).
6. Número de la figura (para uso interno).
7. Groupo principal.
8. Número de página dentro del grupo principal.

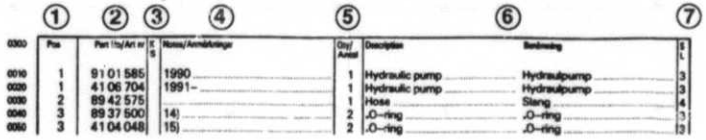

1. Item numbers for the part illustrated on the illustration page. Note that the item can be repeated.
   The item is specified in most cases with digits but digit + letter combinations can also occur.
2. Part numbers. A dot to the left of the part number indicates that the number has been added since the preceding edition.
3. An "S" in this column indicates that the part is included in a kit.
4. Comments column. Limitations and restrictions of various kinds are indicated here.
   To permit part numbers which have expired to be identified, the old numbers is written in parentheses.
5. Quantity column.
6. Names in English and Swedish. A dot in front of the name indicates that the part is included in the immediately superior article. For example: item 3 is included in item 2 and accompanies item 2 when item 2 is purchased.
7. Stock keeping level.

1. Positionsnummer på den illustrerade artikeln på bildsidan. Observera att position kan upprepas.
   Positionen anges i de flesta fall med siffror men även siffra + bokstav kan förekomma.
2. Artikelnummer. En punkt till vänster om artikelnumret visar att numret tillkommit sedan föregående utgåva.
3. Ett "S" i kolumnen markerar att artikeln ingår i en sats.
4. Anmärkningskolumn, här anges begränsningar och restriktioner av olika slag.
   För att kunna identifiera utgångna artikelnummer skrivs det gamla numret ut inom parentes.
5. Antalskolumn.
6. Benämning på engelska och svenska. Punktmarkering framför benämningen anger att artikeln ingår i närmast överordnad artikel. Ex: pos 3 ingår i pos 2 och medföljer vid köp av pos 2.
7. Lagerhållningsnivå.

1. Números de posición de la pieza presentada en la página con figura. Observar que esta pieza puede aparecer varias veces.
   La posición se indica en la mayoría de los casos con cifras aunque también pueden aparecer combinaciones alfanuméricas.
2. Números de artículo. Un punto a la izquierda del número de artículo indica que este número ha sido añadido después de la edición precedente.
3. Una "S" en la columna indica que el artículo forma parte de un juego.

4. Columna para observaciones. En esta se indican las distintas limitaciones y restricciones.
   Para poder identificar un número de artículo suprimido, los números antiguos aparecen entre paréntesis.
5. Columna de cantidad.
6. Denominaciones en inglés y sueco. La marcación punteada delante de la denominación indica que el artículo forma parte del artículo inmediatamente superior. Por ejemplo: el art. 3 forma parte del art. 2 y es incluido al comprar el art. 2.
7. Nivel de almacenamiento.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool. Labels	6-C02
10	Numerical register	6-D02

Master and group indexes

The catalogue is divided into 12 main groups. The master index which is located on the top righthand corner on each microfiche box, indicates the coordinate at which each main group begins.

Master- och gruppindex

Katalogen är indelad i 12 huvudgrupper. Masterindex, som finns i övre höger hörn på varje ficheruta, anger på vilken koordinat varje huvudgrupp börjar.

Indices principal y de groupo

El catálogo se divide en 12 grupos principales. El índice principal, situado en la esquina superior derecha de cada recuadro de la microficha, indica la coordenada de comienzo de cada grupo principal.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3	Electrical system, Instruments	2-A02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-C02
7	Suspension, Wheels	3-E02
8A	Body, external	3-F02
8B	Body, internal	4-A02
8C	Body, heating and ventilation	4-G02
8	Tools, Labels	4-I02
10	Numerical register	4-J02

The main groups are subdivided into subgroups. The group index indicates the coordinate at which the subgroups begin.

Huvudgrupperna är indelade i undergrupper. Gruppindex anger på vilken koordinat undergrupperna börjar.

Los grupos principales están divididos en subgrupos. El índice de grupo indica la coordenada de comienzo de los distintos subgrupos.

2 GROUP INDEX

Engine body	1-B10
Lubrication system	1-C16
Fuel system	1-D02
Inlet and exhaust system	1-D24
Cooling system	1-F18
Engine control	1-G18
Supercharging system	1-G20
Kits	1-H02

Numerical register
Registro numérico

Nummerregister

4-K23 *Numerical register*

Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
98 33 385	08A	089	3–H18	98 41 958	03	055	2–C08	98 67 896	088	071	4–C24	98 81 665	088	077	4–D08
98 33 476	088	093	4–D22	98 43 806	088	113	4–E18	98 67 896	088	075	4–D04	98 81 806	088	117	4–E22
98 33 484	088	093	4–D22	98 47 377	08A	089	3–H18	98 68 977	088	068	4–C12	98 81 913	08A	111	3–H16
98 33 492	088	093	4–D22	98 47 385	08A	089	3–H18	98 68 977	088	073	4–D02	98 81 921	08A	111	3–H16
98 33 500	088	093	4–D22	98 48 169	088	127	4–F08	98 68 985	088	069	4–C12	98 82 051	088	079	4–D08

On the last microfiche card there is a numerical register with coordinate reference to the page where the part number is located.
En la última tarjeta de la microficha exista un registro numérico que mediante coorde-

På sista fichekortet i katalogen finns ett nummerregister med koordinathänvisning till den sida som artikelnumret finns på.

nadas indica la página donde aparece el número de artículo.

New parts
Artículos nuevos

Nya artiklar

4-K24 *New parts*

Nya artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 69 829	03	117	2–E22	41 75 923	03	053	2–C06								
40 69 829	03	145	2–G02	41 75 949	03	085	2–D14								
40 84 935	088	013	4–A14	41 95 954	09	005	4–A06								
40 84 943	088	011	4–A12	42 83 198	06	017	3–C18								
40 84 950	088	011	4–A12	43 50 427	08C	009	4–G10								

In the end of the numerical register there is a register for additional parts since the preceding edition.
Al final del registro numárico existe un registro sobre los artículos aparecidos desde

I slutet av nummerregistret finns ett register på nytillkomna artiklar sedan föregående utgåva.
la edición precedente.

Deleted parts
Artículos suprimidos

Utgångna artiklar

4-L02 *Deleted parts*

Utgångna artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 52 717															
75 87 298															
82 43 990															
82 44 006															
84 86 318															


Last in the numerical register there is a register for parts that has been deleted since the preceding edition.
Al final del registro numérico existe en registro de los artículos suprimidos desde la edición precedente.


Sist i nummerregistret finns ett register på artiklar som utgått sedan föregående utgåva.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Colour marking spring and spring strut
Färgmärkning fjäder och fjäderben
Marcación de color resorte y brazo amuelle

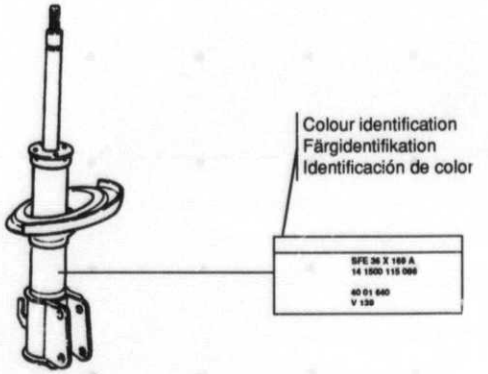


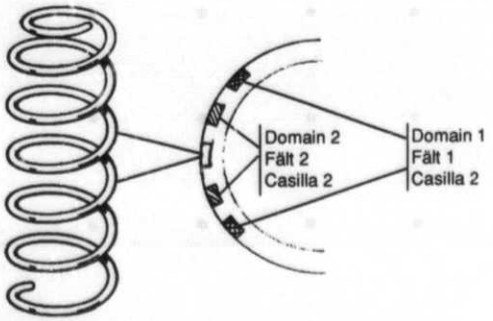


Codes marked on the VIN plate
Kodmärkning på chassinummerskylt
Marcacion de codigo en el letrero de numero de chasis

With effect from M97 the codes for certain spare parts have been marked on the VIN plate.
Från M97 har vissa reservdelar kodmärkts på chassinummerskylten.
Algunas piezas de recambio seran marcadas a partir de M97 con un codigo en el letrero de numero de chasis.

Previous appearance
Tidigare utseende
Apariencia anterior

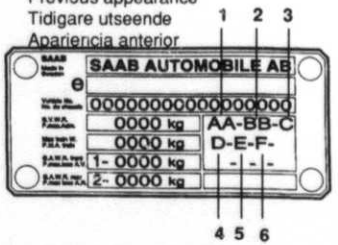

Later appearance
Senare utseende
Apariencia actual

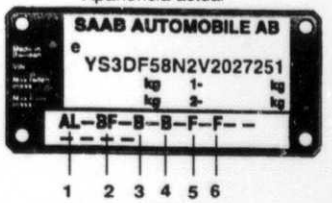

For EU-cars that doesn't have codes marked, see group 7 section "-1996"

För EU-bilar som saknar kodmärkning, se grupp 7 avsnitt "-1996"

Pos 1	Spring front	Fjäder fram
Pos 2	Spring rear	Fjäder bak
Pos 3	Anti-roll bar front	Krängningshämmare fram
Pos 4	Anti-roll bar rear	Krängningshämmare bak
Pos 5	Spring strut/insert front	Fjäderben/insats fram
Pos 6	Shock absorber rear	Stötdämpare bak

Pos 1	Resorte delantera
Pos 2	Resorte posteriore
Pos 3	Estabilizador delantera
Pos 4	Estabilizador posteriore
Pos 5	Brazo armotiguador/juego delantera
Pos 6	Armotiguador posteriore

In regard to such parts, the remarks area will show **CODE=A**, for instance

För artiklar som är kodmärkta står det i anmärkningsfältet **CODE=A** t.ex.

En el campo destinado a las abservaciones de los articulos con marcacion de codigo aparecera, p. ej., **CODE=A**

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

1-C02



Engine
Motor
Motor

TABLE OF CONTENTS

Engine suspension		
Engine suspension	2 : 9	1-C10
Engine body 4-cyl		
Cylinder head, 4-cyl	2 : 11	1-C12
Valve cover, 4-cyl	2 : 13	1-C14
Cylinder block, 4-cyl	2 : 15	1-C16
Short engine	2 : 17	1-C18
Belt tensioner, 4-cyl	2 : 21	1-C22
Transmission, 4-cyl	2 : 23	1-C24
Transmission balancer shafts, 4-cyl	2 : 25	1-D02
Crankshaft, connecting rod, piston, flywheel, 4-cyl	2 : 29	1-D06
Engine body 6-cyl		
Cylinder head, 6-cyl	2 : 33	1-D10
Valve cover, 6-cyl	2 : 35	1-D12
Cylinder block, 6-cyl	2 : 37	1-D14
Short engine	2 : 17	1-C18
Belt tensioner, 6-cyl	2 : 39	1-D16
Transmission, 6-cyl	2 : 41	1-D18
Crankshaft, connecting rod, piston, 6-cyl	2 : 43	1-D20
Flywheel, companion flange, 6-cyl	2 : 45	1-D22
Lubrication system		
Oil sump, oil pump, oil filter, 4-cyl	2 : 47	1-D24
Oil sump, oil filter, 6-cyl	2 : 49	1-E02
Oil pump, 6-cyl	2 : 51	1-E04
Crank case ventilation, 4-cyl	2 : 53	1-E06
Crank case ventilation, 6-cyl	2 : 55	1-E08
Oil pipes, B204L	2 : 57	1-E10
Fuel system		
Air cleaner, 4-cyl	2 : 59	1-E12
Air cleaner, 6-cyl	2 : 61	1-E14
Fuel tank	2 : 63	1-E16
Fuel pipe, fuel filter	2 : 67	1-E20
Fuel pump	2 : 69	1-E22
Fuel rail, 4-cyl	2 : 71	1-E24
Fuel rail, 6-cyl	2 : 73	1-F02
Engine control module, MOTRONIC	2 : 75	1-F04
Engine control module, TRIONIC	2 : 77	1-F06
Evaporative loss control device, (ELCD)	2 : 79	1-F08
Inlet and exhaust system		
Inlet manifold, 4-cyl	2 : 81	1-F10
Inlet manifold, 6-cyl	2 : 83	1-F12
Throttle body 4-cyl	2 : 85	1-F14
Throttle body 6-cyl	2 : 87	1-F16
IAC, 4-cyl	2 : 89	1-F18
IAC, 6-cyl	2 : 91	1-F20
Exhaust manifold, 4-cyl	2 : 93	1-F22
Exhaust manifold, 6-cyl	2 : 95	1-F24
SAI, Air pump	2 : 97	1-G02
SAI, Shut-off valve	2 : 99	1-G04
SAI, Non-return valve, 4-cyl	2 : 101	1-G06
SAI, Non-return valve, 6-cyl	2 : 103	1-G08
Heated Oxygen sensor, 4-cyl	2 : 105	1-G10
Heated Oxygen sensor, 6-cyl	2 : 107	1-G12
Exhaust system, B204I, B206I, B234I, -1996	2 : 109	1-G14
Exhaust system, B204I, B234I, 1997-	2 : 113	1-G18
Exhaust system, B204L	2 : 115	1-G20
Exhaust system, B258I, -1995	2 : 117	1-G22
Exhaust system, B258I, 1996-	2 : 119	1-G24
Exhaust system, B258I, 1996-, US, CA	2 : 121	1-H02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-C03

Cooling system
- Cooling system, 4-cyl — 2 : 123 — 1-H04
- Cooling system, 6-cyl — 2 : 127 — 1-H08
- Coolant pipe, B204L — 2 : 131 — 1-H12
- Fan motor — 2 : 133 — 1-H14
- Charge cooler — 2 : 135 — 1-H16
- Oil cooler, engine, 6-cyl — 2 : 137 — 1-H18
- Air oil cooler, engine — 2 : 139 — 1-H20
- Air oil cooler, automatic transmission — 2 : 141 — 1-H22
- Coolant pump, 4-cyl — 2 : 143 — 1-H24
- Coolant pump, 6-cyl — 2 : 145 — 1-I02
- Thermostat, 4-cyl — 2 : 147 — 1-I04
- Thermostat, 6-cyl — 2 : 149 — 1-I06

Engine control
- Accelerator control — 2 : 151 — 1-I08

Supercharging system
- Turbocharger — 2 : 153 — 1-I10
- APC-system — 2 : 155 — 1-I12

Engine bay cover
- Engine bay cover — 2 : 157 — 1-I14

Kits
- Engine — 2 : 159 — 1-I16

Motor

1-C04

0042

0010 **INNEHÅLLSFÖRTECKNING**

0020

0030 **Motorupphängning**
- 0040 Motorupphängning — 2 : 9 — 1-C10

0050 **Motorkropp 4-cyl**
- 0060 Cylinderhuvud 4-cyl — 2 : 11 — 1-C12
- 0070 Ventilkåpa 4-cyl — 2 : 13 — 1-C14
- 0080 Cylinderblock 4-cyl — 2 : 15 — 1-C16
- 0090 Grundmotor — 2 : 17 — 1-C18
- 0100 Remspännare 4-cyl — 2 : 21 — 1-C22
- 0110 Transmission 4-cyl — 2 : 23 — 1-C24
- 0120 Transmission, balansaxlar, 4-cyl — 2 : 25 — 1-D02
- 0130 Vevaxel, vevstake, kolv, 4-cyl — 2 : 29 — 1-D06

0140 **Motorkropp 6-cyl**
- 0150 Cylinderhuvud 6-cyl — 2 : 33 — 1-D10
- 0160 Ventilkåpa 6-cyl — 2 : 35 — 1-D12
- 0170 Cylinderblock 6-cyl — 2 : 37 — 1-D14
- 0180 Grundmotor — 2 : 17 — 1-C18
- 0190 Remspännare 6-cyl — 2 : 39 — 1-D16
- 0200 Transmission 6-cyl — 2 : 41 — 1-D18
- 0210 Vevaxel, vevstake, kolv, 6-cyl — 2 : 43 — 1-D20
- 0220 Svänghjul, medbringare, 6-cyl — 2 : 45 — 1-D22

0230 **Smörjsystem**
- 0240 Oljesump, oljepump, oljefilter, 4-cyl — 2 : 47 — 1-D24
- 0250 Oljesump, oljefilter, 6-cyl — 2 : 49 — 1-E02
- 0260 Oljepump, 6-cyl — 2 : 51 — 1-E04
- 0270 Vevhusventilation 4-cyl — 2 : 53 — 1-E06
- 0280 Vevhusventilation 6-cyl — 2 : 55 — 1-E08
- 0290 Oljerör, B204L — 2 : 57 — 1-E10

0300 **Bränslesystem**
- 0310 Luftrenare, 4-cyl — 2 : 59 — 1-E12
- 0320 Luftrenare, 6-cyl — 2 : 61 — 1-E14
- 0330 Bränsletank — 2 : 63 — 1-E16
- 0340 Bränsleledning, Bränslefilter — 2 : 67 — 1-E20
- 0350 Bränslepump — 2 : 69 — 1-E22
- 0360 Bränslefördelningsrör 4-cyl — 2 : 71 — 1-E24
- 0370 Bränslefördelningsrör 6-cyl — 2 : 73 — 1-F02
- 0380 Styrdon, MOTRONIC — 2 : 75 — 1-F04
- 0390 Styrdon, TRIONIC — 2 : 77 — 1-F06
- 0400 ELCD — 2 : 79 — 1-F08

0410 **Inlopps- och avgassystem**
- 0420 Inloppsrör 4-cyl — 2 : 81 — 1-F10
- 0430 Inloppsrör 6-cyl — 2 : 83 — 1-F12
- 0440 Spjällhus 4-cyl — 2 : 85 — 1-F14
- 0450 Spjällhus 6-cyl — 2 : 87 — 1-F16
- 0460 Automatisk tomgångsreglering 4-cyl — 2 : 89 — 1-F18
- 0470 Automatisk tomgångsreglering 6-cyl — 2 : 91 — 1-F20
- 0480 Avgassamlare 4-cyl — 2 : 93 — 1-F22
- 0490 Avgassamlare 6-cyl — 2 : 95 — 1-F24
- 0500 SAI, Luftpump — 2 : 97 — 1-G02
- 0510 SAI, Avstängninsventil, Vacumventil — 2 : 99 — 1-G04
- 0520 SAI, Backventil, Rör, 4-cyl — 2 : 101 — 1-G06
- 0530 SAI, Backventil, Rör, 6-cyl — 2 : 103 — 1-G08
- 0540 Syresensor 4-cyl — 2 : 105 — 1-G10
- 0550 Syresensor 6-cyl — 2 : 107 — 1-G12
- 0560 Avgassystem, B204I, B206I, B234I, -1996 — 2 : 109 — 1-G14
- 0570 Avgassystem, B204I, B234I, 1997- — 2 : 113 — 1-G18
- 0580 Avgassystem, B204L — 2 : 115 — 1-G20
- 0590 Avgassystem, B258I, -1995 — 2 : 117 — 1-G22
- 0600 Avgassystem, B258I, 1996- — 2 : 119 — 1-G24
- 0610 Avgassystem, B258I, 1996-, US, CA — 2 : 121 — 1-H02

MASTER INDEX

- 0 General — 1-A02
- 2 Engine — 1-C02
- 3A Electrical, general — 2-A02
- 3B Electrical, contact housing — 2-J02,3-A02
- 4 Transmission — 4-A02
- 5 Brakes — 4-D02
- 6 Front assembly, Steering — 4-F02
- 7 Suspension, Wheels — 4-G02
- 8A Body, external — 5-A02
- 8B Body, internal — 5-H02
- 8C Body, heating and ventilation — 6-A02
- 8D Tool, Labels — 6-C02
- 10 Numerical register — 6-D02

2 GROUP INDEX

- Engine suspension — 1-C10
- Engine body 4-cyl — 1-C12
- Engine body 6-cyl — 1-D10
- Lubrication system — 1-D24
- Fuel system — 1-E12
- Inlet and exhaust system — 1-F10
- Cooling system — 1-H04
- Engine control — 1-I08
- Supercharging system — 1-I10
- Engine bay cover — 1-I14
- Kits — 1-I16

1-C05

Kylsystem
- Kylsystem 4-cyl — 2 : 123 — 1-H04
- Kylsystem 6-cyl — 2 : 127 — 1-H08
- Kylvattenrör, B204L — 2 : 131 — 1-H12
- Fläktmotor — 2 : 133 — 1-H14
- Laddluftkylare — 2 : 135 — 1-H16
- Oljekyl, motor 6-cyl — 2 : 137 — 1-H18
- Luftoljekylare, motor — 2 : 139 — 1-H20
- Luftoljekylare, automatisk växellåda — 2 : 141 — 1-H22
- Kylvätskepump 4-cyl. — 2 : 143 — 1-H24
- Kylvätskepump 6-cyl. — 2 : 145 — 1-I02
- Termostat, 4-cyl — 2 : 147 — 1-I04
- Termostat, 6-cyl — 2 : 149 — 1-I06

Motorreglage
- Gasreglage — 2 : 151 — 1-I08

Överladdningssystem
- Turbokompressor — 2 : 153 — 1-I10
- APC-system — 2 : 155 — 1-I12

Motorrumsavtäckning
- Motorrumsavtäckning — 2 : 157 — 1-I14

Satser
- Motor — 2 : 159 — 1-I16

1-C06

SUMARIO

Soportes del motor
- Soportes del motor — 2 : 9 — 1-C10

Cuerpo del motor 4 sil
- Caluta 4 sil — 2 : 11 — 1-C12
- Cubierta valvula 4 sil — 2 : 13 — 1-C14
- Bloque de cilindros 4 sil — 2 : 15 — 1-C16
- Motor de base — 2 : 17 — 1-C18
- Tensor correa 4 sil — 2 : 21 — 1-C22
- Distribucion 4 sil — 2 : 23 — 1-C24
- Distribucion, ejes equilibradores 4 sil — 2 : 25 — 1-D02
- Ciguenal, bielas, pistones, volante 4 sil — 2 : 29 — 1-D06

Cuerpo del motor 6 sil
- Caluta 6 sil — 2 : 33 — 1-D10
- Cubierta valvula 6 sil — 2 : 35 — 1-D12
- Bloque de cilindros 6 sil — 2 : 37 — 1-D14
- Motor de base — 2 : 17 — 1-C18
- Tensor correa 6 sil — 2 : 39 — 1-D16
- Distribucion 6 sil — 2 : 41 — 1-D18
- Ciguenal, bielas, pistones 6 sil — 2 : 43 — 1-D20
- Volante, brida 6 sil — 2 : 45 — 1-D22

Sistema de engrase
- Carter aciete, filter, bomba aceite, 4 sil — 2 : 47 — 1-D24
- Carter aciete, filter, 6 sil — 2 : 49 — 1-E02
- Bomba aceite, 6 sil — 2 : 51 — 1-E04
- Vent. carter del ciguenal 4 sil — 2 : 53 — 1-E06
- Vent. carter del ciguenal 6 sil — 2 : 55 — 1-E08
- Tubo aceite, B204L — 2 : 57 — 1-E10

Sistema de combustible
- Filtro aire, 4 sil — 2 : 59 — 1-E12
- Filtro aire, 6 sil — 2 : 61 — 1-E14
- Disposito de combustible — 2 : 63 — 1-E16
- Conducto combustible, filtro combustible — 2 : 67 — 1-E20
- Bomba combustible — 2 : 69 — 1-E22
- Tubo distrib. combustible, 4 sil — 2 : 71 — 1-E24
- Tubo distrib. combustible, 6 sil — 2 : 73 — 1-F02
- Disp. mando, MOTRONIC — 2 : 75 — 1-F04
- Disp. mando, TRIONIC — 2 : 77 — 1-F06
- ELCD — 2 : 79 — 1-F08

Sistema de admision y de escape
- Colector de admision, 4 sil — 2 : 81 — 1-F10
- Colector de admision, 6 sil — 2 : 83 — 1-F12
- Caja mariposa, 4 sil — 2 : 85 — 1-F14
- Caja mariposa, 6 sil — 2 : 87 — 1-F16
- IAC, 4 sil — 2 : 89 — 1-F18
- IAC, 6 sil — 2 : 91 — 1-F20
- Colector de escape 4 sil — 2 : 93 — 1-F22
- Colector de escape 6 sil — 2 : 95 — 1-F24
- SAI, bomba aire — 2 : 97 — 1-G02
- SAI, valvula cierre — 2 : 99 — 1-G04
- SAI, valvula retension, 4 sil — 2 : 101 — 1-G06
- SAi, valvula retension, 6 sil — 2 : 103 — 1-G08
- Sensor de oxigeno, 4 sil — 2 : 105 — 1-G10
- Sensor de oxigeno, 6 sil — 2 : 107 — 1-G12
- Sistema de escape, B204I, B206I, B234I, -1996 — 2 : 109 — 1-G14
- Sistema de escape, B204I, B234I, 1997- — 2 : 113 — 1-G18
- Sistema de escape, B204L — 2 : 115 — 1-G20
- Sistema de escape, B258I, -1995 — 2 : 117 — 1-G22
- Sistema de escape, B258I, 1996- — 2 : 119 — 1-G24
- Sistema de escape, B258I, 1996-, US, CA — 2 : 121 — 1-H02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-C07

042


450	**Sistema de refrigeracion**		
460	Sistema de refrigeracion, 4 sil	2 : 123	1-H04
470	Sistema de refrigeracion, 6 sil	2 : 127	1-H08
480	Tubo refrigeracion, B204L	2 : 131	1-H12
490	Motor ventilador	2 : 133	1-H14
500	Radiador d'air d'alimentacion	2 : 135	1-H16
510	Enfriador aceite, 6 sil	2 : 137	1-H18
520	Radiador de aceite a aire, motor	2 : 139	1-H20
530	Radiador de aceite a aire, caja de cambios automatica	2 : 141	1-H22
540	Bomba agua, 4 sil	2 : 143	1-H24
550	Bomba agua, 6 sil	2 : 145	1-I02
560	Termostato, 4 sil	2 : 147	1-I04
570	Termostato, 6 sil	2 : 149	1-I06
580	**Mandos del motor**		
590	Mando de acelerador	2 : 151	1-I08
600	**Sistema de sobrealimentacion**		
610	Turbocompresor	2 : 153	1-I10
620	APC	2 : 155	1-I12
630	**Recubrim. compart. motor**		
640	Recubrim. compart. motor	2 : 157	1-I14
650	**Juegos completos**		
660	Motor	2 : 159	1-I16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

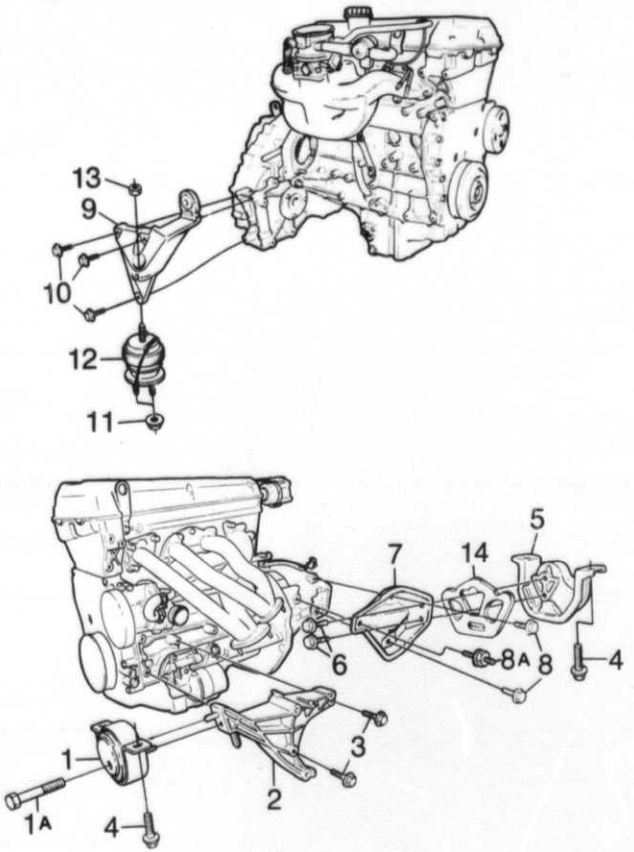

F8611 AAC94

Engine body

1-C10

Engine suspension

Motorkropp

Motorupphängning

Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0100								
0010	1	42 83 743		B204I, B206I	1	Vibration damper	Vibrationsdämpare	3
0020				1996-, 4-CYL, A	1			
0030	1	42 83 750		-1995	1	Vibration damper	Vibrationsdämpare	3
0040	1	42 83 750		1996-, 4-CYL, M	1	Vibration damper	Vibrationsdämpare	3
0050				1996-1997, 6-CYL	1			
0060	1A	42 37 491			1	Screw	Skruv	5
0070	2	43 60 475		-1997, B258I	1	Engine anchorage	Motorfäste	4
0080	2	* 46 23 880		1995-1997, B258I ME	1	Engine anchorage	Motorfäste	4
0090	2	42 83 602			1	Engine anchorage	Motorfäste	4
0100	3	*79 82 549*		NLS - USE 7982085, 8073108	2	Screw	Skruv	5
0110	4	43 46 300		1994-	4	Flange screw	Flänsskruv	5
0120	4	40 87 888		1995-	4	Flange screw	Flänsskruv	5
0130	5	43 56 176		M	1	Vibration damper	Vibrationsdämpare	3
0140	5	43 56 184		A	1	Vibration damper	Vibrationsdämpare	3
0150	5	47 26 766		1996, 4-CYL, A, PA	1	Vibration damper	Vibrationsdämpare	3
0160	5	* 46 23 146		1997-, 4-CYL, A, PA	1	Vibration damper	Vibrationsdämpare	3
0170	6	79 78 281			2	Screw	Skruv	5
0180	7	43 56 150		M	1	Engine anchorage	Motorfäste	4
0190	7	43 56 168		A	1	Engine anchorage	Motorfäste	4
0200	8	79 78 265		M	2	Hexagon screw	Sexkantsskruv	5
0210	8	79 78 281		A	2	Screw	Skruv	5
0220	8A	44 10 734			1	Ground screw	Jordskruv	5
0230	9	42 83 685		-1996, M	1	Engine anchorage	Motorfäste	4
0240	9	47 26 782		1997-, M	1	Engine anchorage	Motorfäste	4
0250	9	*43 95 281*		142) A NLS - USE 4728291	1	Engine anchorage	Motorfäste	4
0260	9	47 28 291		143) A	1	Engine anchorage	Motorfäste	4
0270	10	79 78 307			3	Screw	Skruv	5
0280	11	79 69 306			2	Lock nut	Låsmutter	5
0290	12	42 83 875		B204I, B206I	1	Vibration damper	Vibrationsdämpare	3
0300				1996-, 4-CYL, A	1			
0310	12	42 83 891		-1995, B204L,B234I,B258I	1	Vibration damper	Vibrationsdämpare	3
0320	12	42 83 891		1996-, 4-CYL, M	1	Vibration damper	Vibrationsdämpare	3
0730				1996-1997, 6-CYL	1			
0340	13	79 84 776			1	Nut	Mutter	5
0350	14	43 95 489			1	Rubber plate	Gummiplatta	

142. Ch. -V2026227, -V7005992
143. Ch. V2026228-, V7005993-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-C12

Engine body
Cylinder head
4-cylinder

Motorkropp
Cylinderhuvud
4-cylindrig

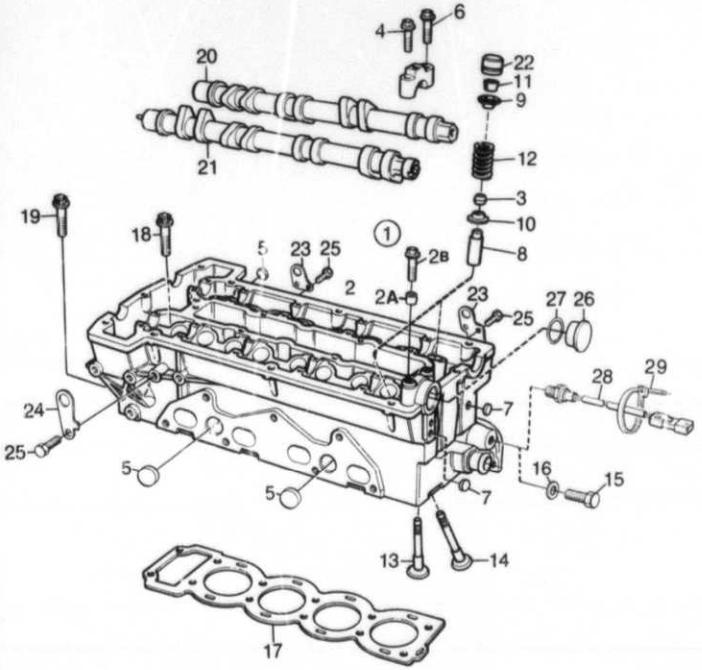

Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
1	91 85 471		7),1994-	1	Cylinder head	Cylinderhuvud	5
1	*91 48 693*		7,112),1995- NLS – USE 9182205, 9182304	1	Cylinder head	Cylinderhuvud	5
1	91 82 304		7,113)	1	Cylinder head	Cylinderhuvud	5
2	91 47 927		112)	1	.Cylinder head	.Cylinderhuvud	5
2	91 85 208		113)	1	.Cylinder head	.Cylinderhuvud	5
2A	75 04 566			2	..Guide sleeve	..Styrhylsa	
2B	75 04 178			2	..Screw	..Skruv	5
3	75 00 713			16	..Seal	..Tätning	3
4	75 85 847			8	..Screw	..Skruv	5
5	75 88 320			2	..Sealing washer	..Tätningsbricka	3
6	*79 75 527*		1994 NLS – USE 4087805	12	..Screw	..Skruv	5
6	40 87 805		1995-	12	..Screw	..Skruv	5
7	81 23 143		-1997	3	..Plug	..Plugg	3
7	• 49 40 466		1998-	3	..Plug	..Plugg	3
8	91 66 240		-1996	16	..Valve guide	..Ventilstyrning	4
8	91 85 612		1997-	16	..Valve guide	..Ventilstyrning	4
8	91 66 265		36),-1996	X	Valve guide	Ventilstyrning	4
9	75 01 349			16	.Washer	.Bricka	4
10	75 05 134			16	.Washer	.Bricka	4
11	75 15 547			32	.Valve cone	.Knaster	2
12	91 29 651			16	.Spring	.Fjäder	3
13	91 65 598		39), (9136250)	8	.Exhaust valve	.Avgasventil	2
14	91 65 580		38)	8	.Inlet valve	.Inloppsventil	3
15	*81 23 721*		NLS – USE 7563042	1	.Plug	.Propp	5
16	*83 26 712*		NLS – USE 4161162	1	.Seal	.Tätning	5
17	*91 44 528*		83) NLS – USE 9179235	1	Gasket	Packning	2
17	91 79 235		84)-1997	1	Gasket	Packning	2
17	• 91 85 695		1998-	1	Gasket	Packning	2
18	91 29 909		-1996	10	Screw	Skruv	5
18	91 85 307		1997-	10	Screw	Skruv	5
19	79 70 015			2	Screw	Skruv	5
20	91 45 632		38),B206I,B204I,B204L	1	Camshaft	Kamaxel	5
20	91 45 657		38),B234I	1	Camshaft	Kamaxel	5
21	91 45 640		39),B206I,B204I,B204L	1	Camshaft	Kamaxel	5
21	91 45 665		39),B234I	1	Camshaft	Kamaxel	5
22	*91 34 420*		-1996 NLS – USE 9169566	16	Tappet	Ventillyftare	3
22	91 69 566		1997-	16	Valve lifter	Ventiltryckare	3
23	91 37 464		-1996	2	Lifting eye	Lyftögla	6
23	91 74 913		1997-	2	Lifting eye	Lyftögla	6
24	91 37 472			1	Lifting eye	Lyftögla	6
25	80 59 776		-1995	5	Screw	Skruv	5
25	79 78 190		1996-	5	Screw	Skruv	5
26	91 69 235		-1995, B204L	1	Plug	Plugg	2
26	91 35 211		1996-, B204L	1	Sealing plug	Tätningsplugg	5
27	*75 19 143*		B204L NLS – USE 9176470	1	O-ring	O-ring	6
28	*42 79 084*		-1995, 1/8" NLS – USE 9182270	1	EC temperature sensor	Temperaturgivare	2
28	91 82 270		1996-,112), 1/8"	1	EC temperature sensor	Temperaturgivare	2
28	91 82 205		113), M12	1	EC temperature sensor	Temperaturgivare	2
29	79 71 872		1998-	1	Tensioning band	Spännband	5
	88 22 033		See page 2-159, 1-I16	X	Gasket kit	Sotningssats	2


7. Also available as exchange unit. Finns även som utbytesenhet.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.
83. Engine -T007433
84. Engine T007434-
112. Engine -V002172
113. Engine V002173-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

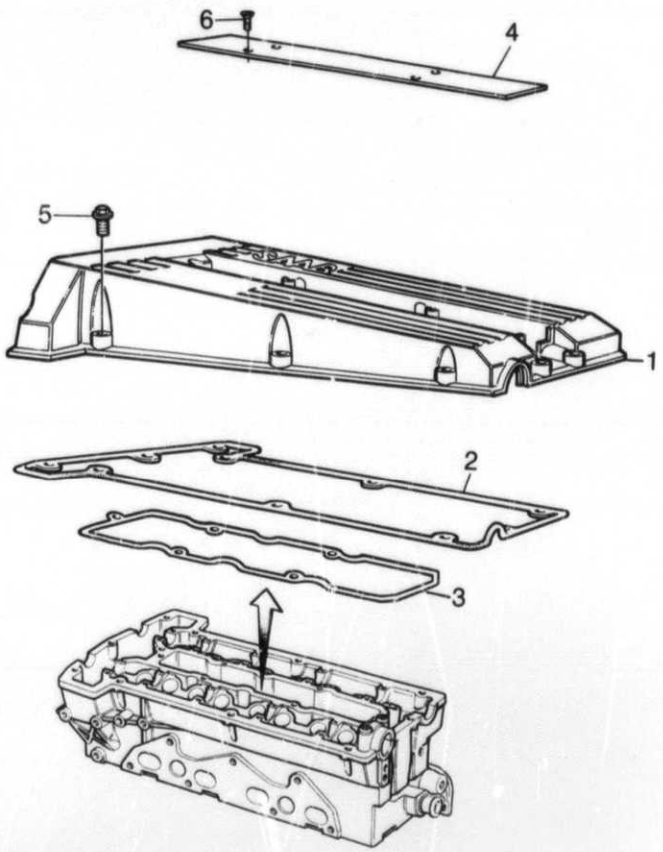

F5045 AAC94

Engine body

1-C14 Valve cover 4-cylinder

Motorkropp

Ventilkåpa 4-cylindrig


0190	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	*91 48 024*		-1996, B206, B204 NLS – USE 9181371	1	Valve cover	Ventilkåpa	5
0020	1	*91 82 759*		1997, B204 NLS – USE 9181371	1	Valve cover	Ventilkåpa	5
0030	1	*91 43 157*		-1996, B234 NLS – USE 9181371	1	Valve cover	Ventilkåpa	5
0040	1	*91 82 742*		1997, B234 NLS – USE 9181371	1	Valve cover	Ventilkåpa	5
0050	1	* 91 81 371		1998-,	1	Valve cover	Ventilkåpa	5
0060	2	91 33 026	S		1	Gasket	Packning	1
0070	3	91 33 034	S		1	Gasket	Packning	1
0080	4	91 48 586			1	Cover	Lock	3
0090	5	91 45 756			16	Screw	Skruv	5
0100	6	91 45 764		1994	4	Screw	Skruv	5
0110	6	40 87 920		1995-	4	Screw	Skruv	5
0120								
0130		88 22 041		See page 2-159, 1-I16	X	Gasket kit	Packningsats	1

MASTER INDEX

0	General	1-AC2
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

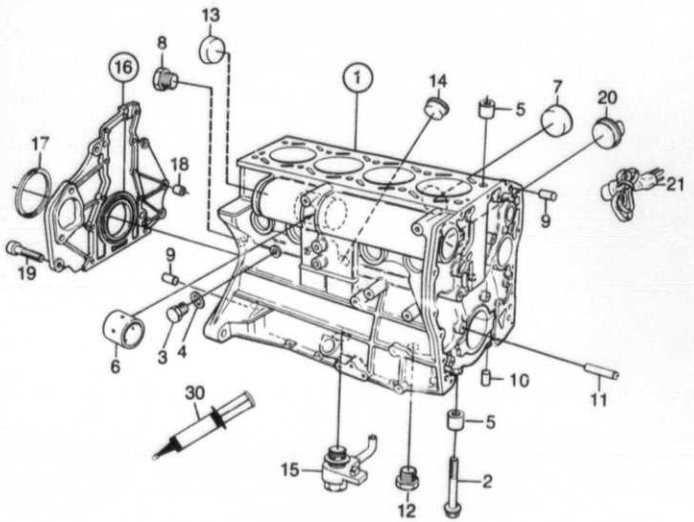

F8533 AAC94

1-C16

Engine body
Cylinder block
4-cylinder

Motorkropp
Cylinderblock
4-cylindrig

0205	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 39 262		159) B206I	1	Cylinder block	Cylinderblock	6
0020	1	91 74 228		159) B204I	1	Cylinder block	Cylinderblock	6
0030	1	91 39 312		159) B234I	1	Cylinder block	Cylinderblock	6
0040	1	* 91 86 610		160) B234I,B204I	1	Cylinder block	Cylinderblock	6
0050	1	91 39 304		159) B204L	1	Cylinder block	Cylinderblock	6
0060	1	* 91 86 602		160) B204L,B204E	1	Cylinder block	Cylinderblock	6
0070	2	91 28 687			10	.Screw	.Skruv	5
0080	3	*81 23 721*		NLS -- USE 7563042	1	.Plug	.Propp	5
0090	4	81 24 141			1	.Seal	.Tätning	5
0100	5	83 46 470			5	.Guide	.Styrning	
0110	6	75 88 684			2	.Bushing	.Bussning	5
0120	7	79 85 120			7	.Sealing washer	.Tätningsbricka	3
0130	8	83 48 047			1	.Plug	.Propp	5
0140	9	75 85 052			4	.Guide	.Styrning	5
0150	10	79 49 548			5	.Pin	.Pinne	5
0160	11	79 50 033		B206I	1	.Pin	.Pinne	5
0170	11	79 50 066			1	.Pin	.Pinne	5
0180	12	91 15 049			4	.Plug	.Propp	5
0190	13	81 23 259			2	.Sealing washer	.Tätningsbricka	3
0200	14	81 23 218			1	.Sealing washer	.Tätningsbricka	3
0210	15	91 67 677		B204L,B234I	4	.Piston cooling jet	.Kolvkylningsmunstycke	5
0220	16	91 38 470		-1996	1	Plate	Platta	6
0230	16	91 74 194		1997-	1	Plate	Platta	6
0240	17	*87 87 764*		59) NLS -- USE 9175902	1	.Seal	.Tätning	2
0250	17	91 75 902		60), -1996	1	.Seal	.Tätning	2
0260	17	91 74 202		1997-	1	.Seal	.Tätning	2
0270	18	91 29 800			2	.Guide sleeve	.Styrhylsa	
0280	19	40 87 235		-1996	12	Screw	Skruv	5
0290	19	79 78 109		1997-	12	Screw	Skruv	5
0300	20	47 25 883		CA	1	Engine heater	Motorvärmare	
0310	21	43 97 311		CA	1	Extension cable	Anslutningskabel	
0320	30	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

59. Engine -S026893.
60. Engine S026894-.
159. Engine -W002470.
160. Engine W002471-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-C18

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0225							
0010	*91 69 590*		7), B206I NLS	X	Engine	Motor	5
0020	91 76 124		7), -1997, B204I	X	Engine	Motor	5
0030	• 91 88 491		7), 1998-, B204I	X	Engine	Motor	5
0040	• 91 88 517		7), 1998-, B234I	X	Engine	Motor	5
0050	*91 69 608*		7), -1997, B204L NLS - USE 9188509	X	Engine	Motor	5
0060	• 91 88 509		7), 1998-, B204L	X	Engine	Motor	5
0070	88 22 082		7), 1994, B258I	X	Engine	Motor	5
0080	47 70 137		7), 1995-1997, B258I	X	Engine	Motor	5
0090							
0100			4-CYL, 6-CYL		.Cylinder block	.Cylinderblock	
0110			4-CYL, 6-CYL		.Crankshaft	.Vevaxel	
0120			4-CYL, 6-CYL		.Connecting rod	.Vevstake	
0130			4-CYL, 6-CYL		.Piston	.Kolv	
0140			4-CYL		.Timing gear casing	.Transmissionskåpa	
0150			4-CYL		.Transmission	.Transmission	
0160			4-CYL		.Coolant pump	.Kylvätskepump	
0170			4-CYL		.Oil pump	.Oljepump	
0180			4-CYL		.Flywheel housing	.Svänghjulskåpa	
0190							
0200							
0210	*91 73 709*		1995, B204I, M NLS	X	Engine	Motor	
0220	*91 77 445*		1996, B204I, M NLS	X	Engine	Motor	
0230	91 80 720		1997, B204I, M	X	Engine	Motor	
0240	91 83 104		1998-, B204I, M	X	Engine	Motor	
0250	*91 73 717*		1995, B204I, A NLS	X	Engine	Motor	
0260	*91 77 452*		1996, B204I, A NLS	X	Engine	Motor	
0270	91 80 738		1997, B204I, A	X	Engine	Motor	
0280	91 83 112		1998-, B204I, A	X	Engine	Motor	
0290							
0300	*91 69 780*		1995, B204L, M NLS	X	Engine	Motor	
0310	91 77 460		1996-,95), B204L,M,US,CA	X	Engine	Motor	
0320	91 79 862		96),-1996, B204L,M,US,CA	X	Engine	Motor	
0330	*91 80 779*		1997, B204L, M, US, CA NLS	X	Engine	Motor	
0340	91 83 229		1998-, B204L, M, US, CA	X	Engine	Motor	
0350	*91 69 798*		1995, B204L, A NLS	X	Engine	Motor	
0360	91 77 478		1996-,95), B204L,A,US,CA	X	Engine	Motor	
0370	91 79 870		96),-1996, B204L,A,US,CA	X	Engine	Motor	
0380	91 80 787		1997, B204L, A, US, CA	X	Engine	Motor	
0390	91 83 237		1998-, B204L, A, US, CA	X	Engine	Motor	
0400	*91 69 806*		1995, B204L, ACS NLS	X	Engine	Motor	
0410							
0420	*91 69 814*		1995,24), B204L, M NLS	X	Engine	Motor	
0430	91 79 789		1996,24), B204L, M	X	Engine	Motor	
0440	91 80 746		1997,24), B204L, M	X	Engine	Motor	
0450	91 83 187		1998-,24), B204L, M	X	Engine	Motor	
0460	*91 69 822*		1995,24), B204L, A NLS	X	Engine	Motor	
0470	91 79 797		1996,24), B204L, A	X	Engine	Motor	
0480	91 80 753		1997,24), B204L, A	X	Engine	Motor	
0490	91 83 203		1998-,24), B204L, A	X	Engine	Motor	
0500	*91 69 830*		1995,24), B204L, ACS NLS	X	Engine	Motor	
0510	91 79 805		1996,24), B204L, ACS	X	Engine	Motor	
0520	91 80 761		1997,24), B204L, ACS	X	Engine	Motor	
0530	91 83 195		1998-,24), B204L, ACS	X	Engine	Motor	
0540							
0550	*91 69 [illegible]*		1995, B234I, M NLS	X	Engine	Motor	
0560	91 77 [illegible]		1996, B234I, M	X	Engine	Motor	
0570	91 80 795		1997, B234I, M	X	Engine	Motor	

7. Also available as exchange unit. Finns även som utbytesenhet.
24. For cars with intake air heat plate. För bilar med värmeplatta.
95. Ch. -T2010420, -T7002053
96. Ch. T2010421-, T7002054-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-C20

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580		91 83 120		1998-, B234I, M	X	Engine	Motor	
0590		*91 69 855*		1995, B234I, A NLS	X	Engine	Motor	
0600		91 77 528		1996, B234I, A	X	Engine	Motor	
0610		91 80 803		1997, B234I, A	X	Engine	Motor	
0620		91 83 138		1998-, B234I, A	X	Engine	Motor	
0630		*91 69 863*		1995,8), B234I, M NLS	X	Engine	Motor	
0640		91 77 536		1996,8), B234I, M	X	Engine	Motor	
0650		91 80 811		1997,8), B234I, M	X	Engine	Motor	
0660		91 83 146		1998-,8), B234I, M	X	Engine	Motor	
0670		*91 69 871*		1995,8), B234I, A NLS	X	Engine	Motor	
0680		91 77 544		1996,8), B234I, A	X	Engine	Motor	
0690		91 80 829		1997,8), B234I, A	X	Engine	Motor	
0700		91 83 153		1998-,8), B234I, A	X	Engine	Motor	
0710		*91 69 889*		1995, B234I, SAI, M NLS	X	Engine	Motor	
0720		91 77 551		1996, B234I, SAI, M	X	Engine	Motor	
0730		*91 77 577*		1996, B234I,SAI,M,US,CA NLS	X	Engine	Motor	
0740		91 80 993		1997, B234I, M, US, CA	X	Engine	Motor	
0750		91 83 161		1998-, B234I, M, US, CA	X	Engine	Motor	
0760		*91 69 897*		1995, B234I, SAI, A NLS	X	Engine	Motor	
0770		91 77 569		1996, B234I, SAI, A	X	Engine	Motor	
0780		91 77 585		1996, B234I,SAI,A,US,CA	X	Engine	Motor	
0790		91 81 009		1997, B234I, A, US, CA	X	Engine	Motor	
0800		91 83 179		1998-, B234I, A, US, CA	X	Engine	Motor	
0810								
0820		*44 45 276*		1995, B258I, M NLS	X	Engine	Motor	
0830		*46 21 488*		1996, B258I, M NLS	X	Engine	Motor	
0840		47 27 822		1997, B258I, M	X	Engine	Motor	
0850		*44 45 284*		1995, B258I, A NLS	X	Engine	Motor	
0860		46 21 496		1996, B258I, A	X	Engine	Motor	
0870		47 27 830		1997, B258I, A	X	Engine	Motor	
0880		*44 45 292*		1995, B258I, SAI, M NLS	X	Engine	Motor	
0890		*46 21 504*		1996, B258I, SAI, M NLS	X	Engine	Motor	
0900		46 21 520		1996, B258I,SAI,M,US,CA	X	Engine	Motor	8
0910		*44 45 300*		1995, B258I, SAI, A NLS	X	Engine	Motor	
0920		46 21 538		1996, B258I,SAI,A,US,CA	X	Engine	Motor	
0930		47 27 855		1997, B258I,SAI,A,US,CA	X	Engine	Motor	
0940								
0950						.Cylinder block	.Cylinderblock	
0960						.Crankshaft	.Vevaxel	
0970						.Connecting rod	.Vevstake	
0980						.Piston	.Kolv	
0990						.Timing gear casing	.Transmissionskåpa	
1000						.Transmission	.Transmission	
1010						.Coolant pump	.Kylvätskepump	
1020						.Flywheel housing	.Svänghjulskåpa	
1030						.Cylinder head	.Cylinderhuvud	
1040						.Valve cover	.Ventilkåpa	
1050						.Sump	.Oljesump	
1060						.Flywheel	.Svänghjul	
1070						.Vibration damper	.Svängningsdämpare	
1080						.Camshaft	.Kamaxel	
1090						.Intake manifold	.Inloppsrör	
1100						.Exhaust manifold	.Avgassamlare	
1110						.Oil filter	.Oljefilter	
1120						.Oil filler pipe	.Oljepåfyllningsrör	
1130						.Crank case ventilation	.Vevhusventilation	
1140						.Thermostat housing	.Termostathus	
1150						.Multiport fuel injection	.Bränsleinsprutning	
1160						.Ignition system	.Tändsystem	
1170						.Clutch	.Koppling	


8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

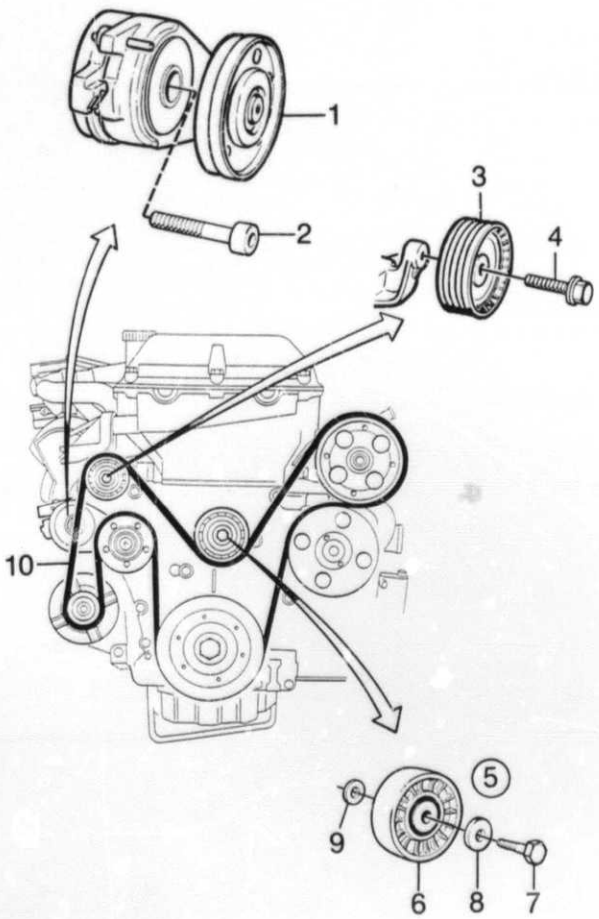

F8689 AAC94

0250	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 56 119			1	Belt tensioner	Remspännare	5
0020	2	80 98 378			1	Screw	Skruv	5
0030	3	43 56 127			1	Idler pulley	Brythjul	3
0040	4	79 78 216			1	Hexagon screw	Sexkantsskruv	5
0050	5	49 60 290		157)	1	Tension pulley	Spännrulle	3
0060	5	47 52 960		158)	1	Tension pulley	Spännrulle	3
0070	6	47 52 879			1	.Tension pulley	.Spännrulle	3
0080	7	80 82 968		-1996	1	.Screw	.Skruv	5
0090	7	46 85 525		1997-	1	.Screw	.Skruv	5
0100	8	40 87 375		-1996	1	.Washer	.Bricka	5
0110	8	47 52 895		1997-	1	.Washer	.Bricka	5
0120	9	47 52 887		158)	1	.Washer	.Bricka	5
0130	10	43 59 063		AC,ACC	1	Belt	Rem	1
0140	10	43 95 406			1	Belt	Rem	1


157. Engine -V088652.
158. Engine V088653-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

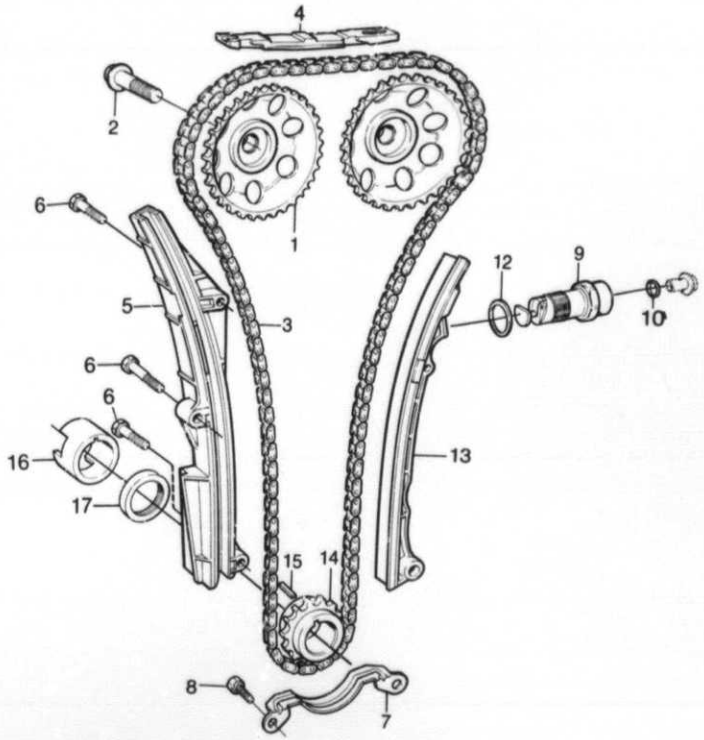

F6044 AAC94


0305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 15 205			2	Chain gear	Kedjehjul	5
0020	2	91 07 541			2	Screw	Skruv	5
0030	3	91 31 145			1	Chain	Kedja	3
0040	3	93 21 845		ALTERNATIVE	1	Chain	Kedja	3
0050						Open, with chain link	Öppen, med kedjelänk	
0060								
0070	4	88 59 324			1	Chain control	Kedjestyrning	3
0080	5	91 45 350			1	Chain control	Kedjestyrning	3
0090	6	80 59 628		-1996	3	Screw	Skruv	5
0095	6	79 78 141		1997-	3	Hexagon screw	Sexkantsskruv	5
0100	7	91 36 532			1	Chain protection	Kedjeskydd	5
0110	8	79 71 294		-1996	2	Screw	Skruv	5
0115	8	79 78 091		1997-	2	Screw	Skruv	5
0120	9	75 85 086			1	Chain tensioner	Kedjesträckare	3
0130	10	80 48 670			1	O-ring	O-ring	2
0140	12	75 08 690			1	Seal	Tätning	5
0150	13	91 45 376			1	Chain control	Kedjestyrning	3
0160	14	91 15 197			1	Chain gear	Kedjehjul	4
0170	15	91 16 864			1	Key	Kil	5
0180	16	91 29 727		B206I	1	Companion flange	Medbringare	5
0185	16			See page 2-025, 1-D02		Companion flange	Medbringare	
0190	17	91 31 137		B206I	1	Spacer	Distans	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

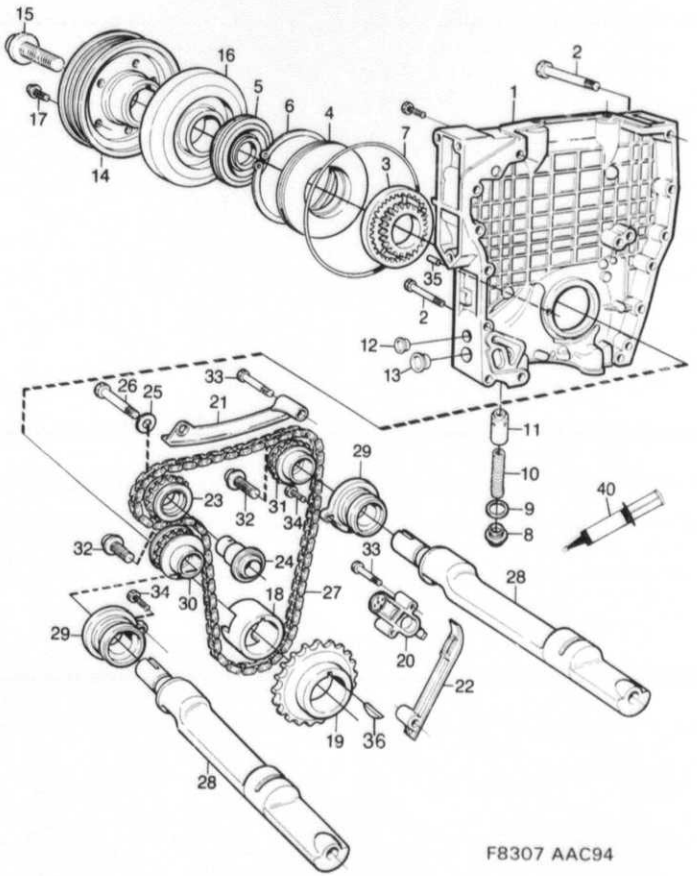

Engine body

1-D02

Transmission

Balance shaft, 4-cyl

Motorkropp

Transmission

Balansaxel, 4-cyl

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 43 637		1994, B206I	1	Cover	Kåpa	5
0020	1	91 43 611		157)B204I,B204L,B234I	1	Cover	Kåpa	5
0030	1	91 81 991		158)B204I,B204L,B234I	1	Cover	Kåpa	5
0040	2	79 84 891		B204I,B204L,B234I	15	Screw	Skruv	5
0050	2	79 84 891		1994, B206I	13	Screw	Skruv	5
0060	3	93 21 936		-1996	1	Pump kit	Pumpsats	5
0070				See page 2-159, 1-I16				
0080	3	88 22 702		1997-	1	Pump kit	Pumpsats	5
0090				See page 2-159, 1-I16				
0100	4	91 38 934		-1996	1	Oil pump housing	Oljepumphus	6
0110	4	91 73 501		1997-	1	Oil pump housing	Oljepumphus	6
0120	5	*93 09 204*		48) NLS – USE 9173576	1	.Seal	.Tätning	2
0130	5	*91 49 964*		49,110) NLS – USE 9173576	1	.Seal	.Tätning	2
0140	5	91 73 576		111)	1	.Seal	.Tätning	2
0150	6	91 29 719			1	Lock ring	Låsring	5
0160	7	91 30 600			1	Seal	Tätning	2
0170	8	75 08 955		-1996	1	Plug	Propp	5
0180	8	91 77 973		1997-	1	Plug	Propp	5
0190	9	93 55 389		-1996	1	Gasket	Packning	4
0200	10	93 09 998			1	Spring	Fjäder	6
0210	11	91 67 784			1	Piston	Kolv	6
0220	12	81 23 168			1	Plug	Plugg	4
0230	13	81 23 192			1	Plug	Plugg	4
0240	14	91 44 874			1	Pulley	Remskiva	4
0250	15	91 16 443			1	Screw	Skruv	5
0260	16	91 44 833			1	Vibration damper	Vibrationsdämpare	
0270	17	80 59 586			6	Screw	Skruv	5
0280	18	91 29 727			1	Companion flange	Medbringare	5
0290	19	91 38 264			1	Chain gear	Kedjehjul	4
0300	20	91 39 130			1	Chain tensioner	Kedjesträckare	3
0310	21	91 45 368			1	Chain control	Kedjestyrning	3
0320	22	91 45 384			1	Chain control	Kedjestyrning	3
0330	23	91 40 658			1	Chain gear	Kedjehjul	4
0340	24	91 45 392			1	Shaft	Axel	5
0350	25	91 30 535			1	Thrust washer	Axialbricka	5
0360	26	79 84 735			1	Screw	Skruv	5
0370	27	74 85 105			1	Chain	Kedja	4
0380	28	*91 32 838*		81) NLS – USE 9174533	2	Balance shaft	Balansaxel	5
0390	28	91 74 533		82,159)	2	Balance shaft	Balansaxel	5
0400	28	• 91 85 588		160)	2	Balance shaft	Balansaxel	5
0410	29	91 15 288		159)	2	Bearing housing	Lagerhus	5
0420	29	• 91 72 255		160)	2	Bearing housing	Lagerhus	5
0430	30	91 42 068		159)	1	Chain gear	Kedjehjul	4
0440	30	• 91 78 336		160)	1	Chain gear	Kedjehjul	4
0450	31	91 42 035		159)	1	Chain gear	Kedjehjul	4
0460	31	• 91 78 302		160)	1	Chain gear	Kedjehjul	4
0470	32	80 59 982		159)	2	Screw	Skruv	5
0480	32	80 82 968		160)	2	Screw	Skruv	5
0490	33	80 59 628		-1996	4	Screw	Skruv	5
0500	33	79 78 141		1997-	4	Hexagon screw	Sexkantsskruv	5
0510	34	40 87 235		-1996	2	Screw	Skruv	5
0520	34	79 78 109		1997-	2	Screw	Skruv	5

48. Engine -R113472.
49. Engine R113473-.
81. Engine -S082506.
82. Engine S082507-.
110. Engine -T082719.
111. Engine T082720-.
157. Engine -V088652.
158. Engine V088653-.
159. Engine -W002470.
160. Engine W002471-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-D04

Transmission
Balance shaft, 4-cyl

Transmission
Balansaxel, 4-cyl

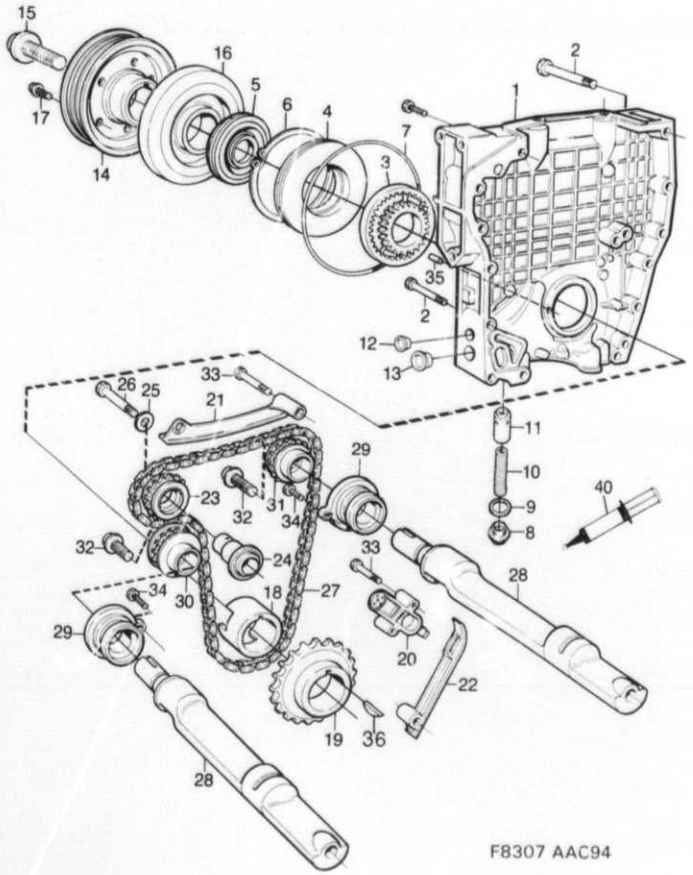

F8307 AAC94


0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	35	81 17 608		-1996	1	Roll pin	Spännstift	5
0540	35	79 49 548		1997-	1	Pin	Pinne	5
0550	36			See page 2-023, 1-C24		Key	Kil	
0580	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

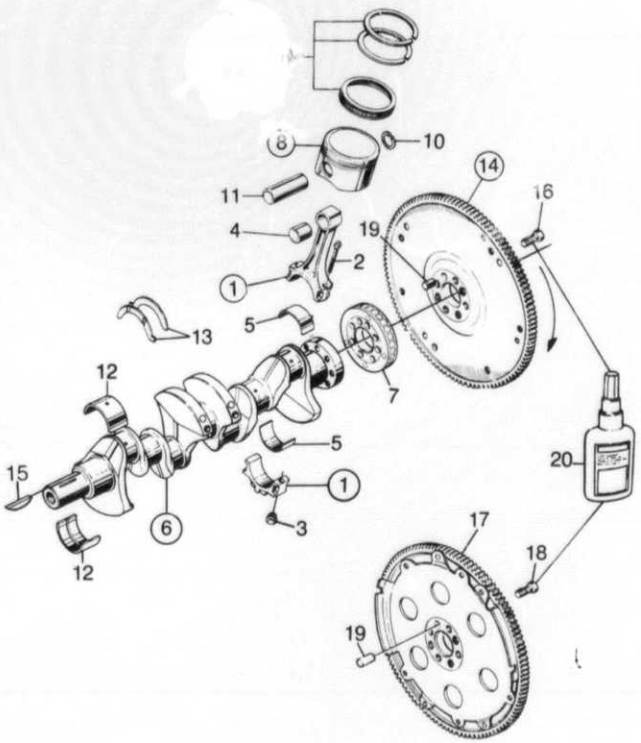

F8308 AAC94

Engine body

1-D06 Crankshaft, connecting rod, piston, 4-cyl.

Motorkropp

Vevaxel, vevstake, kolv, 4-cyl.

0355	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 81 740			4	Connecting rod	Vevstake	5
0020	2	74 80 643			8	.Screw	.Skruv	5
0030	3	74 80 684			8	.Nut	.Mutter	5
0040	4	83 47 676			4	.Bushing	.Bussning	5
0050	5	91 45 459		STD	8	Con.bearing	Vevstakslager	
0060	5	91 45 467		37), 0,25 MM,	8	Con.bearing	Vevstakslager	
0070	5	91 45 475		37), 0,50 MM,	8	Con.bearing	Vevstakslager	
0080	6	91 39 403			1	Crankshaft	Vevaxel	
0090	6	91 39 460		B234I	1	Crankshaft	Vevaxel	
0100	7			See page 3A-019, 2-A20	1	Aperture disc	Bländarskiva	
0110								
0120	8	91 49 154		B204I,B206I, CLASS AB	4	Piston	Kolv	5
0130	8	91 49 162		B204I,B206I, CLASS B	4	Piston	Kolv	5
0140	8	91 49 170		B204I,B206I, CLASS C	4	Piston	Kolv	5
0150	8	91 49 188		36),B204I,B206I, 0,50 MM	4	Piston	Kolv	5
0160	8	91 49 196		36),B204I,B206I, 1,0 MM	4	Piston	Kolv	5
0170								
0180	8	91 49 360		B234I, CLASS AB	4	Piston	Kolv	5
0190	8	91 49 378		B234I, CLASS B	4	Piston	Kolv	5
0200	8	91 49 386		B234I, CLASS C	4	Piston	Kolv	5
0210	8	91 49 394		36), B234I, 0,50 MM	4	Piston	Kolv	5
0220	8	91 49 402		36), B234I, 1,0 MM	4	Piston	Kolv	5
0230								
0240	8	91 49 295		B204L, CLASS AB	4	Piston	Kolv	5
0250	8	91 49 303		B204L, CLASS B	4	Piston	Kolv	5
0260	8	91 49 311		B204L, CLASS C	4	Piston	Kolv	5
0270	8	91 49 329		36), B204L, 0,50 MM	4	Piston	Kolv	5
0280	8	*91 49 337*		36), B204L, 1,0 MM NLS	4	Piston	Kolv	5
0290								
0300	9	91 49 105		STD, I	4	.Piston ring kit	.Kolvringsats	3
0310	9	91 49 113		36), 0,5MM, I	4	.Piston ring kit	.Kolvringsats	3
0320	9	91 49 121		36), 1,0 MM, I	4	.Piston ring kit	.Kolvringsats	3
0330								
0340	9	*91 67 776*		55), STD, TURBO NLS – USE 9149105	4	.Piston ring kit	.Kolvringsats	3
0350	9	*91 67 891*		36,55), 0,5MM, TURBO NLS - USE 9149113	4	.Piston ring kit	.Kolvringsats	3
0360	9	91 67 909		36,55), 1,0 MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0370								
0380	9	91 49 105		56), STD, TURBO	4	.Piston ring kit	.Kolvringsats	3
0390	9	91 49 113		36,56), 0,5MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0400	9	91 49 121		36,56), 1,0 MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0410								
0420	10	88 59 514		-1997	8	Lock ring	Låsring	5
0430	10	• 91 85 794		1998-	8	Lock ring	Låsring	5
0440	11	75 68 934		L=60MM, I	4	Gudgeon pin	Kolvtapp	5
0450	11	75 68 942		L=68MM, TURBO	4	Gudgeon pin	Kolvtapp	5
0460	12	91 45 418		STD	10	Main bearing	Ramlager	5
0470	12	91 45 426		37), 0,25 MM	10	Main bearing	Ramlager	5
0480	12	91 45 434		37), 0,50 MM	10	Main bearing	Ramlager	5
0490	13	75 88 783			2	Thrust washer	Tryckbricka	4
0500	14	*91 43 454*		104) NLS – USE 9176991, 9179136	1	Flywheel	Svänghjul	5
0500								
0510	14	91 79 136		105)	1	Flywheel	Svänghjul	5
0520	15			See page 2-023, 1-C24		Key	Kil	
0530	16	91 31 160			8	Screw	Skruv	5
0540	17	91 67 917		A	1	Companion flange	Medbringare	4

36. Oversize. Överdimension.
37. Undersize. Underdimension.
55. Engine –R164231.
56. Engine R164232–.
104. Engine –T074802
105. Engine T074803–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1 -D08 Crankshaft, connecting rod, piston, 4-cyl. / Vevaxel, vevstake, kolv, 4-cyl.

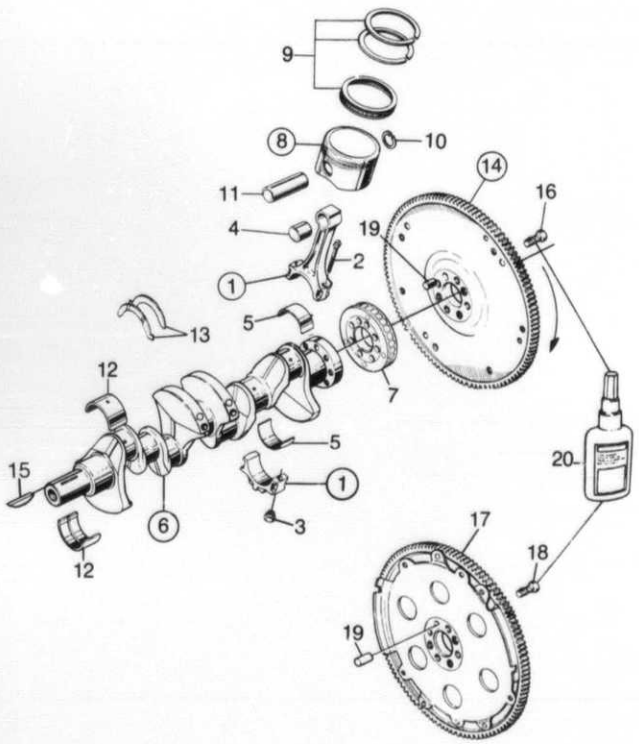

F8308 AAC94

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	18	91 39 940		A	8	Screw	Skruv	5
0560	19	91 45 590		103)	1	Pin	Pinne	5
0570	20	74 96 292		50 ML	X	Nut lock	Gängsäkring	5
0580						strong	stark	
0590						red	röd	


103. Engine -T039060

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

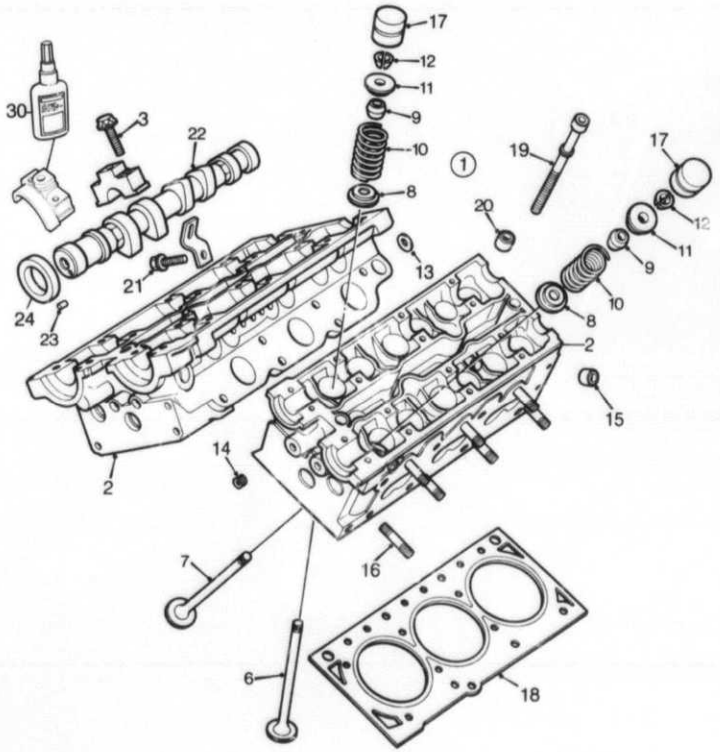

F7901 AAC94

Engine body

1-D10

Cylinder head

-1997, 6-cylinder

Motorkropp

Cylinderhuvud

-1997, 6-cylindrig

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 090		7), REAR, (CYL.1,3,5)	1	Cylinder head	Cylinderhuvud	5
0020	1	88 22 108		7), FRONT, (CYL.2,4,6)	1	Cylinder head	Cylinderhuvud	5
0030	2	45 00 534		REAR, (CYL.1,3,5)	1	.Cylinder head	.Cylinderhuvud	5
0040	2	45 00 542		FRONT, (CYL.2,4,6)	1	.Cylinder head	.Cylinderhuvud	5
0050	3	45 00 732			16	..Screw	..Skruv	5
0060	6	45 00 849		INLET	12	.Inlet valve	.Inloppsventil	3
0070	6	88 22 355		36), 0,075MM, INLET	12	.Inlet valve	.Inloppsventil	3
0080	6	88 22 363		36), 0,150MM, INLET	12	.Inlet valve	.Inloppsventil	3
0090	7	45 00 864		EXHAUST	12	.Exhaust valve	.Avgasventil	2
0100	7	88 22 371		36), 0,075MM, EXHAUST	2	.Exhaust valve	.Avgasventil	2
0110	7	88 22 389		36), 0,150MM, EXHAUST	12	.Exhaust valve	.Avgasventil	2
0120	8	45 00 880			24	.Spring washer	.Fjäderbricka	5
0130	9	45 00 898			24	.Seal	.Tätning	3
0140	10	45 00 906			24	.Valve spring	.Ventilfjäder	3
0150	11	45 00 914			24	.Valve spring washer	.Ventilfjäderbricka	4
0160	12	45 00 922			48	.Valve cone	.Knaster	2
0170	13	47 70 004		(4500765)	8	.Sealing washer	.Tätningsbricka	3
0180	14	45 00 195			8	.Screw plug	.Skruvplugg	3
0190	15	45 00 823		79)	4	.Sleeve	.Hylsa	5
0195	15	88 22 629		80)	4	.Sleeve	.Hylsa	5
0200	16	45 00 831			14	.Stud	.Pinnskruv	5
0210	17	*45 00 930*		1994,10) NLS – USE 4770301	24	Tappet	Ventillyftare	3
0220	17	47 70 301		1995-,11) (4621298)	24	Tappet	Ventillyftare	3
0230	18	*45 01 045*		1994 NLS – USE 4770293	2	Gasket	Packning	3
0235	18	47 70 293		1995-	2	Gasket	Packning	3
0240	19	45 01 060			16	Screw	Skruv	5
0250	20	43 46 854			1	Screw	Skruv	5
0260	21	45 01 110			1	Screw	Skruv	5
0270	22	45 00 963		1994	4	Camshaft	Kamaxel	5
0275	22	*47 70 327*		1995 NLS – USE 4770343	4	Camshaft	Kamaxel	5
0277	22	47 70 343		1996-	4	Camshaft	Kamaxel	5
0280	23	*45 01 003*		1994,10) NLS – USE 4621314	1	.Sleeve	.Hylsa	6
0290	23	46 21 314		1995-,11)	1	.Sleeve	.Hylsa	6
0300	24	45 03 983		(4770251)	4	Sealing ring	Tätningsring	5
0310	30	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0320						normal	normal	
0330						blue	blå	


7. Also available as exchange unit. Finns även som utbytesenhet.
10. CV, ch. –S7009999
11. CV, ch. S7010000–
36. Oversize. Överdimension.
79. Engine –8165
80. Engine 8166–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

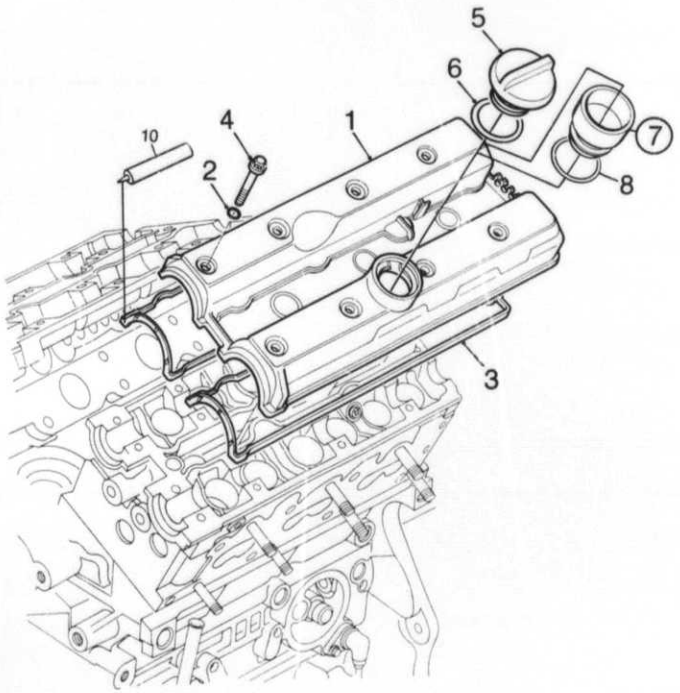

F8241 AAC94


0380	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 04 189*		1994, REAR,(CYL.1,3,5)	1	Valve cover	Ventilkåpa	5
0010				NLS – USE 4623732				
0020	1	*45 04 171*		1994, FRONT,(CYL.2,4,6)	1	Valve cover	Ventilkåpa	5
0020				NLS – USE 4623740				
0030								
0040	1	46 23 732		1995-, REAR,(CYL.1,3,5)	1	Valve cover	Ventilkåpa	5
0050	1	46 23 740		1995-, FRONT,(CYL.2,4,6)	1	Valve cover	Ventilkåpa	5
0060								
0070	2	45 04 247			8	.O-ring	.O-ring	2
0080	3	93 21 969		1994	1	.Gasket kit	.Packningsats	1
0090				See page 2-159, 1-I16				
0100	3	47 70 319		1995-	1	.Gasket kit	.Packningsats	1
0110				See page 2-159, 1-I16				
0120	4	45 02 274			16	Screw	Skruv	5
0130	5	45 02 357			1	Oil filler cap	Oljepåfyllningslock	5
0140	6	45 02 373			1	.Seal	.Tätning	5
0150	7	47 28 309		1997-	1	Oil trap	Oljefälla	5
0160	8	45 02 373		1997-	1	.Seal	.Tätning	5
0170	10	87 81 841		280 ML	X	Flange sealant	Fläns tätning	3

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

2 GROUP INDEX

Engine suspension	**1-C10**
Engine body 4-cyl	**1-C12**
Engine body 6-cyl	**1-D10**
Lubrication system	**1-D24**
Fuel system	**1-E12**
Inlet and exhaust system	**1-F10**
Cooling system	**1-H04**
Engine control	**1-I08**
Supercharging system	**1-I10**
Engine bay cover	**1-I14**
Kits	**1-I16**

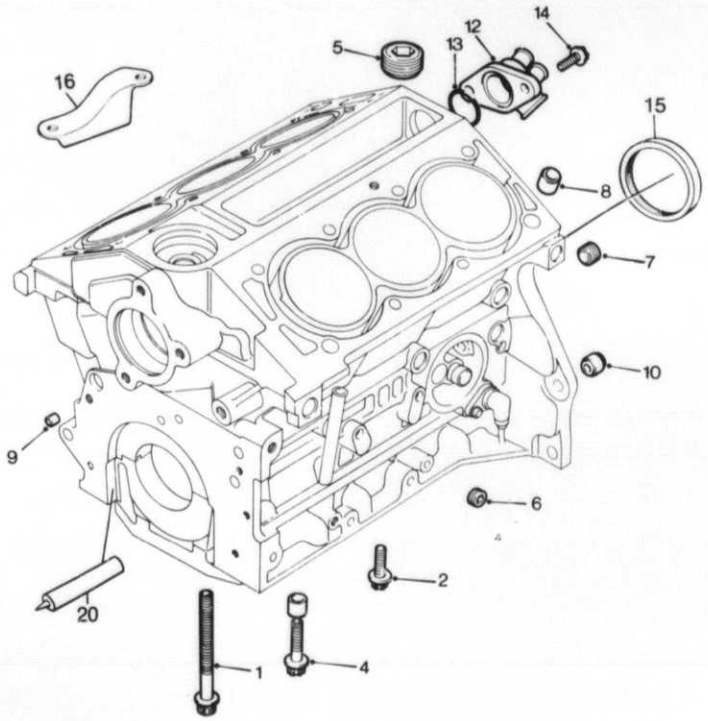

F7903 AAC94

Engine body

1-D14

Cylinder block

-1997, 6-cylinder

Motorkropp

Cylinderblock

-1997, 6-cylindrig


0385	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 00 302			8	Screw	Skruv	5
0020	2	45 00 351			2	Screw	Skruv	5
0030	4	45 00 401			4	Screw	Skruv	5
0040	5	45 00 229		M30X12MM	3	Screw plug	Skruvplugg	3
0050	6	45 00 195		M14X8MM	3	Screw plug	Skruvplugg	3
0060	7	45 00 179		M10X10MM	3	Screw plug	Skruvplugg	3
0070	8	45 00 245		16X12MM	4	Sleeve	Hylsa	5
0080	9	45 00 328		10X6,5MM	2	Sleeve	Hylsa	5
0090	10	45 00 336		12X15,5MM	2	Sleeve	Hylsa	5
0100	11	45 00 393		15X15MM	4	Sleeve	Hylsa	5
0110	12	43 94 797			1	Pipe end	Stos	5
0120	13	43 46 839			1	O-ring	O-ring	2
0130	14	43 46 854			2	Screw	Skruv	5
0140	15	*45 01 201*		1994 NLS – USE 4770095	1	Sealing ring	Tätningsring	3
0145	15	47 70 095		1995-	1	Sealing ring	Tätningsring	3
0150	16	45 00 344			1	Shield plate	Avskärmningsplåt	6
0200	20	87 81 841		280 ML	X	Flange sealant	Flänstätning	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool. Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-E24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

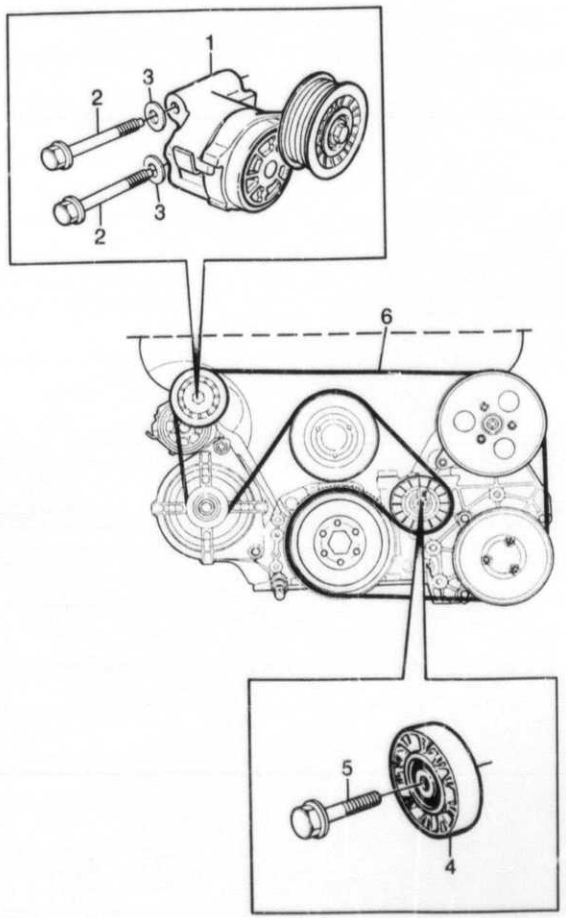

F5054 AAC94

0390	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 37 020			1	Belt tensioner	Remspännare	5
0020	2	79 79 214			2	Screw	Skruv	5
0030	3	80 73 108			2	Washer	Bricka	5
0040	4	42 37 038			1	Tension pulley	Spännrulle	3
0050	5	79 78 190			1	Screw	Skruv	5
0060	6	43 95 422		-1996, AC,ACC	1	Belt	Rem	1
0070	6	* 46 23 948		1997-, AC,ACC	1	Belt	Rem	1
0080	6	43 60 111		-1994, 8), AC, ACC	1	Belt	Rem	1
0090	6	* 46 23 872		1995-1996, 8), AC, ACC	1	Belt	Rem	1
0100	6	* 46 23 922		1997-, 8), AC, ACC	1	Belt	Rem	1
0110	6	43 95 430			1	Belt	Rem	1


8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

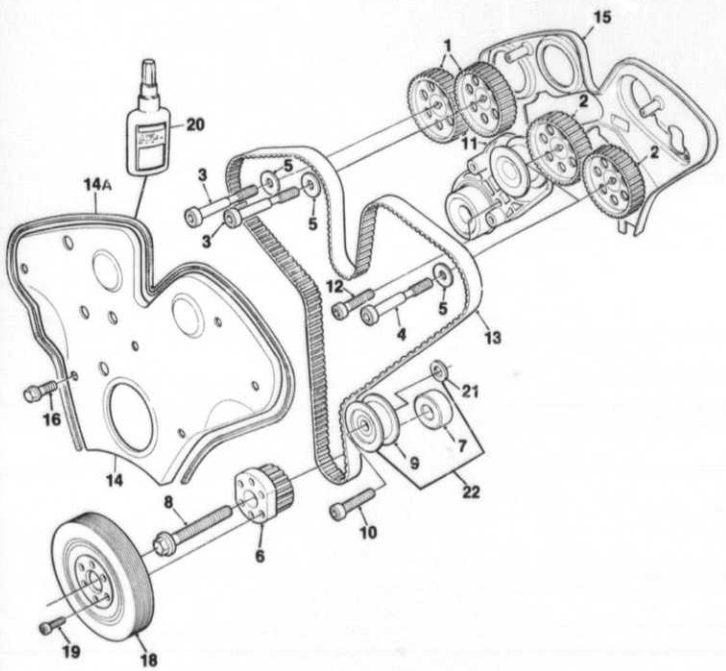

F8534 AAC94

Engine body

1-D18 Transmission -1997, 6-cylinder

Motorkropp

Transmission -1997, 6-cylindrig

0395	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 991		CYL 1, 3, 5	2	Chain gear	Kedjehjul	5
0020	2	*45 04 007*		1994, CYL 2, 4, 6 NLS – USE 4623898	2	Chain gear	Kedjehjul	5
0030	2	46 23 898		1995-, CYL 2, 4, 6	2	Chain gear	Kedjehjul	5
0040	3	45 04 023			2	Screw	Skruv	5
0050	4	45 04 031			2	Screw	Skruv	5
0060	5	45 04 049			4	Thrust washer	Tryckbricka	5
0070	6	45 04 056			1	Crankshaft gear	Vevaxeldrev	5
0080	7	45 04 064			1	Thrust ring	Tryckring	6
0090	8	45 04 072			1	Screw	Skruv	5
0100	9	*45 04 080*		-1995 NLS – USE 4771085	1	Guide roller	Styrrulle	5
0105	9	*47 70 459*		1996- NLS – USE 4771085	1	Guide roller	Styrrulle	5
0110	10	45 04 106			1	Screw	Skruv	5
0120	11	45 04 114		1994	1	Bracket	Konsol	6
0130	11	*46 23 906*		1995-,120) NLS – USE 4770491, 4770509	1	Bracket	Konsol	6
0135	11	47 70 509		121)	1	Bracket	Konsol	6
0140	12	45 04 130			3	Screw	Skruv	5
0150	13	46 21 348		120), (4504163)	1	Tooth belt	Kuggrem	
0155	13	47 70 491		121)	1	Tooth belt	Kuggrem	
0160	14	*46 20 043*		120), FRONT NLS – USE 4770517	1	Timing gear casing	Transmissionskåpa	5
0165	14	47 70 517		121), FRONT	1	Timing gear casing	Transmissionskåpa	5
0170	14A	45 02 845			1	▪Seal	▪Tätning	4
0180	15	45 02 803		-1995, REAR	1	Timing gear casing	Transmissionskåpa	5
0185	15	47 70 467		1996-,120), REAR	1	Timing gear casing	Transmissionskåpa	5
0187	15	47 70 525		121), REAR	1	Timing gear casing	Transmissionskåpa	5
0190	16	*45 02 076*		71) NLS – USE 7978091	9	Screw	Skruv	5
0200	16	46 23 724		72)	9	Screw	Skruv	5
0210	17	45 02 829			1	Screw	Skruv	5
0220	18	44 43 214			1	Pulley	Remskiva	4
0230	19	43 46 854			6	Screw	Skruv	5
0240								
0250	20	46 20 084			X	Glue	Lim	
0260	21	47 70 475		-1995	1	Thrust ring	Tryckring	6
0270	21	47 70 483		1996-	1	Thrust ring	Tryckring	6
0280	22	*47 70 558*		1996, NLS – USE 4771085	1	Guide roller	Styrrulle	5
0290	22	* 47 71 085		1997-	1	Guide roller	Styrrulle	5

71. Engine –54773.
72. Engine 54774–.
120. Engine –146671
121. Engine 146672–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Engine body

1-D20 Crankshaft, connecting rod, piston, 6-cyl,-1997

Motorkropp

Vevaxel, vevstake, kolv, 6-cyl. -1997

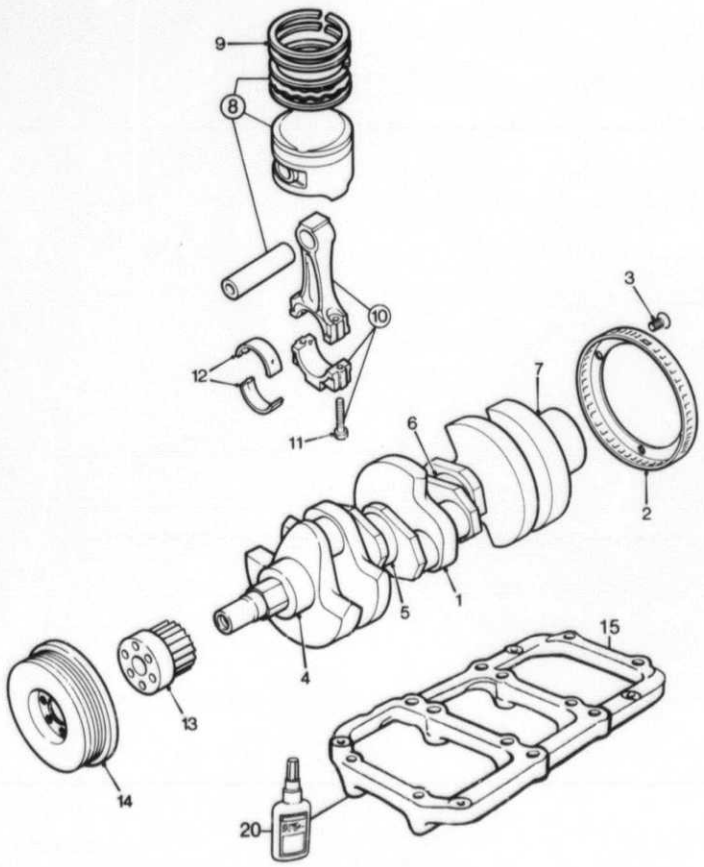

F7904 AAC94

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 01 151*		1994 NLS – USE 4770 111	1	Crankshaft	Vevaxel	
0015	1	47 70 111		1995-	1	Crankshaft	Vevaxel	
0020	2			See page 3A-019, 2-A20	1	.Aperture disc	.Bländarskiva	
0030	3			See page 3A-019, 2-A20	4	.Screw	.Skruv	
0040								
0050	4	93 21 977		STD, (NO. 1)	1	Main bearing	Ramlager	4
0060	4	93 21 985		37), 0,25MM, (NO. 1)	1	Main bearing	Ramlager	4
0070	4	93 21 993		37), 0,50MM, (NO. 1)	1	Main bearing	Ramlager	4
0080								
0090	5	88 21 779		17), STD, (NO. 2, 3)	2	Main bearing	Ramlager	4
0100	5	88 21 787		37,17) 0,25MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
0110	5	88 21 795		37,17) 0,50MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
0120								
0130	6	88 21 829		16), STD, (NO. 2, 3)	2	Main bearing	Ramlager	4
0140	6	88 21 837		37,16) 0,25MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
0160								
0170	7	88 21 720		STD, (NO. 4)	1	Main bearing	Ramlager	4
0180	7	88 21 738		37), 0,25MM, (NO. 4)	1	Main bearing	Ramlager	4
0190	7	88 21 746		37), 0,50MM, (NO. 4)	1	Main bearing	Ramlager	4
0200								
0210	8	45 01 805		CLASS 8 CYL. Ø 81,575-81,585MM	6	Piston	Kolv	5
0230	8	45 01 813		CLASS 99 CYL. Ø 81,585-81,595MM	6	Piston	Kolv	5
0250	8	45 01 821		CLASS 00 CYL. Ø 81,595-81,605MM	6	Piston	Kolv	5
0270	8	45 01 839		CLASS 01 CYL. Ø 81,605-81,615MM	6	Piston	Kolv	5
0290	8	45 01 847		CLASS 02 CYL. Ø 81,615-81,625MM	6	Piston	Kolv	5
0310	8	88 21 878		36), 0,50MM CYL. Ø 82,065-82,075MM	6	Piston	Kolv	5
0340	9	88 21 886		STD	6	.Piston ring kit	.Kolvringsats	3
0350				1)	6	.Gudgeon pin	.Kolvtapp	
0370	10	88 21 894			1	Connecting rod kit	Vevstaksats	5
0380				1)	6	.Connecting rod	.Vevstake	
0390	11	45 01 789			12	.Screw	.Skruv	5
0410	12	88 21 902		STD	6	Big end bearing kit	Vevstakslagersats	5
0420	12	88 21 910		37), 0,25MM	6	Big end bearing kit	Vevstakslagersats	5
0430	12	88 21 928		37), 0,50MM	6	Big end bearing kit	Vevstakslagersats	5
0440	13			See page 2-041, 1-D18		Crankshaft gear	Vevaxeldrev	
0450	14			See page 2-041, 1-D18		Pulley	Remskiva	
0460	15	46 20 019			1	Bearing carrier	Lagerhållare	4
0470	20	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0480						normal	normal	
0490						blue	bla	


1. Not as separate spare part. Ej som separat reservdel.
16. Lower Nedre
17. Upper Övre
36. Oversize. Överdimension.
37. Undersize. Underdimension


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

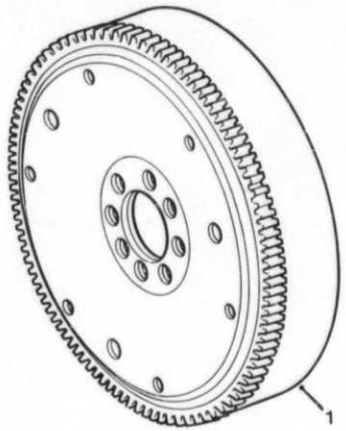

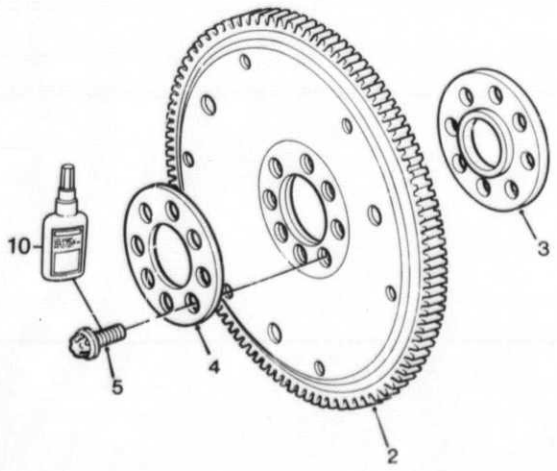

F7905 AAC94


0410	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 01 235		M	1	Flywheel	Svänghjul	5
0020	2	45 01 391		A	1	Companion flange	Medbringare	4
0030	3	45 01 524		A	1	Centering disc	Centreringsskiva	
0040	4	45 01 532		A	1	Reinforcing disc	Förstärkningsskiva	
0050	5	44 40 251			8	Screw	Skruv	5
0100	10	74 96 292		50 ML	X	Nut lock	Gängsäkring	5
0110						strong	stark	
0120						red	röd	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

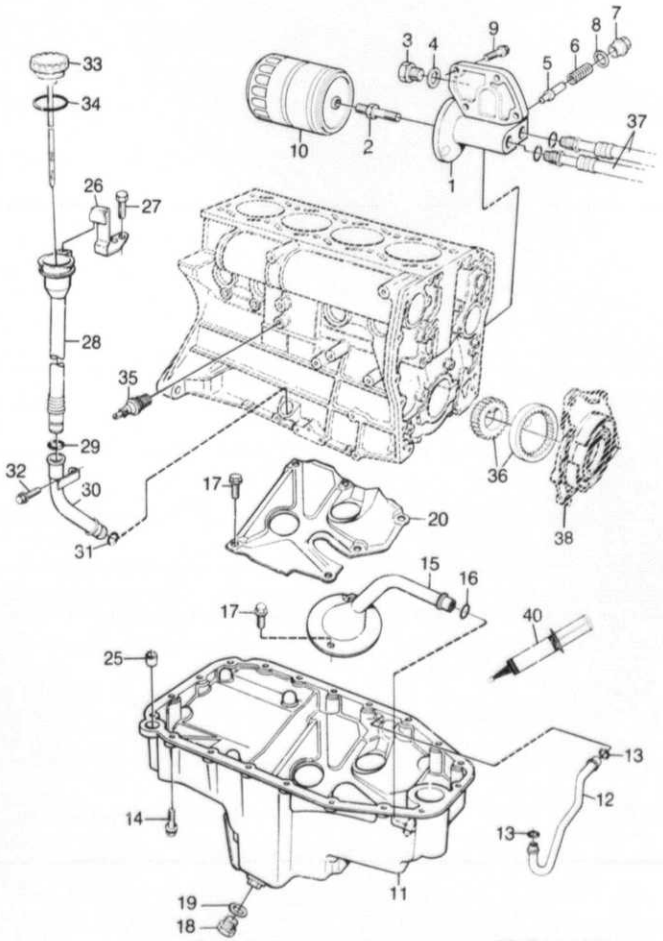

F8134 AAC94

Lubrication system

1-D24 Sump, oil filter 4-cylinder

Smörjsystem

Oljesump, oljefilter 4-cylindrig

0435	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 30 816		25)	1	Intermediate section	Mellanstycke	6
0020	1	91 38 645			1	Intermediate section	Mellanstycke	6
0030	2	83 48 609			1	Junction pipe	Skarvrör	6
0040	3	*81 23 721*		NLS – USE 7563042	1	Plug	Propp	5
0050	4	81 24 141			1	Seal	Tätning	5
0060	5	93 01 540		25) -1995	1	Thermostat	Termostat	2
0070	5	91 42 175		25) 1996-	1	Thermostat	Termostat	2
0080	6	93 00 591		25)	1	Spring	Fjäder	5
0090	7	75 20 372		25)	1	Plug	Propp	5
0100	8	91 09 182		25)	1	Gasket	Packning	4
0110	9	*80 59 800*		-1995 NLS – USE 7978216	4	Screw	Skruv	5
0120	9	79 78 216		1996-	4	Hexagon screw	Sexkantsskruv	5
0130	10	91 44 445			1	Filter	Filter	1
0140	11	91 44 650			1	Sump	Oljesump	6
0150	12	91 30 618		85)	1	Tube	Rör	4
0155	12	91 75 696		86)	1	Tube	Rör	4
0160	13	91 37 993			2	O-ring	O-ring	2
0170	14	40 87 243		-1996	18	Screw	Skruv	5
0175	14	79 78 208		1997-	18	Screw	Skruv	5
0180	15	91 65 572			1	Oil pipe	Oljesugrör	6
0190	16	91 38 009			1	O-ring	O-ring	2
0200	17	79 71 294		I	10	Screw	Skruv	5
0210	17	79 71 294		TURBO	7	Screw	Skruv	5
0220	18	91 32 929			1	Plug	Propp	1
0230	19	91 32 937			1	Gasket	Packning	1
0240	20	91 44 668			1	Protection	Skydd	6
0250	25	83 46 470			1	Guide	Styrning	
0260	26	91 46 986			1	Bracket	Fäste	6
0270	27	79 71 294		-1995	2	Screw	Skruv	5
0280	27	79 78 091		1996-	2	Screw	Skruv	5
0290	28	91 38 074			1	Oil-level tube	Oljenivårör	6
0300	29	91 38 108			1	,O-ring	,O-ring	2
0310	30	91 46 994			1	Tube	Rör	6
0320	31	91 47 026			1	O-ring	O-ring	2
0330	32	79 74 082			1	Screw	Skruv	5
0340	33	91 68 238		1994,10)	1	Dipstick	Oljesticka	3
0350	33	91 70 671		1995-,11)	1	Dipstick	Oljesticka	3
0360	34	93 61 544			1	,Ring-gland	,Packningsring	4
0370	35	91 12 459			1	Eng. oil pressure sensor	Oljetrycksgivare	3
0380	36			See page 2-025, 1-D02		Pump kit	Pumpsats	
0390	37			See page 2-139, 1-H20		Hose	Slang	
0392	38			See page 2-025, 1-D02		Oil pump housing	Oljepumphus	
0395	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0400								
0410				See page 2-159, 1-I16	X	Service kit	Servicesats	

10. CV, ch. –S7009999
11. CV, ch. S7010000–
25. For cars with air oil cooler. För bilar med luftoljekylare.
85. Engine –T010437
86. Engine T010438–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Lubrication system

1-E02 Sump, oil filter -1997, 6-cylinder

Smörjsystem

Oljesump, oljefilter -1997, 6-cylindrig

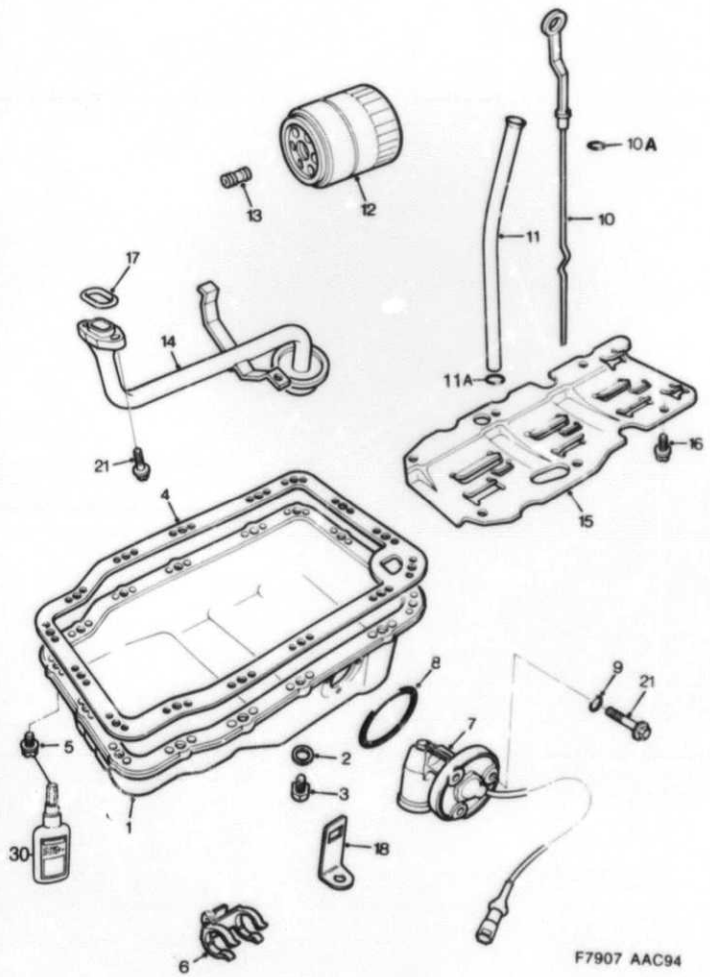

0445	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	46 20 027			1	Sump	Oljesump	6
0020	2	*45 02 134*		1994 NLS – USE 4345716	1	.Sealing ring	.Tätningsring	1
0025	2	43 45 716		1995-	1	.Sealing ring	.Tätningsring	1
0030	3	45 02 142			1	.Screw plug	.Skruvplugg	1
0040	4	45 02 167			1	Gasket	Packning	3
0050	5	45 01 110			17	Screw	Skruv	5
0060	6	45 02 652			1	Clip	Clips	6
0070	7	45 02 571			1	Oil level sensor	Oljenivågivare	3
0080	8	45 02 597			1	O-ring	O-ring	2
0090	9	45 02 613			3	Sealing ring	Tätningsring	4
0100	10	45 02 399		75)	1	Dipstick	Oljesticka	3
0105	10	46 20 142		76)	1	Dipstick	Oljesticka	3
0110	10A	46 20 225			1	.O-ring	.O-ring	2
0120	11	45 02 423		75)	1	Oil level tube	Oljenivårör	6
0125	11	46 20 241		76)	1	Oil level tube	Oljenivårör	6
0130	11A	46 20 258			1	.O-ring	.O-ring	2
0140	12	45 02 096			1	Filter	Filter	1
0150	13	45 02 712			1	Junction pipe	Skarvrör	6
0160	14	45 02 308			1	Oil pipe	Oljesugrör	6
0170	15	45 02 050			1	Baffle plate	Skvalpplåt	
0180	16	*45 02 076*		1994 NLS – USE 7978091	6	Screw	Skruv	5
0185	16	47 70 038		1995-	6	Screw	Skruv	5
0190	17	45 02 332			1	Sealing ring	Tätningsring	4
0200	18	45 02 647			1	Connector holder	Kontakthållare	6
0210	19	45 02 639			1	Clamp	Klämma	6
0220	20	45 02 290			1	Screw plug	Skruvplugg	5
0230	21	45 02 274			3	Screw	Skruv	5
0240	30	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0241						normal	normal	
0242						blue	blå	
0243								
0250		74 96 250		See page 2-159, 1 116	X	Service kit	Servicesats	1

75. Engine -19799
76. Engine 19800-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Lubrication system

1-E04 Oil pump -1997, 6-cylinder

Smörjsystem

Oljepump -1997, 6-cylindrig

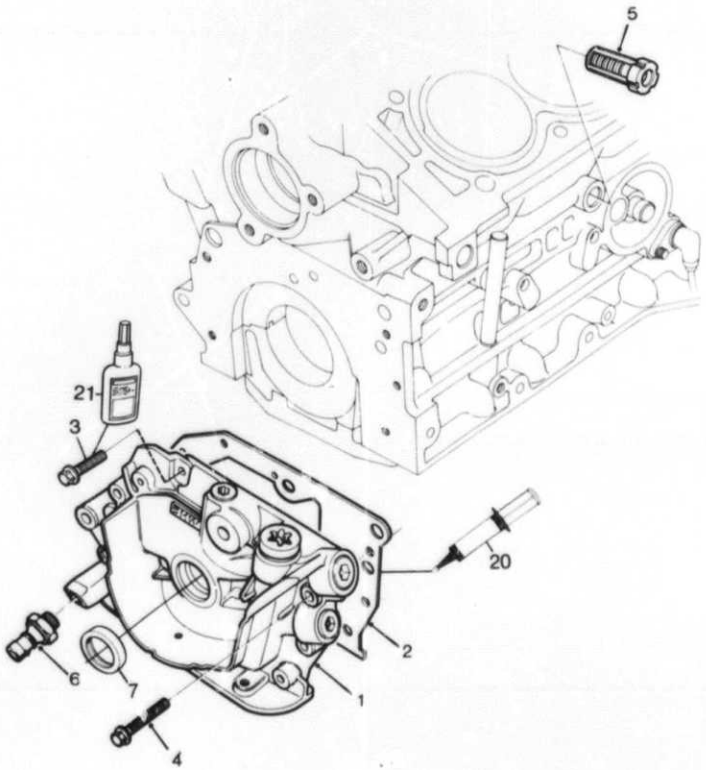

F7908 AAC94

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 02 241*		-1996 NLS – USE 4770731	1	Oil pump	Oljepump	4
0020	1	* 47 70 731		1997-	1	Oil pump	Oljepump	4
0030	2	*45 02 258*		NLS – USE 4770749	1	Gasket	Packning	4
0040	3	45 02 274			1	Screw	Skruv	5
0050	4	45 00 732			5	Screw	Skruv	5
0060	5	45 00 419			1	By-pass valve	By-passventil	6
0070	6	45 04 585		-1995	1	Eng. oil pressure sensor	Oljetrycksgivare	3
0080	6	47 70 186		1996-	1	Eng. oil pressure sensor	Oljetrycksgivare	3
0090	7	46 22 296			1	Seal	Tätning	2
0100	20	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0110	21	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0120						normal	normal	
0130						blue	blå	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Lubrication system

1-E06 Crank case ventilation 4-cylinder

Smörjsystem

Vevhusventilation 4-cylindrig

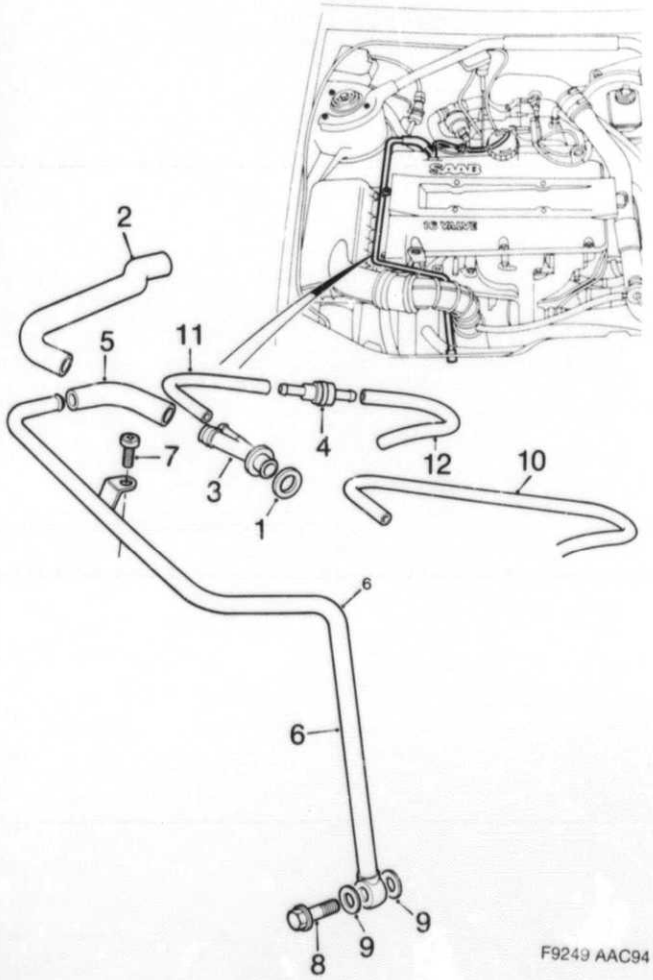

0452	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 15 190			1	Bushing	Bussning	5
0020	2	91 46 754			1	Hose	Slang	4
0030	3	91 65 903			1	Nipple	Nippel	5
0040	4	75 21 313		B204L	1	Pos. crankc. vent. valve	Ventil	
0050	5	91 48 958		B204L	1	Hose	Slang	4
0060	6	91 68 485		153) B204L	1	Tube	Rör	5
0070	6	91 80 464		154) B204L	1	Tube	Rör	5
0080	7	91 45 764		B204L	1	Screw	Skruv	5
0090	8	91 43 967		153) B204L	1	Banjo screw	Banjoskruv	5
0100	8	75 83 628		154) B204L	1	Screw	Skruv	5
0110	9	81 24 141		153) B204L	2	Seal	Tätning	5
0120	9	81 24 158		154) B204L	2	Gasket	Packning	2
0130	10	91 36 243		L=330MM	1	Vaccum hose	Vakuumslang	5
0140	11	91 36 243		L=60MM	1	Vaccum hose	Vakuumslang	5
0150	12	91 36 243		L=240MM	1	Vaccum hose	Vakuumslang	5
0160								
0170		91 36 243		L=5000MM	X	Vaccum hose	Vakuumslang	5


153. Engine -V059179.
154. Engine V059180-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

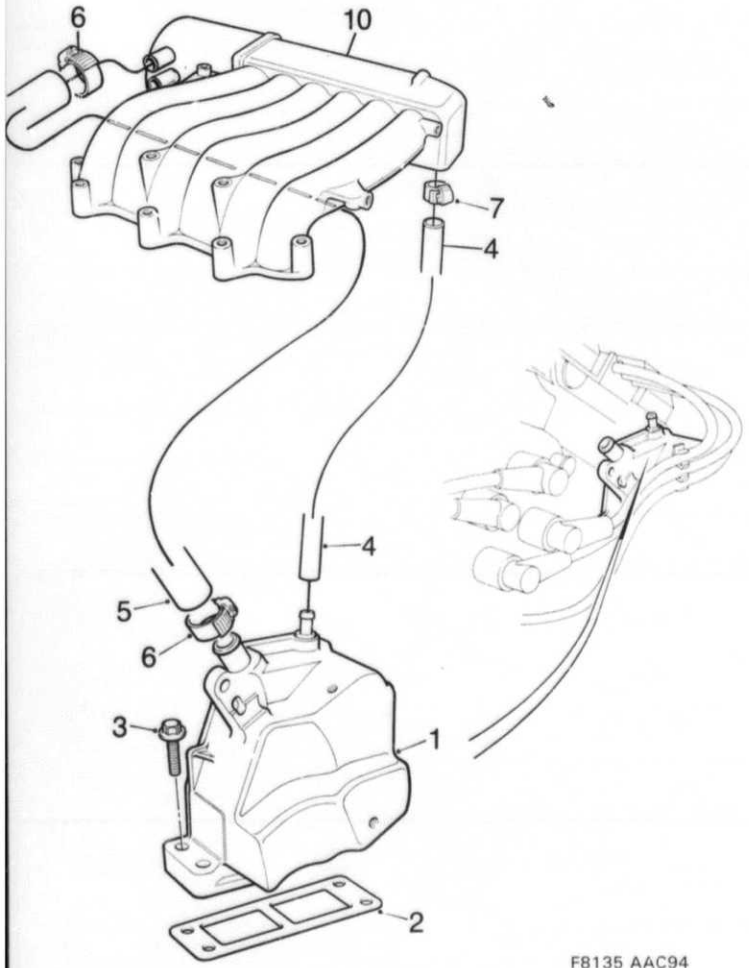

F8135 AAC94

Lubrication system

1-E08 Crank case ventilation -1997, 6-cylinder

Smörjsystem

Vevhusventilation -1997, 6-cylindrig

0455	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 04 882		1994	1	Crank case ventilation	Vevhusventilation	
0015	1	47 70 160		1995-	1	Pos. crankc. vent. valve	Ventil	
0020	2	45 02 738			1	Gasket	Packning	2
0030	3	45 02 753			4	Screw	Skruv	5
0040	4	45 03 272			1	Hose	Slang	4
0050	5	45 03 264			1	Hose	Slang	4
0060	6	45 76 583			2	Hose clamp	Slangklamma	
0070	7	79 70 031			1	Hose clamp	Slangklamma	5
0100	10			See page 2-083, 1-F12		Intake manifold	Inloppsrör	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-E10

Oil pipe
Turbo

Oljerör
Turbo

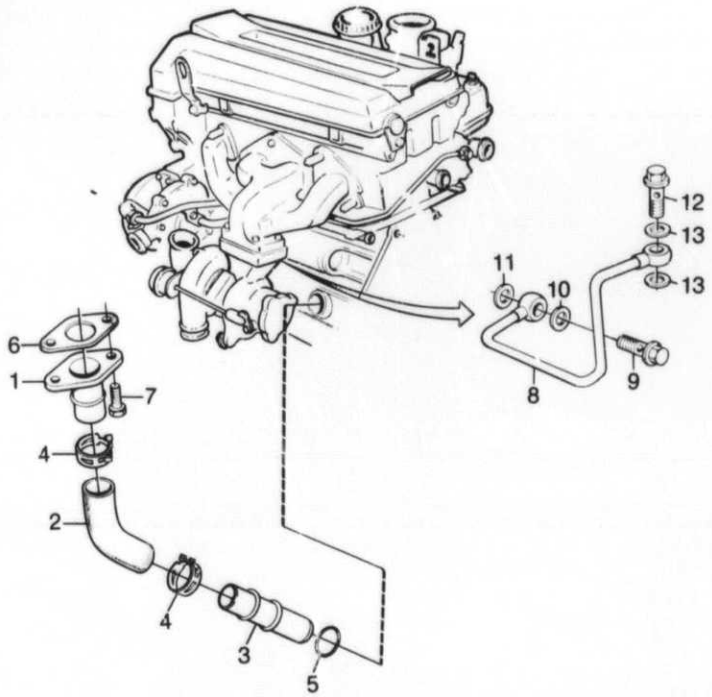

F5063 AAC94

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 44 130			1	Tube	Rör	5
0020	2	91 36 441			1	Hose	Slang	5
0030	3	91 29 396			1	Tube	Rör	5
0040	4	75 86 050			2	Clamp	Klamma	5
0050	5	75 02 263			1	O-ring	O-ring	2
0060	6	91 14 075			1	Gasket	Packning	5
0070	7	*80 59 768*		-1996 NLS – USE 7978075	2	Screw	Skruv	5
0075	7	43 48 215		1997-	2	Screw	Skruv	5
0080	8	91 65 473			1	Tube	Rör	5
0090	9	91 43 967			1	Banjo screw	Banjoskruv	5
0100	10	81 24 141			1	Seal	Tätning	5
0110	11	*83 26 712*		NLS – USE 4161162	1	Seal	Tätning	5
0120	12	91 36 524			1	Banjo screw	Banjoskruv	5
0130	13	81 24 133			2	Gasket	Packning	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-E12 Air cleaner 4-cylinder / Luftrenare 4-cylindrig

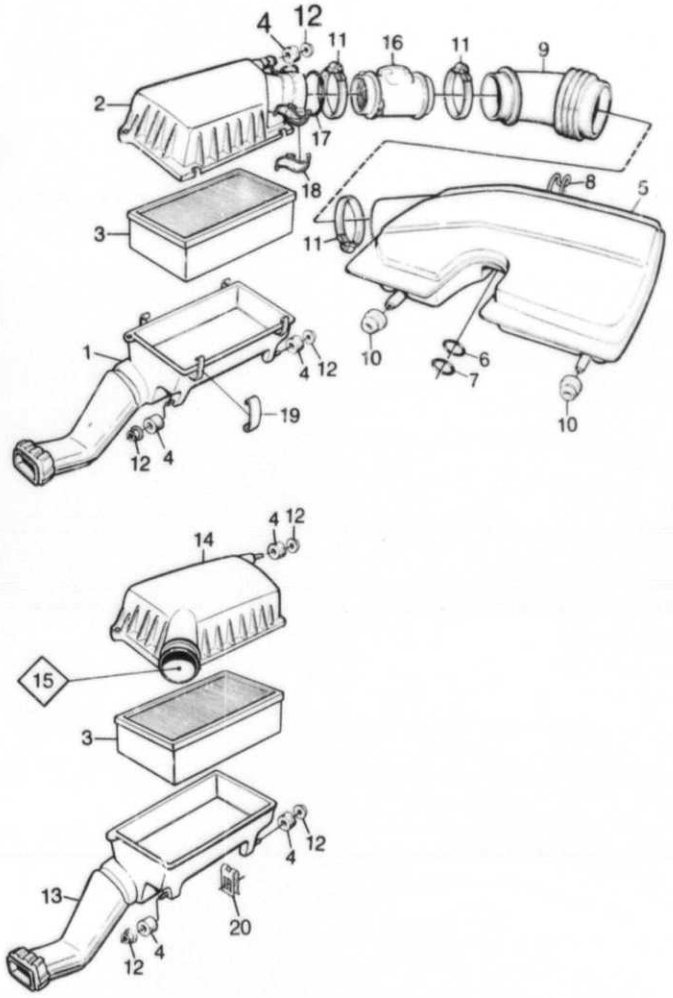

F9238 AAC94

0650	Pos	Art No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S -
0010	1	42 36 014		I	1	Air cleaner	Luftrenare	6
0020	2	42 36 022		I	1	Air cleaner	Luftrenare	6
0030	3	42 36 030			1	Filter cartridge	Filterpatron	1
0040	4	42 35 768			3	Rubber spacer	Gummidistans	4
0050	5	42 35 230		I	1	Silencer	Ljuddämpare	5
0060	6	42 29 522			1	.O-ring	.O-ring	2
0070	7	42 29 530			1	.O-ring	.O-ring	2
0080	8	42 29 548			1	.Clamp	.Klammer	5
0090	9	42 35 222		I	1	Hose	Slang	4
0100	10	40 27 488			2	Rubber bushing	Gummibussning	4
0110	11	79 70 155			2	Hose clamp	Slangklamma	5
0120	12	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0130	13	42 36 014		TURBO	1	Air cleaner	Luftrenare	6
0140	14	42 36 089		TURBO	1	Air cleaner	Luftrenare	6
0150	15			See page 2-153, 1-I10	1	Hose	Slang	
0160	16	91 28 919		-1995	1	Mass air flow sensor	Luftmassamätare	4
0170	16	46 60 809		1996	1	Mass air flow sensor	Luftmassamätare	8
0180	16	47 80 185		1997-	1	Mass air flow sensor	Luftmassamätare	8
0190	17	41 56 295		I	1	O-ring	O-ring	3
0200	18	44 45 854			2	Clip	Clips	6
0210	19	44 45 862			4	Clip	Clips	6
0220	20	44 45 847			3	Clip	Clips	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Fuel system

1-E14 *Air cleaner -1997, 6-cylinder*

Bränslesystem

Luftrenare -1997, 6-cylindrig

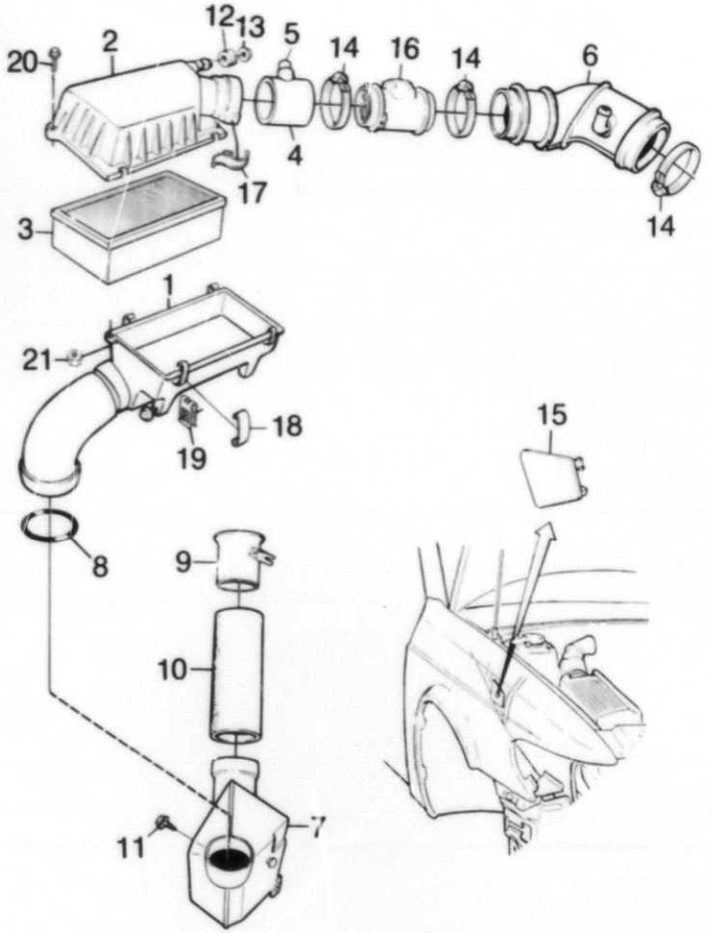

F8523 AAC94

0655	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 36 048			1	Air cleaner	Luftrenare	6
0020	2	42 36 055			1	Air cleaner	Luftrenare	6
0030	3	42 36 063			1	Filter cartridge	Filterpatron	1
0040	4	42 29 571		-1995	1	Hose	Slang	4
0050	4	46 61 302		1996-	1	Hose	Slang	
0060	5	42 39 067		-1995	1	.Intake air temp. sensor	.Temperaturgivare	
0070	5	46 60 593		1996-	1	.Intake air temp. sensor	.Temperaturgivare	8
0080	6	42 36 113			1	Hose	Slang	4
0090	7	42 29 563			1	Silencer	Ljuddämpare	5
0100	8	42 29 704			1	.O-ring	.O-ring	2
0110	9	42 36 154			1	Connecting sleeve	Anslutningsmuff	5
0120	10	42 36 147			1	Hose	Slang	4
0130	11	79 77 465			1	Screw	Skruv	5
0140	12	42 35 768			3	Rubber spacer	Gummidistans	4
0150	13	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0160	14	79 70 163			4	Hose clamp	Slangklamma	5
0170	15	43 38 679			1	Adapter	Adapter	
0180	16	42 39 034		-1995	1	Mass air flow sensor	Luftmassamätare	4
0190	16	46 60 817		1996	1	Mass air flow sensor	Luftmassamätare	8
0200	16	47 80 177		1997-	1	Mass air flow sensor	Luftmassamätare	8
0210	17	44 45 854			2	Clip	Clips	6
0220	18	44 45 862		130)	4	Clip	Clips	6
0230	18	46 22 890		131)	4	Clip	Clips	6
0240	19	44 45 847			3	Clip	Clips	6
0250	20	46 22 908		131)	2	Screw	Skruv	5
0260	21	46 22 916		131)	2	Nut	Mutter	5

130. Ch -R2036373.
131. Ch R2036374-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-E16

Fuel tank
Bränsletank

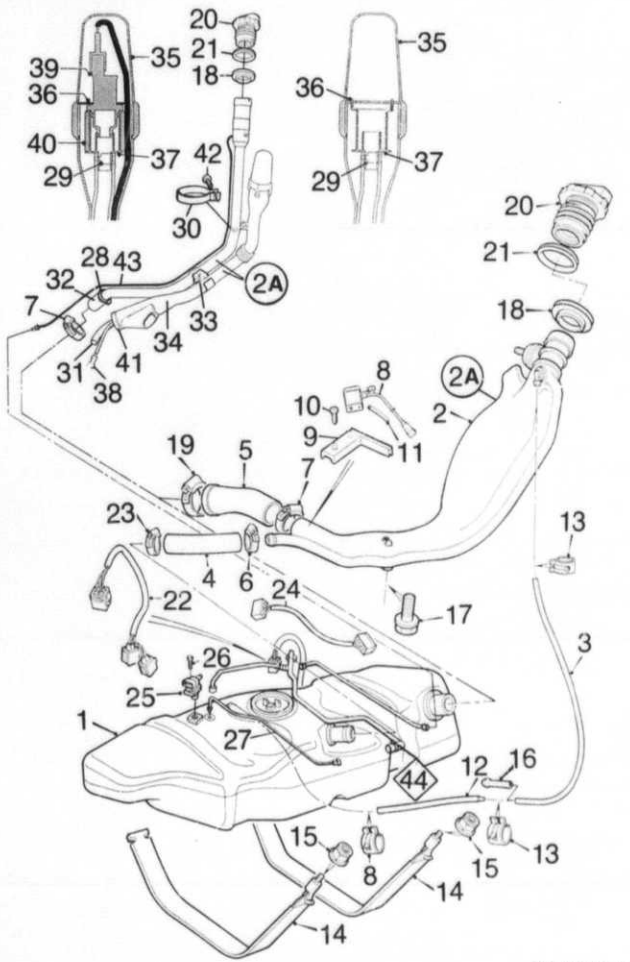

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	42 36 956		-1995	1	Tank	Tank	6
0020	1	43 94 441		1996-	1	Tank	Tank	8
0030	1	• 47 27 160		1998-, B204L, US,CA	1	Tank	Tank	8
0040	1	• 49 60 985		1998-, B234I, US,CA	1	Tank	Tank	8
0050								
0060	2	42 27 336		-1995	1	Filler pipe	Påfyllningsrör	5
0070	2	42 27 336		13,62), -1995, ME	1	Filler pipe	Påfyllningsrör	5
0080	2	43 96 495		13), -1995	1	Filler pipe	Påfyllningsrör	5
0090	2	42 28 300		-1995, CV	1	Filler pipe	Påfyllningsrör	5
0100	2	43 96 685		13), -1995, CV	1	Filler pipe	Påfyllningsrör	5
0110	2	42 28 300		13,62), -1995, CV, ME	1	Filler pipe	Påfyllningsrör	5
0120								
0130	2A	44 44 626		1996-1997. 3D,5D B204L, B258I, US,CA	1 1	Filler pipe	Påfyllningsrör	8
0150	2A	44 45 979		1996-1997. 3D,5D B234I, US,CA	1 1	Filler pipe	Påfyllningsrör	
0170	2A	46 22 585		1996-1997. CV. B204L, B258I, US,CA	1 1	Filler pipe	Påfyllningsrör	8
0190	2A	46 22 593		1996-1997. CV. B234I, US,CA	1 1	Filler pipe	Påfyllningsrör	
0210	2A	• 47 27 210		1998-,3D,5D,B204L, US,CA	1	Filler pipe	Påfyllningsrör	5
0220	2A	• 49 60 951		1998-,3D,5D,B234I, US,CA	1	Filler pipe	Påfyllningsrör	5
0230	2A	• 47 26 592		1998-, CV, B204L,US,CA	1	Filler pipe	Påfyllningsrör	5
0240	2A	• 49 60 969		1998-, CV, B234I, US,CA	1	Filler pipe	Påfyllningsrör	5
0250	2A	43 97 006		1996-, 3D,5D,CH,RU	1	Filler pipe	Påfyllningsrör	5
0260	2A	43 97 030		1996-, CV,CH,RU	1	Filler pipe	Påfyllningsrör	5
0270	2A	44 45 979		1996-, 3D,5D,	1	Filler pipe	Påfyllningsrör	
0280	2A	46 22 593		1996-, CV	1	Filler pipe	Påfyllningsrör	
0290								
0300	3	42 28 276		-1995	1	Hose	Slang	5
0310	3	44 45 631		1), 1996-	1	.Hose	.Slang	8
0320	4	44 40 244			1	.Hose	.Slang	5
0330	4	43 94 508		1996-, US, CA	1	.Hose	.Slang	8
0340	5	42 36 238		-1995	1	Hose	Slang	5
0350	5	46 22 015		1996-	1	.Hose	.Slang	5
0360	5	43 94 490		1996-, US, CA	1	.Hose	.Slang	8
0370	6	45 26 836			1	.Hose clamp	.Slangklamma	5
0380	7	44 41 697		-1995	1	Hose clamp	Slangklamma	5
0390	7	46 22 304		1996-	1	.Hose clamp	.Slangklamma	5
0400	7	49 40 029		1996-, US, CA	1	.Hose clamp	.Slangklamma	5
0410	8	44 44 758		1996-, US, CA	1	.Pressure sensor	.Tryckgivare	8
0420	9	43 96 263		1996-, US, CA	1	.Bracket	.Konsol	
0430	10	*79 67 771*		1996-, US, CA NLS – USE 7970601	1	.Screw	.Skruv	5
0440	11	43 96 313		1996-, US, CA	1	.Hose	.Slang	8
0450	12	43 94 268		-1995	1	Hose	Slang	5
0460	13	79 73 605		-1995	4	Hose clamp	Slangklamma	5
0470	14	42 35 040			2	Tensioning band	Spännband	6
0480	15	79 71 922			1	Nut	Mutter	3
0490	16	42 29 332		-1995	1	Nipple	Nippel	4
0500	17	42 26 023		-1997	1	Screw	Skruv	5
0510	17	• 49 40 896		1998-	1	Screw	Skruv	5
0520	18	42 27 294			1	Sealing collar	Tätningskrage	5
0530	19	44 41 689		-1995	1	Hose clamp	Slangklamma	5
0540	19	46 22 304		1996-	1	Hose clamp	Slangklamma	5
0550	20	43 91 058		1994, 10)	1	Filler cap	Tanklock	2
0560	20	43 97 048		1995, 11)	1	Filler cap	Tanklock	8
0570	20	43 97 048		1996-	1	Filler cap	Tanklock	8

1. Not as separate spare part. Ej som separat reservdel.
10. CV, ch. -S7009999
11. CV, ch. S7010000-
13. For cars with lead resistant Lambda sonde. För bilar med blytålig Lambdasond.
62. Ch S2010031-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-E18

Fuel tank
Bränsletank

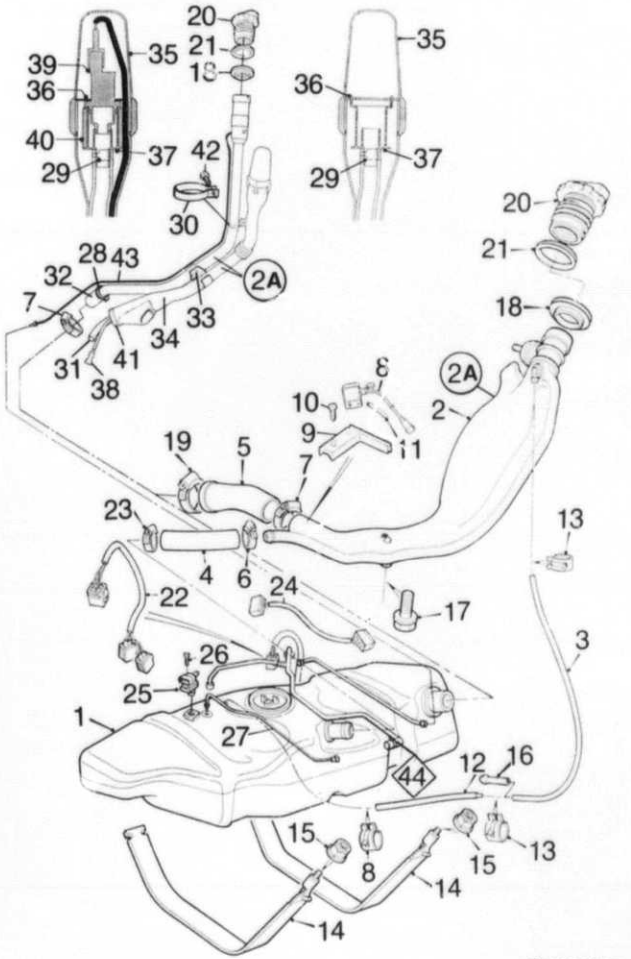

F9244 AAC94

0820	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0580	20	47 27 038		1996-, US, CA	1	Filler cap	Tanklock	8
0590	21	75 11 751			1	Gasket	Packning	8
0600	22					Connection	Skarv	
0610	23	45 26 836		1996-	1	Hose clamp	Slangklamma	5
0620	24	48 13 028		1998-,US,CA	1	Connection	Skarv	5
0630	25	• 47 27 186		1998-,B204L,US,CA	1	Pressure sensor	Tryckgivare	
0640	26	• 47 52 168		1998-,B204L,US,CA	1	Screw	Skruv	5
0650	27	48 13 028		1998-,B204L,US,CA	1	Connection	Skarv	5
0660	28	44 41 697		1998- US,CA	1	Hose clamp	Slangklamma	5
0670	29	45 76 583		1998- US,CA	1	Hose clamp	Slangklamma	
0680	30	• 47 27 236		1998- US,CA	1	Hose clamp	Slangklamma	
0690	31	• 47 27 251		1998- US,CA	1	Hose	Slang	5
0700	32	• 47 27 269		1998- US,CA	1	Hose	Slang	5
0710	33	• 47 28 093		1998- UC,CA	1	Hose clamp	Slangklamma	
0720	34	• 47 28 507		1998- US,CA	1	Air tube	Luftrör	5
0730	35	• 47 28 515		1998- US,CA	1	Cover	Kapa	5
0740	36	• 47 28 523		1998- US,CA	1	Washer	Bricka	5
0750	37	• 47 28 531		1998- US,CA	1	Filter retainer	Filterhållare	5
0760	38	• 47 28 549		1998- US,CA	1	Connection	Skarv	5
0770	39	• 47 29 091		1998- B204L, US,CA	1	Shut-off valve	Avstängningsventil	5
0780	40	• 47 29 109		1998- B204L, US,CA	1	Filter	Filter	5
0790	41	• 48 76 025		1998- US,CA	1	Seal	Tätning	
0800	42	• 49 40 631		1998- US,CA	1	Screw	Skruv	5
0810	43	• *49 61 561*		1) 1998- CV, US,CA NLS	1	Hose	Slang	8
0820	43	• *49 61 702*		1) 1998- US,CA NLS	1	Hose	Slang	8


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

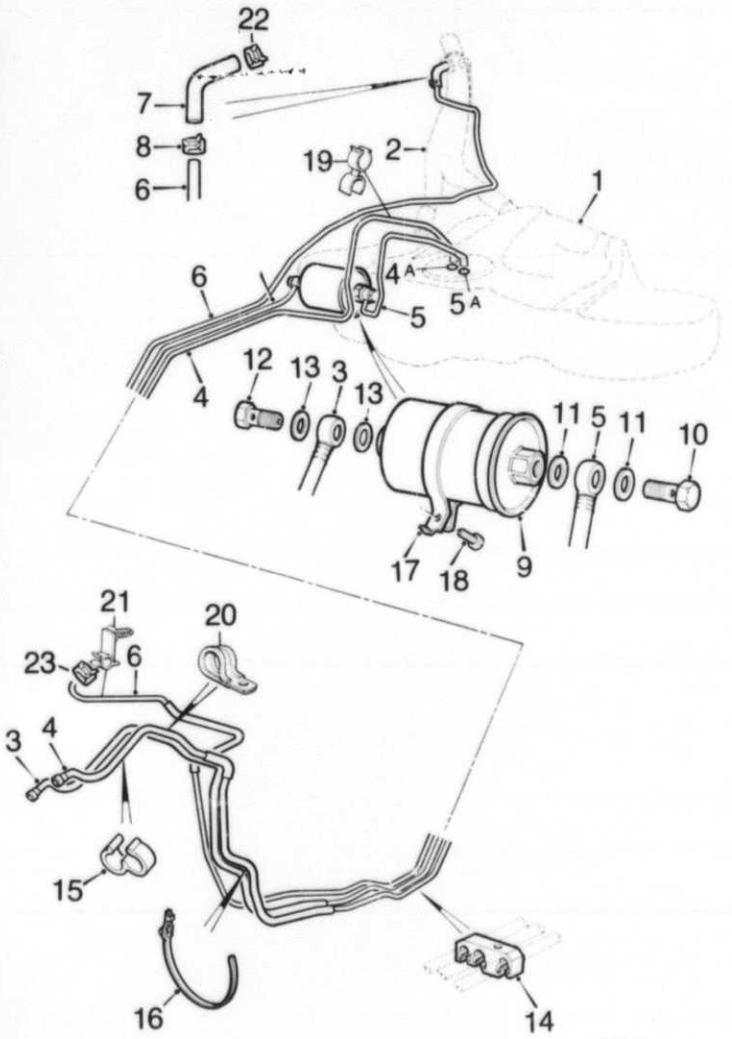

F8524 AAC94

Fuel system

1-E20

Fuel pipe
Fuel filter

Bränslesystem

Bränsleledning
Bränslefilter

0830	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-063, 1-E16	1	Tank	Tank	
0020	2			See page 2-063, 1-E16	1	Filler pipe	Påfyllningsrör	
0030	3	*42 26 890*		-1995, 4-CYL NLS – USE 4396891	1	Fuel pipe	Bränsleledning	5
0040	3	43 96 891		1996-, 4-CYL	1	Fuel pipe	Bränsleledning	8
0050	3	*42 27 021*		-1995, 6-CYL NLS – USE 4622619	1	Fuel pipe	Bränsleledning	5
0060	3	46 22 619		1996-1997, 6-CYL	1	Fuel pipe	Bränsleledning	8
0070	4	*42 26 932*		-1995, 4-CYL NLS – USE 4396909	1	Fuel pipe	Bränsleledning	5
0080	4	43 96 909		1996-, 4-CYL	1	Fuel pipe	Bränsleledning	8
0090	4	*42 27 047*		-1995, 6-CYL NLS – USE 4622627	1	Fuel pipe	Bränsleledning	5
0100	4	46 22 627		1996-1997, 6-CYL	1	Fuel pipe	Bränsleledning	8
0110	4A	79 74 546			2	.O-ring	.O-ring	8
0120	5	*42 26 916*		-1995 NLS – USE 4622635	1	Fuel pipe	Bränsleledning	5
0130	5	46 22 635		1996-	1	Fuel pipe	Bränsleledning	8
0140	5A	79 74 546			2	.O-ring	.O-ring	8
0150	6	*42 26 973*		-1995 NLS – USE 4622643	1	Tube	Rör	6
0160	6	46 22 643		1996-	1	Tube	Rör	8
0170	6	• 47 28 846		1998- US,CA	1	Tube	Rör	8
0180	7	42 26 759			1	.Hose	.Slang	5
0190	8	79 73 522			1	.Hose clamp	.Slangklamma	5
0200	9	41 63 853			1	Fuel filter	Bränslefilter	8
0210	10	43 74 211			1	Banjo bolt	Hålbult	5
0220	11	41 61 162			2	Seal	Tätning	5
0230	12	43 74 203			1	Banjo bolt	Hålbult	5
0240	13	44 43 883			2	Seal	Tätning	5
0250	14	42 29 985			9	Bracket	Fäste	5
0260	15	42 25 652			1	Hose clamp	Slangklammer	5
0270	16	79 84 750			1	Tensioning band	Spännband	5
0280	17	75 26 650			1	Bracket	Fäste	6
0290	18	79 22 537			1	Hexagon screw	Sexkantsskruv	
0300	19	93 84 298			1	Clamp	Klammer	5
0310	20	42 25 645			1	Hose clamp	Slangklämma	5
0320	21	42 27 849			1	Clip	Clips	
0330	22	79 77 697		1997-, US, CA	1	Hose clamp	Slangklamma	5
0340	23	79 77 697		1997-, US, CA	2	Hose clamp	Slangklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-E22

Fuel pump

Bränslepump

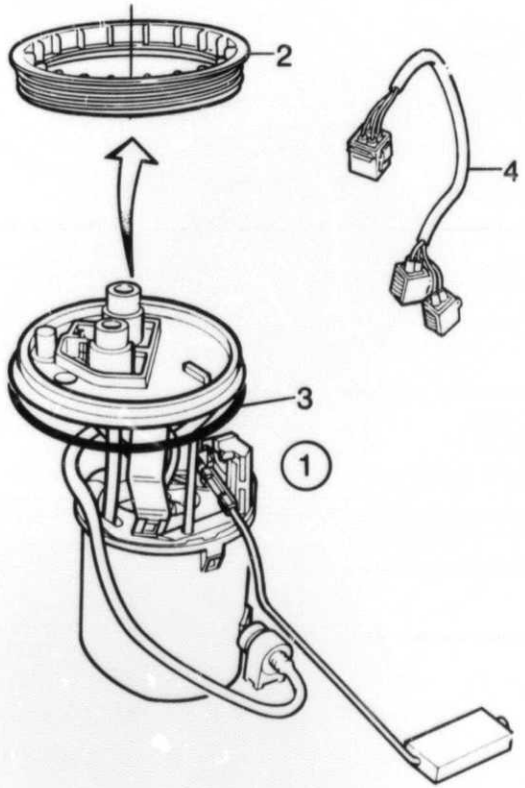

F5068 AAC94

0860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 017		-1997	1	Fuel pump	Bränslepump	8
0015	1	• 88 22 785		1998-	1	Fuel pump	Bränslepump	8
0020	1			1)	1	,Fuel pump	,Bränslepump	
0030	2	41 56 550			1	,Cover	,Lock	8
0040	3	41 60 511			1	,Seal	,Tätning	8
0050	4	44 08 480		-1995	1	,Connection	,Skarv	5
0060	4	45 83 951		1996,	1	,Connection	,Skarv	5
0070	4	44 08 480		1997,	1	,Connection	,Skarv	5
0080	4	*48 13 093*		1998- NLS	1	,Connection	,Skarv	5


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

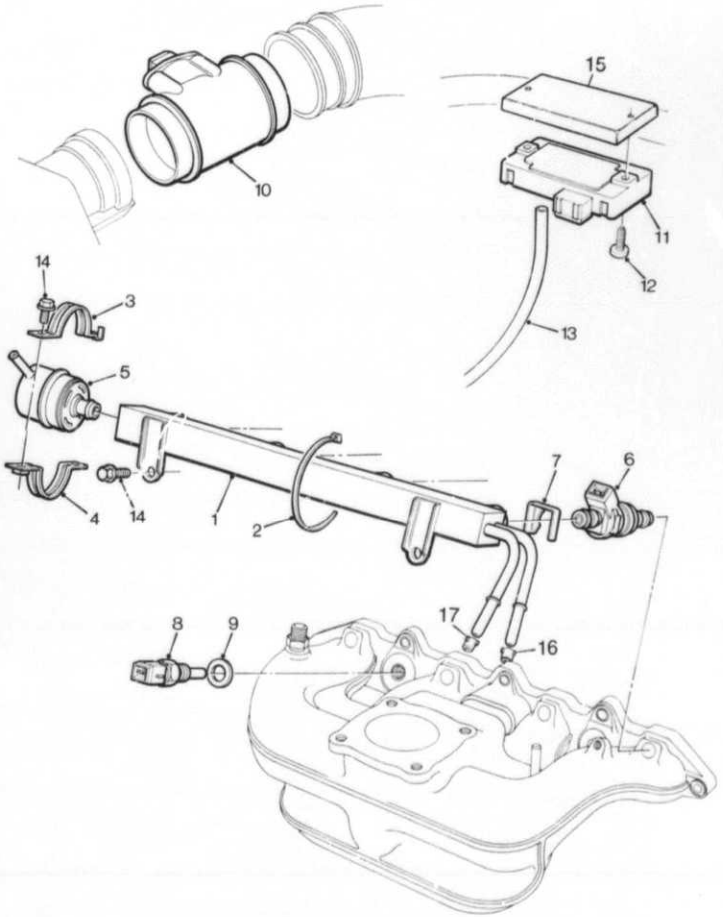

F7627 AAC94

Fuel system

1-E24 *Fuel rail 4-cylinder*

Bränslesystem

Bränslefördelningsrör 4-cylindrig

0900	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§
0010	1	91 45 939		124)	1	Fuel rail	Bränslefördelningsrör	8
0020	1	91 71 539		125)	1	Distribution pipe	Fördelningsrör	8
0030	2	79 71 872			3	Tensioning band	Spännband	5
0040	3	91 28 836		124)	1	Bracket	Fäste	5
0050	3	45 03 819		125)	1	Clamp	Klämma	5
0060	4	91 28 851		124)	1	Bracket	Fäste	5
0070	5	91 31 061		124)	1	Fuel pressure regulator	Bränsletryckregulator	8
0080	5	*45 03 793*		125) NLS – USE 4770400	1	Fuel pressure regulator	Bränsletryckregulator	8
0090	6	91 42 423		7), !	4	Injector	Insprutningsventil	8
0100	6	91 42 449		7), TURBO	4	Injector	Insprutningsventil	8
0110	7	93 56 486		-1997	4	Clamp	Klammer	5
0120	7	91 75 464		1998-	4	Clamp	Klammer	5
0130	8	91 37 803		-1995	1	Intake air temp. sensor	Temperaturgivare	4
0140	8	91 77 213		1996-	1	Intake air temp. sensor	Temperaturgivare	8
0150	9	*41 59 265*		NLS – USE 4443883	1	Seal	Tätning	5
0160	10			See page 2-059, 1 E12	1	Mass air flow sensor	Luftmassamätare	
0170	11	91 32 374		TURBO	1	Pressure sensor	Tryckgivare	8
0180	12	79 82 192		TURBO	1	Screw	Skruv	5
0190	13	41 64 141			1	Vaccum hose	Vakuumslang	3
0200	14	79 71 294		-1995	3	Screw	Skruv	5
0210	14	79 78 091		1996-, 124)	3	Screw	Skruv	5
0220	14	79 78 091		125)	1	Screw	Skruv	5
0230	15	42 39 968			1	Protecting cover	Skyddslock	
0240	16	42 29 738		Ø 7,9 MM	1	Bushing	Bussning	
0250	17	42 29 746		Ø 6,25 MM	1	Bushing	Bussning	


7. Also available as exchange unit. Finns även som utbytesenhet.
124. Engine -V018402.
125. Engine V018403-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

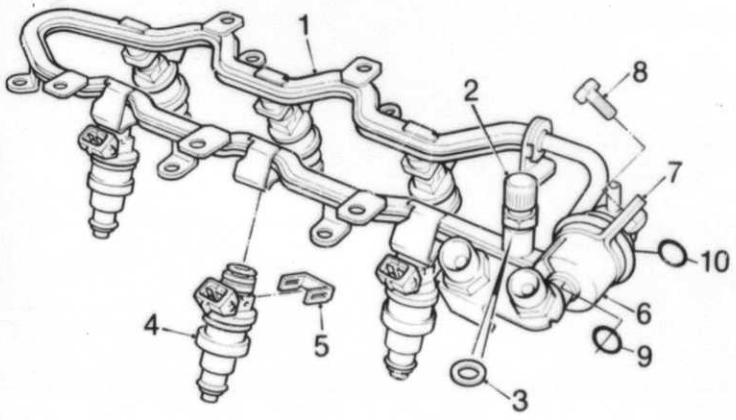

F8127 AAC94

Fuel system

1-F02 *Fuel rail -1997, 6-cylinder*

Bränslesystem

Bränslefördelningsrör -1997, 6-cylindrig

0905	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	45 03 728			1	Fuel rail	Bränslefördelningsrör	8
0020	2	45 03 744			1	.Valve	.Ventil	8
0030	3	45 03 751			1	.Washer	.Bricka	5
0040	4	45 03 777		7), -1995	6	Injector	Insprutningsventil	8
0050	4	47 70 392		7), 1996-	6	Injector	Insprutningsventil	8
0060	5	45 03 785			6	Spring clamp	Fjäderklämma	5
0070	6	*45 03 793*		-1995 NLS – USE 4770400	1	Fuel pressure regulator	Bränsletryckregulator	8
0080	6	47 70 400		1996-	1	Fuel pressure regulator	Bränsletryckregulator	8
0090	7	45 03 819			1	Clamp	Klämma	5
0100	8	45 03 835			1	Screw	Skruv	5
0110	9	47 70 442		1995-	1	Washer	Bricka	5
0120	10	47 70 434		1995-	1	Washer	Bricka	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Fuel system

1-F04 Engine control module MOTRONIC

Bränslesystem

Styrdon MOTRONIC

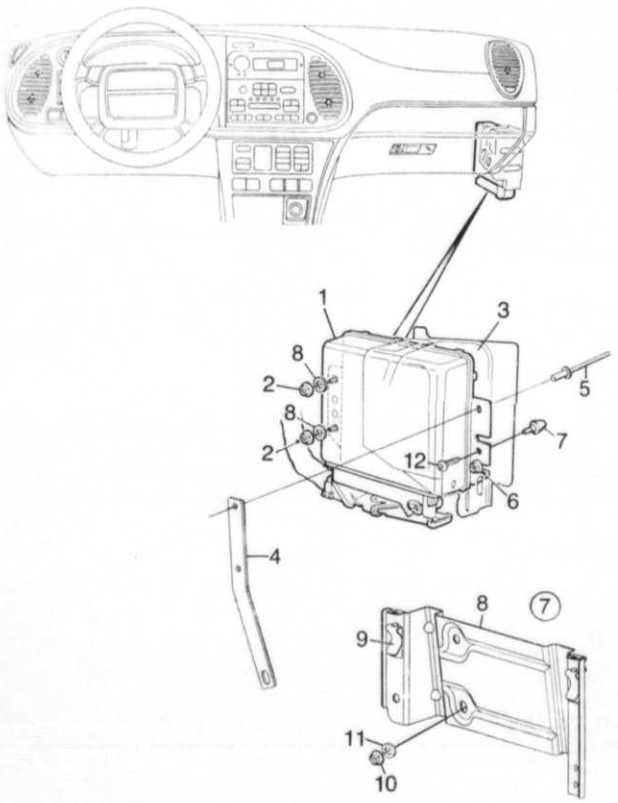

F7628 AAC94

0910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 46 663*		1994,7,10), B206I NLS – USE 4239638	1	Engine control module	Styrdon	3
0020	1	*91 32 697*		1994,7,10), B234I NLS – USE 4661906	1	Engine control module	Styrdon	3
0030	1	*42 39 257*		1994,7,10), B234i, SAI NLS – USE 4239646	1	Engine control module	Styrdon	3
0050	1	42 39 638		1995-,7,11)-1996, B204I	1	Engine control module	Styrdon	3
0060	1	46 61 922		7), 1997-, B204I	1	Engine control module	Styrdon	3
0070	1	43 02 709		7), 1996, B204I, VSS	1	Engine control module	Styrdon	3
0080	1	46 61 914		7), 1997-, B204I, VSS	1	Engine control module	Styrdon	3
0100	1	*42 39 653*		1995-1996,7,11), B234I NLS – USE 4661906	1	Engine control module	Styrdon	3
0110	1	46 61 906		7), 1997-, B234I	1	Electronic unit	Elektronikenhet	3
0120	1	*43 02 717*		7), 1996, B234I, VSS NLS - USE 4661898	1	Engine control module	Styrdon	3
0130	1	46 61 898		7), 1997-, B234I, VSS	1	Electronic unit	Elektronikenhet	3
0140	1	42 39 646		7,11), 1995-1996, B234I, SAI	1	Engine control module	Styrdon	3
0160	1	91 32 705		7), 1996, B234I, SAI, M, US, CA	1	Engine control module	Styrdon	8
0180	1	47 80 540		7), 1997-, B234I, M US, CA	1	Electronic unit	Elektroenhet	8
0200	1	43 02 501		7), 1996, B234I, SAI, A US, CA	1	Engine control module	Styrdon	8
0220	1	47 80 557		7), 1997-, B234I, A US, CA	1	Electronic unit	Elektroenhet	8
0250	1	42 39 018		7), -1996, B258I	1	Engine control module	Styrdon	3
0260	1	46 61 880		7), 1997, B258I	1	Electronic unit	Elektronikenhet	3
0270	1	*46 61 237*		7,99), 1996, B258I, CN NLS	1	Engine control module	Styrdon	
0275	1	47 80 201		7,99), 1997, B258I, CN	1	Electronic unit	Elektronikenhet	3
0280	1	*43 02 741*		7), 1996, B258I, VSS NLS - USE 4661872	1	Engine control module	Styrdon	3
0290	1	46 61 872		7), 1997, B258I, VSS	1	Electronic unit	Elektronikenhet	3
0300	1	42 28 037		7), -1996, B258I, SAI	1	Engine control module	Styrdon	3
0310	1	42 39 463		7), 1996, B258I, SAI, M, US, CA	1	Engine control module	Styrdon	8
0330	1	43 02 519		7), 1996, B258I, SAI, A US, CA	1	Engine control module	Styrdon	8
0350	1	47 80 532		7), 1997, B258I, SAI, A US, CA	1	Electronic unit	Elektroenhet	8
0380	2	79 77 929		-1995	3	Nut	Mutter	5
0390	3	40 10 138		-1995	1	Bracket	Hållare	5
0400	4	45 26 356		-1995, CV	1	Attaching plate	Fästbleck	5
0410	5	79 72 490		-1995, CV	2	Rivet	Nit	5
0430	7	46 61 831		1996-	1	Bracket	Konsol	
0440	8	46 62 276			1	.Bracket	.Konsol	
0450	9	46 62 284			2	.Clip	.Clips	
0460	10	79 77 929		1996-	2	Nut	Mutter	5
0470	11	80 73 108		1996-	2	Washer	Bricka	5
0480	12	79 78 638		1996-	1	Screw	Skruv	5


7. Also available as exchange unit. Finns även som utbytesenhet.
10. CV, ch. -S7009999
11. CV, ch. S7010000-
99. For low octane fuel. För lågoktanigt bränsle.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

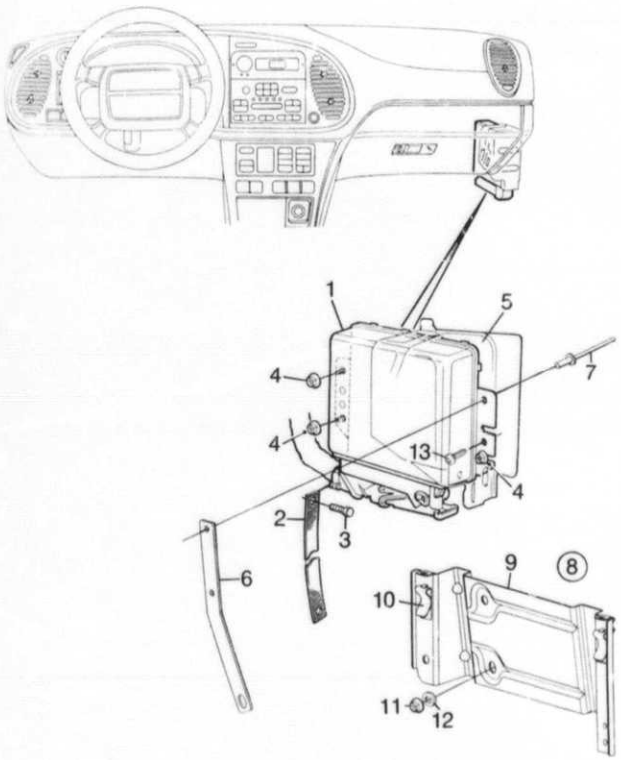

F7629 AAC94

Fuel system

1-F06 *Engine control module TRIONIC*

Bränslesystem

Styrdon TRIONIC

0912	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 32 671		1994,7,10), B204L	1	Engine control module	Styrdon	3
0020	1	44 45 318		1995,7,11), B204L, M	1	Engine control module	Styrdon	3
0030	1	91 32 689		1996-,7,97), B204L, M, US, CA	1	Engine control module	Styrdon	8
0040								
0050	1	46 62 565		7,98)-1996, B204L, M, US, CA	1	Engine control module	Styrdon	8
0060								
0070	1	47 80 276		7)1997, B204L, M, US,CA	1	Electronic unit	Elektroenhet	8
0080	1	• 47 81 043		7)1998-, B204L, M, US,CA	1	Engine control module	Styrdon	3
0090	1	42 39 828		1995,7,11), B204L, A	1	Engine control module	Styrdon	3
0100	1	46 62 185		7), 1996-, B204L, A	1	Engine control module	Styrdon	3
0110	1	42 39 919		7),1996, B204L,A, US,CA	1	Engine control module	Styrdon	8
0120	1	47 80 284		7),1997, B204L,A, US,CA	1	Electronic unit	Elektroenhet	8
0130	1	• 47 81 050		7),1998- B204L,A, US,CA	1	Engine control module	Styrdon	3
0140								
0150	1	42 39 273		1994,7,10,24), B204L	1	Engine control module	Styrdon	3
0160	1	42 39 281		1995-,7,11,24,144), B204L, M	1	Engine control module	Styrdon	3
0170								
0180	1	47 81 779		145,7), B204L, M	1	Engine control module	Styrdon	3
0190	1	43 02 725		1996-,7,24,144) B204L,M, VSS	1	Engine control module	Styrdon	3
0200								
0210	1	47 81 761		145,7),B204L,M, VSS	1	Engine control module	Styrdon	3
0220								
0230	1	42 39 810		1995,7,11,24), B204L, A	1	Engine control module	Styrdon	3
0240	1	46 62 177		1996,7,24), B204L, A	1	Engine control module	Styrdon	3
0250	1	47 81 209		1997-,7,24,144) B204L, A	1	Engine control module	Styrdon	3
0260								
0270	1	47 81 795		145,7)B204L, A	1	Engine control module	Styrdon	3
0280	1	43 02 733		1996,7,24),B204L,A, VSS	1	Engine control module	Styrdon	3
0290	1	47 81 225		1997-,7,24,144) B204L,A, VSS	1	Engine control module	Styrdon	3
0300								
0310	1	47 81 787		145,7),B204L,A	1	Engine control module	Styrdon	3
0320								
0330	2	43 01 677			1	.Ground cable	.Jordkabel	6
0340	3	79 22 354			1	.Screw	.Skruv	5
0350	4	79 77 929		-1995	3	Nut	Mutter	5
0360	5	40 10 138		-1995	1	Bracket	Hållare	5
0370	6	45 26 356		-1995, CV	1	Attaching plate	Fästblock	5
0380	7	79 72 490		-1995, CV	2	Rivet	Nit	5
0390								
0400	8	46 61 831		1996-	1	Bracket	Konsol	
0410	9	46 62 276			1	.Bracket	.Konsol	
0420	10	46 62 284			2	.Clip	.Clips	
0430	11	79 77 929		1996-	2	Nut	Mutter	5
0440	12	80 73 108		1996-	2	Washer	Bricka	5
0450	13	79 78 638		1996-	1	Screw	Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.
10. CV, ch. -S7009999
11. CV, ch. S7010000-
24. For cars with intake air heat plate. För bilar med värmeplatta.
97. Ch -T2012122, -T7002053.
98. Ch T2012123-, T7002054-.
144. Ch. -V2029138.
145. Ch. V2029139-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-F08

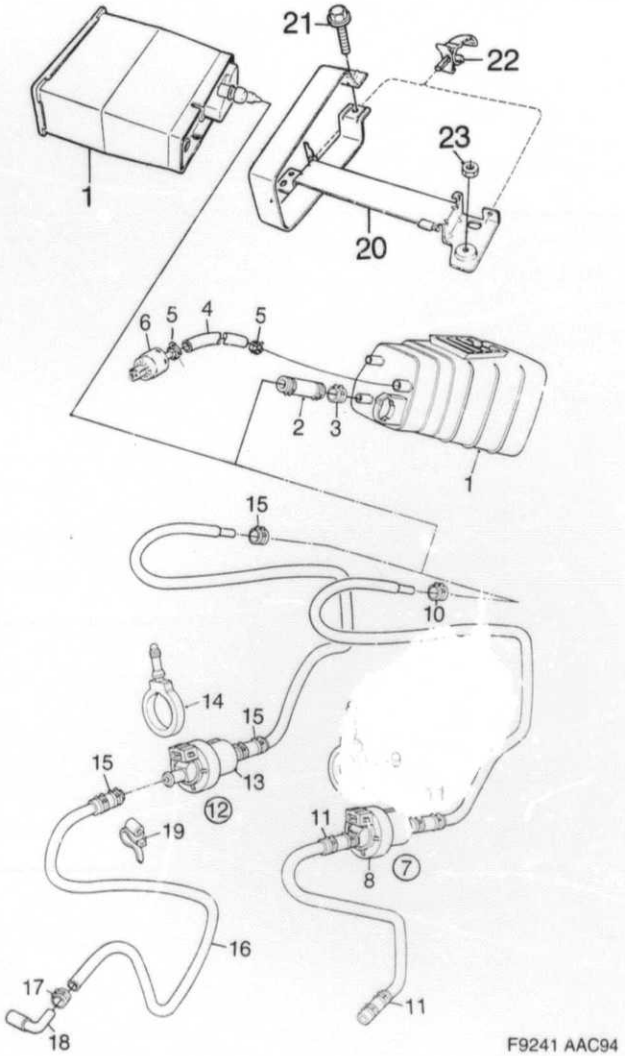

F9241 AAC94

0955	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 26 601		-1995	1	Carbon filter	Kolfilter	3
0020	1	44 45 821		1996-	1	EVAP canister	Kolfilter	8
0030	1	• 47 27 343		1998- US,CA	1	EVAP canister	Kolfilter	8
0040	2	75 39 349			2	.Hose	.Slang	5
0050	3	79 73 522		-1996	1	.Hose clamp	.Slangklamma	5
0060	3	83 32 587		1997-	1	.Hose clamp	.Slangklamma	5
0070	4	43 96 701		109)	1	Hose	Slang	8
0080	4	44 44 816		-1997, 6-CYL.	1	Hose	Slang	8
0090	5	79 74 009			X	Hose clamp	Slangklamma	5
0100	6	44 44 824		US,CA.-1996	1	Shut-off valve	Avstängningsventil	8
0110	6	48 99 811		US,CA.1997-	1	Shut-off valve	Avstängningsventil	8
0120	7	42 27 005		4-CYL.	1	Vent hose	Urluftningsledning	6
0130	7	• 47 51 566		1998- US,CA	1	Vent hose	Urluftningsledning	6
0140	8	44 42 471			1	.EVAP canister purge valve	.Urluftningsventil	8
0150	9	42 28 029			1	.Mounting ring	.Upphängningsring	5
0160	10	79 77 697			2	.Hose clamp	.Slangklamma	5
0170	11	79 73 522			4	.Hose clamp	.Slangklamma	5
0180								
0190	12	43 95 968		-1997, 6-CYL.	1	Vent hose	Urluftningsledning	6
0200	13	44 42 489		-1997	1	.EVAP canister purge valve	.Urluftningsventil	8
0210	14	42 28 029		-1997	1	.Mounting ring	.Upphängningsring	5
0220	15	79 73 522			X	Hose clamp	Slangklamma	5
0230	16	42 27 906			1	Hose	Slang	5
0240	17	79 73 522			1	.Hose clamp	.Slangklamma	5
0250	18	93 85 121			1	.Hose	.Slang	5
0260	19	79 84 750			1	.Tensioning band	.Spännband	5
0270	20	• 47 27 350		1998- US,CA	1	Bracket	Konsol	
0280	21	79 78 117		1998- US,CA	1	Screw	Skruv	5
0290	22	• 49 42 538		1998- US,CA	2	Clip	Clips	
0300	23	80 73 512		1998- US,CA	3	Lock nut	Låsmutter	3


109. Without evaporator system. Utan avdunstningssystem.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

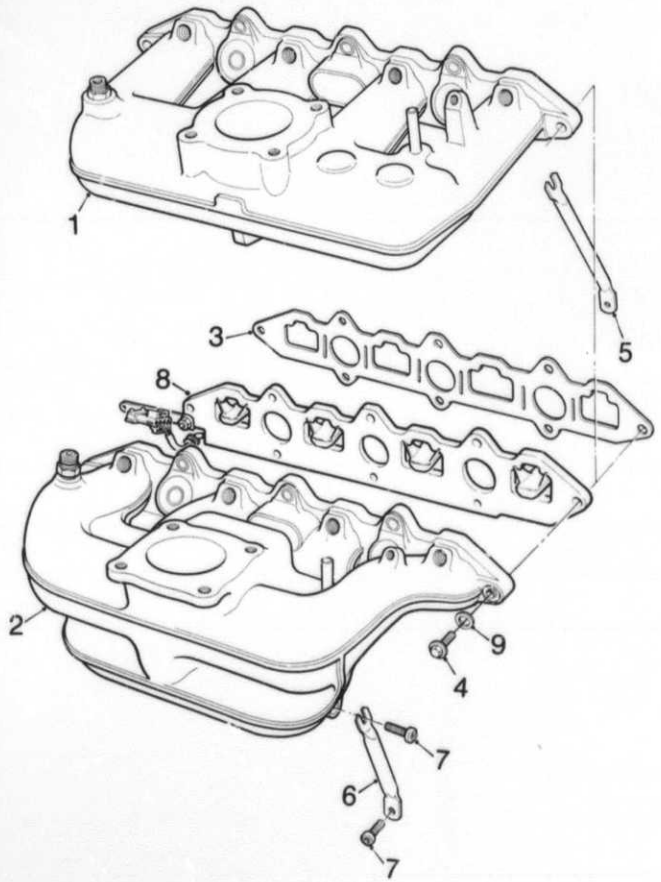

F8587 AAC94

Inlet and exhaust system

1-F10 *Intake manifold* 4-cylinder

Inlopps- och avgassystem

Inloppsrör 4-cylindrig

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 65 952		I	1	Intake manifold	Inloppsrör	8
0020	2	91 65 945		TURBO	1	Intake manifold	Inloppsrör	8
0030	3	91 38 884			1	Gasket	Packning	
0040	3	91 38 884		24,146)	2	Gasket	Packning	
0050	4	79 70 015		1994	8	Screw	Skruv	5
0060	4	40 87 805		1995-,122)	8	Screw	Skruv	5
0070	4	79 78 224		123)	8	Screw	Skruv	5
0080	5	91 48 768		I	1	Stay	Stag	6
0090	6	91 48 776		TURBO	1	Stay	Stag	6
0100	6	91 66 711		24,	1	Stay	Stag	6
0110	7	*80 59 768*		-1995 NLS – USE 7978075	2	Screw	Skruv	5
0120	7	79 78 182		1996-	2	Screw	Skruv	5
0130	8	*91 48 065*		1994,10,24) NLS	1	Intake air heat plate	Värmeplatta	
0140	8	91 66 000		1995-,11,24,146)	1	Intake air heat plate	Värmeplatta	
0150	9	80 29 985		24,122)	8	Washer	Bricka	5

10. CV, ch. -S7009999
11. CV, ch. S7010000-
24. For cars with intake air heat plate. För bilar med värmeplatta.
122. Engine -V002000.
123. Engine V002001-.
146. Engine -V054178.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-F12

Intake manifold
-1997, 6-cylinder

Inloppsrör
-1997, 6-cylindrig

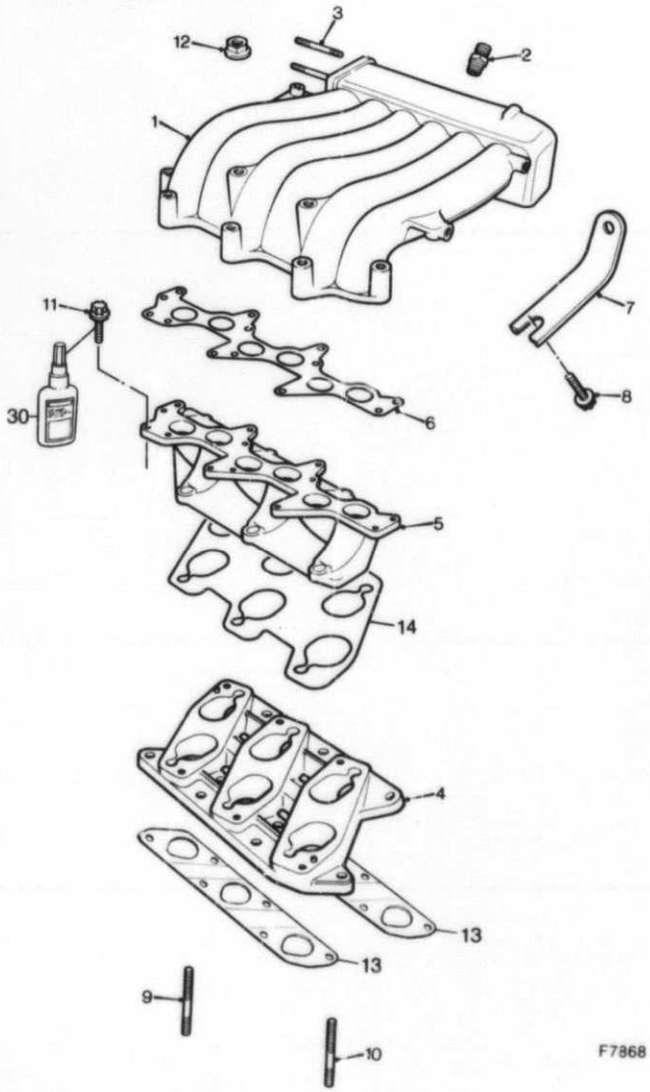

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 207			1	Intake manifold	Inloppsrör	8
0020	2	43 46 508			1	.Nipple	.Nippel	5
0030	3	45 03 256			4	.Stud	.Pinnskruv	5
0040	4	46 20 118			1	Flange	Fläns	8
0050	5	45 03 850			1	Intake manifold	Inloppsrör	8
0060	6	45 03 512			1	Gasket	Packning	8
0070	7	45 03 546			1	Stay	Stag	6
0080	8	43 46 854			2	Screw	Skruv	5
0090	9	45 03 868		M8X61MM	5	Stud	Pinnskruv	5
0100	10	45 03 876		M8X96MM	2	Stud	Pinnskruv	5
0110	11	45 01 110			10	Screw	Skruv	5
0120	12	45 03 538			7	Nut	Mutter	3
0130	13	45 04 973			2	Gasket	Packning	8
0140	14	45 04 965			1	Gasket	Packning	8
0150	30	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0160						normal	normal	
0170						blue	blå	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-F14

Throttle body
4-cylinder

Spjällhus
4-cylindrig

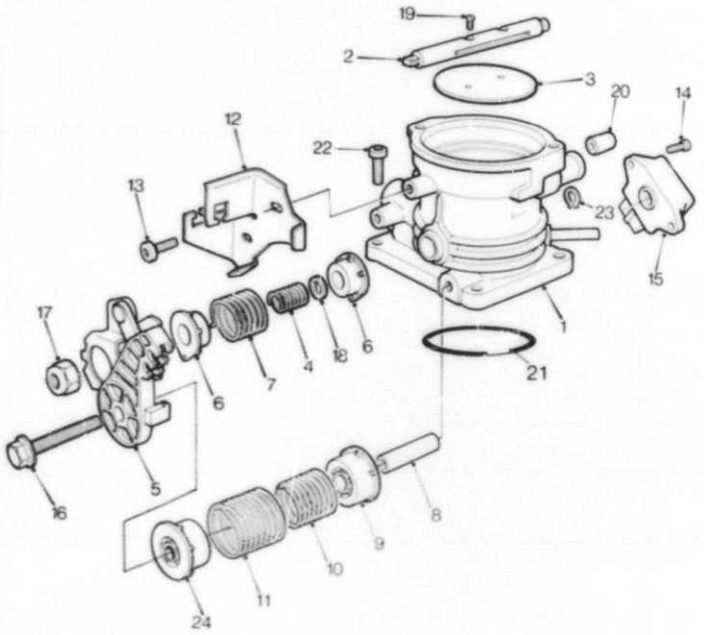

F9240 AAC94

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 66 612		I	1	Throttle body	Spjällhus	8
0020	1	91 66 596		TURBO	1	Throttle body	Spjällhus	8
0030	2	*91 49 485*		114) NLS – USE 9181025	1	Shutter shaft	Spjällaxel	6
0040	2	91 81 025		115)	1	Shutter shaft	Spjällaxel	6
0050	3	*91 49 626*		57) NLS – USE 9173774	1	Throttle disc	Spjällskiva	6
0060	3	91 73 774		58)	1	Throttle disc	Spjällskiva	6
0070	4	91 48 560			1	Compression spring	Tryckfjäder	5
0080	5	91 66 901			1	Lever	Hävarm	6
0090	6	91 66 943			2	Spring retainer	Fjäderhållare	5
0100	7	91 66 950			1	Torsion spring	Vridfjäder	5
0110	8	*91 49 576*		-1996 NLS – USE 9185422	1	Bearing sleeve	Lagerhylsa	5
0120	8	91 85 422		1997-	1	Bearing sleeve	Lagerhylsa	5
0130	9	91 67 487			1	Spring retainer	Fjäderhållare	5
0140	10	91 71 182			1	Torsion spring	Vridfjäder	5
0150	11	91 71 190			1	Torsion spring	Vridfjäder	5
0160	12	91 67 008			1	Bracket	Konsol	5
0170	13	80 59 560		-1995	2	Screw	Skruv	5
0180	13	81 25 015		1996	2	Screw	Skruv	5
0190	13	79 85 930		1997-	2	Screw	Skruv	5
0200	14	80 59 230			2	Screw	Skruv	5
0210	15	88 57 195		-1995	1	Throttle position sensor	Lägesgivare	8
0220	15	46 61 062		1996	1	Throttle position sensor	Lägesgivare	6
0230	15	91 81 538		1997-	1	Potentiometer	Potentiometer	6
0240	16	*79 85 070*		-1996 NLS – USE 7987175	1	Flange screw	Flänsskruv	5
0250	16	79 87 175		1997-	1	Flange screw	Flänsskruv	5
0260	17	80 74 288			1	Nut	Mutter	5
0270	18	91 65 978			2	Plain washer	Planbricka	5
0280	19	80 57 259			2	Screw	Skruv	5
0290	20	*83 60 463*		NLS – USE 8335614	2	Plug	Plugg	6
0300	21	91 38 702			1	O-ring	O-ring	2
0310	22	80 59 586			4	Screw	Skruv	5
0320	23	80 47 649			1	Retaining ring	Spärring	5
0330	24	91 67 495			1	Spring retainer	Fjäderhållare	5

57. Engine -S013639.
58. Engine S013640-.
114. Engine -V003481.
115. Engine V003482-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-F16

Throttle body
-1997, 6-cylinder

Spjällhus
-1997, 6-cylindrig

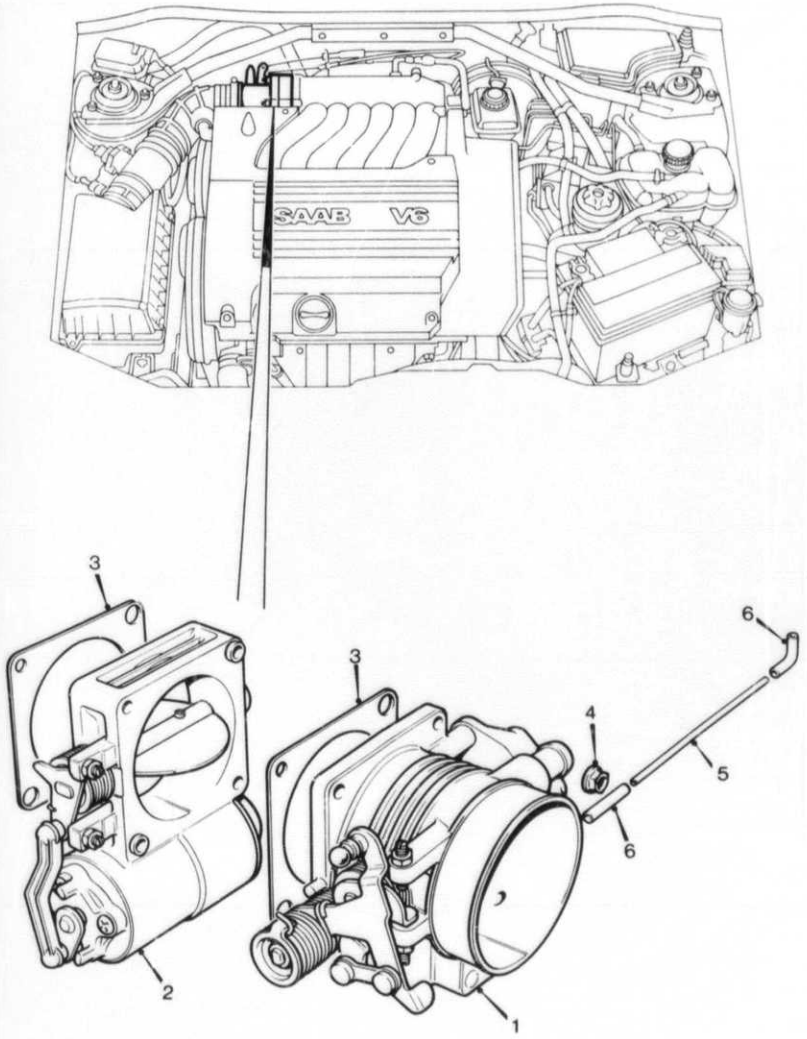

F5077 AAC94


1120	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	45 03 298			1	Electr. throttle actuator	Spjällhus	8
0020	2	45 03 306		-1996	1	Electr. throttle actuator	Spjällhus	8
0030	2	* 49 02 300		1997-	1	Electr. throttle actuator	Spjällhus	8
0040	3	45 03 504			2	Gasket	Packning	8
0050	4	45 03 330			4	Nut	Mutter	5
0060	5	45 04 908			1	Vacuum pipe	Vakuumrör	4
0070	6	45 03 488			2	Hose	Slang	4
0080	7	83 35 614			1	Plug	Propp	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

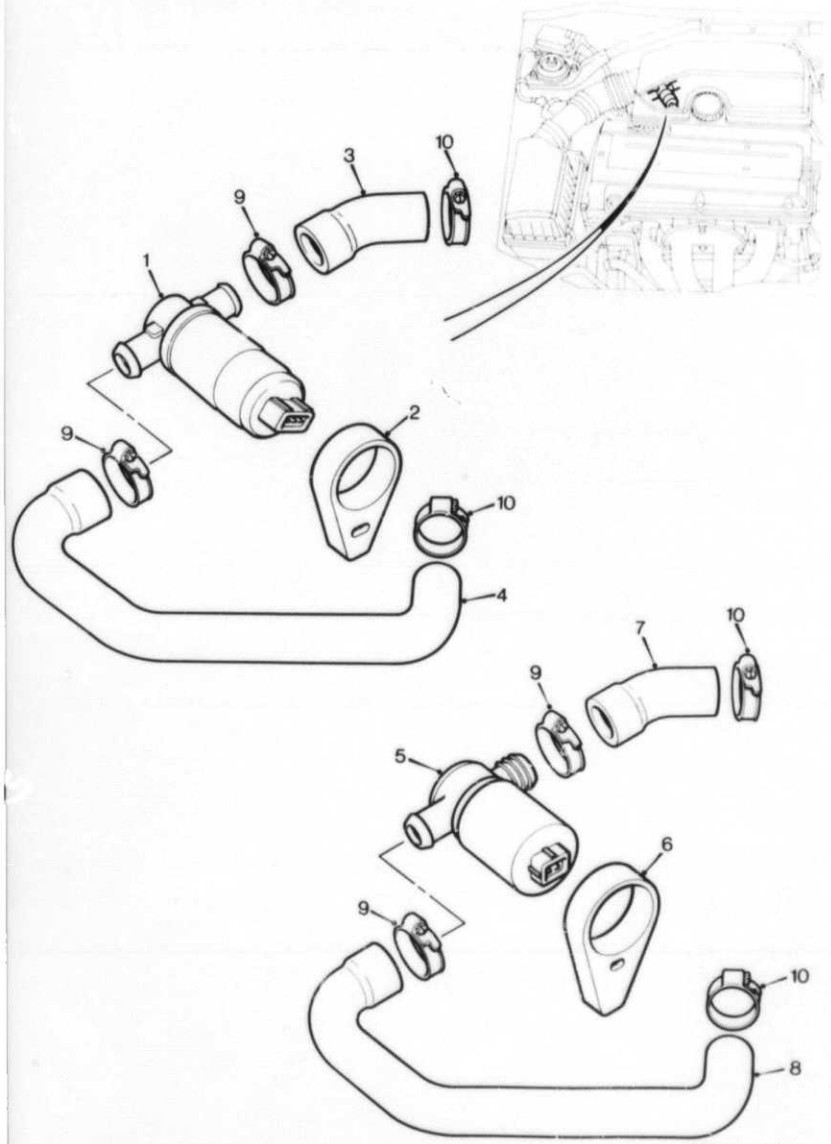


1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 87 996		-1995, I	1	Idle air control valve	Reglerventil	4
0020	1	87 87 996		1996-, I	1	Idle air control valve	Reglerventil	4
0030	1	91 34 743		1996-, I, US, CA	1	Idle air control valve	Reglerventil	8
0040	2	91 49 931		-1995, I	1	Holder	Hallare	5
0050	2	91 49 931		1996-, I	1	Holder	Hallare	5
0060	2	91 76 314		1996-, I, US, CA	1	Holder	Hallare	
0070	3	91 38 611		-1995, I	1	Hose	Slang	5
0080	3	91 38 611		1996-, I	1	Hose	Slang	5
0090	3	91 76 306		1996-, I, US, CA	1	Hose	Slang	8
0100	4	91 41 847		-1995, I	1	Hose	Slang	5
0110	4	91 41 847		1996-, I	1	Hose	Slang	5
0120	4	91 76 298		1996-, I, US, CA	1	Hose	Slang	8
0130								
0140	5	91 27 200		TURBO	1	Idle air control valve	Reglerventil	4
0150	6	91 49 949		TURBO	1	Holder	Hallare	5
0160	7	91 38 660		TURBO, -1996	1	Hose	Slang	5
0170	7	91 87 196		TURBO, 1997-	1	Hose	Slang	5
0180	8	*91 41 854*		TURBO, -1996 NLS - USE 9187204	1	Hose	Slang	5
0180								
0190	8	91 87 204		TURBO, 1997-	1	Hose	Slang	5
0200	9	79 70 098		TURBO	2	Hose clamp	Slangklamma	5
0210	10	79 70 080		TURBO	2	Hose clamp	Slangklamma	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

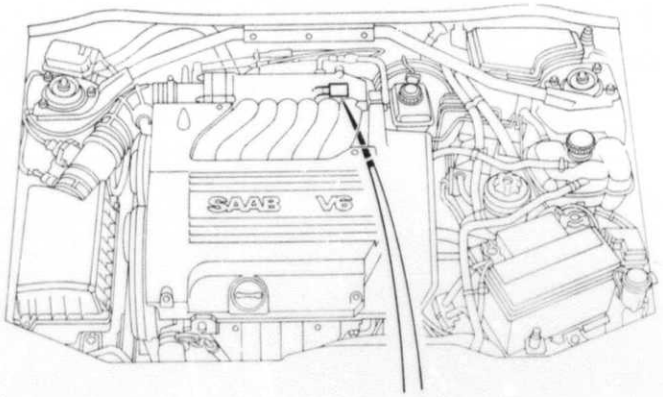

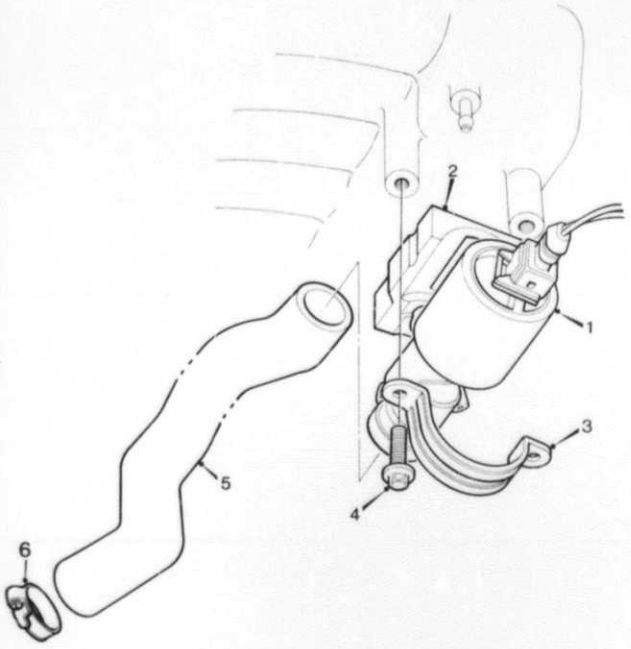

F7631 AAC94

Inlet and exhaust system

1-F20 IAC -1997, 6-cylinder

Inlopps- och avgassystem

IAC -1997, 6-cylindrig

1160


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	75 86 019			1	Idle air control valve	Reglerventil	4
0020 2	*45 03 371*		-1995 NLS – USE 4780151	1	Bracket	Fäste	5
0030 2	*46 60 551*		1996 NLS – USE 4780151	1	Bracket	Konsol	
0040 2	47 80 151		1997-	1	Bracket	Konsol	
0050 3	45 03 389			1	Clamp	Klämma	5
0060 4	45 03 405			2	Screw	Skruv	5
0070 5	45 03 413		-1995	1	Hose	Slang	4
0080 5	46 60 577		1996-	1	Hose	Slang	4
0090 6	79 70 080		1996-, US, CA	1	Hose clamp	Slangklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

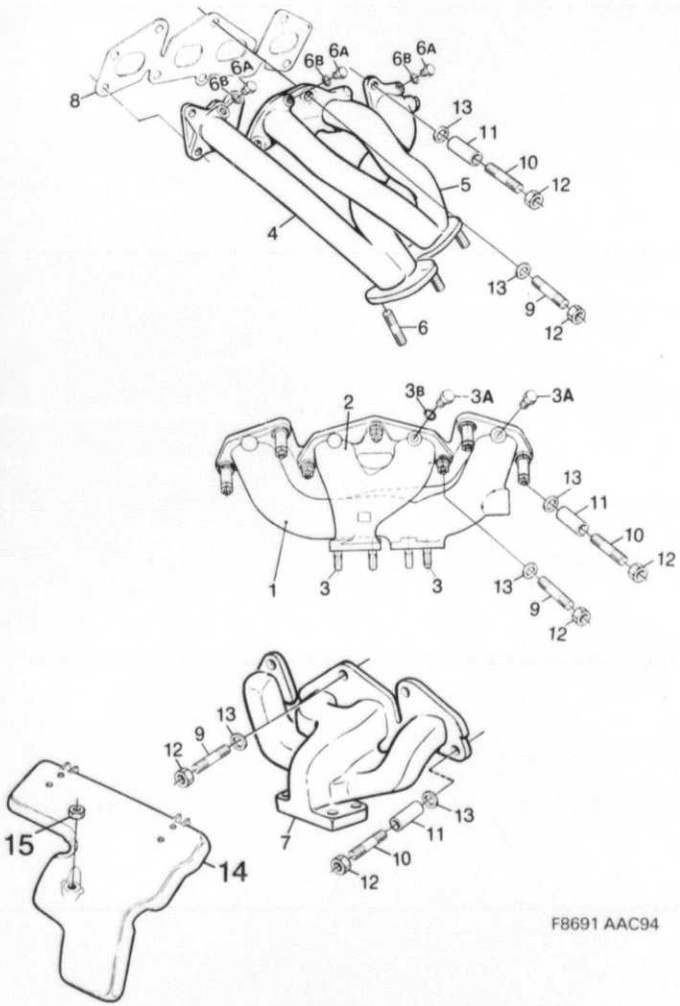

F8691 AAC94

Inlet and exhaust system

1-F22 Exhaust manifold 4-cylinder

Inlopps- och avgassystem

Avgassamlare 4-cylindrig

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 22 074*		1994, B206I M NLS – USE 9177106	1	Exhaust manifold	Avgassamlare	8
0020	1	*91 68 709*		1994, B206I A NLS	1	Exhaust manifold	Avgassamlare	8
0030	1	*88 22 074*		138) B204I NLS – USE 9177106	1	Exhaust manifold	Avgassamlare	8
0040	1	*88 22 074*		137,138) B234I NLS – USE 9177106	1	Exhaust manifold	Avgassamlare	8
0050	1	91 77 106		139)	1	Exhaust manifold	Avgassamlare	8
0060	2	*88 22 066*		1994, B206I M NLS – USE 9177098	1	Exhaust manifold	Avgassamlare	8
0070	2	*91 68 568*		1994, B206I A NLS	1	Exhaust manifold	Avgassamlare	8
0080	2	*88 22 066*		138) B204I NLS – USE 9177098	1	Exhaust manifold	Avgassamlare	8
0090	2	*88 22 066*		137,138) B234I NLS – USE 9177098	1	Exhaust manifold	Avgassamlare	8
0100	2	91 77 098		139)	1	Exhaust manifold	Avgassamlare	8
0110	3	83 60 943			2	.Stud screw	.Pinnbult	5
0120	3A	81 23 713			2	.Screw	.Skruv	5
0130	3B	81 24 133			2	.Gasket	.Packning	5
0150	4	91 69 319		136) B234I	1	Exhaust manifold	Avgassamlare	3
0160	5	91 69 301		136) B234I	1	Exhaust manifold	Avgassamlare	3
0170	6	80 00 622			2	.Stud	.Pinnskruv	5
0180	6A	81 23 713			2	.Screw	.Skruv	5
0190	6B	81 24 133			2	.Gasket	.Packning	5
0210	7	91 45 772		-1996 TURBO	1	Exhaust manifold	Avgassamlare	8
0220	7	91 76 900		1997- TURBO	1	Exhaust manifold	Avgassamlare	
0240	8	91 66 497			1	Gasket	Packning	8
0250	9	79 85 146			4	Stud screw	Pinnbult	5
0260	9	79 85 146		B206I M, A	3	Stud screw	Pinnbult	5
0270	9	79 85 146		TURBO	3	Stud screw	Pinnbult	5
0280	10	79 85 161			6	Stud screw	Pinnbult	5
0290	10	79 85 161		B206I M, A	4	Stud screw	Pinnbult	5
0300	10	79 85 161		TURBO	4	Stud screw	Pinnbult	5
0310	11	93 06 812			6	Spacer sleeve	Distanshylsa	3
0320	11	93 06 812		B206I M, A	4	Spacer sleeve	Distanshylsa	3
0330	11	93 06 812		TURBO	4	Spacer sleeve	Distanshylsa	3
0340	12	91 69 277			10	Nut	Mutter	3
0350	12	91 69 277		B206I M, A	7	Nut	Mutter	3
0360	12	91 69 277		TURBO	7	Nut	Mutter	3
0370	13	91 66 398			10	Washer	Bricka	5
0380	13	91 66 398		B206I M, A	7	Washer	Bricka	5
0390	13	91 66 398		TURBO	7	Washer	Bricka	5
0400	14	91 76 223		TURBO	1	Heat shield	Värmesköld	
0410	14	* 91 80 233		1998-, I	1	Heat shield	Värmesköld	
0420	15	91 69 277		TURBO	1	Nut	Mutter	3
0430	15	79 65 767		1998-, I	1	Lock nut	Låsmutter	3


136. Engine –R164286
137. Engine R164287–
138. Engine –S064272
139. Engine S064273–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I09
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

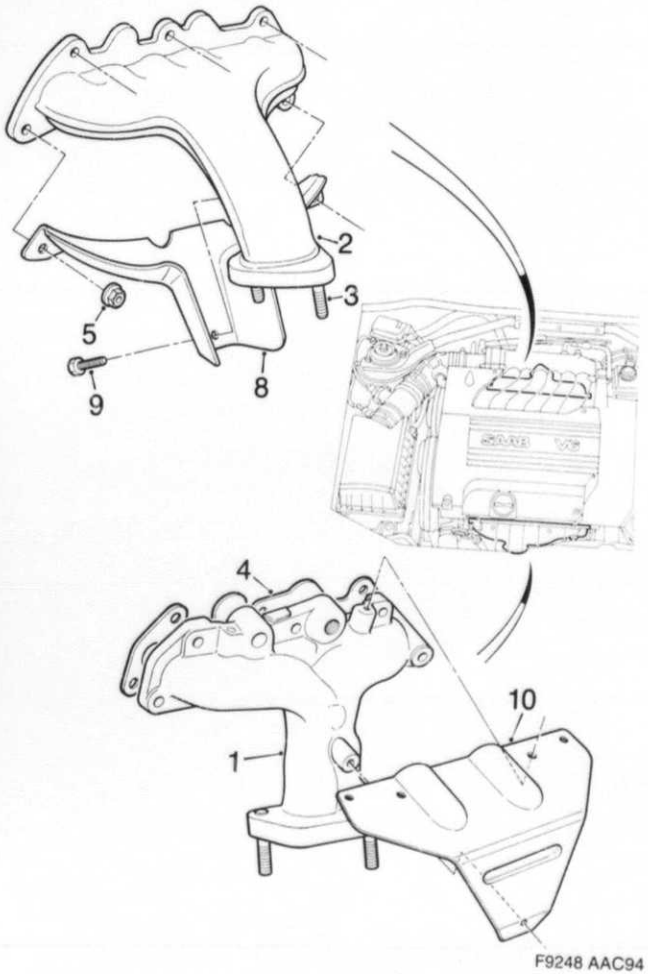

Inlet and exhaust system

1-F24

Exhaust manifold

-1997, 6-cylinder

Inlopps- och avgassystem

Avgassamlare

-1997, 6-cylindrig

1250	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	45 03 587		CYL 2,4,6	1	Exhaust manifold	Avgassamlare	8
0020	1	45 03 579		SAI, CYL 2,4,6	1	Exhaust manifold	Avgassamlare	8
0030	2	45 04 734		1994,10), CYL 1,3,5	1	Exhaust manifold	Avgassamlare	3
0040	2	46 24 151		1995-,11),CYL 1,3,5	1	Exhaust manifold	Avgassamlare	8
0050	2	45 04 742		SAI, CYL 1,3,5	1	Exhaust manifold	Avgassamlare	8
0060	3	45 03 629			2	,Stud screw	,Pinnbult	5
0070	4	45 03 652			2	Gasket	Packning	8
0080	5	45 03 538			14	Nut	Muttor	3
0090	8	44 43 313			1	Heat shield	Värmesköld	3
0100	9	79 78 182			1	Screw	Skruv	5
0110	10			See page 2-157, 1-I14	1	Cover	Avtäckning	

10. CV, ch. -S7009999
11. CV, ch. S7010000-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G02 SAI Air pump / SAI Luftpump

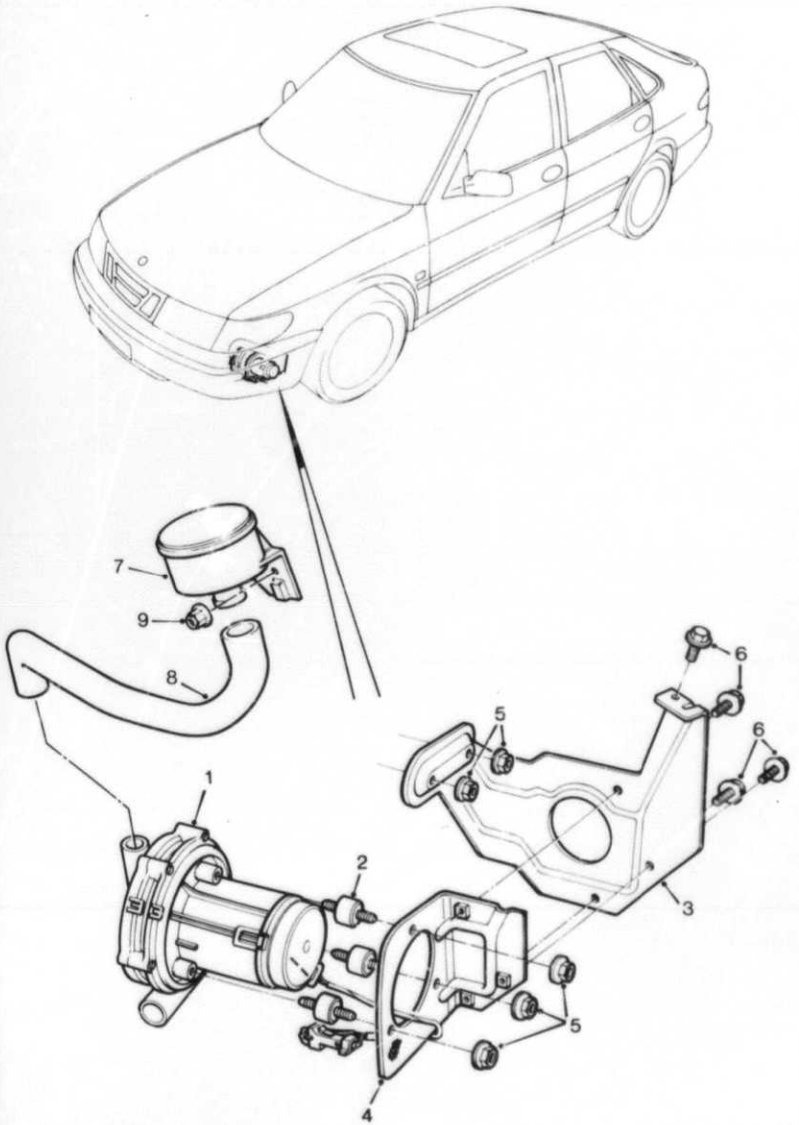

F5082 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	42 39 083			1	Sec. air inj. pump	Insprutningspump	8
2	42 35 768		107)	1	Rubber spacer	Gummidistans	4
2	42 35 768		108)	4	Rubber spacer	Gummidistans	4
3	*42 29 423*		89) NLS – USE 4779104	1	Support	Stöd	
3	*47 78 528*		90,107) NLS – USE 4779104	1	Support	Stöd	
3	47 79 104		108)	1	Support	Stöd	
4	42 39 117			1	Bracket	Konsol	
5	79 77 929		107)	5	Nut	Mutter	5
5	79 77 929		108)	6	Nut	Mutter	5
6	79 78 109		107)	4	Screw	Skruv	5
6	79 78 109		108)	3	Screw	Skruv	5
7	42 27 468			1	Air filter	Luftfilter	8
8	42 27 450			1	Hose	Slang	
9	40 87 128			1	Plastic nut	Plastmutter	5

89. Ch. -T2007475, -T7001856
90. Ch. T2007476-, T7001857-
107. Ch -T7006321.
108. Ch T7006322-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G04

SAI
Shut-off valve

SAI
Avstängningsventil

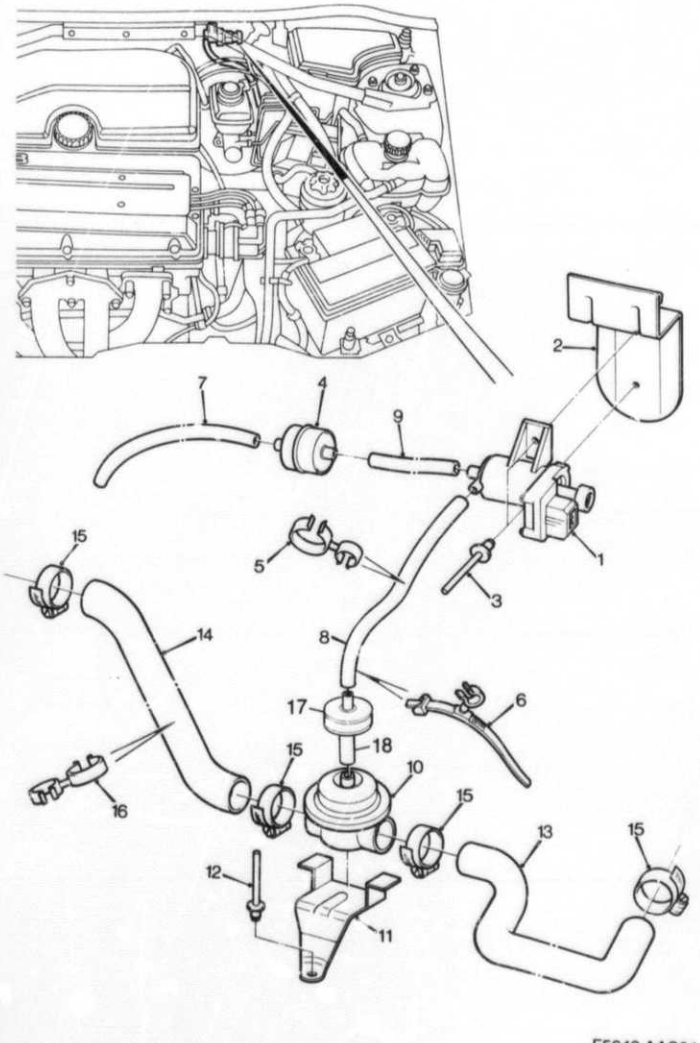

F5649 AAC94

1355

Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
1	43 94 078			1	AIR control valve	Reglerventil	
2	42 26 098			1	Bracket	Konsol	
3	79 72 516			2	Rivet	Nit	5
4	*40 23 297*		NLS – USE 4301669	1	Non-return valve	Backventil	5
5	75 39 984			3	Clamp	Klammer	5
6	73 98 456		-1997, B258	1	Clamp	Klämma	5
6	73 98 977		-1996, B234	2	Tensioning band	Spännband	5
7	91 36 243		L=480 MM	X	Vacuum hose	Vakuumslang	5
8	91 36 243		L=1000 MM	X	Vacuum hose	Vakuumslang	5
9	91 36 243		L=40 MM	X	Vacuum hose	Vakuumslang	5
10	42 28 011			1	AIR switching valve	Fördelningsventil	8
11	43 94 912			1	Bracket	Konsol	
12	73 99 348			1	Rivet	Nit	5
13	43 60 350			1	Hose	Slang	
14	43 60 368		-1997, B258	1	Hose	Slang	
14	43 60 335		-1996, B234	1	Hose	Slang	
15	79 70 072		-1996, B234	4	Hose clamp	Slangklamma	5
15	79 70 072		-1996, B234	5	Hose clamp	Slangklamma	5
16	73 98 373		-1996, B234	2	Clamp	Klammer	5
17	93 44 276		-1996, B234	1	Valve	Ventil	2
18	91 36 243		-1996, B234, L=40 MM	1	Vacuum hose	Vakuumslang	5
	91 36 243		L=5000 MM	X	Vacuum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
2A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G06

SAI
Non-return valve 4-cyl

SAI
Backventil 4-cyl

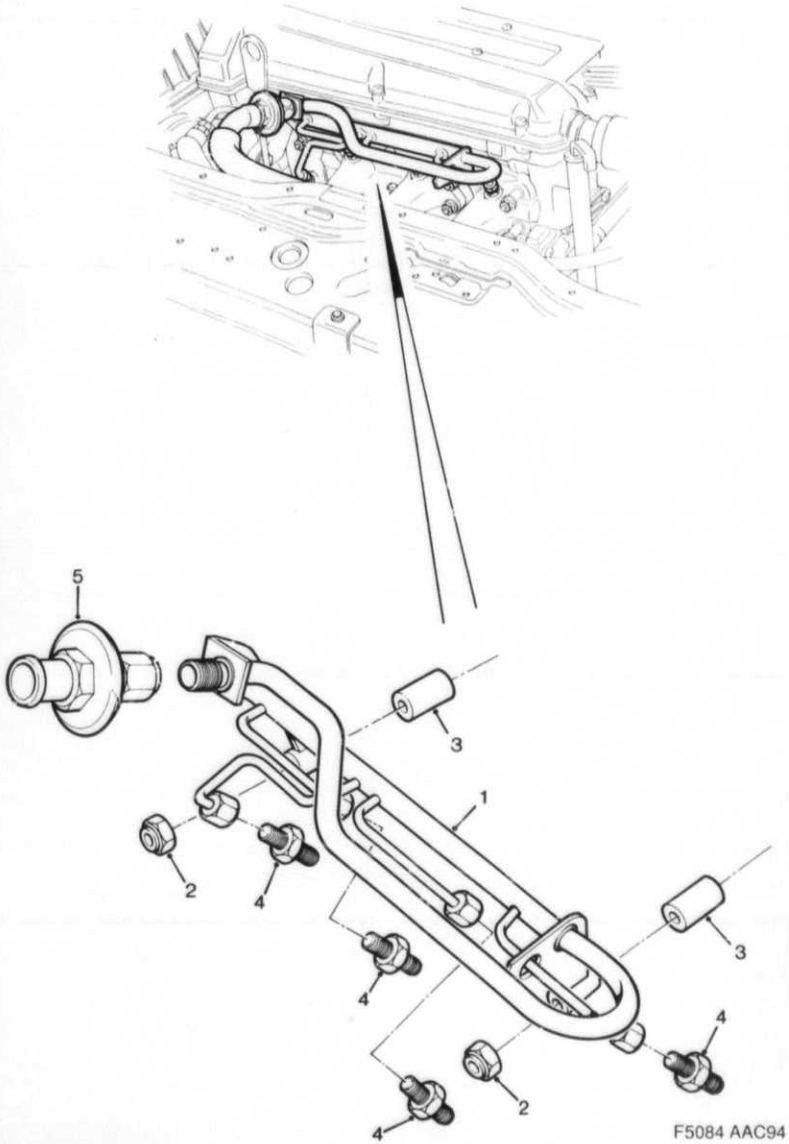

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 60 251		-1996	1	Tube	Rör	
0020	2			See page 2-093, 1-F22	2	Nut	Mutter	
0030	3			See page 2-093, 1-F22	2	Spacer sleeve	Distanshylsa	
0040	4	81 31 963		-1996	4	Nipple	Nippel	5
0050	5	43 60 343		-1996	1	AIR air flow check valve	Backventil	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1 –G08

SAI
Non-ret. valve,6cyl,-1997

SAI
Backventil 6-cyl,-1997

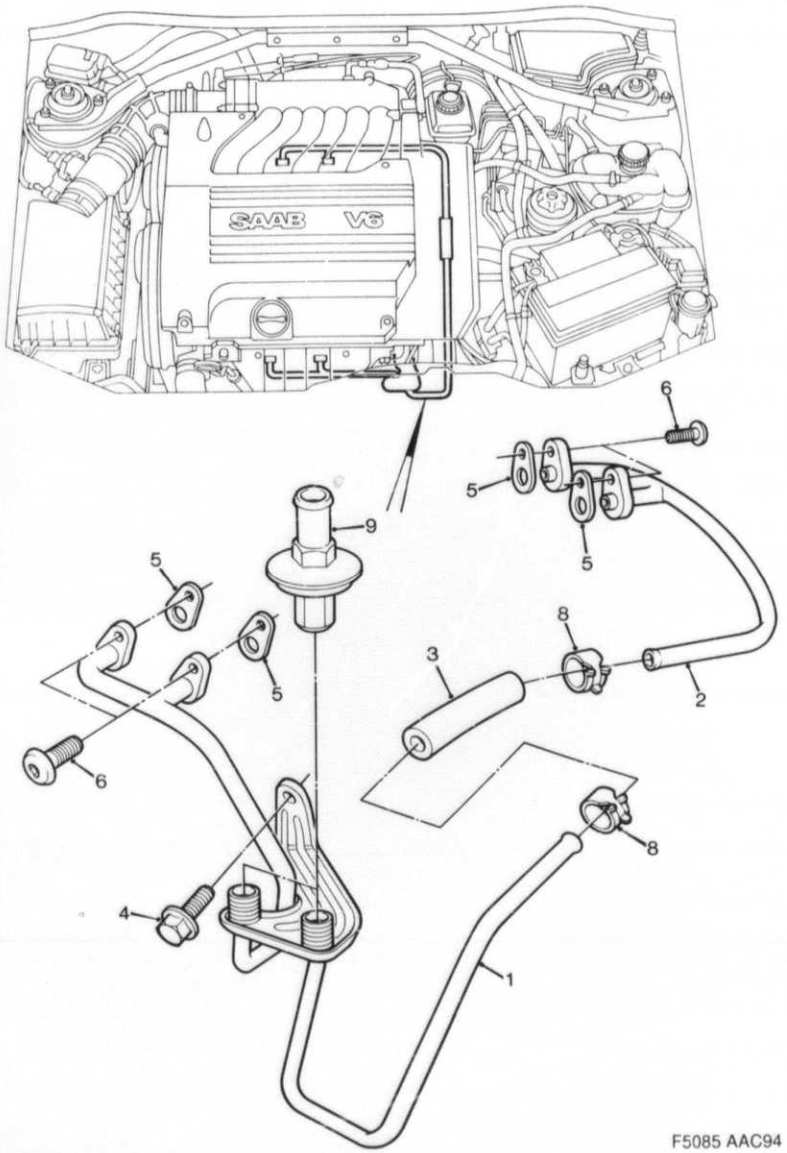

F5085 AAC94

1365	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 60 277			1	Tube	Rör	
0020	2	43 60 269		-1995	1	Tube	Rör	
0022	2	42 39 976		1996-	1	Tube	Rör	8
0030	3	43 94 060		-1995	1	Hose	Slang	
0035	3	46 62 896		1996-	1	Hose	Slang	
0040	4	79 67 938			1	Screw	Skruv	5
0050	5	44 43 230			4	Gasket	Packning	
0060	6	80 59 776			4	Screw	Skruv	5
0070	8	89 43 177			2	Hose clamp	Slangklämma	5
0080	9	43 60 343			2	AIR air flow check valve	Backventil	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G10 Heated oxygen sensor 4-cylinder

Syresensor 4-cylindrig

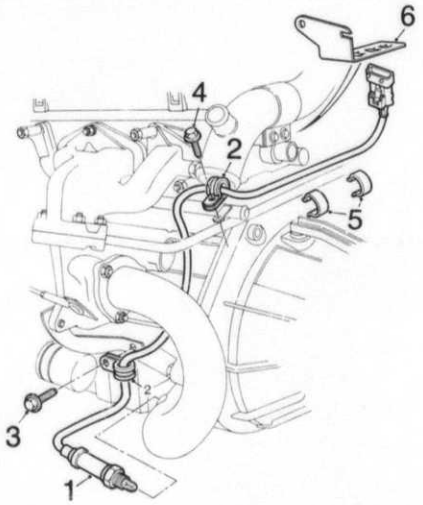

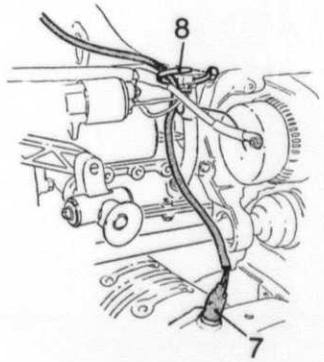

F7632 AAC94

1-G10	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 46 937		2)	1	F Heated Oxygen sensor	Syresensor	4
0020	1	91 46 952		2,47), -1995, TURBO	1	F Heated Oxygen sensor	Syresensor	8
0030	1	46 60 445		2,47), 1996-, TURBO	1	Heated oxygen sensor	Syresensor	4
0040	1	46 60 494		2), 1996-, US, CA	1	F Heated Oxygen sensor	Syresensor	8
0050	1	42 39 588		2,52)	1	F Heated Oxygen sensor	Syresensor	4
0060	2	40 87 078		-1995	2	Clamp	Klammer	5
0070	2	40 87 078		1996-	2	Clamp	Klammer	5
0080	2	73 98 803		1996-, US, CA	2	Clamp	Klammer	
0090	3	79 78 182			1	Screw	Skruv	5
0100	4	79 78 117			1	Screw	Skruv	5
0110	5	41 58 762			2	Clip	Clips	
0120	6	42 27 831			1	Connector holder	Kontakthållare	6
0130	7	46 60 502		3), 1996-, US, CA	1	Rear heated oxygen sensor	Syresensor	8
0140	8	79 71 880		1996-, US, CA	1	Tensioning band	Spännband	4

2. Front. Främre.
3. Rear. Bakre.
47. With intake air heat plate. Med värmeplatta.
52. Lead resistant Blytålig.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G12

Heated oxygen sensor
-1997, 6-cylinder

Syresensor
-1997, 6-cylindrig

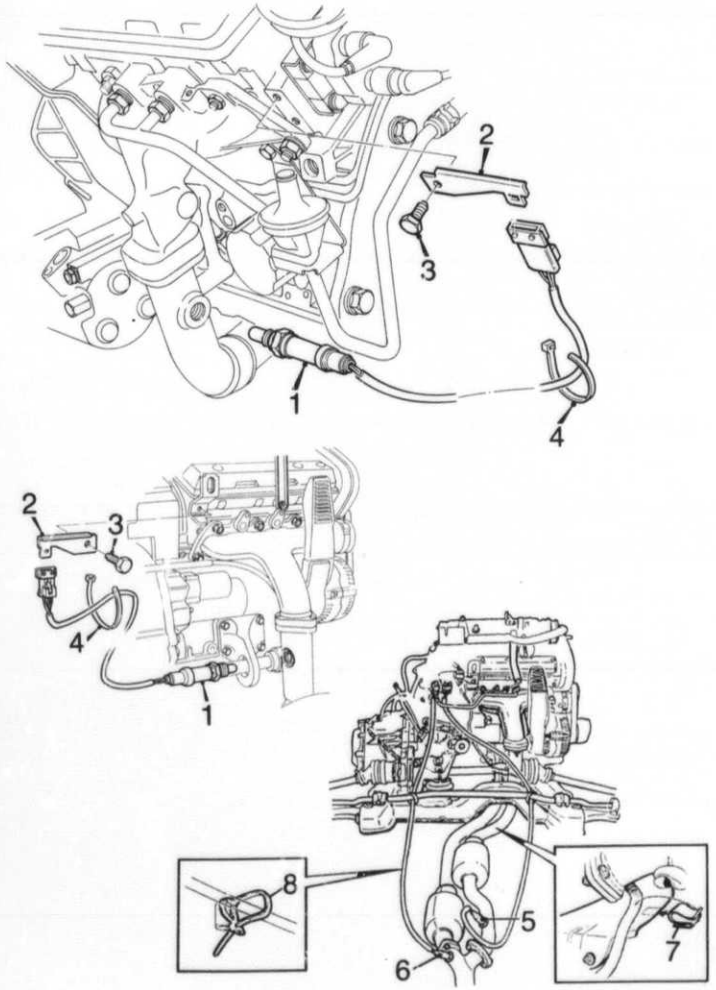

F7633 AAC94

1410	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S -
0010	1		42 39 042		2), -1995	2	F Heated Oxygen sensor	Syresensor	4
0020	1		42 39 042		2), 1996-	2	F Heated Oxygen sensor	Syresensor	4
0030	1		43 01 545		2), 1996-, US, CA	2	F Heated Oxygen sensor	Syresensor	8
0040	1		42 39 596		2,52)	2	F Heated Oxygen sensor	Syresensor	4
0050	2		42 29 944			2	Connector holder	Kontakthållare	
0060	3		40 87 185			2	Hexagon screw	Sexkantsskruv	5
0070	4		79 71 880			2	Tensioning band	Spännband	4
0080	5		46 60 205		3), 1996-, US, CA, L=2080 MM	1	Rear heated oxygen sensor	Syresensor	8
0090									
0100	6	•	49 02 227		3), 1996-, US, CA, L=1880 MM	1	Rear heated oxygen sensor	Syresensor	8
0110									
0120			46 60 197			1	.Rear heated oxygen sensor	.Syresensor	8
0130		•	49 02 235		1)	1	.Conversion kit	.Ombyggnadssats	8
0140	7		92 28 149		1996-,93), US, CA	2	Clip	Clips	5
0150	7		71 56 409		94), US, CA	2	Clamp	Klammer	5
0160	8		79 84 750		1996-, US, CA	10	Tensioning band	Spännband	5

1. Not as separate spare part. Ej som separat reservdel.
2. Front. Främre.
3. Rear. Bakre.
52. Lead resistant Blytålig.
93. Ch -T2010452.
94. Ch T2010453-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G14

Exhaust system
B204I, B206I, B234I
-1996

Avgassystem
B204I, B206I, B234I
-1996

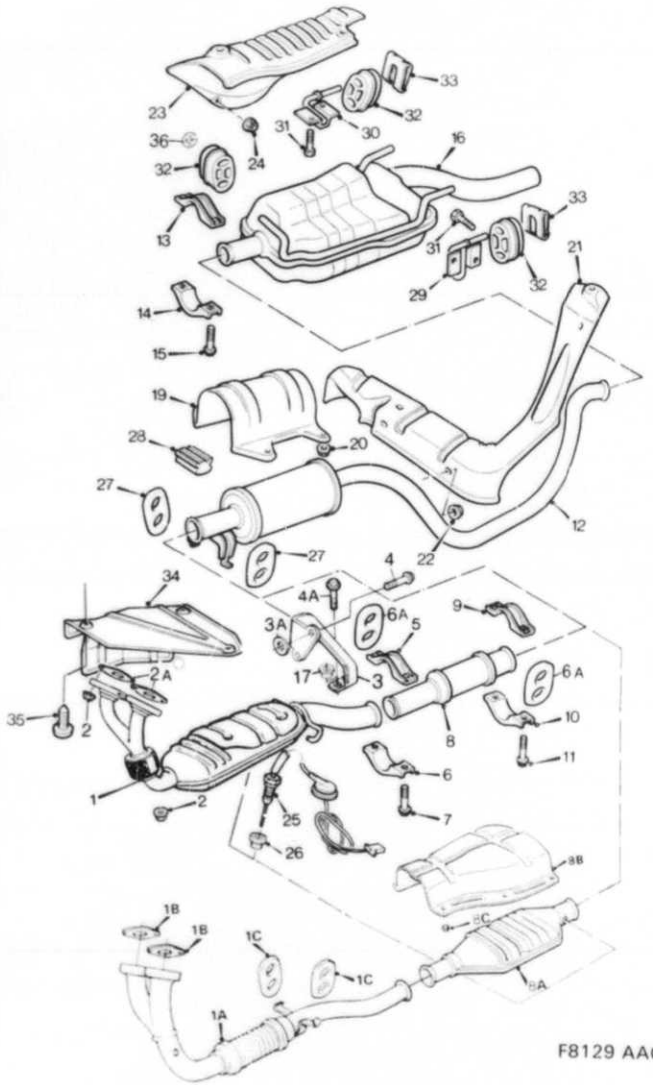

1500	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 25 736		53), B234I	1	TW catalytic converter	Katalysator	4
0020	1	44 45 433		54)-1995, B234I	1	TW catalytic converter	Katalysator	4
0030	1	44 45 433		1996, B234I	1	TW catalytic converter	Katalysator	4
0040	1	45 26 844		1996, B234I, US, CA	1	TW catalytic converter	Katalysator	8
0050	1	42 25 959		40,53), B234I	1	TW catalytic converter	Katalysator	4
0060	1	44 45 441		40,54), B234I	1	TW catalytic converter	Katalysator	8
0070								
0080	1	44 45 433		B204I, B206I, A	1	TW catalytic converter	Katalysator	4
0090	1	44 45 441		40), B204I, B206I, A	1	TW catalytic converter	Katalysator	8
0100								
0110	1A	44 44 527		B204I, B206I, M	1	Exhaust pipe	Avgasrör	2
0120	1B	89 80 328		1994, B204I, B206I, M, A	2	Gasket	Packning	1
0130	1B	46 24 383		1995-, B204I, B206I, M,A	2	Gasket	Packning	8
0140	1C	93 65 404		B204I, B206I, M, A	2	Rubber mounting	Gummiupphängning	8
0150	2	79 79 503			4	Nut	Mutter	5
0160	2A	89 80 328		1994, B234I	2	Gasket	Packning	1
0170	2A	46 24 383		1995-, B234I	2	Gasket	Packning	8
0180	3	44 44 337		53), B234I	1	Stay	Stag	5
0190	3A	79 82 317			2	Washer	Bricka	5
0200	4	79 78 182		53), B234I	2	Screw	Skruv	5
0210	4A	79 78 265		53), B234I	1	Hexagon screw	Sexkantsskruv	5
0220	5	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0230	6	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0240	6A	93 65 404		54)	2	Rubber mounting	Gummiupphängning	8
0250	7	79 78 190			2	Screw	Skruv	5
0260	8	*44 45 516*		(4229456) NLS – USE 4750741	1	Intermediate pipe	Mellanrör	1
0270	8A	42 29 860		1994, B206I M	1	TW catalytic converter	Katalysator	4
0280	8A	*45 26 968*		1995-,91), B204I M NLS - USE 4623054	1	TW catalytic converter	Katalysator	4
0290	8A	*46 23 054*		92), B204I M NLS – USE 4526068	1	TW catalytic converter	Katalysator	4
0300	8A	42 29 878		40), 1994, B206I M	1	TW catalytic converter	Katalysator	4
0310	8A	45 26 976		1995-,40,91), B204I M	1	TW catalytic converter	Katalysator	8
0320	8A	*46 23 062*		40,92), B204I M NLS – USE 4526976	1	TW catalytic converter	Katalysator	4
0330	8B	*42 35 347*		B204I, B206I, M NLS – USE 4728663	1	Heat shield	Värmeköld	3
0340	8C	43 45 138		B204I, B206I, M	4	Hexagon nut	Sexkantsmutter	5
0350	9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0360	10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0370	11	79 78 190			2	Screw	Skruv	5
0380	12	*42 26 320*		NLS – USE 4960936	1	Silencer	Ljuddämpare	1
0390	13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0400	14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0410	15	79 78 190			2	Screw	Skruv	5
0420	16	*42 25 751*		NLS – USE 4528287	1	Silencer	Ljuddämpare	1
0430	17	75 54 215		53), B234I	1	Spacer	Distans	5
0440	19	43 94 235			1	Heat shield	Värmeköld	3
0450	20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0460	21	42 35 362			1	Heat shield	Värmeköld	3
0470	22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0480	23	43 94 128			1	Heat shield	Värmeköld	3
0490	24	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0500	25	44 33 488		B204I, B206I, M	1	Sensor	Givare	4
0510	25	44 33 496		1994,B204I,B206I,A,B234I	1	Sensor	Givare	4
0520	25	44 33 504		1994, RHD	1	Sensor	Givare	4
0530	25	45 87 515		1995-, B204I A, B234I	1	Sensor	Givare	4


40. With heat shield mounted on the catalytic converter. Med värmeköld monterad på katalysatorn.
53. Ch -R2042438, -S7001307.
54. Ch R2042439-, S701308-.
91. Ch -T7000393.
92. Ch T7000394-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

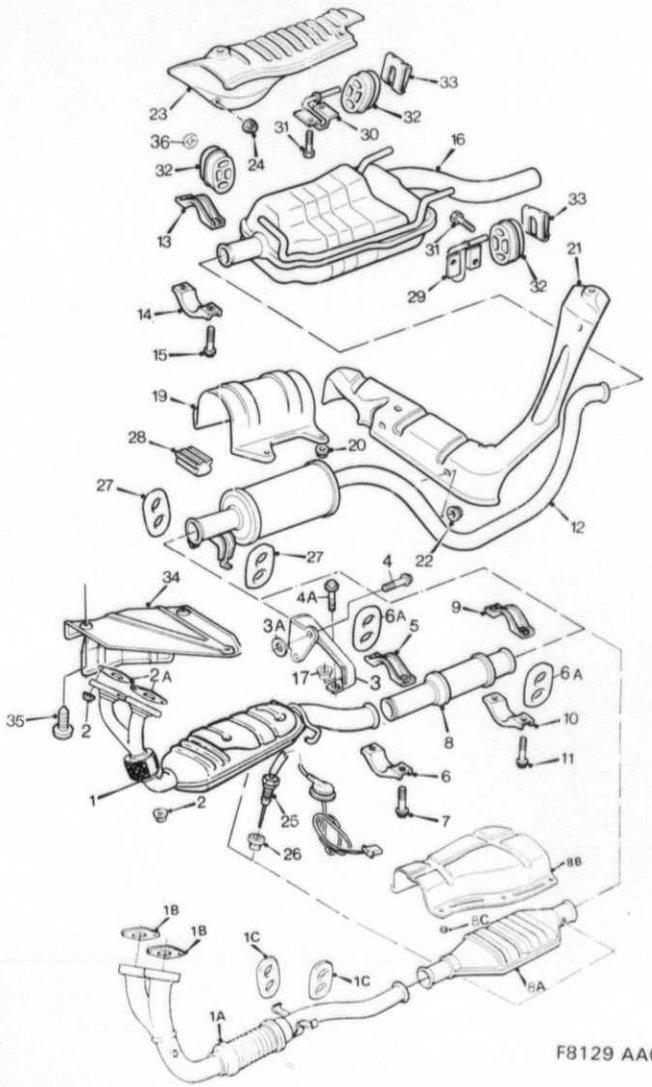

	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
1500								
0540	26	42 26 395			1	Reduction nipple	Reducernippel	
0550								
0560	27	42 35 396			2	Rubber mounting	Gummiupphängning	
0570	28	42 35 412			1	Rubber damper	Gummidämpare	
0580								
0590	29	42 29 225			1	Bracket	Fäste	
0600	30	42 29 209			1	Bracket	Fäste	
0610	31	79 72 623			4	Screw	Skruv	5
0620	32	42 35 404			3	Rubber mounting	Gummiupphängning	
0630	33	*42 29 910*		NLS – USE 4685608	2	Clip	Clips	
0640								
0650	34	91 44 676			1	Heat shield sump	Värmeköld oljesump	5
0660								
0670	35	79 71 294			3	Screw	Skruv	5
0680								
0690	36	40 87 722			1	Lock washer	Spärrbricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-G18

Exhaust system
B204I, B234I
1997-

Avgassystem
B204I, B234I
1997-

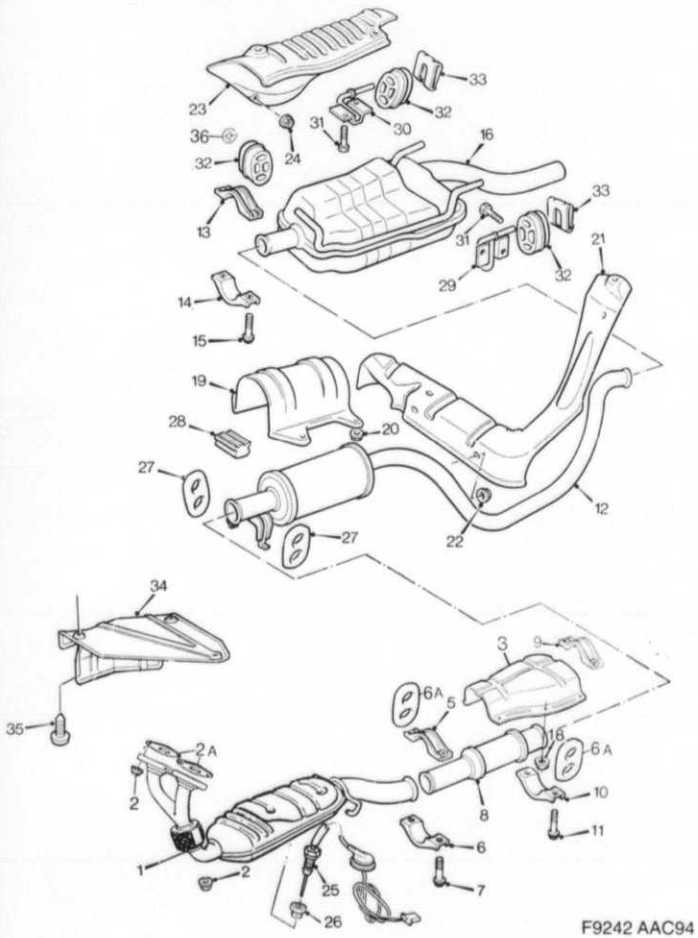

F9242 AAC94

1505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 45 433		140)	1	TW catalytic converter	Katalysator	4
0020	1	48 78 682		141)	1	TW catalytic converter	Katalysator	4
0030	1	48 78 690		40)-1997	1	TW catalytic converter	Katalysator	8
0040	1	45 26 844		B234i, US, CA	1	TW catalytic converter	Katalysator	8
0050								
0060	2	79 79 503			4	Nut	Mutter	5
0070	2A	46 24 383			2	Gasket	Packning	8
0080	3	47 28 663			1	Heat shield	Värmeköld	3
0090	5	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0100	6	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0110	6A	93 65 404			2	Rubber mounting	Gummiupphängning	8
0120	7	79 78 190			2	Screw	Skruv	5
0130	8	*44 45 516*		116) NLS – USE 4750741	1	Intermediate pipe	Mellanrör	1
0140	8	47 50 741		117)	1	Intermediate pipe	Mellanrör	1
0150	9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0160	10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0170	11	79 78 190			2	Screw	Skruv	5
0180	12	*42 26 320*		149) NLS – USE 4960936	1	Silencer	Ljuddämpare	1
0190	12	49 60 936		150)	1	Silencer	Ljuddämpare	1
0200	13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0210	14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0220	15	79 78 190			2	Screw	Skruv	5
0230	16	*42 25 751*		149) NLS – USE 4528287	1	Silencer	Ljuddämpare	1
0240	16	45 28 287		150)	1	Silencer	Ljuddämpare	1
0250	18	43 45 138			8	Hexagon nut	Sexkantsmutter	5
0260	19	43 94 235		149)	1	Heat shield	Värmeköld	3
0270	19	47 50 949		150)	1	Heat shield	Värmeköld	3
0280	20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0290	21	42 35 362			1	Heat shield	Värmeköld	3
0300	22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0310	23	43 94 128			1	Heat shield	Värmeköld	3
0320	24	43 45 138			1	Hexagon nut	Sexkantsmutter	5
0330	25	44 33 488		B204I, M	1	Sensor	Givare	4
0340	25	45 87 515		B204I A, B234I	1	Sensor	Givare	4
0350	26	42 26 395			1	Reduction nipple	Reducernippel	
0360								
0370	27	42 35 396			2	Rubber mounting	Gummiupphängning	
0380	28	42 35 412			1	Rubber damper	Gummidämpare	
0390								
0400	29	42 29 225			1	Bracket	Fäste	
0410	30	42 29 209			1	Bracket	Fäste	
0420	31	79 72 623			4	Screw	Skruv	5
0430	32	42 35 404			3	Rubber mounting	Gummiupphängning	
0440	33	*42 29 910*		126) NLS – USE 4685608	2	Clip	Clips	
0450	33	46 85 608		127)	2	Clip	Clips	
0460								
0470	34	91 44 676			1	Heat shield sump	Värmeköld oljesump	5
0480								
0490	35	79 71 294			3	Screw	Skruv	5
0500								
0510	36	40 87 722			1	Lock washer	Spärrbricka	5


40. With heat shield mounted on the catalytic converter. Med värmeköld monterad på katalysatorn.
116. Ch –V2003148.
117. Ch V2003149–.
126. Ch –V7000398.
127. Ch V7000399–.
140. Ch –V2022497.
141. Ch V2022498–.
149. Ch –V2031595, –V7007349.
150. Ch V2031596–, V7007350–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

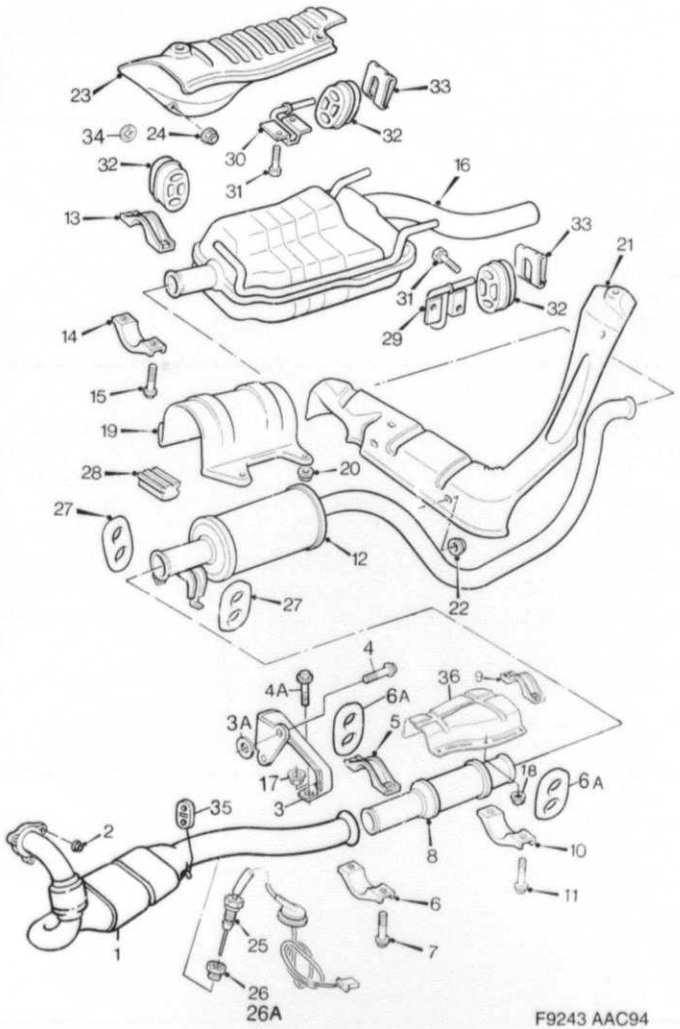

F9243 AAC94

1-G20

Exhaust system
B204L

Avgassystem
B204L

1510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 44 204		77)	1	TW catalytic converter	Katalysator	4
0020	1	46 23 104		78)	1	TW catalytic converter	Katalysator	8
0030	1	45 26 281		40,77)	1	TW catalytic converter	Katalysator	4
0040	1	46 24 227		40,78)-1997	1	TW catalytic converter	Katalysator	4
0050	2	75 19 432			3	Nut	Mutter	5
0060	3	44 44 337			1	Stay	Stag	5
0070	3A	79 82 317			2	Washer	Bricka	5
0080	4	79 78 182			2	Screw	Skruv	5
0090	4A	79 78 265			1	Hexagon screw	Sexkantsskruv	5
0100	5	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0110	6	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0120	7	79 78 190			2	Screw	Skruv	5
0130	8	*44 45 516*		116), (4229456) NLS – USE 4750741	1	Intermediate pipe	Mellanrör	1
0130								
0140	8	47 50 741		117)	1	Intermediate pipe	Mellanrör	1
0150	9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0160	10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0170	11	79 78 190			2	Screw	Skruv	5
0180	12	*42 26 320*		149) NLS – USE 4960936	1	Silencer	Ljuddämpare	1
0190	12	49 60 936		150)	1	Silencer	Ljuddämpare	1
0200	13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0210	14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0220	15	79 78 190			2	Screw	Skruv	5
0230	16	*42 25 926*		149) NLS – USE 4528279	1	Silencer	Ljuddämpare	1
0240	16	45 28 279		150)	1	Silencer	Ljuddämpare	1
0250	17	75 54 215			1	Spacer	Distans	5
0260	18	43 45 138			8	Hexagon nut	Sexkantsmutter	5
0270	19	43 94 235		149)	1	Heat shield	Värmeköld	3
0280	19	47 50 949		150)	1	Heat shield	Värmeköld	3
0290	20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0300	21	42 35 362			1	Heat shield	Värmeköld	3
0310	22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0320	23	43 94 128			1	Heat shield	Värmeköld	3
0330	24	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0340	25	44 33 496		1994	1	Sensor	Givare	4
0350	25	44 33 504		1994, RHD	1	Sensor	Givare	4
0360	25	45 87 515		1995-	1	Sensor	Givare	4
0370	26	42 26 395		40)	1	Reduction nipple	Reducernippel	
0380	26A	81 23 747			1	Plug	Propp	5
0390								
0400	27	42 35 396			2	Rubber mounting	Gummiupphängning	
0410	28	42 35 412			1	Rubber damper	Gummidämpare	
0420								
0430	29	42 29 225			1	Bracket	Fäste	
0440	30	42 29 209			1	Bracket	Fäste	
0450	31	79 72 623			4	Screw	Skruv	5
0460	32	42 35 404			3	Rubber mounting	Gummiupphängning	
0470	33	*42 29 910*		126) NLS – USE 4685608	2	Clip	Clips	
0480	33	46 85 608		127)	2	Clip	Clips	
0490	34	40 87 722			1	Lock washer	Spärrbricka	5
0500								
0510	35	93 65 404		78)	2	Rubber mounting	Gummiupphängning	8
0520	36	47 28 663			1	Heat shield	Värmeköld	3


40. With heat shield mounted on the catalytic converter. Med värmeköld monterad på katalysatorn.
77. Ch –S2031828, –S7020424.
78. Ch S2031829–, S7020425–.
116. Ch –V2003148.
117. Ch V2003149–.
126. Ch –V7000398.
127. Ch V7000399–.
149. Ch –V2031595, –V7007349.
150. Ch V2031596–, V7007350–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

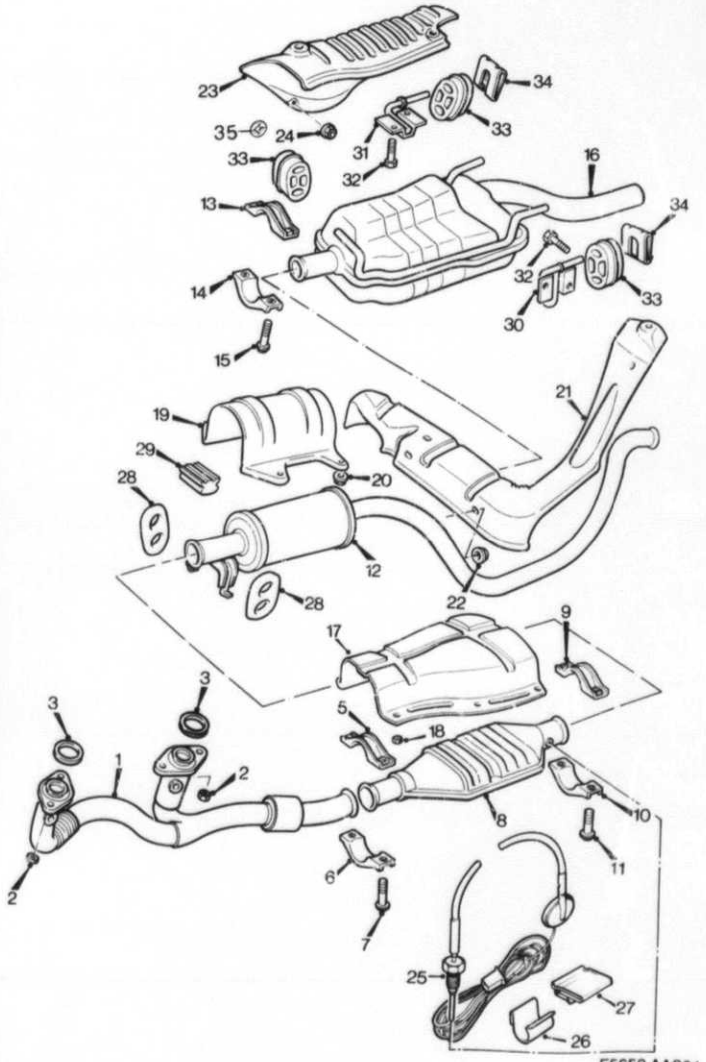

1-G22

Exhaust system
B258I
-1995

Avgassystem
B258I
-1995

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 29 852			1	Exhaust pipe	Avgasrör	2
0020	2	*40 87 896*		NLS – USE 4685830	4	Lock nut	Låsmutter	5
0030	3	44 43 958			2	Exhaust gasket	Avgaspackning	8
0040	5	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0050	6	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0060	7	79 78 190			2	Screw	Skruv	5
0070	8	42 29 860		1994	1	TW catalytic converter	Katalysator	4
0080	8	*45 26 968*		1995 NLS – USE 4623054	1	TW catalytic converter	Katalysator	4
0090								
0100	8	42 29 878		40), 1994	1	TW catalytic converter	Katalysator	4
0110	8	45 26 976		40), 1995	1	TW catalytic converter	Katalysator	8
0120	9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0130	10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0140	11	79 78 190			2	Screw	Skruv	5
0150	12	*42 26 320*		NLS – USE 4960936	1	Silencer	Ljuddämpare	1
0160	13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0170	14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0180	15	79 78 190			2	Screw	Skruv	5
0190	16	*42 35 990*		NLS – USE 4528261	1	Silencer	Ljuddämpare	1
0200	17	*42 35 347*		NLS – USE 4728663	1	Heat shield	Värmesköld	3
0210	18	43 45 138			6	Hexagon nut	Sexkantsmutter	5
0220	19	43 94 235			1	Heat shield	Värmesköld	3
0230	20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0240	21	42 35 362			1	Heat shield	Värmesköld	3
0250	22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0260	23	43 94 128			1	Heat shield	Värmesköld	3
0270	24	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0280	25	44 33 488			1	Sensor	Givare	4
0290	26	44 33 561			1	Clip	Clips	5
0300	27	44 33 579			2	Clip	Clips	5
0310								
0320	28	42 35 396			2	Rubber mounting	Gummiupphängning	
0330	29	42 35 412			1	Rubber damper	Gummidämpare	
0340	30	42 29 225			1	Bracket	Fäste	
0350	31	42 29 209			1	Bracket	Fäste	
0360	32	79 72 623			4	Screw	Skruv	5
0370	33	42 35 404			3	Rubber mounting	Gummiupphängning	
0380	34	*42 29 910*		NLS – USE 4685608	2	Clip	Clips	
0390	35	40 87 722			1	Lock washer	Spärrbricka	5


40. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

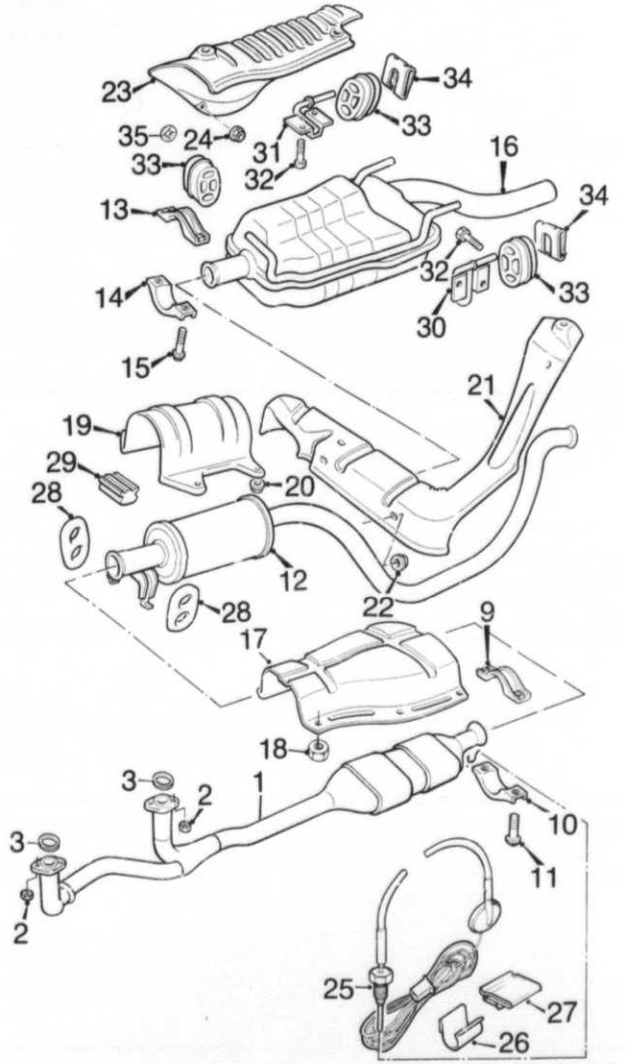

F9246 AAC94

1-G24

Exhaust system
B258I
1996-1997

Avgassystem
B258I
1996-1997

1525

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	46 24 102		1996	1	TW catalytic converter	Katalysator	4
1	46 24 102		1997-	1	TW catalytic converter	Katalysator	4
1	47 26 634		1997-, EU, GB	1	TW catalytic converter	Katalysator	4
1	46 24 110		40)	1	TW catalytic converter	Katalysator	4
2	43 47 902		151)	4	Nut	Mutter	5
2	46 85 830		152)	4	Nut	Mutter	5
3	44 43 958			2	Exhaust gasket	Avgaspackning	8
9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
11	79 78 190			2	Screw	Skruv	5
12	*42 26 320*		149) NLS – USE 4960936	1	Silencer	Ljuddämpare	1
12	49 60 936		150)	1	Silencer	Ljuddämpare	1
13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
15	79 78 190			2	Screw	Skruv	5
16	*42 35 990*		149) NLS – USE 4528261	1	Silencer	Ljuddämpare	1
16	45 28 261		150)	1	Silencer	Ljuddämpare	1
17	*42 35 347*		-1996 NLS – USE 4728663	1	Heat shield	Värmesköld	3
17	47 28 663		1997-	1	Heat shield	Värmesköld	3
18	43 45 138		-1996	6	Hexagon nut	Sexkantsmutter	5
18	*40 87 664*		1997- NLS – USE 7985377	8	Nut	Mutter	5
19	43 94 235		149)	1	Heat shield	Värmesköld	3
19	47 50 949		150)	1	Heat shield	Värmesköld	3
20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
21	42 35 362			1	Heat shield	Värmesköld	3
22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
23	43 94 128			1	Heat shield	Värmesköld	3
24	43 45 138			4	Hexagon nut	Sexkantsmutter	5
25	44 33 488			1	Sensor	Givare	4
26	44 33 561			1	Clip	Clips	5
27	44 33 579			2	Clip	Clips	5
28	42 35 396			2	Rubber mounting	Gummiupphängning	
29	42 35 412			1	Rubber damper	Gummidämpare	
30	42 29 225			1	Bracket	Fäste	
31	42 29 209			1	Bracket	Fäste	
32	79 72 623			4	Screw	Skruv	5
33	42 35 404			3	Rubber mounting	Gummiupphängning	
34	*42 29 910*		126) NLS – USE 4685608	2	Clip	Clips	
34	46 85 608		127)	2	Clip	Clips	
35	40 87 722			1	Lock washer	Spärrbricka	5


40. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.
126. Ch –V7000398.
127. Ch V7000399–.
149. Ch –V2031595, –V7007349.
150. Ch V2031596–, V7007350–.
151. Ch –T2013429.
152. Ch T2013430–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

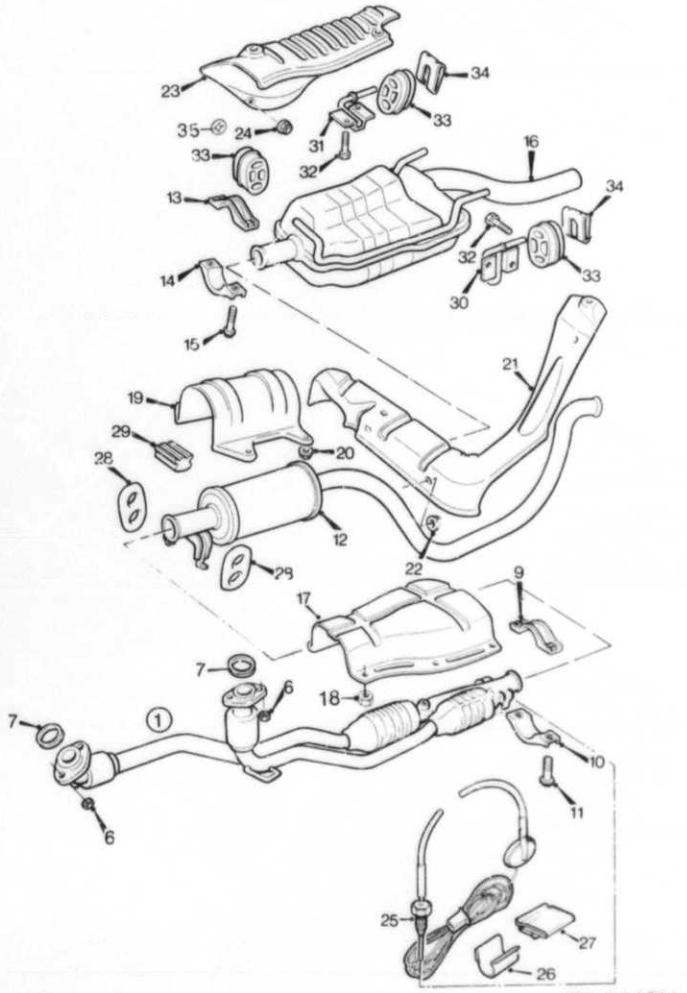

F9247 AAC94

Exhaust system

1-H02

B258I

1996-1997, US, CA

Avgassystem

B258I

1996-1997, US, CA

1530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 26 885			1	TW catalytic converter	Katalysator	8
0020	6	43 47 902			4	Nut	Mutter	5
0030	7	44 43 958			2	Exhaust gasket	Avgaspackning	8
0040	9	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0050	10	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0060	11	79 78 190			2	Screw	Skruv	5
0070	12	44 44 188		149)	1	Silencer	Ljuddämpare	
0080	12	*48 76 009*		150) NLS	1	Silencer	Ljuddämpare	
0090	13	42 29 829			1	Exhaust pipe clamp	Avgasrörklamma	
0100	14	42 29 811			1	Exhaust pipe clamp	Avgasrörklamma	
0110	15	79 78 190			2	Screw	Skruv	5
0120	16	45 28 261			1	Silencer	Ljuddämpare	1
0130	17	*42 35 347*		-1996 NLS – USE 4728663	1	Heat shield	Värmesköld	3
0140	17	47 28 663		1997-	1	Heat shield	Värmesköld	3
0150	18	43 45 138		-1996	6	Hexagon nut	Sexkantsmutter	5
0160	18	*40 87 664*		1997- NLS – USE 7985377	8	Nut	Mutter	5
0170	19	43 94 235		149)	1	Heat shield	Värmesköld	3
0180	19	47 50 949		150)	1	Heat shield	Värmesköld	3
0190	20	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0200	21	42 35 362			1	Heat shield	Värmesköld	3
0210	22	43 45 138			3	Hexagon nut	Sexkantsmutter	5
0220	23	43 94 128			1	Heat shield	Värmesköld	3
0230	24	43 45 138			4	Hexagon nut	Sexkantsmutter	5
0240	25	44 33 488			1	Sensor	Givare	4
0250	26	44 33 561			1	Clip	Clips	5
0260	27	44 33 579			2	Clip	Clips	5
0270								
0280	28	42 35 396			2	Rubber mounting	Gummiupphängning	
0290	29	42 35 412			1	Rubber damper	Gummidämpare	
0300	30	42 29 225			1	Bracket	Fäste	
0310	31	42 29 209			1	Bracket	Fäste	
0320	32	79 72 623			4	Screw	Skruv	5
0330	33	42 35 404			3	Rubber mounting	Gummiupphängning	
0340	34	*42 29 910*		NLS – USE 4685608	2	Clip	Clips	
0350	35	40 87 722			1	Lock washer	Spärrbricka	5


149. Ch -V2031595, -V7007349.
150. Ch V2031596-, V7007350-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

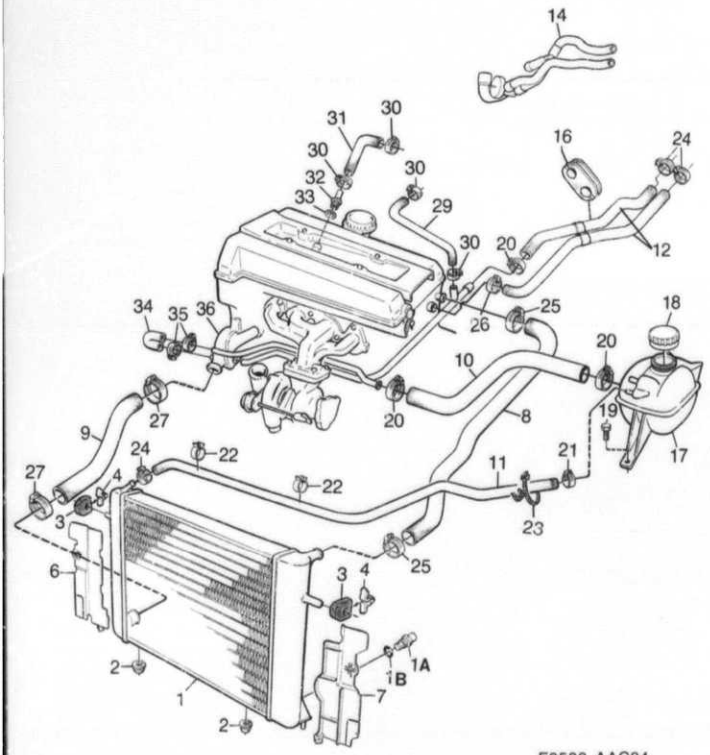

Cooling system

1-H04 Cooling system 4-cyl.

Kylsystem

Kylsystem 4-cyl

1550	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		42 83 339		M, -1997	1	Radiator	Kylare	4
0020	1	•	47 29 564		M, 1998-	1	Radiator	Kylare	4
0030	1		42 83 438		M, AC, ACC -1997	1	Radiator	Kylare	4
0040	1	•	47 29 562		M, AC, ACC 1998-	1	Radiator	Kylare	4
0050	1		42 83 495		A, I -1997	1	Radiator	Kylare	4
0060	1	•	47 29 570		A, I 1998-	1	Radiator	Kylare	4
0070	1		*43 57 794*		A, TURBO -1997 NLS – USE 4729596	1	Radiator	Kylare	4
0080	1	•	47 29 596		A, TURBO 1998-	1	Radiator	Kylare	4
0090	1A		43 56 408			1	.Draining plug	.Dräneringsplugg	3
0100	1B		43 56 416			1	.O-ring	.O-ring	2
0110									
0120	2		42 83 594		-1995	2	Rubber bushing	Gummibussning	4
0130	2		47 27 871		1996-	2	Rubber bushing	Gummibussning	4
0140	3		42 83 321		-1995	2	Rubber bushing	Gummibussning	4
0150	3		47 27 863		1996-	2	Rubber bushing	Gummibussning	4
0160	4		42 83 586			2	Clip	Clips	5
0170	6		42 83 347		AC, ACC	1	Air shield	Luftskärm	5
0180	7		42 83 453		I, AC, ACC	1	Air shield	Luftskärm	5
0190									
0200	8		*43 57 976*		1994,10) NLS – USE 4876207	1	Radiator hose	Kylarslang	2
0210	8		*43 60 798*		1994,8,10) NLS – USE 4876207	1	Radiator hose	Kylarslang	2
0220	8		*43 60 798*		1995-,11,132) NLS – USE 4876207	1	Radiator hose	Kylarslang	2
0230	8		48 76 207		133)	1	Radiator hose	Kylarslang	2
0240									
0250	9		*42 83 370*		1994,10) NLS – USE 4876215	1	Radiator hose	Kylarslang	3
0260	9		*43 60 806*		1994,8,10) NLS – USE 4876215	1	Radiator hose	Kylarslang	3
0270	9		*43 60 806*		1995-,11,132) NLS – USE 4876215	1	Radiator hose	Kylarslang	3
0280	9		48 76 215		133)	1	Radiator hose	Kylarslang	3
0290									
0300	10		*43 57 984*		-1996 NLS – USE 4876595	1	Radiator hose	Kylarslang	3
0310	10	•	48 76 595		1997-	1	Radiator hose	Kylarslang	3
0320	11		*43 57 968*		-1996 NLS – USE 4876603	1	Radiator hose	Kylarslang	5
0330	11	•	48 76 603		1997-	1	Radiator hose	Kylarslang	5
0340									
0350	12		48 76 223		LHD, ALT. SEE POS 14	1	Radiator hose	Kylarslang	3
0360	12		48 76 256		RHD, ALT. SEE POS 14	1	Radiator hose	Kylarslang	3
0370									
0380	14		43 95 679		8,106) -1996 LHD	1	Radiator hose kit	Kylarslangsats	3
0390	14	•	48 76 413		8) 1997- LHD	1	Radiator hose kit	Kylarslangsats	3
0400	14		*43 95 687*		8,106) -1996 RHD NLS – USE 4876470	1	Radiator hose kit	Kylarslangsats	3
0410	14	•	48 76 470		8) 1997- RHD	1	Radiator hose kit	Kylarslangsats	3
0420									
0430	16		43 58 107		-1996	1	Clamp	Klamma	5
0440	17		43 56 382			1	Expansion tank	Expansionstank	3
0450	17		43 56 390		21)	1	Expansion tank	Expansionstank	3
0460	18		*43 56 770*		1994 NLS – USE 4395513	1	Cover	Lock	3
0470	18		43 95 513		1995-	1	Cover	Lock	3
0480	19		79 78 861			1	Hexagon screw	Sexkantsskruv	5

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
10. CV, ch. –S7009999
11. CV, ch. S7010000–
21. With level sensor Med nivågivare
106. Ch S2005975–, S7012580–.
132. Ch –V2010950,
133. Ch V2010951–,

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H06

Cooling system 4-cyl.

Kylsystem 4-cyl

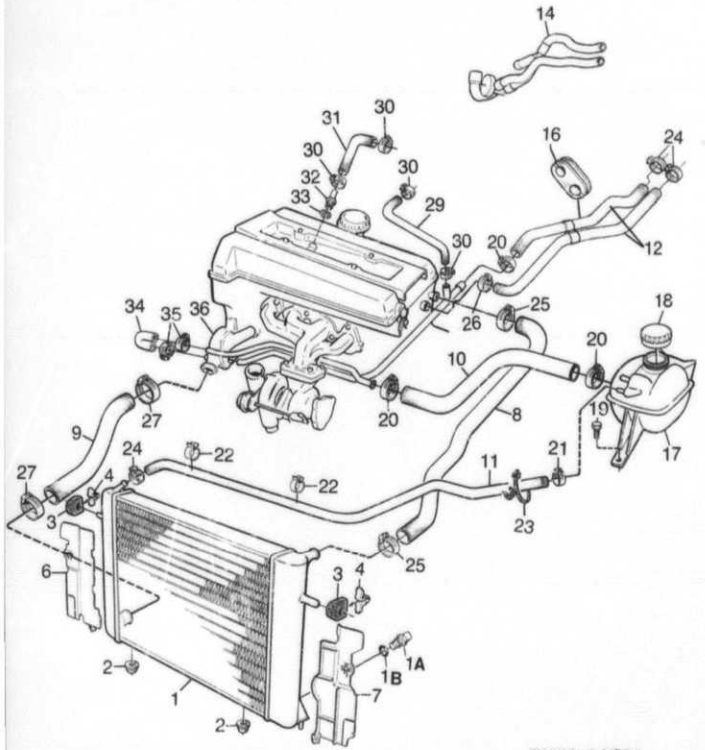

F8588 AAC94

1550	Pos		Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	20		79 70 072		161)	3	Hose clamp	Slangklamma	5
0500	20		46 85 947		162)	3	Hose clamp	Slangklamma	5
0510	21		79 70 049		161)	1	Hose clamp	Slangklamma	5
0520	21	•	43 48 231		162)	1	Hose clamp	Slangklämma	
0530	22		85 36 419			2	Clip	Clips	5
0540	23		75 39 984			1	Clamp	Klammer	5
0550	24		79 70 064		161)	2	Hose clamp	Slangklamma	5
0560	24	•	49 40 326		162)	2	Hose clamp	Slangklämma	
0570	25		79 70 106			3	Hose clamp	Slangklamma	5
0580	26		79 70 098		161)	1	Hose clamp	Slangklamma	5
0590	26	•	49 40 318		162)	1	Hose clamp	Slangklämma	
0600	27		79 70 122			1	Hose clamp	Slangklamma	5
0610	29		91 49 071			1	Hose	Slang	5
0620	30		40 87 649			4	Hose clamp	Slangklamma	5
0630	31		91 38 587			1	Hose	Slang	5
0640	32		74 86 806			1	Nipple	Nippel	5
0650	33		*83 26 712*		NLS – USE 4161162	1	Seal	Tätning	5
0660	34		*91 38 462*		-1996 NLS – USE 9178849	1	Hose	Slang	2
0670	34		91 78 849		1997-	1	Hose	Slang	2
0680	35		45 76 591		-1996	2	Hose clamp	Slangklamma	5
0690	35		46 85 947		1997-	2	Hose clamp	Slangklamma	5
0700	36				See page 2-143, 1-H24		Coolant pump	Kylvätskepump	


161. Ch -V2046809, -V7014577.
162. Ch V2046810-, V7014578-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

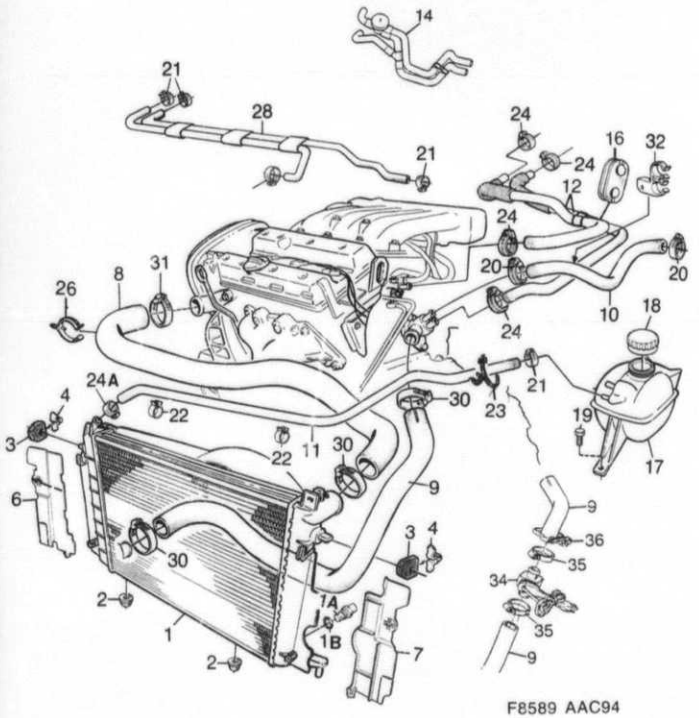

F8589 AAC94

Cooling system

1-H08 Cooling system 6-cyl -1997

Kylsystem

Kylsystem 6-cyl -1997

1560	Pos		Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1		42 83 438		M -1997	1	Radiator	Kylare	4
0020	1	•	47 29 562		M 1998-	1	Radiator	Kylare	4
0030	1		43 57 927		M, AC, ACC, -1997	1	Radiator	Kylare	4
0040	1	•	47 29 588		M, AC, ACC, 1998-	1	Radiator	Kylare	4
0050	1		*43 57 794*		A, -1997 NLS – USE 4729596	1	Radiator	Kylare	4
0060	1	•	47 29 596		A, 1998-	1	Radiator	Kylare	4
0070	1A		43 56 408			1	.Draining plug	.Dräneringsplugg	3
0080	1B		43 56 416			1	.O-ring	.O-ring	2
0090									
0100	2		42 83 594		-1995	2	Rubber bushing	Gummibussning	4
0110	2		47 27 871		1996-	2	Rubber bushing	Gummibussning	4
0120	3		42 83 321		-1995	2	Rubber bushing	Gummibussning	4
0130	3		47 27 863		1996-	2	Rubber bushing	Gummibussning	4
0140	4		42 83 586			2	Clip	Clips	5
0150	6		42 83 347			1	Air shield	Luftskärm	5
0160	7		42 83 453			1	Air shield	Luftskärm	5
0170									
0180	8		*43 57 752*		1994,10) NLS – USE 4876280	1	Radiator hose	Kylarslang	2
0190	8		*43 95 042*		1994,8,10) NLS – USE 4876280	1	Radiator hose	Kylarslang	2
0200	8		*43 95 042*		1995-,11,132) NLS – USE 4876280	1	Radiator hose	Kylarslang	2
0210	8		48 76 280		133)	1	Radiator hose	Kylarslang	2
0220									
0230	9		*43 57 760*		1994,10) NLS – USE 4876298	1	Radiator hose	Kylarslang	3
0240	9		*43 95 059*		1994,8,10) NLS – USE 4876298	1	Radiator hose	Kylarslang	2
0250	9		*43 95 059*		1995-,11,132) NLS – USE 4876298	1	Radiator hose	Kylarslang	2
0260	9		48 76 298		133)	1	Radiator hose	Kylarslang	2
0270									
0280	10		43 56 838			1	Radiator hose	Kylarslang	3
0290	11		*43 57 968*		-1996 NLS – USE 4876603	1	Radiator hose	Kylarslang	5
0300	11	•	48 76 603		1997-	1	Radiator hose	Kylarslang	5
0310									
0320	12		48 76 306		LHD, ALT. SEE POS 14	1	Radiator hose	Kylarslang	3
0330	12		48 76 330		RHD, ALT. SEE POS 14	1	Radiator hose	Kylarslang	3
0340									
0350	14		43 95 695		8,106) -1996 LHD	1	Radiator hose kit	Kylarslangsats	3
0360	14	•	48 76 504		8) 1997- LHD	1	Radiator hose kit	Kylarslangsats	3
0370	14		43 95 703		8,106) -1996 RHD	1	Radiator hose kit	Kylarslangsats	3
0380	14	•	48 76 561		8) 1997- RHD	1	Radiator hose kit	Kylarslangsats	3
0390									
0400	16		43 58 107		-1996	1	Clamp	Klamma	5
0410	17		42 83 305			1	Expansion tank	Expansionstank	3
0420	18		*43 56 770*		1994,10) NLS – USE 4395513	1	Cover	Lock	3
0430	18		43 95 513		1995-,11)	1	Cover	Lock	3
0440	19		79 78 661			1	Hexagon screw	Sexkantsskruv	5
0450	20		79 70 072			1	Hose clamp	Slangklamma	5
0460	21		79 70 049			2	Hose clamp	Slangklamma	5
0470	22		85 36 419			2	Clip	Clips	5
0480	23		75 39 984			2	Clamp	Klammer	5
0490	24		79 70 064			5	Hose clamp	Slangklamma	5


8. For tropical market; ME, LA, AU, HK, SG, TH, CY — För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
10. CV, ch. -S7009999
11. CV, ch. S7010000-
106. Ch S2005975-, S7012580-.
132. Ch -V2010950.
133. Ch V2010951-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

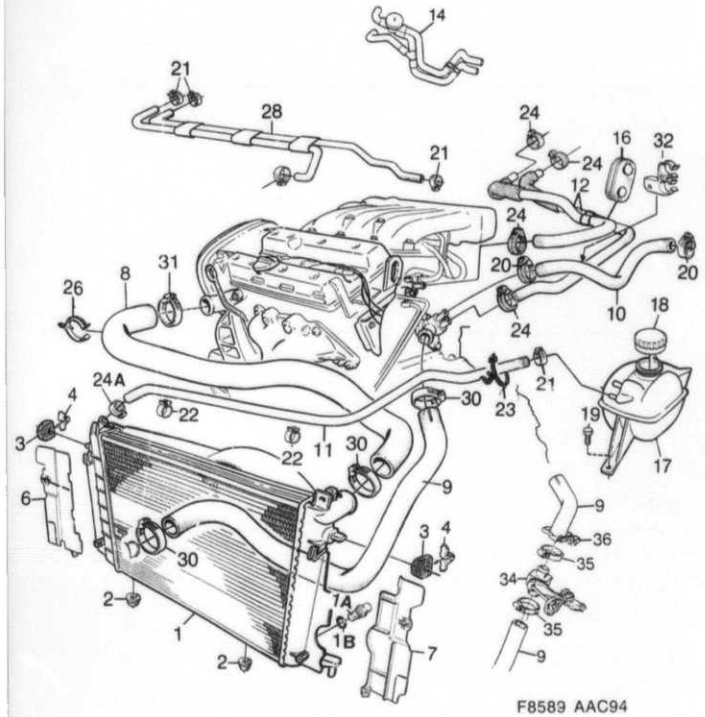

F8589 AAC94

Cooling system

1-H10 Cooling system 6-cyl -1997

Kylsystem

Kylsystem 6-cyl -1997

1560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	24A	79 70 056			1	Hose clamp	Slangklamma	5
0510	25	79 70 114			4	Hose clamp	Slangklamma	5
0520	26	43 58 701			2	Clamp	Klamma	5
0530	28	45 03 348			1	Hose	Slang	4
0540	30	79 70 106			3	Hose clamp	Slangklamma	5
0550	31	79 70 122			1	Hose clamp	Slangklamma	5
0560	32	73 98 530		AC, ACC	1	Clamp	Klammer	5
0570	33	43 60 012		8)	1	Air shield	Luftskärm	4
0580	34	43 97 295		CA	1	Engine heater	Motorvärmare	
0590	35	79 70 106		CA	2	Hose clamp	Slangklamma	5
0600	36	40 87 086		CA	1	Holder	Hållare	

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H12 Coolant pipe Turbo / Kylvattenrör Turbo

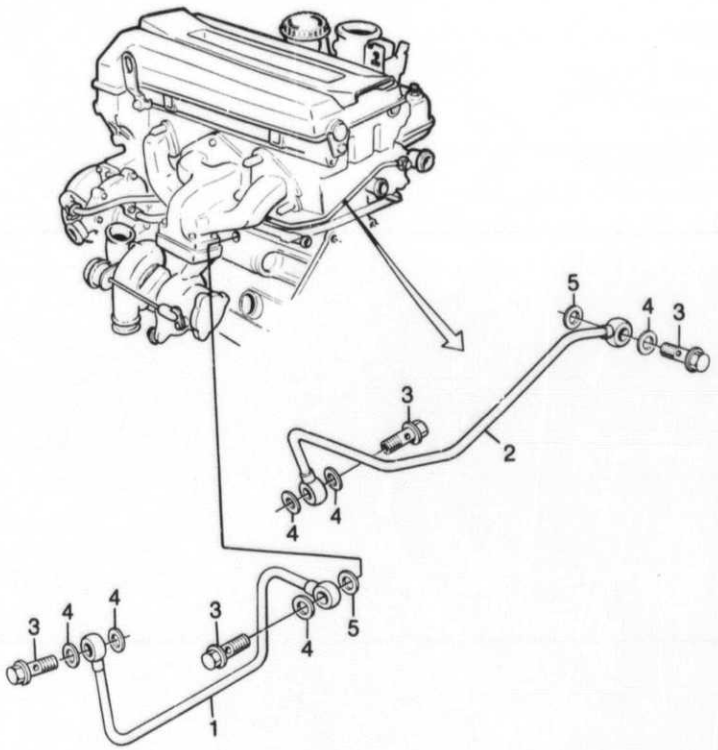

F5088 AAC94

1563	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S -
0010	1	91 49 030			1	Tube	Rör	5
0020	2	91 44 155			1	Tube	Rör	5
0030	3	91 43 967			4	Banjo screw	Banjoskruv	5
0040	4	81 24 141			6	Seal	Tätning	5
0050	5	*83 26 712*		NLS - USE 4161162	2	Seal	Tätning	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H14

Fan motor
Fläktmotor

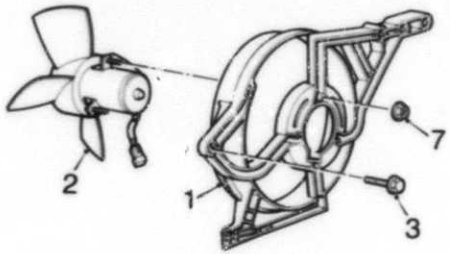

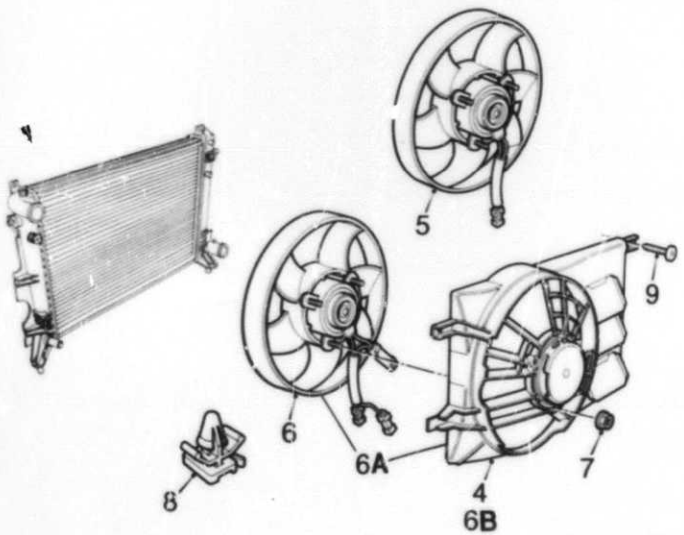

F8590 AAC94

1565	Fig.	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 37 061		M, SE,GB,EU,CA	1	Fan shroud plastic	Fläktkåpa plast	4
0030	2	43 57 489		23) M, SE,GB,EU,CA 160W	1	Fan motor	Fläktmotor	4
0050	3	79 73 597			2	Screw	Skruv	5
0060	4	42 37 046		AC/ACC, US,ME,AU,PA, SE,EU,GB,CA M, SE,GB,EU,CA A	1	Fan shroud sheet metal	Fläktkåpa plåt	4
0100	5	*43 57 133*		23,87) A, SE,GB,EU,CA AC/ACC, SE,GB,EU,CA 250W NLS – USE 4396248	1	Fan unit	Fläktenhet	4
0130	5	43 96 248		23,88) A, SE,GB,EU,CA AC/ACC, SE,GB,EU,CA 250W	1	Fan unit	Fläktenhet	4
0160	6	*43 57 141*		22,23,87) AC/ACC, US,ME,AU,PA 330W NLS	1	Fan unit	Fläktenhet	4
0190	6	*43 96 255*		22,23,88,128) AC/ACC, US,ME,AU,PA 330W NLS	1	Fan unit	Fläktenhet	4
0230	6A	88 22 769		22,23,88,128) AC/ACC,US,ME,AU,PA 330W ALT. TO 4396255	1	Fan kit	Fläktsats	6
0270	6B	42 37 046			1	.Fan shroud	.Fläktkåpa	4
0290	6	48 77 015			1	.Fan unit	.Fläktenhet	4
0300	6	48 77 015		22,23,129) AC/ACC, US,ME,AU,PA 330W	1	Fan unit	Fläktenhet	4
0340	7	79 74 298			3	Nut	Mutter	5
0350	8	41 76 095			2	Clip	Clips	5
0360	9	79 83 000			2	Hexagon screw	Sexkantsskruv	5

22. Twostep. Tvåstegs.
23. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.
87. Ch -T2006519, -T7001486.
88. Ch T2006520-, T7001487-.
128. Ch. -V2010261, -V7001926
129. Ch. V2010262-, V7001927-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H16

Charge cooler
Laddluftkylare

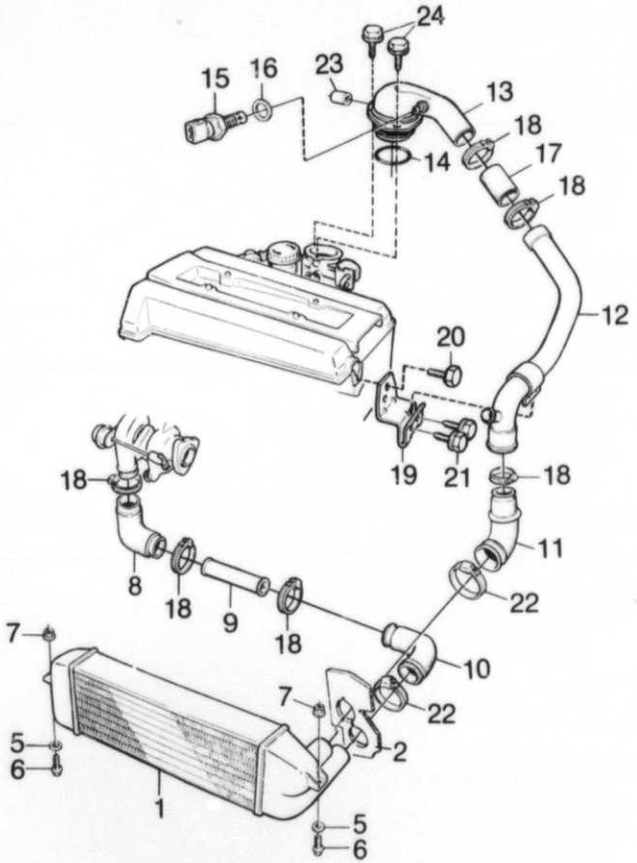

F9304 AAC94

1570	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	42 83 552			1	Radiator	Kylare	4
0020	2	42 83 503			1	Air shield	Luftskärm	5
0030	3	75 43 762			2	Rubber bushing	Gummibussning	5
0040	4	75 44 356			2	Spacer tube	Distansrör	5
0050	5	79 75 469			2	Washer	Bricka	5
0060	6	79 78 158			2	Hexagon screw	Sexkantsskruv	5
0070	7	73 99 454			2	Nut	Mutter	5
0080	8	42 35 735			1	Hose	Slang	5
0090	9	44 44 279		(4235149)	1	Tube	Rör	5
0100	10	42 35 727			1	Hose	Slang	5
0110	11	42 28 805			1	Hose	Slang	5
0120	12	42 28 789			1	Pipe	Rör	6
0130	13	42 28 771			1	Pipe elbow	Rörkrök	6
0140	13	44 43 875		ACS	1	Pipe elbow	Rörkrök	6
0150	14	42 26 833			1	O-ring	O-ring	2
0160	15	88 59 886		-1995	1	Intake air temp. sensor	Temperaturgivare	3
0170	15	91 74 442		1996-	1	Intake air temp. sensor	Temperaturgivare	8
0180	16	41 61 261			1	Washer	Bricka	2
0190	17	75 26 288			1	Hose	Slang	5
0200	18	79 70 130			6	Hose clamp	Slangklamma	5
0210	19	42 26 841			1	Bracket	Fäste	5
0220	20	79 78 182			1	Screw	Skruv	5
0230	21	79 78 117			2	Screw	Skruv	5
0240	22	79 70 148			2	Hose clamp	Slangklamma	5
0250	23	43 94 318			1	Bushing	Bussning	4
0260	24	79 78 117			2	Screw	Skruv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H18 Oil cooler -1997, 6-cylinder

Oljekylare -1997, 6-cylindrig

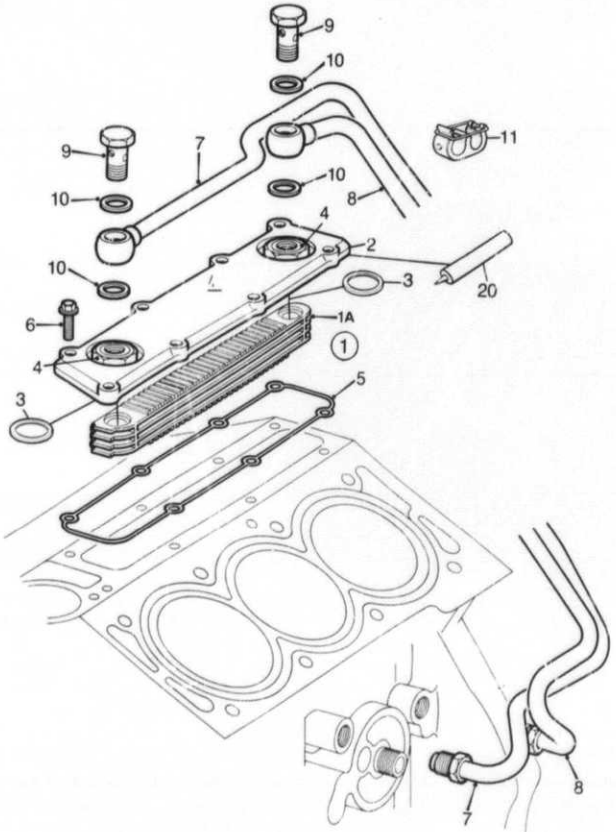

F8693 AAC94

1580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 02 431*		NLS – USE 4770988	1	Oil cooler	Oljekylare	4
0020	1A	45 02 449		-1996	1	.Oil cooler	.Oljekylare	4
0030	1A	47 70 988		1997-	1	.Oil cooler	.Oljekylare	4
0040	2	45 02 456		-1994	1	.Cover	.Lock	4
0050	2	47 70 152		1995-	1	.Cover	.Lock	4
0060	3	45 02 472			2	.Seal	.Tätning	4
0070	4	45 02 480			2	.Nut	.Mutter	5
0080	5	*45 02 498*		65) NLS – USE 4770202	1	Gasket	Packning	3
0090	5	*46 20 001*		66), 50ML NLS – USE 4770202	1	Flange sealant	Flänstätning	5
0100	6	43 46 854			8	Screw	Skruv	5
0110	7	45 02 506		-1995	1	Oil pipe	Oljerör	4
0120	7	46 20 274		1996-	1	Oil pipe	Oljerör	4
0130	8	45 02 514		-1995	1	Oil pipe	Oljerör	4
0140	8	46 20 282		1996-	1	Oil pipe	Oljerör	4
0150	9	45 02 530		63)	2	Hollow screw	Hälskruv	5
0160	9	46 21 397		64)	2	Hollow screw	Hälskruv	5
0170	10	*45 02 555*		67) NLS – USE 4621413	4	Sealing ring	Tätningsring	4
0180	10	46 21 413		68)	4	Sealing ring	Tätningsring	4
0190	11	46 21 421			1	Bracket	Fäste	
0200	20	87 81 841		280 ML	X	Flange sealant	Flänstätning	3

63. Engine -56046.
64. Engine 56047-.
65. Engine -31999.
66. Engine 32100-.
67. Engine -36251.
68. Engine 36251-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1 -H20

Air oil cooler
Engine

Luftoljekylare
Motor

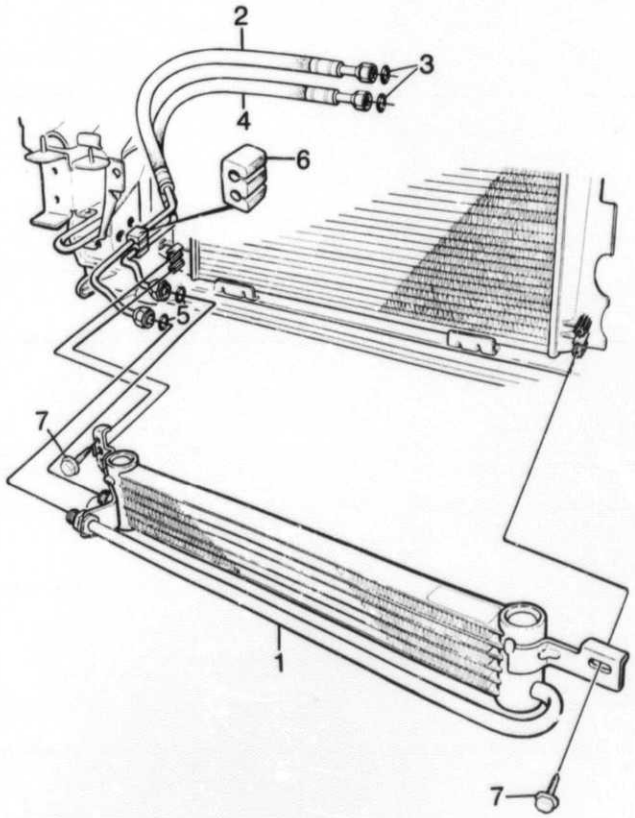

F5092 AAC94

1590	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 57 042			1	Oil cooler	Oljekylare	4
0020	2	43 57 414			1	Hose	Slang	3
0025	3	79 77 598			2	.O-ring	.O-ring	2
0030	4	43 57 208			1	Hose	Slang	3
0040	5	79 77 598			2	.O-ring	.O-ring	2
0050	6	43 57 224			1	Rubber block	Gummiblock	5
0060	7	79 83 000			3	Hexagon screw	Sexkantsskruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-H22

Air oil cooler
Automatic transmission

Luftoljekylare
Automatisk växellåda

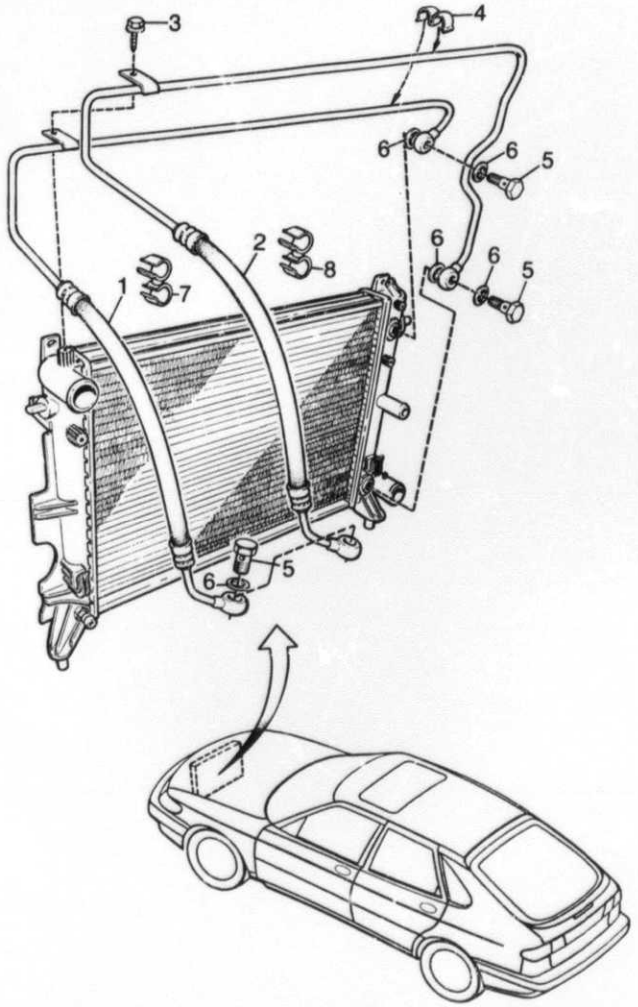

F6828 AAC94

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 83 537		1994,10)	1	Hydraulic hose	Hydraulslang	3
0020	1	43 95 117		1995-,11)	1	Hydraulic hose	Hydraulslang	3
0030	2	42 83 545		1994,10)	1	Hydraulic hose	Hydraulslang	3
0040	2	43 95 133		1995-,11)	1	Hydraulic hose	Hydraulslang	3
0050	3	79 83 000			1	Hexagon screw	Sexkantsskruv	5
0060	4	42 42 780			1	Clip	Clips	5
0070	5	43 74 211			4	Banjo bolt	Hålbult	5
0080	6	41 61 162			8	Seal	Tätning	5
0090	7	73 98 464			1	Clamp	Klammer	5
0100	8	75 59 768			1	Clip	Clips	5

10. CV, ch. -S7009999
11. CV, ch. S7010000-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

Cooling system

1-H24 *Coolant pump 4-cylinder*

Kylsystem

Kylvätskepump 4-cylindrig

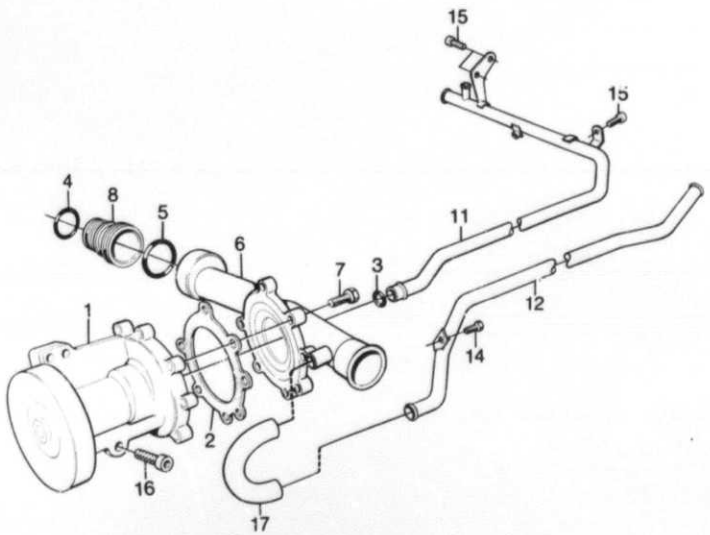

F5094 AAC94

1700	Pos	Part No/Art.nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	*88 22 652*		118) NLS – USE 8822744	1	Coolant pump	Kylvätskepump	2
0020	1	88 22 744		119)	1	Coolant pump	Kylvätskepump	2
0030	2	91 44 767			1	.Gasket	.Packning	2
0040	3	91 46 598			1	.O-ring	.O-ring	2
0050	4	91 46 606			1	.O-ring	.O-ring	2
0060	5	91 46 614			1	.O-ring	.O-ring	2
0070	6	91 44 734		101)	1	.Pump connection	.Pumpanslutning	6
0080	6	91 44 759		102)-1996	1	.Pump connection	.Pumpanslutning	6
0090	6	• 91 87 691		1997-	1	.Pump connection	.Pumpanslutning	6
0100	7	80 59 586			7	.Screw	.Skruv	5
0110	8	91 37 514			1	Tube	Rör	5
0120	11	91 46 549			1	Tube	Rör	5
0130	12	91 46 523			1	Tube	Rör	5
0140	14	79 72 466		-1996	1	Screw	Skruv	5
0150	14	79 78 109		1997-	1	Screw	Skruv	5
0160	15	79 71 294			3	Screw	Skruv	5
0170	16	*80 59 800*		-1995 NLS – USE 7978216	3	Screw	Skruv	5
0180	16	79 78 216		1996-	3	Hexagon screw	Sexkantsskruv	5
0190	17			See page 2-123, 1-H04	1	Radiator hose	Kylarslang	

101. Engine –T026591
102. Engine T026592–
118. Engine –T074936.
119. Engine T074937–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-I02

Coolant pump
-1997, 6-cylinder

Kylvätskepump
-1997, 6-cylindrig

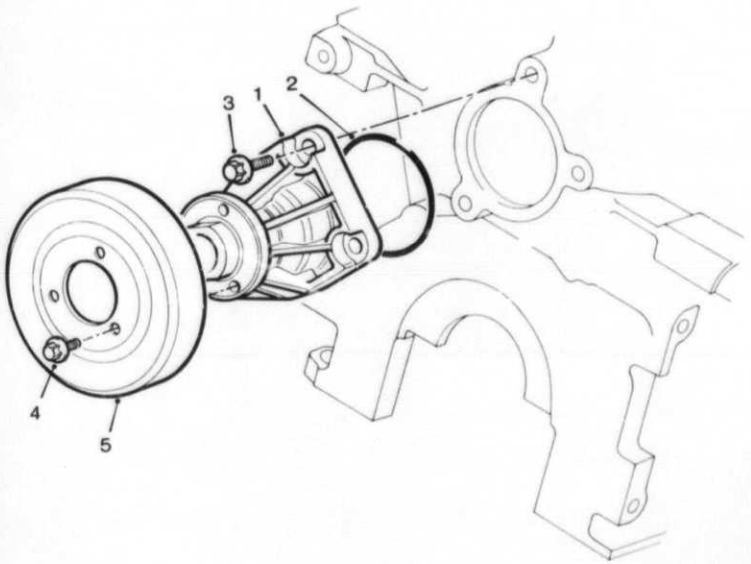

F5095 AAC94

1725	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 21 944*		NLS – USE 4770970	1	Coolant pump	Kylvätskepump	2
0020	2	45 02 985			1	.O-ring	.O-ring	2
0030				1)	1	.Coolant pump	.Kylvätskepump	
0040	3	45 03 009			3	Screw	Skruv	5
0050	4	79 78 091		-1994	3	Screw	Skruv	5
0060	4	43 47 738		1995-	3	Screw	Skruv	5
0070	5	44 43 206		-1994	1	Pulley	Remskiva	6
0080	5	46 21 470		1995-	1	Pulley	Remskiva	6

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-I04

Thermostat
4-cylinder

Termostat
4-cylindrig

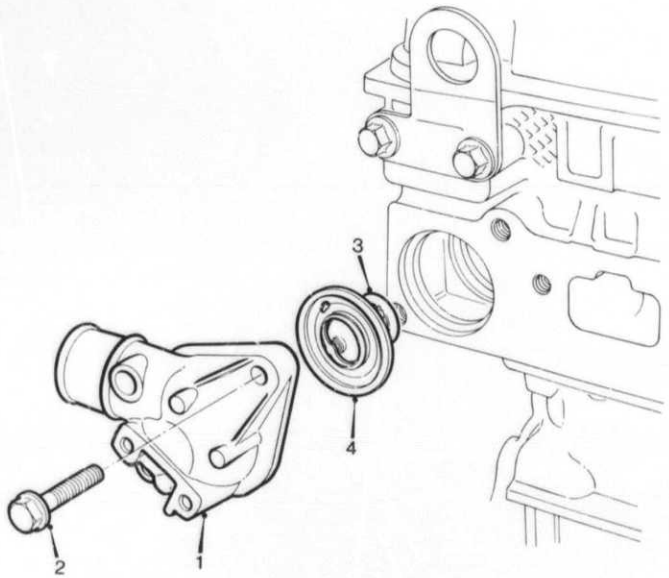

F5096 AAC94


1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 43 934			1	Cover	Lock	5
0020	2	79 70 015			2	Screw	Skruv	5
0030	3	88 22 025		See page 2-159, 1-I16	1	Thermostat kit	Termostatsats	8
0040	4	83 52 692		-1997	1	.Gasket	.Packning	
0050	4	* 91 76 165		1998-	1	.Gasket	.Packning	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

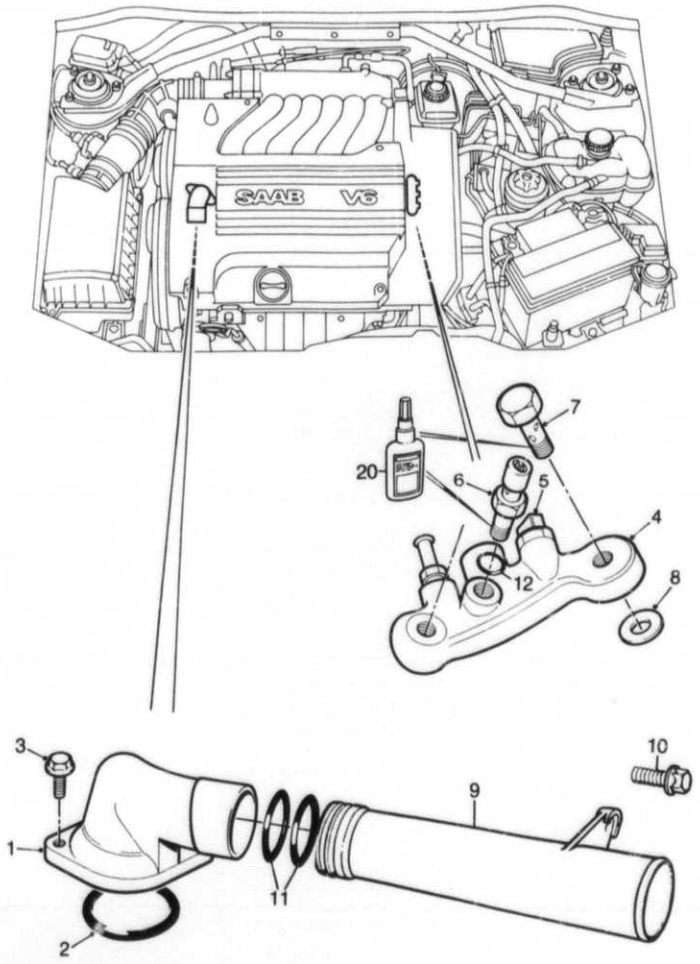

F7858 AAC94

1760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 017		-1995	1	Thermostat	Termostat	1
0020	1	46 23 815		1996-	1	Thermostat	Termostat	8
0030	2	45 03 058			1	O-ring	O-ring	2
0040	3	45 01 110			2	Screw	Skruv	5
0050	4	45 03 082		-1994	1	Adapter	Adapter	5
0060	4	47 70 145		1995-	1	Adapter	Adapter	5
0070	5	*45 03 132*		-1994 NLS – USE 4770228	1	.EC temperature sensor	.Temperaturgivare	2
0080	5	47 70 228		1995	1	.EC temperature sensor	.Temperaturgivare	2
0081	5	46 60 585		1996-	1	.EC temperature sensor	.Temperaturgivare	2
0090	6	*42 29 084*		NLS – USE 9182270	1	.EC temperature sensor	.Temperaturgivare	2
0100	7	45 02 530		63)	2	Hollow screw	Hålskruv	5
0110	7	46 21 397		64)	2	Hollow screw	Hålskruv	5
0120	8	*45 02 555*		67) NLS – USE 4621413	2	Sealing ring	Tätningsring	4
0130	8	46 21 413		68)	2	Sealing ring	Tätningsring	4
0140	9	45 03 066			1	Outlet pipe	Utloppsrör	5
0150	10	43 46 854			1	Screw	Skruv	5
0160	11	45 03 074			2	O-ring	O-ring	2
0170	12	46 20 324			4	Sealing ring	Tätningsring	5
0180	20	74 96 284		50 ML	X	Hydraulic sealant	Gängtätning	5

63. Engine -56046.
64. Engine 56047-.
67. Engine -36251.
68. Engine 36251-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-I08

Accelerator control
Gasreglage

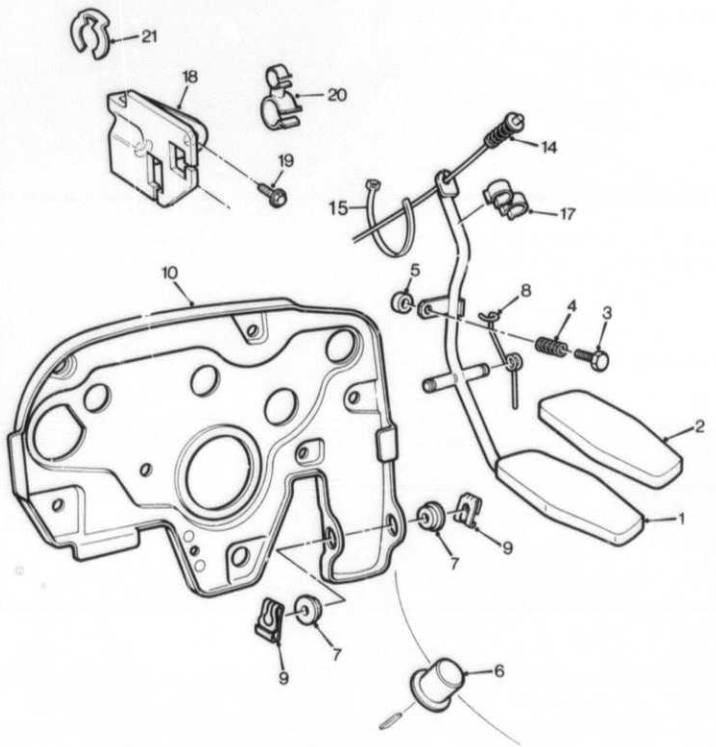

F6043 AAC94

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 44 687			1	Accelerator arm	Gaspedalarm	6
0020	1	42 42 004		RHD	1	Accelerator arm	Gaspedalarm	6
0030	2	42 44 679			1	Pedal pad	Pedalgummi	5
0040	2	42 41 998		RHD	1	Pedal pad	Pedalgummi	5
0050	3	43 45 815			1	Screw	Skruv	5
0060	4	42 41 972			1	Compression spring	Tryckfjäder	5
0070	5	42 41 956			1	Rubber stop	Gummistopp	5
0080	6	43 73 759			1	Rubber stop	Gummistopp	5
0090	6	43 73 767		RHD	1	Rubber stop	Gummistopp	5
0100	7	42 42 079			2	Bearing washer	Lagerbricka	5
0110	8	43 99 564			1	Return spring	Returfjäder	5
0120	9	43 45 443			2	Clip	Clips	5
0130	10			See page 5-019, 4-D20		Cowl plate	Torpedplåt	
0170								
0180	14	44 44 121		LHD, 4-CYL, M	1	Cable	Kabel	
0190	14	44 44 121		LHD, ACS	1	Cable	Kabel	
0200	14	44 44 139		LHD, 4-CYL, A	1	Cable	Kabel	
0210	14	42 28 938		-1997 LHD, 6-CYL, M	1	Cable	Kabel	3
0220	14	44 44 014		-1997 LHD, 6-CYL, A	1	Cable	Kabel	3
0230								
0240	14	42 28 912		RHD, 4-CYL, M	1	Cable	Kabel	3
0250	14	42 28 912		RHD, ACS	1	Cable	Kabel	3
0260	14	44 44 006		RHD, 4-CYL, A	1	Cable	Kabel	3
0270	14	42 28 953		-1997 RHD, 6-CYL, M	1	Cable	Kabel	3
0280	14	44 44 022		-1997 RHD, 6-CYL, A	1	Cable	Kabel	3
0285	15	79 71 880		-1997 RHD, 6-CYL	1	Tensioning band	Spännband	4
0290								
0300	17	73 98 464		4-CYL	1	Clamp	Klammer	5
0310	18	43 94 359		-1997 6-CYL	1	Bracket	Fäste	5
0320	19	45 00 351		-1997 6-CYL	2	Screw	Skruv	5
0330	20	75 39 984			1	Clamp	Klammer	5
0340	21	42 27 823			1	Lock ring	Säkringsring	5


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-I10

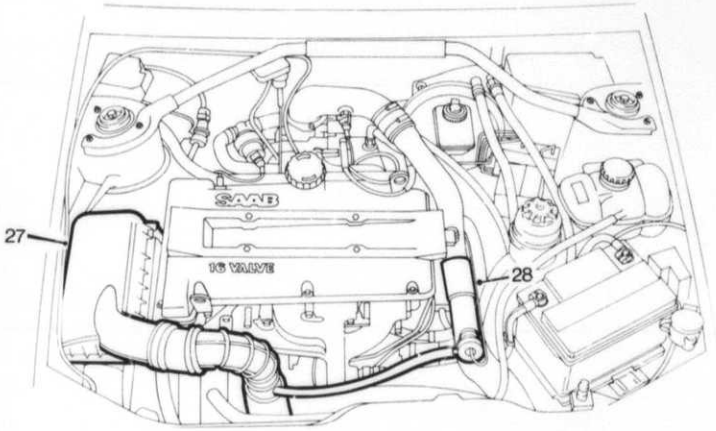

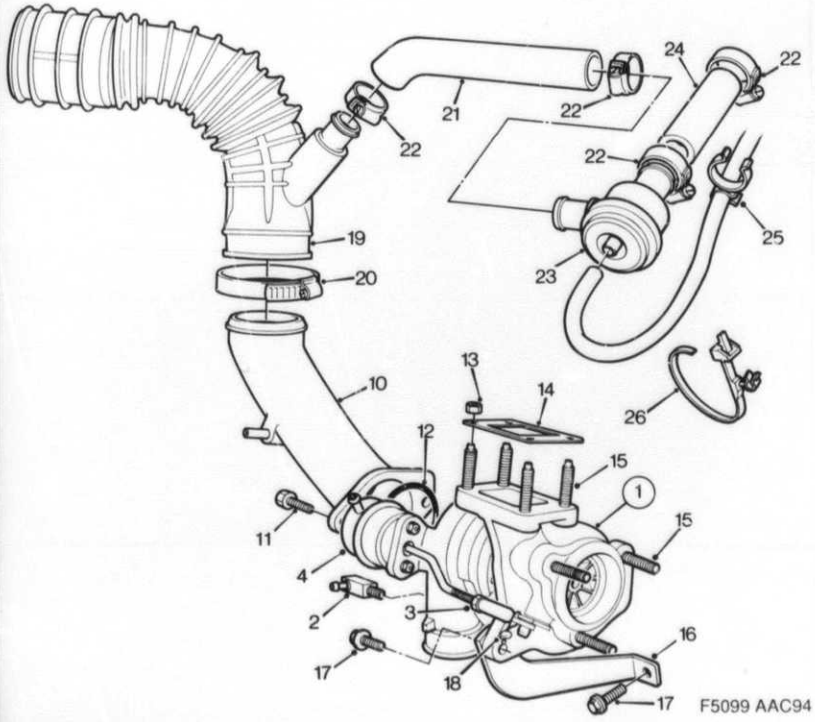

F5099 AAC94

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 46 010		7)	1	Turbocharger	Turbokompressor	4
0020	2	91 69 517			1	.Nipple	.Nippel	3
0030	3	91 69 426			1	.Nut	.Mutter	
0040	4	91 69 434			1	.Wastegate	.Tryckregulator	4
0050	10	91 43 819		153)	1	Tube	Rör	5
0060	10	91 80 480		154)	1	Tube	Rör	5
0070	11	80 59 586		-1995	2	Screw	Skruv	5
0080	11	79 78 117		1996-	2	Screw	Skruv	5
0090	12	91 47 844			1	O-ring	O-ring	2
0100	13	91 16 674			1	Nut	Mutter	5
0110	14	91 13 937			1	Gasket	Packning	2
0120	15	93 57 138			7	Screw	Skruv	5
0130	16	91 46 150			1	Stay	Stag	5
0140	17	*80 59 768*		NLS – USE 7978075	2	Screw	Skruv	5
0150	18	88 18 569		-1996	X	Sealing kit	Plomberingssats	2
0160				See page 2-159, 1-I16				
0170	18	91 85 489		1997-	X	Sealing kit	Plomberingssats	2
0180				See page 2-159, 1-I16				
0190	19	42 28 532			1	Hose	Slang	4
0200	20	79 70 148			1	Hose clamp	Slangklamma	5
0210	21	44 44 253			1	Hose	Slang	4
0220	22	79 70 098			4	Hose clamp	Slangklamma	5
0230	23	43 91 157			1	Charge air bypass valve	By-passventil	2
0240	24	44 44 261			1	Hose	Slang	4
0250	25	73 98 407			1	Clamp	Klammer	5
0260	26	73 98 977			1	Tensioning band	Spännband	5
0270	27			See page 2-059, 1-E12		Air cleaner	Luftrenare	
0280	28			See page 2-135, 1-H16		Hose	Slang	


7. Also available as exchange unit. Finns även som utbytesenhet.
153. Engine -V059179.
154. Engine V059180-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

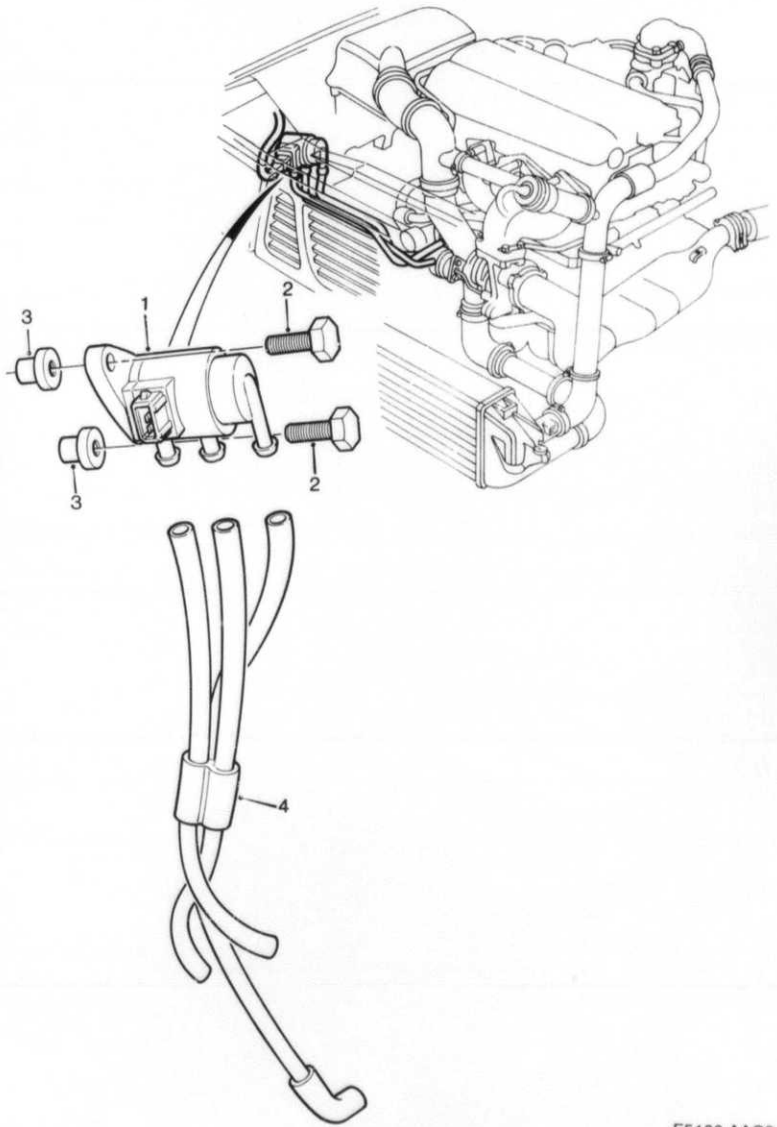

F5100 AAC94

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 85 576		TURBO	1	Boost press control valve	Magnetventil	8
0020	2	80 59 420			2	Screw	Skruv	5
0030	3	79 73 456			2	Expanding nut	Expandermutter	5
0040	4	44 43 859			1	Vaccum hose	Vakuumslang	3

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

1-I14

Engine bay cover
Motorrumsavtäckning

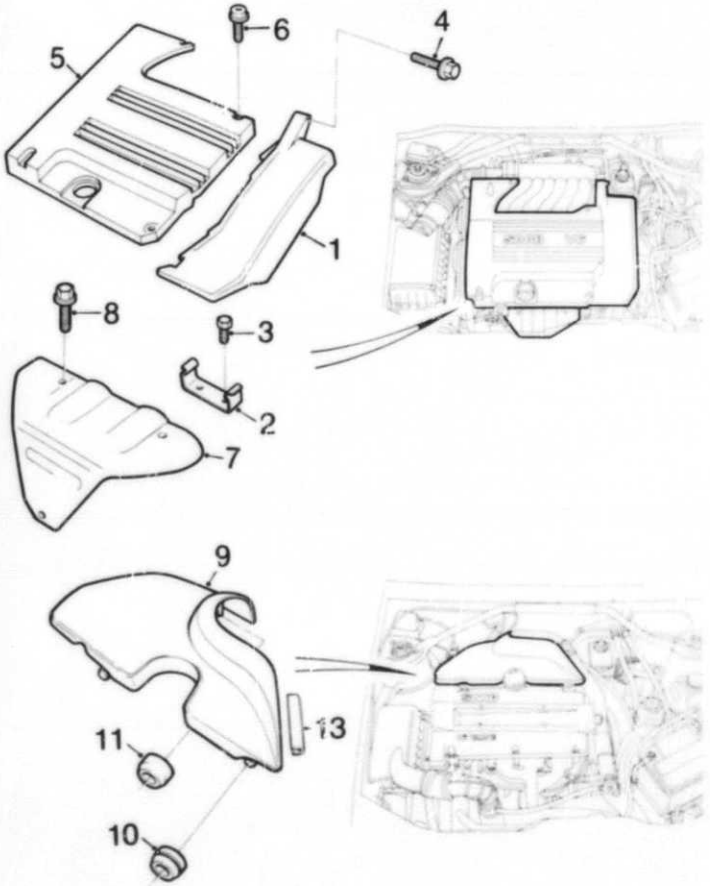

F9302 AAC94

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 94 334		-1997, B258	1	Cover	Avtäckning	
0020	2	44 43 339		-1997, B258	1	Clamp	Klamma	5
0030	3	79 78 091		-1997, B258	2	Screw	Skruv	5
0040	4	79 78 174		-1997, B258	1	Screw	Skruv	5
0050								
0060	5	42 29 068		-1997, B258	1	Engine casing	Motorkåpa	
0070	6	91 45 764		-1997, B258	4	Screw	Skruv	5
0080								
0090	7	*45 04 916*		-1997, B258 NLS – USE 4726659	1	Cover	Avtäckning	4
0090								
0100	8	*45 02 076*		-1997, B258 NLS – USE 7978091	1	Screw	Skruv	5
0100								
0110								
0120	9	42 28 169		B204L	1	Cover	Avtäckning	
0130	10	40 27 488		B204L	2	Rubber bushing	Gummibussning	4
0140	11	43 94 318		B204L	1	Bushing	Bussning	4
0150	13	46 24 466		B204L	1	Protecting moulding	Skyddslist	5


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16


1-I16

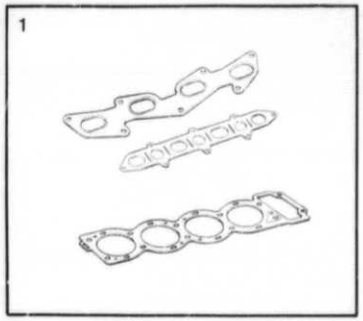


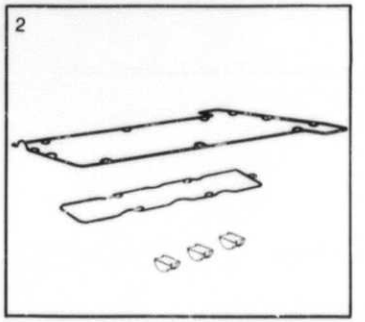

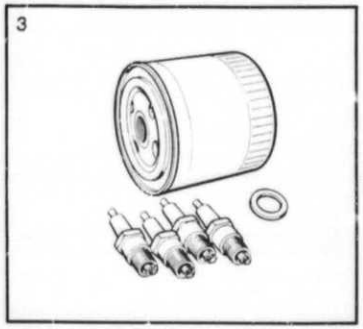

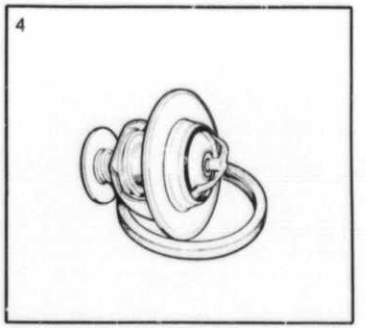

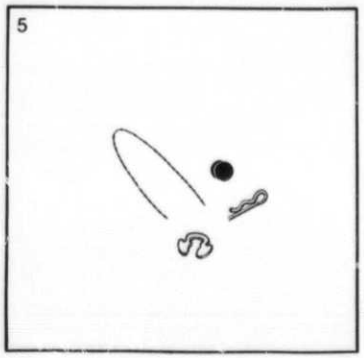

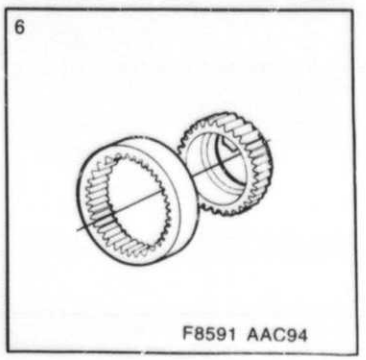

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 033		4-CYL	X	Gasket kit	Sotningssats	2
0020		91 38 884			2	.Gasket	.Packning	
0030		*91 44 528*		NLS – USE 9179235	1	.Gasket	.Packning	2
0040		91 66 497			1	.Gasket	.Packning	8
0050								
0060	2	88 22 041		4-CYL	X	Gasket kit	Packningsats	1
0070						Valve cover	Ventilkåpa	
0080		91 33 026			1	.Gasket	.Packning	1
0090		91 33 034			1	.Gasket	.Packning	1
0100								
0110	2	93 21 969		1994, 6-CYL	X	Gasket kit	Packningsats	1
0120						Valve cover	Ventilkåpa	
0130		*45 04 213*		1) NLS	1	.Gasket	.Packning	1
0140		*45 04 221*		1) NLS	1	.Gasket	.Packning	1
0150								
0160	2	47 70 319		1995-1997, 6-CYL	X	Gasket kit	Packningsats	1
0170						Valve cover	Ventilkåpa	
0180				1)	1	.Gasket	.Packning	
0190				1)	1	.Gasket	.Packning	
0200								
0210	3	93 21 746		B204I, B206I	X	Service kit	Servicesats	1
0220		91 44 445			1	.Filter	.Filter	1
0230		91 36 276			4	.Spark plug	.Tändstift	8
0240		81 24 141			1	.Seal	.Tätning	5
0250		87 28 057			1	.Gasket	.Packning	3
0260		87 18 439			1	.Gasket	.Packning	3
0270								
0280	3	74 96 243		B234I	X	Service kit	Servicesats	1
0290		91 44 445			1	.Filter	.Filter	1
0300		91 39 643			4	.Spark plug	.Tändstift	8
0310		81 24 141			1	.Seal	.Tätning	5
0320								
0330	3	74 96 250		-1997, B258I	X	Service kit	Servicesats	1
0340		45 02 696			1	.Filter	.Filter	1
0350		45 01 029			6	.Spark plug	.Tändstift	8
0360		*45 02 134*		NLS – USE 4345716	1	.Sealing ring	.Tätningsring	1
0370								
0380	3	88 19 138		B204L	X	Service kit	Servicesats	1
0390		91 44 445			1	.Filter	.Filter	1
0400		91 12 541			4	.Spark plug	.Tändstift	8
0410		81 24 141			1	.Seal	.Tätning	5
0420								
0430	4	88 22 025		4-CYL	X	Thermostat kit	Termostatsats	8
0440		91 66 687		1)	1	.Thermostat	.Termostat	1
0450		83 52 692			1	.Gasket	.Packning	
0460								
0470	5	88 18 569		-1996 TURBO	X	Sealing kit	Plomberingssats	2
0480		91 68 352		1)	1	.Seal	.Plomb	2
0490		*81 17 020*		1) NLS – USE 9168352	1	.Sealing wire	.Plomberingstråd	2
0500		89 25 067			1	.Lock needle	.Låsnål	5
0510		*93 50 505*		NLS – USE 9185497	1	.E-circlip	.Spärryttare	2
0520								
0530	5	91 85 489		1997-TURBO	X	Sealing kit	Plomberingssats	2
0531		89 25 067			1	Lock needle	Låsnål	5
0532		91 85 497			1	E-circlip	Spärryttare	2
0540								
0550	6	93 21 936		-1996, 4-CYL	X	Pump kit	Pumpsats	5
0560		*75 15 588*		1) NLS – USE 9185513	1	.Pump rotor	.Pumphjul	5
0570		91 29 701		1)	1	.Pump rotor	.Pumphjul	5
0580								
0590	6	88 22 702		1997-, 4-CYL	X	Pump kit	Pumpsats	5
0600		91 73 584		1)	1	.Pump rotor	.Pumphjul	5

1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16


1-I18

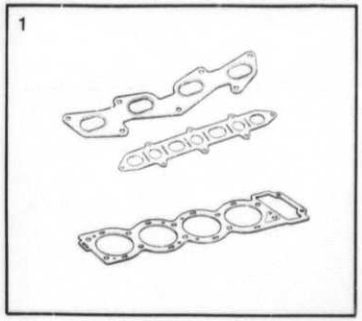


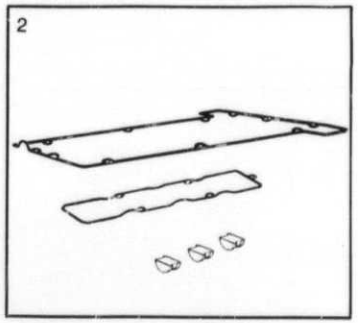

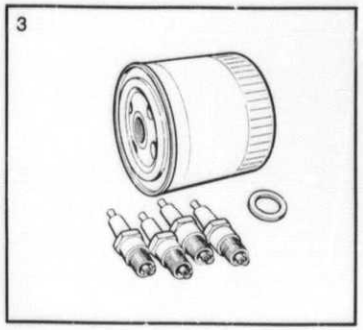

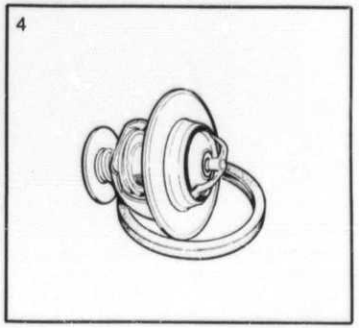

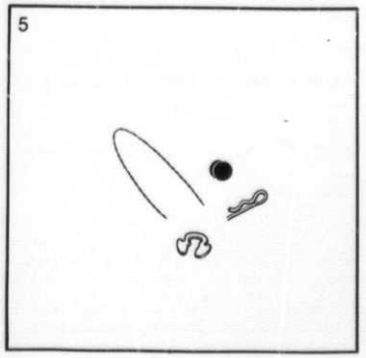

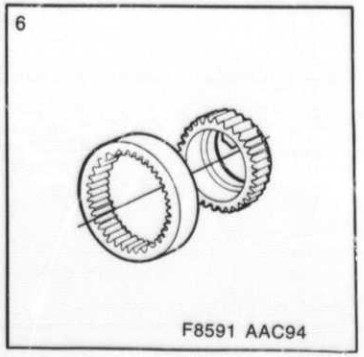

2500 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	91 73 592		1)	1	.Pump rotor	.Pumphjul	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D10
Lubrication system	1-D24
Fuel system	1-E12
Inlet and exhaust system	1-F10
Cooling system	1-H04
Engine control	1-I08
Supercharging system	1-I10
Engine bay cover	1-I14
Kits	1-I16

2-A02

3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

TABLE OF CONTENTS

Battery		
Battery	3A : 5	2-A06
Alternator		
Alternator, Bosch 70A	3A : 9	2-A10
Alternator, Bosch 90A	3A : 11	2-A12
Alternator, Bosch 120A	3A : 13	2-A14
Starter		
Starter, 4-cyl.	3A : 15	2-A16
Starter, 6-cyl.	3A : 17	2-A18
Ignition system		
Motronic	3A : 19	2-A20
Ignition leads, spark plugs etc, 4-cyl.	3A : 23	2-A24
Ignition leads, spark plugs etc, 6-cyl.	3A : 25	2-B02
Distributor, 4-cyl.	3A : 27	2-B04
Trionic	3A : 29	2-B06
Lighting		
Headlamps	3A : 31	2-B08
Headlamps, US	3A : 33	2-B10
Lamp cluster	3A : 35	2-B12
Fog light	3A : 37	2-B14
Tail lamp	3A : 39	2-B16
Stop light, high mounted	3A : 43	2-B20
Other lights	3A : 45	2-B22
Electrical equipment, other		
Horn	3A : 49	2-C02
Windscreen wiper	3A : 51	2-C04
Headlamp wiper	3A : 53	2-C06
Washer unit	3A : 55	2-C08
Rear window wiper	3A : 59	2-C12
Central lock	3A : 61	2-C14
Switches	3A : 63	2-C16
Speed control system	3A : 69	2-C22
Actuators	3A : 71	2-C24
Air-bag	3A : 75	2-D04
Actuators, ACC	3A : 77	2-D06
Audio system	3A : 79	2-D08
Anti theft system	3A : 83	2-D12
Electrical system, TCS	3A : 85	2-D14
Wiring and fuses		
Wiring, 1994	3A : 87	2-D16
Wiring, 1995	3A : 101	2-E06
Wiring, 1996	3A : 117	2-E22
Wiring, 1997	3A : 131	2-F12
Wiring, 1998	3A : 145	2-G02
Tensioning band	3A : 157	2-G14
Bushings, screws, clamps etc	3A : 159	2-G16
Mounting details, body	3A : 161	2-G18
Mounting details, doors	3A : 163	2-G20
Holders and brackets	3A : 165	2-G22
Relays and fuses, DICE 1994	3A : 167	2-G24
Relays and fuses, DICE 1995	3A : 171	2-H04
Relays and fuses, DICE 1996	3A : 175	2-H08
Relays and fuses, DICE 1997	3A : 179	2-H12
Relays and fuses, DICE 1998	3A : 183	2-H16
Instruments, -1995	3A : 187	2-H20
Instruments, 1996-	3A : 193	2-I02
Complete sets		
Electrical system	3A : 197	2-I06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A03

INNEHÅLLSFÖRTECKNING

Batteri		
Batteri	3A : 5	2-A06
Generator		
Generator, Bosch 70A	3A : 9	2-A10
Generator, Bosch 90A	3A : 11	2-A12
Generator, Bosch 120A	3A : 13	2-A14
Startmotor		
Startmotor, 4-cyl.	3A : 15	2-A16
Startmotor, 6-cyl.	3A : 17	2-A18
Tändsystem		
Motronic	3A : 19	2-A20
Tändkablar, tändstift etc. 4-cyl.	3A : 23	2-A24
ckablar, tändstift etc. 6-cyl.	3A : 25	2-B02
dfördelare, 4-cyl.	3A : 27	2-B04
Trionic	3A : 29	2-B06
Belysning		
Strålkastare	3A : 31	2-B08
Strålkastare, US	3A : 33	2-B10
Kombinationslykta	3A : 35	2-B12
Dimljus	3A : 37	2-B14
Baklykta	3A : 39	2-B16
Stopplykta, högt monterad	3A : 43	2-B20
Övrig belysning	3A : 45	2-B22
Övrig elektrisk utrustning		
Signalhorn	3A : 49	2-C02
Vindrutetorkare	3A : 51	2-C04
Strålkastartorkare	3A : 53	2-C06
Spolaranläggning	3A : 55	2-C08
Bakrutetorkare	3A : 59	2-C12
Centrallås	3A : 61	2-C14
Strömställare	3A : 63	2-C16
Farthållningssystem	3A : 69	2-C22
Manöverdon	3A : 71	2-C24
Airbag	3A : 75	2-D04
Manöverdon, ACC	3A : 77	2-D06
Ljudsystem	3A : 79	2-D08
Stöldlarm	3A : 83	2-D12
Elektriskt system, TCS	3A : 85	2-D14
Ledningar och säkringar		
Ledningsnät 1994	3A : 87	2-D16
Ledningsnät 1995	3A : 101	2-E06
Ledningsnät 1996	3A : 117	2-E22
Ledningsnät 1997	3A : 131	2-F12
Ledningsnät 1998	3A : 145	2-G02
Spännband	3A : 157	2-G14
Bussningar, skruvar, klammor etc.	3A : 159	2-G16
Monteringsdetaljer, kaross	3A : 161	2-G18
Monteringsdetaljer, dörrar	3A : 163	2-G20
Hållare och konsoler	3A : 165	2-G22
Reläer och säkringar, DICE 1994	3A : 167	2-G24
Reläer och säkringar, DICE 1995	3A : 171	2-H04
Reläer och säkringar, DICE 1996	3A : 175	2-H08
Reläer och säkringar, DICE 1997	3A : 179	2-H12
Reläer och säkringar, DICE 1998	3A : 183	2-H16
Instrument, -1995	3A : 187	2-H20
Instrument, 1996-	3A : 193	2-I02
Satser		
Elektriskt system	3A : 197	2-I06

2-A04

SUMARIO

Batteria		
Bateria	3A : 5	2-A06
Alternador		
Alternador, Bosch 70A	3A : 9	2-A10
Alternador, Bosch 90A	3A : 11	2-A12
Alternador, Bosch 120A	3A : 13	2-A14
Motor de arranque		
Motor de arranque, 4 sil.	3A : 15	2-A16
Motor de arranque, 6 sil.	3A : 17	2-A18
Sistema de encendido		
Motronic	3A : 19	2-A20
Cable encendido, bujias etc, 4 sil.	3A : 23	2-A24
Cable encendido, bujias etc, 6 sil.	3A : 25	2-B02
Distribuidor, 4 sil.	3A : 27	2-B04
Trionic	3A : 29	2-B06
Alumbrado		
Faros	3A : 31	2-B08
Faros, US	3A : 33	2-B10
Faro combinado	3A : 35	2-B12
Faros antiniebla	3A : 37	2-B14
Piloto trasero	3A : 39	2-B16
Lampara de paro montada	3A : 43	2-B20
Otro alumbrado	3A : 45	2-B22
Otro equipo electrico		
Senal acustica	3A : 49	2-C02
Limpiaparabrisas	3A : 51	2-C04
Limpiacristales de faro	3A : 53	2-C06
Unidad de lavado	3A : 55	2-C08
Limpiaparabrisas post	3A : 59	2-C12
Cerradura central	3A : 61	2-C14
Contactos	3A : 63	2-C16
Control de velocidad de crucero	3A : 69	2-C22
Dispositivos de mando	3A : 71	2-C24
Bolsa de aire	3A : 75	2-D04
Dispositivos de mando, ACC	3A : 77	2-D06
Sistema de audio	3A : 79	2-D08
Alarma antirobo	3A : 83	2-D12
Sistema electrico, TCS	3A : 85	2-D14
Conductos y fusibles		
Conductos 1994	3A : 87	2-D16
Conductos 1995	3A : 101	2-E06
Conductos 1996	3A : 117	2-E22
Conductos 1997	3A : 131	2-F12
Conductos 1998	3A : 145	2-G02
Cinta tensora	3A : 157	2-G14
Casquillos, tornillos, abrazaderas etc	3A : 159	2-G16
Equipo de montaje, carroceria	3A : 161	2-G18
Equipo de montaje, puertas	3A : 163	2-G20
Portafusibles y cobsolas	3A : 165	2-G22
Reles y fusibili, DICE 1994	3A : 167	2-G24
Reles y fusibili, DICE 1995	3A : 171	2-H04
Reles y fusibili, DICE 1996	3A : 175	2-H08
Reles y fusibili, DICE 1997	3A : 179	2-H12
Reles y fusibili, DICE 1998	3A : 183	2-H16
Instrumentos, -1995	3A : 187	2-H20
Instrumentos, 1996-	3A : 193	2-I02
Juegos completos		
Sistema electrico	3A : 197	2-I06


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A06 Battery — Batteri

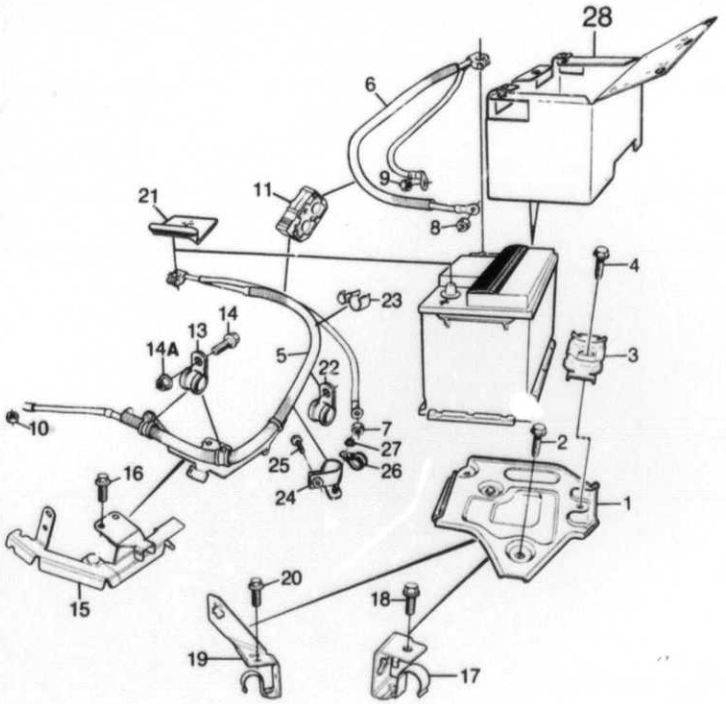

F9273 AAC94

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Descriptio...	Benämning	S L
0010						Battery	Batteri	
0020						See accessories catalogue	Se tillbehörskatalog	
0030	1	43 35 527			1	Battery shelf	Batterihylla	5
0040	2	79 78 091			2	Screw	Skruv	5
0050	3	42 22 667			1	Brace	Bygel	4
0060	4	79 78 216			1	Hexagon screw	Sexkantsskruv	5
0070	5	*44 08 597*		220), + NLS – USE 4946158	1	Cable	Kabel	5
0080	5	49 46 158		221), +	1	Cable	Kabel	5
0090	5	45 84 249		11,220), 1995-, +, ME	1	Cable	Kabel	5
0100	5	49 46 166		221), +, ME	1	Cable	Kabel	5
0110	6	*42 21 875*		220), M, – NLS – USE 4946182	1	Cable	Kabel	4
0120	6	49 46 182		221), M, –	1	Cable	Kabel	4
0130	6	*44 10 486*		220), A, ACS, – NLS – USE 4946174	1	Cable	Kabel	4
0140	6	49 46 174		221), A, ACS, –	1	Cable	Kabel	4
0150	7	79 77 952			1	Hexagon nut alternator	Sexkantsmutter generator	5
0170	8	79 77 952			1	Hexagon nut starter motor	Sexkantsmutter startmotor	5
0190	9	81 51 243			1	Nut gearbox	Mutter växellåda	5
0210	10	79 77 929			1	Nut ground	Mutter jord	5
0240	11	44 11 369			1	Clip	Clips	5
0260	13	79 69 405		4-CYL	2	Clamp	Klammer	5
0270	13	40 87 557		-1997, 6-CYL	2	Clamp	Klammer	5
0280	14	79 78 109		71), 4-CYL	2	Screw	Skruv	5
0290	14	79 72 607		72), 4-CYL	2	Screw	Skruv	5
0300	14	79 78 133		-1997, 6-CYL	2	Screw	Skruv	5
0310	14A	79 77 929		-1997, 6-CYL	2	Nut	Mutter	5
0330	15	44 66 959		-1997, 6-CYL	1	Cable protection	Kabelskydd	4
0340	16	79 78 091		-1997, 6-CYL	3	Screw	Skruv	5
0360	17	44 89 134		10), 1994, M	1	Bracket battery cable	Fäste batterikabel	6
0380	17	44 89 134		10), 1994, ACS	1	Bracket battery cable	Fäste batterikabel	6
0400	17	45 36 090		11), 1995-	1	Bracket battery cable	Fäste batterikabel	6
0420	18	79 72 441		1994	1	Screw	Skruv	5
0430	18	79 78 091		1995-	1	Screw	Skruv	5
0440	19	44 89 126		10), 1994, A	1	Bracket battery cable	Fäste batterikabel	6
0460	19	45 36 090		11), 1995-, 4-CYL, A	1	Bracket battery cable	Fäste batterikabel	6
0480	20	79 72 441		1994	1	Screw	Skruv	5
0490	20	79 78 091		1995-	1	Screw	Skruv	5
0510	21	45 82 425		+	1	Cover	Kåpa	6
0530	22	79 85 658		-1997, 6-CYL	2	Clamp	Klammer	5
0540	23	45 88 695		11), 1995-1997, 6-CYL, A	1	Clip	Clips	5

10. CV, ch. -S7009999
11. CV, ch. S7010000-
71. Ch -S7014393.
72. Ch S7014394-.
220. Ch -V2038675.
221. Ch V2038676-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A08 Battery Batteri

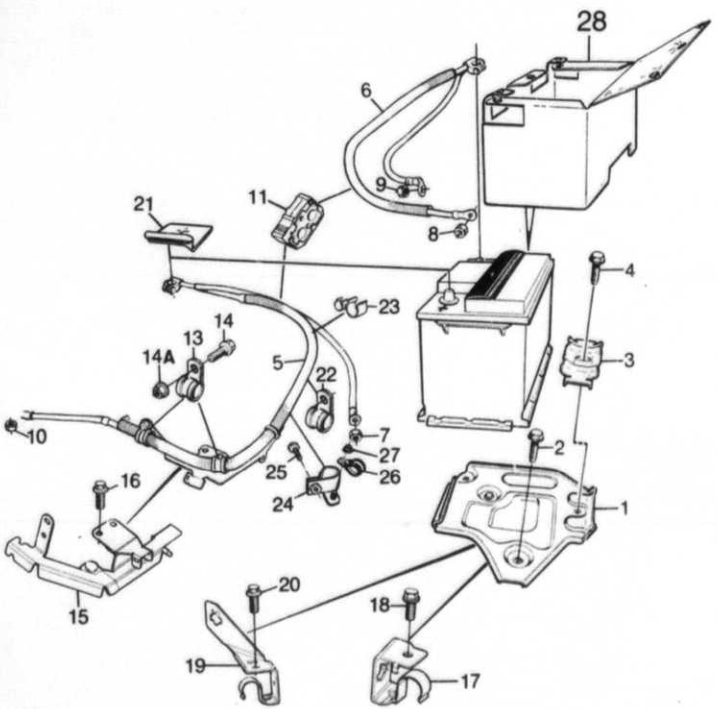

F9273 AAC94

0100	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0550								
0560	24	47 38 100		1996-,139), TURBO A	1	Clamp	Klammer	5
0570	25	79 78 109		1996-,139), TURBO A	1	Screw	Skruv	5
0580	26	79 69 405		1996-,139), TURBO A	1	Clamp	Klammer	5
0590	25	46 85 384		140), TURBO A	1	Clamp	Klammer	
0600	27	80 73 512		1996-,140), TURBO A	1	Lock nut	Låsmutter	3
0610	28	* 49 47 529		8,243)	1	Heat shield	Värmesköld	


8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
139. Ch -T2028301.
140. Ch T2028302-.
199. Ch S2039223-, S7021969-.
243. Ch. W2003239-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

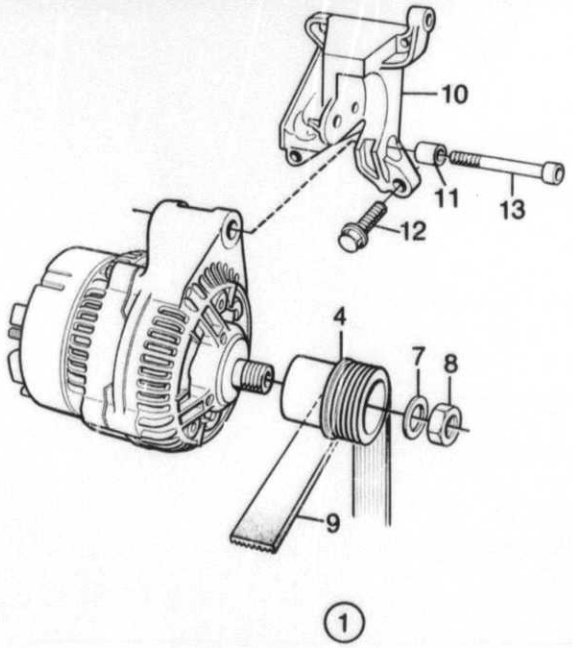

①

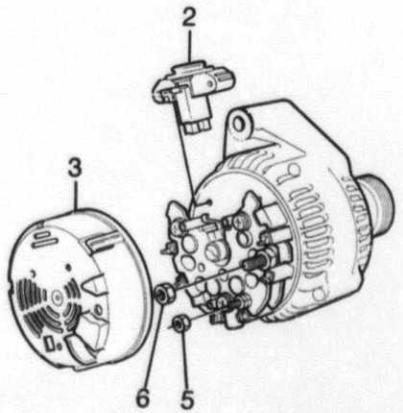

F4927 AAC94

Generator
Bosch 70A

2-A10

Generator
Bosch 70A

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 31 726*		7), -1995 NLS – USE 4739041	1	Generator	Generator	5
0020	1	47 39 041		1996-1997	1	Generator	Generator	5
0030	1	47 34 018		1998-	1	Generator	Generator	5
0040	2	*44 09 983*		-1995 NLS – USE 4737151	1	.Voltage regulator	.Spänningsregulator	2
0050	2	47 37 151		1996-	1	.Voltage regulator	.Spänningsregulator	2
0060	3	44 09 991			1	.Protection	.Skydd	6
0070	4	44 10 007			1	.Pulley	.Remskiva	5
0080	5	79 77 911			1	.Nut	.Mutter	5
0090	6	79 77 952			1	.Hexagon nut	.Sexkantsmutter	5
0100	7	44 89 316			1	.Washer	.Bricka	5
0110	8	44 89 308			1	.Nut	.Mutter	5
0120	9			See page 2-021, 1-C22		Belt	Rem	
0130	10	43 56 093			1	Bracket	Konsol	5
0140	11	75 93 080			1	.Bushing	.Bussning	6
0150	12	79 78 216			4	Hexagon screw	Sexkantsskruv	5
0160	13	80 98 378			2	Screw	Skruv	5


7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

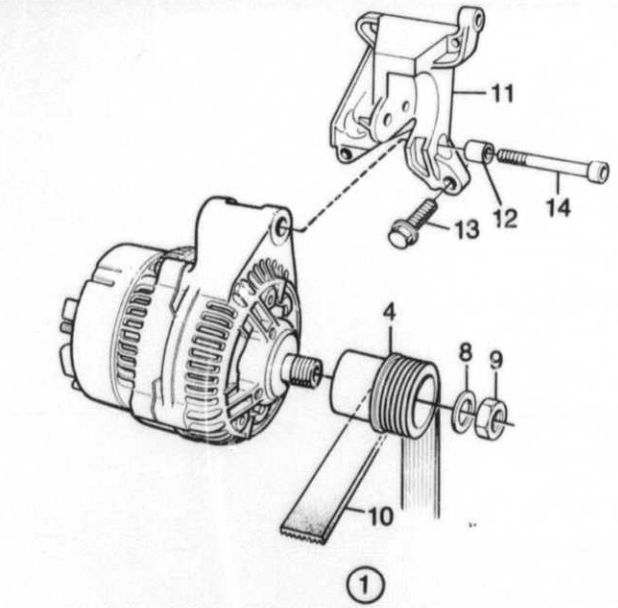

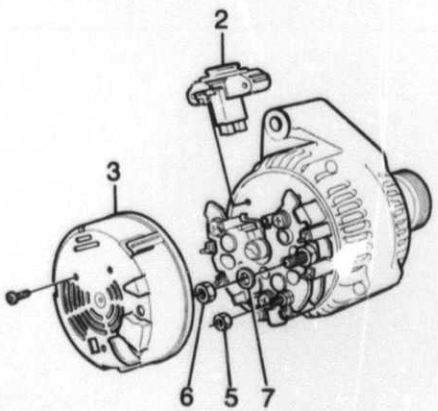

F4928 AAC94

Generator
Bosch 90A

2-A12

Generator
Bosch 90A

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 21 826*		7,124) NLS – USE 4734018	1	Generator	Generator	5
0020	1	47 34 018		125)	1	Generator	Generator	5
0030	2	*44 09 983*		124) NLS – USE 4737151	1	.Voltage regulator	.Spänningsregulator	2
0040	2	47 37 151		125)	1	.Voltage regulator	.Spänningsregulator	2
0050	3	44 09 991			1	.Protection	.Skydd	6
0060	4	44 10 007			1	.Pulley	.Remskiva	5
0070	5	79 77 911			1	.Nut	.Mutter	5
0080	6	79 77 952			1	.Hexagon nut	.Sexkantsmutter	5
0090	7	*73 11 764*		NLS – USE 7399835	1	.Washer	.Bricka	5
0100	8	44 89 316			1	.Washer	.Bricka	5
0110	9	44 89 308			1	.Nut	.Mutter	5
0120	10			See page 2-021, 1-C22		Belt	Rem	
0130	11	43 56 093			1	Bracket	Konsol	5
0140	12	75 93 080			1	.Bushing	.Bussning	6
0150	13	79 78 216			2	Hexagon screw	Sexkantsskruv	5
0160	14	80 98 378			4	Screw	Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.
124. Ch -S2025461, -S7024314.
125. Ch S2025462-, S7024315-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A14

Generator
Bosch 120A
-1997

Generator
Bosch 120A
-1997

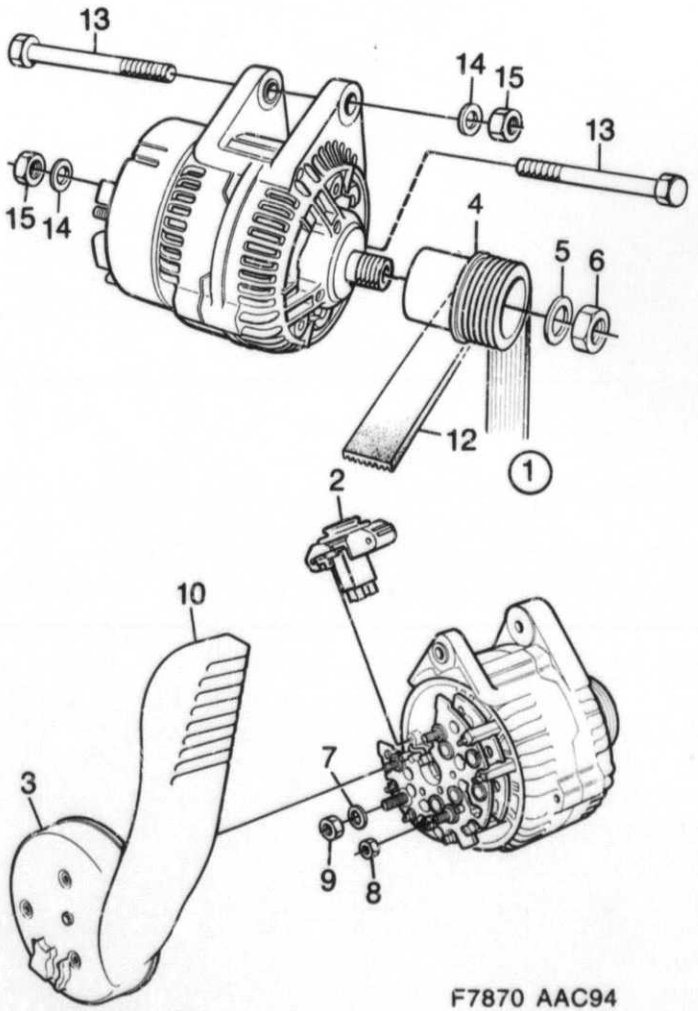

0190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*44 12 805*		7), -1995 NLS – USE 4739066	1	Generator	Generator	5
0020	1	47 39 066		7), 1996-	1	Generator	Generator	5
0030	2	*44 66 918*		-1995 NLS – USE 4737151	1	.Voltage regulator	.Spänningsregulator	2
0040	2	47 37 151		1996-	1	.Voltage regulator	.Spänningsregulator	2
0050	3	44 12 821			1	.Protection	.Skydd	6
0060	4	44 66 900			1	.Pulley	.Remskiva	5
0070	5	44 89 316			1	.Washer	.Bricka	5
0080	6	44 89 308			1	.Nut	.Mutter	5
0090	7	*73 11 764*		NLS – USE 7399835	1	Washer	Bricka	5
0100	8	79 77 911			1	Nut	Mutter	5
0110	9	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0120	10	44 12 813			1	Cover	Kåpa	6
0130	11	79 78 091			1	Screw	Skruv	5
0140	12			See page 2-039, 1-D16		Belt	Rem	
0150	13	79 79 263			2	Screw	Skruv	5
0160	14	80 73 108			2	Washer	Bricka	5
0170	15	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5

7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A16 Starter motor 4-cylinder — Startmotor 4-cylindrig

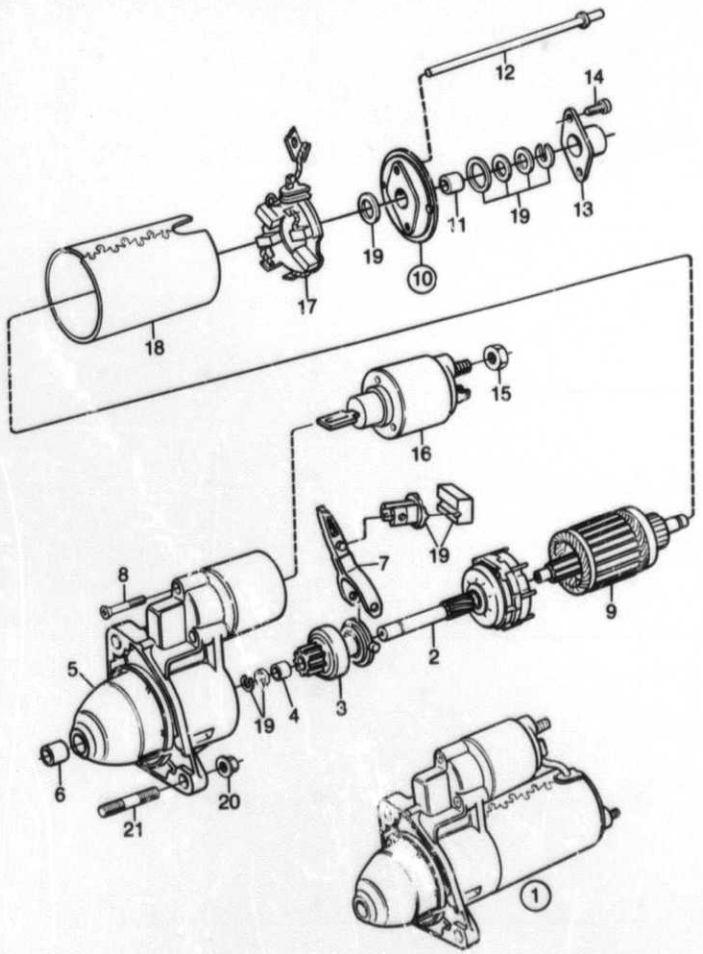

F4930 AAC94

0260	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 35 610	7)	1	Starter motor	Startmotor	5
0020	2	75 35 255		1	.Planetary gear	.Planetväxel	5
0030	3	41 60 099		1	.Drive gear	.Drev	3
0040	4	75 27 732		2	.Bearing bushing	.Lagerbussning	5
0050	5	44 43 750	1)	1	.Gear house	.Drevhus	6
0060	6	75 27 757		1	.Bearing bushing	.Lagerbussning	6
0070	7	75 27 765	1)	1	.Engagement lever	.Kopplingsarm	6
0080	8	75 35 271		3	.Screw	.Skruv	5
0090	9	*44 43 768*	1) NLS	1	.Rotor	.Rotor	5
0100	10	75 35 297	1)	1	.Ball bearing	.Kullager	6
0110	11	75 27 807		1	.Bearing bushing	.Lagerbussning	3
0120	12	75 35 305	1)	2	.Screw	.Skruv	5
0130	13	75 35 313	1)	1	.Cap	.Kapsel	6
0140	14	75 35 321	1)	2	.Screw	.Skruv	5
0150	15	75 35 339	1)	1	.Nut	.Mutter	5
0160	16	44 43 776		1	.Actuator solenoid	.Manövermagnet	3
0170	17	44 43 784		1	.Plate	.Platta	6
0180	18	*75 27 872*	1) NLS	1	.Casing	.Hus	6
0190	19	75 27 880		1	.Kit	.Sats	6
0200	20	79 84 776		1	Nut	Mutter	5
0210	21	79 71 112		1	Stud	Pinnskruv	5

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C07
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-A18 *Starter motor 6-cylinder* *Startmotor 6-cylindrig*

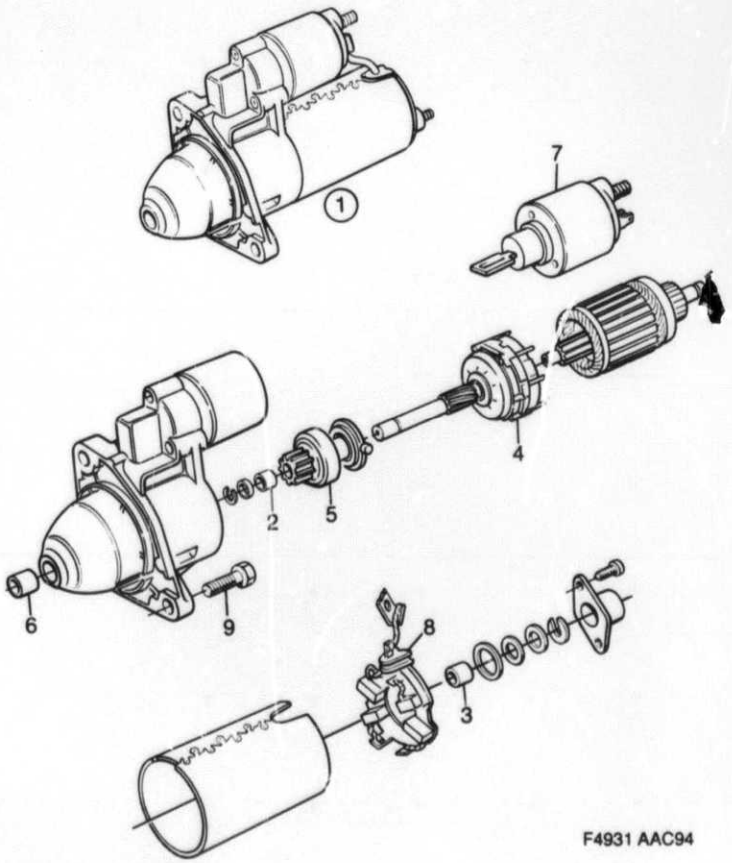

F4931 AAC94

0270	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 04 254		7), -1995	1	Starter motor	Startmotor	5
0020	1	47 70 012		7,307), 1996-	1	Starter motor	Startmotor	5
0030	1	47 70 996		7,308)	1	Starter motor	Startmotor	5
0040	2	75 27 732			1	.Bearing bushing	.Lagerbussning	5
0050	3	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0060	4	88 21 969			1	.Planetary gear	.Planetväxel	3
0070	5	*88 21 977*		NLS – USE 7527724	1	.Drive gear	.Drev	5
0080	6	88 21 985			1	.Sleeve	.Hylsa	6
0090	7	88 21 993			1	.Actuator solenoid	.Manövermagnet	3
0100	8	88 22 009			1	.Plate	.Platta	3
0110	9	45 03 009			2	Screw	Skruv	5

307. Engine –180176.
308. Engine 180177–.


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

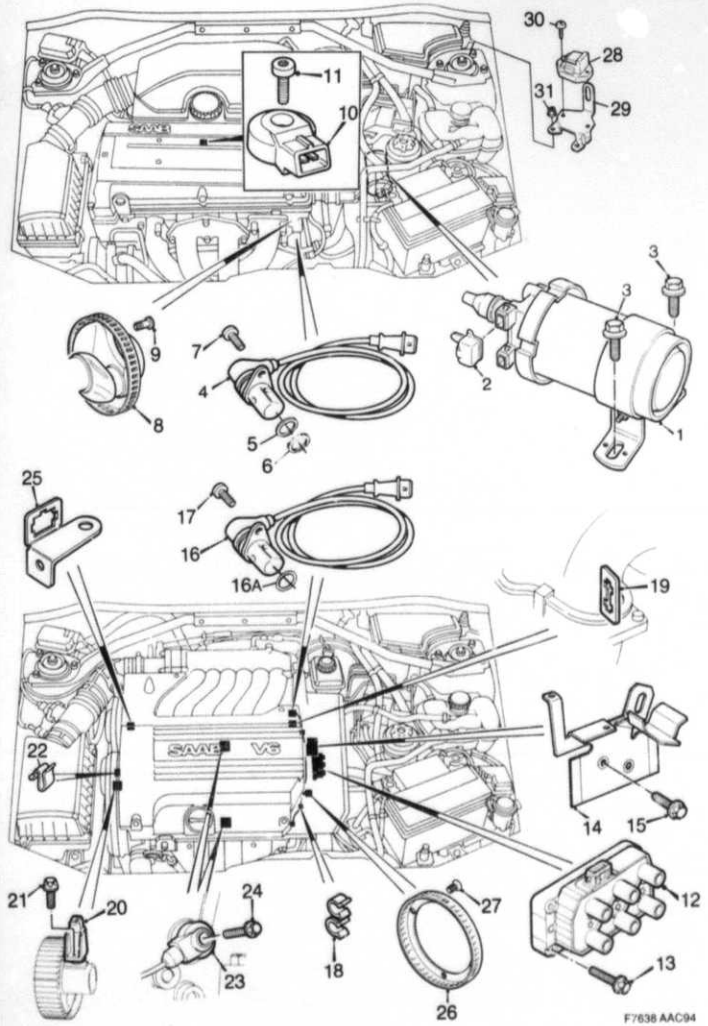

Ignition system
2-A20
Motronic

Tändsystem
Motronic

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 26 031		4-CYL., I	1	Ignition coil	Tändspole	8
0020	2	43 94 565		4-CYL., I	1	Protecting casing	Skyddskåpa	4
0030	3	79 78 661		4-CYL., I	2	Hexagon screw	Sexkantsskruv	5
0040								
0050	4	42 27 203		-1995, 4-CYL.	1	Cranks. position sensor	Lägesgivare	8
0060	4	91 77 221		1996-, 4-CYL.	1	Cranks. position sensor	Lägesgivare	4
0070	5	91 71 125		-1995	1	.Support ring	.Stödring	4
0080	6	91 71 117		-1995	1	.O-ring	.O-ring	4
0090	7	79 71 294		4-CYL.	1	Screw	Skruv	5
0100								
0110	8	91 67 024		4-CYL.	1	Aperture disc	Bländarskiva	4
0120	9	91 45 517		4-CYL.	1	Screw	Skruv	5
0130								
0140	10	91 42 415		-1995, 4-CYL., I	1	Knock sensor	Knacksensor	3
0150	10	91 42 415		1996-, 4-CYL., I	1	Knock sensor	Knacksensor	3
0160	10	43 00 729		1996-, 4-CYL., I, US, CA	1	Knock sensor	Knacksensor	8
0170	11	*80 59 800*		-1995, 4-CYL., I NLS - USE 7978216	1	Screw	Skruv	5
0180	11	79 78 216		1996-, 4-CYL., I	1	Hexagon screw	Sexkantsskruv	5
0190								
0200	12	45 04 536		-1995, 6-CYL.	1	Ignition coil module	Tändspolsmodul	8
0210	12	47 70 210		1996-1997, 6-CYL.	1	Ignition coil module	Tändspolsmodul	8
0220	13	45 02 753		-1995, 6-CYL.	4	Screw	Skruv	5
0230	13	47 70 020		1996-, 6-CYL.	4	Screw	Skruv	5
0240	14	45 04 478		6-CYL.	1	Bracket	Konsol	6
0250	15	45 04 528		6-CYL.	2	Screw	Skruv	5
0260								
0270	16	45 04 288		-1995, 6-CYL.	1	Cranks. position sensor crankshaft	Lägesgivare vevaxel	8
0290	16	43 00 737		1996-, 6-CYL.	1	Cranks. position sensor crankshaft	Lägesgivare vevaxel	8
0310	16A	91 71 117			1	.O-ring	.O-ring	4
0320	17	45 00 351		6-CYL.	1	Screw	Skruv	5
0330	18	45 04 338		6-CYL.	2	Holder	Hållare	4
0340	19	45 04 312		-1995, 6-CYL.	1	Connector holder	Kontakthållare	4
0350	19	46 60 544		1996-, 6-CYL.	1	Connector holder	Kontakthållare	4
0360								
0370	20	45 04 296		106), 6-CYL.	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0390	20	46 21 363		107,134), 6-CYL.	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0410	20	47 70 079		135)-1995, 6-CYL.	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0430	20	46 60 452		1996-, 6-CYL.	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0440								
0450	21	45 00 351		6-CYL.	1	Screw	Skruv	5
0460	22	46 21 355		6-CYL.	1	Cable holder	Kabelhållare	
0470								
0480	23	*45 04 262*		1994, 6-CYL. NLS - USE 8822595	2	Knock sensor	Knacksensor	3
0490	23	88 22 595		1995, 6-CYL.	2	Knock sensor	Knacksensor	3
0500	23	43 00 729		1996-, 6-CYL.	2	Knock sensor	Knacksensor	8
0510	24	45 01 110		6-CYL.	2	Screw	Skruv	5
0520	25	45 04 312		6-CYL.	1	Connector holder	Kontakthållare	4
0530								
0540				6-CYL.		Crankshaft	Vevaxel	
0550	26	45 01 185			1	.Aperture disc	.Bländarskiva	4
0560	27	45 01 193			4	.Screw	.Skruv	5
0570								


106. Engine -55898.
107. Engine 55899-.
134. Engine -55799.
135. Engine 55800-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

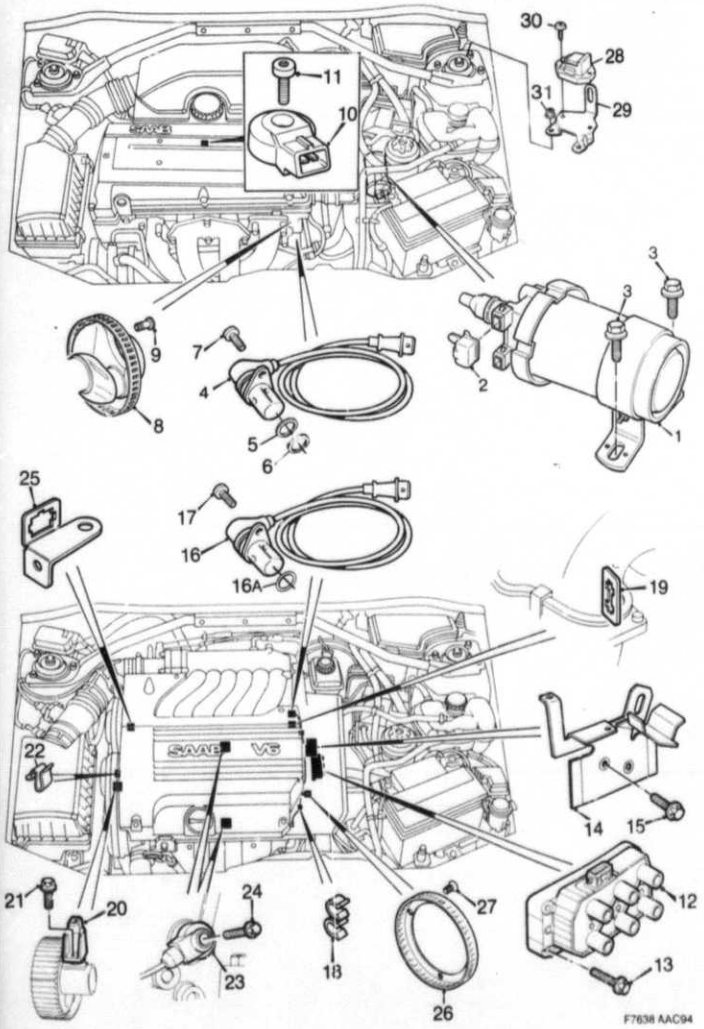

Ignition system
2-A22
Motronic

Tändsystem
Motronic


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	28	42 39 216		1996-, B234I, US, CA	1	Accelaration picup	Accelerations picup	8
0590	29	43 94 300		1996-, B234I, US, CA	1	Bracket	Konsol	
0600	30	79 22 370		1996-, B234I, US, CA	2	Screw	Skruv	5
0610	31	40 87 128		1996-, B234I, US, CA	3	Plastic nut	Plastmutter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

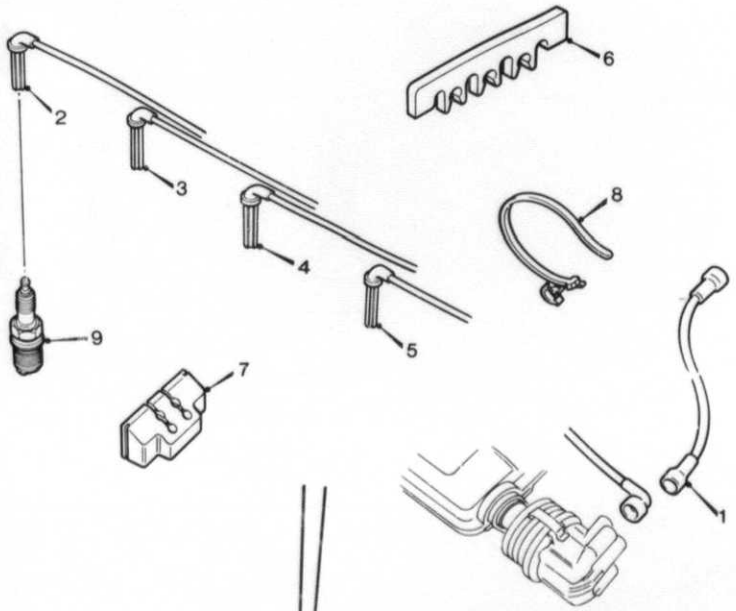

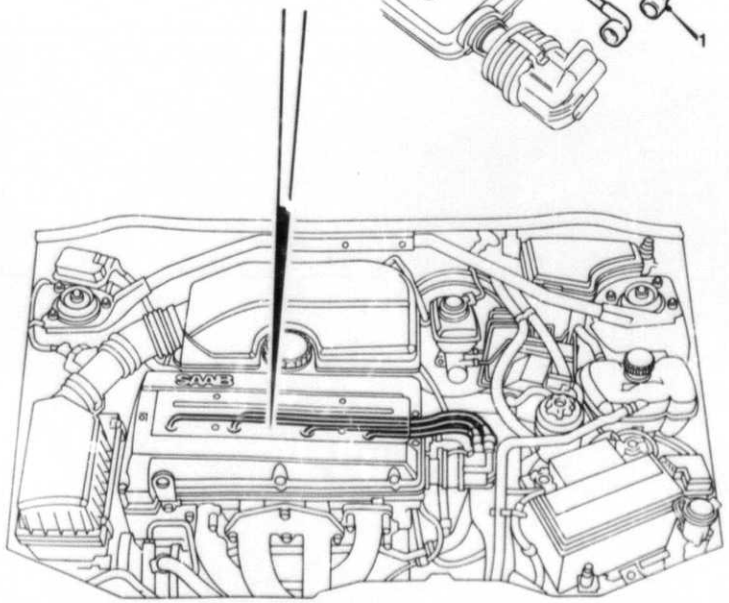

F4933 AAC94

Ignition system

2-A24 *Ignition leads, spark plugs etc, 4-cyl*

Tändsystem

Tändkablar, tändstift etc. 4-cyl

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 39 000	S	I	1	Ignition lead ignition coil	Tändkabel tändspole	8
0020								
0030								
0040	2	91 46 895	S	I	1	Ignition lead cylinder 1	Tändkabel cylinder 1	8
0050								
0060								
0070	3	91 46 903	S	I	1	Ignition lead cylinder 2	Tändkabel cylinder 2	8
0080								
0090								
0100	4	91 46 911	S	I	1	Ignition lead cylinder 3	Tändkabel cylinder 3	8
0110								
0120								
0130	5	91 46 929	S	I	1	Ignition lead cylinder 4	Tändkabel cylinder 4	8
0140								
0150								
0160	6	75 85 540		I	1	Retainer	Hållare	2
0170	7	75 04 525		I	2	Retainer	Hållare	2
0180								
0190	8	73 98 977		L=273 MM	1	Tensioning band	Spännband	5
0200								
0210	9	91 36 276		I, NGK BCP5EV	4	Spark plug	Tändstift	8
0220	9	91 39 643		B234 I, NGK BCP6EV	4	Spark plug	Tändstift	8
0230	9			TURBO		Spark plug	Tändstift	
0240				See page 3A-029, 2-B06				
0250								
0260		93 21 910		I	X	Kit ignition cables	Tändkabelsats	8
0270				See page 3A-197, 2-I06				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

Ignition system

2-B02 Ignition leads, spark plugs etc, 6-cyl

Tändsystem

Tändkablar, tändstift etc, 6-cyl

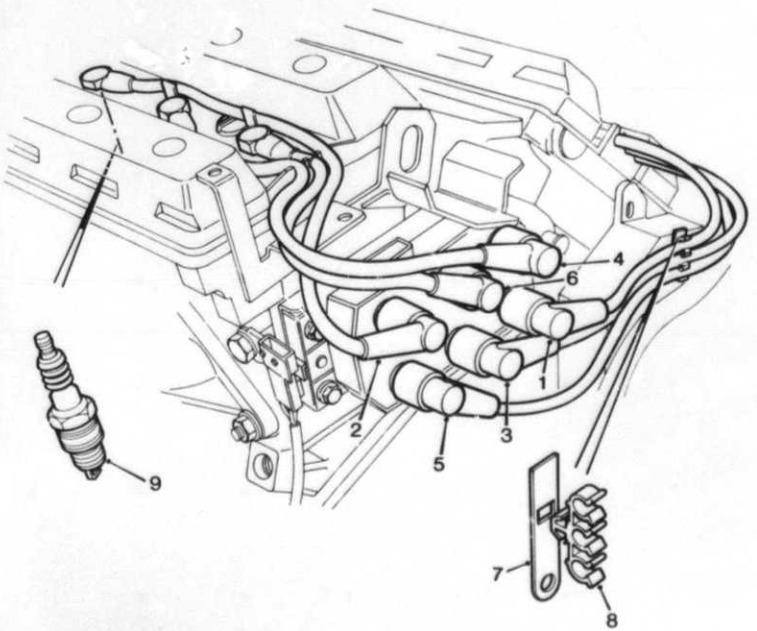

F4934 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	45 04 353	S		1	Ignition lead cylinder 1	Tändkabel cylinder 1	8
2	45 04 361	S		1	Ignition lead cylinder 2	Tändkabel cylinder 2	8
3	45 04 379	S		1	Ignition lead cylinder 3	Tändkabel cylinder 3	8
4	45 04 395	S		1	Ignition lead cylinder 4	Tändkabel cylinder 4	8
5	45 04 403	S		1	Ignition lead cylinder 5	Tändkabel cylinder 5	8
6	45 04 411	S		1	Ignition lead cylinder 6	Tändkabel cylinder 6	8
7	45 04 437			1	Bracket	Konsol	6
8	45 04 460			1	Clip	Clips	6
9	45 01 029		FR7LDC	6	Spark plug	Tändstift	8
9	44 44 741		FR8LDC, ALT. TO 4501029	6	Spark plug	Tändstift	8
	88 21 951			X	Kit ignition cables cyl. 1, 2, 3, 4, 5, 6	Tändkabelsats cyl. 1, 2, 3, 4, 5, 6	8
	47 70 194		See page 3A-197, 2-I06	X	Kit ignition cables cyl. 1, 3, 5	Tändkabelsats cyl. 1, 3, 5	8
	47 70 178		See page 3A-197, 2-I06	X	Kit ignition cables cyl. 2, 4, 6	Tändkabelsats cyl. 2, 4, 6	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

Ignition system

2-B04 Ignition distributor 4-cylinder

Tändsystem

Tändfördelare 4-cylindrig

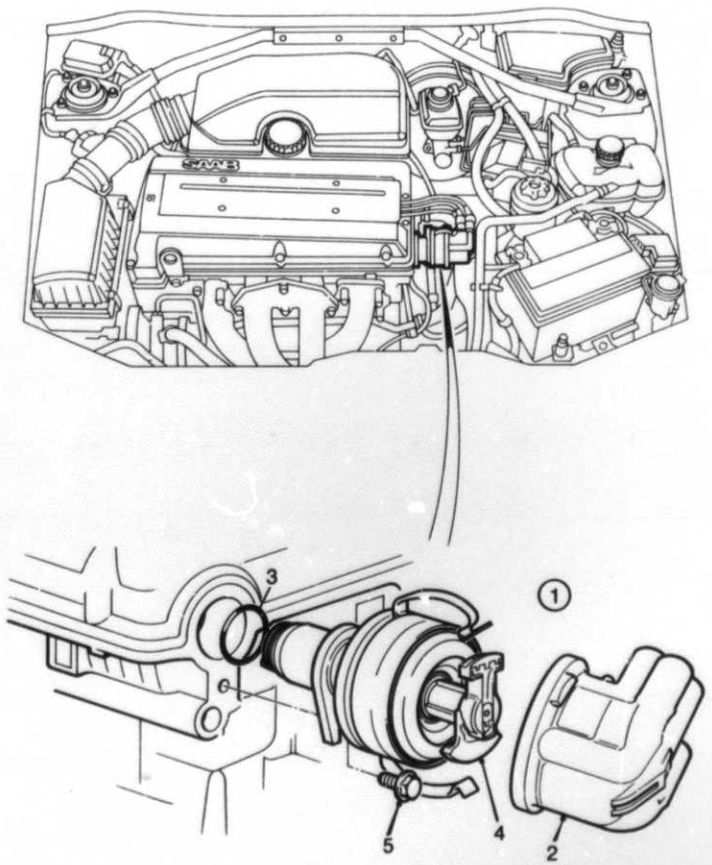

F7871 AAC94

0430	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 34 875			1	Ignition distributor	Tändfördelare	8
0020	2	91 70 259			1	‚Distributor cap	‚Fördelarlock	8
0030	3	91 76 470			1	‚Sealing ring	‚Tätningsring	6
0040	4	88 22 686			1	‚Rotor	‚Rotor	3
0050	5	79 73 779			1	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B06

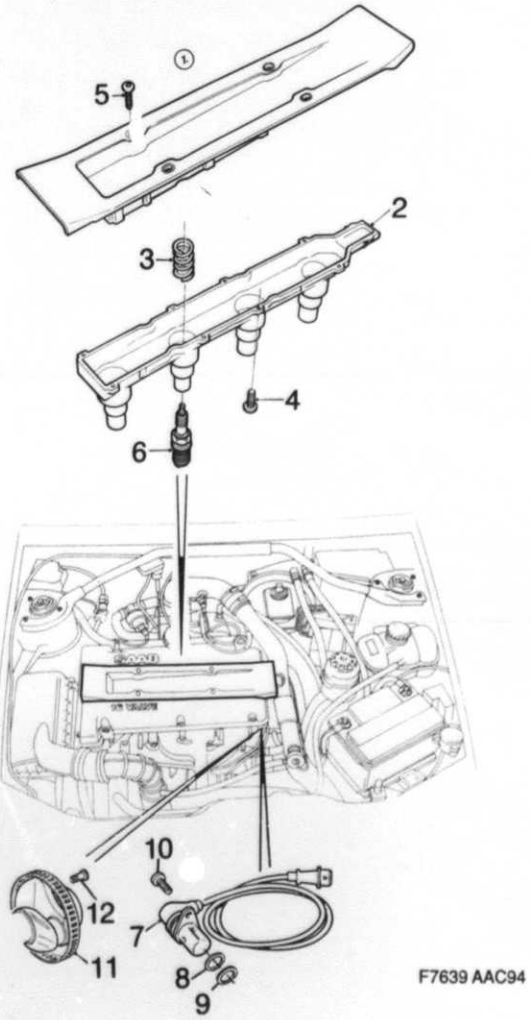

F7639 AAC94

0448	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 34 404*		116) NLS – USE 9178955	1	Ignition cassette	Tändkassett	8
0020	1	91 78 955		117)	1	Ignition discharge module	Tändkassett	8
0030	2	91 67 016			1	.Lower section	.Underdel	8
0040	3	91 67 032			4	.Spring	.Fjäder	4
0050	4	79 68 316			8	.Screw	.Skruv	5
0060	5	91 45 764			4	Screw	Skruv	5
0070	6	91 12 541		NGK BCPR7ES-1,1	4	Spark plug	Tändstift	8
0080								
0090	7	42 27 203			1	Cranks. position sensor	Lägesgivare	8
0100	8	91 71 125			1	.Support ring	.Stödring	4
0110	9	91 71 117			1	.O-ring	.O-ring	4
0120	10	79 71 294			1	Screw	Skruv	5
0130								
0140	11	91 67 024			1	Aperture disc	Bländarskiva	4
0150	12	91 45 517			1	Screw	Skruv	5

116. Engine –S075975.
117. Engine S075976–.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B08 Headlamp / Strålkastare

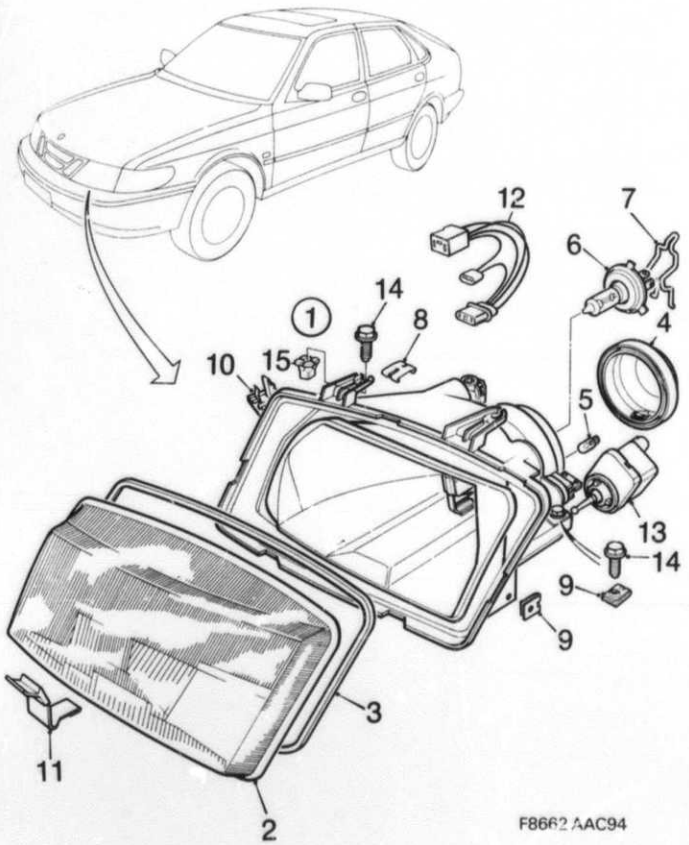

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 40 230		67), LH	1	Headlamp	Strålkastare	4
0020	1	42 40 248		67), RH	1	Headlamp	Strålkastare	4
0030	1	42 40 255		35,67), LH	1	Headlamp	Strålkastare	4
0040	1	42 40 263		35,67), RH	1	Headlamp	Strålkastare	4
0050	1	44 80 992		36), LH	1	Headlamp	Strålkastare	4
0060	1	44 81 008		36), RH	1	Headlamp	Strålkastare	4
0070	1	44 80 976		35,36), LH	1	Headlamp	Strålkastare	4
0080	1	44 80 984		35,36), RH	1	Headlamp	Strålkastare	4
0090	2	44 68 039		LH	1	.Headlamp lens	.Strålkastarglas	2
0100	2	44 68 047		RH	1	.Headlamp lens	.Strålkastarglas	2
0110	2	44 68 054		35), LH	1	.Headlamp lens	.Strålkastarglas	2
0120	2	44 68 062		35), RH	1	.Headlamp lens	.Strålkastarglas	2
0130	3	45 22 934		LH	1	.Seal	.Tätning	4
0140	3	45 22 942		RH	1	.Seal	.Tätning	4
0150	4	44 68 153			1	.Cover	.Kåpa	5
0160	5	95 12 880		40/238 300 008	1	.Bulb	.Glödlampa	1
0170	6	85 10 851		232), 40/238 210 009	1	.Bulb	.Glödlampa	
0180	6	* 48 30 832		233)	1	.Bulb	.Glödlampa	
0190	7	44 68 252			1	.Spring	.Fjäder	4
0200	8	44 68 179			8	.Clip	.Clips	5
0210	9	44 81 230			2	.Clip	.Clips	3
0220	10	44 68 211			1	.Clip	.Clips	3
0230	11	44 68 260			1	.Stop	.Stopp	3
0240	12	* 44 68 245			1	.Cable harness	.Ledningsnät	5
0250	13	44 68 005			2	Electric motor	Elmotor	3
0260	14	79 73 001		110)	6	Screw	Skruv	5
0270	14	79 85 690		111)	6	Screw	Skruv	5
0280	15	79 75 261			4	Nut	Mutter	5

35. For left hand traffic. För vänstertrafik.
36. With headlamp levelling. Med ljuslängdsreglering.
67. Ch -S2008459, -S7012404.
110. Ch -S2027387.
111. Ch S2027388-.
232. Ch -T2024856.
233. Ch T2024857-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B10 Headlamp US / Strålkastare US

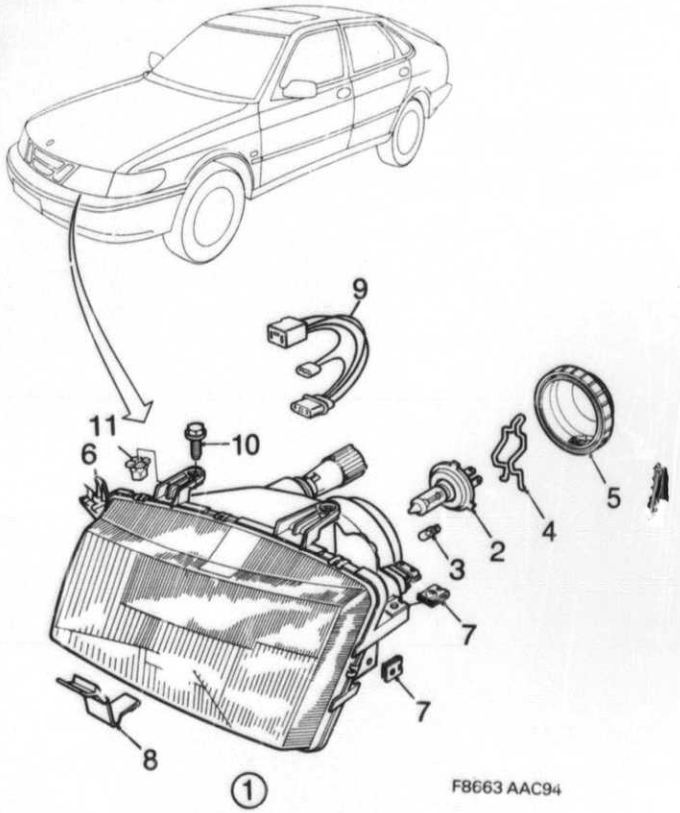

0470	Por	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 40 271		LH	1	Headlamp	Strålkastare	4
0020	1	42 40 289		RH	1	Headlamp	Strålkastare	4
0030	2	79 85 047		-1996	1	.Bulb	.Glödlampa	1
0040	2	48 30 816		1997-	1	.Bulb	.Glödlampa	1
0050	3	95 12 880		40/238 300 008	1	.Bulb	.Glödlampa	1
0060	4	44 68 252			1	.Spring	.Fjäder	4
0070	5	44 68 153			1	.Cover	.Kåpa	5
0080	6	44 68 211			1	.Clip	.Clips	3
0090	7	44 81 230			2	.Clip	.Clips	3
0100	8	44 68 260			1	.Stop	.Stopp	3
0110	9	* 44 68 245			1	.Cable harness	.Ledningsnät	5
0120	10	79 73 001		110)	6	Screw	Skruv	5
0130	10	79 85 690		111)	6	Screw	Skruv	5
0140	11	79 75 261			4	Nut	Mutter	5

110. Ch -S2027387.
111. Ch S2027388-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B12

Lamp cluster
Kombinationslykta

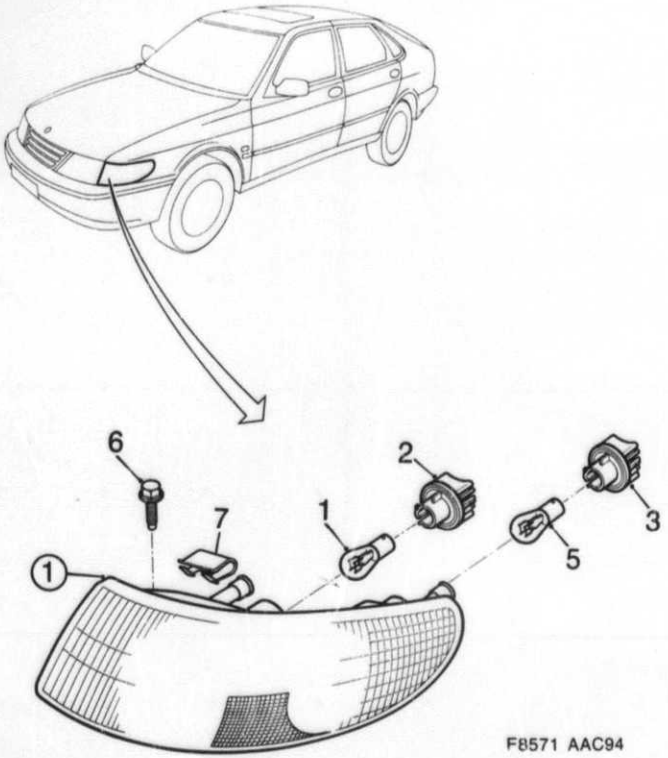

F8571 AAC94

0555	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 73 973		LH	1	Direction indicator	Blinklykta	2
0020	1	43 73 981		RH	1	Direction indicator	Blinklykta	2
0030								
0040	1	42 40 354		LH, US	1	Direction indicator	Blinklykta	2
0050	1	42 40 362		RH, US	1	Direction indicator	Blinklykta	2
0060	2	44 68 922			1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0070								
0080	2	44 68 306		US	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0090								
0100	3	44 68 914		US	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0110								
0120	4	44 68 930			1	.Bulb	.Glödlampa	1
0130	4	44 68 948		US	1	.Bulb	.Glödlampa	1
0140	5	85 35 692		US, 40/238 304 000	1	.Bulb	.Glödlampa	1
0150	6	79 73 001		110)	2	Screw	Skruv	5
0160	6	79 85 690		111)	2	Screw	Skruv	5
0170	7	40 87 797		205)	2	Clip	Clips	5


110. Ch -S2027387.
111. Ch S2027388-.
205. Ch V2020115-, V7003162-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

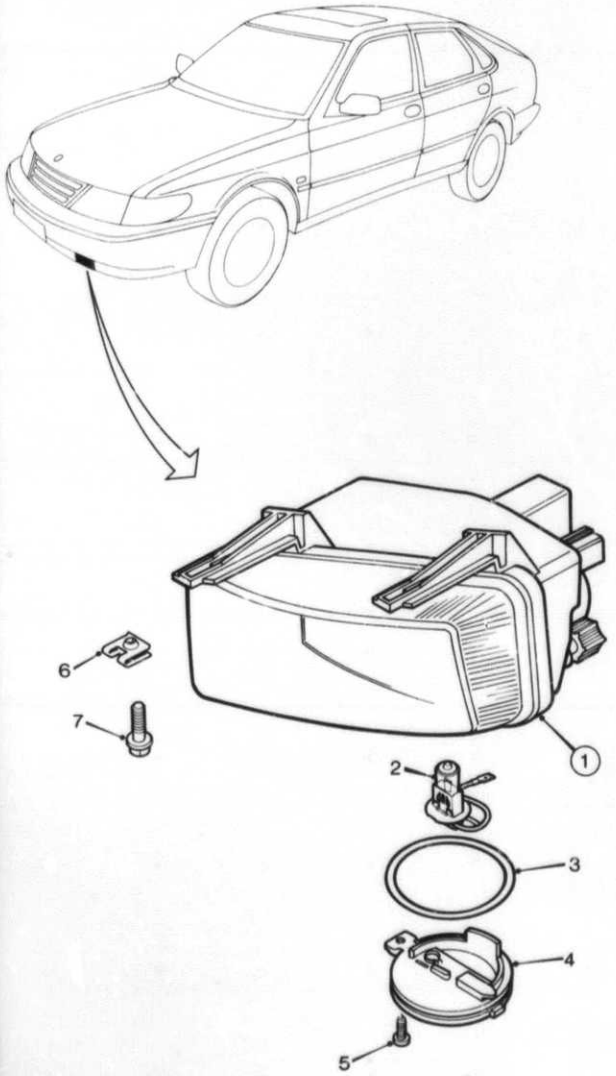

F4940 AAC94

Lighting
2-B14
Fog light

Belysning
Dimljus


0570	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 69 193		LH	1	Fog light	Dimljus	5
0020	1	44 69 201		RH	1	Fog light	Dimljus	5
0030	2	*95 29 876*		-1995 NLS – USE 8529109	1	.Bulb	.Glödlampa	1
0035	2	46 85 319		1996-	1	.Bulb	.Glödlampa	
0040	3	44 69 243			1	.Sealing ring	.Tätningsring	3
0050	4	44 69 235			1	.Cover	.Lock	5
0060	5	79 22 636			1	.Screw	.Skruv	5
0070	6	44 69 276			3	.Clip nut	.Klämmutter	3
0080	7	79 73 191			6	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

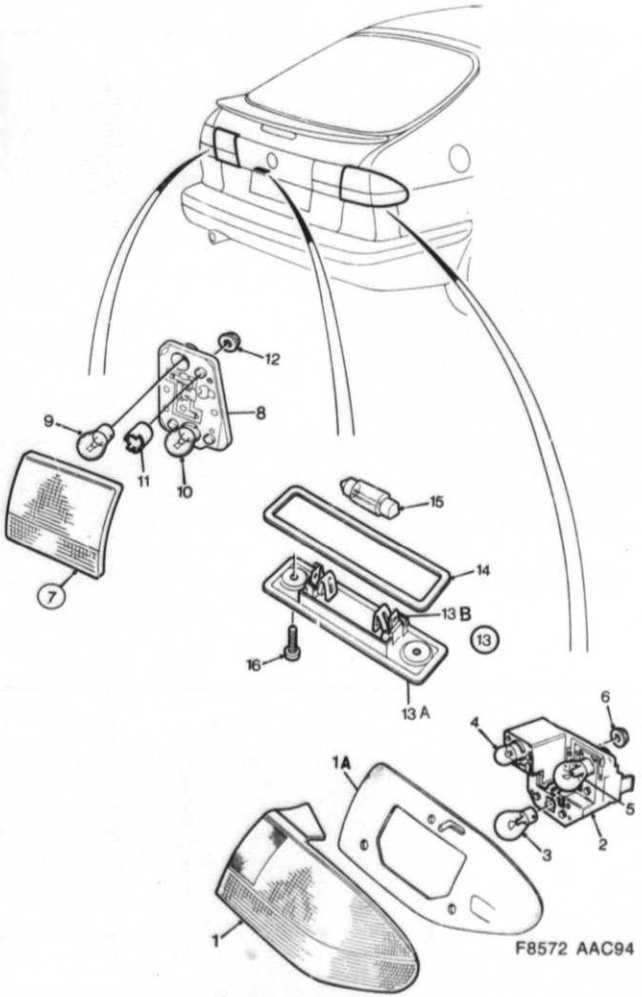

2-B16

Lighting
Tail lamp

Belysning
Baklykta

0600	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 68 955		LH	1	Tail lamp	Baklykta	3
0020	1	44 68 963		RH	1	Tail lamp	Baklykta	3
0030								
0040	1	44 80 794		LH, CV	1	Tail lamp	Baklykta	3
0050	1	44 80 802		RH, CV	1	Tail lamp	Baklykta	3
0060								
0070	1	44 68 971		LH, US, CA, PA	1	Tail lamp	Baklykta	3
0080	1	44 68 989		RH, US, CA, PA	1	Tail lamp	Baklykta	3
0090								
0100	1	44 80 810		LH, CV, US, CA, PA	1	Tail lamp	Baklykta	3
0110	1	44 80 828		RH, CV, US, CA, PA	1	Tail lamp	Baklykta	3
0120								
0130	1	44 68 955		31), 1995-, LH, PA	1	Tail lamp	Baklykta	3
0140	1	44 68 963		31), 1995-, RH, PA	1	Tail lamp	Baklykta	3
0150								
0160	1	44 80 794		31), 1995-, LH, CV, PA	1	Tail lamp	Baklykta	3
0170	1	44 80 802		31), 1995-, RH, CV, PA	1	Tail lamp	Baklykta	3
0180								
0190	1A	44 69 011			2	Seal	Tätning	5
0200								
0210	2	44 68 997		LH	1	Bulb socket	Lamphållare	5
0220	2	44 69 003		RH	1	Bulb socket	Lamphållare	5
0230	2	44 84 937		LH, US, CA, PA	1	Bulb socket	Lamphållare	5
0240	2	44 84 945		RH, US, CA, PA	1	Bulb socket	Lamphållare	5
0250	2	44 68 997		31), 1995-, LH, PA	1	Bulb socket	Lamphållare	5
0260	2	44 69 003		31), 1995-, RH, PA	1	Bulb socket	Lamphållare	5
0270								
0280	3	44 68 930			1	Bulb	Glödlampa	1
0290	3	40 87 953		US, CA, PA	1	Bulb	Glödlampa	1
0300	3	44 68 930		31), 1995-, PA	1	Bulb	Glödlampa	1
0310								
0320	4	85 35 700			1	Bulb	Glödlampa	1
0330	4	85 52 325		US, CA, PA	1	Bulb	Glödlampa	1
0340	4	85 35 700		31), 1995-, PA	1	Bulb	Glödlampa	1
0350								
0360	5	43 20 594			1	Bulb	Glödlampa	1
0370	5	85 32 756		US,CA,PA, 40/238 291 009	1	Bulb	Glödlampa	1
0380	5	43 20 594		31), 1995-, PA	1	Bulb	Glödlampa	1
0390								
0400	6	79 77 929			6	Nut	Mutter	5
0410								
0420	7	*43 99 574*		188), LH NLS - USE 4448577	1	Lamp	Lykta	3
0430	7	*45 21 530*		189,192), LH NLS - USE 4448577	1	Lamp	Lykta	3
0440	7	44 48 577		193,250), LH	1	Lamp	Lykta	3
0450	7	* 49 57 437		251), LH	1	Lamp	Lykta	3
0460	7	*43 98 566*		188), RH NLS - USE 4448569	1	Lamp	Lykta	3
0470	7	*45 21 522*		189,192), RH NLS - USE 4448569	1	Lamp	Lykta	3
0480	7	44 48 569		193,250), RH	1	Lamp	Lykta	3
0490	7	* 49 57 429		251), RH	1	Lamp	Lykta	3
0500	7	43 98 558		31,188), LH	1	Lamp	Lykta	3
0510	7	*45 21 514*		31,189,192), LH NLS - USE 4448551	1	Lamp	Lykta	3
0510								

31. With rear fog light. Med dimbaklykta.
188. Ch -R2023412.
189. Ch R2023413-.
192. Ch -S2004135, -S7011323.
193. Ch S2004136-, S7011324-.
250. Ch -W2013371.
251. Ch W2013372-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B18

Tail lamp — *Baklykta*

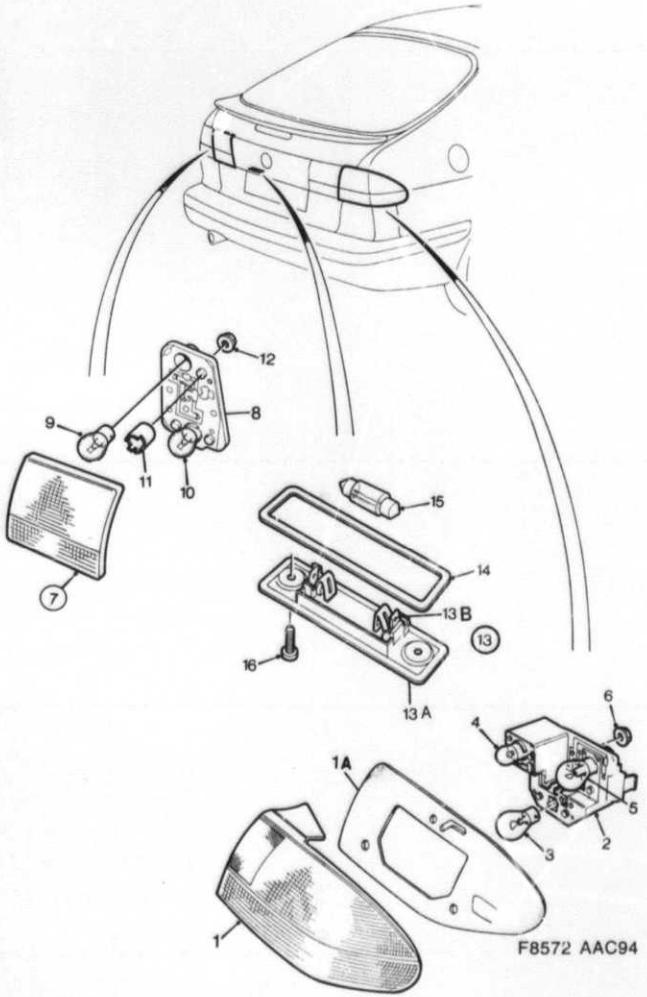

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	7	44 48 551		31,193,250), LH	1	Lamp	Lykta	3
0530	7	• 49 57 411		31,251), LH	1	Lamp	Lykta	3
0540	7	43 98 582		31,188), RH, RHD	1	Lamp	Lykta	3
0550	7	*45 21 548*		31,189,192), RH, RHD NLS - USE 4448585	1	Lamp	Lykta	3
0560	7	44 48 585		31,193,250), RH, RHD	1	Lamp	Lykta	3
0570	7	• 49 57 445		31,251), RH, RHD	1	Lamp	Lykta	3
0580	8	44 69 078		250), LH	1	.Bulb socket	.Lamphållare	5
0590	8	• 49 57 452		251), LH	1	.Bulb socket	.Lamphållare	5
0600	8	44 69 086		250), RH	1	.Bulb socket	.Lamphållare	5
0610	8	• 49 57 460		251), RH	1	.Bulb socket	.Lamphållare	5
0620	9	71 54 719		31)	1	.Bulb	.Glödlampa	1
0630	10	71 54 719			2	.Bulb	.Glödlampa	1
0640	11	44 69 102		RH	1	.Sealing collar	.Tätningskrage	4
0650	12	79 77 929		LH	3	Nut	Mutter	5
0660	12	79 77 929		RH	4	Nut	Mutter	5
0670								
0680	13	85 49 537			2	Lens	Glas	3
0690	13A	46 73 224		1)	1	.Lens	.Glas	3
0700	13B	48 30 824			2	.Switch actuator	.Kontaktbleck	
0710	14	90 86 281			2	Seal	Tätning	5
0720	15	70 84 197		40/238 261 002	2	Bulb	Glödlampa	1
0730	16	79 22 271			4	Screw	Skruv	5


1. Not as separate spare part. Ej som separat reservdel.
31. With rear fog light. Med dimbaklykta.
188. Ch -R2023412.
189. Ch R2023413-.
192. Ch -S2004135, -S7011323.
193. Ch S2004136-, S7011324-.
250. Ch -W2013371.
251. Ch W2013372-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

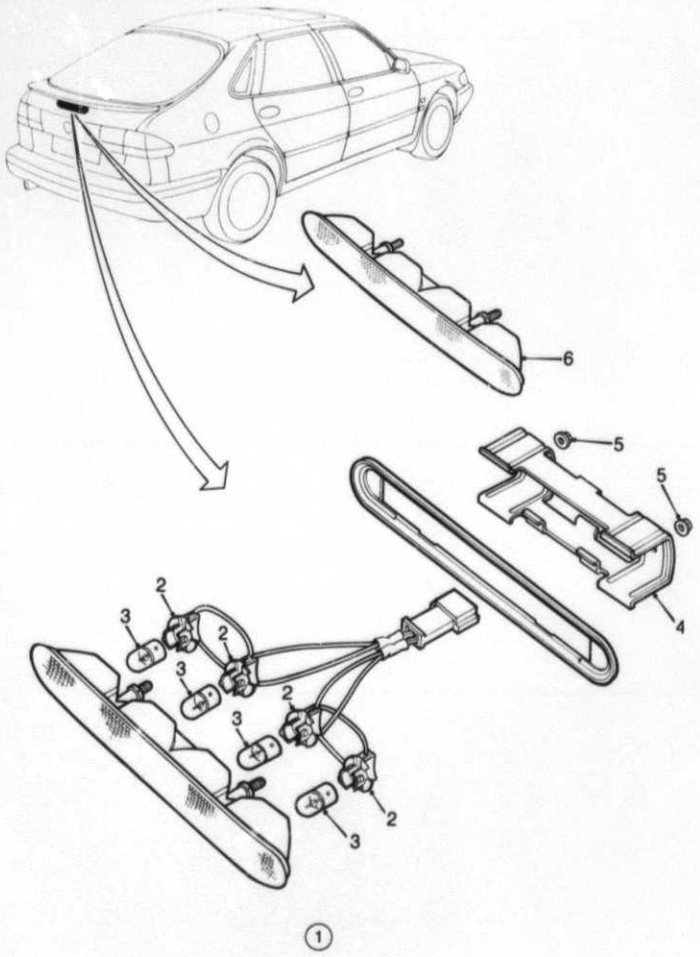

F5661 AAC94

Lighting

2-B20 Stop light High mounted

Belysning

Stopplykta Högt monterad

0675	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	46 73 429		104) NLS – USE 4673257	1	Stop light	Stopplykta	3
0020	1	46 73 257		105)	1	Stop light	Stopplykta	3
0030	2	44 69 110			4	.Bulb socket	.Lamphållare	3
0040	3	95 12 880			4	.Bulb	.Glödlampa	1
0050	4	43 99 036			1	Bracket	Konsol	6
0060	4	44 80 448		CV	1	Bracket	Konsol	6
0070	5	79 77 929			2	Nut	Mutter	5
0080	6	44 01 717		23)	1	Cover	Avtäckning	6

23. Without high mounted stop light. Utan högt monterat stoppljus.
104. Ch -S2027394.
105. Ch S2027395-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-B22

Other lights
Övrig belysning

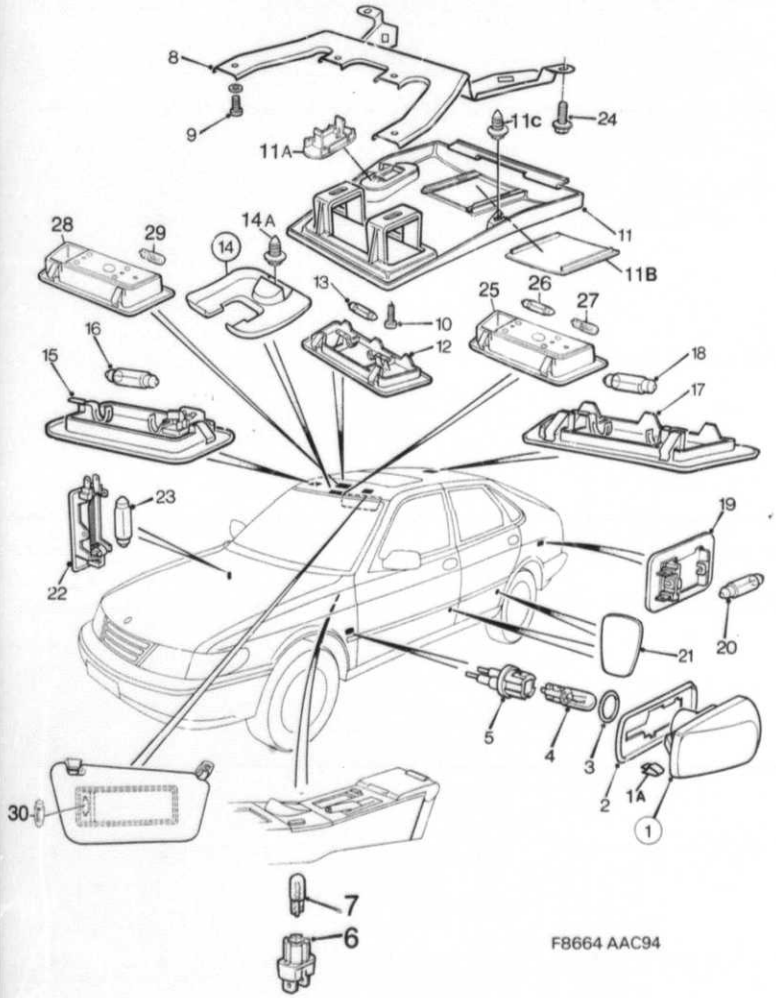

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	91 24 132			2	Side light	Sidolampa	3
1A	*48 30 113*		NLS	1	.Clip	.Clips	
2	91 24 140			1	.Seal	.Tätning	6
3	*95 2 898*		62) NLS – USE 4484259	1	.Gasket	.Packning	6
3	44 84 259		63)	1	.Gasket	.Packning	6
4	95 12 880		40/238 300 008	1	.Bulb	.Glödlampa	1
5	95 21 857			1	.Bulb socket	.Lamphållare	6
6	85 09 697		51)	1	Bulb socket starter switch	Lamphållare tändningslås	5
7	85 00 613		51), 40/238 286 009	1	Bulb	Glödlampa	2
8	44 21 053			1	Bracket	Fäste	4
9	79 78 638			2	Screw	Skruv	5
10	*79 67 771*		NLS – USE 7970601	2	Screw	Skruv	5
11	44 21 848		246), SR	1	Roof bracket	Takkonsol	4
11	• 49 00 965		247), SR	1	Roof bracket	Takkonsol	4
11A	44 21 103			1	.Cover	.Täcklock	
11B	44 21 897			1	.Hatch	.Lucka	
11C	44 21 129			2	Clip	Clips	
12	44 21 228		3D, 5D	1	Interior lighting	Innerbelysning	4
13	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
14	44 21 301			1	Cover rear view mirror	Täcklock backspegel	5
14A	44 21 863			1	.Clip	.Clips	
15	43 89 334		190)	2	Lamp	Lampa	2
15	46 05 127		191)	2	Lamp	Lampa	2
16	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
17	44 21 228			1	Interior lighting	Innerbelysning	4
18	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
19	43 89 334		108)	1	Lamp boot	Lampa bagagerum	2
19	46 83 181		109)	1	Lamp boot	Lampa bagagerum	2
20	70 84 197		108), 40/238 261 002	1	.Bulb	.Glödlampa	1
20	79 85 864		109), 40/238 265 003	1	.Bulb	.Glödlampa	2
21	44 71 082		3D	2	Reflex	Reflex	
21	44 71 082		5D	4	Reflex	Reflex	
22	42 02 107			1	Lamp glove compartment	Lampa handskfack	4
23	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
24	40 87 599		SR	2	Screw	Skruv	5
25	44 98 689		CV	1	Interior lighting	Innerbelysning	4
26	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
27	95 12 880			2	.Bulb	.Glödlampa	1


51. Ch –R2020436.
62. Ch –S2006307.
63. Ch S2006308–.
108. Ch –S2038183, –S7015526.
109. Ch S2038184–, S7015527–.
190. Ch –S2012483.
191. Ch S2012484–.
246. Ch –V2016662.
247. Ch V2016663–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

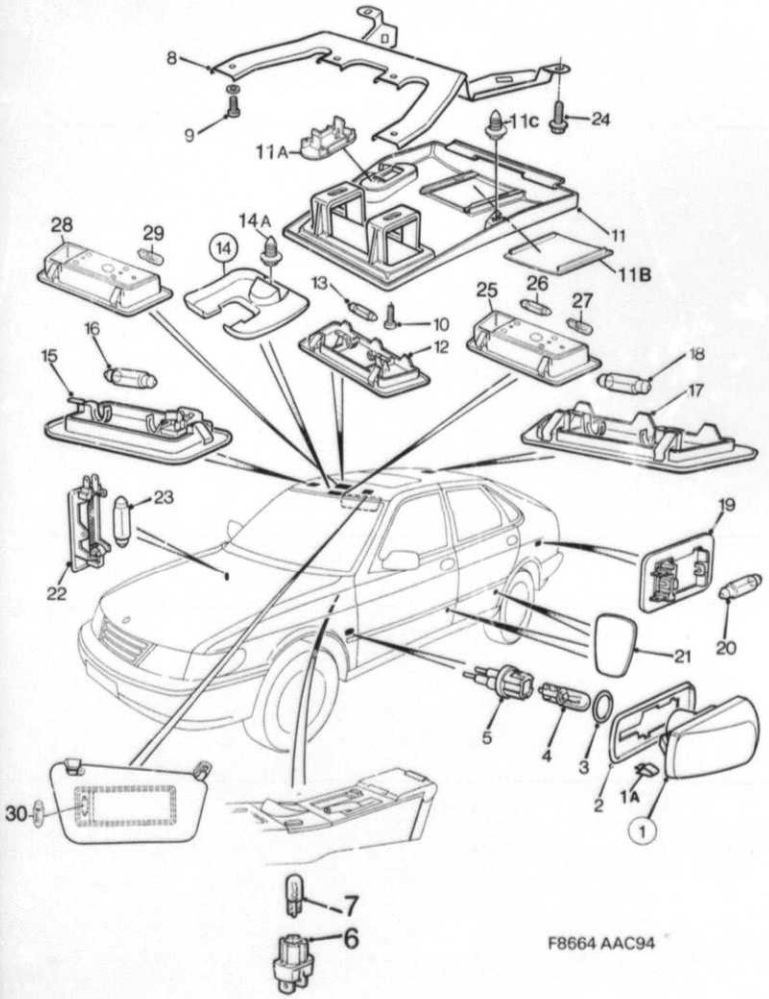

F8664 AAC94

Lighting

2-B24

Other lights

Belysning

Övrig belysning

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	28	45 50 851		123), 1995-, 3D, 5D	1	Interior lighting	Innerbelysning	4
0560	28	45 50 869		123), 1995-, CV	1	Interior lighting	Innerbelysning	4
0570	29	95 12 880			2	.Bulb	.Glödlampa	1
0580								
0590	30	44 86 684		CV	2	Bulb	Glödlampa	3
0600						sun visor	solskydd	

123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C02

Horn
Signalhorn

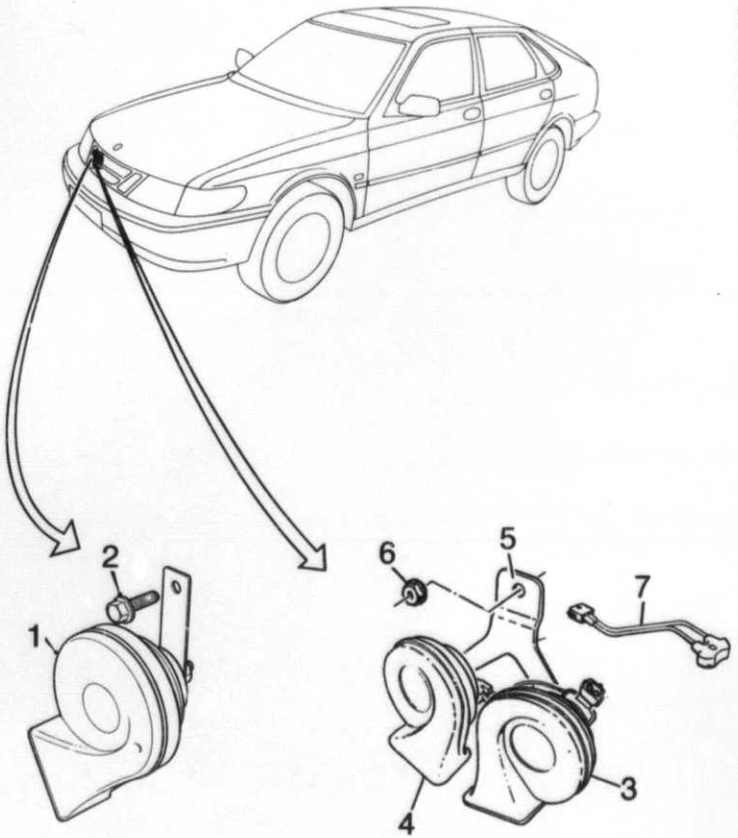

F6665 AAC94

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Denomination	Benämning	S L
0010	1	44 80 604		179)	1	Horn	Signalhorn	4
0020	2	79 75 451		179)	1	Screw	Skruv	5
0030								
0040	3	44 48 825		180)	1	Horn high tone	Signalhorn hög ton	4
0050								
0060	4	44 48 817		180)	1	Horn low tone	Signalhorn låg ton	4
0070								
0080	5	45 21 852		180)	1	Bracket	Fäste	6
0090	6	79 77 952		180)	1	Hexagon nut	Sexkantsmutter	5
0100	7	44 48 833		180)	1	Cable network	Kabelnät	6

179. Ch -R2037695.
180. Ch R2037696-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C04

Windscreen wiper — Vindrutetorkare

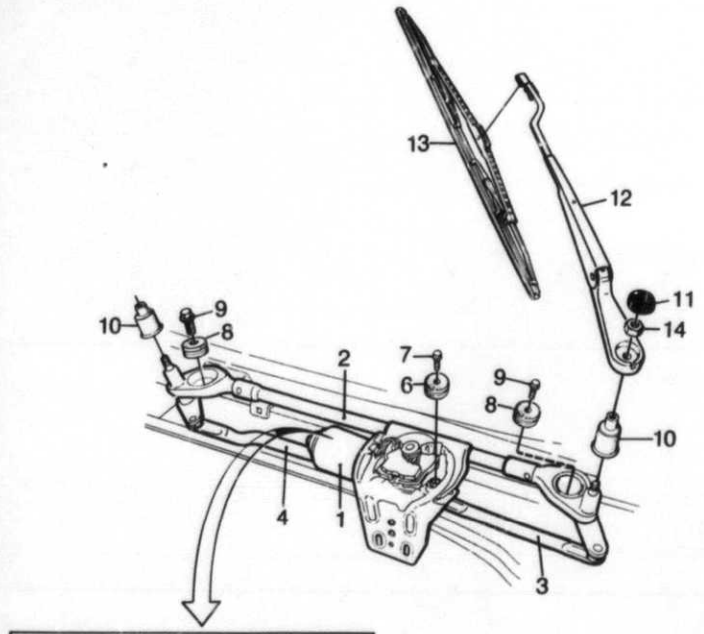

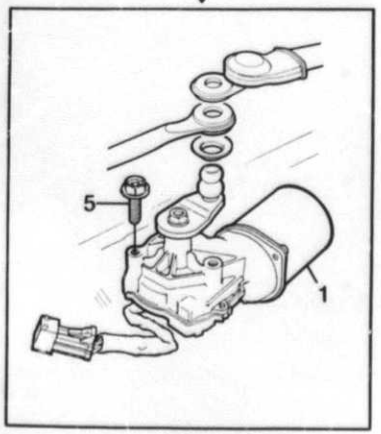

F4945 AAC94

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 01 113		LHD	1	Electric motor	Elmotor	4
0020	1	44 01 030		RHD	1	Electric motor	Elmotor	4
0030	2	44 01 121		LHD	1	Spindle frame	Spindelram	6
0040	2	44 01 048		RHD	1	Spindle frame	Spindelram	6
0050	3	44 01 147		LHD, LH	1	Crank arm	Vevarm	5
0060	3	44 01 063		RHD, RH	1	Crank arm	Vevarm	5
0070	4	44 01 139		LHD, RH	1	Crank arm	Vevarm	5
0080	4	44 01 055		RHD, LH	1	Crank arm	Vevarm	5
0090	5	40 63 814			3	Screw	Skruv	5
0100	6	44 01 071			1	Bushing	Bussning	3
0110	7	44 01 097			1	Hexagon screw	Sexkantsskruv	5
0120	8	44 01 089			2	Bushing	Bussning	3
0130	9	44 01 097			2	Hexagon screw	Sexkantsskruv	5
0140	10	44 01 824			2	Cover	Kåpa	3
0150	11	43 81 083			2	Cover	Kåpa	3
0160	12	44 48 668		LHD, LH	1	Wiper arm	Torkararm	3
0170	12	44 48 726		CV, LHD, LH	1	Wiper arm	Torkararm	3
0180	12	43 81 018		LHD, RH	1	Wiper arm	Torkararm	3
0190	12	43 81 034		RHD, LH	1	Wiper arm	Torkararm	3
0200	12	44 48 676		RHD, RH	1	Wiper arm	Torkararm	3
0210	12	44 48 734		CV, RHD, RH	1	Wiper arm	Torkararm	3
0220	13	44 48 643	S	-1997	2	Wiper blade	Torkarblad	3
0230	13	* 49 59 698	S	1998-	2	Wiper blade	Torkarblad	3
0240	14	80 74 106			2	Nut	Mutter	5
0250								
0260		*85 49 297*		-1997	X	Wiper blade kit	Torkarbladssats	1
0270				See page 3A-197, 2-I06				
0270				NLS – USE 8549560				
0280		* 85 49 560		1998-	X	Wiper blade kit	Torkarbladssats	1
0290				See page 3A-197, 2-I06				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C06

Headlamp wiper
Strålkastartorkare

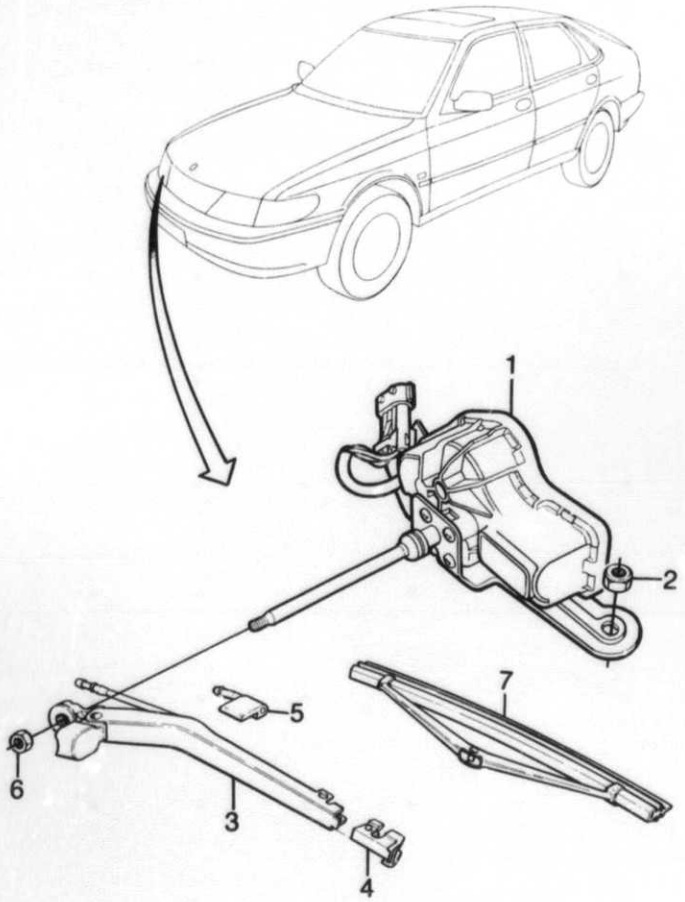

F4946 AAC94

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 40 545		LH	1	Wiper motor	Torkarmotor	3
0020	1	42 40 552		RH	1	Wiper motor	Torkarmotor	3
0030	2	79 77 929		1994	4	Nut	Mutter	5
0035	2	79 85 377		1995-	4	Nut	Mutter	5
0040	3	42 50 205		LH	1	Wiper arm	Torkararm	4
0050	3	42 50 197		RH	1	Wiper arm	Torkararm	4
0060	4	95 58 149			1	.Adapter	.Adapter	5
0070	5	95 69 005		LH	1	.Nozzle	.Munstycke	2
0080	5	95 68 999		RH	1	.Nozzle	.Munstycke	2
0090	6	79 77 911			2	Nut	Mutter	5
0100	7	85 49 172			2	Wiper blade	Torkarblad	2

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C08

Washer unit — Spolaranläggning

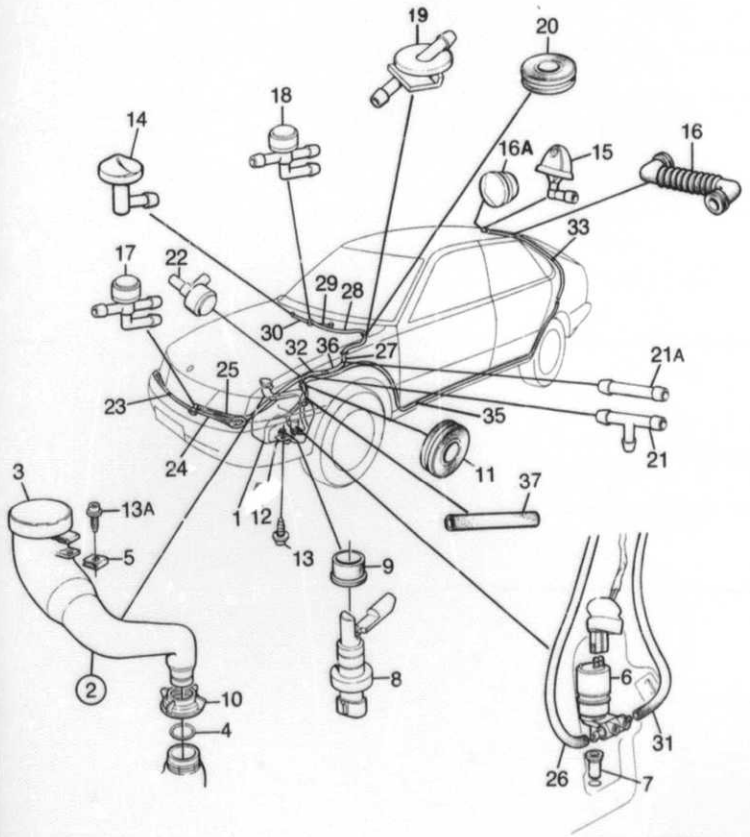

F8515 AAC94

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*44 80 364*		113) NLS – USE 8549388	1	Washer fluid reservoir	Spolarburk	3
0020	1	*44 80 356*		26,48) NLS – USE 8549396	1	Washer fluid reservoir	Spolarburk	3
0030	1	*45 21 589*		26,49,173) NLS – USE 3549396	1	Washer fluid reservoir	Spolarburk	3
0040	1	*44 80 356*		26,174,198) NLS – USE 8549396	1	Washer fluid reservoir	Spolarburk	3
0050	1	*46 74 859*		26,199), -1996 NLS – USE 4787057, 4807939, 4831053	1	Washer fluid reservoir	Spolarburk	3
0060	1	47 87 057		26), 1997-	1	Washer fluid reservoir	Spolarburk	3
0070	2	43 80 804			1	Filler pipe	Påfyllningsrör	4
0080	3	40 92 359			1	.Cover	.Lock	2
0090	4	43 80 820			1	.O-ring	.O-ring	2
0100	5	79 68 001			1	.Clip nut	.Clipsmutter	5
0110	6	44 80 638		198)	1	Washer pump	Spolarpump	2
0120	6	43 20 123		199)	1	Washer pump	Spolarpump	2
0130	6	44 80 646		159,198)	1	Washer pump	Spolarpump	2
0140	6	*46 74 214*		159,199,200) NLS – USE 4674230	1	Washer pump	Spolarpump	2
0150	6	46 74 230		159,201)	1	Washer pump	Spolarpump	2
0160	7	42 40 727		198)	1	Bushing	Bussning	3
0170	7	95 07 617		199)	1	Bushing	Bussning	3
0180	8	42 40 792			1	Level guard	Nivåvakt	5
0190	9	42 40 800			1	Bushing	Bussning	3
0200	10	42 40 750			1	Plastic nut	Plastmutter	5
0210	11	44 01 659			1	Bushing	Bussning	6
0220	12	79 72 573		183)	1	Clip nut	Clipsmutter	5
0230	12	79 67 995		184)	1	Clip nut	Clipsmutter	3
0240	12	79 72 573		184), SAI	1	Clip nut	Clipsmutter	5
0250	13	79 73 001			2	Screw	Skruv	5
0260	13	79 73 001		SAI	1	Screw	Skruv	5
0270	13A	79 83 000			1	Hexagon screw	Sexkantsskruv	5
0280	14	43 73 528		92)	2	Nozzle	Munstycke	2
0290	14	46 73 208		64,92)	2	Nozzle	Munstycke	2
0300	14	44 80 653		92), CV	2	Nozzle	Munstycke	2
0310	14	46 73 208		64,92), CV	2	Nozzle	Munstycke	2
0320	14	85 04 144		93)	2	Nozzle	Munstycke	2
0330	15	43 73 494		159)	1	Nozzle	Munstycke	2
0340	16	42 47 565		159)	1	Grommet	Genomföring	3
0350	16A	85 75 599		160)	2	Plug	Plugg	5
0360	17	44 80 661			1	Valve	Ventil	
0370	18	*43 73 569*		NLS – USE 4480661	1	Valve	Ventil	
0380	19	40 94 199			1	Connector	Skarvstycke	5
0390	20	79 61 345			1	Bushing	Bussning	5
0400	21	43 99 002		198)	1	Tube	Rör	2
0410	21	46 74 800		199)	1	Tube	Rör	2

26. With level guard. Med nivåvakt.
48. Ch -R2002438.
49. Ch R2002439-.
64. Cold markets. Kalla marknader.
92. Ch -S2021625, -S7016783.
93. Ch S2021626-, S7016784-.
113. Ch -R2019738.
159. With rear window wiper. Med bakrutetorkare.
160. Without rear window wiper. Utan bakrutetorkare.
173. Ch -R2035949.
174. Ch R2035950-.
183. Ch -R2040645.
184. Ch R2040646-.
198. Ch -S2039222, -S7021968.
199. Ch S2039223-, S7021969-.
200. Ch -T2012889.
201. Ch T2012890-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C10

Washer unit — Spolaranläggning

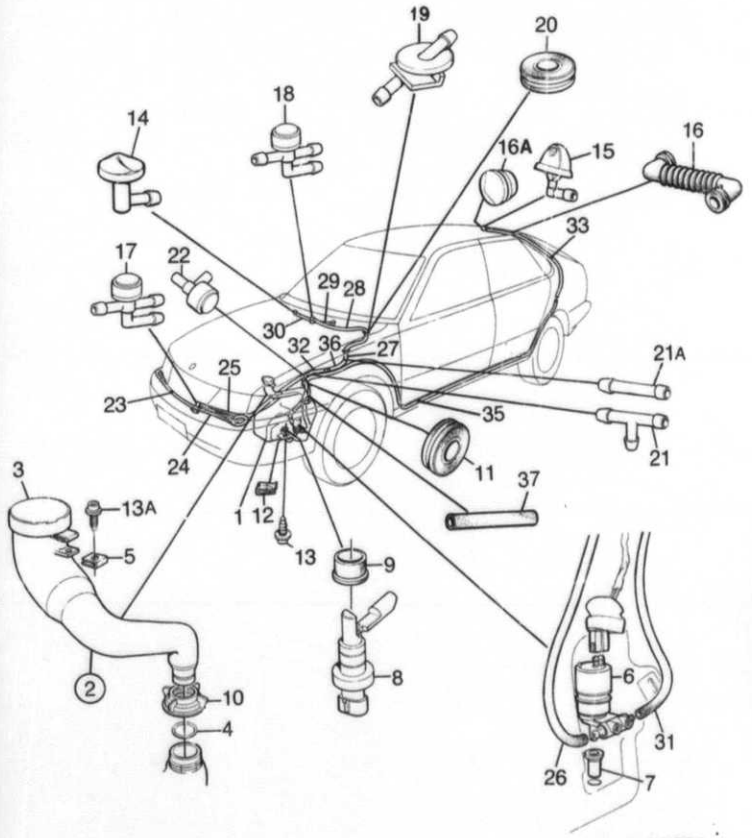

F8515 AAC94

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	21A	46 74 792		199)	1	Tube	Rör	2
0430	22	85 73 669			1	Valve	Ventil	
0440								
0450	23	85 48 273		L=710 MM	1	Hose	Slang	5
0460	24	85 48 273		L=220 MM	1	Hose	Slang	5
0470	25	85 48 273		L=950 MM	1	Hose	Slang	5
0480	26	85 48 273		198), L=450 MM	1	Hose	Slang	5
0490	26	85 49 339		199), L=450 MM	1	Hose	Slang	5
0500	27	85 48 273		198), L=710 MM	1	Hose	Slang	5
0510	27	85 48 273		199), L=185 MM	1	Hose	Slang	5
0520	28	85 48 273		L=750 MM	1	Hose	Slang	5
0530	29	85 48 273		L=385 MM	1	Hose	Slang	5
0540	30	85 48 273		L=220 MM	1	Hose	Slang	5
0550	31	85 48 273		159), L=400 MM	1	Hose	Slang	5
0560	32	85 48 273		159), L=185 MM	1	Hose	Slang	5
0570	33	85 48 273		159), L=1265 MM	1	Hose	Slang	5
0580	34	85 48 273		159), L=60 MM	1	Hose	Slang	5
0590	35	43 73 536		159)	1	Hose	Slang	5
0600	36	85 49 339		199), L=530 MM	1	Hose	Slang	5
0610	37	48 31 053		L=270 MM	1	Rubber hose	Gummislang	
0620						vent	urluftning	
0630								
0640		85 48 273		L=5000 MM	X	Hose	Slang	5

159. With rear window wiper. Med bakrutetorkare.
198. Ch -S2039222, -S7021968.
199. Ch S2039223-, S7021969-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-J06

2-C12

Rear window wiper

Bakrutetorkare

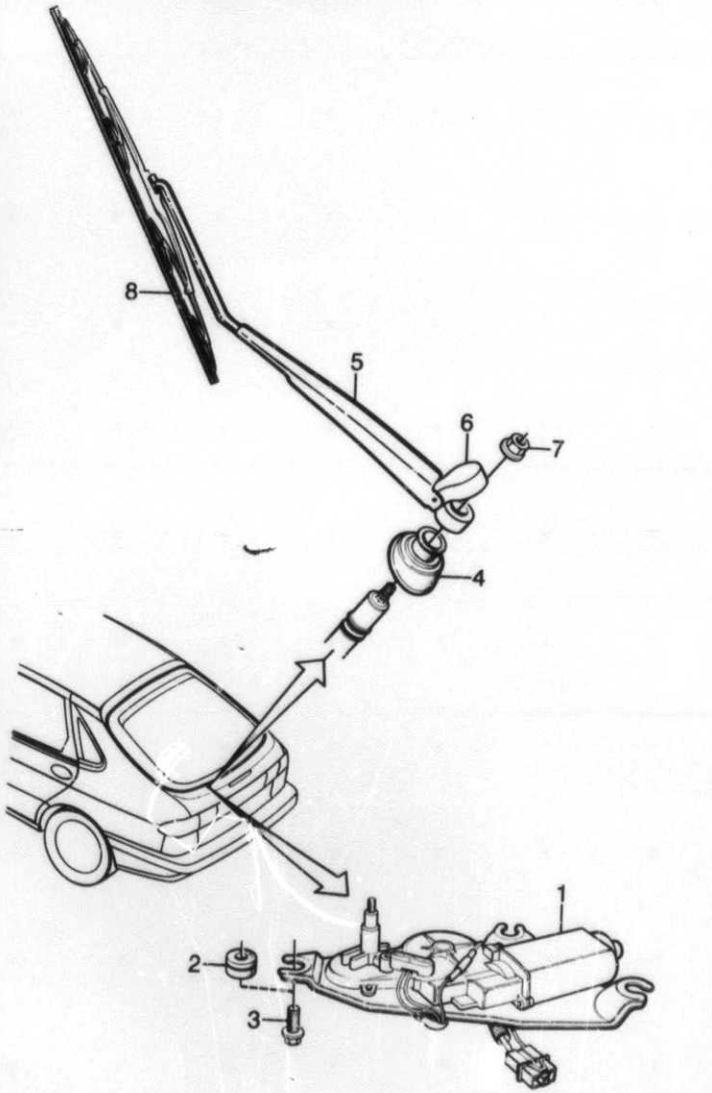

F4948 AAC94


0920	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 01 618			1	Wiper motor	Torkarmotor	4
0020	2	44 01 626			3	Rubber bushing	Gummibussning	3
0030	3	44 01 634			3	Screw	Skruv	5
0040	4	42 40 685			1	Rubber bushing	Gummibussning	3
0050	5	44 80 463			1	Wiper arm	Torkararm	6
0060	6	43 98 590			1	Cover	Kåpa	3
0070	7	79 77 929			1	Nut	Mutter	5
0080	8	44 80 471			1	Wiper blade	Torkarblad	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

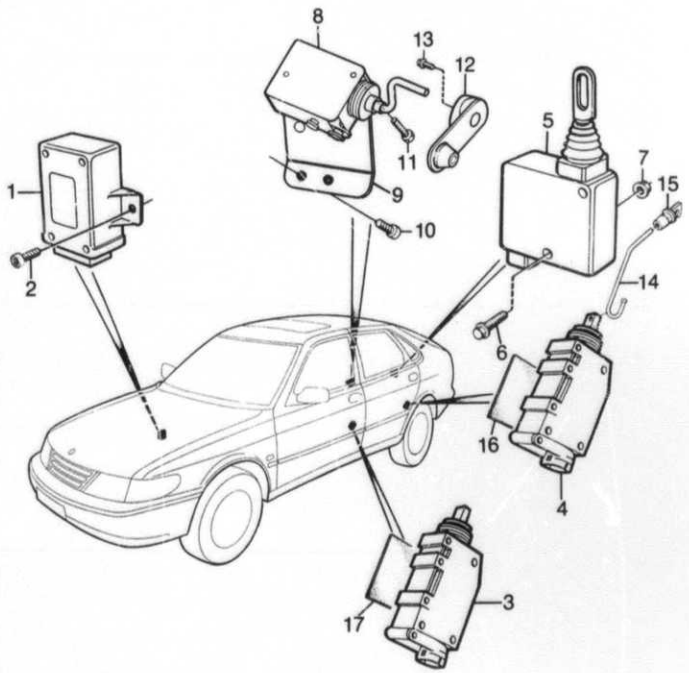

F8321 AAC94

Electric equipment, other

2-C14

Central lock

Övr. elektrisk utrustning

Centrallås

0930	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 24 398		141)	1	Electronic unit	Elektronikenhet	3
0020	1	47 10 257		142)	1	Electronic unit	Elektronikenhet	3
0030	2	79 70 536			2	Screw	Skruv	6
0040								
0050	3	43 26 773		-1995, LHD, LH	1	Electric motor	Elmotor	3
0060	3	43 26 781		-1995, LHD, RH	1	Electric motor	Elmotor	3
0070	3	47 37 607		1996-, LHD, LH	1	Electric motor	Elmotor	3
0080	3	47 37 565		1996-, LHD, RH	1	Electric motor	Elmotor	3
0090								
0100	3	43 26 781		-1995, RHD, LH	1	Electric motor	Elmotor	3
0110	3	43 26 773		-1995, RHD, RH	1	Electric motor	Elmotor	3
0120	3	47 37 565		1996-, RHD, LH	1	Electric motor	Elmotor	3
0130	3	47 37 607		1996-, RHD, RH	1	Electric motor	Elmotor	3
0140								
0150	4	43 26 799		-1995	2	Electric motor	Elmotor	3
0160	4	47 37 573		1996-	2	Electric motor	Elmotor	3
0170								
0180	5	43 25 783		-1995	1	Motor	Motor	4
0190	5	• 47 33 382		1996-	1	Motor	Motor	
0200	6	79 71 823			2	Screw	Skruv	5
0210	7	79 77 929			2	Nut	Mutter	5
0220								
0230	8	44 93 300			1	Electric motor	Elmotor	3
0240						tank hatch	tanklucka	
0250	9	43 05 736			1	Bracket	Konsol	6
0260	10	79 22 362			2	Screw	Skruv	5
0270	11	79 71 823			2	Screw	Skruv	5
0280								
0290	12	43 06 478			1	Grommet	Genomföring	5
0300	13	79 83 000			1	Hexagon screw	Sexkantsskruv	5
0310								
0320	14	45 57 211		LH	1	Rod	Stång	5
0330						rear door	bakdörr	
0340	14	45 57 229		RH	1	Rod	Stång	5
0350						rear door	bakdörr	
0360	15	43 26 732		LH	1	Clip	Clips	5
0370	15	43 26 740		RH	1	Clip	Clips	5
0380								
0390	16	46 94 584		1995-	2	Spacer	Mellanlägg	
0400						rear door	bakdörr	
0410								
0420	17	46 94 584		1996-	2	Spacer	Mellanlägg	
0430						front door	framdörr	


141. Ch -T2029496, -T7006505.
142. Ch T2029497-, T7006506-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

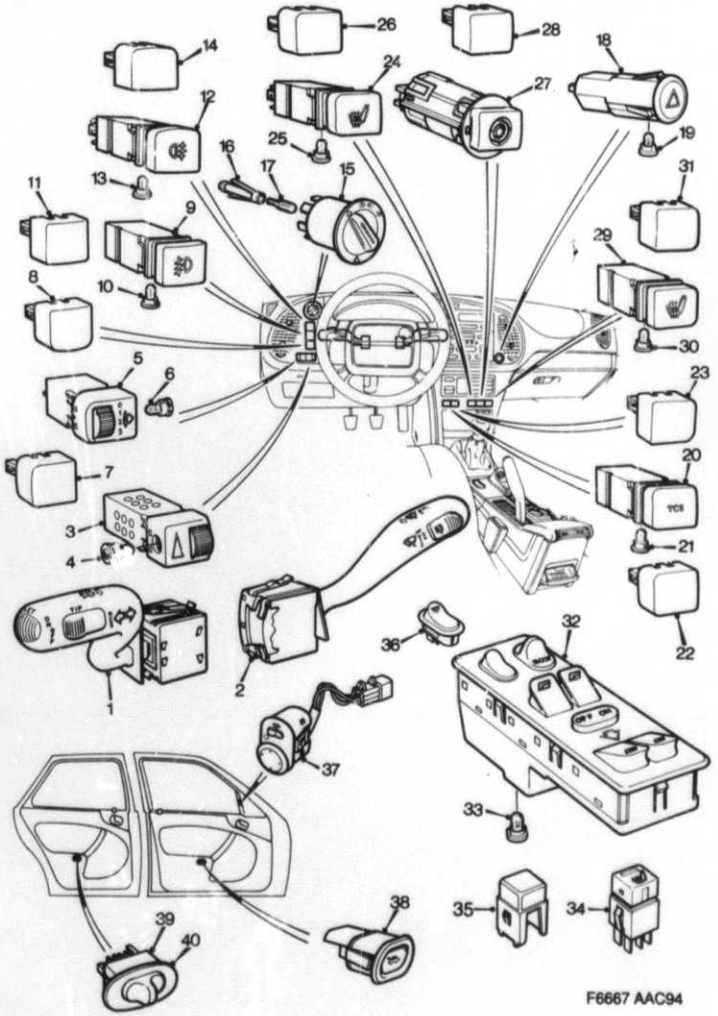

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 09 314		-1996	1	Switch	Strömställare	2
0020						direction indicator	blinkers	
0030	1	47 39 488		1997-	1	Switch	Strömställare	2
0040						direction indicator	blinkers	
0050	1	*44 09 306*		30), -1995	1	Switch	Strömställare	2
0060				NLS – USE 4669081		direction indicator	blinkers	
0070	1	46 92 778		30), 1996	1	Switch	Strömställare	2
0080						direction indicator	blinkers	
0090	1	46 69 081		30), 1997-	1	Switch	Strömställare	2
0100						direction indicator	blinkers	
0110	2	*44 09 439*		186)	1	Switch	Strömställare	2
0120				NLS – USE 4692794		windscreen wiper	vindrutetorkare	
0130	2	*46 17 486*		187)-1995	1	Switch	Strömställare	2
0140				NLS – USE 4692794		windscreen wiper	vindrutetorkare	
0150	2	46 92 794		1996-1997	1	Switch	Strömställare	2
0160						windscreen wiper	vindrutetorkare	
0170	2	46 16 132		1998-	1	Switch	Strömställare	2
0180						windscreen wiper	vindrutetorkare	
0190	2	*44 09 421*		159,186)	1	Switch	Strömställare	2
0200				NLS – USE 4811360		windscreen wiper	vindrutetorkare	
0210	2	*46 17 478*		159,187)-1995	1	Switch	Strömställare	2
0220				NLS – USE 4811360		windscreen wiper	vindrutetorkare	
0230	2	46 92 786		159), 1996	1	Switch	Strömställare	2
0240						windscreen wiper	vindrutetorkare	
0250	2	48 11 360		159), 1997	1	Switch	Strömställare	
0260						windscreen wiper	vindrutetorkare	
0270	2	46 16 140		159), 1998-	1	Switch	Strömställare	
0280						windscreen wiper	vindrutetorkare	
0290								
0300	3	*42 02 933*		NLS – USE 4617460	1	Rheostat	Reostat	3
0310						instrument lighting	instrumentbelysning	
0320	4	44 66 967			1	.Bulb	.Glödlampa	4
0330								
0340	5	*44 10 775*		143)	1	Switch	Strömställare	3
0350				NLS – USE 4736906		headlamp levelling	ljuslängdsreglering	
0360	5	47 36 906		144)	1	Switch	Strömställare	3
0370						headlamp levelling	ljuslängdsreglering	
0380	6	44 66 967		143)	1	.Bulb	.Glödlampa	4
0390	6	49 29 311		144)	1	.Bulb	.Glödlampa	4
0400	7	44 09 280			1	Button	Knapp	5
0410						blind knob	blindknapp	
0420								
0430	8	44 09 264			1	Button	Knapp	5
0440						blind knob	blindknapp	
0450								
0460	9	44 09 223			1	Switch	Strömställare	3
0470						front fog light	dimstrålkastare	
0480	10	44 66 439			1	.Bulb	.Glödlampa	4
0490	11	44 09 272			1	Button	Knapp	5
0500						blind knob	blindknapp	
0510								
0520	12	44 09 231		-1996	1	Switch	Strömställare	3
0530						rear fog light	dimbaklykta	
0540	12	47 33 952		1997-	1	Switch	Strömställare	3
0550						rear fog light	dimbaklykta	
0560	13	44 66 439			1	.Bulb	.Glödlampa	4


30. With speed control system. Med fartkontrollsystem.
143. Ch –V2003838.
144. Ch V2003839–.
159. With rear window wiper. Med bakrutetorkare.
186. Ch –R2045270.
187. Ch R2045271–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

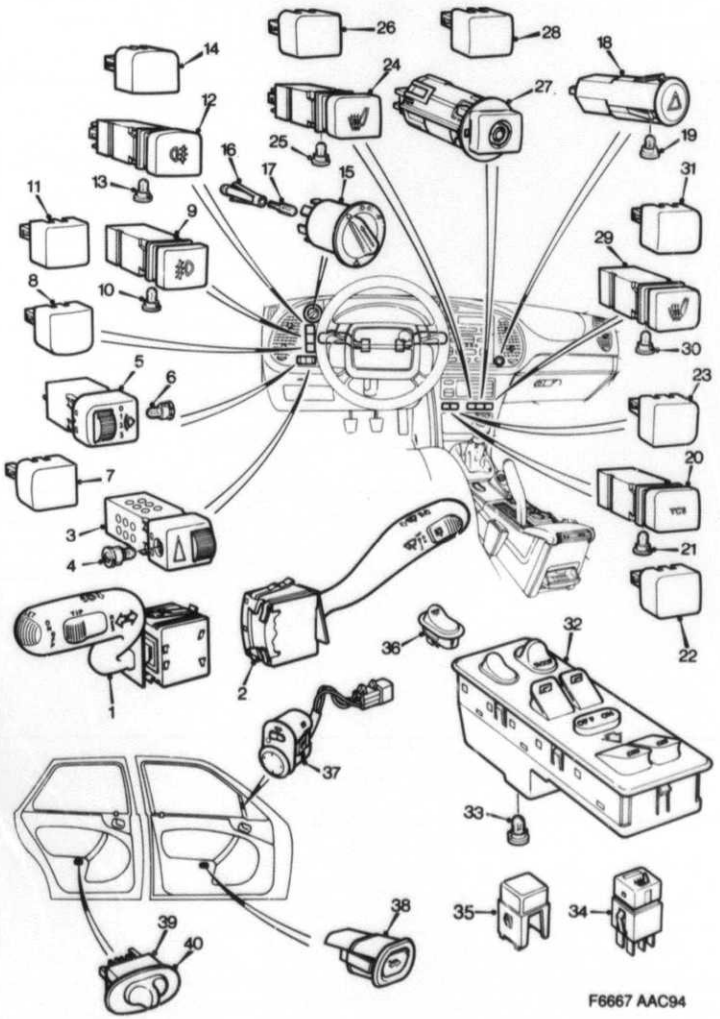

Electric equipment, other

2-C18

Switch

Övr. elektrisk utrustning

Strömställare

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Be...ning	S L
0570	14	44 09 264			1	Button	Knapp	5
0580						blind knob	blindknapp	
0590								
0600	15	85 90 838			1	Switch	Strömställare	3
0610						light switch	ljusomkopplare	
0620	16	85 53 356			1	.Bracket	.Hållare	4
0630	17	85 00 613		40/238 286 009	1	.Bulb	.Glödlampa	2
0640								
0650	18	41 09 526			1	Switch	Strömställare	4
0660						warning flasher	varningsblinklykta	
0670	19	41 14 898			1	.Bulb	.Glödlampa	4
0680								
0690	20	44 11 864		-1997, TCS	1	Switch	Strömställare	3
0700	21	44 66 439			1	.Bulb	.Glödlampa	4
0710	22	44 09 280			1	Button	Knapp	5
0720						blind knob	blindknapp	
0730								
0740	23	44 09 280			1	Button	Knapp	5
0750						blind knob	blindknapp	
0760								
0770	24	44 09 256		LH	1	Switch	Strömställare	3
0780						heating pad	värmedyna	
0790	25	44 66 439			1	.Bulb	.Glödlampa	4
0800	26	44 09 280			1	Button	Knapp	5
0810						blind knob	blindknapp	
0820								
0830	27			See page 3A-077, 2-D06		Sensor	Givare	
0840						indoor temperature	innerlufttemperatur	
0850	28	44 10 403			1	Button	Knapp	5
0860						blind knob	blindknapp	
0870								
0880	29	44 09 249		RH	1	Switch	Strömställare	3
0890						heating pad	värmedyna	
0900	30	44 66 439			1	.Bulb	.Glödlampa	4
0910	31	44 09 280			1	Button	Knapp	5
0920						blind knob	blindknapp	
0930								
0940	32	42 24 036		1994, 3D	1	Switch	Strömställare	3
0950						window lift	fönsterhiss	
0960	32	46 15 852		1995-, 3D	1	Switch	Strömställare	3
0970						window lift	fönsterhiss	
0980	32	42 24 028		25), 1994, 3D	1	Switch	Strömställare	3
0990						window lift	fönsterhiss	
1000	32	46 15 860		25), 1995-, 3D	1	Switch	Strömställare	3
1010						window lift	fönsterhiss	
1020	32	42 23 996		1994, 5D	1	Switch	Strömställare	3
1030						window lift	fönsterhiss	
1040	32	45 19 146		1995-, 5D	1	Switch	Strömställare	3
1050						window lift	fönsterhiss	
1060	32	42 23 988		25), 1994, 5D	1	Switch	Strömställare	3
1070						window lift	fönsterhiss	
1080	32	45 19 120		25), 1995-, 5D	1	Switch	Strömställare	3
1090						window lift	fönsterhiss	
1100	32	42 24 044		CV	1	Switch	Strömställare	3
1110						window lift	fönsterhiss	
1120	33	40 69 373			1	.Bulb	.Glödlampa	4
1130								
1140	34	42 22 493		3), 1995-	1	Switch	Strömställare	3
1150						heating pad	värmedyna	
1160	35	42 23 426			1	Button	Knapp	5
1170						blind knob	blindknapp	

3. Rear. Bakre.
25. For cars with el. sun roof. För bilar med el. soltak.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C20

Switch
Strömställare

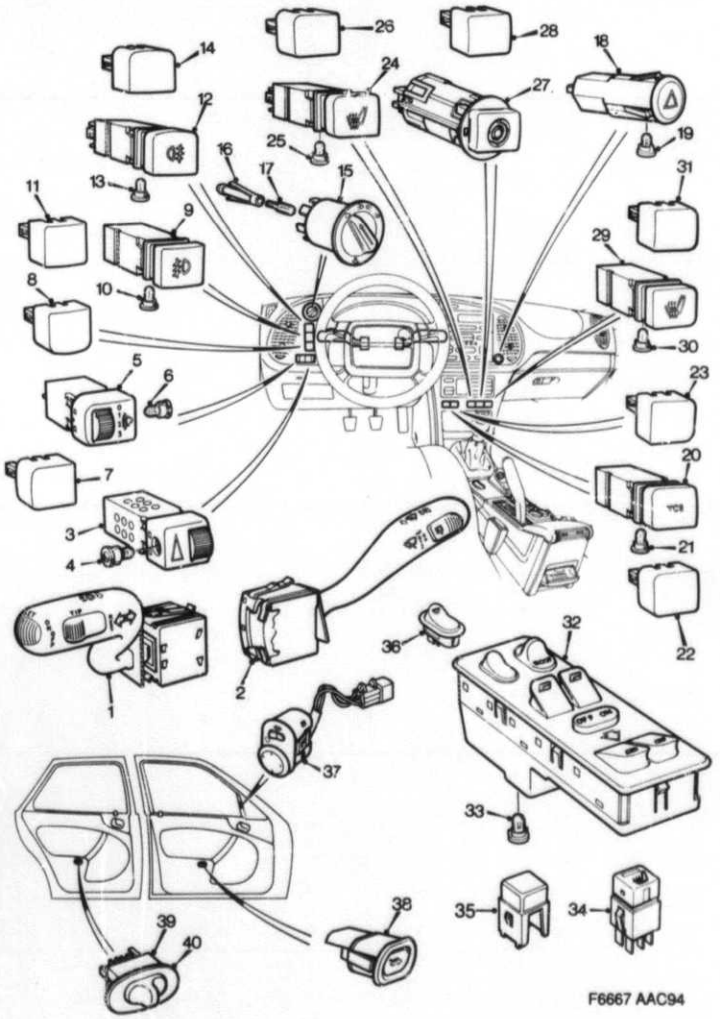

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1180								
1190	36	44 11 997			1	Switch interior illum.	Strömställare innerbelysning	3
1200								
1210								
1220	37	44 66 405		LHD, EM	1	Switch	Strömställare	3
1230								
1240	37	44 66 413		RHD, EM	1	Switch	Strömställare	3
1250								
1260	38	*40 61 883*		-1996, LHD	1	Switch	Strömställare	
1270				NLS – USE 4733440		luggage compartment lock	bagagerumslås	
1280	38	47 33 440		1997-, LHD	1	Switch	Strömställare	
1290						luggage compartment lock	bagagerumslås	
1300	38	*40 61 255*		-1996, RHD	1	Switch	Strömställare	5
1310				NLS – USE 4733457		luggage compartment lock	bagagerumslås	
1320	38	47 33 457		1997-, RHD	1	Switch	Strömställare	
1330						luggage compartment lock	bagagerumslås	
1340								
1350	39	*44 37 463*		3,52)	2	Switch window lift	Strömställare fönsterhiss	3
1360				NLS – USE 4519989				
1370	39	45 19 989		3,53)	2	Switch window lift	Strömställare fönsterhiss	3
1380								
1390	40	44 37 455			2	▪Frame	▪Ram	6

3. Rear. Bakre.
52. Ch -R2023684.
53. Ch R2023685-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-C22

Speed control system

Farthållningssystem

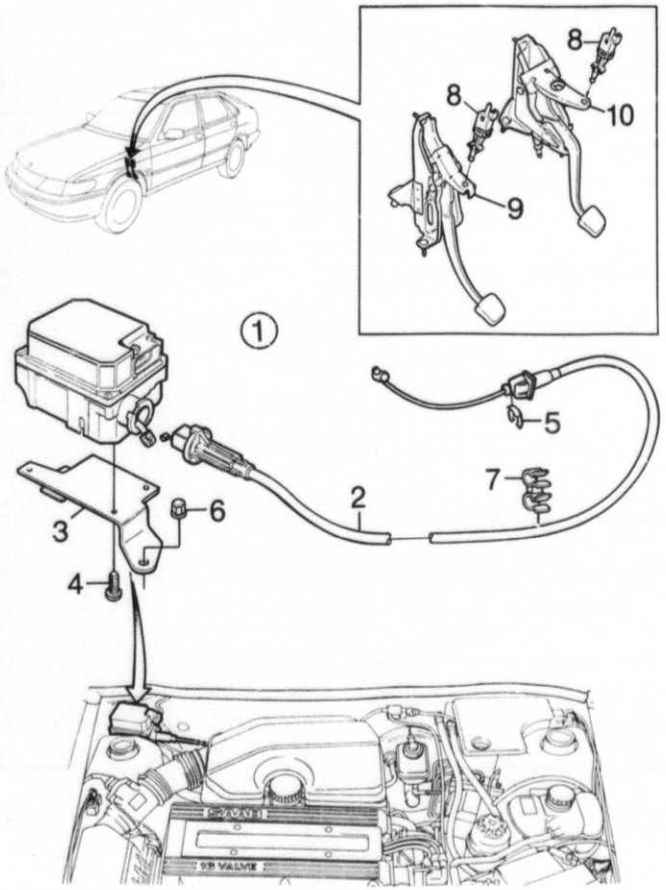

F8516 AAC94

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 37 601*		145), 4-CYL. NLS - USE	1	Electronic unit	Elektronikenhet	5
0010				4227823, 4872693				
0020	1	46 63 530		146,234), 4-CYL.	1	Electronic unit	Elektronikenhet	
0030	1	* 48 72 693		235), 4-CYL.	1	Electronic unit	Elektronikenhet	
0040	1	45 37 619		145), 6-CYL.	1	Electronic unit	Elektronikenhet	5
0050	1	46 63 548		146), -1997, 6-CYL.	1	Electronic unit	Elektronikenhet	
0060	2	45 83 019		145), 4-CYL.	1	.Cable	.Wire	6
0070	2	47 11 404		146), 4-CYL.	1	.Cable	.Wire	
0080	2	45 83 027		145), 6-CYL.	1	.Cable	.Wire	6
0090	2	47 11 396		146), -1997, 6-CYL.	1	.Cable	.Wire	
0100	3	44 09 918			1	.Bracket	.Konsol	6
0110	4	79 71 294			3	.Screw	.Skruv	5
0120	5	42 27 823		146)	3	.Lock ring	.Säkringsring	5
0130	6	40 87 128			2	Plastic nut	Plastmutter	5
0140	7	44 08 001		57)	1	Clamp	Klammer	5
0150	8	44 02 137		-1997, M	2	Pedel contact	Pedalkontakt	3
0155	8	* 49 47 099		1998-, M	2	Pedel contact	Pedalkontakt	
0160	8	44 02 137		-1997, A	1	Pedel contact	Pedalkontakt	3
0165	8	* 49 47 099		1998-, A	1	Pedel contact	Pedalkontakt	
0170	9			See page 4-009, 4-A10		Bracket	Konsol	
0180	10			See page 5-019, 4-D20		Bracket	Konsol	


57. Ch -R2038948.
145. Ch -V2009801, -V7002737.
146. Ch V2009802-, V7002738-.
234. Ch. -V2038649, -V7011886.
235. Ch. V2038650-. V7011887-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

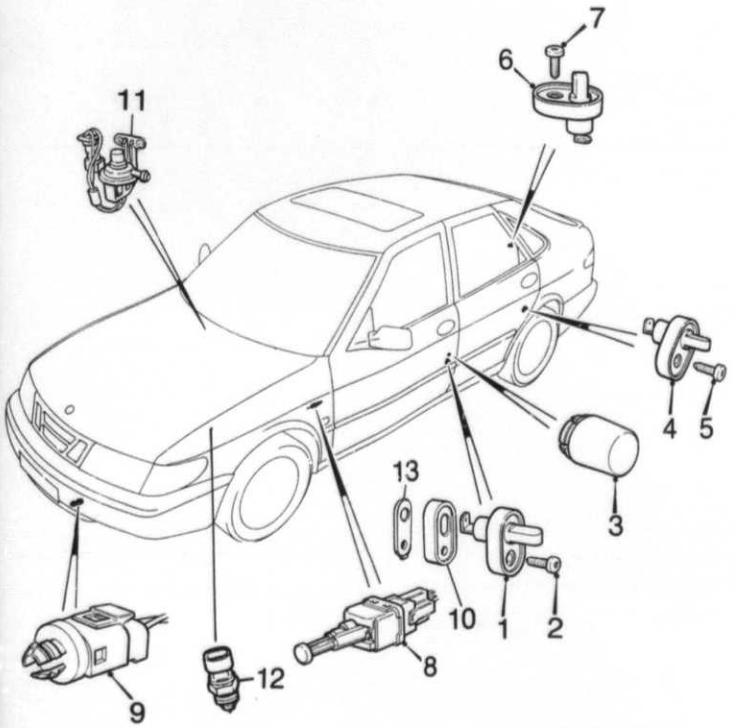

F9274 AAC94

Electric equipment, other

2-C24 Actuator

Övr. elektrisk utrustning

Manöverdon

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 08 423		1994	2	Contact front door	Kontakt framdörr	3
0020								
0030	1	44 08 423		222), 1995-	2	Contact front door	Kontakt framdörr	3
0040								
0050	1	*46 65 626*		222), 1995-, 5D,SE,EU,GB	2	Door switch front door	Dörrkontakt framdörr	
0060				NLS – USE 4408423, 4943544, 4947149				
0060								
0070	1	44 08 423		223)-	2	Contact front door	Kontakt framdörr	3
0080								
0090	2	79 22 354		-1996	2	Screw	Skruv	5
0100	2	79 85 955		244), 1997-	2	Screw	Skruv	5
0110	2	79 70 601		245)	2	Screw	Skruv	5
0120								
0130	3	*44 27 688*		222), 5D	2	Stop front door	Anslag framdörr	3
0140				NLS – USE 4943544, 4947149				
0140								
0150	3	49 43 544		223,230), 5D	2	Stop front door	Anslag framdörr	3
0160								
0170	3	*44 27 688*		231), 5D	2	Stop front door	Anslag framdörr	3
0180				NLS – USE 4943544, 4947149				
0180								
0190								
0200	4	44 08 423		5D	2	Contact rear door	Kontakt bakdörr	3
0210								
0220	5	79 22 354		-1996, 5D	2	Screw	Skruv	5
0230	5	79 85 955		244), 1997-, 5D	2	Screw	Skruv	5
0240	5	79 70 601		245), 5D	2	Screw	Skruv	5
0250								
0260	6	44 08 423			1	Contact tail gate	Kontakt bagagerumsdörr	3
0270								
0280	7	79 22 354		-1996	1	Screw	Skruv	5
0290	7	79 85 955		244), 1997-	1	Screw	Skruv	5
0300	7	79 70 601		245)	1	Screw	Skruv	5
0310								
0320	8	42 33 342		-1995	1	Brake light switch	Bromsljuskontakt	3
0330	8	46 17 551		212), 1996-	1	Brake light switch	Bromsljuskontakt	3
0340	8	46 17 551		213)	1	Brake light switch	Bromsljuskontakt	3
0350	8	42 33 342		213,214), ACS	1	Brake light switch	Bromsljuskontakt	3
0360	8	46 17 551		215), ACS	1	Brake light switch	Bromsljuskontakt	3
0370								
0380	9	91 23 456			1	Sensor outer temp	Givare yttertemp	4
0390								
0400								
0410	10	*45 59 340*		123,150,240), (4558524)	2	Protection	Skydd	
0410				NLS – USE 4856050				
0420	10	• 48 56 050		123,241)	2	Protection	Skydd	
0430								

123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
150. Ch V2017883–.
212. Ch –T2008080, –T7001467.
213. Ch T2008081–, T7001468–.
214. Ch –V2029263, –V7006896.
215. Ch V2029264–, V7006897–.
222. Ch –V2039302.
223. Ch V2039303–.
230. Ch –V2043432.
231. Ch V2043433–.
240. Ch. –W2003806.
241. Ch. W2003807–.
244. Ch –W2009940.
245. Ch W2009941–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D02

Actuator

Manöverdon

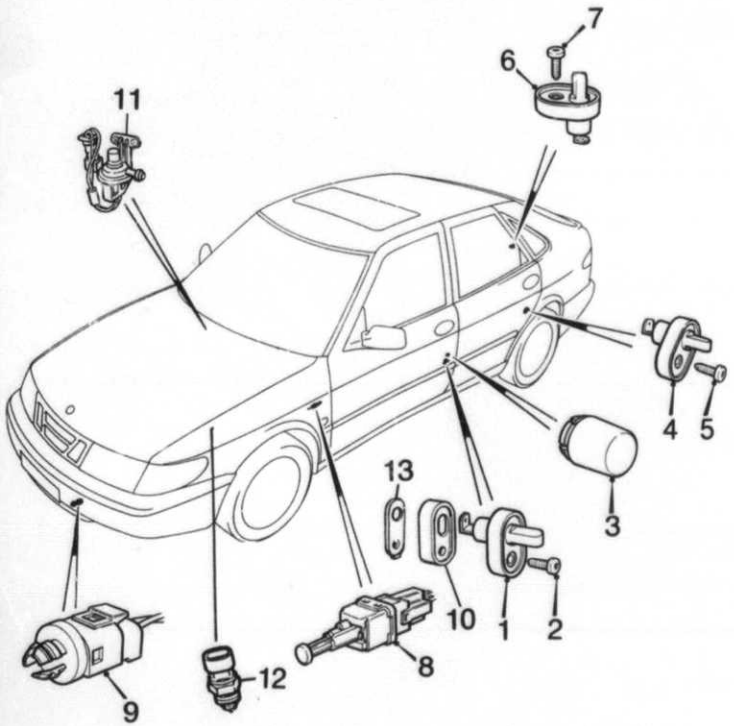

F9274 AAC94

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	11	46 92 802		202), B204L, A	1	Pressure monitor brake	Tryckvakt broms	
0450								
0460	11			203), B204L, A		Cable harness	Ledningsnät	
0470				See page 3A-131, 2-F12				
0480	11	46 92 802		B258I, A, US, CA	1	Pressure monitor brake	Tryckvakt broms	
0490								
0500								
0510	12			See page 4-017, 4-A18		Reverse light contact	Backljuskontakt	
0520								
0530	13	• 49 47 149		242), 5D	2	Spacer	Distans	

202. Ch -V2021780.
203. Ch V2021781-.
242. Ch. W2000652-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D04 Air-bag / Electronic unit

2-D04 Airbag / Elektronikenhet

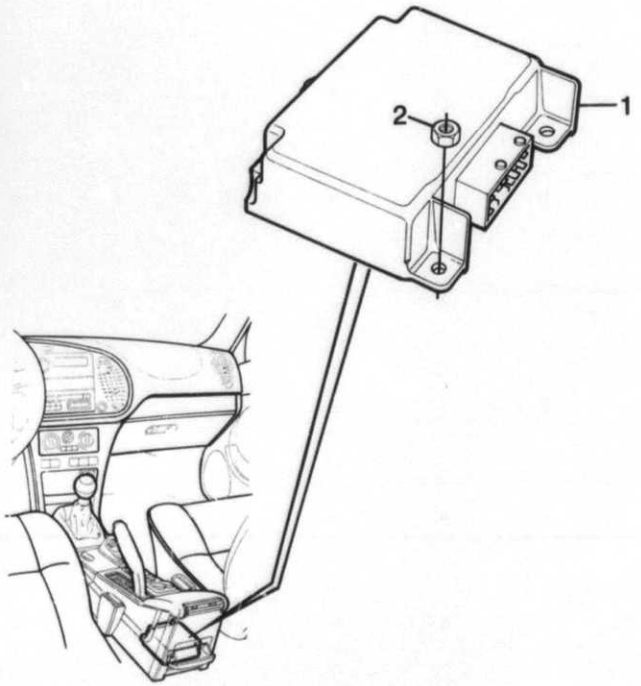

F5663 AAC94

1005	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 33 645		10), 1994	1	Electronic unit	Elektronikenhet	5
0020	1	*46 64 587*		1995-,11,102) NLS – USE 5038047	1	Electronic unit	Elektronikenhet	5
0030	1	*46 19 680*		103,236) NLS – USE 5038047	1	Electronic unit	Elektronikenhet	5
0040	1	* 50 38 047		237)	1	Electronic unit	Elektronikenhet	5
0050	2	79 65 775			3	Nut	Mutter	5

10. CV, ch. -S7009999
11. CV, ch. S7010000-
102. Ch -S2024308, -S7017694.
103. Ch S2024309-, S7017695-
199. Ch S2039223-, S7021969-.
236. Ch. -W2006087.
237. Ch. W2006088-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D06 Actuator ACC — Manöverdon ACC

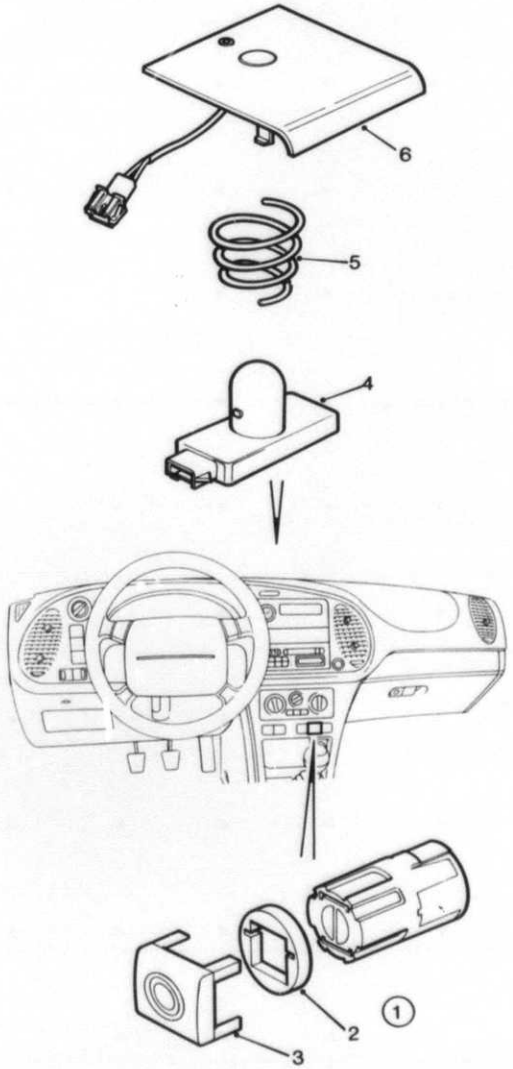

F4954 AAC94

1010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 64 295			1	Sensor	Givare	4
0020						indoor temperature	innerlufttemperatur	
0030	2	43 18 762			1	.Gasket	.Packning	6
0040	3	43 65 458			1	.Front cover	.Frontkåpa	5
0050								
0060	4	43 64 972		-1996	1	Solar sensor	Solsensor	4
0070	4	43 64 972		1997-, 3D, 5D	1	Solar sensor	Solsensor	4
0080	4	43 67 231		37), -1996	1	Solar sensor	Solsensor	4
0090	4	43 67 231		1997-, CV	1	Solar sensor	Solsensor	4
0100	5	96 30 252			1	Spring	Fjäder	5
0110	6			See page 8B-005, 5-H06		Cover	Täcklock	

37. Without heat-absorbing glass — Utan värmeabsorberande glas

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B03
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D08

Audio system
Ljudsystem

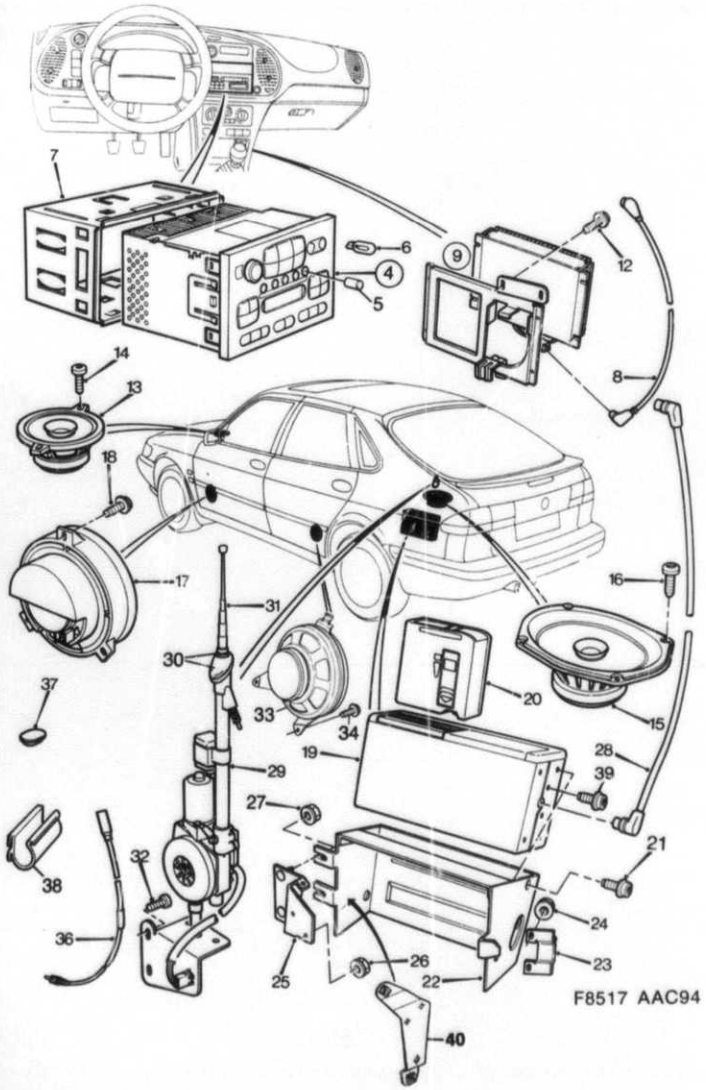

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	4	42 32 765		7,50), EU	1	Radio	Radio	5
0020	4	42 24 929		7,50), US	1	Radio	Radio	5
0030	4	44 08 654		7,50), PA, AU	1	Radio	Radio	5
0040	4	44 08 662		JP	1	Radio	Radio	5
0050	4	44 64 475		ME	1	Radio	Radio	5
0060	5	46 19 045			4	.Button	.Knapp	5
0070	6	44 88 375			5	.Bulb	.Glödlampa	4
0080	7	42 24 978			1	Cage	Korg	5
0090								
0100	8	42 32 807		45)	1	Cable harness radio-amplifier	Ledningsnät radio-förstärkare	5
0110								
0120	9	44 88 003		45,224), LHD	1	Amplifier	Förstärkare	5
0130	9	47 12 626		45,225), LHD	1	Amplifier	Förstärkare	5
0140	9	*44 88 011*		45,224), RHD NLS – USE 4712618	1	Amplifier	Förstärkare	5
0140								
0150	9	47 12 618		45,225), RHD	1	Amplifier	Förstärkare	5
0160	12	79 22 503		45), -1995	2	Screw	Skruv	5
0170	12	79 22 495		45), 1996-	2	Screw	Skruv	5
0180								
0190	13	*42 32 740*		216) NLS – USE 4712634	2	Loudspeaker	Högtalare	4
0200	13	47 12 634		217)	2	Loudspeaker	Högtalare	4
0210	13	*45 18 221*		228), US, CA NLS – USE 4712675	2	Loudspeaker	Högtalare	4
0210								
0220	13	47 12 675		229), US, CA	2	Loudspeaker	Högtalare	4
0230	14	79 22 354			4	Screw	Skruv	5
0240								
0250	15	*42 32 872*		-1995 NLS – USE 4712659	2	Loudspeaker	Högtalare	4
0260	15	*47 11 313*		218), 1996- NLS – USE 4712659	2	Loudspeaker	Högtalare	
0260								
0270	15	47 12 659		219)	2	Loudspeaker	Högtalare	
0280	16	79 70 304			8	Screw	Skruv	5
0290								
0300	17	42 24 937		45,224)	2	Loudspeaker	Högtalare	4
0310	17	47 12 642		45,225)	2	Loudspeaker	Högtalare	4
0320	18	79 78 422		45)	6	Screw	Skruv	5
0330								
0340	19	*42 21 230*		148), CV NLS – USE 4711792	1	CD-player	CD-spelare	
0340								
0350	19	47 11 792		149), CV	1	CD-player	CD-spelare	
0360	20	44 66 389		CV	1	CD magazine	CD-magasin	5
0370	21	79 78 356		CV	4	Screw	Skruv	5
0380	22	44 28 199		148), CV	1	Bracket	Konsol	5
0390	22	86 86 222		149), CV	1	Bracket	Konsol	
0400	23	44 12 730		CV	1	Bracket	Konsol	5
0410	24	79 77 929		CV	2	Nut	Mutter	5
0420	25	44 28 207		CV	1	Bracket	Konsol	5
0430	26	79 77 929		CV	2	Nut	Mutter	5
0440	27	79 77 929		CV	2	Nut	Mutter	5
0450								

7. Also available as exchange unit. Finns även som utbytesenhet.
45. With door loudspeaker. Med dörrhögtalare.
50. Only for markets without Clarion agents or service centers. See the exchange units fiche. Bara för marknader utan Clarionagenter eller servicecentra. Se utbytesfiche.
148. Ch -V7002015.
149. Ch V7002016-.
216. Ch -V2038164.
217. Ch V2038165-.
218. Ch -V2039074.
219. Ch V2039075-.
224. Ch -V2039994.
225. Ch V2039995-.
228. Ch -V2044529.
229. Ch V2044530-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D10

Audio system
Ljudsystem

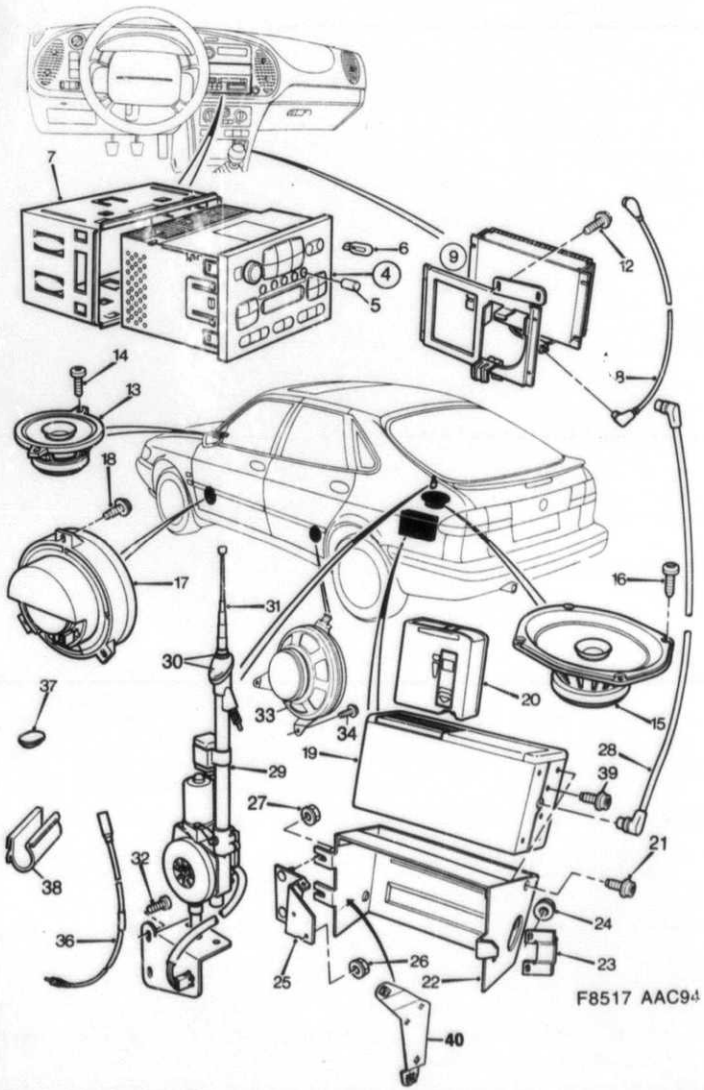

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
28	42 32 880			1	Cable harness	Ledningsnät	5
29	*42 32 831*		32,226) NLS – USE 5035951	1	Antenna	Antenn	5
29	50 35 951		32,227)	1	Antenna	Antenn	5
29	*44 27 514*		32,226), CV NLS – USE 5035969	1	Antenna	Antenn	5
29	50 35 969		32,227), CV	1	Antenna	Antenn	5
30	44 11 559			1	.Attachment kit	.Fästsats	5
30	44 66 983		CV	1	.Attachment kit	.Fästsats	5
31	44 11 807		226)	1	.Antenna rod	.Antennspröt	3
31	50 35 944		227)	1	.Antenna rod	.Antennspröt	3
32	79 78 653			2	Screw	Skruv	5
33	44 09 108		248), CV	2	Loudspeaker	Högtalare	4
33	• 47 12 667		249), CV	2	Loudspeaker	Högtalare	4
34	79 22 438		CV	4	Screw	Skruv	5
36	42 02 982			1	Cable harness	Ledningsnät	5
37	44 10 668		34)	1	Plug	Plugg	5
37	40 85 544		34), CV	1	Plug	Plugg	5
38	79 51 783		34)	1	Clamp	Klammer	5
39	49 40 037		1997-, CV	4	Screw	Skruv	5
40	86 86 198		149), CV	2	Bracket	Konsol	
	• 50 37 023			X	Service kit antenna	Servicesats antenn	

32. Electrical antenna. Motorantenn.
34. Without antenna. Utan antenn.
149. Ch V7002016–.
226. Ch –V2044149, –V7011502.
227. Ch V2044150– V7011503–.
248. Ch –V7010530.
249. Ch V7010531–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D12

Anti theft system — *Stöldlarm*

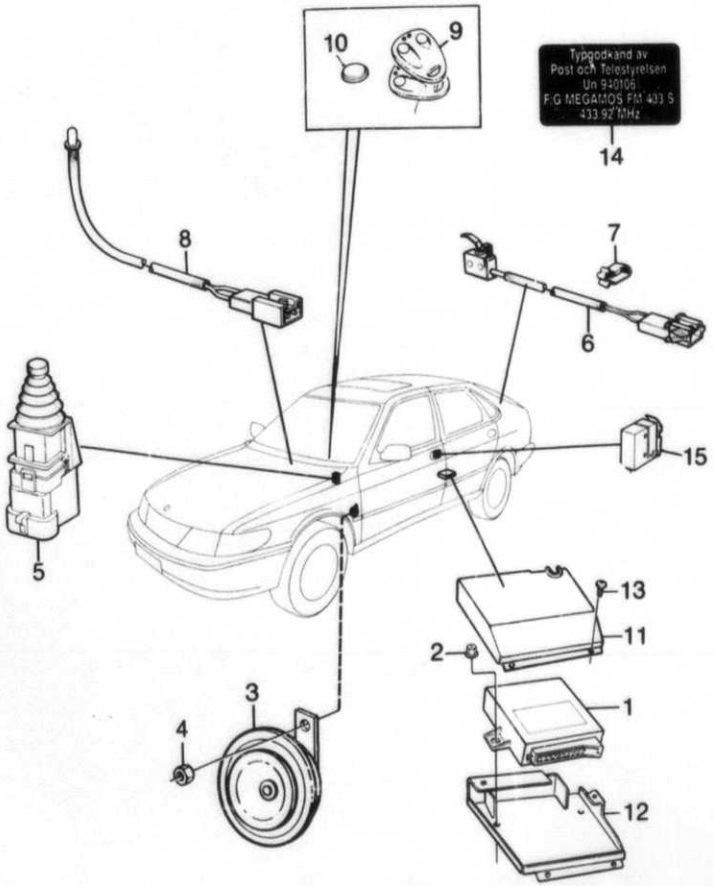

F7377 AAC94

1030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 07 484		10), 1994	1	Electronic unit	Elektronikenhet	5
0020	1	*45 88 208*		11,181), 1995, SE, EU, GB, ME, AU, LA, PA NLS - USE 4710448	1	Electronic unit	Elektronikenhet	5
0030								
0040	1	47 10 448		181), 1996, SE, EU, ME, AU, LA, GB, PA	1	Electronic unit	Elektronikenhet	5
0050								
0060	1	47 10 448		181), 1997-, ME, AU, LA, PA	1	Electronic unit	Elektronikenhet	5
0070								
0080	1	45 88 877		123,181), 1996-, EU, GB	1	Electronic unit	Elektronikenhet	5
0090	1	45 88 182		11,181,182), 1995, PA	1	Electronic unit	Elektronikenhet	5
0100	1	47 10 430		181,182), 1996-, PA	1	Electronic unit	Elektronikenhet	5
0110	1	*45 88 190*		11,181), 1995, US, CA NLS – USE 4710455	1	Electronic unit	Elektronikenhet	5
0120	1	47 10 455		181), 1996-, 3D, 5D, CV US, CA	1	Electronic unit	Elektronikenhet	5
0130								
0140	2	40 87 128			2	Plastic nut	Plastmutter	5
0150	3	44 92 443			1	Horn	Signalhorn	4
0160	4	79 77 929			1	Nut	Mutter	5
0170	5	43 23 259			1	Contact	Kontakt	3
0180	6	43 27 300		10), 1994	1	Switch	Brytare	
0190	7	71 56 409		10), 1994	1	Clamp	Klammer	5
0200	8	40 90 981		238)	1	Diode	Diod	
0210	8	• 48 70 333		239)	1	Diode	Diod	
0220	9	45 50 091		11,88,181), 1995-, SE, EU, GB, ME, AU, LA, PA	2	Transmitter	Sändare	
0240	9	45 50 083		11,88,181,182), 1995-, PA	2	Transmitter	Sändare	
0250	9	45 50 075		11,88,181), 1995-, US,CA	2	Transmitter	Sändare	
0260	10	45 55 462			2	Battery	Batteri	
0270								
0280	11	46 18 187		1995, EU, GB	1	Protection	Skydd	
0290	12	46 18 195		1995, EU, GB	1	Protection	Skydd	
0300	13	40 87 987		1995, EU, GB	4	Rivet	Nit	
0310								
0320	14			88)		Label	Etikett	
0330				See page 8D-015, 6-C16				
0340								
0350	15			See page 8A-101, 5-E06		Microswitch	Mikrobrytare	


10. CV, ch. –S7009999
11. CV, ch. S7010000–
88. Labels must be ordered separately, see Group 8D. Etikett måste beställas separat, se grupp 8D.
123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
181. Programmed using an TECH 2 Scan Tool. Programmeras med TECH 2.
182. With catalytic converter shield. Med katalysatorskydd.
238. Ch. –W2006329.
239. Ch. W2006330–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

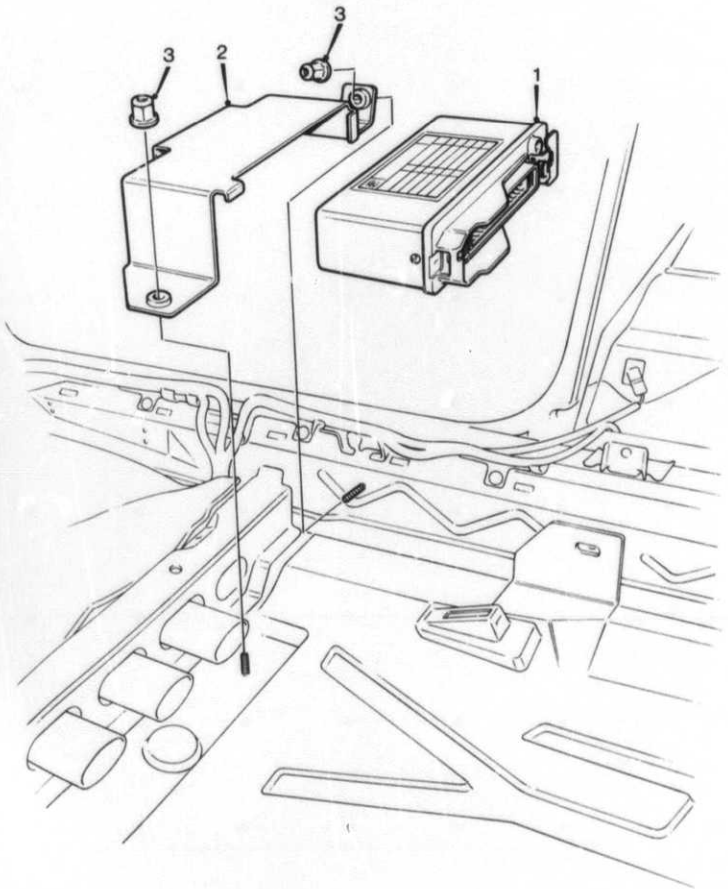

F4957 AAC94

1037	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 39 190		7)	1	Throttle control module	Styrdon	4
0020	2	42 39 356		163)	1	Bracket	Konsol	5
0025	2	44 44 857		164)	1	Bracket	Konsol	5
0027	2	42 39 364		CV	1	Bracket	Konsol	5
0030	3	40 87 128			2	Plastic nut	Plastmutter	5

7. Also available as exchange unit. Finns även som utbytesenhet.
163. Ch -R2006281.
164. Ch R2006282-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D16

Front *10), 1994*

Främre *10), 1994*

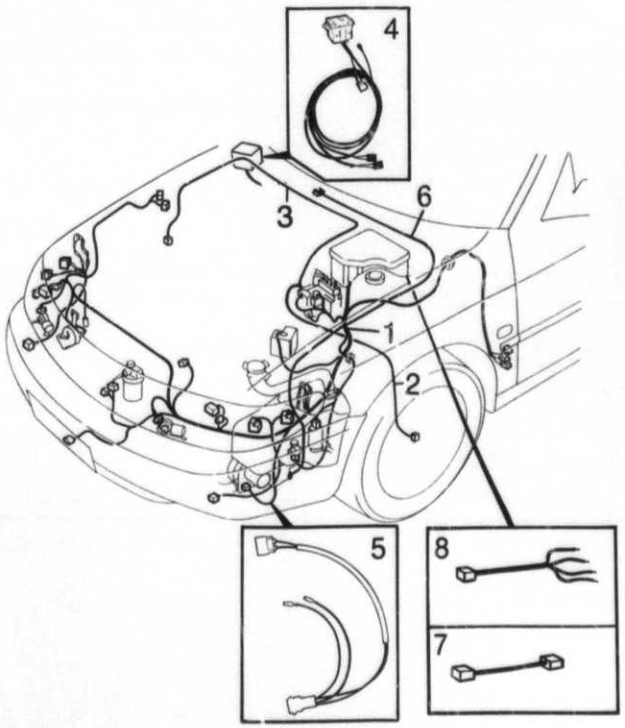

F8518 AAC94

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 88 847			1	Cable harness	Ledningsnät	5
0020								
0030	1	44 34 916		47)	1	Cable harness	Ledningsnät	5
0040								
0050	2	46 63 480		LH, ABS	1	Cable harness	Ledningsnät	6
0060								
0070	3	46 63 498		RH, ABS	1	Cable harness	Ledningsnät	6
0080								
0090	4	47 39 702		147)	1	Cable harness	Ledningsnät	6
0100						vacuum pump	vakuumpump	
0110	5	47 39 710		147)	1	Cable harness	Ledningsnät	6
0120						vacuum pump	vakuumpump	
0130	6	47 39 678		147)	1	Cable harness	Ledningsnät	6
0140						vacuum pump	vakuumpump	
0150	7	47 39 694		147)	1	Cable harness	Ledningsnät	6
0160						relay	relä	
0170						fog light	dimljus	
0180	8	47 39 686		147)	1	Cable harness	Ledningsnät	6
0190						connection	skarv	
0200						vacuum pump	vakuumpump	


10. CV, ch. -S7009999
47. With intake air heat plate. Med värmeplatta.
147. Also applies to modified cars Gäller också för modifierade bilar

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, W..eels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

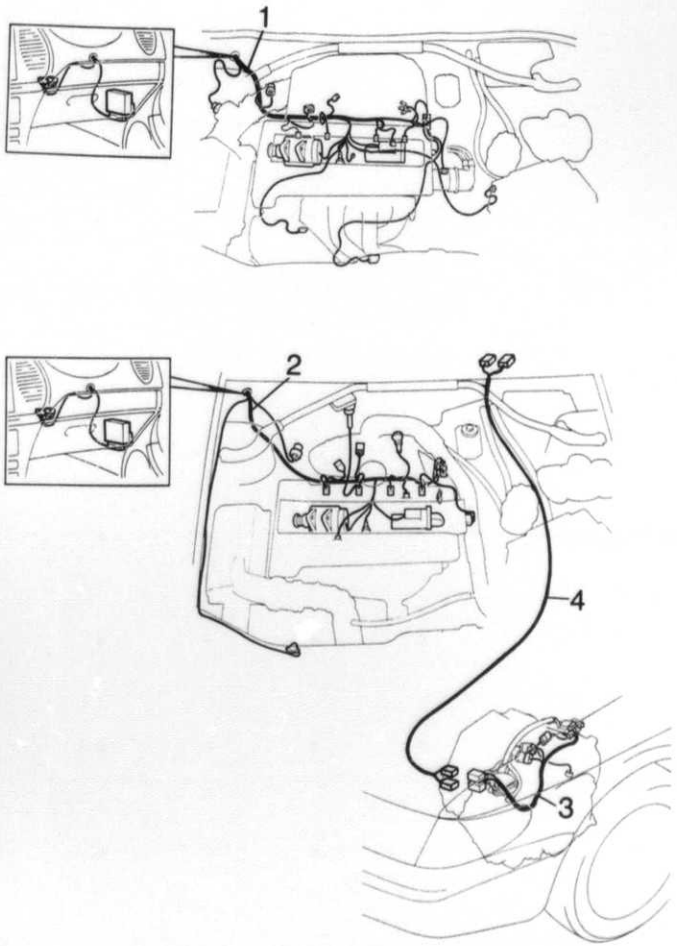

F8322 AAC94

Wiring and fuses

2-D18 Engine, gearbox 10), 4-cyl., 1994

Ledningar och säkringar

Motor, växellåda 10), 4-cyl., 1994

1042	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 20 752		I	1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	44 09 017		I, A	1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0060	2	42 20 745		TURBO	1	Cable harness engine	Ledningsnät motor	3
0070								
0080	2	44 89 050		47), TURBO	1	Cable harness engine	Ledningsnät motor	3
0090								
0100								
0110	3	44 10 536		A	1	Cable harness gearbox	Ledningsnät växellåda	5
0120								
0130								
0140	4	47 39 256		A	1	Cable harness gearbox	Ledningsnät växellåda	6
0150								

10. CV, ch. -S7009999
47. With intake air heat plate. Med värmeplatta.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D20 *Engine, gearbox 10), 6-cyl., 1994*

Motor, växellåda 10), 6-cyl., 1994

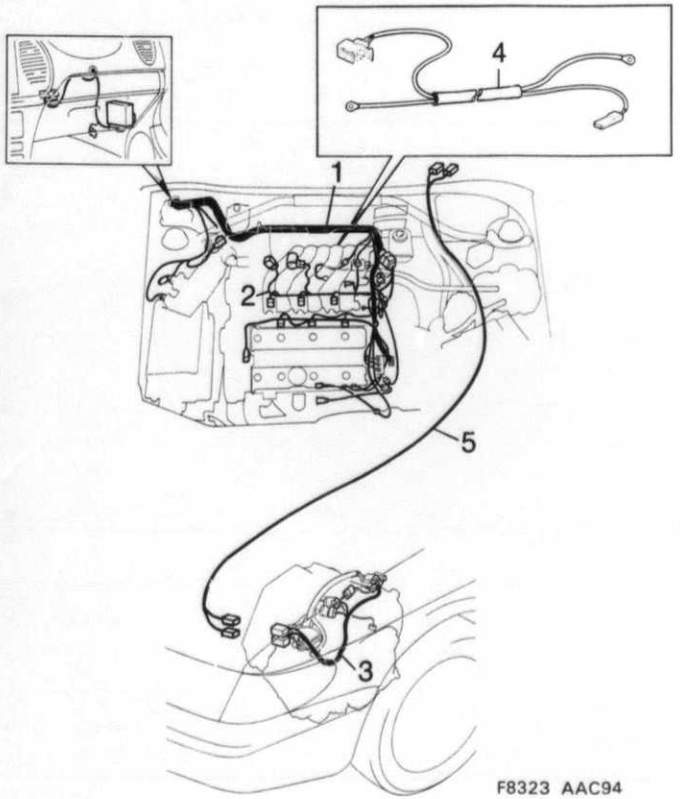

F8323 AAC94

1045	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 11 849			1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	44 11 856	A		1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0080	2	45 03 900			1	Cable harness injection valves	Ledningsnät insprutningsventiler	3
0090								
0100								
0110	3	44 10 536	A		1	Cable harness gearbox	Ledningsnät växellåda	5
0120								
0130								
0140	4	44 88 706			1	Cable harness starter motor-alternator	Ledningsnät startmotor-generator	3
0150								
0160								
0170	5	47 39 256	A		1	Cable harness gearbox	Ledningsnät växellåda	6
0180								

10. CV, ch. -S7009999

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D22

Instrument panel 10), 1994

Instrumentpanel 10), 1994

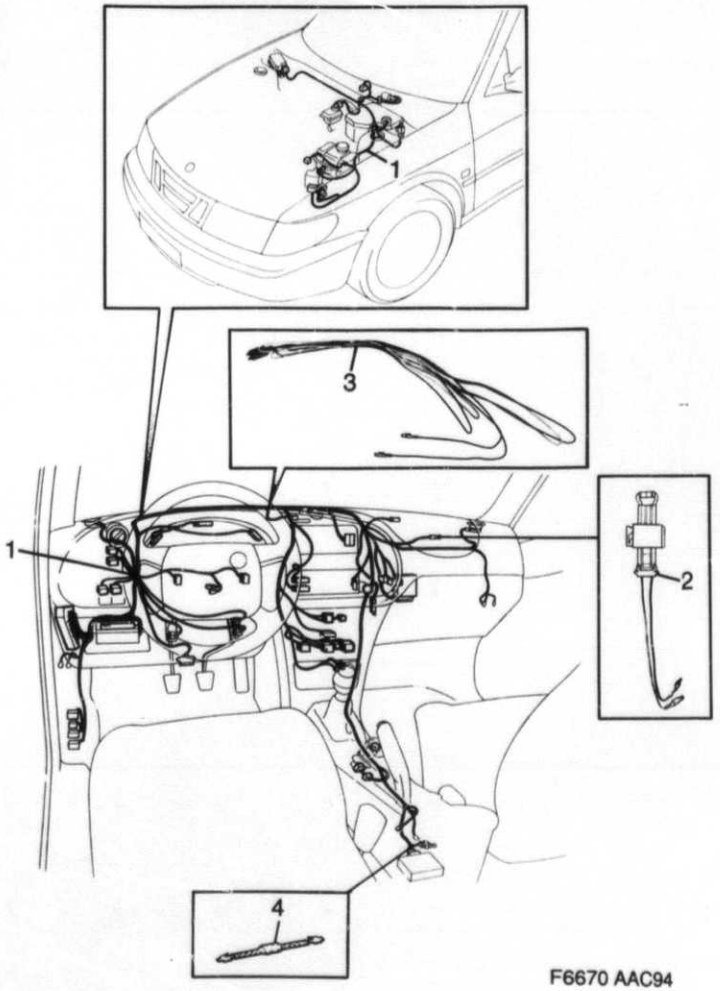

F6670 AAC94

1046	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 88 862		38)	1	Cable harness	Ledningsnät	5
0020	1	44 88 854		38), A	1	Cable harness	Ledningsnät	5
0030								
0040	1	44 89 175		38), RHD	1	Cable harness	Ledningsnät	5
0050	1	44 89 167		38), A, RHD	1	Cable harness	Ledningsnät	5
0060								
0070	1	44 88 896		44), 4-CYL., I	1	Cable harness	Ledningsnät	5
0080	1	44 88 870		44), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0090								
0100	1	44 89 894		44), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0110	1	44 89 878		44), 4-CYL., I, A,RHD	1	Cable harness	Ledningsnät	5
0120								
0130	1	44 88 904		44,46), 4-CYL., I	1	Cable harness	Ledningsnät	5
0140	1	44 88 888		44,46), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0150								
0160	1	44 89 902		44,46), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0170	1	44 89 886		44,46), 4-CYL., I, A,RHD	1	Cable harness	Ledningsnät	5
0180								
0190	1	44 88 912		TURBO	1	Cable harness	Ledningsnät	5
0200	1	44 88 920		46), TURBO	1	Cable harness	Ledningsnät	5
0210								
0220	1	44 89 910		TURBO, RHD	1	Cable harness	Ledningsnät	5
0230	1	44 89 928		46), TURBO, RHD	1	Cable harness	Ledningsnät	5
0240								
0250	1	44 88 953		6-CYL.	1	Cable harness	Ledningsnät	5
0260	1	44 88 979		6-CYL., A	1	Cable harness	Ledningsnät	5
0270								
0280	1	44 89 951		6-CYL., RHD	1	Cable harness	Ledningsnät	5
0290	1	44 89 977		6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0300								
0310	1	44 88 961		46), 6-CYL.	1	Cable harness	Ledningsnät	5
0320	1	44 88 987		46), 6-CYL., A	1	Cable harness	Ledningsnät	5
0330								
0340	1	44 89 969		46), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0350	1	44 89 985		46), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0360	2	44 10 197		AIRBAG 1	1	.Cable harness	.Ledningsnät	5
0370	2	44 12 185		AIRBAG 1, RHD	1	.Cable harness	.Ledningsnät	5
0380	3	44 10 189		AIRBAG 2	1	.Cable harness	.Ledningsnät	5
0390	3	44 12 177		AIRBAG 2, RHD	1	.Cable harness	.Ledningsnät	5
0400								
0410	4	43 54 031		AIRBAG	1	Resistor	Motstånd	6

10. CV, ch. –S7009999
38. Without tachometer. Utan varvräknare.
44. With tachometer. Med varvräknare.
46. For cars with ACC. För bilar med ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-D24

Rear
10), 1994

Bakre
10), 1994

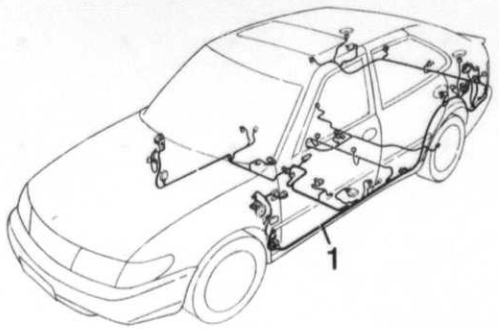

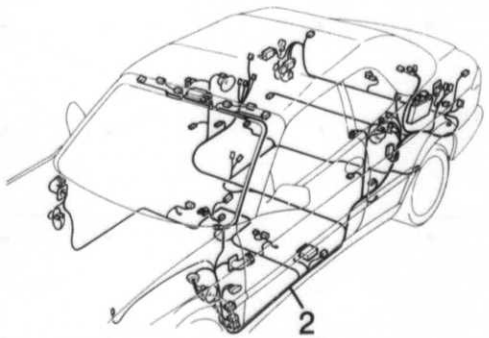

F6027 AAC94

1048

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 88 995		5D, LHD	1	Cable harness	Ledningsnät	5
0020								
0030	1	44 89 001		5D, RHD	1	Cable harness	Ledningsnät	5
0040								
0050	1	45 17 603		3D, LHD	1	Cable harness	Ledningsnät	5
0060								
0070	1	45 17 611		3D, RHD	1	Cable harness	Ledningsnät	5
0080								
0090	2	42 24 374		CV, LHD	1	Cable harness	Ledningsnät	5
0100								
0110	2	44 64 780		CV, RHD	1	Cable harness	Ledningsnät	5

10. CV, ch. -S7009999

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E02 Doors 10), 1994

Dörrar 10), 1994

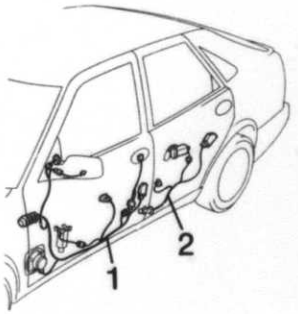

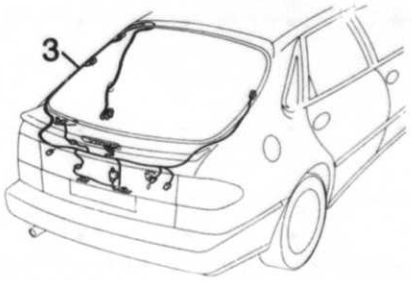

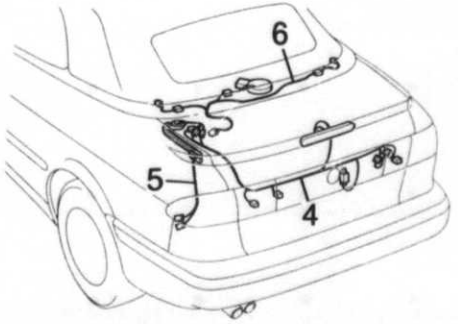

F6028 AAC94

1049	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	44 11 443		66), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0040	1	44 11 427		74), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0070	1	44 11 468		66), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0100	1	44 11 393		74), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0130	2	*44 11 401*		NLS – USE 45 36371	2	Cable harness rear door	Ledningsnät bakdörr	5
0160	3	*42 20 885*		NLS – USE 4582862	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0190	4	45 36 710		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0220	5	45 36 702		CV	1	Cable harness connection	Ledningsnät skarv	6
0250	6	44 07 425		CV	1	Cable harness tonneau cover	Ledningsnät suflettavtäckning	6

10. CV, ch. -S7009999
66. Drivers side. Förarsida.
74. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E04

Roof
1994

Tak
1994

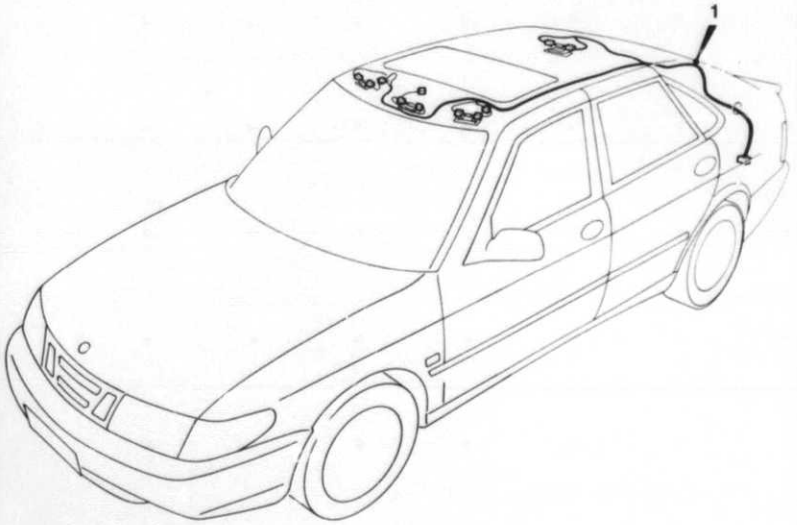

F4964 AAC94


1051 Pos	Part No/Art nr	K S	Note: Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	44 08 985			1	Cable harness	Ledningsnät	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

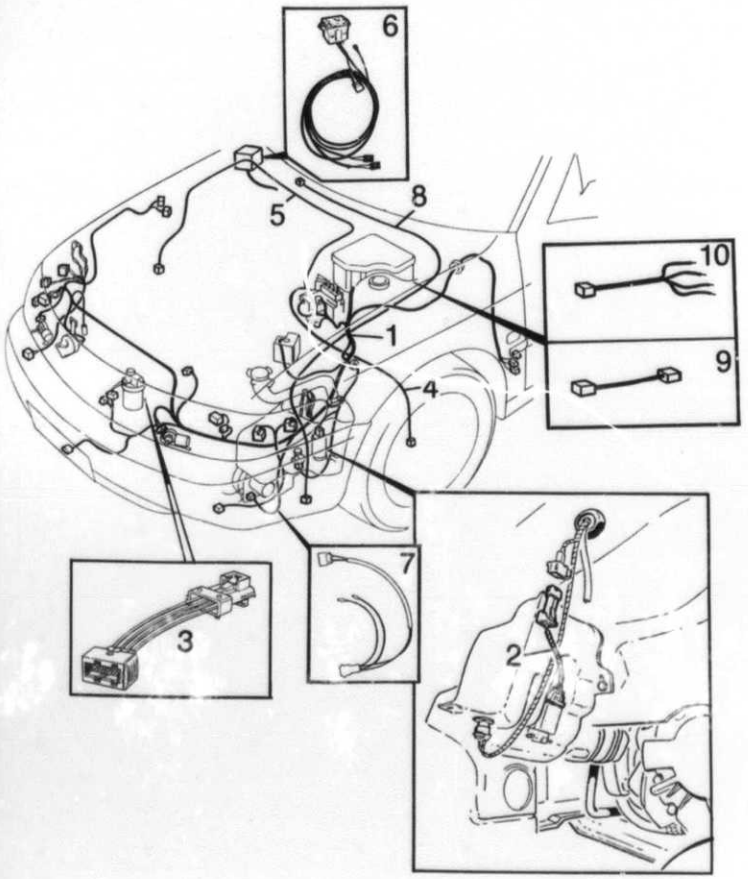

F8519 AAC94

Wiring and fuses

2-E06

Front

11), 1995

Ledningar och säkringar

Främre

11), 1995

1055	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 81 120		69)	1	Cable harness	Ledningsnät	5
0020								
0030	1	45 81 112		47,69)	1	Cable harness	Ledningsnät	5
0040								
0050	1	45 85 576		70), I	1	Cable harness	Ledningsnät	5
0060								
0070	1	45 85 568		70), TURBO	1	Cable harness	Ledningsnät	5
0080								
0090	1	45 85 584		70), JP	1	Cable harness	Ledningsnät	5
0100								
0110	2	46 74 248		160,199)	1	Cable harness	Ledningsnät	6
0120						washer pump	spolarpump	
0130								
0140	2	46 74 222		159,199)	1	Cable harness	Ledningsnät	6
0150						washer pump	spolarpump	
0160								
0170	3	47 37 417		128), A, PA, ME	1	Cable harness	Ledningsnät	
0180						cooling fan	kylfläkt	
0190								
0200	4	46 63 480		LH, ABS	1	Cable harness	Ledningsnät	6
0210								
0220	5	46 63 498		RH, ABS	1	Cable harness	Ledningsnät	6
0230								
0240	6	47 39 702		147)	1	Cable harness	Ledningsnät	6
0250						vacuum pump	vakuumpump	
0260	7	47 39 710		147)	1	Cable harness	Ledningsnät	6
0270						vacuum pump	vakuumpump	
0280	8	47 39 678		147)	1	Cable harness	Ledningsnät	6
0290						vacuum pump	vakuumpump	
0300	9	47 39 694		147)	1	Cable harness	Ledningsnät	6
0310						relay	relä	
0320						fog light	dimljus	
0330	10	47 39 686		147)		Cable harness	Ledningsnät	6
0340						connection	skarv	
0350						vacuum pump	vakuumpump	


11. CV, ch. S7010000-
47. With intake air heat plate. Med värmeplatta.
69. Ch -S2022156, -S7016567.
70. Ch S2022157-, S7016568-.
128. Ch S2042523-, S7024132-.
147. Also applies to modified cars Gäller också för modifierade bilar
159. With rear window wiper. Med bakrutetorkare.
160. Without rear window wiper. Utan bakrutetorkare.
199. Ch S2039223-, S7021969-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

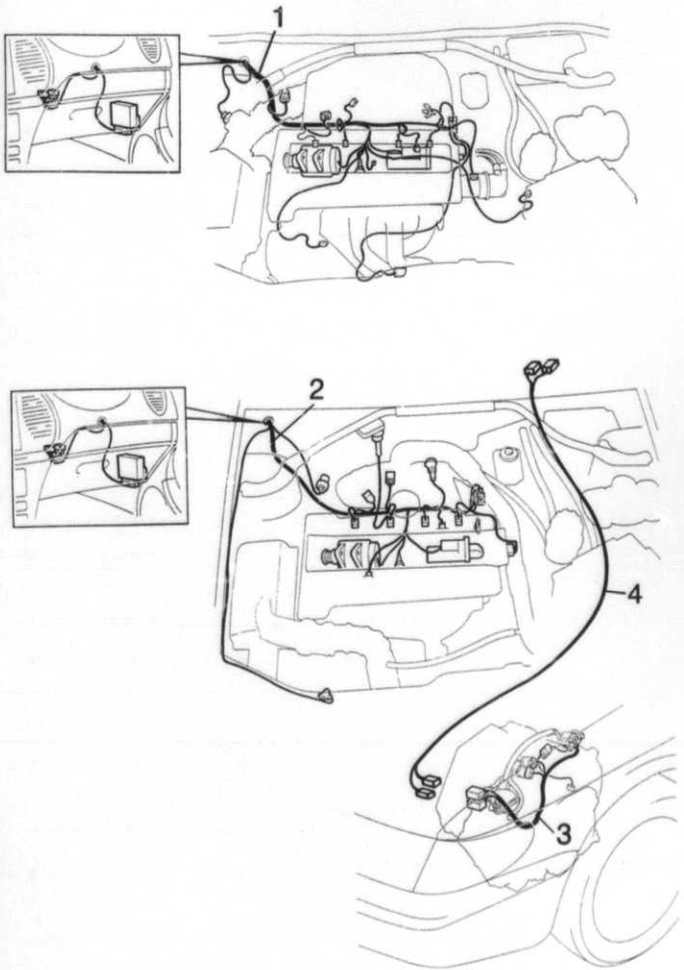

F8324 AAC94

Wiring and fuses

2-E08 *Engine, gearbox 11), 4-cyl., 1995*

Ledningar och säkringar

Motor, växellåda 11), 4-cyl., 1995

1057	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 82 912		I	1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	45 82 920		I, A	1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0060	2	45 82 946		TURBO	1	Cable harness engine	Ledningsnät motor	3
0070								
0080	2	45 36 132		TURBO, A	1	Cable harness engine	Ledningsnät motor	3
0090								
0100	2	45 81 328		47), TURBO	1	Cable harness engine	Ledningsnät motor	3
0110								
0120	2	45 81 336		47), TURBO, A	1	Cable harness engine	Ledningsnät motor	3
0130								
0140								
0150	3	45 83 969		A	1	Cable harness gearbox	Ledningsnät växellåda	5
0160								
0170								
0180	4	47 39 256		A	1	Cable harness gearbox	Ledningsnät växellåda	6
0190								

11. CV, ch. S7010000–
47. With intake air heat plate. Med värmeplatta.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E10

Engine, gearbox 11), 6-cyl., 1995

Motor, växellåda 11), 6-cyl., 1995

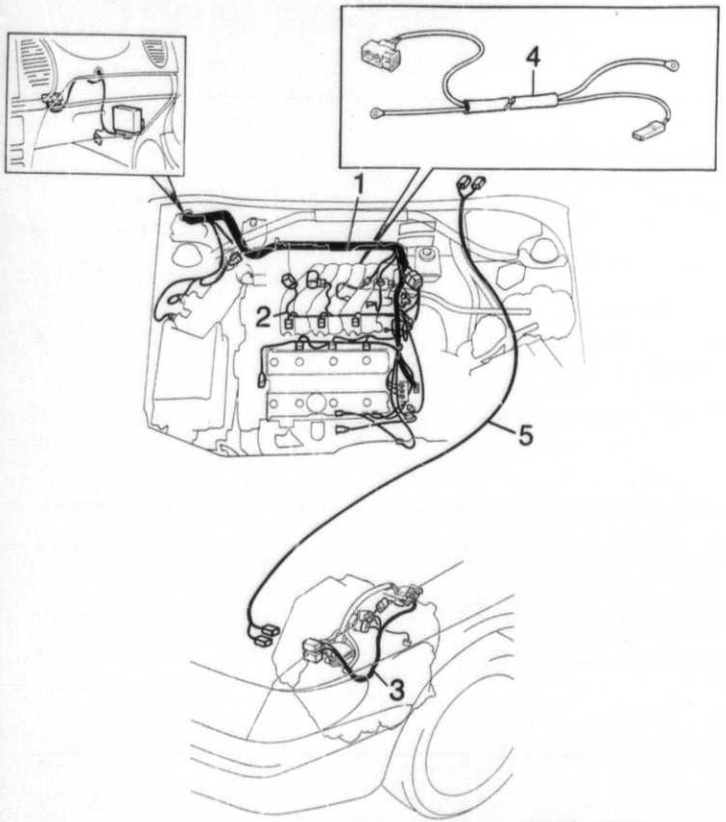

F8325 AAC94

1059	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 82 961			1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	45 82 979	A		1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0080	2	45 03 900			1	Cable harness injection valves	Ledningsnät insprutningsventiler	3
0090								
0100								
0110	3	45 83 969	A		1	Cable harness gearbox	Ledningsnät växellåda	5
0120								
0130								
0140	4	45 83 944			1	Cable harness starter motor-alternator	Ledningsnät startmotor-generator	3
0150								
0160								
0170	5	47 39 256	A		1	Cable harness gearbox	Ledningsnät växellåda	6
0180								


11. CV, ch. S7010000-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

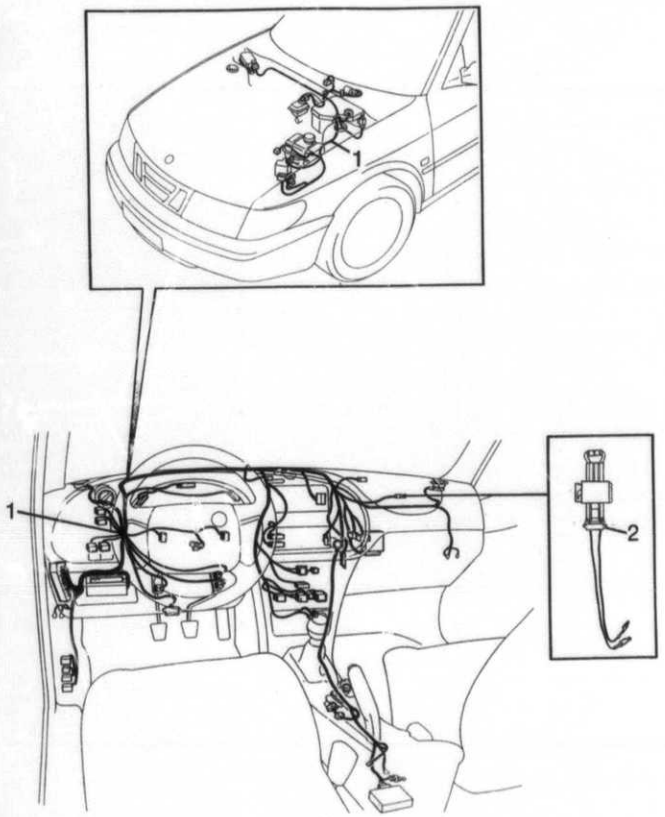

F7875 AAC94

2-E12 *Instrument panel 11), 1995*

Instrumentpanel 11), 1995

1061	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 81 807*		38,69) NLS – USE 4665386	1	Cable harness	Ledningsnät	5
0020	1	46 65 386		38,70)	1	Cable harness	Ledningsnät	5
0030	1	*45 81 799*		38,69), A NLS – USE 4665378	1	Cable harness	Ledningsnät	5
0040	1	46 65 378		38,70), A	1	Cable harness	Ledningsnät	5
0060	1	*45 82 359*		38,69), RHD NLS – USE 4585246	1	Cable harness	Ledningsnät	5
0070	1	45 85 246		38,70), RHD	1	Cable harness	Ledningsnät	5
0080	1	*45 82 342*		38,69), A, RHD NLS – USE 4585238	1	Cable harness	Ledningsnät	5
0090	1	45 85 238		38,70), A, RHD	1	Cable harness	Ledningsnät	5
0110	1	*45 81 831*		44,69), 4-CYL., I NLS – USE 4665410	1	Cable harness	Ledningsnät	5
0120	1	46 65 410		44,70), 4-CYL., I	1	Cable harness	Ledningsnät	5
0130	1	*45 81 815*		44,69), 4-CYL., I, A NLS - USE 4665394	1	Cable harness	Ledningsnät	5
0140	1	46 65 394		44,70), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0160	1	*45 82 383*		44,69), 4-CYL., I, RHD NLS – USE 4585279	1	Cable harness	Ledningsnät	5
0170	1	45 85 279		44,70), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0180	1	*45 82 367*		44,69), 4-CYL., I, A,RHD NLS – USE 4585253	1	Cable harness	Ledningsnät	5
0190	1	45 85 253		44,70), 4-CYL., I, A,RHD	1	Cable harness	Ledningsnät	5
0210	1	*45 81 849*		44,46,69), 4-CYL., I NLS - USE 4665428	1	Cable harness	Ledningsnät	5
0220	1	46 65 428		44,46,70), 4-CYL., I	1	Cable harness	Ledningsnät	5
0230	1	*45 81 823*		44,46,69), 4-CYL., I, A NLS – USE 4665402	1	Cable harness	Ledningsnät	5
0240	1	46 65 402		44,46,70), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0260	1	*45 82 391*		44,46,69), 4-CYL., I,RHD NLS – USE 4585287	1	Cable harness	Ledningsnät	5
0270	1	45 85 287		44,46,70), 4-CYL., I,RHD	1	Cable harness	Ledningsnät	5
0280	1	*45 82 375*		44,46,69), 4-CYL., I, A, RHD NLS – USE 4585261	1	Cable harness	Ledningsnät	5
0300	1	45 85 261		44,46,70), 4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0330	1	*45 81 856*		69), TURBO NLS – USE 4665436	1	Cable harness	Ledningsnät	5
0340	1	46 65 436		70), TURBO	1	Cable harness	Ledningsnät	5
0350	1	*45 81 864*		46,69), TURBO NLS – USE 4665444	1	Cable harness	Ledningsnät	5
0360	1	46 65 444		46,70), TURBO	1	Cable harness	Ledningsnät	5
0380	1	45 82 508		69), TURBO, RHD	1	Cable harness	Ledningsnät	5
0390	1	45 85 295		70), TURBO, RHD	1	Cable harness	Ledningsnät	5
0400	1	*45 82 516*		46,69), TURBO, RHD NLS - USE 4585303	1	Cable harness	Ledningsnät	5
0410	1	45 85 303		46,70), TURBO, RHD	1	Cable harness	Ledningsnät	5
0430	1	*45 81 930*		69), TURBO, A NLS – USE 4665519	1	Cable harness	Ledningsnät	5

11. CV, ch. S7010000–
38. Without tachometer. Utan varvräknare.
44. With tachometer. Med varvräknare.
46. For cars with ACC. För bilar med ACC.
69. Ch –S2022156, –S7016567.
70. Ch S2022157–, S7016568–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E14 *Instrument panel 11), 1995*

Instrumentpanel 11), 1995

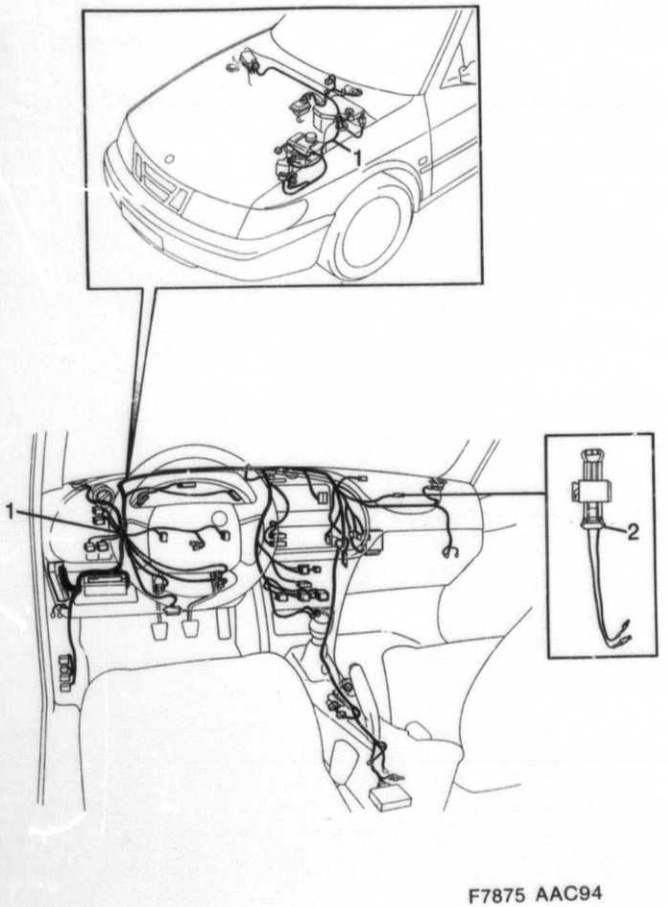

F7875 AAC94

1061	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	1	46 65 519		70), TURBO, A	1	Cable harness	Ledningsnät	5
0450	1	45 81 948		46,69), TURBO, A	1	Cable harness	Ledningsnät	5
0460	1	46 65 527		46,70), TURBO, A	1	Cable harness	Ledningsnät	5
0470								
0480	1	*45 82 581*		69), TURBO, A, RHD NLS - USE 4585378	1	Cable harness	Ledningsnät	5
0490	1	45 85 378		70), TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0500	1	*45 82 599*		46,69), TURBO, A, RHD NLS – USE 4585386	1	Cable harness	Ledningsnät	5
0510	1	45 85 386		46,70), TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0530	1	*45 81 872*		69), TURBO, ACS NLS – USE 4665451	1	Cable harness	Ledningsnät	5
0540	1	46 65 451		70), TURBO, ACS	1	Cable harness	Ledningsnät	5
0550	1	*45 81 880*		46,69), TURBO, ACS NLS - USE 4665469	1	Cable harness	Ledningsnät	5
0560	1	46 65 469		46,70), TURBO, ACS	1	Cable harness	Ledningsnät	5
0580	1	*45 82 524*		69), TURBO, ACS, RHD NLS - USE 4585311	1	Cable harness	Ledningsnät	5
0590	1	45 85 311		70), TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0600	1	*45 82 532*		46,69), TURBO, ACS, RHD NLS – USE 4585329	1	Cable harness	Ledningsnät	5
0610	1	45 85 329		46,70), TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0630	1	*45 81 898*		69), 6-CYL. NLS – USE 4665477	1	Cable harness	Ledningsnät	5
0640	1	46 65 477		70), 6-CYL.	1	Cable harness	Ledningsnät	5
0650	1	*45 81 914*		69), 6-CYL., A NLS – USE 4665493	1	Cable harness	Ledningsnät	5
0660	1	46 65 493		70), 6-CYL., A	1	Cable harness	Ledningsnät	5
0680	1	*45 82 540*		69), 6-CYL, RHD NLS – USE 4585337	1	Cable harness	Ledningsnät	5
0690	1	45 85 337		70), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0700	1	45 82 565		69), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0710	1	45 85 352		70), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0730	1	45 81 906		46,69), 6-CYL.	1	Cable harness	Ledningsnät	5
0740	1	46 65 485		46,70), 6-CYL.	1	Cable harness	Ledningsnät	5
0750	1	45 81 922		46,69), 6-CYL., A	1	Cable harness	Ledningsnät	5
0760	1	46 65 501		46,70), 6-CYL., A	1	Cable harness	Ledningsnät	5
0780	1	*45 82 557*		46,69), 6-CYL., RHD NLS - USE 4585345	1	Cable harness	Ledningsnät	5
0790	1	45 85 345		46,70), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0800	1	*45 82 573*		46,69), 6-CYL., A, RHD NLS – USE 4585360	1	Cable harness	Ledningsnät	5
0810	1	45 85 360		46,70), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0830	2	47 38 076		AIRBAG	1	Cable harness	Ledningsnät	5
0840	2	47 38 084		AIRBAG, RHD	1	Cable harness	Ledningsnät	5

11. CV, ch. S7010000–
46. For cars with ACC. För bilar med ACC.
69. Ch –S2022156, –S7016567.
70. Ch S2022157–, S7016568–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E16

Rear
11), 1995

Bakre
11), 1995

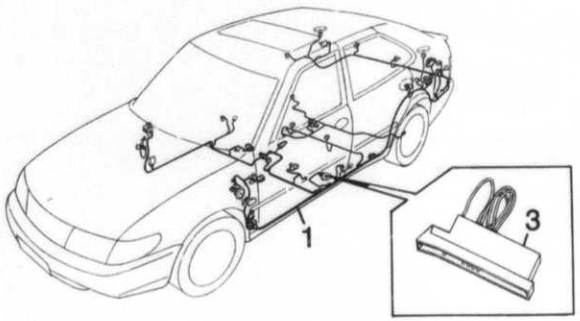

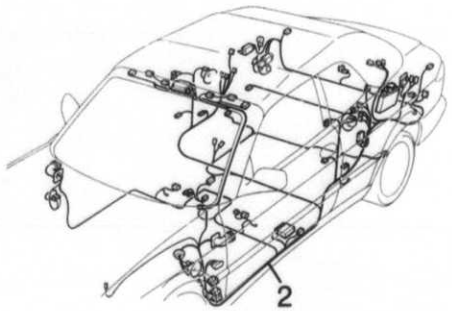

F7201 AAC94

1063	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 81 278*		119), 5D, LHD NLS – USE 4585717	1	Cable harness	Ledningsnät	5
0020	1	45 85 717		120), 5D, LHD	1	Cable harness	Ledningsnät	5
0040	1	*45 81 286*		119), 5D, RHD NLS – USE 4585725	1	Cable harness	Ledningsnät	5
0050	1	45 85 725		120), 5D, RHD	1	Cable harness	Ledningsnät	5
0070	1	*45 81 294*		119), 3D, LHD NLS – USE 4585733	1	Cable harness	Ledningsnät	5
0080	1	45 85 733		120), 3D, LHD	1	Cable harness	Ledningsnät	5
0100	1	*45 81 302*		119), 3D, RHD NLS – USE 4585741	1	Cable harness	Ledningsnät	5
0110	1	45 85 741		120), 3D, RHD	1	Cable harness	Ledningsnät	5
0130	2	45 86 590		CV, LHD	1	Cable harness	Ledningsnät	5
0150	2	45 86 608		CV, RHD	1	Cable harness	Ledningsnät	5
0170	3	46 65 725		59,61)	1	Cable harness	Ledningsnät	5

11. CV, ch. S7010000–
59. Ch S2002803–.
61. Without theft alarm. Utan tjuvlarm.
119. Ch –S2022156.
120. Ch S2022157–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E18 Doors 11), 1995

Dörrar 11), 1995

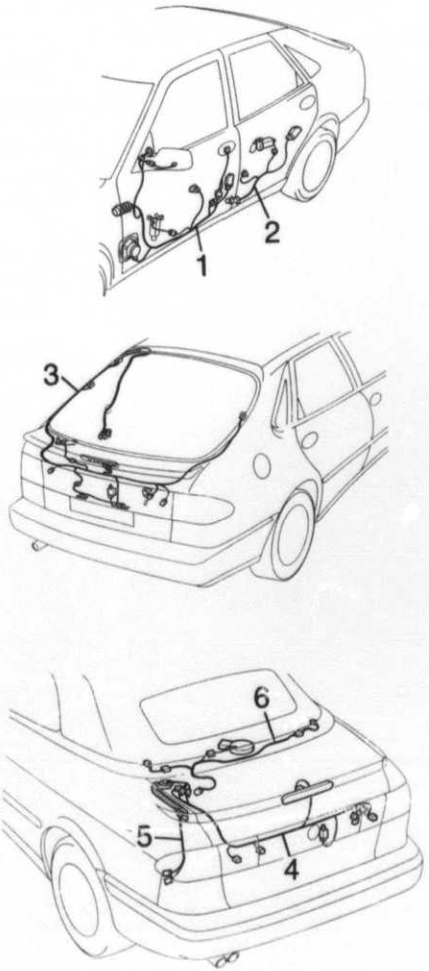

F6676 AAC94

1065	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 36 199		66), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030								
0040	1	45 36 249		74), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0050								
0060								
0070	1	45 36 298		66), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0080								
0090								
0100	1	45 36 348		74), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0110								
0120								
0130	2	45 36 371			2	Cable harness rear door	Ledningsnät bakdörr	5
0140								
0150								
0160	3	45 82 862			1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0170								
0180								
0190	4	46 63 472		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0200								
0210								
0220	5	46 63 464		CV	1	Cable harness connection	Ledningsnät skarv	6
0230								
0240								
0250	6	44 07 425		CV	1	Cable harness tonneau cover	Ledningsnät suffettavtäckning	6
0260								

11. CV, ch. S7010000–
66. Drivers side. Förarsida.
74. Passenger side. Passagerarsida.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-E20 Roof 1995

Tak 1995

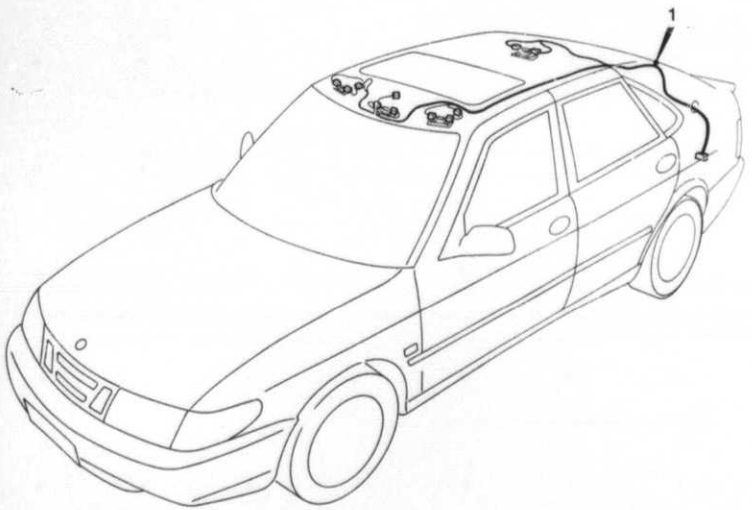

F6677 AAC94


1067	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 82 847			1	Cable harness	Ledningsnät	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

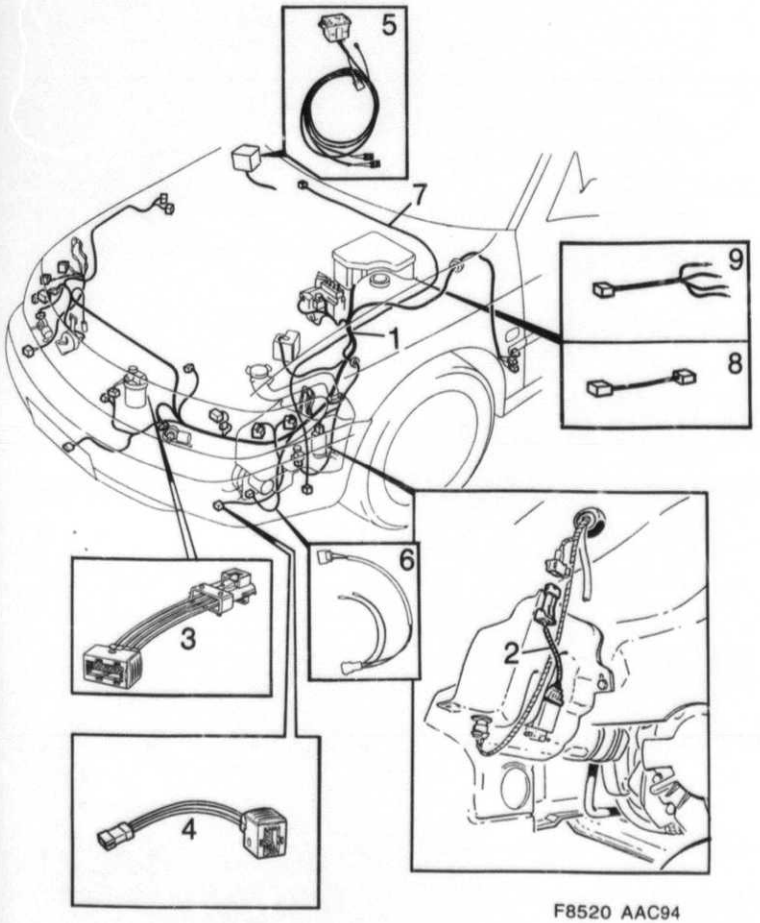

F8520 AAC94

1069	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 84 769			1	Cable harness	Ledningsnät	8
0020								
0030	1	45 84 751		47), TURBO	1	Cable harness	Ledningsnät	5
0040								
0050	1	45 84 777		6-CYL., US, CA	1	Cable harness	Ledningsnät	8
0060								
0070	2	46 74 248		160)	1	Cable harness washer pump	Ledningsnät spolarpump	6
0080								
0090								
0100	2	46 74 222		159,200)	1	Cable harness washer pump	Ledningsnät spolarpump	6
0110								
0120								
0130	3	47 37 417		128), A, PA, ME	1	Cable harness cooling fan	Ledningsnät kylfläkt	
0140								
0150								
0160	4	48 06 428		133)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
0170								
0180								
0190	5	47 39 702		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
0200								
0210	6	47 39 710		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
0220								
0230	7	47 39 678		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
0240								
0250	8	47 39 694		147)	1	Cable harness relay fog light	Ledningsnät relä dimljus	6
0260								
0270								
0280	9	47 39 686		147)	1	Cable harness connection vacuum pump	Ledningsnät skarv vakuumpump	6
0290								
0300								


47. With intake air heat plate. Med värmeplatta.
128. Ch S2042523-, S7024132-.
133. Ch T2004338-.
147. Also applies to modified cars Gäller också för modifierade bilar
159. With rear window wiper. Med bakrutetorkare.
160. Without rear window wiper. Utan bakrutetorkare.
200. Ch -T2012889.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

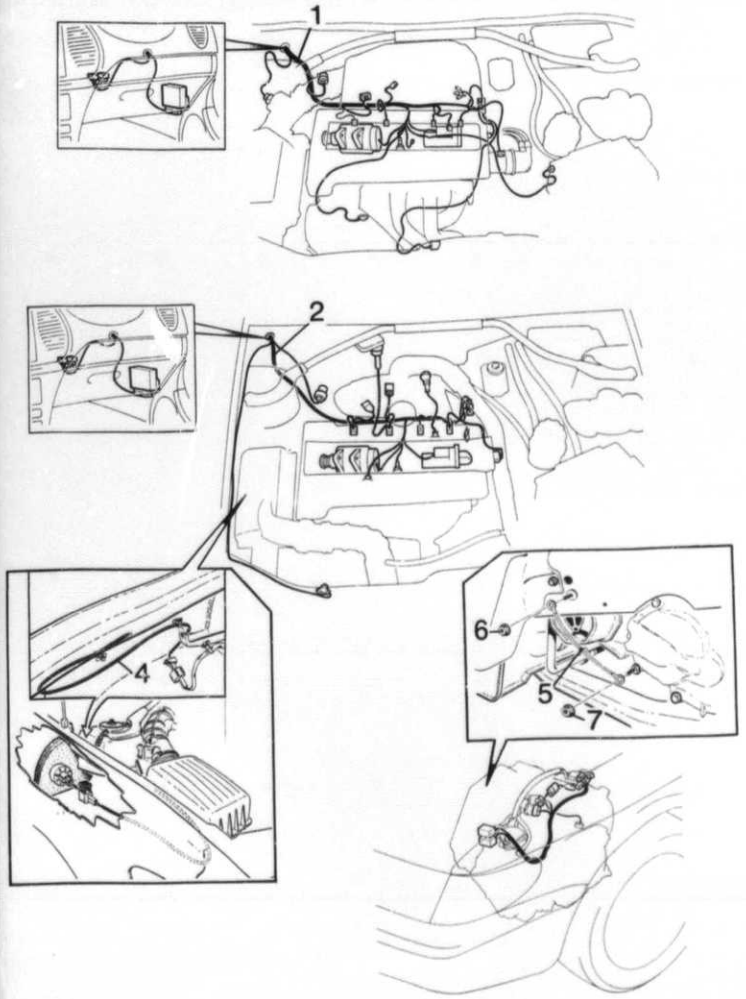

F7876 AAC94

Wiring and fuses

2-E24

Engine, gearbox
4-cylinder, 1996

Ledningar och säkringar

Motor, växellåda
4-cylindrig, 1996

1071	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 91 523		I	1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	46 91 531		I, A	1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0060	1	45 84 876		I, US, CA	1	Cable harness engine	Ledningsnät motor	8
0070								
0080	1	45 84 884		I, A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0090								
0100								
0110	2	46 91 416		47), TURBO	1	Cable harness engine	Ledningsnät motor	3
0120								
0130	2	46 91 424		47), TURBO, A	1	Cable harness engine	Ledningsnät motor	3
0140								
0150								
0160	2	46 91 473		131), TURBO, US, CA	1	Cable harness engine	Ledningsnät motor	8
0170								
0180	2	46 91 432		132), TURBO, US, CA	1	Cable harness engine	Ledningsnät motor	8
0190								
0200	2	46 91 481		131), TURBO, A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0210								
0220	2	46 91 440		132), TURBO, A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0230								
0240								
0250	4	46 69 537		TURBO, US, CA	1	Cable harness shut-off valve	Ledningsnät avstängningsventil	8
0260								
0270								
0280	5	46 65 998			1	Ground cable	Jordkabel	
0290	6	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0300	7	79 77 929			1	Nut	Mutter	5


47. With intake air heat plate. Med värmeplatta.
131. Ch -T2010420, -T7002054.
132. Ch T2010421-, T7002054-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I08

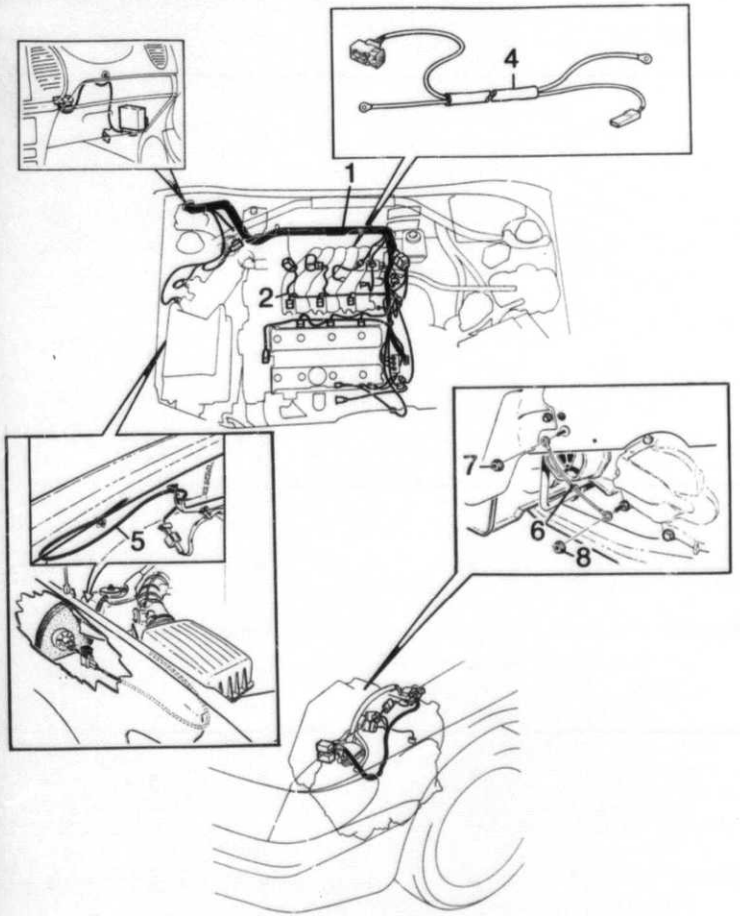

F7877 AAC94

Wiring and fuses

2-F02

Engine, gearbox 6-cylinder, 1996

Ledningar och säkringar

Motor, växellåda 6-cylindrig, 1996

1073


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	46 91 549			1	Cable harness engine	Ledningsnät motor	3
1	46 91 556		A	1	Cable harness engine	Ledningsnät motor	3
1	45 84 256		US, CA	1	Cable harness engine	Ledningsnät motor	8
1	45 84 264		A, US, CA	1	Cable harness engine	Ledningsnät motor	8
2	45 03 900			1	Cable harness injection valves	Ledningsnät insprutningsventiler	3
4	45 84 363			1	Cable harness starter motor-alternator	Ledningsnät startmotor-generator	3
5	46 69 537		US, CA	1	Cable harness shut-off valve	Ledningsnät avstängningsventil	8
6	46 65 998			1	Ground cable	Jordkabel	
7	79 77 952			1	Hexagon nut	Sexkantsmutter	5
8	79 77 929			1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

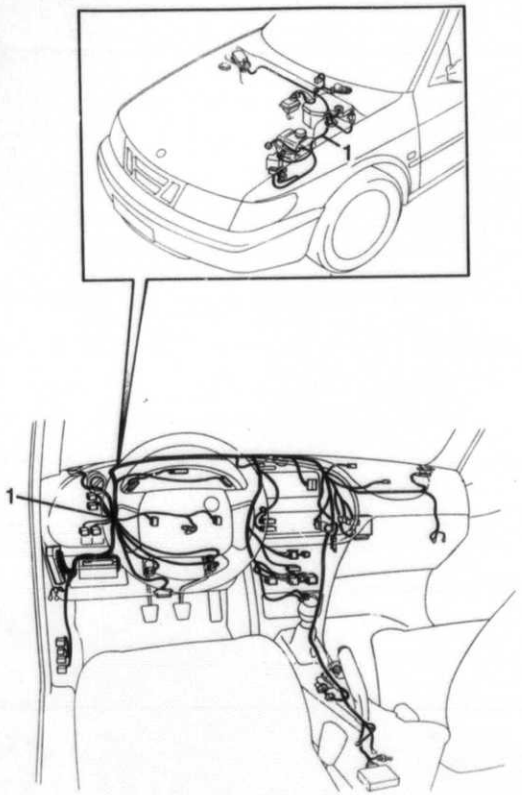

F7878 AAC94

Wiring and fuses

2-F04 *Instrument panel* 1996

Ledningar och säkringar

Instrumentpanel 1996

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 65 535		118)	1	Cable harness	Ledningsnät	5
0020	1	46 65 337		118), A	1	Cable harness	Ledningsnät	5
0030								
0040	1	47 37 839		118), RHD	1	Cable harness	Ledningsnät	5
0050	1	47 37 821		118), A, RHD	1	Cable harness	Ledningsnät	5
0060								
0070	1	46 69 933		4-CYL., I	1	Cable harness	Ledningsnät	5
0080	1	46 65 584		4-CYL., I, A	1	Cable harness	Ledningsnät	5
0090								
0100	1	45 84 934		4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0110	1	47 37 847		4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0120								
0130	1	46 91 465		46), 4-CYL., I	1	Cable harness	Ledningsnät	5
0140	1	46 65 592		46), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0150								
0160	1	45 84 942		46), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0170	1	47 37 854		46), 4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0180								
0190	1	46 91 564		TURBO	1	Cable harness	Ledningsnät	5
0200	1	46 91 580		46), TURBO	1	Cable harness	Ledningsnät	5
0210								
0220	1	47 37 862		TURBO, RHD	1	Cable harness	Ledningsnät	5
0230	1	45 84 967		46), TURBO, RHD	1	Cable harness	Ledningsnät	5
0240								
0250	1	46 69 925		TURBO, A	1	Cable harness	Ledningsnät	5
0260	1	46 69 917		46), TURBO, A	1	Cable harness	Ledningsnät	5
0270								
0280	1	45 85 097		TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0290	1	46 64 843		46), TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0300								
0310	1	46 91 598		TURBO, ACS	1	Cable harness	Ledningsnät	5
0320	1	46 91 770		46), TURBO, ACS	1	Cable harness	Ledningsnät	5
0330								
0340	1	45 84 975		TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0350	1	47 37 870		46), TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0360								
0370	1	46 92 083		6-CYL.	1	Cable harness	Ledningsnät	5
0380	1	46 69 891		6-CYL., A	1	Cable harness	Ledningsnät	5
0390								
0400	1	47 37 888		6-CYL., RHD	1	Cable harness	Ledningsnät	5
0410	1	45 85 014		6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0420								
0430	1	46 92 091		46), 6-CYL.	1	Cable harness	Ledningsnät	5
0440	1	46 69 909		46), 6-CYL., A	1	Cable harness	Ledningsnät	5
0450								
0460	1	45 85 006		46), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0470	1	45 85 089		46), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5

46. For cars with ACC. För bilar med ACC.
118. Without digital odometer. Utan digital vägmätare.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-F06 Rear 1996 / Bakre 1996

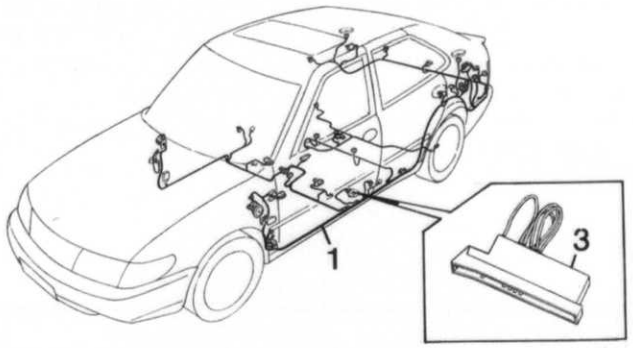

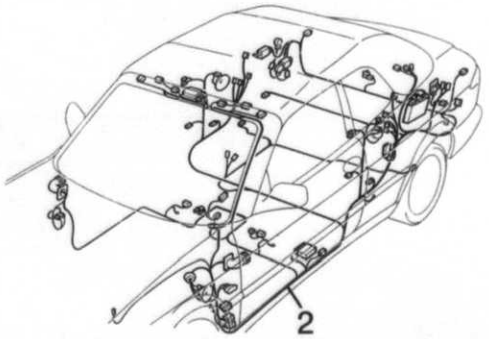

F7650 AAC94

1077 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	45 84 785		5D, LHD	1	Cable harness	Ledningsnät	5
0020 1	45 84 827		123), 5D, LHD	1	Cable harness	Ledningsnät	5
0030							
0040 1	45 84 793		5D, RHD	1	Cable harness	Ledningsnät	5
0050 1	45 84 843		123), 5D, RHD	1	Cable harness	Ledningsnät	5
0060							
0070 1	45 84 801		3D, LHD	1	Cable harness	Ledningsnät	5
0080 1	45 84 850		123), 3D, LHD	1	Cable harness	Ledningsnät	5
0090							
0100 1	45 84 819		3D, RHD	1	Cable harness	Ledningsnät	5
0110 1	45 84 835		123), 3D, RHD	1	Cable harness	Ledningsnät	5
0120							
0130 2	46 68 000		CV, LHD	1	Cable harness	Ledningsnät	8
0140 2	46 68 026		123), CV, LHD	1	Cable harness	Ledningsnät	5
0150							
0160 2	45 84 488		CV, 6-CYL., US, CA	1	Cable harness	Ledningsnät	8
0170							
0180 2	46 68 018		CV, RHD	1	Cable harness	Ledningsnät	5
0190 2	46 68 034		123), CV, RHD	1	Cable harness	Ledningsnät	5
0200							
0210 3	47 37 615		61)	1	Cable harness	Ledningsnät	5

61. Without theft alarm. Utan tjuvlarm.
123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B03
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-F08 Doors 1996

Dörrar 1996

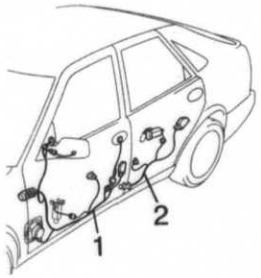

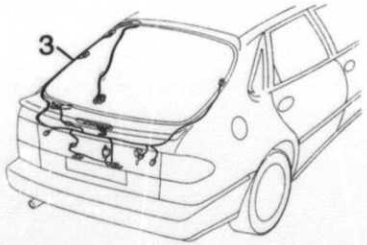

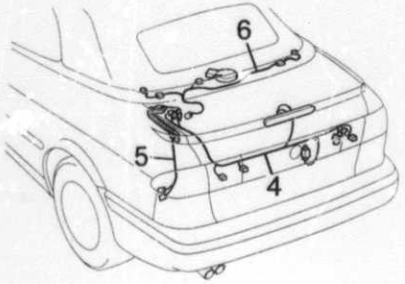

F7651 AAC94

1079	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 84 603		66,129), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030	1	47 38 977		66,130), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0040								
0050								
0060	1	45 84 660		74,129), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0070								
0080	1	47 38 951		74,130), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0090								
0100								
0110	1	45 84 728		66,129), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0120								
0130	1	47 38 993		66,130), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0140								
0150								
0160	1	45 84 694		74,129), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0170								
0180	1	47 38 936		74,130), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0190								
0200								
0210	2	45 84 637			2	Cable harness rear door	Ledningsnät bakdörr	5
0220								
0230								
0240	3	45 82 862		129)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0250								
0260	3	47 38 571		130)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0270								
0280								
0290	4	46 63 472		129), CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0300								
0310	4	47 38 597		130), CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0320								
0330								
0340	5	46 63 464		129), CV	1	Cable harness connection	Ledningsnät skarv	6
0350								
0360	5	47 38 605		130), CV	1	Cable harness connection	Ledningsnät skarv	6
0370								
0380								
0390	6	44 07 425		CV	1	Cable harness tonneau cover	Ledningsnät suflettavtäckning	6
0400								

66. Drivers side. Förarsida.
74. Passenger side. Passagerarsida.
129. Ch -T2002381, -T7000408.
130. Ch T2002382-, T7000409-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-F10

Roof
1996

Tak
1996

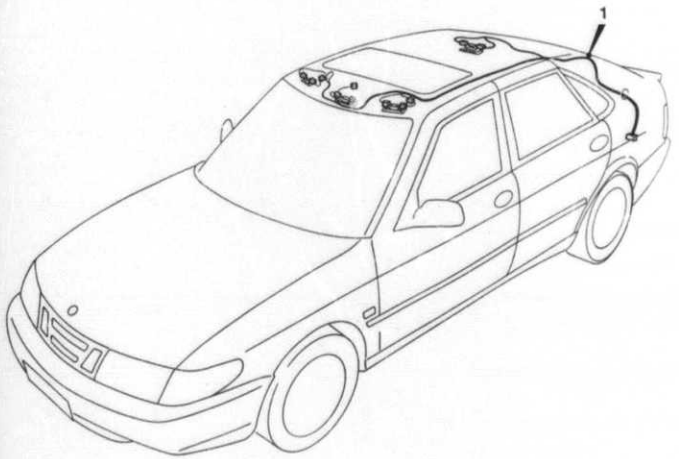

F7652 AAC94


1081 Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010 1	45 82 847			1	Cable harness	Ledningsnät	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

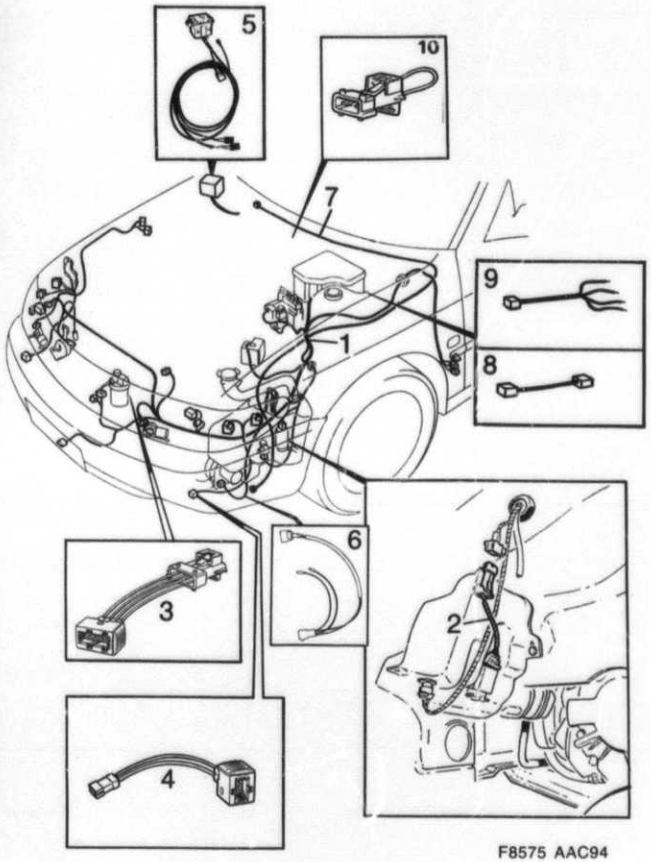

F8575 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	48 12 970			1	Cable harness	Ledningsnät	5
1	48 12 954		47), TURBO	1	Cable harness	Ledningsnät	5
1	48 12 988		6-CYL., US, CA	1	Cable harness	Ledningsnät	8
2	46 74 248		160)	1	Cable harness washer pump	Ledningsnät spolarpump	6
3	47 37 417		A, PA, ME	1	Cable harness cooling fan	Ledningsnät kylfläkt	
4	48 06 428			1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
5	47 39 702		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
6	47 39 710		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
7	47 39 678		147)	1	Cable harness vacuum pump	Ledningsnät vakuumpump	6
8	47 39 694		147)	1	Cable harness relay fog light	Ledningsnät relä dimljus	6
9	47 39 686		147)	1	Cable harness connection vacuum pump	Ledningsnät skarv vakuumpump	6
10	49 41 993		203), B204L, A	1	Cable harness pressure monitor brake	Ledningsnät tryckvakt broms	6


47. With intake air heat plate. Med värmeplatta.
147. Also applies to modified cars Gäller också för modifierade bilar
160. Without rear window wiper. Utan bakrutetorkare.
203. Ch V2021781–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

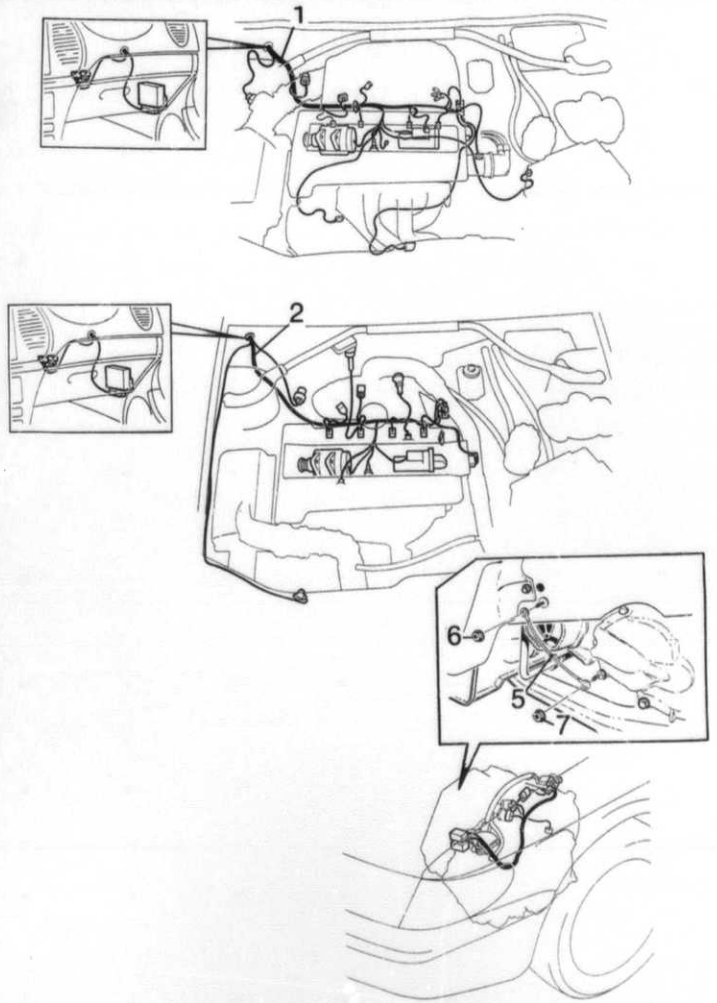

F8327 AAC94

Wiring and fuses

2-F14

Engine, gearbox

4-cyl., 1997

Ledningar och säkringar

Motor, växellåda

4-cyl., 1997

1083	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	48 07 855		I	1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	48 07 863		I, A	1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0060	1	48 07 889		I, US, CA	1	Cable harness engine	Ledningsnät motor	8
0070								
0080	1	48 07 897		I, A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0090								
0100								
0110	2	47 38 704		47,210), TURBO	1	Cable harness engine	Ledningsnät motor	3
0120								
0130	2	47 38 712		47,210), TURBO, A	1	Cable harness engine	Ledningsnät motor	3
0140								
0150								
0160	2	47 38 753		TURBO, US, CA	1	Cable harness engine	Ledningsnät motor	8
0170								
0180	2	47 38 761		TURBO, A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0190								
0200								
0210	5	46 65 998			1	Ground cable	Jordkabel	
0220	6	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0230	7	79 77 929			1	Nut	Mutter	5


47. With intake air heat plate. Med värmeplatta.
210. Engine -V055760.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

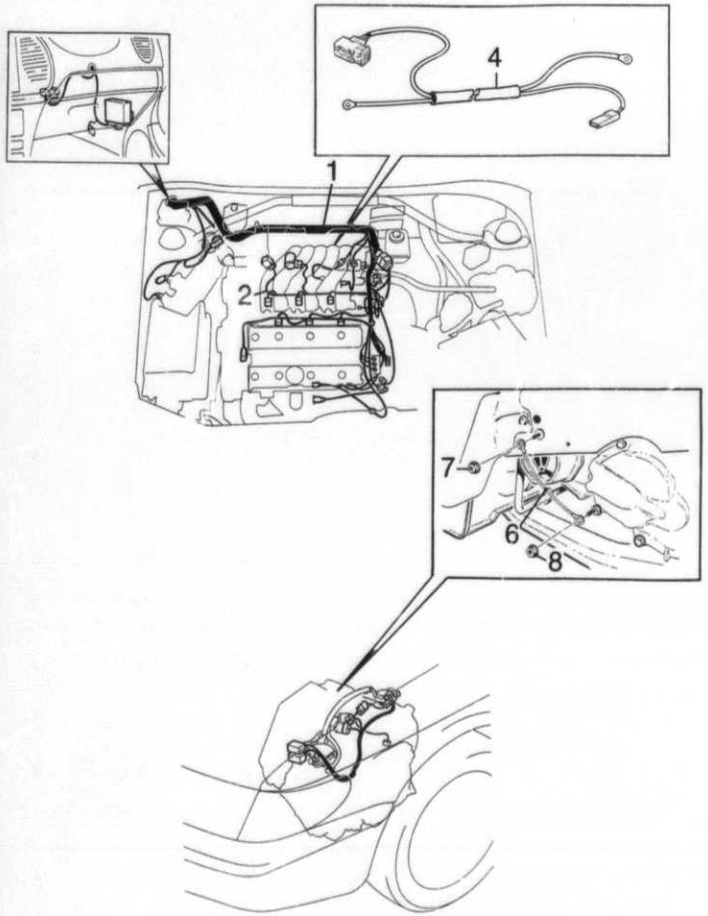

F8328 AAC94

Wiring and fuses

2-F16

Engine, gearbox

6-cyl., 1997

Ledningar och säkringar

Motor, växellåda

6-cyl., 1997


1084	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	48 07 822			1	Cable harness engine	Ledningsnät motor	3
0020								
0030	1	48 07 830		A	1	Cable harness engine	Ledningsnät motor	3
0040								
0050								
0060	1	47 38 803		US, CA	1	Cable harness engine	Ledningsnät motor	8
0070								
0080	1	47 38 811		A, US, CA	1	Cable harness engine	Ledningsnät motor	8
0090								
0100								
0110	2	45 03 900			1	Cable harness injection valves	Ledningsnät insprutningsventiler	3
0120								
0130								
0140	4	45 84 363			1	Cable harness starter motor-alternator	Ledningsnät startmotor-generator	3
0150								
0160								
0170	6	46 65 998			1	Ground cable	Jordkabel	
0180	7	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0190	8	79 77 929			1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

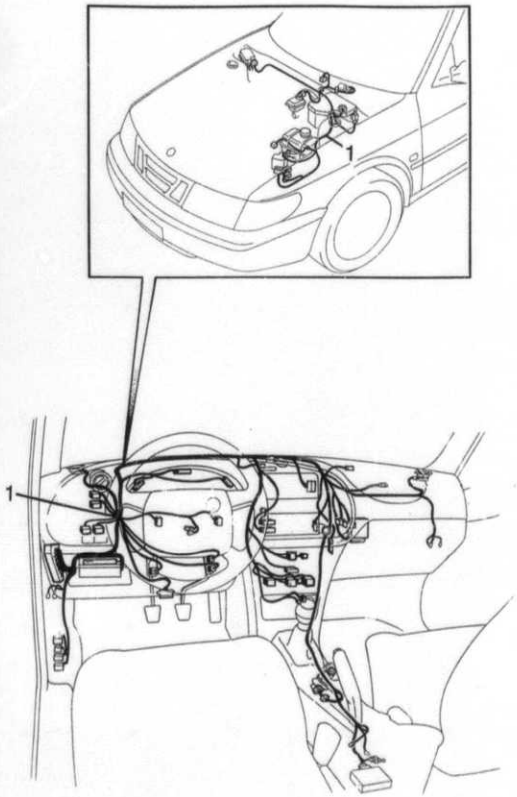

F8329 AAC94

2-F18

Instrument panel 1997

Instrumentpanel 1997

1085	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 36 476		118)	1	Cable harness	Ledningsnät	5
0020	1	47 36 468		118), A	1	Cable harness	Ledningsnät	5
0030								
0040	1	47 36 633		118), RHD	1	Cable harness	Ledningsnät	5
0050	1	47 36 625		118), A, RHD	1	Cable harness	Ledningsnät	5
0060								
0070	1	47 36 542		4-CYL., I	1	Cable harness	Ledningsnät	5
0080	1	47 36 484		4-CYL., I, A	1	Cable harness	Ledningsnät	5
0090								
0100	1	47 36 690		4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0110	1	47 36 641		4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0120								
0130	1	47 36 559		46), 4-CYL., I	1	Cable harness	Ledningsnät	5
0140	1	47 36 492		46), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0150								
0160	1	47 36 708		46), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0170	1	47 36 658		46), 4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0180								
0190	1	47 36 567		TURBO	1	Cable harness	Ledningsnät	5
0200	1	47 36 575		46), TURBO	1	Cable harness	Ledningsnät	5
0210								
0220	1	47 36 716		TURBO, RHD	1	Cable harness	Ledningsnät	5
0230	1	47 36 724		46), TURBO, RHD	1	Cable harness	Ledningsnät	5
0240								
0250	1	47 36 534		TURBO, A	1	Cable harness	Ledningsnät	5
0260	1	47 36 526		46), TURBO, A	1	Cable harness	Ledningsnät	5
0270								
0280	1	47 36 773		TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0290	1	47 36 682		46), TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0300								
0310	1	47 36 583		TURBO, ACS	1	Cable harness	Ledningsnät	5
0320	1	47 36 591		46), TURBO, ACS	1	Cable harness	Ledningsnät	5
0330								
0340	1	47 36 732		TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0350	1	47 36 740		46), TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0360								
0370	1	47 36 609		6-CYL.	1	Cable harness	Ledningsnät	5
0380	1	47 36 500		6-CYL., A	1	Cable harness	Ledningsnät	5
0390								
0400	1	47 36 757		6-CYL., RHD	1	Cable harness	Ledningsnät	5
0410	1	47 36 666		6-CYL., A, RHD	1	Cable harness	Ledningsnät	5
0420								
0430	1	47 36 617		46), 6-CYL.	1	Cable harness	Ledningsnät	5
0440	1	47 36 518		46), 6-CYL., A	1	Cable harness	Ledningsnät	5
0450								
0460	1	47 36 765		46), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0470	1	47 36 674		46), 6-CYL., A, RHD	1	Cable harness	Ledningsnät	5

46. For cars with ACC. För bilar med ACC.
118. Without digital odometer. Utan digital vägmätare.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2 -F20

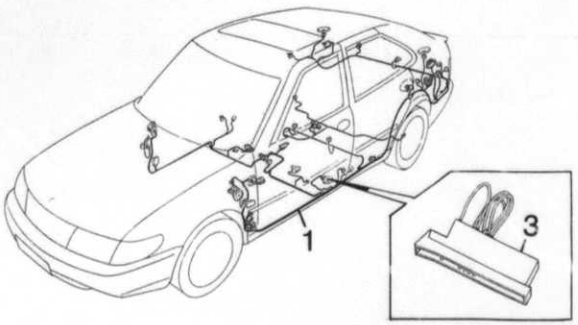

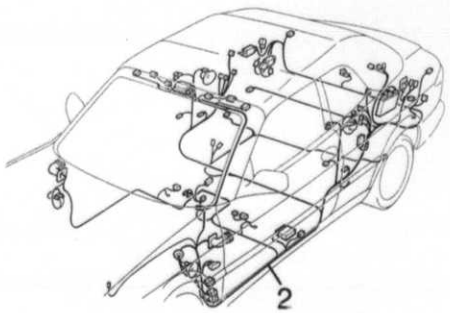

F8330 AAC94

1086

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 36 781	5D, LHD	1	Cable harness	Ledningsnät	5
0020	1	47 36 823	123), 5D, LHD	1	Cable harness	Ledningsnät	5
0030							
0040	1	47 36 799	5D, RHD	1	Cable harness	Ledningsnät	5
0050	1	47 36 849	123), 5D, RHD	1	Cable harness	Ledningsnät	5
0060							
0070	1	47 36 807	3D,LHD	1	Cable harness	Ledningsnät	5
0080	1	47 36 856	123), 3D, LHD	1	Cable harness	Ledningsnät	5
0090							
0100	1	47 36 815	3D, RHD	1	Cable harness	Ledningsnät	5
0110	1	47 36 831	123), 3D, RHD	1	Cable harness	Ledningsnät	5
0120							
0130	2	46 68 000	CV, LHD	1	Cable harness	Ledningsnät	8
0140	2	46 68 026	123), CV, LHD	1	Cable harness	Ledningsnät	5
0150							
0155	2	46 68 000	CV, B234I, US, CA	1	Cable harness	Ledningsnät	8
0160	2	45 84 488	CV, B204L, B258I, US, CA	1	Cable harness	Ledningsnät	8
0170							
0180	2	46 68 018	CV, RHD	1	Cable harness	Ledningsnät	5
0190	2	46 68 034	123), CV, RHD	1	Cable harness	Ledningsnät	5
0200							
0210	3	47 37 615	61)	1	Cable harness	Ledningsnät	5

61. Without theft alarm. Utan tjuvlarm.
123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-F22 Doors 1997

Dörrar 1997

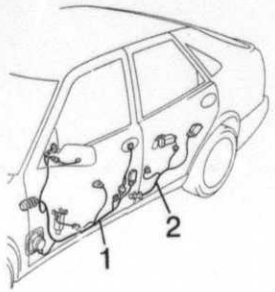

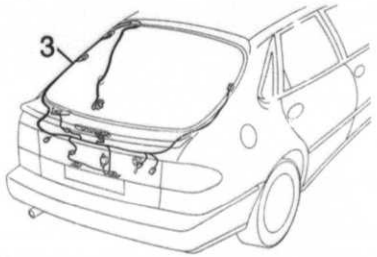

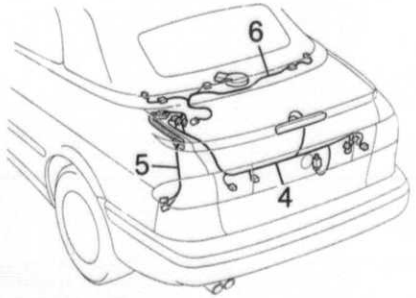

F8331 AAC94

1087

Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	47 38 977		66), 5D	1	Cable harness front door	Ledningsnät framdörr	6
1	47 38 951		74), 5D	1	Cable harness front door	Ledningsnät framdörr	6
1	47 38 993		66), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
1	47 38 936		74), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
2	45 84 637			2	Cable harness rear door	Ledningsnät bakdörr	5
3	47 38 571			1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
4	47 38 597		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
5	47 38 605		CV	1	Cable harness connection	Ledningsnät skarv	6
6	44 07 425		CV	1	Cable harness tonneau cover	Ledningsnät suflettavtäckning	6

66. Drivers side. Förarsida.
74. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-F24

Roof
1997

Tak
1997

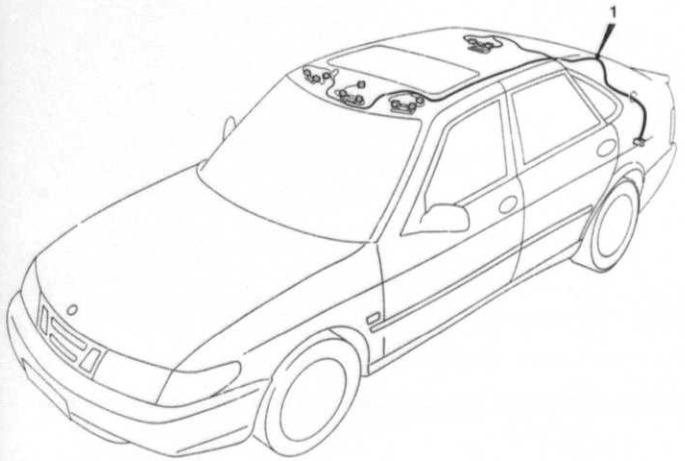

F8332 AAC94

1088	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 82 847			1	Cable harness	Ledningsnät	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G02 Front 1998

Främre 1998

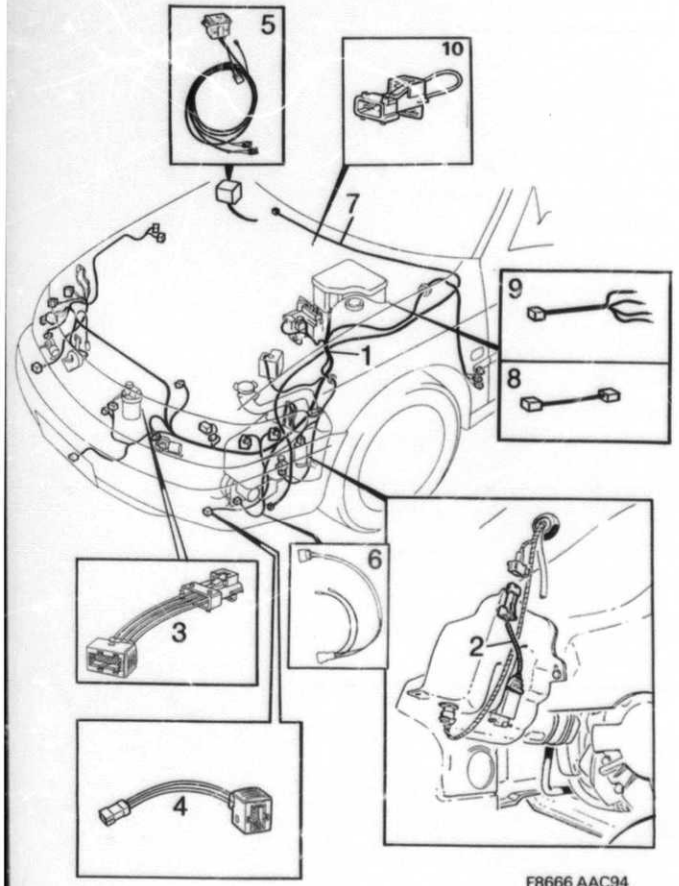

F8666 AAC94

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	49 29 618		TURBO	1	Cable harness	Ledningsnät	
0020	1	48 12 954		47), TURBO	1	Cable harness	Ledningsnät	5
0030								
0040	2	46 74 248		160)	1	Cable harness	Ledningsnät	6
0050						washer pump	spolarpump	
0060								
0070	3	47 37 417		A, PA, ME	1	Cable harness	Ledningsnät	
0080						cooling fan	kylfläkt	
0090								
0100	4	48 06 428			1	Cable harness	Ledningsnät	6
0110						vacuum pump	vakuumpump	
0120								
0130	5	47 39 702		147)	1	Cable harness	Ledningsnät	6
0140						vacuum pump	vakuumpump	
0150	6	47 39 710		147)	1	Cable harness	Ledningsnät	6
0160						vacuum pump	vakuumpump	
0170	7	47 39 678		147)	1	Cable harness	Ledningsnät	6
0180						vacuum pump	vakuumpump	
0190	8	47 39 694		147)	1	Cable harness	Ledningsnät	6
0200						relay	relä	
0210						fog light	dimljus	
0220	9	47 39 686		147)	1	Cable harness	Ledningsnät	6
0230						connection	skarv	
0240						vacuum pump	vakuumpump	
0250	10	49 41 993		B204L, A	1	Cable harness	Ledningsnät	6
0260						pressure monitor	tryckvakt	
0270						brake	broms	


47. With intake air heat plate. Med värmeplatta.
147. Also applies to modified cars Gäller också för modifierade bilar
160. Without rear window wiper. Utan bakrutetorkare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

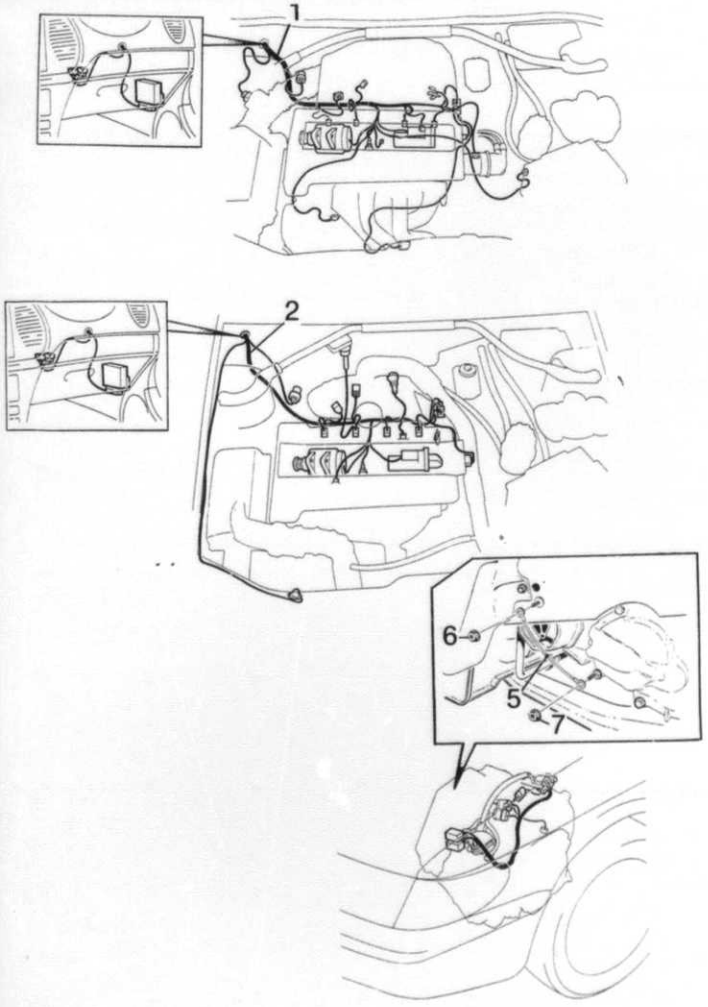

F8667 AAC94

Wiring and fuses

2-G04 *Engine, gearbox 4-cyl., 1998*

Ledningar och säkringar

Motor, växellåda 4-cyl., 1998


1102	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	48 07 855		I	1	Cable harness	Ledningsnät	3
0020						engine	motor	
0030	1	48 07 863		I, A	1	Cable harness	Ledningsnät	3
0040						engine	motor	
0050								
0060	1	48 07 889		I, US, CA	1	Cable harness	Ledningsnät	8
0070						engine	motor	
0080	1	48 07 897		I, A, US, CA	1	Cable harness	Ledningsnät	8
0090						engine	motor	
0100								
0110	2	47 38 753		TURBO, US, CA	1	Cable harness	Ledningsnät	8
0120						engine	motor	
0130	2	47 38 761		TURBO, A, US, CA	1	Cable harness	Ledningsnät	8
0140						engine	motor	
0150								
0160	5	46 65 998			1	Ground cable	Jordkabel	
0170	6	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0180	7	79 77 929			1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

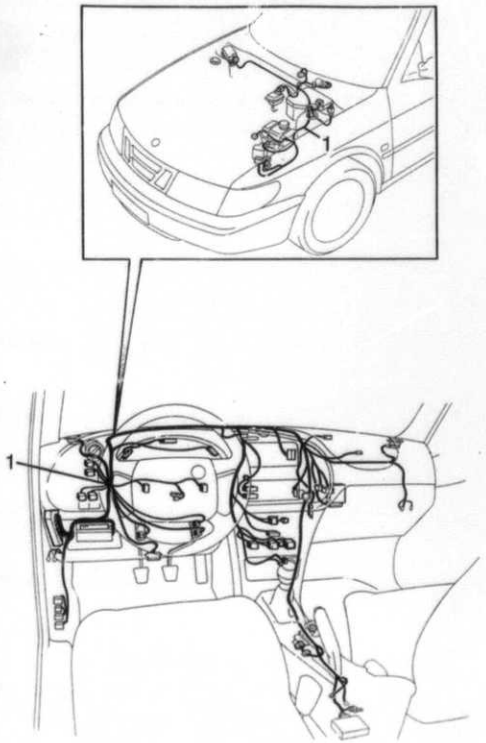

F8668 AAC94

Wiring and fuses

2-G06 *Instrument panel* *1998*

Ledningar och säkringar

Instrumentpanel *1998*

1106	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 36 476		118)	1	Cable harness	Ledningsnät	5
0020	1	47 36 468		118), A	1	Cable harness	Ledningsnät	5
0030								
0040	1	47 36 633		118), RHD	1	Cable harness	Ledningsnät	5
0050	1	47 36 625		118), A, RHD	1	Cable harness	Ledningsnät	5
0060								
0070	1	47 36 542		4-CYL., I	1	Cable harness	Ledningsnät	5
0080	1	47 36 484		4-CYL., I, A	1	Cable harness	Ledningsnät	5
0090								
0100	1	47 36 690		4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0110	1	47 36 641		4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0120								
0130	1	47 36 559		46), 4-CYL., I	1	Cable harness	Ledningsnät	5
0140	1	47 36 492		46), 4-CYL., I, A	1	Cable harness	Ledningsnät	5
0150								
0160	1	47 36 708		46), 4-CYL., I, RHD	1	Cable harness	Ledningsnät	5
0170	1	47 36 658		46), 4-CYL., I, A, RHD	1	Cable harness	Ledningsnät	5
0180								
0190	1	47 36 567		TURBO	1	Cable harness	Ledningsnät	5
0200	1	47 36 575		46), TURBO	1	Cable harness	Ledningsnät	5
0210								
0220	1	47 36 716		TURBO, RHD	1	Cable harness	Ledningsnät	5
0230	1	47 36 724		46), TURBO, RHD	1	Cable harness	Ledningsnät	5
0240								
0250	1	47 36 534		TURBO, A	1	Cable harness	Ledningsnät	5
0260	1	47 36 526		46), TURBO, A	1	Cable harness	Ledningsnät	5
0270								
0280	1	47 36 773		TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0290	1	47 36 682		46), TURBO, A, RHD	1	Cable harness	Ledningsnät	5
0300								
0310	1	47 36 583		TURBO, ACS	1	Cable harness	Ledningsnät	5
0320	1	47 36 591		46), TURBO, ACS	1	Cable harness	Ledningsnät	5
0330								
0340	1	47 36 732		TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5
0350	1	47 36 740		46), TURBO, ACS, RHD	1	Cable harness	Ledningsnät	5

46. For cars with ACC. För bilar med ACC.
118. Without digital odometer. Utan digital vägmätare.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electricel, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G08 Rear 1998

Bakre 1998

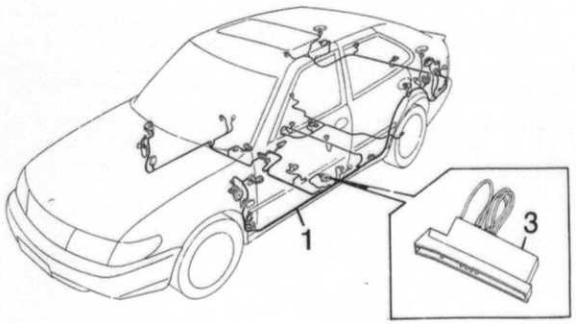

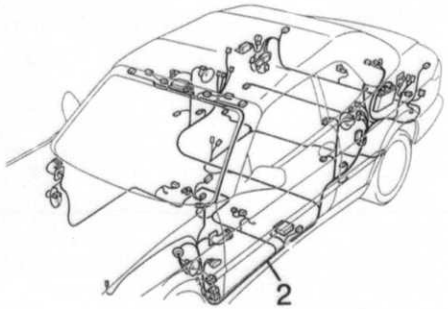

F8669 AAC94

1108	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	49 29 956		5D, LHD	1	Cable harness	Ledningsnät	
0020	1	49 29 964		123), 5D, LHD	1	Cable harness	Ledningsnät	
0030								
0040	1	49 29 998		5D, RHD	1	Cable harness	Ledningsnät	
0050	1	49 29 980		123), 5D, RHD	1	Cable harness	Ledningsnät	
0060								
0070	1	49 29 972		3D, LHD	1	Cable harness	Ledningsnät	
0080	1	49 41 027		123), 3D, LHD	1	Cable harness	Ledningsnät	
0090								
0100	1	49 41 019		3D, RHD	1	Cable harness	Ledningsnät	
0110	1	49 41 001		123), 3D, RHD	1	Cable harness	Ledningsnät	
0120								
0130	2	49 41 050		CV, LHD	1	Cable harness	Ledningsnät	
0140	2	49 41 084		123), CV, LHD	1	Cable harness	Ledningsnät	8
0150								
0155	2	46 68 000		CV, B234I, US, CA	1	Cable harness	Ledningsnät	8
0160	2	49 41 043		CV, B204L, US, CA	1	Cable harness	Ledningsnät	8
0170								
0180	2	49 41 076		CV, RHD	1	Cable harness	Ledningsnät	8
0190	2	49 41 092		123), CV, RHD	1	Cable harness	Ledningsnät	8
0200								
0210	3	47 37 615		61)	1	Cable harness	Ledningsnät	5

61. Without theft alarm. Utan tjuvlarm.
123. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G10 Doors 1998

Dörrar 1998

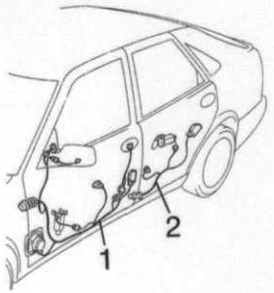

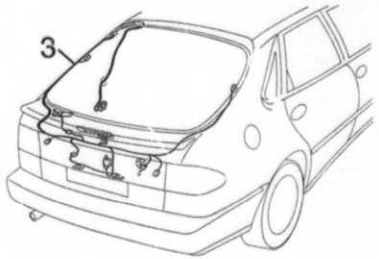

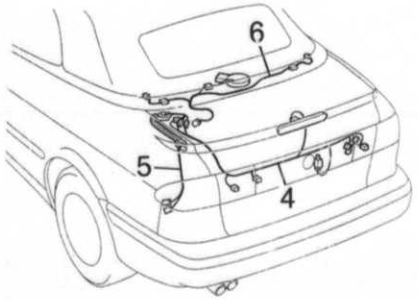

F8670 AAC94

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 38 977		66), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030								
0040	1	47 38 951		74), 5D	1	Cable harness front door	Ledningsnät framdörr	6
0050								
0060								
0070	1	47 38 993		66), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0080								
0090								
0100	1	47 38 936		74), 3D, CV	1	Cable harness front door	Ledningsnät framdörr	6
0110								
0120								
0130	2	45 84 637		5D	2	Cable harness rear door	Ledningsnät bakdörr	5
0140								
0150								
0160	3	47 38 571		3D, 5D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0170								
0180								
0190	4	47 38 597		CV	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0200								
0210								
0220	5	47 38 605		CV	1	Cable harness connection	Ledningsnät skarv	6
0230								
0240								
0250	6	44 07 425		CV	1	Cable harness tonneau cover	Ledningsnät suflettavtäckning	6
0260								

66. Drivers side. Förarsida.
74. Passenger side. Passagerarsida.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G12 Roof / Tak 1998

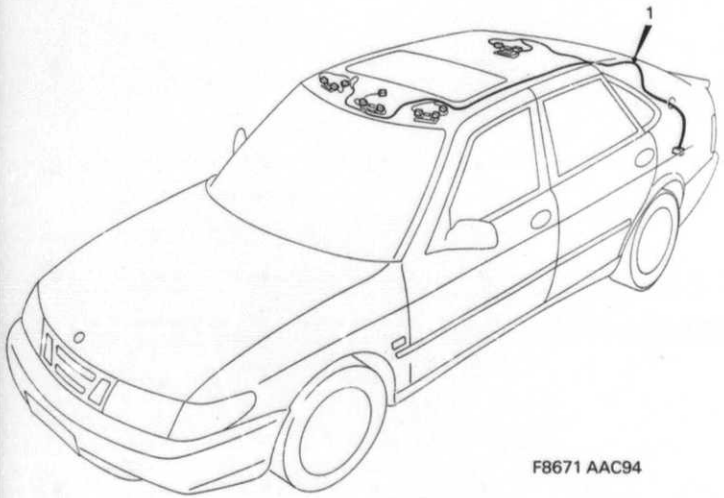

F8671 AAC94

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description / Benämning	S L
1112 0010	1	45 82 847			1	Cable harness / Ledningsnät	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G14

Tensioning band

Spännband

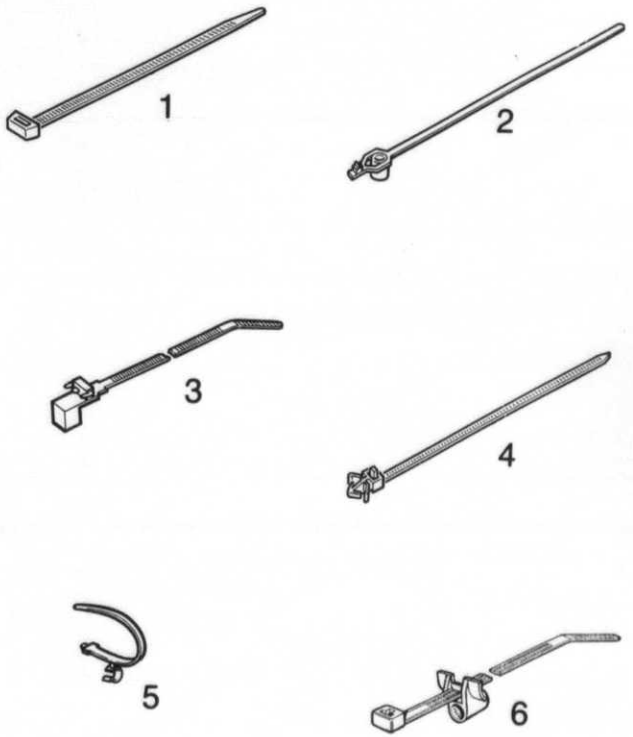

F8333 AAC94

1125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 71 864		L=118 MM	X	Tensioning band	Spännband	5
0020	1	79 71 872		L=160 MM	X	Tensioning band	Spännband	5
0030	1	79 71 880		L=259 MM	X	Tensioning band	Spännband	4
0040	2	79 84 750		L=190 MM	X	Tensioning band	Spännband	5
0050	3	40 63 681		L=220 MM	X	Tensioning band	Spännband	5
0060	4	79 84 784		L=225 MM	X	Tensioning band	Spännband	5
0070	5	75 93 221		L=214 MM	X	Tensioning band	Spännband	5
0080	5	73 98 977		L=273 MM	X	Tensioning band	Spännband	5
0090	6	48 07 939		L=259 MM	X	Tensioning band	Spännband	4

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G16 Bushings, screws, clamps etc

Bussningar, skruvar, klammor etc

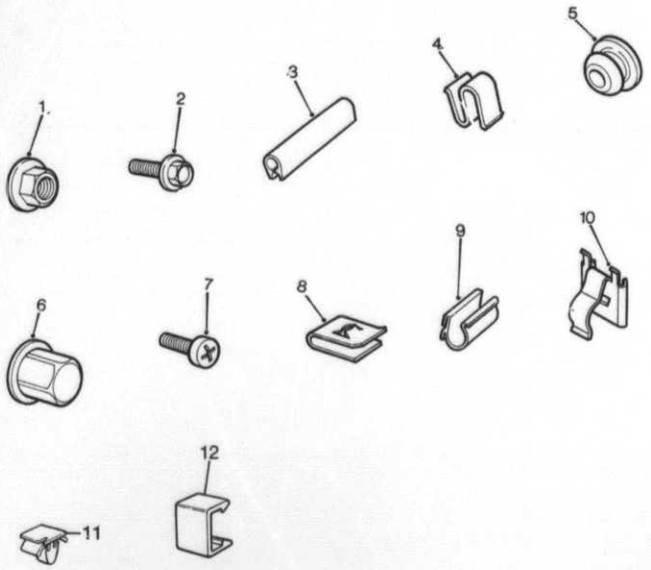

F8576 AAC94

1130	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 77 929			X	Nut	Mutter	5
0020						grounding connection	jordanslutning	
0030								
0040	1	79 77 911		ABS	X	Nut	Mutter	5
0050						grounding connection	jordanslutning	
0060								
0070	2	79 78 091		M6X12	X	Screw	Skruv	5
0080	2	79 78 265		M10X20	X	Hexagon screw	Sexkantsskruv	5
0090								
0100	3	85 64 973		L=75 MM	X	Protecting moulding	Skyddslist	6
0110	3	82 78 558		L=90 MM	X	Protecting moulding	Skyddslist	5
0120	3	95 19 737		L=140 MM	X	Protecting moulding	Skyddslist	5
0130								
0140	4	85 02 643			X	Clamp	Klämma	5
0150								
0160	5	75 36 501		∅ 20,5 MM	X	Bushing	Bussning	5
0170						electrical distribut.unit	elcentral	
0180								
0190	6	40 87 128			X	Plastic nut	Plastmutter	5
0200								
0210	7	79 70 536		4,8X16	X	Screw	Skruv	6
0220	7	79 22 354		4,8X16	X	Screw	Skruv	5
0230	7	79 22 370		4,8X19	X	Screw	Skruv	5
0240	7	79 71 294		M6X12	X	Screw	Skruv	5
0250								
0260	8	79 67 995			X	Clip nut	Clipsmutter	3
0270								
0280	9	71 21 239			X	Clamp	Klammer	5
0290	9	40 87 797			X	Clip	Clips	5
0300								
0310	10	91 66 448			X	Clip	Clips	5
0320								
0330	11	41 76 095		B258 I	X	Clip	Clips	5
0340						cable harness	ledningsnät	
0350						starter motor-alternator	startmotor-generator	
0360								
0370	11	41 76 095		B258 I	X	Clip	Clips	5
0380						temperature sensor	temperarturgivare	
0390						coolant	kylvätska	
0400								
0410	12	46 68 547		112), CV	1	Clip	Clips	5
0420						cable harness	ledningsnät	
0430						boot lid	bagagerumslucka	

112. Ch S7020317–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G18 Mounting details Body

Monteringsdetaljer Kaross

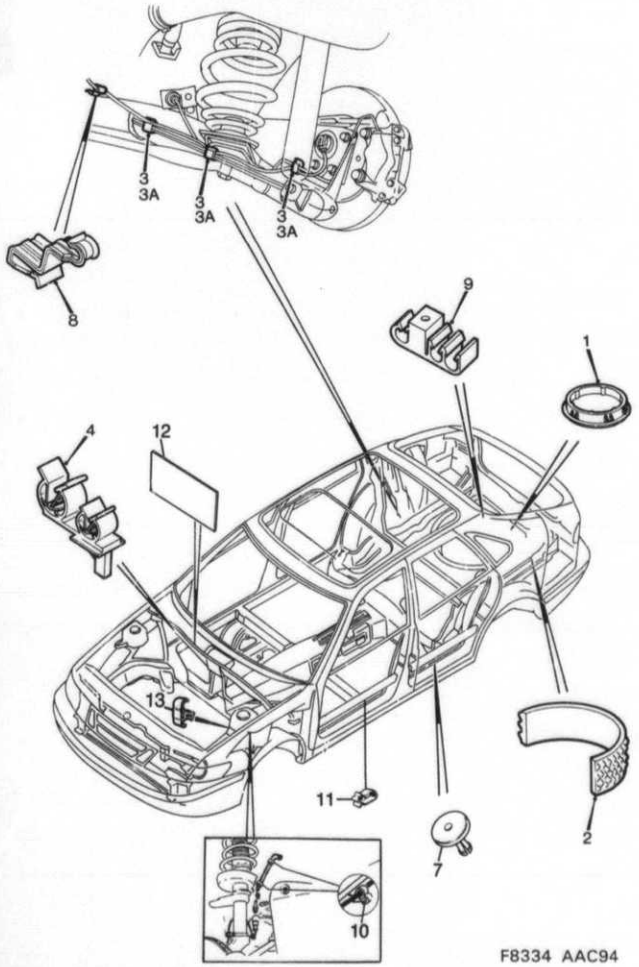

F8334 AAC94

1135	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 08 456			1	Protecting moulding	Skyddslist	5
0020						D-pillar	D-stolpe	
0030								
0040	2	96 77 162			1	Insulation	Isolering	6
0050						contact housing	kontakthus	
0060								
0070	3	44 64 483		ABS	X	Clamp	Klammer	5
0080						sensor cable	sensorkabel	
0090								
0100	3A	91 06 139		ABS	X	Tube clamp	Rörklamma	5
0110						sensor cable	sensorkabel	
0120								
0130	4	44 10 742		-1995, 6-CYL.	1	Clip	Clips	5
0140								
0150	7	95 65 417			7	Rivet	Nit	3
0160						cable harness	ledningsnät	
0170								
0180	8	44 66 835		-1995, ABS	2	Clip	Clips	5
0190						cable harness	ledningsnät	
0200	8	44 64 483		1996-, ABS	2	Clamp	Klammer	5
0210						cable harness	ledningsnät	
0220								
0230	9	42 22 287			X	Clip	Clips	5
0240						cable harness	ledningsnät	
0250								
0260	10	91 06 139		185), ABS	4	Tube clamp	Rörklamma	5
0270						cable harness	ledningsnät	
0280								
0290	11	71 56 409		61), 1995-	1	Clamp	Klammer	5
0300								
0310	12	*46 65 840*		-1995	X	Tape	Tejp	
0320				NLS – USE 4808176		contact housing	kontakthus	
0330						glove compartment lamp	handskfacklampa	
0340	12	48 08 176		1996-	X	Tape	Tejp	
0350						contact housing	kontakthus	
0360						glove compartment lamp	handskfacklampa	
0370								
0380	13	40 74 027		136)	1	Pipe bracket	Rörhållare	6
0390						cable harness	ledningsnät	

61. Without theft alarm. Utan tjuvlarm.
136. Ch T7003434–.
185. Ch –R2031962.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G20 Mounting details Doors

Monteringsdetaljer Dörrar

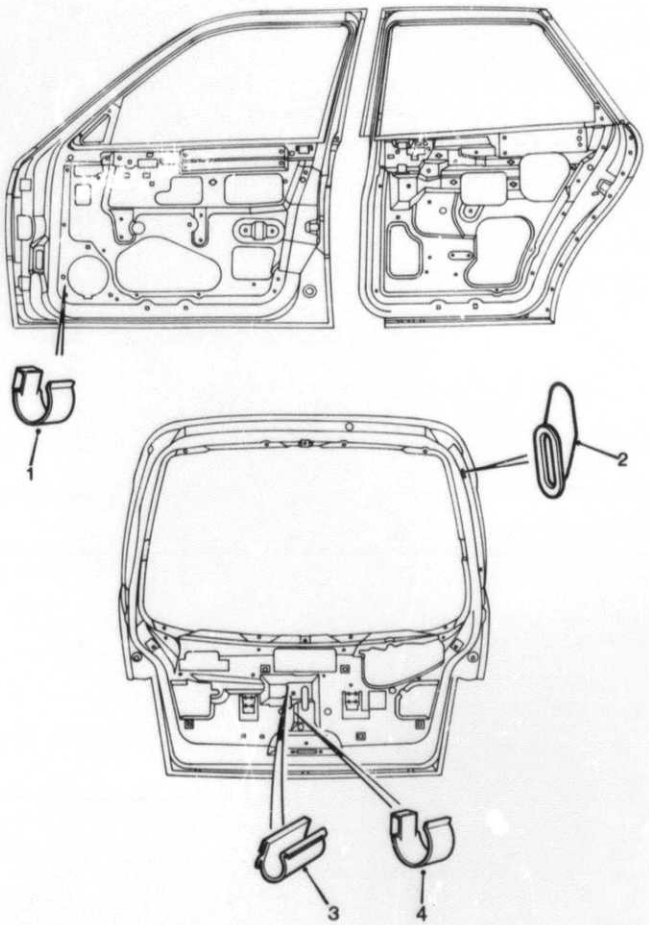

F7879 AAC94

1140	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 08 491			2	Clamp	Klammer	5
0020	1	71 08 491		121), CV	2	Clamp	Klammer	5
0030	1	71 56 409		122), CV	2	Clamp	Klammer	5
0040								
0050	2	44 08 514			1	Protecting moulding	Skyddslist	5
0060								
0070	3	71 08 491			1	Clamp	Klammer	5
0080						cable harness	ledningsnät	
0090								
0100	4	71 56 409		1996-,204)	X	Clamp	Klammer	5
0110						cable harness	ledningsnät	

121. Ch -S7022072.
122. Ch S7022073-.
199. Ch S2039223-, S7021969-.
204. Ch -V2002598.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G22

Holders and brackets

Hållare och konsoler

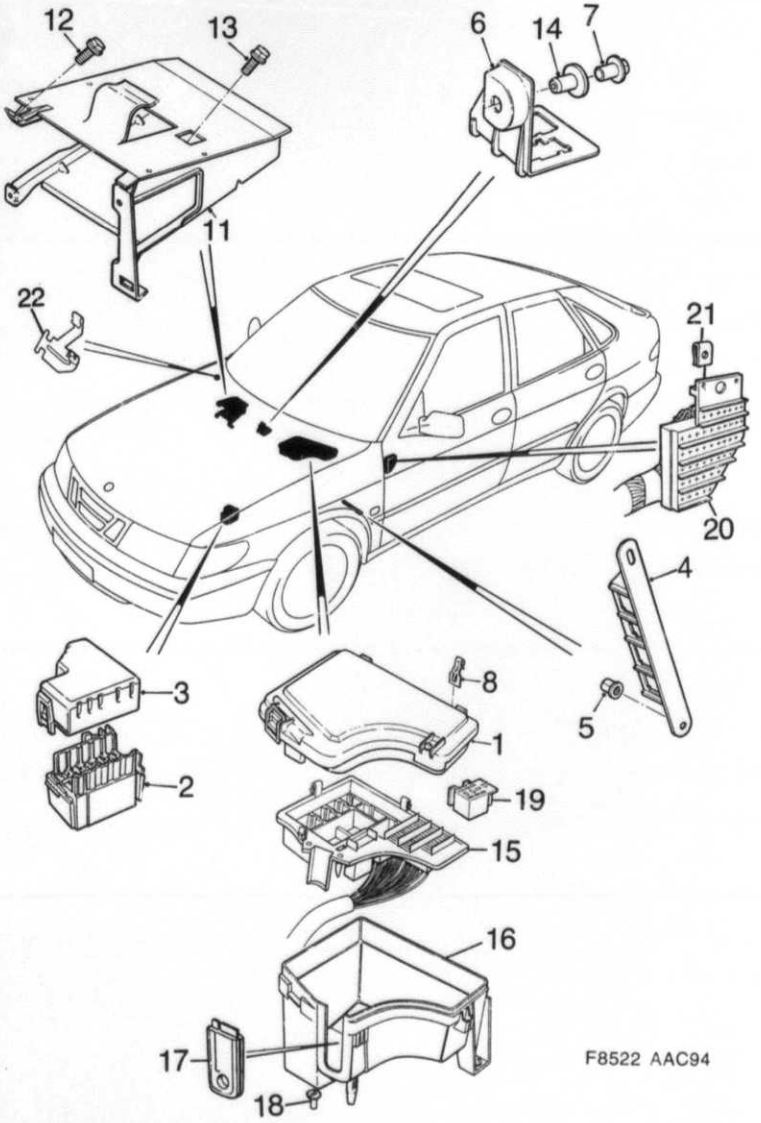

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 37 403		10), 1994	1	Cover	Lock	3
0020	1	*45 84 157*		11,126) NLS – USE 4694352	1	Cover	Lock	3
0030	1	46 94 352		127)-1995	1	Cover	Lock	3
0040	1	46 93 081		1996	1	Cover	Lock	3
0050	1	48 07 947		1997	1	Cover	Lock	3
0060	1	49 41 621		1998-	1	Cover	Lock	3
0070								
0080	2	*44 10 577*		114) NLS – USE 4814349	1	Fuse holder	Säkringshållare	5
0090	2	46 94 634		115,206)	1	Fuse holder	Säkringshållare	5
0100	2	48 14 349		207)	1	Fuse holder	Säkringshållare	5
0110	3	42 30 207			1	Cover	Lock	3
0120								
0130	4	44 09 348			1	Bracket	Konsol	6
0140	5	40 87 128			2	Plastic nut	Plastmutter	5
0150								
0160	6	42 22 824		-1995	1	Bracket	Konsol	6
0170	6	47 35 825		1996-	1	Bracket	Konsol	6
0180	7	42 38 291			1	Nut	Mutter	5
0190								
0200	8	44 09 371			1	Clip	Clips	5
0210								
0220	11	44 08 472		ICE, RHD	1	Bracket	Konsol	6
0230	12	79 78 372			4	Screw	Skruv	5
0240	13	79 70 536			2	Screw	Skruv	6
0250								
0260	14	42 38 309		M	1	Spacer clip	Distansclips	
0270								
0280	15	42 30 017			1	Bracket	Hållare	4
0290	16	42 30 009			1	Box	Box	4
0300	17	42 33 375			1	Grommet	Genomföring	5
0310	18	71 16 452			1	Draining plug	Dräneringsplugg	5
0320	19	44 09 959			X	Bracket	Hållare	4
0330								
0340	19	44 09 959			X	Bracket	Hållare	4
0350								
0360	20	42 30 074		-1996, LHD	1	Retainer	Hållare	5
0370	20	47 36 930		1997-, LHD	1	Retainer	Hållare	5
0380	20	42 30 140		-1996, RHD	1	Retainer	Hållare	5
0390	20	47 36 948		1997-, RHD	1	Retainer	Hållare	5
0400	21	79 67 995			2	Clip nut	Clipsmutter	3
0410								
0420	22	48 11 048		1997-	1	Bracket cable harness	Konsol ledningsnät	6
0430								

10. CV, ch. -S7009999
11. CV, ch. S7010000-
114. Ch -S2037047.
115. Ch S2037048-.
126. Ch -S7024440.
127. Ch S7024441-.
206. Ch -V2024144.
207. Ch V2024145-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-G24

Relays and fuses
10), DICE, 1994

Reläer och säkringar
10), DICE, 1994

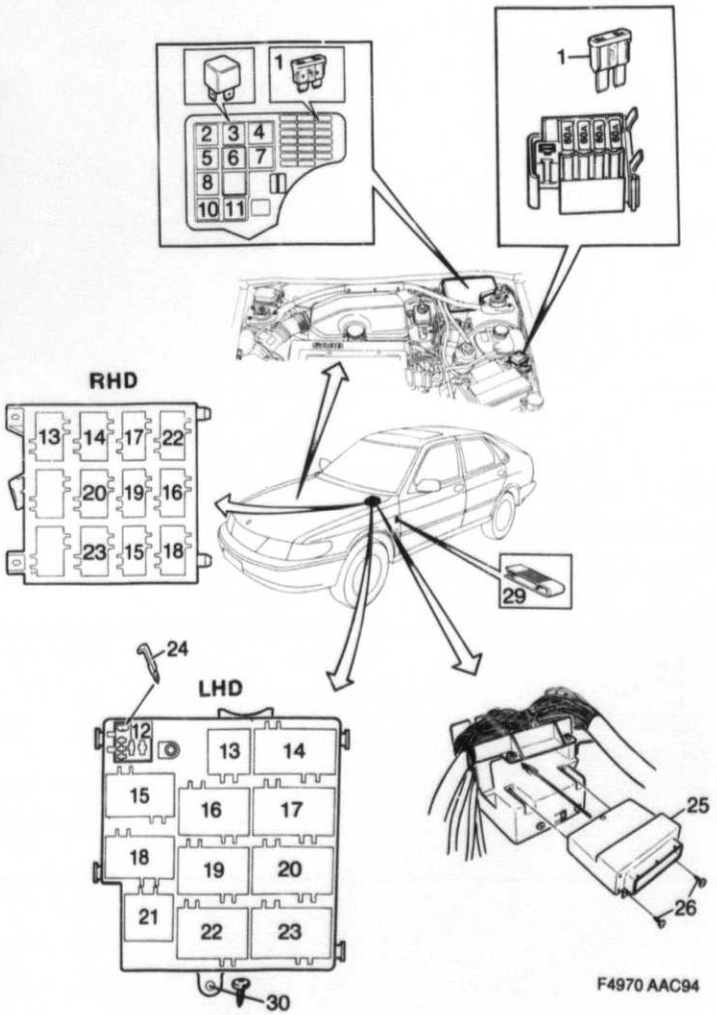

1200	Pos	Part No/Art.nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 629		7,5A	X	Fuse	Säkring	1
0030	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0050	1	79 74 652		20A	X	Fuse	Säkring	1
0060	1	79 74 660		25A	X	Fuse	Säkring	1
0070	1	79 74 678		30A	X	Fuse	Säkring	1
0080	1	79 83 034		30A, MAXI	X	Fuse	Säkring	1
0090	1	40 87 698		40A	X	Fuse	Säkring	1
0100	1	79 83 042		40A, MAXI	X	Fuse	Säkring	1
0110	1	79 83 067		60A, MAXI	X	Fuse	Säkring	1
0120								
0130	2	95 56 390			1	Relay full/dipped beam	Relä helljus/halvljus	
0140								
0150	3	95 56 390			1	Relay headlamp	Relä strålkastare	
0160								
0170	4	95 22 061		SAI	1	Relay	Relä	5
0180	4	95 22 061			1	Relay intake air heat plate	Relä värmeplatta	5
0190								
0200	5	42 24 192			1	Relay horn	Relä signalhorn	6
0210								
0220	5	42 24 192		SAI	1	Relay	Relä	6
0230	6	41 09 070			1	Relay bulb check	Relä lampkontroll	5
0240								
0250	7	85 22 310		177)	1	Relay fog light	Relä dimljus	3
0260								
0270	7	85 33 176		178)	1	Relay fog light	Relä dimljus	3
0280								
0290	8	85 22 310		177)	1	Relay cooling fan	Relä kylfläkt	3
0300								
0310	8	85 33 176		178)	1	Relay cooling fan	Relä kylfläkt	3
0320								
0330	10	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
0340								
0350	11	85 22 310		177)	1	Relay AC-compressor	Relä AC-kompressor	3
0360								
0370	11	85 33 176		178)	1	Relay AC-compressor	Relä AC-kompressor	3
0380								
0390								
0400	13	42 24 192		28)	1	Relay	Relä	6
0410	14	42 38 234			1	Relay starter inhibitor	Relä startspärr	5
0420								
0430	15	95 56 390			1	Relay rear window wiper	Relä bakrutetorkare	
0440								
0450	16	85 22 310		177)	1	Relay starter relay	Relä startrelä	3
0460								
0470	16	85 33 176		178)	1	Relay starter relay	Relä startrelä	3
0480								
0490	17	44 33 322			1	Relay overheated catalytic conv	Relä överhettad katalysator	3
0500								
0510	18	95 58 390			1	Relay intermittent wiper	Relä intervalltorkare	
0520								
0530	19	95 22 061			1	Relay rear window	Relä bakruta	5
0540								
0550	20	85 22 310		177)	1	Relay fuel pump	Relä bränslepump	3
0560								
0570	20	85 33 176		178)	1	Relay fuel pump	Relä bränslepump	3
0580								

10. CV, ch. -S7009999
28. Side back up light. Sidobackljus.
177. Ch -R2035196.
178. Ch R2035197-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-H02

Relays and fuses
10), DICE, 1994

Reläer och säkringar
10), DICE, 1994

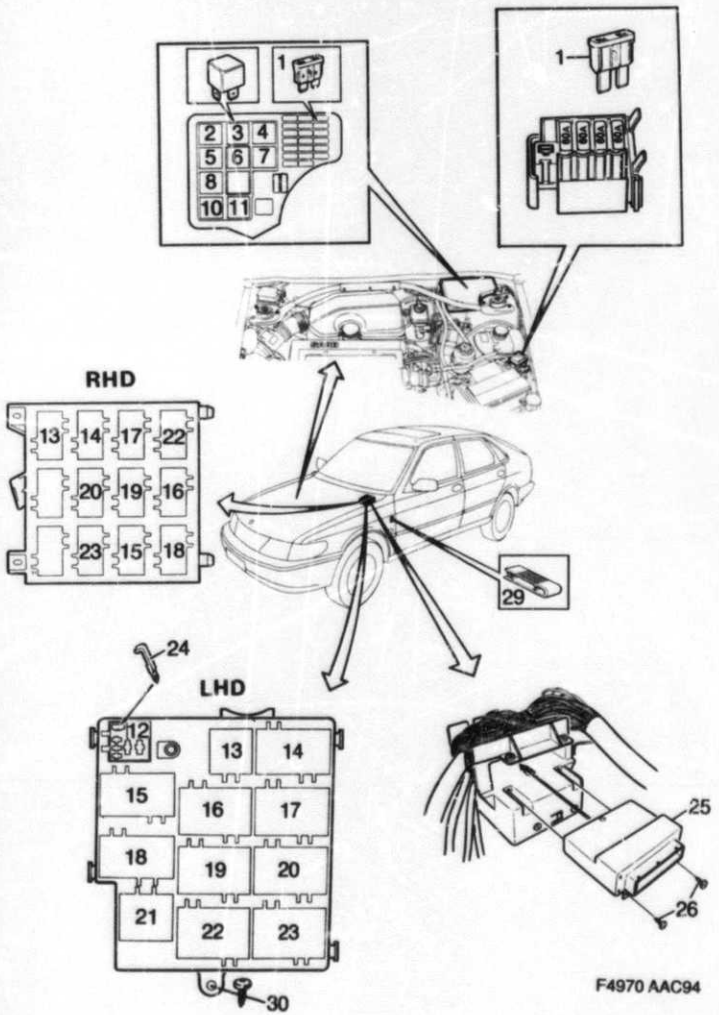

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	22	95 22 061			1	Relay starter switch	Relä tändningsläs	5
0600								
0610	23	85 22 310		177)	1	Relay injektion system	Relä insprutningssytem	3
0620								
0630	23	85 33 176		178)	1	Relay injektion system	Relä insprutningssytem	3
0640								
0650								
0660	24	42 30 108			X	Clamp	Klammer	4
0670								
0680	25	*44 88 409*		175), ICE NLS – USE 4711263	1	Electronic unit	Elektronikenhet	5
0680								
0690	25	*45 36 785*		176), ICE NLS – USE 4711263	1	Electronic unit	Elektronikenhet	5
0690								
0700	26	79 70 536			2	Screw	Skruv	6
0710								
0720	29	85 87 636			1	Fuse clip	Säkringsklämma	5
0730								
0740	30	79 70 536			1	Screw	Skruv	6

10. CV, ch. –S7009999
175. Ch –R2033974.
176. Ch R2033975–.
177. Ch –R2035196.
178. Ch R2035197–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2 -H04

Relays and fuses
11), DICE, 1995

Reläer och säkringar
11), DICE, 1995

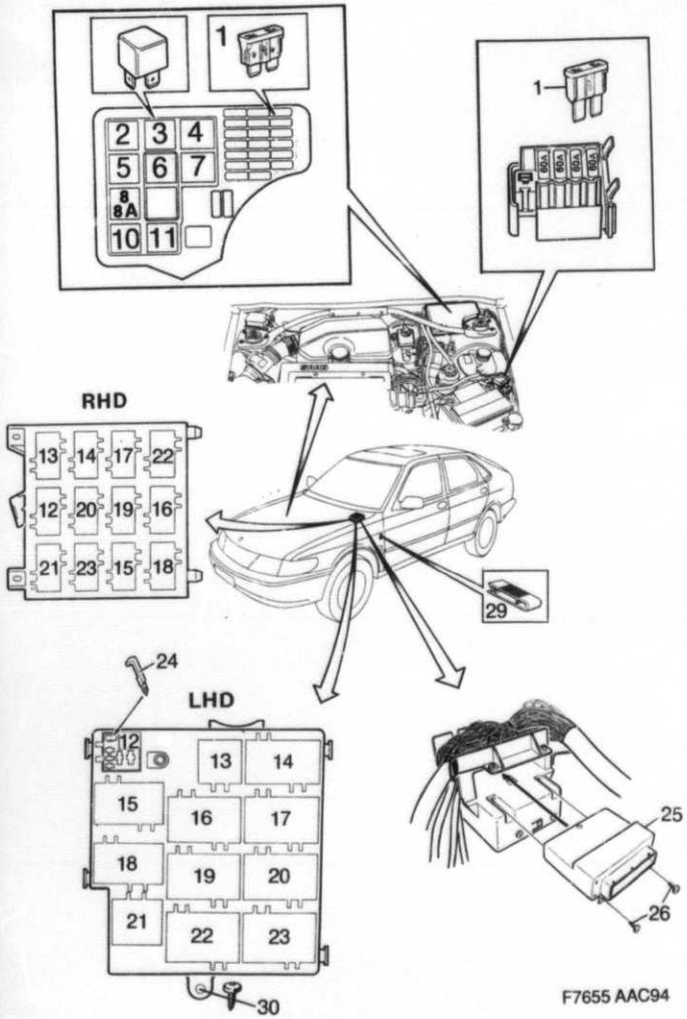

1205	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 629		7,5A	X	Fuse	Säkring	1
0030	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0050	1	79 74 652		20A	X	Fuse	Säkring	1
0060	1	79 74 660		25A	X	Fuse	Säkring	1
0070	1	79 74 678		30A	X	Fuse	Säkring	1
0080	1	79 83 034		30A, MAXI	X	Fuse	Säkring	1
0090	1	40 87 698		40A	X	Fuse	Säkring	1
0100	1	79 83 042		40A, MAXI	X	Fuse	Säkring	1
0110	1	79 83 067		60A, MAXI	X	Fuse	Säkring	1
0120								
0130	2	85 33 176			1	Relay full/dipped beam	Relä helljus/halvljus	3
0140								
0150	3	85 33 176			1	Relay headlamp	Relä strålkastare	3
0160								
0170	4	95 22 061		SAI	1	Relay	Relä	5
0180	4	95 22 061			1	Relay intake air heat plate	Relä värmeplatta	5
0190								
0200	5	42 24 192			1	Relay horn	Relä signalhorn	6
0210								
0220	5	42 24 192		SAI	1	Relay	Relä	6
0230	6	41 00 070			1	Relay bulb check	Relä lampkontroll	5
0240								
0250	7	42 24 192			1	Relay fog light	Relä dimljus	6
0260								
0270	8	85 33 176			1	Relay cooling fan	Relä kylfläkt	3
0280								
0290	10	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
0300								
0310	11	85 33 176			1	Relay AC-compressor	Relä AC-kompressor	3
0320								
0330	12	42 24 192			1	Relay rear seat	Relä baksäte	6
0340								
0350	13	42 24 192		28)	1	Relay	Relä	6
0360	14	42 38 234			1	Relay starter inhibitor	Relä startspärr	5
0370								
0380	15	85 33 176			1	Relay rear window wiper	Relä bakrutetorkare	3
0390								
0400	16	85 33 176			1	Relay starter relay	Relä startrelä	3
0410								
0420	17	44 33 322			1	Relay overheated catalytic conv	Relä överhettad katalysator	3
0430								
0440	18	85 33 176			1	Relay intermittent wiper	Relä intervalltorkare	3
0450								
0460	19	95 22 061			1	Relay rear window	Relä bakruta	5
0470								
0480	20	85 33 176			1	Relay fuel pump	Relä bränslepump	3
0490								
0500	21	42 24 200		199)	1	Relay washer pump	Relä spolarpump	6
0510								
0520	22	95 22 061			1	Relay starter switch	Relä tändningslås	5
0530								
0540	23	85 33 176			1	Relay injektion system	Relä insprutningssytem	3
0550								
0560								
0570	24	42 30 108			X	Clamp	Klammer	4
0580								
0590	25	*45 36 785*		ICE NLS – USE 4711263	1	Electronic unit	Elektronikenhet	5
0600	26	79 70 536			2	Screw	Skruv	6

11. CV, ch. S7010000–
28. Side back up light. Sidobackljus.
199. Ch S2039223–, S7021969–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-H06

Relays and fuses
11), DICE, 1995

Reläer och säkringar
11), DICE, 1995

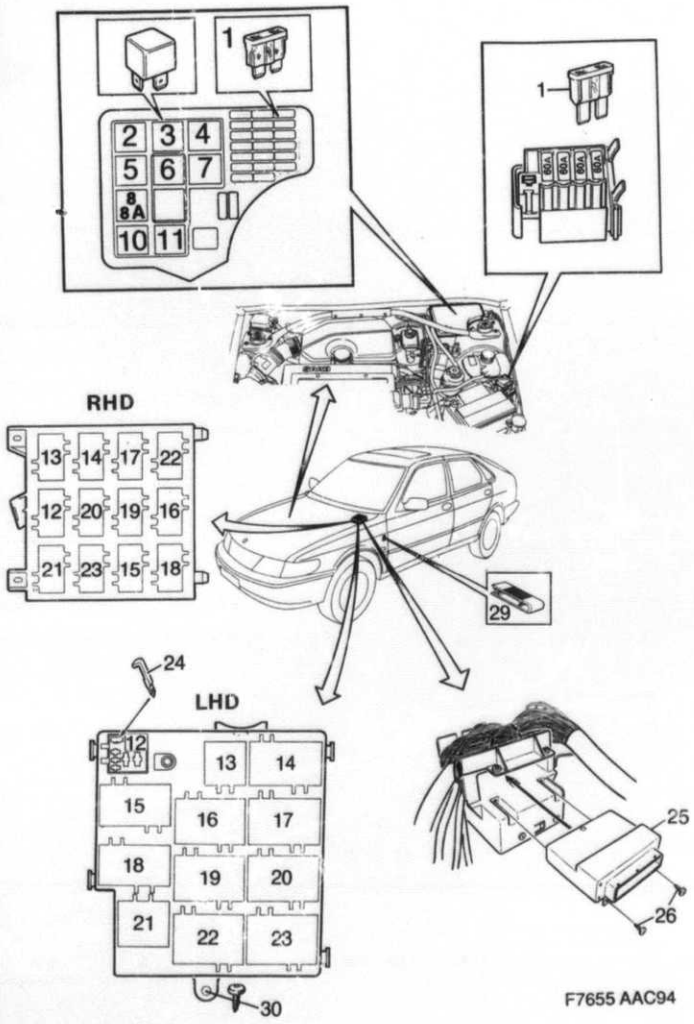

F7655 AAC94

1205	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610								
0620	29	85 87 636			1	Fuse clip	Säkringsklämma	5
0630								
0640	30	79 70 536			1	Screw	Skruv	6


11. CV, ch. S7010000–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

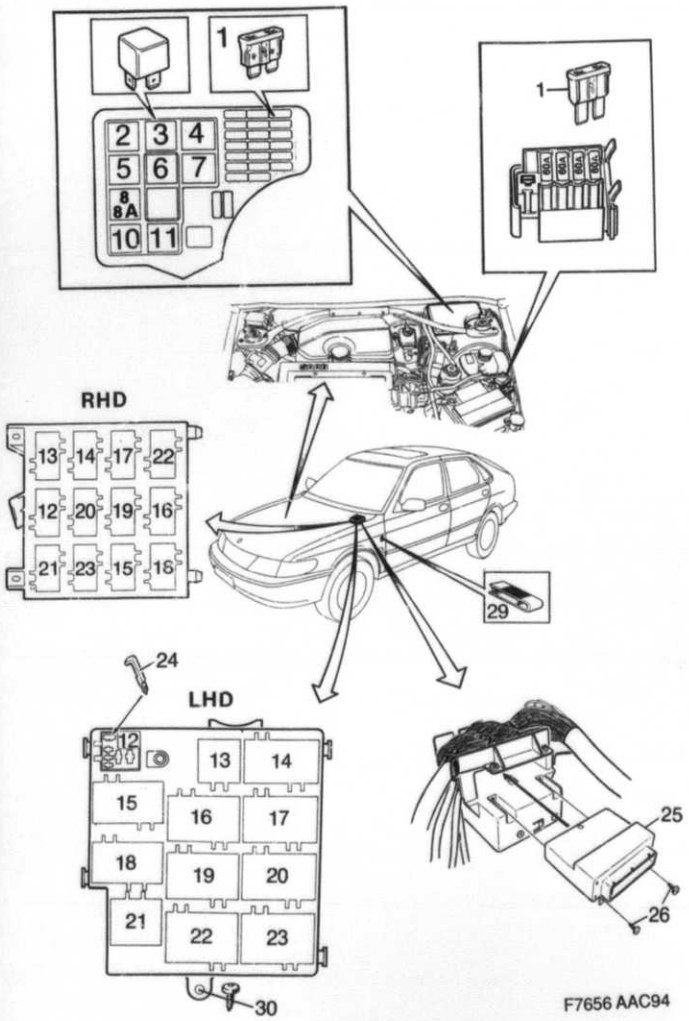

F7656 AAC94

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 629		7,5A	X	Fuse	Säkring	1
0030	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0050	1	79 74 652		20A	X	Fuse	Säkring	1
0060	1	79 74 660		25A	X	Fuse	Säkring	1
0070	1	79 74 678		30A	X	Fuse	Säkring	1
0080	1	79 83 034		30A, MAXI	X	Fuse	Säkring	1
0090	1	40 87 698		40A	X	Fuse	Säkring	1
0100	1	79 83 042		40A, MAXI	X	Fuse	Säkring	1
0105	1	79 83 059		50A, MAXI	X	Fuse	Säkring	1
0110	1	79 83 067		60A, MAXI	X	Fuse	Säkring	1
0120								
0130	2	85 33 176			1	Relay	Relä	3
0140						full/dipped beam	helljus/halvljus	
0150	3	85 33 176			1	Relay	Relä	3
0160						headlamp	strålkastare	
0170	4	95 22 061		SAI	1	Relay	Relä	5
0180	4	95 22 061			1	Relay	Relä	5
0190						intake air heat plate	värmeplatta	
0200	5	85 33 176			1	Relay	Relä	3
0210						cooling fan	kylfläkt	
0220	6	41 09 070			1	Relay	Relä	5
0230						bulb check	lampkontroll	
0240	7	42 24 192			1	Relay	Relä	6
0250						fog light	dimljus	
0260	8	42 24 192			1	Relay	Relä	6
0270						horn	signalhorn	
0280	8A	42 24 192		SAI	1	Relay	Relä	6
0290	10	95 22 061			1	Relay	Relä	5
0300						cooling fan, 2-step	kylfläkt, 2-steg	
0310	11	85 33 176			1	Relay	Relä	3
0320						AC-compressor	AC-kompressor	
0330	12	42 24 192			1	Relay	Relä	6
0340						rear seat	baksäte	
0350	13	42 24 192		28)	1	Relay	Relä	6
0360	14	42 38 234			1	Relay	Relä	5
0370						starter inhibitor	startspärr	
0380	15	85 33 176			1	Relay	Relä	3
0390						rear window wiper	bakrutetorkare	
0400	16	95 22 061			1	Relay	Relä	5
0410						starter switch	tändningslås	
0420	17	44 33 322			1	Relay	Relä	3
0430						overheated catalytic conv	överhettad katalysator	
0440	18	85 33 176			1	Relay	Relä	3
0450						intermittent wiper	intervalltorkare	
0460	19	95 22 061			1	Relay	Relä	5
0470						rear window	bakruta	
0480	20	85 33 176			1	Relay	Relä	3
0490						fuel pump	bränslepump	
0500	21	42 24 200			1	Relay	Relä	6
0510						washer pump	spolarpump	
0520	22	85 33 176			1	Relay	Relä	3
0530						starter relay	startrelä	
0540	23	85 33 176			1	Relay	Relä	3
0550						injektion system	insprutningssytem	
0560								
0570	24	42 30 108			X	Clamp	Klammer	4
0580								
0590	25	*45 36 785*		ICE NLS – USE 4711263	1	Electronic unit	Elektronikenhet	5
0600	26	79 70 536			2	Screw	Skruv	6
0610								

28. Side back up light. Sidobackljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-H10

Relays and fuses
DICE, 1996

Reläer och säkringar
DICE, 1996

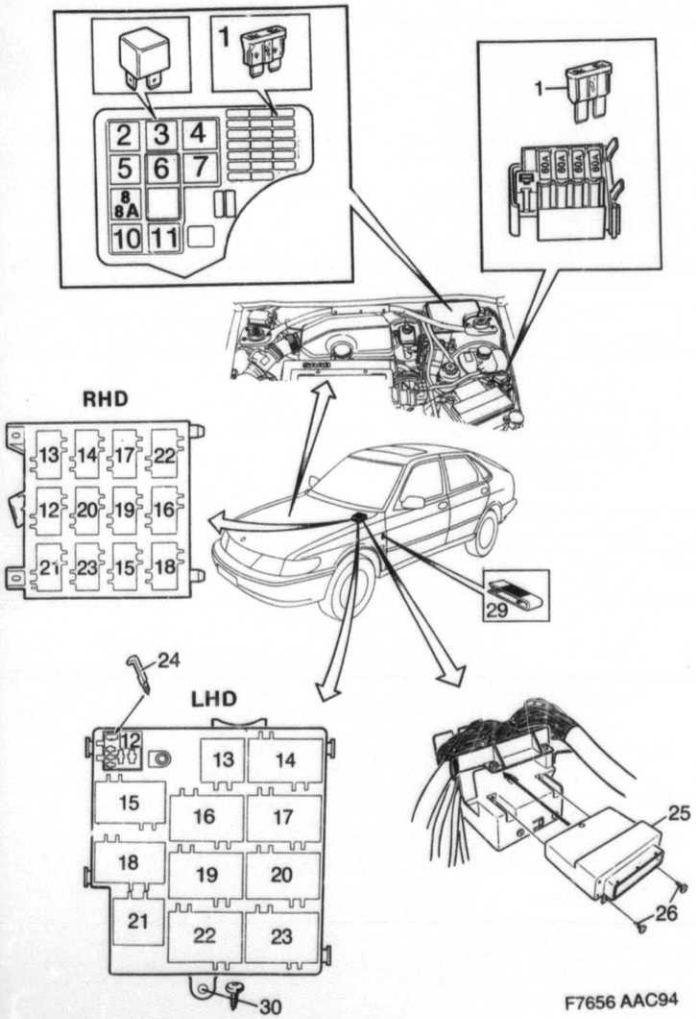

F7656 AAC94


1210	Pos	Part Nr/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	29	85 87 636			1	Fuse clip	Säkringsklämma	5
0630								
0640	30	79 70 536			1	Screw	Skruv	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

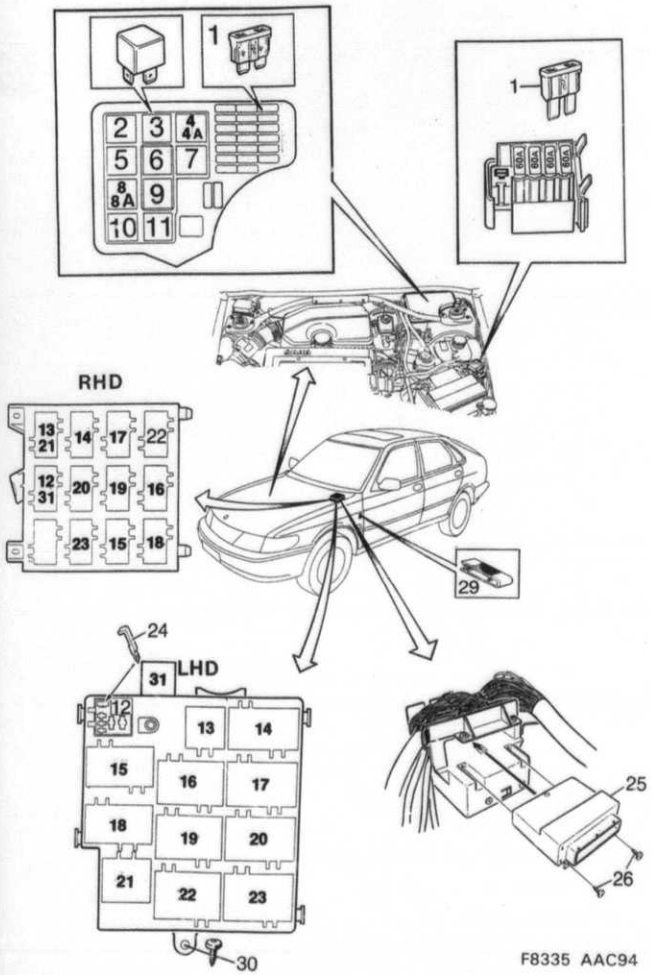

2-H12

Relays and fuses
DICE, 1997

Reläer och säkringar
DICE, 1997

1215	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 629		7,5A	X	Fuse	Säkring	1
0030	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0050	1	79 74 652		20A	X	Fuse	Säkring	1
0060	1	79 74 660		25A	X	Fuse	Säkring	1
0070	1	79 74 678		30A	X	Fuse	Säkring	1
0080	1	79 83 034		30A, MAXI	X	Fuse	Säkring	1
0090	1	40 87 698		40A	X	Fuse	Säkring	1
0100	1	79 83 042		40A, MAXI	X	Fuse	Säkring	1
0110	1	79 83 059		50A, MAXI	X	Fuse	Säkring	1
0120	1	79 83 067		60A, MAXI	X	Fuse	Säkring	1
0130								
0140	2	85 33 176			1	Relay	Relä	3
0150						full/dipped beam	helljus/halvljus	
0160	3	85 33 176			1	Relay	Relä	3
0170						headlamp	strålkastare	
0180	4	42 24 192		SAI	1	Relay	Relä	6
0190	4A	42 24 192		TURBO, A	1	Relay	Relä	6
0200						vacuum pump	vakuumpump	
0210	5	85 33 176			1	Relay	Relä	3
0220						cooling fan	kylfläkt	
0230	6	41 09 070		2)	1	Relay	Relä	5
0240						bulb check	lampkontroll	
0250	7	42 24 192			1	Relay	Relä	6
0260						fog light	dimljus	
0270	8	42 24 192			1	Relay	Relä	6
0280						horn	signalhorn	
0290	8A	42 24 192			1	Relay	Relä	6
0300						fog light	dimljus	
0310	9	95 22 061		SAI	1	Relay	Relä	5
0320	9	95 22 061			1	Relay	Relä	5
0330						intake air heat plate	värmeplatta	
0340	10	95 22 061			1	Relay	Relä	5
0350						cooling fan, 2-step	kylfläkt, 2-steg	
0360	11	85 33 176			1	Relay	Relä	3
0370						AC-compressor	AC-kompressor	
0380	12	42 24 192			1	Relay	Relä	6
0390						rear fog light	dimbaklykta	
0400	13	42 24 192		28), A	1	Relay	Relä	6
0410	14	42 38 234			1	Relay	Relä	5
0420						starter inhibitor	startspärr	
0430	15	85 33 176			1	Relay	Relä	3
0440						rear window wiper	bakrutetorkare	
0450	16	95 22 061			1	Relay	Relä	5
0460						starter switch	tändningslås	
0470	17	44 33 322			1	Relay	Relä	3
0480						overheated catalytic conv	överhettad katalysator	
0490	18	85 33 176			1	Relay	Relä	3
0500						intermittent wiper	intervalltorkare	
0510	19	95 22 061			1	Relay	Relä	5
0520						rear window	bakruta	
0530	20	85 33 176			1	Relay	Relä	3
0540						fuel pump	bränslepump	
0550	21	42 24 200			1	Relay	Relä	6
0560						washer pump	spolarpump	
0570	22	85 33 176			1	Relay	Relä	3
0580						starter relay	startrelä	
0590	23	85 33 176			1	Relay	Relä	3
0600						injektion system	insprutningssytem	
0610								


2. Front. Främre.
28. Side back up light. Sidobackljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

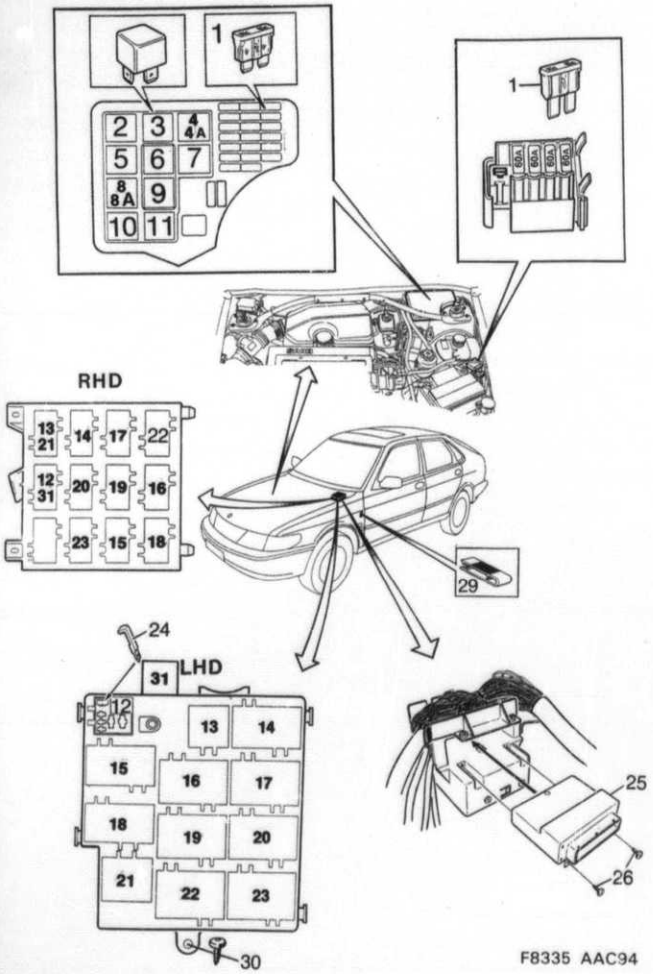

F8335 AAC94

Wiring and fuses

2-H14 Relays and fuses DICE, 1997

Ledningar och säkringar

Reläer och säkringar DICE, 1997

1215	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	24	42 30 108			X	Clamp	Klammer	4
0630								
0640	25	47 11 263		ICE	1	Electronic unit	Elektronikenhet	5
0650	26	79 70 536			2	Screw	Skruv	6
0660								
0670	29	85 87 636			1	Fuse clip	Säkringsklämma	5
0680								
0690	30	79 70 536			1	Screw	Skruv	6
0700								
0710	31	42 24 192			1	Relay rear seat	Relä baksäte	6
0720								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-H16

Relays and fuses
DICE, 1998

Reläer och säkringar
DICE, 1998

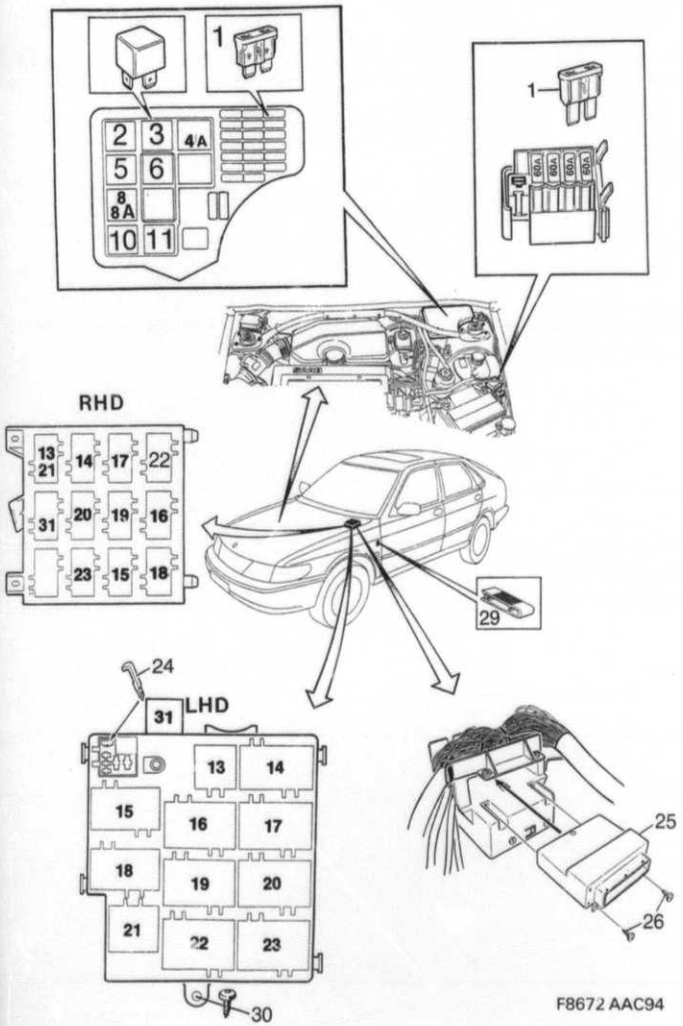

1220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 629		7,5A	X	Fuse	Säkring	1
0030	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0050	1	79 74 652		20A	X	Fuse	Säkring	1
0060	1	79 74 660		25A	X	Fuse	Säkring	1
0070	1	79 74 678		30A	X	Fuse	Säkring	1
0080	1	79 83 034		30A, MAXI	X	Fuse	Säkring	1
0090	1	40 87 698		40A	X	Fuse	Säkring	1
0100	1	79 83 042		40A, MAXI	X	Fuse	Säkring	1
0110	1	79 83 059		50A, MAXI	X	Fuse	Säkring	1
0120	1	79 83 067		60A, MAXI	X	Fuse	Säkring	1
0130								
0140	2	85 33 176			1	Relay full/dipped beam	Relä helljus/halvljus	3
0150								
0160	3	85 33 176			1	Relay headlamp	Relä strålkastare	3
0170								
0180	4A	42 24 192		TURBO, A	1	Relay vacuum pump	Relä vakuumpump	6
0190								
0200	5	85 33 176			1	Relay cooling fan	Relä kylfläkt	3
0210								
0220	6	41 09 070		2)	1	Relay bulb check	Relä lampkontroll	5
0230								
0240	8	42 24 192			1	Relay horn	Relä signalhorn	6
0250								
0260	8A	42 24 192			1	Relay fog light	Relä dimljus	6
0270								
0280	10	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
0290								
0300	11	85 33 176			1	Relay AC-compressor	Relä AC-kompressor	3
0310								
0320	13	42 24 192		28), A	1	Relay	Relä	6
0330	14	42 38 234			1	Relay starter inhibitor	Relä startspärr	5
0340								
0350	15	85 33 176			1	Relay rear window wiper	Relä bakrutetorkare	3
0360								
0370	16	95 22 061			1	Relay starter switch	Relä tändningslås	5
0380								
0390	17	44 33 322			1	Relay overheated catalytic conv	Relä överhettad katalysator	3
0400								
0410	18	85 33 176			1	Relay intermittent wiper	Relä intervalltorkare	3
0420								
0430	19	95 22 061			1	Relay rear window	Relä bakruta	5
0440								
0450	20	85 33 176			1	Relay fuel pump	Relä bränslepump	3
0460								
0470	21	42 24 200			1	Relay washer pump	Relä spolarpump	6
0480								
0490	22	85 33 176			1	Relay starter relay	Relä startrelä	3
0500								
0510	23	85 33 176			1	Relay injektion system	Relä insprutningssytem	3
0520								
0530								
0540	24	42 30 108			X	Clamp	Klammer	4
0550								
0560	25	47 11 263		ICE	1	Electronic unit	Elektronikenhet	5
0570	26	79 70 536			2	Screw	Skruv	6
0580								
0590	29	85 87 636			1	Fuse clip	Säkringsklämma	5
0600								
0610	30	79 70 536			1	Screw	Skruv	6


2. Front. Främre.
28. Side back up light. Sidobackljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

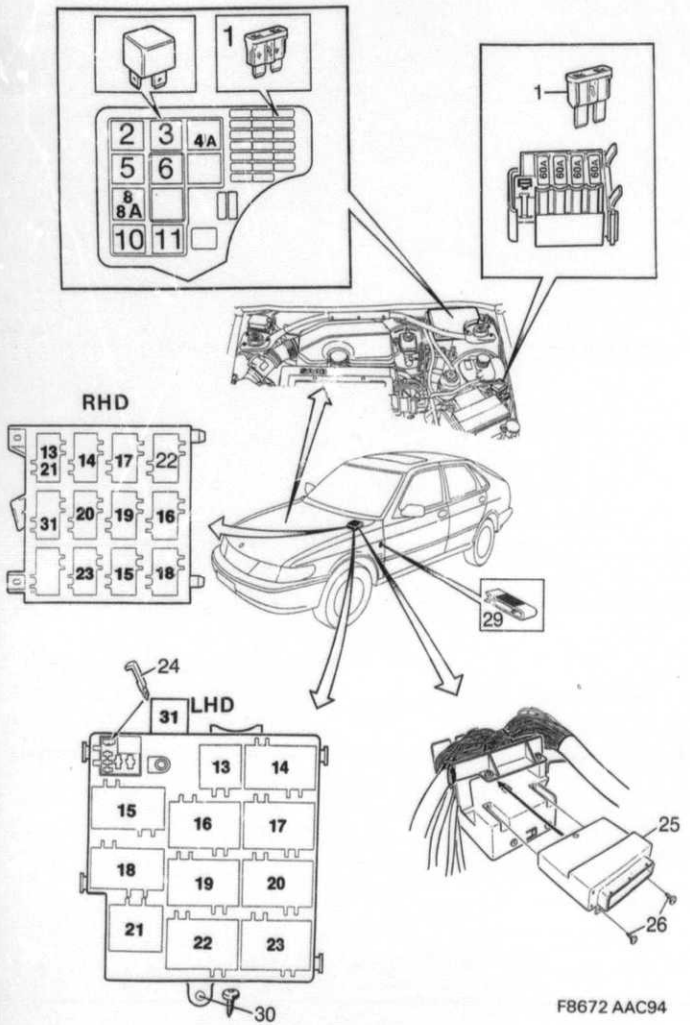

F8672 AAC94

2-H18

Relays and fuses
DICE, 1998

Reläer och säkringar
DICE, 1998


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1220								
0620								
0630	31	42 24 192			1	Relay rear seat	Relä baksäte	6
0640								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

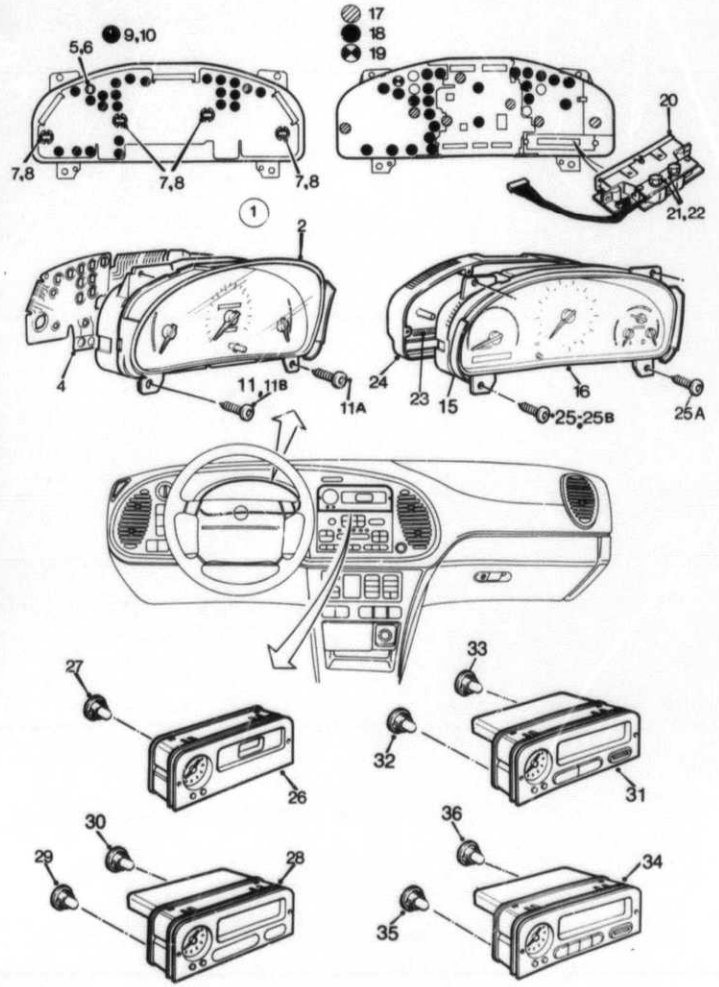

F5670 AAC94

Wiring and fuses

2 –H20 *Instrument -1995*

Ledningar och säkringar

Instrument -1995

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*42 32 229*		38,54,56), KM/H NLS – USE 4615027	1	Instrument	Instrument	4
1	46 15 027		38,55,56), KM/H	1	Instrument	Instrument	4
1	42 02 719		38,54,56), MPH, GB	1	Instrument	Instrument	
1	46 15 035		38,55,56), MPH, GB	1	Instrument	Instrument	4
2	44 88 508			1	.Casing	.Hus	6
4	44 88 524			1	.Foil	.Folie	5
5	40 87 441			1	.Bulb charge warning lamp	.Glödlampa laddningskontrollampa	3
6	40 87 565			1	.Bulb socket grey	.Lamphållare grå	4
7	40 87 466			4	.Bulb instrument lighting	.Glödlampa instrumentbelysning	4
8	95 05 520			4	.Bulb socket black	.Lamphållare svart	4
9	95 05 538			22	.Bulb warning lamp	.Glödlampa varningslampa	4
10	95 05 546			22	.Bulb socket black	.Lamphållare svart	4
11	44 88 615		39)	1	Screw kit	Skruvsats	5
11A	79 77 002			3	Screw	Skruv	5
11B	79 22 396			1	Screw	Skruv	5
15	*44 88 581*		40,165), I, KM/H NLS – USE 8549248	1	Instrument	Instrument	4
15	*45 19 930*		10,166)-1994, I, KM/H NLS – USE 4617247	1	Instrument	Instrument	4
15	46 17 247		1995-,11,94), I, KM/H	1	Instrument	Instrument	4
15	46 17 635		95), I, KM/H	1	Instrument	Instrument	4
15	44 88 607		40,167), I, MPH	1	Instrument	Instrument	4
15	*45 19 955*		10,168)-1994, I, MPH NLS - USE 4617262	1	Instrument	Instrument	4
15	46 17 262		1995-,11,96), I, MPH	1	Instrument	Instrument	4
15	46 17 650		97), I, MPH	1	Instrument	Instrument	4
15	*45 19 922*		10), 1994, TURBO, KM/H NLS – USE 4617239	1	Instrument	Instrument	4
15	46 17 239		1995-,11,98), TURBO, KM/H	1	Instrument	Instrument	4
15	46 17 627		99), TURBO, KM/H	1	Instrument	Instrument	4

10. CV, ch. –S7009999
11. CV, ch. S7010000–
38. Without tachometer. Utan varvräknare.
39. Repair kit. Reparationssats.
40. State chassis number and mileage. Uppge chassinummer och vägmätarställning.
54. Ch –R2038507.
55. Ch R2038508–.
56. State mileage. Uppge vägmätarställning.
94. Ch –S2016982, –S7013677.
95. Ch S2016983–, S7013678–.
96. Ch –S2014196, –S7014997.
97. Ch S2014197–, S7014998–.
98. Ch –S2014973, –S7013367.
99. Ch S2014974–, S7013368–.
165. Ch –R2015979.
166. Ch R2015930–.
167. Ch –R2015952.
168. Ch R2015393–.
199. Ch S2039223–, S7021969–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2 -H22 *Instrument -1995*

Instrument -1995

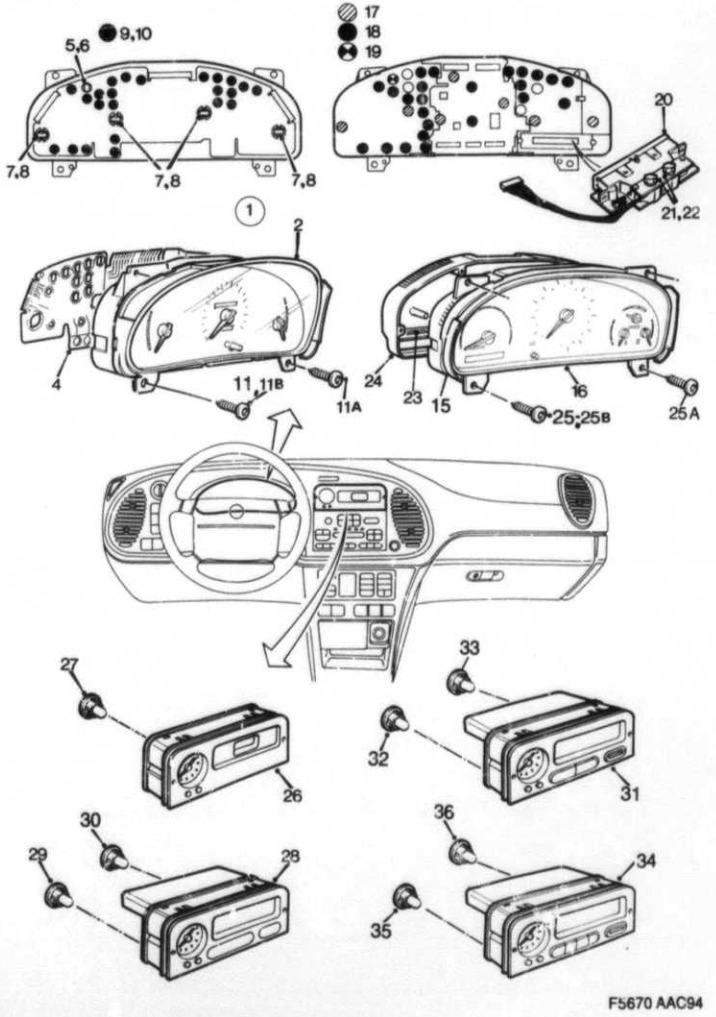

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400	15	*45 19 948*		10), 1994, TURBO, MPH NLS – USE 4617254	1	Instrument	Instrument	4
0410	15	46 17 254		1995-,11,100), TURBO, MPH	1	Instrument	Instrument	4
0430	15	46 17 643		101), TURBO, MPH	1	Instrument	Instrument	4
0440	16	44 88 532			1	.Casing	.Hus	6
0450	17	40 87 383			7	.Bulb instrument lighting green	.Glödlampa instrumentbelysning grön	3
0480	18	40 87 409			24	.Bulb warning lamp black	.Glödlampa varningslampa svart	3
0510	19	40 87 425			1	.Bulb charge warning lamp blue	.Glödlampa laddningskontrollampa blå	3
0550	20	44 88 540			1	Odometer	Vägmätare	4
0560	21	40 87 441			2	.Bulb	.Glödlampa	3
0570	22	40 87 565			2	.Bulb socket grey	.Lamphållare grå	4
0600	23	44 88 557		40,65,171), I	1	Rear section	Bakstycke	4
0610	23	*45 19 963*		172,181,194), I NLS – USE 4711214	1	Rear section	Bakstycke	4
0620	23	*45 19 963*		181,196), TURBO NLS – USE 4711214	1	Rear section	Bakstycke	4
0630	23	*46 17 619*		181,195,197) NLS – USE 4711214	1	Rear section	Bakstycke	4
0640	24	44 88 565			1	.Cover	.Kåpa	4
0660	25	44 88 615		39)	1	Screw kit	Skruvsats	5
0670	25A	79 77 002			3	Screw	Skruv	5
0680	25B	79 22 396			1	Screw	Skruv	5
0700	26	*42 32 153*		7,38,173) NLS – USE 4519419	1	Information display SID 1	Informationsdisplay SID 1	5
0720	26	45 19 419		38,174)	1	Information display SID 1	Informationsdisplay SID 1	5
0740	27	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0760	28	44 10 817		7,38,41,173)	1	Information display SID 4	Informationsdisplay SID 4	5

7. Also available as exchange unit. Finns även som utbytesenhet.
10. CV, ch. –S7009999
11. CV, ch. S7010000–
38. Without tachometer. Utan varvräknare.
39. Repair kit. Reparationssats.
40. State chassis number and mileage. Uppge chassinummer och vägmätarställning.
41. With audio system. Med ljudsystem.
65. State whether the speedometer is graduated in km/h or in mph. Uppge om hastighetsmätaren är graderad i KM/H eller i MPH.
100. Ch –S2018151.
101. Ch S2018152–.
171. Ch –R2015979, I KM/H. Ch –R2015392, I MPH.
172. Ch R2015980–, I KM/H. Ch R2015393–, I MPH.
173. Ch –R2035949.
174. Ch R2035950–.
181. Programmed using an TECH 2 Scan Tool. Programmeras med TECH 2.
194. Ch –S2016982, –S7013676, I KM/H. Ch –S2014196, –S7014997, I MPH.
195. Ch S2016983–, S7013677–, I KM/H. Ch S2014197–, S7014998–, I MPH.
196. Ch –S2014973, –S7013367, TURBO KM/H. Ch –S2018151, TURBO MPH.
197. Ch S2014974–, S7013368–, TURBO KM/H. Ch S2018152–, TURBO MPH.
199. Ch S2039223–, S7021969–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

2-H24 *Instrument -1995*

Instrument -1995

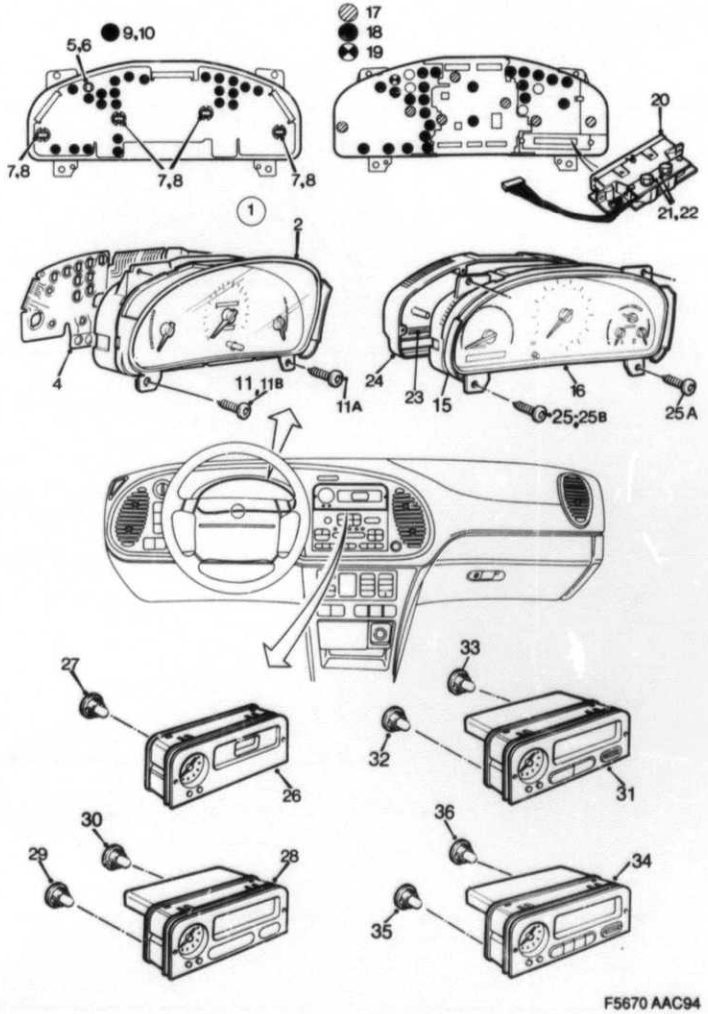

F5670 AAC94

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0780	28	*45 19 203*		38,41,174)-1994	1	Information display	Informationsdisplay	5
0790				NLS – USE 4617346		SID 4	SID 4	
0800	28	46 17 346		38,41), 1995	1	Information display	Informationsdisplay	5
0810						SID 4	SID 4	
0820	29	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
0830	30	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0840								
0850	31	42 32 187		7,44,173)	1	Information display	Informationsdisplay	5
0860						SID 2	SID 2	
0870	31	*45 19 187*		44,174)-1994	1	Information display	Informationsdisplay	5
0880				NLS – USE 4617320		SID 2	SID 2	
0890	31	46 17 320		44), 1995	1	Information display	Informationsdisplay	5
0900						SID 2	SID 2	
0910	32	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
0920	33	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0930								
0940	34	42 32 179		7,43,44,173)	1	Information display	Informationsdisplay	5
0950						SID 3	SID 3	
0960	34	*45 19 195*		43,44,174)-1994	1	Information display	Informationsdisplay	5
0970				NLS – USE 4617338		SID 3	SID 3	
0980	34	46 17 338		43,44,), 1995	1	Information display	Informationsdisplay	5
0990						SID 3	SID 3	
1000	35	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
1010	36	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3


7. Also available as exchange unit. Finns även som utbytesenhet.
38. Without tachometer. Utan varvräknare.
41. With audio system. Med ljudsystem.
43. With driving computer. Med färddator.
44. With tachometer. Med varvräknare.
173. Ch –R2035949.
174. Ch R2035950–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

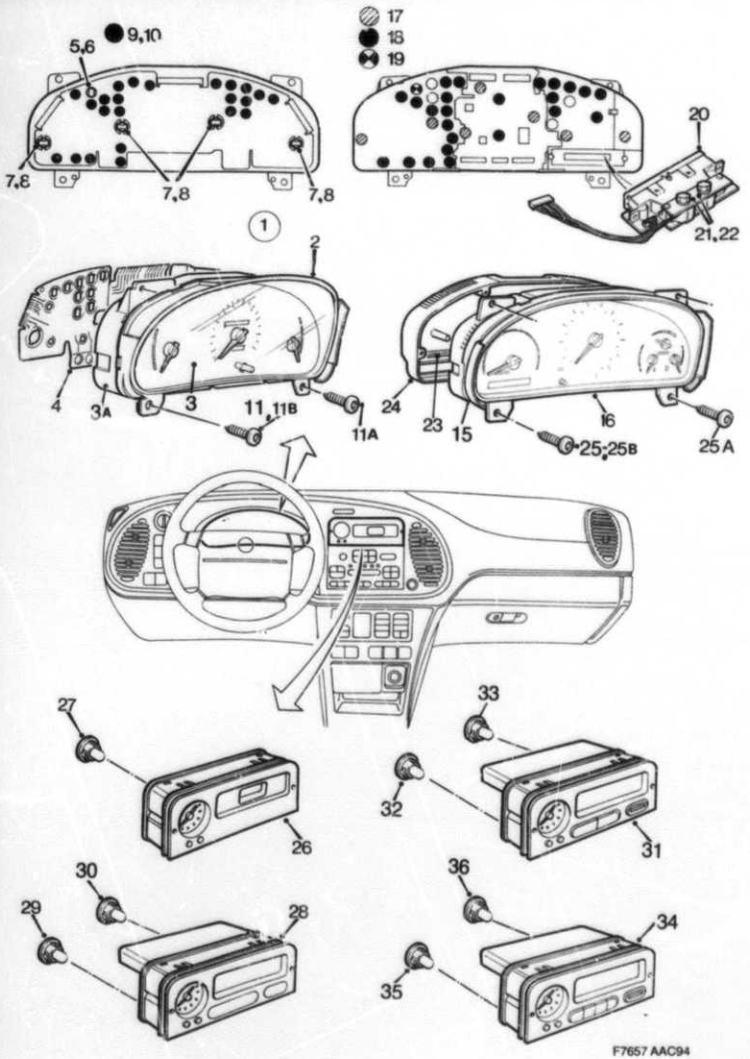

Wiring and fuses

2-102

Instrument

1996-

Ledningar och säkringar

Instrument

1996-

1255	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 17 569		118), KM/H	1	Instrument	Instrument	4
0020	1	46 17 577		118), MPH, GB	1	Instrument	Instrument	4
0030	2	44 88 508			1	.Casing	.Hus	6
0040	3	46 19 961			1	.Instrument	.Instrument	4
0050	3	46 19 979		MPH	1	.Instrument	.Instrument	4
0060	3A	46 19 425			1	.Cover	.Kåpa	4
0070	4	46 19 268			1	.Foil	.Folie	5
0080	5	40 87 441			1	.Bulb charge warning lamp	.Glödlampa laddningskontrollampa	3
0090								
0100	6	40 87 565			1	.Bulb socket grey	.Lamphållare grå	4
0110								
0120	7	40 87 466			4	.Bulb instrument lighting	.Glödlampa instrumentbelysning	4
0130								
0140	8	95 05 520			4	.Bulb socket black	.Lamphållare svart	4
0150								
0160	9	95 05 538			22	.Bulb warning lamp	.Glödlampa varningslampa	4
0170								
0180	10	95 05 546			22	.Bulb socket black	.Lamphållare svart	4
0190								
0200								
0210	11	44 88 615		39)	1	Screw kit	Skruvsats	5
0220	11A	79 77 002			3	Screw	Skruv	5
0230	11B	79 22 396			1	Screw	Skruv	5
0240								
0250	15	46 17 635		I, KM/H	1	Instrument	Instrument	4
0260								
0270	15	46 17 650		I, MPH	1	Instrument	Instrument	4
0280								
0290	15	46 17 627		TURBO, KM/H	1	Instrument	Instrument	4
0300								
0310	15	46 17 643		TURBO, MPH	1	Instrument	Instrument	4
0320	16	44 88 532			1	.Casing	.Hus	6
0330	17	40 87 383			7	.Bulb instrument lighting green	.Glödlampa instrumentbelysning grön	3
0340								
0350								
0360	18	40 87 409			24	.Bulb warning lamp black	.Glödlampa varningslampa svart	3
0370								
0380								
0390	19	40 87 425			1	.Bulb charge warning lamp blue	.Glödlampa laddningskontrollampa blå	3
0400								
0410								
0420								
0430	20	44 88 540			1	Odometer	Vägmätare	4
0440	21	40 87 441			2	.Bulb	.Glödlampa	3
0450	22	40 87 565			2	.Bulb socket grey	.Lamphållare grå	4
0460								
0470								
0480	23	*46 19 615*		137,181) NLS – USE 4711214	1	Rear section	Bakstycke	4
0480								
0490	23	47 11 214		138,181)	1	Rear section	Bakstycke	4
0500	24	44 88 565			1	.Cover	.Kåpa	4
0510								
0520	25	44 88 615		39)	1	Screw kit	Skruvsats	5
0530	25A	79 77 002			3	Screw	Skruv	5
0540	25B	79 22 396			1	Screw	Skruv	5
0550								


39. Repair kit. Reparationssats.
118. Without digital odometer. Utan digital vägmätare.
137. Ch -T2034392.
138. Ch T2034393-.
181. Programmed using an TECH 2 Scan Tool. Programmeras med TECH 2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

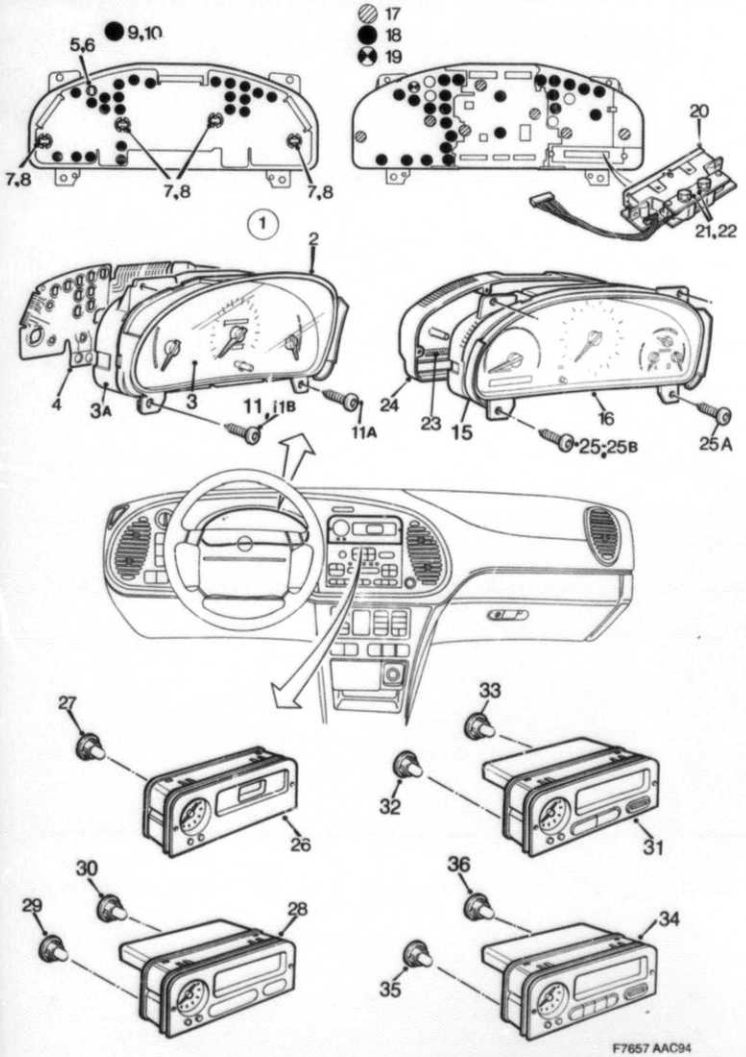

Wiring and fuses

2-I04

Instrument

1996-

Ledningar och säkringar

Instrument

1996-

1255	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	26	45 19 419			1	Information display	Informationsdisplay	5
0570						SID 1	SID 1	
0580	27	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0590								
0600	28	46 17 346		41)	1	Information display	Informationsdisplay	5
0610						SID 4	SID 4	
0620	29	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
0630	30	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0640								
0650	31	46 17 320		44)	1	Information display	Informationsdisplay	5
0660						SID 2	SID 2	
0670	32	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
0680	33	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3
0690								
0700	34	46 17 338		43,44)	1	Information display	Informationsdisplay	5
0710						SID 3	SID 3	
0720	35	40 87 417		1,1 WATT	3	.Bulb	.Glödlampa	3
0730	36	40 87 482		1,8 WATT	3	.Bulb	.Glödlampa	3


41. With audio system. Med ljudsystem.
43. With driving computer. Med färddator.
44. With tachometer. Med varvräknare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

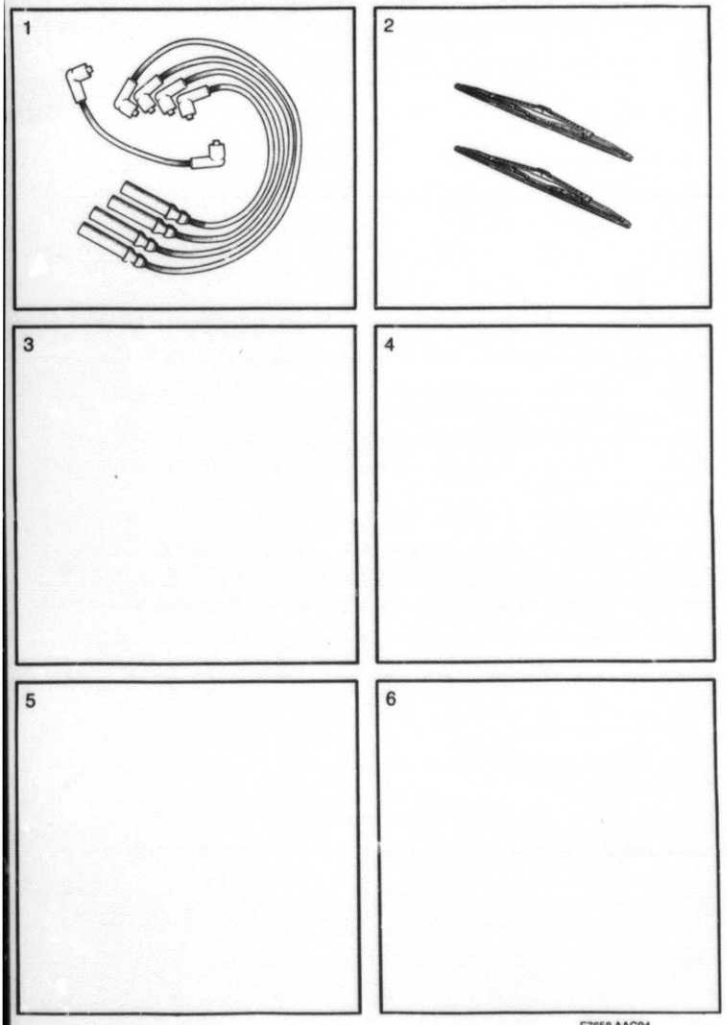

F7658 AAC94

Complete sets
2-I06
Electrical system

Satser
Elektriskt system

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 21 910		4-CYL., I	X	Kit ignition cables	Tändkabelsats	8
0020		42 39 000			1	.Ignition lead ignition coil	.Tändkabel tändspole	8
0030								
0040		91 46 895			1	.Ignition lead cylinder 1	.Tändkabel cylinder 1	8
0050								
0060		91 46 903			1	.Ignition lead cylinder 2	.Tändkabel cylinder 2	8
0070								
0080		91 46 911			1	.Ignition lead cylinder 3	.Tändkabel cylinder 3	8
0090								
0100		91 46 929			1	.Ignition lead cylinder 4	.Tändkabel cylinder 4	8
0110								
0120								
0130	1	47 70 194		6-CYL.	X	Kit ignition cables cyl. 1, 3, 5	Tändkabelsats cyl. 1, 3, 5	8
0140								
0150								
0160	1	47 70 178		6-CYL.	1	.Kit ignition cables cyl. 2, 4, 6	.Tändkabelsats cyl. 2, 4, 6	8
0170								
0180								
0190	2	*85 49 297*		-1997	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	1
0200				NLS – USE 8549560				
0210		44 48 643			2	.Wiper blade	.Torkarblad	3
0220	2	* 85 49 560		1998-	X	Wiper blade kit windscreen wiper	Torkarbladssats vindrutetorkare	1
0230								
0240		* 49 59 698			2	.Wiper blade	.Torkarblad	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A10
Starter	2-A16
Ignition system	2-A20
Lighting	2-B08
Electrical equipment, other	2-C02
Wiring and fuses	2-D16
Complete sets	2-I06

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

TABLE OF CONTENTS

Connectors		
Connectors etc, 1994	3B : 5	2-J06
Connectors etc, 1995	3B : 63	2-L16
Connectors etc, 1996	3B : 137	3-C22
Connectors etc, 1997-	3B : 217	3-G06
Cable terminals		
Cable terminals, 1994	3B : 297	3-J14
Cable terminals, 1995	3B : 301	3-J18
Cable terminals, 1996	3B : 307	3-J24
Cable terminals, 1997-	3B : 313	3-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

2-J03

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1994	3B : 5	2-J06
Kontakthus etc, 1995	3B : 63	2-L16
Kontakthus etc, 1996	3B : 137	3-C22
Kontakthus etc, 1997-	3B : 217	3-G06

Ledningsskor

Ledningsskor, 1994	3B : 297	3-J14
Ledningsskor, 1995	3B : 301	3-J18
Ledningsskor, 1996	3B : 307	3-J24
Ledningsskor, 1997-	3B : 313	3-K06

2-J04

SUMARIO

Contactores

Contactores etc, 1994	3B : 5	2-J06
Contactores etc, 1995	3B : 63	2-L16
Contactores etc, 1996	3B : 137	3-C22
Contactores etc, 1997-	3B : 217	3-G06

Terminal cable


Terminal cable etc, 1994	3B : 297	3-J14
Terminal cable etc, 1995	3B : 301	3-J18
Terminal cable etc, 1996	3B : 307	3-J24
Terminal cable etc, 1997-	3B : 313	3-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

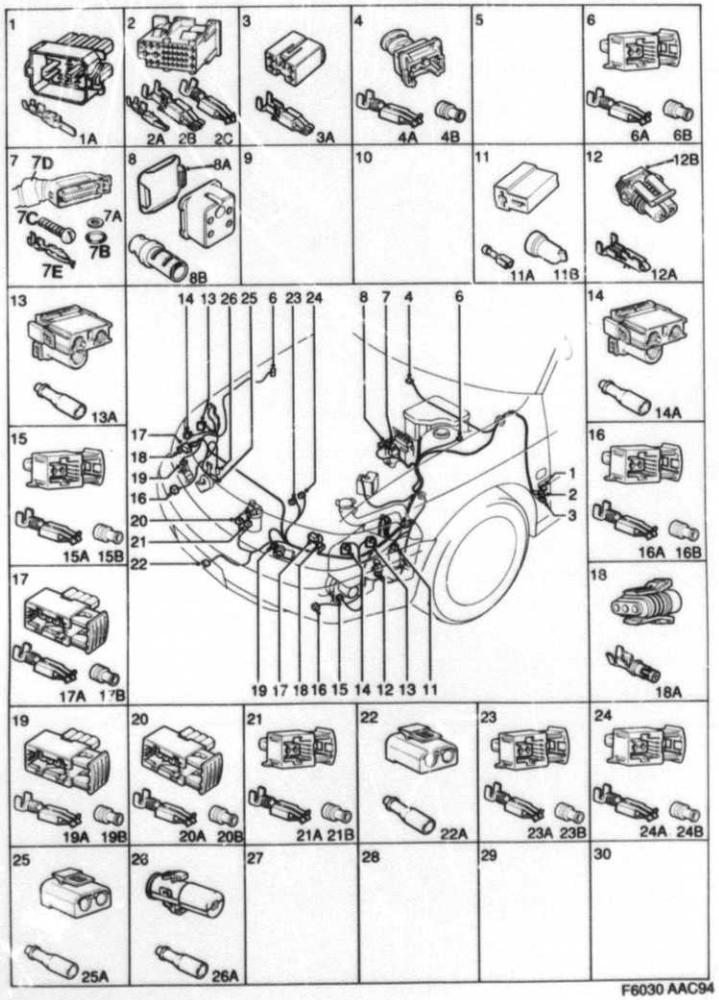

F6030 AAC94

Contact housing etc

2-J06

Front

1994

Kontakthus etc

Främre

1994


0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 461			1	Connector housing	Skarvhus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	1	Cable terminal	Kabelsko	8
0120								
0130	3	91 23 555			1	Contact housing	Kontakthus	4
0140						4-pole, female	4-polig, hylsa	
0150						connection	skarv	
0160	3A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	4	41 78 414			1	Connector housing	Kontakthus	8
0190						2-pole, female	2-polig, hylsa	
0200						SAI	SAI	
0210	4A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220	4B	40 61 966		Ø 1,2-2,0 MM	1	Seal	Tätning	5
0230	4B	40 61 974		Ø 2,1-2,9 MM	1	Seal	Tätning	5
0240								
0250	6	41 13 205			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						sensor, ABS	sensor, ABS	
0280	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	6B	40 61 966		Ø 1,2-2,0 MM	2	Seal	Tätning	5
0300								
0310	7	42 24 580			1	Connector housing	Kontakthus	4
0320						25-pole, female	25-polig, hylsa	
0330						module, ABS	modul, ABS	
0340	7A	85 87 461			1	.Seal	.Tätning	5
0350	7B	44 12 888			1	.O-ring	.O-ring	2
0360	7C	42 23 467			1	.Screw	.Skruv	5
0365	7D	44 12 862			1	.Rubber protection	.Gummiskydd	4
0370	7E	40 63 970		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0380								
0390	8	44 08 894			1	Connector housing	Kontakthus	4
0400						4-pole, female	4-polig, hylsa	
0410						module, ABS	modul, ABS	
0420	8A	44 08 902			1	Locking	Låsning	4
0430	8B	95 09 746			4	Cable terminal	Kabelsko	5
0440								
0450	11	42 01 315			1	Connector housing	Kontakthus	4
0460						2-pole, female	2-polig, hylsa	
0470						washer pump	spolarpump	
0480	11A	44 64 442		AREA 0,5-10, MM2	2	Cable terminal	Kabelsko	5
0490	11B	42 24 531			1	Protection	Skydd	4
0500								
0510	12	42 01 224			1	Connector housing	Kontakthus	5
0520						2-pole, female	2-polig, hylsa	
0530						level guard	nivåvakt	
0540	12A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0550	12B	42 01 232			1	Locking	Låsning	4
0560								
0570	13	95 19 679			1	Contact housing	Kontakthus	4
0580						3-pole, female	3-polig, hylsa	
0590						reverse lamp	backlampa	
0600	13A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

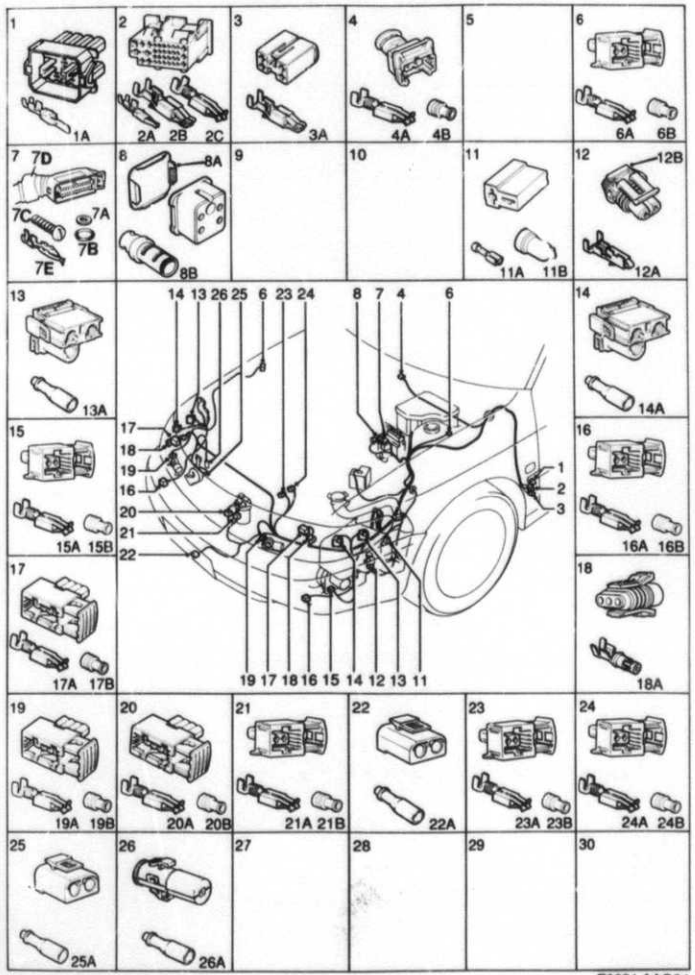

F6031 AAC94

Contact housing etc

2 -J08

Front

1994

Kontakthus etc

Främre

1994


0102	Pcs	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	14	95 19 679			1	Contact housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						direction indicator	blinkers	
0040	14A	85 47 804		AREA 2,5-4,0 MM2	3	Connector	Skarvstycke	5
0050								
0060	15	41 13 403			1	Connector housing	Kontakthus	8
0070						2-pole, female	2-polig, hylsa	
0080						air pump	luftpump	
0090	15A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100	15B	43 54 387		Ø 3,4-3,7 MM	2	Seal	Tätning	5
0110								
0120	16	41 13 205			1	Connector housing	Kontakthus	8
0130						2-pole, female	2-polig, hylsa	
0140						front fog light	dimstrålkastare	
0150	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160	16B	40 61 966		Ø 5,6MM	2	Seal	Tätning	5
0170								
0180	17	41 13 601			1	Connector housing	Kontakthus	8
0190						4-pole, female	4-polig, hylsa	
0200						headlamp	strålkastare	
0210	17A	40 61 586		AREA1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0220	17B	40 61 966		AREA 1,2-2,0 MM2	1	Seal	Tätning	5
0230	17B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0240								
0250	18	44 11 260			1	Connector housing	Kontakthus	4
0260						3-pole, female	3-polig, hylsa	
0270						headlamp levelling	ljuslängdsreglering	
0280	18A	44 11 278		AREA 0,75-1,0 MM2	3	Cable terminal	Kabelsko	5
0290								
0300	19	41 13 601			1	Connector housing	Kontakthus	8
0310						4-pole, female	4-polig, hylsa	
0320						headlamp wiper	strålkastartorkare	
0330	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0340	19B	40 61 966		AREA 1,2-2,0 MM2	3	Seal	Tätning	5
0350								
0360	20	41 13 601			1	Connector housing	Kontakthus	8
0370						4-pole, female	4-polig, hylsa	
0380						pressure monitor	tryckvakt	
0390	20A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0400	20B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0410								
0420	21	41 13 205			1	Connector housing	Kontakthus	8
0430						2-pole, female	2-polig, hylsa	
0440						pressure monitor	tryckvakt	
0450	21A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0460	21B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0470								
0480	22	95 03 319			1	Contact housing	Kontakthus	4
0490						2-pole, female	2-polig, hylsa	
0500						outer temp	yttertemp	
0510	22A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5
0520								
0530	23	41 13 403			1	Connector housing	Kontakthus	8
0540						2-pole, female	2-polig, hylsa	
0550						cooling fan, 2-step	kylfläkt, 2-steg	
0560	23A	43 54 171		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
0570	23B	43 54 387		Ø 3,4-3,7 MM	1	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

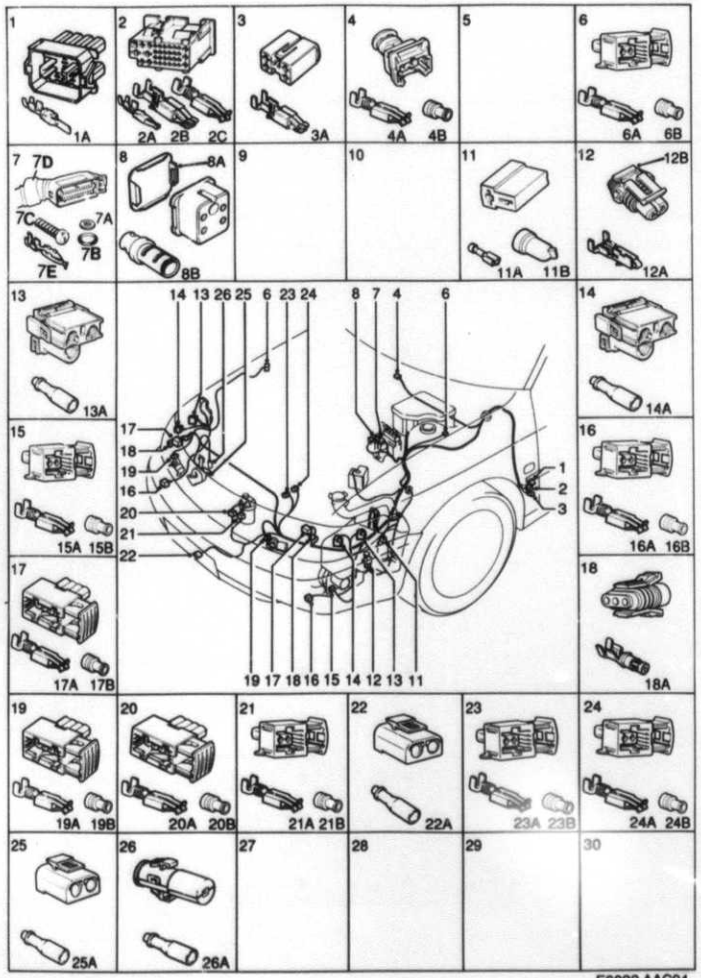

F6032 AAC94

Contact housing etc

2-J10

Front

1994

Kontakthus etc

Främre

1994


0104	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	24	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						cooling fan	kylfläkt	
0040	24A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050	24B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0060								
0070	25	41 13 205			1	Connector housing	Kontakthus	8
0080						2-pole, female	2-polig, hylsa	
0090						horn	signalhorn	
0100	25A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	26	95 03 418			1	Connector housing	Skarvhus	4
0130						1-polig, hylsa	1-polig, hylsa	
0140						compressor	kompressor	
0150	26A	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

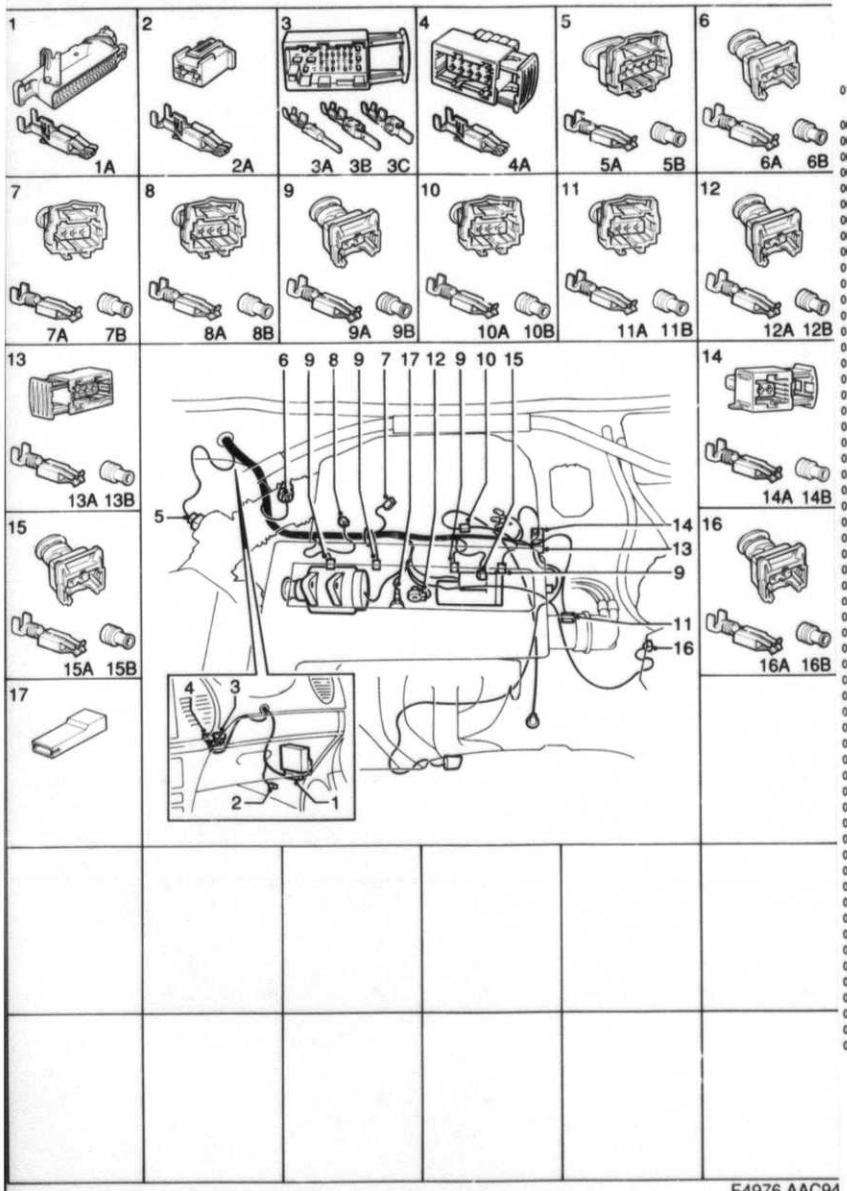

F4976 AAC94


Pos	Part No/Art nr	K S	Notes/Anmärkningar	O Antal	Description	Benämning	S L
1	42 22 311			1	Connector housing 55-pole, female electronic unit Motronic	Kontakthus 55-polig, hylsa elektronikenhet Motronic	4
1A	91 20 957		AREA 1,0-2,5 MM2	44	Cable terminal	Kabelsko	8
2	91 23 548			1	Contact housing 2-pole, female connection coding	Kontakthus 2-polig, hylsa skarv kodifiering	4
2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
3	41 73 852			1	Contact housing 33-pole, male connection	Kontakthus 33-polig, stift skarv	4
3A	41 15 457		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	5
3B	41 15 077		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
4	41 14 005			1	Connector housing 10-pole, female connection	Kontakthus 10-polig, hylsa skarv	8
4A	91 20 957		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
5	44 32 357			1	Connector housing 4-pole, female mass air flow sensor	Kontakthus 4-polig, hylsa luftmassamätare	8
5A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
5B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
6	41 78 414			1	Connector housing 2-pole, female EVAP CP valve	Kontakthus 2-polig, hylsa urluftningsventil	8
6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
7	44 32 316			1	Connector housing 3-pole, female throttle position sensor	Kontakthus 3-polig, hylsa lägesgivare	8
7A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
7B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
8	44 32 324			1	Connector housing 3-pole, female idle speed control	Kontakthus 3-polig, hylsa tomgångsreglering	8
8A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
8B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
9	41 78 414			1	Connector housing 2-pole, female injection valves	Kontakthus 2-polig, hylsa insprutningsventiler	8
9A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
9B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
10	44 32 316			1	Connector housing 3-pole, female crank shaft sensor	Kontakthus 3-polig, hylsa vevaxelgivare	8
10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

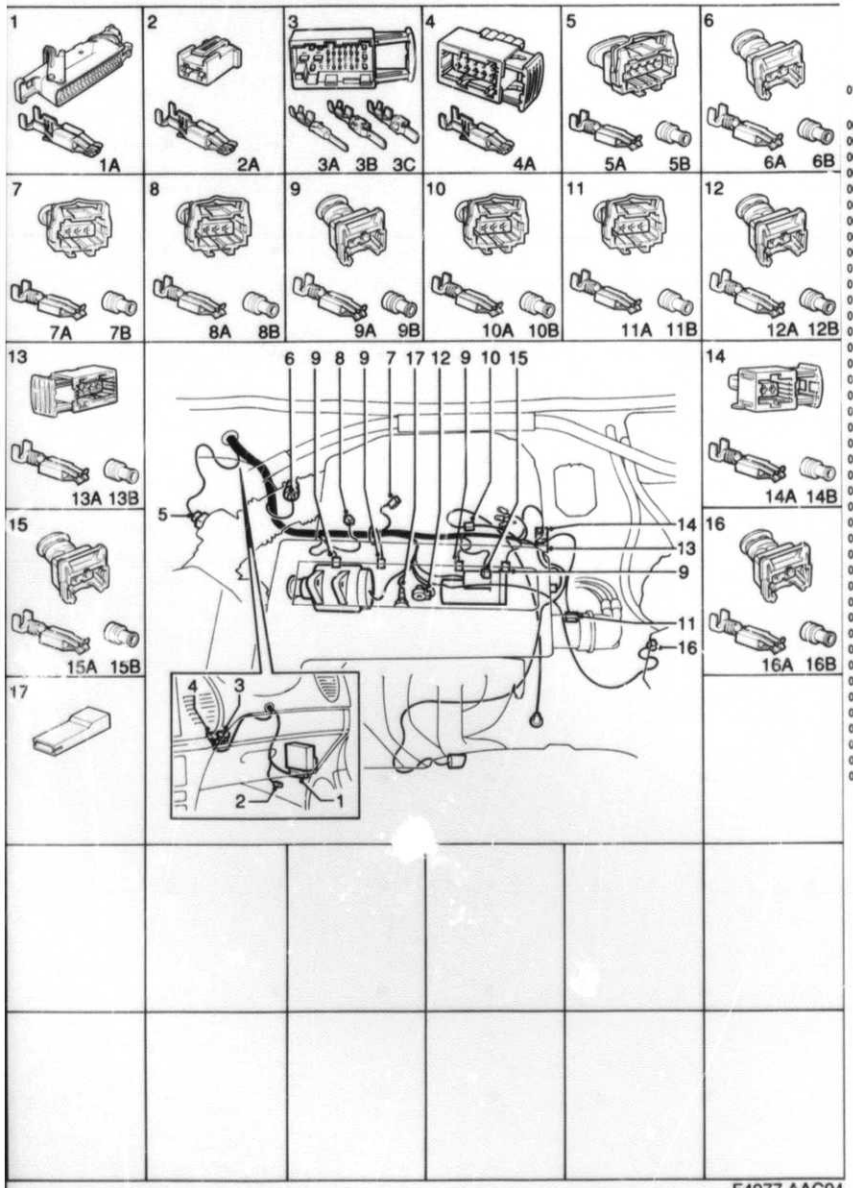

F4977 AAC94

2-J14

Contact housing etc

Engine, B206 I, B234 I

1994

Kontakthus etc

Motor, B206 I, B234 I

1994


0152	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 316			1	Connector housing	Kontakthus	8
0020						3-pole, female	3-polig, hylsa	
0030						sensor	givare	
0040						camshaft	kamaxel	
0050	11A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0070								
0080	12	41 78 414			1	Connector housing	Kontakthus	8
0090						2-pole, female	2-polig, hylsa	
0100						knock-sensor	knacksensor	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0130								
0140	13	41 13 601			1	Connector housing	Kontakthus	9
0150						4-pole, female	4-polig, hylsa	
0160						lambda sonde	lambdasond	
0170	13A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0180	13B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0190								
0200	14	41 13 205			1	Connector housing	Kontakthus	8
0210						2-pole, female	2-polig, hylsa	
0220						temperature sensor	temperarturgivare	
0230						coolant	kylvätska	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0260								
0270	15	41 78 414			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperarturgivare	
0300						coolant	kylvätska	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						ignition coil	tändspole	
0370	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

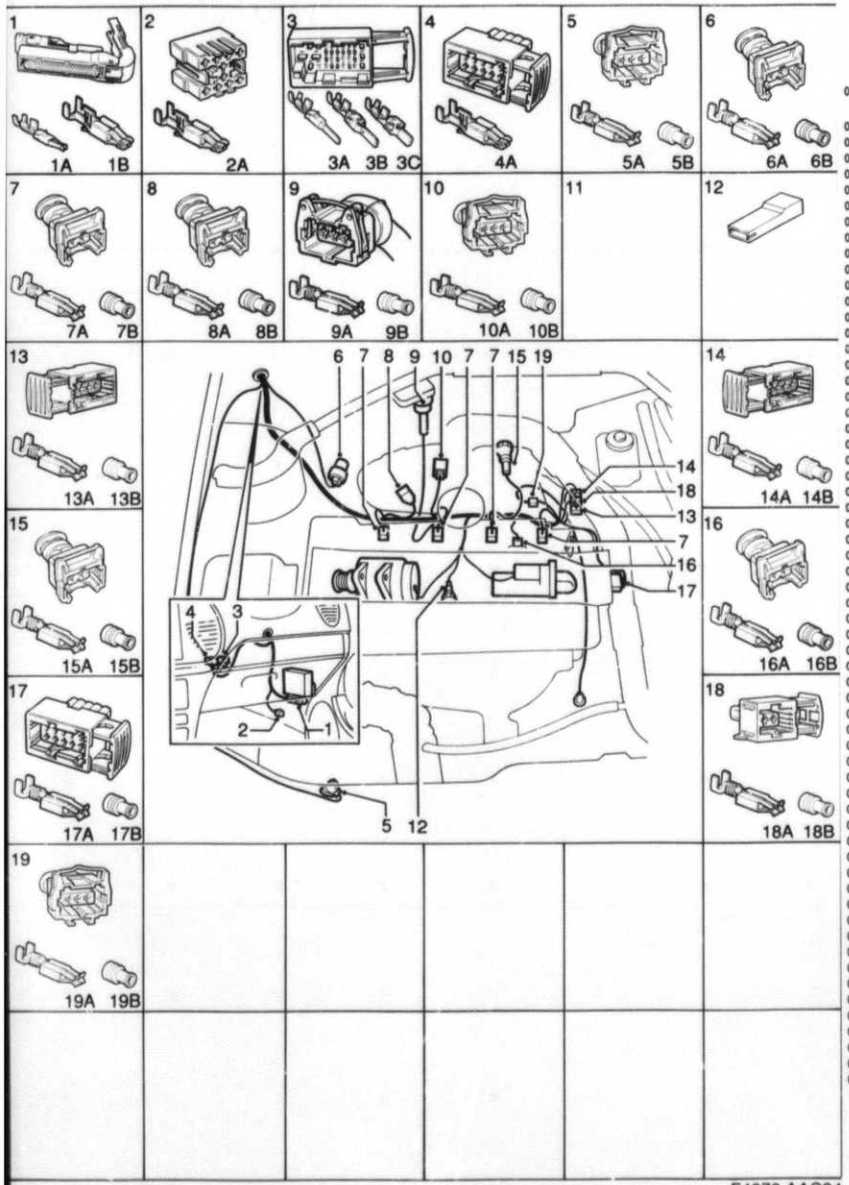

F4978 AAC94

2-J16

Contact housing etc
Engine, B204 L
1994

Kontakthus etc
Motor, B204 L
1994


	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0170								
0010	1	41 76 616			1	Connector housing	Kontakthus	8
0020						70-pole, female	70-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Trionic	Trionic	
0050	1A	41 15 499		AREA 0,5-1,0 MM2	46	Cable terminal	Kabelsko	8
0060	1B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0070								
0080	2	91 23 399			1	Connector housing	Skarvhus	4
0090						10-pole, female	10-polig, hylsa	
0100						test connection	testuttag	
0110	2A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	3A	41 15 457		AREA 0,5-1,0 MM2	19	Cable terminal	Kabelsko	5
0170	3B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	4	41 14 005			1	Connector housing	Kontakthus	8
0210						10-pole, female	10-polig, hylsa	
0220						connection	skarv	
0230	4A	91 20 957		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
0240								
0250	5	44 32 316			1	Connector housing	Kontakthus	8
0260						3-pole, female	3-polig, hylsa	
0270						solenoid valve	magnetventil	
0280						APC	APC	
0290	5A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0300	5B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0310								
0320	6	41 78 414			1	Connector housing	Kontakthus	8
0330						2-pole, female	2-polig, hylsa	
0340						EVAP CP valve	urluftningsventil	
0350	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0370								
0380	7	41 78 414			1	Connector housing	Kontakthus	8
0390						2-pole, female	2-polig, hylsa	
0400						injection valves	insprutningsventiler	
0410	7A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0420	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0430								
0440	8	41 78 414			1	Connector housing	Kontakthus	8
0450						2-pole, female	2-polig, hylsa	
0460						idle speed control	tomgångsreglering	
0470	8A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0480	8B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0490								
0500	9	44 32 316			1	Connector housing	Kontakthus	8
0510						3-pole, female	3-polig, hylsa	
0520						pressure sensor	tryckgivare	
0530						intake manifold	inloppsrör	
0540	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0550	9B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0560								
0570	10	44 32 316			1	Connector housing	Kontakthus	8
0580						3-pole, female	3-polig, hylsa	
0590						throttle position sensor	spjällägesgivare	
0600	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0610	10B	40 61 974		AREA 1,0-2,5 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

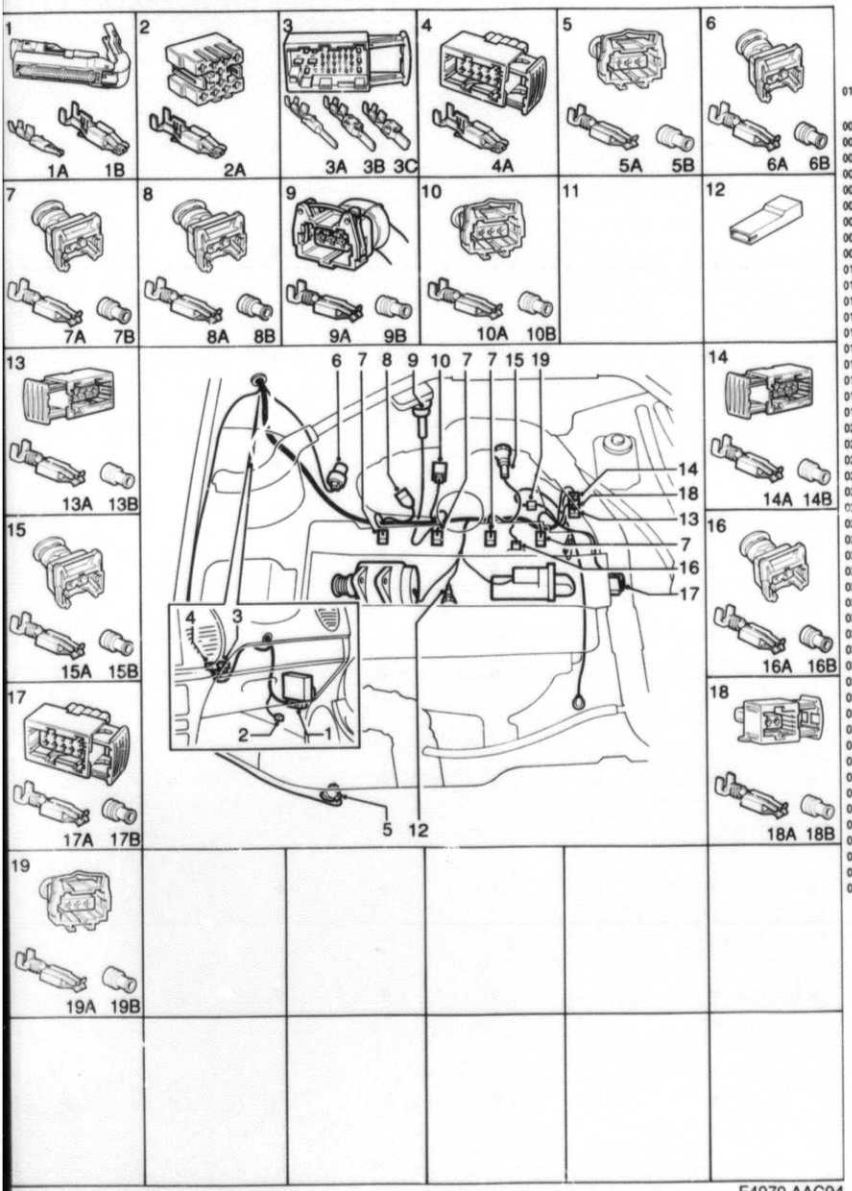

F4979 AAC94

2-J18

Contact housing etc
Engine, B204 L
1994

Kontakthus etc
Motor, B204 L
1994


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0172								
0010	12	44 09 801			1	Cable terminal	Kabelsko	5
0020						1-pole, female	1-polig, hylsa	
0030						EOP sensor	oljetrycksgivare	
0040								
0050	13	41 13 601			1	Connector housing	Kontakthus	8
0060						4-pole, female	4-polig, hylsa	
0070						lambda sonde	lambdasond	
0080						engine	motor	
0090	13A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100	13B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0110								
0120	14	41 13 601			1	Connector housing	Kontakthus	8
0130						4-pole, female	4-polig, hylsa	
0140						lambda sonde	lambdasond	
0150						TW catalytic converter	katalysator	
0160	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170	14B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0180								
0190	15	41 78 414			1	Connector housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						temperature sensor	temperarturgivare	
0220	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0230	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0240								
0250	16	41 78 414			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						temperature sensor	temperarturgivare	
0280						coolant	kylvätska	
0290	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	17	41 14 005			1	Connector housing	Kontakthus	8
0330						10-pole, female	10-polig, hylsa	
0340						ignition discharge module	tändkasset	
0350	17A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0360	17B	40 61 974		AREA 2,1-2,9 MM2	9	Seal	Tätning	5
0370								
0380	18	41 13 205			1	Connector housing	Kontakthus	8
0390						2-pole, female	2-polig, hylsa	
0400						temperature sensor	temperarturgivare	
0410						coolant	kylvätska	
0420	18A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	18B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	19	44 32 324			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						crank shaft sensor	vevaxelgivare	
0480	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490	19B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	5-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

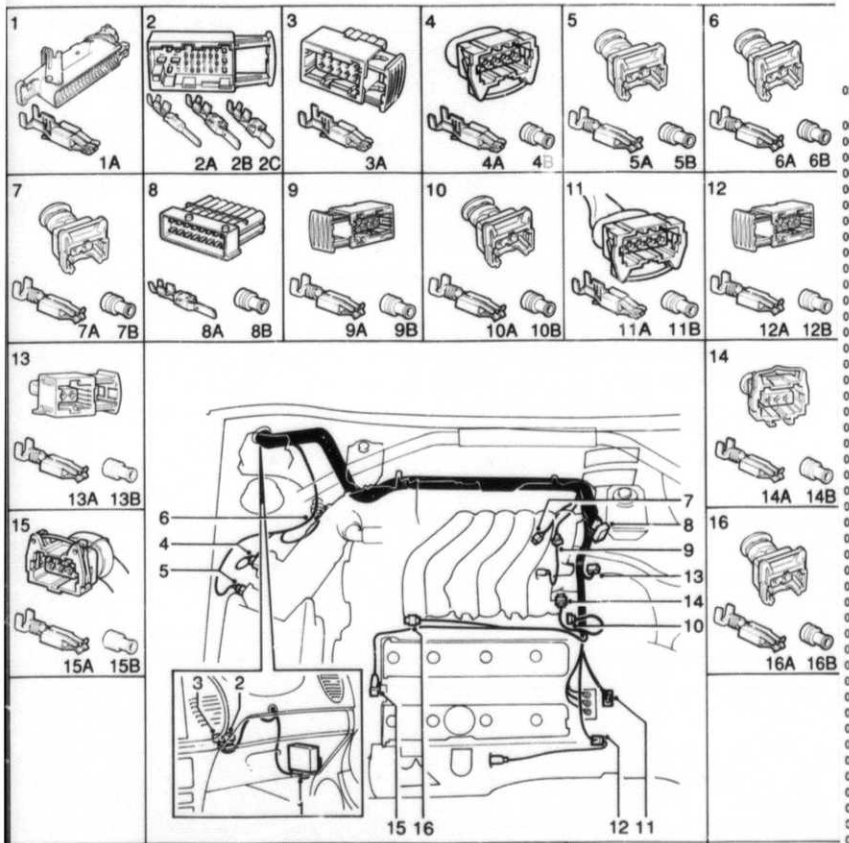

F4980 AAC94

Contact housing etc

2 –J20

Engine, B258 I

1994

Kontakthus etc

Motor, B258 I

1994


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0250								
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	46	Cable terminal	Kabelsko	8
0060								
0070	2	41 73 852			1	Contact housing	Kontakthus	4
0080						33-pole, male	33-polig, stift	
0090						connection	skarv	
0100	2A	41 15 457		AREA 0,5-1,0 MM2	17	Cable terminal	Kabelsko	5
0110	2B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0120	2C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0130								
0140	3	41 14 005			1	Connector housing	Kontakthus	8
0150						10-pole, female	10-polig, hylsa	
0160						connection	skarv	
0170	3A	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0180								
0190	4	44 32 357			1	Connector housing	Kontakthus	8
0200						4-pole, female	4-polig, hylsa	
0210						mass air flow sensor	luftmassamätare	
0220	4A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0230	4B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0240								
0250	5	41 78 414			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						temperature sensor	temperaturgivare	
0280	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	5B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0300								
0310	6	41 78 414			1	Connector housing	Kontakthus	8
0320						2-pole, female	2-polig, hylsa	
0330						EVAP CP valve	urluftningsventil	
0340	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0360								
0370	7	41 78 414			1	Connector housing	Kontakthus	8
0380						2-pole, female	2-polig, hylsa	
0390						knock-sensor	knacksensor	
0400						rear	bakre	
0410	7A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0420	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0430								
0440	8	42 24 887			1	Connector housing	Kontakthus	4
0450						16-pole, male	16-polig, stift	
0460						connection	skarv	
0470	8A	41 15 192		AREA 1,0-2,5 MM2	16	Cable terminal	Kabelsko	8
0480	8B	40 61 974		AREA 2,1-2,5 MM2	16	Seal	Tätning	5
0490								
0500	9	41 13 601				Connector housing	Kontakthus	8
0510						4-pole, female	4-polig, hylsa	
0520						pre-heating	förvärmning	
0530						lambda sonde	lambdasond	
0540	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0550	9B	40 61 974		AREA 2,1-2,5 MM2	3	Seal	Tätning	5
0560								
0570	10	41 78 414			1	Connector housing	Kontakthus	8
0580						2-pole, female	2-polig, hylsa	
0590						temperature sensor	temperaturgivare	
0600						coolant	kylvätska	
0610	10A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0620	10B	40 61 974		AREA 2,1-2,5 MM2	2	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

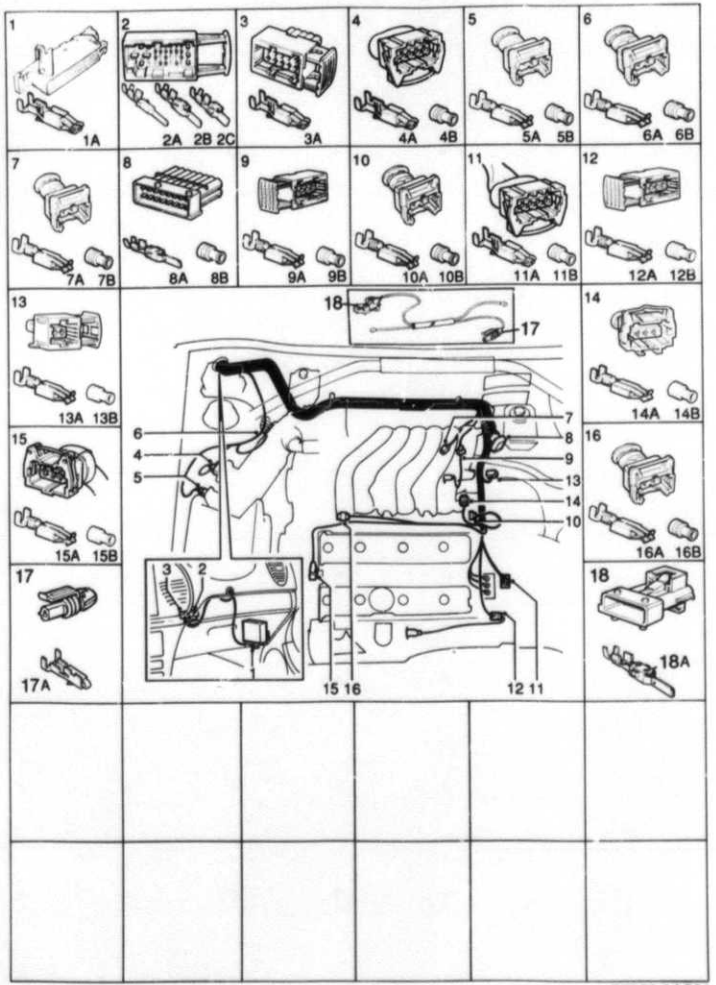

F7203 AAC94

2 –J22

Contact housing etc
Engine, B258 I
1994

Kontakthus etc
Motor, B258 I
1994


0252	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 357			1	Connector housing	Kontakthus	8
0020						4-pole, female	4-polig, hylsa	
0030						ignition coil	tändspole	
0040	11A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050	11B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0060								
0070	12	41 13 601			1	Connector housing	Kontakthus	8
0080						4-pole, female	4-polig, hylsa	
0090						lambda sonde	lambdasond	
0100						front	främre	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0130								
0140	13	41 13 205				Connector housing	Kontakthus	8
0150						2-pole, female	2-polig, hylsa	
0160						temperature sensor	temperaturgivare	
0170						coolant	kylvätska	
0180	13A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190	13B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0200								
0210	14	44 32 316			1	Connector housing	Kontakthus	8
0220						3-pole, female	3-polig, hylsa	
0230						crank shaft sensor	vevaxelgivare	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	15	44 32 316			1	Connector housing	Kontakthus	8
0280						3-pole, female	3-polig, hylsa	
0290						sensor	givare	
0300						camshaft	kamaxel	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						knock-sensor	knacksensor	
0370						front	främre	
0380	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0390	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0400								
0410	17	42 03 378			1	Connector housing	Kontakthus	4
0420						1-pole, female	1-polig, hylsa	
0430						EOP sensor	oljetrycksgivare	
0440	17A	44 18 505		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	18	41 13 650			1	Connector housing	Kontakthus	8
0470						4-pole, male	4-polig, stift	
0480						connection	skarv	
0490	18A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

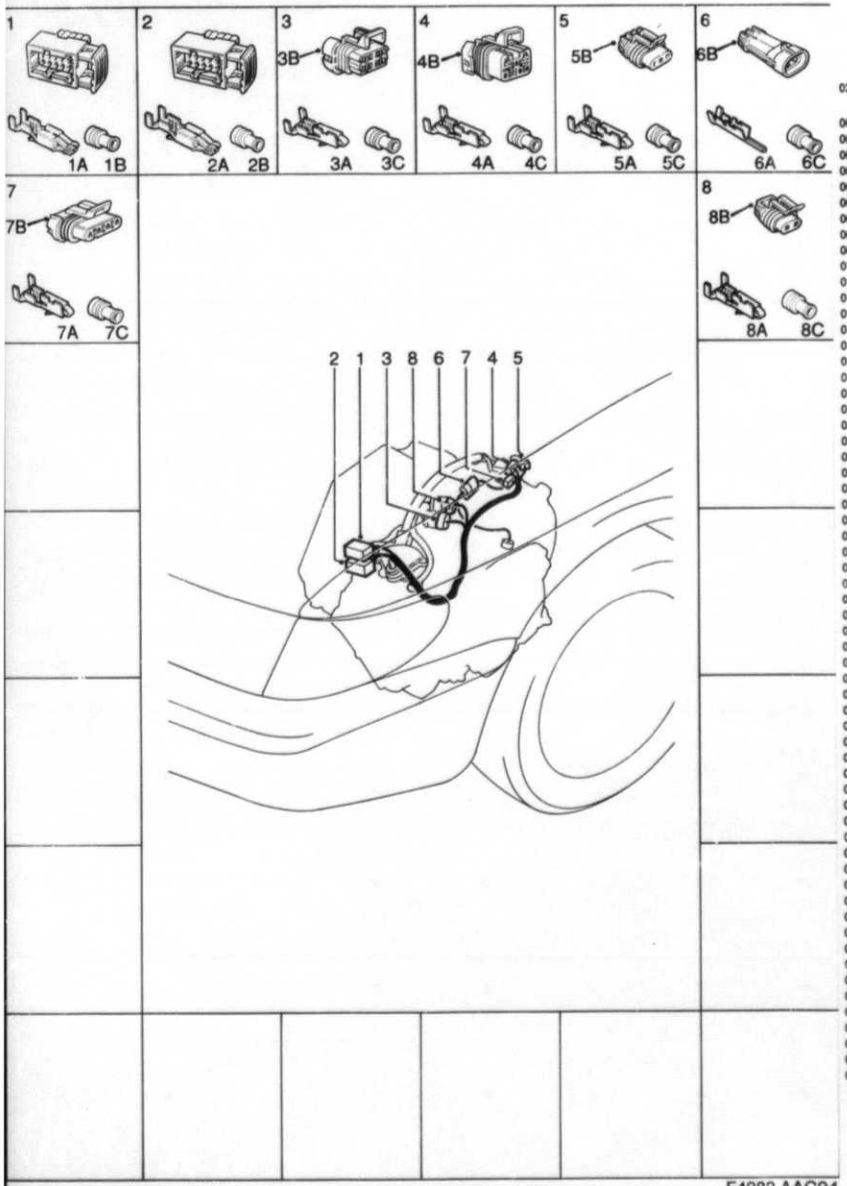

F4982 AAC94

2 –J24

Contact housing etc
Gearbox, TCM
1994

Kontakthus etc
Växellåda, TCM
1994

0270	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	40 61 586		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050	1B	40 61 974		AREA 2,1-2,9 MM2	10	Seal	Tätning	5
0060								
0070	2	41 14 005			1	Connector housing	Kontakthus	8
0080						10-pole, female	10-polig, hylsa	
0090						connection	skarv	
0100	2A	40 61 586		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0110	2B	40 61 974		AREA 2,1-2,9 MM2	10	Seal	Tätning	5
0120								
0130	3	42 03 535				Connector housing	Kontakthus	4
0140						8-pole, female	8-polig, hylsa	
0150						shift solenoid	växlingssolenoid	
0160	3A	44 18 505		AREA 0,5-1,0 MM2	6	Cable terminal	Kabelsko	5
0170	3B	42 03 543			1	Locking	Låsning	4
0180	3C	44 19 313			6	Seal	Tätning	5
0190						blue	blå	
0200								
0210	4	42 03 501			1	Connector housing	Kontakthus	4
0220						7-pole, female	7-polig, hylsa	
0230						contact	kontakt	
0240						gear position	växelläge	
0250	4A	44 18 505		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	5
0260	4B	42 03 519			1	Locking	Låsning	4
0270	4C	44 19 313			5	Seal	Tätning	5
0280						blue	blå	
0290								
0300	5	42 03 444			1	Connector housing	Kontakthus	4
0310						3-pole, male	3-polig, stift	
0320						output shaft speed sensor	hastighetsgivare	
0330	5A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	5B	42 03 451			1	Locking	Låsning	4
0350	5C	44 19 313			2	Seal	Tätning	5
0360						blue	blå	
0370								
0380	6	42 03 592			1	Connector housing	Kontakthus	4
0390						2-pole, female	2-polig, hylsa	
0400						input shaft speed sensor	hastighetsgivare	
0410	6A	44 18 489		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0420	6B	42 01 232			1	Locking	Låsning	4
0430	6C	44 19 313			2	Seal	Tätning	5
0440						blue	blå	
0450								
0460	7	42 03 477			1	Connector housing	Kontakthus	4
0470						4-pole, female	4-polig, hylsa	
0480						contact	kontakt	
0490						starter inhibitor	startspärr	
0500	7A	44 18 505		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	5
0510	7B	42 03 485			1	Locking	Låsning	4
0520	7C	44 19 313			4	Seal	Tätning	5
0530						blue	blå	
0540								
0550	8	42 01 224			1	Connector housing	Kontakthus	5
0560						2-pole, female	2-polig, hylsa	
0570						tranmitter	oljetempgivare	
0580	8A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0590	8B	42 01 232			1	Locking	Låsning	4
0600	8C	44 19 313			2	Seal	Tätning	5
0610						blue	blå	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

2-K02

Contact housing etc


Instrument panel

1994

Kontakthus etc

Instrumentpanel

1994

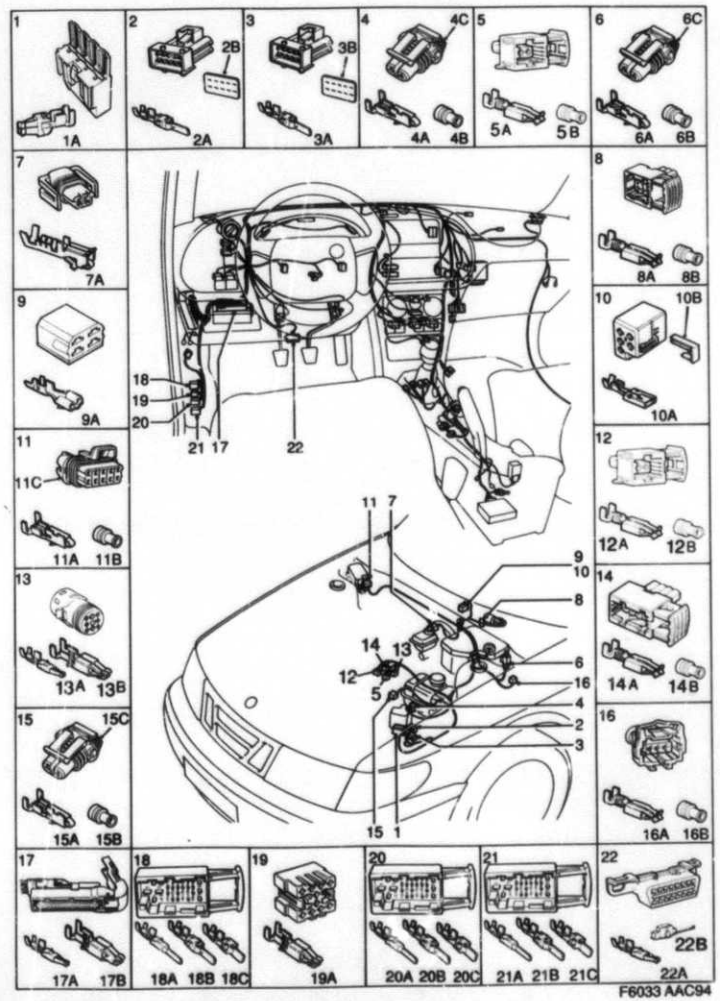


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 30 181			1	Connector housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						fuse box	säkringsdosa	
0040	1A	44 64 343		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 14 054			1	Connector housing	Kontakthus	8
0070						10-pole, male	10-polig, stift	
0080						connection	skarv	
0090	2A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0100	2B	41 14 153			1	Seal	Tätning	5
0110								
0120	3	41 14 054			1	Connector housing	Kontakthus	8
0130						10-pole, male	10-polig, stift	
0140						connection	skarv	
0150	3A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0160	3B	41 14 153			1	Seal	Tätning	5
0170								
0180	4	44 34 841			1	Connector housing	Kontakthus	5
0190						2-pole, female	2-polig, hylsa	
0200						level sensor	nivågivare	
0210						coolant	kylvätska	
0220	4A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0230	4B	44 19 313			2	Seal	Tätning	5
0240						blue	blå	
0250	4C	42 01 232			1	Locking	Låsning	4
0260								
0270	5	41 13 205			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperarturgivare	
0300						clutch	koppling	
0310	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	5B	40 61 966		AREA 1,2-2,0MM2	2	Seal	Tätning	5
0330								
0340	6	42 01 224			1	Connector housing	Kontakthus	5
0350						2-pole, female	2-polig, hylsa	
0360						bonnet	motorhuv	
0370	6A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0380	6B	44 19 313			2	Seal	Tätning	5
0390						blue	blå	
0400	6C	42 01 232			1	Locking	Låsning	4
0410								
0420	7	42 01 273			1	Connector housing	Kontakthus	4
0430						2-pole, female	2-polig, hylsa	
0440						level sensor	nivågivare	
0450						brake fluid	bromsvätska	
0460	7A	44 88 458		AREA 0,35-0,5 MM2	2	Cable terminal	Kabelsko	5
0470								
0480	8	41 13 809			1	Connector housing	Kontakthus	4
0490						6-pole, female	6-polig, hylsa	
0500						windscreen wiper	vindrutetorkare	
0510	8A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0520	8B	40 61 966		AREA 1,2-2,0 MM2	6	Seal	Tätning	5
0530								
0540	9	44 11 286			1	Connector housing	Kontakthus	4
0550						4-pole, female	4-polig, hylsa	
0560						motor	motor	
0570						ACC	ACC	
0580	9A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

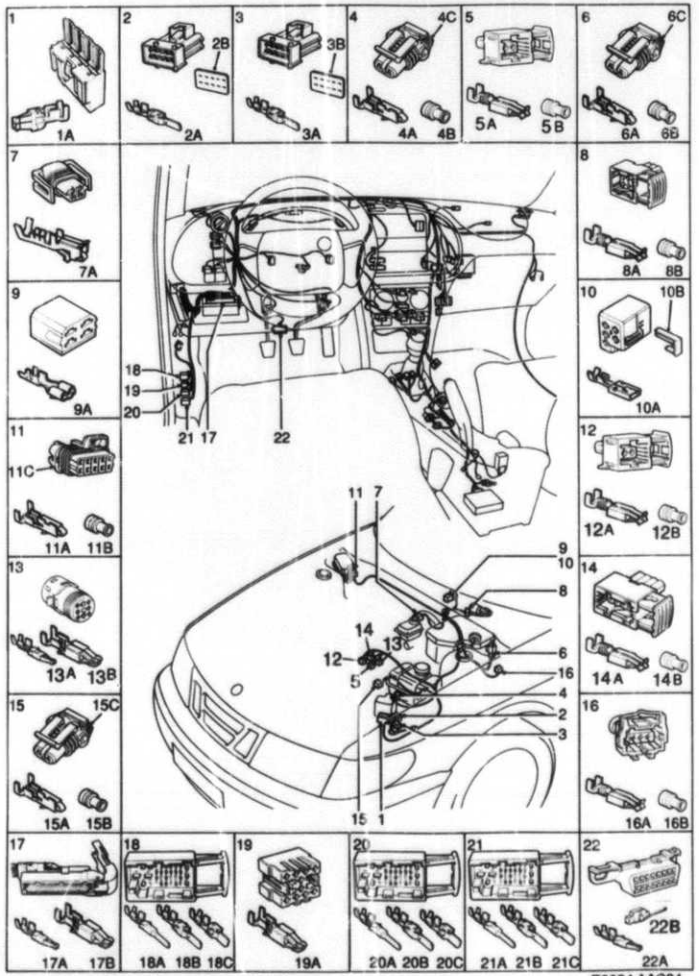

F6034 AAC94

2-K04

Contact housing etc

Instrument panel

1994

Kontakthus etc

Instrumentpanel

1994

0302	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	44 63 014			1	Connector housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030						fan motor	fläktmotor	
0040	10A	44 12 961		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	5
0050	10B	44 63 022			1	Locking	Låsning	4
0060								
0070	11	42 03 568			1	Connector housing	Kontakthus	4
0080						10-pole, female	10-polig, hylsa	
0090						speed control system	farthållningssystem	
0100	11A	44 18 505		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	5
0110	11B	44 19 313			10	Seal	Tätning	5
0120						blue	blå	
0130	11C	42 03 576			1	Locking	Låsning	4
0140								
0150	12	41 13 205			1	Connector housing	Kontakthus	8
0160						2-pole, female	2-polig, hylsa	
0170						input shaft speed sensor	hastighetsgivare	
0180						gearbox	växellåda	
0190	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0200	12B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0210								
0220	13	44 66 462			1	Connector housing	Kontakthus	4
0230						8-pole, female	8-polig, hylsa	
0240						actuator	manöverdon	
0250						ACS	ACS	
0260	13A	41 15 499		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	8
0270	13B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	14	41 13 601			1	Connector housing	Kontakthus	8
0300						4-pole, female	4-polig, hylsa	
0310						sensor	givare	
0320						gearbox	växellåda	
0330	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0340	14B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0350								
0360	15	42 01 224			1	Connector housing	Kontakthus	5
0370						2-pole, female	2-polig, hylsa	
0380						revers light contact	backljuskontakt	
0390	15A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0400	15B	44 19 313			2	Seal	Tätning	5
0410						blue	blå	
0420	15C	42 01 232			1	Locking	Låsning	4
0430								
0440	16	44 32 316			1	Connector housing	Kontakthus	8
0450						3-pole, female	3-polig, hylsa	
0460						center of gravity sensor	accelerationssensor	
0470	16A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0480	16B	40 61 966		AREA 1,0-2,0 MM2	3	Seal	Tätning	5
0490								
0500	17	41 76 616			1	Connector housing	Kontakthus	8
0510						70-pole, female	70-polig, hylsa	
0520						ICE	ICE	
0530	17A	41 15 499		AREA 0,5-1,0 MM2	49	Cable terminal	Kabelsko	8
0540	17B	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0550								
0560	18	41 73 852			1	Contact housing	Kontakthus	4
0570						33-pole, male	33-polig, stift	
0580						connection	skarv	
0590	18A	41 15 457		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	5
0600	18B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0610	18C	41 15 580		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

2-K06

Contact housing etc
Instrument panel
1994

Kontakthus etc
Instrumentpanel
1994

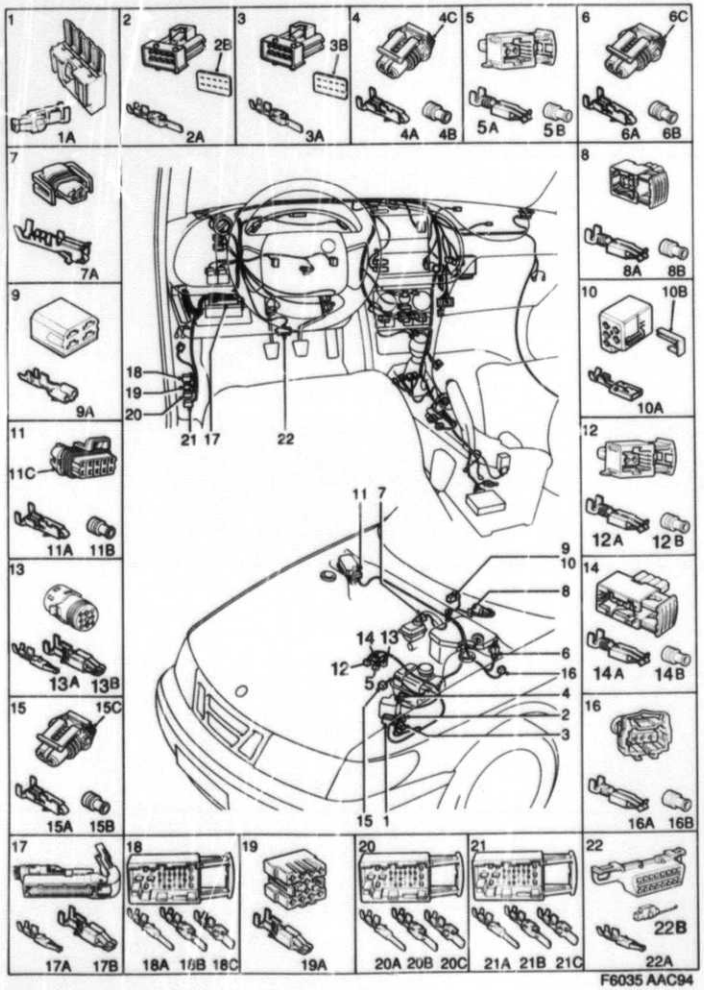

F6035 AAC94

0304	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	19	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	19A	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	20	41 73 852			1	Contact housing	Kontakthus	4
0070						33-pole, male	33-polig, stift	
0080						connection	skarv	
0090	20A	41 15 457		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	5
0100	20B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	20C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0120								
0130	21	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	21A	41 15 457		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	5
0170	21B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	21C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	22	42 24 606			1	Connector housing	Kontakthus	8
0210						16-pole, female	16-polig, hylsa	
0220						data link connector	diagnostikuttag	
0230	22A	41 15 499		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	8
0240	22B	44 34 833			1	Cover	Kåpa	4

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

2-K08

Contact housing etc
Instrument panel
1994

Kontakthus etc
Instrumentpanel
1994

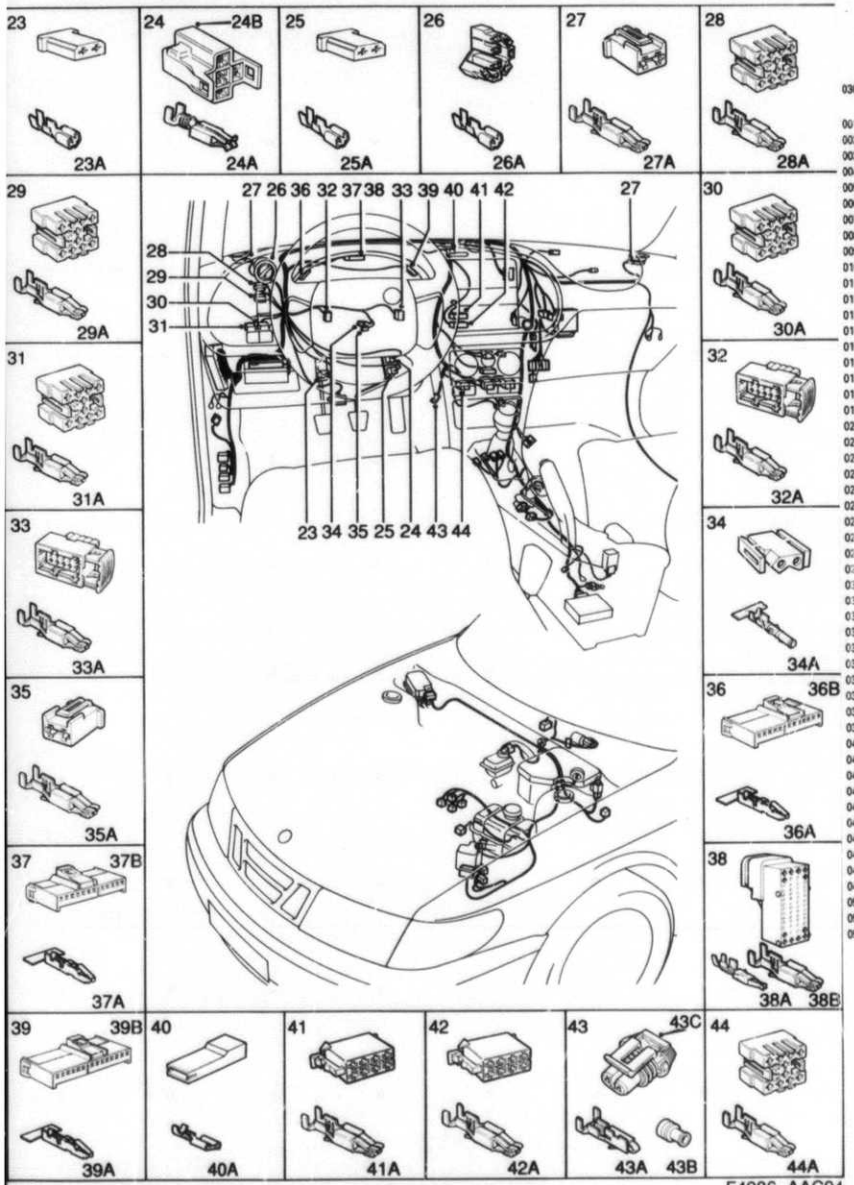


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
23	83 78 630			1	Contact housing 2-pole, female contact clutch	Kontakthus 2-polig, hylsa kontakt koppling	4
23A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
24	42 24 317			1	Connector housing 4-pole, female brake light switch	Kontakthus 4-polig, hylsa bromsljuskontakt	4
24A	91 20 791		AREA 2,5-4,0 MM2	4	Cable terminal	Kabelsko	8
24B	42 24 333			1	Locking	Låsning	4
25	83 78 630			1	Contact housing 2-pole, female contact brake	Kontakthus 2-polig, hylsa kontakt broms	4
25A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
26	85 44 363			1	Contact housing 8-pole, female light switch	Kontakthus 8-polig, hylsa ljusomkopplare	4
26A	44 64 400		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	5
27	91 23 548			1	Contact housing 2-pole, female loudspeaker	Kontakthus 2-polig, hylsa högtalare	4
27A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
28	91 23 399			1	Connector housing 10-pole, female rear fog light	Skarvhus 10-polig, hylsa dimbakljkta	4
28A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
29	91 23 399			1	Connector housing 10-pole, female fog light	Skarvhus 10-polig, hylsa dimljus	4
29A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
30	91 23 399			1	Connector housing 10-pole, female rheostat	Skarvhus 10-polig, hylsa reostat	4
30A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
31	91 23 399			1	Connector housing 10-pole, female headlamp levelling	Skarvhus 10-polig, hylsa ljuslängdsreglering	4
31A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
32	41 14 005			1	Connector housing 10-pole, female direction indicator	Kontakthus 10-polig, hylsa blinkers	8
32A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventiiation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

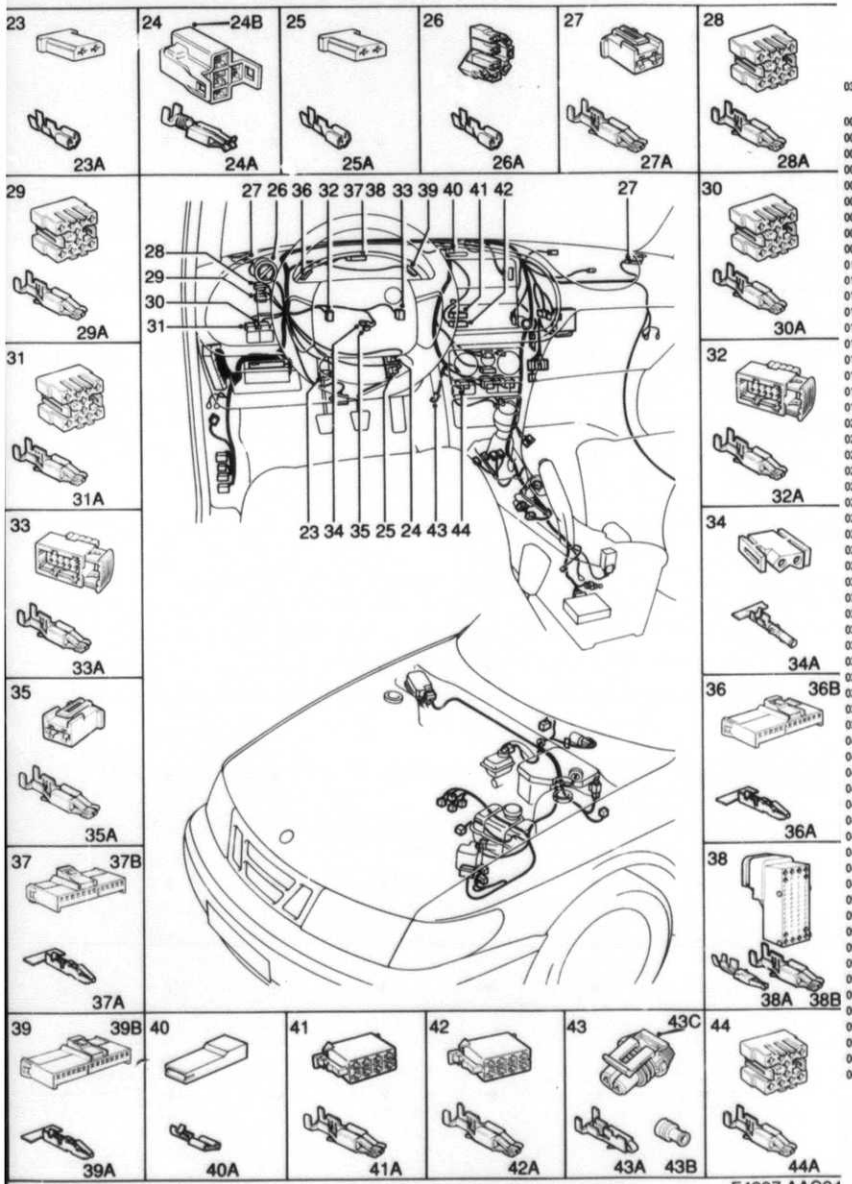

F4987 AAC94

Contact housing etc

2-K10

Instrument panel

1994

Kontakthus etc

Instrumentpanel

1994


0308	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	33	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						windscreen wiper	vindrutetorkare	
0040	33A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050								
0060	34	95 25 809			1	Contact housing	Kontakthus	4
0070						2-pole, female	2-polig, hylsa	
0080						air-bag	airbag	
0090	34A	95 25 817		AREA 0,2-0,56 MM2	2	Cable terminal	Kabelsko	5
0100								
0110	35	91 23 548			1	Contact housing	Kontakthus	4
0120						2-pole, female	2-polig, hylsa	
0130						horn button	signalknapp	
0140	35A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0150								
0160	36	44 09 181			1	Connector housing	Kontakthus	4
0170						12-pole, female	12-polig, hylsa	
0180						instrument	instrument	
0190	36A	42 24 515		AREA 0,2-0,5 MM2	7	Cable terminal	Kabelsko	5
0200	36B	44 09 207			1	Cover	Kåpa	4
0210								
0220	37	44 09 165			1	Connector housing	Kontakthus	4
0230						12-pole, female	12-polig, hylsa	
0240						instrument	instrument	
0250	37A	42 24 515		AREA 0,2-0,5 MM2	12	Cable terminal	Kabelsko	5
0260	37B	44 09 207			1	Cover	Kåpa	4
0270								
0280	38	41 15 408			1	Connector housing	Kontakthus	4
0290						56-pole, female	56-polig, hylsa	
0300						instrument	instrument	
0310	38A	41 15 499		AREA 0,5-1,0 MM2	33	Cable terminal	Kabelsko	8
0320	38B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0330								
0340	39	44 09 199			1	Connector housing	Kontakthus	4
0350						12-pole, female	12-polig, hylsa	
0360						instrument	instrument	
0370	39A	42 24 515		AREA 0,2-0,5 MM2	11	Cable terminal	Kabelsko	5
0380	39B	44 09 207			1	Cover	Kåpa	4
0390								
0400	40	85 16 916			1	Insulation	Isolering	4
0410						1-pole, female	1-polig, hylsa	
0420						seat belt warning	bältesvarning	
0430	40A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	41	42 03 626			1	Connector housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						radio	radio	
0480	41A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0490								
0500	42	42 03 618			1	Connector housing	Kontakthus	4
0510						8-pole, female	8-polig, hylsa	
0520						radio	radio	
0530	42A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0540								
0550	43	42 01 224			1	Connector housing	Kontakthus	5
0560						2-pole, female	2-polig, hylsa	
0570						kick-down switch	kick-downströmställare	
0580	43A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0590	43B	44 19 313			2	Seal	Tätning	5
0600						blue	blå	
0610	43C	42 01 232			1	Locking	Låsning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

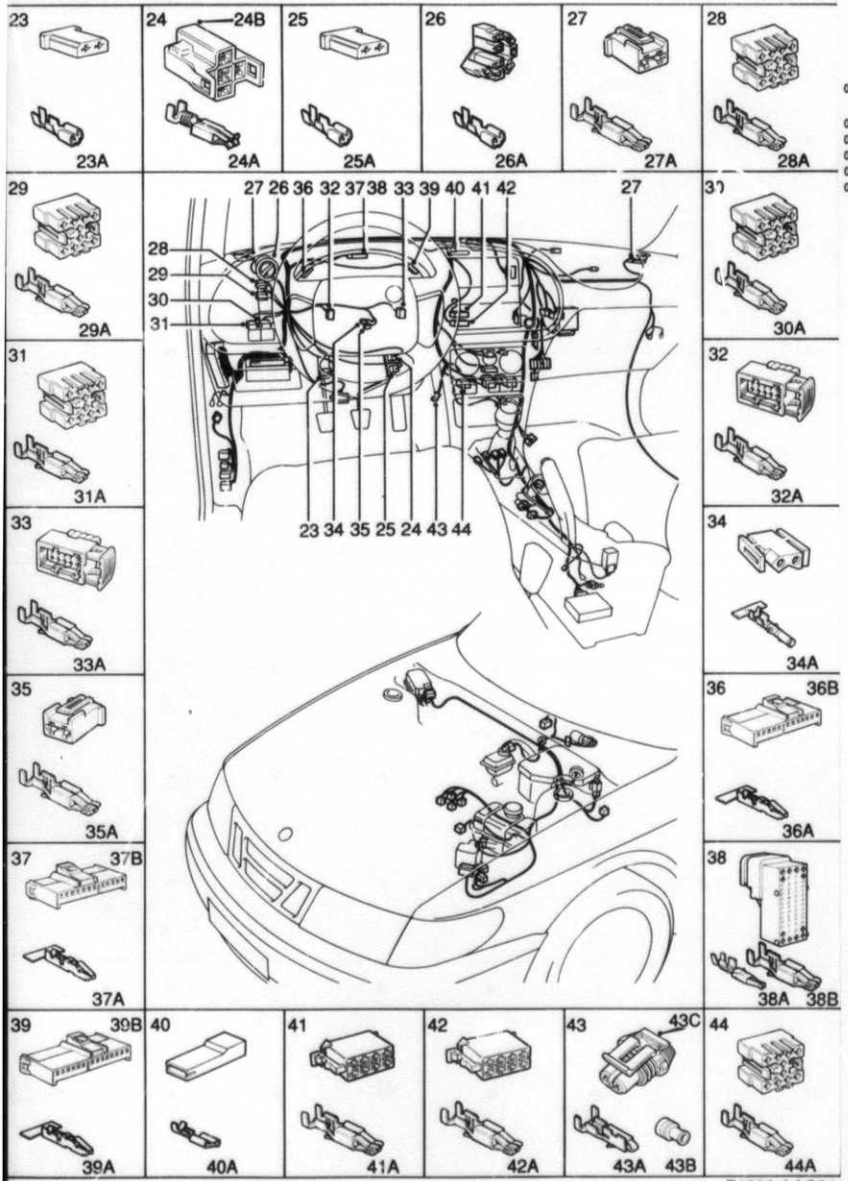

F4988 AAC94

Contact housing etc

2-K12

Instrument panel

1994

Kontakthus etc

Instrumentpanel

1994

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	44	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						TCS	TCS	
0050	44A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

2-K14

Contact housing etc
Instrument panel
1994

Kontakthus etc
Instrumentpanel
1994

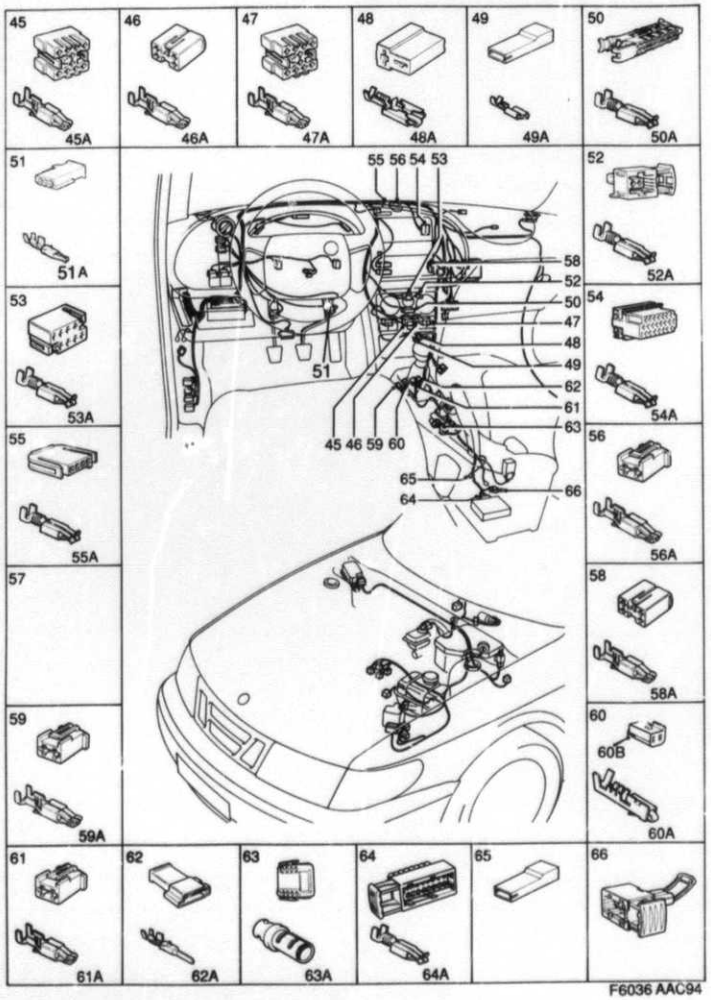

F6036 AAC94


0312	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	45	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						heating pad	värmedyna	
0050	45A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0060								
0070	46	91 23 555			1	Contact housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						sensor	sensor	
0100						indoor temperature	innerlufttemperatur	
0110	46A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0120								
0130	47	91 23 399			1	Connector housing	Skarvhus	4
0140						10-pole, female	10-polig, hylsa	
0150						switch	strömställare	
0160						heating pad	värmedyna	
0170	47A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0180								
0190	48	85 74 949			1	Contact housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						cigarette lighter	cigarettändare	
0220	48A	44 64 400		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0230								
0240	49	85 33 184			1	Contact housing	Kontakthus	4
0250						1-pole, female	1-polig, hylsa	
0260						lighting	belysning	
0270						cigarette lighter	cigarettändare	
0280	49A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0290								
0300	50	95 65 045			1	Contact housing	Kontakthus	5
0310						39-pole, female	39-polig, hylsa	
0320						ACC	ACC	
0330	50A	44 66 736		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	50A	40 63 970		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0350	50A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0360								
0370	52	41 13 205			1	Connector housing	Kontakthus	8
0380						2-pole, female	2-polig, hylsa	
0390						background lighting	bakgrundsbelysning	
0400	52A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0410								
0420	53	91 24 090			1	Contact housing	Kontakthus	4
0430						8-pole, female	8-polig, hylsa	
0440						AC	AC	
0450	53A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0460								
0470	54	42 23 624			1	Connector housing	Kontakthus	4
0480						22-pole, female	22-polig, hylsa	
0490						information display	informationsdisplay	
0500	54A	41 15 499		AREA 0,5-1,0 MM2	18	Cable terminal	Kabelsko	8
0510								
0520	55	40 60 869			1	Contact housing	Kontakthus	5
0530						4-pole, female	4-polig, hylsa	
0540						sunlight sensor	solljusavkännare	
0550	55A	40 63 970		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

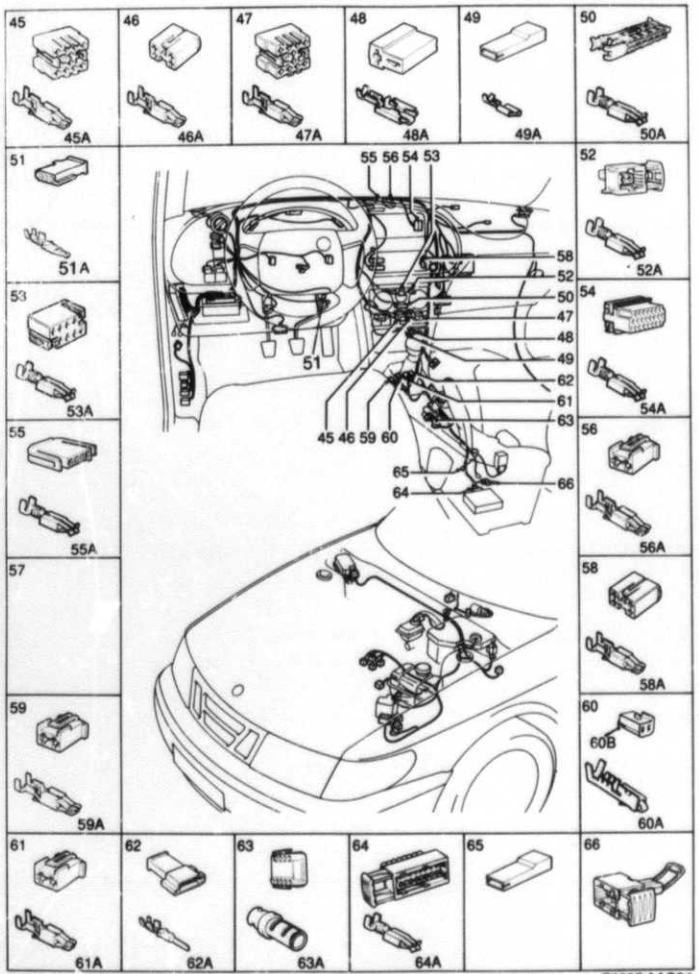

2-K16

Contact housing etc
Instrument panel
1994

Kontakthus etc
Instrumentpanel
1994


0314	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	56	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						theft alarm	stöldlarm	
0040	56A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	57	41 13 007			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						sensor	givare	
0090						accelerator pedal	gaspedal	
0100	57A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	58	91 23 555			1	Contact housing	Kontakthus	4
0130						4-pole, female	4-polig, hylsa	
0140						warning flasher	varningsblinklykta	
0150	58A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0160								
0170	59	91 23 548			1	Contact housing	Kontakthus	4
0180						2-pole, female	2-polig, hylsa	
0190						lighting	belysning	
0200						gear position	växelläge	
0210	59A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220								
0230	60	44 11 740			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						shift solenoid	växlingssolenoid	
0260	60A	44 88 151		AREA0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0270	60B	44 11 757			1	Locking	Låsring	4
0280								
0290	61	91 23 548			1	Contact housing	Kontakthus	4
0300						2-pole, female	2-polig, hylsa	
0310						switch	strömställare	
0320						SPORTS	SPORT	
0330	61A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0340								
0350	62	41 13 056			1	Connector housing	Kontakthus	4
0360						3-pole, male	3-polig, stift	
0370						switch	strömställare	
0380						WINTER	VINTER	
0390	62A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0400								
0410	63	42 24 457			1	Connector housing	Kontakthus	4
0420						9-pole, female	9-polig, hylsa	
0430						starter switch	tändningslås	
0440	63A	95 09 746			7	Cable terminal	Kabelsko	5
0450								
0460	64	42 24 598			1	Connector housing	Kontakthus	4
0470						16-pole, female	16-polig, hylsa	
0480						airbag module	airbagmodul	
0490	64A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0500								
0510	65	85 82 090		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0520						switch	strömställare	
0530						handbrake	handbroms	
0540								
0550	66	44 30 153			1	Resistor	Motstånd	6
0560						air-bag	airbag	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

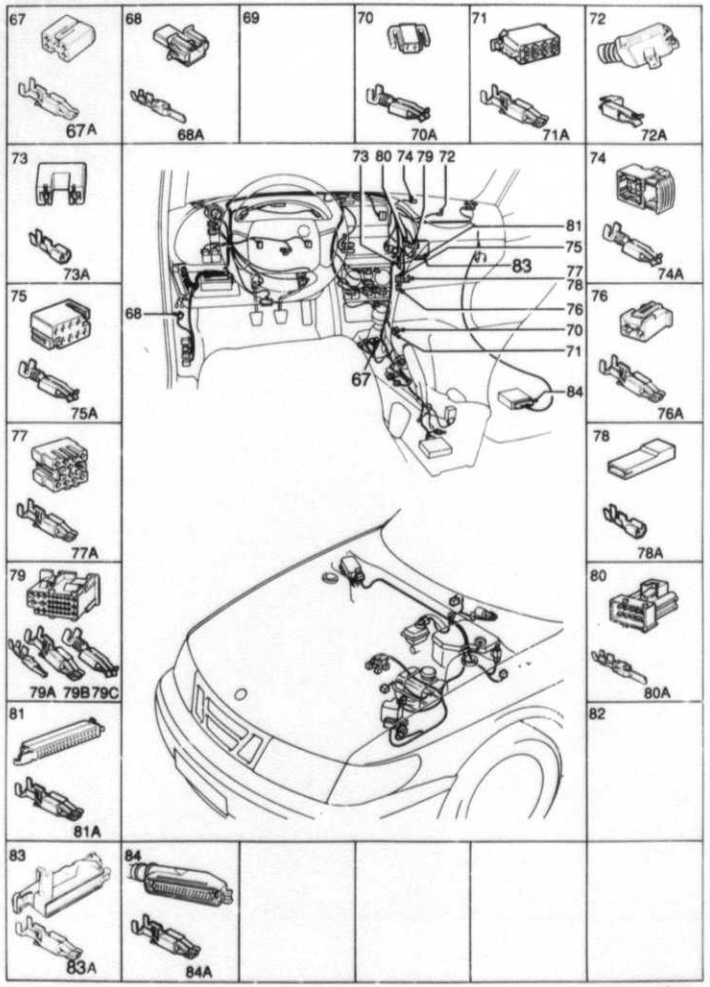

F6038 AAC94

2-K18

Contact housing etc
Instrument panel
1994

Kontakthus etc
Instrumentpanel
1994


0316	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	67	91 23 555			1	Contact housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						gear position indicator	växellägesindikator	
0040	67A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	68	41 17 164			1	Connector housing	Kontakthus	4
0070						2-pole, male	2-polig, stift	
0080						catalytic converter temp	katalysatortemp	
0090	68A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	70	91 24 157			1	Contact housing	Kontakthus	4
0120						2-pole, female	2-polig, hylsa	
0130						amplifier	förstärkare	
0140	70A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0150								
0160	71	42 03 626			1	Connector housing	Kontakthus	4
0170						8-pole, female	8-polig, hylsa	
0180						radio	radio	
0190	71A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0200								
0210	72	95 52 183			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						air-bag	airbag	
0240	72A	95 52 191			2	Cable terminal	Kabelsko	5
0250								
0260	73	42 03 733			1	Connector housing	Kontakthus	4
0270						2-pole, female	2-polig, hylsa	
0280						glove compartment lamp	handskfacklampa	
0290	73A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0300								
0310	74	41 13 809			1	Connector housing	Kontakthus	4
0320						6-pole, female	6-polig, hylsa	
0330						telephone	telefon	
0340	74A	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0350								
0360	75	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						fan	fläkt	
0390						ACC	ACC	
0400	75A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0410								
0420	76	91 23 548			1	Contact housing	Kontakthus	4
0430						2-pole, female	2-polig, hylsa	
0440						recirculation	recirkulation	
0450	76A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0460								
0470	77	91 23 399			1	Connector housing	Skarvhus	4
0480						10-pole, female	10-polig, hylsa	
0490						motor	motor	
0500						ACC	ACC	
0510	77A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0520								
0530	78	85 16 916			1	Insulation	Isolering	4
0540						1-pole, female	1-polig, hylsa	
0550						anti-freeze thermostate	frysskyddstermostat	
0560	78A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

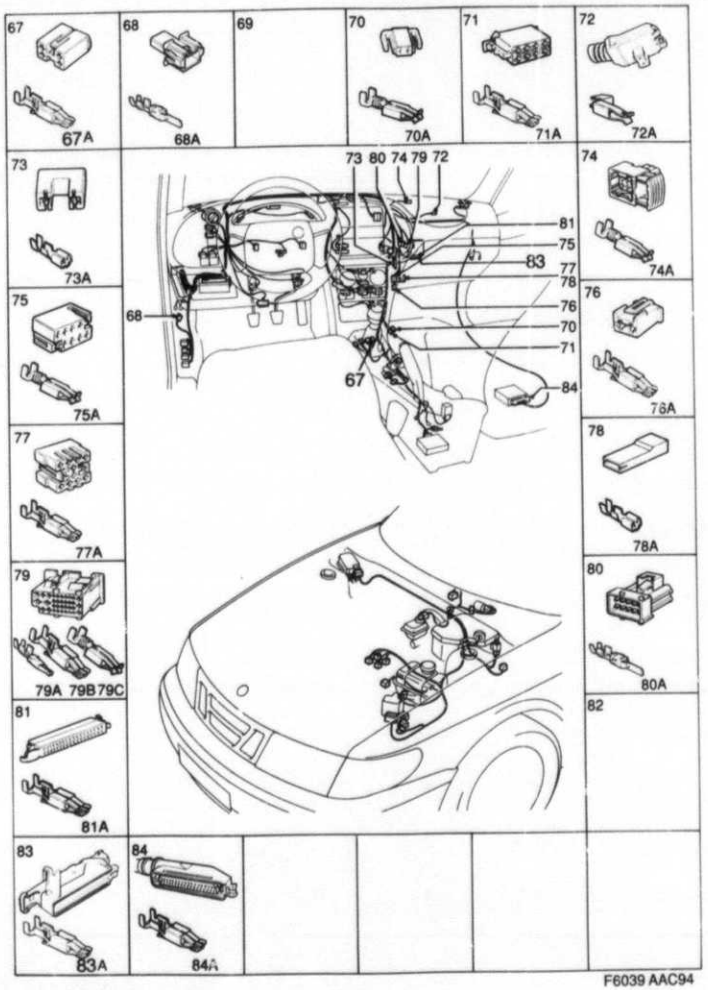

F6039 AAC94

Contact housing etc

2-K20

Instrument panel

1994

Kontakthus etc

Instrumentpanel

1994


0318	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	79	41 73 803			1	Contact housing	Kontakthus	4
0020						33-pole, female	33-polig, hylsa	
0030						connection	skarv	
0040	79A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0050	79B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0060	79C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0070								
0080	80	41 14 054			1	Connector housing	Kontakthus	8
0090						10-pole, male	10-polig, stift	
0100						connection	skarv	
0110	80A	41 15 077		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0120								
0130	81	42 03 659			1	Connector housing	Kontakthus	4
0140						35-pole, female	35-polig, hylsa	
0150						electronic unit	elektronikenhet	
0160						TCM	TCM	
0170	81A	91 20 957		AREA 1,0-2,5 MM2	34	Cable terminal	Kabelsko	8
0180								
0190	83	42 22 311			1	Connector housing	Kontakthus	4
0200						55-pole, female	55-polig, hylsa	
0210						electronic unit	elektronikenhet	
0220						ACS	ACS	
0230	83A	91 20 957		AREA 1,0-2,5 MM2	33	Cable terminal	Kabelsko	8
0240								
0250	84	44 10 619			1	Connector housing	Kontakthus	8
0260						35-pole, female	35-polig, hylsa	
0270						electronic unit	elektronikenhet	
0280						TCS	TCS	
0290	84A	91 20 957		AREA 1,0-2,5 MM2	23	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

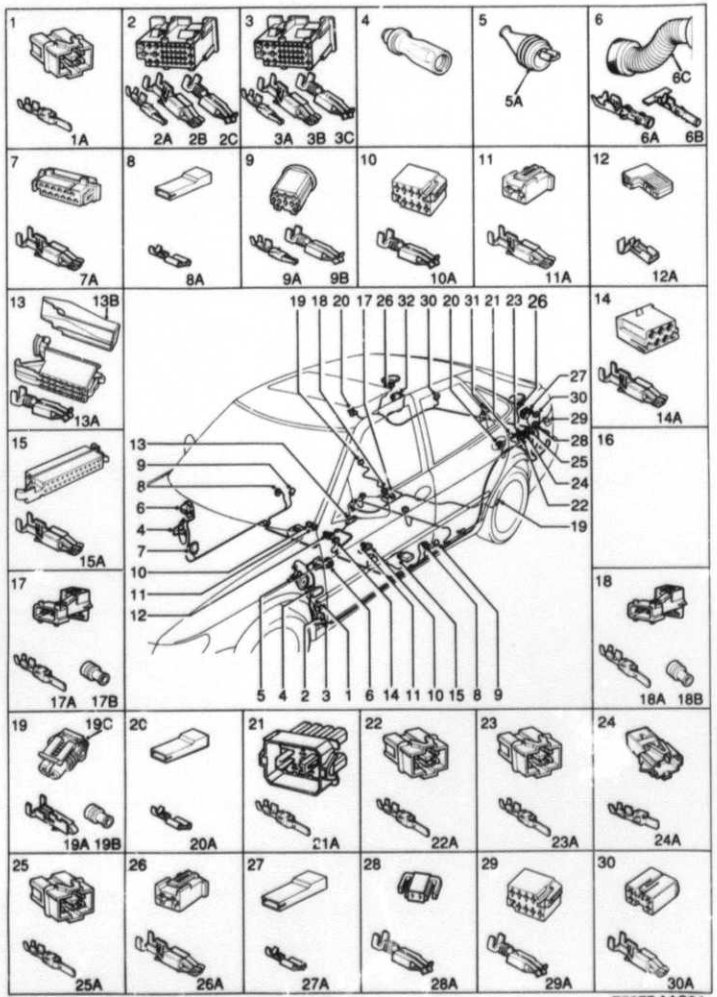

F5677 AAC94

Contact housing etc

2-K22

Rear

1994

Kontakthus etc

Bakre

1994


0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0210						1-pole, female	1-polig, hylsa	
0220						side indicator lamp	sidoblinklykta	
0230								
0240	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0250						1-pole, female	1-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	5A	42 03 683			1	Protection	Skydd	4
0280								
0290	6	42 03 253			1	Connector housing	Kontakthus	4
0300						26-pole, female	26-polig, hylsa	
0310						front door	framdörr	
0320	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0330	6B	44 09 728		AREA 1,0-2,5 MM2	22	Cable terminal	Kabelsko	5
0340	6C	42 22 352			1	Protection	Skydd	4
0350								
0360	7	95 25 031			1	Contact housing	Kontakthus	5
0370						12-pole, female	12-polig, hylsa	
0380						central lock	centrallås	
0390	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0400								
0410	8	85 16 916			1	Insulation	Isolering	4
0420						1-pole, female	1-polig, hylsa	
0430						switch	strömställare	
0440	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	9	44 11 518			1	Connector housing	Kontakthus	
0470						10-pole, female	10-polig, hylsa	
0480						rear door	bakdörr	
0490	9A	41 15 499		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	8
0500	9B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	10	91 24 090			1	Contact housing	Kontakthus	4
0530						8-pole, female	8-polig, hylsa	
0540						front seat	framstol	
0550	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

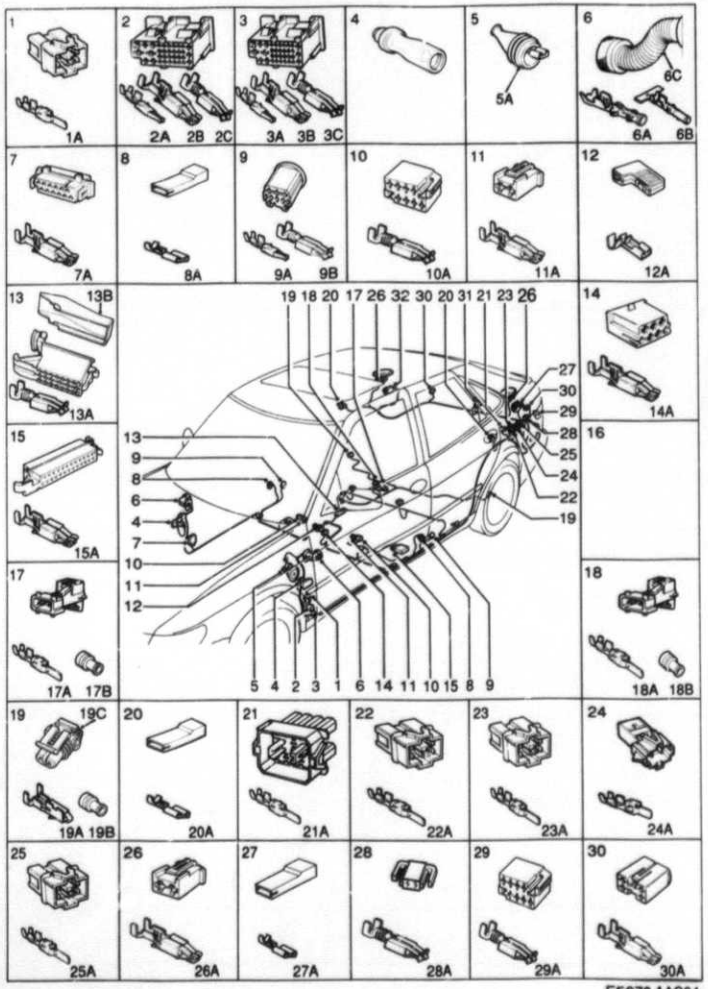

F5678 AAC94

Contact housing etc
Rear
1994

2-K24

Kontakthus etc
Bakre
1994

0352	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	12	85 21 692			1	Contact housing	Kontakthus	4
0070						1-pole, female	1-polig, hylsa	
0080						lighting	belysning	
0090						starter switch	tändningslås	
0100	12A	85 22 526		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0110								
0120	13	40 60 893			1	Contact housing	Kontakthus	5
0130						19-pole, female	19-polig, hylsa	
0140						window lift	fönsterhiss	
0150	13A	91 20 957		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0160	13A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0170	13B	40 67 517			1	Cover	Kåpa	4
0180								
0190	14	91 23 381			1	Contact housing	Kontakthus	4
0200						7-pole, female	7-polig, hylsa	
0210						interior illum.	innerbelysning	
0220	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0230								
0240	15	42 01 323			1	Connector housing	Kontakthus	4
0250						25-pole, female	25-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	15A	91 20 957		AREA 1,0-2,5 MM2	19	Cable terminal	Kabelsko	8
0280								
0290	17	41 13 254			1	Connector housing	Kontakthus	8
0300						2-pole, male	2-polig, stift	
0310						fuel pump	bränslepump	
0320	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0330	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0340								
0350	18	41 13 254			1	Connector housing	Kontakthus	8
0360						2-pole, male	2-polig, stift	
0370						fuel pump	bränslepump	
0380	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0390	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0400								
0410	19	42 03 428			1	Connector housing	Kontakthus	4
0420						2-pole, female	2-polig, hylsa	
0430						sensor, ABS	sensor, ABS	
0440	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0450	19B	44 19 305			1	Seal	Tätning	5
0460						red	röd	
0470	19B	44 19 313			1	Seal	Tätning	5
0480						blue	blå	
0490	19C	42 01 232			1	Locking	Låsning	4
0500								
0510	20	85 16 916			1	Insulation	Isolering	4
0520						1-pole, female	1-polig, hylsa	
0530						switch	strömställare	
0540	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0550								
0560	21	41 17 461			1	Connector housing	Skarvhus	4
0570						10-pole, male	10-polig, stift	
0580						connection	skarv	
0590	21A	41 15 077		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

2-L02

Contact housing etc
Rear
1994

Kontakthus etc
Bakre
1994

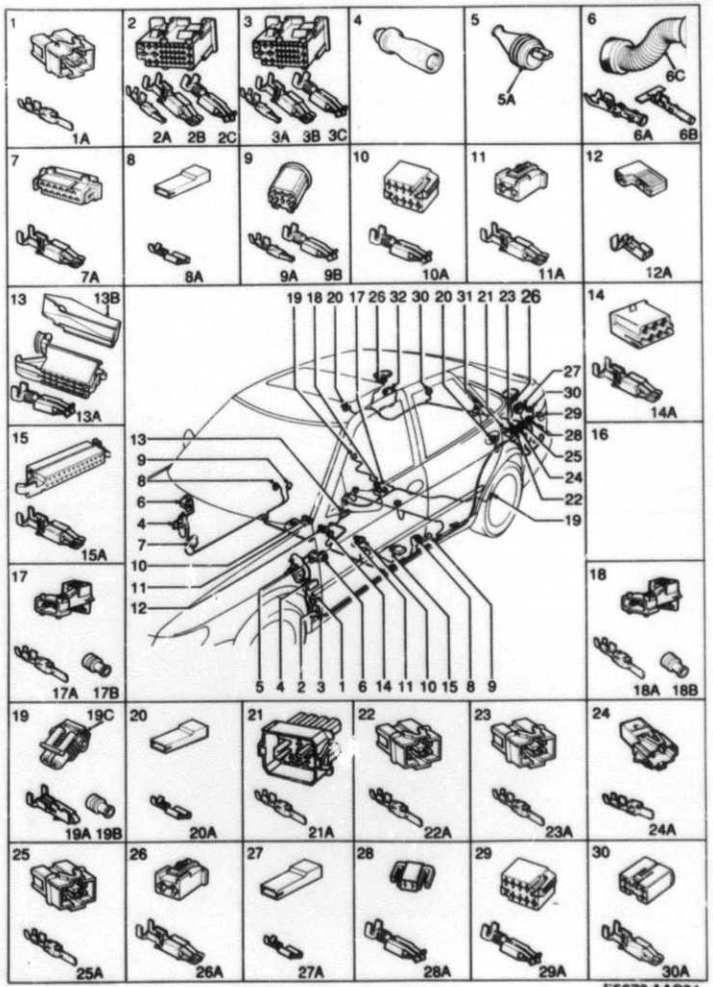

F5679 AAC94


0354	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	24	41 17 560			1	Connector housing	Kontakthus	4
0120						2-pole, male	2-polig, stift	
0130						connection	skarv	
0140	24A	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	25	41 17 263			1	Connector housing	Kontakthus	4
0170						4-pole, male	4-polig, stift	
0180						connection	skarv	
0190	25A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0200								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	85 16 916			1	Insulation	Isolering	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

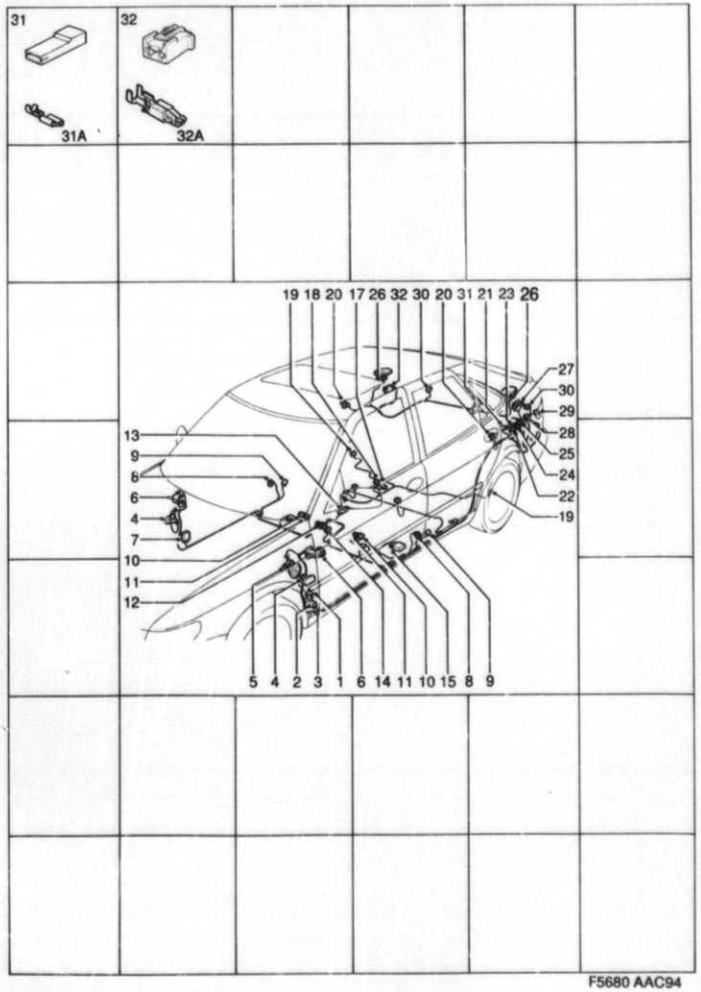

F5680 AAC94

Contact housing etc

2-L04

Rear

1994

Kontakthus etc

Bakre

1994


0356	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	31	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	31A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	32	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	32A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

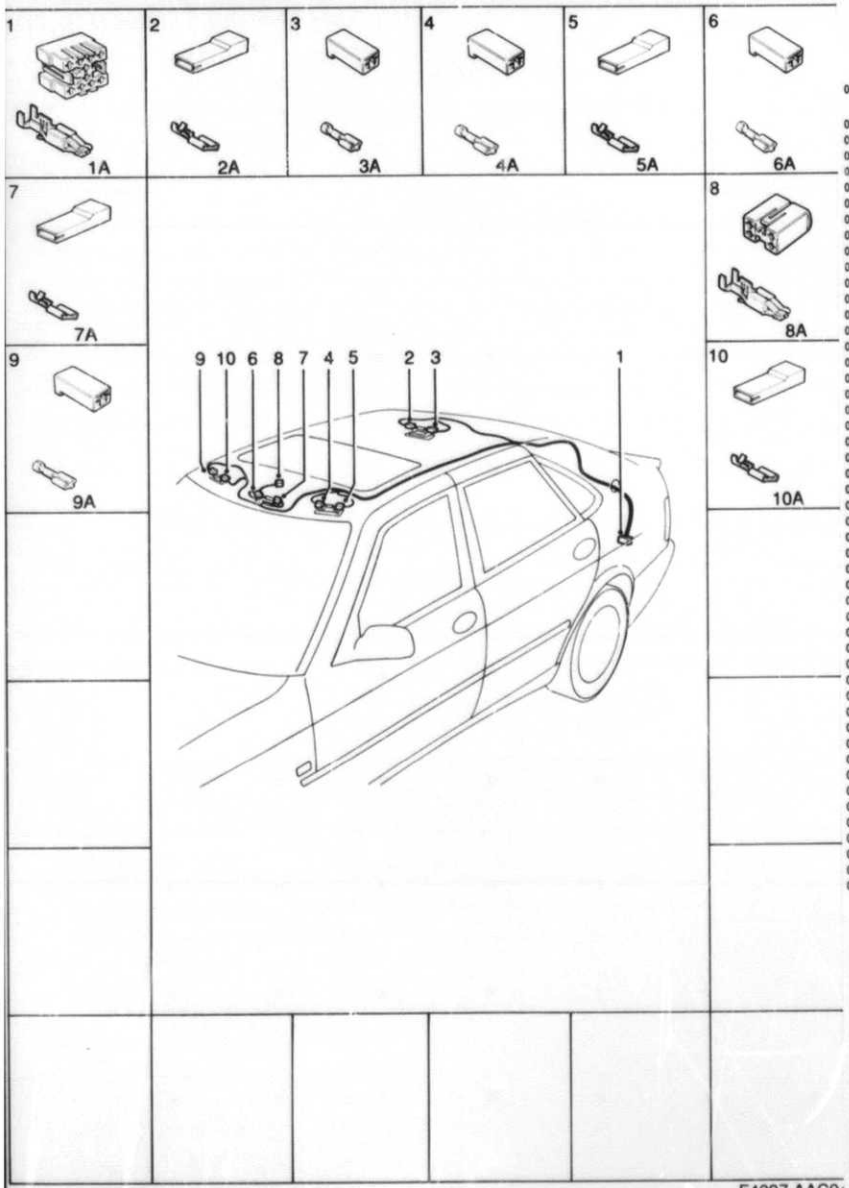

F4997 AAC9

Contact housing etc

2-L06

Roof

1994

Kontakthus etc

Tak

1994


0400	Pos	Part No/Art nr	K. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0050								
0060	2	85 16 916			1	Insulation	Isolering	4
0070						1-pole, female	1-polig, hylsa	
0080						interior illum.	innerbelysning	
0090	2A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0100								
0110	3	85 33 184			1	Contact housing	Kontakthus	4
0120						1-pole, female	1-polig, hylsa	
0130						interior illum.	innerbelysning	
0140	3A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0150								
0160	4	85 33 184			1	Contact housing	Kontakthus	4
0170						1-pole, female	1-polig, hylsa	
0180						vanity mirror	makeupspegel	
0190	4A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0200								
0210	5	85 16 916			1	Insulation	Isolering	4
0220						1-pole, female	1-polig, hylsa	
0230						vanity mirror	makeupspegel	
0240	5A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0250								
0260	6	85 33 184			1	Contact housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						interior illum.	innerbelysning	
0290	6A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	7	85 16 916			1	Insulation	Isolering	4
0320						1-pole, female	1-polig, hylsa	
0330						vanity mirror	makeupspegel	
0340	7A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0350								
0360	8	91 23 555			1	Contact housing	Kontakthus	4
0370						4-pole, female	4-polig, hylsa	
0380						sun roof	soltak	
0390	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0400								
0410	9	85 33 184			1	Contact housing	Kontakthus	4
0420						1-pole, female	1-polig, hylsa	
0430						vanity mirror	makeupspegel	
0440	9A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	10	85 16 916			1	Insulation	Isolering	4
0470						1-pole, female	1-polig, hylsa	
0480						vanity mirror	makeupspegel	
0490	10A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-K02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

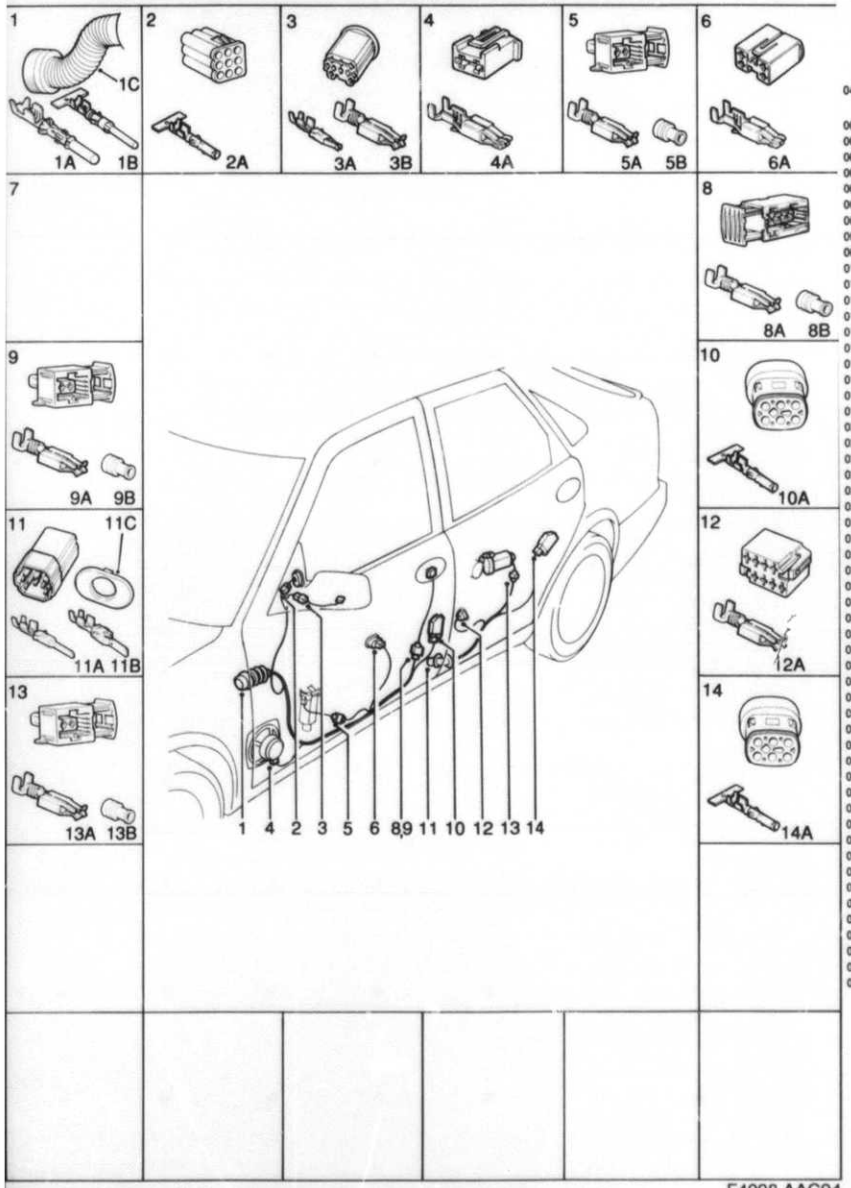

F4998 AAC94

Contact housing etc

2-L08

Doors

1994

Kontakthus etc

Dörrar

1994

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450								
0010	1	42 03 261			1	Connector housing	Kontakthus	4
0020						26-pole, male	26-polig, stift	
0030						connection	skarv	
0040	1A	44 64 228		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0050	1B	44 09 785		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	5
0060	1C	42 22 360			1	Protection	Skydd	4
0070								
0080	2	42 01 208			1	Connector housing	Kontakthus	4
0090						9-pole, female	9-polig, hylsa	
0100						switch	strömställare	
0110						rear view mirror	backspegel	
0120	2A	44 09 728		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	5
0130								
0140	3	44 11 518			1	Connector housing	Kontakthus	
0150						10-pole, female	10-polig, hylsa	
0160						rear view mirror	backspegel	
0170	3A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0180	3B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0190								
0200	4	91 23 548			1	Contact housing	Kontakthus	4
0210						2-pole, female	2-polig, hylsa	
0220						loudspeaker	högtalare	
0230	4A	91 20 957			2	Cable terminal	Kabelsko	8
0240								
0250	5	41 13 411			1	Connector housing	Kontakthus	4
0260						2-pole, female	2-polig, hylsa	
0270						window lift	fönsterhiss	
0280	5A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	5B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0300								
0310	6	91 23 555			1	Contact housing	Kontakthus	4
0320						4-pole, female	4-polig, hylsa	
0330						luggage compartment lock	bagagerumslås	
0340	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0350								
0360	8	41 13 601			1	Connector housing	Kontakthus	8
0370						4-pole, female	4-polig, hylsa	
0380						microswitch	mikrobrytare	
0390						drivers side	förarsida	
0400	8A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410	8B	40 61 958			1	Seal	Tätning	5
0420	8B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0430								
0440	9	41 13 205			1	Connector housing	Kontakthus	8
0450						3-pole, female	3-polig, hylsa	
0460						microswitch	mikrobrytare	
0470						passenger side	passagerarsida	
0480	9A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0490	9B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0500								
0510	10	42 01 190			1	Connector housing	Kontakthus	4
0520						6-pole, female	6-polig, hylsa	
0530						motor	motor	
0540						central lock	centrallås	
0550	10A	44 09 728		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

2-L10

Doors 1994

Dörrar 1994

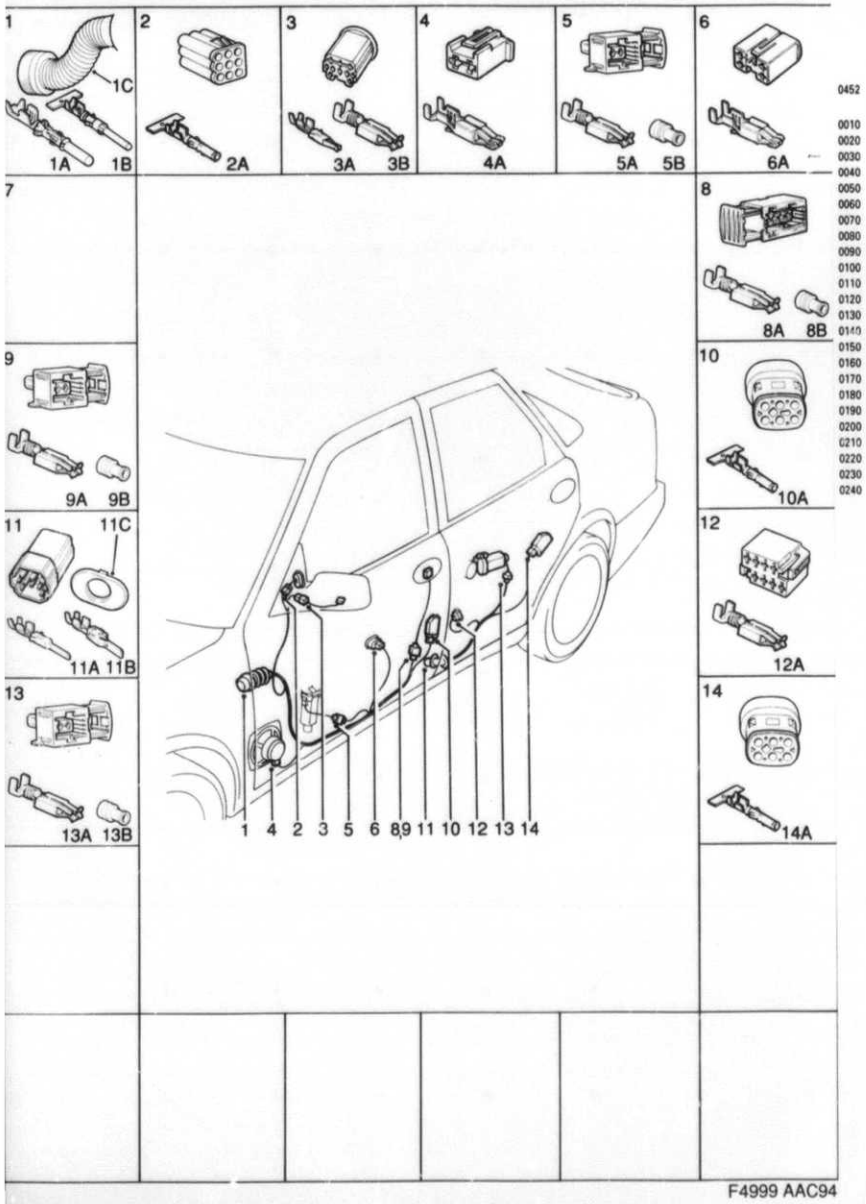

F4999 AAC94


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	11A	41 15 457		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	5
0050	11B	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11C	44 32 902			1	Protection	Skydd	4
0070								
0080	12	91 24 090			1	Contact housing	Kontakthus	4
0090						8-pole, female	8-polig, hylsa	
0100						switch	strömställare	
0110						window lift	fönsterhiss	
0120	12A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0130								
0140	13	41 13 411			1	Connector housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						window lift	fönsterhiss	
0170	13A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0180	13B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0190								
0200	14	42 01 190			1	Connector housing	Kontakthus	4
0210						6-pole, female	6-polig, hylsa	
0220						motor	motor	
0230						central lock	centrallås	
0240	14A	44 09 728		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

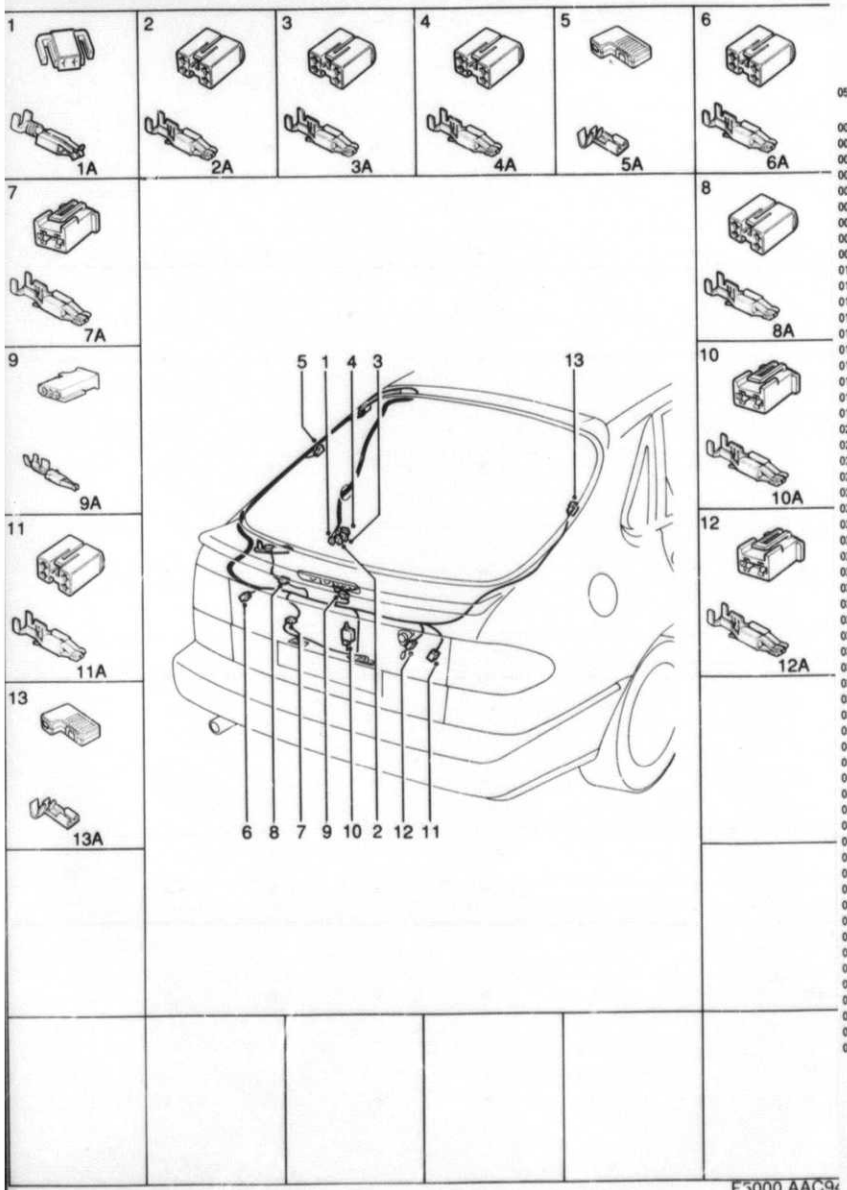

F5000 AAC94

Contact housing etc

2-L12

Boot lid

1994

Kontakthus etc

Baklucka

1994


	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 24 157			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						connection	skarv	
0040	1A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	91 23 555			1	Contact housing	Kontakthus	4
0070						4-pole, female	4-polig, hylsa	
0080						connection	skarv	
0090	2A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0110	3	40 61 503			1	Contact housing	Kontakthus	4
0120						4-pole, female	4-polig, hylsa	
0130						connection	skarv	
0140	3A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						connection	skarv	
0190	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0200								
0210	5	85 21 692			1	Contact housing	Kontakthus	4
0220						1-pole, female	1-polig, hylsa	
0230						rear window	bakruta	
0240	5A	85 22 526		AREA0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0250								
0260	6	91 23 555			1	Contact housing	Kontakthus	4
0270						4-pole, female	4-polig, hylsa	
0280						reverse lamp	backlampa	
0290						rear fog light	dimbaklykta	
0300	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						licence plate light	nummerskyltlykta	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						rear window wiper	bakrutetorkare	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0410								
0420	9	41 13 007			1	Connector housing	Kontakthus	4
0430						3-pole, female	3-polig, hylsa	
0440						high mounted stop light	högt monterad stopplykta	
0450	9A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0460								
0470	10	91 23 548			1	Contact housing	Kontakthus	4
0480						luggage compartment lock	bagagerumslås	
0490	10A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0500								
0510	11	91 23 555			1	Contact housing	Kontakthus	4
0520						4-pole, female	4-polig, hylsa	
0530						reverse lamp	backlampa	
0540	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0550								
0560	12	91 23 548			1	Contact housing	Kontakthus	4
0570						2-pole, female	2-polig, hylsa	
0580						theft alarm	stöldlarm	
0590	12A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

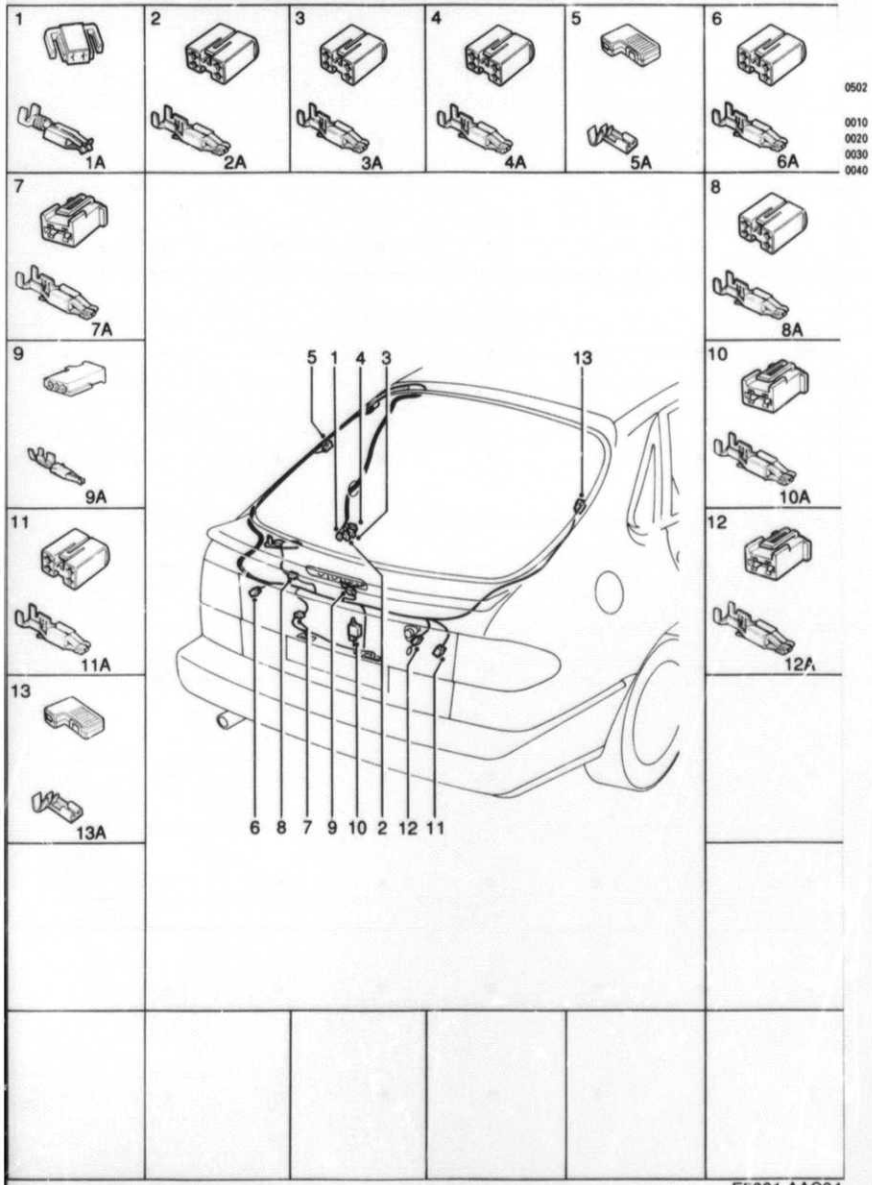

F5001 AAC94

Contact housing etc

2-L14

Boot lid

1994

Kontakthus etc

Baklucka

1994


0502	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	85 21 692			1	Contact housing	Kontakthus	4
0020						1-pole, female	1-polig, hylsa	
0030						rear window	bakruta	
0040	13A	85 22 526		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	5-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

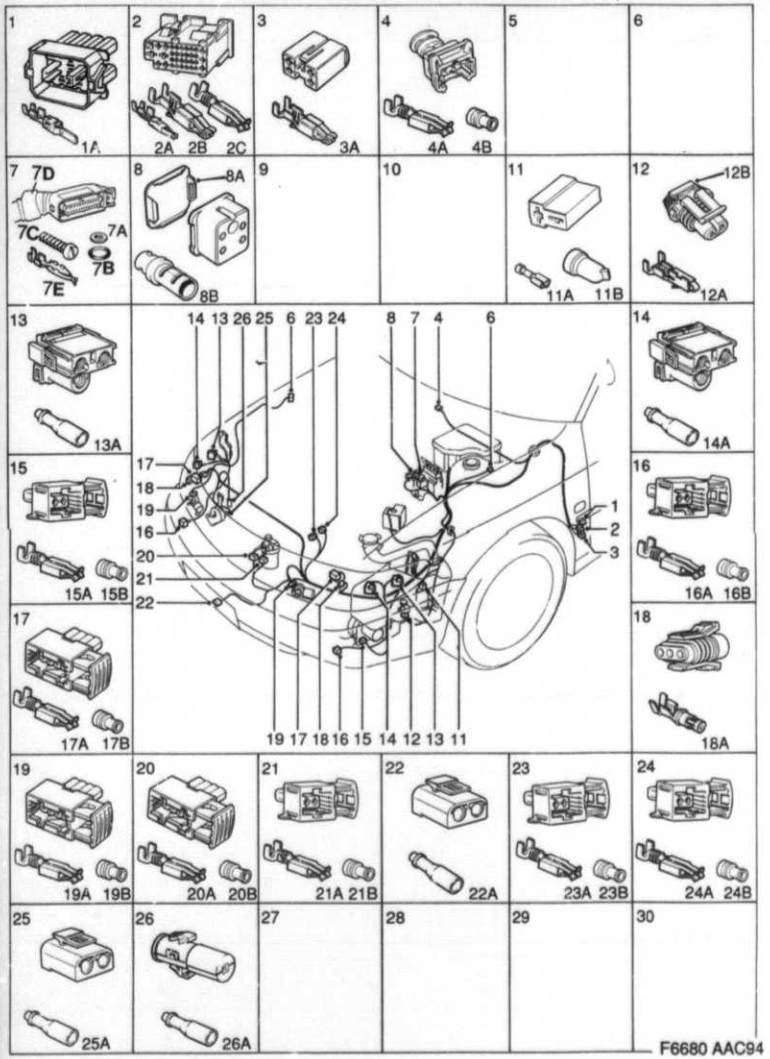

Contact housing etc

2-L16

Front

1995

Kontakthus etc

Främre

1995


0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 461			1	Connector housing	Skarvhus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	1	Cable terminal	Kabelsko	8
0120								
0130	3	91 23 555			1	Contact housing	Kontakthus	4
0140						4-pole, female	4-polig, hylsa	
0150						connection	skarv	
0160	3A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	4	41 78 414			1	Connector housing	Kontakthus	8
0190						2-pole, female	2-polig, hylsa	
0200						SAI	SAI	
0210	4A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220	4B	40 61 966		Ø 1,2-2,0 MM	1	Seal	Tätning	5
0230	4B	40 61 974		Ø 2,1-2,9 MM	1	Seal	Tätning	5
0240								
0250	7	42 24 580			1	Connector housing	Kontakthus	4
0260						25-pole, female	25-polig, hylsa	
0270						module, ABS	modul, ABS	
0280	7A	85 87 461			1	▪Seal	▪Tätning	5
0290	7B	44 12 888			1	▪O-ring	▪O-ring	2
0300	7C	42 23 467			1	▪Screw	▪Skruv	5
0310	7D	44 12 862			1	▪Rubber protection	▪Gummiskydd	4
0320	7E	40 63 970		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0330								
0340	8	44 08 894			1	Connector housing	Kontakthus	4
0350						4-pole, female	4-polig, hylsa	
0360						module, ABS	modul, ABS	
0370	8A	44 08 902			1	Locking	Låsning	4
0380	8B	95 09 746			4	Cable terminal	Kabelsko	5
0390								
0400	11	42 01 315			1	Connector housing	Kontakthus	4
0410						2-pole, female	2-polig, hylsa	
0420						washer pump	spolarpump	
0430	11A	44 64 442		AREA 0,5-10, MM2	2	Cable terminal	Kabelsko	5
0440	11B	42 24 531			1	Protection	Skydd	4
0450								
0460	12	42 01 224			1	Connector housing	Kontakthus	5
0470						2-pole, female	2-polig, hylsa	
0480						level guard	nivåvakt	
0490	12A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0500	12B	42 01 232			1	Locking	Låsning	4
0510								
0520	13	95 19 679			1	Contact housing	Kontakthus	4
0530						3-pole, female	3-polig, hylsa	
0540						reverse lamp	backlampa	
0550	13A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

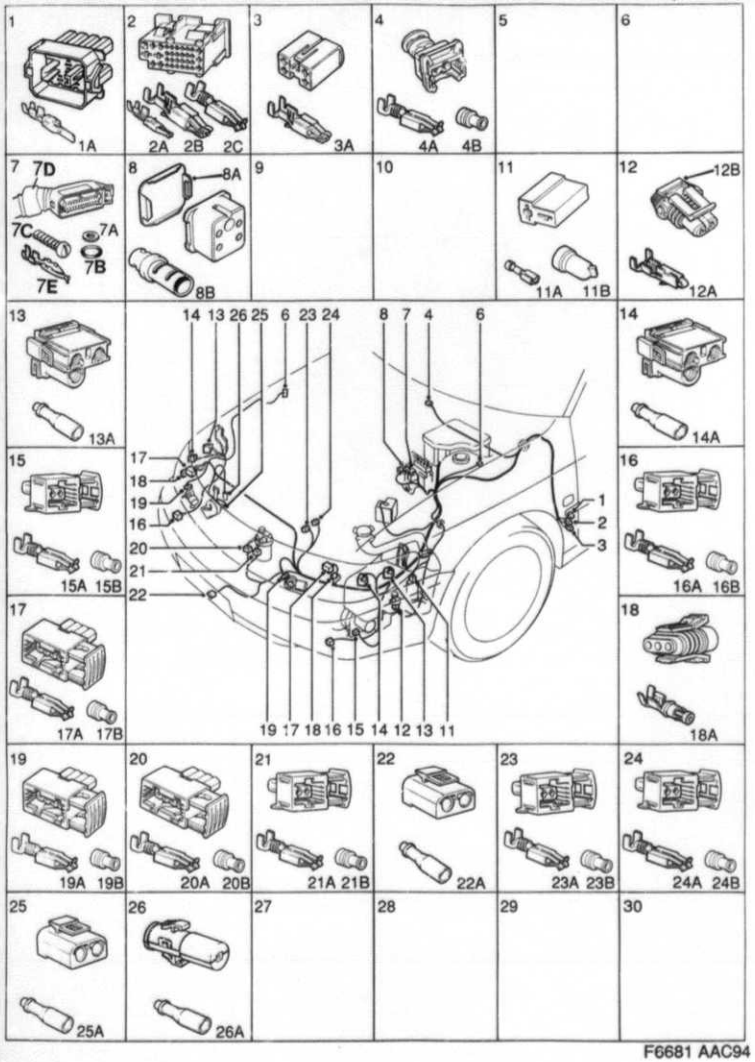

F6681 AAC94

Contact housing etc

2-L18

Front

1995

Kontakthus etc

Främre

1995


0512	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	14	95 19 679			1	Contact housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						direction indicator	blinkers	
0040	14A	85 47 804		AREA 2,5-4,0 MM2	3	Connector	Skarvstycke	5
0050								
0060	15	41 13 403			1	Connector housing	Kontakthus	8
0070						2-pole, female	2-polig, hylsa	
0080						air pump	luftpump	
0090	15A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100	15B	43 54 387		Ø 3,4-3,7 MM	2	Seal	Tätning	5
0110								
0120	16	41 13 205			1	Connector housing	Kontakthus	8
0130						2-pole, female	2-polig, hylsa	
0140						front fog light	dimstrålkastare	
0150	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160	16B	40 61 966		Ø 5,6MM	2	Seal	Tätning	5
0170								
0180	17	41 13 601			1	Connector housing	Kontakthus	8
0190						4-pole, female	4-polig, hylsa	
0200						headlamp	strålkastare	
0210	17A	40 61 586		AREA1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0220	17B	40 61 966		AREA 1,2-2,0 MM2	1	Seal	Tätning	5
0230	17B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0240								
0250	18	44 11 260			1	Connector housing	Kontakthus	4
0260						3-pole, female	3-polig, hylsa	
0270						headlamp levelling	ljuslängdsreglering	
0280	18A	44 11 278		AREA 0,75-1,0 MM2	3	Cable terminal	Kabelsko	5
0290								
0300	19	41 13 601			1	Connector housing	Kontakthus	8
0310						4-pole, female	4-polig, hylsa	
0320						headlamp wiper	strålkastartorkare	
0330	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0340	19B	40 61 966		AREA 1,2-2,0 MM2	3	Seal	Tätning	5
0350								
0360	20	41 13 601			1	Connector housing	Kontakthus	8
0370						4-pole, female	4-polig, hylsa	
0380						pressure monitor	tryckvakt	
0390	20A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0400	20B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0410								
0420	21	41 13 205			1	Connector housing	Kontakthus	8
0430						2-pole, female	2-polig, hylsa	
0440						pressure monitor	tryckvakt	
0450	21A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0460	21B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0470								
0480	22	95 03 319			1	Contact housing	Kontakthus	4
0490						2-pole, female	2-polig, hylsa	
0500						outer temp	yttertemp	
0510	22A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5
0520								
0530	23	41 13 403			1	Connector housing	Kontakthus	8
0540						2-pole, female	2-polig, hylsa	
0550						cooling fan, 2-step	kylfläkt, 2-steg	
0560	23A	43 54 171		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
0570	23B	43 54 387		Ø 3,4-3,7 MM	1	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

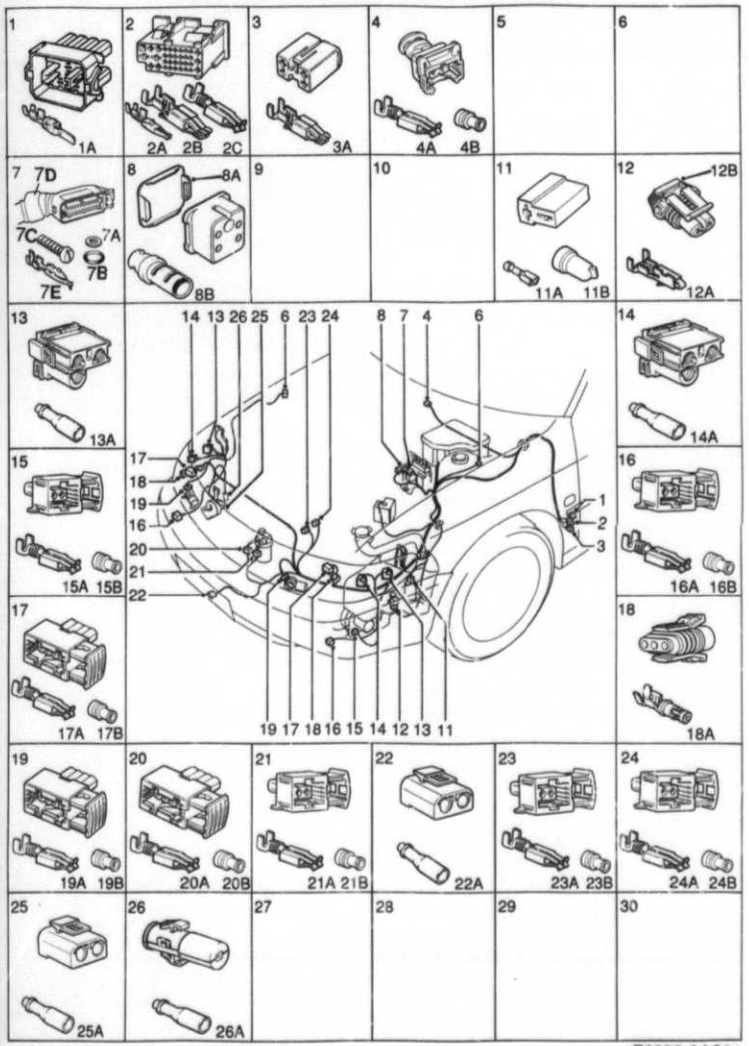

F6682 AAC94

Contact housing etc

2-L20

Front

1995

Kontakthus etc

Främre

1995

0514


Pos	Part No/Art nr	K S	Notis/Anmärkningar	Qty/ Antal	Description	Benämning	S L
24	41 13 411			1	Connector housing	Kontakthus	4
					2-pole, female	2-polig, hylsa	
					cooling fan	kylfläkt	
24A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
24B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
25	41 13 205			1	Connector housing	Kontakthus	8
					2-pole, female	2-polig, hylsa	
					horn	signalhorn	
25A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
26	95 03 418			1	Connector housing	Skarvhus	4
					1-pole, female	1-polig, hylsa	
					compressor	kompressor	
26A	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

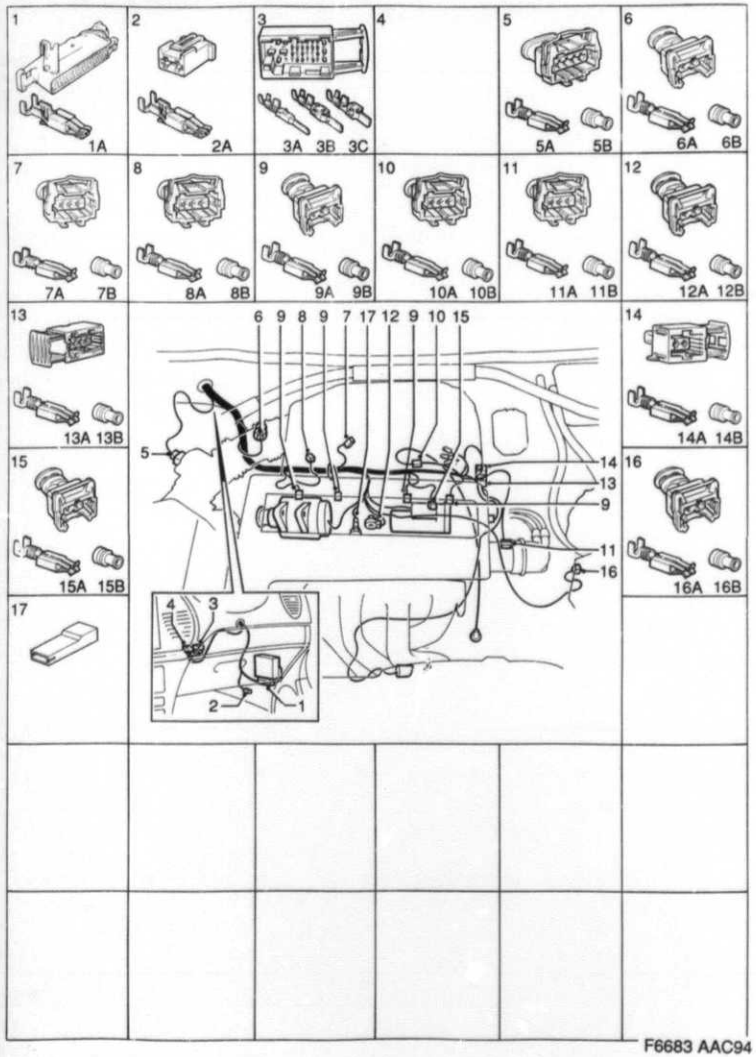

F6683 AAC94

2 -L22

Contact housing etc

Engine, B204I, B234I

1995

Kontakthus etc

Motor, B204I, B234I

1995


0516	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	44	Cable terminal	Kabelsko	8
0060								
0070	2	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						connection	skarv	
0100						coding	kodifiering	
0110	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	3A	41 15 457		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	5
0170	3B	41 15 077		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0180	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	5	44 32 357			1	Connector housing	Kontakthus	8
0210						4-pole, female	4-polig, hylsa	
0220						mass air flow sensor	luftmassamätare	
0230	5A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0240	5B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0250								
0260	6	41 78 414			1	Connector housing	Kontakthus	8
0270						2-pole, female	2-polig, hylsa	
0280						EVAP CP valve	urluftningsventil	
0290	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	7	44 32 316			1	Connector housing	Kontakthus	8
0330						3-pole, female	3-polig, hylsa	
0340						throttle position sensor	lägesgivare	
0350	7A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0360	7B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0370								
0380	8	44 32 324			1	Connector housing	Kontakthus	8
0390						3-pole, female	3-polig, hylsa	
0400						idle speed control	tomgångsreglering	
0410	8A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0420	8B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0430								
0440	9	41 78 414			1	Connector housing	Kontakthus	8
0450						2-pole, female	2-polig, hylsa	
0460						injection valves	insprutningsventiler	
0470	9A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0480	9B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0490								
0500	10	44 32 316			1	Connector housing	Kontakthus	3
0510						3-pole, female	3-polig, hylsa	
0520						crank shaft sensor	vevaxelgivare	
0530	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0540	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

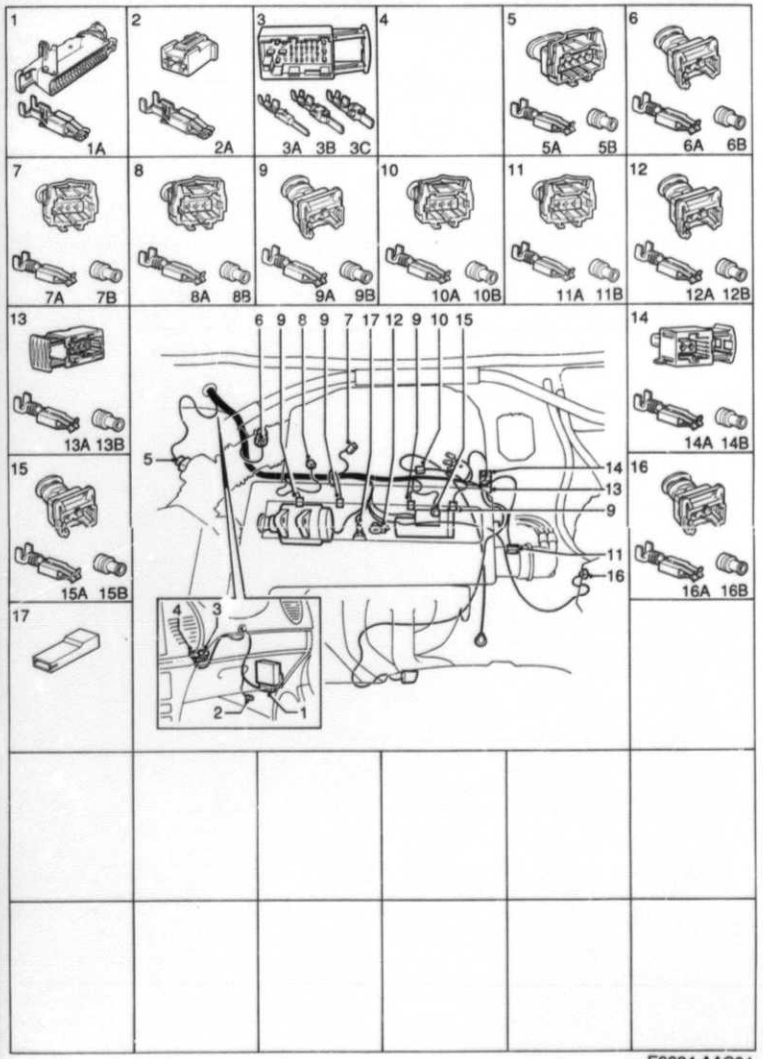

F6684 AAC94

2-L24

Contact housing etc
Engine, B204I, B234I
1995

Kontakthus etc
Motor, B204I, B234I
1995

0518	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 316			1	Connector housing	Kontakthus	8
0020						3-pole, female	3-polig, hylsa	
0030						sensor	givare	
0040						camshaft	kamaxel	
0050	11A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0070								
0080	12	41 78 414			1	Connector housing	Kontakthus	8
0090						2-pole, female	2-polig, hylsa	
0100						knock-sensor	knacksensor	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0130								
0140	13	41 13 601			1	Connector housing	Kontakthus	8
0150						4-pole, female	4-polig, hylsa	
0160						lambda sonde	lambdasond	
0170	13A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0180	13B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0190								
0200	14	41 13 205			1	Connector housing	Kontakthus	8
0210						2-pole, female	2-polig, hylsa	
0220						temperature sensor	temperarturgivare	
0230						coolant	kylvätska	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0260								
0270	15	41 78 414			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperarturgivare	
0300						coolant	kylvätska	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						ignition coil	tändspole	
0370	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-A02

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

TABLE OF CONTENTS

Connectors		
Connectors etc, 1994	3B : 5	2-J06
Connectors etc, 1995	3B : 63	2-L16
Connectors etc, 1996	3B : 137	3-C22
Connectors etc, 1997-	3B : 217	3-G06
Cable terminals		
Cable terminals, 1994	3B : 297	3-J14
Cable terminals, 1995	3B : 301	3-J18
Cable terminals, 1996	3B : 307	3-J24
Cable terminals, 1997-	3B : 313	3-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-A03

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1994	3B : 5	2-J06
Kontakthus etc, 1995	3B : 63	2-L16
Kontakthus etc, 1996	3B : 137	3-C22
Kontakthus etc, 1997-	3B : 217	3-G06

Ledningsskor

Ledningsskor, 1994	3B : 297	3-J14
Ledningsskor, 1995	3B : 301	3-J18
Ledningsskor, 1996	3B : 307	3-J24
Ledningsskor, 1997-	3B : 313	3-K06

3-A04

SUMARIO

Contactores

Contactores etc, 1994	3B : 5	2-J06
Contactores etc, 1995	3B : 63	2-L16
Contactores etc, 1996	3B : 137	3-C22
Contactores etc. 1997-	3B : 217	3-G06

Terminal cable


Terminal cable etc, 1994	3B : 297	3-J14
Terminal cable etc, 1995	3B : 301	3-J18
Terminal cable etc, 1996	3B : 307	3-J24
Terminal cable etc, 1997-	3B : 313	3-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

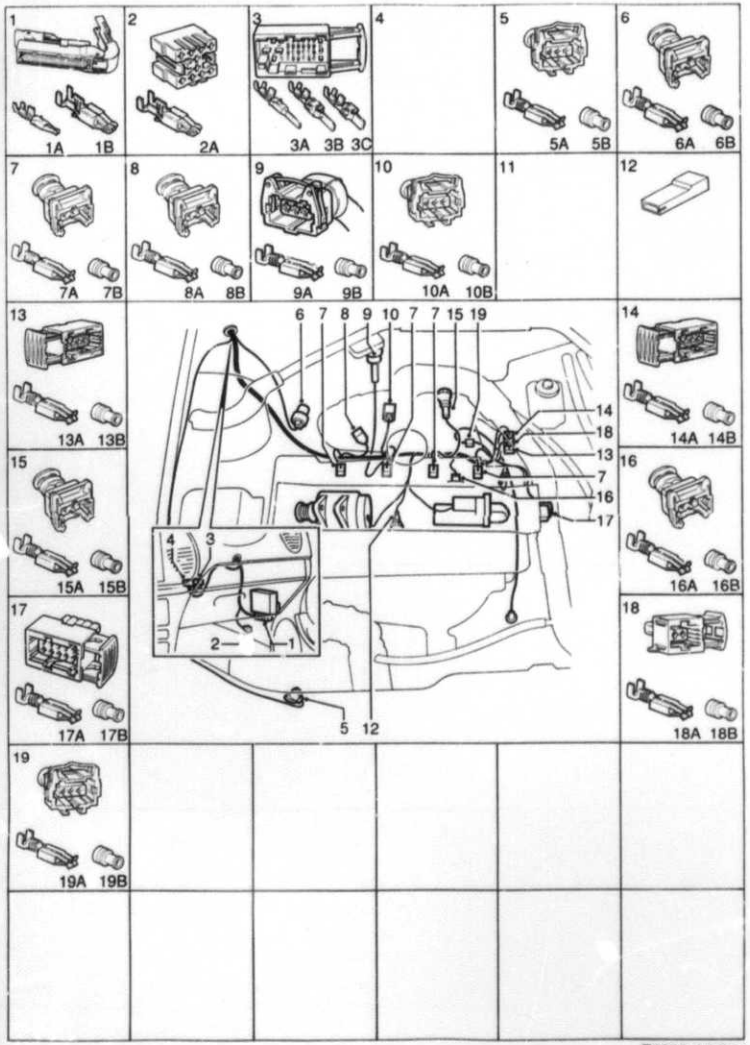

F6685 AAC94

3-A06

Contact housing etc
Engine, B204 L
1995

Kontakthus etc
Motor, B204 L
1995


0520	Pos	Part no/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 616			1	Connector housing	Kontakthus	8
0020						70-pole, female	70-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Trionic	Trionic	
0050	1A	41 15 499		AREA 0,5-1,0 MM2	46	Cable terminal	Kabelsko	8
0060	1B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0070								
0080	2	91 23 399			1	Connector housing	Skarvhus	4
0090						10-pole, female	10-polig, hylsa	
0100						test connection	testuttag	
0110	2A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	3A	41 15 457		AREA 0,5-1,0 MM2	19	Cable terminal	Kabelsko	5
0170	3B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	5	44 32 316			1	Connector housing	Kontakthus	8
0210						3-pole, female	3-polig, hylsa	
0220						solenoid valve	magnetventil	
0230						APC	APC	
0240	5A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	5B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	6	41 78 414			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						EVAP CP valve	urluftningsventil	
0300	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0310	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0320								
0330	7	41 78 414			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						injection valves	insprutningsventiler	
0360	7A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0370	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380								
0390	8	41 78 414			1	Connector housing	Kontakthus	8
0400						2-pole, female	2-polig, hylsa	
0410						idle speed control	tomgångsreglering	
0420	8A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0430	8B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	9	44 32 316			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						pressure sensor	tryckgivare	
0480						intake manifold	inloppsrör	
0490	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	9B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0510								
0520	10	44 32 316			1	Connector housing	Kontakthus	8
0530						3-pole, female	3-polig, hylsa	
0540						throttle position sensor	spjällägesgivare	
0550	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0560	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

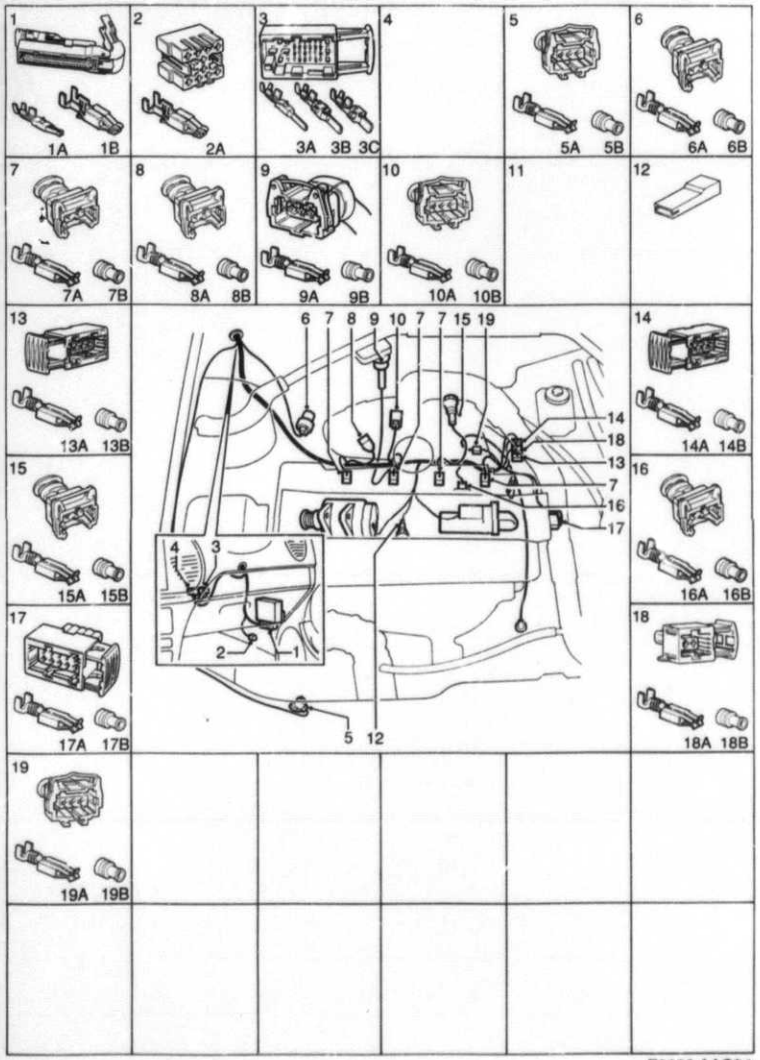

F6686 AAC94

3-A08

Contact housing etc
Engine, B204 L
1995

Kontakthus etc
Motor, B204 L
1995


0522	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	12	44 09 801			1	Cable terminal	Kabelsko	5
0020						1-pole, female	1-polig, hylsa	
0030						EOP sensor	oljetrycksgivare	
0040								
0050	13	41 13 601			1	Connector housing	Kontakthus	8
0060						4-pole, female	4-polig, hylsa	
0070						lambda sonde	lambdasond	
0080						engine	motor	
0090	13A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100	13B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0110								
0120	14	41 13 601			1	Connector housing	Kontakthus	8
0130						4-pole, female	4-polig, hylsa	
0140						lambda sonde	lambdasond	
0150						TW catalytic converter	katalysator	
0160	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170	14B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0180								
0190	15	41 78 414			1	Connector housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						temperature sensor	temperarturgivare	
0220	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0230	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0240								
0250	16	41 78 414			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						temperature sensor	temperarturgivare	
0280						coolant	kylvätska	
0290	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	17	41 14 005			1	Connector housing	Kontakthus	8
0330						10-pole, female	10-polig, hylsa	
0340						ignition discharge module	tändkasset	
0350	17A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0360	17B	40 61 974		AREA 2,1-2,9 MM2	9	Seal	Tätning	5
0370								
0380	18	41 13 205			1	Connector housing	Kontakthus	8
0390						2-pole, female	2-polig, hylsa	
0400						temperature sensor	temperarturgivare	
0410						coolant	kylvätska	
0420	18A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	18B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	19	44 32 324			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						crank shaft sensor	vevaxelgivare	
0480	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490	19B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

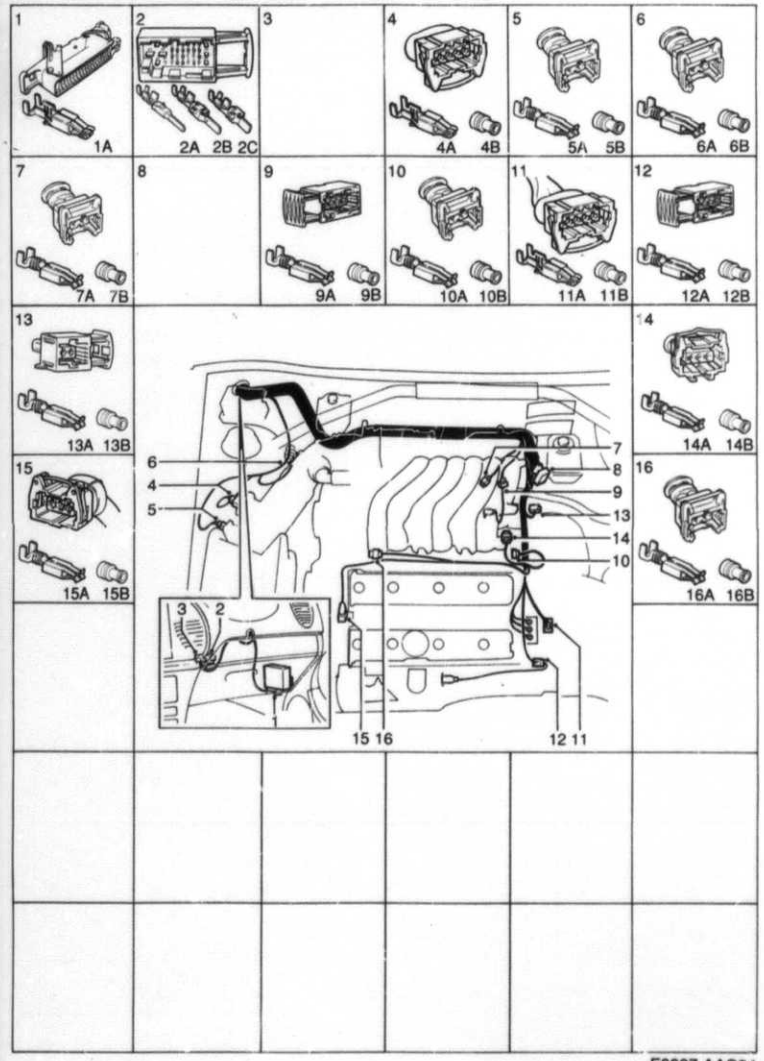

F6687 AAC94

3 -A10

Contact housing etc
Engine, B258 I
1995

Kontakthus etc
Motor, B258 I
1995

0524	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	46	Cable terminal	Kabelsko	8
0060								
0070	2	41 73 852			1	Contact housing	Kontakthus	4
0080						33-pole, male	33-polig, stift	
0090						connection	skarv	
0100	2A	41 15 457		AREA 0,5-1,0 MM2	17	Cable terminal	Kabelsko	5
0110	2B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0120	2C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0130								
0140	4	44 32 357			1	Connector housing	Kontakthus	8
0150						4-pole, female	4-polig, hylsa	
0160						mass air flow sensor	luftmassamätare	
0170	4A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0180	4B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0190								
0200	5	41 78 414			1	Connector housing	Kontakthus	8
0210						2-pole, female	2-polig, hylsa	
0220						temperature sensor	temperarturgivare	
0230	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0240	5B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0250								
0260	6	41 78 414			1	Connector housing	Kontakthus	8
0270						2-pole, female	2-polig, hylsa	
0280						EVAP CP valve	urluftningsventil	
0290	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	7	41 78 414			1	Connector housing	Kontakthus	8
0330						2-pole, female	2-polig, hylsa	
0340						knock-sensor	knacksensor	
0350						rear	bakre	
0360	7A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0370	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380								
0450	9	41 13 601				Connector housing	Kontakthus	8
0460						4-pole, female	4-polig, hylsa	
0470						pre-heating	förvärmning	
0480						lambda sonde	lambdasond	
0490	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	9B	40 61 974		AREA 2,1-2,5 MM2	3	Seal	Tätning	5
0510								
0520	10	41 78 414			1	Connector housing	Kontakthus	8
0530						2-pole, female	2-polig, hylsa	
0540						temperature sensor	temperarturgivare	
0550						coolant	kylvätska	
0560	10A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0570	10B	40 61 974		AREA 2,1-2,5 MM2	2	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-A12

Contact housing etc
Engine, B258 I
1995

Kontakthus etc
Motor, B258 I
1995

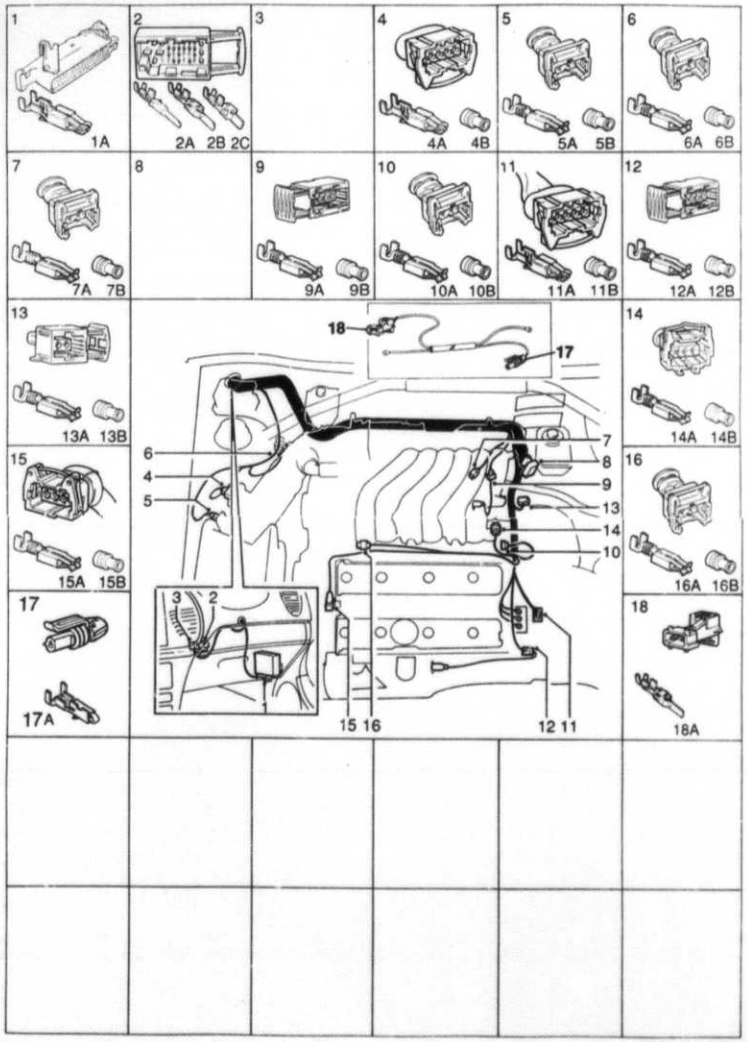

F7204 AAC94


0526	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 357			1	Connector housing	Kontakthus	8
0020						4-pole, female	4-polig, hylsa	
0030						ignition coil	tändspole	
0040	11A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050	11B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0060								
0070	12	41 13 601			1	Connector housing	Kontakthus	8
0080						4-pole, female	4-polig, hylsa	
0090						lambda sonde	lambdasond	
0100						front	främre	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0130								
0140	13	41 13 205				Connector housing	Kontakthus	8
0150						2-pole, female	2-polig, hylsa	
0160						temperature sensor	temperarturgivare	
0170						coolant	kylvätska	
0180	13A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190	13B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0200								
0210	14	44 32 310			1	Connector housing	Kontakthus	8
0220						3-pole, female	3-polig, hylsa	
0230						crank shaft sensor	vevaxelgivare	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	15	44 89 647			1	Connector housing	Kontakthus	4
0280						3-pole, female	3-polig, hylsa	
0290						sensor	givare	
0300						camshaft	kamaxel	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						knock-sensor	knacksensor	
0370						front	främre	
0380	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0390	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0400								
0410	17	42 03 378			1	Connector housing	Kontakthus	4
0420						1-pole, female	1-polig, hylsa	
0430						EOP sensor	oljetrycksgivare	
0440	17A	44 18 505		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	18	41 13 650			1	Connector housing	Kontakthus	8
0470						4-pole, male	4-polig, stift	
0480						connection	skarv	
0490	18A	41 15 192		AREA 1,0-2,5	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

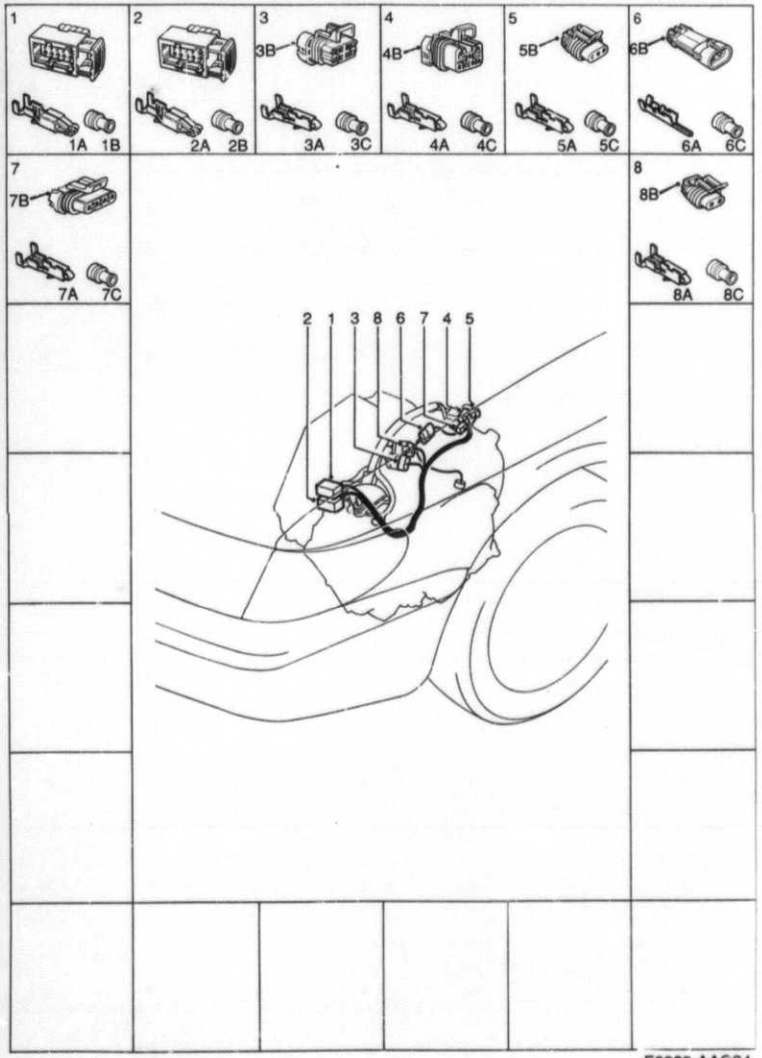

3-A14

Contact housing etc
Gearbox, TCM
1995

Kontakthus etc
Växellåda, TCM
1995


0528	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	40 61 586		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050	1B	40 61 974		AREA 2,1-2,9 MM2	10	Seal	Tätning	5
0060								
0070	2	41 14 005			1	Connector housing	Kontakthus	8
0080						10-pole, female	10-polig, hylsa	
0090						connection	skarv	
0100	2A	40 61 586		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0110	2B	40 61 974		AREA 2,1-2,9 MM2	10	Seal	Tätning	5
0120								
0130	3	42 03 535				Connector housing	Kontakthus	4
0140						8-pole, female	8-polig, hylsa	
0150						shift solenoid	växlingssolenoid	
0160	3A	44 18 505		AREA 0,5-1,0 MM2	6	Cable terminal	Kabelsko	5
0170	3B	42 03 543			1	Locking	Låsning	4
0180	3C	44 19 313			6	Seal	Tätning	5
0190						blue	blå	
0200								
0210	4	42 03 501			1	Connector housing	Kontakthus	4
0220						7-pole, female	7-polig, hylsa	
0230						contact	kontakt	
0240						gear position	växelläge	
0250	4A	44 18 505		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	5
0260	4B	42 03 519			1	Locking	Låsning	4
0270	4C	44 19 313			5	Seal	Tätning	5
0280						blue	blå	
0290								
0300	5	42 03 444			1	Connector housing	Kontakthus	4
0310						3-pole, male	3-polig, stift	
0320						output shaft speed sensor	hastighetsgivare	
0330	5A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	5B	42 03 451			1	Locking	Låsning	4
0350	5C	44 19 313			2	Seal	Tätning	5
0360						blue	blå	
0370								
0380	6	42 03 592			1	Connector housing	Kontakthus	4
0390						2-pole, female	2-polig, hylsa	
0400						input shaft speed sensor	hastighetsgivare	
0410	6A	44 18 489		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0420	6B	42 01 232			1	Locking	Låsning	4
0430	6C	44 19 313			2	Seal	Tätning	5
0440						blue	blå	
0450								
0460	7	42 03 477			1	Connector housing	Kontakthus	4
0470						4-pole, female	4-polig, hylsa	
0480						contact	kontakt	
0490						starter inhibitor	startspärr	
0500	7A	44 18 505		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	5
0510	7B	42 03 485			1	Locking	Låsning	4
0520	7C	44 19 313			4	Seal	Tätning	5
0530						blue	blå	
0540								
0550	8	42 01 224			1	Connector housing	Kontakthus	5
0560						2-pole, female	2-polig, hylsa	
0570						tranmitter	oljetempgivare	
0580	8A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0590	8B	42 01 232			1	Locking	Låsning	4
0600	8C	44 19 313			2	Seal	Tätning	5
0610						blue	blå	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

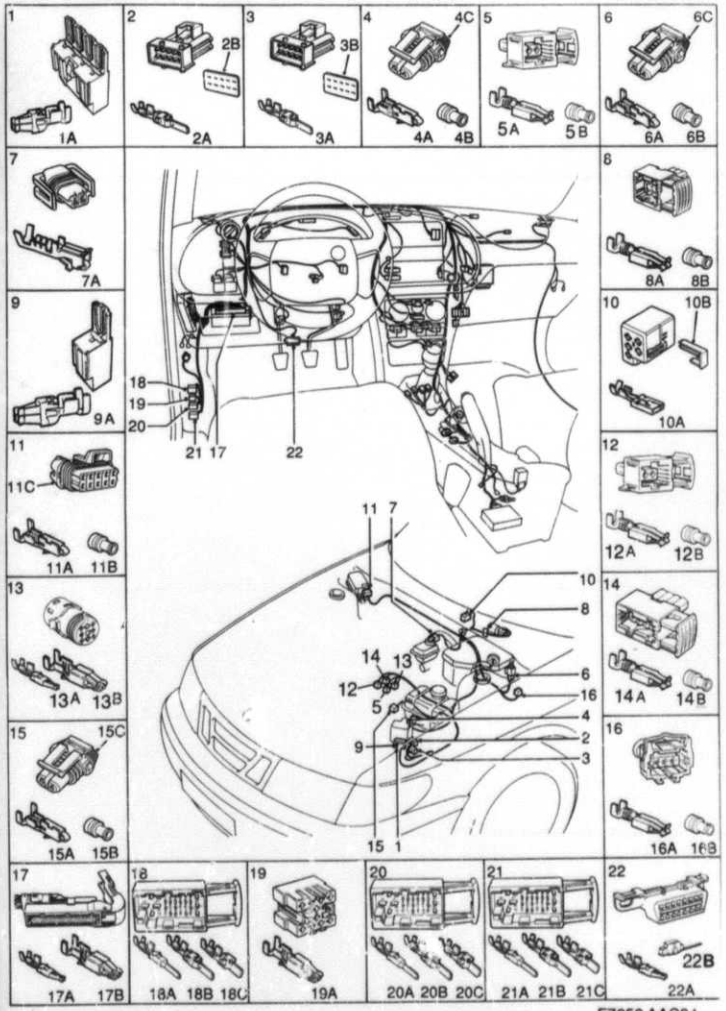

F7659 AAC94

3-A16

Contact housing etc

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 30 181			1	Connector housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						fuse box	säkringsdosa	
0040	1A	44 64 343		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 14 054			1	Connector housing	Kontakthus	8
0070						10-pole, male	10-polig, stift	
0080						connection	skarv	
0090	2A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0100	2B	41 14 153			1	Seal	Tätning	5
0110								
0120	3	41 14 054			1	Connector housing	Kontakthus	8
0130						10-pole, male	10-polig, stift	
0140						connection	skarv	
0150	3A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0160	3B	41 14 153			1	Seal	Tätning	5
0170								
0180	4	44 34 841			1	Connector housing	Kontakthus	5
0190						2-pole, female	2-polig, hylsa	
0200						level sensor	nivågivare	
0210						coolant	kylvätska	
0220	4A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0230	4B	44 19 313			2	Seal	Tätning	5
0240						blue	blå	
0250	4C	42 01 232			1	Locking	Låsning	4
0260								
0270	5	41 13 205			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperarturgivare	
0300						clutch	koppling	
0310	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	5B	40 61 966		AREA 1,2-2,0MM2	2	Seal	Tätning	5
0330								
0340	6	42 01 224			1	Connector housing	Kontakthus	5
0350						2-pole, female	2-polig, hylsa	
0360						bonnet	motorhuv	
0370	6A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0380	6B	44 19 313			2	Seal	Tätning	5
0390						blue	blå	
0400	6C	42 01 232			1	Locking	Låsning	4
0410								
0420	7	42 01 273			1	Connector housing	Kontakthus	4
0430						2-pole, female	2-polig, hylsa	
0440						level sensor	nivågivare	
0450						brake fluid	bromsvätska	
0460	7A	44 88 458		AREA 0,35-0,5 MM2	2	Cable terminal	Kabelsko	5
0470								
0480	8	41 13 809			1	Connector housing	Kontakthus	4
0490						6-pole, female	6-polig, hylsa	
0500						windscreen wiper	vindrutetorkare	
0510	8A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0520	8B	40 61 966		AREA 1,2-2,0 MM2	6	Seal	Tätning	5
0530								
0540	9	42 30 199		CV	1	Connector housing	Kontakthus	4
0550						1-pole, female	1-polig, hylsa	
0560						fuse box	säkringsdosa	
0570	9A	44 64 343		AREA 4,0-6,0 MM2	1	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

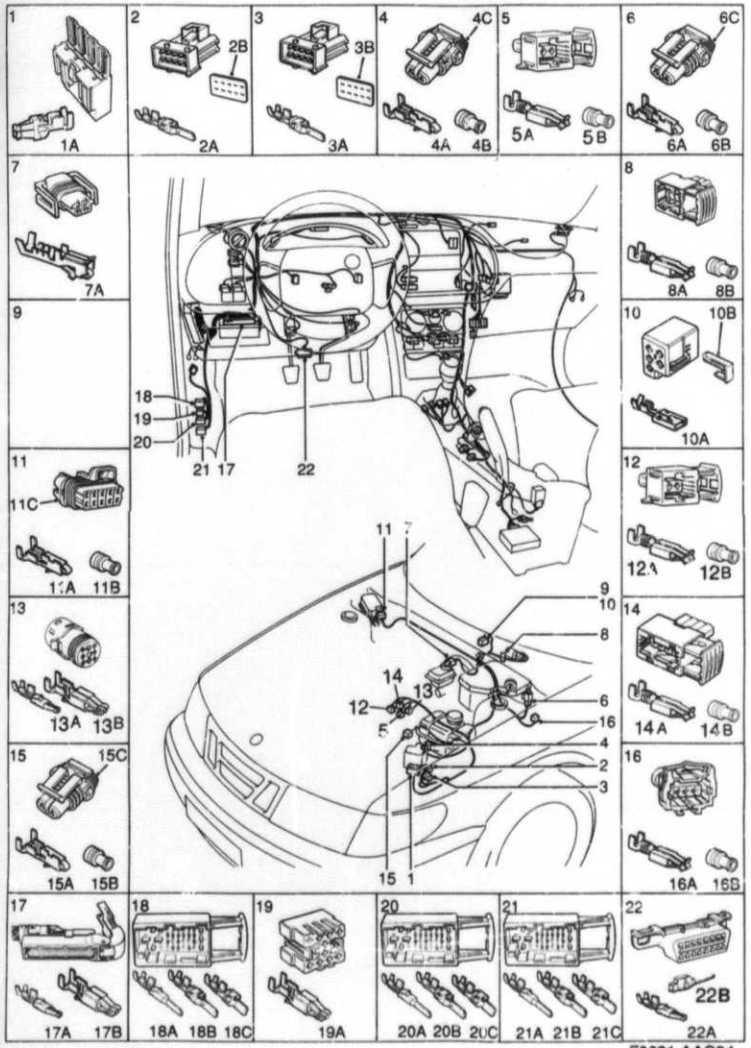

F6691 AAC94

Contact housing etc

3-A18

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0532	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	44 63 014			1	Connector housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030						fan motor	fläktmotor	
0040	10A	44 12 961		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	5
0050	10B	44 63 022			1	Locking	Låsning	4
0060								
0070	11	42 03 568			1	Connector housing	Kontakthus	4
0080						10-pole, female	10-polig, hylsa	
0090						speed control system	farthållningssystem	
0100	11A	44 18 505		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	5
0110	11B	44 19 313			10	Seal	Tätning	5
0120						blue	blå	
0130	11C	42 03 576			1	Locking	Låsning	4
0140								
0150	12	41 13 205			1	Connector housing	Kontakthus	8
0160						2-pole, female	2-polig, hylsa	
0170						input shaft speed sensor	hastighetsgivare	
0180						gearbox	växellåda	
0190	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0200	12B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0210								
0220	13	44 66 462			1	Connector housing	Kontakthus	4
0230						8-pole, female	8-polig, hylsa	
0240						actuator	manöverdon	
0250						ACS	ACS	
0260	13A	41 15 499		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	8
0270	13B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	14	41 13 601			1	Connector housing	Kontakthus	8
0300						4-pole, female	4-polig, hylsa	
0310						sensor	givare	
0320						gearbox	växellåda	
0330	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0340	14B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0350								
0360	15	42 01 224			1	Connector housing	Kontakthus	5
0370						2-pole, female	2-polig, hylsa	
0380						revers light contact	backljuskontakt	
0390	15A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0400	15B	44 19 313			2	Seal	Tätning	5
0410						blue	blå	
0420	15C	42 01 232			1	Locking	Låsning	4
0430								
0440	16	44 32 316			1	Connector housing	Kontakthus	8
0450						3-pole, female	3-polig, hylsa	
0460						center of gravity sensor	accelerationssensor	
0470	16A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0480	16B	40 61 966		AREA 1,0-2,0 MM2	3	Seal	Tätning	5
0490								
0500	17	41 76 616			1	Connector housing	Kontakthus	8
0510						70-pole, female	70-polig, hylsa	
0520						ICE	ICE	
0530	17A	41 15 499		AREA 0,5-1,0 MM2	49	Cable terminal	Kabelsko	8
0540	17B	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0550								
0560	18	41 73 852			1	Contact housing	Kontakthus	4
0570						33-pole, male	33-polig, stift	
0580						connection	skarv	
0590	18A	41 15 457		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	5
0600	18B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0610	18C	41 15 580		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

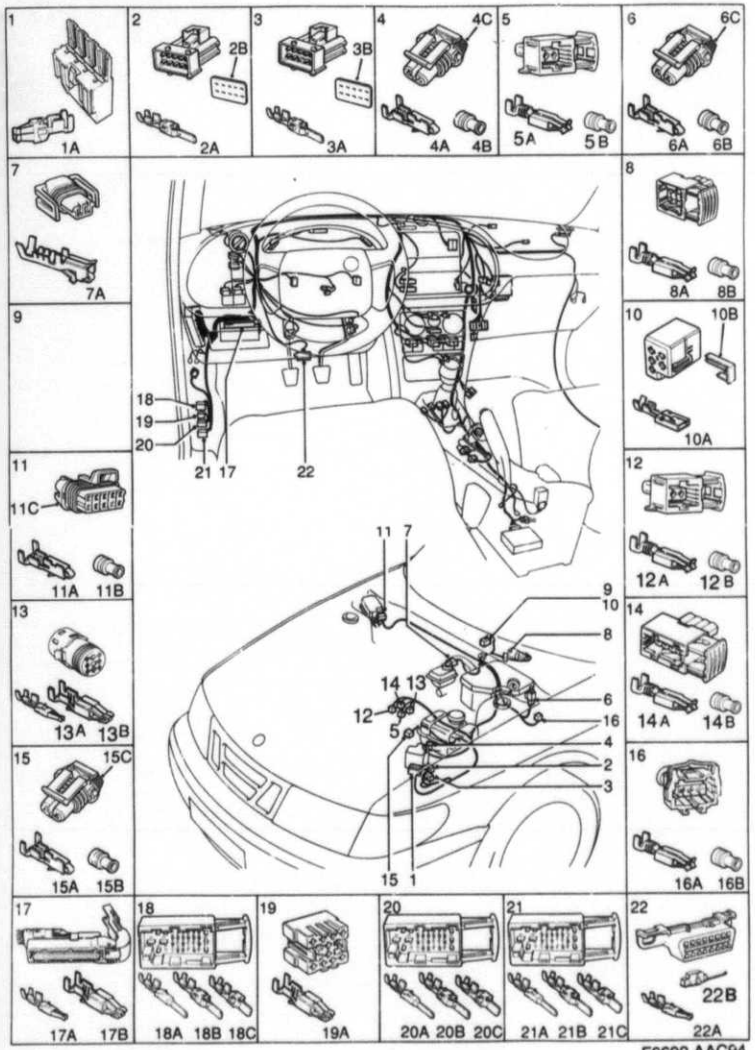

F6692 AAC94

Contact housing etc

3-A20

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0534	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	19	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	19A	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	20	41 73 852			1	Contact housing	Kontakthus	4
0070						33-pole, male	33-polig, stift	
0080						connection	skarv	
0090	20A	41 15 457		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	5
0100	20B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	20C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0120								
0130	21	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	21A	41 15 457		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	5
0170	21B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	21C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	22	42 24 606			1	Connector housing	Kontakthus	8
0210						16-pole, female	16-polig, hylsa	
0220						data link connector	diagnostikutlag	
0230	22A	41 15 499		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	8
0240	22B	44 34 833			1	Cover	Kåpa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

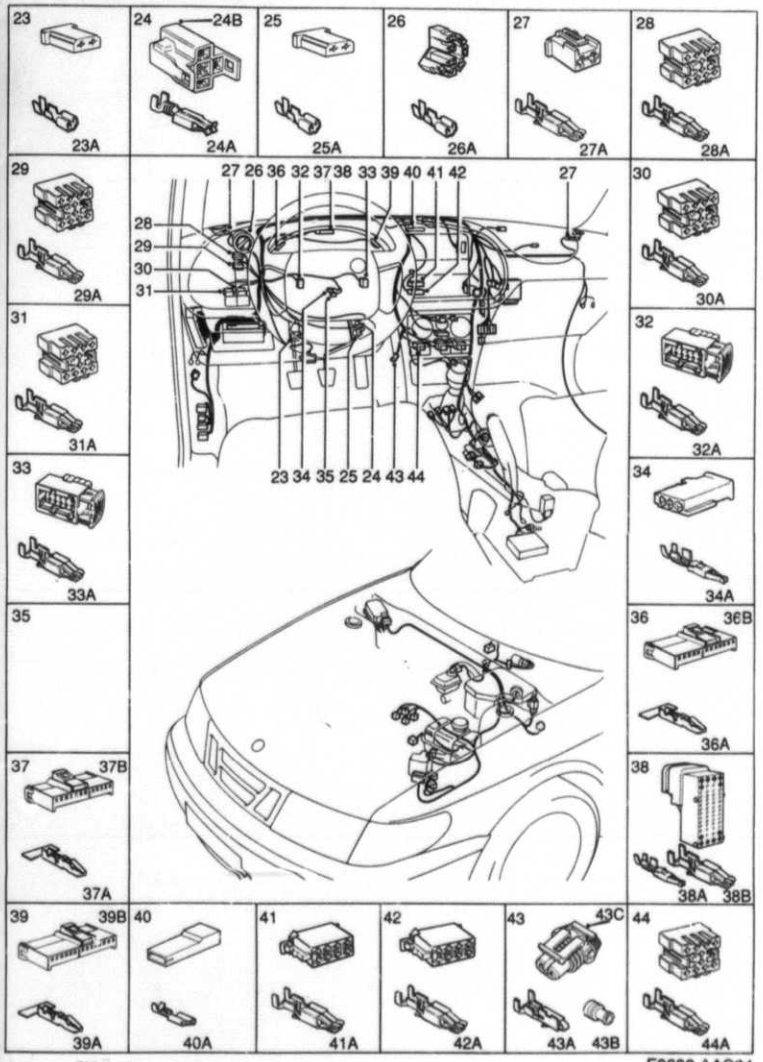

F6693 AAC94

Contact housing etc

3-A22

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0536	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	23	83 78 630			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						contact	kontakt	
0040						clutch	koppling	
0050	23A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0060								
0070	24	42 24 317			1	Connector housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						brake light switch	bromsljuskontakt	
0100	24A	91 20 791		AREA 2,5-4,0 MM2	4	Cable terminal	Kabelsko	8
0110	24B	42 24 333			1	Locking	Låsning	4
0120								
0130	25	83 78 630			1	Contact housing	Kontakthus	4
0140						2-pole, female	2-polig, hylsa	
0150						contact	kontakt	
0160						brake	broms	
0170	25A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0180								
0190	26	85 44 363			1	Contact housing	Kontakthus	4
0200						8-pole, female	8-polig, hylsa	
0210						light switch	ljusomkopplare	
0220	26A	44 64 400		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	5
0230								
0240	27	91 23 548			1	Contact housing	Kontakthus	4
0250						2-pole, female	2-polig, hylsa	
0260						loudspeaker	högtalare	
0270	27A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	28	91 23 399			1	Connector housing	Skarvhus	4
0300						10-pole, female	10-polig, hylsa	
0310						rear fog light	dimbaklykta	
0320	28A	91 20 957		AREA 1,0 2,5 MM2	4	Cable terminal	Kabelsko	8
0330								
0340	29	91 23 399			1	Connector housing	Skarvhus	4
0350						10-pole, female	10-polig, hylsa	
0360						fog light	dimljus	
0370	29A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0380								
0390	30	91 23 399			1	Connector housing	Skarvhus	4
0400						10-pole, female	10-polig, hylsa	
0410						rheostat	reostat	
0420	30A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0430								
0440	31	91 23 399			1	Connector housing	Skarvhus	4
0450						10-pole, female	10-polig, hylsa	
0460						headlamp levelling	ljusläggdsreglering	
0470	31A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0480								
0490	32	41 14 005			1	Connector housing	Kontakthus	8
0500						10-pole, female	10-polig, hylsa	
0510						direction indicator	blinkers	
0520	32A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	3-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

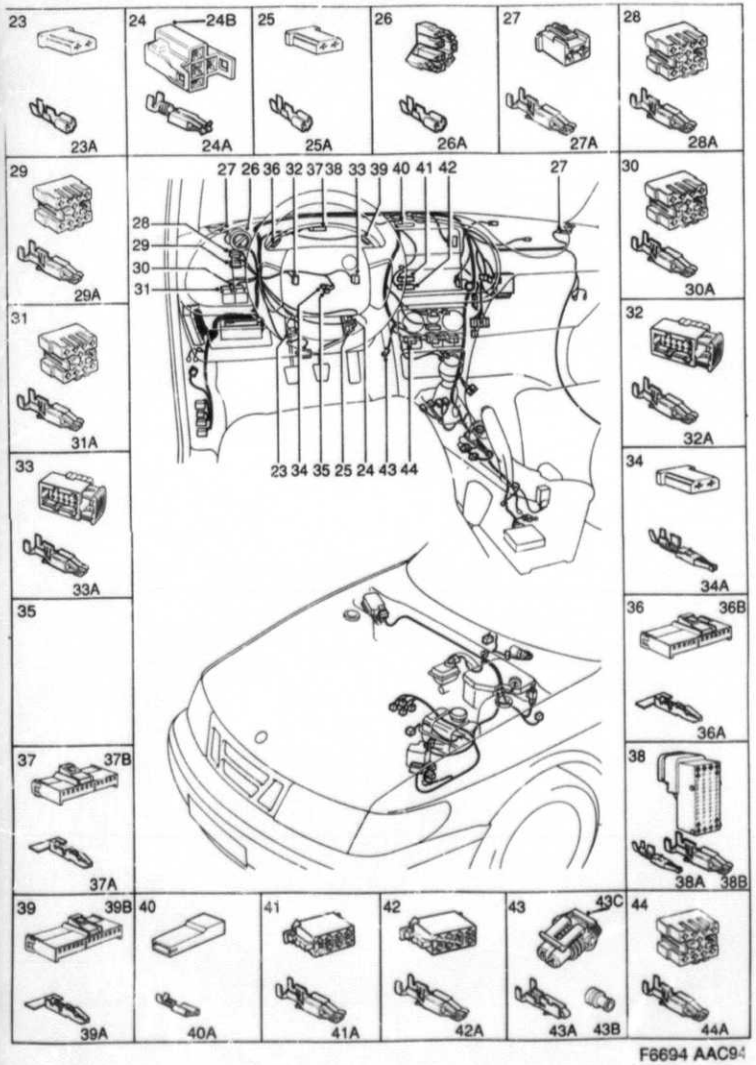

F6694 AAC94

3-A24

Contact housing etc

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0538	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	33	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						windscreen wiper	vindrutetorkare	
0040	33A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050								
0060	34	45 17 702			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						air-bag	airbag	
0090	34A	44 66 801		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	36	44 09 181			1	Connector housing	Kontakthus	4
0120						12-pole, female	12-polig, hylsa	
0130						instrument	instrument	
0140	36A	42 24 515		AREA 0,2-0,5 MM2	7	Cable terminal	Kabelsko	5
0150	36B	44 09 207			1	Cover	Kåpa	4
0160								
0170	37	44 09 165			1	Connector housing	Kontakthus	4
0180						12-pole, female	12-polig, hylsa	
0190						instrument	instrument	
0200	37A	42 24 515		AREA 0,2-0,5 MM2	12	Cable terminal	Kabelsko	5
0210	37B	44 09 207			1	Cover	Kåpa	4
0220								
0230	38	41 15 408			1	Connector housing	Kontakthus	4
0240						56-pole, female	56-polig, hylsa	
0250						instrument	instrument	
0260	38A	41 15 499		AREA 0,5-1,0 MM2	33	Cable terminal	Kabelsko	8
0270	38B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0280								
0290	39	44 09 199			1	Connector housing	Kontakthus	4
0300						12-pole, female	12-polig, hylsa	
0310						instrument	instrument	
0320	39A	42 24 515		AREA 0,2-0,5 MM2	11	Cable terminal	Kabelsko	5
0330	39B	44 09 207			1	Cover	Kåpa	4
0340								
0350	40	85 16 916			1	Insulation	Isolering	4
0360						1-pole, female	1-polig, hylsa	
0370						seat belt warning	bältesvarning	
0380	40A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0390								
0400	41	42 03 626			1	Connector housing	Kontakthus	4
0410						8-pole, female	8-polig, hylsa	
0420						radio	radio	
0430	41A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0440								
0450	42	42 03 618			1	Connector housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						radio	radio	
0480	42A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0490								
0500	43	42 01 224			1	Connector housing	Kontakthus	5
0510						2-pole, female	2-polig, hylsa	
0520						kick-down switch	kick-downströmställare	
0530	43A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0540	43B	44 19 313			2	Seal	Tätning	5
0550						blue	blå	
0560	43C	42 01 232			1	Locking	Låsning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

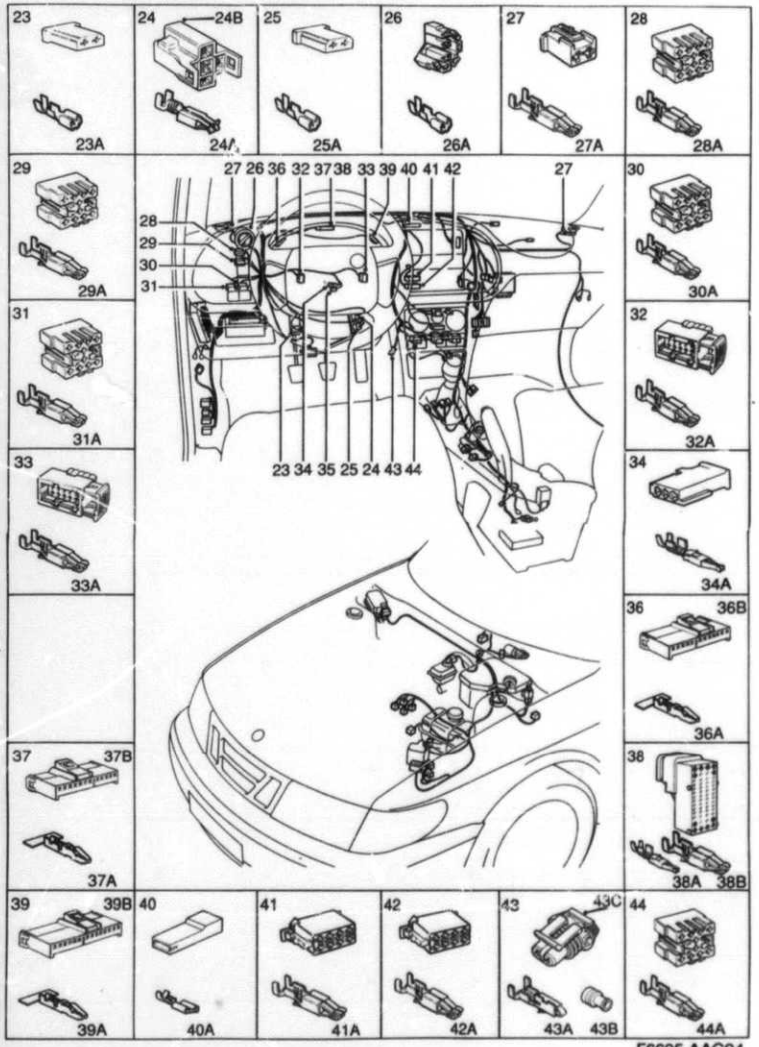

3-B02

Contact housing etc
Instrument panel
1995

Kontakthus etc
Instrumentpanel
1995


0540	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	44	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						TCS	TCS	
0050	44A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

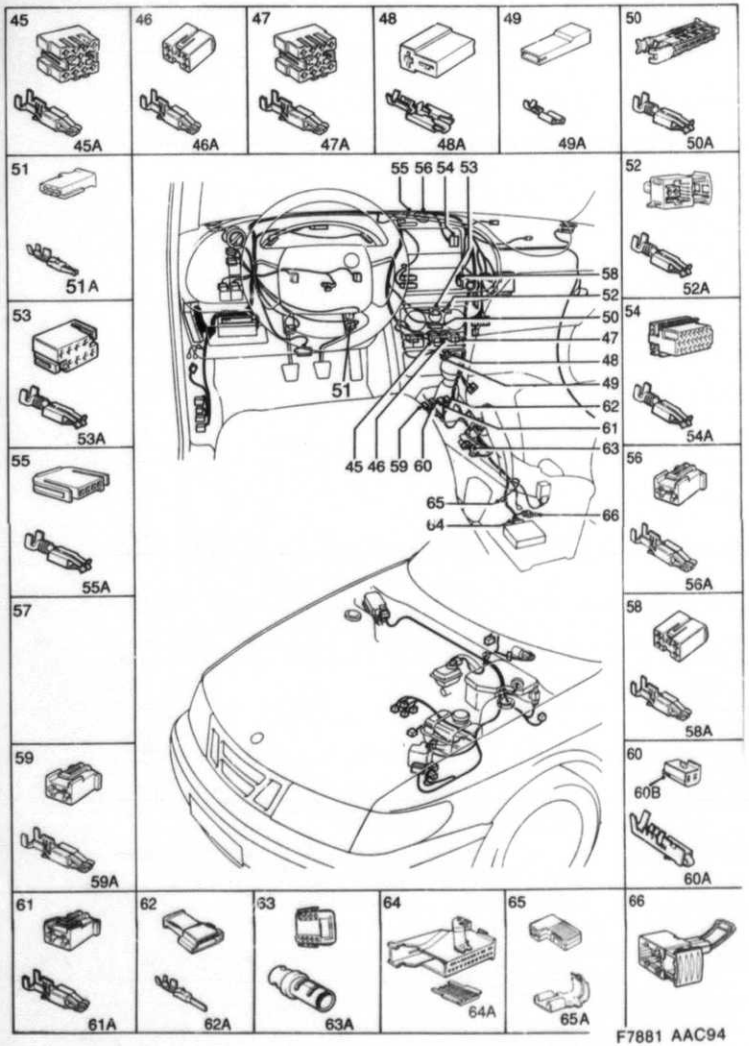

Contact housing etc

3 -B04

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995


0542	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	45	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						heating pad	värmedyna	
0050	45A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0060								
0070	46	91 23 555			1	Contact housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						sensor	sensor	
0100						indoor temperature	innerlufttemperatur	
0110	46A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0120								
0130	47	91 23 399			1	Connector housing	Skarvhus	4
0140						10-pole, female	10-polig, hylsa	
0150						switch	strömställare	
0160						heating pad	värmedyna	
0170	47A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0180								
0190	48	85 74 949			1	Contact housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						cigarette lighter	cigarettändare	
0220	48A	44 64 400		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0230								
0240	49	85 33 184			1	Contact housing	Kontakthus	4
0250						1-pole, female	1-polig, hylsa	
0260						lighting	belysning	
0270						cigarette lighter	cigarettändare	
0280	49A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0290								
0300	50	95 65 045			1	Contact housing	Kontakthus	5
0310						39-pole, female	39-polig, hylsa	
0320						ACC	ACC	
0330	50A	44 66 736		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	50A	40 63 970		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0350	50A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0360								
0370	52	41 13 205			1	Connector housing	Kontakthus	8
0380						2-pole, female	2-polig, hylsa	
0390						background lighting	bakgrundsbelysning	
0400	52A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0410								
0420	53	91 24 090			1	Contact housing	Kontakthus	4
0430						8-pole, female	8-polig, hylsa	
0440						AC	AC	
0450	53A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0460								
0470	54	42 23 624			1	Connector housing	Kontakthus	4
0480						22-pole, female	22-polig, hylsa	
0490						information display	informationsdisplay	
0500	54A	41 15 499		AREA 0,5-1,0 MM2	18	Cable terminal	Kabelsko	8
0510								
0520	55	40 60 869			1	Contact housing	Kontakthus	5
0530						4-pole, female	4-polig, hylsa	
0540						sunlight sensor	solljusavkännare	
0550	55A	40 63 970		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

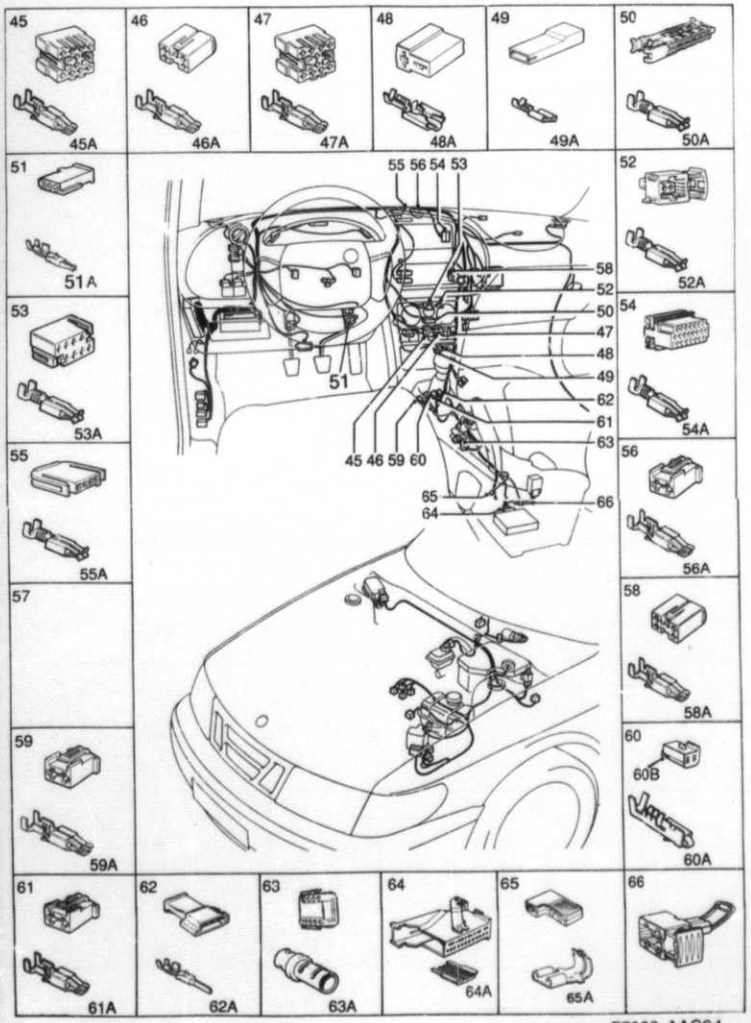

F7882 AAC94

3-B06

Contact housing etc
Instrument panel
1995

Kontakthus etc
Instrumentpanel
1995


0544	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	56	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						theft alarm	stöldlarm	
0040	56A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	57	41 13 007			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						sensor	givare	
0090						accelerator pedal	gaspedal	
0100	57A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	58	91 23 555			1	Contact housing	Kontakthus	4
0130						4-pole, female	4-polig, hylsa	
0140						warning flasher	varningsblinklykta	
0150	5 \	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0160								
0170	59	91 23 548			1	Contact housing	Kontakthus	4
0180						2-pole, female	2-polig, hylsa	
0190						lighting	belysning	
0200						gear position	växelläge	
0210	59A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220								
0230	60	44 11 740			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						shift solenoid	växlingssolenoid	
0260	60A	44 88 151		AREA0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0270	60B	44 11 757			1	Locking	Låsning	4
0280								
0290	61	91 23 548			1	Contact housing	Kontakthus	4
0300						2-pole, female	2-polig, hylsa	
0310						switch	strömställare	
0320						SPORTS	SPORT	
0330	61A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0340								
0350	62	41 13 056			1	Connector housing	Kontakthus	4
0360						3-pole, male	3-polig, stift	
0370						switch	strömställare	
0380						WINTER	VINTER	
0390	62A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0400								
0410	63	42 24 457			1	Connector housing	Kontakthus	4
0420						9-pole, female	9-polig, hylsa	
0430						starter switch	tändningslås	
0440	63A	95 09 746			7	Cable terminal	Kabelsko	5
0450								
0460	64	47 34 448			1	Cover	Kåpa	4
0470						30-pole	30-polig	
0480						airbag module	airbagmodul	
0490	64A	47 34 471			1	Locking	Låsning	4
0500								
0510	65	44 89 076		AREA 0,5-1,5 MM2	1	Connector housing	Kontakthus	4
0520						switch	strömställare	
0530						handbrake	handbroms	
0540	65A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0550								
0560	66	44 30 153			1	Resistor	Motstånd	6
0570						air-bag	airbag	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

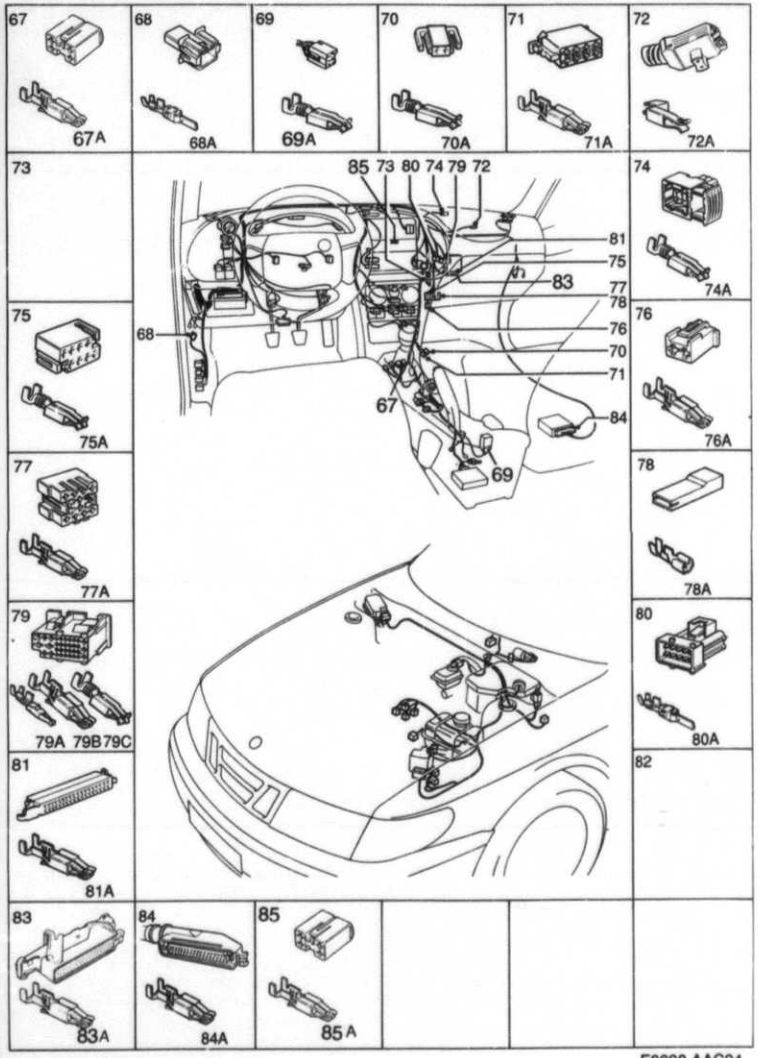

3-B08

Contact housing etc

Instrument panel

1995

Kontakthus etc

Instrumentpanel

1995

0546	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	67	91 23 555			1	Contact housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						gear position indicator	växellägesindikator	
0040	67A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	68	41 17 164			1	Connector housing	Kontakthus	4
0070						2-pole, male	2-polig, stift	
0080						catalytic converter temp	katalysatortemp	
0090	68A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0101	69	42 24 168			1	Connector housing	Kontakthus	4
0102						5-pole, female	5-polig, hylsa	
0103						rear seat	baksäte	
0104	69A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0105								
0110	70	91 24 157			1	Contact housing	Kontakthus	4
0120						2-pole, female	2-polig, hylsa	
0130						amplifier	förstärkare	
0140	70A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0150								
0160	71	42 03 626			1	Connector housing	Kontakthus	4
0170						8-pole, female	8-polig, hylsa	
0180						radio	radio	
0190	71A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0200								
0210	72	95 52 183			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						air-bag	airbag	
0240	72A	95 52 191			2	Cable terminal	Kabelsko	5
0250								
0260	74	41 13 809			1	Connector housing	Kontakthus	4
0270						6-pole, female	6-polig, hylsa	
0280						telephone	telefon	
0290	74A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0300								
0310	75	91 24 090			1	Contact housing	Kontakthus	4
0320						8-pole, female	8-polig, hylsa	
0330						fan	fläkt	
0340						ACC	ACC	
0350	75A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0360								
0370	76	91 23 548			1	Contact housing	Kontakthus	4
0380						2-pole, female	2-polig, hylsa	
0390						recirculation	recirkulation	
0400	76A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0410								
0420	77	91 23 399			1	Connector housing	Skarvhus	4
0430						10-pole, female	10-polig, hylsa	
0440						motor	motor	
0450						ACC	ACC	
0460	77A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0470								
0480	78	85 16 916			1	Insulation	Isolering	4
0490						1-pole, female	1-polig, hylsa	
0500						anti-freeze thermostate	frysskyddstermostat	
0510	78A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-B10

Contact housing etc
Instrument panel
1995

Kontakthus etc
Instrumentpanel
1995

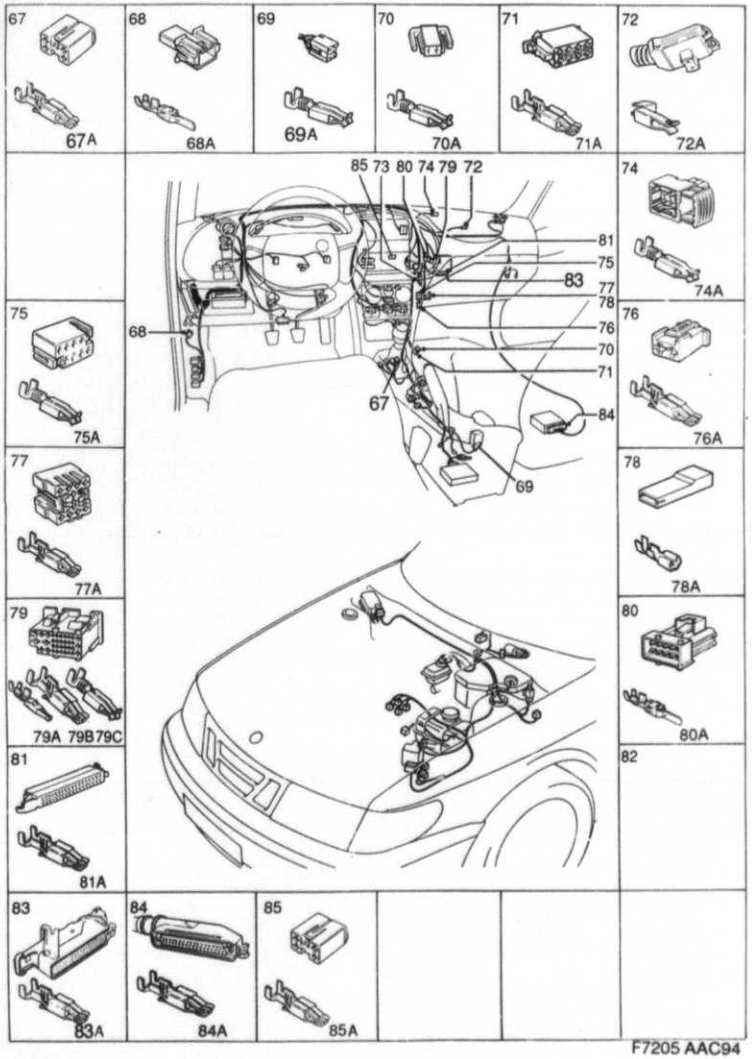


0548	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	79	41 73 803			1	Contact housing	Kontakthus	4
0020						33-pole, female	33-polig, hylsa	
0030						connection	skarv	
0040	79A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0050	79B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0060	79C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0070								
0080	80	41 14 054			1	Connector housing	Kontakthus	8
0090						10-pole, male	10-polig, stift	
0100						connection	skarv	
0110	80A	41 15 077		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0120								
0130	81	42 03 659			1	Connector housing	Kontakthus	4
0140						35-pole, female	35-polig, hylsa	
0150						electronic unit	elektronikenhet	
0160						TCM	TCM	
0170	81A	91 20 957		AREA 1,0-2,5 MM2	34	Cable terminal	Kabelsko	8
0180								
0190	83	42 22 311			1	Connector housing	Kontakthus	4
0200						55-pole, female	55-polig, hylsa	
0210						electronic unit	elektronikenhet	
0220						ACS	ACS	
0230	83A	91 20 957		AREA 1,0-2,5 MM2	33	Cable terminal	Kabelsko	8
0240								
0250	84	44 10 619			1	Connector housing	Kontakthus	8
0260						35-pole, female	35-polig, hylsa	
0270						electronic unit	elektronikenhet	
0280						TCS	TCS	
0290	84A	91 20 957		AREA 1,0-2,5 MM2	23	Cable terminal	Kabelsko	8
0300								
0310	85	91 23 555			1	Contact housing	Kontakthus	4
0320						radio	radio	
0330	85A	40 63 087		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

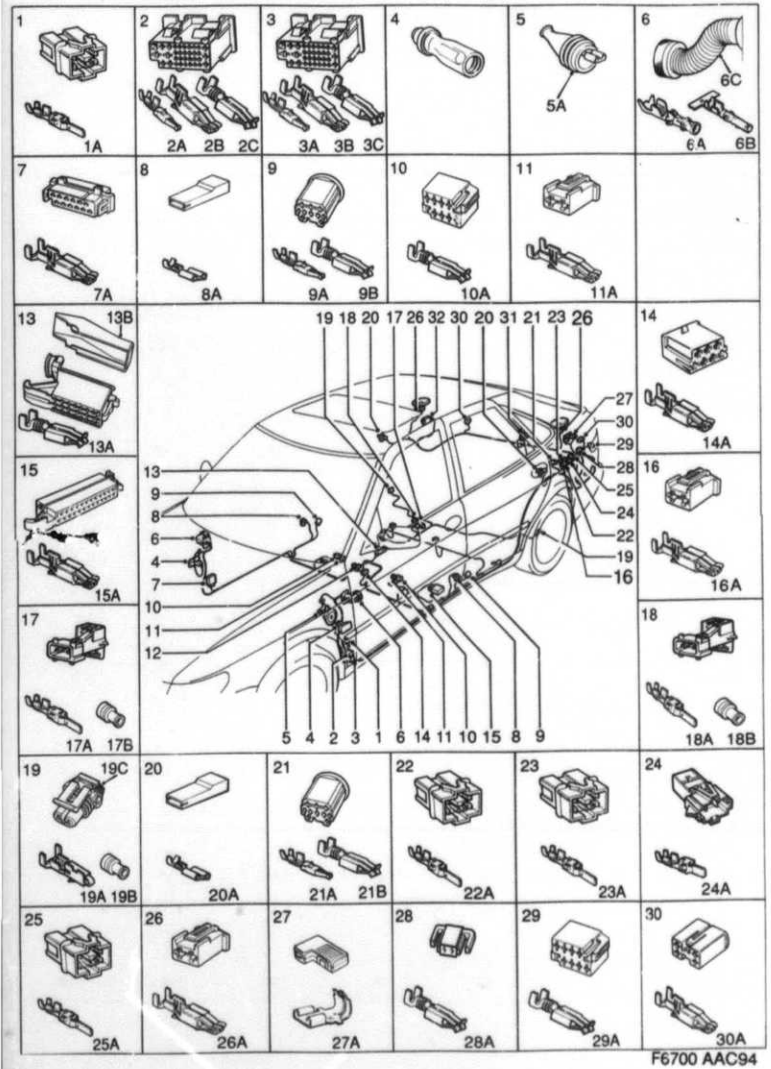

F6700 AAC94

3-B12

Contact housing etc
Rear, 3D, 5D
1995

Kontakthus etc
Bakre, 3D, 5D
1995


0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0210						1-pole, female	1-polig, hylsa	
0220						side indicator lamp	sidoblinklykta	
0230								
0240	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0250						1-pole, female	1-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	5A	42 03 683			1	Protection	Skydd	4
0280								
0290	6	42 03 253			1	Connector housing	Kontakthus	4
0300						26-pole, female	26-polig, hylsa	
0310						front door	framdörr	
0320	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0330	6B	44 09 728		AREA 1,0-2,5 MM2	22	Cable terminal	Kabelsko	5
0340	6C	42 22 352			1	Protection	Skydd	4
0350								
0360	7	95 25 031			1	Contact housing	Kontakthus	5
0370						12-pole, female	12-polig, hylsa	
0380						central lock	centrallås	
0390	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0400								
0410	8	85 16 916			1	Insulation	Isolering	4
0420						1-pole, female	1-polig, hylsa	
0430						switch	strömställare	
0440	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	9	44 11 518			1	Connector housing	Kontakthus	
0470						10-pole, female	10-polig, hylsa	
0480						rear door	bakdörr	
0490	9A	41 15 499		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	8
0500	9B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	10	91 24 090			1	Contact housing	Kontakthus	4
0530						8-pole, female	8-polig, hylsa	
0540						front seat	framstol	
0550	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

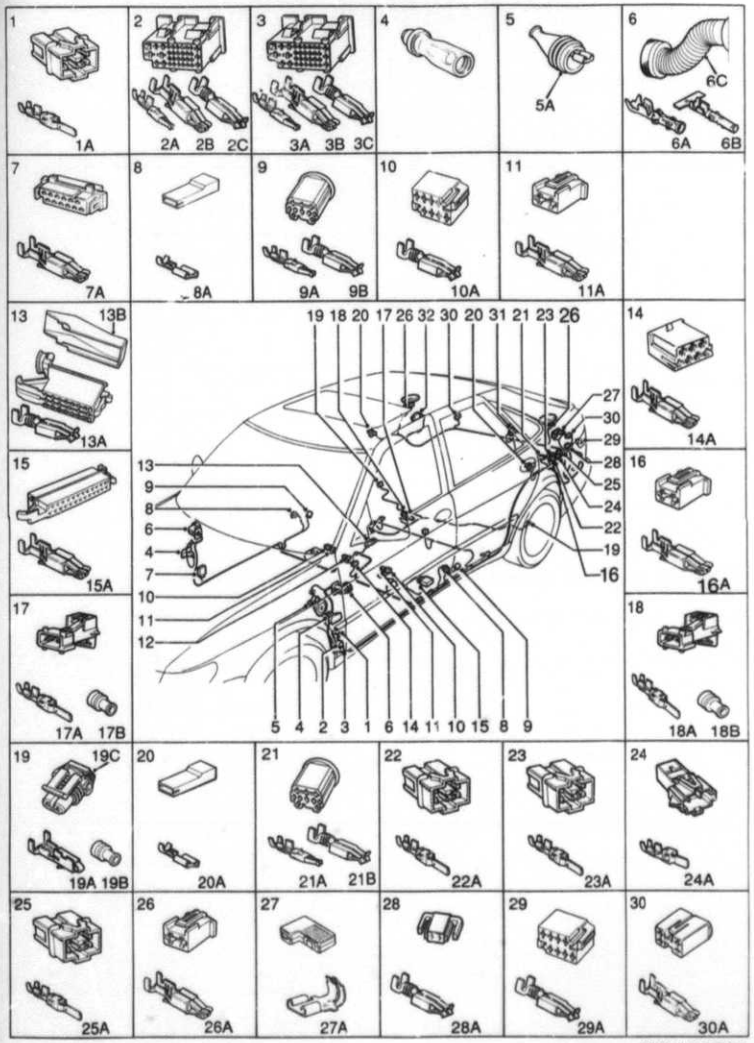

F6701 AAC94

Contact housing etc

3-B14

Rear, 3D, 5D

1995

Kontakthus etc

Bakre, 3D, 5D

1995


0552	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	13	40 60 893			1	Contact housing	Kontakthus	5
0070						19-pole, female	19-polig, hylsa	
0080						window lift	fönsterhiss	
0090	13A	91 20 957		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0100	13A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0110	13B	40 67 617			1	Cover	Kåpa	4
0120								
0130	14	91 23 381			1	Contact housing	Kontakthus	4
0140						7-pole, female	7-polig, hylsa	
0150						interior illum.	innerbelysning	
0160	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	15	42 01 323			1	Connector housing	Kontakthus	4
0190						25-pole, female	25-polig, hylsa	
0200						theft alarm	stöldlarm	
0210	15A	91 20 957		AREA 1,0-2,5 MM2	19	Cable terminal	Kabelsko	8
0220								
0230	16	91 23 548			1	Contact housing	Kontakthus	4
0240						2-pole, female	2-polig, hylsa	
0250						connection	skarv	
0260	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	17	41 13 254			1	Connector housing	Kontakthus	8
0290						2-pole, male	2-polig, stift	
0300						fuel pump	bränslepump	
0310	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0330								
0340	18	41 13 254			1	Connector housing	Kontakthus	8
0350						2-pole, male	2-polig, stift	
0360						fuel pump	bränslepump	
0370	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0390								
0400	19	42 03 428			1	Connector housing	Kontakthus	4
0410						2-pole, female	2-polig, hylsa	
0420						sensor, ABS	sensor, ABS	
0430	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0440	19B	44 19 305			1	Seal	Tätning	5
0450						red	röd	
0460	19B	44 19 313			1	Seal	Tätning	5
0470						blue	blå	
0480	19C	42 01 232			1	Locking	Låsning	4
0490								
0500	20	85 16 916			1	Insulation	Isolering	4
0510						1-pole, female	1-polig, hylsa	
0520						switch	strömställare	
0530	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

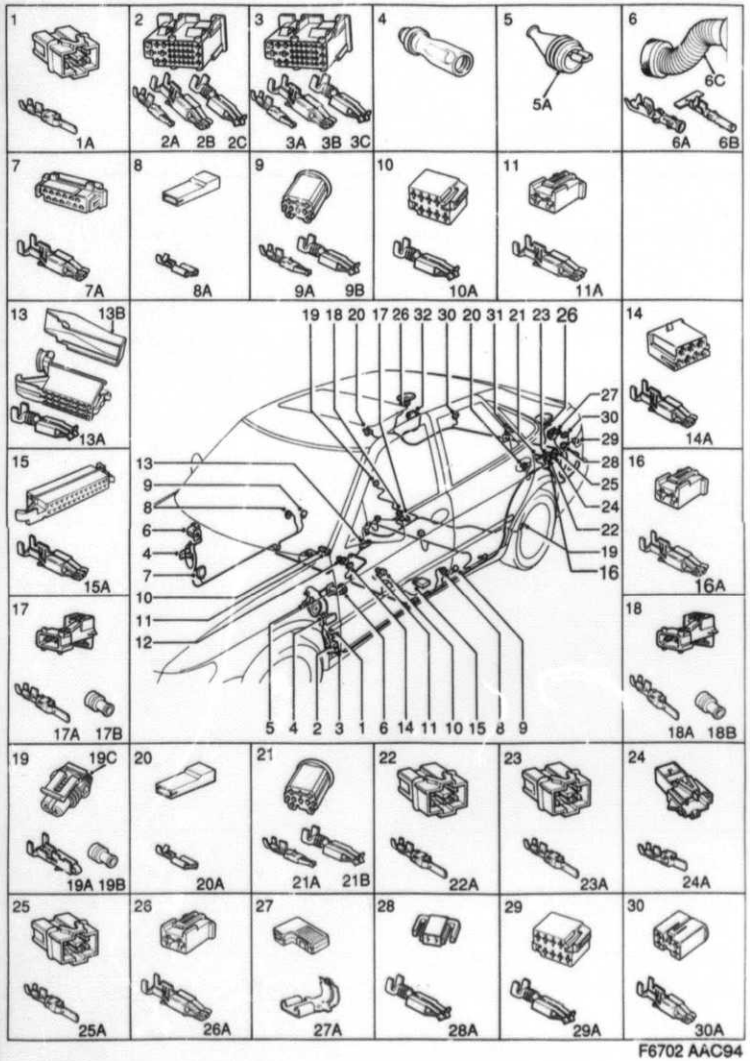

F6702 AAC94

3-B16

Contact housing etc
Rear, 3D, 5D
1995

Kontakthus etc
Bakre, 3D, 5D
1995


0554	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	24	41 17 560			1	Connector housing	Kontakthus	4
012u						2-pole, male	2-polig, stift	
0130						connection	skarv	
0140	24A	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	25	41 17 263			1	Connector housing	Kontakthus	4
0170						4-pole, male	4-polig, stift	
0180						connection	skarv	
0190	25A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0200								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						5-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						4-pole, female	4-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

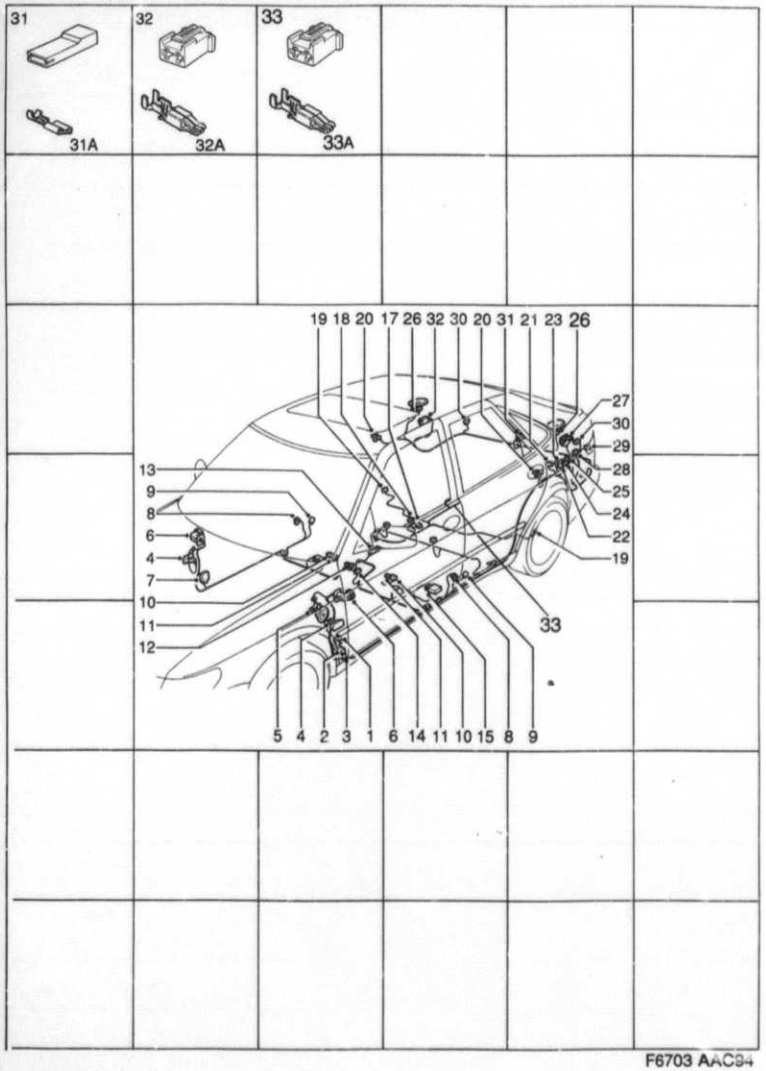

F6703 AAC84

3-B18

Contact housing etc
Rear, 3D, 5D
1995

Kontakthus etc
Bakre, 3D, 5D
1995

0556	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	31	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	31A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	32	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	32A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	33	91 23 548			1	Contact housing	Kontakthus	4
0130						2-pole, female	2-polig, hylsa	
0140						rear seat	baksäte	
0150	33A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-B20

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

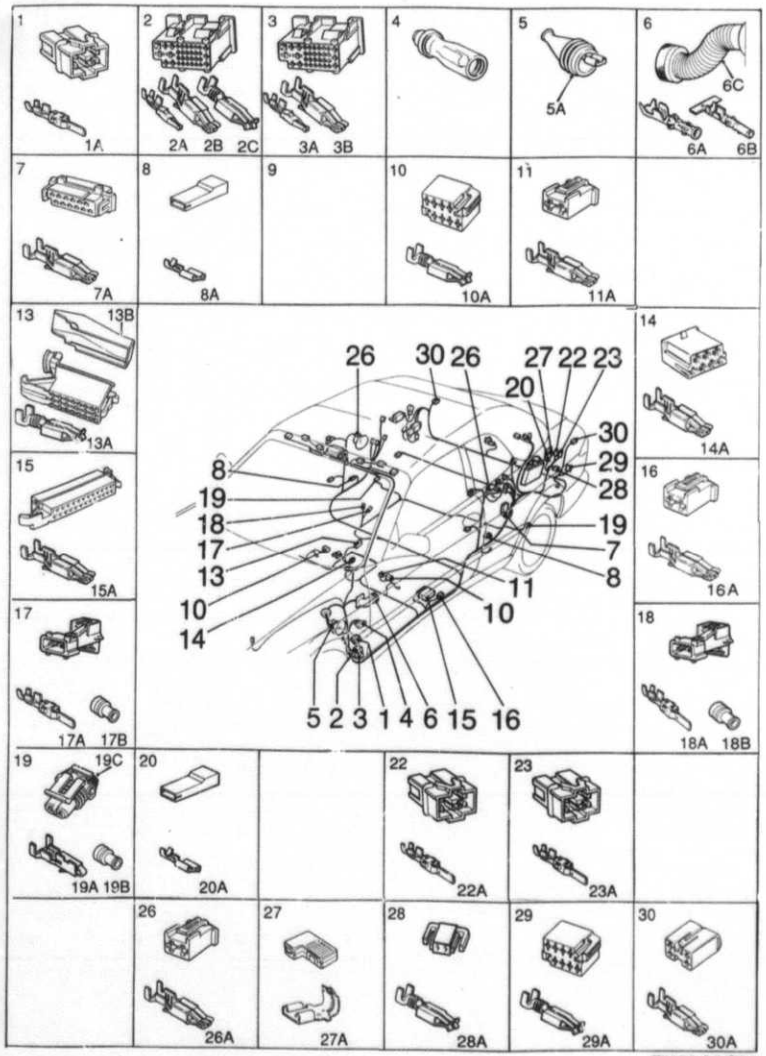

F7206 AAC94

0558	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0180								
0190	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0200						1-pole, female	1-polig, hylsa	
0210						side indicator lamp	sidoblinklykta	
0220								
0230	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0240						1-pole, female	1-polig, hylsa	
0250						theft alarm	stöldlarm	
0260	5A	42 03 683			1	Protection	Skydd	4
0270								
0280	6	42 03 253			1	Connector housing	Kontakthus	4
0290						26-pole, female	26-polig, hylsa	
0300						front door	framdörr	
0310	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0320	6B	44 09 728		AREA 1,0-2,5 MM2	16	Cable terminal	Kabelsko	5
0330	6C	42 22 352			1	Protection	Skydd	4
0340								
0350	7	95 25 031			1	Contact housing	Kontakthus	5
0360						12-pole, female	12-polig, hylsa	
0370						central lock	centrallås	
0380	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0390								
0400	8	85 16 916			1	Insulation	Isolering	4
0410						1-pole, female	1-polig, hylsa	
0420						switch	strömställare	
0430	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	10	91 24 090			1	Contact housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						front seat	framstol	
0480	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D0


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-B22

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

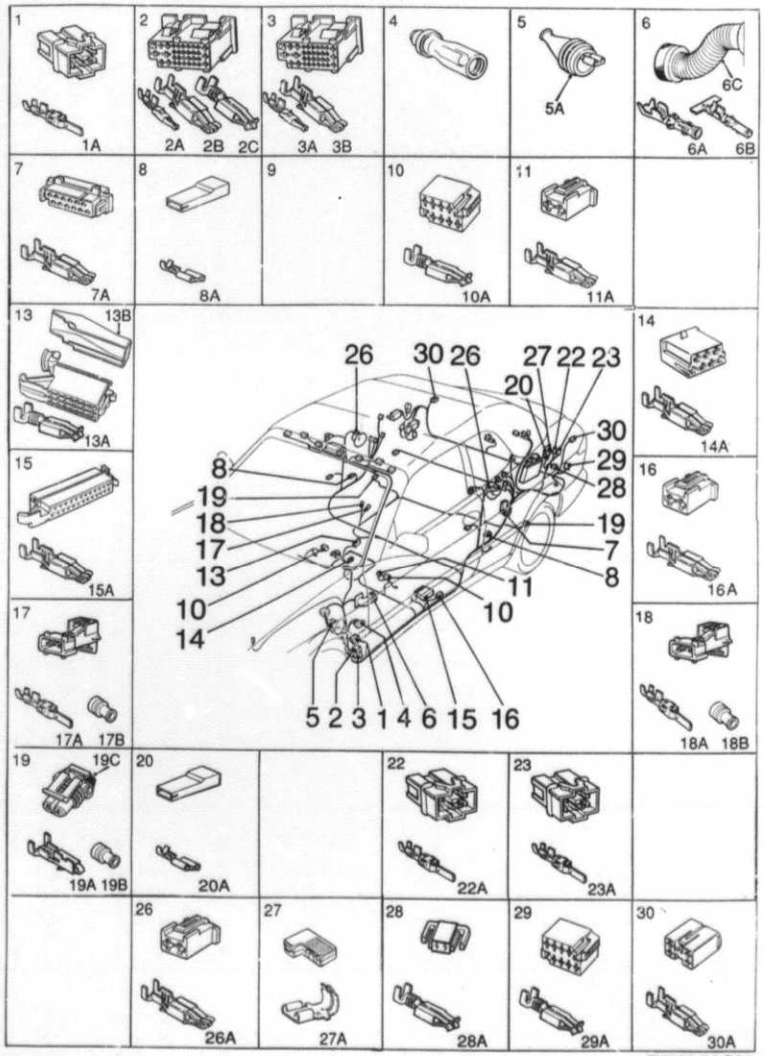

F7207 AAC94

0560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	13	40 60 893			1	Contact housing	Kontakthus	5
0070						19-pole, female	19-polig, hylsa	
0080						window lift	fönsterhiss	
0090	13A	91 20 957		AREA 1,0-2,5 MM2	15	Cable terminal	Kabelsko	8
0100	13A	91 20 791		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110	13B	40 67 617			1	Cover	Kåpa	4
0120								
0130	14	91 23 381			1	Contact housing	Kontakthus	4
0140						7-pole, female	7-polig, hylsa	
0150						interior illum.	innerbelysning	
0160	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	15	42 01 323			1	Connector housing	Kontakthus	4
0190						25-pole, female	25-polig, hylsa	
0200						theft alarm	stöldlarm	
0210	15A	91 20 957		AREA 1,0-2,5 MM2	25	Cable terminal	Kabelsko	8
0220								
0230	16	91 23 548			1	Contact housing	Kontakthus	4
0240						2-pole, female	2-polig, hylsa	
0250						connection	skarv	
0260	16A	91 20 957		AREA 1,0 2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	17	41 13 254			1	Connector housing	Kontakthus	8
0290						2-pole, male	2-polig, stift	
0300						fuel pump	bränslepump	
0310	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0330								
0340	18	41 13 254			1	Connector housing	Kontakthus	8
0350						2-pole, male	2-polig, stift	
0360						fuel pump	bränslepump	
0370	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0390								
0400	19	42 03 428			1	Connector housing	Kontakthus	4
0410						2-pole, female	2-polig, hylsa	
0420						sensor, ABS	sensor, ABS	
0430	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0440	19B	44 19 305			1	Seal	Tätning	5
0450						red	röd	
0460	19B	44 19 313			1	Seal	Tätning	5
0470						blue	blå	
0480	19C	42 01 232			1	Locking	Låsning	4
0490								
0500	20	85 16 916			1	Insulation	Isolering	4
0510						1-pole, female	1-polig, hylsa	
0520						boot lighting	bagagerumsbelysning	
0530	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-B24

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

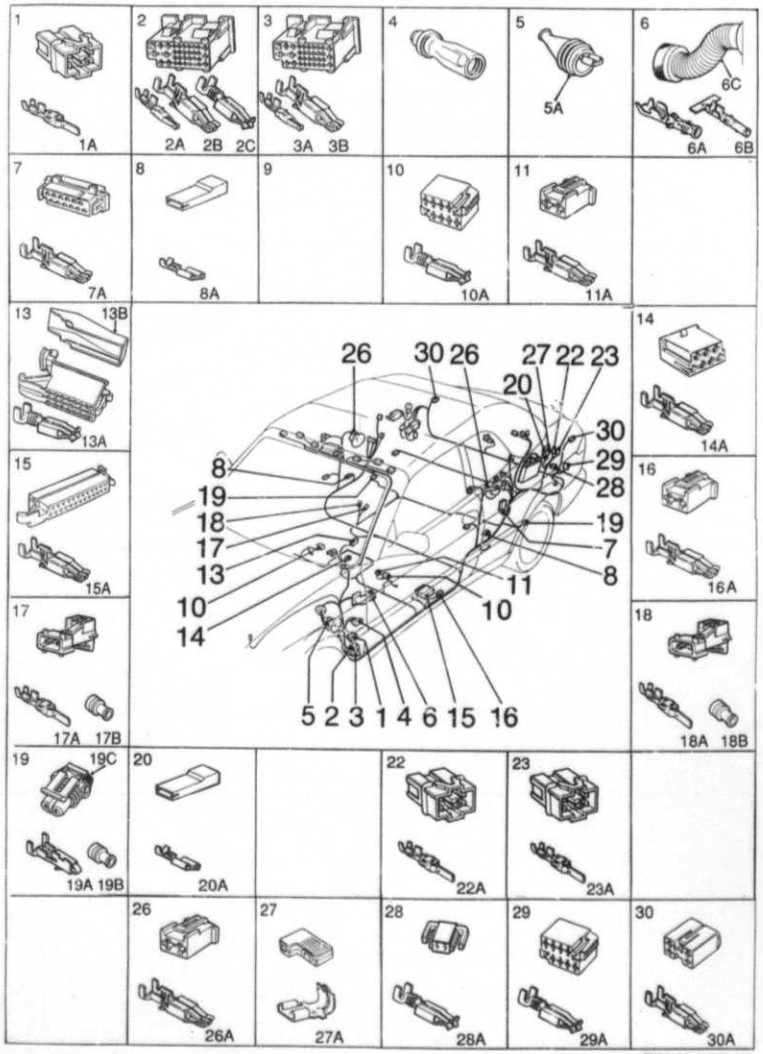

F7208 AAC94

0562	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-C02

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

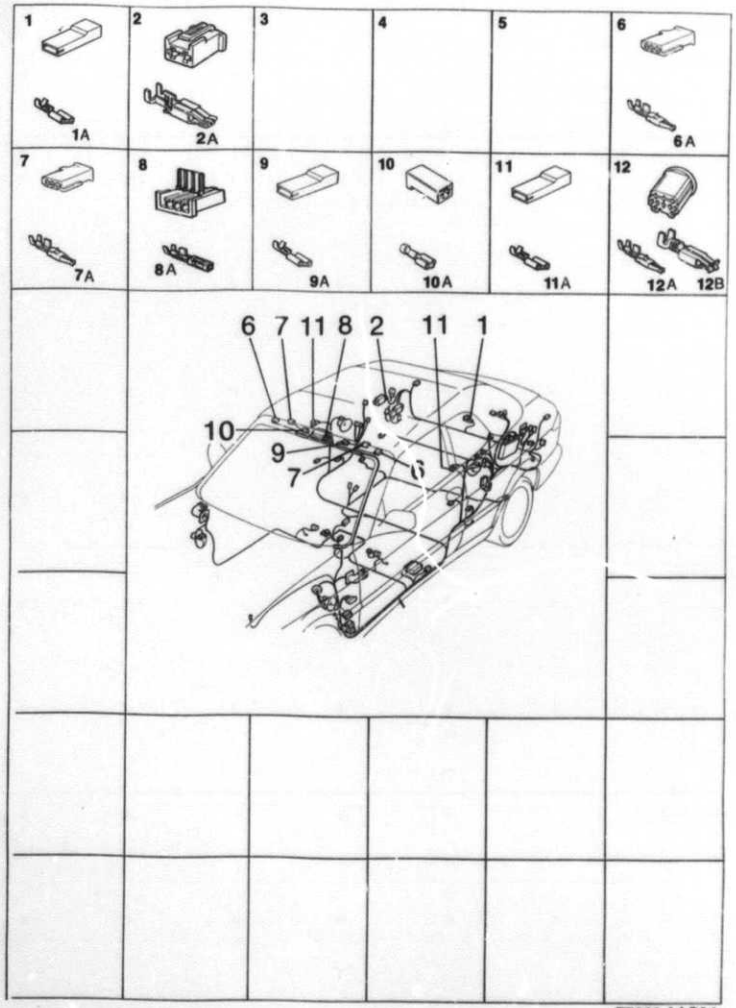

F7380 AAC94

0564	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	1A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	2	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	6	41 13 007			1	Connector housing	Kontakthus	4
0130						3-pole, female	3-polig, hylsa	
0140						lock	lås	
0150	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	7	41 13 007			1	Connector housing	Kontakthus	4
0180						3-pole, female	3-polig, hylsa	
0190						vanity mirror	makeupspegel	
0200	7A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0210								
0220	8	45 37 411			1	Connector housing	Kontakthus	4
0230						4-pole, female	4-polig, hylsa	
0240						interior illum.	innerbelysning	
0250	8A	45 38 310		AREA 0,2-0,56 MM2	4	Cable terminal	Kabelsko	5
0260								
0270	9	85 16 916			1	Insulation	Isolering	4
0280						1-pole, female	1-polig, hylsa	
0290						interior illum.	innerbelysning	
0300	9A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0310								
0320	10	85 33 184			1	Contact housing	Kontakthus	4
0330						1-pole, female	1-polig, hylsa	
0340						interior illum.	innerbelysning	
0350	10A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0360								
0370	11	85 16 916			1	Insulation	Isolering	4
0380						1-pole, female	1-polig, hylsa	
0390						interior illum.	innerbelysning	
0400	11A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0410								
0420	12	44 11 518			1	Connector housing	Kontakthus	
0430						10-pole, female	10-polig, hylsa	
0440						tonneau cover	suflettavtäckning	
0450	12A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0460	12B	91 20 957		AREA 1,0-2,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3 –C04

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

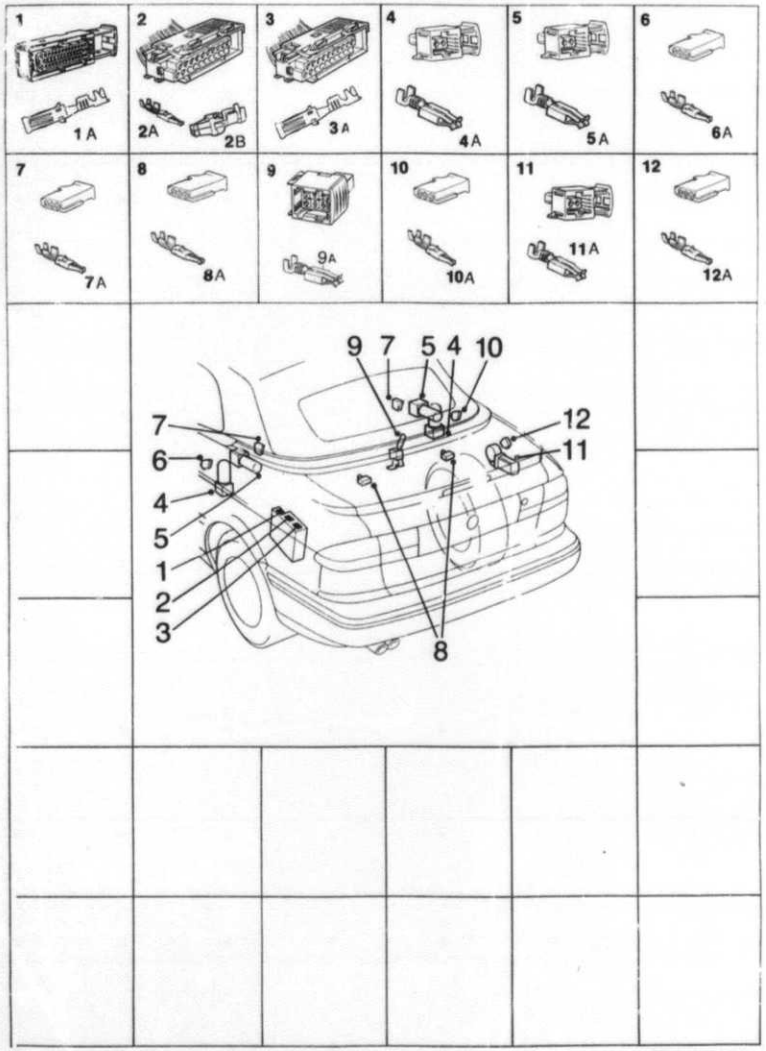

F7210 AAC94

0570	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 89 092			1	Connector housing	Kontakthus	4
0020						20-pole, female	20-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040	1A	44 64 293		AREA 1,0-2,5 MM2	12	Cable terminal	Kabelsko	5
0050								
0060	2	41 15 002			1	Connector housing	Kontakthus	4
0070						42-pole, female	42-polig, hylsa	
0080						electronic unit	elektronikenhet	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0110								
0120	3	44 08 910			1	Connector housing	Kontakthus	4
0130						20-pole, female	20-polig, hylsa	
0140						electronic unit	elektronikenhet	
0150	3A	44 64 293		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	5
0160								
0170	4	41 13 205			1	Connector housing	Kontakthus	8
0180						2-pole, female	2-polig, hylsa	
0190						motor	motor	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0210								
0220	5	41 13 205			1	Connector housing	Kontakthus	8
0230						2-pole, female	2-polig, hylsa	
0240						motor	motor	
0250						bow 5	båge 5	
0260	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	6	41 13 007			1	Connector housing	Kontakthus	4
0290						3-pole, female	3-polig, hylsa	
0300						potentiometer	potentiometer	
0310						motor	motor	
0320	6A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0330								
0340	7	41 13 007			1	Connector housing	Kontakthus	4
0350						3-pole, female	3-polig, hylsa	
0360						microswitch	mikrobrytare	
0370						lock	lås	
0380						tonneau cover	suflettavtäckning	
0390	7A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0400								
0410	8	41 13 007			1	Connector housing	Kontakthus	4
0420						3-pole, female	3-polig, hylsa	
0430						microswitch	mikrobrytare	
0440						folding top	sufflett	
0450	8A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0460								
0470	9	41 13 809			1	Connector housing	Kontakthus	4
0480						6-pole, female	6-polig, hylsa	
0490						by-pass	by-pass	
0500						bow 5	båge 5	
0510	9A	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0520								
0530	10	41 13 007			1	Connector housing	Kontakthus	4
0540						3-pole, female	3-polig, hylsa	
0550						potentiometer	potentiometer	
0560						bow 5	båge 5	
0570	10A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0580								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-C06

Contact housing etc
Rear, CV
1995

Kontakthus etc
Bakre, CV
1995

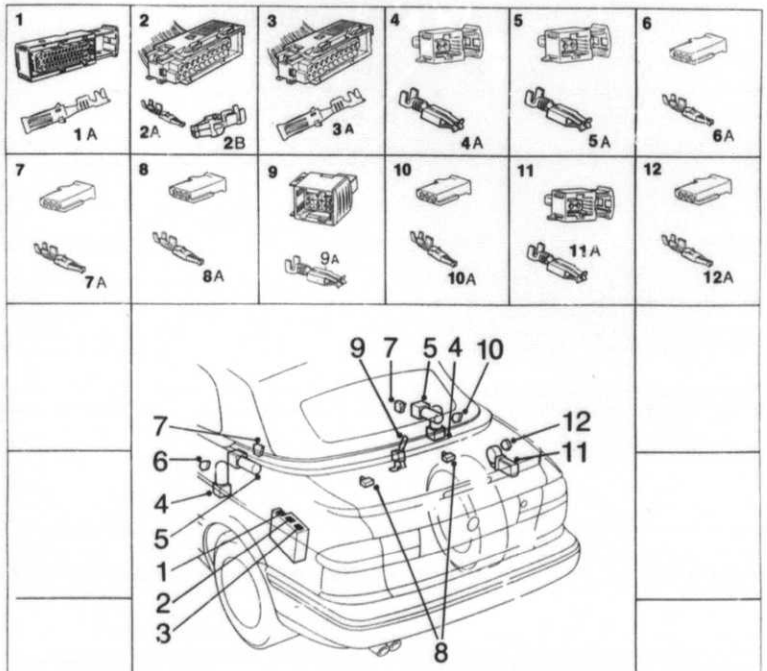

F7211 AAC94


0572	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						motor	motor	
0040						tonneau cover	suflettavtäckning	
0050	11A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	12	41 13 007			1	Connector housing	Kontakthus	4
0080						3-pole, female	3-polig, hylsa	
0090						potentiometer	potentiometer	
0100						tonneau cover	suflettavtäckning	
0110	12A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

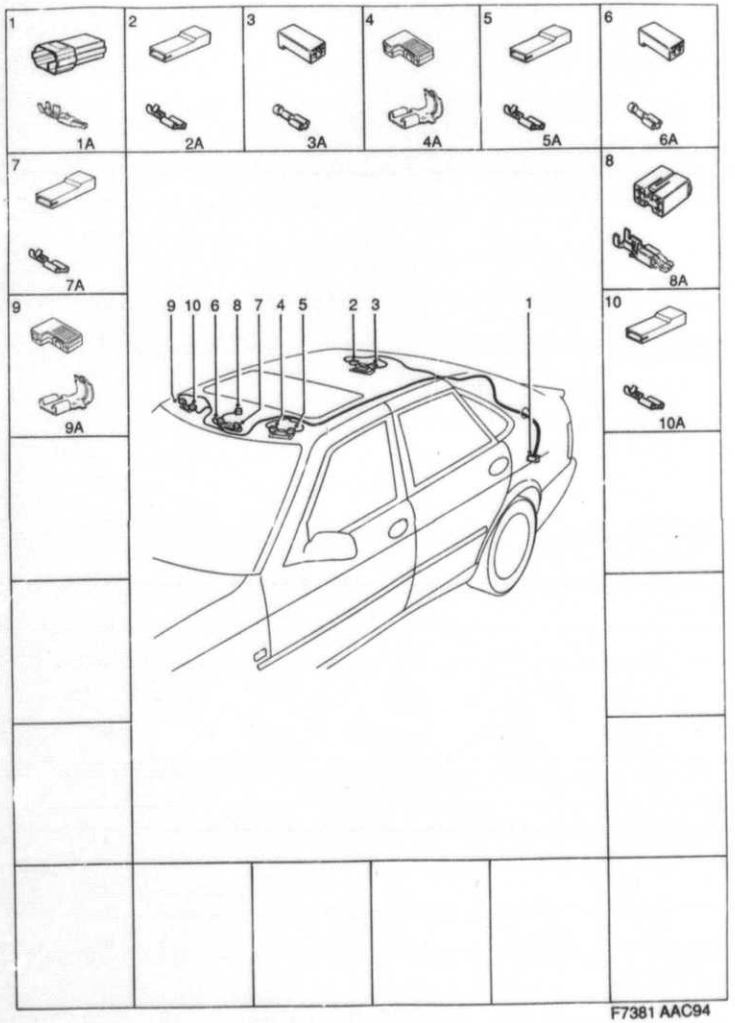

Contact housing etc

3-C08

Roof
1995

Kontakthus etc

Tak
1995

0580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	41 15 499		AREA 0,5-1,0 MM2	8	Cable terminal	Kabelsko	8
0050	1B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	2	85 16 916			1	Insulation	Isolering	4
0080						1-pole, female	1-polig, hylsa	
0090						interior illum.	innerbelysning	
0100	2A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0110								
0120	3	85 33 184			1	Contact housing	Kontakthus	4
0130						1-pole, female	1-polig, hylsa	
0140						interior illum.	innerbelysning	
0150	3A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0160								
0170	4	85 16 916			1	Insulation	Isolering	4
0180						1-pole, female	1-polig, hylsa	
0190						vanity mirror	makeupspegel	
0200	4A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0210								
0220	5	85 16 916			1	Insulation	Isolering	4
0230						1-pole, female	1-polig, hylsa	
0240						vanity mirror	makeupspegel	
0250	5A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0260								
0270	6	85 33 184			1	Contact housing	Kontakthus	4
0280						1-pole, female	1-polig, hylsa	
0290						interior illum.	innerbelysning	
0300	6A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0310								
0320	7	85 16 916			1	Insulation	Isolering	4
0330						1-pole, female	1-polig, hylsa	
0340						vanity mirror	makeupspegel	
0350	7A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						sun roof	soltak	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	9	44 89 076			1	Connector housing	Kontakthus	4
0430						1-pole, female	1-polig, hylsa	
0440						vanity mirror	makeupspegel	
0450	9A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0460								
0470	10	85 16 916			1	Insulation	Isolering	4
0480						1-pole, female	1-polig, hylsa	
0490						vanity mirror	makeupspegel	
0500	10A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX


Connectors	2-J06
Cable terminals	3-J14

Contact housing etc

3-C10 Doors 1995

Kontakthus etc

Dörrar 1995

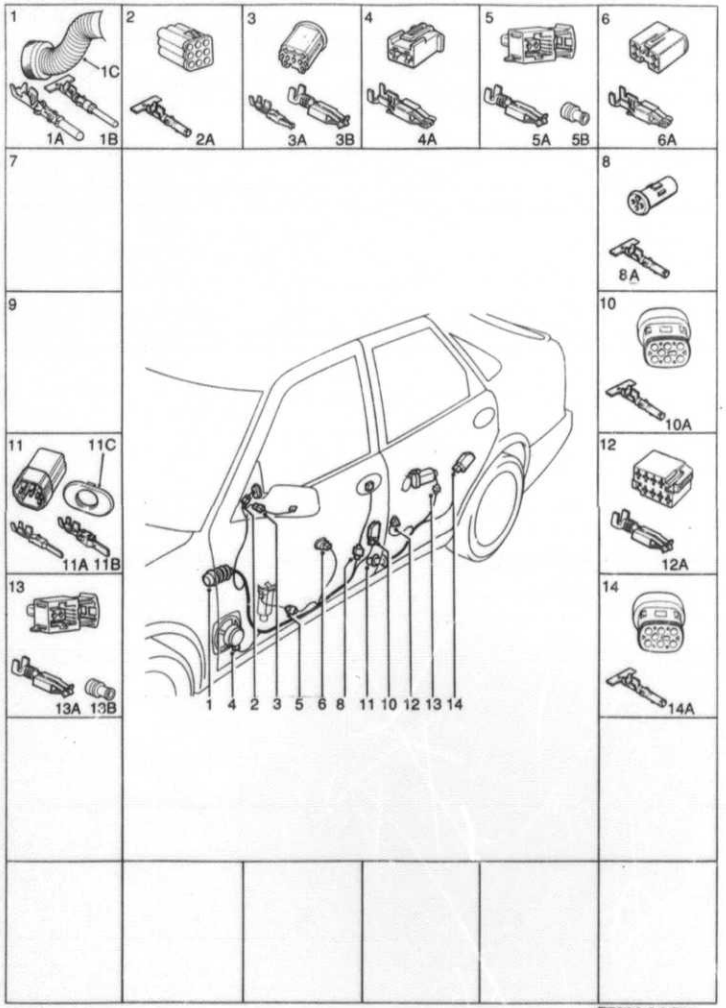

F7382 AAC94


0582	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 03 261			1	Connector housing	Kontakthus	4
0020						26-pole, male	26-polig, stift	
0030						connection	skarv	
0040	1A	44 64 228		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0050	1B	44 09 785		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	5
0060	1C	42 22 360			1	Protection	Skydd	4
0070								
0080	2	42 01 208			1	Connector housing	Kontakthus	4
0090						9-pole, female	9-polig, hylsa	
0100						switch	strömställare	
0110						rear view mirror	backspegel	
0120	2A	44 09 728		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	5
0130								
0140	3	44 11 518			1	Connector housing	Kontakthus	
0150						10-pole, female	10-polig, hylsa	
0160						rear view mirror	backspegel	
0170	3A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0180	3R	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0190								
0200	4	91 23 548			1	Contact housing	Kontakthus	4
0210						2-pole, female	2-polig, hylsa	
0220						loudspeaker	högtalare	
0230	4A	91 20 957			2	Cable terminal	Kabelsko	8
0240								
0250	5	41 13 411			1	Connector housing	Kontakthus	4
0260						2-pole, female	2-polig, hylsa	
0270						window lift	fönsterniss	
0280	5A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	5B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0300								
0310	6	91 23 555			1	Contact housing	Kontakthus	4
0320						4-pole, female	4-polig, hylsa	
0330						luggage compartment lock	bagagerumslås	
0340	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0350								
0360	8	42 24 903			1	Connector housing	Kontakthus	4
0370						3-pole, female	3-polig, hylsa	
0380						microswitch	mikrobrytare	
0390	8A	44 09 728		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

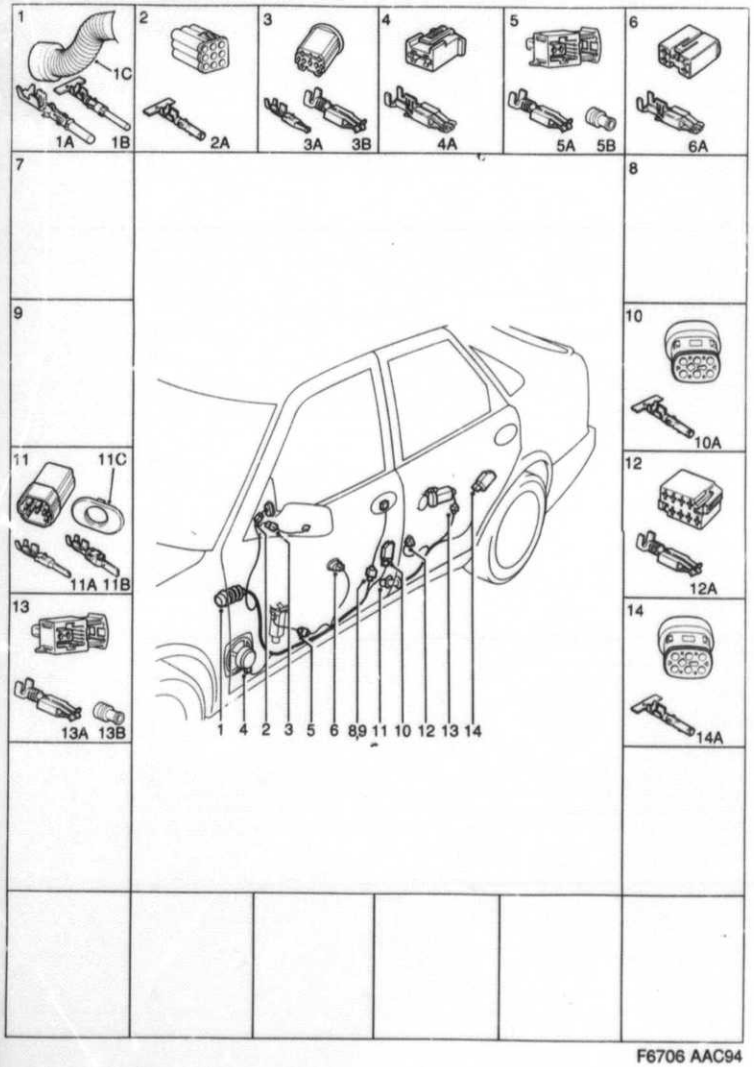

F6706 AAC94

Contact housing etc

3-C12

Doors

1995

Kontakthus etc

Dörrar

1995


0584	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	45 86 871			1	Connector housing	Kontakthus	4
0011						6-pole, female	6-polig, hylsa	
0012						motor	motor	
0013						central lock	centrallås	
0014	10A	44 09 728		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	5
0015								
0019	11	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	11A	41 15 457		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	5
0050	11B	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11C	44 32 902			1	Protection	Skydd	4
0070								
0080	12	91 24 090			1	Contact housing	Kontakthus	4
0090						8-pole, female	8-polig, hylsa	
0100						switch	strömställare	
0110						window lift	fönsterhiss	
0120	12A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0130								
0140	13	41 13 411			1	Connector housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						window lift	fönsterhiss	
0170	13A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0180	13B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0190								
0200	14	42 01 190			1	Connector housing	Kontakthus	4
0210						6-pole, female	6-polig, hylsa	
0220						motor	motor	
0230						central lock	centrallås	
0240	14A	44 09 728		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

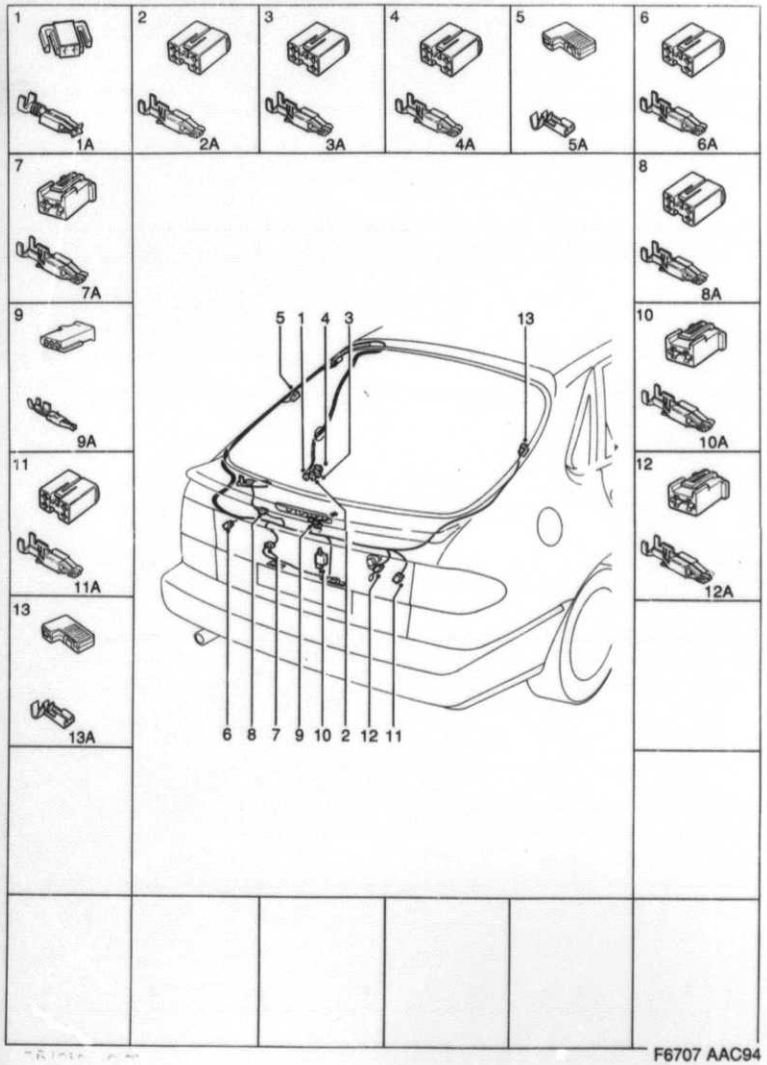

Contact housing etc

3-C14

Boot lid, 3D, 5D

1995

Kontakthus etc

Baklucka, 3D, 5D

1995


0586	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 157			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						connection	skarv	
0040	1A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	91 23 555			1	Contact housing	Kontakthus	4
0070						4-pole, female	4-polig, hylsa	
0080						connection	skarv	
0090	2A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0110	3	40 61 503			1	Contact housing	Kontakthus	4
0120						4-pole, female	4-polig, hylsa	
0130						connection	skarv	
0140	3A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						connection	skarv	
0190	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0200								
0210	5	85 21 692			1	Contact housing	Kontakthus	4
0220						1-pole, female	1-polig, hylsa	
0230						rear window	bakruta	
0240	5A	85 22 526		AREA0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0250								
0260	6	91 23 555			1	Contact housing	Kontakthus	4
0270						4-pole, female	4-polig, hylsa	
0280						reverse lamp	backlampa	
0290						rear fog light	dimbaklykta	
0300	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						licence plate light	nummerskyltlykta	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						rear window wiper	bakrutetorkare	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0410								
0420	9	41 13 007			1	Connector housing	Kontakthus	4
0430						3-pole, female	3-polig, hylsa	
0440						high mounted stop light	högt monterad stopplykta	
0450	9A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0460								
0470	10	91 23 548			1	Contact housing	Kontakthus	4
0480						luggage compartment lock	bagagerumslås	
0490	10A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0500								
0510	11	91 23 555			1	Contact housing	Kontakthus	4
0520						4-pole, female	4-polig, hylsa	
0530						reverse lamp	backlampa	
0540	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0550								
0560	12	91 23 548			1	Contact housing	Kontakthus	4
0570						2-pole, female	2-polig, hylsa	
0580						theft alarm	stöldlarm	
0590	12A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

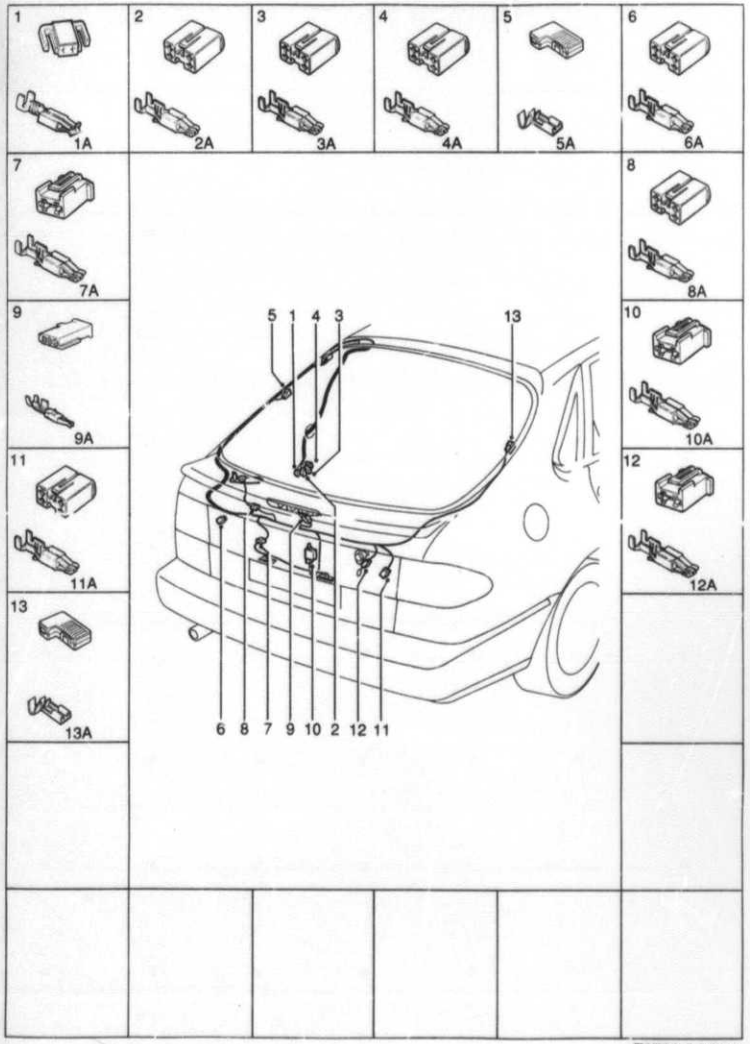

F6708 AAC94

3-C16

Contact housing etc
Boot lid, 3D, 5D
1995

Kontakthus etc
Baklucka, 3D, 5D
1995

0588	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	85 21 692			1	Contact housing	Kontakthus	4
0020						1-pole, female	1-polig, hylsa	
0030						rear window	bakruta	
0040	13A	85 22 526		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX


Connectors	2-J06
Cable terminals	3-J14

Contact housing etc

3-C18 *Boot lid, CV* *1995*

Kontakthus etc

Baklucka, CV *1995*

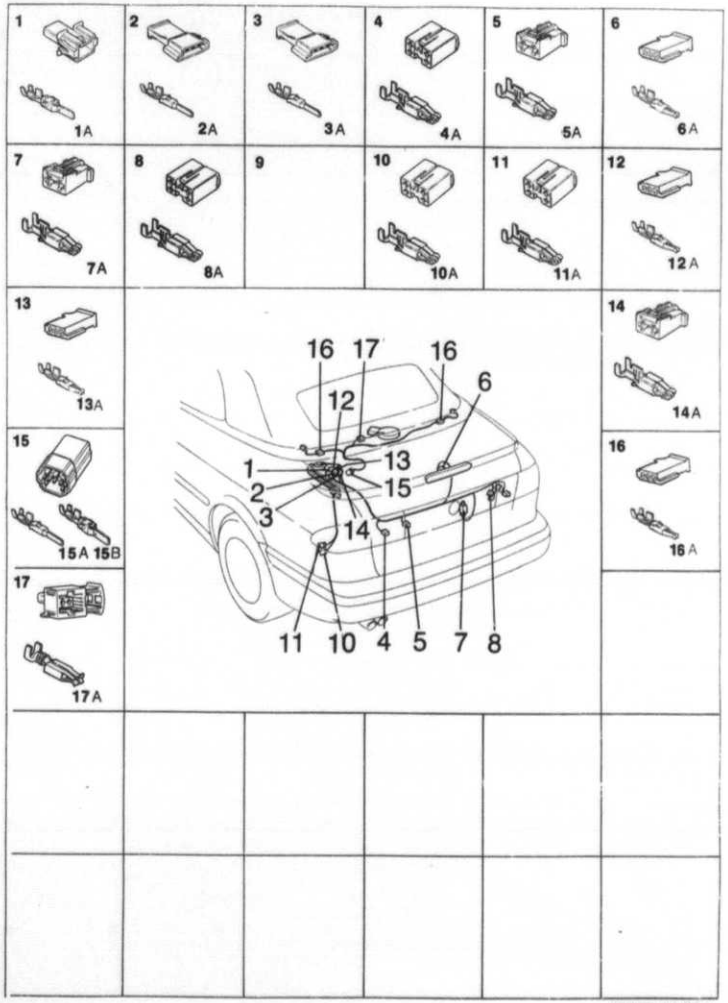

F7383 AAC94

0590	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 164			1	Connector housing	Kontakthus	4
0020						2-pole, male	2-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	41 13 056			1	Connector housing	Kontakthus	4
0070						3-pole, male	3-polig, stift	
0080						connection	skarv	
0090	2A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0100								
0110	3	41 13 056			1	Connector housing	Kontakthus	4
0120						3-pole, male	3-polig, stift	
0130						connection	skarv	
0140	3A	41 15 457		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						reverse lamp	backlampa	
0190						rear fog light	dimbaklykta	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0210								
0220	5	91 20 957			1	Cable terminal	Kabelsko	8
0230						2-pole, female	2-polig, hylsa	
0240						licence plate light	nummerskyltlykta	
0250	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0260								
0270	6	41 13 007			1	Connector housing	Kontakthus	4
0280						3-pole, female	3-polig, hylsa	
0290						high mounted stop light	högt monterad stopplykta	
0300	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						luggage compartment lock	bagagerumslås	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						reverse lamp	backlampa	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	10	91 23 555			1	Contact housing	Kontakthus	4
0430						4-pole, female	4-polig, hylsa	
0440						connection	skarv	
0450	10A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0460								
0470	11	40 61 503			1	Contact housing	Kontakthus	4
0480						4-pole, female	4-polig, hylsa	
0490						connection	skarv	
0500	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	12	41 13 007			1	Connector housing	Kontakthus	4
0530						3-pole, female	3-polig, hylsa	
0540						connection	skarv	
0550	12A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-C20

Boot lid, CV — *Baklucka, CV*

1995 — *1995*

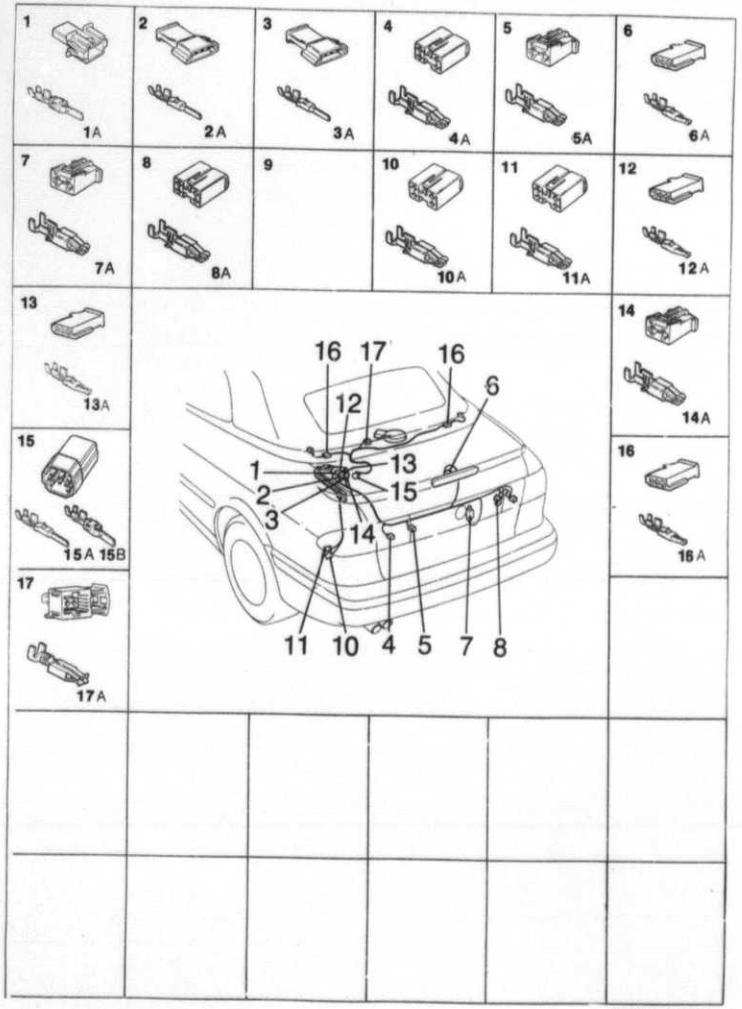

F7384 AAC94


0592	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	41 13 007			1	Connector housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						connection	skarv	
0040	13A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	14	91 23 548			1	Contact housing	Kontakthus	4
0070						2-pole, female	2-polig, hylsa	
0080						connection	skarv	
0090	14A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	15	44 10 510			1	Connector housing	Kontakthus	4
0120						10-pole, male	10-polig, stift	
0130						connection	skarv	
0140	15A	41 15 457		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	5
0150	15B	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	16	41 13 007			1	Connector housing	Kontakthus	4
0180						3-pole, female	3-polig, hylsa	
0190						switch	brytare	
0200						bow latch	bågregel	
0210	16A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0220								
0230	17	41 13 403			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						motor	motor	
0260						bow latch	bågregel	
0270	17A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

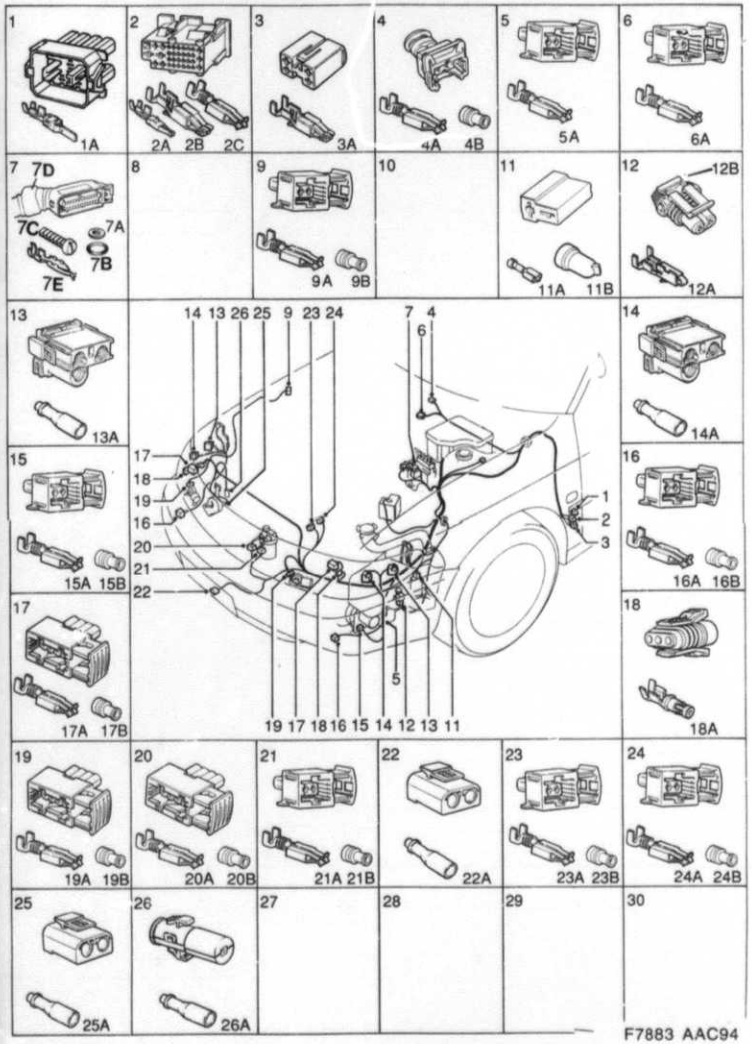

Contact housing etc

3-C22

Front

1996

Kontakthus etc

Främre

1996

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 461			1	Connector housing	Skarvhus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	1	Cable terminal	Kabelsko	8
0120								
0130	3	91 23 555			1	Contact housing	Kontakthus	4
0140						4-pole, female	4-polig, hylsa	
0150						connection	skarv	
0160	3A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	4	41 78 414			1	Connector housing	Kontakthus	8
0190						2-pole, female	2-polig, hylsa	
0200						SAI	SAI	
0210	4A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220	4B	40 61 966		Ø 1,2-2,0 MM	1	Seal	Tätning	5
0230	4B	40 61 974		Ø 2,1-2,9 MM	1	Seal	Tätning	5
0240								
0250	5	41 13 205			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						vacuum pump	vakuumpump	
0280	5A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0290								
0300	6	41 13 205			1	Connector housing	Kontakthus	8
0310						2-pole, female	2-polig, hylsa	
0320						switch	brytare	
0330						vacuum pump	vakuumpump	
0340	6A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	7	45 87 952			1	Connector housing	Kontakthus	8
0370						26-pole, female	26-polig, hylsa	
0380						module, ABS	modul, ABS	
0390		47 34 406		1)	1	.Connector housing	.Kontakthus	5
0400		47 34 414		1)	1	.Cover	.Kåpa	4
0410	7A	43 54 353		AREA 0,5-1,0 MM2	15	Cable terminal	Kabelsko	8
0420	7A	46 69 669		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0430	7A	43 54 171		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0440								
0450	9	42 01 315			1	Connector housing	Kontakthus	4
0460						2-pole, female	2-polig, hylsa	
0470						sensor, ABS	sensor, ABS	
0480	9A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0490	9B	42 24 531			1	Protection	Skydd	4
0500								
0510	11	42 01 315			1	Connector housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530						washer pump	spolarpump	
0540	11A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0550	11B	42 24 531			1	Protection	Skydd	4
0560								
0570	12	42 01 224			1	Connector housing	Kontakthus	5
0580						2-pole, female	2-polig, hylsa	
0590						level guard	nivåvakt	
0600	12A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0610	12B	42 01 232			1	Locking	Låsning	4
0620								


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

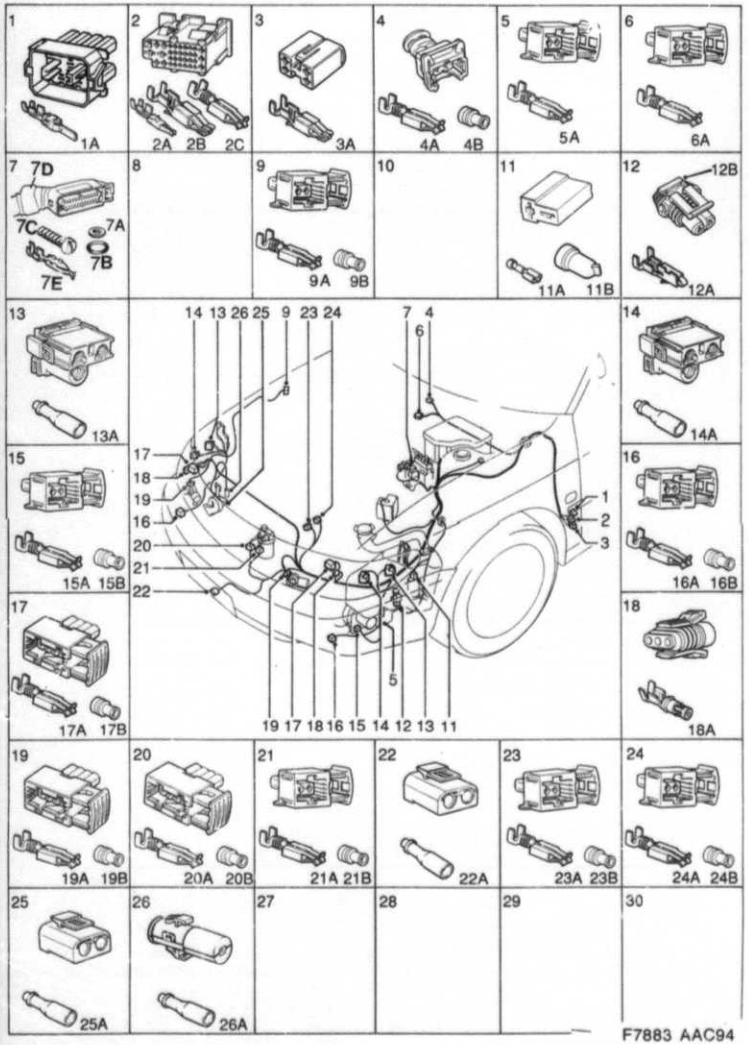

Contact housing etc

3-C24

Front

1996

Kontakthus etc

Främre

1996


0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	13	95 19 679			1	Contact housing	Kontakthus	4
0640				3-pole, female reverse lamp		3-pole, female reverse lamp	3-polig, hylsa backlampa	
0650								
0660	13A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

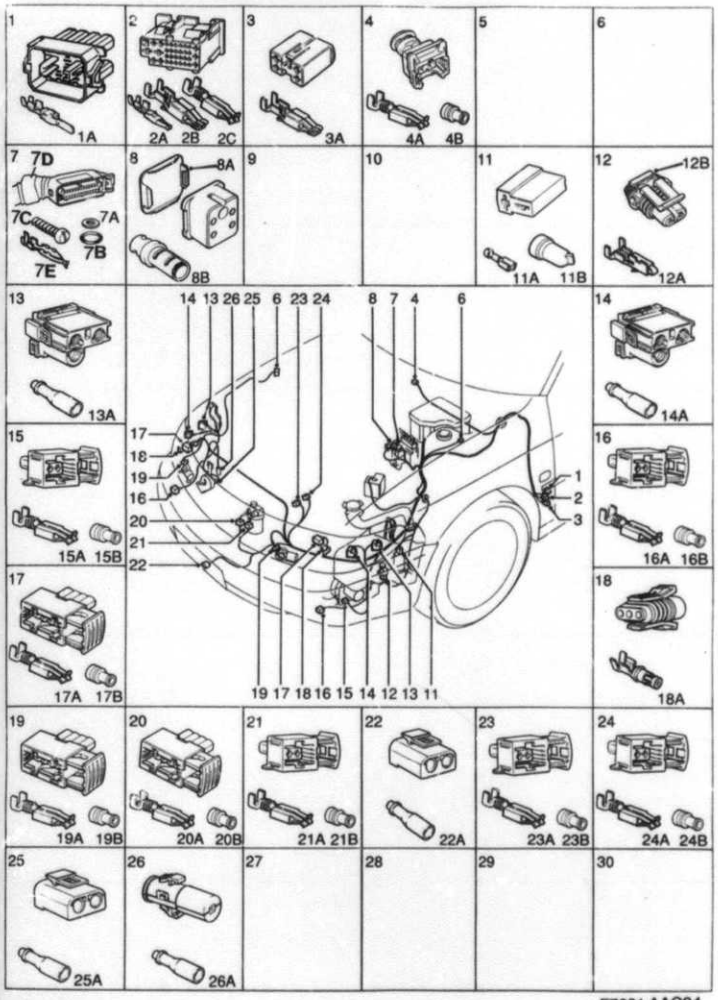

F7661 AAC94

Contact housing etc

3-D02

Front

1996

Kontakthus etc

Främre

1996


0602	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	14	95 19 679			1	Contact housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						direction indicator	blinkers	
0040	14A	85 47 804		AREA 2,5-4,0 MM2	3	Connector	Skarvstycke	5
0050								
0060	15	41 13 403			1	Connector housing	Kontakthus	8
0070						2-pole, female	2-polig, hylsa	
0080						air pump	luftpump	
0090	15A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100	15B	43 54 387		Ø 3,4-3,7 MM	2	Seal	Tätning	5
0110								
0120	16	41 13 205			1	Connector housing	Kontakthus	8
0130						2-pole, female	2-polig, hylsa	
0140						front fog light	dimstrålkastare	
0150	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160	16B	40 61 966		Ø 5,6MM	2	Seal	Tätning	5
0170								
0180	17	41 13 601			1	Connector housing	Kontakthus	8
0190						4-pole, female	4-polig, hylsa	
0200						headlamp	strålkastare	
0210	17A	40 61 586		AREA1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0220	17B	40 61 966		AREA 1,2-2,0 MM2	1	Seal	Tätning	5
0230	17B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0240								
0250	18	44 11 260			1	Connector housing	Kontakthus	4
0260						3-pole, female	3-polig, hylsa	
0270						headlamp levelling	ljusläng dsreglering	
0280	18A	44 11 278		AREA 0,75-1,0 MM2	3	Cable terminal	Kabelsko	5
0290								
0300	19	41 13 601			1	Connector housing	Kontakthus	8
0310						4-pole, female	4-polig, hylsa	
0320						headlamp wiper	strålkastartorkare	
0330	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0340	19B	40 61 966		AREA 1,2-2,0 MM2	3	Seal	Tätning	5
0350								
0360	20	41 13 601			1	Connector housing	Kontakthus	8
0370						4-pole, female	4-polig, hylsa	
0380						pressure monitor	tryckvakt	
0390	20A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0400	20B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0410								
0420	21	41 13 205			1	Connector housing	Kontakthus	8
0430						2-pole, female	2-polig, hylsa	
0440						pressure monitor	tryckvakt	
0450	21A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0460	21B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0470								
0480	22	95 03 319			1	Contact housing	Kontakthus	4
0490						2-pole, female	2-polig, hylsa	
0500						outer temp	yttertemp	
0510	22A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5
0520								
0530	23	41 13 403			1	Connector housing	Kontakthus	8
0540						2-pole, female	2-polig, hylsa	
0550						cooling fan, 2-step	kylfläkt, 2-steg	
0560	23A	43 54 171		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
0570	23B	43 54 387		Ø 3,4-3,7 MM	1	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

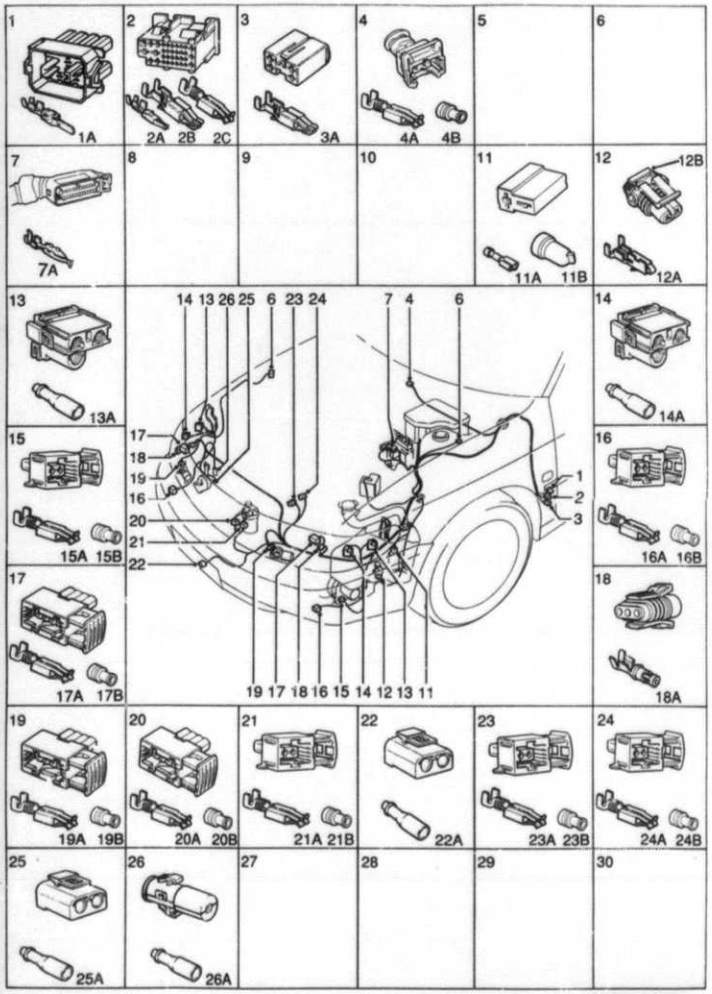

F7662 AAC94

Contact housing etc

3-D04

Front

1996

Kontakthus etc

Främre

1996


0604	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	24	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						cooling fan	kylfläkt	
0040	24A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050	24B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0060								
0070	25	41 13 205			1	Connector housing	Kontakthus	8
0080						2-pole, female	2-polig, hylsa	
0090						horn	signalhorn	
0100	25A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	26	95 03 418			1	Connector housing	Skarvhus	4
0130						1-pole, female	1-polig, hylsa	
0140						compressor	kompressor	
0150	26A	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

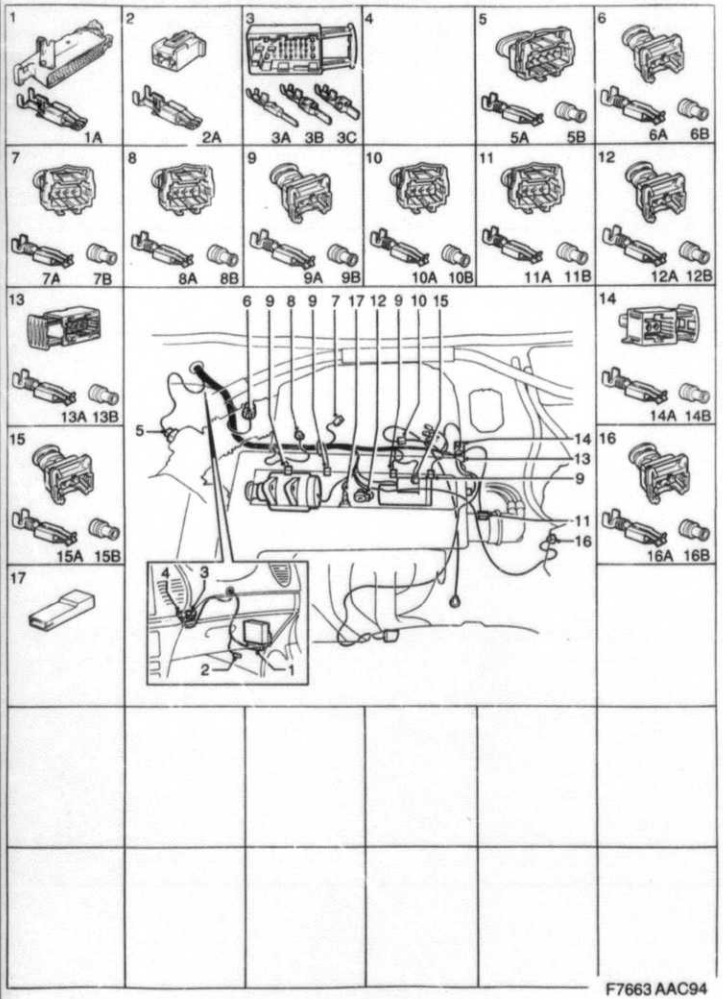

Contact housing etc

3-D06

Engine, B204I, B234I

1996

Kontakthus etc

Motor, B204I, B234I

1996


0606	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	44	Cable terminal	Kabelsko	8
0060								
0070	1	42 22 451		US, CA	1	Contact housing	Kontakthus	8
0080						88-pole, female	88-polig, hylsa	
0090						electronic unit	elektronikenhet	
0100						Motronic	Motronic	
0110	1A	40 63 970		AREA 0,5-1,0 MM2	37	Cable terminal	Kabelsko	8
0120	1A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0130								
0140	2	91 23 548			1	Contact housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						connection	skarv	
0170						coding	kodifiering	
0180	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	3	41 73 852			1	Contact housing	Kontakthus	4
0210						33-pole, male	33-polig, stift	
0220						connection	skarv	
0230	3A	41 15 457		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	5
0240	3B	41 15 077		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0250	3C	41 15 530		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0260								
0270	5	44 32 357			1	Connector housing	Kontakthus	8
0280						4-pole, female	4-polig, hylsa	
0290						mass air flow sensor	luftmassamätare	
0300	5A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0310	5B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0320								
0330	6	44 33 439			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						EVAP CP valve	urluftningsventil	
0360	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0370	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380	6C	44 33 454			1	Cover	Kåpa	8
0390								
0400	7	44 32 316			1	Connector housing	Kontakthus	8
0410						3-pole, female	3-polig, hylsa	
0420						throttle position sensor	lägesgivare	
0430	7A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0440	7B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0450								
0460	8	44 32 324			1	Connector housing	Kontakthus	8
0470						3-pole, female	3-polig, hylsa	
0480						idle speed control	tomgångsreglering	
0490	8A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	8B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0510								
0520	9	41 78 414			1	Connector housing	Kontakthus	8
0530						2-pole, female	2-polig, hylsa	
0540						injection valves	insprutningsventiler	
0550	9A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0560	9B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0570								
0580	10	44 32 316			1	Connector housing	Kontakthus	8
0590						3-pole, female	3-polig, hylsa	
0600						crank shaft sensor	vevaxelgivare	
0610	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0620	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

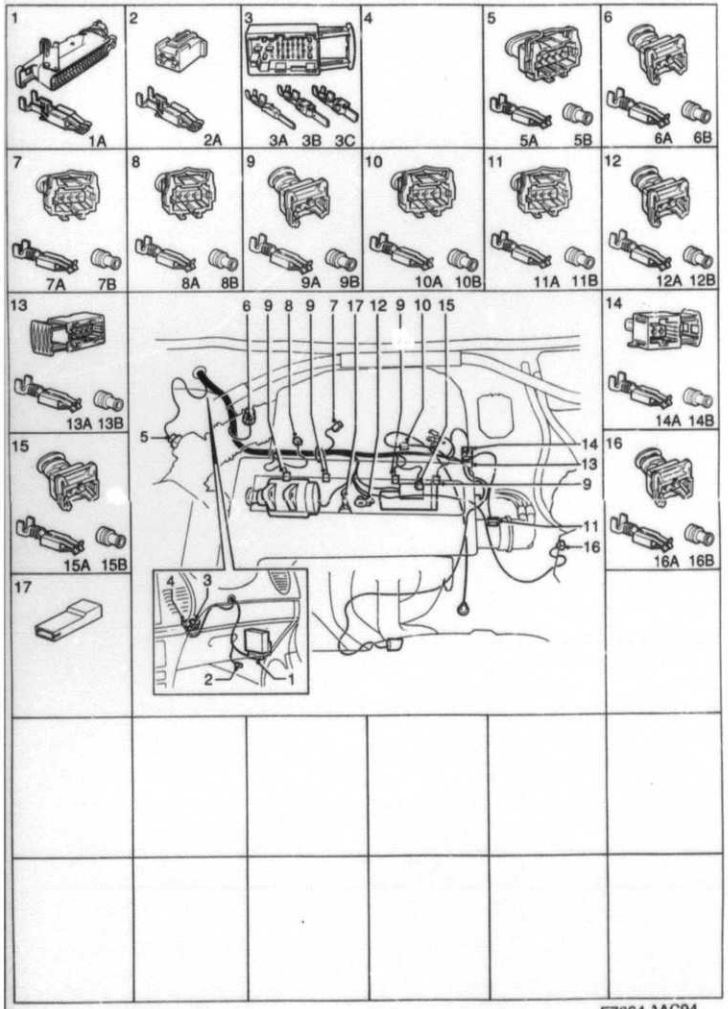

F7664 AAC94

Contact housing etc

3-D08

Engine, B204I, B234I

1996

Kontakthus etc

Motor, B204I, B234I

1996


0608	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 316			1	Connector housing	Kontakthus	8
0020						3-pole, female	3-polig, hylsa	
0030						sensor	givare	
0040						camshaft	kamaxel	
0050	11A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0070								
0080	12	41 78 414			1	Connector housing	Kontakthus	8
0090						2-pole, female	2-polig, hylsa	
0100						knock-sensor	knacksensor	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0130								
0140	13	41 13 601			1	Connector housing	Kontakthus	8
0150						4-pole, female	4-polig, hylsa	
0160						lambda sonde	lambdasond	
0170	13A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0180	13B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0190								
0200	14	41 13 205			1	Connector housing	Kontakthus	8
0210						2-pole, female	2-polig, hylsa	
0220						temperature sensor	temperaturgivare	
0230						coolant	kylvätska	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0260								
0270	15	41 78 414			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperaturgivare	
0300						coolant	kylvätska	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						ignition coil	tändspole	
0370	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

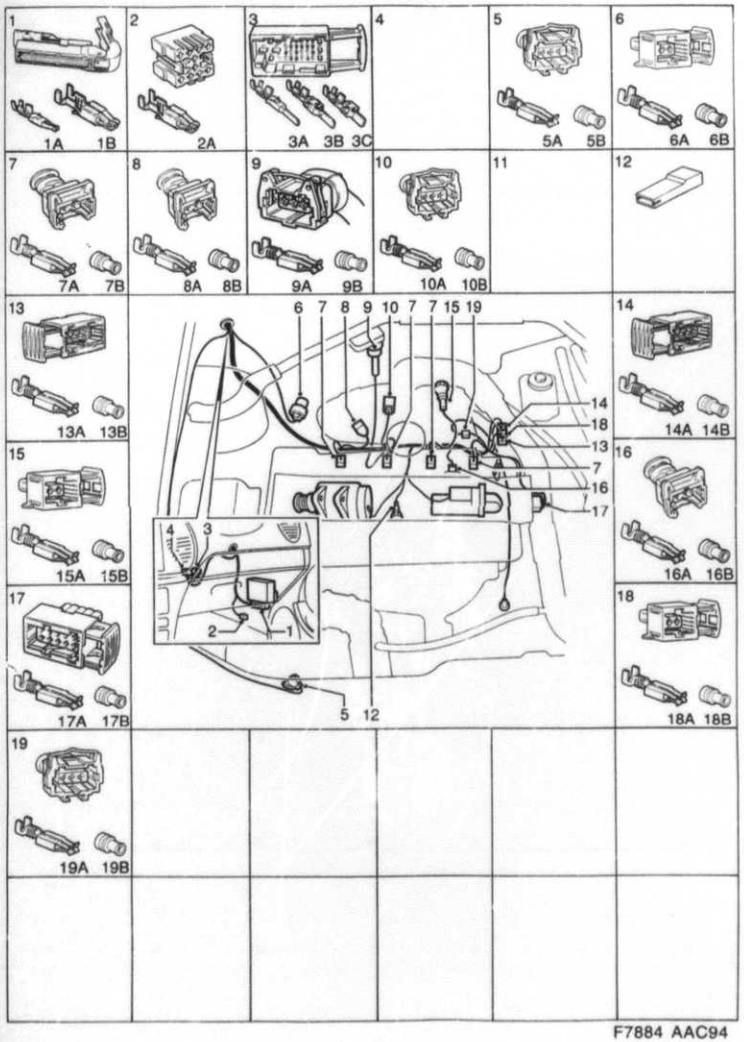

F7884 AAC94

Contact housing etc

3-D10

Engine, B204 L

1996

Kontakthus etc

Motor, B204 L

1996


0610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 616			1	Connector housing	Kontakthus	8
0020						70-pole, female	70-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Trionic	Trionic	
0050	1A	41 15 499		AREA 0,5-1,0 MM2	46	Cable terminal	Kabelsko	8
0060	1B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0070								
0080	2	91 23 399			1	Connector housing	Skarvhus	4
0090						10-pole, female	10-polig, hylsa	
0100						test connection	testuttag	
0110	2A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	3A	41 15 457		AREA 0,5-1,0 MM2	19	Cable terminal	Kabelsko	5
0170	3B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	5	44 32 316			1	Connector housing	Kontakthus	8
0210						3-pole, female	3-polig, hylsa	
0220						solenoid valve	magnetventil	
0230						APC	APC	
0240	5A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	5B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	6	41 13 205			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						EVAP CP valve	urluftningsventil	
0300	6A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0310	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0320								
0330	7	41 78 414			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						injection valves	insprutningsventiler	
0360	7A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0370	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380								
0390	8	41 78 414			1	Connector housing	Kontakthus	8
0400						2-pole, female	2-polig, hylsa	
0410						idle speed control	tomgångsreglering	
0420	8A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0430	8B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	9	44 32 316			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						pressure sensor	tryckgivare	
0480						intake manifold	inloppsrör	
0490	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	9B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0510								
0520	10	44 32 316			1	Connector housing	Kontakthus	8
0530						3-pole, female	3-polig, hylsa	
0540						throttle position sensor	spjällägesgivare	
0550	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0560	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

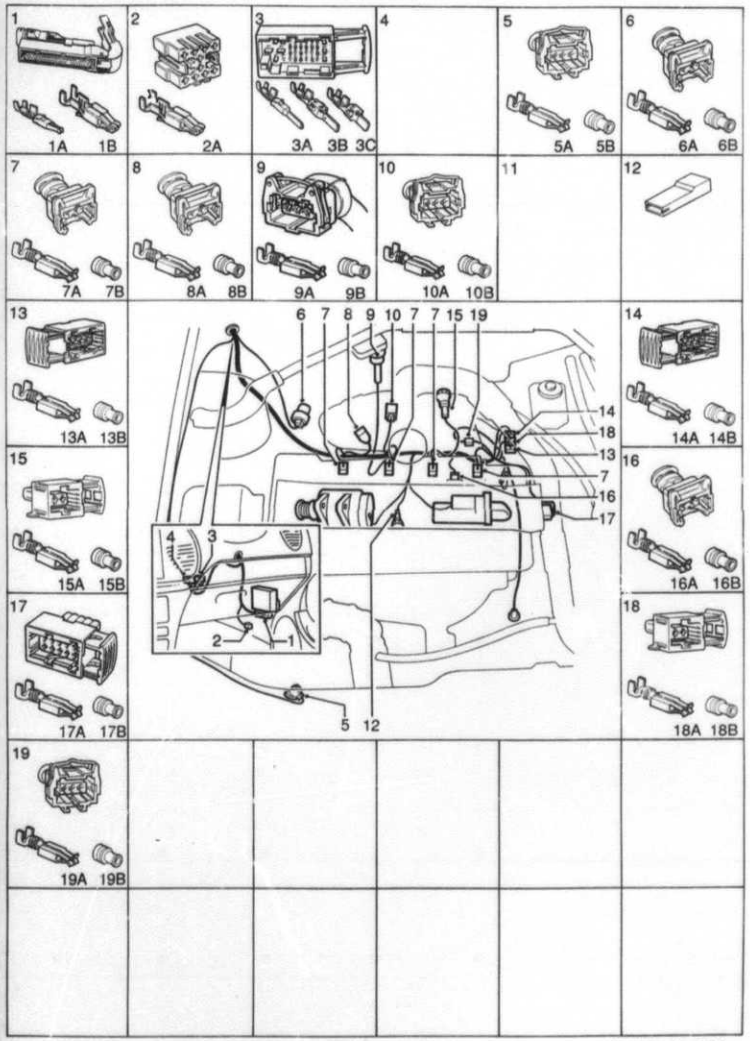

F7885 AAC94

Contact housing etc

3-D12

Engine, B204 L

1996

Kontakthus etc

Motor, B204 L

1996


0612	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	12	44 09 801			1	Cable terminal	Kabelsko	5
0020						1-pole, female	1-polig, hylsa	
0030						EOP sensor	oljetrycksgivare	
0040								
0050	13	41 13 601			1	Connector housing	Kontakthus	8
0060						4-pole, female	4-polig, hylsa	
0070						lambda sonde	lambdasond	
0080						engine	motor	
0090	13A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100	13B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0110								
0120	14	41 13 601			1	Connector housing	Kontakthus	8
0130						4-pole, female	4-polig, hylsa	
0140						lambda sonde	lambdasond	
0150						TW catalytic converter	katalysator	
0160	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170	14B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0180								
0190	15	41 13 205			1	Connector housing	Kontakthus	8
0200						2-pole, female	2-polig, hylss	
0210						temperature sensor	temperarturgivare	
0220	15A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0230	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0240								
0250	16	41 78 414			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						temperature sensor	temperarturgivare	
0280						coolant	kylvätska	
0290	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	17	41 14 005			1	Connector housing	Kontakthus	8
0330						10-pole, female	10-polig, hylsa	
0340						ignition discharge module	tändkasset	
0350	17A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0360	17B	40 61 974		AREA 2,1-2,9 MM2	9	Seal	Tätning	5
0370								
0380	18	41 13 205			1	Connector housing	Kontakthus	8
0390						2-pole, female	2-polig, hylsa	
0400						temperature sensor	temperarturgivare	
0410						coolant	kylvätska	
0420	18A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	18B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	19	44 32 324			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						crank shaft sensor	vevaxelgivare	
0480	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490	19B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

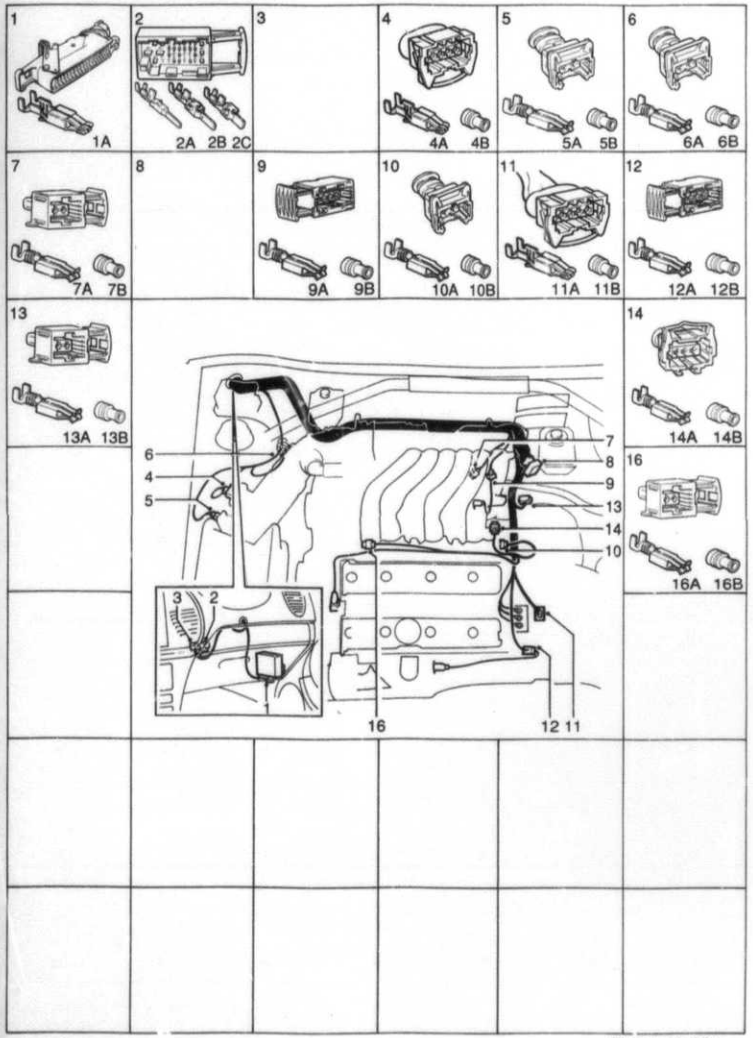

Contact housing etc

3-D14

Engine, B258 I

1996

Kontakthus etc

Motor, B258 I

1996


0614	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	46	Cable terminal	Kabelsko	8
0060								
0070	1	42 22 451		US, CA	1	Contact housing	Kontakthus	8
0080						88-pole, female	88-polig, hylsa	
0090						electronic unit	elektronikenhet	
0100						Motronic	Motronic	
0110		42 23 541			1	.Contact housing	.Kontakthus	5
0120		42 23 558			1	.Cover	.Kåpa	4
0130		42 23 566			1	.Seal	.Tätning	5
0140		85 87 461			1	.Seal	.Tätning	5
0150		42 23 574			1	.Screw	.Skruv	5
0160		42 23 582			1	.Cable attachment	.Ledningsfäste	5
0170		42 23 590			1	.Tensioning band	.Spännband	4
0180	1A	40 63 970		AREA 0,5-1,0 MM2	37	Cable terminal	Kabelsko	8
0190	1A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0200								
0210	2	41 73 852			1	Contact housing	Kontakthus	4
0220						33-pole, male	33-polig, stift	
0230						connection	skarv	
0240	2A	41 15 457		AREA 0,5-1,0 MM2	17	Cable terminal	Kabelsko	5
0250	2B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0260	2C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0270								
0280	4	44 32 357			1	Connector housing	Kontakthus	8
0290						4-pole, female	4-polig, hylsa	
0300						mass air flow sensor	luftmassamätare	
0310	4A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0320	4B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0330								
0340	5	46 68 588			1	Contact housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						temperature sensor	temperarturgivare	
0370	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	5B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	6	44 33 439			1	Connector housing	Kontakthus	8
0410						2-pole, female	2-polig, hylsa	
0420						EVAP CP valve	urluftningsventil	
0430	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0440	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0450	6C	44 33 454			1	Cover	Kåpa	8
0460								
0470	7	41 13 205			1	Connector housing	Kontakthus	8
0480						2-pole, female	2-polig, hylsa	
0490						knock-sensor	knacksensor	
0500						rear	bakre	
0510	7A	43 50 526		AREA 0.5-1,0 MM2	2	Cable terminal	Kabelsko	8
0520	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0530								
0540	9	41 13 601				Connector housing	Kontakthus	8
0550						4-pole, female	4-polig, hylsa	
0560						pre-heating	förvärmning	
0570						lambda sonde	lambdasond	
0580	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0590	9B	40 61 974		AREA 2,1-2,5 MM2	3	Seal	Tätning	5
0600								
0610	10	46 68 596			1	Contact housing	Kontakthus	8
0620						2-pole, female	2-polig, hylsa	
0630						temperature sensor	temperarturgivare	
0640						coolant	kylvätska	
0650	10A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

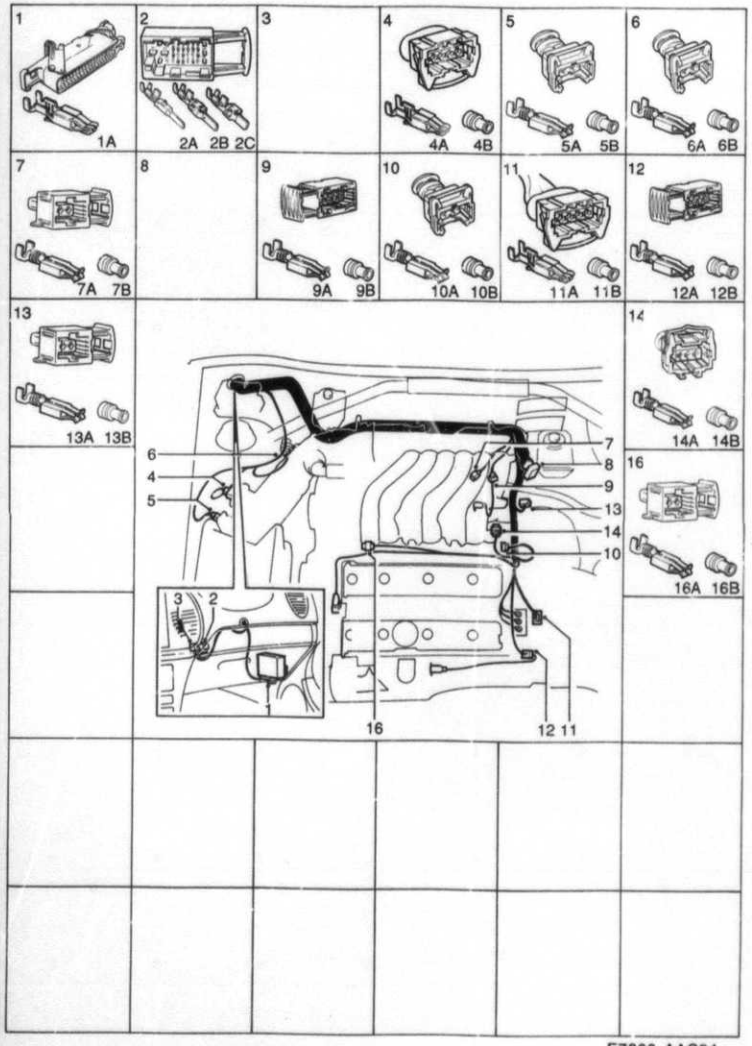

F7886 AAC94

3-D16

Contact housing etc
Engine, B258 I
1996

Kontakthus etc
Motor, B258 I
1996


0614 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660 10B	40 61 974		AREA 2,1-2,5 MM2	2	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

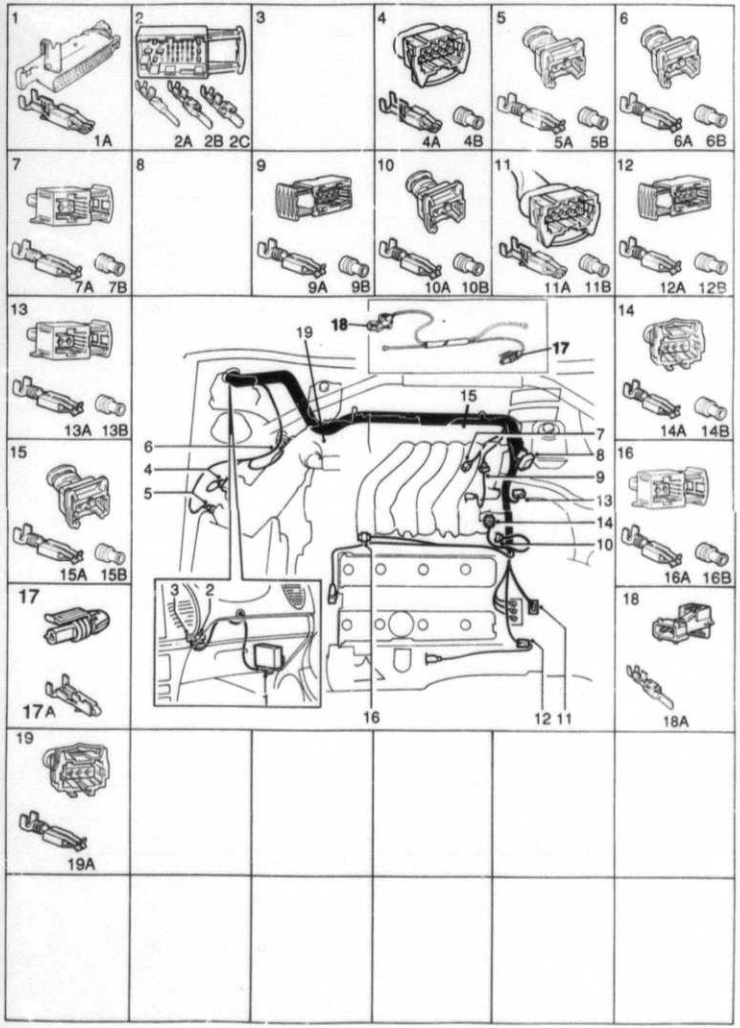

F7887 AAC94

3-D18

Contact housing etc
Engine, B258 I
1996

Kontakthus etc
Motor, B258 I
1996


0616	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	46 08 604			1	Contact housing	Kontakthus	8
0020						4-pole, female	4-polig, hylsa	
0030						ignition coil	tändspole	
0040	11A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050	11B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0060								
0070	12	41 13 601			1	Connector housing	Kontakthus	8
0080						4-pole, female	4-polig, hylsa	
0090						lambda sonde	lambdasond	
0100						front	främre	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0130								
0140	13	41 13 205				Connector housing	Kontakthus	8
0150						2-pole, female	2-polig, hylsa	
0160						temperature sensor	temperarturgivare	
0170						coolant	kylvätska	
0180	13A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190	13B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0200								
0210	14	44 32 316			1	Connector housing	Kontakthus	8
0220						3-pole, female	3-polig, hylsa	
0230						crank shaft sensor	vevaxelgivare	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	15	46 69 180			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						idle speed control	tomgångsreglering	
0300	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0310	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0320								
0330	16	41 13 205			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						knock-sensor	knacksensor	
0360						front	främre	
0370	16A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	42 03 378			1	Connector housing	Kontakthus	4
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	
0430	17A	44 18 505		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	18	41 13 650			1	Connector housing	Kontakthus	8
0460						4-pole, male	4-polig, stift	
0470						connection	skarv	
0480	18A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490								
0500	19	44 32 365			1	Connector housing	Kontakthus	
0510						5-pole, female	5-polig, hylsa	
0520						TCS	TCS	
0530	19A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

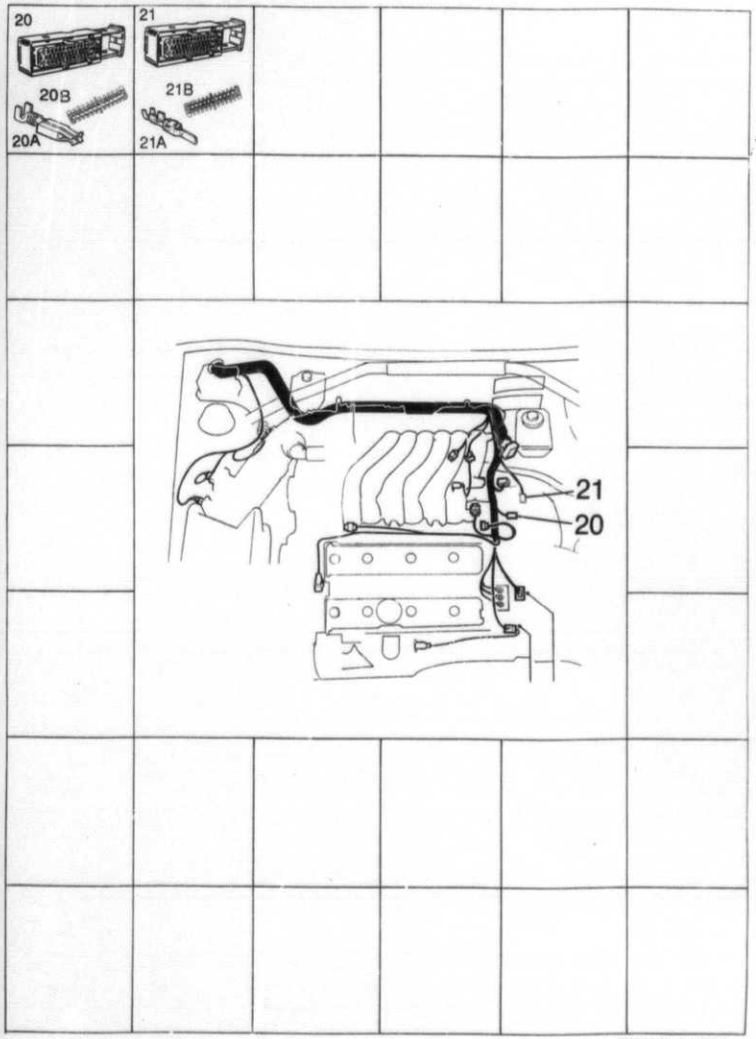

F7888 AAC94

Contact housing etc

3-D20

Engine, B258 I

1996

Kontakthus etc

Motor, B258 I

1996


0618	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	20	46 68 810			1	Connector housing	Kontakthus	8
0020						24-pole, female	24-polig, hylsa	
0030						connection	skarv	
0040	20A	43 50 526		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0050	20A	40 61 586		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0060	20B	46 92 851			1	Locking	Låsning	8
0070								
0080	21	46 68 869			1	Connector housing	Kontakthus	8
0090						24-pole, male	24-polig, stift	
0100						connection	skarv	
0110	21A	*43 50 609*		AREA 0,5-1,0 MM2 NLS – USE 4115192	3	Cable terminal	Kabelsko	5
0120	21A	41 15 192		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0130	21B	46 92 851			1	Locking	Låsning	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

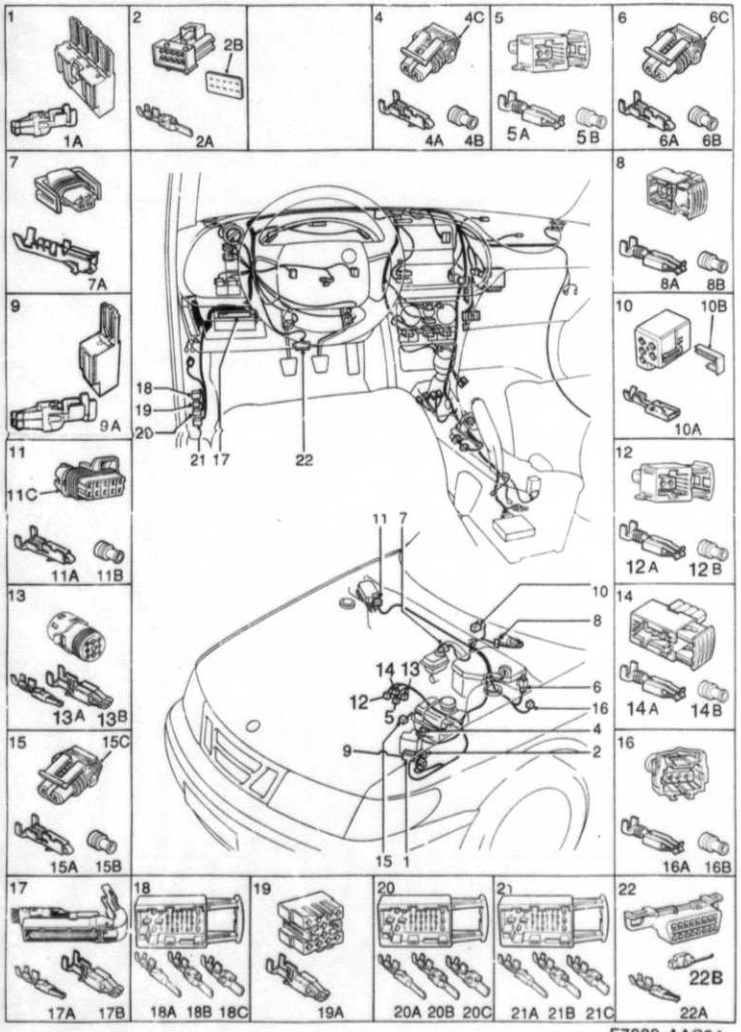

3-D22

Contact housing etc

Instrument panel

1996

Kontakthus etc

Instrumentpanel

1996


0620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 30 181			1	Connector housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						fuse box	säkringsdosa	
0040	1A	44 64 343		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 14 054			1	Connector housing	Kontakthus	8
0070						10-pole, male	10-polig, stift	
0080						connection	skarv	
0090	2A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0100	2B	41 14 153			1	Seal	Tätning	5
0110								
0120	4	44 34 841			1	Connector housing	Kontakthus	5
0130						2-pole, female	2-polig, hylsa	
0140						level sensor	nivågivare	
0150						coolant	kylvätska	
0160	4A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0170	4B	44 19 313			2	Seal	Tätning	5
0130						blue	blå	
0190	4C	42 01 232			1	Locking	Låsning	4
0200								
0210	5	41 13 205			1	Connector housing	Kontakthus	8
0220						2-pole, female	2-polig, hylsa	
0230						temperature sensor	temperarturgivare	
0240						clutch	koppling	
0250	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0260	5B	40 61 966		AREA 1,2-2,0MM2	2	Seal	Tätning	5
0270								
0280	6	42 01 224			1	Connector housing	Kontakthus	5
0290						2-pole, female	2-polig, hylsa	
0300						bonnet	motorhuv	
0310	6A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0320	6B	44 19 313			2	Seal	Tätning	5
0330						blue	blå	
0340	6C	42 01 232			1	Locking	Låsning	4
0350								
0360	7	42 01 273			1	Connector housing	Kontakthus	4
0370						2-pole, female	2-polig, hylsa	
0380						level sensor	nivågivare	
0390						brake fluid	bromsvätska	
0400	7A	44 88 458		AREA 0,35-0,5 MM2	2	Cable terminal	Kabelsko	5
0410								
0420	8	41 13 809			1	Connector housing	Kontakthus	4
0430						6-pole, female	6-polig, hylsa	
0440						windscreen wiper	vindrutetorkare	
0450	8A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0460	8B	40 61 966		AREA 1,2-2,0 MM2	6	Seal	Tätning	5
0470								
0480	9	42 30 199		CV	1	Connector housing	Kontakthus	4
0490						1-pole, female	1-polig, hylsa	
0500						fuse box	säkringsdosa	
0510	9A	44 64 343		AREA 4,0-6,0 MM2	1	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

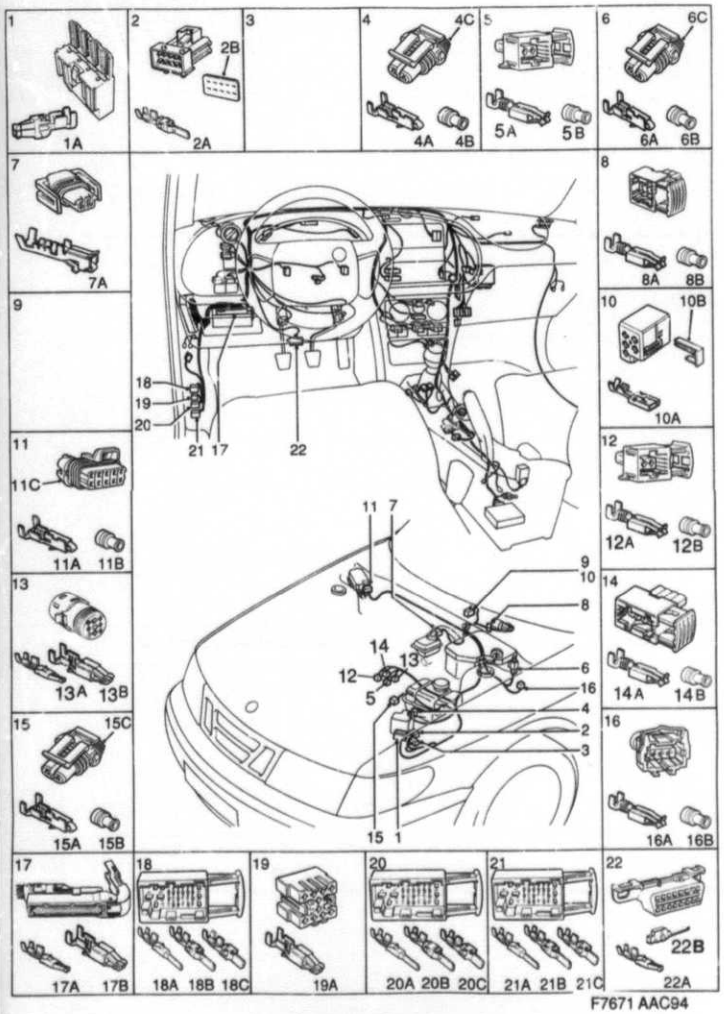

F7671 AAC94

Contact housing etc

3-D24 *Instrument panel 1996*

Kontakthus etc

Instrumentpanel 1996


0622	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	44 63 014			1	Connector housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030						fan motor	fläktmotor	
0040	10A	44 12 961		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	5
0050	10B	44 63 022			1	Locking	Låsning	4
0060								
0070	11	42 03 568			1	Connector housing	Kontakthus	4
0080						10-pole, female	10-polig, hylsa	
0090						speed control system	farthållningssystem	
0100	11A	44 18 505		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	5
0110	11B	44 19 313			10	Seal	Tätning	5
0120						blue	blå	
0130	11C	42 03 576			1	Locking	Låsning	4
0140								
0150	12	41 13 205			1	Connector housing	Kontakthus	8
0160						2-pole, female	2-polig, hylsa	
0170						input shaft speed sensor	hastighetsgivare	
0180						gearbox	växellåda	
0190	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0200	12B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0210								
0220	13	44 66 462			1	Connector housing	Kontakthus	4
0230						8-pole, female	8-polig, hylsa	
0240						actuator	manöverdon	
0250						ACS	ACS	
0260	13A	41 15 499		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	8
0270	13B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	14	41 13 601			1	Connector housing	Kontakthus	8
0300						4-pole, female	4-polig, hylsa	
0310						sensor	givare	
0320						gearbox	växellåda	
0330	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0340	14B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0350								
0360	15	42 01 224			1	Connector housing	Kontakthus	5
0370						2-pole, female	2-polig, hylsa	
0380						revers light contact	backljuskontakt	
0390	15A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0400	15B	44 19 313			2	Seal	Tätning	5
0410						blue	blå	
0420	15C	42 01 232			1	Locking	Låsning	4
0430								
0440	16	44 32 316			1	Connector housing	Kontakthus	8
0450						3-pole, female	3-polig, hylsa	
0460						center of gravity sensor	accelerationssensor	
0470	16A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0480	16B	40 61 966		AREA 1,0-2,0 MM2	3	Seal	Tätning	5
0490								
0500	17	41 76 616			1	Connector housing	Kontakthus	8
0510						70-pole, female	70-polig, hylsa	
0520						ICE	ICE	
0530	17A	41 15 499		AREA 0,5-1,0 MM2	49	Cable terminal	Kabelsko	8
0540	17B	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0550								
0560	18	41 73 852			1	Contact housing	Kontakthus	4
0570						33-pole, male	33-polig, stift	
0580						connection	skarv	
0590	18A	41 15 457		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	5
0600	18B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0610	18C	41 15 580		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

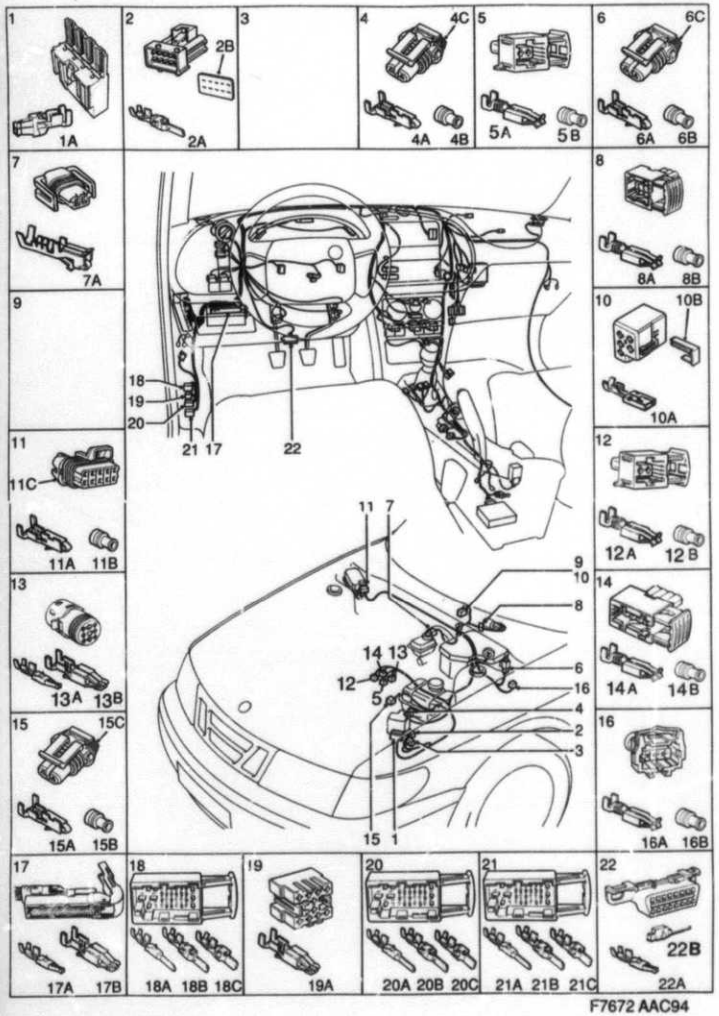

F7672 AAC94

Contact housing etc

3-E02 *Instrument panel* *1996*

Kontakthus etc

Instrumentpanel *1996*


0624	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	19	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	19A	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	20	41 73 852			1	Contact housing	Kontakthus	4
0070						33-pole, male	33-polig, stift	
0080						connection	skarv	
0090	20A	41 15 457		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	5
0100	20B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	20C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0120								
0130	21	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	21A	41 15 457		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	5
0170	21B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	21C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	22	42 24 606			1	Connector housing	Kontakthus	8
0210						16-pole, female	16-polig, hylsa	
0220						data link connector	diagnostikuttag	
0230	22A	41 15 499		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	8
0240	22B	44 34 833			1	Cover	Kåpa	4

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

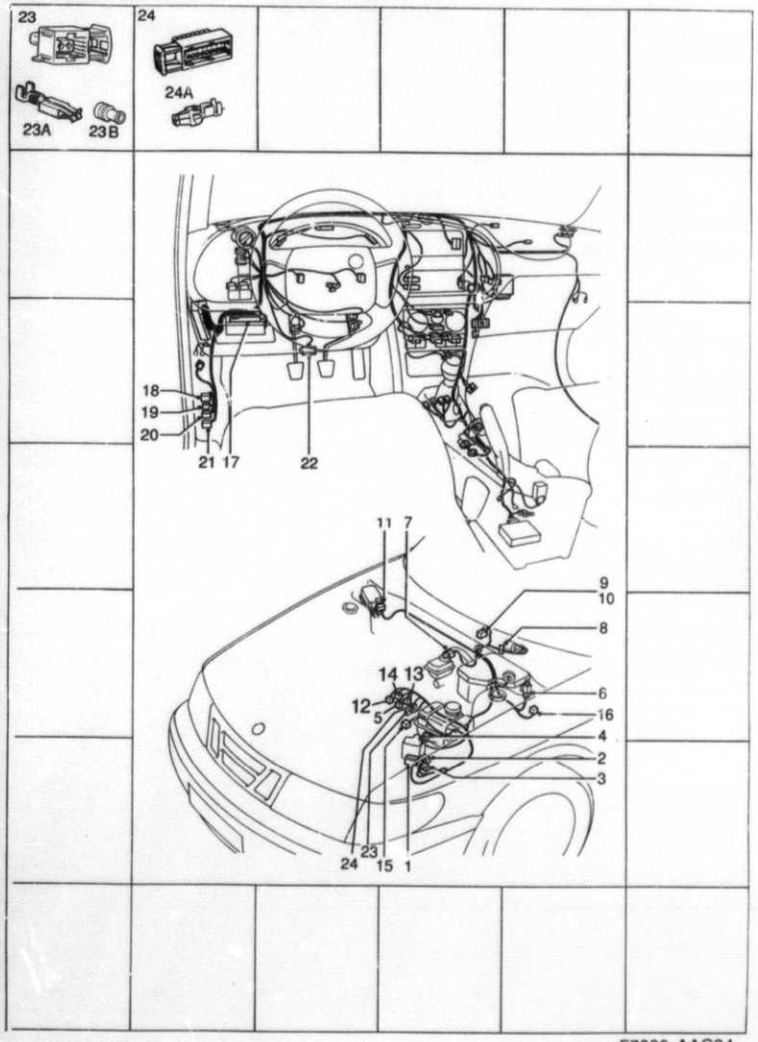

F7890 AAC94

Contact housing etc

3-E04 *Instrument panel 1996*

Kontakthus etc

Instrumentpanel 1996


0625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	23	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	23A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0050	23B	40 61 974			X	Seal	Tätning	5
0060								
0070	24	41 14 401			1	Connector housing	Kontakthus	8
0080						16-pole, female	16-polig, hylsa	
0090						connection	skarv	
0100	24A	40 61 586		AREA 1,0-2,5 MM2	11	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

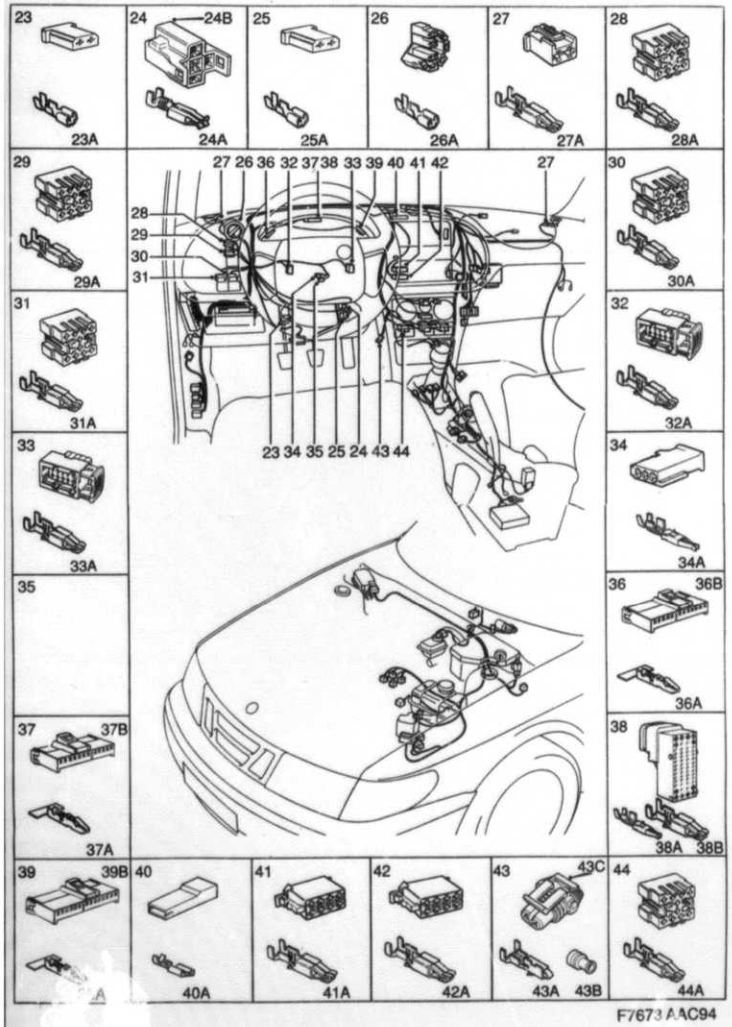

F7673 AAC94

Contact housing etc

3 -E06

Instrument panel

1996

Kontakthus etc

Instrumentpanel

1996


0626	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	23	83 78 630			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						contact	kontakt	
0040						clutch	koppling	
0050	23A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0060								
0070	24	42 24 317			1	Connector housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						brake light switch	bromsljuskontakt	
0100	24A	91 20 791		AREA 2,5-4,0 MM2	4	Cable terminal	Kabelsko	8
0110	24B	42 24 333			1	Locking	Låsning	4
0120								
0130	25	83 78 630			1	Contact housing	Kontakthus	4
0140						2-pole, female	2-polig, hylsa	
0150						contact	kontakt	
0160						brake	broms	
0170	25A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0180								
0190	26	85 44 363			1	Contact housing	Kontakthus	4
0200						8-pole, female	8-polig, hylsa	
0210						light switch	ljusomkopplare	
0220	26A	44 64 400		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	5
0230								
0240	27	91 23 548			1	Contact housing	Kontakthus	4
0250						2-pole, female	2-polig, hylsa	
0260						loudspeaker	högtalare	
0270	27A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	28	91 23 399			1	Connector housing	Skarvhus	4
0300						10-pole, female	10-polig, hylsa	
0310						rear fog light	dimbaklykta	
0320	28A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0330								
0340	29	91 23 399			1	Connector housing	Skarvhus	4
0350						10-pole, female	10-polig, hylsa	
0360						fog light	dimljus	
0370	29A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0380								
0390	30	91 23 399			1	Connector housing	Skarvhus	4
0400						10-pole, female	10-polig, hylsa	
0410						rheostat	reostat	
0420	30A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0430								
0440	31	91 23 399			1	Connector housing	Skarvhus	4
0450						10-pole, female	10-polig, hylsa	
0460						headlamp levelling	ljusinställningsreglering	
0470	31A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0480								
0490	32	41 14 005			1	Connector housing	Kontakthus	8
0500						10-pole, female	10-polig, hylsa	
0510						direction indicator	blinkers	
0520	32A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

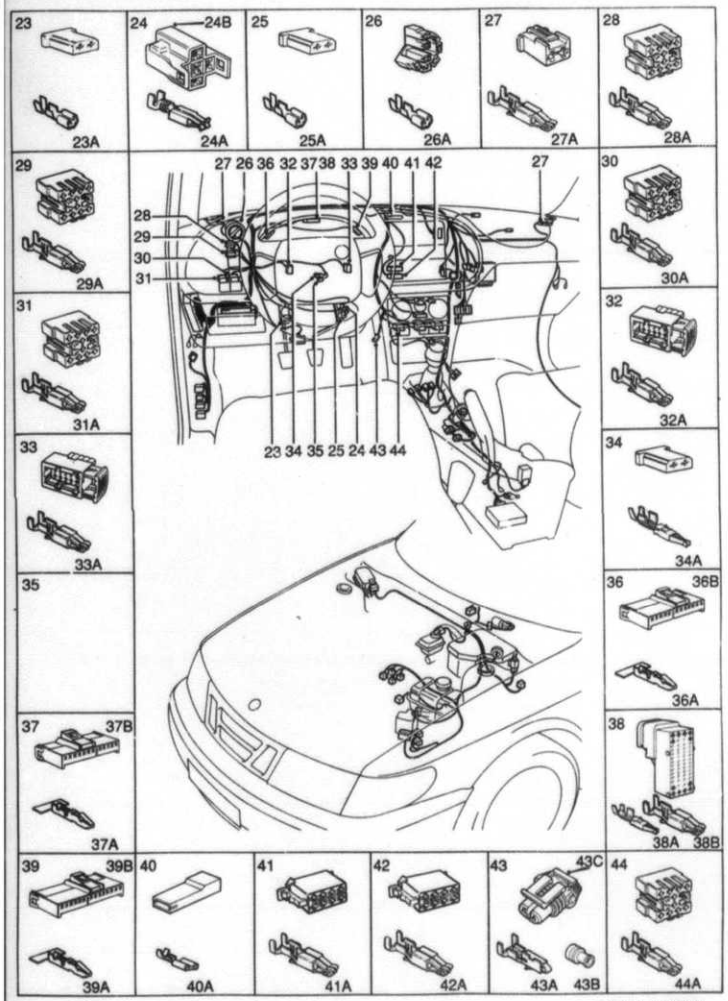

F7674 AAC94

Contact housing etc

3-E08 *Instrument panel 1996*

Kontakthus etc

Instrumentpanel 1996


0628	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	33	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						windscreen wiper	vindrutetorkare	
0040	33A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050								
0060	34	45 17 702			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						air-bag	airbag	
0090	34A	44 66 801		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	36	44 09 181			1	Connector housing	Kontakthus	4
0120						12-pole, female	12-polig, hylsa	
0130						instrument	instrument	
0140	36A	42 24 515		AREA 0,2-0,5 MM2	7	Cable terminal	Kabelsko	5
0150	36B	44 09 207			1	Cover	Kåpa	4
0160								
0170	37	44 09 165			1	Connector housing	Kontakthus	4
0180						12-pole, female	12-polig, hylsa	
0190						instrument	instrument	
0200	37A	42 24 515		AREA 0,2-0,5 MM2	12	Cable terminal	Kabelsko	5
0210	37B	44 09 207			1	Cover	Kåpa	4
0220								
0230	38	41 15 408			1	Connector housing	Kontakthus	4
0240						56-pole, female	56-polig, hylsa	
0250						instrument	instrument	
0260	38A	41 15 499		AREA 0,5-1,0 MM2	33	Cable terminal	Kabelsko	8
0270	38B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0280								
0290	39	44 09 199			1	Connector housing	Kontakthus	4
0300						12-pole, female	12-polig, hylsa	
0310						instrument	instrument	
0320	39A	42 24 515		AREA 0,2-0,5 MM2	11	Cable terminal	Kabelsko	5
0330	39B	44 09 207			1	Cover	Kåpa	4
0340								
0350	40	85 16 916			1	Insulation	Isolering	4
0360						1-pole, female	1-polig, hylsa	
0370						seat belt warning	bältesvarning	
0380	40A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0390								
0400	41	42 03 626			1	Connector housing	Kontakthus	4
0410						8-pole, female	8-polig, hylsa	
0420						radio	radio	
0430	41A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0440								
0450	42	42 03 618			1	Connector housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						radio	radio	
0480	42A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0490								
0500	43	42 01 224			1	Connector housing	Kontakthus	5
0510						2-pole, female	2-polig, hylsa	
0520						kick-down switch	kick-downströmställare	
0530	43A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0540	43B	44 19 313			2	Seal	Tätning	5
0550						blue	blå	
0560	43C	42 01 232			1	Locking	Låsning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

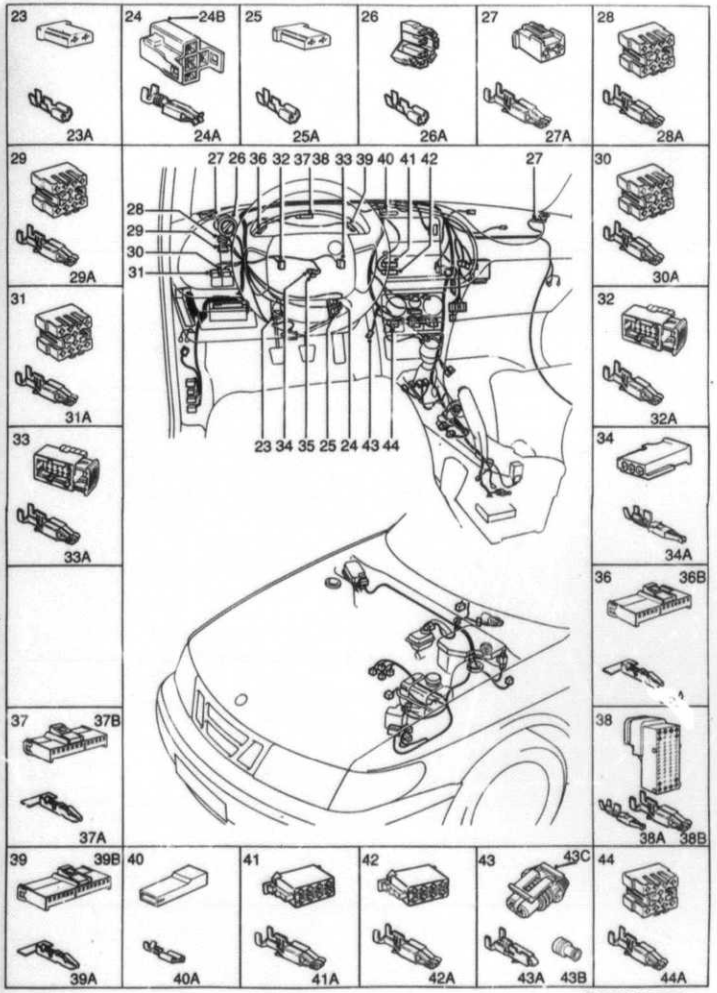

F7675 AAC94

Contact housing etc

3-E10 *Instrument panel 1996*

Kontakthus etc

Instrumentpanel 1996


0630	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	44	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						TCS	TCS	
0050	44A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

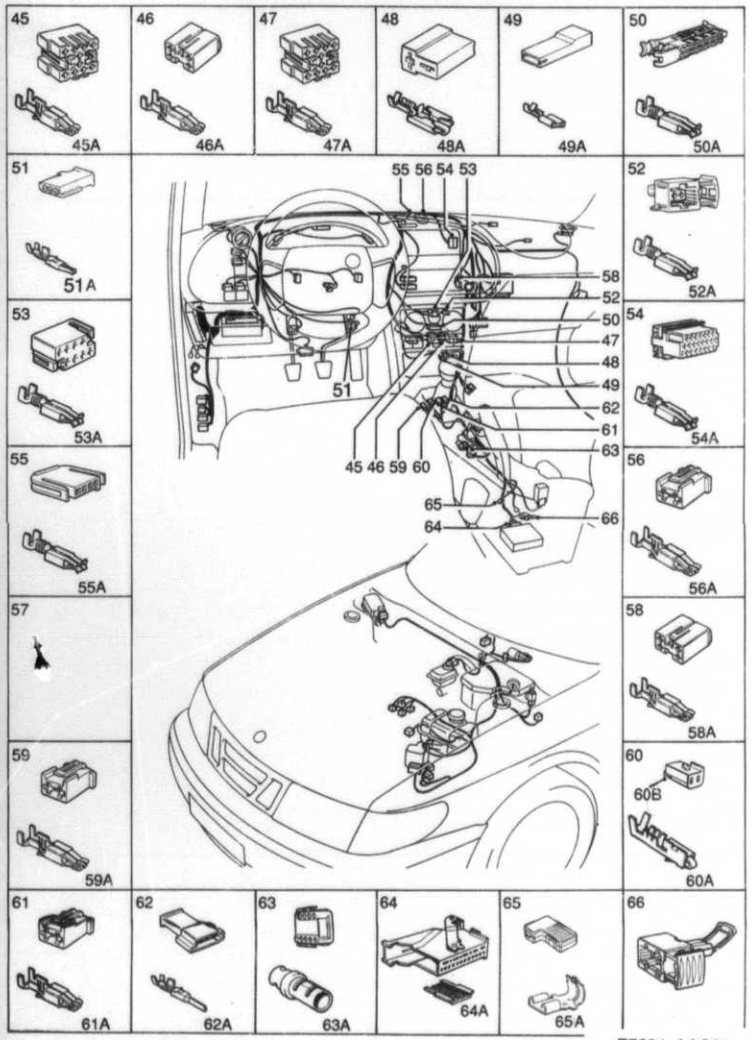

Contact housing etc

3-E12

Instrument panel

1996

Kontakthus etc

Instrumentpanel

1996


0632	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	45	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						heating pad	värmedyna	
0050	45A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0060								
0070	46	91 23 555			1	Contact housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						sensor	sensor	
0100						indoor temperature	innerlufttemperatur	
0110	46A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0120								
0130	47	91 23 399			1	Connector housing	Skarvhus	4
0140						10-pole, female	10-polig, hylsa	
0150						switch	strömställare	
0160						heating pad	värmedyna	
0170	47A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0180								
0190	48	85 74 949			1	Contact housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						cigarette lighter	cigarettändare	
0220	48A	44 64 400		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0230								
0240	49	85 33 184			1	Contact housing	Kontakthus	4
0250						1-pole, female	1-polig, hylsa	
0260						lighting	belysning	
0270						cigarette lighter	cigarettändare	
0280	49A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0290								
0300	50	95 65 045			1	Contact housing	Kontakthus	5
0310						39-pole, female	39-polig, hylsa	
0320						ACC	ACC	
0330	50A	44 66 736		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	50A	40 63 970		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0350	50A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0360								
0370	52	41 13 205			1	Connector housing	Kontakthus	8
0380						2-pole, female	2-polig, hylsa	
0390						background lighting	bakgrundsbelysning	
0400	52A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0410								
0420	53	91 24 090			1	Contact housing	Kontakthus	4
0430						8-pole, female	8-polig, hylsa	
0440						AC	AC	
0450	53A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0460								
0470	54	42 23 624			1	Connector housing	Kontakthus	4
0480						22-pole, female	22-polig, hylsa	
0490						information display	informationsdisplay	
0500	54A	41 15 499		AREA 0,5-1,0 MM2	18	Cable terminal	Kabelsko	8
0510								
0520	55	40 60 869			1	Contact housing	Kontakthus	5
0530						4-pole, female	4-polig, hylsa	
0540						sunlight sensor	solljusavkännare	
0550	55A	40 63 970		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

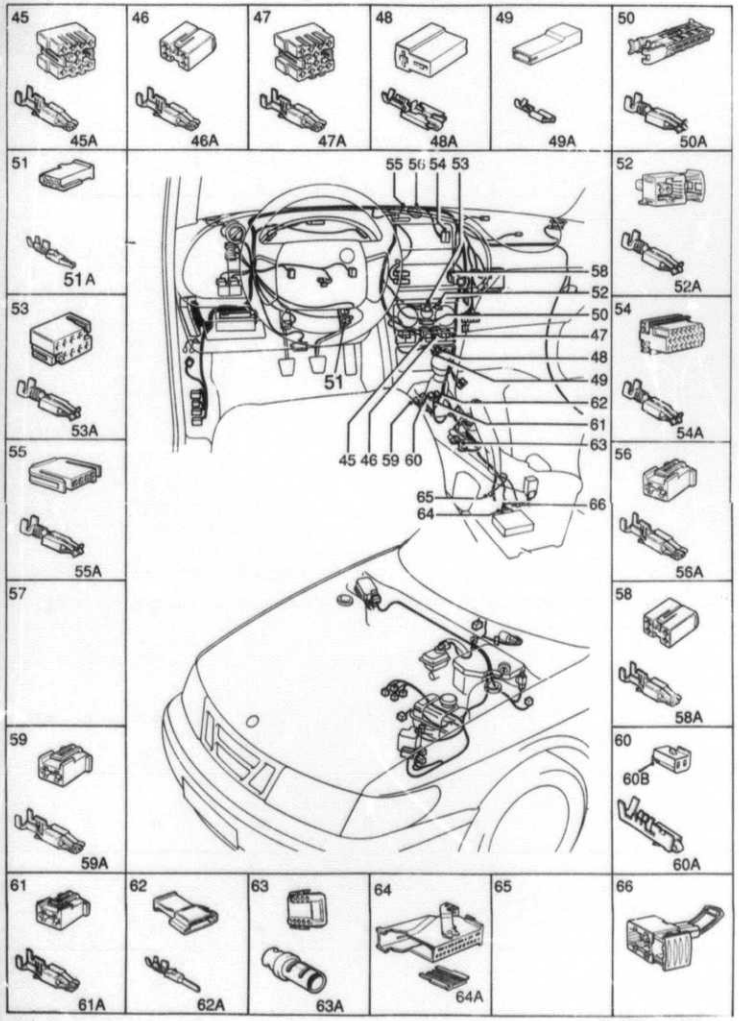

F7892 AAC94

3-E14

Contact housing etc
Instrument panel
1996

Kontakthus etc
Instrumentpanel
1996


0634	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	56	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						theft alarm	stöldlarm	
0040	56A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	57	41 13 007			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
008C						sensor	givare	
0090						accelerator pedal	gaspedal	
0100	57A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	58	91 23 555			1	Contact housing	Kontakthus	4
0130						4-pole, female	4-polig, hylsa	
0140						warning flasher	varningsblinklykta	
0150	58A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0160								
0170	59	91 23 548			1	Contact housing	Kontakthus	4
0180						2-pole, female	2-polig, hylsa	
0190						lighting	belysning	
0200						gear position	växelläge	
0210	59A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220								
0230	60	44 11 740			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						shift solenoid	växlingssolenoid	
0260	60A	44 88 151		AREA0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0270	60B	44 11 757			1	Locking	Låsning	4
0280								
0290	61	91 23 548			1	Contact housing	Kontakthus	4
0300						2-pole, female	2-polig, hylsa	
0310						switch	strömställare	
0320						SPORTS	SPORT	
0330	61A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0340								
0350	62	41 13 056			1	Connector housing	Kontakthus	4
0360						3-pole, male	3-polig, stift	
0370						switch	strömställare	
0380						WINTER	VINTER	
0390	62A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0400								
0410	63	42 24 457			1	Connector housing	Kontakthus	4
0420						9-pole, female	9-polig, hylsa	
0430						starter switch	tändningslås	
0440	63A	95 09 746			7	Cable terminal	Kabelsko	5
0450								
0460	64	47 34 448			1	Cover	Kåpa	4
0470						30-pole	30-polig	
0480						airbag module	airbagmodul	
0490	64A	47 34 471			1	Locking	Låsning	4
0500								
0510	66	44 30 153			1	Resistor	Motstånd	6
0520						air-bag	airbag	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

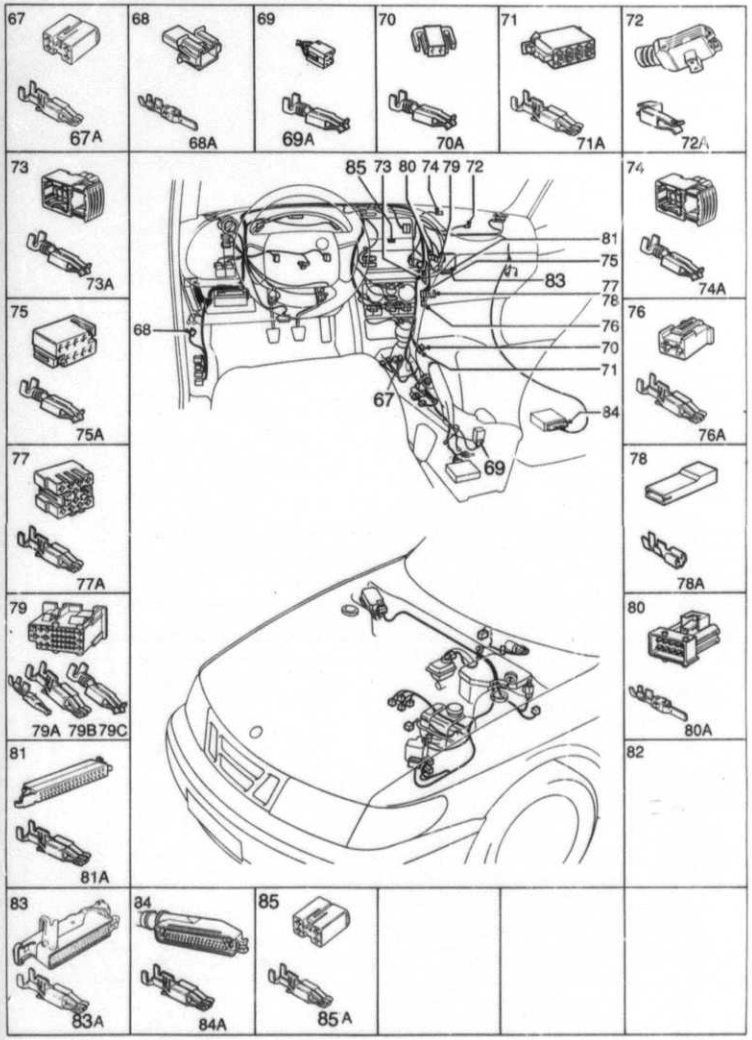

F7893 AAC94

Contact housing etc

3-E16

Instrument panel

1996

Kontakthus etc

Instrumentpanel

1996


0636	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	67	91 23 555			1	Contact housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						gear position indicator	växellägesindikator	
0040	67A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	68	41 17 164			1	Connector housing	Kontakthus	4
0070						2-pole, male	2-polig, stift	
0080						catalytic converter temp	katalysatortemp	
0090	68A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	69	42 24 168			1	Connector housing	Kontakthus	4
0120						5-pole, female	5-polig, hylsa	
0130						rear seat	baksäte	
0140	69A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0150								
0160	70	91 24 157			1	Contact housing	Kontakthus	4
0170						2-pole, female	2-polig, hylsa	
0180						amplifier	förstärkare	
0190	70A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0200								
0210	71	42 03 626			1	Connector housing	Kontakthus	4
0220						8-pole, female	8-polig, hylsa	
0230						radio	radio	
0240	71A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0250								
0260	72	95 52 183			1	Contact housing	Kontakthus	4
0270						2-pole, female	2-polig, hylsa	
0280						air-bag	airbag	
0290	72A	95 52 191			2	Cable terminal	Kabelsko	5
0300								
0310	73	91 23 548			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						microswitch	mikrobrytare	
0340	73A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	74	41 13 809			1	Connector housing	Kontakthus	4
0370						6-pole, female	6-polig, hylsa	
0380						telephone	telefon	
0390	74A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0400								
0410	75	91 24 090			1	Contact housing	Kontakthus	4
0420						8-pole, female	8-polig, hylsa	
0430						fan	fläkt	
0440						ACC	ACC	
0450	75A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0460								
0470	76	91 23 548			1	Contact housing	Kontakthus	4
0480						2-pole, female	2-polig, hylsa	
0490						recirculation	recirkulation	
0500	76A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0510								
0520	77	91 23 399			1	Connector housing	Skarvhus	4
0530						10-pole, female	10-polig, hylsa	
0540						motor	motor	
0550						ACC	ACC	
0560	77A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0570								
0580	78	85 16 916			1	Insulation	Isolering	4
0590						1-pole, female	1-polig, hylsa	
0600						anti-freeze thermostate	frysskyddstermostat	
0610	78A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

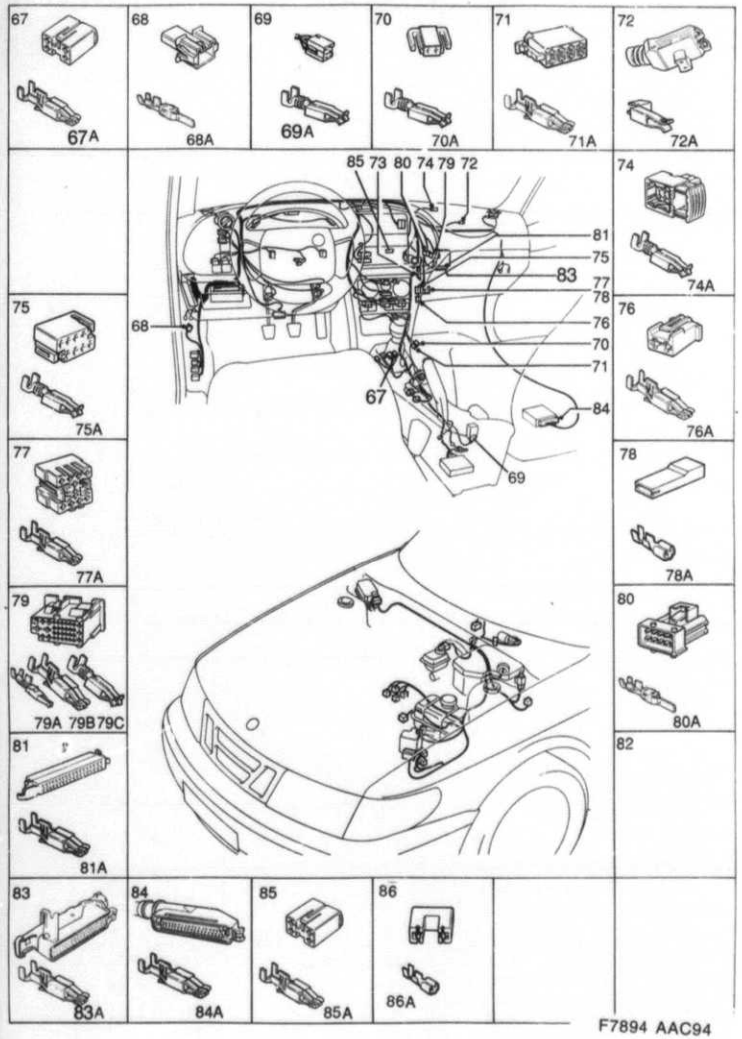

3-E18

Contact housing etc

Instrument panel

1996

Kontakthus etc

Instrumentpanel

1996


0638	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	79	41 73 803			1	Contact housing	Kontakthus	4
0020						33-pole, female	33-polig, hylsa	
0030						connection	skarv	
0040	79A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0050	79B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0060	79C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0070								
0080	80	41 14 054			1	Connector housing	Kontakthus	8
0090						10-pole, male	10-polig, stift	
0100						connection	skarv	
0110	80A	41 15 077		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0120								
0130	81	42 03 659			1	Connector housing	Kontakthus	4
0140						35-pole, female	35-polig, hylsa	
0150						electronic unit	elektronikenhet	
0160						TCM	TCM	
0170	81A	91 20 957		AREA 1,0-2,5 MM2	34	Cable terminal	Kabelsko	8
0180								
0190	83	42 22 311			1	Connector housing	Kontakthus	4
0200						55-pole, female	55-polig, hylsa	
0210						electronic unit	elektronikenhet	
0220						ACS	ACS	
0230	83A	91 20 957		AREA 1,0-2,5 MM2	33	Cable terminal	Kabelsko	8
0240								
0250	84	44 10 619			1	Connector housing	Kontakthus	8
0260						35-pole, female	35-polig, hylsa	
0270						electronic unit	elektronikenhet	
0280						TCS	TCS	
0290	84A	91 20 957		AREA 1,0-2,5 MM2	23	Cable terminal	Kabelsko	8
0300								
0310	85	91 23 555			1	Contact housing	Kontakthus	4
0320						radio	radio	
0330						4-pole, female	4-polig, hylsa	
0340	85A	40 63 087		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0350								
0360	86	42 03 733			1	Connector housing	Kontakthus	4
0370						2-pole, female	2-polig, hylsa	
0380						glove compartment lamp	handskfacklampa	
0390	86A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

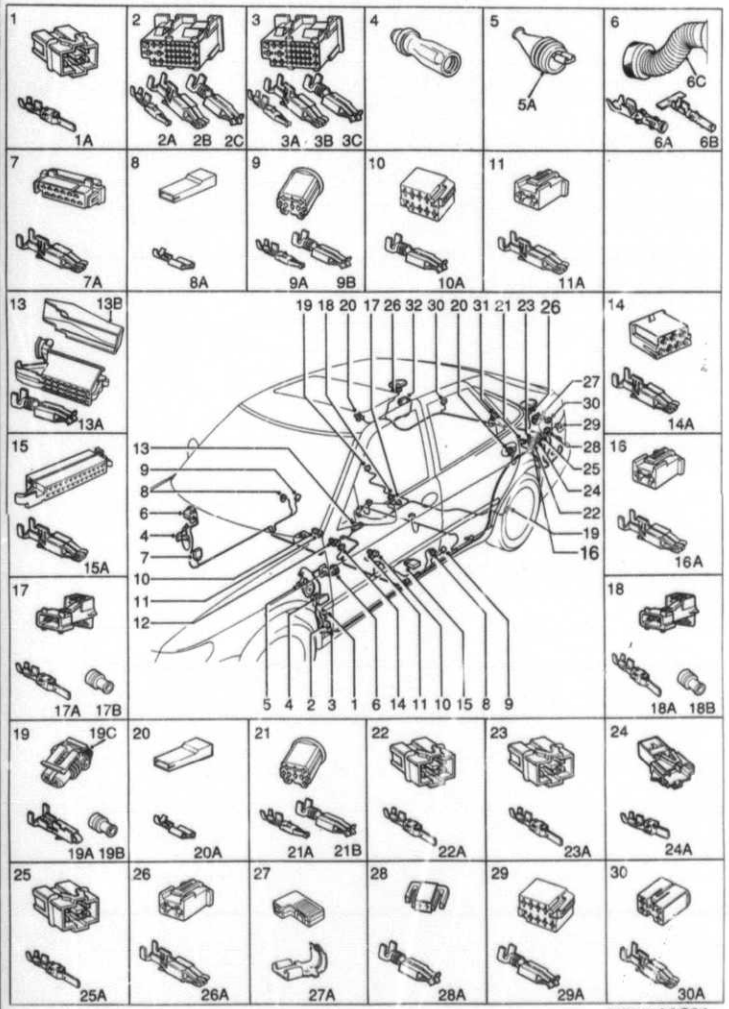

F7680 AAC94

3-E20

Contact housing etc
Rear, 3D, 5D
1996

Kontakthus etc
Bakre, 3D, 5D
1996

0640	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0210						1-pole, female	1-polig, hylsa	
0220						side indicator lamp	sidoblinklykta	
0230								
0240	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0250						1-pole, female	1-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	5A	42 03 683			1	Protection	Skydd	4
0280								
0290	6	42 03 253			1	Connector housing	Kontakthus	4
0300						26-pole, female	26-polig, hylsa	
0310						front door	framdörr	
0320	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0330	6B	44 09 728		AREA 1,0-2,5 MM2	22	Cable terminal	Kabelsko	5
0340	6C	42 22 352			1	Protection	Skydd	4
0350								
0360	7	95 25 031			1	Contact housing	Kontakthus	5
0370						12-pole, female	12-polig, hylsa	
0380						central lock	centrallås	
0390	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0400								
0410	8	85 16 916			1	Insulation	Isolering	4
0420						1-pole, female	1-polig, hylsa	
0430						switch	strömställare	
0440	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	9	44 11 518			1	Connector housing	Kontakthus	
0470						10-pole, female	10-polig, hylsa	
0480						rear door	bakdörr	
0490	9A	41 15 499		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	8
0500	9B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	10	91 24 090			1	Contact housing	Kontakthus	4
0530						8-pole, female	8-polig, hylsa	
0540						front seat	framstol	
0550	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

3 -E22

Contact housing etc
Rear, 3D, 5D
1996

Kontakthus etc
Bakre, 3D, 5D
1996

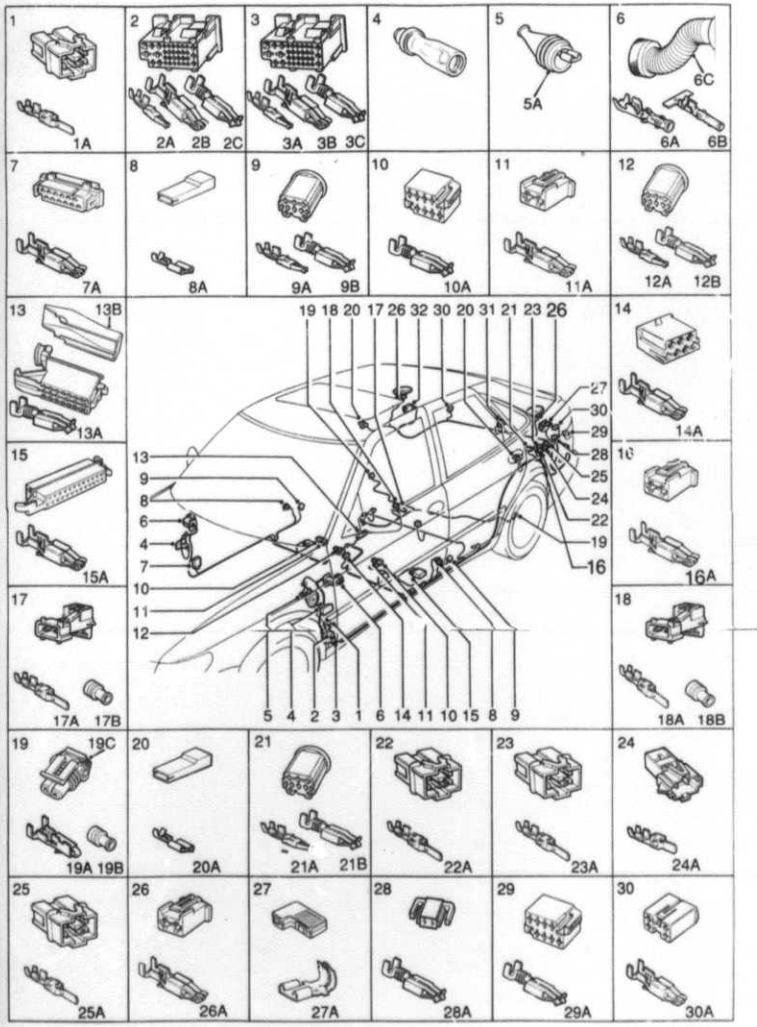

F7895 AAC94


0642	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	12	44 11 518			1	Connector housing	Kontakthus	
0070						10-pole, female	10-polig, hylsa	
0080						connection	skarv	
0090	12A	44 66 801		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0100	12A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0110								
0120	13	40 60 893			1	Contact housing	Kontakthus	5
0130						19-pole, female	19-polig, hylsa	
0140						window lift	fönsterhiss	
0150	13A	91 20 957		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0160	13A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0170	13B	40 67 617			1	Cover	Kåpa	4
0180								
0190	14	91 23 381			1	Contact housing	Kontakthus	4
0200						7-pole, female	7-polig, hylsa	
0210						interior illum.	innerbelysning	
0220	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0230								
0240	15	45 37 429			1	Contact housing	Kontakthus	5
0250						25-pole, female	25-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	15A	91 20 957		AREA 1,0-2,5 MM2	24	Cable terminal	Kabelsko	8
0280								
0290	15	41 76 186		VSS	1	Connector housing	Kontakthus	4
0300						25-pole, female	25-polig, hylsa	
0310						theft alarm	stöldlarm	
0320	15A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0330								
0340	16	91 23 548			1	Contact housing	Kontakthus	4
0350						2-pole, female	2-polig, hylsa	
0360						connection	skarv	
0370	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380								
0390	17	41 13 254			1	Connector housing	Kontakthus	8
0400						2-pole, male	2-polig, stift	
0410						fuel pump	bränslepump	
0420	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0440								
0450	18	41 13 254			1	Connector housing	Kontakthus	8
0460						2-pole, male	2-polig, stift	
0470						fuel pump	bränslepump	
0480	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0490	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0500								
0510	19	42 03 428			1	Connector housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530						sensor, ABS	sensor, ABS	
0540	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0550	19B	44 19 305			1	Seal	Tätning	5
0560						red	röd	
0570	19B	44 19 313			1	Seal	Tätning	5
0580						blue	blå	
0590	19C	42 01 232			1	Locking	Låsning	4
0600								
0610	20	85 16 916			1	Insulation	Isolering	4
0620						1-pole, female	1-polig, hylsa	
0630						switch	strömställare	
0640	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

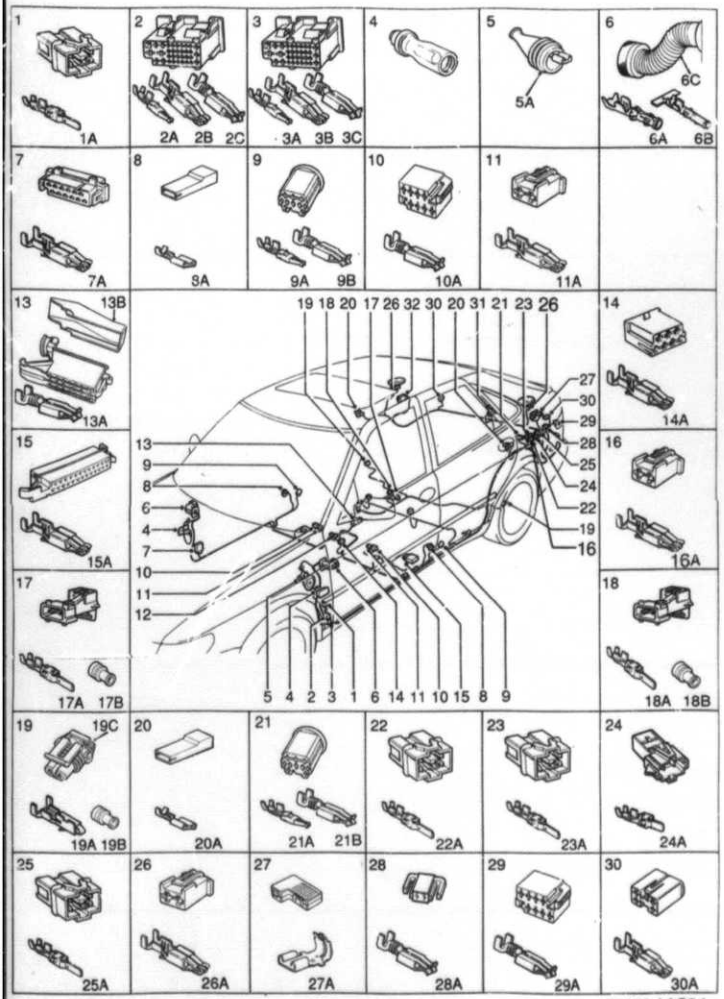

F7682 AAC94

3-E24

Contact housing etc
Rear, 3D, 5D
1996

Kontakthus etc
Bakre, 3D, 5D
1996


0644	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	24	41 17 560			1	Connector housing	Kontakthus	4
0120						2-pole, male	2-polig, stift	
0130						connection	skarv	
0140	24A	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	25	41 17 263			1	Connector housing	Kontakthus	4
0170						4-pole, male	4-polig, stift	
0180						connection	skarv	
0190	25A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0210								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
J230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

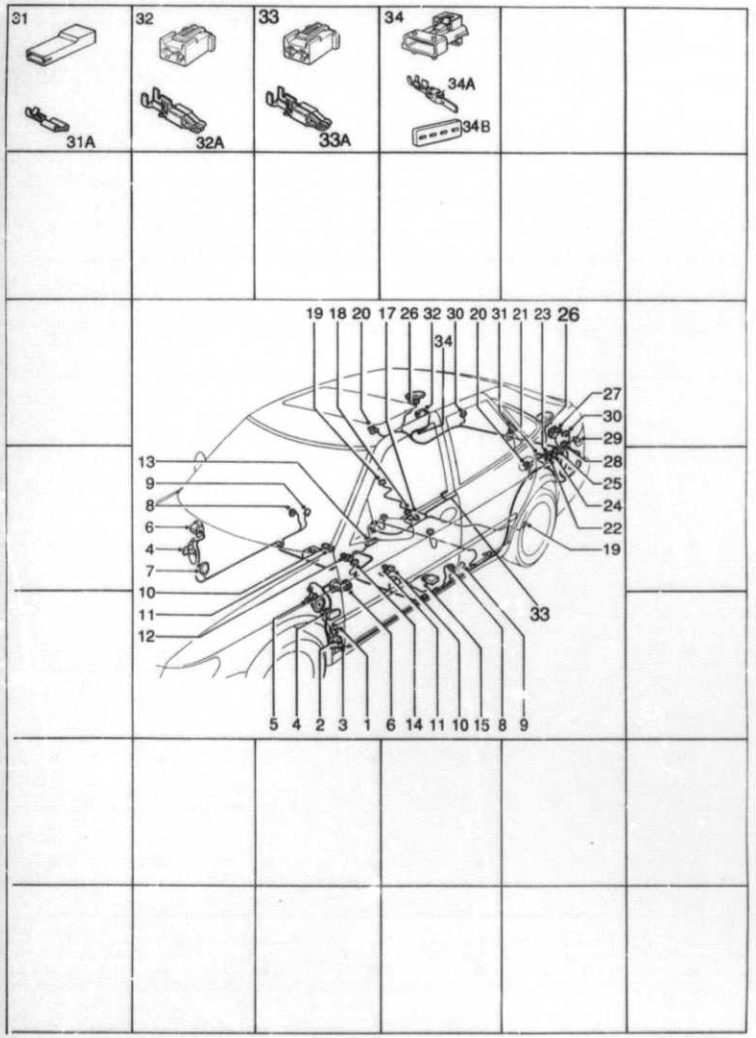

F7896 AAC94

Contact housing etc

3-F02

Rear, 3D, 5D

1996

Kontakthus etc

Bakre, 3D, 5D

1996


0646	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	31	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	31A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	32	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	32A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	33	91 23 548			1	Contact housing	Kontakthus	4
0130						2-pole, female	2-polig, hylsa	
0140						rear seat	baksäte	
0150	33A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	34	41 13 650			1	Connector housing	Kontakthus	8
0180						4-pole, male	4-polig, stift	
0190						pressure sensor	tryckgivare	
0200	34A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0210	34B	41 13 759			1	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	8-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

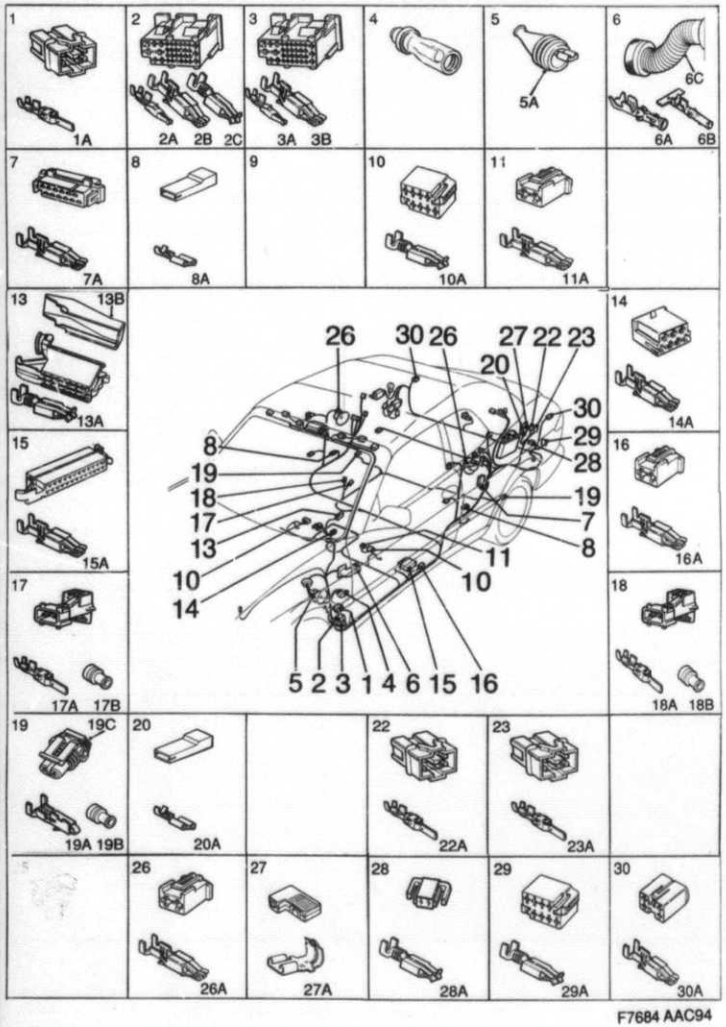

F7684 AAC94

Contact housing etc

3-F04

Rear, CV

1996

Kontakthus etc

Bakre, CV

1996


0648	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0180								
0190	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0200						1-pole, female	1-polig, hylsa	
0210						side indicator lamp	sidoblinklykta	
0220								
0230	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0240						1-pole, female	1-polig, hylsa	
0250						theft alarm	stöldlarm	
0260	5A	42 03 683			1	Protection	Skydd	4
0270								
0280	6	42 03 253			1	Connector housing	Kontakthus	4
0290						26-pole, female	26-polig, hylsa	
0300						front door	framdörr	
0310	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0320	6B	44 09 728		AREA 1,0-2,5 MM2	16	Cable terminal	Kabelsko	5
0330	6C	42 22 352			1	Protection	Skydd	4
0340								
0350	7	95 25 031			1	Contact housing	Kontakthus	5
0360						12-pole, female	12-polig, hylsa	
0370						central lock	centrallås	
0380	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0390								
0400	8	85 16 916			1	Insulation	Isolering	4
0410						1-pole, female	1-polig, hylsa	
0420						switch	strömställare	
0430	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	10	91 24 090			1	Contact housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						front seat	framstol	
0480	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

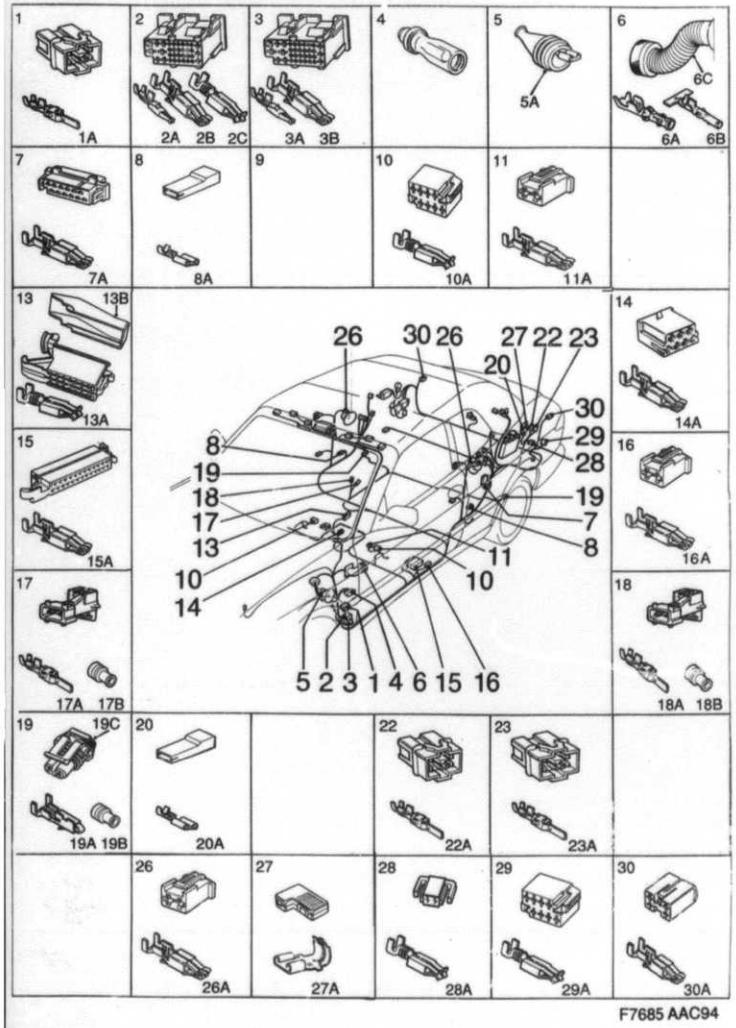

F7685 AAC94

Contact housing etc

3-F06

Rear, CV

1996

Kontakthus etc

Bakre, CV

1996

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	13	40 60 893			1	Contact housing	Kontakthus	5
0070						19-pole, female	19-polig, hylsa	
0080						window lift	fönsterhiss	
0090	13A	91 20 957		AREA 1,0-2,5 MM2	15	Cable terminal	Kabelsko	8
0100	13A	91 20 791		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110	13B	40 67 617			1	Cover	Kåpa	4
0120								
0130	14	91 23 381			1	Contact housing	Kontakthus	4
0140						7-pole, female	7-polig, hylsa	
0150						interior illum.	innerbelysning	
0160	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	15	42 01 323			1	Connector housing	Kontakthus	4
0190						25-pole, female	25-polig, hylsa	
0200						theft alarm	stöldlarm	
0210	15A	91 20 957		AREA 1,0-2,5 MM2	25	Cable terminal	Kabelsko	8
0220								
0230	16	91 23 548			1	Contact housing	Kontakthus	4
0240						2-pole, female	2-polig, hylsa	
0250						connection	skarv	
0260	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	17	41 13 254			1	Connector housing	Kontakthus	8
0290						2-pole, male	2-polig, stift	
0300						fuel pump	bränslepump	
0310	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0330								
0340	18	41 13 254			1	Connector housing	Kontakthus	8
0350						2-pole, male	2-polig, stift	
0360						fuel pump	bränslepump	
0370	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0390								
0400	19	42 03 428			1	Connector housing	Kontakthus	4
0410						2-pole, female	2-polig, hylsa	
0420						sensor, ABS	sensor, ABS	
0430	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0440	19B	44 19 305			1	Seal	Tätning	5
0450						red	röd	
0460	19B	44 19 313			1	Seal	Tätning	5
0470						blue	blå	
0480	19C	42 01 232			1	Locking	Låsning	4
0490								
0500	20	85 16 916			1	Insulation	Isolering	4
0510						1-pole, female	1-polig, hylsa	
0520						boot lighting	bagagerumsbelysning	
0530	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3-F08

Contact housing etc
Rear, CV
1996

Kontakthus etc
Bakre, CV
1996

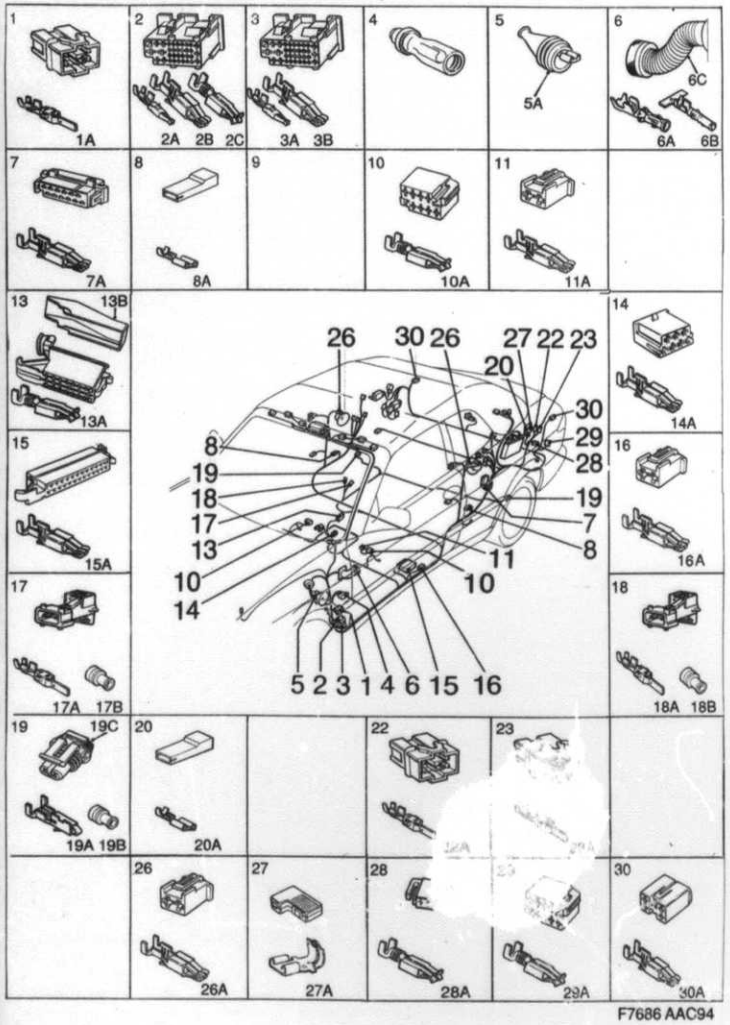

F7686 AAC94


0652	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

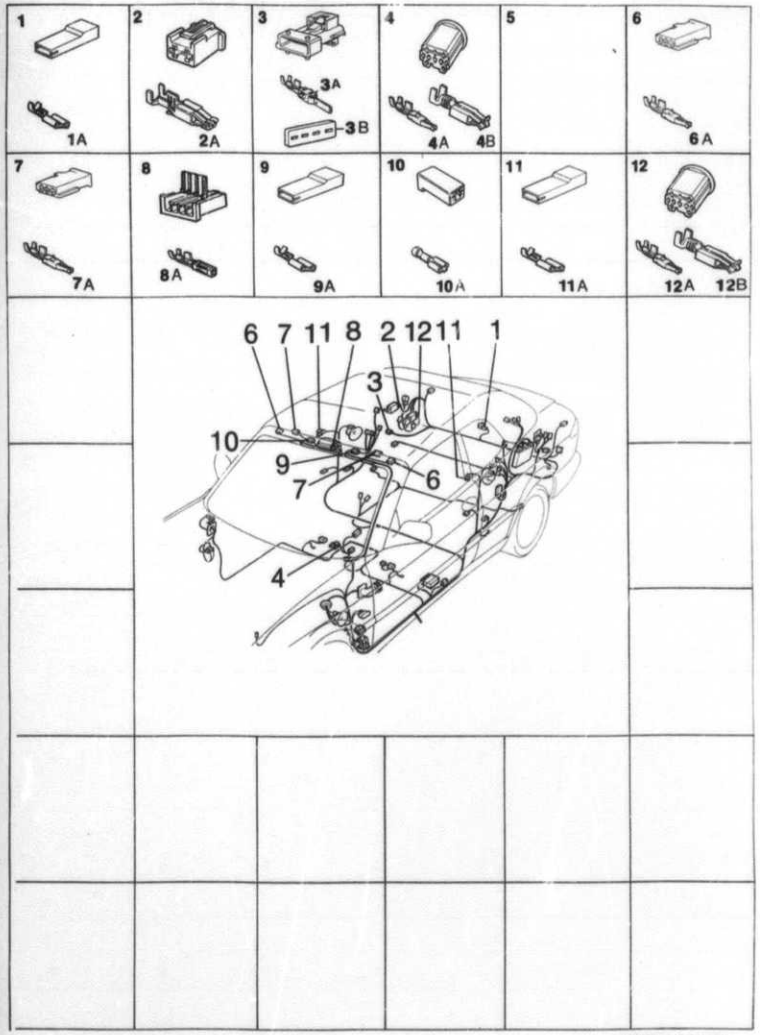

F7897 AAC94

3-F10

Contact housing etc
Rear, CV
1996

Kontakthus etc
Bakre, CV
1996


0654	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	1A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	2	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	3	41 13 650			1	Connector housing	Kontakthus	8
0130						4-pole, male	4-polig, stift	
0140						pressure sensor	tryckgivare	
0150	3A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0160	3B	41 13 759			1	Seal	Tätning	5
0170								
0180	4	44 11 518			1	Connector housing	Kontakthus	
0190						10-pole, female	10-polig, hylsa	
0200						connection	skarv	
0210	4A	44 66 801		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0220	4B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0230								
0240	6	41 13 007			1	Connector housing	Kontakthus	4
0250						3-pole, female	3-polig, hylsa	
0260						lock	lås	
0270	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	7	41 13 007			1	Connector housing	Kontakthus	4
0300						3-pole, female	3-polig, hylsa	
0310						vanity mirror	makeupspegel	
0320	7A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0330								
0340	8	45 37 411			1	Connector housing	Kontakthus	4
0350						4-pole, female	4-polig, hylsa	
0360						interior illum.	innerbelysning	
0370	8A	45 38 310		AREA 0,2-0,56 MM2	4	Cable terminal	Kabelsko	5
0380								
0390	9	85 16 916			1	Insulation	Isolering	4
0400						1-pole, female	1-polig, hylsa	
0410						interior illum.	innerbelysning	
0420	9A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0430								
0440	10	85 33 184			1	Contact housing	Kontakthus	4
0450						1-pole, female	1-polig, hylsa	
0460						interior illum.	innerbelysning	
0470	10A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0480								
0490	11	85 16 916			1	Insulation	Isolering	4
0500						1-pole, female	1-polig, hylsa	
0510						interior illum.	innerbelysning	
0520	11A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0530								
0540	12	44 11 518			1	Connector housing	Kontakthus	
0550						10-pole, female	10-polig, hylsa	
0560						tonneau cover	sufflettavtäckning	
0570	12A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0580	12B	91 20 957		AREA 1,0-2,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

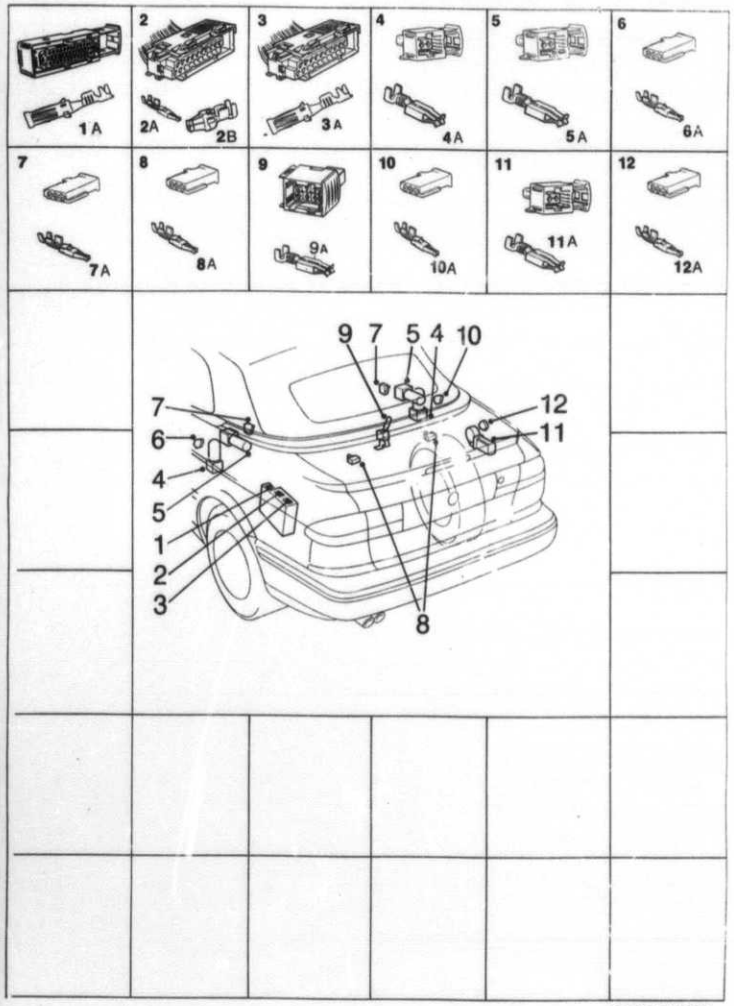

F7688 AAC94

3-F12

Contact housing etc
Rear, CV
1996

Kontakthus etc
Bakre, CV
1996


0656	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 89 092			1	Connector housing	Kontakthus	4
0020						20-pole, female	20-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040	1A	44 64 293		AREA 1,0-2,5 MM2	12	Cable terminal	Kabelsko	5
0050								
0060	2	41 15 002			1	Connector housing	Kontakthus	4
0070						42-pole, female	42-polig, hylsa	
0080						electronic unit	elektronikenhet	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0110								
0120	3	44 08 910			1	Connector housing	Kontakthus	4
0130						20-pole, female	20-polig, hylsa	
0140						electronic unit	elektronikenhet	
0150	3A	44 64 293		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	5
0160								
0170	4	41 13 205			1	Connector housing	Kontakthus	8
0180						2-pole, female	2-polig, hylsa	
0190						motor	motor	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0210								
0220	5	41 13 205			1	Connector housing	Kontakthus	8
0230						2-pole, female	2-polig, hylsa	
0240						motor	motor	
0250						bow 5	båge 5	
0260	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	6	41 13 007			1	Connector housing	Kontakthus	4
0290						3-pole, female	3-polig, hylsa	
0300						potentiometer	potentiometer	
0310						motor	motor	
0320	6A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0330								
0340	7	41 13 007			1	Connector housing	Kontakthus	4
0350						3-pole, female	3-polig, hylsa	
0360						microswitch	mikrobrytare	
0370						lock	lås	
0380						tonneau cover	suffettavtäckning	
0390	7A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0400								
0410	8	41 13 007			1	Connector housing	Kontakthus	4
0420						3-pole, female	3-polig, hylsa	
0430						microswitch	mikrobrytare	
0440						folding top	sufflett	
0450	8A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0460								
0470	9	41 13 809			1	Connector housing	Kontakthus	4
0480						6-pole, female	6-polig, hylsa	
0490						by-pass	by-pass	
0500						bow 5	båge 5	
0510	9A	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0520								
0530	10	41 13 007			1	Connector housing	Kontakthus	4
0540						3-pole, female	3-polig, hylsa	
0550						potentiometer	potentiometer	
0560						bow 5	båge 5	
0570	10A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0580								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

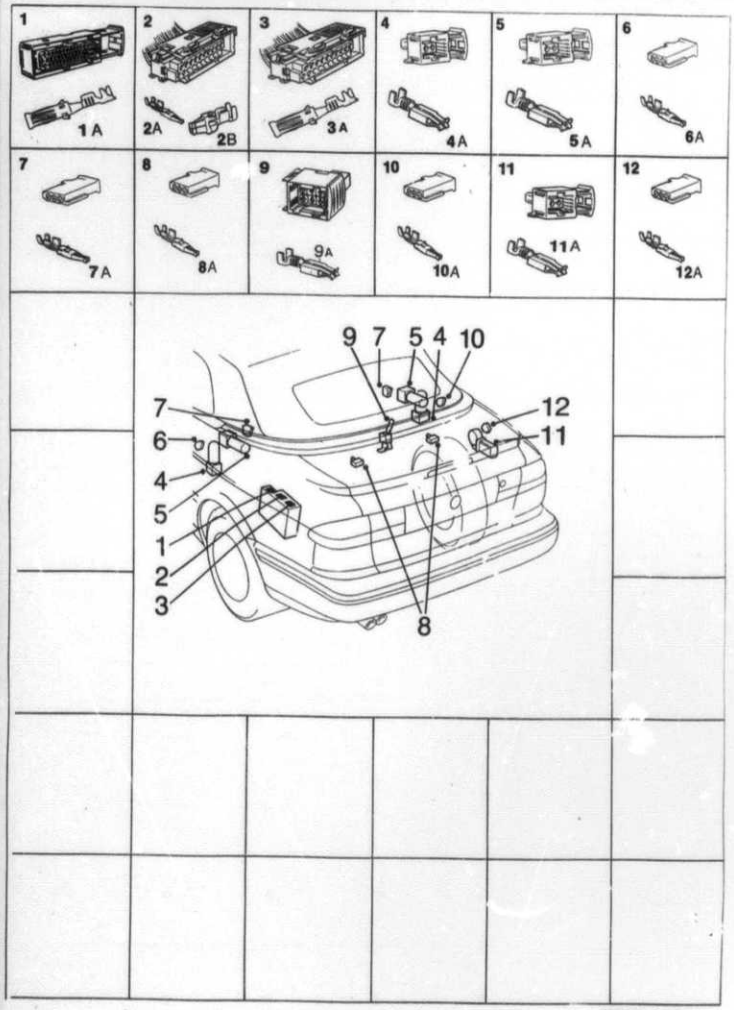

F7689 AAC94

3-F14

Contact housing etc
Rear, CV
1996

Kontakthus etc
Bakre, CV
1996


0658	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						motor	motor	
0040						tonneau cover	suflettavtäckning	
0050	11A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	12	41 13 007			1	Connector housing	Kontakthus	4
0080						3-pole, female	3-polig, hylsa	
0090						potentiometer	potentiometer	
0100						tonneau cover	suflettavtäckning	
0110	12A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

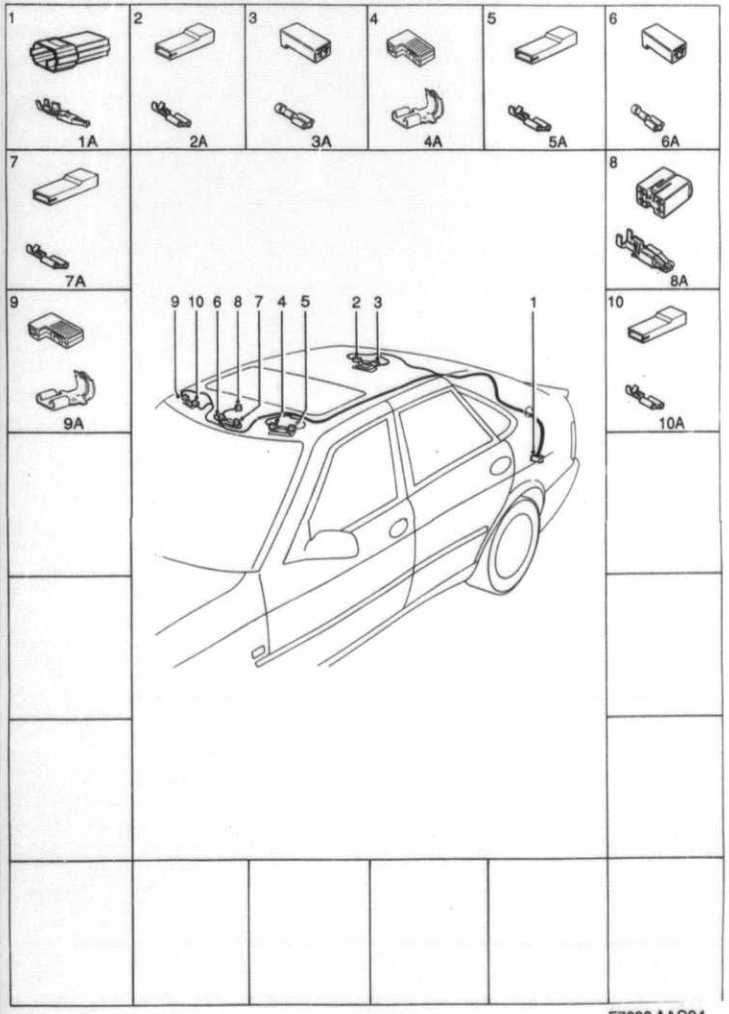

F7690 AAC94

Contact housing etc

3-F16

Roof

1996

Kontakthus etc

Tak

1996


0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	41 15 499		AREA 0,5-1,0 MM2	8	Cable terminal	Kabelsko	8
0050	1B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	2	85 16 916			1	Insulation	Isolering	4
0080						1-pole, female	1-polig, hylsa	
0090						interior illum.	innerbelysning	
0100	2A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0110								
0120	3	85 33 184			1	Contact housing	Kontakthus	4
0130						1-pole, female	1-polig, hylsa	
0140						interior illum.	innerbelysning	
0150	3A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0160								
0170	4	85 16 916			1	Insulation	Isolering	4
0180						1-pole, female	1-polig, hylsa	
0190						vanity mirror	makeupspegel	
0200	4A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0210								
0220	5	85 16 916			1	Insulation	Isolering	4
0230						1-pole, female	1-polig, hylsa	
0240						vanity mirror	makeupspegel	
0250	5A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0260								
0270	6	85 33 184			1	Contact housing	Kontakthus	4
0280						1-pole, female	1-polig, hylsa	
0290						interior illum.	innerbelysning	
0300	6A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0310								
0320	7	85 16 916			1	Insulation	Isolering	4
0330						1-pole, female	1-polig, hylsa	
0340						vanity mirror	makeupspegel	
0350	7A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						sun roof	soltak	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	9	44 89 076			1	Connector housing	Kontakthus	4
0430						1-pole, female	1-polig, hylsa	
0440						vanity mirror	makeupspegel	
0450	9A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0460								
0470	10	85 16 916			1	Insulation	Isolering	4
0480						1-polig, female	1-polig, hylsa	
0490						vanity mirror	makeupspegel	
0500	10A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

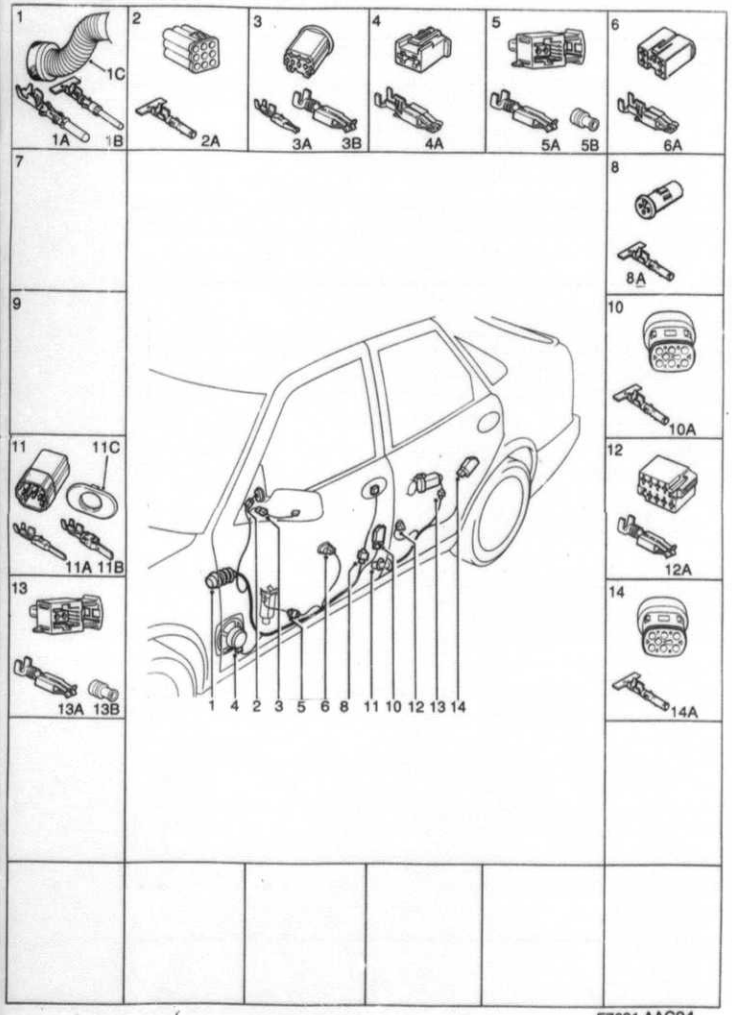

F7691 AAC94

Contart housing etc

3-F18

Doors
1996

Kontakthus etc

Dörrar
1996


0662	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 03 261			1	Connector housing	Kontakthus	4
0020						26-pole, male	26-polig, stift	
0030						connection	skarv	
0040	1A	44 64 228		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0050	1B	44 09 785		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	5
0060	1C	42 22 360			1	Protection	Skydd	4
0070								
0080	2	42 01 208			1	Connector housing	Kontakthus	4
0090						9-pole, female	9-polig, hylsa	
0100						switch	strömställare	
0110						rear view mirror	backspegel	
0120	2A	44 09 728		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	5
0130								
0140	3	44 11 518			1	Connector housing	Kontakthus	
0150						10-pole, female	10-polig, hylsa	
0160						rear view mirror	backspegel	
0170	3A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0180	3B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0190								
0200	4	91 23 548			1	Contact housing	Kontakthus	4
0210						2-pole, female	2-polig, hylsa	
0220						loudspeaker	högtalare	
0230	4A	91 20 957			2	Cable terminal	Kabelsko	8
0240								
0250	5	41 13 411			1	Connector housing	Kontakthus	4
0260						2-pole, female	2-polig, hylsa	
0270						window lift	fönsterhiss	
0280	5A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	5B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0300								
0310	6	91 23 555			1	Contact housing	Kontakthus	4
0320						4-pole, female	4-polig, hylsa	
0330						luggage compartment lock	bagagerumslås	
0340	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0350								
0360	8	42 24 903			1	Connector housing	Kontakthus	4
0370						3-pole, female	3-polig, hylsa	
0380						microswitch	mikrobrytare	
0390	8A	44 09 728		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

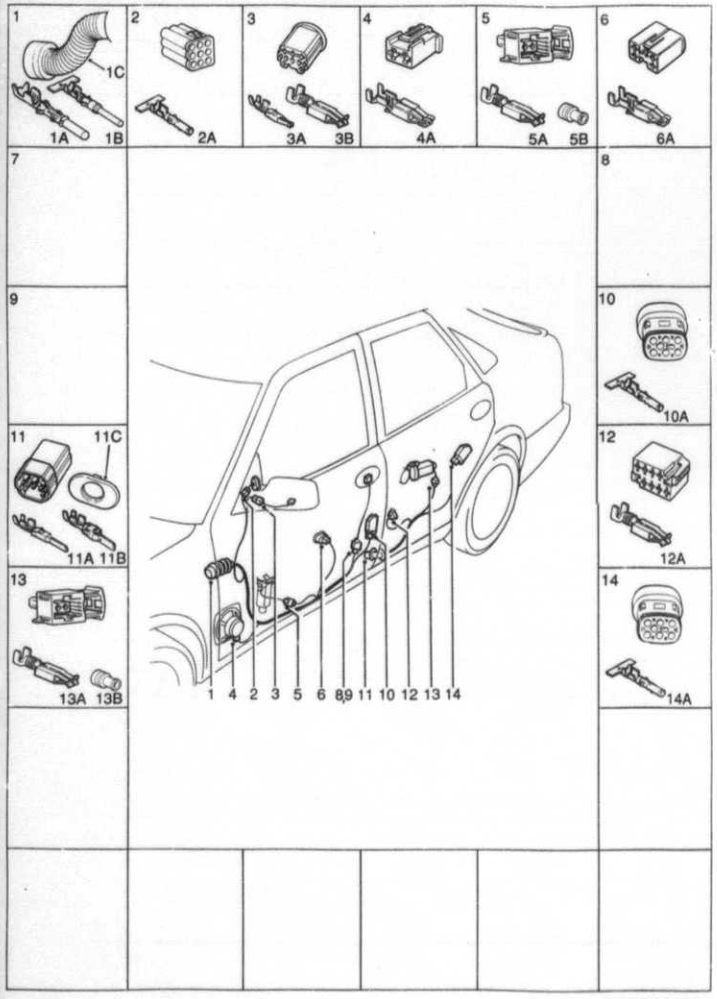

F7692 AAC94

Contact housing etc

3-F20

Doors

1996

Kontakthus etc

Dörrar

1996


0664	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	47 33 309			1	Connector housing	Kontakthus	
0011						6-pole, female	6-polig, hylsa	
0012						motor	motor	
0013						central lock	centrallås	
0014	10A	44 09 728		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	5
0015								
0019	11	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	11A	41 15 457		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	5
0050	11B	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11C	44 32 902			1	Protection	Skydd	4
0070								
0080	12	91 24 090			1	Contact housing	Kontakthus	4
0090						8-pole, female	8-polig, hylsa	
0100						switch	strömställare	
0110						window lift	fönsterhiss	
0120	12A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0130								
0140	13	41 13 411			1	Connector housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						window lift	fönsterhiss	
0170	13A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0180	13B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0190								
0200	14	42 01 190			1	Connector housing	Kontakthus	4
0210						6-pole, female	6-polig, hylsa	
0220						motor	motor	
0230						central lock	centrallås	
0240	14A	44 09 728		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

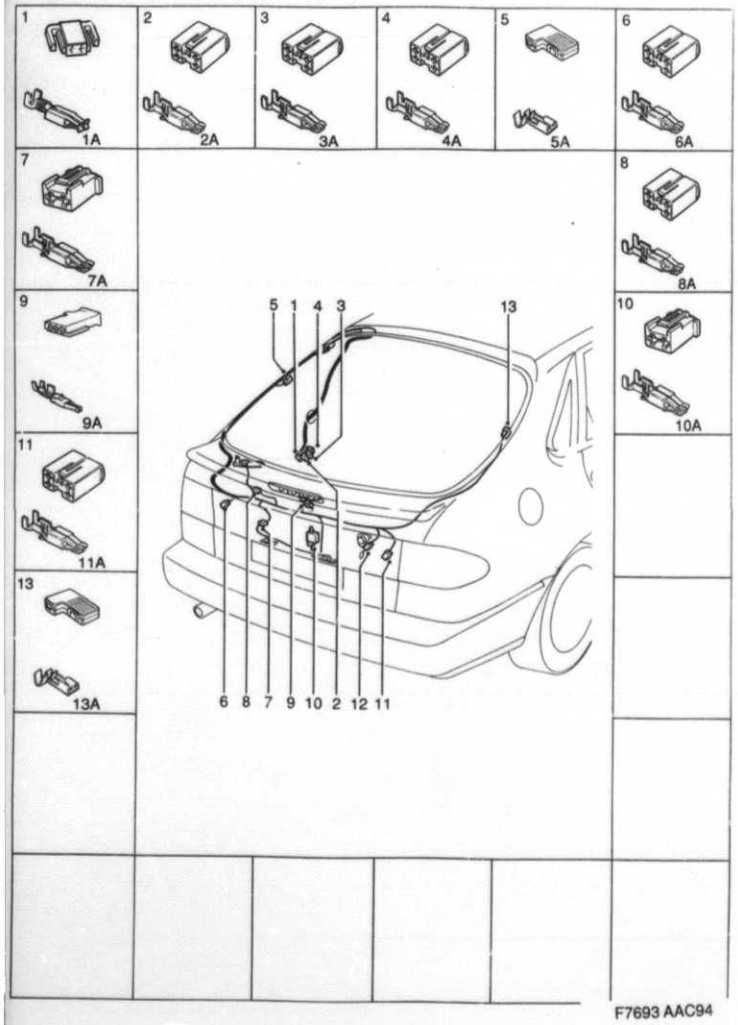

Contact housing etc

3 -F22

Boot lid, 3D, 5D

1996

Kontakthus etc

Baklucka, 3D, 5D

1996


0666	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	91 24 157			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						connection	skarv	
0040	1A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	91 23 555			1	Contact housing	Kontakthus	4
0070						4-pole, female	4-polig, hylsa	
0080						connection	skarv	
0090	2A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0110	3	40 61 503			1	Contact housing	Kontakthus	4
0120						4-pole, female	4-polig, hylsa	
0130						connection	skarv	
0140	3A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						connection	skarv	
0190	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0200								
0210	5	85 21 692			1	Contact housing	Kontakthus	4
0220						1-pole, female	1-polig, hylsa	
0230						rear window	bakruta	
0240	5A	85 22 526		AREA0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0250								
0260	6	91 23 555			1	Contact housing	Kontakthus	4
0270						4-pole, female	4-polig, hylsa	
0280						reverse lamp	backlampa	
0290						rear fog light	dimbaklykta	
0300	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						licence plate light	nummerskyltlykta	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						rear window wiper	bakrutetorkare	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0410								
0420	9	41 13 007			1	Connector housing	Kontakthus	4
0430						3-pole, female	3-polig, hylsa	
0440						high mounted stop light	hogt monterad stopplykta	
0450	9A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0460								
0470	10	91 23 548			1	Contact housing	Kontakthus	4
0480						luggage compartment lock	bagagerumslås	
0490	10A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0500								
0510	11	91 23 555			1	Contact housing	Kontakthus	4
0520						4-pole, female	4-polig, hylsa	
0530						reverse lamp	backlampa	
0540	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

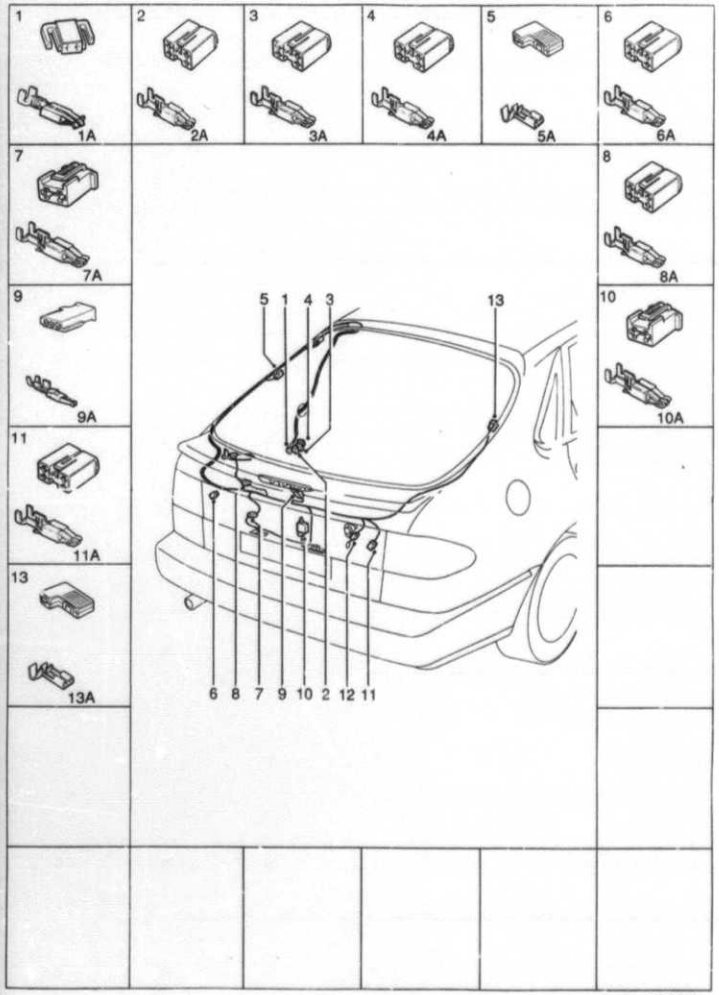

F7694 AAC94

Contact housing etc

Kontakthus etc

3-F24

Boot lid, 3D, 5D
1996

Baklucka, 3D, 5D
1996


0668	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	85 21 692			1	Contact housing	Kontakthus	4
0020						1-pole, female	1-polig, hylsa	
0030						rear window	bakruta	
0040	13A	85 22 526		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, connector housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

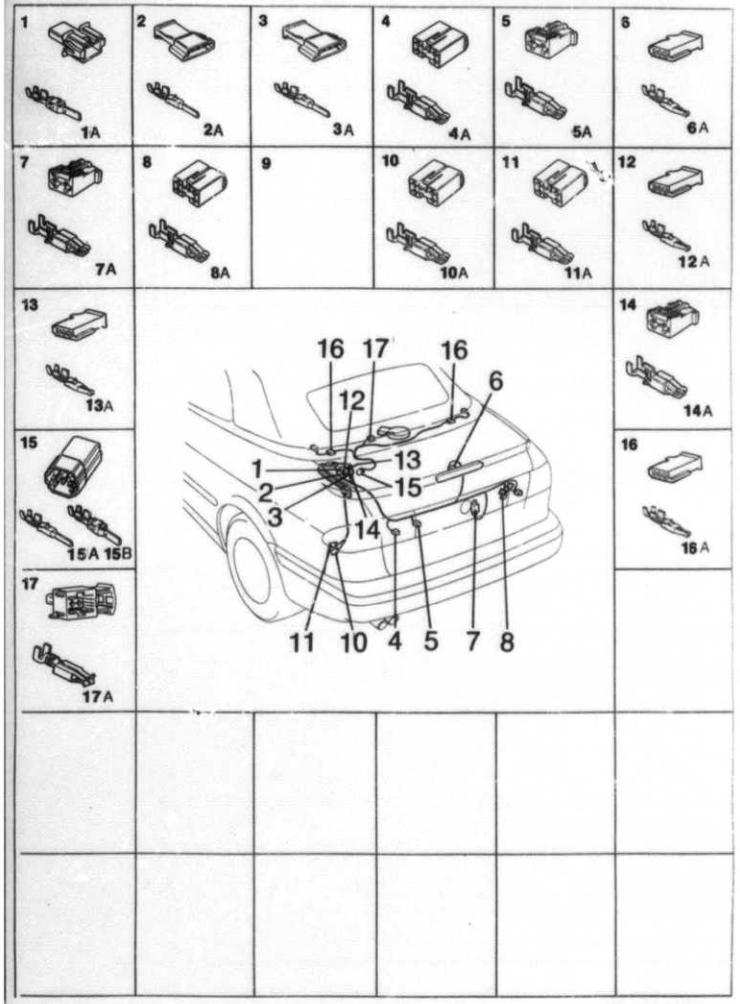

F7695 AAC94

3-G02

Contact housing etc
Boot lid, CV
1996

Kontakthus etc
Baklucka, CV
1996


0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 164			1	Connector housing	Kontakthus	4
0020						2-pole, male	2-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	41 13 056			1	Connector housing	Kontakthus	4
0070						3-pole, male	3-polig, stift	
0080						connection	skarv	
0090	2A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0100								
0110	3	41 13 056			1	Connector housing	Kontakthus	4
0120						3-pole, male	3-polig, stift	
0130						connection	skarv	
0140	3A	41 15 457		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						reverse lamp	backlampa	
0190						rear fog light	dimbaklykta	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0210								
0220	5	91 20 957			1	Cable terminal	Kabelsko	8
0230						2-pole, female	2-polig, hylsa	
0240						licence plate light	nummerskyltlykta	
0250	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0260								
0270	6	41 13 007			1	Connector housing	Kontakthus	4
0280						3-pole, female	3-polig, hylsa	
0290						high mounted stop light	högt monterad stopplykta	
0300	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						luggage compartment lock	bagagerumslås	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						reverse lamp	backlampa	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	10	91 23 555			1	Contact housing	Kontakthus	4
0430						4-pole, female	4-polig, hylsa	
0440						connection	skarv	
0450	10A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0460								
0470	11	40 61 503			1	Contact housing	Kontakthus	4
0480						4-pole, female	4-polig, hylsa	
0490						connection	skarv	
0500	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	12	41 13 007			1	Connector housing	Kontakthus	4
0530						3-pole, female	3-polig, hylsa	
0540						connection	skarv	
0550	12A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

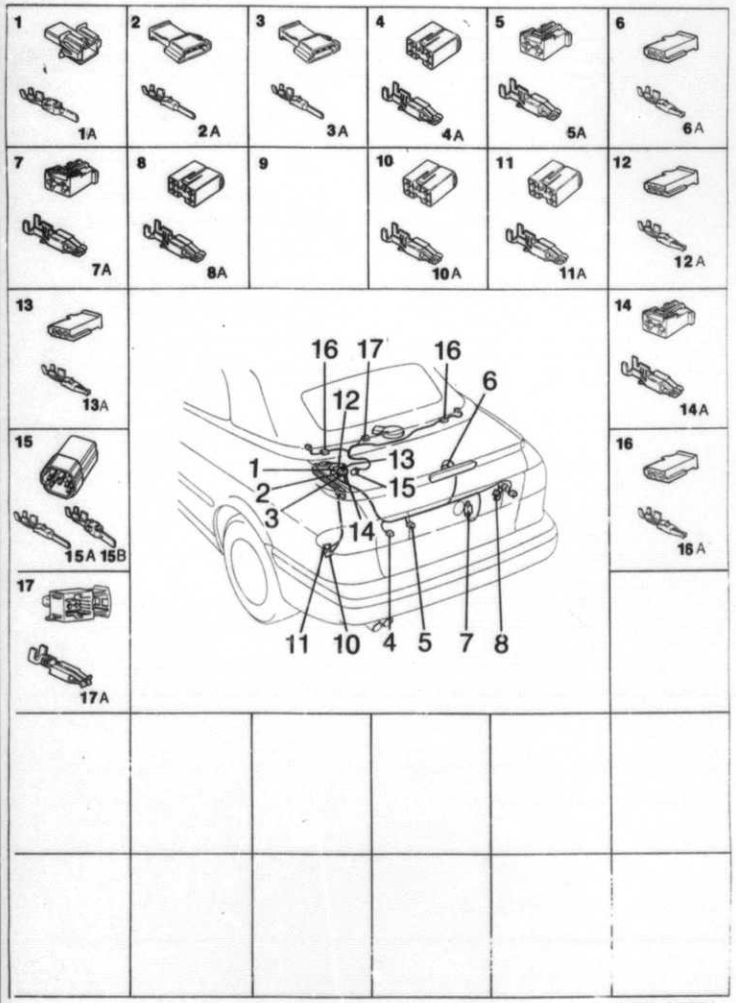

F7696 AAC94

Contact housing etc

3-G04

Boot lid, CV

1996

Kontakthus etc

Baklucka, CV

1996


0672	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	41 13 007			1	Connector housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						connection	skarv	
0040	13A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	14	91 23 548			1	Contact housing	Kontakthus	4
0070						2-pole, female	2-polig, hylsa	
0080						connection	skarv	
0090	14A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	15	44 10 510			1	Connector housing	Kontakthus	4
0120						10-pole, male	10-polig, stift	
0130						connection	skarv	
0140	15A	41 15 457		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	5
0150	15B	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	16	41 13 007			1	Connector housing	Kontakthus	4
0180						3-pole, female	3-polig, hylsa	
0190						switch	brytare	
0200						bow latch	bågregel	
0210	16A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0220								
0230	17	41 13 403			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						motor	motor	
0260						bow latch	bågregel	
0270	17A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-FC2
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

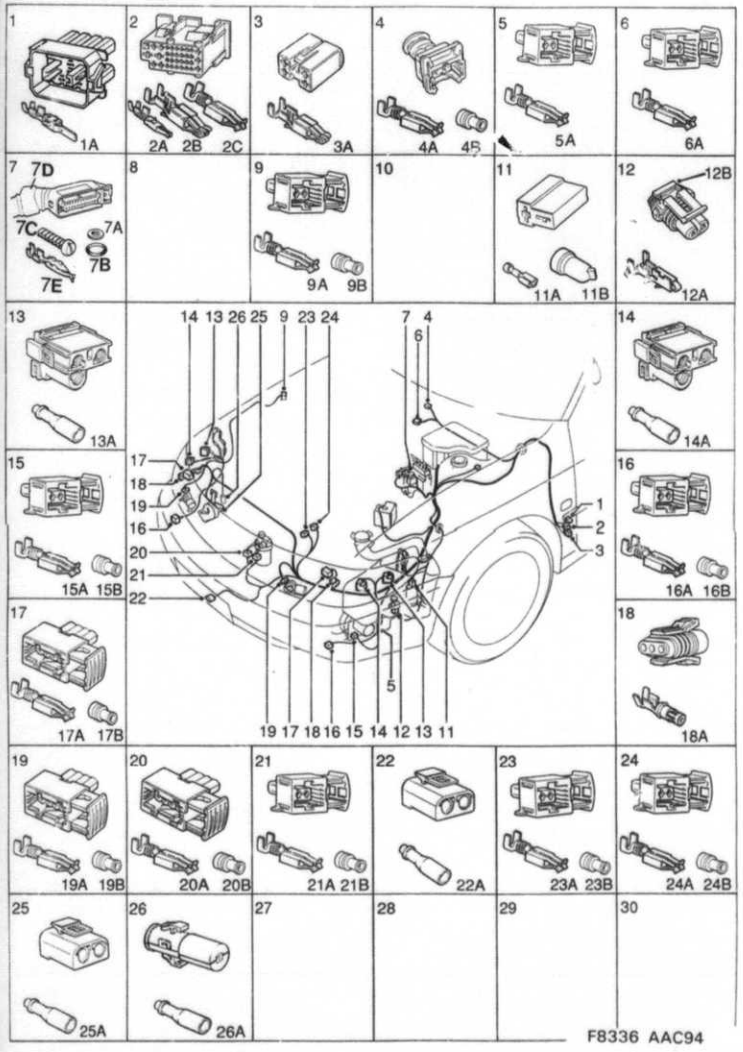

Contact housing etc

3-G06

Front

1997-

Kontakthus etc

Främre

1997-

0680	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 461			1	Connector housing	Skarvhus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	1	Cable terminal	Kabelsko	8
0120								
0130	3	91 23 555			1	Contact housing	Kontakthus	4
0140						4-pole, female	4-polig, hylsa	
0150						connection	skarv	
0160	3A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	4	41 78 414			1	Connector housing	Kontakthus	8
0190						2-pole, female	2-polig, hylsa	
0200						SAI	SAI	
0210	4A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220	4B	40 61 966		Ø 1,2-2,0 MM	1	Seal	Tätning	5
0230	4B	40 61 974		Ø 2,1-2,9 MM	1	Seal	Tätning	5
0240								
0250	5	41 13 205			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						vacuum pump	vakuumpump	
0280	5A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0290								
0300	6	41 13 205			1	Connector housing	Kontakthus	8
0310						2-pole, female	2-polig, hylsa	
0320						switch	brytare	
0330						vacuum pump	vakuumpump	
0340	6A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	7	45 87 952			1	Connector housing	Kontakthus	8
0370						26-pole, female	26-polig, hylsa	
0380						module, ABS	modul, ABS	
0390		47 34 406		1)	1	.Connector housing	.Kontakthus	5
0400		47 34 414		1)	1	.Cover	.Kåpa	4
0410	7A	43 54 353		AREA 0,5-1,0 MM2	15	Cable terminal	Kabelsko	8
0420	7A	46 69 669		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0430	7A	43 54 171		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0440								
0450	9	42 01 315			1	Connector housing	Kontakthus	4
0460						2-pole, female	2-polig, hylsa	
0470						sensor, ABS	sensor, ABS	
0480	9A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0490	9B	42 24 531			1	Protection	Skydd	4
0500								
0510	11	42 01 315			1	Connector housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530						washer pump	spolarpump	
0540	11A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0550	11B	42 24 531			1	Protection	Skydd	4
0560								
0570	12	42 01 224			1	Connector housing	Kontakthus	5
0580						2-pole, female	2-polig, hylsa	
0590						level guard	nivåvakt	
0600	12A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0610	12B	42 01 232			1	Locking	Låsning	4
0620								


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

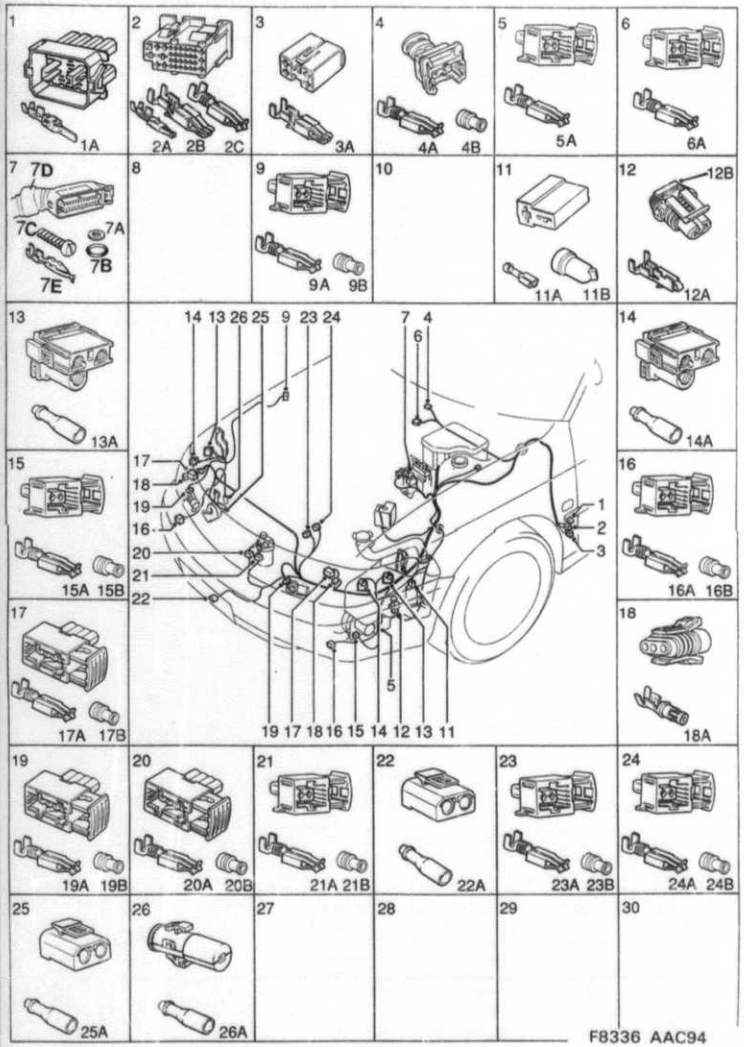

3 -G08

Contact housing etc
Front
1997-

Kontakthus etc
Främre
1997-


	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0680								
0630	13	95 19 679			1	Contact housing	Kontakthus	4
0640						3-pole, female	3-polig, hylsa	
0650						reverse lamp	backlampa	
0660	13A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

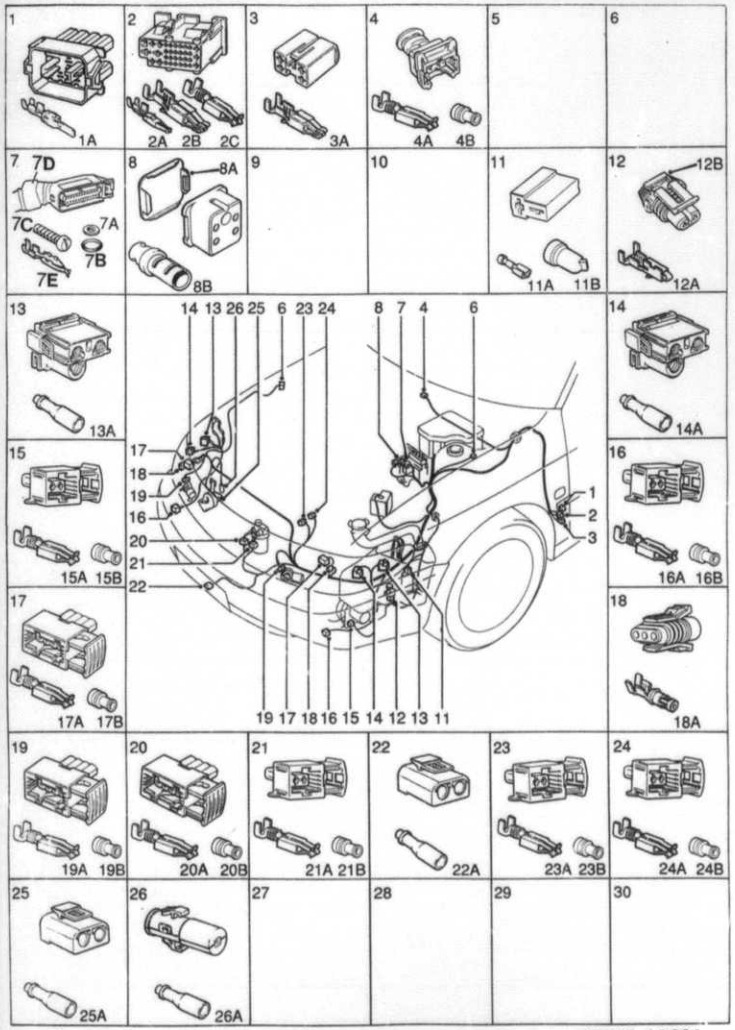

F8337 AAC94

3-G10

Contact housing etc
Front
1997-

Kontakthus etc
Främre
1997-


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
14	95 19 679			1	Contact housing 3-pole, female direction indicator	Kontakthus 3-polig, hylsa blinkers	4
14A	85 47 804		AREA 2,5-4,0 MM2	3	Connector	Skarvstycke	5
15	41 13 403			1	Connector housing 2-pole, female air pump	Kontakthus 2-polig, hylsa luftpump	8
15A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
15B	43 54 387		Ø 3,4-3,7 MM	2	Seal	Tätning	5
16	41 13 205			1	Connector housing 2-pole, female front fog light	Kontakthus 2-polig, hylsa dimstrålkastare	8
16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
16B	40 61 966		Ø 5,6MM	2	Seal	Tätning	5
17	41 13 601			1	Connector housing 4-pole, female headlamp	Kontakthus 4-polig, hylsa strålkastare	8
17A	40 61 586		AREA1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
17B	40 61 966		AREA 1,2-2,0 MM2	1	Seal	Tätning	5
17B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
18	44 11 260			1	Connector housing 3-pole, female headlamp levelling	Kontakthus 3-polig, hylsa ljuslängdsreglering	4
18A	44 11 278		AREA 0,75-1,0 MM2	3	Cable terminal	Kabelsko	5
19	41 13 601			1	Connector housing 4-pole, female headlamp wiper	Kontakthus 4-polig, hylsa strålkastartorkare	8
19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
19B	40 61 966		AREA 1,2-2,0 MM2	3	Seal	Tätning	5
20	41 13 601			1	Connector housing 4-pole, female pressure monitor	Kontakthus 4-polig, hylsa tryckvakt	8
20A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
20B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
21	41 13 205			1	Connector housing 2-pole, female pressure monitor	Kontakthus 2-polig, hylsa tryckvakt	8
21A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
21B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
22	95 03 319			1	Contact housing 2-pole, female outer temp	Kontakthus 2-polig, hylsa yttertemp	4
22A	85 47 804		AREA 2,5-4,0 MM2	2	Connector	Skarvstycke	5
23	41 13 403			1	Connector housing 2-pole, female cooling fan, 2-step	Kontakthus 2-polig, hylsa kylfläkt, 2-steg	8
23A	43 54 171		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	8
23B	43 54 387		Ø 3,4-3,7 MM	1	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

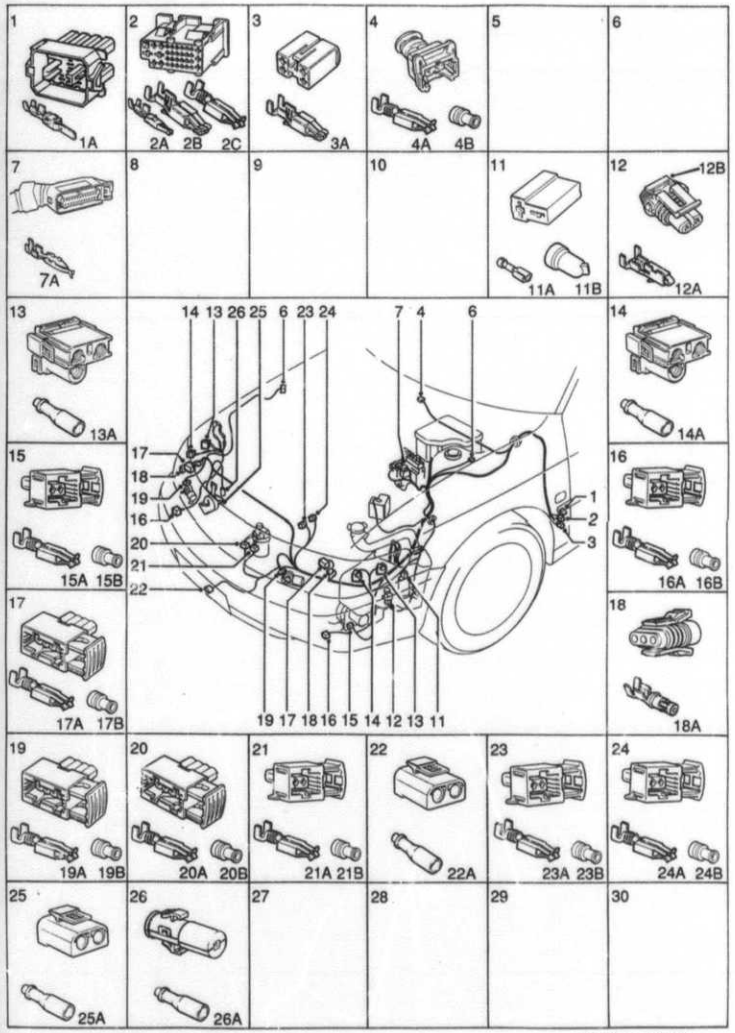

F8338 AAC94

Contact housing etc

3-G12

Front

1997-

Kontakthus etc

Främre

1997-


0684	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	24	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						cooling fan	kylfläkt	
0040	24A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050	24B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0060								
0070	25	41 13 205			1	Connector housing	Kontakthus	8
0080						2-pole, female	2-polig, hylsa	
0090						horn	signalhorn	
0100	25A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	26	95 03 418			1	Connector housing	Skarvhus	4
0130						1-pole, female	1-polig, hylsa	
0140						compressor	kompressor	
0150	26A	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

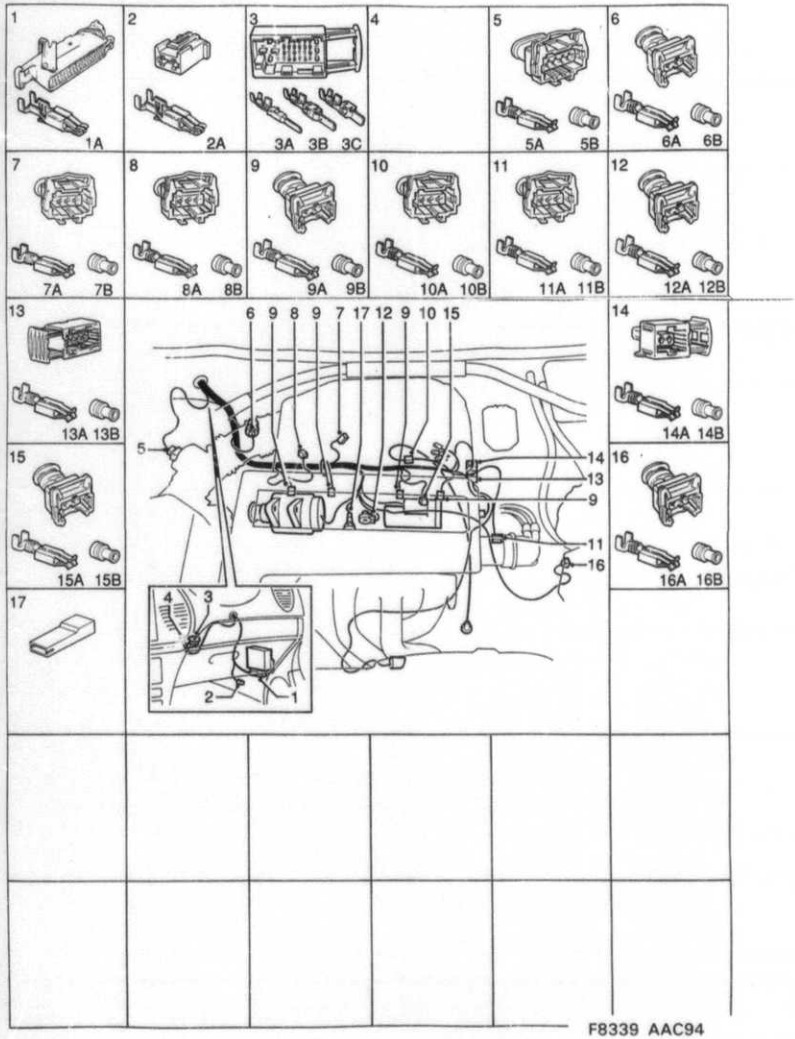

Contact housing etc

3-G14

Engine, B204I, B234I

1997-

Kontakthus etc

Motor, B204I, B234I

1997-


0686	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	44	Cable terminal	Kabelsko	8
0060								
0070	1	42 22 451		US, CA	1	Contact housing	Kontakthus	8
0080						88-pole, female	88-polig, hylsa	
0090						electronic unit	elektronikenhet	
0100						Motronic	Motronic	
0110	1A	40 63 970		AREA 0,5-1,0 MM2	37	Cable terminal	Kabelsko	8
0120	1A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0130								
0140	2	91 23 548			1	Contact housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						connection	skarv	
0170						coding	kodifiering	
0180	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	3	41 73 852			1	Contact housing	Kontakthus	4
0210						33-pole, male	33-polig, stift	
0220						connection	skarv	
0230	3A	41 15 457		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	5
0240	3B	41 15 077		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0250	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0260								
0270	5	46 68 604			1	Contact housing	Kontakthus	8
0280						4-pole, female	4-polig, hylsa	
0290						mass air flow sensor	luftmassamätare	
0300	5A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0310	5B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0320								
0330	6	44 33 439			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						EVAP CP valve	urluftningsventil	
0360	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0370	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380	6C	44 33 454			1	Cover	Kåpa	8
0390								
0400	7	44 32 316			1	Connector housing	Kontakthus	8
0410						3-pole, female	3-polig, hylsa	
0420						throttle position sensor	lägesgivare	
0430	7A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0440	7B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0450								
0460	8	44 32 324			1	Connector housing	Kontakthus	8
0470						3-pole, female	3-polig, hylsa	
0480						idle speed control	tomgångsreglering	
0490	8A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	8B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0510								
0520	9	41 78 414			1	Connector housing	Kontakthus	8
0530						2-pole, female	2-polig, hylsa	
0540						injection valves	insprutningsventiler	
0550	9A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0560	9B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0570								
0580	10	44 32 316			1	Connector housing	Kontakthus	8
0590						3-pole, female	3-polig, hylsa	
0600						crank shaft sensor	vevaxelgivare	
0610	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0620	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

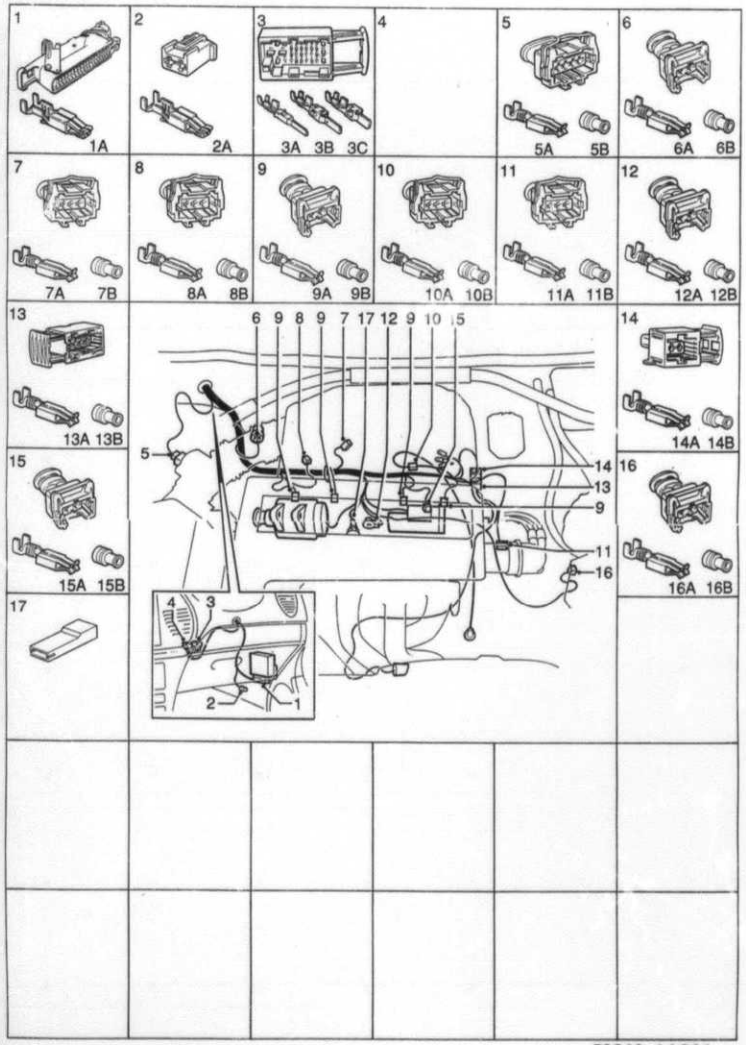

F8340 AAC94

Contact housing etc

3-G16

Engine, B204I, B234I

1997-

Kontakthus etc

Motor, B204I, B234I

1997-


0688	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	44 32 316			1	Connector housing	Kontakthus	8
0020						3-pole, female	3-polig, hylsa	
0030						sensor	givare	
0040						camshaft	kamaxel	
0050	11A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0070								
0080	12	41 78 414			1	Connector housing	Kontakthus	8
0090						2-pole, female	2-polig, hylsa	
0100						knock-sensor	knacksensor	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0130								
0140	13	41 13 601			1	Connector housing	Kontakthus	8
0150						4-pole, female	4-polig, hylsa	
0160						lambda sonde	lambdasond	
0170	13A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0180	13B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0190								
0200	14	41 13 205			1	Connector housing	Kontakthus	8
0210						2-pole, female	2-polig, hylsa	
0220						temperature sensor	temperarturgivare	
0230						coolant	kylvätska	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0260								
0270	15	41 78 414			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						temperature sensor	temperarturgivare	
0300						coolant	kylvätska	
0310	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0330								
0340	16	41 78 414			1	Connector housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						ignition coil	tändspole	
0370	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

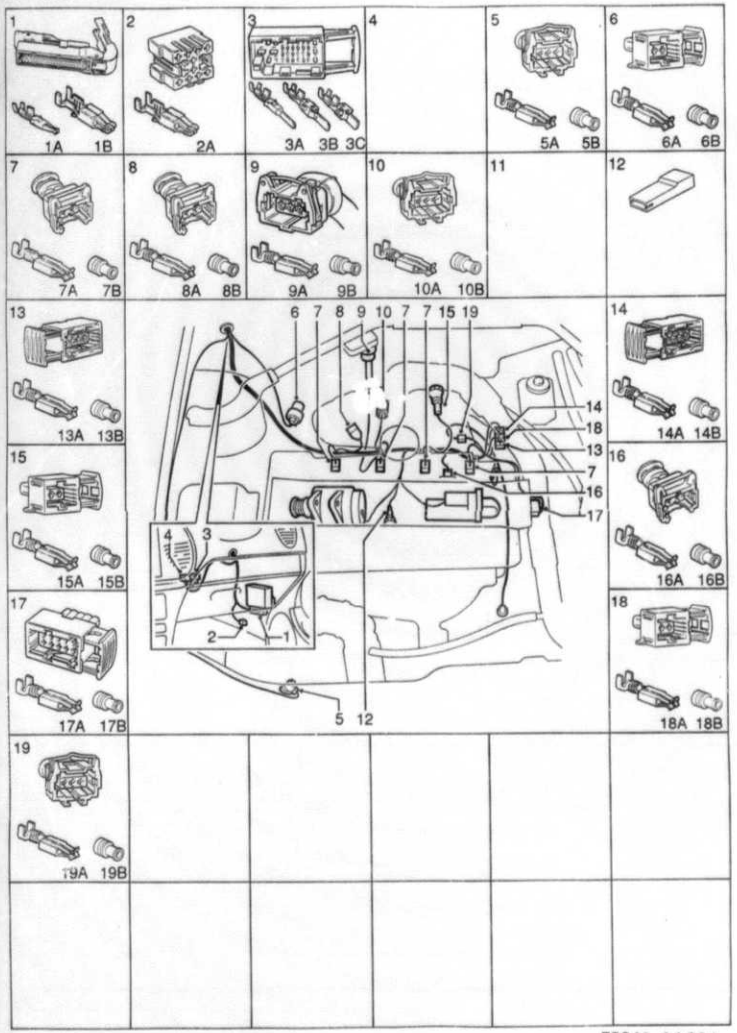

F8341 AAC94

3-G18

Contact housing etc
Engine, B204 L
1997-

Kontakthus etc
Motor, B204 L
1997-


0690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 616			1	Connector housing	Kontakthus	8
0020						70-pole, female	70-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Trionic	Trionic	
0050	1A	41 15 499		AREA 0,5-1,0 MM2	46	Cable terminal	Kabelsko	8
0060	1B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0070								
0080	2	91 23 399			1	Connector housing	Skarvhus	4
0090						10-pole, female	10-polig, hylsa	
0100						test connection	testuttag	
0110	2A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	3A	41 15 457		AREA 0,5-1,0 MM2	19	Cable terminal	Kabelsko	5
0170	3B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	5	44 32 316			1	Connector housing	Kontakthus	8
0210						3-pole, female	3-polig, hylsa	
0220						solenoid valve	magnetventil	
0230						APC	APC	
0240	5A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	5B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	6	41 13 205			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						EVAP CP valve	urluftningsventil	
0300	6A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0310	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0320								
0330	7	41 78 414			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						injection valves	insprutningsventiler	
0360	7A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0370	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0380								
0390	8	41 78 414			1	Connector housing	Kontakthus	8
0400						2-pole, female	2-polig, hylsa	
0410						idle speed control	tomgångsreglering	
0420	8A	40 61 586		AREA 1,0-2,9 MM2	2	Cable terminal	Kabelsko	8
0430	8B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	9	44 32 316			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						pressure sensor	tryckgivare	
0480						intake manifold	inloppsrör	
0490	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0500	9B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0510								
0520	10	46 69 743			1	Connector housing	Kontakthus	8
0530						3-pole, female	3-polig, hylsa	
0540						throttle position sensor	spjällägesgivare	
0550	10A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0560	10B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

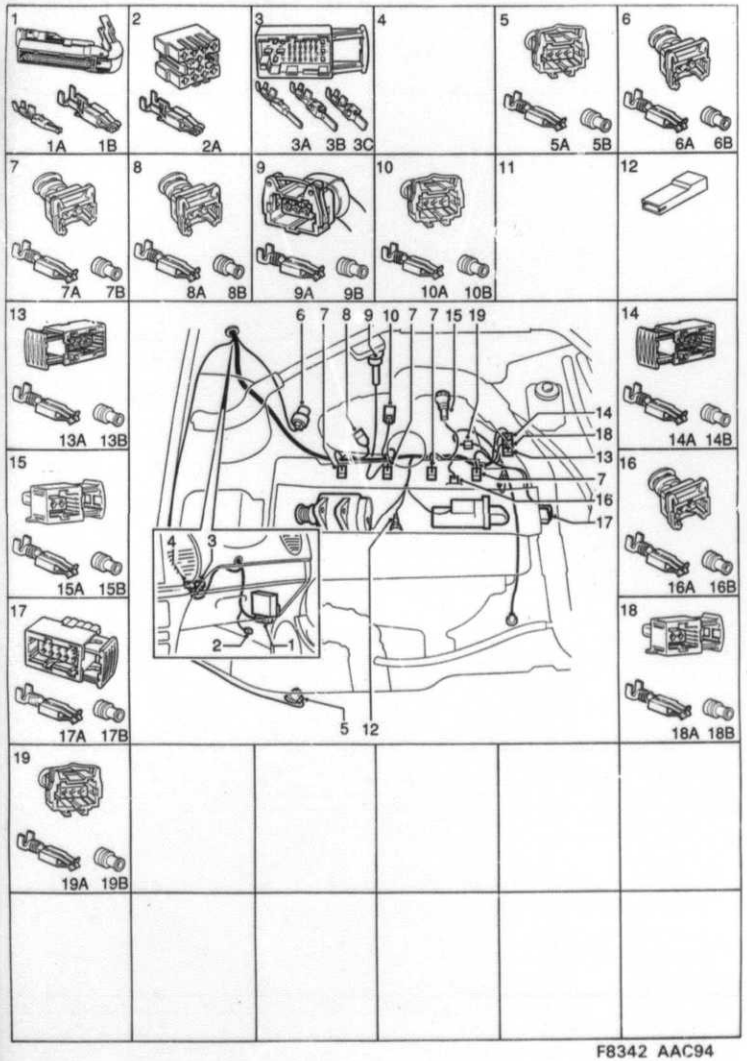

F8342 AAC94

Contact housing etc

3-G20

Engine, B204 L

1997-

Kontakthus etc

Motor, B204 L

1997-


0692	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	12	44 09 801			1	Cable terminal	Kabelsko	5
0020						1-pole, female	1-polig, hylsa	
0030						EOP sensor	oljetrycksgivare	
0040								
0050	13	41 13 601			1	Connector housing	Kontakthus	8
0060						4-pole, female	4-polig, hylsa	
0070						lambda sonde	lambdasond	
0080						engine	motor	
0090	13A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100	13B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0110								
0120	14	41 13 601			1	Connector housing	Kontakthus	8
0130						4-pole, female	4-polig, hylsa	
0140						lambda sonde	lambdasond	
0150						TW catalytic converter	katalysator	
0160	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170	14B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0180								
0190	15	41 13 205			1	Connector housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						temperature sensor	temperarturgivare	
0220	15A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0230	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0240								
0250	16	41 78 414			1	Connector housing	Kontakthus	8
0260						2-pole, female	2-polig, hylsa	
0270						temperature sensor	temperarturgivare	
0280						coolant	kylvätska	
0290	16A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0300	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0310								
0320	17	41 14 005			1	Connector housing	Kontakthus	8
0330						10-pole, female	10-polig, hylsa	
0340						ignition discharge module	tändkasset	
0350	17A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0360	17B	40 61 974		AREA 2,1-2,9 MM2	9	Seal	Tätning	5
0370								
0380	18	41 13 205			1	Connector housing	Kontakthus	8
0390						2-pole, female	2-polig, hylsa	
0400						temperature sensor	temperarturgivare	
0410						coolant	kylvätska	
0420	18A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	18B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0440								
0450	19	44 32 324			1	Connector housing	Kontakthus	8
0460						3-pole, female	3-polig, hylsa	
0470						crank shaft sensor	vevaxelgivare	
0480	19A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490	19B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

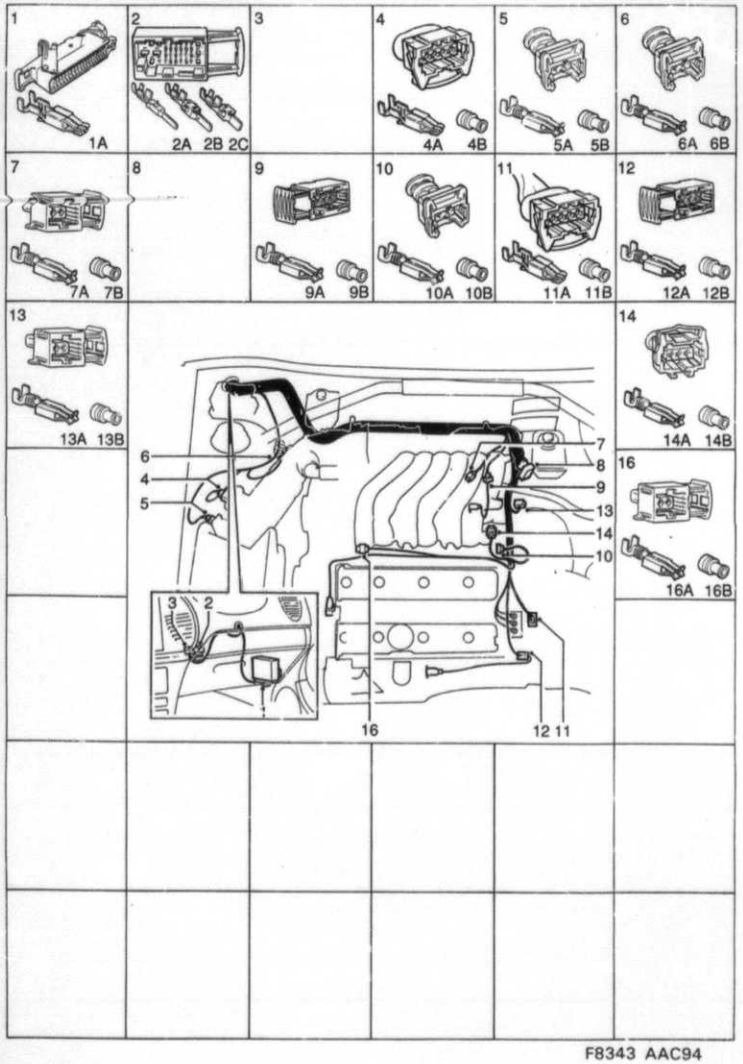


0694	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	4[illegible]22 311			1	Connector housing	Kontakthus	4
0020						55-pole, female	55-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040						Motronic	Motronic	
0050	1A	91 20 957		AREA 1,0-2,5 MM2	46	Cable terminal	Kabelsko	8
0060								
0070	1	42 22 451		US, CA	1	Contact housing	Kontakthus	8
0080						88-pole, female	88-polig, hylsa	
0090						electronic unit	elektronikenhet	
0100						Motronic	Motronic	
0110		42 23 541			1	,Contact housing	,Kontakthus	5
0120		42 23 558			1	,Cover	,Kåpa	4
0130		42 23 566			1	,Seal	,Tätning	5
0140		85 87 461			1	,Seal	,Tätning	5
0150		42 23 574			1	,Screw	,Skruv	5
0160		42 23 582			1	,Cable attachment	,Ledningsfäste	5
0170		42 23 590			1	,Tensioning band	,Spännband	4
0180	1A	40 63 970		AREA 0,5-1,0 MM2	37	Cable terminal	Kabelsko	8
0190	1A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0200								
0210	2	41 73 852			1	Contact housing	Kontakthus	4
0220						33-pole, male	33-polig, stift	
0230						connection	skarv	
0240	2A	41 15 457		AREA 0,5-1,0 MM2	17	Cable terminal	Kabelsko	5
0250	2B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0260	2C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0270								
0280	4	46 68 604			1	Contact housing	Kontakthus	8
0290						4-pole, female	4-polig, hylsa	
0300						mass air flow sensor	luftmassamätare	
0310	4A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0320	4B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0330								
0340	5	46 68 588			1	Contact housing	Kontakthus	8
0350						2-pole, female	2-polig, hylsa	
0360						temperature sensor	temperarturgivare	
0370	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	5B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	6	44 33 439			1	Connector housing	Kontakthus	8
0410						2-pole, female	2-polig, hylsa	
0420						EVAP CP valve	urluftningsventil	
0430	6A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0440	6B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0450	6C	44 33 454			1	Cover	Kåpa	8
0460								
0470	7	41 13 205			1	Connector housing	Kontakthus	8
0480						2-pole, female	2-polig, hylsa	
0490						knock-sensor	knacksensor	
0500						rear	bakre	
0510	7A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0520	7B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0530								
0540	9	41 13 601				Connector housing	Kontakthus	8
0550						4-pole, female	4-polig, hylsa	
0560						pre-heating	förvärmning	
0570						lambda sonde	lambdasond	
0580	9A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0590	9B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0600								
0610	10	46 68 596			1	Contact housing	Kontakthus	8
0620						2-pole, female	2-polig, hylsa	
0630						temperature sensor	temperarturgivare	
0640						coolant	kylvätska	
0650	10A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

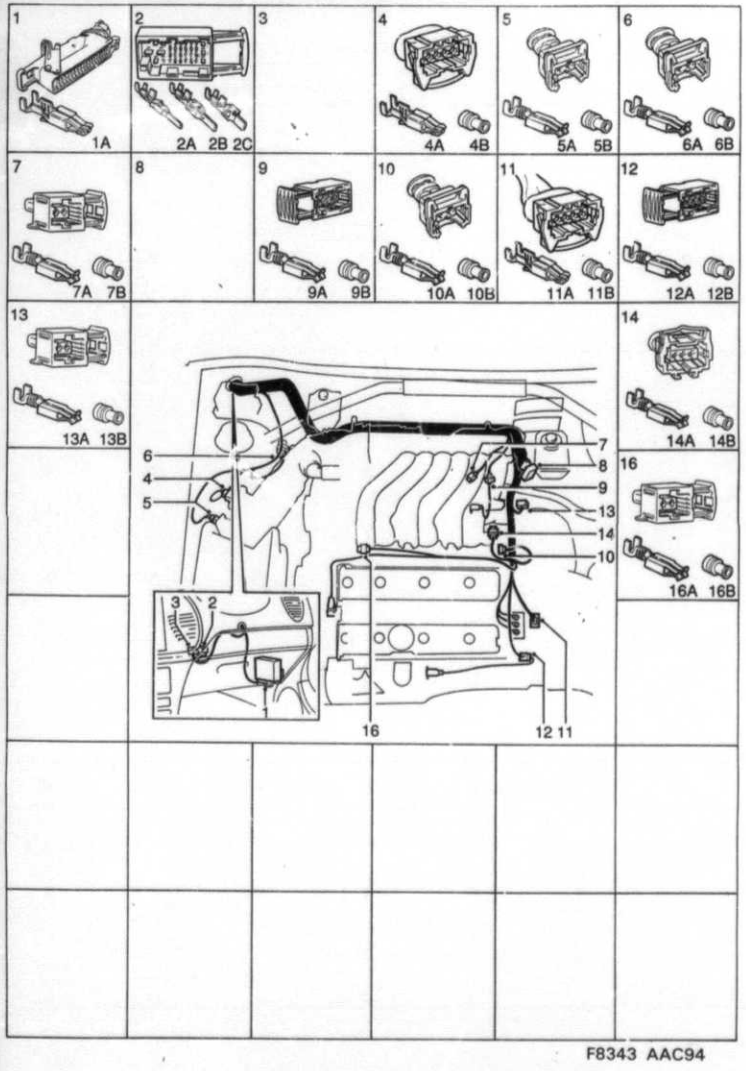

F8343 AAC94

3-G24

Contact housing etc
Engine, B258 I
1997-

Kontakthus etc
Motor, B258 I
1997-


0684 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660 10B	40 61 974		AREA 2,1-2,5 MM2	2	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

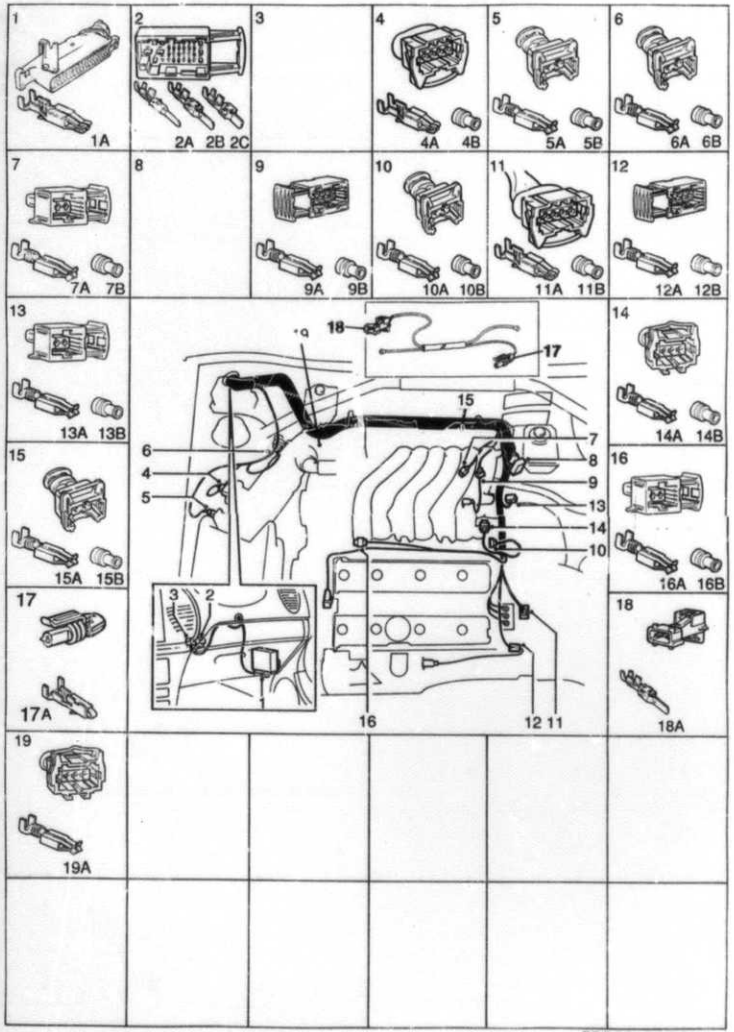

F8344 AAC94

3-H02

Contact housing etc
Engine, B258 I
1997-

Kontakthus etc
Motor, B258 I
1997-


0696	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	46 68 604			1	Contact housing	Kontakthus	8
0020						4-pole, female	4-polig, hylsa	
0030						ignition coil	tändspole	
0040	11A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050	11B	40 61 974		AREA 2,1-2,9 MM2	4	Seal	Tätning	5
0060								
0070	12	41 13 601			1	Connector housing	Kontakthus	8
0080						4-pole, female	4-polig, hylsa	
0090						lambda sonde	lambdasond	
0100						front	främre	
0110	12A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0120	12B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0130								
0140	13	41 13 205				Connector housing	Kontakthus	8
0150						2-pole, female	2-polig, hylsa	
0160						temperature sensor	temperaturgivare	
0170						coolant	kylvätska	
0180	13A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0190	13B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0200								
0210	14	44 32 316			1	Connector housing	Kontakthus	8
0220						3-pole, female	3-polig, hylsa	
0230						crank shaft sensor	vevaxelgivare	
0240	14A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0250	14B	40 61 974		AREA 2,1-2,9 MM2	3	Seal	Tätning	5
0260								
0270	15	46 69 180			1	Connector housing	Kontakthus	8
0280						2-pole, female	2-polig, hylsa	
0290						idle speed control	tomgångsreglering	
0300	15A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0310	15B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0320								
0330	16	41 13 205			1	Connector housing	Kontakthus	8
0340						2-pole, female	2-polig, hylsa	
0350						knock-sensor	knacksensor	
0360						front	främre	
0370	16A	43 50 526		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0380	16B	40 61 974		AREA 2,1-2,9 MM2	2	Seal	Tätning	5
0390								
0400	17	42 03 378			1	Connector housing	Kontakthus	4
0410						1-pole, female	1-polig, hylsa	
0420						EOP sensor	oljetrycksgivare	
0430	17A	44 18 505		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	18	41 13 650			1	Connector housing	Kontakthus	8
0460						4-pole, male	4-polig, stift	
0470						connection	skarv	
0480	18A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0490								
0500	19	44 32 365			1	Connector housing	Kontakthus	
0510						5-pole, female	5-polig, hylsa	
0520						TCS	TCS	
0530	19A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

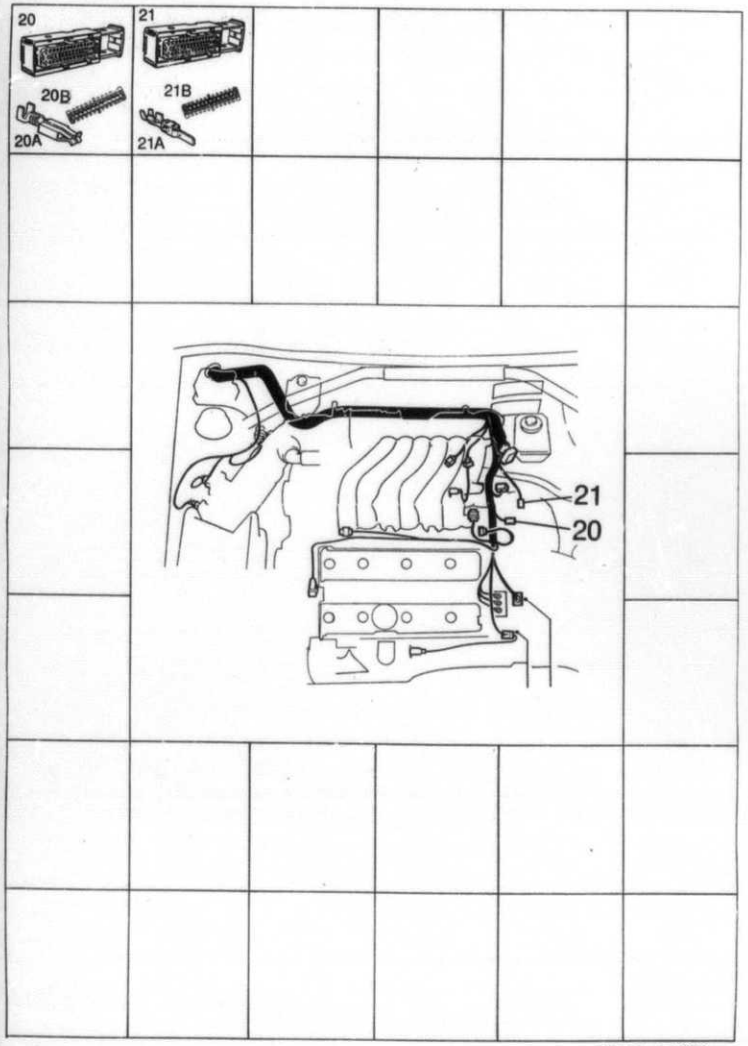

F8345 AAC94

Contact housing etc

3 –H04

Engine, B258 I

1997-

Kontakthus etc

Motor, B258 I

1997-


0698	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	20	46 68 810			1	Connector housing	Kontakthus	8
0020						24-pole, female	24-polig, hylsa	
0030						connection	skarv	
0040	20A	43 50 526		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0050	20A	40 61 586		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0060	20B	46 92 851			1	Locking	Låsning	8
0070								
0080	21	46 68 869			1	Connector housing	Kontakthus	8
0090						24-pole, male	24-polig, stift	
0100						connection	skarv	
0110	21A	*43 50 609*		AREA 0,5-1,0 MM2 NLS – USE 4115192	3	Cable terminal	Kabelsko	5
0120	21A	41 15 192		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0130	21B	46 92 851			1	Locking	Låsning	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

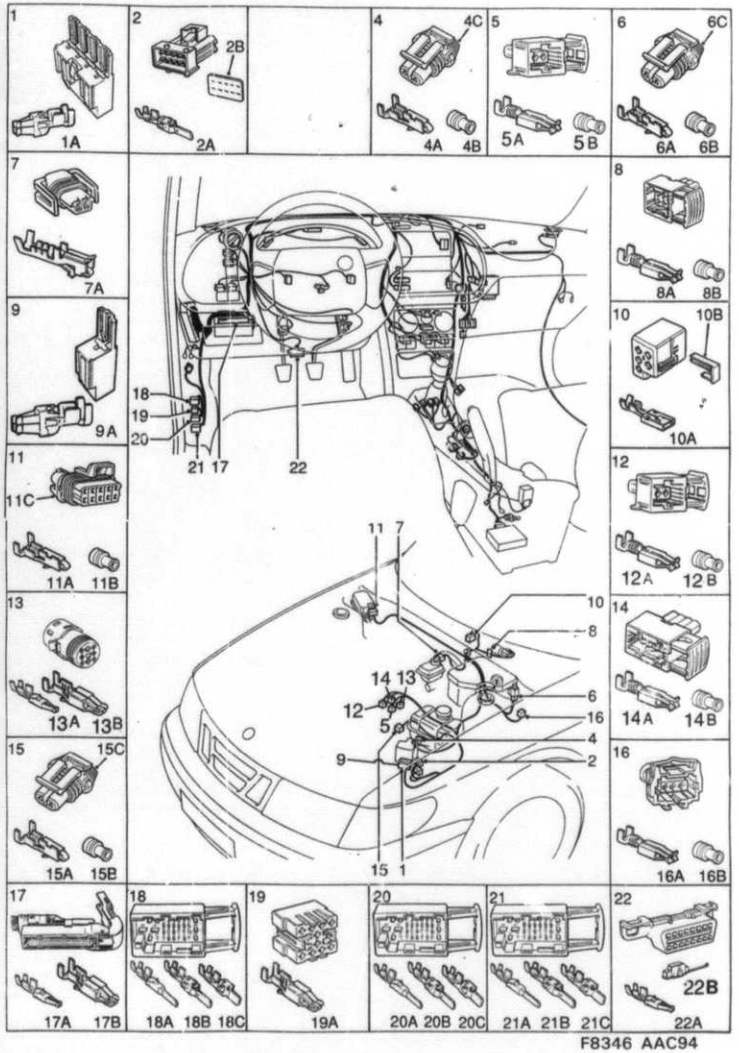

F8346 AAC94

3-H06

Contact housing etc

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 30 181			1	Connector housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						fuse box	säkringsdosa	
0040	1A	44 64 343		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 14 054			1	Connector housing	Kontakthus	8
0070						10-pole, male	10-polig, stift	
0080						connection	skarv	
0090	2A	41 15 192		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0100	2B	41 14 153			1	Seal	Tätning	5
0110								
0120	4	44 34 841			1	Connector housing	Kontakthus	5
0130						2-pole, female	2-polig, hylsa	
0140						level sensor	nivågivare	
0150						coolant	kylvätska	
0160	4A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0170	4B	44 19 313			2	Seal	Tätning	5
0180						blue	blå	
0190	4C	42 01 232			1	Locking	Låsning	4
0200								
0210	5	41 13 205			1	Connector housing	Kontakthus	8
0220						2-pole, female	2-polig, hylsa	
0230						temperature sensor	temperarturgivare	
0240						clutch	koppling	
0250	5A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0260	5B	40 61 966		AREA 1,2-2,0MM2	2	Seal	Tätning	5
0270								
0280	6	42 01 224			1	Connector housing	Kontakthus	5
0290						2-pole, female	2-polig, hylsa	
0300						bonnet	motorhuv	
0310	6A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0320	6B	44 19 313			2	Seal	Tätning	5
0330						blue	blå	
0340	6C	42 01 232			1	Locking	Låsning	4
0350								
0360	7	42 01 273			1	Connector housing	Kontakthus	4
0370						2-pole, female	2-polig, hylsa	
0380						level sensor	nivågivare	
0390						brake fluid	bromsvätska	
0400	7A	44 88 458		AREA 0,35-0,5 MM2	2	Cable terminal	Kabelsko	5
0410								
0420	8	41 13 809			1	Connector housing	Kontakthus	4
0430						6-pole, female	6-polig, hylsa	
0440						windscreen wiper	vindrutetorkare	
0450	8A	40 61 586		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0460	8B	40 61 966		AREA 1,2-2,0 MM2	6	Seal	Tätning	5
0470								
0480	9	42 30 199		CV	1	Connector housing	Kontakthus	4
0490						1-pole, female	1-polig, hylsa	
0500						fuse box	säkringsdosa	
0510	9A	44 64 343		AREA 4,0-6,0 MM2	1	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

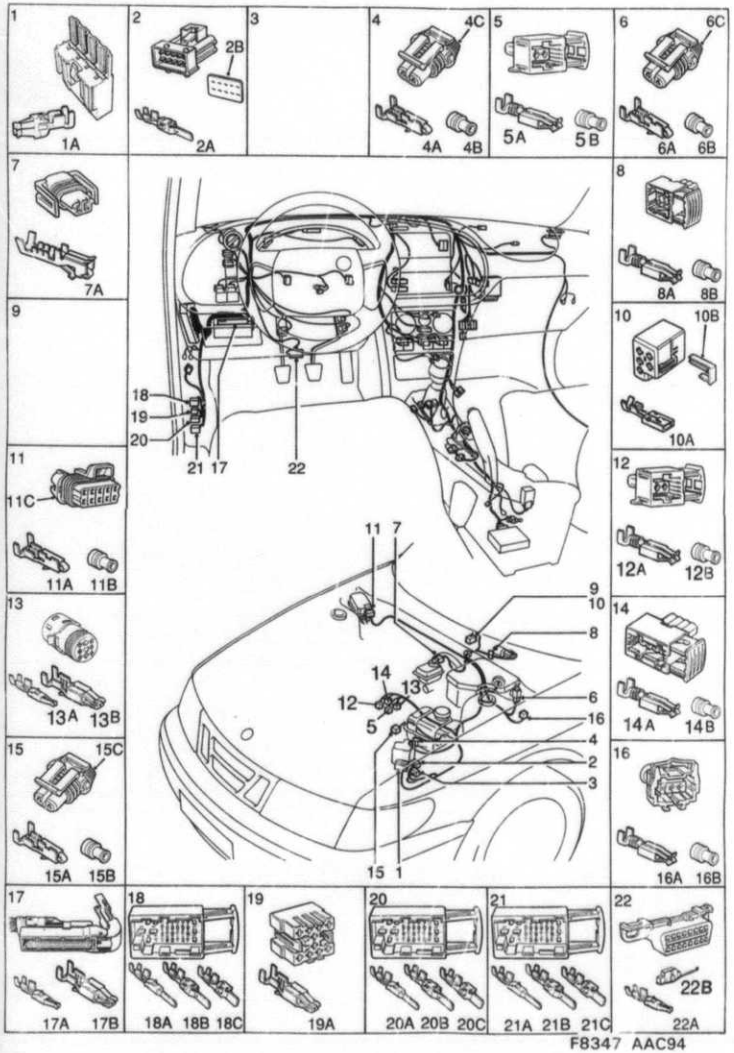

F8347 AAC94

Contact housing etc

3-H08

Instrument panel

1997-

Kontakthus etc

instrumentpanel

1997-


0702	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	44 63 014			1	Connector housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030						fan motor	fläktmotor	
0040	10A	44 12 961		AREA 4,0-6,0 MM2	4	Cable terminal	Kabelsko	5
0050	10B	44 63 022			1	Locking	Låsning	4
0060								
0070	11	42 03 568			1	Connector housing	Kontakthus	4
0080						10-pole, female	10-polig, hylsa	
0090						speed control system	farthållningssystem	
0100	11A	44 18 505		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	5
0110	11B	44 19 313			10	Seal	Tätning	5
0120						blue	blå	
0130	11C	42 03 576			1	Locking	Låsning	4
0140								
0150	12	41 13 205			1	Connector housing	Kontakthus	8
0160						2-pole, female	2-polig, hylsa	
0170						input shaft speed sensor	hastighetsgivare	
0180						gearbox	växellåda	
0190	12A	40 61 586		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0200	12B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0210								
0220	13	44 66 462			1	Connector housing	Kontakthus	4
0230						8-pole, female	8-polig, hylsa	
0240						actuator	manöverdon	
0250						ACS	ACS	
0260	13A	41 15 499		AREA 0,5-1,0 MM2	5	Cable terminal	Kabelsko	8
0270	13B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	14	41 13 601			1	Connector housing	Kontakthus	8
0300						4-pole, female	4-polig, hylsa	
0310						sensor	givare	
0320						gearbox	växellåda	
0330	14A	40 61 586		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0340	14B	40 61 966		AREA 1,2-2,0 MM2	4	Seal	Tätning	5
0350								
0360	15	42 01 224			1	Connector housing	Kontakthus	5
0370						2-pole, female	2-polig, hylsa	
0380						revers light contact	backljuskontakt	
0390	15A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0400	15B	44 19 313			2	Seal	Tätning	5
0410						blue	blå	
0420	15C	42 01 232			1	Locking	Låsning	4
0430								
0440	16	44 32 316			1	Connector housing	Kontakthus	8
0450						3-pole, female	3-polig, hylsa	
0460						center of gravity sensor	accelerationssensor	
0470	16A	40 61 586		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0480	16B	40 61 966		AREA 1,0-2,0 MM2	3	Seal	Tätning	5
0490								
0500	17	41 76 616			1	Connector housing	Kontakthus	8
0510						70-pole, female	70-polig, hylsa	
0520						ICE	ICE	
0530	17A	41 15 499		AREA 0,5-1,0 MM2	49	Cable terminal	Kabelsko	8
0540	17B	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0550								
0560	18	41 73 852			1	Contact housing	Kontakthus	4
0570						33-pole, male	33-polig, stift	
0580						connection	skarv	
0590	18A	41 15 457		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	5
0600	18B	41 15 077		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0610	18C	41 15 580		AREA 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

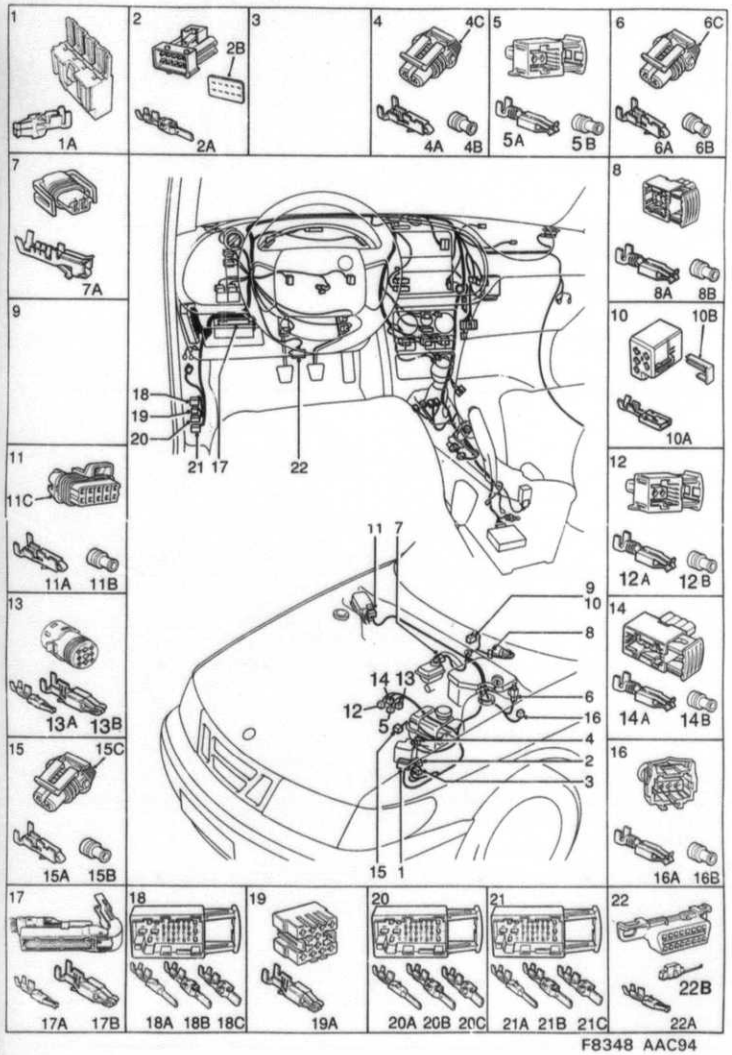

F8348 AAC94

Contact housing etc

3-H10

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0704	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	19	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	19A	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0050								
0060	20	41 73 852			1	Contact housing	Kontakthus	4
0070						33-pole, male	33-polig, stift	
0080						connection	skarv	
0090	20A	41 15 457		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	5
0100	20B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	20C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0120								
0130	21	41 73 852			1	Contact housing	Kontakthus	4
0140						33-pole, male	33-polig, stift	
0150						connection	skarv	
0160	21A	41 15 457		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	5
0170	21B	41 15 077		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	21C	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0190								
0200	22	48 07 954			1	Connector housing	Kontakthus	8
0210						16-pole, female	16-polig, hylsa	
0220						data link connector	diagnostikuttag	
0230	22A	41 15 499		AREA 0,5-1,0 MM2	10	Cable terminal	Kabelsko	8
0240	22B	44 34 833			1	Cover	Kåpa	4
0250	22C	79 70 536			2	Screw	Skruv	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

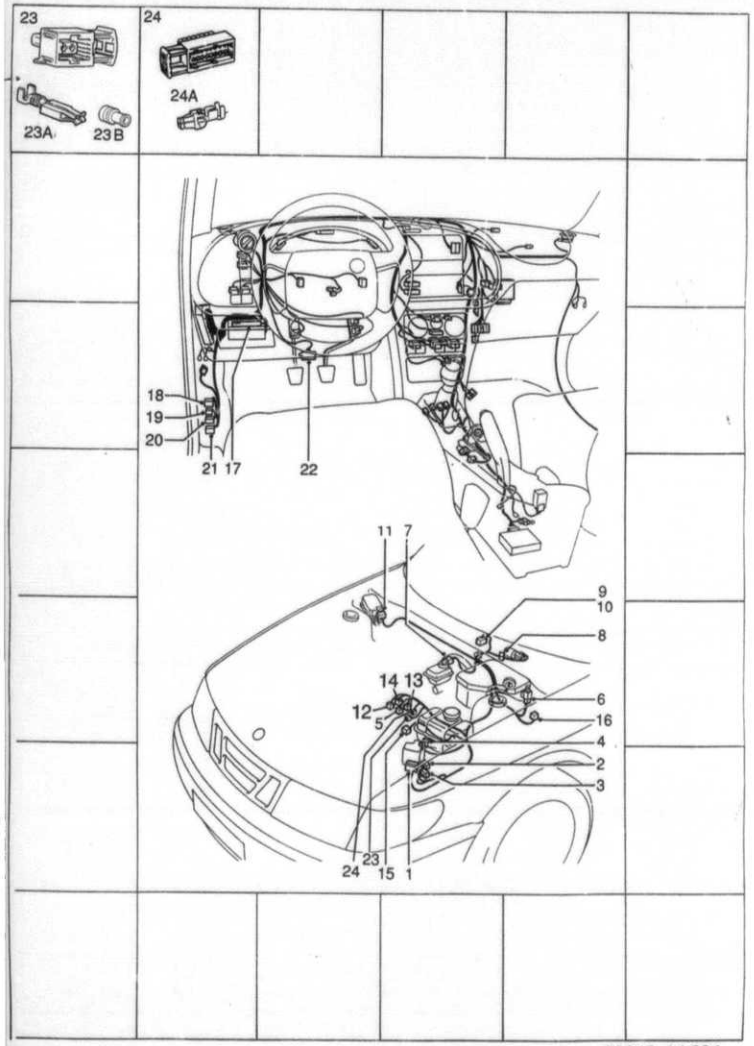

F8349 AAC94

Contact housing etc

3-H12 *Instrument panel 1997-*

Kontakthus etc

Instrumentpanel 1997-


0706	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	23	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	23A	40 61 586		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0050	23B	40 61 974			X	Seal	Tätning	5
0060								
0070	24	41 14 401			1	Connector housing	Kontakthus	8
0080						16-pole, female	16-polig, hylsa	
0090						connection	skarv	
0100	24A	40 61 586		AREA 1,0-2,5 MM2	11	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

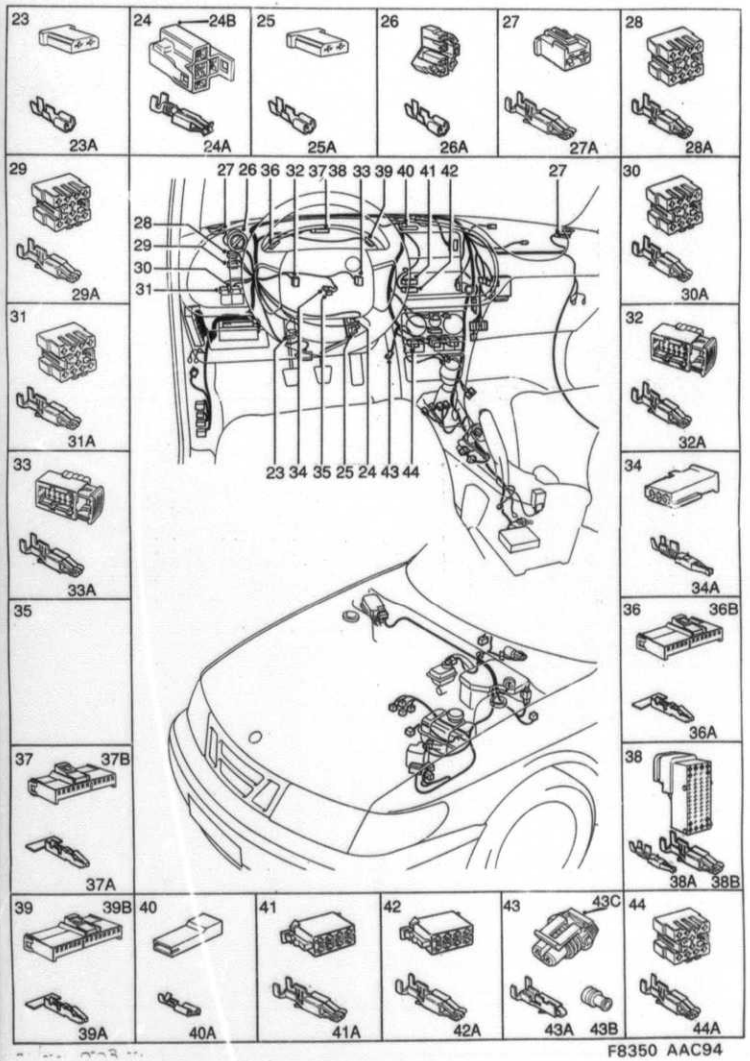

F8350 AAC94

Contact housing etc

3-H14

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0708	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	23	83 78 630			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						contact	kontakt	
0040						clutch	koppling	
0050	23A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0060								
0070	24	42 24 317			1	Connector housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						brake light switch	bromsljuskontakt	
0100	24A	91 20 791		AREA 2,5-4,0 MM2	4	Cable terminal	Kabelsko	8
0110	24B	42 24 333			1	Locking	Låsning	4
0120								
0130	25	83 78 630			1	Contact housing	Kontakthus	4
0140						2-pole, female	2-polig, hylsa	
0150						contact	kontakt	
0160						brake	broms	
0170	25A	85 22 575		AREA 0,5-1,4 MM2	2	Cable harness	Ledningsnät	5
0180								
0190	26	85 44 363			1	Contact housing	Kontakthus	4
0200						8-pole, female	8-polig, hylsa	
0210						light switch	ljusomkopplare	
0220	26A	44 64 400		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	5
0230								
0240	27	91 23 548			1	Contact housing	Kontakthus	4
0250						2-pole, female	2-polig, hylsa	
0260						loudspeaker	högtalare	
0270	27A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	28	91 23 399			1	Connector housing	Skarvhus	4
0300						10-pole, female	10-polig, hylsa	
0310						rear fog light	dimbaklykta	
0320	28A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0330								
0340	29	91 23 399			1	Connector housing	Skarvhus	4
0350						10-pole, female	10-polig, hylsa	
0360						fog light	dimljus	
0370	29A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0380								
0390	30	91 23 399			1	Connector housing	Skarvhus	4
0400						10-pole, female	10-polig, hylsa	
0410						rheostat	reostat	
0420	30A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0430								
0440	31	91 23 399			1	Connector housing	Skarvhus	4
0450						10-pole, female	10-polig, hylsa	
0460						headlamp levelling	ljuslängdsreglering	
0470	31A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0480								
0490	32	41 14 005			1	Connector housing	Kontakthus	8
0500						10-pole, female	10-polig, hylsa	
0510						direction indicator	blinkers	
0520	32A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

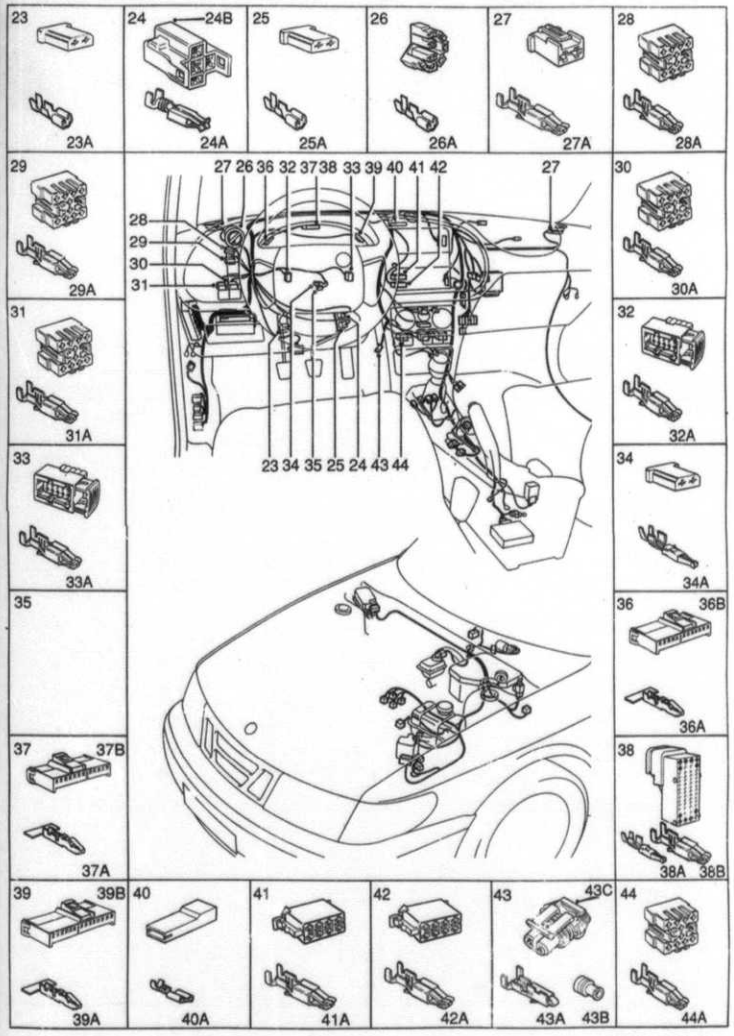

F8351 AAC94

3-H16

Contact housing etc
Instrument panel
1997-

Kontakthus etc
Instrumentpanel
1997-


0710	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	33	41 14 005			1	Connector housing	Kontakthus	8
0020						10-pole, female	10-polig, hylsa	
0030						windscreen wiper	vindrutetorkare	
0040	33A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0050								
0060	34	45 17 702			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						air-bag	airbag	
0090	34A	44 66 801		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	36	44 09 181			1	Connector housing	Kontakthus	4
0120						12-pole, female	12-polig, hylsa	
0130						instrument	instrument	
0140	36A	42 24 515		AREA 0,2-0,5 MM2	7	Cable terminal	Kabelsko	5
0150	36B	44 09 207			1	Cover	Kåpa	4
0160								
0170	37	44 09 165			1	Connector housing	Kontakthus	4
0180						12-pole, female	12-polig, hylsa	
0190						instrument	instrument	
0200	37A	42 24 515		AREA 0,2-0,5 MM2	12	Cable terminal	Kabelsko	5
0210	37B	44 09 207			1	Cover	Kåpa	4
0220								
0230	38	41 15 408			1	Connector housing	Kontakthus	4
0240						56-pole, female	56-polig, hylsa	
0250						instrument	instrument	
0260	38A	41 15 499		AREA 0,5-1,0 MM2	33	Cable terminal	Kabelsko	8
0270	38B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0280								
0290	39	44 09 199			1	Connector housing	Kontakthus	4
0300						12-pole, female	12-polig, hylsa	
0310						instrument	instrument	
0320	39A	42 24 515		AREA 0,2-0,5 MM2	11	Cable terminal	Kabelsko	5
0330	39B	44 09 207			1	Cover	Kåpa	4
0340								
0350	40	85 16 916			1	Insulation	Isolering	4
0360						1-pole, female	1-polig, hylsa	
0370						seat belt warning	bältesvarning	
0380	40A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0390								
0400	41	42 03 626			1	Connector housing	Kontakthus	4
0410						8-pole, female	8-polig, hylsa	
0420						radio	radio	
0430	41A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0440								
0450	42	42 03 618			1	Connector housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						radio	radio	
0480	42A	91 20 957		AREA 1,0-2,5 MM2	8	Cable terminal	Kabelsko	8
0490								
0500	43	42 01 224			1	Connector housing	Kontakthus	5
0510						2-pole, female	2-polig, hylsa	
0520						kick-down switch	kick-downströmställare	
0530	43A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0540	43B	44 19 313			2	Seal	Tätning	5
0550						blue	blå	
0560	43C	42 01 232			1	Locking	Låsning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-[illegible]02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

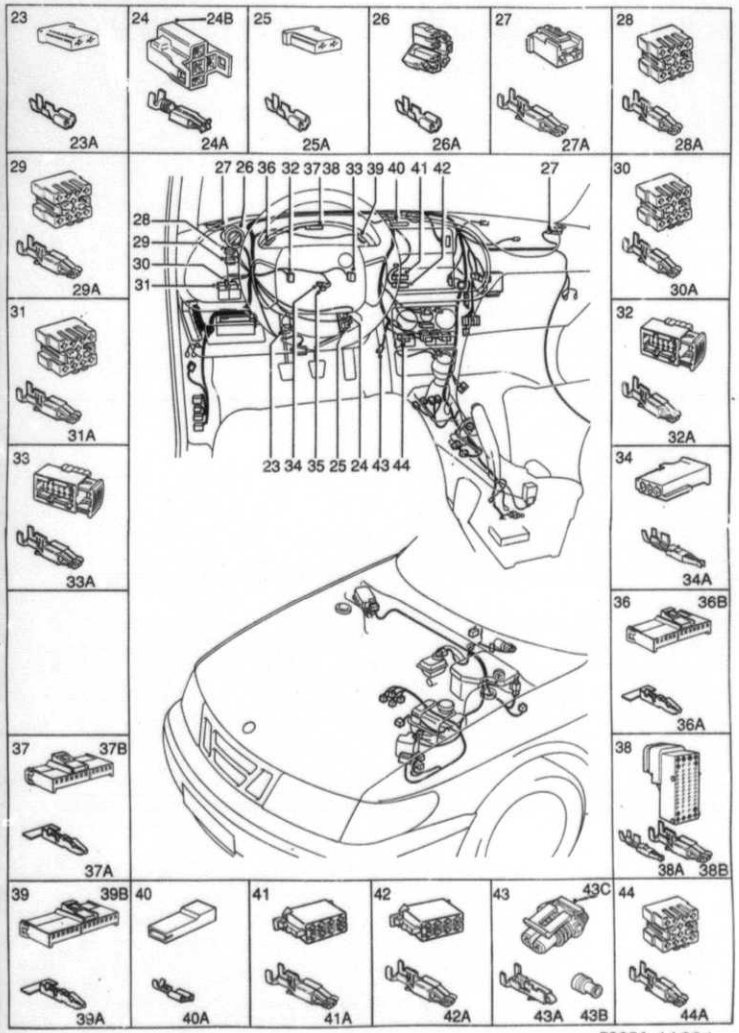

F8352 AAC94

3-\18

Contact housing etc

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0712	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	44	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						TCS	TCS	
0050	44A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

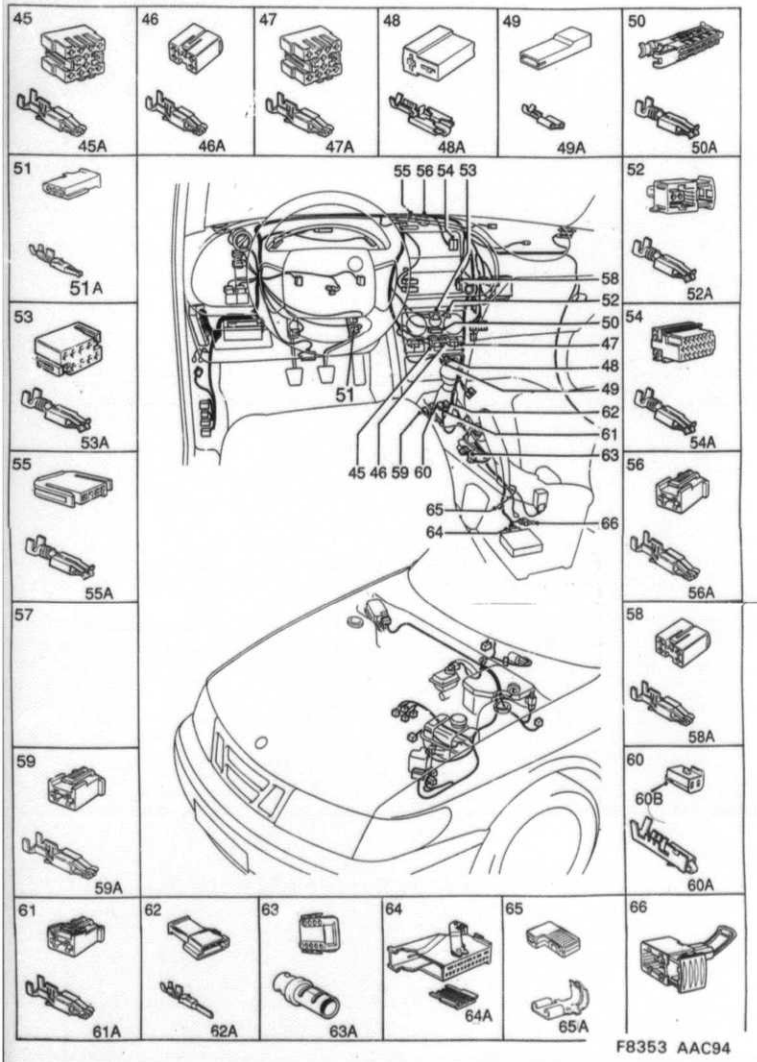

3-H20

Contact housing etc

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0714	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	45	91 23 399			1	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030						switch	strömställare	
0040						heating pad	värmedyna	
0050	45A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0060								
0070	46	91 23 555			1	Contact housing	Kontakthus	4
0080						4-pole, female	4-polig, hylsa	
0090						sensor	sensor	
0100						indoor temperature	innerlufttemperatur	
0110	46A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0120								
0130	47	91 23 399			1	Connector housing	Skarvhus	4
0140						10-pole, female	10-polig, hylsa	
0150						switch	strömställare	
0160						heating pad	värmedyna	
0170	47A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0180								
0190	48	85 74 949			1	Contact housing	Kontakthus	8
0200						2-pole, female	2-polig, hylsa	
0210						cigarette lighter	cigarettändare	
0220	48A	44 64 400		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0230								
0240	49	85 33 184			1	Contact housing	Kontakthus	4
0250						1-pole, female	1-polig, hylsa	
0260						lighting	belysning	
0270						cigarette lighter	cigarettändare	
0280	49A	85 04 797		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0290								
0300	50	95 65 045			1	Contact housing	Kontakthus	5
0310						39-pole, female	39-polig, hylsa	
0320						ACC	ACC	
0330	50A	44 66 736		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0340	50A	40 63 970		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0350	50A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0360								
0370	52	41 13 205			1	Connector housing	Kontakthus	8
0380						2-pole, female	2-polig, hylsa	
0390						background lighting	bakgrundsbelysning	
0400	52A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0410								
0420	53	91 24 090			1	Contact housing	Kontakthus	4
0430						8-pole, female	8-polig, hylsa	
0440						AC	AC	
0450	53A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0460								
0470	54	42 23 624			1	Connector housing	Kontakthus	4
0480						22-pole, female	22-polig, hylsa	
0490						information display	informationsdisplay	
0500	54A	41 15 499		AREA 0,5-1,0 MM2	18	Cable terminal	Kabelsko	8
0510								
0520	55	40 60 869			1	Contact housing	Kontakthus	5
0530						4-pole, female	4-polig, hylsa	
0540						sunlight sensor	solljusavkännare	
0550	55A	40 63 970		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

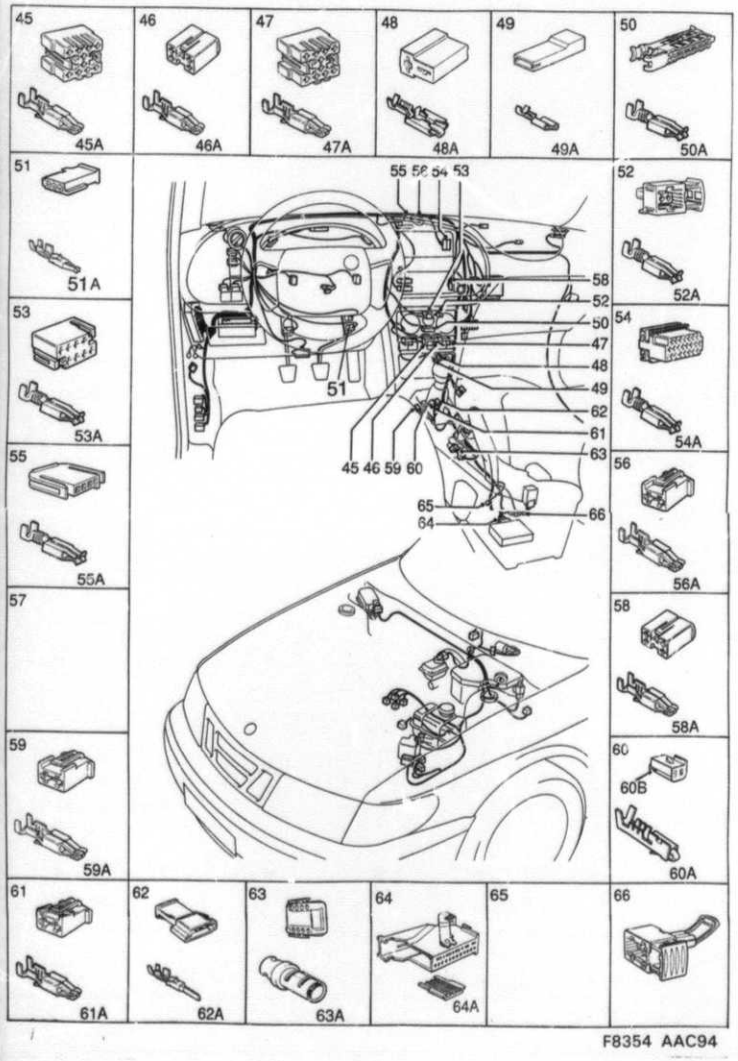

F8354 AAC94

3-H22

Contact housing etc
Instrument panel
1997-

Kontakthus etc
Instrumentpanel
1997-


0716	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	56	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						theft alarm	stöldlarm	
0040	56A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	57	41 13 007			1	Connector housing	Kontakthus	4
0070						3-pole, female	3-polig, hylsa	
0080						sensor	givare	
0090						accelerator pedal	gaspedal	
0100	57A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	58	91 23 555			1	Contact housing	Kontakthus	4
0130						4-pole, female	4-polig, hylsa	
0140						warning flasher	varningsblinklykta	
0150	58A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0160								
0170	59	91 23 548			1	Contact housing	Kontakthus	4
0180						2-pole, female	2-polig, hylsa	
0190						lighting	belysning	
0200						gear position	växelläge	
0210	59A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0220								
0230	60	44 11 740			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						shift solenoid	växlingssolenoid	
0260	60A	44 88 151		AREA0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0270	60B	44 11 757			1	Locking	Låsning	4
0280								
0290	61	91 23 548			1	Contact housing	Kontakthus	4
0300						2-pole, female	2-polig, hylsa	
0310						switch	strömställare	
0320						SPORTS	SPORT	
0330	61A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0340								
0350	62	41 13 056			1	Connector housing	Kontakthus	4
0360						3-pole, male	3-polig, stift	
0370						switch	strömställare	
0380						WINTER	VINTER	
0390	62A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0400								
0410	63	42 24 457			1	Connector housing	Kontakthus	4
0420						9-pole, female	9-polig, hylsa	
0430						starter switch	tändningslås	
0440	63A	95 09 746			7	Cable terminal	Kabelsko	5
0450								
0460	64	47 34 448			1	Cover	Kåpa	4
0470						30-pole	30-polig	
0480						airbag module	airbagmodul	
0490	64A	47 34 471			1	Locking	Låsning	4
0500								
0510	66	44 30 153			1	Resistor	Motstånd	6
0520						air-bag	airbag	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

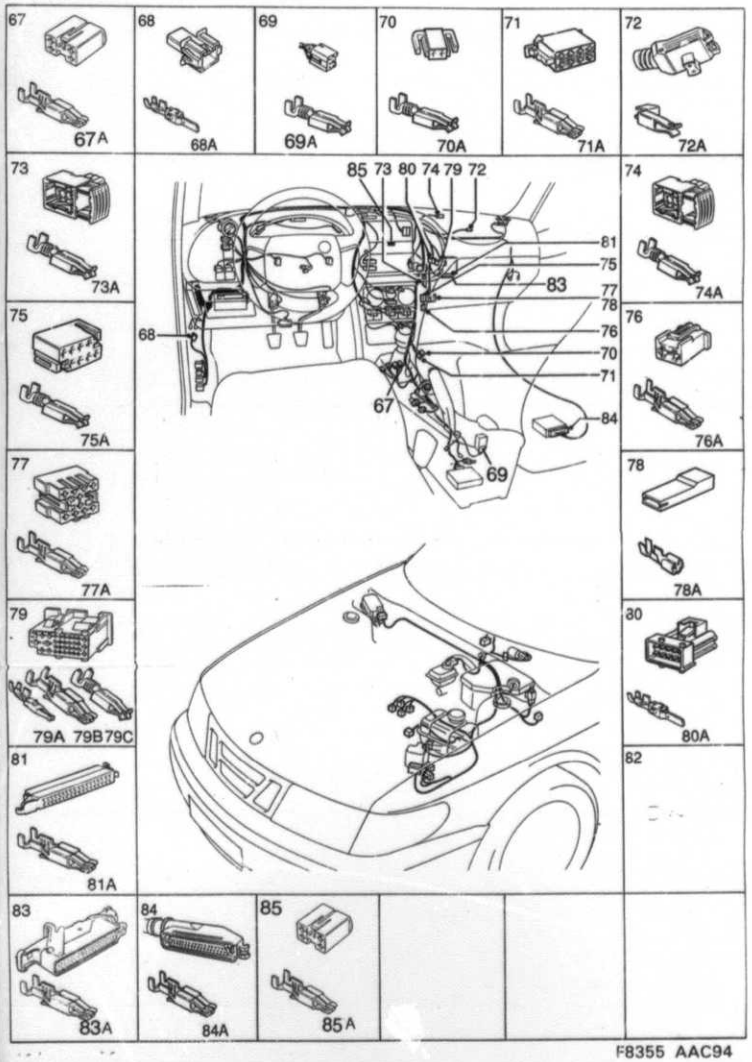

3-H24

Contact housing etc
Instrument panel
1997-

Kontakthus etc
Instrumentpanel
1997-


0718	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	67	91 23 555			1	Contact housing	Kontakthus	4
0020						4-pole, female	4-polig, hylsa	
0030						gear position indicator	växellägesindikator	
0040	67A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	68	41 17 164			1	Connector housing	Kontakthus	4
0070						2-pole, male	2-polig, stift	
0080						catalytic converter temp	katalysatortemp	
0090	68A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	69	42 24 168			1	Connector housing	Kontakthus	4
0120						5-pole, female	5-polig, hylsa	
0130						rear seat	baksäte	
0140	69A	91 20 791		AREA 2,5-4,0 MM2	5	Cable terminal	Kabelsko	8
0150								
0160	70	91 24 157			1	Contact housing	Kontakthus	4
0170						2-pole, female	2-polig, hylsa	
0180						amplifier	förstärkare	
0190	70A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0200								
0210	71	42 03 626			1	Connector housing	Kontakthus	4
0220						8-pole, female	8-polig, hylsa	
0230						radio	radio	
0240	71A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0250								
0260	72	95 52 183			1	Contact housing	Kontakthus	4
0270						2-pole, female	2-polig, hylsa	
0280						air-bag	airbag	
0290	72A	95 52 191			2	Cable terminal	Kabelsko	5
0300								
0310	73	91 23 548			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						microswitch	mikrobrytare	
0340	73A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	74	41 13 809			1	Connector housing	Kontakthus	4
0370						6-pole, female	6-polig, hylsa	
0380						telephone	telefon	
0390	74A	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0400								
0410	75	91 24 090			1	Contact housing	Kontakthus	4
0420						8-pole, female	8-polig, hylsa	
0430						fan	fläkt	
0440						ACC	ACC	
0450	75A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0460								
0470	76	91 23 548				Contact housing	Kontakthus	4
0480						2-pole, female	2-polig, hylsa	
0490						recirculation	recirkulation	
0500	76A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0510								
0520	77	91 23 399			1	Connector housing	Skarvhus	4
0530						10-pole, female	10-polig, hylsa	
0540						motor	motor	
0550						ACC	ACC	
0560	77A	91 20 957		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0570								
0580	78	85 16 916			1	Insulation	Isolering	4
0590						1-pole, female	1-polig, hylsa	
0600						anti-freeze thermostate	frysskyddstermostat	
0610	78A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

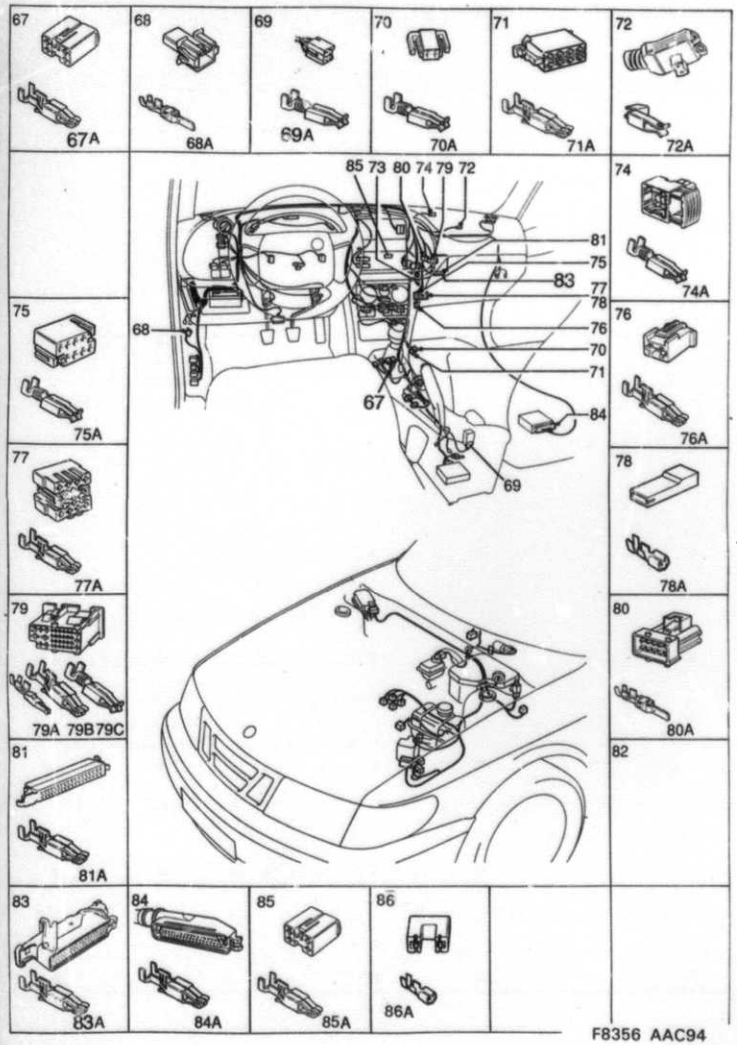

3-102

Contact housing etc

Instrument panel

1997-

Kontakthus etc

Instrumentpanel

1997-


0720	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	79	41 73 803			1	Contact housing	Kontakthus	4
0020						33-pole, female	33-polig, hylsa	
0030						connection	skarv	
0040	79A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0050	79B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0060	79C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0070								
0080	80	41 14 054			1	Connector housing	Kontakthus	8
0090						10-pole, male	10-polig, stift	
0100						connection	skarv	
0110	80A	41 15 077		AREA 1,0-2,5 MM2	10	Cable terminal	Kabelsko	8
0120								
0130	81	42 03 659			1	Connector housing	Kontakthus	4
0140						35-pole, female	35-polig, hylsa	
0150						electronic unit	elektronikenhet	
0160						TCM	TCM	
0170	81A	91 20 957		AREA 1,0-2,5 MM2	34	Cable terminal	Kabelsko	8
0180								
0190	83	42 22 311			1	Connector housing	Kontakthus	4
0200						55-pole, female	55-polig, hylsa	
0210						electronic unit	elektronikenhet	
0220						ACS	ACS	
0230	83A	91 20 957		AREA 1,0-2,5 MM2	33	Cable terminal	Kabelsko	8
0240								
0250	84	44 10 619			1	Connector housing	Kontakthus	8
0260						35-pole, female	35-polig, hylsa	
0270						electronic unit	elektronikenhet	
0280						TCS	TCS	
0290	84A	91 20 957		AREA 1,0-2,5 MM2	23	Cable terminal	Kabelsko	8
0300								
0310	85	91 23 555			1	Contact housing	Kontakthus	4
0320						radio	radio	
0330						4-pole, female	4-polig, hylsa	
0340	85A	40 63 087		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0350								
0360	86	42 03 733			1	Connector housing	Kontakthus	4
0370						2-pole, female	2-polig, hylsa	
0380						glove compartment lamp	handskfacklampa	
0390	86A	44 64 442		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

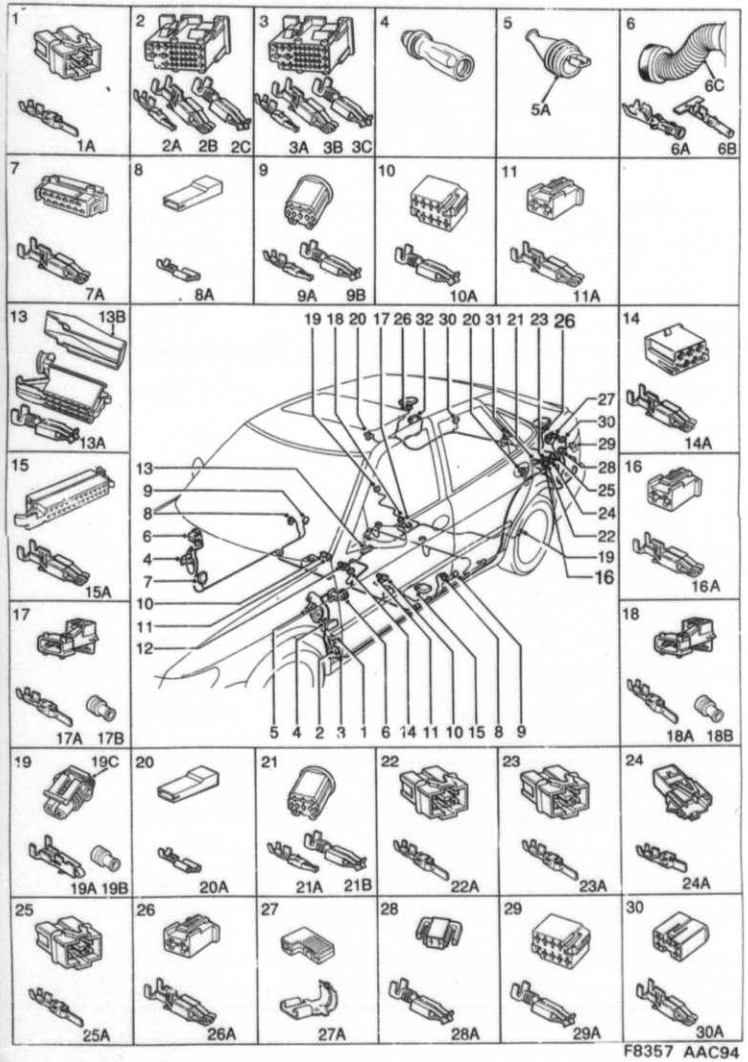

F8357 AAC94

Contact housing etc

3-104

Rear, 3D, 5D

1997-

Kontakthus etc

Bakre, 3D, 5D

1997-

0722	Pos	Port No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	16	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	22	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	7	Cable terminal	Kabelsko	8
0180	3C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0190								
0200	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0210						1-pole, female	1-polig, hylsa	
0220						side indicator lamp	sidoblinkly.	
0230								
0240	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0250						1-pole, female	1-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	5A	42 03 683			1	Protection	Skydd	4
0280								
0290	6	42 03 253			1	Connector housing	Kontakthus	4
0300						26-pole, female	26-polig, hylsa	
0310						front door	framdörr	
0320	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0330	6B	44 09 728		AREA 1,0-2,5 MM2	22	Cable terminal	Kabelsko	5
0340	6C	42 22 352			1	Protection	Skydd	4
0350								
0360	7	95 25 031			1	Contact housing	Kontakthus	5
0370						12-pole, female	12-polig, hylsa	
0380						central lock	centrallås	
0390	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0400								
0410	8	85 16 916			1	Insulation	Isolering	4
0420						1-pole, female	1-polig, hylsa	
0430						switch	strömställare	
0440	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0450								
0460	9	44 11 518			1	Connector housing	Kontakthus	
0470						10-pole, female	10-polig, hylsa	
0480						rear door	bakdörr	
0490	9A	41 15 499		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	8
0500	9B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	10	91 24 090			1	Contact housing	Kontakthus	4
0530						8-pole, female	8-polig, hylsa	
0540						front seat	framstol	
0550	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

3 –106

Contact housing etc
Rear, 3D, 5D
1997-

Kontakthus etc
Bakre, 3D, 5D
1997-

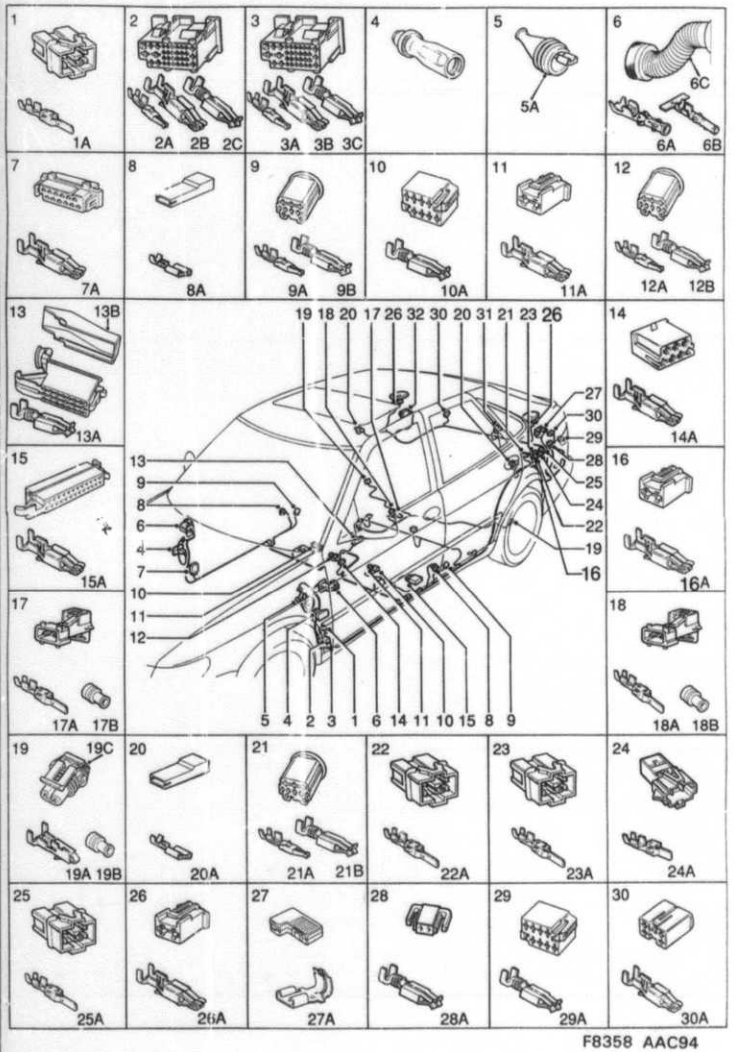

F8358 AAC94


0724	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	12	44 11 518			1	Connector housing	Kontakthus	
0070						10-pole, female	10-polig, hylsa	
0080						connection	skarv	
0090	12A	44 66 801		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0100	12A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0110								
0120	13	40 60 893			1	Contact housing	Kontakthus	5
0130						19-pole, female	19-polig, hylsa	
0140						window lift	fönsterhiss	
0150	13A	91 20 957		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	8
0160	13A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0170	13B	40 67 617			1	Cover	Kåpa	4
0180								
0190	14	91 23 381			1	Contact housing	Kontakthus	4
0200						7-pole, female	7-polig, hylsa	
0210						interior illum.	innerbelysning	
0220	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0230								
0240	15	45 37 429			1	Contact housing	Kontakthus	5
0250						25-pole, female	25-polig, hylsa	
0260						theft alarm	stöldlarm	
0270	15A	91 20 957		AREA 1,0-2,5 MM2	24	Cable terminal	Kabelsko	8
0280								
0290	15	41 76 186		VSS	1	Connector housing	Kontakthus	4
0300						25-pole, female	25-polig, hylsa	
0310						theft alarm	stöldlarm	
0320	15A	91 20 957		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	8
0330								
0340	16	91 23 548			1	Contact housing	Kontakthus	4
0350						2-pole, female	2-polig, hylsa	
0360						connection	skarv	
0370	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380								
0390	17	41 13 254			1	Connector housing	Kontakthus	8
0400						2-pole, male	2-polig, stift	
0410						fuel pump	bränslepump	
0420	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0430	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0440								
0450	18	41 13 254			1	Connector housing	Kontakthus	8
0460						2-pole, male	2-polig, stift	
0470						fuel pump	bränslepump	
0480	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0490	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0500								
0510	19	42 03 428			1	Connector housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530						sensor, ABS	sensor, ABS	
0540	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0550	19B	44 19 305			1	Seal	Tätning	5
0560						red	röd	
0570	19B	44 19 313			1	Seal	Tätning	5
0580						blue	blå	
0590	19C	42 01 232			1	Locking	Låsning	4
0600								
0610	20	85 16 916			1	Insulation	Isolering	4
0620						1-pole, female	1-polig, hylsa	
0630						switch	strömställare	
0640	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

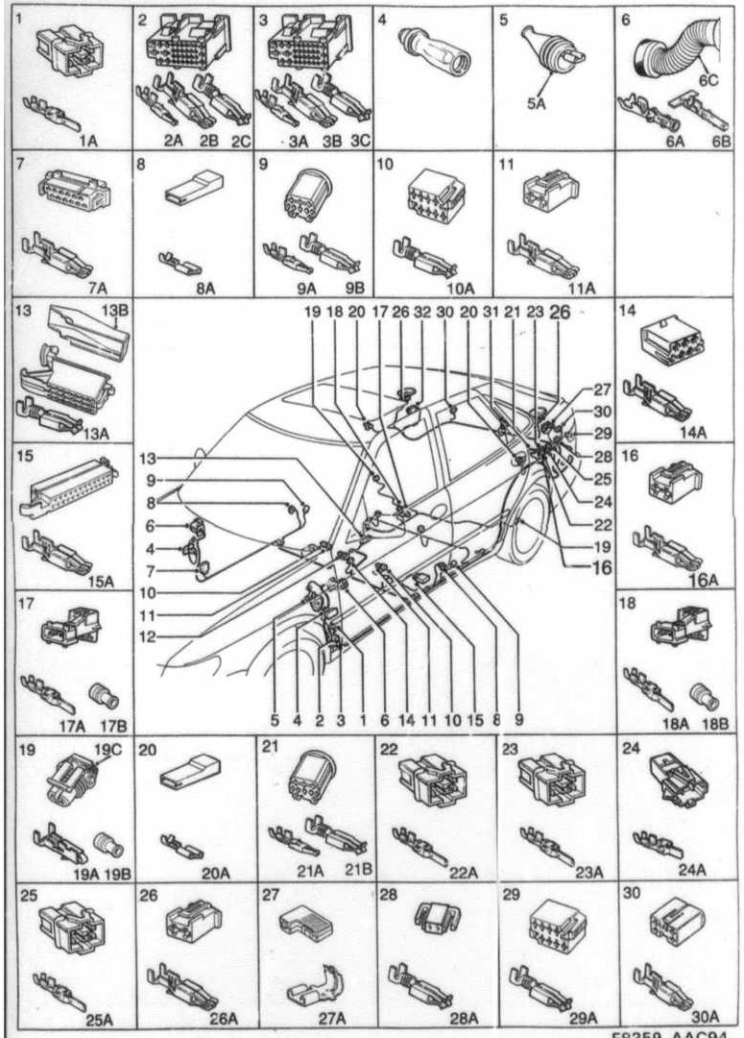

F8359 AAC94

3 --108

Contact housing etc
Rear, 3D, 5D
1997-

Kontakthus etc
Bakre, 3D, 5D
1997-


0726	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0080						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0100								
0110	24	41 17 560			1	Connector housing	Kontakthus	4
0120						2-pole, male	2-polig, stift	
0130						connection	skarv	
0140	24A	41 15 580		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	25	41 17 263			1	Connector housing	Kontakthus	4
0170						4-pole, male	4-polig, stift	
0180						connection	skarv	
0190	25A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0200								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

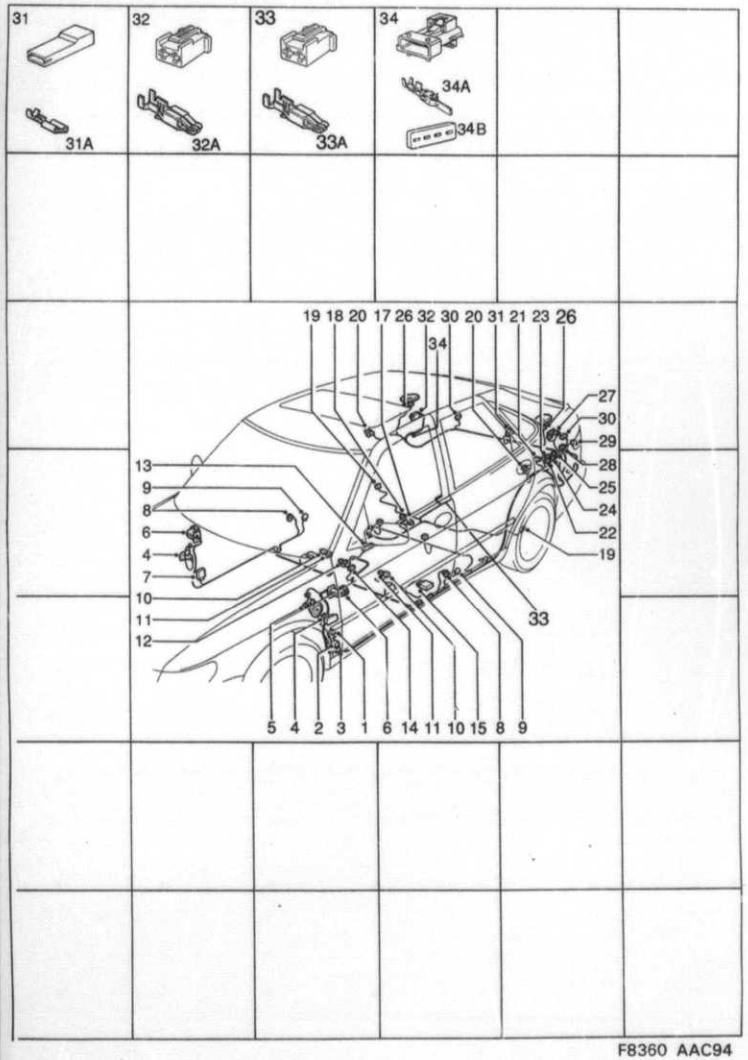

F8360 AAC94

3 –I10

Contact housing etc
Rear, 3D, 5D
1997-

Kontakthus etc
Bakre, 3D, 5D
1997-


0728	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	31	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	31A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	32	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	32A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	33	91 23 548			1	Contact housing	Kontakthus	4
0130						2-pole, female	2-polig, hylsa	
0140						rear seat	baksäte	
0150	33A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	34	41 13 650			1	Connector housing	Kontakthus	8
0180						4-pole, male	4-polig, stift	
0190						pressure sensor	tryckgivare	
0200	34A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0210	34B	41 13 759			1	Seal	Tätning	5

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

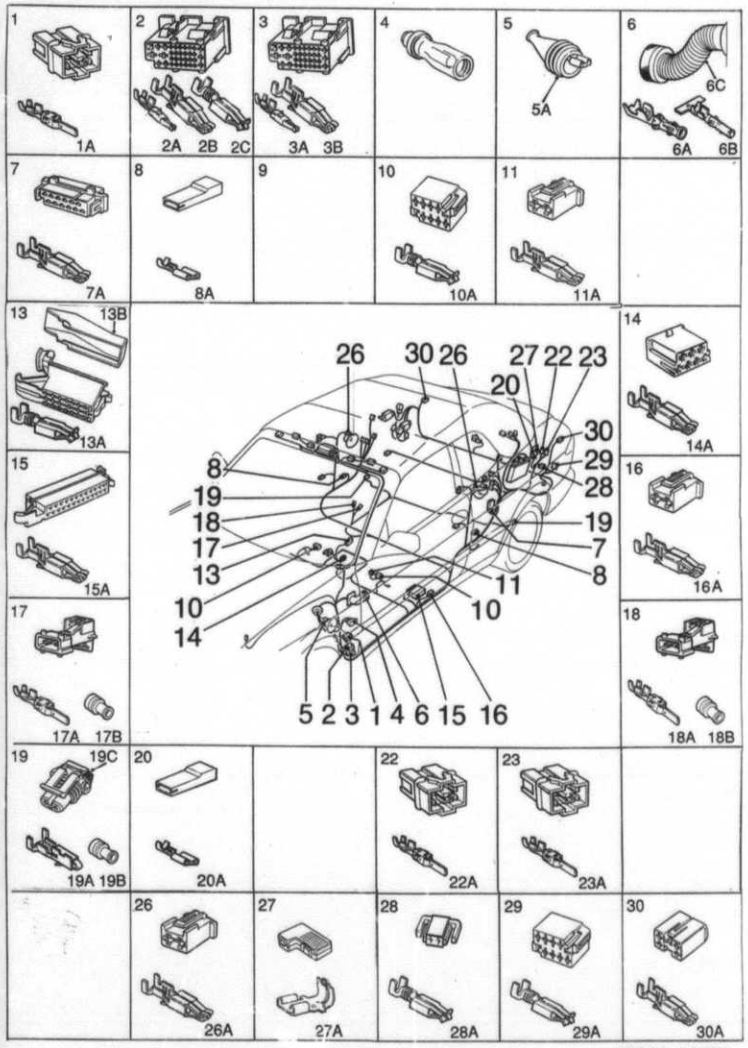

F8361 AAC94

3-I12

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0730	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 263			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	2	41 73 803			1	Contact housing	Kontakthus	4
0070						33-pole, female	33-polig, hylsa	
0080						connection	skarv	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	21	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0110	2C	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0120								
0130	3	41 73 803			1	Contact housing	Kontakthus	4
0140						33-pole, female	33-polig, hylsa	
0150						connection	skarv	
0160	3A	41 15 499		AREA 0,5-1,0 MM2	20	Cable terminal	Kabelsko	8
0170	3B	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0180								
0190	4	85 47 804		AREA 2,5-4,0 MM2	1	Connector	Skarvstycke	5
0200						1-pole, female	1-polig, hylsa	
0210						side indicator lamp	sidoblinklykta	
0220								
0230	5	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0240						1-pole, female	1-polig, hylsa	
0250						theft alarm	stöldlarm	
0260	5A	42 03 683			1	Protection	Skydd	4
0270								
0280	6	42 03 253			1	Connector housing	Kontakthus	4
0290						26-pole, female	26-polig, hylsa	
0300						front door	framdörr	
0310	6A	44 64 293		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0320	6B	44 09 728		AREA 1,0-2,5 MM2	16	Cable terminal	Kabelsko	5
0330	6C	42 22 352			1	Protection	Skydd	4
0340								
0350	7	95 25 031			1	Contact housing	Kontakthus	5
0360						12-pole, female	12-polig, hylsa	
0370						central lock	centrallås	
0380	7A	91 20 957		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	8
0390								
0400	8	85 16 916			1	Insulation	Isolering	4
0410						1-pole, female	1-polig, hylsa	
0420						switch	strömställare	
0430	8A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0440								
0450	10	91 24 090			1	Contact housing	Kontakthus	4
0460						8-pole, female	8-polig, hylsa	
0470						front seat	framstol	
0480	10A	91 20 791		AREA 2,5-4,0 MM2	8	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

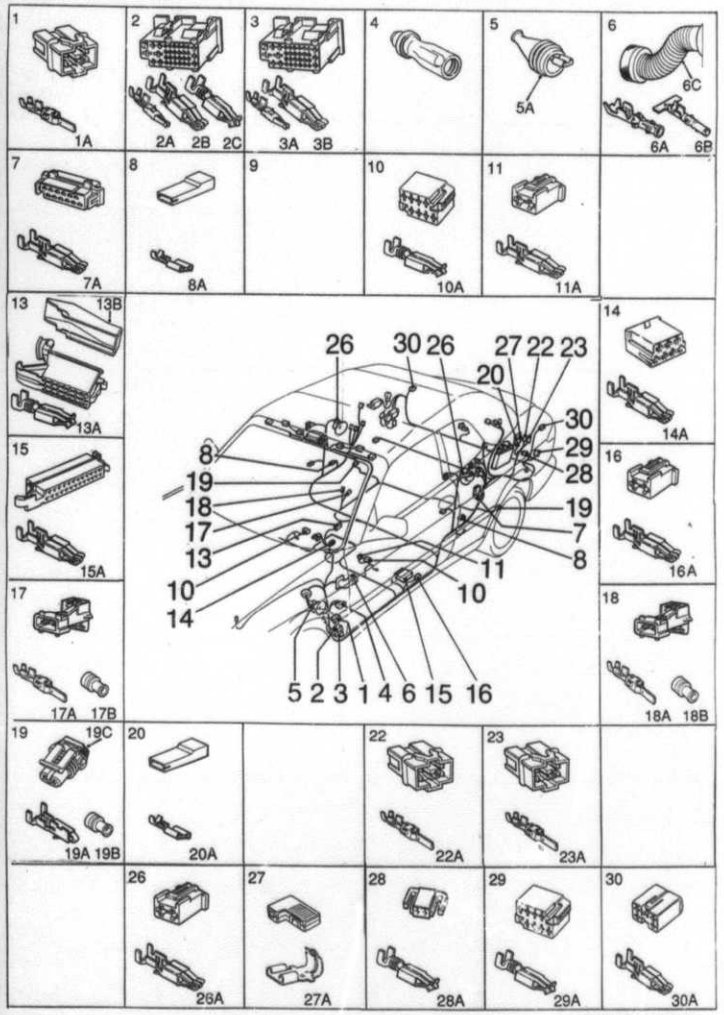

F8577 AAC94

3 -I14

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0732	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	91 23 548			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						front seat	framstol	
0040	11A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	13	40 60 893			1	Contact housing	Kontakthus	5
0070						19-pole, female	19-polig, hylsa	
0080						window lift	fönsterhiss	
0090	13A	91 20 957		AREA 1,0-2,5 MM2	15	Cable terminal	Kabelsko	8
0100	13A	91 20 791		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110	13B	40 67 617			1	Cover	Kåpa	4
0120								
0130	14	91 23 381			1	Contact housing	Kontakthus	4
0140						7-pole, female	7-polig, hylsa	
0150						interior illum.	innerbelysning	
0160	14A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0170								
0180	15	42 01 323			1	Connector housing	Kontakthus	4
0190						25-pole, female	25-polig, hylsa	
0200						theft alarm	stöldlarm	
0210	15A	91 20 957		AREA 1,0-2,5 MM2	25	Cable terminal	Kabelsko	8
0220								
0230	16	91 23 548			1	Contact housing	Kontakthus	4
0240						2-pole, female	2-polig, hylsa	
0250						connection	skarv	
0260	16A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	17	41 13 254			1	Connector housing	Kontakthus	8
0290						2-pole, male	2-polig, stift	
0300						fuel pump	bränslepump	
0310	17A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0320	17B	43 52 928		AREA 2,7-2,9 MM2	2	Seal	Tätning	5
0330								
0340	18	41 13 254			1	Connector housing	Kontakthus	8
0350						2-pole, male	2-polig, stift	
0360						fuel pump	bränslepump	
0370	18A	41 15 192		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0380	18B	40 61 966		AREA 1,2-2,0 MM2	2	Seal	Tätning	5
0390								
0400	19	42 03 428			1	Connector housing	Kontakthus	4
0410						2-pole, female	2-polig, hylsa	
0420						sensor, ABS	sensor, ABS	
0430	19A	44 18 505		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0440	19B	44 19 305			1	Seal	Tätning	5
0450						red	röd	
0460	19B	44 19 313			1	Seal	Tätning	5
0470						blue	blå	
0480	19C	42 01 232			1	Locking	Låsning	4
0490								
0500	20	85 16 916			1	Insulation	Isolering	4
0510						1-pole, female	1-polig, hylsa	
0520						boot lighting	bagagerumsbelysning	
0530	20A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

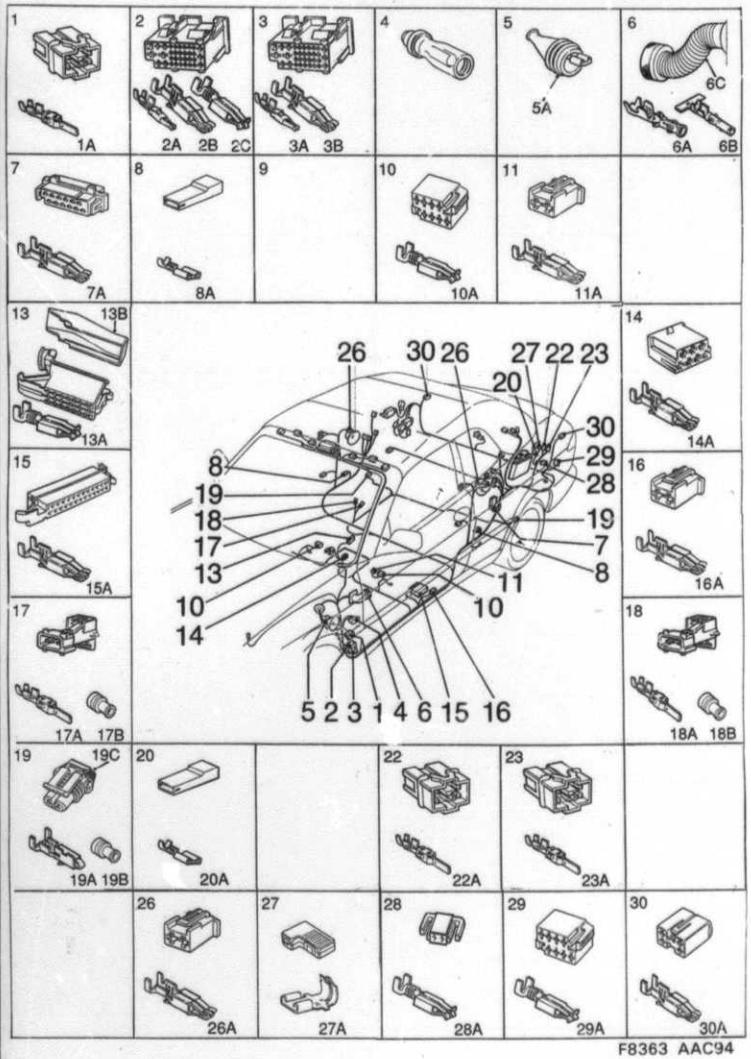

F8363 AAC94

3-I16

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0734	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	22	41 17 362			1	Connector housing	Kontakthus	4
0020						4-pole, male	4-polig, stift	
0030						connection	skarv	
0040	22A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0050								
0060	23	41 17 263			1	Connector housing	Kontakthus	4
0070						4-pole, male	4-polig, stift	
0060						connection	skarv	
0090	23A	41 15 077		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0210	26	91 23 548			1	Contact housing	Kontakthus	4
0220						2-pole, female	2-polig, hylsa	
0230						loudspeaker	högtalare	
0240	26A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0250								
0260	27	44 89 076			1	Connector housing	Kontakthus	4
0270						1-pole, female	1-polig, hylsa	
0280						boot lighting	bagagerumsbelysning	
0290	27A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0300								
0310	28	91 24 157			1	Contact housing	Kontakthus	4
0320						2-pole, female	2-polig, hylsa	
0330						antenna	antenn	
0340	28A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0350								
0360	29	91 24 090			1	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380						trailer contact	släpvagnskontakt	
0390	29A	91 20 791		AREA 2,5-4,0 MM2	7	Cable terminal	Kabelsko	8
0400								
0410	30	91 23 555			1	Contact housing	Kontakthus	4
0420						5-pole, female	5-polig, hylsa	
0430						tail lamp	baklykta	
0440	30A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**2-J02,3-A02**
4	**Transmission**	**4-A02**
5	**Brakes**	**4-D02**
6	**Front assembly, Steering**	**4-F02**
7	**Suspension, Wheels**	**4-G02**
8A	**Body, external**	**5-A02**
8B	**Body, internal**	**5-H02**
8C	**Body, heating and ventilation**	**6-A02**
8D	**Tool, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**2-J06**
Cable terminals	**3-J14**

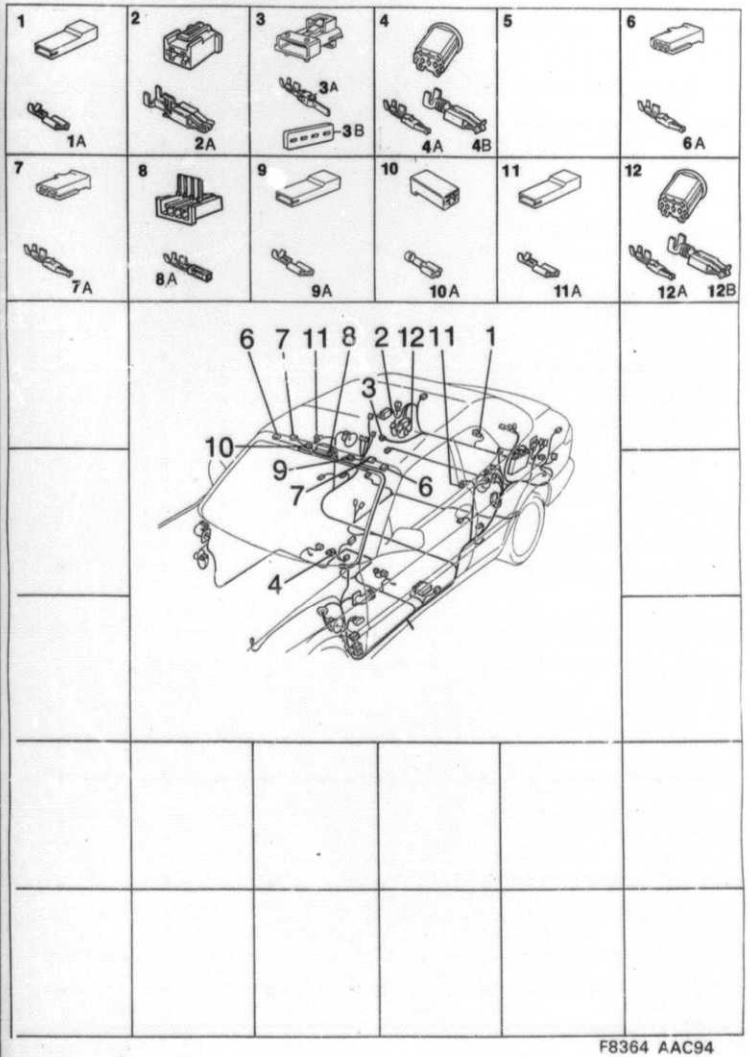

F8364 AAC94

3-I18

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0736	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 16 916			1	Insulation	Isolering	4
0020						1-pole, female	1-polig, hylsa	
0030						contact	kontakt	
0040						boot	bagagerum	
0050	1A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0060								
0070	2	91 23 548			1	Contact housing	Kontakthus	4
0080						2-pole, female	2-polig, hylsa	
0090						tank hatch	tanklucka	
0100	2A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0110								
0120	3	41 13 650			1	Connector housing	Kontakthus	8
0130						4-pole, male	4-polig, stift	
0140						pressure sensor	tryckgivare	
0150	3A	41 15 192		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0160	3B	41 13 759			1	Seal	Tätning	5
0170								
0180	4	44 11 518			1	Connector housing	Kontakthus	
0190						10-pole, female	10-polig, hylsa	
0200						connection	skarv	
0210	4A	44 66 801		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0220	4B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0230								
0240	6	41 13 007			1	Connector housing	Kontakthus	4
0250						3-pole, female	3-polig, hylsa	
0260						lock	lås	
0270	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0280								
0290	7	41 13 007			1	Connector housing	Kontakthus	4
0300						3-pole, female	3-polig, hylsa	
0310						vanity mirror	makeupspegel	
0320	7A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0330								
0340	8	45 37 411			1	Connector housing	Kontakthus	4
0350						4-pole, female	4-polig, hylsa	
0360						interior illum.	innerbelysning	
0370	8A	45 38 310		AREA 0,2-0,56 MM2	4	Cable terminal	Kabelsko	5
0380								
0390	9	85 16 916			1	Insulation	Isolering	4
0400						1-pole, female	1-polig, hylsa	
0410						interior illum.	innerbelysning	
0420	9A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0430								
0440	10	85 33 184			1	Contact housing	Kontakthus	4
0450						1-pole, female	1-polig, hylsa	
0460						interior illum.	innerbelysning	
0470	10A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0480								
0490	11	85 16 916			1	Insulation	Isolering	4
0500						1-pole, female	1-polig, hylsa	
0510						interior illum.	innerbelysning	
0520	11A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0530								
0540	12	44 11 518			1	Connector housing	Kontakthus	
0550						10-pole, female	10-polig, hylsa	
0560						tonneau cover	suflettavtäckning	
0570	12A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0580	12B	91 20 957		AREA 1,0-2,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

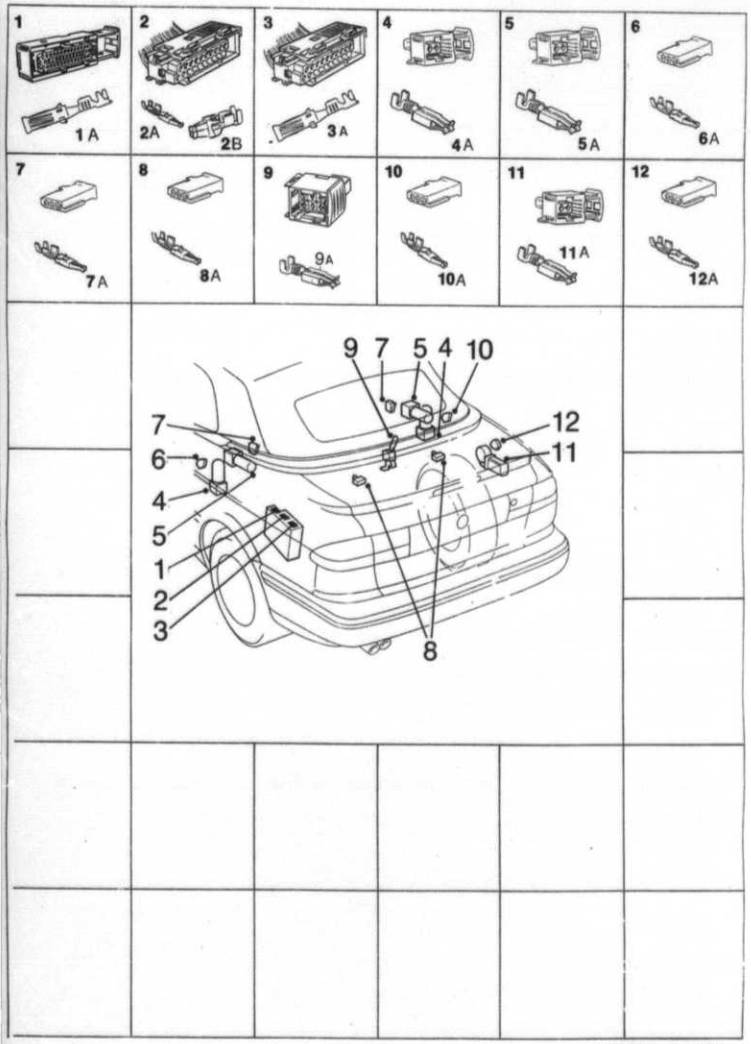

F8365 AAC94

3-120

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0738	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 89 092			1	Connector housing	Kontakthus	4
0020						20-pole, female	20-polig, hylsa	
0030						electronic unit	elektronikenhet	
0040	1A	44 64 293		AREA 1,0-2,5 MM2	12	Cable terminal	Kabelsko	5
0050								
0060	2	41 15 002			1	Connector housing	Kontakthus	4
0070						42-pole, female	42-polig, hylsa	
0080						electronic unit	elektronikenhet	
0090	2A	41 15 499		AREA 0,5-1,0 MM2	23	Cable terminal	Kabelsko	8
0100	2B	91 20 957		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0110								
0120	3	44 08 910			1	Connector housing	Kontakthus	4
0130						20-pole, female	20-polig, hylsa	
0140						electronic unit	elektronikenhet	
0150	3A	44 64 293		AREA 1,0-2,5 MM2	13	Cable terminal	Kabelsko	5
0160								
0170	4	41 13 205			1	Connector housing	Kontakthus	8
0180						2-pole, female	2-polig, hylsa	
0190						motor	motor	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0210								
0220	5	41 13 205			1	Connector housing	Kontakthus	8
0230						2-pole, female	2-polig, hylsa	
0240						motor	motor	
0250						bow 5	båge 5	
0260	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0270								
0280	6	41 13 007			1	Connector housing	Kontakthus	4
0290						3-pole, female	3-polig, hylsa	
0300						potentiometer	potentiometer	
0310						motor	motor	
0320	6A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0330								
0340	7	41 13 007			1	Connector housing	Kontakthus	4
0350						3-pole, female	3-polig, hylsa	
0360						microswitch	mikrobrytare	
0370						lock	lås	
0380						tonneau cover	suflettavtäckning	
0390	7A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0400								
0410	8	41 13 007			1	Connector housing	Kontakthus	4
0420						3-pole, female	3-polig, hylsa	
0430						microswitch	mikrobrytare	
0440						folding top	sufflett	
0450	8A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0460								
0470	9	41 13 809			1	Connector housing	Kontakthus	4
0480						6-pole, female	6-polig, hylsa	
0490						by-pass	by-pass	
0500						bow 5	båge 5	
0510	9A	91 20 957		AREA 1,0-2,5 MM2	6	Cable terminal	Kabelsko	8
0520								
0530	10	41 13 007			1	Connector housing	Kontakthus	4
0540						3-pole, female	3-polig, hylsa	
0550						potentiometer	potentiometer	
0560						bow 5	båge 5	
0570	10A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0580								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

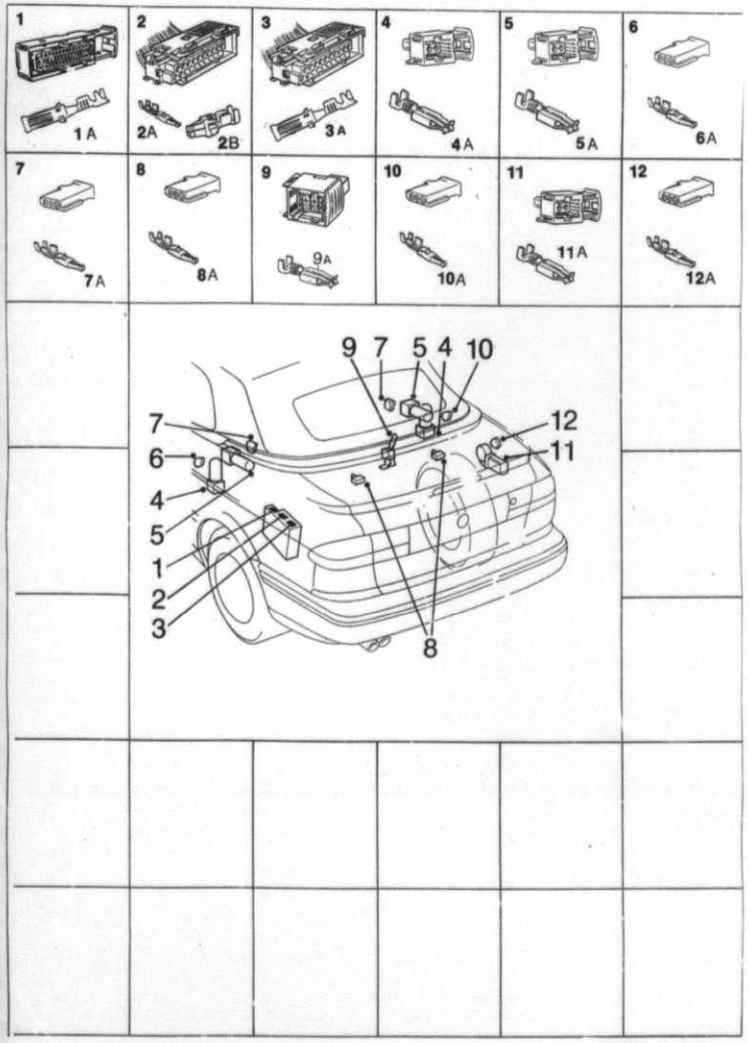

F8366 AAC94

3-122

Contact housing etc
Rear, CV
1997-

Kontakthus etc
Bakre, CV
1997-


0740	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	41 13 411			1	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						motor	motor	
0040						tonneau cover	suflettavtäckning	
0050	11A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	12	41 13 007			1	Connector housing	Kontakthus	4
0080						3-pole, female	3-polig, hylsa	
0090						potentiometer	potentiometer	
0100						tonneau cover	suflettavtäckning	
0110	12A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

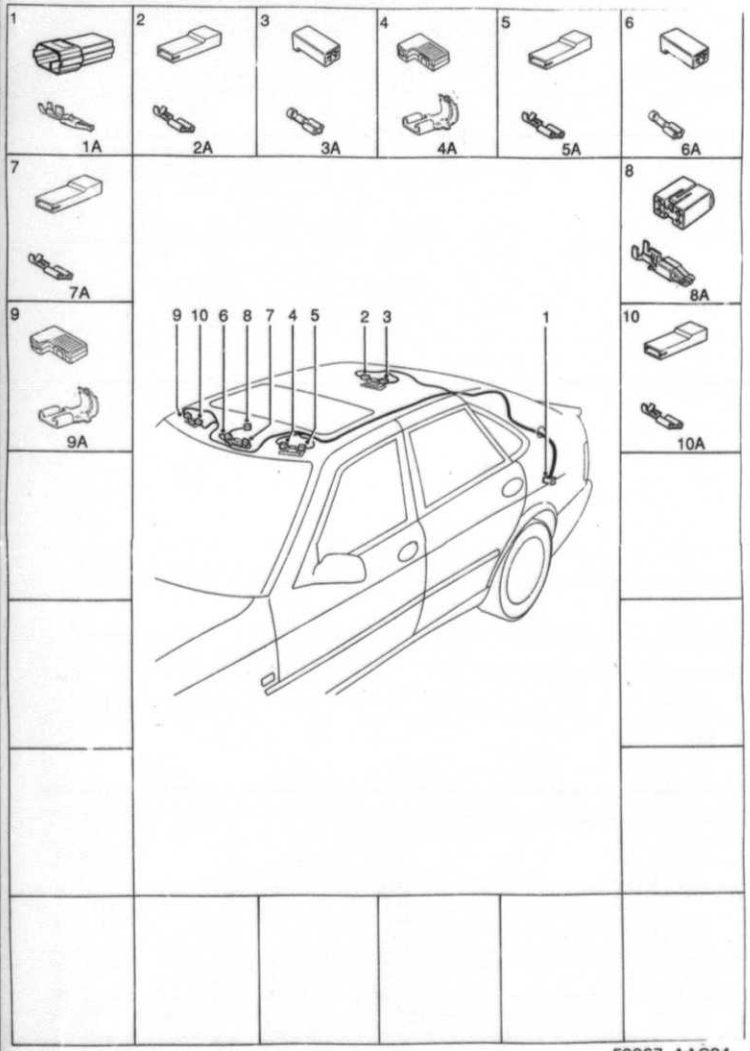

F8367 AAC94

3-I24

Contact housing etc
Roof
1997-

Kontakthus etc
Tak
1997-


0742	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, female	10-polig, hylsa	
0030						connection	skarv	
0040	1A	41 15 499		AREA 0,5-1,0 MM2	8	Cable terminal	Kabelsko	8
0050	1B	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0060								
0070	2	85 16 916			1	Insulation	Isolering	4
0080						1-pole, female	1-polig, hylsa	
0090						interior illum.	innerbelysning	
0100	2A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0110								
0120	3	85 33 184			1	Contact housing	Kontakthus	4
0130						1-pole, female	1-polig, hylsa	
0140						interior illum.	innerbelysning	
0150	3A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0160								
0170	4	85 16 916			1	Insulation	Isolering	4
0180						1-pole, female	1-polig, hylsa	
0190						vanity mirror	makeupspegel	
0200	4A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0210								
0220	5	85 16 916			1	Insulation	Isolering	4
0230						1-pole, female	1-polig, hylsa	
0240						vanity mirror	makeupspegel	
0250	5A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0260								
0270	6	85 33 184			1	Contact housing	Kontakthus	4
0280						1-pole, female	1-polig, hylsa	
0290						interior illum.	innerbelysning	
0300	6A	85 82 439		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0310								
0320	7	85 16 916			1	Insulation	Isolering	4
0330						1-pole, female	1-polig, hylsa	
0340						vanity mirror	makeupspegel	
0350	7A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						sun roof	soltak	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	9	44 89 076			1	Connector housing	Kontakthus	4
0430						1-pole, female	1-polig, hylsa	
0440						vanity mirror	makeupspegel	
0450	9A	44 89 084		AREA 0,5-1,43 MM2	1	Cable terminal	Kabelsko	5
0460								
0470	10	85 16 916			1	Insulation	Isolering	4
0480						1-pole, female	1-polig, hylsa	
0490						vanity mirror	makeupspegel	
0500	10A	44 09 801		AREA 0,5-1,0 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

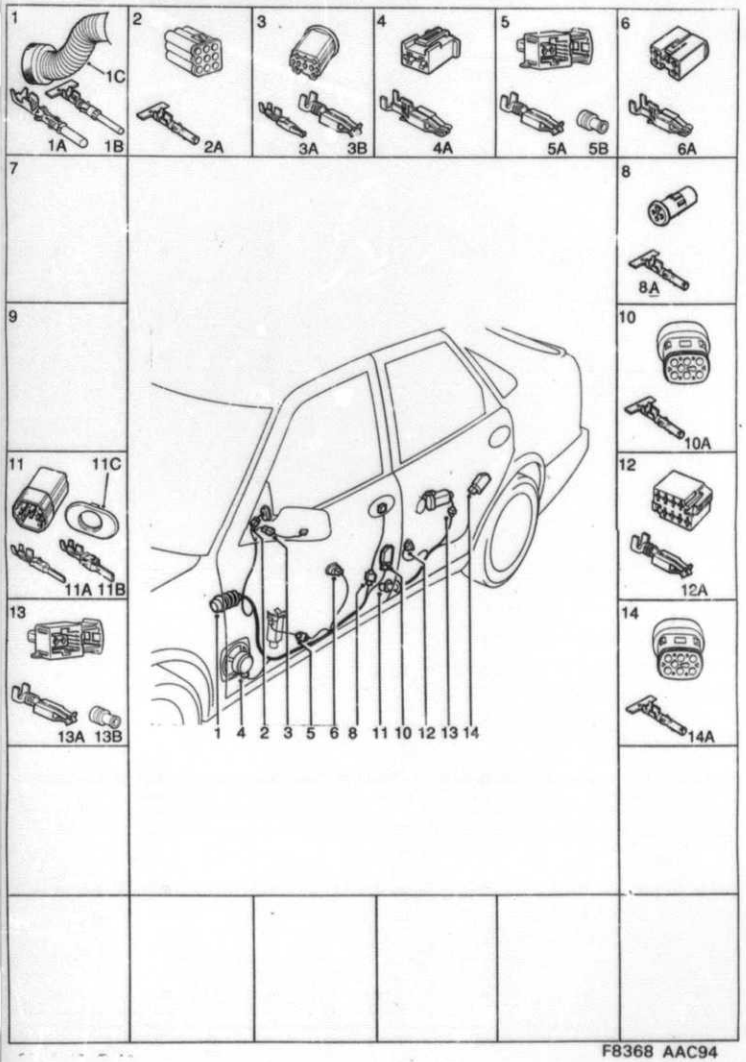

F8368 AAC94

Contact housing etc

3 -J02

Doors

1997-

Kontakthus etc

Dörrar

1997-


0744	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 03 261			1	Connector housing	Kontakthus	4
0020						26-pole, male	26-polig, stift	
0030						connection	skarv	
0040	1A	44 64 228		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5
0050	1B	44 09 785		AREA 1,0-2,5 MM2	21	Cable terminal	Kabelsko	5
0060	1C	42 22 360			1	Protection	Skydd	4
0070								
0080	2	42 01 208			1	Connector housing	Kontakthus	4
0090						9-pole, female	9-polig, hylsa	
0100						switch	strömställare	
0110						rear view mirror	backspegel	
0120	2A	44 09 728		AREA 1,0-2,5 MM2	9	Cable terminal	Kabelsko	5
0130								
0140	3	44 11 518			1	Connector housing	Kontakthus	
0150						10-pole, female	10-polig, hylsa	
0160						rear view mirror	backspegel	
0170	3A	41 15 499		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	8
0180	3B	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0190								
0200	4	91 23 548			1	Contact housing	Kontakthus	4
0210						2-pole, female	2-polig, hylsa	
0220						loudspeaker	högtalare	
0230	4A	91 20 957			2	Cable terminal	Kabelsko	8
0240								
0250	5	41 13 411			1	Connector housing	Kontakthus	4
0260						2-pole, female	2-polig, hylsa	
0270						window lift	fönsterhiss	
0280	5A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0290	5B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0300								
0310	6	91 23 555			1	Contact housing	Kontakthus	4
0320						4-pole, female	4-polig, hylsa	
0330						luggage compartment lock	bagagerumslås	
0340	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0350								
0360	8	42 24 903			1	Connector housing	Kontakthus	4
0370						3-pole, female	3-polig, hylsa	
0380						microswitch	mikrobrytare	
0390	8A	44 09 728		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

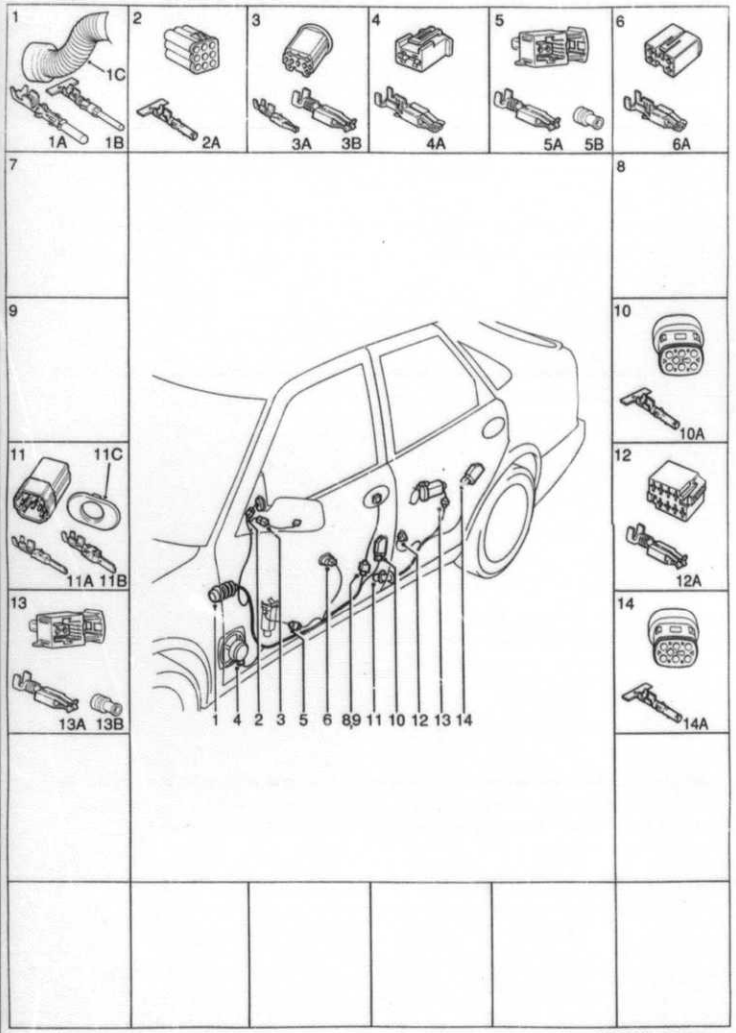

F8369 AAC94

Contact housing etc

3-J04

Doors

1997-

Kontakthus etc

Dörrar

1997-


0746	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	10	47 33 309			1	Connector housing	Kontakthus	
0011						6-pole, female	6-polig, hylsa	
0012						motor	motor	
0013						central lock	centrallås	
0014	10A	44 09 728		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	5
0015								
0019	11	44 10 510			1	Connector housing	Kontakthus	4
0020						10-pole, male	10-polig, stift	
0030						connection	skarv	
0040	11A	41 15 457		AREA 0,5-1,0 MM2	7	Cable terminal	Kabelsko	5
0050	11B	41 15 077		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0060	11C	44 32 902			1	Protection	Skydd	4
0070								
0080	12	91 24 090			1	Contact housing	Kontakthus	4
0090						8-pole, female	8-polig, hylsa	
0100						switch	strömställare	
0110						window lift	fönsterhiss	
0120	12A	91 20 791		AREA 1,0-2,5 MM2	5	Cable terminal	Kabelsko	8
0130								
0140	13	41 13 411			1	Connector housing	Kontakthus	4
0150						2-pole, female	2-polig, hylsa	
0160						window lift	fönsterhiss	
0170	13A	43 54 171		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0180	13B	43 54 387		AREA 3,4-3,7 MM2	2	Seal	Tätning	5
0190								
0200	14	42 01 190			1	Connector housing	Kontakthus	4
0210						6-pole, female	6-polig, hylsa	
0220						motor	motor	
0230						central lock	centrallås	
0240	14A	44 09 728		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

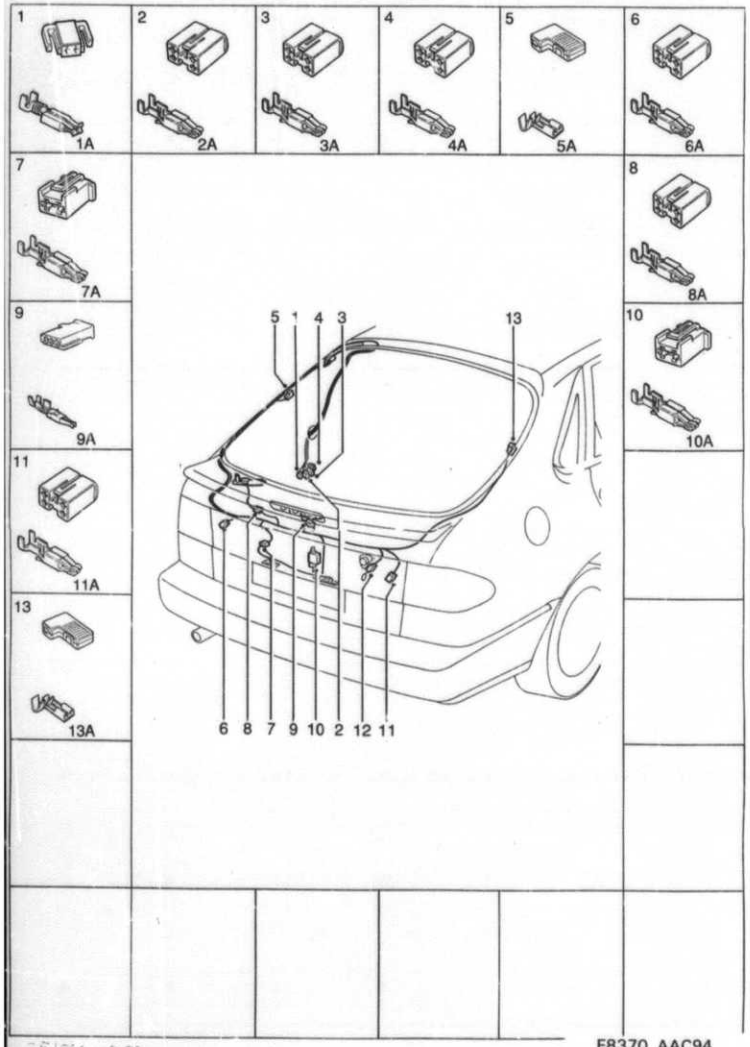

Contact housing etc

3 –J06

Boot lid, 3D, 5D

1997-

Kontakthus etc

Baklucka, 3D, 5D

1997-


0748	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 157			1	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030						connection	skarv	
0040	1A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	91 23 555			1	Contact housing	Kontakthus	4
0070						4-pole, female	4-polig, hylsa	
0080						connection	skarv	
0090	2A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0100								
0110	3	40 61 503			1	Contact housing	Kontakthus	4
0120						4-pole, female	4-polig, hylsa	
0130						connection	skarv	
0140	3A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						connection	skarv	
0190	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0200								
0210	5	85 21 692			1	Contact housing	Kontakthus	4
0220						1-pole, female	1-polig, hylsa	
0230						rear window	bakruta	
0240	5A	85 22 526		AREA0,5-1,5 MM2	1	Cable terminal	Kabelsko	5
0250								
0260	6	91 23 555			1	Contact housing	Kontakthus	4
0270						4-pole, female	4-polig, hylsa	
0280						reverse lamp	backlampa	
0290						rear fog light	dimbaklykta	
0300	6A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						licence plate light	nummerskyltlykta	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						rear window wiper	bakrutetorkare	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0410								
0420	9	41 13 007			1	Connector housing	Kontakthus	4
0430						3-pole, female	3-polig, hylsa	
0440						high mounted stop light	högt monterad stopplykta	
0450	9A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0460								
0470	10	91 23 548			1	Contact housing	Kontakthus	4
0480						luggage compartment lock	bagagerumslås	
0490	10A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0500								
0510	11	91 23 555			1	Contact housing	Kontakthus	4
0520						4-pole, female	4-polig, hylsa	
0530						reverse lamp	backlampa	
0540	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

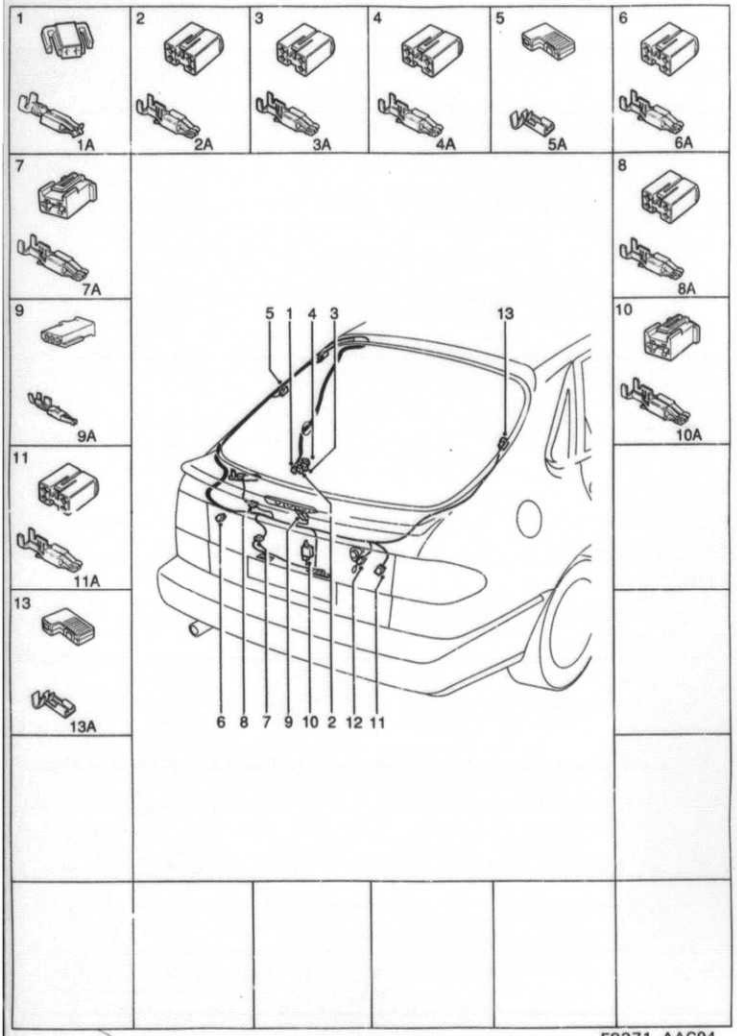

F8371 AAC94

3-J08

Contact housing etc
Boot lid, 3D, 5D
1997-

Kontakthus etc
Baklucka, 3D, 5D
1997-


0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	85 21 692			1	Contact housing	Kontakthus	4
0020						1-pole, female	1-polig, hylsa	
0030						rear window	bakruta	
0040	13A	85 22 526		AREA 0,5-1,5 MM2	1	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

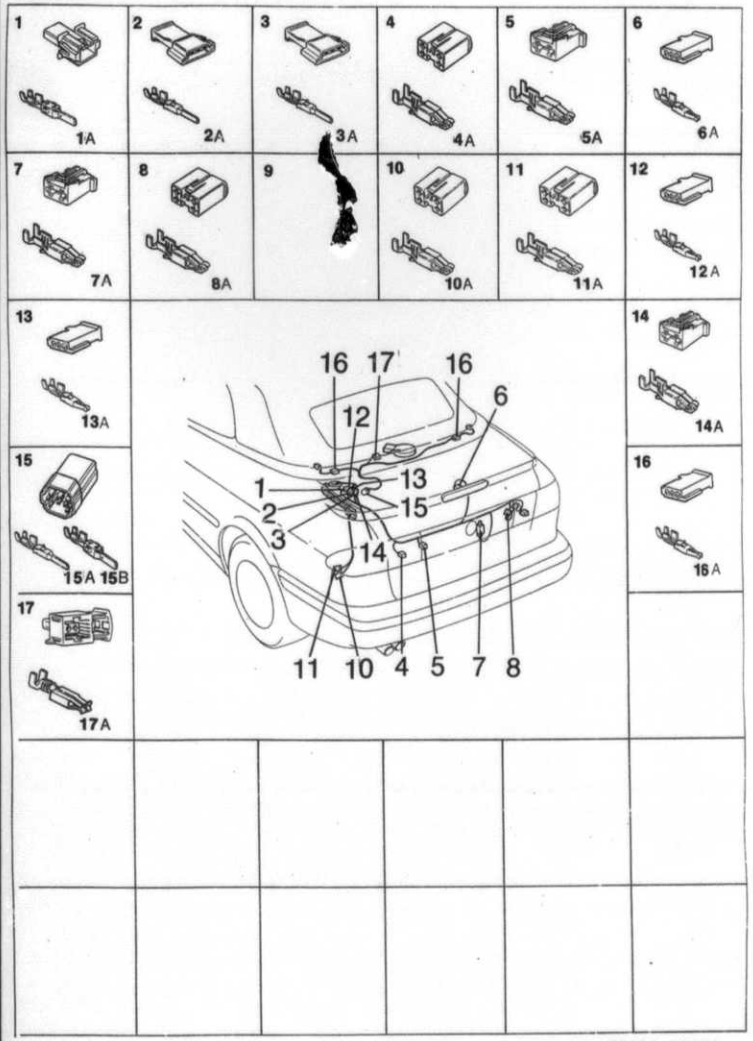

F8372 AAC94

3-J10

Contact housing etc
Boot lid, CV
1997-

Kontakthus etc
Baklucka, CV
1997-


0752	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 164			1	Connector housing	Kontakthus	4
0020						2-pole, male	2-polig, stift	
0030						connection	skarv	
0040	1A	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0050								
0060	2	41 13 056			1	Connector housing	Kontakthus	4
0070						3-pole, male	3-polig, stift	
0080						connection	skarv	
0090	2A	41 15 457		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	5
0100								
0110	3	41 13 056			1	Connector housing	Kontakthus	4
0120						3-pole, male	3-polig, stift	
0130						connection	skarv	
0140	3A	41 15 457		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	5
0150								
0160	4	91 23 555			1	Contact housing	Kontakthus	4
0170						4-pole, female	4-polig, hylsa	
0180						reverse lamp	backlampa	
0190						rear fog light	dimbaklykta	
0200	4A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0210								
0220	5	91 20 957			1	Cable terminal	Kabelsko	8
0230						2-pole, female	2-polig, hylsa	
0240						licence plate light	nummerskyltlykta	
0250	5A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0260								
0270	6	41 13 007			1	Connector housing	Kontakthus	4
0280						3-pole, female	3-polig, hylsa	
0290						high mounted stop light	högt monterad stopplykta	
0300	6A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8
0310								
0320	7	91 23 548			1	Contact housing	Kontakthus	4
0330						2-pole, female	2-polig, hylsa	
0340						luggage compartment lock	bagagerumslås	
0350	7A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0360								
0370	8	91 23 555			1	Contact housing	Kontakthus	4
0380						4-pole, female	4-polig, hylsa	
0390						reverse lamp	backlampa	
0400	8A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0410								
0420	10	91 23 555			1	Contact housing	Kontakthus	4
0430						4-pole, female	4-polig, hylsa	
0440						connection	skarv	
0450	10A	91 20 957		AREA 1,0-2,5 MM2	4	Cable terminal	Kabelsko	8
0460								
0470	11	40 61 503			1	Contact housing	Kontakthus	4
0480						4-pole, female	4-polig, hylsa	
0490						connection	skarv	
0500	11A	91 20 957		AREA 1,0-2,5 MM2	3	Cable terminal	Kabelsko	8
0510								
0520	12	41 13 007			1	Connector housing	Kontakthus	4
0530						3-pole, female	3-polig, hylsa	
0540						connection	skarv	
0550	12A	41 15 499		AREA 0,5-1,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

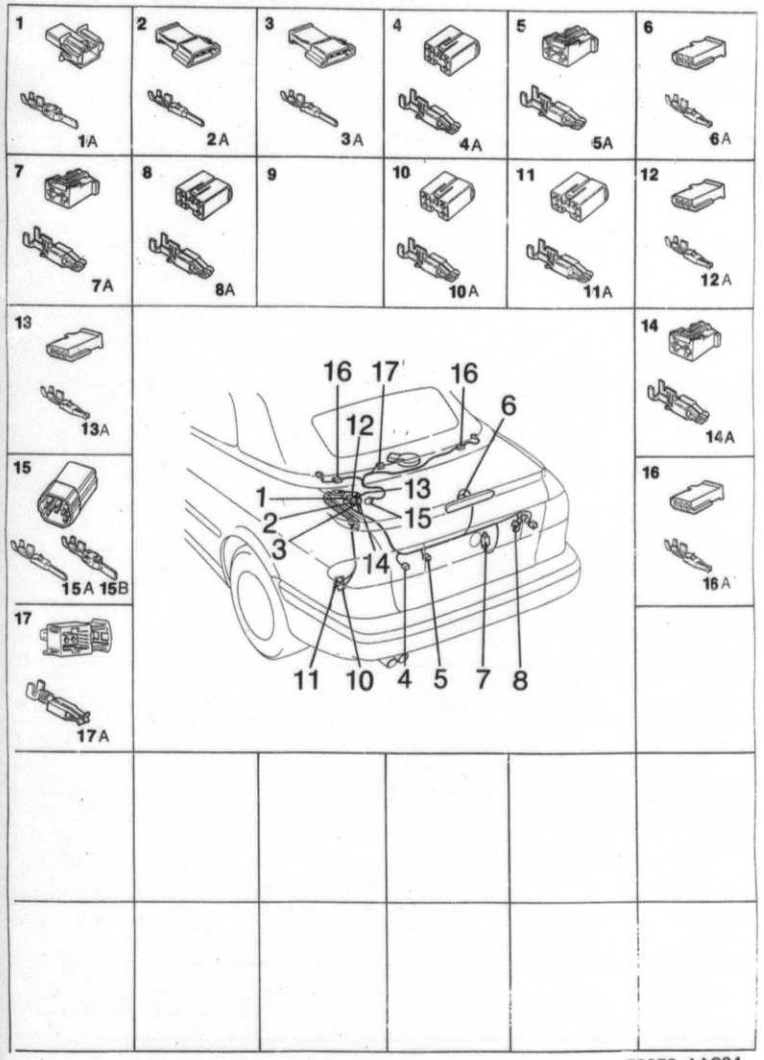

F8373 AAC94

3-J12

Contact housing etc

Boot lid, CV

1997-

Kontakthus etc

Baklucka, CV

1997-


0754	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	13	41 13 007			1	Connector housing	Kontakthus	4
0020						3-pole, female	3-polig, hylsa	
0030						connection	skarv	
0040	13A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0050								
0060	14	91 23 548			1	Contact housing	Kontakthus	4
0070						2-pole, female	2-polig, hylsa	
0080						connection	skarv	
0090	14A	91 20 957		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0100								
0110	15	44 10 510			1	Connector housing	Kontakthus	4
0120						10-pole, male	10-polig, stift	
0130						connection	skarv	
0140	15A	41 15 457		AREA 0,5-1,0 MM2	4	Cable terminal	Kabelsko	5
0150	15B	41 15 077		AREA 1,0-2,5 MM2	2	Cable terminal	Kabelsko	8
0160								
0170	16	41 13 007			1	Connector housing	Kontakthus	4
0180						3-pole, female	3-polig, hylsa	
0190						switch	brytare	
0200						bow latch	bågregel	
0210	16A	41 15 499		AREA 0,5-1,0 MM2	3	Cable terminal	Kabelsko	8
0220								
0230	17	41 13 403			1	Connector housing	Kontakthus	8
0240						2-pole, female	2-polig, hylsa	
0250						motor	motor	
0260						bow latch	bågregel	
0270	17A	91 20 791		AREA 2,5-4,0 MM2	2	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

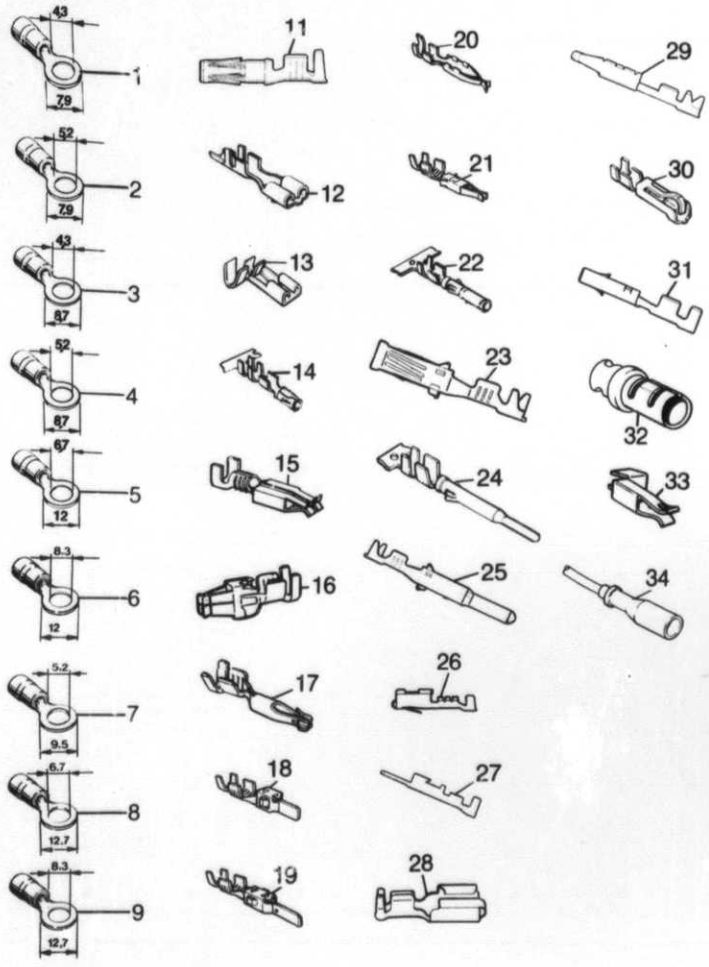

F5002 AAC94

Contact housing etc

3-J14 Cable terminal 1994

Kontakthus etc

Ledningssko 1994

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		76), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		76), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		77), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		77), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		77), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		77)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		78), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		78), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		78), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		79)	X	Cable terminal	Kabelsko	5
0110								
0120	11	44 11 278		75), CONTACT HOUSING 4411260	X	Cable terminal	Kabelsko	5
0130								
0140	12	44 09 801		80), HORN THEFT ALARM, OIL PRESSURE, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0150								
0160								
0170	12	44 64 442		80), CONTACT HOUSING 4201315, 4203733,4224457	X	Cable terminal	Kabelsko	5
0180								
0190				4411286, 8503229				
0200	12	85 22 575		81), CONTACT HOUSING 8378630	X	Cable harness	Ledningsnät	5
0210								
0220	12	85 04 797		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0230								
0240	12	85 82 439		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0250								
0260	13	85 22 526		82), LIGHT IGNITION, CONTACT HOUSING 8521692	X	Cable terminal	Kabelsko	5
0270								
0280	14	85 82 090		82), SWITCH HAND BRAKE	X	Cable terminal	Kabelsko	5
0290	15	91 20 791		83), EL-DISTRIBUTION BOX CONTACT HOUSING 4060893, 4173803,4203717	X	Cable terminal	Kabelsko	8
0300								
0310								
0320				4224317, 9124090,9124157				
0330	16	91 20 957		79), EL-DISTRIBUTION BOX CONTACT HOUSING 4113205, 4114005,4176616	X	Cable terminal	Kabelsko	8
0340								
0350								
0360				4201323, 4203618,4222311				
0370				4224598, 4466462,9123381				
0380				9123399, 9565045				
0390	16	43 54 171		79), CONTACT HOSING 4113403, 4113411	X	Cable terminal	Kabelsko	8
0400								
0410	16	40 61 586		79), CONTACT HOUSING 4113205, 4113601,4113809	X	Cable terminal	Kabelsko	8
0420								
0430				4114005, 4178414,4432316				
0440				4432324, 4432357				
0450	16	44 64 343		84), EL-DISTRIBUTION BOX CONTACT HOUSING 4230181	X	Cable terminal	Kabelsko	8
0460								
0470								
0480	17	40 63 087		79), CONTACT HOUSING 4203618	X	Cable terminal	Kabelsko	5
0490								
0500	18	41 15 580		79), CONTACT HOUSING 4117560, 4173852	X	Cable terminal	Kabelsko	5
0510								
0520	19	41 15 457		80), CONTACT HOUSING 4113056, 4173852,4410510	X	Cable terminal	Kabelsko	5
0530								


75. Area 0,75-1,5 MM2.
76. Area 0,3-1,5 MM2.
77. Area 1,0-2,6 MM2.
78. Area 2,7-6,6 MM2.
79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
81. Area 0,5-1,4 MM2.
82. Area 0,5-1,5 MM2.
83. Area 2,5-4,0 MM2.
84. Area 4,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

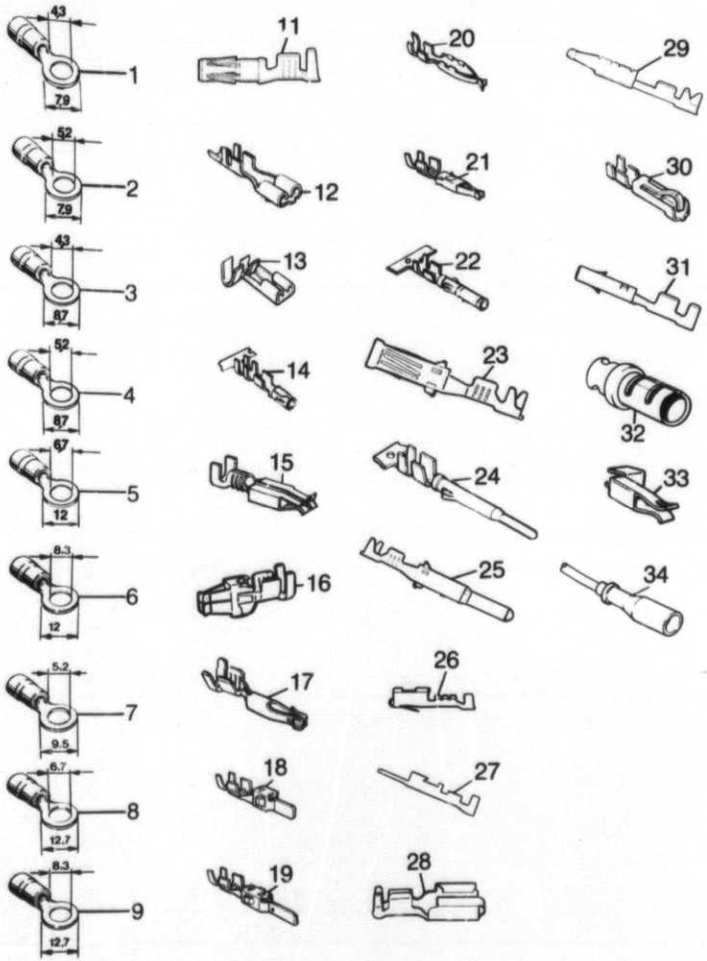

F5002 AAC94

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	19	41 15 077		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0550				4410510, 4114054,4117164				
0560				4117263, 4117362,4117461				
0570				4173852				
0580	19	41 15 192		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0590				4113254, 4114054,4224887				
0600	20	40 63 970		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0610				4060869, 4224580,9565045				
0620	21	41 15 499		80), CONTACT HOSING	X	Cable terminal	Kabelsko	8
0630				4113007, 4115408,4173803				
0640				4176616, 4223624,4224606				
0650				4411518, 4466462				
0660	22	95 25 817		85), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0670				9525809				
0680	22	44 09 728		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0690				4201190, 4201208,4203253				
0700	23	44 64 293		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0710				4203253				
0720	24	44 09 785		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0730				4203261				
0740	25	44 64 228		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0750				4203261				
0760	26	44 88 458		86), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0770				4201273				
0780	26	44 88 151		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0790				4411740				
0800	26	44 18 505		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0810				4201224, 4203378,4203428				
0820				4203444, 4203477,4203501				
0830				4203535, 4223568				
0840	27	44 18 489		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0850				4203592				
0860	28	44 64 400		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0870				8544363, 8574949				
0880	29	44 66 736		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0890				9565045				
0900	30	42 24 515		87), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0910				4409165, 4409181,4409199				
0920	31	44 12 961		84), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0930				4463014				
0940	32	95 09 746		CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0950				4408894				
0960	33	95 52 191		CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0970				9552183				
0980	34	85 47 804		83), SIDE INDICATOR LAMP	X	Connector	Skarvstycke	5
0990				CONTACT HOUSING				
1000				9503319, 9503418,9519679				


79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
83. Area 2,5-4,0 MM2.
84. Area 4,0-6,0 MM2.
85. Area 0,2-0,56 MM2.
86. Area 0,35-0,5 MM2.
87. Area 0,2-0,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

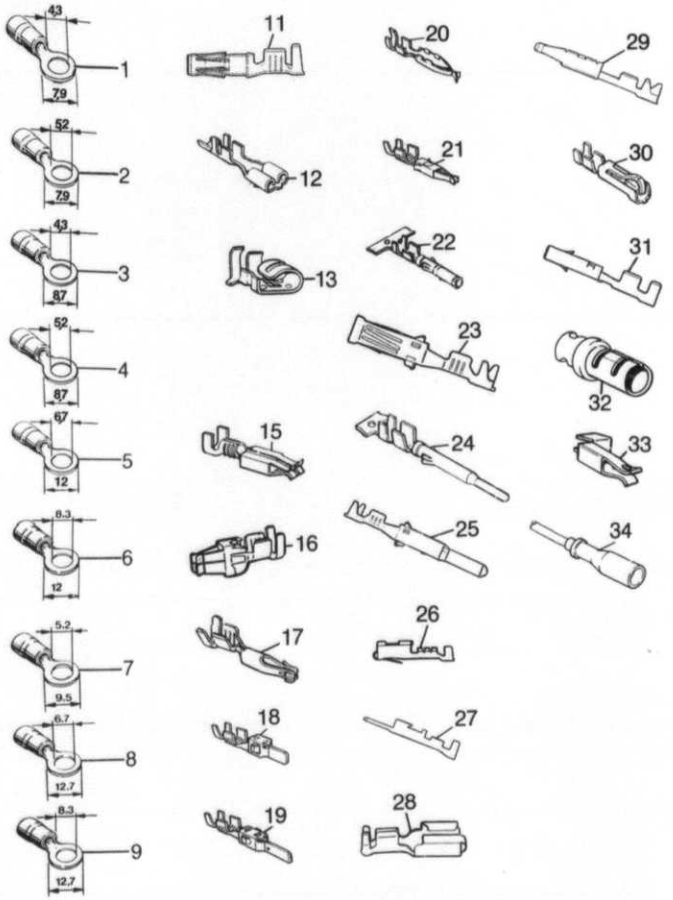

F7385 AAC94

Contact housing etc

3-J18 *Cable terminal* *1995*

Kontakthus etc

Ledningssko *1995*

2010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		76), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		76), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		77), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		77), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		77), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		77)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		78), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		78), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		78), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		79)	X	Cable terminal	Kabelsko	5
0110								
0120	11	44 11 278		75), CONTACT HOUSING 4411260	X	Cable terminal	Kabelsko	5
0130								
0140	12	44 09 801		80), HORN THEFT ALARM, OIL PRESSURE, CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0150								
0160								
0170	12	44 64 442		80), CONTACT HOUSING 4201315, 4203733	X	Cable terminal	Kabelsko	5
0180								
0190	12	85 22 575		81), CONTACT HOUSING 8378630	X	Cable harness	Ledningsnät	5
0200								
0210	12	85 04 797		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0220								
0230	12	*85 82 447*		76), CONTACT HOUSING 8533184 NLS - USE 8522567	X	Cable terminal	Kabelsko	5
0240								
0250	12	85 82 439		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0260								
0270	13	44 89 084		89), CONTACT HOUSING 4489076	X	Cable terminal	Kabelsko	5
0280								
0290	15	43 50 526		80), CONTACT HOUSING 4113601, 4466462	X	Cable terminal	Kabelsko	8
0300								
0310	15	91 20 791		83), EL-DISTRIBUTION BOX CONTACT HOUSING 4060893, 4113403,4173803	X	Cable terminal	Kabelsko	8
0320								
0330								
0340				4224168, 4224317,9124090				
0350				9124157				
0360	16	91 20 957		79), EL-DISTRIBUTION BOX CONTACT HOUSING 4113205, 4114005,4115002	X	Cable terminal	Kabelsko	8
0370								
0380								
0390				4115408, 4176616,4178414				
0400				4201323, 4203618,4222311				
0410				9123381, 9123399,9565045				
0420	16	43 54 171		79), CONTACT HOSING 4113403, 4113411	X	Cable terminal	Kabelsko	8
0430								
0440	16	40 61 586		79), CONTACT HOUSING 4113205, 4113601,4113809	X	Cable terminal	Kabelsko	8
0450								
0460				4114005, 4178414,4432316				
0470				4432324, 4432357,4433439				
0480				4489647				
0490	16	44 64 343		84), EL-DISTRIBUTION BOX CONTACT HOUSING 4230181	X	Cable terminal	Kabelsko	8
0500								
0510								


75. Area 0,75-1,5 MM2.
76. Area 0,3-1,5 MM2.
77. Area 1,0-2,6 MM2.
78. Area 2,7-6,6 MM2.
79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
81. Area 0,5-1,4 MM2.
82. Area 0,5-1,5 MM2.
83. Area 2,5-4,0 MM2.
84. Area 4,0-6,0 MM2.
89. Area 0,5-1,43 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

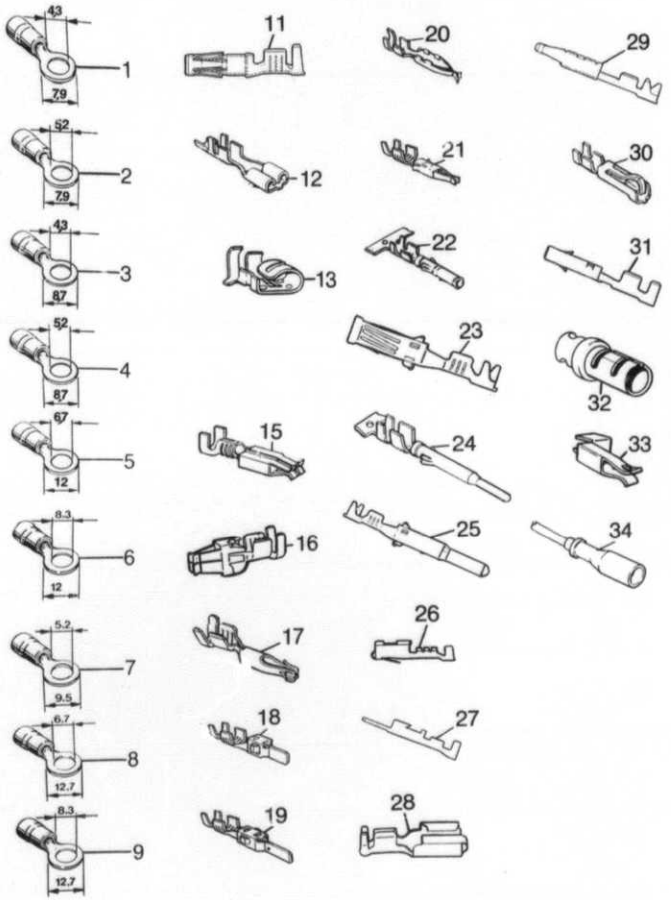

F7385 AAC94

Contact housing etc

3-J20 Cable terminal 1995

Kontakthus etc

Ledningssko 1995

2010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	17	40 63 087		79), CONTACT HOUSING 4203618, 9123555	X	Cable terminal	Kabelsko	5
0540	18	41 15 580		79), CONTACT HOUSING 4117560, 4173852	X	Cable terminal	Kabelsko	5
0560	19	41 15 457		80), CONTACT HOUSING 4113056, 4173852,4410510	X	Cable terminal	Kabelsko	5
0580	19	41 15 077		79), CONTACT HOUSING 4410510, 4114054,4117164 4117263, 4117362,4117461 4173852	X	Cable terminal	Kabelsko	8
0620	19	41 15 192		79), CONTACT HOUSING 4113254, 4113650,4114054 4224887	X	Cable terminal	Kabelsko	8
0650	19	41 15 283		79), CONTACT HOUSING 4117297	X	Cable terminal	Kabelsko	5
0670	20	40 63 970		80), CONTACT HOUSING 4060869, 4224580,9565045	X	Cable terminal	Kabelsko	8
0690	21	44 66 801		80), CONTACT HOSING 4223624, 4517702	X	Cable terminal	Kabelsko	8
0710	21	41 15 499		80), CONTACT HOSING 4113007, 4113205,4115002 4115408, 4173803,4176616 4223624, 4224606,4410510 4411518	X	Cable terminal	Kabelsko	8
0760	22	44 09 728		79), CONTACT HOUSING 4201208, 4203253,4224903 4586871	X	Cable terminal	Kabelsko	5
0790	23	44 64 293		79), CONTACT HOUSING 4203253, 4408910,4489092	X	Cable terminal	Kabelsko	5
0810	24	44 09 785		79), CONTACT HOUSING 4203261, 4224598	X	Cable terminal	Kabelsko	5
0830	25	44 64 228		79), CONTACT HOUSING 4203261	X	Cable terminal	Kabelsko	5
0850	26	44 88 458		86), CONTACT HOUSING 4201273, 4434841	X	Cable terminal	Kabelsko	5
0870	26	44 88 151		80), CONTACT HOUSING 4411740	X	Cable terminal	Kabelsko	8
0890	26	44 18 505		80), CONTACT HOUSING 4201224, 4203378,4203428 4203444, 4203477,4203501 4203535, 4223568	X	Cable terminal	Kabelsko	5
0930	26	45 38 310		85), CONTACT HOUSING 4537411	X	Cable terminal	Kabelsko	5
0950	27	44 18 489		80), CONTACT HOUSING 4203592	X	Cable terminal	Kabelsko	5
0970	28	44 64 400		79), CONTACT HOUSING 8544363, 8574949	X	Cable terminal	Kabelsko	5
0990	29	44 66 736		80), CONTACT HOUSING 9565045	X	Cable terminal	Kabelsko	5
1010	30	42 24 515		87), CONTACT HOUSING 4409165, 4409181,4409199	X	Cable terminal	Kabelsko	5
1030	30	*45 38 914*		90), CONTACT HOUSING 4538930 NLS	X	Cable terminal	Kabelsko	5
1050	31	44 12 961		84), CONTACT HOUSING 4463014	X	Cable terminal	Kabelsko	5


79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
84. Area 4,0-6,0 MM2.
85. Area 0,2-0,56 MM2.
86. Area 0,35-0,5 MM2.
87. Area 0,2-0,5 MM2.
90. Area 0,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

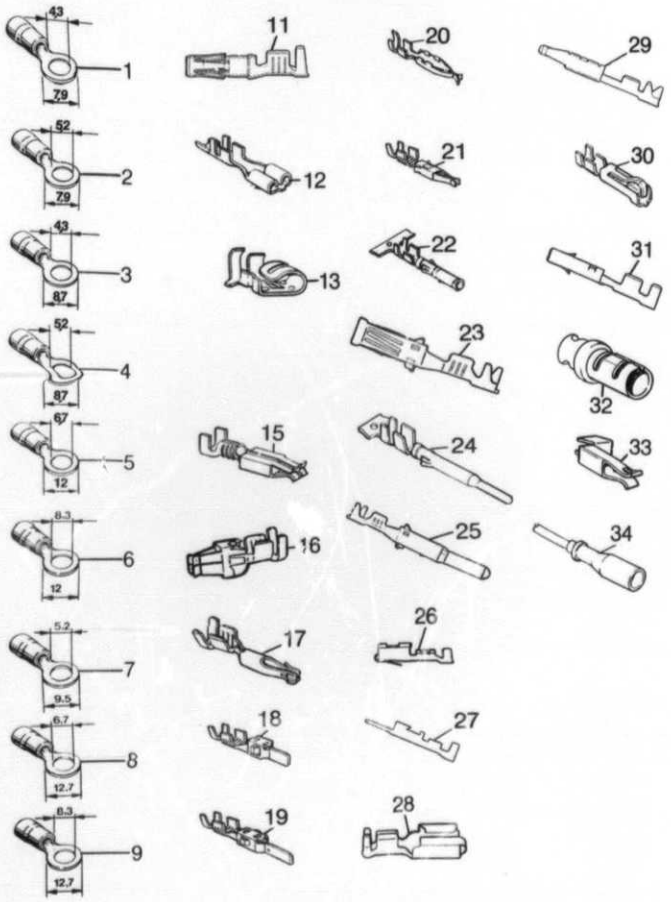

Contact housing etc

3-J22 Cable terminal 1995

Kontakthus etc

Ledningssko 1995

2010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1070	31	45 38 229		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1080				4466462				
1090	32	95 09 746		CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1100				4224457, 4408894				
1110	33	95 52 191		CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1120				9552183				
1130	34	85 47 804		83), SIDE INDICATOR LAMP	X	Connector	Skarvstycke	5
1140				CONTACT HOUSING				
1150				9503319, 9503418,9503434				
1160				9519679				


80. Area 0,5-1,0 MM2.
83. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

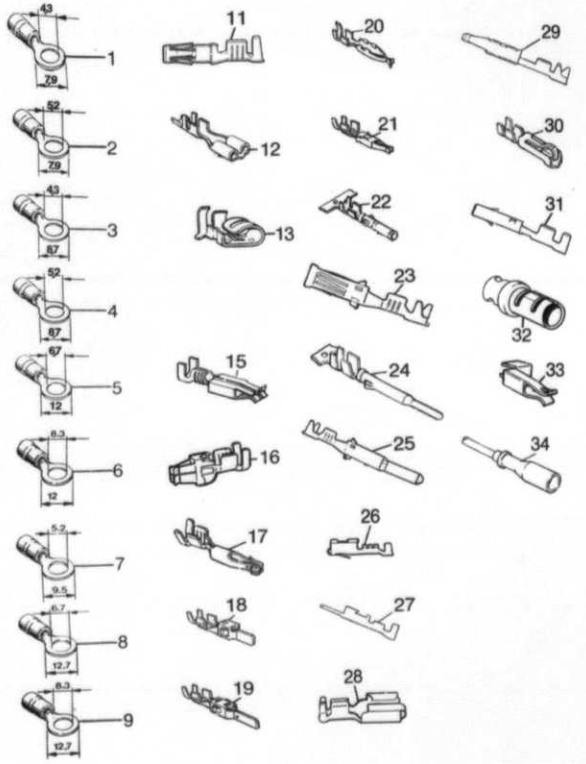

Contact housing etc

3 -J24 *Cable terminal* *1996*

Kontakthus etc

Ledningssko *1996*

2020	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		76), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		76), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		77), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		77), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		77), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		77)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		78), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		78), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		78), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		79)	X	Cable terminal	Kabelsko	5
0110								
0120	11	44 11 278		75), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0130				4411260				
0140	12	44 09 801		80), HORN THEFT ALARM,	X	Cable terminal	Kabelsko	5
0150				OIL PRESSURE, CONTACT				
0160				HOUSING 8516916				
0170	12	44 64 442		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0180				4201315, 4203733				
0190	12	85 22 575		81), CONTACT HOUSING	X	Cable harness	Ledningsnät	5
0200				8378630				
0210	12	85 04 797		82), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0220				8533184				
0230	12	*85 82 447*		76), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0240				8533184 NLS – USE				
0240				8522567				
0250	12	85 82 439		82), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0260				8533184				
0270	13	44 89 084		89), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0280				4489076				
0290	15	43 50 526		80), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0300				4113601, 4466462				
0310	15	91 20 791		83), EL-DISTRIBUTION BOX	X	Cable terminal	Kabelsko	8
0320				CONTACT HOUSING				
0330				4060893, 4113403,4173803				
0340				4224168, 4224317,9124090				
0350				9124157				
0360	16	91 20 957		79), EL-DISTRIBUTION BOX	X	Cable terminal	Kabelsko	8
0370				CONTACT HOUSING				
0380				4113205, 4114005,4115002				
0390				4115408, 4176616,4178414				
0400				4201323, 4203618,4222311				
0410				9123381, 9123399,9565045				
0420	16	43 54 171		79), CONTACT HOSING	X	Cable terminal	Kabelsko	8
0430				4113403, 4113411				
0440	16	40 61 586		79), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0450				4113205, 4113601,4113809				
0460				4114005, 4178414,4432316				
0470				4432324, 4432357,4433439				
0480				4489647				
0490	16	44 64 343		84), EL-DISTRIBUTION BOX	X	Cable terminal	Kabelsko	8
0500				CONTACT HOUSING				
0510				4230181				


75. Area 0,75-1,5 MM2.
76. Area 0,3-1,5 MM2.
77. Area 1,0-2,6 MM2.
78. Area 2,7-6,6 MM2.
79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
81. Area 0,5-1,4 MM2.
82. Area 0,5-1,5 MM2.
83. Area 2,5-4,0 MM2.
84. Area 4,0-6,0 MM2.
89. Area 0,5-1,43 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

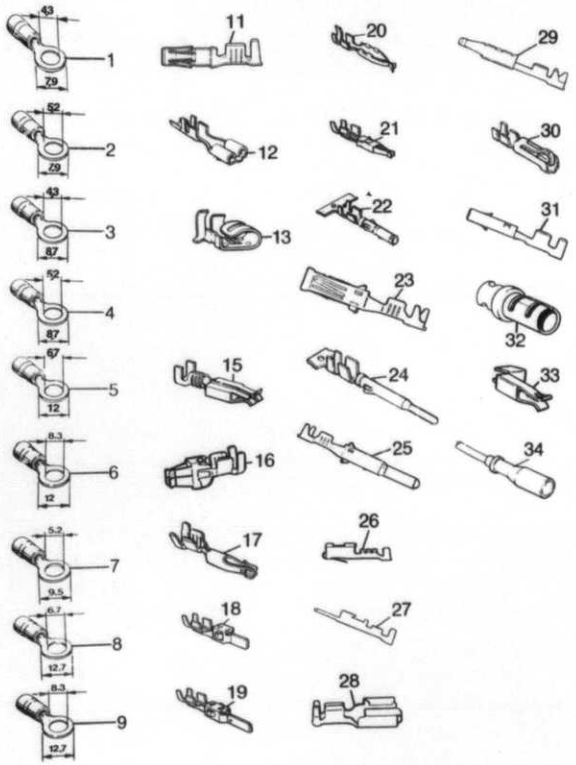

Contact housing etc

3 -K02 Cable terminal 1996

Kontakthus etc

Ledningssko 1996

2020	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0520	17	40 63 087		79), CONTACT HOUSING 4203618, 9123555	X	Cable terminal	Kabelsko	5
0540	18	41 15 580		79), CONTACT HOUSING 4117560, 4173852	X	Cable terminal	Kabelsko	5
0560	19	41 15 457		80), CONTACT HOUSING 4113056, 4173852,4410510	X	Cable terminal	Kabelsko	5
0580	19	41 15 077		79), CONTACT HOUSING 4410510, 4114054,4117164 4117263, 4117362,4117461 4173852	X	Cable terminal	Kabelsko	8
0620	19	41 15 192		79), CONTACT HOUSING 4113254, 4113650,4114054 4224887	X	Cable terminal	Kabelsko	8
0650	19	41 15 283		79), CONTACT HOUSING 4117297	X	Cable terminal	Kabelsko	5
0670	20	40 63 970		80), CONTACT HOUSING 4060869, 4224580,9565045	X	Cable terminal	Kabelsko	8
0690	21	44 66 801		80), CONTACT HOSING 4223624, 4517702	X	Cable terminal	Kabelsko	8
0710	21	41 15 499		80), CONTACT HOSING 4113007, 4113205,4115002 4115408, 4173803,4176616 4223624, 4224606,4410510 4411518	X	Cable terminal	Kabelsko	8
0760	22	44 09 728		79), CONTACT HOUSING 4201208, 4203253,4224903 4586871	X	Cable terminal	Kabelsko	5
0790	23	44 64 293		79), CONTACT HOUSING 4203253, 4408910,4489092	X	Cable terminal	Kabelsko	5
0810	24	44 09 785		79), CONTACT HOUSING 4203261, 4224598	X	Cable terminal	Kabelsko	5
0830	25	44 64 228		79), CONTACT HOUSING 4203261	X	Cable terminal	Kabelsko	5
0850	26	44 88 458		86), CONTACT HOUSING 4201273, 4434841	X	Cable terminal	Kabelsko	5
0870	26	44 88 151		80), CONTACT HOUSING 4411740	X	Cable terminal	Kabelsko	8
0890	26	44 18 505		80), CONTACT HOUSING 4201224, 4203378,4203428 4203444, 4203477,4203501 4203535, 4223568	X	Cable terminal	Kabelsko	5
0930	26	45 38 310		85), CONTACT HOUSING 4537411	X	Cable terminal	Kabelsko	5
0950	27	44 18 489		80), CONTACT HOUSING 4203592	X	Cable terminal	Kabelsko	5
0970	28	44 64 400		79), CONTACT HOUSING 8544363, 8574949	X	Cable terminal	Kabelsko	5
0990	29	44 66 736		80), CONTACT HOUSING 9565045	X	Cable terminal	Kabelsko	5
1010	30	42 24 515		87), CONTACT HOUSING 4409165, 4409181,4409199	X	Cable terminal	Kabelsko	5
1030	30	*45 38 914*		90), CONTACT HOUSING 4538930 NLS	X	Cable terminal	Kabelsko	5
1050	31	44 12 961		84), CONTACT HOUSING 4463014	X	Cable terminal	Kabelsko	5


79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
84. Area 4,0-6,0 MM2.
85. Area 0,2-0,56 MM2.
86. Area 0,35-0,5 MM2.
87. Area 0,2-0,5 MM2.
90. Area 0,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

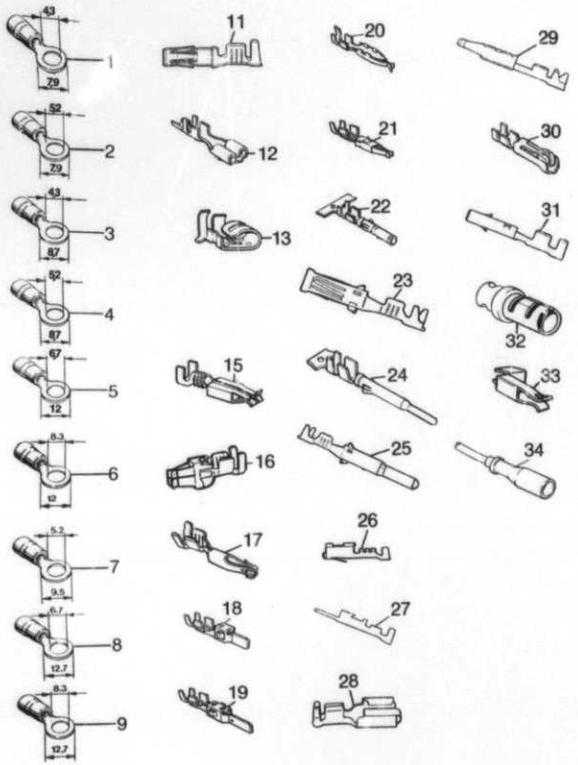

Contact housing etc

3-K04 Cable terminal 1996

Kontakthus etc

Ledningssko 1996

2020	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1070	31	45 38 229		80), CONTACT HOUSING 4466462	X	Cable terminal	Kabelsko	5
1090	32	95 09 746		CONTACT HOUSING 4224457, 4408894	X	Cable terminal	Kabelsko	5
1110	33	95 52 191		CONTACT HOUSING 9552183	X	Cable terminal	Kabelsko	5
1130	34	85 47 804		83), SIDE INDICATOR LAMP CONTACT HOUSING 9503319, 9503418,9503434 9519679	X	Connector	Skarvstycke	5


80. Area 0,5-1,0 MM2.
83. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

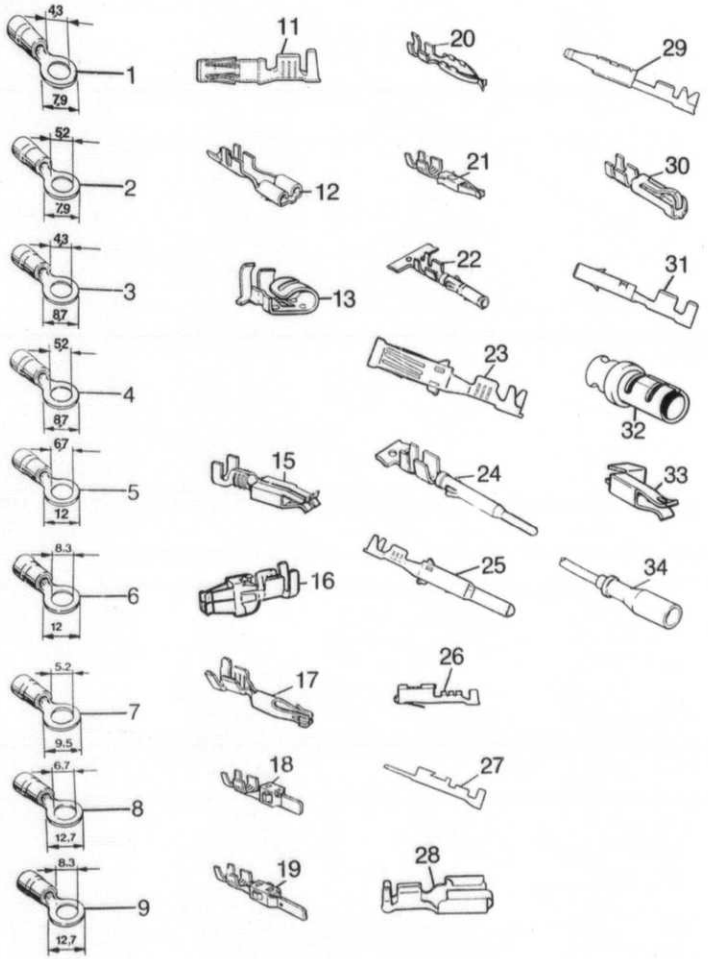

F8374 AAC94

2030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		76), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		76), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		77), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		77), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		77), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		77)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		78), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		78), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		78), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		79)	X	Cable terminal	Kabelsko	5
0110								
0120	11	44 11 278		75), CONTACT HOUSING 4411260	X	Cable terminal	Kabelsko	5
0130								
0140	12	44 09 801		80), HORN THEFT ALARM, OIL PRESSURE, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0150								
0160								
0170	12	44 64 442		80), CONTACT HOUSING 4201315, 4203733	X	Cable terminal	Kabelsko	5
0180								
0190	12	85 22 575		81), CONTACT HOUSING 8378630	X	Cable harness	Ledningsnät	5
0200								
0210	12	85 04 797		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0220								
0230	12	*85 82 447*		76), CONTACT HOUSING 8533184 NLS - USE 8522567	X	Cable terminal	Kabelsko	5
0240								
0240								
0250	12	85 82 439		82), CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0260								
0270	13	44 89 084		89), CONTACT HOUSING 4489076	X	Cable terminal	Kabelsko	5
0280								
0290	15	43 50 526		80), CONTACT HOUSING 4113601, 4466462	X	Cable terminal	Kabelsko	8
0300								
0310	15	91 20 791		83), EL-DISTRIBUTION BOX CONTACT HOUSING 4060893, 4113403,4173803 4224168, 4224317,4409959 9124090, 9124157	X	Cable terminal	Kabelsko	8
0320								
0330								
0340								
0350								
0360	16	91 20 957		79), EL-DISTRIBUTION BOX CONTACT HOUSING 4113205, 4114005,4115002 4115408, 4176616,4178414 4201323, 4203618,4222311 9123381, 9123399,9565045	X	Cable terminal	Kabelsko	8
0370								
0380								
0390								
0400								
0410								
0420	16	43 54 171		79), CONTACT HOSING 4113403, 4113411	X	Cable terminal	Kabelsko	8
0430								
0440	16	40 61 586		79), CONTACT HOUSING 4113205, 4113239,4113601 4113809, 4114005,4178414 4411260, 4432316,4432324 4432357, 4433439,4489647 4669743	X	Cable terminal	Kabelsko	8
0450								
0460								
0470								
0480								
0490								


75. Area 0,75-1,5 MM2.
76. Area 0,3-1,5 MM2.
77. Area 1,0-2,6 MM2.
78. Area 2,7-6,6 MM2.
79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
81. Area 0,5-1,4 MM2.
82. Area 0,5-1,5 MM2.
83. Area 2,5-4,0 MM2.
89. Area 0,5-1,43 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

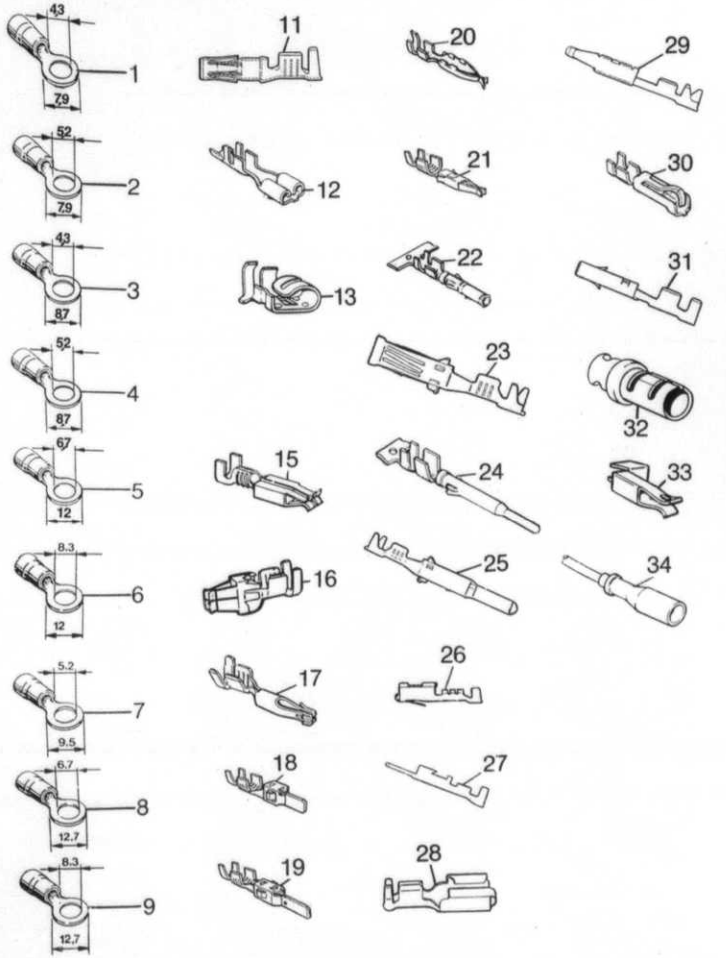

F8374 AAC94

Contact housing etc

3-K08 Cable terminal 1997-

Kontakthus etc

Ledningssko 1997-

2030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	16	44 64 343		84), EL-DISTRIBUTION BOX CONTACT HOUSING 4230181	X	Cable terminal	Kabelsko	8
0530	17	40 63 087		79), CONTACT HOUSING 4203618, 9123555	X	Cable terminal	Kabelsko	5
0550	18	41 15 580		79), CONTACT HOUSING 4117560, 4173852	X	Cable terminal	Kabelsko	5
0570	19	41 15 457		80), CONTACT HOUSING 4113056, 4173852,4410510	X	Cable terminal	Kabelsko	5
0590	19	41 15 077		79), CONTACT HOUSING 4410510, 4114054,4117164 4117263, 4117362,4117461 4173852	X	Cable terminal	Kabelsko	8
0630	19	41 15 192		79), CONTACT HOUSING 4113254, 4113650,4114054 4114062, 4224887	X	Cable terminal	Kabelsko	8
0660	19	41 15 283		79), CONTACT HOUSING 4117297	X	Cable terminal	Kabelsko	5
0680	20	40 63 970		80), CONTACT HOUSING 4060869, 4224580,9565045	X	Cable terminal	Kabelsko	8
0700	21	44 66 801		80), CONTACT HOSING 4223624, 4517702,4807954	X	Cable terminal	Kabelsko	8
0720	21	41 15 499		80), CONTACT HOSING 4113007, 4113205,4115002 4115408, 4173803,4176616 4223624, 4410510,4411518	X	Cable terminal	Kabelsko	8
0760	22	44 09 728		79), CONTACT HOUSING 4201208, 4203253,4586871	X	Cable terminal	Kabelsko	5
0780	23	44 64 293		79), CONTACT HOUSING 4203253, 4408910,4489092	X	Cable terminal	Kabelsko	5
0800	24	44 09 785		79), CONTACT HOUSING 4203261, 4224598	X	Cable terminal	Kabelsko	5
0820	25	44 64 228		79), CONTACT HOUSING 4203261	X	Cable terminal	Kabelsko	5
0840	26	44 88 458		86), CONTACT HOUSING 4201273, 4434841	X	Cable terminal	Kabelsko	5
0860	26	44 88 151		80), CONTACT HOUSING 4411740	X	Cable terminal	Kabelsko	8
0880	26	44 18 505		80), CONTACT HOUSING 4201224, 4203378,4203428 4203444, 4203477,4203501 4203535, 4223568	X	Cable terminal	Kabelsko	5
0920	26	45 38 310		85), CONTACT HOUSING 4537411	X	Cable terminal	Kabelsko	5
0940	27	44 18 489		80), CONTACT HOUSING 4203592	X	Cable terminal	Kabelsko	5
0960	28	44 64 400		79), CONTACT HOUSING 8544363, 8574949	X	Cable terminal	Kabelsko	5
0980	29	44 66 736		80), CONTACT HOUSING 9565045	X	Cable terminal	Kabelsko	5
1000	30	42 24 515		87), CONTACT HOUSING 4409165, 4409181,4409199	X	Cable terminal	Kabelsko	5
1020	30	*45 38 914*		90), CONTACT HOUSING 4538930 NLS	X	Cable terminal	Kabelsko	5
1040	31	44 12 961		84), CONTACT HOUSING 4463014	X	Cable terminal	Kabelsko	5


79. Area 1,0-2,5 MM2.
80. Area 0,5-1,0 MM2.
84. Area 4,0-6,0 MM2.
85. Area 0,2-0,56 MM2.
86. Area 0,35-0,5 MM2.
87. Area 0,2-0,5 MM2.
90. Area 0,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steerng	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14

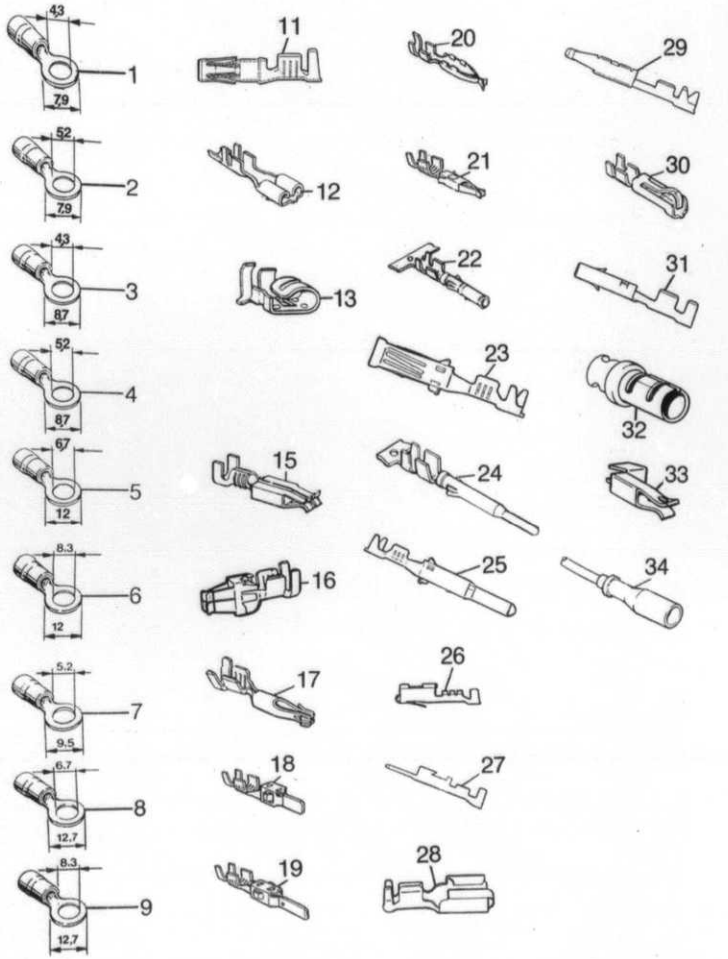

F8374 AAC94

2030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1060	31	45 38 229		80), CONTACT HOUSING 4466462	X	Cable terminal	Kabelsko	5
1080	32	95 09 746		CONTACT HOUSING 4224457, 4408894	X	Cable terminal	Kabelsko	5
1100	33	95 52 191		CONTACT HOUSING 9552183	X	Cable terminal	Kabelsko	5
1120	34	85 47 804		83), SIDE INDICATOR LAMP CONTACT HOUSING 9503319, 9503418,9503434 9519679	X	Connector	Skarvstycke	5

80. Area 0,5-1,0 MM2.
83. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	2-J06
Cable terminals	3-J14



Transmission
Kraftöverföring
Transmisión

4 -A02

0041

TABLE OF CONTENTS

Clutch		
Clutch, clutch disc	4 : 5	4-A06
Clutch control		
Pedal, cable	4 : 9	4-A10
Sensonic	4 : 11	4-A12
Gear box, manual		
Gear box assy	4 : 15	4-A16
Gear box case	4 : 17	4-A18
Release bearing, release fork	4 : 21	4-A22
Gear shift forks, gear shift shafts	4 : 23	4-A24
Shafts, gears, input shaft	4 : 27	4-B04
Shafts, gears, output shaft	4 : 31	4-B08
Differential	4 : 35	4-B12
Gear box control, manual		
Gear shift lever	4 : 37	4-B14
Gear rod	4 : 41	4-B18
Gear shift housing	4 : 43	4-B20
Drive shafts, outer and inner universal joint M and A	4 : 45	4-B22
Gear box, automatic		
Gear box assy	4 : 49	4-C02
Converter housing, converter	4 : 51	4-C04
Gear box case, cover	4 : 53	4-C06
TC module, sensor	4 : 55	4-C08
Control system	4 : 59	4-C12
Differential	4 : 35	4-B12
Gear box control, automatic		
Gear selector lever	4 : 61	4-C14
Drive shafts, outer and inner universal joint M and A	4 : 45	4-B22
Rear axle, See group 7		
Complete sets		
Transmission	4 : 63	4-C16

MASTER INDEX

0	General	1-A0
2	Engine	1-C0
3A	Electrical, general	2-A0
3B	Electrical, contact housing	2-J02,3-A0
4	Transmission	4-A0
5	Brakes	4-D0
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G0
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -A03

0042

INNEHÅLLSFÖRTECKNING

Koppling		
Koppling, lamell	4 : 5	4-A06
Kopplingsmanövrering		
Pedal, wire	4 : 9	4-A10
Sensonic	4 : 11	4-A12
Växellåda, manuell		
Växellåda kpl	4 : 15	4-A16
Växellådshus	4 : 17	4-A18
Urtrampningslager, urkopplingsgaffel	4 : 21	4-A22
Växelförargafflar, växelföraraxlar	4 : 23	4-A24
Axlar, kugghjul, ingående axel	4 : 27	4-B04
Axlar, kugghjul, utgående axel	4 : 31	4-B08
Differential	4 : 35	4-B12
Växellådsmanövrering, manuell		
Växelspak	4 : 37	4-B14
Växelstång	4 : 41	4-B18
Växelspakshus	4 : 43	4-B20
Drivaxlar, yttre och inre knut M och A	4 : 45	4-B22
Växellåda, automatisk		
Växellåda kpl	4 : 49	4-C02
Momentomvandlarhus, momentomvandlare	4 : 51	4-C04
Växellådshus, lock	4 : 53	4-C06
Styrdon, givare	4 : 55	4-C08
Kontrollsystem	4 : 59	4-C12
Differential	4 : 35	4-B12
Växellådsmanövrering, automatisk		
Växelväljarspak	4 : 61	4-C14
Drivaxlar, yttre och inre knut M och A	4 : 45	4-B22
Bakaxel, Se grupp 7		
Satser		
Kraftöverföring	4 : 63	4-C16

4 -A04

0042

SUMARIO


Embrague		
Embrague, disco de embrague	4 : 5	4-A06
Mando de embrague		
Pedal, cable	4 : 9	4-A10
Sensonic	4 : 11	4-A12
Caja de cambios, manual		
Caja de cambios, compl.	4 : 15	4-A16
Carter de caja de cambios	4 : 17	4-A18
Cojinete de empuje, horquilla desembrgue	4 : 21	4-A22
Horquillas de cambio, ejes de horquilla de cambio	4 : 23	4-A24
Ejes, engranajes, eje primario	4 : 27	4-B04
Ejes, engranajes, eje secundario	4 : 31	4-B08
Diferencial	4 : 35	4-B12
Mandos del cambio, manual		
Palanca	4 : 37	4-B14
Varilla cambio	4 : 41	4-B18
Caja palanca	4 : 43	4-B20
Eje de accionamiento, junta homocinetica exterior y interior, M y A	4 : 45	4-B22
Caja de cambios, automatica		
Caja de cambios, compl.	4 : 49	4-C02
Carter de convertidor de par, convertidor	4 : 51	4-C04
Carter de caja de cambios, tapas	4 : 53	4-C06
Dispositivo mando, sensor	4 : 55	4-C08
Sistem de control	4 : 59	4-C12
Differencial	4 : 35	4-B12
Mando de caja de cambios, automatica		
Palanca selectora	4 : 61	4-C14
Eje de accionamiento, junta homocinetica exterior y interior, M y A	4 : 45	4-B22
Eje trasero, Ver grupo 7		
Juegos completos		
Transmision	4 : 63	4-C16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A[illegible]
Clutch control	4 [illegible]
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

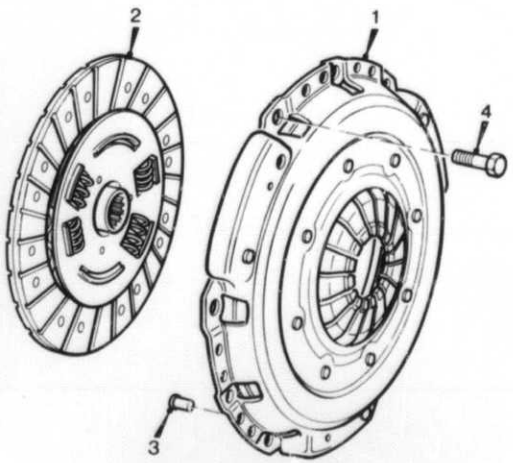

F4860 AAC94

Clutch

Koppling

4 -A06

Clutch, clutch disc

Koppling, lamell

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0100								
0010	1	87 36 456		21), B206I, B234I	1	Pressure plate	Tryckskiva	2
0020	1	87 36 423		22), -1997, LHD, B206I, B204I, B234I	1	Pressure plate	Tryckskiva	2
0030								
0040	1	87 46 778		1998-, LHD, B204I, B234I	1	Pressure plate	Tryckskiva	2
0050	1	87 36 423		22),-1997, RHD, B206I, B204I, B234I	1	Pressure plate	Tryckskiva	2
0060								
0070	1	87 46 778		1998-, RHD, B206I, B204I, B234I	1	Pressure plate	Tryckskiva	2
0080								
0090	1	87 36 456		-1997, B204L, LHD	1	Pressure plate	Tryckskiva	2
0100	1	87 46 497		1998-, B204L, LHD	1	Pressure plate	Tryckskiva	2
0110	1	87 36 456		-1997, B204L, RHD	1	Pressure plate	Tryckskiva	2
0120	1	87 46 497		1998-, B204L, RHD	1	Pressure plate	Tryckskiva	2
0130	1	87 36 548		B204L, ACS	1	Pressure plate	Tryckskiva	2
0140	1	87 35 797		-1995, B258I	1	Pressure plate	Tryckskiva	2
0150	1	87 44 724		1996-1997, B258I	1	Pressure plate	Tryckskiva	2
0160	2	87 36 555		21), B206I, B234I	1	Clutch disc	Lamell	
0170	2	*87 36 415*		22,49),B206I,B204I,B234I NLS – USE 8744070	1	Clutch disc	Lamell	2
0180	2	87 44 070		50), -1997, LHD B206I, B204I, B234I	1	Clutch disc	Lamell	2
0190								
0200	2	87 46 802		1998-, LHD, B204I, B234I	1	Clutch disc	Lamell	2
0210	2	87 44 070		50), -1997, RHD, B206I, B204I, B234I	1	Clutch disc	Lamell	2
0220								
0230	2	87 46 802		1998-, RHD, B206I, B204I, B234I	1	Clutch disc	Lamell	2
0240								
0250	2	87 36 555		-1997, LHD, B204L	1	Clutch disc	Lamell	
0260	2	87 46 489		1998-, LHD, B204L	1	Clutch disc	Lamell	2
0270	2	87 36 555		-1997, RHD, B204L	1	Clutch disc	Lamell	
0280	2	87 46 489		1998-, RHD, B204L	1	Clutch disc	Lamell	2
0290	2	87 41 225		-1995, B258I	1	Clutch disc	Lamell	2
0300	2	87 44 732		1996-1997, B258I	1	Clutch disc	Lamell	2
0310	3	*79 49 712*		227), 4-CYL NLS – USE 8034**2	3	Pin	Pinne	5
0320	3	91 76 991		228, *YL	3	Locating pin	Styrpinne	5
0330	3	*45 01 268*		-1997, 6-CYL NLS	3	Pin	Pinne	5
0340	4	79 67 938		4-CYL	6	Screw	Skruv	5
0350	4	87 41 449		-1997, 6-CYL	6	Screw	Skruv	5
0360								
0370		87 81 536		21), B206I, B234I	X	Clutch kit	Kopplingssats	6
0380				See page 4-063, 4-C16				
0390		87 81 528		22), -1997, LHD, B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0400								
0410				See page 4-063, 4-C16				
0420		46 14 004		1998-, LHD, B204I, B234I	X	Clutch kit	Kopplingssats	6
0430				See page 4-063, 4-C16				
0440		87 81 528		22), -1997, RHD, B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0450								
0460				See page 4-063, 4-C16				
0470		46 14 004		1998-, RHD, B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0480								
0490				See page 4-063, 4-C16				
0500		87 81 536		-1997, LHD, B204L	X	Clutch kit	Kopplingssats	6
0510				See page 4-063, 4-C16				
0520		46 14 012		1998-, LHD, B204L	X	Clutch kit	Kopplingssats	6
0530				See page 4-063, 4-C16				
0540		87 81 536		-1997, RHD, B204L	X	Clutch kit	Kopplingssats	6
0550				See page 4-063, 4-C16				

21. Engine -R129242
22. Engine R129243-
49. Engine -S086808
50. Engine S086809-
227. Engine -T074802
228. Engine T074803-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-A08

Clutch, clutch disc

Koppling, lamell

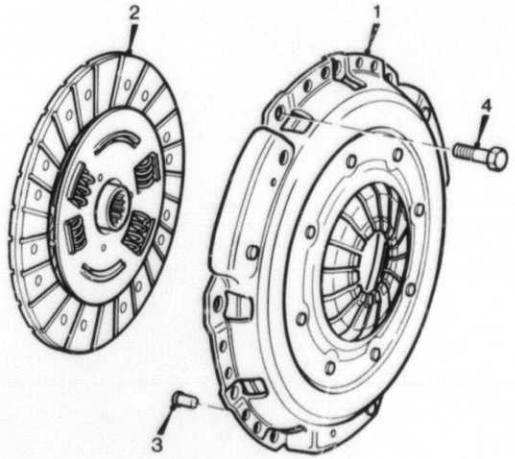

F4860 AAC94

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560		46 14 012		1998-, RHD, B204L	X	Clutch kit	Kopplingssats	6
0570				See page 4-063, 4-C16				
0580		87 81 544		B204L, ACS	X	Clutch kit	Kopplingssats	6
0590				See page 4-063, 4-C16				
0600		87 81 577		-1995, B258I	X	Clutch kit	Kopplingssats	6
0610				See page 4-063, 4-C16				
0620		87 81 866		1996-1997, B258I	X	Clutch kit	Kopplingssats	6
0630				See page 4-063, 4-C16				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX


Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

Clutch control

4-A10 *Clutch pedal*

Kopplingsmanövrering

Kopplingspedal

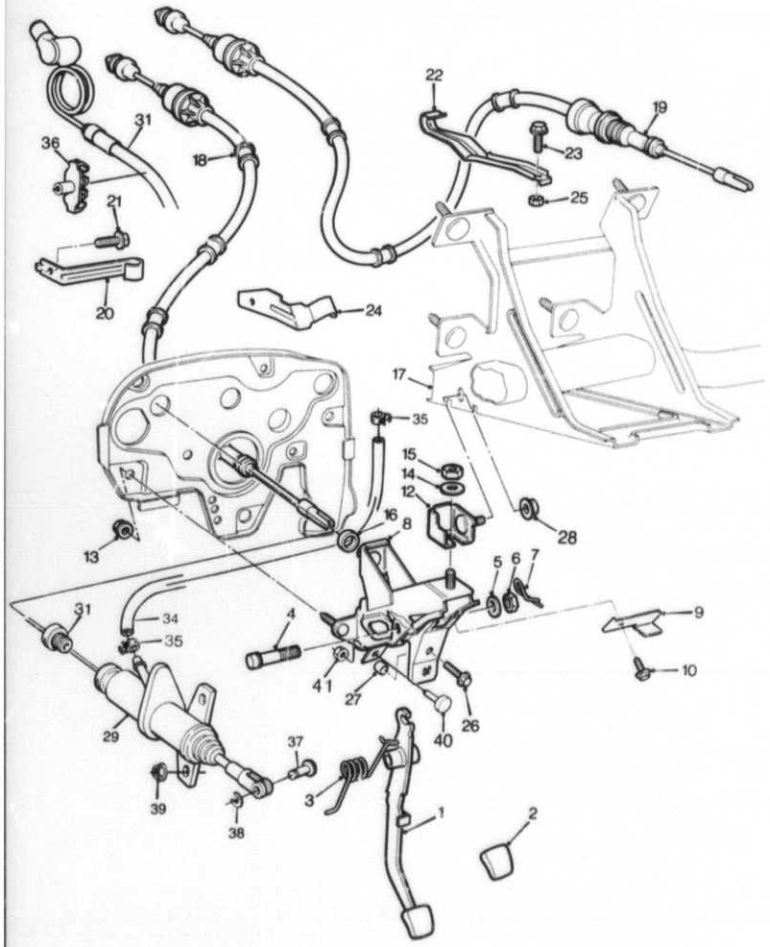

F9303 AAC94

0150	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	44 83 392		LHD	1	Clutch pedal	Kopplingspedal	6
0020	1	44 83 384		RHD	1	Clutch pedal	Kopplingspedal	6
0030	2	42 41 832			1	Pedal pad	Pedalgummi	3
0040	3	44 67 288			1	Return spring	Returfjäder	3
0050	4	42 41 865			1	Screw	Skruv	5
0060	5	80 73 108			1	Washer	Bricka	5
0070	6	43 45 120			1	Hexagon nut	Sexkantsmutter	5
0080	7	42 41 881			1	Lock spring	Låsfjäder	3
0090	8	44 83 475		LHD, M	1	Bracket	Konsol	6
0100	8	42 43 226		LHD, A	1	Bracket	Konsol	6
0110	8	42 43 226		LHD, ACS	1	Bracket	Konsol	6
0120	8	44 83 483		RHD, M	1	Bracket	Konsol	6
0130	8	44 83 962		RHD, A	1	Bracket	Konsol	6
0140	8	44 83 962		RHD, ACS	1	Bracket	Konsol	6
0150	9	44 83 301		RHD	1	.Bracket	.Konsol	6
0160	10	79 85 138		RHD	1	.Screw	.Skruv	5
0170	12	42 12 130			1	Pedal bracket	Pedalkonsol	6
0180	13	43 45 419			2	Nut	Mutter	5
0190	14	43 45 344			1	Washer	Bricka	5
0200	15	79 65 767			1	Lock nut	Låsmutter	3
0210	16	42 41 873			1	Seal	Tätning	3
0220	17			See page 6-011, 4-F12		Steering wheel member	Rattbalk	
0230	18	44 90 181		-1997, 4-CYL, LHD	1	Cable	Wire	6
0240	18	44 90 199		-1997, 6-CYL, LHD	1	Cable	Wire	6
0250	19	44 90 207		259) 4-CYL, RHD	1	Cable	Wire	6
0260	19	* 49 01 740		260) 4-CYL, RHD	1	Cable	Wire	6
0270	19	44 90 215		-1997, 6-CYL, RHD	1	Cable	Wire	6
0280	20	44 90 249		LHD	1	Bracket	Fäste	3
0290	21	79 72 805		LHD	1	Screw	Skruv	5
0300	22	44 90 322		RHD	1	Bracket	Fäste	3
0310	23	79 78 232		RHD	1	Screw	Skruv	5
0320	24	44 90 231		RHD	1	Bracket	Fäste	3
0330	25	79 77 952		RHD	1	Hexagon nut	Sexkantsmutter	5
0340	26	80 82 968		LHD	1	Screw	Skruv	5
0350	26	80 83 933		RHD	1	Screw	Skruv	5
0360	27	44 83 459			1	Rubber stop	Gummistopp	
0370	28	79 71 922			1	Nut	Mutter	3
0380	29	46 26 172		1998-, 4-CYL, LHD	1	Clutch cylinder	Kopplingscylinder	2
0390	31	46 26 065		1998-, 4-CYL, LHD	1	Clutch hose	Kopplingsslang	2
0400	34	46 26 180		1998-, 4-CYL, LHD	1	Hose	Slang	
0410	35	79 77 697		1998-, 4-CYL, LHD	2	Hose clamp	Slangklamma	5
0420	36	46 85 533		1998-, 4-CYL, LHD	1	Clip	Clips	5
0430	37	43 45 435		1998-, 4-CYL, LHD	1	Pin	Sprint	5
0440	38	43 45 443		1998-, 4-CYL, LHD	1	Clip	Clips	5
0450	39	79 65 767		1998-, 4-CYL, LHD	1	Lock nut	Låsmutter	3
0460	40	48 39 312		1998-, 4-CYL, LHD	1	Pedal stop	Pedalstopp	
0470	41	80 74 106		1998-, 4-CYL, LHD	1	Nut	Mutter	5


259. Ch. -W2000099.
260. Ch. W2000100-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

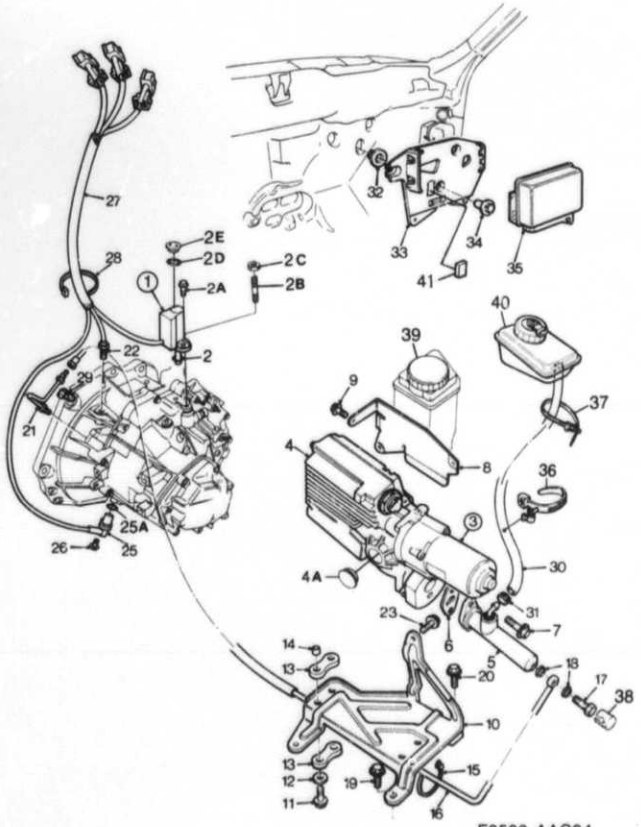

Clutch control
4-A12
Sensonic

Kopplingsmanövrering
Sensonic

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1	*45 78 498*		-1995 NLS - USE 4626024	1	.GS position sensor	.Växellägesgivare	
0025	1	46 26 024		1996-	1	.GS position sensor	.Växellägesgivare	
0030	2	79 85 211			1	..O-ring	..O-ring	3
0040		41 13 650			1	..Connector housing	..Kontakthus	8
0050	2A	79 78 216		225,235)	1	.Hexagon screw	.Sexkantsskruv	5
0051	2B	79 85 146		226,236)	1	.Stud screw	.Pinnbult	5
0052	2C	79 77 952		226,236)	1	.Hexagon nut	.Sexkantsmutter	5
0055	2D	44 91 619			1	.Seal	.Tätning	
0057	2E	44 90 363			1	.Cover	.Lock	
0060	3	*44 91 551*		61) NLS - USE 4626099	1	Clutch actuator unit	Manöverdon	
0065	3	46 26 099		62)	1	Clutch actuator unit	Manöverdon	
0070	4	*44 91 569*		NLS - USE 4626099	1	.Clutch actuator unit	.Manöverdon	
0075	4A	49 25 491			1	..Cover	..Lock	
0080	5	*43 86 579*		1994 NLS - USE 4578845	1	.Master cylinder	.Huvudcylinder	
0085	5	45 78 845		1995-	1	.Master cylinder	.Huvudcylinder	
0090	6	43 86 587			1	.Gasket	.Packning	
0100	7	79 78 190			2	.Screw	.Skruv	5
0110	8	44 02 145			1	Bracket	Fäste	
0120	9	79 75 196		61)	3	Screw	Skruv	5
0125	9	79 72 607		62)	3	Screw	Skruv	5
0130	10	42 82 497			1	Bracket	Konsol	6
0140	11	79 78 133			4	Screw	Skruv	5
0150	12	79 81 954			4	Washer	Bricka	5
0160	13	42 82 505			4	Vibration damper	Vibrationsdämpare	
0170	14	43 86 199			4	Spacer sleeve	Distanshylsa	4
0180	15	85 52 663			1	Tensioning band	Spännband	5
0190	16	43 86 272			1	Feed line	Tryckledning	2
0200	17	43 86 298			1	Banjo bolt	Hålbult	5
0210	18	46 26 503			2	Seal	Tätning	5
0220	19	79 78 091			2	Screw	Skruv	5
0230	20	79 78 653			1	Screw	Skruv	5
0240	21	43 86 405			1	Clutch hose	Kopplingsslang	2
0250	22	42 82 422			1	Clutch temperature sensor	Temperaturgivare	
0255	23	79 75 196			1	Screw	Skruv	5
0260	25	42 82 489			1	Input shaft speed sensor	Hastighetsgivare	
0270	25A	44 91 387			1	.O-ring	.O-ring	2
0280	26	79 78 422			1	Screw	Skruv	5
0290	27	43 87 783			1	Hose	Slang	
0300	28	79 71 880			4	Tensioning band	Spännband	4
0305	29	73 52 651		219,235)	1	Tube clamp	Rörklamma	5
0310	29	79 63 887		220,236)	1	Tube clamp	Rörklamma	5
0320	30	43 86 413		LHD	1	Hose	Slang	5
0330	30	43 86 504		RHD	1	Hose	Slang	5
0340	31	83 32 587			2	Hose clamp	Slangklamma	5
0350	32	42 38 309			3	Spacer clip	Distansclips	
0360	33	43 86 397		LHD	1	Bracket	Fäste	
0370	33	43 86 496		RHD	1	Bracket	Fäste	
0380	34	42 38 291			3	Nut	Mutter	5
0390	35	*44 91 577*		247) NLS - USE 4626966	1	Clutch control module	Styrdon	
0395	35	46 26 966		248)	1	Clutch control module	Styrdon	


6. Ch. -T2012599, -T7003275
62. Ch. T2012600-, T7003276-
219. Gear box -N60830
220. Gear box N60831-
225. Gear box -N92853
226. Gear box N92854-
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
247. Ch. -V2029263, -V7006896
248. Ch. V2029264-, V7006897-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

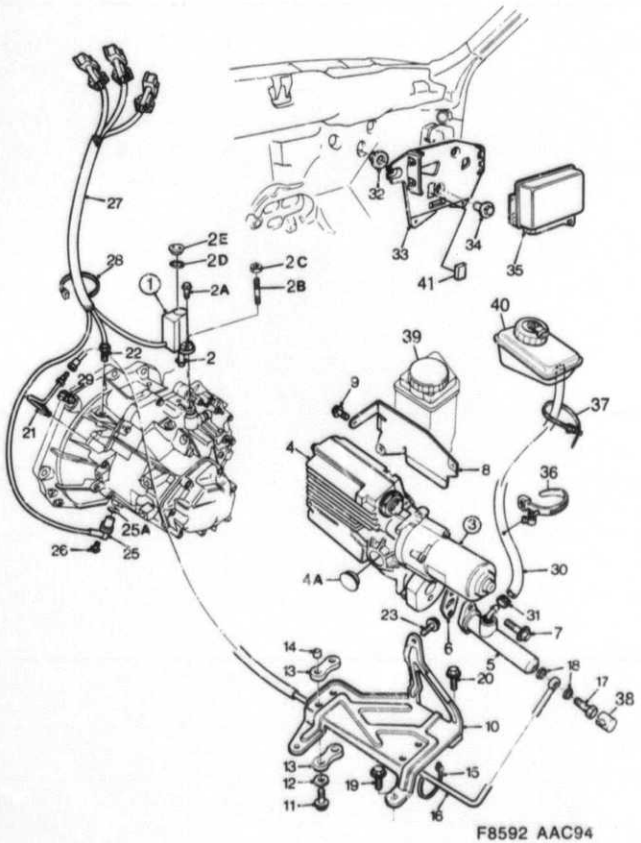

F8592 AAC94

Clutch control
4-A14
Sensonic

Kopplingsmanövrering
Sensonic

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400	36	73 99 652			X	Clamp	Klammer	5
0410	37	79 84 750		RHD	1	Tensioning band	Spännband	5
0420	38	46 25 042			1	Protection	Skydd	3
0430	39			See page 6-019, 4-F20		Reservoir	Behållare	
0440	40			See page 5-011, 4-D12		Reservoir	Behållare	
0450	41	46 09 533		232)	1	Spacer	Mellanlägg	


232. Ch. T2017865-, T7009830-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

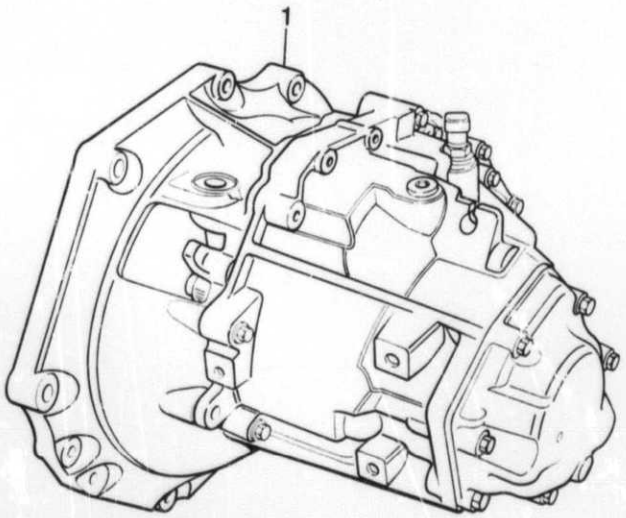

F4862 AAC94

Gear box assy
4-A16
Manual

Växellåda kpl
Manuell

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 36 001		7,23), B206I	1	Gearbox	Växellåda	5
0020				MARKED: FM 54501				
0030	1	87 42 660		7,24), -1997,B206I,B204I	1	Gearbox	Växellåda	5
0040				MARKED: FM 51501				
0050	1	• 87 47 578		7), 1998-, B204I, LHD	1	Gearbox	Växellåda	5
0060				MARKED: FM 53501				
0070	1	• 87 48 816		7), 1998-, B204I, RHD	1	Gearbox	Växellåda	5
0080				MARKED: FM 53503				
0090								
0100	1	87 36 001		7), B234I	1	Gearbox	Växellåda	5
0110				MARKED: FM 54501				
0120	1	• 87 48 022		7), 1998-, B234I, LHD	1	Gearbox	Växellåda	5
0130				MARKED: FM 54503				
0140								
0150	1	87 37 405		7), B204L	1	Gearbox	Växellåda	5
0160				MARKED: FM 55501				
0170	1	• 87 48 055		7), 1998-, B204L, LHD	1	Gearbox	Växellåda	5
0180				MARKED: FM 55503				
0190	1	87 37 603		7), B204L, ACS	1	Gearbox	Växellåda	5
0200				MARKED: FC 55501				
0210								
0220	1	87 38 270		7), -1995, B258I	1	Gearbox	Växellåda	5
0230				MARKED: FM 51602				
0240	1	87 43 890		7), 1996-1997, B258I	1	Gearbox	Växellåda	5
0250				MARKED: FM 54602				

7. Also available as exchange unit. Finns även som utbytesenhet.
23. Ch. -R2023958
24. Ch. R2023959-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-A18

Gear box case
Växellådshus

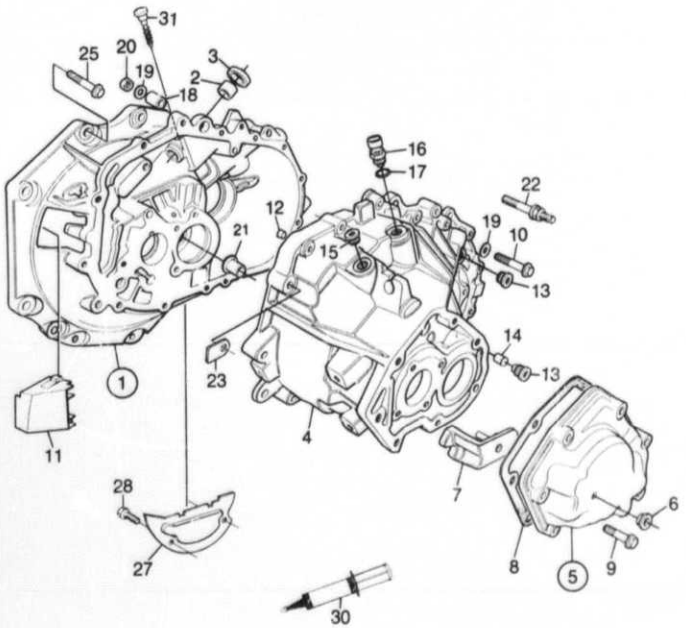

F8695 AAC94

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1	*87 37 090*		223,235), 4-CYL NLS – USE 8748188	1	.Bell housing	.Kopplingskåpa	5
0030	1	87 47 321		224,236), 4-CYL	1	.Bell housing	.Kopplingskåpa	5
0040	1	87 37 652		223,235), 4-CYL, ACS	1	.Bell housing	.Kopplingskåpa	5
0050	1	87 47 339		224,236), 4-CYL, ACS	1	.Bell housing	.Kopplingskåpa	5
0060	1	87 35 250		223,235), 6-CYL	1	.Bell housing	.Kopplingskåpa	5
0070	1	87 47 347		224,236)-1997, 6-CYL	1	.Bell housing	.Kopplingskåpa	5
0080	2	*87 31 143*		1) NLS	1	..Bushing	..Bussning	4
0090	3	*87 34 998*		1994 NLS – USE 8741878	1	..Seal	..Tätning	4
0100	3	87 41 878		1995-	1	..Seal	..Tätning	4
0110	4	*87 35 268*		51,235) NLS – USE 8744047	1	.Gearbox housing	.Växellådshus	6
0120	4	87 44 047		52,236)	1	.Gearbox housing	.Växellådshus	6
0130	4	*87 37 660*		51,235), ACS NLS – USE 8744211	1	.Gearbox housing	.Växellådshus	6
0140	4	87 44 211		52,236), ACS	1	.Gearbox housing	.Växellådshus	6
0150	5	87 34 733		245,238)	1	.Cover	.Lock	5
0160	5	87 46 463		246,237)	1	.Cover	.Lock	5
0170	6	87 34 105			1	..Washer	..Bricka	5
0180	7	87 34 097			1	..Oil collector	..Oljesamlare	5
0190	8	87 34 824			1	.Gasket	.Packning	3
0200	9	79 72 714			7	.Flange screw	.Flänsskruv	5
0210	10	79 72 714			14	.Flange screw	.Flänsskruv	5
0220	11	87 34 816			1	.Cover	.Lock	6
0230	12	87 01 658			1	.Sintered compact	.Sinterkropp	3
0240	13	87 34 873		-1995	2	.Plug	.Plugg	6
0250	13	87 43 858		1996-	2	.Plug	.Plugg	6
0260	14	87 34 881			1	.Magnet	.Magnet	3
0270	15	87 43 858		239,238	1	.Plug	.Plugg	6
0280	15	47 76 266		240,237	1	.Plug	.Plugg	6
0290	16	*42 32 666*		45,235) NLS – USE 4617668	1	.Reverse light contact	.Backljuskontakt	3
0300	16	46 17 668		46,236)	1	.Reverse light contact	.Backljuskontakt	3
0310	17	43 46 748		-1997	1	.Gasket	.Packning	3
0320	17	* 49 40 169		1998-	1	.Gasket	.Packning	3
0330	18	87 23 967			2	.Guide pin	.Styrstift	5
0340	19	70 61 328			2	.Washer	.Bricka	5
0350	20	80 74 106			2	.Nut	.Mutter	5
0360	21	87 30 665			1	.Sleeve	.Hylsa	4
0370	22	87 38 411			3	.Flange screw	.Flänsskruv	5
0380	23	87 39 682		ACS	1	.Bracket	.Fäste	
0390	25	79 84 297		4-CYL	5	Screw	Skruv	5
0400	25	79 82 606		6-CYL	7	Hexagon screw	Sexkantsskruv	5

1. Not as separate spare part. Ej som separat reservdel.
45. Gear box –N26339
46. Gear box N26340–
51. Gear box –N48696
52. Gear box N48697–
223. Gear box –N94145
224. Gear box N94146–
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
237. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
238. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
239. Gear box –M72563
240. Gear box M72564–
245. Gear box –M70259
246. Gear box M70260–

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-A20

Gear box case
Växellådshus

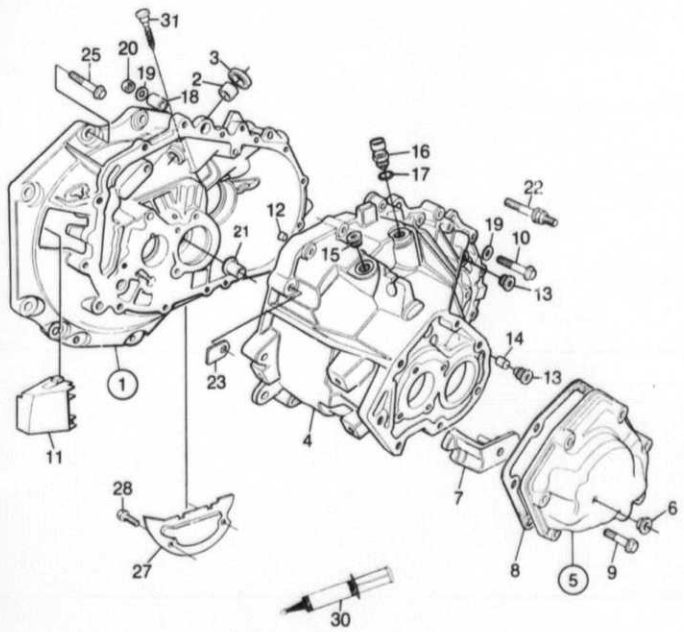

F8695 AAC94


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	27	42 35 636		4-CYL	1	Baffle	Stänkskydd	6
0420	27	42 35 651		-1996, 6-CYL	1	Baffle	Stänkskydd	6
0430	27	47 29 158		1997, 6-CYL	1	Baffle	Stänkskydd	6
0440	28	43 46 235			X	Hexagon screw	Sexkantsskruv	5
0450	30	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0460	31	43 87 544			1	Plug	Plugg	6
0470		87 81 494		See page 4-063, 4-C16	1	Gasket kit	Packningsats	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

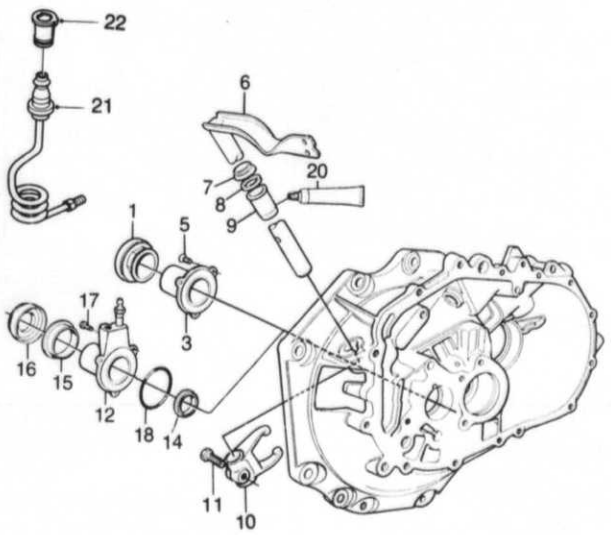

F8696 AAC94

Gear box, manual

4 -A22

Release bearing, Release fork

Växellåda, manuell

Urtrampningslager, Urkopplingsgaffel

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1	87 32 232		217,235)	1	.Release bearing	.Urtrampningslager	2
0030	1	87 45 762		218,221,235)	1	.Release bearing	.Urtrampningslager	2
0035	1	87 32 232		222,236)	1	.Release bearing	.Urtrampningslager	2
0040	3	87 39 435			1	.Sleeve	.Hylsa	4
0045				1)	1	..Seal	..Tätning	
0060	5	87 35 243			3	.Screw	.Skruv	5
0070	6	87 38 114			1	.Lever	.Hävarm	6
0080	7	87 31 739			1	.Protective cup	.Skyddskopp	
0090	8	87 32 240			1	.Seal	.Tätning	3
0100	9	87 32 190			2	.Bushing	.Bussning	4
0110	10	87 31 317			1	.Release fork	.Urkopplingsgaffel	3
0120	11	87 31 432			1	.Screw	.Skruv	5
0130	12	87 36 969		ACS	1	.Slave cylinder	.Slavcylinder	2
0135	12	* 87 48 667		1998-, LHD	1	.Slave cylinder	.Slavcylinder	2
0140	14	87 34 980		ACS	1	..Seal	..Tätning	2
0145	14			1), 1998-, LHD	1	..Seal	..Tätning	
0150	15	87 38 080		ACS	1	..Dust cover	..Dammskydd	6
0160	16	87 38 072		ACS	1	..Release bearing	..Urtrampningslager	2
0165	16			1), 1998-, LHD	1	..Release bearing	..Urtrampningslager	
0170	17	87 38 155		ACS	3	.Screw	.Skruv	5
0171	17	87 38 155		1998-, LHD	3	.Screw	.Skruv	5
0172	18	87 29 600			1	O-ring	O-ring	3
0175	20	87 81 718		10 GR	X	Grease	Fett	
0176	21	* 87 44 427		1998-, LHD	1	Tube	Rör	2
0177	22	* 87 43 221		1998-, LHD	1	Sleeve	Hylsa	5
0180		87 81 494		See page 4-063, 4-C16	1	Gasket kit	Packningssats	3


1. Not as separate spare part. Ej som separat reservdel.
217. Gear box -N71347
218. Gear box N71348-
221. Gear box -N74831
222. Gear box N74832-
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

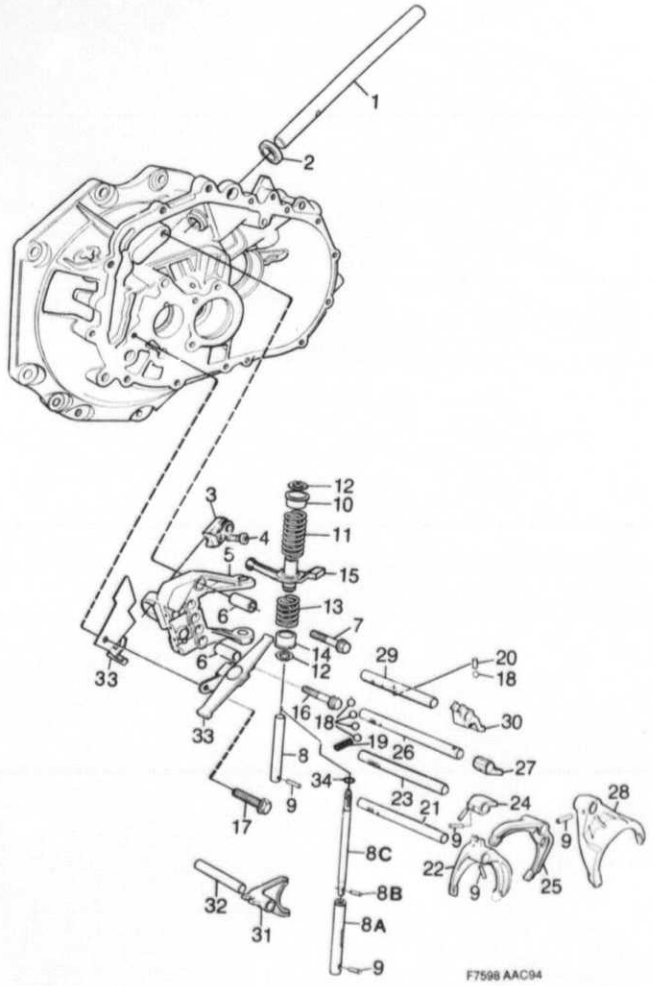

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1	87 39 781			1	.Gear rod	.Växelstång	6
0030	2			See page 4-017, 4-A18		Bushing	Bussning	
0040	3	87 35 276			1	.Companion flange	.Medbringare	5
0050	4	80 59 792			1	.Screw	.Skruv	5
0060	5	87 34 808			1	.Bearing bracket	.Lagerbock	5
0070	6	87 19 650			2	.Guide sleeve	.Styrhylsa	5
0080	7	79 72 714			1	.Flange screw	.Flänsskruv	5
0090	8	87 21 557		-1995	1	.Pivot pin	.Lagertapp	6
0100	8	87 46 216		1996-	1	.Pivot pin	.Lagertapp	6
0110	8A	87 33 719		ACS	1	.Shaft	.Axel	6
0120	8B	80 49 363		229,235), ACS	1	.Pin	.Pinne	5
0125	8B	45 80 908		230,236), ACS	1	.Pin	.Pinne	5
0130	8C	87 37 694		10), 1994, ACS	1	.Shaft	.Axel	6
0140	8C	46 25 265		11), 1995-, ACS	1	.Shaft	.Axel	6
0150	9	81 17 657			7	.Pin	.Pinne	5
0160	10	87 21 565			1	.Guide	.Styrning	4
0170	11	87 21 573			1	.Spring	.Fjäder	5
0180	12	87 26 754			2	.Retaining ring	.Spårring	5
0190	13	87 21 615			1	.Spring	.Fjäder	5
0200	14	87 21 623			1	.Spring guide	.Fjäderstyrning	4
0210	15	87 41 381			1	.Gear selector	.Växelförare	6
0220	15	87 41 431		ACS	1	.Gear selector	.Växelförare	6
0230	16	79 72 714			1	.Flange screw	.Flänsskruv	5
0240	17	79 73 779			1	.Screw	.Skruv	5
0250	18	87 17 027			7	.Ball	.Kula	5
0260	19	87 23 397			4	.Spring	.Fjäder	5
0270	20	87 19 684			2	.Pin	.Pinne	5
0280	21	87 41 043			1	.Shift rail	.Växelföraraxel	6
0290						1/2	1/2	
0300	22	87 34 741			1	.Gear selector fork	.Växelförargaffel	5
0310						1/2	1/2	
0320	23	87 31 077			1	.Shift rail	.Växelföraraxel	6
0330						3/4	3/4	
0340	24	*87 19 593*		1994	1	.Companion flange	.Medbringare	5
0350				NLS – USE 8740649		3/4	3/4	
0360	24	87 40 649		1995-	1	.Companion flange	.Medbringare	5
0370						3/4	3/4	
0380	25	87 27 869			1	.Gear selector fork	.Växelförargaffel	5
0390						3/4	3/4	
0400	26	87 40 714			1	.Shift rail	.Växelföraraxel	6
0410						5	5	
0420	27	*87 19 601*		1994	1	.Companion flange	.Medbringare	5
0430				NLS – USE 8740656		5	5	
0440	27	87 40 656		1995-	1	.Companion flange	.Medbringare	5
0450						5	5	
0460	28	87 35 755		243,238)	1	.Gear selector fork	.Växelförargaffel	5
0470						5	5	


10. CV, ch. -S7009999
11. CV, ch. S7010000-
229. Gear box -N67867
230. Gear box N67868-
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
238. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
243. Gear box -M67875

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

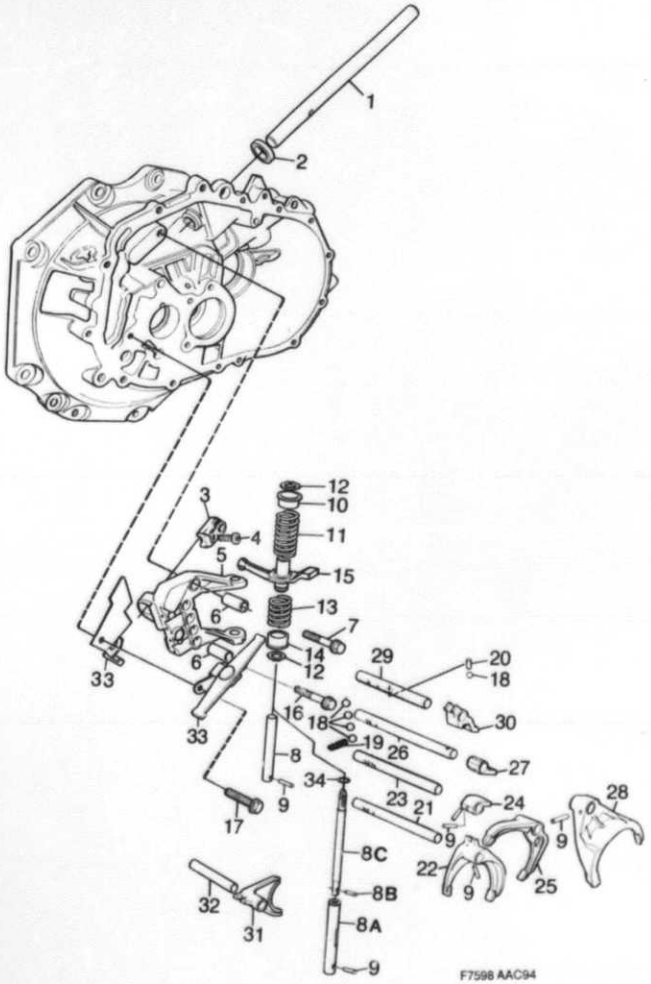

Gear box, manual

4 -B02 *Gear shift forks, gear shift shafts*

Växellåda, manuell

Växelförargafflar, växelföraraxlar

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0475	28	87 46 638		244,237)	1	.Gear selector fork	.Växelförargaffel	5
0476						5	5	
0480	29	87 35 656			1	.Shift rail	.Växelföraraxel	6
0490						R	R	
0500	30	*87 40 151*		1994, (8730046)	1	.Companion flange	.Medbringare	5
0510				NLS – USE 8741811		R	R	
0520	30	87 41 811		1995	1	.Companion flange	.Medbringare	5
0530						R	R	
0540	30	87 46 190		1996-	1	.Companion flange	.Medbringare	5
0550						R	R	
0560	31	87 35 599			1	.Gear selector fork	.Växelförargaffel	5
0570						R	R	
0580	32	87 30 111			1	.Shift rail	.Växelföraraxel	6
0590						R	R	
0600	33	87 35 102		57,235)	1	.Lever	.Hävarm	5
0610						R	R	
0615	33	87 45 830		58,236)	1	.Lever	.Hävarm	5
0616						R	R	
0620	34	87 24 874		ACS	1	.Seal	.Tätning	4


57. Gear box -N57432
58. Gear box N57433-
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
237. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
244. Gear box M67876-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

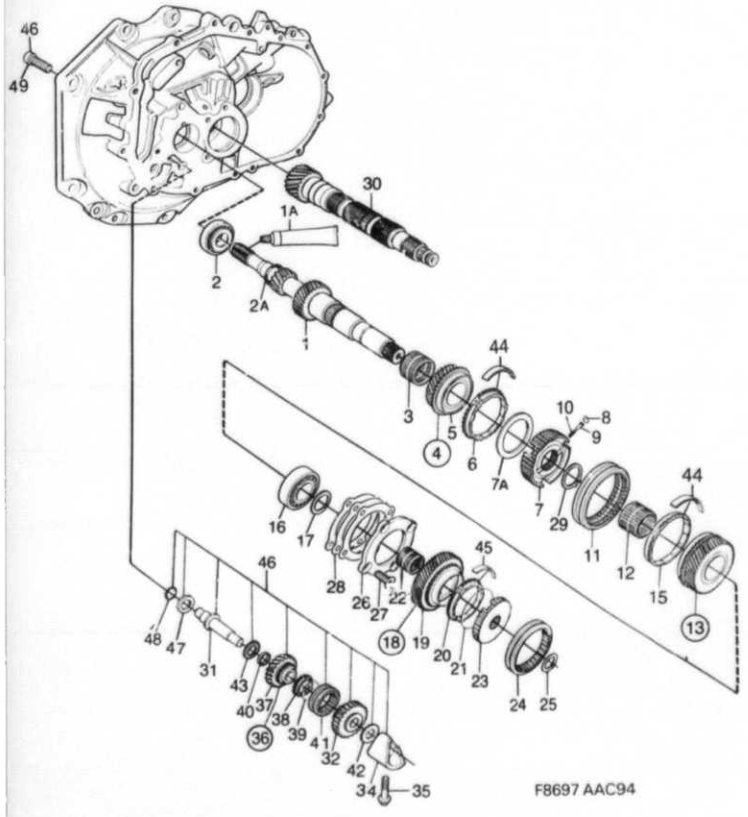

F8697 AAC94

Gear box, manual

4 –B04

Shafts, gears

Input shaft

Växellåda, manuell

Axlar, kugghjul

Ingående axel

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1	87 34 550		241,238)	1	.Shaft	.Axel	6
0022	1	87 47 917		242,237)	1	.Shaft	.Axel	6
0025	1A	87 81 084		50 GR	X	.Grease	.Fett	
0030	2	87 19 163			1	.Roller bearing	.Rullager	3
0035	2A			See page 4-021, 4-A22	1	.Seal	.Tätning	
0040	3	87 31 150			1	.Needle bearing	.Nållager	3
0050	4	87 81 445			1	.Gear	.Kuggdrev	4
0060						3	3	
0070	5	87 37 439		1)	1	..Gear	..Kuggdrev	4
0080	6	*87 20 112*		28) NLS – USE 8740185	1	..Synchromesh	..Synkronisering	3
0085	6	87 40 185		29)	1	..Synchromesh	..Synkronisering	3
0090	7	87 41 001		241,238)	1	.Hub	.Nav	5
0091	7	87 47 909		242,237)	1	.Hub	.Nav	5
0092	7A	87 47 925		242,237)	1	.Washer	.Bricka	5
0100	8	87 16 839			1	.Roller	.Rulle	5
0110	9	87 16 821			1	.Plunger	.Plunge	5
0120	10	87 23 330			1	.Compression spring	.Tryckfjäder	4
0130	11	87 36 597			1	.Sleeve	.Muff	5
0140	12	87 31 192			1	.Needle bearing	.Nållager	3
0150	13	87 81 452			1	.Gear	.Kuggdrev	4
0160						4	4	
0170	14	87 37 447		1)	1	..Gear	..Kuggdrev	4
0180	15	*87 20 112*		28) NLS – USE 8740185	1	..Synchromesh	..Synkronisering	3
0185	15	87 40 185		29)	1	..Synchromesh	..Synkronisering	3
0190	16	87 35 490			1	.Roller bearing	.Rullager	3
0200	17	87 21 946			1	.Retaining ring	.Spärring	4
0210	18	87 81 510			1	.Gear	.Kuggdrev	4
0220						5	5	
0230	19	87 37 454		1)	1	..Gear	..Kuggdrev	4
0240	20	*87 34 592*		28) NLS – USE 8740201	1	..Synchromesh	..Synkronisering	3
0244	20	87 40 201		29,233,238)	1	..Synchromesh	..Synkronisering	3
0245	20	87 45 606		234,237)	1	..Synchromesh	..Synkronisering	3
0250	21	87 35 441			1	..Spring ring	..Fjäderring	4
0260	22	87 21 953			1	.Needle bearing	.Nållager	3
0270	23	87 39 815		233,238)	1	.Hub	.Nav	5
0275	23	87 44 997		234,237)	1	.Hub	.Nav	5
0280	24	87 37 074			1	.Sleeve	.Muff	5
0290	25	87 34 071			1	.Retaining ring	.Spärring	5
0300	26	87 31 333			1	.Support	.Stöd	5
0310	27	87 41 506			4	.Screw	.Skruv	5
0320	28	87 31 366		0.10 MM	X	.Adjusting washer	.Justerbricka	5
0330	28	87 31 374		0.15 MM	X	.Adjusting washer	.Justerbricka	5
0340	28	87 31 382		0.30 MM	X	.Adjusting washer	.Justerbricka	5
0343	28	87 42 421		1995-, 0.50 MM	X	.Adjusting washer	.Justerbricka	5
0346	28	87 42 439		1995-, 1.00 MM	X	.Adjusting washer	.Justerbricka	5
0350	29	87 19 189			1	.Lock ring	.Låsring	5
0360	30			See page 4-031, 4-B08	1	.Pinion shaft	.Pinjongaxel	


1. Not as separate spare part. Ej som separat reservdel.
28. Gear box –J42882
29. Gear box J42883–
233. Gear box –M24982
234. Gear box M24983–
237. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
238. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
241. Gear box –M65652
242. Gear box M65653–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

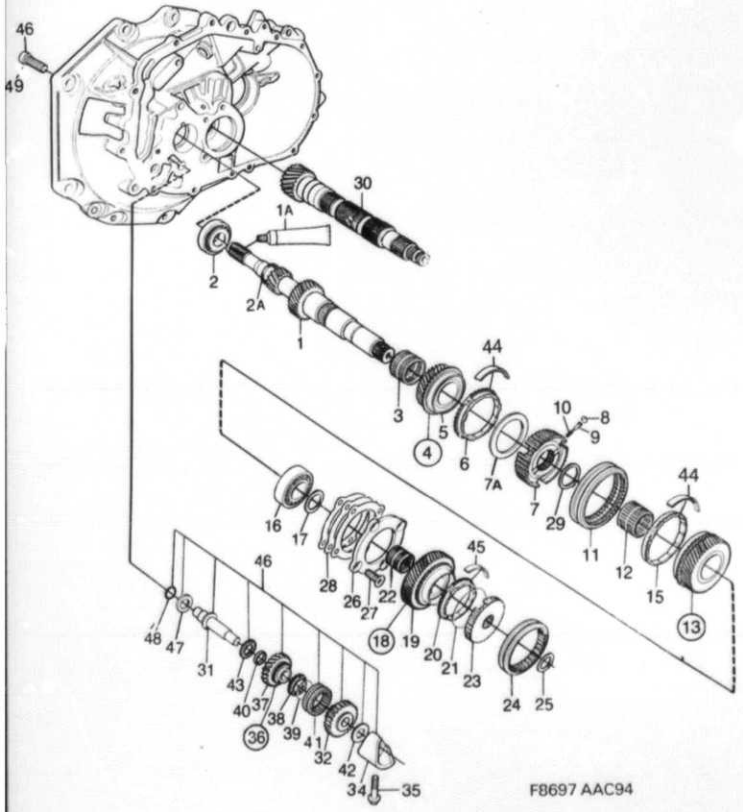

Gear box, manual

4 –B06

Shafts, gears
Input shaft

Växellåda, manuell

Axlar, kugghjul
Ingående axel

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0370	31	*87 39 450*		223,235)	1	.Shift rail	.Växelföraraxel	6
0380				NLS – USE 8742371		R	R	
0385	31	87 44 237		224,236)	1	.Shift rail	.Växelföraraxel	6
0388						R	R	
0390	32	87 36 399			1	.Gear	.Kugghjul	5
0410	34	87 40 672			1	.Support	.Stöd	5
0420	35	79 72 714			1	.Flange screw	.Flänsskruv	5
0430	36	87 81 437		223,235)	1	.Gear	.Kugghjul	5
0440						R	R	
0445	36	87 81 882		224,236)	1	.Gear	.Kugghjul	5
0448						R	R	
0450	37	87 35 623		1,223,235)	1	..Gear	..Kugghjul	5
0455	37	87 47 016		1,224,236)	1	..Reverse gear	..Backkugghjul	5
0460	38	*87 35 615*		28) NLS – USE 8740169	1	..Synchromesh	..Synkronisering	3
0465	38	87 40 169		29)	1	..Synchromesh	..Synkronisering	3
0470	39	87 29 964			1	..Spring ring	..Fjäderring	4
0480	40	87 41 241			2	..Bushing	..Bussning	4
0490	41	87 41 324		57,235)	1	.Sleeve	.Muff	5
0495	41	87 44 153		58,236)	1	.Sleeve	.Muff	5
0500	42	87 40 680			1	.Thrust washer	.Axialbricka	4
0510	43	87 34 659			1	.Needle bearing	.Axialnållager	3
0520	44	87 43 791		41)	6	.Leaf spring	.Bladfjäder	4
0530	45	87 43 809		41)	3	.Leaf spring	.Bladfjäder	4
0540	46	87 43 460		44,215,235), 6-CYL	1	.Gear	.Kugghjul	5
0550	46	87 46 752		216,223,235)	1	.Gear	.Kugghjul	5
0560	46	87 46 372		224,236)	1	.Gear	.Kugghjul	5
0570	47	87 44 252		224,236)	1	.Spacer washer	.Distansbricka	5
0580	48	79 67 573		224,236)	1	.O-ring	.O-ring	2
0590	49	80 59 792		224,236)	1	.Screw	.Skruv	5


1. Not as separate spare part. Ej som separat reservdel.
28. Gear box –J42882
29. Gear box J42883–
41. Gear box J95349–
44. See SI 471-1535 Se SI 471-1535
57. Gear box –N57432
58. Gear box N57433–
215. Gear box –N57432
216. Gear box N57433–
223. Gear box –N94145
224. Gear box N94146–
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

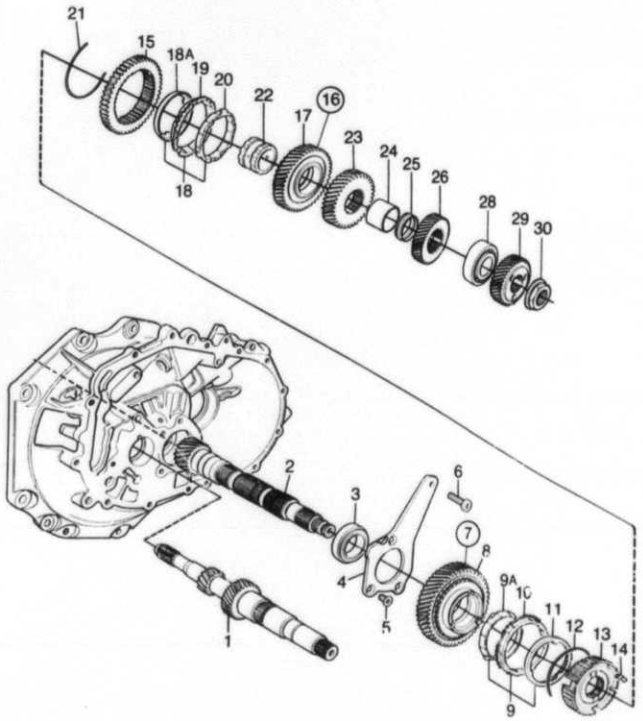

F8595 AAC94

Gear box, manual

4 –B08 Shafts, gears Output shaft

Växellåda, manuell

Axlar, kugghjul

Utgående axel

0335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020	1			See page 4-027, 4-B04	1	.Shaft	.Axel	
0030	2	87 30 723		B206I, FM 54501	1	.Pinion shaft	.Pinjongaxel	5
0040	2	87 30 566		B206I, FM 51501	1	.Pinion shaft	.Pinjongaxel	5
0045	2	87 30 566		B204I	1	.Pinion shaft	.Pinjongaxel	5
0050	2	87 30 723		59,235), B234	1	.Pinion shaft	.Pinjongaxel	5
0055	2	87 46 877		60,236), B234	1	.Pinion shaft	.Pinjongaxel	5
0060	2	87 30 566		-1995, B258I	1	.Pinion shaft	.Pinjongaxel	5
0065	2	87 30 723		1996-,59,235), B258I	1	.Pinion shaft	.Pinjongaxel	5
0067	2	87 46 877		60,236)-1997, B258I	1	.Pinion shaft	.Pinjongaxel	5
0070	2	87 34 378		42,235), TURBO	1	.Pinion shaft	.Pinjongaxel	5
0075	2	87 42 165		43,236), TURBO	1	.Pinion shaft	.Pinjongaxel	5
0080	3	87 29 378			1	.Roller bearing	.Rullager	3
0090	4	87 40 631		257,235), 4-CYL	1	.Support	.Stöd	5
0091	4	• 87 46 687		258,236), 4-CYL	1	.Support	.Stöd	5
0092	4	87 40 631		255,235), 6-CYL	1	.Support	.Stöd	5
0093	4	• 87 46 687		256,236)-1997, 6-CYL	1	.Support	.Stöd	5
0100	5	87 41 506		257,235), 4-CYL	3	.Screw	.Skruv	5
0101	5	• 46 85 186		258,236), 4-CYL	3	.Screw	.Skruv	5
0102	5	87 41 506		255,235), 6-CYL	3	.Screw	.Skruv	5
0103	5	• 46 85 186		256,236)-1997, 6-CYL	3	.Screw	.Skruv	5
0110	6	80 59 792			1	.Screw	.Skruv	5
0120	7	87 81 478			1	.Gear	.Kugghjul	4
0130						1	1	
0140	8	87 35 862		1)	1	..Gear	..Kugghjul	4
0150	9	87 81 734			1	..Synchromesh	..Synkronisering	3
0160	9A	*87 34 428*		28) NLS – USE 8740789	1	...Synchromesh	...Synkronisering	3
0170	9A	87 40 789		29)	1	...Synchromesh	...Synkronisering	3
0180	10	*87 34 444*		28) NLS – USE 8740797	1	...Synchromesh	...Synkronisering	3
0190	10	87 40 797		29)	1	...Synchromesh	...Synkronisering	3
0200	11	87 34 436			1	...Synchromesh	...Synkronisering	3
0210	12	87 34 451			1	.Spring ring	.Fjäderring	4
0220	13	87 35 920			1	.Hub	.Nav	5
0230	14	87 35 680			3	.Companion flange	.Medbringare	4
0240	15	87 35 896			1	.Sleeve	.Muff	5
0250	16	87 81 486			1	.Gear	.Kugghjul	4
0260						2	2	
0270	17	87 35 847		1)	1	..Gear	..Kugghjul	4
0280	18	87 81 734			1	..Synchromesh	..Synkronisering	3
0290	18A	87 34 436			1	...Synchromesh	...Synkronisering	3
0300	19	*87 34 444*		28) NLS – USE 8740797	1	...Synchromesh	...Synkronisering	3
0310	19	87 40 797		29)	1	...Synchromesh	...Synkronisering	3
0320	20	*87 34 428*		28) NLS – USE 8740789	1	...Synchromesh	...Synkronisering	3
0330	20	87 40 789		29)	1	...Synchromesh	...Synkronisering	3
0340	21	87 34 451			1	.Spring ring	.Fjäderring	4
0350	22	*87 30 350*		47,235) NLS – USE 8743205	1	.Bearing bushing	.Lagerbussning	3
0350								


1. Not as separate spare part. Ej som separat reservdel.
28. Gear box –J42882
29. Gear box J42883–
42. Gear box –N05764
43. Gear box N05765–
47. Gear box –N21685
59. Gear box –N58100
60. Gear box N581001–
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
255. Gear box –N85589
256. Gear box N85590–
257. Gear box –N94145
258. Gear box N94146–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

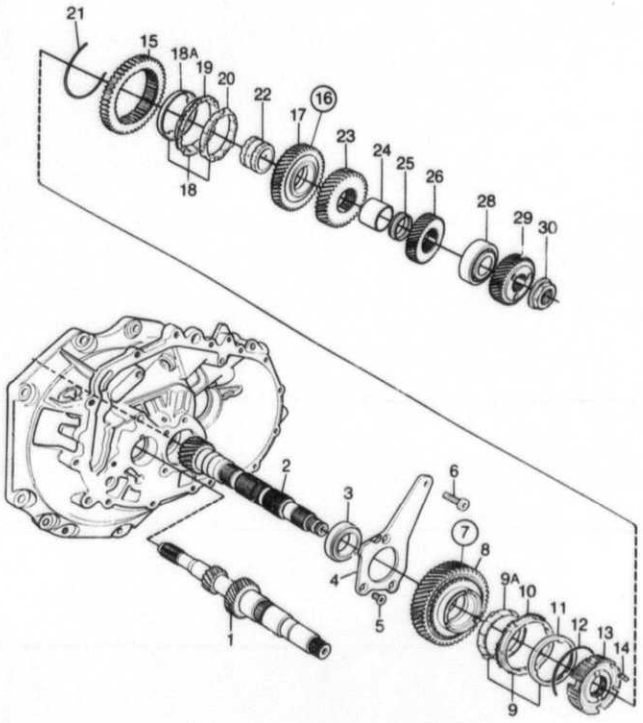

F8595 AAC94

0335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0355	22	87 43 205		48,236)	1	.Bearing bushing	.Lagerbussning	3
0360	23	87 34 337			1	.Gear	.Kugghjul	4
0370						3	3	
0380	24	87 35 359			1	.Spacer sleeve	.Distanshylsa	5
0390	25	87 34 477			1	.Sleeve	.Hylsa	4
0400	26	87 25 327			1	.Gear	.Kugghjul	4
0410						4	4	
0420	28	*87 37 835*		-1996 NLS – USE 8748261	1	.Roller bearing	.Rullager	3
0425	28	87 48 261		1997-	1	.Roller bearing	.Rullager	3
0430	29	87 35 813			1	.Gear	.Kugghjul	4
0440						5	5	
0450	30	87 35 516			1	.Nut	.Mutter	5

48. Gear box N21686–
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-B12

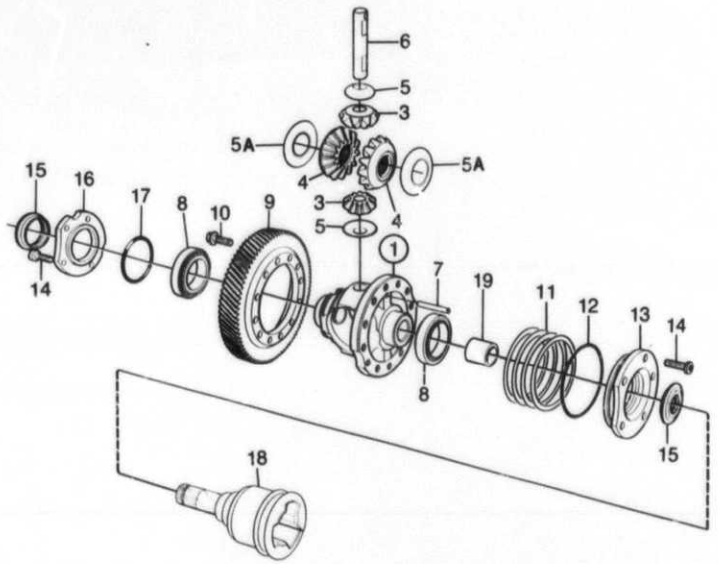

F4868 AAC94

0350	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				See page 4-015, 4-A16		Gear box, manual	Växellåda, manuell	
0020				See page 4-049, 4-C02		Gear box, automatic	Växellåda, automatisk	
0030	1	87 41 829		55,235), M	1	.Differential	.Differential	6
0035	1	87 44 765		56,236), M	1	.Differential	.Differential	6
0040	3	87 33 909		1), M	2	..Differential pinion	..Differentialdrev	4
0050	4	87 33 446		1), M	2	..Differential side gear	..Differentialhjul	4
0060	5	87 31 788		1,30), M	2	..Washer	..Bricka	3
0065	5	87 41 464		1,31), M	2	..Washer	..Bricka	3
0070	5A	87 41 332		1), M	2	..Washer	..Bricka	3
0080	6	87 19 940		1), -1996, M	1	..Differential shaft	..Differentialaxel	5
0085	6	87 47 255		1), 1997-, M	1	..Differential shaft	..Differentialaxel	5
0090	7	81 17 863		1,55,235), M	1	..Roll pin	..Spännstift	5
0095	7	79 18 584		1,56,236), M	1	..Roll pin	..Spännstift	5
0100	8	87 34 568		M	2	.Roller bearing	.Rullager	3
0110	9	87 30 715		M, B206I, FM 54501	1	.Gear	.Kugghjul	5
0120	9	87 30 285		55,235), M, B206I,B204I, FM51501	1	.Gear	.Kugghjul	5
0121								
0125	9	87 44 518		56,236), M,B204I,FM51501	1	.Gear	.Kugghjul	5
0130	9	87 30 715		55,235), M, B234I	1	.Gear	.Kugghjul	5
0131	9	87 30 715		1996-,55,235), M, B258I	1	.Gear	.Kugghjul	5
0133	9	87 44 492		56,59,235),M,B234I,B258I	1	.Gear	.Kugghjul	5
0138	9	87 46 893		60,236), M, B234I, B258I	1	.Gear	.Kugghjul	5
0145	9	87 30 285		-1995, M, B258I	1	.Gear	.Kugghjul	5
0150	9	87 34 386		42,235), M, TURBO	1	.Gear	.Kugghjul	5
0155	9	87 42 173		43,235),-1995, M, TURBO	1	.Gear	.Kugghjul	5
0157	9	87 44 625		1996-, M, TURBO	1	.Gear	.Kugghjul	5
0160	10	*87 35 193*		36), M NLS – USE 8741712	12	.Screw	.Skruv	5
0165	10	87 41 712		37,55,235), M	12	.Screw	.Skruv	5
0167	10	46 85 350		56,236), M	11	.Screw	.Skruv	5
0170	11	87 34 618		M, 0,10 MM	X	.Adjusting washer	.Justerbricka	5
0180	11	87 34 626		M, 0,15 MM	X	.Adjusting washer	.Justerbricka	5
0190	11	87 34 634		M, 0,30 MM	X	.Adjusting washer	.Justerbricka	5
0200	11	87 34 642		M, 0,50 MM	X	.Adjusting washer	.Justerbricka	5
0210	12	80 47 144		M	1	.O-ring	.O-ring	2
0220	13	87 34 022		M	1	.Sealing retainer	.Tätningshållare	5
0230	14	80 59 792		M	9	.Screw	.Skruv	5
0240	15	87 32 117		M	2	.Seal	.Tätning	5
0250	15	44 91 189		A	2	.Seal	.Tätning	5
0260	16	87 34 014		M	1	.Bearing seat	.Lagersäte	5
0270	17	87 31 390		M	1	.O-ring	.O-ring	2
0280	18			See page 4-045, 4-B22		Companion flange	Medbringare	
0290	19	87 33 230		M	2	.Bushing	.Bussning	3
0300		87 81 494		See page 4-063, 4-C16	1	Gasket kit	Packningsats	3

1. Not as separate spare part. Ej som separat reservdel.
30. Gear box –J44605
31. Gear box J44606–
36. Gear box –J58613
37. Gear box J58614–
42. Gear box –N05764
43. Gear box N05765–
55. Gear box –N55112
56. Gear box N55113–
59. Gear box –N58100
60. Gear box N581001–
235. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
236. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -B14

Gear shift lever — Växelspak

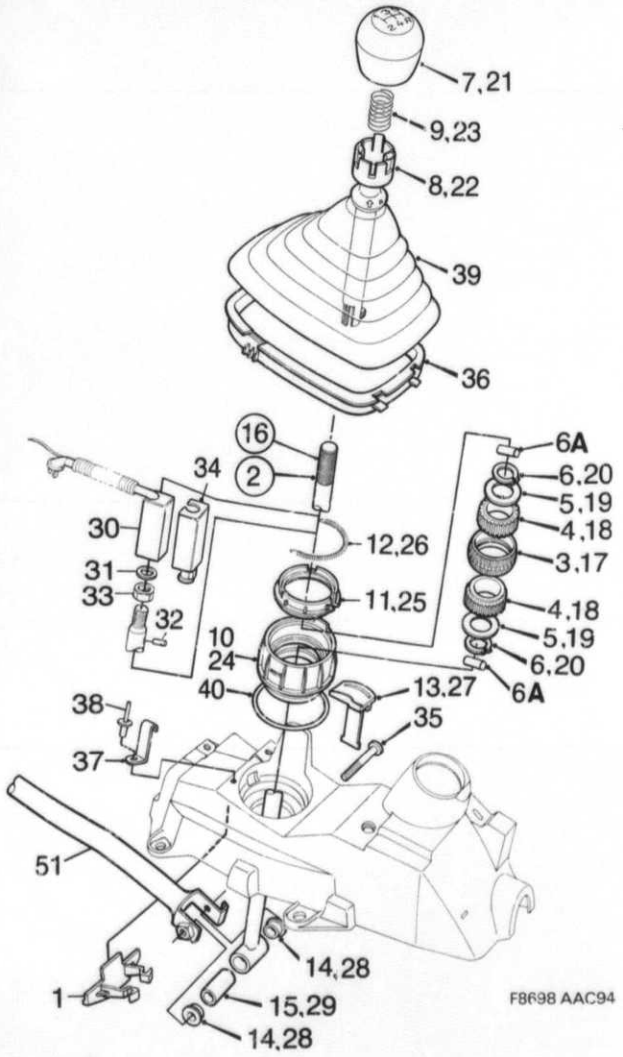

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 91 411			1	Lever stop	Spakstopp	
0020	2	*44 90 702*		-1996 NLS – USE 4580015	1	Gear lever	Växelspak	8
0025	2	45 80 015		1997-	1	Gear lever	Växelspak	
0030	3	40 27 876			1	.Ball	.Kula	5
0040	4	40 27 892			2	.Bushing	.Bussning	3
0050	5	41 21 588			2	.Washer	.Bricka	4
0060	6	80 47 706		-1996	2	.Retaining ring	.Spärring	5
0065	6A	46 85 657		1997-	2	.Roll pin	.Spännstift	
0070	7	40 27 934			1	Knob	Knopp	
0080	7	42 79 303		1996-	1	Knob	Knopp	
0090						leather	läder	
0100	8	40 27 868			1	Companion flange	Medbringare	3
0110	9	44 77 204			1	Spring	Fjäder	5
0120	10	44 77 824			1	Ball socket	Kulskål	6
0130	11	40 27 850			1	Ball socket	Kulskål	6
0140	12	40 27 942			1	Spring	Fjäder	5
0150	13	44 90 314			1	Reverse lock	Backspärr	5
0160	14	75 59 875			2	Bushing	Bussning	3
0170	15	75 77 729			1	Spacer	Distans	3
0180	16	46 25 083		-1997, ACS	1	Gear lever	Växelspak	
0190	16	46 25 810		1996-, ACS	1	Gear lever	Växelspak	
0191						leather	läder	
0200	17	40 27 876			1	.Ball	.Kula	5
0210	18	40 27 892			2	.Bushing	.Bussning	3
0220	19	41 21 588			2	.Washer	.Bricka	4
0230	20	80 47 706			2	.Retaining ring	.Spärring	5
0240	21	*44 90 132*		1), ACS NLS	1	.Knob	.Knopp	
0250	21	*46 25 570*		1), 1996-, ACS NLS	1	.Knob	.Knopp	
0260						leather	läder	
0270	22	*42 82 935*		1), ACS NLS	1	.Companion flange	.Medbringare	3
0280	23	*44 90 157*		1), ACS NLS	1	.Spring	.Fjäder	5
0290	24	44 77 824			1	.Ball socket	.Kulskål	6
0300	25	40 27 850			1	.Ball socket	.Kulskål	6
0310	26	40 27 942			1	.Spring	.Fjäder	5
0320	27	44 90 314			1	.Reverse lock	.Backspärr	5
0330	28	75 59 875			2	.Bushing	.Bussning	3
0340	29	75 77 729			1	.Spacer	.Distans	3
0350	30	*44 90 785*		1), ACS NLS	1	.Sensor	.Sensor	
0360		41 17 263		ACS	1	..Connector housing	..Kontakthus	4
0370		41 15 077		ACS	3	..Cable terminal	..Kabelsko	8
0380	31	*44 90 793*		1), ACS NLS	1	.Washer	.Bricka	5
0390	32	*79 56 220*		1), ACS NLS	1	.Roll pin	.Spännstift	5
0400	33	79 79 511		1), ACS	2	.Nut	.Mutter	5
0410	34	*42 82 943*		1), ACS NLS	1	.Companion flange	.Medbringare	
0485	35	75 54 553		53)	1	Screw	Skruv	5
0490	35	80 83 960		54)	1	Screw	Skruv	5
0600	36	43 86 322			1	Frame	Ram	
0605	36	46 25 232		-1996	1	Frame	Ram	3
0606						leather	läder	
0607	36	46 26 826		1997-	1	Frame	Ram	3
0608						leather	läder	
0610	37	46 25 091		25,26)	1	Bracket	Konsol	6
0620	38	79 72 490		25,26)	1	Rivet	Nit	5
0630	39	42 82 901			1	Gaiter	Damask	6
0640	39	43 87 932		-1996, ACS	1	Gaiter	Damask	6
0650	39	46 25 471			1	Gaiter	Damask	6
0660						leather	läder	
0670	40	79 67 912			1	O-ring	O-ring	2

1. Not as separate spare part. Ej som separat reservdel.
25. Ch. R2011088-
26. Ch. -R2013800
53. Ch. -T2007552, -T7001301
54. Ch. T2007553-, T7001302-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-B16

Gear shift lever
Växelspak

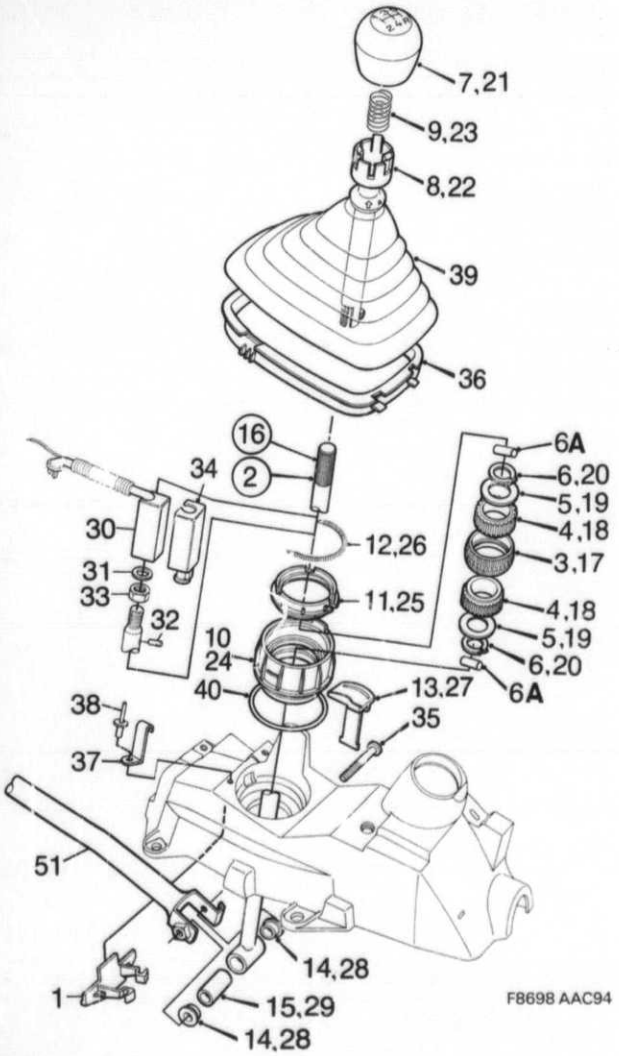


0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0680	51			See page 4-041, 4-B18		Gear rod	Växelstång	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

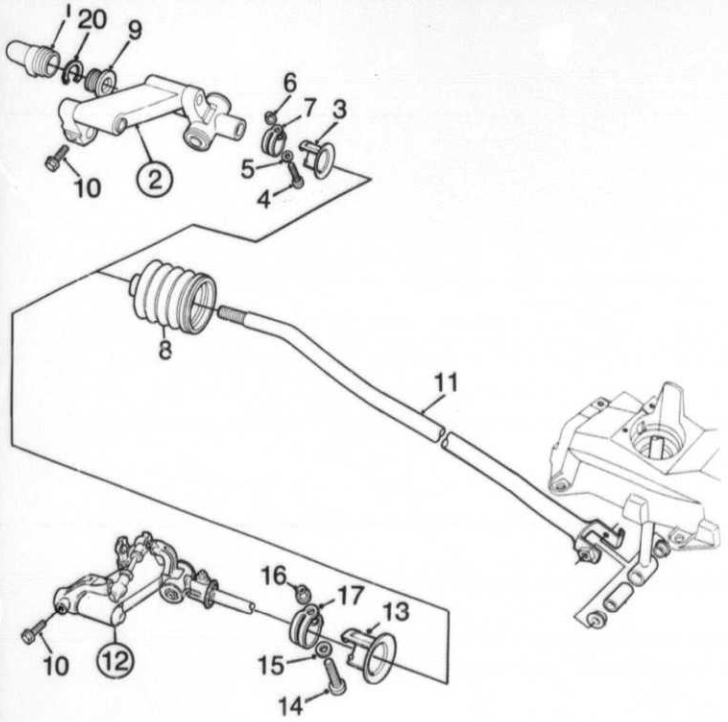

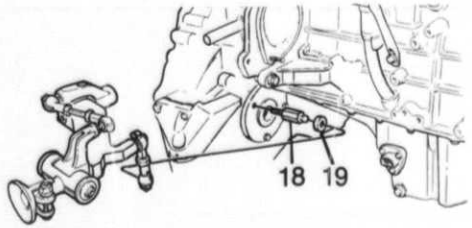

F8536 AAC94

4-B18

Gear rod — *Växelstång*

0410	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1	42 82 323		-1996	1	Bellows	Bälg	5
0020	2	42 82 307		-1996	1	Linkage	Länkage	
0030	3	42 82 372		-1996	1	.Cone fitting	.Styrkona	
0040	4	75 41 907		-1996	1	.Screw	.Skruv	5
0050	5	80 29 985		-1996	1	.Washer	.Bricka	5
0060	6	79 75 501		-1996	1	.Nut	.Mutter	5
0070	7	93 48 533		-1996	1	.Clamp	.Klammer	5
0080	8	42 82 331			1	Gaiter	Damask	5
0090	9	43 87 361		-1996	1	Bushing	Bussning	
0100	10	79 78 190			1	Screw	Skruv	5
0110	11	44 91 262		B206I	1	Gear rod	Växelstång	5
0120	11	42 82 166			1	Gear rod	Växelstång	5
0130	12	46 26 321		1997-	1	Linkage	Länkage	
0140	13	42 82 372		1997-	1	.Cone fitting	.Styrkona	
0150	14	75 41 907		1997-	1	.Screw	.Skruv	5
0160	15	80 29 985		1997-	1	.Washer	.Bricka	5
0170	16	79 75 501		1997-	1	.Nut	.Mutter	5
0180	17	93 48 533		1997-	1	.Clamp	.Klammer	5
0190	18	46 26 677		1997-	1	Ballpin	Kulltapp	
0200	19	46 26 537		1997-	1	Seal	Tätning	
0210	20	46 85 806		-1996	1	Retaining ring	Spärring	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -B20

Gear shift housing
Växelspakshus

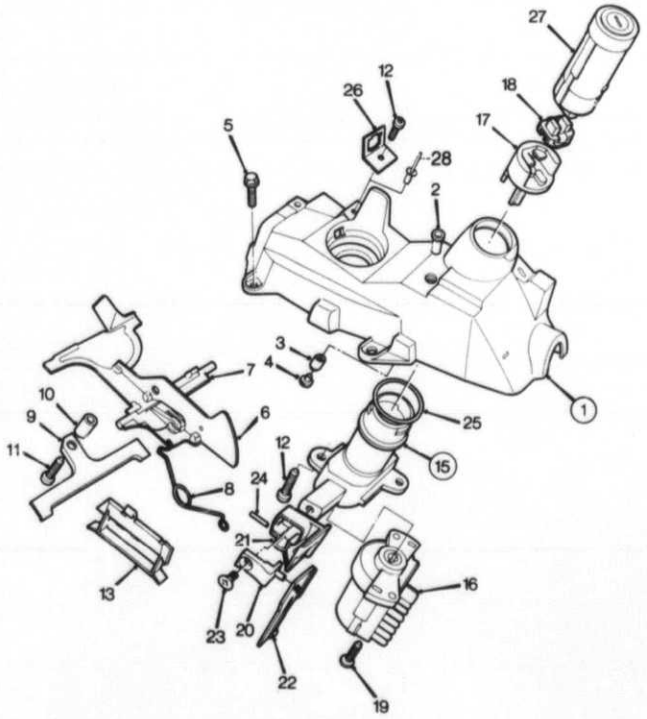

F6789 AAC94

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 90 710			1	Gear shift housing	Växelspakshus	8
0020	2	40 87 250			1	.Rivet nut	.Nitmutter	5
0030	3	43 87 346			2	.Rubber bushing	.Gummibussning	
0040	4	43 87 452			2	.Cap	.Hatt	
0050	5	79 78 109			4	Screw	Skruv	5
0060	6	43 87 320			1	Lock plate	Låsplåt	
0070	7	43 87 692			1	.Bracket	.Fäste	
0080	8	43 87 338			1	Spring	Fjäder	
0090	9	43 87 353			1	Bracket	Hållare	
0100	10	43 87 908			1	Spacer	Distans	
0110	11	40 87 367			1	Lock screw	Låsskruv	5
0120	12	79 82 176			2	Screw	Skruv	5
0130	12	79 82 176		ACS	3	Screw	Skruv	5
0140	13	43 87 684			1	Deflection limiter	Utslagsbegränsare	
0150	15	43 87 742			1	Ignition switch	Tändlås	
0160	16	*44 09 553*		-1997 NLS – USE 4946307	1	.Contact	.Kontakt	4
0170	16	• 49 46 307		1998-	1	.Contact	.Kontakt	4
0180	17	*44 90 728*		1) NLS	1	.Companion flange	.Medbringare	
0190	18	*44 90 736*		1) NLS	1	.Clutch	.Koppling	
0200	19	80 59 230			2	.Screw	.Skruv	5
0210	20	43 87 775			1	Companion flange	Medbringare	
0220	21	43 87 759			1	Carrier	Bärare	
0230	22	43 87 767			1	Top label	Ryttare	
0240	23	40 87 268			1	Lock screw	Låsskruv	5
0250	24	79 56 154			1	Roll pin	Spännstift	5
0260	25	79 72 797			1	O-ring	O-ring	2
0270	26	43 87 270		ACS	1	Bracket	Fäste	
0280	27			See page 8A-103, 5-E08		Lock cylinder	Låscylinder	
0290	28	79 72 490		11), 1995-	1	Rivet	Nit	5

1. Not as separate spare part. Ej som separat reservdel.
11. CV, ch. S7010000–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -B22

Drive shafts, outer and inner universal joint

Drivaxlar, yttre och inre knut

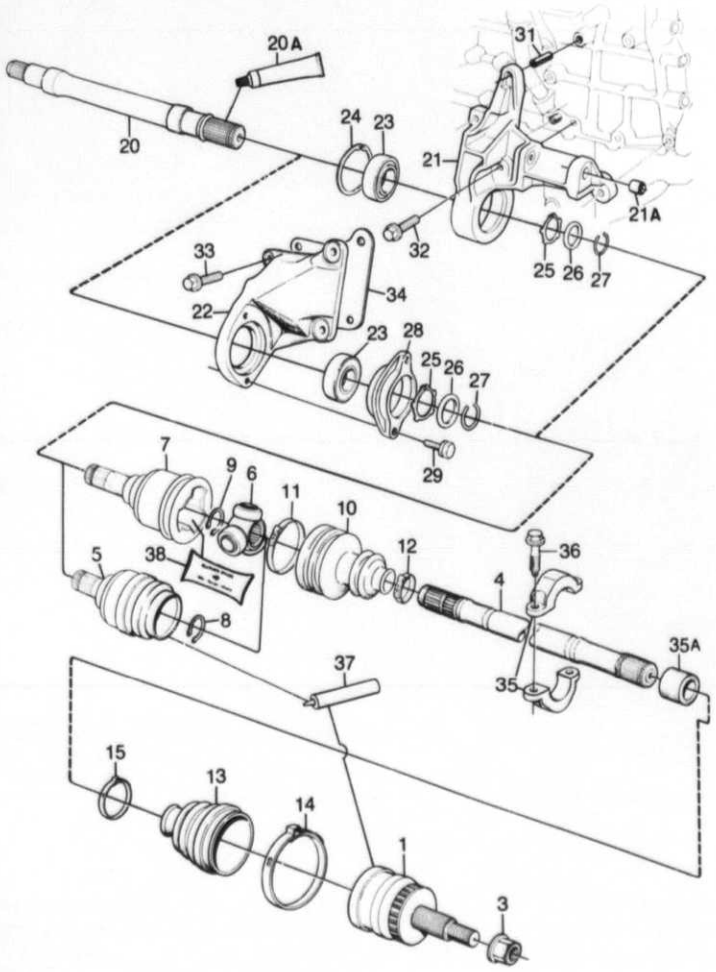

F7915 AAC94

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 99 325			2	Universal joint	Drivknut	4
0020	3	89 65 360			2	Lock nut	Låsmutter	3
0030	4	42 47 904		B206I, B204I, M	2	Drive shaft	Drivaxel	5
0040	4	42 47 904		B234I, M	2	Drive shaft	Drivaxel	5
0050	4	*42 42 400*		32), B206I, B204I, A NLS - USE 4544854	2	Drive shaft	Drivaxel	5
0060	4	*42 42 400*		32), B204L NLS - USE 4544854	2	Drive shaft	Drivaxel	5
0070	4	*42 42 400*		32), B234I, A NLS - USE 4544854	2	Drive shaft	Drivaxel	5
0080	4	*42 42 400*		32), B258I, LH NLS - USE 4544854	1	Drive shaft	Drivaxel	5
0090	4	45 44 854		33), B206I, B204I, A	2	Drive shaft	Drivaxel	5
0100	4	45 44 854		33), B204L	2	Drive shaft	Drivaxel	5
0110	4	45 44 854		33), B234I, A	2	Drive shaft	Drivaxel	5
0120	4	45 44 854		33)-1997, B258I, LH	1	Drive shaft	Drivaxel	5
0130	4	*42 48 241*		32), B258I, RH NLS - USE 4544862	1	Drive shaft	Drivaxel	5
0140	4	45 44 862		33)-1997, B258I, RH	1	Drive shaft	Drivaxel	5
0150	5	42 42 319		B206I, B204I, M, LH	1	Universal joint	Drivknut	6
0160	5	42 42 319		B234I, M, LH	1	Universal joint	Drivknut	6
0170	5	42 42 327		B206I, B204I, M, RH	1	Universal joint	Drivknut	6
0180	5	42 42 327		B234I, M, RH	1	Universal joint	Drivknut	6
0190	6	89 50 628		B206I, B204I, A	2	Companion flange	Medbringare	3
0200	6	89 50 628		B204L	2	Companion flange	Medbringare	3
0210	6	89 50 628		B234I, A	2	Companion flange	Medbringare	3
0220	6	89 50 628		-1997, B258I	2	Companion flange	Medbringare	3
0230	7	*42 42 376*		32), B206I, B204I, A, LH NLS - USE 4544763	1	Companion flange	Medbringare	5
0240	7	*42 42 376*		32), B204L, LH NLS - USE 4544763	1	Companion flange	Medbringare	5
0250	7	*42 42 376*		32), B234I, A, LH NLS - USE 4544763	1	Companion flange	Medbringare	5
0260	7	*42 42 376*		32), B258I, LH NLS - USE 4544763	1	Companion flange	Medbringare	5
0270	7	45 44 763		33), B206I, B204I, A, LH	1	Companion flange	Medbringare	5
0280	7	45 44 763		33), B204L, LH	1	Companion flange	Medbringare	5
0290	7	45 44 763		33), B234I, A, LH	1	Companion flange	Medbringare	5
0300	7	45 44 763		33)-1997, B258I, LH	1	Companion flange	Medbringare	5
0310	7	*42 42 384*		32), B206I, B204I, A, RH NLS - USE 4544771	1	Companion flange	Medbringare	5
0320	7	*42 42 384*		32), B204L, RH NLS - USE 4544771	1	Companion flange	Medbringare	5
0330	7	*42 42 384*		32), B234I, A, RH NLS - USE 4544771	1	Companion flange	Medbringare	5
0340	7	*42 42 384*		32), B258I, RH NLS - USE 4544771	1	Companion flange	Medbringare	5
0350	7	45 44 771		33), B206I, B204I, A, RH	1	Companion flange	Medbringare	5
0360	7	45 44 771		33), B204L, RH	1	Companion flange	Medbringare	5
0370	7	45 44 771		33), B234I, A, RH	1	Companion flange	Medbringare	5
0380	7	45 44 771		33)-1997, B258I, RH	1	Companion flange	Medbringare	5
0390	8	89 21 520		B206I, B204I, M	2	Lock ring	Låsring	5
0400	8	89 21 520		B234I, M	2	Lock ring	Låsring	5
0410	9	89 50 636		B206I, B204I, A	2	Lock ring	Låsring	5
0420	9	89 50 636		B204L	2	Lock ring	Låsring	5
0430	9	89 50 636		B234I, A	2	Lock ring	Låsring	5
0440	9	89 50 636		-1997, B258I	2	Lock ring	Låsring	5
0450	10	42 42 459		B206I, B204I, M	2	Bellows	Bälg	3
0460	10	42 42 459		B234I, M	2	Bellows	Bälg	3
0470	10	89 94 147		See page 4-063, 4-C16		Bellows kit	Bälgsats	3
0480	10	89 94 147		B206I, B204I, A	2	Bellows kit	Bälgsats	3

32. Ch. -R2030717
33. Ch. R2030718-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -B24

Drive shafts, outer and inner universal joint

Drivaxlar, yttre och inre knut

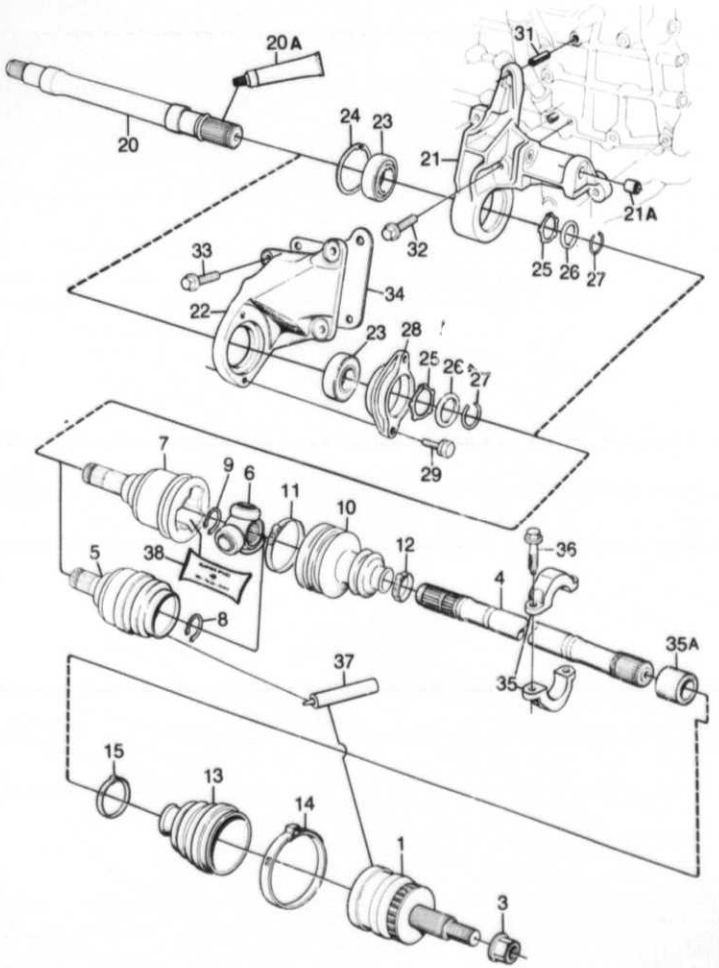

F7915 AAC94

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	10	89 94 147		B204L	2	Bellows kit	Bälgsats	3
0500	10	89 94 147		B234I, A	2	Bellows kit	Bälgsats	3
0510	10	89 94 147		-1997, B258I	2	Bellows kit	Bälgsats	3
0520	11	42 42 467		B206I, B204I, M	2	Clamp	Klämma	3
0530	11	42 42 467		B234I, M	2	Clamp	Klämma	3
0540	11	89 72 986		B206I, B204I, A	2	Clamp	Klämma	5
0550	11	89 72 986		B204L	2	Clamp	Klämma	5
0560	11	89 72 986		B234I, A	2	Clamp	Klämma	5
0570	11	89 72 986		-1997, B258I	2	Clamp	Klämma	5
0580	12	42 42 475			2	Clamp	Klämma	3
0590	13	*43 99 333*		1994 NLS – USE 4483517	2	Bellows	Bälg	3
0600	13	44 83 517		1994,8)	2	Bellows	Bälg	3
0610	13	44 83 517		1995-	2	Bellows	Bälg	3
0620	14	*43 99 341*		1994 NLS – USE 4483525	2	Clamp	Klämma	3
0630	14	44 83 525		1994,8)	2	Clamp	Klämma	3
0640	14	44 83 525		1995-	2	Clamp	Klämma	3
0650	15	42 42 475		B206I, B204I, M	2	Clamp	Klämma	3
0660	15	42 42 475		B234I, M	2	Clamp	Klämma	3
0670	15	*41 95 822*		B206I, B204I, A NLS – USE 4425534	2	Clamp	Klämma	3
0680	15	*41 95 822*		B204L NLS – USE 4425534	2	Clamp	Klämma	3
0690	15	*41 95 822*		B234I, A NLS – USE 4425534	2	Clamp	Klämma	3
0700	15	*41 95 822*		-1997, B258I NLS – USE 4425534	2	Clamp	Klämma	3
0710	15	44 83 533		8)	2	Clamp	Klämma	3
0720	20	42 37 665		4-CYL	1	Countershaft	Mellanaxel	5
0730	20	42 82 265		-1997, 6-CYL	1	Countershaft	Mellanaxel	5
0740	20A	87 81 684		50 GR	X	Grease	Fett	
0750	21	43 85 985		261) 4-CYL, M	1	Bearing bracket	Lagerbock	5
0760	21	* 49 26 457		262) 4-CYL, M	1	Bearing bracket	Lagerbock	5
0770	21	43 85 993		261) 4-CYL, A	1	Bearing bracket	Lagerbock	5
0780	21	* 49 26 473		262) 4-CYL, A	1	Bearing bracket	Lagerbock	5
0790	21A	75 93 080		4-CYL	1	.Bushing	.Bussning	6
0800	22	42 37 632		-1997, 6-CYL	1	Bearing bracket	Lagerbock	5
0810	23	42 38 432			1	Ball bearing	Kullager	3
0820	24	80 48 324		4-CYL	1	Ring	Ring	6
0830	25	42 82 257			1	Retaining ring	Spärring	5
0840	26	42 82 240			1	O-ring	O-ring	2
0850	27	42 82 547			1	Lock ring	Låsring	5
0860	28	42 82 273		-1997, 6-CYL	1	Bearing seat	Lagersäte	5
0870	29	79 78 216		-1997, 6-CYL	2	Hexagon screw	Sexkantsskruv	5
0880	31	79 74 074		4-CYL	2	Cotter pin	Fjäderpinne	5
0890	32	79 78 232		261) 4-CYL	3	Screw	Skruv	5
0900	32	79 78 224		262) 4-CYL	3	Screw	Skruv	5
0910	33	79 78 265		-1997, 6-CYL	4	Hexagon screw	Sexkantsskruv	5
0920	34	42 82 281		-1997, 6-CYL, M	1	Spacer	Mellanlägg	
0930	35	*45 45 091*		38), LH, A NLS – USE 4645594	2	Deadener weight	Dämpvikt	
0940	35A	46 45 594		39), LH, A	2	Deadener weight	Dämpvikt	
0950	36	79 78 133		38), LH, A	2	Screw	Skruv	5
0960	37	87 81 676		300 GR	X	Grease	Fett	
0970	38			16/3018629, 6X60 GR	1	Grease	Fett	

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
38. Ch. -S2012272, -S7014772
39. Ch. S2012273-, S7014773-
261. Ch.-W7004755, -W2011480.
262. Ch. W7004756-,W2011481-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

Gear box assy
Automatic

Växellåda kpl
Automatisk

4 -C02

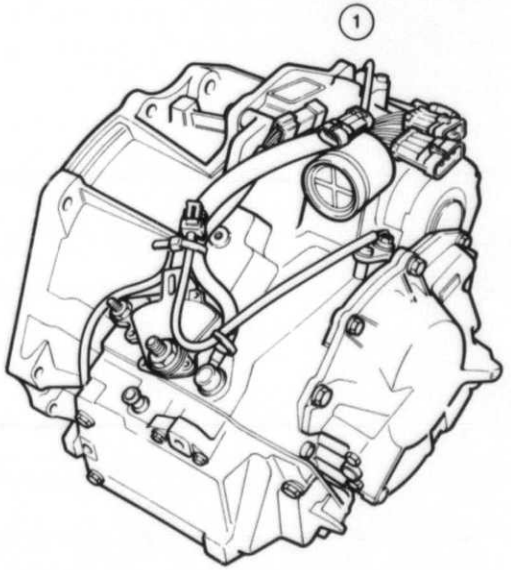

F4872 AAC94

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 38 515		7), -1995, B206I, B204I	1	Gearbox	Växellåda	5
0020				MARKED: FA 44701				
0030	1	46 25 489		7), 1996, B204I	1	Gearbox	Växellåda	5
0040				MARKED: FA 44703				
0050	1	46 26 545		7), 1997-, B204I	1	Gearbox	Växellåda	5
0060				MARKED: FA 44705				
0070								
0080	1	42 38 531		7), -1995, B234I	1	Gearbox	Växellåda	5
0090				MARKED: FA 46801				
0100	1	46 25 497		7), 1996, B234I	1	Gearbox	Växellåda	8
0110				MARKED: FA 46803				
0120	1	46 26 552		7,1997-,251),B234I,US,CA	1	Gearbox	Växellåda	5
0130				MARKED: FA 46805				
0131	1	46 26 552		7,1997-,253), B234I	1	Gearbox	Växellåda	5
0132				MARKED: FA 46805				
0133	1	49 25 525		7,252), B234I, US, CA	1	Gearbox	Växellåda	5
0135				MARKED: FA 46807				
0136	1	49 25 525		7,254), B234I	1	Gearbox	Växellåda	5
0137				MARKED: FA 46807				
0140								
0150	1	43 86 108		7), 1995, B204L	1	Gearbox	Växellåda	5
0160				MARKED: FA 44901				
0170	1	46 25 513		7), 1996, B204L	1	Gearbox	Växellåda	8
0180				MARKED: FA 44903				
0190	1	46 26 578		7), 1997-, B204L	1	Gearbox	Växellåda	
0200				MARKED: FA 44905				
0210								
0220	1	42 38 556		7), -1995, B258I	1	Gearbox	Växellåda	5
0230				MARKED: FA 44602				
0240	1	46 25 505		7), 1996, B258I	1	Gearbox	Växellåda	8
0250				MARKED: FA 44604				
0260	1	46 26 560		7), 1997, B258I	1	Gearbox	Växellåda	5
0270				MARKED: FA 44606				
0280								


7. Also available as exchange unit. Finns även som utbytesenhet.
251. Ch. -V2041690, -V7010279
252. Ch. V2041691-, V7010280-
253. Ch. -V2041951, -V7010279
254. Ch. V2041952-, V7010280-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

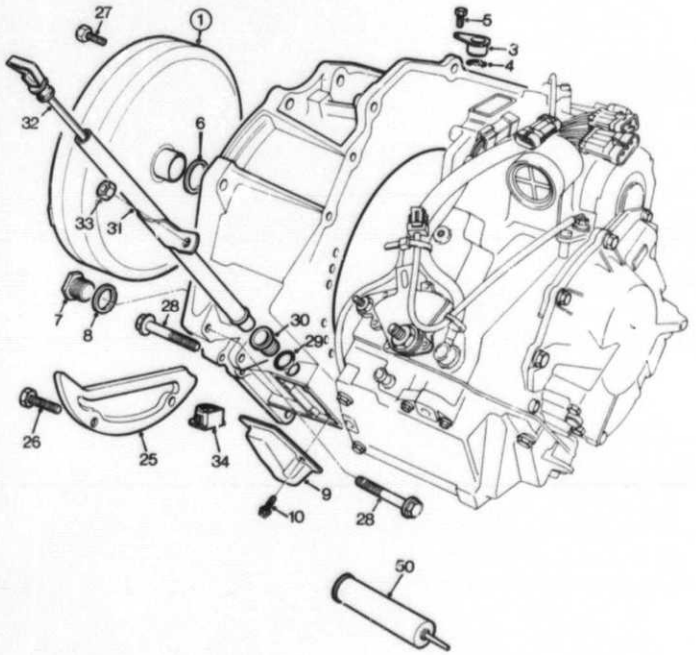

F5694 AAC94

Gear box, automatic

4 -C04 *Converter housing, converter*

Växellåda, automatisk

Momentomvandlarhus, momentomvandlare

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-049, 4-C02		Gear box, automatic	Växellåda, automatisk	
0020	1	44 91 270		B206I, B204I	1	.Torque converter	.Momentomvandlare	
0030	1	44 90 801		B234I	1	.Torque converter	.Momentomvandlare	
0040	1	44 90 850		-1997, B258I	1	.Torque converter	.Momentomvandlare	
0065	3	44 90 835		4-CYL	1	.Plug	.Plugg	5
0070	4	44 90 827		4-CYL	1	..O-ring	..O-ring	5
0090	5	44 90 843		4-CYL	1	.Screw	.Skruv	5
0160	6	44 91 171			1	.Seal	.Tätning	5
0170	7	44 91 023			1	.Plug	.Plugg	5
0180	8	44 91 015			1	.Sealing ring	.Tätningsring	3
0190	9	44 91 049			1	.Cover	.Lock	5
0200	10	44 91 031			4	.Screw	.Skruv	5
0210	25	42 35 636		4-CYL	1	Baffle	Stänkskydd	6
0215	25	42 35 651		-1996, 6-CYL	1	Baffle	Stänkskydd	6
0220	25	47 29 158		1997, 6-CYL	1	Baffle	Stänkskydd	6
0225	26	43 46 235			X	Hexagon screw	Sexkantsskruv	5
0240	27	42 38 416		4-CYL	6	Hexagon screw	Sexkantsskruv	5
0250	27	42 38 457		6-CYL	6	Hexagon screw	Sexkantsskruv	5
0300	28	79 84 297		4-CYL	5	Screw	Skruv	5
0310	28	79 82 606		6-CYL	7	Hexagon screw	Sexkantsskruv	5
0320	29	42 38 424		4-CYL	1	O-ring	O-ring	3
0340	30	43 87 551		-1997, 6-CYL	1	Seal	Tätning	3
0350	31	42 38 192		B206I, B204I, B234I	1	Tube	Rör	5
0355	31	46 25 059		B204L	1	Tube	Rör	5
0360	31	44 90 330		-1997, B258I	1	Tube	Rör	5
0370	32	42 38 200		4-CYL	1	Dipstick	Mätsticka	5
0380	32	44 90 348		-1997, 6-CYL	1	Dipstick	Mätsticka	5
0390	33	80 74 288			1	Nut	Mutter	5
0400	34	42 82 620		4-CYL	1	Cover	Täcklock	
0410	34	43 46 664		-1997 6-CYL	1	Cover	Täcklock	
0500	50	44 91 056			X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4 -C06

Gear box case, cover

Växellådshus, lock

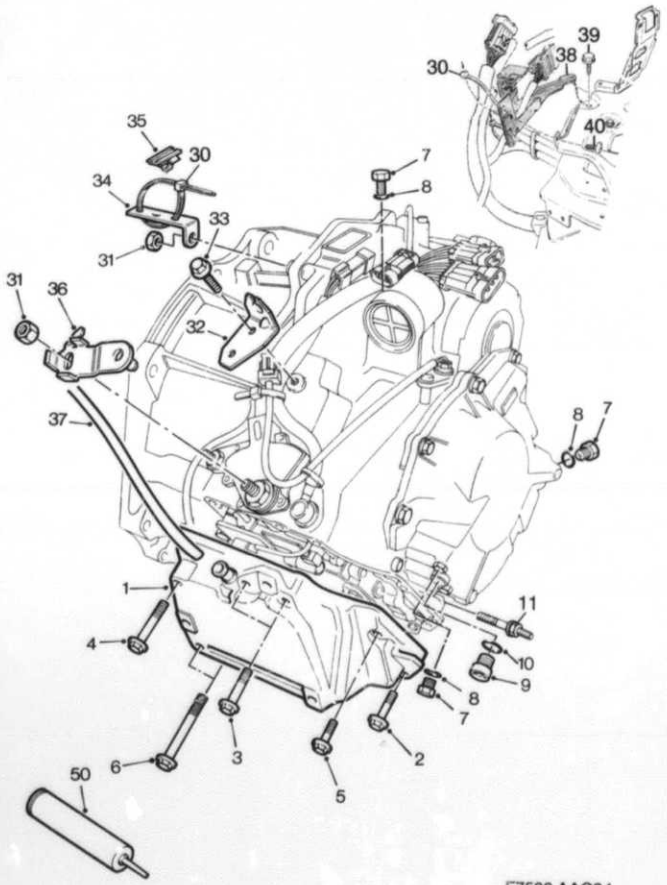

F7599 AAC94


0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-049, 4-C02		Gear box, automatic	Växellåda, automatisk	
0090	1	44 91 098			1	.Valve housing cover	.Ventilhuskåpa	6
0100	2	44 91 106			1	.Screw	.Skruv	5
0110	3	44 91 114			2	.Screw	.Skruv	5
0120	4	44 91 122			2	.Screw	.Skruv	5
0130	5	44 91 130			2	.Screw	.Skruv	5
0140	6	44 91 148			2	.Screw	.Skruv	5
0150	7	44 91 072			7	.Plug	.Plugg	5
0160	8	44 91 080			7	.O-ring	.O-ring	5
0170	9	44 91 155			1	.Plug	.Plugg	5
0180	10	44 91 163			1	.O-ring	.O-ring	5
0190	11	87 38 411		1996-	1	.Flange screw	.Flänsskruv	5
0340	30	79 71 880			X	Tensioning band	Spännband	4
0350	31	80 74 288			X	Nut	Mutter	5
0360	32	42 38 176			1	Bracket	Fäste	5
0370	33	80 82 935			2	Screw	Skruv	5
0380	34	43 86 066		-1995	1	Bracket	Konsol	
0390	35	43 86 058		1994	3	Clamp	Klamma	
0400	36	43 87 437			1	Gear rod	Växelstång	5
0410	37	42 38 242			1	Bleeder hose	Urluftningsslang	
0420	38	46 25 828		1996-	1	Bracket	Konsol	
0430	39	79 78 091		1996-	1	Screw	Skruv	5
0440	40	*84 41 503*		1996- NLS – USE 7970601	1	Screw	Skruv	5
0500	50	44 91 056			X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Eiectrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labeis	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

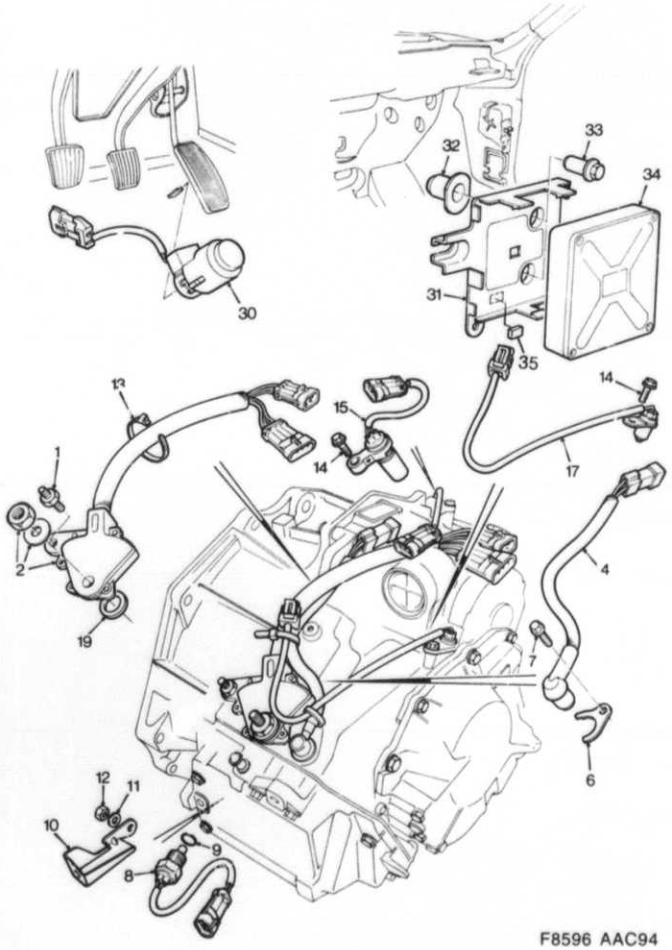

F8596 AAC94

Gear box, automatic

4 -C08

Trans. control module
Sensor

Växellåda, automatisk

Styrdon
Givare

0650	Pos	Part No/Art nr	K is	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-049, 4-C02		Gear box, automatic	Växellåda, automatisk	
0020	1	44 90 876		34)	1	.Screw	.Skruv	5
0030	1	46 25 281		35)	1	.Screw	.Skruv	5
0040	2	*44 90 884*		34) NLS – USE 4625174, 4625182, 4625190	1	.Neutral position switch	.Växellägeskontakt	
0050	2	46 25 174		35), -1995	1	.Neutral position switch	.Växellägeskontakt	8
0060	2	87 81 924		1996-	1	.Neutral position switch	.Växellägeskontakt	8
0070	4	44 90 900		-1995	1	.Cable harness	.Ledningsnät	
0080	4	87 81 940		1996-	1	.Cable harness	.Ledningsnät	
0090	6	44 90 892		34)	1	.Bracket	.Fäste	
0100	6	46 25 182		35)	1	.Bracket	.Fäste	
0110	7	44 90 918		34)	1	.Screw	.Skruv	5
0120	7	46 25 190		35)	1	.Screw	.Skruv	5
0130	8	44 30 926		-1995	1	.Trans. fluid temp. sensor	.Temperaturgivare	
0140	8	87 81 957		1996-	1	.Trans. fluid temp. sensor	.Temperaturgivare	
0150	9	44 90 934			1	.O-ring	.O-ring	5
0160	10	44 90 942		-1995	1	.Protecting casing	.Skyddskåpa	5
0170	10	87 81 965		1996-	1	.Protecting casing	.Skyddskåpa	5
0180	11	44 90 967			1	.Washer	.Bricka	5
0190	12	44 90 959			1	.Nut	.Mutter	5
0200	13	44 90 975			3	.Clamp	.Klammer	5
0210	14	44 90 983			2	.Screw	.Skruv	5
0220	15	44 90 991		-1995	1	.Output shaft speed sensor	.Hastighetsgivare	8
0230	15	87 81 932		1996-	1	.Input shaft speed sensor	.Hastighetsgivare	8
0240	17	44 91 007		-1995	1	.Input shaft speed sensor	.Hastighetsgivare	8
0250	17	87 81 932		1996-	1	.Input shaft speed sensor	.Hastighetsgivare	8
0260	19	44 91 064			1	.Seal	.Tätning	5
0270	30	42 38 226			1	Kick-down switch	Kick-downströmställare	
0280	31	42 38 283		LHD	1	Bracket	Fäste	
0290	31	43 87 825		RHD	1	Bracket	Fäste	
0300	32	42 38 309			3	Spacer clip	Distansclips	
0310	33	42 38 291			3	Nut	Mutter	5
0320	34	42 38 259		-1996, B206I, B204I	1	Trans. control module	Styrdon	
0330	34	46 26 594		1997-,249), B204I	1	Trans. control module	Styrdon	8
0340	34	49 25 392		250), B204I	1	Trans. control module	Styrdon	8
0350	34	42 38 267		-1996, B234I	1	Trans. control module	Styrdon	
0360	34	46 26 602		1997-,249), B234I	1	Trans. control module	Styrdon	
0370	34	49 25 400		250,253), B234I	1	Trans. control module	Styrdon	
0380	34	49 25 509		254) B234I	1	Trans. control module	Styrdon	
0390	34	49 25 517		1998-, B234I, A	1	Trans. control module	Styrdon	8
0400	34	43 87 833		1996, B234I, US, CA	1	Trans. control module	Styrdon	8
0410	34	*46 26 651*		1997-,249) B234I, US, CA NLS – USE 4925434	1	Trans. control module	Styrdor	8
0420	34	49 25 434		250,251), B234I, US, CA	1	Trans. control module	Styrdon	8
0430	34	49 25 517		252), B234I, US, CA	1	Trans. control module	Styrdon	8
0440	34	43 86 090		1995-1996, B204L	1	Trans. control module	Styrdon	8
0450	34	46 26 628		1997-,249), B204L	1	Trans. control module	Styrdon	
0460	34	49 25 418		250), B204L	1	Trans. control module	Styrdon	
0470	34	46 25 703		1996, B204L, US, CA	1	Trans. control module	Styrdon	8
0480	34	46 26 636		1997-,249),B204L, US, CA	1	Trans. control module	Styrdon	8
0490	34	49 25 442		250), B204L, US, CA	1	Trans. control module	Styrdon	8
0500	34	44 91 213		27), 1995-, B204L	1	Trans. control module	Styrdon	
0510	34	42 38 275		-1996, B258I	1	Trans. control module	Styrdon	
0520	34	46 26 610		1997-,249), B258I	1	Trans. control module	Styrdon	


27. For cars with intake air heat plate. För bilar med värmeplatta.
34. Gear box -94CW60808
35. Gear box 94CW60809-
249. Ch. -V2038054, -V7010965
250. Ch. V2038055-, V7010966-
251. Ch. -V2041690, -V7010279
252. Ch. V2041691-, V7010280-
253. Ch. -V2041951, -V7010279
254. Ch. V2041952-, V7010280-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

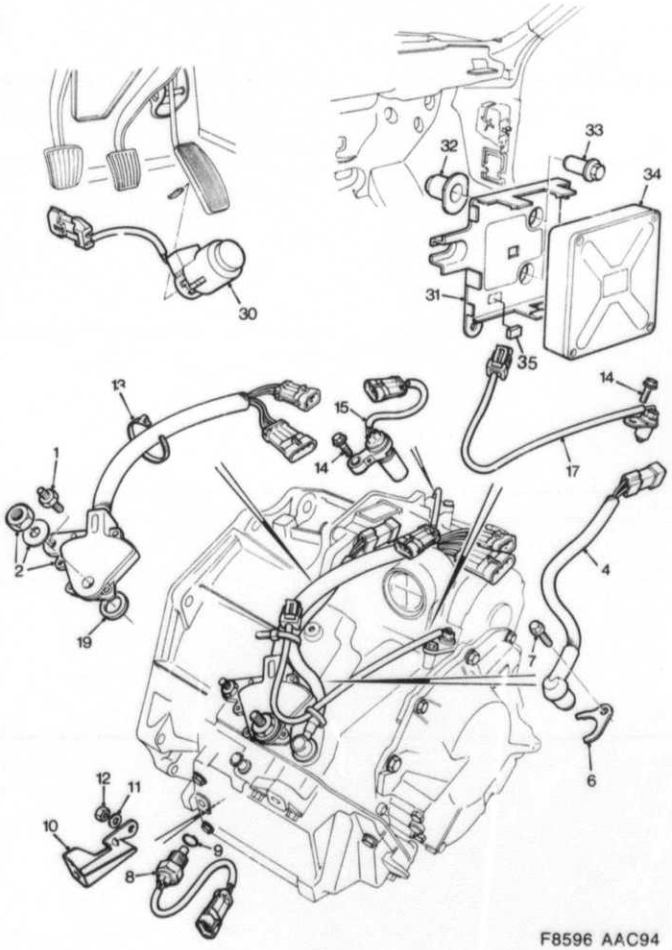

F8596 AAC94

Gear box, automatic

4-C10

Trans. control module
Sensor

Växellåda, automatisk

Styrdon
Givare

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	34	49 25 426		250) -1997, B258I	1	Trans. control module	Styrdon	
0540	34	44 91 221		1996, B258I, US, CA	1	Trans. control module	Styrdon	C
0550	34	46 26 644		1997-,249) B258I, US, CA	1	Trans. control module	Styrdon	B
0560	34	49 25 459		250)-1997 B258I, US, CA	1	Trans. control module	Styrdon	B
0570	35	46 09 533		1997-	1	Spacer	Mellanlägg	

249. Ch. -V2038054, -V7010965
250. Ch. V2038055-, V7010966-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-C12

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-049, 4-C02		Gear box, automatic	Växellåda, automatisk	
0040	2	44 91 197			2	.Solenoid valve	.Magnetventil	8
0050	3	44 91 205			1	.Solenoid valve	.Magnetventil	
0060	4				2	.Screw	.Skruv	
0070	5				1	.Screw	.Skruv	

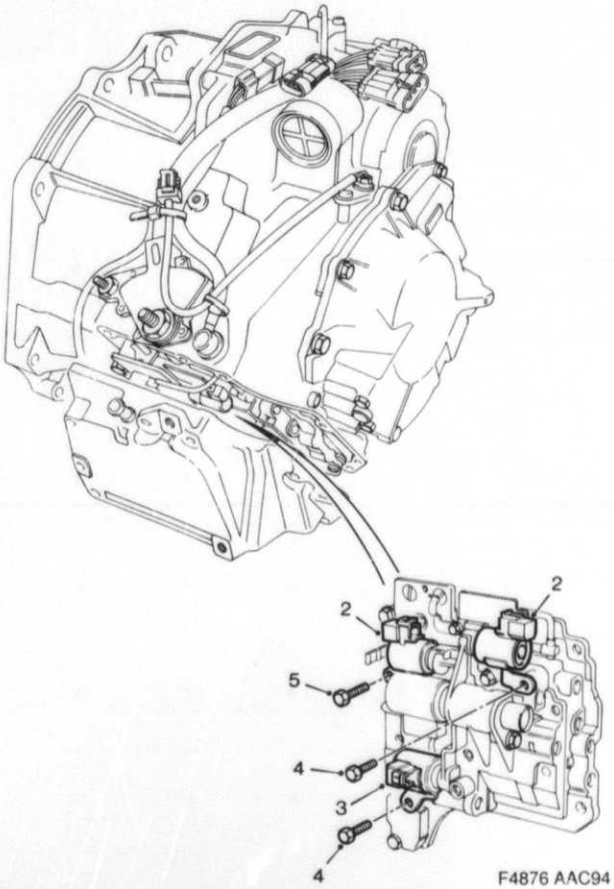

F4876 AAC94

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-C14

Gear selector lever — *Växelväljarspak*

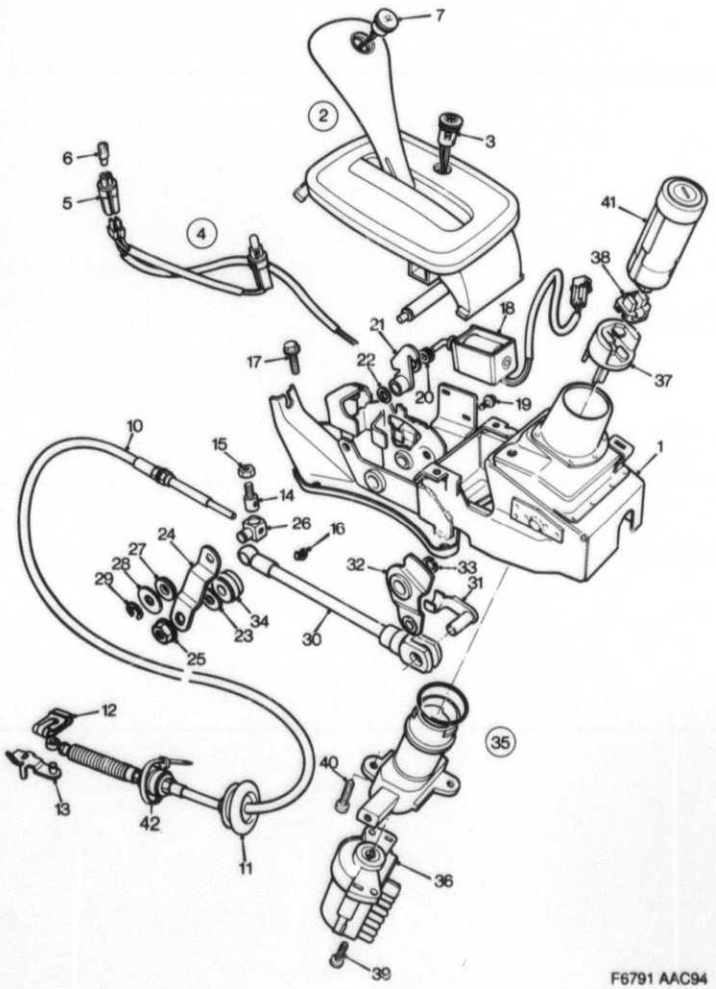

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 86 934			1	Bracket	Konsol	6
0020	2	43 86 918		LHD	1	Gear lever	Växelspak	8
0030	2	43 86 926		RHD	1	Gear lever	Växelspak	5
0040	3	42 37 855			1	.Contact	.Kontakt	6
0050	4	43 87 403			1	.Bulb socket	.Lamphållare	4
0060	5	43 46 524			2	..Bulb socket	..Lamphållare	4
0070	6	85 00 613			2	..Bulb	..Glödlampa	2
0080	7	42 38 002			1	.Contact	.Kontakt	6
0090	10	43 86 470			1	Gear selector	Växelväljare	8
0100	11	44 90 165			1	Plug	Plugg	5
0110	12	43 87 411			1	Clip	Clips	5
0120	13			See page 4-051, 4-C04		Gear rod	Växelstång	
0130	14	42 37 871			1	Bracket	Fäste	3
0140	15	79 77 929			1	Nut	Mutter	5
0160	16	43 46 482			1	Lock washer	Låsbricka	5
0170	17	79 78 091			4	Screw	Skruv	5
0180	18	44 91 239		US, CA, ME, PA, AU	1	Solenoid	Solenoid	5
0190	19	43 87 015		US, CA, ME, PA, AU	2	Screw	Skruv	5
0200	20	43 87 031		US, CA, ME, PA, AU	1	Bushing	Bussning	3
0210	21	43 87 023		US, CA, ME, PA, AU	1	Catch	Hake	
0220	22	81 23 473		US, CA, ME, PA, AU	1	E-circlip	Spärryttare	5
0230	23	42 38 630			1	Thrust washer	Tryckbricka	5
0240	24	43 86 942			1	Lever	Hävarm	
0250	25	42 38 622			1	Nut	Mutter	5
0260	26	42 37 939			1	Bracket	Fäste	6
0270	27	42 38 648			1	Spring washer	Fjäderbricka	5
0280	28	42 38 655			1	Spacer	Mellanlägg	4
0290	29	81 23 473			1	E-circlip	Spärryttare	5
0300	30	43 86 967			1	Hand rail	Ledstång	
0310	31	44 90 017			1	Clip	Clips	5
0320	32	43 86 975			1	Lock disc	Låsskiva	6
0330	33	81 23 499			1	E-circlip	Spärryttare	5
0340	34	43 86 991			2	Bushing	Bussning	3
0350	35	43 87 742			1	Ignition switch	Tändlås	
0360	36	*44 09 553*		NLS – USE 4946307	1	.Contact	.Kontakt	4
0370	37	*44 90 728*		1) NLS	1	.Companion flange	.Medbringare	
0380	38	*44 90 736*		1) NLS	1	.Clutch	.Koppling	
0390	39	80 59 230			2	.Screw	.Skruv	5
0400	40	80 59 578			2	Screw	Skruv	5
0410	41			See page 8A-103, 5-E08		Lock cylinder	Låscylinder	
0420	42	79 71 880			1	Tensioning band	Spännband	4


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

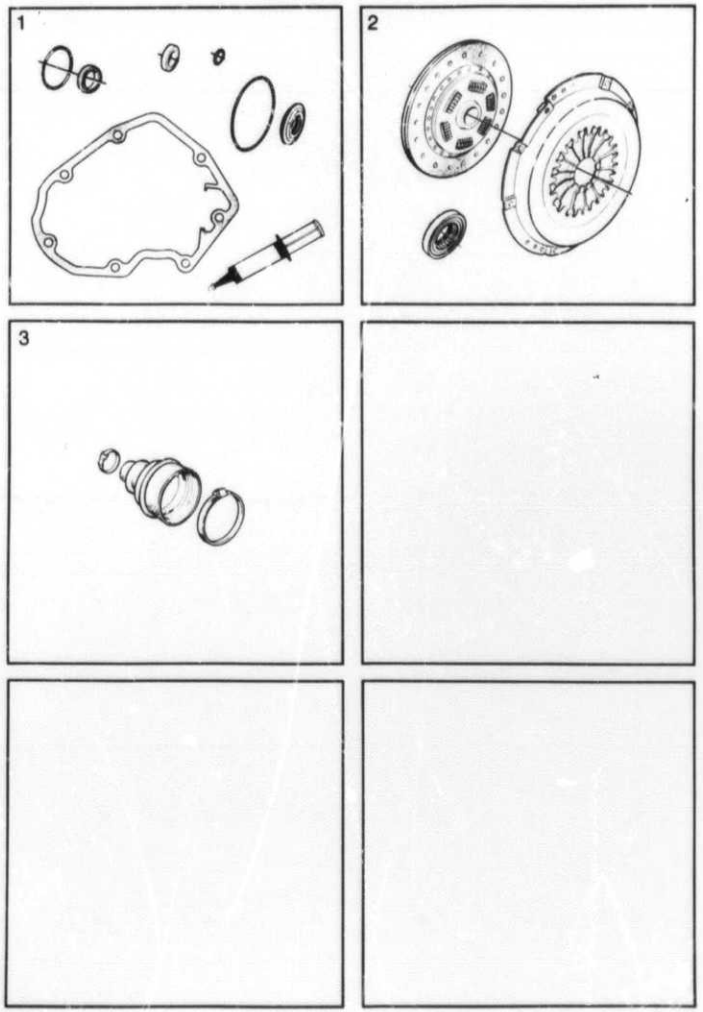

F7916 AAC94

Complete set
4-C16
Transmission

Satser
Kraftöverföring

1000	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 81 494			1	Gasket kit	Packningssats	3
0020		• 49 40 189			1	.Gasket	.Packning	3
0030		80 47 144			1	.O-ring	.O-ring	2
0040		87 29 600			1	.O-ring	.O-ring	3
0050		87 32 117			2	.Seal	.Tätning	5
0060		87 34 824			1	.Gasket	.Packning	3
0070		87 34 980			1	.Seal	.Tätning	2
0080		*87 34 998*		NLS – USE 8741878	1	.Seal	.Tätning	4
0090		93 21 795			1	.Flange sealant	.Flänstätning	5
0100								
0110	2	87 81 536		21), B206I, B234I	X	Clutch kit	Kopplingssats	6
0120		87 32 232			1	.Release bearing	.Urtrampningslager	2
0130		87 36 456			1	.Pressure plate	.Tryckskiva	2
0140		87 36 555			1	.Clutch disc	.Lamell	
0150								
0160	2	87 81 528		22), -1997, LHD B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0180		87 32 232			1	.Release bearing	.Urtrampningslager	2
0190		87 36 423			1	.Pressure plate	.Tryckskiva	2
0200		*87 36 415*		NLS – USE 8744070	1	.Clutch disc	.Lamell	2
0210								
0220	2	46 14 004		1998-, LHD, B204I, B234I	X	Clutch kit	Kopplingssats	6
0230		87 46 778			1	.Pressure plate	.Tryckskiva	2
0240		87 46 802			1	.Clutch disc	.Lamell	2
0250								
0260	2	87 81 528		22),-1997, RHD B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0280		87 32 232			1	.Release bearing	.Urtrampningslager	2
0290		87 36 423			1	.Pressure plate	.Tryckskiva	2
0300		*87 36 415*		NLS – USE 8744070	1	.Clutch disc	.Lamell	2
0310								
0320								
0330	2	46 14 004		1998-, RHD B206I, B204I, B234I	X	Clutch kit	Kopplingssats	6
0350		87 46 778			1	.Pressure plate	.Tryckskiva	2
0360		87 46 802			1	.Clutch disc	.Lamell	2
0370								
0380	2	87 81 536		-1997, LHD, B204L	X	Clutch kit	Kopplingssats	6
0390		87 32 232			1	.Release bearing	.Urtrampningslager	2
0400		87 36 456			1	.Pressure plate	.Tryckskiva	2
0410		87 36 555			1	.Clutch disc	.Lamell	
0420								
0430	2	46 14 012		1998-, LHD, B204L	X	Clutch kit	Kopplingssats	6
0440		87 46 489			1	.Clutch disc	.Lamell	2
0450		87 46 497			1	.Pressure plate	.Tryckskiva	2
0460								
0470	2	87 81 536		-1997, RHD, B204L	X	Clutch kit	Kopplingssats	6
0480		87 32 232			1	.Release bearing	.Urtrampningslager	2
0490		87 36 456			1	.Pressure plate	.Tryckskiva	2
0500		87 36 555			1	.Clutch disc	.Lamell	
0510								
0520								
0530	2	46 14 012		1998-, RHD, B204L	X	Clutch kit	Kopplingssats	6
0540		87 46 489			1	.Clutch disc	.Lamell	2
0550		87 46 497			1	.Pressure plate	.Tryckskiva	2
0560								
0570	2	87 81 544		B204L, ACS	X	Clutch kit	Kopplingssats	6
0580		87 38 072			1	.Release bearing	.Urtrampningslager	2
0590		87 36 548			1	.Pressure plate	.Tryckskiva	2
0600		87 36 555			1	.Clutch disc	.Lamell	
0610								

21. Engine -R129242
22. Engine R129243-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

Complete set
4-C18
Transmission

Satser
Kraftöverföring

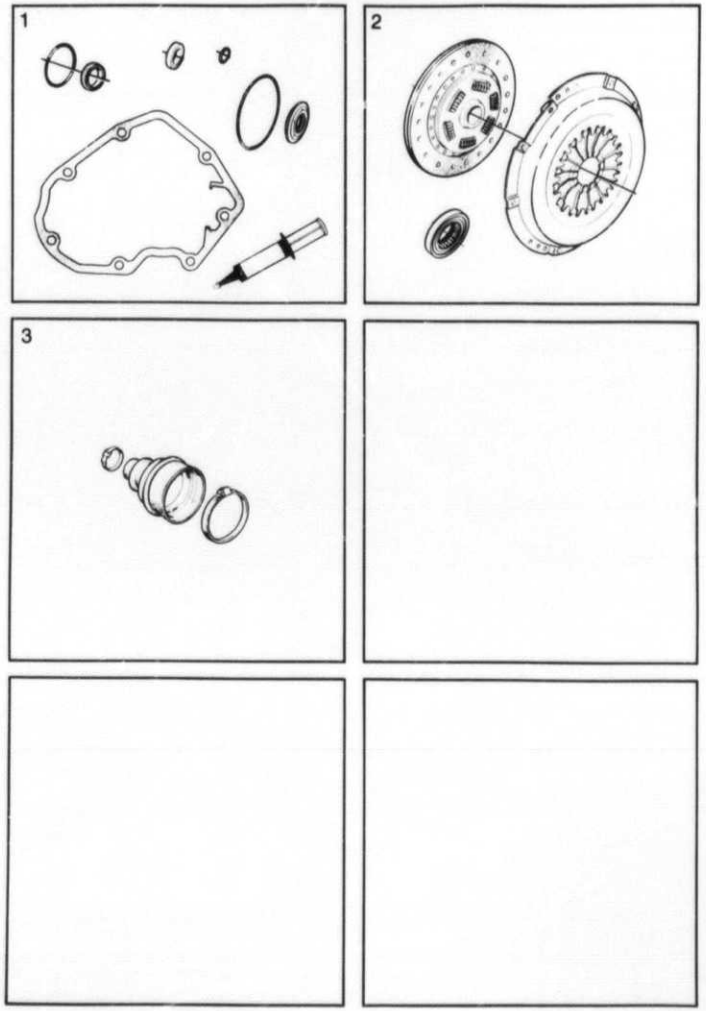

F7916 AAC94

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	2	87 81 577		-1995, B258I	X	Clutch kit	Kopplingssats	6
0630		87 32 232			1	.Release bearing	.Urtrampningslager	2
0640		87 35 797			1	.Pressure plate	.Tryckskiva	2
0650		87 41 225			1	.Clutch disc	.Lamell	2
0660								
0670	2	87 81 866		1996-1997, B258I	X	Clutch kit	Kopplingssats	6
0680		87 32 232			1	.Release bearing	.Urtrampningslager	2
0690		87 44 724			1	.Pressure plate	.Tryckskiva	2
0700		87 44 732			1	.Clutch disc	.Lamell	2
0710								
0720	3	89 94 147			X	Bellows kit drive shaft	Bälgsats drivaxel	3
0740		89 55 007		1)	1	.Bellows	.Bälg	3
0750		42 42 475			1	.Clamp	.Klämma	3
0760		89 72 986			1	.Clamp	.Klämma	5
0770								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	4-A06
Clutch control	4-A10
Gear box, manual	4-A16
Gear box control, manual	4-B14
Gear box, automatic	4-C02
Gear box control, automatic	4-C14
Complete sets	4-C16

4-D02



Brakes
Bromsar
Frenos

0041
0020
0040
0060
0080
0100
0160
0180
0200
0235
0240
0255
0260
0280
0290
0295

TABLE OF CONTENTS

Front wheel brake	5 : 5	4-D06
Rear wheel brake	5 : 7	4-D08
Footbrake system		
Hydraulic unit ABS	5 : 9	4-D10
Master cylinder and power brake unit	5 : 11	4-D12
Brake lines ABS	5 : 15	4-D16
Brake operation	5 : 19	4-D20
Parking brake system	5 : 21	4-D22
Complete sets		
Brakes	5 : 23	4-D24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

4-D03

0042
0300
0320
0340
0360
0380
0440
0460
0480
0515
0520
0535
0540
0560
0570
0575
0580
0600
0620
1120
1140
1160
1180
1200
1260
1280
1300
1335
1340
1355
1360
1380
1390
1395
1400
1410
1420

INNEHÅLLSFÖRTECKNING

Framhjulsbroms	5 : 5	4-D06
Bakhjulsbroms	5 : 7	4-D08
Fotbromssystem		
Hydralenhet ABS	5 : 9	4-D10
Huvudcylinder och vakuumservo	5 : 11	4-D12
Bromsledningar ABS	5 : 15	4-D16
Bromsmanövrering	5 : 19	4-D20
Parkeringsbromssystem	5 : 21	4-D22
Satser		
Bromsar	5 : 23	4-D24

SUMARIO

Freno del	5 : 5	4-D06
Freno tras	5 : 7	4-D08
Sistema de freno de pie		
Unidad hydraulico ABS	5 : 9	4-D10
Cylindro principal y servoasistencia	5 : 11	4-D12
Conductos de freno ABS	5 : 15	4-D16
Mando de freno de pie	5 : 19	4-D20
Sistema de freno de mano	5 : 21	4-D22
Juegos completos		
Frenos	5 : 23	4-D24


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

4 –D06 *Front wheel brake* *Framhjulsbroms*

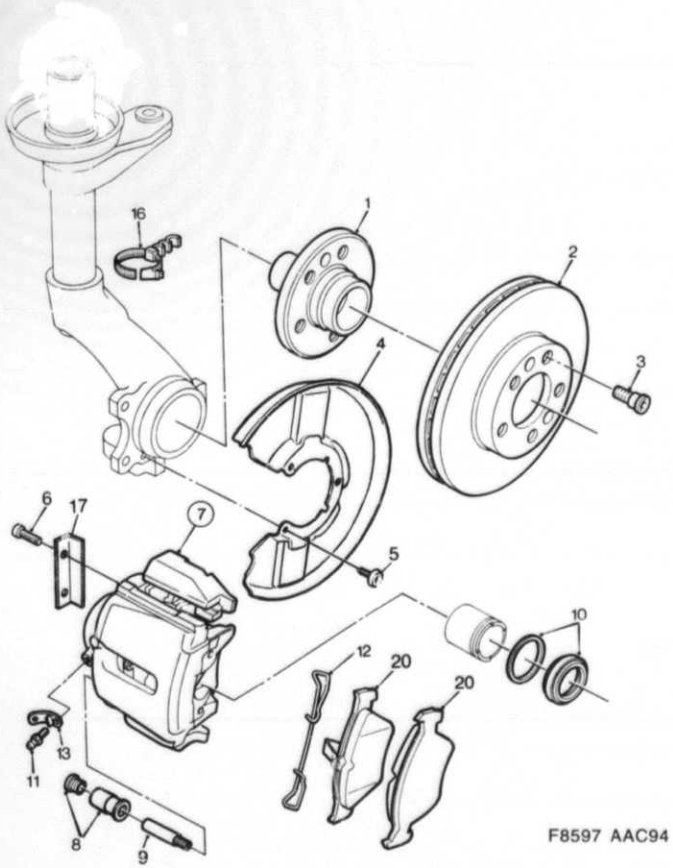

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 42 194*		43) NLS – USE 4568192	2	Wheel hub	Hjulnav	4
0020	1	45 68 192		44)	2	Wheel hub	Hjulnav	4
0030	2	42 41 428		-1996	2	Brake disc	Bromsskiva	3
0040	2	*48 39 007*		1997-,56)	1	Brake disc	Bromsskiva	3
0050				See page 5-027, 4-E04				
0050				NLS – USE 4839320				
0060	2	48 39 320		57)	1	Brake disc	Bromsskiva	3
0065				See page 5-027, 4-E04				
0070	3	42 49 751			2	Screw	Skruv	5
0080	4	45 45 422		-1996	2	Protecting plate	Skyddsplåt	3
0090	4	45 67 731		1997-	2	Backing plate	Bromsskköld	3
0100	5	80 59 537			6	Screw	Skruv	5
0110	6	42 41 451		-1995	4	Screw	Skruv	5
0120	6	46 47 194		1996-	4	Screw	Skruv	5
0130	7	44 82 550		7), -1996, LH	1	Brake housing	Bromshus	4
0140	7	48 38 967		7), 1997-, LH	1	Brake housing	Bromshus	4
0150	7	44 82 543		7), -1996, RH	1	Brake housing	Bromshus	4
0160	7	48 38 975		7), 1997-, RH	1	Brake housing	Bromshus	4
0170	8	44 67 064		See page 5-023, 4-D24	2	.Guide	.Styrning	3
0180	9	89 69 651			1	.Slide pin	.Glidpinne	3
0190	10	44 67 056		-1996	1	.Gasket kit	.Packningsats	2
0200				See page 5-023, 4-D24				
0210	10	47 78 262		1997-	1	.Gasket kit	.Packningsats	2
0220				See page 5-023, 4-D24				
0230	11	44 67 007			1	.Bleed screw	.Luftningsskruv	2
0240	12	42 44 422			1	.Spring	.Fjäder	3
0250	13	44 67 015			1	.Protecting casing	.Skyddskåpa	3
0260	16			See page 5-015, 4-D16		Tube clamp	Rörklamma	
0270	17	45 45 471			2	Protecting plate	Skyddsplåt	3
0280	20	*44 67 049*		42), -1996, ME,FE,JP,AU	1	Brake pad kit	Bromsklotssats	1
0280				NLS – USE 4646899				
0290	20	46 46 899		42), -1996, SE, EU	1	Brake pad kit	Bromsklotssats	1
0300				See page 5-023, 4-D24				
0310	20	*44 83 723*		42), -1995, US, CA	1	Brake pad kit	Bromsklotssats	1
0320				See page 5-023, 4-D24				
0320				NLS – USE 4648457				
0330	20	46 48 457		42), 1996, US, CA	1	Brake pad kit	Bromsklotssats	1
0340				See page 5-023, 4-D24				
0350	20	47 78 254		42), 1997	1	Brake pad kit	Bromsklotssats	1
0360				See page 5-023, 4-D24				
0370	20	* 48 39 924		42), 1998-	1	Brake pad kit	Bromsklotssats	1
0380				See page 5-023, 4-D24				

7. Also available as exchange unit. Finns även som utbytesenhet.
42. See SI 500-1699 Se SI 500-1699
43. Ch. -T2009001, -T7001996
44. Ch. T2009002-, T7001997-
56. Ch. -V2022961, -V7004689
57. Ch. V2022962-, V7004690-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

4 -D08 *Rear wheel brake* *Bakhjulsbroms*

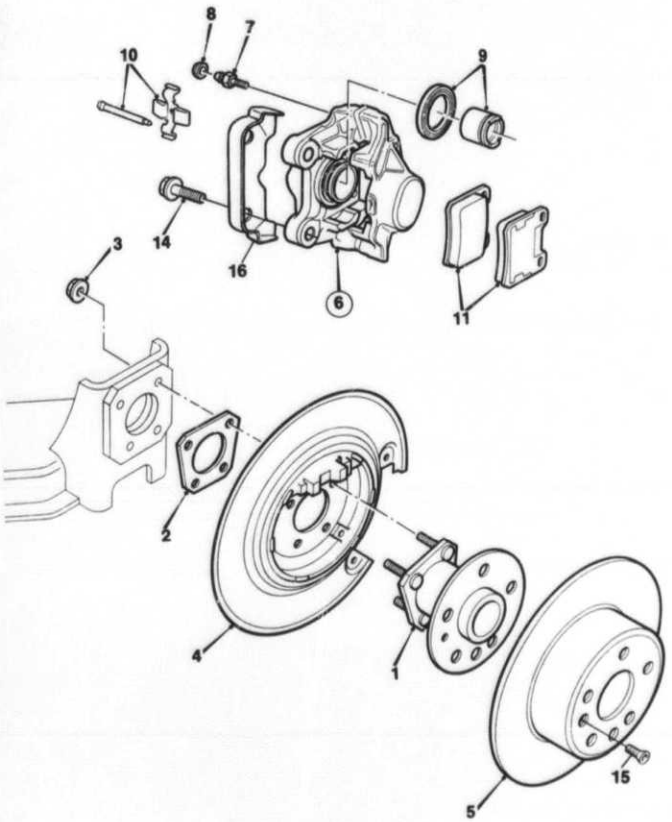

F8598 AAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 98 046*		52) NLS – USE 4778494	2	Wheel hub	Hjulnav	5
0013	1	47 78 494		53,66)	2	Wheel hub	Hjulnav	5
0015	1	* 48 39 122		67)	2	Wheel bearing	Hjullager	
0016						with bearing	med lager	
0017						with sensor	med sensor	
0020	2	42 48 324			2	Spacer	Mellanlägg	6
0030	3	43 45 153			8	Flange lock nut	Flänsläsmutter	3
0040	4			See page 5-021, 4-D22		Protecting plate	Skyddsplåt	
0050	5	42 41 477		-1996	2	Brake disc	Bromsskiva	2
0051	5	48 39 015		1997-,56)	1	Brake disc	Bromsskiva	2
0052				See page 5-027, 4-E04				
0055	5	48 39 338		57)	1	Brake disc	Bromsskiva	2
0056				See page 5-027, 4-E04				
0060	6	42 43 218		7), -1996, LH	1	Brake housing	Bromshus	5
0065	6	48 38 983		7), 1997-, LH	1	Brake housing	Bromshus	5
0070	6	42 41 469		7), -1996, RH	1	Brake housing	Bromshus	5
0075	6	48 38 991		7), 1997-, RH	1	Brake housing	Bromshus	5
0080	7	44 67 148			1	.Bleed screw	.Luftningsskruv	2
0090	8	89 08 576			1	.Protecting casing	.Skyddskåpa	3
0100	9	44 67 080		See page 5-023, 4-D24	1	.Gasket kit	.Packningsats	6
0110	10	44 67 098		-1996	1	.Spring kit	.Fjädersats	2
0111				See page 5-023, 4-D24				
0115	10	49 08 497		1997-	1	.Spring kit	.Fjädersats	2
0116				See page 5-023, 4-D24				
0120	11	44 67 072		42), -1996	1	Brake pad kit	Bromsklotssats	1
0121				See page 5-023, 4-D24				
0122	11	48 37 241		42), 1997-	1	Brake pad kit	Bromsklotssats	1
0123				See page 5-023, 4-D24				
0130	14	42 41 535			4	Screw	Skruv	5
0140	15	80 55 998			2	Screw	Skruv	5
0150	16	46 48 572		1997-	2	Cover plate	Täckplåt	


7. Also available as exchange unit. Finns även som utbytesenhet.
42. See SI 500-1699 Se SI 500-1699
52. Ch. -T2025933, -T7005245
53. Ch. T2025934-, T7005246-
56. Ch. -V2022961, -V7004689
57. Ch. V2022962-, V7004690-
66. Ch. -W2010745, -W7005531
67. Ch. W2010746-, W7005532-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

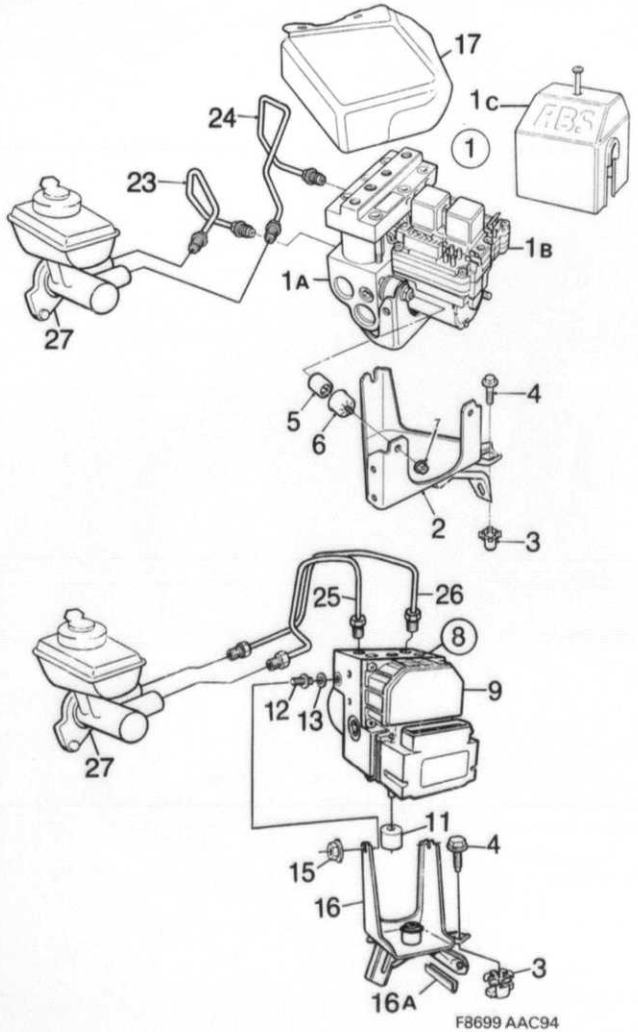

Footbrake system

4-D10

Hydraulic unit ABS

Fotbromssystem

Hydraulenhet ABS

0230	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 43 358*		-1995 NLS	1	Hydraulic unit	Hydraulaggregat	6
0020	1A	45 43 849		-1995	1	.Hydraulic unit	.Hydraulaggregat	6
0030	1B	47 78 544		-1995, (4543864)	1	.Electronic unit	.Elektronikenhet	4
0040	1C	45 43 856		-1995	1	.Cover	.Lock	
0050	2	43 98 186		-1995	1	Bracket	Konsol	5
0060	3	42 43 432			3	Cage nut	Korgmutter	5
0070	4	79 78 190			3	Screw	Skruv	5
0080	5	42 43 382		-1995	3	Sleeve	Hylsa	6
0090	6	42 43 374		-1995	3	Absorber	Dämpare	6
0100	7	79 77 929			3	Nut	Mutter	5
0110	8	46 46 642		1996	1	Hydraulic unit	Hydraulaggregat	6
0120	8	48 35 583		1997	1	Hydraulic unit	Hydraulaggregat	6
0125	8	47 79 500	*	1998-	1	Hydraulic unit	Hydraulaggregat	6
0130	9	47 78 981		1), 1996	1	.Electronic unit	.Elektronikenhet	5
0135	9	48 35 609		1), 1997	1	.Electronic unit	.Elektronikenhet	5
0137	9	47 79 526	*	1), 1998-	1	.Electronic unit	.Elektronikenhet	5
0140	11	46 46 675		1996-	1	Support sleeve	Stödhylsa	5
0150	12	46 46 683		1996-	2	Support pin	Stödpinne	6
0160	13	46 46 691		1996-	2	Absorber	Dämpare	6
0170	15	79 77 952		1996-	2	Hexagon nut	Sexkantsmutter	5
0180	16	44 26 581		1996-1997	1	Bracket	Konsol	5
0185	16	49 07 697		1998-	1	Bracket	Konsol	
0187	16A	*41 75 295*		1998- NLS – USE 4867917	1	.Edge protection moulding	.Kantskyddslist	5
0190	17	46 48 523		-1995	1	Cover	Lock	
0390	23	43 98 095		-1995, LHD	1	Brake pipe	Bromsrör	5
0400	24	44 67 353		-1995, LHD	1	Brake pipe	Bromsrör	5
0410	23	44 67 387		-1995, 4-CYL, RHD	1	Brake pipe	Bromsrör	5
0420	23	44 67 395		-1995, 6-CYL, RHD	1	Brake pipe	Bromsrör	5
0430	24	44 67 361		-1995, RHD	1	Brake pipe	Bromsrör	5
0440	25	44 26 649		1996-, LHD	1	Brake pipe	Bromsrör	5
0450	26	44 26 631		1996-, LHD	1	Brake pipe	Bromsrör	5
0460	25	*44 26 664*		1996-,47) 4-CYL, RHD NLS - USE 4838090	1	Brake pipe	Bromsrör	5
0465	25	*44 26 672*		48), -1996, 4-CYL, RHD NLS – USE 4838090	1	Brake pipe	Bromsrör	5
0470	25	*44 26 672*		1996, 6-CYL, RHD NLS – USE 4838090	1	Brake pipe	Bromsrör	5
0475	25	48 38 090		1997-, RHD	1	Brake pipe	Bromsrör	5
0480	26	44 26 656		1996, RHD	1	Brake pipe	Bromsrör	5
0485	26	48 38 082		1997-, RHD	1	Brake pipe	Bromsrör	5
0490	27			See page 5-011, 4-D12	1	Master cylinder	Huvudcylinder	


1. Not as separate spare part. Ej som separat reservdel.
47. Ch. -T7003723
48. Ch. T2024504-, T7003724-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

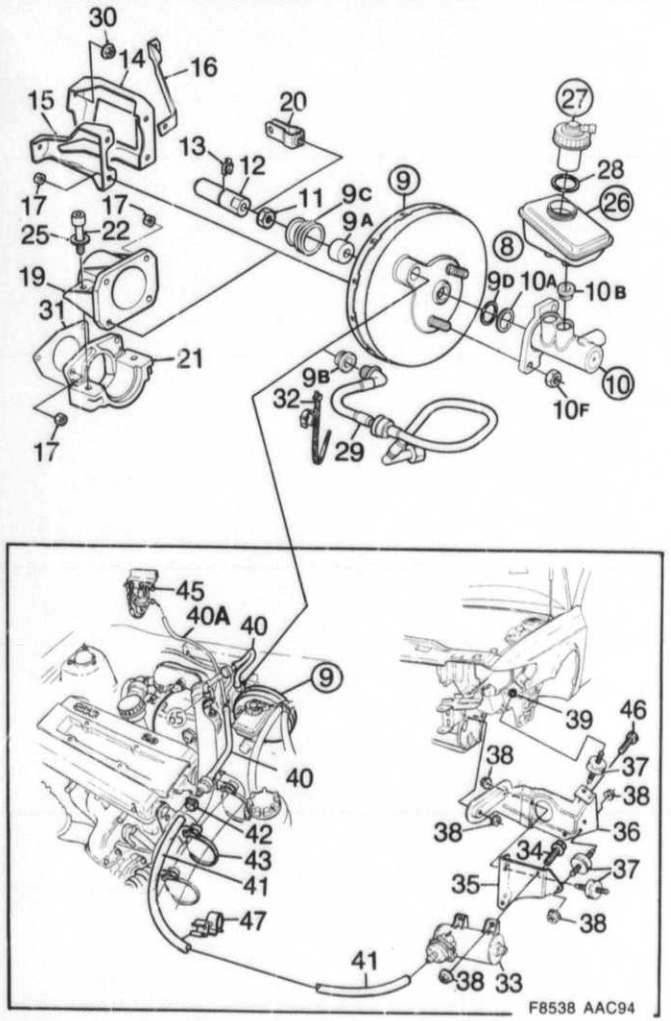

Footbrake system

4-D12 Master cylinder and power brake unit

Fotbromssystem

Huvudcylinder och vacuumservo

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	8	44 83 970		LHD	1	Master cylinder	Huvudcylinder	5
0020	8	*44 83 988*		4-CYL, RHD NLS	1	Master cylinder	Huvudcylinder	5
0030	8	44 83 996		-1997, 6-CYL, RHD	1	Master cylinder	Huvudcylinder	5
0040	9	45 43 872		LHD	1	.Brake servo	.Bromsservo	6
0050	9	45 44 151		RHD	1	.Brake servo	.Bromsservo	6
0060	9A	45 43 880			1	..Filter	..Filter	5
0070	9B	45 43 898			1	..Grommet	..Genomföring	6
0080	9C	45 43 906		LHD	1	..Bushing	..Bussning	6
0090	9C	45 44 169		RHD	1	..Bushing	..Bussning	6
0100	9D	45 43 914			1	..Sealing ring	..Tätningsring	6
0110	10	45 43 930			1	.Master cylinder	.Huvudcylinder	6
0120	10	45 43 948		48), 4-CYL, RHD	1	.Master cylinder	.Huvudcylinder	6
0130	10	45 43 948		-1997, 6-CYL, RHD	1	.Master cylinder	.Huvudcylinder	6
0140	10A	45 43 963			1	..Lock ring	..Låsring	5
0150	10B	*45 43 971*		NLS – USE 4198297	2	..Plug	..Plugg	6
0160	10F	45 43 922			2	.Lock nut	.Låsmutter	5
0170	11	43 45 120			1	Hexagon nut	Sexkantsmutter	5
0180	12	43 45 575		-1996, LHD	1	Adjusting nut	Justermutter	5
0190	12	45 67 855		1997-, RHD	1	Adjusting nut	Justermutter	5
0200	13	42 44 307		LHD	1	Return spring	Returfjäder	5
0210	14	42 42 566		LH, LHD	1	Bracket	Konsol	5
0220	15	42 42 574		RH, LHD	1	Bracket	Konsol	5
0230	16	42 42 558		LHD	1	Cross support	Tvärstöd	5
0240	17	79 71 922			4	Nut	Mutter	3
0250	17	79 71 922		RHD	6	Nut	Mutter	3
0260	19	42 45 080		RHD	1	Bracket	Konsol	6
0270	20	42 45 098		RHD	1	Brace	Bygel	5
0280	21	42 46 450		RHD	1	Support	Stöd	6
0290	22	43 45 898		RHD	2	Screw	Skruv	5
0300	25	89 29 531		RHD	2	Sealing washer	Tätningsbricka	5
0310	26	44 00 396			1	Reservoir	Behållare	5
0320	27	44 02 160			1	.Cover	.Lock	4
0330	28	45 43 997			1	..Sealing ring	..Tätningsring	5
0340	29	44 67 189		4-CYL I, LHD	1	Vacuum pipe	Vakuumrör	5
0350	29	*44 67 213*		33), B204L, LHD NLS – USE 4467189	1	Vacuum pipe	Vakuumrör	5
0360	29	44 67 189		34), B204L, LHD, M/ACS	1	Vacuum pipe	Vakuumrör	5
0370	29	44 00 115		-1997, B258I, LHD	1	Vacuum pipe	Vakuumrör	5
0380	29	44 67 197		4-CYL I, RHD	1	Vacuum pipe	Vakuumrör	5
0390	29	*44 67 205*		1994, B204L, RHD NLS – USE 4467197	1	Vacuum pipe	Vakuumrör	5
0400	29	44 67 197		1995-, B204L, RHD, M/ACS	1	Vacuum pipe	Vakuumrör	5
0410	29	44 67 668		-1997, B258I, RHD	1	Vacuum pipe	Vakuumrör	5
0420	30			See page 5-019, 4-D20		Nut	Mutter	
0430	31	44 26 870		RHD	1	Insulation	Isolering	6
0440	32	75 93 221		1995-, B204L, ACS, RHD	1	Tensioning band	Spännband	5
0450	33	46 46 220		54,55), 1996-, B204L, A	1	Vacuum pump	Vakuumpump	
0460	34	79 78 133		54,55), 1996-, B204L, A	3	Screw	Skruv	5
0470	35	46 46 451		55), 1996-, B204L, A	1	Bracket	Fäste	
0480	35	46 48 663		54,55)	1	Bracket	Fäste	
0490	36	47 79 104		54,55), 1996-, B204L, A	1	Support	Stöd	
0500	37	42 35 768		54,55), 1996-, B204L, A	5	Rubber spacer	Gummidistans	4
0510	38	79 77 929		54,55), 1996-, B204L, A	13	Nut	Mutter	5
0520	39	79 77 329		54,55), 1996-, B204L, A	1	Nut	Mutter	5
0530	40	46 46 238		1996-,58) B204L, A, LHD	1	Vacuum pipe	Vakuumrör	5


33. Ch. -R2039856
34. Ch. R2039857-
48. Ch. T2024504-, T7003724-
54. Ch. V2009697-V2018437, V7001753-V7003646, B258I, A, US, CA
55. Also applies to modified cars Gäller också för modifierade bilar
58. Ch. -V2021780, -V7004088

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

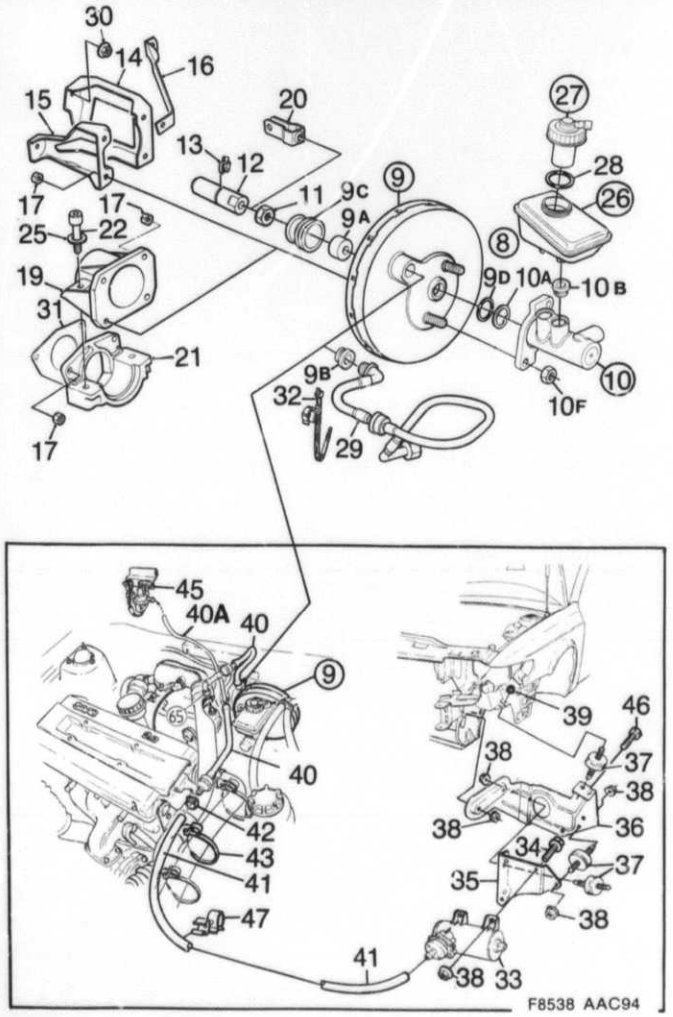

F8538 AAC94

Footbrake system

4-D14

Master cylinder and power brake unit

Fotbromssystem

Huvudcylinder och vacuumservo

0250 -	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	40	*49 07 572*		59,62), B204L, A, LHD	1	Vacuum pipe	Vakuumrör	5
0540				NLS – USE 4907671				
0550	40	49 07 671		63), B204L, A, LHD	1	Vacuum pipe	Vakuumrör	
0560	40	46 46 246		1996-,58) B204L, A, RHD	1	Vacuum pipe	Vakuumrör	5
0570	40	49 07 580		59,62), B204L, A, RHD	1	Vacuum pipe	Vakuumrör	5
0580	40	49 07 689		63), B204L, A, RHD	1	Vacuum pipe	Vakuumrör	
0590	40	48 37 258		54,55)	1	Vacuum pipe	Vakuumrör	5
0600	40A	91 36 243		1996-,55,58)B204L,A;	1	.Vaccum hose	.Vakuumslang	5
0610				L=330MM				
0620	40A	91 36 243		54,55), L=410MM	1	.Vaccum hose	.Vakuumslang	5
0630	41	46 46 923		54,55), 1996-, B204L, A	1	Vaccum hose	Vakuumslang	5
0640	42	79 74 009		54,55), 1996-, B204L, A	2	Hose clamp	Slangklamma	5
0650	43	75 93 221		1996-, B204L, A	3	Tensioning band	Spännband	5
0660	45			See page 3A-071, 2-C24		Pressure monitor	Tryckvakt	
0670	46	79 78 109		54,55)	2	Screw	Skruv	5
0680	47	73 98 373		54,55)	2	Clamp	Klammer	5


54. Ch. V2009697–V2018437, V7001753–V7003646, B258I, A, US, CA
55. Also applies to modified cars Gäller också för modifierade bilar
58. Ch. -V2021780, -V7004088
59. Ch. V2021781–, V7004089–
62. Ch. -V2032483, -V7009600
63. Ch. V2032484–, V7009601–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

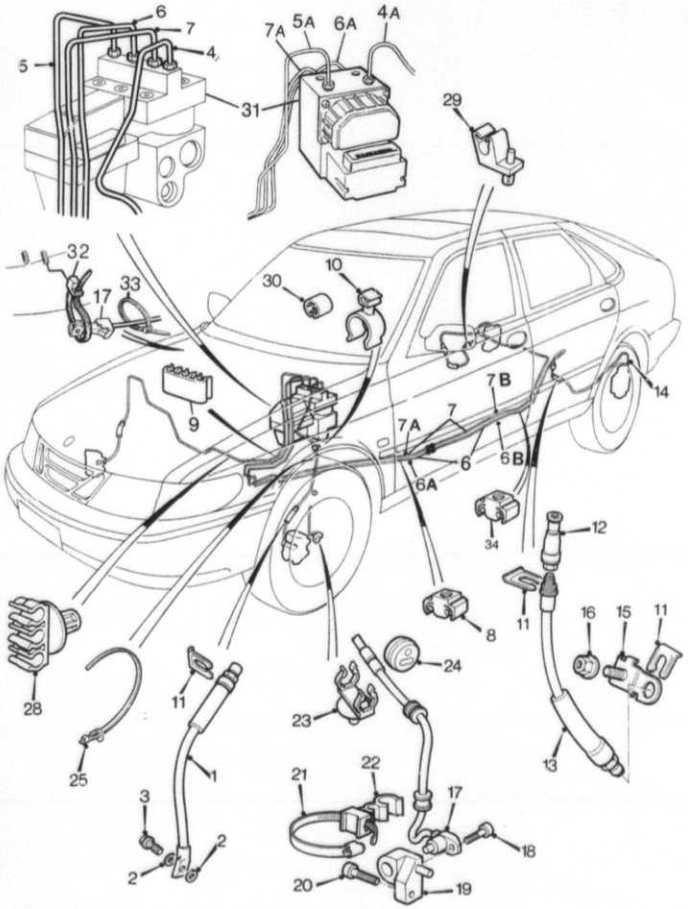

F8700 AAC94

Footbrake system

4-D16

Brake lines ABS

Fotbromssystem

Bromsledningar ABS

0280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 41 444			2	Brake hose	Bromsslang	4
0020	2	43 45 609			4	Sealing ring	Tätningsring	3
0030	3	43 45 591			2	Banjo screw	Banjoskruv	5
0040	4	42 48 589		-1995, LH	1	Brake pipe	Bromsrör	4
0050	4A	*44 26 599*		1996-, LH	1	Brake pipe	Bromsrör	4
0060	5	*42 45 684*		21), RH NLS - USE 4482196	1	Brake pipe	Bromsrör	4
0070	5	44 82 196		22), -1995, RH	1	Brake pipe	Bromsrör	4
0080	5A	44 26 607		1996-, RH	1	Brake pipe	Bromsrör	4
0090	6	*44 82 311*		21), LH NLS - USE 4426755, 4426763	1	Brake pipe	Bromsrör	6
0100	6	44 26 755		22), -1995, LH	1	Brake pipe	Bromsrör	6
0110	6A	46 48 507		1996-, LH	1	Brake pipe	Bromsrör	6
0120	6B	44 26 763		22), -1995, LH	1	Brake pipe	Bromsrör	6
0130	6B	46 48 556		1996-,49), LH	1	Brake pipe	Bromsrör	6
0140	6B	48 39 247		50,64), LH	1	Brake pipe	Bromsrör	6
0150	6B	48 37 712		65), LH	1	Brake pipe	Bromsrör	6
0160	7	*44 67 320*		21), RH NLS - USE 4426771, 4426789	1	Brake pipe	Bromsrör	6
0170	7	44 26 771		22), -1995, RH	1	Brake pipe	Bromsrör	6
0180	7A	46 48 515		1996-, RH	1	Brake pipe	Bromsrör	6
0190	7B	44 26 789		22), -1995, RH	1	Brake pipe	Bromsrör	6
0200	7B	46 48 564		1996-,49), RH	1	Brake pipe	Bromsrör	6
0210	7B	48 39 254		50,64), RH	1	Brake pipe	Bromsrör	6
0220	7B	48 37 720		65), RH	1	Brake pipe	Bromsrör	6
0230	8	44 02 426			X	Clamp	Klamma	5
0240	9	*42 43 127*		25) NLS - USE 8961021	2	Tube clamp	Rörklamma	5
0250	9	89 61 021		26,35)	2	Tube clamp	Rörklamma	5
0260	9	46 45 578		36), -1996	2	Tube clamp	Rörklamma	5
0270	9	48 38 512		1997-	2	Tube clamp	Rörklamma	5
0280	10	44 02 095			1	Double clamp	Dubbelklamma	5
0290	11	*42 43 010*		-1995 NLS - USE 4649844	6	Hose retainer	Slanghållare	5
0300	11	46 49 844		1996-	6	Hose retainer	Slanghållare	5
0310	12	44 26 847		-1995	1	Reduction valve	Reducerventil	4
0320		*43 99 366*		1) NLS - USE 4426847	2	.Reduction valve	.Reducerventil	4
0330	13	44 82 337		27), LH	1	Brake hose	Bromsslang	4
0340	13	45 43 427		28), LH	1	Brake hose	Bromsslang	4
0350	13	44 67 262		31), RH	1	Brake hose	Bromsslang	4
0360	13	44 83 285		32), RH	1	Brake hose	Bromsslang	4
0370	14	44 82 329		-1996, LH	1	Brake pipe	Bromsrör	5
0380	14	46 48 150		1997-, LH	1	Brake pipe	Bromsrör	5
0390	14	*44 83 269*		31), RH NLS - USE 4543823	1	Brake pipe	Bromsrör	5
0400	14	45 43 823		32), -1996, RH	1	Brake pipe	Bromsrör	5
0410	14	46 48 168		1997-, RH	1	Brake pipe	Bromsrör	5
0420	15	44 82 303		31), LH	1	Bracket	Konsol	5
0430	15	44 67 171		31), RH	1	Bracket	Konsol	5
0440	15	45 43 278		32), -1994, RH	1	Bracket	Konsol	5
0450	15	45 45 430		1995-, RH	1	Bracket	Konsol	


1. Not as separate spare part. Ej som separat reservdel.
21. Ch. -R2003568
22. Ch. R2003569-
25. Ch. -R2014012
26. Ch. R2014013-
27. Ch. -R2017930
28. Ch. R2017931-
31. Ch. -R2024558
32. Ch. R2024559-
35. Ch. -S2016239, -S7014738
36. Ch. S2016240-, S7014739-
49. Ch. -T2039532, -T7010573
50. Ch. T2039533-, T7010574-
65. Ch. V2041278-, V7011458-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

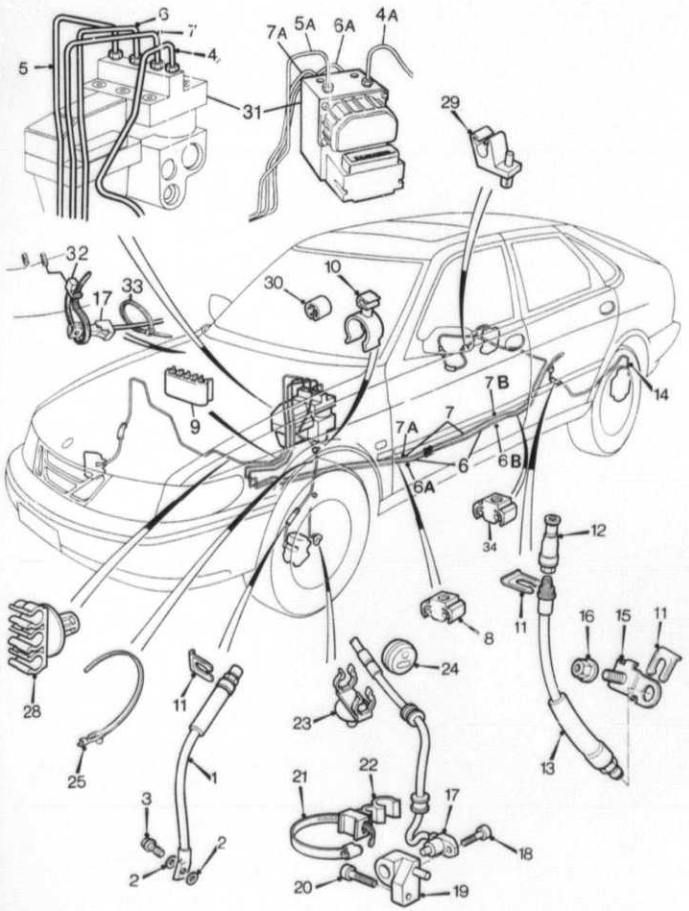

F8700 AAC94

Footbrake system

4-D18

Brake lines ABS

Fotbromssystem

Bromsledningar ABS

0280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460	16	80 74 288			2	Nut	Mutter	5
0470	17	44 82 436		-1995	2	Wheel speed sensor	Hastighetsgivare	
0480	17	*44 00 404*		1996-,45) NLS – USE 4779161	2	Wheel speed sensor	Hastighetsgivare	8
0490	17	47 79 161		46)	2	Wheel speed sensor	Hastighetsgivare	8
0500	18	*43 45 583*		1994 NLS – USE 4345914	2	Hex. socket screw	Insexskruv	5
0510	18	43 45 914		1995-	2	Hex. socket screw	Insexskruv	5
0520	19	*42 48 993*		1994, LH NLS – USE 4645099	1	Retainer	Hållare	5
0530	19	*42 43 416*		1994, RH NLS – USE 4645107	1	Retainer	Hållare	5
0540	19	46 45 099		1995-, LH	1	Retainer	Hållare	5
0550	19	46 45 107		1995-, RH	1	Retainer	Hållare	5
0560	20	43 45 914			2	Hex. socket screw	Insexskruv	5
0570	21	43 46 532			2	Tube clamp	Rörklamma	5
0580	22	42 49 090			4	Tube clamp	Rörklamma	5
0590	23	44 24 883			2	Clamp	Klamma	5
0600	24	43 99 358			2	Grommet	Genomföring	6
0610	25	79 84 750			4	Tensioning band	Spännband	5
0620	28	42 43 077			2	Tube clamp	Rörklamma	5
0630	29	42 43 119			2	Pipe clip	Rörklämma	
0640	30	89 65 097			1	Tube clamp	Rörklamma	5
0650	31			See page 5-009, 4-D10		Hydraulic unit	Hydraulaggregat	
0660	32	40 63 681		1996-	1	Tensioning band	Spännband	5
0670	33	79 71 880		1996-	1	Tensioning band	Spännband	4
0680	34	49 06 657		65)	2	Clamp	Klamma	5

45. Ch. -T2010151, -T7002859
46. Ch. T2010152-, T7002860-
65. Ch. V2041278-, V7011458-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

4 -D20

Brake operation
Bromsmanövrering

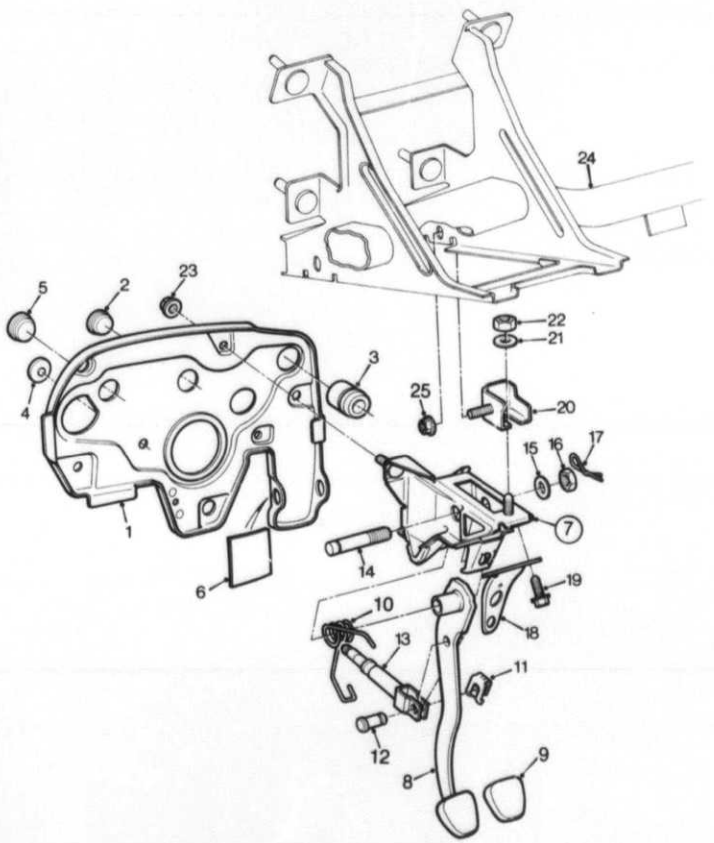

F5698 AAC94

0300	Pos		Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		44 82 097		-1997, LHD	1	Cowl plate	Torpedplåt	6
0015	1	*	46 47 996		1998-, LHD	1	Cowl plate	Torpedplåt	
0020	1		44 82 089		RHD	1	Cowl plate	Torpedplåt	6
0030	2		85 75 599			1	Plug	Plugg	5
0040	3		42 45 635			1	Seal	Tätning	5
0050	4		43 45 724			X	Seal	Tätning	5
0060	5		92 68 863			1	Plug	Plugg	5
0070	6		42 42 087			1	Spacer plate	Distansplatta	5
0080	7		43 98 897		M, LHD	1	Bracket	Konsol	6
0090	7		43 98 939		A, LHD	1	Bracket	Konsol	6
0100					ACS, LHD	1			
0110	7		43 98 905		M, RHD	1	Bracket	Konsol	6
0120	7		43 98 947		A, RHD	1	Bracket	Konsol	6
0130					ACS, RHD	1			
0140	8		42 44 547		M, LHD	1	.Brake pedal	.Bromspedal	6
0150	8		42 44 570		A, LHD	1	.Brake pedal	.Bromspedal	6
0160					ACS, LHD	1			
0170	8		42 41 840		M, RHD	1	.Brake pedal	.Bromspedal	6
0180	8		42 42 020		A, RHD	1	.Brake pedal	.Bromspedal	6
0190					ACS, RHD	1			
0200	9		42 41 832		M	1	.Pedal pad	.Pedalgummi	3
0210	9		42 44 612		A	1	.Pedal pad	.Pedalgummi	5
0220					ACS	1			
0230	10		42 42 103			1	.Return spring	.Returfjäder	6
0240	11		43 45 443			1	.Clip	.Clips	5
0250	12		43 45 435			1	.Pin	.Sprint	5
0260	13		*42 44 620*		23) NLS – USE 4688610	1	.Piston rod	.Kolvstång	6
0270	13		*44 82 022*		24), -1995 NLS – USE 4688610	1	.Piston rod	.Kolvstång	6
0275	13		46 88 610		1996-	1	.Piston rod	.Kolvstång	6
0280	14		42 41 865			1	.Screw	.Skruv	5
0290	15		80 73 108			1	.Washer	.Bricka	5
0300	16		43 45 047			1	.Nut	.Mutter	5
0310	17		42 41 881			1	.Lock spring	.Låsfjäder	3
0320	18		42 46 591		LHD	1	Bracket	Konsol	6
0330	18		42 47 003		RHD	1	Bracket	Konsol	6
0340	19		79 85 138			3	Screw	Skruv	5
0350	20		42 12 148			1	Pedal bracket	Pedalkonsol	6
0360	21		43 45 344			1	Washer	Bricka	5
0370	22		79 65 767			1	Lock nut	Låsmutter	3
0380	23		43 45 419			4	Nut	Mutter	5
0390	24				See page 6-011, 4-F12		Steering wheel member	Rattbalk	
0400	25		79 71 922			1	Nut	Mutter	3
0410	26	*	48 38 025		1998-, LHD, A, ACS	1	Rubber plug	Gummiplugg	


23. Ch. –R2008424
24. Ch. R2008425–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

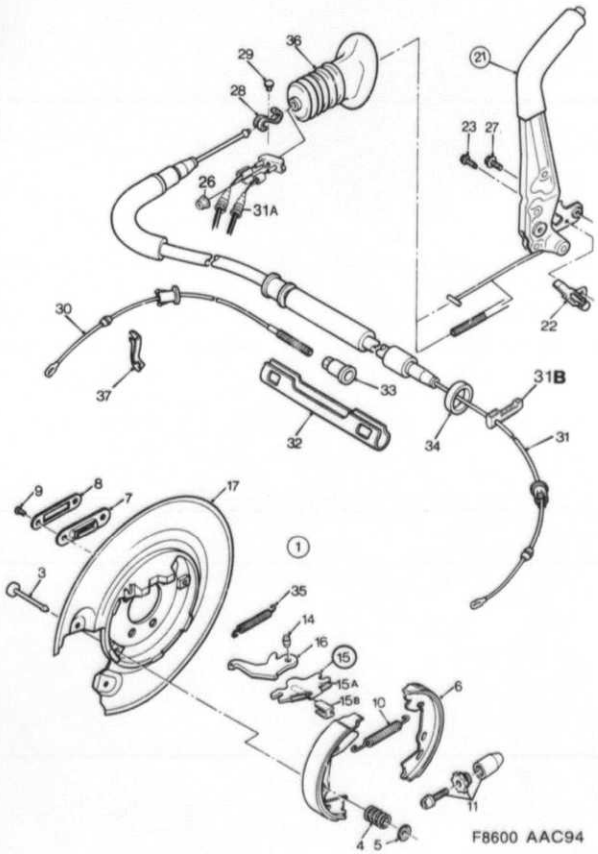

4-D22 Parking brake system — Parkeringsbromssystem

0350	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	42 45 601		LH	1	Handbrake	Handbroms	5
0020	1	*42 43 440*		RH NLS	1	Handbrake	Handbroms	5
0030	3	44 00 198			2	.Locking pin	.Spärrpinne	6
0040	4	44 00 206			2	.Compression spring	.Tryckfjäder	5
0050	5	44 00 214			2	.Lock plate	.Låsplatta	5
0060	6	*45 43 419*		1994	1	.Brake shoe kit	.Bromsbacksats	1
0061				See page 5-027, 4-E04				
0061				NLS – USE 4838660				
0065	6	*45 44 326*		1995	1	.Brake shoe kit	.Bromsbacksats	1
0066				See page 5-027, 4-E04				
0066				NLS – USE 4838660				
0068	6	48 38 660		1996-	1	.Brake shoe kit	.Bromsbacksats	1
0069				See page 5-027, 4-E04				
0070	7	44 00 230			2	.Sheet	.Bleck	6
0080	8	44 00 305			1	.Dust seal	.Dammtätning	6
0090	9	43 46 771			2	.Pin	.Pinne	4
0100	10	44 00 263			2	.Spring	.Fjäder	2
0110	11	89 93 941		See page 5-027, 4-E04	1	.Adjusting kit	.Justersats	
0150	14	44 00 248			1	.Pin	.Pinne	4
0165	15	46 46 832			1	.Shackle	.Schackel	4
0166	15A	*44 00 313*		1) NLS – USE 4646832	1	..Shackle	..Schackel	4
0167	15B	48 36 342		1)	1	..Clip	..Clips	
0170	16	44 00 297			1	.Lever	.Hävarm	3
0180	17	44 00 172		-1996, LH	1	.Attaching plate	.Fästplatta	6
0185	17	46 48 598		1997-, LH	1	.Attaching plate	.Fästplatta	6
0190	17	44 00 180		-1996, RH	1	.Attaching plate	.Fästplatta	6
0195	17	46 48 606		1997-, RH	1	.Attaching plate	.Fästplatta	6
0200	21	42 41 204		29)	1	Handbrake lever	Handbromsspak	5
0210	21	*45 43 062*		30,40) NLS – USE 4646030	1	Handbrake lever	Handbromsspak	5
0215	21	46 46 030		41)	1	Handbrake lever	Handbromsspak	5
0220	22	42 47 698			1	.Contact	.Kontakt	5
0230	23	79 78 356			1	.Screw	.Skruv	5
0240	26	79 71 922		30)	1	Nut	Mutter	3
0250	27	43 45 799			2	Screw	Skruv	5
0260	28	42 41 212		29)	1	Suspension hook	Upphängningskrok	6
0270	29	42 41 238		29)	1	Lock plug	Låsplugg	4
0280	30	42 41 311		29), LH	1	Handbrake cable	Handbromskabel	2
0290	31	42 41 329		29), RH	1	Handbrake cable	Handbromskabel	2
0300	31A	*45 43 104*		30,38) NLS – USE 4648291	1	Handbrake cable	Handbromskabel	2
0305	31A	46 48 291		39,60)	1	Handbrake cable	Handbromskabel	2
0306	31A	48 39 874		61)	1	Handbrake cable	Handbromskabel	
0307	31B			1)	1	.Retainer	.Hållare	
0310	32	42 41 337		29)	1	Equalizing pipe	Utjämningsrör	3
0320	33	42 41 303		29)	1	Adjusting nut	Justermutter	3
0330	34	42 41 295		29)	1	Rubber ring	Gummiring	5
0340	35	42 41 345			1	Return spring	Returfjäder	4
0350	36	44 02 434			1	Bellows	Bälg	3
0360	37			See page 7-023, 4-G24		Retainer	Hållare	

1. Not as separate spare part. Ej som separat reservdel.
29. Ch. -R2023869
30. Ch. R2023870-
38. Ch. -S2023869, -S7024001
39. Ch. S2023870-, S7024002-
40. Ch. -S2035157, -S7020618
41. Ch. S2035158-, S7020619-
60. Ch. -V2011536, -V7002549
61. Ch. V2011537-, V7002550-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

Complete set
4 -D24
Brakes

Satser
Bromsar

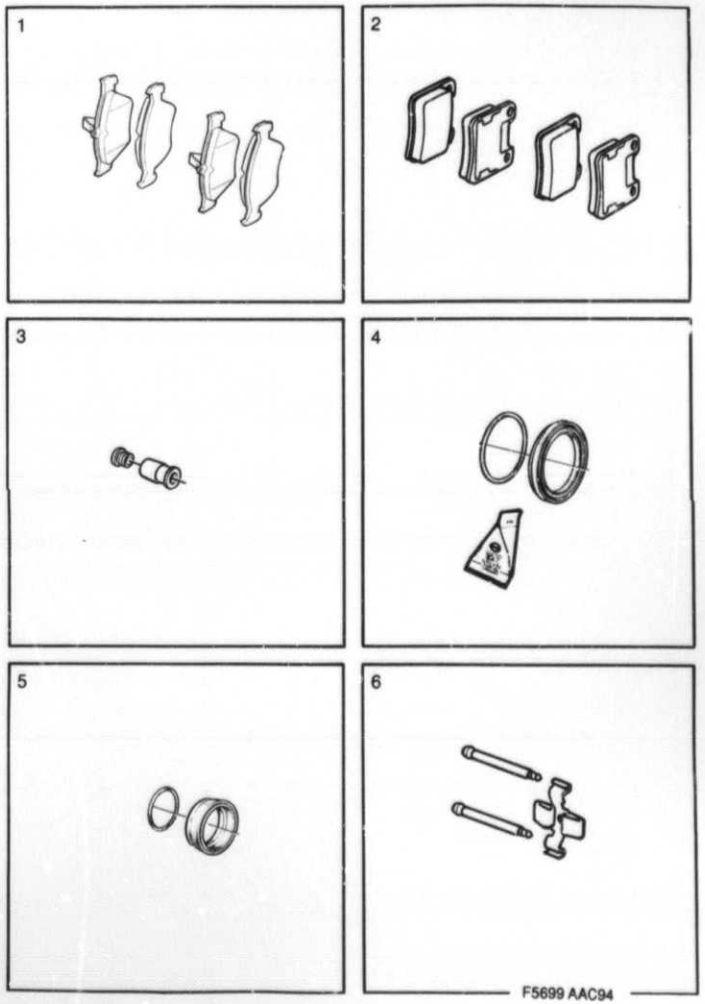

1000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*44 67 049*		42),-1996, ME,FE,JP,AU	X	Brake pad kit	Bromsklotssats	1
0020				NLS – USE 4646899		front brake	frambroms	
0030		*44 67 122*		1) NLS	2	.Brake pad	.Bromsklots	1
0040		*44 67 130*		1) NLS	2	.Brake pad	.Bromsklots	1
0050								
0060	1	46 46 899		42), -1996, SE, EU	X	Brake pad kit	Bromsklotssats	1
0070						front brake	frambroms	
0080		*46 46 873*		1) NLS	2	.Brake pad	.Bromsklots	1
0090		*46 46 881*		1) NLS	2	.Brake pad	.Bromsklots	1
0100								
0110	1	*44 83 723*		42), -1995, US, CA	X	Brake pad kit	Bromsklotssats	1
0120				NLS – USE 4648457		front brake	frambroms	
0130		*44 83 707*		1) NLS	2	.Brake pad	.Bromsklots	1
0140		*44 83 715*		1) NLS	2	.Brake pad	.Bromsklots	1
0150								
0160	1	46 48 457		42), 1996, US, CA	X	Brake pad kit	Bromsklotssats	1
0170						front brake	frambroms	
0180		*46 48 267*		1) NLS	2	.Brake pad	.Bromsklots	1
0190		*46 48 275*		1) NLS	2	.Brake pad	.Bromsklots	1
0200								
0210	1	47 78 254		42), 1997	X	Brake pad kit	Bromsklotssats	1
0220						front brake	frambroms	
0230		*47 78 072*		1) NLS	1	.Brake pad	.Bromsklots	1
0240		*47 78 221*		1) NLS	1	.Brake pad	.Bromsklots	1
0250		*47 78 239*		1) NLS	2	.Brake pad	.Bromsklots	1
0260								
0261	1	• 48 39 924		42), 1998-	X	Brake pad kit	Bromsklotssats	1
0262						front brake	frambroms	
0263		*47 78 072*		1) NLS	1	.Brake pad	.Bromsklots	1
0264		*47 78 221*		1) NLS	1	.Brake pad	.Bromsklots	1
0265		• *48 39 882*		1) NLS	2	.Brake pad	.Bromsklots	1
0266		• *48 39 890*		1) NLS	2	.Brake pad	.Bromsklots	1
0268								
0270	2	44 67 072		42), -1996	X	Brake pad kit	Bromsklotssats	1
0280						rear brake	bakbroms	
0290		*42 44 331*		1) NLS	4	.Brake pad	.Bromsklots	1
0300								
0310	2	48 37 241		42), 1997-	X	Brake pad kit	Bromsklotssats	1
0320						rear brake	bakbroms	
0330		*48 37 233*		1) NLS	4	.Brake pad	.Bromsklots	1
0340								
0350	3	44 67 064			X	Guide	Styrning	3
0360						front brake	frambroms	
0370		89 55 478			1	.Cover	.Lock	3
0380		89 69 107			1	.Sleeve	.Hylsa	6
0390								
0400	4	44 67 056		-1996	X	Gasket kit	Packningsats	2
0410						front brake	frambroms	
0420		*44 67 023*		1) NLS	1	.Gaiter	.Damask	3
0430		*44 67 031*		1) NLS	1	.O-ring	.O-ring	2
0440		*89 55 536*		1) NLS	1	.Grease	.Fett	
0450								
0460	4	47 78 262		1997-	X	Gasket kit	Packningsats	2
0470						front brake	frambroms	
0480								
0490	5	44 67 080			X	Gasket kit	Packningsats	6
0500						rear brake	bakbroms	
0510								
0520	6	44 67 098		-1996	X	Spring kit	Fjädersats	2
0530						rear brake	bakbroms	
0540		*44 67 106*		1) NLS	2	.Pin	.Pinne	1


1. Not as separate spare part. Ej som separat reservdel.
42. See SI 500-1699 Se SI 500-1699

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

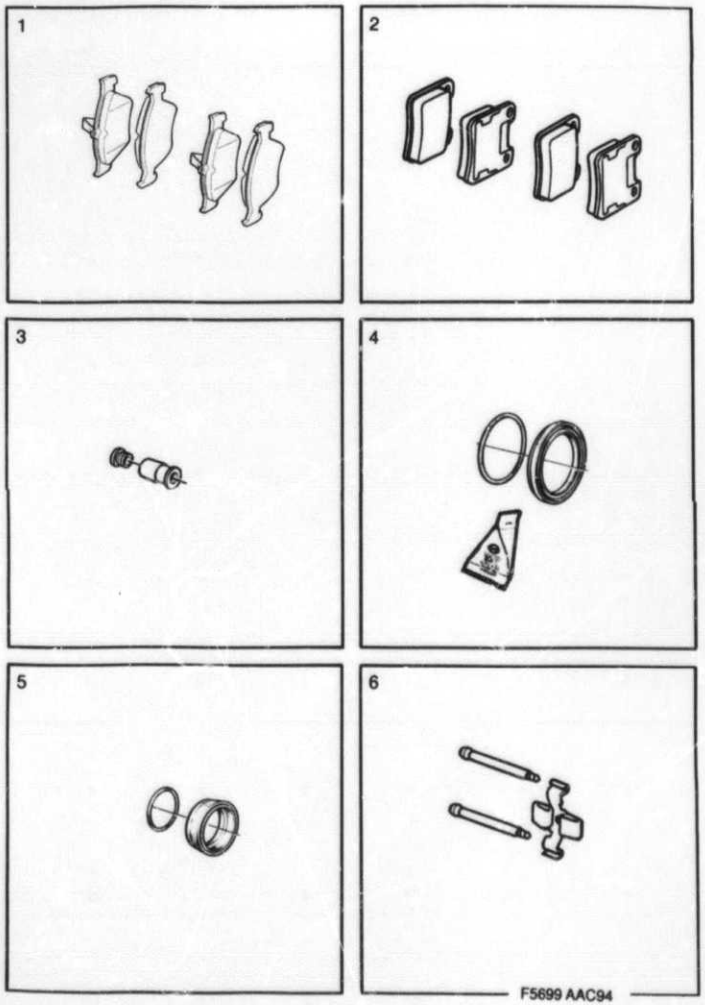

Complete set
Brakes

Satser
Bromsar

4-E02

1000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0550		*44 67 114*		1) NLS	1	.Spring	.Fjäder	6
0560								
0570	6	49 08 497		1997-	X	Spring kit rear brake	Fjädersats bakbroms	2
0580								
0590		*49 08 505*		1) NLS	2	.Pin	.Pinne	1
0600		*49 08 513*		1) NLS	1	.Spring	.Fjäder	6

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24

Complete set
Brakes

Satser
Bromsar

4 -E04

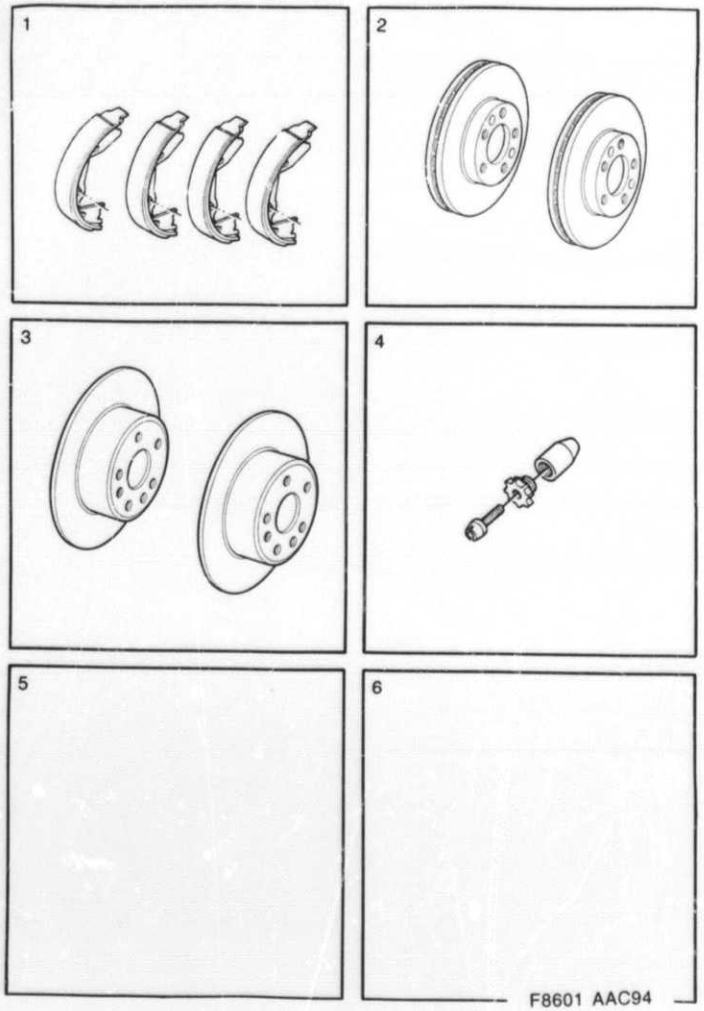

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 43 419*		1994 NLS – USE 4838660	X	Brake shoe kit	Bromsbacksats	1
0020		*44 00 222*		1) NLS	4	.Brake shoe	.Bromsback	1
0030								
0040	1	*45 44 326*		1995 NLS – USE 4838660	X	Brake shoe kit	Bromsbacksats	1
0050		*45 44 334*		1) NLS	4	.Brake shoe	.Bromsback	1
0060								
0070	1	48 38 660		1996-	X	Brake shoe kit	Bromsbacksats	1
0080		*48 38 652*		1) NLS	4	.Brake shoe	.Bromsback	1
0090								
0100	2	*48 39 007*		1997-,56)	X	Brake disc	Bromsskiva	3
0110				NLS – USE 4839320		front brake	frambroms	
0120		45 66 840			2	.Brake disc	.Bromsskiva	3
0130								
0140	2	48 39 320		57)	X	Brake disc	Bromsskiva	3
0150						front brake	frambroms	
0160		48 37 019			2	.Brake disc	.Bromsskiva	3
0170								
0180	3	48 39 015		1997-,56)	X	Brake disc	Bromsskiva	2
0190						rear brake	bakbroms	
0200		*45 65 693*		1) NLS	2	.Brake disc	.Bromsskiva	2
0210								
0220	3	48 39 338		57)	X	Brake disc	Bromsskiva	2
0230						rear brake	bakbroms	
0240		48 37 027		1)	2	.Brake disc	.Bromsskiva	2
0250								
0260	4	89 93 941			X	Adjusting kit	Justersats	
0270		44 00 255			1	.Adjusting nut	.Justermutter	3
0280		44 00 271			1	.Screw	.Skruv	5
0290		44 00 289			1	.Sleeve	.Hylsa	6

1. Not as separate spare part. Ej som separat reservdel.
56. Ch. -V2022961, -V7004689
57. Ch. V2022962-, V7004690-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-D06
Rear wheel brake	4-D08
Footbrake system	4-D10
Parking brake system	4-D22
Complete sets	4-D24



Front assembly, Steering
Framvagn, Styrinrättning
Tren delantero, Dirección

0041
0010
0020
0030
0040
0050
0060
0070
0080
0095
0100
0105
0110
0150
0160
0170
0180
0190

TABLE OF CONTENTS

Front wheel suspension		
Front wheel suspension	6 : 5	4-F06
Steering device		
Steering wheel, airbag module	6 : 7	4-F08
Steering wheel member, steering column	6 : 11	4-F12
Power steering gear	6 : 15	4-F16
Hydraulic pump, hoses	6 : 19	4-F20
Complete sets		
Front wheel suspension, steering device	6 : 23	4-F24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

4 -F03

0042
0170
0180
0190
0200
0210
0220
0230
0240
0255
0260
0265
0270
0310
0320
0330
0340
0350
0680
0690
0700
0710
0720
0735
0740
0745
0750
0790
0800
0810
0820
0830

INNEHÅLLSFÖRTECKNING

Framvagn
Framvagn ..... 6 : 5 4-F06
Styrinrättning
Ratt, airbagmodul ..... 6 : 7 4-F08
Rattbalk, rattställ ..... 6 : 11 4-F12
Servostyrväxel ..... 6 : 15 4-F16
Hydraulpump, slangar ..... 6 : 19 4-F20
Satser
Framvagn, styrinrättning ..... 6 : 23 4-F24

SUMARIO

Tren delantero
Tren delantero ..... 6 : 5 4-F06
Direccion
Volante, cojin antichoque ..... 6 : 7 4-F08
Elemento del volante, tubo de la direccion ..... 6 : 11 4-F12
Servomecanismo de direccion ..... 6 : 15 4-F16
Bomba hidraulica, mangueras ..... 6 : 19 4-F20
Juegos completos
Mecanismos delanteros, direccin, cambio en el volante ..... 6 : 23 4-F24


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 2-J02,3-A02
4 Transmission 4-A02
5 Brakes 4-D02
6 Front assembly, Steering 4-F02
7 Suspension, Wheels 4-G02
8A Body, external 5-A02
8B Body, internal 5-H02
8C Body, heating and ventilation 6-A02
8D Tool, Labels 6-C02
10 Numerical register 6-D02

6 GROUP INDEX

Front wheel suspension 4-F06
Steering device 4-F08
Complete sets 4-F24

4 –F06 *Front wheel suspension* *Framvagn*

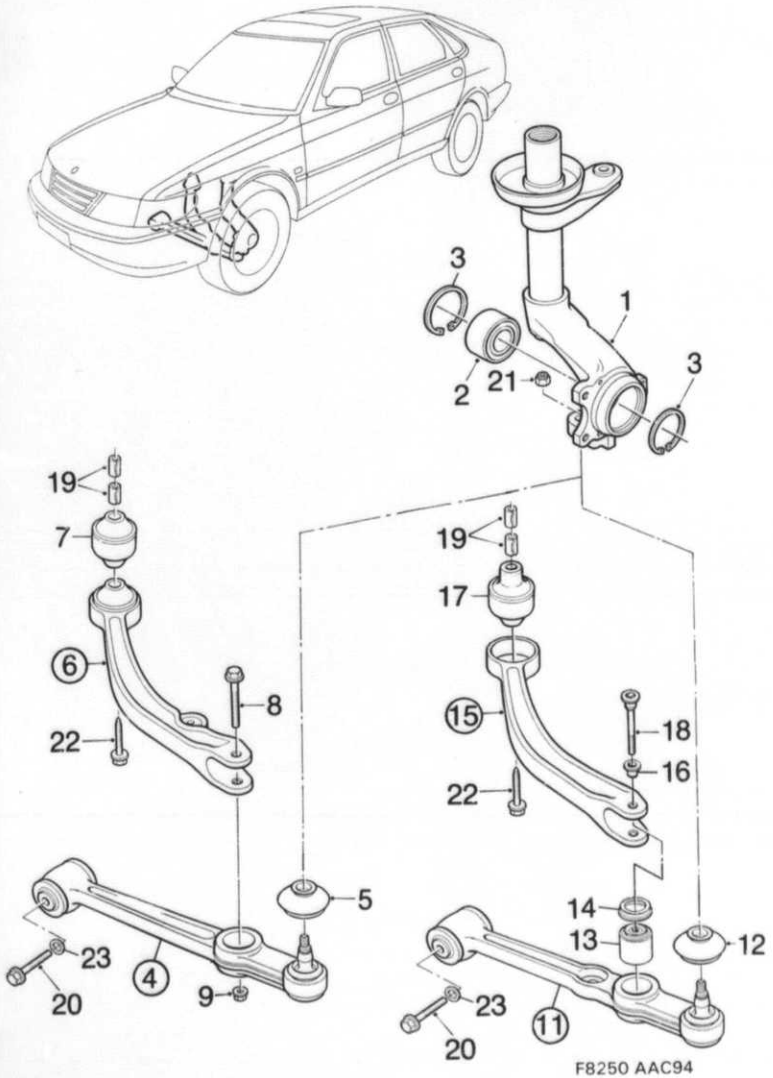

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 49 413		LH	1	Steering knuckle housing	Styrspindelhus	5
0020	1	42 49 405		RH	1	Steering knuckle housing	Styrspindelhus	5
0030	2	*42 42 202*		71) NLS – USE 4689923	2	Angular contact ball brg.	Vinkelkontaktkullager	5
0035	2	46 89 923		72)	2	Angular contact ball brg.	Vinkelkontaktkullager	5
0040	3	43 45 450			4	Retaining ring	Spärring	5
0050	4	42 48 431		45), LH	1	Arm	Arm	4
0060	4	42 48 449		45), RH	1	Arm	Arm	4
0070	5	89 93 867		See page 6-023, 4-F24	1	.Bellows kit	.Bälgsats	
0080	6	*44 83 798*		31), LH NLS – USE 4544995	1	Stanchion	Stötta	5
0090	6	*44 83 806*		31), RH NLS – USE 4545000	1	Stanchion	Stötta	5
0100	6	89 93 958		32,33) See page 6-023, 4-F24	1	Kit	Sats	
0120	6	*44 83 798*		34,40,45),LH,SE,GB,EU,CA NLS – USE 4544995	1	Stanchion	Stötta	5
0130	6	*44 83 806*		34,40,45),RH,SE,GB,EU,CA NLS – USE 4545000	1	Stanchion	Stötta	5
0140	6	45 44 995		34,45), LH	1	Stanchion	Stötta	5
0150	6	45 45 000		34,45), RH	1	Stanchion	Stötta	5
0160	7	44 83 293		40,45), SE, GB, EU, CA	1	.Bushing	.Bussning	2
0170	7	45 44 987		45)	1	.Bushing	.Bussning	2
0180	8	79 74 819		45)	2	Screw	Skruv	5
0190	9	79 79 552		45)	2	Nut	Mutter	5
0200	11	45 43 450		46,59), LH	1	Arm	Arm	4
0210	11	45 43 468		46,59), RH	1	Arm	Arm	4
0220	12	89 93 867		See page 6-023, 4-F24	1	.Bellows kit	.Bälgsats	
0230	13	45 45 711		46,59)	1	.Bushing	.Bussning	
0240	14	46 46 089		46,59)	1	.Seal	.Tätning	
0250	15	45 43 476		46,49,59,68), LH	1	Stanchion	Stötta	5
0260	15	45 43 484		46,49,59,69), RH	1	Stanchion	Stötta	5
0270	15	46 47 004		50,59,70), LH	1	Stanchion	Stötta	5
0280	15	46 47 012		50,59,70), RH	1	Stanchion	Stötta	5
0290	16	46 45 164		46,59)	1	.Press nut	.Pressmutter	
0300	17	44 82 402		46,59)	1	.Bushing	.Bussning	2
0310	18	46 45 156		46,59)	4	Screw	Skruv	5
0320	19	42 46 062			4	Spring sleeve	Fjäderhylsa	5
0330	20	79 84 933			2	Screw	Skruv	5
0340	21	79 79 578			2	Nut	Mutter	3
0350	22			See page 8A-005, 5-A06		Screw	Skruv	
0360	23	80 73 116			2	Washer	Bricka	5


31. Ch. –R2000563
32. Ch. R2000564–
33. Ch. –R2003665
34. Ch. R2003666–
40. With lowered chassis Med sänkt chassi
45. Ch. –S2012271, –S7014772
46. Ch. S2012272–, S7014773–
49. Ch. –S2044146, –S7023810
50. Ch. S2044147–, S7023811–
59. Also applies to modified cars with a lower chassis number. Gäller också för modifierade bilar med lägre chassinummer.
68. Part number is engraved. Artikelnummer är inpräglat.
69. Part number is engraved. Artikelnummer är inpräglat.
70. Part number is engraved. Artikelnummer är inpräglat.
71. Ch. –V2013396, –V7002632
72. Ch. V2013397–, V7002633–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F03
Complete sets	4-F24

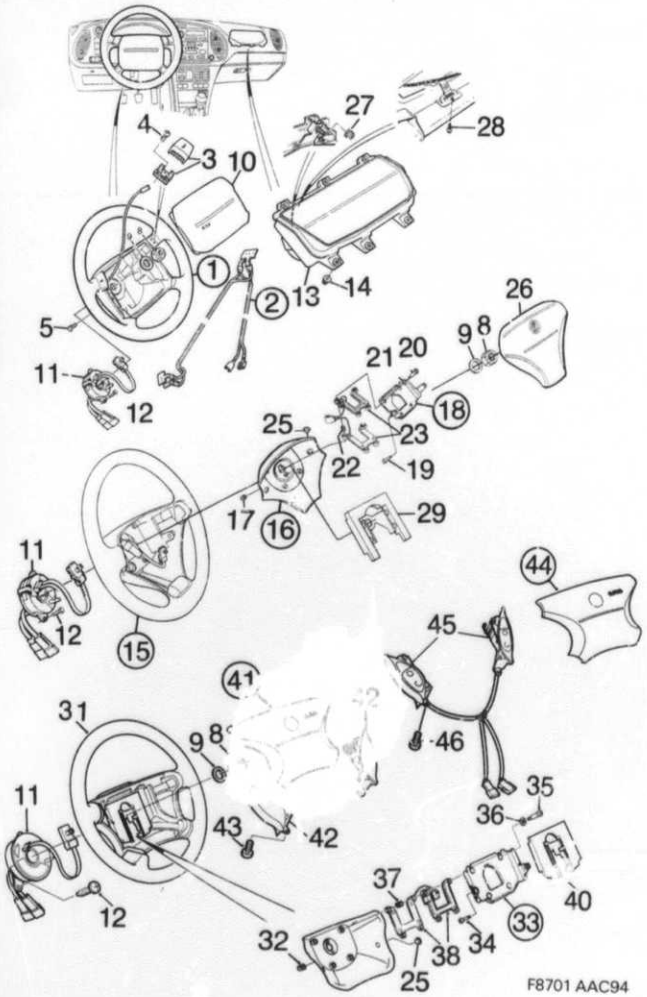

Steering device

4 –F08

Steering wheel
Airbag module

Styrinrättning

Ratt
Airbagmodul

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 07 448		1994	1	Steering wheel	Ratt	5
0020	1	45 07 463		1994, 40/400104295	1	Steering wheel	Ratt	5
0030						leather	läder	
0040	2	46 29 853		1994	1	.Cable	.Kabel	6
0050	3	40 03 372		1994, LH	1	..Horn button	..Signalknapp	6
0060	3	40 03 380		1994, RH	1	..Horn button	..Signalknapp	6
0070	4	89 68 703		1994	4	.Screw	.Skruv	5
0080	5	89 68 315		1994	2	.Screw	.Skruv	5
0090	8	89 54 315			1	Nut	Mutter	5
0100	9	80 30 058			1	Washer	Bricka	5
0110	10	45 07 018		1994	1	Airbag module	Airbagmodul	5
0120	11	44 16 582		77)	1	Contact unit	Kontaktenhet	6
0130	11	• 48 48 644		78)	1	Contact unit	Kontaktenhet	6
0135	11	50 11 705		1998-	1	Contact unit	Kontaktenhet	
0140	12	79 77 283			2	Screw	Skruv	5
0150	13	44 29 155		-1997, LHD	1	Airbag module	Airbagmodul	5
0155	13	• 47 19 126		1998-, LHD	1	Airbag module	Airbagmodul	
0160	13	44 29 205		-1997, RHD	1	Airbag module	Airbagmodul	5
0165	13	• 47 19 134		1998-, RHD	1	Airbag module	Airbagmodul	
0170	14	79 74 298			6	Nut	Mutter	5
0180	15	45 06 077		1995-1996	1	Steering wheel	Ratt	
0190	15	48 47 794		1997	1	Steering wheel	Ratt	
0200	15	45 06 085		1995-1996, 40/400103669	1	Steering wheel	Ratt	
0210						leather	läder	
0220	15	48 47 802		1997, 40/400107801	1	Steering wheel	Ratt	
0230						leather	läder	
0240	16	45 06 317		1995-1996	1	.Cover	.Kåpa	
0250	16	48 47 810		1997	1	.Cover	.Kåpa	
0260	17	45 06 150		1995-1996	1	..Bushing	..Bussning	
0265	17	• 48 48 289		1997-	1	..Seal	..Tätning	5
0270	18	45 06 325		1995-1996	1	.Signal device	.Signalanordning	
0280	18	48 47 828		1997	1	.Signal device	.Signalanordning	
0290	19	45 06 416		1995	2	..Screw	..Skruv	
0300	20	45 06 200		1995	4	.Screw	.Skruv	
0310	21	45 06 218		1995	4	.Rubber damper	.Gummidämpare	
0320	22	45 06 226		1995	4	.Spring	.Fjäder	
0330	23	45 06 242		1995-1996	1	.Cable network	.Kabelnät	
0340	23	48 47 869		1997	1	.Cable network	.Kabelnät	
0350	25	45 06 143		1995-	2	Cover	Täcklock	
0360	26	44 74 714		1995-1997	1	Airbag module	Airbagmodul	5
0370	27	79 71 922		-1997	1	Nut	Mutter	3
0375	28	79 76 897		1998-	1	Screw	Skruv	5
0380	29	47 19 050		1995-1997, 4-CYL, A	1	Vibration damper	Vibrationsdämpare	
0450	31	45 32 248		1998-	1	Steering wheel	Ratt	
0460	31	45 32 255		1998-, 40/400107546	1	Steering wheel	Ratt	
0470						leather	läder	
0480	32	• 48 48 289		1998-	1	.Seal	.Tätning	5
0490	33	45 06 168		1998-	1	.Signal device	.Signalanordning	
0500	34	45 06 416		1998-	1	..Screw	..Skruv	
0510	35	45 06 200		1998-	4	.Screw	.Skruv	
0520	36	45 06 218		1998-	4	.Rubber damper	.Gummidämpare	
0530	37	45 06 226		1998-	4	.Spring	.Fjäder	
0540	38	45 06 242		1998-	1	.Cable network	.Kabelnät	
0550	40	47 61 300		1998, A	1	Vibration damper	Vibrationsdämpare	
0610	41	50 11 762		1998-	1	Airbag module	Airbagmodul	5
0620	42	48 01 262		1998-, LH	1	.Cover	.Täcklock	
0630	42	48 01 270		1998-, RH	1	.Cover	.Täcklock	
0640	43	79 82 333		1998-	4	.Screw	.Skruv	5


77. Ch. –V2000543, –V7000818
78. Ch. V2000544–, V7000819–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

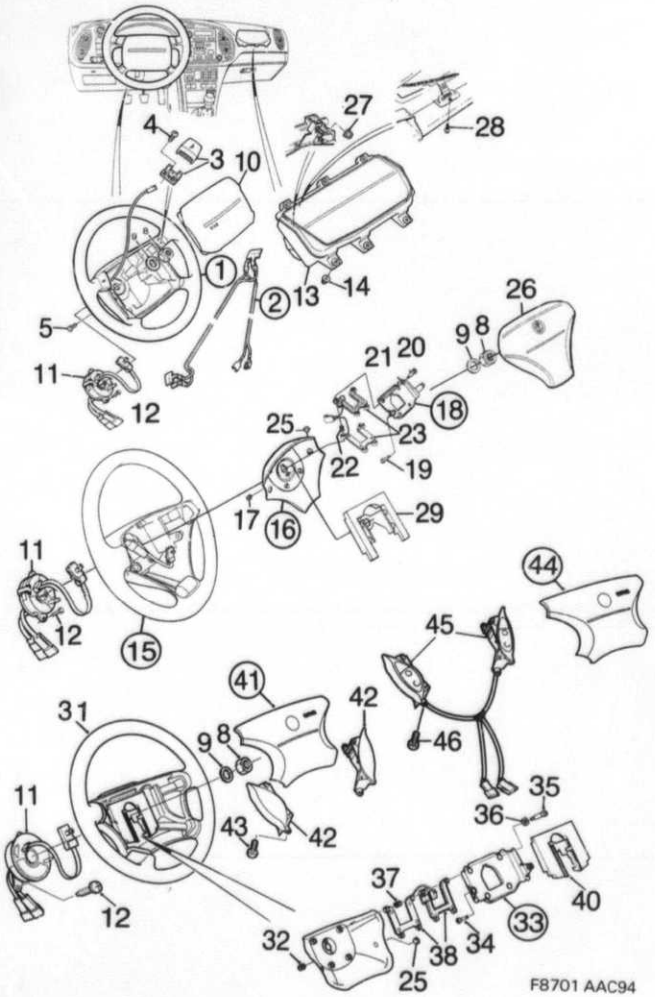

Steering device

4-F10

Steering wheel
Airbag module

Styrinrättning

Ratt
Airbagmodul


0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	44	*48 48 768*		1998-	1	Airbag module	Airbagmodul	5
0651				NLS – USE 5011754		with switch for radio	med strömställare för radio	
0652								
0660	45	46 16 025		1998-	1	.Switch	.Strömställare	
0670	46	79 82 333		1998-	4	.Screw	.Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

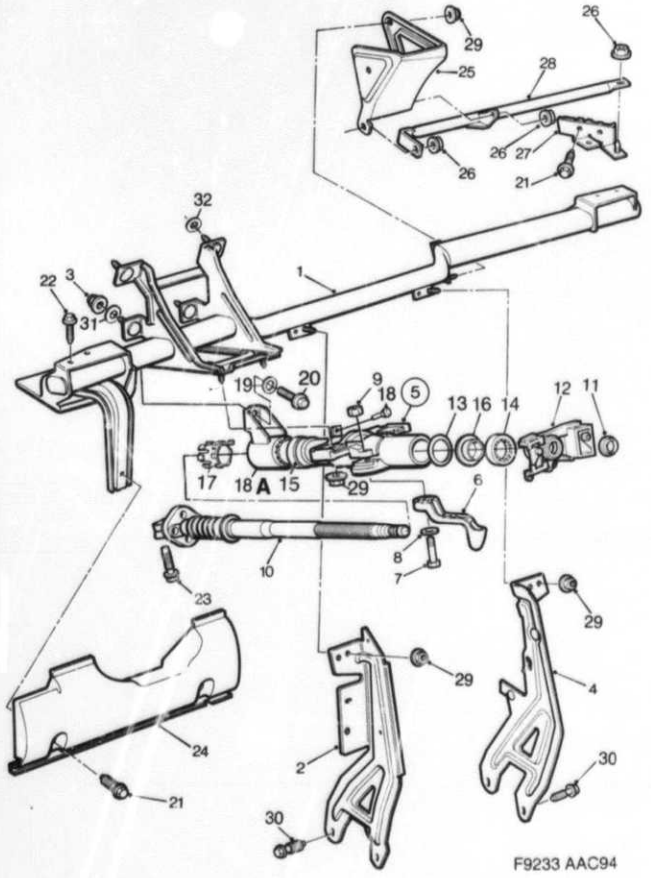

Steering device — Styrinrättning

4 -F12

Steering wheel member — *Rattbalk*
Steering column — *Rattställ*

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 33 409*		25), LHD NLS – USE 4507059	1	Steering wheel member	Rattbalk	5
0020	1	45 07 059		26), -1997, LHD	1	Steering wheel member	Rattbalk	5
0025	1	50 10 400		1998-, LHD	1	Steering wheel member	Rattbalk	5
0030	1	43 79 582		RHD	1	Steering wheel member	Rattbalk	6
0040	2	44 14 868		23), LHD	1	Support	Stödben	5
0050	2	44 14 868		23), RHD, AS3	1	Support	Stödben	5
0060	2	45 05 756		24), LHD	1	Support	Stödben	5
0070	2	45 05 889		24), RHD, AS3	1	Support	Stödben	5
0080	3	43 45 419			X	Nut	Mutter	5
0090	4	44 14 827		LHD, AIRBAG 2	1	Support	Stödben	5
0100	4	44 14 827		LHD, AS3	1	Support	Stödben	5
0110	4	42 33 318		RHD	1	Support	Stödben	5
0120	5	*43 79 194*		35), 3D, 5D NLS – USE 4534491, 4804050	1	Steering column	Rattställ	5
0130	5	*45 31 240*		36,41), 3D, 5D, LHD NLS - USE 4534491, 4804050	1	Steering column	Rattställ	5
0140	5	*45 05 699*		42,60), 3D, 5D, LHD NLS - USE 4804050	1	Steering column	Rattställ	5
0150	5	*45 32 222*		36,41), 3D, 5D, RHD NLS - USE 4804050	1	Steering column	Rattställ	5
0160	5	*45 05 699*		42,60), 3D, 5D, RHD NLS - USE 4804050	1	Steering column	Rattställ	5
0170	5	*45 31 240*		41), US, CA, 3D, 5D NLS - USE 4534491, 4804050	1	Steering column	Rattställ	5
0180	5	*45 05 699*		42,60), US, CA, 3D, 5D NLS – USE 4804050	1	Steering column	Rattställ	5
0190	5	*45 34 624*		41), CV, LHD NLS – USE 4534491, 4804050	1	Steering column	Rattställ	5
0200	5	*45 05 699*		42,60), CV, LHD NLS – USE 4804050	1	Steering column	Rattställ	5
0210	5	*45 05 699*		60), CV, RHD NLS – USE 4804050	1	Steering column	Rattställ	5
0220	5	48 04 05[illegible]		61), -1997	1	Steering column	Rattställ	5
0230	5	48 42 86[illegible]		1998-	1	Steering column	Rattställ	5
0240	6	42 32 9[illegible]3			1	.Handle	.Handtag	5
0250	7	80 21 9[illegible]6			1	.Hexagon screw	.Sexkantsskruv	5
0260	8	79 81 [illegible]54			1	.Washer	.Bricka	5
0270	9	80 73 [illegible]12			1	.Lock nut	.Låsmutter	3
0290	10	48 4[illegible]8 715		-1997	1	.Steering shaft	.Rattaxel	5
0300	10	48 4[illegible]2 902		1998-	1	.Steering shaft	.Rattaxel	5
0310	11	89 [illegible]4 281		-1997	1	.Lock ring	.Låsring	5
0320	11	50 10 194		1998-	1	.Lock ring	.Låsring	5
0330	12	*44 60 739*		35) NLS – USE 4505715	1	.Bearing housing	.Lagerhus	6
0340	12	45 05 715		36)	1	.Bearing housing	.Lagerhus	6
0350	12	45 05 715		US, CA	1	.Bearing housing	.Lagerhus	6
0360	13	45 05 723		36)	1	.Disc spring	.Brickfjäder	
0370	13	45 05 723		US, CA	1	.Disc spring	.Brickfjäder	
0380	14	89 50 701		36)	1	.Ball bearing	.Kullager	6
0390	14	89 50 701		US, CA	1	.Ball bearing	.Kullager	6
0400	15	46 31 719		42), -1997	1	.Spacer ring	.Distansring	
0410	15	46 31 719		CV, -1997	1	.Spacer ring	.Distansring	
0420	16	44 60 721			1	.Plastic bushing	.Plastbussning	


23. Ch. -R2003814
24. Ch. R2003815-
25. Ch. -R2003659
26. Ch. R2003660-
35. Ch. -R2008232
36. Ch. R2008233-
41. Ch. -R2040284, -S7001464
42. Ch. R2040285-, S7001465-
60. Ch. -T2027260, -T7005868
61. VIN T2027261-, T7005869-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

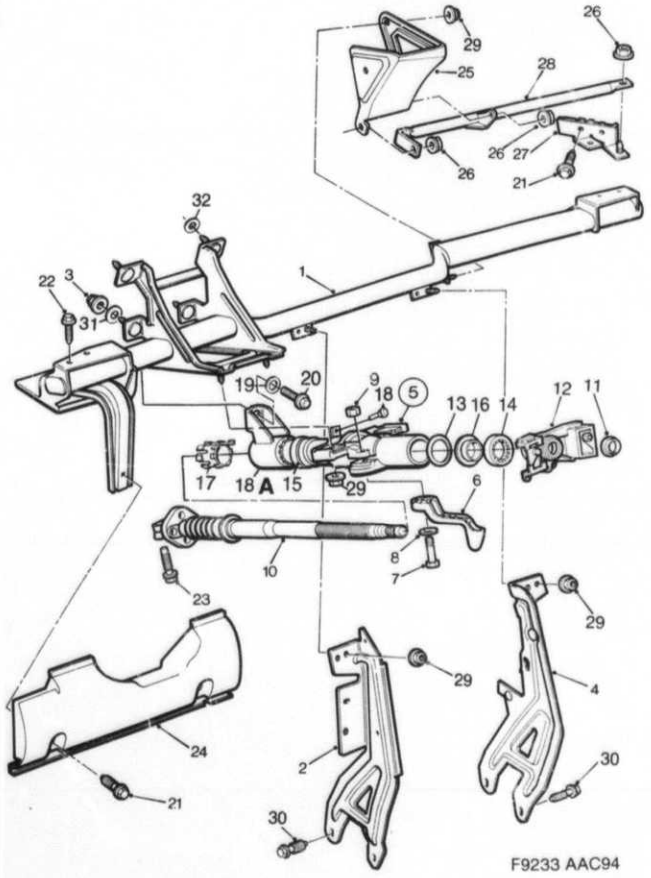

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	17	48 49 337		61)	1	,Bearing	,Lager	
0440	18	70 35 801		1998-	1	,Buffer	,Buffert	
0445	18A	* 49 02 292		80)	1	,Bracket	,Konsol	
0450	19	70 61 328		30)	1	Washer	Bricka	5
0460	20	43 46 466		29)	1	Hexagon screw	Sexkantsskruv	5
0470	20	79 82 986		30)	1	Screw	Skruv	5
0480	21	79 78 091			X	Screw	Skruv	5
0490	22	73 99 330			4	Screw	Skruv	5
0500	23	40 87 631			1	Hexagon screw	Sexkantsskruv	5
0510	24	*44 14 617*		27), LHD NLS – USE 4505 749	1	Knee protection	Knäskydd	6
0520	24	45 05 749		28,41), LHD, 3D, 5D	1	Knee protection	Knäskydd	6
0530	24	45 34 491		42), -1997, LHD, 3D, 5D	1	Knee protection	Knäskydd	6
0540	24	45 34 491		-1997, LHD, CV	1	Knee protection	Knäskydd	6
0545	24	48 42 985		1998-, LHD	1	Knee protection	Knäskydd	6
0550	25	44 14 694		AIRBAG 2	1	Knee protection	Knäskydd	6
0560	26	79 77 929		AIRBAG 2	3	Nut	Mutter	5
0570	27	44 74 367		AIRBAG 2	1	Bracket	Fäste	6
0580	28	44 14 702		AIRBAG 2	1	Tube	Rör	6
0590	29	79 71 922			X	Nut	Mutter	3
0600	30	79 72 466			X	Screw	Skruv	5
0610	31	43 45 724		-1996	2	Seal	Tätning	5
0620	32	43 45 344		RHD	1	Washer	Bricka	5


27. Ch. -R2003597
28. Ch. R2003598-
29. Ch. -R2003710
30. Ch. R2003711-
41. Ch. -R2040284, -S7001464
42. Ch. R2040285-, S7001465-
61. VIN T2027261-, T7005869-
80. Ch. W2005492-, W7002527-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

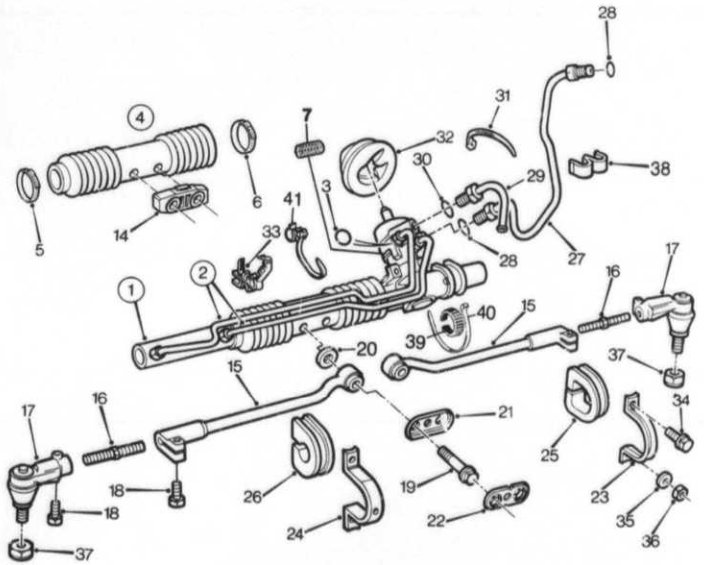

F8539 AAC94

Steering device

4 -F16

Power steering gear

Styrinrättning

Servostyrväxel

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*44 82 899*		22,37,39,53), LHD NLS – USE 4242806, 4242814, 4648697	1	Power steering gear	Servostyrväxel	
0020	1	45 44 623		38), LHD	1	Power steering gear	Servostyrväxel	
0030	1	45 48 697		54), LHD	1	Power steering gear	Servostyrväxel	
0040	1	44 82 907		22,57), RHD	1	Power steering gear	Servostyrväxel	
0050	1	46 48 705		54), RHD,AU,HK,SG,TH,CY	1	Power steering gear	Servostyrväxel	
0060	1	46 48 705		58), RHD	1	Power steering gear	Servostyrväxel	
0070	2	44 82 949		LHD, "ZF"	1	.Pipe set	.Rörsats	
0080	2	44 02 756		LHD, "SAGINAW"	1	.Pipe set	.Rörsats	
0090	2	44 82 956		RHD, "ZF"	1	.Pipe set	.Rörsats	
0100	2	44 02 764		RHD, "SAGINAW"	1	.Pipe set	.Rörsats	
0110	3	44 82 915		"ZF"	8	..O-ring	..O-ring	
0120	3	44 02 731		"SAGINAW"	8	..O-ring	..O-ring	
0130	4	44 82 964		"ZF"	1	.Bellows kit	.Bälgsats	
0140	4	44 02 772		"SAGINAW"	1	.Bellows kit	.Bälgsats	
0150	5	44 82 923		"ZF"	1	..Clamp	..Klämma	
0160	6	44 82 931		"ZF"	1	..Clamp	..Klämma	
0170	6	44 02 749		"SAGINAW"	2	..Clamp	..Klämma	
0180	7	49 05 535		66)	1	.Spring	.Fjäder	
0190	7	49 05 543		66)	1	.Spring	.Fjäder	
0200	7	49 05 550		66)	1	.Spring	.Fjäder	
0210	14	44 82 972		21)	1	Deflection limiter	Utslagsbegränsare	
0220	15	42 42 673		LH	1	Steering rod	Styrstag	
0230	15	42 42 681		RH	1	Steering rod	Styrstag	
0240	16	42 42 731			2	Adjustment screw	Justerskruv	
0250	17	42 42 749		LH	1	Ball joint	Kulled	
0260	17	42 42 756		RH	1	Ball joint	Kulled	
0270	18	43 45 252		-1996	4	Hexagon screw	Sexkantsskruv	
0280	18	46 85 103		1997-	4	Hexagon screw	Sexkantsskruv	
0290	19	42 42 715			2	Hexagon screw	Sexkantsskruv	
0300	20	42 42 699			2	Washer	Bricka	
0310	21	42 42 707			1	Spacer plate	Distanspiåt	
0320	22	42 42 723			1	Lock plate	Låsplåt	
0330	23	42 42 830			1	Brace	Bygel	
0340	24	42 42 822			1	Brace	Bygel	
0350	25	42 42 806			1	Bearing ring	Gummilager	
0360	26	42 47 326		"ZF"	1	Bearing ring	Gummilager	
0370	26	42 42 814		"SAGINAW"	1	Bearing ring	Gummilager	
0380	27	42 42 772		LHD	1	Delivery pipe	Tryckrör	
0390	27	45 43 161		47), RHD (4242855)	1	Delivery pipe	Tryckrör	
0400	27	45 47 087		48), RHD (4242855)	1	Delivery pipe	Tryckrör	
0410	28	41 04 048			2	.O-ring	.O-ring	3
0420	29	44 82 634		LHD	1	Return pipe	Returrör	
0430	29	42 42 764		LHD, ACS	1	Return pipe	Returrör	
0440	29	44 82 642		RHD	1	Return pipe	Returrör	

21. Only for cars with chassis numbers between R2000564-R2003665, on replacement of the steering gear. Endast för bilar mellan chassi nr R2000564-R2003665, vid byte av styrväxel.
22. In connection with steering gear replacement on cars between chassis number R2000564-R2003665, deflection limiter must be fitted. Vid byte av styrväxel på bilar mellan chassi nr R2000564-R2003665, måste utslagsbegränsare monteras.
37. B206I –R2026015 LHD; B234I, M –R2026015 LHD; B234I, A; B204L; B258I; 1995- B204I; 1995- B234I, M; "ZF"
38. B206I R2026016–1994 LHD; B234I, M R2026016–1994 LHD; "Saginaw"
39. B206I R2026016– LHD; B234I, M, R2026016– LHD for tropical market; ME, LA, AU, HK, SG, TH, CY; "ZF"
B206I R2026016– LHD; B234I, M, R2026016– LHD för tropisk marknad; ME, LA, AU, HK, SG, TH, CY; "ZF"
47. Ch. –S2044148, –S7024470
48. Ch. S2044149–, S7024471–
53. Ch. –S2044831, –T7000647, "Saginaw"
54. Ch. S2044832–, T7000648–; "Saginaw"
57. Ch. –T2009798, –T7001997; "ZF"
58. Ch. T2009799–, T7001998–; "Saginaw"
66. See TA 642-T91 Se TA 642-T91


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

4 -F18

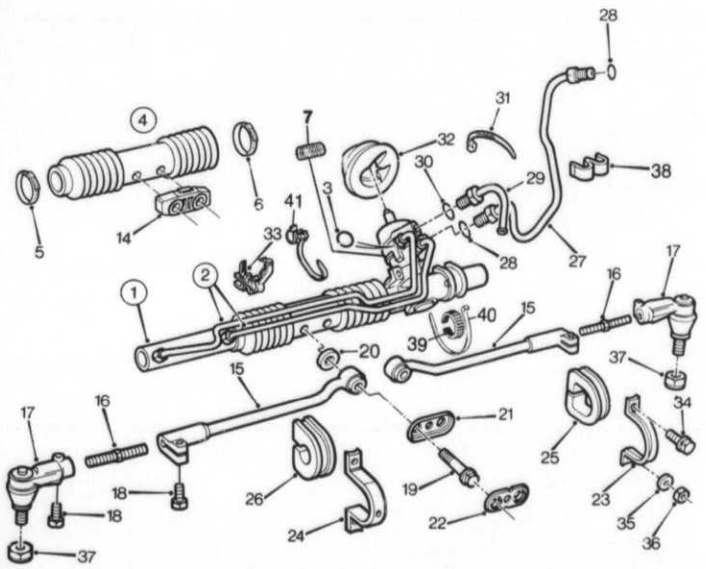

F8539 AAC94


0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	29	42 47 219		RHD, ACS	1	Return pipe	Returrör	
0460	30	41 04 048			1	O-ring	O-ring	3
0470	31	79 71 880			1	Tensioning band	Spännband	4
0480	32	42 47 292		LHD	1	Seal	Tätning	
0490	32	44 02 657		RHD	1	Seal	Tätning	
0500	33	44 82 659		RHD	2	Clip	Clips	
0510	33	42 42 863		RHD, ACS	1	Clip	Clips	
0520	34	79 78 216		1994	2	Hexagon screw	Sexkantsskruv	5
0525	34	40 87 631		1995-	2	Hexagon screw	Sexkantsskruv	5
0530	35	80 29 985		1994	2	Washer	Bricka	5
0540	36	80 74 288		1994	2	Nut	Mutter	5
0545	36	79 71 922		1995-	2	Nut	Mutter	3
0550	37	43 45 567			2	Lock nut	Låsmutter	
0560	38	42 42 780		ACS	X	Clip	Clips	5
0570	39	44 43 263		RHD	1	Wear protection	Skavskydd	6
0580	40	79 71 880		RHD	1	Tensioning band	Spännband	4
0590	41	75 93 221		RHD	1	Tensioning band	Spännband	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

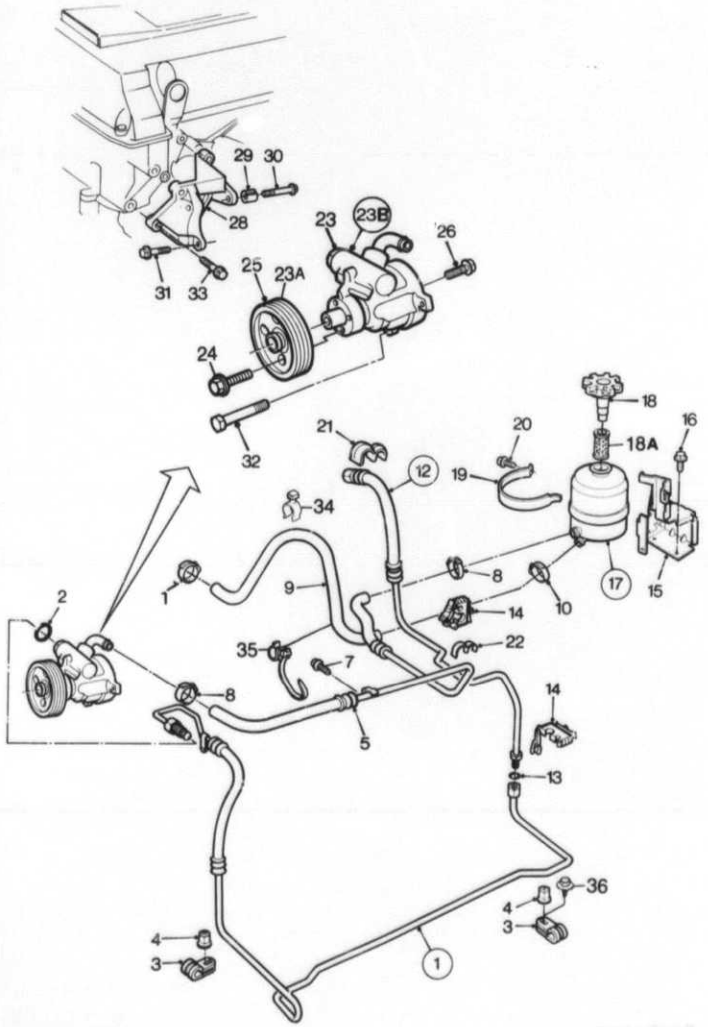

F7919 AAC94

Steering device

4-F20 *Hydraulic pump hoses*

Styrinrättning

Hydraulpump slangar

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 47 185		4-CYL	1	Pressure hose	Tryckslang	
0020	1	43 99 317		-1997, 6-CYL	1	Pressure hose	Tryckslang	
0030	2	41 04 048			1	.O-ring	.O-ring	3
0040	3	*79 69 371*		NLS – USE 8566135	2	Clamp	Klammer	
0050	4	40 87 128			X	Plastic nut	Plastmutter	5
0060	5	44 82 725		4-CYL (4402681)	1	Suction hose	Sugslang	
0070	5	44 82 782		4-CYL, ACS (4482782)	1	Suction hose	Sugslang	
0080	5	44 82 733		-1997, 6-CYL (4402699)	1	Suction hose	Sugslang	
0090	7	79 78 091			1	Screw	Skruv	5
0100	8	79 70 072			2	Hose clamp	Slangklamma	5
0110	9	44 82 741		LHD (4482618)	1	Hose	Slang	
0120	9	44 82 998		LHD, ACS	1	Hose	Slang	
0130	9	44 82 758		RHD (4482626)	1	Hose	Slang	
0140	9	44 82 774		RHD, ACS	1	Hose	Slang	
0150	10	79 70 056			1	Hose clamp	Slangklamma	5
0160	11	79 70 049			1	Hose clamp	Slangklamma	5
0170	12	44 82 832			1	Pressure hose	Tryckslang	
0180	13	41 04 014			1	.O-ring	.O-ring	3
0190	14	42 46 567			2	Bracket	Fäste	
0200	15	42 42 889			1	Bracket	Fäste	
0210	15			See page 4-011, 4-A12 ACS		Bracket	Fäste	
0220								
0230	16	79 78 679		1994	4	Hexagon screw	Sexkantsskruv	
0240	16	79 78 661		1995-	4	Hexagon screw	Sexkantsskruv	5
0250	16			See page 4-011, 4-A12 ACS		Screw	Skruv	
0260								
0270	17	44 82 600			1	Reservoir	Behållare	
0280	17	*44 02 103*		-1995, ACS NLS – USE 4646196	1	Reservoir	Behållare	
0285	17	46 46 196		1996-, ACS	1	Reservoir	Behållare	
0290	18	44 02 798			1	.Cover	.Lock	
0300	18	44 02 616		ACS	1	.Cover	.Lock	
0310	18A	41 93 199		ACS	1	.Filter cartridge	.Filterpatron	3
0320	19	42 42 897			1	Brace	Bygel	
0330	20	79 78 117			1	Screw	Skruv	5
0340	21	42 42 962			1	Clip	Clips	
0350	22	43 73 668			1	Clip	Clips	
0355	23	*44 00 370*		55), 4-CYL NLS – USE 4647491	1	Hydraulic pump	Hydraulpump	
0360	23	*46 47 376*		56,75), 4-CYL NLS – USE 4647491	1	Hydraulic pump	Hydraulpump	
0365	23A	43 56 085		75), 4-CYL	1	Pulley	Remskiva	
0368	23B	46 47 491		76), 4-CYL	1	Hydraulic pump	Hydraulpump	
0370	23B	*44 00 362*		55), 6-CYL (4400354) NLS - USE 4647392	1	Hydraulic pump	Hydraulpump	
0375	23B	46 47 392		56), -1997, 6-CYL	1	Hydraulic pump	Hydraulpump	
0380	24	87 41 449		-1997, 6-CYL	3	.Screw	.Skruv	5
0390	25	43 56 085		76), 4-CYL	1	.Pulley	.Remskiva	
0400	25	41 65 171		-1997, 6-CYL (4165197)	1	.Pulley	.Remskiva	
0405	26	79 78 190		4-CYL	1	Screw	Skruv	5
0410	28	43 56 077		4-CYL	1	Bracket	Konsol	3
0420	28			-1997,6-CYL		Bracket	Konsol	
0430				See page 2-009, 1-C10				
0440	29	75 93 072		4-CYL	1	Bushing	Bussning	5
0450	30	*79 82 978*		4-CYL NLS – USE 7982960	1	Hexagon screw	Sexkantsskruv	5
0460	31	79 78 190		4-CYL	1	Screw	Skruv	5
0470	32	79 82 523		-1997,6-CYL	2	Hexagon screw	Sexkantsskruv	5
0480	33	79 78 216		4-CYL	3	Hexagon screw	Sexkantsskruv	5
0490	34	44 02 095		RHD	1	Double clamp	Dubbelklamma	5


55. Ch. -T2008697, -T7001996
56. Ch. T2008698-, T7001997-
75. Ch. -V2008697, -V7003692
76. Ch. V2008698-, V7003693-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

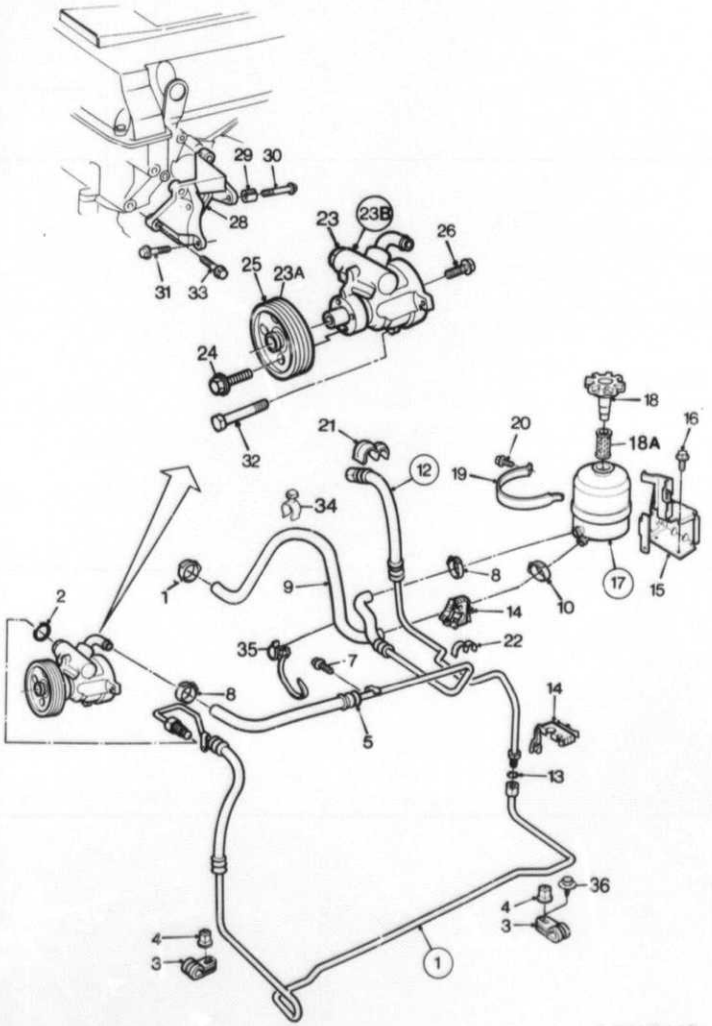

F7919 AAC94

Steering device

4-F22 *Hydraulic pump hoses*

Styrinrättning

Hydraulpump slangar

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	35	75 93 221		-1996, RHD	1	Tensioning band	Spännband	5
0505	35	79 71 880		1997-, RHD	1	Tensioning band	Spännband	4
0510	36	79 78 661		44)	1	Hexagon screw	Sexkantsskruv	5
0520		44 02 780		55)	1	Sealing kit	Tätningssats	
0530				See page 6-023, 4-F24		hydraulic pump	hydraulpump	
0540		46 49 745		56)	1	Sealing kit	Tätningssats	
0550				See page 6-023, 4-F24		hydraulic pump	hydraulpump	


44. Ch. R2042736-
55. Ch. -T2008697, -T7001996
56. Ch. T2008698-, T7001997-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

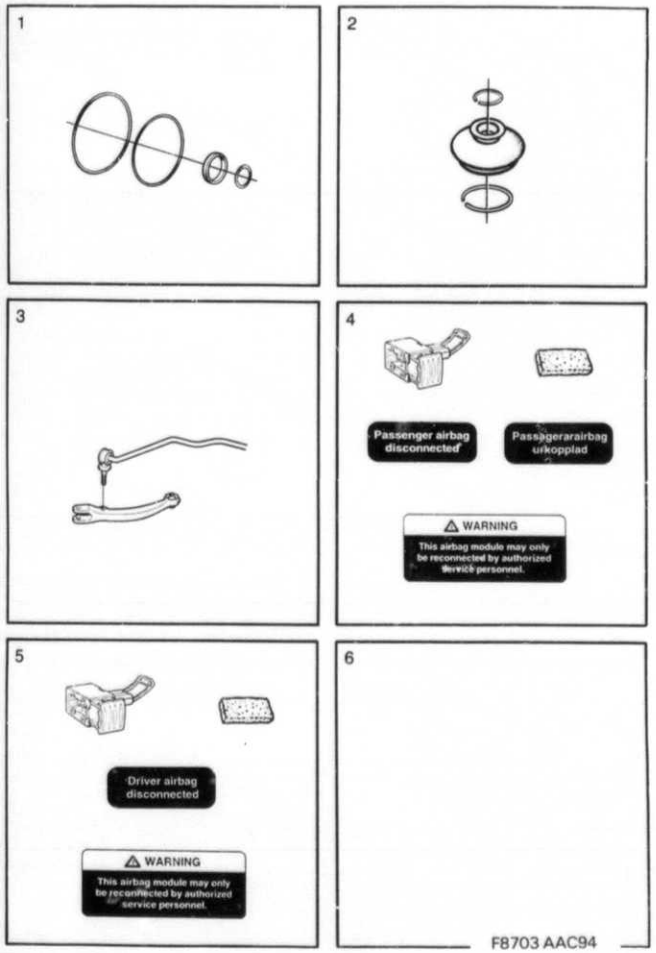

Complete sets

4 -F24

Fore carriage
Steering device

Satser

Framvagn
Styrinrättning

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 02 780		55)	X	Sealing kit hydraulic pump	Tätningssats hydraulpump	
0020								
0030		*44 02 863*		1) NLS	1	.Seal	.Tätning	
0040		*44 02 871*		1) NLS	1	.O-ring	.O-ring	
0050		*44 02 889*		1) NLS	1	.O-ring	.O-ring	
0060		*44 02 897*		1) NLS	1	.O-ring	.O-ring	
0070								
0080	1	46 49 745		56)	X	Sealing kit hydraulic pump	Tätningssats hydraulpump	
0090								
0100				1)	1	.Seal	.Tätning	
0110				1)	1	.O-ring	.O-ring	
0120				1)	1	.O-ring	.O-ring	
0130				1)	1	.O-ring	.O-ring	
0140				1)	1	.O-ring	.O-ring	
0150								
0160	2	89 93 867			X	Bellows kit	Bälgsats	
0170		44 02 202		1)	1	.Ring	.Ring	4
0180		44 02 210		1)	1	.Ring	.Ring	4
0190		44 02 228		1)	1	.Bellows	.Bälg	
0200								
0210	3	89 93 958			X	Kit	Sats	
0220		*44 83 798*		LH NLS – USE 4544995	1	.Stanchion	.Stötta	5
0230		*44 83 806*		RH NLS – USE 4545000	1	.Stanchion	.Stötta	5
0240		44 83 814			1	.Anti-roll bar	.Krängningshämmare	6
0250								
0260								
0270								
0280	4	50 10 244		73)	X	Kit disconnected passenger airbag	Sats urkoppling passagerar-airbag	
0290								
0300								
0310		49 01 104		1)	1	.Tape	.Tejp	5
0320		50 10 053			1	.Label	.Etikett	
0330		50 10 079			1	.Label	.Etikett	
0340		50 10 087			1	.Label	.Etikett	
0350		50 10 228		1)	1	.Resistor	.Motstånd	6
0360		79 71 880			1	.Tensioning band	.Spännband	4
0370								
0380	5	50 10 236		74)	X	Service kit disconnected driver airbag	Servicesats urkoppling förarairbag	5
0390								
0400								
0410		45 09 576			1	.Spacer	.Mellanlägg	
0420		49 01 104		1)	1	.Tape	.Tejp	5
0430		50 10 061			1	.Label	.Etikett	
0440		50 10 087			1	.Label	.Etikett	
0450		50 10 228			1	.Resistor	.Motstånd	6

1. Not as separate spare part. Ej som separat reservdel.
55. Ch. -T2008697, -T7001996
56. Ch. T2008698-, T7001997-
73. See SI 850-1732 Se SI 850-1732
74. See SI 850-1744 Se SI 850-1744

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-F06
Steering device	4-F08
Complete sets	4-F24

4 -G02



Suspension, Wheels
Fjädringssystem, Hjul
Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0125

TABLE OF CONTENTS

0126 **Front suspension**
0128 Front suspension, -1996 ..... 7 : 5 4-G06
0130 Front suspension, 1997- ..... 7 : 11 4-G12
0150 **Wheel** ..... 7 : 13 4-G14
0152 **Rear suspension**
0154 Rear suspension, -1996 ..... 7 : 17 4-G18
0160 Rear suspension, 1997- ..... 7 : 21 4-G22
0162 **Rear axle**
0164 Rear axle, -1996 ..... 7 : 23 4-G24
Rear axle, 1997- ..... 7 : 25 4-H02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4 -G03

0042
0020
0040
0060
0240
0260
0270
0275
0285
0290
0310
0312
0314
0320
0322
0324
0340
0360
0380
0700
0720
0740
0761
0763
0765
0770
0790
0792
0794
0800
0802
0804

INNEHÅLLSFÖRTECKNING

Främre fjädring		
Främre fjädring, -1996	7 : 5	4-G06
Främre fjädring, 1997-	7 : 11	4-G12
Hjul	7 : 13	4-G14
Bakre fjädring		
Bakre fjädring, -1996	7 : 17	4-G18
Bakre fjädring, 1997-	7 : 21	4-G22
Bakaxel		
Bakaxel, -1996	7 : 23	4-G24
Bakaxel, 1997-	7 : 25	4-H02

SUMARIO


Suspension Del		
Suspension Del, -1996	7 : 5	4-G06
Suspension Del, 1997-	7 : 11	4-G12
Ruedas	7 : 13	4-G14
Suspension Tras		
Suspension Tras, -1996	7 : 17	4-G18
Suspension Tras, 1997-	7 : 21	4-G22
Eje Tras		
Eje Tras, -1996	7 : 23	4-G24
Eje Tras, 1997-	7 : 25	4-H02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

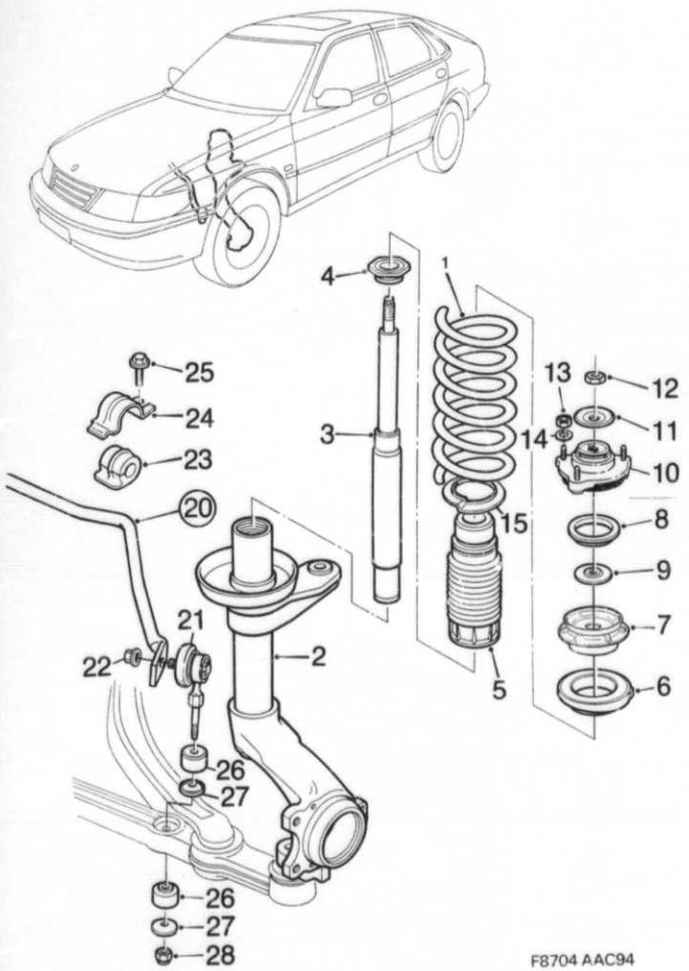

F8704 AAC94

4 –G06 Front suspension -1996 / Främre fjädring -1996

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 83 160		21), B206I, B204I, M	2	Spring	Fjäder	5
0020					2	red/red	röd/röd	
0030								
0040	1	44 83 178		21), B206I, B204I, M +	2	Spring	Fjäder	5
0050				AC, EAS, AS3, CHSEAT,	2	yellow/red	gul/röd	
0060				SR/AIRBAG 2				
0070	1	44 83 178		22), B206I, B204I, A	2	Spring	Fjäder	5
0080	1	44 83 178		22), B204L, M	2	Spring	Fjäder	5
0090	1	44 83 178		21), B234I, M	2	Spring	Fjäder	5
0100								
0110	1	44 83 186		22), B206I, B204I, A +	2	Spring	Fjäder	5
0120				AC, AIRBAG 2, EAS,		red/white	röd/vit	
0130				CHSEAT, AS3 + SR				
0140	1	44 83 186		22), B204L, M + AC,	2	Spring	Fjäder	5
0150				SR, EAS/CHSEAT				
0160	1	44 83 186		22), B204L, ACS	2	Spring	Fjäder	5
0170	1	44 83 186		24), B234I, A	2	Spring	Fjäder	5
0180	1	44 83 186		24), B258I, M	2	Spring	Fjäder	5
0190								
0200	1	44 83 194		24), B234I, A + AC, SR,	2	Spring	Fjäder	5
0210				EAS, CHSEAT, AS3,		white/white	vit/vit	
0220				AIRBAG 2				
0230	1	44 83 194		B258I, A	2	Spring	Fjäder	5
0240								
0250	1	44 83 202		B258I, A + AC, SR, EAS2	2	Spring	Fjäder	5
0260				AS3, CHSEAT, AIRBAG 2		white/orange	vit/orange	
0270								
0280	1	44 83 210		B258I, A, US, + AC, SR,	2	Spring	Fjäder	5
0290				EAS2, AS3, AIRBAG 2		white/blue	vit/blå	
0300								
0310	2			See page 6-005, 4-F06		Steering knuckle housing	Styrspindelhus	
0320	3	42 41 816		39), B206I, B204I	2	Spring strut insert	Fjäderbensinsats	6
0330						red	röd	
0335	3	42 41 816		39), B204L	2	Spring strut insert	Fjäderbensinsats	6
0360	3	42 41 816		39), B234I	2	Spring strut insert	Fjäderbensinsats	6
0370	3	42 41 816		39), B258I, M	2	Spring strut insert	Fjäderbensinsats	6
0380								
0390		46 46 477		40), B206I, B204I		Spring strut insert	Fjäderbensinsats	6
0400				B206I, B204I	2	red	röd	
0420	3	46 46 477		40), B204L	2	Spring strut insert	Fjäderbensinsats	6
0440	3	46 46 477		40), B234I	2	Spring strut insert	Fjäderbensinsats	6
0450	3	46 46 477		40), B258I, M	2	Spring strut insert	Fjäderbensinsats	6
0460								
0490	3	*42 41 931*		39),B206I,B204I,A+AC,SR,	2	Spring strut insert	Fjäderbensinsats	6
0500				EAS, AS3,CHSEAT,AIRBAG2		yellow	gul	
0500				NLS – USE 4646493				
0510	3	*42 41 931*		39), B204L +AC, SR, EAS,	2	Spring strut insert	Fjäderbensinsats	6
0520				AS3,CHSEAT,AIR-BAG2 NLS				
0520				- USE 4646493				
0550	3	*42 41 931*		39),B234I + AC, SR, EAS,	2	Spring strut insert	Fjäderbensinsats	6
0560				AS3,CHSEAT,AIR-BAG2 NLS				
0560				- USE 4646493				
0570	3	*42 41 931*		39),B258I,M + AC,SR,EAS,	2	Spring strut insert	Fjäderbensinsats	6
0580				AS3,CHSEAT,AIR-BAG2 NLS				
0580				- USE 4646493				

21. If the car has AC, EAS, AS3, CHseat, SR, air-bag2 chose spring 4483186 — Om bilen har AC, EAS, AS3, CHseat, SR, air-bag2 välj fjäder 4483186
22. If the car has AC, SR, EAS, AS3, CHseat, air-bag2 chose spring 4483194 — Om bilen har AC, SR, EAS, AS3, CHseat, air-bag2 välj fjäder 4483194
24. If the car has AC, SR, EAS, AS3, CHseat, air-bag2 chose spring 4483202 — Om bilen har AC, SR, EAS, AS3, CHseat, air-bag2 välj fjäder 4483202
39. Ch. –S2039247, –S7022051
40. Ch. S2039248–, S7022052–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4 -G08 Front suspension -1996 / Främre fjädring -1996

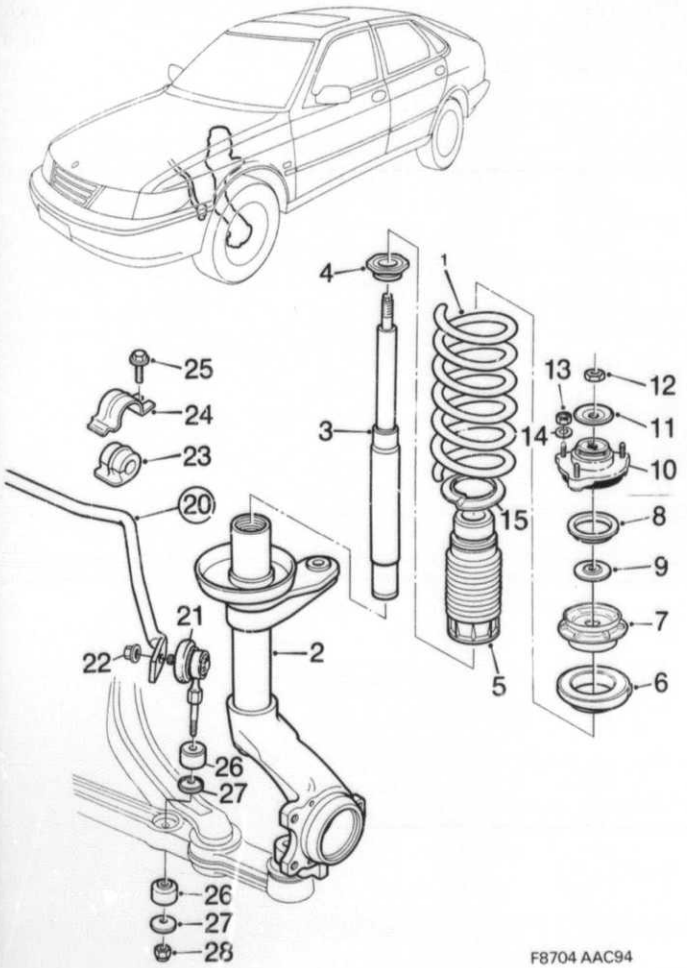

F8704 AAC94

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	3	*42 41 931*		39), B258I, A NLS – USE 4646493	2	Spring strut insert	Fjäderbensinsats	6
0590								
0600								
0601	3	46 46 493		40),B206I,B204I,A+AC,SR, EAS, AS3,CHSEAT,AIRBAG2	2	Spring strut insert yellow	Fjäderbensinsats gul	6
0603	3	46 46 493		40), B204L +AC, SR, EAS, AS3,CHSEAT,AIR-BAG2	2	Spring strut insert	Fjäderbensinsats	6
0605	3	46 46 493		40),B234I + AC, SR, EAS, AS3,CHSEAT,AIR-BAG2	2	Spring strut insert	Fjäderbensinsats	6
0607	3	46 46 493		40),B258I,M + AC,SR,EAS, AS3,CHSEAT,AIR-BAG2	2	Spring strut insert	Fjäderbensinsats	6
0609	3	46 46 493		40), B258I, A	2	Spring strut insert	Fjäderbensinsats	6
0611								
0615	3	*42 44 604*		28,39), B204L, 3D, 5D NLS – USE 4646519	2	Spring strut insert blue	Fjäderbensinsats blå	6
0620	3	46 46 519		28,40), B204L, 3D, 5D	2	Spring strut insert blue	Fjäderbensinsats blå	6
0630								
0640								
0650	3	*45 43 005*		39), CV NLS – USE 4646535	2	Spring strut insert white	Fjäderbensinsats vit	6
0660	3	46 46 535		40), CV	2	Spring strut insert white	Fjäderbensinsats vit	6
0670								
0680								
0690	3	*42 44 604*		28,39), CV NLS – USE 4646519	2	Spring strut insert blue	Fjäderbensinsats blå	6
0700	3	46 46 519		28,40,45), CV	2	Spring strut insert blue	Fjäderbensinsats blå	6
0710								
0720								
0730	3	46 46 493		28,46), CV	2	Spring strut insert yellow	Fjäderbensinsats gul	6
0750	4	42 43 390			2	Sleeve	Hylsa	5
0760	5	44 83 897			2	Bump stop	Genomslagsstopp	3
0770	6	42 45 734			2	Support	Stöd	6
0780	7	*44 02 491*		37) NLS – USE 4544979	2	Spring support	Fjäderstöd	6
0790	7	45 44 979		38)	2	Spring support	Fjäderstöd	6
0800	8	42 46 377			2	Thrust bearing	Axiallager	6
0810	9	*44 83 616*		37) NLS – USE 4907663	2	Washer	Bricka	5
0820	9	49 07 663		38)	2	Washer	Bricka	
0830	10	*44 83 632*		37) NLS – USE 4544276	2	Support bearing	Stödlager	
0840	10	45 44 276		38)	2	Support bearing	Stödlager	
0850	11	*42 47 557*		37) NLS – USE 4646634	2	Washer	Bricka	5
0860	11	46 46 634		38)	2	Washer	Bricka	
0870	12	43 46 862		(4345484)	2	Hexagon nut	Sexkantsmutter	5
0880	13	79 79 602			6	Nut	Mutter	5
0890	14	79 16 497			2	Washer	Bricka	5
0895	15	* 46 89 378			2	Spacer	Mellanlägg	
0900	20	44 83 814		29), 3D, 5D	1	Anti-roll bar	Krängningshämmare	6
0910	20	*42 48 415*		30,31), 3D, 5D NLS – USE 4483814	1	Anti-roll bar	Krängningshämmare	6
0910								
0920	20	44 83 814		32,35), 3D, 5D	1	Anti-roll bar	Krängningshämmare	6

28. With lowered chassis Med sänkt chassi
29. Ch. –R2000563
30. Ch. R2000564–
31. Ch. –R2003665
32. Ch. R2003666–
35. Ch. –S2012271, –S7014772
37. Ch. –S2038207, –S7021921
38. Ch. S2038208–, S7021922–
39. Ch. –S2039247, –S7022051
40. Ch. S2039248–, S7022052–
45. Ch. –T7000156
46. Ch. T7000157–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G10 Front suspension -1996 / Främre fjädring -1996

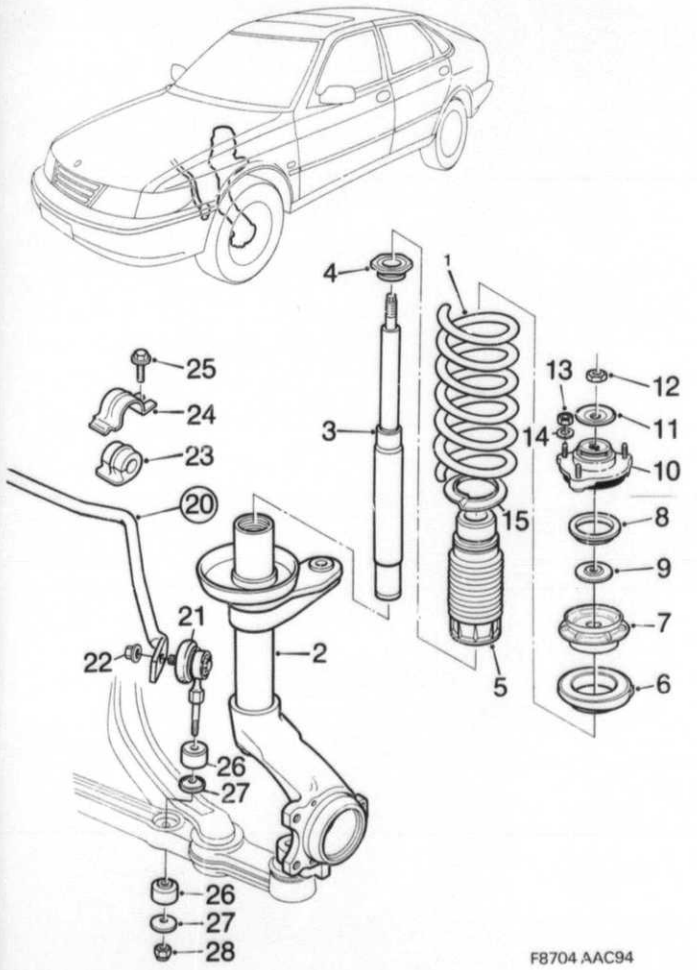

F8704 AAC94

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0930	20	45 43 492		36,51), 3D, 5D	1	Anti-roll bar	Krängningshämmare	6
0940	20	45 43 500		41,51), 3D, 5D	1	Anti-roll bar	Krängningshämmare	6
0950	20	44 83 822		28,35), B204L, 3D, 5D	1	Anti-roll bar	Krängningshämmare	6
0960	20	45 43 500		28,36,51), B204L, 3D, 5D	1	Anti-roll bar	Krängningshämmare	6
0970	20	44 83 822		35), CV	1	Anti-roll bar	Krängningshämmare	6
0980	20	45 43 500		36,45,51), CV	1	Anti-roll bar	Krängningshämmare	6
0990	20	45 43 492		46,51), CV	1	Anti-roll bar	Krängningshämmare	6
1000	20	45 43 500		46,28,51), CV	1	Anti-roll bar	Krängningshämmare	6
1010	21	44 00 040		35)	2	.Link	.Länk	6
1020	21	45 44 599		36,51)	2	.Link	.Länk	6
1030	22	43 47 357		36,51)	2	.Lock nut	.Låsmutter	
1040	23	43 98 269		47)	2	Bushing	Bussning	3
1050	23	45 43 518		48)	2	Bushing	Bussning	3
1060	23	45 43 526		49)	2	Bushing	Bussning	3
1070	23	43 98 251		50)	2	Bushing	Bussning	3
1080	24	42 46 104		47)	2	Cap	Överfall	5
1090	24	42 49 793		48,50)	2	Cap	Överfall	5
1100	24	45 43 542		49)	2	Cap	Överfall	5
1110	25	79 76 897		39)	2	Screw	Skruv	5
1120	25	79 85 773		40)	2	Screw	Skruv	5
1130	26	42 46 112			4	Rubber block	Gummiblock	4
1140	27	40 87 326		35)	2	Washer	Bricka	5
1150	27	40 87 326		36,51)	4	Washer	Bricka	5
1160	28	80 74 288			2	Nut	Mutter	5

28. With lowered chassis Med sänkt chassi
35. Ch. -S2012271, -S7014772
36. Ch. S2012272-, S7014773-
39. Ch. -S2039247, -S7022051
40. Ch. S2039248-, S7022052-
41. Ch. S2039248-, for cars with spring strut insert 4646493 Ch. S2039248-, för bilar med fjäderbensinsats 4646493
45. Ch. -T7000156
46. Ch. T7000157-
47. For anti-roll bar 4483814, 4248415. För krängningshämmare 4483814, 4248415.
48. For anti-roll bar 4543492. För krängningshämmare 4543492.
49. For anti-roll bar 4543500. För krängningshämmare 4543500.
50. For anti-roll bar 4483822. För krängningshämmare 4483822.
51. Also applies to modified cars with a lower chassis number. Gäller också för modifierade bilar med lägre chassinummer.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G12 Front suspension 1997- / Främre fjädring 1997-

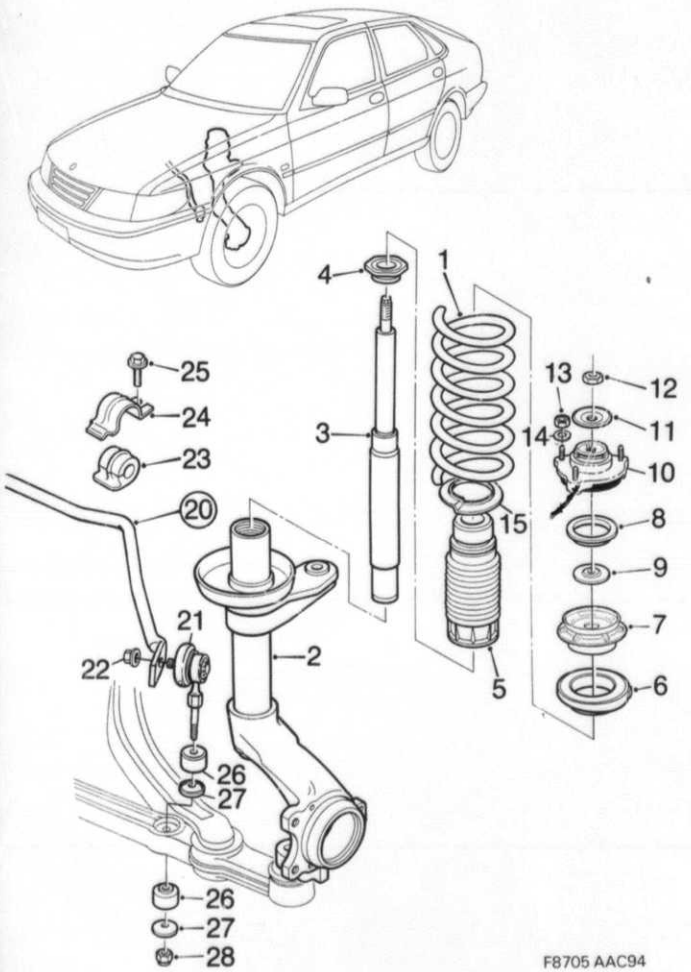

F8705 AAC94

0115	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 83 160		CODE=AG	2	Spring	Fjäder	5
0020						red/red	röd/röd	
0040	1	44 83 178		CODE=AH	2	Spring	Fjäder	5
0050						yellow/red	gul/röd	
0110	1	44 83 186		CODE=AJ	2	Spring	Fjäder	5
0120						red/white	röd/vit	
0200	1	44 83 194		CODE=AK	2	Spring	Fjäder	5
0210						white/white	vit/vit	
0250	1	44 83 202		CODE=AL	2	Spring	Fjäder	5
0260						white/orange	vit/orange	
0280	1	44 83 210		CODE=AM	2	Spring	Fjäder	5
0290						white/blue	vit/blå	
0300								
0310	2			See page 6-005, 4-F06		Steering knuckle housing	Styrspindelhus	
0330	3	46 46 477		CODE=D	2	Spring strut insert	Fjäderbensinsats	6
0340						red	röd	
0420	3	46 46 493		CODE=E	2	Spring strut insert	Fjäderbensinsats	6
0430						yellow	gul	
0560	3	46 46 519		CODE=F	2	Spring strut insert	Fjäderbensinsats	6
0570						blue	blå	
0600	3	46 46 535		CODE=G	2	Spring strut insert	Fjäderbensinsats	6
0610						white	vit	
0690	4	42 43 390			2	Sleeve	Hylsa	5
0700	5	44 83 897			2	Bump stop	Genomslagsstopp	3
0710	6	42 45 734			2	Support	Stöd	6
0730	7	45 44 979			2	Spring support	Fjäderstöd	6
0740	8	42 46 377			2	Thrust bearing	Axiallager	6
0760	9	49 07 663			2	Washer	Bricka	
0780	10	45 44 276			2	Support bearing	Stödlager	
0800	11	46 46 634			2	Washer	Bricka	
0810	12	43 46 862			2	Hexagon nut	Sexkantsmutter	5
0820	13	79 79 602			6	Nut	Mutter	5
0830	14	79 16 497			2	Washer	Bricka	5
0840	15	* 46 89 378			2	Spacer	Mellanlägg	
0870	20	45 43 492		CODE=A	1	Anti-roll bar	Krängningshämmare	6
0880	20	45 43 500		CODE=B	1	Anti-roll bar	Krängningshämmare	6
0960	21	45 44 599			2	.Link	.Länk	6
0970	22	43 47 357			2	.Lock nut	.Låsmutter	
0990	23	45 43 518		48)	2	Bushing	Bussning	3
1000	23	45 43 526		49)	2	Bushing	Bussning	3
1060	24	42 49 793		48)	2	Cap	Överfall	5
1070	24	45 43 542		49)	2	Cap	Överfall	5
1130	25	79 85 773			2	Screw	Skruv	5
1140	26	42 46 112			4	Rubber block	Gummiblock	4
1160	27	40 87 326			4	Washer	Bricka	5
1170	28	80 74 288			2	Nut	Mutter	5

48. For anti-roll bar 4543492. För krängningshämmare 4543492.
49. For anti-roll bar 4543500. För krängningshämmare 4543500.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G14 *Wheel* *Hjul*

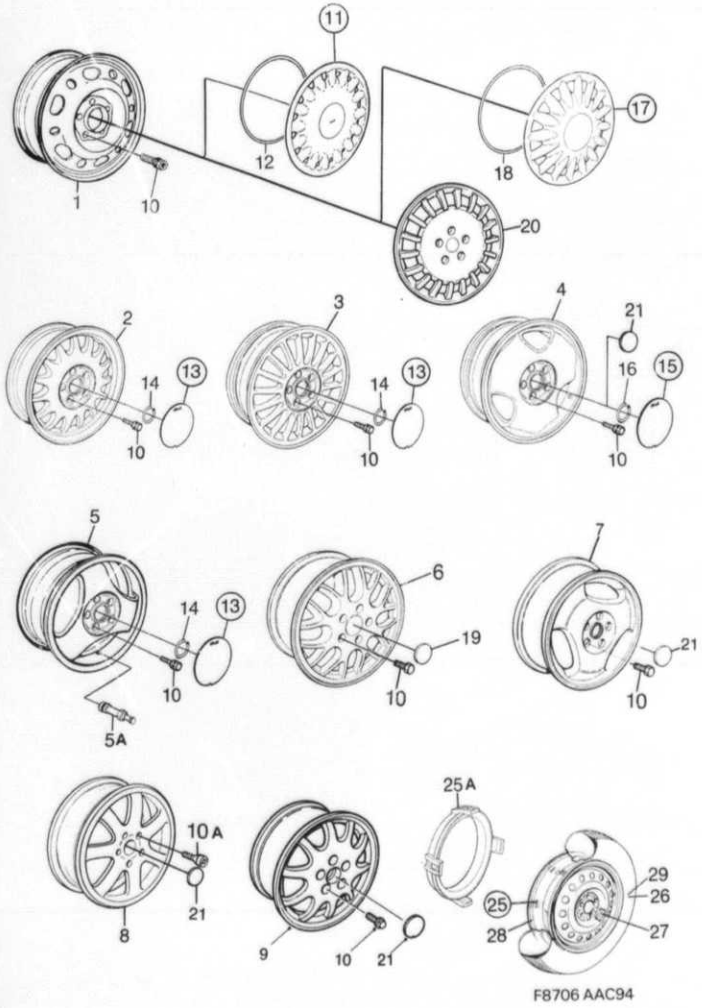

F8706 AAC94

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 67 163		-1996, 6 X 15"	4	Rim	Fälg	4
0020						steel-wheel,black	stålhjul,svart	
0030	1	46 88 156		1997-, 6 X 15"	4	Rim	Fälg	4
0040						steel-wheel,black	stålhjul,svart	
0050	2	42 40 859		-1996, 6 X 15", 40/400 100 673	4	Rim	Fälg	4
0060								
0070	2	46 48 036		1997-, 6,5 X 15", 40/400 106 498	4	Rim	Fälg	
0080								
0090	3	42 41 642		-1996, 6 X 15", 40/400 100 681	4	Rim	Fälg	4
0100								
0110	4	42 41 667		-1996, 6,5 X 16", 40/400100699	4	Rim	Fälg	4
0120								
0130	4	*46 48 028*		1997-, 6,5 X 16", 40/400106530	4	Rim	Fälg	
0140								
0150	5	44 67 254		6,5 X 16", 40/400100723	4	Rim	Fälg	4
0160	5A	86 82 551		40/400 102 505	1	.Valve	.Ventil	
0170	6	47 78 296		1996-, 6,5 X 15" 40/400106456	4	Rim	Fälg	
0180								
0190	7	45 66 048		1997-,54), 6,5 X 15", 40/400 106 514	4	Rim	Fälg	
0200								
0210	7	49 05 626		55), 6,5 X 15", 40/400 107 934	4	Rim	Fälg	
0220								
0230	8	47 78 304		1997-, 6,5 X 16", 40/400 106 472	4	Rim	Fälg	
0240								
0242	9	49 09 156		1998-, 6,5 X 15", 40/400 109 591	4	Rim	Fälg	
0244								
0250	10	43 98 277		-1997	20	Wheel screw	Hjulskruv	2
0255	10	* 49 08 067		1998-	20	Wheel screw	Hjulskruv	2
0260	10A	86 82 437		1997-, 40/400102166	1	Wheel screw set lockable	Hjulskruvsats låsbara	
0270								
0280				1)	4	Wheel screw	Hjulskruv	
0290		86 82 411		56), 40/400121040	1	.Key	.Nyckel	
0300	11	*42 43 523*		33) NLS – USE 4545729	4	Wheel cap	Hjulkapsel	2
0310	11	45 45 729		34), -1995	4	Wheel cap	Hjulkapsel	2
0320	12	41 93 587			1	.Clamping ring	.Spännring	2
0330	13	44 25 476		40/400 100 707	4	Wheel cap	Hjulkapsel	2
0340	14	89 87 802			1	.Spring ring	.Fjäderring	2
0350	15	41 99 980		-1996, 40/400 100 715	4	Wheel cap	Hjulkapsel	2
0360	16	89 87 802			1	.Spring ring	.Fjäderring	2
0370	17	45 43 567		1996	4	Wheel cap	Hjulkapsel	2
0380	18	41 93 587			1	.Clamping ring	.Spännring	2
0390	19	46 48 424		1996-, 40/400106043	4	Wheel cap	Hjulkapsel	2
0400	19	45 66 311		1996-, 40/400106522 "GRIFFIN"	4	Hub cap	Navkapsel	
0410								
0420	20	45 66 030		1997-, 40/400106548	4	Wheel cap	Hjulkapsel	
0430	21	45 66 311		1997-, 40/400106522	4	Hub cap	Navkapsel	
0440	25	*44 67 452*		1994 NLS – USE 4646915	1	Wheel	Hjul	6
0450	25	*46 45 479*		1995-,42) NLS – USE 4646915	1	Wheel	Hjul	6
0460	25	46 46 915		43), -1996	1	Wheel	Hjul	6
0470	25	48 37 068		1997-	1	Wheel	Hjul	6
0480	25A			1995-	1	.Spacer ring	.Distansring	
0490				See page 8B-093, 5-K22				
0500	26			1)	1	.Tyre	.Däck	

1. Not as separate spare part. Ej som separat reservdel.
33. Ch. -R2034238
34. Ch. R2034239-
42. Ch. -S2034618, -S7020549
43. Ch. S2034619-, S7020550-
54. Ch. -V2021661, -V7004183
55. Ch. V2021662-, V7004184-
56. When ordering, the key number on the card must be stated. Vid beställning måste nyckelnumret på kodkortet anges.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G16 *Wheel* *Hjul*

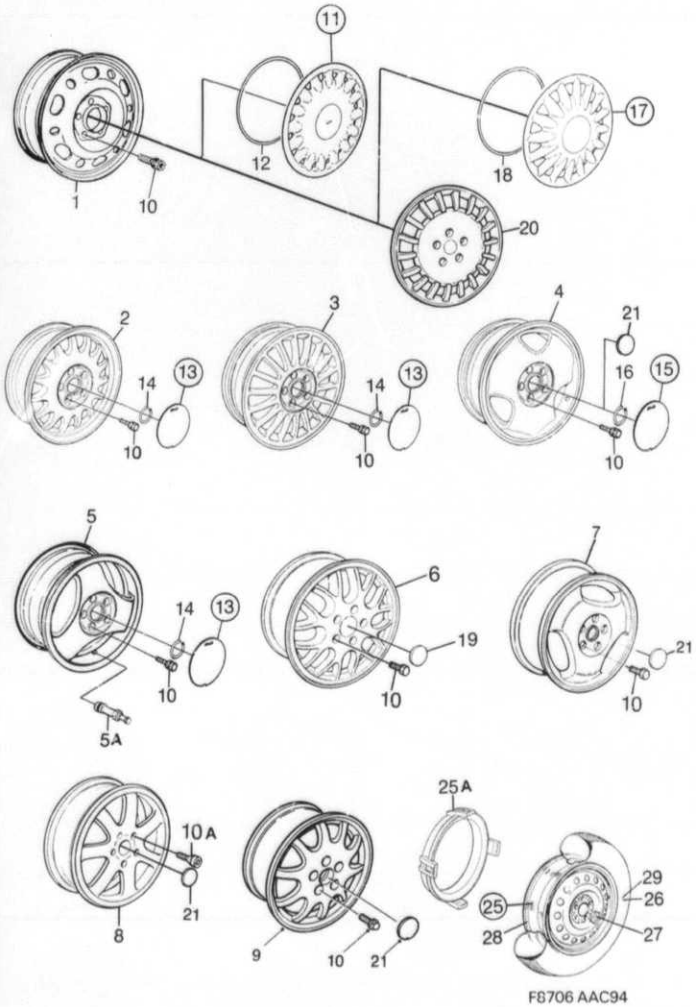

F8706 AAC94

0125	Pos	Part No/Art nr	K S	Note//Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	27	40 02 358			1	₁Label	₁Etikett	5
0520	28	44 67 163		-1996	1	Rim	Fälg	4
0530						big spare wheel	stort reservhjul	
0540	28	46 88 156		1997-	1	Rim	Fälg	4
0550						big spare wheel	stort reservhjul	
0560	29	*42 49 744*		1), 185/65 R15 NLS	1	Tyre	Däck	6
0570						big spare wheel	stort reservhjul	

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G18 Rear suspension -1996

Bakre fjädring -1996

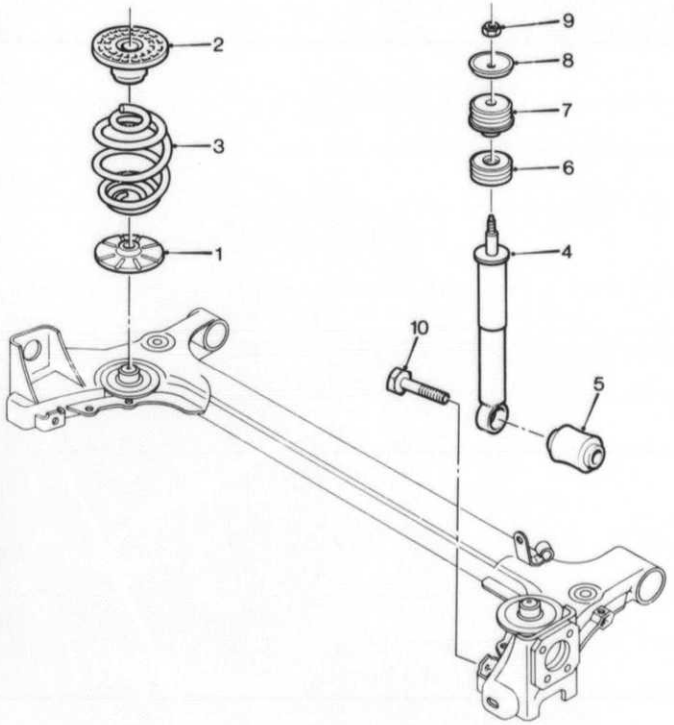

F4894 AAC94

0175	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	42 45 122			2	Spring support	Fjäderstöd	3
0020	2	42 44 505			2	Bump stop	Genomslagsstopp	5
0030	3	44 83 350		23), -1995, B206I, B204I	2	Spring	Fjäder	5
0040						blue	blå	
0045	3	44 83 350		23), -1995, B204L	2	Spring	Fjäder	5
0050	3	44 83 350		23), -1995, B234I	2	Spring	Fjäder	5
0060	3	44 83 350		23), -1995, B258I	2	Spring	Fjäder	5
0070								
0080	3	44 83 368		-1995, B258I + SR, EAS, AS3, CHSEAT, AIRBAG2	2	Spring	Fjäder	5
0090						yellow	gul	
0100								
0110	3	46 47 509		44), 1996-, B206I, B204I	2	Spring	Fjäder	5
0120						white	vit	
0125	3	46 47 509		44), 1996-, B204L	2	Spring	Fjäder	5
0130	3	46 47 509		44), 1996-, B234I	2	Spring	Fjäder	5
0140	3	46 47 509		44), 1996-, B258I	2	Spring	Fjäder	5
0150								
0160	3	46 47 517		1996-, B258I + SR, EAS, AS3, CHSEAT, AIRBAG2	2	Spring	Fjäder	5
0170						orange/white	orange/vit	
0180								
0190	3	45 43 021		CV	2	Spring	Fjäder	5
0200						orange	orange	
0210								
0240	4	42 43 317		39), B206I, B204I	2	Shock absorber	Stötdämpare	6
0250						red	röd	
0260	4	42 43 317		39), B204L	2	Shock absorber	Stötdämpare	6
0280	4	42 43 317		39), B234I	2	Shock absorber	Stötdämpare	6
0290	4	42 43 317		39), B258I, M	2	Shock absorber	Stötdämpare	6
0300								
0301	4	46 46 485		40), B206I, B204I	2	Shock absorber	Stötdämpare	6
0302						red	röd	
0303	4	46 46 485		40), B204L	2	Shock absorber	Stötdämpare	6
0304	4	46 46 485		40), B234I	2	Shock absorber	Stötdämpare	6
0305	4	46 46 485		40), B258I, M	2	Shock absorber	Stötdämpare	6
0306								
0330	4	43 98 244		39),B206I,B204I,A+AC,SR, EAS, AS3,CHSEAT,AIR-BAG2	2	Shock absorber	Stötdämpare	6
0340						yellow	gul	
0350	4	43 98 244		39), B204L,A+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2	2	Shock absorber	Stötdämpare	6
0360								
0370	4	43 98 244		39),B204L,ACS+AC,SR,EAS, AS3,CHSEAT,AIR-BAG2	2	Shock absorber	Stötdämpare	6
0380								
0390	4	43 98 244		39), B234I,A+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2	2	Shock absorber	Stötdämpare	6
0400								
0410	4	43 98 244		39), B258I,M+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2	2	Shock absorber	Stötdämpare	6
0420								
0430	4	43 98 244		39), B258I, A	2	Shock absorber	Stötdämpare	6
0440								
0441	4	*46 46 501*		40),B206I,B204I,A+AC,SR, EAS, AS3,CHSEAT,AIR-BAG2 NLS – USE 4901070	2	Shock absorber	Stötdämpare	6
0442						yellow	gul	
0443	4	*46 46 501*		40), B204L,A+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2 NLS - USE 4901070	2	Shock absorber	Stötdämpare	6
0444								
0445	4	*46 46 501*		40),B204L,ACS+AC,SR,EAS, AS3,CHSEAT,AIR-BAG2 NLS - USE 4901070	2	Shock absorber	Stötdämpare	6
0446								

23. If the car has AC, SR, EAS, AS3, CHseat, air-bag2 chose spring 4483368 Om bilen har AC, SR, EAS, AS3, CHseat, air-bag2 välj fjäder 4483368
39. Ch. -S2039247, -S7022051
40. Ch. S2039248-, S7022052-
44. If the car has AC, SR, EAS, AS3, CHseat, air-bag2 chose spring 4647517 Om bilen har AC, SR, EAS, AS3, CHseat, air-bag2 välj fjäder 4647517

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4 -G20 Rear suspension -1996

Bakre fjädring -1996

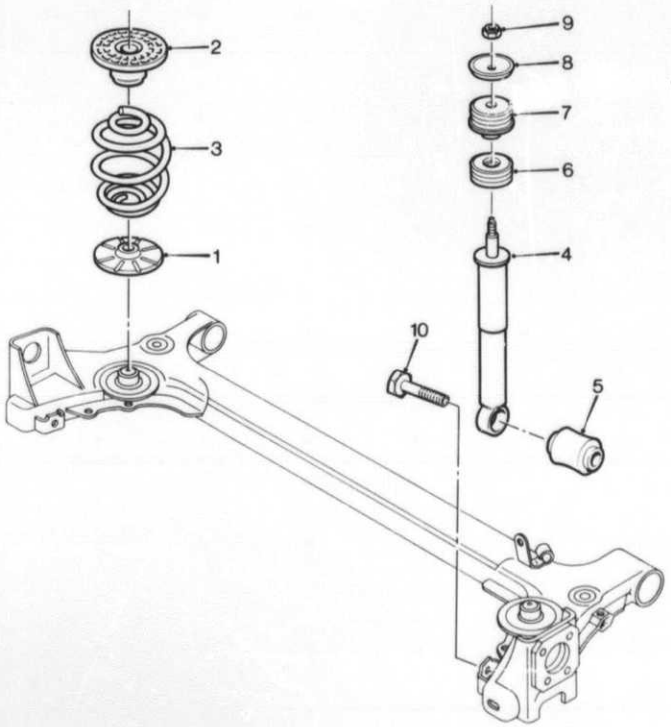

F4894 AAC94

0175	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0447	4	*46 46 501*		40), B234I,A+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2 NLS - USE 4901070	2	Shock absorber	Stötdämpare	6
0448								
0448								
0449	4	*46 46 501*		40), B258I,M+ AC,SR,EAS, AS3,CHSEAT,AIR-BAG2 NLS - USE 4901070	2	Shock absorber	Stötdämpare	6
0450								
0450								
0451	4	*46 46 501*		40), B258I, A NLS – USE 4901070	2	Shock absorber	Stötdämpare	6
0451								
0452								
0459	4	*42 47 110*		28,39), B204L, 3D, 5D NLS – USE 4901062	2	Shock absorber blue	Stötdämpare blå	6
0460								
0465	4	*46 46 527*		28,40), B204L, 3D, 5D NLS – USE 4901062	2	Shock absorber blue	Stötdämpare blå	6
0470								
0480								
0490	4	*45 43 013*		39), CV NLS – USE 4646543	2	Shock absorber white	Stötdämpare vit	6
0495								
0500	4	46 46 543		40), CV	2	Shock absorber white	Stötdämpare vit	6
0510								
0520								
0530	4	*42 47 110*		28,39), CV NLS – USE 4901062	2	Shock absorber blue	Stötdämpare blå	6
0535								
0540	4	*46 46 527*		28,40,45), CV NLS – USE 4901062	2	Shock absorber blue	Stötdämpare blå	6
0550								
0560								
0570	4	*46 46 501*		46,28), CV NLS – USE 4901070	2	Shock absorber yellow	Stötdämpare gul	6
0580								
0590								
0600	5	43 73 874			1	.Bushing	.Bussning	1
0610	6	42 46 344			2	Bushing	Bussning	1
0620	7	42 46 336			2	Bushing	Bussning	1
0630	8	89 59 934			2	Washer	Bricka	5
0640	9	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5
0650	10	43 45 245		-1995	2	Hexagon screw	Sexkantsskruv	5
0660	10	46 85 228		1996-	2	Hexagon screw	Sexkantsskruv	5

28. With lowered chassis Med sänkt chassi
39. Ch. -S2039247, -S7022051
40. Ch. S2039248-, S7022052-
45. Ch. -T7000156
46. Ch. T7000157-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4 -G22 Rear suspension 1997- / Bakre fjädring 1997-

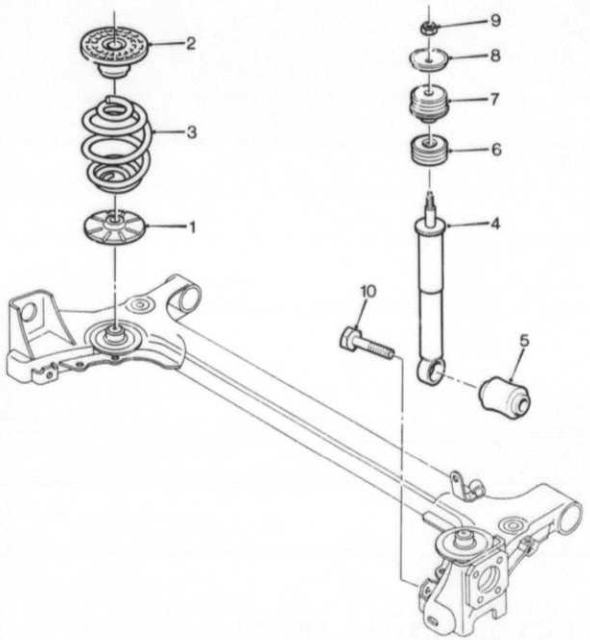

F8254 AAC94

0180	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 45 122			2	Spring support	Fjäderstöd	3
0020	2	42 44 505			2	Bump stop	Genomslagsstopp	5
0110	3	46 47 509		CODE=BE	2	Spring	Fjäder	5
0120						white	vit	
0160	3	46 47 517		CODE=BF	2	Spring	Fjäder	5
0170						orange/white	orange/vit	
0190	3	45 43 021		CODE=BG	2	Spring	Fjäder	5
0200						orange	orange	
0210								
0230	4	46 46 485		CODE=D	2	Shock absorber	Stötdämpare	6
0240						red	röd	
0320	4	*46 46 501*		57), CODE=E	2	Shock absorber	Stötdämpare	6
0330				NLS – USE 4901070		yellow	gul	
0340	4	49 01 070		58), CODE=M	2	Shock absorber	Stötdämpare	
0350						yellow	gul	
0460	4	*46 46 527*		57), CODE=F	2	Shock absorber	Stötdämpare	6
0470				NLS – USE 4901062	2	blue	blå	
0480	4	49 01 062		58), CODE=N	2	Shock absorber	Stötdämpare	
0490					2	blue	blå	
0500	4	46 46 543		CODE=G	2	Shock absorber	Stötdämpare	6
0510						white	vit	
0600	5	43 73 874			1	.Bushing	.Bussning	1
0610	6	42 46 344			2	Bushing	Bussning	1
0620	7	42 46 336			2	Bushing	Bussning	1
0630	8	89 59 934			2	Washer	Bricka	5
0640	9	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5
0660	10	46 85 228			2	Hexagon screw	Sexkantsskruv	5

57. Ch. –V2044848, –V7012554
58. Ch. V2044849–, V7012555–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-G24 Rear axle -1996 / Bakaxel -1996

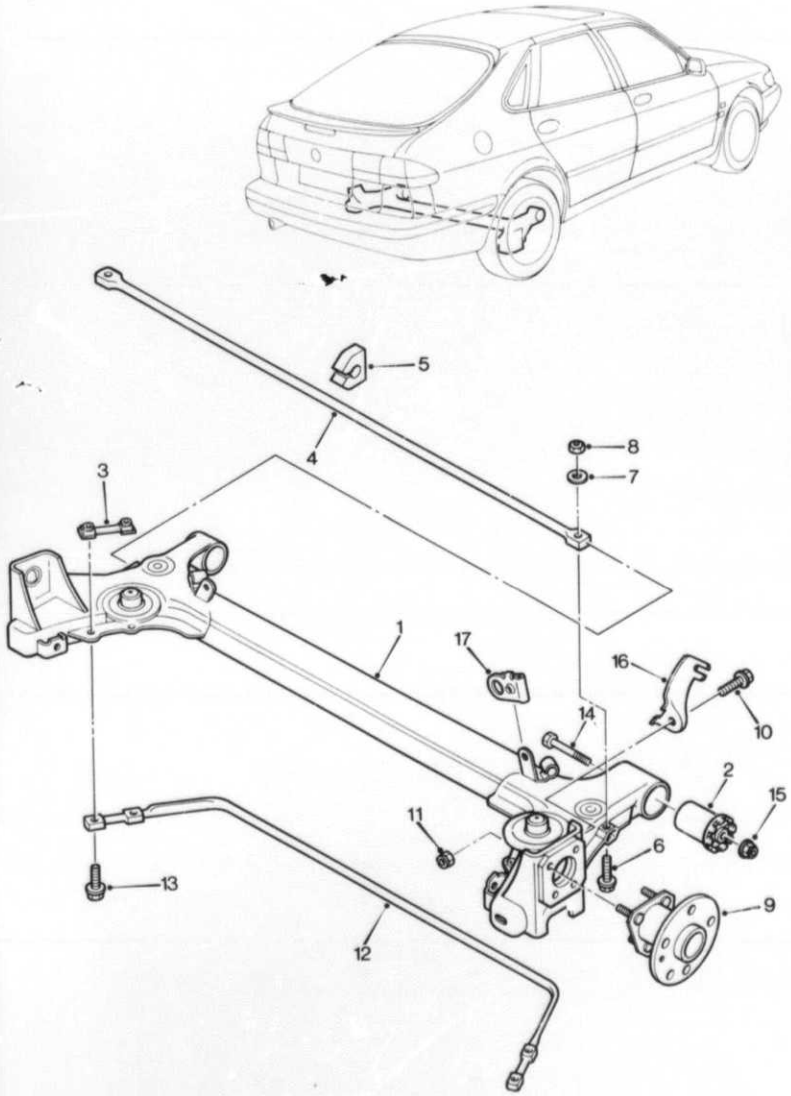

F4895 AAC94

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 67 619			1	Rear axle	Bakaxel	6
0020	2	44 67 791			2	Bushing	Bussning	4
0030	3	43 73 734			2	Nut plate	Mutterplatta	6
0040	4	44 67 437		3D, 5D	1	Anti-roll bar	Krängningshämmare	
0050	4	44 82 535		41), 3D, 5D	1	Anti-roll bar	Krängningshämmare	
0060	4	44 82 535		28), 3D, 5D	1	Anti-roll bar	Krängningshämmare	
0070	4	44 82 535		45), CV	1	Anti-roll bar	Krängningshämmare	
0080	4	44 67 437		46), CV	1	Anti-roll bar	Krängningshämmare	
0090	4	44 82 535		46,28), CV	1	Anti-roll bar	Krängningshämmare	
0100	5	42 49 272			1	Rubber damper	Gummidämpare	
0110	6	43 46 375			2	Hexagon screw	Sexkantsskruv	
0120	7	79 33 856			2	Washer	Bricka	5
0130	8	43 46 342			2	Hexagon nut	Sexkantsmutter	
0140	9			See page 5-007, 4-D08		Bearing	Lager	
0150	10	79 78 190			2	Screw	Skruv	5
0160	11	80 74 288			2	Nut	Mutter	5
0170	12	42 47 896			1	Anti-roll bar	Krängningshämmare	
0180	13	79 78 232			4	Screw	Skruv	5
0190	14	79 85 054			2	Hexagon screw	Sexkantsskruv	5
0200	15	79 77 820			2	Flange lock nut	Flänslåsmutter	
0210	16	44 67 411		LH	1	Retainer	Hållare	6
0220	16	44 67 403		RH	1	Retainer	Hållare	6
0230	17			See page 5-015, 4-D16		Bracket	Konsol	

28. With lowered chassis Med sänkt chassi
41. Ch. S2039248-, for cars with spring strut insert 4646493 Ch. S2039248-, för bilar med fjäderbensinsats 4646493
45. Ch. -T7000156
46. Ch. T7000157-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

4-H02 Rear axle 1997- / Bakaxel 1997-

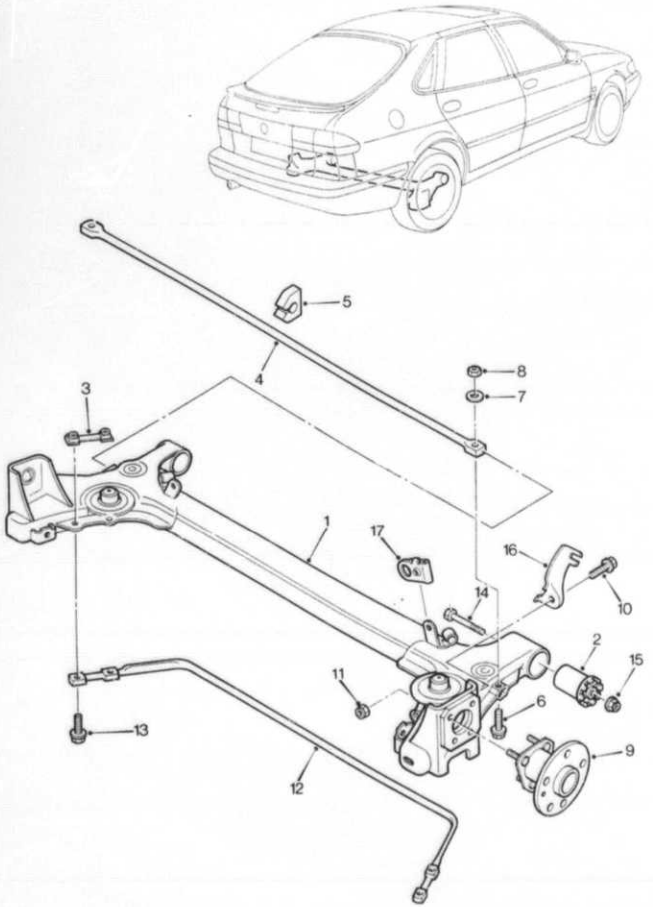

F8255 AAC94

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 67 619			1	Rear axle	Bakaxel	6
0020	2	44 67 791			2	Bushing	Bussning	4
0030	3	43 73 734			2	Nut plate	Mutterplatta	6
0040	4	44 67 437		CODE=A	1	Anti-roll bar	Krängningshämmare	
0050	4	44 82 535		CODE=B	1	Anti-roll bar	Krängningshämmare	
0100	5	42 49 272			1	Rubber damper	Gummidämpare	
0110	6	43 46 375			2	Hexagon screw	Sexkantsskruv	
0120	7	79 33 856			2	Washer	Bricka	5
0130	8	43 46 342			2	Hexagon nut	Sexkantsmutter	
0140	9			See page 5-007, 4-D08		Bearing	Lager	
0150	10	79 78 190			2	Screw	Skruv	5
0160	11	80 74 288			2	Nut	Mutter	5
0170	12	42 47 896			1	Anti-roll bar	Krängningshämmare	
0180	13	79 78 232			4	Screw	Skruv	5
0190	14	79 85 054			2	Hexagon screw	Sexkantsskruv	5
0200	15	79 77 820			2	Flange lock nut	Flänslåsmutter	
0210	16	44 67 411		LH	1	Retainer	Hållare	6
0220	16	44 67 403		RH	1	Retainer	Hållare	6
0230	17			See page 5-015, 4-D16		Bracket	Konsol	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-G06
Wheel	4-G14
Rear suspension	4-G18
Rear axle	4-G24

8A

Body, external
Kaross, utvändig
Carrocería, exterior

5-A02

TABLE OF CONTENTS

Car body		
Front- and centre floor	8A : 5	5-A06
Rear floor	8A : 7	5-A08
Roof	8A : 9	5-A10
Sun roof	8A : 11	5-A12
Top stack cover	8A : 13	5-A14
Top stack, side member	8A : 21	5-A22
Top stack, bow 1,2,3,4 and 5	8A : 27	5-B04
Tonneau cover	8A : 41	5-B18
Cowl plate	8A : 49	5-C02
Wheel housing, front	8A : 51	5-C04
Side member, front	8A : 53	5-C06
Wheel housing, rear	8A : 55	5-C08
Side plate, 5D	8A : 57	5-C10
Side plate, 3D	8A : 59	5-C12
Side plate, CV	8A : 61	5-C14
Door frame, 5D	8A : 63	5-C16
Door frame, 3D	8A : 65	5-C18
Door frame, CV	8A : 67	5-C20
Plugs	8A : 69	5-C22
Hood, front, fenders		
Hood, hood hinges and hood lock	8A : 71	5-C24
Front member, grille	8A : 73	5-D02
Front fenders	8A : 75	5-D04
Doors, trunk lid		
Front doors, hinges, window regulators, 5D	8A : 77	5-D06
Rear doors, hinges, window regulators, 5D	8A : 79	5-D08
Front doors, hinges, window regulators, 3D	8A : 81	5-D10
Front doors, hinges, window regulators, CV	8A : 83	5-D12
Door lock, front door, 5D	8A : 85	5-D14
Door lock, rear door, 5D	8A : 89	5-D18
Door lock, front door, 3D, CV	8A : 91	5-D20
Trunk door, hinges, lock	8A : 95	5-D24
Trunk lid, hinges, lock, CV	8A : 99	5-E04
Outside handle	8A : 101	5-E06
Lock- and lock cylinder sets	8A : 103	5-E08
External details, glass, sealings		
Emblem	8A : 105	5-E10
Decor, 5D	8A : 107	5-E12
Decor, 3D, CV	8A : 109	5-E14
Spoiler	8A : 111	5-E16
External mirror	8A : 113	5-E18
Windscreen	8A : 123	5-F04
Rear window	8A : 125	5-F06
Doors and side windows, 5D	8A : 127	5-F08
Doors and side windows, 3D	8A : 131	5-F12
Doors and side windows, CV	8A : 133	5-F14
Splash guards	8A : 135	5-F16
Other sealings, 5D	8A : 137	5-F18
Other sealings, 3D	8A : 139	5-F20
Other sealings, CV	8A : 141	5-F22
Bumpers and touch-up paint		
Bumper, front	8A : 147	5-G04
Bumper, rear	8A : 149	5-G06
Touch-up paint, 1-can	8A : 151	5-G08
Touch-up paint, 2-can	8A : 153	5-G10
Touch-up paint, two-coat type	8A : 155	5-G12
Touch-up paint, other paint	8A : 157	5-G14
Complete sets		
Car body, external	8A : 159	5-G16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-A03

INNEHÅLLSFÖRTECKNING

Karosseristomme		
Främre och mittre golv	8A : 5	5-A06
Bakre golv	8A : 7	5-A08
Tak	8A : 9	5-A10
Soltak	8A : 11	5-A12
Sufflett	8A : 13	5-A14
Sufflettstativ, sidobalk	8A : 21	5-A22
Sufflettstativ, båge 1,2,3,4 och 5	8A : 27	5-B04
Sufflettavtäckning	8A : 41	5-B18
Torpedplåt	8A : 49	5-C02
Hjulhus, främre	8A : 51	5-C04
Sidobalk, främre	8A : 53	5-C06
Hjulhus, bakre	8A : 55	5-C08
Sidoplåtar, 5D	8A : 57	5-C10
Sidoplåtar, 3D	8A : 59	5-C12
Sidoplåtar, CV	8A : 61	5-C14
Dörram, 5D	8A : 63	5-C16
Dörram, 3D	8A : 65	5-C18
Dörram, CV	8A : 67	5-C20
Pluggar	8A : 69	5-C22
Motorhuv, front, skärmar		
Motorhuv, huvgångjärn och huvlås	8A : 71	5-C24
Frontbalk, grill	8A : 73	5-D02
Framskärmar	8A : 75	5-D04
Dörrar, bagagerumslucka		
Framdörrar, gångjärn, fönsterhissar, 5D	8A : 77	5-D06
Bakdörrar, gångjärn, fönsterhissar, 5D	8A : 79	5-D08
Framdörrar, gångjärn, fönsterhissar, 3D	8A : 81	5-D10
Framdörrar, gångjärn, fönsterhissar, CV	8A : 83	5-D12
Dörrlås, framdörr, 5D	8A : 85	5-D14
Dörrlås, bakdörr, 5D	8A : 89	5-D18
Dörrlås, framdörr, 3D, CV	8A : 91	5-D20
Bagagerumsdörr, gångjärn, lås	8A : 95	5-D24
Baklucka, gångjärn, lås, CV	8A : 99	5-E04
Ytterhandtag	8A : 101	5-E06
Lås- och låscylindersatser	8A : 103	5-E08
Utvändiga detaljer, glas, tätningslister		
Emblem	8A : 105	5-E10
Dekor, 5D	8A : 107	5-E12
Dekor, 3D, CV	8A : 109	5-E14
Spoiler	8A : 111	5-E16
Utvändiga backspeglar	8A : 113	5-E18
Vindruta	8A : 123	5-F04
Bakruta	8A : 125	5-F06
Dörr- och sidorutor, 5D	8A : 127	5-F08
Dörr- och sidorutor, 3D	8A : 131	5-F12
Dörr- och sidorutor, CV	8A : 133	5-F14
Stänkskydd	8A : 135	5-F16
Övriga tätningslister, 5D	8A : 137	5-F18
Övriga tätningslister, 3D	8A : 139	5-F20
Övriga tätningslister, CV	8A : 141	5-F22
Stötfångare och bättringsfärg		
Stötfångare, främre	8A : 147	5-G04
Stötfångare, bakre	8A : 149	5-G06
Bättringsfärg, 1-komponent	8A : 151	5-G08
Bättringsfärg, 2-komponent	8A : 153	5-G10
Bättringsfärg, tvåskiktstyp	8A : 155	5-G12
Bättringsfärg, övrig färg	8A : 157	5-G14
Satser:		
Kaross, utvändig	8A : 159	5-G16

5-A04

SUMARIO

Cuerpo de la carroceria		
Piso del. y tras.	8A : 5	5-A06
Piso tras.	8A : 7	5-A08
Techo	8A : 9	5-A10
Escotilla techo	8A : 11	5-A12
Capota	8A : 13	5-A14
Bastidor de capota, larguero	8A : 21	5-A22
Bastidor de capota, cajado capota 1,2,3,4 y 5	8A : 27	5-B04
Cubierta del compartimento de la capota	8A : 41	5-B18
Placa torpedo	8A : 49	5-C02
Paso rueda, Del	8A : 51	5-C04
Larguero, Del	8A : 53	5-C06
Huercos de rueda Tras	8A : 55	5-C08
Placas laterales, 5D	8A : 57	5-C10
Placas laterales, 3D	8A : 59	5-C12
Placas laterales, CV	8A : 61	5-C14
Bastidor de puertas, 5D	8A : 63	5-C16
Bastidor de puertas, 3D	8A : 65	5-C18
Bastidor de puertas, CV	8A : 67	5-C20
Tapones	8A : 69	5-C22
Capot, plancha frontal, guardabarros		
Capot, bisagras de capot y cerradura de capot	8A : 71	5-C24
Viga del, parilla	8A : 73	5-D02
Guardabarros del	8A : 75	5-D04
Puertas, tapa de cofre		
Porta delantera, bisagras, levantcristales, 5D	8A : 77	5-D06
Porta trasera, bisagras, levantcristales, 5D	8A : 79	5-D08
Porta delantera, bisagras, levantcristales, 3D	8A : 81	5-D10
Porta delantera, bisagras, levantcristales, CV	8A : 83	5-D12
Cerraduras de puerta, Del, 5D	8A : 85	5-D14
Cerraduras de puerta, Tras, 5D	8A : 89	5-D18
Cerraduras de puerta, Del, 3D, CV	8A : 91	5-D20
Puerta trasera, bisagras, cerradura	8A : 95	5-D24
Tapa de cofre, bisagras, cerradura, CV	8A : 99	5-E04
Empunaduras exteriores	8A : 101	5-E06
Cerraduras y cilindros de cerradura	8A : 103	5-E08
Detalles exteriores, vidrios, juntas		
Emblemas	8A : 105	5-E10
Bastidor, 5D	8A : 107	5-E12
Bastidor, 3D, CV	8A : 109	5-E14
Espoilers	8A : 111	5-E16
Espejos retrovisores exteriores	8A : 113	5-E18
Parabrisas	8A : 123	5-F04
Luna trasera	8A : 125	5-F06
Ventanilla de puerta y lateral, 5D	8A : 127	5-F08
Ventanilla de puerta y lateral, 3D	8A : 131	5-F12
Ventanilla de puerta y lateral, CV	8A : 133	5-F14
Faldones	8A : 135	5-F16
Otras juntas, 5D	8A : 137	5-F18
Otras juntas, 3D	8A : 139	5-F20
Otras juntas, CV	8A : 141	5-F22
Parachoques y pintura de retoque		
Parachoques, Del	8A : 147	5-G04
Parachoques, Tras	8A : 149	5-G06
Pintura de retoque, tipo 1-componentes	8A : 151	5-G08
Pintura de retoque, tipo 2-componentes	8A : 153	5-G10
Pintura de retoque, tipo de dos capas	8A : 155	5-G12
Pintura de retoque, otro pintura	8A : 157	5-G14
Juegos completos		
Carosseria, exterior	8A : 159	5-G16

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -A06

Front and centre floor
Främre och mittre golv

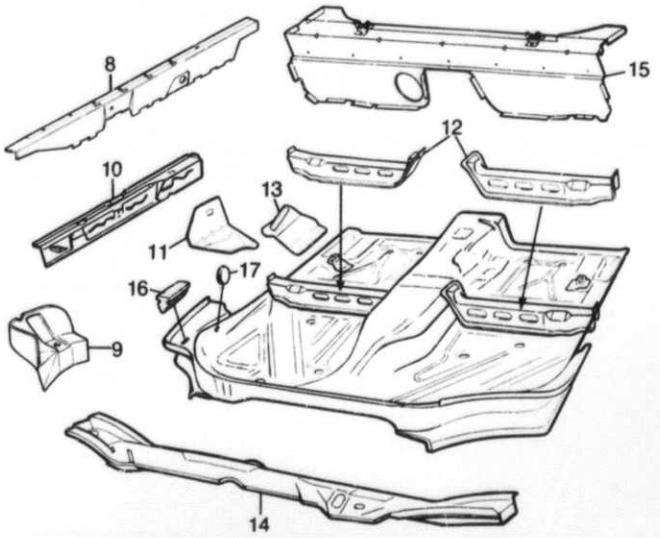

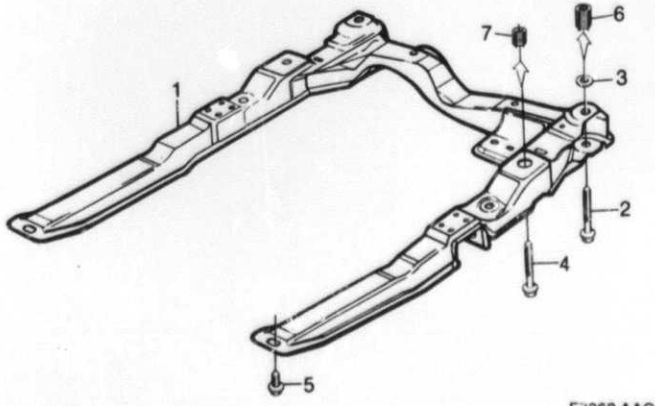

F7362 AAC94

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				47)	1	Body	Kaross	
0020	1	43 31 047			1	Subframe	Framvagnsram	
0030	2	43 45 666		359)	2	Screw	Skruv	5
0040	2	46 85 996		360)	2	Screw	Skruv	
0050	3	43 33 811			2	Washer	Bricka	5
0060	4	43 45 674			2	Screw	Skruv	5
0070	5	*43 45 658*		NLS - USE 4940185	2	Screw	Skruv	5
0080	6	42 97 966		M12X1,5X18	X	Thread insert	Gänginsats	
0090	7	42 97 974		M14X1,5X20	X	Thread insert	Gänginsats	
0100								
0110	8	42 95 812		LH, CV	1	Sill	Tröskel	6
0120	8	42 95 820		RH, CV	1	Sill	Tröskel	6
0130								
0140	9	42 95 838		LH, CV	1	Sill	Tröskel	6
0150	9	42 95 846		RH, CV	1	Sill	Tröskel	6
0160								
0170	10	43 40 337		32) LH	1	Sill	Tröskel	6
0180	10	43 40 345		32) RH	1	Sill	Tröskel	6
0190								
0200	11	43 40 311		LH	1	Reinforcement	Förstärkning	
0210	11	43 40 329		RH	1	Reinforcement	Förstärkning	
0220								
0230	12	43 40 352		LH	1	Beam	Balk	6
0240	12	43 40 360		RH	1	Beam	Balk	6
0250								
0260	13	43 40 378		LH	1	Support	Stöd	
0270	13	43 40 386		RH	1	Support	Stöd	
0280								
0290	14	43 40 410			1	Crossmember	Tvärbalk	
0300								
0310	15	42 95 895		CV	1	Torsion box	Torsionslåda	6
0320								
0330	16	42 96 323		99) -1997, 6-CYL	2	Plug	Plugg	5
0340	17	82 06 096		99) -1997, 6-CYL	2	Plug	Plugg	5

32. Inner Inre
47. Only current production design. Please contact our order office in Nyköping. Endast produktionsaktuellt utförande. Var vänlig kontakta orderkontoret i Nyköping.
99. Ch. R2032826-
359. Ch. -V2036435
360. Ch. V2036436-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-A08

Rear floor
Bakre golv

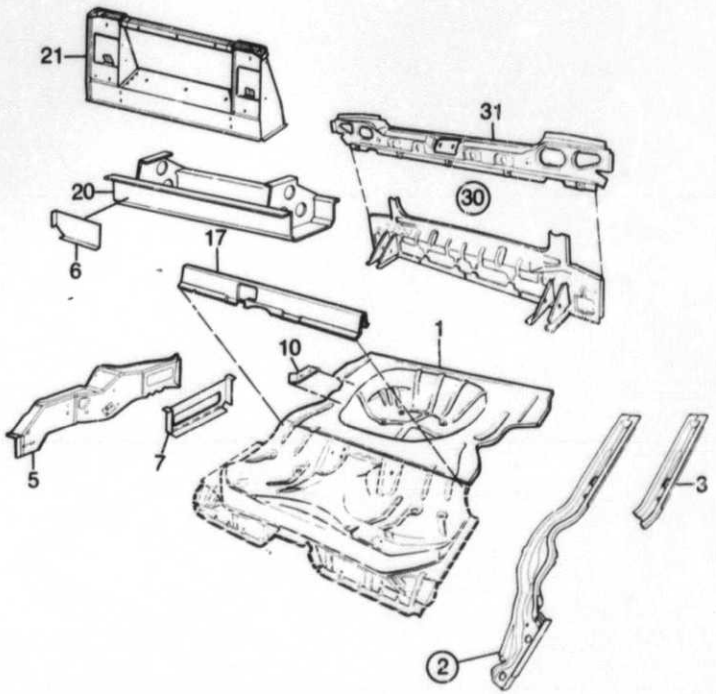

F6004 AAC94

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 40 295			1	Floor	Golv	6
0020								
0030	2	42 95 432		LH	1	Beam	Balk	6
0040	2	43 40 246		RH	1	Beam	Balk	6
0050	3	43 40 253		LH	1	.Beam	.Balk	6
0060	3	43 40 261		RH	1	.Beam	.Balk	6
0070								
0080	5	42 95 754		LH, CV	1	Sill member	Tröskelbalk	6
0090	5	42 95 762		RH, CV	1	Sill member	Tröskelbalk	6
0100	6	42 95 796		LH, CV	1	Filler plate	Utfyllnadsplåt	6
0110	6	42 95 804		RH, CV	1	Filler plate	Utfyllnadsplåt	6
0120	7	42 95 929		CV	1	Joint plate	Skarvplåt	6
0130								
0140	10	43 40 428			1	Reinforcement	Förstärkning	
0150								
0160	17	43 40 303			1	Member	Balk	6
0170								
0180	20	42 95 788		CV	1	Torsion box	Torsionslåda	6
0190	21	42 95 770		CV	1	Torsion box	Torsionslåda	6
0200								
0210	30	43 37 747			1	Rear end panel	Akterspegel	5
0220	31	43 37 754			1	.Sill	.Tröskel	6

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-A10

Roof
Tak

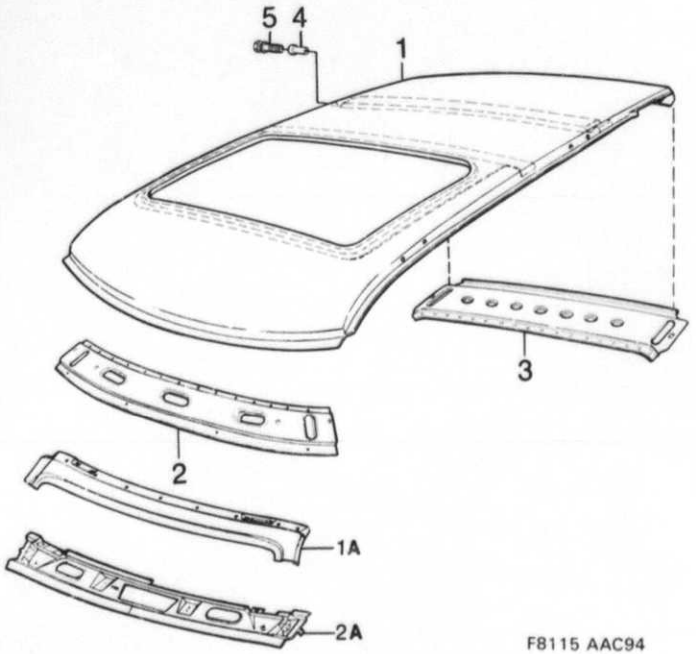

F8115 AAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 37 457			1	Roof	Tak	5
0020	1	43 37 465		SR	1	Roof	Tak	5
0030	1A	42 95 903		CV	1	Beam	Balk	6
0040								
0050	2	43 37 473			1	Beam	Balk	6
0060	2A	42 95 911		CV	1	Beam	Balk	6
0070								
0080	3	43 37 481			1	Beam	Balk	6
0090	4	92 67 485			8	Nut	Mutter	5
0100								
0110	5			See page 8A-139, 5-F20		Screw	Skruv	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-A12

Sun roof

Soltak

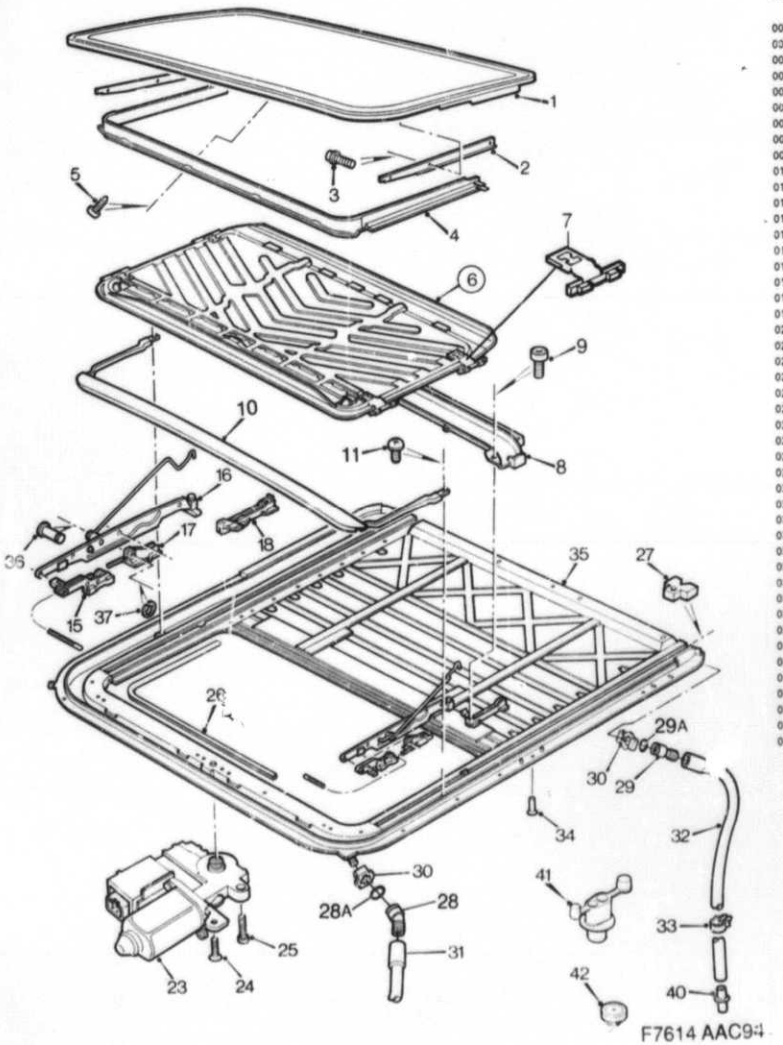

0225	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1	43 27 649			1	Glass hatch	Glaslucka	5
0020	2	43 27 656		-1994, LH	1	Cover	Avtäckning	
0030	2	43 27 664		-1994, RH	1	Cover	Avtäckning	
0040	3	43 27 888			6	Screw	Skruv	
0050	4	43 27 771			1	Cover	Avtäckning	
0060	5	43 45 930			4	Screw	Skruv	5
0070	6	43 27 789			1	Sun shade	Solskärm	
0080	7	46 97 421			4	,Slide dog	,Glidklack	
0090	8	43 27 797			1	Roof gutter	Ränna	
0100	9	79 78 356			6	Screw	Skruv	5
0110	10	43 27 805			1	Wind deflector	Vindavvisare	
0120	11	43 27 904			2	Screw	Skruv	
0130	15	43 27 755		LH	1	Guide	Styrning	6
0140	15	43 27 763		RH	1	Guide	Styrning	6
0150	16	43 27 672		399) LH	1	Cam follower	Lyftare	
0160	16	43 27 680		399) RH	1	Cam follower	Lyftare	
0170	16	• 48 58 072		400) LH	1	Cam follower	Lyftare	
0180	16	• 48 58 080		400) RH	1	Cam follower	Lyftare	
0190	17	43 27 698			2	Slide unit	Glidenhet	5
0200						with cable	med wire	
0210	18	43 27 730		LH	1	Guide	Styrning	6
0220	18	43 27 748		RH	1	Guide	Styrning	6
0230	23	43 27 847			1	Electric motor	Elmotor	4
0240	24	43 27 854			2	Screw	Skruv	5
0250	25	79 77 689			1	Screw	Skruv	5
0260	26	42 04 830			1	Retainer strip	Hållarlist	
0270	27	43 27 961			2	End piece	Ändstycke	
0280	28	43 27 862			2	Draining nipple	Dräneringsnippel	
0290	28A	46 97 413			1	,O-ring	,O-ring	2
0300	29	43 27 870			2	Draining nipple	Dräneringsnippel	
0310	29A	46 97 413			1	,O-ring	,O-ring	2
0320	30	43 27 706			4	Spring clip	Fjäderclips	
0330	31	43 28 043			2	Draining hose	Dräneringsslang	5
0340	32	43 27 318			2	Draining hose	Dräneringsslang	5
0350	33	85 36 419		256)	2	Clip	Clips	5
0360	33	44 24 883		257)	2	Clamp	Klamma	5
0370	34	40 87 599			18	Screw	Skruv	5
0380	35	43 27 813			1	Frame	Ram	
0390	36	45 57 138			2	Lock bolt	Låsbult	5
0400	37	43 27 979			2	Retaining ring	Spärring	
0410								
0420	40	43 04 283		-1994	X	Plug	Plugg	5
0430								
0440	41	44 09 520			X	Plug	Plugg	5
0450								
0460	42	43 33 480		-1994	X	Plug	Plugg	5

256. Ch. -T2014362
257. Ch. T2014363-
399. Ch. -V2052552
400. Ch. V2052553-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -A14

Folding top
276) Convertible

Sufflett
276) Cabriolet

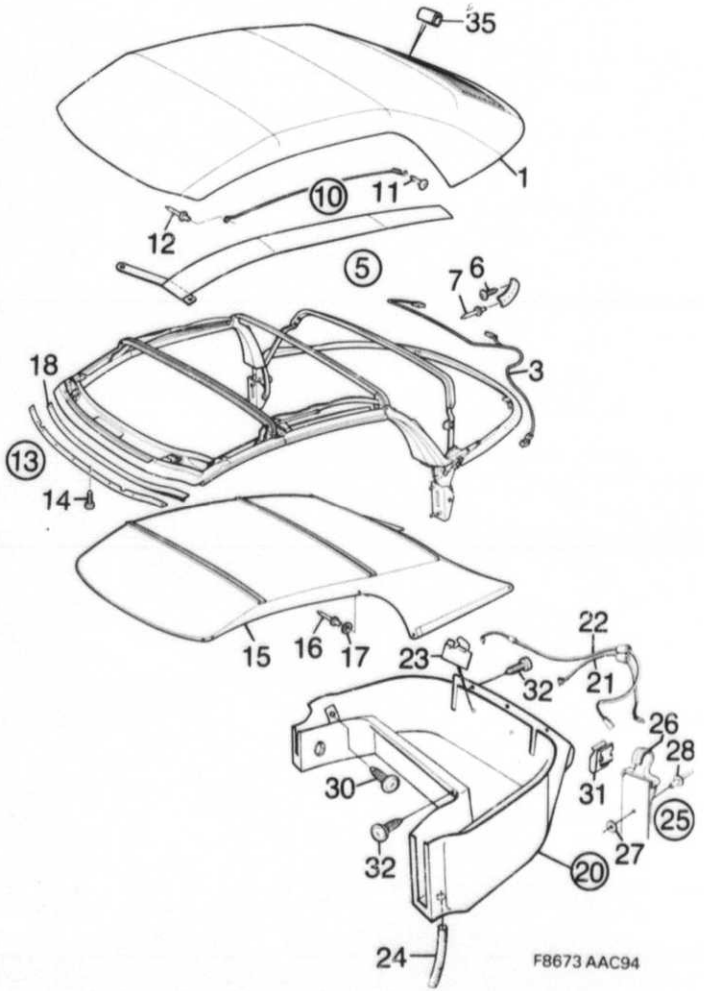

0227	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 56 601*		110) SEE SI 811-1696	1	Headlining	Taktyg	
0020				NLS – USE 7497647,		with rear window	med bakruta	
0020				7497670, 7497704				
0030	1	45 56 619		80) SEE SI 811-1696	1	Headlining	Taktyg	
0040						with rear window	med bakruta	
0050	1	45 56 932		210)	1	Headlining	Taktyg	
0060						with rear window	med bakruta	
0070								
0080	3	46 96 274			1	Cable harness	Ledningsnät	5
0090								
0100	5	46 97 173		LH	1	Base	Underlägg	5
0110	5	46 97 181		RH	1	Base	Underlägg	5
0120	6	45 55 751			1	.Screw	.Skruv	
0130	7	*45 56 015*		NLS – USE 4696894	16	.Blind rivet	.Blindnit	6
0140	7	47 67 752		ALTERNATIVE	16	.Screw	.Skruv	5
0150								
0160	10	45 56 528			2	Cable	Wire	5
0170	11	45 55 769			1	.Screw	.Skruv	
0180	12	*45 56 031*		NLS – USE 4850731	1	.Blind rivet	.Blindnit	6
0190								
0200	13	45 56 577			1	Support plate	Stödplåt	1
0210	14	45 55 777			9	.Screw	.Skruv	
0220								
0230	15	*45 56 403*		-1995 NLS – USE 7497704	1	Headlining	Innertak	6
0240	15	*47 67 786*		1996- NLS – USE 7497704	1	Headlining	Innertak	6
0250	16	*45 56 015*		NLS – USE 4696894	X	Blind rivet	Blindnit	6
0260	16	47 67 752		ALTERNATIVE	X	Screw	Skruv	5
0270	17	*45 55 975*		NLS – USE 8428997	4	Washer	Bricka	
0280	18	45 58 532			1	Sealing shape	Tätningsprofil	5
0290								
0300	20	45 09 956		100)	1	Cloth	Duk	
0310	20	45 09 964		210)	1	Cloth	Duk	
0320	20	45 09 972		110)	1	Cloth	Duk	
0330	21	46 03 213		LH	1	.Microswitch	.Mikrobrytare	
0340	22	46 03 221		RH	1	.Microswitch	.Mikrobrytare	
0350	23	46 03 239			2	.Clip	.Clips	
0360	24	45 10 087			1	Draining hose	Dräneringsslang	6
0370								
0380	25	47 41 971			1	Hook	Krok	1
0390	26	45 10 053		1)	2	.Hook	.Krok	1
0400	27	80 73 090			2	.Washer	.Bricka	5
0410	28	82 35 178			2	.Pop rivet	.Popnit	5
0420								
0430	30	96 68 153			9	Clip	Clips	5
0440	31	40 87 797			10	Clip	Clips	5
0450	32	43 47 449			5	Clip	Clips	5
0460	35	48 53 263		1996-	1	Clip	Clips	


1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
276. Ch. -T7006411

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

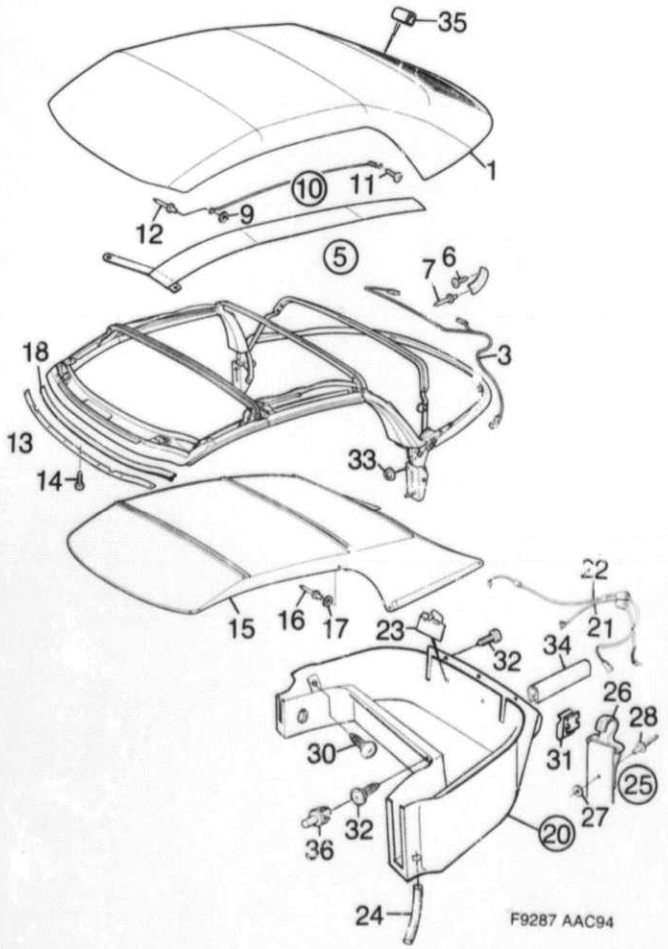

Car body
5-A16
Folding top
277,375) Convertible

Karosskrov
Sufflett
277,375) Cabriolet

0228	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 670		110) (4850418)	1	Headlining	Taktyg	
0020						with rear window	med bakruta	
0030	1	74 97 688		80) (4850426)	1	Headlining	Taktyg	
0040						with rear window	med bakruta	
0070								
0080	3	47 68 644			1	Cable harness	Ledningsnät	5
0090								
0100	5	46 97 173		352) LH	1	Base	Underlägg	5
0110	5	46 97 181		352) RH	1	Base	Underlägg	5
0120	5	48 52 430		353) LH	1	Base	Underlägg	5
0130	5	48 52 448		353) RH	1	Base	Underlägg	5
0140	6	45 55 751			1	.Screw	.Skruv	
0150	7	*45 56 015*		NLS - USE 4696894	16	.Blind rivet	.Blindnit	6
0160	7	47 67 752		ALTERNATIVE	16	.Screw	.Skruv	5
0170								
0180	9	80 29 944			2	Washer	Bricka	5
0190								
0200	10	45 56 528			2	Cable	Wire	5
0210	11	45 55 769			1	.Screw	.Skruv	
0220	12	48 50 731			1	.Pop rivet	.Popnit	6
0230								
0240	13	46 97 546			1	Holder	Hållare	5
0250	14	45 55 777			9	Screw	Skruv	
0260								
0270	15	74 97 704			1	Headlining	Innertak	6
0280	16	*45 56 015*		NLS - USE 4696894	X	Blind rivet	Blindnit	6
0290	16	47 67 752		ALTERNATIVE	X	Screw	Skruv	5
0300	17	*45 55 975*		NLS - USE 8428997	4	Washer	Bricka	
0310	18	45 58 532			1	Sealing shape	Tätningsprofil	5
0320								
0330	20	45 09 956		100)	1	Cloth	Duk	
0340	20	45 09 964		210)	1	Cloth	Duk	
0350	20	45 09 972		110)	1	Cloth	Duk	
0360	21	46 03 213		LH	1	.Microswitch	.Mikrobrytare	
0370	22	46 03 221		RH	1	.Microswitch	.Mikrobrytare	
0380	23	46 03 239			2	.Clip	.Clips	
0390	24	45 10 087			1	Draining hose	Dräneringsslang	6
0400								
0410	25	47 41 971			1	Hook	Krok	1
0420	26	45 10 053		1)	2	.Hook	.Krok	1
0430	27	80 73 090			2	.Washer	.Bricka	5
0440	28	82 35 178			2	.Pop rivet	.Popnit	5
0450								
0460	30	96 68 153		341)	10	Clip	Clips	5
0470	30	96 68 153		342)	3	Clip	Clips	5
0480	31	40 87 797			4	Clip	Clips	5
0490	32	43 47 449			5	Clip	Clips	5
0500	33	43 45 419			6	Nut	Mutter	5
0510	34	85 64 973			2	Protecting moulding	Skyddslist	6
0520	35	48 53 263		324)	1	Clip	Clips	
0530	36	48 23 126		342)	4	Clip	Clips	5


1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
277. Ch. [illegible]8412-
324. Ch. -V7001062
341. Ch. -V7004351
342. Ch. V7004352-
352. Ch. -V7[illegible]015
353. Ch. V7003016-
375. Ch. -V7008823

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

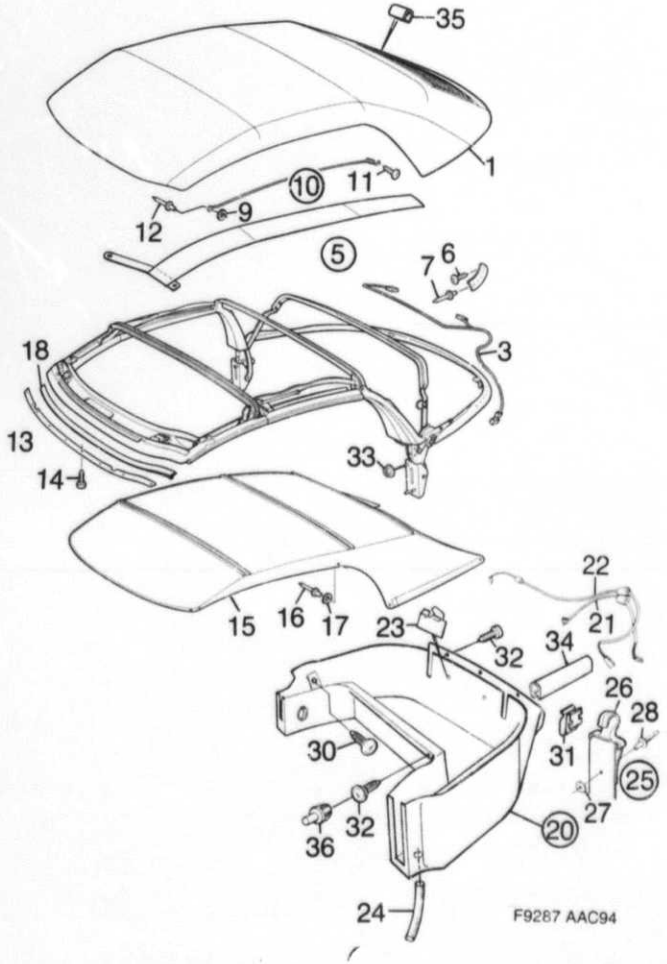

Car body

5-A18

Folding top

277,375) Convertible

Karosskrov

Sufflett

277,375) Cabriolet

0228 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	48 50 830			X	Clamp	Klammer	5
0550	79 93 462			X	Tape	Tape	5
0560							
0570	74 97 803		SEE SI 811-1696	X	Kit	Sats	
0580	45 55 777			7	.Screw	.Skruv	
0590	46 95 870			*	.Tape	.Tape	
0600	47 67 752			6	.Screw	.Skruv	5


277. Ch. T7006412-
375. Ch. -V7008823

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

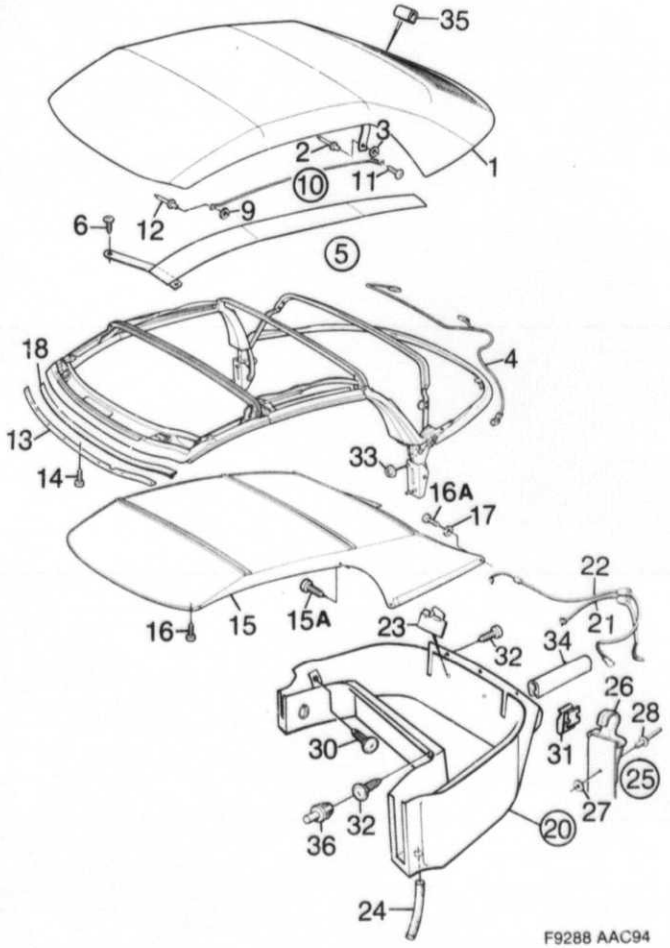

F9288 AAC94

Car body
5 -A20
Folding top
376) Convertible

Karosskrov
Sufflett
376) Cabriolet

0229	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 670		110)	1	Headlining	Taktyg	
0020						with rear window	med bakruta	
0030	1	74 97 688		80)	1	Headlining	Taktyg	
0040						with rear window	med bakruta	
0050								
0060	2	48 56 860			4	Pop rivet	Popnit	6
0070	3	48 56 878			4	Washer	Bricka	
0080								
0090	4	47 68 644			1	Cable harness	Ledningsnät	5
0100								
0110	5	48 52 430		LH	1	Base	Underlägg	5
0120	5	48 52 448		RH	1	Base	Underlägg	5
0130	6	45 55 777			2	.Screw	.Skruv	
0140								
0160	9	80 29 944			2	Washer	Bricka	5
0160								
0170	10	45 56 528			2	Cable	Wire	5
0180	11	45 55 769			1	.Screw	.Skruv	
0190	12	48 50 731			1	.Pop rivet	.Popnit	6
0200								
0210	13	46 97 546			1	Holder	Hållare	5
0220	14	45 55 777			9	Screw	Skruv	
0230								
0240	15	74 97 704			1	Headlining	Innertak	6
0250	15A	47 67 752			6	.Screw	.Skruv	5
0260								
0270	16	45 55 751			2	Screw	Skruv	
0280	16A	48 56 977			2	Screw	Skruv	
0290	17	48 56 985			2	Washer	Bricka	
0300								
0310	18	45 58 532			1	Sealing shape	Tätningsprofil	5
0320								
0330	20	45 09 956		100)	1	Cloth	Duk	
0340	20	45 09 964		210)	1	Cloth	Duk	
0350	20	45 09 972		110)	1	Cloth	Duk	
0360	21	46 03 213		LH	1	.Microswitch	.Mikrobrytare	
0370	22	46 03 221		RH	1	.Microswitch	.Mikrobrytare	
0380	23	46 03 239			2	.Clip	.Clips	
0390	24	45 10 087			1	Draining hose	Dräneringsslang	6
0400								
0410	25	47 41 971			1	Hook	Krok	1
0420	26	45 10 053		1)	2	.Hook	.Krok	1
0430	27	80 73 090			2	.Washer	.Bricka	5
0440	28	82 35 178			2	.Pop rivet	.Popnit	5
0450								
0460	30	96 68 153			3	Clip	Clips	5
0470	31	40 87 797			4	Clip	Clips	5
0480	32	43 47 449			5	Clip	Clips	5
0490	33	43 45 419			6	Nut	Mutter	5
0500	34	85 64 973			2	Protecting moulding	Skyddslist	6
0510	35	48 53 263			1	Clip	Clips	
0520	36	48 23 126			4	Clip	Clips	5
0530		48 50 830			X	Clamp	Klammer	5
0540		79 93 462			X	Tape	Tape	5


1. Not as separate spare part. Ej som separat reservdel.
80. Blue Blå
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
376. Ch. V7008824-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

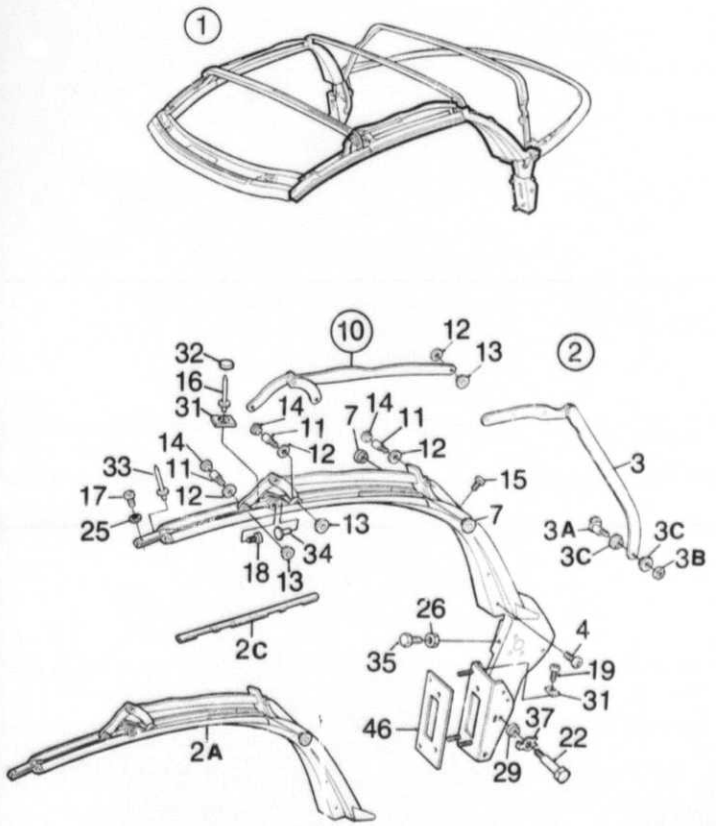

F9289 AAC94

Car body

5-A22 *Side member* *276) Convertible*

Karosskrov

Sidobalk *276) Cabriolet*

0232	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*45 56 486*		NLS – USE 4857173		Top stack	Suflettstativ	
0030	2	*44 94 738*		193) LH NLS – USE 4858940	1	.Side member	.Sidobalk	5
0040	2	*44 94 746*		193) RH NLS – USE 4858957	1	.Side member	.Sidobalk	5
0050	2	*46 95 557*		194) LH NLS – USE 4858940	1	.Side member	.Sidobalk	5
0060	2	*46 95 565*		194) RH NLS – USE 4858957	1	.Side member	.Sidobalk	5
0070	2A	48 50 640		LH	1	..Side member	..Sidobalk	5
0080	2A	48 50 517		RH	1	..Side member	..Sidobalk	5
0140	2C	45 57 641			2	..Protecting moulding	..Skyddslist	
0160	3	*47 67 398*		247) LH NLS – USE 7497977	1	..Link	..Länk	
0170	3	*74 97 506*		247) RH NLS – USE 7497985	1	..Link	..Länk	
0210		44 94 647			2	.Adjustment screw	.Justerskruv	5
0220	3A	45 55 793			1	..Bolt	..Bult	
0230	3B	45 56 080			1	..Nut	..Mutter	5
0240	3C	69 52 014			2	..Bushing	..Bussning	5
0280	4	45 55 827			2	...Bolt	...Bult	
0290	7	45 56 106			2	...Bushing	...Bussning	5
0340	10	74 97 936		LH	1	..Control arm kit	..Länkarmsats	
0350	10	74 97 944		RH	1	..Control arm kit	..Länkarmsats	
0370	11	45 55 868			3	...Bolt	...Bult	
0380	12	45 55 991			3	...Washer	...Bricka	
0390	13	45 56 130			3	..Bushing	..Bussning	5
0410	14	45 56 239			3	..Plug	..Plugg	
0430	15	45 55 629			1	..Screw	..Skruv	
0440	16	45 55 702			2	..Rivet	..Nit	
0450	17	45 55 710			3	..Screw	..Skruv	
0460	18	45 55 728			1	..Screw	..Skruv	
0470	19	45 55 736			2	..Screw	..Skruv	
0480	22	45 55 876			1	..Bolt	..Bult	
0490	25	45 55 942			3	..Washer	..Bricka	
0500	26	45 56 064			1	..Nut	..Mutter	5
0510	29	45 56 114			2	..Bushing	..Bussning	5
0520	31	45 56 221			2	..Rubber damper	..Gummidämpare	4
0530	32	46 96 175			2	..Rubber stop	..Gummistopp	
0540	33	*45 56 304*		NLS – USE 4850731	1	..Blind rivet	..Blindnit	6
0550	34	45 56 320			1	..Stop	..Stopp	5
0560	35	*45 56 338*		191) NLS – USE 4697454	1	..Stop	..Stopp	5
0570	35	46 97 454		192)	1	..Stop	..Stopp	5
0580	37	45 56 007			1	..Washer	..Bricka	
0600	46	45 57 690		1MM	X	Adjusting plate	Justerplåt	5
0610	46	*44 06 567*		2MM NLS – USE 4557690	X	Adjusting plate	Justerplåt	5


191. Ch. –S7016595
192. Ch. S7016596–
193. Ch. –S7010799
194. Ch. S7010800–
247. Ch. T7019260–
276. Ch. –T7006411

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

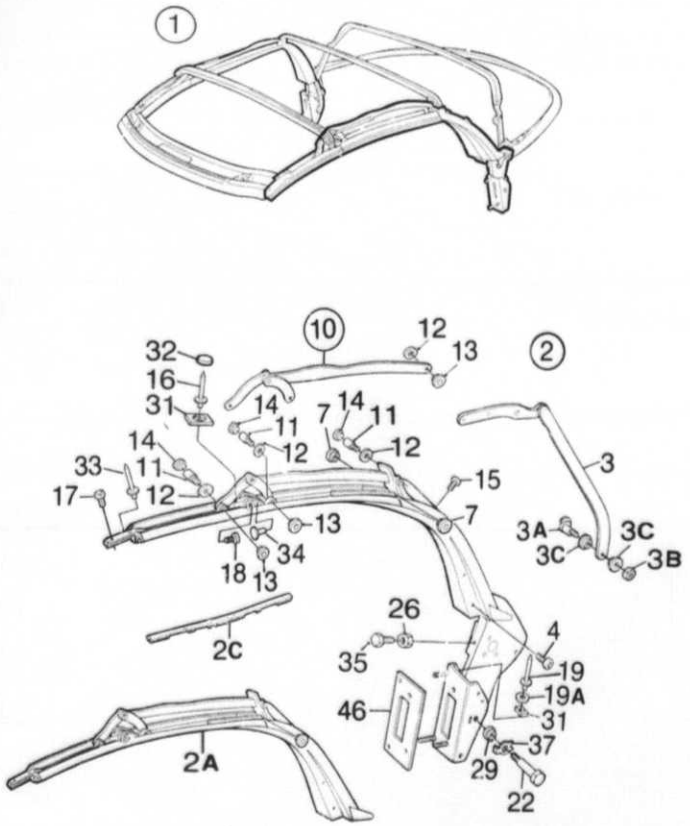

F9290 AAC94

0233	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*48 50 848*		NLS – USE 4857173	1	Folding top	Sufflett	5
0050	2	*46 97 207*		LH NLS – USE 4858940	1	.Side member	.Sidobalk	5
0060	2	*46 97 215*		RH NLS – USE 4858957	1	.Side member	.Sidobalk	5
0070	2A	48 50 640		LH	1	..Side member	..Sidobalk	5
0080	2A	48 50 517		RH	1	..Side member	..Sidobalk	5
0130								
0140	2C	45 57 641		-1996	2	..Protecting moulding	..Skyddslist	
0150								
0160	3	*74 97 605*		LH NLS – USE 7497977	1	..Link	..Länk	
0170	3	*74 97 613*		RH NLS – USE 7497985	1	..Link	..Länk	
0200								
0210		44 94 647			2	.Adjustment screw	.Justerskruv	5
0220	3A	45 55 793			1	..Bolt	..Bult	
0230	3B	45 56 080			1	..Nut	..Mutter	5
0240	3C	69 52 014			2	..Bushing	..Bussning	5
0270								
0280	4	45 55 827			2	...Bolt	...Bult	
0290	7	45 56 106			2	...Bushing	...Bussning	5
0310								
0340	10	74 97 936		LH	1	..Control arm kit	..Länkarmsats	
0350	10	74 97 944		RH	1	..Control arm kit	..Länkarmsats	
0360								
0370	11	45 55 868			3	...Bolt	...Bult	
0380	12	45 55 991			3	...Washer	...Bricka	
0390	13	45 56 130			3	..Bushing	..Bussning	5
0410	14	45 56 239			3	..Plug	..Plugg	5
0420								
0430	15	45 55 629			1	..Screw	..Skruv	
0440	16	45 55 702			2	..Rivet	..Nit	
0450	17	45 55 710			3	..Screw	..Skruv	
0460	18	45 55 728			1	..Screw	..Skruv	
0470	19	48 50 608			2	..Pop rivet	..Popnit	6
0480	19A	48 56 878			2	..Washer	..Bricka	
0490	22	45 55 876			1	..Bolt	..Bult	
0500	26	45 56 064			1	..Nut	..Mutter	5
0510	29	45 56 114			2	..Bushing	..Bussning	5
0520	31	45 56 221			2	..Rubber damper	..Gummidämpare	4
0530	32	46 96 175			2	..Rubber stop	..Gummistopp	
0540	33	48 50 731			1	..Pop rivet	..Popnit	6
0550	34	45 56 320			1	..Stop	..Stopp	5
0560	35	46 97 454			1	..Stop	..Stopp	5
0570	37	45 56 007			1	..Washer	..Bricka	
0580								
0590	46	45 57 690		1MM	X	Adjusting plate	Justerplåt	5

277. Ch. T7006412-
375. Ch. -V7008823

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

Car body

5 -B02


Side member

376) Convertible

Karosskrov

Sidobalk

376) Cabriolet

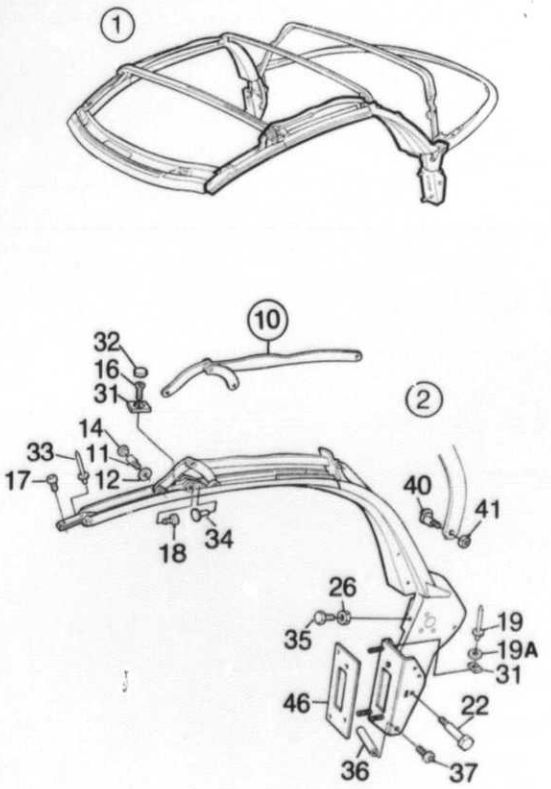

F9291 AAC94

0234	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		48 57 173			1	Top stack	Suflettstativ	
0020	2		48 57 199		LH	1	.Side member	.Sidobalk	5
0030	2		48 57 181		RH	1	.Side member	.Sidobalk	5
0040									
0050	10		74 97 936		LH	1	..Control arm kit	..Länkarmsats	
0060	10		74 97 944		RH	1	..Control arm kit	..Länkarmsats	
0070	11		45 55 868			3	...Bolt	...Bult	
0080	12		45 55 991			3	...Washer	...Bricka	
0090	14		45 56 239			3	..Plug	..Plugg	5
0100									
0110	16		45 55 769			2	..Screw	..Skruv	
0120	17		45 55 710			3	..Screw	..Skruv	
0130	18		45 55 728			1	..Screw	..Skruv	
0140	19		48 50 608			3	..Pop rivet	..Popnit	6
0150	19A		48 56 878			3	..Washer	..Bricka	
0160	22		45 55 876			1	..Bolt	..Bult	
0170	26		80 74 106			1	..Nut	..Mutter	5
0180	31		45 56 221			2	..Rubber damper	..Gummidämpare	4
0190	32		46 96 175			2	..Rubber stop	..Gummistopp	
0200	33		48 50 731			1	..Pop rivet	..Popnit	6
0210	34	*	48 59 773			1	..Stop	..Stopp	
0220	35		80 83 933			1	..Screw	..Skruv	5
0230	36		48 50 590			1	..Reinforcement	..Förstärkning	
0240	37	*	48 56 993			2	..Screw	..Skruv	
0250									
0260	40	*	48 56 936			2	..Screw	..Skruv	
0270	41		79 65 767			2	..Lock nut	..Låsmutter	3
0280									
0290	46		45 57 690		1MM	X	Adjusting plate	Justerplåt	5


376. Ch. V7008824-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G15

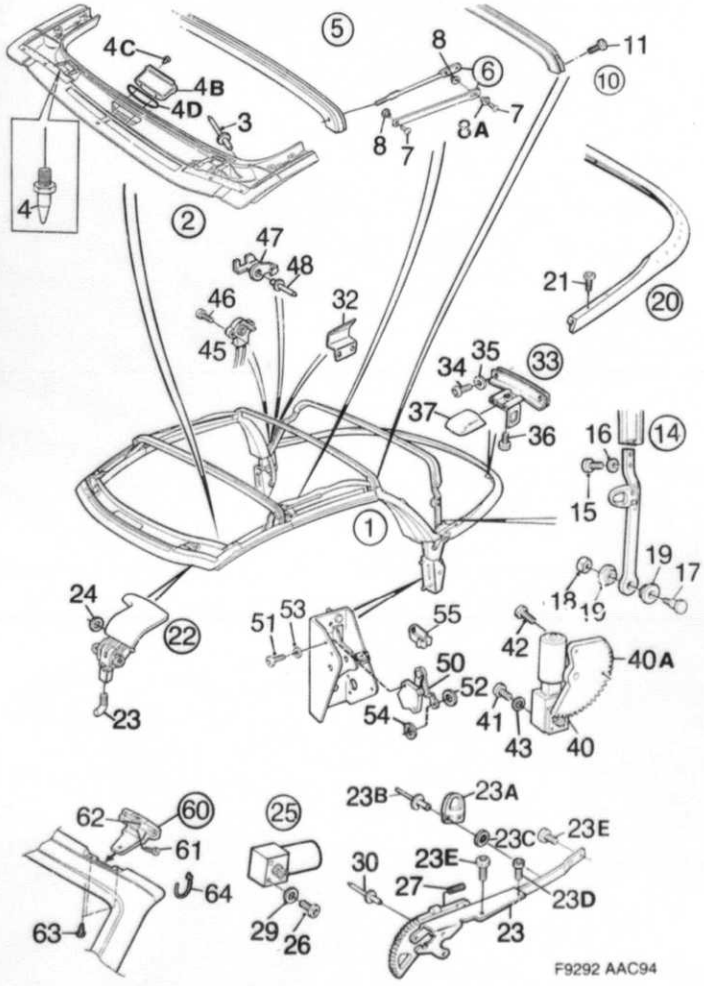

Car body

5-B04

Bow 1, 2, 3, 4 and 5
276) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5
276) Cabriolet

0236	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1	*45 56 486*		NLS – USE 4857173	1	Top stack	Suflettstativ	
0030	2	45 56 411		BOW NO. 1	1	.Bow	.Båge	6
0040	3	*45 56 015*		NLS – USE 4696894	6	..Blind rivet	..Blindnit	6
0050	3	47 67 752		ALTERNATIVE	6	..Screw	..Skruv	5
0060	4	47 66 895			2	..Locating pin	..Styrpinne	5
0070	4B	• 48 59 765			1	..Pocket	..Ficka	
0080	4C	• 79 74 421			2	..Screw	..Skruv	
0090	4D	49 01 393			1	..Sealing shape	..Tätningsprofil	5
0100		46 95 870		242)	1	..Tape	..Tape	
0110								
0150								
0160	5	*46 97 223*		BOW NO. 2 NLS – USE 4850749	1	.Bow	.Båge	5
0170	6	47 67 513		1996-	1	..Link rod kit	..Länkstängsats	
0180	7	46 96 837			3	...Bolt	...Bult	
0190	8	46 96 829			4	...Bushing	...Bussning	5
0200	8A	47 67 455			1	...Bushing	...Bussning	5
0230								
0240	10	44 94 753		BOW NO. 3	1	.Bow	.Båge	5
0250	11	45 55 629			4	..Screw	..Skruv	
0280								
0290	14	*44 94 761*		191) BOW NO. 4 NLS – USE 4851796	1	.Bow	.Båge	5
0300	14	*46 97 512*		192) -1995, BOW NO. 4 NLS – USE 4851796	1	.Bow	.Båge	5
0310	14	48 50 772		322) 1996-, BOW NO. 4	1	.Bow	.Båge	6
0320	14	48 51 796		323) BOW NO. 4	1	.Bow	.Båge	6
0330	15	45 55 629			4	..Screw	..Skruv	
0340	16	45 55 967			4	..Washer	..Bricka	
0350	17	45 55 843			2	..Bolt	..Bult	
0360	18	45 56 080			2	..Nut	..Mutter	5
0370	19	45 56 106			4	..Bushing	..Bussning	5
0400								
0410	20	*44 94 787*		BOW NO. 5 NLS – USE 4696902	1	.Bow	.Båge	5
0420	21	45 55 736			4	..Screw	..Skruv	
0430	21A	46 97 272			X	..Guide	..Styrning	6
0440	21B	• 48 56 993			X	..Screw	..Skruv	
0470								
0480	22	*44 94 811*		-1995, LH NLS – USE 4698213	1	.Lock	.Lås	5
0490	22	46 98 213		1996-, LH	1	.Lock	.Lås	5
0500	22	*44 94 829*		-1995, RH NLS – USE 4698221	1	.Lock	.Lås	5
0510	22	46 98 221		1996-, RH	1	.Lock	.Lås	5
0520	23	45 56 494		-1995	2	..Hook	..Krok	
0530	24	45 56 502		-1995	2	..Extension	..Förlängning	
0540								
0550	25	*45 56 536*		191) LH NLS	1	.Electric motor with ratchet	.Elmotor med kuggsegment	5
0570	25	*46 96 290*		192) -1995, LH NLS	1	.Electric motor with ratchet	.Elmotor med kuggsegment	5
0590	25	46 98 130		1996-, LH	1	.Electric motor with ratchet	.Elmotor med kuggsegment	5
0610								
0630	25	*45 56 544*		191) RH NLS	1	.Electric motor with ratchet	.Elmotor med kuggsegment	5


191. Ch. -S701650
192. Ch. S701650
242. Ch. S701650-
276. Ch. -T700641)
322. Ch. -T7003167
323. Ch. T7003168-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

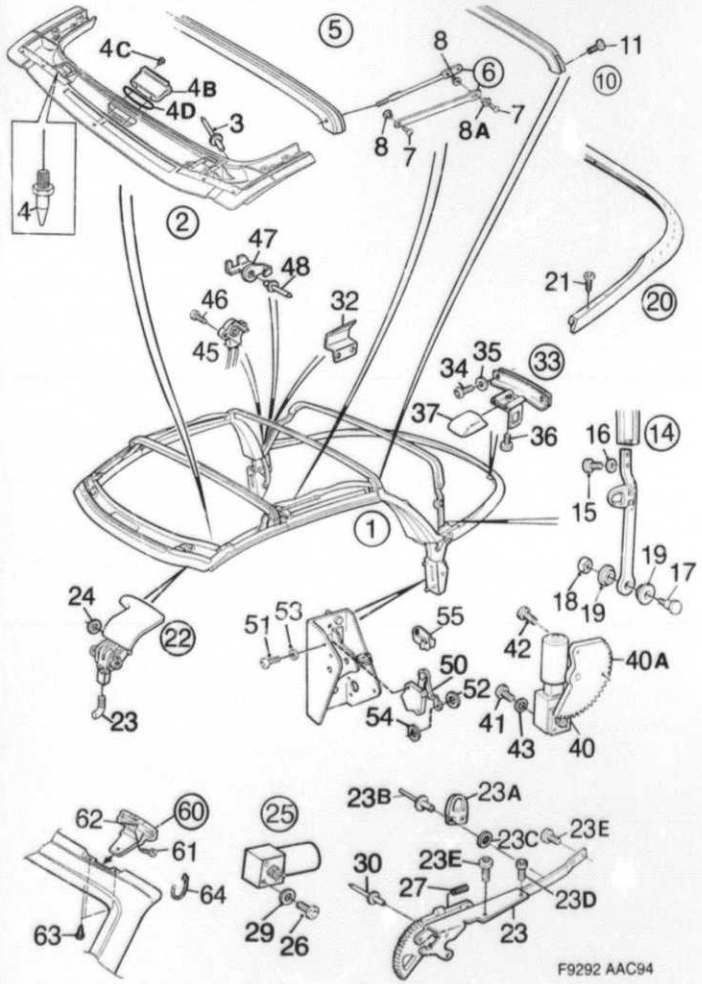

Car body

5 –B06

Bow 1, 2, 3, 4 and 5

276) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5

276) Cabriolet

0236	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0640	25	*46 96 308*		192) -1995, RH	1	.Electric motor	.Elmotor	5
0650				NLS		with ratchet	med kuggsegment	
0660	25	46 98 148		1996-, RH	1	.Electric motor	.Elmotor	5
0670						with ratchet	med kuggsegment	
0680								
0690	26	45 55 710			3	..Screw	..Skruv	
0700	27	45 55 744			1	..Screw	..Skruv	
0710	29	45 55 959			3	..Washer	..Bricka	
0720	30	45 56 023			3	..Blind rivet	..Blindnit	6
0730	32	45 59 951			2	Cover	Avtäckning	
0740								
0750	33	44 94 795			1	Bracket	Hållare	5
0760	34	45 55 629			4	.Screw	.Skruv	
0770	35	45 57 666			4	.Washer	.Bricka	
0780	36	80 59 537			2	Screw	Skruv	5
0790	37	45 59 431		211) LH	1	Cover	Avtäckning	
0800	37	45 59 456		211) RH	1	Cover	Avtäckning	
0810								
0820	40	*45 56 635*		191) LH	1	Electric motor	Elmotor	5
0830				NLS – USE 4850715		with ratchet	med kuggsegment	
0840	40	*46 96 316*		192) LH	1	Electric motor	Elmotor	5
0850				NLS – USE 4850715		with ratchet	med kuggsegment	
0860	40	*45 56 643*		191) RH	1	Electric motor	Elmotor	5
0870				NLS – USE 4850624		with ratchet	med kuggsegment	
0880	40	*46 96 324*		192) RH	1	Electric motor	Elmotor	5
0890				NLS – USE 4850624		with ratchet	med kuggsegment	
0900								
0910	40A	• 48 57 264		LH	1	Ratchet	Kuggsegment	5
0920	40A	• 48 57 256		RH	1	Ratchet	Kuggsegment	5
0930	41	45 55 710			4	Screw	Skruv	
0940	42	45 55 850			2	Bolt	Bult	
0950	43	45 55 959			4	Washer	Bricka	
0960								
0970	45	*45 56 585*		191) RH NLS – USE 4696985	1	Potentiometer	Potentiometer	
0980	45	*46 96 332*		192)-1995 NLS – USE 4696985	1	Potentiometer	Potentiometer	
0990	45	*46 98 163*		1996- NLS – USE 4696985	1	Potentiometer	Potentiometer	
1000	46	45 55 785			2	Screw	Skruv	
1010	47	45 59 407			1	Bracket	Fäste	
1020	48	79 72 516			1	Rivet	Nit	5
1030								
1040	50	*45 56 593*		-1995 NLS – USE 4697017	1	Potentiometer	Potentiometer	
1050	50	*46 98 155*		1996- NLS – USE 4697017	1	Potentiometer	Potentiometer	
1060								
1070	51	45 55 637			2	Screw	Skruv	
1080	52	45 55 926			2	Washer	Bricka	
1090	53	45 55 983			1	Washer	Bricka	
1100	54	45 56 098			1	Quick nut	Snabbmutter	5
1110								
1120	55	45 57 658			4	Clip	Clips	
1130								
1140	60	*45 59 977*		191) NLS – USE 4695987	2	Lock	Lås	5
1150	60	46 95 987		192)	2	Lock	Lås	5
1160	60	46 95 987			2	Lock	Lås	5
1170	61	43 29 009		191)	2	.Clip	.Clips	5
1180	61	46 85 095		192)	2	.Screw	.Skruv	
1190	62	*45 59 985*		191) NLS – USE 4695979	1	.Microswitch	.Mikrobrytare	5
1200	62	46 95 979		192)	1	.Microswitch	.Mikrobrytare	5


191. Ch. -S7016595
192. Ch. S7016596-
211. Ch. -S7019092
276. Ch. -T7006411

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

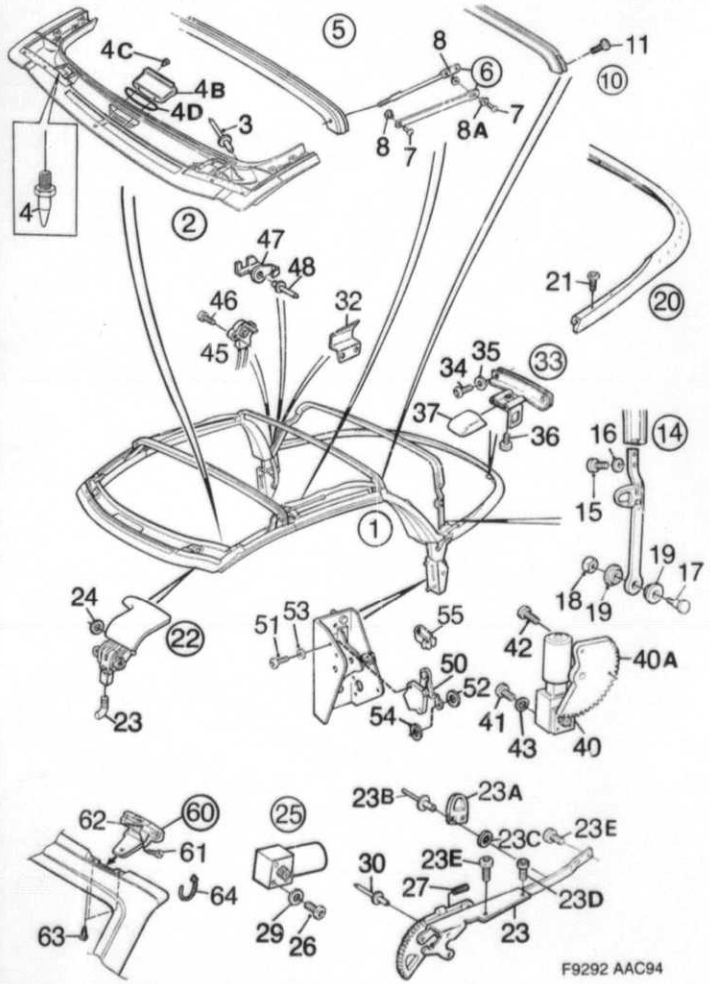

Car body

5-B08

Bow 1, 2, 3, 4 and 5

276) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5

276) Cabriolet

0236	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1210	63	79 75 451			6	Screw	Skruv	5
1220	64	85 52 663			2	Tensioning band	Spännband	5


276. Ch. -T7006411

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

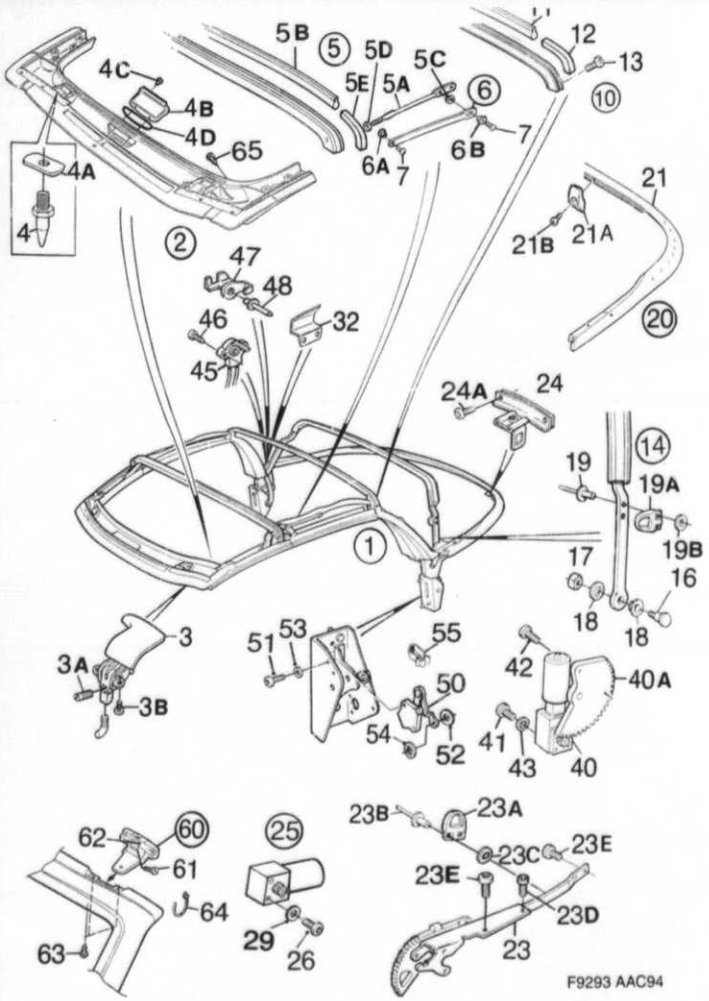

Car body

5 –B10

Bow 1, 2, 3, 4 and 5
277,375) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5
277,375) Cabriolet

0238	Pos		Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1		*48 50 848*		NLS – USE 4857173	1	Folding top	Suffiett	5
0030	2		46 96 571		BOW NO. 1	1	.Bow	.Båge	6
0040	3		46 98 213		LH	1	..Lock	..Lås	5
0050	3		46 98 221		RH	1	..Lock	..Lås	5
0060	3A	•	48 59 781			1	...Screw	...Skruv	
0070	3B		45 55 629			6	..Screw	..Skruv	
0080	4		47 66 895			2	..Locating pin	..Styrpinne	5
0090	4A	•	48 59 799			1	..Nut	..Mutter	
0100	4B	•	48 59 765			1	..Pocket	..Ficka	
0110	4C	•	79 74 421			2	..Screw	..Skruv	
0120	4D		49 01 393			1	..Sealing shape	..Tätningsprofil	5
0130					See page 8A-015, 5-A16	1	..Cable	..Wire	
0140					See page 8A-015, 5-A16	2	..Base	..Underlägg	
0150									
0160	5		48 50 749		BOW NO. 2	1	.Bow	.Båge	6
0170	5A		46 97 280		LH	1	..Link arm	..Länkarm	5
0180	5A		46 96 811		RH	1	..Link arm	..Länkarm	5
0190	5B		49 01 385			1	..Sealing shape	..Tätningsprofil	5
0200	5C		46 96 829			2	..Bushing	..Bussning	5
0210	5D	•	49 01 153			2	..Nut	..Mutter	5
0220	5E	•	48 57 645			2	..Tape	..Tape	
0230									
0240	6		46 97 298			1	.Link arm	.Länkarm	5
0250	6A		46 96 829			1	..Bushing	..Bussning	5
0260	6B		47 67 455			1	..Bushing	..Bussning	5
0270									
0280	7		46 96 837			3	..Bolt	..Bult	
0290									
0300	10		48 50 756		BOW NO. 3	1	.Bow	.Båge	6
0310	11		49 01 385			1	..Sealing shape	..Tätningsprofil	5
0320	12	•	48 57 645			2	..Tape	..Tape	
0330	13		48 50 764			4	.Screw	.Skruv	
0340									
0350	14		48 51 796		BOW NO. 4	1	.Bow	.Båge	6
0360	16		45 55 843			2	.Bolt	.Bult	
0370	17		45 56 080			2	.Nut	.Mutter	5
0380	18		45 56 106			4	.Bushing	.Bussning	5
0390									
0400	19		46 96 894			4	.Rivet	.Nit	5
0410	19A		46 96 886			2	.Stop plate	.Stopplatta	6
0420	19B		80 29 944			4	.Washer	.Bricka	5
0430									
0440	20		48 50 780		BOW NO. 5	1	.Bow	.Båge	6
0450							with ratchet	med kuggsegment	
0460	21		46 96 902		BOW NO. 5	1	..Bow	..Båge	6
0470	21A		46 97 272			2	..Guide	..Styrning	6
0480	21B	•	48 56 993			2	..Screw	..Skruv	
0490									
0500	23		48 50 798		LH	1	..Bracket	..Konsol	5
0510							with ratchet	med kuggsegment	
0520	23		48 50 806		RH	1	..Bracket	..Konsol	5
0530							with ratchet	med kuggsegment	
0540	23A		46 96 886			2	...Stop plate	...Stopplatta	6
0550	23B		46 96 894			4	...Rivet	...Nit	5
0560	23C		80 29 944			4	...Washer	...Bricka	5
0570	23D		45 55 629			2	..Screw	..Skruv	
0580	23E	•	48 56 993			4	..Screw	..Skruv	
0590									
0600	24		48 50 814		LH	1	..End plate	..Slutbleck	5
0610	24		48 50 822		RH	1	..End plate	..Slutbleck	5
0620	24A	•	48 56 993			4	..Screw	..Skruv	


277. Ch. T7006412-
375. Ch. -V7008823

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

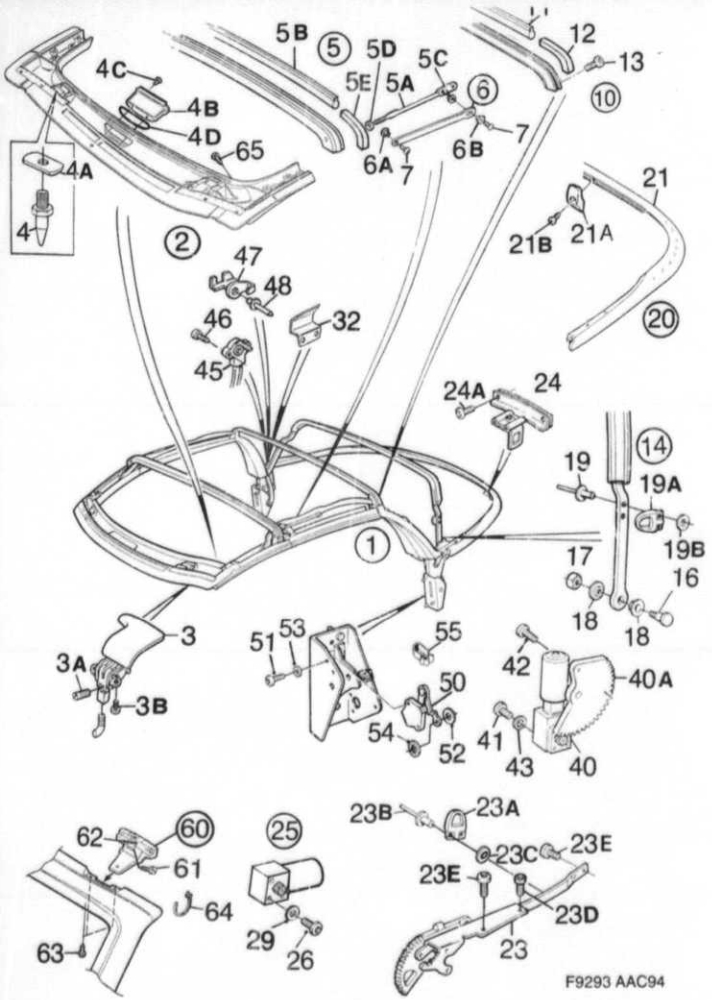

5-B12

Car body
Bow 1, 2, 3, 4 and 5
277,375) Convertible

Karosskrov
Båge 1, 2, 3, 4 och 5
277,375) Cabriolet

0238	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630								
0640	25	48 50 707		LH	1	Electric motor	Elmotor	5
0650	25	48 50 616		RH	1	Electric motor	Elmotor	5
0660								
0670	26	80 59 628			3	Screw	Skruv	5
0690	29	45 55 959			3	Washer	Bricka	
0700	32	45 59 951			2	Cover	Avtäckning	
0710								
0720	40	48 50 715		LH	1	Electric motor	Elmotor	5
0730	40	48 50 624		RH	1	Electric motor	Elmotor	5
0760	40A	* 48 57 264		LH	1	Ratchet	Kuggsegment	5
0770	40A	* 48 57 256		RH	1	Ratchet	Kuggsegment	5
0780	41	80 59 628			4	Screw	Skruv	5
0790	42	45 55 850			2	Bolt	Bult	
0800	43	45 55 959			4	Washer	Bricka	
0810								
0820	45	46 96 985		RH	1	Potentiometer	Potentiometer	
0830	46	45 55 785			2	Screw	Skruv	
0840	47	45 59 407			1	Bracket	Fäste	
0850	48	79 72 516			1	Rivet	Nit	5
0860								
0870	50	46 97 017			1	Potentiometer	Potentiometer	
0880	51	45 55 637			2	Screw	Skruv	
0890	52	45 55 926			2	Washer	Bricka	
0900	53	45 55 983			1	Washer	Bricka	
0910	54	45 56 098			1	Quick nut	Snabbmutter	5
0920								
0930	55	45 57 658			4	Clip	Clips	
0940								
0950	60	46 95 987			2	Lock	Lås	5
0960	61	46 85 095			2	.Screw	.Skruv	
0970	62	46 95 979			1	.Microswitch	.Mikrobrytare	5
0980	63	79 75 451			6	Screw	Skruv	5
0990	64	85 52 663			2	Tensioning band	Spännband	5
1000								
1010	65	*45 56 015*		NLS – USE 4696894	6	Blind rivet	Blindnit	6
1020	65	47 67 752		ALTERNATIVE	6	Screw	Skruv	5
1030								
1040		46 95 870			1	Tape	Tape	
1050		47 67 455			1	Bushing	Bussning	5


277. Ch. T7006412–
375. Ch. –V7008823

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

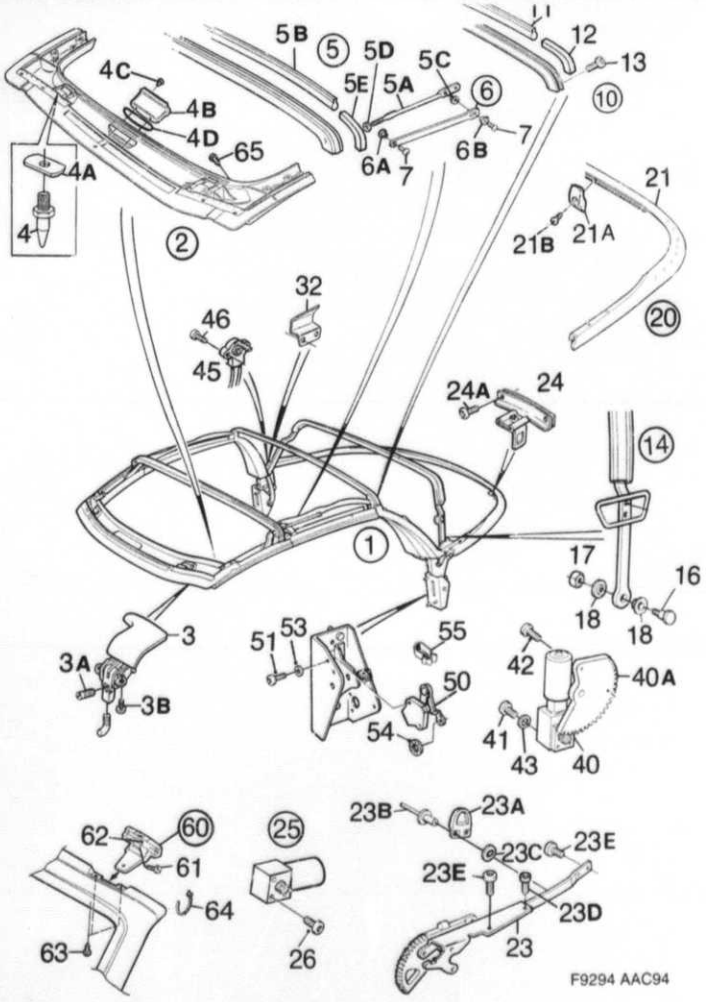

Car body

5-B14

Bow 1, 2, 3, 4 and 5

376) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5

376) Cabriolet

0239	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	48 57 173			1	Top stack	Suflettstativ	
0020								
0030	2	46 96 571		BOW NO. 1	1	.Bow	.Båge	6
0040	3	46 98 213		LH	1	..Lock	..Lås	5
0050	3	46 98 221		RH	1	..Lock	..Lås	5
0060	3A	• 48 59 781			1	...Screw	...Skruv	
0070	3B	45 55 629			6	..Screw	..Skruv	
0080	4	47 66 895			2	..Locating pin	..Styrpinne	5
0090	4A	• 48 59 799			1	..Nut	..Mutter	
0100	4B	• 48 59 765			1	..Pocket	..Ficka	
0110	4C	• 79 74 421			2	..Screw	..Skruv	
0120	4D	49 01 393			1	..Sealing shape	..Tätningsprofil	5
0130				See page 8A-019, 5-A20	1	..Cable	..Wire	
0140				See page 8A-019, 5-A20	2	..Base	..Underlägg	
0150								
0160	5	48 50 749		BOW NO. 2	1	.Bow	.Båge	6
0170	5A	46 97 280		LH	1	..Link arm	..Länkarm	5
0180	5A	46 96 811		RH	1	..Link arm	..Länkarm	5
0190	5B	49 01 385			1	..Sealing shape	..Tätningsprofil	5
0200	5C	46 96 829			2	..Bushing	..Bussning	5
0210	5D	• 49 01 153			2	..Nut	..Mutter	5
0220	5E	• 48 57 645			2	..Tape	..Tape	
0230								
0240	6	46 97 298			1	.Link arm	.Länkarm	5
0250	6A	46 96 829			1	..Bushing	..Bussning	5
0260	6B	47 67 455			1	..Bushing	..Bussning	5
0270								
0280	7	46 96 837			3	..Bolt	..Bult	
0290								
0300	10	48 50 756		BOW NO. 3	1	.Bow	.Båge	6
0310	11	49 01 385			1	..Sealing shape	..Tätningsprofil	5
0320	12	• 48 57 645			2	..Tape	..Tape	
0330	13	• 80 59 552			4	.Screw	.Skruv	5
0340								
0350	14	48 51 796		BOW NO. 4	1	.Bow	.Båge	6
0360	16	45 55 843			2	.Bolt	.Bult	
0370	17	79 65 767			2	.Lock nut	.Låsmutter	3
0380	18	45 56 106			6	.Bushing	.Bussning	5
0390								
0400	20	48 50 780		BOW NO. 5 ASSY	1	.Bow	.Båge	6
0410						with ratchet	med kuggsegment	
0420	21	46 96 902		BOW NO. 5	1	..Bow	..Båge	6
0430	21A	46 97 272			2	..Guide	..Styrning	6
0440	21B	• 48 56 993			2	..Screw	..Skruv	
0450								
0460	23	48 50 798		LH	1	..Bracket	..Konsol	5
0470						with ratchet	med kuggsegment	
0480	23	48 50 806		RH	1	..Bracket	..Konsol	5
0490						with ratchet	med kuggsegment	
0500	23A	46 96 886			2	...Stop plate	...Stopplatta	6
0510	23B	46 96 894			4	...Rivet	...Nit	5
0520	23C	80 29 944			4	...Washer	...Bricka	5
0530	23D	45 55 629			2	..Screw	..Skruv	
0540	23E	• 48 56 993			4	..Screw	..Skruv	
0550								
0560	24	48 50 814		LH	1	..End plate	..Slutbleck	5
0570	24	48 50 822		RH	1	..End plate	..Slutbleck	5
0580	24A	• 48 56 993			4	..Screw	..Skruv	
0590								
0600	25	48 50 707		LH	1	Electric motor	Elmotor	5
0610	25	48 50 616		RH	1	Electric motor	Elmotor	5
0620								


376. Ch. V7008824-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	5-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

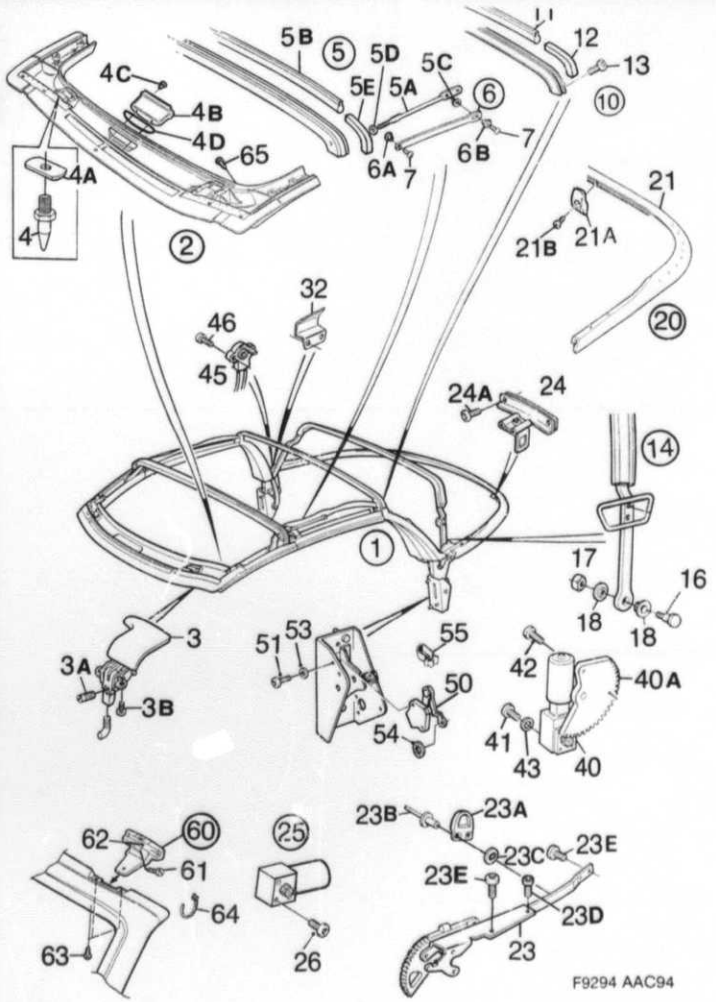

Car body

5-B16

Bow 1, 2, 3, 4 and 5

376) Convertible

Karosskrov

Båge 1, 2, 3, 4 och 5

376) Cabriolet

0239	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	26		80 59 628			6	Screw	Skruv	5
0640	32		45 59 951			1	Cover	Avtäckning	
0650									
0660	40		48 50 715		LH	1	Electric motor	Elmotor	5
0670	40		48 50 624		RH	1	Electric motor	Elmotor	5
0680	40A	*	48 57 264		LH	1	Ratchet	Kuggsegment	5
0690	40A	*	48 57 256		RH	1	Ratchet	Kuggsegment	5
0700			45 55 710			4	Screw	Skruv	
0710			45 55 850			2	Bolt	Bult	
0720			45 55 959			4	Washer	Bricka	
0730	41		80 59 628			4	Screw	Skruv	5
0740	42		48 57 249			4	Screw	Skruv	
0750									
0760	45		46 96 985		RH	1	Potentiometer	Potentiometer	
0770	46		80 55 592			2	Screw	Skruv	
0780									
0790	50		46 97 017			1	Potentiometer	Potentiometer	
0800	51		80 59 263			2	Screw	Skruv	5
0810	53		45 55 983			1	Washer	Bricka	
0820	54		45 56 098			1	Quick nut	Snabbmutter	5
0830									
0840	55		45 57 658			4	Clip	Clips	
0850									
0860	60		46 95 987			2	Lock	Lås	5
0870	61		46 85 095			2	.Screw	.Skruv	
0880	62		46 95 979			1	.Microswitch	.Mikrobrytare	5
0890	63		79 75 451			6	Screw	Skruv	5
0900	64		85 52 663			2	Tensioning band	Spännband	5
0910									
0920	65		47 67 752			6	Screw	Skruv	5
0930									
0940			46 95 870			1	Tape	Tape	


376. Ch. V7008824-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

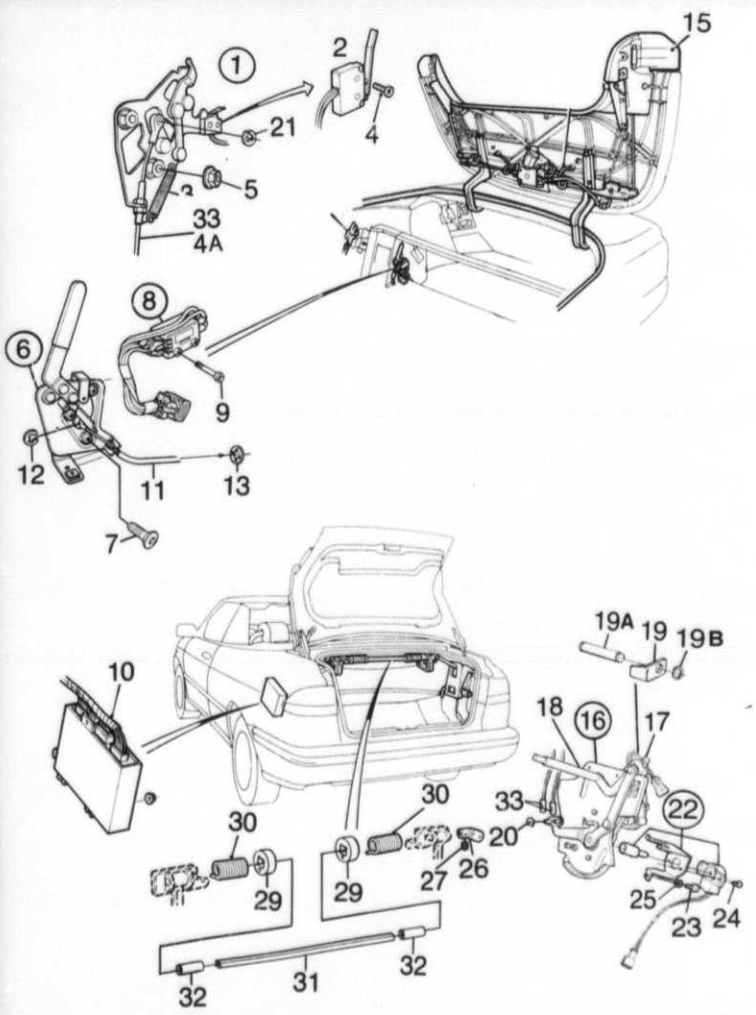

F9295 AAC94

Car body

5-B18

Tonneau cover

Part 1

Karosskrov

Suflettavtäckning

Del 1

0240	Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0010	1	45 57 955		204) LH	1	Lock	Lås	6
0020	1	45 57 963		204) RH	1	Lock	Lås	6
0030	1	46 96 225		205) LH	1	Lock	Lås	
0040	1	46 96 233		205) RH	1	Lock	Lås	
0050	2	45 58 805		204)	1	.Microswitch	.Mikrobrytare	
0060	2	46 96 241		205)	1	.Microswitch	.Mikrobrytare	
0070	3	45 58 862			1	.Tension spring	.Dragfjäder	
0080	4	45 59 381			2	.Screw	.Skruv	
0090	4A	45 57 971		205) LH	1	.Cable	.Wire	
0100	4A	45 57 989		205) RH	1	.Cable	.Wire	
0110	5	43 47 480			4	Nut	Mutter	5
0120								
0130	6	44 94 530			1	Control rod	Manöverstång	
0140	7	79 78 661		-1995	3	Hexagon screw	Sexkantsskruv	5
0150	7	79 22 354		1996-	3	Screw	Skruv	5
0160								
0170	8	45 56 478			1	Contact	Kontakt	
0180	9	45 55 652			2	.Screw	.Skruv	
0190								
0200	10	*45 58 144*		7,189) NLS - USE 4695961	1	Control unit	Styrenhet	
0210	10	46 95 961		7,190)	1	Control unit	Styrenhet	
0220	11	45 57 997			1	Cable	Wire	
0230	12	81 23 440			1	Clip	Clips	6
0240	13	45 58 342			1	Lock washer	Spärrbricka	5
0250								
0260	15			See page 8A-045, 5-B22	1	Top cover	Sufflettkåpa	
0270								
0280								
0290	16	45 57 898		-1997	1	Control	Manöverreglage	
0300	16	• 48 59 419		1998-	1	Control	Manöverreglage	
0310	17	45 58 003			1	.Motor	.Motor	
0320	18	• 45 57 906			1	.Link arm	.Länkarm	
0330	19	• 48 59 252			2	.Bracket	.Konsol	
0340	19A	• 48 59 260			1	.Pin	.Tapp	
0350	19B	• 80 47 623			2	.Lock ring	.Låsring	
0360								
0370	20	*44 94 506*		236) NLS - USE 8123440	2	Clip	Clips	6
0380	20	81 23 440		237)	2	Clip	Clips	6
0390	21	*44 94 506*		236) NLS - USE 8123440	1	Clip	Clips	6
0400	21	81 23 440		237)	1	Clip	Clips	6
0410								
0420	22	45 58 771			1	Potentiometer	Potentiometer	
0430	23	45 55 637			2	.Screw	.Skruv	
0440	24	80 59 230			2	.Screw	.Skruv	5
0450	25	45 55 926			2	.Washer	.Bricka	
0460								
0470	26	43 07 401			1	Universal joint	Universalknut	6
0480	27	45 55 686			4	Screw	Skruv	6
0490								
0500	29	45 56 296			2	Sleeve	Hylsa	
0510	30	44 94 514		LH	1	Spring	Fjäder	
0520	30	44 94 522		RH	1	Spring	Fjäder	
0530	31	44 92 898			1	Shaft	Axel	
0540	32	45 57 344			2	Pipe bracket	Rörhållare	
0550								
0560	33	45 57 971		LH	1	Cable	Wire	


7. Also available as exchange unit. Finns även som utbytesenhet.
189. Ch. -S7019624
190. Ch. S7019625-
204. Ch. -S7021627
205. Ch. S7021628-
236. Ch. -S7019798
237. Ch. S7019799-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

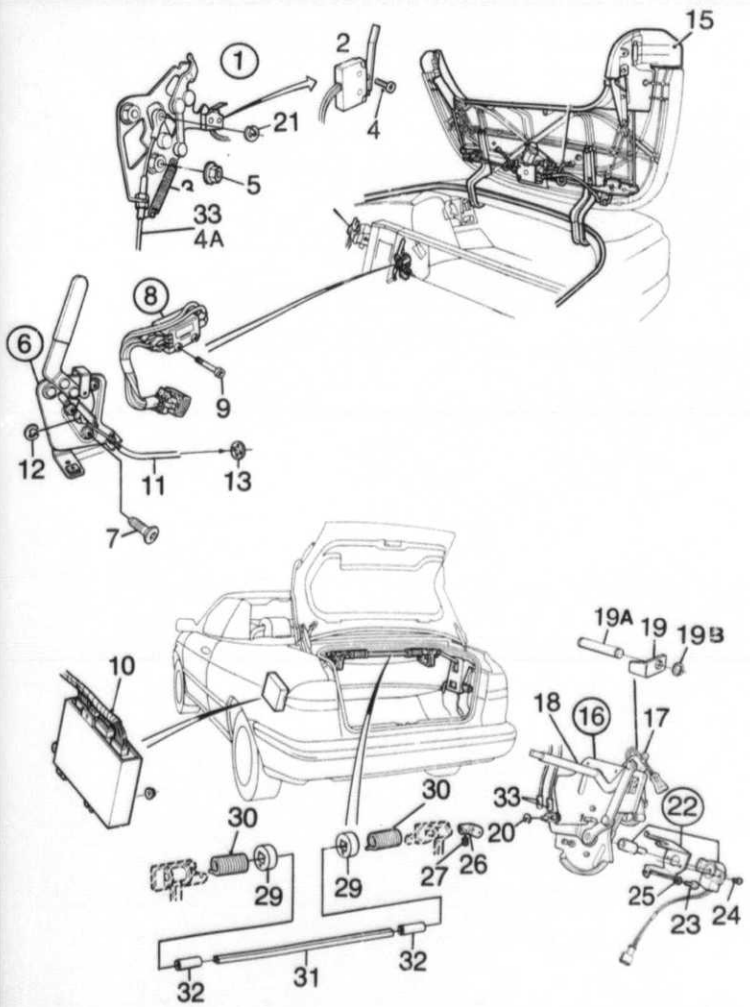

F9295 AAC94

Car body

5 -B20

Tonneau cover
Part 1

Karosskrov

Suflettavtäckning
Del 1


0240 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570 33	45 57 989		RH	1	Cable	Wire	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

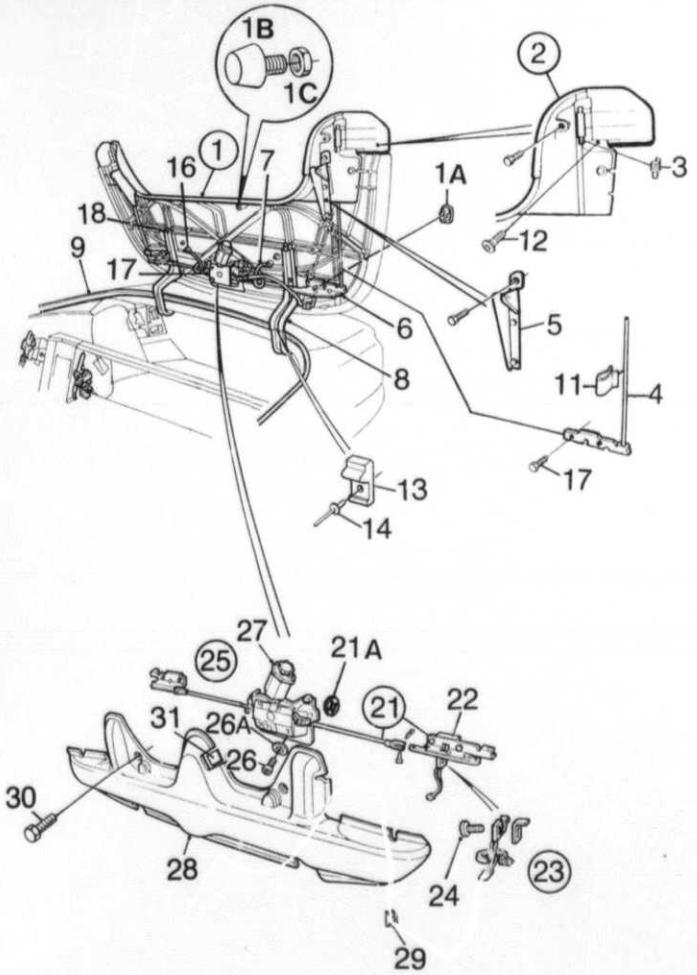

F7862 AAC94

Car body

5 -B22 Tonneau cover

Part 2

Karosskrov

Suflettavtäckning

Del 2

0242	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 56 999		110)	1	Top cover	Sufflettkåpa	
0020	1	45 57 062		210)	1	Top cover	Sufflettkåpa	
0030	1	45 57 070		100)	1	Top cover	Sufflettkåpa	
0040	1A	43 06 817			2	.Grommet	.Genomföring	
0050	1B	44 07 094		266)	2	.Adjustment screw	.Justerskruv	
0060	1C	79 65 775			2	.Nut	.Mutter	5
0070								
0080	2	45 57 013		110) LH	1	Cover	Avtäckning	
0090	2	45 57 021		110) RH	1	Cover	Avtäckning	
0100	2	45 57 096		210) LH	1	Cover	Avtäckning	
0110	2	45 57 104		210) RH	1	Cover	Avtäckning	
0120	2	45 57 112		100) LH	1	Cover	Avtäckning	
0130	2	45 57 120		100) RH	1	Cover	Avtäckning	
0140	3	43 07 039		LH	1	.Spring	.Fjäder	
0150	3	44 93 292		RH	1	.Spring	.Fjäder	
0160								
0170	4	45 56 973		379) LH	1	Driving device	Drivanordning	
0180	4	45 56 981		379) RH	1	Driving device	Drivanordning	
0190	4	48 51 655		380) LH	1	Driving device	Drivanordning	
0200	4	48 51 663		380) RH	1	Driving device	Drivanordning	
0210	5	44 05 213		LH	1	Lock fitting	Låsbeslag	
0220	5	44 07 128		RH	1	Lock fitting	Låsbeslag	
0230	6	44 05 221		379)	1	Crossmember	Tvärbalk	
0240	6	48 51 622		380)	1	Crossmember	Tvärbalk	
0250	7	45 50 752			2	Cable	Wire	5
0260	8	44 05 759		LH	1	Hinge	Gångjärn	5
0270	8	44 05 767		RH	1	Hinge	Gångjärn	5
0280	9	45 55 082		212)	1	Seal	Tätning	
0290	9	46 97 827		213)	1	Seal	Tätning	
0300	11	45 58 540			4	Clip	Clips	
0310	12	40 87 912			2	Plastic screw	Plastskruv	
0320	13	45 56 791			2	Rubber damper	Gummidämpare	
0330	14	82 35 178			2	Pop rivet	Popnit	5
0340	16	79 78 190		M8X20	2	Screw	Skruv	5
0350	17	79 72 466		M6X16	12	Screw	Skruv	5
0360	18	79 77 952			4	Hexagon nut	Sexkantsmutter	5
0370								
0380	21	46 96 464			2	Link rod kit	Länkstängsats	
0390	21A	94 41 221			1	.Clamp	.Klammer	5
0400								
0410	22	46 98 676		379) LH	1	Latch	Regel	
0420	22	46 98 684		379) RH	1	Latch	Regel	
0430	22	48 51 630		380) LH	1	Latch	Regel	
0440	22	48 51 648		380) RH	1	Latch	Regel	
0450		*79 18 469*		380) NLS	1	.Spring pin	.Rörpinne	
0460		79 68 076		380)	1	.Retaining ring	.Spärring	5
0470		48 56 837		380)	1	.Claw	.Back	
0480								
0490	23	*46 96 456*		-1996 NLS - USE 4858767	1	Contact	Kontakt	
0500	23	* 48 58 767		1997-	1	Microswitch	Mikrobrytare	
0510	24	45 55 611			2	.Screw	.Skruv	
0520								
0530	25	43 07 393		379)	1	Locking device	Låsanordning	
0540	25	48 51 671		380)	1	Locking device	Låsanordning	
0550	26	45 55 710			5	.Screw	.Skruv	

100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
212. Ch. -T7001218
213. Ch. T7001219-
266. Ch. -T7008170
379. Ch. -V7010305
380. Ch. V7010306-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-B24

Tonneau cover
Part 2

Suflettavtäckning
Del 2

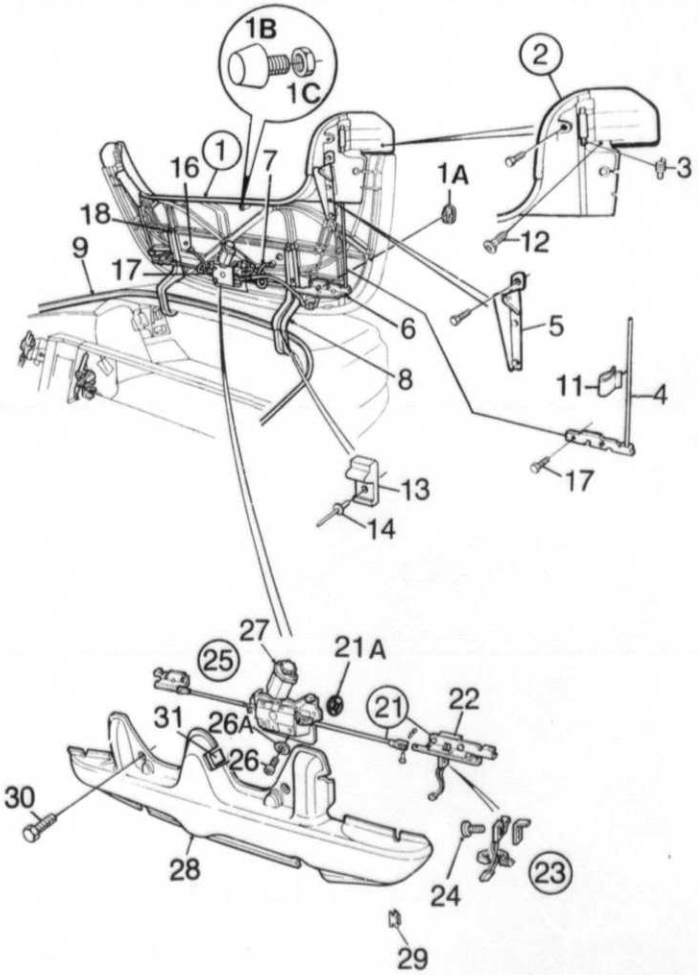

F7862 AAC94

0242	Pos	Part No/Artikelnr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
0560	26A	79 68 472			5	.Washer	.Bricka	5
0570	27	*45 56 445*		379) NLS – USE 7497878	1	.Motor	.Motor	
0580								
0590	28	*44 92 880*		379) NLS – USE 4852018	1	Upholstery	Klädsel	
0600	28	48 52 018		380)	1	Upholstery	Klädsel	
0610	29	44 93 193			6	Clip	Clips	5
0620	30	79 84 305		M6X12	2	Hexagon screw	Sexkantsskruv	5
0630	31	43 06 425		1996-	1	Tape	Tejp	5

379. Ch. -V7010305
380. Ch. V7010306-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-C02

Cowl plate
Torpedplåt

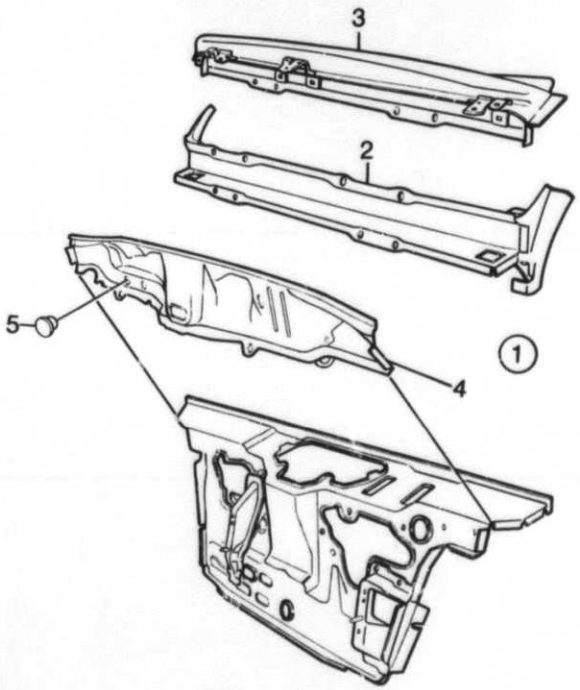

F6766 AAC94

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 37 648		LHD	1	Cowl plate	Torpedplåt	6
0020	1	43 37 671		RHD	1	Cowl plate	Torpedplåt	6
0030	2	43 37 689			1	.Cowl plate	.Torpedplåt	6
0040	3	43 37 697			1	.Cowl plate	.Torpedplåt	6
0050	4	43 37 713		LHD	1	.Cowl plate	.Torpedplåt	6
0060	4	43 37 739		RHD	1	.Cowl plate	.Torpedplåt	6
0070	5	85 75 599		RHD	2	Plug	Plugg	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-C04

Wheel housing, front
Hjulhus, främre

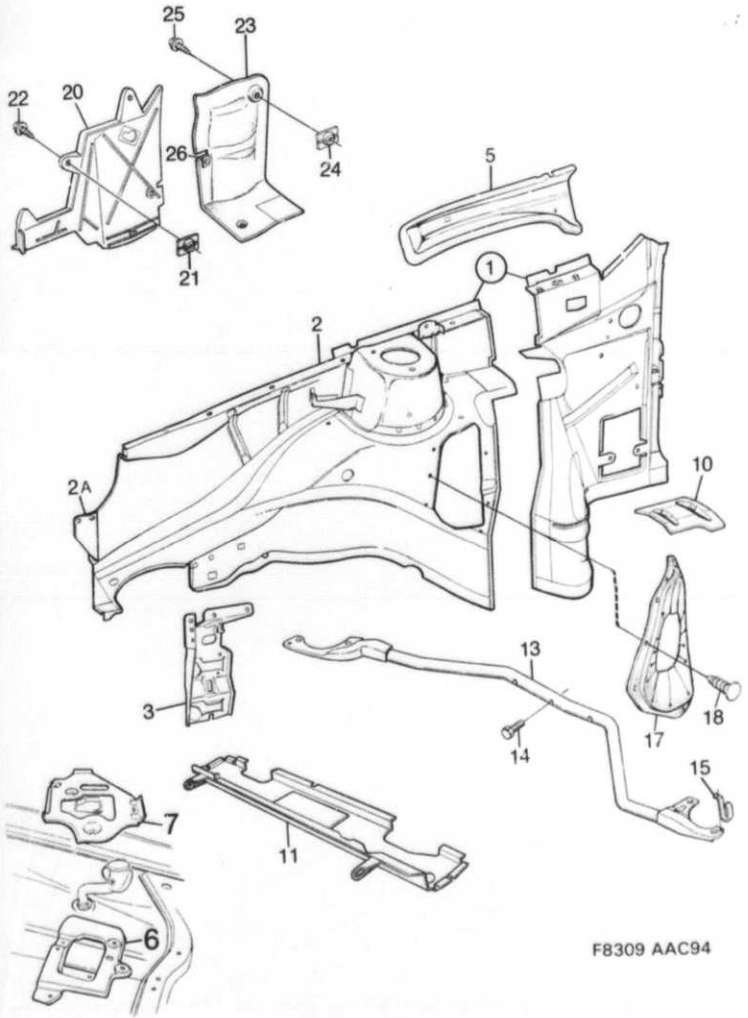

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 37 572		LH	1	Wheel housing	Hjulhus	5
0020	1	43 37 580		RH	1	Wheel housing	Hjulhus	5
0030	2	43 37 614		LH	1	.Wheel housing	.Hjulhus	3
0040	2	43 37 622		RH	1	.Wheel housing	.Hjulhus	3
0050	2A	43 34 678		LH	1	..Attaching plate	..Fästplåt	
0060	2A	43 34 686		RH	1	..Attaching plate	..Fästplåt	
0070	3	43 37 655		LH	1	.Fender brace	.Skärmstöd	6
0080	3	43 37 663		RH	1	.Fender brace	.Skärmstöd	6
0090								
0100	5	*43 37 499*		250) LH NLS – USE 4298444	1	Reinforcement	Förstärkning	4
0110	5	*43 37 507*		250) RH NLS – USE 4298451	1	Reinforcement	Förstärkning	4
0120	5	42 98 444		251) LH	1	Reinforcement	Förstärkning	4
0130	5	42 98 451		251) RH	1	Reinforcement	Förstärkning	4
0140								
0150								
0160	6	43 37 630			1	Attaching plate	Fästplåt	5
0170	7			See page 3A-005, 2-A06		Battery shelf	Batterihylla	
0180	10	43 37 515		LH	1	Reinforcement	Förstärkning	5
0190	10	43 37 523		RH	1	Reinforcement	Förstärkning	5
0200								
0210	11	43 37 531			1	Radiator member	Kylarbalk	
0220								
0230	13	43 37 325			1	Cross stay	Tvärstag	6
0240	14	79 78 109		-1995	3	Screw	Skruv	5
0250	14	79 82 325		1996-	3	Screw	Skruv	5
0260	15	43 38 752			2	Clamp	Klamma	
0270								
0280	17	43 33 894		LH	1	Dirt cover	Smutsskydd	
0290	17	43 33 902		RH	1	Dirt cover	Smutsskydd	
0300	18	43 33 589			15	Plug	Plugg	6
0310								
0320	20	43 34 751			1	Dirt cover	Smutsskydd	
0330	21	43 33 704			2	Expanding nut	Expandermutter	3
0340	22	79 77 465			2	Screw	Skruv	5
0350								
0360	23	43 34 454			1	Cover	Avtäckning	
0370	24	43 33 704			1	Expanding nut	Expandermutter	3
0380	25	79 77 465			2	Screw	Skruv	5
0390	26	79 77 523			1	Clip	Clips	5

250. Ch. -T2031500, -T7006400
251. Ch. T2031501-, T7006401-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -C06

Side member, front

Sidobalk, främre

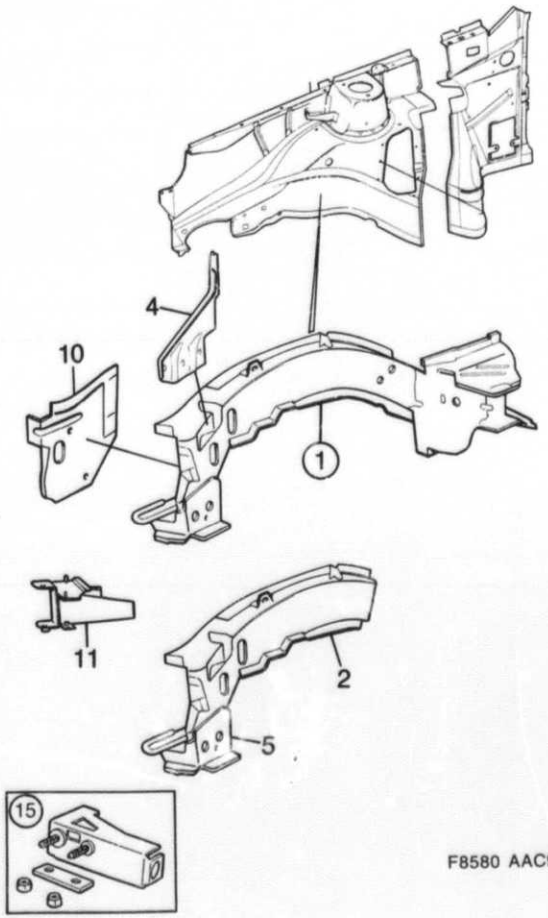

F8580 AAC94

0270	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 40 451*		-1995, LH NLS – USE 4865051	1	Side member	Sidobalk	
0020	1	*43 40 469*		-1995, RH NLS – USE 4865069	1	Side member	Sidobalk	
0030	1	48 65 051		1996-, LH	1	Side member	Sidobalk	
0040	1	48 65 069		1996-, RH	1	Side member	Sidobalk	
0050	2	43 40 477		LH	1	.Side member	.Sidobalk	
0060	2	42 95 580		RH	1	.Side member	.Sidobalk	
0070								
0080	4	43 40 493		LH	1	.Bracket	.Konsol	
0090	4	43 40 501		RH	1	.Bracket	.Konsol	
0100								
0110	5	43 40 279		LH	1	Support	Stöd	
0120	5	43 40 287		RH	1	Support	Stöd	
0130								
0170	10	43 40 394		LH	1	Cover plate	Täckplåt	
0180	10	43 40 402		RH	1	Cover plate	Täckplåt	
0190								
0200	11	43 37 556		LH	1	Spacer member	Distansbalk	5
0210	11	43 37 564		RH	1	Spacer member	Distansbalk	5
0220								
0230	15	44 81 438		TALLADEGA	1	Anchorage	Fäste	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02 3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -C08

Wheel housing, rear

Hjulhus, bakre

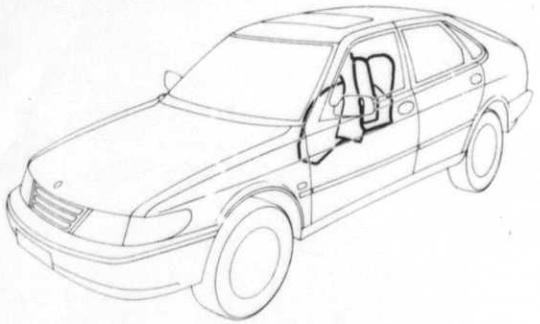

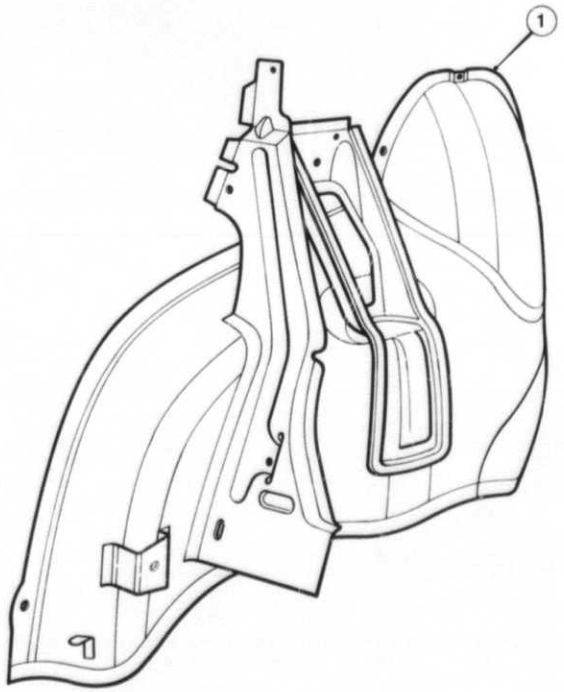

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 38 059		LH	1	Wheel housing	Hjulhus	6
0020	1	43 38 067		RH	1	Wheel housing	Hjulhus	6
0030								
0040	1	42 95 671		LH, CV	1	Wheel housing	Hjulhus	6
0050	1	42 95 689		RH, CV	1	Wheel housing	Hjulhus	6


F5010 AAC94

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

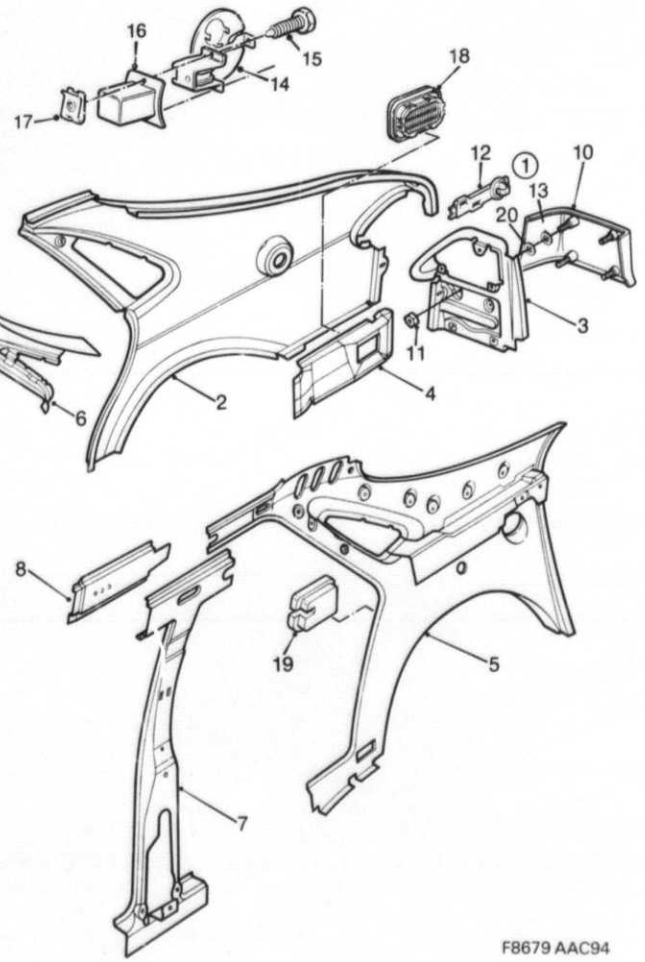

F8679 AAC94

Car body

5-C10 *Side plate* *5D*

Karosskrov

Sidoplåt *5D*

0415	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 38 117		LH	1	Side plate	Sidoplåt	4
0020	1	43 38 125		RH	1	Side plate	Sidoplåt	4
0030	2	43 37 838		LH	1	.Side plate	.Sidoplåt	4
0040	2	43 37 846		RH	1	.Side plate	.Sidoplåt	4
0050	3	43 37 853		LH	1	.Attaching frame	.Fästram	5
0060	3	43 37 861		RH	1	.Attaching frame	.Fästram	5
0070	4	43 37 879		LH	1	.Filling-in plate	.Fyllnadsplåt	5
0080	4	43 37 887		RH	1	.Filling-in plate	.Fyllnadsplåt	5
0090								
0100	5	43 38 018		LH	1	Side plate	Sidoplåt	6
0110	5	43 38 026		RH	1	Side plate	Sidoplåt	6
0120	6	43 37 911		LH	1	Reinforcement	Förstärkning	
0130	6	43 37 929		RH	1	Reinforcement	Förstärkning	
0140	7	43 38 794		LH	1	B-pillar	B-stolpe	6
0150	7	43 38 802		RH	1	B-pillar	B-stolpe	6
0160	8	43 39 297		LH	1	Cover plate	Täckplåt	
0170	8	43 39 305		RH	1	Cover plate	Täckplåt	
0180								
0190	10	*43 32 912*		-1994, LH NLS – USE 4296372	1	Corner filler panel	Hörnutfyllnadspanel	5
0200	10	*43 32 920*		-1994, RH NLS – USE 4296380	1	Corner filler panel	Hörnutfyllnadspanel	5
0210	10	42 96 372		1995-, LH	1	Corner filler panel	Hörnutfyllnadspanel	5
0220	10	42 96 380		1995-, RH	1	Corner filler panel	Hörnutfyllnadspanel	5
0230	11	79 77 929			8	Nut	Mutter	5
0240	12	43 39 768			2	Bracket	Fäste	5
0250	13	42 96 356		-1997	8	Rubber washer	Gummibricka	5
0260	13	85 37 623		1998-	8	Washer	Bricka	3
0270								
0280	14	*44 93 748*		-1995 NLS – USE 4766572	1	Tank hatch	Tanklucka	5
0290	14	47 66 572		1996-	1	Tank hatch	Tanklucka	5
0300	15	79 83 000			2	Hexagon screw	Sexkantsskruv	5
0310	16	43 06 619			1	Cover	Avtäckning	5
0320	17	40 87 672			2	Clip nut	Clipsmutter	5
0330								
0340	18	42 30 330			1	Air evacuation	Luftevakuering	5
0350	19	43 40 196			2	Seal	Tätning	5
0360								
0370	20	85 37 623		351)	4	Washer	Bricka	3


351. Ch. V2025870-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

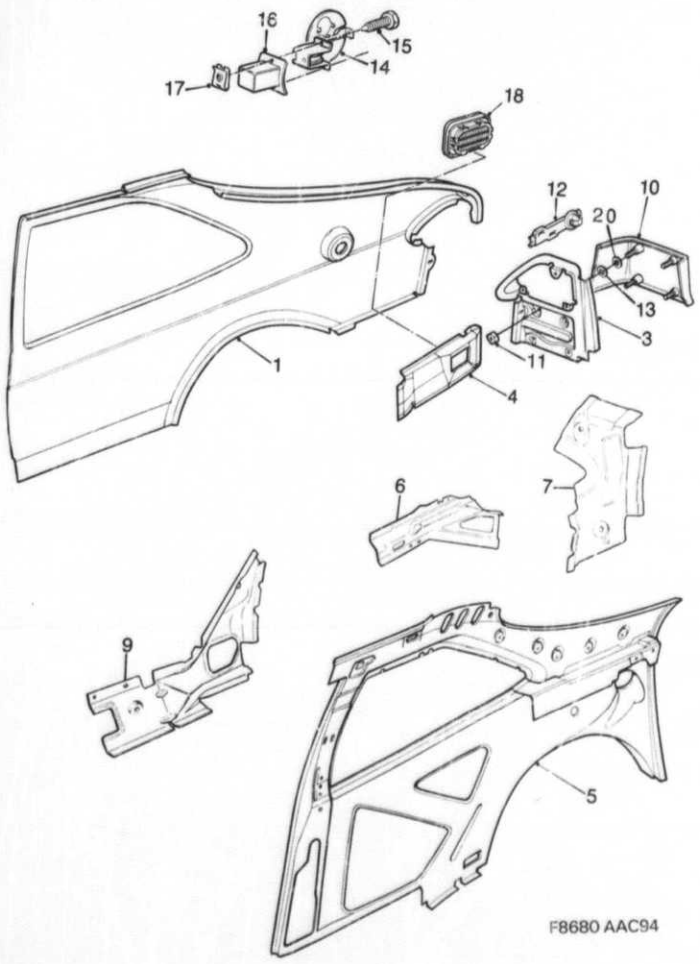

Car body

5-C12

Side plate

3D

Karosskrov

Sidoplåt

3D

0430	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 39 073		LH	1	Side plate	Sidoplåt	4
0020	1	43 39 081		RH	1	Side plate	Sidoplåt	4
0030	3	43 37 853		LH	1	.Attaching frame	.Fästram	5
0040	3	43 37 861		RH	1	.Attaching frame	.Fästram	5
0050	4	43 37 879		LH	1	.Filling-in plate	.Fyllnadsplåt	5
0060	4	43 37 887		RH	1	.Filling-in plate	.Fyllnadsplåt	5
0070								
0080	5	43 39 115		-1995, LH	1	Side plate	Sidoplåt	6
0090	5	43 39 123		-1995, RH	1	Side plate	Sidoplåt	6
0100	5	42 98 691		1996-, LH	1	Side plate	Sidoplåt	6
0110	5	42 98 709		1996-, RH	1	Side plate	Sidoplåt	6
0120								
0130	6	43 39 214		LH	1	Reinforcement	Förstärkning	
0140	6	43 39 222		RH	1	Reinforcement	Förstärkning	
0150	7	43 39 230		LH	1	Reinforcement	Förstärkning	
0160	7	43 39 248		RH	1	Reinforcement	Förstärkning	
0170	9	43 39 255		LH	1	Reinforcing plate	Förstärkningsplåt	
0180	9	43 39 263		RH	1	Reinforcing plate	Förstärkningsplåt	
0190								
0200	10	*43 32 912*		-1994, LH NLS – USE 4296372	1	Corner filler panel	Hörnutfyllnadspanel	5
0210	10	*43 32 920*		-1994, RH NLS – USE 4296380	1	Corner filler panel	Hörnutfyllnadspanel	5
0220	10	42 96 372		1995-, LH	1	Corner filler panel	Hörnutfyllnadspanel	5
0230	10	42 96 380		1995-, RH	1	Corner filler panel	Hörnutfyllnadspanel	5
0240	11	79 77 929			8	Nut	Mutter	5
0250	12	43 39 768			2	Bracket	Fäste	5
0260	13	42 96 356		-1997	8	Rubber washer	Gummibricka	5
0270	13	85 37 623		1998-	8	Washer	Bricka	3
0280								
0290	14	*44 93 748*		-1995 NLS – USE 4766572	1	Tank hatch	Tanklucka	5
0300	14	47 66 572		1996-	1	Tank hatch	Tanklucka	5
0310	15	79 83 000			2	Hexagon screw	Sexkantsskruv	5
0320	16	43 06 619			1	Cover	Avtäckning	5
0330	17	40 87 672			2	Clip nut	Clipsmutter	5
0340								
0350	18	42 30 330			1	Air evacuation	Luftevakuering	5
0360								
0370	20	85 37 623		351)	4	Washer	Bricka	3


351. Ch. V2025870-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

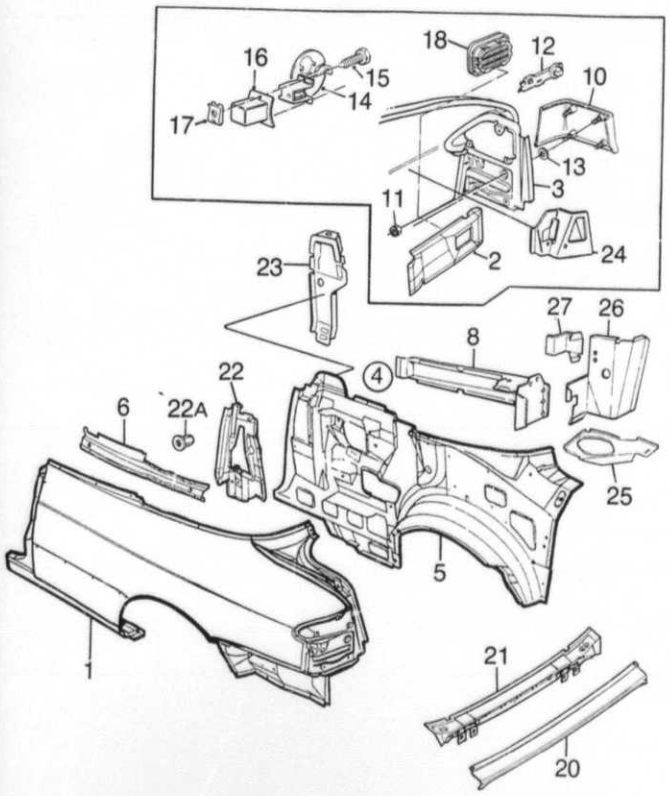

F8681 AAC94

5-C14

Car body
Side plate
CV

Karosskrov
Sidoplåt
CV

0440	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 95 655		LH	1	Side plate	Sidoplåt	4
0020	1	42 95 663		RH	1	Side plate	Sidoplåt	4
0030	2	43 37 879		LH	1	.Filling-in plate	.Fyllnadsplåt	5
0040	2	43 37 887		RH	1	.Filling-in plate	.Fyllnadsplåt	5
0050	3	43 37 853		LH	1	.Attaching frame	.Fästram	5
0060	3	43 37 861		RH	1	.Attaching frame	.Fästram	5
0070								
0080	4	42 96 612		LH	1	Side plate	Sidoplåt	6
0090	4	42 96 620		RH	1	Side plate	Sidoplåt	6
0100	5	42 95 697		LH	1	.Side plate	.Sidoplåt	6
0110	5	42 95 705		RH	1	.Side plate	.Sidoplåt	6
0120	6	42 95 713		LH	1	.Beam	.Balk	6
0130	6	42 95 721		RH	1	.Beam	.Balk	6
0140	8	42 95 937		LH	1	.Reinforcement	.Förstärkning	6
0150	8	42 95 945		RH	1	.Reinforcement	.Förstärkning	6
0160								
0170	10	42 96 372		LH	1	Corner filler panel	Hörnutfyllnadspanel	5
0180	10	42 96 380		RH	1	Corner filler panel	Hörnutfyllnadspanel	5
0190	11	79 77 929			8	Nut	Mutter	5
0200	12	43 39 768			2	Bracket	Fäste	5
0210	13	42 96 356		-1997	8	Rubber washer	Gummibricka	5
0220	13	85 37 623		1998-	8	Washer	Bricka	3
0230								
0240	14	*45 55 546*		-1995 NLS - USE 4766580	1	Tank hatch	Tanklucka	5
0250	14	47 66 580		1996-	1	Tank hatch	Tanklucka	5
0260	15	79 83 000			2	Hexagon screw	Sexkantsskruv	5
0270	16	43 06 619			1	Cover	Avtäckning	5
0280	17	40 87 672			2	Clip nut	Clipsmutter	5
0290								
0300	18	42 30 330			1	Air evacuation	Luftevakuering	5
0310								
0320	20	42 95 739			1	Crossmember	Tvärbalk	6
0330	21	42 95 747			1	Crossmember	Tvärbalk	6
0340								
0350	22	42 95 879		LH	1	Reinforcement	Förstärkning	6
0360	22	42 95 887		RH	1	Reinforcement	Förstärkning	6
0370	22A	73 99 454			2	Nut	Mutter	5
0380	23	42 96 117		LH	1	Bracket	Fäste	6
0390	23	42 96 125		RH	1	Bracket	Fäste	6
0400								
0410	24	42 95 648			1	Bracket	Fäste	6
0420	25	42 96 059		LH	1	Bracket	Fäste	6
0430	25	42 96 067		RH	1	Bracket	Fäste	6
0440	26	42 96 075		LH	1	Support plate	Stödplåt	6
0450	26	42 96 083		RH	1	Support plate	Stödplåt	6
0460	27	42 96 091		LH	1	Bracket	Fäste	6
0470	27	42 96 109		RH	1	Bracket	Fäste	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-C16

Door frame
5D

Dörram
5D

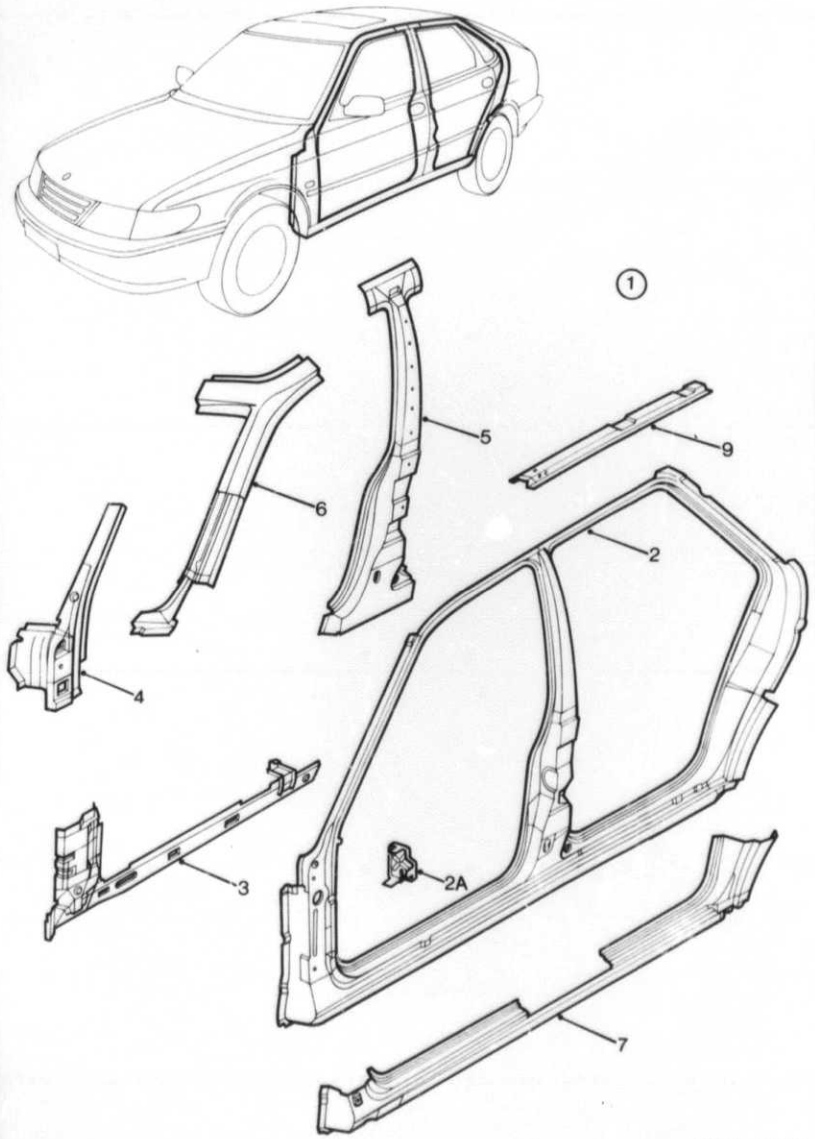

F5012 AAC94


0450	Pos	Par. No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 37 796		LH	1	Door frame	Dörram	6
0020	1	43 37 804		RH	1	Door frame	Dörram	6
0030	2	43 38 836		LH	1	.Door frame	.Dörram	6
0040	2	43 38 844		RH	1	.Door frame	.Dörram	6
0050	2A	43 39 313		LH	1	..Bulkhead	..Skott	5
0060	2A	43 39 321		RH	1	..Bulkhead	..Skott	5
0070	3	43 38 877		LH	1	.Sill	.Tröskel	6
0080	3	43 38 885		RH	1	.Sill	.Tröskel	6
0090	4	43 38 893		LH	1	.Tie plate	.Knutplåt	6
0100	4	43 38 901		RH	1	.Tie plate	.Knutplåt	6
0110	5	43 38 919		-1997, LH	1	.Reinforcement	.Förstärkning	6
0120	5	43 38 927		-1997, RH	1	.Reinforcement	.Förstärkning	6
0130	5	49 21 334		1998-, LH	1	.Reinforcement	.Förstärkning	
0140	5	49 21 342		1998-, RH	1	.Reinforcement	.Förstärkning	
0150								
0160	6	43 37 895		LH	1	A-pillar	A-stolpe	6
0170	6	43 37 903		RH	1	A-pillar	A-stolpe	6
0180	7	43 37 978		LH, PART OF 4337796	1	Sill	Tröskel	6
0190	7	43 37 986		RH, PART OF 4337804	1	Sill	Tröskel	6
0200	9	43 37 937		LH	1	Cover plate	Täckplåt	6
0210	9	43 37 94		RH	1	Cover plate	Täckplåt	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

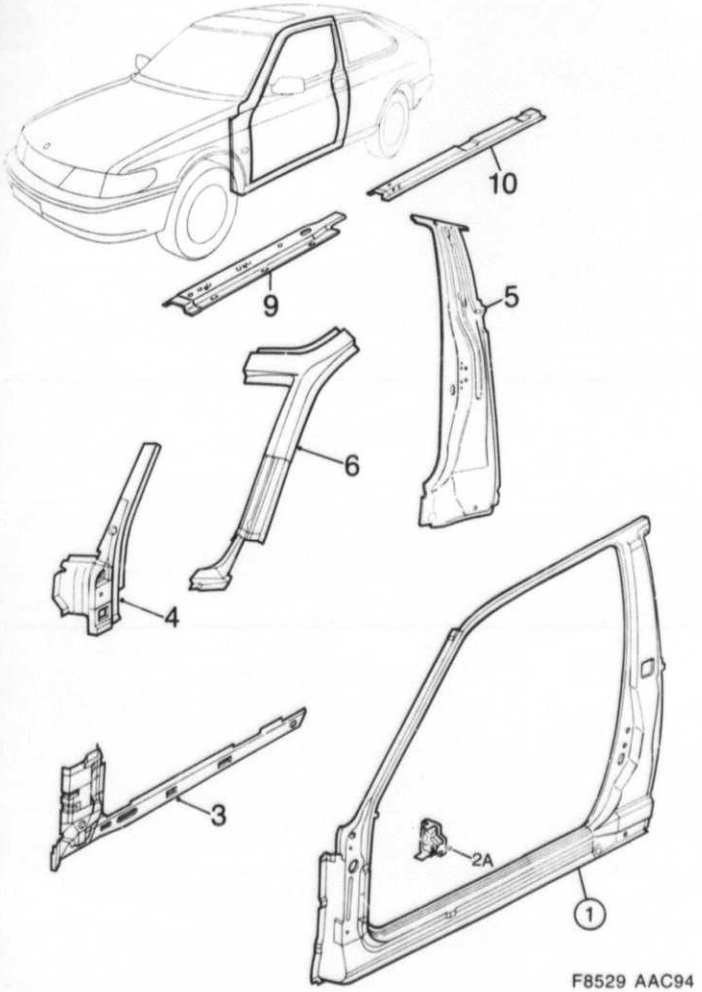

F8529 AAC94

Car body

5-C18 *Door frame* *3D*

Karosskrov

Dörram *3D*


0460	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0010	1	43 39 032		LH	1	Door frame	Dörram	6
0020	1	43 39 040		RH	1	Door frame	Dörram	6
0030	2A	43 39 313		LH	1	Bulkhead	Skott	5
0040	2A	43 39 321		RH	1	Bulkhead	Skott	5
0050	3	43 39 198		LH	1	Sill	Tröskel	
0060	3	43 39 206		RH	1	Sill	Tröskel	
0070	4	43 38 893		LH	1	Tie plate	Knutplåt	6
0080	4	43 38 901		RH	1	Tie plate	Knutplåt	6
0090								
0100	5	43 39 156		LH	1	Reinforcement	Förstärkning	6
0110	5	43 39 164		RH	1	Reinforcement	Förstärkning	6
0120								
0130	6	43 37 895		LH	1	A-pillar	A-stolpe	6
0140	6	43 37 903		RH	1	A-pillar	A-stolpe	6
0150	9	43 39 172		LH	1	Cover plate	Täckplåt	6
0160	9	43 39 180		RH	1	Cover plate	Täckplåt	6
0170	10	43 37 937		LH	1	Cover plate	Täckplåt	6
0180	10	43 37 945		RH	1	Cover plate	Täckplåt	6


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

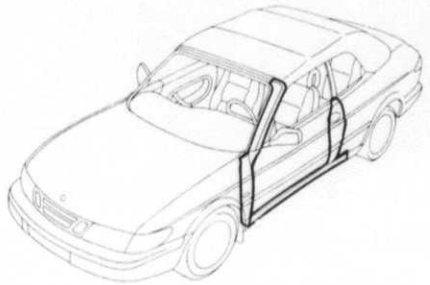

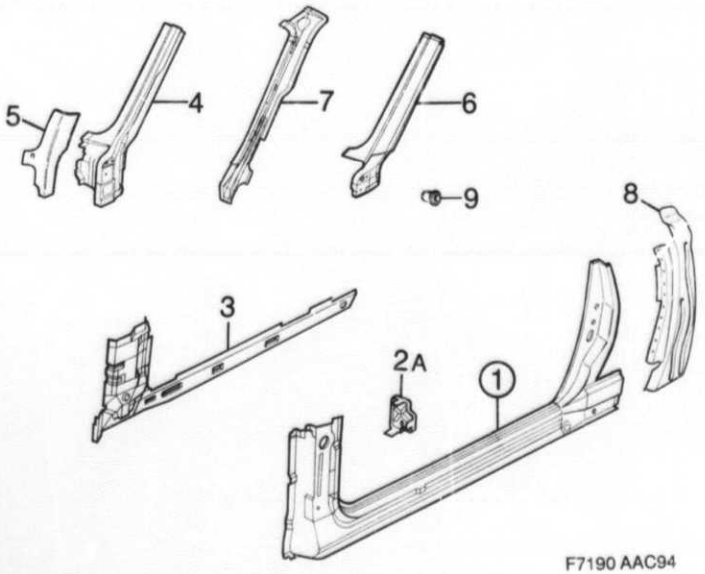

F7190 AAC94

Car body

5-C20 Door frame CV

Karosskrov

Dörram CV

0470	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 95 952		-1997, LH	1	Door frame	Dörram	6
0020	1	42 95 960		-1997, RH	1	Door frame	Dörram	6
0030	1	* 49 22 175		1998-, LH	1	Door frame	Dörram	
0040	1	* 49 22 183		1998-, RH	1	Door frame	Dörram	
0050	2A	43 39 313		LH	1	Bulkhead	Skott	5
0060	2A	43 39 321		RH	1	Bulkhead	Skott	5
0070	3	42 95 994		LH	1	Sill	Tröskel	6
0080	3	42 96 000		RH	1	Sill	Tröskel	6
0090	4	42 96 018		LH	1	Tie plate	Knutplåt	6
0100	4	42 96 026		RH	1	Tie plate	Knutplåt	6
0110	5	42 96 596		LH	1	Reinforcement	Förstärkning	
0120	5	42 95 604		RH	1	Reinforcement	Förstärkning	
0130								
0140	6	42 96 034		LH	1	Pillar	Stolpe	6
0150	6	42 96 042		RH	1	Pillar	Stolpe	6
0160	7	42 95 978		LH	1	Reinforcement	Förstärkning	6
0170	7	42 95 986		RH	1	Reinforcement	Förstärkning	6
0180								
0190	8	42 95 853		LH	1	Reinforcement	Förstärkning	6
0200	8	42 95 861		RH	1	Reinforcement	Förstärkning	6
0210								
0220	9	82 72 635		HOLE Ø 10MM	2	Plug	Plugg	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-C22

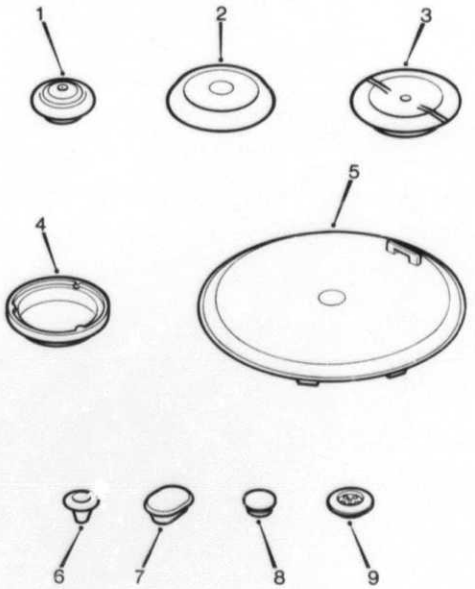

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 33 480		HOLE Ø 20MM	X	Plug	Plugg	5
0020	2	43 33 498		HOLE Ø 35MM	X	Plug	Plugg	5
0030	3	43 33 506		HOLE Ø 35MM	X	Plug	Plugg	5
0040	4	43 33 498		HOLE Ø 35MM (4333514)	X	Plug	Plugg	5
0050	5	43 33 548		HOLE Ø 108MM	X	Plug	Plugg	5
0060	6	43 33 563		HOLE Ø 8MM	X	Plug	Plugg	5
0070	7	92 67 915		OVAL HOLE Ø 12-16MM	X	Plug	Plugg	5
0080	8	71 62 308		HOLE Ø 10MM	X	Plug	Plugg	5
0090	8	92 68 178		HOLE Ø 16MM	X	Plug	Plugg	5
0100	8	92 67 808		HOLE Ø 20MM	X	Plug	Plugg	5
0110	9	95 07 666			X	Grommet	Genomföring	5

F5013 AAC94

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Door, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-C24

Hood, hinges and locks
Huv, gångjärn och lås

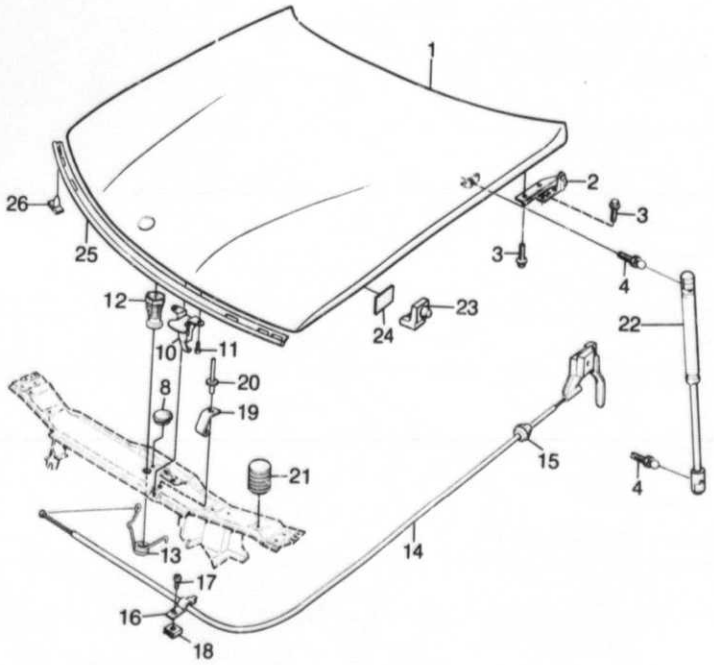

F7863 AAC94

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 28 779		278)	1	Bonnet	Motorhuv	3
0020	2	43 28 787		LH	1	Hinge	Gångjärn	3
0030	2	43 28 795		RH	1	Hinge	Gångjärn	3
0040	3	79 78 430			8	Screw	Skruv	
0050	4	44 93 912			4	Ballpin	Kultapp	5
0060	8	92 68 186			1	Plug	Plugg	5
0070	10	*43 21 782*		-1995 NLS – USE 4695151	1	Catch	Hake	3
0080	10	46 95 151		1996-	1	Catch	Hake	3
0090	11	79 78 091		-1994	2	Screw	Skruv	5
0100	11	79 84 305		1995-	2	Hexagon screw	Sexkantsskruv	5
0110	12	43 21 774			1	Bonnet lock	Huvlås	3
0120	13	43 06 312			1	Spring	Fjäder	5
0130	14	43 21 790		337) LHD	1	Hood lock wire	Huvlåswire	2
0140	14	*45 50 463*		337) RHD NLS – USE 4853750	1	Hood lock wire	Huvlåswire	2
0150	14	48 54 097		338) LHD	1	Hood lock wire	Huvlåswire	
0160	14	48 53 750		338) RHD	1	Hood lock wire	Huvlåswire	
0170	15	43 21 816		-1994	1	Grommet	Genomföring	4
0180	15	42 49 009		1995-	1	Grommet	Genomföring	3
0190	16	43 21 808			1	Clamp	Klämma	5
0200	17	79 22 354		262)	1	Screw	Skruv	5
0210	17	79 85 948		263)	1	Screw	Skruv	5
0220	18	79 67 995			1	Clip nut	Clipsmutter	3
0230	19	43 21 824			1	Wear protection	Slitskydd	
0240	20	98 49 514		-1995	1	Rivet	Nit	5
0250	20	79 72 516		1996-	1	Rivet	Nit	5
0260	21	43 04 234			2	Rubber buffer	Gummibuffert	4
0270	22	43 23 994			2	Gas spring	Gasfjäder	3
0280	23	43 21 907		-1995	2	Guide	Styrning	
0290	23	46 95 136		1996-	2	Guide	Styrning	
0300	24	46 95 144		1996-	2	Protective tape	Skyddstejp	
0310	25	43 21 881			1	Seal	Tätning	4
0320	26	90 87 289			12	.Clip	.Clips	5


262. Ch. -T2036002
263. Ch. T2036003-
278. Up to and including chassis numbers S2021625 and S7016783, the bonnet's washer jets must also be replaced by jets of the latest design. T.o.m Chassinummer S2021625, S7016783, måste även huvens spolarmunstycken bytas till senaste utförande.
337. Ch. -V2025266, -V7004594
338. Ch. V2025267-, V7004595-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-C04
Complete sets	5-G16

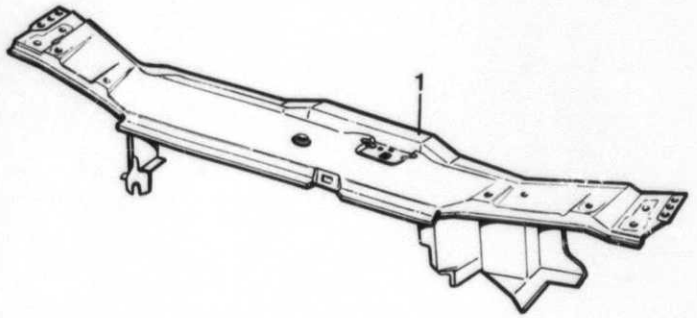

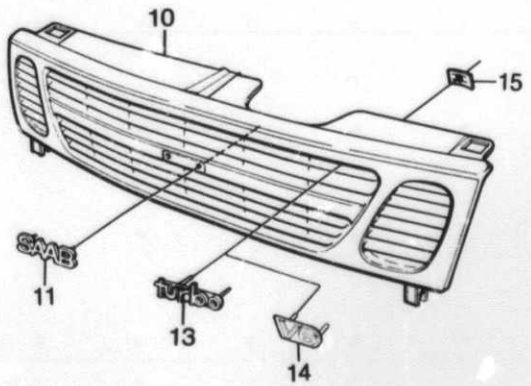

F5015 AAC94

Hood, front, fenders
5 –D02
Front member
Grille

Motorhuv, front, skärmar
Frontbalk
Grill

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 37 549			1	Beam	Balk	3
0020								
0030	10	42 40 867			1	Grille	Grill	3
0040	11	44 81 271		"SAAB"	1	-Emblem	-Emblem	3
0050								
0060	13	44 00 743		-1996, "TURBO"	1	Emblem	Emblem	3
0070	14	44 00 768		-1996, "V6"	1	Emblem	Emblem	3
0080	15	79 19 483		-1996	2	Clip	Clips	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D04

Front fender

Framskärm

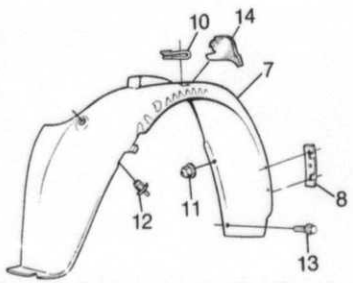

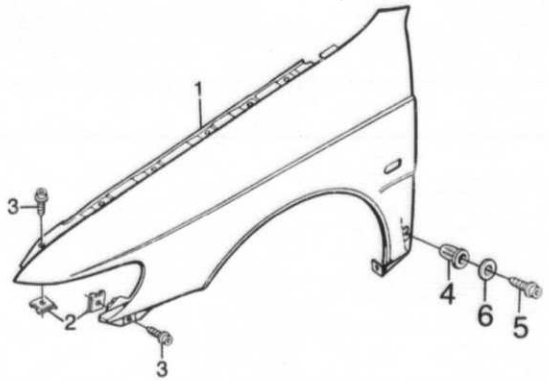

F9296 AAC94

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 38 976		LH	1	Front fender	Framskärm	3
0020	1	43 38 984		RH	1	Front fender	Framskärm	3
0030	2	43 45 864			18	Clip nut	Klämmutter	
0040	3	79 73 068			18	Screw	Skruv	5
0050	4	40 87 359		-1996	4	Press nut	Pressmutter	5
0060	4	40 87 359		1997-, 5D	4	Press nut	Pressmutter	5
0070	4	40 87 359		1997-, CV	2	Press nut	Pressmutter	5
0080	5	79 72 938			5	Screw	Skruv	5
0090	6	79 16 497		LH	1	Washer	Bricka	5
0100								
0110	7	* 48 30 097		LH	1	Fender	Skärm	
0120	7	* 48 30 089		RH	1	Fender	Skärm	
0130	8	43 36 053			1	.Bracket	.Fäste	
0140	10	79 67 995			1	.Clip nut	.Clipsmutter	3
0150	11	40 87 128			6	Plastic nut	Plastmutter	5
0160	12	43 45 872			6	Rivet	Nit	5
0170	13	79 78 679		-1994, RH	1	Hexagon screw	Sexkantsskruv	
0180	13	79 78 661		1995-, RH	1	Hexagon screw	Sexkantsskruv	5
0190								
0200	14	43 40 204		-1996	2	Seal	Tätning	5
0210	14	48 65 028		1997-	2	Seal	Tätning	5
0220	14	42 97 982		1996-1997, US, CA	2	Seal	Tätning	
0230	14	42 97 982		1998-, US, CA	1	Seal	Tätning	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D06

Front doors, hinges, window regulators, 5D

Framdörrar, gångjärn, fönsterhissar, 5D

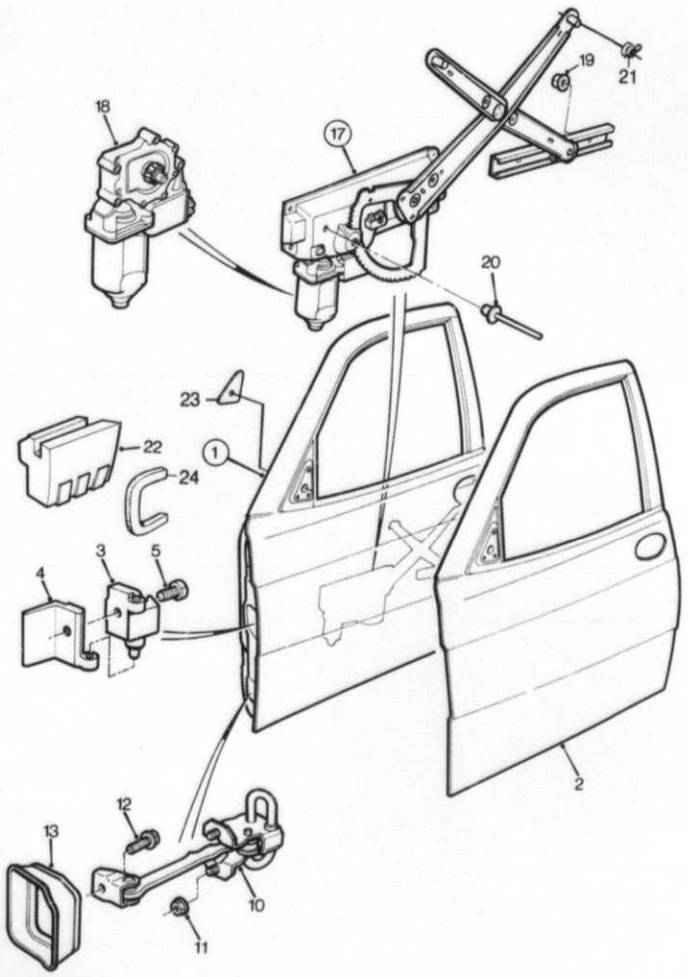

F8530 AAC94

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 28 803*		-1995, LH NLS – USE 4705349, 4857694	1	Door	Dörr	4
0020	1	*43 28 811*		-1995, RH NLS – USE 4705349, 4857702	1	Door	Dörr	4
0030	1	46 98 593		1996-1997, LH	1	Door	Dörr	4
0040	1	46 98 601		1996-1997, RH	1	Door	Dörr	4
0050	1	48 57 694		1998-, LH	1	Door	Dörr	
0060	1	48 57 702		1998-, RH	1	Door	Dörr	
0070	2	44 92 476		LH	1	.Outer panel	.Ytterplåt	3
0080	2	44 92 484		RH	1	.Outer panel	.Ytterplåt	3
0090	3	43 07 914		LH	2	.Hinge	.Gångjärn	4
0100	3	43 07 922		RH	2	.Hinge	.Gångjärn	4
0110	4	43 07 872		LH	2	Hinge	Gångjärn	4
0120	4	43 07 880		RH	2	Hinge	Gångjärn	4
0130	5	40 87 185			4	Hexagon screw	Sexkantsskruv	5
0140								
0150	10	43 23 283			2	Restrainer	Dörrstopp	6
0160	11	79 77 929			4	Nut	Mutter	5
0170	12	79 78 190			2	Screw	Skruv	5
0180	13	43 05 991			2	Cover	Avtäckning	6
0190								
0200	17	43 28 415		LH	1	Window lift	Fönsterhiss	5
0210	17	43 28 423		RH	1	Window lift	Fönsterhiss	5
0220	18	43 28 373		272) LH	1	.Motor	.Motor	5
0230	18	43 28 381		272) RH	1	.Motor	.Motor	5
0240	18	48 07 657		273) LH	1	.Motor	.Motor	5
0250	18	48 07 673		273) RH	1	.Motor	.Motor	5
0260								
0270	19	79 77 929			4	Nut	Mutter	5
0280	20	*43 46 086*		156) NLS – USE 4087904	8	Blind rivet	Blindnit	5
0290	20	40 87 904		157)	8	Blind rivet	Blindnit	5
0300	21	44 93 433			2	Roller	Rulle	
0310								
0320	22	45 50 802		128)	2	Spacer	Distans	6
0330	22	*44 53 250*		-1994, US, CA, AU NLS – USE 4550802	2	Spacer	Distans	6
0340	22	45 50 802		1995-, US, CA, AU	2	Spacer	Distans	6
0350								
0360	23	44 94 951		LH	1	Seal	Tätning	
0370	23	44 94 969		RH	1	Seal	Tätning	
0380	24	44 94 936			2	Seal	Tätning	

128. Ch. R2046798–
156. Ch. –S2016700, –S7015788
157. Ch. S2016701–, S7015789–
272. Ch. –T2037884, –T7004730
273. Ch. T2037885–, T7004731–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -D08

Rear doors, hinges, window regulators, 5D

Bakdörrar, gångjärn, fönsterhissar, 5D

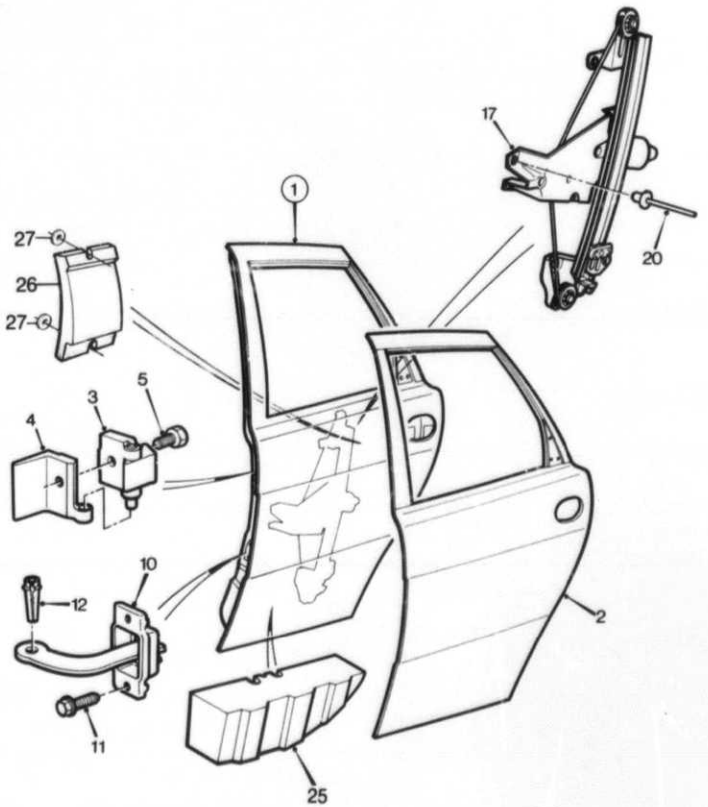

F7864 AAC94

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 28 829*		-1995, LH NLS – USE 4697678	1	Door	Dörr	5
0020	1	46 97 678		1996-, LH	1	Door	Dörr	5
0030	1	*43 28 837*		-1995, RH NLS – USE 4697686	1	Door	Dörr	5
0040	1	46 97 686		1996-, RH	1	Door	Dörr	5
0050	2	*44 92 492*		-1995, LH NLS – USE 4698817	1	.Outer panel	.Ytterplåt	5
0060	2	46 98 817		1996-, LH	1	.Outer panel	.Ytterplåt	5
0070	2	*44 92 500*		-1995, RH NLS – USE 4698825	1	.Outer panel	.Ytterplåt	5
0080	2	46 98 825		1996-, RH	1	.Outer panel	.Ytterplåt	5
0090	3	43 07 955		LH	2	.Hinge	.Gångjärn	4
0100	3	43 07 963		RH	2	.Hinge	.Gångjärn	4
0110	4	43 07 872		LH	2	Hinge	Gångjärn	4
0120	4	43 07 880		RH	2	Hinge	Gångjärn	4
0130	5	40 87 185			2	Hexagon screw	Sexkantsskruv	5
0140								
0150	10	43 06 833			2	Restrainer	Dörrstopp	6
0160	11	79 78 422			4	Screw	Skruv	5
0170	12	43 25 023			2	Pivot pin	Ledtapp	6
0180								
0190	17	43 28 431		LH	1	Window lift	Fönsterhiss	5
0200	17	43 28 449		RH	1	Window lift	Fönsterhiss	5
0210	20	*43 46 086*		156) NLS – USE 4087904	10	Blind rivet	Blindnit	5
0220	20	40 87 904		157)	10	Blind rivet	Blindnit	5
0230								
0240	25	43 28 134		LH	1	Spacer	Distans	6
0250	25	43 28 142		RH	1	Spacer	Distans	6
0260	26	46 95 276		1996-	2	Spacer	Distans	
0270	27	42 18 277		1996-	4	Push nut	Tryckmutter	6

156. Ch. -S2016700, -S7015788
157. Ch. S2016701-, S7015789-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D10

Front doors, hinges, window regulators, 3D

Framdörrar, gångjärn, fönsterhissar, 3D

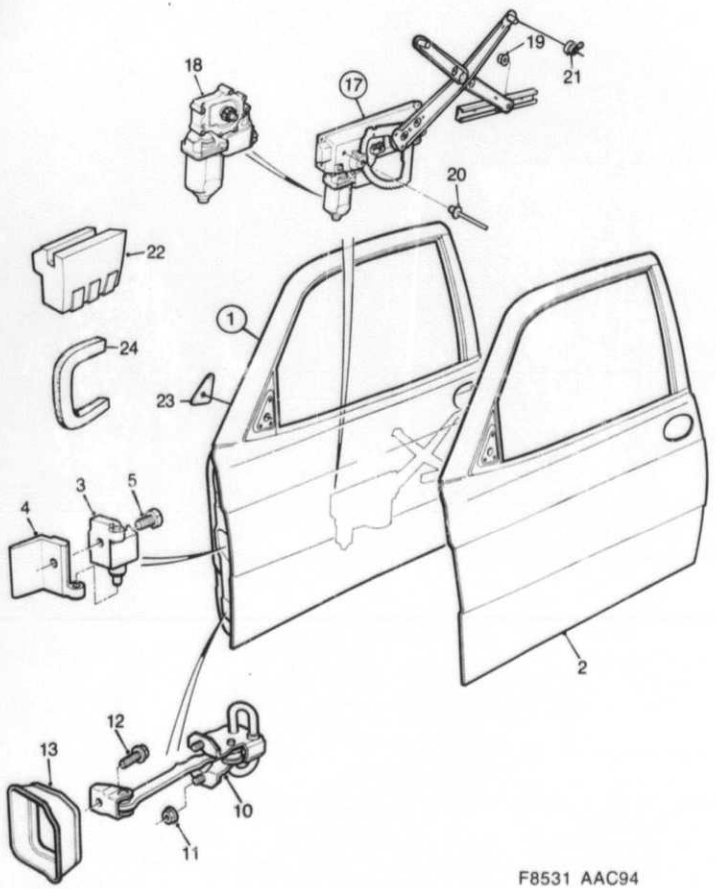

F8531 AAC94

0765	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 50 877		-1997, LH	1	Door	Dörr	4
0020	1	45 50 885		-1997, RH	1	Door	Dörr	4
0030	1	48 57 710		1998-, LH	1	Door	Dörr	
0040	1	48 57 728		1998-, RH	1	Door	Dörr	
0050	2	45 50 919		LH	1	.Outer panel	.Ytterplåt	3
0060	2	45 50 927		RH	1	.Outer panel	.Ytterplåt	3
0070	3	43 07 914		LH	2	.Hinge	.Gångjärn	4
0080	3	43 07 922		RH	2	.Hinge	.Gångjärn	4
0090	4	43 07 872		LH	2	Hinge	Gångjärn	4
0100	4	43 07 880		RH	2	Hinge	Gångjärn	4
0110	5	40 87 185			4	Hexagon screw	Sexkantsskruv	5
0120								
0130	10	45 51 008			2	Restrainer	Dörrstopp	6
0140	11	79 77 929			4	Nut	Mutter	5
0150	12	79 78 190			2	Screw	Skruv	5
0160	13	43 05 991			2	Cover	Avtäckning	6
0170								
0180	17	43 28 555		LH	1	Window lift	Fönsterhiss	5
0190	17	43 28 563		RH	1	Window lift	Fönsterhiss	5
0200	18	43 28 373		272) LH	1	.Motor	.Motor	5
0210	18	43 28 381		272) RH	1	.Motor	.Motor	5
0220	18	48 07 657		273) LH	1	.Motor	.Motor	5
0230	18	48 07 673		273) RH	1	.Motor	.Motor	5
0240	19	79 77 929			4	Nut	Mutter	5
0250	20	*43 46 086*		156) NLS - USE 4087904	8	Blind rivet	Blindnit	5
0260	20	40 87 904		157)	8	Blind rivet	Blindnit	5
0270	21	44 93 433			2	Roller	Rulle	
0280								
0290	22	45 50 802		128)	4	Spacer	Distans	6
0300	22	45 50 802		US, CA, AU	4	Spacer	Distans	6
0310								
0320	23	44 94 951		LH	1	Seal	Tätning	
0330	23	44 94 969		RH	1	Seal	Tätning	
0340	24	44 94 936			2	Seal	Tätning	

128. Ch. R2046798-
156. Ch. -S2016700, -S7015788
157. Ch. S2016701-, S7015789-
272. Ch. -T2037884, -T7004730
273. Ch. T2037885-, T7004731-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D12

Front doors, hinges, window regulators, CV

Framdörrar, gångjärn, fönsterhissar, CV

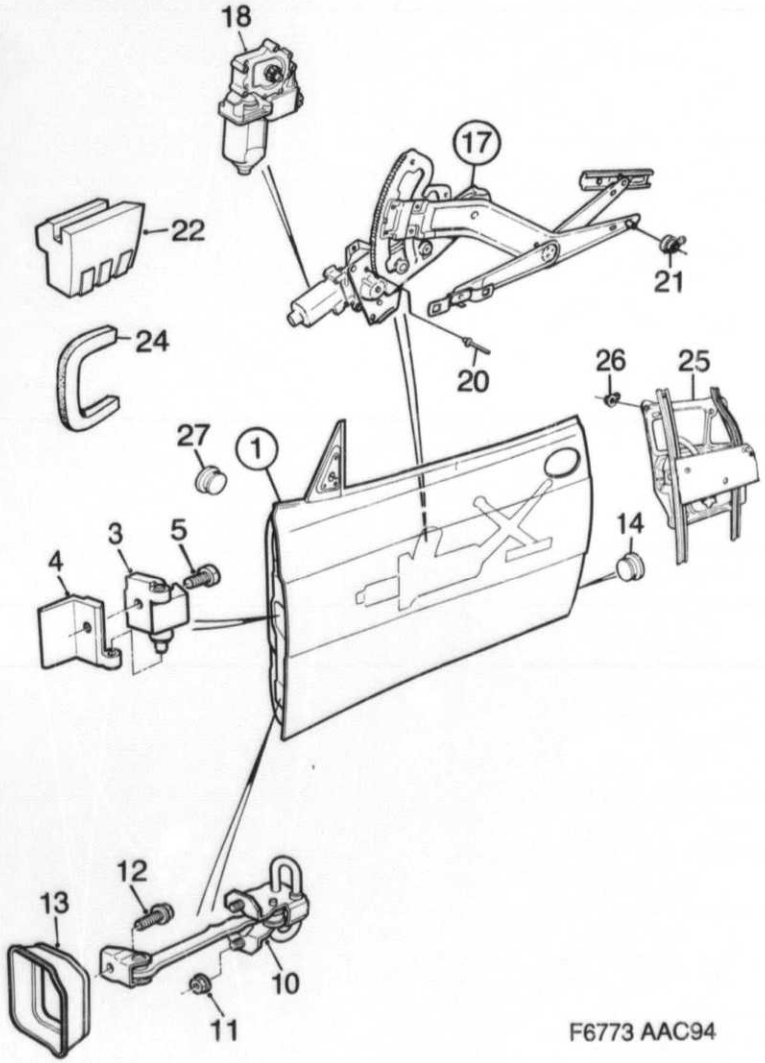

0767	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 55 579		-1997, LH	1	Door	Dörr	4
0020	1	45 55 587		-1997, RH	1	Door	Dörr	4
0030	1	48 57 736		1998-, LH	1	Door	Dörr	
0040	1	48 57 744		1998-, RH	1	Door	Dörr	
0050	3	43 07 914		LH	2	.Hinge	.Gångjärn	4
0060	3	43 07 922		RH	2	.Hinge	.Gångjärn	4
0070	4	43 07 872		LH	2	Hinge	Gångjärn	4
0080	4	43 07 880		RH	2	Hinge	Gångjärn	4
0090	5	40 87 185			4	Hexagon screw	Sexkantsskruv	5
0100								
0110	10	45 51 008			2	Restrainer	Dörrstopp	6
0120	11	79 77 929			4	Nut	Mutter	5
0130	12	79 78 182			2	Screw	Skruv	5
0140	13	43 05 991			2	Cover	Avtäckning	6
0150	14	92 67 808		(7982788)	2	Plug	Plugg	5
0160								
0170	17	*43 28 712*		187) LH NLS - USE 4695714	1	Window lift	Fönsterhiss	5
0180	17	*43 28 720*		187) RH NLS - USE 4695722	1	Window lift	Fönsterhiss	5
0190	17	46 95 714		188) LH	1	Window lift	Fönsterhiss	5
0200	17	46 95 722		188) RH	1	Window lift	Fönsterhiss	5
0210	18	43 28 373		187) LH	1	.Motor	.Motor	5
0220	18	43 28 381		187) RH	1	.Motor	.Motor	5
0230	18	46 95 631		188) LH	1	.Motor	.Motor	5
0240	18	46 95 649		188) RH	1	.Motor	.Motor	5
0250	19	79 77 929			4	Nut	Mutter	5
0260	20	*43 46 086*		156) NLS - USE 4087904	8	Blind rivet	Blindnit	5
0270	20	40 87 904		157)	8	Blind rivet	Blindnit	5
0280	21	44 93 433			2	Roller	Rulle	
0290								
0300	22	45 50 802		US, CA, AU	4	Spacer	Distans	6
0310	24	44 94 936			2	Seal	Tätning	
0320								
0330	25	43 70 391		LH	1	Window lift	Fönsterhiss	5
0340	25	43 70 409		RH	1	Window lift	Fönsterhiss	5
0350	26	79 77 952			8	Hexagon nut	Sexkantsmutter	5
0360								
0370	27	79 82 762			2	Plug	Plugg	5

156. Ch. -S2016700, -S7015788
157. Ch. S2016701-, S7015789-
187. Ch. -S7019309
188. Ch. S7019310-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02 3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D14

Door lock
Front door, 5D

Dörrlås
Framdörr, 5D

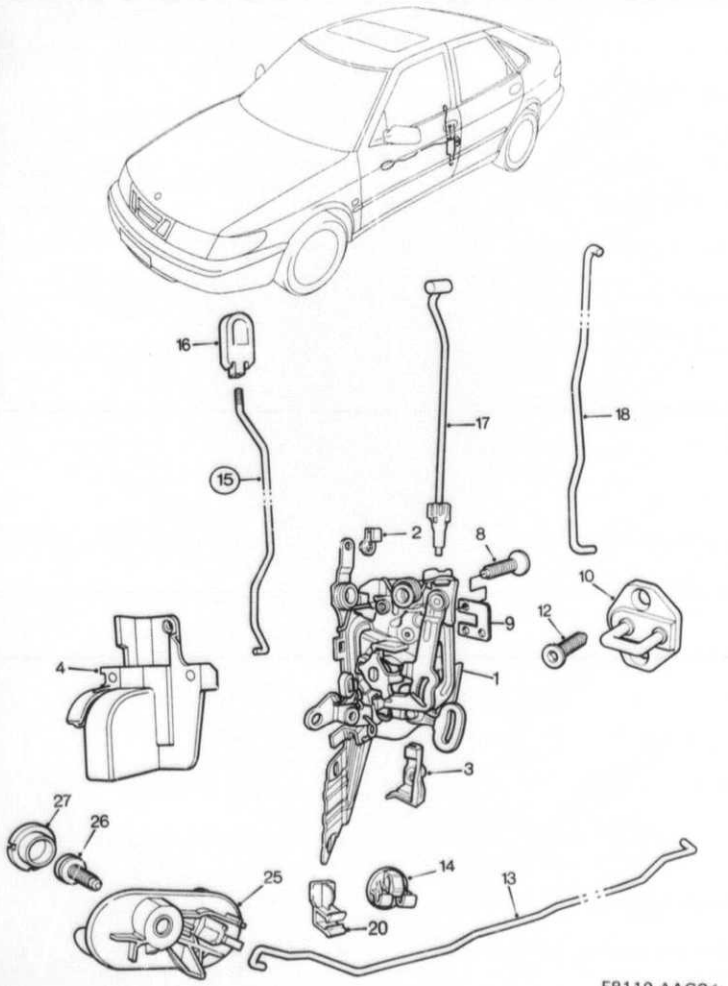

F8119 AAC94

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 26 690*		103) LH, LHD NLS – USE 4766812	1	Door lock	Dörrlås	4
0020	1	*43 26 724*		103) RH, LHD NLS – USE 4550745	1	Door lock	Dörrlås	4
0030	1	*43 26 716*		103) LH, RHD NLS – USE 4550737	1	Door lock	Dörrlås	4
0040	1	*43 26 708*		103) RH, RHD NLS – USE 4766846	1	Door lock	Dörrlås	4
0060	1	*45 50 711*		104) -1995, LH, LHD NLS - USE 4766812	1	Door lock	Dörrlås	4
0070	1	45 50 745		104) -1995, RH, LHD	1	Door lock	Dörrlås	4
0080	1	45 50 737		104) -1995, LH, RHD	1	Door lock	Dörrlås	4
0090	1	*45 50 729*		104) -1995, RH, RHD NLS - USE 4766846	1	Door lock	Dörrlås	4
0110	1	47 66 812		1996, LH, LHD	1	Door lock	Dörrlås	4
0120	1	47 66 820		1996, RH, LHD	1	Door lock	Dörrlås	4
0130	1	47 66 838		1996, LH, RHD	1	Door lock	Dörrlås	4
0140	1	47 66 846		1996, RH, RHD	1	Door lock	Dörrlås	4
0160	1	48 52 596		1997, LH, LHD	1	Door lock	Dörrlås	
0170	1	48 52 638		1997, RH, LHD	1	Door lock	Dörrlås	
0180	1	48 52 620		1997, LH, RHD	1	Door lock	Dörrlås	
0190	1	48 52 604		1997, RH, RHD	1	Door lock	Dörrlås	
0210	1	• 48 58 577		1998, LH, LHD	1	Door lock	Dörrlås	
0220	1	• 48 58 601		1998, RH, LHD	1	Door lock	Dörrlås	
0230	1	• 48 58 593		1998, LH, RHD	1	Door lock	Dörrlås	
0240	1	• 48 58 585		1998, RH, RHD	1	Door lock	Dörrlås	
0260	2	43 26 732		LH	2	Clip	Clips	5
0270	2	43 26 740		RH	2	Clip	Clips	5
0290	3	43 26 757		LH	1	Clip	Clips	5
0300	3	43 26 765		RH	1	Clip	Clips	5
0320	4	43 23 192		103) LH, LHD	1	Protecting casing	Skyddskåpa	
0330	4	*43 23 200*		103) RH, LHD NLS – USE 4550588	1	Protecting casing	Skyddskåpa	
0340	4	*43 26 831*		103) LH, RHD NLS – USE 4550596	1	Protecting casing	Skyddskåpa	
0350	4	*43 26 849*		103) RH, RHD NLS – USE 4550604	1	Protecting casing	Skyddskåpa	
0370	4	45 50 570		104) LH, LHD	1	Protecting casing	Skyddskåpa	
0380	4	45 50 588		104) RH, LHD	1	Protecting casing	Skyddskåpa	
0390	4	45 50 596		104) LH, RHD	1	Protecting casing	Skyddskåpa	
0400	4	45 50 604		104) RH, RHD	1	Protecting casing	Skyddskåpa	
0420	8	43 46 193		-1994	6	Screw	Skruv	5
0430	8	43 47 431		1995-	6	Screw	Skruv	5
0450	9	45 50 356		233) LH	1	Spacer	Distans	
0460	9	45 50 364		233) RH	1	Spacer	Distans	
0480	10	43 27 532		-1997	2	End plate	Slutbleck	5
0490	10	48 55 342		1998-	2	End plate	Slutbleck	
0500	12	*43 46 136*		-1994 NLS – USE 4685624	4	Screw	Skruv	5
0510	12	43 47 423		1995-1996	4	Screw	Skruv	5

103. Ch. -R2034911
104. Ch. R2034912-
233. Ch. T2020648-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D16

Door lock
Front door, 5D

Dörrlås
Framdörr, 5D

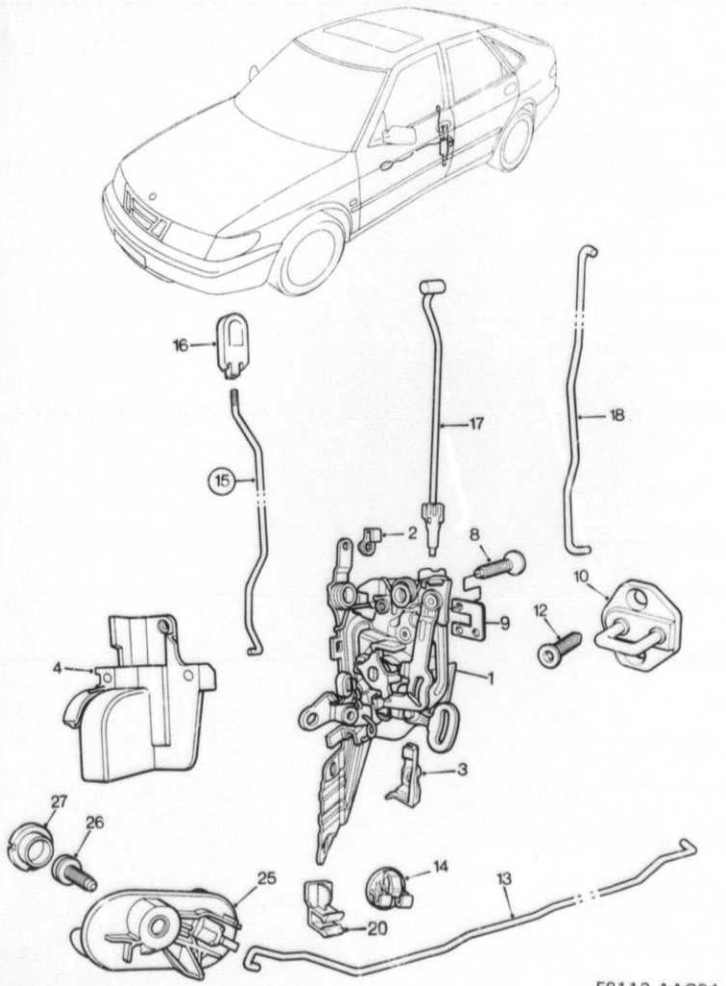

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	12	46 85 624		1997-	4	Screw	Skruv	
0530								
0540	13	43 23 036		LH	1	Rod	Stång	5
0550	13	43 23 044		RH	1	Rod	Stång	5
0560	14	43 46 102			2	Clip	Clips	6
0570								
0580	15	44 94 399		LH	1	Rod	Stång	5
0590	15	44 94 407		RH	1	Rod	Stång	5
0600	16	40 37 735			1	.Lock button	.Låsknapp	5
0610								
0620	17	43 23 135		LH	1	Control rod	Manöverstång	5
0630	17	43 23 143		RH	1	Control rod	Manöverstång	5
0640	18	43 23 010		LH	1	Rod	Stång	5
0650	18	43 23 028		RH	1	Rod	Stång	5
0660								
0670	20	44 21 046			2	Clip	Clips	
0680	25	*44 97 855*		61) LH NLS - USE 4605952	1	Opening handle	Öppningshandtag	
0690	25	*44 97 863*		61) RH NLS - USE 4605960	1	Opening handle	Öppningshandtag	
0700	25	46 05 952		62) LH	1	Opening handle	Öppningshandtag	
0710	25	46 05 960		62) RH	1	Opening handle	Öppningshandtag	
0720	25	48 21 807		1997-, LH, CHROME	1	Opening handle	Öppningshandtag	
0730	25	48 21 815		1997-, RH, CHROME	1	Opening handle	Öppningshandtag	
0740	26	79 78 422			2	Screw	Skruv	5
0750	27	44 20 600			2	Cover	Täcklock	

61. Ch. -R2009735
62. Ch. R2009736-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16


Doors, trunk lid

5-D18

Door lock
Rear door, 5D

Dörrar, bagagerumslucka

Dörrlås
Bakdörr, 5D

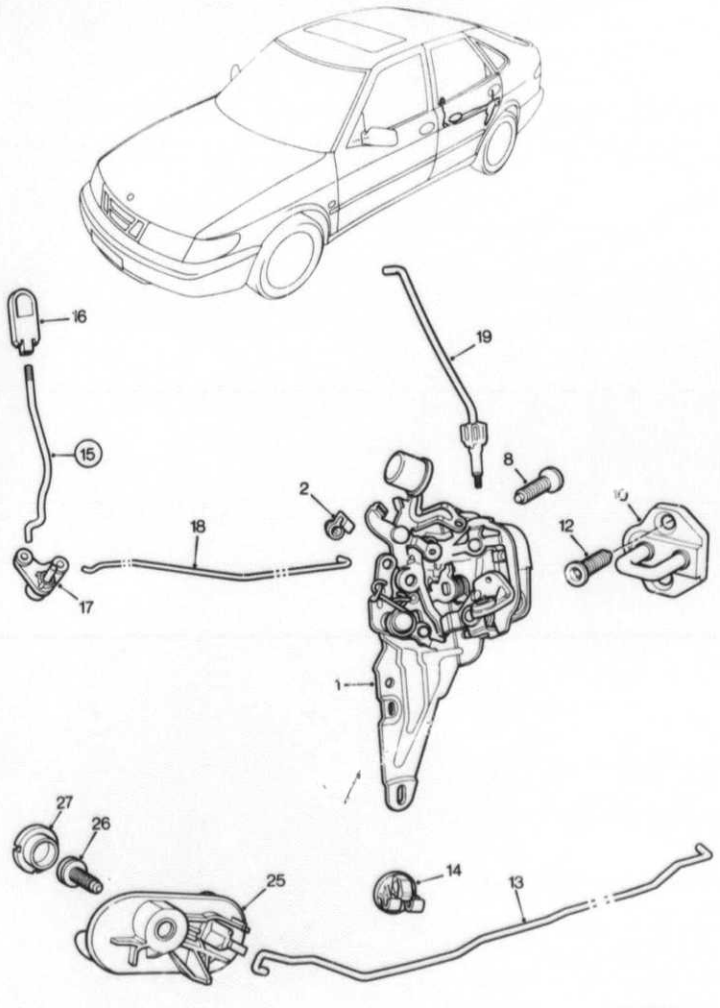

F5632 AAC94

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 26 815*		103) LH NLS – USE 4766853	1	Door lock	Dörrlås	4
0020	1	*43 26 823*		103) RH NLS – USE 4766861	1	Door lock	Dörrlås	4
0040	1	*45 50 554*		104)-1995, LH NLS – USE 4766853	1	Door lock	Dörrlås	4
0050	1	*45 50 562*		104)-1995, RH NLS – USE 4766861	1	Door lock	Dörrlås	4
0070	1	47 66 853		1996-, LH	1	Door lock	Dörrlås	
0080	1	47 66 861		1996-, RH	1	Door lock	Dörrlås	
0100	2	43 26 732		LH	2	Clip	Clips	5
0110	2	43 26 740		RH	2	Clip	Clips	5
0130	8	43 46 193		-1994	6	Screw	Skruv	5
0140	8	43 47 431		1995-	6	Screw	Skruv	5
0160	10	43 22 996			2	End plate	Slutbleck	5
0170	12	*43 46 136*		-1994 NLS – USE 4685624	4	Screw	Skruv	5
0180	12	43 47 423		1995-1996	4	Screw	Skruv	5
0190	12	46 85 624		1997-	4	Screw	Skruv	
0210	13	43 23 051		LH	1	Rod	Stång	5
0220	13	43 23 069		RH	1	Rod	Stång	5
0230	14	43 46 102			6	Clip	Clips	6
0250	15	44 94 415		LH	1	Rod	Stång	5
0260	15	44 94 423		RH	1	Rod	Stång	5
0270	16	40 37 735			1	.Lock button	.Låsknapp	5
0290	17	43 23 119			2	Lever	Hävarm	5
0300	18	43 24 612		LH	1	Rod	Stång	5
0310	18	43 24 620		RH	1	Rod	Stång	5
0320	19	43 23 150		53) LH	1	Rod	Stång	5
0330	19	43 23 168		53) RH	1	Rod	Stång	5
0340	19	44 94 217		54) LH	1	Rod	Stång	5
0350	19	44 94 225		54) RH	1	Rod	Stång	5
0370	25	*44 97 871*		61) LH NLS – USE 4605978	1	Opening handle	Öppningshandtag	
0380	25	*44 97 889*		61) RH NLS – USE 4605986	1	Opening handle	Öppningshandtag	
0390	25	46 05 978		62) LH	1	Opening handle	Öppningshandtag	
0400	25	46 05 986		62) RH	1	Opening handle	Öppningshandtag	
0410	25	48 87 709		1997-, LH, CHROME	1	Opening handle	Öppningshandtag	
0420	25	48 87 717		1997-, RH, CHROME	1	Opening handle	Öppningshandtag	
0430	26	79 78 422			2	Screw	Skruv	5
0440	27	44 20 600			2	Cover	Täcklock	

53. Ch. -R2002495
54. Ch. R2002496-
61. Ch. -R2009735
62. Ch. R2009736-
103. Ch. -R2034911
104. Ch. R2034912-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-D20

Door lock
Front door, 3D, CV

Dörrlås
Framdörr, 3D, CV

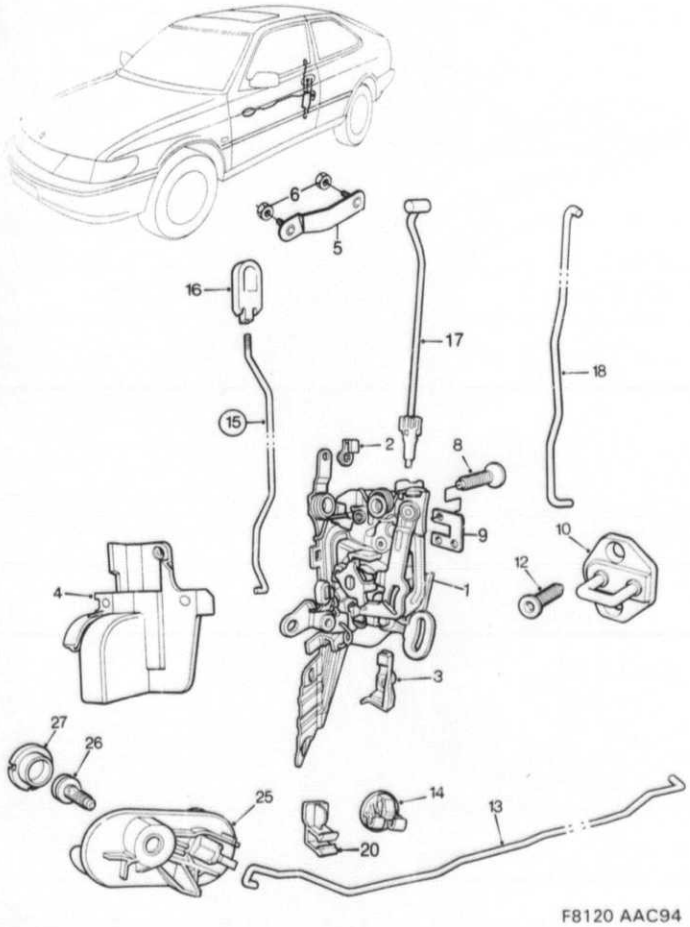

F8120 AAC94

0790	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 26 690*		103) LH, LHD NLS – USE 4766812	1	Door lock	Dörrlås	4
0020	1	*43 26 724*		103) RH, LHD NLS – USE 4550745	1	Door lock	Dörrlås	4
0030	1	*43 26 716*		103) LH, RHD NLS – USE 4550737	1	Door lock	Dörrlås	4
0040	1	*43 26 708*		103) RH, RHD NLS – USE 4766846	1	Door lock	Dörrlås	4
0060	1	*45 50 711*		104) -1995, LH, LHD NLS - USE 4766812	1	Door lock	Dörrlås	4
0070	1	45 50 745		104) -1995, RH, LHD	1	Door lock	Dörrlås	4
0080	1	45 50 737		104) -1995, LH, RHD	1	Door lock	Dörrlås	4
0090	1	*45 50 729*		104) -1995, RH, RHD NLS - USE 4766846	1	Door lock	Dörrlås	4
0110	1	47 66 812		1996, LH, LHD	1	Door lock	Dörrlås	4
0120	1	47 66 820		1996, RH, LHD	1	Door lock	Dörrlås	4
0130	1	47 66 838		1996, LH, RHD	1	Door lock	Dörrlås	4
0140	1	47 66 846		1996, RH, RHD	1	Door lock	Dörrlås	4
0160	1	48 52 596		1997, LH, LHD	1	Door lock	Dörrlås	
0170	1	48 52 638		1997, RH, LHD	1	Door lock	Dörrlås	
0180	1	48 52 620		1997, LH, RHD	1	Door lock	Dörrlås	
0190	1	48 52 604		1997, RH, RHD	1	Door lock	Dörrlås	
0210	1	• 48 58 577		1998, LH, LHD	1	Door lock	Dörrlås	
0220	1	• 48 58 601		1998, RH, LHD	1	Door lock	Dörrlås	
0230	1	• 48 58 593		1998, LH, RHD	1	Door lock	Dörrlås	
0240	1	• 48 58 585		1998, RH, RHD	1	Door lock	Dörrlås	
0260	1	48 52 596		CV, LH, LHD	1	Door lock	Dörrlås	
0270	1	48 52 638		CV, RH, LHD	1	Door lock	Dörrlås	
0280	1	48 52 620		CV, LH, RHD	1	Door lock	Dörrlås	
0290	1	48 52 604		CV, RH, RHD	1	Door lock	Dörrlås	
0310	2	43 26 732		LH	1	Clip	Clips	5
0320	2	43 26 740		RH	1	Clip	Clips	5
0340	3	43 26 757		LH	1	Clip	Clips	5
0350	3	43 26 765		RH	1	Clip	Clips	5
0370	4	43 23 192		103) LH, LHD	1	Protecting casing	Skyddskåpa	
0380	4	*43 23 200*		103) RH, LHD NLS – USE 4550588	1	Protecting casing	Skyddskåpa	
0390	4	*43 26 831*		103) LH, RHD NLS – USE 4550596	1	Protecting casing	Skyddskåpa	
0400	4	*43 26 849*		103) RH, RHD NLS – USE 4550604	1	Protecting casing	Skyddskåpa	
0420	4	45 50 570		104) LH, LHD	1	Protecting casing	Skyddskåpa	
0430	4	45 50 588		104) RH, LHD	1	Protecting casing	Skyddskåpa	
0440	4	45 50 596		104) LH, RHD	1	Protecting casing	Skyddskåpa	
0450	4	45 50 604		104) RH, RHD	1	Protecting casing	Skyddskåpa	
0470	5	44 94 316		LH	1	Tie plate	Knutplåt	5
0480	5	44 94 324		RH	1	Tie plate	Knutplåt	5
0490	6	79 77 929			4	Nut	Mutter	5
0510	8	43 46 193		-1994	6	Screw	Skruv	5
0520	8	43 47 431		1995-	6	Screw	Skruv	5

103. Ch. -R2034911
104. Ch. R2034912-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 –D22

Door lock
Front door, 3D, CV

Dörrlås
Framdörr, 3D, CV

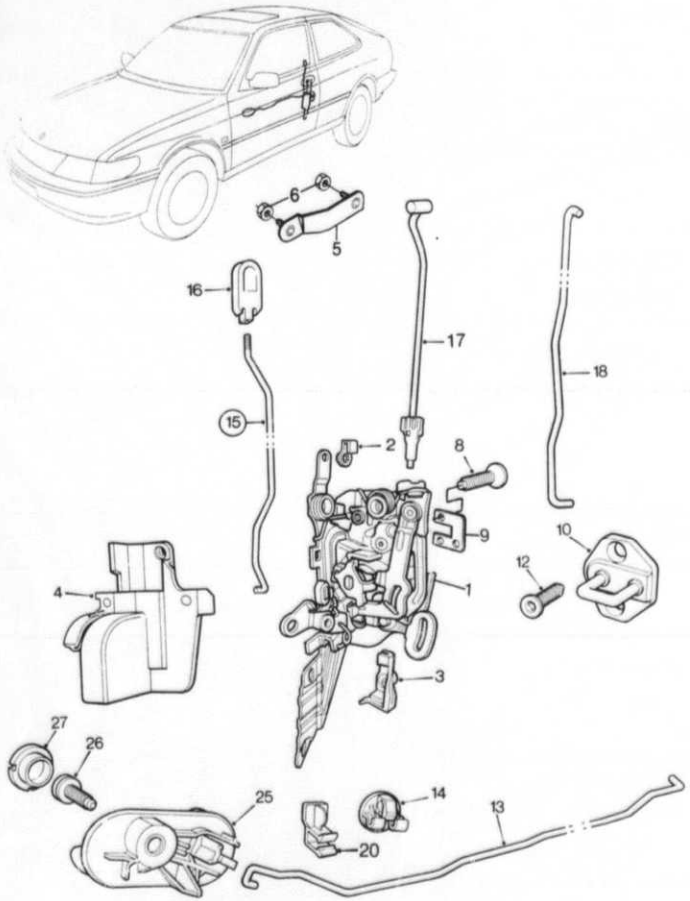

F8120 AAC94

0790	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530								
0540	9	45 50 356		233) LH	1	Spacer	Distans	
0550	9	45 50 364		233) RH	1	Spacer	Distans	
0560								
0570	10	43 22 996		-1997, 3D	2	End plate	Slutbleck	5
0580	10	48 55 979		1998-, 3D	2	End plate	Slutbleck	
0590	10	45 57 831		-1997, CV	2	End plate	Slutbleck	5
0600	10	48 55 979		1998-, CV	2	End plate	Slutbleck	
0610	12	*43 46 136*		-1994 NLS – USE 4685624	4	Screw	Skruv	5
0620	12	43 47 423		1995-1996	4	Screw	Skruv	5
0630	12	46 85 624		1997-	4	Screw	Skruv	
0640								
0650	13	43 25 437		LH	1	Rod	Stång	5
0660	13	43 25 445		RH	1	Rod	Stång	5
0670	14	43 46 102			4	Clip	Clips	6
0680								
0690	15	43 25 452		LH	1	Rod	Stång	5
0700	15	43 25 460		RH[1]	1	Rod	Stång	5
0710	16	40 37 735			1	.Lock button	.Låsknapp	5
0720								
0730	17	43 25 478		LH	1	Rod	Stång	5
0740	17	43 25 486		RH	1	Rod	Stång	5
0750								
0760	17	44 93 599		LH, CV	1	Control rod	Manöverstång	5
0770	17	44 93 607		RH, CV	1	Control rod	Manöverstång	5
0780								
0790	18	43 25 411		LH	1	Rod	Stång	5
0800	18	43 25 429		RH	1	Rod	Stång	5
0810								
0820	20	44 21 046			2	Clip	Clips	
0830	25	46 05 952		LH	1	Opening handle	Öppningshandtag	
0840	25	46 05 960		RH	1	Opening handle	Öppningshandtag	
0850	25	48 21 807		1997-, LH, CHROME	1	Opening handle	Öppningshandtag	
0860	25	48 21 815		1997-, RH, CHROME	1	Opening handle	Öppningshandtag	
0870	26	79 78 422			2	Screw	Skruv	5
0880	27	44 20 600			2	Cover	Täcklock	


233. Ch. T2020648–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

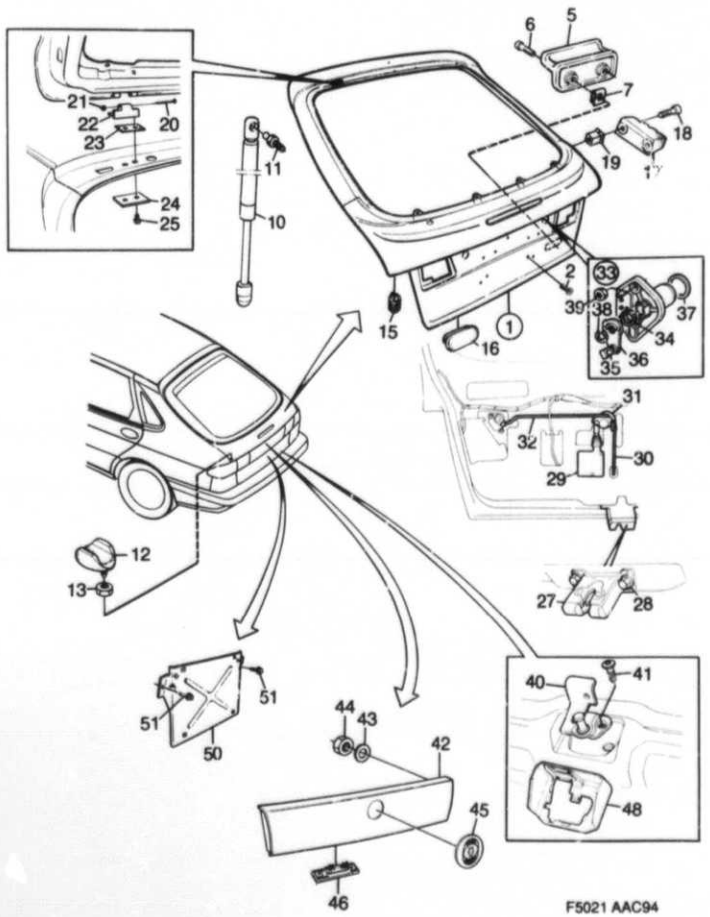

F5021 AAC94

Doors, trunk lid

5-D24 Trunk door, hinges lock, 3D, 5D

Dörrar, bagagerumslucka

Bagagerumsdörr, gångjärn lås, 3D, 5D

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 28 845			1	Trunk lid	Bagagelucka	4
0020	1	48 50 970		35)	1	Trunk lid	Bagagelucka	
0030	2	82 78 467		ROUND TYPE	2	.Nut	.Mutter	5
0040	2	73 99 454		HEXAGON TYPE	2	.Nut	.Mutter	5
0050								
0060	5	96 70 548			1	Handle	Handtag	6
0070	6	79 77 960			2	Screw	Skruv	5
0080	7	79 72 573			2	Clip nut	Clipsmutter	5
0090								
0100	10	43 24 307		35)	2	Gas spring	Gasfjäder	3
0110				SE,EU,GB,US,CA,JP,KR,TW				
0120	10	43 26 468		35)	2	Gas spring	Gasfjäder	3
0130				ME,LA,PA,AU				
0140	10	43 26 468		36)	2	Gas spring	Gasfjäder	3
0150				SE,EU,GB,US,CA,JP,KR,TW				
0160	10	44 92 815		36) -1996	2	Gas spring	Gasfjäder	3
0170				ME,LA,PA,AU				
0180	11	44 93 912			4	Ballpin	Kultapp	5
0190	12	43 23 408			2	Side support	Sidostöd	5
0200	13	79 77 929			4	Nut	Mutter	5
0210	15	43 04 234			2	Rubber buffer	Gummibuffert	4
0220	16	73 98 886		350)	1	Plug	Plugg	5
0230								
0240	17	43 26 492		-1994	2	Side support	Sidostöd	5
0250	18	79 22 396		-1994	4	Screw	Skruv	5
0260	19	79 82 929		-1994	4	Press nut	Pressmutter	3
0270								
0280	20	43 24 810			2	Hinge bolt	Gångjärnsbult	5
0290	21	43 46 227			2	Lock ring	Låsring	5
0300	22	43 24 786			2	Hinge flange	Gångjärnshalva	
0310	23	*43 24 802*		1994 NLS – USE 4559654	2	Seal	Tätning	
0320	23	45 59 654		1995-	2	Seal	Tätning	
0330	24	43 05 546			2	Washer	Bricka	
0340	25	79 78 182			4	Screw	Skruv	5
0350								
0360	27	43 27 383			1	Lock	Lås	4
0370	28	79 78 109			3	Screw	Skruv	5
0380	29			See page 3A-061, 2-C14	1	Motor	Motor	
0390	30	43 24 844			1	Rod	Stång	5
0400	31	43 24 836		346)	1	Pivot arm	Ledarm	5
0410	31	48 51 929		347)	1	Pivot arm	Ledarm	
0420	32	43 24 828			1	Rod	Stång	5
0430								
0440	33			See page 8A-103, 5-E08	1	Lock cylinder	Låscylinder	
0450	34	40 10 617			1	.Spring	.Fjäder	5
0460	35	43 46 110			1	.Clip	.Clips	6
0470	36	44 94 290			1	.Companion flange	.Medbringare	3
0480	37	44 94 308			1	.Seal	.Tätning	4
0490	38	*79 36 016*		NLS – USE 8123473	1	.E-circlip	.Spärryttare	5
0500	39	79 77 929			2	Nut	Mutter	5
0510								
0520	40	43 26 450			1	End plate	Slutbleck	5
0530	41	43 46 649		-1994	2	Screw	Skruv	5
0540	41	43 47 423		1995-1996	2	Screw	Skruv	5
0550	41	46 85 624		1997-	2	Screw	Skruv	
0560								
0570	42	44 01 600		109) -1996	1	Decor panel	Dekorpanel	3

35. For cars with rear window wiper. För bilar med bakrutetorkare.
36. For cars without rear window wiper. För bilar utan bakrutetorkare.
109. Paintable design Lackeringsbart utförande
346. Ch. -V2029337, -V7006359
347. Ch. V2029338-, V7006360-
350. Ch. -V2029017

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -E02

Trunk door, hinges lock, 3D, 5D

Bagagerumsdörr, gångjärn lås, 3D, 5D

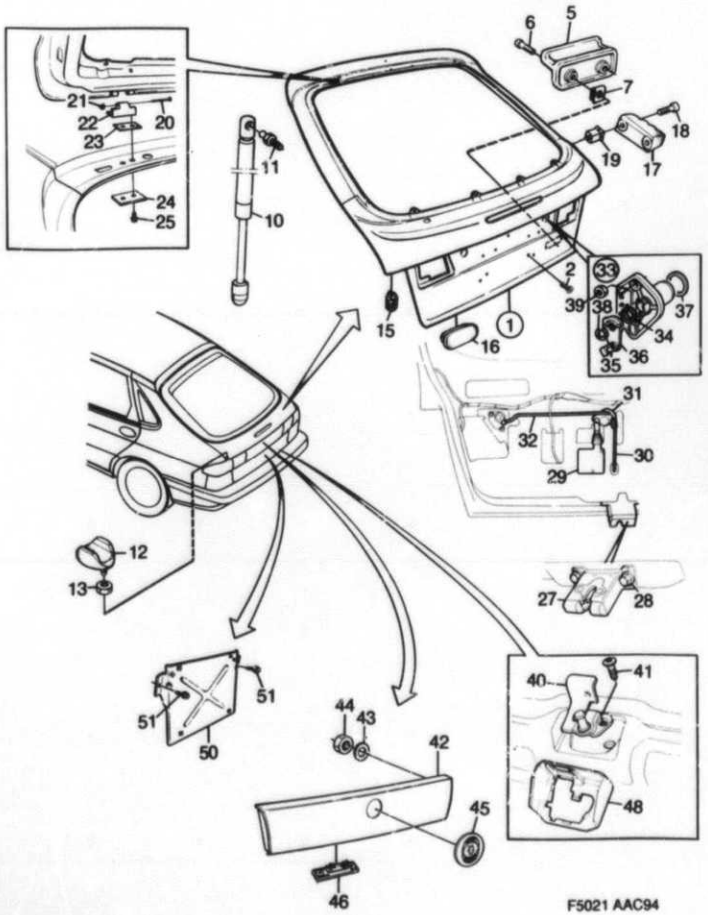


0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	42	44 81 677			1	Decor panel	Dekorpanel	
0590						Reflective panel	Reflexpanel	
0600	43	44 80 174			8	Seal	Tätning	3
0610	44	79 77 929			7	Nut	Mutter	5
0620	45			See page 8A-105, 5-E10		Emblem	Emblem	
0630	46			See page 3A-039, 2-B16		Lighting	Belysning	
0640								
0650	48	45 09 436			1	Cover	Avtäckning	
0660								
0670	50	45 21 100		US, CA, JP	1	Bracket	Hållare	5
0680	51	79 78 091		-1997, US, CA, JP	2	Screw	Skruv	5
0690	51	79 78 430		1998-, US, CA, JP	2	Screw	Skruv	
0700		92 40 086		US, CA, JP	1	Mounting kit registration plate	Monteringssats registreringsskylt	5
0710								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

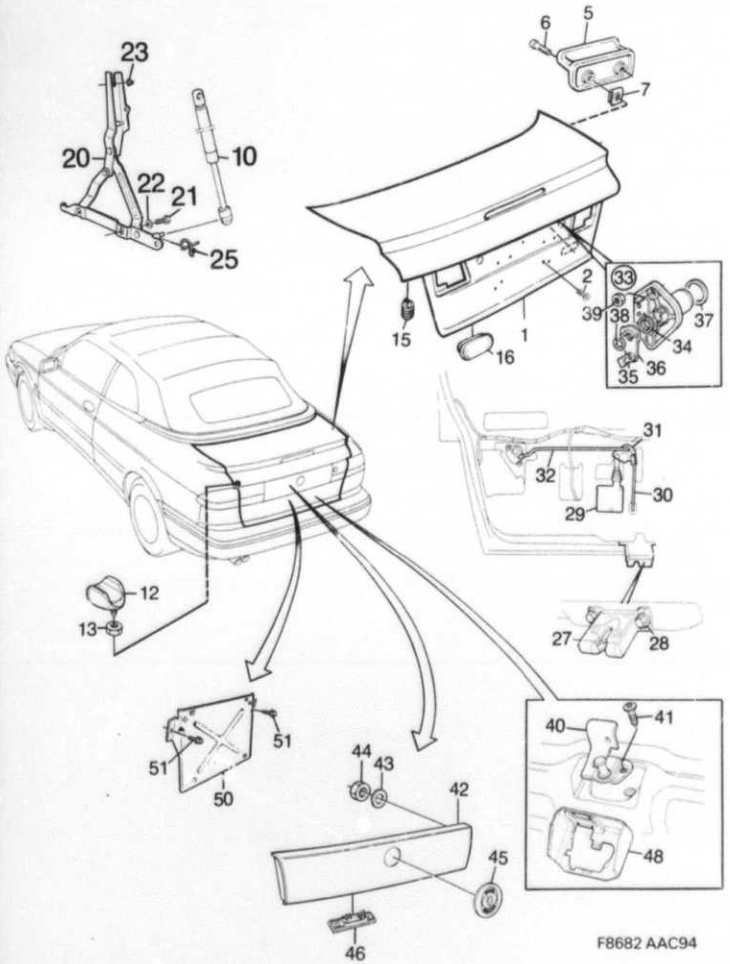

0C20	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 55 538			1	Trunk lid	Bagagelucka	4
0020	2	73 99 454		HEXAGONE TYPE	2	Nut	Mutter	5
0030								
0040	5	96 70 548			1	Handle	Handtag	6
0050	6	79 77 960			2	Screw	Skruv	5
0060	7	79 72 573			2	Clip nut	Clipsmutter	5
0070								
0080	10	43 70 284			2	Gas spring	Gasfjäder	3
0090								
0100	12	43 23 408			2	Side support	Sidostöd	5
0110	13	79 77 929			4	Nut	Mutter	5
0120	15	43 04 234			2	Rubber buffer	Gummibuffert	4
0130	16	73 98 886			1	Plug	Plugg	5
0140								
0150	20	*45 55 553*		-1997, LH NLS – USE 4851713	1	Hinge	Gångjärn	5
0160	20	45 55 561		-1997, RH	1	Hinge	Gångjärn	5
0170	20	• 48 51 713		1998-, LH	1	Hinge	Gångjärn	
0180	20	• 48 51 721		1998-, RH	1	Hinge	Gångjärn	
0190	21	79 78 190			6	Screw	Skruv	5
0200	22	70 61 328			6	Washer	Bricka	5
0210	23	79 77 952			4	Hexagon nut	Sexkantsmutter	5
0220	25	45 58 060			2	Clip	Clips	5
0230	26	45 58 045		LH	1	Stop	Anslag	
0240	26	45 58 052		RH	1	Stop	Anslag	
0250								
0260	27	43 27 383			1	Lock	Lås	4
0270	28	79 78 109			3	Screw	Skruv	5
0280	29			See page 3A-061, 2-C14	1	Motor	Motor	
0290	30	43 24 844			1	Rod	Stång	5
0300	31	43 24 836			1	Pivot arm	Ledarm	5
0310	32	43 24 828			1	Rod	Stång	5
0320								
0330	33			See page 8A-103, 5-E08	1	Lock cylinder	Låscylinder	
0340	34	40 10 617			1	.Spring	.Fjäder	5
0350	35	43 46 110			1	.Clip	.Clips	6
0360	36	44 94 290			1	.Companion flange	.Medbringare	3
0370	37	44 94 308			1	.Seal	.Tätning	4
0380	38	*79 36 016*		NLS – USE 8123473	1	.E-circlip	.Spärryttare	5
0390	39	79 77 929			2	Nut	Mutter	5
0400								
0410	40	43 26 450			1	End plate	Slutbleck	5
0420	41	43 47 423		-1996	2	Screw	Skruv	5
0430	41	46 85 624		1997-	2	Screw	Skruv	
0440								
0450	42	44 01 600		109)	1	Decor panel	Dekorpanel	3
0460	42	44 81 677			1	Decor panel	Dekorpanel	
0470						Reflective panel	Reflexpanel	
0480	43	44 80 174			8	Seal	Tätning	3
0490	44	79 77 929			7	Nut	Mutter	5
0500	45			See page 8A-105, 5-E10		Emblem	Emblem	
0510	46			See page 3A-039, 2-B16		Lighting	Belysning	
0520								
0530	48	45 09 436			1	Cover	Avtäckning	
0540								
0550	50	45 21 100		US, CA, JP	1	Bracket	Hållare	5
0560	51	79 78 091		-1997, US, CA, JP	2	Screw	Skruv	5
0570	51	79 78 430		1998-, US, CA, JP	2	Screw	Skruv	
0580		92 40 086		US, CA, JP	1	Mounting kit registration plate	Monteringssats registreringsskylt	5
0590								

109. Paintable design Lackeringsbart utförande

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-E06

Outside handle
Ytterhandtag

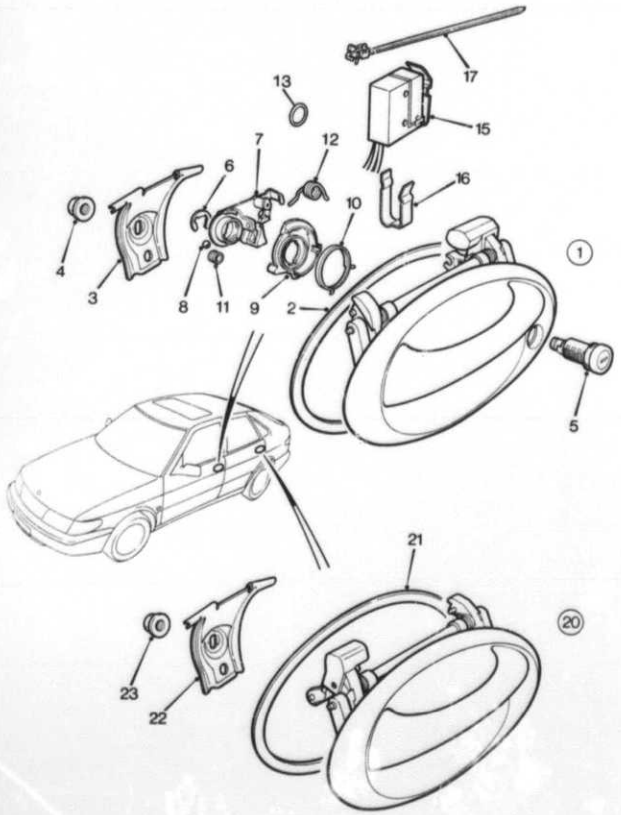

F8582 AAC94

0850	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 94 837		LH	1	Handle	Handtag	5
0020	1	44 94 845		RH	1	Handle	Handtag	5
0030	1	45 50 372		CV, LH	1	Handle	Handtag	5
0040	1	45 50 380		CV, RH	1	Handle	Handtag	5
0050	2	44 94 019			2	.Seal	.Tätning	4
0060	3	43 04 556			2	Bracket	Konsol	
0070	4	79 77 952			2	Hexagon nut	Sexkantsmutter	5
0080								
0090	5			See page 8A-103, 5-E08	2	Lock cylinder	Låscylinder	
0100	6	44 94 027			2	Lock ring	Låsring	5
0110	7	44 94 175		LH, LHD	1	Control arm	Manöverarm	
0120	7	44 94 183		RH, RHD	1	Control arm	Manöverarm	
0130	7	44 94 043		RH, LHD	1	Control arm	Manöverarm	
0140	7	44 94 035		LH, RHD	1	Control arm	Manöverarm	
0150	8	44 94 050		38)	1	Ball	Kula	5
0160	9	44 94 076		LH, LHD	1	Companion flange	Medbringare	3
0170	9	44 94 084		RH, RHD	1	Companion flange	Medbringare	3
0180	10	44 94 092			2	Spring	Fjäder	5
0190	11	44 94 100		38)	1	Roller	Rulle	5
0200	12	44 94 233		LH, LHD	1	Spring	Fjäder	5
0210	12	44 94 241		RH, RHD	1	Spring	Fjäder	5
0220	13	79 71 732		RHD	1	O-ring	O-ring	
0230								
0240	15	43 22 954		38,243)	1	Microswitch	Mikrobrytare	3
0250	15	47 10 778		38,244)	1	Microswitch	Mikrobrytare	3
0260	15	43 22 947		39,243)	1	Microswitch	Mikrobrytare	3
0270	15	47 10 786		39,244)	1	Microswitch	Mikrobrytare	3
0280	16	43 46 177			2	Clamp	Klämma	5
0290	17	79 84 784			2	Tensioning band	Spännband	5
0300								
0310	20	44 94 191		51) -1995, LH	1	Handle	Handtag	5
0320	20	44 94 209		51) -1995, RH	1	Handle	Handtag	5
0330	20	46 97 397		1996-, LH	1	Handle	Handtag	5
0340	20	46 97 405		1996-, RH	1	Handle	Handtag	5
0350	21	44 94 019			2	.Seal	.Tätning	4
0360	22	43 04 556			2	Bracket	Konsol	
0370	23	79 77 952			2	Hexagon nut	Sexkantsmutter	5


38. Drivers side. Förarsida.
39. Passenger side. Passagerarsida.
51. Whenever you replace a handle on cars manufactured before chassis No R2002496, replace rods 4323150 left and 4323168 right with 4494217 left and 4494225 right as well. Vid byte av handtag på bilar tillverkade före chassi nr R2002496 ska även stång 4323150 vänster, 4323168 höger, bytas mot 4494217 vänster, 4494225 höger.
243. Ch. -T2002381, -T7000408
244. Ch. T2002382-, T7000409-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

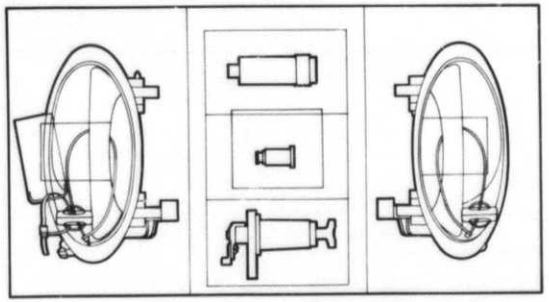

①

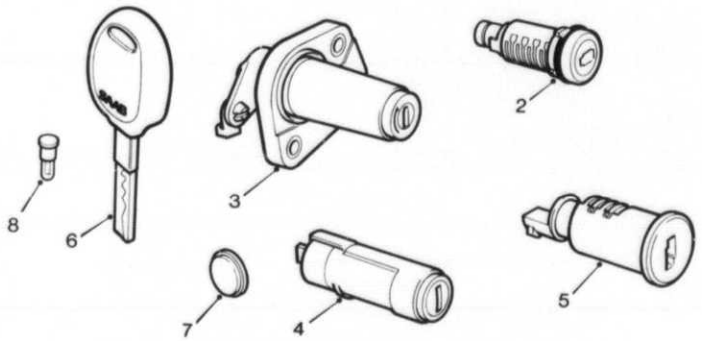

F5023 AAC94

Doors, trunk lid — Dörrar, bagagerumslucka

5 -E08

Lock — *Lås*

Lock cylinder set — *Låscylindersats*

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 25 809		3D, 5D, LHD, DOOR LH AND	1	Lock kit	Låssats	5
0020				RH, IGNITION, TRUNK DOOR				
0030				AND GLOVE COMPARTMENT				
0040								
0050	1	43 25 817		3D, 5D, RHD, DOOR LH AND	1	Lock kit	Låssats	5
0060				RH, IGNITION, TRUNK DOOR				
0070				AND GLOVE COMPARTMENT				
0080								
0090	1	44 92 591		CV, LHD	1	Lock kit	Låssats	5
0100				DOOR LH AND RH,IGNITION,				
0110				TRUNK DOOR, REAR SEAT				
0120				AND GLOVE COMPARTMENT				
0130								
0140	1	44 92 609		CV, RHD	1	Lock kit	Låssats	5
0150				DOOR LH AND RH,IGNITION,				
0160				TRUNK DOOR, REAR SEAT				
0170				AND GLOVE COMPARTMENT				
0180								
0190								
0200		74 97 373		DOOR, WITH 1 KEY	2	.Lock cylinder	.Låscylinder	5
0210		74 97 381		TRUNKDOOR, WITH 1 KEY	1	.Lock	.Lås	4
0220		74 97 399		IGNITION, WITH 1 KEY	1	.Lock cylinder	.Låscylinder	5
0230								
0240								
0250				41)		LOCK	LÅS	
0260								
0270	2	44 93 581		DOOR,	X	Lock cylinder	Låscylinder	5
0280				STATE KEY CODE				
0290	3	43 25 775		TRUNKDOOR,	X	Lock cylinder	Låscylinder	5
0300				STATE KEY CODE				
0310	4	89 60 221		IGNITION, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0320	5	43 26 807		GLOVE COMPARTMENT,	X	Lock cylinder	Låscylinder	3
0330				STATE KEY CODE				
0340								
0350	5	43 26 807		CV, REAR SEAT	X	Lock cylinder	Låscylinder	3
0360				STATE KEY CODE				
0370								
0380	6	43 25 957		WITHOUT LIGHT,	X	Key	Nyckel	5
0390				STATE KEY CODE				
0400	6	43 25 965		WITH LIGHT,	X	Key	Nyckel	5
0410				STATE KEY CODE				
0420	7	44 94 126			X	.Battery	.Batteri	
0430	8	44 94 118			X	.Bulb	.Glödlampa	
0440		44 94 142		WITHOUT LIGHT	X	Key	Nyckel	5
0450						blank	ämne	
0460		44 94 134		WITH LIGHT	X	Key	Nyckel	5
0470						blank	ämne	


41. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nycke! till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

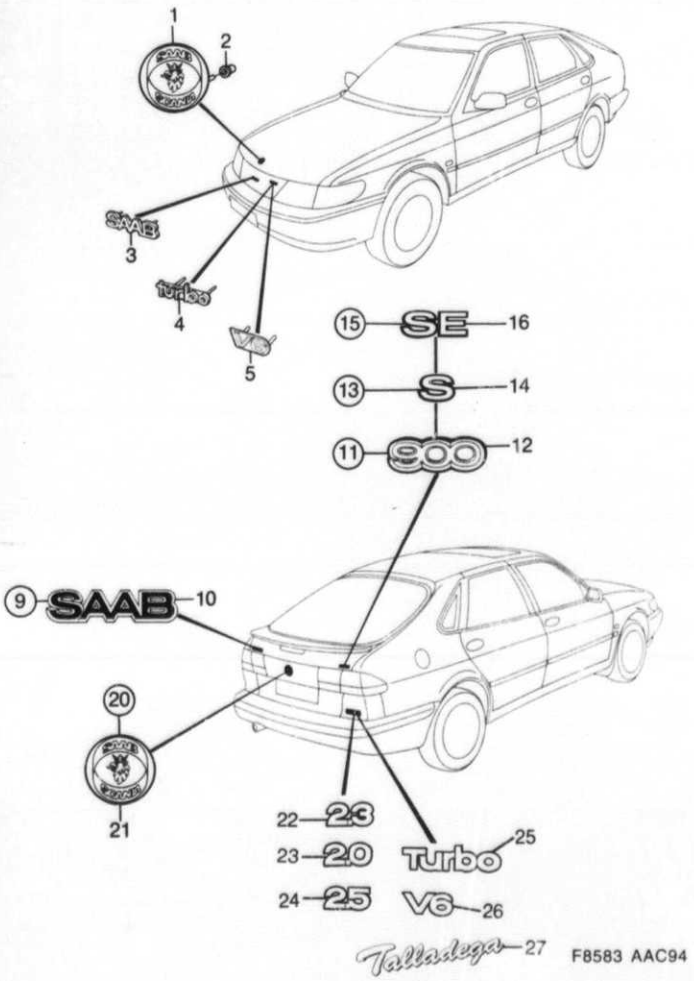

F8583 AAC94

5-E10

External details, glass, sealings

Emblem

Utvändiga detaljer, glas, tätningslister

Emblem

0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 11 895*		-1995, "SAAB-SCANIA"	1	Emblem	Emblem	3
0010				NLS – USE 4522884				
0020	1	45 22 884		1996-, "SAAB-SCANIA"	1	Emblem	Emblem	3
0030	2	69 15 706			2	Bushing	Bussning	3
0040	3			"SAAB"	1	Emblem	Emblem	
0050				See page 8A-073, 5-D02				
0060	4			"TURBO"	X	Emblem	Emblem	
0070				See page 8A-073, 5-D02				
0080	5			"V6"	X	Emblem	Emblem	
0090				See page 8A-073, 5-D02				
0100	9	42 40 891		"SAAB"	1	Emblem	Emblem	3
0110	10	*44 00 800*		NLS	1	.Decal tape	.Emblemtejp	3
0120	11	42 40 883		"900"	1	Emblem	Emblem	3
0130	12	*44 00 784*		NLS	1	.Decal tape	.Emblemtejp	3
0140	13	44 80 380		"S"	1	Emblem	Emblem	3
0150	14	*44 80 422*		NLS	1	.Decal tape	.Emblemtejp	3
0160	15	44 80 398		"SE"	1	Emblem	Emblem	3
0170	16	*44 80 430*		NLS	1	.Decal tape	.Emblemtejp	3
0180	20	42 40 941		"SAAB-SCANIA"	1	Emblem	Emblem	3
0190	21	44 01 154			1	.Decal tape	.Emblemtejp	3
0200	20	41 71 856		"SAAB-SCANIA"	1	Emblem	Emblem	3
0210				FOR REFLECTION PANEL				
0220	21	42 54 249			1	.Decal tape	.Emblemtejp	3
0230	22	46 76 763		1997-, "2.3"	1	Emblem	Emblem	
0240	23	46 76 755		1997-, "2.0"	1	Emblem	Emblem	
0250	24	46 76 631		1997-, "2.5"	1	Emblem	Emblem	
0260	25	46 76 797		1997-, "TURBO"	1	Emblem	Emblem	
0270	26	46 76 789		1997 , "V6"	1	Emblem	Emblem	
0280	27	49 14 594		1997-, "TALLADEGA"	1	Emblem	Emblem	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-E12

External details, glass, sealings
Decor, 5D

Utvändiga detaljer, glas, tätningslister
Dekor, 5D

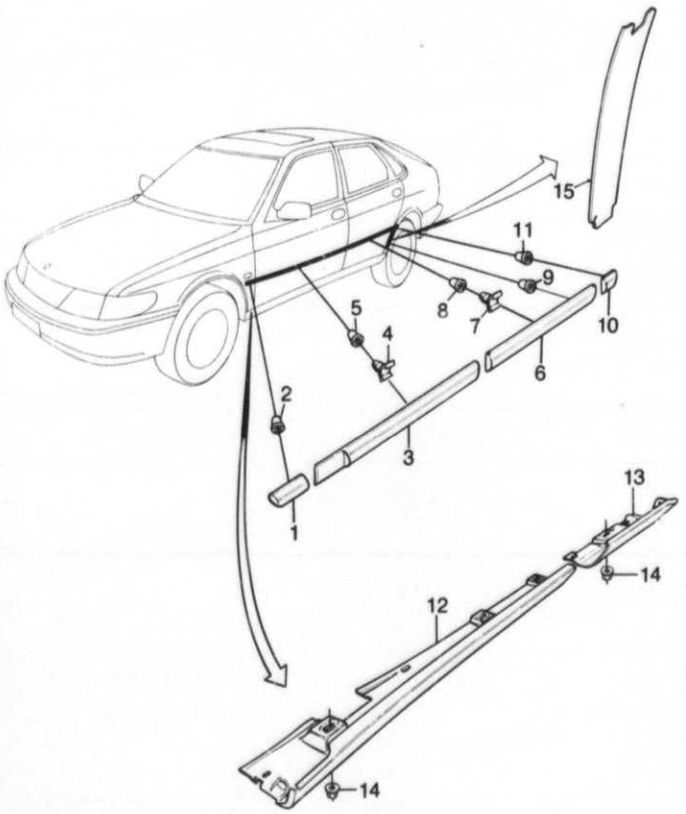

F6014 AAC94

0950	Pos	Part No/Art nr	K %	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 40 362		LH	1	Decor strip	Dekorlist	2
0020	1	42 40 396		RH	1	Decor strip	Dekorlist	2
0030	2	44 69 854			2	.Bushing	.Bussning	5
0040								
0050	3	42 41 014		LH	1	Decor strip	Dekorlist	2
0060	3	42 41 022		RH	1	Decor strip	Dekorlist	2
0070	4	42 45 957			6	.Clip	.Clips	5
0080	5	44 69 854			7	.Bushing	.Bussning	5
0090								
0100	6	42 40 974		LH	1	Decor strip	Dekorlist	2
0110	6	42 40 982		RH	1	Decor strip	Dekorlist	2
0120	7	42 45 957			3	.Clip	.Clips	5
0130	8	44 69 854			4	.Bushing	.Bussning	5
0140	9	44 69 862			1	.Bushing	.Bussning	5
0150								
0160	10	42 40 990		LH	1	Decor strip	Dekorlist	2
0170	10	42 41 006		RH	1	Decor strip	Dekorlist	2
0180								
0190	11	73 73 269			4	Bushing	Bussning	5
0200								
0210	12	42 40 156		LH	1	Sill protection	Tröskelskydd	5
0220	12	42 40 164		RH	1	Sill protection	Tröskelskydd	5
0230								
0240	13	42 40 172		LH	1	Sill protection	Tröskelskydd	5
0250	13	42 40 180		RH	1	Sill protection	Tröskelskydd	5
0260								
0270	14	40 87 128			14	Plastic nut	Plastmutter	5
0280								
0290	15	43 99 754		LH	1	Stone guard	Stenskottsskydd	
0300	15	43 99 747		RH	1	Stone guard	Stenskottsskydd	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16


5-E14

External details, glass, sealings

Decor, 3D, CV

Utvändiga detaljer, glas, tätningslister

Dekor, 3D, CV

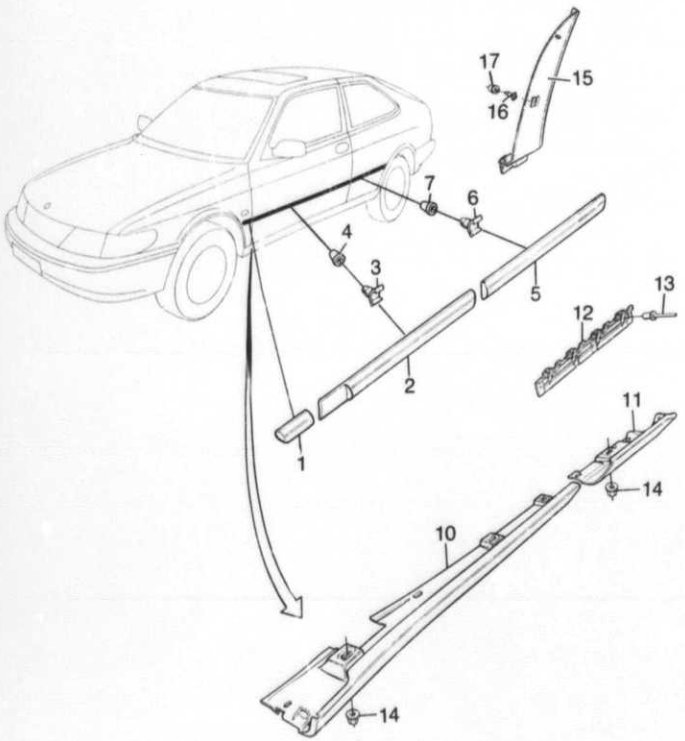

F7621 AAC94


0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 40 958		LH	1	Decor strip	Dekorlist	2
0020	1	42 40 966		RH	1	Decor strip	Dekorlist	2
0030	1A	44 69 854			2	.Bushing	.Bussning	5
0040								
0050	2	42 48 118		LH	1	Decor strip	Dekorlist	2
0060	2	42 48 100		RH	1	Decor strip	Dekorlist	2
0070	3	42 45 957			7	.Clip	.Clips	5
0080	4	44 69 854			8	.Bushing	.Bussning	5
0090								
0100	5	42 48 159		LH	1	Decor strip	Dekorlist	2
0110	5	42 48 142		RH	1	Decor strip	Dekorlist	2
0120	6	42 45 957			3	.Clip	.Clips	5
0130	7	44 69 854			4	.Bushing	.Bussning	5
0140								
0150	10	42 48 035		LH	1	Sill protection	Tröskelskydd	5
0160	10	42 48 027		RH	1	Sill protection	Tröskelskydd	5
0170								
0180	11	42 48 050		LH	1	Sill protection	Tröskelskydd	5
0190	11	42 48 043		RH	1	Sill protection	Tröskelskydd	5
0200								
0210	12	42 49 967			2	Rail	Skena	
0220	13	48 30 154			8	Rivet	Nit	
0240	14	40 87 128			14	Plastic nut	Plastmutter	5
0250								
0260	15	43 73 932		LH	1	Stone guard	Stenskottsskydd	
0270	15	43 73 924		RH	1	Stone guard	Stenskottsskydd	
0280	16	92 53 329			4	Clip	Clips	5
0290	17	73 73 269			6	Bushing	Bussning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

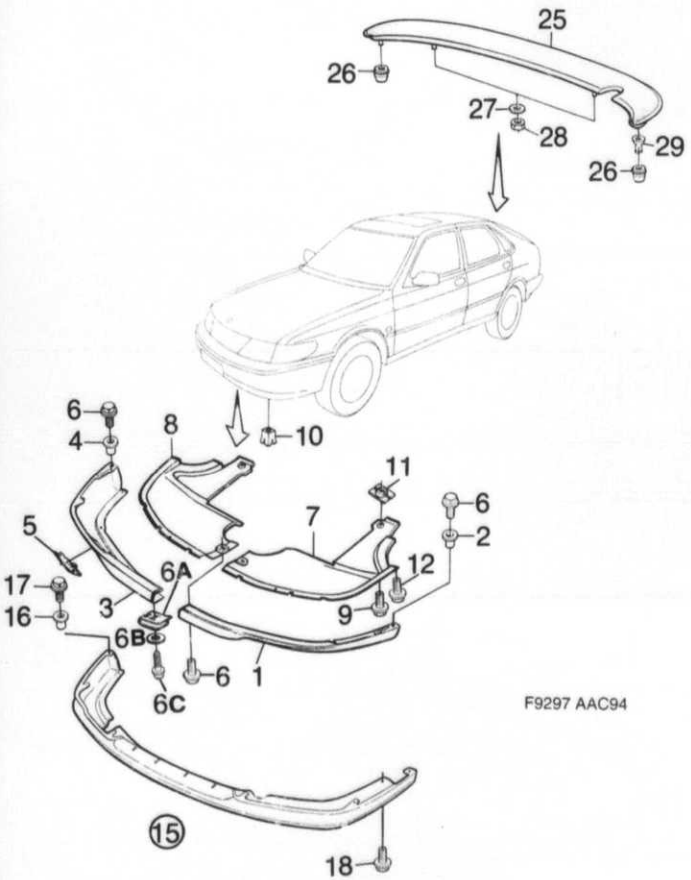

F9297 AAC94

5-E16

External details, glass, sealings
Spoiler

Utvändiga detaljer, glas, tätningslister
Spoiler

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 98 491*		129) LH NLS – USE 4522694	1	Spoiler	Spoiler	3
0010								
0020	1	45 22 694		130) LH	1	Spoiler	Spoiler	3
0030	2	90 87 040			2	.Nut	.Mutter	5
0040	3	*43 98 509*		129) RH NLS – USE 4522702	1	Spoiler	Spoiler	3
0040								
0050	3	45 22 702		130) RH	1	Spoiler	Spoiler	3
0060	4	90 87 040			1	.Nut	.Mutter	5
0070	5	42 48 720		129)	1	.Cover	.Lock	4
0080	5	42 48 720		130)	1	Cover	Lock	4
0090	6	79 82 325			3	Screw	Skruv	5
0100	6A	79 75 071		1998-	1	Clip nut	Klämmutter	5
0110	6B	79 81 954		1998-	1	Washer	Bricka	5
0120	6C	79 70 601		1998-	1	Screw	Skruv	5
0130								
0140	7	43 34 470		129) LH	1	Air shield	Luft. kärm	5
0150		79 67 995			4	.Clip nut	.Clip mutter	3
0160	7	42 96 174		130) LH	1	Air shield	Luftskärm	5
0170		79 67 995			2	.Clip nut	.Clipsmutter	3
0180								
0190	8	43 34 488		129) RH	1	Air shield	Luftskärm	5
0200		79 67 995			5	.Clip nut	.Clipsmutter	3
0210	8	42 96 182		130) RH	1	Air shield	Luftskärm	5
0220		79 67 995			3	.Clip nut	.Clipsmutter	3
0230								
0240	9	79 83 000			14	Hexagon screw	Sexkantsskruv	5
0250	10	79 75 261			2	Nut	Mutter	5
0260	11	43 33 704			4	Expanding nut	Expandermutter	3
0270	12	79 75 337			2	Screw	Skruv	5
0280								
0290	15	44 81 412		TALLADEGA	1	Spoiler	Spoiler	
0300	16	90 87 040			2	.Nut	.Mutter	5
0310	17	79 82 325			2	Screw	Skruv	5
0320	18	79 77 465			2	Screw	Skruv	5
0330								
0340	25	*42 40 149*		195) NLS – USE 4673331	1	Spoiler	Spoiler	3
0350	25	46 73 331		196)	1	Spoiler	Spoiler	3
0360	26	44 80 869			2	Bushing	Bussning	5
0370	27	44 81 073			3	Washer	Bricka	
0380	28	79 77 929			3	Nut	Mutter	5
0390	29	44 01 675			2	Clip	Clips	


129. Ch. –S2001487, –S7011160
130. Ch. S2001488–, S7011161–
195. Ch. –S2039850
196. Ch. S2039851–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

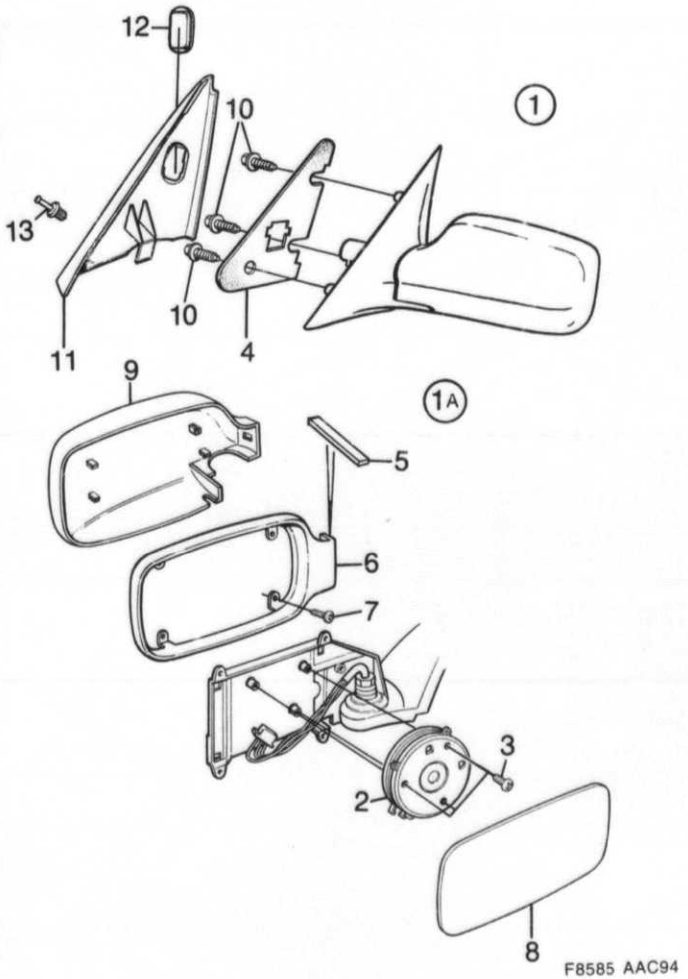

External details, glass, sealings

5-E18 *External mirror*

Utvändiga detaljer, glas, tätningslister

Utvändiga backspeglar

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*44 71 116*		158) LH,3D,5D,WIDE ANGLE LHD SE, EU, ME, PA NLS - USE 4684924	1	Rear view mirror	Backspegel	3
0030	1	*44 71 116*		1995-,158) LHD LA NLS – USE 4684924	1	Rear view mirror	Backspegel	3
0040	1	46 84 924		159) -1996 LH,3D,5D,WIDE ANGLE LHD SE, EU, ME, PA, LA	1	Rear view mirror	Backspegel	3
0070	1	46 84 924		358) 1997- LH,3D,5D,WIDE ANGLE LHD SE, EU, PA, LA	1	Rear view mirror	Backspegel	3
0100	1	48 24 116		358) 1997- LH,3D,5D,WIDE ANGLE LHD ME	1	Rear view mirror	Backspegel	3
0140	1	*46 03 874*		158) LH, CV, WIDE ANGLE LHD SE, EU, ME, PA NLS - USE 4700258	1	Rear view mirror	Backspegel	3
0160	1	*46 03 874*		1995-,158) LHD LA NLS – USE 4700258	1	Rear view mirror	Backspegel	3
0170	1	47 00 258		159) -1996 LH, CV, WIDE ANGLE LHD SE, EU, ME, PA, LA	1	Rear view mirror	Backspegel	3
0200	1	47 00 258		358) 1997- LH, CV, WIDE ANGLE LHD SE, EU, PA, LA	1	Rear view mirror	Backspegel	3
0230	1	48 24 132		358) 1997- LH, CV, WIDE ANGLE LHD ME	1	Rear view mirror	Backspegel	3
0270	1	*42 68 884*		158)LH,3D,5D,CONV GLASS LHD PA RHD AU, GB, SE, PA NLS - USE 4684874	1	Rear view mirror	Backspegel	3
0300	1	46 84 874		159,358) LH, 3D, 5D, CONV GLASS LHD PA RHD AU, GB, SE, PA	1	Rear view mirror	Backspegel	3
0340	1	*46 03 890*		158)LH, CV, CONVEX GLASS LHD PA RHD AU, GB, SE, PA NLS - USE 4700209	1	Rear view mirror	Backspegel	3
0370	1	47 00 209		159,358) LH, CV, CONVEX GLASS LHD PA RHD AU, GB, SE, PA	1	Rear view mirror	Backspegel	3
0410	1	*42 68 900*		158)LH, 3D,5D,FLAT GLASS LHD US, CA NLS – USE 4684890	1	Rear view mirror	Backspegel	3
0430	1	46 84 890		159,358) LH, 3D, 5D, FLAT GLASS LHD US, CA	1	Rear view mirror	Backspegel	3
0460	1	*46 03 924*		158) LH, CV, FLAT GLASS LHD US, CA NLS – USE 4700225	1	Rear view mirror	Backspegel	3


158. Ch. -S2021870
159. Ch. S2021871-
199. Ch. -S2042854
358. For "Talladega" use pos. 1A, 8 and 9. För "Talladega" använd pos. 1A, 8 och 9.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

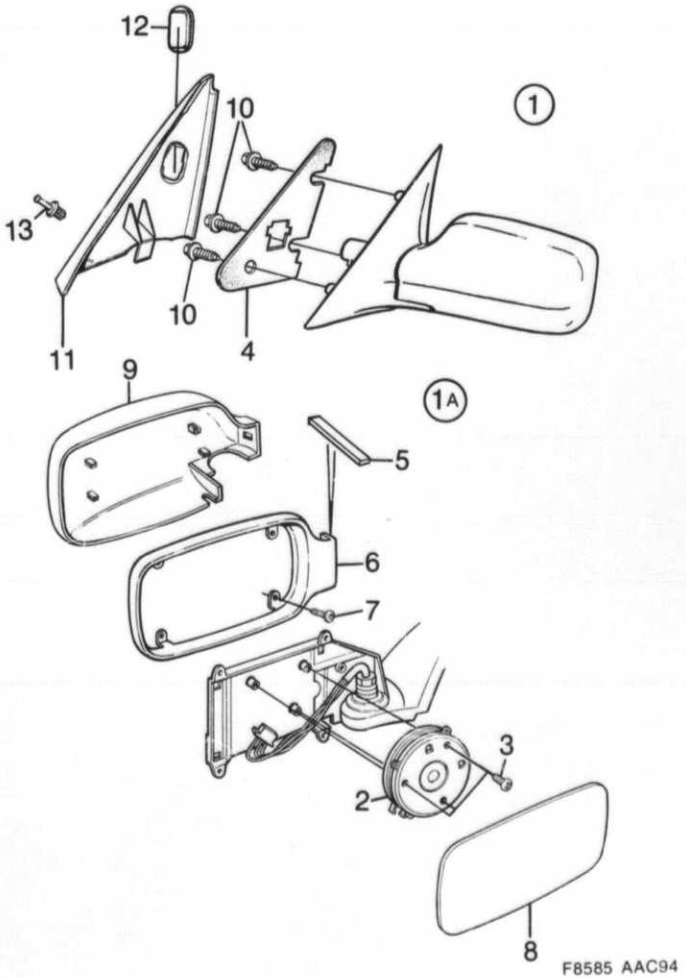

External details, glass, sealings

5 -E20 *External mirror*

Utvändiga detaljer, glas, tätningslister

Utvändiga backspeglar

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	1	47 00 225		159,358) LH, CV, FLAT GLASS LHD US, CA	1	Rear view mirror	Backspegel	3
0485								
0490								
0500								
0510	1	*44 71 124*		158) RH,3D,5D,WIDE ANGLE RHD GB NLS – USE 4684932	1	Rear view mirror	Backspegel	3
0520								
0530	1	46 84 932		159,358) RH, 3D, 5D, WIDE ANGEL RHD GB	1	Rear view mirror	Backspegel	3
0535								
0540								
0550								
0560	1	*46 03 882*		158) RH, CV, WIDE ANGLE RHD GB NLS – USE 4700266	1	Rear view mirror	Backspegel	3
0570								
0580	1	47 00 266		159,358) RH, CV, WIDE ANGEL RHD GB	1	Rear view mirror	Backspegel	3
0585								
0590								
0600								
0610	1	*42 68 892*		158) RH,3D,5D,CONV GLASS LHD SE, EU, ME, PA RHD SE, PA NLS – USE 4684882	1	Rear view mirror	Backspegel	3
0620								
0630								
0630								
0640	1	*42 68 892*		1995-,158) LHD LA NLS – USE 4684882	1	Rear view mirror	Backspegel	3
0640								
0650	1	46 84 882		159) -1996 RH,3D,5D,CONV GLASS LHD SE, EU, ME, PA, LA RHD SE, PA	1	Rear view mirror	Backspegel	3
0660								
0670								
0680								
0690	1	46 84 882		358) 1997- RH,3D,5D,CONV GLASS LHD SE, EU, PA, LA RHD SE, PA	1	Rear view mirror	Backspegel	3
0700								
0710								
0720								
0730	1	48 24 124		358) 1997- RH,3D,5D,CONV GLASS LHD ME	1	Rear view mirror	Backspegel	3
0740								
0750								
0760								
0770	1	*46 03 908*		158)RH, CV, CONVEX GLASS LHD SE, EU, ME, PA RHD SE, PA NLS – USE 4700217	1	Rear view mirror	Backspegel	3
0780								
0790								
0790								
0800	1	*46 03 908*		1995-,158) LHD LA NLS – USE 4700217	1	Rear view mirror	Backspegel	3
0800								
0810	1	47 00 217		159) -1996 RH, CV, CONVEX GLASS LHD SE, EU, ME, PA, LA RHD SE, PA	1	Rear view mirror	Backspegel	3
0820								
0830								
0840								
0850	1	47 00 217		358) 1997- RH, CV, CONVEX GLASS LHD SE, EU, PA, LA RHD SE, PA	1	Rear view mirror	Backspegel	3
0860								
0870								
0880								
0890	1	48 24 140		358) 1997- RH, CV, CONVEX GLASS LHD ME	1	Rear view mirror	Backspegel	3
0900								
0910								
0920								
0930	1	*42 68 918*		158)RH,3D,5D,CONV GLASS LHD US, CA NLS – USE 4684916	1	Rear view mirror	Backspegel	3
0940								
0940								
0950	1	46 84 916		159,358) RH, 3D, 5D, CONVEX GLASS LHD US, CA	1	Rear view mirror	Backspegel	3
0955								
0960								
0970								


158. Ch. -S2021870
159. Ch. S2021871-
199. Ch. -S2042854
358. For "Talladega" use pos. 1A, 8 and 9. För "Talladega" använd pos. 1A, 8 och 9.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

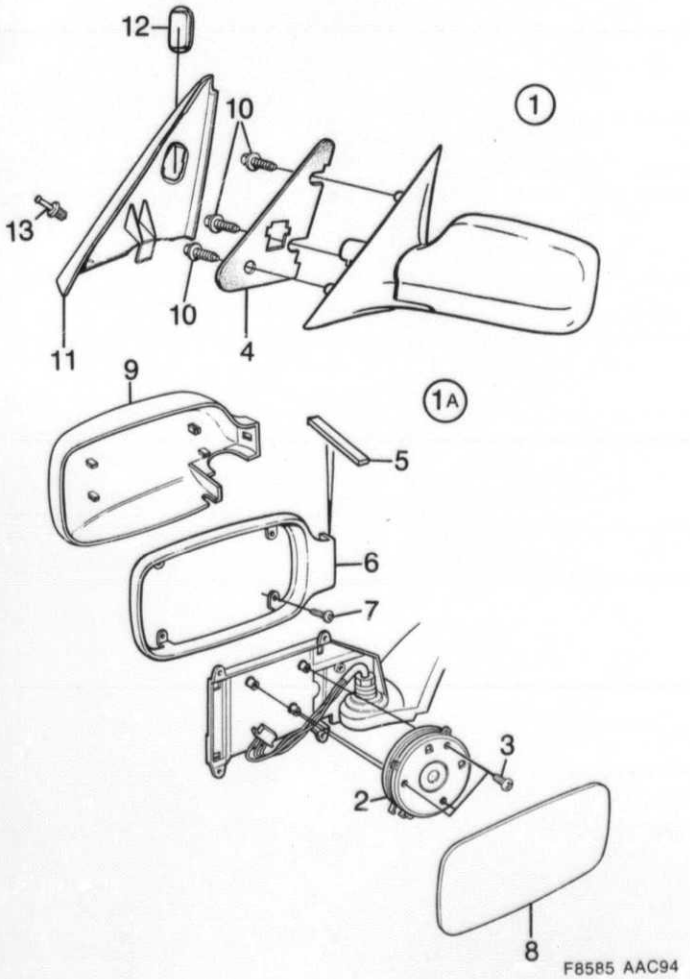

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5-E22 *External mirror* *Utvändiga backspeglar*

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0980	1	*46 03 916*		158)RH,CV,CONVEX GLASS	1	Rear view mirror	Backspegel	3
0990				LHD US, CA NLS – USE 4700241				
1000	1	47 00 241		159,358) RH, CV,	1	Rear view mirror	Backspegel	3
1005				CONVEX GLASS				
1010				LHD US, CA				
1020	1	*43 89 086*		158)RH,3D,5D,FLAT GLASS	1	Rear view mirror	Backspegel	3
1040				RHD AU NLS – USE 4684908				
1050	1	46 84 908		159,358) RH, 3D, 5D,	1	Rear view mirror	Backspegel	3
1055				FLAT GLASS				
1060				RHD AU				
1080	1	*46 03 932*		158) RH,CV,FLAT GLASS	1	Rear view mirror	Backspegel	3
1090				RHD AU NLS – USE 4700233				
1100	1	47 00 233		159,358) RH, CV,	1	Rear view mirror	Backspegel	3
1105				FLAT GLASS				
1110				RHD AU				
1130	1A	49 32 018		LH	1	.Rear view mirror	.Backspegel	3
1140	1A	49 32 026		RH	1	.Rear view mirror	.Backspegel	3
1150	1A	49 32 034		LH, CV	1	.Rear view mirror	.Backspegel	3
1160	1A	49 32 042		RH, CV	1	.Rear view mirror	.Backspegel	3
1180	2	45 08 081			1	..Drive unit	..Drivenhet	5
1190	3	45 08 099			3	..Screw	..Skruv	5
1200	4	43 89 979		3D, 5D	1	..Gasket	..Packning	5
1210	4	46 04 039		CV	1	..Gasket	..Packning	5
1220	5	46 07 008		1995-	1	..Seal	..Tätning	
1230	6	43 89 839		LH	1	..Frame	..Ram	
1240	6	43 89 847		RH	1	..Frame	..Ram	
1250	7	43 89 805			4	..Screw	..Skruv	5
1270	8	*44 71 132*		158) LH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
1280				LHD SE, EU, ME, PA NLS - USE 4818050				
1290	8	*44 71 132*		1995-,158) LHD LA NLS – USE 4818050	1	.Mirror glass	.Spegelglas	3
1300	8	*46 84 999*		159) -1996	1	.Mirror glass	.Spegelglas	3
1310				LH, WIDE ANGLE				
1320				LHD SE, EU, ME, PA, LA NLS – USE 4818050				
1330	8	*46 84 999*		1997-,283)	1	.Mirror glass	.Spegelglas	3
1340				LH, WIDE ANGLE				
1350				LHD SE, EU, PA, LA NLS - USE 4818050				
1360	8	48 18 050		284)	1	.Mirror glass	.Spegelglas	3
1370				LH, WIDE ANGLE				
1380				LHD SE, EU, PA, LA				
1390	8	48 24 157		1997-	1	.Mirror glass	.Spegelglas	3
1400				LH, WIDE ANGLE				
1410				LHD ME				
1430	8	*44 20 006*		158) LH, CONVEX	1	.Mirror glass	.Spegelglas	3
1440				LHD PA				
1450				RHD AU, GB, SE, PA NLS - USE 4818068				


158. Ch. –S2021870
159. Ch. S2021871–
199. Ch. –S2042854
283. Ch. –V2002556, –T7012503
284. Ch. V2002557–, T7012504–
358. For "Talladega" use pos. 1A, 8 and 9. För "Talladega" använd pos. 1A, 8 och 9.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

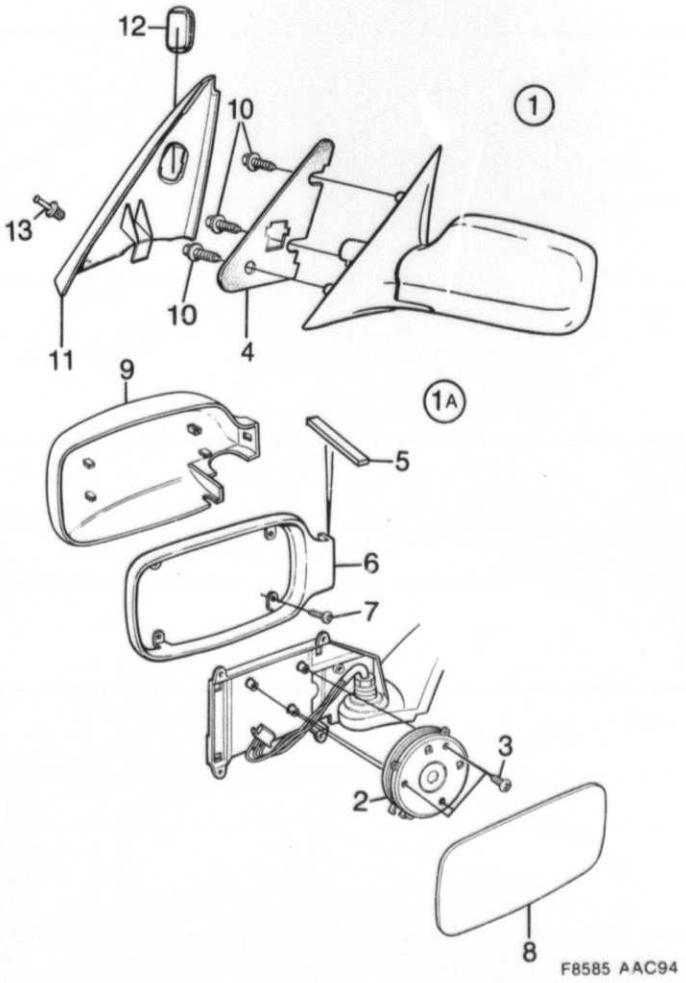

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1460	8	*46 84 940*		159,283) LH, CONVEX	1	.Mirror glass	.Spegelglas	3
1470				LHD PA				
1480				RHD AU, GB, SE, PA NLS - USE 4818068				
1490	8	48 18 068		284) LH, CONVEX	1	.Mirror glass	.Spegelglas	3
1500				LHD PA				
1510				RHD AU, GB, SE, PA				
1520								
1530	8	*44 20 014*		158) LH, FLAT	1	.Mirror glass	.Spegelglas	3
1540				LHD US, CA NLS – USE 4818076				
1550	8	*46 84 965*		159,283) LH, FLAT	1	.Mirror glass	.Spegelglas	3
1560				LHD US, CA NLS – USE 4818076				
1570	8	48 18 076		284) LH, FLAT	1	.Mirror glass	.Spegelglas	3
1580				LHD US, CA				
1590								
1600	8	*44 71 140*		158) RH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
1610				RHD GB NLS – USE 4818084				
1620	8	*47 00 001*		159,283) RH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
1630				RHD GB NLS – USE 4818084				
1640	8	48 18 084		284) RH, WIDE ANGLE	1	.Mirror glass	.Spegelglas	3
1650				RHD GB				
1660								
1670	8	*44 20 022*		158) RH, CONVEX	1	.Mirror glass	.Spegelglas	3
1680				LHD SE, EU, ME, PA				
1690				RHD SE, PA NLS – USE 4818092				
1690								
1700	8	*44 20 022*		1995-,158) LHD LA NLS – USE 4818092	1	.Mirror glass	.Spegelglas	3
1700								
1710	8	*46 84 957*		159) -1996	1	.Mirror glass	.Spegelglas	3
1720				RH, CONVEX				
1730				LHD SE, EU, ME, PA, LA				
1740				RHD SE, PA NLS – USE 4818092				
1740								
1750	8	*46 84 957*		1997-,283)	1	.Mirror glass	.Spegelglas	3
1760				RH, CONVEX				
1770				LHD SE, EU, PA, LA				
1780				RHD SE, PA NLS – USE 4818092				
1780								
1790	8	48 18 092		284)	1	.Mirror glass	.Spegelglas	3
1800				RH, CONVEX				
1810				LHD SE, EU, PA, LA				
1820				RHD SE, PA				
1830	8	48 24 165		1997-	1	.Mirror glass	.Spegelglas	3
1840				RH, CONVEX				
1850				LHD ME				
1860								
1870	8	*44 20 030*		158) RH, CONVEX	1	.Mirror glass	.Spegelglas	3
1880				LHD US, CA NLS – USE 4818100				
1880								
1890	8	46 84 981		159,283) RH, CONVEX	1	.Mirror glass	.Spegelglas	3
1900				LHD US, CA				
1910	8	48 18 100		284) RH, CONVEX	1	.Mirror glass	.Spegelglas	3
1920				LHD US, CA				
1930								
1940	8	*44 20 048*		158) RH, FLAT	1	.Mirror glass	.Spegelglas	3
1950				RHD AU NLS – USE 4818118				


158. Ch -S2021870
159. Ch. S2021871–
199. Ch. -S2042854
283. Ch. -V2002556, -T7012503
284. Ch. V2002557–, T7012504–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

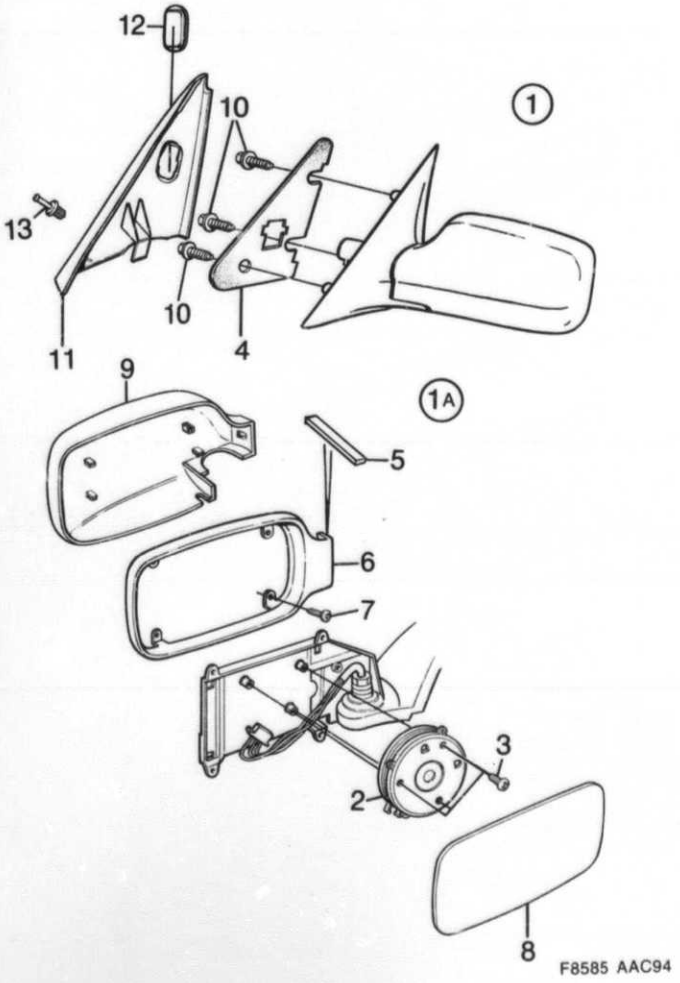

External details, glass, sealings

5 –F02 *External mirror*

Utvändiga detaljer, glas, tätningslister

Utvändiga backspeglar

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1960	8	*46 84 973*		159,283) RH, FLAT	1	.Mirror glass	.Spegelglas	3
1970				RHD AU NLS – USE 4818118				
1980	8	48 18 118		284) RH, FLAT	1	.Mirror glass	.Spegelglas	3
1990				RHD AU				
2000								
2010	9	43 89 854		LH	1	.Cover	.Kåpa	
2020	9	43 89 862		RH	1	.Cover	.Kåpa	
2030	9	48 88 186		109) LH	1	.Cover	.Kåpa	
2040	9	48 88 194		109) RH	1	.Cover	.Kåpa	
2050								
2060	10	79 78 422			3	Screw	Skruv	5
2070	11	42 30 827		3D, 5D, LH	1	Cover	Kåpa	
2080	11	42 15 364		3D, 5D, RH	1	Cover	Kåpa	
2090	11	45 51 040		CV, LH	1	Cover	Täcklock	4
2100	11	45 51 057		CV, RH	1	Cover	Täcklock	4
2110	12	43 89 235			2	Cover	Täcklock	
2120	13	43 45 872		CV	4	Rivet	Nit	5

109. Paintable design Lackeringsbart utförande
159. Ch. S2021871–
283. Ch. –V2002556, –T7012503
284. Ch. V2002557–, T7012504–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5 -F04 *Windscreen* *Vindruta*

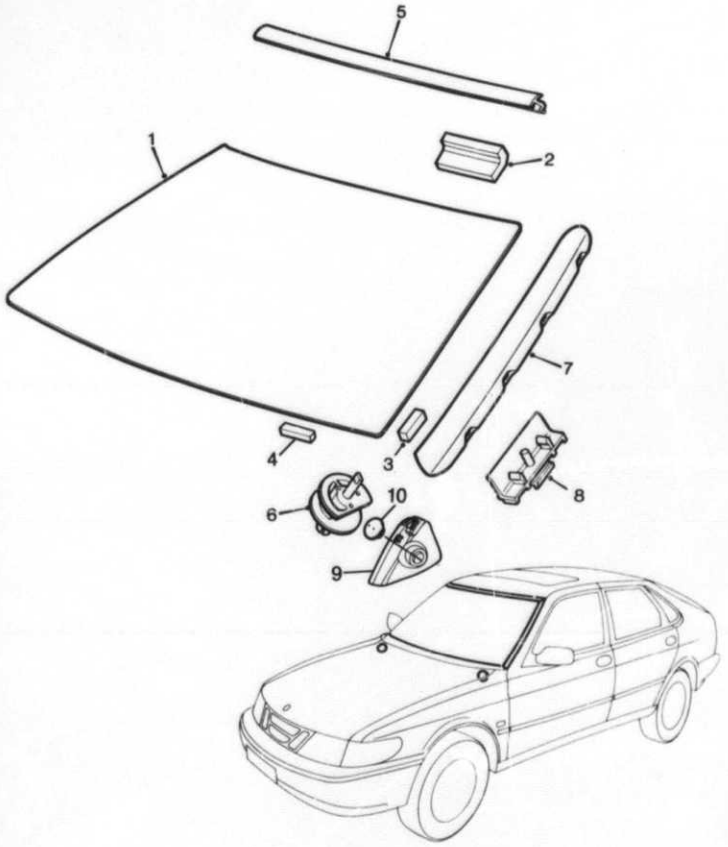

F6016 AAC94

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 035		-1996, COLOURED	1	Windscreen	Vindruta	3
0020				See page 8A-159, 5-G16				
0030	1	74 97 076		23)	1	Windscreen	Vindruta	3
0040				See page 8A-159, 5-G16				
0050	1	74 97 183		23) CV	1	Windscreen	Vindruta	3
0060				See page 8A-159, 5-G16				
0070	2	43 28 753			2	.Spacer	.Distans	5
0080	2	45 57 195		CV	2	.Spacer	.Distans	5
0090	3	40 13 603			2	.Spacer	.Distans	3
0100	3	45 57 203		CV	1	.Spacer	.Distans	5
0110	4	69 92 028		CV	1	.Spacer	.Distans	3
0120								
0130	5	43 29 991			1	Decor	Dekor	3
0140	5	43 70 557		CV	1	Decor	Dekor	3
0150	6	43 30 023			2	Eccentric washer	Excenterbricka	3
0151								
0160	7	43 30 031		LH	1	Decor	Dekor	3
0170	7	43 30 049		RH	1	Decor	Dekor	3
0180	8	44 93 722		(4326559)	4	.Clip	.Clips	5
0181								
0190	9	45 55 009		LH, CV	1	End piece	Ändstycke	
0200	9	45 55 017		RH, CV	1	End piece	Ändstycke	
0210	10	43 27 540		CV	2	Clip	Clips	4


23. Heat-absorbing glass Värmeabsorberande glas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

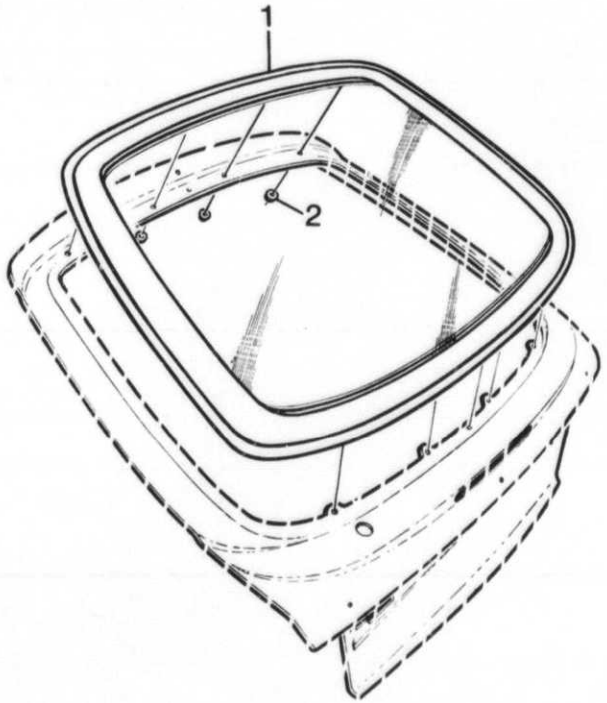

F5029 AAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5 -F06

Rear window

Bakruta

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 20 966*		84) NLS – USE 4559472	1	Rear window	Bakruta	4
0020	1	*45 57 252*		85) NLS – USE 4559472	1	Rear window	Bakruta	4
0030	1	*43 07 195*		23,84) NLS – USE 4559472	1	Rear window	Bakruta	4
0040	1	*45 57 260*		23,85,197) NLS – USE 4559472	1	Rear window	Bakruta	4
0040								
0050	1	45 59 472		23,198)	1	Rear window	Bakruta	4
0060	2	73 98 423			8	Nut	Mutter	5


23. Heat-absorbing glass Värmeabsorberande glas
84. Ch. –R2022822
85. Ch. R2022823–
197. Ch. –S2043900
198. Ch. S2043901–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

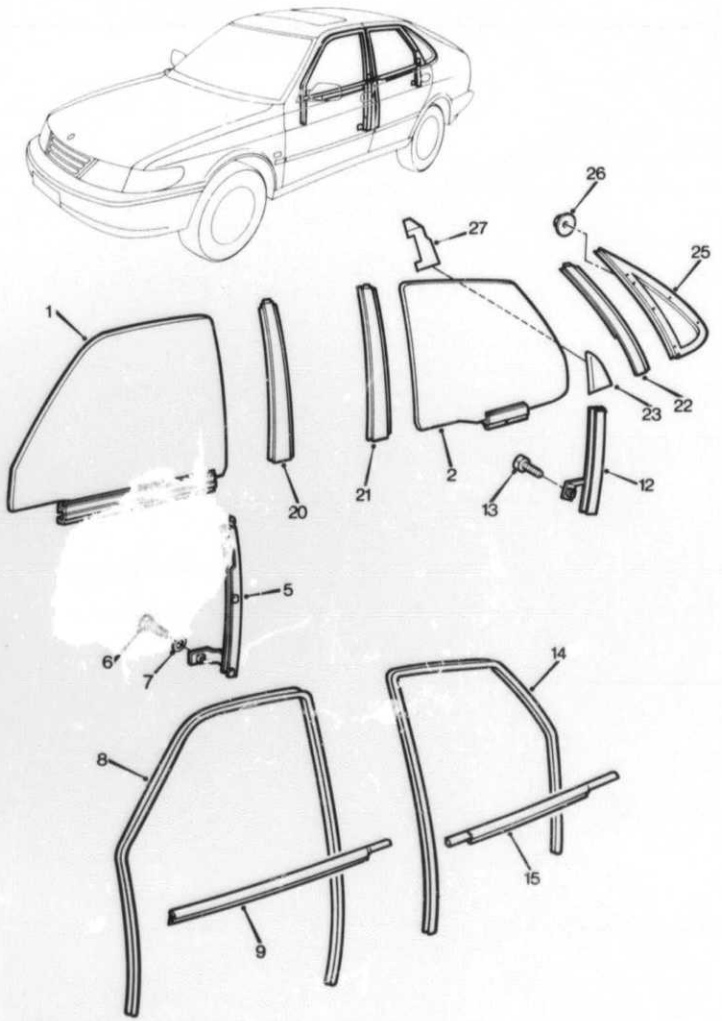

F5636 AAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5 -F08

Doors and side windows,5D — *Dörr- och sidorutor, 5D*

1075	Pos	Part No/A..nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 22 236		-1996, LH	1	Door window	Dörruta	4
0020	1	43 22 244		-1996, RH	1	Door window	Dörruta	4
0030	1	43 07 211		23) LH	1	Door window	Dörruta	4
0040	1	43 07 229		23) RH	1	Door window	Dörruta	4
0050								
0060	2	43 22 418		-1996, LH	1	Door window	Dörruta	4
0070	2	43 22 426		-1996, RH	1	Door window	Dörruta	4
0080	2	43 07 252		23) LH	1	Door window	Dörruta	4
0090	2	43 07 260		23) RH	1	Door window	Dörruta	4
0100								
0110	5	43 22 210		LH	1	Guide rail	Styrskena	
0120	5	43 22 228		RH	1	Guide rail	Styrskena	
0130	6	79 78 422			2	Screw	Skruv	5
0140	7	79 81 954			2	Washer	Bricka	5
0150								
0160	8	43 22 475		LH	1	Seal	Tätning	5
0170	8	43 22 483		RH	1	Seal	Tätning	5
0180								
0190	9	43 22 517		LH	1	Seal	Tätning	4
0200	9	43 22 525		RH	1	Seal	Tätning	4
0210								
0220	12	43 22 350		LH	1	Guide rail	Styrskena	4
0230	12	43 22 368		RH	1	Guide rail	Styrskena	4
0240	13	79 78 422			2	Screw	Skruv	5
0250								
0260	14	43 22 491		LH	1	Seal	Tätning	5
0270	14	43 22 509		RH	1	Seal	Tätning	5
0280								
0290	15	43 22 533		LH	1	Seal	Tätning	4
0300	15	43 22 541		RH	1	Seal	Tätning	4
0310								
0320	20	43 22 673		LH	1	Cover	Avtäckning	4
0330	20	43 22 681		RH	1	Cover	Avtäckning	4
0340	21	43 22 715		LH	1	Cover	Avtäckning	4
0350	21	43 22 723		RH	1	Cover	Avtäckning	4
0360	22	43 22 699		LH	1	Cover	Avtäckning	4
0370	22	43 22 707		RH	1	Cover	Avtäckning	4
0380	23	*45 50 281*		88) LH NLS – USE 4853297	1	Cover	Täckkåpa	3
0390	23	*45 50 299*		88) RH NLS – USE 4325148	1	Cover	Täckkåpa	3
0400	23	43 25 130		89,377) LH	1	Cover	Täckkåpa	3
0410	23	43 25 148		89,377) RH	1	Cover	Täckkåpa	3
0420	23	48 53 297		378) LH	1	Cover	Täckkåpa	
0430	23	48 53 305		378) RH	1	Cover	Täckkåpa	
0440								
0450	25	*43 30 056*		254) LH NLS – USE 4556759	1	Side window	Sidoruta	5
0460	25	*43 30 064*		254) RH NLS – USE 4556767	1	Side window	Sidoruta	5
0470	25	45 56 759		255) -1996, LH	1	Side window	Sidoruta	
0480	25	45 56 767		255) -1996, RH	1	Side window	Sidoruta	
0490	25	*43 07 153*		23,254) LH NLS – USE 4556775	1	Side window	Sidoruta	5
0500	25	*43 07 161*		23,254) RH NLS – USE 4556783	1	Side window	Sidoruta	5
0510	25	45 56 775		23,255) LH	1	Side window	Sidoruta	5
0520	25	45 56 783		23,255) RH	1	Side window	Sidoruta	5


23. Heat-absorbing glass Värmeabsorberande glas
88. Ch. -R2025329
89. Ch. R2025330-
254. Ch. -R2014597
255. Ch. R2014598-
377. Ch. -V2041741
378. Ch. V2041742-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

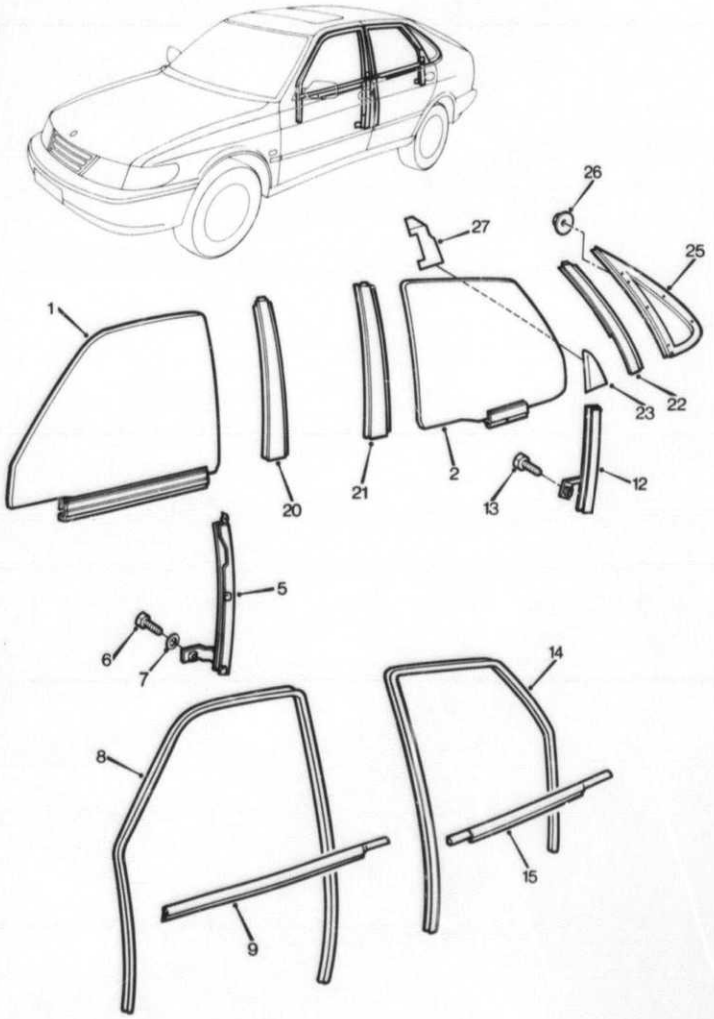

F5636 AAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5 –F10

Doors and side windows,5D

Dörr- och sidorutor, 5D

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	26	73 98 423			10	Nut	Mutter	5
0540	27	44 94 357		63) LH	1	Water drainage	Vattenavledare	
0550	27	44 94 365		63) RH	1	Water drainage	Vattenavledare	
0560	27	45 50 828		64) LH	1	Water drainage	Vattenavledare	
0570	27	45 50 836		64) RH	1	Water drainage	Vattenavledare	

63. Ch. -R2008305
64. Ch. R2008306-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-F12

Doors and side windows,3D
Dörr- och sidorutor, 3D

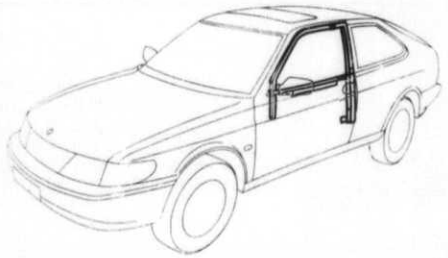

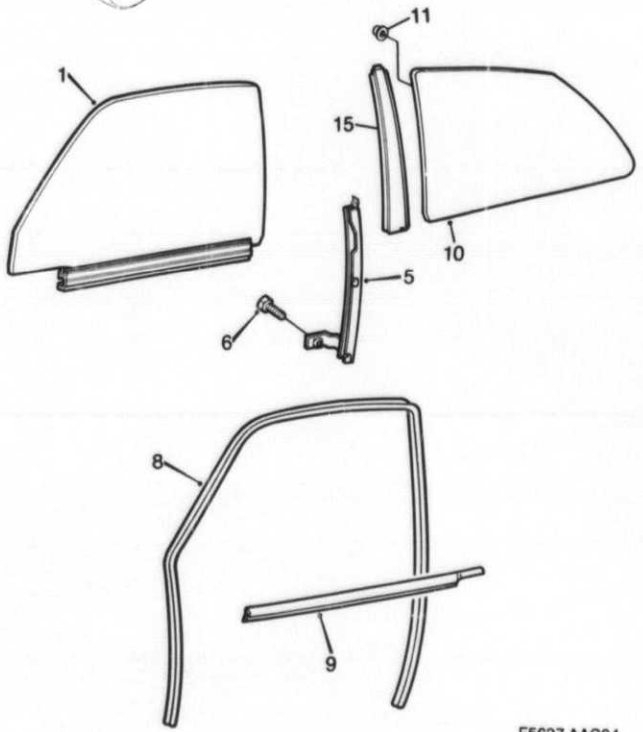

F5637 AAC94

10@0	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 25 510		1996, LH	1	Door window	Dörruta	4
0020	1	43 25 528		1996, RH	1	Door window	Dörruta	4
0030	1	43 07 310		23) LH	1	Door window	Dörruta	4
0040	1	43 07 328		23) RH	1	Door window	Dörruta	4
0050								
0060	5	43 25 718		LH	1	Guide rail	Styrskena	
0070	5	43 25 726		RH	1	Guide rail	Styrskena	
0080	6	79 78 091			4	Screw	Skruv	5
0090								
0100	8	43 25 577		LH	1	Seal	Tätning	5
0110	8	43 25 585		RH	1	Seal	Tätning	5
0120								
0130	9	43 25 593		LH	1	Seal	Tätning	4
0140	9	43 25 601		RH	1	Seal	Tätning	4
0150								
0160	10	43 25 379		-1996, LH	1	Side window	Sidoruta	5
0170	10	43 25 387		-1996, RH	1	Side window	Sidoruta	5
0180	10	43 07 351		23) LH	1	Side window	Sidoruta	5
0190	10	43 07 369		23) RH	1	Side window	Sidoruta	5
0200	11	73 98 423			10	Nut	Mutter	5
0210								
0270	15	43 25 759		LH	1	Cover	Avtäckning	4
0280	15	43 25 767		RH	1	Cover	Avtäckning	4


23. Heat-absorbing glass Värmeabsorberande glas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

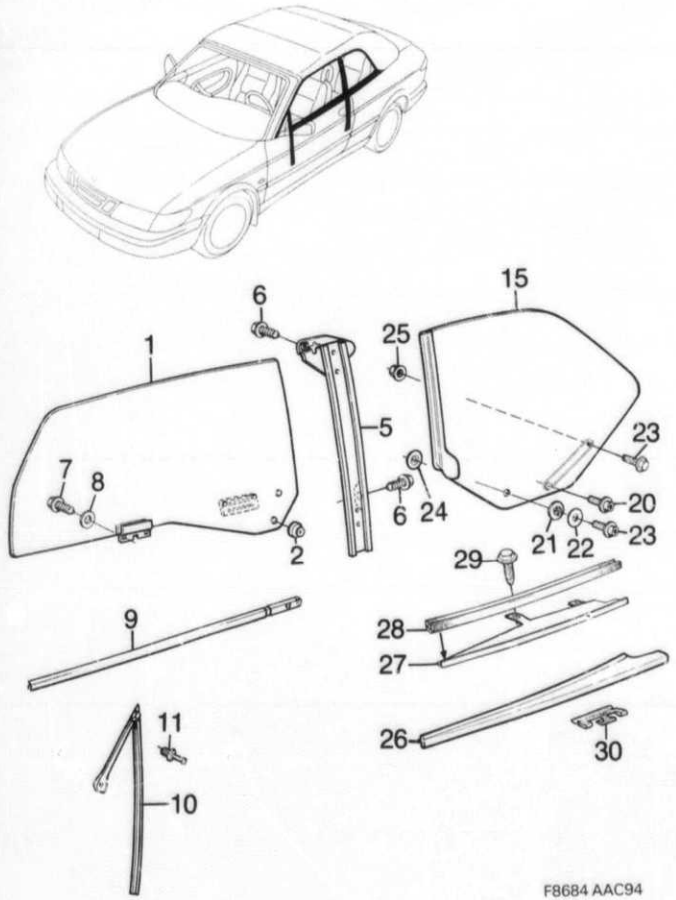

F8684 AAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5-F14

Door and side windows, CV

Dörr- och sidorutor, CV

1085 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	*43 70 359*		238) LH NLS – USE 4766622	1	Door window	Dörruta	4
0020 1	*43 70 367*		238) RH NLS – USE 4766630	1	Door window	Dörruta	4
0030 1	47 66 622		239) LH	1	Door window	Dörruta	4
0040 1	47 66 630		239) RH	1	Door window	Dörruta	4
0050 2	47 66 465		239)	2	,Guide bushing	,Styrbussning	
0060							
0070 5	43 70 235		LH	1	Guide moulding	Styrlist	
0080 5	43 70 243		RH	1	Guide moulding	Styrlist	
0090 6	43 46 078			6	Hexagon screw	Sexkantsskruv	
0100 7	79 78 422			4	Screw	Skruv	5
0110 8	79 75 469			4	Washer	Bricka	5
0120							
0130 9	43 70 177		LH	1	Seal	Tätning	4
0140 9	43 70 185		RH	1	Seal	Tätning	4
0150 10	*45 51 081*		252) LH NLS – USE 4345872, 4697769	1	Seal	Tätning	5
0160 10	*45 51 099*		252) RH NLS – USE 4345872, 4697777	1	Seal	Tätning	5
0170 10	46 97 769		253) LH	1	Seal	Tätning	5
0180 10	46 97 777		253) RH	1	Seal	Tätning	5
0190 11	43 45 872		253)	1	Rivet	Nit	5
0200 15	46 95 011		LH (4370037)	1	Side window	Sidoruta	5
0210 15	46 95 029		RH (4370045)	1	Side window	Sidoruta	5
0220 20	69 36 397			2	Screw	Skruv	5
0230 21	69 36 389			2	Clip	Clips	5
0240 22	73 11 772			2	Washer	Bricka	5
0250 23	79 78 091			4	Screw	Skruv	5
0260 24	69 36 371			2	Washer	Bricka	5
0270 25	79 77 952			2	Hexagon nut	Sexkantsmutter	5
0280 26	45 58 219		212) LH (4370599)	1	Decor strip	Dekorlist	4
0290 26	45 58 227		212) RH (4370565)	1	Decor strip	Dekorlist	4
0300 26	46 97 801		213) LH	1	Decor strip	Dekorlist	4
0310 26	46 97 819		213) RH	1	Decor strip	Dekorlist	4
0320 27	43 70 532		LH	1	Attaching plate	Fästplåt	3
0330 27	43 70 540		RH	1	Attaching plate	Fästplåt	3
0340 28	43 70 458			2	Seal	Tätning	5
0350 29	79 79 610			4	Screw	Skruv	5
0360 30	44 93 193		185)	2	Clip	Clips	5
0370 30	46 85 087		186)	2	Clip	Clips	5


185. Ch. –S7016504
186. Ch. S7016505–
212. Ch. –T7001218
213. Ch. T7001219–
238. Ch. –T7001965
239. Ch. T7001966–
252. Ch. –T7004728
253. Ch. T7004729–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

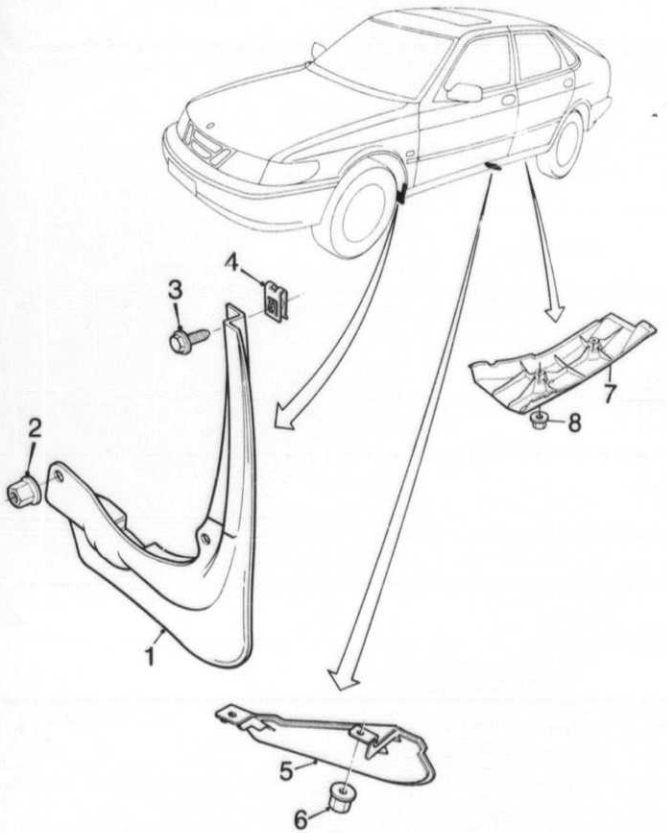

F8685 AAC94

External details, glass, sealings

5-F16 *Splash guard*

Utvändiga detaljer, glas, tätningslister

Stänkskydd

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 35 691		LH	1	Baffle	Stänkskydd	4
0020	1	43 35 709		RH	1	Baffle	Stänkskydd	4
0030	2	40 87 128			2	Plastic nut	Plastmutter	5
0040	3	79 78 679		-1994	6	Hexagon screw	Sexkantsskruv	
0050	3	79 78 661		1995-	6	Hexagon screw	Sexkantsskruv	5
0060	4	92 36 753			2	Clip	Clips	5
0070								
0080	5	43 36 038		365) LH	1	Baffle	Stänkskydd	5
0090	5	43 36 046		365) RH	1	Baffle	Stänkskydd	5
0100	6	40 87 128		365)	4	Plastic nut	Plastmutter	5
0110								
0120	7	48 30 808		366)	1	Baffle	Stänkskydd	
0130	8	40 87 128		366)	2	Plastic nut	Plastmutter	5


365. Ch. -V2042267
366. Ch. V2042268-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

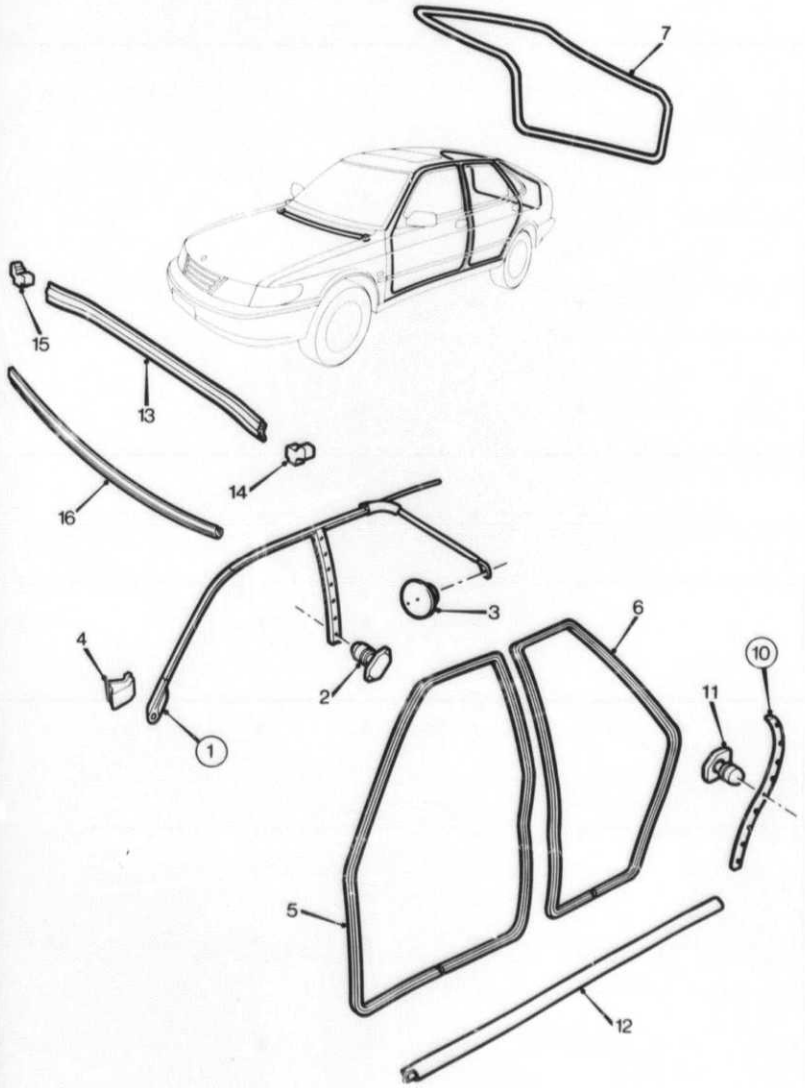

F5032 AAC94

5-F18

External details, glass, sealings

Other sealings 5D

Utvändiga detaljer, glas, tätningslister

Övriga lister 5D

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 22 590		LH	1	Seal	Tätning	5
0020	1	43 22 608		RH	1	Seal	Tätning	5
0030	2	43 24 901			6	.Clip	.Clips	4
0040	3	43 27 540			6	Clip	Clips	4
0050								
0060	4	44 93 177		LH	1	Seal	Tätning	5
0070	4	44 93 185		RH	1	Seal	Tätning	5
0080								
0090	5	43 22 558		2)	2	Seal	Tätning	5
0100	6	43 22 558		3) L=3210MM	2	Seal	Tätning	5
0110								
0120	7	*43 20 974*		208) NLS – USE 4698767	1	Seal	Tätning	4
0130	7	46 98 767		209)	1	Seal	Tätning	4
0140								
0150	10	*43 22 632*		101) NLS – USE 4550968	2	Seal	Tätning	3
0160	10	45 50 968		102)	2	Seal	Tätning	5
0170	11	43 24 901			9	.Clip	.Clips	4
0180								
0240	12	* 48 58 437		LH	1	Seal	Tätning	
0250	12	* 48 58 445		RH	1	Seal	Tätning	
0260								
0270	13	43 03 798			1	Seal	Tätning	3
0280	14	43 24 117		LH	1	Seal	Tätning	5
0290	15	43 24 125		RH	1	Seal	Tätning	5
0300								
0310	16			See page 8A-071, 5-C24	1	Seal	Tätning	


2. Front. Främre.
3. Rear. Bakre.
101. Ch. –R2032318
102. Ch. R2032319–
208. Ch. –S2044070
209. Ch. S2044071–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

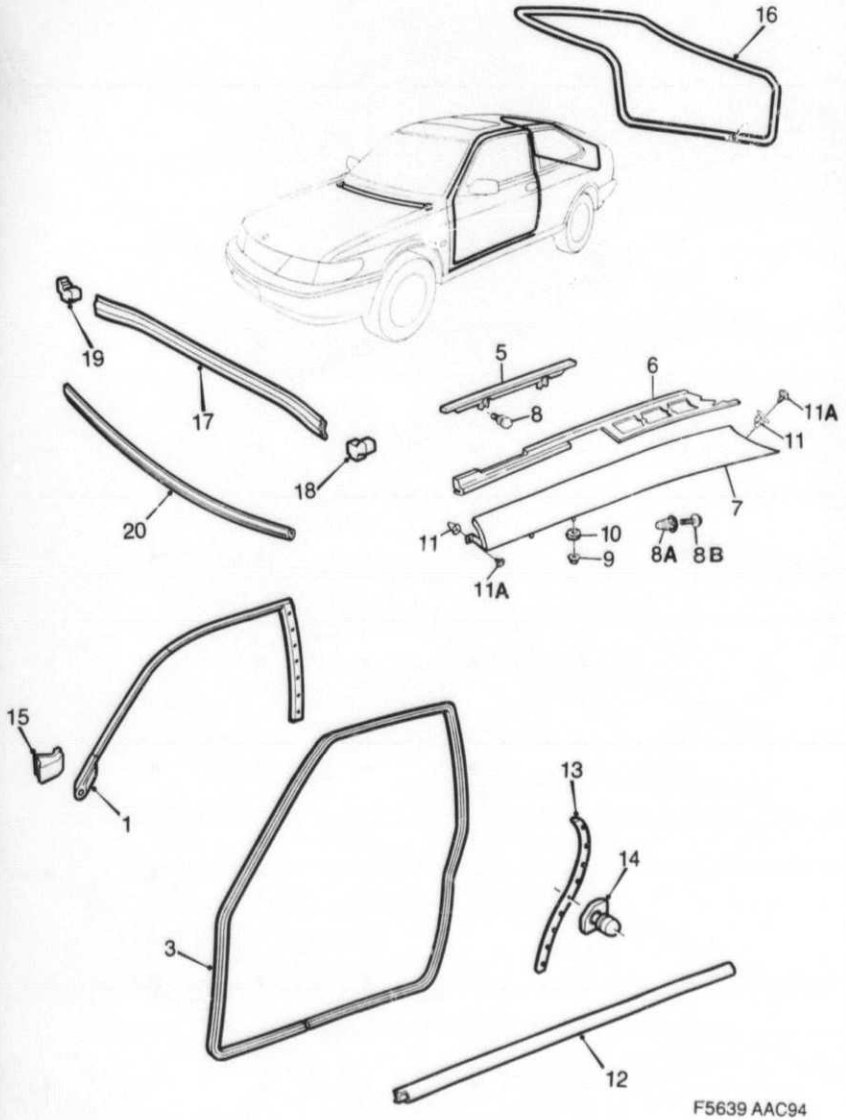

5-F20

External details, glass, sealings

Other sealings 3D

Utvändiga detaljer, glas, tätningslister

Övriga lister 3D

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	43 25 635		LH	1	Seal	Tätning	5
1	43 25 643		RH	1	Seal	Tätning	5
3	43 25 619			2	Seal	Tätning	5
5	43 27 995		LH	1	Cover	Lock	5
5	43 28 001		RH	1	Cover	Lock	5
6	43 27 235		LH	1	Seal	Tätning	5
6	43 27 243		RH	1	Seal	Tätning	5
7	43 39 271		LH	1	Roof panel	Takpanel	
7	43 39 289		RH	1	Roof panel	Takpanel	
8	43 35 873			4	Screw	Skruv	
8A	69 11 804			4	Bushing	Bussning	4
8B	79 72 938			4	Screw	Skruv	5
9	79 77 929			4	Nut	Mutter	5
10	85 37 623			4	Washer	Bricka	3
11	43 39 842			4	Press nut	Pressmutter	5
11A	79 77 796			4	Screw	Skruv	5
12	• 48 58 452		LH	1	Seal	Tätning	
12	• 48 58 460		RH	1	Seal	Tätning	
13	45 50 976			2	Seal	Tätning	
14	43 24 901			8	.Clip	.Clips	4
15	44 93 177		LH	1	Seal	Tätning	5
15	44 93 185		RH	1	Seal	Tätning	5
16	*43 20 974*		208) NLS – USE 4698767	1	Seal	Tätning	4
16	46 98 767		209)	1	Seal	Tätning	4
17	43 03 798			1	Seal	Tätning	3
18	43 24 117		LH	1	Seal	Tätning	5
19	43 24 125		RH	1	Seal	Tätning	5
20			See page 8A-071, 5-C24	X	Seal	Tätning	


208. Ch. -S2044070
209. Ch. S2044071-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

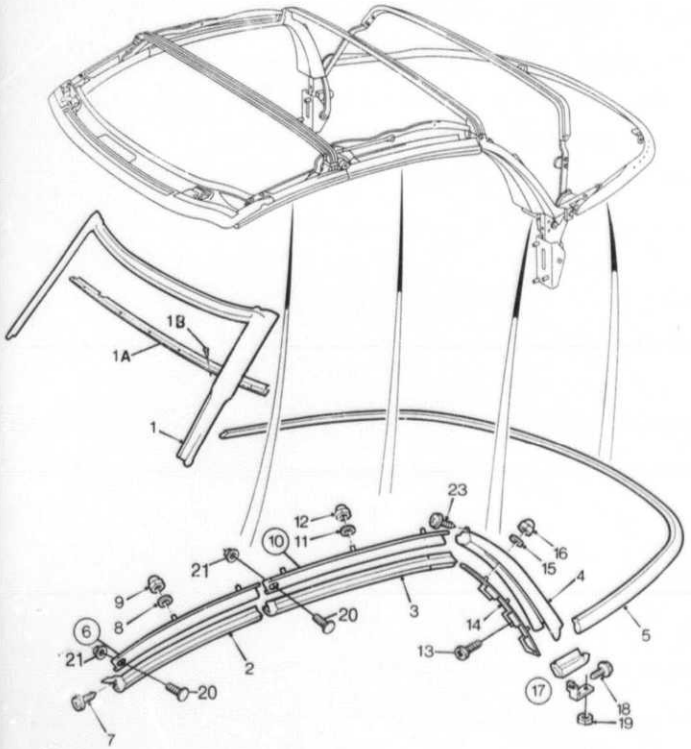

F8686 AAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

5 –F22

Other sealings CV, Part 1

Övriga lister CV, Del 1

1150	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	*45 51 107*		-1995 NLS – USE 4854352	1	Seal	Tätning	5
0020	1	*46 96 092*		1996-,234) NLS – USE 4854352	1	Seal	Tätning	5
0030	1	*47 67 729*		235,318) NLS – USE 4854352	1	Seal	Tätning	5
0040	1	48 53 768		319,348)	1	Seal	Tätning	5
0050	1	48 54 352		349)	1	Seal	Tätning	5
0060	1A	43 71 902			1	Retainer strip	Hållarlist	5
0070	1B	84 08 882			8	Screw	Skruv	5
0080	2	*44 92 351*		240) LH NLS – USE 4695995	1	Seal	Tätning	5
0090	2	46 95 995		241) LH	1	Seal	Tätning	5
0100	2	*44 92 369*		240) RH NLS – USE 4696001	1	Seal	Tätning	5
0110	2	46 96 001		241) RH	1	Seal	Tätning	5
0120	3	*44 92 377*		240) LH NLS – USE 4696019	1	Seal	Tätning	5
0130	3	46 96 019		241) LH	1	Seal	Tätning	5
0140	3	*44 92 385*		240) RH NLS – USE 4696027	1	Seal	Tätning	5
0150	3	46 96 027		241) RH	1	Seal	Tätning	5
0160	4	*44 92 427*		240) LH NLS – USE 4767737	1	Seal	Tätning	5
0170	4	47 67 737		241) LH (4696043)	1	Seal	Tätning	5
0180	4	*44 92 435*		240) RH NLS – USE 4767745	1	Seal	Tätning	5
0190	4	47 67 745		241) RH (4696050)	1	Seal	Tätning	5
0200	5	*44 92 344*		-1995, BOW NO. 5 NLS – USE 4559076	1	Seal	Tätning	
0210	5	45 59 076		1996-, BOW NO. 5	1	Seal	Tätning	
0230	6	*44 94 654*		-1995, LH NLS – USE 4767406, 4767950, 7977911	1	Bracket	Hållare	5
0240	6	*44 94 662*		-1995, RH NLS – USE 4767406, 4767968, 7977911	1	Bracket	Hållare	5
0250	7	45 55 660			2	.Screw	.Skruv	5
0260	8	45 55 934		10)	2	.Washer	.Bricka	
0270	9	45 56 072		10)	2	.Cap nut	.Kupolmutter	5
0280	9	45 56 163		11)	2	.Nut washer	.Mutterbricka	
0300	6	47 67 950		1996-, LH	1	Bracket	Hållare	5
0310	6	47 67 968		1996-, RH	1	Bracket	Hållare	5
0330	10	44 94 670		-1995, LH	1	Bracket	Hållare	5
0340	10	*44 94 688*		-1995, RH NLS – USE 4767406, 4767984, 7977911	1	Bracket	Hållare	5
0350	11	45 55 934		10)	3	.Washer	.Bricka	
0360	12	45 56 072		10)	3	.Cap nut	.Kupolmutter	5
0370	12	45 56 163		11)	3	.Nut washer	.Mutterbricka	


10. CV, ch. –S7009999
11. CV, ch. S7010000–
199. Ch. –S2042854
234. Ch. –T7002791
235. Ch. T7002792–
240. Ch. –T7002199
241. Ch. T7002200–
318. Ch. –T7003597
319. Ch. T7003599–
348. Ch. –V7006417
349. Ch. V7006418–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-J04
Complete sets	5-G16

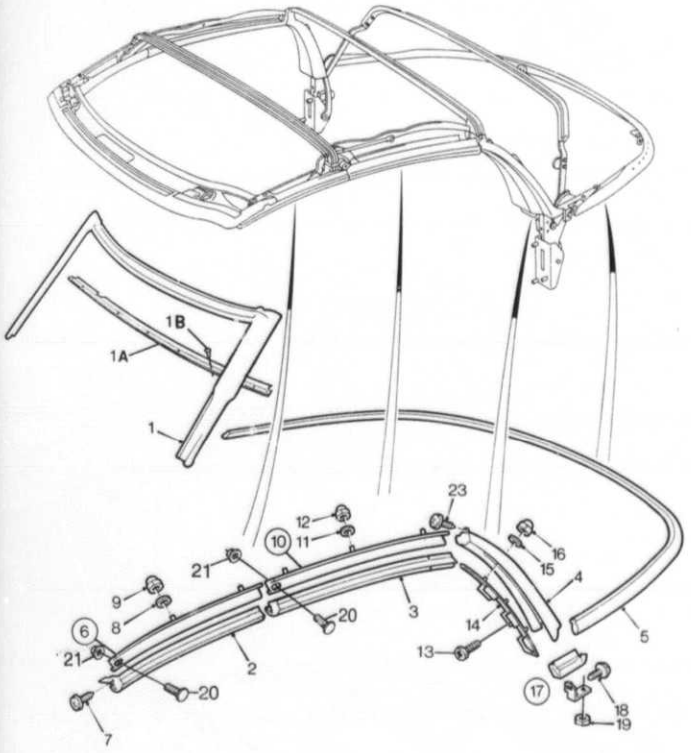

F8686 AAC94

5 –F24

External details, glass, sealings

Other sealings CV, Part 1

Utvändiga detaljer, glas, tätningslister

Övriga lister CV, Del 1

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0380							
0390	10 47 67 976		1996-, LH	1	Bracket	Hållare	5
0400	10 47 67 984		1996-, RH	1	Bracket	Hållare	5
0410							
0420	13 45 55 777			6	Screw	Skruv	
0430	14 44 94 878		LH	1	Retainer strip	Hållarlist	5
0440	14 44 94 886		RH	1	Retainer strip	Hållarlist	5
0450	15 45 55 934		10)	3	Washer	Bricka	
0460	16 45 56 072		10)	3	Cap nut	Kupolmutter	5
0480							
0490	17 44 94 712		LH	1	Seal	Tätning	
0500	17 44 94 720		RH	1	Seal	Tätning	
0510	18 45 55 678			2	.Screw	.Skruv	
0520	19 45 56 163			2	.Nut washer	.Mutterbricka	
0530							
0540	20 47 67 406		1996-	10	Screw	Skruv	5
0550	21 79 77 911		1996-	10	Nut	Mutter	5
0560							
0570	23 45 55 660			2	Screw	Skruv	5


10. CV, ch. –S7009999

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

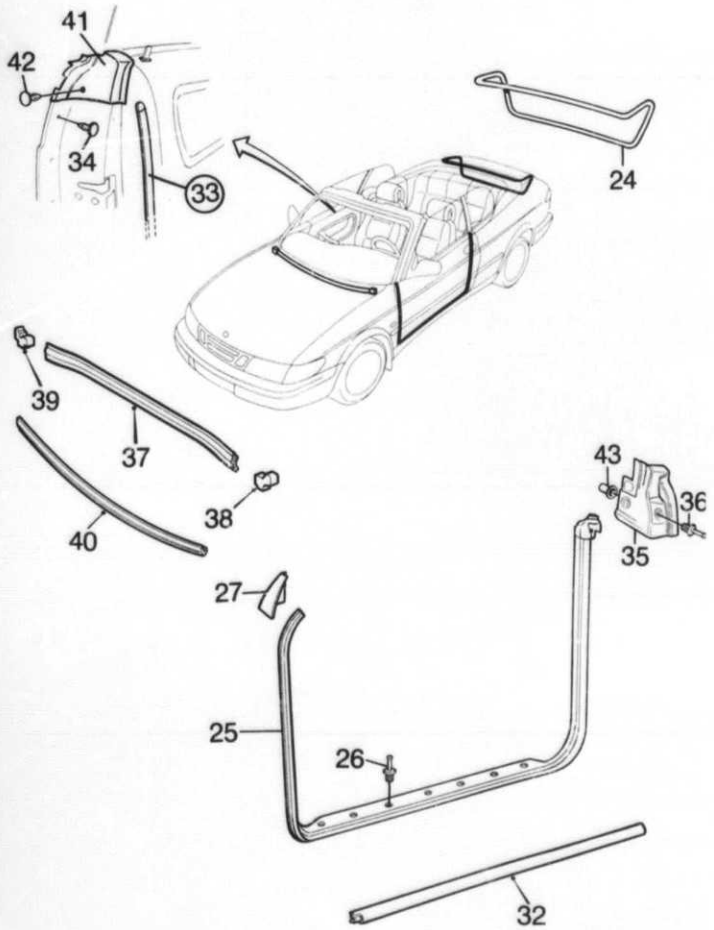

F8687 AAC94

5 -G02

External details, glass, sealings

Other sealings CV, Part 2

Utvändiga detaljer, glas, tätningslister

Övriga lister CV, Del 2

1160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	24	*43 70 227*		224) NLS – USE 4767489	1	Sealing strip	Tätningslist	4
0020	24	47 67 489		225)	1	Sealing strip	Tätningslist	4
0030								
0040	25	43 70 094		LH	1	Sealing strip	Tätningslist	3
0050	25	43 70 102		RH	1	Sealing strip	Tätningslist	3
0060	26	43 45 872			14	Rivet	Nit	5
0070								
0080	27	45 58 078		252) LH	1	Seal	Tätning	
0090	27	45 58 086		252) RH	1	Seal	Tätning	
0100								
0150	32	• 48 58 460		LH	1	Seal	Tätning	
0160	32	• 48 58 460		RH	1	Seal	Tätning	
0170								
0180	33	45 50 430		LH	2	Seal	Tätning	3
0190	34	43 24 901			8	.Clip	.Clips	4
0200								
0210	35	43 70 110		LH	1	Cover	Täckkåpa	
0220	35	43 70 128		RH	1	Cover	Täckkåpa	
0230	36	43 45 872			4	Rivet	Nit	5
0240								
0250	37	43 03 798			1	Seal	Tätning	3
0260	38	43 24 117		LH	1	Seal	Tätning	5
0270	39	43 24 125		RH	1	Seal	Tätning	5
0280								
0290	40			See page 8A-071, 5-C24	X	Seal	Tätning	
0300	41	43 70 136		LH	1	Seal	Tätning	5
0310	41	43 70 144		RH	1	Seal	Tätning	5
0320	42	43 46 789			3	.Clip	.Clips	
0330								
0340	43	45 57 245			2	Bushing	Bussning	

224. Ch. -T7003095
225. Ch. T7003096-
252. Ch. -T7004728

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16


5 -G04

Bumpers and touch-up paint

Bumper, front

Stötfångare och bättringsfärg

Stötfångare, främre

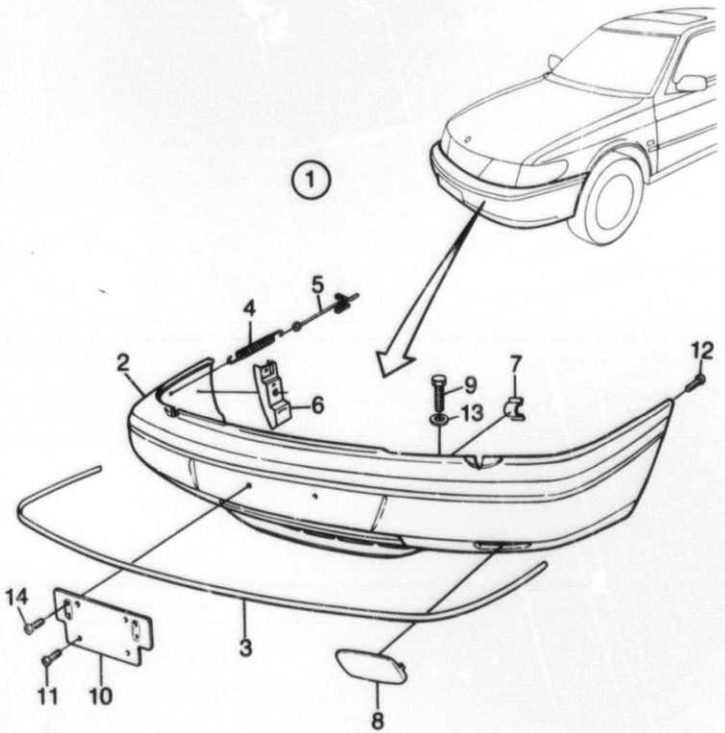

F6779 AAC94

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 80 091		109) -1997	1	Bumper	Stötfångare	3
0020	1	49 53 089		109) 1998-	1	Bumper	Stötfångare	
0030	1	44 80 612		110)	1	Bumper	Stötfångare	3
0040	1	49 53 089		109) TALLADEGA	1	Bumper	Stötfångare	
0050								
0060	2	44 80 109		109) -1997	1	.Outer casing	.Hölje	3
0070	2	49 53 147		109) 1998-	1	.Outer casing	.Hölje	
0080	2	42 48 688		110)	1	.Outer casing	.Hölje	3
0090	2	49 53 147		109) TALLADEGA	1	.Outer casing	.Hölje	
0100								
0110	3	42 48 753		-1997	1	.Decor strip	.Dekorlist	3
0120	3	49 14 826		110)	1	.Decor strip	.Dekorlist	
0130	4	43 99 770			2	.Tension spring	.Dragfjäder	4
0140	5	44 81 040			2	.Bracket	.Fäste	5
0150	6	42 48 639			2	.Retainer	.Hållare	5
0160	7	44 00 644			3	.Clip	.Clips	5
0170								
0180	8	42 48 738		LH	1	Cover	Lock	4
0190	8	42 48 746		RH	1	Cover	Lock	4
0200	9	73 99 884			2	Screw	Skruv	5
0210								
0220	10	69 21 142		US, JP	1	Bracket	Hållare	3
0230	11	79 77 390		US, JP	4	.Screw	.Skruv	5
0240								
0250	12	79 70 601			2	Screw	Skruv	5
0260	13	80 73 108			2	Washer	Bricka	5
0270								
0280	14	79 22 438			2	Screw	Skruv	5

109. Paintable design Lackeringsbart utförande
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-G06 *Bumper, rear* *Stötfångare, bakre*

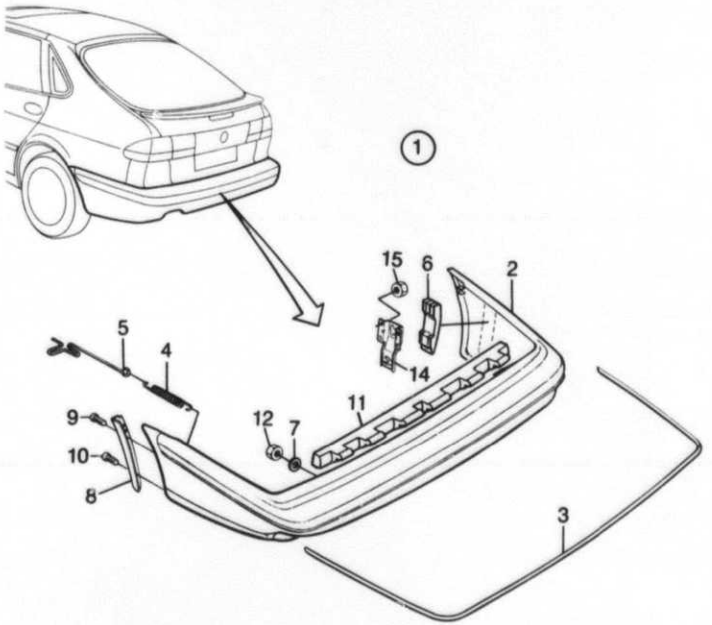

F7370 AAC94

1300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 80 117		109) -1997	1	Bumper	Stötfångare	4
0020	1	49 53 097		109) 1998-	1	Bumper	Stötfångare	
0030	1	42 40 107		110)	1	Bumper	Stötfångare	4
0040	1	49 53 097		109) TALLADEGA	1	Bumper	Stötfångare	
0050								
0060	2	44 80 125		109) -1997	1	.Outer casing	.Hölje	3
0070	2	49 53 154		109) 1998-	1	.Outer casing	.Hölje	
0080	2	42 48 605		110)	1	.Outer casing	.Hölje	3
0090	2	49 53 154		109) TALLADEGA	1	.Outer casing	.Hölje	
0100								
0110	3	42 48 795		-1997	1	.Decor strip	.Dekorlist	3
0120	3	49 14 834		110)	1	.Decor strip	.Dekorlist	
0130	4	43 99 770			2	.Tension spring	.Dragfjäder	4
0140	5	44 81 057			2	.Bracket	.Fäste	5
0150	6	43 98 616		LH	1	.Retainer	.Hållare	5
0160	6	43 98 624		RH	1	.Retainer	.Hållare	5
0170	7	*69 92 325*		NLS – USE 9234055	4	.Seal	.Tätning	5
0180	8	44 80 778		LH	1	.Cover	.Avtäckning	
0190	8	44 80 760		RH	1	.Cover	.Avtäckning	
0200	9	79 70 536			4	.Screw	.Skruv	6
0210	9	44 81 834			6	.Pop rivet	.Popnit	
0220	10	79 68 084			2	.Screw	.Skruv	5
0230	11	44 84 960		180)	1	.Support	.Stöd	
0240								
0250	12	79 67 979			4	Nut	Mutter	5
0260								
0270	14	43 98 632		LH	1	Bracket	Hållare	5
0280	14	43 98 640		RH	1	Bracket	Hållare	5
0290	15	79 77 952			6	Hexagon nut	Sexkantsmutter	5

109. Paintable design Lackeringsbart utförande
110. Black Svart
180. Ch. S2027462–

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 2-J02,3-A02
4 Transmission 4-A02
5 Brakes 4-D02
6 Front assembly, Steering 4-F02
7 Suspension, Wheels 4-G02
8A Body, external 5-A02
8B Body, internal 5-H02
8C Body, heating and ventilation 6-A02
8D Tool, Labels 6-C02
10 Numerical register 6-D02

8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-C24
Doors, trunk lid 5-D06
External details, glass, sealings 5-E10
Bumpers and touch-up paint 5-G04
Complete sets 5-G16

5 –G08

Bumpers and touch-up paint
1-can

Stötfångare och bättringsfärg
1-komponent

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 168		1995-, BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0030						Embassy blue	Ambassadblå	
0040	1/4L	96 98 176		1995-, BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0050						Embassy blue	Ambassadblå	
0060	1L	82 85 371		BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0070						Imola red	Imolaröd	
0100	1L	84 87 266		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0110						Cirrus white	Cirrusvit	
0120	1/4L	84 87 274		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0130						Cirrus white	Cirrusvit	
0140	1L	78 20 228		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0150						Black	Svart	
0160	1/4L	78 20 244		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0170						Black	Svart	
0180	1L	82 84 986		1997-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0190						Monte Carlo yellow	Monte Carlogul	
0200	1/4L	82 84 994		1997-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0210						Monte Carlo yellow	Monte Carlogul	
0220	1/4L	74 97 191		CV	X	Touch-up paint	Bättringsfärg	3
0230						windscreen frame	vindruteram	
0240						Black 249	Svart 249	
0250								
0260								
0270	1L	84 87 753			X	Thinner	Förtunning	5
0280	5L	84 87 761			X	Thinner	Förtunning	5
0290	1L	*88 16 415*		40), 20-80° NLS	X	Hardener	Härdare	5
0300								
0310						PRIMER	GRUNDFÄRG	
0320	1L	74 97 019			X	Primer	Grundfärg	6
0330						1K-Füllprimer	1K-Füllprimer	
0340	1L	82 85 231			X	Thinner	Förtunning	5
0350						2K-Expressverdünnung	2K-Expressverdünnung	
0360								
0370						FILLER	SPACKEL	
0380	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0390		82 85 496			X	Hardener	Härdare	5
0400	1L	84 87 621			X	Spray filler	Sprutspackel	6

40. For quick through-drying För snabb genomtorkning

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-G10

Bumpers and touch-up paint
2-can

Stötfångare och bättringsfärg
2-komponent

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 184		1995-, BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0030						Embassy blue	Ambassadblå	
0040	1L	82 85 397		BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0050						Imola red	Imolaröd	
0060	1L	84 87 282		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0070						Cirrus white	Cirrusvit	
0080	1L	97 46 264		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0090						Black	Svart	
0100	1L	82 85 207		1997-, BODY COLOUR 231	X	Touch-up paint	Bättringsfärg	3
0110						Monte Carlo yellow	Monte Carlogul	
0120	1L	82 85 231			X	Thinner	Förtunning	5
0130						2K-Expressverdünnung	2K-Expressverdünnung	
0140	1/2L	84 86 300			X	Hardener	Härdare	5
0150						2K-Spezialhärter	2K-Spezialhärter	
0160	1L	84 86 292			X	Hardener	Härdare	5
0170						2K-Spezialhärter	2K-Spezialhärter	
0180								
0190						PRIMER	GRUNDFÄRG	
0200	4L	74 97 001			X	Primer	Grundfärg	6
0210						2K-Toppfüller	2K-Toppfüller	
0220	1/2L	84 86 300			X	Hardener	Härdare	5
0230						2K-Spezialhärter	2K-Spezialhärter	
0240	1L	84 86 292			X	Hardener	Härdare	5
0250						2K-Spezialhärter	2K-Spezialhärter	
0260								
0270						INTERMEDIATE PAINT	MELLANFÄRG	
0280	1L	84 87 712			X	Intermediate paint	Mellanfärg	6
0290						2K-Fillsealer	2K-Fillsealer	
0300						Colourable	Infärgningsbar	
0310	1L	82 85 231			X	Thinner	Förtunning	5
0320						2K-Expressverdünnung	2K-Expressverdünnung	
0330	1/2L	84 86 300			X	Hardener	Härdare	5
0340						2K-Spezialhärter	2K-Spezialhärter	
0350	1L	84 86 292			X	Hardener	Härdare	5
0360						2K-Spezialhärter	2K-Spezialhärter	
0370								
0380						FILLER	SPACKEL	
0390	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0400		82 85 496			X	Hardener	Härdare	5
0410	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-G12

Bumpers and touch-up paint
Two-coat type

Stötfångare och bättringsfärg
Tvåskiktstyp

1775

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010					BASE METALLIC COAT	BASMETALLICFÄRG	
0020 1L	82 84 499		BODY COLOUR 230	X	Touch-up paint	Bättringsfärg	3
0030					Scarabé green	Scarabégrön	
0040 1L	82 84 887		-1995, BODY COLOUR 235	X	Touch-up paint	Bättringsfärg	3
0050					Eucalyptus green	Eucalyptusgrön	
0060 1L	74 97 464		1995-1997	X	Touch-up paint	Bättringsfärg	3
0070			BODY COLOUR 255		Turquoise	Turkos	
0080 1L	74 97 423		1996-1997,	X	Touch-up paint	Bättringsfärg	3
0090			BODY COLOUR 254		Willow green	Grön	
0100 1L	82 84 507		-1996, BODY COLOUR 229	X	Touch-up paint	Bättringsfärg	3
0110					Le Mans blue	Le Mans-blå	
0120 1L	74 97 415		1996-1997,	X	Touch-up paint	Bättringsfärg	3
0130			BODY COLOUR 252		Sky blue	Blå	
0140 1L	74 97 522		1996-, BODY COLOUR 257	X	Touch-up paint	Bättringsfärg	3
0150					Midnight blue	Midnattsblå	
0160 1L	74 97 530		1997-, BODY COLOUR 258	X	Touch-up paint	Bättringsfärg	3
0170					Amethyst violet	Ametistviolett	
0180 1L	82 84 473		-1997, BODY COLOUR 227	X	Touch-up paint	Bättringsfärg	3
0190					Citrin beige	Citrinebeige	
0200 1L	82 84 481		-1994, BODY COLOUR 228	X	Touch-up paint	Bättringsfärg	3
0210					Platana grey	Platanagrå	
0220 1L	82 85 405		-1996, BODY COLOUR 242	X	Touch-up paint	Bättringsfärg	3
0230					Ruby red	Rubinröd	
0240 1L	74 97 514		1997-, BODY COLOUR 256	X	Touch-up paint	Bättringsfärg	3
0250					Cayenne red	Kajennröd	
0260 1L	74 97 126		-1995, BODY COLOUR 241	X	Touch-up paint	Bättringsfärg	3
0270					Aubergine	Aubergine	
0280 1L	74 97 225		1995-1997	X	Touch-up paint	Bättringsfärg	3
0290			BODY COLOUR 247		Silver	Silver	
0300 1L	74 97 795		1998-	X	Touch-up paint	Bättringsfärg	
0310			BODY COLOUR 268		Silver	Silver	
0320 1L	74 97 365		1996-1997,	X	Touch-up paint	Bättringsfärg	3
0330			BODY COLOUR 253		Java black	Java svart	
0340 1L	74 97 753		1998-	X	Touch-up paint	Bättringsfärg	
0350			BODY COLOUR 262		Golden sand	Guldsand	
0360 1L	74 97 761		1998-	X	Touch-up paint	Bättringsfärg	
0370			BODY COLOUR 263		Copper bronze	Kopparbrons	
0380 1L	74 97 779		1998-	X	Touch-up paint	Bättringsfärg	
0390			BODY COLOUR 261		Green silver	Silvergrön	
0400 1L	74 97 787		1998-	X	Touch-up paint	Bättringsfärg	
0410			BODY COLOUR 264		Cosmic blue	Kosmosblå	
0420 1L	97 46 975			X	Thinner	Förtunning	5
0430							
0440					PRIMER	GRUNDFÄRG	
0450 1L	74 97 019			X	Primer	Grundfärg	6
0460					1K-Füllprimer	1K-Füllprimer	
0470 1L	82 85 231			X	Thinner	Förtunning	5
0480					2K-Expressverdünnung	2K-Expressverdünnung	
0490							
0500					CLEAR ENAMEL	KLARLACK	
0510 1L	84 87 225			X	Clear enamel	Klarlack	3
0520 1L	82 85 231			X	Thinner	Förtunning	5
0530					2K-Expressverdünnung	2K-Expressverdünnung	
0540 1/2L	84 86 300			X	Hardener	Härdare	5
0550					2K-Spezialhärter	2K-Spezialhärter	
0560 1L	84 86 292			X	Hardener	Härdare	5
0570					2K-Spezialhärter	2K-Spezialhärter	
0580							
0590					FILLER	SPACKEL	
0600 2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0610	82 85 496			X	Hardener	Härdare	5
0620 1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

5-G14 *Other paint* *Övrig färg*

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1/4L	97 46 835		42)	X	Touch-up paint	Bättringsfärg	3
					Charcoal gray 176	Antracitgrå 176	
1L	97 46 975			X	Thinner	Förtunning	5
1/4L	97 46 850		42)	X	Touch-up paint	Bättringsfärg	3
					Black 175	Svart 175	
1L	82 85 231			X	Thinner	Förtunning	5
					2K-Expressverdünnung	2K-Expressverdünnung	
					PRIMER	GRUNDFÄRG	
1L	82 85 249		42)	X	Primer	Grundfärg	6
					1K-Plastic primer	1K-Plastic primer	
					ready to spray	sprutfärdig	
1L	82 85 256		42)	X	Primer	Grundfärg	6
					1K-Plastic füller	1K-Plastic füller	
1L	97 46 967			X	Thinner	Förtunning	5
					PLASTICIZER	MJUKGÖRARE	
1L	97 46 314		42)	X	Plasticizer	Mjukgörare	6
					2K-Elastic adetiv	2K-Elastic adetiv	
5L	97 46 884		43)	X	Cleaning agent	Rengöringsmedel	6
1KG	82 85 264		43)	X	Filler	Spackel	6
2L	97 46 892		43)	X	Primer	Grundfärg	6
1L	97 46 900		43)	X	Hardener	Härdare	6
1L	97 46 926		43)	X	Intermediate paint	Mellanfärg	6
1L	97 46 934		43)	X	Hardener	Härdare	5
1L	97 46 959		43)	X	Plasticizer	Mjukgörare	6
1L	97 46 652		43)	X	Thinner	Förtunning	5
5L	84 87 779			X	Cleaning agent	Rengöringsmedel	6
					silicon remover	silikonborttagare	
1KG	*79 94 510*		NLS	X	Underseal	Underredsmassa	6
1KG	79 94 882		44)	X	Stone chip interpaint	Stenskottsmellanfärg	6
	79 94 890		44) NLS	X	Hardener	Härdare	5
5L	*84 87 787*		45) NLS	X	Thinner	Förtunning	6


42. For plastic För plast
43. For rear spoiler (soft, rubber) För bakre spoiler (mjuk, gummi)
44. 2K, IR-lamp with minimum 100°C 2K, IR-lampa med minst 100°C
45. For cleaning airguns För rengöring av sprutpistoler

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

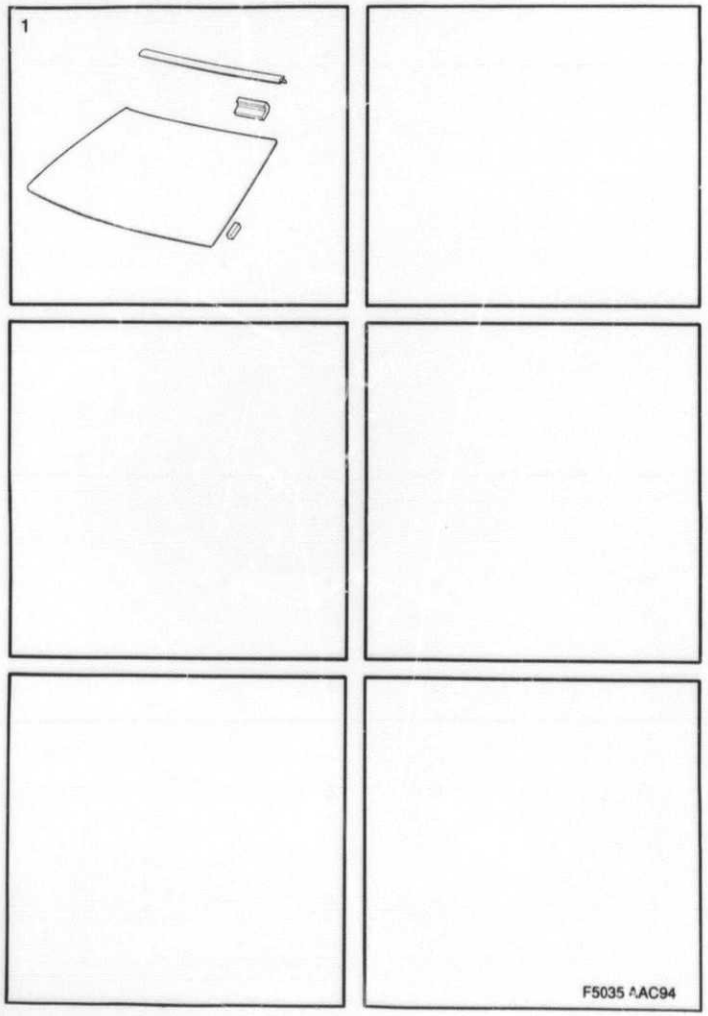

Complete sets
5-G16
Car body, external

Satser
Kaross, utvändig

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 035		-1996, COLOURED	X	Windscreen	Vindruta	3
0020		40 13 603			1	.Spacer	.Distans	3
0030		*43 07 716*		1) NLS	1	.Windscreen	.Vindruta	3
0040		43 28 753			2	.Spacer	.Distans	5
0050		43 29 991			1	.Decor	.Dekor	3
0060								
0070	1	74 97 076		23)	X	Windscreen	Vindruta	3
0080		40 13 603			1	.Spacer	.Distans	3
0090		*43 07 724*		1) NLS	1	.Windscreen	.Vindruta	3
0100		43 28 753			2	.Spacer	.Distans	5
0110		43 29 991			1	.Decor	.Dekor	3
0120								
0130	1	74 97 183		23) CV	X	Windscreen	Vindruta	3
0140		43 70 557			1	.Decor	.Dekor	3
0150		45 55 066		1)	1	.Windscreen	.Vindruta	3
0160		45 57 195			2	.Spacer	.Distans	5
0180		45 57 203			1	.Spacer	.Distans	5
0190		69 92 028			1	.Spacer	.Distans	3

1. Not as separate spare part. Ej som separat reservdel.
23. Heat-absorbing glass Värmeabsorberande glas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-C24
Doors, trunk lid	5-D06
External details, glass, sealings	5-E10
Bumpers and touch-up paint	5-G04
Complete sets	5-G16

8B

Body, internal
Kaross, invändig
Carrocería, inferior

5-H02

TABLE OF CONTENTS

Instrument panel		
Instrument panel, panel, instrument plate	8B : 5	5-H06
Instrument panel, glove compartment, panel lower	8B : 9	5-H10
Instrument panel, centre console	8B : 17	5-H18
Upholstery		
Insulation	8B : 21	5-H22
Damper mat	8B : 25	5-I02
Covers	8B : 27	5-I04
Door trim, front door, 264)	8B : 41	5-I18
Door trim, front door, 265)	8B : 47	5-I24
Side trim, rear, 3D, CV	8B : 51	5-J04
Door trim, rear door, 5D	8B : 57	5-J10
Upholstery luggage compartment	8B : 61	5-J14
Carpets, sill protection	8B : 63	5-J16
Headlining, pillar lining	8B : 67	5-J20
Other interior equipment		
Front seats	8B : 71	5-J24
Front seats, electrically adjustable	8B : 79	5-K08
Rear seat, 3D, 5D	8B : 87	5-K16
Rear seat, Convertible	8B : 91	5-K20
Equipment luggage compartment, other interior equipment	8B : 93	5-K22
Shelf	8B : 97	5-L02
Safety belt, front seat, 3D, 5D	8B : 99	5-L04
Safety belt, rear seat, 3D, 5D	8B : 101	5-L06
Safety belt, Convertible	8B : 103	5-L08
Complete sets		
Car body, internal	8B : 105	5-L10

Ch. -–T2033906, -T7007250
Ch. -T2033907–, T7007251–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-H03

INNEHÅLLSFÖRTECKNING

Instrumentpanel		
Instrumentpanel, panel, instrumentplatta	8B : 5	5-H06
Instrumentpanel, handskfack, underdel	8B : 9	5-H10
Instrumentpanel, mittkonsol	8B : 17	5-H18
Klädsel		
Isolering	8B : 21	5-H22
Dämpmatta	8B : 25	5-I02
Klädselpåsar	8B : 27	5-I04
Dörrklädsel, framdörr, 264)	8B : 41	5-I18
Dörrklädsel, framdörr, 265)	8B : 47	5-I24
Sidklädsel, bak, 3D, CV	8B : 51	5-J04
Dörrklädsel, bakdörr, 5D	8B : 57	5-J10
Klädsel bagagerum	8B : 61	5-J14
Mattor, tröskelskydd	8B : 63	5-J16
Takklädsel, stolpklädsel. etc	8B : 67	5-J20
Övrig invändig utrustning		
Stolar	8B : 71	5-J24
Stolar, elmanövrerade	8B : 79	5-K08
Baksäte, 3D, 5D	8B : 87	5-K16
Baksäte, Cabriolet	8B : 91	5-K20
Utrustning bagagerum, övrig invändig utrustning	8B : 93	5-K22
Hatthylla	8B : 97	5-L02
Bilbälte, framsäte, 3D, 5D	8B : 99	5-L04
Bilbälte, baksäte, 3D, 5D	8B : 101	5-L06
Bilbälte, Cabrioiet	8B : 103	5-L08
Satser:		
Kaross, invändig	8B : 105	5-L10

264. Ch. —T2033906, –T7007250
265. Ch. –T2033907–, T7007251–

5-H04

SUMARIO

Tablero de instrumentos		
Tablero de instrumentos, panel, placa instrumentos	8B : 5	5-H06
Tablero de instrumentos, guantera, parte inferior	8B : 9	5-H10
Tablero de instrumentos, soporte central	8B : 17	5-H18
Tapiceria		
Aislamiento	8B : 21	5-H22
Alfombra amortiguador	8B : 25	5-I02
Fundas de asiento	8B : 27	5-I04
Tapiceria de puerta, porta delantera, 264)	8B : 41	5-I18
Tapiceria de puerta, porta delantera, 265)	8B : 47	5-I24
Guarnicion lateral, Tras. 3D, CV	8B : 51	5-J04
Tapiceria de puerta, porta Tras, 5D	8B : 57	5-J10
Tapiceria compartimento de equipajes	8B : 61	5-J14
Moquetas, guardaumbral	8B : 63	5-J16
Tapiceria del techo, de los montantes, etc	8B : 67	5-J20
Otro equipo interior		
Asientos Del	8B : 71	5-J24
Asientos Del, maniobra electrica	8B : 79	5-K08
Asientos Tras, 3D, 5D	8B : 87	5-K16
Asientos Tras, Cabriolet	8B : 91	5-K20
Compartimento para equipo, otro equipo interior	8B : 93	5-K22
Tablilla trassera	8B : 97	5-L02
Cinturon de seguridad, Del., 3D, 5D	8B : 99	5-L04
Cinturon de seguridad, Tras., 3D, 5D	8B : 101	5-L06
Cinturon de seguridad, Cabriolet	8B : 103	5-L08
Juegos completos		
Carosseria, interior	8B : 105	5-L10

264. Ch. —T2033906, –T7007250
265. Ch. –T2033907–, T7007251–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Instrument panel

5 -H06


Panel

Instrument plate

Instrumentpanel

Panel

Instrumentplatta

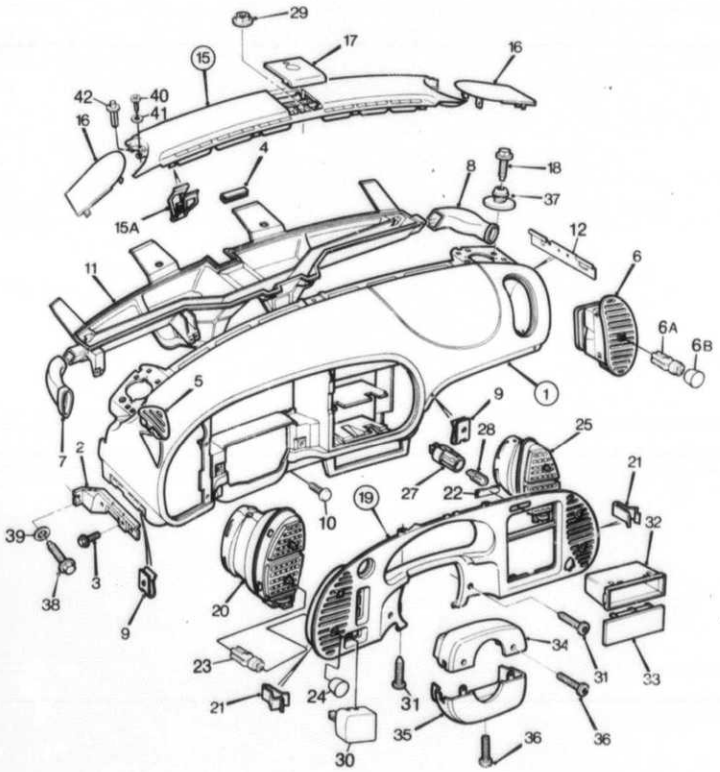

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 19 192*		148), AIRBAG 1, LHD NLS - USE 4609566	1	Instrument panel	Instrumentpanel	6
0010								
0015	1	46 09 566		149),-1997,AIRBAG 1, LHD	1	Instrument panel	Instrumentpanel	6
0017	1	*50 12 075*		1998-, AIRBAG 1, LHD NLS	1	Instrument panel	Instrumentpanel	6
0020	1	*42 19 226*		150), AIRBAG 2, LHD NLS - USE 4609574	1	Instrument panel	Instrumentpanel	6
0020								
0025	1	46 09 574		151),-1997,AIRBAG 2, LHD	1	Instrument panel	Instrumentpanel	6
0027	1	48 48 990		1998-, AIRBAG 2, LHD	1	Instrument panel	Instrumentpanel	
0030	1	*42 19 242*		152), AIRBAG 1, RHD NLS - USE 4609582	1	Instrument panel	Instrumentpanel	6
0030								
0035	1	46 09 582		153),-1997,AIRBAG 1, RHD	1	Instrument panel	Instrumentpanel	6
0037	1	*50 12 083*		1998-, AIRBAG 1, RHD NLS	1	Instrument panel	Instrumentpanel	6
0040	1	*44 20 683*		154), AIRBAG 2, RHD NLS - USE 4849014	1	Instrument panel	Instrumentpanel	6
0040								
0045	1	46 09 590		155),-1997 AIRBAG 2, RHD	1	Instrument panel	Instrumentpanel	6
0047	1	48 49 014		1998-, AIRBAG 2, RHD	1	Instrument panel	Instrumentpanel	
0050	2	42 16 610		LH	1	.Bracket	.Konsol	6
0060	2	42 16 602		RH	1	.Bracket	.Konsol	6
0070	3	79 78 091			4	.Screw	.Skruv	5
0080	4	42 19 218			X	.Felt	.Filt	5
0090	5	43 64 121		LHD	1	.Defroster jet	.Defroster	5
0100	5	43 64 139		RHD	1	.Defroster jet	.Defroster	5
0110	6	42 30 363		LHD	1	.Air outlet	.Luftutsläpp	6
0120	6	42 21 735		RHD	1	.Air outlet	.Luftutsläpp	6
0123	6A	43 83 923		145,381)	1	..Control knob	..Reglageknopp	
0126	6B	43 83 931		145,381)	1	..Knob	..Knopp	
0130	7	43 64 303		LHD	1	.Duct	.Kanal	5
0140	7	42 22 196		RHD	1	.Duct	.Kanal	5
0150	8	43 64 311		LHD	1	.Duct	.Kanal	5
0160	8	42 22 204		RHD	1	.Duct	.Kanal	5
0170	9	79 68 001			X	.Clip nut	.Clipsmutter	5
0180	10	79 70 536		105), RHD	1	.Screw	.Skruv	6
0190	11			1)	1	.Defroster duct	.Defrosterkanal	
0193	12	46 07 057		149,151), LHD	1	.Support plate	.Stödplåt	6
0195	12	46 07 057		153,155), RHD	1	.Support plate	.Stödplåt	6
0200	15	*42 19 374*		86) NLS – USE 4641890	1	Cover	Avtäckning	6
0210	15	*46 06 737*		87,121) NLS – USE 4641890	1	Cover	Avtäckning	6
0210								
0220	15	46 41 890		122)	1	Cover	Avtäckning	6
0230	15A	44 23 075			4	.Clamp	.Klämma	
0240	16	*43 89 763*		10), 1994, LH NLS – USE 4641171	1	Loudspeaker grille	Högtalargaller	5
0240								
0250	16	*43 89 771*		10), 1994, RH NLS – USE 4641189	1	Loudspeaker grille	Högtalargaller	5
0250								

1. Not as separate spare part. Ej som separat reservdel.
10. CV, ch. -S7009999
86. Ch. -R2023630
87. Ch. R2023631-
105. Ch. -R2028650
121. Ch. -R2043195, -S7002138
122. Ch. R2043196-, S7002139-
145. Ch. S2010675-, S7000015-
148. Ch. -S2016099, -S7015187, AIRBAG1
149. Ch. S2016100-, S7015188-, AIRBAG1
150. Ch. -S2016099, -S7015154, AIRBAG2
151. Ch. S2016100-, S7015155-, AIRBAG2
152. Ch. -S2016099, -S7015144, AIRBAG1
153. Ch. S2016100-, S7015145-, AIRBAG1
154. Ch. -S2016636, -S7015100, AIRBAG2
155. Ch. S2016637-, S7015101-, AIRBAG2
381. For older cars pos 6a and pos 6b must be used together tillsammans — För äldre bilar måste pos 6a och pos 6b användas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10


Instrument panel

Instrumentpanel

5 -H08

Panel
Instrument plate

Instrumentpanel
Instrumentplatta

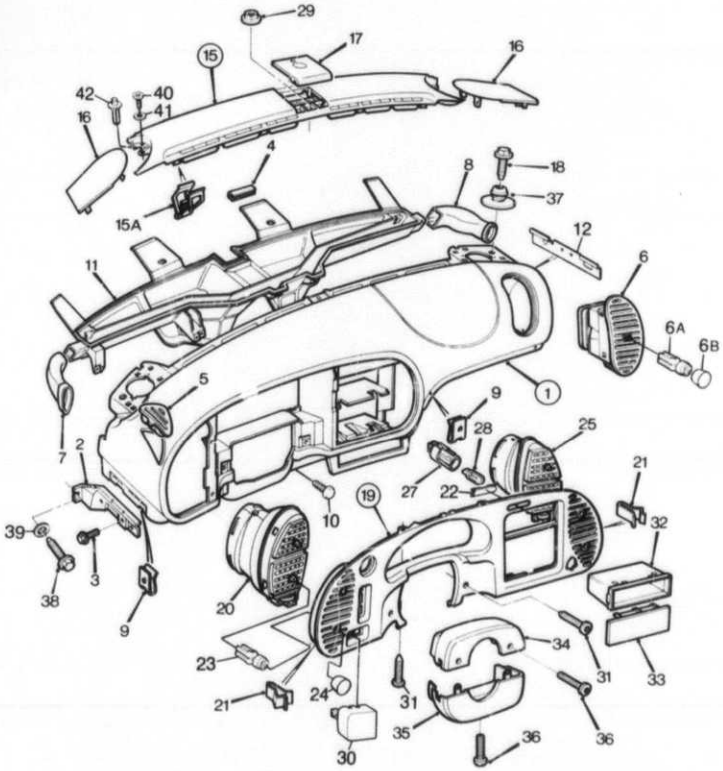

F7398 AAC94

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0253	16	46 41 171		11), 1995-, LH	1	Loudspeaker grille	Högtalargaller	5
0256	16	46 41 189		11), 1995-, RH	1	Loudspeaker grille	Högtalargaller	5
0260	17	43 89 698			1	Cover	Täcklock	5
0270	17	45 18 171		34)	1	Cover	Täcklock	5
0280	17	43 89 706		ACC	1	Cover	Täcklock	5
0290	17	45 18 163		34), ACC	1	Cover	Täcklock	5
0300	18	79 78 133			2	Screw	Skruv	5
0310	19	*44 71 207*		74), LHD NLS – USE 4616645	1	Instrument plate	Instrumentplatta	
0320	19	46 16 645		75), LHD	1	Instrument plate	Instrumentplatta	
0330	19	46 41 262		1995-, LHD 40/400103263	1	Instrument plate wood	Instrumentplatta trä	
0350	19	*44 71 215*		74), RHD NLS – USE 4616652	1	Instrument plate	Instrumentplatta	
0360	19	46 16 652		75), RHD	1	Instrument plate	Instrumentplatta	
0370	19	46 41 270		1995-, RHD 40/400103271	1	Instrument plate wood	Instrumentplatta trä	
0390	20	74 95 187		-1995	1	.Air outlet	.Luftutsläpp	6
0391	20	74 95 708		1996-, LHD	1	.Air outlet	.Luftutsläpp	6
0392	20	74 95 195		1996-, RHD	1	.Air outlet	.Luftutsläpp	6
0400	21	44 70 548			X	.Clamp	.Klämma	
0410	22	94 81 219		"FASTEN BELTS"	1	.Symbol washer	.Symbolbricka	
0413	23	43 83 923		145,144)	4	.Control knob	.Reglageknopp	
0416	24	43 83 931		145,144)	4	.Knob	.Knopp	
0420	25	74 95 195		-1995	1	.Air outlet	.Luftutsläpp	6
0421	25	74 95 716		1996-, LHD	1	.Air outlet	.Luftutsläpp	6
0422	25	74 95 187		1996-, RHD	1	.Air outlet	.Luftutsläpp	6
0430	27	85 09 697			1	.Bulb socket	.Lamphållare	5
0440	28	85 00 613			1	.Bulb	.Glödlampa	2
0450	29	*40 87 664*		1994, (7977929) NLS – USE 7985377	1	Nut	Mutter	5
0452	29	79 85 377		1995-	1	Nut	Mutter	5
0455	30			See page 3A-063, 2-C16	1	Blind knob	Blindknapp	
0460	31	79 77 002			9	Screw	Skruv	5
0470	32	42 34 050		74)	1	Storage tray	Förvaringsfack	5
0480	32	46 16 660		75)	1	Storage tray	Förvaringsfack	5
0490	33	43 88 302			1	Cover plate	Täckplatta	5
0500	34	44 20 238		LHD	1	Steering column cover	Rattlagerkåpa	6
0510	34	44 20 253		RHD	1	Steering column cover	Rattlagerkåpa	6
0520	35	44 20 246		LHD	1	Steering column cover	Rattlagerkåpa	6
0530	35	44 20 261		RHD	1	Steering column cover	Rattlagerkåpa	6
0540	36	79 77 283			3	Screw	Skruv	5
0550	37	44 39 816		119)	2	Friction washer	Friktionsbricka	
0560	37	46 09 954		120)	2	Friction washer	Friktionsbricka	
0570	38	79 78 109			2	Screw	Skruv	5
0580	39	70 61 328		203)	X	Washer	Bricka	5
0600	40	40 87 615		86)	2	Screw	Skruv	5
0610	41	79 73 894		86)	2	Washer	Bricka	5
0620	42	44 70 639		87)	2	Expanding rivet	Expandernit	3

11. CV, ch. S7010000–
34. With theft alarm Med stöldlarm
74. Ch. –R2018954
75. Ch. R2018955–
86. Ch. –R2023630
87. Ch. R2023631–
119. Ch. –R2041477; CV ch. –S7009999
120. Ch. R2041478–; CV ch. S7010000–
144. For older cars pos 23 and pos 24 must be used together För äldre bilar måste pos 23 och pos 24 användas tillsammans
145. Ch. S2010675–, S7000015–
203. Ch. –S2044320

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Instrument panel
Instrumentpanel

5 -H10

Glove compartment
Panel lower

Handskfack
Underdel

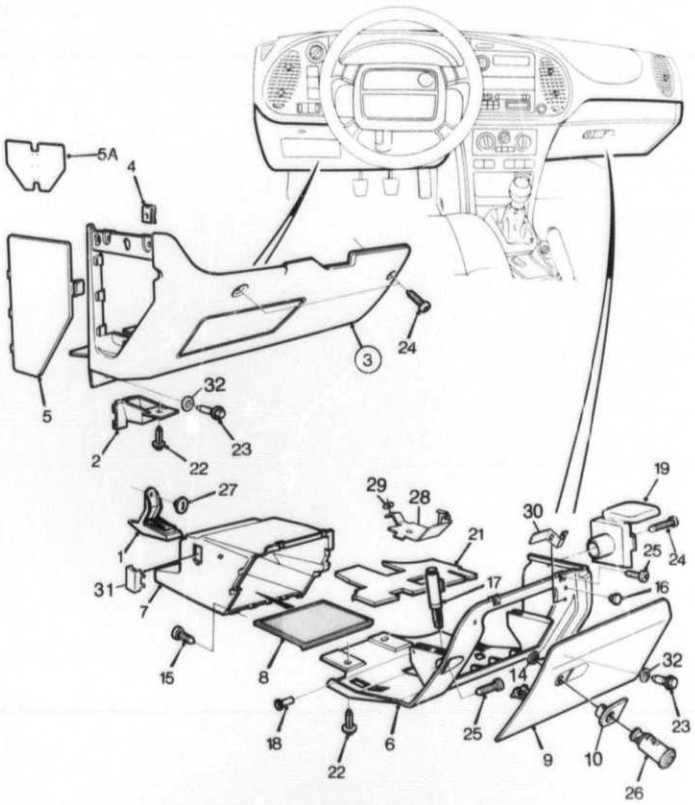

F6800 AAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 18 368		LHD	1	Bracket	Konsol	6
0020	1	44 21 699		RHD	2	Bracket	Konsol	6
0030	2	44 22 168			1	Bracket	Konsol	6
0040	3	*42 33 839*		210,65), LHD NLS – USE 4605184	1	Panel	Panel	6
0050	3	46 05 184		210,66), LHD	1	Panel	Panel	6
0060	3	42 33 821		100,65), LHD	1	Panel	Panel	6
0070	3	46 05 176		100,66), LHD	1	Panel	Panel	6
0080	3	*44 71 488*		110,65), LHD NLS – USE 4605192	1	Panel	Panel	6
0090	3	46 05 192		110,66), LHD	1	Panel	Panel	6
0110	3	42 33 995		210,65), RHD	1	Panel	Panel	6
0120	3	46 05 309		210,66), RHD	1	Panel	Panel	6
0130	3	*42 33 987*		100,65), RHD NLS – USE 4605291	1	Panel	Panel	6
0140	3	46 05 291		100,66), RHD	1	Panel	Panel	6
0150	3	44 71 520		110,65), RHD	1	Panel	Panel	6
0160	3	46 05 317		110,66), RHD	1	Panel	Panel	6
0170	4	79 68 001			3	.Clip nut	.Clipsmutter	5
0180	5	*46 16 736*		210,10), 1994, LHD	1	Cover	Täcklock	5
0190	5	46 16 728		100,10), 1994, LHD	1	Cover	Täcklock	5
0200	5	*46 16 744*		110,10), 1994, LHD I	1	Cover	Täcklock	5
0210	5	42 34 670		210,11), 1995-, LHD	1	Cover	Täcklock	5
0220	5	42 34 662		100,11), 1995-, LHD	1	Cover	Täcklock	5
0230	5	44 71 678		110,11), 1995-, LHD	1	Cover	Täcklock	5
0240	5	46 16 769		210,10), 1994, RHD	1	Cover	Täcklock	5
0250	5	46 16 751		100,10), 1994, RHD	1	Cover	Täcklock	5
0260	5	46 16 777		110,10), 1994, RHD	1	Cover	Täcklock	5
0270	5	42 34 704		210,11), 1995-, RHD	1	Cover	Täcklock	5
0280	5	42 34 696		100,11), 1995-, RHD	1	Cover	Täcklock	5
0290	5	44 71 686		110,11), 1995-, RHD	1	Cover	Täcklock	5
0300	5A			1994	1	.Label	.Etikett	
0310				See page 8D-011, 6-C12				
0320	6	44 71 744		210,65), LHD	1	Panel	Panel	6
0330	6	*44 71 736*		100,65), LHD NLS – USE 4607057, 4743357	1	Panel	Panel	6
0340	6	*44 71 728*		110,65), LHD NLS – USE 4607057, 4743373	1	Panel	Panel	6
0350	6	*45 19 617*		210,65), LHD, AIRBAG 2 NLS – USE 4607057, 4743365	1	Panel	Panel	6
0360	6	*45 19 609*		100,65), LHD, AIRBAG 2 NLS – USE 4607057, 4743357	1	Panel	Panel	6
0370	6	*45 19 625*		110,65), LHD, AIRBAG 2 NLS – USE 4607057, 4743373	1	Panel	Panel	6
0380	6	*46 05 390*		210,66,148,150), LHD NLS - USE 4607057, 4743365	1	Panel	Panel	6
0390	6	*46 05 382*		100,66,148,150), LHD NLS - USE 4607057, 4743357	1	Panel	Panel	6
0400	6	*46 05 408*		110,66,148,150), LHD NLS - USE 4607057, 4743373	1	Panel	Panel	6

10. CV, ch. -S7009999
11. CV, ch. S7010000-
65. Ch. -R2012321
66. Ch. R2012322-
100. Light grey Ljus grå
110. Black Svart
148. Ch. -S2016099, -S7015187, AIRBAG1
150. Ch. -S2016099, -S7015154, AIRBAG2
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Instrument panel

5-H12 Glove compartment Panel lower

Instrumentpanel

Handskfack Underdel

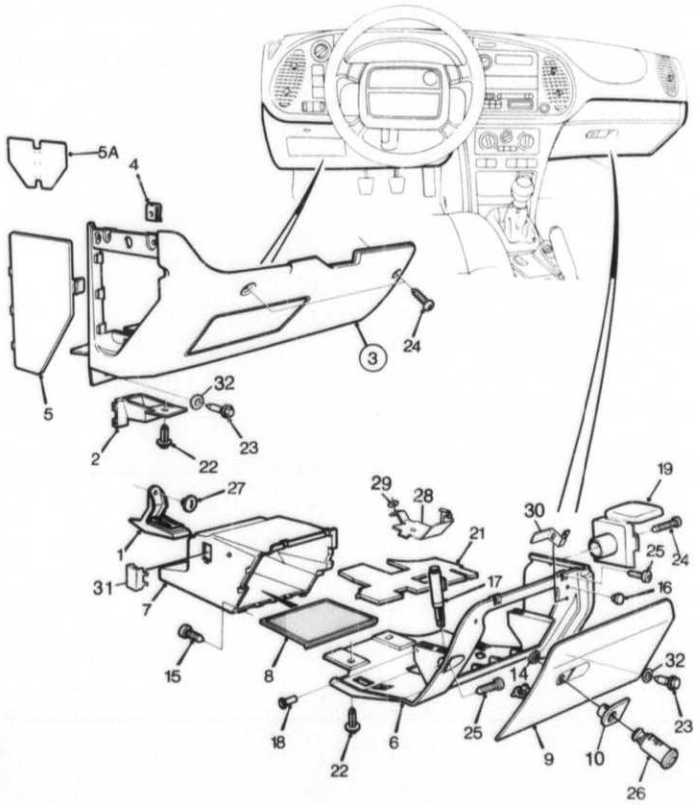

F6800 AAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	6	*46 09 814*		210,149,151), -1995, LHD NLS – USE 4743365	1	Panel	Panel	6
0420	6	46 09 806		100,149,151), -1995, LHD	1	Panel	Panel	6
0430	6	*46 09 822*		110,149,151), -1995, LHD NLS – USE 4743373	1	Panel	Panel	6
0440	6	47 43 365		210), 1996-, LHD	1	Panel	Panel	6
0450	6	47 43 357		100), 1996-, LHD	1	Panel	Panel	6
0460	6	47 43 373		110), 1996-, LHD	1	Panel	Panel	6
0480	6	*44 71 892*		210,65), RHD NLS – USE 4607057, 4609848	1	Panel	Panel	6
0490	6	*44 71 884*		100,65), RHD NLS – USE 4607057, 4609830	1	Panel	Panel	6
0500	6	*44 71 876*		110,65), RHD NLS – USE 4607057, 4609855	1	Panel	Panel	6
0510	6	*46 05 424*		210,66,152,154), RHD NLS - USE 4607057, 4609848	1	Panel	Panel	6
0520	6	*46 05 416*		100,66,152,154), RHD NLS - USE 4607057, 4609830	1	Panel	Panel	6
0530	6	*46 05 432*		110,66,152,154), RHD NLS - USE 4607057, 4609855	1	Panel	Panel	6
0540	6	46 09 848		210,153,155), RHD	1	Panel	Panel	6
0550	6	46 09 830		100,153,155), RHD	1	Panel	Panel	6
0560	6	46 09 855		110,153,155), RHD	1	Panel	Panel	6
0570	7	45 18 445		95), LHD	1	Box	Låda	6
0580	7	45 19 633		96), LHD	1	Box	Låda	6
0590	7	45 19 633		LHD, AIRBAG 2	1	Box	Låda	6
0600	7	45 18 452		RHD	1	Box	Låda	6
0610	8	42 32 021			1	Rubber mat	Gummimatta	5
0620	9	*44 71 868*		210,67), LHD NLS – USE 4741997	1	Glove comparment door	Handskfackslucka	5
0630	9	*44 71 850*		100,67), LHD NLS – USE 4741989	1	Glove comparment door	Handskfackslucka	5
0640	9	*44 71 843*		110,67), LHD NLS – USE 4742003	1	Glove comparment door	Handskfackslucka	5
0650	9	*46 05 804*		210,68),-1994, LHD NLS - USE 4741997	1	Glove comparment door	Handskfackslucka	5
0660	9	*46 05 796*		100,68),-1994, LHD NLS - USE 4741989	1	Glove comparment door	Handskfackslucka	5
0670	9	*46 05 812*		110,68),-1994, LHD NLS - USE 4742003	1	Glove comparment door	Handskfackslucka	5
0680	9	47 41 997		210), 1995-1997, LHD	1	Glove comparment door	Handskfackslucka	5
0690	9	47 41 989		100), 1995-1997, LHD	1	Glove comparment door	Handskfackslucka	5
0700	9	47 42 003		110), 1995-1997, LHD	1	Glove comparment door	Handskfackslucka	5
0702	9	• 49 01 294		210), 1998-, LHD	1	Glove comparment door	Handskfackslucka	
0704	9	• 49 01 286		100), 1998-, LHD	1	Glove comparment door	Handskfackslucka	
0706	9	• 49 01 302		110), 1998-, LHD	1	Glove comparment door	Handskfackslucka	

65. Ch. -R2012321
66. Ch. R2012322-
67. Ch. -R2015238
68. Ch. R2015239-
95. Ch. -R2005038
96. Ch. R2005039-
100. Light grey Ljus grå
110. Black Svart
149. Ch. S2016100-, S7015188-, AIRBAG1
151. Ch. S2016100-, S7015155-, AIRBAG2
152. Ch. -S2016099, -S7015144, AIRBAG1
153. Ch. S2016100-, S7015145-, AIRBAG1
154. Ch. -S2016636, -S7015100, AIRBAG2
155. Ch. S2016637-, S7015101-, AIRBAG2
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-H14

Glove compartment
Panel lower

Handskfack
Underdel

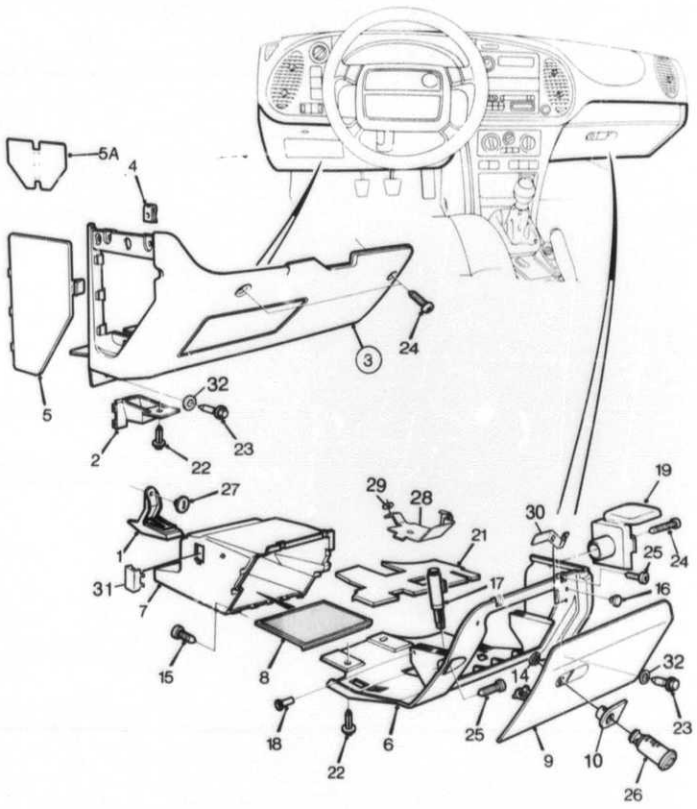

F6800 AAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0710	9	*44 71 926*		210,67), RHD NLS – USE 4742052	1	Glove comparment door	Handskfackslucka	5
0720	9	*44 71 918*		100,67), RHD NLS – USE 4742045	1	Glove comparment door	Handskfackslucka	5
0730	9	*44 71 900*		110,67), RHD NLS – USE 4742060	1	Glove comparment door	Handskfackslucka	5
0740	9	46 05 861		210,68), -1994, RHD	1	Glove comparment door	Handskfackslucka	5
0750	9	46 05 853		100,68), -1994, RHD	1	Glove comparment door	Handskfackslucka	5
0760	9	46 05 879		110,68), -1994, RHD	1	Glove comparment door	Handskfackslucka	5
0770	9	47 42 052		210), 1995-1997, RHD	1	Glove comparment door	Handskfackslucka	5
0780	9	47 42 045		100), 1995-1997, RHD	1	Glove comparment door	Handskfackslucka	5
0790	9	47 42 060		110), 1995-1997, RHD	1	Glove comparment door	Handskfackslucka	5
0792	9	• 49 01 328		210), 1998- RHD	1	Glove comparment door	Handskfackslucka	
0794	9	• 49 01 310		100), 1998-, RHD	1	Glove comparment door	Handskfackslucka	
0796	9	• 49 01 336		110), 1998-, RHD	1	Glove comparment door	Handskfackslucka	
0800	10	42 18 665		-1997, LHD	1	.Cover washer	.Täckbricka	5
0810	10	• 49 01 484		1998-, LHD	1	.Cover washer	.Täckbricka	
0820	10	43 88 195		-1997, RHD	1	.Cover washer	.Täckbricka	5
0830	10	• 49 01 492		1998-, RHD	1	.Cover washer	.Täckbricka	
0840	14	92 67 808			1	Plug	Plugg	5
0850	15	40 87 615			6	Screw	Skruv	5
0860	16	45 18 668			2	Rubber damper	Gummidämpare	3
0870	17	44 22 259		401)	1	Absorber	Dämpare	3
0875	17	• 49 00 213		402)	1	Absorber	Dämpare	3
0880	17	44 39 832		401), AIRBAG 2	1	Absorber	Dämpare	3
0885	17	• 49 00 221		402), AIRBAG 2	1	Absorber	Dämpare	3
0890	18	42 02 081			2	Pin	Axeltapp	6
0900	19	*44 39 725*		210,10), 1994 NLS – USE 4636585	5	Cover	Täcklock	
0910	19	46 36 585		210,11), 1995-	5	Cover	Täcklock	
0920	19	*44 39 717*		100,10), 1994 NLS – USE 4636577	5	Cover	Täcklock	
0930	19	46 36 577		100,11), 1995-	5	Cover	Täcklock	
0940	19	*44 39 709*		110,10), 1994 NLS – USE 4636569	5	Cover	Täcklock	
0950	19	46 36 569		110,11), 1995-	5	Cover	Täcklock	
0960	21	42 02 123		-1995, LHD	1	Insulation	Isolering	6
0970	21	47 43 340		1996-, LHD	1	Insulation	Isolering	6
0980	21	42 19 101		RHD	1	Insulation	Isolering	6
0990	22	42 59 248			X	Expanding rivet	Expandernit	6
1000	23	79 78 133		57)	2	Screw	Skruv	5
1010	23	79 77 499		58)	2	Screw	Skruv	5
1020	24	79 77 002			9	Screw	Skruv	5
1030	25	79 77 002			3	Screw	Skruv	5
1040	26			See page 8A-103, 5-E08		Glove compartment lock	Handskfackslås	
1050	27			See page 8B-021, 5-H22		Push nut	Tryckmutter	
1060	28	45 19 484		210), LH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	
1070	28	45 19 526		100), LH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	
1080	28	45 19 450		110), LH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	
1090	29	45 18 585		AIRBAG 2	1	Lock washer	Låsbricka	
1100	30	45 19 492		210), RH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	
1110	30	45 19 534		100), RH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	

10. CV, ch. -S7009999
11. CV, ch. S7010000-
57. Ch. -R2003400
58. Ch. R2003401-
67. Ch. -R2015238
68. Ch. R2015239-
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
401. Ch. -W2010946
402. Ch. W2010947-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-H16

Glove compartment
Panel lower

Handskfack
Underdel

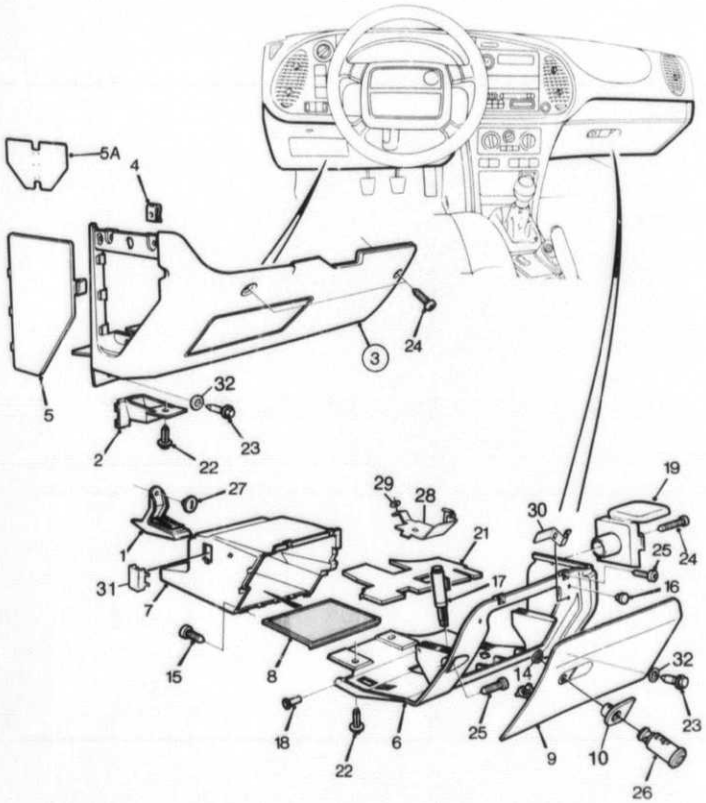

F6800 AAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1120	30	45 19 468		110), RH, AIRBAG 2	1	Reinforcing plate	Förstärkningsplåt	
1130	31	45 19 054			1	Lamp cover	Lampskydd	
1140	32	79 81 954		58)	2	Washer	Bricka	5


58. Ch. R2003401-
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

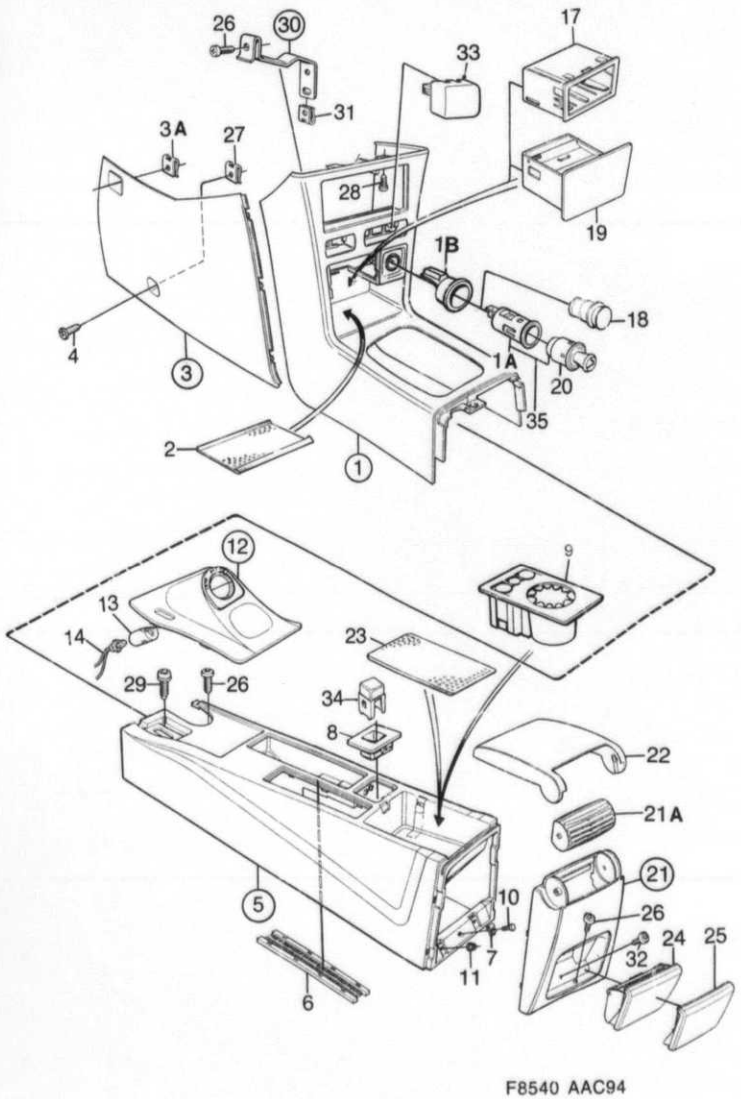

F8540 AAC94

Instrument panel

5-H18

Centre console

Instrumentpanel

Mittkonsol

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 77 750		LHD	1	Front section	Frontdel	5
0020	1	43 77 768		RHD	1	Front section	Frontdel	5
0025	1A	85 74 477			1	.Cigarette lighter socket	.Cigarettändarhylsa	
0027	1B	44 39 741			1	.Light guide	.Ljusledare	
0030	2	44 20 626		LHD	1	.Rubber mat	.Gummimatta	
0040	2	44 20 634		RHD	1	.Rubber mat	.Gummimatta	
0050	3	43 77 792		210), LH	1	Side part	Sidodel	
0060	3	44 73 963		210,327), RH	1	Side part	Sidodel	
0065	3	49 30 442		210,328), RH	1	Side part	Sidodel	
0070	3	44 39 386		210,327), LH, RHD	1	Side part	Sidodel	
0075	3	49 30 459		210,328), LH, RHD	1	Side part	Sidodel	
0080	3	43 77 867		210), RH, RHD	1	Side part	Sidodel	
0090								
0100	3	44 71 553		110), LH	1	Side part	Sidodel	
0110	3	*44 73 971*		110,327), RH NLS – USE 4884573	1	Side part	Sidodel	
0110								
0115	3	48 84 573		110,328), RH	1	Side part	Sidodel	
0120	3	44 39 394		110,327), LH, RHD	1	Side part	Sidodel	
0125	3	48 84 581		110,328), LH, RHD	1	Side part	Sidodel	
0130	3	44 71 587		110), RH, RHD	1	Side part	Sidodel	
0140								
0150	3	43 77 776		100), LH	1	Side part	Sidodel	
0160	3	44 73 989		100,327), RH	1	Side part	Sidodel	
0165	3	49 30 434		100,328), RH	1	Side part	Sidodel	
0170	3	44 39 378		100,327), LH, RHD	1	Side part	Sidodel	
0175	3	49 30 467		100,328), LH, RHD	1	Side part	Sidodel	
0180	3	43 77 842		100), RH, RHD	1	Side part	Sidodel	
0190	3A	79 68 001			1	.Clip nut	.Clipsmutter	5
0200								
0210	4	95 71 118		1994	2	Screw	Skruv	5
0215	4	97 71 320		1995-	2	Screw	Skruv	5
0220	5	*42 32 096*		230) NLS – USE 4708442	1	Centre console	Mittkonsol	
0225	5	47 08 442		231)	1	Centre console	Mittkonsol	
0230	6	42 18 673			1	.Brush	.Borste	
0240	7	79 68 001			1	.Clip nut	.Clipsmutter	5
0250	8	42 02 222			1	.Retainer	.Hållare	
0255	9	47 08 459		231), US, CA, PA	1	Cup holder	Mugghållare	
0260	10	*79 82 218*		NLS – USE 7970536	1	Screw	Skruv	5
0270	11	79 74 298			2	Nut	Mutter	5
0280	12	43 89 649			1	Cover	Täcklock	
0290	13	85 00 613		78)	1	.Bulb	.Glödlampa	2
0300	14	85 09 697		78)	1	.Bulb socket	.Lamphållare	5
0310	17	44 22 184			1	Box	Fack	
0320	18	44 22 192			1	Cover	Lock	
0330	19	*46 15 969*		314), (4422176) NLS – USE 4888749	1	Ashtray	Askkopp	6
0330								
0335	19	48 88 749		315)	1	Ashtray	Askkopp	6
0340	20	85 59 221			1	Lighter unit	Tändarenhet	4
0350	21	*42 34 084*		-1995 NLS	1	Cover without air outlet	Kåpa utan luftutsläpp	
0355								
0360	21	*42 34 092*		-1995 NLS – USE 4792404	1	Cover	Kåpa	

78. Ch. –R2020436
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
230. Ch. –T2019490, –T7003352
231. Ch. T2019491–, T7003353–
314. Ch. –V2015449, –V7003198
315. Ch. V2015450–, V7031999–
327. Ch. –V2023399, –V7004566
328. Ch. V2023400–, V7004567–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -H20

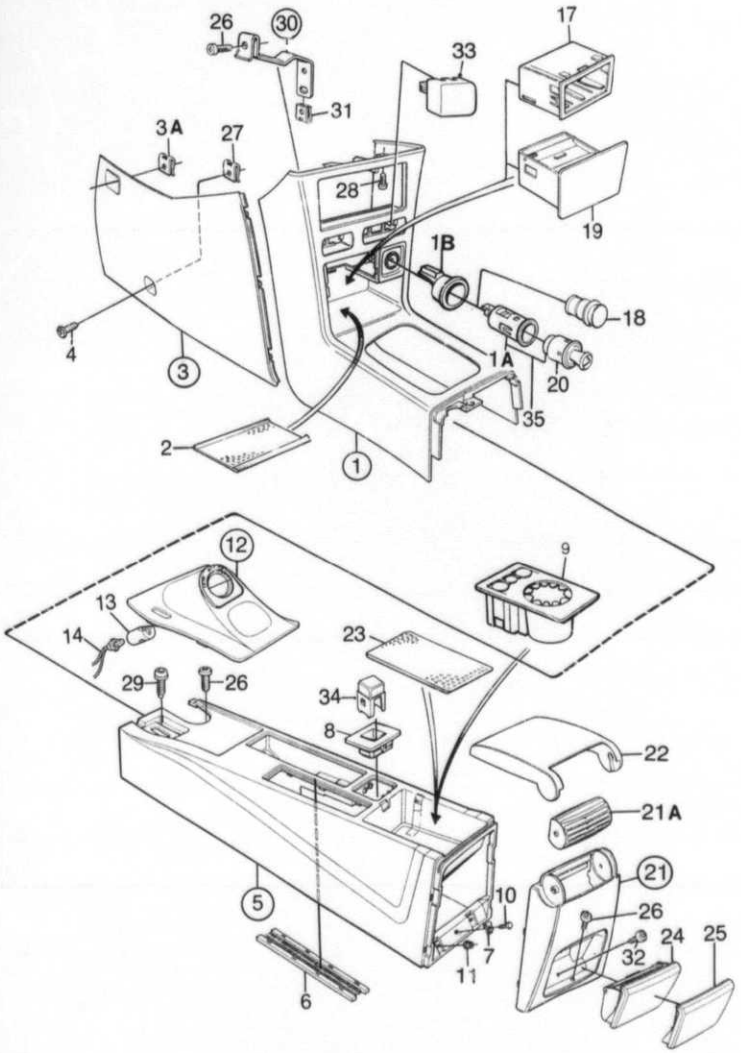

F8540 AAC94

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0365	21	47 92 404		1996-	1	Cover	Kåpa	
0370	21A	43 66 696		21)	1	.Grille	.Galler	6
0380	22	42 34 167		21)	1	.Cover	.Lock	
0390	23	44 21 384			1	Rubber mat	Gummimatta	
0400	24	42 17 006			1	Ashtray	Askkopp	6
0410	25	44 22 200			1	Cover	Täcklock	
0420	26	79 77 002			3	Screw	Skruv	5
0430	27	79 67 995			2	Clip nut	Clipsmutter	3
0440	28	44 70 639			2	Expanding rivet	Expandernit	3
0450	29	*79 78 380*		NLS – USE 8029944, 8059420	1	Screw	Skruv	5
0450								
0460	30	44 88 193			1	Bracket	Konsol	
0470	31	79 67 995			1	.Clip nut	.Clipsmutter	3
0480	32	*79 67 771*		97) NLS – USE 7970601	1	Screw	Skruv	5
0490	33			See page 3A-063, 2-C16	1	Blind knob	Blindknapp	
0500	34			See page 3A-063, 2-C16	1	Blind knob	Blindknapp	
0510	35	85 74 469			1	Cigarette lighter	Cigarettändare	4

21. Part of: 4234092, 4792404 Ingår i: 4234092, 4792404
97. Ch. -R2012455

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -H22

Insulation
Isolering

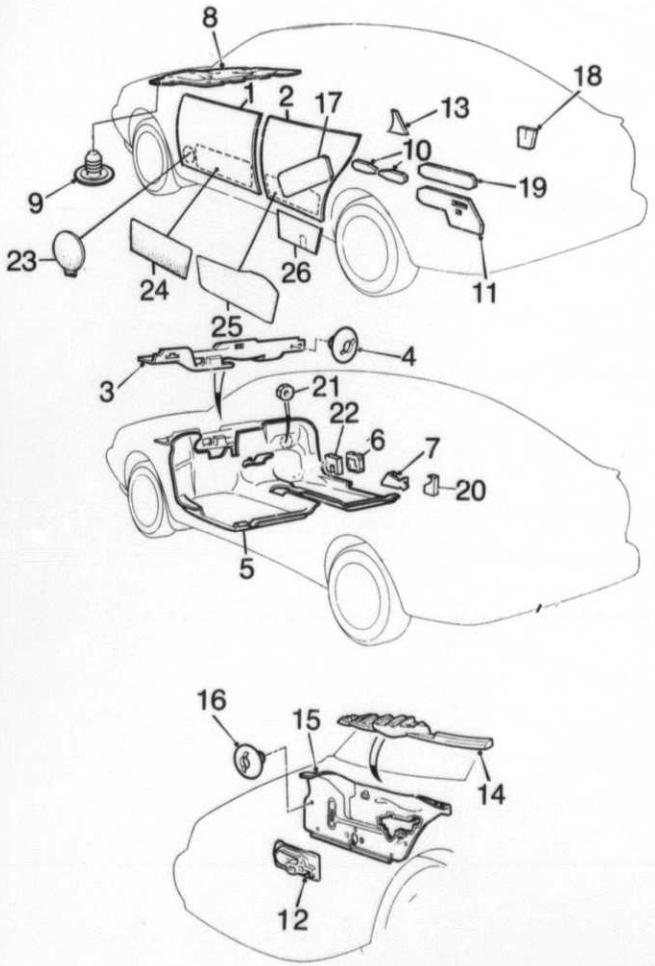

F7218 AAC94

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 71 272		3D, CV, LH	1	Water drainage	Vattenavledare	
0020	1	44 71 280		3D, CV, RH	1	Water drainage	Vattenavledare	
0030	1	44 71 231		5D, LH	1	Water drainage	Vattenavledare	
0040	1	44 71 249		5D, RH	1	Water drainage	Vattenavledare	
0050	2	43 70 516		CV, LH	1	Water drainage	Vattenavledare	5
0060	2	45 50 208		10), CV, RH	1	Water drainage	Vattenavledare	5
0070	2	43 70 516		11), CV, RH	1	Water drainage	Vattenavledare	5
0080	2	44 71 256		5D, LH	1	Water drainage	Vattenavledare	
0090	2	44 71 264		5D, RH	1	Water drainage	Vattenavledare	
0100	3	43 77 982		373), LHD	1	Insulation	Isolering	6
0105	3	47 90 283		374), LHD	1	Insulation	Isolering	
0110	3	46 42 245		1995-1997, 6-CYL, LHD	1	Insulation	Isolering	6
0120	3	43 77 990		373), RHD	1	Insulation	Isolering	6
0125	3	47 90 291		374), RHD	1	Insulation	Isolering	
0130	3	46 42 252		1995-1997, 6-CYL, RHD	1	Insulation	Isolering	6
0140	4	42 18 277			X	Push nut	Tryckmutter	6
0150	5	43 88 013		LHD	1	Insulation	Isolering	6
0160	5	44 07 235		CV, LHD	1	Insulation	Isolering	6
0170	5	43 88 039		RHD	1	Insulation	Isolering	6
0180	5	44 07 250		CV, RHD	1	Insulation	Isolering	6
0190	6	43 89 722		LH	1	Insulation	Isolering	6
0200	6	43 89 730		RH	1	Insulation	Isolering	6
0210	7	44 20 477		3D, LH	1	Insulation	Isolering	6
0220	7	44 20 485		3D, RH	1	Insulation	Isolering	6
0230	7	43 89 656		5D, LH	1	Insulation	Isolering	6
0240	7	43 89 664		5D, RH	1	Insulation	Isolering	6
0250	8	42 18 228			1	Insulation	Isolering	6
0260	9	42 66 185			X	Clamp	Klämma	6
0270	10	45 09 360			4	Sound absorber	Ljudabsorbent	
0280	11	44 22 507		5D, LH	1	Sound absorber	Ljudabsorbent	
0290	11	44 22 515		RH	1	Sound absorber	Ljudabsorbent	
0300	12	45 09 659		93), LHD	1	Sound absorber	Ljudabsorbent	
0310	12	45 06 620		94), LHD	1	Sound absorber	Ljudabsorbent	
0320	12	45 09 667		RHD	1	Sound absorber	Ljudabsorbent	
0330	13	45 12 349		5D, LH	1	Insulation	Isolering	
0340	13	45 12 356		5D, RH	1	Insulation	Isolering	
0350	14	*45 08 073*		1994, LH NLS – USE 4641072	1	Sound absorber	Ljudabsorbent	
0360	15	*45 09 618*		1994, RH NLS – USE 4641080	1	Sound absorber	Ljudabsorbent	
0370	14	46 41 072		1995-1997, LH	1	Sound absorber	Ljudabsorbent	
0380	14	48 87 485		1998-, LH	1	Sound absorber	Ljudabsorbent	
0390	14	46 41 080		1995-, RH	1	Sound absorber	Ljudabsorbent	
0400	15	43 77 958		-19897, LHD	1	Insulation	Isolering	6
0405	15	48 88 939		1998-, LHD	1	Insulation	Isolering	
0410	15	43 77 974		-1997, RHD	1	Insulation	Isolering	6
0415	15	48 88 947		1998-, RHD	1	Insulation	Isolering	6
0420	16	42 18 277			X	Push nut	Tryckmutter	6
0430	17	44 22 549		3D	2	Sound absorber	Ljudabsorbent	
0440	18	45 09 378			2	Sound absorber	Ljudabsorbent	
0450	19	45 09 394			2	Sound absorber	Ljudabsorbent	
0460	20	44 73 518		CV	2	Sound absorber	Ljudabsorbent	
0470	21	46 04 781		73), -1997, LHD, 6-CYL	1	Sound absorber	Ljudabsorbent	
0480	22	46 04 740		73), -1997, LHD, 6-CYL	1	Sound absorber	Ljudabsorbent	
0490	23	46 36 650			2	Water drainage	Vattenavledare	
0500	24	46 36 635		3D, CV, LH	1	Water drainage	Vattenavledare	

10. CV, ch. -S7009999
11. CV, ch. S7010000-
73. Ch. R2019307-
93. Ch. -R2032308
94. Ch. R2032309-
373. Ch. -V2037665, -V7010749
374. Ch. V2037666-, V7010750-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-H24

Insulation
Isolering

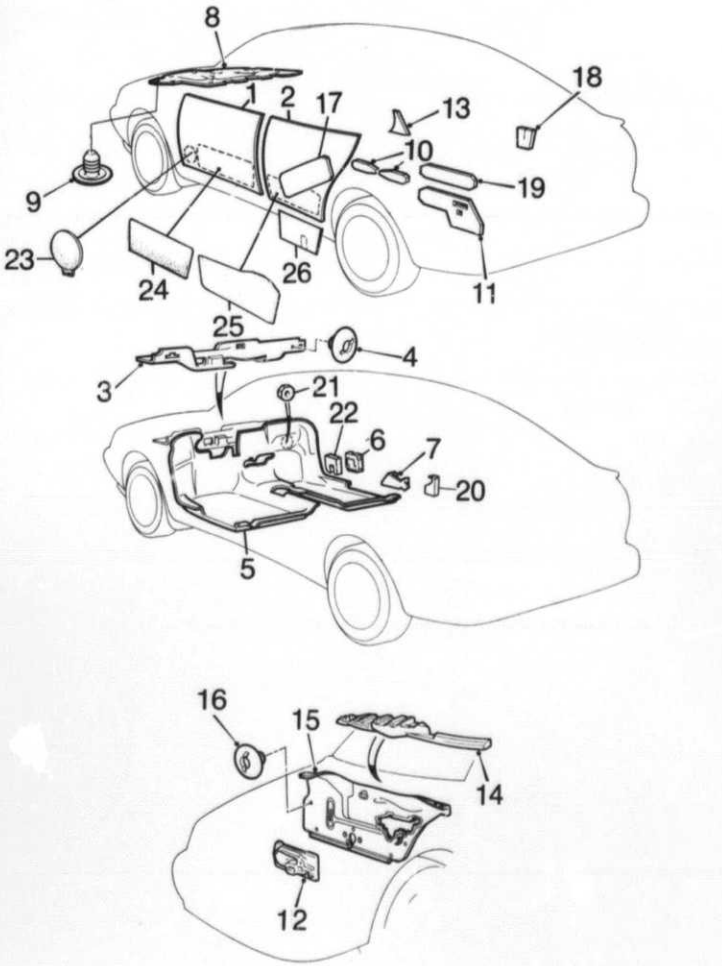

F7218 AAC94

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	24	46 36 643		3D, CV, RH	1	Water drainage	Vattenavledare	
0520	24	46 36 593		-1997, 5D, LH	1	Water drainage	Vattenavledare	
0530	24	46 36 601		-1997, 5D, RH	1	Water drainage	Vattenavledare	
0533	24	49 33 677		1998-, 5D, LH	1	Water drainage	Vattenavledare	
0536	24	50 00 104		1998-, 5D, RH	1	Water drainage	Vattenavledare	
0540	25	46 36 619		5D, LH	1	Water drainage	Vattenavledare	
0550	25	46 36 627		5D, RH	1	Water drainage	Vattenavledare	
0560	26	45 58 508		1995-, CV	2	Water drainage	Vattenavledare	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-I02

Damper mat
Dämpmatta

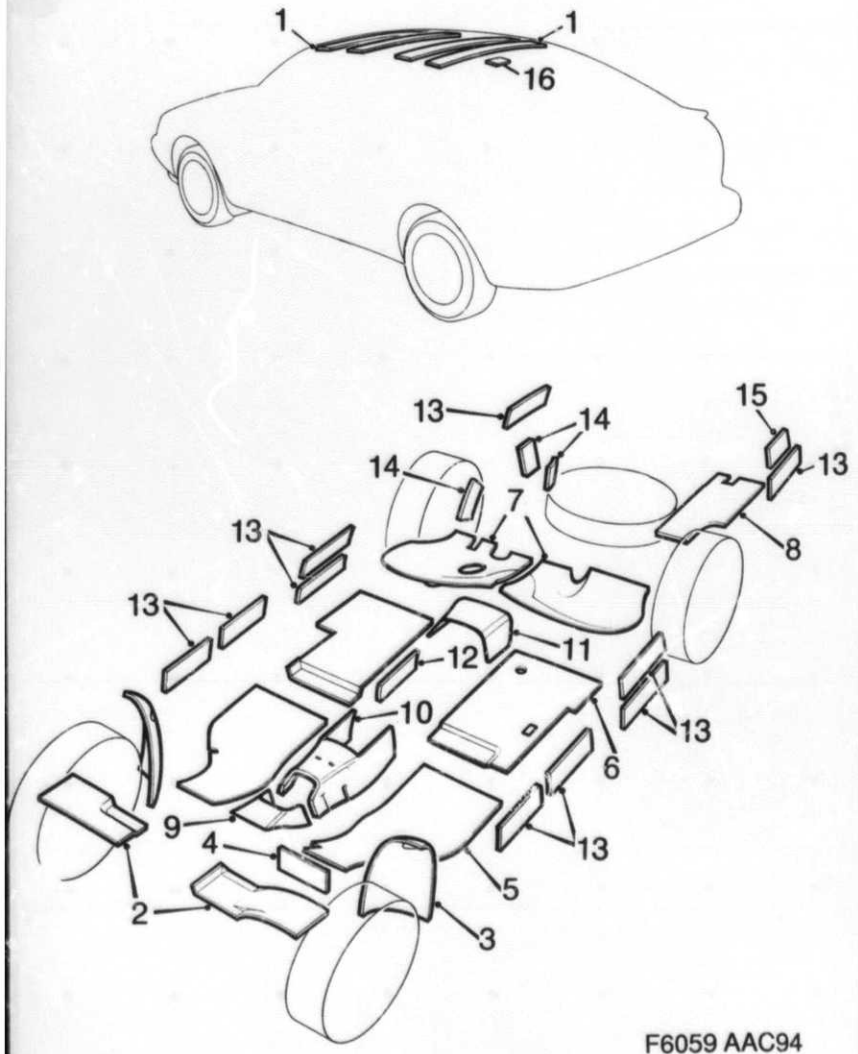

F6059 AAC94

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1	97 57 691			4	Damper mat	Dämpmatta	
1	97 57 691		SR	2	Damper mat	Dämpmatta	
2	44 03 598			2	Damper mat	Dämpmatta	
3	44 03 663			2	Damper mat	Dämpmatta	
4	44 03 697			1	Damper mat	Dämpmatta	
5	*44 03 614*		274), LH NLS – USE 4822102	1	Damper mat	Dämpmatta	
5	48 22 102		275), LH	1	Damper mat	Dämpmatta	
5	44 03 606		274), RH	1	Damper mat	Dämpmatta	
5	48 22 110		275), RH	1	Damper mat	Dämpmatta	
6	*44 03 622*		1994 NLS – USE 4822128	2	Damper mat	Dämpmatta	
6	*46 43 045*		1995-,274) NLS – USE 4922128	2	Damper mat	Dämpmatta	
6	48 22 128		275)	2	Damper mat	Dämpmatta	
7	*44 03 630*		1994, LH NLS – USE 4636056	1	Damper mat	Dämpmatta	
7	46 36 056		1995-,274), LH	1	Damper mat	Dämpmatta	
7	48 22 136		275), LH	1	Damper mat	Dämpmatta	
7	*44 03 648*		1994, RH NLS – USE 4636064	1	Damper mat	Dämpmatta	
7	46 36 064		1995-,274), RH	1	Damper mat	Dämpmatta	
7	48 22 144		275), RH	1	Damper mat	Dämpmatta	
8	*44 03 655*		1994 NLS – USE 4636072	1	Damper mat	Dämpmatta	
8	46 36 072		1995-	1	Damper mat	Dämpmatta	
9	44 03 572			1	Damper mat	Dämpmatta	
10	44 03 580			1	Damper mat	Dämpmatta	
11	44 03 598			1	Damper mat	Dämpmatta	
12	44 03 697			1	Damper mat	Dämpmatta	
13	95 44 834			X	Damper mat	Dämpmatta	5
14	42 71 433			X	Damper mat	Dämpmatta	6
15	42 71 425		1994	1	Damper mat	Dämpmatta	6
15	40 53 773		1995-	1	Damper mat	Dämpmatta	5
16	42 71 433			1	Damper mat	Dämpmatta	6

199. Ch. -S2042854
274. Ch. -T2039813, -T7010821
275. Ch. T2039814-, T7010822-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Upholstery
Covers

Klädsel
Klädselpåsar

5 -104

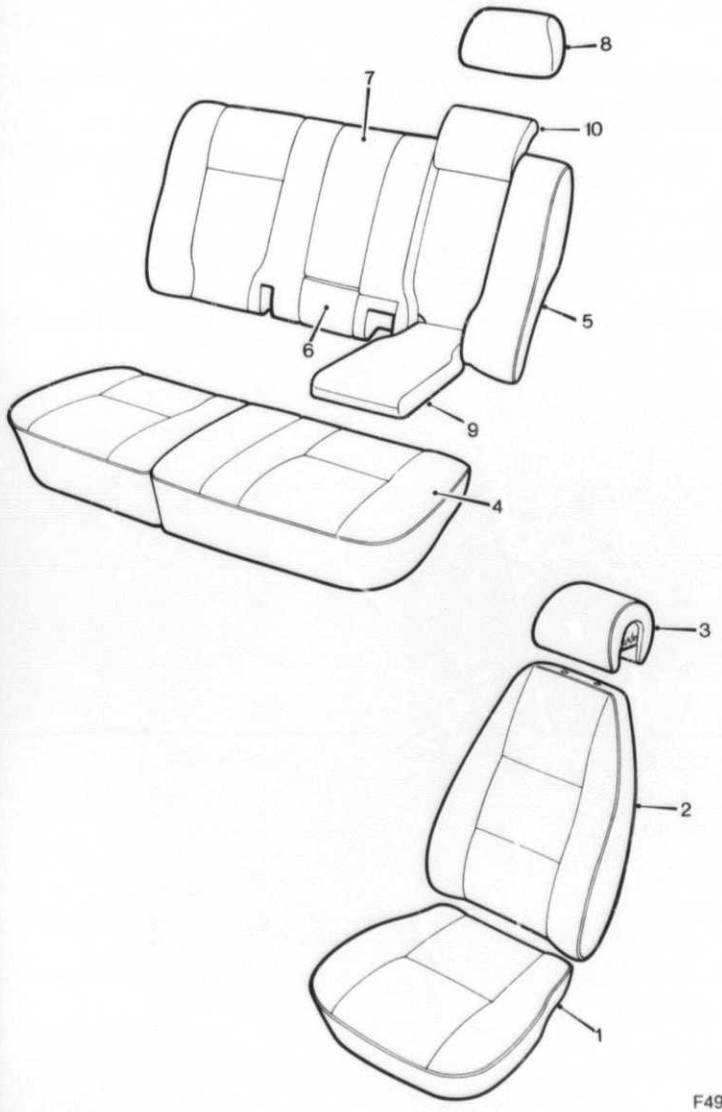

F4900 AAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0011				-1996, TRIM COLOUR J42				
0020	1	*46 29 770*		210,228) (4461364) NLS - USE 4799235	2	Seat cover	Sitspåse	
0030	1	47 99 235		210,229)	2	Seat cover	Sitspåse	
0040	2	*44 61 380*		210,228) NLS – USE 4763173	2	Back cover	Ryggpåse	
0050	2	47 63 173		210,229)	2	Back cover	Ryggpåse	
0060	3	44 61 398		210)	2	Head restraint cover	Nackstödspåse	
0070	4	*45 34 400*		210,106), LH, 3D NLS – USE 4631032	1	Seat cover	Sitspåse	
0080	4	46 31 032		210,107), LH, 3D	1	Seat cover	Sitspåse	
0090	4	44 61 737		210), LH, 5D	1	Seat cover	Sitspåse	
0100	4	*45 34 392*		210,106), RH, 3D NLS – USE 4631024	1	Seat cover	Sitspåse	
0110	4	46 31 024		210,107), RH, 3D	1	Seat cover	Sitspåse	
0120	4	44 61 729		210), RH, 5D	1	Seat cover	Sitspåse	
0130	5	44 61 752		210), LH	1	Back cover	Ryggpåse	
0140	5	44 96 394		210,26), LH	1	Back cover	Ryggpåse	
0150	5	44 61 745		210), RH	1	Back cover	Ryggpåse	
0160	5	44 96 386		210,26), RH	1	Back cover	Ryggpåse	
0170	6	44 61 786		210)	1	Filler piece	Utfyllnad	
0180	7	44 61 778		210	1	Arm rest cover	Armstödspåse	
0190	8	44 61 760		210)	2	Head restraint cover	Nackstödspåse	
0200	9	44 75 927		210,26)	2	Seat cover	Sitspåse	
0210	10	44 62 669		210,26)	2	Head restraint cover	Nackstödspåse	
0220				1997-, TRIM COLOUR J52				
0230	1	48 40 922		210,279)	2	Seat cover	Sitspåse	
0235	1	48 88 467		210,280)	2	Seat cover	Sitspåse	
0240	2	48 40 997		210,279)	2	Back cover	Ryggpåse	
0245	2	48 88 426		210,280)	2	Back cover	Ryggpåse	
0250	3	48 41 060		210)	2	Head restraint cover	Nackstödspåse	
0260	4	48 41 326		210), LH, 3D	1	Seat cover	Sitspåse	
0270	4	48 41 300		210), LH, 5D	1	Seat cover	Sitspåse	
0280	4	48 41 318		210), RH, 3D	1	Seat cover	Sitspåse	
0290	4	48 41 292		210), RH, 5D	1	Seat cover	Sitspåse	
0300	5	48 41 342		210), LH	1	Back cover	Ryggpåse	
0310	5	48 41 383		210,26), LH	1	Back cover	Ryggpåse	
0320	5	48 41 334		210), RH	1	Back cover	Ryggpåse	
0330	5	48 41 375		210,26), RH	1	Back cover	Ryggpåse	
0340	6	48 41 458		210)	1	Filler piece	Utfyllnad	
0350	7	48 41 441		210)	1	Arm rest cover	Armstödspåse	
0360	8	48 41 433		210)	2	Head restraint cover	Nackstödspåse	
0370	9	48 41 474		210,26)	2	Seat cover	Sitspåse	
0380	10	48 41 466		210,26)	2	Head restraint cover	Nackstödspåse	
0390				TRIM COLOUR J22				
0400	1	*46 29 804*		210,228) (4461406) NLS - USE 4799268	2	Seat cover	Sitspåse	
0410	1	47 99 268		210,229,279)	2	Seat cover	Sitspåse	
0420	1	47 60 492		210,280)	2	Seat cover	Sitspåse	
0430	2	*44 61 422*		210,228) NLS – USE 4763264	2	Back cover	Ryggpåse	
0440	2	47 63 264		210,229,279)	2	Back cover	Ryggpåse	
0450	2	47 60 500		210,280)	2	Back cover	Ryggpåse	
0460	3	44 61 398		210)	2	Head restraint cover	Nackstödspåse	

26. With integrated child seat Med integrerad barnstol
106. Ch. –R2037450
107. Ch. R2037451–
210. Light beige Ljus beige
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-C02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -I06

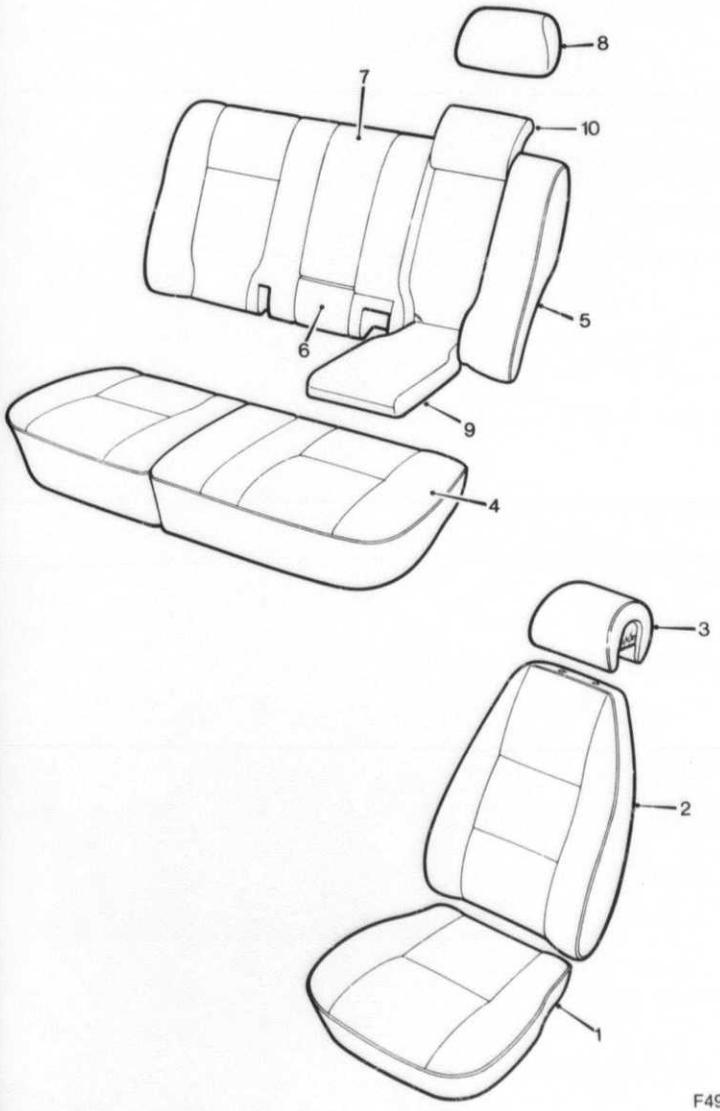

F4900 AAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				TRIM COLOUR J22				
0470	4	*45 34 467*		210,106), LH, 3D NLS – USE 4631123	1	Seat cover	Sitspåse	
0470								
0480	4	46 31 123		210,107), LH, 3D	1	Seat cover	Sitspåse	
0490	4	44 61 802		210), LH, 5D	1	Seat cover	Sitspåse	
0500	4	*45 34 459*		210,106), RH, 3D NLS – USE 4631115	1	Seat cover	Sitspåse	
0500								
0510	4	46 31 115		210,107), RH, 3D	1	Seat cover	Sitspåse	
0520	4	44 61 794		210), RH, 5D	1	Seat cover	Sitspåse	
0530	5	44 61 828		210), LH	1	Back cover	Ryggpåse	
0540	5	44 96 451		210,26), LH	1	Back cover	Ryggpåse	
0545	5	45 07 232		210,26,316), LH, US	1	Back cover	Ryggpåse	
0550	5	49 35 755		210,26,317), LH, US	1	Back cover	Ryggpåse	
0560	5	45 07 414		210,26), LH, CA	1	Back cover	Ryggpåse	
0570	5	44 61 810		210), RH	1	Back cover	Ryggpåse	
0580	5	44 96 444		210,26), RH	1	Back cover	Ryggpåse	
0590	5	45 07 224		210,26,316), RH, US	1	Back cover	Ryggpåse	
0595	5	49 35 748		210,26,317), RH, US	1	Back cover	Ryggpåse	
0600	5	45 07 406		210,26), RH, CA	1	Back cover	Ryggpåse	
0610	6	44 61 786		210)	1	Filler piece	Utfyllnad	
0620	7	44 61 778		210)	1	Arm rest cover	Armstödspåse	
0630	8	44 61 760		210)	2	Head restraint cover	Nackstödspåse	
0640	9	44 75 950		210,26)	2	Seat cover	Sitspåse	
0650	10	44 62 669		210,26)	2	Head restraint cover	Nackstödspåse	
0660				10) 1994,TRIM COLOUR J32				
0670	1	46 29 754		210) (4461323)	2	Seat cover	Sitspåse	
0680	2	44 61 349		210)	2	Back cover	Ryggpåse	
0690	3	44 61 356		210)	2	Head restraint cover	Nackstödspåse	
0700	4	*45 34 343*		210,106), LH, 3D NLS – USE 4631271	1	Seat cover	Sitspåse	
0700								
0710	4	46 31 271		210,107), LH, 3D	1	Seat cover	Sitspåse	
0720	4	44 61 661		210), LH, 5D	1	Seat cover	Sitspåse	
0730	4	*45 34 335*		210,106), RH, 3D NLS – USE 4631263	1	Seat cover	Sitspåse	
0730								
0740	4	46 31 263		210,107), RH, 3D	1	Seat cover	Sitspåse	
0750	4	44 61 653		210), RH, 5D	1	Seat cover	Sitspåse	
0760	4	44 95 867		210), CV	1	Seat cover	Sitspåse	
0770	5	44 61 637		210), LH	1	Back cover	Ryggpåse	
0780	5	44 96 337		210,26), LH	1	Back cover	Ryggpåse	
0790	5	45 07 117		210,26), LH, US	1	Back cover	Ryggpåse	
0800	5	45 07 299		210,26), LH, CA	1	Back cover	Ryggpåse	
0810	5	44 61 679		210), RH	1	Back cover	Ryggpåse	
0820	5	44 96 329		210,26), RH	1	Back cover	Ryggpåse	
0830	5	45 07 109		210,26), RH, US	1	Back cover	Ryggpåse	
0840	5	45 07 281		210,26), RH, CA	1	Back cover	Ryggpåse	
0850	5	44 95 875		210), CV	1	Back cover	Ryggpåse	
0860	6	44 61 711		210)	1	Filler piece	Utfyllnad	
0870	7	44 61 703		210)	1	Arm rest cover	Armstödspåse	
0880	8	44 61 695		210)	2	Head restraint cover	Nackstödspåse	
0890	8	44 95 883		210), CV	2	Head restraint cover	Nackstödspåse	
0900	9	44 75 893		210,26)	2	Seat cover	Sitspåse	
0910	10	44 62 636		210,26)	2	Head restraint cover	Nackstödspåse	
0920				11)1995-,TRIM COLOUR L32, M37				
0925								

10. CV, ch. –S7009999
11. CV, ch. S7010000–
26. With integrated child seat Med integrerad barnstol
106. Ch. –R2037450
107. Ch. R2037451–
210. Light beige Ljus beige
316. Ch. –V2016245
317. Ch. V2016246–

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -108

Covers
Klädselpåsar

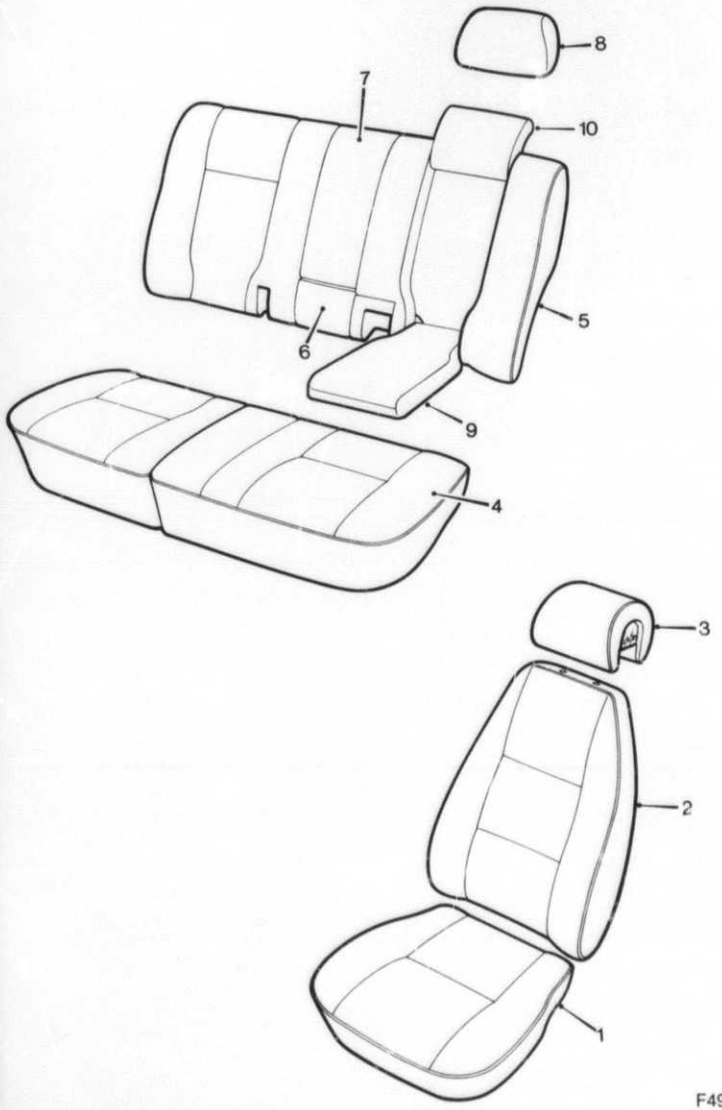

F4900 AAC94

Pos	Part No/Art nr	KS	11)1995-,TRIM COLOUR L32, M37	Qty/ Antal	Description	Benämning	SL
1	*46 29 739*		210,228) NLS – USE 4799201	2	Seat cover	Sitspåse	
1	47 99 201		210,229,279)	2	Seat cover	Sitspåse	
1	47 60 310		210,280)	2	Seat cover	Sitspåse	
2	*45 30 754*		210,228) NLS – USE 4763082	2	Back cover	Ryggpåse	
2	47 63 082		210,229,279)	2	Back cover	Ryggpåse	
2	47 60 328		210,280)	2	Back cover	Ryggpåse	
3	45 30 762		210)	2	Head restraint cover	Nackstödspåse	
4	46 30 943		210), LH, 3D	1	Seat cover	Sitspåse	
4	45 30 861		210), LH, 5D	1	Seat cover	Sitspåse	
4	46 30 935		210), RH, 3D	1	Seat cover	Sitspåse	
4	45 30 853		210), RH, 5D	1	Seat cover	Sitspåse	
4	45 31 026		210), CV	1	Seat cover	Sitspåse	
5	45 30 887		210), LH	1	Back cover	Ryggpåse	
5	45 30 937		210,26), LH	1	Back cover	Ryggpåse	
5	45 30 994		210,26,316), LH, US	1	Back cover	Ryggpåse	
5	49 35 631		210,26,317), LH, US	1	Back cover	Ryggpåse	
5	45 31 018		210,26), LH, CA	1	Back cover	Ryggpåse	
5	45 30 879		210), RH	1	Back cover	Ryggpåse	
5	45 30 929		210,26), RH	1	Back cover	Ryggpåse	
5	45 30 986		210,26,316), RH, US	1	Back cover	Ryggpåse	
5	49 35 623		210,26,317), RH, US	1	Back cover	Ryggpåse	
5	45 31 000		210,26), RH, CA	1	Back cover	Ryggpåse	
5	45 31 034		210), CV	1	Back cover	Ryggpåse	
6	45 30 911		210)	1	Filler piece	Utfyllnad	
7	45 30 903		210)	1	Arm rest cover	Armstödspåse	
8	45 30 895		210)	2	Head restraint cover	Nackstödspåse	
8	45 31 042		210), CV	2	Head restraint cover	Nackstödspåse	
9	45 30 952		210,26)	2	Seat cover	Sitspåse	
10	45 30 945		210,26)	2	Head restraint cover	Nackstödspåse	
			1996, TRIM COLOUR H42				
1	*46 29 762*		100,228) (4461240) NLS - USE 4799227	2	Seat cover	Sitspåse	
1	47 99 227		100,229)	2	Seat cover	Sitspåse	
2	*44 61 265*		100,228) NLS – USE 4763165	2	Back cover	Ryggpåse	
2	47 63 165		100,229)	2	Back cover	Ryggpåse	
3	44 61 273		100)	2	Head restraint cover	Nackstödspåse	
4	*45 34 384*		100,106), LH, 3D NLS – USE 4631008	1	Seat cover	Sitspåse	
4	46 31 008		100,107), LH, 3D	1	Seat cover	Sitspåse	
4	44 61 943		100), LH, 5D	1	Seat cover	Sitspåse	
4	*45 34 376*		100,106), RH, 3D NLS – USE 4630992	1	Seat cover	Sitspåse	
4	46 30 992		100,107), RH, 3D	1	Seat cover	Sitspåse	
4	44 61 935		100), RH, 5D	1	Seat cover	Sitspåse	
5	44 61 968		100), LH	1	Back cover	Ryggpåse	
5	44 96 378		100,26), LH	1	Back cover	Ryggpåse	
5	44 61 950		100), RH	1	Back cover	Ryggpåse	
5	44 96 360		100,26), RH	1	Back cover	Ryggpåse	
6	44 61 992		100)	1	Filler piece	Utfyllnad	

26. With integrated child seat Med integrerad barnstol
100. Light grey Ljus grå
106. Ch. –R2037450
107. Ch. R2037451–
210. Light beige Ljus beige
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–
316. Ch. –V2016245
317. Ch. V2016246–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -I10

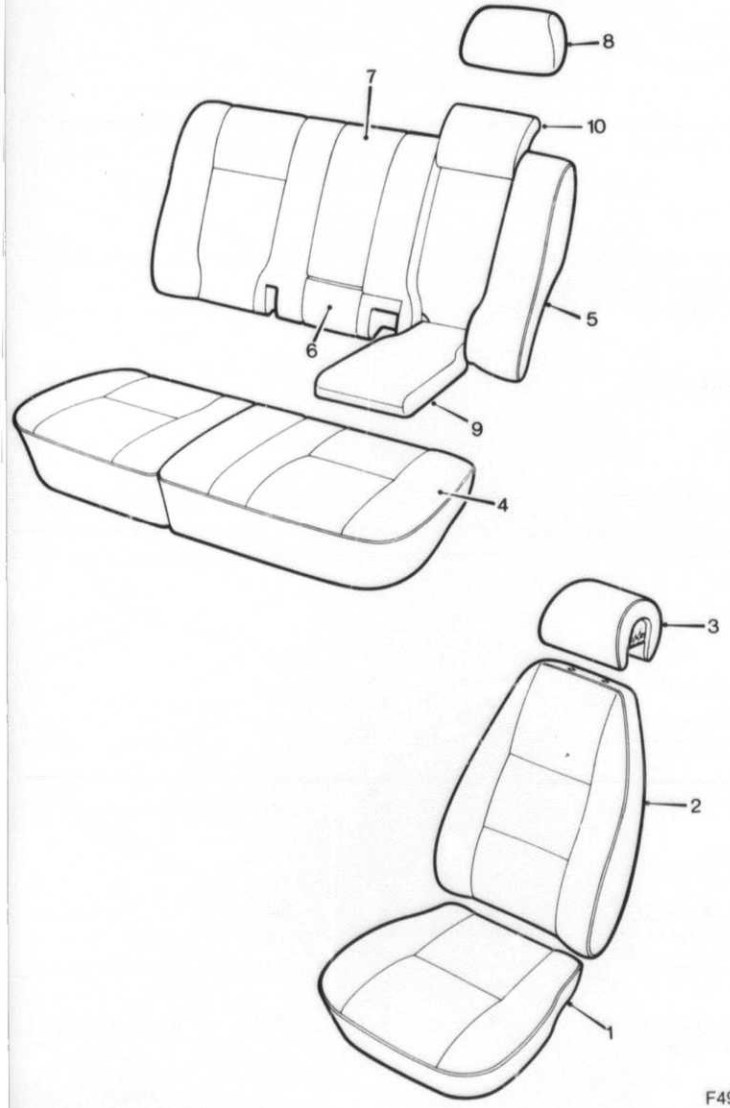

F4900 AAC94

1301	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
				1996, TRIM COLOUR H42				
1370	7	44 61 984		100)	1	Arm rest cover	Armstödspåse	
1380	8	44 61 976		100)	2	Head restraint cover	Nackstödspåse	
1390	9	44 75 919		100,26)	2	Seat cover	Sitspåse	
1400	10	44 62 651		100,26)	2	Head restraint cover	Nackstödspåse	
1410				1997-, TRIM COLOUR H52				
1420	1	48 40 914		100,279)	2	Seat cover	Sitspåse	
1425	1	48 88 459		100,280)	2	Seat cover	Sitspåse	
1430	2	48 40 989		100,279)	2	Back cover	Ryggpåse	
1435	2	48 88 418		100,280)	2	Back cover	Ryggpåse	
1440	3	48 41 052		100)	2	Head restraint cover	Nackstödspåse	
1450	4	48 41 284		100), LH, 3D	1	Seat cover	Sitspåse	
1460	4	48 41 136		100), LH, 5D	1	Seat cover	Sitspåse	
1470	4	48 41 276		100), RH, 3D	1	Seat cover	Sitspåse	
1480	4	48 41 128		100), RH, 5D	1	Seat cover	Sitspåse	
1490	5	48 41 151		100), LH	1	Back cover	Ryggpåse	
1500	5	48 41 227		100,26), LH	1	Back cover	Ryggpåse	
1510	5	48 41 144		100), RH	1	Back cover	Ryggpåse	
1520	5	48 41 219		100,26), RH	1	Back cover	Ryggpåse	
1530	6	48 41 185		100)	1	Filler piece	Utfyllnad	
1540	7	48 41 177		100)	1	Arm rest cover	Armstödspåse	
1550	8	48 41 169		100)	2	Head restraint cover	Nackstödspåse	
1560	9	48 41 268		100,26)	2	Seat cover	Sitspåse	
1570	10	48 41 250		100,26)	2	Head restraint cover	Nackstödspåse	
1580				TRIM COLOUR H22				
1590	1	*46 29 796*		100,228) (4461281) NLS - USE 4799250	2	Seat cover	Sitspåse	
1600	1	47 99 250		100,229,279)	2	Seat cover	Sitspåse	
1610	1	47 60 468		100,280)	2	Seat cover	Sitspåse	
1620	2	*44 61 307*		100,228) NLS – USE 4763256	2	Back cover	Ryggpåse	
1630	2	47 63 256		100,229,279)	2	Back cover	Ryggpåse	
1640	2	47 60 476		100,280)	2	Back cover	Ryggpåse	
1650	3	44 61 273		100)	2	Head restraint cover	Nackstödspåse	
1660	4	*45 34 442*		100,106), LH, 3D NLS – USE 4631099	1	Seat cover	Sitspåse	
1670	4	46 31 099		100,107), LH, 3D	1	Seat cover	Sitspåse	
1680	4	44 62 016		100), LH, 5D	1	Seat cover	Sitspåse	
1690	4	*45 34 434*		100,106), RH, 3D NLS – USE 4631081	1	Seat cover	Sitspåse	
1700	4	46 31 081		100,107), RH, 3D	1	Seat cover	Sitspåse	
1710	4	44 62 008		100), RH, 5D	1	Seat cover	Sitspåse	
1720	5	44 62 032		100), LH	1	Back cover	Ryggpåse	
1730	5	44 96 436		100,26), LH	1	Back cover	Ryggpåse	
1740	5	45 07 216		100,26,316), LH, US	1	Back cover	Ryggpåse	
1745	5	49 35 730		100,26,317), LH, US	1	Back cover	Ryggpåse	
1750	5	45 07 398		100,26), LH, CA	1	Back cover	Ryggpåse	
1760	5	44 62 024		100), RH	1	Back cover	Ryggpåse	
1770	5	44 96 428		100,26), RH	1	Back cover	Ryggpåse	
1780	5	45 07 208		100,26,316), RH, US	1	Back cover	Ryggpåse	
1785	5	49 35 722		100,26,317), RH, US	1	Back cover	Ryggpåse	
1790	5	45 07 380		100,26), RH, CA	1	Back cover	Ryggpåse	
1800	6	44 61 992		100)	1	Filler piece	Utfyllnad	
1810	7	44 61 984		100)	1	Arm rest cover	Armstödspåse	

26. With integrated child seat Med integrerad barnstol
100. Light grey Ljus grå
106. Ch. –R2037450
107. Ch. R2037451–
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–
316. Ch. –V2016245
317. Ch. V2016246–

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-I12

Covers
Klädselpåsar

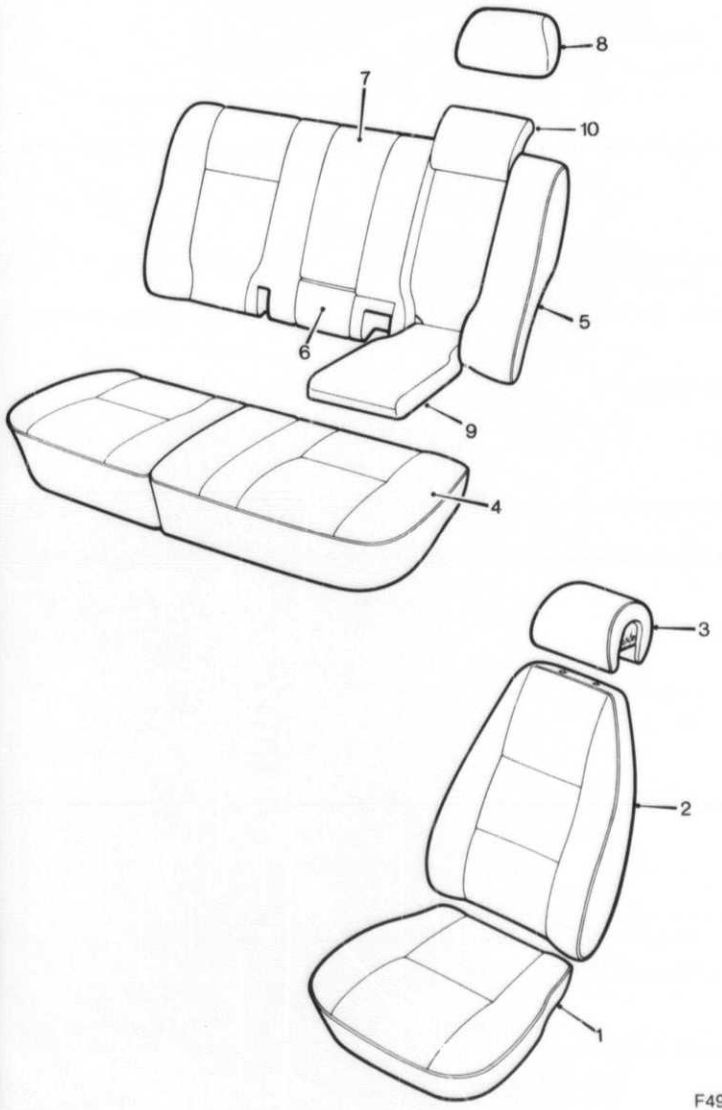

F4900 AAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				TRIM COLOUR H22				
1820	8	44 61 976		100)	2	Head restraint cover	Nackstödspåse	
1830	9	44 75 943		100,26)	2	Seat cover	Sitspåse	
1840	10	44 62 651		100,26)	2	Head restraint cover	Nackstödspåse	
1850				TRIM COLOUR H32				
1860	1	*46 29 721*		100,228) (4461208) NLS - USE 4799193	2	Seat cover	Sitspåse	
1870	1	47 99 193		100,229,279)	2	Seat cover	Sitspåse	
1880	1	47 60 286		100,280)	2	Seat cover	Sitspåse	
1890	2	*44 61 224*		100,228) NLS – USE 4763074	2	Back cover	Ryggpåse	
1900	2	47 63 074		100,229,279)	2	Back cover	Ryggpåse	
1910	2	47 60 294		100,280)	2	Back cover	Ryggpåse	
1920	3	44 61 232		100)	2	Head restraint cover	Nackstödspåse	
1930	4	*45 34 327*		100,106), LH, 3D NLS – USE 4630919	1	Seat cover	Sitspåse	
1940	4	46 30 919		100,107), LH, 3D	1	Seat cover	Sitspåse	
1950	4	44 61 877		100), LH, 5D	1	Seat cover	Sitspåse	
1960	4	*45 34 319*		100,106), RH, 3D NLS – USE 4630901	1	Seat cover	Sitspåse	
1970	4	46 30 901		100,107), RH, 3D	1	Seat cover	Sitspåse	
1980	4	44 61 869		100), RH, 5D	1	Seat cover	Sitspåse	
1990	4	44 95 834		100), CV	1	Seat cover	Sitspåse	
2000	5	44 61 893		100), LH	1	Back cover	Ryggpåse	
2010	5	44 96 311		100,26), LH	1	Back cover	Ryggpåse	
2020	5	45 07 091		100,26,316), LH, US	1	Back cover	Ryggpåse	
2025	5	49 35 615		100,26,317), LH, US	1	Back cover	Ryggpåse	
2030	5	45 07 273		100,26), LH, CA	1	Back cover	Ryggpåse	
2040	5	44 61 885		100), RH	1	Back cover	Ryggpåse	
2050	5	44 96 303		100,26), RH	1	Back cover	Ryggpåse	
2060	5	45 07 083		100,26,316), RH, US	1	Back cover	Ryggpåse	
2065	5	49 35 607		100,26,317), RH, US	1	Back cover	Ryggpåse	
2070	5	45 07 265		100,26), RH, CA	1	Back cover	Ryggpåse	
2080	5	44 95 842		100), CV	1	Back cover	Ryggpåse	
2090	6	44 61 927		100)	1	Filler piece	Utfyllnad	
2100	7	44 61 919		100)	1	Arm rest cover	Armstödspåse	
2110	8	44 61 901		100)	2	Head restraint cover	Nackstödspåse	
2120	8	44 95 859		100), CV	2	Head restraint cover	Nackstödspåse	
2130	9	44 75 885		100,26)	2	Seat cover	Sitspåse	
2140	10	44 62 628		100,26)	2	Head restraint cover	Nackstödspåse	
2150				-1996, TRIM COLOUR K42				
2160	1	*46 29 788*		110,228) (4461125) NLS - USE 4799243	2	Seat cover	Sitspåse	
2170	1	47 99 243		110,229)	2	Seat cover	Sitspåse	
2180	2	*44 61 141*		110,228) NLS – USE 4763181	2	Back cover	Ryggpåse	
2190	2	47 63 181		110,229)	2	Back cover	Ryggpåse	
2200	3	44 61 158		110)	2	Head restraint cover	Nackstödspåse	
2210	4	*45 34 426*		110,106), LH, 3D NLS – USE 4631065	1	Seat cover	Sitspåse	
2220	4	46 31 065		110,107), LH, 3D	1	Seat cover	Sitspåse	
2230	4	44 61 521		110), LH, 5D	1	Seat cover	Sitspåse	

26. With integrated child seat Med integrerad barnstol
100. Light grey Ljus grå
106 Ch. –R2037450
107. Ch. R2037451–
110. Black Svart
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–
316. Ch. –V2016245
317. Ch. V2016246–


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-I14

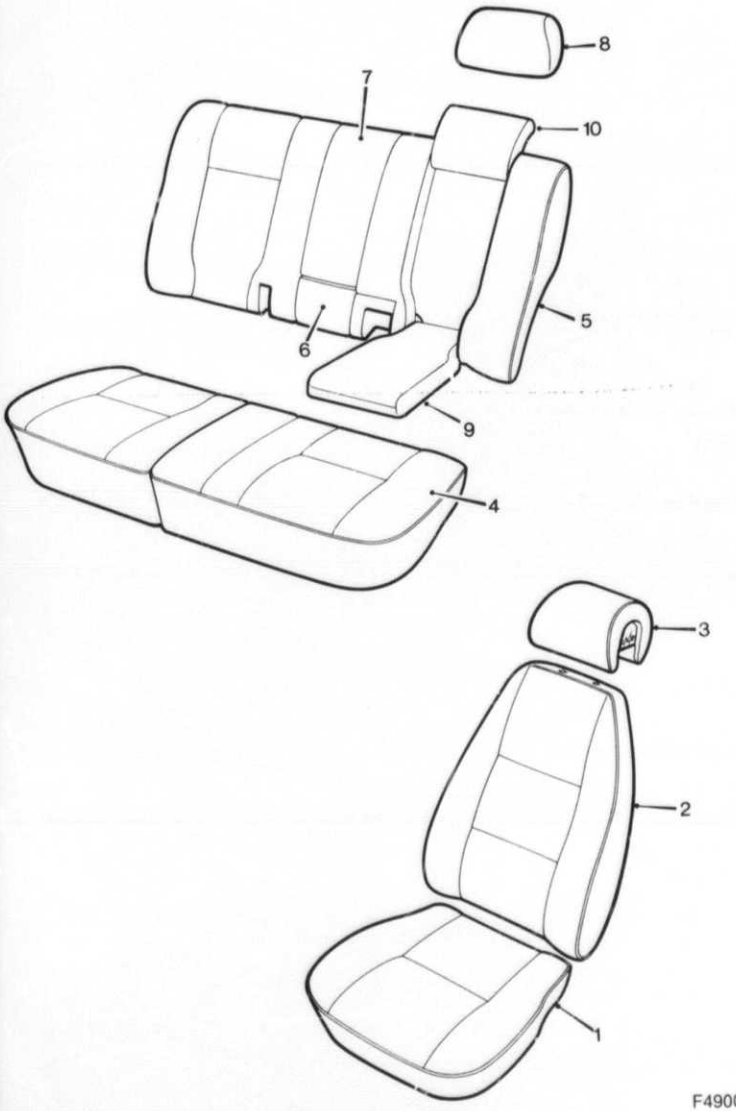

F4900 AAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				-1996, TRIM COLOUR K42				
2240	4	*45 34 418*		110,106), RH, 3D NLS – USE 4631057	1	Seat cover	Sitspåse	
2240								
2250	4	46 31 057		110,107), RH, 3D	1	Seat cover	Sitspåse	
2260	4	44 61 513		110), RH, 5D	1	Seat cover	Sitspåse	
2270	5	44 61 547		110), LH	1	Back cover	Ryggpåse	
2280	5	44 96 410		110,26), LH	1	Back cover	Ryggpåse	
2290	5	44 61 539		110), RH	1	Back cover	Ryggpåse	
2300	5	44 96 402		110,26), RH	1	Back cover	Ryggpåse	
2310	6	44 61 570		110)	1	Filler piece	Utfyllnad	
2320	7	44 61 562		110)	1	Arm rest cover	Armstödspåse	
2330	8	44 61 554		110)	2	Head restraint cover	Nackstödspåse	
2340	9	44 75 935		110,26)	2	Seat cover	Sitspåse	
2350	10	44 62 677		110,26)	2	Head restraint cover	Nackstödspåse	
2360				1997-, TRIM COLOUR K52				
2370	1	48 40 930		110,279)	2	Seat cover	Sitspåse	
2375	1	48 88 475		110,280)	2	Seat cover	Sitspåse	
2380	2	48 41 003		110,279)	2	Back cover	Ryggpåse	
2385	2	48 88 434		110,280)	2	Back cover	Ryggpåse	
2390	3	48 41 078		110)	2	Head restraint cover	Nackstödspåse	
2400	4	48 41 516		110), LH, 3D	1	Seat cover	Sitspåse	
2410	4	48 41 490		110), LH, 5D	1	Seat cover	Sitspåse	
2420	4	48 41 508		110), RH, 3D	1	Seat cover	Sitspåse	
2430	4	48 41 482		110), RH, 5D	1	Seat cover	Sitspåse	
2440	5	48 41 532		110), LH	1	Back cover	Ryggpåse	
2450	5	48 41 573		110,26), LH	1	Back cover	Ryggpåse	
2460	5	48 41 524		110), RH	1	Back cover	Ryggpåse	
2470	5	48 41 565		110,26), RH	1	Back cover	Ryggpåse	
2480	6	48 41 649		110)	1	Filler piece	Utfyllnad	
2490	7	48 41 631		110)	1	Arm rest cover	Armstödspåse	
2500	8	48 41 623		110)	2	Head restraint cover	Nackstödspåse	
2510	9	48 41 664		110,26)	2	Seat cover	Sitspåse	
2520	10	48 41 656		110,26)	2	Head restraint cover	Nackstödspåse	
2530				TRIM COLOUR K22				
2540	1	*46 29 812*		110,228) (4461166) NLS - USE 4799276	2	Seat cover	Sitspåse	
2540								
2550	1	47 99 276		110,229,279)	2	Seat cover	Sitspåse	
2560	1	47 60 526		110,280)	2	Seat cover	Sitspåse	
2570	2	*44 61 182*		110,228) NLS – USE 4763272	2	Back cover	Ryggpåse	
2570								
2580	2	47 63 272		110,229,279)	2	Back cover	Ryggpåse	
2590	2	47 60 534		110,280)	2	Back cover	Ryggpåse	
2600	3	44 61 158		110)	2	Head restraint cover	Nackstödspåse	
2610	4	*45 34 483*		110,106), LH, 3D NLS – USE 4631156	1	Seat cover	Sitspåse	
2610								
2620	4	46 31 156		110,107), LH, 3D	1	Seat cover	Sitspåse	
2630	4	44 61 596		110), LH, 5D	1	Seat cover	Sitspåse	
2640	4	*45 34 475*		110,106), RH, 3D NLS – USE 4631149	1	Seat cover	Sitspåse	
2640								
2650	4	46 31 149		110,107), RH, 3D	1	Seat cover	Sitspåse	
2660	4	44 61 588		110), RH, 5D	1	Seat cover	Sitspåse	
2670	5	44 61 612		110), LH	1	Back cover	Ryggpåse	
2680	5	44 96 477		110,26), LH	1	Back cover	Ryggpåse	
2690	5	45 07 257		110,26,316), LH, US	1	Back cover	Ryggpåse	

26. With integrated child seat Med integrerad barnstol
106. Ch. -R2037450
107. Ch. R2037451-
110. Black Svart
228. Ch. -T2012760, -T7002363
229. Ch. T2012761-, T7002364-
279. Ch. -V2004709, -V7000721
280. Ch. V2004710-, V7000722-
316. Ch. -V2016245

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-I16

Covers
Klädselpåsar

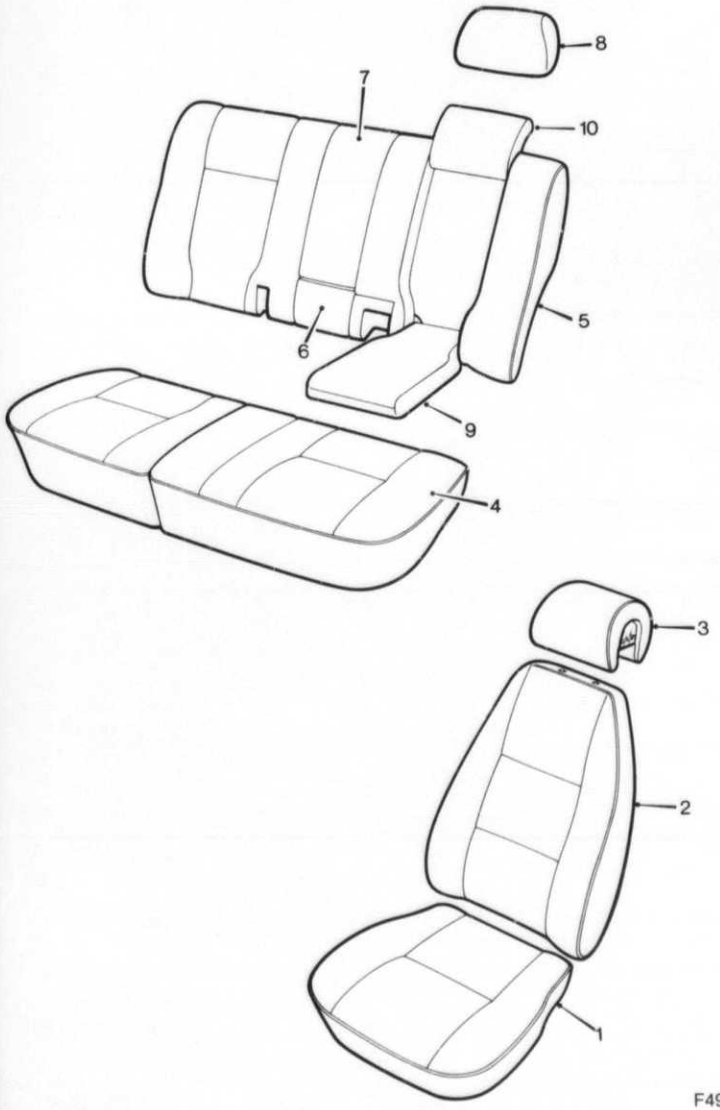

F4900 AAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
				TRIM COLOUR K22				
2695	5	49 35 771		110,26,317), LH, US	1	Back cover	Ryggpåse	
2700	5	45 07 430		110,26), LH, CA	1	Back cover	Ryggpåse	
2710	5	44 61 604		110), RH	1	Back cover	Ryggpåse	
2720	5	44 96 469		110,26), RH	1	Back cover	Ryggpåse	
2730	5	45 07 240		110,26,316), RH, US	1	Back cover	Ryggpåse	
2735	5	49 35 763		110,26,317), RH, US	1	Back cover	Ryggpåse	
2740	5	45 07 422		110,26), CA	1	Back cover	Ryggpåse	
2750	6	44 61 570		110)	1	Filler piece	Utfyllnad	
2760	7	44 61 562		110)	1	Arm rest cover	Armstödspåse	
2770	8	44 61 554		110)	2	Head restraint cover	Nackstödspåse	
2780	9	44 75 968		110,26)	2	Seat cover	Sitspåse	
2790	10	44 62 677		110,26)	2	Head restraint cover	Nackstödspåse	
2800				TRIM COLOUR K32, K37				
2810	1	*46 29 747*		110,228) (4461083) NLS - USE 4799219	2	Seat cover	Sitspåse	
2820	1	47 99 219		110,229,279)	2	Seat cover	Sitspåse	
2830	1	47 60 344		110,280)	2	Seat cover	Sitspåse	
2840	2	*44 61 109*		110,228) NLS – USE 4763090	2	Back cover	Ryggpåse	
2850	2	47 63 090		110,229,279)	2	Back cover	Ryggpåse	
2860	2	47 60 351		110,280)	2	Back cover	Ryggpåse	
2870	3	44 61 117		110)	2	Head restraint cover	Nackstödspåse	
2880	4	*45 34 368*		110,106), LH, 3D NLS – USE 4630976	1	Seat cover	Sitspåse	
2890	4	46 30 976		110,107), LH, 3D	1	Seat cover	Sitspåse	
2900	4	44 61 455		110), LH, 5D	1	Seat cover	Sitspåse	
2910	4	*45 34 350*		110,106), RH, 3D NLS – USE 4630968	1	Seat cover	Sitspåse	
2920	4	46 30 968		110,107), RH, 3D	1	Seat cover	Sitspåse	
2930	4	44 61 448		110), RH, 5D	1	Seat cover	Sitspåse	
2940	4	44 95 891		110), CV	1	Seat cover	Sitspåse	
2950	5	44 61 471		110), LH	1	Back cover	Ryggpåse	
2960	5	44 96 352		110,26), LH	1	Back cover	Ryggpåse	
2970	5	45 07 133		110,26,316), LH, US	1	Back cover	Ryggpåse	
2975	5	49 35 656		110,26,317), LH, US	1	Back cover	Ryggpåse	
2980	5	45 07 315		110,26), LH, CA	1	Back cover	Ryggpåse	
2990	5	44 61 463		110), RH	1	Back cover	Ryggpåse	
3000	5	44 96 345		110,26), RH	1	Back cover	Ryggpåse	
3010	5	45 07 125		110,26,316), RH, US	1	Back cover	Ryggpåse	
3015	5	49 35 649		110,26,317), RH, US	1	Back cover	Ryggpåse	
3020	5	45 07 307		110,26), RH, CA	1	Back cover	Ryggpåse	
3030	5	44 95 909		110), CV	1	Back cover	Ryggpåse	
3040	6	44 61 505		110)	1	Filler piece	Utfyllnad	
3050	7	44 61 497		110)	1	Arm rest cover	Armstödspåse	
3060	8	44 61 489		110)	2	Head restraint cover	Nackstödspåse	
3070	8	44 95 917		110), CV	2	Head restraint cover	Nackstödspåse	
3080	9	44 75 901		110,26)	2	Seat cover	Sitspåse	
3090	10	44 62 644		110,26)	2	Head restraint cover	Nackstödspåse	

26. With integrated child seat Med integrerad barnstol
106. Ch. –R2037450
107. Ch. R2037451–
110. Black Svart
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–
316. Ch. –V2016245
317. Ch. V2016246–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-I18

Door trim
264), front door

Dörrklädsel
264), framdörr

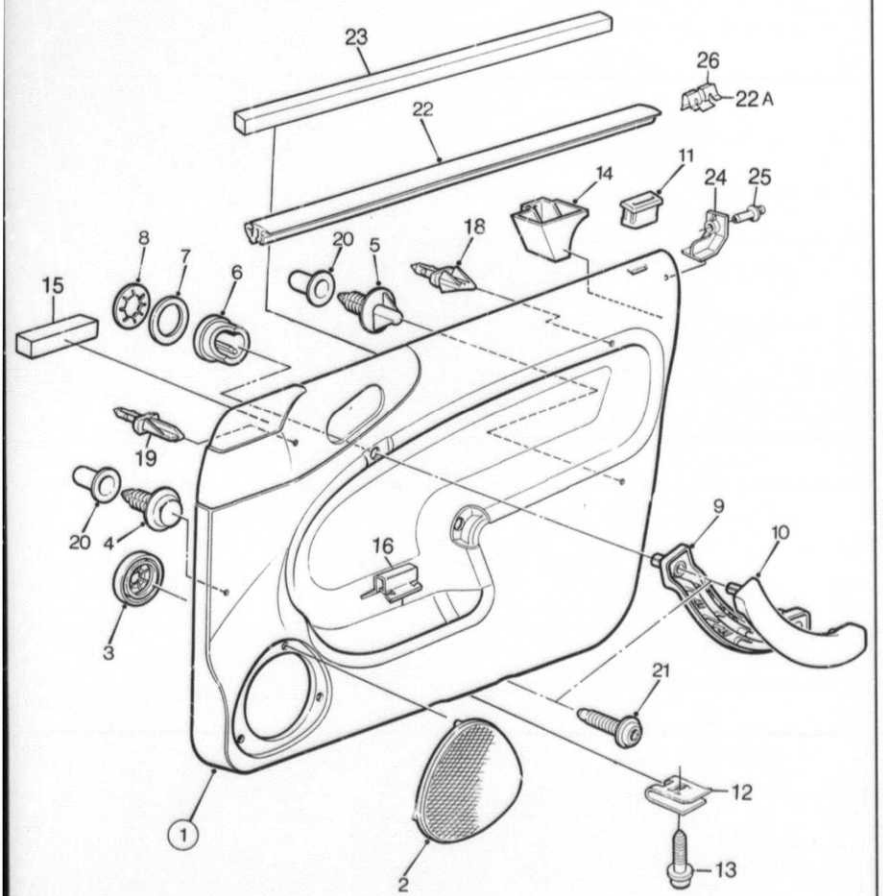

F8603 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR J22,J42,J32 L32				
1	46 04 195		210,174),3D, CV, LH, LHD	1	Door trim	Dörrklädsel	
1	46 04 203		210,174),3D, CV, RH, LHD	1	Door trim	Dörrklädsel	
1	*46 38 060*		210,175),3D, CV, LH, LHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818357				
1	*46 38 078*		210,175),3D, CV, RH, LHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818480				
1	45 11 671		210,174), 5D, LH, LHD	1	Door trim	Dörrklädsel	
1	45 11 689		210,174), 5D, RH, LHD (4214862)	1	Door trim	Dörrklädsel	
1	46 37 948		210,175),-1995,5D,LH,LHD	1	Door trim	Dörrklädsel	
1	46 37 955		210,175),-1995,5D,RH,LHD	1	Door trim	Dörrklädsel	
1	*47 40 601*		210), 1996-, 5D, LH, LHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818290				
1	47 40 619		210), 1996-, 5D, RH, LHD	1	Door trim	Dörrklädsel	
1	46 04 252		210,174),3D, CV, LH, RHD	1	Door trim	Dörrklädsel	
1	46 04 260		210,174),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
1	46 38 086		210,175),3D, CV, LH, RHD	1	Door trim	Dörrklädsel	
1	*46 38 094*		210,175),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818480				
1	45 11 739		210,174), 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	45 11 747		210,174), 5D, RH, RHD	1	Door trim	Dörrklädsel	
1	46 37 963		210,175),-1995,5D,LH,RHD	1	Door trim	Dörrklädsel	
1	46 37 971		210,175),-1995,5D,RH,RHD	1	Door trim	Dörrklädsel	
1	47 40 627		210), 1996-, 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	47 40 635		210), 1996-, 5D, RH, RHD	1	Door trim	Dörrklädsel	
			TRIM COLOUR H22,H42,H32				
1	46 04 179		100,176),3D, CV, LH, LHD	1	Door trim	Dörrklädsel	
1	46 04 187		100,176),3D, CV, RH, LHD	1	Door trim	Dörrklädsel	
1	*46 38 029*		100,177),3D, CV, LH, LHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818332				
1	*46 38 037*		100,177),3D, CV, RH, LHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818464				
1	45 11 655		100,178), 5D, LH, LHD	1	Door trim	Dörrklädsel	
1	45 11 663		100,178), 5D, RH, LHD	1	Door trim	Dörrklädsel	
1	46 37 906		100,179),-1995,5D,LH,LHD	1	Door trim	Dörrklädsel	
1	46 37 914		100,179),-1995,5D,RH,LHD	1	Door trim	Dörrklädsel	
1	47 40 569		100), 1996-, 5D, LH, LHD	1	Door trim	Dörrklädsel	
1	47 40 577		100), 1996-, 5D, RH, LHD	1	Door trim	Dörrklädsel	
1	46 04 237		100,176),3D, CV, LH, RHD	1	Door trim	Dörrklädsel	
1	46 04 245		100,176),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
1	*46 38 045*		100,177),3D, CV, LH, RHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818332				
1	*46 38 052*		100,177),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
			NLS – USE 4818464				
1	45 11 713		100,178), 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	45 11 721		100,178), 5D, RH, RHD	1	Door trim	Dörrklädsel	
1	46 37 922		100,179),-1995,5D,LH,RHD	1	Door trim	Dörrklädsel	
1	46 37 930		100,179),-1995,5D,RH,RHD	1	Door trim	Dörrklädsel	
1	47 40 585		100), 1996-, 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	47 40 593		100), 1996-, 5D, RH, RHD	1	Door trim	Dörrklädsel	

100. Light grey Ljus grå
174. Ch. -S2014742, -S7012858
175. Ch. S2014743-, S7012859-
176. Ch. -S2013428, -S7012799
177. Ch. S2013429-, S7012800-
178. Ch. -S2013514
179. Ch. S2013515-
210. Light beige Ljus beige
264. Ch. -T2033906, -T7007250

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Upholstery


5-120 Door trim

264), front door

Klädsel

Dörrklädsel

264), framdörr

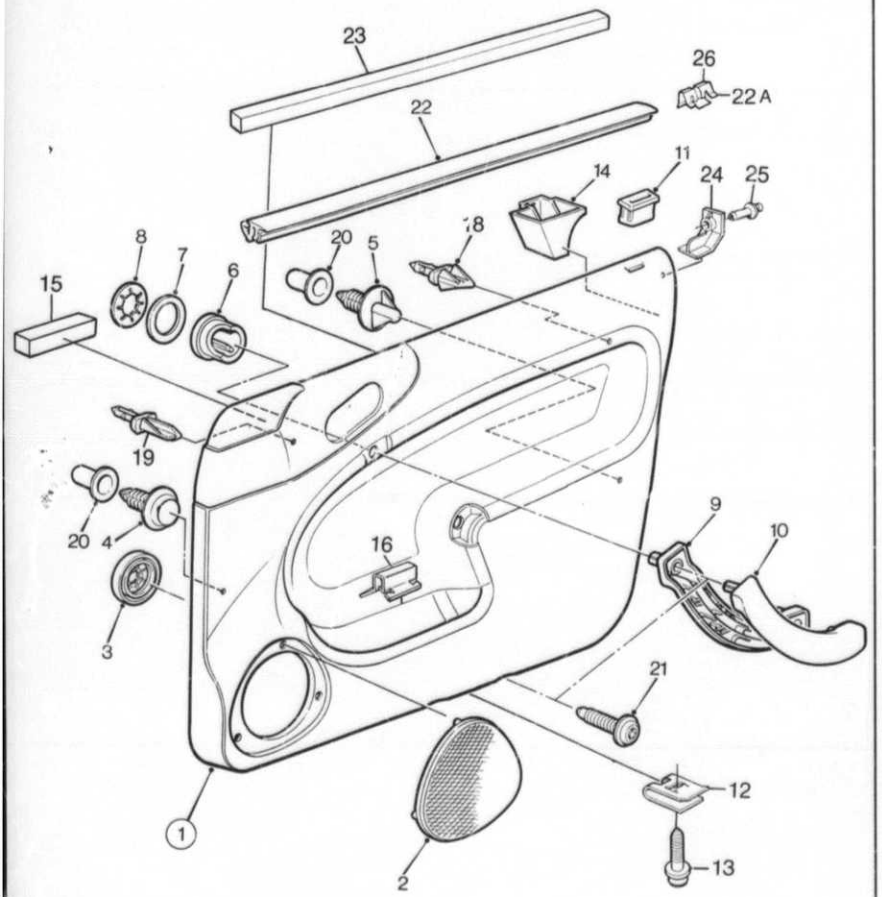

F8603 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR K22,K42,K32				
1	46 04 211		110,172),3D, CV, LH, LHD	1	Door trim	Dörrklädsel	
1	46 04 229		110,172),3D, CV, RH, LHD	1	Door trim	Dörrklädsel	
1	*46 38 102*		110,173),3D, CV, LH, LHD NLS – USE 4818373	1	Door trim	Dörrklädsel	
1	*46 38 110*		110,173),3D, CV, RH, LHD NLS – USE 4818506	1	Door trim	Dörrklädsel	
1	45 11 697		110,172), 5D, LH, LHD	1	Door trim	Dörrklädsel	
1	45 11 705		110,172), 5D, RH, LHD (4471363)	1 1	Door trim	Dörrklädsel	
1	46 37 989		110,173),-1995,5D,LH,LHD	1	Door trim	Dörrklädsel	
1	46 37 997		110,173),-1995,5D,RH,LHD	1	Door trim	Dörrklädsel	
1	47 40 643		110), 1996-, 5D, LH, LHD	1	Door trim	Dörrklädsel	
1	47 40 650		110), 1996-, 5D, RH, LHD	1	Door trim	Dörrklädsel	
1	46 04 278		110,172),3D, CV, LH, RHD	1	Door trim	Dörrklädsel	
1	46 04 286		110,172),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
1	*46 38 128*		110,173),3D, CV, LH, RHD NLS – USE 4818373	1	Door trim	Dörrklädsel	
1	46 38 136		110,173),3D, CV, RH, RHD	1	Door trim	Dörrklädsel	
1	45 11 754		110,172), 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	45 11 762		110,172), 5D, RH, RHD	1	Door trim	Dörrklädsel	
1	46 38 003		110,173),-1995,5D,LH,RHD	1	Door trim	Dörrklädsel	
1	46 38 011		110,173),-1995,5D,RH,RHD	1	Door trim	Dörrklädsel	
1	47 40 668		110), 1996-, 5D, LH, RHD	1	Door trim	Dörrklädsel	
1	47 40 676		110), 1996-, 5D, RH, RHD	1	Door trim	Dörrklädsel	
2	44 72 585		210)	1	.Loudspeaker grille	.Högtalargaller	
2	44 72 577		100)	1	.Loudspeaker grille	.Högtalargaller	
2	44 72 569		110)	1	.Loudspeaker grille	.Högtalargaller	
3	44 73 484			3	.Lock washer	.Spärrbricka	
4	95 45 898		-1995	X	.Upholstery clip	.Klädselfäste	5
4	47 05 331		1996-	X	.Clamp	.Klämma	
5	44 98 341			X	.Clamp	.Klämma	
6	42 17 188			1	.Spacer	.Distans	
7	*96 71 389*		NLS – USE 9891391	1	.Washer	.Bricka	5
8	97 97 200			2	.Washer	.Bricka	5
9	44 72 619		210), LH	1	.Door pull	.Stängningshandtag	
9	44 72 643		210), RH	1	.Door pull	.Stängningshandtag	
9	44 72 601		100), LH	1	.Door pull	.Stängningshandtag	
9	44 72 635		100), RH	1	.Door pull	.Stängningshandtag	
9	44 72 593		110), LH	1	.Door pull	.Stängningshandtag	
9	44 72 627		110), RH	1	.Door pull	.Stängningshandtag	
10	44 21 723		210), LH	1	.Cover	.Täcklock	
10	44 21 731		210), RH	1	.Cover	.Täcklock	
10	44 21 707		100), LH	1	.Cover	.Täcklock	
10	44 21 715		100), RH	1	.Cover	.Täcklock	
10	44 21 764		110), LH	1	.Cover	.Täcklock	
10	44 21 772		110), RH	1	.Cover	.Täcklock	
11	42 69 957			1	.Bushing	.Bussning	4
12	79 75 071			1	.Clip nut	.Klämmutter	5
13	79 73 001			1	.Screw	.Skruv	5
14	45 09 733		-1995, 5D, LH	1	.Clip holder	.Klämhållare	
14	45 09 741		-1995, 5D, RH	1	.Clip holder	.Klämhållare	
15	45 11 036			1	.Sealing strip	.Tätningslist	
16	86 60 435			5	.Clip	.Clips	5
18	45 11 648			2	Locating pin	Styrpinne	
19	44 98 333			2	Locating pin	Styrpinne	


100. Light grey Ljus grå
110. Black Svart
172. Ch. -S2017081, -S7012860
173. Ch. S2017082-, S7012861-
210. Light beige Ljus beige
264. Ch. -T2033906, -T7007250

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

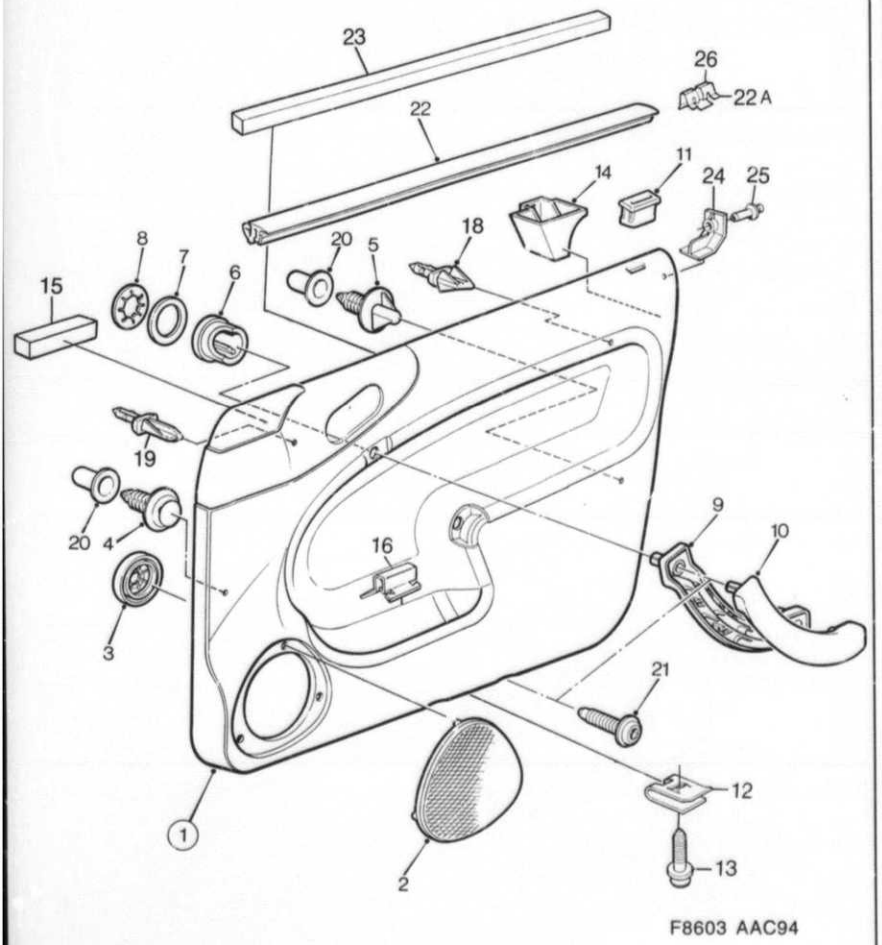

F8603 AAC94

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
20	95 45 906			X	Sleeve	Hylsa	5
21	79 78 422		3D, CV	12	Screw	Skruv	5
21	79 78 422		5D	8	Screw	Skruv	5
22	46 03 536		131), 3D, LH	1	Sealing strip	Tätningslist	
22	46 03 544		131), 3D, RH	1	Sealing strip	Tätningslist	
22	46 36 155		132), 3D, LH	1	Sealing strip	Tätningslist	6
22	46 36 163		132), 3D, RH	1	Sealing strip	Tätningslist	6
22	*46 03 577*		138), CV, LH NLS – USE 4683140	1	Sealing strip	Tätningslist	
22	*46 03 585*		138), CV, RH NLS – USE 4683157	1	Sealing strip	Tätningslist	
22	*46 36 171*		139,181), CV, LH NLS – USE 4683140	1	Sealing strip	Tätningslist	
22	*46 36 189*		139,181), CV, RH NLS – USE 4683157	1	Sealing strip	Tätningslist	
22	46 83 140		182), CV, LH	1	Sealing strip	Tätningslist	
22	46 83 157		182), CV, RH	1	Sealing strip	Tätningslist	
22	*46 03 510*		131), 5D, ! H (4470993) NLS – US.. 4636114	1	Sealing strip	Tätningslist	
22	*46 03 528*		131), 5D, RH (4471009) NLS – USE 4636122	1	Sealing strip	Tätningslist	
22	46 36 114		132), 5D, LH	1	Sealing strip	Tätningslist	
22	46 36 122		132), 5D, RH	1	Sealing strip	Tätningslist	
22A	73 81 015		132)	2	.Clamp	.Klammer	
23	45 12 422		3D, CV	2	Spacer	Distans	
23	45 12 414		5D	2	Spacer	Distans	
24	45 12 364		-1995, 3D, CV	2	Retainer	Hållare	
24	47 05 349		1996-	2	Retainer	Hållare	
25	46 05 481		210), 3D, CV	2	Expanding rivet	Expandernit	
25	46 05 481		210), 1996-, 5D	2	Expanding rivet	Expandernit	
25	46 05 473		100), 3D, CV	2	Expanding rivet	Expandernit	
25	46 05 473		100), 1996-, 5D	2	Expanding rivet	Expandernit	
25	46 05 499		110), 3D, CV	2	Expanding rivet	Expandernit	
25	46 05 499		110), 1996-, 5D	2	Expanding rivet	Expandernit	
26	73 81 015		131)	2	Clamp	Klammer	


100. Light grey Ljus grå
110. Black Svart
131. Ch. -S2002044
132. Ch. S2002045-
138. Ch. -S7012236
139. Ch. S7012237-
181. Ch. -S7016981
182. Ch. S7016982-
210. Light beige Ljus beige
264. Ch. -T2033906, -T7007250

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

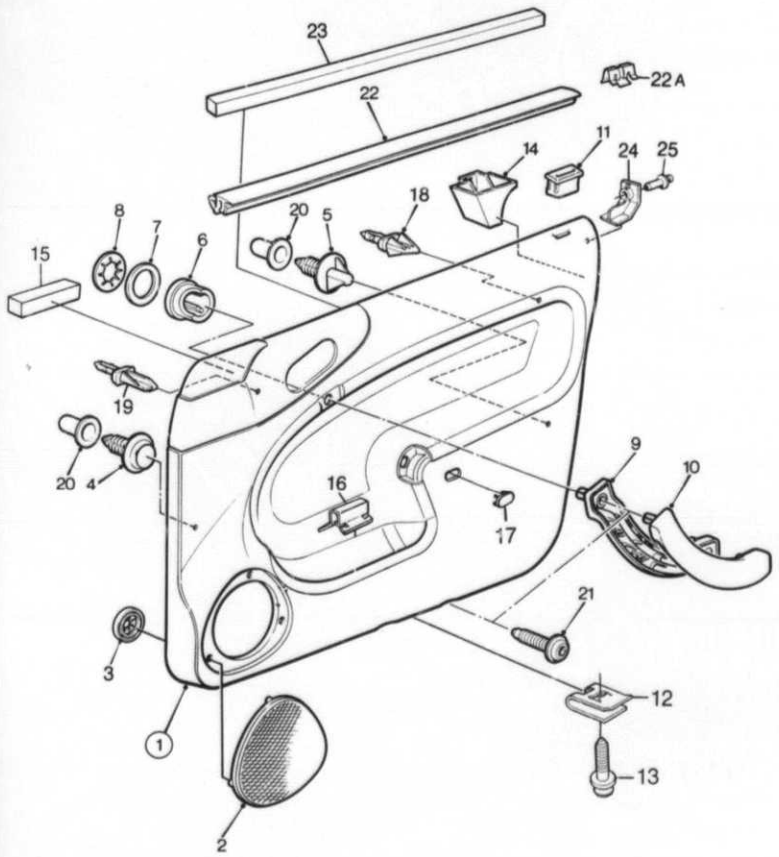

F8604 AAC94

Upholstery

5 -I24

Door trim
265), front door

Klädsel

Dörrklädsel
265), framdörr

1329	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	benämning	S L
0010				TRIM COLOUR J22, J42				
0015				J52, L32				
0020	1	48 18 357		210), 3D, CV, LH	1	Door trim	Dörrklädsel	
0030	1	48 18 480		210), 3D, CV, RH	1	Door trim	Dörrklädsel	
0040	1	48 18 290		210), -1997, 5D, LH	1	Door trim	Dörrklädsel	
0050	1	48 18 423		210), -1997, 5D, RH	1	Door trim	Dörrklädsel	
0053	1	50 00 138		210), 1998-, 5D, LH	1	Door trim	Dörrklädsel	
0056	1	50 00 146		210), 1998-, 5D, RH	1	Door trim	Dörrklädsel	
0060				TRIM COLOUR H22, H42,				
0065				H52, H32				
0070	1	48 18 332		100), 3D, CV, LH	1	Door trim	Dörrklädsel	
0080	1	48 18 464		100), 3D, CV, RH	1	Door trim	Dörrklädsel	
0090	1	*48 18 274*		100), -1997, 5D, LH NLS - USE 5000112	1	Door trim	Dörrklädsel	
0090								
0100	1	48 18 407		100), -1997, 5D, RH	1	Door trim	Dörrklädsel	
0103	1	50 00 112		100), 1998-, 5D, LH	1	Door trim	Dörrklädsel	
0106	1	50 00 120		100), 1998-, 5D, RH	1	Door trim	Dörrklädsel	
0110				TRIM COLOUR K22, K42,				
0115				K52, K32				
0120	1	48 18 373		110), 3D, CV, LH	1	Door trim	Dörrklädsel	
0130	1	48 18 506		110), 3D, CV, RH	1	Door trim	Dörrklädsel	
0140	1	48 18 316		110), -1997, 5D, LH	1	Door trim	Dörrklädsel	
0150	1	48 18 449		110), -1997, 5D, RH	1	Door trim	Dörrklädsel	
0153	1	50 00 088		110), 1998-, 5D, LH	1	Door trim	Dörrklädsel	
0156	1	50 00 096		110), 1998-, 5D, RH	1	Door trim	Dörrklädsel	
0160				TRIM COLOUR K37				
0170	1	48 85 059		110), 1997-, 3D, CV, LH	1	Door trim	Dörrklädsel	
0180	1	48 85 067		110), 1997-, 3D, CV, RH	1	Door trim	Dörrklädsel	
0190	1	48 85 034		110), 1997, 5D, LH	1	Door trim	Dörrklädsel	
0200	1	48 85 042		110), 1997, 5D, RH	1	Door trim	Dörrklädsel	
0203	1	50 00 435		110), 1998-, 5D, LH	1	Door trim	Dörrklädsel	
0206	1	50 00 443		110), 1998-, 5D, RH	1	Door trim	Dörrklädsel	
0210				TRIM COLOUR M37				
0220	1	48 84 938		110), 1997-, 3D, CV, LH	1	Door trim	Dörrklädsel	
0230	1	48 84 946		110), 1997-, 3D, CV, RH	1	Door trim	Dörrklädsel	
0240	1	48 84 912		110), 1997, 5D, LH	1	Door trim	Dörrklädsel	
0250	1	48 84 920		110), 1997, 5D, RH	1	Door trim	Dörrklädsel	
0253	1	50 00 419		110), 1998-, 5D, LH	1	Door trim	Dörrklädsel	
0256	1	50 00 427		110), 1998-, 5D, RH	1	Door trim	Dörrklädsel	
0260								
0270	2	44 72 585		210)	1	.Loudspeaker grille	.Högtalargaller	
0280	2	44 72 577		100)	1	.Loudspeaker grille	.Högtalargaller	
0290	2	44 72 569		110)	1	.Loudspeaker grille	.Högtalargaller	
0300	3	44 73 484			3	.Lock washer	.Spärrbricka	
0310	4	47 05 331			X	.Clamp	.Klämma	
0320	5	44 98 341			X	.Clamp	.Klämma	
0330	6	42 17 188			1	.Spacer	.Distans	
0340	7	*96 71 389*		NLS - USE 9891391	1	.Washer	.Bricka	5
0350	8	97 97 200			2	.Washer	.Bricka	5
0360	9	44 72 619		210), LH	1	.Door pull	.Stängningshandtag	
0370	9	44 72 643		210), RH	1	.Door pull	.Stängningshandtag	
0380	9	44 72 601		100), LH	1	.Door pull	.Stängningshandtag	
0390	9	44 72 635		100), RH	1	.Door pull	.Stängningshandtag	
0400	9	44 72 593		110), LH	1	.Door pull	.Stängningshandtag	
0410	9	44 72 627		110), RH	1	.Door pull	.Stängningshandtag	
0420	10	44 21 723		210), LH	1	.Cover	.Täcklock	
0430	10	44 21 731		210), RH	1	.Cover	.Täcklock	
0440	10	44 21 707		100), LH	1	.Cover	.Täcklock	
0450	10	44 21 715		100), RH	1	.Cover	.Täcklock	

100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
265. Ch. -T2033907-, T7007251-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Upholstery


5 -J02 Door trim

265), front door

Klädsel

Dörrklädsel

265), framdörr

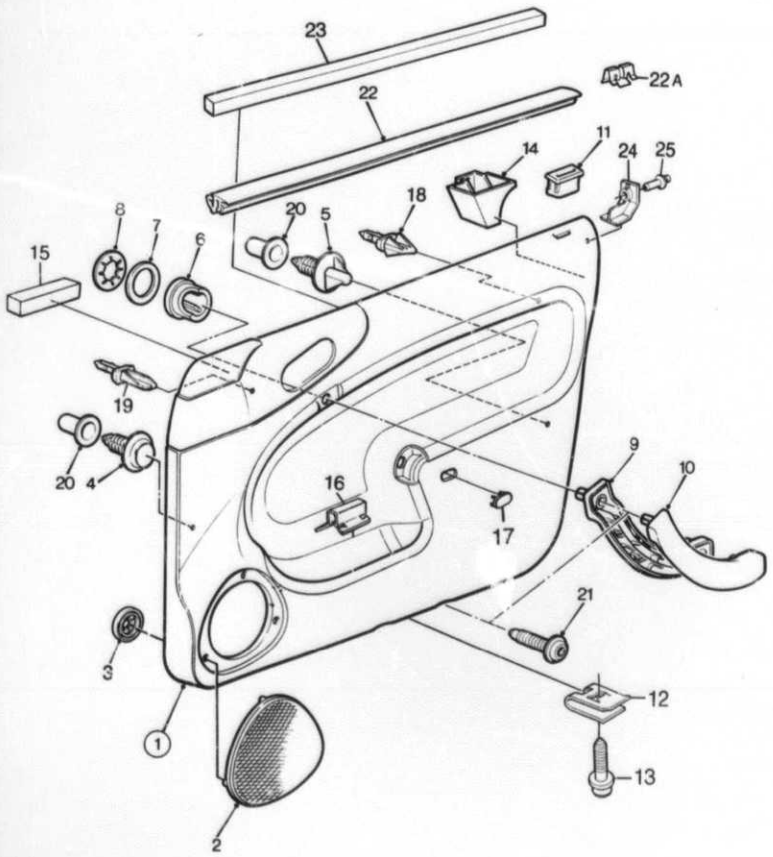

F8604 AAC94

1329	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460	10	44 21 764		110), LH	1	.Cover	.Täcklock	
0470	10	44 21 772		110), RH	1	.Cover	.Täcklock	
0480	11	42 69 957			1	.Bushing	.Bussning	4
0485	12	79 75 071			1	.Clip nut	.Klämmutter	5
0490	13	79 73 001			1	.Screw	.Skruv	5
0500	15	45 11 036			1	.Sealing strip	.Tätningslist	
0510	16	85 60 435			5	.Clip	.Clips	5
0520	17	45 12 984		210)	1	.Cover	.Täcklock	
0530	17	45 12 976		100)	1	.Cover	.Täcklock	
0540	17	45 12 968		110)	1	.Cover	.Täcklock	
0550	18	45 11 648			2	Locating pin	Styrpinne	
0560	19	44 98 333			2	Locating pin	Styrpinne	
0570	20	95 45 906			X	Sleeve	Hylsa	5
0580	21	79 78 422		3D, CV	12	Screw	Skruv	5
0590	21	79 78 422		5D	8	Screw	Skruv	5
0600	22	46 36 155		3D, LH	1	Sealing strip	Tätningslist	6
0610	22	46 36 163		3D, RH	1	Sealing strip	Tätningslist	6
0620	22	46 83 140		CV, LH	1	Sealing strip	Tätningslist	
0630	22	46 83 157		CV, RH	1	Sealing strip	Tätningslist	
0640	22	46 36 114		5D, LH	1	Sealing strip	Tätningslist	
0650	22	46 36 122		5D, RH	1	Sealing strip	Tätningslist	
0660	22A	73 81 015			2	.Clamp	.Klammer	
0670	23	45 12 422		3D, CV	2	Spacer	Distans	
0680	23	45 12 414		5D	2	Spacer	Distans	
0690	24	47 05 349			2	Retainer	Hållare	
0700	25	46 05 481		210)	2	Expanding rivet	Expandernit	
0710	25	46 05 473		100)	2	Expanding rivet	Expandernit	
0720	25	46 05 499		110)	2	Expanding rivet	Expandernit	

100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
265. Ch. -T2033907-, T7007251-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-J04

Side trim
3D, CV

Sidklädsel
3D, CV

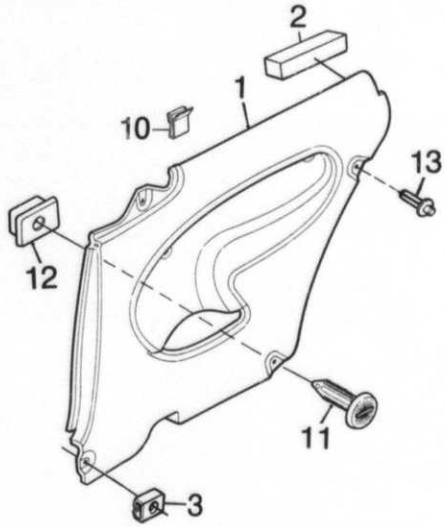

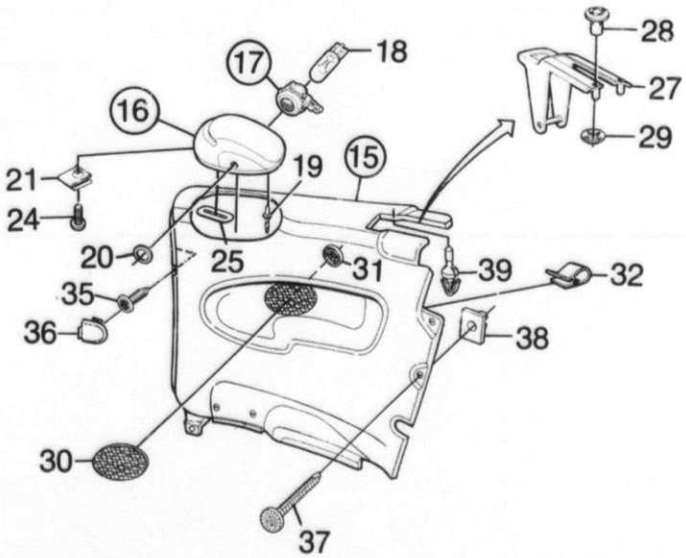

F8605 AAC94

1330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J22, J42 J52, J32, L32				
0020								
0030	1	43 76 216		210,174), 3D, LH	1	Side lining	Sidklädsel	5
0040	1	43 76 224		210,174), 3D, RH	1	Side lining	Sidklädsel	5
0050	1	46 38 342		210,175),-1995, 3D, LH	1	Side lining	Sidklädsel	5
0060	1	46 38 359		210,175),-1995, 3D, RH	1	Side lining	Sidklädsel	5
0070	1	47 00 639		210), 1996, 3D, LH	1	Side lining	Sidklädsel	5
0080	1	47 00 647		210), 1996, 3D, RH	1	Side lining	Sidklädsel	5
0090	1	48 18 654		210), 1997-, 3D, LH	1	Side lining	Sidklädsel	5
0100	1	48 18 662		210), 1997-, 3D, RH	1	Side lining	Sidklädsel	5
0110				TRIM COLOUR H22, H42 H52, H32				
0115								
0120	1	43 76 190		100,176), 3D, LH	1	Side lining	Sidklädsel	5
0130	1	43 76 208		100,176), 3D, RH	1	Side lining	Sidklädsel	5
0140	1	46 38 326		100,177),-1995, 3D, LH	1	Side lining	Sidklädsel	5
0150	1	46 38 334		100,177),-1995, 3D, RH	1	Side lining	Sidklädsel	5
0160	1	47 00 654		100), 1996, 3D, LH	1	Side lining	Sidklädsel	5
0170	1	47 00 662		100), 1996, 3D, RH	1	Side lining	Sidklädsel	5
0180	1	48 18 639		100), 1997-, 3D, LH	1	Side lining	Sidklädsel	5
0190	1	48 18 647		100), 1997-, 3D, RH	1	Side lining	Sidklädsel	5
0200				TRIM COLOUR K22, K42, K52, K32				
0205								
0210	1	43 76 232		110,172), 3D, LH	1	Side lining	Sidklädsel	5
0220	1	43 76 240		110,172), 3D, RH	1	Side lining	Sidklädsel	5
0230	1	46 38 367		110,173),-1995, 3D, LH	1	Side lining	Sidklädsel	5
0240	1	46 38 375		110,173),-1995, 3D, RH	1	Side lining	Sidklädsel	5
0250	1	47 00 670		110), 1996, 3D, LH	1	Side lining	Sidklädsel	5
0260	1	47 00 688		110), 1996, 3D, RH	1	Side lining	Sidklädsel	5
0270	1	48 18 670		110), 1997-, 3D, LH	1	Side lining	Sidklädsel	5
0280	1	48 18 688		110), 1997-, 3D, RH	1	Side lining	Sidklädsel	5
0290				TRIM COLOUR K37				
0300	1	48 85 117		110), 1997-, 3D, LH	1	Side lining	Sidklädsel	5
0310	1	48 85 125		110), 1997-, 3D, RH	1	Side lining	Sidklädsel	5
0320				TRIM COLOUR M37				
0330	1	48 84 995		110), 1997-, 3D, LH	1	Side lining	Sidklädsel	5
0340	1	48 85 000		110), 1997-, 3D, RH	1	Side lining	Sidklädsel	5
0350								
0360	2	46 08 741		3D	1	.Sealing strip	.Tätningslist	
0370	3	43 33 704		3D	1	.Expanding nut	.Expandermutter	3
0380	10	44 70 621		3D	6	Clip	Clips	
0390	11	94 91 689		-1995, 3D	8	Special screw	Snabbskruv	5
0400	12	84 52 898		-1995, 3D	8	Quick nut	Snabbmutter	3
0410	13	44 70 639		1996-, 3D	8	Expanding rivet	Expandernit	3


100. Light grey Ljus grå
110. Black Svart
172. Ch. -S2017081, -S7012860
173. Ch. S2017082-, S7012861-
174. Ch. -S2014742, -S7012858
175. Ch. S2014743-, S7012859-
176. Ch. -S2013428, -S7012799
177. Ch. S2013429-, S7012800-
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

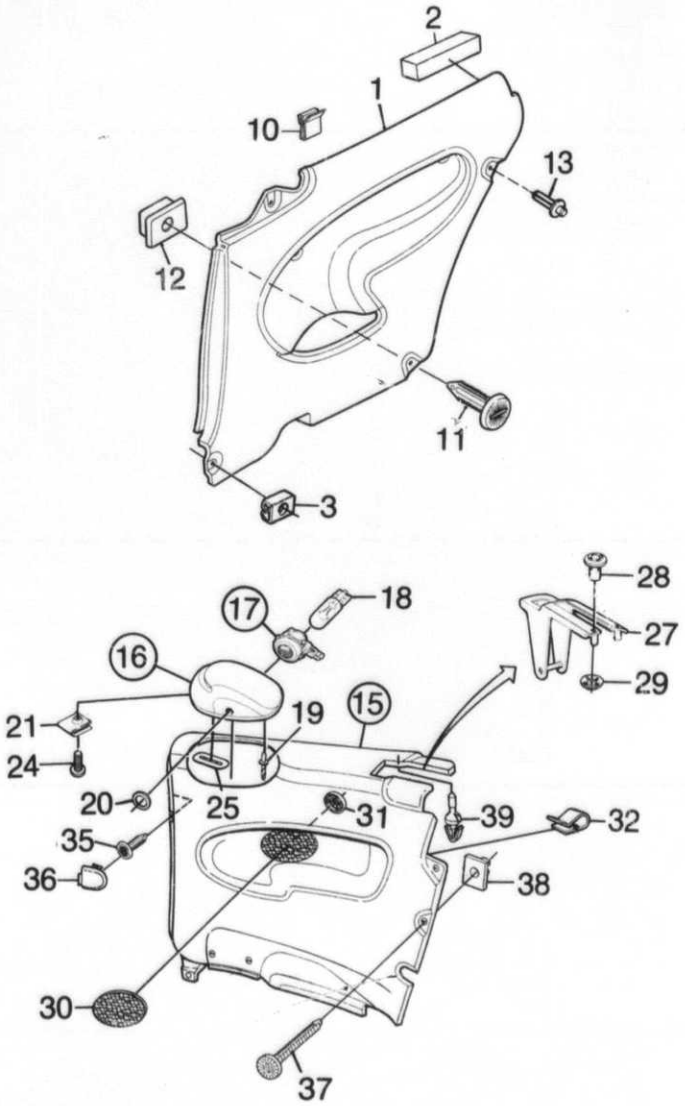

F8605 AAC94

Upholstery
5-J06
Side trim
3D, CV

Klädsel
Sidklädsel
3D, CV

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR J22, J42, J52, J32, L32				
15	44 22 119		210,170), CV, LH	1	Side lining	Sidklädsel	5
15	44 22 127		210,170), CV, RH	1	Side lining	Sidklädsel	5
15	*46 38 409*		210,171), -1996, CV, LH NLS – USE 4900262	1	Side lining	Sidklädsel	5
15	46 38 417		210,171), -1996, CV, RH	1	Side lining	Sidklädsel	5
15	*48 18 712*		210,1997-,325), CV, LH NLS – USE 4900262	1	Side lining	Sidklädsel	5
15	*48 18 720*		210,1997-,325), CV, RH NLS – USE 4900270	1	Side lining	Sidklädsel	5
15	49 00 262		210,326), CV, LH	1	Side lining	Sidklädsel	5
15	49 00 270		210,326), CV, RH	1	Side lining	Sidklädsel	5
			TRIM COLOUR H22, H42, H52, H32				
15	44 22 093		100,142), CV, LH	1	Side lining	Sidklädsel	5
15	44 22 101		100,142), CV, RH	1	Side lining	Sidklädsel	5
15	*46 38 383*		100,143), -1996, CV, LH NLS – USE 4900247	1	Side lining	Sidklädsel	5
15	*46 38 391*		100,143), -1996, CV, RH NLS – USE 4900254	1	Side lining	Sidklädsel	5
15	*48 18 696*		100,1997-,325), CV, LH NLS – USE 4900247	1	Side lining	Sidklädsel	5
15	*48 18 704*		100,1997-,325), CV, RH NLS – USE 4900254	1	Side lining	Sidklädsel	5
15	49 00 247		100,326), CV, LH	1	Side lining	Sidklädsel	5
15	49 00 254		100,326), CV, RH	1	Side lining	Sidklädsel	5
			TRIM COLOUR K22, K42, K52, K32				
15	44 22 135		110,168), CV, LH	1	Side lining	Sidklädsel	5
15	44 22 143		110,168), CV, RH	1	Side lining	Sidklädsel	5
15	*46 38 425*		110,169), -1996, CV, LH NLS – USE 4900288	1	Side lining	Sidklädsel	5
15	*46 38 433*		110,169), -1996, CV, RH NLS – USE 4900296	1	Side lining	Sidklädsel	5
15	*48 18 738*		110,1997-,325), CV, LH NLS – USE 4900288	1	Side lining	Sidklädsel	5
15	*48 18 746*		110,1997-,325), CV, RH NLS – USE 4900296	1	Side lining	Sidklädsel	5
15	49 00 288		110,326), CV, LH	1	Side lining	Sidklädsel	5
15	49 00 296		110,326), CV, RH	1	Side lining	Sidklädsel	5
			TRIM COLOUR K37				
15	48 85 133		110), 1997-, CV, LH	1	Side lining	Sidklädsel	5
15	48 85 141		110), 1997-, CV, RH	1	Side lining	Sidklädsel	5
			TRIM COLOUR M37				
15	48 85 018		110), 1997-, CV, LH	1	Side lining	Sidklädsel	5
15	48 85 026		110), 1997-, CV, RH	1	Side lining	Sidklädsel	5
16	45 10 343		210), LH, CV	1	.Cover	.Kåpa	
16	45 10 350		210), RH, CV	1	.Cover	.Kåpa	


100. Light grey Ljus grå
110. Black Svart
142. Ch. -S7012799
143. Ch. S7012800-
168. Ch. -S7012860
169. Ch. S7012861-
170. Ch. -S7012858
171. Ch. S7012859-
199. Ch. -S2042854
210. Light beige Ljus beige
325. Ch. -V7004296
326. Ch. V7004297-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

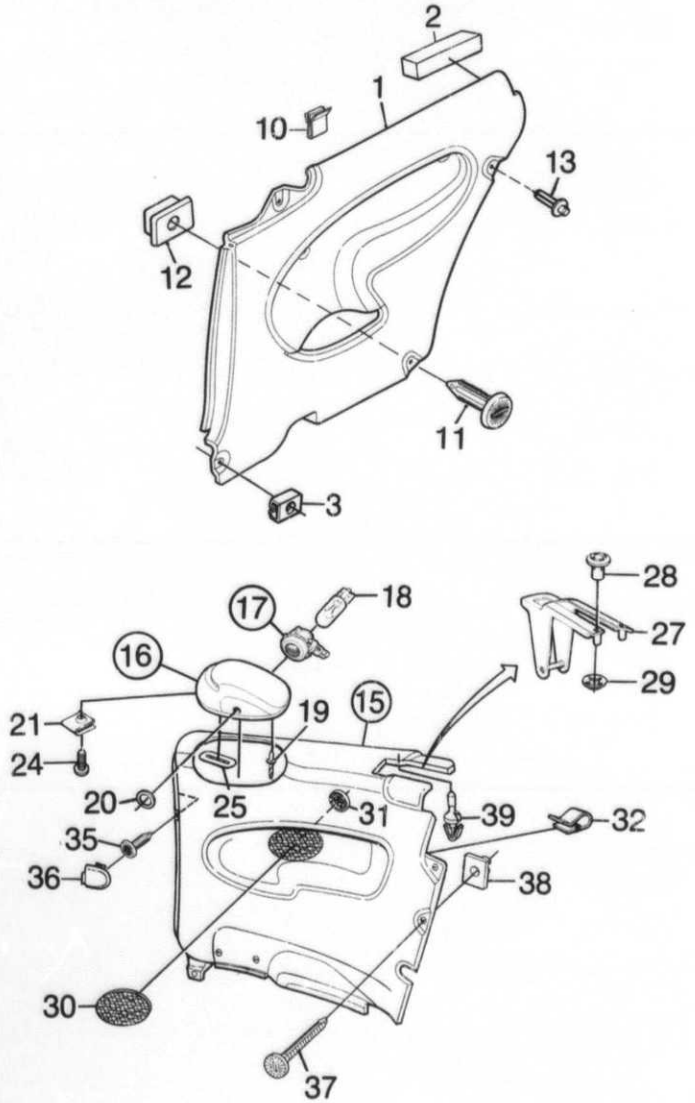

F8605 AAC94

Upholstery

5-J08

Side trim

3D, CV

Klädsel

Sidklädsel

3D, CV

1330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0730	16	45 10 327		100), LH, CV	1	.Cover	.Kåpa	
0740	16	45 10 335		100), RH, CV	1	.Cover	.Kåpa	
0750	16	45 10 368		110), LH, CV	1	.Cover	.Kåpa	
0760	16	45 10 376		110), RH, CV	1	.Cover	.Kåpa	
0770	17	44 07 169		CV	1	..Interior lighting	..Innerbelysning	
0780	18	95 12 880		CV	1	...Bulb	...Glödlampa	1
0790	19	44 98 333		CV	1	..Locating pin	..Styrpinne	
0800	20	45 10 392		210), CV	1	..Frame	..Ram	
0810	20	45 10 384		100), CV	1	..Frame	..Ram	
0820	20	45 10 400		110), CV	1	..Frame	..Ram	
0830	21	79 75 071		CV	1	..Clip nut	..Klämmutter	5
0840	24	*79 72 953*		CV NLS – USE 7922370, 8029944	1	.Screw	.Skruv	5
0850	25	46 36 296		CV	4	.Clamp	.Klämma	
0880	27	44 99 505		210,325), LH, CV	1	.Hatch	.Lucka	
0890	27	44 99 513		210,325), RH, CV	1	.Hatch	.Lucka	
0893	27	48 82 882		210,326), LH, CV	1	.Hatch	.Lucka	
0896	27	48 82 890		210,326), RH, CV	1	.Hatch	.Lucka	
0900	27	*44 99 489*		100,325), LH, CV NLS – USE 4882866	1	.Hatch	.Lucka	
0910	27	44 99 497		100,325), RH, CV	1	.Hatch	.Lucka	
0913	27	48 82 866		100,326), LH, CV	1	.Hatch	.Lucka	
0916	27	48 82 874		100,326), RH, CV	1	.Hatch	.Lucka	
0920	27	44 99 521		110,325), LH, CV	1	.Hatch	.Lucka	
0930	27	*44 99 539*		110,325), RH, CV NLS – USE 4882916	1	.Hatch	.Lucka	
0933	27	48 82 908		110,326), LH, CV	1	.Hatch	.Lucka	
0936	27	48 82 916		110,326), RH, CV	1	.Hatch	.Lucka	
0940	28	46 42 344		210), CV	2	.Rivet	.Nit	
0950	28	46 42 336		100), CV	2	.Rivet	.Nit	
0960	28	46 42 351		110), CV	2	.Rivet	.Nit	
0970	29	44 73 484		CV	2	.Lock washer	.Spårbricka	
0980	30	44 99 679		210), CV	1	.Loudspeaker grille	.Högtalargaller	
0990	30	44 99 661		100), CV	1	.Loudspeaker grille	.Högtalargaller	
1000	30	44 99 687		110), CV	1	.Loudspeaker grille	.Högtalargaller	
1010	31	44 73 484		CV	4	.Lock washer	.Spårbricka	
1020	32	95 78 964		CV	1	.Clamp	.Klammer	5
1030								
1040	35	79 78 422		CV	4	Screw	Skruv	5
1050	36	45 11 093		210), CV	2	Cover	Täcklock	
1060	36	45 11 085		100), CV	2	Cover	Täcklock	
1070	36	45 11 101		110), CV	2	Cover	Täcklock	
1080	37	94 91 689		CV	6	Special screw	Snabbskruv	5
1090	38	84 52 898		CV	8	Quick nut	Snabbmutter	3
1100	39	*46 36 726*		10), CV NLS – USE 4684528	2	Locating pin	Styrpinne	
1100								
1110	39	46 84 528		11), CV	2	Locating pin	Styrpinne	


10. CV, ch. -S7009999
11. CV, ch. S7010000-
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
325. Ch. -V7004296
326. Ch. V7004297-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

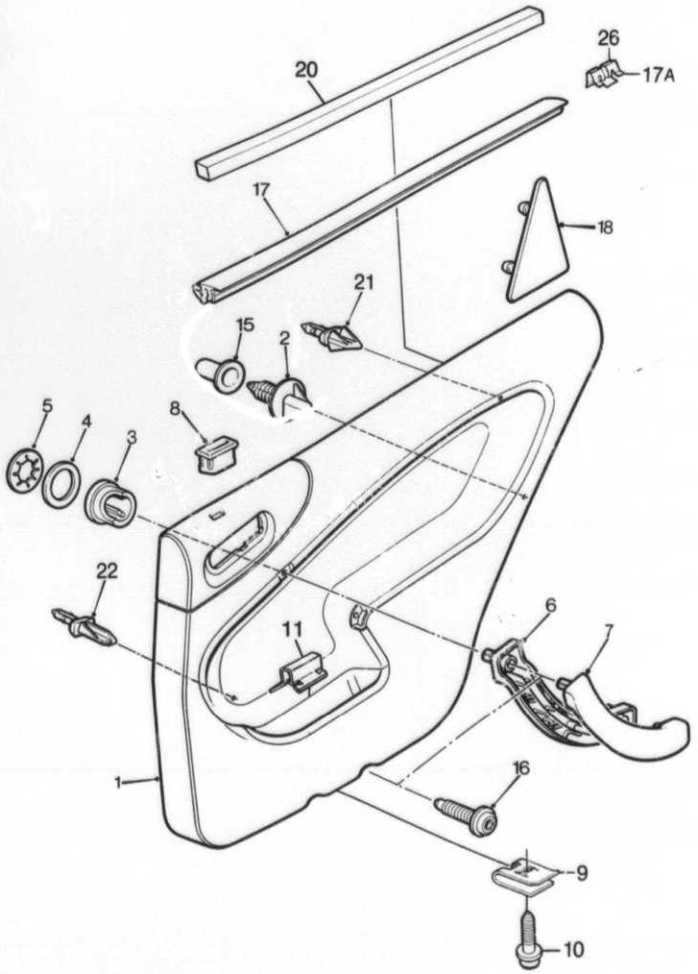

F8606 AAC94

Upholstery
5-J10
Door trim
Rear door

Klädsel
Dörrklädsel
Bakdörr

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J22, J42, J52, J32, L32				
0020								
0030	1	*42 15 091*		210,55), LH NLS – USE 4511796	1	Door trim	Dörrklädsel	
0040	1	*42 15 083*		210,55), RH NLS – USE 4511804	1	Door trim	Dörrklädsel	
0050	1	45 11 796		210,56,174), LH	1	Door trim	Dörrklädsel	
0060	1	45 11 804		210,56,174), RH	1	Door trim	Dörrklädsel	
0070	1	*46 38 284*		210,175), -1996, LH NLS - USE 4818530	1	Door trim	Dörrklädsel	
0080	1	*46 38 292*		210,175), -1996, RH NLS - USE 4818548	1	Door trim	Dörrklädsel	
0090	1	48 18 530		210), 1997-, LH	1	Door trim	Dörrklädsel	
0100	1	48 18 548		210), 1997-, RH	1	Door trim	Dörrklädsel	
0110				TRIM COLOUR H22, H42, H52, H32				
0115								
0120	1	*42 15 075*		100,55), LH NLS – USE 4511770	1	Door trim	Dörrklädsel	
0130	1	*42 15 067*		100,55), RH NLS – USE 4511788	1	Door trim	Dörrklädsel	
0140	1	45 11 770		100,56,178), LH	1	Door trim	Dörrklädsel	
0150	1	45 11 788		100,56,178), RH	1	Door trim	Dörrklädsel	
0160	1	*46 38 268*		100,179), -1996, LH NLS - USE 4818514	1	Door trim	Dörrklädsel	
0170	1	*46 38 276*		100,179), -1996, RH NLS - USE 4818522	1	Door trim	Dörrklädsel	
0180	1	48 18 514		100), 1997-, LH	1	Door trim	Dörrklädsel	
0190	1	48 18 522		100), 1997-, RH	1	Door trim	Dörrklädsel	
0200				TRIM COLOUR K22, K42, K52, K32				
0205								
0210	1	*44 71 397*		110,55), LH NLS – USE 4511812	1	Door trim	Dörrklädsel	
0220	1	*44 71 405*		110,55), RH NLS – USE 4511820	1	Door trim	Dörrklädsel	
0230	1	45 11 812		110,56,172), LH	1	Door trim	Dörrklädsel	
0240	1	45 11 820		110,56,172), RH	1	Door trim	Dörrklädsel	
0250	1	*46 38 300*		110,173), -1996, LH NLS - USE 4818555	1	Door trim	Dörrklädsel	
0260	1	*46 38 318*		110,173), -1996, RH NLS - USE 4818563	1	Door trim	Dörrklädsel	
0270	1	48 18 555		110), 1997-, LH	1	Door trim	Dörrklädsel	
0280	1	48 18 563		110), 1997-, RH	1	Door trim	Dörrklädsel	
0290				TRIM COLOUR K37				
0300	1	48 85 091		110), 1997-, LH	1	Door trim	Dörrklädsel	
0310	1	48 85 109		110), 1997-, RH	1	Door trim	Dörrklädsel	
0320				TRIM COLOUR M37				
0330	1	48 84 979		110), 1997-, LH	1	Door trim	Dörrklädsel	
0340	1	48 84 987		110), 1997-, RH	1	Door trim	Dörrklädsel	
0350								
0360	2	44 98 341			4	.Clamp	.Klämma	
0370	3	42 17 188			1	.Spacer	.Distans	
0380	4	*96 71 389*		NLS – USE 9891391	1	.Washer	.Bricka	5

55. Ch. -R2003814
56. Ch. R2003815-
100. Light grey Ljus grå
110. Black Svart
172. Ch. -S2017081, -S7012860
173. Ch. S2017082-, S7012861-
174. Ch. -S2014742, -S7012858
175. Ch. S2014743-, S7012859-
178. Ch. -S2013514
179. Ch. S2013515-
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Upholstery

5-J12 Door trim Rear door

Klädsel

Dörrklädsel Bakdörr

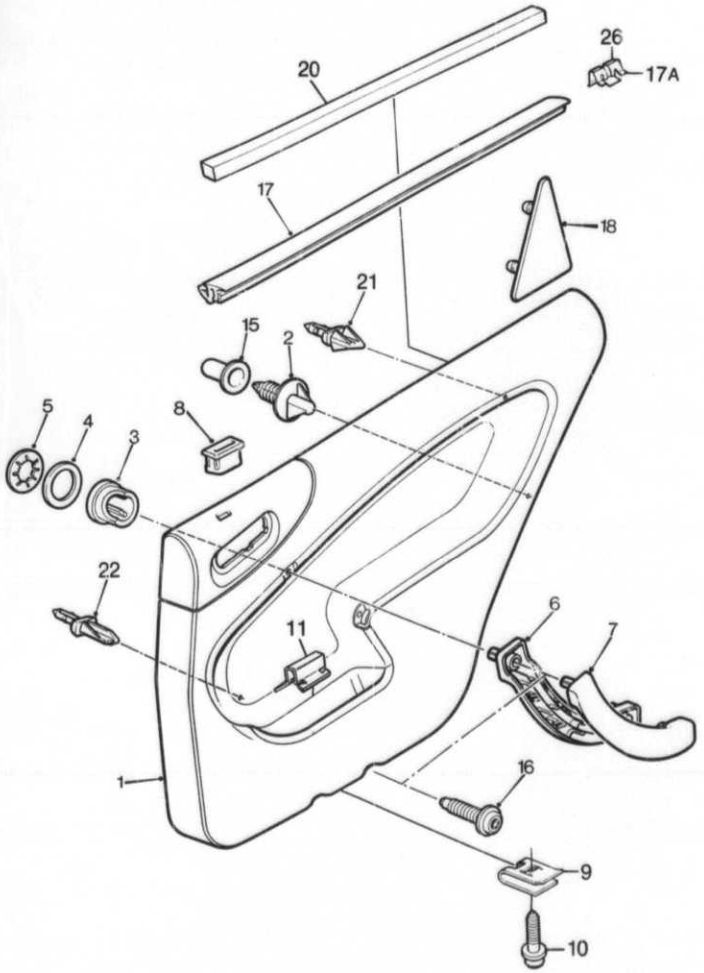

F8606 AAC94

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	5	97 97 200			2	.Washer	.Bricka	5
0400	6	44 73 096		210), LH	1	.Door pull	.Stängningshandtag	
0410	6	44 73 120		210), RH	1	.Door pull	.Stängningshandtag	
0420	6	44 73 088		100), LH	1	.Door pull	.Stängningshandtag	
0430	6	44 73 112		100), RH	1	.Door pull	.Stängningshandtag	
0440	6	44 73 070		110), LH	1	.Door pull	.Stängningshandtag	
0450	6	44 73 104		110), RH	1	.Door pull	.Stängningshandtag	
0460	7	44 21 723		210), LH	1	.Cover	.Täcklock	
0470	7	44 21 731		210), RH	1	.Cover	.Täcklock	
0480	7	44 21 707		100), LH	1	.Cover	.Täcklock	
0490	7	44 21 715		100), RH	1	.Cover	.Täcklock	
0500	7	44 21 764		110), LH	1	.Cover	.Täcklock	
0510	7	44 21 772		110), RH	1	.Cover	.Täcklock	
0520	8	42 69 957			1	.Bushing	.Bussning	4
0530	9	79 75 071			1	.Clip nut	.Klämmutter	5
0540	10	79 73 001			1	.Screw	.Skruv	5
0560	11	85 60 435			4	.Clip	.Clips	5
0570	15	95 45 906			8	Sleeve	Hylsa	5
0580	16	79 78 422			8	Screw	Skruv	5
0590	17	*46 03 551*		131), LH (4471017) NLS - USE 4636130	1	Sealing strip	Tätningslist	
0600	17	*46 03 569*		131), RH (4471025) NLS - USE 4636148	1	Sealing strip	Tätningslist	
0610	17	46 36 130		132), LH	1	Sealing strip	Tätningslist	
0620	17	46 36 148		132), RH	1	Sealing strip	Tätningslist	
0630	17A	73 81 015		132)	2	.Clamp	.Klammer	
0640	18	45 11 440		LH	1	Cover	Kåpa	6
0650	18	45 11 457		RH	1	Cover	Kåpa	6
0660	20	45 12 4[illegible]4			2	Spacer	Distans	
0670	21	45 11 648			2	Locating pin	Styrpinne	
0680	22	44 98 733			2	Locating pin	Styrpinne	
0690	26	73 81 015		131)	2	Clamp	Klämmer	

100. Light grey Ljus grå
110. Black Svart
131. Ch. -S2002044
132. Ch. S2002045-
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Upholstery

5-J14 Luggage compartment

Klädsel

Bagagerum

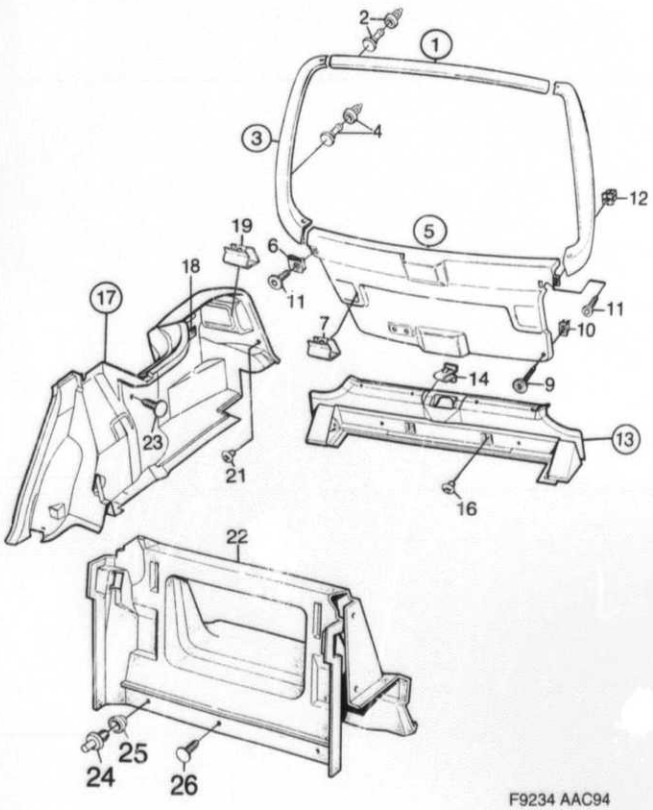

F9234 AAC94

1340	Pos	Part No/Art.nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	43 89 474			1	Crash pad	Stötskydd	6
0020	2	42 66 540			5	.Clip	.Clips	5
0030	3	43 89 490		LH	1	Crash pad	Stötskydd	6
0040	3	43 89 516		RH	1	Crash pad	Stötskydd	6
0050	4	42 66 540			3	.Clip	.Clips	5
0060	5	43 89 532			1	Upholstery	Klädsel	6
0070	5	43 70 771		CV	1	Upholstery	Klädsel	
0080	6	79 68 001			2	.Clip nut	.Clipsmutter	5
0090	7	41 40 315			2	.Clamp	.Klämma	6
0100	9	94 91 689			X	Special screw	Snabbskruv	5
0105	9	94 64 926		CV	X	Special screw	Snabbskruv	5
0110	10	84 52 898			X	Quick nut	Snabbmutter	3
0130	11	97 71 320			2	Screw	Skruv	5
0140	12	79 75 261			2	Nut	Mutter	5
0150	13	*43 89 458*		126) NLS – USE 4640678	1	Sill protection	Tröskelskydd	5
0155	13	46 40 678		127)	1	Sill protection	Tröskelskydd	5
0160	14	43 88 757			4	.Clamp	.Klämma	6
0170	16	40 87 284		126)	2	Push nut	Tryckmutter	6
0180	17	*44 70 274*		115), LH NLS – USE 4747440	1	Luggage compt lining	Bagagerumsklädsel	6
0190	17	*44 70 282*		115), RH NLS – USE 4747457	1	Luggage compt lining	Bagagerumsklädsel	
0193	17	*46 07 859*		116,367), LH NLS – USE 4747440	1	Luggage compt lining	Bagagerumsklädsel	6
0196	17	46 07 867		116,367), RH	1	Luggage compt lining	Bagagerumsklädsel	6
0197	17	47 47 440		368), LH	1	Luggage compt lining	Bagagerumsklädsel	6
0198	17	47 47 457		368), RH	1	Luggage compt lining	Bagagerumsklädsel	6
0200	17	43 70 755		363), LH, CV	1	Luggage compt lining	Bagagerumsklädsel	
0210	17	*43 70 763*		363), RH, CV NLS – USE 4747473	1	Luggage compt lining	Bagagerumsklädsel	
0213	17	47 47 465		364), LH, CV	1	Luggage compt lining	Bagagerumsklädsel	
0216	17	47 47 473		364), RH, CV	1	Luggage compt lining	Bagagerumsklädsel	
0220	18			See page 3A-045, 2-B22 LH	1	.Lamp	.Lampa	
0240	19	41 40 315			1	.Clamp	.Klämma	6
0250	21	40 87 284		-1995	X	Push nut	Tryckmutter	6
0255	21	47 41 203		1996-	X	Push nut	Tryckmutter	6
0260	22	43 70 961		CV	1	Upholstery	Klädsel	
0270	23	96 68 153			X	Clip	Clips	5
0280	24	48 23 126		1996-, CV	2	Clip	Clips	5
0290	25	45 57 245		1996-, CV	2	Bushing	Bussning	


115. Body -9374157
116. Body 9374158-
126. Ch. -R2045950, -S7002184
127. Ch. R2045951-, S7002185-
363. Ch. -V7006094
364. Ch. V7006095-
367. Ch. -V2023933, -V7005168
368. Ch. V2023934-, V7005169-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

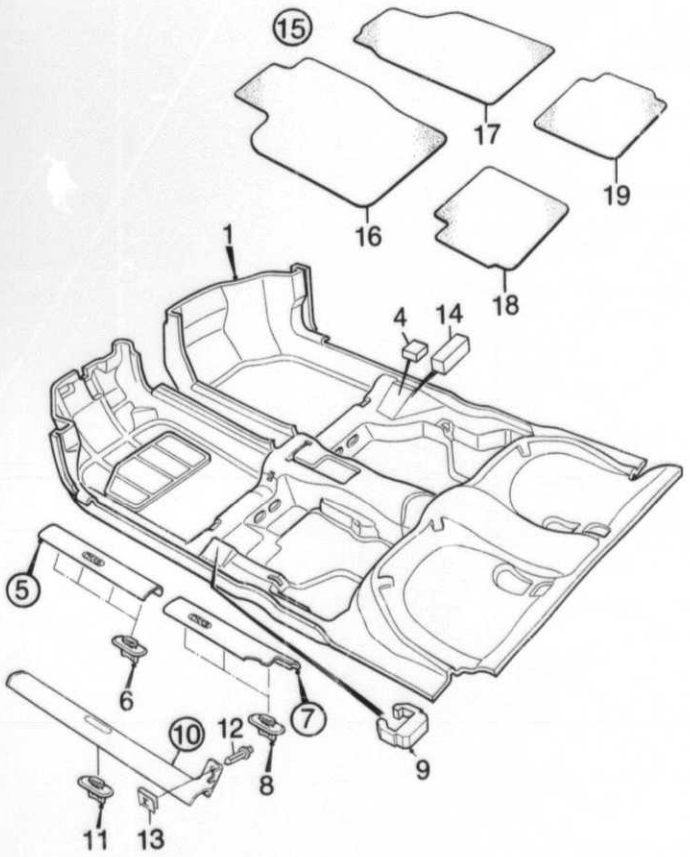

F9235 AAC94

Upholstery
Klädsel

5-J16

Carpet
Sill protection

Matta
Tröskelskydd

1370	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010					TRIM COLOUR J42, J22,				
0020					J52, J32, L32				
0030		1	44 05 791		210), CV, LHD	1	Carpet	Matta	5
0040		1	43 77 420		210), 3D, LHD	1	Carpet	Matta	5
0050		1	42 04 293		210), 5D, LHD	1	Carpet	Matta	5
0060		1	44 06 609		210), CV, RHD	1	Carpet	Matta	5
0070		1	43 77 503		210), 3D, RHD	1	Carpet	Matta	5
0080		1	42 04 053		210), 5D, RHD	1	Carpet	Matta	5
0090					TRIM COLOUR H42, H22,				
0095					H52, H32				
0100		1	44 05 775		100), CV, LHD	1	Carpet	Matta	5
0110		1	43 77 412		100), 3D, LHD	1	Carpet	Matta	5
0120		1	42 04 616		100), 5D, LHD	1	Carpet	Matta	5
0130		1	44 05 783		100), CV, RHD	1	Carpet	Matta	5
0140		1	43 77 495		100), 3D, RHD	1	Carpet	Matta	5
0150		1	42 04 608		100), 5D, RHD	1	Carpet	Matta	5
0160					TRIM COLOUR K42, K22,				
0165					K52, K32, K37, M37				
0170		1	44 06 617		110), CV, LHD	1	Carpet	Matta	5
0180		1	43 77 438		110), 3D, LHD	1	Carpet	Matta	5
0190		1	44 71 439		110), 5D, LHD	1	Carpet	Matta	5
0200		1	44 06 625		110), CV, RHD	1	Carpet	Matta	5
0210		1	43 77 511		110), 3D, RHD	1	Carpet	Matta	5
0220		1	44 71 447		110), 5D, RHD	1	Carpet	Matta	5
0230									
0235		4	* 49 02 268		1998-, 5D, RH	1	Spacer	Mellanlägg	
0240		5	42 18 723		5D, LH	1	Sill protection	Tröskelskydd	5
0250		5	42 18 731		5D, RH	1	Sill protection	Tröskelskydd	5
0260		6	44 21 475			4	.Clip	.Fästclips	5
0270		7	42 18 749		5D, LH	1	Sill protection	Tröskelskydd	5
0280		7	42 18 756		5D, RH	1	Sill protection	Tröskelskydd	5
0290		8	44 21 475			3	.Clip	.Fästclips	5
0300		9	44 93 888		10,46), 1994	1	Spacer piece	Distansklots	
0305		9	* 46 64 579		11,46), 1995-	1	Spacer piece	Distansklots	
0310		10	43 77 560		3D, LH	1	Sill protection	Tröskelskydd	5
0320		10	43 77 578		3D, RH	1	Sill protection	Tröskelskydd	5
0330		10	43 70 730		CV, LH	1	Sill protection	Tröskelskydd	5
0340		10	43 70 748		CV, RH	1	Sill protection	Tröskelskydd	5
0350		11	44 21 475			X	.Clip	.Fästclips	5
0360		12	97 71 320		-1995, 3D	2	Screw	Skruv	5
0370		12	46 44 076		1996-, 3D	2	Rivet	Nit	
0380		12	94 91 689		CV	2	Special screw	Snabbskruv	5
0390		13			3D		Expanding nut	Expandermutter	
0400					See page 8B-051, 5-J04				
0410		13	84 52 898		CV	2	Quick nut	Snabbmutter	3
0420		14	45 11 531		123)	1	Spacer	Mellanlägg	
0421		15	86 81 868		LHD, 3D, 5D, K37, M37,	1	Textile mat	Textilmatta	
0422					40/400101986				
0423		15	86 84 151		LHD, CV, K37, M37	1	Textile mat	Textilmatta	
0424					40/400103495				
0425		15	86 81 934		RHD, 3D, 5D, K37, M37,	1	Textile mat	Textilmatta	
0426					40/400101952				
0427		15	86 84 193		RHD, CV, K37, M37,	1	Textile mat	Textilmatta	
0428					40/400103529				
0430		16	*86 82 213*		LH,LHD,3D,5D, K37,M37	1	.Textile mat	.Textilmatta	
0435					40/400102190				


10. CV, ch. -S7009999
11. CV, ch. S7010000-
46. Without anti theft system. Utan stöldlarm.
100. Light grey Ljus grå
110. Black Svart
123. Without TCS Utan TCS
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

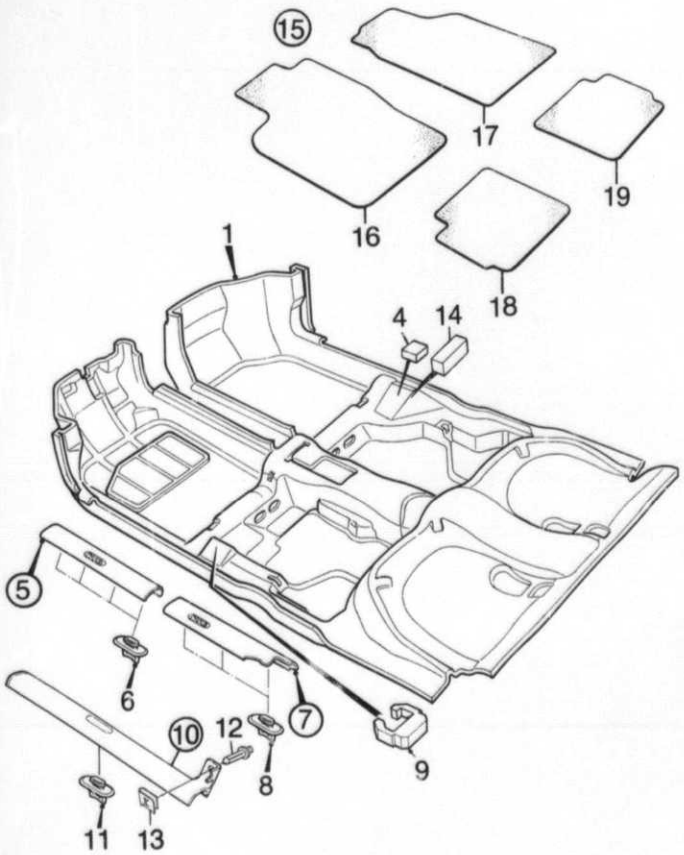

F9235 AAC94

Upholstery
Klädsel

5-J18

Carpet
Sill protection

Matta
Tröskelskydd

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	16	*86 84 284*		LH, LHD, CV, K37, M37	1	.Textile mat	.Textilmatta	
0445				40/400103552				
0490	17	*86 82 296*		RH,RHD,3D,5D. K37.M37	1	.Textile mat	.Textilmatta	
0495				40/400102224				
0500	17	*86 84 417*		RH, RHD, CV, K37, M37	1	.Textile mat	.Textilmatta	
0505				40/400103586				
0530	18			1)	1	.Textile mat	.Textilmatta	
0540	19			1)	1	.Textile mat	.Textilmatta	


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

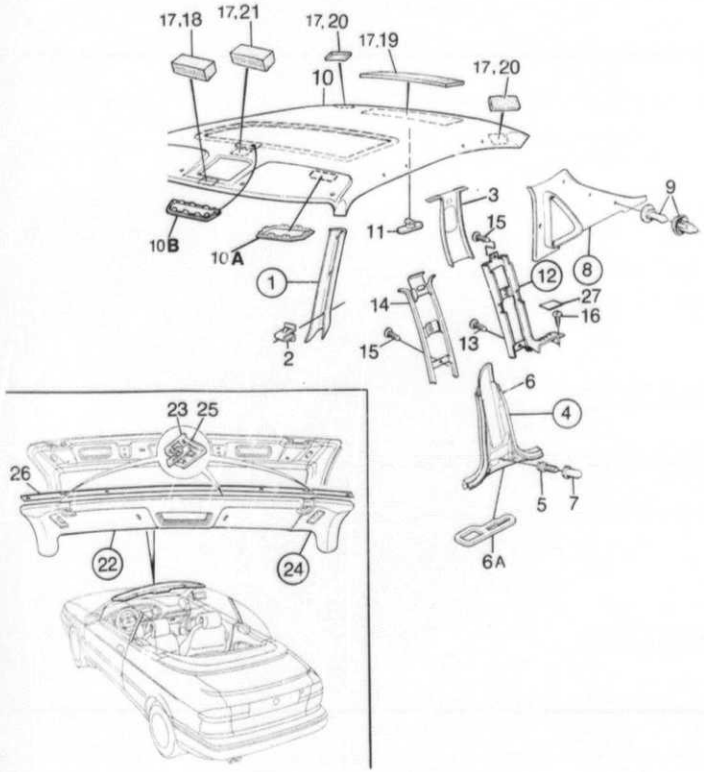

F8142 AAC94

Upholstery
5-J20
Head- and pillar lining

Klädsel
Takklädsel,stolpklädsel

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 10 871		146), LH	1	Pillar trim	Stolpklädsel	6
0020	1	*45 10 889*		146), RH NLS - USE 4607560	1	Pillar trim	Stolpklädsel	6
0023	1	46 07 552		147), LH	1	Pillar trim	Stolpklädsel	6
0026	1	46 07 560		147), RH	1	Pillar trim	Stolpklädsel	6
0030	1	46 03 338		CV, LH	1	Pillar trim	Stolpklädsel	6
0040	1	46 03 346		CV, RH	1	Pillar trim	Stolpklädsel	6
0050	2	43 88 757			3	.Clamp	.Klämma	6
0060	3	44 87 427		210), 3D, LH	1	Pillar trim	Stolpklädsel	
0070	3	44 87 435		210), 3D, RH	1	Pillar trim	Stolpklädsel	
0080	3	44 87 385		110), 3D, LH	1	Pillar trim	Stolpklädsel	
0090	3	44 87 393		110), 3D, RH	1	Pillar trim	Stolpklädsel	
0100	3	44 87 401		100), 3D, LH	1	Pillar trim	Stolpklädsel	
0110	3	44 87 419		100), 3D, RH	1	Pillar trim	Stolpklädsel	
0120								
0130	3	44 87 187		210), -1995, 5D, LH	1	Pillar trim	Stolpklädsel	6
0140	3	44 87 195		210), -1995, 5D, RH	1	Pillar trim	Stolpklädsel	6
0150	3	44 87 146		110), 5D, LH	1	Pillar trim	Stolpklädsel	6
0160	3	44 87 153		110), 5D, RH	1	Pillar trim	Stolpklädsel	6
0170	3	44 87 161		100), -1995, 5D, LH	1	Pillar trim	Stolpklädsel	6
0180	3	44 87 179		100), -1995, 5D, RH	1	Pillar trim	Stolpklädsel	6
0190								
0200	4	44 87 302		210), 5D, LH	1	Pillar trim	Stolpklädsel	6
0210	4	44 87 310		210), 5D, RH	1	Pillar trim	Stolpklädsel	6
0220	4	44 87 260		110), 5D, LH	1	Pillar trim	Stolpklädsel	6
0230	4	44 87 278		110), 5D, RH	1	Pillar trim	Stolpklädsel	6
0240	4	44 87 286		100), 5D, LH	1	Pillar trim	Stolpklädsel	6
0250	4	44 87 294		100), 5D, RH	1	Pillar trim	Stolpklädsel	6
0260	5	95 45 598			2	.Upholstery clip	.Klädselfäste	5
0270	6			1)	1	.Air duct	.Luftkanal	
0275	6A	45 42 221			1	.Seal	.Tätning	6
0280	7	95 45 906			4	Sleeve	Hylsa	5
0290	8	44 87 047		3D, LH	1	Pillar trim	Stolpklädsel	
0300	8	44 87 054		3D, RH	1	Pillar trim	Stolpklädsel	
0310	8	44 87 021		5D, LH	1	Pillar trim	Stolpklädsel	
0320	8	44 87 039		5D, RH	1	Pillar trim	Stolpklädsel	
0330	9	42 66 540			5	.Clip	.Clips	5
0340	10	42 19 564		3D	1	Head lining	Takklädsel	6
0350	10	42 19 572		3D, SR	1	Head lining	Takklädsel	6
0360	10	43 89 243		5D	1	Head lining	Takklädsel	5
0370	10	43 89 250		5D, SR	1	Head lining	Takklädsel	5
0373	10A	43 89 284			2	.Protection	.Skydd	
0375	10B	42 04 814			2	.Protection	.Skydd	
0380	11	97 85 031			2	Upholstery clip	Klädselfäste	5
0390	12	44 14 074		3D, LH	1	Pillar trim	Stolpklädsel	6
0400	12	44 14 082		3D, RH	1	Pillar trim	Stolpklädsel	6
0410	13	96 76 057			1	.Clamp	.Klammer	5
0420	14	44 99 224		210), -1995, 5D, LH	1	Pillar trim	Stolpklädsel	6
0430	14	44 99 232		210), -1995, 5D, RH	1	Pillar trim	Stolpklädsel	6
0440	14	44 99 240		110), 5D, LH	1	Pillar trim	Stolpklädsel	6
0450	14	44 99 257		110), 5D, RH	1	Pillar trim	Stolpklädsel	6
0460	14	44 99 208		100), -1995, 5D, LH	1	Pillar trim	Stolpklädsel	6
0470	14	44 99 216		100), -1995, 5D, RH	1	Pillar trim	Stolpklädsel	6
0480	15	96 76 057			X	Clamp	Klammer	5
0490	16	79 70 536		3D	2	Screw	Skruv	6
0495	17	43 68 890			1	Spacer	Mellanlägg	
0500	18	45 08 230			1	.Spacer	.Mellanlägg	

1. Not as separate spare part. Ej som separat reservdel.
100. Light grey Ljus grå
110. Black Svart
146. Ch. -S2017129
147. Ch. S2017130-
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX


Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-J22

Head- and pillar lining

Takklädsel,stolpklädsel

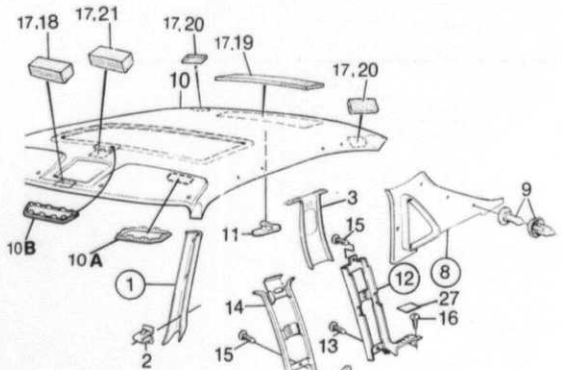

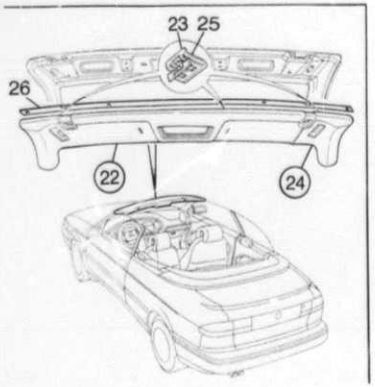

F8142 AAC94

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	19	45 11 549			2	.Spacer	.Mellanlägg	
0520	19	45 08 065		SR	1	.Spacer	.Mellanlägg	
0530	20	45 09 576			2	.Spacer	.Mellanlägg	
0540	21	45 11 531			1	.Spacer	.Mellanlägg	
0550	22	43 71 978		CV	1	Upholstery	Klädsel	6
0560	23	43 88 757		CV	2	.Clamp	.Klämma	6
0570	24	44 23 489		CV	1	Upholstery	Klädsel	6
0580	25	43 88 757		CV	1	.Clamp	.Klämma	6
0590	26			See page 8A-141, 5-F22		Retainer strip	Hållarlist	
0600	27			See page 8C-021, 6-A22		Cover washer	Täckbricka	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-J24

Seat
Stol

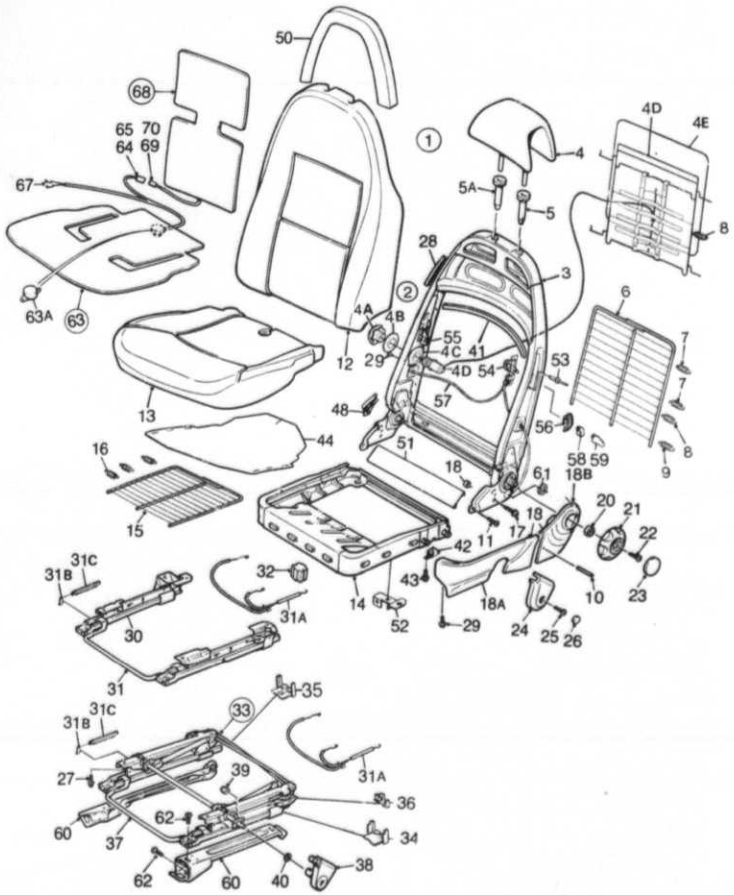

F8607 AAC94

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			1,77,329), 3D, CV		Seat	Stol	
0020	1			1,48,330), 3D, CV		Seat	Stol	
0030	1			1,48), 5D		Seat	Stol	
0040	2	46 28 954		228), LH, LHD, 3D, CV	1	Framework	Stomme	
0050	2	47 19 282		229,279),LH,LHD,3D,CV	1	Framework	Stomme	
0060	2	*47 60 658*		280,329,339), LH, LHD, 3D, CV NLS – USE 4930616	1	Framework	Stomme	
0070								
0080	2	49 30 590		330), LH, LHD, 3D	1	Framework	Stomme	
0090	2	49 30 616		330), LH, LHD, CV	1	Framework	Stomme	
0100	2	46 29 010		279), RH, LHD, 3D, CV	1	Framework	Stomme	
0110	2	47 60 740		280,384),-1997, RH, LHD, 3D, CV	1	Framework	Stomme	
0115								
0120	2	• 47 60 732		1998-, RH, LHD, 3D	1	Framework	Stomme	
0130	2	• 47 60 856		1998-, RH, LHD, CV	1	Framework	Stomme	
0140								
0150	2	46 29 028		279), LH, RHD, 3D, CV	1	Framework	Stomme	
0160	2	47 60 765		280,305),-1997, LH, RHD, 3D, CV	1	Framework	Stomme	
0165								
0170	2	• 47 60 757		1998-, LH, RHD, 3D	1	Framework	Stomme	
0180	2	• 47 60 864		1998-, LH, RHD, CV	1	Framework	Stomme	
0190	2	46 28 962		228), RH, RHD, 3D, CV	1	Framework	Stomme	
0200	2	47 19 274		229,279),RH,RHD,3D,CV	1	Framework	Stomme	
0210	2	*47 60 682*		280,329,340), RH, RHD, 3D, CV NLS – USE 4930640	1	Framework	Stomme	
0220								
0230	2	49 30 640		330), RH, RHD, 3D	1	Framework	Stomme	
0240	2	49 30 665		330), RH, RHD, CV	1	Framework	Stomme	
0250								
0260	2	42 11 033		228), LH, LHD, 5D	1	Framework	Stomme	
0270	2	47 18 938		229,279), LH, LHD, 5D	1	Framework	Stomme	
0280	2	*47 60 542*		280,329),LH, LHD, 5D NLS - USE 4930582	1	Framework	Stomme	
0290	2	49 30 582		330), LH, LHD, 5D	1	Framework	Stomme	
0300	2	42 11 017		279), RH, LHD, 5D	1	Framework	Stomme	
0310	2	47 60 609		280), RH, LHD, 5D	1	Framework	Stomme	
0320	2	42 11 025		279), LH, RHD, 5D	1	Framework	Stomme	
0330	2	47 60 617		280), LH, RHD, 5D	1	Framework	Stomme	
0340	2	42 11 041		228), RH, RHD, 5D	1	Framework	Stomme	
0350	2	47 18 946		229,279), RH, RHD, 5D	1	Framework	Stomme	
0360	2	*47 60 575*		280,329),RH, RHD, 5D NLS - USE 4930632	1	Framework	Stomme	
0370	2	49 30 632		330), RH, RHD, 5D	1	Framework	Stomme	
0380	3	46 28 053		228), LH, 3D, CV	1	.Backrest frame	.Ryggram	
0390	3	46 28 061		228), RH, 3D, CV	1	.Backrest frame	.Ryggram	
0400	3	48 46 937		229), LH, 3D, CV	1	.Backrest frame	.Ryggram	

1. Not as separate spare part. Ej som separat reservdel.
48. Complete seats are not available as a spare part. To obtain a complete seat, order the following separate spare parts: framework, heating pad, covers and mounting kit. Komplett stol finns inte som reservdel. För att erhålla komplett stol, beställ följande lösa reservdelar: stomme, värmedyna, klädselpåsar och monteringssats.
77. Complete seats are not available as a spare part. To obtain a complete seat, order the following separate spare parts: framework, heating pad, covers, mounting kit and pos 53-59. Komplett stol finns inte som reservdel. För att erhålla komplett stol, beställ följande lösa reservdelar: stomme, värmedyna, klädselpåsar, monteringssats och pos 53-59.
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. V2004710–, V7000722–
329. Ch. –V2007185, –V7001353
330. Ch. V2007186–, V7001354–
339. Superseded by 4930590 3D, 4930616 CV. Ersatt av 4930590 3D, 4930616 CV.
340. Superseded by 4930640 3D, 4930665 CV. Ersatt av 4930340 3D, 4930665 CV.
384. Superseded by 4760732 3D, 4760856 CV. Ersatt av 4760732 3D, 4760856 CV.
385. Superseded by 4760757 3D, 4760864 CV. Ersatt av 4760757 3D, 4760864 CV.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -K02

Seat
Stol

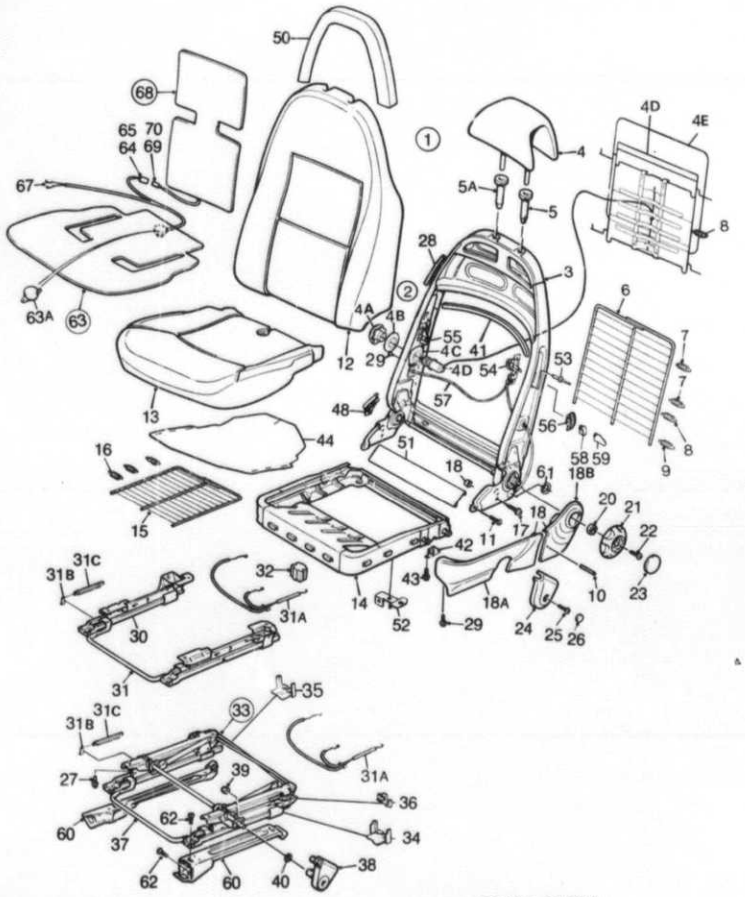

1470	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	3		48 46 945		229), RH, 3D, CV	1	.Backrest frame	.Ryggram	
0420	3		46 28 020		228), LH, 5D	1	.Backrest frame	.Ryggram	
0430	3		46 28 038		228), RH, 5D	1	.Backrest frame	.Ryggram	
0440	3		48 46 879		229), -1997, LH, 5D	1	.Backrest frame	.Ryggram	
0450	3		48 46 887		229), -1997, RH, 5D	1	.Backrest frame	.Ryggram	
0460	3	*	49 00 908		1998-, LH, 5D	1	.Backrest frame	.Ryggram	
0470	3	*	49 00 916		1998-, RH, 5D	1	.Backrest frame	.Ryggram	
0480	4		42 11 751			1	.Head restraint	.Nackstöd	
0490	4A		47 19 100		30,229)	1	.Hand wheel	.Ratt	
0500	4B		47 19 118		30,229)	1	.Cover	.Avtäckning	
0510	4C		47 63 447		30,229,279)	1	.Bracket	.Konsol	
0520	4D		47 19 084		30,229), LH	1	.Lumbar support	.Svankstöd	
0530	4D	*	47 19 092		30,229), RH	1	.Lumbar support	.Svankstöd	
0540	4E		47 63 454		30,229,279)	1	.Protection	.Skydd	
0550	5		44 74 896		LH	1	.Sleeve	.Hylsa	
0560	5A		44 95 826		RH	1	.Sleeve	.Hylsa	
0570	6		42 11 801			1	.Wire matting	.Resármatta	
0580	7		42 14 581			4	.Spring	.Fjäder	
0590	8		42 14 599			2	.Spring	.Fjäder	
0600	9		44 29 734			2	.Spring	.Fjäder	
0610	10		44 96 998		3D, CV	1	.Pin	.Pinne	6
0620	10		44 96 972		5D	1	.Pin	.Pinne	6
0630	11		79 74 884			2	.Screw	.Skruv	5
0640	12		42 11 819		279)	1	.Foam plastic cushion	.Skumplastdyna	
0650	12		47 60 567		280)	1	.Foam plastic cushion	.Skumplastdyna	
0660	13		42 11 991		279)	1	.Foam plastic cushion	.Skumplastdyna	
0670	13		47 60 559		280)	1	.Foam plastic cushion	.Skumplastdyna	
0680	14		42 32 435			1	.Seat frame	.Sitsram	
0690	15		42 11 983			1	.Wire matting	.Resármatta	
0700	16		44 29 742		279)	6	.Spring	.Fjäder	
0710	16		48 04 332		280)	6	.Spring	.Fjäder	
0720	17		45 31 323		3D, CV	2	.Screw	.Skruv	5
0730	17		44 96 600		5D	2	.Screw	.Skruv	
0740	18		45 31 331		3D, CV	2	.Bushing	.Bussning	5
0750	18		44 96 618		5D	2	.Bushing	.Bussning	
0760	18A		43 78 949		LH, LHD, 3D, CV	1	.Cover	.Kåpa	
0770	18A		43 79 004		RH, LHD, 3D, CV	1	.Cover	.Kåpa	
0780	18A		43 79 038		LH, RHD, 3D, CV	1	.Cover	.Kåpa	
0790	18A		43 78 972		RH, RHD, 3D, CV	1	.Cover	.Kåpa	
0800	18B		43 78 956		LH, 3D, CV	1	.Cover	.Kåpa	
0810	18B		43 78 980		RH, 3D, CV	1	.Cover	.Kåpa	
0820	19		42 32 450		LH, LHD, 5D	1	.Cover	.Kåpa	
0830	19		42 32 468		RH, LHD, 5D	1	.Cover	.Kåpa	
0840	19		42 14 714		LH, RHD, 5D	1	.Cover	.Kåpa	
0850	19		42 14 680		RH, RHD, 5D	1	.Cover	.Kåpa	
0860	20		44 29 171			1	.Reinforcement	.Förstärkning	
0870	21		44 29 163			1	.Hand wheel	.Ratt	
0880	22		79 70 577			1	.Screw	.Skruv	5
0890	23		44 29 189			1	.Cover	.Täckkåpa	
0900	24		98 93 009		30), -1997, LHD	1	.Cover	.Kåpa	6
0905	24	*	49 01 344		30), 1998-, LHD	1	.Cover	.Kåpa	6
0910	24		98 93 017		30), -1997, RHD	1	.Cover	.Kåpa	6
0915	24	*	49 01 351		30), 1998-, RHD	1	.Cover	.Kåpa	6
0920	25		79 22 354		30)	1	.Screw	.Skruv	5
0930	26		98 93 033		30)	1	.Cover	.Täcklock	6
0940	27		44 96 626			4	.Screw	.Skruv	
0950	28		45 05 491			2	.Strip	.List	
0960	29		79 22 354			X	.Screw	.Skruv	5

30. Driver seat Förarstol
228. Ch. -T2012760, -T7002363
229. Ch. T2012761-, T7002364-
279. Ch. -V2004709, -V7000721
280. Ch. V2004710-, V7000722-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -K04

Seat
Stol

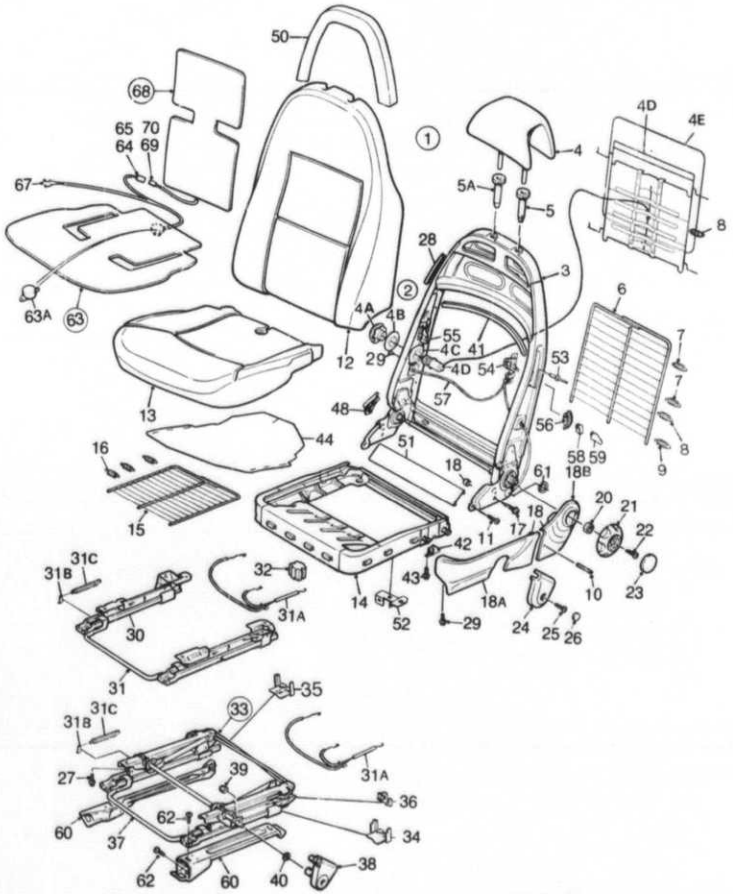

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0970	30	43 78 824		31), -1994, LH,LHD,3D,CV	1	.Rail	.Skena	
0980	30	45 31 372		31), -1994, RH,LHD,3D,CV	1	.Rail	.Skena	
0990	30	43 78 808		31), -1994, LH,RHD,3D,CV	1	.Rail	.Skena	
1000	30	43 78 816		31), -1994, RH,RHD,3D,CV	1	.Rail	.Skena	
1010	30	*42 14 672*		31), -1994, LH, LHD, 5D	1	.Rail	.Skena	
1010				NLS – USE 4378824				
1020	30	*42 12 098*		31), -1994, RH, LHD, 5D	1	.Rail	.Skena	
1020				NLS – USE 4531372				
1030	30	*44 75 224*		31), -1994, LH, RHD, 5D	1	.Rail	.Skena	
1030				NLS – USE 4378808				
1040	30	*42 12 106*		31), -1994, RH, RHD, 5D	1	.Rail	.Skena	
1040				NLS – USE 4378816				
1050	30	43 78 824		31,1995-,329), LH, LHD	1	.Rail	.Skena	
1060	30	45 31 372		31,1995-,329), RH, LHD	1	.Rail	.Skena	
1070	30	43 78 808		31,1995-,329), LH, RHD	1	.Rail	.Skena	
1080	30	43 78 816		31,1995-,329), RH, RHD	1	.Rail	.Skena	
1090	30	48 01 072		31,330), LH, LHD	1	.Rail	.Skena	
1100	30	48 01 080		31,330), RH, LHD	1	.Rail	.Skena	
1110	30	48 01 106		31,330), LH, RHD	1	.Rail	.Skena	
1120	30	48 01 098		31,330), RH, RHD	1	.Rail	.Skena	
1130	31	42 14 664		31)	1	.Brace	.Bygel	
1140	31A	46 30 398		30,329), LHD, 3D, CV	1	.Cable	.Wire	5
1150	31A	46 30 406		30,329), RHD, 3D, CV	1	.Cable	.Wire	5
1160	31A	*48 01 783*		30,330), 3D, CV	1	.Cable	.Wire	5
1170	31A	46 30 406		31), LHD, 3D, CV	1	.Cable	.Wire	5
1180	31A	46 30 398		31), RHD, 3D, CV	1	.Cable	.Wire	5
1190	31B	45 32 461		30,329), LHD, 3D, CV	1	.Bracket	.Konsol	6
1200	31B	45 32 479		30,329), RHD, 3D, CV	1	.Bracket	.Konsol	6
1210	31B	49 33 065		30,330), LHD, 3D, CV	1	.Bracket	.Konsol	6
1220	31B	49 33 073		30,330), RHD, 3D, CV	1	.Bracket	.Konsol	6
1230	31B	45 32 479		31,329), LHD, 3D, CV	1	.Bracket	.Konsol	6
1240	31B	45 32 461		31,329), RHD, 3D, CV	1	.Bracket	.Konsol	6
1250	31B	49 33 073		31,330), LHD, 3D, CV	1	.Bracket	.Konsol	6
1260	31B	49 33 065		31,330), RHD, 3D, CV	1	.Bracket	.Konsol	6
1270	31C	45 31 190		3D, CV	1	.Spring	.Fjäder	6
1280	32	41 17 768			1	.Connector housing heating pad	.Kontakthus värmedyna	4
1290								
1300	33	43 78 634		30,329), LHD (4213815)	1	.Seat chassis	.Stolchassi	
1310	33	43 78 717		30,329), RHD (4213906)	1	.Seat chassis	.Stolchassi	
1320	33	48 01 056		30,330), LHD	1	.Seat chassis	.Stolchassi	
1330	33	48 01 064		30,330), RHD	1	.Seat chassis	.Stolchassi	
1340	34	46 30 661		33)	1	..End cover	..Ändskydd	
1350	35	46 30 679		32)	1	..End cover	..Ändskydd	
1360	36	46 30 653			1	..End cover	..Ändskydd	
1370	37	42 14 664		30,329)	1	..Brace	..Bygel	
1380	38	45 31 414		30,329), LHD	1	..Control	..Reglage	6
1390	38	45 31 422		30,329), RHD	1	..Control	..Reglage	6
1400	38	49 36 282		30,330), LHD	1	..Control	..Reglage	6
1410	38	49 36 290		30,330), RHD	1	..Control	..Reglage	
1420	39	80 74 270		30,329)	2	..Lock nut	..Låsmutter	3
1430	40	45 31 430		30,329)	1	..Washer	..Bricka	5
1440	40	81 23 473		30,330)	1	..E-circlip	..Spärryttare	5
1450	41	45 05 509			1	.Strip	.List	
1460	42	46 30 372		LH, 3D, CV	1	.Stop	.Stopp	6
1470	42	46 30 380		RH, 3D, CV	1	.Stop	.Stopp	6
1480	43	79 22 354		3D, CV	4	.Screw	.Skruv	5

30. Driver seat Förarstol
31. Passanger seat Passagerarstol
32. Inner Inre
33. Outer Yttre
199. Ch. -S2042854
329. Ch. -V2007185, -V7001353
330. Ch V2007186-, V7001354-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -K06

Seat
Stol

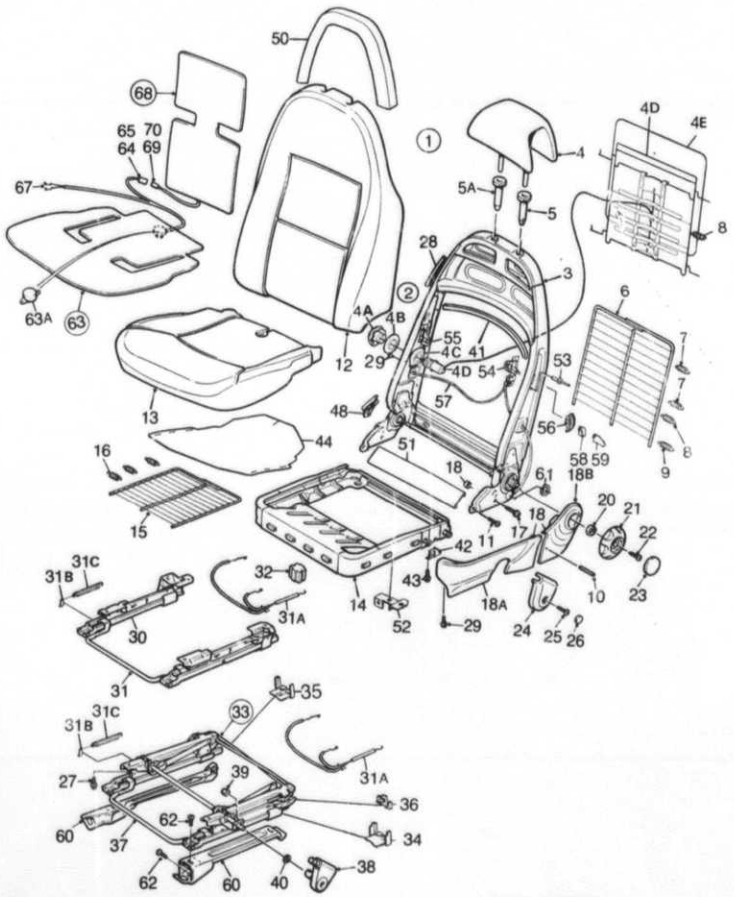

F8607 AAC94

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1490	44	45 34 095			1	.Protection	.Skydd	
1500	48	45 34 228		LH, 3D, CV	1	.Cover	.Kåpa	
1510	48	45 34 210		RH, 3D, CV	1	.Cover	.Kåpa	
1520	50	45 34 178		3D, CV	1	.Protection	.Skydd	6
1530	51	45 30 457		3D, CV	1	.Protection	.Skydd	6
1540	52	45 06 739			1	.Bracket	.Konsol	6
1550	53	82 35 178		3D, CV	X	Pop rivet	Popnit	5
1560	54	46 27 287		33), LH, 3D	1	Release mechanism	Frigörningsmekanism	6
1570	54	46 27 295		33), RH, 3D	1	Release mechanism	Frigörningsmekanism	6
1580	54	43 78 675		33), LH, CV	1	Release mechanism	Frigörningsmekanism	6
1590	54	45 06 705		33), RH, CV	1	Release mechanism	Frigörningsmekanism	6
1600	55	43 78 675		31,32), LHD, 3D, CV	1	Release mechanism	Frigörningsmekanism	6
1610	55	45 06 705		31,32), RHD, 3D, CV	1	Release mechanism	Frigörningsmekanism	6
1620	56	43 79 137		3D, CV	X	Slide	Slid	6
1630	57	45 06 713		30), 3D, CV	1	Cable	Wire	5
1640	57	45 06 721		31), 3D, CV	1	Cable	Wire	5
1650	58	45 30 200		3D, CV	X	Knob	Knopp	3
1660	59	45 34 160		3D	2	Knob	Knopp	3
1670	60	44 74 243		33,183), LH	1	Bracket	Konsol	
1680	60	46 54 117		33,184), LH	1	Bracket	Konsol	
1690	60	44 74 250		32), LH	1	Bracket	Konsol	
1700	60	44 96 550		33,183), LH, AIRBAG 2	1	Bracket	Konsol	
1710	60	46 54 125		33,184), LH, AIRBAG 2	1	Bracket	Konsol	
1720	60	44 96 568		32), LH, AIRBAG 2	1	Bracket	Konsol	
1730	60	44 74 268		33,183), RH	1	Bracket	Konsol	
1740	60	46 54 133		33,184), RH	1	Bracket	Konsol	
1750	60	44 74 276		32), RH	1	Bracket	Konsol	
1760	60	44 96 576		33,183), RH, AIRBAG 2	1	Bracket	Konsol	
1770	60	46 54 141		33,184), RH, AIRBAG 2	1	Bracket	Konsol	
1780	60	44 96 584		32), RH, AIRBAG 2	1	Bracket	Konsol	
1790	61	46 30 646		3D, CV	X	Lock washer	Låsbricka	5
1800	62	45 34 293			16	Screw	Skruv	6
1810	63	42 32 484		279)	1	Heating pad	Värmedyna	
1820	63	48 04 324		280)	1	Heating pad	Värmedyna	
1830	63A	47 99 631		26-36°	1	.Thermostat	.Termostat	
1840	63A	47 99 649		20-29°	1	.Thermostat	.Termostat	
1850	64	85 61 631			1	.Connector housing	.Skarvhus	4
1860	65	*85 44 298*		NLS – USE 8582595	2	.Cable terminal	.Kabelsko	5
1870	67	41 15 580			2	.Cable terminal	.Kabelsko	5
1880	68	42 11 595			1	Heating pad	Värmedyna	
1890	69	85 61 623			1	.Contact housing	.Kontakthus	4
1900	70	*85 44 314*		NLS – USE 8582603	2	.Cable terminal	.Kabelsko	5
1910		45 07 026		See page 8B-105, 5-L10	2	Mounting kit	Monteringssats	


30. Driver seat Förarstol
31. Passanger seat Passagerarstol
32. Inner Inre
33. Outer Yttre
183. Ch. -S2030018, -S7019063
184. Ch. S2030019-, S7019064-
279. Ch. -V2004709, -V7000721
280. Ch. V2004710-, V7000722-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

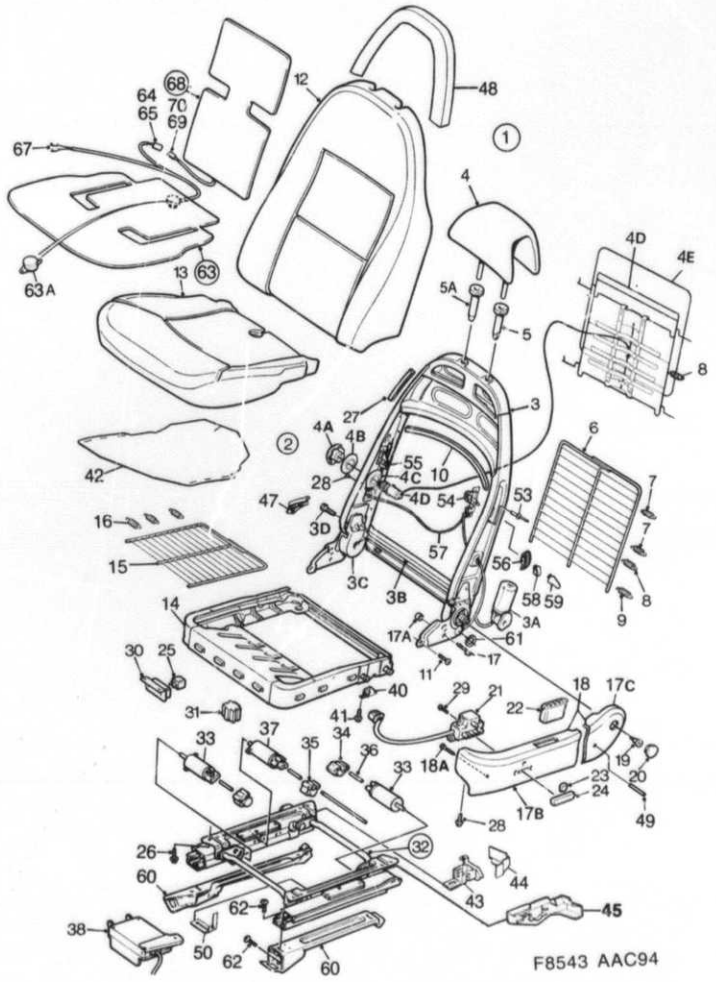

Other interior equipment

5 –K08

Seat

Electrically adjustable

Övrig invändig utrustning

Stol

Elmanövrerade

1485

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		1,77), 3D, CV		Seat	Stol	
0020	1		1,48), 5D		Seat	Stol	
0030	2		46 28 970 -1995, LH, LHD, 3D, CV	1	Framework	Stomme	
0040	2		46 29 036 279), RH, LHD, 3D, CV	1	Framework	Stomme	
0050	2		47 60 781 280),-1997, RH,LHD,3D,CV	1	Framework	Stomme	
0060	2	•	47 60 773 1998-, RH, LHD, 3D	1	Framework	Stomme	
0070	2	•	47 60 872 1998-, RH, LHD, CV	1	Framework	Stomme	
0080	2		46 29 044 279), LH, RHD, 3D, CV	1	Framework	Stomme	
0090	2		47 60 807 280),-1997, LH,RHD,3D,CV	1	Framework	Stomme	
0100	2	•	47 60 799 1998-, LH, RHD, 3D	1	Framework	Stomme	
0110	2	•	47 60 880 1998-, LH, RHD, CV	1	Framework	Stomme	
0120	2		46 28 988 -1995, RH, RHD, 3D, CV	1	Framework	Stomme	
0130	2		46 28 996 29,228), LH, LHD, 3D, CV	1	Framework	Stomme	
0140	2		47 19 290 29,229,279), LH, LHD, 3D, CV	1	Framework	Stomme	
0150							
0160	2		47 60 708 29,280),-1997, LH, LHD, 3D, CV	1	Framework	Stomme	
0170							
0180	2	•	47 60 690 29), 1998-, LH, LHD, 3D	1	Framework	Stomme	
0190	2	•	47 60 831 29), 1998-, LH, LHD, CV	1	Framework	Stomme	
0200	2		46 29 002 29,228), RH, RHD, 3D, CV	1	Framework	Stomme	
0210	2		47 19 308 29,229,279), RH, RHD, 3D, CV	1	Framework	Stomme	
0220							
0230	2		47 60 724 29,280),-1997, RH, RHD, 3D, CV	1	Framework	Stomme	
0240							
0250	2	•	47 60 716 29), 1998-, RH, RHD, 3D	1	Framework	Stomme	
0260	2	•	47 60 849 29), 1998-, RH, RHD, CV	1	Framework	Stomme	
0270	2		42 11 074 -1995, LH, LHD, 5D	1	Framework	Stomme	
0280	2		44 29 916 279), RH, LHD, 5D	1	Framework	Stomme	
0290	2		47 60 625 280), RH, LHD, 5D	1	Framework	Stomme	
0300	2		44 29 924 279), LH, RHD, 5D	1	Framework	Stomme	
0310	2		47 60 633 280), LH, RHD, 5D	1	Framework	Stomme	
0320	2		42 11 082 -1995, RH, RHD, 5D	1	Framework	Stomme	
0330	2		42 11 058 29,228), LH, LHD, 5D	1	Framework	Stomme	
0340	2		46 53 861 29,229,279),LH,LHD,5D	1	Framework	Stomme	
0350	2		47 60 583 29,280), LH, LHD, 5D	1	Framework	Stomme	
0360	2		42 11 066 29,228), RH, RHD, 5D	1	Framework	Stomme	
0370	2		46 53 879 29,229,279),RH,RHD,5D	1	Framework	Stomme	
0380	2		47 60 591 29,280), RH, RHD, 5D	1	Framework	Stomme	
0390			91 23 548	3	.Contact housing electric motor	.Kontakthus elmotor	4
0400							
0410			41 17 768	2	.Connector housing 8-pole, male	.Kontakthus 8-polig, stift	4
0420							
0430	3		43 78 899 228,386), 3D, CV	1	.Backrest frame	.Ryggram	
0440	3		48 46 978 229), LH, 3D, CV	1	.Backrest frame	.Ryggram	
0450	3		48 46 986 229), RH, 3D, CV	1	.Backrest frame	.Ryggram	
0460	3		*42 13 914* 228,343), 5D NLS	1	.Backrest frame	.Ryggram	
0470	3		48 46 994 229), -1997, LH, 5D	1	.Backrest frame	.Ryggram	

1. Not as separate spare part. Ej som separat reservdel.
29. With memory function. Med minnesfunktion.
48. Complete seats are not available as a spare part. To obtain a complete seat, order the following separate spare parts: framework, heating pad, covers and mounting kit. Komplett stol finns inte som reservdel. För att erhålla komplett stol, beställ följande lösa reservdelar: stomme, värmedyna, klädselpåsar och monteringssats.
77. Complete seats are not available as a spare part. To obtain a complete seat, order the following separate spare parts: framework, heating pad, covers, mounting kit and pos 53-59. Komplett stol finns inte som reservdel. För att erhålla komplett stol, beställ följande lösa reservdelar: stomme, värmedyna, klädselpåsar, monteringssats och pos 53-59.
228. Ch. –T2012760, –T7002363
229. Ch. T2012761–, T7002364–
279. Ch. –V2004709, –V7000721
280. Ch. –V2004710–, V7000722–
343. Superseded by 4846994 LH, 4847000 RH. Ersatt av 4846994 LH, 4847000 RH.
386. Superseded by 4846978 LH, 4846986 RH. Ersatt av 4846978 LH, 4846986 RH.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Other interior equipment

5 -K10


Seat

Electrically adjustable

Övrig invändig utrustning

Stol

Elmanövrerade

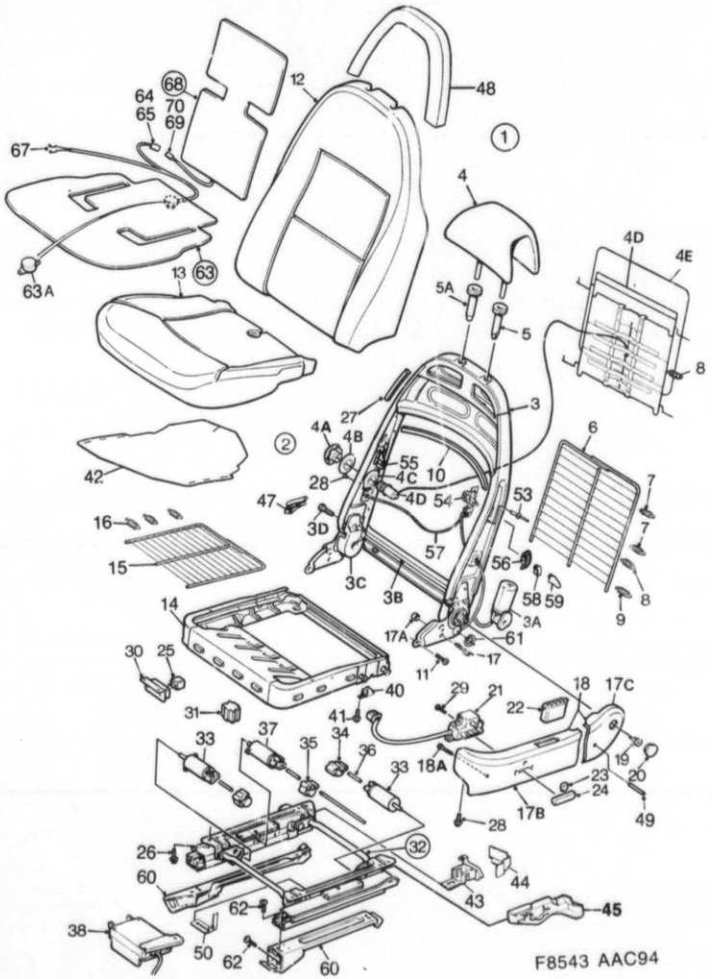

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	3	48 47 000		229), -1997, RH, 5D	1	.Backrest frame	.Ryggram	
0490	3	* 49 00 759		1998-, 5D	1	.Backrest frame	.Ryggram	
0500	3A	44 76 099			1	.Electric motor	.Elmotor	
0510	3A	44 76 107		29)	1	.Electric motor	.Elmotor	
0520				1)	1	..Gear	..Kugghjul	
0530				1,29)	1	..Potentiometer	..Potentiometer	
0540		41 17 164		29)	1	..Connector housing 2-pole, male	..Kontakthus 2-polig, stift	4
0560		95 18 739		29)	1	..Contact housing 4-pole, male	..Kontakthus 4-polig, stift	4
0580	3B	44 76 073			1	.Shaft	.Axel	
0590	3C	44 76 081			1	.Cover	.Avtäckning	
0600				1)	1	..Gear	..Kugghjul	
0610	3D	44 76 115			4	.Screw	.Skruv	
0620	4	42 11 751			1	.Head restraint	.Nackstöd	
0630	4A	47 19 100		29,229)	1	.Hand wheel	.Ratt	
0640	4B	47 19 118		29,229)	1	.Cover	.Avtäckning	
0650	4C	47 63 447		29,229)	1	.Bracket	.Konsol	
0660	4D	47 19 084		29,229), LH	1	.Lumbar support	.Svankstöd	
0670	4D	* 47 19 092		29,229), RH	1	.Lumbar support	.Svankstöd	
0680	4E	47 63 454		29,229)	1	.Protection	.Skydd	
0690	5	44 74 896			1	.Sleeve	.Hylsa	
0700	5A	44 95 826			1	.Sleeve	.Hylsa	
0710	6	42 11 801			1	.Wire matting	.Resármatta	
0720	7	42 14 581			4	.Spring	.Fjäder	
0730	8	42 14 599			2	.Spring	.Fjäder	
0740	9	44 29 734			2	.Spring	.Fjäder	
0750	10	45 05 509			1	.Strip	.List	
0760	11	79 74 884			2	.Screw	.Skruv	5
0770	12	42 11 819		279)	1	.Foam plastic cushion	.Skumplastdyna	
0780	12	47 60 567		280)	1	.Foam plastic cushion	.Skumplastdyna	
0790	13	42 11 991		279)	1	.Foam plastic cushion	.Skumplastdyna	
0800	13	47 60 559		280)	1	.Foam plastic cushion	.Skumplastdyna	
0810	14	42 32 435			1	.Seat frame	.Sitsram	
0820	15	42 11 983			1	.Wire matting	.Resármatta	
0830	16	44 29 742		279)	6	.Spring	.Fjäder	
0840	16	48 04 332		280)	6	.Spring	.Fjäder	
0850	17	45 31 323		3D, CV	2	.Screw	.Skruv	5
0860	17	44 96 600		5D	2	.Screw	.Skruv	
0870	17A	45 31 331		3D, CV	2	.Bushing	.Bussning	5
0880	17A	44 96 618		5D	2	.Bushing	.Bussning	
0890	17B	43 79 053		LH, 3D, CV	1	.Cover	.Kåpa	
0900	17B	43 79 087		RH, 3D, CV	1	.Cover	.Kåpa	
0910	17B	43 79 145		29), LH, LHD	1	.Cover	.Kåpa	
0920	17B	43 79 152		29), RH, RHD	1	.Cover	.Kåpa	
0930	17C	43 79 061		LH, 3D, CV	1	.Cover	.Kåpa	
0940	17C	43 79 095		RH, 3D, CV	1	.Cover	.Kåpa	
0950	18	42 11 918		LH, 5D	1	.Cover	.Kåpa	
0960	18	42 11 926		RH, 5D	1	.Cover	.Kåpa	
0970	18	42 11 934		29), LH, LHD, 5D	1	.Cover	.Kåpa	
0980	18	42 11 942		29), RH, RHD, 5D	1	.Cover	.Kåpa	
0990	18A	44 76 255			1	.Screw	.Skruv	
1000	19	40 30 359			1	.Screw	.Skruv	5
1010	20	95 92 700			1	.Cover	.Täcklock	6
1020	21	44 29 841		LH	1	.Switch	.Strömställare	
1030	21	44 29 858		RH	1	.Switch	.Strömställare	
1040	21	44 62 792		29,228), LH	1	.Switch	.Strömställare	

1. Not as separate spare part. Ej som separat reservdel.
29. With memory function. Med minnesfunktion.
228. Ch. -T2012760, -T7002363
229. Ch. T2012761-, T7002364-
279. Ch. -V2004709, -V7000721
280. Ch. V2004710-, V7000722-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-K12

Seat
Electrically adjustable

Stol
Elmanövrerade

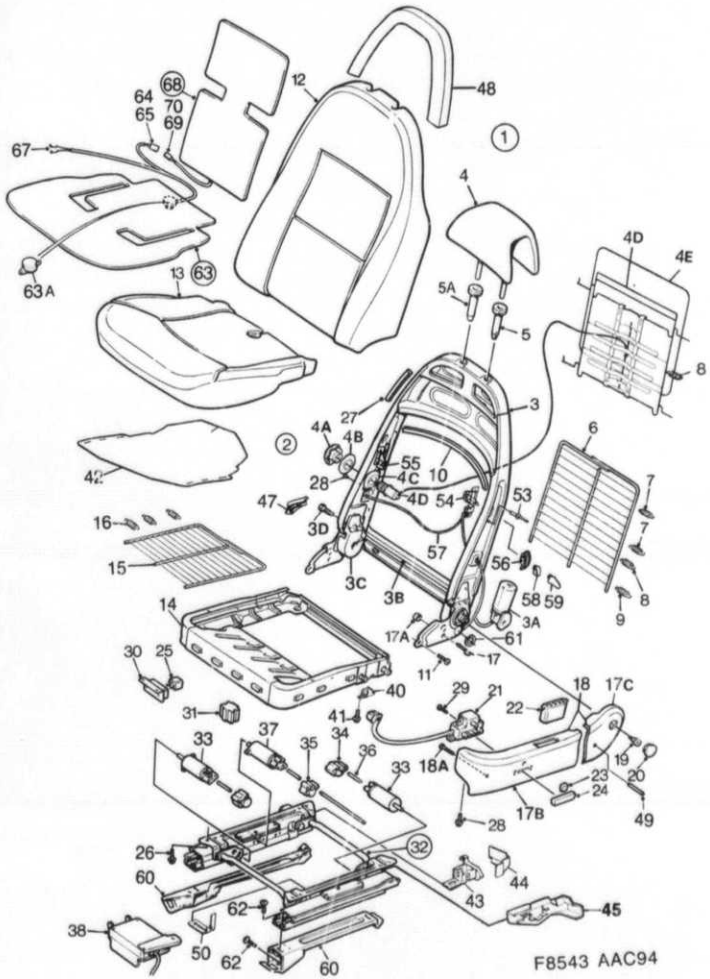

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1050	21	46 53 796		29,229), LH	1	.Switch	.Strömställare	
1060	21	44 62 800		29,228), RH	1	.Switch	.Strömställare	
1070	21	46 53 804		29,229), RH	1	.Switch	.Strömställare	
1080		91 24 090			1	..Contact housing 8-pole, female	..Kontakthus 8-polig, hylsa	4
1090								
1100		91 23 381		29)	1	..Contact housing 7-pole, female	..Kontakthus 7-polig, hylsa	4
1110								
1120	22	40 69 704		29)	1	.Switch	.Strömställare	5
1130	23	95 65 003			1	.Button	.Knapp	5
1140	24	95 65 011			1	.Button	.Knapp	5
1150	25	85 22 310		312)	1	.Relay	.Relä	3
1160	25	85 33 176		313)	1	.Relay	.Relä	3
1170	26	44 96 626			4	.Screw	.Skruv	
1180	27	45 05 491			2	.Strip	.List	
1190	28	79 22 354			X	.Screw	.Skruv	5
1200	29	44 62 206		-1997	4	.Screw	.Skruv	
1210	29	• 47 16 411		1998-	4	.Screw	.Skruv	
1220	30	91 24 199			1	.Contact housing	.Kontakthus	4
1230	31	41 17 768			1	.Connector housing heating pad	.Kontakthus vårmedyna	4
1240								
1250	32	42 13 930		LH	1	.Seat chassis	.Stolchassi	
1260	32	42 13 948		RH	1	.Seat chassis	.Stolchassi	
1270	32	42 13 955		29,260), LH, LHD	1	.Seat chassis	.Stolchassi	
1280	32	46 53 762		29,261), LH, LHD	1	.Seat chassis	.Stolchassi	
1290	32	42 13 963		29,260), RH, RHD	1	.Seat chassis	.Stolchassi	
1300	32	46 53 770		29,261), RH, RHD	1	.Seat chassis	.Stolchassi	
1310	33	40 54 078			2	..Electric motor	..Elmotor	6
1320	34	41 11 506		29)	2	..Potentiometer	..Potentiometer	5
1330	35	44 76 339		29)	1	..Potentiometer	..Potentiometer	
1340	36	44 16 350		29)	3	..Shaft	..Axel	5
1350	37	44 76 131			1	..Electric motor	..Elmotor	6
1360	38	44 62 768		29,228)	1	..Electronic unit	..Elektronikenhet	
1370	38	46 53 705		29,229)	1	..Electronic unit	..Elektronikenhet	
1380		91 23 548		29)	4	...Contact housing electric motor	...Kontakthus elmotor	4
1390								
1400		41 09 195		29)	2	...Contact housing potentiometer	...Kontakthus potentiometer	4
1410								
1420		41 09 187		29)	1	...Contact housing potentiometer	...Kontakthus potentiometer	4
1430								
1440		91 23 555		29)	1	...Contact housing 4-pole, female	...Kontakthus 4-polig, hylsa	4
1450								
1460	40	46 30 372		LH, 3D, CV	1	.Stop	.Stopp	6
1470	40	46 30 380		RH, 3D, CV	1	.Stop	.Stopp	6
1480	41	79 22 354		3D, CV	4	.Screw	.Skruv	5
1490	42	45 34 095			1	.Protection	.Skydd	
1500	43	46 30 703		LH	1	.End cover	.Ändskydd	
1510	43	46 30 711		RH	1	.End cover	.Ändskydd	
1520	44	46 30 687		LH	1	.End cover	.Ändskydd	
1530	44	46 30 695		RH	1	.End cover	.Ändskydd	
1540	45	43 68 916			1	.Cover	.Kåpa	
1550	47	45 34 228		30) 3D, CV, LHD	1	.Cover	.Kåpa	
1560	47	45 34 210		31) 3D, CV, LHD	1	.Cover	.Kåpa	
1570	47	45 34 210		30) 3D, CV, RHD	1	.Cover	.Kåpa	
1580	47	45 34 228		31) 3D, CV, RHD	1	.Cover	.Kåpa	

29. With memory function. Med minnesfunktion.
30. Driver seat Förarstol
31. Passanger seat Passagerarstol
228. Ch. -T2012760, -T7002363
229. Ch. T2012761-, T7002364-
260. Ch. -T2012760, -T7002363
261. Ch. T2012761-, T7002364-
312. Ch. -V2007505, -V7001787
313. Ch. V2007506-, V7001788-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-K14

Seat
Electrically adjustable

Stol
Elmanövrerade

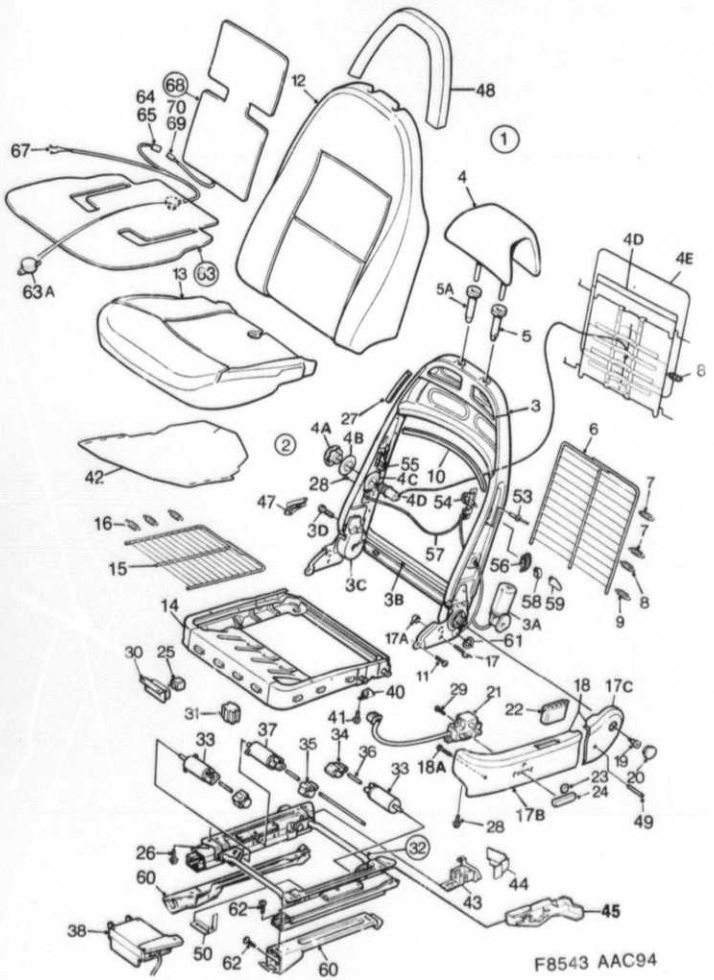

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1590	48	45 34 178		3D, CV	1	.Protection	.Skydd	6
1600	49	44 96 980		3D, CV	1	.Pin	.Pinne	6
1610	50	45 06 747			1	.Bracket	.Konsol	6
1620	53	82 35 178		3D, CV	X	Pop rivet	Popnit	5
1630	54	46 27 287		33), LH, 3D	1	Release mechanism	Frigörningsmekanism	6
1640	54	46 27 295		33), RH, 3D	1	Release mechanism	Frigörningsmekanism	6
1650	54	43 78 675		33), LH, CV	1	Release mechanism	Frigörningsmekanism	6
1660	54	45 06 705		33), RH, CV	1	Release mechanism	Frigörningsmekanism	6
1670	55	43 78 675		31,32), LHD, 3D, CV	1	Release mechanism	Frigörningsmekanism	6
1680	55	45 06 705		31,32), RHD, 3D, CV	1	Release mechanism	Frigörningsmekanism	6
1690	56	43 79 137		3D, CV	X	Slide	Slid	6
1700	57	45 06 713		30), 3D, CV	1	Cable	Wire	5
1710	57	45 06 721		31), 3D, CV	1	Cable	Wire	5
1720	58	45 30 200		3D, CV	X	Knob	Knopp	3
1730	59	45 34 160		3D	2	Knob	Knopp	3
1740	60	44 74 243		33,183), LH	1	Bracket	Konsol	
1750	60	46 54 117		33,184), LH	1	Bracket	Konsol	
1760	60	44 74 250		32), LH	1	Bracket	Konsol	
1770	60	44 96 550		33,183), LH, AIRBAG 2	1	Bracket	Konsol	
1780	60	46 54 125		33,184), LH, AIRBAG 2	1	Bracket	Konsol	
1790	60	44 96 568		32), LH, AIRBAG 2	1	Bracket	Konsol	
1800	60	44 74 268		33,183), RH	1	Bracket	Konsol	
1810	60	46 54 133		33,184), RH	1	Bracket	Konsol	
1820	60	44 74 276		32), RH	1	Bracket	Konsol	
1830	60	44 96 576		33,183), RH, AIRBAG 2	1	Bracket	Konsol	
1840	60	46 54 141		33,184), RH, AIRBAG 2	1	Bracket	Konsol	
1850	60	44 96 584		32), RH, AIRBAG 2	1	Bracket	Konsol	
1860	61	46 30 646		3D, CV	X	Lock washer	Låsbricka	5
1870	62	45 34 293			16	Screw	Skruv	6
1880	63	42 32 484		279)	1	Heating pad	Värmedyna	
1890	63	48 04 324		280)	1	Heating pad	Värmedyna	
1900	63A	47 99 631		26-36°	1	.Thermostat	.Termostat	
1910	63A	47 99 649		20-29°	1	.Thermostat	.Termostat	
1920	64	85 61 631			1	.Connector housing	.Skarvhus	4
1930	65	*85 44 298*		NLS – USE 8582595	2	.Cable terminal	.Kabelsko	5
1940	67	41 15 580			2	.Cable terminal	.Kabelsko	5
1950	68	42 11 595			1	Heating pad	Värmedyna	
1960	69	85 61 623			1	.Contact housing	.Kontakthus	4
1970	70	*85 44 314*		NLS – USE 8582603	2	.Cable terminal	.Kabelsko	5
1980		45 07 026		See page 8B-105, 5-L10	2	Mounting kit	Monteringssats	


30. Driver seat Förarstol
31. Passanger seat Passagerarstol
32. Inner Inre
33. Outer Yttre
183. Ch. -S2030018, -S7019063
184. Ch. S2030019-, S7019064-
279. Ch. -V2004709, -V7000721
280. Ch. V2004710-, V7000722-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

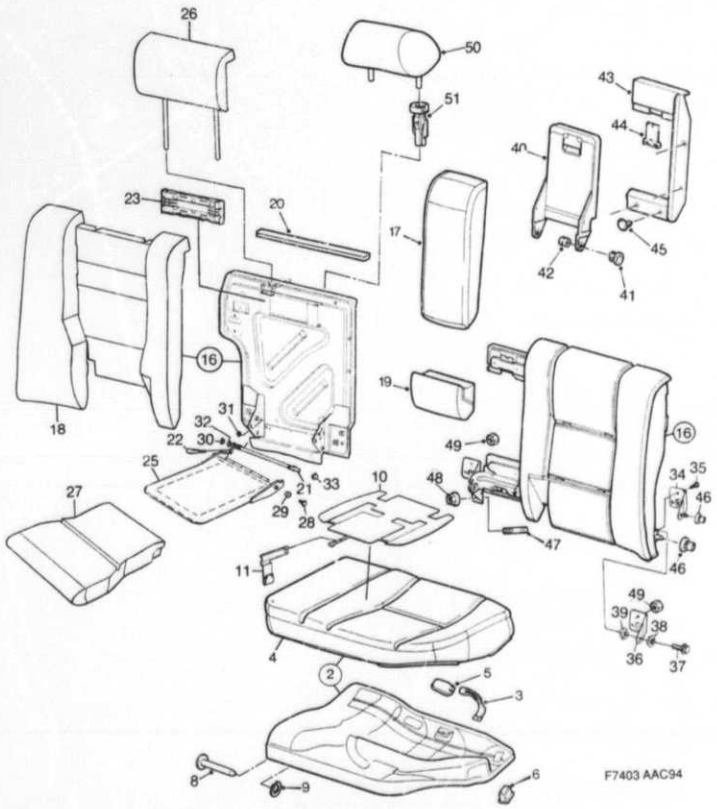

Other interior equipment

5-K16

Rear seat

3D, 5D

Övrig invändig utrustning

Baksäte

3D, 5D

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	*45 33 287*		49,106), 3D, LH NLS – USE 4630877	1	Seat cushion	Sittdyna	
0020	2	*45 33 279*		49,106), 3D, RH NLS – USE 4630885	1	Seat cushion	Sittdyna	
0023	2	46 30 877		49,107), 3D, LH	1	Seat cushion	Sittdyna	
0026	2	46 30 885		49,107), 3D, RH	1	Seat cushion	Sittdyna	
0030	2	45 33 162		49,287), -1995, 5D, LH	1	Seat cushion	Sittdyna	
0040	2	45 33 154		49,287), -1995, 5D, RH	1	Seat cushion	Sittdyna	
0043	2	46 57 375		49), 1996-, 5D, LH	1	Seat cushion	Sittdyna	
0046	2	46 57 342		49), 1996-, 5D, RH	1	Seat cushion	Sittdyna	
0050	3	42 10 571			1	.Lifting strap	.Lyftstropp	
0060	4	*45 33 303*		106), 3D, LH NLS – USE 4630851	1	.Foam plastic cushion	.Skumplastdyna	
0070	4	*45 33 295*		106), 3D, RH NLS – USE 4630869	1	.Foam plastic cushion	.Skumplastdyna	
0073	4	46 30 851		107), 3D, LH	1	.Foam plastic cushion	.Skumplastdyna	
0076	4	46 30 869		107), 3D, RH	1	.Foam plastic cushion	.Skumplastdyna	
0080	4	42 32 302		5D, LH	1	.Foam plastic cushion	.Skumplastdyna	
0090	4	42 32 294		5D, RH	1	.Foam plastic cushion	.Skumplastdyna	
0100	5	42 14 755		LH	1	.Plastic insert	.Plastinsats	
0110	5	42 14 748		RH	1	.Plastic insert	.Plastinsats	
0120	6	44 29 981		LH	1	.Plastic insert	.Plastinsats	
0130	6	44 29 973		RH	1	.Plastic insert	.Plastinsats	
0140	8	42 02 826			4	Pin	Pinne	
0150	9	81 23 465			4	E-circlip	Spärryttare	6
0152	10	42 12 403			2	Heating pad	Värmedyna	4
0154	11	42 14 771			2	Clip	Clips	5
0160	16	42 10 753		50), LH	1	Backrest cushion	Ryggdyna	
0170	16	42 10 746		50), RH	1	Backrest cushion	Ryggdyna	
0180	16	44 60 234		26,50), LH	1	Backrest cushion	Ryggdyna	
0190	16	44 60 226		26,50), RH	1	Backrest cushion	Ryggdyna	
0200	17	42 32 377			1	.Arm rest	.Armstöd	
0210	18	42 32 369		LH	1	.Foam plastic cushion	.Skumplastdyna	
0220	18	42 32 351		RH	1	.Foam plastic cushion	.Skumplastdyna	
0230	18	44 75 851		26), LH	1	.Foam plastic cushion	.Skumplastdyna	
0240	18	44 75 869		26), RH	1	.Foam plastic cushion	.Skumplastdyna	
0250	19	46 30 182			1	.Foam plastic piece	.Skumplastbit	
0260	20	42 13 500			1	.Strip	.List	
0270	21	45 05 244		26), LH	1	.Lever	.Hävarm	6
0280	21	45 05 251		26), RH	1	.Lever	.Hävarm	6
0290	22	44 95 727		26)	1	.Lifting strap	.Lyftstropp	
0300	23	45 32 610		26)	1	.Head restr strg bushing	.Nackstödshylsa	
0310	25	45 32 594		26)	1	.Seat frame	.Sitsram	6
0320	26	44 95 750		26)	1	.Head restraint	.Nackskydd	
0330	27	45 32 602		26)	1	.Foam plastic cushion	.Skumplastdyna	
0340	28	45 32 586		26)	2	.Screw	.Skruv	
0350	29	45 05 210		26)	2	.Plastic sleeve	.Plasthylsa	
0360	30	45 05 994		26)	1	.Plastic sleeve	.Plasthylsa	
0370	31	45 32 578		26)	2	.Rubber ring	.Gummiring	6
0380	32	45 05 228		26)	1	.Plastic sleeve	.Plasthylsa	

26. With integrated child seat Med integrerad barnstol

49. Complete seat cushion are not available as a spare part. To obttain a complete seat cushion, order the following separate spare parts: seat cushion, covers and mounting kit. Komplett sittdyna finns inte som reservdel. För att erhålla komplett sittdyna, beställ följande lösa reservdelar: sittdyna, klädselpåsar och monteringssats.

50. Complete backrest cushion are not available as a spare part. To obtain a complete backrest cushion, order the following separate spare parts: backrest cushion, covers, mounting kit and pos 40-45. Komplett ryggdyna finns inte som reservdel. För att erhålla komplett ryggdyna, beställ följande lösa reservdelar: ryggdyna, klädselpåsar, monteringssats och pos 40-45.

106. Ch. -R2037450

107. Ch. R2037451-

287. Replaced by kit 4761318, which consists of 4657375 and 4657342. Ersatt av sats 4761318, som består av 4657375 och 4657342.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-K18

Rear seat
3D, 5D

Baksäte
3D, 5D

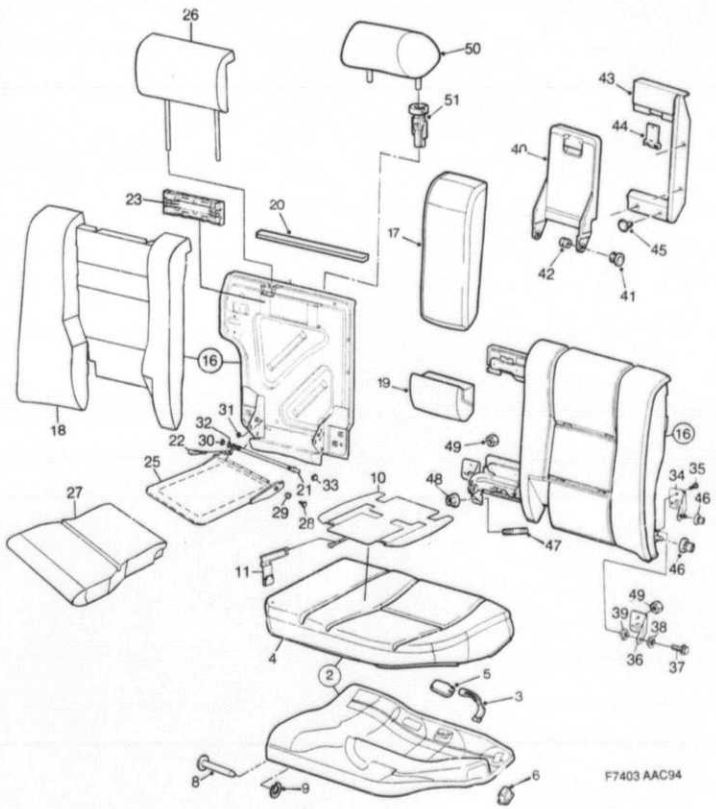

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	33	45 05 236		26)	1	.Plastic sleeve	.Plasthylsa	
0391	34	44 62 966		91), LH	1	Joint	Led	
0392	34	44 62 958		91), RH	1	Joint	Led	
0393	35	44 29 569		91)	4	Screw	Skruv	
0394	36	42 02 842		92), LH	1	Joint	Led	
0395	36	42 02 859		92), RH	1	Joint	Led	
0396	37	40 87 185		92)	2	Hexagon screw	Sexkantsskru	5
0397	38	40 87 847		92)	2	Nut	Mutter	
0398	39	40 87 847		92)	2	Nut	Mutter	
0400	40	44 60 937			1	Hatch	Lucka	
0410	41	44 60 929			2	Bushing	Bussning	
0420	42	44 60 952			2	Expanding ring	Expanderring	
0430	43	44 60 903			1	Frame	Ram	
0440	44	44 60 911			1	Back stop	Mothäll	
0450	45	44 60 945			4	Plug	Plugg	
0460	46	44 16 004		91)	2	Plastic sleeve	Plasthylsa	
0470	47	40 87 219			2	Stud	Pinnskruv	
0480	48	79 77 952			2	Hexagon nut	Sexkantsmutter	5
0485	49	95 65 912		91)	2	Cap nut	Kupolmutter	5
0490	49	95 65 912		92), -1994	6	Cap nut	Kupolmutter	5
0495	49	79 65 732		1995-	6	Nut	Mutter	
0500	50	45 05 483			2	Head restraint	Nackskydd	
0510	51			See page 8B-101, 5-L06		Sleeve	Hylsa	
0520		45 07 042		See page 8B-105, 5-L10	2	Mounting kit	Monteringssats	
0530						seat cushion	sittdyna	
0540		45 07 034		See page 8B-105, 5-L10	2	Mounting kit	Monteringssats	
0550						backrest cushion	ryggdyna	

26. With integrated child seat — Med integrerad barnstol
91. Ch. -R2027494
92. Ch. R2027495-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-K20

Rear seat — Baksäte
Convertible — Cabriolet

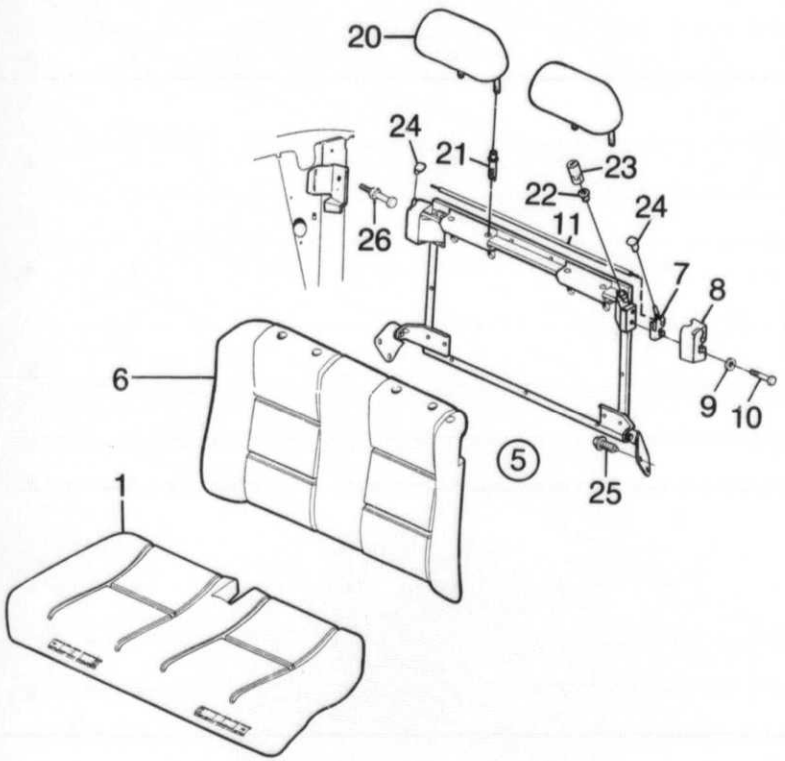

F6065 AAC94

1550

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	44 05 932			1	Foam plastic cushion	Skumplastdyna	
5	44 05 973			1	Backrest cushion	Ryggdyna	
6	43 71 969			1	.Foam plastic cushion	.Skumplastdyna	
7	46 28 178		LH	1	.Lock	.Lås	5
7	46 28 186		RH	1	.Lock	.Lås	5
8	44 95 925		LH	1	.Protecting casing	.Skyddskåpa	6
8	44 95 933		RH	1	.Protecting casing	.Skyddskåpa	6
9	97 87 516			4	.Washer	.Bricka	5
10	79 77 028			4	.Screw	.Skruv	5
11	46 28 160			1	.Cable	.Wire	
20	43 71 977			2	Head restraint	Nackskydd	
21	45 32 792			4	Head restr strg bushing	Nackstödshylsa	
22	45 05 657			1	Lock housing	Låshus	3
23			See page 8A-103, 5-E08		Lock cylinder	Låscylinder	
24	45 05 665		LH	1	Handle	Handtag	5
24	45 05 673		RH	1	Handle	Handtag	5
25	79 78 190			4	Screw	Skruv	5
26	43 12 948		258)	2	Lock pin	Låspinne	5
26	46 56 005		259)	2	Lock pin	Låspinne	5

258. Ch. -T7008078
259. Ch. T7008079-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5-K22

Equip. luggage compart.
Other interior equipment

Utrustning bagagerum
Övrig invändig utrustning

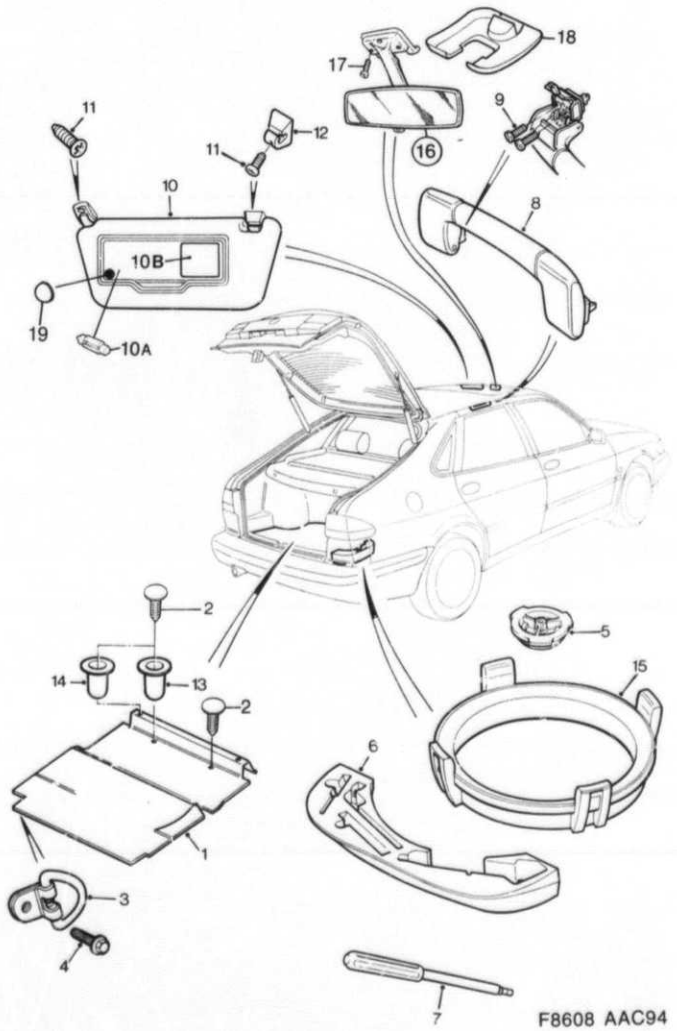

1600	Pos	Part No/Art nr	K §	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	J L
0010	1	*42 74 619*		164) NLS – USE 4641353	1	Boot mat	Bagagerumsmatta	6
0020	1	46 41 353		165)	1	Boot mat	Bagagerumsmatta	
0030	1	43 70 938		CV	1	Floor covering	Golvbeklädnad	
0040	2	96 68 153			4	Clip	Clips	5
0050	3	97 77 749			2	Eye	Ögla	6
0060	3	97 77 749		CV	4	Eye	Ögla	6
0070	4	79 78 190			2	Screw	Skruv	5
0080	4	79 78 190		CV	4	Screw	Skruv	5
0090	5	97 74 290			1	Knob	Vred	5
0100	6	45 09 527			1	Foam plastic piece	Skumplastbit	
0110	6	45 09 634			1	Foam plastic piece	Skumplastbit	
0120						big spare wheel	stort reservhjul	
0130	7			See page 8D-005, 6-C06		Screwdriver	Skruvmejsel	
0140	8	44 21 814			4	Curve handle	Kurvhandtag	5
0150	9	79 22 370			16	Screw	Skruv	5
0160	10	*42 31 155*		218), LH NLS – USE 4901013	1	Sun visor	Solskydd	5
0170	10	*42 04 871*		218), RH NLS – USE 4901021	1	Sun visor	Solskydd	5
0180	10	*47 91 406*		219,354), LH NLS – USE 4901013	1	Sun visor	Solskydd	5
0190	10	47 91 414		219,354), RH	1	Sun visor	Solskydd	5
0200	10	49 01 013		355), -1997, LH	1	Sun visor	Solskydd	5
0210	10	49 01 021		355), -1997, RH	1	Sun visor	Solskydd	5
0212	10	• 49 03 316		1998-, LH	1	Sun visor	Solskydd	
0214	10	• 49 03 324		1998-, RH	1	Sun visor	Solskydd	
0220	10	*43 68 791*		356), LH, US, CA NLS – USE 4368973	1	Sun visor	Solskydd	5
0230	10	*43 68 809*		356), RH, US, CA NLS – USE 4368965	1	Sun visor	Solskydd	5
0240	10	43 68 973		357), -1997, LH, US, CA	1	Sun visor	Solskydd	5
0250	10	43 68 965		357), -1997, RH, US, CA	1	Sun visor	Solskydd	5
0252	10	• 96 99 786		1998-, LH, US, CA	1	Sun visor	Solskydd	
0254	10	• 96 99 794		1998-, RH, US, CA	1	Sun visor	Solskydd	
0260	10	46 06 851		-1997, LH, CV	1	Sun visor	Solskydd	5
0270	10	46 06 869		-1997, RH, CV	1	Sun visor	Solskydd	5
0272	10	49 01 088		1998-, LH, CV	1	Sun visor	Solskydd	5
0274	10	49 01 096		1998-, RH, CV	1	Sun visor	Solskydd	5
0280	10	*43 68 858*		356), LH, CV, US, CA NLS - USE 4368999	1	Sun visor	Solskydd	5
0290	10	*43 68 866*		356), RH, CV, US, CA NLS - USE 4368981	1	Sun visor	Solskydd	5
0300	10	43 68 999		357), LH, CV, US, CA	1	Sun visor	Solskydd	5
0310	10	43 68 981		357), RH, CV, US, CA	1	Sun visor	Solskydd	5
0320	10A			See page 3A-045, 2-B22	1	.Bulb	.Glödlampa	
0330	10B			See page 8D-011, 6-C12 US, CA	2	.Label	.Etikett	
0340								
0350	11	79 63 937			6	Screw	Skruv	5
0360	11	79 68 084		CV	6	Screw	Skruv	5
0370	12	45 11 465		382), (4421822)	2	Holder	Hållare	6
0375	12	• 49 01 047		383)	2	Holder	Hållare	6
0380	12	46 08 683		CV	2	Retainer	Hållare	6
0390	13	95 45 906			2	Sleeve	Hylsa	5


164. Ch. -S2023988
165. Ch. S2023989-
218. Ch. -T2007165
219. Ch. T2007166-
354. Ch. -V2032262
355. Ch. V2032263-
356. Ch. -V2029170, -V7006522
357. Ch. V2029171-, V7006523-
382. Ch. -W2000314
383. Ch. W2000315-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02, 3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

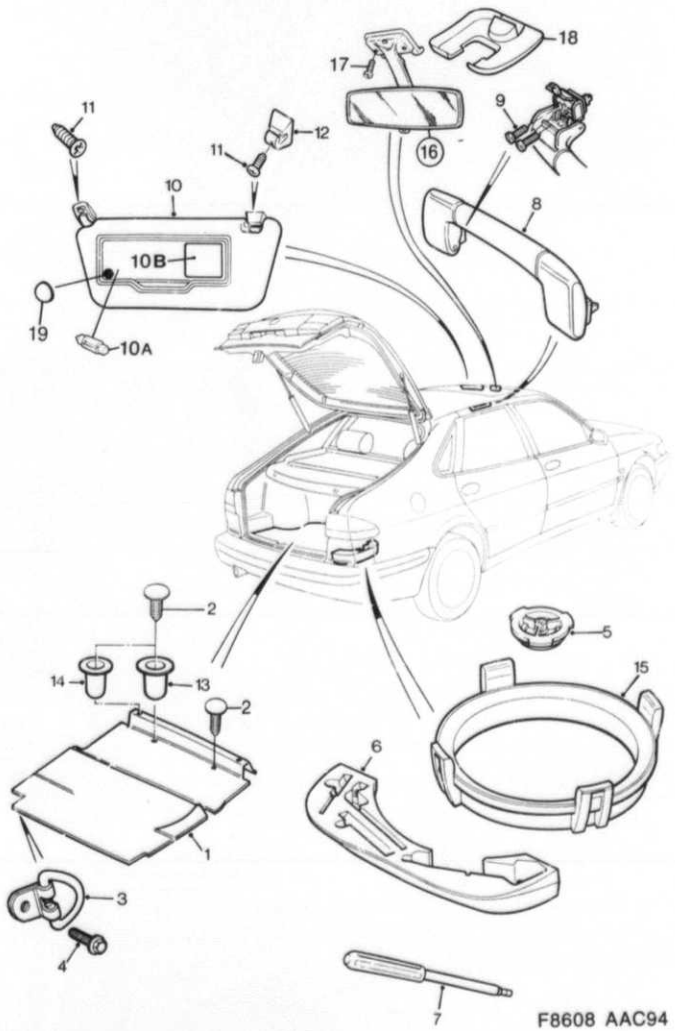

F8608 AAC94

Other interior equipment

5-K24

Equip. luggage compart.
Other interior equipment

Övrig invändig utrustning

Utrustning bagagerum
Övrig invändig utrustning

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400	14	45 09 626			2	Sleeve	Hylsa	
0410	15	45 09 535			1	Spacer ring	Distansring	
0420	16	42 68 876		369), 3D, 5D	1	Rear view mirror	Backspegel	4
0425	16	49 36 084		370), 3D, 5D	1	Rear view mirror	Backspegel	4
0430	16	46 03 106		CV	1	Rear view mirror	Backspegel	4
0440	17	79 75 329		3D, 5D	3	,Screw	,Skruv	5
0450	18			See page 3A-045, 2-B22		Cover	Täcklock	
0460	19	48 88 574		1996-, CV	2	Rubber damper	Gummidämpare	6


369. Ch. -V2041258
370. Ch. V2041259-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

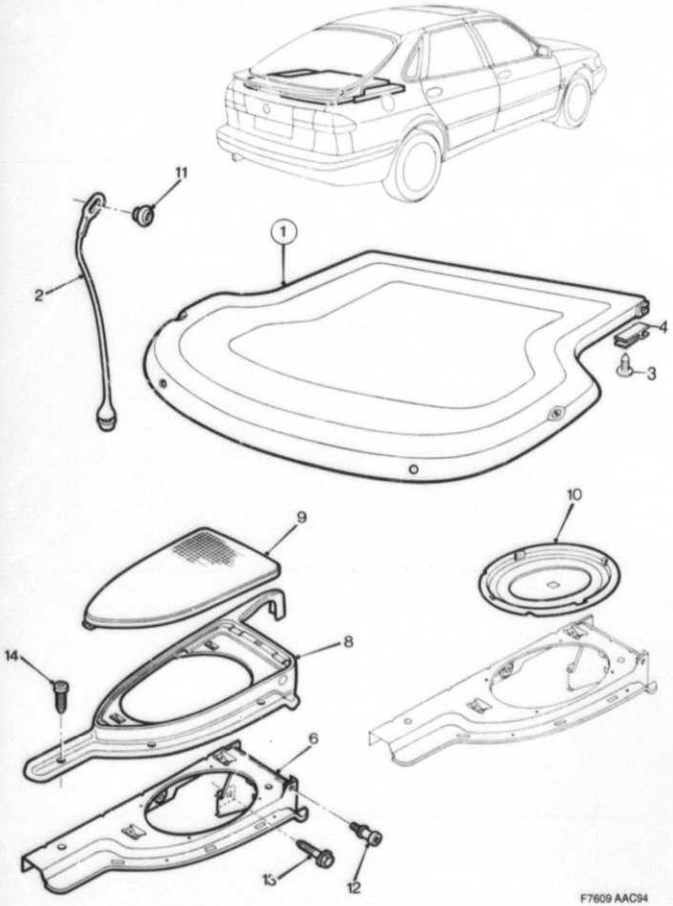

Other interior equipment

5 -L02

Shelf

3D, 5D

Övrig invändig utrustning

Hatthylla

3D, 5D

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 70 084			1	Rear shelf	Hatthylla	5
0040	2	43 88 518			2	.Strap	.Stropp	
0050	3	46 07 040			2	.Screw	.Skruv	
0060	4	43 88 427		LH	1	.Joint	.Led	
0070	4	43 88 435		RH	1	.Joint	.Led	
0100	6	44 70 092		387), LH	1	Bracket	Konsol	5
0110	6	44 70 100		387), RH	1	Bracket	Konsol	5
0112	6	* 49 02 011		388), LH	1	Bracket	Konsol	5
0114	6	* 49 02 029		388), RH	1	Bracket	Konsol	
0120	8	44 70 019		LH	1	Frame	Ram	5
0130	8	44 70 027		RH	1	Frame	Ram	5
0140	9	44 70 035		LH	1	Loudspeaker grille	Högtalargaller	5
0150	9	44 70 043		RH	1	Loudspeaker grille	Högtalargaller	5
0160	10	42 02 461			2	Cover	Avtäckning	5
0165						only cars without loudspeaker	endast bilar utan högtalare	
0166								
0170	11	44 20 766			2	Retainer cap	Fästkapsel	5
0180	12	42 71 557			2	Pivot anchorage	Ledfäste	5
0185	13	79 78 091		113)	8	Screw	Skruv	5
0190	13	79 72 607		114)	8	Screw	Skruv	5
0200	14	79 70 304			12	Screw	Skruv	5

113. Ch. -R2037484
114. Ch. R2037485-
387. Ch. -W2005103
388. Ch. W2005104-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -L04

Safety belt, front seat
3D, 5D

Bilbälte framsäte
3D, 5D

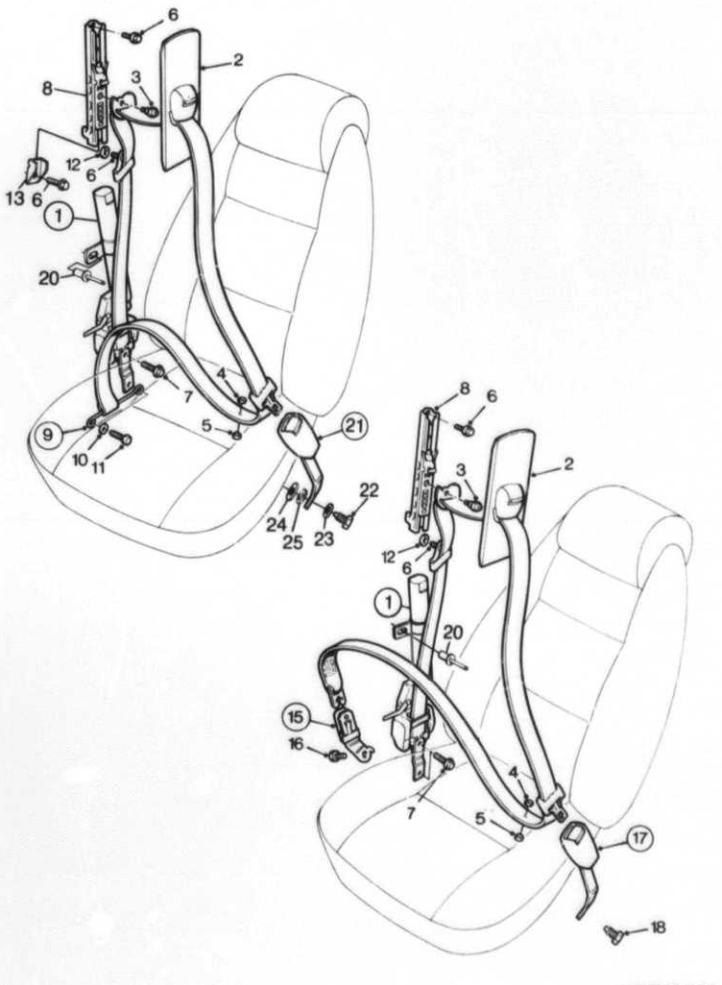

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 14 017		1994, 3D, LH	1	Seat belt	Bilbälte	5
0020	1	44 14 025		1994, 3D, RH	1	Seat belt	Bilbälte	5
0030	1	45 31 513		1995-, 3D, LH	1	Seat belt	Bilbälte	5
0040	1	45 31 521		1995-, 3D, RH	1	Seat belt	Bilbälte	5
0050	1	46 29 606		1996-, 3D, LH, US, CA	1	Seat belt	Bilbälte	5
0060	1	46 29 614		1996-, 3D, RH, US, CA	1	Seat belt	Bilbälte	5
0070	1	42 34 886		1994, 5D, LH	1	Seat belt	Bilbälte	5
0080	1	42 34 894		1994, 5D, RH	1	Seat belt	Bilbälte	5
0090	1	45 31 463		1995-1997, 5D, LH	1	Seat belt	Bilbälte	5
0100	1	45 31 489		1995-1997, 5D, RH	1	Seat belt	Bilbälte	5
0103	1	• 48 49 519		1998-, 5D, LH	1	Seat belt	Bilbälte	
0105	1	• 48 49 527		1998-, 5D, RH	1	Seat belt	Bilbälte	
0110	1	46 29 572		1996-1997, 5D, LH, US,CA	1	Seat belt	Bilbälte	5
0120	1	46 29 580		1996-1997, 5D, RH, US,CA	1	Seat belt	Bilbälte	5
0123	1	• 48 49 543		1998-, 5D, LH, US, CA	1	Seat belt	Bilbälte	
0125	1	• 48 49 550		1998-, 5D, RH, US, CA	1	Seat belt	Bilbälte	
013X	2	42 34 985		LH	1	.Slide	.Slid	5
0140	2	42 00 051		RH	1	.Slide	.Slid	5
0150	3	42 34 993			1	.Screw	.Skruv	5
0160	4	96 17 846			1	.Button	.Knapp	5
0170	5	96 17 853			1	.Button	.Knapp	5
0180	6	40 87 607			X	.Screw	.Skruv	5
0190	7	44 95 065		3D	1	.Screw	.Skruv	5
0200	7	44 95 065		5D	2	.Screw	.Skruv	5
0210	8	42 34 977			1	.Height adjustment	.Höjdjustering	5
0220	9	42 22 964		3D, LH	1	.Slide rail	.Glidskena	
0230	9	42 22 972		3D, RH	1	.Slide rail	.Glidskena	
0240	10	44 95 081		3D	2	..Washer	..Bricka	5
0250	11	44 95 073		3D	2	..Screw	..Skruv	5
0260	12	97 82 236			1	.Lock washer	.Låsbricka	
0270	13	46 28 913		3D	1	.Clamp	.Klämma	
0275	13	46 28 913		1998-, 5D	1	.Clamp	.Klämma	
0280	15	44 75 596		5D, LH	1	End fitting	Ändbeslag	
0290	15	44 75 604		5D, RH	1	End fitting	Ändbeslag	
0300	16	95 86 827			1	.Screw	.Skruv	5
0310	17	45 30 119		5D, LH, SE, EU, GB, ME, AU, PA, LA	1	Buckle	Bilbälteslås	5
0320								
0330	17	44 29 619		5D, LH, US, CA	1	Buckle	Bilbälteslås	5
0340				1995-, 5D, LH, LHD, JP	1			
0350	17	45 30 101		5D, RH, SE, EU, GB, ME, AU, PA, LA	1	Buckle	Bilbälteslås	5
0360								
0370	17	44 29 627		5D, RH, US, CA	1	Buckle	Bilbälteslås	5
0380				1995-, 5D, RH, LHD, JP	1			
0390	17	44 29 601		1995-, 5D, LH, RHD, JP	1	Buckle	Bilbälteslås	5
0400	17	46 56 997		1995-, 5D, RH, RHD, JP	1	Buckle	Bilbälteslås	5
0410		41 17 164			1	.Connector housing	.Kontakthus	4
0420	18	84 99 204		5D	1	.Screw	.Skruv	5
0430	20	79 72 490		1994	2	Rivet	Nit	5
0440	21	45 34 731		3D, LH, SE, EU, GB, ME, AU, PA, LA	1	Buckle	Bilbälteslås	5
0450								
0460	21	45 34 517		3D, LH, US, CA	1	Buckle	Bilbälteslås	5
0470				1995-, 3D, LH, LHD, JP	1			
0480	21	45 34 749		3D, RH	1	Buckle	Bilbälteslås	5
0490	21	45 34 731		1995-, 3D, LH, RHD, JP	1	Buckle	Bilbälteslås	5
0500	21	46 57 078		1995-, 3D, RH, RHD, JP	1	Buckle	Bilbälteslås	5
0510		41 17 164			1	.Connector housing	.Kontakthus	4
0520	22	46 29 135		3D	1	.Screw	.Skruv	5
0530	23	46 29 101		3D	1	.Washer	.Bricka	5
0540	24	46 29 119		3D	1	.Washer	.Bricka	5
0550	25	46 29 127		3D	1	.Washer	.Bricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

5 -L06

Safety belt, rear seat
3D, 5D

Bilbälte, baksäte
3D, 5D

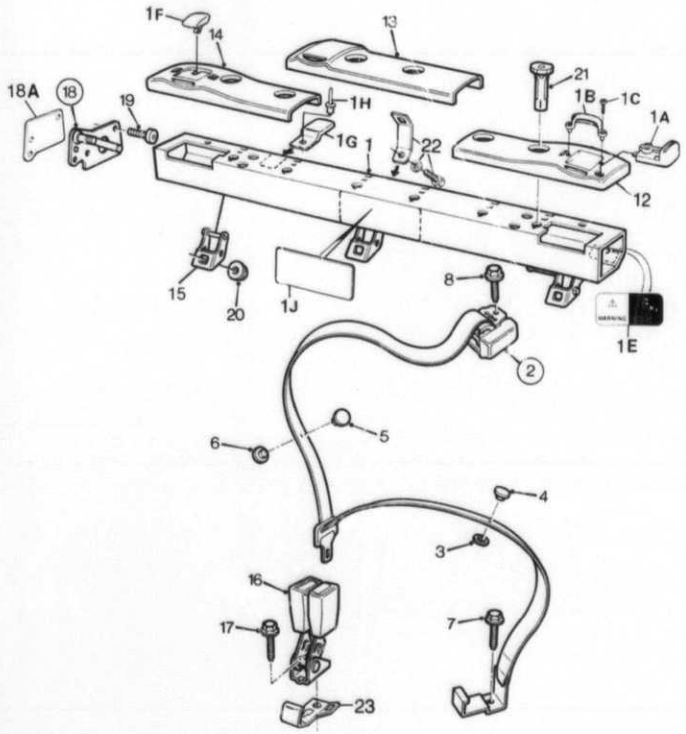

F8609 AAC94

1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	45 31 083			1	Beam	Balk	6
0030	1A	45 32 701			2	.Warning plate	.Varningsskylt	
0040	1B	45 32 719			1	.Handle	.Handtag	
0050	1C	45 32 727			2	.Screw	.Skruv	
0060				1)	1	.Cable	.Wire	
0070	1E			See page 8D-015, 6-C16	2	.Label	.Etikett	
0080	1F	45 32 750			1	.Opening handle	.Öppningshandtag	
0090	1G	45 31 117			2	.Hook	.Krok	
0100	1H	45 32 768			4	.Pop rivet	.Popnit	
0105	1J	45 33 204			1	.Cover	.Avtäckning	
0110	2	42 00 150		LH	1	Seat belt	Bilbälte	5
0115	2	46 29 655		1996-, LH, US, CA	1	Seat belt	Bilbälte	5
0120	2	44 95 115		CENTRE	1	Seat belt	Bilbälte	
0125	2	46 29 663		1996-, CENTRE, US, CA	1	Seat belt	Bilbälte	
0130	2	42 00 168		RH	1	Seat belt	Bilbälte	5
0135	2	46 29 671		1996-, RH, US, CA	1	Seat belt	Bilbälte	5
0140	3	96 17 846			1	.Button	.Knapp	5
0150	4	96 17 853			1	.Button	.Knapp	5
0160	5	43 79 665			1	.Button	.Knapp	5
0170	6	43 79 673			1	.Button	.Knapp	5
0180	7	44 95 065			1	.Screw	.Skruv	5
0190	8	43 79 681			1	.Screw	.Skruv	5
0200	12	44 15 485		55)	1	Cover	Avtäckning	5
0210	12	45 31 091		56)	1	Cover	Avtäckning	5
0220	13	44 15 493			1	Cover	Avtäckning	5
0230	14	44 15 501		55)	1	Cover	Avtäckning	5
0240	14	45 31 109		56)	1	Cover	Avtäckning	5
0250	15	49 00 999		RH	1	Hinge	Gångjärn	6
0260	16	44 14 058		LH	1	Buckle	Bilbältesläs	6
0270	16	44 14 066		RH	1	Buckle	Bilbältesläs	6
0280	17	44 95 065			1	.Screw	.Skruv	5
0290	18	44 14 033		LH	1	Side part	Sidodel	6
0300	18	44 14 041		RH	1	Side part	Sidodel	6
0310	18A	42 95 440			1	.Spacer washer	.Distansbricka	
0320	19	79 78 190			3	.Screw	.Skruv	5
0330	20	43 45 419			3	Nut	Mutter	5
0340	21	*44 95 099*		79) NLS – USE 4534707	6	Head restr strg bushing	Nackstödshylsa	
0345	21	45 34 707		81)	6	Head restr strg bushing	Nackstödshylsa	
0350	22	45 05 467		CA	3	Attaching washer	Fästbricka	
0360	22	45 05 459		AU	3	Attaching washer	Fästbricka	
0370	23	43 79 640			1	Hook	Krok	6
0380	23	45 31 356		26)	1	Hook	Krok	6


1. Not as separate spare part. Ej som separat reservdel.
26. With integrated child seat Med integrerad barnstol
55. Ch. -R2003814
56. Ch. R2003815–
79. Ch. -R2021112
81. Ch. R2021113–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

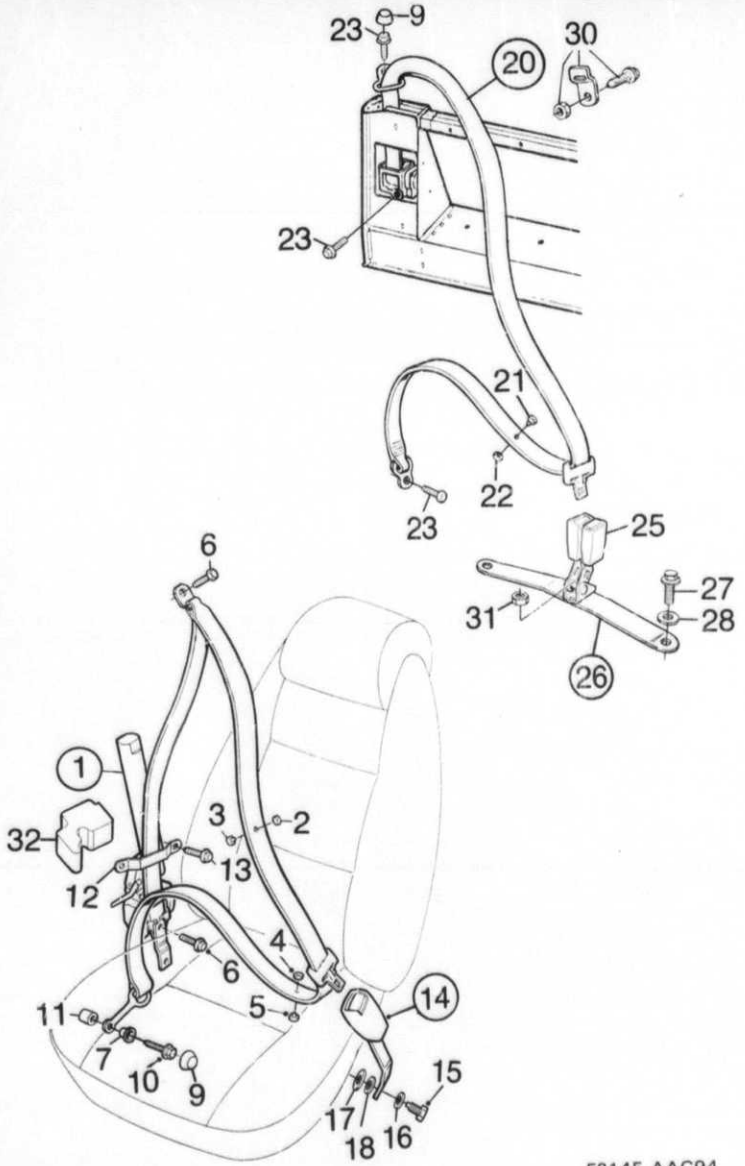

F8145 AAC94

Other interior equipment

5 -L08

Safety belt
Convertible

Övrig invändig utrustning

Bilbälte
Cabriolet

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 79 608		10), LH	1	Seat belt	Bilbälte	5
0020	1	43 79 616		10), RH	1	Seat belt	Bilbälte	5
0022	1	45 31 539		11), -1995, LH	1	Seat belt	Bilbälte	5
0024	1	45 31 547		11), -1995, RH	1	Seat belt	Bilbälte	5
0026	1	46 29 630		1996-, LH	1	Seat belt	Bilbälte	5
0028	1	46 29 648		1996-, RH	1	Seat belt	Bilbälte	5
0030	2	43 79 665			1	.Button	.Knapp	5
0040	3	43 79 673			1	.Button	.Knapp	5
0050	4	96 17 846			1	.Button	.Knapp	5
0060	5	96 17 853			1	.Button	.Knapp	5
0070	6	44 95 065			2	.Screw	.Skruv	5
0080	7	46 56 930			1	.Spacer	.Distans	
0090	9	46 29 093			X	Cover	Avtäckning	
0100	10	45 31 364			2	Screw	Skruv	5
0110	11	45 31 232			2	Spacer sleeve	Distanshylsa	5
0120	12	44 60 846			2	Deflector	Avlänkare	5
0130	13	79 78 653			2	Screw	Skruv	5
0140	14	45 34 731		LH, SE,EU,GB,ME,AU,PA,LA	1	Buckle	Bilbälteslås	5
0150	14	45 34 517		LH, US, CA	1	Buckle	Bilbälteslås	5
0160	14	45 34 749		RH	1	Buckle	Bilbälteslås	5
0170		41 17 164			1	.Connector housing	.Kontakthus	4
0180	15	46 29 135			1	.Screw	.Skruv	5
0190	16	46 29 101			1	.Washer	.Bricka	5
0200	17	46 29 119			1	.Washer	.Bricka	5
0210	18	46 29 127			1	.Washer	.Bricka	5
0250	20	43 79 624		-1995, LH	1	Seat belt	Bilbälte	5
0260	20	43 79 632		-1995, RH	1	Seat belt	Bilbälte	5
0263	20	46 29 705		1996-, LH	1	Seat belt	Bilbälte	5
0266	20	46 29 713		1996-, RH	1	Seat belt	Bilbälte	5
0270	21	96 17 846			1	.Button	.Knapp	5
0280	22	96 17 853			1	.Button	.Knapp	5
0290	23	44 95 065			3	.Screw	.Skruv	5
0310	25	43 79 780			1	Buckle	Bilbälteslås	6
0320	26	46 28 921			1	Attaching plate	Fästplåt	
0330	27	44 95 065			2	.Screw	.Skruv	5
0340	28	46 29 390			2	.Washer	.Bricka	
0360	30	45 05 269		CA	1	Attaching washer	Fästbricka	
0370	30	45 05 475		AU	1	Attaching washer	Fästbricka	
0380	31	73 99 793			1	Lock nut	Låsmutter	5
0390	32	43 24 125			2	Seal	Tätning	5

10. CV, ch. -S7009999
11. CV, ch. S7010000-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

Complete set
5-L10
Car body, internal

Satser
Kaross, invändig

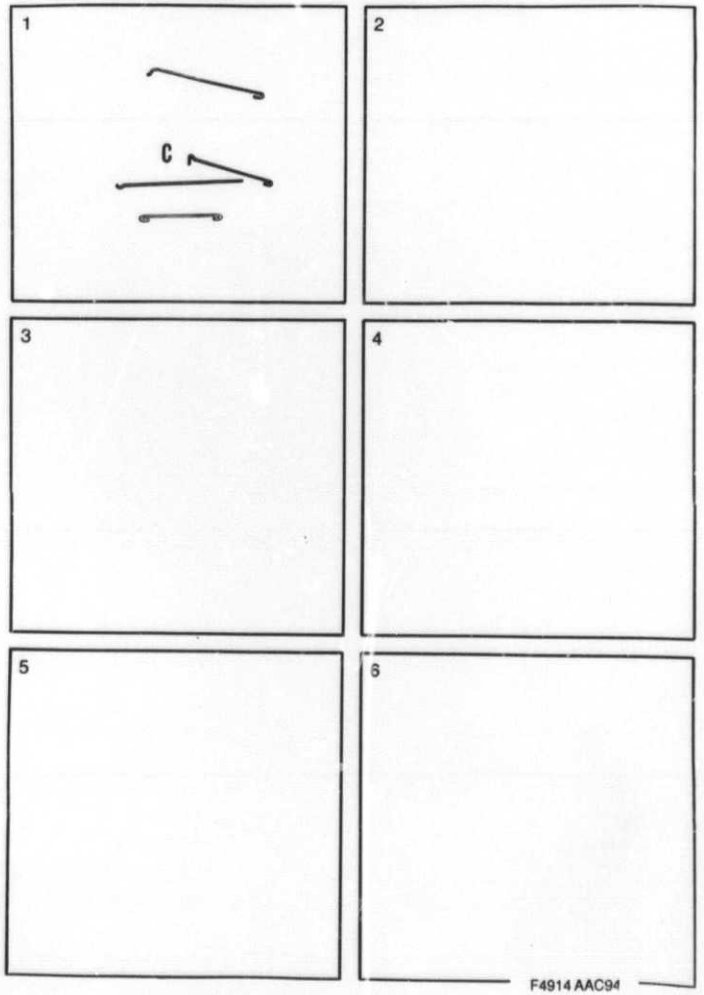

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 07 026			X	Mounting kit	Monteringssats	
0020						front seat	framstol	
0030		98 28 641			3	Wire rod	Trådten	5
0040				1)	2	Wire rod	Trådten	
0050		*98 49 498*		NLS – USE 9450685	30	Clamp	Klammer	5
0060								
0070	1	45 07 034			X	Mounting kit	Monteringssats	
0080						rear seat	baksäte	
0090						backrest cushion	ryggdyna	
0100		96 94 969			2	Wire rod	Trådten	5
0110				1)	1	Wire rod	Trådten	
0120		95 84 723			1	Wire rod	Trådten	5
0130		*98 49 498*		NLS – USE 9450685	10	Clamp	Klammer	5
0140								
0150	1	45 07 042			X	Mounting kit	Monteringssats	
0160						rear seat	baksäte	
0170						seat cushion	sittdyna	
0180		98 97 927		1)	2	Wire rod	Trådten	6
0190		96 94 969		1)	1	Wire rod	Trådten	5
0200		*98 49 498*		NLS – USE 9450685	15	Clamp	Klammer	5
0210								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-H06
Upholstery	5-H22
Other interior equipment	5-J24
Complete sets	5-L10

8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041

TABLE OF CONTENTS

0010	**Heating and ventilation system**		
0020	Control panel	8C : 5	6-A06
0030	Air inlett, compartment	8C : 7	6-A08
0040	Fan unit	8C : 9	6-A10
0050	Climate unit, 216)	8C : 11	6-A12
0060	Climate unit, 217)	8C : 17	6-A18
0070	Draft channels	8C : 21	6-A22
0080	AC compressor	8C : 25	6-B02
0090	AC condenser	8C : 27	6-B04
0100			
0105			
0110			
0120			
0130			

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

0042
0010
0020
0030
0040
0050
0060
0070
0080
0085
0090
0100
0110
0150
0160
0170
0180
0190
0200
0210
0220
0225
0230
0240
0250

INNEHÅLLSFÖRTECKNING

Värme- och ventilationssystem

Reglagepanel	8C : 5	6-A06
Luftintag, kupe	8C : 7	6-A08
Fläktenhet	8C : 9	6-A10
Klimataggregat, 216)	8C : 11	6-A12
Klimataggregat, 217)	8C : 17	6-A18
Fördelningskanaler	8C : 21	6-A22
AC kompressor	8C : 25	6-B02
AC kondensor	8C : 27	6-B04

SUMARIO

Sistema de calefaccion y ventilacion

Panel mando	8C : 5	6-A06
Toma aire, compartimento	8C : 7	6-A08
Ventilador	8C : 9	6-A10
Unidad de climatizacion 216)	8C : 11	6-A12
Unidad de climatizacion 217)	8C : 17	6-A18
Canales de distribucion	8C : 21	6-A22
AC compresor	8C : 25	6-B02
AC condensador	8C : 27	6-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX

Heating and ventilation system	6-A06

6-A06

Control panel

Reglagepanel

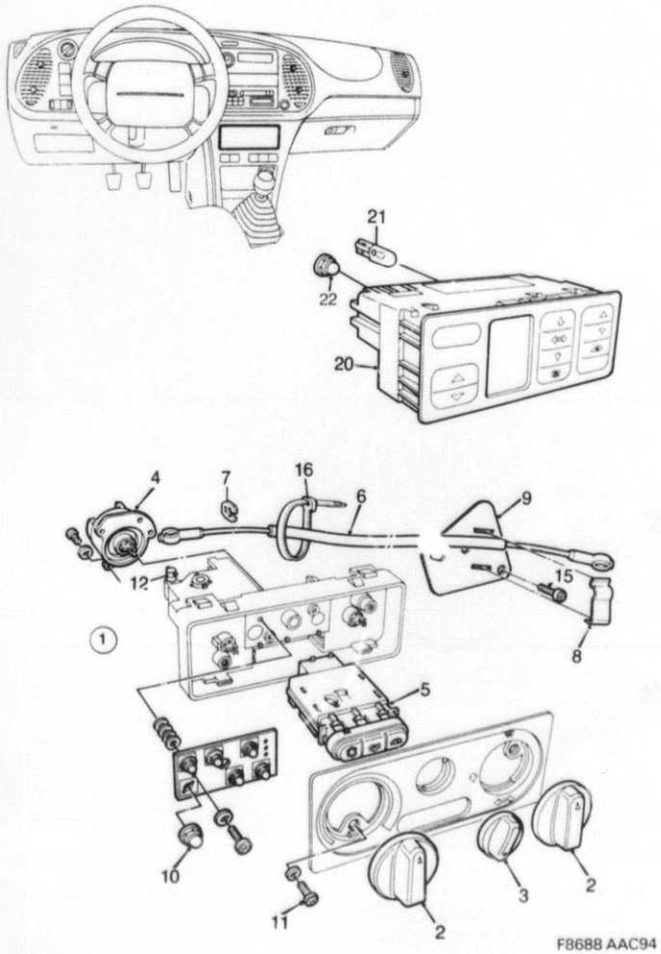

F8688 AAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 65 052*		371) NLS – USE 4867040	1	Control panel	Reglagepanel	5
0020	1	48 67 040		372)	1	Panel	Panel	5
0030	1	*43 67 173*		371) AC NLS – USE 4867057	1	Control panel	Reglagepanel	5
0040	1	48 67 057		372) AC	1	Panel	Panel	5
0050	2	43 65 748			2	.Hand wheel	.Ratt	3
0060	3	43 65 755			1	.Hand wheel	.Ratt	3
0070	4	43 65 763			1	.Switch	.Strömställare	3
0080								
0090	5	43 65 771		220)	1	.Switch panel	.Strömställarpanel	5
0100	5	48 68 436		221)	1	.Button kit	.Knappsats	5
0110	5	*43 65 789*		220) AC NLS – USE 4868444	1	.Switch panel	.Strömställarpanel	5
0120	5	48 68 444		221) AC	1	.Button kit	.Knappsats	5
0130								
0140	6	*43 65 797*		59) NLS – USE 7495286	1	.Control cable	.Reglagewire	5
0150	6	74 95 286		76)	1	.Control cable	.Reglagewire	5
0160	7	43 67 264			1	.Clip	.Clips	5
0170	8	96 22 432			1	.Clamp	.Klammer	5
0180	9	96 23 315			1	.Attaching plate	.Fästplåt	6
0190	10	96 25 575			3	.Bulb	.Glödlampa	4
0200	11	43 67 199			2	.Screw	.Skruv	5
0210	12	74 95 294			1	.Lever	.Hävarm	5
0220								
0230	15	79 71 393			1	Screw	Skruv	5
0240	16	79 71 864		59)	1	Tensioning band	Spännband	5
0250								
0260	20	42 30 595		7,222) ACC	1	Control panel	Reglagepanel	5
0270	20	47 55 955		7,223) ACC	1	Control panel	Reglagepanel	5
0280	21	43 83 782			1	.Bulb	.Glödlampa	4
0290	22	96 25 575			3	.Bulb	.Glödlampa	4

7. Also available as exchange unit. Finns även som utbytesenhet.
59. Ch. -R2017502
76. Ch. R2017503-
220. Ch. -T2018456
221. Ch. T2018457-
222. Ch. -T2015713
223. Ch. T2015714-
371. Ch. -T2040067, -T7010099
372. Ch. T2040068-, T7010100-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system 6-A06

6-A08

Air inlet, compartment
Luftintag, kupe

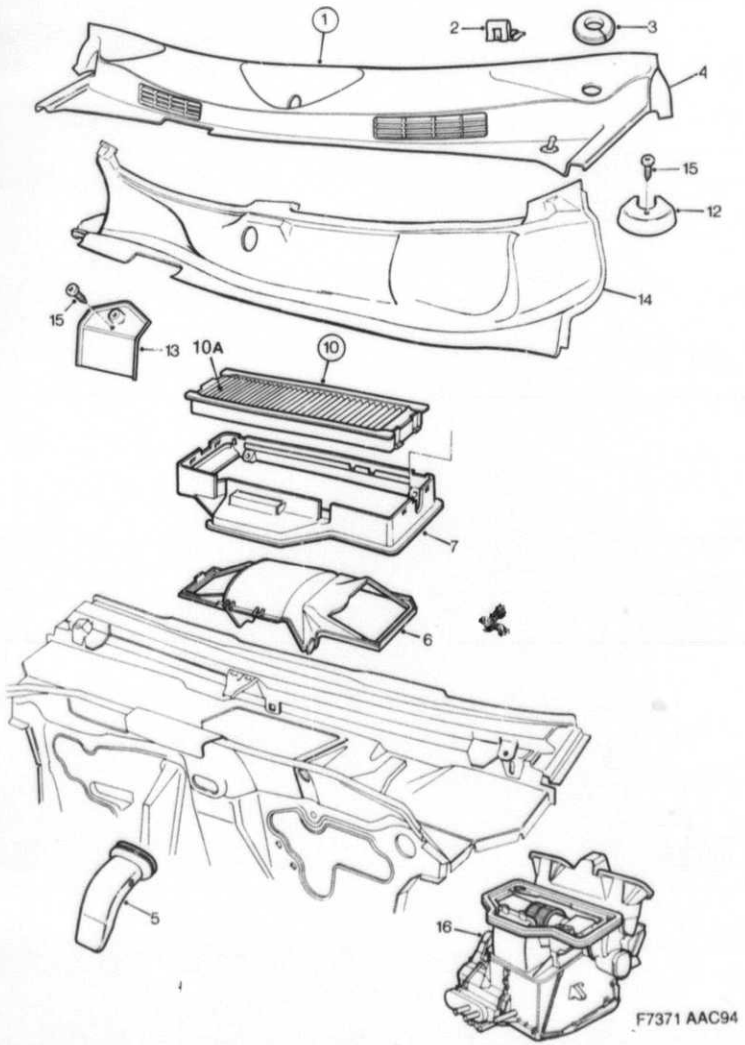

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 30 231		LHD	1	Cover	Avtäckning	5
0020	1	43 65 656		RHD	1	Cover	Avtäckning	5
0030	2	43 66 233			2	.Clip	.Clips	5
0040	3	43 65 706		-1995	2	.Grommet	.Genomföring	5
0050	3	47 55 518		1996-	2	.Grommet	.Genomföring	5
0060	4	43 66 902		LH	1	.Corner	.Hörn	5
0070	4	43 66 910		RH	1	.Corner	.Hörn	5
0080								
0090	5	42 30 348			1	Grommet	Genomföring	5
0100	6	43 65 268			1	Cover	Kåpa	6
0110	7	*43 64 766*		124) NLS - USE 4632683	1	Water drainage	Vattenavledare	5
0120	7	46 32 683		125)	1	Water drainage	Vattenavledare	5
0130	10	*42 30 322*		124) NLS - USE 4632493	1	Air filter	Luftfilter	2
0140	10	46 32 493		125)	1	Compartment filter	Kupefilter	2
0150	10A	*43 64 790*		124) NLS - USE 4632493	1	.Filter	.Filter	2
0160	12	43 65 854			1	Drain	Dränering	5
0170	13	43 65 847		162)	1	Drain	Dränering	5
0180								
0190	14	46 32 980		163,285)	1	Cover	Avtäckning	5
0200	14	48 67 289		286)	1	Cover	Avtäckning	5
0210	14	46 32 998		163) RHD	1	Cover	Avtäckning	5
0220								
0230	15	79 78 638			2	Screw	Skruv	5
0240	16			See page 8C-009, 6-A10		Fan unit	Fläktenhet	

124. Ch. -R2045340
125. Ch. R2045341-
162. Ch. -S2023909
163. Ch. S2023910-
285. Ch. -V2004980, -V7000539
286. Ch. V2004981-, V7000540-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

6-A10

Fan unit
Fläktenhet

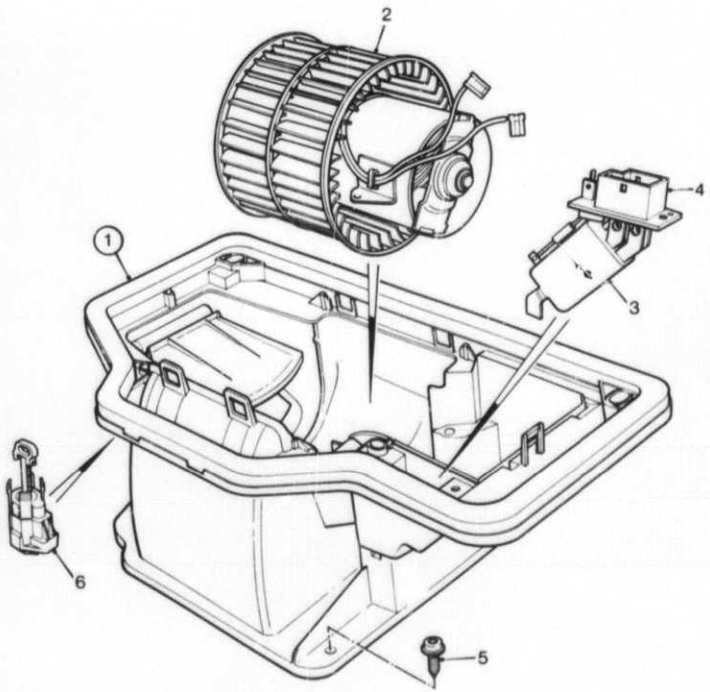

F5643 AAC94

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 66 746		-1995,AC, HEAT/VENT, LHD	1	Compartment fan	Kupefläkt	5
0020	1	46 35 330		1996-,AC, HEAT/VENT, LHD	1	Fan housing	Fläkthus	5
0030	1	43 66 753		-1995,AC, HEAT/VENT, RHD	1	Compartment fan	Kupefläkt	5
0040	1	46 35 355		1996-,AC, HEAT/VENT, RHD	1	Fan housing	Fläkthus	5
0050	1	43 66 928		-1995,ACC, LHD	1	Compartment fan	Kupefläkt	5
0060	1	46 35 322		1996-,ACC, LHD	1	Fan housing	Fläkthus	5
0070	1	43 66 936		-1995,ACC, RHD	1	Compartment fan	Kupefläkt	5
0080	1	46 35 348		1996-,ACC, RHD	1	Fan housing	Fläkthus	5
0090	2	*43 66 944*		201) NLS – USE 4758819	1	,Fan unit	,Fläktenhet	4
0100	2	*46 35 041*		202,248) NLS – USE 4758819	1	,Fan unit	,Fläktenhet	4
0110	2	47 58 819		249)	1	,Fan unit	,Fläktenhet	4
0120	3	47 58 272		AC, HEAT/VENT (4366969)	1	,Series resistance	,Förkopplingsmotstånd	5
0130	4	43 66 951		ACC	1	,Connector housing	,Kontakthus	4
0140	5	79 72 979			4	Screw	Skruv	5
0150								
0160	6	45 41 116		288) RECIRC.	1	Electric motor	Elmotor	5
0170	6	47 59 536		289) RECIRC.	1	Electric motor	Elmotor	5


201. Ch. -S2041729, -S7022952
202. Ch. S2041730-, S7022953-
248. Ch. -T2029364, -T7007449
249. Ch. T2029365-, T7007450-
288. Ch. -V2010788, -V7001796
289. Ch. V2017892-, V7001797-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system 6-A06

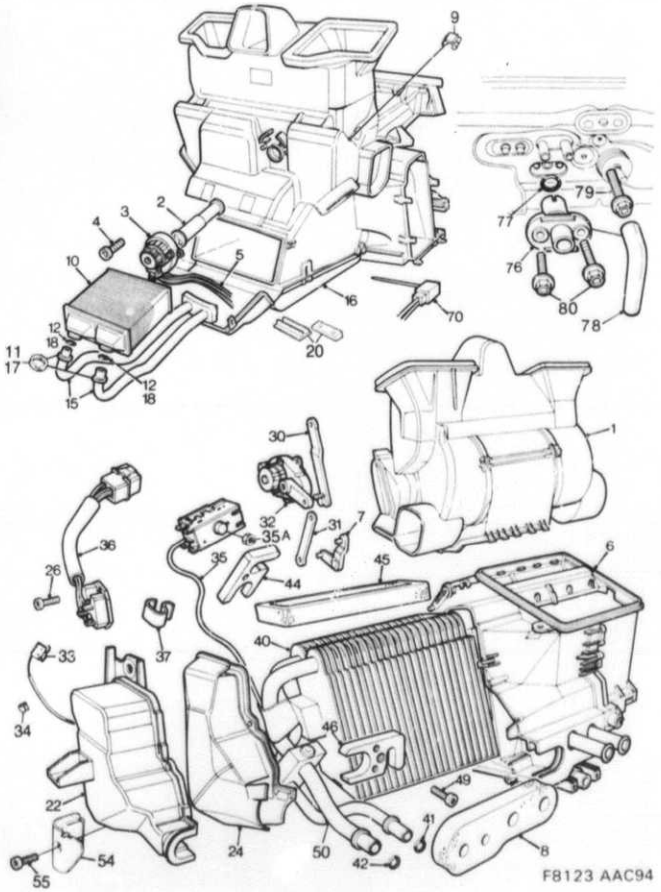

Heating and ventilation

6-A12 *Climate unit 216)*

Värme och ventilation

Klimataggregat 216)

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0800								
0010	1	*43 66 365*		206) NLS – USE 4635843	1	Distribution housing	Fördelningshus	6
0020	1	46 35 843		207)	1	Distribution housing	Fördelningshus	6
0030	2	43 64 279			1	Control shaft	Reglageaxel	5
0040	3	43 65 474		ACC	1	Electric motor	Elmotor	4
0050	4	79 71 393			2	Screw	Skruv	5
0060	5	43 66 555		ACC, LHD	1	Cable harness	Ledningsnät	6
0070	5	43 66 852		ACC, RHD	1	Cable harness	Ledningsnät	6
0080								
0090	6	43 66 373		206) LHD	1	Heat exchanger housing	Värmeväxlarhus	6
0100	6	*46 35 850*		207) LHD NLS – USE 4755997, 4758827	1	Heat exchanger housing	Värmeväxlarhus	6
0110	6	43 66 779		206) RHD	1	Heat exchanger housing	Värmeväxlarhus	6
0120	6	46 35 868		207) RHD	1	Heat exchanger housing	Värmeväxlarhus	6
0130	7	45 42 239		LHD, RHD	1	.Lever	.Hävarm	5
0140	7	43 66 886		RHD	1	.Lever	.Hävarm	5
0150								
0160	8	*43 66 654*		111) NLS – USE 4634226	1	Seal	Tätning	5
0170	8	46 34 226		112)	1	Seal	Tätning	5
0180	9	96 25 989		137)	2	Clamp	Klämma	5
0190								
0200	10	86 05 495			1	Heat exchanger	Värmeväxlare	4
0210	11	43 66 423			2	.Snap-on coupling	.Snabbkoppling	5
0220	12	[illegible] 431			2	.O-ring	.O-ring	2
0230		[illegible] 876		207)	1	Insulation	Isolering	
0240								
0250	15	74 95 005		LHD	1	Tube	Rör	5
0260	15	74 95 021		RHD	1	Tube	Rör	5
0270	16	*43 66 381*		LHD NLS – USE 4755443	1	.Oil pan	.Tråg	5
0280	16	43 66 787		RHD	1	.Oil pan	.Tråg	5
0290	17	43 66 423			2	.Snap-on coupling	.Snabbkoppling	5
0300	18	43 66 431			2	.O-ring	.O-ring	2
0310								
0320	20	45 42 999			1	Kit	Sats	
0330						Fastener	Fästelement	
0340								
0350	22	74 95 047		ACC, LHD	1	Cover	Lock	5
0360	22	74 95 054		ACC, RHD	1	Cover	Lock	5
0370	22	74 95 062		AC, HEAT/VENT, LHD	1	Cover	Lock	5
0380	22	74 95 070		AC, HEAT/VENT, RHD	1	Cover	Lock	5
0390	24	*43 66 803*		NLS – USE 4867958	1	.Seal	.Tätning	4
0400	26	80 59 230			4	Screw	Skruv	5
0410								
0420	30	43 66 498		ACC, LHD, UPER	1	Link arm	Länkarm	5
0430	30	43 66 837		ACC, RHD, UPER	1	Link arm	Länkarm	5
0440	30	43 66 498		207) LHD, AC, HEAT/VENT	1	Link arm	Länkarm	5
0450	30	43 66 837		207) RHD, AC, HEAT/VENT	1	Link arm	Länkarm	5
0460								
0470	31	43 66 506		140) ACC, LOWER	1	Link arm	Länkarm	5
0480	31	46 34 978		141) ACC, LOWER	1	Link arm	Länkarm	5
0490								
0500	31	43 66 662		140) AC, HEAT/VENT,LOWER	1	Link arm	Länkarm	5

111. Ch. -R2037480
112. Ch. R2037481-
137. Ch. S2002815-
140. Ch. -S2005974
141. Ch. S2005975-
206. Ch. -S2041979, -S7023605
207. Ch. S2041980-, S7023606-
216. Ch. Heat/Vent LHD -T2005479, -T7002464, RHD -T2005702, -T7001968; 4cyl AC LHD -T2003847, -T7001016, RHD -T2003601, -T7000930; 4cyl ACC LHD -T2004186, -T7001278, RHD -T2004100, -T7001128; 6cyl AC LHD -T2007708, -T7003845, RHD -T2003601, -T7000930; 6cyl ACC LHD -T2006714, -T7001332, RHD -T2004100, -T7001128.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

6-A14 Climate unit 216) / Klimataggregat 216)

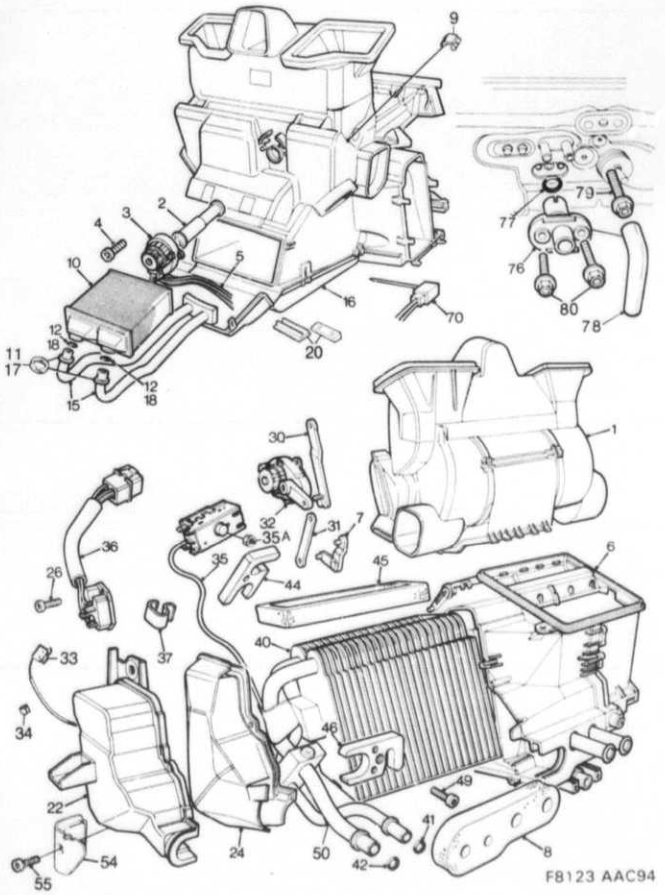

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	31	46 34 960		141,206) AC, HEAT/VENT,LOWER	1	Link arm	Länkarm	5
0530	31	46 34 978		207) AC, HEAT/VENT,LOWER	1	Link arm	Länkarm	5
0550	32	43 65 466		ACC	1	Electric motor	Elmotor	4
0560		46 35 884		207) AC, HEAT/VENT	1	Bracket	Hållare	5
0570		46 35 900		207) AC, HEAT/VENT	1	Pivot arm	Ledarm	5
0590	33	46 32 279		8) AC, ACC	1	Microswitch	Mikrobrytare	5
0600	34	71 56 409		8) AC, ACC	1	Clamp	Klammer	5
0620	35	*43 66 522*		-1994, AC, ACC NLS – USE 4635231	1	Thermo contact	Termokontakt	4
0630	35	*46 32 956*		1995-, AC, ACC NLS – USE 4635231	1	Thermo contact	Termokontakt	4
0640	35A	85 66 598		AC, ACC	1	.Nut	.Mutter	5
0650	36	*42 30 645*		ACC NLS – USE 7495930	1	Control unit	Reglerdon	5
0660	37	96 29 197		AC, ACC	1	Clamp	Klamma	5
0680	40	74 95 088		133) LHD, 4-CYL	1	Evaporator	Förångare	5
0690	40	74 95 419		134) LHD, 4-CYL	1	Evaporator	Förångare	5
0700	40	74 95 104		52) LHD, 4-CYL	1	Evaporator	Förångare	5
0710	40	74 95 096		RHD	1	Evaporator	Förångare	5
0720	40	74 95 104		LHD, 6-CYL	1	Evaporator	Förångare	5
0730	41	43 18 036			2	.O-ring	.O-ring	2
0740	42	43 18 044			2	.O-ring	.O-ring	2
0750	44	43 66 530		LHD, 4-CYL	1	.Tensioning plate	.Spännplatta	6
0760	44	43 66 530		RHD	1	.Tensioning plate	.Spännplatta	6
0770	45	43 66 605		206)	1	.Seal	.Tätning	4
0780	45	46 35 918		207)	1	.Seal	.Tätning	4
0790	46	43 66 738		LHD, 4-CYL	1	.Tensioning plate	.Spännplatta	6
0800	46	43 66 738		RHD	1	.Tensioning plate	.Spännplatta	6
0810	49	80 59 446		LHD, 4-CYL	2	.Screw	.Skruv	5
0820	49	80 59 446		RHD	2	.Screw	.Skruv	5
0830	50			1)	1	.Tube	.Rör	
0850	54	43 67 900		LHD	1	.Cover	.Kåpa	6
0860	54	43 67 934		RHD	1	.Cover	.Kåpa	6
0870	55	45 41 132			4	.Screw	.Skruv	5
0890	70	94 82 597		MIXED AIR	1	Sensor	Givare	4
0910	75	45 41 090		117)	1	Hose	Slang	3
0920	76	43 64 600		117)	1	Water drainage	Vattenavledare	6
0930	77	43 64 642		117)	1	O-ring	O-ring	2
0940	78	46 32 972		118)	1	Water drainage	Vattenavledare	5
0950	79	43 64 626			1	Screw	Skruv	5
0960	80	43 64 634			2	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
8. For tropical market: ME, LA, AU, HK, SG, TH, CY. För tropisk marknad: ME, LA, AU, HK, SG, TH, CY
52. For cars with intake air heat plate. För bilar med värmeplatta.
117. Ch. -R2042642
118. Ch. R2042643-
133. Ch. -S2000511, -S7010247
134. Ch. S2000512-, S7010248-
141. Ch. S2005975-
206. Ch. -S2041979, -S7023605
207. Ch. S2041980-, S7023606-
216. Ch. Heat/Vent LHD -T2005479, -T7002464, RHD -T2005702, -T7001968; 4cyl AC LHD -T2003847, -T7001016, RHD -T2003601, -T7000930; 4cyl ACC LHD -T2004186, -T7001278, RHD -T2004100, -T7001128, 6cyl AC LHD -T2007708, -T7003845, RHD -T2003601, -T7000930; 6cyl ACC LHD -T2006714, -T7001337, RHD -T2004100, -T7001128.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

6-A16 *Climate unit 216)*

Klimataggregat 216)

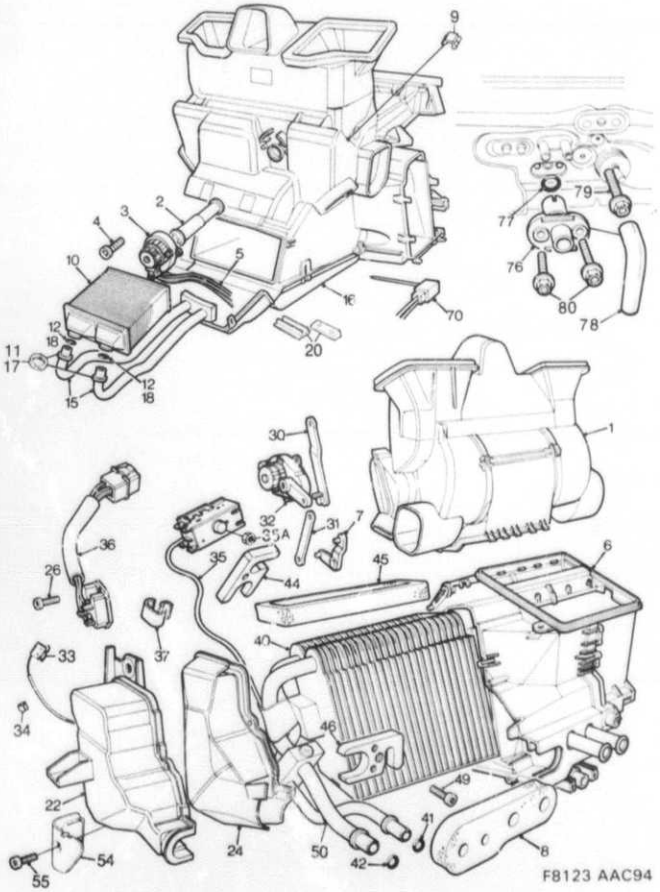

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0980		74 95 856		207)	X	Kit	Sats	6
0990		43 66 498			1	Link arm	Länkarm	5
1000		46 34 978			1	Link arm	Länkarm	5
1010		46 35 884			1	Bracket	Hållare	5
1020		46 35 900			1	Pivot arm	Ledarm	5
1030								
1040		46 35 785		1994-1995	1	Cable harness	Ledningsnät	6
1050				FOR EVAPORATOR SENSOR				
1060		47 59 254		NET, EVAPORATOR	1	Net	Nät	5


207. Ch. S2041980-, S7023606-
216. Ch. Heat/Vent LHD -T2005479, -T7002464, RHD -T2005702, -T7001968; 4cyl AC LHD -T2003847, -T7001016, RHD -T2003601, -T7000930; 4cyl ACC LHD -T2004186, -T7001278, RHD -T2004[illegible], -T7001128; 6cyl AC LHD -T2007708, -T7003845, RHD -T2003601, -T7000930; 6cyl ACC LHD -T2006714, -T7001332, RHD -T2004100, -T7001128.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

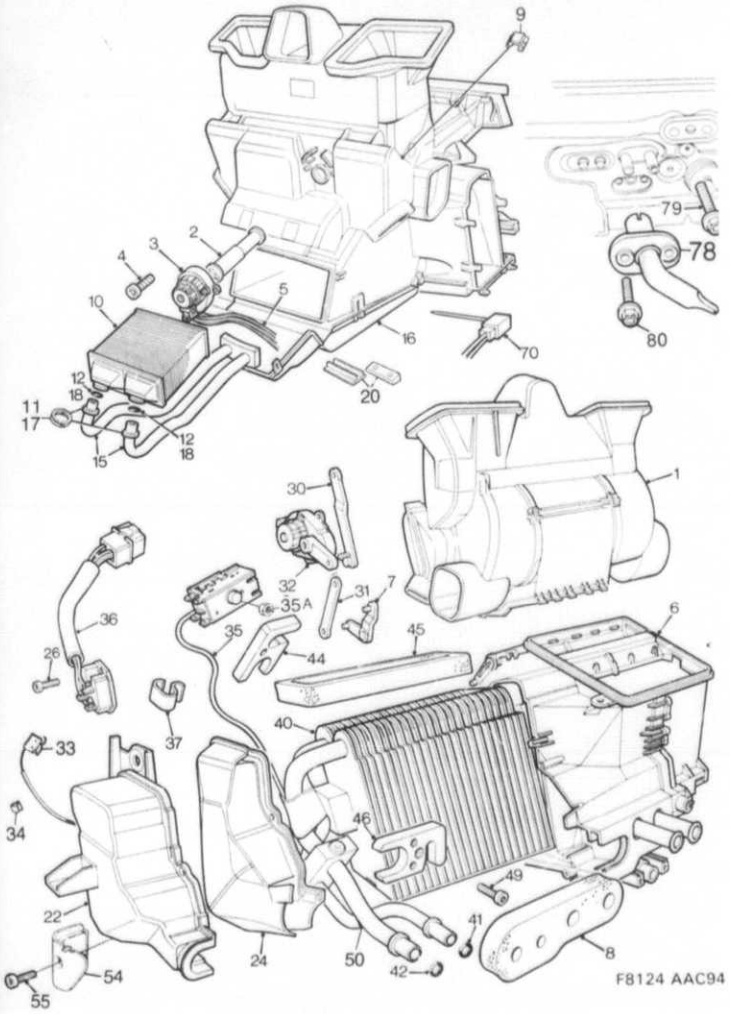

Heating and ventilation

6-A18 *Climate unit*

217)

Värme och ventilation

Klimataggregat

217)

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 35 843			1	Distribution housing	Fördelningshus	6
0020	2	43 64 279			1	Control shaft	Reglageaxel	5
0030	3	43 65 474		ACC	1	Electric motor	Elmotor	4
0040	4	79 71 393			2	Screw	Skruv	5
0050	5	43 66 555		ACC, LHD	1	Cable harness	Ledningsnät	6
0060	5	43 66 852		ACC, RHD	1	Cable harness	Ledningsnät	6
0070								
0080	6	*47 55 427*		268) LHD NLS – USE 4758827	1	Heat exchanger housing	Värmeväxlarhus	6
0090	6	47 58 827		269) LHD	1	Heat exchanger housing	Värmeväxlarhus	6
0100	6	47 55 435		268) RHD	1	Heat exchanger housing	Värmeväxlarhus	6
0110	6	47 58 835		269) RHD	1	Heat exchanger housing	Värmeväxlarhus	6
0120	7	45 42 239		LHD, RHD	1	.Lever	.Hävarm	5
0130	7	43 66 886		RHD	1	.Lever	.Hävarm	5
0140								
0150	8	46 34 226			1	Seal	Tätning	5
0160	9	96 25 989			2	Clamp	Klämma	5
0170								
0180	10	74 95 625			1	Heat exchanger	Värmeväxlare	4
0190	11	47 55 369			2	.Snap-on coupling	.Snabbkoppling	5
0200	12	47 55 377			2	.O-ring	.O-ring	2
0210		46 35 876			1	Insulation	Isolering	
0220								
0230	15	74 95 609		LHD, LH	1	Tube	Rör	5
0240	15	74 95 617		LHD, RH	1	Tube	Rör	5
0250	15	74 95 641		RHD, LH	1	Tube	Rör	5
0260	15	74 95 633		RHD, RH	1	Tube	Rör	5
0270	16	47 55 443		LHD	1	.Oil pan	.Tråg	5
0280	16	47 55 450		RHD	1	.Oil pan	.Tråg	5
0290	17	47 55 369			2	.Snap-on coupling	.Snabbkoppling	5
0300	18	47 55 377			2	.O-ring	.O-ring	2
0310								
0320	20	45 42 999			1	Kit	Satt	
0330						Fastener	Fästelement	
0340								
0350	22	74 95 047		ACC, LHD	1	Cover	Lock	5
0360	22	74 95 054		ACC, RHD	1	Cover	Lock	5
0370	22	74 95 062		AC, HEAT/VENT, LHD	1	Cover	Lock	5
0380	22	74 95 070		AC, HEAT/VENT, RHD	1	Cover	Lock	5
0390	24	*47 58 439*		-1996 NLS – USE 4867958	1	.Seal	.Tätning	4
0400	24	48 67 958		1997-, AC, ACC	1	.Seal	.Tätning	4
0410	24	48 67 941		1997-, HEAT/VENT	1	.Seal	.Tätning	4
0420	26	80 59 230		270)	4	Screw	Skruv	5
0430	26	• 80 59 305		271)	4	Screw	Skruv	5
0440								
0450	30	43 66 498		ACC, LHD, UPER	1	Link arm	Länkarm	5
0460	30	43 66 837		ACC, RHD, UPER	1	Link arm	Länkarm	5
0470	30	43 66 498		LHD, AC, HEAT/VENT	1	Link arm	Länkarm	5
0480	30	43 66 837		RHD, AC, HEAT/VENT	1	Link arm	Länkarm	5
0490								
0500	31	46 34 978		ACC, LOWER	1	Link arm	Länkarm	5
0510								
0520	31	46 34 978		AC, HEAT/VENT,LOWER	1	Link arm	Länkarm	5
0530								
0540	32	43 65 466		ACC	1	Electric motor	Elmotor	4


217. Ch. Heat/Vent LHD T2005480-, T7002465-, RHD T2005703-, T7001969-, 4cyl AC LHD T2003848-, T7001017-, RHD T2003602-, T7000931-, 4cyl ACC LHD T2004187-, T7001279-, RHD T2004101-, T7001129-, 6cyl AC LHD T2007709-, T7003846-, RHD T2003602-, T7000931-, 6cyl ACC LHD T2006715-, T7001333-, RHD T2004101-, T7001129-.
268. Ch. -T2039568, -T7009239
269. Ch. T2039569-, T7009240-
270. Ch. -T2032250, -T7006161
271. Ch. T2032251-, T7006162-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system 6-A06

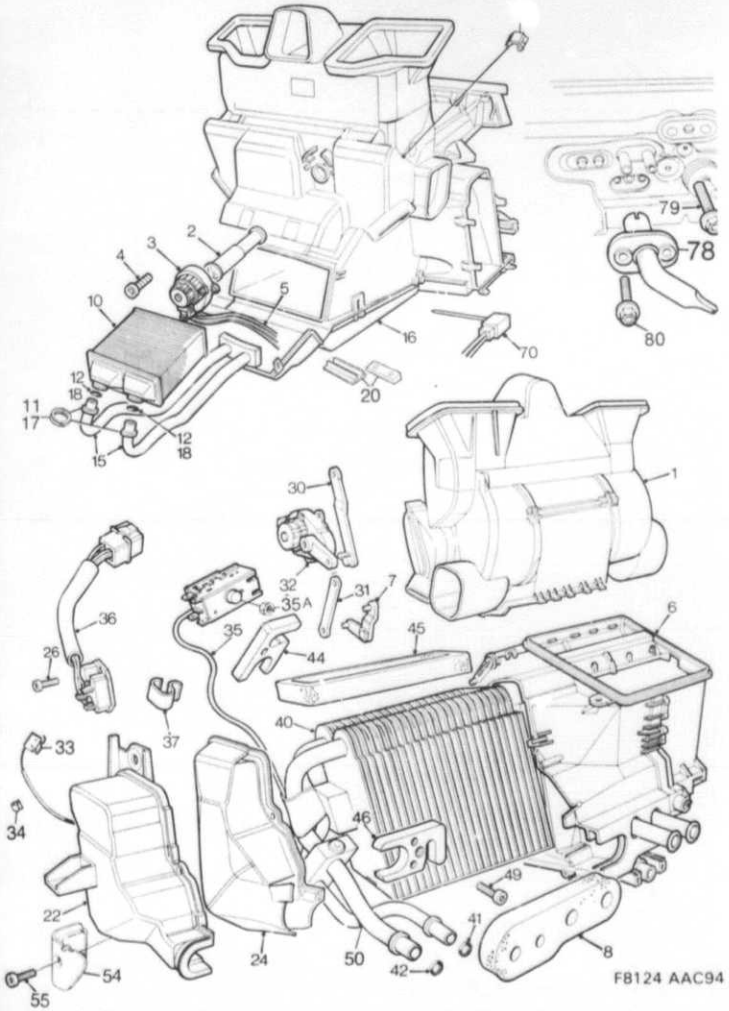

Heating and ventilation

6-A20 *Climate unit 217)*

Värme och ventilation

Klimataggregat 217)

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550		46 35 884		AC, HEAT/VENT	1	Bracket	Hållare	5
0560		46 35 900		AC, HEAT/VENT	1	Pivot arm	Ledarm	5
0570								
0580	33	46 32 279		8) AC, ACC	1	Microswitch	Mikrobrytare	5
0590	34	71 56 409		8) AC, ACC	1	Clamp	Klammer	5
0600		• 46 32 253		8) LHD, AC, ACC	1	Bracket	Fäste	6
0605		46 34 952		8) RHD, AC, ACC	1	Bracket	Fäste	6
0610								
0620	35	*46 32 956*		281) AC, ACC NLS - USE 4635231	1	Thermo contact	Termokontakt	4
0630	35	46 35 231		282) AC, ACC	1	Thermo contact	Termokontakt	4
0640	35A	85 66 598		AC, ACC	1	.Nut	.Mutter	5
0650	36	*42 30 645*		270) ACC NLS - USE 7495930	1	Control unit	Reglerdon	5
0660	36	47 58 173		271) ACC	1	Control unit	Reglerdon	5
0670	37	96 29 197		AC, ACC	1	Clamp	Klamma	5
0680								
0690	40	74 95 781		LHD, 4-CYL	1	Evaporator	Förångare	5
0700	40	74 95 799		RHD	1	Evaporator	Förångare	5
0710	40	74 95 773		-1997, LHD, 6-CYL	1	Evaporator	Förångare	5
0720	41	43 18 036			2	.O-ring	.O-ring	2
0730	42	43 18 044			2	.O-ring	.O-ring	2
0740	44	43 66 530		LHD, 4-CYL	1	.Tensioning plate	.Spännplatta	6
0750	44	43 66 530		RHD	1	.Tensioning plate	.Spännplatta	6
0760	45	46 35 918			1	.Seal	.Tätning	4
0770	46	43 66 738		LHD, 4-CYL	1	.Tensioning plate	.Spännplatta	6
0780	46	43 66 738		RHD	1	.Tensioning plate	.Spännplatta	6
0790	49	80 59 446		LHD, 4-CYL	2	.Screw	.Skruv	5
0800	49	80 59 446		RHD	2	.Screw	.Skruv	5
0810	50	46 32 808		1) LHD	1	.Tube	.Rör	5
0820	50	43 66 860		1) RHD	1	.Tube	.Rör	5
0830								
0840	54	43 67 900		LHD	1	Cover	Kåpa	6
0850	54	43 67 934		RHD	1	Cover	Kåpa	6
0860	55	45 41 132			4	Screw	Skruv	5
0870								
0880	70	94 82 597		MIXED AIR	1	Sensor	Givare	4
0890								
0900	78	46 32 972			1	Water drainage	Vattenavledare	5
0910	79	43 64 626			1	Screw	Skruv	5
0920	80	43 64 634			2	Screw	Skruv	5
0930								
0940		46 35 637		1996- FOR EVAPORATOR SENSOR	1	Cable harness	Ledningsnät	6
0950								
0960		• 49 01 229		1998- EVAPORATOR/HEATEXCHANGER	1	Air deflector	Luftriktare	5
0970								

1. Not as separate spare part. Ej som separat reservdel.
8. For tropical market; ME, LA, AU, HK, SG, TH, CY. För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
217. Ch. Heat/Vent LHD T2005480-, T7002465-, RHD T2005703-, T7001969-; 4cyl AC LHD T2003848-, T7001017-, RHD T2003602-, T7000931-; 4cyl ACC LHD T2004187-, T7001279-, RHD T2004101-, T7001129-; 6cyl AC LHD T2007709-, T7003846-, RHD T2003602-, T7000931-; 6cyl ACC LHD T2006715-, T7001333-, RHD T2004101-, T7001129-
270. Ch. -T2032250, -T7006161
271. Ch. T2032251-, T7006162-
281. Ch. -T2037749, -T7010026
282. Ch. T2037750-, T7010027-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX

Heating and ventilation system	6-A06

6-A22

Draft channels

Fördelningskanaler

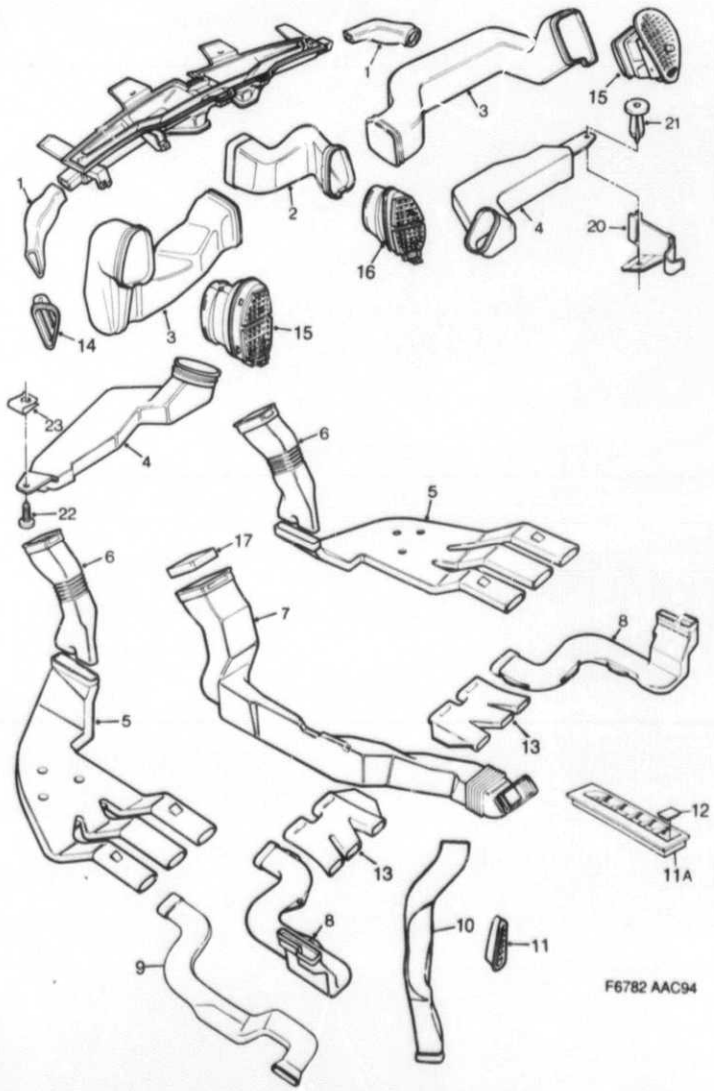

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 8B-005, 5-H06	1	Duct	Kanal	
0020								
0030	2	42 21 610		LHD	1	Duct	Kanal	5
0040	2	42 21 628		RHD	1	Duct	Kanal	5
0050								
0060	3	42 21 552		LH, LHD	1	Duct	Kanal	5
0070	3	42 21 586		RH, LHD	1	Duct	Kanal	5
0080	3	42 21 560		LH, RHD	1	Duct	Kanal	5
0090	3	42 21 594		RH, RHD	1	Duct	Kanal	5
0100								
0110	4	42 21 644		LH, LHD	1	Duct	Kanal	6
0120	4	42 21 677		RH, LHD	1	Duct	Kanal	6
0130	4	42 21 651		LH, RHD	1	Duct	Kanal	6
0140	4	42 21 685		RH, RHD	1	Duct	Kanal	6
0150	4	47 58 322		LH, LHD, CV	1	Duct	Kanal	5
0160	4	47 58 348		RH, LHD, CV	1	Duct	Kanal	5
0170	4	47 58 389		LH, RHD, CV	1	Duct	Kanal	5
0180	4	47 58 363		RH, RHD, CV	1	Duct	Kanal	5
0190								
0200	5	43 64 048		LH	1	Duct	Kanal	6
0210	5	43 64 055		RH	1	Duct	Kanal	6
0220								
0230	6	43 64 022		LH	1	Duct	Kanal	6
0240	6	43 64 030		RH	1	Duct	Kanal	6
0250								
0260	7	43 65 490		216)	1	Duct	Kanal	6
0270	7	47 55 336		217) -1997	1	Duct	Kanal	6
0280	7	* 47 55 997		1998-	1	Duct	Kanal	6
0290								
0300	8	42 03 766		LH, 5D	1	Duct	Kanal	6
0310	8	42 03 774		RH, 5D	1	Duct	Kanal	6
0320								
0330	9	43 67 603		LH, 3D	1	Duct	Kanal	6
0340	9	43 67 611		RH, 3D	1	Duct	Kanal	6
0350								
0360	10	43 64 683		LH, 3D	1	Duct	Kanal	6
0370	10	43 64 691		RH, 3D	1	Duct	Kanal	6
0380								
0390	11	43 83 709		LH, 5D	1	Air outlet	Luftutsläpp	6
0400	11	43 83 717		RH, 5D	1	Air outlet	Luftutsläpp	6
0410	11A	45 09 717		LH, 3D	1	Air outlet	Luftutsläpp	6
0420	11A	45 09 725		RH, 3D	1	Air outlet	Luftutsläpp	6
0430	12	45 42 833		LH, 3D	1	Cover washer	Täckbricka	6
0440	12	45 42 841		RH, 3D	1	Cover washer	Täckbricka	6
0450								
0460	13	43 67 975		LH	1	Duct	Kanal	6
0470	13	43 67 983		RH	1	Duct	Kanal	6
0480								
0490	14			See page 8B-005, 5-H06	1	Defroster jet	Defroster	
0500								
0510	15			See page 8B-005, 5-H06	1	Air outlet	Luftutsläpp	
0520								
0530	16			See page 8B-005, 5-H06	1	Air outlet	Luftutsläpp	
0540								
0550	17	43 65 482		-1994	1	Plug	Plugg	5

216. Ch. Heat/Vent LHD -T2005479, -T7002464, RHD -T2005702, -T7001968; 4cyl AC LHD -T2003847, -T7001016, RHD -T2003601, -T7000930, 4cyl ACC LHD -T2004186, -T7001278, RHD -T2004100, -T7001128; 6cyl AC LHD -T2007708, -T7003845, RHD -T2003601, -T7000930, 6cyl ACC LHD -T2006714, -T7001332, RHD -T2004100, -T7001128.

217. Ch. Heat/Vent LHD T2005480-, T7002465-, RHD T2005703-, T7001969-; 4cyl AC LHD T2003848-, T7001017-, RHD T2003602-, T7000931-; 4cyl ACC LHD T2004187-, T7001279-, RHD T2004101-, T7001129-; 6cyl AC LHD T2007709-, T7003846-, RHD T2003602-, T7000931-; 6cyl ACC LHD T2006715-, T7001333-, RHD T2004101-, T7001129-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX

Heating and ventilation system 6-A06

6-A24

Draft channels

Fördelningskanaler

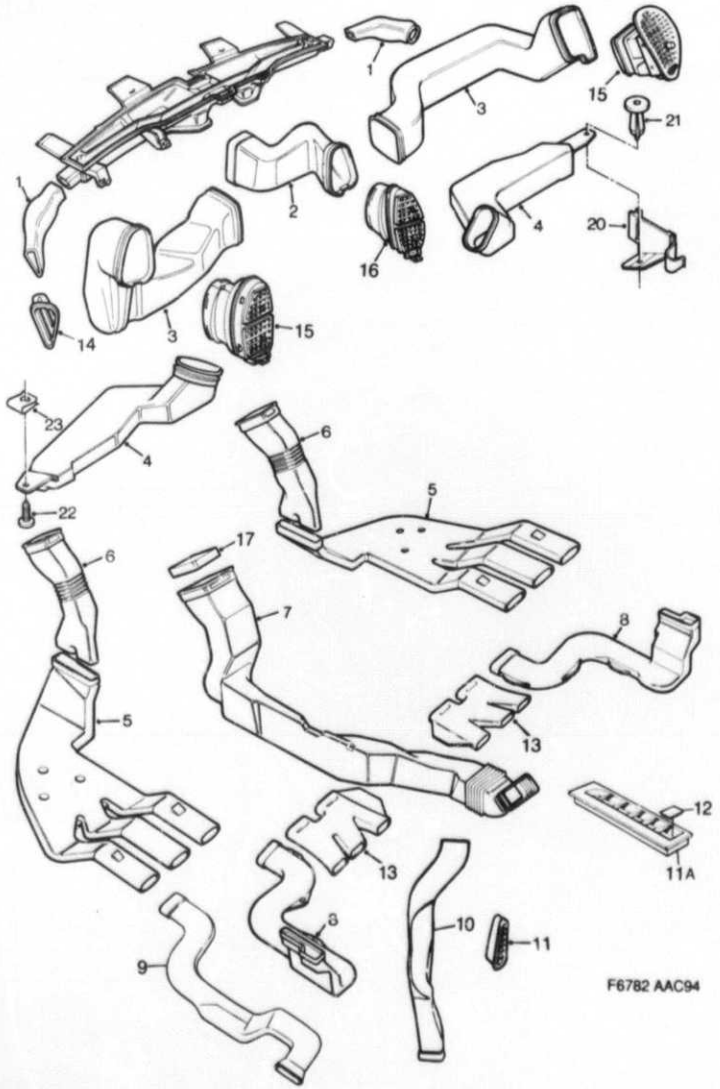

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560								
0570	20	43 64 105		RH, LHD, WITHOUT AIRBAG	1	Bracket	Fäste	6
0580	20	43 64 113		LH, RHD, WITHOUT AIRBAG	1	Bracket	Fäste	6
0590	21	42 59 248		PASSENGERS SIDE	1	Expanding rivet	Expandernit	6
0600	22	79 70 536		DRIVERS SIDE	1	Screw	Skruv	6
0610	23	79 68 001			1	Clip nut	Clipsmutter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

6-B02

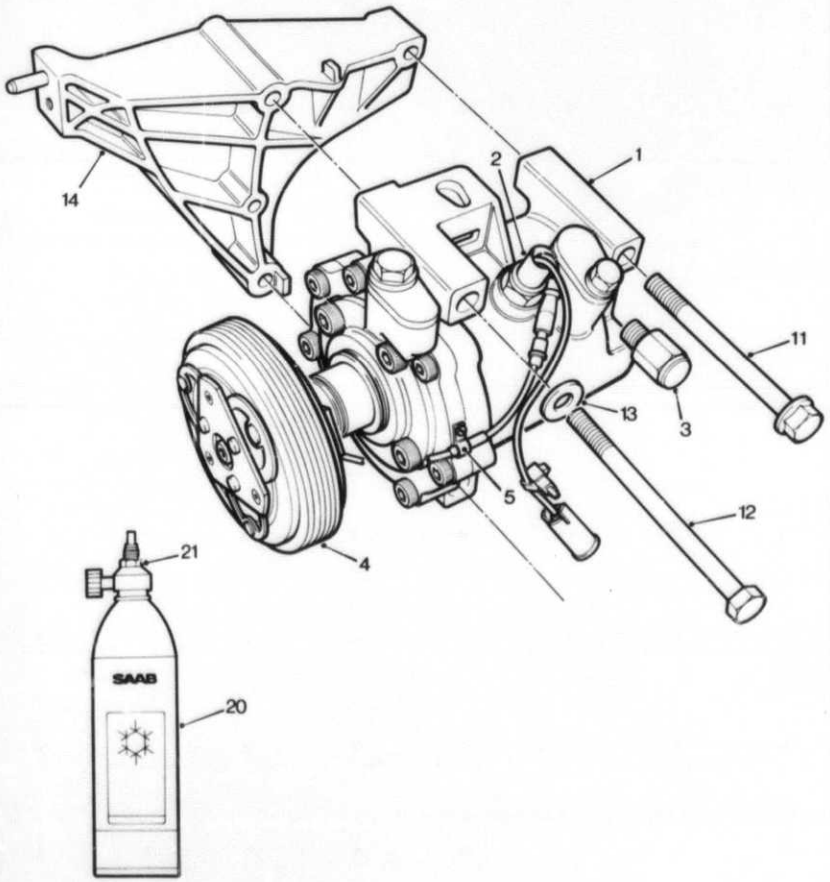

F5041 AAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*42 30 454*		135) NLS – USE 4759148	1	Compressor	Kompressor	5
1	*46 32 063*		136,166) NLS – USE 4759148	1	Compressor	Kompressor	5
1	*46 34 895*		167) -1996 NLS – USE 4759148	1	Compressor	Kompressor	5
1	47 59 148		1997-	1	Compressor	Kompressor	5
2	43 83 824		135)	1	.Thermo switch	.Termobrytare	5
2	46 32 014		136)	1	.Thermo switch	.Termobrytare	5
3	43 18 093			1	.Relief valve	.Avlastningsventil	6
4	*43 83 725*		135) NLS – USE 4634903	1	.Clutch	.Koppling	6
4	*46 32 030*		136,166) NLS – USE 4634903	1	.Clutch	.Koppling	6
4	46 34 903		167)	1	.Clutch	.Koppling	6
5	43 18 168			1	.Cable clamp	.Kabelklämma	5
	43 83 758			1	.Plug	.Plugg	5
	46 32 139			1	.Shim	.Shim	5
11	79 82 598			2	Hexagon screw	Sexkantsskruv	5
12	79 79 297		4-CYL	1	Screw	Skruv	5
12	79 82 598		-1997, 6-CYL,M10X100	1	Hexagon screw	Sexkantsskruv	5
12	* 79 79 248		-1997, 6-CYL,M10X110	1	Screw	Skruv	5
13	80 73 108		4-CYL	1	Washer	Bricka	5
14			See page 2-009, 1-C10		Bracket	Konsol	
20	*43 83 949*		0.75 KG NLS	1	Refrigerant	Köldmedium	
21			37)	1	Valve	Ventil	
	40 74 787		20 ML	X	Oil	Olja	


37. See Special tools Se Specialverktyg
135. Ch. -S2002729, -S7013039
136. Ch. S2002730-, S7013040-
166. Ch. -S2026004, -S7018723
167. Ch. S2026005-, S7018724-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Label	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system 6-A06

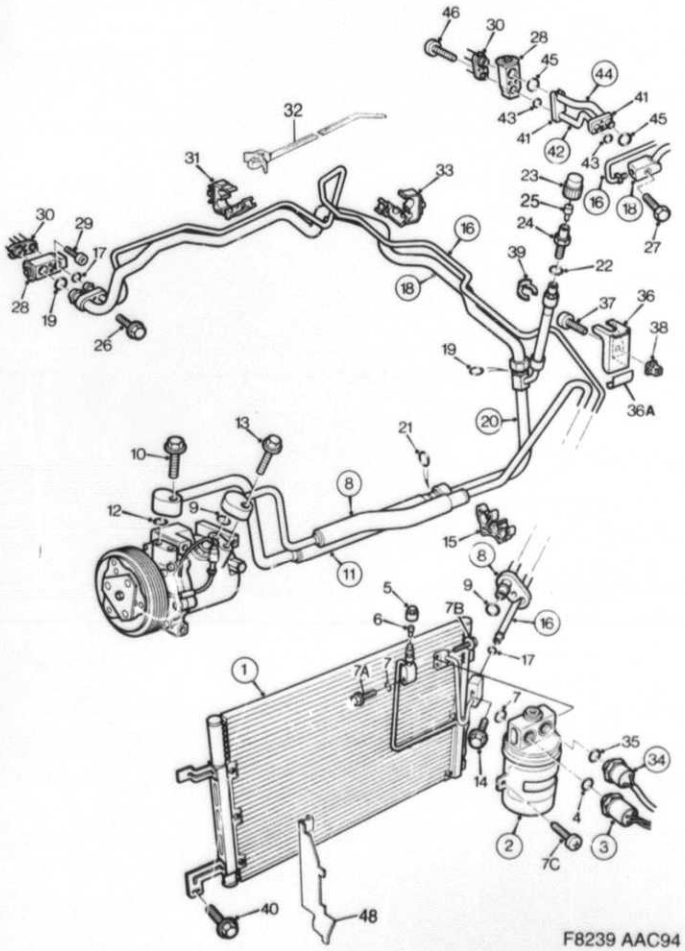

Heating and ventilation
6-B04
AC condenser

Värme och ventilation
AC kondensor

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 30 470*		160) NLS – USE 4634937	1	Condenser	Kondensor	5
0020	1	*43 83 774*		8,82) NLS – USE 4634937	1	Condenser	Kondensor	5
0030	1	*43 83 774*		9,83,160) NLS – USE 4634937	1	Condenser	Kondensor	5
0040	1	*43 83 774*		161)-1995 NLS – USE 4634937	1	Condenser	Kondensor	5
0050	1	46 34 937		1996-	1	Condenser	Kondensor	5
0060	2	42 30 462			1	.Reservoir	.Behållare	4
0070	3	43 83 170			1	..Pressure monitor	..Tryckvakt	4
0080	4	40 73 979			1	...O-ring	...O-ring	2
0090	5	43 83 956			1	.Plug	.Plugg	5
0100	6	45 42 353			1	.Valve	.Ventil	5
0110	7	45 42 346			2	.O-ring	.O-ring	2
0120	7A	45 42 338			1	.Screw	.Skruv	5
0130	7B	45 42 320			1	.Screw	.Skruv	5
0140	7C	45 42 361			1	.Screw	.Skruv	5
0150	8	42 30 488			1	Hose	Slang	6
0160	9	43 18 036			2	.O-ring	.O-ring	2
0170	10	79 78 224			1	Screw	Skruv	5
0180	11	42 30 496			1	Hose	Slang	6
0190	12	43 18 044			1	.O-ring	.O-ring	2
0200	13	79 78 257			1	Screw	Skruv	5
0210	14	79 78 174			1	Screw	Skruv	5
0220	15	43 [illegible] 136			1	Fastener	Fästelement	5
0230	16	43 6[illegible] 201		133) LHD, 4-CYL	1	Tube	Rör	6
0240	16	46 32 303		134) LHD, 4-CYL	1	Tube	Rör	6
0250	16	43 65 508		52) LHD, 4-CYL	1	Tube	Rör	6
0260	16	43 65 508		-1997, LHD, 6-CYL	1	Tube	Rör	6
0270	16	43 65 227		RHD	1	Tube	Rör	6
0280	17	43 18 028			2	.O-ring	.O-ring	2
0290	18	43 65 219		133) LHD, 4-CYL	1	Tube	Rör	6
0300	18	*46 32 352*		134) -1997, LHD, 4-CYL NLS – USE 4868600	1	Tube	Rör	6
0310	18	48 68 600		1998-, LHD, 4-CYL	1	Tube	Rör	6
0320	18	43 65 516		52) LHD, 4-CYL	1	Tube	Rör	6
0330	18	43 65 516		-1997, LHD, 6-CYL	1	Tube	Rör	6
0340	18	43 65 235		RHD	1	Tube	Rör	6
0350	19	43 18 051			2	.O-ring	.O-ring	2
0360	19	43 18 051		52) LHD, 4-CYL	1	.O-ring	.O-ring	2
0370	19	43 18 051		-1997, LHD, 6-CYL	1	.O-ring	.O-ring	2
0380	20	43 65 375			1	Hose	Slang	6
0390	21	43 18 051			1	.O-ring	.O-ring	2
0400	22	43 18 028		[illegible]94	1	.O-ring	.O-ring	2
0410	23	43 67 074			1	.Plug	.Plugg	5
0420	24	43 65 987		-19[illegible]	1	.Valve	.Ventil	6
0430	25	43 67 991			1	.Valve	.Ventil	6
0440	26	79 78 117			1	Screw	Skruv	5
0450	27	79 78 257		52) LHD, 4-CYL	1	Screw	Skruv	5
0460	27	79 78 257		-1997, LHD, 6-CYL	1	Screw	Skruv	5
0470	28	*42 30 785*		199) NLS – USE 4635199	1	Expansion valve	Expansionsventil	5
0480	28	46 35 199		200- 1997	1	Expansion valve	Expansionsventil	5


8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
9. For hot and tropical market; ME, LA, AU, PA, US, IL, TR För varm och tropisk marknad; ME, LA, AU, PA, US, IL, TR
52. For cars with intake air heat plate. För bilar med värmeplatta.
82. Ch. -R2021524
83. Ch. R2021525-
133. Ch. -S2000511, -S7010247
134. Ch. S2000512-, S7010248-
160. Ch. -S2019986
161. Ch. S2019987-
199. Ch. -S2042854
200. Ch. S2042855-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

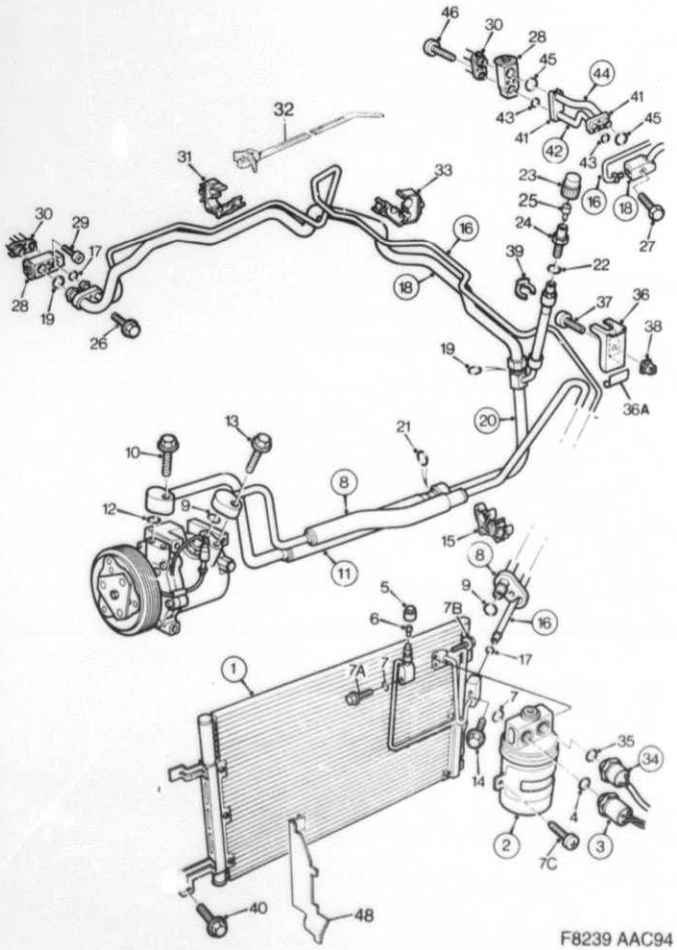

Heating and ventilation

Värme och ventilation

6-B06

AC condenser

AC kondensor

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	28	• 47 58 686		1998-	1	Expansion valve	Expansionsventil	5
0500	29	80 97 800			2	Screw	Skruv	5
0510	30			See page 8C-011, 6-A12		Evaporator	Förängare	
0520	31	43 65 110			1	Clip	Clips	5
0530	32	95 28 019			2	Tensioning band	Spännband	5
0540	33	43 65 128		LHD	1	Clip	Clips	5
0550	34	43 83 188		US, PA, ME, LA, AU,IL,TR	1	Pressure monitor	Tryckvakt	4
0560	35	40 73 979			1	,O-ring	,O-ring	2
0570	36	43 35 543			1	Bracket	Konsol	6
0580	36A	72 68 972		1996-	1	,Wear protection	,Skavskydd	5
0590	37	79 22 370			1	Screw	Skruv	5
0600	38	79 82 929			1	Press nut	Pressmutter	3
0610	39	75 33 136			1	Lock ring	Säkringsring	5
0620	40	79 77 465			2	Screw	Skruv	5
0630								
0640	41	43 66 589		52) -1994, LHD, 4-CYL	2	Tensioning plate	Spännplatta	6
0650	41	43 66 589		-1994, LHD, 6-CYL	2	Tensioning plate	Spännplatta	6
0660	41	46 34 416		52) 1995-, LHD, 4-CYL M8	1	Tensioning plate	Spännplatta	6
0670								
0680	41	46 34 481		52) 1995-, LHD, 4-CYL M5	1	Tensioning plate	Spännplatta	6
0690								
0700	41	46 34 416		1995-1997 LHD, 6-CYL M8	1	Tensioning plate	Spännplatta	6
0710								
0720								
0730	41	46 34 481		1995-1997 LHD, 6-CYL M5	1	Tensioning plate	Spännplatta	6
0740								
0750								
0760								
0770	42	74 95 112		52) LHD, 4-CYL	1	Tube	Rör	5
0780	42	74 95 112		-1997, LHD, 6-CYL	1	Tube	Rör	5
0790	43	43 18 028			1	,O-ring	,O-ring	2
0800	44	74 95 120		52) LHD, 4-CYL	1	Tube	Rör	5
0810	44	74 95 120		-1997, LHD, 6-CYL	1	Tube	Rör	5
0820	44			LHD, 4-CYL RHD		Tube	Rör	
0830								
0840				See page 8C-011, 6-A12				
0850	45	43 18 051			1	,O-ring	,O-ring	2
0860	46	79 85 401		52) LHD, 4-CYL	2	Screw	Skruv	
0870	46	79 85 401		-1997, LHD, 6-CYL	2	Screw	Skruv	
0880								
0890	48	43 67 967		8,82) LH, I	1	Cover	Avtäckning	5
0900	48	43 67 967		9,83,160) LH, I	1	Cover	Avtäckning	5
0910	48	43 67 967		161) LH, I	1	Cover	Avtäckning	5
0920	48	43 67 959		8,82) RH, I	1	Cover	Avtäckning	5
0930	48	43 67 959		9,83,160) RH, I	1	Cover	Avtäckning	5
0940	48	43 67 959		161) RH, I	1	Cover	Avtäckning	5
0950								
0960	48	43 83 899		8,82) LH, TURBO	1	Cover	Avtäckning	5
0970	48	43 83 899		9,83,160) LH, TURBO	1	Cover	Avtäckning	5
0880	48	43 83 899		161) LH, TURBO	1	Cover	Avtäckning	5
0990	48	43 83 881		8,82) RH, TURBO	1	Cover	Avtäckning	5
1000	48	43 83 881		9,83,160) RH, TURBO	1	Cover	Avtäckning	5
1010	48	43 83 881		161) RH, TURBO	1	Cover	Avtäckning	5
1020		91 06 113		344) L=20MM	X	Wear protection	Slitskydd	4

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
9. For hot and tropical market; ME, LA, AU, PA, US, IL, TR För varm och tropisk marknad; ME, LA, AU, PA, US, IL, TR
52. For cars with intake air heat plate. För bilar med värmeplatta.
82. Ch. -R2021524
83. Ch. R2021525-
160. Ch. -S2019986
161. Ch. S2019987-
344. Ch. -V2023555

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

6-B08

AC condenser
AC kondensor

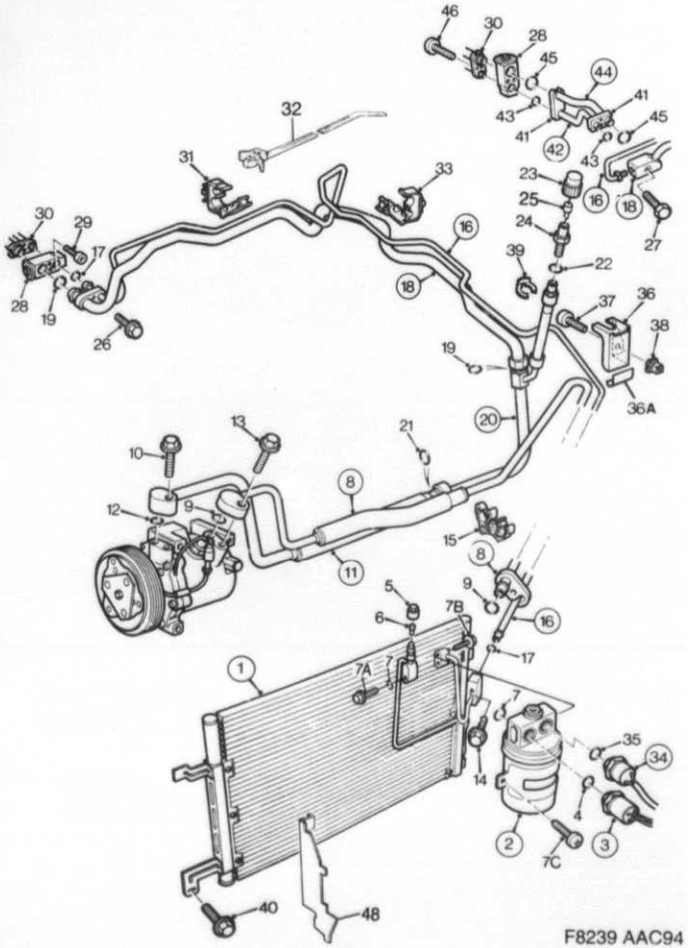

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1030		82 78 558		344) L=90MM	X	Protecting moulding	Skyddslist	5
1040		48 67 008		345) L=20MM	X	Edge protection moulding	Kantskyddslist	5
1050		48 67 016		345) L=90MM	X	Edge protection moulding	Kantskyddslist	5

344. Ch. -V2023555
345. Ch. V2023556-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06

8D

Tool, Labels
Verktyg, Etiketter
Herramient, Etiquetas

6-C02

0041
0020
0040
0060
0080
0100
0120
0125
0130
0140
0150

CONTENTS.

Tool kit	8D : 5	6-C06
Labels		
Labels, part 1	8D : 7	6-C08
Labels, part 2	8D : 11	6-C12
Labels, part 3	8D : 15	6-C16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

0042
0020
0040
0060
0180
0200
0220
0230
0235
0240
0250
0460
0480
0500
0520
0540
0560
0570
0580
0590
0600

INNEHÅLLSFÖRTECKNING.

Verktygssats	8D : 5	6-C06
Etiketter		
Etiketter, del 1	8D : 7	6-C08
Etiketter, del 2	8D : 11	6-C12
Etiketter, del 3	8D : 15	6-C16

SUMARIO.

Bolsa de herramientas	8D : 5	6-C06
Etiquetas		
Etiquetas, 1a parte	8D : 7	6-C08
Etiquetas, 2a parte	8D : 11	6-C12
Etiquetas, 3a parte	8D : 15	6-C16


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C06 *Tool kit* *Verktygsats*

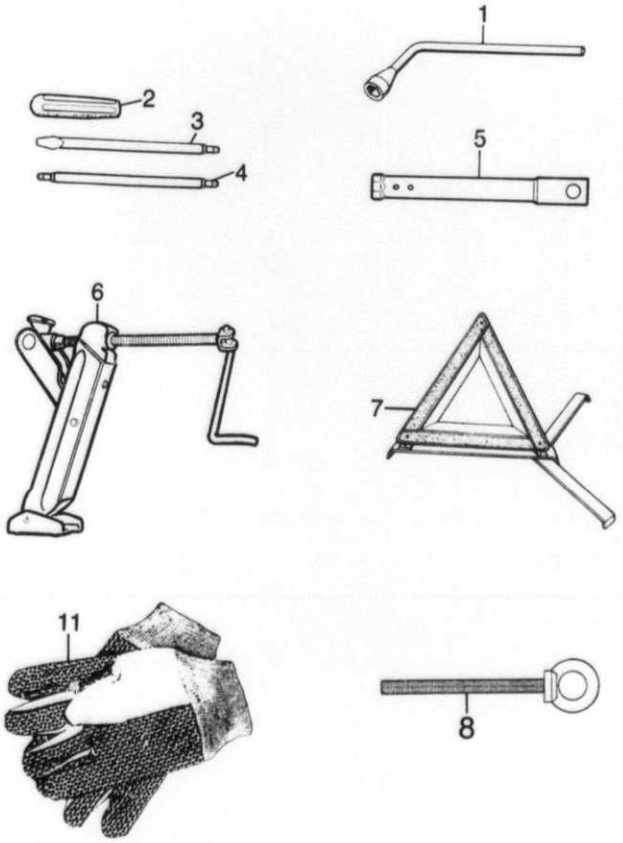

F8610 AAC94

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 41 394		WHEEL NUT	1	Socket wrench	Hylsnyckel	4
0020	2	41 98 883		-1996	1	Handle	Skaft	5
0025	2	48 80 217		1997-	1	Handle	Skaft	5
0030	3	41 98 891		TORX 25	1	Screw driver bit	Mejselspets	5
0040	4	45 10 731		TORX 10/30	1	Screw driver bit	Mejselspets	5
0050	5	41 93 157			1	Spark plug spanner	Tändstiftnyckel	4
0060	6	*42 18 764*		301) NLS - USE 4482014	1	Jack	Domkraft	6
0065	6	44 82 014		302)	1	Jack	Domkraft	6
0070	7	42 66 003		-1996	1	Warning triangle	Varningstriangel	6
0075	7	50 00 526		1997-	1	Warning triangle	Varningstriangel	
0080	8	86 70 002		TALLADEGA, 40/400103420	1	Towing eye	Dragögla	6
0110	11			45/3012952	1	Work gloves	Skyddshandskar	


301. Ch. -S2019730, -S7016210
302. Ch. S2019731-, S7016211-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

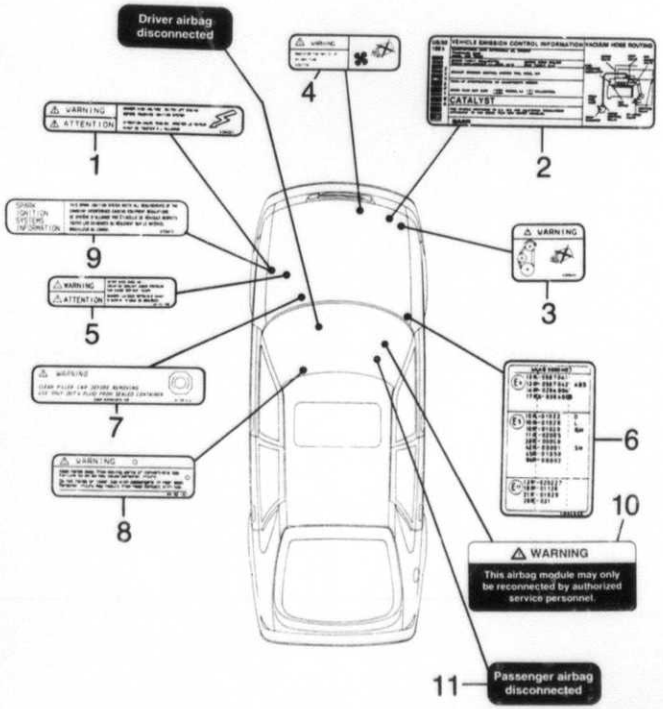

F8708 AAC94

6-C08 Labels Part 1 — Etiketter Del 1

0150	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	43 94 227		WARNING HIGH VOLTAGE	1	Label	Etikett	4
0020								
0030	2	42 28 326		290), 1994, B206I, SE	1	Label	Etikett	4
0040	2	44 40 699		290), 1995, B204I, SE	1	Label	Etikett	4
0050	2	42 28 359		290), 1994, B234I, SE	1	Label	Etikett	4
0060	2	44 43 081		290), 1995, B234I, SE	1	Label	Etikett	4
0070	2	42 28 375		290), 1994, B258I, M, SE	1	Label	Etikett	4
0080	2	44 45 540		290), 1994, B258I, A, SE	1	Label	Etikett	4
0090	2	44 43 073		290), 1995, B258I, M, SE	1	Label	Etikett	4
0100	2	46 24 219		290), 1995, B258I, A, SE	1	Label	Etikett	4
0110	2	42 28 367		290), 1994, B204L, SE	1	Label	Etikett	4
0120	2	44 43 099		290), 1995, B204L, SE	1	Label	Etikett	4
0130	2	44 45 946		290,296),1994, B204L, SE	1	Label	Etikett	4
0140	2	44 45 011		290,296),1995,B204L,SE,M	1	Label	Etikett	4
0150	2	46 23 047		290,296),1995,B204L,SE,A	1	Label	Etikett	4
0160								
0170	2	42 28 391		290), 1994, B234I, US	1	Label	Etikett	4
0180	2	44 45 896		290), 1995, B234I, US	1	Label	Etikett	4
0190	2	47 25 032		290), 1996, B234I, US	1	Label	Etikett	4
0200	2	48 78 112		290), 1997, B234I, US	1	Label	Etikett	4
0205	2	• 48 79 458		290), 1998-, B234I, US	1	Label	Etikett	
0210	2	42 28 334		290), 1994, B258I, US	1	Label	Etikett	4
0220	2	44 45 870		290), 1995, B258I, US	1	Label	Etikett	4
0230	2	47 25 008		290), 1996, B258I, US	1	Label	Etikett	4
0240	2	48 78 138		290), 1997, B258I, US	1	Label	Etikett	4
0250	2	42 28 342		290), 1994, B204L, US	1	Label	Etikett	4
0260	2	44 45 888		290), 1995, B204L, US	1	Label	Etikett	4
0270	2	47 25 016		290), 1996, B204L, M, US	1	Label	Etikett	4
0280	2	47 25 024		290), 1996, B204L, A, US	1	Label	Etikett	4
0290	2	48 78 120		290), 1997, B204L, US	1	Label	Etikett	4
0295	2	• 48 79 466		290), 1998-, B204L, US	1	Label	Etikett	
0300								
0310	2	43 94 854		290), 1994, B234I, CA	1	Label	Etikett	4
0320	2	44 45 920		290), 1995, B234I, CA	1	Label	Etikett	4
0330	2	44 44 451		290), 1996, B234I, CA	1	Label	Etikett	4
0340	2	47 29 174		290), 1997, B234I, CA	1	Label	Etikett	4
0345	2	• 48 79 474		290), 1998-, B234I, CA	1	Label	Etikett	
0350	2	42 28 409		290), 1994, B258I, CA	1	Label	Etikett	4
0360	2	4 3 904		290), 1995, B258I, CA	1	Label	Etikett	4
0370	2	4 44 444		290), 1996, B258I, CA	1	Label	Etikett	4
0380	2	47 25 586		290), 1997, B258I, CA	1	Label	Etikett	4
0390	2	42 28 417		290), 1994, B204L, CA	1	Label	Etikett	4
0400	2	44 45 912		290), 1995, B204L, CA	1	Label	Etikett	4
0410	2	45 26 554		290), 1996, B204L, CA	1	Label	Etikett	4
0420	2	45 28 915		290), 1997, B204L, CA	1	Label	Etikett	4
0425	2	• 48 79 482		290), 1998-, B204L, CA	1	Label	Etikett	
0430								
0440	2	43 94 870		290), 1994, B206I, AU	1	Label	Etikett	4
0450	2	44 45 037		290), 1995, B204I, AU	1	Label	Etikett	4
0460	2	44 44 477		290), 1996, B204I, AU	1	Label	Etikett	4
0470	2	47 25 628		290), 1997, B204I, AU	1	Label	Etikett	4
0480	2	43 94 896		290), 1994, B234I, AU	1	Label	Etikett	4
0490	2	44 45 052		290), 1995, B234I, AU	1	Label	Etikett	4
0500	2	44 44 493		290), 1996, B234I, AU	1	Label	Etikett	4
0510	2	47 25 644		290), 1997, B234I, AU	1	Label	Etikett	4
0515	2	• 48 79 490		290), 1998-,4-CYL, AU	1	Label	Etikett	
0520	2	43 94 862		290), 1994, B258I, AU	1	Label	Etikett	4
0530	2	44 45 029		290), 1995, B258I, AU	1	Label	Etikett	4
0540	2	44 44 469		290), 1996, B258I, AU	1	Label	Etikett	4
0550	2	47 25 610		290), 1997, B258I, AU	1	Label	Etikett	4
0560	2	43 94 888		290), 1994, B204L, AU	1	Label	Etikett	4

290. Exhaust emission control device — Avgasrening
296. For cars with intake air heat plate. — För bilar med värmeplatta.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C10 Labels Part 1 — Etiketter Del 1

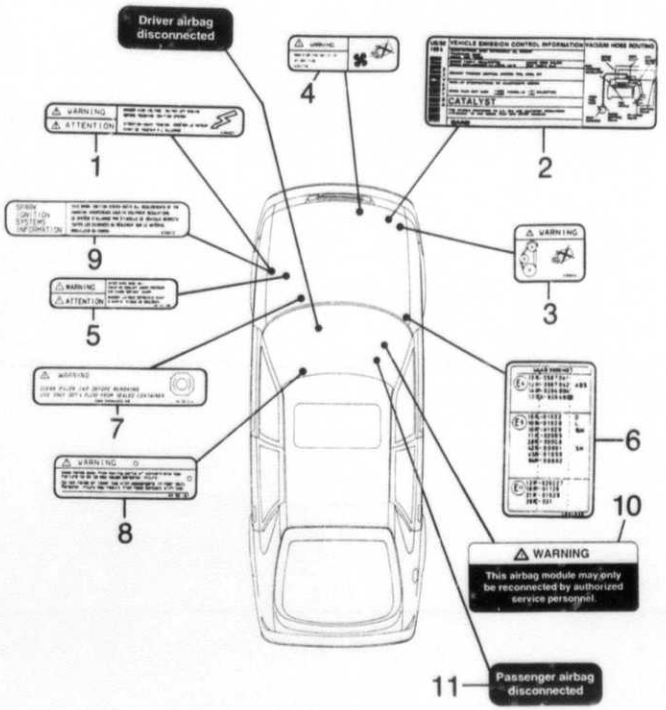

F8708 AAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	2	44 45 045		290), 1995, B204L, AU	1	Label	Etikett	4
0580	2	44 44 485		290), 1996, B204L, AU	1	Label	Etikett	4
0590	2	47 25 636		290), 1997, B204L, AU	1	Label	Etikett	4
0600								
0610	2	45 27 933		290), 1995-, LA	1	Label	Etikett	4
0620								
0630	3	43 59 444		WARNING BELT	1	Label	Etikett	4
0640								
0650	4	43 57 778		WARNING RADIATOR FAN	1	Label	Etikett	4
0660								
0670	5	44 44 196		WARNING EXPANSION TANK	1	Label	Etikett	4
0680								
0690	6	45 22 785		1994, ECE-APPROVALS	1	Label	Etikett	6
0700	6	46 22 577		1995, ECE-APPROVALS	1	Label	Etikett	6
0710	6	44 44 501		1996, ECE-APPROVALS	1	Label	Etikett	6
0720	6	48 79 078		1997, ECE-APPROVALS	1	Label	Etikett	
0725	6	47 28 051		1998-, ECE-APPROVALS	1	Label	Etikett	
0730								
0740	7	44 25 674		291), CLEAN FILLER CAP	1	Label	Etikett	5
0750	7	44 26 573		292), CLEAN FILLER CAP	1	Label	Etikett	5
0760								
0770	8	44 92 161		WARNING CV TOP	1	Label	Etikett	5
0780								
0790	9	47 28 473		307), CA, SPARK IGNITION SYSTEMS INFORMATION	1	Label	Etikett	4
0800								
0810								
0820	10	50 10 087		WARNING, AIRBAG MODULE	1	Label	Etikett	
0830								
0840	11	50 10 053		PASSENGER AIRBAG DISCONN	1	Label	Etikett	
0850	11	50 10 079		PASS.AIRBAG URKOPPLAD	1	Label	Etikett	
0860								
0870	12	50 10 061		DRIVER AIRBAG DISCONNECT	1	Label	Etikett	


290. Exhaust emission control device Avgasrening
291. Ch. -R2021560
292. Ch. R2021561-
307. Ch. T2020410-, T7003748-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit 6-C06
Labels 6-C08

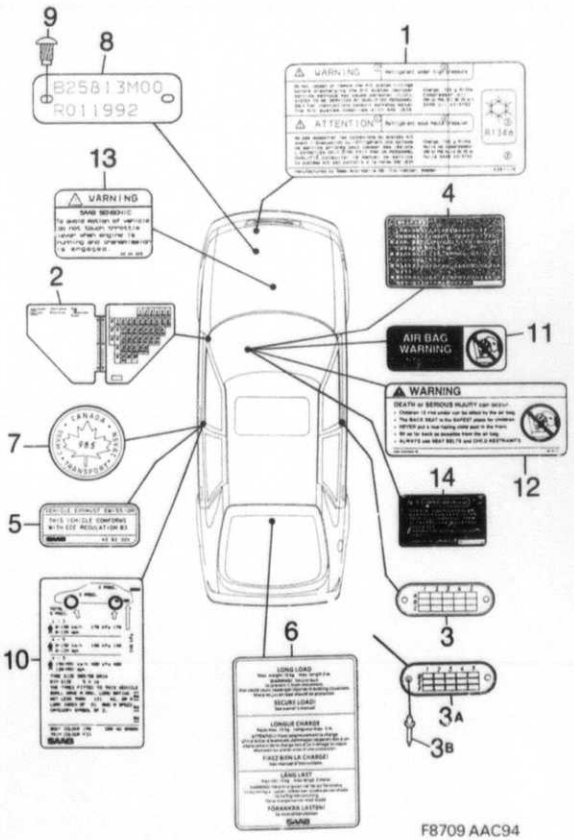

F8709 AAC94

6-C12 Labels Part 2 — Etiketter Del 2

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 42 817		308), AC WARNING/RECOM-	1	Label	Etikett	5
0020				MENDED CHARGE (4367116)				
0030	1	*43 83 980*		8,293), AC WARNING/	1	Label	Etikett	5
0040				RECOMMENDED CHARGE NLS -				
0040				USE 4758264				
0050	1	*43 83 980*		9,294,308), AC WARNING/	1	Label	Etikett	5
0060				RECOMMENDED CHARGE NLS -				
0060				USE 4758264				
0065	1	*43 83 980*		309,310), AC WARNING/	1	Label	Etikett	5
0066				RECOMMENDED CHARGE NLS -				
0066				USE 4758264				
0067	1	47 58 264		311), AC WARNING/	1	Label	Etikett	5
0068				RECOMMENDED CHARGE				
0070								
0080	2	45 83 886		1994, LHD, FUSE BOX	1	Label	Etikett	5
0090	2	45 88 661		10), CV, LHD, FUSE BOX	1	Label	Etikett	5
0100	2	45 89 321		11), 1995, LHD, FUSE BOX	1	Label	Etikett	5
0110	2	47 39 280		1996,LHD, FUSE BOX	1	Label	Etikett	5
0115	2	48 06 626		1997-,LHD, FUSE BOX	1	Label	Etikett	5
0120	2	45 83 894		1994, RHD, FUSE BOX	1	Label	Etikett	5
0130	2	45 88 679		10), CV, RHD, FUSE BOX	1	Label	Etikett	5
0140	2	45 89 339		11), 1995, RHD, FUSE BOX	1	Label	Etikett	5
0150	2	47 39 298		1996, RHD, FUSE BOX	1	Label	Etikett	5
0155	2	48 06 634		1997-,RHD, FUSE BOX	1	Label	Etikett	5
0160								
0170	3	43 99 804		CAMPAIGN	1	Sign	Skylt	5
0180								
0184	3A	49 00 007		CAMPAIGN	1	Sign	Skylt	
0185	3B	79 72 490			2	Rivet	Nit	5
0186								
0190	4	41 56 618		1996,WARNING OVERHEATED	1	Label	Etikett	5
0200				CATALYTIC CONVERTER, PA				
0205	4	47 27 434		1997, WARNING OVERHEATED	1	Label	Etikett	5
0206				CATALYTIC CONVERTER, PA				
0210								
0220	5	43 92 304		5), ECE REGULATION, PA	1	Label	Etikett	4
0230								
0240	6	95 46 961		1994, LONG LOAD	1	Label	Etikett	5
0250	6	46 30 752		1995-, LONG LOAD	1	Label	Etikett	5
0260								
0270	7	44 81 339		CA	1	Label	Etikett	6
0280								
0290	8	43 95 596		ENGINE NUMBER B258I,	1	Sign	Skylt	4
0300				US, CA				
0310	9	40 87 821			2	Drive screw	Drivskruv	5
0320								
0330	10	*45 21 258*		295), 1994 NLS – USE	1	Label	Etikett	
0330				4190831				
0335	10	41 90 831		295), 1995-	1	Label	Etikett	

5. Without catalytic converter. Utan katalytisk reaktor.
8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
9. For hot and tropical market; ME, LA, AU, PA, US, IL, TR För varm och tropisk marknad; ME, LA, AU, PA, US, IL, TR
10. CV, ch. -S7009999
11. CV, ch. S7010000-
293. Ch. -R2021524
294. Ch. R2021525-
295. State body and trim colour code, label number and chassis number. Uppge färg- och klädselkod, etikettnummer och chassinummer.
308. Ch. -S2019986, -S7015706
309. Ch. S2019987-, S7015707-
310. Ch. -T2020496, -T7003707
311. Ch. T2020497-, T7003708-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C14 Labels Part 2

Etiketter Del 2

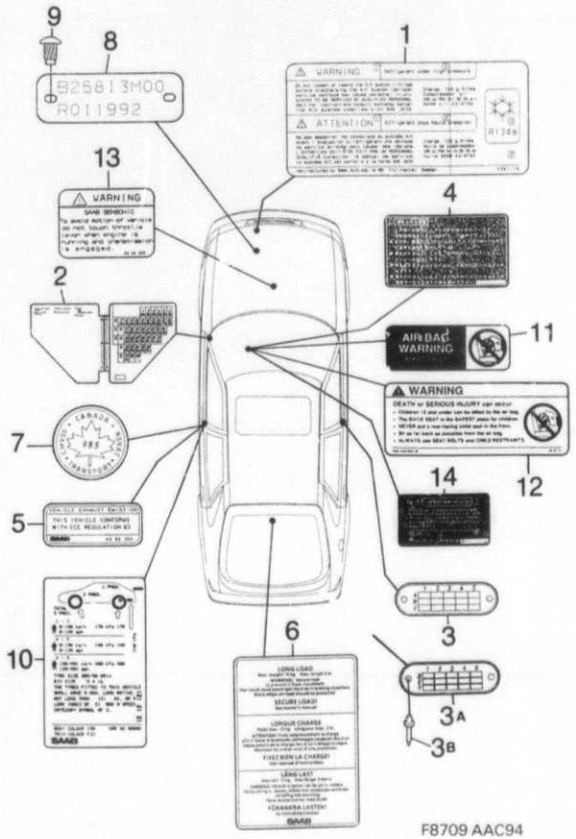

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
11	46 28 939		1995-,356), AIRBAG SEE OTHER SIDE, US, CA	1	Label	Etikett	
11	50 10 103		357), AIRBAG FLIP VISOR OVER, US, CA	1	Label	Etikett	
12	50 10 202		1995-,356), WARNING AIRBAG, US	1	Label	Etikett	
12	50 10 210		1995-,356), WARNING AIRBAG, CA	1	Label	Etikett	
12	50 10 111		357), WARNING AIRBAG US, CA	1	Label	Etikett	
13	44 44 345		WARNING SENSONIC	1	Label	Etikett	4
14	46 57 813		1996-, WARNING CHILD SEAT, JP	1	Warning label	Varningsetikett	


199. Ch. -S2042854
356. Ch. -V2029170, -V7006522
357. Ch. V2029171-, V7006523-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

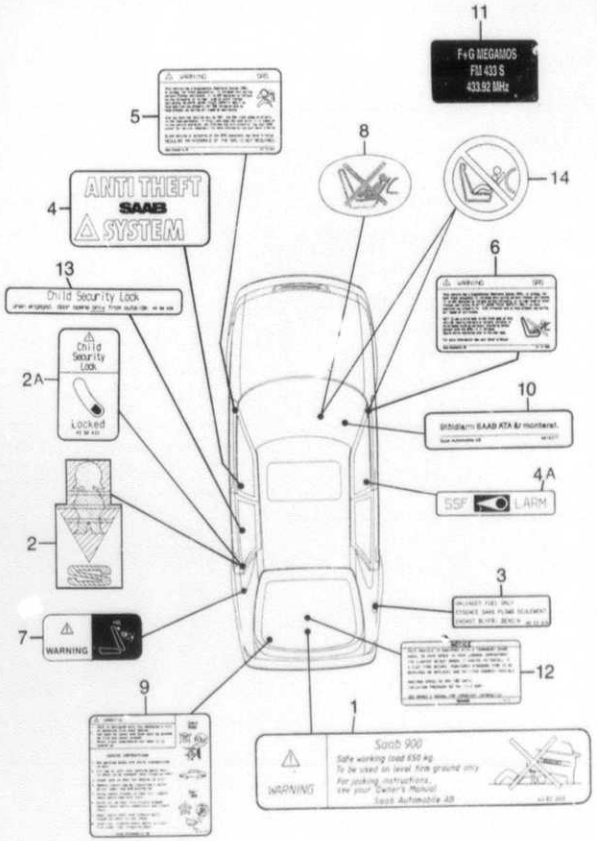

F8710 AAC94

6-C16 Labels Part 3 — Etiketter Del 3

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 82 006		WARNING JACK	1	Label	Etikett	
0020								
0030	2	69 56 684		305), CHILD LOCK	2	Label	Etikett	5
0040								
0045	2A	45 58 433		306), LH, CHILD LOCK	1	Label	Etikett	5
0047	2A	45 58 441		306), RH, CHILD LOCK	1	Label	Etikett	5
0049								
0050	3	40 23 636		-1996,UNLEADED FUEL ONLY	1	Label	Etikett	4
0055	3	47 26 717		1997-,UNLEADED FUEL ONLY	1	Label	Etikett	4
0060	3	40 23 644		-1996, UNLEADED FUEL ONLY, AU	1	Label	Etikett	4
0061								
0065	3	47 26 725		1997-, UNLEADED FUEL ONLY, AU	1	Label	Etikett	4
0066								
0070								
0230	4	95 68 049		ANTI-THEFT SYSTEM	1	Label	Etikett	5
0240	4A	*46 18 369*		1995-1996, ANTI-THEFT SYSTEM, SE NLS - USE 4710265	1	Label	Etikett	5
0241								
0241								
0245	4A	47 10 265		1997-, ANTI-THEFT SYSTEM SE, EU, GB	1	Label	Etikett	
0246								
0250								
0260	5	46 06 703		-1997,DRIVER SIDE AIRBAG (4475034)	1	Label	Etikett	
0265								
027:								
0280	6	46 06 695		-1997, PASSENGER SIDE AIRBAG, (4474888)	1	Label	Etikett	
0285								
0290								
0300	7	45 32 743		WARNING; BEAM SEAT BELT	2	Label	Etikett	
0310								
0319	8	46 06 711		-1997, PASSENGER SIDE AIRBAG	1	Label	Etikett	
0320								
0330								
0340	9	44 82 139		-1997, JACKING INSTRUCTION, US, CA, AU	1	Label	Etikett	
0350								
0355	9	46 89 949		1998-, JACKING INSTRUCTION, US, CA, AU	1	Label	Etikett	
0356								
0360								
0370	10	46 18 377		1995-1996, STÖLDLARM, SE	1	Label	Etikett	5
0375	10	47 10 265		1997-,STÖLDLARM,SE,EU,GB	1	Label	Etikett	
0380								
0390	11	*46 18 864*		1995-,303,297,298), SE NLS - USE 4710265	X	Label	Etikett	
0390								
0410	11	*46 19 052*		1995-,303,297,298), EU, GB, CY NLS - USE 4710265	X	Label	Etikett	
0411								
0411								
0415	11	46 19 417		297,298,304),-1996, SE, EU, GB, PA	X	Label	Etikett	
0416								
0417	11	47 10 265		297,298), 1997-, PA	X	Label	Etikett	
0420	11	*46 19 060*		1995-,299,297,298),US,CA NLS - USE 4619144	X	Label	Etikett	
0420								
0425	11	46 19 144		300,297,298), US, CA	X	Label	Etikett	
0430								
0440	12	41 93 769		-1996,TEMPORARY SPARE,AU	1	Label	Etikett	
0445	12	45 67 764		1997-,TEMPORARY SPARE,AU	1	Label	Etikett	


199. Ch. -S2042854
297. For transmitter anti theft system — För sändare stöldlarm
298. See SI 111-1550 — Se SI 111-1550
299. Ch. -S2011999, -S7013754
300. Ch. S2012000-, S7013755-
303. Ch. -S2032749, -S7019310
304. Ch. S2032750-, S7019311-
305. Ch. -S2042820
306. Ch. S2042821-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

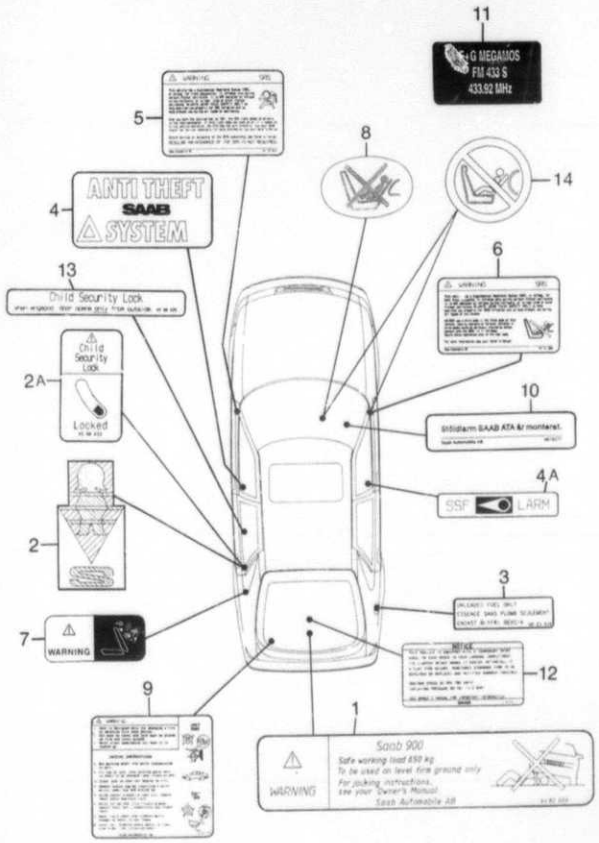

F8710 AAC94

6-C18 Labels Part 3

Etiketter Del 3

0210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450								
0460	13	45 58 425		306),CHILD SECURITY LOCK US, CA	2	Label	Etikett	5
0470								
0480								
0490	14	50 10 129		1998-, PASSANGER SIDE AIRBAG, Ø 30MM	1	Label	Etikett	
0500								
0510	14	50 11 465		1998-, PASSANGER SIDE AIRBAG, Ø 50MM	1	Label	Etikett	
0520								

306. Ch. S2042R21-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

8D GROUP INDEX

Tool kit	6-C06
Labels	6-C08

10

Numerical register
Nummerregister
Indice numérico

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 02 358	07	015	4-G16
40 03 372	06	007	4-F08
40 03 380	06	007	4-F08
40 10 138	02	075	1-F04
40 10 138	02	077	1-F06
40 10 617	08A	095	5-D24
40 10 617	08A	099	5-E04
40 13 603	08A	123	5-F04
40 13 603	08A	159	5-G16
40 23 297	02	099	1-G04
40 23 636	08D	015	6-C16
40 23 644	08D	015	6-C16
40 27 488	02	059	1-E12
40 27 488	02	157	1-I14
40 27 850	04	037	4-B14
40 27 868	04	037	4-B14
40 27 876	04	037	4-B14
40 27 892	04	037	4-B14
40 27 934	04	037	4-B14
40 27 942	04	037	4-B14
40 30 359	08B	081	5-K10
40 37 735	08A	087	5-D16
40 37 735	08A	089	5-D18
40 37 735	08A	093	5-D22
40 53 773	08B	025	5-I02
40 54 078	08B	083	5-K12
40 60 869	03B	037	2-K14
40 60 869	03B	095	3-B04
40 60 869	03B	175	3-E12
40 60 869	03B	255	3-H20
40 60 893	03B	047	2-K24
40 60 893	03B	105	3-B14
40 60 893	03B	113	3-B22
40 60 893	03B	185	3-E22
40 60 893	03B	193	3-F06
40 60 893	03B	265	3-I06
40 60 893	03B	273	3-I14
40 61 255	03A	067	2-C20
40 61 503	03B	059	2-L12
40 61 503	03B	129	3-C14
40 61 503	03B	133	3-C18
40 61 503	03B	209	3-F22
40 61 503	03B	213	3-G02
40 61 503	03B	289	3-J06
40 61 503	03B	293	3-J10
40 61 586	03B	005	2-J06
40 61 586	03B	007	2-J08
40 61 586	03B	009	2-J10
40 61 586	03B	011	2-J12
40 61 586	03B	013	2-J14
40 61 586	03B	015	2-J16
40 61 586	03B	017	2-J18
40 61 586	03B	019	2-J20
40 61 586	03B	021	2-J22
40 61 586	03B	023	2-J24
40 61 586	03B	025	2-K02
40 61 586	03B	027	2-K04
40 61 586	03B	055	2-L08
40 61 586	03B	063	2-L16
40 61 586	03B	065	2-L18
40 61 586	03B	067	2-L20
40 61 586	03B	069	2-L22
40 61 586	03B	071	2-L24
40 61 586	03B	073	3-A06
40 61 586	03B	075	3-A08
40 61 586	03B	077	3-A10
40 61 586	03B	079	3-A12
40 61 586	03B	081	3-A14
40 61 586	03B	083	3-A16
40 61 586	03B	085	3-A18
40 61 586	03B	137	3-C22
40 61 586	03B	141	3-D02
40 61 586	03B	143	3-D04
40 61 586	03B	145	3-D06
40 61 586	03B	147	3-D08
40 61 586	03B	149	3-D10
40 61 586	03B	151	3-D12
40 61 586	03B	153	3-D14
40 61 586	03B	157	3-D18
40 61 586	03B	159	3-D20
40 61 586	03B	161	3-D22
40 61 586	03B	163	3-D24
40 61 586	03B	167	3-E04
40 61 586	03B	217	3-G06
40 61 586	03B	221	3-G10
40 61 586	03B	223	3-G12
40 61 586	03B	225	3-G14
40 61 586	03B	227	3-G16
40 61 586	03B	229	3-G18
40 61 586	03B	231	3-G20
40 61 586	03B	233	3-G22
40 61 586	03B	237	3-H02
40 61 586	03B	239	3-H04
40 61 586	03B	241	3-H06
40 61 586	03B	243	3-H08
40 61 586	03B	247	3-H12
40 61 586	03B	297	3-J14
40 61 586	03B	301	3-J18
40 61 586	03B	307	3-J24
40 61 586	03B	313	3-K06
40 61 883	03A	067	2-C20
40 61 958	03B	055	2-L08
40 61 966	03B	005	2-J06
40 61 966	03B	007	2-J08
40 61 966	03B	025	2-K02
40 61 966	03B	027	2-K04
40 61 966	03B	047	2-K24
40 61 966	03B	063	2-L16
40 61 966	03B	065	2-L18
40 61 966	03B	083	3-A16
40 61 966	03B	085	3-A18
40 61 966	03B	105	3-B14
40 61 966	03B	113	3-B22
40 61 966	03B	137	3-C22
40 61 966	03B	141	3-D02
40 61 966	03B	161	3-D22
40 61 966	03B	163	3-D24
40 61 966	03B	185	3-E22
40 61 966	03B	193	3-F06
40 61 966	03B	217	3-G06
40 61 966	03B	221	3-G10
40 61 966	03B	241	3-H06
40 61 966	03B	243	3-H08
40 61 966	03B	265	3-I06
40 61 966	03B	273	3-I14
40 61 974	03B	005	2-J06
40 61 974	03B	007	2-J08
40 61 974	03B	011	2-J12
40 61 974	03B	013	2-J14
40 61 974	03B	015	2-J16
40 61 974	03B	017	2-J18
40 61 974	03B	019	2-J20
40 61 974	03B	021	2-J22
40 61 974	03B	023	2-J24
40 61 974	03B	055	2-L08
40 61 974	03B	063	2-L16
40 61 974	03B	065	2-L18
40 61 974	03B	069	2-L22
40 61 974	03B	071	2-L24
40 61 974	03B	073	3-A06
40 61 974	03B	075	3-A08
40 61 974	03B	077	3-A10
40 61 974	03B	079	3-A12
40 61 974	03B	081	3-A14
40 61 974	03B	137	3-C22
40 61 974	03B	141	3-D02
40 61 974	03B	145	3-D06
40 61 974	03B	147	3-D08
40 61 974	03B	149	3-D10
40 61 974	03B	151	3-D12
40 61 974	03B	153	3-D14
40 61 974	03B	155	3-D16
40 61 974	03B	157	3-D18
40 61 974	03B	167	3-E04
40 61 974	03B	217	3-G06
40 61 974	03B	221	3-G10
40 61 974	03B	225	3-G14
40 61 974	03B	227	3-G16
40 61 974	03B	229	3-G18
40 61 974	03B	231	3-G20
40 61 974	03B	233	3-G22
40 61 974	03B	235	3-G24
40 61 974	03B	237	3-H02
40 61 974	03B	247	3-H12
40 61 974	03B	297	3-J14
40 61 974	03B	303	3-J20
40 61 974	03B	309	3-K02
40 63 087	03B	101	3-B10
40 63 087	03B	181	3-E18
40 63 087	03B	261	3-I02
40 63 087	03B	297	3-J14
40 63 087	03B	303	3-J20
40 63 087	03B	309	3-K02
40 63 087	03B	315	3-K08
40 63 681	03A	157	2-G14
40 63 681	05	017	4-D18
40 63 814	03A	051	2-C04
40 63 970	03B	005	2-J06
40 63 970	03B	037	2-K14
40 63 970	03B	063	2-L16
40 63 970	03B	095	3-B04
40 63 970	03B	145	3-D06
40 63 970	03B	153	3-D14
40 63 970	03B	175	3-E12
40 63 970	03B	225	3-G14
40 63 970	03B	233	3-G22
40 63 970	03B	255	3-H20
40 63 970	03B	299	3-J16
40 63 970	03B	303	3-J20
40 63 970	03B	309	3-K02
40 63 970	03B	315	3-K08
40 67 617	03B	047	2-K24
40 67 617	03B	105	3-B14
40 67 617	03B	113	3-B22
40 67 617	03B	185	3-E22
40 67 617	03B	193	3-F06
40 67 617	03B	265	3-I06
40 67 617	03B	273	3-I14
40 69 373	03A	065	2-C18
40 69 704	08B	083	5-K12
40 73 979	08C	027	6-B04
40 73 979	08C	029	6-B06
40 74 027	03A	161	2-G18
40 74 787	08C	025	6-B02
40 85 544	03A	081	2-D10
40 87 078	02	105	1-G10
40 87 086	02	129	1-H10
40 87 128	02	097	1-G02
40 87 128	03A	021	2-A22
40 87 128	03A	069	2-C22
40 87 128	03A	083	2-D12
40 87 128	03A	085	2-D14
40 87 128	03A	159	2-G16
40 87 128	03A	165	2-G22
40 87 128	06	019	4-F20
40 87 128	08A	075	5-D04
40 87 128	08A	107	5-E12
40 87 128	08A	109	5-E14
40 87 128	08A	135	5-F16
40 87 185	02	107	1-G12
40 87 185	08A	077	5-D06
40 87 185	08A	079	5-D08
40 87 185	08A	081	5-D10
40 87 185	08A	083	5-D12
40 87 185	08B	089	5-K18
40 87 219	08B	089	5-K18
40 87 235	02	015	1-C16
40 87 235	02	025	1-D02
40 87 243	02	047	1-D24
40 87 250	04	043	4-B20
40 87 268	04	043	4-B20
40 87 284	08B	061	5-J14
40 87 326	07	009	4-G10
40 87 326	07	011	4-G12
40 87 359	08A	075	5-D04
40 87 367	04	043	4-B20
40 87 375	02	021	1-C22
40 87 383	03A	189	2-H22
40 87 383	03A	193	2-I02
40 87 409	03A	189	2-H22
40 87 409	03A	193	2-I02
40 87 417	03A	191	2-H24
40 87 417	03A	195	2-I04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr	Page Sida	Grid Koord
40 87 425	03A	189	2-H22
40 87 425	03A	193	2-I02
40 87 441	03A	187	2-H20
40 87 441	03A	189	2-H22
40 87 441	03A	193	2-I02
40 87 466	03A	187	2-H20
40 87 466	03A	193	2-I02
40 87 482	03A	189	2-H22
40 87 482	03A	191	2-H24
40 87 482	03A	195	2-I04
40 87 557	03A	005	2-A06
40 87 565	03A	187	2-H20
40 87 565	03A	189	2-H22
40 87 565	03A	193	2-I02
40 87 599	03A	045	2-B22
40 87 599	08A	011	5-A12
40 87 607	08B	099	5-L04
40 87 615	08B	007	5-H08
40 87 615	08B	013	5-H14
40 87 631	06	013	4-F14
40 87 631	06	017	4-F18
40 87 649	02	125	1-H06
40 87 664	02	119	1-G24
40 87 664	02	121	1-H02
40 87 664	08B	007	5-H08
40 87 672	08A	057	5-C10
40 87 672	08A	059	5-C12
40 87 672	08A	061	5-C14
40 87 698	03A	167	2-G24
40 87 698	03A	171	2-H04
40 87 698	03A	175	2-H08
40 87 698	03A	179	2-H12
40 87 698	03A	183	2-H16
40 87 722	02	111	1-G16
40 87 722	02	113	1-G18
40 87 722	02	115	1-G20
40 87 722	02	117	1-G22
40 87 722	02	119	1-G24
40 87 722	02	121	1-H02
40 87 797	03A	035	2-B12
40 87 797	03A	159	2-G16
40 87 797	08A	013	5-A14
40 87 797	08A	015	5-A16
40 87 797	08A	019	5-A20
40 87 805	02	011	1-C12
40 87 805	02	081	1-F10
40 87 821	08D	011	6-C12
40 87 847	08B	089	5-K18
40 87 888	02	009	1-C10
40 87 896	02	117	1-G22
40 87 904	08A	077	5-D06
40 87 904	08A	079	5-D08
40 87 904	08A	081	5-D10
40 87 904	08A	083	5-D12
40 87 912	08A	045	5-B22
40 87 920	02	013	1-C14
40 87 953	03A	039	2-B16
40 87 987	03A	083	2-D12
40 90 981	03A	083	2-D12
40 92 359	03A	055	2-C08
40 94 199	03A	055	2-C08
41 04 014	06	019	4-F20
41 04 048	06	015	4-F16
41 04 048	06	017	4-F18
41 04 048	06	019	4-F20
41 09 070	03A	167	2-G24
41 09 070	03A	171	2-H04
41 09 070	03A	175	2-H08
41 09 070	03A	179	2-H12
41 09 070	03A	183	2-H16
41 09 187	08B	083	5-K12
41 09 195	08B	083	5-K12
41 09 526	03A	065	2-C18
41 11 506	08B	083	5-K12
41 13 007	03B	039	2-K16
41 13 007	03B	059	2-L12
41 13 007	03B	097	3-B06
41 13 007	03B	117	3-C02
41 13 007	03B	119	3-C04
41 13 007	03B	121	3-C06
41 13 007	03B	129	3-C14
41 13 007	03B	133	3-C18
41 13 007	03B	135	3-C20
41 13 007	03B	177	3-E14
41 13 007	03B	197	3-F10
41 13 007	03B	199	3-F12
41 13 007	03B	201	3-F14
41 13 007	03B	209	3-F22
41 13 007	03B	213	3-G02
41 13 007	03B	215	3-G04
41 13 007	03B	257	3-H22
41 13 007	03B	277	3-I18
41 13 007	03B	279	3-I20
41 13 007	03B	281	3-I22
41 13 007	03B	289	3-J06
41 13 007	03B	293	3-J10
41 13 007	03B	295	3-J12
41 13 056	03B	039	2-K16
41 13 056	03B	097	3-B06
41 13 056	03B	133	3-C18
41 13 056	03B	177	3-E14
41 13 056	03B	213	3-G02
41 13 056	03B	257	3-H22
41 13 056	03B	293	3-J10
41 13 205	03B	005	2-J06
41 13 205	03B	007	2-J08
41 13 205	03B	009	2-J10
41 13 205	03B	013	2-J14
41 13 205	03B	017	2-J18
41 13 205	03B	021	2-J22
41 13 205	03B	025	2-K02
41 13 205	03B	027	2-K04
41 13 205	03B	037	2-K14
41 13 205	03B	055	2-L08
41 13 205	03B	065	2-L18
41 13 205	03B	067	2-L20
41 13 205	03B	071	2-L24
41 13 205	03B	075	3-A08
41 13 205	03B	083	3-A16
41 13 205	03B	085	3-A18
41 13 205	03B	095	3-B04
41 13 205	03B	119	3-C04
41 13 205	03B	137	3-C22
41 13 205	03B	141	3-D02
41 13 205	03B	143	3-D04
41 13 205	03B	147	3-D08
41 13 205	03B	149	3-D10
41 13 205	03B	151	3-D12
41 13 205	03B	153	3-D14
41 13 205	03B	157	3-D18
41 13 205	03B	161	3-D22
41 13 205	03B	163	3-D24
41 13 205	03B	175	3-E12
41 13 205	03B	229	3-G18
41 13 205	03B	231	3-G20
41 13 205	03B	233	3-G22
41 13 205	03B	237	3-H02
41 13 205	03B	241	3-H06
41 13 205	03B	243	3-H08
41 13 254	03B	047	2-K24
41 13 254	03B	105	3-B14
41 13 254	03B	113	3-B22
41 13 254	03B	185	3-E22
41 13 254	03B	193	3-F06
41 13 254	03B	265	3-I06
41 13 254	03B	273	3-I14
41 13 403	03B	007	2-J08
41 13 403	03B	065	2-L18
41 13 403	03B	135	3-C20
41 13 403	03B	141	3-D02
41 13 403	03B	215	3-G04
41 13 403	03B	221	3-G10
41 13 411	03B	009	2-J10
41 13 411	03B	055	2-L08
41 13 411	03B	057	2-L10
41 13 411	03B	067	2-L20
41 13 411	03B	121	3-C06
41 13 411	03B	125	3-C10
41 13 411	03B	127	3-C12
41 13 411	03B	143	3-D04
41 13 411	03B	201	3-F14
41 13 411	03B	205	3-F18
41 13 411	03B	207	3-F20
41 13 411	03B	223	3-G12
41 13 411	03B	281	3-I22
41 13 411	03B	285	3-J02
41 13 411	03B	287	3-J04
41 13 601	03B	007	2-J08
41 13 601	03B	013	2-J14
41 13 601	03B	017	2-J18
41 13 601	03B	019	2-J20
41 13 601	03B	021	2-J22
41 13 601	03B	027	2-K04
41 13 601	03B	055	2-L08
41 13 601	03B	065	2-L18
41 13 601	03B	071	2-L24
41 13 601	03B	075	3-A08
41 13 601	03B	077	3-A10
41 13 601	03B	079	3-A12
41 13 601	03B	085	3-A18
41 13 601	03B	087	3-A20
41 13 601	03B	141	3-D02
41 13 601	03B	147	3-D08
41 13 601	03B	151	3-D12
41 13 601	03B	153	3-D14
41 13 601	03B	157	3-D18
41 13 601	03B	161	3-D22
41 13 601	03B	221	3-G10
41 13 601	03B	227	3-G16
41 13 601	03B	231	3-G20
41 13 601	03B	233	3-G22
41 13 601	03B	237	3-H02
41 13 650	03B	021	2-J22
41 13 650	03B	027	2-K04
41 13 650	03B	079	3-A12
41 13 650	03B	157	3-D18
41 13 650	03B	189	3-F02
41 13 650	03B	197	3-F10
41 13 650	03B	237	3-H02
41 13 650	03B	269	3-I10
41 13 650	03B	277	3-I18
41 13 650	04	011	4-A12
41 13 759	03B	189	3-F02
41 13 759	03B	197	3-F10
41 13 759	03B	269	3-I10
41 13 759	03B	277	3-I18
41 13 809	03B	025	2-K02
41 13 809	03B	041	2-K18
41 13 809	03B	083	3-A16
41 13 809	03B	099	3-B08
41 13 809	03B	119	3-C04
41 13 809	03B	161	3-D22
41 13 809	03B	179	3-E16
41 13 809	03B	199	3-F12
41 13 809	03B	241	3-H06
41 13 809	03B	259	3-H24
41 13 809	03B	279	3-I20
41 14 005	03B	011	2-J12
41 14 005	03B	015	2-J16
41 14 005	03B	017	2-J18
41 14 005	03B	023	2-J24
41 14 005	03B	031	2-K08
41 14 005	03B	033	2-K10
41 14 005	03B	075	3-A08
41 14 005	03B	081	3-A14
41 14 005	03B	089	3-A22
41 14 005	03B	091	3-A24
41 14 005	03B	151	3-D12
41 14 005	03B	167	3-E04
41 14 005	03B	169	3-E06
41 14 005	03B	171	3-E08

Part No Art nr	Gr	Page Sida	Grid Koord
41 14 005	03B	231	3-G20
41 14 005	03B	247	3-H12
41 14 005	03B	249	3-H14
41 14 005	03B	251	3-H16
41 14 054	03B	025	2-K02
41 14 054	03B	043	2-K20
41 14 054	03B	083	3-A16
41 14 054	03B	101	3-B10
41 14 054	03B	161	3-D22
41 14 054	03B	181	3-E18
41 14 054	03B	241	3-H06
41 14 054	03B	261	3-I02
41 14 153	03B	025	2-K02
41 14 153	03B	083	3-A16
41 14 153	03B	161	3-D22
41 14 153	03B	241	3-H06
41 14 401	03B	167	3-E04
41 14 401	03B	247	3-H12
41 14 898	03A	065	2-C18
41 15 002	03B	119	3-C04
41 15 002	03B	199	3-F12
41 15 002	03B	279	3-I20
41 15 077	03B	005	2-J06
41 15 077	03B	011	2-J12
41 15 077	03B	015	2-J16
41 15 077	03B	019	2-J20
41 15 077	03B	027	2-K04
41 15 077	03B	029	2-K06
41 15 077	03B	041	2-K18
41 15 077	03B	043	2-K20
41 15 077	03B	045	2-K22
41 15 077	03B	047	2-K24
41 15 077	03B	049	2-L02
41 15 077	03B	057	2-L10
41 15 077	03B	063	2-L16
41 15 077	03B	069	2-L22
41 15 077	03B	073	3-A06
41 15 077	03B	077	3-A10
41 15 077	03B	085	3-A18
41 15 077	03B	087	3-A20
41 15 077	03B	099	3-B08
41 15 077	03B	101	3-B10
41 15 077	03B	103	3-B12
41 15 077	03B	107	3-B16
41 15 077	03B	111	3-B20
41 15 077	03B	115	3-B24
41 15 077	03B	127	3-C12
41 15 077	03B	133	3-C18
41 15 077	03B	135	3-C20
41 15 077	03B	137	3-C22
41 15 077	03B	145	3-D06
41 15 077	03B	149	3-D10
41 15 077	03B	153	3-D14
41 15 077	03B	163	3-D24
41 15 077	03B	165	3-E02
41 15 077	03B	181	3-E18
41 15 077	03B	183	3-E20
41 15 077	03B	187	3-E24
41 15 077	03B	191	3-F04
41 15 077	03B	195	3-F08
41 15 077	03B	207	3-F20
41 15 077	03B	215	3-G04
41 15 077	03B	225	3-G14
41 15 077	03B	229	3-G18
41 15 077	03B	233	3-G22
41 15 192	03B	019	2-J20
41 15 192	03B	021	2-J22
41 15 192	03B	025	2-K02
41 15 192	03B	047	2-K24
41 15 192	03B	079	3-A12
41 15 192	03B	083	3-A16
41 15 192	03B	105	3-B14
41 15 192	03B	113	3-B22
41 15 192	03B	157	3-D18
41 15 192	03B	159	3-D20
41 15 192	03B	161	3-D22
41 15 192	03B	185	3-E22
41 15 192	03B	189	3-F02
41 15 192	03B	193	3-F06
41 15 192	03B	197	3-F10
41 15 192	03B	237	3-H02
41 15 192	03B	239	3-H04
41 15 192	03B	241	3-H06
41 15 192	03B	265	3-I06
41 15 192	03B	269	3-I10
41 15 192	03B	273	3-I14
41 15 192	03B	277	3-I18
41 15 192	03B	299	3-J16
41 15 192	03B	303	3-J20
41 15 192	03B	309	3-K02
41 15 192	03B	315	3-K08
41 15 283	03B	303	3-J20
41 15 283	03B	309	3-K02
41 15 283	03B	315	3-K08
41 15 408	03B	033	2-K10
41 15 408	03B	091	3-A24
41 15 408	03B	171	3-F08
41 15 408	03B	251	3-H16
41 15 457	03B	011	2-J12
41 15 457	03B	015	2-J16
41 15 457	03B	019	2-J20
41 15 457	03B	027	2-K04
41 15 457	03B	029	2-K06
41 15 457	03B	039	2-K16
41 15 457	03B	057	2-L10
41 15 457	03B	069	2-L22
41 15 457	03B	073	3-A06
41 15 457	03B	077	3-A10
41 15 457	03B	085	3-A18
41 15 457	03B	087	3-A20
41 15 457	03B	097	3-B06
41 15 457	03B	127	3-C12
41 15 457	03B	133	3-C18
41 15 457	03B	135	3-C20
41 15 457	03B	145	3-D06
41 15 457	03B	149	3-D10
41 15 457	03B	153	3-D14
41 15 457	03B	163	3-D24
41 15 457	03B	165	3-E02
41 15 457	03B	177	3-E14
41 15 457	03B	207	3-F20
41 15 457	03B	213	3-G02
41 15 457	03B	215	3-G04
41 15 457	03B	225	3-G14
41 15 457	03B	229	3-G18
41 15 457	03B	233	3-G22
41 15 457	03B	243	3-H08
41 15 457	03B	245	3-H10
41 15 457	03B	257	3-H22
41 15 457	03B	287	3-J04
41 15 457	03B	293	3-J10
41 15 457	03B	295	3-J12
41 15 457	03B	297	3-J14
41 15 457	03B	303	3-J20
41 15 457	03B	309	3-K02
41 15 457	03B	315	3-K08
41 15 499	03B	005	2-J06
41 15 499	03B	015	2-J16
41 15 499	03B	027	2-K04
41 15 499	03B	029	2-K06
41 15 499	03B	033	2-K10
41 15 499	03B	037	2-K14
41 15 499	03B	039	2-K16
41 15 499	03B	043	2-K20
41 15 499	03B	045	2-K22
41 15 499	03B	055	2-L08
41 15 499	03B	059	2-L12
41 15 499	03B	063	2-L16
41 15 499	03B	073	3-A06
41 15 499	03B	085	3-A18
41 15 499	03B	087	3-A20
41 15 499	03B	091	3-A24
41 15 499	03B	095	3-B04
41 15 499	03B	097	3-B06
41 15 499	03B	101	3-B10
41 15 499	03B	103	3-B12
41 15 499	03B	111	3-B20
41 15 499	03B	117	3-C02
41 15 499	03B	119	3-C04
41 15 499	03B	121	3-C06
41 15 499	03B	123	3-C08
41 15 499	03B	125	3-C10
41 15 499	03B	129	3-C14
41 15 499	03B	133	3-C18
41 15 499	03B	135	3-C20
41 15 499	03B	137	3-C22
41 15 499	03B	149	3-D10
41 15 499	03B	163	3-D24
41 15 499	03B	165	3-E02
41 15 499	03B	171	3-E08
41 15 499	03B	175	3-E12
41 15 499	03B	177	3-E14
41 15 499	03B	181	3-E18
41 15 499	03B	183	3-E20
41 15 499	03B	191	3-F04
41 15 499	03B	197	3-F10
41 15 499	03B	199	3-F12
41 15 499	03B	201	3-F14
41 15 499	03B	203	3-F16
41 15 499	03B	205	3-F18
41 15 499	03B	209	3-F22
41 15 499	03B	213	3-G02
41 15 499	03B	215	3-G04
41 15 499	03B	217	3-G06
41 15 499	03B	229	3-G18
41 15 499	03B	243	3-H08
41 15 499	03B	245	3-H10
41 15 499	03B	251	3-H16
41 15 499	03B	255	3-H20
41 15 499	03B	257	3-H22
41 15 499	03B	261	3-I02
41 15 499	03B	263	3-I04
41 15 499	03B	271	3-I12
41 15 499	03B	277	3-I18
41 15 499	03B	279	3-I20
41 15 499	03B	281	3-I22
41 15 499	03B	283	3-I24
41 15 499	03B	285	3-J02
41 15 499	03B	289	3-J06
41 15 499	03B	293	3-J10
41 15 499	03B	295	3-J12
41 15 499	03B	299	3-J16
41 15 499	03B	303	3-J20
41 15 499	03B	309	3-K02
41 15 499	03B	315	3-K08
41 15 580	03B	011	2-J12
41 15 580	03B	015	2-J16
41 15 580	03B	019	2-J20
41 15 580	03B	027	2-K04
41 15 580	03B	029	2-K06
41 15 580	03B	049	2-L02
41 15 580	03B	069	2-L22
41 15 580	03B	073	3-A06
41 15 580	03B	077	3-A10
41 15 580	03B	085	3-A18
41 15 580	03B	087	3-A20
41 15 580	03B	107	3-B16
41 15 580	03B	145	3-D06
41 15 580	03B	149	3-D10
41 15 580	03B	153	3-D14
41 15 580	03B	163	3-D24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 15 580	03B	165	3-E02
41 15 580	03B	187	3-E24
41 15 580	03B	225	3-G14
41 15 580	03B	229	3-G18
41 15 580	03B	233	3-G22
41 15 580	03B	243	3-H08
41 15 580	03B	245	3-H10
41 15 580	03B	267	3-I08
41 15 580	03B	297	3-J14
41 15 580	03B	303	3-J20
41 15 580	03B	309	3-K02
41 15 580	03B	315	3-K08
41 15 580	08B	077	5-K06
41 15 580	08B	065	5-K14
41 17 164	03B	041	2-K18
41 17 164	03B	099	3-B08
41 17 164	03B	133	3-C18
41 17 164	03B	179	3-E16
41 17 164	03B	213	3-G02
41 17 164	03B	259	3-H24
41 17 164	03B	293	3-J10
41 17 164	08B	081	5-K10
41 17 164	08B	099	5-L04
41 17 164	08B	103	5-L08
41 17 263	03B	045	2-K22
41 17 263	03B	049	2-L02
41 17 263	03B	103	3-B12
41 17 263	03B	107	3-B16
41 17 263	03B	111	3-B20
41 17 263	03B	115	3-B24
41 17 263	03B	183	3-E20
41 17 263	03B	187	3-E24
41 17 263	03B	191	3-F04
41 17 263	03B	195	3-F08
41 17 263	03B	263	3-I04
41 17 263	03B	267	3-I08
41 17 263	03B	271	3-I12
41 17 263	03B	275	3-I16
41 17 263	04	037	4-B14
41 17 362	03B	049	2-L02
41 17 362	03B	107	3-B16
41 17 362	03B	115	3-B24
41 17 362	03B	187	3-E24
41 17 362	03B	195	3-F08
41 17 362	03B	267	3-I08
41 17 362	03B	275	3-I16
41 17 461	03B	005	2-J06
41 17 461	03B	047	2-K24
41 17 461	03B	063	2-L16
41 17 461	03B	137	3-C22
41 17 461	03B	217	3-G06
41 17 560	03B	049	2-L02
41 17 560	03B	107	3-B16
41 17 560	03B	187	3-E24
41 17 560	03B	267	3-I08
41 17 768	08B	075	5-K04
41 17 768	08B	079	5-K08
41 17 768	08B	083	5-K12
41 21 588	04	037	4-B14
41 40 315	08B	061	5-J14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 56 295	02	059	1-E12
41 56 550	02	069	1-E22
41 56 618	08D	011	6-C12
41 58 762	02	105	1-G10
41 59 265	02	071	1-E24
41 60 099	03A	015	2-A16
41 60 511	02	069	1-E22
41 61 162	02	067	1-E20
41 61 162	02	141	1-H22
41 61 261	02	135	1-H16
41 63 853	02	067	1-E20
41 64 141	02	071	1-E24
41 65 171	06	019	4-F20
41 71 856	08A	105	5-E10
41 73 803	03B	005	2-J06
41 73 803	03B	043	2-K20
41 73 803	03B	045	2-K22
41 73 803	03B	063	2-L16
41 73 803	03B	101	3-B10
41 73 803	03B	103	3-B12
41 73 803	03B	111	3-B20
41 73 803	03B	137	3-C22
41 73 803	03B	181	3-E18
41 73 803	03B	183	3-E20
41 73 803	03B	191	3-F04
41 73 803	03B	217	3-G06
41 73 803	03B	261	3-I02
41 73 803	03B	263	3-I04
41 73 803	03B	271	3-I12
41 73 852	03B	011	2-J12
41 73 852	03B	015	2-J16
41 73 852	03B	019	2-J20
41 73 852	03B	027	2-K04
41 73 852	03B	029	2-K06
41 73 852	03B	069	2-L22
41 73 852	03B	073	3-A06
41 73 852	03B	077	3-A10
41 73 852	03B	085	3-A18
41 73 852	03B	087	3-A20
41 73 852	03B	145	3-D06
41 73 852	03B	149	3-D10
41 73 852	03B	153	3-D14
41 73 852	03B	163	3-D24
41 73 852	03B	165	3-E02
41 73 852	03B	225	3-G14
41 73 852	03B	229	3-G18
41 73 852	03B	233	3-G22
41 73 852	03B	243	3-H08
41 73 852	03B	245	3-H10
41 75 295	05	009	4-D10
41 76 095	02	133	1-H14
41 76 095	03A	159	2-G16
41 76 186	03B	185	3-E22
41 76 186	03B	265	3-I06
41 76 616	03B	015	2-J16
41 76 616	03B	027	2-K04
41 76 616	03B	073	3-A06
41 76 616	03B	085	3-A18
41 76 616	03B	149	3-D10
41 76 616	03B	163	3-D24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 76 616	03B	229	3-G18
41 76 616	03B	243	3-H08
41 78 414	03B	005	2-J06
41 78 414	03B	011	2-J12
41 78 414	03B	013	2-J14
41 78 414	03B	015	2-J16
41 78 414	03B	017	2-J18
41 78 414	03B	019	2-J20
41 78 414	03B	021	2-J22
41 78 414	03B	063	2-L16
41 78 414	03B	069	2-L22
41 78 414	03B	071	2-L24
41 78 414	03B	073	3-A06
41 78 414	03B	075	3-A08
41 78 414	03B	077	3-A10
41 78 414	03B	079	3-A12
41 78 414	03B	137	3-C22
41 78 414	03B	145	3-D06
41 78 414	03B	147	3-D08
41 78 414	03B	149	3-D10
41 78 414	03B	151	3-D12
41 78 414	03B	217	3-G06
41 78 414	03B	225	3-G14
41 78 414	03B	227	3-G16
41 78 414	03B	229	3-G18
41 78 414	03B	231	3-G20
41 90 831	08D	011	6-C12
41 93 157	08D	005	6-C06
41 93 199	06	019	4-F20
41 93 587	07	013	4-G14
41 93 769	08D	015	6-C16
41 95 822	04	047	4-B24
41 98 883	08D	005	6-C06
41 98 891	08D	005	6-C06
41 99 980	07	013	4-G14
42 00 051	08B	099	5-L04
42 00 150	08B	101	5-L06
42 00 168	08B	101	5-L06
42 01 190	03B	055	2-L08
42 01 190	03B	057	2-L10
42 01 190	03B	127	3-C12
42 01 190	03B	207	3-F20
42 01 190	03B	287	3-J04
42 01 208	03B	055	2-L08
42 01 208	03B	125	3-C10
42 01 208	03B	205	3-F18
42 01 208	03B	285	3-J02
42 01 224	03B	005	2-J06
42 01 224	03B	023	2-J24
42 01 224	03B	025	2-K02
42 01 224	03B	027	2-K04
42 01 224	03B	033	2-K10
42 01 224	03B	063	2-L16
42 01 224	03B	081	3-A14
42 01 224	03B	083	3-A16
42 01 224	03B	085	3-A18
42 01 224	03B	091	3-A24
42 01 224	03B	137	3-C22
42 01 224	03B	161	3-D22
42 01 224	03B	163	3-D24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 01 224	03B	171	3-E08
42 01 224	03B	217	3-G06
42 01 224	03B	241	3-H06
42 01 224	03B	243	3-H08
42 01 224	03B	251	3-H16
42 01 232	03B	005	2-J06
42 01 232	03B	023	2-J24
42 01 232	03B	025	2-K02
42 01 232	03B	027	2-K04
42 01 232	03B	033	2-K10
42 01 232	03B	047	2-K24
42 01 232	03B	063	2-L16
42 01 232	03B	081	3-A14
42 01 232	03B	083	3-A16
42 01 232	03B	085	3-A18
42 01 232	03B	091	3-A24
42 01 232	03B	105	3-B14
42 01 232	03B	113	3-B22
42 01 232	03B	137	3-C22
42 01 232	03B	161	3-D22
42 01 232	03B	163	3-D24
42 01 232	03B	171	3-E08
42 01 232	03B	185	3-E22
42 01 232	03B	193	3-F06
42 01 232	03B	217	3-G06
42 01 232	03B	241	3-H06
42 01 232	03B	243	3-H08
42 01 232	03B	251	3-H16
42 01 232	03B	265	3-I06
42 01 232	03B	273	3-I14
42 01 273	03B	025	2-K02
42 01 273	03B	083	3-A16
42 01 273	03B	161	3-D22
42 01 273	03B	241	3-H06
42 01 315	03B	005	2-J06
42 01 315	03B	063	2-L16
42 01 315	03B	137	3-C22
42 01 315	03B	217	3-G06
42 01 323	03B	047	2-K24
42 01 323	03B	105	3-B14
42 01 323	03B	113	3-B22
42 01 323	03B	193	3-F06
42 01 323	03B	273	3-I14
42 02 081	08B	013	5-H14
42 02 107	03A	045	2-B22
42 02 123	08B	013	5-H14
42 02 222	08B	017	5-H18
42 02 461	08B	097	5-L02
42 02 719	03A	187	2-H20
42 02 826	08B	087	5-K16
42 02 842	08B	089	5-K18
42 02 859	08B	089	5-K18
42 02 933	03A	063	2-C16
42 02 982	03A	081	2-D10
42 03 253	03B	045	2-K22
42 03 253	03B	103	3-B12
42 03 253	03B	111	3-B20
42 03 253	03B	183	3-E20
42 03 253	03B	191	3-F04
42 03 253	03B	263	3-I04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 03 253	03B	271	3-I12
42 03 261	03B	055	2-L08
42 03 261	03B	125	3-C10
42 03 261	03B	205	3-F18
42 03 261	03B	285	3-J02
42 03 378	03B	021	2-J22
42 03 378	03B	079	3-A12
42 03 378	03B	157	3-D18
42 03 378	03B	237	3-H02
42 03 428	03B	047	2-K24
42 03 428	03B	105	3-B14
42 03 428	03B	113	3-B22
42 03 428	03B	185	3-E22
42 03 428	03B	193	3-F06
42 03 428	03B	265	3-I06
42 03 428	03B	273	3-I14
42 03 444	03B	023	2-J24
42 03 444	03B	081	3-A14
42 03 451	03B	023	2-J24
42 03 451	03B	081	3-A14
42 03 477	03B	023	2-J24
42 03 477	03B	081	3-A14
42 03 485	03B	023	2-J24
42 03 485	03B	081	3-A14
42 03 501	03B	023	2-J24
42 03 501	03B	081	3-A14
42 03 519	03B	023	2-J24
42 03 519	03B	081	3-A14
42 03 535	03B	023	2-J24
42 03 535	03B	081	3-A14
42 03 543	03B	023	2-J24
42 03 543	03B	081	3-A14
42 03 568	03B	027	2-K04
42 03 568	03B	085	3-A18
42 03 568	03B	163	3-D24
42 03 568	03B	243	3-H08
42 03 576	03B	027	2-K04
42 03 576	03B	085	3-A18
42 03 576	03B	163	3-D24
42 03 576	03B	243	3-H08
42 03 592	03B	023	2-J24
42 03 592	03B	081	3-A14
42 03 618	03B	033	2-K10
42 03 618	03B	091	3-A24
42 03 618	03B	171	3-E08
42 03 618	03B	251	3-H16
42 03 626	03B	033	2-K10
42 03 626	03B	041	2-K18
42 03 626	03B	091	3-A24
42 03 626	03B	099	3-B08
42 03 626	03B	171	3-E08
42 03 626	03B	179	3-E16
42 03 626	03B	251	3-H16
42 03 626	03B	259	3-H24
42 03 659	03B	043	2-K20
42 03 659	03B	101	3-B10
42 03 659	03B	181	3-E18
42 03 659	03B	261	3-I02
42 03 683	03B	045	2-K22
42 03 683	03B	103	3-B12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 03 683	03B	111	3-B20
42 03 683	03B	183	3-E20
42 03 683	03B	191	3-F04
42 03 683	03B	263	3-I04
42 03 683	03B	271	3-I12
42 03 733	03B	041	2-K18
42 03 733	03B	181	3-E18
42 03 733	03B	261	3-I02
42 03 766	08C	021	6-A22
42 03 774	08C	021	6-A22
42 04 053	08B	063	5-J16
42 04 293	08B	063	5-J16
42 04 608	08B	063	5-J16
42 04 616	08B	063	5-J16
42 04 814	08B	067	5-J20
42 04 830	08A	011	5-A12
42 04 871	08B	093	5-K22
42 10 571	08B	087	5-K16
42 10 746	08B	087	5-K16
42 10 753	08B	087	5-K16
42 11 017	08B	071	5-J24
42 11 025	08B	071	5-J24
42 11 033	08B	071	5-J24
42 11 041	08B	071	5-J24
42 11 058	08B	079	5-K08
42 11 066	08B	079	5-K08
42 11 074	08B	079	5-K08
42 11 082	08B	079	5-K08
42 11 595	08B	077	5-K06
42 11 595	08B	085	5-K14
42 11 751	08B	073	5-K02
42 11 751	08B	081	5-K10
42 11 801	08B	073	5-K02
42 11 801	08B	081	5-K10
42 11 819	08B	073	5-K02
42 11 819	08B	081	5-K10
42 11 918	08B	081	5-K10
42 11 926	08B	081	5-K10
42 11 934	08B	081	5-K10
42 11 942	08B	081	5-K10
42 11 983	08B	073	5-K02
42 11 983	08B	081	5-K10
42 11 991	08B	073	5-K02
42 11 991	08B	081	5-K10
42 12 098	08B	075	5-K04
42 12 106	08B	075	5-K04
42 12 130	04	009	4-A10
42 12 148	05	019	4-D20
42 12 403	08B	087	5-K16
42 13 500	08B	087	5-K16
42 13 914	08B	079	5-K08
42 13 930	08B	083	5-K12
42 13 948	08B	083	5-K12
42 13 955	08B	083	5-K12
42 13 963	08B	083	5-K12
42 14 581	08B	073	5-K02
42 14 581	08B	081	5-K10
42 14 599	08B	073	5-K02
42 14 599	08B	081	5-K10
42 14 664	08B	075	5-K04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 14 672	08B	075	5-K04
42 14 680	08B	073	5-K02
42 14 714	08B	073	5-K02
42 14 748	08B	087	5-K16
42 14 755	08B	087	5-K16
42 14 771	08B	087	5-K16
42 15 067	08B	057	5-J10
42 15 075	08B	057	5-J10
42 15 083	08B	057	5-J10
42 15 091	08B	057	5-J10
42 15 364	08A	121	5-F02
42 16 602	08B	005	5-H06
42 16 610	08B	005	5-H06
42 17 006	08B	019	5-H20
42 17 188	08B	043	5-I20
42 17 188	08B	047	5-I24
42 17 188	08B	057	5-J10
42 18 228	08B	021	5-H22
42 18 277	08A	079	5-D08
42 18 277	08B	021	5-H22
42 18 368	08B	009	5-H10
42 18 665	08B	013	5-H14
42 18 673	08B	017	5-H18
42 18 723	08B	063	5-J16
42 18 731	08B	063	5-J16
42 18 749	08B	063	5-J16
42 18 756	08B	063	5-J16
42 18 764	08D	005	6-C06
42 19 101	08B	013	5-H14
42 19 192	08B	005	5-H06
42 19 218	08B	005	5-H06
42 19 226	08B	005	5-H06
42 19 242	08B	005	5-H06
42 19 374	08B	005	5-H06
42 19 564	08B	067	5-J20
42 19 572	08B	067	5-J20
42 20 745	03A	089	2-D18
42 20 752	03A	089	2-D18
42 20 885	03A	097	2-E02
42 21 230	03A	079	2-D08
42 21 552	08C	021	6-A22
42 21 560	08C	021	6-A22
42 21 586	08C	021	6-A22
42 21 594	08C	021	6-A22
42 21 610	08C	021	6-A22
42 21 628	08C	021	6-A22
42 21 644	08C	021	6-A22
42 21 651	08C	021	6-A22
42 21 677	08C	021	6-A22
42 21 685	08C	021	6-A22
42 21 735	08B	005	5-H06
42 21 826	03A	011	2-A12
42 21 875	03A	005	2-A06
42 22 196	08B	005	5-H06
42 22 204	08B	005	5-H06
42 22 287	03A	161	2-G18
42 22 311	03B	011	2-J12
42 22 311	03B	019	2-J20
42 22 311	03B	043	2-K20
42 22 311	03B	069	2-L22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 22 311	03B	077	3-A10
42 22 311	03B	101	3-B10
42 22 311	03B	145	3-D06
42 22 311	03B	153	3-D14
42 22 311	03B	181	3-E18
42 22 311	03B	225	3-G14
42 22 311	03B	233	3-G22
42 22 311	03B	261	3-I02
42 22 352	03B	045	2-K22
42 22 352	03B	103	3-B12
42 22 352	03B	111	3-B20
42 22 352	03B	183	3-E20
22 352	03B	191	3-F04
42 22 352	03B	263	3-I04
42 22 352	03B	271	3-I12
42 22 360	03B	055	2-L08
42 22 360	03B	125	3-C10
42 22 360	03B	205	3-F18
42 22 360	03B	285	3-J02
42 22 451	03B	145	3-D06
42 22 451	03B	153	3-D14
42 22 451	03B	225	3-G14
42 22 451	03B	233	3-G22
42 22 493	03A	065	2-C18
42 22 667	03A	005	2-A06
42 22 824	03A	165	2-G22
42 22 964	08B	099	5-L04
42 22 972	08B	099	5-L04
42 23 426	03A	065	2-C18
42 23 467	03B	005	2-J06
42 23 467	03B	063	2-L16
42 23 541	03B	153	3-D14
42 23 541	03B	233	3-G22
42 23 558	03B	153	3-D14
42 23 558	03B	233	3-G22
42 23 566	03B	153	3-D14
42 23 566	03B	233	3-G22
42 23 574	03B	153	3-D14
42 23 574	03B	233	3-G22
42 23 582	03B	153	3-D14
42 23 582	03B	233	3-G22
42 23 590	03B	153	3-D14
42 23 590	03B	233	3-G22
42 23 624	03B	037	2-K14
42 23 624	03B	095	3-B04
42 23 624	03B	175	3-E12
42 23 624	03B	255	3-H20
42 23 988	03A	065	2-C18
42 23 996	03A	065	2-C18
42 24 028	03A	065	2-C18
42 24 036	03A	065	2-C18
42 24 044	03A	065	2-C18
42 24 168	03B	099	3-B08
42 24 168	03B	179	3-E16
42 24 168	03B	259	3-H24
42 24 192	03A	167	2-G24
42 24 192	03A	171	2-H04
42 24 192	03A	175	2-H08
42 24 192	03A	179	2-H12
42 24 192	03A	181	2-H14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 24 192	03A	183	2-H16
42 24 192	03A	185	2-H18
42 24 200	03A	171	2-H04
42 24 200	03A	175	2-H08
42 24 200	03A	179	2-H12
42 24 200	03A	183	2-H16
42 24 317	03B	031	2-K08
42 24 317	03B	089	3-A22
42 24 317	03B	169	3-E06
42 24 317	03B	249	3-H14
42 24 333	03B	031	2-K08
42 24 333	03B	089	3-A22
42 24 333	03B	169	3-E06
42 24 333	03B	249	3-H14
42 24 374	03A	095	2-D24
42 24 457	03B	039	2-K16
42 24 457	03B	097	3-B06
42 24 457	03B	177	3-E14
42 24 457	03B	257	3-H22
42 24 515	03B	033	2-K10
42 24 515	03B	091	3-A24
42 24 515	03B	171	3-E08
42 24 515	03B	251	3-H16
42 24 515	03B	299	3-J16
42 24 515	03B	303	3-J20
42 24 515	03B	309	3-K02
42 24 515	03B	315	3-K08
42 24 531	03B	005	2-J06
42 24 531	03B	063	2-L16
42 24 531	03B	137	3-C22
42 24 531	03B	217	3-G06
42 24 580	03B	005	2-J06
42 24 580	03B	063	2-L16
42 24 598	03B	039	2-K16
42 24 606	03B	029	2-K06
42 24 606	03B	087	3-A20
42 24 606	03B	165	3-E02
42 24 887	03B	019	2-J20
42 24 903	03B	125	3-C10
42 24 903	03B	205	3-F18
42 24 903	03B	285	3-J02
42 24 929	03A	079	2-D08
42 24 937	03A	079	2-D08
42 24 978	03A	079	2-D08
42 25 645	02	067	1-E20
42 25 652	02	067	1-E20
42 25 736	02	109	1-G14
42 25 751	02	109	1-G14
42 25 751	02	113	1-G18
42 25 926	02	115	1-G20
42 25 959	02	109	1-G14
42 26 023	02	063	1-E16
42 26 031	03A	019	2-A20
42 26 098	02	099	1-G04
42 26 320	02	109	1-G14
42 26 320	02	113	1-G18
42 26 320	02	115	1-G20
42 26 320	02	117	1-G22
42 26 320	02	119	1-G24
42 26 395	02	111	1-G16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 26 395	02	113	1-G18
42 26 395	02	115	1-G20
42 26 601	02	079	1-F08
42 26 759	02	067	1-E20
42 26 833	02	135	1-H16
42 26 841	02	135	1-H16
42 26 890	02	067	1-E20
42 26 916	02	067	1-E20
42 26 932	02	067	1-E20
42 26 973	02	067	1-E20
42 27 005	02	079	1-F08
42 27 021	02	067	1-E20
42 27 047	02	067	1-E20
42 27 203	03A	019	2-A20
42 27 203	03A	029	2-B06
42 27 294	02	063	1-E16
42 27 336	02	063	1-E16
42 27 450	02	097	1-G02
42 27 468	02	097	1-G02
42 27 823	02	151	1-I08
42 27 823	03A	069	2-C22
42 27 831	02	105	1-G10
42 27 849	02	067	1-E20
42 27 906	02	079	1-F08
42 28 011	02	099	1-G04
42 28 029	02	079	1-F08
42 28 037	02	075	1-F04
42 28 169	02	157	1-I14
42 28 276	02	063	1-E16
42 28 300	02	063	1-E16
42 28 326	08D	007	6-C08
42 28 334	08D	007	6-C08
42 28 342	08D	007	6-C08
42 28 359	08D	007	6-C08
42 28 367	08D	007	6-C08
42 28 375	08D	007	6-C08
42 28 391	08D	007	6-C08
42 28 409	08D	007	6-C08
42 28 417	08D	007	6-C08
42 28 532	02	153	1-I10
42 28 771	02	135	1-H16
42 28 789	02	135	1-H16
42 28 805	02	135	1-H16
42 28 912	02	151	1-I08
42 28 938	02	151	1-I08
42 28 953	02	151	1-I08
42 29 068	02	157	1-I14
42 29 084	02	011	1-C12
42 29 084	02	149	1-I06
42 29 209	02	111	1-G16
42 29 209	02	113	1-G18
42 29 209	02	115	1-G20
42 29 209	02	117	1-G22
42 29 209	02	119	1-G24
42 29 209	02	121	1-H02
42 29 225	02	111	1-G16
42 29 225	02	113	1-G18
42 29 225	02	115	1-G20
42 29 225	02	117	1-G22
42 29 225	02	119	1-G24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 29 225	02	121	1-H02
42 29 332	02	063	1-E16
42 29 423	02	097	1-G02
42 29 522	02	059	1-E12
42 29 530	02	059	1-E12
42 29 548	02	059	1-E12
42 29 563	02	061	1-E14
42 29 571	02	061	1-E14
42 29 704	02	061	1-E14
42 29 738	02	071	1-E24
42 29 746	02	071	1-E24
42 29 811	02	109	1-G14
42 29 811	02	113	1-G18
42 29 811	02	115	1-G20
42 29 811	02	117	1-G22
42 29 811	02	119	1-G24
42 29 811	02	121	1-H02
42 29 829	02	109	1-G14
42 29 829	02	113	1-G18
42 29 829	02	115	1-G20
42 29 829	02	117	1-G22
42 29 829	02	119	1-G24
42 29 829	02	121	1-H02
42 29 852	02	117	1-G22
42 29 860	02	109	1-G14
42 29 860	02	117	1-G22
42 29 878	02	109	1-G14
42 29 878	02	117	1-G22
42 29 910	02	111	1-G16
42 29 910	02	113	1-G18
42 29 910	02	115	1-G20
42 29 910	02	117	1-G22
42 29 910	02	119	1-G24
42 29 910	02	121	1-H02
42 29 944	02	107	1-G12
42 29 985	02	067	1-E20
42 30 009	03A	165	2-G22
42 30 017	03A	165	2-G22
42 30 074	03A	165	2-G22
42 30 108	03A	169	2-H02
42 30 108	03A	171	2-H04
42 30 108	03A	175	2-H08
42 30 108	03A	181	2-H14
42 30 108	03A	183	2-H16
42 30 140	03A	165	2-G22
42 30 181	03B	025	2-K02
42 30 181	03B	083	3-A16
42 30 181	03B	161	3-D22
42 30 181	03B	241	3-H06
42 30 199	03B	083	3-A16
42 30 199	03B	161	3-D22
42 30 199	03B	241	3-H06
42 30 207	03A	165	2-G22
42 30 231	08C	007	6-A08
42 30 322	08C	007	6-A08
42 30 330	08A	057	5-C10
42 30 330	08A	059	5-C12
42 30 330	08A	061	5-C14
42 30 348	08C	007	6-A08
42 30 363	08B	005	5-H06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 30 454	08C	025	6-B02
42 30 462	08C	027	6-B04
42 30 470	08C	027	6-B04
42 30 488	08C	027	6-B04
42 30 496	08C	027	6-B04
42 30 595	08C	005	6-A06
42 30 645	08C	013	6-A14
42 30 645	08C	019	6-A20
42 30 785	08C	027	6-B04
42 30 827	08A	121	5-F02
42 31 155	08B	093	5-K22
42 31 726	03A	009	2-A10
42 32 021	08B	011	5-H12
42 32 096	08B	017	5-H18
42 32 153	03A	189	2-H22
42 32 179	03A	191	2-H24
42 32 187	03A	191	2-H24
42 32 229	03A	187	2-H20
42 32 294	08B	087	5-K16
42 32 302	08B	087	5-K16
42 32 351	08B	087	5-K16
42 32 369	08B	087	5-K16
42 32 377	08B	087	5-K16
42 32 435	08B	073	5-K02
42 32 435	08B	081	5-K10
42 32 450	08B	073	5-K02
42 32 468	08B	073	5-K02
42 32 484	08B	077	5-K06
42 32 484	08B	085	5-K14
42 32 666	04	017	4-A18
42 32 740	03A	079	2-D08
42 32 765	03A	079	2-D08
42 32 807	03A	079	2-D08
42 32 831	03A	081	2-D10
42 32 872	03A	079	2-D08
42 32 880	03A	081	2-D10
42 32 963	06	011	4-F12
42 33 318	06	011	4-F12
42 33 342	03A	071	2-C24
42 33 375	03A	165	2-G22
42 33 409	06	011	4-F12
42 33 821	08B	009	5-H10
42 33 839	08B	009	5-H10
42 33 987	08B	009	5-H10
42 33 995	08B	009	5-H10
42 34 050	08B	007	5-H08
42 34 084	08B	017	5-H18
42 34 092	08B	017	5-H18
42 34 167	08B	019	5-H20
42 34 662	08B	009	5-H10
42 34 670	08B	009	5-H10
42 34 696	08B	009	5-H10
42 34 704	08B	009	5-H10
42 34 886	08B	099	5-L04
42 34 894	08B	099	5-L04
42 34 977	08B	099	5-L04
42 34 985	08B	099	5-L04
42 34 993	08B	099	5-L04
42 35 040	02	063	1-E16
42 35 222	02	059	1-E12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 35 230	02	059	1-E12
42 35 347	02	109	1-G14
42 35 347	02	117	1-G22
42 35 347	02	119	1-G24
42 35 347	02	121	1-H02
42 35 362	02	109	1-G14
42 35 362	02	113	1-G18
42 35 362	02	115	1-G20
42 35 362	02	117	1-G22
42 35 362	02	119	1-G24
42 35 362	02	121	1-H02
42 35 396	02	111	1-G16
42 35 396	02	113	1-G18
42 35 396	02	115	1-G20
42 35 396	02	117	1-G22
42 35 396	02	119	1-G24
42 35 396	02	121	1-H02
42 35 404	02	111	1-G16
42 35 404	02	113	1-G18
42 35 404	02	115	1-G20
42 35 404	02	117	1-G22
42 35 404	02	119	1-G24
42 35 404	02	121	1-H02
42 35 412	02	111	1-G16
42 35 412	02	113	1-G18
42 35 412	02	115	1-G20
42 35 412	02	117	1-G22
42 35 412	02	119	1-G24
42 35 412	02	121	1-H02
42 35 610	03A	015	2-A16
42 35 636	04	019	4-A20
42 35 636	04	051	4-C04
42 35 651	04	019	4-A20
42 35 651	04	051	4-C04
42 35 727	02	135	1-H16
42 35 735	02	135	1-H16
42 35 768	02	059	1-E12
42 35 768	02	061	1-E14
42 35 768	02	097	1-G02
42 35 768	05	011	4-D12
42 35 990	02	117	1-G22
42 35 990	02	119	1-G24
42 36 014	02	059	1-E12
42 36 022	02	059	1-E12
42 36 030	02	059	1-E12
42 36 048	02	061	1-E14
42 36 055	02	061	1-E14
42 36 063	02	061	1-E14
42 36 089	02	059	1-E12
42 36 113	02	061	1-E14
42 36 147	02	061	1-E14
42 36 154	02	061	1-E14
42 36 238	02	063	1-E16
42 36 956	02	063	1-E16
42 37 020	02	039	1-D16
42 37 038	02	039	1-D16
42 37 046	02	133	1-H14
42 37 061	02	133	1-H14
42 37 491	02	009	1-C10
42 37 632	04	047	4-B24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 37 665	04	047	4-B24
42 37 855	04	061	4-C14
42 37 871	04	061	4-C14
42 37 939	04	061	4-C14
42 38 002	04	061	4-C14
42 38 176	04	053	4-C06
42 38 192	04	051	4-C04
42 38 200	04	051	4-C04
42 38 226	04	055	4-C08
42 38 234	03A	167	2-G24
42 38 234	03A	171	2-H04
42 38 234	03A	175	2-H08
42 38 234	03A	179	2-H12
42 38 234	03A	183	2-H16
42 38 242	04	053	4-C06
42 38 259	04	055	4-C08
42 38 267	04	055	4-C08
42 38 275	04	055	4-C08
42 38 283	04	055	4-C08
42 38 291	03A	165	2-G22
42 38 291	04	011	4-A12
42 38 291	04	055	4-C08
42 38 309	03A	165	2-G22
42 38 309	04	011	4-A12
42 38 309	04	055	4-C08
42 38 416	04	051	4-C04
42 38 424	04	051	4-C04
42 38 432	04	047	4-B24
42 38 457	04	051	4-C04
42 38 515	04	049	4-C02
42 38 531	04	049	4-C02
42 38 556	04	049	4-C02
42 38 622	04	061	4-C14
42 38 630	04	061	4-C14
42 38 648	04	061	4-C14
42 38 655	04	061	4-C14
42 39 000	03A	023	2-A24
42 39 000	03A	197	2-I06
42 39 018	02	075	1-F04
42 39 034	02	061	1-E14
42 39 042	02	107	1-G12
42 39 067	02	061	1-E14
42 39 083	02	097	1-G02
42 39 117	02	097	1-G02
42 39 190	03A	085	2-D14
42 39 216	03A	021	2-A22
42 39 257	02	075	1-F04
42 39 273	02	077	1-F06
42 39 281	02	077	1-F06
42 39 356	03A	085	2-D14
42 39 364	03A	085	2-D14
42 39 463	02	075	1-F04
42 39 588	02	105	1-G10
42 39 596	02	107	1-G12
42 39 638	02	075	1-F04
42 39 646	02	075	1-F04
42 39 653	02	075	1-F04
42 39 810	02	077	1-F06
42 39 828	02	077	1-F06
42 39 919	02	077	1-F06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 39 968	02	071	1-E24
42 39 976	02	103	1-G08
42 40 107	08A	149	5-G06
42 40 149	08A	111	5-E16
42 40 156	08A	107	5-E12
42 40 164	08A	107	5-E12
42 40 172	08A	107	5-E12
42 40 180	08A	107	5-E12
42 40 230	03A	031	2-B08
42 40 248	03A	031	2-B08
42 40 255	03A	031	2-B08
42 40 263	03A	031	2-B08
42 40 271	03A	033	2-B10
42 40 289	03A	033	2-B10
42 40 354	03A	035	2-B12
42 40 362	03A	035	2-B12
42 40 545	03A	053	2-C06
42 40 552	03A	053	2-C06
42 40 685	03A	059	2-C12
42 40 727	03A	055	2-C08
42 40 750	03A	055	2-C08
42 40 792	03A	055	2-C08
42 40 800	03A	055	2-C08
42 40 859	07	013	4-G14
42 40 867	08A	073	5-D02
42 40 883	08A	105	5-E10
42 40 891	08A	105	5-E10
42 40 941	08A	105	5-E10
42 40 958	08A	107	5-E12
42 40 958	08A	109	5-E14
42 40 966	08A	107	5-E12
42 40 966	08A	109	5-E14
42 40 974	08A	107	5-E12
42 40 982	08A	107	5-E12
42 40 990	08A	107	5-E12
42 41 006	08A	107	5-E12
42 41 014	08A	107	5-E12
42 41 022	08A	107	5-E12
42 41 204	05	021	4-D22
42 41 212	05	021	4-D22
42 41 238	05	021	4-D22
42 41 295	05	021	4-D22
42 41 303	05	021	4-D22
42 41 311	05	021	4-D22
42 41 329	05	021	4-D22
42 41 337	05	021	4-D22
42 41 345	05	021	4-D22
42 41 394	08D	005	6-C06
42 41 428	05	005	4-D06
42 41 444	05	015	4-D16
42 41 451	05	005	4-D06
42 41 469	05	007	4-D08
42 41 477	05	007	4-D08
42 41 535	05	007	4-D08
42 41 642	07	013	4-G14
42 41 667	07	013	4-G14
42 41 816	07	005	4-G06
42 41 832	04	009	4-A10
42 41 832	05	019	4-D20
42 41 840	05	019	4-D20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 41 865	04	009	4-A10
42 41 865	05	019	4-D20
42 41 873	04	009	4-A10
42 41 881	04	009	4-A10
42 41 881	05	019	4-D20
42 41 931	07	005	4-G06
42 41 931	07	007	4-G08
42 41 956	02	151	1-I08
42 41 972	02	151	1-I08
42 41 998	02	151	1-I08
42 42 004	02	151	1-I08
42 42 020	05	019	4-D20
42 42 079	02	151	1-I08
42 42 087	05	019	4-D20
42 42 103	05	019	4-D20
42 42 194	05	005	4-D06
42 42 202	06	005	4-F06
42 42 319	04	045	4-B22
42 42 327	04	045	4-B22
42 42 376	04	045	4-B22
42 42 384	04	045	4-B22
42 42 400	04	045	4-B22
42 42 459	04	045	4-B22
42 42 467	04	047	4-B24
42 42 475	04	047	4-B24
42 42 475	04	065	4-C18
42 42 558	05	011	4-D12
42 42 566	05	011	4-D12
42 42 574	05	011	4-D12
42 42 673	06	015	4-F16
42 42 681	06	015	4-F16
42 42 699	06	015	4-F16
42 42 707	06	015	4-F16
42 42 715	06	015	4-F16
42 42 723	06	015	4-F16
42 42 731	06	015	4-F16
42 42 749	06	015	4-F16
42 42 756	06	015	4-F16
42 42 764	06	015	4-F16
42 42 772	06	015	4-F16
42 42 780	02	141	1-H22
42 42 780	06	017	4-F18
42 42 806	06	015	4-F16
42 42 814	06	015	4-F16
42 42 822	06	015	4-F16
42 42 830	06	015	4-F16
42 42 863	06	017	4-F18
42 42 889	06	019	4-F20
42 42 897	06	019	4-F20
42 42 962	06	019	4-F20
42 43 010	05	015	4-D16
42 43 077	05	017	4-D18
42 43 119	05	017	4-D18
42 43 127	05	015	4-D16
42 43 218	05	007	4-D08
42 43 226	04	009	4-A10
42 43 317	07	017	4-G18
42 43 353	05	009	4-D10
42 43 374	05	009	4-D10
42 43 382	05	009	4-D10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -D09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 43 390	07	007	4-G08
42 43 390	07	011	4-G12
42 43 416	05	017	4-D18
42 43 432	05	009	4-D10
42 43 440	05	021	4-D22
42 43 523	07	013	4-G14
42 44 307	05	011	4-D12
42 44 331	05	023	4-D24
42 44 422	05	005	4-D06
42 44 505	07	017	4-G18
42 44 505	07	021	4-G22
42 44 547	05	019	4-D20
42 44 570	05	019	4-D20
42 44 604	07	007	4-G08
42 44 612	05	019	4-D20
42 44 620	05	019	4-D20
42 44 679	02	151	1-I08
42 44 687	02	151	1-I08
42 45 080	05	011	4-D12
42 45 098	05	011	4-D12
42 45 122	07	017	4-G18
42 45 122	07	021	4-G22
42 45 601	05	021	4-D22
42 45 635	05	019	4-D20
42 45 684	05	015	4-D16
42 45 734	07	007	4-G08
42 45 734	07	011	4-G12
42 45 957	08A	107	5-E12
42 45 957	08A	109	5-E14
42 46 062	06	005	4-F06
42 46 104	07	009	4-G10
42 46 112	07	009	4-G10
42 46 112	07	011	4-G12
42 46 336	07	019	4-G20
42 46 336	07	021	4-G22
42 46 344	07	019	4-G20
42 46 344	07	021	4-G22
42 46 377	07	007	4-G08
42 46 377	07	011	4-G12
42 46 450	05	011	4-D12
42 46 567	06	019	4-F20
42 46 591	05	019	4-D20
42 47 003	05	019	4-D20
42 47 110	07	019	4-G20
42 47 185	06	019	4-F20
42 47 219	06	017	4-F18
42 47 292	06	017	4-F18
42 47 326	06	015	4-F16
42 47 557	07	007	4-G08
42 47 565	03A	055	2-C08
42 47 698	05	021	4-D22
42 47 896	07	023	4-G24
42 47 896	07	025	4-H02
42 47 904	04	045	4-B22
42 48 027	08A	109	5-E14
42 48 035	08A	109	5-E14
42 48 043	08A	109	5-E14
42 48 050	08A	109	5-E14
42 48 100	08A	109	5-E14
42 48 118	08A	109	5-E14
42 48 142	08A	109	5-E14
42 48 159	08A	109	5-E14
42 48 241	04	045	4-B22
42 48 324	05	007	4-D08
42 48 415	07	007	4-G08
42 48 431	06	005	4-F06
42 48 449	06	005	4-F06
42 48 589	05	015	4-D16
42 48 605	08A	149	5-G06
42 48 639	08A	147	5-G04
42 48 688	08A	147	5-G04
42 48 720	08A	111	5-E16
42 48 738	08A	147	5-G04
42 48 746	08A	147	5-G04
42 48 753	08A	147	5-G04
42 48 795	08A	149	5-G06
42 48 993	05	017	4-D18
42 49 009	08A	071	5-C24
42 49 090	05	017	4-D18
42 49 272	07	023	4-G24
42 49 272	07	025	4-H02
42 49 405	06	005	4-F06
42 49 413	06	005	4-F06
42 49 744	07	015	4-G16
42 49 751	05	005	4-D06
42 49 793	07	009	4-G10
42 49 793	07	011	4-G12
42 49 967	08A	109	5-E14
42 50 197	03A	053	2-C06
42 50 205	03A	053	2-C06
42 54 249	08A	105	5-E10
42 59 248	08B	013	5-H14
42 59 248	08C	023	6-A24
42 66 003	08D	005	6-C06
42 66 185	08B	021	5-H22
42 66 540	08B	061	5-J14
42 66 540	08B	067	5-J20
42 68 876	08B	095	5-K24
42 68 884	08A	113	5-E18
42 68 892	08A	115	5-E20
42 68 900	08A	113	5-E18
42 68 918	08A	115	5-E20
42 69 957	08B	043	5-I20
42 69 957	08B	049	5-J02
42 69 957	08B	059	5-J12
42 71 425	08B	025	5-I02
42 71 433	08B	025	5-I02
42 71 557	08B	097	5-L02
42 74 619	08B	093	5-K22
42 79 303	04	037	4-B14
42 82 166	04	041	4-B18
42 82 240	04	047	4-B24
42 82 257	04	047	4-B24
42 82 265	04	047	4-B24
42 82 273	04	047	4-B24
42 82 281	04	047	4-B24
42 82 307	04	041	4-B18
42 82 323	04	041	4-B18
42 82 331	04	041	4-B18
42 82 372	04	041	4-B18
42 82 422	04	011	4-A12
42 82 489	04	011	4-A12
42 82 497	04	011	4-A12
42 82 505	04	011	4-A12
42 82 547	04	047	4-B24
42 82 620	04	051	4-C04
42 82 901	04	037	4-B14
42 82 935	04	037	4-B14
42 82 943	04	037	4-B14
42 83 305	02	127	1-H08
42 83 321	02	123	1-H04
42 83 321	02	127	1-H08
42 83 339	02	123	1-H04
42 83 347	02	123	1-H04
42 83 347	02	127	1-H08
42 83 370	02	123	1-H04
42 83 438	02	123	1-H04
42 83 438	02	127	1-H08
42 83 453	02	123	1-H04
42 83 453	02	127	1-H08
42 83 495	02	123	1-H04
42 83 503	02	135	1-H16
42 83 537	02	141	1-H22
42 83 545	02	141	1-H22
42 83 552	02	135	1-H16
42 83 586	02	123	1-H04
42 83 586	02	127	1-H08
42 83 594	02	123	1-H04
42 83 594	02	127	1-H08
42 83 602	02	009	1-C10
42 83 685	02	009	1-C10
42 83 743	02	009	1-C10
42 83 750	02	009	1-C10
42 83 875	02	009	1-C10
42 83 891	02	009	1-C10
42 95 432	08A	007	5-A08
42 95 440	08B	101	5-L06
42 95 580	08A	053	5-C06
42 95 648	08A	061	5-C14
42 95 655	08A	061	5-C14
42 95 663	08A	061	5-C14
42 95 671	08A	055	5-C08
42 95 689	08A	055	5-C08
42 95 697	08A	061	5-C14
42 95 705	08A	061	5-C14
42 95 713	08A	061	5-C14
42 95 721	08A	061	5-C14
42 95 739	08A	061	5-C14
42 95 747	08A	061	5-C14
42 95 754	08A	007	5-A08
42 95 762	08A	007	5-A08
42 95 770	08A	007	5-A08
42 95 788	08A	007	5-A08
42 95 796	08A	007	5-A08
42 95 804	08A	007	5-A08
42 95 812	08A	005	5-A06
42 95 820	08A	005	5-A06
42 95 838	08A	005	5-A06
42 95 846	08A	005	5-A06
42 95 853	08A	067	5-C20
42 95 861	08A	067	5-C20
42 95 879	08A	061	5-C14
42 95 887	08A	061	5-C14
42 95 895	08A	005	5-A06
42 95 903	08A	009	5-A10
42 95 911	08A	009	5-A10
42 95 929	08A	007	5-A08
42 95 937	08A	061	5-C14
42 95 945	08A	061	5-C14
42 95 952	08A	067	5-C20
42 95 960	08A	067	5-C20
42 95 978	08A	067	5-C20
42 95 986	08A	067	5-C20
42 95 994	08A	067	5-C20
42 96 000	08A	067	5-C20
42 96 018	08A	067	5-C20
42 96 026	08A	067	5-C20
42 96 034	08A	067	5-C20
42 96 042	08A	067	5-C20
42 96 059	08A	061	5-C14
42 96 067	08A	061	5-C14
42 96 075	08A	061	5-C14
42 96 083	08A	061	5-C14
42 96 091	08A	061	5-C14
42 96 109	08A	061	5-C14
42 96 117	08A	061	5-C14
42 96 125	08A	061	5-C14
42 96 174	08A	111	5-E16
42 96 182	08A	111	5-E16
42 96 323	08A	005	5-A06
42 96 356	08A	057	5-C10
42 96 356	08A	059	5-C12
42 96 356	08A	061	5-C14
42 96 372	08A	057	5-C10
42 96 372	08A	059	5-C12
42 96 372	08A	061	5-C14
42 96 380	08A	057	5-C10
42 96 380	08A	059	5-C12
42 96 380	08A	061	5-C14
42 96 596	08A	067	5-C20
42 96 604	08A	067	5-C20
42 96 612	08A	061	5-C14
42 96 620	08A	061	5-C14
42 97 966	08A	005	5-A06
42 97 974	08A	005	5-A06
42 97 982	08A	075	5-D04
42 98 444	08A	051	5-C04
42 98 451	08A	051	5-C04
42 98 691	08A	059	5-C12
42 98 709	08A	059	5-C12
43 00 729	03A	019	2-A20
43 00 737	03A	019	2-A20
43 01 545	02	107	1-G12
43 01 677	02	077	1-F06
43 02 501	02	075	1-F04
43 02 519	02	075	1-F04
43 02 709	02	075	1-F04
43 02 717	02	075	1-F04
43 02 725	02	077	1-F06
43 02 733	02	077	1-F06

6 -D10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 02 741	02	075	1-F04
43 03 798	08A	137	5-F18
43 03 798	08A	139	5-F20
43 03 798	08A	145	5-G02
43 04 234	08A	071	5-C24
43 04 234	08A	095	5-D24
43 04 234	08A	099	5-E04
43 04 283	08A	011	5-A12
43 04 556	08A	101	5-E06
43 05 546	08A	095	5-D24
43 05 736	03A	061	2-C14
43 05 991	08A	077	5-D06
43 05 991	08A	081	5-D10
43 05 991	08A	083	5-D12
43 06 312	08A	071	5-C24
43 06 478	03A	061	2-C14
43 06 619	08A	057	5-C10
43 06 619	08A	059	5-C12
43 06 619	08A	061	5-C14
43 06 817	08A	045	5-B22
43 06 825	08A	047	5-B24
43 06 833	08A	079	5-D08
43 07 039	08A	045	5-B22
43 07 153	08A	127	5-F08
43 07 161	08A	127	5-F08
43 07 195	08A	125	5-F06
43 07 211	08A	127	5-F08
43 07 229	08A	127	5-F08
43 07 252	08A	127	5-F08
43 07 260	08A	127	5-F08
43 07 310	08A	131	5-F12
43 07 328	08A	131	5-F12
43 07 351	08A	131	5-F12
43 07 369	08A	131	5-F12
43 07 393	08A	045	5-B22
43 07 401	08A	041	5-B18
43 07 484	03A	083	2-D12
43 07 716	08A	159	5-G16
43 07 724	08A	159	5-G16
43 07 872	08A	077	5-D06
43 07 872	08A	079	5-D08
43 07 872	08A	081	5-D10
43 07 872	08A	083	5-D12
43 07 880	08A	077	5-D06
43 07 880	08A	079	5-D08
43 07 880	08A	081	5-D10
43 07 880	08A	083	5-D12
43 07 914	08A	077	5-D06
43 07 914	08A	081	5-D10
43 07 914	08A	083	5-D12
43 07 922	08A	077	5-D06
43 07 922	08A	081	5-D10
43 07 922	08A	083	5-D12
43 07 955	08A	079	5-D08
43 07 963	08A	079	5-D08
43 12 948	08B	091	5-K20
43 18 028	08C	027	6-B04
43 18 028	08C	029	6-B06
43 18 036	08C	013	6-A14
43 18 036	08C	019	6-A20
43 18 036	08C	027	6-B04
43 18 044	08C	013	6-A14
43 18 044	08C	019	6-A20
43 18 044	08C	027	6-B04
43 18 044	08C	029	6-B06
43 18 051	08C	027	6-B04
43 18 051	08C	029	6-B06
43 18 093	08C	025	6-B02
43 18 168	08C	025	6-B02
43 18 762	03A	077	2-D06
43 20 123	03A	055	2-C08
43 20 594	03A	039	2-B16
43 20 966	08A	125	5-F06
43 20 974	08A	137	5-F18
43 20 974	08A	139	5-F20
43 21 774	08A	071	5-C24
43 21 782	08A	071	5-C24
43 21 790	08A	071	5-C24
43 21 808	08A	071	5-C24
43 21 816	08A	071	5-C24
43 21 824	08A	071	5-C24
43 21 881	08A	071	5-C24
43 21 907	08A	071	5-C24
43 22 210	08A	127	5-F08
43 22 228	08A	127	5-F08
43 22 236	08A	127	5-F08
43 22 244	08A	127	5-F08
43 22 350	08A	127	5-F08
43 22 368	08A	127	5-F08
43 22 418	08A	127	5-F08
43 22 426	08A	127	5-F08
43 22 475	08A	127	5-F08
43 22 483	08A	127	5-F08
43 22 491	08A	127	5-F08
43 22 509	08A	127	5-F08
43 22 517	08A	127	5-F08
43 22 525	08A	127	5-F08
43 22 533	08A	127	5-F08
43 22 541	08A	127	5-F08
43 22 558	08A	137	5-F18
43 22 590	08A	137	5-F18
43 22 608	08A	137	5-F18
43 22 632	08A	137	5-F18
43 22 673	08A	127	5-F08
43 22 681	08A	127	5-F08
43 22 699	08A	127	5-F08
43 22 707	08A	127	5-F08
43 22 715	08A	127	5-F08
43 22 723	08A	127	5-F08
43 22 947	08A	101	5-E06
43 22 954	08A	101	5-E06
43 22 996	08A	089	5-D18
43 22 996	08A	093	5-D22
43 23 010	08A	087	5-D16
43 23 028	08A	087	5-D16
43 23 036	08A	087	5-D16
43 23 044	08A	087	5-D16
43 23 051	08A	089	5-D18
43 23 069	08A	089	5-D18
43 23 119	08A	089	5-D18
43 23 135	08A	087	5-D16
43 23 143	08A	087	5-D16
43 23 150	08A	089	5-D18
43 23 168	08A	089	5-D18
43 23 192	08A	085	5-D14
43 23 192	08A	091	5-D20
43 23 200	08A	085	5-D14
43 23 200	08A	091	5-D20
43 23 259	03A	083	2-D12
43 23 283	08A	077	5-D06
43 23 408	08A	095	5-D24
43 23 408	08A	099	5-E04
43 23 994	08A	071	5-C24
43 24 117	08A	137	5-F18
43 24 117	08A	139	5-F20
43 24 117	08A	145	5-G02
43 24 125	08A	137	5-F18
43 24 125	08A	139	5-F20
43 24 125	08A	145	5-G02
43 24 125	08B	103	5-L08
43 24 307	08A	095	5-D24
43 24 398	03A	061	2-C14
43 24 612	08A	089	5-D18
43 24 620	08A	089	5-D18
43 24 786	08A	095	5-D24
43 24 802	08A	095	5-D24
43 24 810	08A	095	5-D24
43 24 828	08A	095	5-D24
43 24 828	08A	099	5-E04
43 24 836	08A	095	5-D24
43 24 836	08A	099	5-E04
43 24 844	08A	095	5-D24
43 24 844	08A	099	5-E04
43 24 901	08A	137	5-F18
43 24 901	08A	139	5-F20
43 24 901	08A	145	5-G02
43 25 023	08A	079	5-D08
43 25 130	08A	127	5-F08
43 25 148	08A	127	5-F08
43 25 379	08A	131	5-F12
43 25 387	08A	131	5-F12
43 25 411	08A	093	5-D22
43 25 429	08A	093	5-D22
43 25 437	08A	093	5-D22
43 25 445	08A	093	5-D22
43 25 452	08A	093	5-D22
43 25 460	08A	093	5-D22
43 25 478	08A	093	5-D22
43 25 486	08A	093	5-D22
43 25 510	08A	131	5-F12
43 25 528	08A	131	5-F12
43 25 577	08A	131	5-F12
43 25 585	08A	131	5-F12
43 25 593	08A	131	5-F12
43 25 601	08A	131	5-F12
43 25 619	08A	139	5-F20
43 25 635	08A	139	5-F20
43 25 643	08A	139	5-F20
43 25 718	08A	131	5-F12
43 25 726	08A	131	5-F12
43 25 759	08A	131	5-F12
43 25 767	08A	131	5-F12
43 25 775	08A	103	5-E08
43 25 783	08A	061	2-C14
43 25 809	08A	103	5-E08
43 25 817	08A	103	5-E08
43 25 957	08A	103	5-E08
43 25 965	08A	103	5-E08
43 26 450	08A	095	5-D24
43 26 450	08A	099	5-E04
43 26 468	08A	095	5-D24
43 26 492	08A	095	5-D24
43 26 690	08A	085	5-D14
43 26 690	08A	091	5-D20
43 26 708	08A	085	5-D14
43 26 708	08A	091	5-D20
43 26 716	08A	085	5-D14
43 26 716	08A	091	5-D20
43 26 724	08A	085	5-D14
43 26 724	08A	091	5-D20
43 26 732	03A	061	2-C14
43 26 732	08A	085	5-D14
43 26 732	08A	089	5-D18
43 26 732	08A	091	5-D20
43 26 740	03A	061	2-C14
43 26 740	08A	085	5-D14
43 26 740	08A	089	5-D18
43 26 740	08A	091	5-D20
43 26 757	08A	085	5-D14
43 26 757	08A	091	5-D20
43 26 765	08A	085	5-D14
43 26 765	08A	091	5-D20
43 26 773	03A	061	2-C14
43 26 781	03A	061	2-C14
43 26 799	03A	061	2-C14
43 26 807	08A	103	5-E08
43 26 815	08A	089	5-D18
43 26 823	08A	089	5-D18
43 26 831	08A	085	5-D14
43 26 831	08A	091	5-D20
43 26 849	08A	085	5-D14
43 26 849	08A	091	5-D20
43 27 235	08A	139	5-F20
43 27 243	08A	139	5-F20
43 27 300	03A	083	2-D12
43 27 318	08A	011	5-A12
43 27 383	08A	095	5-D24
43 27 383	08A	099	5-E04
43 27 532	08A	085	5-D14
43 27 540	08A	123	5-F04
43 27 540	08A	137	5-F18
43 27 649	08A	011	5-A12
43 27 656	08A	011	5-A12
43 27 664	08A	011	5-A12
43 27 672	08A	011	5-A12
43 27 680	08A	011	5-A12
43 27 698	08A	011	5-A12
43 27 706	08A	011	5-A12
43 27 730	08A	011	5-A12
43 27 748	08A	011	5-A12
43 27 755	08A	011	5-A12

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-D11 Numerical register — Nummerregister

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 27 763	08A	011	5-A12
43 27 771	08A	011	5-A12
43 27 789	08A	011	5-A12
43 27 797	08A	011	5-A12
43 27 805	08A	011	5-A12
43 27 813	08A	011	5-A12
43 27 847	08A	011	5-A12
43 27 854	08A	011	5-A12
43 27 862	08A	011	5-A12
43 27 870	08A	011	5-A12
43 27 888	08A	011	5-A12
43 27 904	08A	011	5-A12
43 27 961	08A	011	5-A12
43 27 979	08A	011	5-A12
43 27 995	08A	139	5-F20
43 28 001	08A	139	5-F20
43 28 043	08A	011	5-A12
43 28 134	08A	079	5-D08
43 28 142	08A	079	5-D08
43 28 373	08A	077	5-D06
43 28 373	08A	081	5-D10
43 28 373	08A	083	5-D12
43 28 381	08A	077	5-D06
43 28 381	08A	081	5-D10
43 28 381	08A	083	5-D12
43 28 415	08A	077	5-D06
43 28 423	08A	077	5-D06
43 28 431	08A	079	5-D08
43 28 449	08A	079	5-D08
43 28 555	08A	081	5-D10
43 28 563	08A	081	5-D10
43 28 712	08A	083	5-D12
43 28 720	08A	083	5-D12
43 28 753	08A	123	5-F04
43 28 753	08A	159	5-G16
43 28 779	08A	071	5-C24
43 28 787	08A	071	5-C24
43 28 795	08A	071	5-C24
43 28 803	08A	077	5-D06
43 28 811	08A	077	5-D06
43 28 829	08A	079	5-D08
43 28 837	08A	079	5-D08
43 28 845	08A	095	5-D24
43 29 009	08A	029	5-B06
43 29 991	08A	123	5-F04
43 29 991	08A	159	5-G16
43 30 023	08A	123	5-F04
43 30 031	08A	123	5-F04
43 30 049	08A	123	5-F04
43 30 056	08A	127	5-F08
43 30 064	08A	127	5-F08
43 31 047	08A	005	5-A06
43 32 912	08A	057	5-C10
43 32 912	08A	059	5-C12
43 32 920	08A	057	5-C10
43 32 920	08A	059	5-C12
43 33 480	08A	011	5-A12
43 33 480	08A	069	5-C22
43 33 498	08A	069	5-C22
43 33 506	08A	069	5-C22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 33 548	08A	069	5-C22
43 33 563	08A	069	5-C22
43 33 589	08A	051	5-C04
43 33 704	08A	051	5-C04
43 33 704	08A	111	5-E16
43 33 704	08B	051	5-J04
43 33 811	08A	005	5-A06
43 33 894	08A	051	5-C04
43 33 902	08A	051	5-C04
43 34 454	08A	051	5-C04
43 34 470	08A	111	5-E16
43 34 488	08A	111	5-E16
43 34 678	08A	051	5-C04
43 34 686	08A	051	5-C04
43 34 751	08A	051	5-C04
43 35 527	03A	005	2-A06
43 35 543	08C	029	6-B06
43 35 691	08A	135	5-F16
43 35 709	08A	135	5-F16
43 35 873	08A	139	5-F20
43 36 038	08A	135	5-F16
43 36 046	08A	135	5-F16
43 36 053	08A	075	5-D04
43 37 325	08A	051	5-C04
43 37 457	08A	009	5-A10
43 37 465	08A	009	5-A10
43 37 473	08A	009	5-A10
43 37 481	08A	009	5-A10
43 37 499	08A	051	5-C04
43 37 507	08A	051	5-C04
43 37 515	08A	051	5-C04
43 37 523	08A	051	5-C04
43 37 531	08A	051	5-C04
43 37 549	08A	073	5-D02
43 37 556	08A	053	5-C06
43 37 564	08A	053	5-C06
43 37 572	08A	051	5-C04
43 37 580	08A	051	5-C04
43 37 614	08A	051	5-C04
43 37 622	08A	051	5-C04
43 37 630	08A	051	5-C04
43 37 648	08A	049	5-C02
43 37 655	08A	051	5-C04
43 37 663	08A	051	5-C04
43 37 671	08A	049	5-C02
43 37 689	08A	049	5-C02
43 37 697	08A	049	5-C02
43 37 713	08A	049	5-C02
43 37 739	08A	049	5-C02
43 37 747	08A	007	5-A08
43 37 754	08A	007	5-A08
43 37 796	08A	063	5-C16
43 37 804	08A	063	5-C16
43 37 838	08A	057	5-C10
43 37 846	08A	057	5-C10
43 37 853	08A	057	5-C10
43 37 853	08A	059	5-C12
43 37 853	08A	061	5-C14
43 37 861	08A	057	5-C10
43 37 861	08A	059	5-C12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 37 861	08A	061	5-C14
43 37 879	08A	057	5-C10
43 37 879	08A	059	5-C12
43 37 879	08A	061	5-C14
43 37 887	08A	057	5-C10
43 37 887	08A	059	5-C12
43 37 887	08A	061	5-C14
43 37 895	08A	063	5-C16
43 37 895	08A	065	5-C18
43 37 903	08A	063	5-C16
43 37 903	08A	065	5-C18
43 37 911	08A	057	5-C10
43 37 929	08A	057	5-C10
43 37 937	08A	063	5-C16
43 37 937	08A	065	5-C18
43 37 945	08A	063	5-C16
43 37 945	08A	065	5-C18
43 37 978	08A	063	5-C16
43 37 986	08A	063	5-C16
43 38 018	08A	057	5-C10
43 38 026	08A	057	5-C10
43 38 059	08A	055	5-C08
43 38 067	08A	055	5-C08
43 38 117	08A	057	5-C10
43 38 125	08A	057	5-C10
43 38 679	02	061	1-E14
43 38 752	08A	051	5-C04
43 38 794	08A	057	5-C10
43 38 802	08A	057	5-C10
43 38 836	08A	063	5-C16
43 38 844	08A	063	5-C16
43 38 877	08A	063	5-C16
43 38 885	08A	063	5-C16
43 38 893	08A	063	5-C16
43 38 893	08A	065	5-C18
43 38 901	08A	063	5-C16
43 38 901	08A	065	5-C18
43 38 919	08A	063	5-C16
43 38 927	08A	063	5-C16
43 38 976	08A	075	5-D04
43 38 984	08A	075	5-D04
43 39 032	08A	065	5-C18
43 39 040	08A	065	5-C18
43 39 073	08A	059	5-C12
43 39 081	08A	059	5-C12
43 39 115	08A	059	5-C12
43 39 123	08A	059	5-C12
43 39 156	08A	065	5-C18
43 39 164	08A	065	5-C18
43 39 172	08A	065	5-C18
43 39 180	08A	065	5-C18
43 39 198	08A	065	5-C18
43 39 206	08A	065	5-C18
43 39 214	08A	059	5-C12
43 39 222	08A	059	5-C12
43 39 230	08A	059	5-C12
43 39 248	08A	059	5-C12
43 39 255	08A	059	5-C12
43 39 263	08A	059	5-C12
43 39 271	08A	139	5-F20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 39 289	08A	139	5-F20
43 39 297	08A	057	5-C10
43 39 305	08A	057	5-C10
43 39 313	08A	063	5-C16
43 39 313	08A	065	5-C18
43 39 313	08A	067	5-C20
43 39 321	08A	063	5-C16
43 39 321	08A	065	5-C18
43 39 321	08A	067	5-C20
43 39 768	08A	057	5-C10
43 39 768	08A	059	5-C12
43 39 768	08A	061	5-C14
43 39 842	08A	139	5-F20
43 40 196	08A	057	5-C10
43 40 204	08A	075	5-D04
43 40 246	08A	007	5-A08
43 40 253	08A	007	5-A08
43 40 261	08A	007	5-A08
43 40 279	08A	053	5-C06
43 40 287	08A	053	5-C06
43 40 295	08A	007	5-A08
43 40 303	08A	007	5-A08
43 40 311	08A	005	5-A06
43 40 329	08A	005	5-A06
43 40 337	08A	005	5-A06
43 40 345	08A	005	5-A06
43 40 352	08A	005	5-A06
43 40 360	08A	005	5-A06
43 40 378	08A	005	5-A06
43 40 386	08A	005	5-A06
43 40 394	08A	053	5-C06
43 40 402	08A	053	5-C06
43 40 410	08A	005	5-A06
43 40 428	08A	007	5-A08
43 40 451	08A	053	5-C06
43 40 469	08A	053	5-C06
43 40 477	08A	053	5-C06
43 40 493	08A	053	5-C06
43 40 501	08A	053	5-C06
43 45 047	05	019	4-D20
43 45 120	04	009	4-A10
43 45 120	05	011	4-D12
43 45 138	02	059	1-E12
43 45 138	02	061	1-E14
43 45 138	02	109	1-G14
43 45 138	02	113	1-G18
43 45 138	02	115	1-G20
43 45 138	02	117	1-G22
43 45 138	02	119	1-G24
43 45 138	02	121	1-H02
43 45 153	05	007	4-D08
43 45 245	07	019	4-G20
43 45 252	06	015	4-F16
43 45 344	04	009	4-A10
43 45 344	05	019	4-D20
43 45 344	06	013	4-F14
43 45 419	04	009	4-A10
43 45 419	05	019	4-D20
43 45 419	06	011	4-F12
43 45 419	08A	015	5-A16

6-D12 Numerical register — Nummerregister

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 45 419	08A	019	5-A20
43 45 419	08B	101	5-L06
43 45 435	04	009	4-A10
43 45 435	05	019	4-D20
43 45 443	02	151	1-I08
43 45 443	04	009	4-A10
43 45 443	05	019	4-D20
43 45 450	06	005	4-F06
43 45 567	06	017	4-F18
43 45 575	05	011	4-D12
43 45 583	05	017	4-D18
43 45 591	05	015	4-D16
43 45 609	05	015	4-D16
43 45 658	08A	005	5-A06
43 45 666	08A	005	5-A06
43 45 674	08A	005	5-A06
43 45 716	02	049	1-E02
43 45 724	05	019	4-D20
43 45 724	06	013	4-F14
43 45 799	05	021	4-D22
43 45 815	02	151	1-I08
43 45 864	08A	075	5-D04
43 45 872	08A	075	5-D04
43 45 872	08A	121	5-F02
43 45 872	08A	133	5-F14
43 45 872	08A	145	5-G02
43 45 898	05	011	4-D12
43 45 914	05	017	4-D18
43 45 930	08A	011	5-A12
43 46 078	08A	133	5-F14
43 46 086	08A	077	5-D06
43 46 086	08A	079	5-D08
43 46 086	08A	081	5-D10
43 46 086	08A	083	5-D12
43 46 102	08A	087	5-D16
43 46 102	08A	089	5-D18
43 46 102	08A	093	5-D22
43 46 110	08A	095	5-D24
43 46 110	08A	099	5-E04
43 46 136	08A	085	5-D14
43 46 136	08A	089	5-D18
43 46 136	08A	093	5-D22
43 46 177	08A	101	5-E06
43 46 193	08A	085	5-D14
43 46 193	08A	089	5-D18
43 46 193	08A	091	5-D20
43 46 227	08A	095	5-D24
43 46 235	04	019	4-A20
43 46 235	04	051	4-C04
43 46 300	02	009	1-C10
43 46 342	07	023	4-G24
43 46 342	07	025	4-H02
43 46 375	07	023	4-G24
43 46 375	07	025	4-H02
43 46 466	06	013	4-F14
43 46 482	04	061	4-C14
43 46 508	02	083	1-F12
43 46 524	04	061	4-C14
43 46 532	05	017	4-D18
43 46 649	08A	095	5-D24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 46 664	04	051	4-C04
43 46 748	04	017	4-A18
43 46 771	05	021	4-D22
43 46 789	08A	145	5-G02
43 46 839	02	037	1-D14
43 46 854	02	033	1-D10
43 46 854	02	037	1-D14
43 46 854	02	041	1-D18
43 46 854	02	083	1-F12
43 46 854	02	137	1-H18
43 46 854	02	149	1-I06
43 46 862	07	007	4-G08
43 46 862	07	011	4-G12
43 47 357	07	009	4-G10
43 47 357	07	011	4-G12
43 47 423	08A	085	5-D14
43 47 423	08A	089	5-D18
43 47 423	08A	093	5-D22
43 47 423	08A	095	5-D24
43 47 423	08A	099	5-E04
43 47 431	08A	085	5-D14
43 47 431	08A	089	5-D18
43 47 431	08A	091	5-D20
43 47 449	08A	013	5-A14
43 47 449	08A	015	5-A16
43 47 449	08A	019	5-A20
43 47 480	08A	041	5-B18
43 47 738	02	145	1-I02
43 47 902	02	119	1-G24
43 47 902	02	121	1-H02
43 48 215	02	057	1-E10
43 48 231	02	125	1-H06
43 50 526	03B	137	3-C22
43 50 526	03B	149	3-D10
43 50 526	03B	151	3-D12
43 50 526	03B	153	3-D14
43 50 526	03B	157	3-D18
43 50 526	03B	159	3-D20
43 50 526	03B	217	3-G06
43 50 526	03B	229	3-G18
43 50 526	03B	231	3-G20
43 50 526	03B	233	3-G22
43 50 526	03B	237	3-H02
43 50 526	03B	239	3-H04
43 50 526	03B	301	3-J18
43 50 526	03B	307	3-J24
43 50 526	03B	313	3-K06
43 50 609	03B	159	3-D20
43 50 609	03B	239	3-H04
43 52 928	03B	047	2-K24
43 52 928	03B	105	3-B14
43 52 928	03B	113	3-B22
43 52 928	03B	185	3-E22
43 52 928	03B	193	3-F06
43 52 928	03B	265	3-I06
43 52 928	03B	273	3-I14
43 54 031	03A	093	2-D22
43 54 171	03B	007	2-J08
43 54 171	03B	009	2-J10
43 54 171	03B	055	2-L08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 54 171	03B	057	2-L10
43 54 171	03B	065	2-L18
43 54 171	03B	067	2-L20
43 54 171	03B	125	3-C10
43 54 171	03B	127	3-C12
43 54 171	03B	137	3-C22
43 54 171	03B	141	3-D02
43 54 171	03B	143	3-D04
43 54 171	03B	205	3-F18
43 54 171	03B	207	3-F20
43 54 171	03B	217	3-G06
43 54 171	03B	221	3-G10
43 54 171	03B	223	3-G12
43 54 171	03B	285	3-J02
43 54 171	03B	287	3-J04
43 54 171	03B	297	3-J14
43 54 171	03B	301	3-J18
43 54 171	03B	307	3-J24
43 54 171	03B	313	3-K06
43 54 353	03B	137	3-C22
43 54 353	03B	217	3-G06
43 54 387	03B	007	2-J08
43 54 387	03B	009	2-J10
43 54 387	03B	055	2-L08
43 54 387	03B	057	2-L10
43 54 387	03B	065	2-L18
43 54 387	03B	067	2-L20
43 54 387	03B	125	3-C10
43 54 387	03B	127	3-C12
43 54 387	03B	141	3-D02
43 54 387	03B	143	3-D04
43 54 387	03B	205	3-F18
43 54 387	03B	207	3-F20
43 54 387	03B	221	3-G10
43 54 387	03B	223	3-G12
43 54 387	03B	285	3-J02
43 54 387	03B	287	3-J04
43 56 077	06	019	4-F20
43 56 085	06	019	4-F20
43 56 093	03A	009	2-A10
43 56 093	03A	011	2-A12
43 56 119	02	021	1-C22
43 56 127	02	021	1-C22
43 56 150	02	009	1-C10
43 56 168	02	009	1-C10
43 56 176	02	009	1-C10
43 56 184	02	009	1-C10
43 56 382	02	123	1-H04
43 56 390	02	123	1-H04
43 56 408	02	123	1-H04
43 56 408	02	127	1-H08
43 56 416	02	123	1-H04
43 56 416	02	127	1-H08
43 56 770	02	123	1-H04
43 56 770	02	127	1-H08
43 56 838	02	127	1-H08
43 57 042	02	139	1-H20
43 57 133	02	133	1-H14
43 57 141	02	133	1-H14
43 57 208	02	139	1-H20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 57 224	02	139	1-H20
43 57 414	02	139	1-H20
43 57 489	02	133	1-H14
43 57 752	02	127	1-H08
43 57 760	02	127	1-H08
43 57 778	08D	009	6-C10
43 57 794	02	123	1-H04
43 57 794	02	127	1-H08
43 57 927	02	127	1-H08
43 57 968	02	123	1-H04
43 57 968	02	127	1-H08
43 57 976	02	123	1-H04
43 57 984	02	123	1-H04
43 58 107	02	123	1-H04
43 58 107	02	127	1-H08
43 58 701	02	129	1-H10
43 59 063	02	021	1-C22
43 59 444	08D	009	6-C10
43 60 012	02	129	1-H10
43 60 111	02	039	1-D16
43 60 251	02	101	1-G06
43 60 269	02	103	1-G08
43 60 277	02	103	1-G08
43 60 335	02	099	1-G04
43 60 343	02	101	1-G06
43 60 343	02	103	1-G08
43 60 350	02	099	1-G04
43 60 368	02	099	1-G04
43 60 475	02	009	1-C10
43 60 798	02	123	1-H04
43 60 806	02	123	1-H04
43 64 022	08C	021	6-A22
43 64 030	08C	021	6-A22
43 64 048	08C	021	6-A22
43 64 055	08C	021	6-A22
43 64 105	08C	023	6-A24
43 64 113	08C	023	6-A24
43 64 121	08B	005	5-H06
43 64 139	08B	005	5-H06
43 64 279	08C	011	6-A12
43 64 279	08C	017	6-A18
43 64 295	03A	077	2-D06
43 64 303	08B	005	5-H06
43 64 311	08B	005	5-H06
43 64 600	08C	013	6-A14
43 64 626	08C	013	6-A14
43 64 626	08C	019	6-A20
43 64 634	08C	013	6-A14
43 64 634	08C	019	6-A20
43 64 642	08C	013	6-A14
43 64 683	08C	021	6-A22
43 64 691	08C	021	6-A22
43 64 766	08C	007	6-A08
43 64 790	08C	007	6-A08
43 64 972	03A	077	2-D06
43 65 052	08C	005	6-A06
43 65 110	08C	029	6-B06
43 65 128	08C	029	6-B06
43 65 136	08C	027	6-B04
43 65 201	08C	027	6-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-D13 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
43 65 219	08C	027	6-B04
43 65 227	08C	027	6-B04
43 65 235	08C	027	6-B04
43 65 268	08C	007	6-A08
43 65 375	08C	027	6-B04
43 65 458	03A	077	2-D06
43 65 466	08C	013	6-A14
43 65 466	08C	017	6-A18
43 65 474	08C	011	6-A12
43 65 474	08C	017	6-A18
43 65 482	08C	021	6-A22
43 65 490	08C	021	6-A22
43 65 508	08C	027	6-B04
43 65 516	08C	027	6-B04
43 65 656	08C	007	6-A08
43 65 706	08C	007	6-A08
43 65 748	08C	005	6-A06
43 65 755	08C	005	6-A06
43 65 763	08C	005	6-A06
43 65 771	08C	005	6-A06
43 65 789	08C	005	6-A06
43 65 797	08C	005	6-A06
43 65 847	08C	007	6-A08
43 65 854	08C	007	6-A08
43 65 987	08C	027	6-B04
43 66 233	08C	007	6-A08
43 66 365	08C	011	6-A12
43 66 373	08C	011	6-A12
43 66 381	08C	011	6-A12
43 66 423	08C	011	6-A12
43 66 431	08C	011	6-A12
43 66 498	08C	011	6-A12
43 66 498	08C	015	6-A16
43 66 498	08C	017	6-A18
43 66 506	08C	011	6-A12
43 66 522	08C	013	6-A14
43 66 530	08C	013	6-A14
43 66 530	08C	019	6-A20
43 66 555	08C	011	6-A12
43 66 555	08C	017	6-A18
43 66 589	08C	029	6-B06
43 66 605	08C	013	6-A14
43 66 654	08C	011	6-A12
43 66 662	08C	011	6-A12
43 66 696	08B	019	5-H20
43 66 738	08C	013	6-A14
43 66 738	08C	019	6-A20
43 66 746	08C	009	6-A10
43 66 753	08C	009	6-A10
43 66 779	08C	011	6-A12
43 66 787	08C	011	6-A12
43 66 803	08C	011	6-A12
43 66 837	08C	011	6-A12
43 66 837	08C	017	6-A18
43 66 852	08C	011	6-A12
43 66 852	08C	017	6-A18
43 66 860	08C	019	6-A20
43 66 886	08C	011	6-A12
43 66 886	08C	017	6-A18
43 66 902	08C	007	6-A08
43 66 910	08C	007	6-A08
43 66 928	08C	009	6-A10
43 66 936	08C	009	6-A10
43 66 944	08C	009	6-A10
43 66 951	08C	009	6-A10
43 67 074	08C	027	6-B04
43 67 173	08C	005	6-A06
43 67 199	08C	005	6-A06
43 67 231	03A	077	2-D06
43 67 264	08C	005	6-A06
43 67 603	08C	021	6-A22
43 67 611	08C	021	6-A22
43 67 900	08C	013	6-A14
43 67 900	08C	019	6-A20
43 67 934	08C	013	6-A14
43 67 934	08C	019	6-A20
43 67 959	08C	029	6-B06
43 67 967	08C	029	6-B06
43 67 975	08C	021	6-A22
43 67 983	08C	021	6-A22
43 67 991	08C	027	6-B04
43 68 791	08B	093	5-K22
43 68 809	08B	093	5-K22
43 68 858	08B	093	5-K22
43 68 866	08B	093	5-K22
43 68 890	08B	067	5-J20
43 68 916	08B	083	5-K12
43 68 965	08B	093	5-K22
43 68 973	08B	093	5-K22
43 68 981	08B	093	5-K22
43 68 999	08B	093	5-K22
43 70 094	08A	145	5-G02
43 70 102	08A	145	5-G02
43 70 110	08A	145	5-G02
43 70 128	08A	145	5-G02
43 70 136	08A	145	5-G02
43 70 144	08A	145	5-G02
43 70 177	08A	133	5-F14
43 70 185	08A	133	5-F14
43 70 227	08A	145	5-G02
43 70 235	08A	133	5-F14
43 70 243	08A	133	5-F14
43 70 284	08A	099	5-E04
43 70 359	08A	133	5-F14
43 70 367	08A	133	5-F14
43 70 391	08A	083	5-D12
43 70 409	08A	083	5-D12
43 70 458	08A	133	5-F14
43 70 516	08B	061	5-H22
43 70 532	08A	133	5-F14
43 70 540	08A	133	5-F14
43 70 557	08A	123	5-F04
43 70 557	08A	159	5-G16
43 70 730	08B	063	5-J16
43 70 748	08B	063	5-J16
43 70 755	08B	061	5-J14
43 70 763	08B	061	5-J14
43 70 771	08B	061	5-J14
43 70 938	08B	093	5-K22
43 70 961	08B	061	5-J14
43 71 878	08B	069	5-J22
43 71 902	08A	141	5-F22
43 71 969	08B	091	5-K20
43 71 977	08B	091	5-K20
43 73 429	03A	043	2-B20
43 73 494	03A	055	2-C08
43 73 528	03A	055	2-C08
43 73 536	03A	057	2-C10
43 73 569	03A	055	2-C08
43 73 668	06	019	4-F20
43 73 734	07	023	4-G24
43 73 734	07	025	4-H02
43 73 759	02	151	1-I08
43 73 767	02	151	1-I08
43 73 874	07	019	4-G20
43 73 874	07	021	4-G22
43 73 924	08A	109	5-E14
43 73 932	08A	109	5-E14
43 73 973	03A	035	2-B12
43 73 981	03A	035	2-B12
43 74 203	02	067	1-E20
43 74 211	02	067	1-E20
43 74 211	02	141	1-H22
43 76 190	08B	051	5-J04
43 76 208	08B	051	5-J04
43 76 216	08B	051	5-J04
43 76 224	08B	051	5-J04
43 76 232	08B	051	5-J04
43 76 240	08B	051	5-J04
43 77 412	08B	063	5-J16
43 77 420	08B	063	5-J16
43 77 438	08B	063	5-J16
43 77 495	08B	063	5-J16
43 77 503	08B	063	5-J16
43 77 511	08B	063	5-J16
43 77 560	08B	063	5-J16
43 77 578	08B	063	5-J16
43 77 750	08B	017	5-H18
43 77 768	08B	017	5-H18
43 77 776	08B	017	5-H18
43 77 792	08B	017	5-H18
43 77 842	08B	017	5-H18
43 77 867	08B	017	5-H18
43 77 958	08B	021	5-H22
43 77 974	08B	021	5-H22
43 77 982	08B	021	5-H22
43 77 990	08B	021	5-H22
43 78 634	08B	075	5-K04
43 78 675	08B	077	5-K06
43 78 675	08B	085	5-K14
43 78 717	08B	075	5-K04
43 78 808	08B	075	5-K04
43 78 816	08B	075	5-K04
43 78 824	08B	075	5-K04
43 78 899	08B	079	5-K08
43 78 949	08B	073	5-K02
43 78 956	08B	073	5-K02
43 78 972	08B	073	5-K02
43 78 980	08B	073	5-K02
43 79 004	08B	073	5-K02
43 79 038	08B	073	5-K02
43 79 053	08B	081	5-K10
43 79 061	08B	081	5-K10
43 79 087	08B	081	5-K10
43 79 095	08B	081	5-K10
43 79 137	08B	077	5-K06
43 79 137	08B	085	5-K14
43 79 145	08B	081	5-K10
43 79 152	08B	081	5-K10
43 79 194	06	011	4-F12
43 79 582	06	011	4-F12
43 79 608	08B	103	5-L08
43 79 616	08B	103	5-L08
43 79 624	08B	103	5-L08
43 79 632	08B	103	5-L08
43 79 640	08B	101	5-L06
43 79 665	08B	101	5-L06
43 79 665	08B	103	5-L08
43 79 673	08B	101	5-L06
43 79 673	08B	103	5-L08
43 79 681	08B	101	5-L06
43 79 780	08B	103	5-L08
43 80 804	03A	055	2-C08
43 80 820	03A	055	2-C08
43 81 018	03A	051	2-C04
43 81 034	03A	051	2-C04
43 81 083	03A	051	2-C04
43 83 170	08C	027	6-B04
43 83 188	08C	029	6-B06
43 83 709	08C	021	6-A22
43 83 717	08C	021	6-A22
43 83 725	08C	025	6-B02
43 83 758	08C	025	6-B02
43 83 774	08C	027	6-B04
43 83 782	08C	005	6-A06
43 83 824	08C	025	6-B02
43 83 881	08C	029	6-B06
43 83 899	08C	029	6-B06
43 83 923	08B	005	5-H06
43 83 923	08B	007	5-H08
43 83 931	08B	005	5-H06
43 83 931	08B	007	5-H08
43 83 949	08C	025	6-B02
43 83 956	08C	027	6-B04
43 83 980	08D	011	6-C12
43 85 985	04	047	4-B24
43 85 993	04	047	4-B24
43 86 058	04	053	4-C06
43 86 066	04	053	4-C06
43 86 090	04	055	4-C08
43 86 108	04	049	4-C02
43 86 199	04	011	4-A12
43 86 272	04	011	4-A12
43 86 298	04	011	4-A12
43 86 322	04	037	4-B14
43 86 397	04	011	4-A12
43 86 405	04	011	4-A12
43 86 413	04	011	4-A12
43 86 470	04	061	4-C14
43 86 496	04	011	4-A12

6-D14 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
43 86 504	04	011	4-A12
43 86 579	04	011	4-A12
43 86 587	04	011	4-A12
43 86 918	04	061	4-C14
43 86 926	04	061	4-C14
43 86 934	04	061	4-C14
43 86 942	04	061	4-C14
43 86 967	04	061	4-C14
43 86 975	04	061	4-C14
43 86 991	04	061	4-C14
43 87 015	04	061	4-C14
43 87 023	04	061	4-C14
43 87 031	04	061	4-C14
43 87 270	04	043	4-B20
43 87 320	04	043	4-B20
43 87 338	04	043	4-B20
43 87 346	04	043	4-B20
43 87 353	04	043	4-B20
43 87 361	04	041	4-B18
43 87 403	04	061	4-C14
43 87 411	04	061	4-C14
43 87 437	04	053	4-C06
43 87 452	04	043	4-B20
43 87 544	04	019	4-A20
43 87 551	04	051	4-C04
43 87 684	04	043	4-B20
43 87 692	04	043	4-B20
43 87 742	04	043	4-B20
43 87 742	04	061	4-C14
43 87 759	04	043	4-B20
43 87 767	04	043	4-B20
43 87 775	04	043	4-B20
43 87 783	04	011	4-A12
43 87 825	04	055	4-C08
43 87 833	04	055	4-C08
43 87 908	04	043	4-B20
43 87 932	04	037	4-B14
43 88 013	08B	021	5-H22
43 88 039	08B	021	5-H22
43 88 195	08B	013	5-H14
43 88 302	08B	007	5-H08
43 88 427	08B	097	5-L02
43 88 435	08B	097	5-L02
43 88 518	08B	097	5-L02
43 88 757	08B	061	5-J14
43 88 757	08B	067	5-J20
43 88 757	08B	069	5-J22
43 89 086	08A	117	5-E22
43 89 235	08A	121	5-F02
43 89 243	08B	067	5-J20
43 89 250	08B	067	5-J20
43 89 284	08B	067	5-J20
43 89 334	03A	045	2-B22
43 89 458	08B	061	5-J14
43 89 474	08B	061	5-J14
43 89 490	08B	061	5-J14
43 89 516	08B	061	5-J14
43 89 532	08B	061	5-J14
43 89 649	08B	017	5-H18
43 89 656	08B	021	5-H22
43 89 664	08B	021	5-H22
43 89 698	08B	007	5-H08
43 89 706	08B	007	5-H08
43 89 722	08B	021	5-H22
43 89 730	08B	021	5-H22
43 89 763	08B	005	5-H06
43 89 771	08B	005	5-H06
43 89 805	08A	117	5-E22
43 89 839	08A	117	5-E22
43 89 847	08A	117	5-E22
43 89 854	08A	121	5-F02
43 89 862	08A	121	5-F02
43 89 979	08A	117	5-E22
43 91 058	02	063	1-E16
43 91 157	02	153	1-I10
43 92 304	08D	011	6-C12
43 94 060	02	103	1-G08
43 94 078	02	099	1-G04
43 94 128	02	109	1-G14
43 94 128	02	113	1-G18
43 94 128	02	115	1-G20
43 94 128	02	117	1-G22
43 94 128	02	119	1-G24
43 94 128	02	121	1-H02
43 94 227	08D	007	6-C08
43 94 235	02	109	1-G14
43 94 235	02	113	1-G18
43 94 235	02	115	1-G20
43 94 235	02	117	1-G22
43 94 235	02	119	1-G24
43 94 235	02	121	1-H02
43 94 268	02	063	1-E16
43 94 300	03A	021	2-A22
43 94 318	02	135	1-H16
43 94 318	02	157	1-I14
43 94 334	02	157	1-I14
43 94 359	02	151	1-I08
43 94 441	02	063	1-E16
43 94 490	02	063	1-E16
43 94 508	02	063	1-E16
43 94 565	03A	019	2-A20
43 94 797	02	037	1-D14
43 94 ..54	08D	007	6-C08
43 94 862	08D	007	6-C08
43 94 870	08D	007	6-C08
43 94 888	08D	007	6-C08
43 94 896	08D	007	6-C08
43 94 912	02	099	1-G04
43 95 042	02	127	1-H08
43 95 059	02	127	1-H08
43 95 117	02	141	1-H22
43 95 133	02	141	1-H22
43 95 281	02	009	1-C10
43 95 406	02	021	1-C22
43 95 422	02	039	1-D16
43 95 430	02	039	1-D16
43 95 489	02	009	1-C10
43 95 513	02	123	1-H04
43 95 513	02	127	1-H08
43 95 596	08D	011	6-C12
43 95 679	02	123	1-H04
43 95 687	02	123	1-H04
43 95 695	02	127	1-H08
43 95 703	02	127	1-H08
43 95 968	02	079	1-F08
43 96 248	02	133	1-H14
43 96 255	02	133	1-H14
43 96 263	02	063	1-E16
43 96 313	02	063	1-E16
43 96 495	02	063	1-E16
43 96 685	02	063	1-E16
43 96 701	02	079	1-F08
43 96 891	02	067	1-E20
43 96 909	02	067	1-E20
43 97 006	02	063	1-E16
43 97 030	02	063	1-E16
43 97 048	02	063	1-E16
43 97 295	02	129	1-H10
43 97 311	02	015	1-C16
43 98 046	05	007	4-D08
43 98 095	05	009	4-D10
43 98 186	05	009	4-D10
43 98 244	07	017	4-G18
43 98 251	07	009	4-G10
43 98 269	07	009	4-G10
43 98 277	07	013	4-G14
43 98 491	08A	111	5-E16
43 98 509	08A	111	5-E16
43 98 558	03A	039	2-B16
43 98 566	03A	039	2-B16
43 98 574	03A	039	2-B16
43 98 582	03A	041	2-B18
43 98 590	03A	059	2-C12
43 98 616	08A	149	5-G06
43 98 624	08A	149	5-G06
43 98 632	08A	149	5-G06
43 98 640	08A	149	5-G06
43 98 897	05	019	4-D20
43 98 905	05	019	4-D20
43 98 939	05	019	4-D20
43 98 947	05	019	4-D20
43 99 002	03A	055	2-C08
43 99 036	03A	043	2-B20
43 99 317	06	019	4-F20
43 99 325	04	045	4-B22
43 99 333	04	047	4-B24
43 99 341	04	047	4-B24
43 99 358	05	017	4-D18
43 99 366	05	015	4-D16
43 99 564	02	151	1-I08
43 99 747	08A	107	5-E12
43 99 754	08A	107	5-E12
43 99 770	08A	147	5-G04
43 99 770	08A	149	5-G06
43 99 804	08D	011	6-C12
44 00 040	07	009	4-G10
44 00 115	05	011	4-D12
44 00 172	05	021	4-D22
44 00 180	05	021	4-D22
44 00 198	05	021	4-D22
44 00 206	05	021	4-D22
44 00 214	05	021	4-D22
44 00 222	05	027	4-E04
44 00 230	05	021	4-D22
44 00 248	05	021	4-D22
44 00 255	05	027	4-E04
44 00 263	05	021	4-D22
44 00 271	05	027	4-E04
44 00 289	05	027	4-E04
44 00 297	05	021	4-D22
44 00 305	05	021	4-D22
44 00 313	05	021	4-D22
44 00 362	06	019	4-F20
44 00 370	06	019	4-F20
44 00 396	05	011	4-D12
44 00 404	05	017	4-D18
44 00 644	08A	147	5-G04
44 00 743	08A	073	5-D02
44 00 768	08A	073	5-D02
44 00 784	08A	105	5-E10
44 00 800	08A	105	5-E10
44 01 030	03A	051	2-C04
44 01 048	03A	051	2-C04
44 01 055	03A	051	2-C04
44 01 063	03A	051	2-C04
44 01 071	03A	051	2-C04
44 01 089	03A	051	2-C04
44 01 097	03A	051	2-C04
44 01 113	03A	051	2-C04
44 01 121	03A	051	2-C04
44 01 139	03A	051	2-C04
44 01 147	03A	051	2-C04
44 01 154	08A	105	5-E10
44 01 600	08A	095	5-D24
44 01 600	08A	099	5-E04
44 01 618	03A	059	2-C12
44 01 626	03A	059	2-C12
44 01 634	03A	059	2-C12
44 01 659	03A	055	2-C08
44 01 675	08A	111	5-E16
44 01 717	[illegible]	043	2-B20
44 01 824	03A	051	2-C04
44 02 095	05	015	4-D16
44 02 095	06	019	4-F20
44 02 103	06	019	4-F20
44 02 137	03A	069	2-C22
44 02 145	04	011	4-A12
44 02 160	05	011	4-D12
44 02 202	06	023	4-F24
44 02 210	06	023	4-F24
44 02 228	06	023	4-F24
44 02 426	05	015	4-D16
44 02 434	05	021	4-D22
44 02 491	07	007	4-G08
44 02 616	06	019	4-F20
44 02 657	06	017	4-F18
44 02 731	06	015	4-F16
44 02 749	06	015	4-F16
44 02 756	06	015	4-F16
44 02 764	06	015	4-F16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-D15 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 02 772	06	015	4-F16
44 02 780	06	021	4-F22
44 02 780	06	023	4-F24
44 02 798	06	019	4-F20
44 02 863	06	023	4-F24
44 02 871	06	023	4-F24
44 02 889	06	023	4-F24
44 02 897	06	023	4-F24
44 03 572	08B	025	5-I02
44 03 580	08B	025	5-I02
44 03 598	08B	025	5-I02
44 03 606	08B	025	5-I02
44 03 614	08B	025	5-I02
44 03 622	08B	025	5-I02
44 03 630	08B	025	5-I02
44 03 648	08B	025	5-I02
44 03 655	08B	025	5-I02
44 03 663	08B	025	5-I02
44 03 697	08B	025	5-I02
44 05 213	08A	045	5-B22
44 05 221	08A	045	5-B22
44 05 759	08A	045	5-B22
44 05 767	08A	045	5-B22
44 05 775	08B	063	5-J16
44 05 783	08B	063	5-J16
44 05 791	08B	063	5-J16
44 05 932	08B	091	5-K20
44 05 973	08B	091	5-K20
44 06 567	08A	021	5-A22
44 06 609	08B	063	5-J16
44 06 617	08B	063	5-J16
44 06 625	08B	063	5-J16
44 07 094	08A	045	5-B22
44 07 128	08A	045	5-B22
44 07 169	08B	055	5-J08
44 07 235	08B	021	5-H22
44 07 250	08B	021	5-H22
44 07 425	03A	097	2-E02
44 07 425	03A	113	2-E18
44 07 425	03A	127	2-F08
44 07 425	03A	141	2-F22
44 07 425	03A	153	2-G10
44 08 001	03A	069	2-C22
44 08 423	03A	071	2-C24
44 08 456	03A	161	2-G18
44 08 472	03A	165	2-G22
44 08 480	02	069	1-E22
44 08 514	03A	163	2-G20
44 08 597	03A	005	2-A06
44 08 654	03A	079	2-D08
44 08 662	03A	079	2-D08
44 08 894	03B	005	2-J06
44 08 894	03B	063	2-L16
44 08 902	03B	005	2-J06
44 08 902	03B	063	2-L16
44 08 910	03B	119	3-C04
44 08 910	03B	199	3-F12
44 08 910	03B	279	3-I20
44 08 985	03A	099	2-E04
44 09 017	03A	089	2-D18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 09 108	03A	081	2-D10
44 09 165	03B	033	2-K10
44 09 165	03B	091	3-A24
44 09 165	03B	171	3-E08
44 09 165	03B	251	3-H16
44 09 181	03B	033	2-K10
44 09 181	03B	091	3-A24
44 09 181	03B	171	3-E08
44 09 181	03B	251	3-H16
44 09 199	03B	033	2-K10
44 09 199	03B	091	3-A24
44 09 199	03B	171	3-E08
44 09 199	03B	251	3-H16
44 09 207	03B	033	2-K10
44 09 207	03B	091	3-A24
44 09 207	03B	171	3-E08
44 09 207	03B	251	3-H16
44 09 223	03A	063	2-C16
44 09 231	03A	063	2-C16
44 09 249	03A	065	2-C18
44 09 256	03A	065	2-C18
44 09 264	03A	063	2-C16
44 09 264	03A	065	2-C18
44 09 272	03A	063	2-C16
44 09 280	03A	063	2-C16
44 09 280	03A	065	2-C18
44 09 306	03A	063	2-C16
44 09 314	03A	063	2-C16
44 09 348	03A	165	2-G22
44 09 371	03A	165	2-G22
44 09 421	03A	063	2-C16
44 09 439	03A	063	2-C16
44 09 520	08A	011	5-A12
44 09 553	04	043	4-B20
44 09 553	04	061	4-C14
44 09 728	03B	045	2-K22
44 09 728	03B	055	2-L08
44 09 728	03B	057	2-L10
44 09 728	03B	103	3-B12
44 09 728	03B	111	3-B20
44 09 728	03B	125	3-C10
44 09 728	03B	127	3-C12
44 09 728	03B	183	3-E20
44 09 728	03B	191	3-F04
44 09 728	03B	205	3-F18
44 09 728	03B	207	3-F20
44 09 728	03B	263	3-I04
44 09 728	03B	271	3-I12
44 09 728	03B	285	3-J02
44 09 728	03B	287	3-J04
44 09 728	03B	299	3-J16
44 09 728	03B	303	3-J20
44 09 728	03B	309	3-K02
44 09 728	03B	315	3-K08
44 09 785	03B	055	2-L08
44 09 785	03B	125	3-C10
44 09 785	03B	205	3-F18
44 09 785	03B	285	3-J02
44 09 785	03B	299	3-J16
44 09 785	03B	303	3-J20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 09 785	03B	309	3-K02
44 09 785	03B	315	3-K08
44 09 801	03B	013	2-J14
44 09 801	03B	017	2-J18
44 09 801	03B	033	2-K10
44 09 801	03B	041	2-K18
44 09 801	03B	045	2-K22
44 09 801	03B	047	2-K24
44 09 801	03B	049	2-L02
44 09 801	03B	051	2-L04
44 09 801	03B	053	2-L06
44 09 801	03B	071	2-L24
44 09 801	03B	075	3-A08
44 09 801	03B	091	3-A24
44 09 801	03B	099	3-B08
44 09 801	03B	103	3-B12
44 09 801	03B	105	3-B14
44 09 801	03B	109	3-B18
44 09 801	03B	111	3-B20
44 09 801	03B	113	3-B22
44 09 801	03B	117	3-C02
44 09 801	03B	123	3-C08
44 09 801	03B	147	3-D08
44 09 801	03B	151	3-D12
44 09 801	03B	171	3-E08
44 09 801	03B	179	3-E16
44 09 801	03B	183	3-E20
44 09 801	03B	185	3-E22
44 09 801	03B	189	3-F02
44 09 801	03B	191	3-F04
44 09 801	03B	193	3-F06
44 09 801	03B	197	3-F10
44 09 801	03B	203	3-F16
44 09 801	03B	227	3-G16
44 09 801	03B	231	3-G20
44 09 801	03B	251	3-H16
44 09 801	03B	259	3-H24
44 09 801	03B	263	3-I04
44 09 801	03B	265	3-I06
44 09 801	03B	269	3-I10
44 09 801	03B	271	3-I12
44 09 801	03B	273	3-I14
44 09 801	03B	277	3-I18
44 09 801	03B	283	3-I24
44 09 801	03B	297	3-J14
44 09 801	03B	301	3-J18
44 09 801	03B	307	3-J24
44 09 801	03B	313	3-K06
44 09 918	03A	069	2-C22
44 09 959	03A	165	2-G22
44 09 983	03A	009	2-A10
44 09 983	03A	011	2-A12
44 09 991	03A	009	2-A10
44 09 991	03A	011	2-A12
44 10 007	03A	009	2-A10
44 10 007	03A	011	2-A12
44 10 189	03A	093	2-D22
44 10 197	03A	093	2-D22
44 10 403	03A	065	2-C18
44 10 486	03A	005	2-A06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 10 510	03B	057	2-L10
44 10 510	03B	123	3-C08
44 10 510	03B	127	3-C12
44 10 510	03B	135	3-C20
44 10 510	03B	203	3-F16
44 10 510	03B	207	3-F20
44 10 510	03B	215	3-G04
44 10 510	03B	283	3-I24
44 10 510	03B	287	3-J04
44 10 510	03B	295	3-J12
44 10 536	03A	089	2-D18
44 10 536	03A	091	2-D20
44 10 577	03A	165	2-G22
44 10 619	03B	043	2-K20
44 10 619	03B	101	3-B10
44 10 619	03B	181	3-E18
44 10 619	03B	261	3-I02
44 10 668	03A	081	2-D10
44 10 734	02	009	1-C10
44 10 742	03A	161	2-G18
44 10 775	03A	063	2-C16
44 10 817	03A	189	2-H22
44 11 260	03B	007	2-J08
44 11 260	03B	065	2-L18
44 11 260	03B	141	3-D02
44 11 260	03B	221	3-G10
44 11 278	03B	007	2-J08
44 11 278	03B	065	2-L18
44 11 278	03B	141	3-D02
44 11 278	03B	221	3-G10
44 11 278	03B	297	3-J14
44 11 278	03B	301	3-J18
44 11 278	03B	307	3-J24
44 11 278	03B	313	3-K06
44 11 286	03B	025	2-K02
44 11 369	03A	005	2-A06
44 11 393	03A	097	2-E02
44 11 401	03A	097	2-E02
44 11 427	03A	097	2-E02
44 11 443	03A	097	2-E02
44 11 468	03A	097	2-E02
44 11 518	03B	045	2-K22
44 11 518	03B	055	2-L08
44 11 518	03B	103	3-B12
44 11 518	03B	117	3-C02
44 11 518	03B	125	3-C10
44 11 518	03B	183	3-E20
44 11 518	03B	185	3-E22
44 11 518	03B	197	3-F10
44 11 518	03B	205	3-F18
44 11 518	03B	263	3-I04
44 11 518	03B	265	3-I06
44 11 518	03B	277	3-I18
44 11 518	03B	285	3-J02
44 11 559	03A	081	2-D10
44 11 740	03B	039	2-K16
44 11 740	03B	097	3-B06
44 11 740	03B	177	3-E14
44 11 740	03B	257	3-H22
44 11 757	03B	039	2-K16

6-D16 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 11 757	03B	097	3-B06
44 11 757	03B	177	3-E14
44 11 757	03B	257	3-H22
44 11 807	03A	081	2-D10
44 11 849	03A	091	2-D20
44 11 856	03A	091	2-D20
44 11 864	03A	065	2-C18
44 11 997	03A	067	2-C20
44 12 177	03A	093	2-D22
44 12 185	03A	093	2-D22
44 12 730	03A	079	2-D08
44 12 805	03A	013	2-A14
44 12 813	03A	013	2-A14
44 12 821	03A	013	2-A14
44 12 862	03B	005	2-J06
44 12 862	03B	063	2-L16
44 12 888	03B	005	2-J06
44 12 888	03B	063	2-L16
44 12 961	03B	027	2-K04
44 12 961	03B	085	3-A18
44 12 961	03B	163	3-D24
44 12 961	03B	243	3-H08
44 12 961	03B	299	3-J16
44 12 961	03B	303	3-J20
44 12 961	03B	309	3-K02
44 12 961	03B	315	3-K08
44 14 017	08B	099	5-L04
44 14 025	08B	099	5-L04
44 14 033	08B	101	5-L06
44 14 041	08B	101	5-L06
44 14 058	08B	101	5-L06
44 14 066	08B	101	5-L06
44 14 074	08B	067	5-J20
44 14 082	08B	067	5-J20
44 14 611	06	013	4-F14
44 14 694	06	013	4-F14
44 14 702	06	013	4-F14
44 14 827	06	011	4-F12
44 14 868	06	011	4-F12
44 15 485	08B	101	5-L06
44 15 493	08B	101	5-L06
44 15 501	08B	101	5-L06
44 16 004	08B	089	5-K18
44 16 350	08B	083	5-K12
44 16 582	06	007	4-F08
44 18 489	03B	023	2-J24
44 18 489	03B	081	3-A14
44 18 489	03B	299	3-J16
44 18 489	03B	303	3-J20
44 18 489	03B	309	3-K02
44 18 489	03B	315	3-K08
44 18 505	03B	005	2-J06
44 18 505	03B	021	2-J22
44 18 505	03B	023	2-J24
44 18 505	03B	025	2-K02
44 18 505	03B	027	2-K04
44 18 505	03B	033	2-K10
44 18 505	03B	047	2-K24
44 18 505	03B	063	2-L16
44 18 505	03B	079	3-A12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 18 505	03B	081	3-A14
44 18 505	03B	083	3-A16
44 18 505	03B	085	3-A18
44 18 505	03B	091	3-A24
44 18 505	03B	105	3-B14
44 18 505	03B	113	3-B22
44 18 505	03B	137	3-C22
44 18 505	03B	157	3-D18
44 18 505	03B	161	3-D22
44 18 505	03B	163	3-D24
44 18 505	03B	171	3-E08
44 18 505	03B	185	3-E22
44 18 505	03B	193	3-F06
44 18 505	03B	217	3-G06
44 18 505	03B	237	3-H02
44 18 505	03B	241	3-H06
44 18 505	03B	243	3-H08
44 18 505	03B	251	3-H16
44 18 505	03B	265	3-I06
44 18 505	03B	273	3-I14
44 18 505	03B	299	3-J16
44 18 505	03B	303	3-J20
44 18 505	03B	309	3-K02
44 18 505	03B	315	3-K08
44 19 305	03B	047	2-K24
44 19 305	03B	105	3-B14
44 19 305	03B	113	3-B22
44 19 305	03B	185	3-E22
44 19 305	03B	193	3-F06
44 19 305	03B	265	3-I06
44 19 305	03B	273	3-I14
44 19 313	03B	023	2-J24
44 19 313	03B	025	2-K02
44 19 313	03B	027	2-K04
44 19 313	03B	033	2-K10
44 19 313	03B	047	2-K24
44 19 313	03B	081	3-A14
44 19 313	03B	083	3-A16
44 19 313	03B	085	3-A18
44 19 313	03B	091	3-A24
44 19 313	03B	105	3-B14
44 19 313	03B	113	3-B22
44 19 313	03B	161	3-D22
44 19 313	03B	163	3-D24
44 19 313	03B	171	3-E08
44 19 313	03B	185	3-E22
44 19 313	03B	193	3-F06
44 19 313	03B	241	3-H06
44 19 313	03B	243	3-H08
44 19 313	03B	251	3-H16
44 19 313	03B	265	3-I06
44 19 313	03B	273	3-I14
44 20 006	08A	117	5-E22
44 20 014	08A	119	5-E24
44 20 022	08A	119	5-E24
44 20 030	08A	119	5-E24
44 20 048	08A	119	5-E24
44 20 238	08B	007	5-H08
44 20 246	08B	007	5-H08
44 20 253	08B	007	5-H08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 20 261	08B	007	5-H08
44 20 477	08B	021	5-H22
44 20 485	08B	021	5-H22
44 20 600	08A	087	5-D16
44 20 600	08A	089	5-D18
44 20 600	08A	093	5-D22
44 20 626	08B	017	5-H18
44 20 634	08B	017	5-H18
44 20 683	08B	005	5-H06
44 20 766	08B	097	5-L02
44 21 046	08A	087	5-D16
44 21 046	08A	093	5-D22
44 21 053	03A	045	2-B22
44 21 103	03A	045	2-B22
44 21 129	03A	045	2-B22
44 21 228	03A	045	2-B22
44 21 301	03A	045	2-B22
44 21 384	08B	019	5-H20
44 21 475	08B	063	5-J16
44 21 699	08B	009	5-H10
44 21 707	08B	043	5-I20
44 21 707	08B	047	5-I24
44 21 707	08B	059	5-J12
44 21 715	08B	043	5-I20
44 21 715	08B	047	5-I24
44 21 715	08B	059	5-J12
44 21 723	08B	043	5-I20
44 21 723	08B	047	5-I24
44 21 723	08B	059	5-J12
44 21 731	08B	043	5-I20
44 21 731	08B	047	5-I24
44 21 731	08B	059	5-J12
44 21 764	08B	043	5-I20
44 21 764	08B	049	5-J02
44 21 764	08B	059	5-J12
44 21 772	08B	043	5-I20
44 21 772	08B	049	5-J02
44 21 772	08B	059	5-J12
44 21 814	08B	093	5-K22
44 21 848	03A	045	2-B22
44 21 863	03A	045	2-B22
44 21 897	03A	045	2-B22
44 22 093	08B	053	5-J06
44 22 101	08B	053	5-J06
44 22 119	08B	053	5-J06
44 22 127	08B	053	5-J06
44 22 135	08B	053	5-J06
44 22 143	08B	053	5-J06
44 22 168	08B	009	5-H10
44 22 184	08B	017	5-H18
44 22 192	08B	017	5-H18
44 22 200	08B	019	5-H20
44 22 259	08B	013	5-H14
44 22 507	08B	021	5-H22
44 22 515	08B	021	5-H22
44 22 549	08B	021	5-H22
44 23 075	08B	005	5-H06
44 23 489	08B	069	5-J22
44 24 883	05	017	4-D18
44 24 883	08A	011	5-A12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
44 25 476	07	013	4-G14
44 25 674	08D	009	6-C10
44 26 573	08D	009	6-C10
44 26 581	05	009	4-D10
44 26 599	05	015	4-D16
44 26 607	05	015	4-D16
44 26 631	05	009	4-D10
44 26 649	05	009	4-D10
44 26 656	05	009	4-D10
44 26 664	05	009	4-D10
44 26 672	05	009	4-D10
44 26 755	05	015	4-D16
44 26 763	05	015	4-D16
44 26 771	05	015	4-D16
44 26 789	05	015	4-D16
44 26 847	05	015	4-D16
44 26 870	05	011	4-D12
44 27 514	03A	081	2-D10
44 27 688	03A	071	2-C24
44 28 199	03A	079	2-D08
44 28 207	03A	079	2-D08
44 29 155	06	007	4-F08
44 29 163	08B	073	5-K02
44 29 171	08B	073	5-K02
44 29 189	08B	073	5-K02
44 29 205	06	007	4-F08
44 29 569	08B	089	5-K18
44 29 601	08B	099	5-L04
44 29 619	08B	099	5-L04
44 29 627	08B	099	5-L04
44 29 734	08B	073	5-K02
44 29 734	08B	081	5-K10
44 29 742	08B	073	5-K02
44 29 742	08B	081	5-K10
44 29 841	08B	081	5-K10
44 29 858	08B	081	5-K10
44 29 916	08B	079	5-K08
44 29 924	08B	079	5-K08
44 29 973	08B	087	5-K16
44 29 981	08B	087	5-K16
44 30 153	03B	039	2-K16
44 30 153	03B	097	3-B06
44 30 153	03B	177	3-E14
44 30 153	03B	257	3-H22
44 32 316	03B	011	2-J12
44 32 316	03B	013	2-J14
44 32 316	03B	015	2-J16
44 32 316	03B	021	2-J22
44 32 316	03B	027	2-K04
44 32 316	03B	069	2-L22
44 32 316	03B	071	2-L24
44 32 316	03B	073	3-A06
44 32 316	03B	079	3-A12
44 32 316	03B	085	3-A18
44 32 316	03B	145	3-D06
44 32 316	03B	147	3-D08
44 32 316	03B	149	3-D10
44 32 316	03B	157	3-D18
44 32 316	03B	163	3-D24
44 32 316	03B	225	3-G14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-D17 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 32 316	03B	227	3-G16
44 32 316	03B	229	3-G18
44 32 316	03B	237	3-H02
44 32 316	03B	243	3-H08
44 32 324	03B	011	2-J12
44 32 324	03B	017	2-J18
44 32 324	03B	069	2-L22
44 32 324	03B	075	3-A08
44 32 324	03B	145	3-D06
44 32 324	03B	151	3-D12
44 32 324	03B	225	3-G14
44 32 324	03B	231	3-G20
44 32 357	03B	011	2-J12
44 32 357	03B	019	2-J20
44 32 357	03B	021	2-J22
44 32 357	03B	069	2-L22
44 32 357	03B	077	3-A10
44 32 357	03B	079	3-A12
44 32 357	03B	145	3-D06
44 32 357	03B	153	3-D14
44 32 365	03B	157	3-D18
44 32 365	03B	237	3-H02
44 32 902	03B	057	2-L10
44 32 902	03B	127	3-C12
44 32 902	03B	207	3-F20
44 32 902	03B	287	3-J04
44 33 322	03A	167	2-G24
44 33 322	03A	171	2-H04
44 33 322	03A	175	2-H08
44 33 322	03A	179	2-H12
44 33 322	03A	183	2-H16
44 33 439	03B	145	3-D06
44 33 439	03B	153	3-D14
44 33 439	03B	225	3-G14
44 33 439	03B	233	3-G22
44 33 454	03B	145	3-D06
44 33 454	03B	153	3-D14
44 33 454	03B	225	3-G14
44 33 454	03B	233	3-G22
44 33 488	02	109	1-G14
44 33 488	02	113	1-G18
44 33 488	02	117	1-G22
44 33 488	02	119	1-G24
44 33 488	02	121	1-H02
44 33 496	02	109	1-G14
44 33 496	02	115	1-G20
44 33 504	02	109	1-G14
44 33 504	02	115	1-G20
44 33 561	02	117	1-G22
44 33 561	02	119	1-G24
44 33 561	02	121	1-H02
44 33 579	02	117	1-G22
44 33 579	02	119	1-G24
44 33 579	02	121	1-H02
44 33 645	03A	075	2-D04
44 34 833	03B	029	2-K06
44 34 833	03B	087	3-A20
44 34 833	03B	165	3-E02
44 34 833	03B	245	3-H10
44 34 841	03B	025	2-K02
44 34 841	03B	083	3-A16
44 34 841	03B	161	3-D22
44 34 841	03B	241	3-H06
44 34 916	03A	087	2-D16
44 37 455	03A	067	2-C20
44 37 463	03A	067	2-C20
44 39 378	08B	017	5-H18
44 39 386	08B	017	5-H18
44 39 394	08B	017	5-H18
44 39 709	08B	013	5-H14
44 39 717	08B	013	5-H14
44 39 725	08B	013	5-H14
44 39 741	08B	017	5-H18
44 39 816	08B	007	5-H08
44 39 832	08B	013	5-H14
44 40 244	02	063	1-E16
44 40 251	02	045	1-D22
44 40 699	08D	007	6-C08
44 41 689	02	063	1-E16
44 41 697	02	063	1-E16
44 41 697	02	065	1-E18
44 42 471	02	079	1-F08
44 42 489	02	079	1-F08
44 43 073	08D	007	6-C08
44 43 081	08D	007	6-C08
44 43 099	08D	007	6-C08
44 43 206	02	145	1-J02
44 43 214	02	041	1-D18
44 43 230	02	103	1-G08
44 43 263	06	017	4-F18
44 43 313	02	095	1-F24
44 43 339	02	157	1-I14
44 43 750	03A	015	2-A16
44 43 768	03A	015	2-A16
44 43 776	03A	015	2-A16
44 43 784	03A	015	2-A16
44 43 859	02	155	1-I12
44 43 875	02	135	1-H16
44 43 883	02	067	1-E20
44 43 958	02	117	1-G22
44 43 958	02	119	1-G24
44 43 958	02	121	1-H02
44 44 006	02	151	1-I08
44 44 014	02	151	1-I08
44 44 022	02	151	1-I08
44 44 121	02	151	1-I08
44 44 139	02	151	1-I08
44 44 188	02	121	1-H02
44 44 196	08D	009	6-C10
44 44 204	02	115	1-G20
44 44 253	02	153	1-I10
44 44 261	02	153	1-I10
44 44 279	02	135	1-H16
44 44 337	02	109	1-G14
44 44 337	02	115	1-G20
44 44 345	08D	013	6-C14
44 44 444	08D	007	6-C08
44 44 451	08D	007	6-C08
44 44 469	08D	007	6-C08
44 44 477	08D	007	6-C08
44 44 485	08D	009	6-C10
44 44 493	08D	007	6-C08
44 44 501	08D	009	6-C10
44 44 527	02	109	1-G14
44 44 626	02	063	1-E16
44 44 741	03A	025	2-B02
44 44 758	02	063	1-E16
44 44 816	02	079	1-F08
44 44 824	02	079	1-F08
44 44 857	03A	085	2-D14
44 45 011	08D	007	6-C08
44 45 029	08D	007	6-C08
44 45 037	08D	007	6-C08
44 45 045	08D	009	6-C10
44 45 052	08D	007	6-C08
44 45 276	02	019	1-C20
44 45 284	02	019	1-C20
44 45 292	02	019	1-C20
44 45 300	02	019	1-C20
44 45 318	02	077	1-F06
44 45 433	02	109	1-G14
44 45 433	02	113	1-G18
44 45 441	02	109	1-G14
44 45 516	02	109	1-G14
44 45 516	02	113	1-G18
44 45 516	02	115	1-G20
44 45 540	08D	007	6-C08
44 45 631	02	063	1-E16
44 45 821	02	079	1-F08
44 45 847	02	059	1-E12
44 45 847	02	061	1-E14
44 45 854	02	059	1-E12
44 45 854	02	061	1-E14
44 45 862	02	059	1-E12
44 45 862	02	061	1-E14
44 45 870	08D	007	6-C08
44 45 888	08D	007	6-C08
44 45 896	08D	007	6-C08
44 45 904	08D	007	6-C08
44 45 912	08D	007	6-C08
44 45 920	08D	007	6-C08
44 45 946	08D	007	6-C08
44 45 979	02	063	1-E16
44 48 551	03A	041	2-B18
44 48 569	03A	039	2-B16
44 48 577	03A	039	2-B16
44 48 585	03A	041	2-B18
44 48 643	03A	051	2-C04
44 48 643	03A	197	2-I06
44 48 668	03A	051	2-C04
44 48 676	03A	051	2-C04
44 48 726	03A	051	2-C04
44 48 734	03A	051	2-C04
44 48 817	03A	049	2-C02
44 48 825	03A	049	2-C02
44 48 833	03A	049	2-C02
44 60 226	08B	087	5-K16
44 60 234	08B	087	5-K16
44 60 721	06	011	4-F12
44 60 739	06	011	4-F12
44 60 846	08B	103	5-L08
44 60 903	08B	089	5-K18
44 60 911	08B	089	5-K18
44 60 929	08B	089	5-K18
44 60 937	08B	089	5-K18
44 60 945	08B	089	5-K18
44 60 952	08B	089	5-K18
44 61 109	08B	039	5-I16
44 61 117	08B	039	5-I16
44 61 141	08B	035	5-I12
44 61 158	08B	035	5-I12
44 61 158	08B	037	5-I14
44 61 182	08B	037	5-I14
44 61 224	08B	035	5-I12
44 61 232	08B	035	5-I12
44 61 265	08B	031	5-I08
44 61 273	08B	031	5-I08
44 61 273	08B	033	5-I10
44 61 307	08B	033	5-I10
44 61 349	08B	029	5-I06
44 61 356	08B	029	5-I06
44 61 380	08B	027	5-I04
44 61 398	08B	027	5-I04
44 61 422	08B	027	5-I04
44 61 448	08B	039	5-I16
44 61 455	08B	039	5-I16
44 61 463	08B	039	5-I16
44 61 471	08B	039	5-I16
44 61 489	08B	039	5-I16
44 61 497	08B	039	5-I16
44 61 505	08B	039	5-I16
44 61 513	08B	037	5-I14
44 61 521	08B	035	5-I12
44 61 539	08B	037	5-I14
44 61 547	08B	037	5-I14
44 61 554	08B	037	5-I14
44 61 554	08B	039	5-I16
44 61 562	08B	037	5-I14
44 61 562	08B	039	5-I16
44 61 570	08B	037	5-I14
44 61 570	08B	039	5-I16
44 61 588	08B	037	5-I14
44 61 596	08B	037	5-I14
44 61 604	08B	039	5-I16
44 61 612	08B	037	5-I14
44 61 653	08B	029	5-I06
44 61 661	08B	029	5-I06
44 61 679	08B	029	5-I06
44 61 687	08B	029	5-I06
44 61 695	08B	029	5-I06
44 61 703	08B	029	5-I06
44 61 711	08B	027	5-I04
44 61 729	08B	027	5-I04
44 61 737	08B	027	5-I04
44 61 745	08B	027	5-I04
44 61 752	08B	027	5-I04
44 61 760	08B	027	5-I04
44 61 760	08B	029	5-I06
44 61 778	08B	027	5-I04
44 61 778	08B	029	5-I06

6-D18 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 61 786	08B	027	5-I04
44 61 786	08B	029	5-I06
44 61 794	08B	029	5-I06
44 61 802	08B	029	5-I06
44 61 810	08B	029	5-I06
44 61 828	08B	029	5-I06
44 61 869	08B	035	5-I12
44 61 877	08B	035	5-I12
44 61 885	08B	035	5-I12
44 61 893	08B	035	5-I12
44 61 901	08B	035	5-I12
44 61 919	08B	035	5-I12
44 61 927	08B	035	5-I12
44 61 935	08B	031	5-I08
44 61 943	08B	031	5-I08
44 61 950	08B	031	5-I08
44 61 968	08B	031	5-I08
44 61 976	08B	033	5-I10
44 61 976	08B	035	5-I12
44 61 984	08B	033	5-I10
44 61 992	08B	031	5-I08
44 61 992	08B	033	5-I10
44 62 008	08B	033	5-I10
44 62 016	08B	033	5-I10
44 62 024	08B	033	5-I10
44 62 032	08B	033	5-I10
44 62 206	08B	083	5-K12
44 62 628	08B	035	5-I12
44 62 636	08B	029	5-I06
44 62 644	08B	039	5-I16
44 62 651	08B	033	5-I10
44 62 651	08B	035	5-I12
44 62 669	08B	027	5-I04
44 62 669	08B	029	5-I06
44 62 677	08B	037	5-I14
44 62 677	08B	039	5-I16
44 62 768	08B	083	5-K12
44 62 792	08B	081	5-K10
44 62 800	08B	083	5-K12
44 62 958	08B	089	5-K18
44 62 966	08B	089	5-K18
44 63 014	03B	027	2-K04
44 63 014	03B	085	3-A18
44 63 014	03B	163	3-D24
44 63 014	03B	243	3-H08
44 63 022	03B	027	2-K04
44 63 022	03B	085	3-A18
44 63 022	03B	163	3-D24
44 63 022	03B	243	3-H08
44 64 228	03B	055	2-L08
44 64 228	03B	125	3-C10
44 64 228	03B	205	3-F18
44 64 228	03B	285	3-J02
44 64 228	03B	299	3-J16
44 64 228	03B	303	3-J20
44 64 228	03B	309	3-K02
44 64 228	03B	315	3-K08
44 64 293	03B	045	2-K22
44 64 293	03B	103	3-B12
44 64 293	03B	111	3-B20
44 64 293	03B	119	3-C04
44 64 293	03B	183	3-E20
44 64 293	03B	191	3-F04
44 64 293	03B	199	3-F12
44 64 293	03B	263	3-I04
44 64 293	03B	271	3-I12
44 64 293	03B	279	3-I20
44 64 293	03B	299	3-J16
44 64 293	03B	303	3-J20
44 64 293	03B	309	3-K02
44 64 293	03B	315	3-K08
44 64 343	03B	025	2-K02
44 64 343	03B	083	3-A16
44 64 343	03B	161	3-D22
44 64 343	03B	241	3-H06
44 64 343	03B	297	3-J14
44 64 343	03B	301	3-J18
44 64 343	03B	307	3-J24
44 64 343	03B	315	3-K08
44 64 400	03B	031	2-K08
44 64 400	03B	037	2-K14
44 64 400	03B	089	3-A22
44 64 400	03B	095	3-B04
44 64 400	03B	169	3-E06
44 64 400	03B	175	3-E12
44 64 400	03B	249	3-H14
44 64 400	03B	255	3-H20
44 64 400	03B	299	3-J16
44 64 400	03B	303	3-J20
44 64 400	03B	309	3-K02
44 64 400	03B	315	3-K08
44 64 442	03B	005	2-J06
44 64 442	03B	025	2-K02
44 64 442	03B	041	2-K18
44 64 442	03B	063	2-L16
44 64 442	03B	137	3-C22
44 64 442	03B	181	3-E18
44 64 442	03B	217	3-G06
44 64 442	03B	261	3-I02
44 64 442	03B	297	3-J14
44 64 442	03B	301	3-J18
44 64 442	03B	307	3-J24
44 64 442	03B	313	3-K06
44 64 475	03A	079	2-D08
44 64 483	03A	161	2-C18
44 64 780	03A	095	2-D24
44 66 389	03A	079	2-D08
44 66 405	03A	067	2-C20
44 66 413	03A	067	2-C20
44 66 439	03A	063	2-C16
44 66 439	03A	065	2-C18
44 66 462	03B	027	2-K04
44 66 462	03B	085	3-A18
44 66 462	03B	163	3-D24
44 66 462	03B	243	3-H08
44 66 736	03B	037	2-K14
44 66 736	03B	095	3-B04
44 66 736	03B	175	3-E12
44 66 736	03B	255	3-H20
44 66 736	03B	299	3-J16
44 66 736	03B	303	3-J20
44 66 736	03B	309	3-K02
44 66 736	03B	315	3-K08
44 66 801	03B	091	3-A24
44 66 801	03B	171	3-E08
44 66 801	03B	185	3-E22
44 66 801	03B	197	3-F10
44 66 801	03B	251	3-H16
44 66 801	03B	265	3-I06
44 66 801	03B	277	3-I18
44 66 801	03B	303	3-J20
44 66 801	03B	309	3-K02
44 66 801	03B	315	3-K08
44 66 835	03A	161	2-G18
44 66 900	03A	013	2-A14
44 66 918	03A	013	2-A14
44 66 959	03A	005	2-A06
44 66 967	03A	063	2-C16
44 66 983	03A	081	2-D10
44 67 007	05	005	4-D06
44 67 015	05	005	4-D06
44 67 023	05	023	4-D24
44 67 031	05	023	4-D24
44 67 049	05	005	4-D06
44 67 049	05	023	4-D24
44 67 056	05	005	4-D06
44 67 056	05	023	4-D24
44 67 064	05	005	4-D06
44 67 064	05	023	4-D24
44 67 072	05	023	4-D24
44 67 072	05	007	4-D08
44 67 080	05	007	4-D08
44 67 080	05	023	4-D24
44 67 098	05	007	4-D08
44 67 098	05	023	4-D24
44 67 106	05	023	4-D24
44 67 114	05	025	4-E02
44 67 122	05	023	4-D24
44 67 130	05	023	4-D24
44 67 148	05	007	4-D08
44 67 163	07	013	4-G14
44 67 163	07	015	4-G16
44 67 171	05	015	4-D16
44 67 189	05	011	4-D12
44 67 197	05	011	4-D12
44 67 205	05	011	4-D12
44 67 213	05	011	4-D12
44 67 254	07	013	4-G14
44 67 262	05	015	4-D16
44 67 288	04	009	4-A10
44 67 320	05	015	4-D16
44 67 353	05	009	4-D10
44 67 361	05	009	4-D10
44 67 387	05	009	4-D10
44 67 395	05	009	4-D10
44 67 403	07	025	4-H02
44 67 411	07	023	4-G24
44 67 411	07	025	4-H02
44 67 437	07	025	4-H02
44 67 437	07	013	4-G14
44 67 452	07	023	4-G24
44 67 619	07	025	4-H02
44 67 619	05	011	4-D12
44 67 668	05	011	4-D12
44 67 791	07	023	4-G24
44 67 791	07	025	4-H02
44 68 005	03A	031	2-B08
44 68 039	03A	031	2-B08
44 68 047	03A	031	2-B08
44 68 054	03A	031	2-B08
44 68 062	03A	031	2-B08
44 68 153	03A	031	2-B08
44 68 153	03A	033	2-B10
44 68 179	03A	031	2-B08
44 68 211	03A	031	2-B08
44 68 211	03A	033	2-B10
44 68 245	03A	031	2-B08
44 68 245	03A	033	2-B10
44 68 252	03A	031	2-B08
44 68 252	03A	033	2-B10
44 68 260	03A	031	2-B08
44 68 260	03A	033	2-B10
44 68 906	03A	035	2-B12
44 68 914	03A	035	2-B12
44 68 922	03A	035	2-B12
44 68 930	03A	035	2-B12
44 68 930	03A	039	2-B16
44 68 948	03A	035	2-B12
44 68 955	03A	039	2-B16
44 68 963	03A	039	2-B16
44 68 971	03A	039	2-B16
44 68 989	03A	039	2-B16
44 68 997	03A	039	2-B16
44 69 003	03A	039	2-B16
44 69 011	03A	039	2-B16
44 69 078	03A	041	2-B18
44 69 086	03A	041	2-B18
44 69 102	03A	041	2-B18
44 69 110	03A	043	2-B20
44 69 193	03A	037	2-B14
44 69 201	03A	037	2-B14
44 69 235	03A	037	2-B14
44 69 243	03A	037	2-B14
44 69 276	03A	037	2-B14
44 69 854	08A	107	5-E12
44 69 854	08A	109	5-E14
44 69 862	08A	107	5-E12
44 70 019	08B	097	5-L02
44 70 027	08B	097	5-L02
44 70 035	08B	097	5-L02
44 70 043	08B	097	5-L02
44 70 084	08B	097	5-L02
44 70 092	08B	097	5-L02
44 70 100	08B	097	5-L02
44 70 274	08B	061	5-J14
44 70 282	08B	061	5-J14
44 70 548	08B	007	5-H08
44 70 621	08B	051	5-J04
44 70 639	08B	007	5-H08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-D19 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 70 639	08B	019	5-H20
44 70 639	08B	051	5-J04
44 71 082	03A	045	2-B22
44 71 116	08A	113	5-E18
44 71 124	08A	115	5-E20
44 71 132	08A	117	5-E22
44 71 140	08A	119	5-E24
44 71 207	08B	007	5-H08
44 71 215	08B	007	5-H08
44 71 231	08B	021	5-H22
44 71 249	08B	021	5-H22
44 71 256	08B	021	5-H22
44 71 264	08B	021	5-H22
44 71 272	08B	021	5-H22
44 71 280	08B	021	5-H22
44 71 397	08B	057	5-J10
44 71 405	08B	057	5-J10
44 71 439	08B	063	5-J16
44 71 447	08B	063	5-J16
44 71 488	08B	009	5-H10
44 71 520	08B	009	5-H10
44 71 553	08B	017	5-H18
44 71 587	08B	017	5-H18
44 71 678	08B	009	5-H10
44 71 686	08B	009	5-H10
44 71 728	08B	009	5-H10
44 71 736	08B	009	5-H10
44 71 744	08B	009	5-H10
44 71 843	08B	011	5-H12
44 71 850	08B	011	5-H12
44 71 868	08B	011	5-H12
44 71 876	08B	011	5-H12
44 71 884	08B	011	5-H12
44 71 892	08B	011	5-H12
44 71 900	08B	013	5-H14
44 71 918	08B	013	5-H14
44 71 926	08B	013	5-H14
44 72 569	08B	043	5-I20
44 72 569	08B	047	5-I24
44 72 577	08B	043	5-I20
44 72 577	08B	047	5-I24
44 72 585	08B	043	5-I20
44 72 505	08B	047	5-I24
44 72 593	08B	043	5-I20
44 72 593	08B	047	5-I24
44 72 601	08B	043	5-I20
44 72 601	08B	047	5-I24
44 72 619	08B	043	5-I20
44 72 619	08B	047	5-I24
44 72 627	08B	043	5-I20
44 72 627	08B	047	5-I24
44 72 635	08B	043	5-I20
44 72 635	08B	047	5-I24
44 72 643	08B	043	5-I20
44 72 643	08B	047	5-I24
44 73 070	08B	059	5-J12
44 73 088	08B	059	5-J12
44 73 096	08B	059	5-J12
44 73 104	08B	059	5-J12
44 73 112	08B	059	5-J12
44 73 120	08B	059	5-J12
44 73 484	08B	043	5-I20
44 73 484	08B	047	5-I24
44 73 484	08B	055	5-J08
44 73 518	08B	021	5-H22
44 73 963	08B	017	5-H18
44 73 971	08B	017	5-H18
44 73 989	08B	017	5-H18
44 74 243	08B	077	5-K06
44 74 243	08B	085	5-K14
44 74 250	08B	077	5-K06
44 74 250	08B	085	5-K14
44 74 268	08B	077	5-K06
44 74 268	08B	085	5-K14
44 74 276	08B	077	5-K06
44 74 276	08B	085	5-K14
44 74 296	08B	075	5-K04
44 74 367	06	013	4-F14
44 74 714	06	007	4-F08
44 74 896	08B	073	5-K02
44 74 896	08B	081	5-K10
44 75 224	08B	075	5-K04
44 75 596	08B	099	5-L04
44 75 604	08B	099	5-L04
44 75 851	08B	087	5-K16
44 75 869	08B	087	5-K16
44 75 885	08B	035	5-I12
44 75 893	08B	029	5-I06
44 75 901	08B	039	5-I16
44 75 919	08B	033	5-I10
44 75 927	08B	027	5-I04
44 75 935	08B	037	5-I14
44 75 943	08B	035	5-I12
44 75 950	08B	029	5-I06
44 75 968	08B	039	5-I16
44 76 073	08B	081	5-K10
44 76 081	08B	081	5-K10
44 76 099	08B	081	5-K10
44 76 107	08B	081	5-K10
44 76 115	08B	081	5-K10
44 76 131	08B	083	5-K12
44 76 255	08B	081	5-K10
44 76 339	08B	083	5-K12
44 77 204	04	037	4-B14
44 77 824	04	037	4-B14
44 80 091	08A	147	5-G04
44 80 109	08A	147	5-G04
44 80 117	08A	149	5-G06
44 80 125	08A	149	5-G06
44 80 174	08A	097	5-E02
44 80 174	08A	099	5-E04
44 80 356	03A	055	2-C08
44 80 364	03A	055	2-C08
44 80 380	08A	105	5-E10
44 80 398	08A	105	5-E10
44 80 422	08A	105	5-E10
44 80 430	08A	105	5-E10
44 80 448	03A	043	2-B20
44 80 463	03A	059	2-C12
44 80 471	03A	059	2-C12
44 80 604	03A	049	2-C02
44 80 612	08A	147	5-G04
44 80 638	03A	055	2-C08
44 80 653	03A	055	2-C08
44 80 661	03A	055	2-C08
44 80 760	08A	149	5-G06
44 80 778	08A	149	5-G06
44 80 794	03A	039	2-B16
44 80 802	03A	039	2-B16
44 80 810	03A	039	2-B16
44 80 828	03A	039	2-B16
44 80 869	08A	111	5-E16
44 80 976	03A	031	2-B08
44 80 984	03A	031	2-B08
44 80 992	03A	031	2-B08
44 81 008	03A	031	2-B08
44 81 040	08A	147	5-G04
44 81 057	08A	149	5-G06
44 81 073	08A	111	5-E16
44 81 230	03A	031	2-B08
44 81 238	03A	033	2-B10
44 81 271	08A	073	5-D02
44 81 339	08D	011	6-C12
44 81 412	08A	111	5-E16
44 81 438	08A	053	5-C06
44 81 677	08A	097	5-E02
44 81 677	08A	099	5-E04
44 81 834	08A	149	5-G06
44 82 006	08D	015	6-C16
44 82 014	08D	005	6-C06
44 82 022	05	019	4-D20
44 82 089	05	019	4-D20
44 82 097	05	019	4-D20
44 82 139	08D	015	6-C16
44 82 196	05	015	4-D16
44 82 303	05	015	4-D16
44 82 311	05	015	4-D16
44 82 329	05	015	4-D16
44 82 337	05	015	4-D16
44 82 402	06	005	4-F06
44 82 436	05	017	4-D18
44 82 535	07	023	4-G24
44 82 535	07	025	4-H02
44 82 543	05	005	4-D06
44 82 550	05	005	4-D06
44 82 600	06	019	4-F20
44 82 634	06	015	4-F16
44 82 642	06	015	4-F16
44 82 659	06	017	4-F18
44 82 725	06	019	4-F20
44 82 733	06	019	4-F20
44 82 741	06	019	4-F20
44 82 758	06	019	4-F20
44 82 774	06	019	4-F20
44 82 782	06	019	4-F20
44 82 832	06	019	4-F20
44 82 899	06	015	4-F16
44 82 907	06	015	4-F16
44 82 915	06	015	4-F16
44 82 923	06	015	4-F16
44 82 931	06	015	4-F16
44 82 949	06	015	4-F16
44 82 956	06	015	4-F16
44 82 964	06	015	4-F16
44 82 972	06	015	4-F16
44 82 998	06	019	4-F20
44 83 160	07	005	4-G06
44 83 160	07	011	4-G12
44 83 178	07	005	4-G06
44 83 178	07	011	4-G12
44 83 186	07	005	4-G06
44 83 186	07	011	4-G12
44 83 194	07	005	4-G06
44 83 194	07	011	4-G12
44 83 202	07	005	4-G06
44 83 202	07	011	4-G12
44 83 210	07	005	4-G06
44 83 210	07	011	4-G12
44 83 269	05	015	4-D16
44 83 285	05	015	4-D16
44 83 293	06	005	4-F06
44 83 301	04	009	4-A10
44 83 350	07	017	4-G18
44 83 368	07	017	4-G18
44 83 384	04	009	4-A10
44 83 392	04	009	4-A10
44 83 459	04	009	4-A10
44 83 475	04	009	4-A10
44 83 483	04	009	4-A10
44 83 517	04	047	4-B24
44 83 525	04	047	4-B24
44 83 533	04	047	4-B24
44 83 616	07	007	4-G08
44 83 632	07	007	4-G08
44 83 707	05	023	4-D24
44 83 715	05	023	4-D24
44 83 723	05	005	4-D06
44 83 723	05	023	4-D24
44 83 798	06	005	4-F06
44 83 798	06	023	4-F24
44 83 806	06	005	4-F06
44 83 806	06	023	4-F24
44 83 814	06	023	4-F24
44 83 814	07	007	4-G08
44 83 822	07	009	4-G10
44 83 897	07	007	4-G08
44 83 897	07	011	4-G12
44 83 962	04	009	4-A10
44 83 970	05	011	4-D12
44 83 988	05	011	4-D12
44 83 996	05	011	4-D12
44 84 259	03A	045	2-B22
44 84 937	03A	039	2-B16
44 84 945	03A	039	2-B16
44 84 960	08A	149	5-G06
44 86 684	03A	047	2-B24
44 87 021	08B	067	5-J20
44 87 039	08B	067	5-J20
44 87 047	08B	067	5-J20
44 87 054	08B	067	5-J20

6-D20 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 87 146	08B	067	5-J20
44 87 153	08B	067	5-J20
44 87 161	08B	067	5-J20
44 87 179	08B	067	5-J20
44 87 187	08B	067	5-J20
44 87 195	08B	067	5-J20
44 87 260	08B	067	5-J20
44 87 278	08B	067	5-J20
44 87 286	08B	067	5-J20
44 87 294	08B	067	5-J20
44 87 302	08B	067	5-J20
44 87 310	08B	067	5-J20
44 87 385	08B	067	5-J20
44 87 393	08B	067	5-J20
44 87 401	08B	067	5-J20
44 87 419	08B	067	5-J20
44 87 427	08B	067	5-J20
44 87 435	08B	067	5-J20
44 88 003	03A	079	2-D08
44 88 011	03A	079	2-D08
44 88 151	03B	039	2-K16
44 88 151	03B	097	3-B06
44 88 151	03B	177	3-E14
44 88 151	03B	257	3-H22
44 88 151	03B	299	3-J16
44 88 151	03B	303	3-J20
44 88 151	03B	309	3-K02
44 88 151	03B	315	3-K08
44 88 193	08B	019	5-H20
44 88 375	03A	079	2-D08
44 88 409	03A	169	2-H02
44 88 458	03B	025	2-K02
44 88 458	03B	083	3-A16
44 88 458	03B	161	3-D22
44 88 458	03B	241	3-H06
44 88 458	03B	299	3-J16
44 88 458	03B	303	3-J20
44 88 458	03B	309	3-K02
44 88 458	03B	315	3-K08
44 88 508	03A	187	2-H20
44 88 508	03A	193	2-I02
44 88 524	03A	187	2-H20
44 88 532	03A	189	2-H22
44 88 532	03A	193	2-I02
44 88 540	03A	189	2-H22
44 88 540	03A	193	2-I02
44 88 557	03A	189	2-H22
44 88 565	03A	189	2-H22
44 88 565	03A	193	2-I02
44 88 581	03A	187	2-H20
44 88 607	03A	187	2-H20
44 88 615	03A	187	2-H20
44 88 615	03A	189	2-H22
44 88 615	03A	193	2-I02
44 88 706	03A	091	2-D20
44 88 847	03A	087	2-D16
44 88 854	03A	093	2-D22
44 88 862	03A	093	2-D22
44 88 870	03A	093	2-D22
44 88 888	03A	093	2-D22
44 88 896	03A	093	2-D22
44 88 904	03A	093	2-D22
44 88 912	03A	093	2-D22
44 88 920	03A	093	2-D22
44 88 953	03A	093	2-D22
44 88 961	03A	093	2-D22
44 88 979	03A	093	2-D22
44 88 987	03A	093	2-D22
44 88 995	03A	095	2-D24
44 89 001	03A	095	2-D24
44 89 050	03A	089	2-D18
44 89 076	03B	097	3-B06
44 89 076	03B	107	3-B16
44 89 076	03B	115	3-B24
44 89 076	03B	123	3-C08
44 89 076	03B	187	3-E24
44 89 076	03B	195	3-F08
44 89 076	03B	203	3-F16
44 89 076	03B	267	3-I08
44 89 076	03B	275	3-I16
44 89 076	03B	283	3-I24
44 89 084	03B	097	3-B06
44 89 084	03B	107	3-B16
44 89 084	03B	115	3-B24
44 89 084	03B	123	3-C08
44 89 084	03B	187	3-E24
44 89 084	03B	195	3-F08
44 89 084	03B	203	3-F16
44 89 084	03B	267	3-I08
44 89 084	03B	275	3-I16
44 89 084	03B	283	3-I24
44 89 084	03B	301	3-J18
44 89 084	03B	307	3-J24
44 89 084	03B	313	3-K06
44 89 092	03B	119	3-C04
44 89 092	03B	195	3-F12
44 89 092	03B	279	3-I20
44 89 126	03A	005	2-A06
44 89 134	03A	005	2-A06
44 89 167	03A	093	2-D22
44 89 175	03A	093	2-D22
44 89 308	03A	009	2-A10
44 89 308	03A	011	2-A12
44 89 308	03A	013	2-A14
44 89 316	03A	009	2-A10
44 89 316	03A	011	2-A12
44 89 316	03A	013	2-A14
44 89 647	03B	079	3-A12
44 89 878	03A	093	2-D22
44 89 886	03A	093	2-D22
44 89 894	03A	093	2-D22
44 89 902	03A	093	2-D22
44 89 910	03A	093	2-D22
44 89 928	03A	093	2-D22
44 89 951	03A	093	2-D22
44 89 969	03A	093	2-D22
44 89 977	03A	093	2-D22
44 89 985	03A	093	2-D22
44 90 017	04	061	4-C14
44 90 132	04	037	4-B14
44 90 157	04	037	4-B14
44 90 165	04	061	4-C14
44 90 181	04	009	4-A10
44 90 199	04	009	4-A10
44 90 207	04	009	4-A10
44 90 215	04	009	4-A10
44 90 231	04	009	4-A10
44 90 249	04	009	4-A10
44 90 314	04	037	4-B14
44 90 322	04	009	4-A10
44 90 330	04	051	4-C04
44 90 348	04	051	4-C04
44 90 363	04	011	4-A12
44 90 702	04	037	4-B14
44 90 710	04	043	4-B20
44 90 728	04	043	4-B20
44 90 728	04	061	4-C14
44 90 736	04	043	4-B20
44 90 736	04	061	4-C14
44 90 785	04	037	4-B14
44 90 793	04	037	4-B14
44 90 801	04	051	4-C04
44 90 827	04	051	4-C04
44 90 835	04	051	4-C04
44 90 843	04	051	4-C04
44 90 850	04	051	4-C04
44 90 876	04	055	4-C08
44 90 884	04	055	4-C08
44 90 892	04	055	4-C08
44 90 900	04	055	4-C08
44 90 918	04	055	4-C08
44 90 926	04	055	4-C08
44 90 934	04	055	4-C08
44 90 942	04	055	4-C08
44 90 959	04	055	4-C08
44 90 967	04	055	4-C08
44 90 975	04	055	4-C08
44 90 983	04	055	4-C08
44 90 991	04	055	4-C08
44 9[illegible]	04	055	4-C08
44 91 015	04	051	4-C04
44 91 023	04	051	4-C04
44 91 031	04	051	4-C04
44 91 049	04	051	4-C04
44 91 056	04	051	4-C04
44 91 056	04	053	4-C06
44 91 064	04	055	4-C08
44 91 072	04	053	4-C06
44 91 080	04	053	4-C06
44 91 098	04	053	4-C06
44 91 106	04	053	4-C06
44 91 114	04	053	4-C06
44 91 122	04	053	4-C06
44 91 130	04	053	4-C06
44 91 148	04	053	4-C06
44 91 155	04	053	4-C06
44 91 163	04	053	4-C06
44 91 171	04	051	4-C04
44 91 189	04	035	4-B12
44 91 197	04	059	4-C12
44 91 205	04	059	4-C12
44 91 213	04	055	4-C08
44 91 221	04	057	4-C10
44 91 239	04	061	4-C14
44 91 262	04	041	4-B18
44 91 270	04	051	4-C04
44 91 387	04	011	4-A12
44 91 411	04	037	4-B14
44 91 551	04	011	4-A12
44 91 569	04	011	4-A12
44 91 577	04	011	4-A12
44 91 619	04	011	4-A12
44 92 161	08D	009	6-C10
44 92 344	08A	141	5-F22
44 92 351	08A	141	5-F22
44 92 369	08A	141	5-F22
44 92 377	08A	141	5-F22
44 92 385	08A	141	5-F22
44 92 427	08A	141	5-F22
44 92 435	08A	141	5-F22
44 92 443	03A	083	2-D12
44 92 476	08A	077	5-D06
44 92 484	08A	077	5-D06
44 92 492	08A	079	5-D08
44 92 500	08A	079	5-D08
44 92 591	08A	103	5-E08
44 92 609	08A	103	5-E08
44 92 815	08A	095	5-D24
44 92 880	08A	047	5-B24
44 92 898	08A	041	5-B18
44 93 177	08A	137	5-F18
44 93 177	08A	139	5-F20
44 93 185	08A	137	5-F18
44 93 185	08A	139	5-F20
44 93 193	08A	047	5-B24
44 93 193	08A	133	5-F14
44 93 250	08A	077	5-D06
44 93 292	08A	045	5-B22
44 93 300	03A	061	2-C14
44 93 433	08A	077	5-D06
44 93 433	08A	081	5-D10
44 93 433	08A	083	5-D12
44 93 581	08A	103	5-E08
44 93 599	08A	093	5-D22
44 93 607	08A	093	5-D22
44 93 722	08A	123	5-F04
44 93 748	08A	057	5-C10
44 93 748	08A	059	5-C12
44 93 888	08B	06[illegible]	5-J16
44 93 912	08A	07[illegible]	5-C24
44 93 912	08A	095	5-D24
44 94 019	08A	101	5-E06
44 94 027	08A	101	5-E06
44 94 035	08A	101	5-E06
44 94 043	08A	101	5-E06
44 94 050	08A	101	5-E06
44 94 076	08A	101	5-E06
44 94 084	08A	101	5-E06
44 94 092	08A	101	5-E06
44 94 100	08A	101	5-E06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -D21 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 94 118	08A	103	5-E08
44 94 126	08A	103	5-E08
44 94 134	08A	103	5-E08
44 94 142	08A	103	5-E08
44 94 175	08A	101	5-E06
44 94 183	08A	101	5-E06
44 94 191	08A	101	5-E06
44 94 209	08A	101	5-E06
44 94 217	08A	089	5-D18
44 94 225	08A	089	5-D18
44 94 233	08A	101	5-E06
44 94 241	08A	101	5-E06
44 94 290	08A	095	5-D24
44 94 290	08A	099	5-E04
44 94 308	08A	095	5-D24
44 94 308	08A	099	5-E04
44 94 316	08A	091	5-D20
44 94 324	08A	091	5-D20
44 94 357	08A	129	5-F10
44 94 365	08A	129	5-F10
44 94 399	08A	087	5-D16
44 94 407	08A	087	5-D16
44 94 415	08A	089	5-D18
44 94 423	08A	089	5-D18
44 94 506	08A	041	5-B18
44 94 514	08A	041	5-B18
44 94 522	08A	041	5-B18
44 94 530	08A	041	5-B18
44 94 647	08A	021	5-A22
44 94 647	08A	023	5-A24
44 94 654	08A	141	5-F22
44 94 662	08A	141	5-F22
44 94 670	08A	141	5-F22
44 94 688	08A	141	5-F22
44 94 712	08A	143	5-F24
44 94 720	08A	143	5-F24
44 94 738	08A	021	5-A22
44 94 746	08A	021	5-A22
44 94 753	08A	027	5-B04
44 94 761	08A	027	5-B04
44 94 787	08A	027	5-B04
44 94 795	08A	029	5-B06
44 94 811	08A	027	5-B04
44 94 829	08A	027	5-B04
44 94 837	08A	101	5-E06
44 94 845	08A	101	5-E06
44 94 878	08A	143	5-F24
44 94 886	08A	143	5-F24
44 94 936	08A	077	5-D06
44 94 936	08A	081	5-D10
44 94 936	08A	083	5-D12
44 94 951	08A	077	5-D06
44 94 951	08A	081	5-D10
44 94 969	08A	077	5-D06
44 94 969	08A	081	5-D10
44 95 065	08B	099	5-L04
44 95 065	08B	101	5-L06
44 95 065	08B	103	5-L08
44 95 073	08B	099	5-L04
44 95 081	08B	099	5-L04
44 95 099	08B	101	5-L06
44 95 115	08B	101	5-L06
44 95 727	08B	087	5-K16
44 95 750	08B	087	5-K16
44 95 826	08B	073	5-K02
44 95 826	08B	081	5-K10
44 95 834	08B	035	5-I12
44 95 842	08B	035	5-I12
44 95 859	08B	035	5-I12
44 95 867	08B	029	5-I06
44 95 875	08B	029	5-I06
44 95 883	08B	029	5-I06
44 95 891	08B	039	5-I16
44 95 909	08B	039	5-I16
44 95 917	08B	039	5-I16
44 95 925	08B	091	5-K20
44 95 933	08B	091	5-K20
44 96 303	08B	035	5-I12
44 96 311	08B	035	5-I12
44 96 329	08B	029	5-I06
44 96 337	08B	029	5-I06
44 96 345	08B	039	5-I16
44 96 352	08B	039	5-I16
44 96 360	08B	031	5-I08
44 96 378	08B	031	5-I08
44 96 386	08B	027	5-I04
44 96 394	08B	027	5-I04
44 96 402	08B	037	5-I14
44 96 410	08B	037	5-I14
44 96 428	08B	033	5-I10
44 96 436	08B	033	5-I10
44 96 444	08B	029	5-I06
44 96 451	08B	029	5-I06
44 96 469	08B	039	5-I16
44 96 477	08B	037	5-I14
44 96 550	08B	077	5-K06
44 96 550	08B	085	5-K14
44 96 568	08B	077	5-K06
44 96 568	08B	085	5-K14
44 96 576	08B	077	5-K06
44 96 576	08B	085	5-K14
44 96 584	08B	077	5-K06
44 96 584	08B	085	5-K14
44 96 600	08B	073	5-K02
44 96 600	08B	081	5-K10
44 96 618	08B	073	5-K02
44 96 618	08B	081	5-K10
44 96 626	08B	073	5-K02
44 96 626	08B	083	5-K12
44 96 972	08B	073	5-K02
44 96 980	08B	085	5-K14
44 96 998	08B	073	5-K02
44 97 855	08A	087	5-D16
44 97 863	08A	087	5-D16
44 97 871	08A	089	5-D18
44 97 889	08A	089	5-D18
44 98 333	08B	043	5-I20
44 98 333	08B	049	5-J02
44 98 333	08B	055	5-J08
44 98 333	08B	059	5-J12
44 98 341	08B	043	5-I20
44 98 341	08B	047	5-I24
44 98 341	08B	057	5-J10
44 98 689	03A	045	2-B22
44 99 208	08B	067	5-J20
44 99 216	08B	067	5-J20
44 99 224	08B	067	5-J20
44 99 232	08B	067	5-J20
44 99 240	08B	067	5-J20
44 99 257	08B	067	5-J20
44 99 48[illegible]	08B	055	5-J08
44 99 497	08B	055	5-J08
44 99 505	08B	055	5-J08
44 99 513	08B	055	5-J08
44 99 521	08B	055	5-J08
44 99 539	08B	055	5-J08
44 99 661	08B	055	5-J08
44 99 679	08B	055	5-J08
44 99 687	08B	055	5-J08
45 00 179	02	037	1-D14
45 00 195	02	033	1-D10
45 00 195	02	037	1-D14
45 00 229	02	037	1-D14
45 00 245	02	037	1-D14
45 00 302	02	037	1-D14
45 00 328	02	037	1-D14
45 00 336	02	037	1-D14
45 00 344	02	037	1-D14
45 00 351	02	037	1-D14
45 00 351	02	151	1-I08
45 00 351	03A	019	2-A20
45 00 393	02	037	1-D14
45 00 401	02	037	1-D14
45 00 419	02	051	1-E04
45 00 534	02	033	1-D10
45 00 542	02	033	1-D10
45 00 732	02	033	1-D10
45 00 732	02	051	1-E04
45 00 823	02	033	1-D10
45 00 831	02	033	1-D10
45 00 849	02	033	1-D10
45 00 864	02	033	1-D10
45 00 880	02	033	1-D10
45 00 898	02	033	1-D10
45 00 906	02	033	1-D10
45 00 914	02	033	1-D10
45 00 922	02	033	1-D10
45 00 930	02	033	1-D10
45 00 963	02	033	1-D10
45 01 003	02	033	1-D10
45 01 029	02	159	1-I16
45 01 029	03A	025	2-B02
45 01 045	02	033	1-D10
45 01 060	02	033	1-D10
45 01 110	02	033	1-D10
45 01 110	02	049	1-E02
45 01 110	02	083	1-F12
45 01 110	02	149	1-I06
45 01 110	03A	019	2-A20
45 01 151	02	043	1-D20
45 01 185	03A	019	2-A20
45 01 193	03A	019	2-A20
45 01 201	02	037	1-D14
45 01 235	02	045	1-D22
45 01 268	04	005	4-A06
45 01 391	02	045	1-D22
45 01 524	02	045	1-D22
45 01 532	02	045	1-D22
45 01 789	02	043	1-D20
45 01 805	02	043	1-D20
45 01 813	02	043	1-D20
45 01 821	02	043	1-D20
45 01 839	02	043	1-D20
45 01 847	02	043	1-D20
45 02 050	02	049	1-E02
45 02 076	02	041	1-D18
45 02 076	02	049	1-E02
45 02 076	02	157	1-I14
45 02 134	02	049	1-E02
45 02 134	02	159	1-I16
45 02 142	02	049	1-E02
45 02 167	02	049	1-E02
45 02 241	02	051	1-E04
45 02 258	02	051	1-E04
45 02 274	02	035	1-D12
45 02 274	02	049	1-E02
45 02 274	02	051	1-E04
45 02 290	02	049	1-E02
45 02 308	02	049	1-E02
45 02 332	02	049	1-E02
45 02 357	02	035	1-D12
45 02 373	02	035	1-D12
45 02 399	02	049	1-E02
45 02 423	02	049	1-E02
45 02 431	02	137	1-H18
45 02 449	02	137	1-H18
45 02 456	02	137	1-H18
45 02 472	02	137	1-H18
45 02 480	02	137	1-H18
45 02 498	02	137	1-H18
45 02 506	02	137	1-H18
45 02 514	02	137	1-H18
45 02 530	02	137	1-H18
45 02 530	02	149	1-I06
45 02 555	02	137	1-H18
45 02 555	02	149	1-I06
45 02 571	02	049	1-E02
45 02 597	02	049	1-E02
45 02 613	02	049	1-E02
45 02 639	02	049	1-E02
45 02 647	02	049	1-E02
45 02 662	02	049	1-E02
45 02 696	02	049	1-E02
45 02 696	02	159	1-I16
45 02 712	02	049	1-E02
45 02 738	02	055	1-E08
45 02 753	02	043	1-F12
45 02 753	03A	019	2-A20
45 02 803	02	041	1-D18
45 02 829	02	041	1-D18

6 -D22 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 02 845	02	041	1-D18
45 02 985	02	145	1-I02
45 03 009	02	145	1-I02
45 03 009	03A	017	2-A18
45 03 017	02	149	1-I06
45 03 058	02	149	1-I06
45 03 066	02	149	1-I06
45 03 074	02	149	1-I06
45 03 082	02	149	1-I06
45 03 132	02	149	1-I06
45 03 207	02	083	1-F12
45 03 256	02	083	1-F12
45 03 264	02	055	1-E08
45 03 272	02	055	1-E08
45 03 298	02	087	1-F16
45 03 306	02	087	1-F16
45 03 330	02	087	1-F16
45 03 348	02	129	1-H10
45 03 371	02	091	1-F20
45 03 389	02	091	1-F20
45 03 405	02	091	1-F20
45 03 413	02	091	1-F20
45 03 488	02	087	1-F16
45 03 504	02	087	1-F16
45 03 512	02	083	1-F12
45 03 538	02	083	1-F12
45 03 538	02	095	1-F24
45 03 546	02	083	1-F12
45 03 579	02	095	1-F24
45 03 587	02	095	1-F24
45 03 629	02	095	1-F24
45 03 652	02	095	1-F24
45 03 728	02	073	1-F02
45 03 744	02	073	1-F02
45 03 751	02	073	1-F02
45 03 777	02	073	1-F02
45 03 785	02	073	1-F02
45 03 793	02	071	1-E24
45 03 793	02	073	1-F02
45 03 819	02	071	1-E24
45 03 819	02	073	1-F02
45 03 835	02	073	1-F02
45 03 850	02	083	1-F12
45 03 868	02	083	1-F12
45 03 876	02	083	1-F12
45 03 900	03A	091	2-D20
45 03 900	03A	105	2-E10
45 03 900	03A	121	2-F02
45 03 900	03A	135	2-F16
45 03 983	02	033	1-D10
45 03 991	02	041	1-D18
45 04 007	02	041	1-D18
45 04 023	02	041	1-D18
45 04 031	02	041	1-D18
45 04 049	02	041	1-D18
45 04 056	02	041	1-D18
45 04 064	02	041	1-D18
45 04 072	02	041	1-D18
45 04 080	02	041	1-D18
45 04 106	02	041	1-D18
45 04 114	02	041	1-D18
45 04 130	02	041	1-D18
45 04 171	02	035	1-D12
45 04 189	02	035	1-D12
45 04 213	02	159	1-I16
45 04 221	02	159	1-I16
45 04 247	02	035	1-D12
45 04 254	03A	017	2-A18
45 04 262	03A	019	2-A20
45 04 288	03A	019	2-A20
45 04 296	03A	019	2-A20
45 04 312	03A	019	2-A20
45 04 338	03A	019	2-A20
45 04 353	03A	025	2-B02
45 04 361	03A	025	2-B02
45 04 379	03A	025	2-B02
45 04 395	03A	025	2-B02
45 04 403	03A	025	2-B02
45 04 411	03A	025	2-B02
45 04 437	03A	025	2-B02
45 04 460	03A	025	2-B02
45 04 478	03A	019	2-A20
45 04 528	03A	019	2-A20
45 04 536	03A	019	2-A20
45 04 585	02	051	1-E04
45 04 734	02	095	1-F24
45 04 742	02	095	1-F24
45 04 882	02	055	1-E08
45 04 908	02	087	1-F16
45 04 916	02	157	1-I14
45 04 965	02	083	1-F12
45 04 973	02	083	1-F12
45 05 210	08B	087	5-K16
45 05 228	08B	087	5-K16
45 05 236	08B	089	5-K18
45 05 244	08B	087	5-K16
45 05 251	08B	087	5-K16
45 05 269	08B	103	5-L08
45 05 459	08B	101	5-L06
45 05 467	08B	101	5-L06
45 05 475	08B	103	5-L08
45 05 483	08B	089	5-K18
45 05 491	08B	073	5-K02
45 05 491	08B	083	5-K12
45 05 509	08B	075	5-K04
45 05 509	08B	081	5-K10
45 05 657	08B	091	5-K20
45 05 665	08B	091	5-K20
45 05 673	08B	091	5-K20
45 05 699	06	011	4-F12
45 05 715	06	011	4-F12
45 05 723	06	011	4-F12
45 05 749	06	013	4-F14
45 05 756	06	011	4-F12
45 05 889	06	011	4-F12
45 06 077	06	007	4-F08
45 06 085	06	007	4-F08
45 06 143	06	007	4-F08
45 06 150	06	007	4-F08
45 06 168	06	007	4-F08
45 06 200	06	007	4-F08
45 06 218	06	007	4-F08
45 06 226	06	007	4-F08
45 06 242	06	007	4-F08
45 06 317	06	007	4-F08
45 06 325	06	007	4-F08
45 06 416	06	007	4-F08
45 06 705	08B	077	5-K06
45 06 705	08B	085	5-K14
45 06 713	08B	077	5-K06
45 06 713	08B	085	5-K14
45 06 721	08B	077	5-K06
45 06 721	08B	085	5-K14
45 06 739	08B	077	5-K06
45 06 747	08B	085	5-K14
45 06 994	08B	087	5-K16
45 07 018	06	007	4-F08
45 07 026	08B	077	5-K06
45 07 026	08B	085	5-K14
45 07 026	08B	105	5-L10
45 07 034	08B	089	5-K18
45 07 034	08B	105	5-L10
45 07 042	08B	089	5-K18
45 07 042	08B	105	5-L10
45 07 059	06	011	4-F12
45 07 083	08B	035	5-I12
45 07 091	08B	035	5-I12
45 07 109	08B	029	5-I06
45 07 117	08B	029	5-I06
45 07 125	08B	039	5-I16
45 07 133	08B	039	5-I16
45 07 208	08B	033	5-I10
45 07 216	08B	033	5-I10
45 07 224	08B	029	5-I06
45 07 232	08B	029	5-I06
45 07 240	08B	039	5-I16
45 07 257	08B	037	5-I14
45 07 265	08B	035	5-I12
45 07 273	08B	035	5-I12
45 07 281	08B	029	5-I06
45 07 299	08B	029	5-I06
45 07 307	08B	039	5-I16
45 07 315	08B	039	5-I16
45 07 380	08B	033	5-I10
45 07 398	08B	033	5-I10
45 07 406	08B	029	5-I06
45 07 414	08B	029	5-I06
45 07 422	08B	039	5-I16
45 07 430	08B	039	5-I16
45 07 448	06	007	4-F08
45 07 463	06	007	4-F08
45 08 065	08B	069	5-J22
45 08 073	08B	021	5-H22
45 08 081	08A	117	5-E22
45 08 099	08A	117	5-E22
45 08 230	08B	067	5-J20
45 09 360	08B	021	5-H22
45 09 378	08B	021	5-H22
45 09 394	08B	021	5-H22
45 09 436	08A	097	5-E02
45 09 436	08A	099	5-E04
45 09 527	08B	093	5-K22
45 09 535	08B	095	5-K24
45 09 576	06	023	4-F24
45 09 576	08B	069	5-J22
45 09 618	08B	021	5-H22
45 09 626	08B	095	5-K24
45 09 634	08B	093	5-K22
45 09 659	08B	021	5-H22
45 09 667	08B	021	5-H22
45 09 717	08C	021	6-A22
45 09 725	08C	021	6-A22
45 09 733	08B	043	5-I20
45 09 741	08B	043	5-I20
45 09 956	08A	013	5-A14
45 09 956	08A	015	5-A16
45 09 956	08A	019	5-A20
45 09 964	08A	013	5-A14
45 09 964	08A	015	5-A16
45 09 964	08A	019	5-A20
45 09 972	08A	013	5-A14
45 09 972	08A	015	5-A16
45 09 972	08A	019	5-A20
45 10 053	08A	013	5-A14
45 10 053	08A	015	5-A16
45 10 053	08A	019	5-A20
45 10 087	08A	013	5-A14
45 10 087	08A	015	5-A16
45 10 087	08A	019	5-A20
45 10 327	08B	055	5-J08
45 10 335	08B	055	5-J08
45 10 343	08B	053	5-J06
45 10 350	08B	053	5-J06
45 10 368	08B	055	5-J08
45 10 376	08B	055	5-J08
45 10 384	08B	055	5-J08
45 10 392	08B	055	5-J08
45 10 400	08B	055	5-J08
45 10 731	08D	005	6-C06
45 10 871	08B	067	5-J20
45 10 889	08B	067	5-J20
45 11 036	08B	043	5-I20
45 11 036	08B	049	5-J02
45 11 085	08B	055	5-J08
45 11 093	08B	055	5-J08
45 11 101	08B	055	5-J08
45 11 440	08B	059	5-J12
45 11 457	08B	059	5-J12
45 11 465	08B	093	5-K22
45 11 531	08B	063	5-J16
45 11 531	08B	069	5-J22
45 11 549	08B	069	5-J22
45 11 648	08B	043	5-I20
45 11 648	08B	049	5-J02
45 11 648	08B	059	5-J12
45 11 655	08B	041	5-I18
45 11 663	08B	041	5-I18
45 11 671	08B	041	5-I18
45 11 689	08B	041	5-I18
45 11 697	08B	043	5-I20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 –D23 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 11 705	08B	043	5-I20
45 11 713	08B	041	5-I18
45 11 721	08B	041	5-I18
45 11 739	08B	041	5-I18
45 11 747	08B	041	5-I18
45 11 754	08B	043	5-I20
45 11 762	08B	043	5-I20
45 11 770	08B	057	5-J10
45 11 788	08B	057	5-J10
45 11 796	08B	057	5-J10
45 11 804	08B	057	5-J10
45 11 812	08B	057	5-J10
45 11 820	08B	057	5-J10
45 12 349	08B	021	5-H22
45 12 356	08B	021	5-H22
45 12 364	08B	045	5-I22
45 12 414	08B	045	5-I22
45 12 414	08B	049	5-J02
45 12 414	08B	059	5-J12
45 12 422	08B	045	5-I22
45 12 422	08B	049	5-J02
45 12 968	08B	049	5-J02
45 12 976	08B	049	5-J02
45 12 984	08B	049	5-J02
45 17 603	03A	095	2-D24
45 17 611	03A	095	2-D24
45 17 702	03B	091	3-A24
45 17 702	03B	171	3-E08
45 17 702	03B	251	3-H16
45 18 163	08B	007	5-H08
45 18 171	08B	007	5-H08
45 18 221	03A	079	2-D08
45 18 445	08B	011	5-H12
45 18 452	08B	011	5-H12
45 18 585	08B	013	5-H14
45 18 668	08B	013	5-H14
45 19 054	08B	015	5-H16
45 19 120	03A	065	2-C18
45 19 146	03A	065	2-C18
45 19 187	03A	191	2-H24
45 19 195	03A	191	2-H24
45 19 203	03A	191	2-H24
45 19 419	03A	189	2-H22
45 19 419	03A	195	2-I04
45 19 450	08B	013	5-H14
45 19 468	08B	015	5-H16
45 19 484	08B	013	5-H14
45 19 492	08B	013	5-H14
45 19 526	08B	013	5-H14
45 19 534	08B	013	5-H14
45 19 609	08B	009	5-H10
45 19 617	08B	009	5-H10
45 19 625	08B	009	5-H10
45 19 633	08B	011	5-H12
45 19 922	03A	187	2-H20
45 19 930	03A	187	2-H20
45 19 948	03A	189	2-H22
45 19 955	03A	187	2-H20
45 19 963	03A	189	2-H22
45 19 989	03A	067	2-C20
45 21 100	08A	097	5-E02
45 21 100	08A	099	5-E04
45 21 258	08D	011	6-C12
45 21 514	03A	039	2-B16
45 21 522	03A	039	2-B16
45 21 530	03A	039	2-B16
45 21 548	03A	041	2-B18
45 21 589	03A	055	2-C08
45 21 852	03A	049	2-C02
45 22 694	08A	111	5-E16
45 22 702	08A	111	5-E16
45 22 785	08D	009	6-C10
45 22 884	08A	105	5-E10
45 22 934	03A	031	2-B08
45 22 942	03A	031	2-B08
45 26 281	02	115	1-G20
45 26 356	02	075	1-F04
45 26 356	02	077	1-F06
45 26 554	08D	007	6-C08
45 26 836	02	063	1-E16
45 26 836	02	065	1-E18
45 26 844	02	109	1-G14
45 26 844	02	113	1-G18
45 26 885	02	121	1-H02
45 26 968	02	109	1-G14
45 26 968	02	117	1-G22
45 26 976	02	109	1-G14
45 26 976	02	117	1-G22
45 27 933	08D	009	6-C10
45 28 261	02	119	1-G24
45 28 261	02	121	1-H02
45 28 279	02	115	1-G20
45 28 287	02	113	1-G18
45 28 915	08D	007	6-C08
45 30 101	08B	099	5-L04
45 30 119	08B	099	5-L04
45 30 200	08B	077	5-K06
45 30 200	08B	085	5-K14
45 30 457	08B	077	5-K06
45 30 754	08B	031	5-I08
45 30 762	08B	031	5-I08
45 30 853	08B	031	5-I08
45 30 861	08B	031	5-I08
45 30 879	08B	031	5-I08
45 30 887	08B	031	5-I08
45 30 895	08B	031	5-I08
45 30 903	08B	031	5-I08
45 30 911	08B	031	5-I08
45 30 929	08B	031	5-I08
45 30 937	08B	031	5-I08
45 30 945	08B	031	5-I08
45 30 952	08B	031	5-I08
45 30 986	08B	031	5-I08
45 30 994	08B	031	5-I08
45 31 000	08B	031	5-I08
45 31 018	08B	031	5-I08
45 31 026	08B	031	5-I08
45 31 034	08B	031	5-I08
45 31 042	08B	031	5-I08
45 31 083	08B	101	5-L06
45 31 091	08B	101	5-L06
45 31 109	08B	101	5-L06
45 31 117	08B	101	5-L06
45 31 190	08B	075	5-K04
45 31 232	08B	103	5-L08
45 31 240	06	011	4-F12
45 31 323	08B	073	5-K02
45 31 323	08B	081	5-K10
45 31 331	08B	073	5-K02
45 31 331	08B	081	5-K10
45 31 356	08B	101	5-L06
45 31 364	08B	103	5-L08
45 31 372	08B	075	5-K04
45 31 414	08B	075	5-K04
45 31 422	08B	075	5-K04
45 31 430	08B	075	5-K04
45 31 463	08B	099	5-L04
45 31 489	08B	099	5-L04
45 31 513	08B	099	5-L04
45 31 521	08B	099	5-L04
45 31 539	08B	103	5-L08
45 31 547	08B	103	5-L08
45 32 222	06	011	4-F12
45 32 248	06	007	4-F08
45 32 255	06	007	4-F08
45 32 461	08B	075	5-K04
45 32 479	08B	075	5-K04
45 32 578	08B	087	5-K16
45 32 586	08B	087	5-K16
45 32 594	08B	087	5-K16
45 32 602	08B	087	5-K16
45 32 610	08B	087	5-K16
45 32 701	08B	101	5-L06
45 32 719	08B	101	5-L06
45 32 727	08B	101	5-L06
45 32 743	08D	015	6-C16
45 32 750	08B	101	5-L06
45 32 768	08B	101	5-L06
45 32 792	08B	091	5-K20
45 33 154	08B	087	5-K16
45 33 162	08B	087	5-K16
45 33 204	08B	101	5-L06
45 33 279	08B	087	5-K16
45 33 287	08B	087	5-K16
45 33 295	08B	087	5-K16
45 33 303	08B	087	5-K16
45 34 095	08B	077	5-K06
45 34 095	08B	083	5-K12
45 34 160	08B	077	5-K06
45 34 160	08B	085	5-K14
45 34 178	08B	077	5-K06
45 34 178	08B	085	5-K14
45 34 210	08B	077	5-K06
45 34 210	08B	083	5-K12
45 34 228	08B	077	5-K06
45 34 228	08B	083	5-K12
45 34 293	08B	077	5-K06
45 34 293	08B	085	5-K14
45 34 319	08B	035	5-I12
45 34 327	08B	035	5-I12
45 34 335	08B	029	5-I06
45 34 343	08B	029	5-I06
45 34 350	08B	039	5-I16
45 34 368	08B	039	5-I16
45 34 376	08B	031	5-I08
45 34 384	08B	031	5-I08
45 34 392	08B	027	5-I04
45 34 400	08B	027	5-I04
45 34 418	08B	037	5-I14
45 34 426	08B	035	5-I12
45 34 434	08B	033	5-I10
45 34 442	08B	033	5-I10
45 34 459	08B	029	5-I06
45 34 467	08B	029	5-I06
45 34 475	08B	037	5-I14
45 34 483	08B	037	5-I14
45 34 491	06	013	4-F14
45 34 517	08B	099	5-L04
45 34 517	08B	103	5-L08
45 34 624	06	011	4-F12
45 34 707	08B	101	5-L06
45 34 731	08B	099	5-L04
45 34 731	08B	103	5-L08
45 34 749	08B	099	5-L04
45 34 749	08B	103	5-L08
45 36 090	03A	085	2-A06
45 36 132	03A	103	2-E08
45 36 199	03A	113	2-E18
45 36 249	03A	113	2-E18
45 36 298	03A	113	2-E18
45 36 348	03A	113	2-E18
45 36 371	03A	113	2-E18
45 36 702	03A	097	2-E02
45 36 710	03A	097	2-E02
45 36 785	03A	169	2-H02
45 36 785	03A	171	2-H04
45 36 785	03A	175	2-H08
45 37 403	03A	165	2-G22
45 37 411	03B	117	3-C02
45 37 411	03B	197	3-F10
45 37 411	03B	277	3-I18
45 37 429	03B	185	3-E22
45 37 429	03B	265	3-I06
45 37 601	03A	069	2-C22
45 37 619	03A	069	2-C22
45 38 229	03B	305	3-J22
45 38 229	03B	311	3-K04
45 38 229	03B	317	3-K10
45 38 310	03B	117	3-C02
45 38 310	03B	197	3-F10
45 38 310	03B	277	3-I18
45 38 310	03B	303	3-J20
45 38 310	03B	309	3-K02
45 38 310	03B	315	3-K08
45 38 914	03B	303	3-J20
45 38 914	03B	309	3-K02
45 38 914	03B	315	3-K08
45 41 090	08C	013	6-A14
45 41 116	08C	009	6-A10
45 41 132	08C	013	6-A14

6 –D24 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 41 132	08C	019	6-A20
45 42 221	08B	067	5-J20
45 42 239	08C	011	6-A12
45 42 239	08C	017	6-A18
45 42 320	08C	027	6-B04
45 42 338	08C	027	6-B04
45 42 346	08C	027	6-B04
45 42 353	08C	027	6-B04
45 42 361	08C	027	6-B04
45 42 817	08D	011	6-C12
45 42 833	08C	021	6-A22
45 42 841	08C	021	6-A22
45 42 999	08C	011	6-A12
45 42 999	08C	017	6-A18
45 43 005	07	007	4-G08
45 43 013	07	019	4-G20
45 43 021	07	017	4-G18
45 43 021	07	021	4-G22
45 43 062	05	021	4-D22
45 43 104	05	021	4-D22
45 43 161	06	015	4-F16
45 43 278	05	015	4-D16
45 43 419	05	021	4-D22
45 43 419	05	027	4-E04
45 43 427	05	015	4-D16
45 43 450	06	005	4-F06
45 43 468	06	005	4-F06
45 43 476	06	005	4-F06
45 43 484	06	005	4-F06
45 43 492	07	009	4-G10
45 43 492	07	011	4-G12
45 43 500	07	009	4-G10
45 43 500	07	011	4-G12
45 43 518	07	009	4-G10
45 43 518	07	011	4-G12
45 43 526	07	009	4-G10
45 43 526	07	011	4-G12
45 43 542	07	009	4-G10
45 43 542	07	011	4-G12
45 43 567	07	013	4-G14
45 43 823	05	015	4-D16
45 43 849	05	009	4-D10
45 43 856	05	009	4-D10
45 43 872	05	011	4-D12
45 43 880	05	011	4-D12
45 43 898	05	011	4-D12
45 43 906	05	011	4-D12
45 43 914	05	011	4-D12
45 43 922	05	011	4-D12
45 43 930	05	011	4-D12
45 43 948	05	011	4-D12
45 43 963	05	011	4-D12
45 43 971	05	011	4-D12
45 43 997	05	011	4-D12
45 44 151	05	011	4-D12
45 44 169	05	011	4-D12
45 44 276	07	007	4-G08
45 44 276	07	011	4-G12
45 44 326	05	021	4-D22
45 44 326	05	027	4-E04
45 44 334	05	027	4-E04
45 44 599	07	009	4-G10
45 44 599	07	011	4-G12
45 44 623	06	015	4-F16
45 44 763	04	045	4-B22
45 44 771	04	045	4-B22
45 44 854	04	045	4-B22
45 44 862	04	045	4-B22
45 44 979	07	007	4-G08
45 44 979	07	011	4-G12
45 44 987	06	005	4-F06
45 44 995	06	005	4-F06
45 45 000	06	005	4-F06
45 45 091	04	047	4-B24
45 45 422	05	005	4-D06
45 45 430	05	015	4-D16
45 45 471	05	005	4-D06
45 45 711	06	005	4-F06
45 45 729	07	013	4-G14
45 50 075	03A	083	2-D12
45 50 083	03A	083	2-D12
45 50 091	03A	083	2-D12
45 50 208	08B	021	5-H22
45 50 281	08A	127	5-F08
45 50 299	08A	127	5-F08
45 50 356	08A	085	5-D14
45 50 356	08A	093	5-D22
45 50 364	08A	085	5-D14
45 50 364	08A	093	5-D22
45 50 372	08A	101	5-E06
45 50 380	08A	101	5-E06
45 50 430	08A	145	5-G02
45 50 463	08A	071	5-C24
45 50 554	08A	089	5-D18
45 50 562	08A	089	5-D18
45 50 570	08A	085	5-D14
45 50 570	08A	091	5-D20
45 50 588	08A	085	5-D14
45 50 588	08A	091	5-D20
45 50 596	08A	085	5-D14
45 50 596	08A	091	5-D20
45 50 604	08A	085	5-D14
45 50 604	08A	091	5-D20
45 50 711	08A	085	5-D14
45 50 711	08A	091	5-D20
45 50 729	08A	085	5-D14
45 50 729	08A	091	5-D20
45 50 737	08A	085	5-D14
45 50 737	08A	091	5-D20
45 50 745	08A	085	5-D14
45 50 745	08A	091	5-D20
45 50 752	08A	045	5-B22
45 50 802	08A	077	5-D06
45 50 802	08A	081	5-D10
45 50 802	08A	083	5-D12
45 50 828	08A	129	5-F10
45 50 836	08A	129	5-F10
45 50 851	03A	047	2-B24
45 50 869	03A	047	2-B24
45 50 877	08A	081	5-D10
45 50 885	08A	081	5-D10
45 50 919	08A	081	5-D10
45 50 927	08A	081	5-D10
45 50 968	08A	137	5-F18
45 50 976	08A	139	5-F20
45 51 008	08A	081	5-D10
45 51 008	08A	083	5-D12
45 51 040	08A	121	5-F02
45 51 057	08A	123	5-F04
45 51 081	08A	133	5-F14
45 51 099	08A	133	5-F14
45 51 107	08A	141	5-F22
45 55 009	08A	123	5-F04
45 55 017	08A	123	5-F04
45 55 066	08A	159	5-G16
45 55 082	08A	045	5-B22
45 55 462	03A	083	2-D12
45 55 538	08A	099	5-E04
45 55 546	08A	061	5-C14
45 55 553	08A	099	5-E04
45 55 561	08A	099	5-E04
45 55 579	08A	083	5-D12
45 55 587	08A	083	5-D12
45 55 611	08A	045	5-B22
45 55 629	08A	021	5-A22
45 55 629	08A	023	5-A24
45 55 629	08A	027	5-B04
45 55 629	08A	029	5-B06
45 55 629	08A	033	5-B10
45 55 629	08A	037	5-B14
45 55 637	08A	029	5-B06
45 55 637	08A	035	5-B12
45 55 637	08A	041	5-B18
45 55 652	08A	041	5-B18
45 55 660	08A	141	5-F22
45 55 660	08A	143	5-F24
45 55 678	08A	143	5-F24
45 55 686	08A	041	5-B18
45 55 702	08A	021	5-A22
45 55 702	08A	023	5-A24
45 55 710	08A	021	5-A22
45 55 710	08A	023	5-A24
45 55 710	08A	025	5-B02
45 55 710	08A	029	5-B06
45 55 710	08A	039	5-B16
45 55 710	08A	045	5-B22
45 55 728	08A	021	5-A22
45 55 728	08A	023	5-A24
45 55 728	08A	025	5-B02
45 55 736	08A	021	5-A22
45 55 736	08A	027	5-B04
45 55 744	08A	029	5-B06
45 55 751	08A	013	5-A14
45 55 751	08A	015	5-A16
45 55 751	08A	019	5-A20
45 55 769	08A	013	5-A14
45 55 769	08A	015	5-A16
45 55 769	08A	019	5-A20
45 55 769	08A	025	5-B02
45 55 777	08A	015	5-A16
45 55 777	08A	017	5-A18
45 55 777	08A	019	5-A20
45 55 777	08A	143	5-F24
45 55 785	08A	029	5-B06
45 55 785	08A	035	5-B12
45 55 793	08A	021	5-A22
45 55 793	08A	023	5-A24
45 55 827	08A	021	5-A22
45 55 827	08A	023	5-A24
45 55 843	08A	027	5-B04
45 55 843	08A	033	5-B10
45 55 843	08A	037	5-B14
45 55 850	08A	029	5-B06
45 55 850	08A	035	5-B12
45 55 850	08A	039	5-B16
45 55 868	08A	021	5-A22
45 55 868	08A	023	5-A24
45 55 868	08A	025	5-B02
45 55 876	08A	021	5-A22
45 55 876	08A	023	5-A24
45 55 876	08A	025	5-B02
45 55 926	08A	029	5-B06
45 55 926	08A	035	5-B12
45 55 926	08A	041	5-B18
45 55 934	08A	141	5-F22
45 55 934	08A	143	5-F24
45 55 942	08A	021	5-A22
45 55 959	08A	029	5-B06
45 55 959	08A	035	5-B12
45 55 959	08A	039	5-B16
45 55 967	08A	027	5-B04
45 55 975	08A	013	5-A14
45 55 975	08A	015	5-A16
45 55 983	08A	029	5-B06
45 55 983	08A	035	5-B12
45 55 983	08A	039	5-B16
45 55 991	08A	021	5-A22
45 55 991	08A	023	5-A24
45 55 991	08A	025	5-B02
45 56 007	08A	021	5-A22
45 56 007	08A	023	5-A24
45 56 015	08A	013	5-A14
45 56 015	08A	015	5-A16
45 56 015	08A	027	5-B04
45 56 015	08A	035	5-B12
45 56 023	08A	029	5-B06
45 56 031	08A	013	5-A14
45 56 064	08A	021	5-A22
45 56 064	08A	023	5-A24
45 56 072	08A	141	5-F22
45 56 072	08A	143	5-F24
45 56 080	08A	021	5-A22
45 56 080	08A	023	5-A24
45 56 080	08A	027	5-B04
45 56 080	08A	033	5-B10
45 56 098	08A	029	5-B06
45 56 098	08A	035	5-B12
45 56 098	08A	039	5-B16
45 56 106	08A	021	5-A22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -E01 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 56 106	08A	023	5-A24
45 56 106	08A	027	5-B04
45 56 106	08A	033	5-B10
45 56 106	08A	037	5-B14
45 56 114	08A	021	5-A22
45 56 114	08A	023	5-A24
45 56 130	08A	021	5-A22
45 56 130	08A	023	5-A24
45 56 163	08A	141	5-F22
45 56 163	08A	143	5-F24
45 56 221	08A	021	5-A22
45 56 221	08A	023	5-A24
45 56 221	08A	025	5-B02
45 56 239	08A	021	5-A22
45 56 239	08A	023	5-A24
45 56 239	08A	025	5-B02
45 56 296	08A	041	5-B18
45 56 304	08A	021	5-A22
45 56 320	08A	021	5-A22
45 56 320	08A	023	5-A24
45 56 338	08A	021	5-A22
45 56 403	08A	013	5-A14
45 56 411	08A	027	5-B04
45 56 445	08A	047	5-B24
45 56 478	08A	041	5-B18
45 56 486	08A	021	5-A22
45 56 486	08A	027	5-B04
45 56 494	08A	027	5-B04
45 56 502	08A	027	5-B04
45 56 528	08A	013	5-A14
45 56 528	08A	015	5-A16
45 56 528	08A	019	5-A20
45 56 536	08A	027	5-B04
45 56 544	08A	027	5-B04
45 56 577	08A	013	5-A14
45 56 585	08A	029	5-B06
45 56 593	08A	029	5-B06
45 56 601	08A	013	5-A14
45 56 619	08A	013	5-A14
45 56 635	08A	029	5-B06
45 56 643	08A	029	5-B06
45 56 759	08A	127	5-F08
45 56 767	08A	127	5-F08
45 56 775	08A	127	5-F08
45 56 783	08A	127	5-F08
45 56 791	08A	045	5-B22
45 56 932	08A	013	5-A14
45 56 973	08A	045	5-B22
45 56 981	08A	045	5-B22
45 56 999	08A	045	5-B22
45 57 013	08A	045	5-B22
45 57 021	08A	045	5-B22
45 57 062	08A	045	5-B22
45 57 070	08A	045	5-B22
45 57 096	08A	045	5-B22
45 57 104	08A	045	5-B22
45 57 112	08A	045	5-B22
45 57 120	08A	045	5-B22
45 57 138	08A	011	5-A12
45 57 195	08A	123	5-F04
45 57 195	08A	159	5-G16
45 57 203	08A	123	5-F04
45 57 203	08A	159	5-G16
45 57 211	03A	061	2-C14
45 57 229	03A	061	2-C14
45 57 245	08A	145	5-G02
45 57 245	08B	061	5-J14
45 57 252	08A	125	5-F06
45 57 260	08A	125	5-F06
45 57 344	08A	041	5-B18
45 57 641	08A	021	5-A22
45 57 641	08A	023	5-A24
45 57 658	08A	029	5-B06
45 57 658	08A	035	5-B12
45 57 658	08A	093	5-D22
45 57 666	08A	029	5-B06
45 57 690	08A	021	5-A22
45 57 690	08A	023	5-A24
45 57 690	08A	025	5-B02
45 57 831	08A	093	5-D22
45 57 898	08A	041	5-B18
45 57 906	08A	041	5-B18
45 57 955	08A	041	5-B18
45 57 963	08A	041	5-B18
45 57 971	08A	041	5-B18
45 57 989	08A	041	5-B18
45 57 989	08A	043	5-B20
45 57 997	08A	041	5-B18
45 58 003	08A	041	5-B18
45 58 045	08A	099	5-E04
45 58 052	08A	099	5-E04
45 58 060	08A	099	5-E04
45 58 078	08A	145	5-G02
45 58 086	08A	145	5-G02
45 58 144	08A	041	5-B18
45 58 219	08A	133	5-F14
45 58 227	08A	133	5-F14
45 58 342	08A	041	5-B18
45 58 425	08D	017	6-C18
45 58 433	08D	015	6-C16
45 58 441	08D	015	6-C16
45 58 508	08B	023	5-H24
45 58 532	08A	013	5-A14
45 58 532	08A	015	5-A16
45 58 532	08A	019	5-A20
45 58 540	08A	045	5-B22
45 58 771	08A	041	5-B18
45 58 805	08A	041	5-B18
45 58 862	08A	041	5-B18
45 59 076	08A	141	5-F22
45 59 340	03A	071	2-C24
45 59 381	08A	041	5-B18
45 59 407	08A	029	5-B06
45 59 407	08A	035	5-B12
45 59 431	08A	029	5-B06
45 59 456	08A	029	5-B06
45 59 472	08A	125	5-F06
45 59 654	08A	095	5-D24
45 59 951	08A	029	5-B06
45 59 951	08A	035	5-B12
45 59 951	08A	039	5-B16
45 59 977	08A	029	5-B06
45 59 985	08A	029	5-B06
45 65 693	05	027	4-E04
45 66 030	07	013	4-G14
45 66 048	07	013	4-G14
45 66 311	07	013	4-G14
45 66 840	05	027	4-E04
45 67 731	05	005	4-D06
45 67 764	08D	015	6-C16
45 67 855	05	011	4-D12
45 68 192	05	005	4-D06
45 76 583	02	055	1-E08
45 76 583	02	065	1-E18
45 76 591	02	125	1-H06
45 78 498	04	011	4-A12
45 78 845	04	011	4-A12
45 80 015	04	037	4-B14
45 80 908	04	023	4-A24
45 81 112	03A	101	2-E06
45 81 120	03A	101	2-E06
45 81 278	03A	111	2-E16
45 81 286	03A	111	2-E16
45 81 294	03A	111	2-E16
45 81 302	03A	111	2-E16
45 81 328	03A	103	2-E08
45 81 336	03A	103	2-E08
45 81 799	03A	107	2-E12
45 81 807	03A	107	2-E12
45 81 815	03A	107	2-E12
45 81 823	03A	107	2-E12
45 81 831	03A	107	2-E12
45 81 849	03A	107	2-E12
45 81 856	03A	107	2-E12
45 81 864	03A	107	2-E12
45 81 872	03A	109	2-E14
45 81 880	03A	109	2-E14
45 81 898	03A	109	2-E14
45 81 906	03A	109	2-E14
45 81 914	03A	109	2-E14
45 81 922	03A	109	2-E14
45 81 930	03A	107	2-E12
45 81 948	03A	109	2-E14
45 81 942	03A	107	2-E12
45 81 959	03A	107	2-E12
45 82 367	03A	107	2-E12
45 82 375	03A	107	2-E12
45 82 383	03A	107	2-E12
45 82 391	03A	107	2-E12
45 82 425	03A	005	2-A06
45 82 508	03A	107	2-E12
45 82 516	03A	107	2-E12
45 82 524	03A	109	2-E14
45 82 532	03A	109	2-E14
45 82 540	03A	109	2-E14
45 82 557	03A	109	2-E14
45 82 565	03A	109	2-E14
45 82 573	03A	109	2-E14
45 82 581	03A	109	2-E14
45 82 599	03A	109	2-E14
45 82 847	03A	115	2-E20
45 82 847	03A	129	2-F10
45 82 847	03A	143	2-F24
45 82 847	03A	155	2-G12
45 82 862	03A	113	2-E18
45 82 862	03A	127	2-F08
45 82 912	03A	103	2-E08
45 82 920	03A	103	2-E08
45 82 946	03A	103	2-E08
45 82 961	03A	105	2-E10
45 82 979	03A	105	2-E10
45 83 019	03A	069	2-C22
45 83 027	03A	069	2-C22
45 83 886	08D	011	6-C12
45 83 894	08D	011	6-C12
45 83 944	03A	105	2-E10
45 83 951	02	069	1-E22
45 83 969	03A	103	2-E08
45 83 969	03A	105	2-E10
45 84 157	03A	165	2-G22
45 84 249	03A	005	2-A06
45 84 256	03A	121	2-F02
45 84 264	03A	121	2-F02
45 84 363	03A	121	2-F02
45 84 363	03A	135	2-F16
45 84 488	03A	125	2-F06
45 84 488	03A	139	2-F20
45 84 603	03A	127	2-F08
45 84 637	03A	127	2-F08
45 84 637	03A	141	2-F22
45 84 637	03A	153	2-G10
45 84 660	03A	127	2-F08
45 84 694	03A	127	2-F08
45 84 728	03A	127	2-F08
45 84 751	03A	117	2-E22
45 84 769	03A	117	2-E22
45 84 777	03A	117	2-E22
45 84 785	03A	125	2-F06
45 84 793	03A	125	2-F06
45 84 801	03A	125	2-F06
45 84 819	03A	125	2-F06
45 84 827	03A	125	2-F06
45 84 835	03A	125	2-F06
45 84 843	03A	125	2-F06
45 84 850	03A	125	2-F06
45 84 876	03A	119	2-E24
45 84 884	03A	119	2-E24
45 84 934	03A	123	2-F04
45 84 942	03A	123	2-F04
45 84 967	03A	123	2-F04
45 84 975	03A	123	2-F04
45 85 006	03A	123	2-F04
45 85 014	03A	123	2-F04
45 85 089	03A	123	2-F04
45 85 097	03A	123	2-F04
45 85 238	03A	107	2-E12
45 85 246	03A	107	2-E12
45 85 253	03A	107	2-E12
45 85 261	03A	107	2-E12
45 85 279	03A	107	2-E12

6 -E02 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 85 287	03A	107	2-E12
45 85 295	03A	107	2-E12
45 85 303	03A	107	2-E12
45 85 311	03A	109	2-E14
45 85 329	03A	109	2-E14
45 85 337	03A	109	2-E14
45 85 345	03A	109	2-E14
45 85 352	03A	109	2-E14
45 85 360	03A	109	2-E14
45 85 378	03A	109	2-E14
45 85 386	03A	109	2-E14
45 85 568	03A	101	2-E06
45 85 576	03A	101	2-E06
45 85 584	03A	101	2-E06
45 85 717	03A	111	2-E16
45 85 725	03A	111	2-E16
45 85 733	03A	111	2-E16
45 85 741	03A	111	2-E16
45 86 590	03A	111	2-E16
45 86 608	03A	111	2-E16
45 86 871	03B	127	3-C12
45 87 515	02	109	1-G14
45 87 515	02	113	1-G18
45 87 515	02	115	1-G20
45 87 952	03B	137	3-C22
45 87 952	03B	217	3-G06
45 88 182	03A	083	2-D12
45 88 190	03A	083	2-D12
45 88 208	03A	083	2-D12
45 88 661	08D	011	6-C12
45 88 679	08D	011	6-C12
45 88 695	03A	005	2-A06
45 88 877	03A	083	2-D12
45 89 321	08D	011	6-C12
45 89 339	08D	011	6-C12
46 03 106	08B	095	5-K24
46 03 213	08A	013	5-A14
46 03 213	08A	015	5-A16
46 03 213	08A	019	5-A20
46 03 221	08A	013	5-A14
46 03 221	08A	015	5-A16
46 03 221	08A	019	5-A20
46 03 239	08A	013	5-A14
46 03 239	08A	015	5-A16
46 03 239	08A	019	5-A20
46 03 338	08B	067	5-J20
46 03 346	08B	067	5-J20
46 03 510	08B	045	5-I22
46 03 528	08B	045	5-I22
46 03 536	08B	045	5-I22
46 03 544	08B	045	5-I22
46 03 551	08B	059	5-J12
46 03 569	08B	059	5-J12
46 03 577	08B	045	5-I22
46 03 585	08B	045	5-I22
46 03 874	08A	113	5-E18
46 03 882	08A	115	5-E20
46 03 890	08A	113	5-E18
46 03 908	08A	115	5-E20
46 03 916	08A	117	5-E22
46 03 924	08A	113	5-E18
46 03 932	08A	117	5-E22
46 04 039	08A	117	5-E22
46 04 179	08B	041	5-I18
46 04 187	08B	041	5-I18
46 04 195	08B	041	5-I18
46 04 203	08B	041	5-I18
46 04 211	08B	043	5-I20
46 04 229	08B	043	5-I20
46 04 237	08B	041	5-I18
46 04 245	08B	041	5-I18
46 04 252	08B	041	5-I18
46 04 260	08B	041	5-I18
46 04 278	08B	043	5-I20
46 04 286	08B	043	5-I20
46 04 740	08B	021	5-H22
46 04 781	08B	021	5-H22
46 05 127	03A	045	2-B22
46 05 176	08B	009	5-H10
46 05 184	08B	009	5-H10
46 05 192	08B	009	5-H10
46 05 291	08B	009	5-H10
46 05 309	08B	009	5-H10
46 05 317	08B	009	5-H10
46 05 382	08B	009	5-H10
46 05 390	08B	009	5-H10
46 05 408	08B	009	5-H10
46 05 416	08B	011	5-H12
46 05 424	08B	011	5-H12
46 05 432	08B	011	5-H12
46 05 473	08B	045	5-I22
46 05 473	08B	049	5-J02
46 05 481	08B	045	5-I22
46 05 481	08B	049	5-J02
46 05 499	08B	045	5-I22
46 05 499	08B	049	5-J02
46 05 796	08B	011	5-H12
46 05 804	08B	011	5-H12
46 05 812	08B	011	5-H12
46 05 853	08B	013	5-H14
46 05 861	08B	013	5-H14
46 05 879	08B	013	5-H14
46 05 952	08A	087	5-D16
46 05 952	08A	093	5-D22
46 05 960	08A	087	5-D16
46 05 960	08A	093	5-D22
46 05 978	08A	089	5-D18
46 05 986	08A	089	5-D18
46 06 620	08B	021	5-H22
46 06 695	08D	015	6-C16
46 06 703	08D	015	6-C16
46 06 711	08D	015	6-C16
46 06 737	08B	005	5-H06
46 06 851	08B	093	5-K22
46 06 869	08B	093	5-K22
46 07 008	08A	117	5-E22
46 07 040	08B	097	5-L02
46 07 057	08B	005	5-H06
46 07 552	08B	067	5-J20
46 07 560	08B	067	5-J20
46 07 859	08B	061	5-J14
46 07 867	08B	061	5-J14
46 08 663	08B	093	5-K22
46 08 741	08B	051	5-J04
46 09 533	04	013	4-A14
46 09 533	04	057	4-C10
46 09 566	08B	005	5-H06
46 09 574	08B	005	5-H06
46 09 582	08B	005	5-H06
46 09 590	08B	005	5-H06
46 09 806	08B	011	5-H12
46 09 814	08B	011	5-H12
46 09 822	08B	011	5-H12
46 09 830	08B	011	5-H12
46 09 848	08B	011	5-H12
46 09 855	08B	011	5-H12
46 09 954	08B	007	5-H08
46 14 004	04	005	4-A06
46 14 004	04	063	4-C16
46 14 012	04	005	4-A06
46 14 012	04	007	4-A08
46 14 012	04	063	4-C16
46 15 027	03A	187	2-H20
46 15 035	03A	187	2-H20
46 15 852	03A	065	2-C18
46 15 860	03A	065	2-C18
46 15 969	08B	017	5-H18
46 16 025	06	009	4-F10
46 16 132	03A	063	2-C16
46 16 140	03A	063	2-C16
46 16 645	08B	007	5-H08
46 16 652	08B	007	5-H08
46 16 660	08B	007	5-H08
46 16 728	08B	009	5-H10
46 16 736	08B	009	5-H10
46 16 744	08B	009	5-H10
46 16 751	08B	009	5-H10
46 16 769	08B	009	5-H10
46 16 777	08B	009	5-H10
46 17 239	03A	187	2-H20
46 17 247	03A	187	2-H20
46 17 254	03A	189	2-H22
46 17 262	03A	187	2-H20
46 17 320	03A	191	2-H24
46 17 320	03A	195	2-I04
46 17 338	03A	191	2-H24
46 17 338	03A	195	2-I04
46 17 346	03A	191	2-H24
46 17 346	03A	195	2-I04
46 17 478	03A	063	2-C16
46 17 486	03A	063	2-C16
46 17 551	03A	071	2-C24
46 17 569	03A	193	2-I02
46 17 577	03A	193	2-I02
46 17 619	03A	189	2-H22
46 17 627	03A	187	2-H20
46 17 627	03A	193	2-I02
46 17 635	03A	187	2-H20
46 17 635	03A	193	2-I02
46 17 643	03A	189	2-H22
46 17 643	03A	193	2-I02
46 17 650	03A	187	2-H20
46 17 650	03A	193	2-I02
46 17 668	04	017	4-A18
46 18 187	03A	083	2-D12
46 18 195	03A	083	2-D12
46 18 369	08D	015	6-C16
46 18 377	08D	015	6-C16
46 18 864	08D	015	6-C16
46 19 045	03A	079	2-D08
46 19 052	08D	015	6-C16
46 19 060	08D	015	6-C16
46 19 144	08D	015	6-C16
46 19 268	03A	193	2-I02
46 19 417	08D	015	6-C16
46 19 425	03A	193	2-I02
46 19 515	03A	193	2-I02
46 19 680	03A	075	2-D04
46 19 961	03A	193	2-I02
46 19 979	03A	193	2-I02
46 20 001	02	137	1-H18
46 20 019	02	043	1-D20
46 20 027	02	049	1-E02
46 20 043	02	041	1-D18
46 20 084	02	041	1-D18
46 20 118	02	083	1-F12
46 20 142	02	049	1-E02
46 20 225	02	049	1-E02
46 20 241	02	049	1-E02
46 20 258	02	049	1-E02
46 20 274	02	137	1-H18
46 20 282	02	137	1-H18
46 20 324	02	149	1-I06
46 21 314	02	033	1-D10
46 21 348	02	041	1-D18
46 21 355	03A	019	2-A20
46 21 363	03A	019	2-A20
46 21 397	02	137	1-H18
46 21 397	02	149	1-I06
46 21 413	02	137	1-H18
46 21 413	02	149	1-I06
46 21 421	02	137	1-H18
46 21 470	02	145	1-I02
46 21 488	02	019	1-C20
46 21 496	02	019	1-C20
46 21 504	02	019	1-C20
46 21 520	02	019	1-C20
46 21 538	02	019	1-C20
46 22 015	02	063	1-E16
46 22 296	02	051	1-E04
46 22 304	02	063	1-E16
46 22 577	08D	009	6-C10
46 22 585	02	063	1-E16
46 22 593	02	063	1-E16
46 22 619	02	067	1-E20
46 22 627	02	067	1-E20
46 22 635	02	067	1-E20
46 22 643	02	067	1-E20
46 22 890	02	061	1-E14
46 22 908	02	061	1-E14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-E03 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
46 22 916	02	061	1-E14
46 23 047	08D	007	6-C08
46 23 054	02	109	1-G14
46 23 062	02	109	1-G14
46 23 104	02	115	1-G20
46 23 146	02	009	1-C10
46 23 724	02	041	1-D18
46 23 732	02	035	1-D12
46 23 740	02	035	1-D12
46 23 815	02	149	1-I06
46 23 872	02	039	1-D16
46 23 880	02	009	1-C10
46 23 898	02	041	1-D18
46 23 906	02	041	1-D18
46 23 922	02	039	1-D16
46 23 948	02	039	1-D16
46 24 102	02	119	1-G24
46 24 110	02	119	1-G24
46 24 151	02	095	1-F24
46 24 219	08D	007	6-C08
46 24 227	02	115	1-G20
46 24 383	02	109	1-G14
46 24 383	02	113	1-G18
46 24 466	02	157	1-I14
46 25 042	04	013	4-A14
46 25 059	04	051	4-C04
46 25 083	04	037	4-B14
46 25 091	04	037	4-B14
46 25 174	04	055	4-C08
46 25 182	04	055	4-C08
46 25 190	04	055	4-C08
46 25 232	04	037	4-B14
46 25 265	04	023	4-A24
46 25 281	04	055	4-C08
46 25 471	04	037	4-B14
46 25 489	04	049	4-C02
46 25 497	04	049	4-C02
46 25 505	04	049	4-C02
46 25 513	04	049	4-C02
46 25 570	04	037	4-B14
46 25 703	04	055	4-C08
46 25 810	04	037	4-B14
46 25 828	04	053	4-C06
46 26 024	04	011	4-A12
46 26 065	04	009	4-A10
46 26 099	04	011	4-A12
46 26 172	04	009	4-A10
46 26 180	04	009	4-A10
46 26 321	04	041	4-B18
46 26 503	04	011	4-A12
46 26 537	04	041	4-B18
46 26 545	04	049	4-C02
46 26 552	04	049	4-C02
46 26 560	04	049	4-C02
46 26 578	04	049	4-C02
46 26 594	04	055	4-C08
46 26 602	04	055	4-C08
46 26 610	04	055	4-C08
46 26 628	04	055	4-C08
46 26 636	04	055	4-C08
46 26 644	04	057	4-C10
46 26 651	04	055	4-C08
46 26 677	04	041	4-B18
46 26 826	04	037	4-B14
46 26 966	04	011	4-A12
46 27 287	08B	077	5-K06
46 27 287	08B	085	5-K14
46 27 295	08B	077	5-K06
46 27 295	08B	085	5-K14
46 28 020	08B	073	5-K02
46 28 038	08B	073	5-K02
46 28 053	08B	071	5-J24
46 28 061	08B	071	5-J24
46 28 160	08B	091	5-K20
46 28 178	08B	091	5-K20
46 28 186	08B	091	5-K20
46 28 913	08B	099	5-L04
46 28 921	08B	103	5-L08
46 28 939	08D	013	6-C14
46 28 954	08B	071	5-J24
46 28 962	08B	071	5-J24
46 28 970	08B	079	5-K08
46 28 988	08B	079	5-K08
46 28 996	08B	079	5-K08
46 29 002	08B	079	5-K08
46 29 010	08B	071	5-J24
46 29 028	08B	071	5-J24
46 29 036	08B	079	5-K08
46 29 044	08B	079	5-K08
46 29 093	08B	103	5-L08
46 29 101	08B	099	5-L04
46 29 101	08B	103	5-L08
46 29 119	08B	099	5-L04
46 29 119	08B	103	5-L08
46 29 127	08B	099	5-L04
46 29 127	08B	103	5-L08
46 29 135	08B	099	5-L04
46 29 135	08B	103	5-L08
46 29 390	08B	103	5-L08
46 29 572	08B	099	5-L04
46 29 580	08B	099	5-L04
46 29 606	08B	099	5-L04
46 29 614	08B	099	5-L04
46 29 630	08B	103	5-L08
46 29 648	08B	103	5-L08
46 29 655	08B	101	5-L06
46 29 663	08B	101	5-L06
46 29 671	08B	101	5-L06
46 29 705	08B	103	5-L08
46 29 713	08B	103	5-L08
46 29 721	08B	035	5-I12
46 29 739	08B	031	5-I08
46 29 747	08B	039	5-I16
46 29 754	08B	029	5-I06
46 29 762	08B	031	5-I08
46 29 770	08B	027	5-I04
46 29 788	08B	035	5-I12
46 29 796	08B	033	5-I10
46 29 804	08B	027	5-I04
46 29 812	08B	037	5-I14
46 29 853	06	007	4-F08
46 30 182	08B	087	5-K16
46 30 372	08B	075	5-K04
46 30 372	08B	083	5-K12
46 30 380	08B	075	5-K04
46 30 380	08B	083	5-K12
46 30 398	08B	075	5-K04
46 30 406	08B	075	5-K04
46 30 646	08B	077	5-K06
46 30 646	08B	085	5-K14
46 30 653	08B	075	5-K04
46 30 661	08B	075	5-K04
46 30 679	08B	075	5-K04
46 30 687	08B	083	5-K12
46 30 695	08B	083	5-K12
46 30 703	08B	083	5-K12
46 30 711	08B	083	5-K12
46 30 752	08D	011	6-C12
46 30 851	08B	087	5-K16
46 30 869	08B	087	5-K16
46 30 877	08B	087	5-K16
46 30 885	08B	087	5-K16
46 30 901	08B	035	5-I12
46 30 919	08B	035	5-I12
46 30 935	08B	031	5-I08
46 30 943	08B	031	5-I08
46 30 968	08B	039	5-I16
46 30 976	08B	039	5-I16
46 30 992	08B	031	5-I08
46 31 008	08B	031	5-I08
46 31 024	08B	027	5-I04
46 31 032	08B	027	5-I04
46 31 057	08B	037	5-I14
46 31 065	08B	035	5-I12
46 31 081	08B	033	5-I10
46 31 099	08B	033	5-I10
46 31 115	08B	029	5-I06
46 31 123	08B	029	5-I06
46 31 149	08B	037	5-I14
46 31 156	08B	037	5-I14
46 31 263	08B	029	5-I06
46 31 271	08B	029	5-I06
46 31 719	06	011	4-F12
46 32 014	08C	025	6-B02
46 32 030	08C	025	6-B02
46 32 063	08C	025	6-B02
46 32 139	08C	025	6-B02
46 32 253	08C	019	6-A20
46 32 279	08C	013	6-A14
46 32 279	08C	019	6-A20
46 32 303	08C	027	6-B04
46 32 352	08C	027	6-B04
46 32 493	09C	007	6-A08
46 32 683	08C	007	6-A08
46 32 808	08C	019	6-A20
46 32 956	08C	013	6-A14
46 32 956	08C	019	6-A20
46 32 972	08C	013	6-A14
46 32 972	08C	019	6-A20
46 32 980	08C	007	6-A08
46 32 998	08C	007	6-A08
46 34 226	08C	011	6-A12
46 34 226	08C	017	6-A18
46 34 416	08C	029	6-B06
46 34 481	08C	029	6-B06
46 34 895	08C	025	6-B02
46 34 903	08C	025	6-B02
46 34 937	08C	027	6-B04
46 34 952	08C	019	6-A20
46 34 960	08C	013	6-A14
46 34 978	08C	011	6-A12
46 34 978	08C	013	6-A14
46 34 978	08C	015	6-A16
46 34 978	08C	017	6-A18
46 35 041	08C	009	6-A10
46 35 199	08C	027	6-B04
46 35 231	08C	019	6-A20
46 35 322	08C	009	6-A10
46 35 330	08C	009	6-A10
46 35 348	08C	009	6-A10
46 35 355	08C	009	6-A10
46 35 637	08C	019	6-A20
46 35 785	08C	015	6-A16
46 35 843	08C	011	6-A12
46 35 843	08C	017	6-A18
46 35 850	08C	011	6-A12
46 35 868	08C	011	6-A12
46 35 876	08C	011	6-A12
46 35 876	08C	017	6-A18
46 35 884	08C	013	6-A14
46 35 884	08C	015	6-A16
46 35 884	08C	019	6-A20
46 35 900	09C	013	6-A14
46 35 900	08C	015	6-A16
46 35 900	08C	019	6-A20
46 35 918	08C	013	6-A14
46 35 918	08C	019	6-A20
46 36 056	08B	025	5-I02
46 36 064	08B	025	5-I02
46 36 072	08B	025	5-I02
46 36 114	08B	045	5-I22
46 36 114	08B	049	5-J02
46 36 122	08B	045	5-I22
46 36 122	08B	049	5-J02
46 36 130	08B	059	5-J12
46 36 148	08B	059	5-J12
46 36 155	08B	045	5-I22
46 36 155	08B	049	5-J02
46 36 163	08B	045	5-I22
46 36 163	08B	049	5-J02
46 36 171	08B	045	5-I22
46 36 189	08B	045	5-I22
46 36 296	08B	055	5-J08
46 36 569	08B	013	5-H14
46 36 577	08B	013	5-H14
46 36 585	08B	013	5-H14
46 36 593	08B	023	5-H24
46 36 601	08B	023	5-H24
46 36 619	08B	023	5-H24
46 36 627	08B	023	5-H24

6-E04 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
46 36 635	08B	021	5-H22
46 36 643	08B	023	5-H24
46 36 650	08B	021	5-H22
46 36 726	08B	055	5-J08
46 37 906	08B	041	5-I18
46 37 914	08B	041	5-I18
46 37 922	08B	041	5-I18
46 37 930	08B	041	5-I18
46 37 948	08B	041	5-I18
46 37 955	08B	041	5-I18
46 37 963	08B	041	5-I18
46 37 971	08B	041	5-I18
46 37 989	08B	043	5-I20
46 37 997	08B	043	5-I20
46 38 003	08B	043	5-I20
46 38 011	08B	043	5-I20
46 38 029	08B	041	5-I18
46 38 037	08B	041	5-I18
46 38 045	08B	041	5-I18
46 38 052	08B	041	5-I18
46 38 060	08B	041	5-I18
46 38 078	08B	041	5-I18
46 38 086	08B	041	5-I18
46 38 094	08B	041	5-I18
46 38 102	08B	043	5-I20
46 38 110	08B	043	5-I20
46 38 128	08B	043	5-I20
46 38 136	08B	043	5-I20
46 38 268	08B	057	5-J10
46 38 276	08B	057	5-J10
46 38 284	08B	057	5-J10
46 38 292	08B	057	5-J10
46 38 300	08B	057	5-J10
46 38 318	08B	057	5-J10
46 38 326	08B	051	5-J04
46 38 334	08B	051	5-J04
46 38 342	08B	051	5-J04
46 38 359	08B	051	5-J04
46 38 367	08B	051	5-J04
46 38 375	08B	051	5-J04
46 38 383	08B	053	5-J06
46 38 391	08B	053	5-J06
46 38 409	08B	053	5-J06
46 38 417	08B	053	5-J06
46 38 425	08B	053	5-J06
46 38 433	08B	053	5-J06
46 40 678	08B	061	5-J14
46 41 072	08B	021	5-H22
46 41 080	08B	021	5-H22
46 41 171	08B	007	5-H08
46 41 189	08B	007	5-H08
46 41 262	08B	007	5-H08
46 41 270	08B	007	5-H08
46 41 353	08B	093	5-K22
46 41 890	08B	005	5-H06
46 42 245	08B	021	5-H22
46 42 252	08B	021	5-H22
46 42 336	08B	055	5-J08
46 42 344	08B	055	5-J08
46 42 351	08B	055	5-J08
46 43 045	08B	025	5-I02
46 44 076	08B	063	5-J16
46 45 099	05	017	4-D18
46 45 107	05	017	4-D18
46 45 156	06	005	4-F06
46 45 164	06	005	4-F06
46 45 479	07	013	4-G14
46 45 578	05	015	4-D16
46 45 594	04	047	4-B24
46 46 030	05	021	4-D22
46 46 089	06	005	4-F06
46 46 196	06	019	4-F20
46 46 220	05	011	4-D12
46 46 238	05	011	4-D12
46 46 246	05	013	4-D14
46 46 451	05	011	4-D12
46 46 477	07	005	4-G06
46 46 477	07	011	4-G12
46 46 485	07	017	4-G18
46 46 485	07	021	4-G22
46 46 493	07	007	4-G08
46 46 493	07	011	4-G12
46 46 501	07	017	4-G18
46 46 501	07	019	4-G20
46 46 501	07	021	4-G22
46 46 519	07	007	4-G08
46 46 519	07	011	4-G12
46 46 527	07	019	4-G20
46 46 527	07	021	4-G22
46 46 535	07	007	4-G08
46 46 535	07	011	4-G12
46 46 543	07	019	4-G20
46 46 543	07	021	4-G22
46 46 634	07	007	4-G08
46 46 634	07	011	4-G12
46 46 642	05	009	4-D10
46 46 675	05	009	4-D10
46 46 683	05	009	4-D10
46 46 691	05	009	4-D10
46 46 832	05	021	4-D22
46 46 873	05	023	4-D24
46 46 881	05	023	4-D24
46 46 899	05	005	4-D06
46 46 899	05	023	4-D24
46 46 915	07	013	4-G14
46 46 923	05	013	4-D14
46 47 004	06	005	4-F06
46 47 012	06	005	4-F06
46 47 087	06	015	4-F16
46 47 194	05	005	4-D06
46 47 376	06	019	4-F20
46 47 392	06	019	4-F20
46 47 491	06	019	4-F20
46 47 509	07	017	4-G18
46 47 509	07	021	4-G22
46 47 517	07	017	4-G18
46 47 517	07	021	4-G22
46 47 996	05	019	4-D20
46 48 028	07	013	4-G14
46 48 036	07	013	4-G14
46 48 150	05	015	4-D16
46 48 168	05	015	4-D16
46 48 267	05	023	4-D24
46 48 275	05	023	4-D24
46 48 291	05	021	4-D22
46 48 424	07	013	4-G14
46 48 457	05	005	4-D06
46 48 457	05	023	4-D24
46 48 507	05	015	4-D16
46 48 515	05	015	4-D16
46 48 523	05	009	4-D10
46 48 556	05	015	4-D16
46 48 564	05	015	4-D16
46 48 572	05	007	4-D08
46 48 598	05	021	4-D22
46 48 606	05	021	4-D22
46 48 663	05	011	4-D12
46 48 697	06	015	4-F16
46 48 705	06	015	4-F16
46 49 745	06	021	4-F22
46 49 745	06	023	4-F24
46 49 844	05	015	4-D16
46 53 705	08B	083	5-K12
46 53 762	08B	083	5-K12
46 53 770	08B	083	5-K12
46 53 796	08B	083	5-K12
46 53 804	08B	083	5-K12
46 53 861	08B	079	5-K08
46 53 879	08B	079	5-K08
46 54 117	08B	077	5-K06
46 54 117	08B	085	5-K14
46 54 125	08B	077	5-K06
46 54 125	08B	085	5-K14
46 54 133	08B	077	5-K06
46 54 133	08B	085	5-K14
46 54 141	08B	077	5-K06
46 54 141	08B	085	5-K14
46 56 005	08B	091	5-K20
46 56 930	08B	103	5-L08
46 56 997	08B	099	5-L04
46 57 078	08B	099	5-L04
46 57 342	08B	087	5-K16
46 57 375	08B	087	5-K16
46 57 813	08D	013	6-C14
46 60 197	02	107	1-G10
46 60 205	02	107	1-G12
46 60 445	02	105	1-G10
46 60 452	03A	019	2-A20
46 60 494	02	105	1-G10
46 60 502	02	105	1-G10
46 60 544	03A	019	2-A20
46 60 551	02	091	1-F20
46 60 577	02	091	1-F20
46 60 585	02	149	1-I06
46 60 593	02	061	1-E14
46 60 809	02	059	1-E12
46 60 817	02	061	1-E14
46 61 062	02	085	1-F14
46 61 237	02	075	1-F04
46 61 302	02	061	1-E14
46 61 831	02	075	1-F04
46 61 831	02	077	1-F06
46 61 872	02	075	1-F04
46 61 880	02	075	1-F04
46 61 898	02	075	1-F04
46 61 906	02	075	1-F04
46 61 914	02	075	1-F04
46 61 922	02	075	1-F04
46 62 177	02	077	1-F06
46 62 185	02	077	1-F06
46 62 276	02	075	1-F04
46 62 276	02	077	1-F06
46 62 284	02	075	1-F04
46 62 284	02	077	1-F06
46 62 565	02	077	1-F06
46 62 896	02	103	1-G08
46 63 464	03A	113	2-E18
46 63 464	03A	127	2-F08
46 63 472	03A	113	2-E18
46 63 472	03A	127	2-F08
46 63 480	03A	087	2-D16
46 63 480	03A	101	2-E06
46 63 498	03A	087	2-D16
46 63 498	03A	101	2-E06
46 63 530	03A	069	2-C22
46 63 548	03A	069	2-C22
46 64 579	08B	063	5-J16
46 64 587	03A	075	2-D04
46 64 843	03A	123	2-F04
46 65 337	03A	123	2-F04
46 65 378	03A	107	2-E12
46 65 386	03A	107	2-E12
46 65 394	03A	107	2-E12
46 65 402	03A	107	2-E12
46 65 410	03A	107	2-E12
46 65 428	03A	107	2-E12
46 65 436	03A	107	2-E12
46 65 444	03A	107	2-E12
46 65 451	03A	109	2-E14
46 65 469	03A	109	2-E14
46 65 477	03A	109	2-E14
46 65 485	03A	109	2-E14
46 65 493	03A	109	2-E14
46 65 501	03A	109	2-E14
46 65 519	03A	109	2-E14
46 65 527	03A	109	2-E14
46 65 535	03A	123	2-F04
46 65 584	03A	123	2-F04
46 65 592	03A	123	2-F04
46 65 626	03A	071	2-C24
46 65 725	03A	111	2-E16
46 65 840	03A	161	2-G18
46 65 998	03A	119	2-E24
46 65 998	03A	121	2-F02
46 65 998	03A	133	2-F14
46 65 998	03A	135	2-F16
46 65 998	03A	147	2-G04
46 68 000	03A	125	2-F06
46 68 000	03A	139	2-F20
46 68 000	03A	151	2-G08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 –E05 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 68 018	03A	125	2-F06
46 68 018	03A	139	2-F20
46 68 026	03A	125	2-F06
46 68 026	03A	139	2-F20
46 68 034	03A	125	2-F06
46 68 034	03A	139	2-F20
46 68 547	03A	159	2-G16
46 68 588	03B	153	3-D14
46 68 588	03B	233	3-G22
46 68 596	03B	153	3-D14
46 68 596	03B	233	3-G22
46 68 604	03B	157	3-D18
46 68 604	03B	225	3-G14
46 68 604	03B	233	3-G22
46 68 604	03B	237	3-H02
46 68 810	03B	159	3-D20
46 68 810	03B	239	3-H04
46 68 869	03B	159	3-D20
46 68 869	03B	239	3-H04
46 69 081	03A	063	2-C16
46 69 180	03B	157	3-D18
46 69 180	03B	237	3-H02
46 69 537	03A	119	2-E24
46 69 537	03A	121	2-F02
46 69 669	03B	137	3-C22
46 69 669	03B	217	3-G06
46 69 743	03B	229	3-G18
46 69 891	03A	123	2-F04
46 69 909	03A	123	2-F04
46 69 917	03A	123	2-F04
46 69 925	03A	123	2-F04
46 69 933	03A	123	2-F04
46 73 208	03A	055	2-C08
46 73 224	03A	041	2-B18
46 73 257	03A	043	2-B20
46 73 331	08A	111	5-E16
46 74 214	03A	055	2-C08
46 74 222	03A	101	2-E06
46 74 222	03A	117	2-E22
46 74 230	03A	055	2-C08
46 74 248	03A	101	2-E06
46 74 248	03A	117	2-E22
46 74 248	03A	131	2-F12
46 74 248	03A	145	2-G02
46 74 792	03A	057	2-C10
46 74 800	03A	055	2-C08
46 74 859	03A	055	2-C08
46 76 631	08A	105	5-E10
46 76 755	08A	105	5-E10
46 76 763	08A	105	5-E10
46 76 789	08A	105	5-E10
46 76 797	08A	105	5-E10
46 83 140	08B	045	5-I22
46 83 140	08B	049	5-J02
46 83 157	08B	045	5-I22
46 83 157	08B	049	5-J02
46 83 181	03A	045	2-B22
46 84 528	08B	055	5-J08
46 84 874	08A	113	5-E18
46 84 882	08A	115	5-E20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 84 890	08A	113	5-E18
46 84 908	08A	117	5-E22
46 84 916	08A	115	5-E20
46 84 924	08A	113	5-E18
46 84 932	08A	115	5-E20
46 84 940	08A	119	5-E24
46 84 957	08A	119	5-E24
46 84 965	08A	119	5-E24
46 84 973	08A	121	5-F02
46 84 981	08A	119	5-E24
46 84 999	08A	117	5-E22
46 85 087	08A	133	5-F14
46 85 095	08A	029	5-B06
46 85 095	08A	035	5-B12
46 85 095	08A	039	5-B16
46 85 103	06	015	4-F16
46 85 186	04	031	4-B08
46 85 228	07	019	4-G20
46 85 228	07	021	4-G22
46 85 319	03A	037	2-B14
46 85 350	04	035	4-B12
46 85 384	03A	007	2-A08
46 85 525	02	021	1-C22
46 85 533	04	009	4-A10
46 85 608	02	113	1-G18
46 85 608	02	115	1-G20
46 85 608	02	119	1-G24
46 85 624	08A	087	5-D16
46 85 624	08A	089	5-D18
46 85 624	08A	093	5-D22
46 85 624	08A	095	5-D24
46 85 624	08A	099	5-E04
46 85 657	04	037	4-B14
46 85 806	04	041	4-B18
46 85 830	02	119	1-G24
46 85 947	02	125	1-H06
46 85 996	08A	005	5-A06
46 88 156	07	013	4-G14
46 88 156	07	015	4-G16
46 88 610	05	019	4-D20
46 89 378	07	007	4-G08
46 89 378	07	011	4-G12
46 89 923	06	005	4-F06
46 89 949	08D	015	6-C16
46 91 416	03A	119	2-E24
46 91 424	03A	119	2-E24
46 91 432	03A	119	2-E24
46 91 440	03A	119	2-E24
46 91 465	03A	123	2-F04
46 91 473	03A	119	2-E24
46 91 481	03A	119	2-E24
46 91 523	03A	119	2-E24
46 91 531	03A	119	2-E24
46 91 549	03A	121	2-F02
46 91 556	03A	121	2-F02
46 91 564	03A	123	2-F04
46 91 580	03A	123	2-F04
46 91 598	03A	123	2-F04
46 91 770	03A	123	2-F04
46 92 083	03A	123	2-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 92 091	03A	123	2-F04
46 92 778	03A	063	2-C16
46 92 786	03A	063	2-C16
46 92 794	03A	063	2-C16
46 92 802	03A	073	2-D02
46 92 851	03B	159	3-D20
46 92 851	03B	239	3-H04
46 93 081	03A	165	2-G22
46 94 352	03A	165	2-G22
46 94 584	03A	061	2-C14
46 94 634	03A	165	2-G22
46 95 011	08A	133	5-F14
46 95 029	08A	133	5-F14
46 95 136	08A	071	5-C24
46 95 144	08A	071	5-C24
46 95 151	08A	071	5-C24
46 95 276	08A	079	5-D08
46 95 557	08A	021	5-A22
46 95 565	08A	021	5-A22
46 95 631	08A	083	5-D12
46 95 649	08A	083	5-D12
46 95 714	08A	083	5-D12
46 95 722	08A	083	5-D12
46 95 870	08A	017	5-A18
46 95 870	08A	027	5-B04
46 95 870	08A	035	5-B12
46 95 870	08A	039	5-B16
46 95 961	08A	041	5-B18
46 95 979	08A	029	5-B06
46 95 979	08A	035	5-B12
46 95 979	08A	039	5-B16
46 95 987	08A	029	5-B06
46 95 987	08A	035	5-B12
46 95 987	08A	039	5-B16
46 95 995	08A	141	5-F22
46 96 001	08A	141	5-F22
46 96 019	08A	141	5-F22
46 96 027	08A	141	5-F22
46 96 092	08A	141	5-F22
46 96 175	08A	021	5-A22
46 96 175	08A	023	5-A24
46 96 175	08A	025	5-B02
46 96 225	08A	041	5-B18
46 96 233	08A	041	5-B18
46 96 241	08A	041	5-B18
46 96 274	08A	013	5-A14
46 96 290	08A	027	5-B04
46 96 308	08A	029	5-B06
46 96 316	08A	029	5-B06
46 96 324	08A	029	5-B06
46 96 332	08A	029	5-B06
46 96 456	08A	045	5-B22
46 96 464	08A	045	5-B22
46 96 571	08A	033	5-B10
46 96 571	08A	037	5-B14
46 96 811	08A	033	5-B10
46 96 811	08A	037	5-B14
46 96 829	08A	027	5-B04
46 96 829	08A	033	5-B10
46 96 829	08A	037	5-B14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 96 837	08A	027	5-B04
46 96 837	08A	033	5-B10
46 96 837	08A	037	5-B14
46 96 886	08A	033	5-B10
46 96 886	08A	037	5-B14
46 96 894	08A	033	5-B10
46 96 894	08A	037	5-B14
46 96 902	08A	033	5-B10
46 96 902	08A	037	5-B14
46 96 985	08A	035	5-B12
46 96 985	08A	039	5-B16
46 97 017	08A	035	5-B12
46 97 017	08A	039	5-B16
46 97 173	08A	013	5-A14
46 97 173	08A	015	5-A16
46 97 181	08A	013	5-A14
46 97 181	08A	015	5-A16
46 97 207	08A	023	5-A24
46 97 215	08A	023	5-A24
46 97 223	08A	027	5-B04
46 97 272	08A	027	5-B04
46 97 272	08A	033	5-B10
46 97 272	08A	037	5-B14
46 97 280	08A	033	5-B10
46 97 280	08A	037	5-B14
46 97 298	08A	033	5-B10
46 97 298	08A	037	5-B14
46 97 397	08A	101	5-E06
46 97 405	08A	101	5-E06
46 97 413	08A	011	5-A12
46 97 421	08A	011	5-A12
46 97 454	08A	021	5-A22
46 97 454	08A	023	5-A24
46 97 512	08A	027	5-B04
46 97 546	08A	015	5-A16
46 97 546	08A	019	5-A20
46 97 678	08A	079	5-D08
46 97 686	08A	079	5-D08
46 97 769	08A	133	5-F14
46 97 777	08A	133	5-F14
46 97 801	08A	133	5-F14
46 97 819	08A	133	5-F14
46 97 827	08A	045	5-B22
46 98 130	08A	027	5-B04
46 98 148	08A	029	5-B06
46 98 155	08A	029	5-B06
46 98 163	08A	029	5-B06
46 98 213	08A	027	5-B04
46 98 213	08A	033	5-B10
46 98 213	08A	037	5-B14
46 98 221	08A	027	5-B04
46 98 221	08A	033	5-B10
46 98 221	08A	037	5-B14
46 98 593	08A	077	5-D06
46 98 601	08A	077	5-D06
46 98 676	08A	045	5-B22
46 98 684	08A	045	5-B22
46 98 767	08A	137	5-F18
46 98 767	08A	139	5-F20
46 98 817	08A	079	5-D08

6 –E06 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 98 825	08A	079	5-D08
47 00 001	08A	119	5-E24
47 00 209	08A	113	5-E18
47 00 217	08A	115	5-E20
47 00 225	08A	115	5-E20
47 00 233	08A	117	5-E22
47 00 241	08A	117	5-E22
47 00 258	08A	113	5-E18
47 00 266	08A	115	5-E20
47 00 639	08B	051	5-J04
47 00 647	08B	051	5-J04
47 00 654	08B	051	5-J04
47 00 662	08B	051	5-J04
47 00 670	08B	051	5-J04
47 00 688	08B	051	5-J04
47 05 331	08B	043	5-I20
47 05 331	08B	047	5-I24
47 05 349	08B	045	5-I22
47 05 349	08B	049	5-J02
47 08 442	08B	017	5-H18
47 08 459	08B	017	5-H18
47 10 257	03A	061	2-C14
47 10 265	08D	015	6-C16
47 10 430	03A	083	2-D12
47 10 448	03A	083	2-D12
47 10 455	03A	083	2-D12
47 10 778	08A	101	5-E06
47 10 786	08A	101	5-E06
47 11 214	03A	193	2-I02
47 11 263	03A	181	2-H14
47 11 263	03A	183	2-H16
47 11 313	03A	079	2-D08
47 11 396	03A	069	2-C22
47 11 404	03A	069	2-C22
47 11 792	03A	079	2-D08
47 12 618	03A	079	2-D08
47 12 626	03A	079	2-D08
47 12 634	03A	079	2-D08
47 12 642	03A	079	2-D08
47 12 659	03A	079	2-D08
47 12 667	03A	081	2-D10
47 12 675	03A	079	2-D08
47 16 411	08B	083	5-K12
47 18 938	08B	071	5-J24
47 18 946	08B	071	5-J24
47 19 050	06	007	4-F08
47 19 084	08B	073	5-K02
47 19 084	08B	081	5-K10
47 19 092	08B	073	5-K02
47 19 092	08B	081	5-K10
47 19 100	08B	073	5-K02
47 19 100	08B	081	5-K10
47 19 118	08B	073	5-K02
47 19 118	08B	081	5-K10
47 19 126	06	007	4-F08
47 19 134	06	007	4-F08
47 19 274	08B	071	5-J24
47 19 282	08B	071	5-J24
47 19 290	08B	079	5-K08
47 19 308	08B	079	5-K08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 25 008	08D	007	6-C08
47 25 016	08D	007	6-C08
47 25 024	08D	007	6-C08
47 25 032	08D	007	6-C08
47 25 586	08D	007	6-C08
47 25 610	08D	007	6-C08
47 25 628	08D	007	6-C08
47 25 636	08D	009	6-C10
47 25 644	08D	007	6-C08
47 25 883	02	015	1-C16
47 26 592	02	063	1-E16
47 26 634	02	119	1-G24
47 26 717	08D	015	6-C16
47 26 725	08D	015	6-C16
47 26 766	02	009	1-C10
47 26 782	02	009	1-C10
47 27 038	02	065	1-E18
47 27 160	02	063	1-E16
47 27 186	02	065	1-E18
47 27 210	02	063	1-E16
47 27 236	02	065	1-E18
47 27 251	02	065	1-E18
47 27 269	02	065	1-E18
47 27 343	02	079	1-F08
47 27 350	02	079	1-F08
47 27 434	08D	011	6-C12
47 27 822	02	019	1-C20
47 27 830	02	019	1-C20
47 27 855	02	019	1-C20
47 27 863	02	123	1-H04
47 27 863	02	127	1-H08
47 27 871	02	123	1-H04
47 27 871	02	127	1-H08
47 28 051	08D	009	6-C10
47 28 093	02	065	1-E18
47 28 291	02	009	1-C10
47 28 309	02	035	1-D12
47 28 473	08D	009	6-C10
47 28 507	02	065	1-E18
47 28 515	02	065	1-E18
47 28 523	02	065	1-E18
47 28 531	02	065	1-E18
47 28 549	02	065	1-E18
47 28 663	02	113	1-G18
47 28 663	02	115	1-G20
47 28 663	02	119	1-G24
47 28 663	02	121	1-H02
47 28 846	02	067	1-E20
47 29 091	02	065	1-E18
47 29 109	02	065	1-E18
47 29 158	04	019	4-A20
47 29 158	04	051	4-C04
47 29 174	08D	007	6-C08
47 29 554	02	123	1-H04
47 29 562	02	123	1-H04
47 29 562	02	127	1-H08
47 29 570	02	123	1-H04
47 29 588	02	127	1-H08
47 29 596	02	123	1-H04
47 29 596	02	127	1-H08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 33 309	03B	207	3-F20
47 33 309	03B	287	3-J04
47 33 382	03A	061	2-C14
47 33 440	03A	067	2-C20
47 33 457	03A	067	2-C20
47 33 952	03A	063	2-C16
47 34 018	03A	009	2-A10
47 34 018	03A	011	2-A12
47 34 406	03B	137	3-C22
47 34 406	03B	217	3-G06
47 34 414	03B	137	3-C22
47 34 414	03B	217	3-G06
47 34 448	03B	097	3-B06
47 34 448	03B	177	3-E14
47 34 448	03B	257	3-H22
47 34 471	03B	097	3-B06
47 34 471	03B	177	3-E14
47 34 471	03B	257	3-H22
47 35 825	03A	165	2-G22
47 36 468	03A	137	2-F18
47 36 468	03A	149	2-G06
47 36 476	03A	137	2-F18
47 36 476	03A	149	2-G06
47 36 484	03A	137	2-F18
47 36 484	03A	149	2-G06
47 36 492	03A	137	2-F18
47 36 492	03A	149	2-G06
47 36 500	03A	137	2-F18
47 36 518	03A	137	2-F18
47 36 526	03A	137	2-F18
47 36 526	03A	149	2-G06
47 36 534	03A	137	2-F18
47 36 534	03A	149	2-G06
47 36 542	03A	137	2-F18
47 36 542	03A	149	2-G06
47 36 559	03A	137	2-F18
47 36 559	03A	149	2-G06
47 36 567	03A	137	2-F18
47 36 567	03A	149	2-G06
47 36 575	03A	137	2-F18
47 36 575	03A	149	2-G06
47 36 583	03A	137	2-F18
47 36 583	03A	149	2-G06
47 36 591	03A	137	2-F18
47 36 591	03A	149	2-G06
47 36 609	03A	137	2-F18
47 36 617	03A	137	2-F18
47 36 625	03A	137	2-F18
47 36 625	03A	149	2-G06
47 36 633	03A	137	2-F18
47 36 633	03A	149	2-G06
47 36 641	03A	137	2-F18
47 36 641	03A	149	2-G06
47 36 658	03A	137	2-F18
47 36 658	03A	149	2-G06
47 36 666	03A	137	2-F18
47 36 674	03A	137	2-F18
47 36 682	03A	137	2-F18
47 36 682	03A	149	2-G06
47 36 690	03A	137	2-F18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 36 690	03A	149	2-G06
47 36 708	03A	137	2-F18
47 36 708	03A	149	2-G06
47 36 716	03A	137	2-F18
47 36 716	03A	149	2-G06
47 36 724	03A	137	2-F18
47 36 724	03A	149	2-G06
47 36 732	03A	137	2-F18
47 36 732	03A	149	2-G06
47 36 740	03A	137	2-F18
47 36 740	03A	149	2-G06
47 36 757	03A	137	2-F18
47 36 765	03A	137	2-F18
47 36 773	03A	137	2-F18
47 36 773	03A	149	2-G06
47 36 781	03A	139	2-F20
47 36 799	03A	139	2-F20
47 36 807	03A	139	2-F20
47 36 815	03A	139	2-F20
47 36 823	03A	139	2-F20
47 36 831	03A	139	2-F20
47 36 849	03A	139	2-F20
47 36 856	03A	139	2-F20
47 36 906	03A	063	2-C16
47 36 930	03A	165	2-G22
47 36 948	03A	165	2-G22
47 37 151	03A	009	2-A10
47 37 151	03A	011	2-A12
47 37 151	03A	013	2-A14
47 37 417	03A	101	2-E06
47 37 417	03A	117	2-E22
47 37 417	03A	131	2-F12
47 37 417	03A	145	2-G02
47 37 565	03A	061	2-C14
47 37 573	03A	061	2-C14
47 37 607	03A	061	2-C14
47 37 615	03A	125	2-F06
47 37 615	03A	139	2-F20
47 37 615	03A	151	2-G08
47 37 821	03A	123	2-F04
47 37 839	03A	123	2-F04
47 37 847	03A	123	2-F04
47 37 854	03A	123	2-F04
47 37 862	03A	123	2-F04
47 37 870	03A	123	2-F04
47 37 888	03A	123	2-F04
47 38 076	03A	109	2-E14
47 38 084	03A	109	2-E14
47 38 100	03A	007	2-A08
47 38 571	03A	127	2-F08
47 38 571	03A	141	2-F22
47 38 571	03A	153	2-G10
47 38 597	03A	127	2-F08
47 38 597	03A	141	2-F22
47 38 597	03A	153	2-G10
47 38 605	03A	127	2-F08
47 38 605	03A	141	2-F22
47 38 605	03A	153	2-G10
47 38 704	03A	133	2-F14
47 38 712	03A	133	2-F14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 38 753	03A	133	2-F14
47 38 753	03A	147	2-G04
47 38 761	03A	133	2-F14
47 38 761	03A	147	2-G04
47 38 803	03A	135	2-F16
47 38 811	03A	135	2-F16
47 38 936	03A	127	2-F08
47 38 936	03A	141	2-F22
47 38 936	03A	153	2-G10
47 38 951	03A	127	2-F08
47 38 951	03A	141	2-F22
47 38 951	03A	153	2-G10
47 38 977	03A	127	2-F08
47 38 977	03A	141	2-F22
47 38 977	03A	153	2-G10
47 38 993	03A	127	2-F08
47 38 993	03A	141	2-F22
47 38 993	03A	153	2-G10
47 39 041	03A	009	2-A10
47 39 066	03A	013	2-A14
47 39 256	03A	089	2-D18
47 39 256	03A	091	2-D20
47 39 256	03A	103	2-E08
47 39 256	03A	105	2-E10
47 39 280	08D	011	6-C12
47 39 298	08D	011	6-C12
47 39 488	03A	063	2-C16
47 39 678	03A	087	2-D16
47 39 678	03A	101	2-E06
47 39 678	03A	117	2-E22
47 39 678	03A	131	2-F12
47 39 678	03A	145	2-G02
47 39 686	03A	087	2-D16
47 39 686	03A	101	2-E06
47 39 686	03A	117	2-E22
47 39 686	03A	131	2-F12
47 39 686	03A	145	2-G02
47 39 694	03A	087	2-D16
47 39 694	03A	101	2-E06
47 39 694	03A	117	2-E22
47 39 694	03A	131	2-F12
47 39 694	03A	145	2-G02
47 39 702	03A	087	2-D16
47 39 702	03A	101	2-E06
47 39 702	03A	117	2-E22
47 39 702	03A	131	2-F12
47 39 702	03A	145	2-G02
47 39 710	03A	087	2-D16
47 39 710	03A	101	2-E06
47 39 710	03A	117	2-E22
47 39 710	03A	131	2-F12
47 39 710	03A	145	2-G02
47 40 569	08B	041	5-I18
47 40 577	08B	041	5-I18
47 40 585	08B	041	5-I18
47 40 593	08B	041	5-I18
47 40 601	08B	041	5-I18
47 40 619	08B	041	5-I18
47 40 627	08B	041	5-I18
47 40 635	08B	041	5-I18
47 40 643	08B	043	5-I20
47 40 650	08B	043	5-I20
47 40 668	08B	043	5-I20
47 40 676	08B	043	5-I20
47 41 203	08B	061	5-J14
47 41 971	08A	013	5-A14
47 41 971	08A	015	5-A16
47 41 971	08A	019	5-A20
47 41 989	08B	011	5-H12
47 41 997	08B	011	5-H12
47 42 003	08B	011	5-H12
47 42 045	08B	013	5-H14
47 42 052	08B	013	5-H14
47 42 060	08B	013	5-H14
47 43 340	08B	013	5-H14
47 43 357	08B	011	5-H12
47 43 365	08B	011	5-H12
47 43 373	08B	011	5-H12
47 47 440	08B	061	5-J14
47 47 457	08B	061	5-J14
47 47 465	08B	061	5-J14
47 47 473	08B	061	5-J14
47 50 741	02	113	1-G18
47 50 741	02	115	1-G20
47 50 949	02	113	1-G18
47 50 949	02	115	1-G20
47 50 949	02	119	1-G24
47 50 949	02	121	1-H02
47 51 566	02	079	1-F08
47 52 168	02	065	1-E18
47 52 879	02	021	1-C22
47 52 887	02	021	1-C22
47 52 895	02	021	1-C22
47 52 960	02	021	1-C22
47 55 336	08C	021	6-A22
47 55 369	08C	017	6-A18
47 55 377	08C	017	6-A18
47 55 427	08C	017	6-A18
47 55 435	08C	017	6-A18
47 55 443	08C	017	6-A18
47 55 450	08C	017	6-A18
47 55 518	08C	007	6-A08
47 55 955	08C	005	6-A06
47 55 997	08C	021	6-A22
47 58 173	08C	019	6-A20
47 58 264	08D	011	6-C12
47 58 272	08C	009	6-A10
47 58 322	08C	021	6-A22
47 58 348	08C	021	6-A22
47 58 363	08C	021	6-A22
47 58 389	08C	021	6-A22
47 58 439	08C	017	6-A18
47 58 686	08C	029	6-B06
47 58 819	08C	009	6-A10
47 58 827	08C	017	6-A18
47 58 835	08C	017	6-A18
47 59 148	08C	025	6-B02
47 59 254	08C	015	6-A16
47 59 536	08C	009	6-A10
47 60 286	08B	035	5-I12
47 60 294	08B	035	5-I12
47 60 310	08B	031	5-I08
47 60 328	08B	031	5-I08
47 60 344	08B	039	5-I16
47 60 351	08B	039	5-I16
47 60 468	08B	033	5-I10
47 60 476	08B	033	5-I10
47 60 492	08B	027	5-I04
47 60 500	08B	027	5-I04
47 60 526	08B	037	5-I14
47 60 534	08B	037	5-I14
47 60 542	08B	071	5-J24
47 60 559	08B	073	5-K02
47 60 559	08B	081	5-K10
47 60 567	08B	073	5-K02
47 60 567	08B	081	5-K10
47 60 575	08B	071	5-J24
47 60 583	08B	079	5-K08
47 60 591	08B	079	5-K08
47 60 609	08B	071	5-J24
47 60 617	08B	071	5-J24
47 60 625	08B	079	5-K08
47 60 633	08B	079	5-K08
47 60 658	08B	071	5-J24
47 60 682	08B	071	5-J24
47 60 690	08B	079	5-K08
47 60 708	08B	079	5-K08
47 60 716	08B	079	5-K08
47 60 724	08B	079	5-K08
47 60 732	08B	071	5-J24
47 60 740	08B	071	5-J24
47 60 757	08B	071	5-J24
47 60 765	08B	071	5-J24
47 60 773	08B	079	5-K08
47 60 781	08B	079	5-K08
47 60 799	08B	079	5-K08
47 60 807	08B	079	5-K08
47 60 831	08B	079	5-K08
47 60 849	08B	079	5-K08
47 60 856	08B	071	5-J24
47 60 864	08B	071	5-J24
47 60 872	08B	079	5-K08
47 60 880	08B	079	5-K08
47 61 300	06	007	4-F08
47 63 074	08B	035	5-I12
47 63 082	08B	031	5-I08
47 63 090	08B	039	5-I16
47 63 165	08B	031	5-I08
47 63 173	08B	027	5-I04
47 63 181	08B	035	5-I12
47 63 256	08B	033	5-I10
47 63 264	08B	027	5-I04
47 63 272	08B	037	5-I14
47 63 447	08B	073	5-K02
47 63 447	08B	081	5-K10
47 63 454	08B	073	5-K02
47 63 454	08B	081	5-K10
47 66 465	08A	133	5-F14
47 66 572	08A	057	5-C10
47 66 572	08A	059	5-C12
47 66 580	08A	061	5-C14
47 66 622	08A	133	5-F14
47 66 630	08A	133	5-F14
47 66 812	08A	085	5-D14
47 66 812	08A	091	5-D20
47 66 820	08A	085	5-D14
47 66 820	08A	091	5-D20
47 66 838	08A	085	5-D14
47 66 838	08A	091	5-D20
47 66 846	08A	085	5-D14
47 66 846	08A	091	5-D20
47 66 853	08A	089	5-D18
47 66 861	08A	089	5-D18
47 66 895	08A	027	5-B04
47 66 895	08A	033	5-B10
47 66 895	08A	037	5-B14
47 67 398	08A	021	5-A22
47 67 406	08A	143	5-F24
47 67 455	08A	027	5-B04
47 67 455	08A	033	5-B10
47 67 455	08A	035	5-B12
47 67 455	08A	037	5-B14
47 67 489	08A	145	5-G02
47 67 513	08A	027	5-B04
47 67 729	08A	141	5-F22
47 67 737	08A	141	5-F22
47 67 745	08A	141	5-F22
47 67 752	08A	013	5-A14
47 67 752	08A	015	5-A16
47 67 752	08A	017	5-A18
47 67 752	08A	019	5-A20
47 67 752	08A	027	5-B04
47 67 752	08A	035	5-B12
47 67 752	08A	039	5-B16
47 67 786	08A	013	5-A14
47 67 950	08A	141	5-F22
47 67 968	08A	141	5-F22
47 67 976	08A	143	5-F24
47 67 984	08A	143	5-F24
47 68 644	08A	015	5-A16
47 68 644	08A	019	5-A20
47 70 004	02	033	1-D10
47 70 012	03A	017	2-A18
47 70 020	03A	019	2-A20
47 70 038	02	049	1-E02
47 70 079	03A	019	2-A20
47 70 095	02	037	1-D14
47 70 111	02	043	1-D20
47 70 137	02	017	1-C18
47 70 145	02	149	1-I06
47 70 152	02	137	1-H18
47 70 160	02	055	1-E08
47 70 178	03A	025	2-B02
47 70 178	03A	197	2-I06
47 70 186	02	051	1-E04
47 70 194	03A	025	2-B02
47 70 194	03A	197	2-I06
47 70 210	03A	019	2-A20
47 70 228	02	149	1-I06
47 70 293	02	033	1-D10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 70 301	02	033	1-D10
47 70 319	02	035	1-D12
47 70 319	02	159	1-I16
47 70 327	02	033	1-D10
47 70 343	02	033	1-D10
47 70 392	02	073	1-F02
47 70 400	02	073	1-F02
47 70 434	02	073	1-F02
47 70 442	02	073	1-F02
47 70 459	02	041	1-D18
47 70 467	02	041	1-D18
47 70 475	02	041	1-D18
47 70 483	02	041	1-D18
47 70 491	02	041	1-D18
47 70 509	02	041	1-D18
47 70 517	02	041	1-D18
47 70 525	02	041	1-D18
47 70 558	02	041	1-D18
47 70 731	02	051	1-E04
47 70 988	02	137	1-H18
47 70 996	03A	017	2-A18
47 71 085	02	041	1-D18
47 76 266	04	017	4-A18
47 78 072	05	023	4-D24
47 78 221	05	023	4-D24
47 78 239	05	023	4-D24
47 78 254	05	005	4-D06
47 78 254	05	023	4-D24
47 78 262	05	005	4-D06
47 78 262	05	023	4-D24
47 78 296	07	013	4-G14
47 78 304	07	013	4-G14
47 78 494	05	007	4-D08
47 78 528	02	097	1-G02
47 78 544	05	009	4-D10
47 78 981	05	009	4-D10
47 79 104	02	097	1-G02
47 79 104	05	011	4-D12
47 79 161	05	017	4-D18
47 79 500	05	009	4-D10
47 79 526	05	009	4-D10
47 80 151	02	091	1-F20
47 80 177	02	061	1-E14
47 80 185	02	059	1-E12
47 80 201	02	075	1-F04
47 80 276	02	077	1-F06
47 80 284	02	077	1-F06
47 80 532	02	075	1-F04
47 80 540	02	075	1-F04
47 80 557	02	075	1-F04
47 81 043	02	077	1-F06
47 81 050	02	077	1-F06
47 81 209	02	077	1-F06
47 81 225	02	077	1-F06
47 81 761	02	077	1-F06
47 81 779	02	077	1-F06
47 81 787	02	077	1-F06
47 81 795	02	077	1-F06
47 87 057	03A	055	2-C08
47 90 283	08B	021	5-H22
47 90 291	08B	021	5-H22
47 91 406	08B	093	5-K22
47 91 414	08B	093	5-K22
47 92 404	08B	019	5-H20
47 99 193	08B	035	5-I12
47 99 201	08B	031	5-I08
47 99 219	08B	039	5-I16
47 99 227	08B	031	5-I08
47 99 235	08B	027	5-I04
47 99 243	08B	035	5-I12
47 99 250	08B	033	5-I10
47 99 268	08B	027	5-I04
47 99 276	08B	037	5-I14
47 99 631	08B	077	5-K06
47 99 631	08B	085	5-K14
47 99 649	08B	077	5-K06
47 99 649	08B	085	5-K14
48 01 056	08B	075	5-K04
48 01 064	08B	075	5-K04
48 01 072	08B	075	5-K04
48 01 080	08B	075	5-K04
48 01 098	08B	075	5-K04
48 01 106	08B	075	5-K04
48 01 262	06	007	4-F08
48 01 270	06	007	4-F08
48 01 783	08B	075	5-K04
48 04 050	06	011	4-F12
48 04 324	08B	077	5-K06
48 04 324	08B	085	5-K14
48 04 332	08B	073	5-K02
48 04 332	08B	081	5-K10
48 06 428	03A	117	2-E22
48 06 428	03A	131	2-F12
48 06 428	03A	145	2-G02
48 06 626	08D	011	6-C12
48 06 634	08D	011	6-C12
48 07 657	08A	077	5-D06
48 07 657	08A	081	5-D10
48 07 673	08A	077	5-D06
48 07 673	08A	081	5-D10
48 07 822	03A	135	2-F16
48 07 830	03A	135	2-F16
48 07 855	03A	133	2-F14
48 07 855	03A	147	2-G04
48 07 863	03A	133	2-F14
48 07 863	03A	147	2-G04
48 07 889	03A	133	2-F14
48 07 889	03A	147	2-G04
48 07 897	03A	133	2-F14
48 07 897	03A	147	2-G04
48 07 939	03A	157	2-G14
48 07 947	03A	165	2-G22
48 07 954	03B	245	3-H10
48 08 176	03A	161	2-G18
48 11 048	03A	165	2-G22
48 11 360	03A	063	2-C16
48 12 954	03A	131	2-F12
48 12 954	03A	145	2-G02
48 12 970	03A	131	2-F12
48 12 988	03A	131	2-F12
48 13 028	02	065	1-E18
48 13 093	02	069	1-E22
48 14 349	03A	165	2-G22
48 18 050	08A	117	5-E22
48 18 068	08A	119	5-E24
48 18 076	08A	119	5-E24
48 18 084	08A	119	5-E24
48 18 092	08A	119	5-E24
48 18 100	08A	119	5-E24
48 18 118	08A	121	5-F02
48 18 274	08B	047	5-I24
48 18 290	08B	047	5-I24
48 18 316	08B	047	5-I24
48 18 332	08B	047	5-I24
48 18 357	08B	047	5-I24
48 18 373	08B	047	5-I24
48 18 407	08B	047	5-I24
48 18 423	08B	047	5-I24
48 18 449	08B	047	5-I24
48 18 464	08B	047	5-I24
48 18 480	08B	047	5-I24
48 18 506	08B	047	5-I24
48 18 514	08B	057	5-J10
48 18 522	08B	057	5-J10
48 18 530	08B	057	5-J10
48 18 548	08B	057	5-J10
48 18 555	08B	057	5-J10
48 18 563	08B	057	5-J10
48 18 639	08B	051	5-J04
48 18 647	08B	051	5-J04
48 18 654	08B	051	5-J04
48 18 662	08B	051	5-J04
48 18 670	08B	051	5-J04
48 18 688	08B	051	5-J04
48 18 696	08B	053	5-J06
48 18 704	08B	053	5-J06
48 18 712	08B	053	5-J06
48 18 720	08B	053	5-J06
48 18 738	08B	053	5-J06
48 18 746	08B	053	5-J06
48 21 807	08A	087	5-D16
48 21 807	08A	093	5-D22
48 21 815	08A	087	5-D16
48 21 815	08A	093	5-D22
48 22 102	08B	025	5-I02
48 22 110	08B	025	5-I02
48 22 128	08B	025	5-I02
48 22 136	08B	025	5-I02
48 22 144	08B	025	5-I02
48 23 126	08A	015	5-A16
48 23 126	08A	019	5-A20
48 23 126	08B	061	5-J14
48 24 116	08A	113	5-E18
48 24 124	08A	115	5-E20
48 24 132	08A	113	5-E18
48 24 140	08A	115	5-E20
48 24 157	08A	117	5-E22
48 24 165	08A	119	5-E24
48 30 089	08A	075	5-D04
48 30 097	08A	075	5-D04
48 30 113	03A	045	2-B22
48 30 154	08A	109	5-E14
48 30 808	08A	135	5-F16
48 30 816	03A	033	2-B10
48 30 824	03A	041	2-B18
48 30 832	03A	031	2-B08
48 31 053	03A	057	2-C10
48 35 583	05	009	4-D10
48 35 609	05	009	4-D10
48 36 342	05	021	4-D22
48 37 019	05	027	4-E04
48 37 027	05	027	4-E04
48 37 068	07	013	4-G14
48 37 233	05	023	4-D24
48 37 241	05	007	4-D08
48 37 241	05	023	4-D24
48 37 258	05	013	4-D14
48 37 712	05	015	4-D16
48 37 720	05	015	4-D16
48 38 025	05	019	4-D20
48 38 082	05	009	4-D10
48 38 090	05	009	4-D10
48 38 512	05	015	4-D16
48 38 652	05	027	4-E04
48 38 660	05	021	4-D22
48 38 660	05	027	4-E04
48 38 967	05	005	4-D06
48 38 975	05	005	4-D06
48 38 983	05	007	4-D08
48 38 991	05	007	4-D08
48 39 007	05	005	4-D06
48 39 007	05	027	4-E04
48 39 015	05	007	4-D08
48 39 015	05	027	4-E04
48 39 122	05	007	4-D08
48 39 247	05	015	4-D16
48 39 254	05	015	4-D16
48 39 312	04	009	4-A10
43 39 320	05	005	4-D06
48 39 320	05	027	4-E04
48 39 338	05	007	4-D08
48 39 338	05	027	4-E04
48 39 874	05	021	4-D22
48 39 882	05	023	4-D24
48 39 890	05	023	4-D24
48 39 924	05	005	4-D06
48 39 924	05	023	4-D24
48 40 914	08B	033	5-I10
48 40 922	08B	027	5-I04
48 40 930	08B	037	5-I14
48 40 989	08B	033	5-I10
48 40 997	08B	027	5-I04
48 41 003	08B	037	5-I14
48 41 052	08B	033	5-I10
48 41 060	08B	027	5-I04
48 41 078	08B	037	5-I14
48 41 128	08B	033	5-I10
48 41 136	08B	033	5-I10
48 41 144	08B	033	5-I10
48 41 151	08B	033	5-I10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 –E09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
48 41 169	08B	033	5-I10
48 41 177	08B	033	5-I10
48 41 185	08B	033	5-I10
48 41 219	08B	033	5-I10
48 41 227	08B	033	5-I10
48 41 250	08B	033	5-I10
48 41 268	08B	033	5-I10
48 41 276	08B	033	5-I10
48 41 284	08B	033	5-I10
48 41 292	08B	027	5-I04
48 41 300	08B	027	5-I04
48 41 318	08B	027	5-I04
48 41 326	08B	027	5-I04
48 41 334	08B	027	5-I04
48 41 342	08B	027	5-I04
48 41 375	08B	027	5-I04
48 41 383	08B	027	5-I04
48 41 433	08B	027	5-I04
48 41 441	08B	027	5-I04
48 41 458	08B	027	5-I04
48 41 466	08B	027	5-I04
48 41 474	08B	027	5-I04
48 41 482	08B	037	5-I14
48 41 490	08B	037	5-I14
48 41 508	08B	037	5-I14
48 41 516	08B	037	5-I14
48 41 524	08B	037	5-I14
48 41 532	08B	037	5-I14
48 41 565	08B	037	5-I14
48 41 573	08B	037	5-I14
48 41 623	08B	037	5-I14
48 41 631	08B	037	5-I14
48 41 649	08B	037	5-I14
48 41 656	08B	037	5-I14
48 41 664	08B	037	5-I14
48 42 860	06	011	4-F12
48 42 902	06	011	4-F12
48 42 985	06	013	4-F14
48 45 715	06	011	4-F12
48 46 879	08B	073	5-K02
48 46 887	08B	073	5-K02
48 46 937	08B	071	5-J24
48 46 945	08B	073	5-K02
48 46 978	08B	079	5-K08
48 46 986	08B	079	5-K08
48 46 994	08B	079	5-K08
48 47 000	08B	081	5-K10
48 47 794	06	007	4-F08
48 47 802	06	007	4-F08
48 47 810	06	007	4-F08
48 47 828	06	007	4-F08
48 47 869	06	007	4-F08
48 48 289	06	007	4-F08
48 48 644	06	007	4-F08
48 48 768	06	009	4-F10
48 48 990	08B	005	5-H06
48 49 014	08B	005	5-H06
48 49 337	06	013	4-F14
48 49 519	08B	099	5-L04
48 49 527	08B	099	5-L04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
48 49 543	08B	099	5-L04
48 49 550	08B	099	5-L04
48 50 517	08A	021	5-A22
48 50 517	08A	023	5-A24
48 50 590	08A	025	5-B02
48 50 608	08A	023	5-A24
48 50 608	08A	025	5-B02
48 50 616	08A	035	5-B12
48 50 616	08A	037	5-B14
48 50 624	08A	035	5-B12
48 50 624	08A	039	5-B16
48 50 640	08A	021	5-A22
48 50 640	08A	023	5-A24
48 50 707	08A	035	5-B12
48 50 707	08A	037	5-B14
48 50 715	08A	035	5-B12
48 50 715	08A	039	5-B16
48 50 731	08A	015	5-A16
48 50 731	08A	019	5-A20
48 50 731	08A	023	5-A24
48 50 731	08A	025	5-B02
48 50 749	08A	033	5-B10
48 50 749	08A	037	5-B14
48 50 756	08A	033	5-B10
48 50 756	08A	037	5-B14
48 50 764	08A	033	5-B10
48 50 772	08A	027	5-B04
48 50 780	08A	033	5-B10
48 50 780	08A	037	5-B14
48 50 798	08A	033	5-B10
48 50 798	08A	037	5-B14
48 50 806	08A	033	5-B10
48 50 806	08A	037	5-B14
48 50 814	08A	033	5-B10
48 50 814	08A	037	5-B14
48 50 822	08A	033	5-B10
48 50 822	08A	037	5-B14
48 50 830	08A	017	5-A18
48 50 830	08A	019	5-A20
48 50 848	08A	023	5-A24
48 50 848	08A	033	5-B10
48 50 970	08A	095	5-D24
48 51 622	08A	045	5-B22
48 51 630	08A	045	5-B22
48 51 648	08A	045	5-B22
48 51 655	08A	045	5-B22
48 51 663	08A	045	5-B22
48 51 671	08A	045	5-B22
48 51 713	08A	099	5-E04
48 51 721	08A	099	5-E04
48 51 796	08A	027	5-B04
48 51 796	08A	033	5-B10
48 51 796	08A	037	5-B14
48 51 929	08A	095	5-D24
48 52 018	08A	047	5-B24
48 52 430	08A	015	5-A16
48 52 430	08A	019	5-A20
48 52 448	08A	015	5-A16
48 52 448	08A	019	5-A20
48 52 596	08A	085	5-D14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
48 52 596	08A	091	5-D20
48 52 604	08A	085	5-D14
48 52 604	08A	091	5-D20
48 52 620	08A	085	5-D14
48 52 620	08A	091	5-D20
48 52 638	08A	085	5-D14
48 52 638	08A	091	5-D20
48 53 263	08A	013	5-A14
48 53 263	08A	015	5-A16
48 53 263	08A	019	5-A20
48 53 297	08A	127	5-F08
48 53 305	08A	127	5-F08
48 53 750	08A	071	5-C24
48 53 768	08A	141	5-F22
48 54 097	08A	071	5-C24
48 54 352	08A	141	5-F22
48 55 342	08A	085	5-D14
48 55 979	08A	093	5-D22
48 56 050	03A	071	2-C24
48 56 837	08A	045	5-B22
48 56 860	08A	019	5-A20
48 56 878	08A	019	5-A20
48 56 878	08A	023	5-A24
48 56 878	08A	025	5-B02
48 56 936	08A	025	5-B02
48 56 977	08A	019	5-A20
48 56 985	08A	019	5-A20
48 56 993	08A	025	5-B02
48 56 993	08A	027	5-B04
48 56 993	08A	033	5-B10
48 56 993	08A	037	5-B14
48 57 173	08A	025	5-B02
48 57 173	08A	037	5-B14
48 57 181	08A	025	5-B02
48 57 199	08A	025	5-B02
48 57 249	08A	039	5-B16
48 57 256	08A	029	5-B06
48 57 256	08A	035	5-B12
48 57 256	08A	039	5-B16
48 57 264	08A	029	5-B06
48 57 264	08A	035	5-B12
48 57 264	08A	039	5-B16
48 57 645	08A	033	5-B10
48 57 645	08A	037	5-B14
48 57 694	08A	077	5-D06
48 57 702	08A	077	5-D06
48 57 710	08A	081	5-D10
48 57 728	08A	081	5-D10
48 57 736	08A	083	5-D12
48 57 744	08A	083	5-D12
48 58 072	08A	011	5-A12
48 58 080	08A	011	5-A12
48 58 437	08A	137	5-F18
48 58 445	08A	137	5-F18
48 58 452	08A	139	5-F20
48 58 460	08A	139	5-F20
48 58 460	08A	145	5-G02
48 58 577	08A	085	5-D14
48 58 577	08A	091	5-D20
48 58 585	08A	085	5-D14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
48 58 585	08A	091	5-D20
48 58 593	08A	085	5-D14
48 58 593	08A	091	5-D20
48 58 601	08A	085	5-D14
48 58 601	08A	091	5-D20
48 58 767	08A	045	5-B22
48 59 252	08A	041	5-B18
48 59 260	08A	041	5-B18
48 59 419	08A	041	5-B18
48 59 765	08A	027	5-B04
48 59 765	08A	033	5-B10
48 59 765	08A	037	5-B14
48 59 773	08A	025	5-B02
48 59 781	08A	033	5-B10
48 59 781	08A	037	5-B14
48 59 799	08A	033	5-B10
48 59 799	08A	037	5-B14
48 65 028	08A	075	5-D04
48 65 051	08A	053	5-C06
48 65 069	08A	053	5-C06
48 67 008	08C	031	6-B08
48 67 016	08C	031	6-B08
48 67 040	08C	005	6-A06
48 67 057	08C	005	6-A06
48 67 289	08C	007	6-A08
48 67 941	08C	017	6-A18
48 67 958	08C	017	6-A18
48 68 436	08C	005	6-A06
48 68 444	08C	005	6-A06
48 68 600	08C	027	6-B04
48 70 333	03A	083	2-D12
48 72 693	03A	069	2-C22
48 76 009	02	121	1-H02
48 76 025	02	065	1-E18
48 76 207	02	123	1-H04
48 76 215	02	123	1-H04
48 76 223	02	123	1-H04
48 76 256	02	123	1-H04
48 76 280	02	127	1-H08
48 76 298	02	127	1-H08
48 76 306	02	127	1-H08
48 76 330	02	127	1-H08
48 76 413	02	123	1-H04
48 76 470	02	123	1-H04
48 76 504	02	127	1-H08
48 76 561	02	127	1-H08
48 76 595	02	123	1-H04
48 76 603	02	123	1-H04
48 76 603	02	127	1-H08
48 77 015	02	133	1-H14
48 78 112	08D	007	6-C08
48 78 120	08D	007	6-C08
48 78 138	08D	007	6-C08
48 78 682	02	113	1-G18
48 78 690	02	113	1-G18
48 79 078	08D	009	6-C10
48 79 458	08D	007	6-C08
48 79 466	08D	007	6-C08
48 79 474	08D	007	6-C08
48 79 482	08D	007	6-C08

6 –E10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
48 79 490	08D	007	6-C08
48 80 217	08D	005	6-C06
48 82 866	08B	055	5-J08
48 82 874	08B	055	5-J08
48 82 882	08B	055	5-J08
48 82 890	08B	055	5-J08
48 82 908	08B	055	5-J08
48 82 916	08B	055	5-J08
48 84 573	08B	017	5-H18
48 84 581	08B	017	5-H18
48 84 912	08B	047	5-I24
48 84 920	08B	047	5-I24
48 84 938	08B	047	5-I24
48 84 946	08B	047	5-I24
48 84 979	08B	057	5-J10
48 84 987	08B	057	5-J10
48 84 995	08B	051	5-J04
48 85 000	08B	051	5-J04
48 85 018	08B	053	5-J06
48 85 026	08B	053	5-J06
48 85 034	08B	047	5-I24
48 85 042	08B	047	5-I24
48 85 059	08B	047	5-I24
48 85 067	08B	047	5-I24
48 85 091	08B	057	5-J10
48 85 109	08B	057	5-J10
48 85 117	08B	051	5-J04
48 85 125	08B	051	5-J04
48 85 133	08B	053	5-J06
48 85 141	08B	053	5-J06
48 87 485	08B	021	5-H22
48 87 709	08A	089	5-D18
48 87 717	08A	089	5-D18
48 88 186	08A	121	5-F02
48 88 194	08A	121	5-F02
48 88 418	08B	033	5-I10
48 88 426	08B	027	5-I04
48 88 434	08B	037	5-I14
48 88 459	08B	033	5-I10
48 88 467	08B	027	5-I04
48 88 475	08B	037	5-I14
48 88 574	08B	095	5-K24
48 88 749	08B	017	5-H18
48 88 939	08B	021	5-H22
48 88 947	08B	021	5-H22
48 99 811	02	079	1-F08
49 00 007	08D	011	6-C12
49 00 213	08B	013	5-H14
49 00 221	08B	013	5-H14
49 00 247	08B	053	5-J06
49 00 254	08B	053	5-J06
49 00 262	08B	053	5-J06
49 00 270	08B	053	5-J06
49 00 288	08B	053	5-J06
49 00 296	08B	053	5-J06
49 00 759	08B	081	5-K10
49 00 908	08B	073	5-K02
49 00 916	08B	073	5-K02
49 00 965	03A	045	2-B22
49 00 999	08B	101	5-L06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
49 01 013	08B	093	5-K22
49 01 021	08B	093	5-K22
49 01 047	08B	093	5-K22
49 01 062	07	021	4-G22
49 01 070	07	021	4-G22
49 01 088	08B	093	5-K22
49 01 096	08B	093	5-K22
49 01 104	06	023	4-F24
49 01 153	08A	033	5-B10
49 01 153	08A	037	5-B14
49 01 229	08C	019	6-A20
49 01 286	08B	011	5-H12
49 01 294	08B	011	5-H12
49 01 302	08B	011	5-H12
49 01 310	08B	013	5-H14
49 01 328	08B	013	5-H14
49 01 336	08B	013	5-H14
49 01 344	08B	073	5-K02
49 01 351	08B	073	5-K02
49 01 385	08A	033	5-B10
49 01 385	08A	037	5-B14
49 01 393	08A	027	5-B04
49 01 393	08A	033	5-B10
49 01 393	08A	037	5-B14
49 01 484	08B	013	5-H14
49 01 492	08B	013	5-H14
49 01 740	04	009	4-A10
49 02 011	08B	097	5-L02
49 02 029	08B	097	5-L02
49 02 227	02	107	1-G12
49 02 235	02	107	1-G12
49 02 268	08B	063	5-J16
49 02 292	06	013	4-F14
49 02 300	02	087	1-F16
49 03 316	08B	093	5-K22
49 03 324	08B	093	5-K22
49 05 535	06	015	4-F16
49 05 543	06	015	4-F16
49 05 550	06	015	4-F16
49 05 626	07	013	4-G14
49 06 657	05	017	4-D18
49 07 572	05	013	4-D14
49 07 580	05	013	4-D14
49 07 663	07	007	4-G08
49 07 663	07	011	4-G12
49 07 671	05	013	4-D14
49 07 689	05	013	4-D14
49 07 697	05	009	4-D10
49 08 067	07	013	4-G14
49 08 497	05	007	4-D08
49 08 497	05	025	4-E02
49 08 505	05	025	4-E02
49 08 513	05	025	4-E02
49 09 156	07	013	4-G14
49 14 594	08A	105	5-E10
49 14 826	08A	147	5-G04
49 14 834	08A	149	5-G06
49 21 334	08A	063	5-C16
49 21 342	08A	063	5-C16
49 22 175	08A	067	5-C20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
49 22 183	08A	067	5-C20
49 25 392	04	055	4-C08
49 25 400	04	055	4-C08
49 25 418	04	055	4-C08
49 25 426	04	057	4-C10
49 25 434	04	055	4-C08
49 25 442	04	055	4-C08
49 25 459	04	057	4-C10
49 25 491	04	011	4-A12
49 25 509	04	055	4-C08
49 25 517	04	055	4-C08
49 25 525	04	049	4-C02
49 26 457	04	047	4-B24
49 26 473	04	047	4-B24
49 29 311	03A	063	2-C16
49 29 618	03A	145	2-G02
49 29 956	03A	151	2-G08
49 29 964	03A	151	2-G08
49 29 972	03A	151	2-G08
49 29 980	03A	151	2-G08
49 29 998	03A	151	2-G08
49 30 434	08B	017	5-H18
49 30 442	08B	017	5-H18
49 30 459	08B	017	5-H18
49 30 467	08B	017	5-H18
49 30 582	08B	071	5-J24
49 30 590	08B	071	5-J24
49 30 616	08B	071	5-J24
49 30 632	08B	071	5-J24
49 30 640	08B	071	5-J24
49 30 665	08B	071	5-J24
49 32 018	08A	117	5-E22
49 32 026	08A	117	5-E22
49 32 034	08A	117	5-E22
49 32 042	08A	117	5-E22
49 33 065	08B	075	5-K04
49 33 073	08B	075	5-K04
49 33 677	08B	023	5-H24
49 35 607	08B	035	5-I12
49 35 615	08B	035	5-I12
49 35 623	08B	031	5-I08
49 35 631	08B	031	5-I08
49 35 649	08B	039	5-I16
49 35 656	08B	039	5-I16
49 35 722	08B	033	5-I10
49 35 730	08B	033	5-I10
49 35 748	08B	029	5-I06
49 35 755	08B	029	5-I06
49 35 763	08B	039	5-I16
49 35 771	08B	039	5-I16
49 36 084	08B	095	5-K24
49 36 282	08B	075	5-K04
49 36 290	08B	075	5-K04
49 40 029	02	063	1-E16
49 40 037	03A	081	2-D10
49 40 169	04	017	4-A18
49 40 169	04	063	4-C16
49 40 318	02	125	1-H06
49 40 326	02	125	1-H06
49 40 466	02	011	1-C12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
49 40 631	02	065	1-E18
49 40 896	02	063	1-E16
49 41 001	03A	151	2-G08
49 41 019	03A	151	2-G08
49 41 027	03A	151	2-G08
49 41 043	03A	151	2-G08
49 41 050	03A	151	2-G08
49 41 076	03A	151	2-G08
49 41 084	03A	151	2-G08
49 41 092	03A	151	2-G08
49 41 621	03A	165	2-G22
49 41 993	03A	131	2-F12
49 41 993	03A	145	2-G02
49 42 538	02	079	1-F08
49 43 544	03A	071	2-C24
49 46 158	03A	005	2-A06
49 46 166	03A	005	2-A06
49 46 174	03A	005	2-A06
49 46 182	03A	005	2-A06
49 46 307	04	043	4-B20
49 47 099	03A	069	2-C22
49 47 149	03A	073	2-D02
49 47 529	03A	007	2-A08
49 53 089	08A	147	5-G04
49 53 097	08A	149	5-G06
49 53 147	08A	147	5-G04
49 53 154	08A	149	5-G06
49 57 411	03A	041	2-B18
49 57 429	03A	039	2-B16
49 57 437	03A	039	2-B16
49 57 445	03A	041	2-B18
49 57 452	03A	041	2-B18
49 57 460	03A	041	2-B18
49 59 698	03A	051	2-C04
49 59 698	03A	197	2-I06
49 60 290	02	021	1-C22
49 60 936	02	113	1-G18
49 60 936	02	115	1-G20
49 60 936	02	119	1-G24
49 60 951	02	063	1-E16
49 60 969	02	063	1-E16
49 60 985	02	063	1-E16
49 61 561	02	065	1-E18
49 61 702	02	065	1-E18
50 00 088	08B	047	5-I24
50 00 096	08B	047	5-I24
50 00 104	08B	023	5-H24
50 00 112	08B	047	5-I24
50 00 120	08B	047	5-I24
50 00 138	08B	047	5-I24
50 00 146	08B	047	5-I24
50 00 419	08B	047	5-I24
50 00 427	08B	047	5-I24
50 00 435	08B	047	5-I24
50 00 443	08B	047	5-I24
50 00 526	08D	005	6-C06
50 10 053	06	023	4-F24
50 10 053	08D	009	6-C10
50 10 061	06	023	4-F24
50 10 061	08D	009	6-C10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 –E11 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
50 10 079	06	023	4-F24
50 10 079	08D	009	6-C10
50 10 087	06	023	4-F24
50 10 087	08D	009	6-C10
50 10 103	08D	013	6-C14
50 10 111	08D	013	6-C14
50 10 129	08D	017	6-C18
50 10 194	06	011	4-F12
50 10 202	08D	013	6-C14
50 10 210	08D	013	6-C14
50 10 228	06	023	4-F24
50 10 236	06	023	4-F24
50 10 244	06	023	4-F24
50 10 400	06	011	4-F12
50 11 465	08D	017	6-C18
50 11 705	06	007	4-F08
50 11 762	06	007	4-F08
50 12 075	08B	005	5-H06
50 12 083	08B	005	5-H06
50 35 944	03A	081	2-D10
50 35 951	03A	081	2-D10
50 35 969	03A	081	2-D10
50 37 023	03A	081	2-D10
50 38 047	03A	075	2-D04
69 11 804	08A	139	5-F20
69 11 895	08A	105	5-E10
69 15 706	08A	105	5-E10
69 21 142	08A	147	5-G04
69 36 371	08A	133	5-F14
69 36 389	08A	133	5-F14
69 36 397	08A	133	5-F14
69 52 014	08A	021	5-A22
69 52 014	08A	023	5-A24
69 56 684	08D	015	6-C16
69 92 028	08A	123	5-F04
69 92 028	08A	159	5-G16
69 92 325	08A	149	5-G06
70 35 801	06	013	4-F14
70 61 328	04	017	4-A18
70 61 328	06	013	4-F14
70 61 328	08A	099	5-E04
70 61 328	08B	007	5-H08
70 84 197	03A	041	2-B18
70 84 197	03A	045	2-B22
71 08 491	03A	163	2-G20
71 16 452	03A	165	2-G22
71 17 880	03B	297	3-J14
71 17 880	03B	301	3-J18
71 17 880	03B	307	3-J24
71 17 880	03B	313	3-K06
71 21 239	03A	159	2-G16
71 54 719	03A	041	2-B18
71 55 211	03B	297	3-J14
71 55 211	03B	301	3-J18
71 55 211	03B	307	3-J24
71 55 211	03B	313	3-K06
71 55 229	03B	297	3-J14
71 55 229	03B	301	3-J18
71 55 229	03B	307	3-J24
71 55 229	03B	313	3-K06
71 55 237	03B	297	3-J14
71 55 237	03B	301	3-J18
71 55 237	03B	307	3-J24
71 55 237	03B	313	3-K06
71 55 658	03B	297	3-J14
71 55 658	03B	301	3-J18
71 55 658	03B	307	3-J24
71 55 658	03B	313	3-K06
71 56 409	02	107	1-G12
71 56 409	03A	083	2-D12
71 56 409	03A	161	2-G18
71 56 409	03A	163	2-G20
71 56 409	08C	013	6-A14
71 56 409	08C	019	6-A20
71 62 308	08A	069	5-C22
72 68 972	08C	029	6-B06
73 11 764	03A	011	2-A12
73 11 764	03A	013	2-A14
73 11 772	08A	133	5-F14
73 52 651	04	011	4-A12
73 73 269	08A	107	5-E12
73 73 269	08A	109	5-E14
73 81 015	08B	045	5-I22
73 81 015	08B	049	5-J02
73 81 015	08B	059	5-J12
73 98 373	02	099	1-G04
73 98 373	05	013	4-D14
73 98 407	02	153	1-I10
73 98 423	08A	125	5-F06
73 98 423	08A	129	5-F10
73 98 423	08A	131	5-F12
73 98 456	02	099	1-G04
73 98 464	02	141	1-H22
73 98 464	02	151	1-I08
73 98 530	02	129	1-H10
73 98 803	02	105	1-G10
73 98 886	08A	095	5-D24
73 98 886	08A	099	5-E04
73 98 977	02	099	1-G04
73 98 977	02	153	1-I10
73 98 977	03A	023	2-A24
73 98 977	03A	157	2-G14
73 99 330	06	013	4-F14
73 99 348	02	099	1-G04
73 99 454	02	135	1-H16
73 99 454	08A	061	5-C14
73 99 454	08A	095	5-D24
73 99 454	08A	099	5-E04
73 99 652	04	013	4-A14
73 99 793	08B	103	5-L08
73 99 884	08A	147	5-G04
74 80 643	02	029	1-D06
74 80 684	02	029	1-D06
74 81 740	02	029	1-D06
74 85 105	02	025	1-D02
74 85 576	02	155	1-I12
74 86 806	02	125	1-H06
74 95 005	08C	011	6-A12
74 95 021	08C	011	6-A12
74 95 047	08C	011	6-A12
74 95 047	08C	017	6-A18
74 95 054	08C	011	6-A12
74 95 054	08C	017	6-A18
74 95 062	08C	011	6-A12
74 95 062	08C	017	6-A18
74 95 070	08C	011	6-A12
74 95 070	08C	017	6-A18
74 95 088	08C	013	6-A14
74 95 096	08C	013	6-A14
74 95 104	08C	013	6-A14
74 95 112	08C	029	6-B06
74 95 120	08C	029	6-B06
74 95 187	08B	007	5-H08
74 95 195	08B	007	5-H08
74 95 286	08C	005	6-A06
74 95 294	08C	005	6-A06
74 95 419	08C	013	6-A14
74 95 609	08C	017	6-A18
74 95 617	08C	017	6-A18
74 95 625	08C	017	6-A18
74 95 633	08C	017	6-A18
74 95 641	08C	017	6-A18
74 95 708	08B	007	5-H08
74 95 716	08B	007	5-H08
74 95 773	08C	019	6-A20
74 95 781	08C	019	6-A20
74 95 799	08C	019	6-A20
74 95 856	08C	015	6-A16
74 96 243	02	159	1-I16
74 96 250	02	049	1-E02
74 96 250	02	159	1-I16
74 96 268	02	033	1-D10
74 96 268	02	043	1-D20
74 96 268	02	049	1-E02
74 96 268	02	051	1-E04
74 96 268	02	083	1-F12
74 96 284	02	149	1-I06
74 96 292	02	031	1-D08
74 96 292	02	045	1-D22
74 97 001	08A	153	5-G10
74 97 019	08A	151	5-G08
74 97 019	08A	155	5-G12
74 97 035	08A	123	5-F04
74 97 035	08A	159	5-G16
74 97 076	08A	123	5-F04
74 97 076	08A	159	5-G16
74 97 126	08A	155	5-G12
74 97 183	08A	123	5-F04
74 97 183	08A	159	5-G16
74 97 191	08A	151	5-G08
74 97 225	08A	155	5-G12
74 97 365	08A	155	5-G12
74 97 373	08A	103	5-E08
74 97 381	08A	103	5-E08
74 97 399	08A	103	5-E08
74 97 415	08A	155	5-G12
74 97 423	08A	155	5-G12
74 97 464	08A	155	5-G12
74 97 506	08A	021	5-A22
74 97 514	08A	155	5-G12
74 97 522	08A	155	5-G12
74 97 530	08A	155	5-G12
74 97 605	08A	023	5-A24
74 97 613	08A	023	5-A24
74 97 670	08A	015	5-A16
74 97 670	08A	019	5-A20
74 97 688	08A	015	5-A16
74 97 688	08A	019	5-A20
74 97 704	08A	015	5-A16
74 97 704	08A	019	5-A20
74 97 753	08A	155	5-G12
74 97 761	08A	155	5-G12
74 97 779	08A	155	5-G12
74 97 787	08A	155	5-G12
74 97 795	08A	155	5-G12
74 97 803	08A	017	5-A18
74 97 936	08A	021	5-A22
74 97 936	08A	023	5-A24
74 97 936	08A	025	5-B02
74 97 944	08A	021	5-A22
74 97 944	08A	023	5-A24
74 97 944	08A	025	5-B02
75 00 713	02	011	1-C12
75 01 349	02	011	1-C12
75 02 263	02	057	1-E10
75 04 178	02	011	1-C12
75 04 525	03A	023	2-A24
75 04 566	02	011	1-C12
75 05 134	02	011	1-C12
75 08 690	02	023	1-C24
75 08 955	02	025	1-D02
75 11 751	02	065	1-E18
75 15 190	02	053	1-E06
75 15 547	02	011	1-C12
75 15 588	02	159	1-I16
75 19 143	02	011	1-C12
75 19 432	02	115	1-G20
75 20 372	02	047	1-D24
75 21 313	02	053	1-E06
75 26 288	02	135	1-H16
75 26 650	02	067	1-E20
75 27 732	03A	015	2-A16
75 27 732	03A	017	2-A18
75 27 757	03A	015	2-A16
75 27 765	03A	015	2-A16
75 27 807	03A	015	2-A16
75 27 807	03A	017	2-A18
75 27 872	03A	015	2-A16
75 27 880	03A	015	2-A16
75 33 136	08C	029	6-B06
75 35 255	03A	015	2-A16
75 35 271	03A	015	2-A16
75 35 297	03A	015	2-A16
75 35 305	03A	015	2-A16
75 35 313	03A	015	2-A16
75 35 321	03A	015	2-A16
75 35 339	03A	015	2-A16
75 36 501	03A	159	2-G16
75 39 349	02	079	1-F08
75 39 984	02	099	1-G04

6 –E12 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 39 984	02	125	1-H06
75 39 984	02	127	1-H08
75 39 984	02	151	1-I08
75 41 907	04	041	4-B18
75 43 762	02	135	1-H16
75 44 356	02	135	1-H16
75 54 215	02	109	1-G14
75 54 215	02	115	1-G20
75 54 553	04	037	4-B14
75 59 768	02	141	1-H22
75 59 875	04	037	4-B14
75 68 934	02	029	1-D06
75 68 942	02	029	1-D06
75 77 729	04	037	4-B14
75 83 628	02	053	1-E06
75 85 052	02	015	1-C16
75 85 086	02	023	1-C24
75 85 540	03A	023	2-A24
75 85 847	02	011	1-C12
75 86 019	02	091	1-F20
75 86 050	02	057	1-E10
75 88 320	02	011	1-C12
75 88 684	02	015	1-C16
75 88 783	02	029	1-D06
75 93 072	06	019	4-F20
75 93 080	03A	009	2-A10
75 93 080	03A	011	2-A12
75 93 080	04	047	4-B24
75 93 221	03A	157	2-G14
75 93 221	05	011	4-D12
75 93 221	05	013	4-D14
75 93 221	06	017	4-F18
75 93 221	06	021	4-F22
78 20 228	08A	151	5-G08
78 20 244	08A	151	5-G08
78 29 617	03B	297	3-J14
78 29 617	03B	301	3-J18
78 29 617	03B	307	3-J24
78 29 617	03B	313	3-K06
78 29 666	03B	297	3-J14
78 29 666	03B	301	3-J18
78 29 666	03B	307	3-J24
78 29 666	03B	313	3-K06
78 29 674	03B	297	3-J14
78 29 674	03B	301	3-J18
78 29 674	03B	307	3-J24
78 29 674	03B	313	3-K06
79 16 497	07	007	4-G08
79 16 497	07	011	4-G12
79 16 497	08A	075	5-D04
79 18 469	08A	045	5-B22
79 18 584	04	035	4-B12
79 19 483	08A	073	5-D02
79 22 271	03A	041	2-B18
79 22 354	02	077	1-F06
79 22 354	03A	071	2-C24
79 22 354	03A	079	2-D08
79 22 354	03A	159	2-G16
79 22 354	08A	041	5-B18
79 22 354	08A	071	5-C24
79 22 354	08B	073	5-K02
79 22 354	08B	075	5-K04
79 22 354	08B	083	5-K12
79 22 362	03A	061	2-C14
79 22 370	03A	021	2-A22
79 22 370	03A	159	2-G16
79 22 370	08B	093	5-K22
79 22 370	08C	029	6-B06
79 22 396	03A	187	2-H20
79 22 396	03A	189	2-H22
79 22 396	03A	193	2-I02
79 22 396	08A	095	5-D24
79 22 438	03A	081	2-D10
79 22 438	08A	147	5-G04
79 22 495	03A	079	2-D08
79 22 503	03A	079	2-D08
79 22 537	02	067	1-E20
79 22 636	03A	037	2-B14
79 33 856	07	023	4-G24
79 33 856	07	025	4-H02
79 36 016	08A	095	5-D24
79 36 016	08A	099	5-E04
79 49 548	02	015	1-C16
79 49 548	02	027	1-D04
79 49 712	04	005	4-A06
79 50 033	02	015	1-C16
79 50 066	02	015	1-C16
79 51 783	03A	081	2-D10
79 56 154	04	043	4-B20
79 56 220	04	037	4-B14
79 59 349	03B	297	3-J14
79 59 349	03B	301	3-J18
79 59 349	03B	307	3-J24
79 59 349	03B	313	3-K06
79 61 345	03A	055	2-C08
79 63 887	04	011	4-A12
79 63 937	08B	093	5-K22
79 65 767	02	093	1-F22
79 65 767	04	009	4-A10
79 65 767	05	019	4-D20
79 65 767	08A	025	5-B02
79 65 767	08A	037	5-B14
79 65 775	03A	075	2-D04
79 65 775	08A	045	5-B22
79 67 573	04	029	4-B06
79 67 771	02	063	1-E16
79 67 771	03A	045	2-B22
79 67 771	08B	019	5-H20
79 67 912	04	037	4-B14
79 67 938	02	103	1-G08
79 67 938	04	005	4-A06
79 67 979	08A	149	5-G06
79 67 995	03A	055	2-C08
79 67 995	03A	159	2-G16
79 67 995	03A	165	2-G22
79 67 995	08A	071	5-C24
79 67 995	08A	075	5-D04
79 67 995	08A	111	5-E16
79 67 995	08B	019	5-H20
79 68 001	03A	055	2-C08
79 68 001	08B	005	5-H06
79 68 001	08B	009	5-H10
79 68 001	08B	017	5-H18
79 68 001	08B	061	5-J14
79 68 001	08C	023	6-A24
79 68 076	08A	045	5-B22
79 68 084	08A	149	5-G06
79 68 084	08B	093	5-K22
79 68 316	03A	029	2-B06
79 68 472	08A	047	5-B24
79 69 306	02	009	1-C10
79 69 371	06	019	4-F20
79 69 405	03A	005	2-A06
79 69 405	03A	007	2-A08
79 70 015	02	011	1-C12
79 70 015	02	081	1-F10
79 70 015	02	147	1-I04
79 70 031	02	055	1-E08
79 70 049	02	125	1-H06
79 70 049	02	127	1-H08
79 70 049	06	019	4-F20
79 70 056	02	129	1-H10
79 70 056	06	019	4-F20
79 70 064	02	125	1-H06
79 70 064	02	127	1-H08
79 70 072	02	099	1-G04
79 70 072	02	125	1-H06
79 70 072	02	127	1-H08
79 70 072	06	019	4-F20
79 70 080	02	089	1-F18
79 70 080	02	091	1-F20
79 70 098	02	089	1-F18
79 70 098	02	125	1-H06
79 70 098	02	153	1-I10
79 70 106	02	125	1-H06
79 70 106	02	129	1-H10
79 70 114	02	129	1-H10
79 70 122	02	125	1-H06
79 70 122	02	129	1-H10
79 70 130	02	135	1-H16
79 70 148	02	135	1-H16
79 70 148	02	153	1-I10
79 70 155	02	059	1-E12
79 70 163	02	061	1-E14
79 70 304	03A	079	2-D08
79 70 304	08B	097	5-L02
79 70 536	03A	061	2-C14
79 70 536	03A	159	2-G16
79 70 536	03A	165	2-G22
79 70 536	03A	169	2-H02
79 70 536	03A	171	2-H04
79 70 536	03A	173	2-H06
79 70 536	03A	175	2-H08
79 70 536	03A	177	2-H10
79 70 536	03A	181	2-H14
79 70 536	03A	183	2-H16
79 70 536	03B	245	3-H10
79 70 536	08A	149	5-G06
79 70 536	08B	005	5-H06
79 70 536	08B	067	5-J20
79 70 536	08C	023	6-A24
79 70 577	08B	073	5-K02
79 70 601	03A	071	2-C24
79 70 601	08A	111	5-E16
79 70 601	08A	147	5-G04
79 71 112	03A	015	2-A16
79 71 294	02	023	1-C24
79 71 294	02	047	1-D24
79 71 294	02	071	1-E24
79 71 294	02	111	1-G16
79 71 294	02	113	1-G18
79 71 294	02	143	1-H24
79 71 294	03A	019	2-A20
79 71 294	03A	029	2-B06
79 71 294	03A	069	2-C22
79 71 294	03A	159	2-G16
79 71 393	08C	005	6-A06
79 71 393	08C	011	6-A12
79 71 393	08C	017	6-A18
79 71 732	08A	101	5-E06
79 71 823	03A	061	2-C14
79 71 864	03A	157	2-G14
79 71 864	08C	005	6-A06
79 71 872	02	011	1-C12
79 71 872	02	071	1-E24
79 71 872	03A	157	2-G14
79 71 880	02	105	1-G10
79 71 880	02	107	1-G12
79 71 880	02	151	1-I08
79 71 880	03A	157	2-G14
79 71 880	04	011	4-A12
79 71 880	04	053	4-C06
79 71 880	04	061	4-C14
79 71 880	05	017	4-D18
79 71 880	06	017	4-F18
79 71 880	06	021	4-F22
79 71 880	06	023	4-F24
79 71 922	02	063	1-E16
79 71 922	04	009	4-A10
79 71 922	05	011	4-D12
79 71 922	05	019	4-D20
79 71 922	05	021	4-D22
79 71 922	06	007	4-F08
79 71 922	06	013	4-F14
79 71 922	06	017	4-F18
79 72 441	03A	005	2-A06
79 72 466	02	143	1-H24
79 72 466	06	013	4-F14
79 72 466	08A	045	5-B22
79 72 490	02	075	1-F04
79 72 490	02	077	1-F06
79 72 490	04	037	4-B14
79 72 490	04	043	4-B20
79 72 490	08B	099	5-L04
79 72 490	08D	011	6-C12
79 72 516	02	099	1-G04
79 72 516	08A	029	5-B06
79 72 516	08A	035	5-B12
79 72 516	08A	071	5-C24
79 72 573	03A	055	2-C08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 72 573	08A	095	5-D24
79 72 573	08A	099	5-E04
79 72 607	03A	005	2-A06
79 72 607	04	011	4-A12
79 72 607	08B	097	5-L02
79 72 623	02	111	1-G16
79 72 623	02	113	1-G18
79 72 623	02	115	1-G20
79 72 623	02	117	1-G22
79 72 623	02	119	1-G24
79 72 623	02	121	1-H02
79 72 714	04	017	4-A18
79 72 714	04	023	4-A24
79 72 714	04	029	4-B06
79 72 797	04	043	4-B20
79 72 805	04	009	4-A10
79 72 938	08A	075	5-D04
79 72 938	08A	139	5-F20
79 72 953	08B	055	5-J08
79 72 979	08C	009	6-A10
79 73 001	03A	031	2-B08
79 73 001	03A	033	2-B10
79 73 001	03A	035	2-B12
79 73 001	03A	055	2-C08
79 73 001	08B	043	5-I20
79 73 001	08B	049	5-J02
79 73 001	08B	059	5-J12
79 73 068	08A	075	5-D04
79 73 191	03A	037	2-B14
79 73 456	02	155	1-I12
79 73 522	02	067	1-E20
79 73 522	02	079	1-F08
79 73 597	02	133	1-H14
79 73 605	02	063	1-E16
79 73 779	03A	027	2-B04
79 73 779	04	023	4-A24
79 73 894	08B	007	5-H08
79 74 009	02	079	1-F08
79 74 009	05	013	4-D14
79 74 074	04	047	4-B24
79 74 082	02	047	1-D24
79 74 298	02	133	1-H14
79 74 298	06	007	4-F08
79 74 298	08B	017	5-H18
79 74 421	08A	027	5-B04
79 74 421	08A	033	5-B10
79 74 421	08A	037	5-B14
79 74 546	02	067	1-E20
79 74 611	03A	167	2-G24
79 74 611	03A	171	2-H04
79 74 611	03A	175	2-H08
79 74 611	03A	179	2-H12
79 74 611	03A	183	2-H16
79 74 629	03A	167	2-G24
79 74 629	03A	171	2-H04
79 74 629	03A	175	2-H08
79 74 629	03A	179	2-H12
79 74 629	03A	183	2-H16
79 74 637	03A	167	2-G24
79 74 637	03A	171	2-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 74 637	03A	175	2-H08
79 74 637	03A	179	2-H12
79 74 637	03A	183	2-H16
79 74 645	03A	167	2-G24
79 74 645	03A	171	2-H04
79 74 645	03A	175	2-H08
79 74 645	03A	179	2-H12
79 74 645	03A	183	2-H16
79 74 652	03A	167	2-G24
79 74 652	03A	171	2-H04
79 74 652	03A	175	2-H08
79 74 652	03A	179	2-H12
79 74 652	03A	183	2-H16
79 74 660	03A	167	2-G24
79 74 660	03A	171	2-H04
79 74 660	03A	175	2-H08
79 74 660	03A	179	2-H12
79 74 660	03A	183	2-H16
79 74 678	03A	167	2-G24
79 74 678	03A	171	2-H04
79 74 678	03A	175	2-H08
79 74 678	03A	179	2-H12
79 74 678	03A	183	2-H16
79 74 819	06	005	4-F06
79 74 884	08B	073	5-K02
79 74 884	08B	081	5-K10
79 75 071	08A	111	5-E16
79 75 071	08B	043	5-I20
79 75 071	08B	049	5-J02
79 75 071	08B	055	5-J08
79 75 071	08B	059	5-J12
79 75 196	04	011	4-A12
79 75 261	03A	031	2-B08
79 75 261	03A	033	2-B10
79 75 261	08A	111	5-E16
79 75 261	08B	061	5-J14
79 75 329	08B	095	5-K24
79 75 337	08A	111	5-E16
79 75 451	03A	049	2-C02
79 75 451	08A	031	5-B08
79 75 451	08A	035	5-B12
79 75 451	08A	039	5-B16
79 75 469	02	135	1-H16
79 75 469	08A	133	5-F14
79 75 501	04	041	4-B18
79 75 527	02	011	1-C12
79 76 897	06	007	4-F08
79 76 897	07	009	4-G10
79 77 002	03A	187	2-H20
79 77 002	03A	189	2-H22
79 77 002	03A	193	2-I02
79 77 002	08B	007	5-H08
79 77 002	08B	013	5-H14
79 77 002	08B	019	5-H20
79 77 028	08B	091	5-K20
79 77 283	06	007	4-F08
79 77 283	08B	007	5-H08
79 77 390	08A	147	5-G04
79 77 465	02	061	1-E14
79 77 465	08A	051	5-C04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 77 465	08A	111	5-E16
79 77 465	08C	029	6-B06
79 77 499	08B	013	5-H14
79 77 523	08A	051	5-C04
79 77 556	03B	297	3-J14
79 77 556	03B	301	3-J18
79 77 556	03B	307	3-J24
79 77 556	03B	313	3-K06
79 77 598	02	139	1-H20
79 77 689	08A	011	5-A12
79 77 697	02	067	1-E20
79 77 697	02	079	1-F08
79 77 697	04	009	4-A10
79 77 796	08A	139	5-F20
79 77 820	07	023	4-G24
79 77 820	07	025	4-H02
79 77 911	03A	009	2-A10
79 77 911	03A	011	2-A12
79 77 911	03A	013	2-A14
79 77 911	03A	053	2-C06
79 77 911	03A	159	2-G16
79 77 911	08A	143	5-F24
79 77 929	02	075	1-F04
79 77 929	02	077	1-F06
79 77 929	02	097	1-G02
79 77 929	03A	005	2-A06
79 77 929	03A	039	2-B16
79 77 929	03A	041	2-B18
79 77 929	03A	043	2-B20
79 77 929	03A	053	2-C06
79 77 929	03A	059	2-C12
79 77 929	03A	061	2-C14
79 77 929	03A	079	2-D08
79 77 929	03A	083	2-D12
79 77 929	03A	119	2-E24
79 77 929	03A	121	2-F02
79 77 929	03A	133	2-F14
79 77 929	03A	135	2-F16
79 77 929	03A	147	2-G04
79 77 929	03A	159	2-G16
79 77 929	04	061	4-C14
79 77 929	05	009	4-D10
79 77 929	05	011	4-D12
79 77 929	06	013	4-F14
79 77 929	08A	057	5-C10
79 77 929	08A	059	5-C12
79 77 929	08A	061	5-C14
79 77 929	08A	077	5-D06
79 77 929	08A	081	5-D10
79 77 929	08A	083	5-D12
79 77 929	08A	091	5-D20
79 77 929	08A	095	5-D24
79 77 929	08A	097	5-E02
79 77 929	08A	099	5-E04
79 77 929	08A	111	5-E16
79 77 929	08A	139	5-F20
79 77 952	03A	005	2-A06
79 77 952	03A	009	2-A10
79 77 952	03A	011	2-A12
79 77 952	03A	013	2-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 77 952	03A	049	2-C02
79 77 952	03A	119	2-E24
79 77 952	03A	121	2-F02
79 77 952	03A	133	2-F14
79 77 952	03A	135	2-F16
79 77 952	03A	147	2-G04
79 77 952	04	009	4-A10
79 77 952	04	011	4-A12
79 77 952	05	009	4-D10
79 77 952	08A	045	5-B22
79 77 952	08A	083	5-D12
79 77 952	08A	099	5-E04
79 77 952	08A	101	5-E06
79 77 952	08A	133	5-F14
79 77 952	08A	149	5-G06
79 77 952	08B	089	5-K18
79 77 960	08A	095	5-D24
79 77 960	08A	099	5-E04
79 78 091	02	023	1-C24
79 78 091	02	047	1-D24
79 78 091	02	071	1-E24
79 78 091	02	145	1-I02
79 78 091	02	157	1-I14
79 78 091	03A	005	2-A06
79 78 091	03A	013	2-A14
79 78 091	03A	159	2-G16
79 78 091	04	011	4-A12
79 78 091	04	053	4-C06
79 78 091	04	061	4-C14
79 78 091	06	013	4-F14
79 78 091	06	019	4-F20
79 78 091	08A	071	5-C24
79 78 091	08A	097	5-E02
79 78 091	08A	099	5-E04
79 78 091	08A	131	5-F12
79 78 091	08A	133	5-F14
79 78 091	08B	005	5-H06
79 78 091	08B	097	5-L02
79 78 109	02	015	1-C16
79 78 109	02	025	1-D02
79 78 109	02	097	1-G02
79 78 109	02	143	1-H24
79 78 109	03A	005	2-A06
79 78 109	03A	007	2-A08
79 78 109	04	043	4-B20
79 78 109	05	013	4-D14
79 78 109	08A	051	5-C04
79 78 109	08A	095	5-D24
79 78 109	08A	099	5-E04
79 78 109	08B	007	5-H08
79 78 117	02	079	1-F08
79 78 117	02	105	1-G10
79 78 117	02	135	1-H16
79 78 117	02	153	1-I10
79 78 117	06	019	4-F20
79 78 117	08C	027	6-B04
79 78 133	03A	005	2-A06
79 78 133	04	011	4-A12
79 78 133	04	047	4-B24
79 78 133	05	011	4-D12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 78 133	08B	007	5-H08
79 78 133	08B	013	5-H14
79 78 141	02	023	1-C24
79 78 141	02	025	1-D02
79 78 158	02	135	1-H16
79 78 174	02	157	1-I14
79 78 174	08C	027	6-B04
79 78 182	02	081	1-F10
79 78 182	02	095	1-F24
79 78 182	02	105	1-G10
79 78 182	02	109	1-G14
79 78 182	02	115	1-G20
79 78 182	02	135	1-H16
79 78 182	08A	083	5-D12
79 78 182	08A	095	5-D24
79 78 190	02	011	1-C12
79 78 190	02	039	1-D16
79 78 190	02	109	1-G14
79 78 190	02	113	1-G18
79 78 190	02	115	1-G20
79 78 190	02	117	1-G22
79 78 190	02	119	1-G24
79 78 190	02	121	1-H02
79 78 190	04	011	4-A12
79 78 190	04	041	4-B18
79 78 190	05	009	4-D10
79 78 190	06	019	4-F20
79 78 190	07	023	4-G24
79 78 190	07	025	4-H02
79 78 190	08A	045	5-B22
79 78 190	08A	077	5-D06
79 78 190	08A	081	5-D10
79 78 190	08A	099	5-E04
79 78 190	08B	091	5-K20
79 78 190	08B	093	5-K22
79 78 190	08B	101	5-L06
79 78 208	02	047	1-D24
79 78 216	02	021	1-C22
79 78 216	02	047	1-D24
79 78 216	02	143	1-H24
79 78 216	03A	005	2-A06
79 78 216	03A	009	2-A10
79 78 216	03A	011	2-A12
79 78 216	03A	019	2-A20
79 78 216	04	011	4-A12
79 78 216	04	047	4-B24
79 78 216	06	017	4-F18
79 78 216	06	019	4-F20
79 78 224	02	081	1-F10
79 78 224	04	047	4-B24
79 78 224	08C	027	6-B04
79 78 232	04	009	4-A10
79 78 232	04	047	4-B24
79 78 232	07	023	4-G24
79 78 232	07	025	4-H02
79 78 257	08C	027	6-B04
79 78 265	02	009	1-C10
79 78 265	02	109	1-G14
79 78 265	02	115	1-G20
79 78 265	03A	159	2-G16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 78 265	04	047	4-B24
79 78 281	02	009	1-C10
79 78 307	02	009	1-C10
79 78 356	03A	079	2-D08
79 78 356	05	021	4-D22
79 78 356	08A	011	5-A12
79 78 372	03A	165	2-G22
79 78 380	08B	019	5-H20
79 78 422	03A	079	2-D08
79 78 422	04	011	4-A12
79 78 422	08A	079	5-D08
79 78 422	08A	087	5-D16
79 78 422	08A	089	5-D18
79 78 422	08A	093	5-D22
79 78 422	08A	121	5-F02
79 78 422	08A	127	5-F08
79 78 422	08A	133	5-F14
79 78 422	08B	045	5-I22
79 78 422	08B	049	5-J02
79 78 422	08B	055	5-J08
79 78 422	08B	059	5-J12
79 78 430	08A	071	5-C24
79 78 430	08A	097	5-E02
79 78 430	08A	099	5-E04
79 78 638	02	075	1-F04
79 78 638	02	077	1-F06
79 78 638	03A	045	2-B22
79 78 638	08C	007	6-A08
79 78 653	03A	081	2-D10
79 78 653	04	011	4-A12
79 78 653	08B	103	5-L08
79 78 661	02	123	1-H04
79 78 661	02	127	1-H08
79 78 661	03A	019	2-A20
79 78 661	06	019	4-F20
79 78 661	06	021	4-F22
79 78 661	08A	041	5-B18
79 78 661	08A	075	5-D04
79 78 661	08A	135	5-F16
79 78 679	06	019	4-F20
79 78 679	08A	075	5-D04
79 78 679	08A	135	5-F16
79 79 214	02	039	1-D16
79 79 248	08C	025	6-B02
79 79 263	03A	013	2-A14
79 79 297	08C	025	6-B02
79 79 503	02	109	1-G14
79 79 503	02	113	1-G18
79 79 511	04	037	4-B14
79 79 552	06	005	4-F08
79 79 578	06	005	4-F06
79 79 602	07	007	4-G08
79 79 602	07	011	4-G12
79 79 610	08A	133	5-F14
79 81 954	04	011	4-A12
79 81 954	06	011	4-F12
79 81 954	08A	111	5-E16
79 81 954	08A	127	5-F08
79 81 954	08B	015	5-H16
79 82 176	04	043	4-B20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 82 192	02	071	1-E24
79 82 218	08B	017	5-H18
79 82 317	02	109	1-G14
79 82 317	02	115	1-G20
79 82 325	08A	051	5-C04
79 82 325	08A	111	5-E16
79 82 333	06	007	4-F08
79 82 333	06	009	4-F10
79 82 523	06	019	4-F20
79 82 549	02	009	1-C10
79 82 598	08C	025	6-B02
79 82 606	04	017	4-A18
79 82 606	04	051	4-C04
79 82 762	08A	083	5-D12
79 82 929	08A	095	5-D24
79 82 929	08C	029	6-B06
79 82 978	06	019	4-F20
79 82 986	06	013	4-F14
79 83 000	02	133	1-H14
79 83 000	02	139	1-H20
79 83 000	02	141	1-H22
79 83 000	03A	055	2-C08
79 83 000	03A	061	2-C14
79 83 000	08A	057	5-C10
79 83 000	08A	059	5-C12
79 83 000	08A	061	5-C14
79 83 000	08A	111	5-E16
79 83 034	03A	167	2-G24
79 83 034	03A	171	2-H04
79 83 034	03A	175	2-H08
79 83 034	03A	179	2-H12
79 83 034	03A	183	2-H16
79 83 042	03A	167	2-G24
79 83 042	03A	171	2-H04
79 83 042	03A	175	2-H08
79 83 042	03A	179	2-H12
79 83 042	03A	183	2-H16
79 83 059	03A	175	2-H08
79 83 059	03A	179	2-H12
79 83 059	03A	183	2-H16
79 83 067	03A	167	2-G24
79 83 067	03A	171	2-H04
79 83 067	03A	175	2-H08
79 83 067	03A	179	2-H12
79 83 067	03A	183	2-H16
79 84 297	04	017	4-A18
79 84 297	04	051	4-C04
79 84 305	08A	047	5-B24
79 84 305	08A	071	5-C24
79 84 735	02	025	1-D02
79 84 750	02	067	1-E20
79 84 750	02	079	1-F08
79 84 750	02	107	1-G12
79 84 750	03A	157	2-G14
79 84 750	04	013	4-A14
79 84 750	05	017	4-D18
79 84 776	02	009	1-C10
79 84 776	03A	015	2-A16
79 84 784	03A	157	2-G14
79 84 784	08A	101	5-E06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 84 891	02	025	1-D02
79 84 933	06	005	4-F06
79 85 047	03A	033	2-B10
79 85 054	07	023	4-G24
79 85 054	07	025	4-H02
79 85 070	02	085	1-F14
79 85 120	02	015	1-C16
79 85 138	04	009	4-A10
79 85 138	05	019	4-D20
79 85 146	02	093	1-F22
79 85 146	04	011	4-A12
79 85 161	02	093	1-F22
79 85 211	04	011	4-A12
79 85 377	03A	053	2-C06
79 85 377	08B	007	5-H08
79 85 401	08C	029	6-B06
79 85 658	03A	005	2-A06
79 85 690	03A	031	2-B08
79 85 690	03A	033	2-B10
79 85 690	03A	035	2-B12
79 85 732	08B	089	5-K18
79 85 773	07	009	4-G10
79 85 773	07	011	4-G12
79 85 864	03A	045	2-B22
79 85 920	02	085	1-F14
79 85 948	08A	071	5-C24
79 85 955	03A	071	2-C24
79 87 175	02	085	1-F14
79 93 462	08A	017	5-A18
79 93 462	08A	019	5-A20
79 94 510	08A	157	5-G14
79 94 882	08A	157	5-G14
79 94 890	08A	157	5-G14
80 00 622	02	093	1-F22
80 21 966	06	011	4-F12
80 29 944	08A	015	5-A16
80 29 944	08A	019	5-A20
80 29 944	08A	033	5-B10
80 29 944	08A	037	5-B14
80 29 985	02	081	1-F10
80 29 985	04	041	4-B18
80 29 985	06	017	4-F18
80 30 058	06	007	4-F08
80 47 144	04	035	4-B12
80 47 144	04	063	4-C16
80 47 623	08A	041	5-B18
80 47 649	02	085	1-F14
80 47 706	04	037	4-B14
80 48 324	04	047	4-B24
80 48 670	02	023	1-C24
80 49 363	04	023	4-A24
80 55 592	08A	039	5-B16
80 55 998	05	007	4-D08
80 57 259	02	085	1-F14
80 59 230	02	085	1-F14
80 59 230	04	043	4-B20
80 59 230	04	061	4-C14
80 59 230	08A	041	5-B18
80 59 230	08C	011	6-A12
80 59 230	08C	017	6-A18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-E15 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
80 59 263	08A	039	5-B16
80 59 305	08C	017	6-A18
80 59 420	02	155	1-I12
80 59 446	08C	013	6-A14
80 59 446	08C	019	6-A20
80 59 537	05	005	4-D06
80 59 537	08A	029	5-B06
80 59 552	08A	037	5-B14
80 59 560	02	085	1-F14
80 59 578	04	061	4-C14
80 59 586	02	025	1-D02
80 59 586	02	085	1-F14
80 59 586	02	143	1-H24
80 59 586	02	153	1-I10
80 59 628	02	023	1-C24
80 59 628	02	025	1-D02
80 59 628	08A	035	5-B12
80 59 628	08A	039	5-B16
80 59 768	02	057	1-E10
80 59 768	02	081	1-F10
80 59 768	02	153	1-I10
80 59 776	02	011	1-C12
80 59 776	02	103	1-G08
80 59 792	04	023	4-A24
80 59 792	04	029	4-B06
80 59 792	04	031	4-B08
80 59 792	04	035	4-B12
80 59 800	02	047	1-D24
80 59 800	02	143	1-H24
80 59 800	03A	019	2-A20
80 59 982	02	025	1-D02
80 73 090	08A	013	5-A14
80 73 090	08A	015	5-A16
80 73 090	08A	019	5-A20
80 73 108	02	039	1-D16
80 73 108	02	075	1-F04
80 73 108	02	077	1-F06
80 73 108	03A	013	2-A14
80 73 108	04	009	4-A10
80 73 108	05	019	4-D20
80 73 108	08A	147	5-G04
80 73 108	08C	025	6-B02
80 73 116	06	005	4-F06
80 73 512	02	079	1-F08
80 73 512	03A	007	2-A08
80 73 512	06	011	4-F12
80 74 106	03A	051	2-C04
80 74 106	04	009	4-A10
80 74 106	04	017	4-A18
80 74 106	08A	025	5-B02
80 74 270	08B	075	5-K04
80 74 288	02	085	1-F14
80 74 288	04	051	4-C04
80 74 288	04	053	4-C06
80 74 288	05	017	4-D18
80 74 288	06	017	4-F18
80 74 288	07	009	4-G10
80 74 288	07	011	4-G12
80 74 288	07	023	4-G24
80 74 288	07	025	4-H02
80 82 935	04	053	4-C06
80 82 968	02	021	1-C22
80 82 968	02	025	1-D02
80 82 968	04	009	4-A10
80 83 933	04	009	4-A10
80 83 933	08A	025	5-B02
80 83 966	04	037	4-B14
80 97 800	08C	029	6-B06
80 98 378	02	021	1-C22
80 98 378	03A	009	2-A10
80 98 378	03A	011	2-A12
81 17 020	02	159	1-I16
81 17 608	02	027	1-D04
81 17 657	04	023	4-A24
81 17 863	04	035	4-B12
81 23 143	02	011	1-C12
81 23 168	02	025	1-D02
81 23 192	02	025	1-D02
81 23 218	02	015	1-C16
81 23 259	02	015	1-C16
81 23 440	08A	041	5-B18
81 23 465	08B	087	5-K16
81 23 473	04	061	4-C14
81 23 473	08B	075	5-K04
81 23 499	04	061	4-C14
81 23 713	02	093	1-F22
81 23 721	02	011	1-C12
81 23 721	02	015	1-C16
81 23 721	02	047	1-D24
81 23 747	02	115	1-G20
81 24 133	02	057	1-E10
81 24 733	02	093	1-F22
81 24 141	02	015	1-C16
81 24 141	02	047	1-D24
81 24 141	02	053	1-E06
81 24 141	02	057	1-E10
81 24 141	02	131	1-H12
81 24 141	02	159	1-I16
81 24 158	02	053	1-E06
81 25 015	02	085	1-F14
81 31 963	02	101	1-G06
81 51 243	03A	005	2-A06
81 51 474	03A	013	2-A14
81 51 474	07	019	4-G20
81 51 474	07	021	4-G22
82 06 096	08A	005	5-A06
82 35 178	08A	013	5-A14
82 35 178	08A	015	5-A16
82 35 178	08A	019	5-A20
82 35 178	08A	045	5-B22
82 35 178	08B	077	5-K06
82 35 178	08B	085	5-K14
82 72 635	08A	067	5-C20
82 78 467	08A	095	5-D24
82 78 558	03A	159	2-G16
82 78 558	08C	031	6-B08
82 84 473	08A	155	5-G12
82 84 481	08A	155	5-G12
82 84 499	08A	155	5-G12
82 84 507	08A	155	5-G12
82 84 887	08A	155	5-G12
82 84 986	08A	151	5-G08
82 84 994	08A	151	5-G08
82 85 207	08A	153	5-G10
82 85 231	08A	151	5-G08
82 85 231	08A	153	5-G10
82 85 231	08A	155	5-G12
82 85 231	08A	157	5-G14
82 85 249	08A	157	5-G14
82 85 256	08A	157	5-G14
82 85 264	08A	157	5-G14
82 85 371	08A	151	5-G08
82 85 397	08A	153	5-G10
82 85 405	08A	155	5-G12
82 85 488	08A	151	5-G08
82 85 488	08A	153	5-G10
82 85 488	08A	155	5-G12
82 85 496	08A	151	5-G08
82 85 496	08A	153	5-G10
82 85 496	08A	155	5-G12
83 26 712	02	011	1-C12
83 26 712	02	057	1-E10
83 26 712	02	125	1-H06
83 26 712	02	131	1-H12
83 32 587	02	079	1-F08
83 32 587	04	011	4-A12
83 35 614	02	087	1-F16
83 46 470	02	015	1-C16
83 46 470	02	047	1-D24
83 47 676	02	029	1-D06
83 60 463	02	085	1-F14
83 60 943	02	093	1-F22
83 78 630	03B	031	2-K08
83 78 630	03B	089	3-A22
83 78 630	03B	169	3-E06
83 78 630	03B	249	3-H14
84 08 882	08A	141	5-F22
84 41 503	04	053	4-C06
84 52 898	08B	051	5-J04
84 52 898	08B	055	5-J08
84 52 898	08B	061	5-J14
84 52 898	08B	063	5-J16
84 86 292	08A	153	5-G10
84 86 292	08A	155	5-G12
84 86 300	08A	153	5-G10
84 86 300	08A	155	5-G12
84 87 225	08A	155	5-G12
84 87 266	08A	151	5-G08
84 87 274	08A	151	5-G08
84 87 282	08A	153	5-G10
84 87 621	08A	153	5 G08
84 87 621	08A	153	5-G10
84 87 621	08A	155	5-G12
84 87 753	08A	151	5-G08
84 87 761	08A	151	5-G08
84 87 779	08A	157	5-G14
84 87 787	08A	157	5-G14
84 99 204	08B	099	5-L04
85 00 613	03A	045	2-B22
85 00 613	03A	065	2-C18
85 00 613	04	061	4-C14
85 00 613	08B	007	5-H08
85 00 613	08B	017	5-H18
85 01 264	03A	045	2-B22
85 02 643	03A	159	2-G16
85 04 144	03A	055	2-C08
85 04 797	03B	037	2-K14
85 04 797	03B	053	2-L06
85 04 797	03B	095	3-B04
85 04 797	03B	175	3-E12
85 04 797	03B	255	3-H20
85 04 797	03B	297	3-J14
85 04 797	03B	301	3-J18
85 04 797	03B	307	3-J24
85 04 797	03B	313	3-K06
85 09 697	03A	045	2-B22
85 09 697	08B	007	5-H08
85 09 697	08B	017	5-H18
85 10 851	03A	031	2-B08
85 16 916	03B	033	2-K10
85 16 916	03B	041	2-K18
85 16 916	03B	045	2-K22
85 16 916	03B	047	2-K24
85 16 916	03B	049	2-L02
85 16 916	03B	051	2-L04
85 16 916	03B	053	2-L06
85 16 916	03B	091	3-A24
85 16 916	03B	099	3-B08
85 16 916	03B	103	3-B12
85 16 916	03B	105	3-B14
85 16 916	03B	109	3-B18
85 16 916	03B	111	3-B20
85 16 916	03B	113	3-B22
85 16 916	03B	117	3-C02
85 16 916	03B	123	3-C08
85 16 916	03B	171	3-E08
85 16 916	03B	179	3-E16
85 16 916	03B	183	3-E20
85 16 916	03B	185	3-E22
85 16 916	03B	189	3-F02
85 16 916	03B	191	3-F04
85 16 916	03B	193	3-F06
85 16 916	03B	197	3-F10
85 16 916	03B	199	3-F12
85 16 916	03B	251	3-H16
85 16 916	03B	259	3-H24
85 16 916	03B	263	3-I04
85 16 916	03B	265	3-I06
85 16 916	03B	269	3-I10
85 16 916	03B	271	3-I12
85 16 916	03B	273	3-I14
85 16 916	03B	277	3-I18
85 16 916	03B	283	3-I24
85 17 573	04	023	4-A24
85 17 615	04	023	4-A24
85 17 623	04	023	4-A24
85 17 946	04	027	4-B04
85 17 953	04	027	4-B04
85 23 330	04	027	4-B04
85 23 397	04	023	4-A24
85 23 967	04	017	4-A18
85 24 874	04	025	4-B02
85 25 327	04	033	4-B10
85 26 754	04	023	4-A24
85 27 869	04	023	4-A24
85 28 057	02	159	1-I16
85 29 378	04	031	4-B08
85 29 600	04	021	4-A22
85 29 600	04	063	4-C16
85 29 964	04	029	4-B06
85 30 111	04	025	4-B02
85 30 285	04	035	4-B12
85 30 350	04	031	4-B08
85 30 566	04	031	4-B08
85 30 665	04	017	4-A18
85 30 715	04	035	4-B12
85 30 723	04	031	4-B08
85 31 077	04	023	4-A24
85 31 143	04	017	4-A18
85 31 150	04	027	4-B04
85 31 192	04	027	4-B04
85 31 317	04	021	4-A22
85 31 333	04	027	4-B04
85 31 366	04	027	4-B04
85 31 374	04	027	4-B04
85 31 382	04	027	4-B04
85 31 390	04	035	4-B12
85 31 432	04	021	4-A22
85 31 739	04	021	4-A22
85 31 788	04	035	4-B12
85 32 117	04	035	4-B12
85 32 117	04	063	4-C16
85 32 190	04	021	4-A22
85 32 232	04	021	4-A22
85 32 232	04	063	4-C16
85 32 232	04	065	4-C18
85 32 240	04	021	4-A22
85 33 230	04	035	4-B12
85 33 446	04	035	4-B12
85 33 719	04	023	4-A24
85 33 909	04	035	4-B12
85 34 014	04	035	4-B12
85 34 022	04	035	4-B12
85 34 071	04	027	4-B04
85 34 097	04	017	4-A18
85 34 105	04	017	4-A18
85 34 337	04	033	4-B10
85 34 378	04	031	4-B08
85 34 386	04	035	4-B12
85 34 428	04	031	4-B08
85 34 436	04	031	4-B08
85 34 444	04	031	4-B08
85 34 451	04	031	4-B08

6-E16 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
85 21 692	03B	061	2-L14
85 21 692	03B	129	3-C14
85 21 692	03B	131	3-C16
85 21 692	03B	209	3-F22
85 21 692	03B	211	3-F24
85 21 692	03B	289	3-J06
85 21 692	03B	291	3-J08
85 22 310	03A	167	2-G24
85 22 310	03A	169	2-H02
85 22 310	08B	083	5-K12
85 22 526	03B	047	2-K24
85 22 526	03B	059	2-L12
85 22 526	03B	061	2-L14
85 22 526	03B	129	3-C14
85 22 526	03B	131	3-C16
85 22 526	03B	209	3-F22
85 22 526	03B	211	3-F24
85 22 526	03B	289	3-J06
85 22 526	03B	291	3-J08
85 22 526	03B	297	3-J14
85 22 575	03B	031	2-K08
85 22 575	03B	089	3-A22
85 22 575	03B	169	3-E06
85 22 575	03B	249	3-H14
85 22 575	03B	297	3-J14
85 22 575	03B	301	3-J18
85 22 575	03B	307	3-J24
85 22 575	03B	313	3-K06
85 32 756	03A	039	2-B16
85 33 176	03A	167	2-G24
85 33 176	03A	169	2-H02
85 33 176	03A	171	2-H04
85 33 176	03A	175	2-H08
85 33 176	03A	179	2-H12
85 33 176	03A	183	2-H16
85 33 176	08B	083	5-K12
85 33 184	03B	037	2-K14
85 33 184	03B	053	2-L06
85 33 184	03B	095	3-B04
85 33 184	03B	117	3-C02
85 33 184	03B	123	3-C08
85 33 184	03B	175	3-E12
85 33 184	03B	197	3-F10
85 33 184	03B	203	3-F16
85 33 184	03B	255	3-H20
85 33 184	03B	277	3-I18
85 33 184	03B	283	3-I24
85 35 692	03A	035	2-B12
85 35 700	03A	039	2-B16
85 36 419	02	125	1-H06
85 36 419	02	127	1-H08
85 36 419	08A	011	5-A12
85 37 623	08A	057	5-C10
85 37 623	08A	059	5-C12
85 37 623	08A	061	5-C14
85 37 623	08A	139	5-F20
85 44 298	08B	077	5-K06
85 44 298	08B	085	5-K14
85 44 314	08B	077	5-K06
85 44 314	08B	085	5-K14
85 44 363	03B	031	2-K08
85 44 363	03B	089	3-A22
85 44 363	03B	169	3-E06
85 44 363	03B	249	3-H14
85 47 804	03B	065	2-J06
85 47 804	03B	007	2-J08
85 47 804	03B	009	2-J10
85 47 804	03B	045	2-K22
85 47 804	03B	063	2-L16
85 47 804	03B	065	2-L18
85 47 804	03B	067	2-L20
85 47 804	03B	103	3-B12
85 47 804	03B	111	3-B20
85 47 804	03B	139	3-C24
85 47 804	03B	141	3-D02
85 47 804	03B	143	3-D04
85 47 804	03B	183	3-E20
85 47 804	03B	191	3-F04
85 47 804	03B	219	3-G08
85 47 804	03B	221	3-G10
85 47 804	03B	223	3-G12
85 47 804	03B	263	3-I04
85 47 804	03B	271	3-I12
85 47 804	03B	299	3-J16
85 47 804	03B	305	3-J22
85 47 804	03B	311	3-K04
85 47 804	03B	317	3-K10
85 48 273	03A	057	2-C10
85 49 172	03A	053	2-C06
85 49 297	03A	051	2-C04
85 49 297	03A	197	2-I06
85 49 339	03A	057	2-C10
85 49 537	03A	041	2-B18
85 49 560	03A	051	2-C04
85 49 560	03A	197	2-I06
85 52 325	03A	039	2-B16
85 52 663	04	011	4-A12
85 52 663	08A	031	5-B08
85 52 663	08A	035	5-B12
85 52 663	08A	039	5-B16
85 53 356	03A	065	2-C18
85 59 221	08B	017	5-H18
85 60 435	08B	043	5-I20
85 60 435	08B	049	5-J02
85 60 435	08B	059	5-J12
85 61 623	08B	077	5-K06
85 61 623	08B	085	5-K14
85 61 631	08B	077	5-K06
85 61 631	08B	085	5-K14
85 64 973	03A	159	2-G16
85 64 973	08A	015	5-A16
85 64 973	08A	019	5-A20
85 66 598	08C	013	6-A14
85 66 598	08C	019	6-A20
85 73 669	03A	057	2-C10
85 74 469	08B	019	5-H20
85 74 477	08B	017	5-H18
85 74 949	03B	037	2-K14
85 74 949	03B	095	3-B04
85 74 949	03B	175	3-E12
85 74 949	03B	255	3-H20
85 74 949	03B	297	3-J14
85 75 599	03A	055	2-C08
85 75 599	05	019	4-D20
85 75 599	08A	049	5-C02
85 82 090	03B	039	2-K16
85 82 090	03B	297	3-J14
85 82 439	03B	053	2-L06
85 82 439	03B	117	3-C02
85 82 439	03B	123	3-C08
85 82 439	03B	197	3-F10
85 82 439	03B	203	3-F16
85 82 439	03B	277	3-I18
85 82 439	03B	283	3-I24
85 82 439	03B	297	3-J14
85 82 439	03B	301	3-J18
85 82 439	03B	307	3-J24
85 82 439	03B	313	3-K06
85 82 447	03B	301	3-J18
85 82 447	03B	307	3-J24
85 82 447	03B	313	3-K06
85 87 461	03B	005	2-J06
85 87 461	03B	063	2-L16
85 87 461	03B	153	3-D14
85 87 461	03B	233	3-G22
85 87 636	03A	169	2-H02
85 87 636	03A	173	2-H06
85 87 636	03A	177	2-H10
85 87 636	03A	181	2-H14
85 87 636	03A	183	2-H16
85 90 838	03A	065	2-C18
86 05 495	08C	011	6-A12
86 70 002	08D	005	6-C06
86 81 868	08B	063	5-J16
86 81 934	08B	063	5-J16
86 82 213	08B	063	5-J16
86 82 296	08B	065	5-J18
86 82 411	07	013	4-G14
86 82 437	07	013	4-G14
86 82 551	07	013	4-G14
86 84 151	08B	063	5-J16
86 84 193	08B	063	5-J16
86 84 284	08B	065	5-J18
86 84 417	08B	065	5-J18
86 86 198	03A	081	2-D10
86 86 222	03A	079	2-D08
87 01 658	04	017	4-A18
87 16 821	04	027	4-B04
87 16 839	04	027	4-B04
87 17 027	04	023	4-A24
87 18 439	02	159	1-I16
87 19 163	04	027	4-B04
87 19 189	04	027	4-B04
87 19 593	04	023	4-A24
87 19 601	04	023	4-A24
87 19 650	04	023	4-A24
87 19 684	04	023	4-A24
87 19 940	04	035	4-B12
87 20 112	04	027	4-B04
87 21 557	04	023	4-A24
87 21 565	04	023	4-A24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6-E17 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
87 34 477	04	033	4-B10
87 34 550	04	027	4-B04
87 34 568	04	035	4-B12
87 34 592	04	027	4-B04
87 34 618	04	035	4-B12
87 34 626	04	035	4-B12
87 34 634	04	035	4-B12
87 34 642	04	035	4-B12
87 34 659	04	029	4-B06
87 34 733	04	017	4-A18
87 34 741	04	023	4-A24
87 34 808	04	023	4-A24
87 34 816	04	017	4-A18
87 34 824	04	017	4-A18
87 34 824	04	063	4-C16
87 34 873	04	017	4-A18
87 34 881	04	017	4-A18
87 34 980	04	021	4-A22
87 34 980	04	063	4-C16
87 34 998	04	017	4-A18
87 34 998	04	063	4-C16
87 35 102	04	025	4-B02
87 35 193	04	035	4-B12
87 35 243	04	021	4-A22
87 35 250	04	017	4-A18
87 35 268	04	017	4-A18
87 35 276	04	023	4-A24
87 35 359	04	033	4-B10
87 35 441	04	027	4-B04
87 35 490	04	027	4-B04
87 35 516	04	033	4-B10
87 35 599	04	025	4-B02
87 35 615	04	029	4-B06
87 35 623	04	029	4-B06
87 35 656	04	025	4-B02
87 35 680	04	031	4-B08
87 35 755	04	023	4-A24
87 35 797	04	005	4-A06
87 35 797	04	065	4-C18
87 35 813	04	033	4-B10
87 35 847	04	031	4-B08
87 35 862	04	031	4-B08
87 35 896	04	031	4-B08
87 35 920	04	031	4-B08
87 36 001	04	015	4-A16
87 36 399	04	029	4-B06
87 36 415	04	005	4-A06
87 36 415	04	063	4-C16
87 36 423	04	005	4-A06
87 36 423	04	063	4-C16
87 36 456	04	005	4-A06
87 36 456	04	063	4-C16
87 36 548	04	005	4-A06
87 36 548	04	063	4-C16
87 36 555	04	005	4-A06
87 36 555	04	063	4-C16
87 36 597	04	027	4-B04
87 36 969	04	021	4-A22
87 37 074	04	027	4-B04
87 37 090	04	017	4-A18
87 37 405	04	015	4-A16
87 37 439	04	027	4-B04
87 37 447	04	027	4-B04
87 37 454	04	027	4-B04
87 37 603	04	015	4-A16
87 37 652	04	017	4-A18
87 37 660	04	017	4-A18
87 37 694	04	023	4-A24
87 37 835	04	033	4-B10
87 38 072	04	021	4-A22
87 38 072	04	063	4-C16
87 38 080	04	021	4-A22
87 38 114	04	021	4-A22
87 38 155	04	021	4-A22
87 38 270	04	015	4-A16
87 38 411	04	017	4-A18
87 38 411	04	053	4-C06
87 39 435	04	021	4-A22
87 39 450	04	029	4-B06
87 39 682	04	017	4-A18
87 39 781	04	023	4-A24
87 39 815	04	027	4-B04
87 40 151	04	025	4-B02
87 40 160	04	029	4-B06
87 40 185	04	027	4-B04
87 40 201	04	027	4-B04
87 40 631	04	031	4-B08
87 40 649	04	023	4-A24
87 40 656	04	023	4-A24
87 40 672	04	029	4-B06
87 40 680	04	029	4-B06
87 40 714	04	023	4-A24
87 40 789	04	031	4-B08
87 40 797	04	031	4-B08
87 41 001	04	027	4-B04
87 41 043	04	023	4-A24
87 41 225	04	005	4-A06
87 41 225	04	065	4-C18
87 41 241	04	029	4-B06
87 41 324	04	029	4-B06
87 41 332	04	035	4-B12
87 41 381	04	023	4-A24
87 41 431	04	023	4-A24
87 41 449	04	005	4-A06
87 41 449	06	019	4-F20
87 41 464	04	035	4-B12
87 41 506	04	027	4-B04
87 41 506	04	031	4-B08
87 41 712	04	035	4-B12
87 41 811	04	025	4-B02
87 41 829	04	035	4-B12
87 41 878	04	017	4-A18
87 42 165	04	031	4-B08
87 42 173	04	035	4-B12
87 42 421	04	027	4-B04
87 42 439	04	027	4-B04
87 42 660	04	015	4-A16
87 43 205	04	033	4-B10
87 43 221	04	021	4-A22
87 43 460	04	029	4-B06
87 43 791	04	029	4-B06
87 43 809	04	029	4-B06
87 43 858	04	017	4-A18
87 43 890	04	015	4-A16
87 44 047	04	017	4-A18
87 44 070	04	005	4-A06
87 44 153	04	029	4-B06
87 44 211	04	017	4-A18
87 44 237	04	029	4-B06
87 44 252	04	029	4-B06
87 44 427	04	021	4-A22
87 44 492	04	035	4-B12
87 44 518	04	035	4-B12
87 44 625	04	035	4-B12
87 44 724	04	005	4-A06
87 44 724	04	065	4-C18
87 44 732	04	005	4-A06
87 44 732	04	065	4-C18
87 44 765	04	035	4-B12
87 44 997	04	027	4-B04
87 45 606	04	027	4-B04
87 45 630	04	025	4-B02
87 45 762	04	021	4-A22
87 46 190	04	025	4-B02
87 46 216	04	023	4-A24
87 46 372	04	029	4-B06
87 46 463	04	017	4-A18
87 46 489	04	005	4-A06
87 46 489	04	063	4-C16
87 46 497	04	005	4-A06
87 46 497	04	063	4-C16
87 46 638	04	025	4-B02
87 46 687	04	031	4-B08
87 46 752	04	029	4-B06
87 46 778	04	005	4-A06
87 46 778	04	063	4-C16
87 46 802	04	005	4-A06
87 46 802	04	063	4-C16
87 46 877	04	031	4-B08
87 46 893	04	035	4-B12
87 47 016	04	029	4-B06
87 47 255	04	035	4-B12
87 47 321	04	017	4-A18
87 47 339	04	017	4-A18
87 47 347	04	017	4-A18
87 47 578	04	015	4-A16
87 47 909	04	027	4-B04
87 47 917	04	027	4-B04
87 47 925	04	027	4-B04
87 48 022	04	015	4-A16
87 48 055	04	015	4-A16
87 48 261	04	033	4-B10
87 48 667	04	021	4-A22
87 48 816	04	015	4-A16
87 81 437	04	029	4-B06
87 81 445	04	027	4-B04
87 81 452	04	027	4-B04
87 81 478	04	031	4-B08
87 81 486	04	031	4-B08
87 81 494	04	019	4-A20
87 81 494	04	021	4-A22
87 81 494	04	035	4-B12
87 81 494	04	063	4-C16
87 81 510	04	027	4-B04
87 81 528	04	005	4-A06
87 81 528	04	063	4-C16
87 81 536	04	005	4-A06
87 81 536	04	063	4-C16
87 81 544	04	007	4-A08
87 81 544	04	063	4-C16
87 81 577	04	007	4-A08
87 81 577	04	065	4-C18
87 81 676	04	047	4-B24
87 81 684	04	027	4-B04
87 81 684	04	047	4-B24
87 81 718	04	021	4-A22
87 81 734	04	031	4-B08
87 81 841	02	035	1-D12
87 81 841	02	037	1-D14
87 81 841	02	137	1-H18
87 81 866	04	007	4-A08
87 81 866	04	065	4-C18
87 81 882	04	029	4-B06
87 81 924	04	055	4-C08
87 81 932	04	055	4-C08
87 81 940	04	055	4-C08
87 81 957	04	055	4-C08
87 81 965	04	005	4-A06
87 87 764	02	015	1-C16
87 87 996	02	089	1-F18
88 16 415	08A	151	5-G08
88 18 569	02	153	1-I10
88 18 569	02	159	1-I16
88 19 138	02	159	1-I16
88 21 720	02	043	1-D20
88 21 738	02	043	1-D20
88 21 746	02	043	1-D20
88 21 779	02	043	1-D20
88 21 787	02	043	1-D20
88 21 795	02	043	1-D20
88 21 829	02	043	1-D20
88 21 837	02	043	1-D20
88 21 878	02	043	1-D20
88 21 886	02	043	1-D20
88 21 894	02	043	1-D20
88 21 902	02	043	1-D20
88 21 910	02	043	1-D20
88 21 928	02	043	1-D20
88 21 944	02	145	1-I02
88 21 951	03A	025	2-B02
88 21 969	03A	017	2-A18
88 21 977	03A	017	2-A18
88 21 985	03A	017	2-A18
88 21 993	03A	017	2-A18
88 22 009	03A	017	2-A18
88 22 017	02	069	1-E22
88 22 025	02	147	1-I04
88 22 025	02	159	1-I16
88 22 033	02	011	1-C12
88 22 033	02	159	1-I16

6-E18 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
88 22 041	02	013	1-C14
88 22 041	02	159	1-I16
88 22 066	02	093	1-F22
88 22 074	02	093	1-F22
88 22 082	02	017	1-C18
88 22 090	02	033	1-D10
88 22 108	02	033	1-D10
88 22 355	02	033	1-D10
88 22 363	02	033	1-D10
88 22 371	02	033	1-D10
88 22 389	02	033	1-D10
88 22 595	03A	019	2-A20
88 22 629	02	033	1-D10
88 22 652	02	143	1-H24
88 22 686	03A	027	2-B04
88 22 702	02	025	1-D02
88 22 702	02	159	1-I16
88 22 744	02	143	1-H24
88 22 769	02	133	1-H14
88 22 785	02	069	1-E22
88 57 195	02	085	1-F14
88 59 324	02	023	1-C24
88 59 514	02	029	1-D06
88 59 886	02	135	1-H16
89 08 576	05	007	4-D08
89 21 520	04	045	4-B22
89 25 067	02	159	1-I16
89 29 531	05	011	4-D12
89 43 177	02	103	1-G08
89 50 628	04	045	4-B22
89 50 636	04	045	4-B22
89 50 701	06	011	4-F12
89 54 281	06	011	4-F12
89 54 315	06	007	4-F08
89 55 007	04	065	4-C18
89 55 478	05	023	4-D24
89 55 536	05	023	4-D24
89 59 934	07	019	4-G20
89 59 934	07	021	4-G22
89 60 221	08A	103	5-E08
89 61 021	05	015	4-D16
89 65 097	05	017	4-D18
89 65 360	04	045	4-B22
89 68 315	06	007	4-F08
89 68 703	06	007	4-F08
89 69 107	05	023	4-D24
89 69 651	05	005	4-D06
89 72 986	04	047	4-B24
89 72 986	04	065	4-C18
89 80 328	02	109	1-G14
89 87 802	07	013	4-G14
89 93 867	06	005	4-F06
89 93 867	06	023	4-F24
89 93 941	05	021	4-D22
89 93 941	05	027	4-E04
89 93 958	06	005	4-F06
89 93 958	06	023	4-F24
89 94 147	04	045	4-B22
89 94 147	04	047	4-B24
89 94 147	04	065	4-C18
90 86 281	03A	041	2-B18
90 87 040	08A	111	5-E16
90 87 289	08A	071	5-C24
91 06 113	08C	029	6-B06
91 06 139	03A	161	2-G18
91 07 541	02	023	1-C24
91 09 182	02	047	1-D24
91 12 459	02	047	1-D24
91 12 541	02	159	1-I16
91 12 541	03A	029	2-B06
91 13 937	02	153	1-I10
91 14 075	02	057	1-E10
91 15 049	02	015	1-C16
91 15 197	02	023	1-C24
91 15 205	02	023	1-C24
91 15 288	02	025	1-D02
91 16 443	02	025	1-D02
91 16 674	02	153	1-I10
91 16 864	02	023	1-C24
91 20 791	03B	005	2-J06
91 20 791	03B	031	2-K08
91 20 791	03B	037	2-K14
91 20 791	03B	041	2-K18
91 20 791	03B	043	2-K20
91 20 791	03B	045	2-K22
91 20 791	03B	047	2-K24
91 20 791	03B	049	2-L02
91 20 791	03B	057	2-L10
91 20 791	03B	059	2-L12
91 20 791	03B	063	2-L16
91 20 791	03B	105	3-B14
91 20 791	03B	107	3-B16
91 20 791	03B	111	3-B20
91 20 791	03B	113	3-B22
91 20 791	03B	115	3-B24
91 20 791	03B	121	3-C06
91 20 791	03B	127	3-C12
91 20 791	03B	129	3-C14
91 20 791	03B	135	3-C20
91 20 791	03B	137	3-C22
91 20 791	03B	169	3-E06
91 20 791	03B	175	3-E12
91 20 791	03B	179	3-E16
91 20 791	03B	181	3-E18
91 20 791	03B	183	3-E20
91 20 791	03B	185	3-E22
91 20 791	03B	187	3-E24
91 20 791	03B	191	3-F04
91 20 791	03B	193	3-F06
91 20 791	03B	195	3-F08
91 20 791	03B	201	3-F14
91 20 791	03B	207	3-F20
91 20 791	03B	209	3-F22
91 20 791	03B	215	3-G04
91 20 791	03B	217	3-G06
91 20 791	03B	249	3-H14
91 20 791	03B	255	3-H20
91 20 791	03B	259	3-H24
91 20 791	03B	261	3-I02
91 20 791	03B	263	3-I04
91 20 791	03B	265	3-I06
91 20 791	03B	267	3-I08
91 20 791	03B	271	3-I12
91 20 791	03B	273	3-I14
91 20 791	03B	275	3-I16
91 20 791	03B	281	3-I22
91 20 791	03B	287	3-J04
91 20 791	03B	289	3-J06
91 20 791	03B	295	3-J12
91 20 791	03B	297	3-J14
91 20 791	03B	301	3-J18
91 20 791	03B	307	3-J24
91 20 791	03B	313	3-K06
91 20 957	03B	005	2-J06
91 20 957	03B	007	2-J08
91 20 957	03B	011	2-J12
91 20 957	03B	015	2-J16
91 20 957	03B	019	2-J20
91 20 957	03B	027	2-K04
91 20 957	03B	029	2-K06
91 20 957	03B	031	2-K08
91 20 957	03B	033	2-K10
91 20 957	03B	035	2-K12
91 20 957	03B	037	2-K14
91 20 957	03B	039	2-K16
91 20 957	03B	041	2-K18
91 20 957	03B	043	2-K20
91 20 957	03B	045	2-K22
91 20 957	03B	047	2-K24
91 20 957	03B	049	2-L02
91 20 957	03B	051	2-L04
91 20 957	03B	053	2-L06
91 20 957	03B	055	2-L08
91 20 957	03B	059	2-L12
91 20 957	03B	063	2-L16
91 20 957	03B	065	2-L18
91 20 957	03B	069	2-L22
91 20 957	03B	073	3-A06
91 20 957	03B	077	3-A10
91 20 957	03B	085	3-A18
91 20 957	03B	087	3-A20
91 20 957	03B	089	3-A22
91 20 957	03B	091	3-A24
91 20 957	03B	093	3-B02
91 20 957	03B	095	3-B04
91 20 957	03B	099	3-B08
91 20 957	03B	101	3-B10
91 20 957	03B	103	3-B12
91 20 957	03B	105	3-B14
91 20 957	03B	107	3-B16
91 20 957	03B	109	3-B18
91 20 957	03B	111	3-B20
91 20 957	03B	113	3-B22
91 20 957	03B	115	3-B24
91 20 957	03B	117	3-C02
91 20 957	03B	119	3-C04
91 20 957	03B	123	3-C08
91 20 957	03B	125	3-C10
91 20 957	03B	129	3-C14
91 20 957	03B	133	3-C18
91 20 957	03B	135	3-C20
91 20 957	03B	137	3-C22
91 20 957	03B	141	3-D02
91 20 957	03B	145	3-D06
91 20 957	03B	149	3-D10
91 20 957	03B	153	3-D14
91 20 957	03B	163	3-D24
91 20 957	03B	165	3-E02
91 20 957	03B	169	3-E06
91 20 957	03B	171	3-E08
91 20 957	03B	173	3-E10
91 20 957	03B	175	3-E12
91 20 957	03B	177	3-E14
91 20 957	03B	179	3-E16
91 20 957	03B	181	3-E18
91 20 957	03B	183	3-E20
91 20 957	03B	185	3-E22
91 20 957	03B	187	3-E24
91 20 957	03B	189	3-F02
91 20 957	03B	191	3-F04
91 20 957	03B	193	3-F06
91 20 957	03B	195	3-F08
91 20 957	03B	197	3-F10
91 20 957	03B	199	3-F12
91 20 957	03B	203	3-F16
91 20 957	03B	205	3-F18
91 20 957	03B	209	3-F22
91 20 957	03B	213	3-G02
91 20 957	03B	215	3-G04
91 20 957	03B	217	3-G06
91 20 957	03B	221	3-G10
91 20 957	03B	225	3-G14
91 20 957	03B	229	3-G18
91 20 957	03B	233	3-G22
91 20 957	03B	243	3-H08
91 20 957	03B	245	3-H10
91 20 957	03B	249	3-H14
91 20 957	03B	251	3-H16
91 20 957	03B	253	3-H18
91 20 957	03B	255	3-H20
91 20 957	03B	257	3-H22
91 20 957	03B	259	3-H24
91 20 957	03B	261	3-I02
91 20 957	03B	263	3-I04
91 20 957	03B	269	3-I10
91 20 957	03B	271	3-I12
91 20 957	03B	273	3-I14
91 20 957	03B	275	3-I16
91 20 957	03B	277	3-I18
91 20 957	03B	279	3-I20
91 20 957	03B	283	3-I24
91 20 957	03B	285	3-J02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 – E19 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 20 957	03B	289	3-J06
91 20 957	03B	293	3-J10
91 20 957	03B	295	3-J12
91 20 957	03B	297	3-J14
91 20 957	03B	301	3-J18
91 20 957	03B	307	3-J24
91 20 957	03B	313	3-K06
91 23 381	03B	047	2-K24
91 23 381	03B	105	3-B14
91 23 381	03B	113	3-B22
91 23 381	03B	185	3-E22
91 23 381	03B	193	3-F06
91 23 381	03B	265	3-I06
91 23 381	03B	273	3-I14
91 23 381	08B	083	5-K12
91 23 399	03B	015	2-J16
91 23 399	03B	029	2-K06
91 23 399	03B	031	2-K08
91 23 399	03B	035	2-K12
91 23 399	03B	037	2-K14
91 23 399	03B	041	2-K18
91 23 399	03B	053	2-L06
91 23 399	03B	073	3-A06
91 23 399	03B	087	3-A20
91 23 399	03B	089	3-A22
91 23 399	03B	093	3-B02
91 23 399	03B	095	3-B04
91 23 399	03B	099	3-B08
91 23 399	03B	149	3-D10
91 23 399	03B	165	3-E02
91 23 399	03B	169	3-E06
91 23 399	03B	173	3-E10
91 23 399	03B	175	3-E12
91 23 399	03B	179	3-E16
91 23 399	03B	229	3-G18
91 23 399	03B	245	3-H10
91 23 399	03B	249	3-H14
91 23 399	03B	253	3-H18
91 23 399	03B	255	3-H20
91 23 399	03B	259	3-H24
91 23 456	03A	071	2-C24
91 23 548	03B	011	2-J12
91 23 548	03B	031	2-K08
91 23 548	03B	033	2-K10
91 23 548	03B	039	2-K16
91 23 548	03B	041	2-K18
91 23 548	03B	047	2-K24
91 23 548	03B	049	2-L02
91 23 548	03B	051	2-L04
91 23 548	03B	055	2-L08
91 23 548	03B	059	2-L12
91 23 548	03B	069	2-L22
91 23 548	03B	089	3-A22
91 23 548	03B	097	3-B06
91 23 548	03B	099	3-B08
91 23 548	03B	105	3-B14
91 23 548	03B	107	3-B16
91 23 548	03B	109	3-B18
91 23 548	03B	113	3-B22
91 23 548	03B	115	3-B24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 23 548	03B	117	3-C02
91 23 548	03B	125	3-C10
91 23 548	03B	129	3-C14
91 23 548	03B	133	3-C18
91 23 548	03B	135	3-C20
91 23 548	03B	145	3-D06
91 23 548	03B	169	3-E06
91 23 548	03B	177	3-E14
91 23 548	03B	179	3-E16
91 23 548	03B	185	3-E22
91 23 548	03B	187	3-E24
91 23 548	03B	189	3-F02
91 23 548	03B	193	3-F06
91 23 548	03B	195	3-F08
91 23 548	03B	197	3-F10
91 23 548	03B	205	3-F18
91 23 548	03B	209	3-F22
91 23 548	03B	213	3-G02
91 23 548	03B	215	3-G04
91 23 548	03B	225	3-G14
91 23 548	03B	249	3-H14
91 23 548	03B	257	3-H22
91 23 548	03B	259	3-H24
91 23 548	03B	265	3-I06
91 23 548	03B	267	3-I08
91 23 548	03B	269	3-I10
91 23 548	03B	273	3-I14
91 23 548	03B	275	3-I16
91 23 548	03B	277	3-I18
91 23 548	03B	285	3-J02
91 23 548	03B	289	3-J06
91 23 548	03B	293	3-J10
91 23 548	03B	295	3-J12
91 23 548	08B	079	5-K08
91 23 548	08B	083	5-K12
91 23 555	03B	005	2-J06
91 23 555	03B	037	2-K14
91 23 555	03B	039	2-K16
91 23 555	03B	041	2-K18
91 23 555	03B	049	2-L02
91 23 555	03B	053	2-L06
91 23 555	03B	055	2-L08
91 23 555	03B	059	2-L12
91 23 555	03B	063	2-L16
91 23 555	03B	095	3-B04
91 23 555	03B	097	3-B06
91 23 555	03B	099	3-B08
91 23 555	03B	101	3-B10
91 23 555	03B	107	3-B16
91 23 555	03B	115	3-B24
91 23 555	03B	123	3-C08
91 23 555	03B	125	3-C10
91 23 555	03B	129	3-C14
91 23 555	03B	133	3-C18
91 23 555	03B	137	3-C22
91 23 555	03B	175	3-E12
91 23 555	03B	177	3-E14
91 23 555	03B	179	3-E16
91 23 555	03B	181	3-E18
91 23 555	03B	187	3-E24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 23 555	03B	195	3-F08
91 23 555	03B	203	3-F16
91 23 555	03B	205	3-F18
91 23 555	03B	209	3-F22
91 23 555	03B	213	3-G02
91 23 555	03B	217	3-G06
91 23 555	03B	255	3-H20
91 23 555	03B	257	3-H22
91 23 555	03B	259	3-H24
91 23 555	03B	261	3-I02
91 23 555	03B	267	3-I08
91 23 555	03B	275	3-I16
91 23 555	03B	283	3-I24
91 23 555	03B	285	3-J02
91 23 555	03B	289	3-J06
91 23 555	03B	293	3-J10
91 23 555	08B	083	5-K12
91 24 090	03B	037	2-K14
91 24 090	03B	041	2-K18
91 24 090	03B	045	2-K22
91 24 090	03B	049	2-L02
91 24 090	03B	057	2-L10
91 24 090	03B	095	3-B04
91 24 090	03B	099	3-B08
91 24 090	03B	103	3-B12
91 24 090	03B	107	3-B16
91 24 090	03B	111	3-B20
91 24 090	03B	115	3-B24
91 24 090	03B	127	3-C12
91 24 090	03B	175	3-E12
91 24 090	03B	179	3-E16
91 24 090	03B	183	3-E20
91 24 090	03B	187	3-E24
91 24 090	03B	191	3-F04
91 24 090	03B	195	3-F08
91 24 090	03B	207	3-F20
91 24 090	03B	255	3-H20
91 24 090	03B	259	3-H24
91 24 090	03B	263	3-I04
91 24 090	03B	267	3-I08
91 24 090	03B	271	3-I12
91 24 090	03B	275	3-I16
91 24 090	03B	287	3-J04
91 24 090	08B	083	5-K12
91 24 132	03A	045	2-B22
91 24 140	03A	045	2-B22
91 24 157	03B	041	2-K18
91 24 157	03B	049	2-L02
91 24 157	03B	059	2-L12
91 24 157	03B	099	3-B08
91 24 157	03B	107	3-B16
91 24 157	03B	115	3-B24
91 24 157	03B	129	3-C14
91 24 157	03B	179	3-E16
91 24 157	03B	187	3-E24
91 24 157	03B	195	3-F08
91 24 157	03B	209	3-F22
91 24 157	03B	259	3-H24
91 24 157	03B	267	3-I08
91 24 157	03B	275	3-I16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 24 157	03B	289	3-J06
91 24 199	08B	083	5-K12
91 27 200	02	089	1-F18
91 28 687	02	015	1-C16
91 28 836	02	071	1-E24
91 28 851	02	071	1-E24
91 28 919	02	059	1-E12
91 29 396	02	057	1-E10
91 29 651	02	011	1-C12
91 29 701	02	159	1-I16
91 29 719	02	025	1-D02
91 29 727	02	023	1-C24
91 29 727	02	025	1-D02
91 29 800	02	015	1-C16
91 29 909	02	011	1-C12
91 30 535	02	025	1-D02
91 30 600	02	025	1-D02
91 30 618	02	047	1-D24
91 30 816	02	047	1-D24
91 31 061	02	071	1-E24
91 31 137	02	023	1-C24
91 31 145	02	023	1-C24
91 31 160	02	029	1-D06
91 32 374	02	071	1-E24
91 32 671	02	077	1-F06
91 32 689	02	077	1-F06
91 32 697	02	075	1-F04
91 32 705	02	075	1-F04
91 32 838	02	025	1-D02
91 32 929	02	047	1-D24
91 32 937	02	047	1-D24
91 33 026	02	013	1-C14
91 33 026	02	159	1-I16
91 33 034	02	013	1-C14
91 33 034	02	159	1-I16
91 34 404	03A	029	2-B06
91 34 420	02	011	1-C12
91 34 743	02	089	1-F18
91 34 875	03A	027	2-B04
91 35 211	02	011	1-C12
91 36 243	02	053	1-E06
91 36 243	02	099	1-G04
91 36 243	05	013	4-D14
91 36 276	02	159	1-I16
91 36 276	03A	023	2-A24
91 36 441	02	057	1-E10
91 36 524	02	057	1-E10
91 36 532	02	023	1-C24
91 37 464	02	011	1-C12
91 37 472	02	011	1-C12
91 37 514	02	143	1-H24
91 37 803	02	071	1-E24
91 37 993	02	047	1-D24
91 38 009	02	047	1-D24
91 38 074	02	047	1-D24
91 38 108	02	047	1-D24
91 38 264	02	025	1-D02
91 38 462	02	125	1-H06
91 38 470	02	015	1-C16
91 38 587	02	125	1-H06

6 – E20 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 38 611	02	089	1-F18
91 38 645	02	047	1-D24
91 38 660	02	089	1-F18
91 38 702	02	085	1-F14
91 38 884	02	081	1-F10
91 38 884	02	159	1-I16
91 38 934	02	025	1-D02
91 39 130	02	025	1-D02
91 39 262	02	015	1-C16
91 39 304	02	015	1-C16
91 39 312	02	015	1-C16
91 39 403	02	029	1-D06
91 39 460	02	029	1-D06
91 39 643	02	159	1-I16
91 39 643	03A	023	2-A24
91 39 940	02	031	1-D08
91 40 658	02	025	1-D02
91 41 847	02	089	1-F18
91 41 854	02	089	1-F18
91 42 035	02	025	1-D02
91 42 068	02	025	1-D02
91 42 175	02	047	1-D24
91 42 415	03A	019	2-A20
91 42 423	02	071	1-E24
91 42 449	02	071	1-E24
91 43 157	02	013	1-C14
91 43 454	02	029	1-D06
91 43 611	02	025	1-D02
91 43 637	02	025	1-D02
91 43 819	02	153	1-I10
91 43 934	02	147	1-I04
91 43 967	02	053	1-E06
91 43 967	02	057	1-E10
91 43 967	02	131	1-H12
91 44 130	02	057	1-E10
91 44 155	02	131	1-H12
91 44 445	02	047	1-D24
91 44 445	02	159	1-I16
91 44 528	02	011	1-C12
91 44 528	02	159	1-I16
91 44 650	02	047	1-D24
91 44 668	02	047	1-D24
91 44 676	02	111	1-G16
91 44 676	02	113	1-G18
91 44 734	02	143	1-H24
91 44 759	02	143	1-H24
91 44 767	02	143	1-H24
91 44 833	02	025	1-D02
91 44 874	02	025	1-D02
91 45 350	02	023	1-C24
91 45 368	02	025	1-D02
91 45 376	02	023	1-C24
91 45 384	02	025	1-D02
91 45 392	02	025	1-D02
91 45 418	02	029	1-D06
91 45 426	02	029	1-D06
91 45 434	02	029	1-D06
91 45 459	02	029	1-D06
91 45 467	02	029	1-D06
91 45 475	02	029	1-D06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 45 517	03A	019	2-A20
91 45 517	03A	029	2-B06
91 45 590	02	031	1-D08
91 45 632	02	011	1-C12
91 45 640	02	011	1-C12
91 45 657	02	011	1-C12
91 45 665	02	011	1-C12
91 45 756	02	013	1-C14
91 45 764	02	013	1-C14
91 45 764	02	053	1-E06
91 45 764	02	157	1-I14
91 45 764	03A	029	2-B06
91 45 772	02	093	1-F22
91 45 939	02	071	1-E24
91 46 010	02	153	1-I10
91 46 150	02	153	1-I10
91 46 523	02	143	1-H24
91 46 549	02	143	1-H24
91 46 598	02	143	1-H24
91 46 606	02	143	1-H24
91 46 614	02	143	1-H24
91 46 663	02	075	1-F04
91 46 754	02	053	1-E06
91 46 895	03A	023	2-A24
91 46 895	03A	197	2-I06
91 46 903	03A	023	2-A24
91 46 903	03A	197	2-I06
91 46 911	03A	023	2-A24
91 46 911	03A	197	2-I06
91 46 929	03A	023	2-A24
91 46 929	03A	197	2-I06
91 46 937	02	105	1-G10
91 46 952	02	105	1-G10
91 46 986	02	047	1-D24
91 46 994	02	047	1-D24
91 47 026	02	047	1-D24
91 47 844	02	153	1-I10
91 47 927	02	011	1-C12
91 48 024	02	013	1-C14
91 48 065	02	081	1-F10
91 48 560	02	085	1-F14
91 48 586	02	013	1-C14
91 48 693	02	011	1-C12
91 48 768	02	081	1-F10
91 48 776	02	081	1-F10
91 48 958	02	053	1-E06
91 49 030	02	131	1-H12
91 49 071	02	125	1-H06
91 49 105	02	029	1-D06
91 49 113	02	029	1-D06
91 49 121	02	029	1-D06
91 49 154	02	029	1-D06
91 49 162	02	029	1-D06
91 49 170	02	029	1-D06
91 49 188	02	029	1-D06
91 49 196	02	029	1-D06
91 49 295	02	029	1-D06
91 49 303	02	029	1-D06
91 49 311	02	029	1-D06
91 49 329	02	029	1-D06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 49 337	02	029	1-D06
91 49 360	02	029	1-D06
91 49 378	02	029	1-D06
91 49 386	02	029	1-D06
91 49 394	02	029	1-D06
91 49 402	02	029	1-D06
91 49 485	02	085	1-F14
91 49 576	02	035	1-F14
91 49 626	02	085	1-F14
91 49 931	02	089	1-F18
91 49 949	02	089	1-F18
91 49 964	02	025	1-D02
91 65 473	02	057	1-E10
91 65 572	02	047	1-D24
91 65 580	02	011	1-C12
91 65 598	02	011	1-C12
91 65 903	02	053	1-E06
91 65 945	02	081	1-F10
91 65 952	02	081	1-F10
91 65 978	02	085	1-F14
91 66 000	02	081	1-F10
91 66 240	02	011	1-C12
91 66 265	02	011	1-C12
91 66 398	02	093	1-F22
91 66 448	03A	159	2-G16
91 66 497	02	093	1-F22
91 66 497	02	159	1-I16
91 66 596	02	085	1-F14
91 66 612	02	085	1-F14
91 66 687	02	159	1-I16
91 66 711	02	081	1-F10
91 66 901	02	085	1-F14
91 66 943	02	085	1-F14
91 66 950	02	085	1-F14
91 67 008	02	085	1-F14
91 67 016	03A	029	2-B06
91 67 024	03A	019	2-A20
91 67 024	03A	029	2-B06
91 67 032	03A	029	2-B06
91 67 487	02	085	1-F14
91 67 495	02	085	1-F14
91 67 677	02	015	1-C16
91 67 776	02	029	1-D06
91 67 784	02	025	1-D02
91 67 891	02	029	1-D06
91 67 909	02	029	1-D06
91 67 917	02	029	1-D06
91 68 238	02	047	1-D24
91 68 352	02	159	1-I16
91 68 485	02	053	1-E06
91 68 568	02	093	1-F22
91 68 709	02	093	1-F22
91 69 277	02	093	1-F22
91 69 285	02	011	1-C12
91 69 301	02	093	1-F22
91 69 319	02	093	1-F22
91 69 426	02	153	1-I10
91 69 434	02	153	1-I10
91 69 517	02	153	1-I10
91 69 566	02	011	1-C12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
91 69 590	02	017	1-C18
91 69 608	02	017	1-C18
91 69 780	02	017	1-C18
91 69 798	02	017	1-C18
91 69 806	02	017	1-C18
91 69 814	02	017	1-C18
91 69 822	02	017	1-C18
91 69 830	02	017	1-C18
91 69 848	02	017	1-C18
91 69 855	02	019	1-C20
91 69 863	02	019	1-C20
91 69 871	02	019	1-C20
91 69 889	02	019	1-C20
91 69 897	02	019	1-C20
91 70 259	03A	027	2-B04
91 70 671	02	047	1-D24
91 71 117	03A	019	2-A20
91 71 117	03A	029	2-B06
91 71 125	03A	019	2-A20
91 71 125	03A	029	2-B06
91 71 182	02	085	1-F14
91 71 190	02	085	1-F14
91 71 539	02	071	1-E24
91 72 255	02	025	1-D02
91 73 501	02	025	1-D02
91 73 576	02	025	1-D02
91 73 584	02	159	1-I16
91 73 592	02	161	1-I18
91 73 709	02	017	1-C18
91 73 717	02	017	1-C18
91 73 774	02	085	1-F14
91 74 194	02	015	1-C16
91 74 202	02	015	1-C16
91 74 228	02	015	1-C16
91 74 442	02	135	1-H16
91 74 533	02	025	1-D02
91 74 913	02	011	1-C12
91 75 464	02	071	1-E24
91 75 696	02	047	1-D24
91 75 902	02	015	1-C16
91 76 124	02	017	1-C18
91 76 165	02	147	1-I04
91 76 223	02	093	1-F22
91 76 298	02	089	1-F18
91 76 306	02	089	1-F18
91 76 314	02	089	1-F18
91 76 470	03A	027	2-B04
91 76 900	02	093	1-F22
91 76 991	04	005	4-A06
91 77 098	02	093	1-F22
91 77 106	02	093	1-F22
91 77 213	02	071	1-E24
91 77 221	03A	019	2-A20
91 77 445	02	017	1-C18
91 77 452	02	017	1-C18
91 77 460	02	017	1-C18
91 77 478	02	017	1-C18
91 77 510	02	017	1-C18
91 77 528	02	019	1-C20
91 77 536	02	019	1-C20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -E21 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
91 77 544	02	019	1-C20
91 77 551	02	019	1-C20
91 77 569	02	019	1-C20
91 77 577	02	019	1-C20
91 77 585	02	019	1-C20
91 77 973	02	025	1-D02
91 78 302	02	025	1-D02
91 78 336	02	025	1-D02
91 78 849	02	125	1-H06
91 78 955	03A	029	2-B06
91 79 136	02	029	1-D06
91 79 235	02	011	1-C12
91 79 789	02	017	1-C18
91 79 797	02	017	1-C18
91 79 805	02	017	1-C18
91 79 862	02	017	1-C18
91 79 870	02	017	1-C18
91 80 233	02	093	1-F22
91 80 464	02	053	1-E06
91 80 480	02	153	1-I10
91 80 720	02	017	1-C18
91 80 738	02	017	1-C18
91 80 746	02	017	1-C18
91 80 753	02	017	1-C18
91 80 761	02	017	1-C18
91 80 779	02	017	1-C18
91 80 787	02	017	1-C18
91 80 795	02	017	1-C18
91 80 803	02	019	1-C20
91 80 811	02	019	1-C20
91 80 829	02	019	1-C20
91 80 993	02	019	1-C20
91 81 009	02	019	1-C20
91 81 025	02	085	1-F14
91 81 371	02	013	1-C14
91 81 538	02	085	1-F14
91 81 991	02	025	1-D02
91 82 205	02	011	1-C12
91 82 270	02	011	1-C12
91 82 304	02	011	1-C12
91 82 742	02	013	1-C14
91 82 759	02	013	1-C14
91 83 104	02	017	1-C18
91 83 112	02	017	1-C18
91 83 120	02	019	1-C20
91 83 138	02	019	1-C20
91 83 146	02	019	1-C20
91 83 153	02	019	1-C20
91 83 161	02	019	1-C20
91 83 179	02	019	1-C20
91 83 187	02	017	1-C18
91 83 195	02	017	1-C18
91 83 203	02	017	1-C18
91 83 229	02	017	1-C18
91 83 237	02	017	1-C18
91 85 208	02	011	1-C12
91 85 307	02	011	1-C12
91 85 422	02	085	1-F14
91 85 471	02	011	1-C12
91 85 489	02	153	1-I10
91 85 489	02	159	1-I16
91 85 497	02	159	1-I16
91 85 588	02	025	1-D02
91 85 612	02	011	1-C12
91 85 695	02	011	1-C12
91 85 794	02	029	1-D06
91 86 602	02	015	1-C16
91 86 610	02	015	1-C16
91 87 196	02	089	1-F18
91 87 204	02	089	1-F18
91 87 691	02	143	1-H24
91 88 491	02	017	1-C18
91 88 509	02	017	1-C18
91 88 517	02	017	1-C18
92 28 149	02	107	1-G12
92 36 753	08A	135	5-F16
92 40 086	08A	097	5-E02
92 40 086	08A	099	5-E04
92 53 329	08A	109	5-E14
92 67 485	08A	009	5-A10
92 67 808	08A	069	5-C22
92 67 808	08A	083	5-D12
92 67 808	08B	013	5-H14
92 67 915	08A	069	5-C22
92 68 178	08A	069	5-C22
92 68 186	08A	071	5-C24
92 68 863	05	019	4-D20
93 00 591	02	047	1-D24
93 01 540	02	047	1-D24
93 06 812	02	093	1-F22
93 09 204	02	025	1-D02
93 09 998	02	025	1-D02
93 21 746	02	159	1-I16
93 21 795	02	015	1-C16
93 21 795	02	027	1-D04
93 21 795	02	047	1-D24
93 21 795	02	051	1-E04
93 21 795	04	019	4-A20
93 21 795	04	063	4-C16
93 21 845	02	023	1-C24
93 21 910	03A	023	2-A24
93 21 910	03A	197	2-I06
93 21 936	02	025	1-D02
93 21 936	02	159	1-I16
93 21 969	02	035	1-D12
93 21 969	02	159	1-I16
93 21 977	02	043	1-D20
93 21 985	02	043	1-D20
93 21 993	02	043	1-D20
93 44 276	02	099	1-G04
93 48 532	04	041	4-B18
93 50 566	02	159	1-I16
93 55 369	02	025	1-D02
93 56 486	02	071	1-E24
93 57 138	02	153	1-I10
93 61 544	02	047	1-D24
93 65 404	02	109	1-G14
93 65 404	02	113	1-G18
93 65 404	02	115	1-G20
93 84 298	02	067	1-E20
93 85 121	02	079	1-F08
94 41 221	08A	045	5-B22
94 64 926	08B	061	5-J14
94 81 219	08B	007	5-H08
94 82 597	08C	013	6-A14
94 82 597	08C	019	6-A20
94 91 689	08B	051	5-J04
94 91 689	08B	055	5-J08
94 91 689	08B	061	5-J14
94 91 689	08B	063	5-J16
95 03 319	03B	007	2-J08
95 03 319	03B	065	2-L18
95 03 319	03B	141	3-D02
95 03 319	03B	221	3-G10
95 03 418	03B	009	2-J10
95 03 418	03B	067	2-L20
95 03 418	03B	143	3-D04
95 03 418	03B	223	3-G12
95 05 520	03A	187	2-H20
95 05 520	03A	193	2-I02
95 05 538	03A	187	2-H20
95 05 538	03A	193	2-I02
95 05 546	03A	187	2-H20
95 05 546	03A	193	2-I02
95 07 617	03A	055	2-C08
95 07 666	08A	069	5-C22
95 09 746	03B	005	2-J06
95 09 746	03B	039	2-K16
95 09 746	03B	063	2-L16
95 09 746	03B	097	3-B06
95 09 746	03B	177	3-E14
95 09 746	03B	257	3-H22
95 09 746	03B	299	3-J16
95 09 746	03B	305	3-J22
95 09 746	03B	311	3-K04
95 09 746	03B	317	3-K10
95 12 880	03A	031	2-B08
95 12 880	03A	033	2-B10
95 12 880	03A	043	2-B20
95 12 880	03A	045	2-B22
95 12 880	03A	047	2-B24
95 12 880	08B	055	5-J08
95 12 898	03A	045	2-B22
95 18 739	08B	081	5-K10
95 19 679	03B	005	2-J06
95 19 679	03B	007	2-J08
95 19 679	03B	063	2-L16
95 19 679	03B	065	2-L18
95 19 679	03B	139	3-C24
95 19 679	03B	141	3-D02
95 19 679	03B	219	3-G08
95 19 679	03B	221	3-G10
95 19 737	03A	159	2-G16
95 21 857	03A	045	2-B22
95 22 061	03A	167	2-G24
95 22 061	03A	169	2-H02
95 22 061	03A	171	2-H04
95 22 061	03A	175	2-H08
95 22 061	03A	179	2-H12
95 22 061	03A	183	2-H16
95 25 031	03B	045	2-K22
95 25 031	03B	103	3-B12
95 25 031	03B	111	3-B20
95 25 031	03B	183	3-E20
95 25 031	03B	191	3-F04
95 25 031	03B	263	3-I04
95 25 031	03B	271	3-I12
95 25 809	03B	033	2-K10
95 25 817	03B	033	2-K10
95 25 817	03B	299	3-J16
95 28 019	08C	029	6-B06
95 29 876	03A	037	2-B14
95 44 834	08B	025	5-I02
95 45 898	08B	043	5-I20
95 45 898	08B	067	5-J20
95 45 906	08B	045	5-I22
95 45 906	08B	049	5-J02
95 45 906	08B	059	5-J12
95 45 906	08B	067	5-J20
95 45 906	08B	093	5-K22
95 46 961	08D	011	6-C12
95 52 183	03B	041	2-K18
95 52 183	03B	099	3-B08
95 52 183	03B	179	3-E16
95 52 183	03B	259	3-H24
95 52 191	03B	041	2-K18
95 52 191	03B	099	3-B08
95 52 191	03B	179	3-E16
95 52 191	03B	259	3-H24
95 52 191	03B	299	3-J16
95 52 191	03B	305	3-J22
95 52 191	03B	311	3-K04
95 52 191	03B	317	3-K10
95 56 390	03A	167	2-G24
95 58 149	03A	053	2-C06
95 65 003	08B	083	5-K12
95 65 011	08B	083	5-K12
95 65 045	03B	037	2-K14
95 65 045	03B	095	3-B04
95 65 045	03B	175	3-E12
95 65 045	03B	255	3-H20
95 65 417	03A	161	2-G18
95 65 912	08B	089	5-K18
95 68 049	08D	015	6-C16
95 68 999	03A	053	2-C06
95 69 005	03A	053	2-C06
95 71 118	08B	017	5-H18
95 78 964	08B	055	5-J08
95 84 723	08B	105	5-L10
95 86 827	08B	099	5-L04
95 92 700	08B	081	5-K10
96 17 846	08B	099	5-L04
96 17 846	08B	101	5-L06
96 17 846	08B	103	5-L08
96 17 853	08B	099	5-L04
96 17 853	08B	101	5-L06
96 17 853	08B	103	5-L08
96 22 432	08C	005	6-A06
96 23 315	08C	005	6-A06
96 25 575	08C	005	6-A06

6 -E22 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
96 25 989	08C	011	6-A12
96 25 989	08C	017	6-A18
96 29 197	08C	013	6-A14
96 29 197	08C	019	6-A20
96 30 252	03A	077	2-D06
96 68 153	08A	013	5-A14
96 68 153	08A	015	5-A16
96 68 153	08A	019	5-A20
96 68 153	08B	061	5-J14
96 68 153	08B	093	5-K22
96 70 548	08A	095	5-D24
96 70 548	08A	099	5-E04
96 71 389	08B	043	5-I20
96 71 389	08B	047	5-I24
96 71 389	08B	057	5-J10
96 76 057	08B	067	5-J20
96 77 162	03A	161	2-G18
96 94 969	08B	105	5-L10
96 98 168	08A	151	5-G08
96 98 176	08A	151	5-G08
96 98 184	08A	153	5-G10
96 99 786	08B	093	5-K22
96 99 794	08B	093	5-K22
97 46 264	08A	153	5-G10
97 46 314	08A	157	5-G14
97 46 652	08A	157	5-G14
97 46 835	08A	157	5-G14
97 46 850	08A	157	5-G14
97 46 884	08A	157	5-G14
97 46 892	08A	157	5-G14
97 46 900	08A	157	5-G14
97 46 926	08A	157	5-G14
97 46 934	08A	157	5-G14
97 46 959	08A	157	5-G14
97 46 967	08A	157	5-G14
97 46 975	08A	155	5-G12
97 46 975	08A	157	5-G14
97 57 691	08B	025	5-I02
97 71 320	08B	017	5-H18
97 71 320	08B	061	5-J14
97 71 320	08B	063	5-J16
97 74 290	08B	093	5-K22
97 77 749	08B	093	5-K22
97 82 236	08B	099	5-L04
97 85 031	08B	067	5-J20
97 87 516	08B	091	5-K20
97 97 200	08B	043	5-I20
97 97 200	08B	047	5-I24
97 97 200	08B	059	5-J12
98 28 641	08B	105	5-L10
98 49 498	08B	105	5-L10
98 49 514	08A	071	5-C24
98 93 009	08B	073	5-K02
98 93 017	08B	073	5-K02
98 93 033	08B	073	5-K02
98 97 927	08B	105	5-L10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -E24 *New articles* *Nya artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 48 231	02	125	1-H06
45 57 906	08A	041	5-B18
46 23 146	02	009	1-C10
46 25 872	02	039	1-D16
46 23 880	02	009	1-C10
46 23 922	02	039	1-D16
46 23 948	02	039	1-D16
46 32 253	08C	019	6-A20
46 47 996	05	019	4-D20
46 64 579	08B	063	5-J16
46 85 186	04	031	4-B08
46 89 378	07	007	4-G08
46 89 378	07	011	4-G12
47 12 667	03A	081	2-D10
47 16 411	08B	083	5-[illegible]
47 19 092	08B	073	5-[illegible]
47 19 092	08B	081	5-K10
47 19 126	06	007	4-F08
47 19 134	06	007	4-F08
47 26 592	02	063	1-E16
47 27 150	02	063	1-E16
47 27 186	02	065	1-E18
47 27 210	02	063	1-E16
47 27 236	02	065	1-E18
47 27 251	02	065	1-E18
47 27 269	02	065	1-E18
47 27 343	02	079	1-F08
47 27 350	02	079	1-F08
47 28 093	02	065	1-E18
47 28 507	02	065	1-E18
47 28 515	02	065	1-E18
47 28 523	02	065	1-E18
47 28 531	02	065	1-E18
47 28 549	02	065	1-E18
47 28 846	02	067	1-E20
47 29 091	02	065	1-E18
47 29 109	02	065	1-E18
47 29 554	02	123	1-H04
47 29 562	02	123	1-H04
47 29 562	02	127	1-H08
47 29 570	02	123	1-H04
47 29 588	02	127	1-H08
47 29 596	02	123	1-H04
47 29 596	02	127	1-H08
47 33 382	03A	061	2-C14
47 51 566	02	079	1-F08
47 52 168	02	065	1-E18
47 58 686	08C	029	6-B06
47 60 690	08B	079	5-K08
47 60 716	08B	079	5-K08
47 60 732	08B	071	5-J24
47 60 757	08B	071	5-J24
47 60 773	08B	079	5-K08
47 60 799	08B	079	5-K08
47 60 831	08B	079	5-K08
47 60 849	08B	079	5-K08
47 60 856	08B	071	5-J24
47 60 864	08B	071	5-J24
47 60 872	08B	079	5-K08
47 60 880	08B	079	5-K08
47 70 731	02	051	1-E04
47 71 085	02	041	1-D18
47 79 500	05	009	4-D10
47 79 526	05	009	4-D10
47 81 043	02	077	1-F06
47 81 050	02	077	1-F06
48 30 089	08A	075	5-D04
48 30 097	08A	075	5-D04
48 38 025	05	019	4-D20
48 39 122	05	007	4-D08
48 39 882	05	023	4-D24
48 39 890	05	023	4-D24
48 39 924	05	005	4-D06
48 39 924	05	023	4-D24
48 48 289	06	007	4-F08
48 48 644	06	007	4-F08
48 49 519	08B	099	5-L04
48 49 527	08B	099	5-L04
48 49 543	08B	099	5-L04
48 49 550	08B	099	5-L04
48 51 713	08A	099	5-E04
48 51 721	08A	099	5-E04
48 56 050	03A	071	2-C24
48 56 936	08A	025	5-B02
48 56 993	08A	025	5-B02
48 56 993	08A	027	5-B04
48 56 993	08A	033	5-B10
48 56 993	08A	037	5-B14
48 57 256	08A	029	5-B06
48 57 256	08A	035	5-B12
48 57 256	08A	039	5-B16
48 57 264	08A	029	5-B06
48 57 264	08A	035	5-B12
48 57 264	08A	039	5-B16
48 57 645	08A	033	5-B10
48 57 645	08A	037	5-B14
48 58 072	08A	011	5-A12
48 58 080	08A	011	5-A12
48 58 437	08A	137	5-F18
48 58 445	08A	137	5-F18
48 58 452	08A	139	5-F20
48 58 460	08A	139	5-F20
48 58 460	08A	145	5-G02
48 58 577	08A	085	5-D14
48 58 577	08A	091	5-D20
48 58 585	08A	085	5-D14
48 58 585	08A	091	5-D20
48 58 593	08A	085	5-D14
48 58 593	08A	091	5-D20
48 58 601	08A	085	5-D14
48 58 601	08A	091	5-D20
48 58 767	08A	045	5-B22
48 59 252	08A	041	5-B18
48 59 260	08A	041	5-B18
48 59 419	08A	041	5-B18
48 59 765	08A	027	5-B04
48 59 765	08A	033	5-B10
48 59 765	08A	037	5-B14
48 59 773	08A	025	5-B02
48 59 781	08A	033	5-B10
48 59 781	08A	037	5-B14
48 70 333	03A	083	2-D12
48 72 693	03A	069	2-C22
48 76 025	02	065	1-E18
48 76 413	02	123	1-H04
48 76 470	02	123	1-H04
48 76 504	02	127	1-H08
48 76 561	02	127	1-H08
48 76 595	02	123	1-H04
48 76 603	02	123	1-H04
48 76 603	02	127	1-H08
48 79 458	08D	007	6-C08
48 79 466	08D	007	6-C08
48 79 474	08D	007	6-C08
48 79 482	08D	007	6-C08
48 79 490	08D	007	6-C08
49 00 213	08B	013	5-H14
49 00 221	08B	013	5-H14
49 00 759	08B	081	5-K10
49 00 908	08B	073	5-K02
49 00 916	08B	073	5-K02
49 00 965	03A	045	2-B22
49 01 047	08B	093	5-K22
49 01 153	08A	033	5-B10
49 01 153	08A	037	5-B14
49 01 229	08C	019	6-A20
49 01 286	08B	011	5-H12
49 01 294	08B	011	5-H12
49 01 302	08B	011	5-H12
49 01 310	08B	013	5-H14
49 01 328	08B	013	5-H14
49 01 336	08B	013	5-H14
49 01 344	08B	073	5-K02
49 01 351	08B	073	5-K02
49 01 484	08B	013	5-H14
49 01 492	08B	013	5-H14
49 01 740	04	009	4-A10
49 02 011	08B	097	5-L02
49 02 029	08B	097	5-L02
49 02 227	02	107	1-G12
49 02 235	02	107	1-G12
49 02 268	08B	063	5-J16
49 02 292	06	013	4-F14
49 02 300	02	087	1-F16
49 03 316	08B	093	5-K22
49 03 324	08B	093	5-K22
49 08 067	07	013	4-G14
49 22 175	08A	067	5-C20
49 22 183	08A	067	5-C20
49 26 457	04	047	4-B24
49 26 473	04	047	4-B24
49 40 169	04	017	4-A18
49 40 169	04	063	4-C16
49 40 318	02	125	1-H06
49 40 326	02	125	1-H06
49 40 466	02	011	1-C12
49 40 631	02	065	1-E18
49 40 896	02	063	1-E16
49 42 538	02	079	1-F08
49 46 307	04	043	4-B20
49 47 099	03A	069	2-C22
49 47 149	03A	073	2-D02
49 47 529	03A	007	2-A08
49 57 411	03A	041	2-B18
49 57 429	03A	039	2-B16
49 57 437	03A	039	2-B16
49 57 445	03A	041	2-B18
49 57 452	03A	041	2-B18
49 57 460	03A	041	2-B18
49 59 698	03A	051	2-C04
49 59 698	03A	197	2-I06
49 60 951	02	063	1-E16
49 60 969	02	063	1-E16
49 60 985	02	063	1-E16
49 61 561	02	065	1-E18
49 61 702	02	065	1-E18
50 37 023	03A	081	2-D10
50 38 047	03A	075	2-D04
79 74 421	08A	027	5-B04
79 74 421	08A	033	5-B10
79 74 421	08A	037	5-B14
79 79 248	08C	025	6-B02
80 47 623	08A	041	5-B18
80 59 305	08C	017	6-A18
80 59 552	08A	037	5-B14
85 49 560	03A	051	2-C04
85 49 560	03A	197	2-I06
87 43 221	04	021	4-A22
87 44 427	04	021	4-A22
87 46 687	04	031	4-B08
87 47 578	04	015	4-A16
87 48 022	04	015	4-A16
87 48 055	04	015	4-A16
87 48 667	04	021	4-A22
87 48 816	04	015	4-A16
88 22 785	02	069	1-E22
91 72 255	02	025	1-D02
91 76 165	02	147	1-I04
91 78 302	02	025	1-D02
91 78 336	02	025	1-D02
91 80 233	02	093	1-F22
91 81 371	02	013	1-C14
91 85 588	02	025	1-D02
91 85 695	02	011	1-C12
91 85 794	02	029	1-D06
91 86 602	02	015	1-C16
91 86 610	02	015	1-C16
91 87 691	02	143	1-H24
91 88 491	02	017	1-C18
91 88 509	02	017	1-C18
91 88 517	02	017	1-C18
96 99 786	08B	093	5-K22
96 99 794	08B	093	5-K22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02

6 -F02 *Deleted parts* *Utgångna artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 21 931			
43 21 949			
43 96 198			
43 96 222			
43 96 990			
43 97 022			
44 44 618			
44 45 987			
45 55 835			
45 56 510			
45 56 551			
45 56 569			
46 95 573			
46 95 581			
46 96 936			
46 96 944			
47 79 724			
48 47 281			
48 50 277			
48 50 418			
48 50 426			
48 51 770			
48 51 788			
48 53 651			
48 57 017			
48 57 033			
48 57 041			
49 60 233			
74 97 480			
74 97 498			
74 97 621			
74 97 639			
82 85 389			
84 83 893			
91 69 616			

Part No Art nr	Gr Gr	Page Sida	Grid Koord

Part No Art nr	Gr Gr	Page Sida	Grid Koord

Part No Art nr	Gr Gr	Page Sida	Grid Koord

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-J02,3-A02
4	Transmission	4-A02
5	Brakes	4-D02
6	Front assembly, Steering	4-F02
7	Suspension, Wheels	4-G02
8A	Body, external	5-A02
8B	Body, internal	5-H02
8C	Body, heating and ventilation	6-A02
8D	Tool, Labels	6-C02
10	Numerical register	6-D02