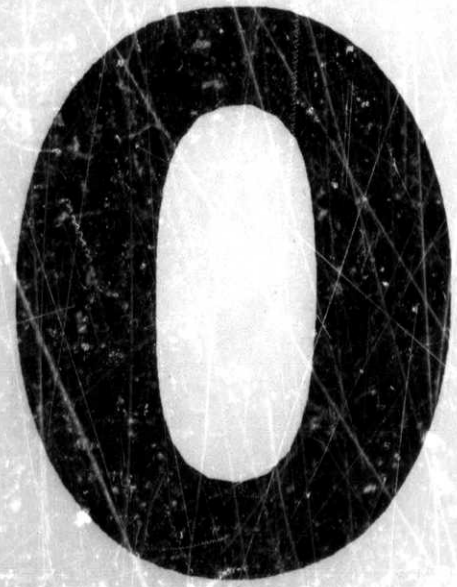


General
Allmänt
Generalidades

SAAB 9000

M 1985-1989

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 660530

© Saab Automobile AB 1990

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

0	General Allmänt Generalidades
2	Engine Motor Motor
3 A B	Electrical system Elektriskt system Sistema elétrico
4	Transmission Kraftöverföring Transmisión
5	Brakes Bromsar Frenos
6	Front assembly, steering Framvagn, styrinrättning Tren delantero, dirección
7	Suspension, wheels Fjädringssystem, hjul Suspensión, ruedas
8 A B C	Body Kaross Caroccería
9	Tools, labels Verktyg, etiketter Herramientas, etiquetas
10	Numerical register Nummerregister Indice numérico

GENERAL

INTRODUCTION	1-A05
ABBREVIATIONS	1-A06
MODEL IDENTIFICATION	1-A09
CHASSIS NUMBER	1-A11
ENGINE AND GEARBOX NUMBER	1-A13
STOCK-KEEPING LEVEL	1-A14
INSTRUCTIONS	1-A17

ALLMÄNT

INLEDNING	1-A05
FÖRKORTNINGAR	1-A06
MODELLIDENTIFIKATION	1-A09
CHASSINUMMER	1-A11
MOTOR- OCH VÄXELLÅDSNUMMER	1-A13
LAGERHÅLLNINGSNIVÅ	1-A15
ANVISNINGAR	1-A17

GENERALIDADES

INTRODUCCION	1-A05
ABREVIACIONES	1-A07
IDENTIFICACION DEL MODELO	1-A09
NUM. DE CHASIS	1-A11
NUM. DE MOTOR Y CAJA DE CAMBIOS	1-A13
NIVEL DE ALMACENAJE	1-A16
INSTRUCCIONES	1-A17

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

This Parts Catalogue is applicable to the 1985-1989 models of the Saab 9000. It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering uphlstery.

Denna reservdelskatalog för Saab 9000 omfattar årsmodellerna 1985-1989. Den kommer att hållas aktuell genom att nya fiche ges ut.
Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.

Este catálogo de piezas de recambio del Saab 9000 comprende los modelos de los anos 1985-1989, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, q e indicar el tipo del coche clave color de la tapicería.

A	Automatic transmission	Automatisk växellåda
ABS	Anti block system	Låsningsfria bromsar
AC	Air Conditioning	Luftkonditionering
ACC	Automatic Climate Control	Automatisk klimatkontroll
B202	2,0 l engine with twin cam	2,0 l motor med två kamaxlar
CL	Central locking	Centrallås
D	Door	Dörr
EAS	Electrically adjustable seat	Elmanövrerad stol
EGR	Exhaust Gas Recirculation	Avgasrecirkulation
ELCD	Evaporative Loss Control Device	Slutet bränslesytem
EM	Electrical mirrors	Elmanövrerade backspeglar
EW	Electrical window regulators	Elmanövrerade fönsterhissar
I	Fuel injection	Motor med bränsleinsprutning
KW	Kilo Watt	Kilo Watt
L	Length	Längd
LH	Left hand	Vänster
LHD	Left hand drive	Vänsterstyrd
M	Manual transmission	Manuell växellåda
MM	Millimetre	Millimeter
RH	Right hand	Höger
RHD	Right hand drive	Högerstyrd
SR	Sun roof	Sollucka
X	Quantity as requ	Antal efter behov

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

A	Caja de cambios automatico
ABS	Frenos antibloqueo
AC	Acondiciona miento de aire
ACC	Contol automatico de clima
B202	Motor de 2,0 litros con dos ejes de levas
CL	Cerradura
D	Puerta
EAS	Asientos maniobra eléctrica
EGR	Recirculation de los gase de escape
ELCD	Sistema de combustible cerrado
EM	Espejos retrovisores elétricos
ETS	Sistema electrónico de aceleración
EW	Levantacristales eléctricos
I	Motor de inyeccion
KW	Kilowattio
L	Longitud
LH	Lado izquierdo
LHD	Tracción a la izquierda
M	Caja de cambios manual
MM	Milímetros
RH	Lado derecho
RHD	Volante a la derecha
SR	Techo corredizo
X	Cantidad segun necesidad


AU	Australia	Australien	Australia
BE	Belgium	Belgien	Bélgica
CA	Canada	Canada	Canadá
CH	Switzerland	Schweiz	Suiza
DK	Denmark	Danmark	Dinamarca
DT	Germany	Tyskland	Alemania
EU	Europe	Europa	Europa
FE	Far East	Fjärran Östern	Extremo Oriente
FI	Finland	Finland	Finlandia
FR	France	Frankrike	Francia
GB	Great Britain	England	Gran Bretana
IT	Italy	Italien	Italia
JP	Japan	Japan	Japón
ME	Middle East	Mellersta Östern	Próximo Oriente
NO	Norway	Norge	Noruega
SE	Sweden	Sverige	Suecia
SG	Singapore	Singapore	Singapur
TW	Taiwan	Taiwan	Taiwan
UC	USA-California	USA-Kalifornien	EE.UU. Californi.
UF	USA-Federal	USA-Federalt	EE.UU., Federal
US	USA	USA	EE.UU

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3 \	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

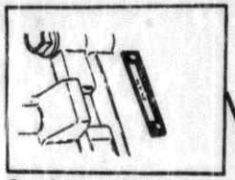

Gear box number
Växellådsnummer
Núm. de cajas de cambios

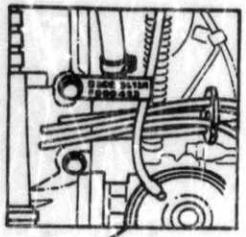

Engine number
Motornummer
Núm. de motor

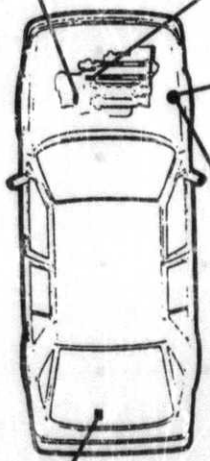

1985



Body colour code
Färgkod
Clave color coche

1985





Trim colour code
Klädselkod
Clave color trapicería

1986-



Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería

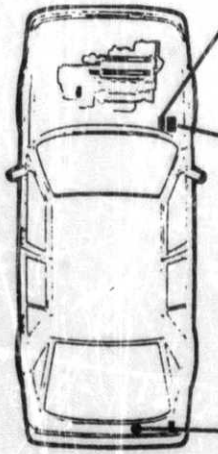




Body number
Karossnummer
Número de carrocería



Chassis number
Chassinummer
Núm. de chasis

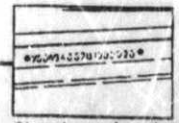

Chassis number stamped on the body.
Chassinumret är instansat i karossen.
Núm. de chasis estampado en la carrocería.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C01
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A01
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Vehicle Identification Number, VIN (chassis number)

YS3 C T 5 5 L X M 1 000001

Manufacturer Tillverkare Fabricante	Saab Automobile AB
Product line Produktline Producto	Saab 9000
Series Modellserie Serie	A -Z = internal use only
Body type Karosstyp Carrocería	4 = 4D 5 = 5D
Gear box Växellåda Cambio	5 = 5-speed, manual 8 = 4-speed, automatic
Engine type Motortyp Motor	D = B202 I L = B202 Turbo
Check number Kontrollsiffra Cifra de control	0 - 9 or X
Model year Årsmodell Modelo de ano	F = 1985 G = 1986 H = 1987 J = 1988 K = 1989
Assembly plant Tillverkningsort Lugar de Montaje	1 = Trollhättan, Sweden, line A 2 = Trollhättan, Sweden, line B 8 = Nystad, Finland 9 = Trollhättan, Sweden, line C
Serial number Tillverkningsnummer Número de serie	000001-

1985

YS3CT55L7F4001001-YS3CT55L1F4004280

1986

YS3CD55L2G1000001-YS3CC55D5G1028337

1987

YS3CD55L0H1000001-YS3CD55L5H1036881
YS3CD55L1H8000001-YS3CC55D6H8002175

1988

YS3CD55L3J1000001-YS3CD45L6J1032730
YS3CC55D1J2000001-YS3CD55L7J2019550
YS3CC55DXJ8000001-YS3CC55D3J8002009

For SE 1988B


YS3CD45L8J1050001-YS3CD55L1J1050735
YS3CC58D8J2030001-YS3CC55DXJ2032417
YS3CD58L2J8005001-YS3CC55D2J8005449

1989

YS3CC55D7K1000001-YS3CC45DXK1028918
YS3CD58L4K2000001-YS3CC45D2K2018183
YS3CT58L5K4000001-YS3CT58L1K4000030
YS3CD55L2K8000001-YS3CC55D0K8001577

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

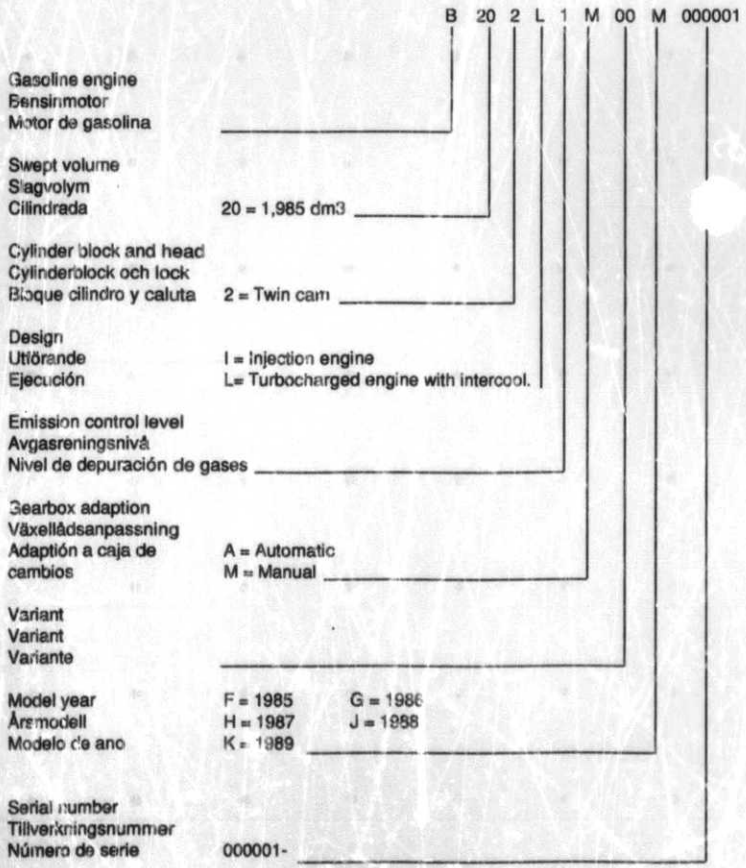

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SP/L column bellow.

Stock-keeping level 1	Parts for sevice and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts fromrecommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Oulet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Oulet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Automobile central stores in Nyköping, Sweden

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicarbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar ur lagerhållningsnivå 1-2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder artiklar ur lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saab Automobiles centrallager i Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los conceptos siguientes.

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc
Nivel 6	Artículos de poco movimiento en grado extremo

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente


Nivel 1	Talleres y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precesente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén pricipalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y alguns concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Saab Automobile almacén central en Nyköping, Suecia.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Microfiche layouts

Each mircofiche card has a heading which provides information on:



1. Car modell
2. Model years included on the microfiche. Edition and date.
3. Catalogue groups included on the microfiche.
4. Microfiche part number and language variant.
5. Microfiche card number.

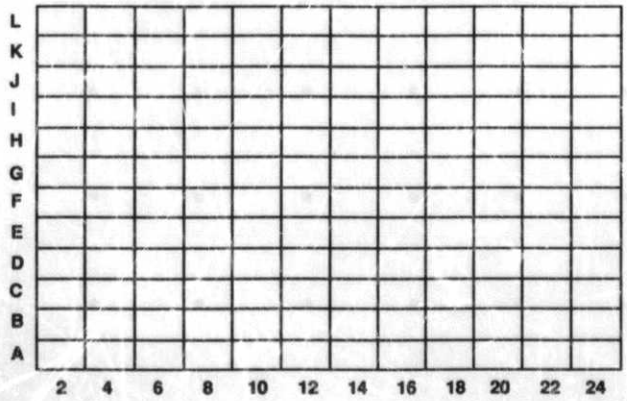

The microfiche card contains 12x12 boxes with illustration and text pages.
Each horizontal line has a letter combination and each vertical column has a digit combination.
Each box is thus given an alpha-numeric coordinate.

Microfichens uppläggning


Varje microfichekort har ett rubrikfält som ger information om:

1. Bilmodell
2. Årsmodeller som microfichen innehåller. Utgåva och datum.
3. Kataloggrupper som finns på kortet.
4. Microfichens artikelnummer och språkvariant.
5. Microfichekortets nummer.


Microfichekortet innehåller 12x12 rutor med bild och textsidor.
Varje horisontell rad har en bokstavsbeteckning och varje vertikal rad en sifferbeteckning.
Varje ruta får på dette sätt en koordinatbeteckning bokstav-siffra.

Disposición de la microficha

Cada tarjeta de microficha cuenta con un encabezamiento que proporciona la siguiente información:



1. Modelo del automóvil.
2. Años de modelos contenidos en la microficha. Edición y fecha.
3. Grupos de catálogo incluídos en la microficha.
4. Número de artículo y variante de idioma de la microficha.
5. Número de tarjeta de la microficha.

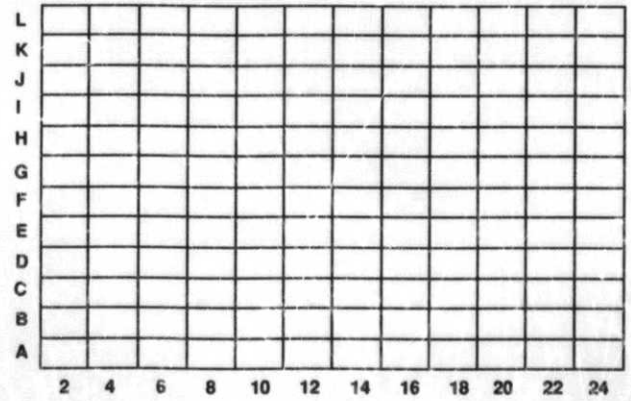

Cada tarjeta contiene 12x12 casillas con páginas de figuras y de texto.
Cada línea horizontal cuenta con una denominación alfabética y cada columna verticale con una numérica.
Cada casilla obtiene de esta manera una coordenada alfa-numérica.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contsct housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E0?
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


Illustration page
Each text section has an illustration page. The illustration page is repeated as long as the text section in question is continued.

A complete unit is marked with a ring around the item number.

A kit can be indicated through the item number poiting to several parts.

A kit can also be indicated through the item number being repeated several times.

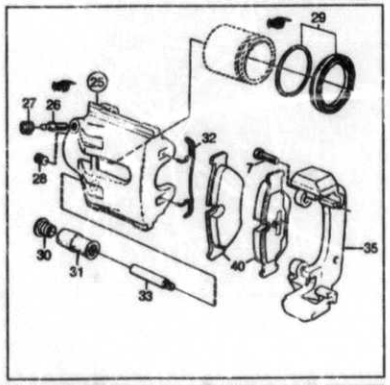

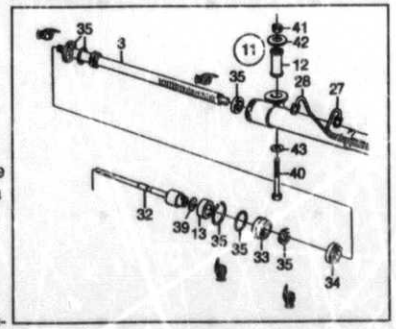

Bildsida
Varje textsida har en bildsida. Bildsidan uppredas så länge resp. textavsnitt varar.

Komplett enhet markeras med en ring runt positionsnumret.

En sats kan visas genom att positionsnumret pekar på flera delar.

En sats kan också visas genom att positionsnumret upprepas flera gånger.

Las páginas con figuras
A cada sección de texto le corresponde una página con una figura. Esta página se repite hasta que el texto en cuestión haya finalizado.

Cada unidad completa se marca con un círculo alrededor del número de posición.


Un juego puede ser indicado con el número de posición señalando hacia las distintas piezas.

Un juego puede también ser indicado repitiendo varias veces el número de posición.

Deviations for certain markets or alternative designs are sometimes indicated in a box.

Avvikelser för vissa marknader eller alternativa utföranden visas ibland i ruta.


Las posibles distintas ejecuciones para algunos mercados, o diseños alternativos, son mostrados a veces en recuadros en una casilla.

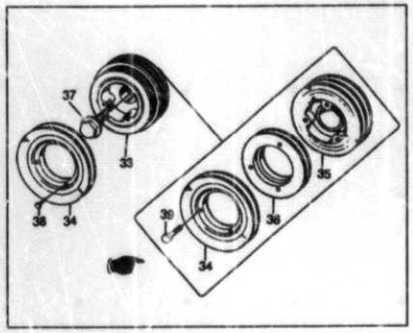

Adjecent parts are indicated on certain illustrations by means of dotted lines or with a rhomb and a note on the text page indicates where you can find the part.

På vissa bilder tecknas *närliggande artiklar* in med prickad linje eller med en romb och en not på textsidan visar var du kan finna artikeln.

Las piezas adyacentes han sido dibujadas en algunas ilustraciones con líneas punteadas o con un rombo, indicando una nota en la página de texto donde puede encontrarse la pieza.

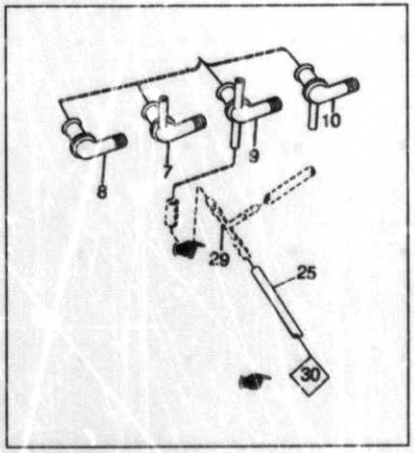


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

1-A21

Text page
Las páginas con texto

Text sida

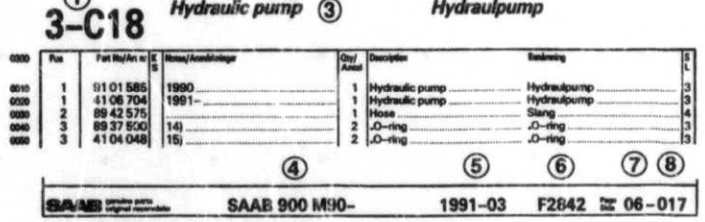


1. Microfiche coordinate for the retrievel system, 3-C18 where 3 is the serial number of the microfiche card, C is the microfiche line and 18 is the microfiche column.
2. Subgroup titel in English and Swedish.
3. Section title in English and Swedish.
4. Car model and model years included in the microfiche card.
5. Date (for internal use).
6. illustration number (for internal use).
7. Main group.
8. Page number within main group.

1. Fichekoordinat för söksystemet, 3-C18 där 3 är fichekortets löpnummer, C är horisontell ficherad och 18 vertikal ficherad.
2. Undergruppstitel på engelska och svenska.
3. Avsnittstitel på engelska och svenska.
4. Bilmodell och årsmodeller som fichekortet täcker.
5. Datum (för internt bruk).
6. Illustrations nummer (för internt bruk).
7. Huvudgrupp.
8. Sidnummer inom huvudgruppen.

1. Coordenada de la microficha para el sistema de búsqueda, 3-C18 en la que 3 es el número de serie de la tarjeta, C es la línea de la microficha y 18 la columna de la misma.
2. Título del subgrupo en inglés y sueco.
3. Título de la sección en inglés y sueco.
4. Modelos y años de automóviles incluidos en la tarjeta.
5. Fecha (para uso interno).
6. Número de la figura (para uso interno).
7. Groupo principal.
8. Número de página dentro del grupo principal.

1-A22

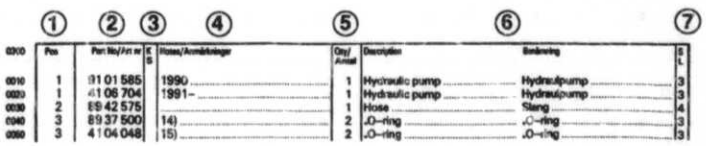

1. Item numbers for the part illustrated on the illustration page. Note that the item can be repeated.
   The item is specified in most cases with digits but digit + letter combinations can also occur.
2. Part numbers. A dot to the left of the part number indicates that the number has been added since the preceding edition.
3. An "S" in this column indicates that the part is included in a kit.
4. Comments column. Limitations and restrictions of various kinds are indicated here.
   To permit part numbers which have expired to be identified, the old numbers is written in parentheses.
5. Quantity column.
6. Names in English and Swedish. A dot in front of the name indicates that the part is included in the immediately superior article. For example: item 3 is included in item 2 and accompanies item 2 when item 2 is purchased.
7. Stock keeping level.

1. Positionsnummer på den illustrerade artikeln på bildsidan. Observera att position kan upprepas.
   Positionen anges i de flesta fall med siffror men även siffra + bokstav kan förekomma.
2. Artikelnummer. En punkt till vänster om artikelnumret visar att numret tillkommit sedan föregående utgåva.
3. Ett "S" i kolumnen markerar att artikeln ingår i en sats.
4. Anmärkningskolumn, här anges begränsningar och restriktioner av olika slag.
   För att kunna identifiera utgångna artikelnummer skrivs det gamla numret ut inom parentes.
5. Antalskolumn.
6. Benämning på engelska och svenska. Punktmarkering framför benämningen anger att artikeln ingår i närmast överordnad artikel. Ex: pos 3 ingår i pos 2 och medföljer vid köp av pos 2.
7. Lagerhållningsnivå.

1. Números de posición de la pieza presentada en la página con figura. Observar que esta pieza puede aparecer varias veces.
   La posición se indica en la mayoría de los casos con cifras aunque también pueden aparecer combinaciones alfanuméricas.
2. Números de artículo. Un punto a la izquierda del número de artículo indica que este número ha sido añadido después de la edición precedente.
3. Una "S" en la columna indica que el artículo forma parte de un juego.

4. Columna para observaciones. En esta se indican las distintas limitaciones y restricciones.
   Para poder identificar un número de artículo suprimido, los números antiguos aparecen entre paréntesis.
5. Columna de cantidad.
6. Denominaciones en inglés y sueco. La marcación punteada delante de la denominación indica que el artículo forma parte del artículo inmediatamente superior. Por ejemplo: el art. 3 forma parte del art. 2 y es incluido al comprar el art. 2.
7. Nivel de almacenamiento.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Master and group indexes

The catalogue is divided into 12 main groups. The master index which is located on the top righthand corner on each microfiche box, indicates the coordinate at which each main group begins.

Master- och gruppindex

Katalogen är indelad i 12 huvudgrupper. Masterindex, som finns i övre höger hörn på varje ficheruta, anger på vilken koordinat varje huvudgrupp börjar.

Indices principal y de grupos

El catálogo se divide en 12 grupos principales. El índice principal, situado en la esquina superior derecha de cada recuadro de la microficha, indica la coordenada de comienzo de cada grupo principal.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3	Electrical system, Instruments	2-A02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-C02
7	Suspension, Wheels	3-E02
8A	Body, external	3-F02
8B	Body, internal	4-A02
8C	Body, heating and ventilation	4-G02
9	Tools, Labels	4-I02
10	Numerical register	4-J02

The main groups are subdivided into subgroups. The group index indicates the coordinate at which the subgroups begin.

Huvudgrupperna är indelade i undergrupper. Gruppindex anger på vilken koordinat undergrupperna börjar.

Los grupos principales están divididos en subgrupos. El índice de grupo indica la coordenada de comienzo de los distintos subgrupos.

2 GROUP INDEX

Engine body	1-B10
Lubrication system	1-C16
Fuel system	1-D02
Inlet and exhaust system	1-D24
Cooling system	1-F18
Engine control	1-G18
Supercharging system	1-G20
Kits	1-H02

Numerical register
Registro numérico

Nummerregister

4-K23 *Numerical register*

Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
98 33 385	08A	089	3–H18	98 41 958	03	055	2–C06	98 67 896	088	071	4–C24	98 81 655	088	077	4–D06
98 33 476	088	093	4–D22	98 43 606	088	113	4–E18	98 67 896	088	075	4–D04	98 81 806	088	117	4–E22
98 33 484	088	093	4–D22	98 47 377	08A	089	3–H18	98 68 077	088	069	4–C12	98 81 913	08A	111	3–H6
98 33 492	088	093	4–D22	98 47 385	08A	089	3–H18	98 68 077	088	073	4–D02	98 81 921	08A	111	3–H6
98 33 500	088	093	4–D22	98 48 169	088	127	4–F06	98 68 985	088	069	4–C12	98 82 061	088	079	4–D08

On the last microfiche card there is a numerical register with coordinate reference to the page where the part number is located.
En la última tarjeta de la microficha exista un registro numérico que mediante coorde-

På sista fichekortet i katalogen finns ett nummerregister med koordinathänvisning till den sida som artikelnumret finns på.

nadas indica la página donde aparece el número de artículo.

New parts
Artículos nuevos

Nya artiklar

4-K24 *New parts*

Nya artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 69 829	03	117	3–E22	41 75 823	03	053	2–C06								
40 69 839	03	145	3–G02	41 75 849	03	085	2–D14								
40 84 935	088	013	4–A14	41 95 964	09	005	4–A06								
40 84 943	088	011	4–A12	42 83 198	06	017	3–C18								
40 84 950	088	011	4–A12	43 50 427	08C	009	4–G10								

In the end of the numerical register there is a register for additional parts since the preceding edition.
Al final del registro numérico existe un registro sobre los artículos aparecidos desde

I slutet av nummerregistret finns ett register på nytillkomna artiklar sedan föregående utgåva.
la edición precedente.

Deleted parts
Artículos suprimidos

Utgångna artiklar

4-L02 *Deleted parts*

Utgångna artiklar

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
99 52 717															
75 67 298															
82 43 990															
82 44 006															
84 86 316															

Last in the numerical register there is a register for parts that has been deleted since the preceding edition.
Al final del registro numérico existe un registro de los artículos suprimidos desde la edición precedente.

Sist i nummerregistret finns ett register på artiklar som utgått sedan föregående utgåva.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

1-B02



Engine
Motor
Motor

TABLE OF CONTENTS

Engine body		
Engine suspension	2 : 5	1-B06
Cylinder head 1985	2 : 7	1-B08
Cylinder head 1986	2 : 9	1-B10
Cylinder block	2 : 15	1-B16
Short engine	2 : 17	1-B18
Transmission	2 : 19	1-B20
Crankshaft, connecting rod, piston, flywheel	2 : 23	1-B24
Lubrication system		
Oil pump, oil filter, engine Turbo	2 : 27	1-C04
Oil pump, oil filter, engine I	2 : 31	1-C08
Oil pipes, turbo	2 : 35	1-C12
Fuel system		
Air cleaner, engine Turbo M -1987	2 : 37	1-C14
Air cleaner, engine Turbo M 1988-	2 : 39	1-C16
Air cleaner, engine Turbo A	2 : 41	1-C18
Air cleaner, engine I, -1988	2 : 43	1-C20
Air cleaner, engine I, 1989	2 : 45	1-C22
Filler device, hoses, etc	2 : 47	1-C24
Fuel tank, etc	2 : 51	1-D04
Fuel pump	2 : 57	1-D10
Fuel pump, engine I, 73,136)	2 : 59	1-D12
Air mass meter	2 : 61	1-D14
Evaporative loss control device (ELCD) 1986-	2 : 67	1-D20
Inlet and exhaust system		
Inlet manifold, 1985	2 : 69	1-D22
Inlet manifold, 1986-	2 : 71	1-D24
Parted inlet manifold	2 : 73	1-E02
Throttle valve housing, 1985	2 : 75	1-E04
Throttle valve housing, 1986-	2 : 77	1-E06
Auxiliary air regulator, hoses, -1985	2 : 81	1-E10
Automatic idling speed control system 1986-	2 : 83	1-E12
Exhaust manifold, engine Turbo	2 : 85	1-E14
Exhaust manifold, engine I, 1987-	2 : 87	1-E16
Exhaust gas recirculation (EGR)	2 : 89	1-E18
Pulse air system -1988	2 : 93	1-E22
Mufflers, exhaust pipe, 1985	2 : 95	1-E24
Mufflers, exhaust pipe, engine Turbo 1986-	2 : 97	1-F02
Mufflers, exhaust pipe, engine Turbo with catalytic converter 1986-	2 : 99	1-F04
Mufflers, exhaust pipe, engine I 1986-	2 : 101	1-F06
Mufflers, exhaust pipe, engine I with catalytic converter 1986-	2 : 103	1-F08
Cooling system		
Radiator, hoses, etc	2 : 105	1-F10
Fan, etc engine Turbo	2 : 109	1-F14
Fan, etc engine I	2 : 111	1-F16
Charge cooler	2 : 113	1-F18
Air oil cooler engine, 1985	2 : 115	1-F20
Air oil cooler engine, 1986-	2 : 117	1-F22
Oil cooler, automatic transmission	2 : 119	1-F24
Coolent pump	2 : 123	1-G04
Thermostat, water tube, etc	2 : 125	1-G06
Engine control		
Accelerator control	2 : 127	1-G08
Supercharging system		
Turbocharger	2 : 129	1-G10
APC	2 : 133	1-G14
Kits		
Engine	2 : 137	1-G18

73. Ch. J1006799-, J2003029-, J8000558-, I WITHOUT CATALYTIC CONVERTER.
136. Ch. J1026230-, J2015406-, J8001594-, I WITH CATALYTIC CONVERTER.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-B03

INNEHÅLLSFÖRTECKNING

Motorkropp		
Motorupphängning	2 : 5	1-B06
Cylinderhuvud 1985	2 : 7	1-B08
Cylinderhuvud 1986	2 : 9	1-B10
Cylinderblock	2 : 15	1-B16
Grundmotor	2 : 17	1-B18
Transmission	2 : 19	1-B20
Vevaxel, vevstake, kolv, svänghjul	2 : 23	1-B24
Smörjsystem		
Oljepump, oljefilter, motor Turbo	2 : 27	1-C04
Oljepump, oljefilter, motor I	2 : 31	1-C08
Oljerör, Turbo	2 : 35	1-C12
Bränslesystem		
Luftrenare, motor Turbo M -1987	2 : 37	1-C14
Luftrenare, motor Turbo M 1988-	2 : 39	1-C16
Luftrenare, motor Turbo A	2 : 41	1-C18
Luftrenare, motor I, -1988	2 : 43	1-C20
Luftrenare, motor I, 1989	2 : 45	1-C22
Påfyllningsdon, slangar, etc	2 : 47	1-C24
Bränsletank, etc	2 : 51	1-D04
Bränslepump	2 : 57	1-D10
Bränslepump, motor I, 73,136).	2 : 59	1-D12
Luftmassamätare	2 : 61	1-D14
Slutet bränslesystem (ELCD) 1986-	2 : 67	1-D20
Inlopps- och avgassystem		
Inloppsrör, 1985	2 : 69	1-D22
Inloppsrör, 1986-	2 : 71	1-D24
Delat inloppsrör	2 : 73	1-E02
Spjällhus, 1985	2 : 75	1-E04
Spjällhus, 1986-	2 : 77	1-E06
Tillsatsluftslid, slangar, -1985	2 : 81	1-E10
Automatisk tomgångsreglering 1986-	2 : 83	1-E12
Avgassamlare, motor Turbo	2 : 85	1-E14
Avgassamlare, motor I 1987-	2 : 87	1-E16
Avgasrecirculation (EGR)	2 : 89	1-E18
Luftinblåsningssystem -1988	2 : 93	1-E22
Ljuddämpare, avgasrör, 1985	2 : 95	1-E24
Ljuddämpare, avgasrör, motor Turbo 1986-	2 : 97	1-F02
Ljuddämpare, avgasrör, motor Turbo med katalytisk reaktor 1986-	2 : 99	1-F04
Ljuddämpare, avgasrör, motor I 1986-	2 : 101	1-F06
Ljuddämpare, avgasrör, motor I med katalytisk reaktor 1986-	2 : 103	1-F08
Kylsystem		
Kylare, slangar, etc	2 : 105	1-F10
Fläkt, etc motor Turbo	2 : 109	1-F14
Fläkt, etc motor I	2 : 111	1-F16
Laddluftkylare	2 : 113	1-F18
Luftoljekylare motor, 1985	2 : 115	1-F20
Luftoljekylare motor, 1986-	2 : 117	1-F22
Oljekylare automatväxellåda	2 : 119	1-F24
Kylvätskepump	2 : 123	1-G04
Termostat, vattenrör, etc	2 : 125	1-G06
Motorreglage		
Gasreglage	2 : 127	1-G08
Överladdningssystem		
Turbokompressor	2 : 129	1-G10
APC	2 : 133	1-G14
Satser		
Motor	2 : 137	1-G18

73. Ch. J1006799-, J2003029-, J8000558-, I UTAN KATALYTISK REAKTOR.
136. Ch. J1026230-, J2015406-, J8001594-, I MED KATALYTISK REAKTOR.

1-B04

SUMARIO

Cuerpo del motor		
Soportes del motor	2 : 5	1-B06
Culata 1985	2 : 7	1-B08
Culata 1986	2 : 9	1-B10
Bloque de cilindros	2 : 15	1-B16
Moteur de base	2 : 17	1-B18
Distribucion	2 : 19	1-B20
Ciguenal, bielas, pistones, volante	2 : 23	1-B24
Sistema de engrase		
Bomba de aceite, filtro de aceite, motor Turbo	2 : 27	1-C04
Bomba de aceite, filtro de aceite, motor de inyeccion	2 : 31	1-C08
Tubo de aceite, Turbo	2 : 35	1-C12
Sistema de combustible		
Depurador de aire, motor Turbo M -1987	2 : 37	1-C14
Depurador de aire, motor Turbo M 1988-	2 : 39	1-C16
Depurador de aire, motor Turbo A	2 : 41	1-C18
Depurador de aire, 1986-1988 motor deiny eccion	2 : 43	1-C20
Depurador de aire, 1989- motor de inyeccion	2 : 45	1-C22
Combustible dispositivo de illenado, conductos de combustible	2 : 47	1-C24
Desposito de combustible	2 : 51	1-D04
Bomba de combustible	2 : 57	1-D10
Bomba de combustible, motor I, 73,136)	2 : 59	1-D12
Medidor de flujo de aire	2 : 61	1-D14
Sistema de admision y de escape		
Sistema cerrado de combustible (ELCD) 1986-	2 : 67	1-D20
Colector de admision, 1985	2 : 69	1-D22
Colector de admision, 1986-	2 : 71	1-D24
Divisible colector de admision	2 : 73	1-E02
Caja de maripoa, 1985	2 : 75	1-E04
Caja de maripoa, 1986-	2 : 77	1-E0
Regulador de aire adicional, mangneras, etc -1985	2 : 81	1-E10
Regulacion automatica de ralenti 1986-	2 : 83	1-E12
Colector de escape, motor Turbo	2 : 85	1-E14
Colector de escape, motor de inyeccion 1987-	2 : 87	1-E16
Recirculation de gases de escape (EGR)	2 : 89	1-E18
Pulse air system -1988	2 : 93	1-E22
Silencioso, tubo de escape, 1955	2 : 95	1-E24
Silencioso, tubo de escape, motor Turbo 1986-	2 : 97	1-F02
Silencioso, tubo de escape, motor Turbo reactor catalituco 1986-	2 : 99	1-F04
Silencioso, tubo de escape, motor de inyeccion 1986-	2 : 101	1-F06
Silencioso, tubo de escape, motor de inyeccion reactor catalituko 1986-	2 : 103	1-F08
Sistema de refrigeracion		
Radiador, mangueras, etc	2 : 105	1-F10
Ventilador, etc motor Turbo	2 : 109	1-F14
Ventilador, etc motor de inyeccion	2 : 111	1-F16
Radiador de air de alimentacion	2 : 113	1-F18
Radiador de aceite a aire, motor, 1985	2 : 115	1-F20
Radiador de aceite a aire, motor, 1986-	2 : 117	1-F22
Radiador de aceite, caja de cambios automatica	2 : 119	1-F24
Bomba de liquido de refrigeracion	2 : 123	1-G04
Termostato, tubo de agua, etc	2 : 125	1-G06
Mandos del motor		
Mando de acelerador	2 : 127	1-G08
Sistema de sobrealimentacion		
Turbocompresor	2 : 129	1-G10
APC	2 : 133	1-G14
Juegos completos		
Motor	2 : 137	1-G18

73. Ch. J1006799-, J2003029-, J8000558-, I SIN CONVERTIDOR CATALITICO.
135. Ch. J1026230-, J2015405-, J8001594-, I CON CONVERTIDOR CATALITICO.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-B06

Engine suspension
Motorupphängning

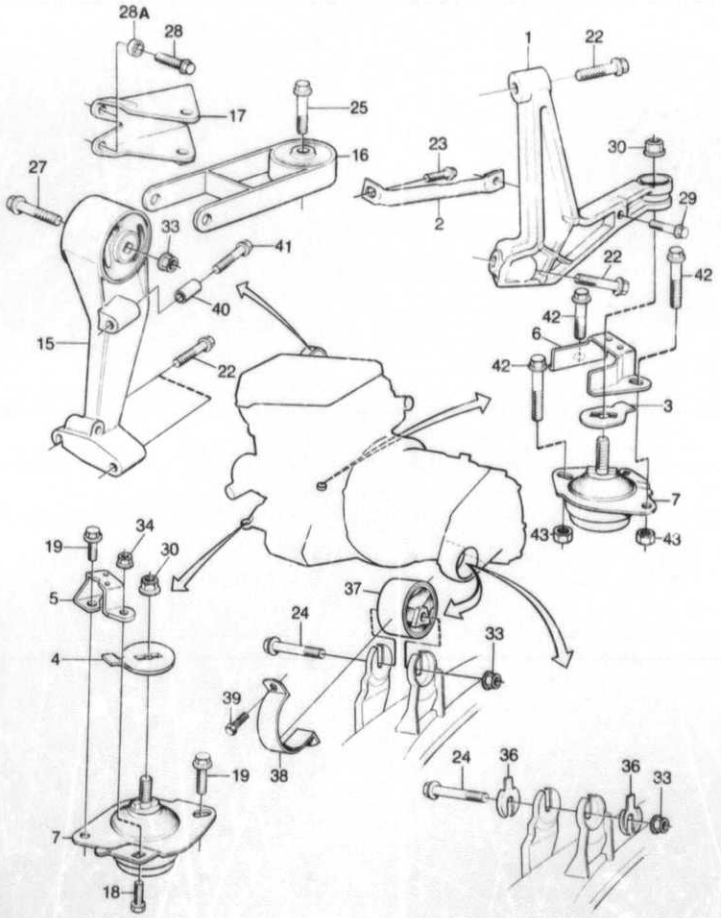

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 77 695		1985,(7550510)	1	Bracket	Konsol	5
0020	1	*75 59 743*		1986-,51) NLS - USE 7577695	1	Bracket	Konsol	5
0030	1	75 77 695		52)	1	Bracket	Konsol	5
0040	2	75 50 528			1	Stay	Stag	4
0050	3	75 51 971			1	Limiter	Begränsare	5
0060	4	75 51 963			1	Limiter	Begränsare	5
0070	5	*75 59 396*		179) NLS - USE 4028775	1	Stop	Anslag	5
0080	5	40 28 775		180)	1	Stop	Anslag	5
0090	6	75 51 997			1	Stop	Anslag	5
0100	7	75 51 104			2	Vibration damper	Vibrationsdämpare	3
0110	15	75 77 554		28), (7559164)	1	Engine anchorage	Motorfäste	4
0120	15	75 77 554		29,164), (7576739)	1	Engine anchorage	Motorfäste	4
0130	15	75 77 554		165)	1	Engine anchorage	Motorfäste	4
0140	16	75 54 439		28)	1	Torque rod	Momentstag	5
0150	16	*75 76 721*		29) NLS - USE 7599913	1	Torque rod	Momentstag	5
0160	17	*93 83 175*		25) NLS - USE 8786071	1	Bracket	Fäste	6
0170	17	*75 76 283*		26,154) NLS - USE 8786071	1	Bracket	Fäste	5
0180	17	87 86 071		155)	1	Bracket	Fäste	5
0190	18	75 51 385			1	Screw	Skruv	5
0200	19	81 30 064			2	Screw	Skruv	5
0210	22	79 72 292			4	Screw	Skruv	5
0220	23	79 73 779			1	Screw	Skruv	5
0230	24	79 73 571			1	Screw	Skruv	5
0240	25	79 77 267			1	Screw	Skruv	5
0250	27	79 74 777			1	Screw	Skruv	5
0260	28	80 82 943			3	Screw	Skruv	5
0270	28A	75 77 893			3	Spacer	Distans	3
0280	29	79 75 527		51)	1	Screw	Skruv	5
0290	29	79 72 292		52)	1	Screw	Skruv	5
0300	30	79 71 765			2	Nut	Mutter	5
0310	33	79 75 220			2	Nut	Mutter	5
0320	34	79 71 658			1	Nut	Mutter	5
0330	36	93 19 294			2	Washer	Bricka	5
0340	37	75 51 831		A	1	Vibration damper	Vibrationsdämpare	5
0350	38	75 51 328		A	1	Cap	Överfall	6
0360	39	79 70 288		A	2	Screw	Skruv	5
0370	40	75 36 857		27)	1	Spacer	Distans	6
0380	41	79 72 292			1	Screw	Skruv	5
0390	41	79 73 803		27)	1	Screw	Skruv	5
0400	42	81 30 064		-1987	3	Screw	Skruv	5
0410	42	79 74 447		1988-	3	Screw	Skruv	5
0420	43	79 69 306		1988-	3	Lock nut	Låsmutter	5


25. Ch. -G1022636.
26. Ch. G1022637-.
27. For cars with parted inlet manifold. För bilar med delat inloppsrör.
28. Ch. -G1027510.
29. Ch. G1027511-.
    Ch. -H1002585, -H8000082
52. Ch. H1002586-, H8000083-.
154. Ch. --J8005004, --J1000527, --J2000274.
155. Ch. J8005005-, J1000528-, J2000275-.
164. Ch. -K1005544, -K2002462, -K8005444.
165. Ch. K1005544-, K2002462-, K8005444-.
179. Ch. --K1023874, --K2014223, --K8000954.
180. Ch. K1023875-, K2014224-, K8000955-.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

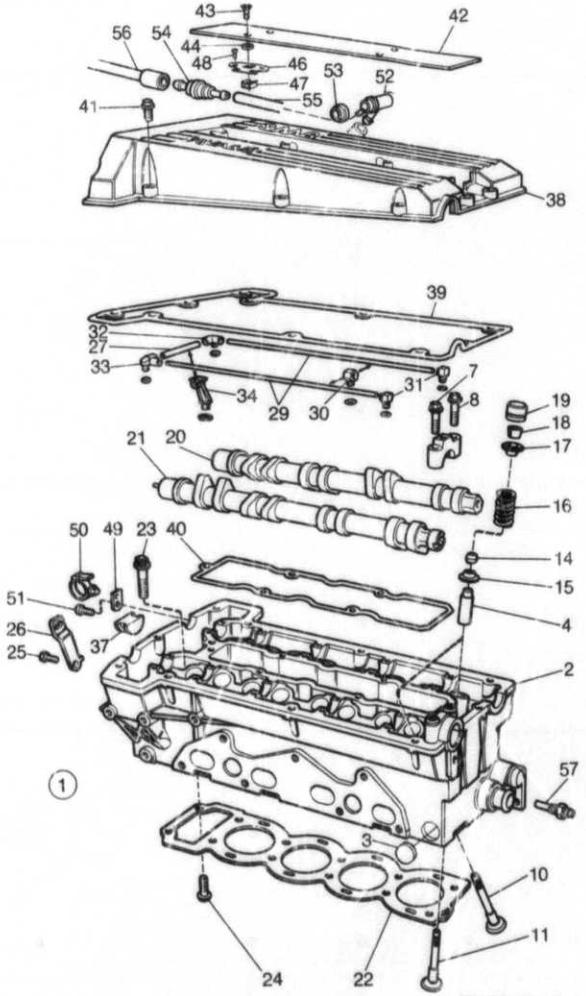

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 86 100		205,700), (9358219)	1	Cylinder head	Cylinderlock	5
0020	2	*93 58 235*		NLS	1	.Cylinder head	.Cylinderlock	5
0030	3	81 23 218			2	..Sealing washer	..Tätningsbricka	3
0040	4	75 60 154			16	..Valve guide	..Ventilstyrning	4
0050	7	81 25 213			12	..Screw	..Skruv	5
0060	8	93 58 870			8	..Screw	..Skruv	5
0070	10	*75 62 002*		INLET, (7500077) NLS - USE 7484801	8	.Inlet valve	.Inloppsventil	3
0080	11	*75 00 085*		OUTLET NLS - USE 9165598	8	.Exhaust valve	.Avgasventil	2
0090	14	75 00 713			16	.Seal	.Tätning	3
0100	15	75 05 134			16	.Washer	.Bricka	4
0110	16	*93 58 391*		NLS - USE 9129651	16	.Spring	.Fjäder	3
0120	17	75 01 349			16	.Washer	.Bricka	4
0130	18	75 15 547			32	.Valve cone	.Knaster	2
0140	19	*93 57 716*		NLS - USE 9134420	16	Tappet	Ventillyftare	
0150	20	75 60 808		206),(7509227)	1	Camshaft	Kamaxel	5
0160	21	75 60 964		207),(7509235)	1	Camshaft	Kamaxel	5
0170	22	75 16 529			1	Gasket	Packning	2
0180	23	*75 18 335*		NLS - USE 9129909	10	Screw	Skruv	5
0190	24	81 25 189			2	Screw	Skruv	5
0200	25	75 04 749			1	Screw	Skruv	5
0210	26	75 21 222			1	Lifting eye	Lyftögla	6
0220	27	75 08 463			1	Pipe	Rör	3
0230	29	75 08 476			2	Pipe	Rör	3
0240	30	74 80 429		(7518434)	6	Nipple	Nippel	3
0250	31	74 80 437		(7518442)	2	Nipple	Nippel	3
0260	32	74 80 445		(7518459)	1	Nipple	Nippel	3
0270	33	74 80 452		(7518467)	1	Nipple	Nippel	3
0280	34	74 80 460		(7519523)	1	Nipple	Nippel	3
0290	37	75 00 069	S		3	Plug	Plugg	2
0300	38	75 22 303			1	Valve cover	Ventilkåpa	5
0310	39	75 20 380	S		1	Gasket	Packning	
0320	40	93 59 647	S		1	Gasket	Packning	1
0330	41	75 60 931			16	Screw	Skruv	5
0340	42	75 03 709			1	Cover	Lock	3
0350	43	*75 03 725*		217) NLS - USE 7522790, 7561673	2	.Screw	.Skruv	5
0360	44	81 23 465		217)	2	.E-circlip	.Spårryttare	6
0370	46	75 03 469			2	Bracket	Fäste	6
0380	47	79 70 403			2	Cage nut	Korgmutter	5
0390	48	75 20 240			4	Screw	Skruv	5
0400	49	75 11 975			2	Bracket	Konsol	5
0410	50	75 12 015			2	Tensioning band	Spännband	5
0420	51	80 82 935		(8082919)	2	Screw	Skruv	5
0430	52	75 17 048			1	Nipple	Nippel	5
0440	53	75 15 190		(8360257)	1	Bushing	Bussning	5
0450	54	75 21 313			1	Non-return valve	Backventil	6
0460	55	91 36 243		L=85 MM	1	Vaccum hose	Vakuumslang	5
0470	56	91 36 243		L=360 MM	1	Vaccum hose	Vakuumslang	5
0480	57	*88 00 914*		NLS - USE 9108291	1	Sensor	Givare	2
0490								
0500		88 17 512		See page 2-137, 1-G18	X	Gasket kit	Packningsats	1
0510		88 18 007		See page 2-137, 1-G18	X	Gasket kit	Sotningssats	2
0520								
0530		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


205. With valves Med ventiler
206. Intake Inlopp
207. Exhaust Avgas
217. Superseded by 7522790 and 7561673. Ersatt av 7522790 och 7561673.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A01
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

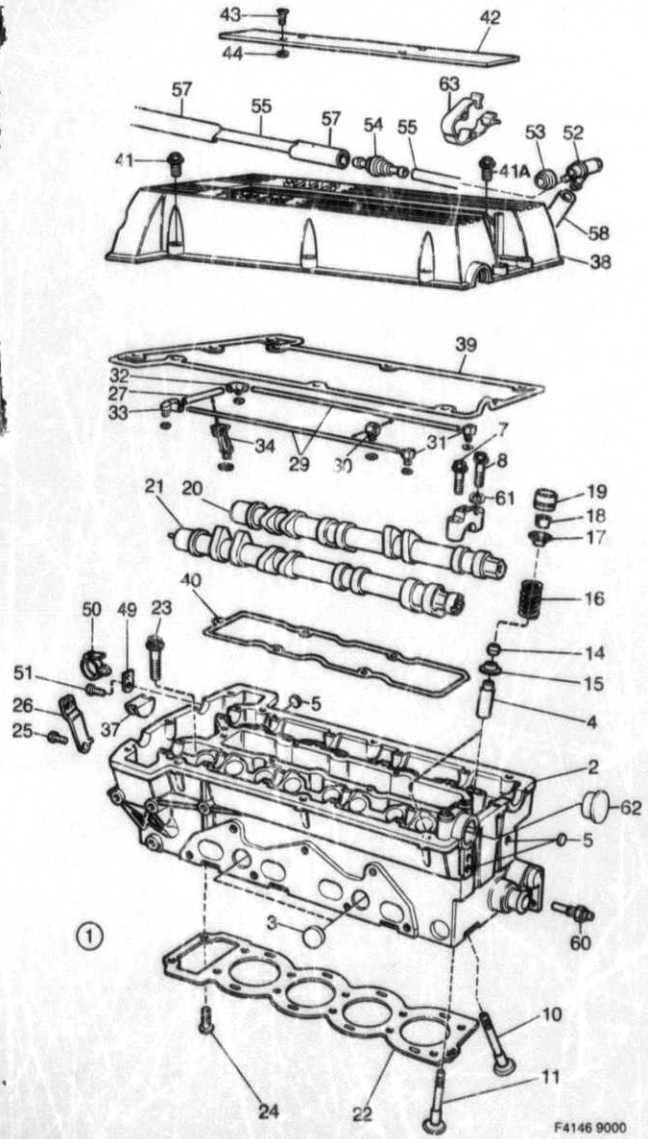

Engine body

1-B10 Cylinder head 1986-1989

Motorkropp

Cylinderhuvud 1986-1989

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 07 376		205,700),-1987,(7561996)	1	Cylinder head	Cylinderhuvud	5
0020	1	91 07 376		205,700),1988-,103)	1	Cylinder head	Cylinderhuvud	5
0030	1	*75 86 134*		104,205,700) NLS - USE 9107376	1	Cylinder head	Cylinderhuvud	5
0040	1	*74 84 900*		1988-,103,205,209,700), TURBO ME NLS	1	Cylinder head	Cylinderhuvud	5
0060	1	*74 85 998*		104,178,205,209,700) TURBO ME NLS - USE 9107376	1	Cylinder head	Cylinderhuvud	5
0080	1	*74 85 998*		178,205,700), TURBO DI NLS - USE 9107376	1	Cylinder head	Cylinderhuvud	5
0100	2	*75 23 996*		103,220) NLS - USE 4161162, 7563042, 9107053	1	.Cylinder head	.Cylinderlock	5
0110	2	*75 86 142*		104) NLS - USE 4161162, 7563042, 9107053	1	.Cylinder head	.Cylinderlock	5
0120	3	81 23 218		-1987	2	..Sealing washer	..Tätningsbricka	3
0130	3	75 88 320		1988-	2	..Sealing washer	..Tätningsbricka	3
0140	4	75 60 154			16	..Valve guide	..Ventilstyrning	4
0150	4	75 69 734		208)	16	..Valve guide	..Ventilstyrning	2
0160	5	81 23 143		104)	3	..Plug	..Plugg	3
0170	7	81 25 213			12	..Screw	..Skruv	5
0180	8	93 58 870		202)	8	..Screw	..Skruv	5
0190	8	75 85 847		203)	8	..Screw	..Skruv	5
0200	10	*75 62 002*		-1987, INLET NLS - USE 7484801	8	.Inlet valve	.Inloppsventil	3
0210	10	74 84 801		1988-,178), INLET	8	.Inlet valve	.Inloppsventil	3
0220	11	*75 00 085*		OUTLET NLS - USE 9165598	8	.Exhaust valve	.Avgasventil	2
0230	14	75 00 713			16	.Seal	.Tätning	3
0240	15	75 05 134			16	.Washer	.Bricka	4
0250	16	*93 58 391*		NLS - USE 9129651	16	.Spring	.Fjäder	3
0260	17	75 01 349			16	.Washer	.Bricka	4
0270	18	75 15 547			32	.Valve cone	.Knaster	2
0280	19	*93 57 716*		NLS - USE 9134420	16	Tappet	Ventillyftare	
0290	20	75 60 808		206),-1988, TURBO	1	Camshaft	Kamaxel	5
0300	20	75 60 808		206,500),1989-, TURBO	1	Camshaft	Kamaxel	5
0310	20	75 61 467		206,500),1989-, TURBO DI	1	Camshaft	Kamaxel	5
0320	20	75 61 467		206), I	1	Camshaft	Kamaxel	5
0330	21	75 60 964		207)	1	Camshaft	Kamaxel	5
0340	22	75 16 529		-1986	1	Gasket	Packning	2
0350	22	*75 85 045*		-1986, SE, (7561301) NLS - USE 9169079	1	Gasket	Packning	2
0360	22	*75 85 045*		1987-, (7561301) NLS - USE 9169079	1	Gasket	Packning	2
0370	23	*75 18 335*		NLS - USE 9129909	10	Screw	Skruv	5
0380	24	81 25 189			2	Screw	Skruv	5
0390	25	75 04 749			1	Screw	Skruv	5
0400	26	75 21 222			1	Lifting eye	Lyftögla	6
0410	27	75 08 468		103)	1	Pipe	Rör	3


103. Engine -J082585.
104. Engine J082586-.
178. With Stellite coated intake valves Med Stellitebelagda inloppsventiler.
202. Engine -J082585.
203. Engine J082586-.
205. With valves Med ventiler
206. Intake Inlopp
207. Exhaust Avgas
208. Oversize Överdimension
209. EU without catalytic converter. EU utan katalytisk reaktor.
220. Superseded by 9107053,8981961 and 7563042. Ersatt av 9107053,8981961 och 7563042.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

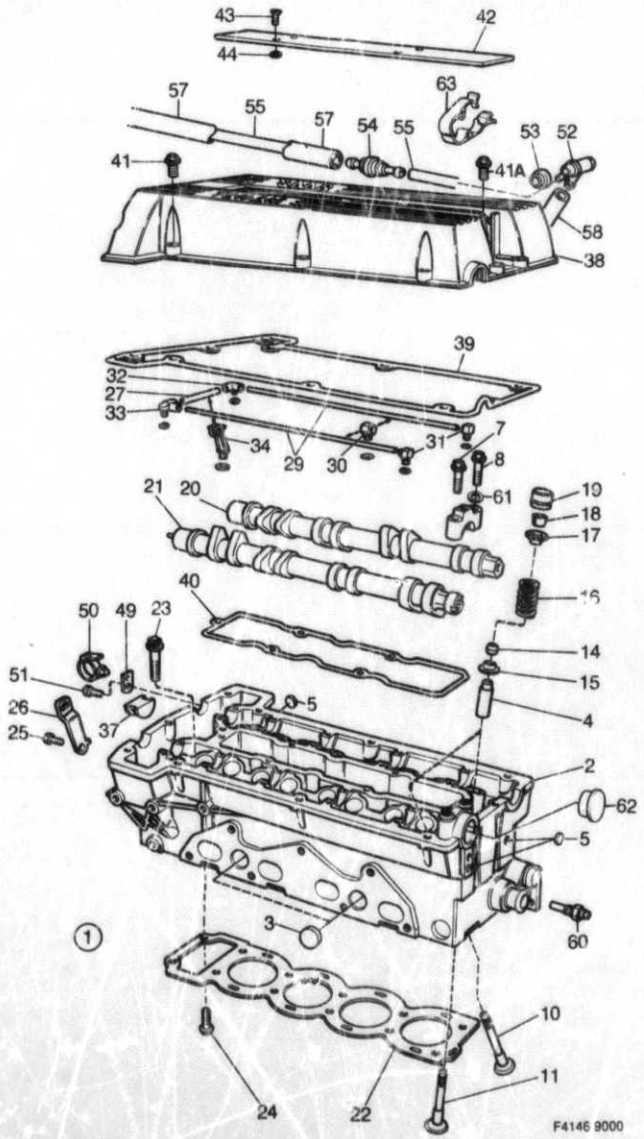

Engine body

1-B12

Cylinder head

1986-1989

Motorkropp

Cylinderhuvud

1986-1989

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	29	75 08 476		103)	2	Pipe	Rör	3
0430	30	74 80 429		(7518434)	6	Nipple	Nippel	3
0440	31	74 80 437		(7518442)	2	Nipple	Nippel	3
0450	32	74 80 445		(7518459)	1	Nipple	Nippel	3
0460	33	74 80 452		(7518467)	1	Nipple	Nippel	3
0470	34	74 80 460		(7519523)	1	Nipple	Nippel	3
0480	37	75 00 069	S		3	Plug	Plugg	2
0490	38	75 22 303		16)	1	Valve cover	Ventilkåpa	5
0500	38	75 22 949		17)-1987	1	Valve cover	Ventilkåpa	5
0510	38	75 86 308		1988-,133),TURBO	1	Valve cover	Ventilkåpa	5
0520	38	75 22 949		1988-,133),I	1	Valve cover	Ventilkåpa	5
0530	38	78 58 756		134,185),(9115973)	1	Valve cover	Ventilkåpa	5
0540	38	78 58 756		186), (9116062)	1	Valve cover	Ventilkåpa	5
0550	39	75 20 380	S	16)	1	Gasket	Packning	
0560	39	75 69 304	S	17)-1987, (7523954)	1	Gasket	Packning	1
0570	39	75 69 304	S	1988-, (7588056)	1	Gasket	Packning	1
0580	40	93 59 647	S	16)	1	Gasket	Packning	1
0590	40	75 23 962	S	17)	1	Gasket	Packning	1
0600	41	75 60 931			13	Screw	Skruv	5
0610	41	75 60 931		DI	11	Screw	Skruv	5
0620	41A	81 25 205		DI	5	Screw	Skruv	5
0630	42	75 03 709		16)	1	Cover	Lock	3
0640	42	75 61 665		17)-1987	1	Cover	Lock	3
0650	42	75 61 665		1988, I	1	Cover	Lock	3
0660	42	75 85 532		1988, TURBO	1	Cover	Lock	3
0670	42	75 85 532		500),1989-	1	Cover	Lock	3
0680	43	75 03 725		16,217) NLS - USE 7522790, 7561673	4	Screw	Skruv	5
0690	43	75 22 790		17)-1987	4	Screw	Skruv	5
0700	43	75 22 790		1988, I	4	Screw	Skruv	5
0710	43	75 86 837		1988, TURBO	4	Screw	Skruv	5
0720	43	75 86 837		500),1989-	4	Screw	Skruv	5
0730	44	81 23 465		16,217)	4	E-circlip	Spårryttare	6
0740	44	75 61 673		17)-1988	4	E-circlip	Spårryttare	5
0750	49	75 11 975			2	Bracket	Konsol	5
0760	50	75 12 015			2	Tensioning band	Spännband	5
0770	51	80 82 935		(8082919)	2	Screw	Skruv	5
0780	52	83 60 240		-1987	1	Nipple	Nippel	5
0790	52	83 60 240		1988, I	1	Nipple	Nippel	5
0800	52	75 17 048		1988, TURBO	1	Nipple	Nippel	5
0810	52	75 17 048		500),1989-	1	Nipple	Nippel	5
0820	53	75 15 190		(8360257)	1	Bushing	Bussning	5
0830	54	75 21 313			1	Non-return valve	Backventil	6
0840	55	91 36 243		L=40 MM	1	Vaccum hose	Vakuumslang	5
0850	55	91 36 243		L=85 MM	1	Vaccum hose	Vakuumslang	5
0860	55	91 36 243		L=100 MM	1	Vaccum hose	Vakuumslang	5
0870	55	91 36 243		L=200 MM	1	Vaccum hose	Vakuumslang	5
0880	55	91 36 243		L=305 MM	1	Vaccum hose	Vakuumslang	5
0890	55	91 36 243		L=385 MM	1	Vaccum hose	Vakuumslang	5
0900	57	75 64 453		L=305 MM	1	Hose	Slang	4
0910	57	75 64 461		L=385 MM	1	Hose	Slang	4
0920	57	75 14 375		L=410 MM	1	Hose	Slang	4
0930	57	91 17 425		L=460 MM	1	Hose	Slang	4
0940	58	75 61 947		-1989, I	1	Hose	Slang	4


16. Engine -G52494.
17. Engine G52495-.
103. Engine -J082585.
133. Engine -J088085.
134. Engine J088086-.
185. Engine -K083010.
186. Engine K083011-.
217. Superseded by 7522790 and 7561673. Ersatt av 7522790 och 7561673.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G06
Supercharging system	1-G10
Kits	1-G18

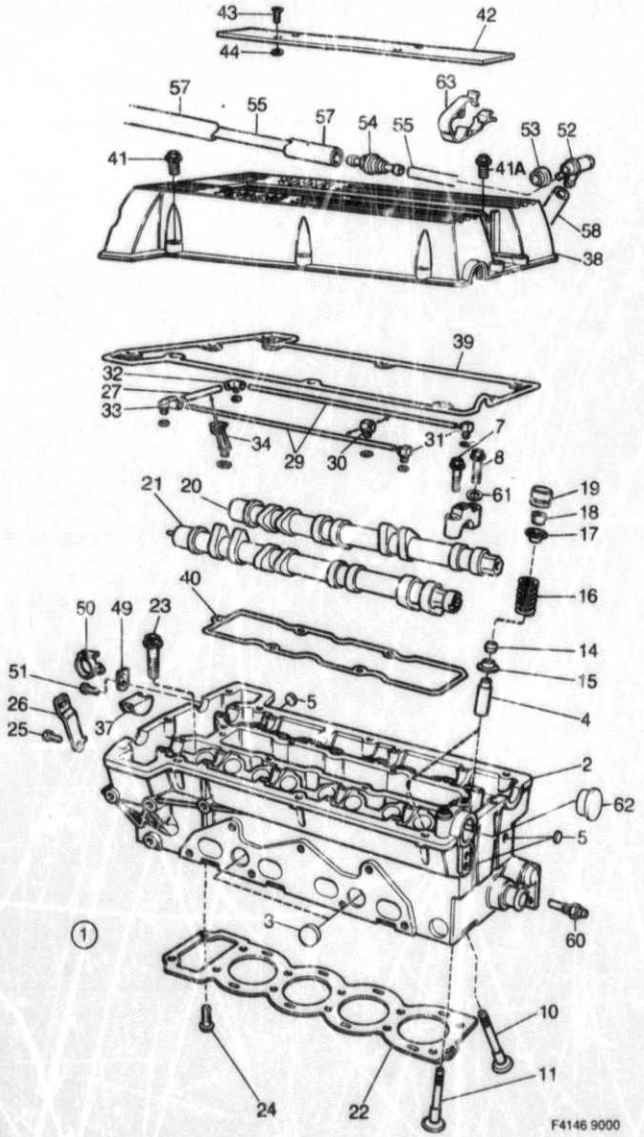

Engine body

1-B14 Cylinder head 1986-1989

Motorkropp

Cylinderhuvud 1986-1989

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0950	58	74 84 454		500),1989-, I	1	Hose	Slang	4
0960	58	75 19 697		DI	1	Hose	Slang	4
0970	60	*88 00 914*		NLS - USE 9108291	1	Sensor	Givare	2
0980	61	91 14 885		1988-	16	Sealing washer	Tätningsbricka	5
0990	62	75 63 075			1	Plug	Plugg	2
1000	63	91 17 417		163)	2	Tensioning band	Spännband	5
1010								
1020		88 17 512		16)	X	Gasket kit	Packningssats	1
1030				See page 2-137, 1-G18				
1040		*88 18 254*		17)	X	Gasket kit	Packningssats	1
1050				See page 2-137, 1-G18				
1060		88 18 007		NLS - USE 8822041 16)	X	Gasket kit	Sotningssats	2
1070				See page 2-137, 1-G18				
1080		88 19 823		17,103)	X	Gasket kit	Sotningssats	2
1090				See page 2-137, 1-G18				
1100		88 19 831		104)	X	Gasket kit	Sotningssats	2
1110				See page 2-137, 1-G18				
1120								
1130		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

16. Engine -G52494.
17. Engine G52495-.
103. Engine -J082585.
104. Engine J082586-.
163. Engine K017066-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-B16

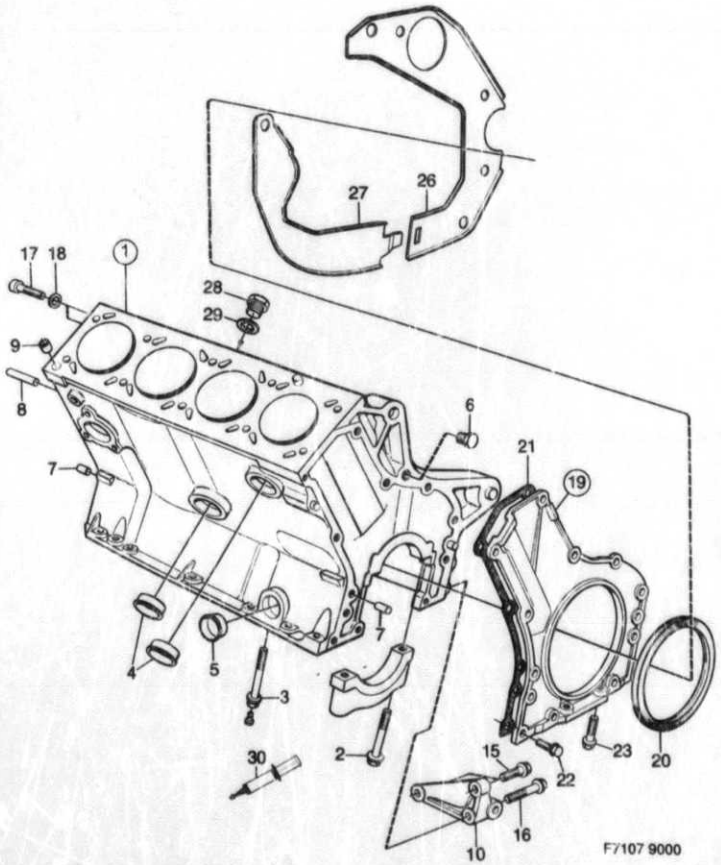

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 859			1	Cylinder block	Cylinderblock	6
0020	2	83 52 502			6	.Screw	.Skruv	5
0030	3	93 08 537			4	.Screw	.Skruv	5
0040	4	91 16 757		-1987, (8347999)	2	.Sealing washer	.Tätningsbricka	3
0050	4	75 88 338		1988-,159)	2	.Sealing washer	.Tätningsbricka	3
0060	4	91 16 757		159)	2	.Sealing washer	.Tätningsbricka	3
0070	5	81 23 218		-198	1	.Sealing washer	.Tätningsbricka	3
0080	5	75 88 320		198	1	.Sealing washer	.Tätningsbricka	3
0090	6	83 48 047			1	.Plug	.Propp	5
0100	7	83 66 007			4	.Guide	.Styrning	5
0110	8	80 34 761			1	.Pin	.Pinne	5
0120	9	83 46 470			4	.Guide	.Styrning	
0130	10	93 57 203			1	.Bracket	.Konsol	6
0140	15	81 25 205			2	.Screw	.Skruv	5
0150	16	81 25 262			1	.Screw	.Skruv	5
0160	17	80 97 867		-1986	2	.Screw	.Skruv	5
0170	17	80 19 895		1987	2	.Screw	.Skruv	5
0180	18	*80 73 223*		NLS - USE 9166380	2	.Washer	.Bricka	5
0190	19	75 16 248			1	Plate	Platta	6
0200	20	*93 50 158*		NLS - USE 8787764	1	.Seal	.Tätning	2
0210	21	*75 63 679*		-1986,(9354267) NLS - USE 9321795	1	Gasket	Packning	4
0220	21	*75 63 679*		1987- NLS - USE 9321795	1	Gasket	Packning	4
0230	22	81 25 163			9	Screw	Skruv	5
0240	23	81 25 189			2	Screw	Skruv	5
0250	26	93 88 653			1	Baffle	Stänkskydd	6
0260	26	93 89 990		A	1	Baffle	Stänkskydd	6
0270	27	93 88 661			1	Baffle	Stänkskydd	6
0280	28	*75 64 222*		-1988, NLS - USE 7563042	1	Plug	Propp	5
0290	28	*81 23 721*		1989-, NLS - USE 7563042	1	Plug	Propp	5
0300	29	81 24 141			1	Seal	Tätning	5
0310	30	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

158. Engine -J083415.
159. Engine J083416-.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	*75 60 758*		-1985 NLS - USE 7896608	1	Engine	Motor	5
0020	*75 69 742*		1986-1988, TURBO NLS - USE 8788275	1	Engine	Motor	5
0030	87 88 275		1989, TURBO	1	Engine	Motor	5
0040	*75 69 510*		1986-1988, I NLS - USE 8788267	1	Engine	Motor	5
0050	87 88 267		1989, I	1	Engine	Motor	5
0060					. Cylinder block	. Cylinderblock	
0070					. Crankshaft	. Vevaxel	
0080					. Connecting rod	. Vevstake	
0090					. Piston	. Kolv	
0100					. Timing gear casing	. Transmissionskåpa	
0110					. Transmission	. Transmission	
0120					. End plate	. Gavelplatta	
0130					. Pulley	. Remskiva	
0140					. Oil pump	. Oljepump	
0150					. Coolant pump	. Kylvätskepump	

700. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

2 GROUP INDEX

Engine body	**1-B06**
Lubrication system	**1-C04**
Fuel system	**1-C14**
Inlet and exhaust system	**1-D22**
Cooling system	**1-F10**
Engine control	**1-G08**
Supercharging system	**1-G10**
Kits	**1-G18**

1-B20

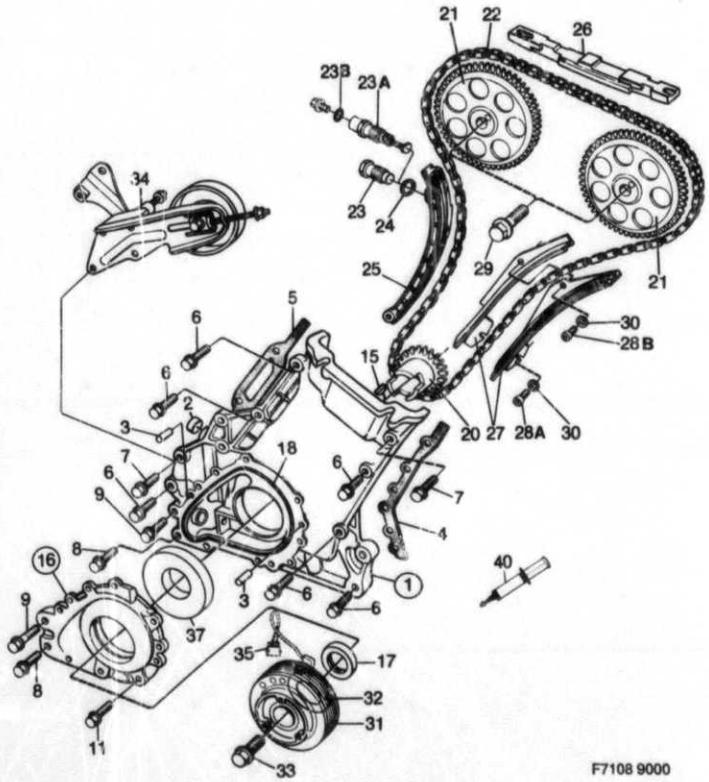

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 17 113			1	Cover	Kåpa	5
0020	2	81 23 176			1	▲Plug	▲Plugg	6
0030	3	*80 34 456*		NLS - USE 7949696	2	Pin	Pinn	5
0040	4	*91 17 847*		(7509367,7563646) NLS - USE 9321795	1	Gasket	Packning	2
0050	5	*91 17 839*		(7509375,7563653,9117060 NLS - USE 9321795	1	Gasket	Packning	2
0060	6	81 25 213			6	Screw	Skruv	5
0070	7	81 25 239			3	Screw	Skruv	5
0080	8	81 25 247			1	Screw	Skruv	5
0090	9	81 25 262			1	Screw	Skruv	5
0100	11	81 25 049			8	Screw	Skruv	5
0110	15	83 47 122			1	Key	Kil	5
0120	16	*75 18 848*		-1988 NLS - USE 7586993, 9127432	1	Oil pump housing	Oljepumphus	6
0130	16	75 86 993		1988-, DI	1	Oil pump housing	Oljepumphus	6
0140	16	75 86 993		500),1989-, I	1	Oil pump housing	Oljepumphus	6
0150	16	*74 87 572*		1989-,181,500), TURBO NLS - USE 7586993, 9127432	1	Oil pump housing	Oljepumphus	6
0160	16	75 86 993		182), TURBO	1	Oil pump housing	Oljepumphus	6
0170	17	*93 09 204*		NLS - USE 9149964	1	▲Seal	▲Tätning	2
0180	18	*83 69 829*		NLS - USE 9125824	1	Seal	Tätning	3
0190	20	75 18 640			1	Chain gear	Kedjehjul	4
0200	21	75 00 127			2	Chain gear	Kedjehjul	5
0210	22	75 00 697			1	Chain	Kedja	3
0220	22	● 93 21 837		ALTERNATIV	1	Chain	Kedja	3
0230						Open, with chain link	Öppen, med kedjelänk	
0240								
0250	23	75 85 086		-1986, (9358854)	1	Chain tensioner	Kedjesträckare	3
0260	23A	75 85 086		1987-	1	Chain tensioner	Kedjesträckare	3
0270	23B	80 48 670		1987-,(8109571)	1	▲O-ring	▲O-ring	2
0280	24	75 08 690			1	Seal	Tätning	5
0290	25	*75 00 150*		NLS - USE 8858276	1	Chain control	Kedjestyrning	3
0300	26	75 05 845		185)	1	Chain control	Kedjestyrning	3
0310	26	88 59 324		196)	1	Chain control	Kedjestyrning	3
0320	27	91 33 505		-1986, (7560253)	1	Chain control	Kedjestyrning	3
0330	27	91 33 505		1987-, (7520315)	1	Chain control	Kedjestyrning	3
0340	28A	80 97 883		-1986	1	Screw	Skruv	5
0350	28A	*80 19 929*		1987- NLS - USE 9166299	1	Screw	Skruv	5
0360	28B	80 97 883		-1986	1	Screw	Skruv	5
0370	28B	*80 19 960*		1987- NLS - USE 9166307	1	Screw	Skruv	5
0380	29	30 37 140			2	Screw	Skruv	5
0390	30	80 29 951			2	Washer	Bricka	5
0400	31	75 01 380		-1986	1	Pulley	Remskiva	
0410	31	*75 68 439*		1987-1988, TURBO NLS - USE 9321530	1	Pulley	Remskiva	4
0420	31	*75 81 762*		1988, DI, TURBO NLS - USE 9321530	1	Pulley	Remskiva	4
0430	31	*75 81 721*		500),1989, TURBO NLS - USE 9321530	1	Pulley	Remskiva	4
0440	32			See page 3A-027, 2-B04		Aperture disc	Bländarskiva	
0450	31	93 21 548		1987-, I	1	Pulley	Remskiva	4
0460	32			See page 3A-017, 2-A18		Aperture disc	Bländarskiva	
0470	33	83 48 534			1	Screw	Skruv	5
0480	34			See page 6-019, 4-C20		Tension pulley	Spännrulle	
0490	35			See page 3A-027, 2-B04		Sensor	Givare	
0500	36	87 88 150		182)	2	Screw	Skruv	5

181. Engine -K082990
182. Engine K082991-
185. Engine -K083010.
196. Engine K083011-.
500. Also valid for SE 1988B. Gäller även för SE 1988E.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, genural	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-B22

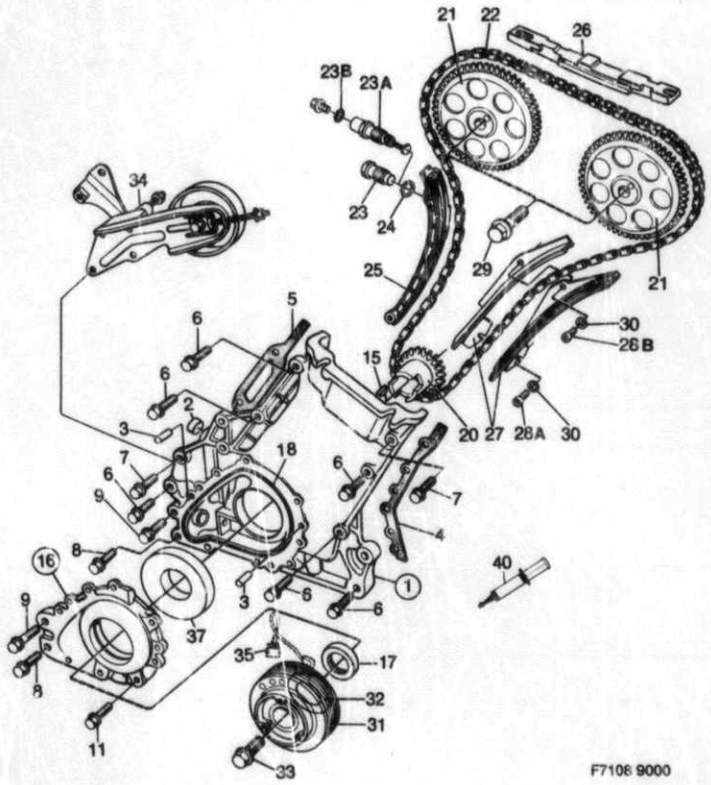

F7108 9000


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	37			See page 2-027, 1-C04		Pump kit	Pumpsats	
0520	40	• 93 21 795		25 ML	X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

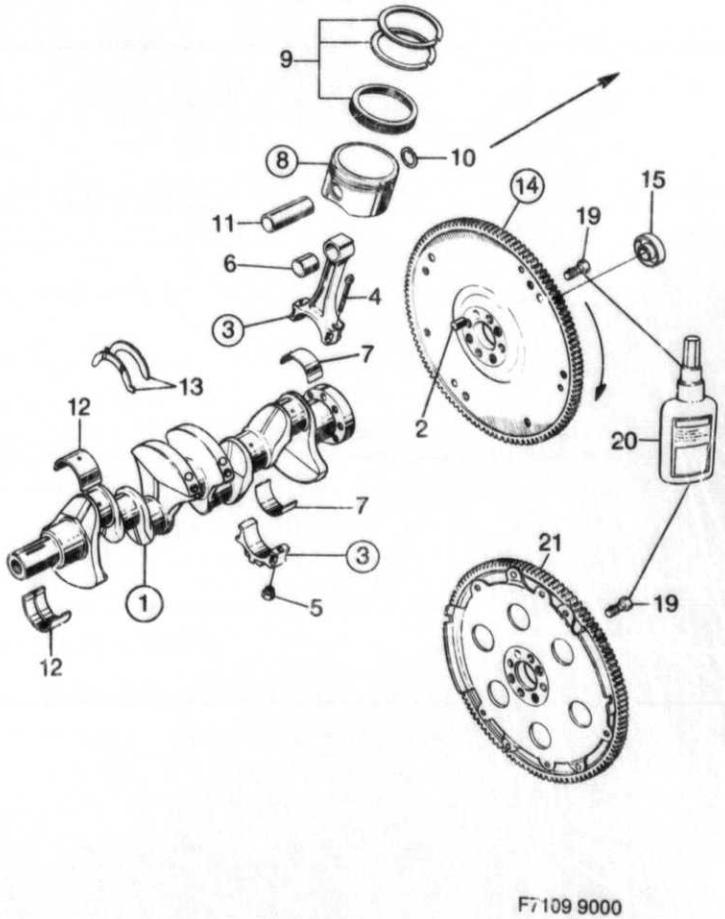

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	75 24 978		1985-,(7521115)	1	Crankshaft	Vevaxel	6
1	75 24 978		1986-,34)	1	Crankshaft	Vevaxel	6
1	93 21 589		35)	1	Crankshaft	Vevaxel	6
	87 87 228		PART OF 9321589	1	▪Crankshaft	▪Vevaxel	6
	78 56 172		PART OF 9321589	1	▪Spacer	▪Distans	5
	91 16 443		PART OF 9321589	1	▪Screw	▪Skruv	5
	91 16 864		PART OF 9321589	1	▪Key	▪Kil	5
2	80 34 902		1985-	1	Locating pin	Styrpinne	5
2	80 34 928		1986-	1	Pin	Pinne	5
3	75 01 604		34)	4	Connecting rod	Vevstake	5
3	75 62 259		35)	4	Connecting rod	Vevstake	5
4	83 47 106		34)	8	▪Screw	▪Skruv	5
4	75 21 255		35)	8	▪Screw	▪Skruv	5
5	75 00 739		34)	8	▪Nut	▪Mutter	5
5	75 62 275		35)	8	▪Nut	▪Mutter	5
6	83 47 676		-1988,(8352734)	4	▪Bushing	▪Bussning	5
6	83 47 676		1989-	4	▪Bushing	▪Bussning	5
7	83 47 650			8	Con.bearing Red	Vevstakslager Röd	
7	83 55 349			8	Con.bearing Blue	Vevstakslager Blå	
7	83 49 938		210), 0,25 MM,	8	Con.bearing Yellow	Vevstakslager Gul	4
7	83 55 356		210), 0,25 MM,	8	Con.bearing Green	Vevstakslager Grön	
7	83 49 946		210), 0,50 MM,	8	Con.bearing White	Vevstakslager Vit	4
7	83 55 364		210), 0,50 MM,	8	Con.bearing Brown	Vevstakslager Brun	4
8	75 20 984		1985 CLASS AB	4	Piston	Kolv	5
8	75 20 927		1986-, I, CLASS AB	4	Piston	Kolv	5
8	75 24 895		1986-, CLASS AB	4	Piston	Kolv	5
8	75 20 992		1985, CLASS B	4	Piston	Kolv	5
8	75 20 935		1986-, I, CLASS B	4	Piston	Kolv	5
8	75 24 903		1986-, CLASS B	4	Piston	Kolv	5
8	75 21 008		1985, CLASS C	4	Piston	Kolv	5
8	75 20 943		1986-, I, CLASS C	4	Piston	Kolv	5
8	75 24 911		1986-, CLASS C	4	Piston	Kolv	5
8	75 21 016		208), 1985, 0,50 MM	4	Piston	Kolv	5
8	75 20 950		208), 1986-, I, 0,50 MM	4	Piston	Kolv	5
8	75 24 929		208), 1986-, 0,50 MM	4	Piston	Kolv	5
8	75 21 024		208), 1985, 1,0 MM	4	Piston	Kolv	5
8	75 20 968		208), 1986-, I, 1,0 MM	4	Piston	Kolv	5
8	75 24 937		208), 1986-, 1,0 MM	4	Piston	Kolv	5
9	75 20 513		STD	4	▪Piston ring kit	▪Kolvringsats	3
9	75 20 521		208), 0,50 MM	4	▪Piston ring kit	▪Kolvringsats	3
9	75 20 539		208), 1,0 MM	4	▪Piston ring kit	▪Kolvringsats	3
10	83 47 577			8	Lock ring	Låsring	5
11	83 46 983		L=73MM	4	Gudgeon pin	Kolvtapp	5
12	83 50 936			10	Main bearing Red	Ramlager Röd	5
12	83 55 315			10	Main bearing Blue	Ramlager Blå	5


34. Engine -H004433.
35. Engine H004434-.
208. Oversize Överdimension
210. Undersize Underdimension

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G06
Supercharging system	1-G10
Kits	1-G18

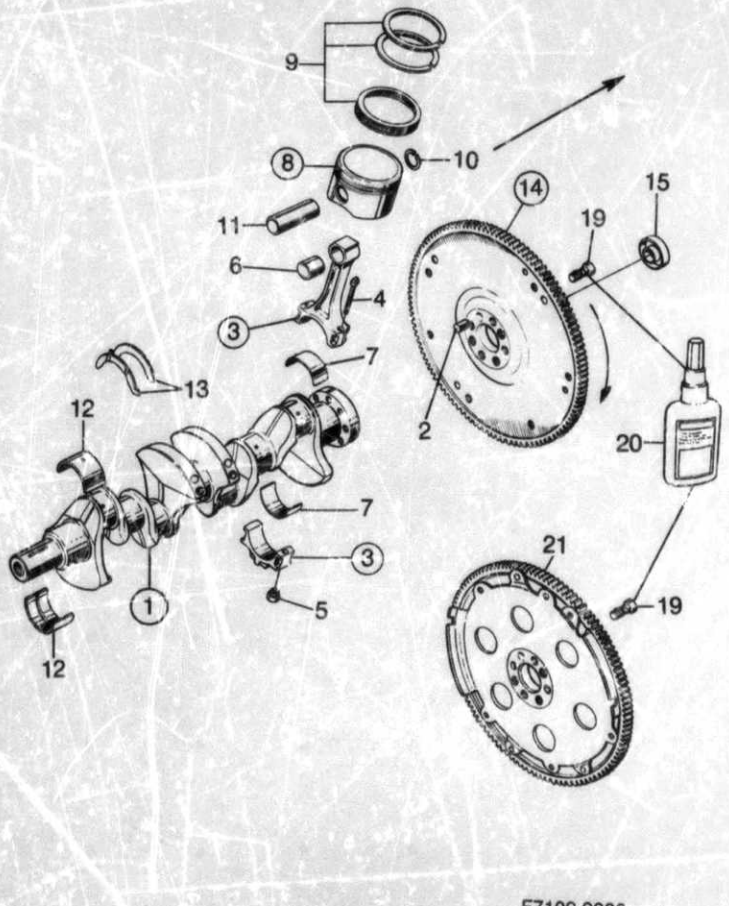

F7109 900C

0350	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0360									
0390	12		83 50 977		210), 0,25 MM	10	Main bearing	Ramlager	5
0610							Yellow	Gul	
0620	12		83 55 323		210), 0,25 MM	10	Main bearing	Ramlager	5
0630							Green	Grön	
0640	12		83 50 985		210), 0,50 MM	10	Main bearing	Ramlager	5
0650							White	Vit	
0660	12		83 55 331		210), 0,50 MM	10	Main bearing	Ramlager	5
0670							Brown	Brun	
0680	13		83 47 270			2	Thrust washer	Tryckbricka	4
0690	14		75 21 610		TURBO	1	Flywheel	Svänghjul	5
0700	14		75 21 610		-1986, I	1	Flywheel	Svänghjul	5
0710	14		75 09 102		1987-, I	1	Flywheel	Svänghjul	5
0720	15		75 69 809			1	Guide ring	Styrring	3
0730	19		88 59 191			7	Screw	Skruv	5
0740	20	•	74 96 292		50 ML	X	Nut lock	Gängsäkring	5
0750							strong	stark	
0760							red	röd	
0770	21		75 61 863		-1987, A	1	Companion flange	Medbringare	4
0780	21		78 56 149		1988, A, (7589419)	1	Companion flange	Medbringare	4
0790	21		88 56 965		1989-, A	1	Companion flange	Medbringare	4

210. Undersize Underdimension

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C04

Oil pump, oil filter, engine TURBO

Oljepump, oljefilter, motor TURBO

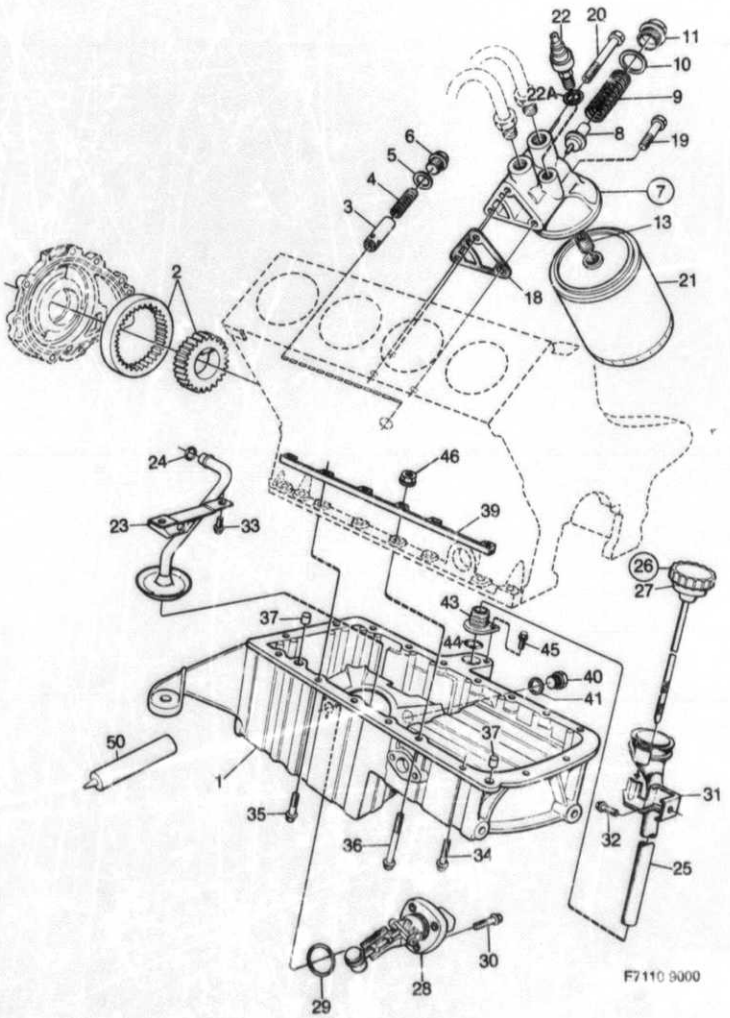

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*75 17 188*		1985 NLS - USE 4391959, 7523822, 7970361, 8125031, 9133158	1	Sump	Oljesump	6
1	*75 23 806*		1986-,166) NLS - USE 4391959, 7970361, 9133158	1	Sump	Oljesump	6
1	*91 17 029*		167) NLS - USE 9133158	1	Sump	Oljesump	6
2	*88 17 561*		See page 2-137, 1-G18 NLS - USE 9321779	1	Pump kit	Pumpsats	5
3	75 08 708			1	Piston	Kolv	6
4	93 09 998			1	Spring	Fjäder	6
5	93 55 389			1	Gasket	Packning	4
6	75 08 955			1	Plug	Propp	5
7	75 16 784		14)	1	Intermediate section	Mellanstycke	6
7	75 60 139		15)	1	Intermediate section	Mellanstycke	6
8	93 01 540			1	.Thermostat	.Termostat	2
9	93 00 591			1	.Spring	.Fjäder	5
10	*81 24 216*		NLS - USE 9109182	1	.Gasket	.Packning	4
11	75 20 372			1	.Plug	.Propp	5
13	83 48 609			1	.Junction pipe	.Skarvrör	6
18	75 66 433		-1986, (9308180)	1	Gasket	Packning	4
18	75 66 433		1987-	1	Gasket	Packning	4
19	81 25 254			1	Screw	Skruv	5
20	81 25 304			2	Screw	Skruv	5
21	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
22	88 18 528		14),(9309386)	1	Oil pressure sensor	Oljetrycksgivare	
22	*75 22 402*		15) NLS - USE 9112459	1	Oil pressure sensor	Oljetrycksgivare	3
22A	*81 24 216*		NLS - USE 9109182	1	.Gasket	.Packning	4
23	91 27 069		(7517204)	1	Oil pipe	Oljesugrör	6
24	79 72 698			1	O-ring	O-ring	2
25	93 88 794			1	Tube	Rör	6
26	93 86 541		49), M	1	Dipstick	Oljesticka	3
26	93 91 467		50), M	1	Dipstick	Oljesticka	3
26	93 91 467		1986-, A	1	Dipstick	Oljesticka	3
27	93 61 544			1	.Ring-gland	.Packningsring	4
28	93 90 154		1986-	1	Sensor	Givare	3
29	*81 09 670*		1986 NLS - USE 7970361	1	O-ring	O-ring	2
29	*80 46 625*		1987- NLS - USE 7970361	1	O-ring	O-ring	2
30	81 25 023		1986-	3	Screw	Skruv	5
31	*93 88 232*		NLS - USE 8976516	1	Bracket	Fäste	6
32	79 67 938			1	Screw	Skruv	5
33	*29 61 357*		NLS - USE 9166414	2	Screw	Skruv	5
34	81 25 189			11	Screw	Skruv	5
35	81 25 205			4	Screw	Skruv	5
36	81 25 262			2	Screw	Skruv	5
37	83 00 725		125)	2	Guide sleeve	Styrhylsa	5
37	74 84 934		126)	2	Sleeve	Hylsa	5
39	75 01 398		147)	1	Bracket	Hållare	6
39	91 16 625		148)-1988	1	Bracket	Hållare	6
39	75 01 398		500),1989-	1	Bracket	Hållare	6
40	75 63 042		-1985, (7522691)	1	Plug	Propp	1

14. Ch. -G1007152.
15. Ch. G1007153-.
49. Ch. -H1008847, -H8000153.
50. Ch. H1008848-, H8000154-.
125. Engine -J088939.
126. Engine J088940-.
147. Engine -J113287.
148. Engine J113288-.
166. Engine -K029829.
167. Engine K029830-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C06

Oil pump, oil filter, engine TURBO

Oljepump, oljefilter, motor TURBO

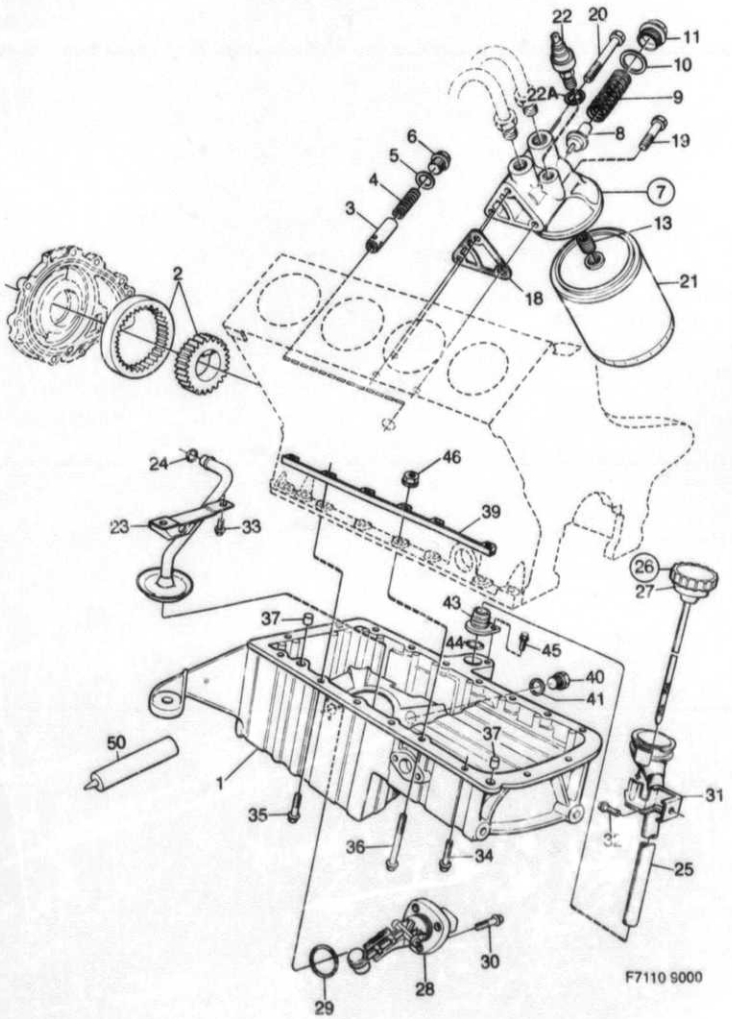

	Pos	Part No/Art nr	KS	Notes/Anvisningar	Qty/Antal	Description	Benämning	SL
0400								
0470	40	75 63 042		1986-, (7522691)	1	Plug	Propp	1
0480	41	75 22 709			1	Gasket	Packning	1
0490	43	75 17 782		-1987,218)	1	Nipple	Nippel	5
0500	43	91 12 475		1988-,166)	1	Nipple	Nippel	5
0510	43	*91 14 810*		167) NLS - USE 4391959	1	Nipple	Nippel	5
0520	44	*80 46 625*		-1987,(8109670) NLS - USE 7970361	1	O-ring	O-ring	2
0520								
0530	44	21 96 772		1988-,166)	1	O-ring	O-ring	2
0540	44	*80 46 625*		167) NLS - USE 7970361	1	O-ring	O-ring	2
0550	45	81 25 031			1	Screw	Skruv	5
0560	46	81 51 326		148)-1988	1	Nut	Mutter	5
0570	50	81 52 381		300 ML	X	Flange sealant	Flänstätning	3
0580								
0590		88 17 686		TURBO	X	Service kit	Servicesats	1
0600				See page 2-137, 1-G18				
0610		88 19 138		TURBO DI	X	Service kit	Servicesats	1
0620				See page 2-137, 1-G18				

148. Engine J113288-.
166. Engine -K029829.
167. Engine K029830-.
218. Superseded by 9112475 and 2196772. Ersatt av 9112475 och 2196772.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Lubrication system

1-C08 Oil pump, oil filter, engine I

Smörjsystem

Oljepump, oljefilter, motor I

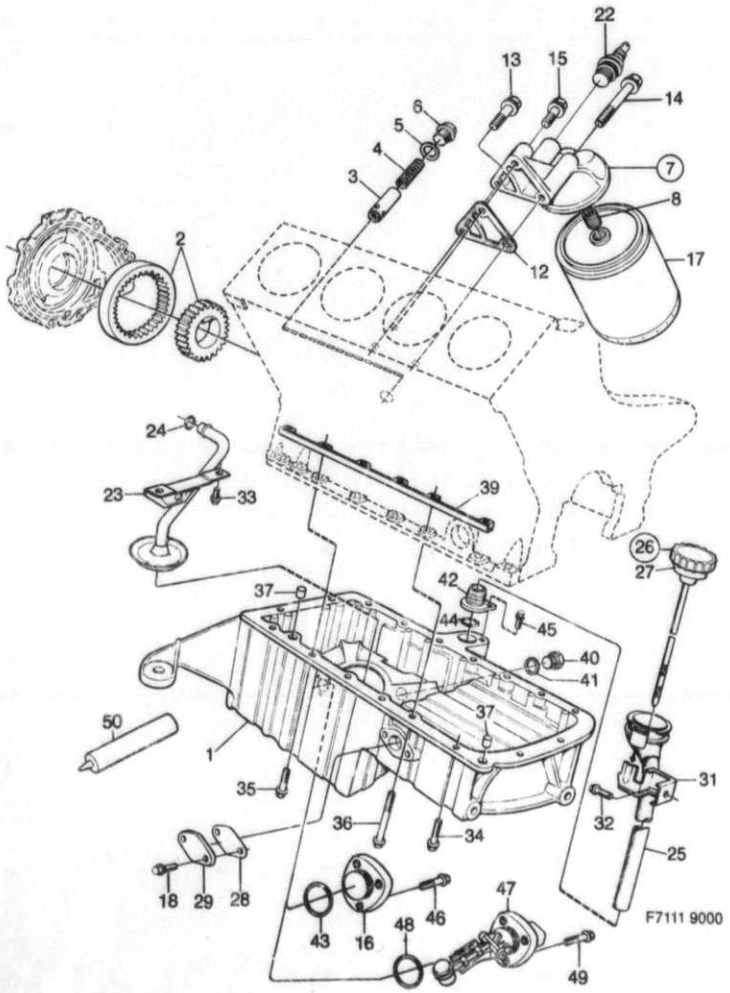

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 23 806*		166) NLS - USE 4391959, 7970361, 9133158	1	Sump	Oljesump	6
0020	1	*91 17 029*		167) NLS - USE 9133158	1	Sump	Oljesump	6
0030	2	*88 17 561*		See page 2-137, 1-G18 NLS - USE 9321779	1	Pump kit	Pumpsats	5
0040	3	75 08 708			1	Piston	Kolv	6
0050	4	93 09 998			1	Spring	Fjäder	6
0060	5	93 55 389			1	Gasket	Packning	4
0070	6	75 08 955			1	Plug	Propp	5
0080	7	75 60 105			1	Intermediate section	Mellanstycke	6
0090	8	83 48 609			1	▲Junction pipe	▲Skarvrör	6
0100	12	*93 08 180*		-1986 NLS - USE 7566433	1	Gasket	Packning	4
0110	12	75 66 433		1987-	1	Gasket	Packning	4
0120	13	81 25 254			1	Screw	Skruv	5
0130	14	81 25 304			1	Screw	Skruv	5
0140	15	81 25 221			1	Screw	Skruv	5
0150	16	75 23 822			1	Cover	Lock	5
0160	17	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
0170	18	81 25 163			2	Screw	Skruv	5
0180	22	*75 22 402*		NLS - USE 9112459	1	Oil pressure sensor	Oljetrycksgivare	3
0190	23	91 27 069		(7517204)	1	Oil pipe	Oljesugrör	6
0200	24	79 72 698			1	O-ring	O-ring	2
0210	25	93 88 794			1	Tube	Rör	6
0220	26	93 86 541		49), M	1	Dipstick	Oljesticka	3
0230	26	93 91 467		50), M	1	Dipstick	Oljesticka	3
0240	26	93 91 467		1986-, A	1	Dipstick	Oljesticka	3
0250	27	93 61 544			1	▲Ring-gland	▲Packningsring	4
0260	28	75 66 474		-1986, (7522022)	1	Gasket	Packning	3
0270	28	75 66 474		1987-, (7522022)	1	Gasket	Packning	3
0280	29	75 01 430			1	Flange	Fläns	5
0290	31	*93 88 232*		-1987 NLS - USE 8976516	1	Bracket	Fäste	6
0300	31	89 76 516		1988-	1	Bracket	Fäste	6
0310	32	79 67 938			1	Screw	Skruv	5
0320	33	*29 61 357*		NLS - USE 9166414	2	Screw	Skruv	5
0330	34	81 25 189			11	Screw	Skruv	5
0340	35	81 25 205			4	Screw	Skruv	5
0350	36	81 25 262			2	Screw	Skruv	5
0360	37	83 00 725		125)	2	Guide sleeve	Styrhylsa	5
0370	37	74 84 934		126)	2	Sleeve	Hylsa	5
0380	39	75 01 398			1	Bracket	Hållare	6
0390	40	75 63 042		(7522691)	1	Plug	Propp	1
0400	41	75 22 709			1	Gasket	Packning	1
0410	42	75 17 782		-1967,218)	1	Nipple	Nippel	5
0420	42	91 12 475		1988-,166)	1	Nipple	Nippel	5
0430	42	*91 14 810*		167) NLS - USE 4391959	1	Nipple	Nippel	5
0440	43	*81 09 670*		-1986 NLS - USE 7970361	1	O-ring	O-ring	2
0450	43	*80 46 625*		1987- NLS - USE 7970361	1	O-ring	O-ring	2
0460	44	*80 46 625*		-1986,(8109670) NLS - USE 7970361	1	O-ring	O-ring	2
0470	44	*80 46 625*		1987 NLS - USE 7970361	1	O-ring	O-ring	2
0480	44	21 96 772		1988-,166)	1	O-ring	O-ring	2
0490	44	*80 46 625*		167) NLS - USE 7970361	1	O-ring	O-ring	2
0500	45	81 25 031			1	Screw	Skruv	5
0510	46	81 25 023			3	Screw	Skruv	5
0520	47	93 90 154		1988-, US, CA	1	Sensor	Givare	3

49. Ch. -H1008847, -H8000153.
50. Ch. H1008848-, H8000154-.
125. Engine -J088939.
126. Engine J088940-.
166. Engine -K029829.
167. Engine K029830-.
218. Superseded by 9112475 and 2196772. Ersatt av 9112475 och 2196772.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C10

Oil pump, oil filter, engine I

Oljepump, oljefilter, motor I

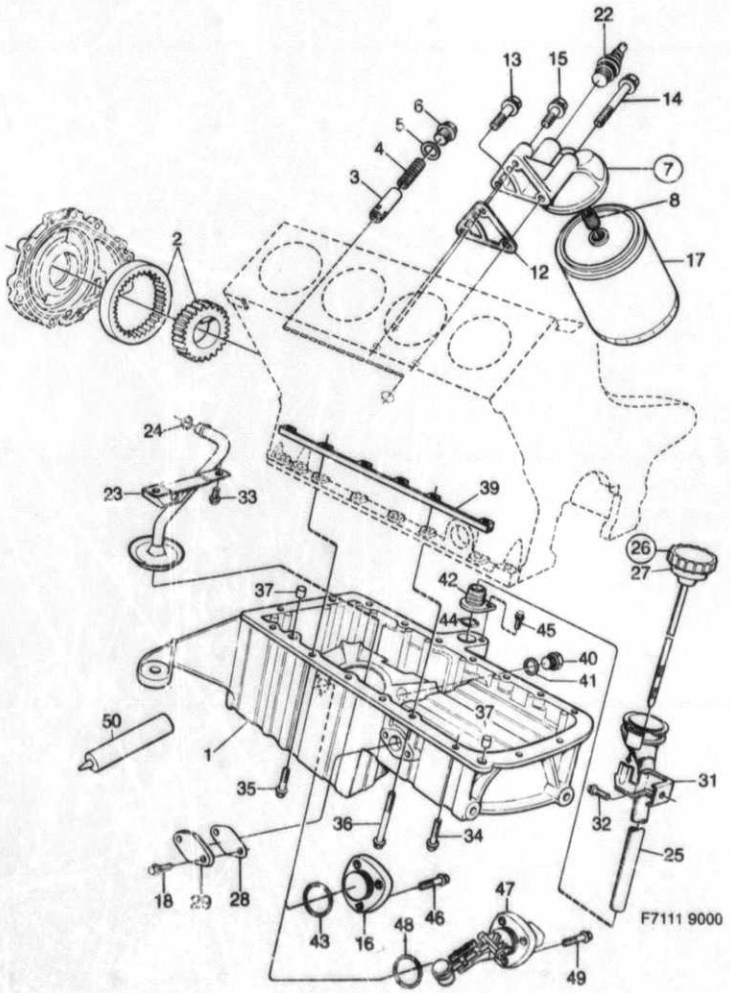

0425 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530 48	*80 46 625*		1988-, US, CA,(7971997)	1	O-ring	O-ring	2
0530			NLS - USE 7970361				
0540 49	79 74 694		1988-, US, CA	3	Screw	Skruv	5
0550 50	• 81 52 381		300 ML	X	Flange sealant	Flänstätning	3
0560							
0570	*88 18 544*		-1988, I	X	Service kit	Servicesats	1
0580			See page 2-137, 1-G18				
0580			NLS - USE 8819864				
0590	88 19 864		1989, I	X	Service kit	Servicesats	1
0600			See page 2-137, 1-G18				

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C12

Oil pipe
Oljerör

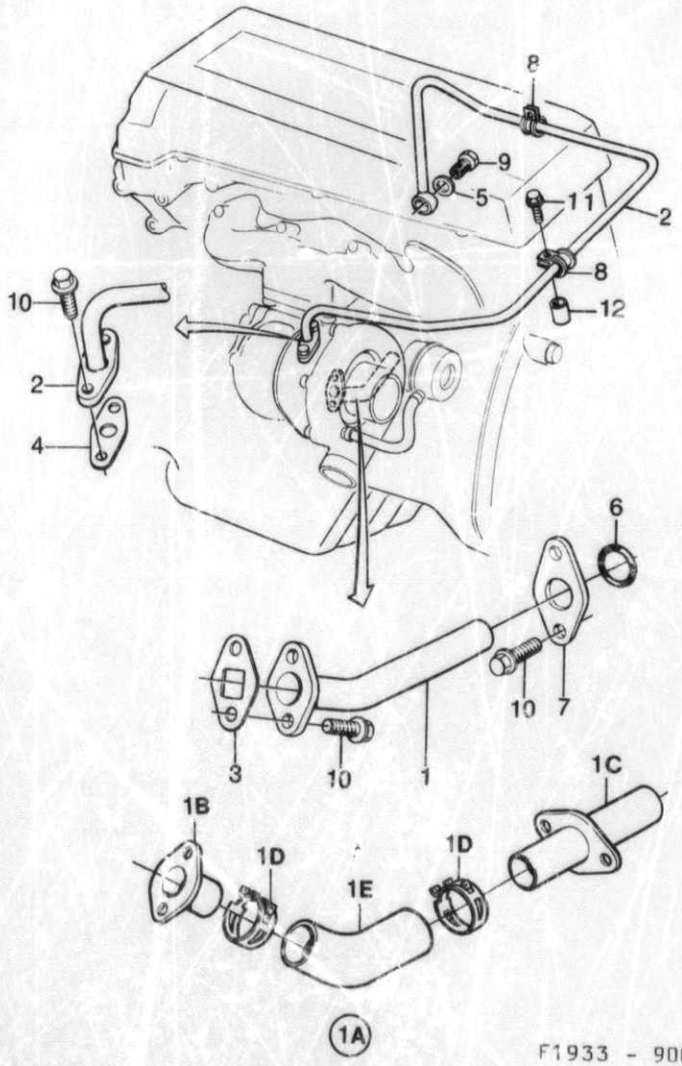

F1933 - 9000

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 66 623		183,224)	1	Oil pipe	Oljerör	4
0020	1A	74 80 932		184)	1	Oil pipe	Oljerör	4
0030	1B	74 81 062		1)	1	.Tube	.Rör	4
0040	1C	74 81 088		1)	1	.Tube	.Rör	4
0050	1D	75 86 050		1)	2	.Clamp	.Klamma	5
0060	1E	91 16 506		1)	1	.Hose	.Slang	5
0070	2	75 84 998		(7505910)	1	Tube	Rör	5
0080	2	*75 67 910*		211), -1986 NLS - USE 7585011	1	Tube	Rör	5
0090	2	75 85 011		211), 1987-	1	Tube	Rör	5
0100	2	75 85 011		1986-	1	Tube	Rör	5
0110	3	75 18 970			1	Gasket	Packning	4
0120	4	75 07 700		(2303279)	1	Gasket	Packning	4
0130	5	81 24 141			2	Seal	Tätning	5
0140	6	34 89 937		-1985	1	O-ring	O-ring	2
0150	6	75 02 263		1986-	1	O-ring	O-ring	2
0160	7	75 17 741		-1985	1	Flange	Fläns	6
0170	7	75 68 512		1986-,183)	1	Flange	Fläns	6
0180	7	75 66 474		184)	1	Gasket	Packning	3
0190	8	17 54 506			2	Clamp	Klammer	5
0200	9	81 23 903			1	Banjo screw	Banjoskruv	5
0210	10	81 25 163			6	Screw	Skruv	5
0220	11	79 70 288			1	Screw	Skruv	5
0230	11	*79 71 757*		A NLS - USE 7528953	1	Screw	Skruv	5
0240	12	93 90 121			1	Spacer	Distans	4

1. Not as separate spare part. Ej som separat reservdel.
183. Engine -K079155.
184. Engine K079156-
211. For cars with parted inlet manifold. För bilar med delat inloppsrör.
224. Superseded by 7480932. Ersatt av 7480932.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G06
Supercharging system	1-G10
Kits	1-G18

1-C14

Air cleaner engine Turbo M -1987

Luftrenare motor Turbo M -1987

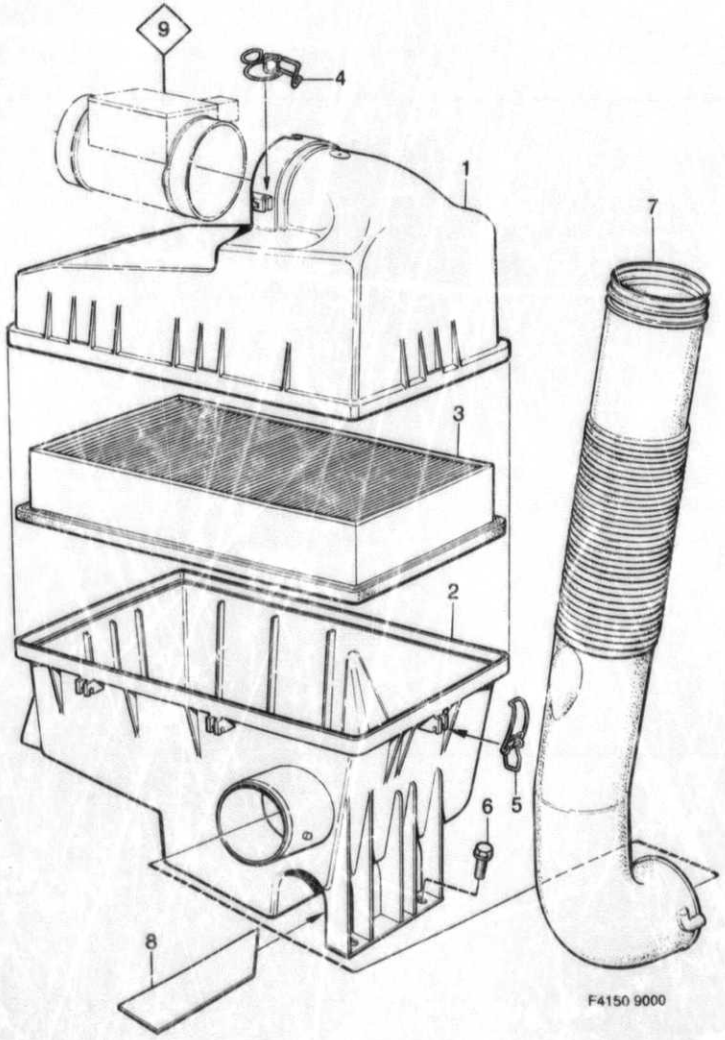

F4150 9000

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 82 524			1	Air cleaner	Luftrenare	6
0020	2	93 85 147			1	Air cleaner	Luftrenare	6
0030	3	93 81 971			1	Air filter	Luftfilter	1
0040	4	93 75 601			2	Clamp	Klammer	6
0050	5	93 77 920			6	Clamp	Klammer	6
0060	6	79 72 888			4	Screw	Skruv	5
0070	7	93 89 271			1	Tube	Rör	6
0080	8	93 88 018			1	Base	Underlägg	4
0090	9			See page 2-061, 1-D14		Mass air flow sensor	Luftmassamätare	


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C16 Air cleaner engine Turbo M 1988- / Luftrenare motor Turbo M 1988-

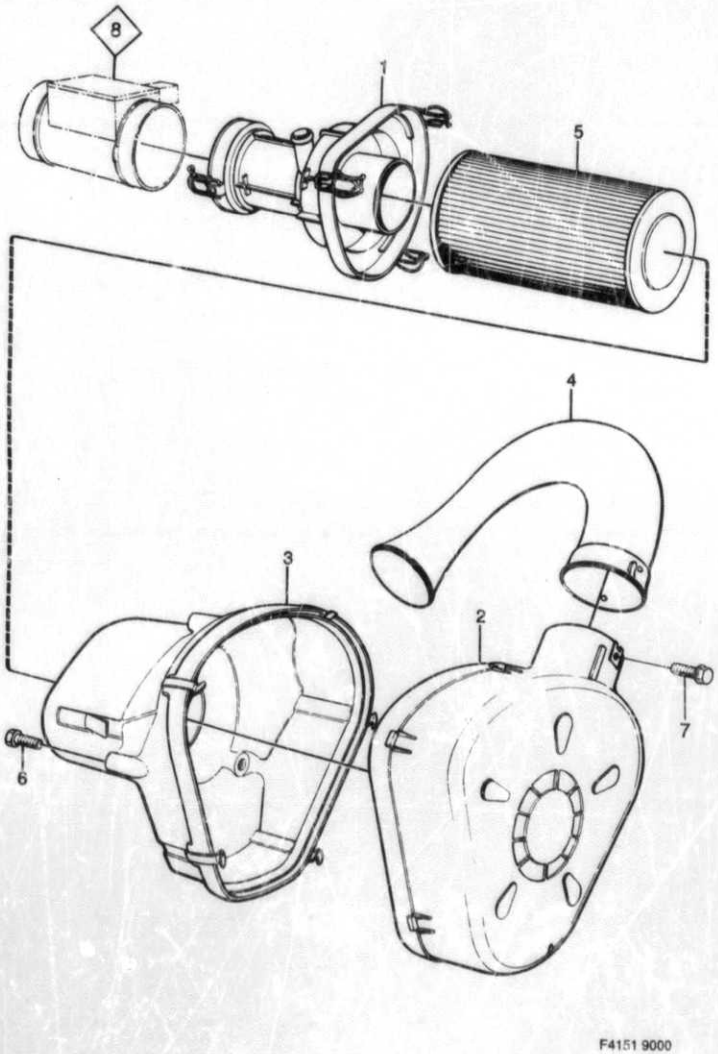

F4151 9000

0651	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 91 608			1	Cover	Lock	6
0020	2	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0030	3	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0040	4	93 90 915			1	Pipe	Rör	6
0050	5	93 90 907			1	Air filter	Luftfilter	1
0060	6	79 77 788			3	Screw	Skruv	5
0070	7	79 72 888			2	Screw	Skruv	5
0080	8			See page 2-051, 1-D14		Mass air flow sensor	Luftmassamätare	


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C18 Air cleaner engine Turbo A / Luftrenare motor Turbo A

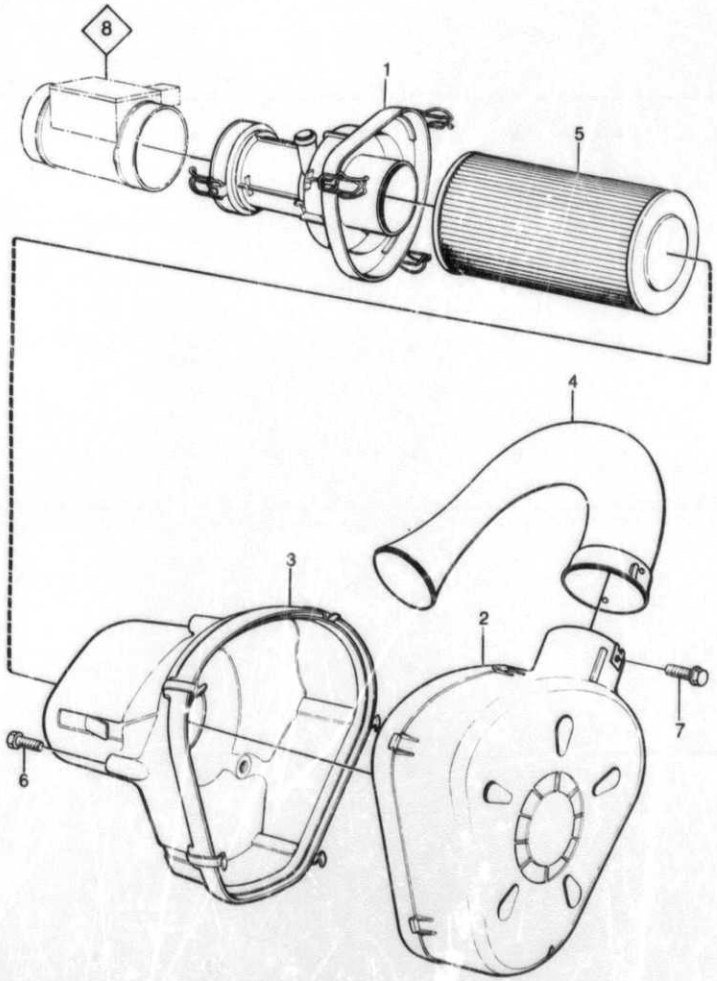

F4152 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	93 91 608			1	Cover	Lock	6
2	93 91 616			1	Air cleaner housing	Luftrenarhus	6
3	93 90 170			1	Air cleaner housing	Luftrenarhus	6
4	93 90 915			1	Pipe	Rör	6
5	93 90 907			1	Air filter	Luftfilter	1
6	79 77 788			3	Screw	Skruv	5
7	79 72 888			2	Screw	Skruv	5
8			See page 2-061, 1-D14		Mass air flow sensor	Luftmassamätare	

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C20 Air cleaner 1986-1988 engine I

Luftrenare 1986-1988 motor I

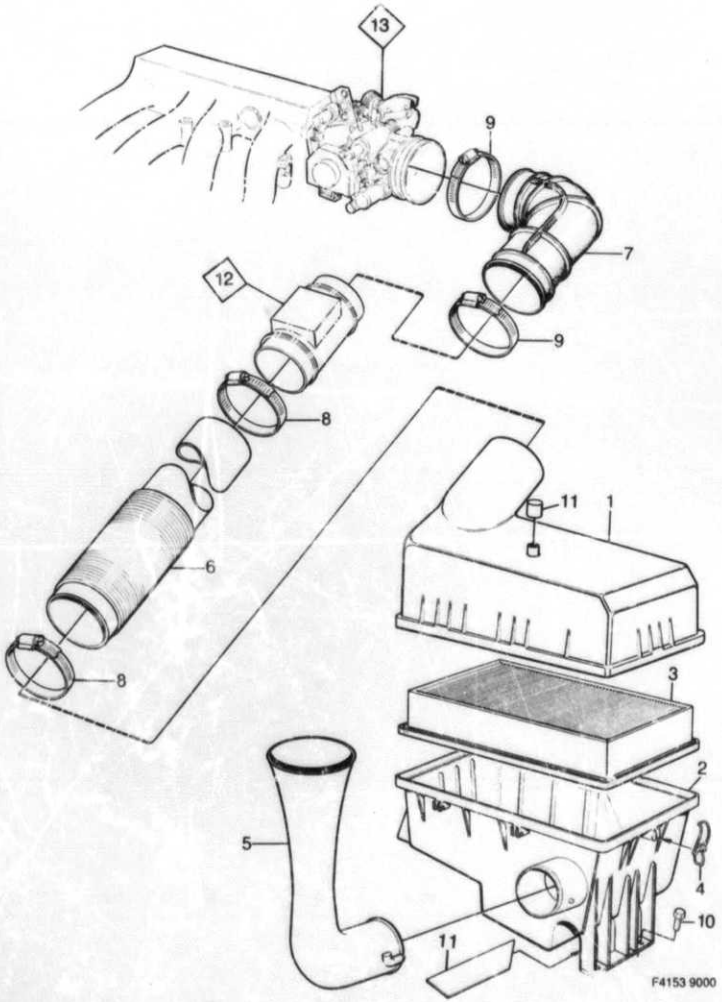

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 88 992			1	Air filter	Luftfilter	6
0020	2	93 85 147			1	Air cleaner	Luftrenare	6
0030	3	93 81 971			1	Air filter	Luftfilter	1
0040	4	93 77 920			6	Clamp	Klammer	6
0050	5	93 91 590			1	Tube	Rör	6
0060	6	93 88 976			1	Tube	Rör	4
0070	7	93 88 968			1	Hose	Slang	4
0080	8	79 70 148			2	Hose clamp	Slangklamma	5
0090	9	79 70 155			2	Hose clamp	Slangklamma	5
0100	10	79 72 888			4	Screw	Skruv	5
0110	11	93 00 625			1	Plug	Plugg	5
0120	12			See page 2-061, 1-D14		Mass air flow sensor	Luftmassamätare	
0130	13			See page 2-075, 1-E04		Throttle body	Spjällhus	

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C22

Air cleaner
500) 1989- engine !

Luftrenare
500) 1989- motor /

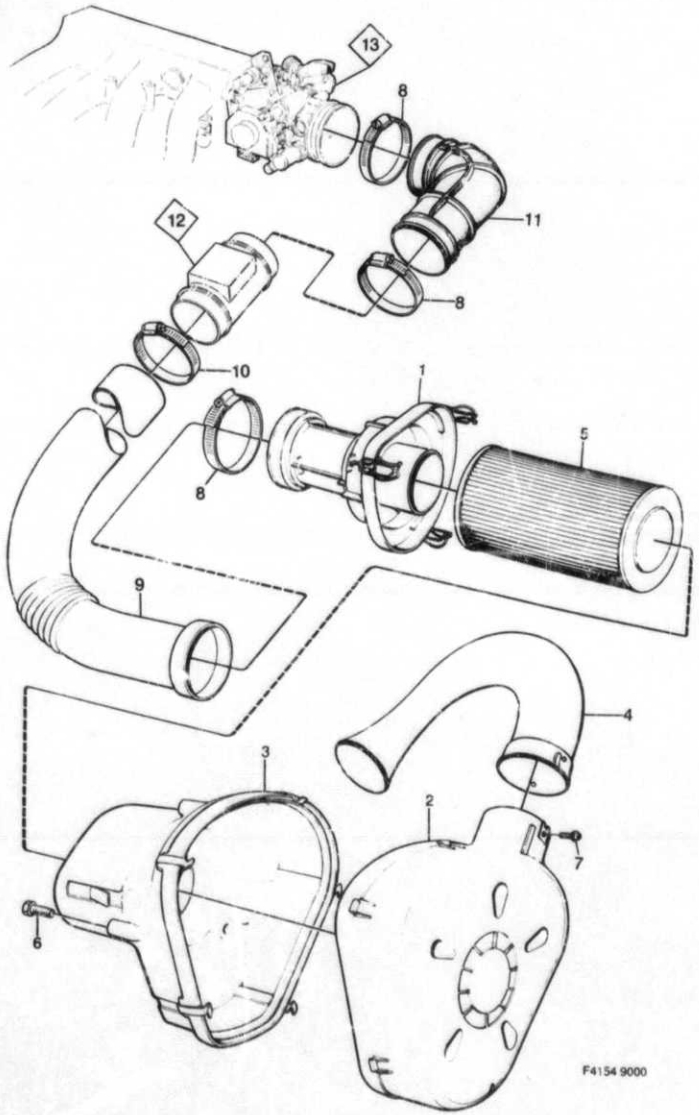

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 76 706			1	Cover	Lock	6
0020	2	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0030	3	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0040	4	93 90 915			1	Pipe	Rör	6
0050	5	93 90 907			1	Air filter	Luftfilter	1
0060	6	79 77 788			3	Screw	Skruv	5
0070	7	79 72 888			2	Screw	Skruv	5
0080	8	79 70 155			3	Hose clamp	Slangklamma	5
0090	9	89 76 607			1	Tube	Rör	4
0100	10	79 70 148			1	Hose clamp	Slangklamma	5
0110	11	93 88 968			1	Hose	Slang	4
0120	12			See page 2-061, 1-D14		Mass air flow sensor	Luftmassamätare	
0130	13			See page 2-075, 1-E04		Throttle body	Spjällhus	

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-C24

Filler pipe
Hose

Påfyllningsrör
Slang

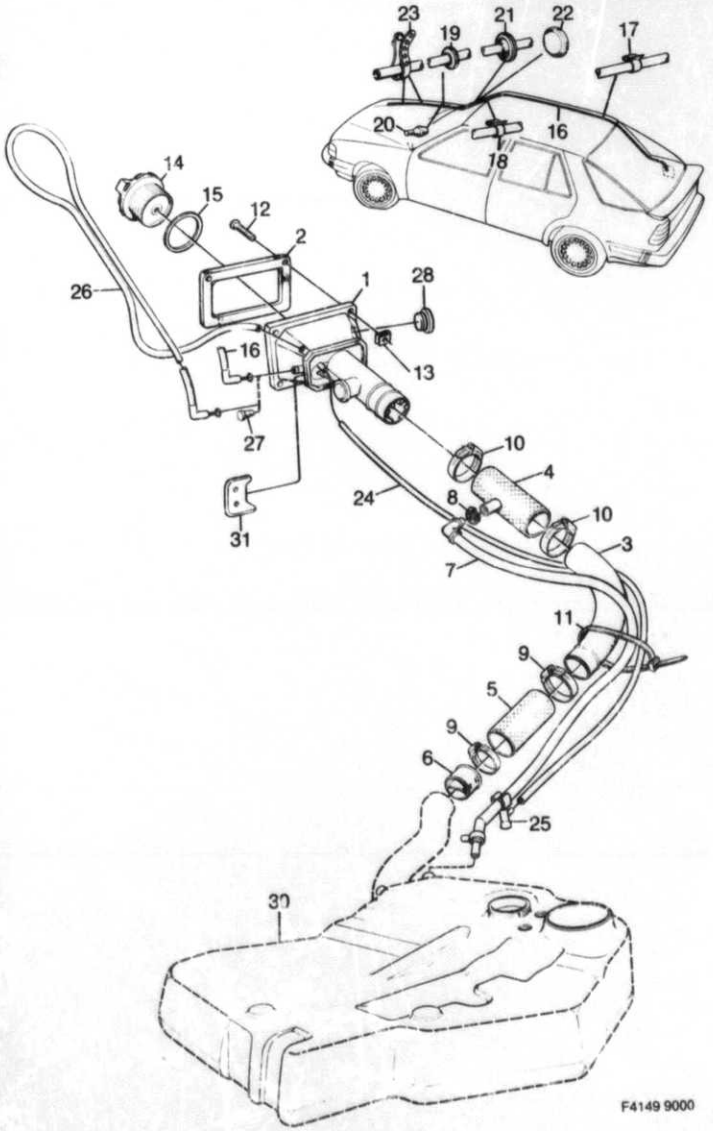

0810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 225		107),(9382193)	1	Filler pipe	Påfyllningsrör	5
0020	1	*89 81 813*		108,129) NLS - USE 8982225	1	Filler pipe	Påfyllningsrör	5
0030	1	89 82 225		130)	1	Filler pipe	Påfyllningsrör	5
0040	1	89 82 191		1986-,107,212),(9381609)	1	Filler pipe	Påfyllningsrör	5
0050	1	*89 81 680*		108,129,212) NLS - USE 8982191	1	Filler pipe	Påfyllningsrör	5
0060	1	89 82 191		130,212)	1	Filler pipe	Påfyllningsrör	5
0070	2	93 87 002			1	▲Dust seal	▲Dammtätning	5
0080	3	*93 84 033*		-1985 NLS	1	Filler pipe	Påfyllningsrör	5
0090	3	93 93 034		1986-,159)	1	Filler pipe	Påfyllningsrör	5
0100	3	89 80 500		151)	1	Filler pipe	Påfyllningsrör	5
0110	4	93 84 041		1985	1	Hose	Slang	5
0120	4	93 92 200		1986-	1	Hose	Slang	5
0130	5	93 93 315		59),(9384058)	1	Hose	Slang	5
0140	5	93 93 315		60)	1	Hose	Slang	5
0150	6	93 87 887			1	Non-return valve	Backventil	5
0160	7	93 82 961		-1985	1	Hose	Slang	5
0170	7	89 81 607		1986-111),(9393166)	1	Tube	Rör	6
0180	7	89 81 607		112)	1	Tube	Rör	6
0190	8	*93 87 341*		NLS - USE 7970072	1	Hose clamp	Slangklamma	5
0200	9	79 70 130			2	Hose clamp	Slangklamma	5
0210	10	79 70 148			2	Hose clamp	Slangklamma	5
0220	11	79 71 880			1	Tensioning band	Spännband	4
0230	12	79 70 536			4	Screw	Skruv	6
0240	13	*83 15 467*		86) NLS - USE 8978371	2	Clip	Clips	5
0250	13	89 78 371		87)	2	Nut	Mutter	5
0260	14	*89 82 209*		(7510530,9392705,8977837 NLS - USE 4391058	1	Filler cap	Tanklock	2
0270	15	75 11 751			1	▲Gasket	▲Packning	4
0280	16	93 83 035		187)	1	Tube	Rör	6
0290	16	40 15 764		188)	1	Tube	Rör	6
0300	17	93 83 043			5	Clamp	Klammer	5
0310	18	93 83 050			3	Clamp	Klammer	5
0320	19	79 61 337			1	Bushing	Bussning	6
0330	20	70 38 342		62,149)	1	Plug	Plugg	5
0340	21	93 87 903			1	Grommet	Genomföring	6
0350	22	71 55 708		62,149)	1	Plug	Plugg	5
0360	23	93 92 606		-1985,(9387382)	2	Tensioning band	Spännband	5
0370	23	93 92 606		1986-	3	Tensioning band	Spännband	5
0380	24	93 94 867		62,149)	1	Hose	Slang	5
0390	25	93 94 875		62,149)	1	Funnel	Tratt	4
0400	26	93 93 299		62,149)	1	Tube	Rör	6
0410	27	75 36 840			1	Plastic plug	Plastplugg	5
0420	28	71 63 066		213), 1989-	1	Plug	Plugg	5


59. Ch. --J1001450, --J2000242, --H8000836
60. Ch. J1001451--, J2000243--, H8000837--
62. Ch H1024812-.
86. Ch. -J1012772, -J2007008, -J8000766.
87. Ch. J1012773-, J2007009-, J8000767-.
107. Ch. --J1021109, --J2019550, --J8001253.
108. Ch. J1021110--, J8001254--, K2000001-.
111. Ch. --J1022890, --J2013234, --J8001476.
112. Ch. J1022891--, J2013235--, J8001477--.
129. Ch. --J1026156, --J2015342, --J8001465.
130. Ch. J1026157--, J2015343--, J8001466--.
149. For cars without carbon filter För bilar utan kolfilter.
150. Ch. -J1031580, --J2018818, --J8001756.
151. Ch. J1031581--, J2018819--, J8001757--.
187. Ch. --K1020741, --K2012599, - K8000865.
188. Ch. K1020742--, K2012600--, K8000866--.
212. Unleaded fuel Blyfri bensin
213. Without central lock. Utan centrallås.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G06
Supercharging system	1-C10
Kits	1-G18

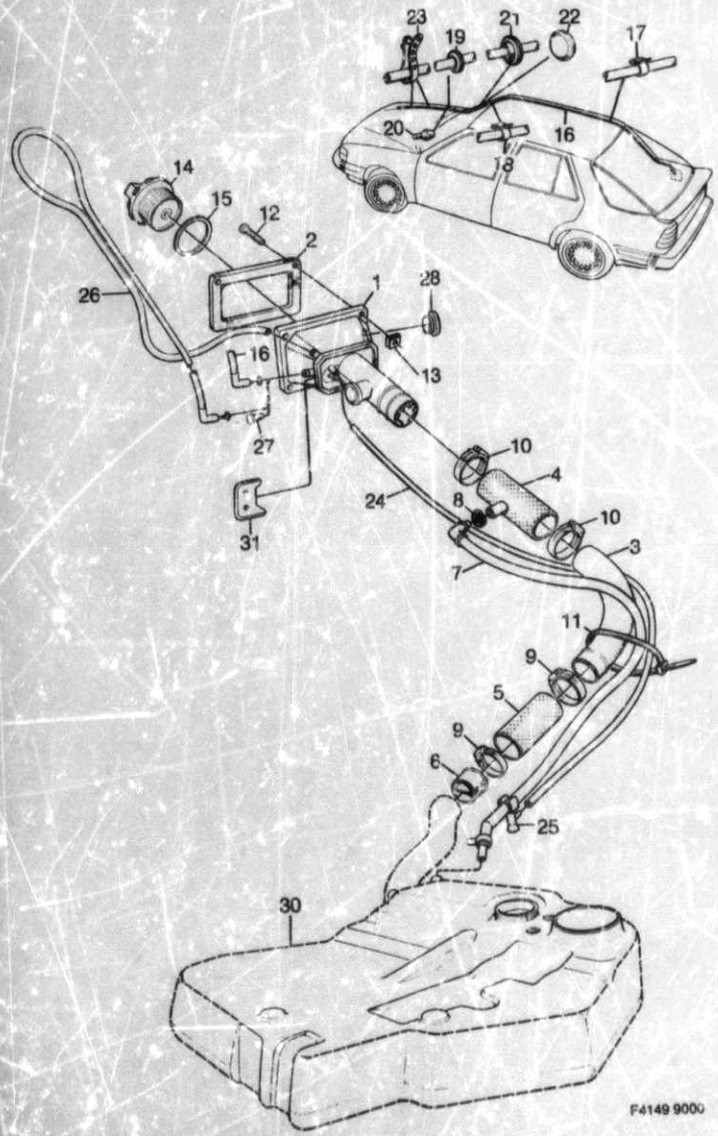

Fuel system

1-D02

Filler pipe
Hose

Bränslesystem

Påfyllningsrör
Slang

06'10	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	30			See page 2-051, 1-D04		Fuel tank	Bränsletank	
0440	31			See page 8A-029, 4-G06		Sealing collar	Tätningskrage	


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D04

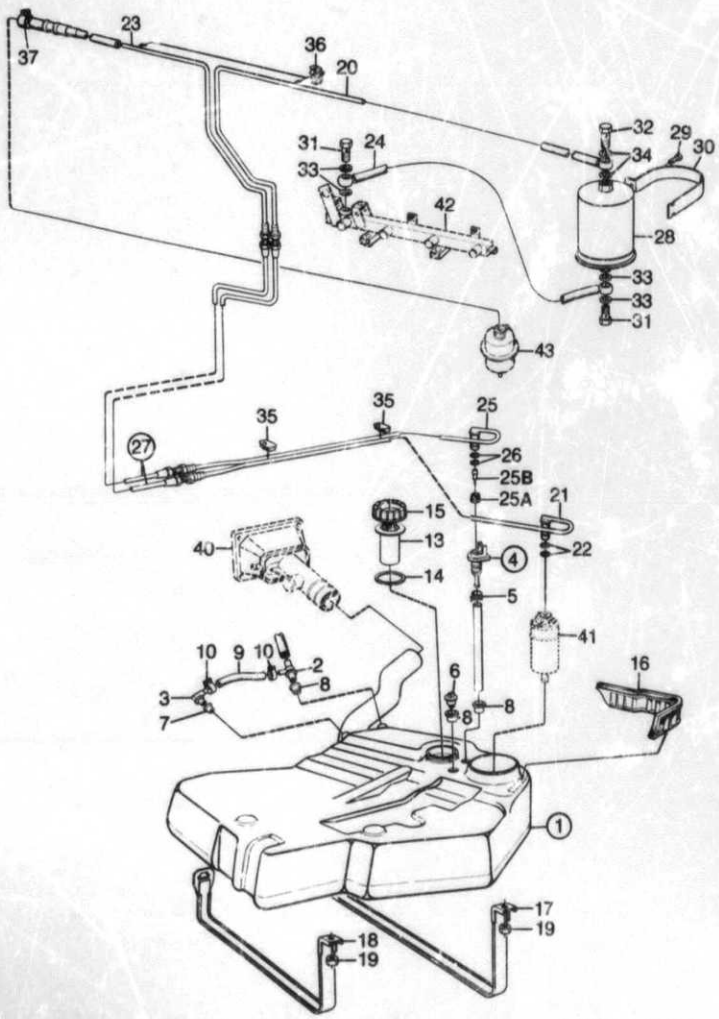

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 82 839*		6,83,227) NLS - USE 9392689, 9392895	1	Tank	Tank	6
0020	1	93 92 895		7,83)-1986	1	Tank	Tank	6
0030	1	93 93 802		1987-,83)	1	Tank	Tank	6
0040								
0050	1	*93 83 506*		6,75,228) NLS - USE 9392689, 9393794	1	Tank	Tank	6
0060	1	*93 92 503*		7,75)-1986 NLS - USE 9393794	1	Tank	Tank	6
0070	1	93 93 794		1987-,75)	1	Tank	Tank	6
0080								
0090	1	93 92 895		82)-1986	1	Tank	Tank	6
0100	1	93 93 802		1987-,72,82)	1	Tank	Tank	6
0110	1	75 91 324		73,82)	1	Tank	Tank	6
0120								
0130	1	*93 83 506*		1986-,6,74) NLS - USE 9392689, 9393794	1	Tank	Tank	6
0140	1	93 93 794		7,74) 1986,(9392903)	1	Tank	Tank	6
0150	1	93 93 794		1987-,74,135)	1	Tank	Tank	6
0160	1	75 91 332		74,136)	1	Tank	Tank	6
0170								
0180	2	*93 87 564*		-1985 NLS - USE 9393042	1	▪Nipple	▪Nippel	4
0190	2			1986-	1	Hose	Slang	
0200				See page 2-047, 1-F24				
0210	3	93 87 588			1	▪Connector	▪Anslutning	4
0220	4	93 82 938			1	▪Nipple	▪Nippel	4
0230				1)	1	▪Tube	▪Rör	
0240	5	79 73 605			1	▪▪Hose clamp	▪▪Slangklamma	5
0250	6	93 93 810			1	▪Connector	▪Anslutning	6
0260	7	93 25 656			1	▪Bushing	▪Bussning	4
0270	8	93 94 021		(7535537)	3	▪Bushing	▪Bussning	5
0280	9	93 63 268		137)	1	▪Hose	▪Slang	5
0290	9	89 81 615		138)	1	▪Hose	▪Slang	5
0300	10	83 32 587			2	▪Hose clamp	▪Slangklamma	5
0310	13	*93 90 451*		1985 NLS - USE 9390832	1	Fuel transmitter	Bränslegivare	3
0320	13	93 90 832		1986-	1	Fuel transmitter	Bränslegivare	3
0330	14	93 68 846		6)	1	Gasket	Packning	3
0340	14	93 92 689		7)	1	Gasket	Packning	3
0350	15	93 93 950			1	Nut	Mutter	4
0360	16	93 88 034			1	Support	Stöd	6
0370	17	93 82 771			1	Tensioning band	Spännband	6
0380	18	*93 82 789*		45) NLS	1	Tensioning band	Spännband	6

1. Not as separate spare part. Ej som separat reservdel.
6. Ch.-G1003173.
7. Ch.G1003174-.
45. Ch. -H1014888, -H8000970
72. Ch. -J1006798, -J2003028, -J8000557. I WITHOUT CATALYTIC CONVERTER. Ch. -J1006798, -J2003028, -J8000557. I UTAN KATALYTISK REAKTOR.
73. Ch. J1006799-, J2003029-, J8000558-,I WITHOUT CATALYTIC CONVERTER. Ch. J1006799-, J2003029-, J8000558-,I UTAN KATALYTISK REAKTOR.
74. For I with catalytic converter. För I med katalytisk reaktor.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
82. For I without catalytic converter. För I utan katalytisk reaktor.
83. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
135. Ch. --J1026229, --J2015405, --J8001593. I WITH CATALYTIC CONVERTER. Ch. --J1026229, --J2015405, --J8001593. I MED KATALYTISK REAKTOR.
136. Ch. J1026230--, J2015406--, J8001594--. I WITH CATALYTIC CONVERTER. Ch. J1026230--, J2015406--, J8001594--, I MED KATALYTISK REAKTOR.
137. Ch. --J1021187, --J2012149, --J8001177.
138. Ch. J1021188--, J2012150--, J8001178--.
227. Superseded by 9392895 and 9392689. Ersatt av 9392895 och 9392689.
228. Superseded by 9393794 and 9392689. Ersatt av 9393794 och 9392689.

MASTER INDEX


0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D06

Fuel tank
Bränsletank

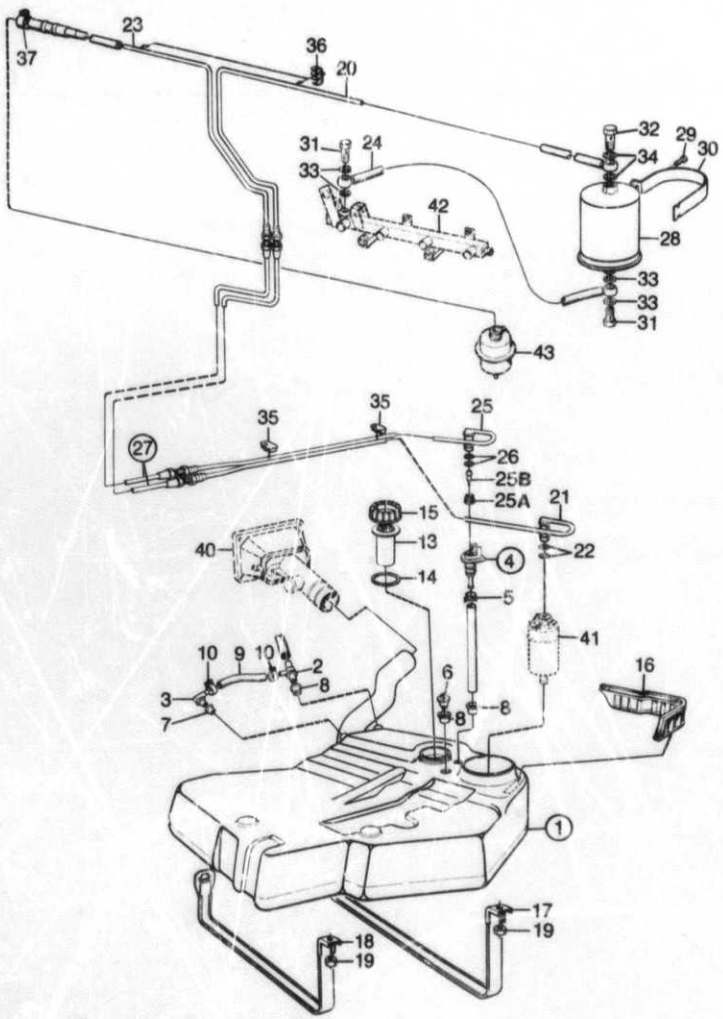

F1935 - 9000

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	18	89 75 153		46)	1	Tensioning band	Spännband	6
0400	19	79 71 922			3	Nut	Mutter	3
0410	20	*93 88 430*		-1988 NLS - USE 9394669	1	Fuel pipe	Bränsleledning	5
0420	20	93 94 669		1987	1	Fuel pipe	Bränsleledning	5
0430	20	89 75 104		1988,75)	1	Fuel pipe	Bränsleledning	5
0440	20	89 75 104		1988, I	1	Fuel pipe	Bränsleledning	5
0450	20	93 94 669		83), 1988	1	Fuel pipe	Bränsleledning	5
0460	20	89 75 104		500),1989-	1	Fuel pipe	Bränsleledning	5
0470	21	93 88 448			1	Fuel pipe	Bränsleledning	5
0480	21	75 91 266		73,136)	1	Fuel pipe	Bränsleledning	5
0490	22	*93 84 280*		89) NLS - USE 7974546	2	.O-ring	.O-ring	2
0500	22	79 74 546		90)	2	.O-ring	.O-ring	2
0510	23	93 88 455		-1987	1	Fuel pipe	Bränsleledning	5
0520	23	75 91 878		1988,85)	1	Fuel pipe	Bränsleledning	5
0530	23	93 88 455		1988,84)	1	Fuel pipe	Bränsleledning	5
0540	23	75 91 878		500),1989-	1	Fuel pipe	Bränsleledning	5
0550	24	93 93 513		-1986,(9389412)	1	Fuel pipe	Bränsleledning	5
0560	24	93 93 513		1987	1	Fuel pipe	Bränsleledning	5
0570	24	75 91 852		1988,85)	1	Fuel pipe	Bränsleledning	5
0580	24	93 93 513		1988,84)	1	Fuel pipe	Bränsleledning	5
0590	24	75 91 852		500),1989-	1	Fuel pipe	Bränsleledning	5
0600	25	93 88 463			1	Fuel pipe	Bränsleledning	5
0610	25	75 91 274		73,136)	1	Fuel pipe	Bränsleledning	5
0620	25A	89 77 779			1	.Non-return valve	.Backventil	6
0630	25B	89 77 761			1	.Valve peg	.Ventilkägla	6
0640	26	79 74 546		89),(7974546)	2	.O-ring	.O-ring	2
0650	26	79 74 546		90)	2	.O-ring	.O-ring	2
0660	27	89 78 934		127),(9388414)	1	Tube	Rör	5
0670	27	89 78 934		128)	1	Tube	Rör	5
0680	28	*93 33 790*		NLS - USE 4163853	1	Fuel filter	Bränslefilter	2
0690	29	79 74 553		-1986	1	Screw	Skruv	5
0700	29	79 75 774		1987-	1	Screw	Skruv	5
0710	30	93 84 777		-1986	1	Tensioning band	Spännband	6
0720	30	93 93 331		1987-	1	Tensioning band	Spännband	6
0730	31	*83 19 915*		NLS - USE 4374203	2	Banjo bolt	Hålbult	5
0740	32	*83 22 927*		NLS - USE 4374211	1	Banjo bolt	Hålbult	5
0750	33	*83 26 704*		76) NLS - USE 4443883	4	Seal	Tätning	5
0760	33	*89 77 373*		77,115) NLS - USE 4443883	4	Seal	Tätning	5
0770	33	*89 81 979*		116) NLS - USE 4443883	4	Seal	Tätning	5
0780	34	89 81 361		76),(8326712)	2	Seal	Tätning	5
0790	34	89 81 961		77)	2	Seal	Tätning	5
0800	35	*93 82 870*		127) NLS - USE 8978827	6	Clamp	Klammer	5
0810	35	89 78 827		128)	6	Clamp	Klammer	5
0820	36	93 87 713			2	Clamp	Klammer	5

46. Ch. H1014890-, H8000971-
73. Ch. J1006799-, J2003029-, J8000558-, I WITHOUT CATALYTIC CONVERTER. Ch. J1006799-, J2003029-, J8000558-, I UTAN KATALYTISK REAKTOR.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
76. Ch. -J1004595, -J2001820, -J8000475.
77. Ch. J1004596-, J2001821-, J8000476-.
83. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
89. Ch. -J1012221, -J2006268, -J8000733.
90. Ch. J1012222-, J2006269-, J8000734-.
115. Ch. --J1023582, --J2013697, --J8001405.
116. Ch. J1023583--, J2013698--, J8001406--.
127. Ch. --J1024209, --J2014101, --J8001619.
128. Ch. J1024210--, J2014102--, J8001620--.
136. Ch. J1026230--, J2015406--, J8001594--, I WITH CATALYTIC CONVERTER. Ch. J1026230--, J2015406--, J8001594--, I MED KATALYTISK REAKTOR.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D08

Fuel tank
Bränsletank

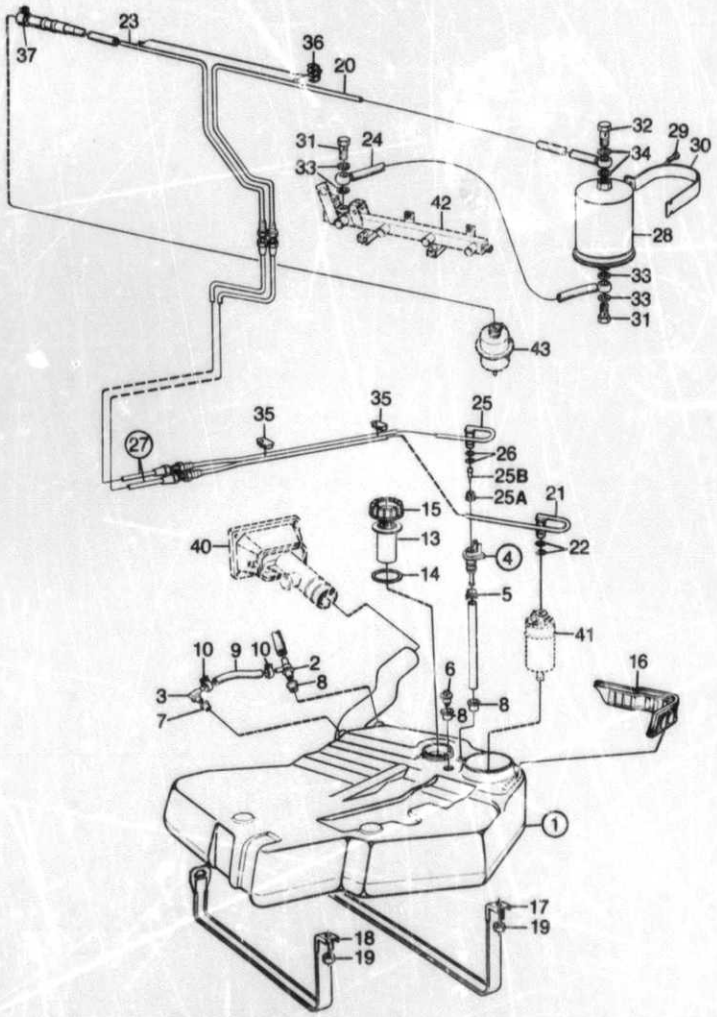

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	37	83 32 587			1	Hose clamp	Slangklamma	5
0840	40			See page 2-047, 1-C24		Filler pipe	Påfyllningsrör	
0850	41			See page 2-057, 1-D10		Fuel pump	Bränslepump	
0860	42			See page 2-061, 1-D14		Tube	Rör	
0870	43			See page 2-061, 1-D14		Regulator	Regulator	

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D10

Fuel pump

Bränslepump

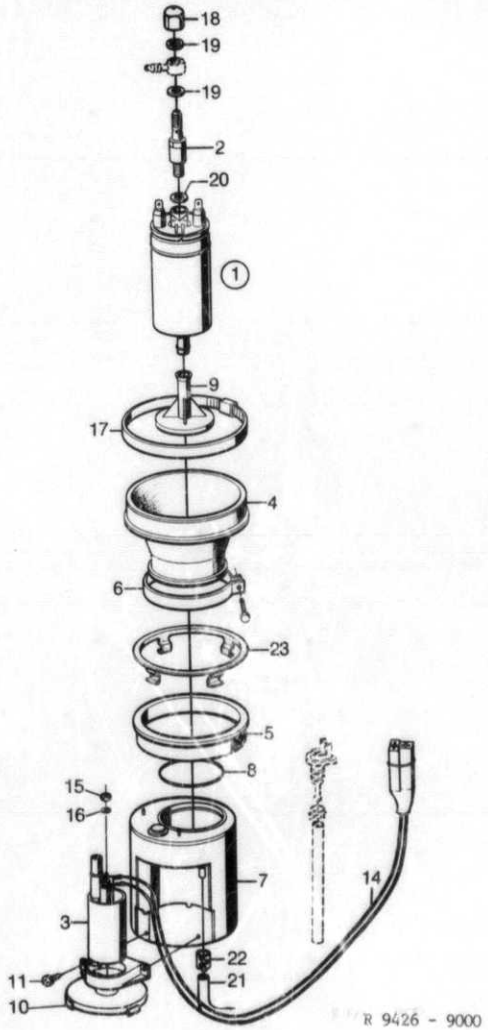

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 92 911		23),(9367798)	1	Fuel pump	Bränslepump	5
0020	1	93 92 911		24)-1986	1	Fuel pump	Bränslepump	5
0030	1	93 93 935		1987-,72,135), I	1	Fuel pump	Bränslepump	5
0040	1			73,136), I	1	Fuel pump	Bränslepump	
0050				See page 2-059, 1-D12				
0060	1	93 93 935		1987-, TURBO	1	Fuel pump	Bränslepump	5
0070	2	88 17 553		PART OF 9392911	1	▪Valve	▪Ventil	3
0080	2	93 37 510		PART OF 9393935	1	▪Valve	▪Ventil	3
0090	3	75 26 163		12),(9349671)	1	Fuel pump	Bränslepump	5
0100	3	75 26 163		13)	1	Fuel pump	Bränslepump	5
0110	4	93 67 756			1	Collar	Krage	5
0120	5	*93 89 396*		19,229) NLS - USE 7591043, 7591399	1	Support ring	Stödring	6
0130	5	*93 94 016*		20,70) NLS - USE 7591043, 7591399	1	Support ring	Stödring	6
0140	5	75 91 399		71)	1	Support ring	Stödring	6
0150	6	93 67 731			1	Hose clamp	Slangklamma	5
0160	7	93 86 798			1	Reservoir	Behållare	5
0170	8	93 83 522			1	O-ring	O-ring	2
0180	9	93 83 969			1	Strainer	Sil	4
0190	10	93 86 491			1	Strainer	Sil	4
0200	11	79 73 613			2	Screw	Skruv	5
0210	14	93 63 540			1	Cable harness	Ledningsnät	6
0220	15	79 73 993			2	Nut	Mutter	5
0230	16	79 10 516			2	Washer	Bricka	5
0240	17	93 31 554			1	Hose clamp	Slangklamma	5
0250	18	93 61 668			1	Cap nut	Kupolmutter	5
0260	19	*83 26 704*		NLS - USE 4443883	2	Seal	Tätning	5
0270	20	93 37 528			1	Washer	Bricka	5
0280	21	89 75 484		(9362260)	1	Return pipe	Returrör	5
0290	22	79 73 522			1	Hose clamp	Slangklamma	5
0300	23	75 91 043		71)	1	Support ring	Stödring	6

12. Ch. -G1003538.
13. Ch. G1003539-.
19. Ch. -G1012609.
20. Ch. G1012610-.
23. Ch. -G1015036.
24. Ch. G1015037-.
70. Ch.-J1000423, -J2000020, -J8000037.
71. Ch.J1000424-, J2000021-, J8000038-.
72. Ch. -J1006798, -J2003028, -J8000557. I WITHOUT CATALYTIC CONVERTER. Ch. -J1006798, -J2003028, -J8000557. I UTAN KATALYTISK REAKTOR.
73. Ch. J1006799-, J2003029-, J8000558-.I WITHOUT CATALYTIC CONVERTER. Ch. J1006799-, J2003029-, J8000558-.I UTAN KATALYTISK REAKTOR.
135. Ch. --J1026229, --J2015405, --J8001593. I WITH CATALYTIC CONVERTER. Ch. --J1026229, --J2015405, --J8001593. I MED KATALYTISK REAKTOR.
136. Ch. J1026230--, J2015406--, J8001594--. I WITH CATALYTIC CONVERTER. Ch. J1026230--, J2015406--, J8001594--. I MED KATALYTISK REAKTOR.
229. Superseded by 7591399 and 7591043. Ersatt av 7591399 och 7591043.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Fuel system

1-D12 Fuel pump 73,136), I

Bränslesystem

Bränslepump 73,136), I

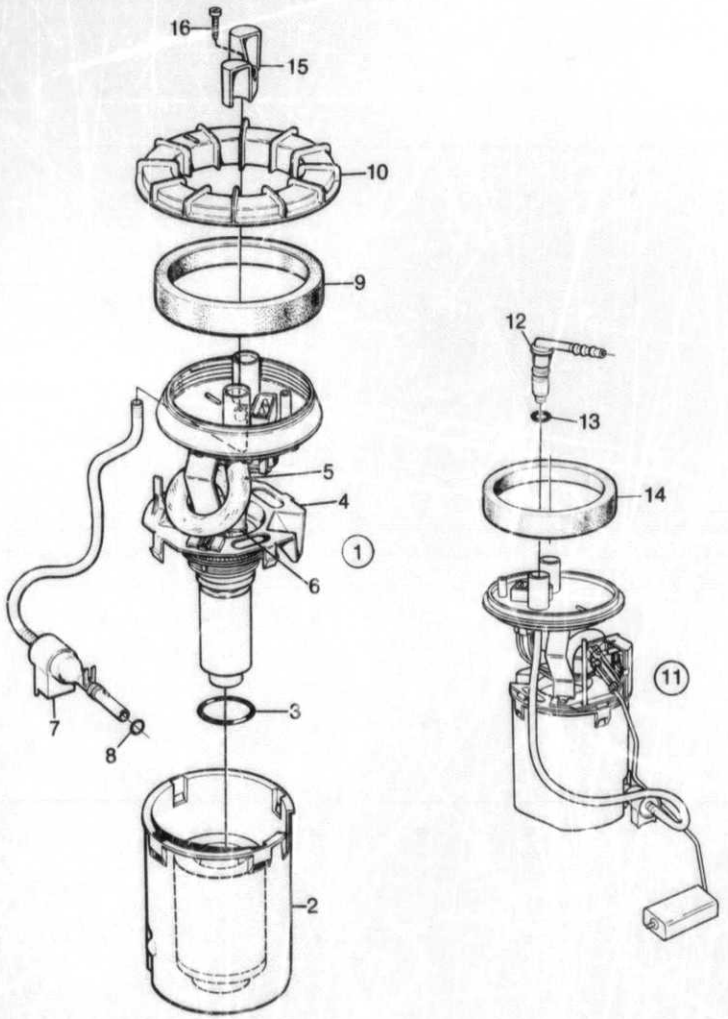

F4147 9000

0990	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 90 854*		73,136,139,225), I NLS - USE 4161493	1	Fuel pump	Bränslepump	5
0020	2	89 80 021			1	.Reservoir	.Behållare	5
0030	3	75 91 902			1	..O-ring	..O-ring	2
0040	4	*89 80 039*		1,172,225) NLS - USE 4161493	1	.Fuel pump	.Bränslepump	5
0050	4	*40 18 495*		1,173,225) NLS - USE 4161493	1	.Fuel pump	.Bränslepump	5
0060	5	40 19 998	S		1	..Hose	..Slang	5
0070	6	79 68 308	S		2	..Hose clamp	..Slangklamma	5
0080	7	89 80 047			1	.Ejector unit	.Ejektorenhet	5
0090	8	93 94 602			1	..O-ring	..O-ring	2
0100	9	93 94 529			1	.Seal	.Tätning	6
0110	10	93 94 503			1	.Cover	.Lock	6
0120	11	41 61 493		140),I	1	Fuel pump	Bränslepump	5
0130	12	41 61 766			1	.Non-return valve	.Backventil	3
0140	13	79 74 546			2	.O-ring	.O-ring	2
0150	14	93 94 529			1	.Seal	.Tätning	6
0160	15	93 94 628			1	Lock brace	Låsbygel	5
0170	16	79 71 344			1	Screw	Skruv	5
0180								
0190		40 20 848		See page 2-147, 1-H04	X	Hose kit	Slangsats	5

1. Not as separate spare part. Ej som separat reservdel.
73. Ch. J1006799-, J2003029-, J8000558-, I WITHOUT CATALYTIC CONVERTER. Ch. J1006799-, J2003029-, J8000558-, I UTAN KATALYTISK REAKTOR.
136. Ch. J1026230-, J2015406-, J8001594-, I WITH CATALYTIC CONVERTER. Ch. J1026230-, J2015406-, J8001594-, I MED KATALYTISK REAKTOR.
139. Ch. -J1026229, -J2015405, -J8001593.
140. Ch. J1026230-, J2015406-, J8001594- .
172. Ch. -K1012932, -K2006930, -K8000432.
173. Ch. K1012933-, K2006931-, K8000433-.
225. Superseded by 4161493. Ersatt av 4161493.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D14

Mass air flow sensor
Luftmassamätare

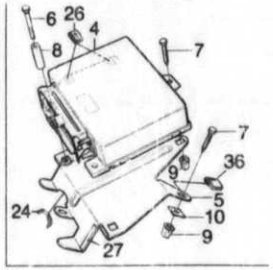

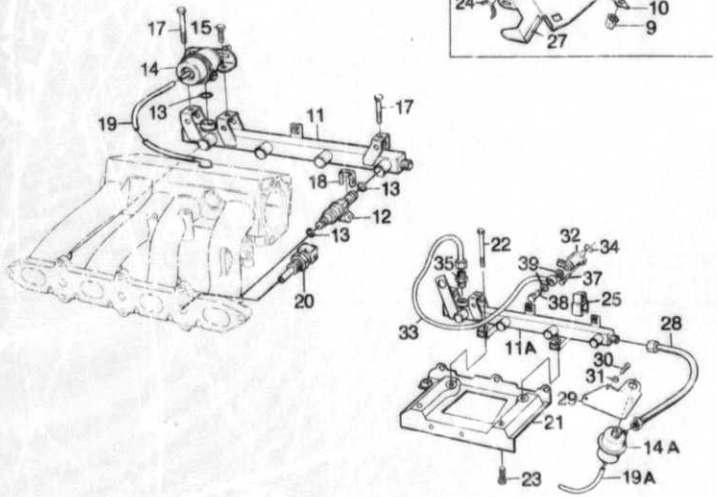

F4155 9000

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 75 643		700), -1988, TURBO	1	Mass air flow sensor	Luftmassamätare	4
0020	1	89 78 280		1989-,83,700)	1	Mass air flow sensor	Luftmassamätare	4
0030	1	75 38 655		75,500,700),1989-	1	Mass air flow sensor	Luftmassamätare	4
0040	1	93 90 428		700), 1986-1987, I	1	Mass air flow sensor	Luftmassamätare	4
0050	1	75 91 183		1988-,82,700)	1	Mass air flow sensor	Luftmassamätare	4
0060	1	75 38 663		1988-,74,700)	1	Mass air flow sensor	Luftmassamätare	4
0070								
0080	1A	75 35 446			1	Service kit	Servicesats	5
0090	2	79 74 306			1	O-ring	O-ring	3
0100	3	75 25 710		84)	1	Plug	Plugg	5
0110	3	93 83 076		-1988,85)	1	Plug	Plugg	5
0120	3	93 83 076		500,74),1989-	1	Plug	Plugg	5
0130								
0140	4	*93 88 471*		700),-1985 NLS	1	Electronic unit	Elektronikenhet	3
0150								
0160	4	*93 83 513*		1986-1987,82,700) NLS	1	Electronic unit	Elektronikenhet	3
0170	4	75 91 498		1988,82,700)	1	Electronic unit	Elektronikenhet	3
0180	4	91 14 711		1989-,82,700)	1	Electronic unit	Elektronikenhet	3
0190	4	74 87 127		1989-,82,700),A	1	Electronic unit	Elektronikenhet	3
0200								
0210	4	93 89 768		1986-1987,74,700)	1	Electronic unit	Elektronikenhet	3
0220	4	75 38 671		1988,74,700)	1	Electronic unit	Elektronikenhet	3
0230	4	74 87 143		74,500,700),1989-	1	Electronic unit	Elektronikenhet	3
0240								
0250	4	*93 89 750*		1986-1987,75,700), M NLS	1	Electronic unit	Elektronikenhet	3
0260	4	93 91 178		1986-1987,75,700), A	1	Electronic unit	Elektronikenhet	3
0270	4	93 91 178		1988,75,700)	1	Electronic unit	Elektronikenhet	3
0280	4	89 78 355		75,500,700),1989-	1	Electronic unit	Elektronikenhet	3
0290								
0300	4	93 89 545		1986,83,700), M	1	Electronic unit	Elektronikenhet	3
0310	4	93 93 463		1987,83,700), M	1	Electronic unit	Elektronikenhet	3
0320	4	93 91 186		1986-1987,83,700), A	1	Electronic unit	Elektronikenhet	3
0330	4	93 91 186		1988,83,700)	1	Electronic unit	Elektronikenhet	3
0340	4	91 14 729		1989-,83,700),M	1	Electronic unit	Elektronikenhet	3
0350	4	89 75 294		1989-,83,700),A	1	Electronic unit	Elektronikenhet	3
0360								
0370	5	*93 87 168*		-1986 NLS - USE 7591027	1	Bracket	Fäste	5
0380	5	75 91 027		1987	1	Bracket	Fäste	5
0390	5	75 90 235		1988-	1	Bracket	Fäste	5
0400	6	80 21 743			1	Screw	Skruv	5
0410	7	79 72 672		-1987	5	Screw	Skruv	5
0420	7	79 72 672		1988-	3	Screw	Skruv	5
0430	8	93 87 895		-1987	1	Spacer sleeve	Distanshylsa	5
0440	8	93 87 895		1988-	3	Spacer sleeve	Distanshylsa	5
0450	9	79 75 261			5	Nut	Mutter	5
0460	10	93 89 198			5	Base	Underlägg	2
0470								
0480	11	75 86 456		-1986, (7521461)	1	Tube	Rör	6
0490	11	75 86 456		1987	1	Tube	Rör	6
0500	11	75 86 464		1988-,152)	1	Tube	Rör	6
0510	11	74 85 550		153)-1988	1	Tube	Rör	6
0520	11	78 72 922		1989-,156), (7486939)	1	Tube	Rör	6

74. For I with catalytic converter. För I med katalytisk reaktor.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
82. For I without catalytic converter. För I utan katalytisk reaktor.
83. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
152. Engine -J039633.
153. Engine J039634-.
156. Engine -K016527.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D16

Mass air flow sensor
Luftmassamätare

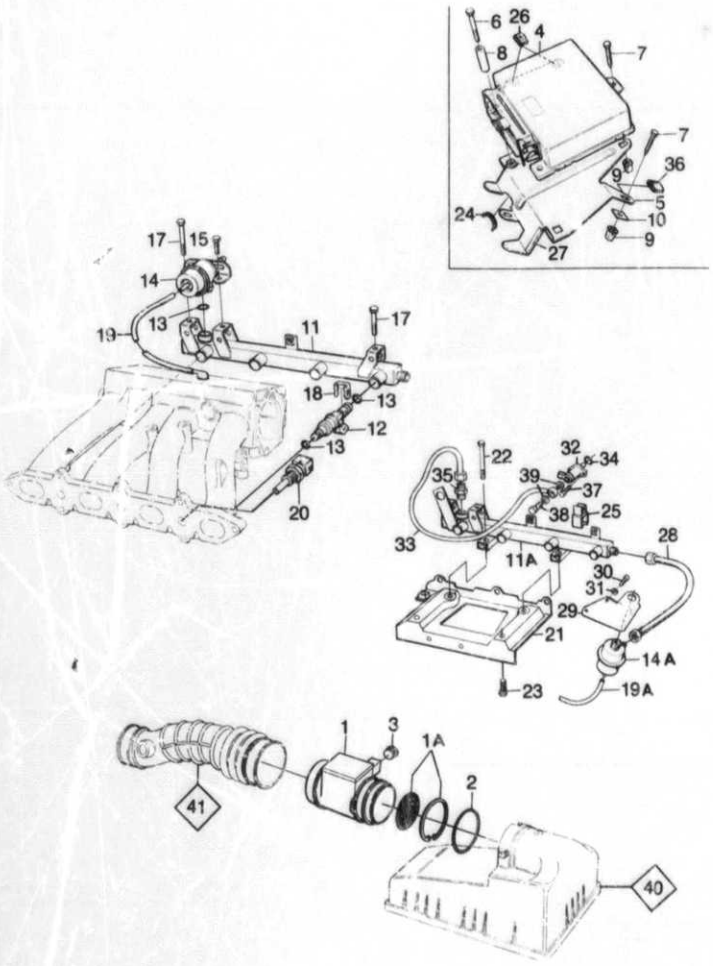

F4155 9000

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	11	91 16 146		157)	1	Tube	Rör	6
0540								
0550	11A	75 86 464		-1986,27),(7564081)	1	Tube	Rör	6
0560	11A	75 86 464		1987,27), (7583677)	1	Tube	Rör	6
0570	11A	74 81 021		1988,27)	1	Tube	Rör	6
0580	11A	*74 86 939*		1989-,27,156,500) NLS - USE 7872922	1	Tube	Rör	6
0590	11A	91 16 146		157)	1	Tube	Rör	6
0600								
0610	12	75 60 170		700), TURBO	4	Injection valve	Insprutningsventil	2
0620	12	75 60 162		700), I	4	Injection valve	Insprutningsventil	2
0630	13	75 61 210			9	•O-ring	•O-ring	2
0640								
0650	14	*75 18 681*		1985 NLS - USE 7584071	1	Regulator	Regulator	5
0660	14	75 80 152		1986,83), (7564156)	1	Regulator	Regulator	5
0670	14	75 68 058		1987,83)	1	Regulator	Regulator	5
0680	14	75 68 058		1988,83)	1	Regulator	Regulator	5
0690	14	74 86 913		1989-,83)	1	Regulator	Regulator	5
0700								
0710	14	75 80 152		1986,75)	1	Regulator	Regulator	5
0720	14	75 84 071		1987,75)	1	Regulator	Regulator	5
0730	14A	75 64 131		1988,75)	1	Regulator	Regulator	5
0740	14A	74 86 905		500,75),1989-	1	Regulator	Regulator	5
0750								
0760	14	75 80 160		1986-1988,82), (7564149)	1	Regulator	Regulator	5
0770	14	74 86 921		1989-,82)	1	Regulator	Regulator	5
0780								
0790	14A	75 84 063		1987,74)	1	Regulator	Regulator	5
0800	14A	75 64 123		1988,74)	1	Regulator	Regulator	5
0810	14A	74 86 921		500,74),1989-	1	Regulator	Regulator	5
0820								
0830	15	80 19 887			1	Screw	Skruv	5
0840	17	80 21 974		-1987	2	Screw	Skruv	5
0850	17	75 66 730		1988-	2	Screw	Skruv	5
0860	18	93 56 486			4	Clamp	Klammer	5
0870	19	91 36 243		1985, L=565 MM	1	Vaccum hose	Vakuumslang	5
0880	19	91 36 243		1986-, L=460	1	Vaccum hose	Vakuumslang	5
0890	19A	91 36 243		1988-, I, L=600 MM	1	Vaccum hose	Vakuumslang	5
0900	19A	91 36 243		1989-,I, EU,ME, L=565 MM	1	Vaccum hose	Vakuumslang	5
0910	19A	75 60 212		1988-, TURBO	1	Hose	Slang	4
0920	20	93 57 021			1	Temperature sensor	Temperaturgivare	2
0930	20	75 33 562		75), A	1	Sensor	Givare	2
0940	21	75 64 073		-1987,27)	1	Bracket	Konsol	5
0950	21	74 81 336		1988-	1	Bracket	Konsol	5
0960	22	75 66 730		-1987,27)	2	Screw	Skruv	5
0970	22	75 66 730		1988-	2	Screw	Skruv	5
0980	23	81 25 155		-1986,27)	2	Screw	Skruv	5
0990	23	81 25 148		1987-	2	Screw	Skruv	5
1000	24	75 91 035		1987-	1	Protecting moulding	Skyddslist	5
1010	25	75 39 950			1	Clamp	Klammer	5
1020	26	73 99 355			2	Clip	Clips	5
1030	27	75 35 437			1	Protecting moulding	Skyddslist	5
1040	28	75 88 429		1988	1	Fuel pipe	Bränsleledning	4
1050	28	74 86 954		500),1989-	1	Fuel pipe	Bränsleledning	5

27. For cars with parted inlet manifold. För bilar med delat inloppsrör.
74. For I with catalytic converter. För I med katalytisk reaktor.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
82. For I without catalytic converter. För I utan katalytisk reaktor.
83. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
156. Engine -K016527.
157. Engine K016528-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D18

Mass air flow sensor
Luftmassamätare

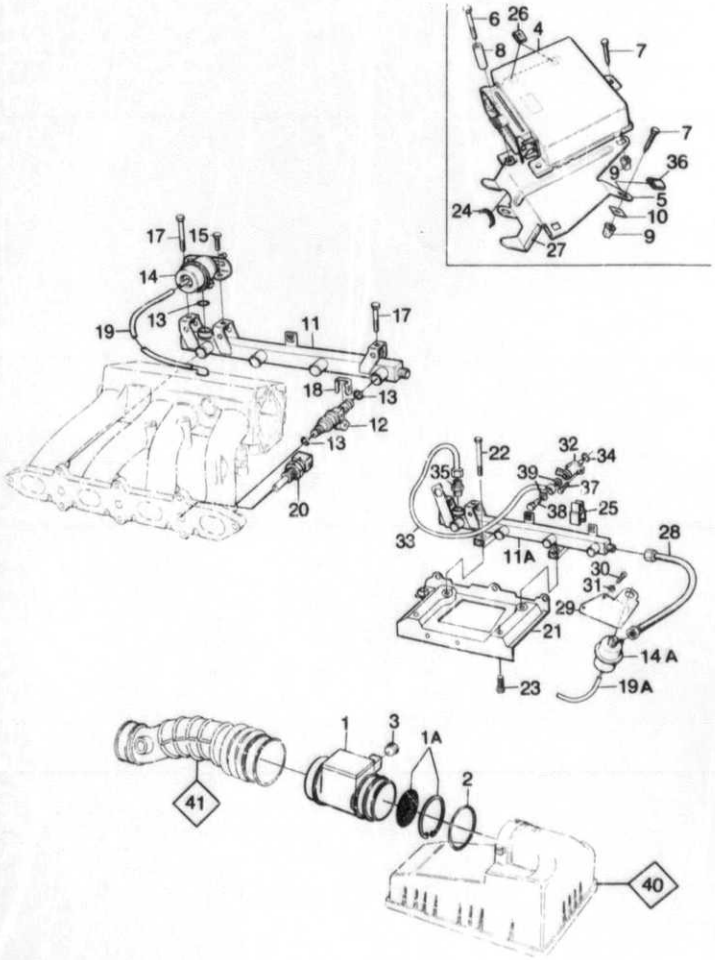

F4155 9000

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1060	29	75 88 643		1988-,176)	1	Bracket	Fäste	5
1070	29	87 87 657		177)	1	Bracket	Fäste	5
1080	30	93 50 653		1988-	2	Screw	Skruv	5
1090	31	80 29 951		1988-	2	Washer	Bricka	5
1100	32	74 86 129		500),1989-, I	1	Starter valve	Startventil	4
1110	33	89 81 417		500),1989-, I	1	Fuel pipe	Bränsleledning	5
1120	34	80 46 542		500),1989-, I	1	O-ring	O-ring	2
1130	35	89 81 581		500),1989-, I	1	Nipple	Nippel	3
1140	36	75 35 487		204)	1	Protecting moulding	Skyddslist	5
1150	37	75 07 072			2	Screw	Skruv	5
1160	38	83 20 319			1	Banjo bolt	Hålbult	5
1170	39	89 81 987			2	Seal	Tätning	5
1180	40			TURBO M -1987		Air cleaner housing	Luftrenarhus	
1190				See page 2-037, 1-C14				
1200	40			TURBO M 1988-		Air cleaner housing	Luftrenarhus	
1210				See page 2-039, 1-C16				
1220	40			TURBO A		Air cleaner housing	Luftrenarhus	
1230				See page 2-041, 1-C18				
1240	40			I, 1986-1988		Air cleaner housing	Luftrenarhus	
1250				See page 2-043, 1-C20				
1260	40			I, 1989-		Air cleaner housing	Luftrenarhus	
1270				See page 2-045, 1-C22				
1280	41			I, 1986-1988		Hose	Slang	
1290				See page 2-043, 1-C20				
1300	41			I, 1989		Hose	Slang	
1310				See page 2-045, 1-C22				
1320	41			TURBO		Hose	Slang	
1330				See page 2-129, 1-G10				
1340								
1350		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

176. Engine --K052492.
177. Engine K052493--.
204. Ch. K1012187--, K2006872--, K8000487--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D20

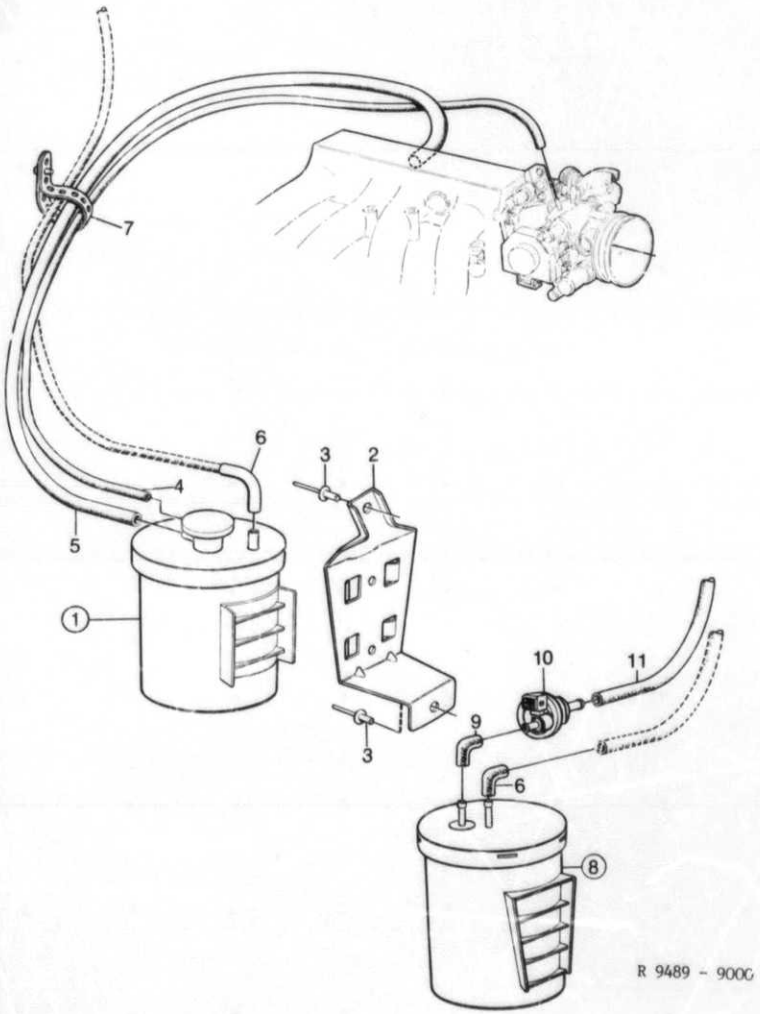

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 32 054		-1987	1	Carbon filter	Kolfilter	3
0020	1	75 32 054		1988, TURBO	1	Carbon filter	Kolfilter	3
0030	2	93 91 764			1	Bracket	Fäste	6
0040	3	94 43 920			2	Rivet	Nit	5
0050	4	93 92 309		-1987	1	Hose	Slang	5
0060	4	93 92 309		1988, TURBO	1	Hose	Slang	5
0070	5	75 33 326		-1987	1	Hose	Slang	5
0080	5	75 33 326		1988, TURBO	1	Hose	Slang	5
0090	6	93 85 121			1	Hose	Slang	5
0100	7	93 92 606			4	Tensioning band	Spännband	5
0110	8	75 39 216		1988,I	1	Carbon filter	Kolfilter	3
0120	8	75 39 216		500),1989-	1	Carbon filter	Kolfilter	3
0130	9	75 39 240		1988, I	1	Hose	Slang	5
0140	9	75 39 240		1989-,189,500)	1	Hose	Slang	5
0150	S	*40 18 586*		190) NLS - USE 7539240	1	Hose	Slang	5
0160	10	75 39 257		1988, I	1	Tank ventilation valve	Tankurluftningsventil	5
0170	10	75 39 257		500),1989-	1	Tank ventilation valve	Tankurluftningsventil	5
0180	11	75 91 837		1988, I	1	Hose	Slang	5
0190	11	75 91 837		500),1989-	1	Hose	Slang	5

189. Ch. --K1014986, --K2008413, --K8000828.
190. Ch. K1014987--, K2008414--, K8000829--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D22

Inlet manifold — *Inloppsrör*

1985 — *1985*

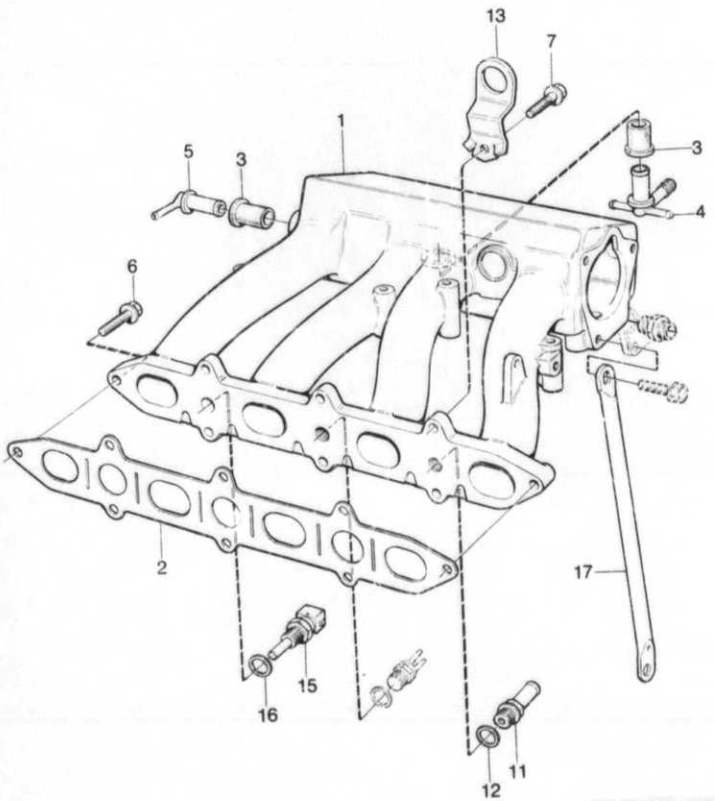

R 7228–9000

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 17 006*		NLS	1	Intake manifold	Inloppsrör	6
0020	2	*75 15 885*		NLS - USE 7584436	1	Gasket	Packning	2
0030	3	75 15 208			2	Bushing	Bussning	5
0040	4	75 22 477			1	Nipple	Nippel	4
0050	5	83 59 937			1	Nipple	Nippel	4
0060	6	81 25 197			7	Screw	Skruv	5
0070	7	81 25 205			1	Screw	Skruv	5
0080	11	*75 88 098*		(7517634)	1	Nipple	Nippel	5
0090	12	81 24 141			1	Seal	Tätning	5
0100	13	75 21 230			1	Lifting eye	Lyftögla	6
0110	15	93 57 021			1	Temperature sensor	Temperaturgivare	2
0120	16	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0130	17	*75 17 444*		NLS - USE 8788572	1	Stay	Stag	6

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-D24

Inlet manifold
1986-

Inloppsrör
1986-

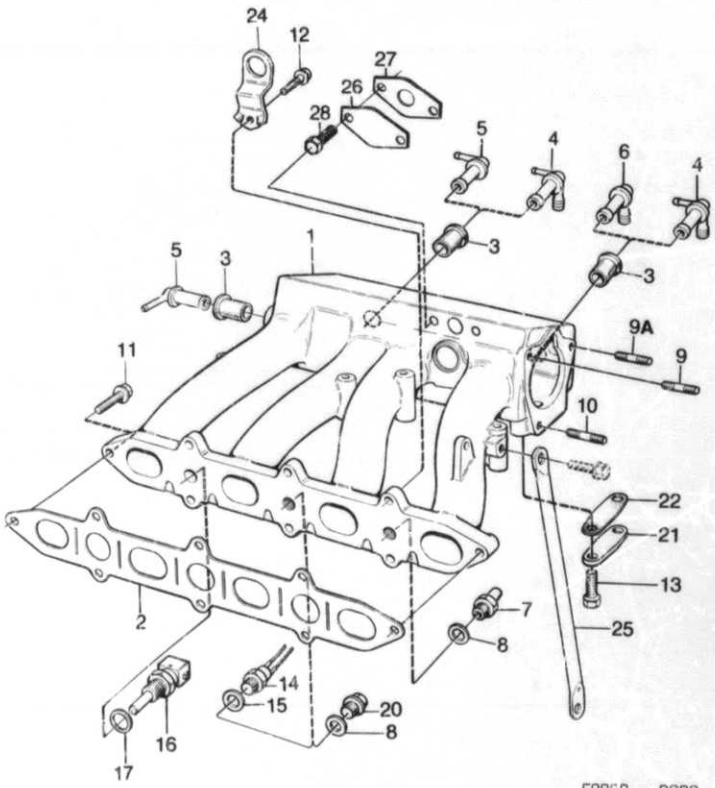

F0099 - 9000

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 66 243*		-1986 NLS - USE 7562283	1	Intake manifold	Inloppsrör	
0020	1	75 81 846		1987	1	Intake manifold	Inloppsrör	6
0030	1	*74 82 714*		1988-,145,215) NLS - USE 7484314, 7586860, 7586878	1	Intake manifold	Inloppsrör	6
0040	1	74 84 314		146)	1	Intake manifold	Inloppsrör	6
0050	2	*75 15 885*		-1987 NLS - USE 7584436	1	Gasket	Packning	2
0060	2	75 84 436		1988-	1	Gasket	Packning	2
0070	3	75 15 208		-1986	3	Bushing	Bussning	5
0080	3	75 15 208		1987-	2	Bushing	Bussning	5
0090	4	93 12 802			1	Nipple	Nippel	4
0100	5	83 59 937		85)	2	Nipple	Nippel	4
0110	5	83 59 937			1	Nipple	Nippel	4
0120	6	83 57 543			1	Nipple	Nippel	4
0130	7	75 88 096		(7517634, 7567449), (7486806)	1	Nipple	Nippel	5
0140								
0150	8	81 24 141		174)	2	Seal	Tätning	5
0160	8	89 61 961		175), (8326712)	2	Seal	Tätning	5
0170	9	80 05 928		-1986	2	Stud	Pinnskruv	5
0180	9	80 05 910		1987-	1	Stud	Pinnskruv	5
0190	9A	80 05 928			1	Stud	Pinnskruv	5
0200	10	90 05 938			1	Stud	Pinnskruv	5
0210	11	81 25 197			7	Screw	Skruv	5
0220	12	81 25 205			1	Screw	Skruv	5
0230	13	*80 19 903*		NLS - USE 9166281	2	Screw	Skruv	5
0240	14	75 19 416		85)	1	Thermostat	Termostat	5
0250	15	81 24 141		-1987,85)	1	Seal	Tätning	5
0260	16	93 57 021			1	Temperature sensor	Temperaturgivare	2
0270	17	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0280	20	*75 64 222*		-1988 NLS - USE 7563042	1	Plug	Propp	5
0290	20	*91 23 721*		1989- NLS - USE 7563042	1	Plug	Propp	5
0300	21	93 58 177			1	Flange	Fläns	6
0310	22	75 07 973		-1986, (8357485)	1	Gasket	Packning	4
0320	22	75 07 973		1987-	1	Gasket	Packning	4
0330	24	75 21 230			1	Lifting eye	Lyftögla	6
0340	25	*75 17 444*		191) NLS - USE 8788572	1	Stay	Stag	6
0350	25	87 88 572		192)	1	Stay	Stag	6
0360	26	75 86 860			1	Flange	Fläns	4
0370	27	75 86 878			1	Gasket	Packning	4
0380	28	80 19 895			1	Screw	Skruv	5

85. With catalytic converter. Med katalytisk reaktor.
145. Engine -J106785.
146. Engine J106796-.
174. Engine --K058587.
175. Engine K058588-.
191. Engine --K090328.
192. Engine K090329-.
215. Superseded by 7484314,7586860 and 7586878. Ersatt av 7484314,7586860 och 7586878.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G06
Supercharging system	1-G10
Kits	1-G18

1-E02

Inlet manifold, parted

Inloppsrör, delat

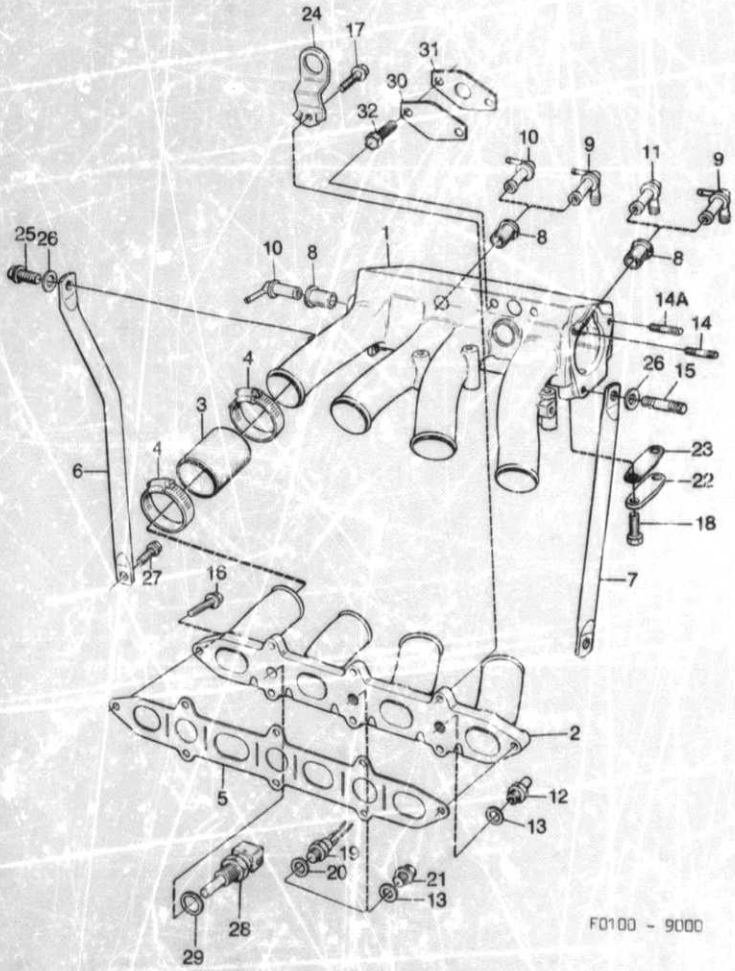

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 67 837		-1986	1	Intake manifold	Inloppsrör	
0020	1	75 81 879		1987	1	Intake manifold	Inloppsrör	6
0030	1	74 82 748		1988-143)	1	Intake manifold	Inloppsrör	6
0040	1	74 84 348		144)	1	Intake manifold	Inloppsrör	6
0050	2	*75 64 537*		-1987 NLS - USE 7484363	1	Intake manifold	Inloppsrör	6
0060	2	74 84 363		1988-, (7482755)	1	Intake manifold	Inloppsrör	6
0070	3	75 66 748			4	Hose	Slang	4
0080	4	79 70 122			8	Hose clamp	Slangklamma	5
0090	5	*75 15 385*		-1987 NLS - USE 7584436	1	Gasket	Packning	2
0100	5	75 84 436		1988-	1	Gasket	Packning	2
0110	6	*75 64 289*		191) NLS - USE 8788580	1	Stay	Stag	6
0120	6	87 88 580		192)	1	Stay	Stag	6
0130	7	*75 64 297*		191) NLS - USE 8788572	1	Stay	Stag	6
0140	7	87 88 572		192)	1	Stay	Stag	6
0150	8	75 15 208			3	Bushing	Bussning	5
0160	9	93 12 802			1	Nipple	Nippel	4
0170	10	83 59 937			2	Nipple	Nippel	4
0180	11	83 57 543			1	Nipple	Nippel	4
0190	12	75 88 098		(7517634,7567449), (7486806)	1	Nipple	Nippel	5
0200								
0210	13	81 24 141		174)	2	Seal	Tätning	5
0220	13	89 81 961		175), (8326712)	2	Seal	Tätning	5
0230	14	80 05 928		-1986	2	Stud	Pinnskruv	5
0240	14	80 05 910		1987-	1	Stud	Pinnskruv	5
0250	14A	80 05 928			1	Stud	Pinnskruv	5
0260	15	80 05 936			1	Stud	Pinnskruv	5
0270	16	81 25 197			7	Screw	Skruv	5
0280	17	81 25 205			1	Screw	Skruv	5
0290	18	*80 19 903*		-1988 NLS - USE 9166281	2	Screw	Skruv	5
0300	18	80 19 895		500), 1989-	2	Screw	Skruv	5
0310	19	75 19 416			1	Thermostat	Termostat	5
0320	19	75 19 416		-1987, I	1	Thermostat	Termostat	5
0330	20	81 24 141		-1988	1	Seal	Tätning	5
0340	21	*75 64 222*		-1988 NLS - USE 7563042	1	Plug	Propp	5
0350	21	*81 23 721*		1989- NLS - USE 7563042	1	Plug	Propp	5
0360	22	93 58 177			1	Flange	Fläns	6
0370	23	75 07 973		-1986, (8357485)	1	Gasket	Packning	4
0380	23	75 07 973		1987-	1	Gasket	Packning	4
0390	24	75 21 230			1	Lifting eye	Lyftögla	6
0400	25	81 25 163			1	Screw	Skruv	5
0410	26	75 86 498		191)	2	Washer	Bricka	5
0420	27	81 25 155			1	Screw	Skruv	5
0430	28	93 57 021			1	Temperature sensor	Temperaturgivare	2
0440	28	75 63 562		TURBO, A	1	Sensor	Givare	2
0450	29	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0460	30	75 86 860			1	Flange	Fläns	4
0470	31	75 86 878			1	Gasket	Packning	4
0480	32	80 19 895			2	Screw	Skruv	5

143. Engine -J106601.
144. Engine J106602-.
174. Engine -K058597.
175. Engine K058588-.
191. Engine -K090328.
192. Engine K090329-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E04

Throttle valve housing
1985

Spjällhus
1985

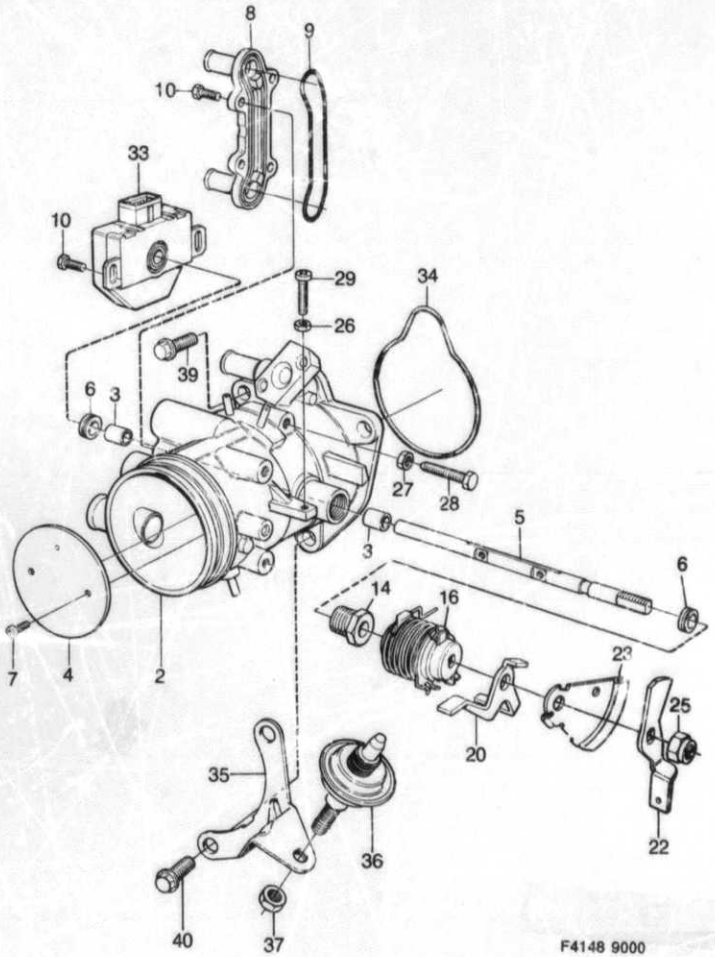

F4148 9000

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	75 09 896			1	Throttle body	Spjällhus	6
0020	3	83 48 641			2	Bushing	Bussning	5
0030	4	83 53 484			1	Shutter	Spjäll	6
0040	5	*75 04 673*		NLS - USE 8057259, 9107624	1	Shutter shaft	Spjällaxel	6
0050	6	83 57 345			2	Seal	Tätning	5
0060	7	80 59 073			2	Screw	Skruv	5
0070	8	75 05 423			1	Cover	Lock	5
0080	9	75 06 264			1	O-ring	O-ring	2
0090	10	75 07 080			6	Screw	Skruv	5
0100	14	93 59 050			1	Plug	Plugg	5
0110	16	75 16 974			1	Return spring	Returfjäder	5
0120	20	*75 21 065*		NLS - USE 7562382	1	Lever	Hävarm	6
0130	22	*75 18 517*		NLS	1	Lever	Hävarm	6
0140	23	75 18 491			1	Cam disc	Kamskiva	6
0150	25	80 74 288			1	Nut	Mutter	5
0160	26	*80 50 593*		NLS - USE 8151045	1	Nut	Mutter	5
0170	27	81 51 052		(8050601)	1	Nut	Mutter	5
0180	28	83 57 378			1	Screw	Skruv	5
0190	29	*80 07 486*		NLS - USE 4087706	1	Set screw	Stoppskruv	5
0200	33	75 01 612			1	Potentiometer	Potentiometer	6
0210	34	75 21 875			1	O-ring	O-ring	4
0220	35	*75 18 533*		NLS - USE 7563539	1	Bracket	Konsol	5
0230	36	93 14 501			1	Absorber	Dämpare	3
0240	37	80 69 015			1	Nut	Mutter	5
0250	39	81 25 189			2	Screw	Skruv	5
0260	40	75 19 499			1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E06

Throttle valve housing
1986-

Spjällhus
1986-

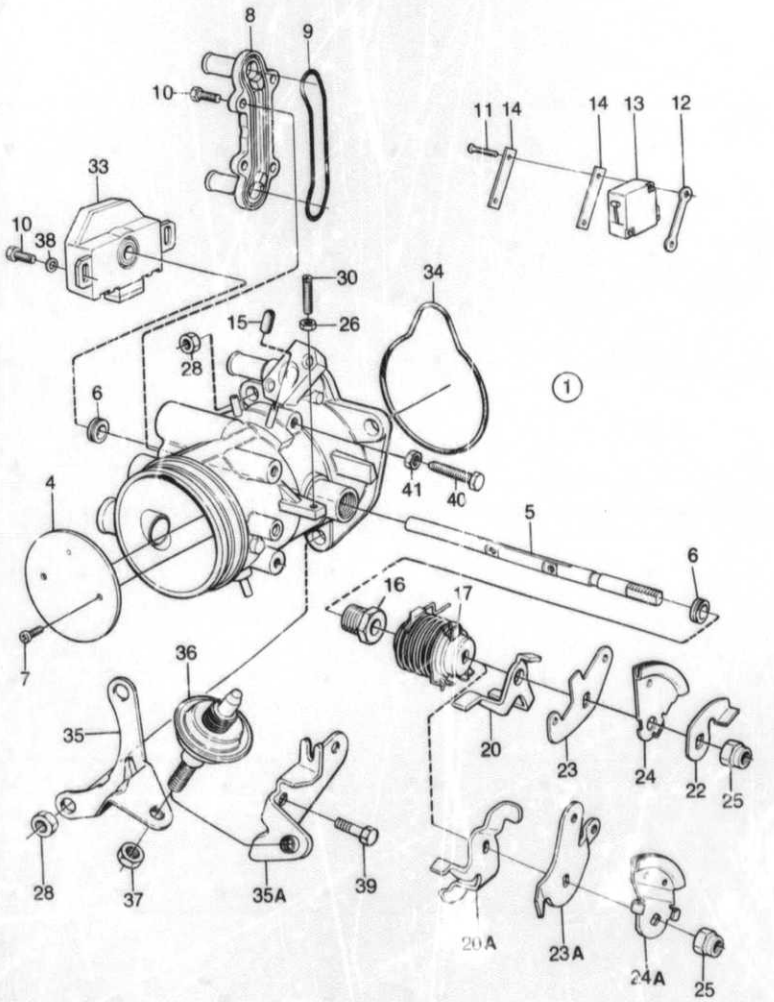

R 9488 - 9000

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 69 569*		1986,83), (7562820) NLS - USE 7483936	1	Throttle body	Spjällhus	6
0020	1	75 81 911		-1987,83)	1	Throttle body	Spjällhus	6
0030	1	74 83 936		1988,83)	1	Throttle body	Spjällhus	6
0050	1	74 83 951		1988,132)	1	Throttle body	Spjällhus	6
0060	1	74 87 457		1989-,132)	1	Throttle body	Spjällhus	6
0080	1	75 69 585		1986, TURBO, ME (7518186)	1	Throttle body	Spjällhus	6
0100	1	74 83 944		-1987,TURBO,ME,(7581929)	1	Throttle body	Spjällhus	6
0110	1	74 83 944		1988, TURBO, ME	1	Throttle body	Spjällhus	6
0120	1	74 83 944		1989-, TURBO DI, ME	1	Throttle body	Spjällhus	6
0140	1	75 69 585		1986,75), (7518186)	1	Throttle body	Spjällhus	6
0150	1	*75 81 929*		-1987,75) NLS - USE 7483944	1	Throttle body	Spjällhus	6
0160	1	*75 81 929*		1988-,121,75) NLS - USE 7483944	1	Throttle body	Spjällhus	6
0170	1	74 83 944		122,75), -1988	1	Throttle body	Spjällhus	6
0180	1	91 17 235		500,75), 1989-	1	Throttle body	Spjällhus	6
0200	1	*74 84 140*		1988-,123,131,216) NLS - USE 7487648, 8151052, 8357378	1	Throttle body	Spjällhus	6
0210	1	74 87 648		124,131), -1988	1	Throttle body	Spjällhus	6
0220	1	74 87 804		500,131), 1989-	1	Throttle body	Spjällhus	6
0240	1	75 69 601		1986,82), (7562762)	1	Throttle body	Spjällhus	6
0250	1	75 81 895		-1987,82)	1	Throttle body	Spjällhus	6
0260	1	74 83 910		1988,82)	1	Throttle body	Spjällhus	6
0270	1	74 87 432		1989-,82)	1	Throttle body	Spjällhus	6
0290	1	75 81 903		-1987, I, ME	1	Throttle body	Spjällhus	6
0300	1	74 83 928		1988, I, ME	1	Throttle body	Spjällhus	6
0310	1	74 87 440		1989-, I, ME	1	Throttle body	Spjällhus	6
0330	1	75 81 903		-1987,74)	1	Throttle body	Spjällhus	6
0340	1	75 81 903		1988,74)	1	Throttle body	Spjällhus	6
0350	1	74 87 796		500,74), 1989-	1	Throttle body	Spjällhus	6
0370	4	83 53 484			1	Shutter	Spjäll	6
0380	5	*75 04 673*		NLS - USE 8057259, 9107624	1	Shutter shaft	Spjällaxel	6
0390	6	83 57 345			2	Seal	Tätning	5
0400	7	80 59 073			2	Screw	Skruv	5
0410	8	75 05 423			1	Cover	Lock	5
0420	9	75 06 264			1	O-ring	O-ring	2
0430	10	75 07 080			6	Screw	Skruv	5
0440	11	81 23 671		10)	2	Screw	Skruv	5

10. Engine -G008348.
74. For I with catalytic converter. För I med katalytisk reaktor.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
82. For I without catalytic converter. För I utan katalytisk reaktor.
83. For TURBO without catalytic converter. För TURBO utan katalytisk reaktor.
121. Engine -J091740.
122. Engine J091741-.
123. Engine -J092592.
124. Engine J092593-.
131. For TURBO with catalytic converter and DI. För TURBO med katalytisk reaktor och DI.
132. For TURBO with, without catalytic converter. För TURBO med DI, utan katalytisk reaktor.
216. Superseded by 7487648,8151052 and 8357378. Ersatt av 7487648,8151052 och 8357378.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E08

Throttle valve housing 1986-

Spjällhus 1986-

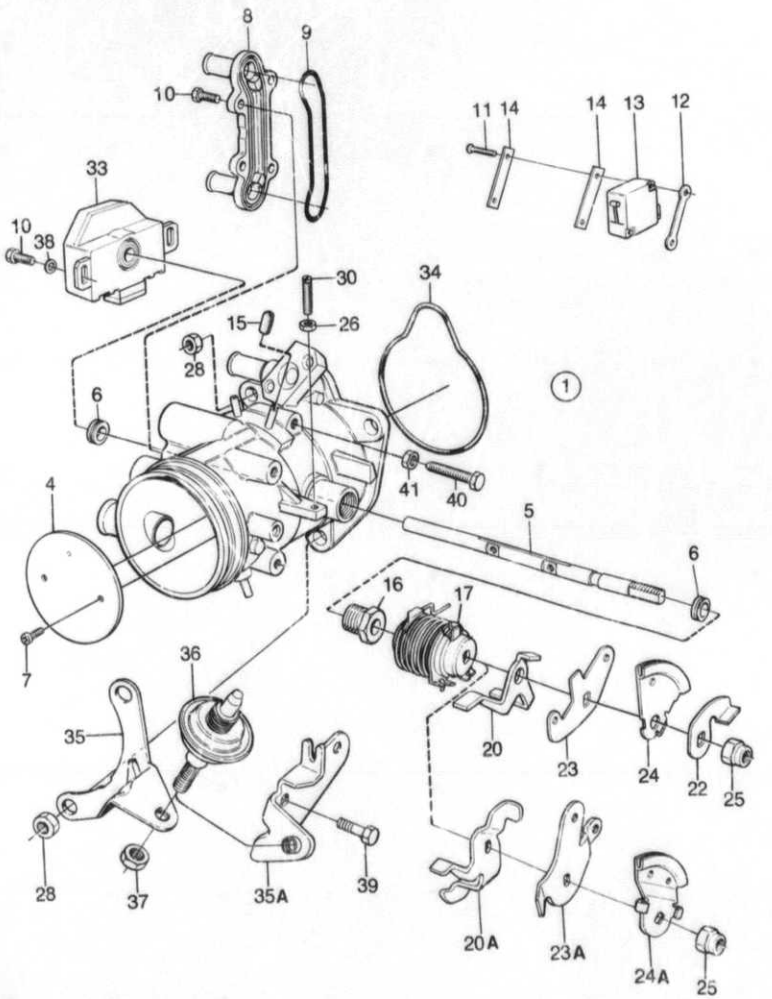

R 9488 - 9000

1110	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	11	80 96 364		11)	2	Screw	Skruv	5
0460	12	93 50 752		10)	1	Bracket	Hållare	6
0470	12	75 64 834		11), -1987	1	Bracket	Hållare	5
0480	12	75 64 834		1988-, TURBO	1	Bracket	Hållare	5
0490	13	75 88 270		-1987, (7513815)	1	Switch	Strömställare	3
0500	13	75 88 270		1988-93),TURBO(7513815)	1	Switch	Strömställare	3
0510	13	75 88 270		94)	1	Switch	Strömställare	3
0520	14	75 64 065		-1987	2	Washer	Bricka	5
0530	14	75 64 065		1988-, TURBO	2	Washer	Bricka	5
0540	15	83 35 614			1	Plug	Propp	4
0550	16	93 53 050			1	Plug	Plugg	5
0560	17	75 16 974			1	Return spring	Returfjäder	5
0570	20	75 62 382			1	Lever	Hävarm	6
0580	20A	75 66 276		1987-, M	1	Lever	Hävarm	6
0590	22	75 62 051		-1986	1	Lever	Hävarm	6
0600	23	75 63 521		-1986, A	1	Lever	Hävarm	6
0610	23A	74 83 183		1987-, A	1	Lever	Hävarm	6
0620	24	75 18 491		-1986	1	Cam disc	Kamskiva	6
0630	24A	75 66 300		1987-	1	Cam disc	Kamskiva	6
0640	25	80 74 238			1	Nut	Mutter	5
0650	26	*80 50 593*		-1987 NLS - USE 8151045	1	Nut	Mutter	5
0660	26	81 51 045		1988-	1	Nut	Mutter	5
0670	28	81 51 326		-1987,(8125882)	3	Nut	Mutter	5
0680	28	81 51 326		1988-	3	Nut	Mutter	5
0690	30	*80 07 486*		NLS - USE 4087706	1	Set screw	Stoppskruv	5
0700	33	75 01 612			1	Potentiometer	Potentiometer	6
0710	34	75 21 875			1	O-ring	O-ring	4
0720	35	75 63 539		-1986	1	Bracket	Konsol	5
0730	35A	75 66 284		1987-	1	Bracket	Konsol	6
0740	36	93 14 501		-1987	1	Absorber	Dämpare	3
0750	36	93 14 501		1988-, NOT I FOR US	1	Absorber	Dämpare	3
0760	37	80 69 015			1	Nut	Mutter	5
0770	38	*80 29 936*		NLS - USE 9166356	2	Washer	Bricka	5
0780	39	81 25 007		1987-	2	Screw	Skruv	5
0790	40	83 57 378		1988-, SE, ME	2	Screw	Skruv	5
0800	40	83 57 378		122,75)	2	Screw	Skruv	5
0810	40	83 57 378		124,75), DI	2	Screw	Skruv	5
0820	41	81 51 052		1988-, SE, ME,(8050601)	1	Nut	Mutter	5
0830	41	81 51 052		122,75)	1	Nut	Mutter	5
0840	41	81 51 052		124,75), DI	1	Nut	Mutter	5

10. Engine -G009348.
11. Engine G009349-.
75. For TURBO with catalytic converter. För TURBO med katalytisk reaktor.
93. Engine -J061479.
94. Engine J061480-.
122. Engine J091741-.
124. Engine J092593-.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E10 Auxiliary air regulator 1985

Tillsatsluftslid 1985

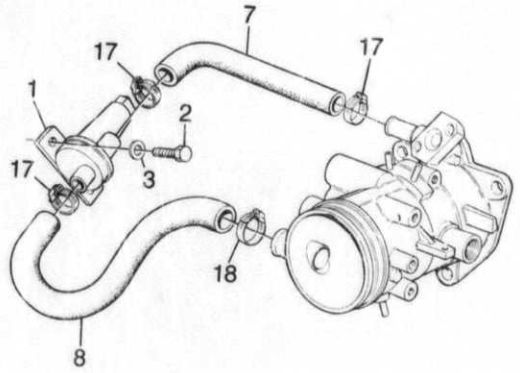

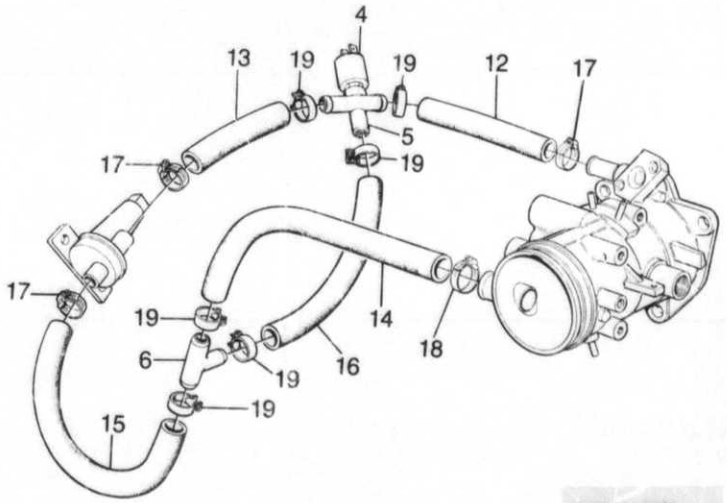

R 6651–9000


1125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	83 57 832			1	Air valve	Luftventil	4
0020	2	93 50 653			2	Screw	Skruv	5
0030	3	80 29 951			2	Washer	Bricka	5
0040	4	83 34 005			1	Solenoid valve	Magnetventil	3
0050	5	75 28 144			1	T-pipe	T-rör	5
0060	6	83 17 828			1	Nipple	Nippel	5
0070	7	*75 21 552*		NLS	1	Hose	Slang	4
0080	8	*75 21 560*		NLS	1	Hose	Slang	4
0090	12	*93 89 917*		NLS	1	Hose	Slang	4
0100	13	93 89 925			1	Hose	Slang	4
0110	14	93 89 933			1	Hose	Slang	4
0120	15	93 89 941			1	Hose	Slang	4
0130	16	93 89 958			1	Hose	Slang	4
0140	17	79 63 523			3	Hose clamp	Slangklamma	5
0150	18	79 63 531			1	Hose clamp	Slangklamma	5
0160	19	79 75 543			6	Hose clamp	Slangklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

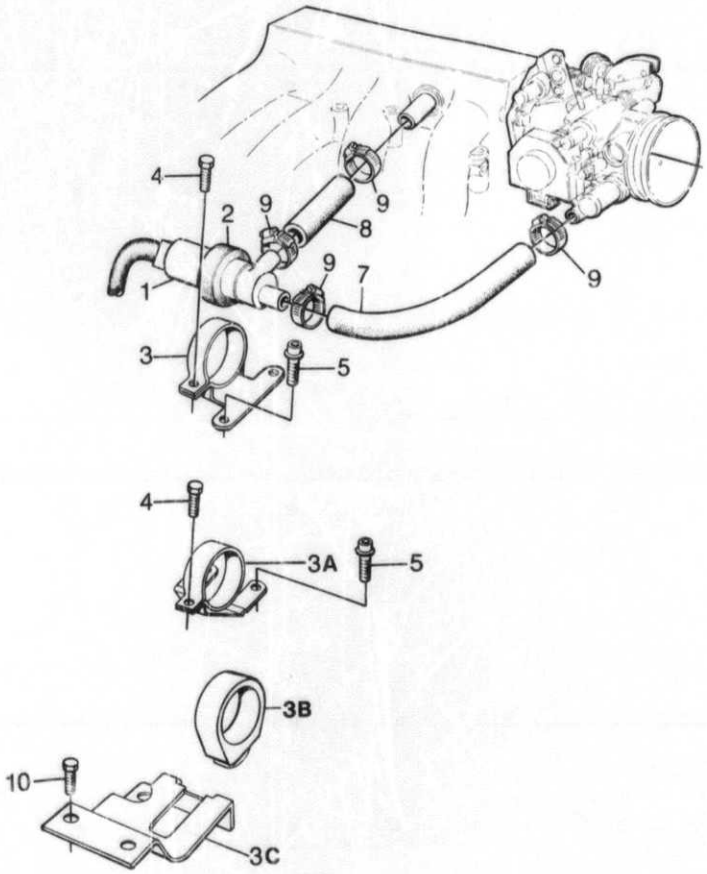

R 8998-9000

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 792		-1987	1	Control valve	Reglerventil	4
0020	1	75 16 792		1988-,84)	1	Control valve	Reglerventil	4
0030	1	75 16 792		1988,85), TURBO	1	Control valve	Reglerventil	4
0040	1	75 86 019		1989-,85), TURBO	1	Control valve	Reglerventil	4
0050	1	75 86 019		1988-,85), I	1	Control valve	Reglerventil	4
0060	2	75 65 351		-1987	1	Ring	Ring	5
0070	3	75 60 311		-1987	1	Bracket	Fäste	6
0080	3A	*75 64 305*		-1987, FOR CARS WITH PARTED INLET MANIFOLD	1	Bracket	Fäste	5
0090				NLS				
0100	3B	74 81 682		1988-	1	Retainer	Hållare	5
0110	3B	74 81 690		1988-,74)	1	Retainer	Hållare	5
0120	3B	74 81 690		1989-,131)	1	Retainer	Hållare	5
0130	3C	74 81 708		1988-	1	Bracket	Fäste	5
0140	4	81 25 023			1	Screw	Skruv	5
0150	5	80 97 883			2	Screw	Skruv	5
0160	7	75 60 337		-1987	1	Hose	Slang	4
0170	7	75 88 445		1988	1	Hose	Slang	4
0180	7	75 88 403		1988,74)	1	Hose	Slang	4
0190	7	75 88 445		1989-	1	Hose	Slang	4
0200	7	75 88 403		1989-,74,131)	1	Hose	Slang	4
0210	8	75 60 345		-1987	1	Hose	Slang	4
0220	8	75 88 395		1988-,143)	1	Hose	Slang	4
0230	8	75 88 387		1988-,143,74)	1	Hose	Slang	4
0240	8	74 86 624		85,144)	1	Hose	Slang	4
0250	8	91 12 491		84,144)	1	Hose	Slang	4
0260	9	79 63 531		-1988	4	Hose clamp	Slangklamma	5
0270	9	*79 63 549*		500), 1989- NLS - USE 7970080	4	Hose clamp	Slangklamma	5
0280	10	81 25 007		1988-	3	Screw	Skruv	5

74. For I with catalytic converter. För I med katalytisk reaktor.
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
131. For TURBO with catalytic converter and DI. För TURBO med katalytisk reaktor och DI.
143. Engine -J106601.
144. Engine J106602-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E14

Exhaust manifold
Turbo

Avgassamlare
Turbo

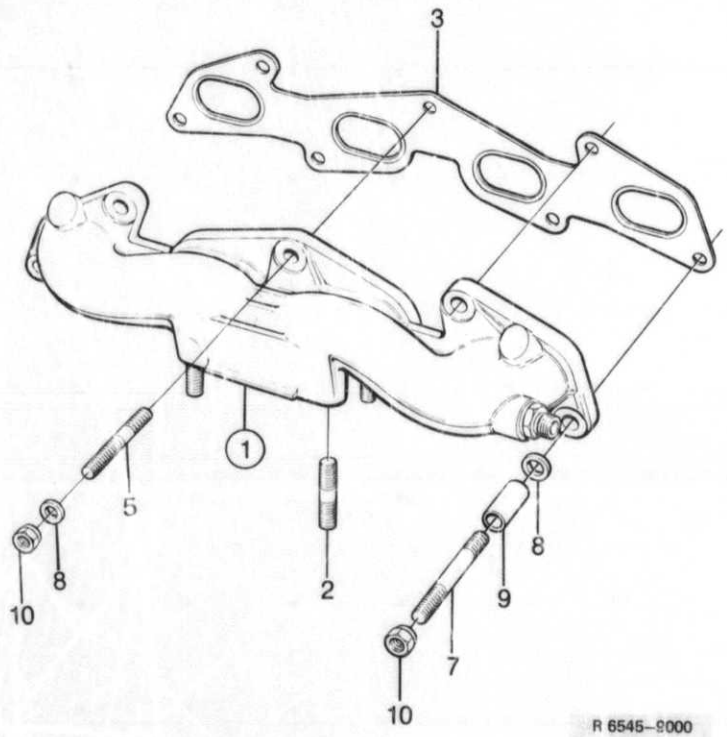

R 6545–9000

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 22 584*		219) NLS - USE 7521073, 9359084	1	Exhaust manifold	Avgassamlare	3
0020	2	93 59 084			4	„Stud	„Pinnskruv	5
0030	1	75 21 073		85)	1	Exhaust manifold	Avgassamlare	3
0040	3	75 18 996			1	Gasket	Packning	2
0050	5	*75 19 010*		NLS - USE 7985146	3	Stud screw	Pinnbult	5
0060	7	*93 50 588*		NLS - USE 7985161	4	Stud screw	Pinnbult	5
0070	8	80 73 249			7	Washer	Bricka	5
0080	9	93 06 812			4	Spacer sleeve	Distanshylsa	3
0090	10	*93 06 820*		NLS - USE 9169277	7	Nut	Mutter	3

85. With catalytic converter. Med katalytisk reaktor.
219. Superseded by 7521073 and 4x9359084. Ersatt av 7521073 och 4x9359084.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E16 *Exhaust manifold* / *Avgassamlare* /

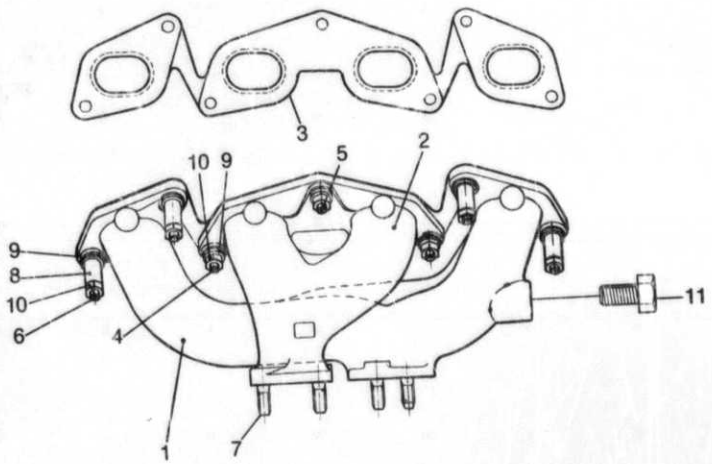

R 7533--9000

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 62 531		-1988,84)	1	Exhaust manifold	Avgassamlare	3
0020	1	75 62 515		-1988,85)	1	Exhaust manifold	Avgassamlare	3
0030	1	75 62 515		500), 1989-	1	Exhaust manifold	Avgassamlare	3
0040								
0050	2	75 83 792		-1987,84),(7562499)	1	Exhaust manifold	Avgassamlare	3
0060	2	75 85 813		1988-,78,84)	1	Exhaust manifold	Avgassamlare	3
0070	2	75 83 792		79,84), -1988	1	Exhaust manifold	Avgassamlare	3
0080	2	75 62 481		-1987,85)	1	Exhaust manifold	Avgassamlare	3
0090	2	75 83 784		1988,85)	1	Exhaust manifold	Avgassamlare	3
0100	2	75 83 784		500), 1989-	1	Exhaust manifold	Avgassamlare	3
0110								
0120	3	75 18 996			1	Gasket	Packning	2
0130	4	*75 19 010*		NLS - USE 7985146	2	Stud screw	Pinnbult	5
0140	5	75 21 081		-1987	1	Stud	Pinnskruv	5
0150	5	75 21 081		1988-	1	Stud	Pinnskruv	5
0160	5	75 24 945		1988-, SE, ME	1	Stud	Pinnskruv	5
0170	6	*93 50 588*		NLS - USE 7985161	4	Stud screw	Pinnbult	5
0180	7	93 60 943			4	Stud screw	Pinnbult	5
0190	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0200	9	80 73 249			7	Washer	Bricka	5
0210	10	*93 06 820*		NLS - USE 9169277	7	Nut	Mutter	3
0220	11	81 23 739			1	Plug	Propp	5
0230								
0240		74 78 027		See page 2-141, 1-G22	X	Exhaust manifold	Avgassamlare	3

78. Engine -J026238.
79. Engine J026239-.
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E18 EGR system -1988

EGR-system -1988

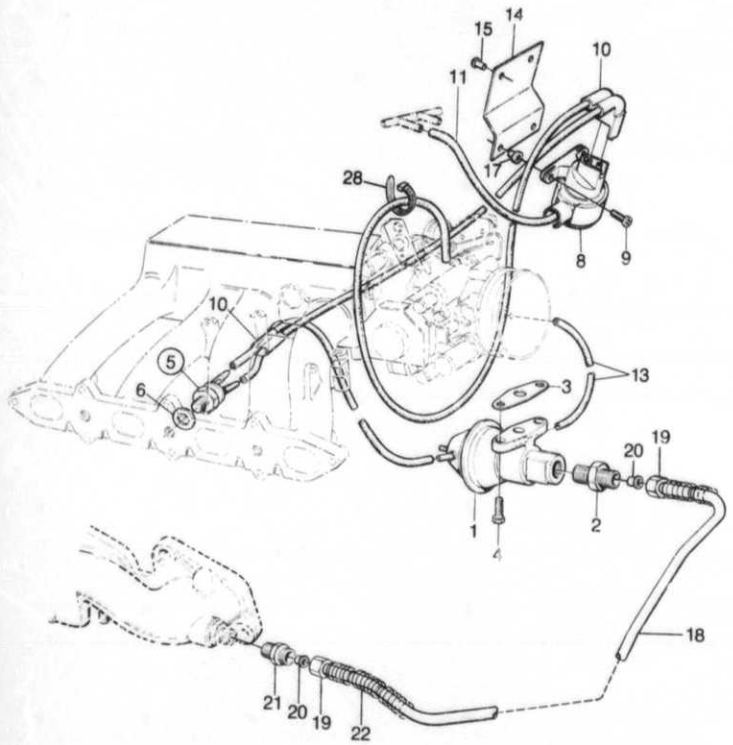

R 7233–9000

1300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 04 004		TURBO	1	EGR-valve	EGR-ventil	3
0020	1	75 08 393		I	1	EGR-valve	EGR-ventil	3
0030	1	*93 50 208*		IA, SE, ME NLS - USE 8788721	1	EGR-valve	EGR-ventil	3
0040	2	75 06 652		1985	1	Nipple	Nippel	6
0050	2	75 20 141		1986-, TURBO	1	Nipple	Nippel	6
0060	2	75 62 119		1986-, I	1	Nipple	Nippel	4
0070	2	75 83 933		1987-, IA	1	Nipple	Nippel	4
0080	3	75 07 973		-1986,(8357485)	1	Gasket	Packning	4
0090	3	75 07 973		1987-	1	Gasket	Packning	4
0100	4	*60 19 929*		NLS - USE 9166299	2	Screw	Skruv	5
0110	5	75 04 897		TURBO	1	Valve	Ventil	3
0120	5	75 04 897		1986-, I	1	Valve	Ventil	3
0130	6	81 24 141			1	▪ Seal	▪ Tätning	5
0140	8	75 28 425		TURBO, MARKED BLUE	1	Signal transducer	Signalomvandlare	5
0150	8	75 28 433		I, MARKED BLACK	1	Switch	Omkopplare	5
0160	8	75 90 870		IA	1	Switch	Omkopplare	5
0170	9	79 22 891		1985	2	Screw	Skruv	5
0180	9	80 59 412		1986-	2	Screw	Skruv	5
0190	10	93 89 313		53)	1	Hose	Slang	5
0200	10	75 90 789		54)	1	Hose	Slang	5
0210	11	91 36 243		1985, L=115 MM	1	Vaccum hose	Vakuumslang	5
0220	11	91 36 243		1986-, TURBO, L=220 MM	1	Vaccum hose	Vakuumslang	5
0230	11	91 36 243		1986-, I, L=410 MM	1	Vaccum hose	Vakuumslang	5
0240	13	91 36 243		L=200 MM	1	Vaccum hose	Vakuumslang	5
0250	14	93 92 747		1986,-53)	1	Bracket	Konsol	6
0260	14	75 90 680		54)	1	Bracket	Fäste	6
0270	15	*79 72 045*		1986- NLS - USE 7961659	2	Rivet	Nit	5
0280	17	79 73 456		1986-	2	Expanding nut	Expandermutter	5
0290	18	75 22 519		TURBO	1	EGR-pipe	EGR-rör	6
0300	18	75 60 246		-1986, I	1	Tube	Rör	6
0310	18	75 69 916		1987-, I	1	EGR-pipe	EGR-rör	6
0320	19	81 45 559			2	Nut	Mutter	5
0330	20	81 32 235			2	Ferrule	Skärring	5
0340	21	81 31 989			1	Nipple	Nippel	5
0350	22	75 20 042			1	Protection	Skydd	6
0360	28	73 98 621			1	Clamp	Klämma	5
0370								
0380		91 36 243		L=5000	X	Vaccum hose	Vakuumslang	5


53. Ch. -H1005513, -H8000359
54. Ch. H1005514-, H8000360-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

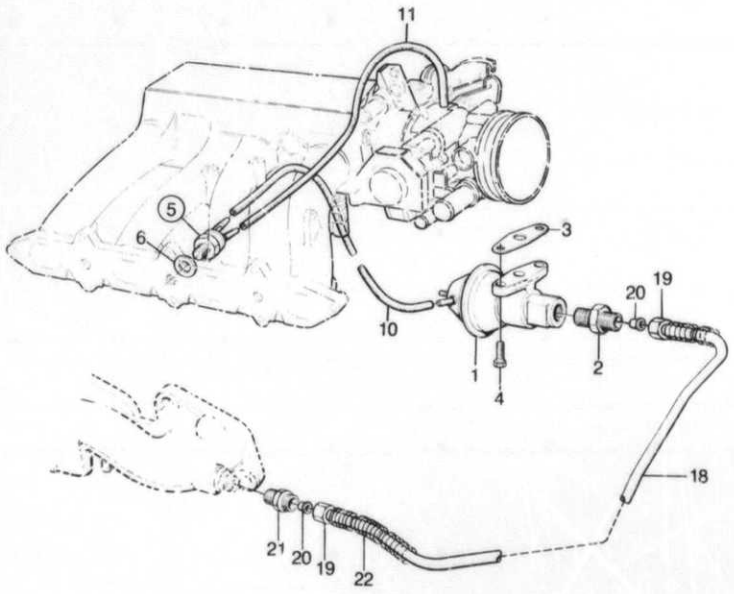

F2473 - 9000

1310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 50 216*		84), I NLS - USE 8359969	1	EGR-valve	EGR-ventil	3
0020	1	93 50 224		84), TURBO	1	EGR-valve	EGR-ventil	3
0030	2	75 06 652		TURBO, I M	1	Nipple	Nippel	6
0040	2	75 83 833		I A	1	Nipple	Nippel	4
0050	3	75 07 973			1	Gasket	Packning	4
0060	4	*80 19 929*		NLS - USE 9166299	2	Screw	Skruv	5
0070	5	75 04 897			1	Valve	Ventil	3
0080	6	81 24 141			1	Seal	Tätning	5
0090	10	91 36 243		L=215 MM	1	Vaccum hose	Vakuumslang	5
0100	11	91 36 243		L=410 MM	1	Vaccum hose	Vakuumslang	5
0110	18	75 22 519		TURBO	1	EGR-pipe	EGR-rör	6
0120	18	75 69 916		I	1	EGR-pipe	EGR-rör	6
0130	19	81 45 559			2	Nut	Mutter	5
0140	20	81 32 235			2	Ferrule	Skärring	5
0150	21	81 31 989			1	Nipple	Nippel	5
0160	22	75 20 042			1	Protection	Skydd	6
0170								
0180		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

84. Without catalytic converter. Utan katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-E22

Pulse-air system -1988

Luftinblåsningssystem -1988

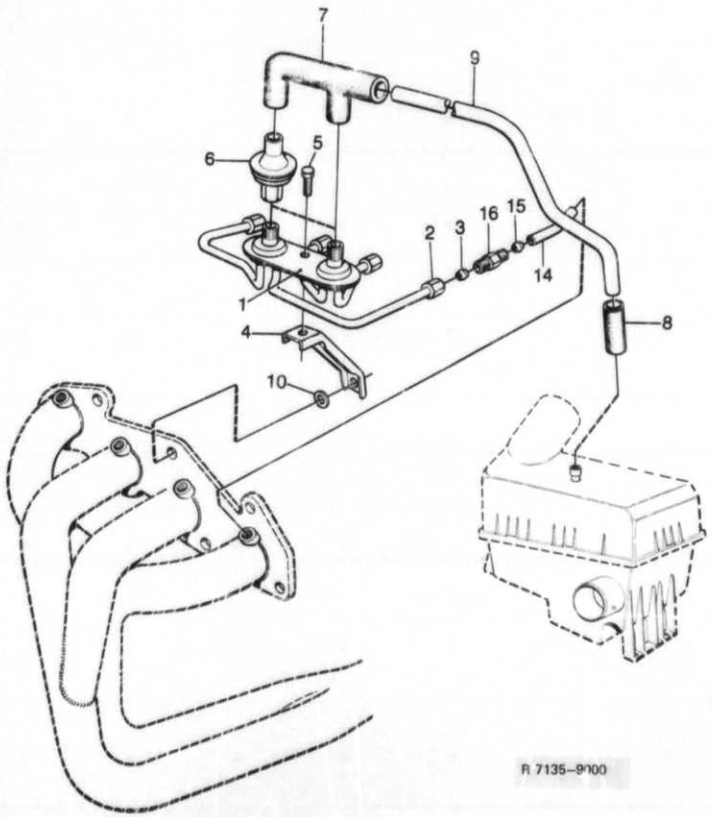

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 90 360			1	Bracket	Fäste	6
0020	2	83 57 444			4	.Nut	.Mutter	5
0030	3	83 57 451			4	.Ferrule	.Skärring	5
0040	4	*93 90 287*		-1987 NLS - USE 9394388	1	Arm	Arm	6
0050	4	93 94 388		1988	1	Bracket	Fäste	6
0060	5	79 69 223			1	Screw	Skruv	5
0070	6	75 19 226			2	Valve	Ventil	5
0080	7	93 90 253			1	Hose	Slang	5
0090	8	93 90 246			1	Hose	Slang	5
0100	9	93 90 535			1	Tube	Rör	8
0110	10	93 90 121			1	Spacer	Distans	4
0120	14	75 24 069			4	Tube	Rör	6
0130	15	83 57 451			4	Ferrule	Skärring	5
0140	16	83 57 436			4	Nipple	Nippel	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G03
Supercharging system	1-G10
Kits	1-G18

1-E24

Exhaust system
Turbo
1985

Avgassystem
Turbo
1985

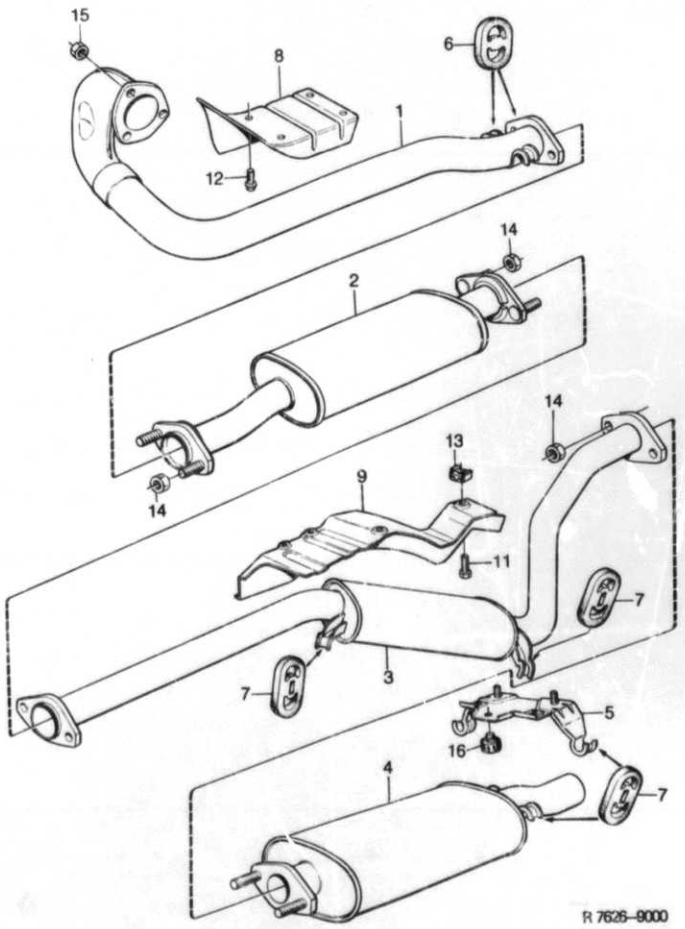


1500	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		93 89 560		(9388174)	1	Exhaust pipe	Avgasrör	2
0020	2	•	88 22 322		(7539927)	1	Silencer	Ljuddämpare	1
0030	3	•	88 22 314		(9379124)	1	Silencer	Ljuddämpare	1
0040	4	•	88 22 207		(8975062)	1	Silencer	Ljuddämpare	1
0050	5		93 94 685		(9386848)	1	Hook	Krok	5
0060	6		93 92 465		(9388943)	2	Rubber mounting	Gummiupphängning	1
0070	7		93 28 105			4	Rubber mounting	Gummiupphängning	1
0080	8		*93 73 598*		NLS - USE 7564321	1	Shield	Sköld	3
0090	9		*93 86 269*		NLS - USE 9392473	1	Shield	Sköld	3
0100	11		*79 71 757*		NLS - USE 7528953	4	Screw	Skruv	5
0110	12		81 25 130			4	Screw	Skruv	5
0120	13		79 70 437		(7970429)	4	Cage nut	Korgmutter	5
0130	14		79 67 953			8	Nut	Mutter	5
0140	15		75 19 432			3	Nut	Mutter	5
0150	16		93 88 588			1	Plug	Plugg	1

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

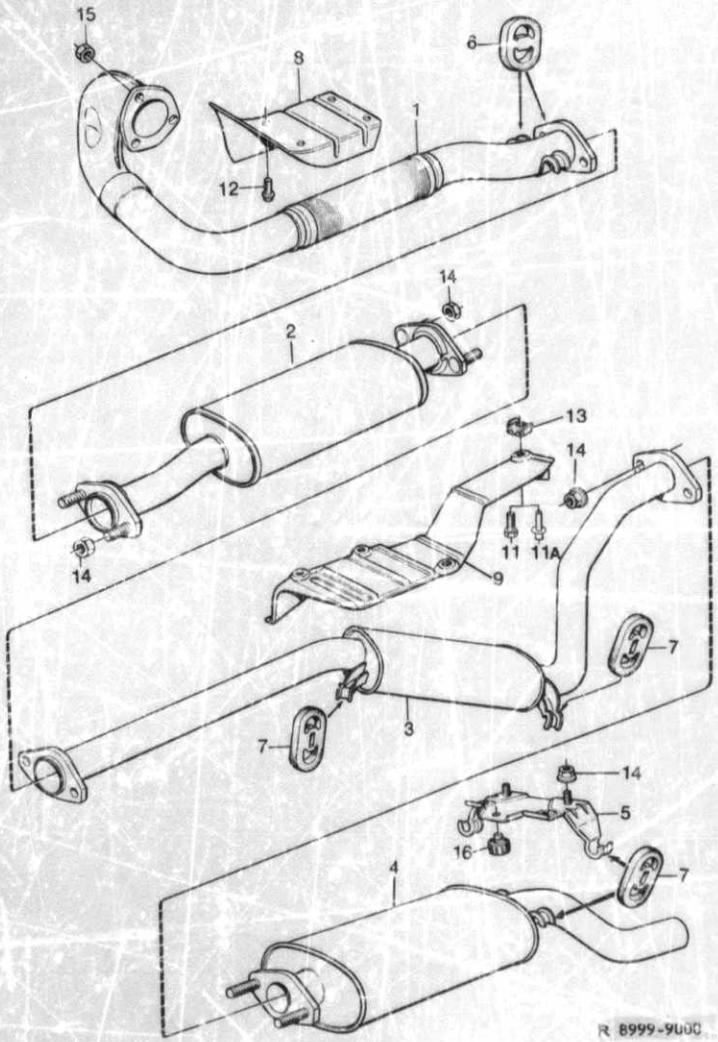

1-F02

Exhaust system
Turbo
1988-

Avgassystem
Turbo
1986-

1510	Pos		Part No/Art.nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1		93 89 560			1	Exhaust pipe	Avgasrör	2
0020	2	•	88 22 322		(7539927)	1	Silencer	Ljuddämpare	1
0030	3	•	88 22 314		-1988, (9379124)	1	Silencer	Ljuddämpare	1
0040	3	•	88 22 249		500), 1989-, (8979700)	1	Silencer	Ljuddämpare	1
0050	3	•	88 22 157		1989-, ME, (4161287)	1	Silencer	Ljuddämpare	1
0060	4	•	88 22 207		-1988, 5D, (8975062)	1	Silencer	Ljuddämpare	1
0070	4		40 24 972		1988, 5D, SG	1	Silencer	Ljuddämpare	1
0080	4	•	88 22 223		1989-, 5D, (8977928)	1	Silencer	Ljuddämpare	1
0090	4		41 56 055		1989-, 5D, SG	1	Silencer	Ljuddämpare	1
0100	4	•	88 22 330		1988, 4D, (9393349)	1	Silencer	Ljuddämpare	1
0110	4		40 24 998		1988, 4D, SG	1	Silencer	Ljuddämpare	1
0120	4		89 79 163		500), 1989-, 4D	1	Silencer	Ljuddämpare	1
0130	4		41 56 071		1989-, 4D, SG	1	Silencer	Ljuddämpare	1
0140	5		93 94 605		1986, (9386848)	1	Hook	Krok	5
0150	5		93 94 685		1987-1988	1	Hook	Krok	5
0160	5		89 77 936		500), 1989-	1	Suspension hook	Upphängningskrok	5
0170	6		93 92 465		(9388943)	2	Rubber mounting	Gummiupphängning	1
0180	7		93 28 105			4	Rubber mounting	Gummiupphängning	1
0190	8		75 64 321			1	Heat shield	Värmesköld	3
0200	9		93 92 473		1986	1	Heat shield	Värmesköld	3
0210	9		93 94 073		1987-1988	1	Shield	Sköld	3
0220	9		40 22 604		500), 1989-	1	Heat shield	Värmesköld	3
0230	11		79 71 757		55) NLS - USE 7528953	4	Screw	Skruv	5
0240	11A		93 93 958		56)	4	Rivet	Nit	5
0250	11A		75 91 480		56) ALT TO 9393968 FOR LARGER HOLES	4	Rivet	Nit	5
0260									
0270	12		81 25 130			4	Screw	Skruv	5
0280	13		79 70 437		55), (7970429)	4	Cage nut	Korgmutter	5
0290	14		79 37 953			8	Nut	Mutter	5
0300	15		75 18 432			3	Nut	Mutter	5
0310	16		93 88 588		-1987	1	Plug	Plugg	1

55. Ch. -H1000688.
56. Ch. H1000689-, H8000041-
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX


Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Exhaust system

1-F04 Turbo With catalytic converter

Avgassystem

Turbo
Med katalytisk reaktor

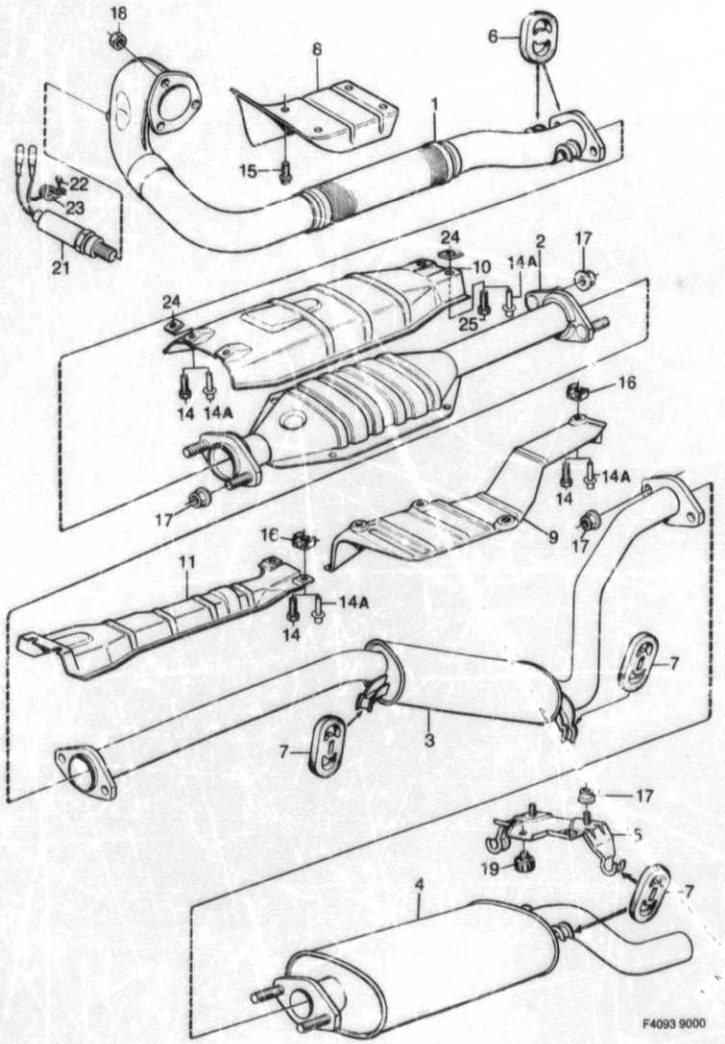

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 90 600			1	Exhaust pipe	Avgasrör	2
0020	2	*93 92 598*		-1987 NLS - USE 9392457	1	TW catalytic converter	Katalysator	4
0030	2	93 92 457		1988-	1	TW catalytic converter	Katalysator	4
0040	2	• 44 40 020		IT	1	TW catalytic converter	Katalysator	4
0050	3	• 88 22 314		-1988,(9379124)	1	Silencer	Ljuddämpare	1
0060	3	◦ 88 22 249		500), 1989-, (8979700)	1	Silencer	Ljuddämpare	1
0070	4	89 75 062		-1987, (9393307)	1	Silencer	Ljuddämpare	1
0080	4	89 75 062		1988, 5D	1	Silencer	Ljuddämpare	1
0090	4	• 88 22 223		500), 1989-,5D,(8977928)	1	Silencer	Ljuddämpare	1
0100	4	93 93 349		1989, 4D	1	Silencer	Ljuddämpare	1
0110	4	89 79 163		500), 1989-, 4D	1	Silencer	Ljuddämpare	1
0120	5	93 94 685		-1986, (9386848)	1	Hook	Krok	5
0130	5	93 94 685		1987-1988	1	Hook	Krok	5
0140	5	89 77 936		500), 1989-	1	Suspension hook	Upphängningskrok	5
0150	6	93 92 465		(9388943)	2	Rubber mounting	Gummiupphängning	1
0160	7	93 28 105			4	Rubber mounting	Gummiupphängning	1
0170	8	75 64 321			1	Heat shield	Värmesköld	3
0180	9	93 92 473		-1986	1	Heat shield	Värmesköld	3
0190	9	93 94 073		1987-1988	1	Shield	Sköld	3
0200	9	40 22 604		500), 1989-	1	Heat shield	Värmesköld	3
0210	10	*93 86 244*		-1986 NLS - USE 4022588	1	Shield	Sköld	3
0220	10	*93 94 057*		1987-1988 NLS - USE 4022588	1	Shield	Sköld	3
0230	10	40 22 588		500), 1989-	1	Heat shield	Värmesköld	3
0240	11	93 86 251		-1986	1	Shield	Sköld	3
0250	11	93 94 065		1987-1988	1	Shield	Sköld	3
0260	11	40 22 596		500), 1989-	1	Heat shield	Värmesköld	3
0270	14	75 28 953		55)	8	Screw	Skruv	5
0280	14A	93 93 968		56)	12	Rivet	Nit	5
0290	14A	75 91 480		56) ALT TO 9393968 FOR LARGER HOLES	12	Rivet	Nit	5
0300								
0310	15	81 25 130			4	Screw	Skruv	5
0320	16	79 70 437		55)	4	Cage nut	Korgmutter	5
0330	17	79 67 953			8	Nut	Mutter	5
0340	18	75 19 432			3	Nut	Mutter	5
0350	19	93 88 588		-1987	1	Plug	Plugg	1
0360	21	93 92 762			1	Lambda sonde	Lambdasond	4
0370	22	*79 71 757*		NLS - USE 7528953	2	Screw	Skruv	5
0380	23	73 98 803			2	Clamp	Klammer	5
0390	24	79 77 374		55)	6	Cage nut	Korgmutter	5
0400	25	82 62 958		55)	2	Screw	Skruv	5
0410								
0420		88 19 260		1985-1988 See page 2-141, 1-G22	X	Catalytic converter kit	Katalysatorsats	4
0440		• *43 93 799*		1985-1986, IT See page 2-147, 1-H04 NLS	X	Catalytic converter kit	Katalysatorsats	4
0460		• *43 93 807*		1987-, IT See page 2-147, 1-H04 NLS	X	Catalytic converter kit	Katalysatorsats	4

55. Ch. -H1000688.
56. Ch. H1000689- H8000041-
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1--F06

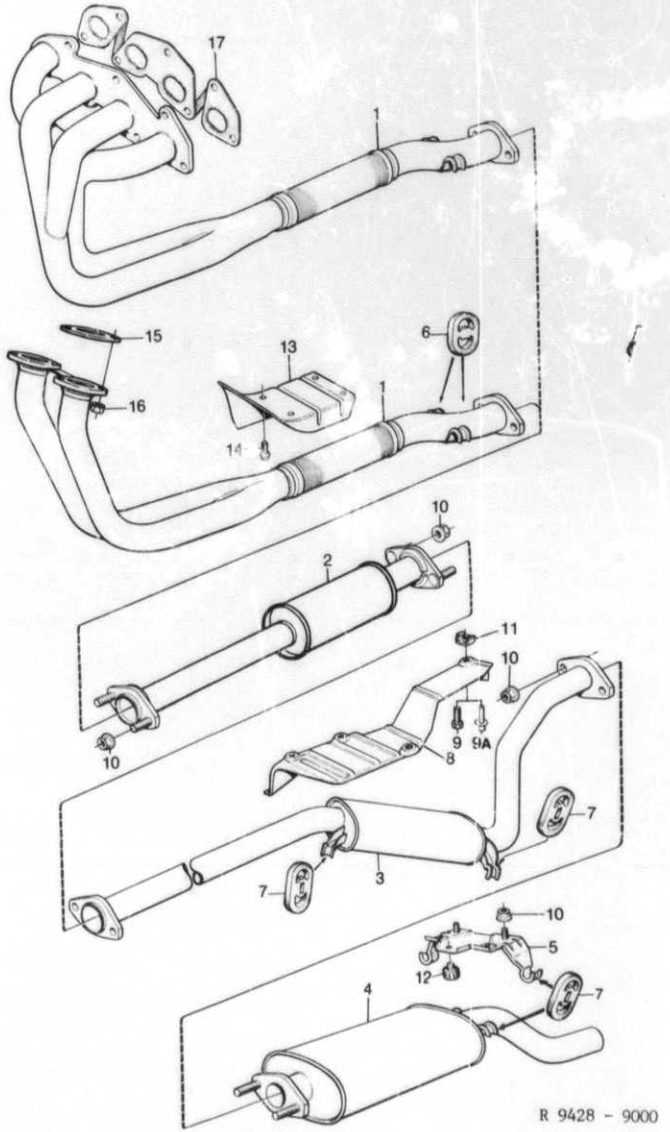

R 9428 - 9000

1530	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		*93 90 972*		230), 1986 NLS - USE 7478027, 9392929	1	Exhaust pipe	Avgasrör	2
0020	1		93 92 929		1987-	1	Exhaust pipe	Avgasrör	2
0030	2	•	88 22 322		(9381252)	1	Silencer	Ljuddämpare	1
0040	3	•	88 22 215		-1988, (8975419)	1	Silencer	Ljuddämpare	1
0050	3	•	88 22 249		500), 1989-, (8979650)	1	Silencer	Ljuddämpare	1
0060	1	•	88 22 256		-1988, (9393364)	1	Silencer	Ljuddämpare	1
0070	4		40 24 956		-1988, SG	1	Silencer	Ljuddämpare	1
0080	4	•	88 22 231		500),1989-, 5D,(8979130)	1	Silencer	Ljuddämpare	1
0090	4		41 56 014		1989-, 5D, SG	1	Silencer	Ljuddämpare	1
0100	4		89 79 155		500), 1989-, 4D	1	Silencer	Ljuddämpare	1
0110	4		41 56 030		1989-, 4D, SG	1	Silencer	Ljuddämpare	1
0120	5		93 94 685		1986, (9386848)	1	Hook	Krok	5
0130	5		93 94 685		1987-1988	1	Hook	Krok	5
0140	5		89 77 936		500), 1989-	1	Suspension hook	Upphängningskrok	5
0150	6		93 92 465		(9388943)	2	Rubber mounting	Gummiupphängning	1
0160	7		93 28 105			4	Rubber mounting	Gummiupphängning	1
0170	8		93 92 473		1986	1	Heat shield	Värmesköld	3
0180	8		93 94 073		1987-1988	1	Shield	Sköld	3
0190	8		40 22 604		500), 1989-	1	Heat shield	Värmesköld	3
0200	9		*79 71 757*		55) NLS - USE 7528953	4	Screw	Skruv	5
0210	9A		93 93 968		56)	4	Rivet	Nit	5
0220	9A		75 91 480		56), ALT TO 9393968 FOR LARGER HOLES	4	Rivet	Nit	5
0230									
0240	10		79 67 953			8	Nut	Mutter	5
0250	11		79 70 437		55), (7970429)	4	Cage nut	Korgmutter	5
0260	12		93 88 588			1	Plug	Plugg	1
0270	13		75 64 321			1	Heat shield	Värmesköld	3
0280	14		81 25 130			4	Screw	Skruv	5
0290	15		89 80 328		(9638572)	2	Gasket	Packning	1
0300	16		*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0310	17		75 18 936			1	Gasket	Packning	2

55. Ch. -H1000688.
56. Ch. H1000689-, H8000041-
230. Superseded by 9392929 and 7478027. Ersatt av 9392929 och 7478027.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Exhaust system / Avgassystem

1-F08 With catalytic converter / Med katalytisk reaktor

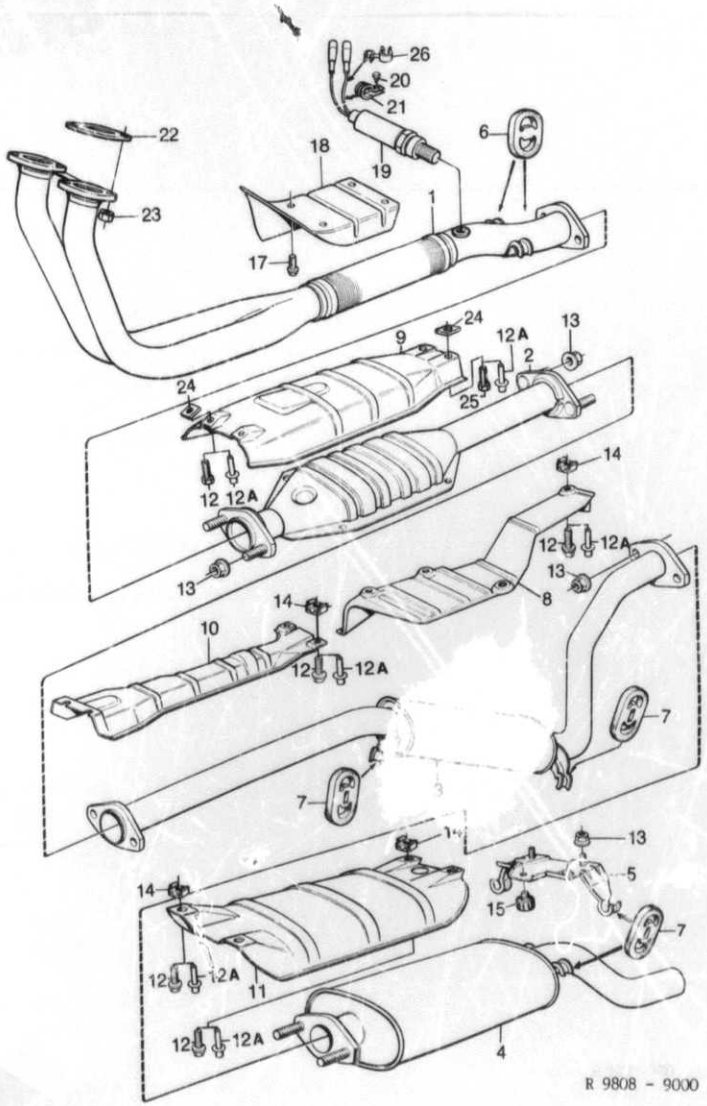

R 9808 - 9000

1540	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 93 455			1	Exhaust pipe	Avgasrör	2
0020	2	*93 92 598*		-1987 NLS - USE 9392457	1	TW catalytic converter	Katalysator	4
0030	2	93 92 457		1988-	1	TW catalytic converter	Katalysator	4
0040	2	• 44 40 020		IT	1	TW catalytic converter	Katalysator	4
0050	3	• 88 22 215		-1988, (8975419)	1	Silencer	Ljuddämpare	1
0060	3	• 88 22 249		500), 1989-, (8979650)	1	Silencer	Ljuddämpare	1
0070	4	• 88 22 256		-1988, (9393364)	1	Silencer	Ljuddämpare	1
0080	4	• 88 22 231		500),1989-, 5D,(8979130)	1	Silencer	Ljuddämpare	1
0090	4	89 79 155		500), 1989-, 4D	1	Silencer	Ljuddämpare	1
0100	5	93 94 685		1986, (9386848)	1	Hook	Krok	5
0110	5	93 94 685		1987-1988	1	Hook	Krok	5
0120	5	99 77 936		500), 1989-	1	Suspension hook	Upphängningskrok	5
0130	6	93 92 465		(9388943)	2	Rubber mounting	Gummiupphängning	1
0140	7	93 28 105			4	Rubber mounting	Gummiupphängning	1
0150	8	93 92 473		1986	1	Heat shield	Värmesköld	3
0160	8	93 94 073		1987-1988	1	Shield	Sköld	3
0170	8	40 22 604		500), 1989-	1	Heat shield	Värmesköld	3
0180	9	*93 86 244*		-1986 NLS - USE 4022588	1	Shield	Sköld	3
0190	9	*93 94 057*		1987-1988 NLS - USE 4022588	1	Shield	Sköld	3
0200	9	40 22 588		500), 1989-	1	Heat shield	Värmesköld	3
0210	10	93 86 251		1986	1	Shield	Sköld	3
0220	10	93 94 065		1987-1988	1	Shield	Sköld	3
0230	10	40 22 596		500), 1989-	1	Heat shield	Värmesköld	3
0240	11	93 86 277		1986	1	Shield	Sköld	3
0250	11	93 94 081		1987-1988	1	Shield	Sköld	3
0260	11	40 22 612		500), 1989-	1	Shield	Sköld	3
0270	12	75 28 953		55)	12	Screw	Skruv	5
0280	12A	93 93 968		56)	12	Rivet	Nit	5
0290	12A	75 91 480		56) ALT TO 9393968 FOR LARGER HOLES	12	Rivet	Nit	5
0300								
0310	13	79 67 953			8	Nut	Mutter	5
0320	14	79 70 437		55)	6	Cage nut	Korgmutter	5
0330	15	93 88 588			1	Plug	Plugg	1
0340	17	81 25 130			4	Screw	Skruv	5
0350	18	75 64 321			1	Heat shield	Värmesköld	3
0360	19	93 92 762		1986	1	Lambda sonde	Lambdasond	4
0370	19	75 25 603		1987-	1	Lambda sonde	Lambdasond	4
0380	20	*79 71 757*		1986 NLS - USE 7528953	2	Screw	Skruv	5
0390	21	73 98 803		1986	2	Clamp	Klammer	5
0400	22	89 80 328		(9368572)	2	Gasket	Packning	1
0410	23	*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0420	24	79 77 374		55)	6	Cage nut	Korgmutter	5
0430	25	82 62 958		55)	2	Screw	Skruv	5
0440	26	73 99 272		88)	1	Clamp	Klammer	5
0450								
0460		88 19 963		1986-1988	X	Catalytic converter kit	Katalysatorsats	4
0470				See page 2-141, 1-G02				
0480		• *43 93 799*		1986, IT	X	Catalytic converter kit	Katalysatorsats	4
0490				See page 2-147, 1-H04 NLS				
0500		• *43 93 807*		1987-, IT	X	Catalytic converter kit	Katalysatorsats	4
0510				See page 2-147, 1-H04 NLS				


55. Ch. -H1000688.
56. Ch. H1000689-, H8000041-
88. Ch. J1009813-, J2004739-, J8000633-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

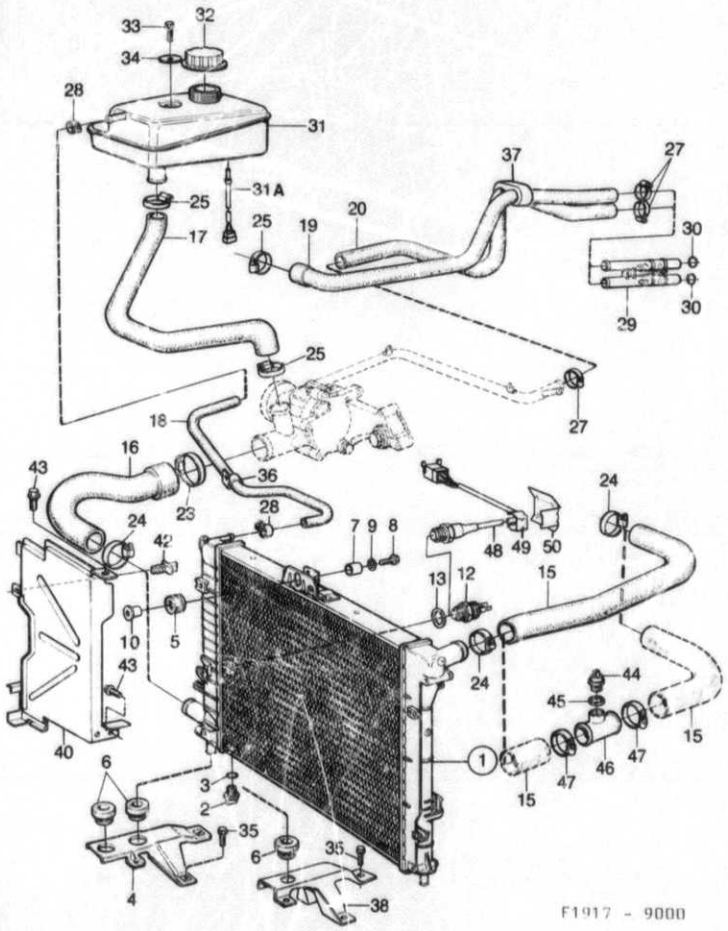

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 82 649*		1985 NLS - USE 7599285	1	Radiator	Kylare	4
0020	1	93 82 656		1985, AC	1	Radiator	Kylare	4
0030	1	*93 82 649*		1986-, TURBO M NLS - USE 7599285	1	Radiator	Kylare	4
0040	1	*75 50 080*		1986-, TURBO A NLS - USE 7599194	1	Radiator	Kylare	4
0050	1	93 82 656		1986-, TURBO M, AC	1	Radiator	Kylare	4
0060	1	75 50 098		1986-, TURBO A, AC	1	Radiator	Kylare	4
0070	1	*93 82 649*		1986-, IM NLS - USE 7599285	1	Radiator	Kylare	4
0080	1	*75 50 080*		1986-, IA NLS - USE 7599194	1	Radiator	Kylare	4
0090	2	93 85 824			1	Drain valve	Avtappningsventil	3
0100	3	79 75 725			1	O-ring	O-ring	2
0110	4	75 76 382		-1986,(9382680)	1	Bracket	Fäste	6
0120	4	75 76 382		1987-	1	Bracket	Fäste	6
0130	5	93 77 334			1	Rubber bushing	Gummibussning	4
0140	6	*75 53 894*		-1988 NLS - USE 4027488	2	Rubber bushing	Gummibussning	4
0150	6	40 27 488		500), 1989-	2	Rubber bushing	Gummibussning	4
0160	7	75 53 415			1	Rubber bushing	Gummibussning	4
0170	8	80 21 917		101)	1	Screw	Skruv	5
0180	8	79 78 133		102)	1	Screw	Skruv	5
0190	9	79 75 469			1	Washer	Bricka	5
0200	10	75 53 308		47)	1	Nut	Mutter	5
0210	10	75 76 200		48)	1	Nut	Mutter	5
0220	12	*95 26 518*		-1988 NLS - USE 4086708	1	Thermo contact	Termokontakt	2
0230	13	93 86 285			1	Seal	Tätning	5
0240	15	75 51 187			1	Hose	Slang	2
0250	15	• *43 56 598*		236,237) NLS - USE 4359691	1	Hose	Slang	2
0260	16	93 83 670		TURBO	1	Hose	Slang	3
0270	16	93 83 688		TURBO, AC	1	Hose	Slang	3
0280	16	93 83 662		1986-, I	1	Hose	Slang	3
0290	16	93 83 670		1986-, I, AC	1	Hose	Slang	3
0300	17	75 54 009			1	Hose	Slang	3
0310	17	75 54 017		AC	1	Hose	Slang	3
0320	18	75 50 130		-1986, TURBO	1	Hose	Slang	2
0330	18	75 50 148		-1986, TURBO, AC	1	Hose	Slang	2
0340	18	75 76 226		1987, TURBO	1	Hose	Slang	2
0350	18	*75 76 234*		1987, TURBO, AC NLS - USE 7550148	1	Hose	Slang	2
0360	18	75 50 148		1988-, TURBO	1	Hose	Slang	2
0370	18	75 50 122		1986-, I	1	Hose	Slang	2
0380	18	75 50 130		1986, I, AC	1	Hose	Slang	2
0390	18	75 76 226		1987, I, AC	1	Hose	Slang	2
0400	18	75 50 130		1988-, I	1	Hose	Slang	2
0410	19	75 54 025			1	Hose	Slang	3
0420	19	• 43 56 606		236,238)	1	Hose	Slang	2
0430	20	75 54 033			1	Hose	Slang	3
0440	23	79 70 122			1	Hose clamp	Slangklamma	5
0450	24	79 70 114			3	Hose clamp	Slangklamma	5
0460	25	79 70 098			3	Hose clamp	Slangklamma	5
0470	27	79 70 072			3	Hose clamp	Slangklamma	5
0480	28	79 70 031			2	Hose clamp	Slangklamma	5
0490	29	93 85 709			1	Snap-on coupling	Snabbkoppling	5

47. Ch. -H1006906, -H8000149
48. Ch. H1006907-, H8000150-
101. Ch. --J1020749, --J2011889, --K8000008.
102. Ch. J1020750--, J2011890--, K8000009--.
236. For markets with mean temperature over 10° Celsius. För marknader med medeltemperatur över 10° Celsius.
237. Alternative for 75 51 187. Alternativ för 75 51 187.
238. Alternative for 75 54 025. Alternativ för 75 54 025.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-F12

Radiator, etc
Kylare, etc

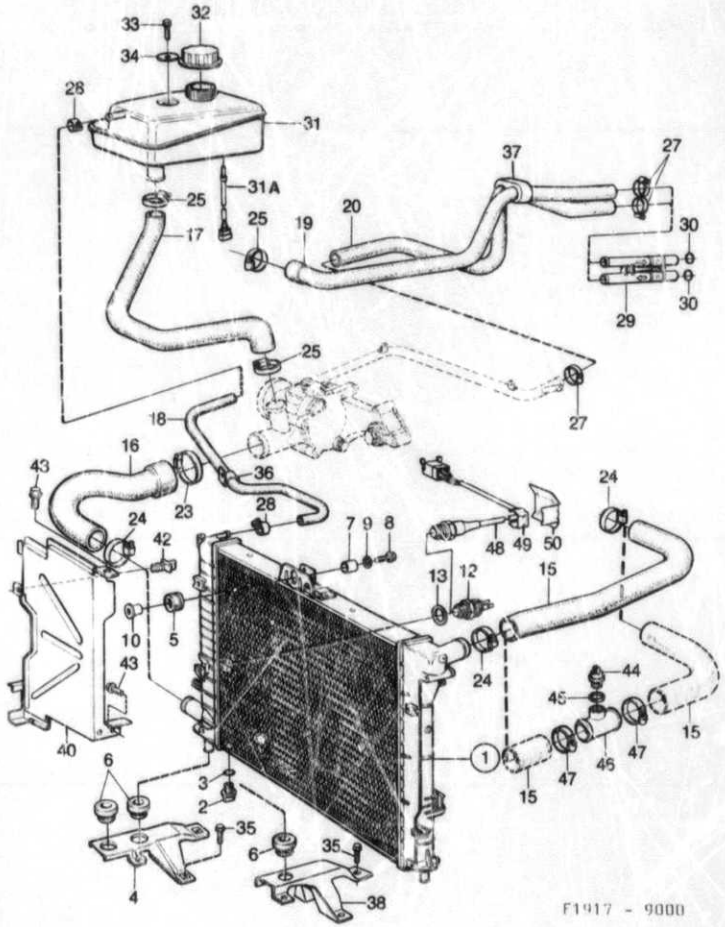

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	30	79 74 975			2	O-ring	O-ring	2
0510	31	93 80 880		-1985	1	Expansion tank	Expansionstank	3
0520	31	75 54 306		1986	1	Expansion tank	Expansionstank	3
0530	31	87 86 055		1987-1988,(7592934)	1	Expansion tank	Expansionstank	3
0540	31	87 86 055		1989-	1	Expansion tank	Expansionstank	3
0550	31A	75 54 348		1986, PART OF 7554306	1	Level sensor	Nivågivare	3
0560	31A	75 54 348		1987-	1	Level sensor	Nivågivare	3
0570	32	75 77 323		30), (9335069)	1	Cover	Lock	3
0580	32	75 77 323		31)	1	Cover	Lock	3
0590	33	80 84 063			1	Screw	Skruv	5
0600	34	83 71 650			1	Washer	Bricka	5
0610	35	80 19 895			3	Screw	Skruv	5
0620	36	85 36 419		-1987	1	Clip	Clips	5
0630	36	85 36 419		1988-, I	1	Clip	Clips	5
0640	36	85 36 419		1988-, TURBO	1	Clip	Clips	5
0650	36	79 71 880		1988-, TURBO, AC	1	Tensioning band	Spännband	4
0660	37	75 59 081		95)	1	Grommet	Genomföring	4
0670	37	75 98 210		96)	1	Grommet	Genomföring	4
0680	38	75 76 390		1986, I,(7576390)	1	Bracket	Fäste	6
0690	38	75 76 390		1987-, I	1	Bracket	Fäste	6
0700	40	75 50 015		1986-, I, AC	1	Cover plate	Täckplåt	5
0710	42	93 85 832		1986-, I	1	Rubber strap	Gummistropp	4
0720	43	79 71 823		1986-, I, AC	3	Screw	Skruv	5
0730	44	*95 26 526*		91) NLS - USE 4086724	1	Thermo contact	Termokontakt	2
0740	45	83 30 268		91)	1	Seal	Tätning	5
0750	46	75 76 960		91)	1	Tube	Rör	5
0760	47	79 70 114		91)	2	Hose clamp	Slangklamma	5
0770	48	*95 69 054*		500), 1989- NLS - USE 4086690	1	Thermo contact	Termokontakt	2
0780	48	*95 67 967*		1989-, FOR TWOSTEP COOLING FAN NLS - USE 4086682	1	Thermo contact	Termokontakt	2
0800	49	40 60 083		500), 1989-, TURBO	1	Clip	Clips	5
0810	50	*40 60 091*		1989-,170,500), TURBO NLS - USE 4063459	1	Protection	Skydd	5
0820	50	40 63 459		171), TURBO	1	Protection	Skydd	5
0830								
0840				See page 80-031, 6-B08	X	Ac switch off	Ac-bortkoppling	


30. Ch. -H1000422.
31. Ch. H1000423-.
91. Part of AC-disengagement kit 7577042. Ingår i sats, AC-frånkoppling 7577042.
95. Ch. -J1011736, -J2005982, -J8001037.
96. Ch. J1011737-, J2005983-, J8001038-.
170. Ch. -K1012733, -K2006813, -K8000423.
171. Ch. K1012734-, K2006814-, K8000424-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	8-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

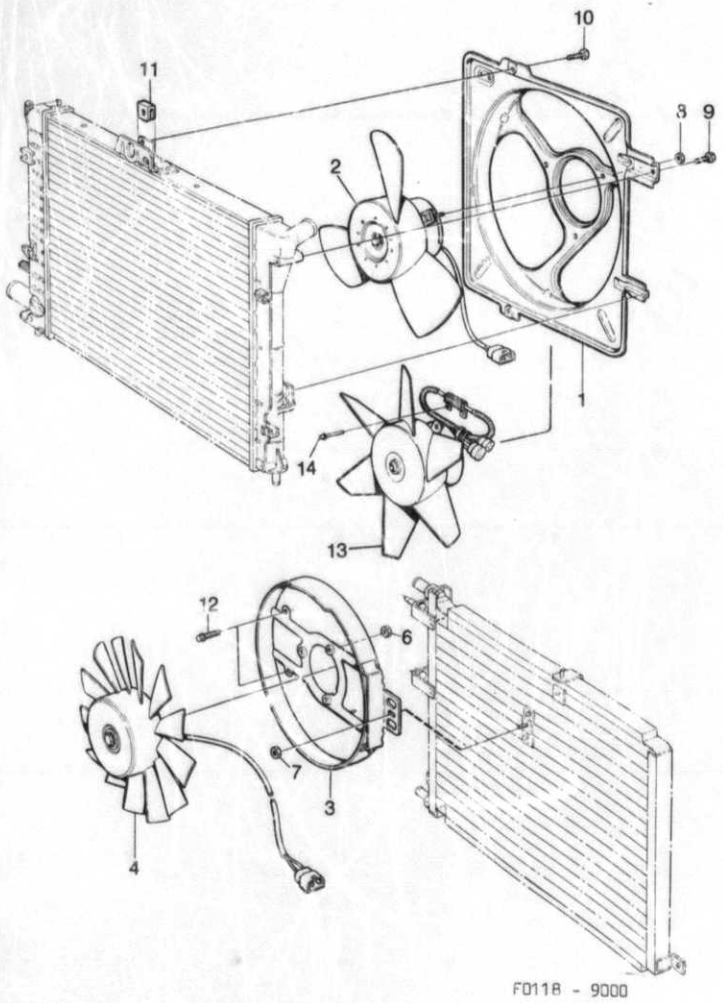

F0118 - 9000

1560	Pos	Part No/Art no	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 918		99), (7552029)	1	Fan shroud	Fläktkåpa	4
0020	1	75 92 918		100)	1	Fan shroud	Fläktkåpa	4
0030	2	93 82 144		235)	1	Fan unit	Fläktenhet	4
0040	3	75 77 885	S	-1986, (7553977)	1	Fan shroud	Fläktkåpa	4
0050	3	75 77 885	S	1987-, (7553977)	1	Fan shroud	Fläktkåpa	4
0060	4	*40 27 595*	S	105), AC,(7550106) NLS - USE 7598980	1	Fan motor	Fläktmotor	4
0070	4	75 98 980	S	106), AC	1	Fan unit	Fläktenhet	4
0080	6	79 73 365	S	57)	3	Nut	Mutter	5
0090	6	79 75 576	S	58)	3	Nut	Mutter	5
0100	7	80 29 555		-1985	1	Nut	Mutter	5
0110	7	79 71 658		1986-	1	Nut	Mutter	5
0120	8	79 71 658	S	57)	3	Nut	Mutter	5
0130	8	79 74 298	S	58)	3	Nut	Mutter	5
0140	9	79 71 823			1	Screw	Skruv	5
0150	10	79 22 800			2	Screw	Skruv	5
0160	11	79 72 573		-1987	2	Clip nut	Clipsmutter	5
0170	11	94 27 014		1988-	2	Clip nut	Clipsmutter	3
0180	12	79 72 607	S		2	Screw	Skruv	5
0190	13	*75 92 819*		1989-, 2-STEP NLS - USE 4360962	1	Fan unit	Fläktenhet	4
0200	14	*79 72 045*		1989- NLS - USE 7961659	2	Rivet	Nit	5
0220		96 27 373		EXTRA FAN FOR AC	X	Fan	Fläkt	4
0230				See page 8C-027, 6-B04				

57. Ch. -H1009084, -H8000180.
58. Ch. H1009085-, H8000181-.
99. Ch. --J1017550, --J2009641, --J8001260.
100. Ch. J1017551-, J2009642-, J8001261-.
105. Ch. --J1009420, --J2004545, --J8000583.
106. Ch. J1009421-, J2004546-, J8000584-.
235. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad kompletteenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-F16

Fan, etc
/

Fläkt, etc
/

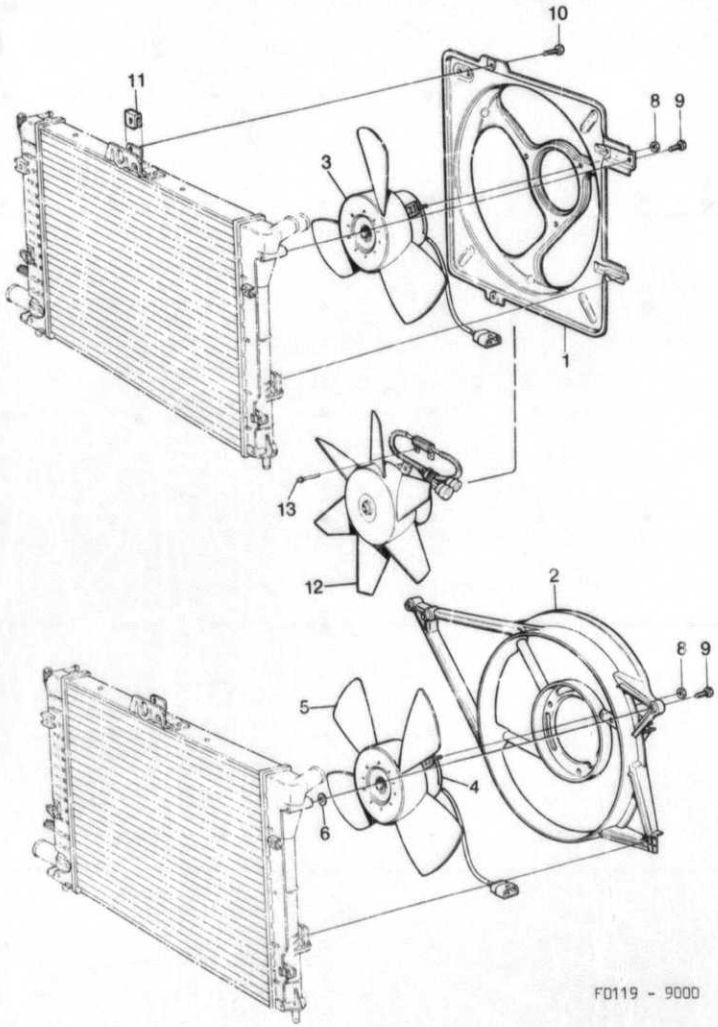

1565	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 918		(7552029)	1	Fan shroud sheet metal	Fläktkåpa plåt	4
0030	2	*93 82 102*		NLS - USE 4237061	1	Fan shroud plastic	Fläktkåpa plast	4
0050	3	93 82 144		235), AC	1	Fan unit	Fläktenhet	4
0060	4	93 82 110		235)	1	Fan motor	Fläktmotor	4
0070	5	75 41 725		1,235)	1	▲Fan blade	▲Fläktblad	4
0080	6	75 41 733		235)	1	▲Clip	▲Clips	5
0090	8	79 71 658		57)	3	Nut	Mutter	5
0100	8	79 74 298		58)	3	Nut	Mutter	5
0110	9	79 71 823			1	Screw	Skruv	5
0120	10	79 22 800			2	Screw	Skruv	5
0130	11	79 72 573		-1987	2	Clip nut	Clipsmutter	5
0140	11	94 27 014		1988-	2	Clip nut	Clipsmutter	3
0150	12	*75 92 819*		1989-, 2-STEP NLS - USE 4360962	1	Fan unit	Fläktenhet	4
0160	13	*79 72 045*		1989- NLS - USE 7961659	2	Rivet	Nit	5

1. Not as separate spare part. Ej som separat reservdel.
57. Ch. -H1009084, -H8000180.
58. Ch. H1009085-, H8000181-.
235. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-F18

Charge air cooler
Laddluftkylare

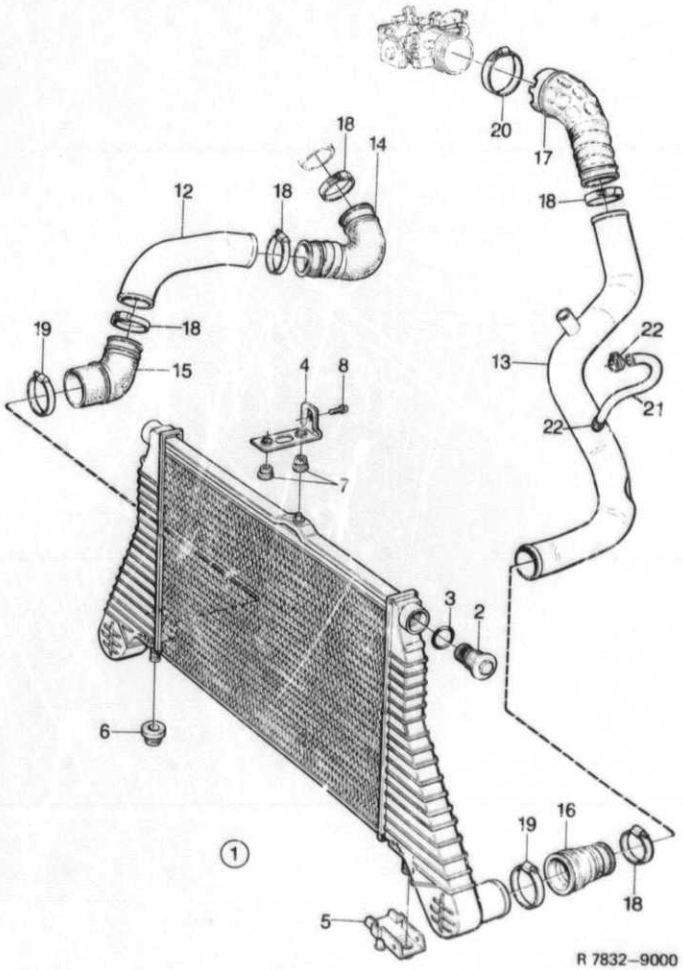

R 7832–9000

1570	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 86 871*		-1985 NLS - USE 7559776	1	Radiator	Kylare	4
0020	1	75 59 776		1986-	1	Charge air cooler	Laddluftkylare	4
0030	2	75 50 023		-1985	1	.Valve	.Ventil	2
0040	3	79 72 797		-1985	1	..O-ring	..O-ring	2
0050	4	75 50 346			1	Bracket	Fäste	5
0060	5	93 81 120			1	Bracket	Fäste	6
0070	6	*75 53 894*		-1988 NLS - USE 4027488	2	Rubber bushing	Gummibussning	4
0080	6	40 27 488		500), 1989-	2	Rubber bushing	Gummibussning	4
0090	7	75 50 353			1	Rubber bushing	Gummibussning	5
0100	8	79 72 441			1	Screw	Skruv	5
0110	12	93 81 724			1	Tube	Rör	5
0120	13	93 89 461		-1987, M	1	Tube	Rör	5
0130	13	75 90 805		1988-, M	1	Pipe	Rör	6
0140	13	93 90 923		A	1	Pipe	Rör	6
0150	14	93 87 671			1	Hose	Slang	5
0160	15	93 87 689			1	Hose	Slang	5
0170	16	93 87 697		-1987, M	1	Hose	Slang	5
0180	16	93 90 956		1988-, M	1	Hose	Slang	4
0190	16	93 90 956		A	1	Hose	Slang	4
0200	17	93 87 705		-1987, M	1	Hose	Slang	5
0210	17	93 91 509		1988-, M	1	Hose	Slang	6
0220	17	93 91 509		A	1	Hose	Slang	6
0230	18	79 70 130			5	Hose clamp	Slangklamma	5
0240	19	79 70 148			2	Hose clamp	Slangklamma	5
0250	20	79 70 155			1	Hose clamp	Slangklamma	5
0260	21	93 42 627		A	1	Hose	Slang	3
0270	22	79 73 522		A	2	Hose clamp	Slangklamma	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-F20 Air oil cooler 1985

Luftoljekylare 1985

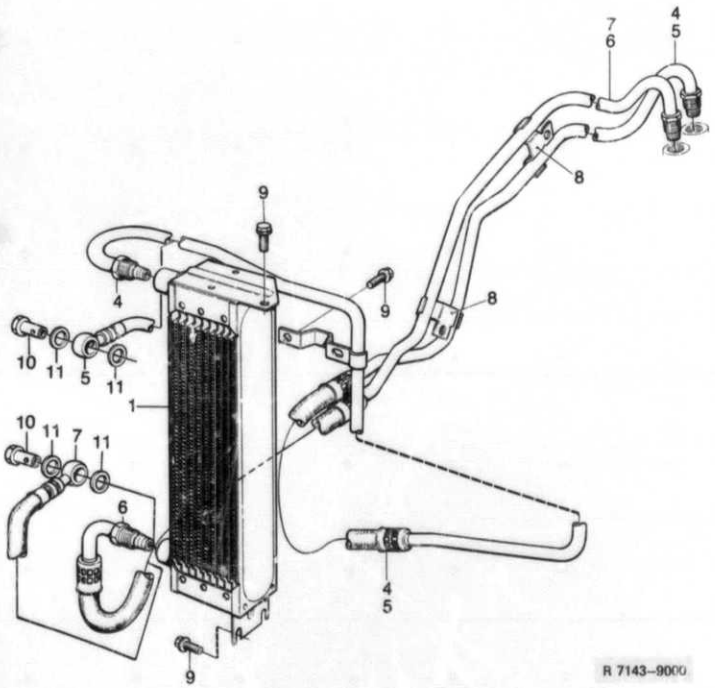

R 7143–9000

1580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 59 271		AC	1	Oil cooler	Oljekylare	4
0020	1	75 59 263			1	Oil cooler	Oljekylare	4
0030	4	*75 53 886*		4,222) NLS - USE 7559354, 9355389	1	Hose	Slang	3
0040	5	75 59 354		5)	1	Hose	Slang	3
0050	6	*75 53 878*		4,221) NLS - USE 7559347, 9355389	1	Hose	Slang	3
0060	7	75 59 347		5)	1	Hose	Slang	3
0070	8	*75 54 249*		NLS - USE 7572985	2	Clamp	Klammer	5
0080	9	79 71 823			4	Screw	Skruv	5
0090	10	*75 59 362*		5) NLS	2	Screw	Skruv	5
0100	11	93 55 389		5)	4	Gasket	Packning	4

4. Ch. -F4001112.
5. Ch. F4001113-.
221. Superseded by 7559347,7559362 and 9355389. Ersatt av 7559347,7559362 och 9355389.
222. Superseded by 7559354,7559362 and 9355389. Ersatt av 7559354,7559362 och 9355389.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
2A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-F22

Air oil cooler
Engine, 1986-

Luftoljekylare
Motor, 1986-

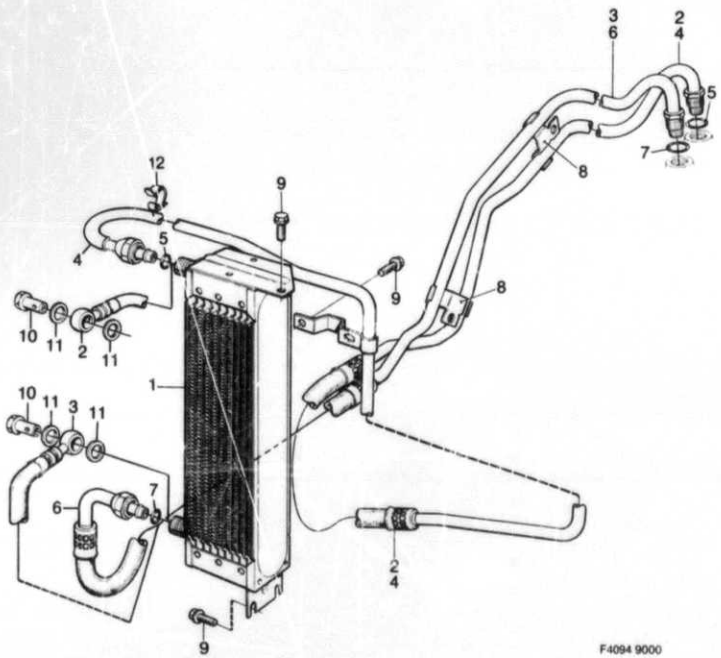

F4094 9000

1585	Pos	Part No/Art nr	K c	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 59 271		14), AC	1	Oil cooler	Oljekylare	4
0020	1	75 72 894		15), AC	1	Oil cooler	Oljekylare	4
0030	1	75 59 263		14)	1	Oil cooler	Oljekylare	4
0040	1	*75 72 886*		15) NLS - USE 4029625	1	Oil cooler	Oljekylare	4
0050	2	75 59 354		14)	1	Hose	Slang	3
0060	3	75 59 347		14)	1	Hose	Slang	3
0070	4	42 84 212		15), -1987,(7572951)	1	Hose	Slang	3
0080	4	*72 99 884*		1988- NLS - USE 4284212	1	Hose	Slang	4
0090	5	79 77 598		15)	2	.O-ring	.O-ring	2
0100	6	75 72 944		15)	1	Hose	Slang	3
0110	7	79 77 598		15)	2	.O-ring	.O-ring	2
0120	8	75 72 985			2	Clamp	Klammer	5
0130	9	79 71 823			4	Screw	Skruv	5
0140	10	*75 59 362*		14) NLS	2	Screw	Skruv	5
0150	11	93 55 389		14)	4	Gasket	Packning	4
0160	12	73 98 894			1	Clamp	Klammer	5


14. Ch. -G1007152.
15. Ch. G1007153-.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G14
Kits	1-G18

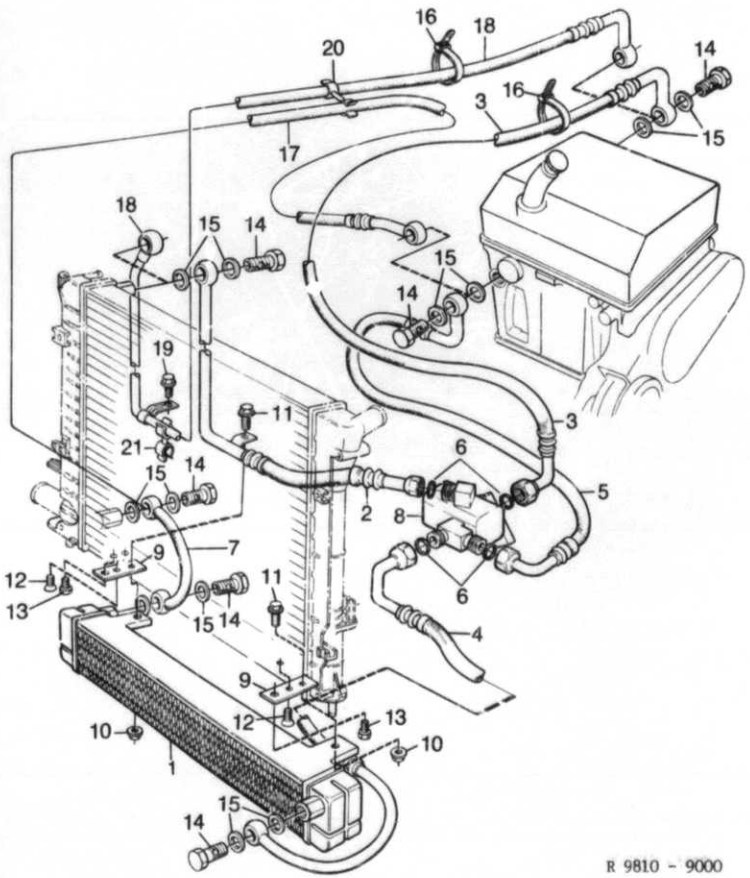

Cooling system
Kylsystem

1-F24

Oil cooler
Automatic transmission

Oljekylare
Automatisk växellåda

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 98 311		80), (7554355)	1	Oil cooler	Oljekylare	4
0020	1	75 96 311		81)	1	Oil cooler	Oljekylare	4
0030	2	75 77 356		43), TURBO, (7573728)	1	Hydraulic hose	Hydraulslang	3
0040	2	75 77 356		44), TURBO	1	Hydraulic hose	Hydraulslang	3
0050	2	75 77 364		43), I, (7573736)	1	Hydraulic hose	Hydraulslang	3
0060	2	75 77 364		44), I	1	Hydraulic hose	Hydraulslang	3
0070	3	75 73 751		193)	1	Hydraulic hose	Hydraulslang	3
0080	3	40 29 294		194)	1	Hydraulic hose	Hydraulslang	3
0090	4	75 73 769		193)	1	Hydraulic hose	Hydraulslang	3
0100	4	40 29 302		194)	1	Hydraulic hose	Hydraulslang	3
0110	5	40 29 286		193), (7573744)	1	Hydraulic hose	Hydraulslang	3
0120	5	40 29 286		194)	1	Hydraulic hose	Hydraulslang	3
0130	6	79 77 580		98)	1	O-ring	O-ring	2
0140	7	75 59 537		TURBO	1	Hydraulic hose	Hydraulslang	4
0150	7	75 70 823		I	1	Hydraulic hose	Hydraulslang	4
0160	8	75 73 777		(7554504)	1	Thermostat	Termostat	3
0170	9	75 70 757			2	Bracket	Konsol	5
0180	10	79 71 658		67)	2	Nut	Mutter	5
0190	10	79 74 298		68)	2	Nut	Mutter	5
0200	11	79 65 544			2	Screw	Skruv	5
0210	12	80 56 004		67)	2	Screw	Skruv	5
0220	12	73 99 611		68)	2	Screw	Skruv	5
0230	13	*80 19 911*		67) NLS - USE 7399603	2	Screw	Skruv	5
0240	13	73 99 603		68)	2	Screw	Skruv	5
0250	14	*93 01 532*		NLS - USE 4374211	6	Banjo screw	Banjoskruv	5
0260	15	89 81 961		119),(8326712)	12	Seal	Tätning	5
0270	15	89 81 961		120)	12	Seal	Tätning	5
0280	16	73 99 116		63), (8986440)	1	Clamp	Klammer	5
0290	16	75 93 221		64), (8986440)	1	Tensioning band	Spännband	5
0300	17	75 59 735		18,193)	1	Hydraulic hose	Hydraulslang	3
0310	17	75 59 461		18,193), AC	1	Hydraulic hose	Hydraulslang	3
0320	17	40 29 344		18,194), I	1	Hydraulic hose	Hydraulslang	3
0330	17	40 29 344		18,194), TURBO	1	Hydraulic hose	Hydraulslang	3
0340	17	40 29 336		18,194), TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0350	18	75 59 487		18,193)	1	Hydraulic hose	Hydraulslang	3
0360	18	75 59 479		18,193), AC	1	Hydraulic hose	Hydraulslang	3
0370	18	*40 29 310*		18,194), I NLS - USE 4028882	1	Hydraulic hose	Hydraulslang	3
0380	18	*40 29 310*		18,194), TURBO NLS - USE 4028882	1	Hydraulic hose	Hydraulslang	3
0390	18	40 29 328		18,194), TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0400	19	79 69 223			1	Screw	Skruv	5
0410	20	73 98 464			1	Clamp	Klammer	5
0420	21	75 59 768			1	Clip	Clips	5
0430								
0440		75 54 538		TURBO WITH AC	X	Oil cooler kit	Oljekylarsats	4
0450				See page 2-141, 1-G22				

18. For cars without air oil cooler. För bilar utan luftoljekylare.
43. Ch. -H1004071.
44. Ch. H1004072-, H8000041-
63. Ch. -H1031115, -H8001161.
64. Ch H1031115-, H8001162-.
67. Ch. -H1036523, -H8000949.
68. Ch. H1036524-, H8000950-.
80. Ch. -J1009240, -J2004423, -J8000529.
81. Ch. J1009241-, J2004424-, J8000530-.
98. Ch. G1023769-, H8000041-.
119. Ch. --J1023578, --J2013708, --J8001405.
120. Ch. J1023579-, J2013709-, J8001406-.
193. Ch. --K1023655, --K2014056, - K8001101.
194. Ch. K1023656-, K2014057-, K8001102-.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, cc. tact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G02

Oil cooler
Automatic transmission

Oljekylare
Automatisk växellåda

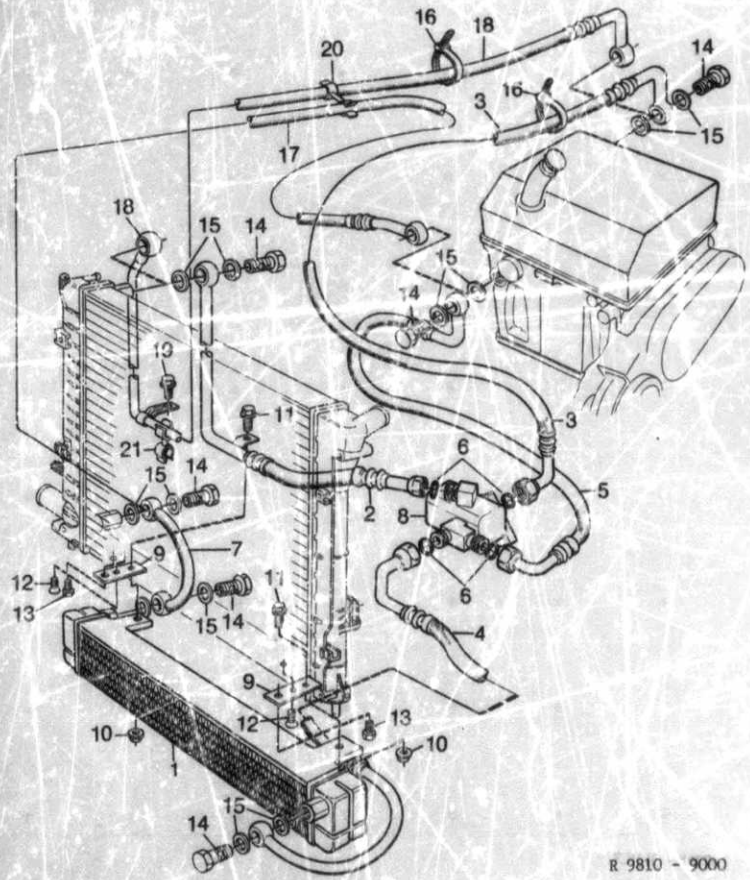

R 9810 - 9000

1600	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460		75 54 546		TURBO WITHOUT AC	X	Oil cooler kit	Oljekylarsats	4
0470				I				
0480				See page 2-141, 1-G22				

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B08
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G16

1-G04

Coolant pump
Kylvätskepump

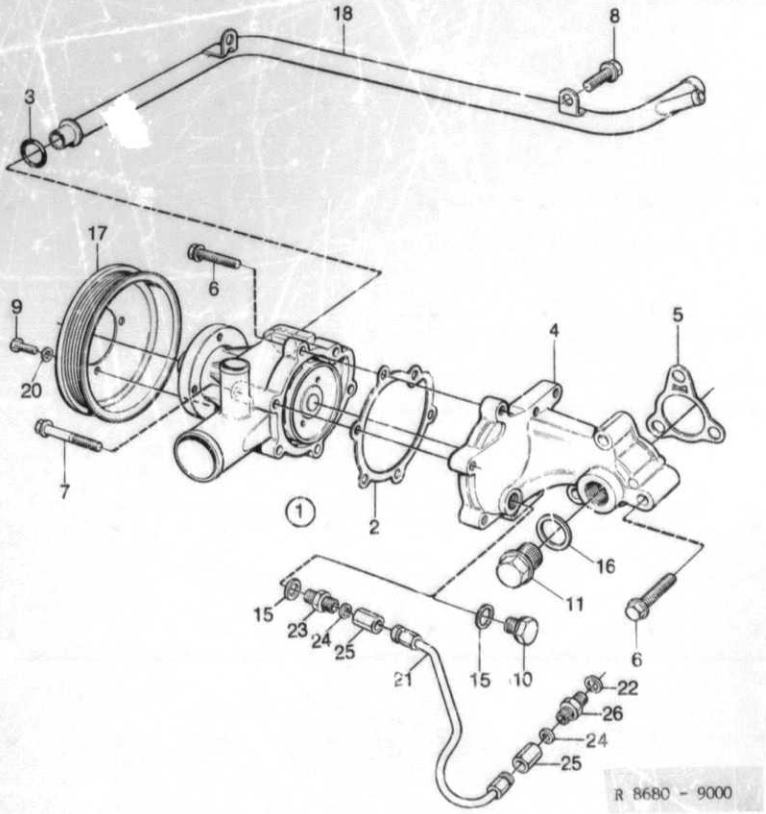

1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 17 918*		7), NLS - USE 9321670	1	Coolant pump	Kylvätskepump	2
0020				See page 2-137, 1-G18				
0030	2	75 66 581		(7566581)	1	▪Gasket	▪Packning	2
0040	3	79 72 698			1	▪O-ring	▪O-ring	2
0050	4	75 07 247			1	Bracket	Konsol	6
0060	5	75 23 897		(7507833)	1	Gasket	Packning	4
0070	6	81 25 197			6	Screw	Skruv	5
0080	7	81 25 239			5	Screw	Skruv	5
0090	8	81 25 148			1	Screw	Skruv	5
0100	9	*90 19 903*		NLS - USE 9166281	4	Screw	Skruv	5
0110	10	*75 64 222*		-1988 NLS - USE 7563042	1	Plug	Propp	5
0120	10	*81 23 721*		1989- NLS - USE 7563042	1	Plug	Propp	5
0130	11	*75 64 230*		-1988 NLS - USE 8123788	1	Plug	Propp	5
0140	11	81 23 788		1989-	1	Plug	Propp	6
0150	15	81 24 141			1	Seal	Tätning	5
0160	16	*81 24 208*		NLS - USE 9116856	1	Gasket	Packning	4
0170	17	93 59 985			1	Pulley	Remskiva	6
0180	18	*75 15 893*		-1987 NLS - USE 7585565	1	Tube	Rör	5
0190	18	75 85 565		1988-	1	Tube	Rör	5
0200	20	*80 73 223*		NLS - USE 9166380	4	Washer	Bricka	5
0210	21	75 82 299		37), TURBO	1	Tube	Rör	5
0220	22	81 24 158		37), TURBO	2	Gasket	Packning	2
0230	23	75 87 785		37), TURBO	1	Nipple	Nippel	3
0240	24	81 32 227		37), TURBO	2	Ferrule	Skärring	5
0250	25	81 45 542		37), TURBO	2	Nut	Mutter	5
0260	26	75 66 789		38), TURBO	1	Nipple	Nippel	5
0270	26	75 84 790		39), TURBO	1	Nipple	Nippel	5

7. Ch.G1003174-.
37. Engine H000269-.
38. Engine H000269-H011394.
39. Engine H011395-.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G06

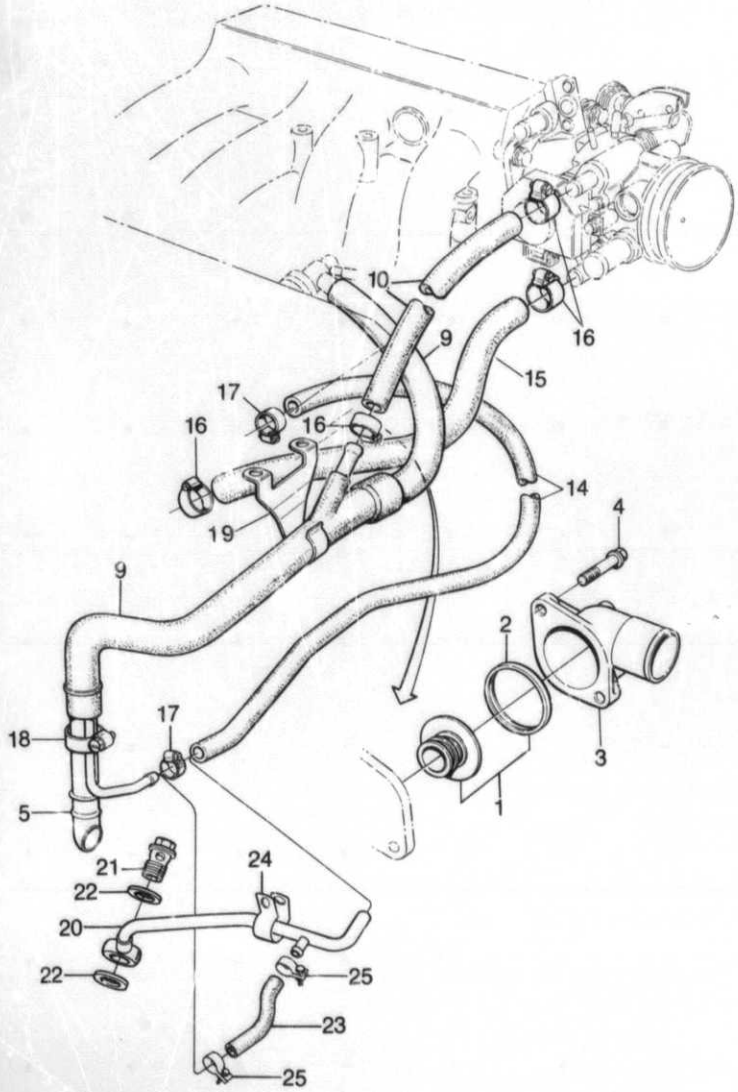

R 8679 - 9000

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 17 298*		89° C	1	Thermostat kit	Termostatsats	1
0020				See page 2-137, 1-G18				
0020				NLS - USE 8822025				
0030	1	88 17 538		82° C	1	Thermostat kit	Termostatsats	1
0040				See page 2-137, 1-G18				
0050	2	83 52 692			1	Gasket	Packning	2
0060	3	75 00 218			1	Cover	Lock	5
0070	4	81 25 189			2	Screw	Skruv	5
0080	5	*75 22 493*		-1986 NLS - USE 7588551	1	Tube	Rör	5
0090	5	75 88 551		1987-	1	Tube	Rör	5
0100	9	75 19 697		16)	1	Hose	Slang	4
0110	9	75 61 756		17), -1987	1	Hose	Slang	4
0120	9	75 61 756		1988-, I	1	Hose	Slang	4
0130	9	75 19 697		1988-, TURBO	1	Hose	Slang	4
0140	10	75 20 018		TURBO	1	Hose	Slang	4
0150	10	75 20 034		I	1	Hose	Slang	4
0160	14	75 20 026			1	Hose	Slang	4
0170	14	75 67 514		37), TURBO	1	Hose	Slang	5
0180	15	75 20 034			1	Hose	Slang	4
0190	16	79 63 515			4	Hose clamp	Slangklamma	5
0200	17	83 59 275			2	Hose clamp	Slangklamma	5
0210	17	79 63 515		37), TURBO	2	Hose clamp	Slangklamma	5
0220	18	79 63 523			1	Hose clamp	Slangklamma	5
0230	19	*75 19 788*		NLS - USE 9125832	1	Bracket	Konsol	6
0240	20	75 83 198		37,168), TURBO	1	Tube	Rör	5
0250	20	91 16 369		169), TURBO	1	Tube	Rör	5
0260	21	75 83 628		37), TURBO	1	Screw	Skruv	5
0270	22	81 24 158		37), TURBO	2	Gasket	Packning	2
0280	23	75 67 522		37,168), TURBO	1	Hose	Slang	4
0290	23	91 16 765		169), TURBO	1	Hose	Slang	4
0300	24	75 83 461		37), TURBO	1	Clamp	Klammer	5
0310	25	83 59 275		37), TURBO	2	Hose clamp	Slangklamma	5

16. Engine -G52494.
17. Engine G52495-.
37. Engine H000269-.
168. Engine --K042023.
169. Engine K042024--.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G08

Accelerator control
Gasreglage

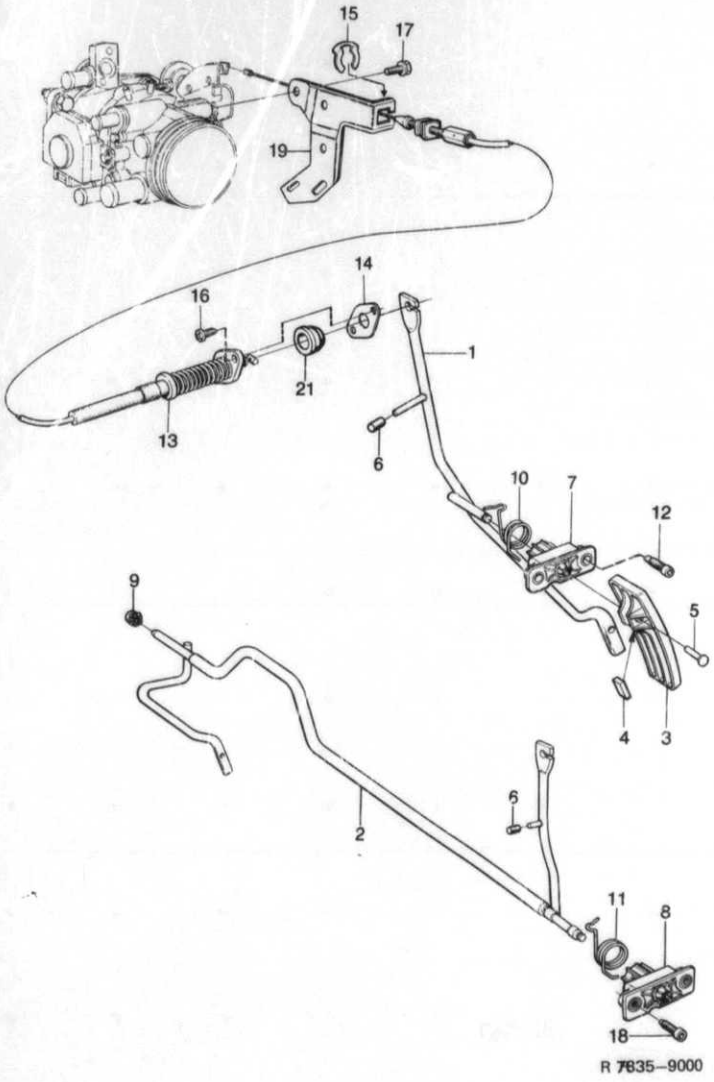

R 7635–9000

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 56 559*		32) NLS - USE 8967903	1	Pedal	Pedal	6
0020	1	89 67 903		33)	1	Accelerator arm	Gaspedalarm	6
0030	2	*89 64 132*		32), RHD, (8957516) NLS - USE 8972176	1	Pedal	Pedal	6
0040	2	*89 68 091*		33), -1989, RHD NLS - USE 8972176	1	Pedal	Pedal	6
0050	2	89 72 176		1989-, RHD	1	Accelerator arm	Gaspedalarm	6
0060	3	71 83 965			1	Pedal plate	Pedalplatta	
0070	4	71 83 973			1	Spacer	Mellanlägg	6
0080	5	79 58 770			1	Rivet	Nit	5
0090	6	89 50 396			1	Absorber	Dämpare	5
0100	7	89 60 924			1	Bearing centre	Lagercentrum	6
0110	8	89 60 924		RHD	1	Bearing centre	Lagercentrum	6
0120	9	89 57 565		RHD	1	Plastic bushing	Plastbussning	6
0130	10	83 60 080		M	1	Spring	Fjäder	5
0140	10	89 65 949		A	1	Spring	Fjäder	5
0150	11	89 60 080		RHD	1	Spring	Fjäder	5
0160	12	89 61 195			2	Screw	Skruv	5
0170	13	75 33 102		-1986, M,(7525696)	1	Cable	Kabel	3
0180	13	75 38 853		40)	1	Cable	Kabel	3
0190	13	75 36 444		1987-, M	1	Cable	Kabel	3
0200	13	*75 25 694*		-1986, A NLS - USE 7533110	1	Cable	Kabel	3
0210	13	75 36 451		1987-, A	1	Cable	Kabel	3
0220	14	93 16 142		-1986	1	Seal	Tätning	6
0230	15	75 26 973		-1986	1	Ring	Ring	5
0240	15	75 33 136		40), 1987-	1	Lock ring	Säkringsring	5
0250	16	79 22 503		-1986	2	Screw	Skruv	5
0260	17	81 29 876		-1986	3	Screw	Skruv	5
0270	17	79 71 294		1987-	3	Screw	Skruv	5
0280	18	89 61 195		RHD	2	Screw	Skruv	5
0290	19	*75 18 525*		1985 NLS	1	Bracket	Konsol	6
0300	19	*75 62 069*		1986 NLS	1	Bracket	Konsol	6
0310	19	75 86 292		1987-	1	Bracket	Konsol	6
0320	21	75 36 501		40), 1987-	1	Bushing	Bussning	5


32. Ch. -H1000862, -H8000645
33. Ch. H1000863-, H8000646-
40. Ch. G1028325-G1028334 and G1028336.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

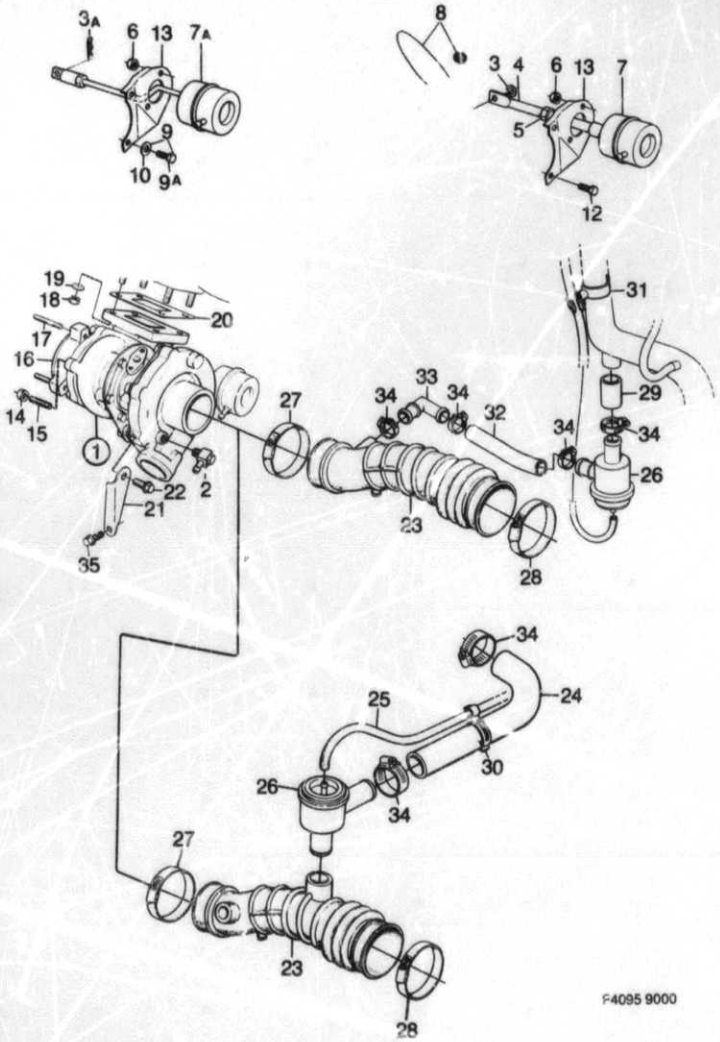

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 17 758*	231), -1985 NLS	1	Turbocharger	Turbokompressor	4
0020	1	*75 17 766*	1986-,36,84,231,700) NLS - USE 7562176	1	Turbocharger	Turbokompressor	4
0030	1	*75 68 082*	37,84,231,700), -1988 NLS - USE 7486079	1	Turbocharger	Turbokompressor	4
0040	1	*75 68 082*	1989-,84,231,700) NLS - USE 7486079	1	Turbocharger	Turbokompressor	4
0050	1	*74 86 061*	103,700), 1989-, ME DI NLS - USE 7486079	1	Turbocharger	Turbokompressor	4
0070	1	75 62 176	1986-,36,85,223,231,700)	1	Turbocharger	Turbokompressor	
0080	1	*75 68 108*	37,85,231,700), -1988 NLS - USE 7486079	1	Turbocharger	Turbokompressor	4
0090	1	*75 68 108*	1989-,85,231,700) NLS - USE 7486079	1	Turbocharger	Turbokompressor	4
0100	1	74 86 079	1989-,131,231,700)	1	Turbocharger	Turbokompressor	4
0120	1	74 83 035	97,231,700), -1988, GB	1	Turbocharger	Turbokompressor	4
0130	1	*74 86 095*	231,700), 1989-, GB NLS - USE 8788796	1	Turbocharger	Turbokompressor	4
0140	1	*74 86 095*	231,700), 1989-, EU DI NLS - USE 8788796	1	Turbocharger	Turbokompressor	4
0150	2	75 65 591		1	.Nipple	.Nippel	3
0160	2	87 87 301	232)	1	.Nipple	.Nippel	3
0170	2	87 87 319	233)	1	.Nipple	.Nippel	3
0180	3	93 50 505		1	.E-circlip	.Spärryttare	2
0190	3A	89 25 067	234)	1	.Lock needle	.Låsnål	5
0200	4	75 65 609		1	.End piece	.Ändstycke	3
0210	5	93 50 570		1	.Nut	.Mutter	5
0220	6	93 50 513		2	.Nut	.Mutter	5
0230	7	75 65 617		1	.Regulator	.Regulator	4
0240	7A	87 87 269	234)	1	.Pressure regulator	.Tryckregulator	4
0250	8	88 18 569	234)	1	..Sealing kit	..Plomberingssats	2
0260	9	87 88 754	234)	1	..Screw	..Skruv	5
0270	9A	*87 87 277*	234) NLS - USE 8788754	2	...Screw	...Skruv	5
0280	10	*87 87 285*	234) NLS	2	...Washer	...Bricka	5
0290	12	93 50 471		6	.Screw	.Skruv	5
0300	13	75 65 583		1	.Bracket	.Fäste	5
0310	14	75 19 432		5	.Nut	.Mutter	5
0320	15	75 65 658		5	.Stud	.Pinnskruv	5
0330	15	75 65 716	234)	5	.Stud	.Pinnskruv	5
0340	16	75 65 666		1	.Throttle body	.Spjällhus	4
0350	16	87 87 335	234)	1	.Cover	.Lock	5
0360	17	75 20 224	-1988	3	Stud	Pinnskruv	5
0370	17	75 20 224	1989-	2	Stud	Pinnskruv	5
0380	18	75 21 321		4	Nut	Mutter	5
0390	19	80 73 108		4	Washer	Bricka	5
0400	20	83 66 262		1	Gasket	Packning	2
0410	21	75 02 537		1	Bracket	Konsol	6
0420	21	74 84 850	97), GB	1	Stay	Stag	5

36. Engine -H000268.
37. Engine H000269-.
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
97. Engine J067187-.
103. Engine -J082585.
131. For TURBO with catalytic converter and DI. För TURBO med katalytisk reaktor och DI.
223. Superseded by 7562176 and 3x7520224. Ersatt av 7562176 och 3x7520224.
231. With basic charging pressure. Med grundladdtryck.
232. Part of 74 83 035. Del av 74 83 035.
233. Part of 74 86 095. Del av 74 86 095.
234. Part of 74 83 035 and 74 86 095. Del av 74 83 035 och 74 86 095.
700. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G12

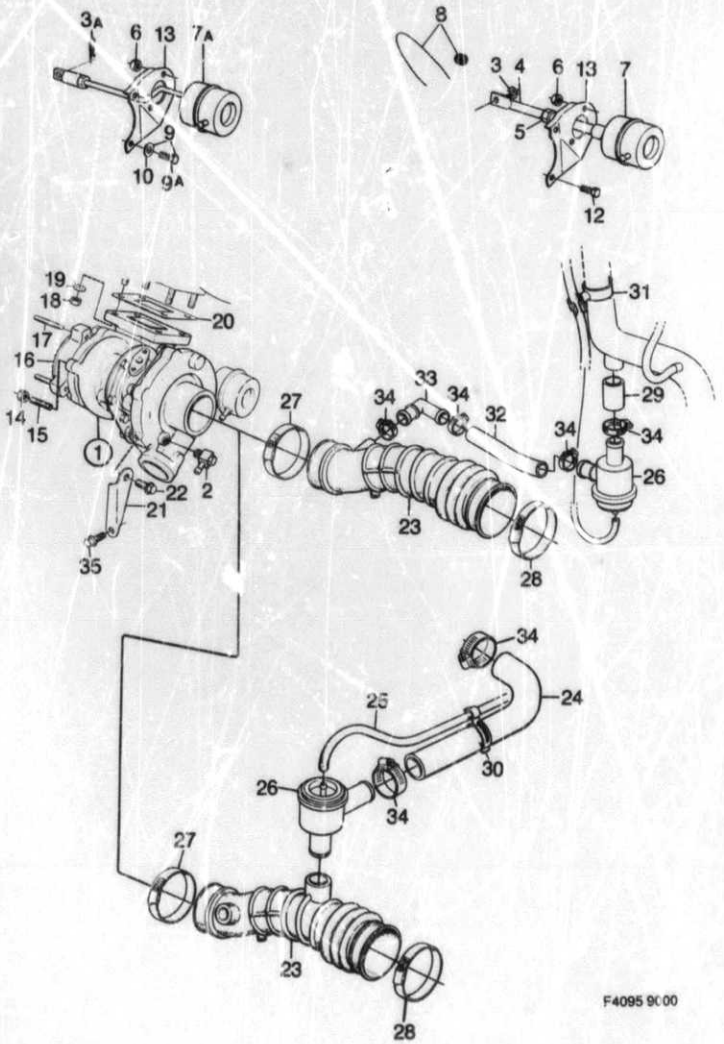

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	21	74 84 850		1989-, EU WITH DI	1	Stay	Stag	5
0440	22	81 25 148			1	Screw	Skruv	5
0450	23	93 89 321		-1987, M	1	Hose	Slang	5
0460	23	93 90 873		-1987, A	1	Hose	Slang	4
0470	23	75 91 928		1988-	1	Hose	Slang	5
0480	24	93 89 445		-1987	1	Hose	Slang	3
0490	24	75 91 944		1988-	1	Hose	Slang	4
0500	25	91 36 243		M, L=650 MM	1	Vaccum hose	Vakuumslang	5
0510	25	91 36 243		A, L=790 MM	1	Vaccum hose	Vakuumslang	5
0520	25	91 36 243		85), 1989-, US, CA, L=560 MM	1	Vaccum hose	Vakuumslang	5
0530								
0540	26	93 90 022		-1988 NLS - USE 4441895	1	Valve	Ventil	2
0550	26	89 81 904		1989-	1	Valve	Ventil	2
0560	27	79 70 148			1	Hose clamp	Slangklamma	5
0570	28	79 70 155			1	Hose clamp	Slangklamma	5
0580	29	79 70 098		-1987	3	Hose clamp	Slangklamma	5
0590	30	73 98 407			1	Clamp	Klammer	5
0600	31	73 98 415			1	Clamp	Klämma	5
0610	32	75 91 936		1988-	1	Hose	Slang	4
0620	33	75 91 944		1988-	1	Hose	Slang	4
0630	34	75 91 951		1988-	1	Nipple	Nippel	5
0640	35	79 77 234		1988- NLS - USE 7970098	5	Hose clamp	Slangklamma	5
0650	36			See page 2-027, 1-C04	2	Screw	Skruv	
0660								
0670		93 01 706		-1986	X	Sealing	Plombering	2
0680				See page 2-141, 1-G22				
0690		88 18 569		1987-	X	Sealing kit	Plomberingssats	2
0700				See page 2-141, 1-G22				
0710		88 18 973		1985-1986	X	Mounting kit	Monteringssats	5
0720				See page 2-141, 1-G22				
0730								
0740		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

35. With catalytic converter. Med katalytisk reaktor.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G14

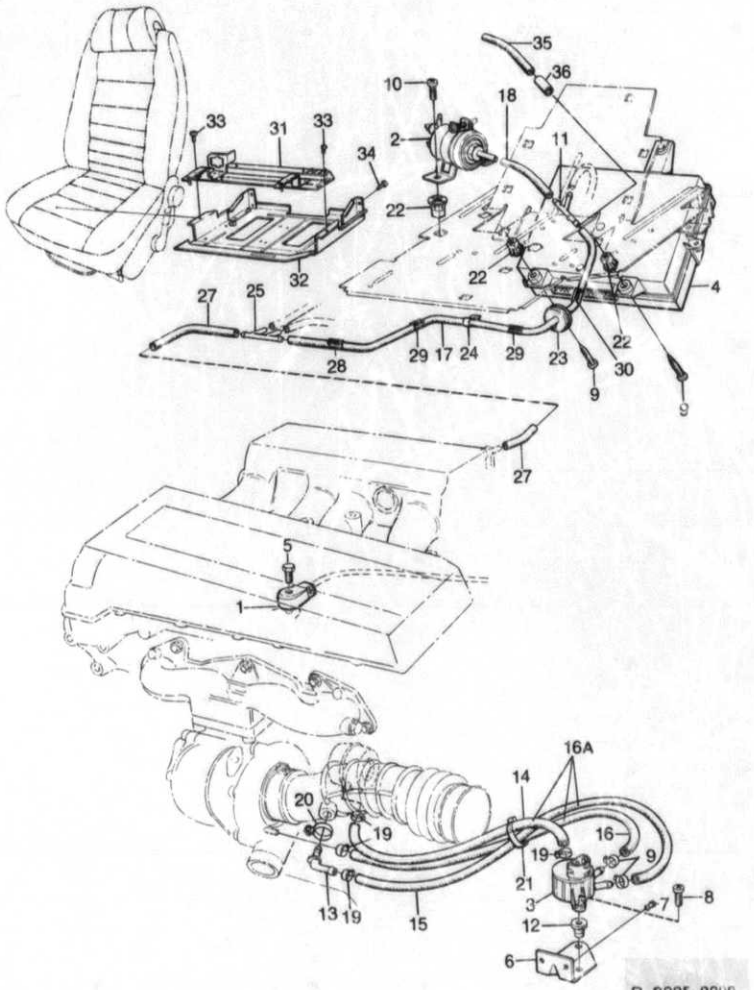

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 58 037*		-1986,226) NLS - USE 7568801, 8125197	1	Knock sensor	Knacksensor	3
0020	1	75 68 801		1987-	1	Knock sensor	Knacksensor	3
0030	1	75 85 755		DI	1	Knock sensor	Knacksensor	3
0040	2	93 42 064			1	Pressure sensor	Tryckgivare	3
0050	3	75 17 477		-1988	1	Solenoid valve	Magnetventil	3
0060	3	75 17 477		500), 1989-	1	Solenoid valve	Magnetventil	3
0070	3	74 85 576		500), 1989-, DI	1	Solenoid valve	Magnetventil	3
0080	4	75 21 818		2,84)	1	Electronic unit	Elektroenhet	3
0090	4	*75 23 970*		3,84), -1985 NLS	1	Control device	Styrdon	3
0100	4	75 24 143		1986-1988,84)	1	Control device	Styrdon	3
0110	4	75 24 150		1986-1988,85)	1	Control device	Styrdon	3
0120	4	75 24 150		500), 1989-	1	Control device	Styrdon	3
0130	4	75 85 771		1988,84), DI	1	Electronic unit	Elektroenhet	3
0140	4	74 83 522		1988,85), DI	1	Electronic unit	Elektroenhet	3
0150	5	75 62 168		-1986	1	Screw	Skruv	5
0160	5	81 25 197		1987-	1	Screw	Skruv	5
0170	6	93 88 620		-1988	1	Bracket	Konsol	5
0180	6	93 88 620		1989-	1	Bracket	Konsol	5
0190	6	89 78 678		1989-, DI	1	Bracket	Konsol	5
0200	7	*79 72 045*		NLS - USE 7961659	2	Rivet	Nit	5
0210	8	80 59 412		-1988	2	Screw	Skruv	5
0220	8	80 59 420		500), 1989-	2	Screw	Skruv	5
0230	9	79 22 362		-1987	2	Screw	Skruv	5
0240	10	79 22 026			2	Screw	Skruv	5
0250	10	79 77 861		85), 1989-, US, CA	2	Screw	Skruv	5
0260	11	85 09 002			1	Tube	Rör	2
0270	12	79 73 456			2	Expanding nut	Expandermutter	5
0280	13	93 88 539		-1987	1	Nipple	Nippel	3
0290	13	*93 42 270*		1988- NLS - USE 4160263	1	Nipple	Nippel	3
0300	14	93 88 752		65)	1	Hose	Slang	3
0310	15	93 88 604		65)	1	Hose	Slang	3
0320	16	93 88 612		65)	1	Hose	Slang	3
0330	16A	93 92 283		66), -1988	1	Hose	Slang	3
0340	16A	89 81 698		85), 1989-, US, CA	1	Hose	Slang	3
0350	16A	89 78 637		1989-, DI	1	Hose	Slang	3
0360	17	91 36 243		L=790 MM	1	Vaccum hose	Vakuumslang	5
0370	17	91 36 243		85), 1989-, US, CA, L=850 MM	1	Vaccum hose	Vakuumslang	5
0380								
0390	18	91 36 243		L=70 MM	1	Vaccum hose	Vakuumslang	5
0400	18	91 36 243		85), 1989-, US, CA L=140 MM	1	Vaccum hose	Vakuumslang	5
0410								
0420	19	79 73 522			6	Hose clamp	Slangklamma	5
0430	20	79 75 618		-1987	1	Hose clamp	Slangklamma	5
0440	20	*79 74 009*		1988- NLS	1	Hose clamp	Slangklamma	5
0450	21	79 71 864			1	Tensioning band	Spännband	5
0460	22	79 75 261		-1987	4	Nut	Mutter	5
0470	23	73 98 712			1	Grommet	Genomföring	5
0480	24	79 77 176			1	Clip	Clips	5
0490	25	85 10 091			1	Manifold	Grenrör	2
0500	25	85 09 002		85), 1989-, US, CA	1	Tube	Rör	2
0510	27	91 36 243		L=310 MM	1	Vaccum hose	Vakuumslang	5
0520	27	91 36 243		85), 1989-, US, CA, L=650 MM	1	Vaccum hose	Vakuumslang	5
0530								
0540	28	71 55 500		RHD	1	Clamp	Klammer	5

2. Ch. -F4001071.
3. Ch. F4001072-
65. Ch. -H1030373
66. Ch H1030374-
84. Without catalytic converter. Utan katalytisk reaktor.
85. With catalytic converter. Med katalytisk reaktor.
226. Superseded by 7568801 and 8125197. Ersatt av 7568801 och 8125197.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G16

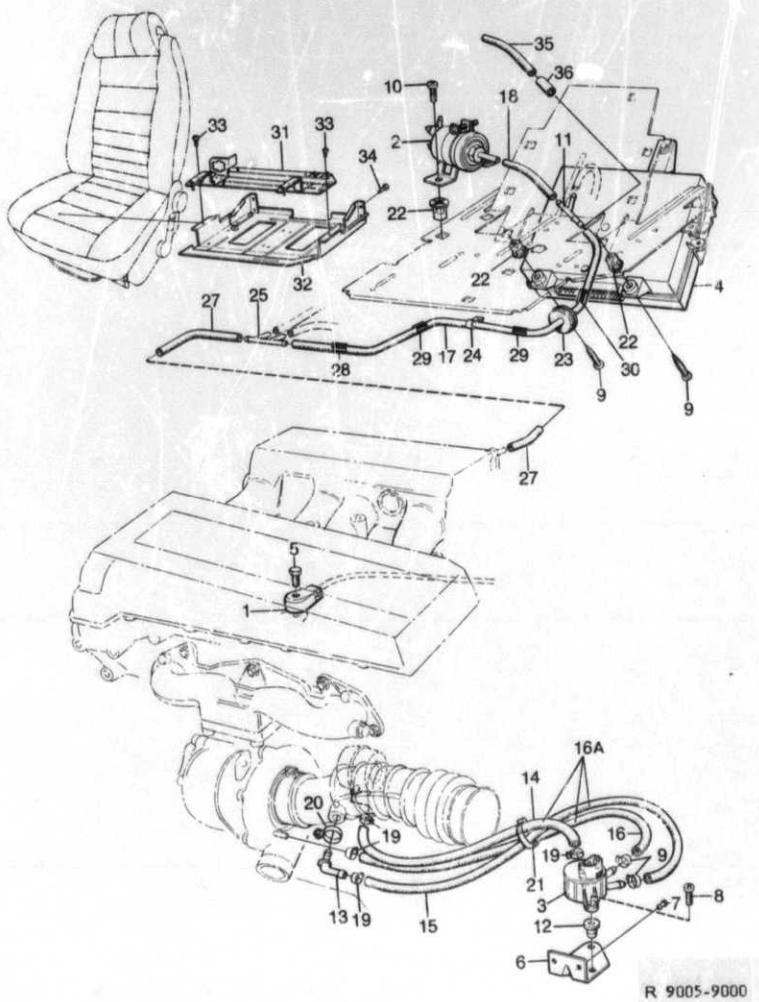

R 9005-9000

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	29	79 33 443		200), RHD	2	Clip	Clips	5
0560	29	89 80 401		201), RHD	2	Clamp	Klammer	5
0570	30	71 21 239		RHD	1	Clamp	Klammer	5
0580	31	93 94 347		1988	1	Bracket	Fäste	5
0590	31	89 78 769		1989-	1	Bracket	Fäste	5
0600	32	93 94 339		1988	1	Plate	Platta	5
0610	32	89 77 142		1989-	1	Plate	Platta	5
0620	33	79 22 347		1988-	2	Screw	Skruv	5
0630	34	*79 72 953*		1988 NLS - USE 7922370, 8029944	2	Screw	Skruv	5
0640	34	79 75 576		1989-	2	Nut	Mutter	5
0650	35	91 36 243		RHD, L=850 MM	1	Vaccum hose	Vakuumslang	5
0650	36	85 08 848		RHD	1	Junction pipe	Skarvrör	5
0670								
0680		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

200. Ch. -K1007254.
201. Ch. K1007255-.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX


Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

Complete sets
1-G18 Engine


Satser
Motor

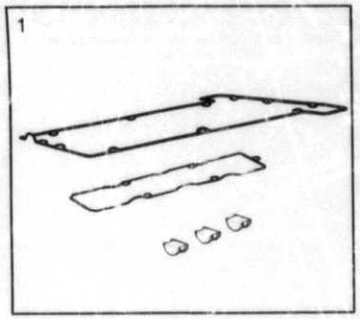


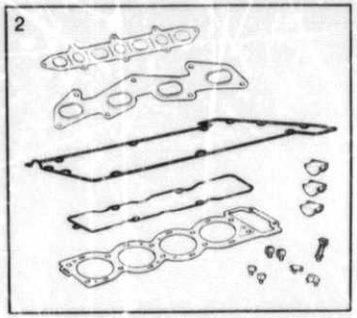

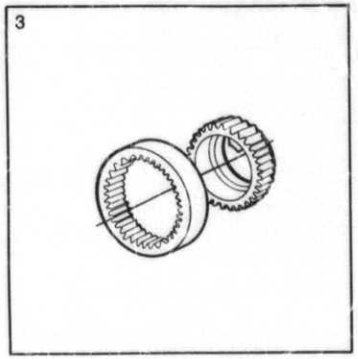



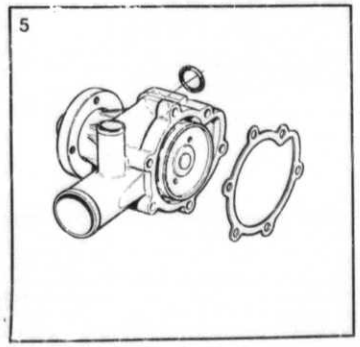

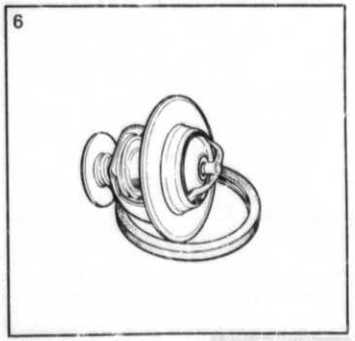

R 8615 - 9000

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 512		16), VALVE COVER	X	Gasket kit	Packningssats	1
0020		75 20 380			1	.Gasket	.Packning	
0030		93 59 647			1	.Gasket	.Packning	1
0040		75 00 069			3	.Plug	.Plugg	2
0050								
0060	1	*88 18 254*		17), VALVE COVER NLS - USE 8822041	X	Gasket kit	Packningssats	1
0070		*75 88 056*		NLS - USE 9133026	1	.Gasket	.Packning	1
0080		75 23 962			1	.Gasket	.Packning	1
0090		75 00 069			3	.Plug	.Plugg	2
0100								
0110	2	88 18 007		16), DECARBONIZATION	X	Gasket kit	Sotningssats	2
0120		75 18 996			1	.Gasket	.Packning	2
0130		88 17 512			1	.Gasket kit	.Packningsats	1
0140		*75 85 045*		NLS - USE 9169079	1	.Gasket	.Packning	2
0150		75 15 190			1	.Bushing	.Bussning	5
0160		74 80 429			6	.Nipple	.Nippel	3
0170		74 80 437			2	.Nipple	.Nippel	3
0180		74 80 445			1	.Nipple	.Nippel	3
0190		74 80 452			1	.Nipple	.Nippel	3
0200		74 80 460			1	.Nipple	.Nippel	3
0210		75 84 436			1	.Gasket	.Packning	2
0220								
0230	2	88 19 823		17,103), DECARBONIZATION	X	Gasket kit	Sotningssats	2
0240		75 18 996			1	.Gasket	.Packning	2
0250		*88 18 254*		NLS - USE 8822041	1	.Gasket kit	.Packningsats	1
0260		75 84 436			1	.Gasket	.Packning	2
0270		74 80 429			6	.Nipple	.Nippel	3
0280		74 80 437			2	.Nipple	.Nippel	3
0290		74 80 445			1	.Nipple	.Nippel	3
0300		74 80 452			1	.Nipple	.Nippel	3
0310		*74 84 405*		NLS - USE 9169079	1	.Gasket	.Packning	2
0320		75 15 190			1	.Bushing	.Bussning	5
0330								
0340	2	88 19 831		104), DECARBONIZATION	X	Gasket kit	Sotningssats	2
0350		75 18 996			1	.Gask	.Packning	2
0360		*88 18 254*		NLS - USE 8822041	1	.Gask	.Packningsats	1
0370		75 84 436			1	.Gasket	.Packning	2
0380		*75 85 045*		NLS - USE 9169079	1	.Gasket	.Packning	2
0390								
0400	3	*88 17 561*		NLS - USE 9321779	X	Pump kit	Pumpsats	5
0410		75 15 588			1	.Pump rotor	.Pumphjul	5
0420		*75 15 596*		NLS - USE 9127366	1	.Pump rotor	.Pumphjul	5
0430								
0440	4	88 17 696		TURBO	X	Service kit	Servicesats	1
0450		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0460		87 18 439			1	.Gasket	.Packning	3
0470		75 22 709			1	.Gasket	.Packning	1
0480		*75 68 900*		NLS - USE 8819302	1	.Spark plug kit	.Tändstiftsats	1
0490								
0500	4	88 19 138		TURBO WITH DI	X	Service kit	Servicesats	1
0510		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0520		87 18 439			1	.Gasket	.Packning	3
0530		91 12 541			4	.Spark plug	.Tändstift	1
0540								
0550	4	*88 18 544*		-1988, I NLS - USE 8819864	X	Service kit	Servicesats	1
0560		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1

1. Not as separate spare part. Ej som separat reservdel.
16. Engine -G52494.
17. Engine G52495-.
103. Engine -J082585.
104. Engine J082586-.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX


Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-G20


Engine
Motor

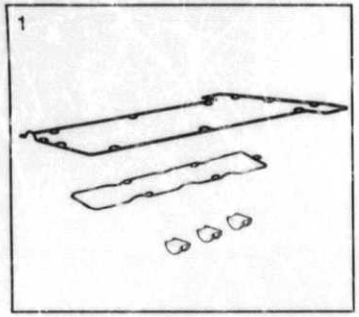


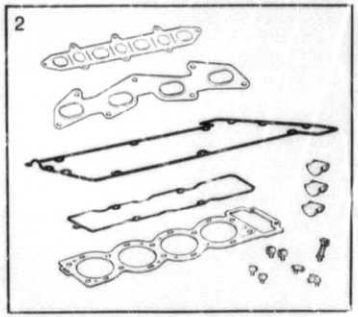

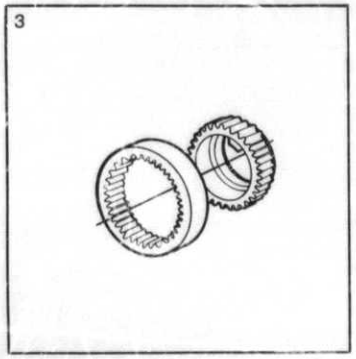



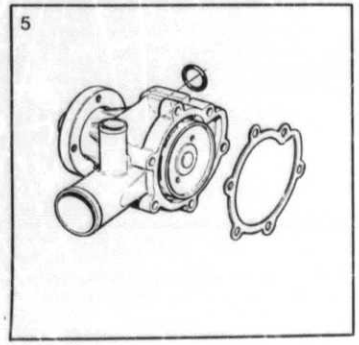

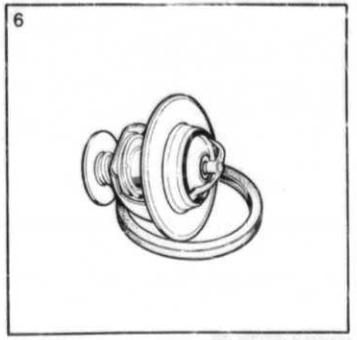

R 8615 - 9000

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Antal	Description	Benämning	S L
0570		75 22 709			1	.Gasket	.Packning	1
0580		88 19 294			4	.Spark plug	.Tändstift	1
0590								
0600	4	88 19 864		1989->	X	Service kit	Servicesats	1
0610		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	*
0620		87 18 439			1	.Gasket	.Packning	1
0630		91 16 385			1	.Spark plug	.Tändstift	1
0640								
0650	5	*88 17 918*		7) NLS - USE 9321670	X	Coolant pump	Kylvätskepump	2
0660		*75 67 951*		1) NLS - USE 9148255	1	.Coolant pump	.Kylvätskepump	2
0670		75 56 581			1	.Gasket	.Packning	2
0680		79 72 698			1	.O-ring	.O-ring	2
0690								
0700	6	*88 17 298*		89° C NLS - USE 6822025	X	Thermostat kit	Termostatsats	1
0710		*75 05 241*		1) NLS - USE 9166687	1	.Thermostat	.Termostat	1
0720		83 52 692			1	.Gasket	.Packning	2
0730								
0740	6	88 17 538		82° C	X	Thermostat kit	Termostatsats	1
0750		75 17 345		1)	1	.Thermostat	.Termostat	1
0760		83 52 692			1	.Gasket	.Packning	2

1. Not as separate spare part. Ej som separat reservdel.
7. Ch.G1003174-


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-E06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1 G22

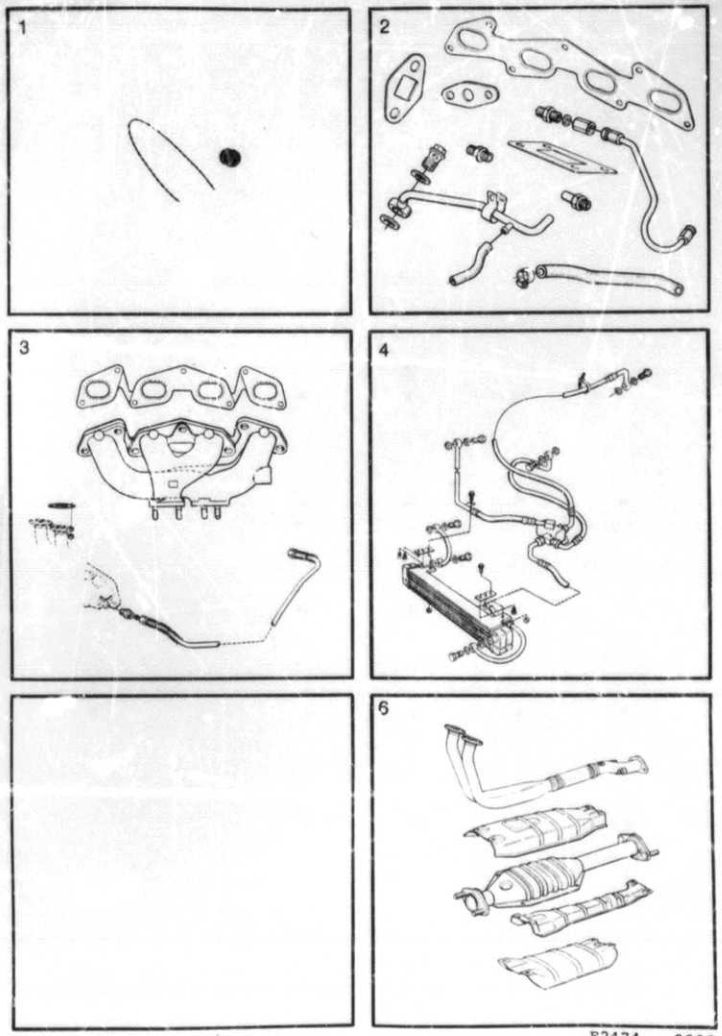

F2474 - 9000

	Fig.	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2550								
0010	1	93 01 706		-1986	X	Sealing	Plombering	2
0020		*93 01 722*		1) NLS - USE 9168352	1	.Wire	.Tråd	2
0030		93 01 714		1)	1	.Seal	.Plomb	2
0040		93 50 505			1	.E-circlip	.Spårryttare	2
0050								
0060	1	88 18 569		1987-	X	Sealing kit	Plomberingssats	2
0070		81 17 020		1)	1	.Sealing wire	.PlomberingstrÅd	2
0080		81 17 038		1)	1	.Seal	.Plomb	2
0090								
0100	2	88 18 973		1985-1986	X	Mounting kit	Monteringssats	5
0110				WATER COOLED TURBO				
0120		75 18 970			1	.Gasket	.Packning	4
0130		75 18 996			1	.Gasket	.Packning	2
0140		75 07 700			1	.Gasket	.Packning	4
0150		75 67 514			1	.Hose	.Slang	5
0160		75 88 098			1	.Nipple	.Nippel	5
0170		75 82 299			1	.Tube	.Rör	5
0180		91 16 369			1	.Tube	.Rör	5
0190		91 16 765			1	.Hose	.Slang	4
0200		75 83 461			1	.Clamp	.Klammer	5
0210		75 83 628			1	.Screw	.Skruv	5
0220		75 84 790			1	.Nipple	.Nippel	5
0230		75 87 785			1	.Nipple	.Nippel	3
0240		79 63 515			2	.Hose clamp	.Slangklamma	5
0250		81 24 141			2	.Seal	.Tätning	5
0260		81 24 158			3	.Gasket	.Packning	2
0270		81 32 227			2	.Ferrule	.Skärring	5
0280		81 45 542			2	.Nut	.Mutter	5
0290		83 59 275			2	.Hose clamp	.Slangklamma	5
0300		83 66 262			1	.Gasket	.Packning	2
0310		75 19 432			3	.Nut	.Mutter	5
0320		75 20 224			3	.Stud	.Pinnskruv	5
0330		75 21 321			4	.Nut	.Mutter	5
0340		*93 06 820*		NLS - USE 9169277	7	.Nut	.Mutter	3
0350				75/662189	1	.Assembly instruction	.Monteringsanvisning	
0360				75/662288	1	.Assembly instruction	.Monteringsanvisning	
0370								
0380	3	74 78 027		1986, I	X	Exhaust manifold	Avgassamlare	3
0390		75 20 042			1	.Protection	.Skydd	6
0400		75 18 996			1	.Gasket	.Packning	2
0410		75 83 792		(7562499)	1	.Exhaust manifold	.Avgassamlare	3
0420		75 62 531			1	.Exhaust manifold	.Avgassamlare	3
0430		75 69 916			1	.EGR-pipe	.EGR-rör	6
0440		*79 67 870*		NLS - USE 7979503	4	.Nut	.Mutter	5
0450		81 31 989			1	.Nipple	.Nippel	5
0460		81 32 235			2	.Ferrule	.Skärring	5
0470		81 45 559			2	.Nut	.Mutter	5
0480		93 68 572			2	.Gasket	.Packning	1
0490		75 24 069			4	.Tube	.Rör	6
0500		83 60 943			4	.Stud screw	.Pinnbult	5
0510		83 57 451			4	.Ferrule	.Skärring	5
0520								
0530	4	75 54 538		69), TURBO, A	X	Oil cooler kit	Oljekylarsats	4
0540		75 98 311			1	.Oil cooler	.Oljekylare	4
0550		75 59 537			1	.Hydraulic hose	.Hydraulslang	4
0560		75 70 757			2	.Bracket	.Konsol	5
0570		*75 73 744*		NLS - USE 4029286	1	.Hydraulic hose	.Hydraulslang	3
0580		79 77 580			1	..O-ring	..O-ring	2
0590		75 73 751			1	.Hydraulic hose	.Hydraulslang	3
0600		79 77 580			1	..O-ring	..O-ring	2

1. Not as separate spare part. Ej som separat reservdel.
69. Ch. H1004072-

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18


Complete sets
1-G24
Engine

Satser
Motor

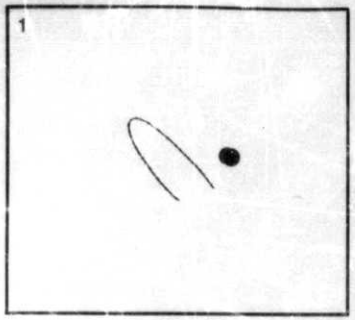


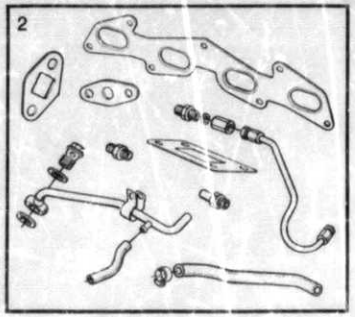



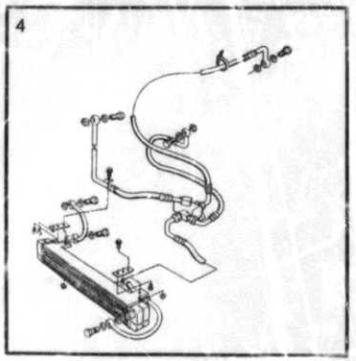



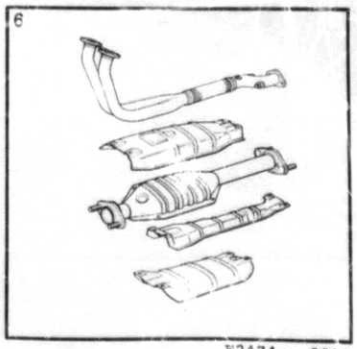

F2474 - 9000

2550	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610		75 73 769			1	.Hydraulic hose	.Hydraulslang	3
0620		79 77 580			1	..O-ring	..O-ring	2
0630		75 73 777			1	.Thermostat	.Termostat	3
0640		75 77 356			1	.Hydraulic hose	.Hydraulslang	3
0650		79 77 580			1	..O-ring	..O-ring	2
0660		75 93 221			1	.Tensioning band	.Spännband	5
0670		79 65 544			2	.Screw	.Skruv	5
0680		79 71 658			2	.Nut	.Mutter	5
0690		73 99 603			2	.Screw	.Skruv	5
0700		80 56 004			2	.Screw	.Skruv	5
0710		89 81 961			12	.Seal	.Tätning	5
0720		*93 01 532*		NLS - USE 4374211	6	.Banjo screw	.Banjoskruv	5
0730								
0740	4	75 54 546		69), I, A	X	Oil cooler kit	Oljekylarsats	4
0750		75 98 311			1	.Oil cooler	.Oljekylare	4
0760		75 70 757			2	.Bracket	.Konsol	5
0770		75 70 823			1	.Hydraulic hose	.Hydraulslang	4
0780		*75 73 744*		NLS - USE 4029286	1	.Hydraulic hose	.Hydraulslang	3
0790		79 77 580			1	..O-ring	..O-ring	2
0800		75 73 751			1	.Hydraulic hose	.Hydraulslang	3
0810		79 77 580			1	..O-ring	..O-ring	2
0820		75 73 769			1	.Hydraulic hose	.Hydraulslang	3
0830		79 77 580			1	..O-ring	..O-ring	2
0840		75 73 777			1	.Thermostat	.Termostat	3
0850		75 77 364			1	.Hydraulic hose	.Hydraulslang	3
0860		79 77 580			1	..O-ring	..O-ring	2
0870		75 93 221			1	.Tensioning band	.Spännband	5
0880		79 65 544			2	.Screw	.Skruv	5
0890		79 71 658			2	.Nut	.Mutter	5
0900		73 99 603			2	.Screw	.Skruv	5
0910		80 56 004			2	.Screw	.Skruv	5
0920		89 81 961			12	.Seal	.Tätning	5
0930		*93 01 532*		NLS - USE 4374211	6	.Banjo screw	.Banjoskruv	5
0940								
0950	6	88 19 260		1985-1988, TURBO	X	Catalytic converter kit	Katalysatorsats	4
0960		75 28 953			8	.Screw	.Skruv	5
0970		40 23 636		FOR FUEL TANK LID "UNLEADED FUEL ONLY" "ESSENCE SANS PLOMB SEULEMENT" "ENDAST BLYFRI BENSIN"	1	.Label	.Etikett	4
0980								
0990								
1000								
1010								
1020		79 70 437			2	.Cage nut	.Korgmutter	5
1030		79 77 374			4	.Cage nut	.Korgmutter	5
1040		82 62 058			2	.Screw	.Skruv	5
1050		89 82 191			1	.Filler pipe	.Påfyllningsrör	5
1060		*89 82 209*		NLS - USE 4391058	1	.Filler cap	.Tanklock	2
1070		93 92 457			1	.TW catalytic converter	.Katalysator	4
1080		93 93 968			10	.Rivet	.Nit	5
1090		40 22 588		FRONT PART I	1	.Heat shield	.Värmesköld	3
1100		40 22 596		FRONT PART II	1	.Heat shield	.Värmesköld	3
1110		40 22 612		REAR	1	.Shield	.Sköld	3
1120		96 77 048		FOR INSTRUMENT PANEL "ENDAST BLYFRI BENSIN"	1	.Text plate	.Textskylt	5
1130								
1140		96 59 764		FOR INSTRUMENT PANEL "UNLEADED FUEL ONLY"	1	.Text plate	.Textskylt	5
1150								
1160		93 90 600			1	.Exhaust pipe	.Avgasrör	2
1170		93 10 004			1	.Plug	.Propp	5
1180								
1190	6	88 19 963		214), 1986-1988, I	X	Catalytic converter kit	Katalysatorsats	4
1200		40 22 588		FRONT PART I	1	.Heat shield	.Värmesköld	3

69. Ch. H1004072-.
214. For M1986 cars with sheet steel exhaust manifold it is requiredthat exhaust manifold kit 7478027 is mounted. För M1986 bilar med plåtavgassamlare krävs att avgassamlarsats 7478027 monteras.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Chassis	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-D14
Inlet and exhaust system	1-D2[illegible]
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-H02

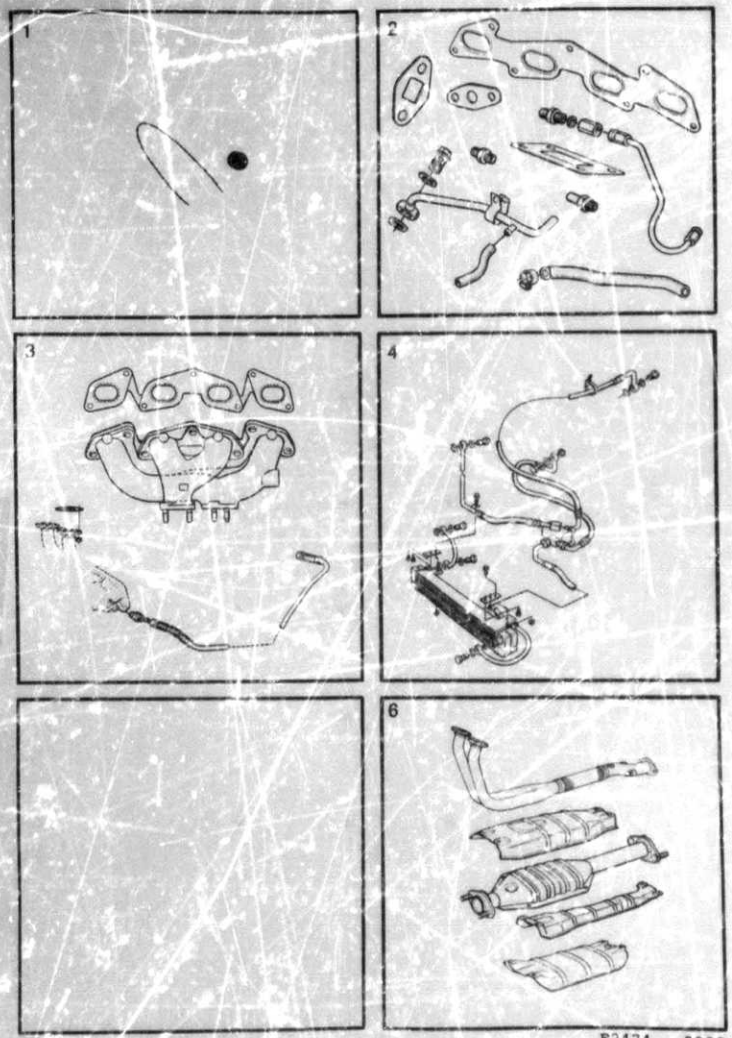

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1210		40 22 596		FRONT PART II	1	. Heat shield	. Värmesköld	3
1220		40 22 612		REAR I	1	. Shield	. Sköld	3
1230		40 23 636		FOR FUEL TANK LID	1	. Label	. Etikett	4
1240				"UNLEADED FUEL ONLY"				
1250				" ESSENCE SANS PLOMB SEULEMENT"				
1260				"ENDAST BLYFRI BENSIN"				
1270								
1280		75 28 953			8	. Screw	. Skruv	5
1290		79 70 437			2	. Cage nut	. Korgmutter	5
1300		79 77 374			4	. Cage nut	. Korgmutter	5
1310		82 62 968			2	. Screw	. Skruv	5
1320		88 82 191			1	. Filler pipe	. Påfyllningsrör	5
1330		*88 82 209*		NI S - USE 4391058	1	. Filler cap	. Tanklock	2
1340		93 10 004			1	. Plug	. Propp	5
1350		93 92 457			1	. TW catalytic converter	. Katalysator	4
1360		93 93 455			1	. Exhaust pipe	. Avgasrör	2
1370		93 93 968			10	. Rivet	. Nit	8
1380		96 59 764		FOR INSTRUMENT PANEL "UNLEADED FUEL ONLY"	1	. Text plate	. Textskylt	5
1390								
1400		96 77 048		FOR INSTRUMENT PANEL "ENDAST BLYFRI BENSIN"	1	. Text plate	. Textskylt	5
1410								
1420		83 41 257			4	. Ball	. Kula	5
1430		83 57 444			4	. Nut	. Mutter	5
1440		93 00 625			1	. Plug	. Plugg	5


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-H04

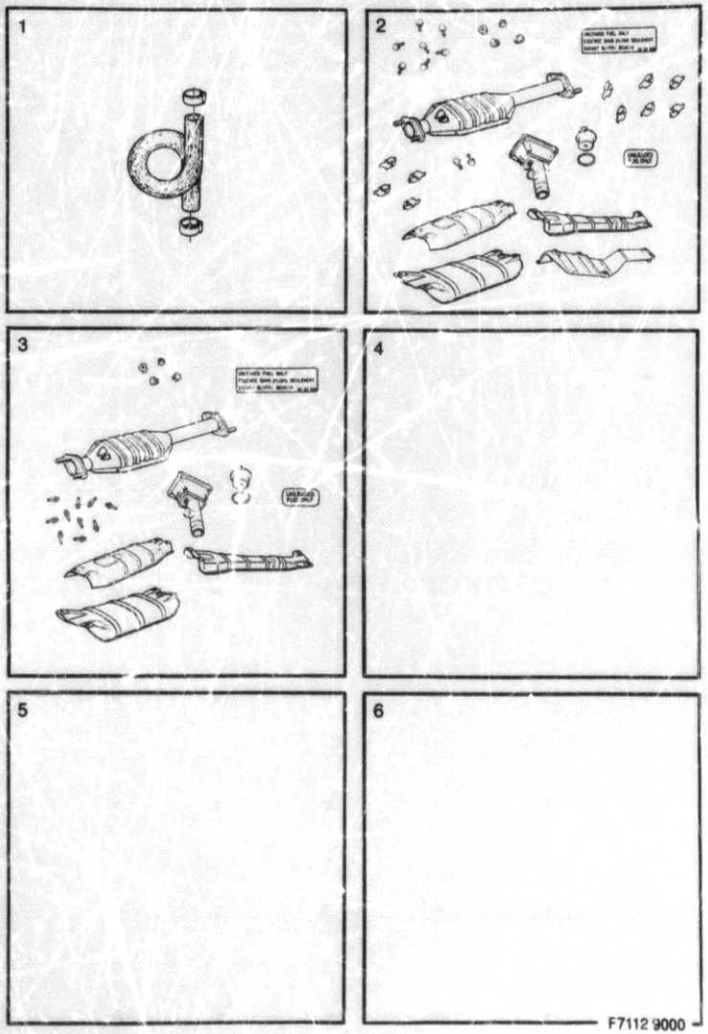

2600	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	40 20 848		73,136)	X	Hose kit	Slangsats	5
0020		40 19 998			1	.Hose	.Slang	5
0030		79 68 308			2	.Hose clamp	.Slangklamma	5
0040								
0050	2	• *43 93 807*		-1986, I, IT NLS	X	Catalytic converter kit	Katalysatorsats	4
0060		40 23 636			1	.Label	.Etikett	4
0070		• 44 40 020			1	.TW catalytic converter	.Katalysator	4
0080		75 28 953			5	.Screw	.Skruv	5
0090		79 67 953			4	.Nut	.Mutter	5
0100		79 70 437			3	.Cage nut	.Korgmutter	5
0110		79 77 374			4	.Cage nut	.Korgmutter	5
0120		82 62 958			2	.Screw	.Skruv	5
0130		89 82 191			1	.Filler pipe	.Påfyllningsrör	5
0140		*89 82 209*		NLS - USE 4391058	1	.Filler cap	.Tanklock	2
0150		40 22 588			1	.Heat shield	.Värmesköld	3
0160		40 22 612			1	.Shield	.Sköld	3
0170		40 22 596			1	.Heat shield	.Värmesköld	3
0180		93 93 968			10	.Rivet	.Nit	5
0190		96 59 764			1	.Text plate	.Textskylt	5
0200		• 93 21 928			1	.Assembly instruction	.Monteringsanvisning	9
0210								
0220	2	• *43 93 823*		-1986, TURBO, IT NLS	X	Catalytic converter kit	Katalysatorsats	4
0230		40 23 636			1	.Label	.Etikett	4
0240		75 28 953			8	.Screw	.Skruv	5
0250		79 67 953			4	.Nut	.Mutter	5
0260		79 70 437			4	.Cage nut	.Korgmutter	5
0270		79 77 374			4	.Cage nut	.Korgmutter	5
0280		82 62 958			2	.Screw	.Skruv	5
0290		89 82 191			1	.Filler pipe	.Påfyllningsrör	5
0300		*89 82 209*		NLS - USE 4391058	1	.Filler cap	.Tanklock	2
0310		*93 86 244*		NLS - USE 4022588	1	.Shield	.Sköld	3
0320		93 86 251			1	.Shield	.Sköld	3
0330		93 92 457			1	.TW catalytic converter	.Katalysator	4
0340		93 92 473			1	.Heat shield	.Värmesköld	3
0350		96 59 764			1	.Text plate	.Textskylt	5
0360								
0370	3	• *43 93 807*		1987-, I, IT NLS	X	Catalytic converter kit	Katalysatorsats	4
0380		40 23 636			1	.Label	.Etikett	4
0390		• 44 40 020			1	.TW catalytic converter	.Katalysator	4
0400		40 22 588			1	.Heat shield	.Värmesköld	3
0410		40 22 596			1	.Heat shield	.Värmesköld	3
0420		40 22 612			1	.Shield	.Sköld	3
0430		79 67 953			4	.Nut	.Mutter	5
0440		89 82 191			1	.Filler pipe	.Påfyllningsrör	5
0450		*89 82 209*		NLS - USE 4391058	1	.Filler cap	.Tanklock	2
0460		93 93 968			10	.Rivet	.Nit	5
0470		96 59 764			1	.Text plate	.Textskylt	5
0480		75 28 953			5	.Screw	.Skruv	5
0490		79 70 437			3	.Cage nut	.Korgmutter	5
0500		79 77 374			4	.Cage nut	.Korgmutter	5
0510		82 62 958			2	.Screw	.Skruv	5
0520		• 93 21 928			1	.Assembly instruction	.Monteringsanvisning	9
0530								
0540	3	• *43 93 831*		1987-, TURBO, IT NLS	X	Catalytic converter kit	Katalysatorsats	4
0550		40 23 636			1	.Label	.Etikett	4
0560		93 92 457			1	.TW catalytic converter	.Katalysator	4
0570		40 22 588			1	.Heat shield	.Värmesköld	3
0580		40 22 596			1	.Heat shield	.Värmesköld	3
0590		79 67 953			4	.Nut	.Mutter	5

73. Ch. J1006799-, J2003029-, J8000558-, I WITHOUT CATALYTIC CONVERTER. Ch. J1u06799-, J2003029-, J8000558-, I UTAN KATALYTISK REAKTOR.
136. Ch. J1026230-, J2015406-, J8001594-, I WITH CATALYTIC CONVERTER. Ch. J1026230-, J2015406-, J9001594-, I MED KATALYTISK REAKTOR.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C04
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

1-H06

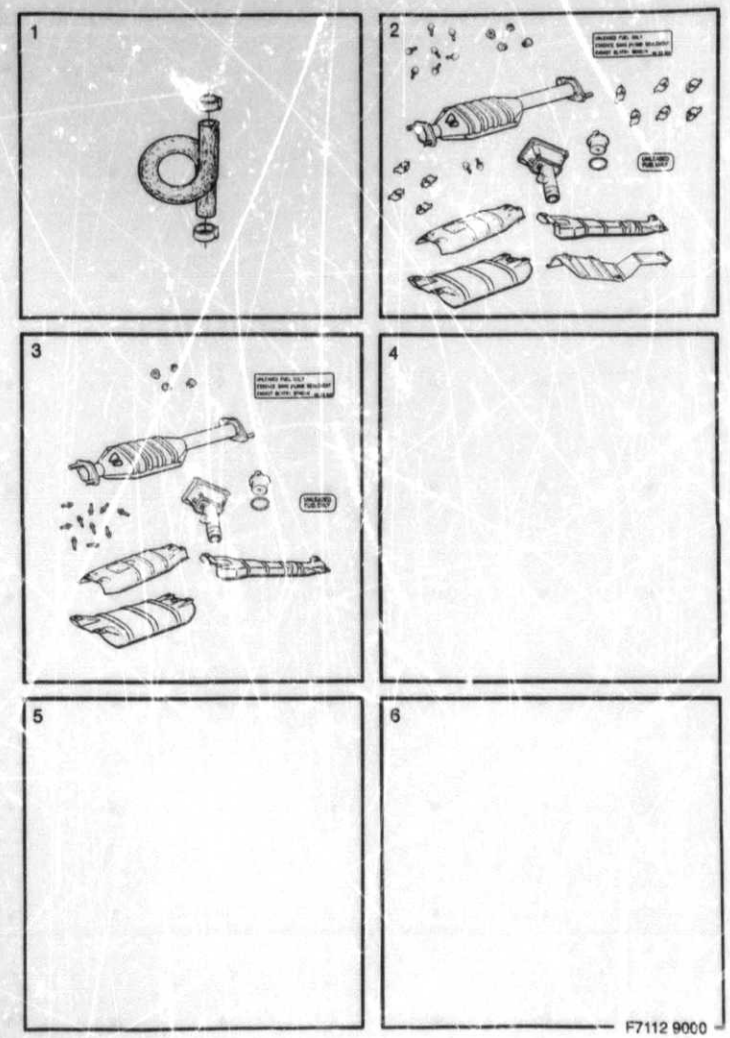

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0F00		89 82 191		.....	1	. Filler pipe	. Påfyllningsrör	5
0610		*89 82 209*		NLS - USE 4391058	1	. Filler cap	. Tanklock	2
0620		• 93 21 928		.....	1	. Assembly instruction	. Monteringsanvisning	9

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

2 GROUP INDEX

Engine body	1-B06
Lubrication system	1-C02
Fuel system	1-C14
Inlet and exhaust system	1-D22
Cooling system	1-F10
Engine control	1-G08
Supercharging system	1-G10
Kits	1-G18

2-A02

3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370
0380
0390
0400
0410
0420
0430
0440
0450
0460
0470
0480
0490
0500
0510
0520
0530
0540
0550
0560
0570
0580
0590
0600
0610
0620
0630
0640
0650
0660

TABLE OF CONTENTS

Battery		
Battery	3A : 5	2-A06
Alternator		
Alternator, Bosch 70A	3A : 7	2-A08
Alternator, Bosch 80A	3A : 9	2-A10
Alternator, Bosch 115A	3A : 11	2-A12
Starter		
Starter 1985	3A : 13	2-A14
Starter 1986-	3A : 15	2-A16
Ignition system		
Ignition coil, cables, spark plugs etc	3A : 17	2-A18
Distributor Bosch Turbo 1985	3A : 21	2-A22
Distributor Bosch Turbo 1986-	3A : 23	2-A24
Distributor Bosch I 1986-	3A : 25	2-B02
SAAB DI	3A : 27	2-B04
Lighting		
Headlights	3A : 29	2-B06
Lamp cluster	3A : 37	2-B14
Fog light 4D	3A : 41	2-B18
Tail light, license plate light	3A : 43	2-B20
Stop light, high mounted	3A : 49	2-C02
Other lights	3A : 51	2-C04
Electrical equipment, other		
Signal horn	3A : 55	2-C08
Signal button	6 : 9	4-C10
Windshield wipers 1985	3A : 57	2-C10
Windshield wipers 1986-1987	3A : 59	2-C12
Windshield wipers 1988-	3A : 61	2-C14
Headlight wipers	3A : 63	2-C16
Windshield- and headlight washer	3A : 65	2-C18
Central lock	3A : 67	2-C20
Switches	3A : 69	2-C22
Speed control system	3A : 73	2-D02
Operating device	3A : 77	2-D06
AIR-BAG	3A : 81	2-D10
Operating device ACC	3A : 83	2-D12
Radio, motor aerial	3A : 85	2-D14
Loudspeaker	3A : 87	2-D16
Gear upshift system	3A : 91	2-D20
Theft alarm	3A : 93	2-D22
Speed warning system	3A : 95	2-D24
Electrical system, ABS	3A : 97	2-E02
Wiring and fuses		
Wiring, 1985	3A : 99	2-E04
Wiring, 1986	3A : 107	2-E12
Wiring, 1987	3A : 115	2-E20
Wiring, 1988	3A : 123	2-F04
Wiring, 1989	3A : 131	2-F12
Bushing, clamps	3A : 139	2-F20
Mounting kit, body	3A : 145	2-G02
Mounting kit, doors	3A : 147	2-G04
Holders and brackets -1987	3A : 149	2-G06
Holders and brackets 1988-	3A : 151	2-G08
Relays and fuses 1985	3A : 153	2-G10
Relays and fuses 1986	3A : 155	2-G12
Relays and fuses 1987	3A : 157	2-G14
Relays and fuses 1988	3A : 159	2-G16
Relays and fuses 1989	3A : 163	2-G20
Instruments	3A : 167	2-G24
Complete sets		
Electrical system	3A : 173	2-H06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A03

INNEHÅLLSFÖRTECKNING

Batteri		
Batteri	3A : 5	2-A06
Generator		
Generator, Bosch 70A	3A : 7	2-A08
Generator, Bosch 80A	3A : 9	2-A10
Generator, Bosch 115A	3A : 11	2-A12
Startmotor		
Startmotor 1985	3A : 13	2-A14
Startmotor 1986-	3A : 15	2-A16
Tändsystem		
Tändspole, tändkablar, tändstift etc	3A : 17	2-A18
Tändfördelare Bosch Turbo 1985	3A : 21	2-A22
Tändfördelare Bosch Turbo 1986-	3A : 23	2-A24
Tändfördelare Bosch I 1986-	3A : 25	2-B02
SAAB DI	3A : 27	2-B04
Belysning		
Strålkastare	3A : 29	2-B06
Kombinationslykt	3A : 37	2-B14
Dimljus 4D	3A : 41	2-B18
Baklykta, nummerplåtbelysning	3A : 43	2-B20
Stopplykta, högt monterad	3A : 49	2-C02
Övrig belysning	3A : 51	2-C04
Övrig elektrisk utrustning		
Signalhorn	3A : 55	2-C08
Signalkontakt	6 : 9	4-C10
Vindrutetorkare 1985	3A : 57	2-C10
Vindrutetorkare 1986-1987	3A : 59	2-C12
Vindrutetorkare 1988-	3A : 61	2-C14
Strålkastartorkare	3A : 63	2-C16
Vindrute- och strålkastarspolare	3A : 65	2-C18
Centrallås	3A : 67	2-C20
Strömställare	3A : 69	2-C22
Farthållningssystem	3A : 73	2-D02
Manöverdon	3A : 77	2-D06
AIR-BAG	3A : 81	2-D10
Manöverdon ACC	3A : 83	2-D12
Radio, motorantenn	3A : 85	2-D14
Högtalare	3A : 87	2-D16
Växlingsindikering	3A : 91	2-D20
Stöldlarm	3A : 93	2-D22
Fartvarningssystem	3A : 95	2-D24
Elektriskt system, ABS	3A : 97	2-E02
Ledningar och säkringar		
Ledningar 1985	3A : 99	2-E04
Ledningar 1986	3A : 107	2-E12
Ledningar, 1987	3A : 115	2-E20
Ledningar, 1988	3A : 123	2-F04
Ledningar, 1989	3A : 131	2-F12
Bussningar, klammer	3A : 139	2-F20
Monteringsdetaljer, kaross	3A : 145	2-G02
Monteringsdetaljer, dörrar	3A : 147	2-G04
Hållare och konsoler -1987	3A : 149	2-G06
Hållare och konsoler 1988-	3A : 151	2-G08
Reläer och säkringar 1985	3A : 153	2-G10
Reläer och säkringar 1986	3A : 155	2-G12
Reläer och säkringar 1987	3A : 157	2-G14
Reläer och säkringar 1988	3A : 159	2-G16
Reläer och säkringar 1989	3A : 163	2-G20
Instrument	3A : 167	2-G24
Satser		
Elektriskt system	3A : 173	2-H06

2-A04

SUMARIO

Bateria		
Bateria	3A : 5	2-A06
Alternador		
Alternador, Bosch 70A	3A : 7	2-A08
Alternador, Bosch 80A	3A : 9	2-A10
Alternador, Bosch 115A	3A : 11	2-A12
Motor de arranque		
Motor de arranque 1985	3A : 13	2-A14
Motor de arranque 1986-	3A : 15	2-A16
Sistema de encendido		
Bobina, cables, bujias etc	3A : 17	2-A18
Distribuidor, Bosch Turbo 1985	3A : 21	2-A22
Distribuidor, Bosch Turbo 1986-	3A : 23	2-A24
Distribuidor, Bosch I 1986-	3A : 25	2-B02
SAAB DI	3A : 27	2-B04
Alumbrado		
Faros	3A : 29	2-B06
Faro combinado	3A : 37	2-B14
Faros antiniebla 4D	3A : 41	2-B18
Luz de cola, de matricula	3A : 43	2-B20
Lampara de paro montada	3A : 49	2-C02
Otro alumbrado	3A : 51	2-C04
Otro equipo electrico		
Senal acustica	3A : 55	2-C08
Contacto de senal acustica	6 : 9	4-C10
Limpiaparabrisas 1985	3A : 57	2-C10
Limpiaparabrisas 1986-1987	3A : 59	2-C12
Limpiaparabrisas 1988-	3A : 61	2-C14
Limpiacristales de faro	3A : 63	2-C16
Lavaparabrisas y lavacristales de faro	3A : 65	2-C18
Cerradura central	3A : 67	2-C20
Contactos	3A : 69	2-C22
Control de velocidad de crucero	3A : 73	2-D02
Dispositivos de mando	3A : 77	2-D06
AIR-BAG	3A : 81	2-D10
Dispositivos de mando AC	3A : 83	2-D12
Radio, motor de antena	3A : 85	2-D14
Altavoz	3A : 87	2-D16
Indicacion de cambio	3A : 91	2-D20
Alarma antirobo	3A : 93	2-D22
Sistema de advertencia de velocidad	3A : 95	2-D24
Sistema electrico, ABS	3A : 97	2-E02
Conductos y fusibles		
Conductos, 1985	3A : 99	2-E04
Conductos, 1986	3A : 107	2-E12
Conductos, 1987	3A : 115	2-E20
Conductos, 1988	3A : 123	2-F04
Conductos, 1989	3A : 131	2-F12
Manguitos, abrazaderas	3A : 139	2-F20
Equipo de montaje, caroceria	3A : 145	2-G02
Equipo de montaje, puertas	3A : 147	2-G04
Portafusibles y consolas -1987	3A : 149	2-G06
Portafusibles y consolas 1988-	3A : 151	2-G08
Reles, fusibles 1985	3A : 153	2-G10
Reles, fusibles 1986	3A : 155	2-G12
Reles, fusibles 1987	3A : 157	2-G14
Reles, fusibles 1988	3A : 159	2-G16
Reles, fusibles 1989	3A : 163	2-G20
Instrumentos	3A : 167	2-G24
Juegos completos		
Sistema electrico	3A : 173	2-H06


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A06 Battery Batteri

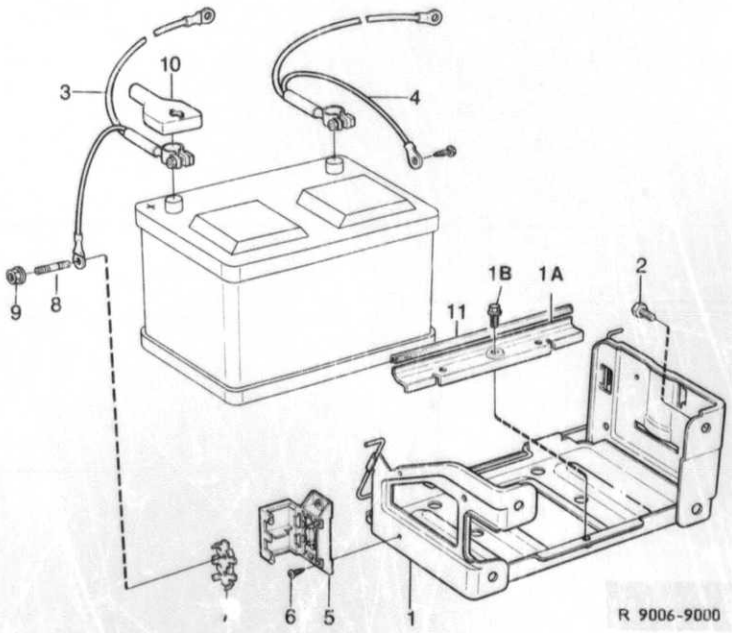

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						Battery	Batteri	
0020						SEE ACCESSORIES CATALOGUE	SE TILLBEHÖRSKATALOG	
0030	1	*95 03 095*		-1985 NLS - USE 4293619	1	Battery shelf	Batterihylla	6
0040	1	*95 15 230*		1986, NLS - USE 4293619	1	Battery shelf	Batterihylla	6
0050	1	95 20 941		1987	1	Battery shelf	Batterihylla	6
0060	1	69 61 288		1988-	1	Battery shelf	Batterihylla	6
0070	1A	95 15 222		1986-	1	▪Brace	▪Bygel	5
0080	1B	79 77 499		1986-	1	▪Screw	▪Skruv	5
0090	2	79 75 451			4	Screw	Skruv	5
0110	3	95 17 384		-1986, (9506478)	1	Cable	Kabel	5
0120	3	95 24 208		1987-, +	1	Cable	Kabel	5
0140	4	95 17 392		1986-, -, (9506486)	1	Cable	Kabel	4
0160	5	*95 03 046*		-1988 NLS - USE 4061891	1	Bracket	Hållare	5
0170	5	40 61 891		500), 1989-	1	Bracket	Hållare	5
0180	6	*79 74 769*		NLS - USE 7922891	2	Screw	Skruv	5
0190	7	95 03 053			1	Casing	Förgreningshus	3
0200	8	80 19 895		-1985	2	Screw	Skruv	5
0210	8	94 46 881		1986-	2	Stud	Pinnskruv	5
0220	9	79 71 658		1986-	2	Nut	Mutter	5
0230	10	95 18 424		1987-	1	Cover	Kåpa	6
0240	11	95 19 737		1988	1	Protecting moulding	Skyddslist	5
0250	11	85 64 973		500), 1989-, (8497471)	1	Protecting moulding	Skyddslist	6


500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

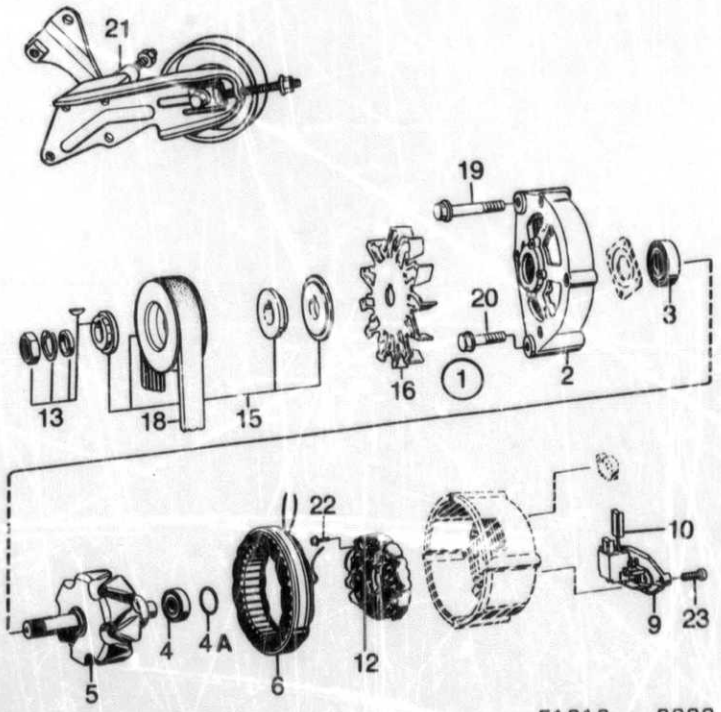

F1919 - 9000

2-A08

Generator
Bosch 70A
1985

Generator
Bosch 70A
1985

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*85 97 924*		700) NLS - USE 9555251	1	Generator	Generator	5
0040	2	85 91 075			1	.Bearing	.Drivlager	6
0060	3	85 90 911			1	.Ball bearing	.Kullager	3
0080	4	85 72 034			1	.Ball bearing	.Kullager	6
0100	4A	85 65 590			1	.O-ring	.O-ring	4
0120	5	85 71 887			1	.Rotor	.Rotor	6
0140	6	85 71 861			1	.Stator	.Stator	6
0180	9	85 90 549			1	.Regulator	.Regulator	2
0200	10	95 15 180		(8572638)	1	..Brush set	..Borstsats	3
0220	12	*85 98 096*		NLS - USE 9555301	1	.Rectifier	.Likriktare	6
0240	13	85 90 994			1	.Part kit	.Delsats	6
0260	15	95 03 715			1	Pulley	Remskiva	5
0280	16	85 87 248			1	Fan disc	Fläktskiva	6
0380	18	75 79 881		(7551674)	1	Belt	Rem	1
0400	19	79 74 108		88)	1	Screw	Skruv	5
0410	19	80 98 378		89)	1	Screw	Skruv	5
0420	20	79 74 777			1	Screw	Skruv	5
0430	21			See page 6-U21, 4-C22		Tension pulley	Spännrulle	
0440	22	95 13 599			2	Screw	Skruv	5
0450	23	85 71 986			2	Screw	Skruv	5

88. Ch -K1006560, -K2002956, -K8000929, SE 1988B: -J1050638, -J2031711.
89. Ch K1006561-, K2002957, K8000930-, SE 1988B: J1050639-, J2031712-.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A10

Generator
Bosch 80A

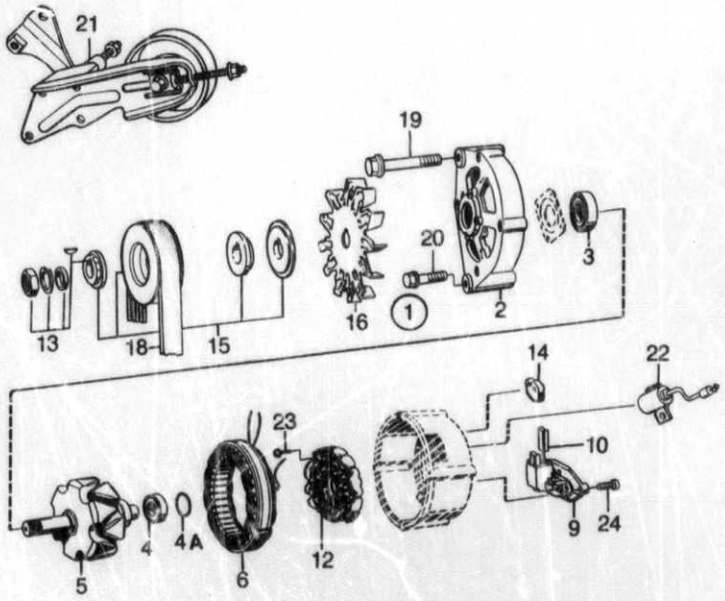

F1920 - 9000

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*95 06 361*		35,700) NLS - USE 9529033	1	Generator	Generator	5
0025	1	95 29 033		36,700)	1	Generator	Generator	5
0035	2	95 13 763		(8590895)	1	.Bearing	.Drivlager	6
0040	3	85 90 911		35)	1	.Ball bearing front	.Kullager främre	3
0045	3	95 13 128		36)	1	.Ball bearing front	.Kullager främre	3
0050	4	85 90 929		35)	1	.Ball bearing rear	.Kullager bakre	6
0055	4	*95 13 185*		36) NLS - USE 9124348	1	.Ball bearing rear	.Kullager bakre	6
0060	4A	85 90 986		35)	1	.O-ring	.O-ring	4
0065	4A	*95 13 193*		36) NLS - USE 9124355	1	.O-ring	.O-ring	4
0070	5	*85 90 903*		35) NLS	1	.Rotor	.Rotor	6
0075	5	95 13 144		36)	1	.Rotor	.Rotor	6
0085	6	95 13 169		(8590887)	1	.Stator	.Stator	6
0090	9	85 90 549			1	.Regulator	.Regulator	2
0105	10	95 15 180		(8572638)	1	..Brush set	..Borstsats	3
0110	12	*85 90 945*		35) NLS - USE 9555293	1	.Rectifier	.Likriktare	6
0115	12	95 13 177		36)	1	.Rectifier	.Likriktare	6
0120	13	85 90 994			1	.Part kit	.Delsats	6
0125	14	85 93 329			1	.Protection	.Skydd	6
0130	15	95 03 715			1	Pulley	Remskiva	5
0140	16	85 87 248			1	Fan disc	Fläktskiva	6
0170	18	75 79 881		90), (7551674)	1	Belt	Rem	1
0172	18	43 56 879		90), ME, ALT.TO 7579881	1	Belt	Rem	1
0175	18	75 96 679		91)	1	Belt	Rem	1
0177	18	43 56 887		91), ME, ALT. TO 7596679	1	Belt	Rem	1
0180	19	79 74 108		88)	1	Screw	Skruv	5
0190	19	80 98 378		89)	1	Screw	Skruv	5
0200	20	79 74 777			1	Screw	Skruv	5
0210	21			See page 6-021, 4-C22		Tension pulley	Spännrulle	
0230	22	95 23 184		13)	1	Capacitor	Kondensator	4
0240	23	95 13 599			3	Screw	Skruv	5
0250	24	85 71 986			2	Screw	Skruv	5

13. Ch H1001187–.
35. Ch –H1010979, –H8000435.
36. Ch H1010980–, H8000436–.
88. Ch –K1006560, –K2002956, –K8000929, SE 1988B: –J1050638, –J2031711.
89. Ch K1006561–, K2002957, K8000930–, SE 1988B: J1050639–, J2031712–.
90. Ch –J1028860, –J2017104, –J8001696.
91. Ch J1028861–, J2017105–, J8001697–.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B00
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A12

Generator
Bosch 115A

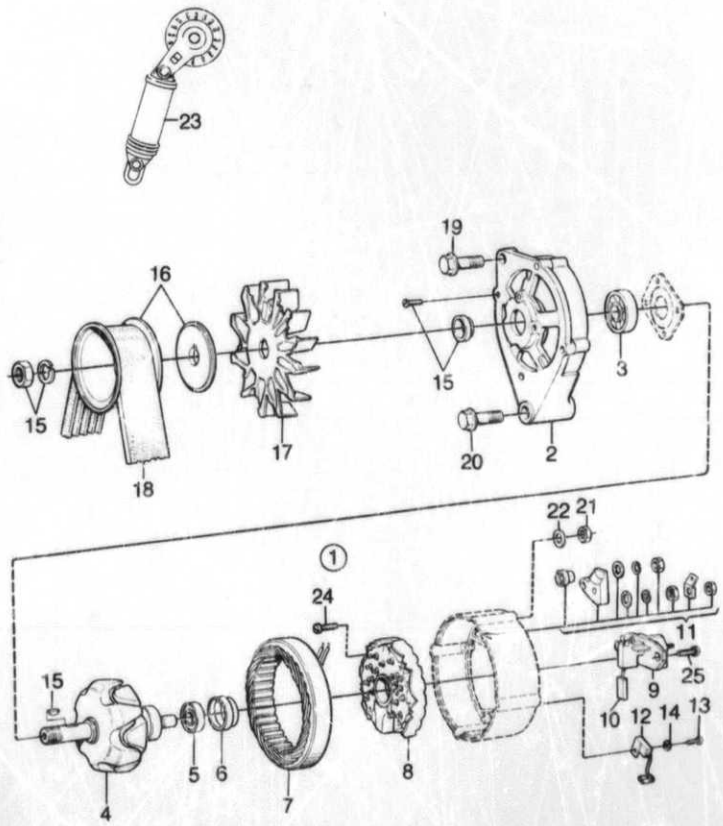

F4068 9000

0190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 65 607		700)	1	Generator	Generator	5
0030	2	91 24 280			1	.Bearing	.Drivlager	6
0040	3	95 13 128			1	.Ball bearing front	.Kullager främre	3
0041								
0045	4	91 24 314			1	Rotor	Rotor	6
0050	5	91 24 348			1	.Ball bearing rear	.Kullager bakre	6
0051								
0060	6	91 24 355			1	.O-ring	.O-ring	4
0080	7	91 24 363			1	.Stator	.Stator	6
0085	8	91 24 371			1	.Rectifier	.Likriktare	6
0090	9	85 90 549			1	.Regulator	.Reguiator	2
0100	10	95 15 180			1	..Brush set	..Borstsats	3
0120	11	91 24 397			1	.Part kit	.Delsats	6
0125	12	95 23 184			1	Capacitor	Kondensator	4
0126	13	91 24 264			1	Screw	Skruv	5
0128	14	91 24 272			1	Washer	Bricka	5
0129	15	85 90 994			1	Part kit	Delsats	6
0130	16	95 03 715			1	Pulley	Remskiva	5
0140	17	85 87 248			1	Fan disc	Fläktskiva	6
0160	18	75 96 679			1	Belt	Rem	1
0170	18	43 56 887		ME, ALT. TO 7596679	1	Belt	Rem	1
0185	19	79 78 745			1	Screw	Skruv	5
0200	20	80 98 378			1	Screw	Skruv	5
0205	21	80 74 106		B+	1	Nut	Mutter	5
0207	22	79 33 849		B+	1	Washer	Bricka	5
0210	23			See page 6-023, 4-C24		Tension pulley	Spännrulle	
0220	24	95 13 599			6	Screw	Skruv	5
0230	25	85 71 986			2	Screw	Skruv	5

700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B05
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A14 Starter motor 1985

Startmotor 1985

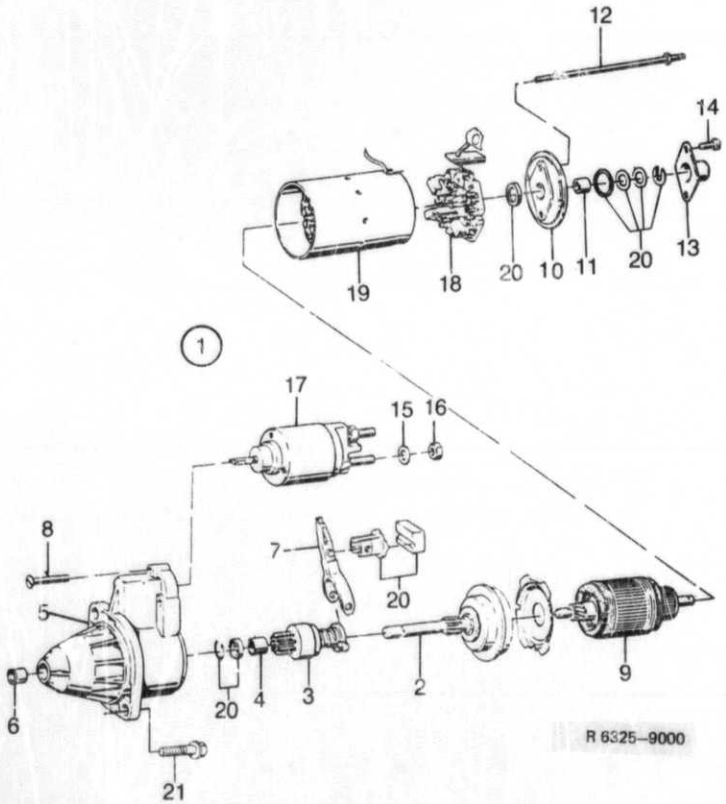

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*93 76 799*		700) NLS - USE 4017299	1	Starter motor	Startmotor	5
0040	2	75 27 716			1	.Planetary gear	.Planetväxel	5
0060	3	75 27 724			1	.Drive gear	.Drev	3
0080	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0100	5	*75 27 740*		NLS	1	.Casing	.Hus	6
0120	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0140	7	75 27 765			1	.Engagement lever	.Kopplingsarm	6
0160	8	75 27 773			3	.Screw	.Skruv	5
0180	9	*75 27 781*		NLS - USE 4160123	1	.Rotor	.Rotor	5
0200	10	*75 27 799*		NLS	1	.Ball bearing	.Kullager	6
0220	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0240	12	*75 27 815*		NLS	2	.Screw	.Skruv	5
0260	13	*75 27 823*		NLS - USE 7535313	1	.Cap	.Kapsel	6
0280	14	*75 27 831*		NLS - USE 7535321	2	.Screw	.Skruv	5
0300	15	75 27 849			1	.Washer	.Bricka	5
0320	16	*78 14 619*		NLS	1	.Nut	.Mutter	5
0340	17	75 27 856			1	.Actuator solenoid	.Manövermagnet	3
0360	18	75 27 864			1	.Plate	.Platta	6
0380	19	75 27 872			1	.Casing	.Hus	6
0400	20	75 27 880			1	.Kit	.Sats	6
0420	21	79 76 939			2	Screw	Skruv	5

700. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A16 Starter motor 1986- / Startmotor 1986-

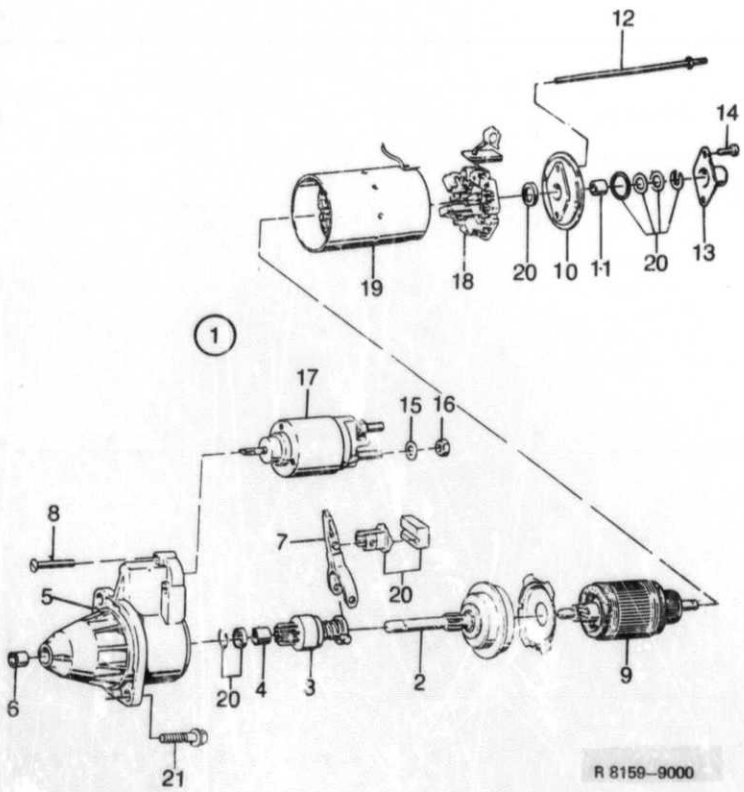

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*75 32 153*		127,700) NLS - USE 4017299	1	Starter motor	Startmotor	5
0030	1	40 17 299		128,700)	1	Starter motor	Startmotor	5
0040	2	75 35 255			1	.Planetary gear	.Planetväxel	5
0060	3	75 27 724		199)	1	.Drive gear	.Drev	3
0070	3	41 60 099		200)	1	.Drive gear	.Drev	3
0080	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0100	5	75 35 263		199)	1	.Gear house	.Drevhus	6
0110	5	41 60 149		200)	1	.Gear house	.Drevhus	6
0120	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0140	7	75 27 765			1	.Engagement lever	.Kopplingsarm	6
0160	8	75 35 271			3	.Screw	.Skruv	5
0180	9	*75 35 289*		199) NLS - USE 4160123	1	.Rotor	.Rotor	5
0190	9	41 60 123		200)	1	.Rotor	.Rotor	5
0200	10	75 35 297			1	.Ball bearing	.Kullager	6
0220	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0240	12	75 35 305			2	.Screw	.Skruv	5
0260	13	75 35 313			1	.Cap	.Kapsel	6
0280	14	75 35 321			2	.Screw	.Skruv	5
0300	15	75 27 849			1	.Washer	.Bricka	5
0320	16	75 35 339			1	.Nut	.Mutter	5
0340	17	75 27 856			1	.Actuator solenoid	.Manövermagnet	3
0360	18	75 27 864			1	.Plate	.Platta	6
0380	19	75 27 872			1	.Casing	.Hus	6
0400	20	75 27 880			1	.Kit	.Sats	6
0420	21	79 76 939			2	Screw	Skruv	5

127. Ch --K1016249, --K2009137, --K8000588.
128. Ch K1016250--, K2009138--, K8000589--.
199. Ch --K1016249, --K2009137.
200. Ch K1016250--, K2009138--.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A18

Ignition system
Ignition coil, cables, spark plugs etc

Tändsystem
Tändspole, kablar, tändstift etc

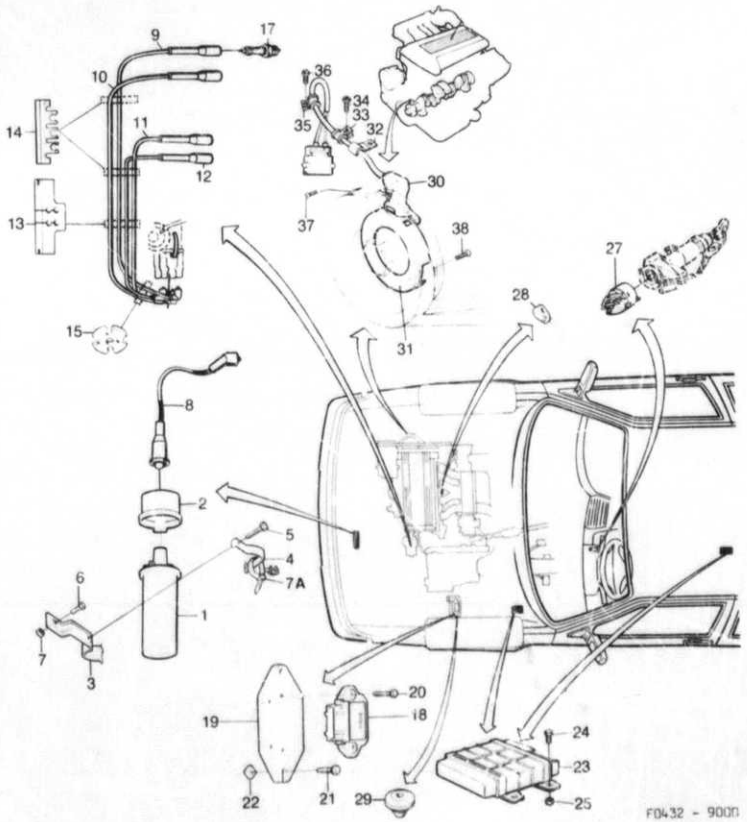

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 73 834		TURBO, I	1	Ignition coil	Tändspole	4
0020	2	85 66 374			1	Protecting casing	Skyddskåpa	4
0030	3	93 88 398			1	Bracket	Fäste	5
0040	4	93 88 554			1	Cap	Överfall	5
0050	5	79 77 457			1	Screw	Skruv	5
0060	6	80 19 747			1	Screw	Skruv	5
0070	7	79 75 576			1	Nut	Mutter	5
0080	7A	73 98 456			1	Clamp	Klämma	5
0090	8	93 90 840	S	(9388505)	1	Ignition lead ignition coil	Tändkabel tändspole	3
0100								
0110								
0120	9	75 04 483	S		1	Ignition lead cylinder 1	Tändkabel cylinder 1	3
0130								
0140	10	75 04 491	S		1	Ignition lead cylinder 2	Tändkabel cylinder 2	3
0150								
0160	11	75 04 509	S		1	Ignition lead cylinder 3	Tändkabel cylinder 3	3
0170								
0180	12	75 04 517	S		1	Ignition lead cylinder 4	Tändkabel cylinder 4	3
0190								
0200								
0210	13	75 04 525		9)	1	Retainer	Hållare	2
0220	13	75 23 004		10)-1987	1	Retainer	Hållare	2
0230	13	75 23 004		1988, I	1	Retainer	Hållare	2
0240	13	75 04 525		1988, TURBO	1	Retainer	Hållare	2
0250	13	75 04 525		500), 1989-	1	Retainer	Hållare	2
0260	14	75 03 832		9)	2	Retainer	Hållare	2
0270	14	75 22 998		10)-1987	2	Retainer	Hållare	2
0280	14	75 22 998		1988, I	2	Retainer	Hållare	2
0290	14	75 85 540		1988, TURBO	2	Retainer	Hållare	2
0300	14	75 85 540		500), 1989-	2	Retainer	Hållare	2
0310	15	75 06 793			1	Retainer	Hållare	2
0320								
0330	17	88 19 294		-1988, I, NGK BCP6ES	4	Spark plug	Tändstift	1
0350	17	91 16 385		500), 1989-, I, NGK BCP5ES	4	Spark plug	Tändstift	1
0360								
0365	17	88 19 302		TURBO, NGK BCP7EV	4	Spark plug	Tändstift	1
0370	17	91 12 541		DI, NGK BCPR7ES-1,1	4	Spark plug	Tändstift	1
0380								
0390	18	*85 73 826*		-1985 NLS - USE 9390220	1	Electronic unit	Elektronikenhet	5
0400	18	93 90 220		1986-, TURBO	1	Power unit	Effektsteg	5
0410	18	*75 03 600*		1986-, I NLS - USE 4023149	1	Power unit	Effektsteg	5
0410								
0420	19	85 74 816			1	Cooling body	Kylkropp	5
0430	20	79 75 519			2	Screw	Skruv	5
0440	21	79 73 191			2	Screw	Skruv	5
0450	22	79 75 279			2	Nut	Mutter	5
0460								
0470	23	*75 03 592*		700), -1987 NLS	1	Electronic unit	Elektronikenhet	5
0480	23	75 88 544		700), 1988, US, CA,JP,AU	1	Electronic unit	Elektronikenhet	5
0490	23	74 84 504		44,500,700), 1989-	1	Electronic unit	Elektronikenhet	5
0500	23	*75 63 067*		700),1986-1987, I, SE,EU NLS	1	Electronic unit	Elektronikenhet	5
0500								
0510	23	*75 63 067*		700), 1988, M, SE, EU,ME NLS	1	Electronic unit	Elektronikenhet	5
0510								
0520	23	74 84 512		43,700), 1989-, M	1	Electronic unit	Elektronikenhet	5
0530	23	75 84 592		700), 1987-1988, A, SE, EU, ME	1	Electronic unit	Elektronikenhet	5
0540								


9. Engine --G52494.
10. Engine G52495--.
43. Without catalytic converter. Utan katalytisk reaktor.
44. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

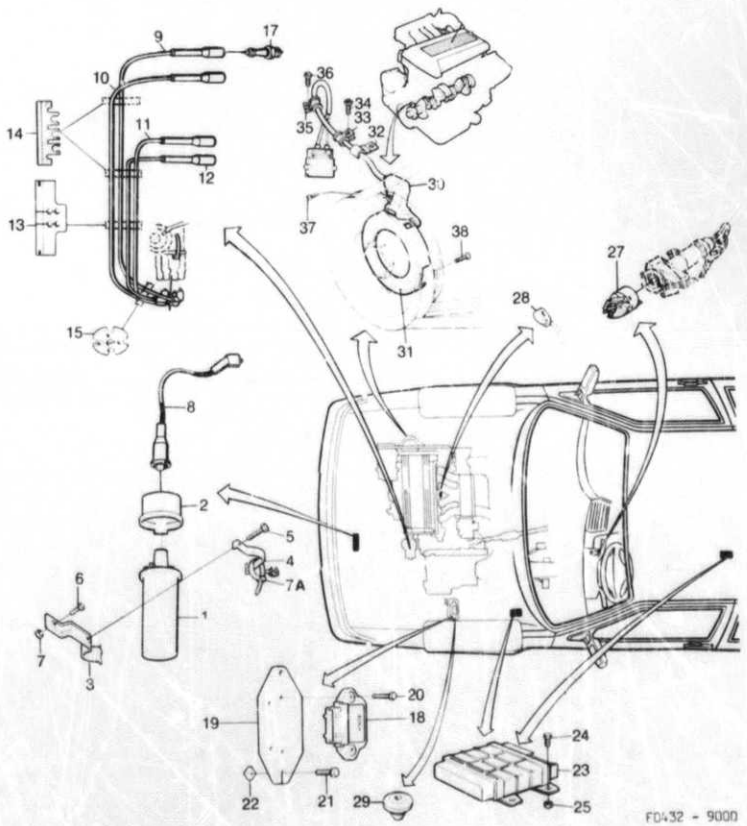

Ignition system

2-A20

Ignition coil, cables, spark plugs etc

Tändsystem

Tändspole, kablar, tändstift etc

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	23	74 84 520		43,700), 1999-, A	1	Electronic unit	Elektronikenhet	5
0560	24	79 22 388		31)	4	Screw	Skruv	5
0570	24	79 22 826		32)-1987	4	Screw	Skruv	5
0580	24	79 22 347		1988-	4	Screw	Skruv	5
0590	25	79 75 261		-1987	4	Nut	Mutter	5
0600								
0610	27			See page 6-007, 4-C08		Starter switch	Startkontakt	
0620	28			See page 2-133, 1-G14		Knock sensor	Knacksensor	
0630	29	82 67 296		DI	2	Plug	Plugg	5
0640								
0650	30	74 82 540		500), 1989-, I	1	Sensor	Givare	4
0660	31	*74 86 814*		500), 1989-, I,(9117979) NLS - USE 9117979	1	Aperture disc	Bländarskiva	4
0670								
0680	32	74 87 952		500), 1989-, I	1	Clamp	Klämma	5
0690	33	*81 39 362*		500), 1989-, I NLS - USE 7969389	1	Clamp	Klammer	5
0700	34	81 29 868		500), 1989-, I	1	Screw	Skruv	5
0710	35	*81 39 339*		500), 1989-, I NLS - USE 7969348	1	Clamp	Klammer	5
0720	36	81 29 868		500), 1989-, I	1	Screw	Skruv	5
0730	37	91 27 440		500), 1989-, I,(9114455)	2	Screw	Skruv	5
0740	38	91 27 440		500), 1989-, I, (7482490,9114455)	3	Screw	Skruv	5
0745								
0760				See page 3A-173, 2-H06	X	Kit ignition cables	Tändkabelsats	

31. Ch -H1025917, -H8000549.
32. Ch H1025918-, H8000550-.
43. Without catalytic converter. Utan katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-A22

Ignition distributor
1985, Turbo

Tändfördelare
1985, Turbo

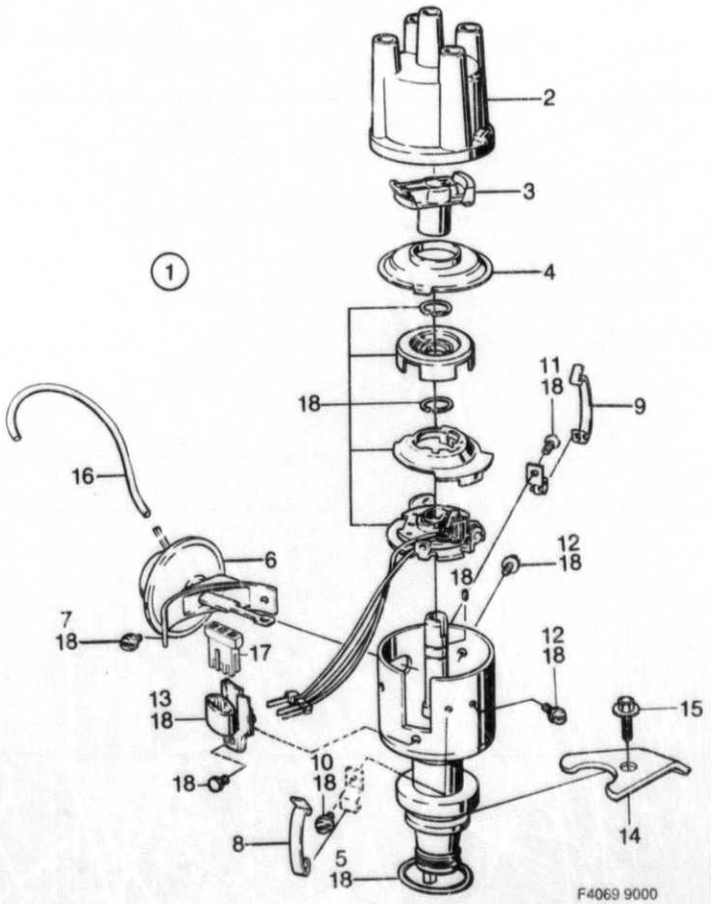

0440	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 00 507			1	Ignition distributor	Tändfördelare	5
0020	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0030	3	75 19 309			1	.Rotor	.Rotor	3
0040	4	75 19 135			1	.Cover	.Lock	6
0050	5	75 19 143		(7808504)	1	.O-ring	.O-ring	6
0060	6	75 19 150			1	.Regulator	.Regulator	4
0070	7	75 19 127			1	.Screw	.Skruv	5
0080	8	75 19 085		(9305038)	1	.Spring	.Fjäder	5
0090	9	93 09 956			1	.Spring	.Fjäder	6
0100	10	75 19 119			1	.Screw	.Skruv	5
0110	11	75 19 101			1	.Screw	.Skruv	5
0120	12	75 19 119			2	.Screw	.Skruv	5
0130	13	75 21 131			1	.Connection	.Kabelanslutning	6
0140	14	83 62 287			1	Bracket	Hållare	5
0150	15	*80 82 950*		NLS - USE 9166323	1	Screw	Skruv	5
0160	16	91 36 243		L=410 MM	1	Vaccum hose	Vakuumslang	5
0170	17			See page 3B-009, 3-A10	1	Contact housing	Kontakthus	
0180	18	75 88 296		See page 3A-173, 2-H06	X	Repair kit	Reparationssats	5
0190								
0200		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Ignition system

2-A24 Ignition distributor 1986-, Turbo

Tändsystem

Tändfördelare 1986-, Turbo

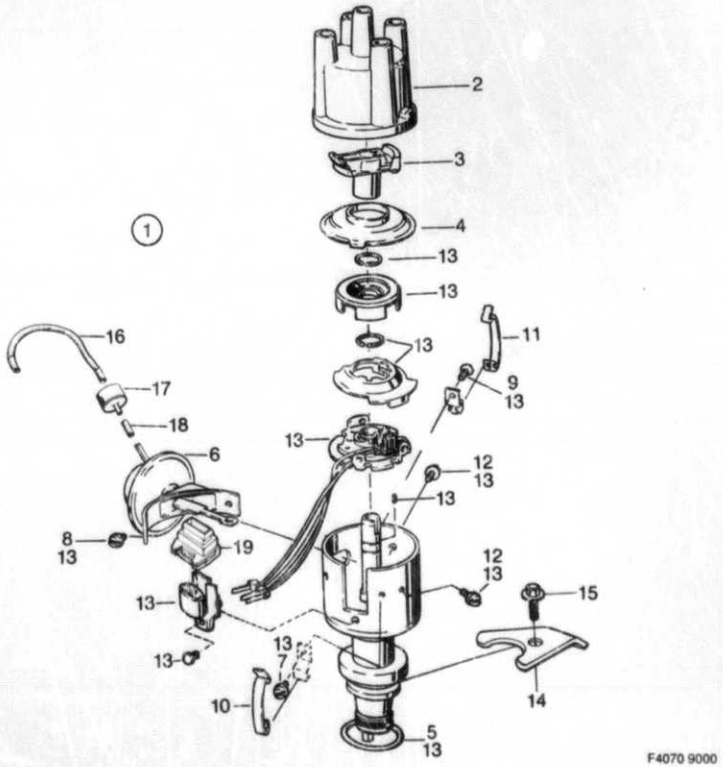

F4070 9000

0445	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 61 814		1986	1	Ignition distributor	Tändfördelare	5
0020	1	*75 61 806*		-1987, US NLS - USE 7481393, 8579955, 8593907	1	Ignition distributor	Tändfördelare	5
0030	1	*75 61 806*		1987-62) NLS - USE 7481393, 8579955, 8593907	1	Ignition distributor	Tändfördelare	5
0040	1	*75 61 806*		63) NLS - USE 7481393, 8579955, 8593907	1	Ignition distributor	Tändfördelare	5
0050	1	74 81 393		63), SE, EU, ME, US	1	Ignition distributor	Tändfördelare	5
0060	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0070	3	75 64 420		159,160)	1	.Rotor	.Rotor	3
0080	4	75 19 135		159,160)	1	.Cover	.Lock	6
0090	5	75 19 143			1	.O-ring	.O-ring	6
0100	6	75 64 438		159,161)	1	.Regulator	.Regulator	4
0110	6	75 64 446		160)	1	.Regulator	.Regulator	4
0120	7	75 19 119		159,160)	1	.Screw	.Skruv	5
0130	7	75 19 119		161)	1	.Screw	.Skruv	5
0140	8	75 19 127		159,160)	1	.Screw	.Skruv	5
0150	8	91 19 561		161)	1	.Screw	.Skruv	5
0160	9	75 19 101		159,160)	1	.Screw	.Skruv	5
0170	9	75 19 127		161)	1	.Screw	.Skruv	5
0180	10	75 19 085		159,160)	1	.Spring	.Fjäder	5
0190	10	75 19 085		161)	2	.Spring	.Fjäder	5
0200	11	93 09 956		159,160)	1	.Spring	.Fjäder	6
0210	12	75 19 119		159,160)	2	.Screw	.Skruv	5
0220	13	75 88 312		159,160)	X	.Repair kit	.Reparationssats	5
0230				See page 3A-173, 2-H06				
0240	14	83 62 287			1	Bracket	Hållare	5
0250	15	*80 82 950*		NLS - USE 9166323	1	Screw	Skruv	5
0260	16	91 36 243		L=410 MM	1	Vaccum hose	Vakuumslang	5
0270	17	83 23 362			1	Valve	Ventil	2
0280						white, 6 sec.	vit, 6 sec.	
0290	17	83 23 362		-1988, US, A	1	Valve	Ventil	2
0300						white, 6 sec.	vit, 6 sec.	
0310	18	91 36 243		L=30 MM	1	Vaccum hose	Vakuumslang	5
0320	19			-1987		Contact housing	Kontakthus	
0330				See page 3B-025, 3-B02				
0340	19			1988-		Contact housing	Kontakthus	
0350				See page 3B-067, 3-C20				
0360								
0370		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

62. Engine -J088764.
63. Engine J088765-.
159. For ignition distributor 75 61 806. För fördelare 75 61 806.
160. For ignition distributor 75 61 814. För fördelare 75 61 814.
161. For ignition distributor 74 81 393. För fördelare 74 81 393.
198. On J1014463-, J2007677-, J8000885-.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-B02 Ignition distributor / Tändfördelare /

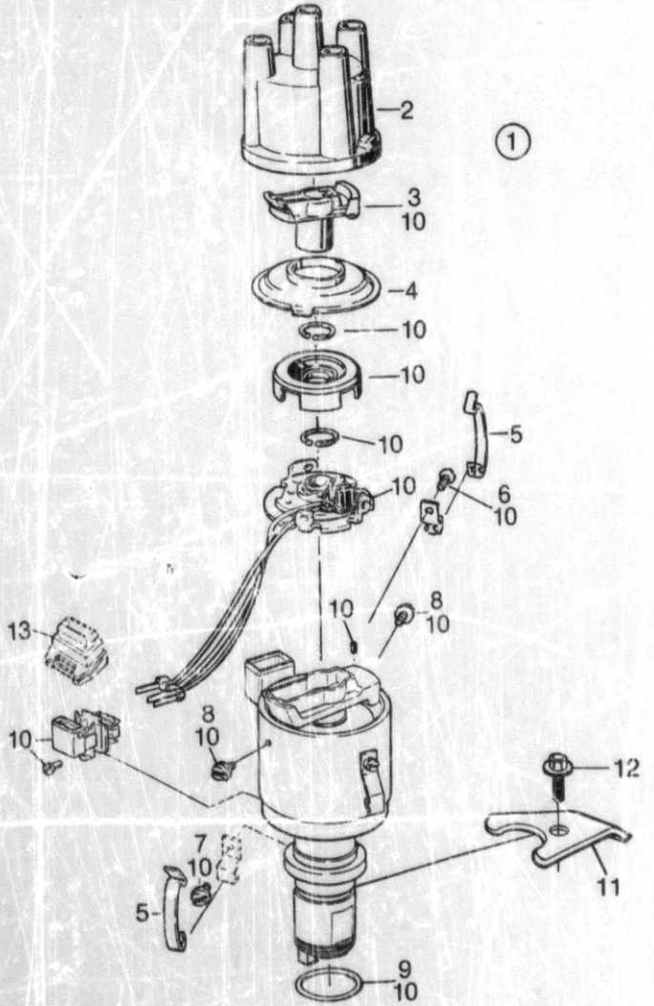

F0433 - 9000

0447	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 61 798		-1987	1	Ignition distributor	Tändfördelare	5
0020	1	75 61 798		1988	1	Ignition distributor	Tändfördelare	5
0030	1	74 81 385		1988, SE, EU, US, ME	1	Ignition distributor	Tändfördelare	5
0040	1	74 84 439		500), 1989-	1	Ignition distributor	Tändfördelare	5
0050	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0060	3	75 64 420			1	.Rotor	.Rotor	3
0070	4	75 19 135		158,162)	1	.Cover	.Lock	6
0080	5	75 19 085			2	.Spring	.Fjäder	5
0090	6	74 84 868		158), 1988-, SE, EU, US, ME	1	.Screw	.Skruv	5
0091								
0100	7	74 84 884		158), 1988-, SE, EU, US, ME	1	.Screw	.Skruv	5
0101								
0105	7	75 19 101		162)	2	.Screw	.Skruv	5
0110	8	74 84 876		158), 1988-, SE, EU, US, ME	2	.Screw	.Skruv	5
0111								
0120	9	75 19 143			1	.O-ring	.O-ring	6
0125	10	• 75 88 304		212)	1	.Repair kit	.Reparationssats	5
0130				See page 3A-173, 2-H06				
0150	10	74 84 892		158), 1988-, SE,EU,US,ME	1	.Repair kit	.Reparationssats	5
0160				See page 3A-173, 2-H06				
0180	11	83 62 287			1	Bracket	Hållare	5
0190	12	*80 82 950*		NLS - USE 9166323	1	Screw	Skruv	5
0200	13			See page 3B-025, 3-B02		Contact housing	Kontakthus	
0210	13			1988-, SE, EU, US, ME		Contact housing	Kontakthus	
0220				See page 3B-067, 3-C20				

158. For ignition distributor 74 81 385. För fördelare 74 81 385.
162. For ignition distributor 74 84 439. För fördelare 74 84 439.
212. For ignition distributor 75 61 798. För fördelare 75 68 798.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Ignition system
SAAB DI

Tändsystem
SAAB DI

2-B04

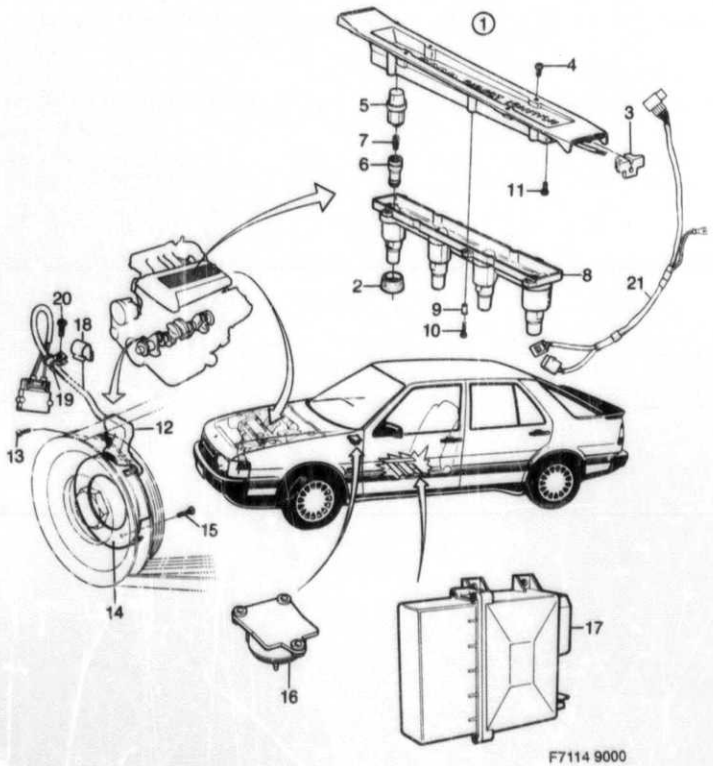

0448	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*74 85 808*		(7584204) NLS - USE 9134404, 9321787	1	Ignition cassette	Tändkassett	4
0030	2	74 80 056			4	.Seal	.Tätning	4
0040	3	75 86 811			1	.Grommet	.Genomföring	5
0050	4	*91 14 976*		NLS - USE 8059578	4	.Screw	.Skruv	5
0060	5	75 89 815			4	.Ignition coil	.Tändspole	4
0070	6	75 89 831			4	.Sleeve	.Hylsa	4
0080	7	75 89 823			4	..Spring	..Fjäder	4
0090	8	75 89 856			1	.Lower section	.Underdel	4
0100	9	75 89 864			6	.Spacer sleeve	.Distanshylsa	4
0110	10	79 68 316			6	.Screw	.Skruv	5
0120	11	79 74 512			2	.Screw	.Skruv	5
0130	12	74 82 540			1	Sensor	Givare	4
0140								
0150	13	*91 14 455*		NLS - USE 9127440	2	Screw	Skruv	5
0171	14	91 18 001		(7581713, 9114554)	1	Aperture disc	Bländarskiva	4
0185	15	91 27 440		(7482490, 9114455)	3	Screw	Skruv	5
0190	16	75 38 697			1	Sensor	Givare	3
0200	17	75 85 797		43), -1988	1	Electronic unit	Elektronikenhet	4
0210	17	74 84 272		43), 1989-	1	Electronic unit	Elektronikenhet	4
0215	17	91 19 348		BE, 1989-, 157HP,(116KW)	1	Electronic unit	Elektronikenhet	3
0220	17	74 83 514		44), -1988	1	Electronic unit	Elektronikenhet	4
0230	17	74 84 306		44,500), 1989-	1	Electronic unit	Elektronikenhet	4
0240	18	71 08 491		1988	1	Clamp	Klammer	5
0250	18	85 78 262		500), 1989-	1	Clip	Clips	5
0255	19	*81 39 339*		500), 1989- NLS - USE 7969348	1	Clamp	Klammer	5
0255								
0257	20	81 29 868		1989-,133,500)	1	Screw	Skruv	5
0258	20	81 25 023		134)	1	Screw	Skruv	5
0259	21	• 93 21 787			1	Cable harness	Ledningsnät	6
0260				See page 3A-129, 2-F10		Cable harness	Ledningsnät	

43. Without catalytic converter. Utan katalytisk reaktor.
44. With catalytic converter. Med katalytisk reaktor.
133. Engine -K052492.
134. Engine K052493-.
198. Ch J1014463-, J2007677-, J8000885-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Lighting

2-B06 Headlamp 5D

Belysning

Strålkastare 5D

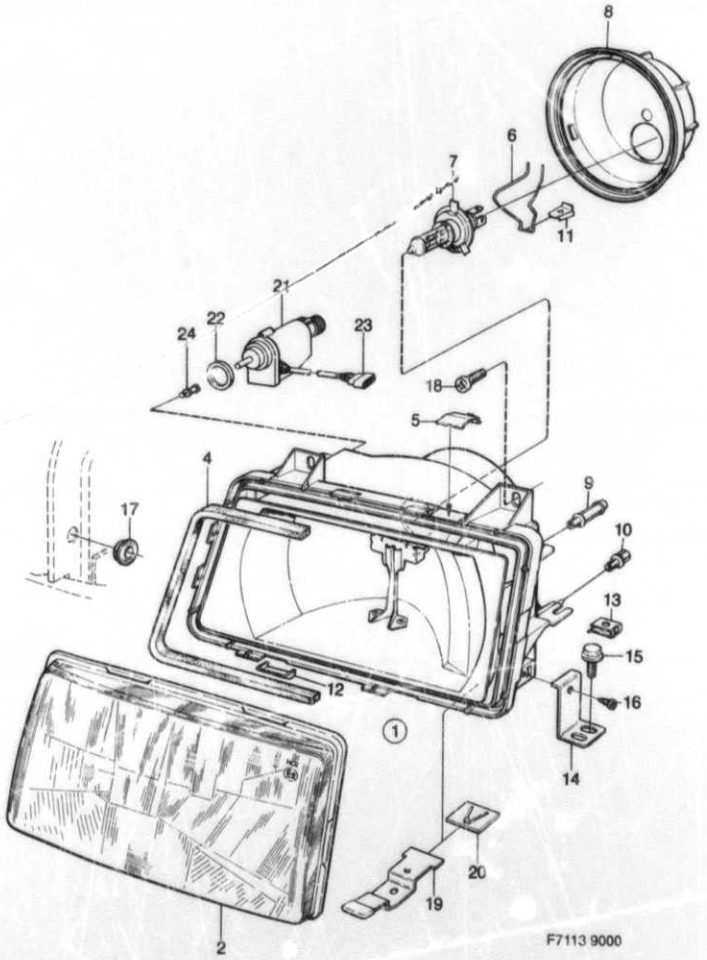

	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450									
0025	1		95 65 938		LH, (9500059,9513797)	1	Headlamp	Strålkastare	4
0045	1		95 65 946		RH, (9500067,9513805)	1	Headlamp	Strålkastare	4
0065	1		95 65 953		164), LH, (9513995)	1	Headlamp	Strålkastare	4
0085	1		95 65 961		164), RH, (9514001)	1	Headlamp	Strålkastare	4
0100	2		95 01 172		206), LH	1	.Glass	.Strålkastarglas	2
0120	2		95 01 180		206), RH	1	.Glass	.Strålkastarglas	2
0140	2		95 05 157		207), LH	1	.Glass	.Strålkastarglas	2
0160	2		95 05 165		207), RH	1	.Glass	.Strålkastarglas	2
0260	4		42 51 856		LH	1	.Seal	.Tätning	3
0265	4		42 51 864		RH	1	.Seal	.Tätning	3
0280	5		95 01 230			6	.Clip	.Clips	5
0300	6		95 01 255			1	.Spring	.Fjäder	3
0310	7		85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0340	8		95 13 581		(9501164)	2	.Cover	.Täcklock	4
0341	9	•	43 81 463			2	.Bearing sleeve	.Lagerhylsa	3
0342	10	•	43 81 471			1	.Bearing sleeve	.Lagerhylsa	3
0343	11	•	43 81 489			1	.Clip	.Clips	3
0350	12		95 64 238		1988-, CA	2	Support	Stöd	6
0380	13		85 50 824			2	Clip	Clips	3
0400	14		*95 04 630*		209), -1987 NLS - USE 4013017, 4013025	2	Attaching bracket	Fästvinkel	6
0400									
0412	14		40 13 017		1988-, LH, (9564899)	1	Attaching bracket	Fästvinkel	6
0416	14		40 13 025		1988-, RH, (9564907)	1	Attaching bracket	Fästvinkel	6
0420	15		79 69 223		-1986	2	Screw	Skruv	5
0430	15		*79 75 170*		1987- NLS - USE 7982366	2	Screw	Skruv	5
0440	16		79 76 954		29)	2	Screw	Skruv	5
0450	16		79 73 159		30)	2	Screw	Skruv	5
0460	17		95 04 648			4	Bushing	Bussning	3
0480	18		79 73 159			4	Screw	Skruv	5
0500	19		95 02 618			2	Stop	Stopp	3
0520	20		95 02 766			2	Bracket	Fäste	5
0530									
0540	21		95 29 785	S	500), 1989-	2	Electric motor headlamp levelling	Elmotor ljuslängdsreglering	3
0550									
0560	22		95 29 793	S		1	.Sealing ring	.Tätningsring	9
0570	23		95 03 327	S		1	.Contact housing 3-pole, female	.Kontakthus 3-polig, hylsa	4
0571									
0580	24		95 69 963		500), 1989-	2	Adapter headlamp levelling	Adapter ljuslängdsregiering	5
0590									
0600			85 47 838		141)	X	Lamp adjustment kit	Ljusregleringssats	5
0610					See page 3A-175, 2-H08				

29. Ch -H1008494, -H8000181.
30. Ch H1008495-, H8000182-.
141. Ch J1006263-, J2002505-, J8000316-.
164. For left hand traffic. För vänstertrafik.
206. Part of 95 01 172 and 95 01 180. Del av 95 01 172 och 95 01 180.
207. Part of 95 65 953 and 95 65 961. Del av 95 65 953 och 95 65 961.
209. Superseded by 40 13 017 and 40 13 025. Ersatt av 40 13 017 och 40 13 025.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-B08 Headlamp 4D / Strålkastare 4D

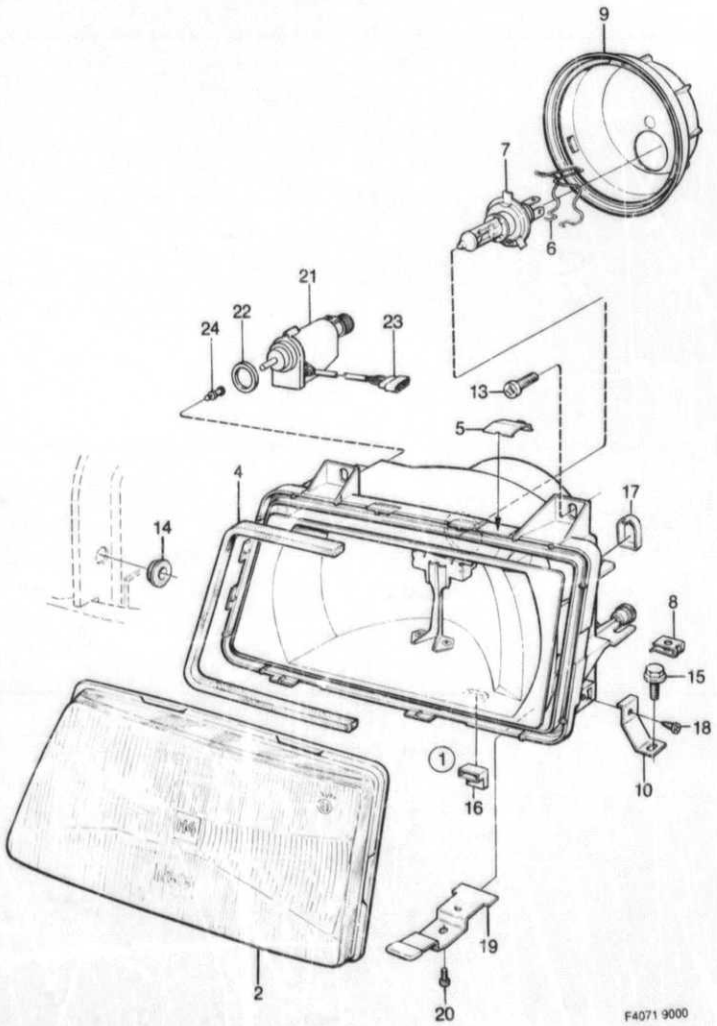

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	91 25 279		LH, (9520651)	1	Headlamp	Strålkastare	4
0050	1	91 25 287		RH, (9520669)	1	Headlamp	Strålkastare	4
0070	1	91 25 295		164), LH, (9525296)	1	Headlamp	Strålkastare	4
0090	1	91 25 303		164), RH, (9525304)	1	Headlamp	Strålkastare	4
0100	2	95 21 956		LH	1	.Glass	.Strålkastarglas	2
0120	2	95 21 964		RH	1	.Glass	.Strålkastarglas	2
0140	2	95 25 312		164), LH	1	.Glass	.Strålkastarglas	2
0160	2	95 25 320		164), RH	1	.Glass	.Strålkastarglas	2
0260	4	95 21 881			1	.Seal	.Tätning	4
0280	5	95 56 705			9	.Clip	.Clips	5
0290	6	95 64 352			1	.Spring	.Fjäder	4
0310	7	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0315	8	85 50 824			1	.Clip	.Clips	3
0320	9	95 25 015			2	Cover	Kåpa	5
0400	10	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0410	10	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0450	13	79 73 159			4	Screw	Skruv	5
0460	14	95 04 648			2	Bushing	Bussning	3
0500	15	79 69 223			2	Screw	Skruv	5
0510	16	95 26 351			2	Vent pipe	Urluftningsrör	9
0520	17	95 26 344			2	Bleeder cover	Urluftningslock	9
0530	18	79 73 159			2	Screw	Skruv	5
0540	19	95 24 596			2	Stop	Stopp	3
0550	20	79 22 891			2	Screw	Skruv	5
0560								
0570	21	95 66 662	S	500), 1989-	2	Electric motor headlamp levelling	Elmotor ljuslängdsreglering	3
0580								
0590	22	95 29 793	S		1	.Sealing ring	.Tätningsring	S
0600	23	95 03 327	S		1	.Contact housing 3-pole, female	.Kontakthus 3-polig, hylsa	4
0601								
0610	24	95 69 963	S		1	.Adapter	.Adapter	5
0620		85 47 846		See page 3A-175, 2-H08	X	Lamp adjustment kit	Ljusregleringssats	5

164. For left hand traffic. För vänstertrafik.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-B10 Headlamp, sealed beam 5D / Strålkastare, sealed beam 5D

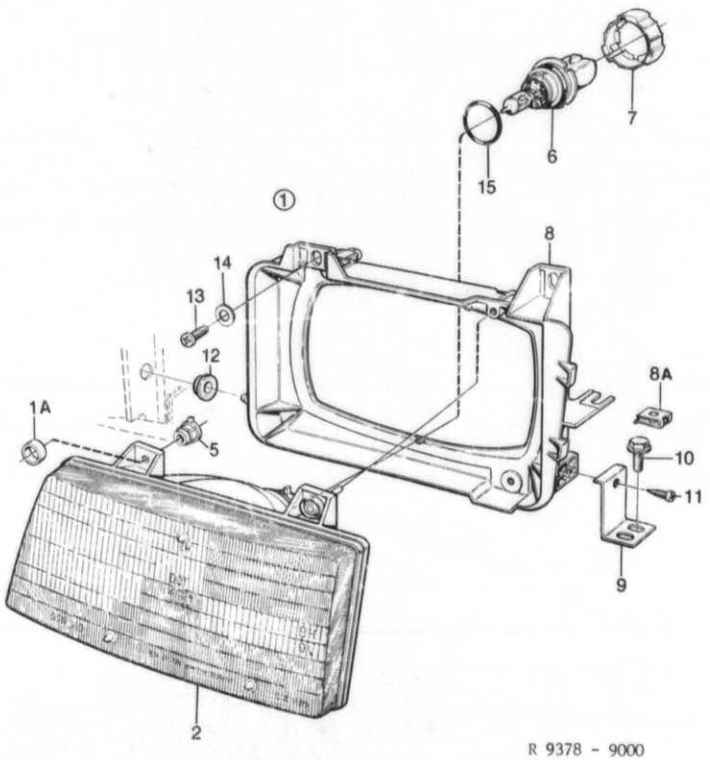

R 9378 - 9000

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	91 22 672		LH, (9509654)	1	Headlamp	Strålkastare	4
0045	1	91 22 680		RH, (9509662)	1	Headlamp	Strålkastare	4
0050	1A	95 13 037			3	.Clamping sleeve	.Klämhylsa	3
0070	2	91 22 698		LH, (9512351)	1	.Headlamp insert	.Strålkastarinsats	1
0090	2	91 22 706		RH, (9512369)	1	.Headlamp insert	.Strålkastarinsats	1
0115	5	95 12 328			3	..Bearing sleeve	..Lagerhylsa	3
0120	6	95 12 401		40/238 301 006	1	.Bulb	.Glödlampa	1
0140	7	95 12 393			1	.Lock ring	.Låsring	3
0150	8	95 13 078		LH	1	.Attaching frame	.Fästram	3
0155	8	95 13 086		RH	1	.Attaching frame	.Fästram	3
0157	8A	85 50 824			1	..Clip	..Clips	3
0160	9	*95 04 630*		209), -1987 NLS - USE 4013017, 4013025	2	Attaching bracket	Fästvinkel	6
0167	9	40 13 017		1988-, LH, (9564899)	1	Attaching bracket	Fästvinkel	6
0175	9	40 13 025		1988-, RH, (9564907)	1	Attaching bracket	Fästvinkel	6
0180	10	79 69 223		-1986	2	Screw	Skruv	5
0190	10	*79 75 170*		1987- NLS - USE 7982366	2	Screw	Skruv	5
0200	11	79 76 954		29)	2	Screw	Skruv	5
0210	11	79 73 159		30)-1987	2	Screw	Skruv	5
0215	11	79 22 438		1988-	2	Screw	Skruv	5
0220	12	95 04 648			2	Bushing	Bussning	3
0240	13	79 22 438			4	Screw	Skruv	5
0250	14	80 29 951			4	Washer	Bricka	5
0260	15	95 14 811		US	2	Protection	Skydd	4

29. Ch --H1008494, --H8000181.
30. Ch H1008495--, H8000182--.
209. Superseded by 40 13 017 and 40 13 025. Ersatt av 40 13 017 och 40 13 025.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Lighting

2-B12 Headlamp, sealed beam 4D

Belysning

Strålkastare, sealed beam 4D

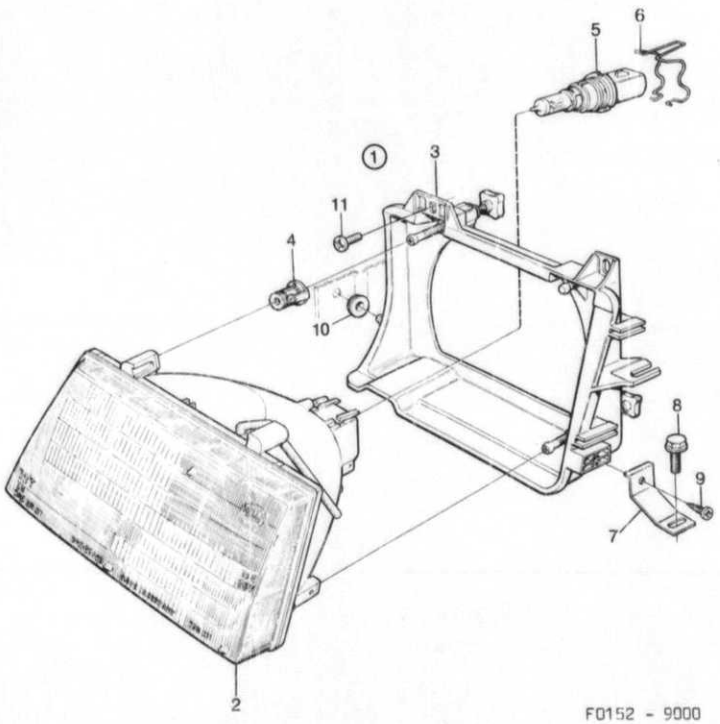

F0152 - 9000

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 21 352		LH	1	Headlamp	Strålkastare	4
0040	1	95 21 360		RH	1	Headlamp	Strålkastare	4
0060	2	95 21 774		LH	1	. Headlamp insert	. Strålkastarinsats	1
0080	2	95 21 782		RH	1	. Headlamp insert	. Strålkastarinsats	1
0085	3	95 21 816		LH	1	. Attaching frame	. Fästram	3
0090	3	95 21 824		RH	1	. Attaching frame	. Fästram	3
0115	4	95 26 484			3	.. Bearing sleeve	.. Lagerhylsa	3
0120	5	95 12 401		40/238 301 006	1	. Bulb	. Glödlampa	1
0140	6	95 26 260			1	. Spring	. Fjäder	4
0160	7	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0170	7	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0190	8	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0215	9	79 22 438			2	Screw	Skruv	5
0220	10	95 04 648			2	Bushing	Bussning	3
0240	11	79 73 159			4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Lighting

2-B14 Lamp cluster 5D

Belysning

Kombinationslykta 5D

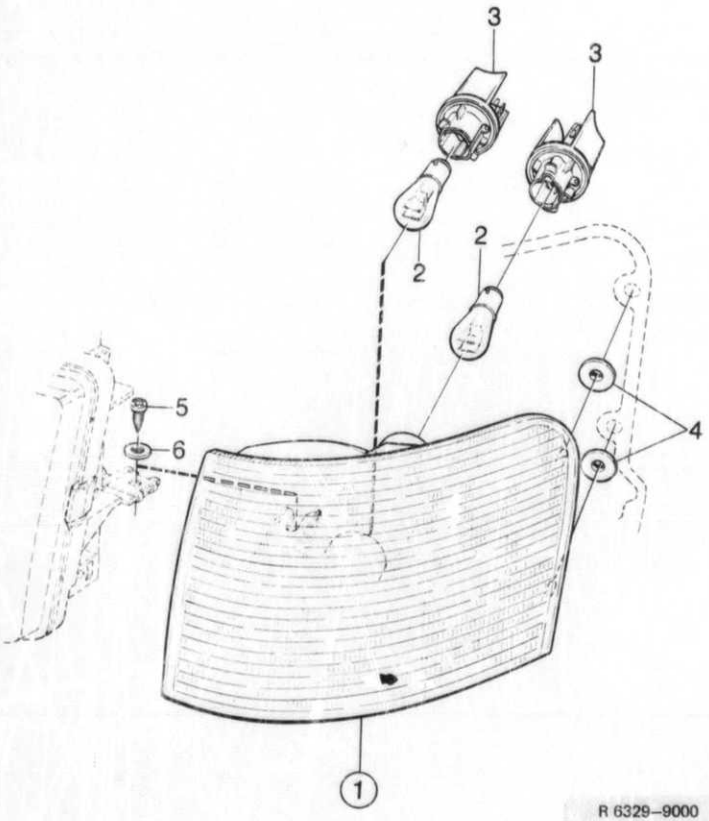

R 6329–9000

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*95 00 117*		37), LH NLS - USE 9123175	1	Direction indicator	Blinklykta	2
0030	1	91 23 175		38), LH, (9526658)	1	Direction indicator	Blinklykta	2
0040	1	*95 00 125*		37), RH NLS - USE 9123183	1	Direction indicator	Blinklykta	2
0060	1	91 23 183		38), RH, (9526666)	1	Direction indicator	Blinklykta	2
0080	1	*95 00 158*		37), LH, US, CA, JP NLS - USE 9121815	1	Direction indicator	Blinklykta	2
0095	1	91 21 815		38), LH, US, CA, JP (9526674)	1	Direction indicator	Blinklykta	2
0100	1	*95 00 166*		37), RH, US, CA, JP NLS - USE 9121823	1	Direction indicator	Blinklykta	2
0110	1	91 21 823		38), RH, US, CA, JP (9526682)	1	Direction indicator	Blinklykta	2
0130	2	85 32 756		37), 40/238 291 009	2	.Bulb	.Glödlampa	1
0140	2	85 32 756		38), US, CA, JP 40/238 291 009	2	.Bulb	.Glödlampa	1
0160	2	*85 37 672*		38), 40/238 292 007 NLS - USE 4320594	2	.Bulb	.Glödlampa	1
0170	2	85 32 756		US,CA,JP, 40/238 291 009	2	.Bulb	.Glödlampa	1
0180	3	95 01 503		37)	2	.Bulb socket	.Lamphållare	3
0190	3	95 56 994		38)	2	.Bulb socket	.Lamphållare	6
0200	4	95 07 708			4	Bushing	Bussning	3
0210	5	79 22 438			2	Screw	Skruv	5
0220	6	85 44 801			2	Washer	Bricka	3

37. Ch –H1024938, –H8001016.
38. Ch H1024939–, H8001017–.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C03
Wiring and fuses	2-E04
Complete sets	2-H06

Lighting

2-B16 Lamp cluster 4D

Belysning

Kombinationslykta 4D

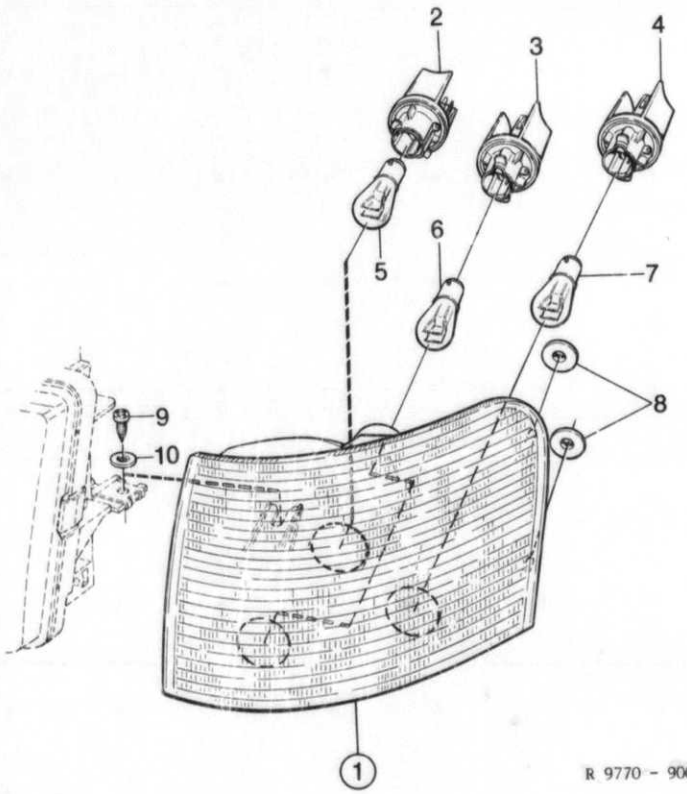

R 9770 - 9000

0560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 22 235		1988, LH, SE	1	Direction indicator	Blinklykta	2
0020	1	*91 25 014*		500), 1989-, LH, SE NLS - USE 4252250	1	Direction indicator	Blinklykta	2
0030	1	91 22 243		1988, RH, SE	1	Direction indicator	Blinklykta	2
0040	1	*91 25 022*		500), 1989-, RH, SE NLS - USE 4252268	1	Direction indicator	Blinklykta	2
0060	1	*91 22 250*		LH, FI, GB, EU, ME,FE,AU NLS - USE 4252276	1	Direction indicator	Blinklykta	2
0070	1	*91 22 268*		RH, FI, GB, EU, ME,FE,AU NLS - USE 4252284	1	Direction indicator	Blinklykta	2
0090	1	*95 23 010*		1988, LH, JP NLS - USE 4252292	1	Direction indicator	Blinklykta	2
0100	1	95 23 028		1988, RH, JP	1	Direction indicator	Blinklykta	2
0120	1	*91 25 030*		1989-, LH, US, CA, JP NLS - USE 4252292	1	Direction indicator	Blinklykta	2
0130	1	*91 25 048*		1989-, RH, US, CA, JP NLS - USE 4252300	1	Direction indicator	Blinklykta	2
0150	2	91 22 227		SE, FI, GB, EU, ME, FE, AU	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0160	2	95 56 994		US, CA, JP	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0180	3	95 56 986		SE, FI, GB, EU, ME, FE, AU	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0190	3	95 56 994		US, CA, JP	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0210	4	95 56 986		-1988, SE, JP	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0225	4	95 56 966		500), 1989-, SE	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0228	4	91 22 227		1989-, US ,CA, JP	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0230	5	71 54 719		SE, FI, GB, EU, ME,FE,AU 40/238 290 001	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0250	5	85 32 756		US, CA, JP, 40/238 291 009	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0270	6	71 54 727		SE, FI, GB, EU, ME,FE,AU 40/238 254 007	1	.Bulb position lamp	.Glödlampa positionslykta	1
0290	6	85 32 756		US,CA,JP, 40/238 291 009	1	.Bulb position lamp	.Glödlampa positionslykta	1
0310	7	71 54 719		SW, 40/238 290 001	1	.Bulb reverse lamp	.Glödlampa backlampa	1
0330	7	85 35 692		US,CA,JP, 40/238 304 000	1	.Bulb reverse lamp	.Glödlampa backlampa	1
0360	8	95 07 708			4	Bushing	Bussning	3
0370	9	79 22 438			2	Screw	Skruv	5
0380	10	86 44 801			2	Washer	Bricka	3

500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-B18 Fog light 4D / Dimljus 4D

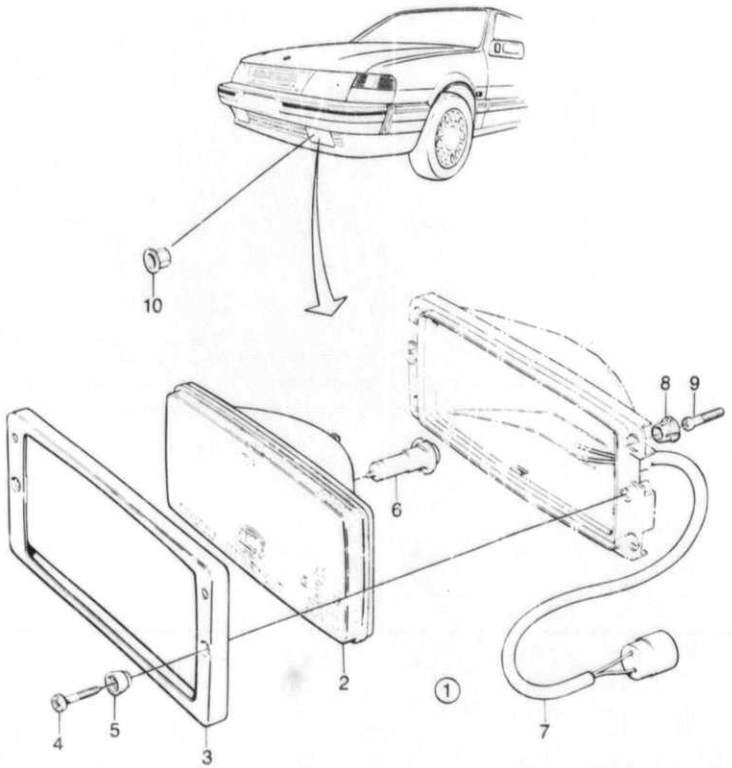

F0153 - 9000


0570	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description / Benämning	S L
0020	1	95 29 900			2	Fog light / Dimljus	9
0030	2	95 29 884			1	.Insert / .Insats	9
0040	3	95 29 868			1	.Frame / .Ram	9
0050	4	95 29 405			2	.Screw / .Skruv	5
0060	5	95 28 720			2	.Sleeve / .Hylsa	3
0070	6	*95 29 876*		40/238 216 006 NLS - USE 8529109	1	.Bulb / .Glödlampa	1
0080	7	95 18 507			1	.Cable harness / .Ledningsnät	6
0090	8	95 29 827			3	.Bushing / .Bussning	3
0100	9	95 29 843			3	.Screw / .Skruv	2
0110	10	95 29 835			3	.Nut / .Mutter	3

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

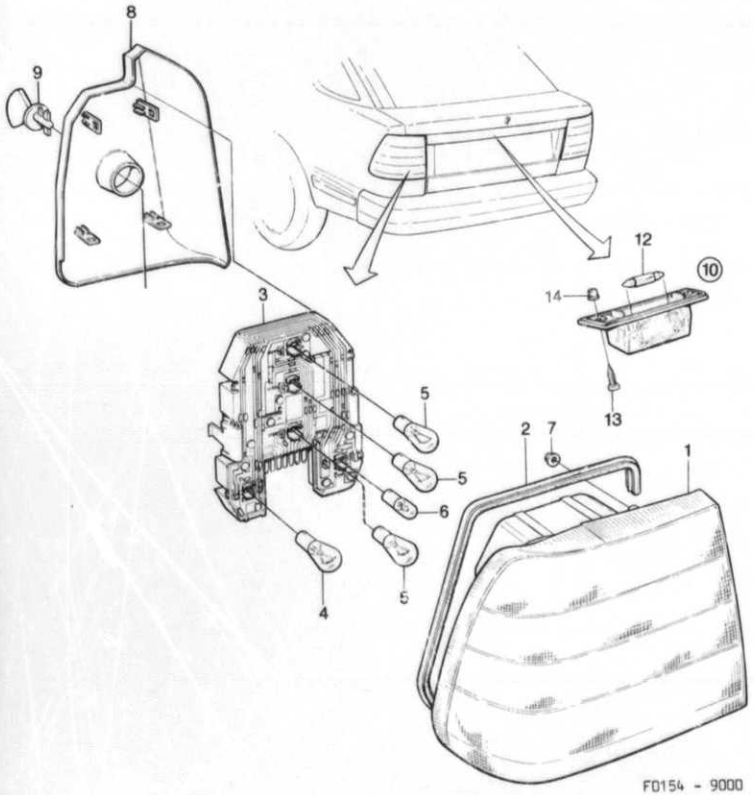

Lighting

2-B20 Tail lamp 5D

Belysning

Baklykta 5D

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	95 18 879		LH, (9503335)	1	Tail lamp	Baklykta	3
0030	1	*95 03 350*		14), LH, US, CA, JP NLS - USE 9518895	1	Tail lamp	Baklykta	3
0035	1	95 18 895		15), LH, US, CA, JP	1	Tail lamp	Baklykta	3
0038	1	95 19 075		1986-, LH, AU, ME, FE	1	Tail lamp	Baklykta	3
0045	1	95 18 887		RH, (9503343)	1	Tail lamp	Baklykta	3
0050	1	*95 03 368*		14), RH, US, CA, JP - USE 9518903	1	Tail lamp	Baklykta	3
0055	1	95 18 903		15), RH, US, CA, JP	1	Tail lamp	Baklykta	3
0058	1	95 19 083		1986-, RH, AU, ME, FE	1	Tail lamp	Baklykta	3
0060	2	95 01 628			1	.Seal	.Tätning	5
0080	3	*95 12 450*		14), LH NLS - USE 9518952	1	Bulb socket	Lamphållare	5
0085	3	95 18 952		15), LH, SE, FI, GB, EU	1	Bulb socket	Lamphållare	5
0095	3	95 18 978		LH, US, CA, JP,(9501818)	1	Bulb socket	Lamphållare	5
0098	3	95 18 978		1986-, LH, AU, ME, FE	1	Bulb socket	Lamphållare	5
0100	3	*95 12 468*		14), RH NLS - USE 9518960	1	Bulb socket	Lamphållare	5
0105	3	95 18 960		15), RH, SE, FI, GB, EU	1	Bulb socket	Lamphållare	5
0115	3	95 18 986		RH, US, CA, JP,(9501826)	1	Bulb socket	Lamphållare	5
0118	3	95 18 986		1986-, RH, AU, ME, FE	1	Bulb socket	Lamphållare	5
0120	4	95 08 904		40/238 297 006	2	Bulb	Glödlampa	1
0130	4	85 32 756		US,CA,JP, 40/238 291 009	2	Bulb	Glödlampa	1
0140	5	71 54 719		40/238 290 001	6	Bulb	Glödlampa	1
0150	5	85 35 692		US,CA,JP, 40/238 304 000	6	Bulb	Glödlampa	1
0160	6	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0170	6	85 52 325		-1986, US, CA, JP 40/238 254 015	2	Bulb	Glödlampa	1
0175	6	71 54 727		1987-, US, CA, JP 40/238 254 007	2	Bulb	Glödlampa	1
0180	7	79 73 365		-1985	8	Nut	Mutter	5
0190	7	73 98 423		1986-	8	Nut	Mutter	5
0197	8	97 67 955		LH, (9777715)	1	Cover	Kåpa	5
0198	8	97 67 963		RH, (9777723)	1	Cover	Kåpa	5
0199	9	97 77 681			1	.Screw	.Skruv	5
0200	10	95 01 693			2	Lighting	Belysning	5
0260	12	70 84 197		5W	1	.Bulb	.Glödlampa	1
0280	13	79 22 230			4	Screw	Skruv	5
0300	14	*92 36 589*		NLS - USE 4013165	4	Clip	Clips	5

14. Ch -G1018482.
15. Ch G1018483-.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Lighting

2-B22 Tail lamp 4D

Belysning

Baklykta 4D

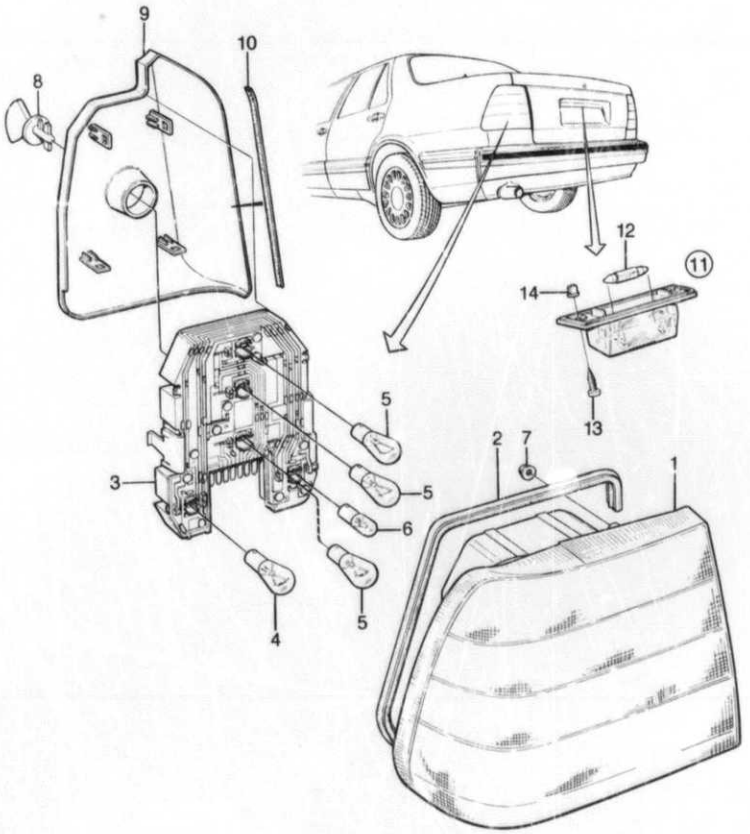

R 9771 - 9000

0610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 22 434		201,500), 1989-, LH, SE, FI, EU, GB	1	Tail lamp	Baklykta	3
0020	1	95 22 442		201,500), 1989-, RH, SE, FI, EU, GB	1	Tail lamp	Baklykta	3
0040	1	95 22 475		42,56), LH, SE, FI,EU,GB	1	Tail lamp	Baklykta	3
0050	1	95 22 483		42,56), RH, SE, FI,EU,GB	1	Tail lamp	Baklykta	3
0070	1	91 23 076		42,57), LH, SE, FI,EU,GB	1	Tail lamp	Baklykta	3
0080	1	91 23 084		42,57), RH, SE, FI,EU,GB	1	Tail lamp	Baklykta	3
0100	1	95 22 459		201), 1989-, LH, US, CA, JP	1	Tail lamp	Baklykta	3
0110	1	95 22 467		201), 1989-, RH, US, CA, JP	1	Tail lamp	Baklykta	3
0130	1	95 22 491		42,56), LH, US, CA, JP	1	Tail lamp	Baklykta	3
0140	1	95 22 509		42,56), RH, US, CA, JP	1	Tail lamp	Baklykta	3
0160	1	91 23 159		42,57), LH, US, CA, JP	1	Tail lamp	Baklykta	3
0170	1	91 23 167		42,57), RH, US, CA, JP	1	Tail lamp	Baklykta	3
0190	1	95 24 513		201), 1989-, LH, AU, ME, FE	1	Tail lamp	Baklykta	3
0200	1	95 24 521		201), 1989-, RH, AU, ME, FE	1	Tail lamp	Baklykta	3
0250	1	91 23 118		42), LH, AU, ME, FE (9524539)	1	Tail lamp	Baklykta	3
0260	1	91 23 126		42), RH, AU, ME, FE (9524547)	1	Tail lamp	Baklykta	3
0270	2	95 22 616			1	.Seal	.Tätning	5
0280	3	95 24 455		LH, SE, FI, EU, GB	1	Bulb socket	Lamphållare	5
0290	3	95 24 463		RH, SE, FI, EU, GB	1	Bulb socket	Lamphållare	5
0310	3	95 22 590		LH, US, CA	1	Bulb socket	Lamphållare	5
0320	3	95 22 608		RH, US, CA	1	Bulb socket	Lamphållare	5
0340	3	95 22 590		LH, JP, AU, ME, FE	1	Bulb socket	Lamphållare	5
0350	3	95 22 608		RH, JP, AU, ME, FE	1	Bulb socket	Lamphållare	5
0370	4	95 08 904		SE, FI, EU, GB 40/238 297 006	2	Bulb	Glödlampa	1
0380	4	85 32 756		US,CA,JP, 40/238 291 009	2	Bulb	Glödlampa	1
0390	4	*85 37 672*		AU,ME,FE, 40/238 292 007 NLS - USE 4320594	2	Bulb	Glödlampa	1
0410	5	71 54 719		SE, FI, EU, GB, AU,ME,FE 40/238 290 001	6	Bulb	Glödlampa	1
0420	5	85 35 692		US,CA,JP, 40/238 304 000	6	Bulb	Glödlampa	1
0430	6	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0440	7	73 98 423			2	Nut	Mutter	5
0450	8	95 24 570			2	Knob	Vred	3
0460	9	91 22 110		LH	1	Cover	Kåpa	5
0470	9	91 22 128		RH	1	Cover	Kåpa	5
0480	10	91 22 102			1	.Felt strip	.Filtlist	6
0500	11	95 26 567			2	Lighting	Belysning	5
0520	12	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1


42. GREY. GRÅ.
56. Ch -J1024464.
57. Ch J1024465-.
201. Untinted. Ofärgat.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

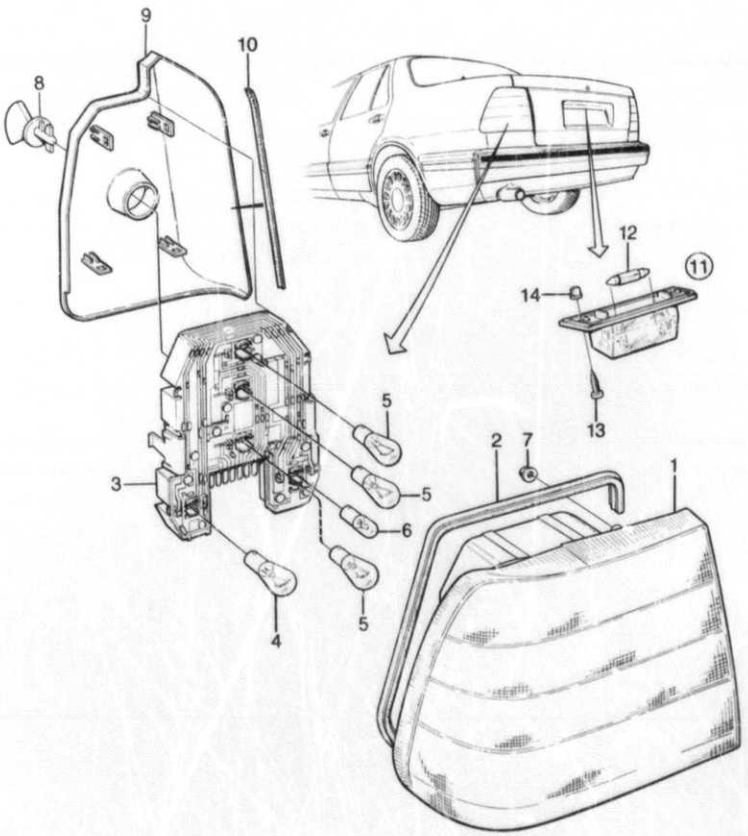

R 9771 - 9000.

0610	Pos.	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	13	79 22 230			4	Screw	Skruv	5
0540	14	*92 36 589*		1988 NLS - USE 4013165	4	Clip	Clips	5
0550	14	40 13 165		500), 1989-	4	Clip	Clips	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C02

Stop light
High mounted

Stopplykta
Högt monterad

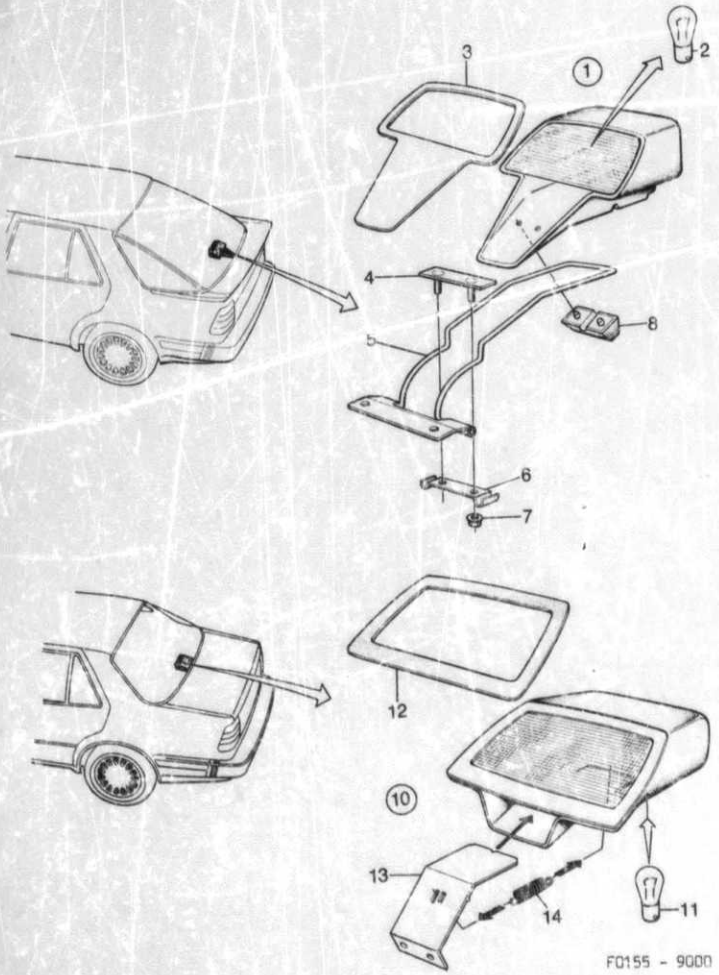

0650	Pos	Part No/Artnr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	95 67 223		5D, (9509522)	1	Stop light	Stopplykta	3
0040	2	85 35 692		40/238 304 000	1	. Bulb	. Glödlampa	1
0060	3	95 14 233			1	. Seal	. Tätning	3
0080	4	95 14 969		5D	1	Attaching plate	Fästplåt	6
0100	5	95 18 267		5D	1	Tensioner	Spännare	6
0120	6	95 14 951		5D	1	Clamping-piece	Klämstycke	6
0140	7	80 29 555		-1987, 5D	2	Nut	Mutter	5
0142	7	81 51 227		1988-, 5D	2	Nut	Mutter	5
0150	8	96 59 301		1986-, 5D	1	Gasket	Packning	6
0160								
0170	10	85 98 296		4D	1	Stop light	Stopplykta	3
0180	11	85 35 692		40/238 304 000	1	. Bulb	. Glödlampa	1
0190	12	95 51 853			1	. Seal	. Tätning	3
0200	13	95 24 018		1988, 4D	1	Bracket	Konsol	6
0205	13	40 11 300		500), 1989-, 4D	1	Bracket	Konsol	6
0210	14	95 53 512		4D	1	Spring	Fjäder	6

500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C04

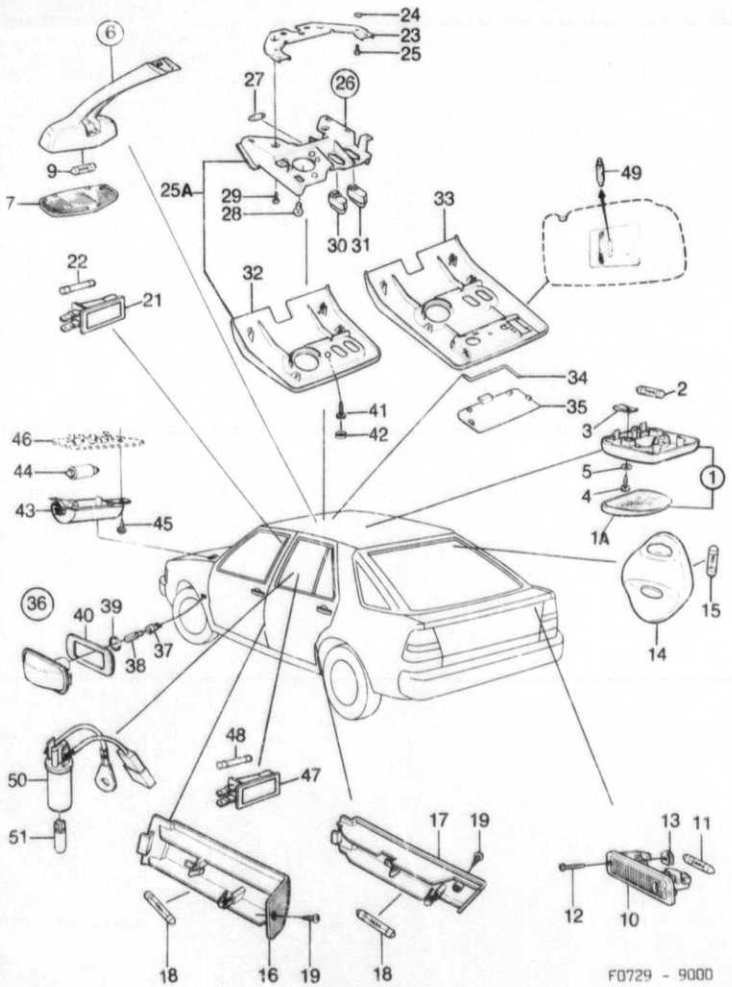

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 12 252		-1988, (9501933)	1	Dome lamp	Taklampa	4
0025	1	40 60 398		500), 1989-	1	Dome lamp	Taklampa	4
0035	1A	40 60 406		(9503152)	1	.Lamp lens	.Lampglas	6
0040	2	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
0046	3	79 77 333			2	Nut	Mutter	3
0048	4	79 63 937			2	Screw	Skruv	5
0050	5	84 28 997			2	Washer	Bricka	5
0060	6	95 01 941			1	Lamp	Lampa	5
0061						rear view mirror	backspegel	
0070	7	95 02 055			1	.Lamp lens	.Lampglas	6
0080	9	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0100	10	85 77 801			1	Lamp	Lampa	3
0120						boot	bagagerum	
0140	11	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
0160	12	79 70 346		74)	2	Screw	Skruv	5
0161	12	79 70 346		75)	2	Screw	Skruv	5
0162	12	79 71 393		75), 4D	2	Screw	Skruv	5
0180	13	79 72 771		74)	2	Clip nut	Clipsmutter	5
0181	13	79 72 771		75)	2	Clip nut	Clipsmutter	5
0182	13	95 45 435		75), 4D	2	Clamp	Klämma	5
0200	14	95 00 273			2	Lamp	Lampa	4
0220	15	95 06 080			1	.Bulb	.Glödlampa	2
0245	16	95 64 253		LH, (9501974)	1	Lamp	Lampa	4
0246						front door	framdörr	
0265	16	95 64 261		RH, (9501982)	1	Lamp	Lampa	4
0266						front door	framdörr	
0280	17	95 01 990		5), LH	1	Lamp	Lampa	3
0281						rear door	bakdörr	
0285	17	95 63 677		6), LH, (9518598)	1	Lamp	Lampa	4
0286						rear door	bakdörr	
0300	17	95 02 006		5), RH	1	Lamp	Lampa	3
0301						rear door	bakdörr	
0310	17	95 63 685		6), RH, (9518606)	1	Lamp	Lampa	4
0311						rear door	bakdörr	
0320	18	70 84 197		40/238 261 002	4	Bulb	Glödlampa	1
0340	19	79 22 214		-1985	4	Screw	Skruv	5
0350	19	79 63 937		1986-	4	Screw	Skruv	5
0400	21	85 53 794		-1986	1	Lighting	Belysning	4
0401						glove compartment	handskfack	
0410	21	*96 63 378*		1987-1988	1	Lamp	Lampa	9
0411				NLS - USE 9592098		glove compartment	handskfack	
0415	21	95 92 098		500), 1989-	1	Lamp	Lampa	9
0416						glove compartment	handskfack	
0420	22	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0430	23	97 65 595			1	Bracket	Konsol	6
0440	24	79 74 983			2	Cage nut	Korgmutter	5
0460	25	92 59 524			2	Screw	Skruv	5
0470	25A	*96 98 036*		85), 1985		Kit	Sats	6
0475				See page 3A-175, 2-H08		roof bracket	takkonsol	
0475				NLS - USE 4037701, 9660176				
0475	26	*97 65 603*		85,165), 1985 NLS - USE 4037701	1	Base plate	Bottenplatta	6
0480	26	*96 60 184*		1986-1987 NLS - USE 4037701	1	Base plate	Bottenplatta	6
0490								
0490								

5. Ch --G1001658.
6. Ch G1001659--.
74. Ch --J1028805, --J1029670.
75. Ch J1028806--, J1029671--.
85. For cars without el. sun roof. För bilar utan el. soltak.
165. Part of 96 98 036, (97 65 603). Del av 96 98 036, (97 65 603).
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C06

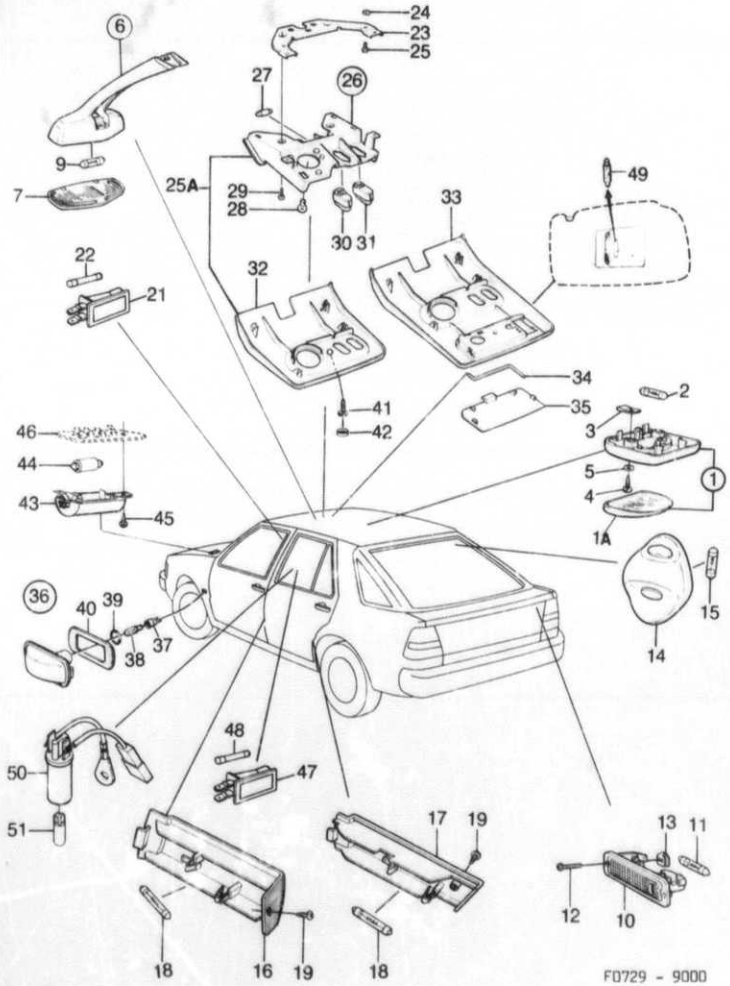

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0495	26	*95 75 903*		1983- NLS - USE 4037701	1	Base plate	Bottenplatta	6
0500	27	70 84 197		40/238 261 002	1	. Bulb	. Glödlampa	1
0520	28	95 08 870		-1985, 40/238 296 008	1	. Bulb	. Glödlampa	2
0530	28	95 06 080		1986-	1	. Bulb	. Glödlampa	2
0540	29	79 22 347			4	Screw	Skruv	5
0560	30	95 05 447			1	Switch reading lamp	Strömställare läslampa	3
0580								
0600	31	95 05 439			1	Switch interior illum.	Strömställare innerbelysning	3
0620								
0640	32	96 60 176		85,165), 1985	1	Cover	Lock	
0650	32	96 60 176		85), 1986-	1	Cover	Lock	
0660	33	• 97 65 553		166)	1	Cover	Lock	6
0700	34			See page 8A-013, 4-F14		Crank	Vev	
0720	35	97 66 114		166)	1	Cover	Lock	6
0745	36	91 24 132		(9513227,9521832)	2	Side light	Sidolampa	3
0760	37	95 21 857		(9512872)	1	. Bulb socket	. Lamphållare	6
0780	38	95 12 880		40/238 300 008	1	. Bulb	. Glödlampa	1
0800	39	95 12 898			1	. Gasket	. Packning	6
0820	40	*95 12 906*		-1988 NLS - USE 9124140	1	. Seal	. Tätning	6
0825	40	91 24 140		500), 1989-	1	. Seal	. Tätning	6
0830	41	79 75 535		1986	1	Screw	Skruv	5
0835	41	79 71 351		1987-	1	Screw	Skruv	5
0840	42	97 99 354		1986-	1	Cover	Täcklock	5
0850	43	*95 14 258*		1987- NLS - USE 4320339	1	Engine compartment lamp	Motorrumslampa	5
0860	44	95 14 324		1987-	1	Bulb	Glödlampa	3
0870	45	79 22 800		1987-	1	Screw	Skruv	5
0880	46			See page 8B-031, 5-B08		Attaching plate	Fästplåt	
0890	47	*95 09 597*		-1988	1	Lamp centre console	Lampa mittkonsol	2
0891				NLS - USE 9509639				
0895	47	95 69 948		500), 1989-	1	Lighting centre console	Belysning mittkonsol	4
0896								
0900	48	70 84 197		40/238 261 002	1	. Bulb	. Glödlampa	1
0910	49	95 78 618		500), 1989-	2	Lamp sun visor	Lampa solskydd	3
0911								
0920	50	85 78 775		A	1	Bulb socket gear position indicator	Lamphållare växellägesindikator	4
0921								
0930	51	85 00 613		A	1	Bulb gear position indicator	Glödlampa växellägesindikator	2
0931								

85. For cars without el. sun roof. För bilar utan el. soltak.
165. Part of 96 98 036, (97 65 603). Del av 96 98 036, (97 65 603).
166. For cars with el. sun roof. För bilar med el. soltak.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C08

Horn
Signalhorn

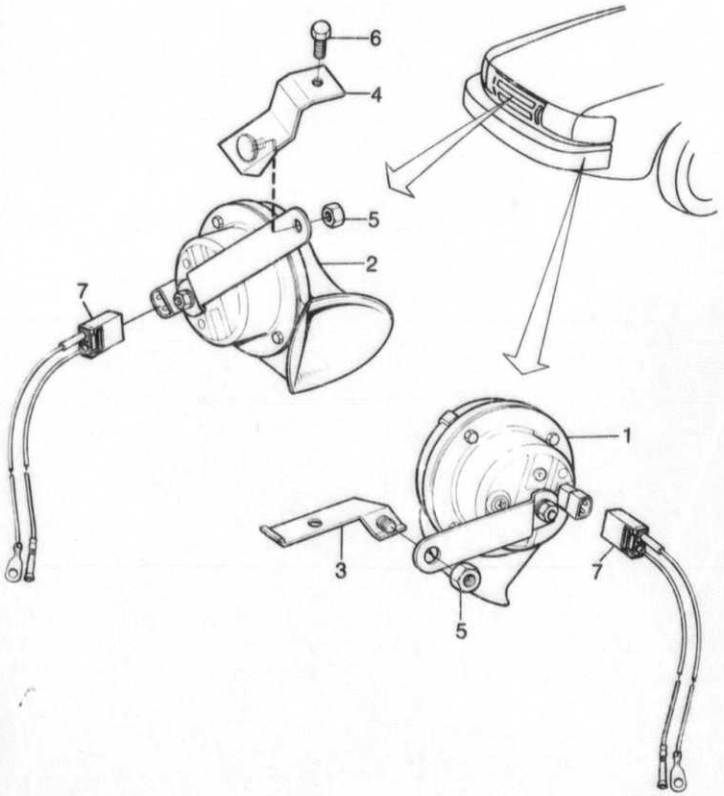

F4156 9000

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	95 29 413		LH, (9502535)	1	Horn	Signalhorn	4
0035						high tone	hög ton	
0050	2	95 29 421		RH, (9502543)	1	Horn	Signalhorn	4
0055						low tone	låg ton	
0060	3	95 02 550		-1988, LH	1	Bracket	Fäste	6
0063	3	95 66 696		500), 1989-, LH	1	Bracket	Fäste	6
0064	4	95 07 989		-1988, RH	1	Bracket	Fäste	6
0065	4	40 13 371		500), 1989-, RH, (9565615)	1	Bracket	Fäste	6
0070	4	40 13 579		500), 1989-, RH, 4D	1	Bracket	Fäste	6
0100	5	80 74 106		-1987	2	Nut	Mutter	5
0110	5	81 51 235		1988-	2	Nut	Mutter	5
0120	6	80 59 743			1	Screw	Skruv	5
0130	7	85 48 547		-1988	2	Connection	Skarv	5


500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

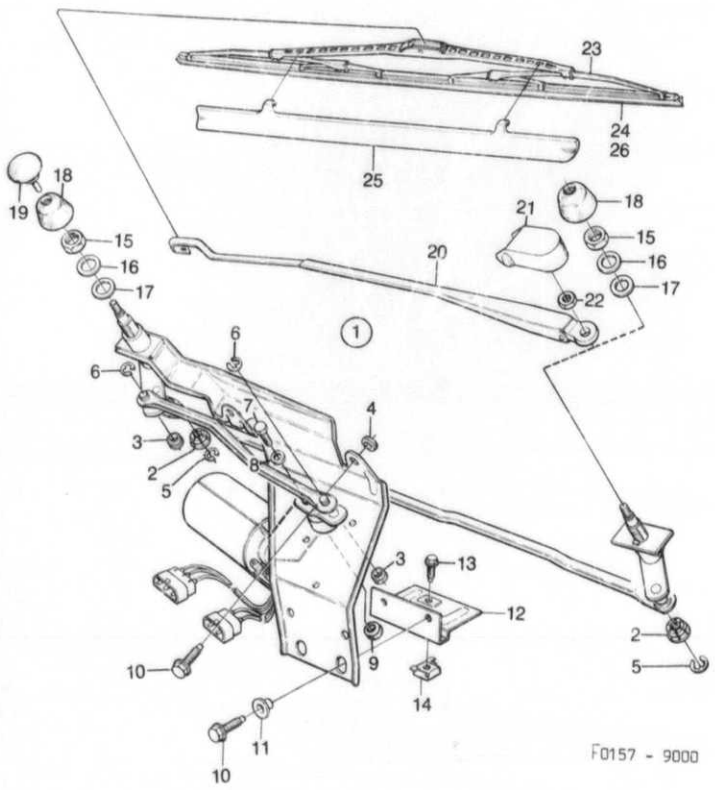

0790	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 20 486			1	Wiper unit	Torkaraggregat	5
0020	2	85 59 320			2	.Bushing	.Bussning	3
0030	3	85 04 029		7)	2	.Bushing	.Bussning	3
0040	3	85 59 320		8)	2	.Bushing	.Bussning	3
0050	4	85 44 421			4	.Bushing	.Bussning	3
0060	5	*79 36 016*		NLS - USE 8123473	2	.E-circlip	.Spårryttare	5
0070	6	79 63 135			2	.E-circlip	.Spårryttare	3
0080	7	80 19 895			1	.Screw	.Skruv	5
0090	8	80 29 951			1	.Washer	.Bricka	5
0100	9	95 08 318			1	.Seal	.Tätning	4
0110	10	79 72 466		(8267205)	4	Screw	Skruv	5
0120	11	85 44 413			4	Sleeve	Hylsa	5
0130	12	95 23 432		(9506684)	1	Bracket	Konsol	5
0140	13	79 72 466		(8267205)	1	Screw	Skruv	5
0150	14	79 75 006			1	Nut	Mutter	5
0160	15	79 65 585			2	Nut	Mutter	5
0170	16	79 78 083		(7081730)	2	Washer	Bricka	5
0180	17	*95 09 621*		NLS - USE 7978083, 9563263	2	Seal	Tätning	5
0190	18	40 14 619		(9504416)	2	Seal	Tätning	4
0200	19	95 04 424			1	Plug	Plugg	4
0210	20	95 29 991		LH, (9518754)	1	Wiper arm	Torkararm	3
0220	20	95 29 702		RH, (9518762)	1	Wiper arm	Torkararm	3
0230	21	95 26 237			1	.Cover	.Kåpa	3
0240	22	80 74 106			2	Nut	Mutter	5
0250	23	*95 29 488*		(9522095) NLS - USE 4381844	2	Wiper blade	Torkarblad	3
0255	23	• 44 48 049		211), PA	2	Wiper blade	Torkarblad	3
0257	23	• 44 48 056		211), RHD, PA	2	Wiper blade	Torkarblad	3
0260	24		S	1)	1	.Profile	.Profil	
0270	25	95 12 567			1	Spoiler	Spoiler	3
0280	26	85 47 374		See page 3A-173, 2-H06	X	Profiled rubber kit	Gummiprofilsats	2
0285	26	• 44 45 064		211), PA See page 3A-173, 2-H06	X	Profiled rubber kit	Gummiprofilsats	2
0290								

1. Not as separate spare part. Ej som separat reservdel.
7. Ch LHD --F4003688, RHD --G4000089.
8. Ch LHD F4003689--, RHD G4000090--.
211. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C12

Windscreen wiper 1986-1987

Vindrutetorkare 1986-1987

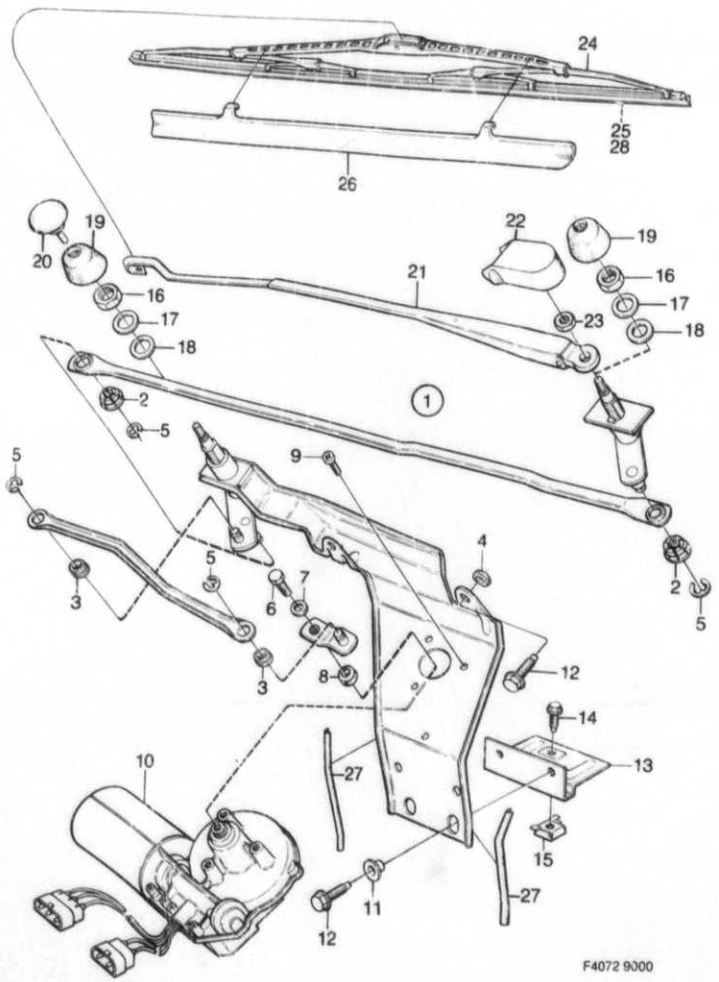

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 60 133			1	Linkage	Länksystem	5
0020	1	85 48 489		RHD	1	Linkage	Länksystem	5
0030	2	85 59 320			2	▪Bushing	▪Bussning	3
0040	3	85 59 320			2	▪Bushing	▪Bussning	3
0050	4	85 44 421			4	▪Bushing	▪Bussning	3
0060	5	*79 36 016*		NLS - USE 8123473	4	▪E-circlip	▪Spårryttare	5
0070	6	80 19 895			1	Screw	Skruv	5
0080	7	80 29 951			1	Washer	Bricka	5
0090	8	95 08 318			1	Seal	Tätning	4
0100	9	80 59 552		RHD	3	Screw	Skruv	5
0110	10	95 19 448			1	Engine	Motor	4
0120	11	85 44 413			4	Sleeve	Hylsa	5
0140	12	79 72 466			4	Screw	Skruv	5
0160	13	95 23 432			1	Bracket	Konsol	5
0180	14	79 72 466			1	Screw	Skruv	5
0190	15	79 75 006			1	Nut	Mutter	5
0200	16	79 65 585			2	Nut	Mutter	5
0210	17	79 78 083			2	Washer	Bricka	5
0220	18	*95 09 621*		-1987 NLS - USE 7978083, 9563263	2	Seal	Tätning	5
0230	19	40 14 619			2	Seal	Tätning	4
0240	20	95 04 424			1	Plug	Plugg	4
0250	21	95 29 991		LH, (9518754)	1	Wiper arm	Torkararm	3
0260	21	95 29 702		RH, (9518762)	1	Wiper arm	Torkararm	3
0270	21	95 29 561		LH, RHD, (9518770)	1	Wiper arm	Torkararm	3
0280	21	95 29 504		RH, RHD, (9518788)	1	Wiper arm	Torkararm	3
0290	22	95 26 237			1	▪Cover	▪Kåpa	3
0300	23	80 74 106			2	Nut	Mutter	5
0310	24	*95 22 095*		(9529488 SEE 1988-), L=510 MM NLS	2	Wiper blade	Torkarblad	3
0320	24	*95 22 095*		RHD, (9523754 SEE 1988-) L=510 MM NLS	2	Wiper blade	Torkarblad	3
0325	24	• 44 48 049		211), PA	2	Wiper blade	Torkarblad	3
0327	24	• 44 48 056		211), RHD, PA	2	Wiper blade	Torkarblad	3
0330	25		S	1)	1	▪Profile	▪Profil	
0340	26	95 12 567		167)	1	Spoiler	Spoiler	3
0350	27	95 28 910		39)	2	Protection	Skydd	5
0360	28	85 47 374		See page 3A-173, 2-H06	X	Profiled rubber kit	Gummiprofilsats	2
0370	28	• 44 48 064		211), PA See page 3A-173, 2-H06	X	Profiled rubber kit	Gummiprofilsats	2
0380								


1. Not as separate spare part. Ej som separat reservdel.
39. Ch H1004536-, H8000069-.
167. For 95 22 095. För 95 22 095.
211. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

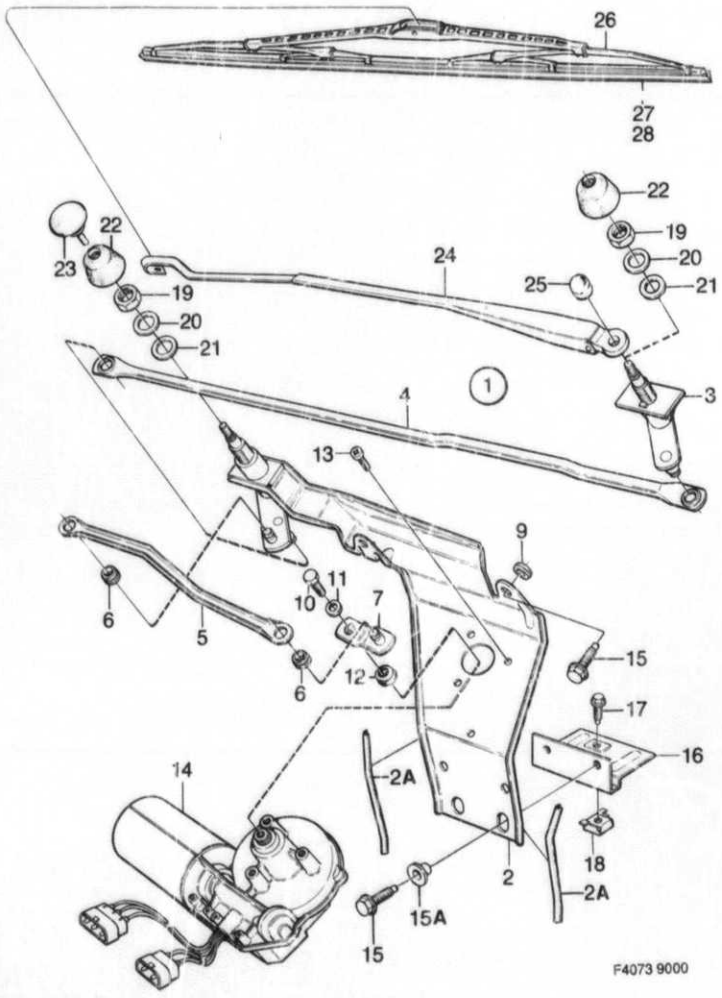

0810	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	40 60 133		59)	1	Linkage	Länksystem	5
0020	1	85 48 489		RHD	1	Linkage	Länksystem	5
0030	2	91 20 502		4D	1	.Beam	.Balk	5
0033	2	91 20 502		59)	1	.Beam	.Balk	5
0034	2A	95 28 910			2	..Protection	..Skydd	5
0040	3	91 22 409		59)	1	.Spindle	.Spindel	4
0045	3	91 22 409		4D	1	.Spindle	.Spindel	4
0047	3	91 22 409		RHD	1	.Spindle	.Spindel	4
0050	4	91 20 536		59)	1	.Connecting rod	.Vevstake	5
0053	4	91 20 536		4D	1	.Connecting rod	.Vevstake	5
0060	4	91 20 528		61), RHD	1	.Connecting rod	.Vevstake	5
0063	4	91 20 528		4D, RHD	1	.Connecting rod	.Vevstake	5
0070	5	91 20 510		59)	1	.Connecting rod	.Vevstake	5
0073	5	91 20 510		4D	1	.Connecting rod	.Vevstake	5
0075	5	91 20 510		RHD	1	.Connecting rod	.Vevstake	5
0080	6	85 59 320		58)	2	..Bushing	..Bussning	3
0085	7	91 22 383		59)	1	.Crank arm	.Vevarm	5
0090	7	91 22 383		4D	1	.Crank arm	.Vevarm	5
0110	9	85 44 421			4	.Bushing	.Bussning	3
0120	10	80 19 895			1	Screw	Skruv	5
0130	11	80 29 951			1	Washer	Bricka	5
0140	12	95 08 318			1	Seal	Tätning	4
0150	13	80 59 552		RHD	3	Screw	Skruv	5
0160	14	95 19 448			1	Engine	Motor	4
0170	15	79 72 466			4	Screw	Skruv	5
0175	15A	85 44 413			4	Sleeve	Hylsa	5
0180	16	95 23 432			1	Bracket	Konsol	5
0190	17	79 72 466			1	Screw	Skruv	5
0200	18	79 75 006			1	Nut	Mutter	5
0210	19	79 65 585			2	Nut	Mutter	5
0220	20	79 78 083			2	Washer	Bricka	5
0230	21	95 63 263			2	Plastic washer	Plastbricka	5
0245	22	40 14 619			2	Seal	Tätning	4
0250	23	95 04 424			1	Plug	Plugg	4
0260	24	95 29 991		LH	1	Wiper arm	Torkararm	3
0270	24	95 29 702		RH	1	Wiper arm	Torkararm	3
0280	24	95 29 561		LH, RHD	1	Wiper arm	Torkararm	3
0290	24	95 29 504		RH, RHD	1	Wiper arm	Torkararm	3
0300	25	95 65 912			2	Cap nut	Kupolmutter	5
0310	26	*95 29 488*		L=525 MM, (9522095) NLS - USE 4381844	2	Wiper blade	Torkarblad	3
0320	26	*95 23 754*		RHD, L=525 MM,(9522095) NLS - USE 4381851	2	Wiper blade	Torkarblad	3
0325	26	• 44 48 049		211), PA	2	Wiper blade	Torkarblad	3
0327	26	• 44 48 056		211), PHD, PA	2	Wiper blade	Torkarblad	3
0330	27		S	1)	1	.Profile	.Profil	
0340	28	85 47 564		See page 3A-173, 2-H06	X	Profiled rubber kit	Gummiprofilsats	2
0350	28	• 44 48 064		211), PA	X	Profiled rubber kit	Gummiprofilsats	2
0360				See page 3A-173, 2-H06				

1. Not as separate spare part. Ej som separat reservdel.
58. Ch -J1023624, -J2013799, -J8001176.
59. Ch J1023625-, J2013800-, J8001177-.
61. Ch J1022296-.
211. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C16

Headlamp wiper
Strålkastartorkare

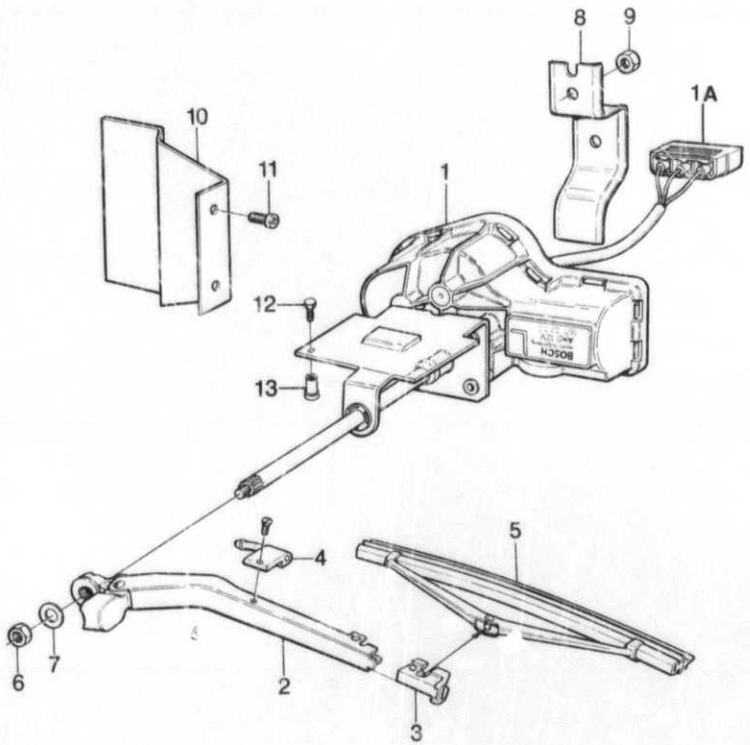

R 9774 - 9000

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 09 688		LH	1	Electric motor	Elmotor	3
0040	1	95 09 696		RH	1	Electric motor	Elmotor	3
0050	1	*95 24 232*		LH, 4D NLS - USE 4094942	1	Electric motor	Elmotor	3
0055	1	*95 24 224*		RH, 4D NLS - USE 4094926	1	Electric motor	Elmotor	3
0057	1A	95 03 327		4D	1	.Contact housing	.Kontakthus	4
0059				See page 3B-025, 3-B02				
0060	2	95 02 584		LH	1	Wiper arm	Torkararm	4
0080	2	95 02 592		RH	1	Wiper arm	Torkararm	4
0085	2	95 68 973		LH, 4D	1	Wiper arm	Torkararm	4
0087	2	95 68 981		RH, 4D	1	Wiper arm	Torkararm	4
0100	3	95 09 100			1	.Adapter	.Adapter	5
0110	3	95 58 149		4D	1	.Adapter	.Adapter	5
0115	4	95 09 118		LH	1	.Nozzle	.Munstycke	2
0120	4	95 09 126		RH	1	.Nozzle	.Munstycke	2
0150	4	95 68 999		LH, 4D	1	.Nozzle	.Munstycke	2
0155	4	95 69 005		RH, 4D	1	.Nozzle	.Munstycke	2
0160	5	*95 13 269*	S	-1988 NLS - USE 4095063	2	Wiper blade	Torkarblad	2
0165	5	*91 20 890*	S	500), 1989- NLS - USE 4095063	2	Wiper blade	Torkarblad	2
0170	5	*95 56 309*		1988, 4D NLS - USE 9120882	2	Wiper blade	Torkarblad	2
0175	5	91 20 882		500), 1989-, 4D	2	Wiper blade	Torkarblad	2
0180	6	80 29 548		-1987	2	Nut	Mutter	5
0190	6	81 51 219		1988-	2	Nut	Mutter	5
0195	6	80 29 548		4D	2	Nut	Mutter	5
0200	7	79 72 284			1	Washer	Bricka	5
0220	8	95 01 495			2	Bracket	Fäste	5
0230	9	80 29 555		-1987	2	Nut	Mutter	5
0232	9	81 51 227		1988-	2	Nut	Mutter	5
0240	10	*95 01 636*		55), -1987 NLS - USE 9124124	1	Shield	Sköld	5
0250	10	91 24 124		55), 1988-	1	Shield	Sköld	5
0260	11	79 22 420			2	Screw	Skruv	5
0270	12	79 65 544		4D	4	Screw	Skruv	5
0275	13	82 78 467		1988, 4D	4	Nut	Mutter	5
0277	13	92 23 082		500), 1989-, 4D	4	Nut	Mutter	5
0280		*85 47 077*		See page 3A-173, 2-H06	X	Wiper blade kit	Torkarbladssats	2
0280				NLS - USE 8548042				
0290		85 47 408		4D	X	Wiper blade kit	Torkarbladssats	2
0300				See page 3A-173, 2-H06				

55. For cars with oil cooler. För bilar med oljekylare.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C18

Washer unit
Spolaranläggning

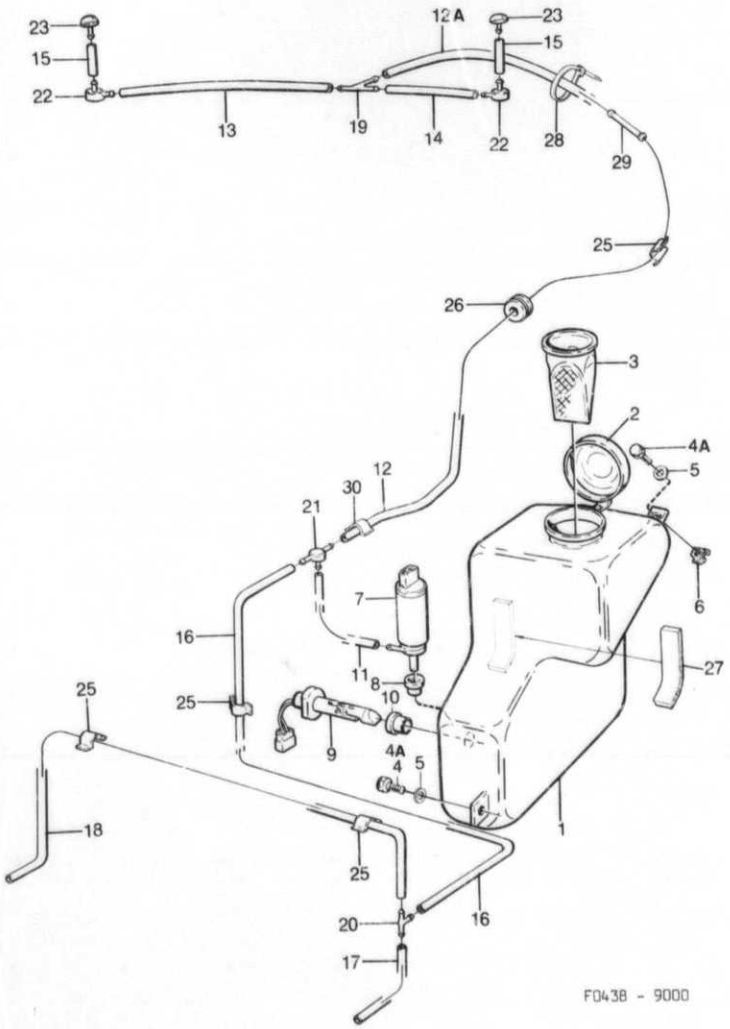

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 00 471		-1987	1	Washer fluid reservoir	Spolarburk	3
0035	1	95 24 992		1988-, (9524984)	1	Washer fluid reservoir	Spolarburk	3
0040	2	85 18 557			1	Cover	Lock	2
0075	3	95 66 332		(8560161)	1	Filter	Filter	4
0080	4	79 76 947		-1986	1	Screw	Skruv	5
0090	4A	*80 19 911*		-1986 NLS - USE 7399603	1	Screw	Skruv	5
0095	4A	*80 19 911*		1987- NLS - USE 7399603	2	Screw	Skruv	5
0100	5	73 11 772		-1986	1	Washer	Bricka	5
0110	5	79 75 469		1987-	2	Washer	Bricka	5
0120	6	79 75 006			1	Nut	Mutter	5
0140	7	95 06 379			1	Washer pump	Spolarpump	2
0170	8	95 28 795		(9512583)	1	Rubber bushing	Gummibussning	3
0180	9	95 07 633			1	Level guard	Nivåvakt	5
0200	10	95 07 617			1	Bushing	Bussning	3
0220	11	85 52 044		L=60 MM	1	Hose	Slang	5
0240	12	95 06 395		-1986, L=1800 MM	1	Hose	Slang	5
0245	12	95 24 844		1987-, L=950 MM	1	Hose	Slang	5
0250	12A	95 26 781		1987-, L=360 MM	1	Hose	Slang	5
0260	13	85 33 366		L=450 MM	1	Hose	Slang	5
0280	14	95 06 387		L=90 MM	1	Hose	Slang	5
0300	15	85 73 677		L=30 MM	2	Hose	Slang	5
0320	16	85 33 358		L=350 MM	1	Hose	Slang	5
0340	17	95 06 411		L=250 MM	1	Hose	Slang	5
0360	18	95 06 403		L=1250 MM	1	Hose	Slang	5
0380	19	85 09 002			2	Tube	Rör	2
0400	20	85 44 660			1	T-pipe	T-rör	2
0430	21	95 69 013		(8573651)	1	Valve	Ventil	3
0440	22	85 73 669			2	Valve	Ventil	
0460	23	85 04 144		154,169)	1	Nozzle	Munstycke	2
0465	23	85 04 144		155,169)	2	Nozzle	Munstycke	2
0480	23	*85 44 728*		154,170) NLS - USE 4254645	1	Nozzle	Munstycke	2
0500	25	79 77 176		-1986	4	Clip	Clips	5
0520	26	79 61 337			1	Bushing	Bussning	6
0540	27	75 35 404		1986-	1	Seal	Tätning	4
0550	28	79 71 880			1	Tensioning band	Spännband	4
0560	29	85 08 848		1987-	1	Junction pipe	Skarvrör	5
0570	30	85 13 574		1987-	1	Clip	Clips	6

154. Ch --K8001441, --L1002392, --L2001692.
155. Ch K8001442-, L1002393-, L2001693-.
169. With two holes. Med två hål.
170. With one hole. Med ett hål.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C20

Central lock

Centrallås

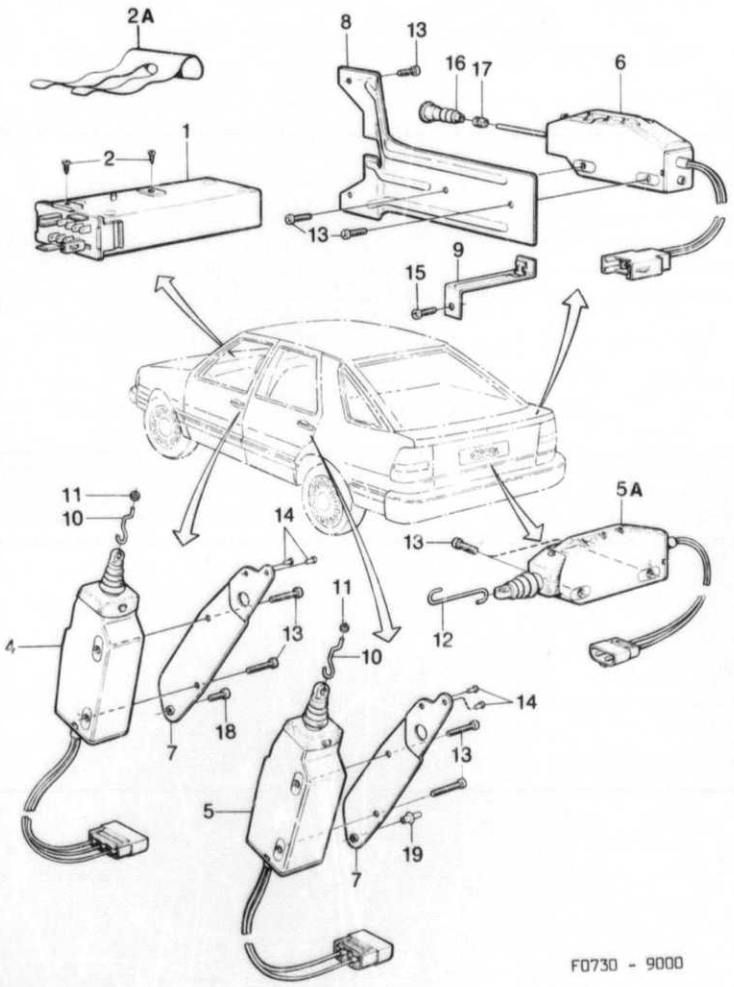

F0730 - 9000

0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	85 47 622		40)	1	Electronic unit	Elektronikenhet	3
0021				See page 3A-175, 2-H08				
0022	1	95 29 975		41)	1	Electronic unit	Elektronikenhet	3
0023				See page 8A-053, 4-H06		Door lock	Dörrlås	
0040	2	79 71 344		40)	2	Screw	Skruv	5
0050	2A	85 65 855		41)	1	Clip	Clips	6
0060	4	85 91 216			1	Control device	Styrdon	3
0080	5	85 91 224			3	Electric motor	Elmotor	3
0090	5A	40 12 639			1	Electric motor	Elmotor	3
0100	6	95 03 723			1	Electric motor	Elmotor	3
0120	7	95 03 079		LH	2	Bracket	Konsol	6
0140	7	95 03 061		RH	2	Bracket	Konsol	6
0160	8	95 02 691			1	Bracket	Konsol	6
0180	9	*95 02 725*		-1987 NLS - USE 9124454	1	Clamp	Klammer	6
0190	9	91 24 454		1988-	1	Clamp	Klammer	6
0200	10	*95 03 087*		-1988 NLS - USE 9564881	4	Pull rod	Dragstång	5
0210	10	95 64 881		500), 1989-	4	Pull rod	Dragstång	5
0220	11	95 05 058			4	Bushing	Bussning	4
0240	12	95 02 741			1	Pull rod	Dragstång	5
0260	13	79 71 823			12	Screw	Skruv	5
0280	14	95 08 094			8	Rivet	Nit	5
0300	15	79 22 420			1	Screw	Skruv	5
0320	16	95 02 709			1	Bellows	Bälg	4
0340	17	95 02 717			1	Bushing	Bussning	4
0360	18	79 69 223			2	Screw	Skruv	5
0361	19	79 69 223		-1988	2	Screw	Skruv	5
0362	19	92 55 845		500), 1989-	2	Rivet	Nit	5

40. Ch --J1000152, --J2000020, --J8000006.
41. Ch J1000153--, J2000021--, J8000007--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C22

Switch
Strömställare

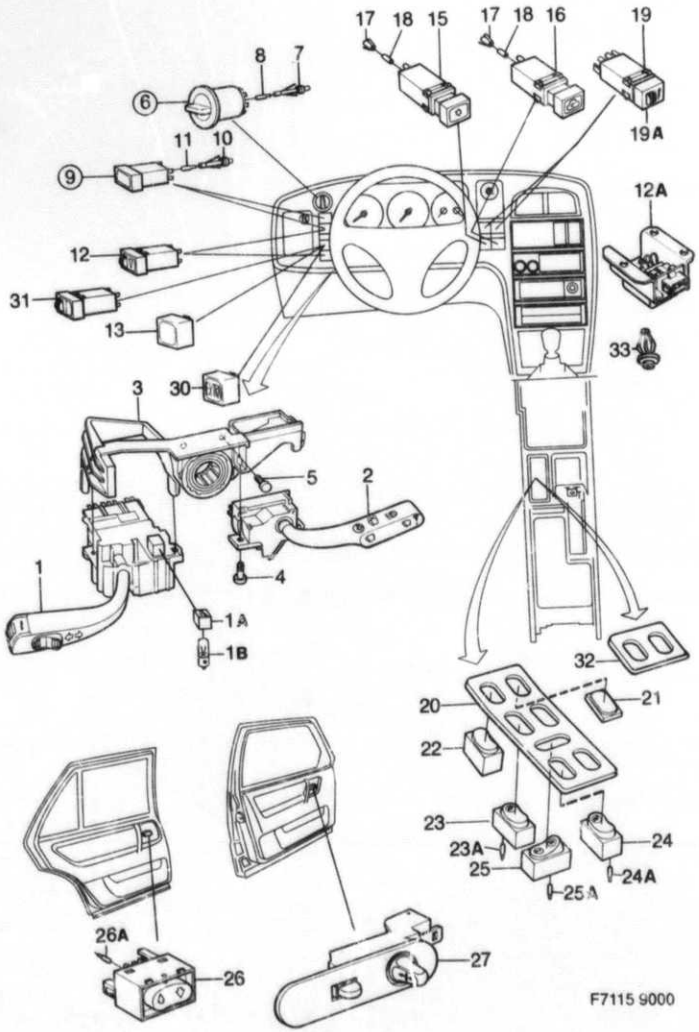

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	95 17 533		171), (9505413)	1	Switch	Strömställare	
0040						direction indicator	blinkers	
0050	1	95 18 242		171), 1987	1	Switch	Strömställare	2
0060						direction indicator	blinkers	
0070	1	95 26 054		171), 1988-	1	Switch	Strömställare	2
0080						direction indicator	blinkers	
0090	1	95 17 517		172), 1986	1	Switch	Strömställare	
0100						direction indicator	blinkers	
0110	1	95 18 218		172), 1987	1	Switch	Strömställare	2
0120						direction indicator	blinkers	
0130	1	95 26 039		172), 1988-	1	Switch	Strömställare	2
0140						direction indicator	blinkers	
0150	1A	95 18 309			1	.Button	.Knapp	5
0160	1B	95 18 291			1	.Bulb	.Glödlampa	1
0170	2	95 00 299		-1986	1	Switch	Strömställare	3
0180						windscreen wiper	vindrutetorkare	
0190	2	95 18 226		1987-	1	Switch	Strömställare	2
0200						windscreen wiper	vindrutetorkare	
0210	2	95 23 812		173), 1988-	1	Switch	Strömställare	2
0220						windscreen wiper	vindrutetorkare	
0230	3	95 00 513			1	Retainer	Hållare	6
0240	3	91 23 464		45)	1	Bracket	Hållare	6
0250	4	*95 05 645*		-1988 NLS - USE 7982333	4	Screw	Skruv	5
0255	4	79 82 333		500), 1989-	4	Screw	Skruv	5
0260	5	80 59 396		(7973373, 7382333)	3	Screw	Skruv	5
0270	6	85 90 838			1	Switch	Strömställare	3
0280						light switch	ljusomkopplare	
0290	7	85 53 356			1	.Bracket	.Hållare	4
0300	8	85 00 613			1	.Bulb	.Glödlampa	2
0310	9	85 66 762		1985	1	Switch	Strömställare	3
0320						rear fog light	dimbaklykta	
0350	9	*95 12 666*		1986	1	Switch	Strömställare	3
0360				NLS - USE 9523747		rear fog light	dimbaklykta	
0370	9	95 23 747		1987-, SE, FI, EU, GB	1	Switch	Strömställare	3
0380						rear fog light	dimbaklykta	
0410	9	95 23 762		US, (9512674)	1	Switch	Strömställare	3
0420						front fog light	dimstrålkastare	
0425	10	85 53 3?5		1985	1	.Bracket	.Hållare	4
0427	11	85 00 613		1985	1	.Bulb	.Glödlampa	2
0430	12	95 05 751		1985	1	Rheostat	Reostat	3
0440						instrument lighting	instrumentbelysning	
0450	12	95 17 806		1986-	1	Rheostat	Reostat	3
0460						instrument lighting	instrumentbelysning	
0490	12A	95 22 079		(9517814)	1	Rheostat	Reostat	3
0500						cooling body	kylkropp	
0510	13	*85 42 912*		-1988 NLS - USE 9568122	X	Button	Knapp	5
0520	13	95 68 122		500), 1989-	X	Button	Knapp	5
0530	15	95 08 078		-1985, AC	1	Switch	Strömställare	3
0540	16	95 08 086		-1985	1	Switch	Strömställare	3
0550						recirculation	recirkulation	
0560	17	85 53 315		1985	1	.Bracket	.Hållare	4
0570	18	85 00 613		1985	1	.Bulb	.Glödlampa	2
0580	15	*95 12 682*		1986, AC NLS - USE 9523788	1	Switch	Strömställare	3
0580								
0590	15	95 23 788		1987-, AC	1	Switch	Strömställare	3
0600	16	95 12 690		1986-	1	Switch	Strömställare	3
0610						recirculation	recirkulation	

45. AIR-BAG.
171. With speed control system. Med fartkontrollsystem.
172. Without speed control system. Utan fartkontrollsystem.
173. For cars without headlight wipers. För bilar utan strålkastartorkare.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-C24

Switch
Strömställare

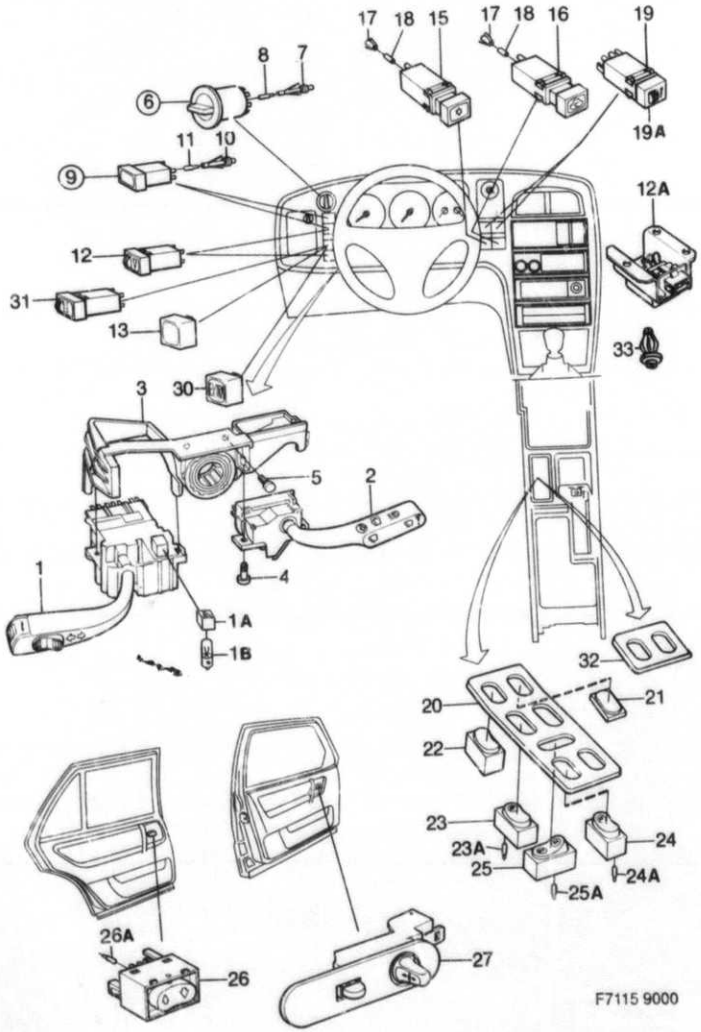

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	19	95 18 820		1987	2	Switch	Strömställare	3
0630						heating pad	värmedyna	
0660	19	95 18 820		1988-, (9519257)	2	Switch	Strömställare	3
0670						heating pad	värmedyna	
0675	19A	40 84 554		202), 1987-	X	Switch button	Strömställarknapp	5
0677				See page 3A-175, 2-H08		kit	sats	
0680	20	95 06 676			1	Retainer	Hållare	6
0690	21	95 01 891		-1988	X	Cover washer	Täckbricka	5
0700	21	91 25 212		500), 1989-	X	Cover washer	Täckbricka	5
0710	22	95 07 674		SR	1	Switch	Strömställare	3
0730	22	95 26 609		1988-	1	Switch	Strömställare	3
0740						door fan	dörrfläkt	
0750	23	95 01 859		1985, EW	2	Switch	Strömställare	3
0770	23	95 12 310		1986-, EW, LH	1	Switch	Strömställare	3
0790	23	95 01 859		1986-, EW, RH	1	Switch	Strömställare	3
0810	23	95 01 859		1986-, EW, LH, RHD	1	Switch	Strömställare	3
0830	23	95 12 310		1986-, EW, RH, RHD	1	Switch	Strömställare	3
0840	23A	• 85 48 992			1	.Bulb	.Glödlampa	4
0850	24	95 01 867		EW	2	Switch	Strömställare	3
0860	24A	• 85 48 992			1	.Bulb	.Glödlampa	4
0870	25	95 01 875		EW	1	Switch	Strömställare	3
0880	25A	• 85 48 992			1	.Bulb	.Glödlampa	4
0890	25	95 03 772		EW	2	Switch	Strömställare	3
0900	26A	• 85 48 992			1	.Bulb	.Glödlampa	4
0910	27	95 05 488		EM	1	Switch	Strömställare	3
0930	30	95 23 804		1987-	1	Switch	Strömställare	3
0935						extra,	extra	
0940	31	95 27 904		500), 1989-	1	Switch	Strömställare	3
0950						headlamp levelling	ljuslängdsreglering	
0960	32	95 08 003			1	Retainer	Hållare	6
0970				See page 8C-027, 6-B04	X	Retainer kit	Hållarsats	
0980				See page 3A-175, 2-H08		Headlamp levelling	Ljuslängdsreglering	
0990	33	94 73 869			X	Clip	Clips	5

202. Rheostat. Reostat.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

Electric equipment, other

2-D02 Speed control system

Övr. elektrisk utrustning

Farthållningssystem

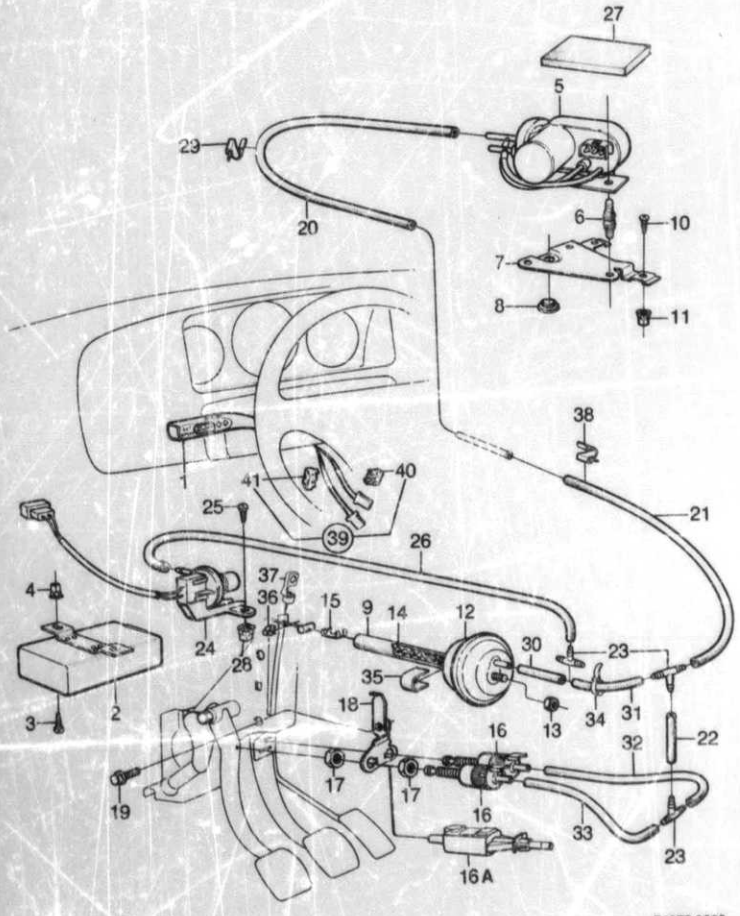

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 3A-069, 2-C22		Switch	Omkopplare	
0020	2	85 87 016		-1986	1	Electronic unit	Elektronikenhet	5
0030	2	95 60 905		1987	1	Electronic unit	Elektronikenhet	5
0040	2	95 26 757		1988-	1	Electronic unit	Elektronikenhet	5
0050	3	79 22 891		-1987	2	Screw	Skruv	5
0060	4	79 75 261		-1987	2	Nut	Mutter	5
0080	5	85 87 024		2), (9505991)	1	Vacuum pump	Vakuumpump	5
0090	6	95 55 194			3	▲Bracket	▲Upphängning	6
0100	7	*95 06 858*		2)-1985 NLS	1	Bracket	Konsol	6
0110	7	95 17 798		1986-	1	Bracket	Konsol	6
0120	8	82 06 096			1	Plug	Plugg	5
0125	9	*91 24 223*		50) NLS	1	Hose	Slang	5
0130	10	79 22 891			2	Screw	Skruv	5
0140	11	79 75 261			2	Nut	Mutter	5
0150	12	95 12 302			1	Vacuum regulator	Vakuumregulator	5
0160	13	80 74 288			1	Nut	Mutter	5
0170	14	85 87 081		83)	1	Chain	Kedja	6
0175	14	40 61 917		84)	1	Chain	Kedja	6
0180	15	*85 87 099*		NLS - USE 4433827	1	Clamp	Klammer	6
0190	16	95 12 294		-1988	2	Contact	Kontakt	3
0195	16A	*95 22 855*		500), 1989- NLS - USE 4350443	1	Contact	Kontakt	3
0200	17	85 66 259		-1988	4	Nut	Mutter	5
0210	18	95 06 882		-1988	1	Bracket	Konsol	6
0215	18	95 69 021		500), 1989-	1	Bracket	Konsol	6
0220	19	*79 71 757*		NLS - USE 7528953	1	Screw	Skruv	5
0230	20	95 66 548		1985, (8599458)	1	Hose	Slang	5
0240	20	*95 20 677*		1986-1987 NLS - USE 9566480	1	Hose	Slang	5
0250	20	95 66 480		1988-	1	Hose	Slang	5
0255	21	95 66 415		1988-,138,140)	1	Hose	Slang	5
0257	21	95 66 423		139,140)	1	Hose	Slang	5
0260	21	*95 16 337*		-1987 NLS - USE 9566407	1	Hose	Slang	5
0270	21	95 66 407		1988-,138)	1	Hose	Slang	5
0275	21	95 66 423		139)	1	Hose	Slang	5
0280	21	95 66 399		1988-,138), RHD	1	Hose	Slang	5
0285	21	95 66 415		139), RHD	1	Hose	Slang	5
0290	22	*85 90 689*		L=210 MM NLS - USE 9566423	1	Hose	Slang	5
0290								
0300	23	85 87 107		40)	3	Manifold	Grenrör	2
0310	23	85 09 002		41)	3	Tube	Rör	2
0320	24	85 98 195		-1987	1	Vacuum switch	Vakuumkontakt	5
0330	24	95 64 865		1988	1	Vacuum switch	Vakuumkontakt	5
0335	24	91 24 884		500), 1989-	1	Vacuum switch	Vakuumkontakt	5
0340	25	79 22 818		-1985	2	Screw	Skruv	5
0350	25	79 22 826		1986-	2	Screw	Skruv	5
0360	26	*95 16 329*		LHD NLS - USE 9564162	1	Hose	Slang	5
0370	26	95 64 162		1988, LHD, TURBO	1	Hose	Slang	5
0380	26	*85 90 689*		RHD NLS - USE 9566423	1	Hose	Slang	5
0390	26	95 66 415		1988, RHD, TURBO	1	Hose	Slang	5
0400	27	96 56 901		26)	1	Spacer	Mellanlägg	6

2. Cars before ch F4001938, see SI. Bilar före ch F4001938, se SI.
26. Ch G1023258-.
40. Ch -J1000152, -J2000020, -J8000006.
41. Ch J1000153-, J2000021-, J8000007-.
50. Ch J1017000-, J2009260-, J8001074-.
83. Ch -K1000869, -K2000436, SE 1988B - J1050111, -J2030143.
84. Ch K1000870-, K2000437-, SE 1988B J1050112-, J2030144-.
138. Ch -K1005732, -K2002532, -K8000112.
139. Ch K1005733-, K2002533-, K8000113-.
140. Without speed control system. Utan fartkontrollsystem.
198. Ch J1014463-, J2007677-, J8000885-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D04

Speed control system

Farthållningssystem

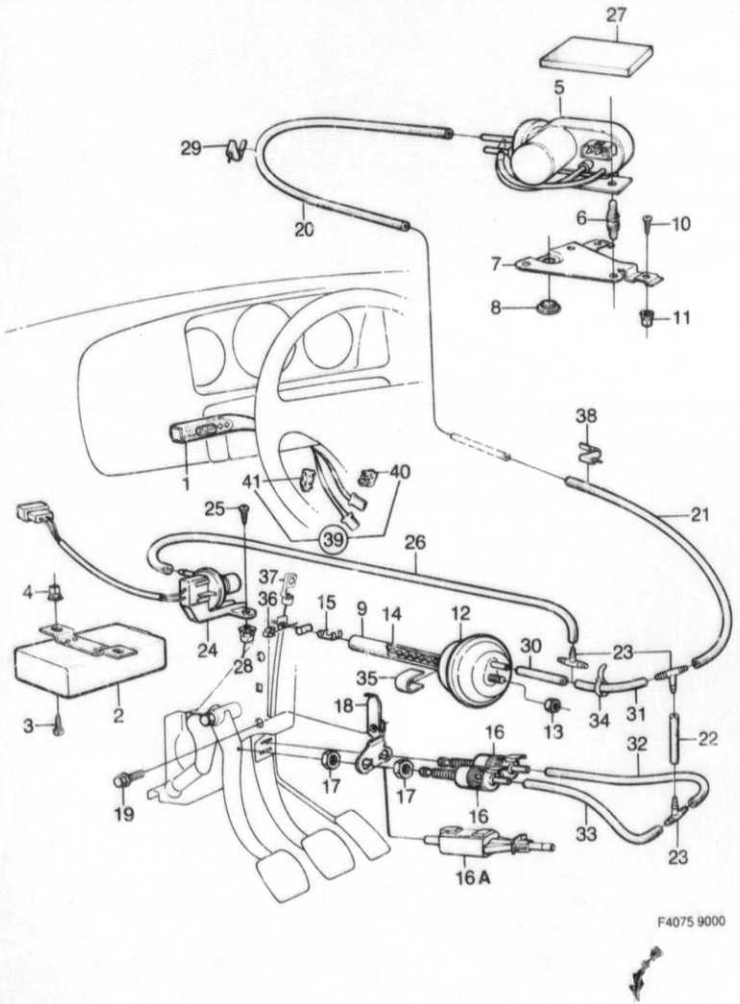

F4075 9000

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	28	79 75 261		1986-	2	Nut	Mutter	5
0420	29	71 21 239		1986-	1	Clamp	Klammer	5
0430	30	95 66 381		(8587354)	1	Hose	Slang	5
0440	30	95 66 381		1988-, TURBO	1	Hose	Slang	5
0450	31	95 66 381		(8587354)	1	Hose	Slang	5
0460	31	95 66 381		1988, TURBO, M	1	Hose	Slang	5
0470	31	95 66 381		1988-, RHD, TURBO, M	1	Hose	Slang	5
0480	31	95 19 646		1986-, RHD	1	Hose	Slang	5
0490	31	95 66 456		1988, RHD, TURBO	1	Hose	Slang	5
0510	31	95 66 464		1987-, RHD,I,M,(9523242)	1	Hose	Slang	5
0520	32	*85 87 347*		NLS - USE 9566399	1	Hose	Slang	5
0530	32	95 66 399		1988-, M	1	Hose	Slang	5
0551	32	95 66 423		1987-, A, (9553413)	1	Hose	Slang	5
0555	32	95 19 638		1986-, RHD	1	Hose	Slang	5
0565	32	95 66 472		1987-, RHD,I,A, (952234)	1	Hose	Slang	5
0570	32	95 66 449		1988-, RHD, M	1	Hose	Slang	5
0580	33	*85 87 347*		NLS - USE 9566399	1	Hose	Slang	5
0590	33	*95 16 337*		-1987, I NLS - USE 9566407	1	Hose	Slang	5
0600	33	95 66 407		1988-, I	1	Hose	Slang	5
0610	33	*95 16 337*		-1987, RHD, TURBO, A NLS - USE 9566407	1	Hose	Slang	5
0620	33	95 66 407		1988-, RHD, TURBO, A	1	Hose	Slang	5
0630	33	95 66 399		1988-, M	1	Hose	Slang	5
0640	33	95 66 423		1988-, A	1	Hose	Slang	5
0650	34	73 98 544		1986-	1	Tensioning band	Spännband	5
0660	34	73 98 977		1936-, RHD	1	Tensioning band	Spännband	5
0670	35	91 24 082		1988	1	Chain coupling	Kedjelås	9
0675	35	40 63 384		500), 1989-	1	Chain coupling	Kedjelås	9
0680	36	79 22 826		500), 1989-	1	Screw	Skruv	5
0690	37	40 61 362		1988-	1	Protection	Skydd	6
0700	38	71 08 491		194)	1	Clamp	Klammer	5
0710	39	*95 60 012*		1985, A NLS - USE 9559998, 9560004	1	Cable joint	Ledningsförbindning	3
0720	40	95 59 998		1986-, A	1	Manifold	Förgrening	3
0730	41	95 60 004		1986-, A	1	Manifold	Förgrening	3

194. Ch K1028189-, K2017642-, K8001456-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D06

Actuator — *Manöverdon*

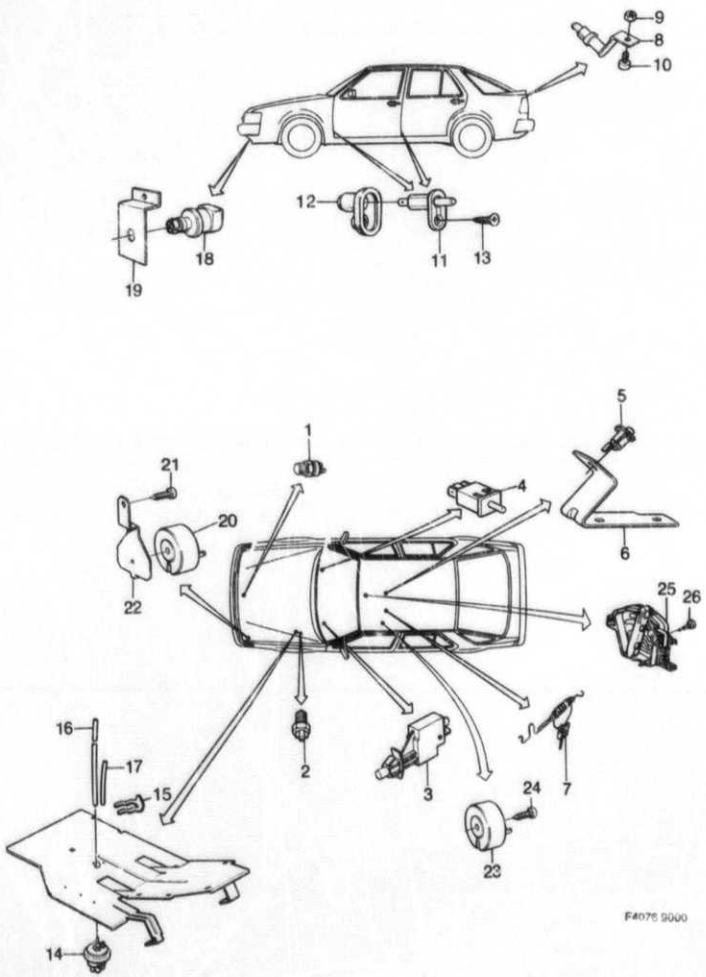

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-105, 1-F10	1	Contact	Kontakt	
0020						cooling fan	kylfläkt	
0030	2	95 29 363		(9512948)	1	Contact	Kontakt	3
0040						reverse lamp	backlampa	
0050	3	95 05 462			1	Brake light switch	Bromsljuskontakt	3
0070	4	95 08 367			1	Contact	Kontakt	3
0080						glove compartment	handskfack	
0090	5	85 22 492			1	Contact	Kontakt	3
0100						handbrake	handbroms	
0110	6	89 54 596			1	Bracket	Konsol	4
0120	7	95 05 652			2	Contact	Kontakt	5
0130						front seat	framstol	
0140	8	95 05 694		131), 5D	1	Contact	Kontakt	3
0150						tail gate	bagagerumsdörr	
0160	8			132), 5D	1	Contact	Kontakt	
0170				See page 8A-061, 4-H14		tail gate	bagagerumsdörr	
0180	8	*95 24 851*		131), 4D	1	Contact	Kontakt	3
0190				NLS		boot lid	bagagerumslucka	
0200	8			132), 4D	1	Contact	Kontakt	
0210				See page 8A-065, 4-H18		boot lid	bagagerumslucka	
0220	9	79 75 261		131)	1	Nut	Mutter	5
0230	10	79 70 536		131)	1	Screw	Skruv	6
0260	11	95 14 860		1985-1988, (9505678)	2	Contact	Kontakt	3
0261						front door	framdörr	
0270	11	*40 63 640*		1989-,152,500)	2	Contact	Kontakt	3
0271				NLS - USE 9514860		front door	framdörr	
0280	11	95 14 860		153)	2	Contact	Kontakt	3
0281						front door	framdörr	
0290	11	95 14 886		1986-1988	2	Contact	Kontakt	3
0291						rear door	bakdörr	
0300	11	*40 63 657*		1989-,152,500)	2	Contact	Kontakt	3
0301				NLS - USE 9514886		rear door	bakdörr	
0310	11	95 14 886		153)	2	Contact	Kontakt	3
0311						rear door	bakdörr	
0320	12	95 12 229		1986-	2	Protection	Skyddshölje	3
0321						front door	framdörr	
0330	12	95 14 878		1986-	2	Protection	Skyddshölje	3
0331						rear door	bakdörr	
0340	13	79 22 818			4	Screw	kruv	5
0350	14	85 94 632		-1988, TURBO	1	Pressure monitor	Tryckvakt	2
0360	14	85 94 632		43), 1989-, TURBO	1	Pressure monitor	Tryckvakt	2
0370	15	85 65 855		-1988	1	Clip	Clips	6
0380	15	85 65 855		43), 1989-	1	Clip	Clips	6
0390	16	85 33 366		-1987, L=450 MM	1	Hose	Slang	5
0400	16	91 36 243		1988-, L=600 MM	1	Vaccum hose	Vakuumslang	5
0410	17	85 52 044		L=60 MM	1	Hose	Slang	5
0420	18	95 13 276		1986-	1	Sensor	Givare	4
0430	19	95 14 183		1986-	1	Bracket	Hållare	6
0440	19	95 69 781		4D	1	Bracket	Hållare	6
0450	20	95 58 875		1987-, GB	1	Resistor	Motstånd	5
0451						dim-dip	dim-dip	
0460	21	79 22 370		1987-, GB	1	Screw	Skruv	5
0461						dim-dip	dim-dip	
0470	22	95 22 889		1987-, GB	1	Bracket	Hållare	6
0471						dim-dip	dim-dip	

43. Without catalytic converter. Utan katalytisk reaktor.
131. Ch --K1009547, --K2004988, --K8000444.
132. Ch K1009548-, K2004989-, K8000445-.
152. Ch --K1023936, --K2014262, --K8001149.
153. Ch K1023937-, K2014263-, K8001150-.
198. Ch J1014463-, J2007677-, J8000885-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D08

Actuator — Manöverdon

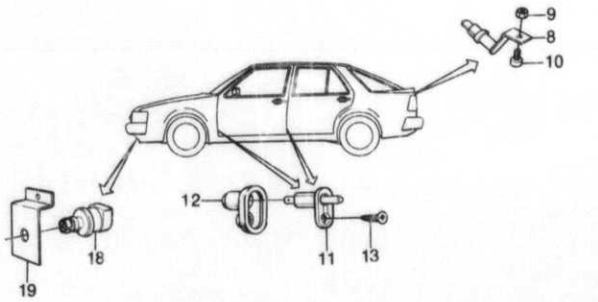

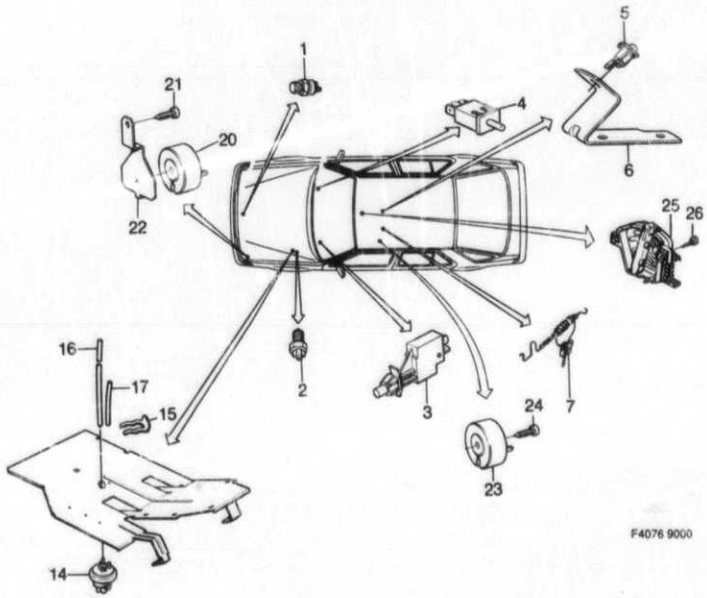

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	23	95 65 375		1988-	1	Resistor door fan	Motstånd dörrfläkt	5
0490	24	79 22 826		1988-	1	Screw	Skruv	5
0500	25	*95 07 740*		48), LH, A	1	Switch starter inhibitor	Strömställare startspärr	3
0510				NLS - USE 4062980				
0520	25	95 29 389		49), LH, A, EDU 2	1	Switch starter inhibitor	Strömställare startspärr	5
0530								
0540	25	95 29 389		49), LH, A, EDU 1	1	Switch starter inhibitor	Strömställare startspärr	5
0550								
0580	25	95 29 371		RH, A, EDU 2, (9509589)	1	Switch gear position indicator	Strömställare växellägesindikator	5
0590								
0600	26	79 22 347		-1988	4	Screw	Skruv	5
0610	26	79 22 818		500), 1989-, EDU 1	2	Screw	Skruv	5
0620	26	79 22 818		500), 1989-, EDU 2	4	Screw	Skruv	5
0740		85 48 075		198), A	X	Starter inhibitor kit	Startspärrsats	4
0750				See page 3A-175, 2-H08				
0760								
0770		91 36 243		L=5000 MM	X	Vacuum hose	Vakuumslang	5

48. Ch –J1014462, –J2007676.
49. Ch J1014463 –, J2007677 –.
198. Ch J1014463 –, J2007677 –, J8000885 –.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D10

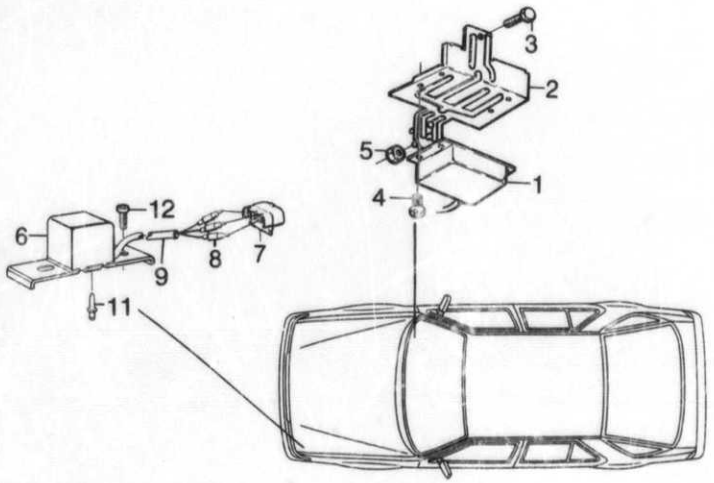

F4077 9000

1005	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 24 074*		129) NLS - USE 9526906	1	Electronic unit	Elektronikenhet	5
0020	1	95 26 906		130)	1	Electronic unit	Elektronikenhet	5
0030	2	95 71 589			1	Bracket	Konsol	5
0040	3	79 67 938			1	Screw	Skruv	5
0050	4	73 99 587			4	Screw	Skruv	5
0060	5	79 71 922			2	Nut	Mutter	3
0070	6	96 96 626			2	Sensor	Sensor	5
0080	7	95 03 327			1	▪Contact housing 3-pole, male	▪Kontakthus 3-polig, stift	4
0090								
0100	8	78 74 506			3	▪Connection	▪Skarv	5
0110	9	43 50 476			2	Cable harness	Ledningsnät	5
0120	10	73 99 520			4	Screw	Skruv	5
0130	11	73 99 454			4	Nut	Mutter	5

129. Ch --K1015061, --K2008443.
130. Ch K1015062-, K2008444--.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D12 Actuator ACC — Manöverdon ACC

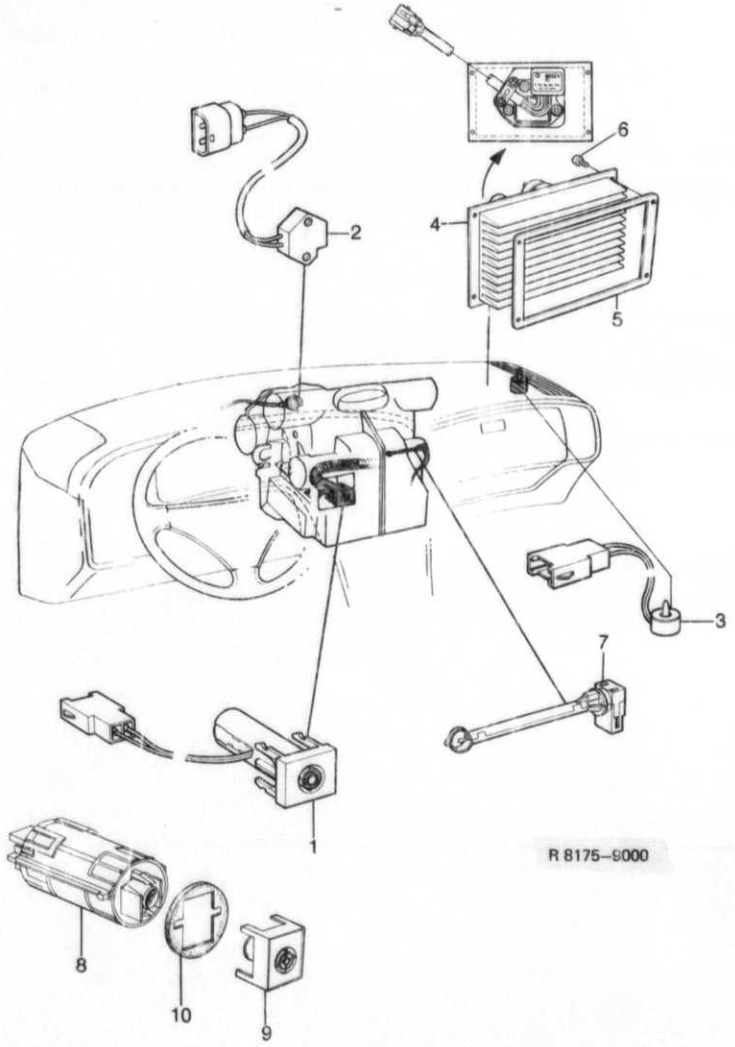

1010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	98 22 747		-1986	1	Sensor	Givare	4
0021						indoor temperature	innerlufttemperatur	
0040	2	96 23 265			1	Sensor	Givare	4
0041						outdoor temperature air	utelufttemperatur	
0060	3	96 26 375			1	Sensor	Givare	4
0061						sunlight intensity	solljusintensitet	
0070	3	96 28 033		AU	1	Sensor	Sensor	4
0071						sunlight intensity	solljusintensitet	
0080	4	96 22 786		46)	1	Control unit	Regleraggregat	5
0090	4	96 29 106		47)	1	Control unit	Regleraggregat	5
0100	5	96 25 823		46)	1	▪Seal	▪Tätning	6
0110	5	96 29 247		47)	1	▪Seal	▪Tätning	6
0120	6	79 22 214			4	Screw	Skruv	5
0140	7	96 22 762			1	Sensor	Givare	4
0141						mixed air temperatur	blandlufttemperatur	
0145	8	*96 27 811*		1987-	1	Sensor	Givare	4
0146				NLS - USE 9630740		indoor temperature	innerlufttemperatur	
0147	9	96 27 837		1987-	1	▪Front cover	▪Frontkåpa	5
0149	10	96 27 845		1987-	1	▪Gasket	▪Packning	6
0160				See page 8C-009, 6-A10		Servo unit	Servoenhet	
0200				See page 8C-005, 6-A06		Control panel	Reglagepanel	

46. Ch --J1015314, --J2008264, --J8001308.
47. Ch J1015315--, J2008265--, J8001308--.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D14

Radio, electrical aerial
Radio, motorantenn

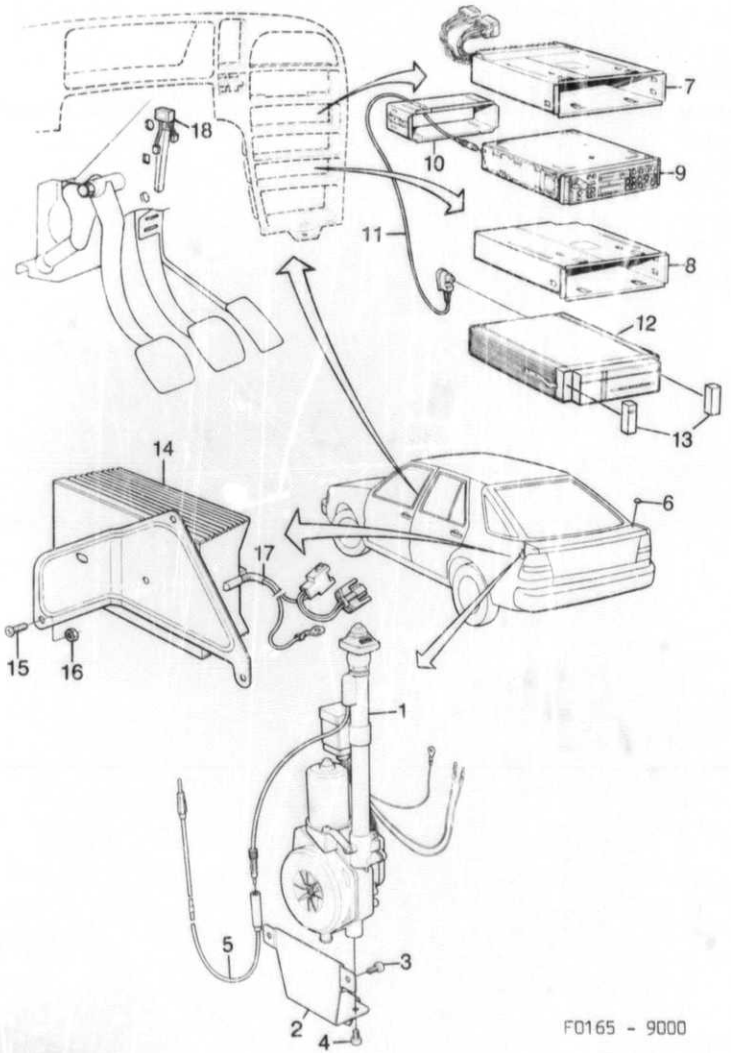

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	85 94 335		-1986, 40/204 334 007	1	Antenna	Antenn	5
0030	1	95 26 419		1987-	1	Antenna	Antenn	5
0040	2	95 07 971			1	Bracket	Fäste	5
0050	2	95 18 556		4D	1	Bracket	Fäste	5
0060	3	79 22 891			2	Screw	Skruv	5
0080	4	80 19 697			2	Screw	Skruv	5
0095	5	85 74 139		-1987, 40/204 293 039	1	Cable harness	Ledningsnät	5
0097	5	95 64 477		1988-	1	Cable harness	Ledningsnät	5
0100	6	95 50 476			1	Plug	Plugg	5
0460	7	95 27 961		1988, US	1	Cage	Korg	5
0461						with amplifier	med förstärkare	
0463	7	*40 65 397*		1989-, US	1	Cage	Korg	5
0464				NLS - USE 4111100		with amplifier	med förstärkare	
0465	7	40 65 405		1989-, 4D, US	1	Cage	Korg	5
0466						with amplifier	med förstärkare	
0470	8	95 27 979		1988-, US	1	Cage	Korg	5
0471						equalizer	equalizer	
0500	9	95 24 711		1988-	1	Radio	Radio	5
0510	10	95 23 994		1988-	1	Mounting frame	Monteringsram	5
0511						radio	radio	
0520	11	95 24 786		1988-	1	Cable	Ledning	5
0521						radio	radio	
0530	12	*95 25 502*		1988-, 150) NLS - USE 4085825	1	Amplifier	Förstärkare	5
0531	12	40 68 961		151)	1	Amplifier	Förstärkare	5
0535	12	*95 29 249*		148), 4D NLS - USE 4085262	1	Amplifier	Förstärkare	5
0537	12	*40 68 946*		149), 4D NLS - USE 4085262	1	Amplifier	Förstärkare	5
0537								
0540	13	95 25 494		1988-	2	Cover	Täcklock	5
0550	14	95 29 256		72,500), 1989-, 4D	1	Amplifier	Förstärkare	5
0551						bass	bas	
0560	15	79 22 834		72,500), 1989-, 4D	3	Screw	Skruv	5
0570	16	79 75 261		72,500), 1989-, 4D	3	Nut	Mutter	5
0580	17	95 66 563		72,500), 1989-, 4D	1	Cable harness	Ledningsnät	5
0590	18	*95 35 136*		1988-	1	Interference suppression	Avstörning	5
0591				NLS		brake light	bromsljus	

72. Audio system. Audio system.
148. Ch --K1024735, --K2014872.
149. Ch K1024736--, K2014873--.
150. Ch --K1024342, --K2014561.
151. Ch K1024343--, K2014562--.
198. Ch J1014463--, J2007677--, J8000885--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D16

Loudspeaker — *Högtalare*

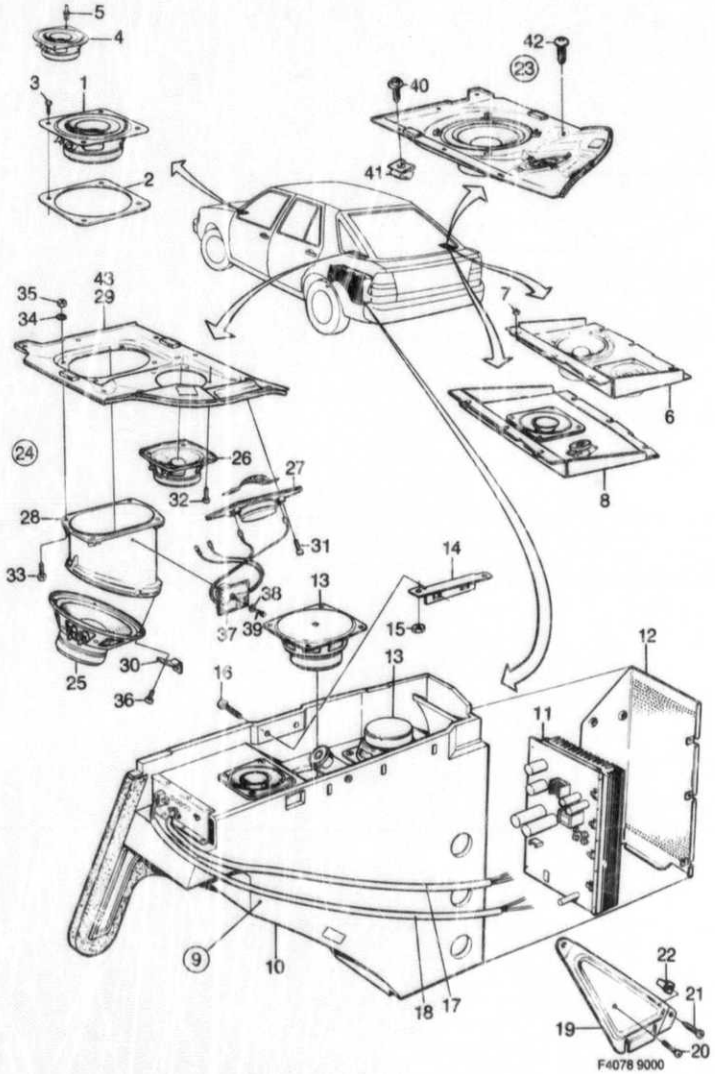

1017	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 14 357		-1986	2	Loudspeaker	Högtalare	4
0020	1	*95 22 806*		1987- NLS - USE 4439121	2	Loudspeaker	Högtalare	4
0030	2	95 09 076			2	Spacer	Distans	5
0040	3	79 72 128			8	Screw	Skruv	5
0050	4	95 22 814		1987-	2	Loudspeaker	Högtalare	4
0060	5	73 99 256		1987-	4	Rivet	Nit	3
0070	6	95 16 006		-1986, LH, US, CA	1	Loudspeaker	Högtalare	4
0080	6	95 16 014		-1986, RH, US, CA	1	Loudspeaker	Högtalare	4
0090	6	95 22 632		1987-, LH	1	Loudspeaker	Högtalare	4
0100	6	95 22 624		1987-, RH	1	Loudspeaker	Högtalare	4
0110	7	79 77 671			12	Nut	Mutter	5
0120	8	95 24 042		72), 1988-, 5D, RH	1	Loudspeaker	Högtalare	4
0130	9	95 24 315		72), 1988-, 5D	1	Loudspeaker casing	Högtalarkåpa	9
0140	10	95 24 307			1	.Loudspeaker casing	.Högtalarkåpa	4
0150	11	95 24 372			1	.Amplifier	.Förstärkare	5
0160	12	95 24 398			1	.Cover plate	.Täckplåt	5
0170	13	95 24 406		LH	2	.Loudspeaker	.Högtalare	4
0180	14	95 64 519		1988-	1	Attaching bracket	Fästvinkel	5
0190	15	80 29 548		1988-	2	Nut	Mutter	5
0200	16	79 78 117		1988-	2	Screw	Skruv	5
0210	17			1988-		Cable	Ledning	
0211				See page 3A-129, 2-F10		bass	bas	
0220	18	95 26 096		1988-	1	Cable harness	Ledningsnät	9
0221						amplifier	förstärkare	
0230	19	95 64 741		1988-	1	Bracket	Konsol	5
0240	20	79 22 818		1988-	1	Screw	Skruv	5
0250	21	79 22 834		1988-	2	Screw	Skruv	5
0260	22	79 75 261		1988-	2	Nut	Mutter	5
0270	23	95 28 167		500), 1989-, 4D, LH	1	Loudspeaker	Högtalare	4
0280	23	95 28 159		500), 1989-, 4D, RH	1	Loudspeaker	Högtalare	4
0290	24	95 29 223		1989-,72,142,500), 4D,LH	1	Loudspeaker	Högtalare	4
0300	24	40 63 418		72,143), 4D, LH	1	Loudspeaker	Högtalare	4
0310	24	95 29 215		1989-,72,142,500), 4D,RH	1	Loudspeaker	Högtalare	4
0320	24	40 63 400		72,143), 4D, RH	1	Loudspeaker	Högtalare	4
0330	25	95 29 181			1	.Loudspeaker	.Högtalare	4
0331						bass	bas	
0340	26	95 29 199			1	.Loudspeaker	.Högtalare	4
0341						midrange	mellanregister	
0350	27	95 29 207			1	.Loudspeaker	.Högtalare	4
0351						treble	diskant	
0360	28	95 29 173			1	.Tube	.Rör	5
0370	29	95 67 207		142,175), LH	1	.Bracket	.Konsol	5
0380	29	40 63 434		143,176), LH	1	.Bracket	.Konsol	5
0390	29	95 67 199		142,177), RH	1	.Bracket	.Konsol	5
0400	29	40 63 426		143,178), RH	1	.Bracket	.Konsol	5
0410	30	95 67 405			1	.Attaching bracket	.Fästvinkel	5
0420	31	*79 22 602*		NLS	4	.Screw	.Skruv	5
0430	32	79 22 644			4	.Screw	.Skruv	5
0440	33	80 19 705			4	.Screw	.Skruv	5
0450	34	79 15 556			4	.Star washer	.Taggbricka	5
0460	35	80 29 548			4	.Nut	.Mutter	5
0470	36	80 59 230			4	.Screw	.Skruv	5
0480	37	95 68 866			1	.Filter	.Filter	5
0490	38	79 15 556			1	.Star washer	.Taggbricka	5

72. Audio system. Audio system.
142. Ch --K1022575, --K2013143.
143. Ch K1022576--, K2013144--.
175. Part of 95 29 223. Del av 95 29 223.
176. Part of 40 63 418. Del av 40 63 418.
177. Part of 95 29 215. Del av 95 29 215.
178. Part of 40 63 400. Del av 40 63 400.
198. Ch J1014463--, J2007677--, J8000885--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D18

Loudspeaker

Högtalare

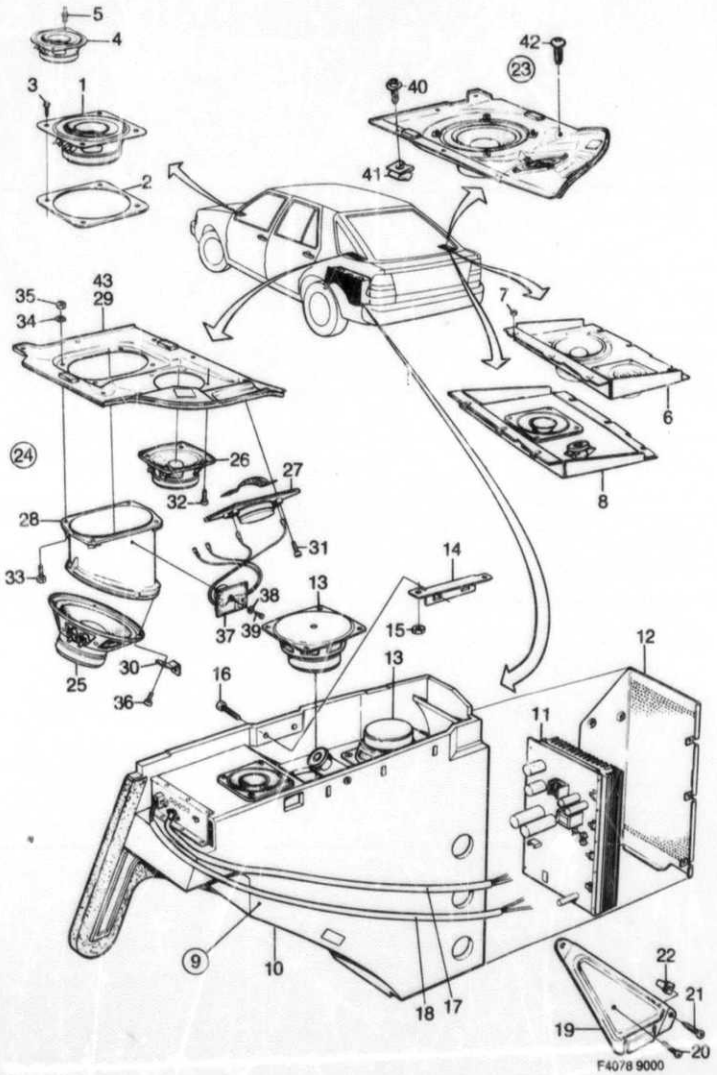

1017	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	39	*79 22 602*		NLS	1	. Screw	. Skruv	5
0510	40	79 72 938		4D	8	Screw	Skruv	5
0520	41	96 92 849		4D	8	Nut	Mutter	5
0530	42	79 22 420		4D	2	Screw	Skruv	5
0560	43	95 71 621		179), 4D, LH	1	Bracket	Konsol	5
0570	43	95 71 159		179), 4D, RH	1	Bracket	Konsol	5

179. For cars without loudspeaker. För bilar utan högtalare.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D20

Gear indicator
Växelindikator

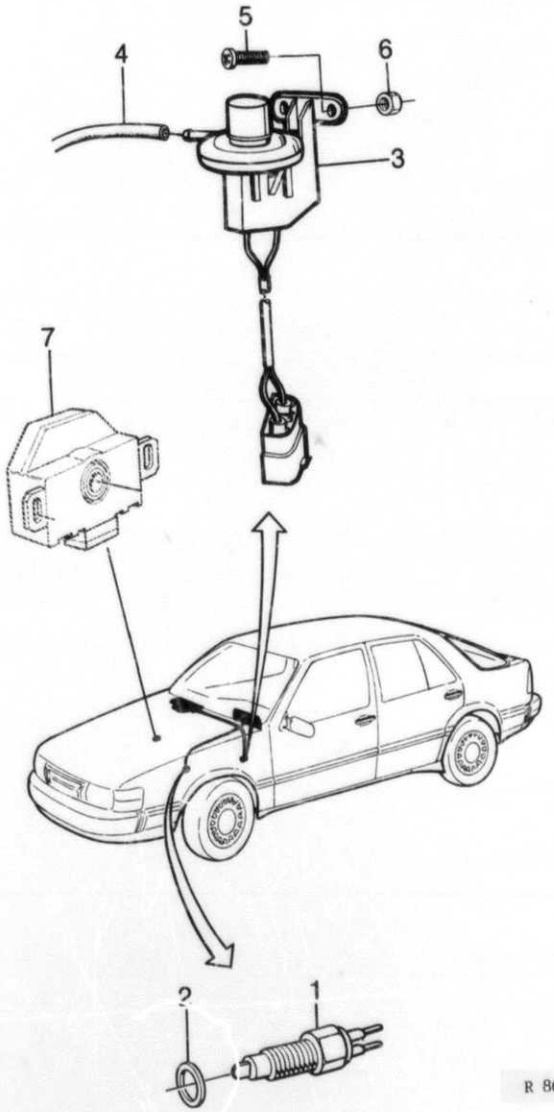

R 8656 - 9000

1020	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	95 29 355		(9513235)	1	Contact	Kontakt	5
0031						gear indicator	växelindikator	
0040	2	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0060	3	*85 96 124*		-1986 NLS - USE 9564857	1	Contact	Kontakt	5
0065	3	95 21 188		1987	1	Contact	Kontakt	5
0070	3	95 64 857		1988	1	Contact	Kontakt	5
0080	4	91 36 243		L=70 MM	1	Vaccum hose	Vakuumslang	5
0090	5	79 22 818		-1985	2	Screw	Skruv	5
0100	5	79 22 826		1986-1988	2	Screw	Skruv	5
0110	6	79 75 261		1986-	2	Nut	Mutter	5
0120	7			See page 2-075, 1-E04	-	Shutter contact	Spjällkontakt	
0130						•		
0140		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D22

Anti theft system
Stöldlarm

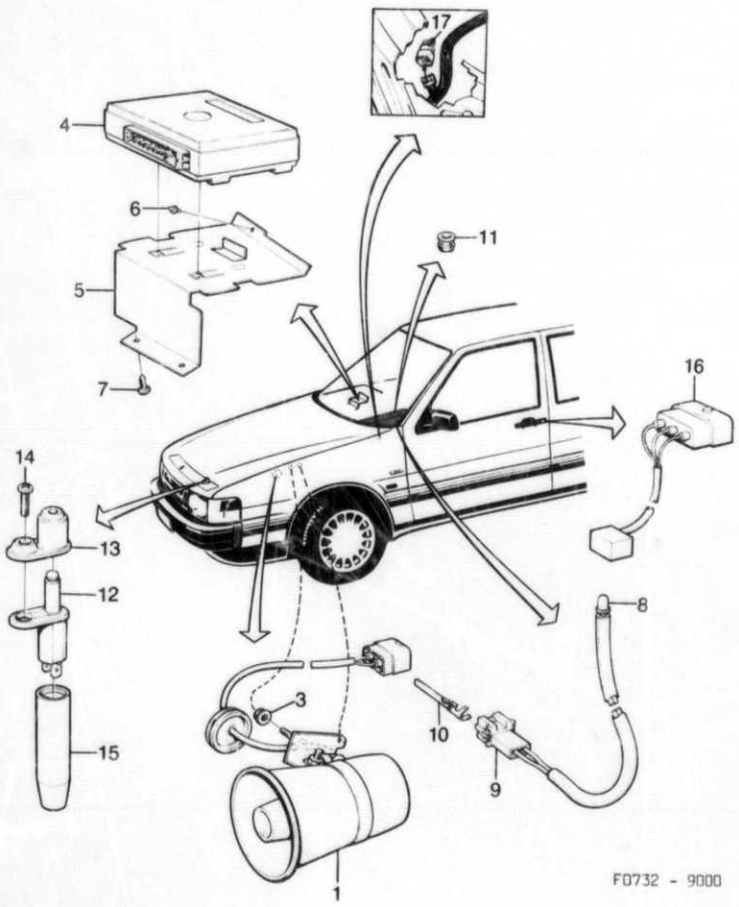

1025	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 65 839			1	Horn	Signalhorn	4
0026	3	79 67 953			1	Nut	Mutter	5
0030	4	95 66 100			1	Electronic unit	Elektronikenhet	5
0040	5	95 65 995			1	Bracket	Konsol	9
0050	6	79 61 642			1	Rivet	Nit	5
0055	7	79 22 818			2	Screw	Skruv	5
0060	8	*95 67 330*		144) NLS - USE 4090981	1	Diode	Diod	9
0065	8	40 90 981		145)	1	Diode	Diod	9
0070	9	95 18 713			1	▪Contact housing 2-pole, male	▪Kontakthus 2-polig, stift	4
0071								
0080	10	95 52 100		AREA 0,75-1,5 MM2	2	▪Cable terminal	▪Kabelsko	5
0090	11	95 93 161			1	Bracket	Hållare	5
0100	12	*40 63 640*		152) NLS - USE 9514860	1	Contact	Kontakt	3
0101	12	95 14 860		153)	1	Contact	Kontakt	3
0103	13	95 12 229			1	Protection	Skyddshölje	3
0105	14	79 22 974			1	Screw	Skruv	5
0110	15	95 69 997			1	Protection	Skydd	4
0115	16	95 66 159		See page 3B-093, 3-D22	1	Switch	Brytare	9
0130	17	91 20 452		1989-, M	1	Cable harness	Ledningsnät	5
0140	17	91 20 460		1989-, A	1	Cable harness	Ledningsnät	5

144. Ch --K1020297, --K2012310.
145. Ch K1020298--, K2012311--.
152. Ch --K1023936, --K2014262, --K8001149.
153. Ch K1023937--, K2014263--, K8001150--.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-D24

Speed warning system
Fartvarningssystem

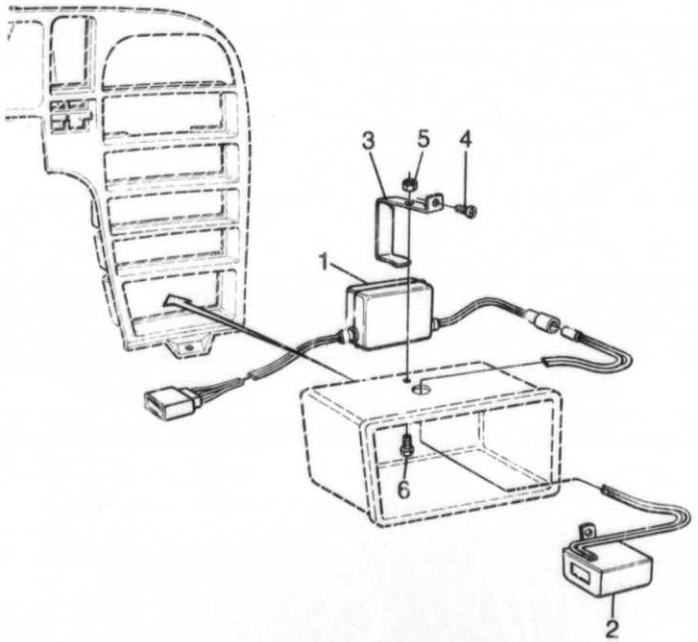

R 7585–9000

1030	Ass	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0040	1	95 19 026			1	Electronic unit	Elektronikenhet	5
0060	2	95 19 034			1	Chime	Pingla	5
0080	3	95 19 372			1	Bracket	Hållare	5
0100	4	79 22 263			1	Screw	Skruv	5
0120	5	73 98 423			1	Nut	Mutter	5
0140	6	92 59 524			1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E02

Electrical system
ABS

Elektriskt system
ABS

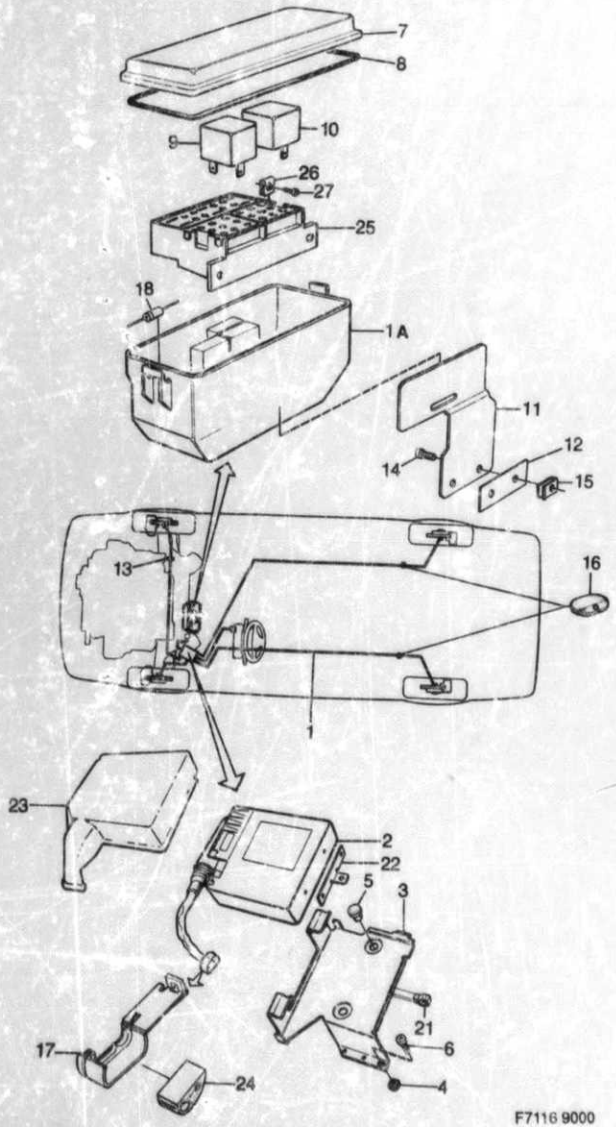

F7116 9000

1035	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 20 586		1987	1	Cable harness	Ledningsnät	6
0020	1	95 65 383		1988-,98)	1	Cable harness	Ledningsnät	6
0025	1	40 60 067		99)	1	Cable harness	Ledningsnät	6
0030	1A	*95 19 695*		NLS - USE 4111118		. Box	. Box	4
0040	2	*89 65 659*		208), -1987 NLS - USE 4001756, 8971970	1	Electronic unit	Elektronikenhet	4
0050	2	*89 70 386*		208), 1988-,79) NLS - USE 4001756	1	Electronic unit	Elektronikenhet	4
0060	2	40 01 756		80)	1	Electronic unit	Elektronikenhet	4
0070	3	89 66 624		1987	1	Bracket	Konsol	5
0080	3	89 70 287		1988-	1	Bracket	Konsol	5
0090	4	79 33 682			1	. Spring nut	. Fjädermutter	3
0100	5	92 68 186			2	. Plug	. Plugg	5
0110	6	79 46 734		-1987	1	Screw	Skruv	5
0120	6	79 46 734		1988-, L.H.2.2 BOX	1	Screw	Skruv	5
0130	6	79 78 372		1988-, L.H.2.4 BOX	2	Screw	Skruv	5
0140	7	95 19 919			1	Cover	Lock	4
0150	8	95 19 927			1	. Seal	. Tätning	5
0160	9	85 33 176			1	Relay	Relä	3
0170	10	95 22 822			1	Relay	Relä	5
0180	11	95 19 703			1	Bracket	Hållare	4
0190	12	95 19 950			1	Spacer	Mellanlägg	5
0200	13	73 99 033			4	Clamp	Klammer	5
0210	14	*84 41 503*		NLS - USE 7970601	2	Screw	Skruv	5
0220	15	79 67 995			2	Clip nut	Clipsmutter	3
0230	16	92 79 878			2	Cover	Lock	4
0240	17	96 25 633			1	Bracket	Hållare	6
0250	18	44 24 172		(8574881)	2	Diode	Diod	5
0270	21	89 70 402		1988-	1	Clamp	Klammer	5
0280	22	89 71 970		1988-	1	Bracket	Hållare	5
0290	23	40 00 485		80)	1	Cover	Avtäckning	5
0300	24	95 20 867		-1988	1	Sealing	Tätning	5
0310	24	40 62 063		500), 1989-	1	Seal	Tätning	5
0320	25	91 25 543		500), 1989-	1	Contact housing	Kontakthus	4
0330	26	79 68 001		1989-	2	Clip nut	Clipsmutter	5
0340	27	79 70 601		1989-	2	Screw	Skruv	5


80. Ch K1003694, K2001934-, K8000034-, SE 1988B J1050327-, J203994-, J8005184-.
98. Ch -K1007944, -K8000269, SE 1988B: -J2032237.
99. Ch K1007945-, K8000270-, SE 1988B: J2032238-.
198. Ch J1014463-, J2007677-, J8000885-.
208. Superseded by 40 01 756 and 89 71 970. Ersatt av 40 01 756 och 89 71 970.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A07
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

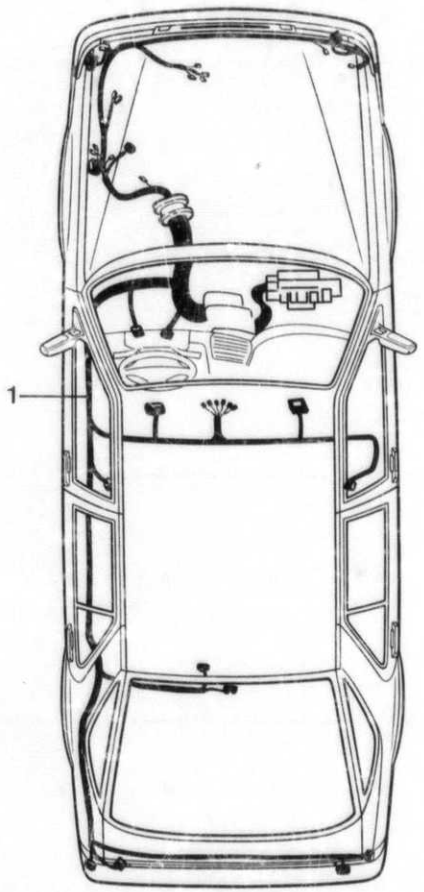

R 6683–9000

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 08 979			1	Cable harness	Ledningsnät	5
0040	1	*95 08 995*		180) NLS	1	Cable harness	Ledningsnät	5
0060	1	95 08 987		181)	1	Cable harness	Ledningsnät	5
1000				See page 3A-149, 2-G06		Fuse holder	Säkringshållare	
1500		95 17 970			1	Cable harness	Ledningsnät	5
1520						rear window	bakruta	


180. For cars with AC. För bilar med AC.
181. For cars with ACC. För bilar med ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

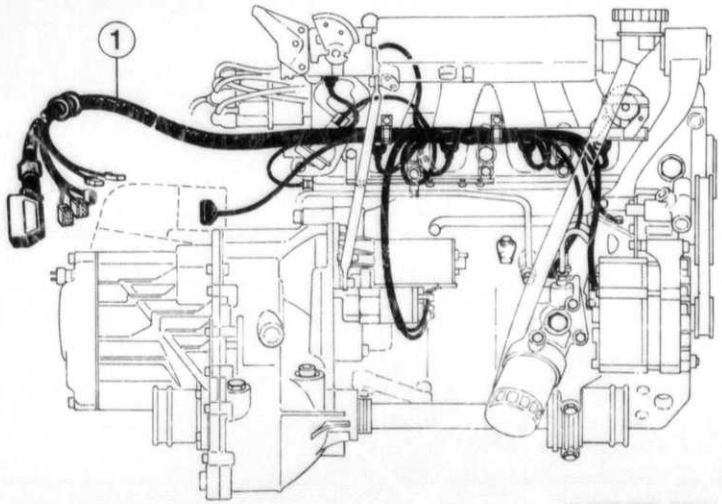

R 6684–9000

1055 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020 1	95 09 464			1	Cable harness	Ledningsnät	3

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E08

Doors
1985

Dörrar
1985

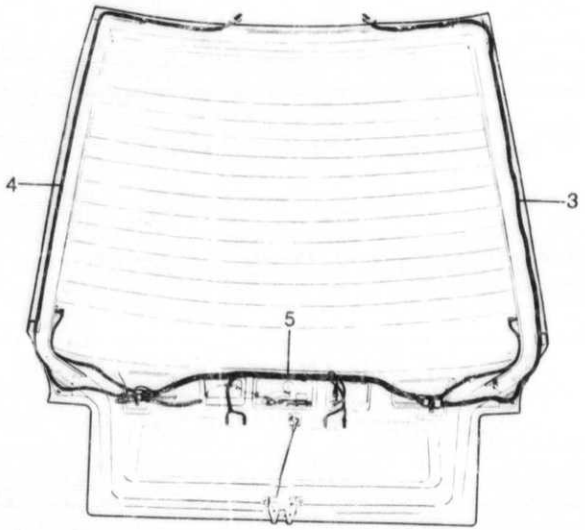

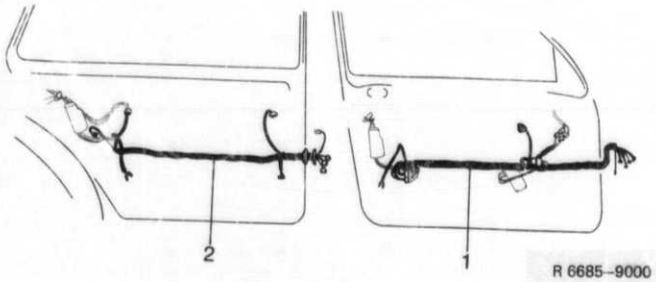

R 6685–9000

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 00 984		182)	1	Cable harness front door	Ledningsnät framdörr	5
0040								
0060	1	95 00 992		183)	1	Cable harness front door	Ledningsnät framdörr	5
0080								
0100	2	95 01 099			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0140	3	95 17 939		LH, (9507088)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0160								
0180	4	95 17 947		RH, (9507096)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0200								
0220	5	95 17 921		(9508854)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0240								

182. Drivers side. Förarsida.
183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E10

Compartment
1985

Kupe
1985

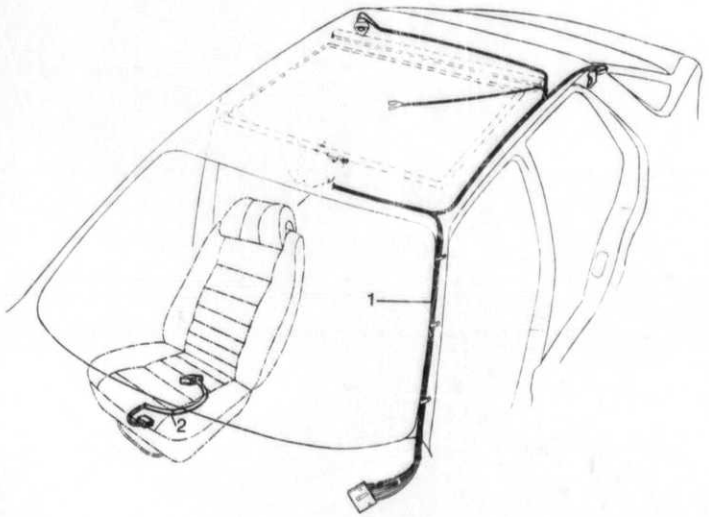

R 9089-9000

1065	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 01 115			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0040								
0060	2	95 08 789		183)	1	Cable harness front seat	Ledningsnät framstol	5
0080								


183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

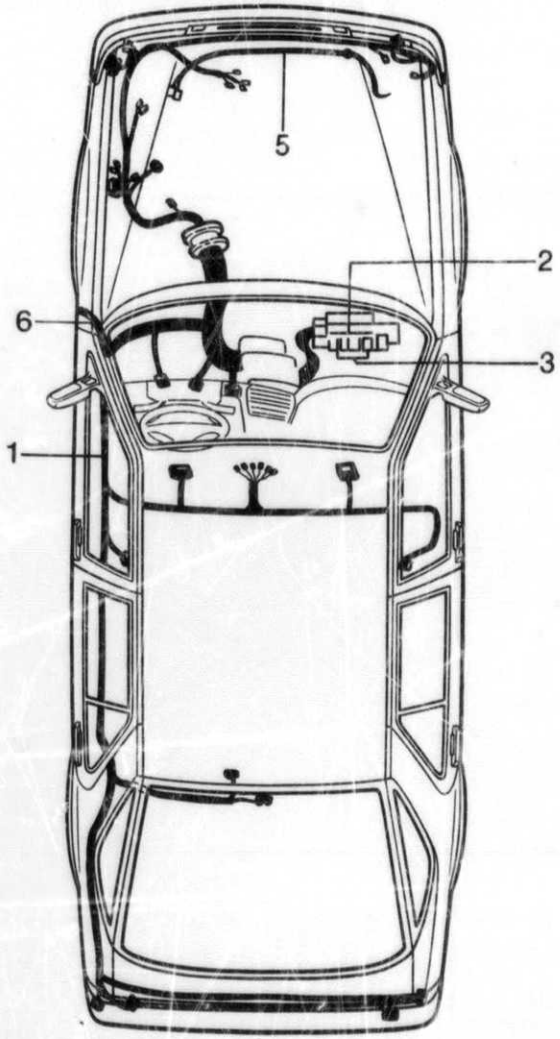

F1911 - 9000

Wiring and fuses

2-E12

Main- and engine comp.

1986

Ledningar och säkringar

Huvud- och motorrum

1986

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 16 394		184), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0060	1	95 16 402		181), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0100	1	95 16 501		184), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0140	1	95 16 519		181), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0180								
0200	1	95 16 410		184), I, GB	1	Cable harness	Ledningsnät	5
0220	1	*95 16 428*		181), I, GB NLS	1	Cable harness	Ledningsnät	5
0240	1	95 16 527		184), TURBO, GB	1	Cable harness	Ledningsnät	5
0280	1	95 16 535		181), TURBO, GB	1	Cable harness	Ledningsnät	5
0300								
0320	1	*95 16 444*		I, ME NLS	1	Cable harness	Ledningsnät	5
0340	1	95 16 543		TURBO, ME	1	Cable harness	Ledningsnät	5
0360								
0380	1	95 20 172		I, FE, (9516451)	1	Cable harness	Ledningsnät	5
0400	1	*95 16 550*		TURBO, FE NLS	1	Cable harness	Ledningsnät	5
0420								
0440	1	*95 16 469*		I, AU NLS	1	Cable harness	Ledningsnät	5
0460	1	95 16 568		TURBO, AU	1	Cable harness	Ledningsnät	5
0480								
0500	1	*95 16 477*		I, US NLS	1	Cable harness	Ledningsnät	5
0520	1	95 16 576		TURBO, US	1	Cable harness	Ledningsnät	5
0540								
0560	1	*95 16 485*		184), I, CA, JP NLS	1	Cable harness	Ledningsnät	5
0600	1	*95 16 493*		181), I, CA, JP NLS	1	Cable harness	Ledningsnät	5
0620	1	95 16 584		TURBO, CA, JP	1	Cable harness	Ledningsnät	5
0640								
0660	2			See page 3A-149, 2-G06		▪Relay retainer	▪Relähållare	
0670	3			See page 3A-149, 2-G06		▪Fuse holder	▪Säkringshållare	
0700	4	95 19 042			1	Cable harness speed warning system	Ledningsnät fartvarningssystem	6
0730	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0740				See page 8C-027, 6-B04				
0750	6	95 17 376			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0751								

181. For cars with ACC. För bilar med ACC.
184. For cars without ACC. För bilar utan ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E14

Engine 1986

Drivaggregat 1986

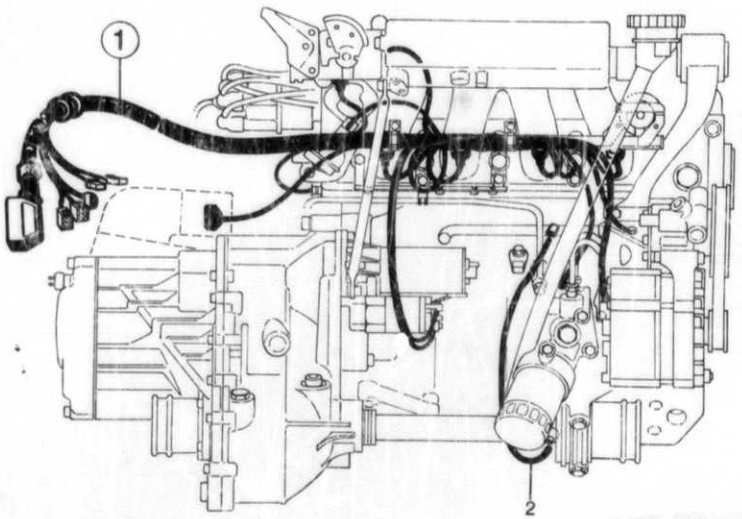

R 8322–9000

1071	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030 0040 0060	1	95 24 117		I, SE, FI, EU, GB, ME, FE, (9515313)	1	Cable harness	Ledningsnät	3
0080 0100 0120	1	*95 15 339*		44), I, M, EU, AU, US, CA, JP NLS - USE 9524125	1	Cable harness	Ledningsnät	3
0125 0127 0129	1	*95 16 048*		44), I, A, EU, AU, US, CA, JP NLS	1	Cable harness	Ledningsnät	3
0140 0160 0180	1	95 24 141		TURBO M, SE, FI, EU, GB, ME, FE, (9515305)	1	Cable harness	Ledningsnät	3
0190 0192 0192 0194	1	*95 15 008*		TURBO, A, SE, FI, EU, GB, ME, FE NLS - USE 9524158	1	Cable harness	Ledningsnät	3
0195 0196 0196 0197	1	*95 15 016*		44), TURBO, A, EU, AU, US, CA, JP NLS - USE 9524174	1	Cable harness	Ledningsnät	3
0200 0220 0240	1	95 15 321		44), TURBO M, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0250 0251	2	95 18 523			1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6

44. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E16

Doors
1986

Dörrar
1986

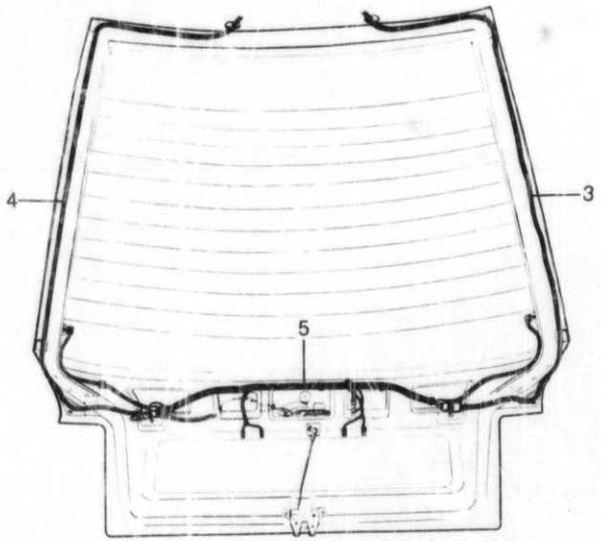

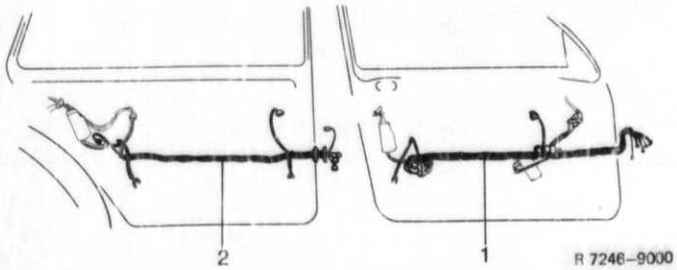

R 7246–9000

1072	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 00 984		182)	1	Cable harness front door	Ledningsnät framdörr	5
0040								
0060	1	95 00 992		183)	1	Cable harness front door	Ledningsnät framdörr	5
0080								
0085	1	95 00 992		182), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0086								
0090	1	*95 18 648*		183), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0095				NLS - USE 9500992				
0096								
0100	2	95 01 099			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0121								
0140	3	95 17 939		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0160								
0170	3	95 16 055		LH, US	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0171								
0172								
0180	4	95 17 947		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0181								
0200								
0220	5	95 17 921			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0240								
0260	5	95 16 063		US	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0280								

182. Drivers side. Förarsida.
183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E18

Compartment
1986

Kupe
1986

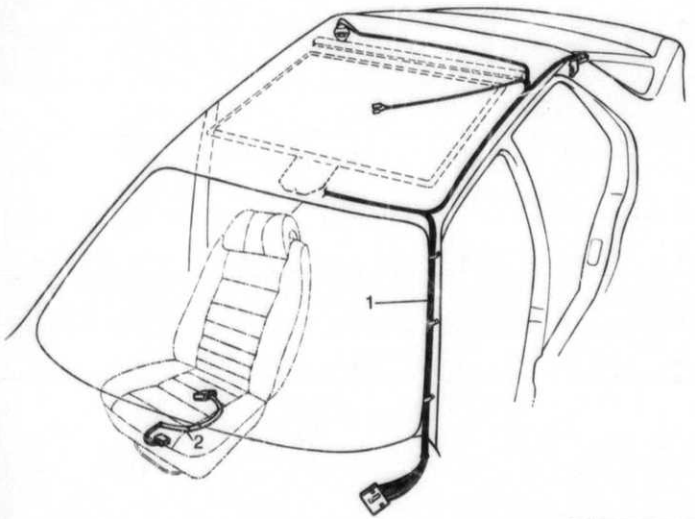

R 9090-9000

1073	Pos	Part no/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 01 115			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0040								
0100	2	95 08 789		183)	1	Cable harness front seat	Ledningsnät framstol	5
0120								


183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

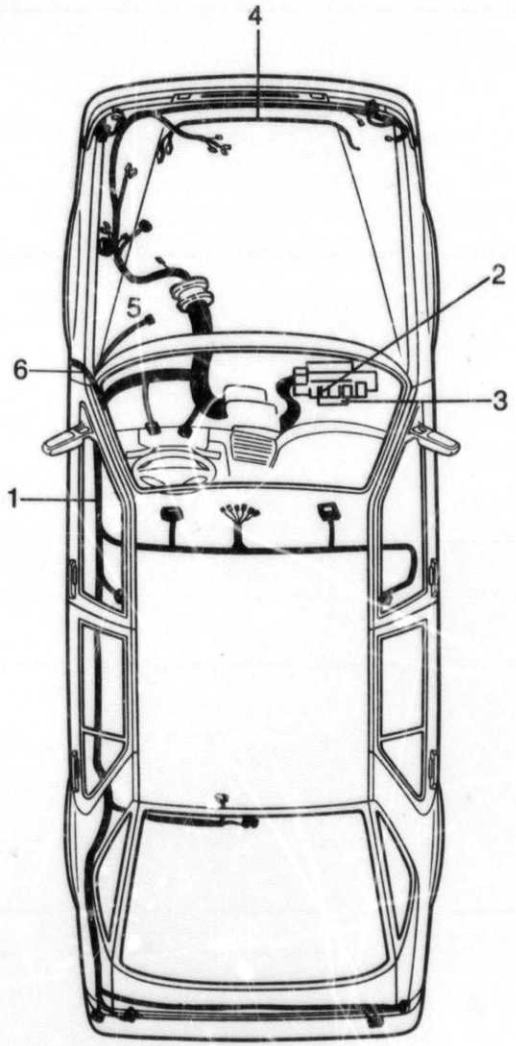

F1912 - 9000

Wiring and fuses

2-E20

Main- and engine comp.

1987

Ledningar och säkringar

Huvud- och motorrum

1987

1074	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 20 057		184), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0060	1	95 20 073		181), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0100	1	95 20 313		184), TURBO, SE, FI EU	1	Cable harness	Ledningsnät	5
0140	1	95 20 339		181), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0180								
0200	1	95 20 099		184), I, GB	1	Cable harness	Ledningsnät	5
0220	1	95 20 115		181), I, GB	1	Cable harness	Ledningsnät	5
0240	1	95 20 354		184), TURBO, GB	1	Cable harness	Ledningsnät	5
0280	1	95 20 370		181), TURBO, GB	1	Cable harness	Ledningsnät	5
0300								
0320	1	95 20 131		184), I, ME	1	Cable harness	Ledningsnät	5
0340	1	*95 20 156*		181), I, ME NLS	1	Cable harness	Ledningsnät	5
0360	1	95 20 396		TURBO, ME	1	Cable harness	Ledningsnät	5
0380								
0400	1	95 20 172		184), I, FE	1	Cable harness	Ledningsnät	5
0440	1	95 20 412		TURBO, FE	1	Cable harness	Ledningsnät	5
0460								
0480	1	95 20 214		184), I, AU	1	Cable harness	Ledningsnät	5
0520	1	95 20 438		184), TURBO, AU	1	Cable harness	Ledningsnät	5
0560	1	95 20 453		181), TURBO, AU	1	Cable harness	Ledningsnät	5
0580								
0600	1	95 20 255		I, US	1	Cable harness	Ledningsnät	5
0620	1	95 20 479		TURBO, US	1	Cable harness	Ledningsnät	5
0640								
0660	1	95 20 271		184), I, CA, JP	1	Cable harness	Ledningsnät	5
0700	1	*95 16 493*		181), I, CA, JP NLS	1	Cable harness	Ledningsnät	5
0720	1	*95 20 495*		184), TURBO, CA, JP NLS	1	Cable harness	Ledningsnät	5
0760	1	95 20 511		181), TURBO, CA, JP	1	Cable harness	Ledningsnät	5
0820	2			See page 3A-149, 2-G06		. Relay retainer	. Relähållare	
0840	3			See page 3A-149, 2-G06		. Fuse holder	. Säkringshållare	
0850	4	95 23 119		AC	1	Cable harness	Ledningsnät	6
0860				See page 8C-027, 6-B04		thermo switch	termobrytare	
0870	5	95 17 400			1	Cable harness	Ledningsnät	6
0871						engine compartment lamp	motorrumslampa	
0880	6	95 17 376			2	Cable harness	Ledningsnät	5
0881						direction indicator	blinklykta	

181. For cars with ACC. För bilar med ACC.
184. For cars without ACC. För bilar utan ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E22

Engine *1987*

Drivaggregat *1987*

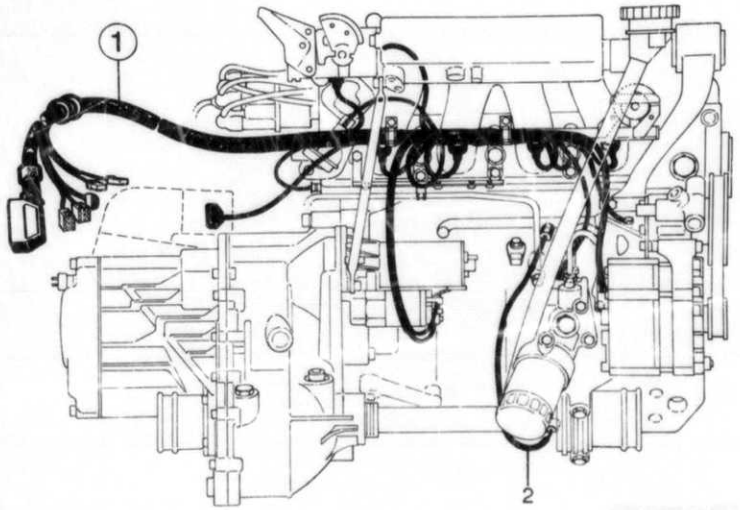

R 8323–9000

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 24 117		I, M, SE, FI, EU, ME, FE	1	Cable harness	Ledningsnät	3
0030 0040 0041	1	95 24 125		44), I, M, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0050 0052 0053 0054	1	95 24 133		44), I, A, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0060 0070 0080	1	95 24 141		TURBO M, SE, FI, EU, GB, ME, FE	1	Cable harness	Ledningsnät	3
0100 0120 0130	1	95 24 158		TURBO A, SE, FI, EU, GB, ME, FE	1	Cable harness	Ledningsnät	3
0140 0150 0170	1	95 24 166		44), TURBO M, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0180 0190 0210	1	95 24 174		44), TURBO A, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0220 0221	2	95 18 523			1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6

44. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-E24 Doors 1987

Dörrar 1987

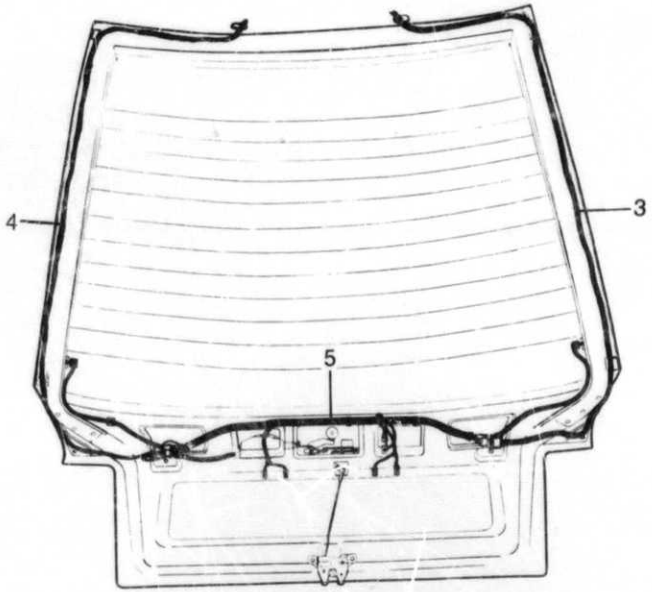

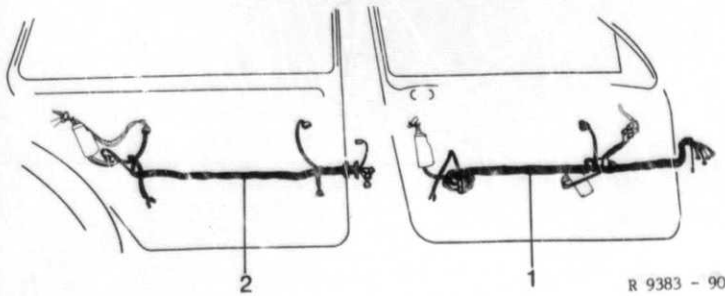

R 9383 - 9000

1076	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 23 556		182)	1	Cable harness front door	Ledningsnät framdörr	5
0020								
0030	1	95 23 572		183)	1	Cable harness front door	Ledningsnät framdörr	5
0040								
0050	1	95 23 564		182), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0060								
0061								
0065	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0066								
0067								
0070	3	95 17 939		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0090								
0100	3	95 17 939		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0110								
0120	3	95 16 055		LH, US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0130								
0131								
0140	4	95 17 947		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150								
0151								
0160	5	95 17 921			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0170								
0180	5	95 16 063		US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0190								

182. Drivers side. Förarsida.
183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F02

Compartment
1987

Kupe
1987

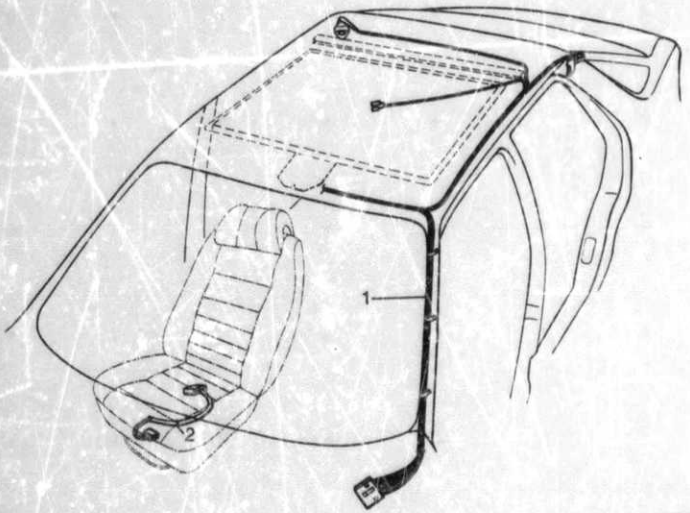

R 9091-9000

1077	Pos	Part No/Art nr	I S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 20 610			1	Cable harness interior illum.	Ledningsnät innarbelysning	5
0030								
0040	2	95 08 789		183)	1	Cable harness front seat	Ledningsnät framstol	5
0050								


183. Passenger side. Passagerarsida.

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3A GROUP INDEX

Battery	**2-A06**
Alternator	**2-A08**
Starter	**2-A14**
Ignition system	**2-A18**
Lighting	**2-B06**
Electrical equipment, other	**2-C08**
Wiring and fuses	**2-E04**
Complete sets	**2-H06**

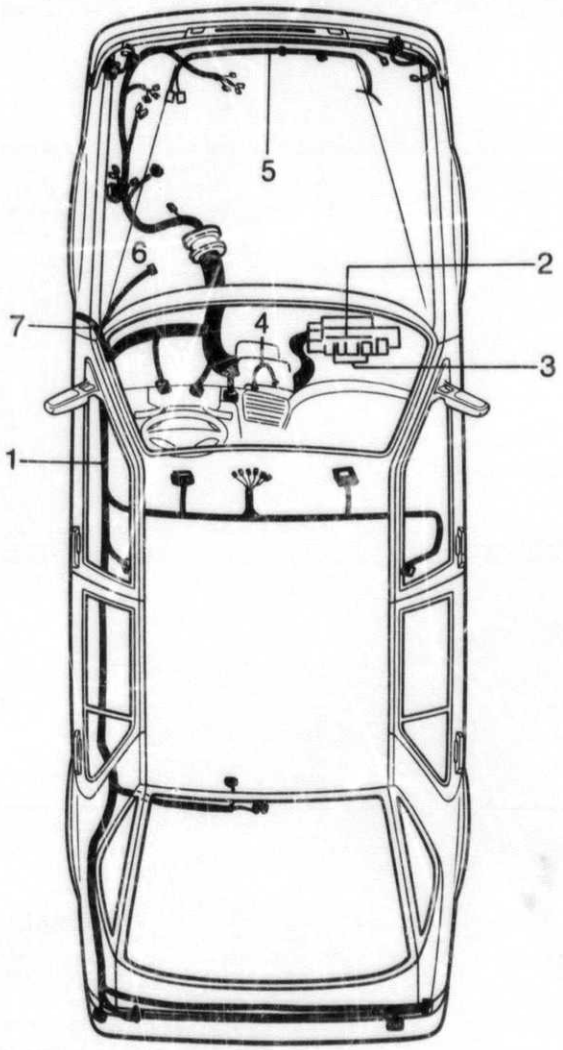

F1913 - 9000

Wiring and fuses

2-F04 *Main- and engine comp. 1988*

Ledningar och säkringar

Huvud- och motorrum 1988

1080	Pos	Part No/Art nr	N S	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 27 037		184), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0030	1	95 27 052		181), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0050	1	95 27 292		184), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0070	1	95 27 318		181), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0090	1	95 27 839		44,184), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0110	1	95 27 854		44,181), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0125	1	95 27 938		184), DI, SE, FI	1	Cable harness	Ledningsnät	5
0129	1	95 27 953		181), DI, SE, FI	1	Cable harness	Ledningsnät	5
0130								
0140	1	95 27 078		184), I, GB	1	Cable harness	Ledningsnät	5
0150	1	95 27 094		181), I, GB	1	Cable harness	Ledningsnät	5
0160	1	95 27 334		184), TURBO, GB	1	Cable harness	Ledningsnät	5
0180	1	95 27 359		181), TURBO, GB	1	Cable harness	Ledningsnät	5
0191	1	95 66 944		184), DI, GB	1	Cable harness	Ledningsnät	5
0193	1	95 66 969		181), DI, GB	1	Cable harness	Ledningsnät	5
0195								
0200	1	95 27 110		184), I, ME	1	Cable harness	Ledningsnät	5
0210	1	95 27 375		TURBO, ME	1	Cable harness	Ledningsnät	5
0220								
0230	1	95 27 151		184), I, FE	1	Cable harness	Ledningsnät	5
0240	1	95 27 417		TURBO, FE	1	Cable harness	Ledningsnät	5
0250								
0260	1	95 27 193		184), I, AU	1	Cable harness	Ledningsnät	5
0270	1	95 27 417		181), TURBO, AU	1	Cable harness	Ledningsnät	5
0280								
0290	1	95 27 235		I, US	1	Cable harness	Ledningsnät	5
0300	1	95 27 433		TURBO, US	1	Cable harness	Ledningsnät	5
0305	1	95 27 896		45), TURBO, US	1	Cable harness	Ledningsnät	5
0310								
0320	1	95 27 250		184), I, JP	1	Cable harness	Ledningsnät	5
0330	1	95 20 511		181), TURBO, JP	1	Cable harness	Ledningsnät	5
0340								
0350	1	95 27 870		184), I, CA	1	Cable harness	Ledningsnät	5
0360	1	95 20 511		181), TURBO, CA	1	Cable harness	Ledningsnät	5
0370								
0420	2			See page 3A-151, 2-G08		.Relay retainer	.Relähållare	
0430	3			See page 3A-151, 2-G08		.Fuse holder	.Säkringshållare	
0440	4	95 24 786		See page 3A-085, 2-D14		Cable radio	Ledning radio	5
0441								
0450	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0460				See page 8C-027, 6-B04		thermo switch	termobrytare	
0470	6	95 17 400			1	Cable harness	Ledningsnät	6
0471						engine compartment lamp	motorrumslampa	
0480	7	95 17 376			2	Cable harness	Ledningsnät	5
0481						direction indicator	blinkykta	


44. With catalytic converter. Med katalytisk reaktor.
45. AIR-BAG.
181. For cars with ACC. För bilar med ACC.
184. For cars without ACC. För bilar utan ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Startør	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

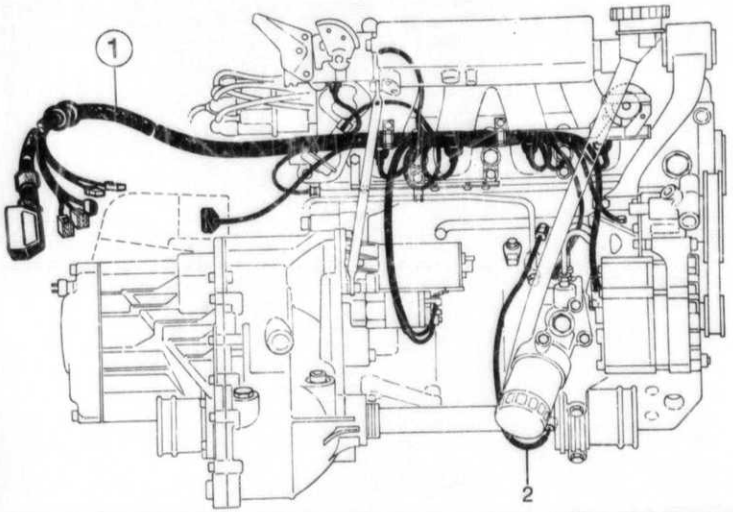

R 9019-9000

1081	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 64 402		I, SE, FI, EU, GB, ME,FE	1	Cable harness	Ledningsnät	3
0040	1	95 64 410		44), I, SE, EU, AU, US, JP	1	Cable harness	Ledningsnät	3
0041								
0050								
0100	1	95 64 428		TURBO, SE, FI, EU, GB, ME, FE	1	Cable harness	Ledningsnät	3
0120								
0130								
0140	1	95 64 436		44), TURBO M, SE, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0150								
0160								
0180	1	95 64 444		44), TURBO A, SE, EU, AU, US, CA, JP	1	Cable harness	Ledningsnät	3
0190								
0200								
0220	2	95 18 523			1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6
0221								

44. With catalytic converter. Med katalytisk reaktor.


MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact houring	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F08 Doors 1988 / Dörrar 1988

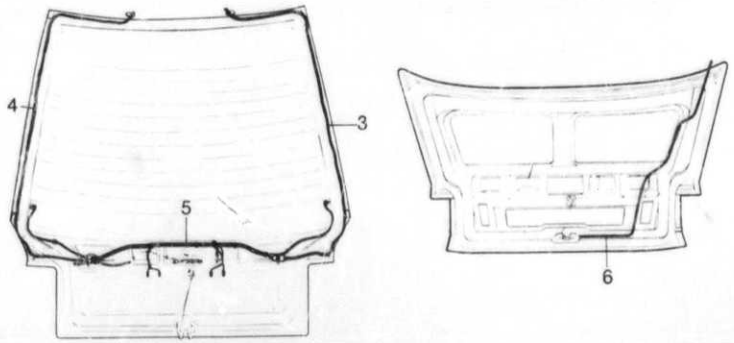

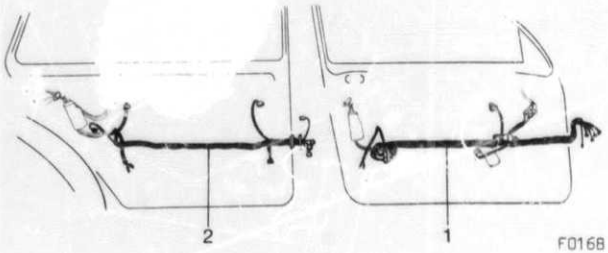

F0168 - 9000

1082	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 67 959		182), (9526864)	1	Cable harness front door	Ledningsnät framdörr	5
0030								
0040	1	95 26 872		183)	1	Cable harness front door	Ledningsnät framdörr	5
0050								
0060	1	95 26 898		182), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0070								
0080	1	95 28 092		183), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0090								
0091								
0100	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0110								
0111								
0120	3	95 17 939		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0125								
0130	3	95 16 055		LH, US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0140								
0141								
0150	4	95 17 947		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0155								
0156								
0160	5	95 17 921			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0165								
0200	5	95 16 063		US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0205								
0210								
0220	6	43 53 702		210), 4D, (4110516)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0230								
0240								
0250		85 48 554		4D	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6
0260				See page 3A-177, 2-H10				

182. Drivers side. Förarsida.
183. Passenger side. Passagerarsida.
210. Use together with screw 84 10 961. Används tillsammans med skruv 84 10 961.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F10

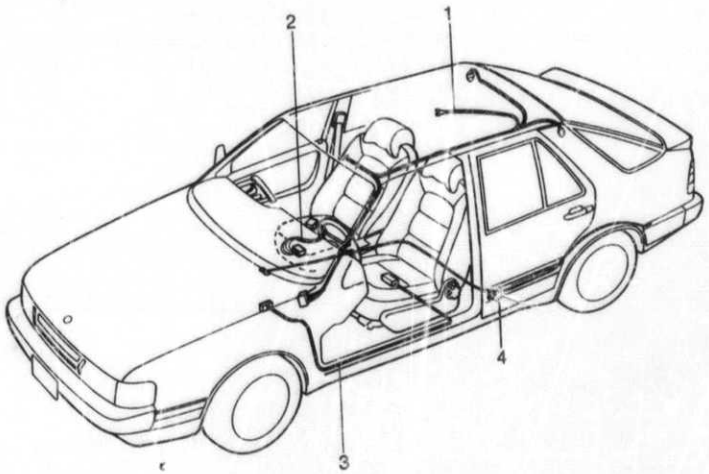

F4080 9000

1083	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 29 777			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0040	2	95 67 561		183)	1	Cable harness front seat	Ledningsnät framstol	5
0060	3	95 27 912		DI	1	Cable harness	Ledningsnät	5
0070	3	91 21 864		DI/APC, RHD	1	Cable harness	Ledningsnät	5
0080	4	95 24 778		17)	1	Cable bass	Ledning bas	5


17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
183. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

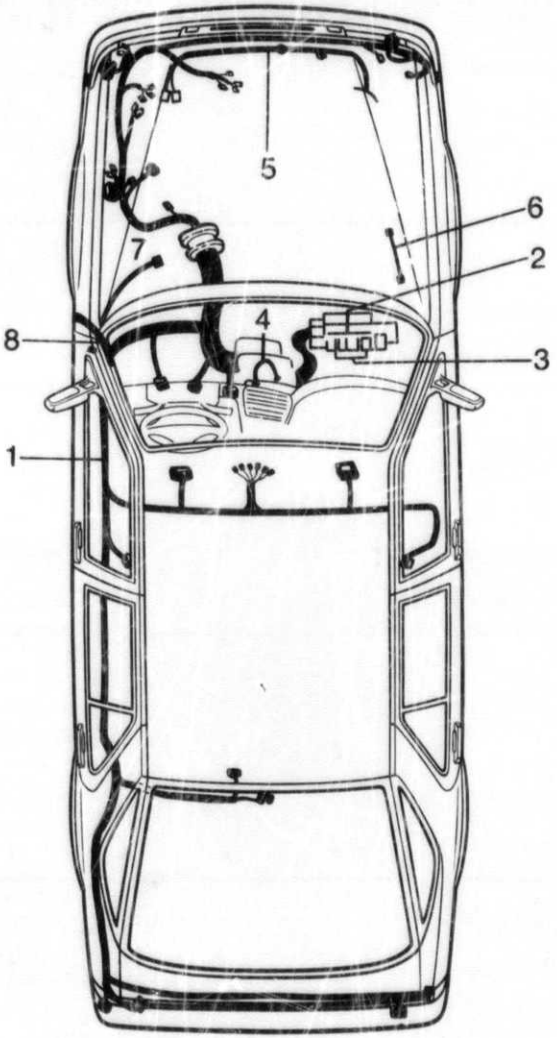

F1914 - 9000

1085	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 69 138		184), I, FI, EU	1	Cable harness	Ledningsnät	5
0030	1	95 69 153		181), I, FI, EU	1	Cable harness	Ledningsnät	5
0050	1	95 69 476		184), TURBO, FI, EU	1	Cable harness	Ledningsnät	5
0070	1	95 69 492		181), TURBO, FI, EU	1	Cable harness	Ledningsnät	5
0075								
0090	1	95 69 195		44,184), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0110	1	95 69 211		44,181), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0125	1	95 69 658		44), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0129	1	95 69 674		44,181), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0130								
0135								
0140	1	95 69 237		184), I, GB	1	Cable harness	Ledningsnät	5
0150	1	95 69 252		181), I, GB	1	Cable harness	Ledningsnät	5
0160	1	95 69 518		184), TURBO, GB	1	Cable harness	Ledningsnät	5
0180	1	95 69 534		181), TURBO, GB	1	Cable harness	Ledningsnät	5
0195								
0200	1	95 69 278		I, ME, FE	1	Cable harness	Ledningsnät	5
0210	1	95 69 559		TURBO, ME, FE	1	Cable harness	Ledningsnät	5
0220								
0230	1	95 69 310		I, RHD, FE	1	Cable harness	Ledningsnät	5
0240	1	95 69 575		TURBO, RHD, FE	1	Cable harness	Ledningsnät	5
0250								
0260	1	95 69 351		184), I, AU	1	Cable harness	Ledningsnät	5
0270	1	95 69 591		TURBO, AU	1	Cable harness	Ledningsnät	5
0280								
0290	1	95 69 393		I, US	1	Cable harness	Ledningsnät	5
0292	1	40 63 830		45), I, US	1	Cable harness	Ledningsnät	5
0295	1	40 60 190		TURBO, US	1	Cable harness	Ledningsnät	5
0300	1	91 24 520		45), TURBO, US	1	Cable harness	Ledningsnät	5
0310								
0320	1	95 69 435		I, JP	1	Cable harness	Ledningsnät	5
0325	1	95 69 351		I, RHD, JP	1	Cable harness	Ledningsnät	5
0330	1	95 69 633		TURBO, JP	1	Cable harness	Ledningsnät	5
0335	1	95 69 591		TURBO, RHD, JP	1	Cable harness	Ledningsnät	5
0340								
0350	1	95 69 419		I, CA	1	Cable harness	Ledningsnät	5
0360	1	91 24 546		TURBO, CA	1	Cable harness	Ledningsnät	5
0370								
0420	2			See page 3A-151, 2-G08		.Relay retainer	.Relähållare	
0430	3			See page 3A-151, 2-G08		.Fuse holder	.Säkringshållare	
0440	4	95 24 786		See page 3A-085, 2-D14		Cable radio	Ledning radio	5
0441								
0450	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0460				See page 8C-027, 6-B04		thermo switch	termobrytare	
0470	6	95 65 144			1	Ground cable	Jordkabel	6
0471						radio interferance suppr	radioavstörning	
0480	7	95 17 400			1	Cable harness	Ledningsnät	6
0181						engine compartment lamp	motorrumslampa	
0490	8	95 17 376			2	Cable harness	Ledningsnät	5
0491						direction indicator	blinklykta	

44. With catalytic converter. Med katalytisk reaktor.
45. AIR-BAG.
181. For cars with ACC. För bilar med ACC.
184. For cars without ACC. För bilar utan ACC.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C01
Wiring and fuses	2-E04
Complete sets	2-H06

2-F14

Engine 500), 1989

Drivaggregat 500), 1989

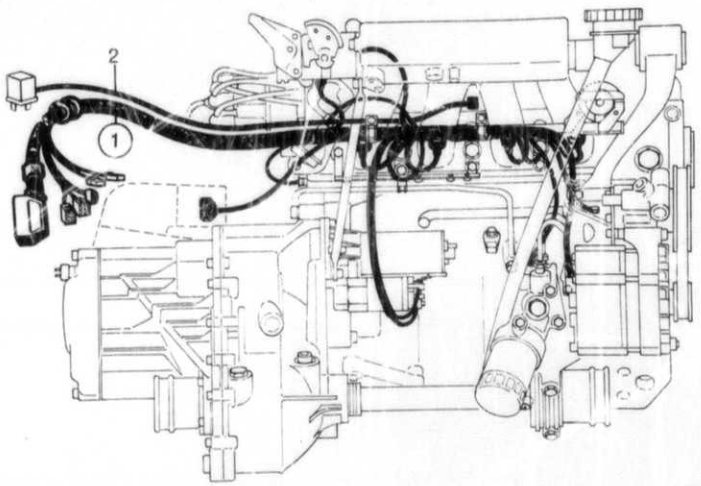

F0171 - 9000

1086	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 69 682		43), I	1	Cable harness	Ledningsnät	3
0030	1	91 24 850		44,185), I	1	Cable harness	Ledningsnät	3
0040	1	95 69 690		44), I	1	Cable harness	Ledningsnät	3
0050								
0100	1	95 69 708		43), TURBO	1	Cable harness	Ledningsnät	3
0110	1	91 24 843		44), TURBO	1	Cable harness	Ledningsnät	3
0180	1	95 69 716		44), TURBO, DI	1	Cable harness	Ledningsnät	3
0200								
0210	2	74 78 142		43,186), LH2.2	1	Cable harness	Ledningsnät	6
0220				See page 2-141, 1-G22		cold starting kit	kallstartsats	

43. Without catalytic converter. Utan katalytisk reaktor.
44. With catalytic converter. Med katalytisk reaktor.
185. For cars without gear indicator. För bilar utan växelindikator.
186. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F16

Doors
500), 1989

Dörrar
500), 1989

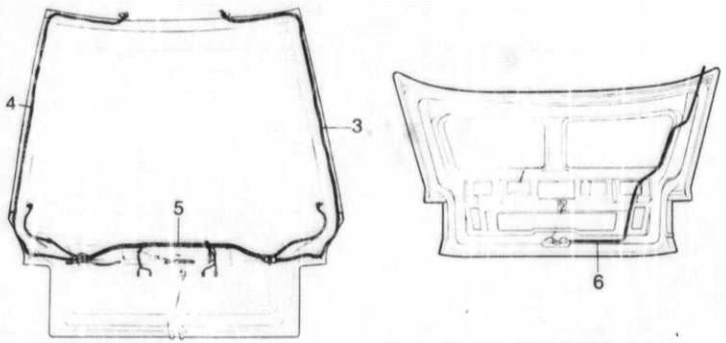

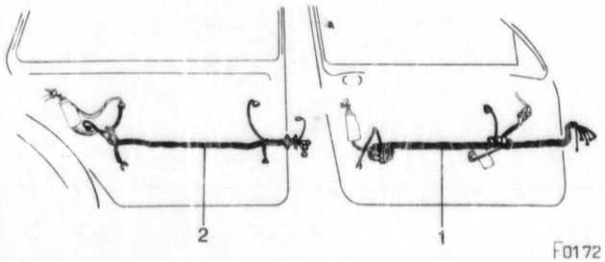

F0172 - 9000

1087	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	95 67 959		182)	1	Cable harness front door	Ledningsnät framdörr	5
0040	1	95 26 872		183)	1	Cable harness front door	Ledningsnät framdörr	5
0060	1	95 26 898		182), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0080	1	95 28 092		183), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0100	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0120	3	95 17 939		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0130	3	95 16 055		LH, US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150	4	95 17 947		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0160	5	95 17 921			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0200	5	95 16 063		US, CA	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0220	6	43 53 702		210), 4D, (4110516)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0250		85 48 554		4D See page 3A-177, 2-H10	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6

182. Drivers side. Förarsida.
183. Passenger side. Passagerarsida.
210. Use together with screw 84 10 961. Används tillsammans med skruv 84 10 961.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F18

Compartment
500), 1989

Kupe
500), 1989

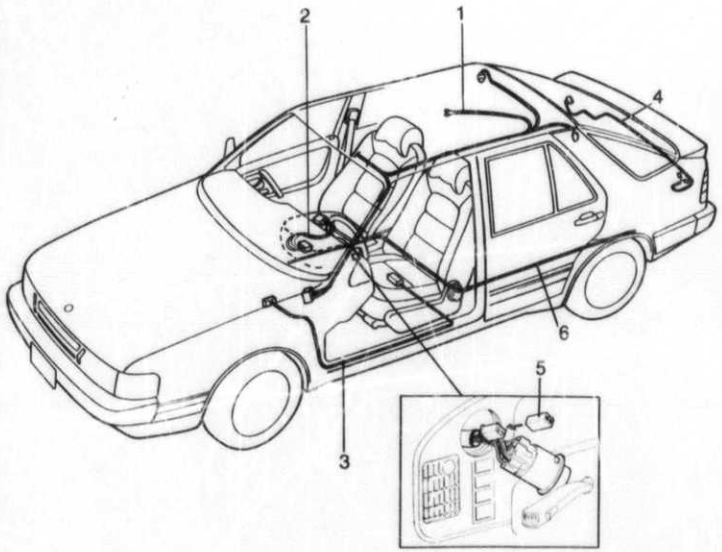

F1915 - 9000

1088	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0020	1	95 69 724			1	Cable harness	Ledningsnät	5
0030						interior illum.	innerbelysning	
0035								
0040	2	95 67 561		183)	1	Cable harness	Ledningsnät	5
0050						front seat	framstol	
0051								
0055	3	91 24 553		APC	1	Cable harness	Ledningsnät	5
0060	3	95 69 070		DI/APC	1	Cable harness	Ledningsnät	5
0063	3	91 23 357		DI/APC, RHD	1	Cable harness	Ledningsnät	5
0065	3	95 69 088		I, EZK	1	Cable harness	Ledningsnät	5
0080	4	95 28 134		4D, US, CA	1	Cable harness	Ledningsnät	6
0081						brake light	bromsljus	
0090	5	95 69 740		IT, FR	1	Cable harness	Ledningsnät	5
0100						control lamp	kontrollampa	
0105	6	95 24 778		17), 5D	1	Cable	Ledning	5
0106						bass	bas	
0110	6	95 67 272		17), 4D	1	Cable	Kabel	5
0115						bass	bas	

17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
183. Passenger side. Passagerarsida.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F20

Bushing, clamp

Bussningar, klammer

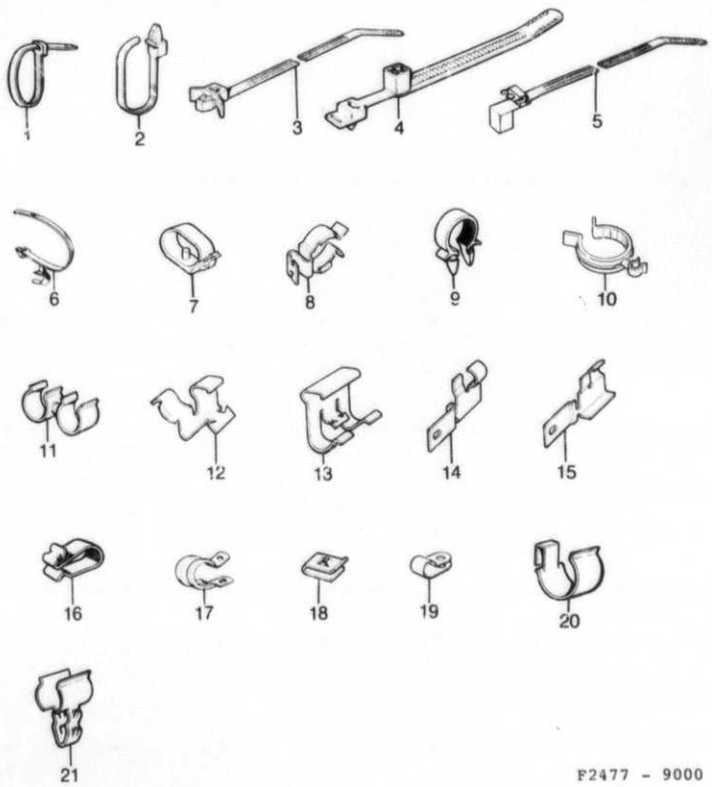

F2477 - 9000

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 71 680		L=259 MM	X	Tensioning band	Spännband	4
0020	1	79 71 898		L=304 MM	X	Tensioning band	Spännband	5
0030	1	79 71 864		L=118 MM	X	Tensioning band	Spännband	5
0040	2	85 52 663		L=200 MM, Ø 6,5 MM	X	Tensioning band	Spännband	5
0060	2	95 28 019		L=212 MM, Ø 8 MM,	X	Tensioning band	Spännband	5
0061				(9522921)				
0070	3	85 52 663		L=200 MM	X	Tensioning band	Spännband	5
0080	4	95 25 221		L=150 MM	X	Tensioning band	Spännband	5
0090	5	91 24 603		1988-, L=215 MM	X	Tensioning band	Spännband	5
0100	5	40 63 681		500), 1989-, L=220 MM	X	Tensioning band	Spännband	5
0110	6	73 98 977		500), 1989-, L=273 MM	X	Tensioning band	Spännband	5
0120	6	73 98 944		L=100 MM	X	Tensioning band	Spännband	5
0130	7	*79 75 642*		28 MM X 16 MM NLS - USE	X	Clamp	Klammer	5
0130				7975667				
0140	7	79 75 659		35 MM X 20 MM	X	Clamp	Klammer	5
0150	7	79 75 667		40 MM X 24 MM	X	Clamp	Klammer	5
0160	8	95 07 914			X	Clip	Clips	5
0170	9	93 65 164		B=12,5 MM	X	Clip	Clips	5
0180	9	85 30 917		B=16 MM	X	Clip	Clips	5
0190	9	85 36 419		B=18,5 MM	X	Clip	Clips	5
0200	10	73 98 407		28 MM	X	Clamp	Klammer	5
0210	11	73 98 464		1987-	X	Clamp	Klammer	5
0220	12	95 08 037			X	Clamp	Klammer	5
0230	13	95 08 045			X	Clamp	Klammer	5
0240	14	95 08 532			X	Clamp	Klammer	5
0250	15	95 08 524			X	Clamp	Klammer	5
0260	16	71 56 409			X	Clamp	Klammer	5
0270	17	79 69 488		B=28 MM	X	Clamp	Klammer	5
0280	17	79 69 462		B=25 MM	X	Clamp	Klammer	5
0290	17	85 66 135		B=11 MM	X	Clamp	Klammer	5
0300	17	*85 66 143*		B=11 MM NLS	X	Clamp	Klammer	5
0310	17	79 69 363		B=9 MM	X	Clamp	Klammer	5
0320	18	79 67 995			X	Clip nut	Clipsmutter	3
0330	19	95 17 871			X	Clamp	Klammer	5
0340						tail gate	bagagerumsdörr	
0350	20	95 19 786		1986-	X	Clip	Clips	5
0360	20	79 33 443		1987-	X	Clip	Clips	5
0370	20	95 19 786			X	Clip	Clips	5
0380	21	95 55 913		1986-	X	Clip	Clips	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D01


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F22

Bushing, clamp

Bussningar, klammer

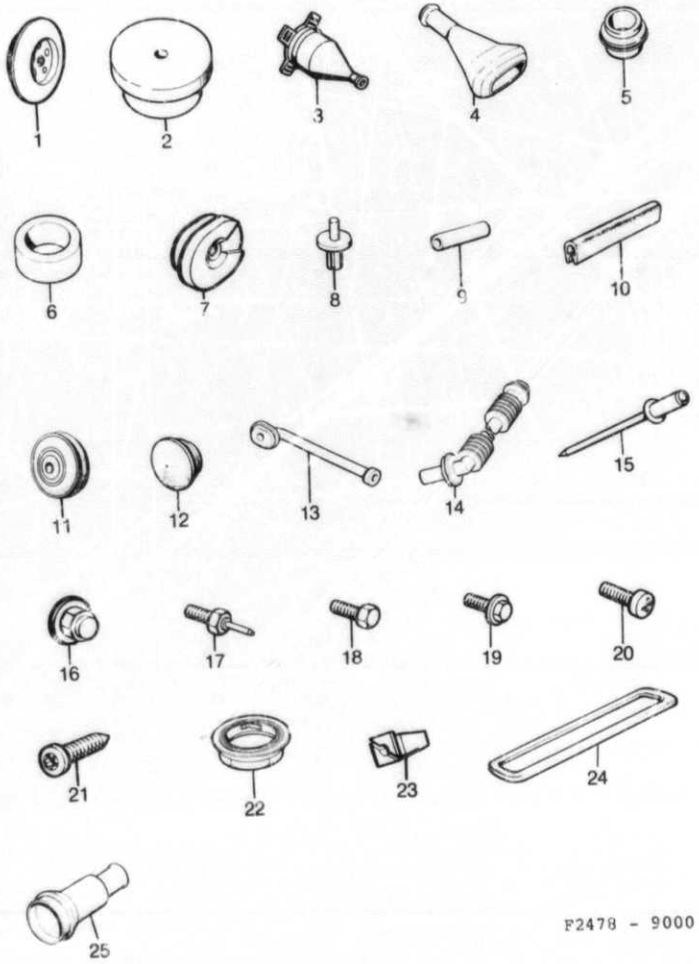

1092	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 07 666			1	Grommet	Genomföring	5
0020	2	95 15 412		24), Ø 60 MM	2	Bushing A-pillar	Bussning A-stolpe	6
0040	2	95 23 622		25), Ø 60 MM	2	Bushing A-pillar	Bussning A-stolpe	6
0060	2	95 23 465		25), Ø 60 MM	2	Bushing main cable harness	Bussning huvudledningsnät	6
0080	3	85 52 721			4	Cable protection cable harness	Kabelskydd ledningsnät	4
0100	4	85 74 105		1987	1	Protection	Skydd	4
0110	4	85 79 955		1988-	1	Protection	Skydd	4
0120	5	*95 02 840*		NLS	1	Grommet	Genomföring	6
0130	6	95 19 570		1986-	1	Seal main cable harness	Tätning huvudledningsnät	5
0150	7	95 08 482			X	Bushing	Bussning	6
0160	8	73 99 256		(9517889)	X	Rivet	Nit	3
0170	9	95 29 660			1	Protection holder, relay box	Skydd hållare, reläbox	4
0190	10	85 64 973		L=150 MM, (8497471)	X	Protecting moulding	Skyddslist	6
0200	10	95 19 737		L=140 MM	X	Protecting moulding	Skyddslist	5
0210	10	75 91 035		L=55 MM	X	Protecting moulding	Skyddslist	5
0220	10	82 78 558		L=90 MM	X	Protecting moulding	Skyddslist	5
0230	11	73 26 093		1986-	X	Bushing	Bussning	5
0240	12	85 75 599		-1986, Ø 25 MM	X	Plug	Plugg	5
0250	12	69 42 775		1987-, Ø 25 MM	X	Plug	Plugg	5
0260	12	92 67 881		Ø 6,7 MM	X	Plug	Plugg	5
0270	13	95 03 491			X	Grommet	Genomföring	6
0280	14	95 07 690			X	Bellows	Bälg	6
0290	15	73 99 348		1987, EW	1	Rivet relay	Nit relä	5
0310	16	79 74 298		1988, EW	1	Nut relay	Mutter relä	5
0330	16	79 75 576		500), 1989-, EW	1	Nut relay	Mutter relä	5
0350	17	*79 74 090*		NLS - USE 7399348	X	Screw	Skruv	5
0360	18	*79 71 757*		147), M8X10 NLS - USE 7528953	X	Screw ground	Skruv jord	5
0380	18	80 82 935		M8X16	X	Screw	Skruv	5
0390	18	79 67 938		147), M8X16	X	Screw ground	Skruv jord	5
0410	18	80 91 738		M8X18	X	Screw	Skruv	5
0420	19	79 72 607		M6X12	X	Screw	Skruv	5
0430	19	79 72 466		M6X16	X	Screw	Skruv	5
0440	19	79 73 555		1988-, M6X22	X	Screw	Skruv	5
0450	19	79 71 823		B8X16	X	Screw	Skruv	5
0460	19	80 59 552		-1987	X	Screw ground	Skruv jord	5
0480	19	82 86 296		1988-	X	Screw ground	Skruv jord	5
0500	19	79 74 397		500), 1989-	X	Screw radio interferance suppr	Skruv radioavstörning	5
0520	20	79 22 354		4,8X13	X	Screw	Skruv	5
0530	20	79 22 826		4,8X16	X	Screw	Skruv	5
0540	20	79 22 347		1987-, B10X9,5	X	Screw	Skruv	5
0550	20	73 99 520		AIR-BAG	X	Screw	Skruv	5
0560	21	79 22 420		ABS	X	Screw ground	Skruv jord	5
0580	21	80 59 552		4D	X	Screw boot lid	Skruv bagagerumslucka	5

24. Ch -G1023184.
25. Ch G1023185-.
147. Ch K8001199-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-F24

Bushing, clamp

Bussningar, klammer

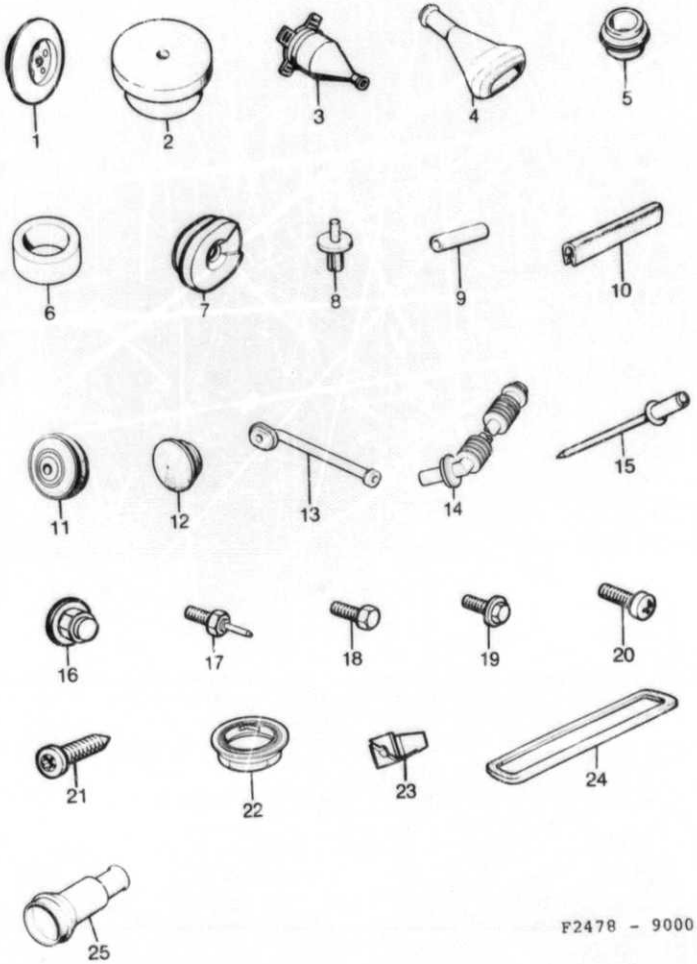

F2478 - 9000

1092	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	21	79 72 805			X	Screw	Skruv	5
0610	21	* 84 10 961			X	Screw	Skruv	5
0620	22	95 29 520		AIR-BAG	1	Nut	Mutter	5
0630	23	79 75 261		ABS	X	Nut	Mutter	5
0640						ground	jord	
0650	24	95 64 204		1988-	1	Seal	Tätning	5
0660	25	91 20 106		500), 1989-	1	Protection	Skydd	4

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G02

Mounting details
Body

Monteringsdetaljer
Kaross

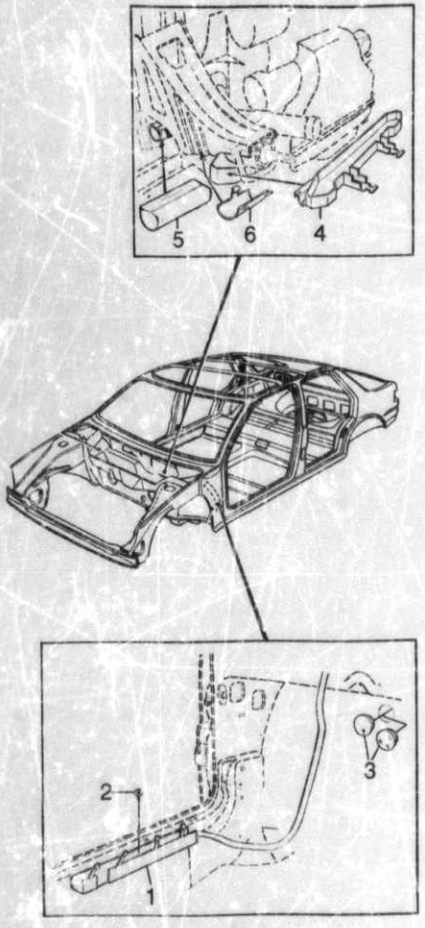

F2479 - 9000

1095	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 23 218		1988-, LH	1	Cable protection sill	Kabelskydd tröskel	4
0020								
0030	2	95 65 417		1988-	2	Rivet	Nit	3
0040								
0050	3	91 20 080		-1988, DI/ABS/APC/EZK	1	Bushing	Bussning	6
0060	3	91 25 360		500)1989-,DI/ABS/APC/EZK	1	Bushing	Bussning	6
0070	3	91 25 378		500), 1989-, DI/APC/EZK	1	Bushing	Bussning	6
0080								
0090	4	95 24 638		1988-	1	Cable protection cable harness	Kabelskydd ledningsnät	4
0100								
0110	5	95 26 013		1988-	1	Duct steering column	Kanal rattställ	5
0120								
0130	5	95 18 119		1988-, RHD	1	Clamp steering column	Klammer rattställ	5
0140								
0150	6	95 26 088		1988-	1	Clamp main cable harness	Klämma huvudledningsnät	4
0160								

500. Also valid for SE 1988. Gäller även för SE 1988.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2--G04

Mounting details
Doors

Monteringsdetaljer
Dörrar

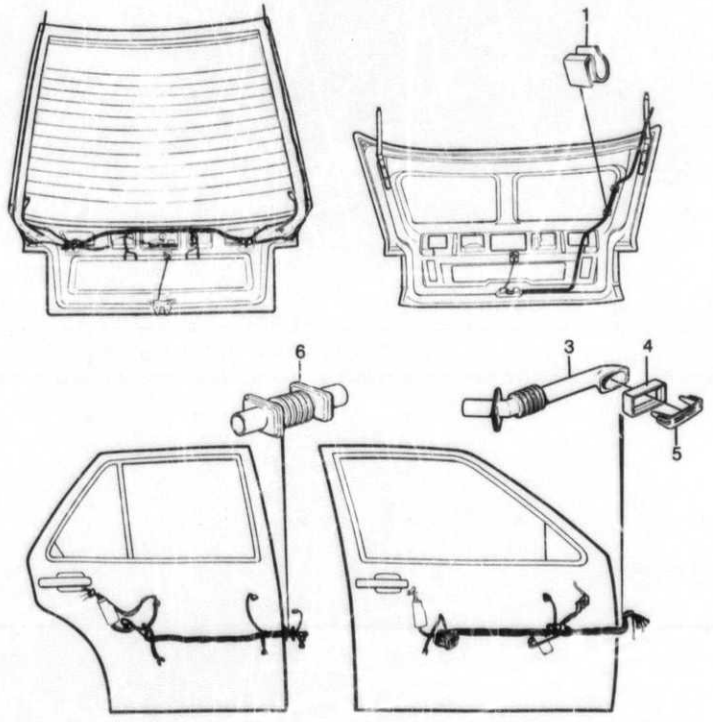

F7117 9000

1097	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	71 08 491		4D	3	Clamp	Klammer	5
0030								6
0040	3	95 26 773		195), 1988-	2	Bellows	Bälg	6
0050	4	95 63 560		195,197), 1988-	2	Seal	Tätning	5
0060	5	95 25 122		195,197), 1988-	2	Key	Kil	4
0070								
0080	6	95 16 212		196)	2	Bellows	Bälg	6

195. Front. Främre.
196. Rear. Bakre.
197. For contact housing 95 25 114, 22-pole. För kontakthus 95 25 114, 22-poligt.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G06 Holders and brackets -1987

Hållare och konsoler -1987

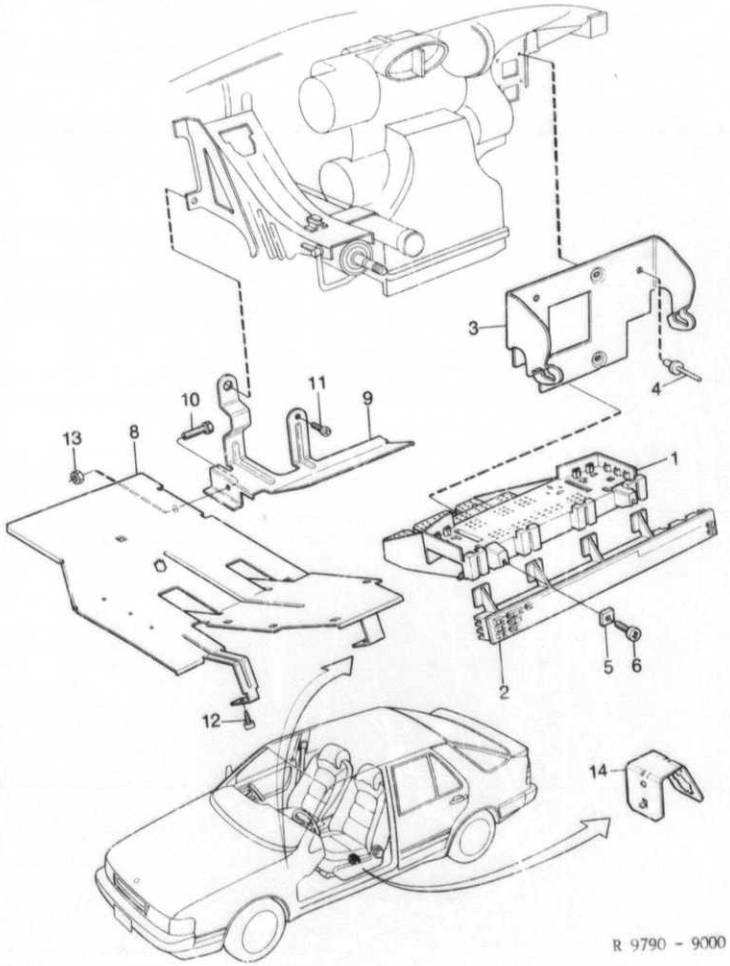

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	91 22 730		187)	1	Retainer	Hållare	5
0040	2	91 22 748		187)	1	Retainer	Hållare	5
0050	2	91 22 755		187), RHD	1	Retainer	Hållare	5
0060	3	95 05 959			1	Bracket	Konsol	6
0070	3	95 08 441		RHD	1	Bracket	Konsol	6
0080	4	79 61 642			4	Rivet	Nit	5
0100	5	79 68 555			2	Clip nut	Clipsmutter	3
0120	6	79 22 297			2	Screw	Skruv	5
0142	8	95 13 573		(9506031)	1	Bracket	Konsol	6
0152	8	95 08 946		RHD, (9508581)	1	Bracket	Konsol	6
0160	9	95 06 924			1	Bracket	Konsol	6
0170	9	95 08 599		RHD	1	Bracket	Konsol	6
0180	10	80 19 895			1	Screw	Skruv	5
0200	11	79 61 949			2	Screw	Skruv	5
0220	12	79 61 949			1	Screw	Skruv	5
0240	13	80 29 555			1	Nut	Mutter	5
0250	14	*95 08 029*		NLS	2	Bracket	Hållare	5

187. Part of main cable harness. Del av huvudledningsnät.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G08

Holders and brackets
1988-

Hållare och konsoler
1988-

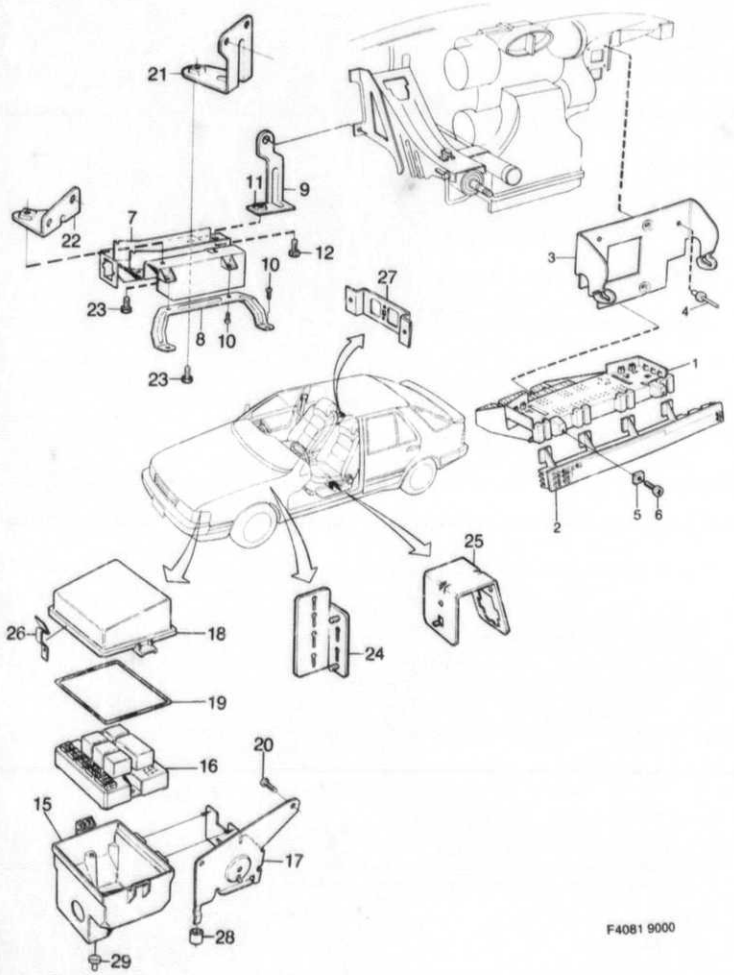

F4081 9000

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	91 22 730		187)	1	Retainer	Hållare	5
0030	2	91 22 748		187)	1	Retainer	Hållare	5
0040	2	91 22 755		187), RHD	1	Retainer	Hållare	5
0060	3	95 05 959			1	Bracket	Konsol	6
0070	3	95 08 441		RHD	1	Bracket	Konsol	6
0080	4	79 61 642			4	Rivet	Nit	5
0100	5	79 68 555			2	Clip nut	Clipsmutter	3
0120	6	79 22 297			2	Screw	Skruv	5
0130	7	95 25 007		1988-	1	Bracket	Konsol	6
0135	7	40 66 296		500), 1989-	1	Bracket	Konsol	6
0140	7	95 26 799		RHD	1	Bracket	Konsol	6
0150	8	95 26 328			1	Bracket	Hållare	6
0160	9	95 26 336			1	Bracket	Hållare	6
0165	9	95 27 631		RHD	1	Bracket	Hållare	6
0170	10	79 22 354			4	Screw	Skruv	5
0180	11	79 67 995			2	Clip nut	Clipsmutter	3
0190	12	80 59 578			1	Screw	Skruv	5
0250	15	*95 24 807*		53) NLS - USE 4117339, 9123316	1	Box	Box	4
0255	15	*91 22 540*		54,135) NLS - USE 4117339, 9123316	1	Box	Box	4
0260	15	*91 25 386*		137) NLS - USE 4117339	1	Box	Box	4
0265	16	91 23 407			1	Bracket	Hållare	4
0270	17	*95 24 935*		1988 NLS - USE 4060158, 4061388	1	Bracket	Hållare	4
0275	17	91 21 674		1989-,96,500)	1	Bracket	Hållare	4
0277	17	40 60 158		97,500)	1	Bracket	Hållare	4
0280	18	95 27 797		1988	1	Cover	Lock	3
0283	18	91 21 872		1989-,136,500)	1	Cover	Lock	3
0284	18	*40 60 349*		137) NLS - USE 4179784	1	Cover	Lock	3
0285	19	95 27 789		137)	1	.Seal	.Tätning	6
0287	19	95 27 789			1	Seal	Tätning	6
0290	20	79 22 362			2	Screw	Skruv	5
0300	21	95 25 460		45)	1	Bracket	Hållare	6
0310	22	95 25 486		45)	1	Bracket	Hållare	6
0320	23	79 22 420		45)	4	Screw	Skruv	5
0330	24	95 25 908		DI	1	Bracket	Hållare	4
0340	25	*95 08 029*		1988 NLS	2	Bracket	Hållare	5
0345	25	95 67 702		500), 1989-	2	Bracket	Hållare	5
0350	26	91 23 308		136)	X	Lock brace	Låsbygel	5
0355	26	91 23 316		137)	X	Lock brace	Låsbygel	5
0360	27	91 25 006		500), 1989-	1	Bracket	Konsol	4
0370	28	40 61 388		97)	1	Protection	Skydd	4
0380	29	71 16 452			1	Draining plug	Dräneringsplugg	5

45. AIR-BAG.
53. Ch --J1016148, --J2008745, --J8000986.
54. Ch J1016149--, J2008746--, J8000987--.
96. Ch --K1009290, --K2004513, --K8000353.
97. Ch K1009291--, K2004514--, K8000354--.
136. Ch --K1009290, --K2004513, --K8000353.
137. Ch K1009291--, K2004514--, K8000354--.
187. Part of main cable harness. Del av huvudledningsnät.
198. Ch J1014463--, J2007677--, J8000885--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2--G10

Relays and fuses 1985

Reläer och säkringar 1985

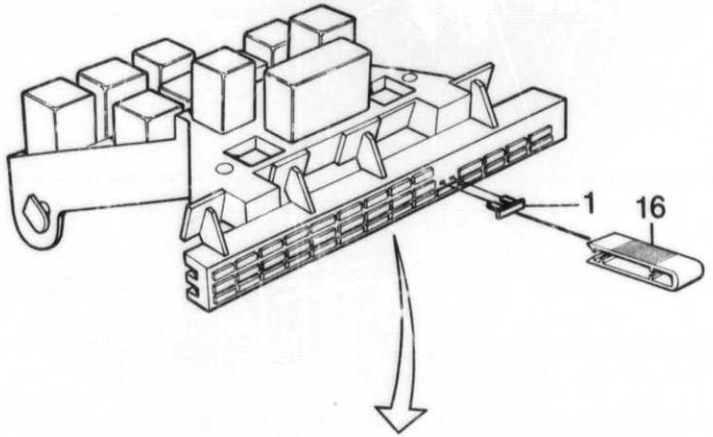

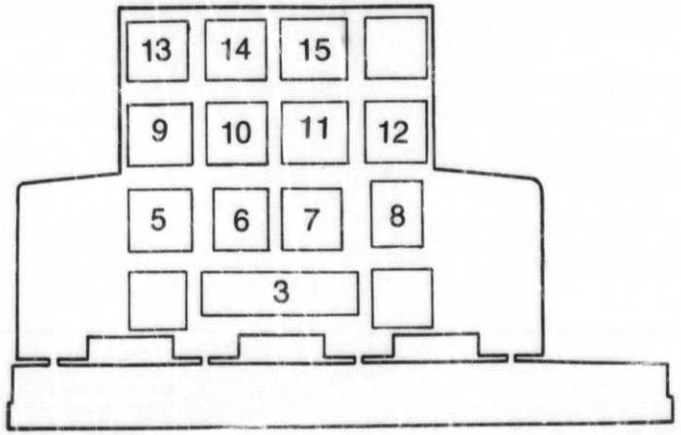

F4082 9000

1220 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020 1	79 74 637		10A	X	Fuse	Säkring	1
0040 1	79 74 645		15A	X	Fuse	Säkring	1
0060 1	79 74 652		20A	X	Fuse	Säkring	1
0080 1	79 74 660		25A	X	Fuse	Säkring	1
0100 1	79 74 678		30A	X	Fuse	Säkring	1
0120 3	*95 05 918*		SE, GB	1	Relay	Relä	5
0121			NLS - USE 9505926		bulb check	lampkontroll	
0140 3	95 05 926		FI, ME, FE, AU, JP	1	Relay	Relä	5
0141					bulb check	lampkontroll	
0150 3	95 09 944		EU	1	Relay	Relä	5
0151					bulb check	lampkontroll	
0160 5	*95 18 135*		188)	1	Relay	Relä	4
0161			NLS - USE 9519133		rear window	bakruta	
0200 5	85 22 310		181)	1	Relay	Relä	3
0201					rear window	bakruta	
0203 6	85 22 310			1	Relay	Relä	3
0204					horn	signalhorn	
0205 7	85 72 190		ACC	1	Relay	Relä	3
0220 8	95 22 061		(8572943)	1	Relay	Relä	5
0221					starter switch	tändningslås	
0240 9	85 36 401			1	Relay	Relä	3
0241					LH-system	LH-system	
0260 10	85 36 401			1	Relay	Relä	3
0261					LH-system	LH-system	
0280 11	85 36 401		ACC	1	Relay	Relä	3
0300 12	85 22 310			1	Relay	Relä	3
0301					light	ljus	
0320 13	85 53 463			1	Relay	Relä	6
0321					intermittent wiper	intervalltorkare	
0340 14	95 15 099		(8589319)	1	Relay	Relä	4
0341					interior illum.	innerbelysning	
0380 15	85 83 627			1	Flasher relay	Blinkrelä	2
0390 16	85 87 636			1	Fuse clip	Säkringsklämma	5

181. For cars with ACC. För bilar med ACC.
188. Timer relay. Tidrelä.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G12 Relays and fuses 1986

Reläer och säkringar 1986

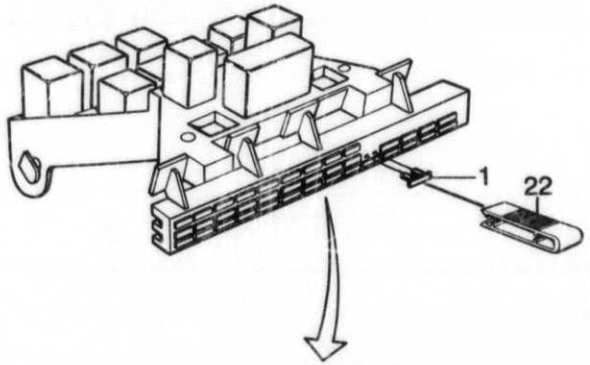

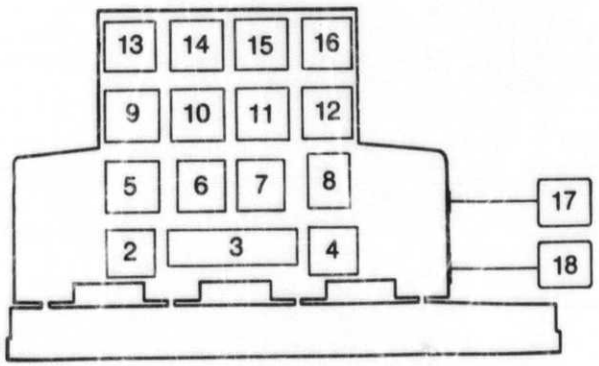

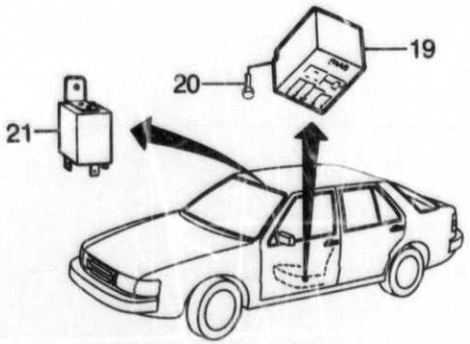

F4083 9000

1225	Pos.	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0040	1	79 74 645		15A	X	Fuse	Säkring	1
0060	1	79 74 652		20A	X	Fuse	Säkring	1
0080	1	79 74 660		25A	X	Fuse	Säkring	1
0100	1	79 74 678		30A	X	Fuse	Säkring	1
0120	2	95 63 313		US, (9516071)	1	Buzzer	Summer	5
0121						seat belt warning	bältesvarning	
0140	3	*95 05 918*		SE, GB	1	Relay	Relä	5
0141				NLS - USE 9505926		bulb check	lampkontroll	
0160	3	95 05 926		FI, ME, FE, AU, JP	1	Relay	Relä	5
0161						bulb check	lampkontroll	
0180	3	95 09 944		EU	1	Relay	Relä	5
0181						bulb check	lampkontroll	
0200	3	95 09 951		US, CA	1	Relay	Relä	5
0201						bulb check	lampkontroll	
0220	4	85 22 310			1	Relay	Relä	3
0221						horn	signalhorn	
0240	5	*95 18 135*		188)	1	Relay	Relä	4
0251				NLS - USE 9519133		rear window	bakruta	
0280	5	85 22 310		181)	1	Relay	Relä	3
0281						rear window	bakruta	
0320	6	*95 13 219*		AC	1	Relay	Relä	5
0321				NLS - USE 4179925		compressor	kompressor	
0341	7	85 36 401		AC	1	Relay	Relä	3
0342						cooling fan	kylfläkt	
0360	8	95 22 061		(8572943)	1	Relay	Relä	5
0361						starter switch	tändningslås	
0380	9	85 36 401			1	Relay	Relä	3
0381						LH-system	LH-system	
0400	10	85 36 401			1	Relay	Relä	3
0401						fuel pump	bränslepump	
0420	11	95 18 481			1	Relay	Relä	5
0421						signal amplifier	signalförstärkare	
0460	12	85 22 310			1	Relay	Relä	3
0461						light	ljus	
0480	13	85 53 463			1	Relay	Relä	6
0481						intermittent wiper	intervalltorkare	
0500	14	95 15 099			1	Relay	Relä	4
0501						interior illum.	innerbelysning	
0540	15	85 83 627			1	Flasher relay	Blinkrelä	2
0560	16	85 91 729		US	1	Relay	Relä	5
0561						gear indicator	växelindikator	
0580	17	95 58 073		188), US, CA, JP, AU,	1	Relay	Relä	4
0581				ME, FE, (8587677)		cooling fan	kylfläkt	
0590	18	95 19 224		US	1	Relay	Relä	2
0591						front fog light	dimstrålkastare	
0620	19	95 12 823		EW	1	Relay	Relä	5
0660	20	*79 74 090*		NLS - USE 7399348	1	Screw	Skruv	5
0670	21			See page 8A-013, 4-F14	X	Relay	Relä	
0680						sun roof	soltak	
0690	22	85 87 836			1	Fuse clip	Säkringsklämma	5

181. For cars with ACC. För bilar med ACC.
188. Timer relay. Tidrelä.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G14 Relays and fuses 1987

Reläer och säkringar 1987

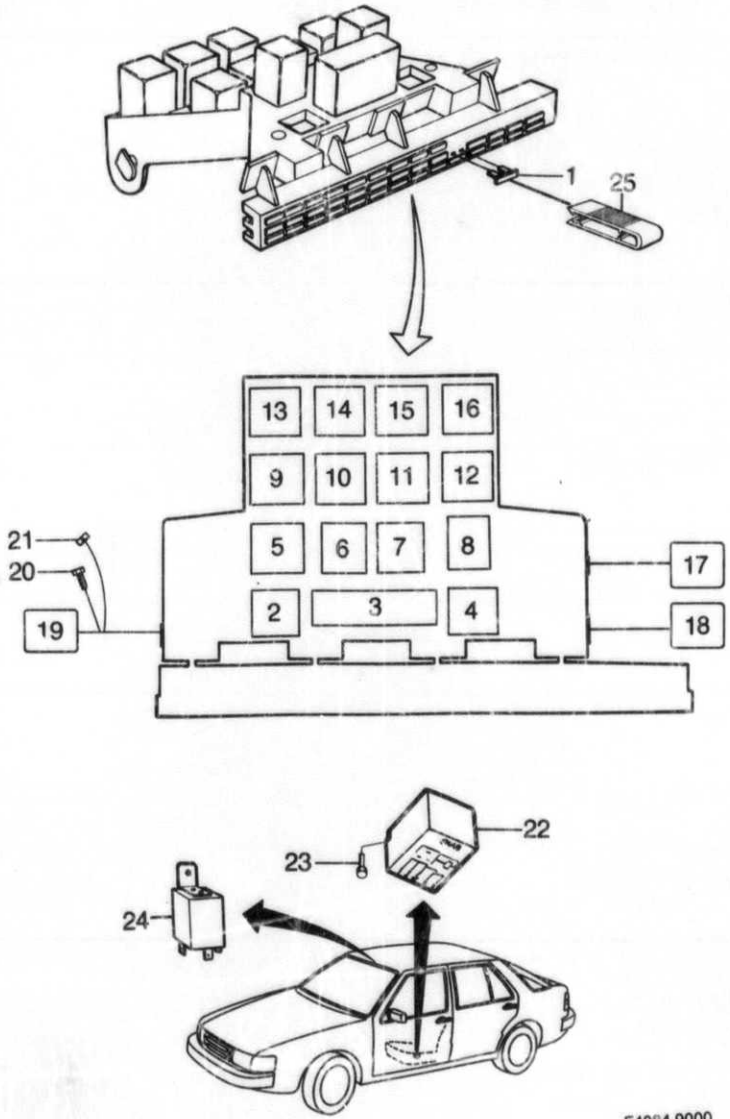

1230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 637		10A	X	Fuse	Säkring	1
0020	1	79 74 645		15A	X	Fuse	Säkring	1
0030	1	79 74 652		20A	X	Fuse	Säkring	1
0040	1	79 74 660		25A	X	Fuse	Säkring	1
0050	1	79 74 678		30A	X	Fuse	Säkring	1
0060	2	95 63 313		US, (9516071)	1	Buzzer seat belt warning	Summer bältesvarning	5
0070								
0080	3	95 05 926		SE, FI, GB, ME, FE, AU, JP	1	Relay bulb check	Relä lampkontroll	5
0090								
0100	1	95 09 944		EU	1	Relay bulb check	Relä lampkontroll	5
0110								
0120	3	95 09 951		US, CA	1	Relay bulb check	Relä lampkontroll	5
0130								
0140	4	85 22 310			1	Relay horn	Relä signalhorn	3
0150								
0160	5	*95 18 135*		188) NLS - USE 9519133	1	Relay rear window	Relä bakruta	4
0170								
0180	5	85 22 310		181)	1	Relay rear window	Relä bakruta	3
0190								
0200	6	*95 13 219*		AC NLS - USE 4179925	1	Relay compressor	Relä kompressor	5
0210								
0220	7	85 36 401		AC	1	Relay cooling fan	Relä kylfläkt	3
0230								
0240	8	95 22 061			1	Relay starter switch	Relä tändningslås	5
0250								
0260	9	85 36 401			1	Relay LH-system	Relä LH-system	3
0270								
0280	10	85 36 401			1	Relay fuel pump	Relä bränslepump	3
0290								
0300	11	95 18 481			1	Relay signal amplifier	Relä signalförstärkare	5
0310								
0320	12	85 22 310			1	Relay light	Relä ljus	3
0330								
0340	13	85 53 463			1	Relay intermittent wiper	Relä intervalltorkare	6
0350								
0360	14	95 15 099		188)	1	Relay interior illum	Relä innerbelysning	4
0370								
0380	15	85 83 627			1	Flasher relay	Blinkrelä	2
0390	16	85 91 729		US	1	Relay gear indicator	Relä växelindikator	5
0400								
0410	17	95 58 073		188), US, CA, JP, AU, ME, FE, (8587677)	1	Relay cooling fan	Relä kylfläkt	4
0420								
0430	18	95 19 224		US	1	Relay front fog light	Relä dimstrålkastare	2
0440								
0450	19	95 19 224		GB	1	Relay dim-dip	Relä dim-dip	2
0451								
0460	20	79 22 326		GB	1	Screw	Skruv	5
0470	21	79 75 261		GB	1	Nut	Mutter	5
0480	22	95 12 823		EW	1	Relay	Relä	5
0490	23	*79 74 090*		NLS - USE 7399348	1	Screw	Skruv	5
0500	24			See page 8A-013 4-F14	X	Relay sun roof	Relä soltak	
0510								
0520	25	85 87 636			1	Fuse clip	Säkringsklämma	5

181. For cars with ACC. För bilar med ACC.
188. Timer relay. Tidrelä.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G16

Relays and fuses
1988

Reläer och säkringar
1988

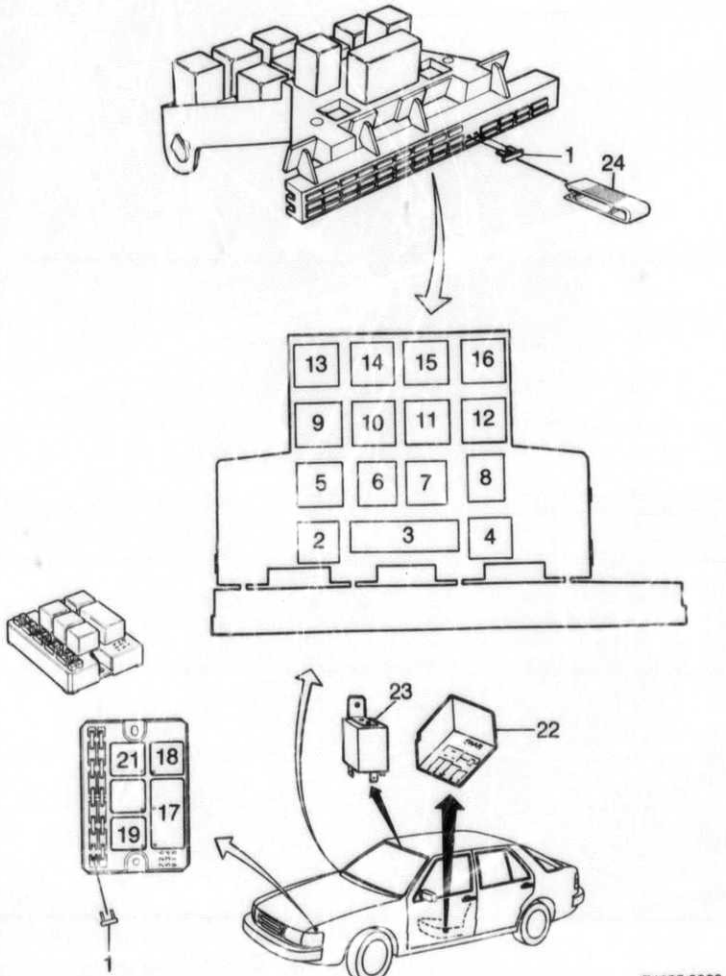

F4085 9000

1235	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Oh/ Antal	Description	Benämning	S L
0010	1	79 74 637		10A	X	Fuse	Säkring	1
0020	1	79 74 645		15A	X	Fuse	Säkring	1
0030	1	79 74 652		20A	X	Fuse	Säkring	1
0040	1	79 74 660		25A	X	Fuse	Säkring	1
0050	1	79 74 678		30A	X	Fuse	Säkring	1
0060	2	95 63 313		US, (9516071)	1	Buzzer	Summer	5
0070						seat belt warning	bältesvarning	
0100	3	95 64 147		SE, FI ,GB, ME, FE, AU, JP, (9524661)	1	Relay	Relä	5
0110						bulb check	lampkontroll	
0120	3	95 24 679		66), EU	1	Relay	Relä	5
0130						bulb check	lampkontroll	
0140	3	95 64 154		67), EU	1	Relay	Relä	5
0150						bulb check	lampkontroll	
0160	3	95 24 653		66), US, CA	1	Relay	Relä	5
0170						bulb check	lampkontroll	
0180	3	95 64 139		67), US, CA	1	Relay	Relä	5
0190						bulb check	lampkontroll	
0200	4	95 26 765		188), US, CA, JA, AU, ME, FE, JP	1	Relay	Relä	4
0210						cooling fan	kylfläkt	
0220	5	95 19 133		188)	1	Relay	Relä	4
0230						rear window	bakruta	
0240	5	85 22 310		181)	1	Relay	Relä	3
0250						rear window	bakruta	
0260	6	*95 13 219*		AC	1	Relay	Relä	5
0270				NLS - USE 4179925		compressor	kompressor	
0280	7	85 36 401		AC	1	Relay	Relä	3
0290						cooling fan	kylfläkt	
0300	8	95 22 061			1	Relay	Relä	5
0310						starter switch	tändningslås	
0320	9	85 36 401			1	Relay	Relä	3
0330						LH-system	LH-system	
0340	10	85 36 401			1	Relay	Relä	3
0350						fuel pump	bränslepump	
0360	11	85 22 310		GB	1	Relay	Relä	3
0361						dim-dip	dim-dip	
0370	12	95 56 390		GB	1	Relay	Relä	9
0371						dim-dip	dim-dip	
0380	13	85 53 463			1	Relay	Relä	6
0381						intermittent wiper	intervallt0rkare	
0390	14	95 15 099		188)	1	Relay	Relä	4
0391						interior illum.	innerbelysning	
0400	15	85 83 627			1	Flasher relay	Blinkrelä	2
0410	16	85 91 729		TURBO	1	Relay	Relä	5
0411						gear indicator	växelindikator	
0420	16	95 64 717		I	1	Relay	Relä	4
0421						gear indicator	växelindikator	
0430	17	95 53 546			1	Relay	Relä	2
0431						light	ljus	
0440	17	95 66 647		SE, GB	1	Relay	Relä	2
0441						light	ljus	
0450	18	*95 24 836*		NLS - USE 4109070	1	Relay	Relä	5
0451						bulb check	lampkontroll	
0460	19	95 19 224		US	1	Relay	Relä	2
0461						front fog light	dimstrålkastare	
0470	21	85 22 310			1	Relay	Relä	3
0471						horn	signalhorn	
0480	22	95 12 823		EW	1	Relay	Relä	5
0490	23			See page 8A-013, 4-F14	X	Relay	Relä	
0500						sun roof	soltak	

66. Ch --J1025332, --J2014830.
67. Ch J1025333--, J2014831--.
181. For cars with ACC. För bilar med ACC.
188. Timer relay. Tidrelä.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G18 Relays and fuses 1988

Reläer och säkringar 1988

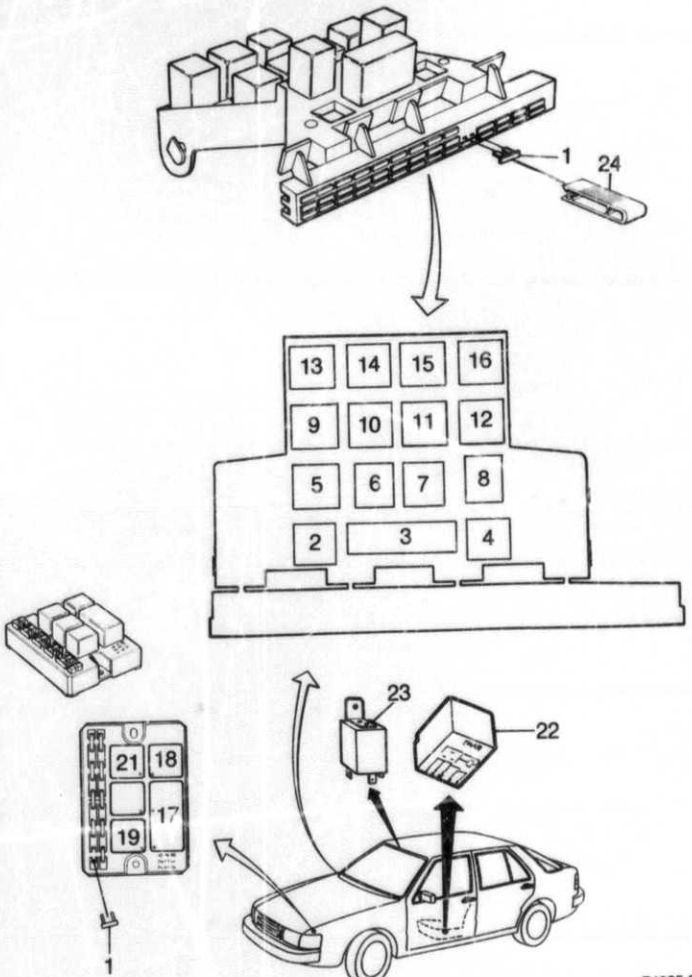

F4085 9000

1235	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	24	85 87 636			1	Fuse clip	Säkringsklämma	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G20 Relays and fuses 500), 1989

Reläer och säkringar 500), 1989

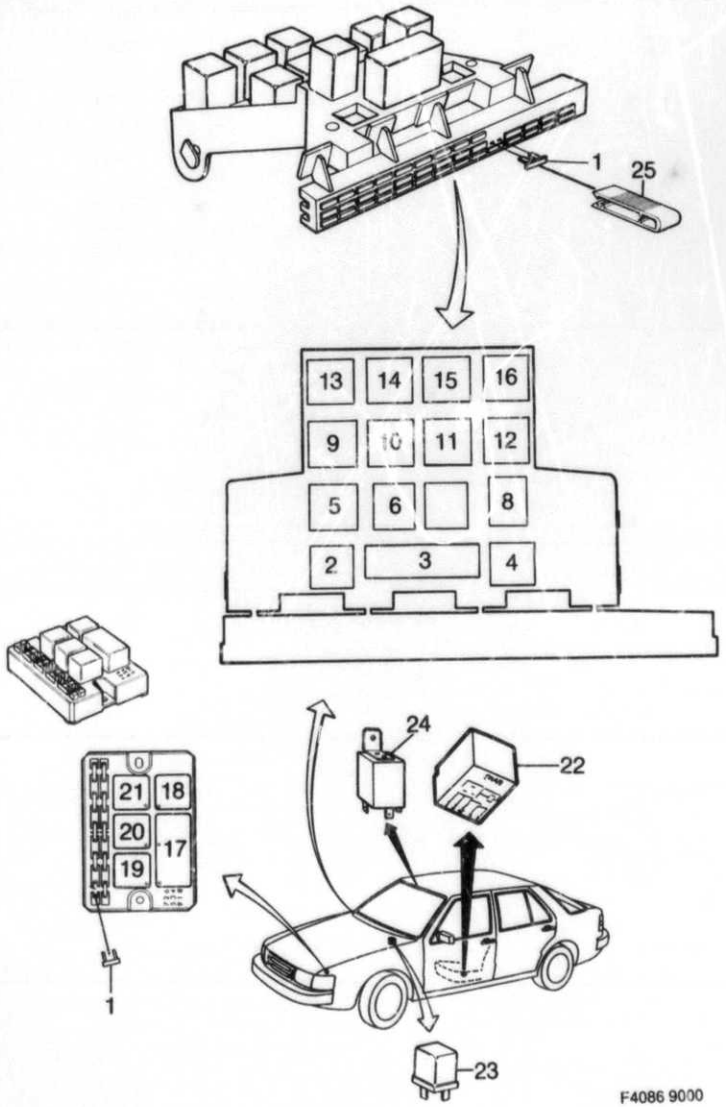

F4086 9000

1240	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0015	1	79 74 637		10A	X	Fuse	Säkring	1
0020	1	79 74 645		15A	X	Fuse	Säkring	1
0030	1	79 74 652		20A	X	Fuse	Säkring	1
0040	1	79 74 660		25A	X	Fuse	Säkring	1
0050	1	79 74 678		30A	X	Fuse	Säkring	1
0060	2	95 63 313		US	1	Buzzer seat belt warning	Summer bältesvarning	5
0061								
0070	3	95 64 147		SE, FI, ME, FE, JP, GB, AU	1	Relay bulb check	Relä lampkontroll	5
0071								
0080	3	95 64 154		EU	1	Relay bulb check	Relä lampkontroll	5
0081								
0090	3	95 64 139		78)	1	Relay bulb check	Relä lampkontroll	5
0091								
0100	4	85 22 310			1	Relay horn	Relä signalhorn	3
0101								
0110	5	95 19 133		188)	1	Relay rear window	Relä bakruta	4
0111								
0120	5	85 22 310		181)	1	Relay rear window	Relä bakruta	3
0121								
0130	6	*95 13 219*		43), AC, ACC NLS - USE 4179925	1	Relay	Relä	5
0130								
0140	6	*95 63 321*		44), AC, ACC NLS - USE 4179933	1	Relay	Relä	3
0140								
0150	8	95 22 061			1	Relay starter switch	Relä tändningslås	5
0151								
0160	9	85 36 401			1	Relay LH-system	Relä LH-system	3
0161								
0170	10	85 36 401			1	Relay fuel pump	Relä bränslepump	3
0171								
0180	11	85 22 310		GB	1	Relay dim-dip	Relä dim-dip	3
0181								
0190	12	95 56 390		GB	1	Relay dim-dip	Relä dim-dip	9
0191								
0200	13	85 53 463			1	Relay intermittent wiper	Relä intervalltorkare	6
0201								
0210	14	95 15 099		188)	1	Relay interior illum.	Relä innerbelysning	4
0211								
0230	15	85 83 627			1	Flasher relay	Blinkrelä	2
0240	16	95 56 390		CA	1	Relay daylight driving lights	Relä varselljus	9
0241								
0250	17	95 53 546			1	Relay light	Relä ljus	2
0251								
0260	17	95 66 647		SE, GB, CA	1	Relay light	Relä ljus	2
0261								
0270	18	*95 24 836*		NLS - USE 4109070	1	Relay bulb check	Relä lampkontroll	5
0271								
0280	19	85 22 310		US	1	Relay front fog light	Relä dimstrålkastare	3
0281								
0290	20	85 22 310		SE, FI, EU, GB	1	Relay cooling fan	Relä kylfläkt	3
0291								
0300	20	95 63 339		188), US, CA, JP, AU, ME, FE	1	Relay cooling fan	Relä kylfläkt	4
0301								
0320	21	85 36 401			1	Relay	Relä	3
0321				ME, FE		cooling fan, 2-step	kylfläkt, 2-steg	
0330	22	95 12 823		EW	1	Relay	Relä	5

43. Without catalytic converter. Utan katalytisk reaktor.
44. With catalytic converter. Med katalytisk reaktor.
78. High mounted stop light. Högt monterat stoppljus.
181. For cars with ACC. För bilar med ACC.
188. Timer relay. Tidrelä.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-G22

Relays and fuses 500), 1989

Reläer och säkringar 500), 1989

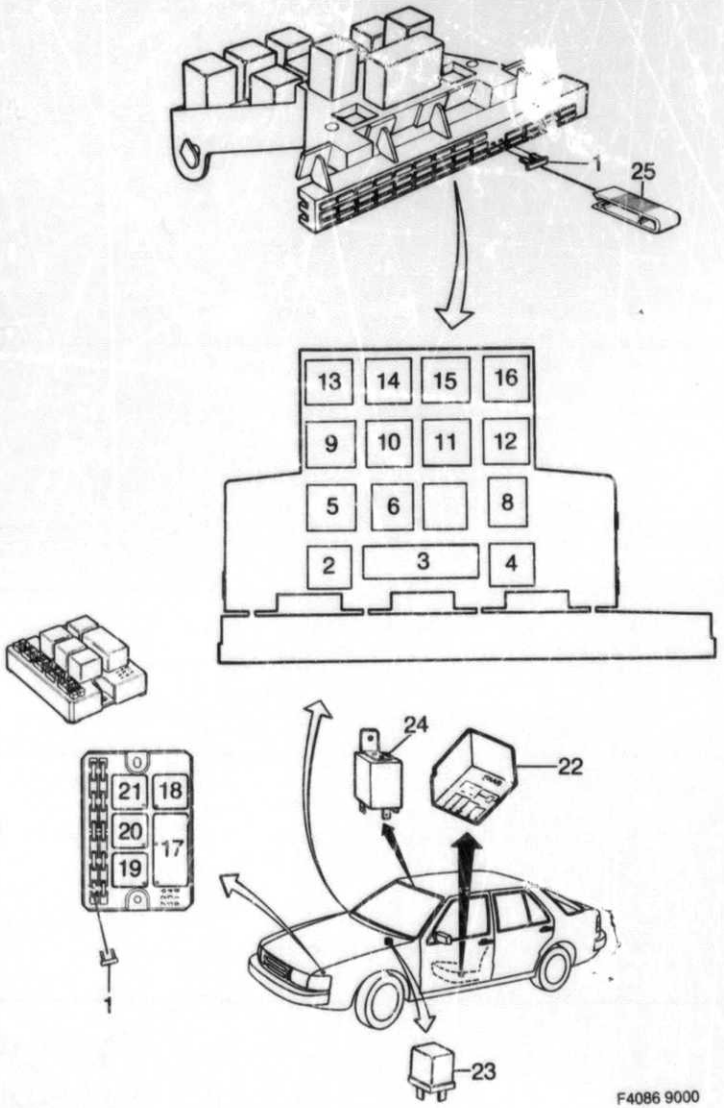

F4086 9000

1240	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0350	23	85 22 310		43,186), LH2.2	1	Relay	Relä	3
0360				See page 2-141, 1-G22		cold starting kit	kallstartsats	
0370	24			See page 8A-013, 4-F14	X	Relay	Relä	
0380						sun roof	soltak	
0390	25	85 87 636			1	Fuse clip	Säkringsklämma	5


43. Without catalytic converter. Utan katalytisk reaktor.
156. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

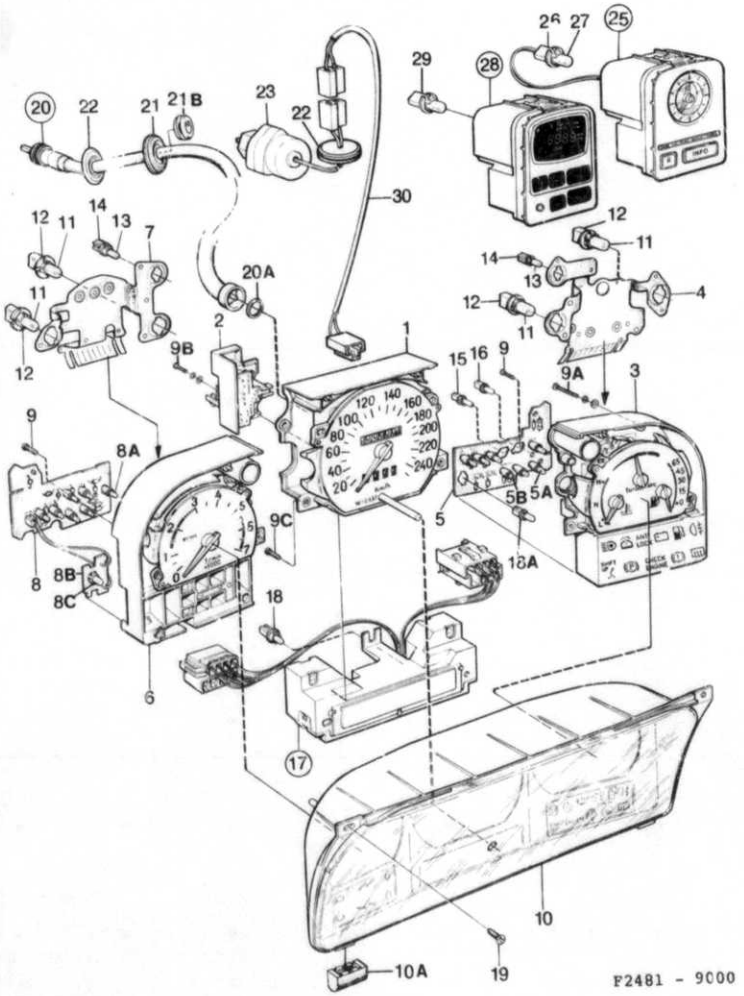

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 04 689		700), 1986, TURBO, SE,	1	Speedometer	Hastighetsmätare	4
0020				FI, EU, CA, 240 KM/H,				
0030				W=0,64				
0040	1	95 21 089		700), 1987-, TURBO, SE,	1	Speedometer	Hastighetsmätare	4
0050				FI, EU, ME, FE, JP,CA,AU				
0060				240 KM/H, W=0,64				
0070	1	95 04 705		1986, I, SE, EU, FI,	1	Speedometer	Hastighetsmätare	4
0080				CA, ME, JP				
0090				TURBO, JP, ME				
0100				200 KM/H, W=0,64				
0110	1	95 16 089		1987-, I, SE, FI, EU, ME,	1	Speedometer	Hastighetsmätare	4
0120				FE, JP, CA, AU, 200 KM/H				
0130				W=0,64				
0140	1	95 21 097		1986, A, US, 135 MPH,	1	Speedometer	Hastighetsmätare	4
0150				W=1,026				
0160	1	95 04 721		1986, US, 135 MPH,	1	Speedometer	Hastighetsmätare	4
0170				W=1,026				
0180	1	95 21 097		1987, US, 135 MPH,	1	Speedometer	Hastighetsmätare	4
0190				W=1,026				
0200	1	95 21 097		1988-, I, US, 135 MPH,	1	Speedometer	Hastighetsmätare	4
0210				W=1,026				
0220	1	91 21 732		1988-, TURBO, US,135 MPH	1	Speedometer	Hastighetsmätare	4
0230				W=1,026, WH=1,045				
0240	1	95 13 896		1986-, GB, 140 MPH,	1	Speedometer	Hastighetsmätare	4
0250				W=1,026				
0251								
0260	1	91 21 955		500), 1989-, 4D, TURBO,	1	Speedometer	Hastighetsmätare	4
0270				SE, FI, EU, ME, FE, JP,				
0271				CA, AU, 240 KM/H, W=0,64				
0280	1	91 21 963		500,700), 1989-, 4D, I,	1	Speedometer	Hastighetsmätare	4
0290				SE, FI, EU, ME, FE, JP,				
0291				CA, AU, 200 KM/H, W=0,64				
0300	1	91 21 989		4D, US, 135 MPH, W=1,026	1	Speedometer	Hastighetsmätare	4
0310	1	91 21 971		4D, GB, 140 MPH, W=1,026	1	Speedometer	Hastighetsmätare	4
0320	2	95 05 082		-1987	1	Pulse sensor	Pulsgivare	5
0330	3	95 04 739		700), -1985 NLS	1	Combined instrument	Kombinationsinstrument	4
0340	3	95 13 904		700), 1986, TURBO, SE,	1	Combined instrument	Kombinationsinstrument	4
0350				FI, EU, ME, FE				
0360	3	95 20 685		700), 1987, TURBO, SE,	1	Combined instrument	Kombinationsinstrument	4
0370				FI, EU, ME, FE				
0380	3	95 25 544		700), 1988, TURBO, SE,	1	Combined instrument	Kombinationsinstrument	4
0390				FI, EU, ME, FE, JP				
0400	3	95 65 169		500,700), 1989-, TURBO,	1	Combined instrument	Kombinationsinstrument	4
0410				SE, FI, EU, ME, FE, JP				
0420	3	95 21 147		23), 1987, TURBO, SE,	1	Combined instrument	Kombinationsinstrument	4
0430				FI, EU				
0440	3	95 13 979		1986, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0450	3	95 20 917		1987, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0460	3	95 25 858		1988, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0470	3	95 65 193		1989-, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0480	3	95 13 862		1986, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0490	3	95 20 391		1987, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0500	3	95 25 569		1988, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0510	3	95 65 177		1989-, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0520	3	95 25 445		23), 1987, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0530	3	95 16 154		1986, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0540	3	95 20 768		1987, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0550	3	95 25 841		1988, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0560	3	95 65 185		1989-, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4


23. For cars with ABS brake system. För bilar med ABS bromsar.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A16
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

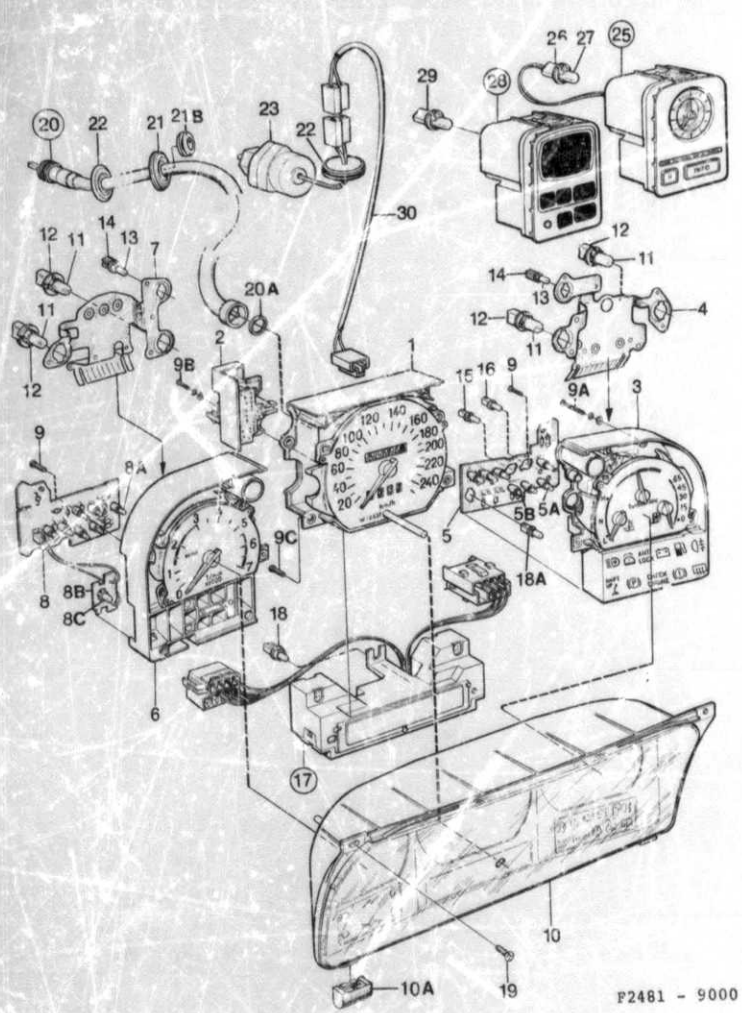

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	3	*95 15 198*		1986, I, SE, FI, EU, JP, ME, FE NLS - USE 8546566	1	Combined instrument	Kombinationsinstrument	4
0580								
0590	3	95 20 693		1987, I, SE, FI, EU, ME, FE	1	Combined instrument	Kombinationsinstrument	4
0600								
0610	3	95 25 585		1988, I, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0620								
0630	3	95 65 284		500), 1989-, I, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0640								
0650	3	95 21 139		23), 1987, I, SE, FI, EU, ME, FE	1	Combined instrument	Kombinationsinstrument	4
0660								
0670	3	95 20 792		1987, I, JP	1	Combined instrument	Kombinationsinstrument	4
0680	3	95 15 214		1986, I, US	1	Combined instrument	Kombinationsinstrument	4
0690	3	95 20 909		1987, I, US	1	Combined instrument	Kombinationsinstrument	4
0700	3	95 25 833		1988, I, US	1	Combined instrument	Kombinationsinstrument	4
0710	3	95 65 318		1989-, I, US	1	Combined instrument	Kombinationsinstrument	4
0720	3	95 15 206		1986, I, GB	1	Combined instrument	Kombinationsinstrument	4
0730	3	95 20 883		1987, I, GB	1	Combined instrument	Kombinationsinstrument	4
0740	3	95 25 452		23), 1987, I, GB	1	Combined instrument	Kombinationsinstrument	4
0750	3	95 25 999		1988, I, GB	1	Combined instrument	Kombinationsinstrument	4
0760	3	95 65 292		1989-, I, GB	1	Combined instrument	Kombinationsinstrument	4
0770	3	*95 16 162*		1986, I, AU, CA NLS	1	Combined instrument	Kombinationsinstrument	4
0780	3	95 20 776		1987, I, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0790	3	95 25 643		1988, I, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0800	3	95 65 300		1989-, I, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0810	3	95 20 784		1987, TURBO, JP	1	Combined instrument	Kombinationsinstrument	4
0820	4	95 05 629			1	.Foil	.Folie	5
0830	5	*95 05 637*		1985 NLS	1	.Circuit board	.Kretskort	6
0840	5	95 13 912		1986-1987	1	.Circuit board	.Kretskort	6
0860	5	95 13 912		23), 1987, TURBO, SE, FI, EU, I, SE, FI, EU, ME, FE (9521154)	1	.Circuit board	.Kretskort	6
0870								
0880								
0881								
0890	5	95 25 700		1988	1	.Circuit board	.Kretskort	6
0900	5	95 65 326		500), 1989-	1	.Circuit board	.Kretskort	6
0910	5A	95 09 175		1985, 40/238 298 004	7	.Bulb	.Glödlampa	6
0920	5A	95 09 175		1986-, 40/238 298 004	6	.Bulb	.Glödlampa	6
0930	5B	95 14 894		1986-, 40/238 303 002	3	.Bulb	.Glödlampa	6
0940	6	*95 04 671*		1985 NLS	1	Tachometer	Varvräknare	4
0950	6	95 14 845		700), 1986-1987	1	Tachometer	Varvräknare	4
0960	6	95 25 536		700), 1988, SE, FI, EU, ME, FE, JP	1	Tachometer	Varvräknare	4
0970								
0980	6	95 65 409		500,700), 1989-, SE, FI, EU, ME, FE, JP	1	Tachometer	Varvräknare	4
0990								
1000	6	95 67 801		1988, GB, US, CA, AU	1	Tachometer	Varvräknare	4
1010	6	95 67 850		1989-, GB, US, CA, AU	1	Tachometer	Varvräknare	4
1020	7	95 05 587		-1987	1	.Foil	.Folie	5
1030	7	95 25 742		1988-	1	.Foil	.Folie	5
1040	8	95 09 449		-1987	1	.Circuit board	.Kretskort	6
1050	8	95 29 983		1988	1	.Circuit board	.Kretskort	6
1060	8	95 65 391		500), 1989-	1	.Circuit board	.Kretskort	6
1070	8A	95 09 175		-1987, 40/238 298 004	7	.Bulb	.Glödlampa	6
1080	8A	95 09 175		1988-, 40/238 298 004	8	.Bulb	.Glödlampa	6
1090	8B	95 09 456		-1987	1	.Circuit board	.Kretskort	6
1100	8C	95 13 888		40/238 302 004	1	.Bulb	.Glödlampa	3
1110	9	95 06 619			3	Screw	Skruv	5
1120	9A	95 05 553			6	Screw	Skruv	5
1130	9B	95 05 561			2	Screw	Skruv	5
1140	9C	95 08 862			2	Screw	Skruv	5
1150	10	*95 05 074*		NLS - USE 4068078	1	Casing	Hus	6
1160	10A	95 05 293			2	Support	Stöd	6


23. For cars with ABS brake system. För bilar med ABS bromsar.
500. Also valid for SE 1988E. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

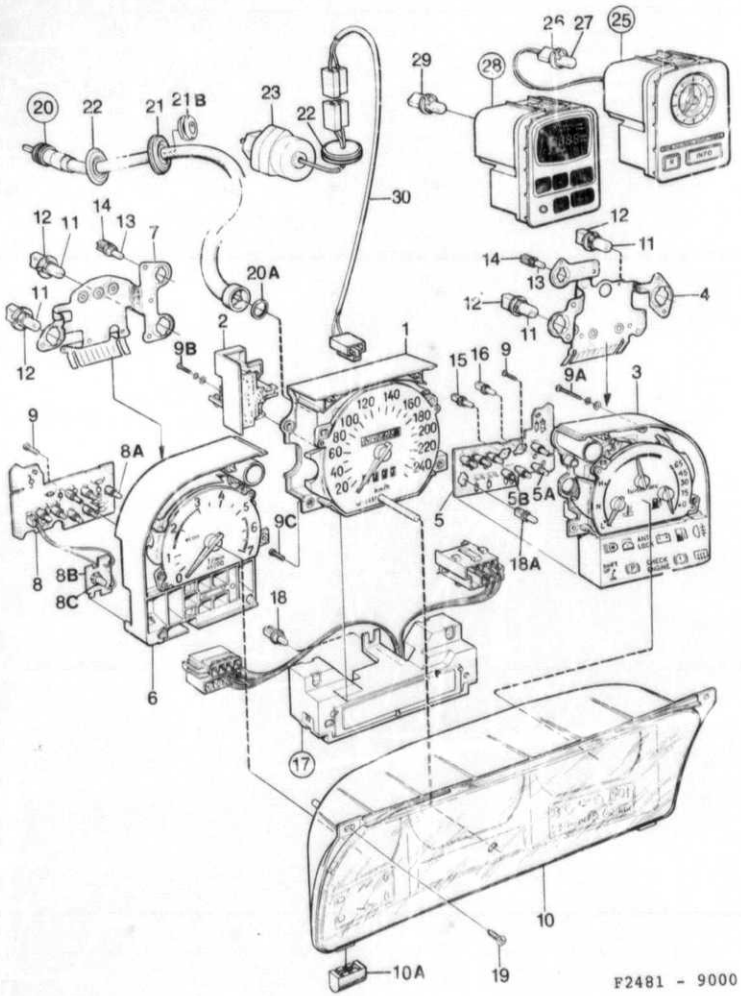

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1170	11	95 05 116		40/238 288 005	4	Bulb	Glödlampa	4
1180	12	95 05 520			4	Bulb socket	Lamphållare	4
1190	13	95 05 538			2	Bulb	Glödlampa	4
1200	14	95 05 [illegible]6			2	Bulb socket	Lamphållare	4
1210	15	85 68 6[illegible]3		40/238 286 017	1	Bulb	Glödlampa	4
1220	16	85 66 853			1	Bulb	Glödlampa	4
1230	17	*95 03 533*		700), 1985 NLS - USE 8827024	1	Display	Display	5
1240	17	95 19 000		700), 1986-, I, EDU 1 M, EDU 2	1	Display	Display	5
1270	17	95 22 640		700), TURBO, EDU 2, (9509787)	1	Display	Display	5
1280	17	95 27 490		43,700), 1987-, TURBO, EDU 2	1	Display	Display	5
1300	17	95 27 730		700), 1988-, I, US, CA, EDU 2	1	Display	Display	5
1320	18	85 66 853			2	.Bulb	.Glödlampa	4
1330	18A	95 06 122		1985	1	Bracket	Hållare	5
1340	19	79 22 271			2	Screw	Skruv	5
1360	20	95 18 150		-1986, (9503392)	1	Speed wire	Mätarkabel	2
1370	20A	75 75 848		-1986	1	.Spacer washer	.Distansbricka	5
1380	21	95 08 920		-1986	1	Grommet	Genomföring	6
1390	21B	94 73 943		-1986, RHD	1	Spacer	Distans	5
1400	22	*95 12 013*		1987-,81) NLS - USE 9508920	2	Grommet	Genomföring	6
1410	22	*95 12 013*		88,189,500) NLS - USE 9508920	2	Grommet	Genomföring	6
1430	23	91 23 324		(9504655,9564469)	1	Sensor	Givare	5
1470	25	95 13 334		700), (9501305)	1	Clock	Klocka	5
1480	26	95 05 520			1	.Bulb socket	.Lamphållare	4
1490	27	95 05 116		40/238 288 005	1	.Bulb	.Glödlampa	4
1520	28	91 24 579		700), DCC, (9509795) See page 3A-077, 2-D06	1	Driving computer outdoor temperature air speedometer	Färddator uteluftstemperatur hastighetsmätare	4
1540	29	95 09 993		40/238 299 002	2	.Bulb	.Glödlampa	4
1550	30	95 24 646		1986	1	Cable harness	Ledningsnät	6
1570				1986, NOT I FOR GB,ME,FE See page 3A-173, 2-H06	1	DCC kit	DCC-sats	
1590				1987- See page 3A-173, 2-H06	1	DCC kit	DCC-sats	

43. Without catalytic converter. Utan katalytisk reaktor.
81. Ch --J8001994, --K1000737, --K2000395.
88. Ch --K1006560, --K2002956, --K8000929, SE 1988B: --J1050638, --J2031711.
189. Part of 91 23 324. Del av 91 23 324.
198. Ch J1014463--, J2007677--, J8000885--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX


Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06


Complete sets
2-H06
Electrical system


Satser
Elektriskt system

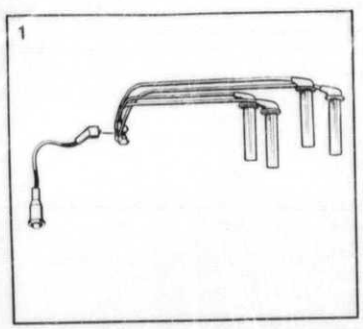


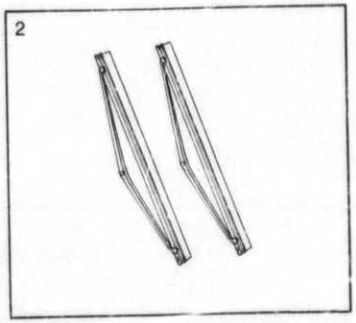

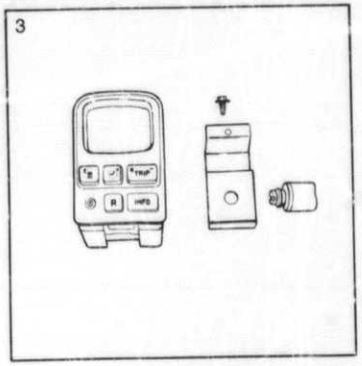

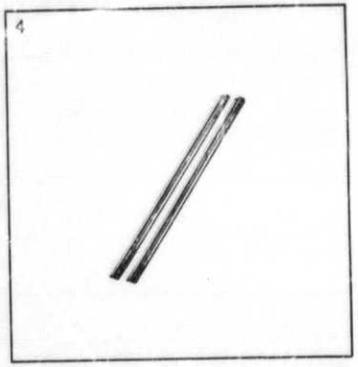

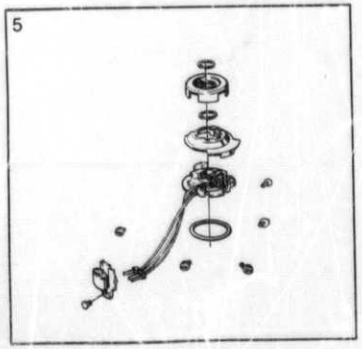

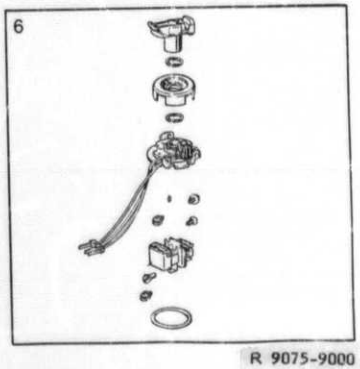

R 9075-9000

1500	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 520			X	Kit ignition cables	Tändkabelsats	3
0020		93 90 840			1	.Ignition lead ignition coil	.Tändkabel tändspole	3
0040		75 04 483			1	.Ignition lead cylinder 1	.Tändkabel cylinder 1	3
0060		75 04 491			1	.Ignition lead cylinder 2	.Tändkabel cylinder 2	3
0080		75 04 509			1	.Ignition lead cylinder 3	.Tändkabel cylinder 3	3
0100		75 04 517			1	.Ignition lead cylinder 4	.Tändkabel cylinder 4	3
0130	2	*85 47 077*		5D	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0150		*95 13 268*		NLS - USE 8548042 1), (9120390) NLS - USE 4096063	2	.Wiper blade	.Torkarblad	2
0170	2	85 47 408		4D	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0190		91 20 882			2	.Wiper blade	.Torkarblad	2
0210	3	85 47 358		1986, NOT I FOR GB,ME,FE	X	DCC kit	DCC-sats	4
0220	3	85 47 358		1987-	X	DCC kit	DCC-sats	4
0230		*79 72 896*		NLS - USE 7965684, 8073090	1	.Screw	.Skruv	5
0240		*95 09 795*		-1988 NLS - USE 9124579	1	.Driving computer	.Färddator	4
0250		91 24 579		500), 1989-	1	.Driving computer	.Färddator	4
0260		95 13 276			1	.Sensor outer temp	.Givare yttertemp	4
0280		95 14 183			1	.Bracket	.Hållare	6
0300	4	85 47 374		-1987	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0320				1)	2	.Profile	.Profil	
0340	4	85 47 564		1988-	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0360				1)	2	.Profile	.Profil	
0380	4	• 44 48 064		211), PA	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0400				1)	2	.Profile	.Profil	
0420	5	75 88 296		190), 1985	X	Repair kit ignition distributor	Reparationssats tändfördelare	5
0450	5	75 88 312		191), 1986-	X	Repair kit ignition distributor	Reparationssats tändfördelare	5
0475	5	• 75 88 304		212)	X	Repair kit ignition distributor	Reparationssats tändfördelare	5
0480	6	74 84 892		193), 1988, I	X	Repair kit ignition distributor	Reparationssats tändfördelare	5

1. Not as separate spare part. Ej som separat reservdel.
190. For ignition distributor 75 00 507. För fördelare 75 00 507.
191. For ignition distributor 75 61 806 and 75 61 814. För tändfördelare 75 61 806 och 75 61 814.
193. For ignition distributor 74 81 385. För fördelare 74 81 385.
211. Synthetic rubber. Syntetiskt gummi.
212. For ignition distributor 75 61 798. För fördelare 75 68 798.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2--H08

Electrical system — Elektriskt system

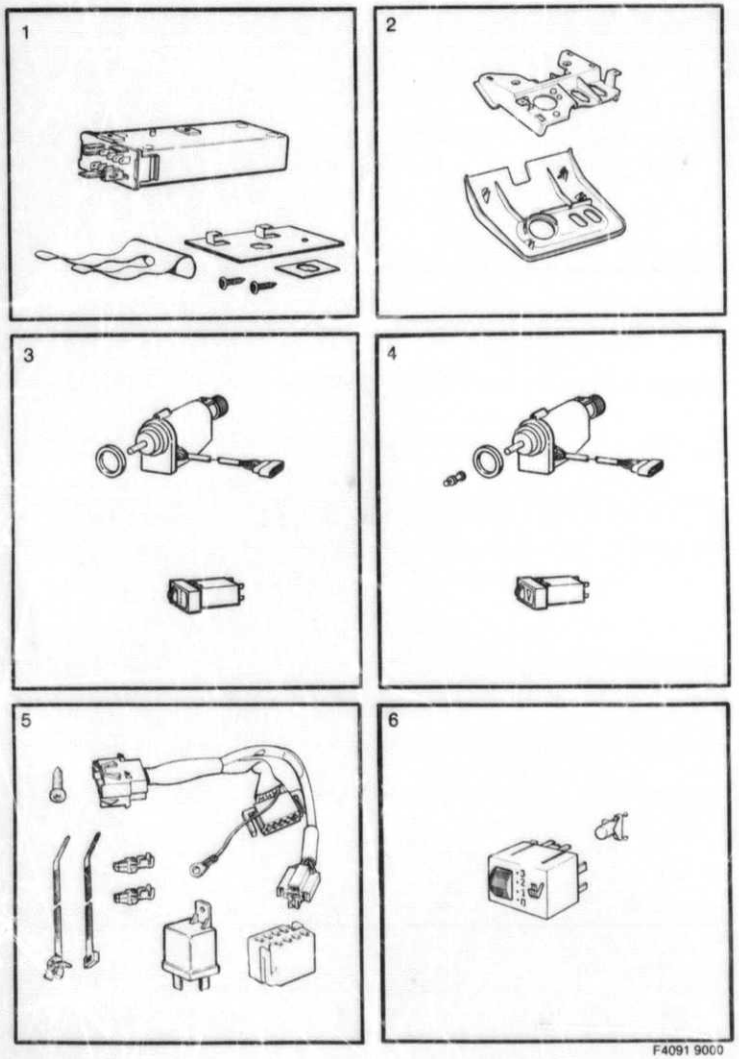

F4091 9000

1510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 47 622		40)	X	Electronic unit	Elektronikenhet	3
0020		95 29 975			1	.Electronic unit	.Elektronikenhet	3
0030		79 22 347			2	.Screw	.Skruv	5
0040		85 65 855			1	.Clip	.Clips	6
0050		91 20 114			1	.Bracket	.Konsol	9
0060		95 64 345			1	.Spacer washer	.Distansbricka	5
0070								
0080	2	*96 98 036*		85), 1985- NLS - USE 4037701, 9660176	X	Kit roof bracket	Sats takkonsol	6
0090								
0100		*95 75 903*		NLS - USE 4037701	1	.Base plate	.Bottenplatta	6
0110		96 60 176			1	.Cover	.Lock	
0120								
0130	3	85 47 838		141), 5D	X	Lamp adjustment kit	Ljusregleringssats	5
0140		95 27 904			1	.Switch	.Strömställare	3
0150		95 29 785			2	.Electric motor	.Elmotor	3
0160		95 03 327			1	..Contact housing 3-pole, female	..Kontakthus 3-polig, hylsa	4
0170								
0180		95 29 793			1	..Sealing ring	..Tätningsring	9
0190								
0200	4	85 47 846		4D	X	Lamp adjustment kit	Ljusregleringssats	5
0210		95 27 904			1	.Switch	.Strömställare	3
0220		95 66 662			2	.Electric motor	.Elmotor	3
0230		95 03 327			1	..Contact housing 3-pole, female	..Kontakthus 3-polig, hylsa	4
0240								
0250		95 29 793			1	..Sealing ring	..Tätningsring	9
0260		95 69 963			1	..Adapter	..Adapter	5
0265								
0270	5	85 48 075		198), A	X	Starter inhibitor kit	Startspärrsats	4
0280		79 70 601			1	.Screw	.Skruv	5
0290		79 71 864			1	.Tensioning band	.Spännband	5
0300		85 33 697			1	.Contact housing	.Kontakthus	4
0310		85 48 059			1	.Cable harness	.Ledningsnät	5
0320		95 63 099			1	.Relay	.Relä	5
0330								
0340	6	40 84 554		202), 1987-	X	Switch button kit	Strömställarknapp sats	5
0350								

40. Ch --J1000152, --J2000020, --J8000006.
85. For cars without el. sun roof. För bilar utan el. soltak.
141. Ch J1006263--, J2002505--, J8000316--.
198. Ch J1014463--, J2007677--, J8000885--.
202. Rheostat. Reostat.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

2-H10

Electrical system

Elektriskt system

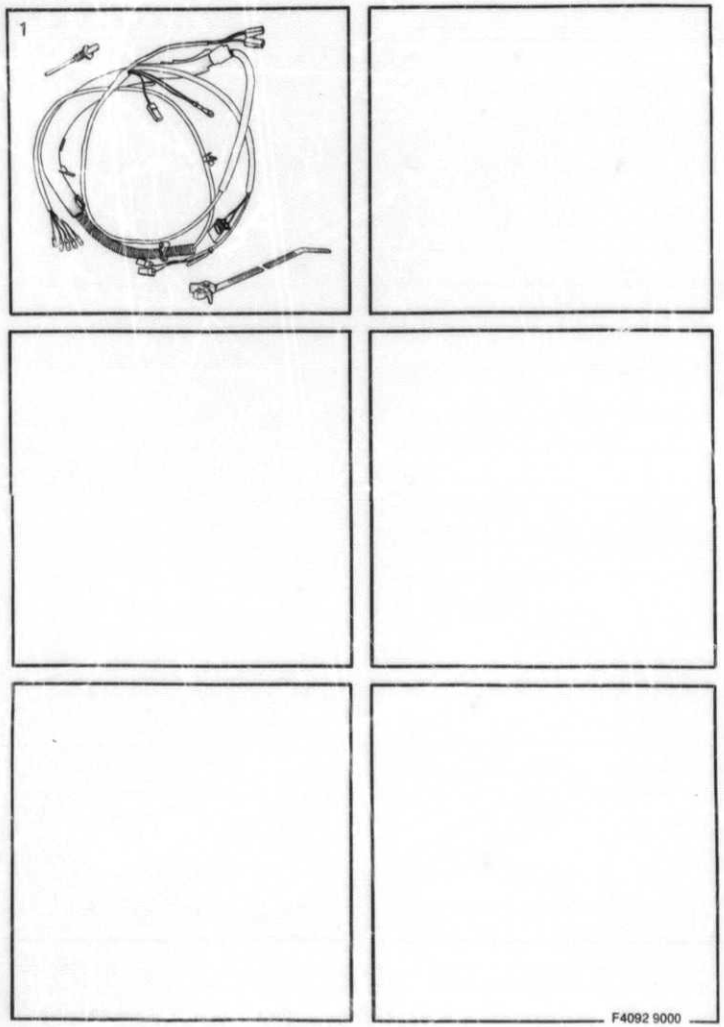

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 48 554		4D	X	Conversion kit	Ombyggnadssats	6
0020						boot lid	bagagerumslucka	
0030		43 53 538			1	.Cable cover	.Kabelhölje	4
0040		43 54 817			1	.Hose	.Slang	4
0050		• 84 10 961			1	.Screw	.Skruv	5
0060		85 52 663			1	.Tensioning band	.Spännband	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3A GROUP INDEX

Battery	2-A06
Alternator	2-A08
Starter	2-A14
Ignition system	2-A18
Lighting	2-B06
Electrical equipment, other	2-C08
Wiring and fuses	2-E04
Complete sets	2-H06

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0125
0130
0140
0150
0160
0170

TABLE OF CONTENTS

Connectors		
Connectors etc, 1985	3B : 5	3-A06
Connectors etc, 1986	3B : 17	3-A18
Connectors etc, 1987	3B : 37	3-B14
Connectors etc, 1988	3B : 59	3-C12
Connectors etc, 1989	3B : 85	3-D14
Cable terminals		
Cable terminals, 1985	3B : 111	3-E16
Cable terminals, 1986	3B : 117	3-E22
Cable terminals, 1987	3B : 125	3-F06
Cable terminals, 1988	3B : 133	3-F14
Cable terminals, 1989	3B : 143	3-F24

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-L02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A03

0042

0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1985	3B : 5	3-A06
Kontakthus etc, 1986	3B : 17	3-A18
Kontakthus etc, 1987	3B : 37	3-B14
Kontakthus etc, 1988	3B : 59	3-C12
Kontakthus etc, 1989	3B : 85	3-D14

Ledningsskor

Ledningsskor, 1985	3B : 111	3-E16
Ledningsskor, 1986	3B : 117	3-E22
Ledningsskor, 1987	3B : 125	3-F06
Ledningsskor, 1988	3B : 133	3-F14
Ledningsskor, 1989	3B : 143	3-F24

3-A04

0042

0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370

SUMARIO

Contactores

Contactores etc, 1985	3B : 5	3-A06
Contactores etc, 1986	3B : 17	3-A18
Contactores etc, 1987	3B : 37	3-B14
Contactores etc, 1988	3B : 59	3-C12
Contactores etc, 1989	3B : 85	3-D14

Terminal cable

Terminal cable etc, 1985	3B : 111	3-E16
Terminal cable etc, 1986	3B : 117	3-E22
Terminal cable etc, 1987	3B : 125	3-F06
Terminal cable etc, 1988	3B : 133	3-F14
Terminal cable etc, 1989	3B : 143	3-F24

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A06

Contact housing etc
1985

Kontakthus etc
1985

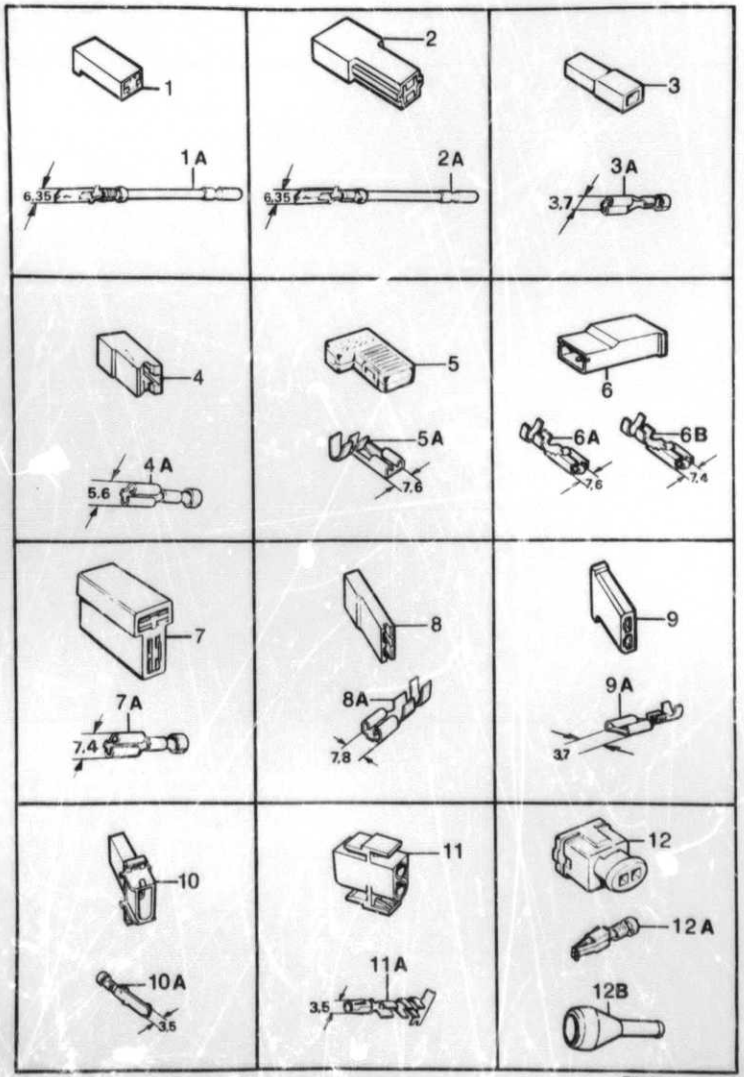

F0734 - 9000

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0020								
0030	1A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	71 55 120		JOINT PIECE, EL-MIRROR, RADIO, ELECTRIC CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0060								
0070	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0100								
0110	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0120								
0130	4	85 33 184		LOUDSPEAKER, JOINT PIECE PRESSURE SENSOR APC	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0140								
0150	4B	*85 33 028*		AREA, 0,5-1,5 MM2 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
0150								
0160								
0170	5	85 21 692		LIGHT INSTEP, IGNITION COIL, SWITCH BACK- UP LIGHT, LIGHT ASH TRAY, JOINT PIECE	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0180								
0190								
0200								
0210	5A	*85 21 676*		AREA, 0,5-1,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0210								
0220	5A	85 22 526		AREA, 0,5-1,5 MM2 (8582421)	X	Cable terminal	Kabelsko	5
0230								
0240	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0240								
0250								
0260	6	85 41 229		LIGHT INSTEP, SAFETY BELT WARNING, SWITCH SPOTLIGHT, JOINT PIECE	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0270								
0280								
0290	6A	*85 41 203*		AREA, 0,5-1,0 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0290								
0300	6B	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0310								
0320	7	71 55 096		RADIO	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0330								
0340	7A	*71 55 153*		AREA, 0,8-2,1 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0340								
0350								
0360	8	85 16 916		AC VALVE AIR SLIDE, STARTER, AC THROTTLE CONTACT, JOINT PIECE, SIGNAL, APC PRESSURE SENSOR, PRESSURE SWITCH, BRAKE CONTACT, SIGNAL, HAND BRAKE, THERMO CONTACT	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
0370								
0380								
0390								
0400								
0410								
0420								
0430								
0440	8A	85 14 036		AREA, 0,3-0,8 MM2	X	Cable terminal	Kabelsko	5
0450	8A	*85 14 028*		AREA, 0,3-0,8 MM2 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0450								
0460	8A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0470	8A	*71 55 039*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
0480								
0490	9	83 78 630		PEDAL CONTACT, SUCTION FAN INDOOR TEMP SENSOR ACC	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0500								
0510								
0520	9A	*85 09 846*		AREA, 0,5-1,4 MM2 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0520								
0530								
0540	10	85 61 623		JOINT PIECE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0550								
0560	10A	*85 44 314*		AREA, 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0560								
0570								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A08

Contact housing etc
1985

Kontakthus etc
1985

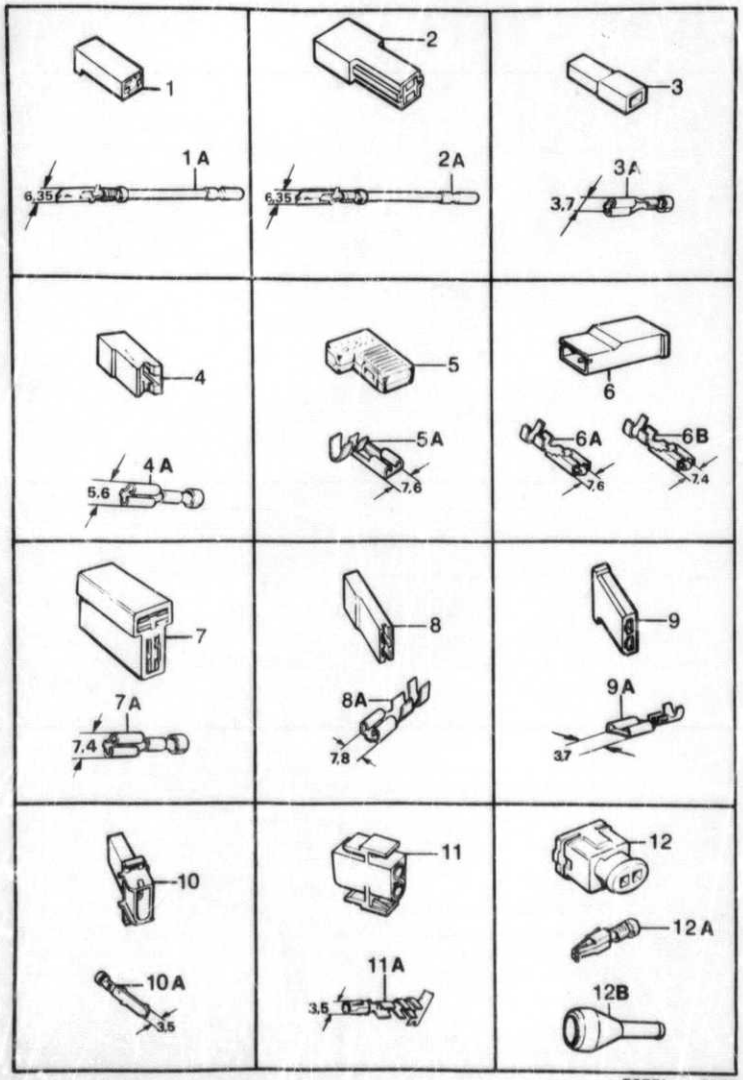

F0734 - 9000

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	11	85 61 631		JOINT PIECE	X	Connector housing	Skarvhus	4
0590						2-pole, female	2-polig, hylsa	
0600	11A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0600				USE 8582595				
0610								
0620	12	85 93 899		AUXILIARY AIR VALVE,	X	Contact housing	Kontakthus	4
0630				INJECTION VALVE, KNOCK		2-pole, female	2-polig, hylsa	
0640				SENSOR				
0650	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0660	12B	85 71 382			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A10

Contact housing etc
1985

Kontakthus etc
1985

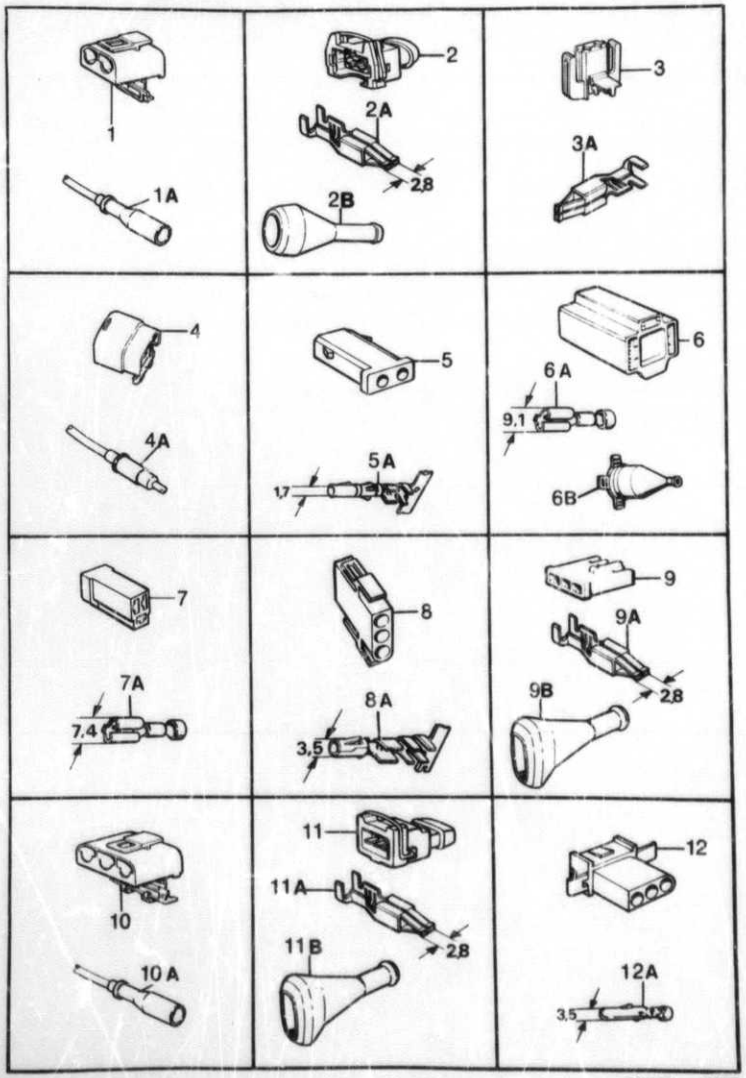

F0735 - 9000

0102	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 319		EL WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0020				CENTRAL LOCK, DOOR		2-pole, female	2-polig, hylsa	
0030				INDICATOR, STD FAN,				
0040				SOLENOID VALVE APC,				
0050				WASHER PUMP, LEVEL				
0060				SWITCH, WASHER MOTOR,				
0070				FAN MOTOR, VACUUM SWITCH				
0080				SWITCH, FAN AC, AC				
0090	1A	78 74 498			X	Connection	Skarv	5
0100								
0110	2	85 93 915		THERMO SWITCH	X	Contact housing	Kontakthus	4
0120						2-pole, female	2-polig, hylsa	
0130	2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0140	2B	85 71 382			X	Protection	Skydd	4
0150								
0160	3	91 24 157		LIGHT MIRROR, JOINT	X	Contact housing	Kontakthus	4
0170				PIECE, HEAD SWITCH FAN,		2-pole, female	2-polig, hylsa	
0180				SUN SENSOR, INNER TEMP				
0190				ACC				
0200	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0210	3A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0220								
0230	4	95 01 685		JOINT PIECE	X	Contact housing	Kontakthus	4
0240						2-pole, male	2-polig, stift	
0250	4A	78 74 506			X	Connection	Skarv	5
0260								
0270	5	95 06 643		MIXING TEMP ACC	X	Contact housing	Kontakthus	4
0280						2-pole, female	2-polig, hylsa	
0290	5A	85 87 552		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	6	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0320						3-pole, female	3-polig, hylsa	
0330	6A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0340	6B	85 52 721			X	Cable protection	Kabelskydd	4
0350								
0360	7	73 42 892		TEST CONNECTOR	X	Connector housing	Skarvhus	4
0370				PIECE, TEST CONNECTOR		3-pole, female	3-polig, hylsa	
0380	7A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0390								
0400	8	85 64 916		JOINT PIECE	X	Contact housing	Kontakthus	4
0410						3-pole, female	3-polig, hylsa	
0420	8A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0420				USE 8582595				
0430								
0440	9	85 74 097		DISTRIBUTOR	X	Contact housing	Kontakthus	4
0450						3-pole, male	3-polig, stift	
0460	9A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0470	9B	85 74 105			X	Protection	Skydd	4
0480								
0490	10	95 03 277		CENTRAL LOCK, SPEED	X	Contact housing	Kontakthus	4
0500				CONTROL, HEADLIGHT		3-pole, female	3-polig, hylsa	
0510				WIPERS, WIPER MOTOR				
0520	10A	78 74 498			X	Connection	Skarv	5
0530								
0540	11	85 93 907		THROTTLE SWITCH	X	Contact housing	Kontakthus	4
0550						3-pole, female	3-polig, hylsa	
0560	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	11B	85 79 955			X	Protection	Skydd	4
0580								
0590	12	85 64 924		JOINT PIECE, NUMBER	X	Contact housing	Kontakthus	5
0600				PLATE LIGHT		3-pole, male	3-polig, stift	
0610	12A	*85 44 311*		AREA 0,5-2,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0610				USE 8582603				
0620	12A	85 44 32?		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A12

Contact housing etc
1985

Kontakthus etc
1985

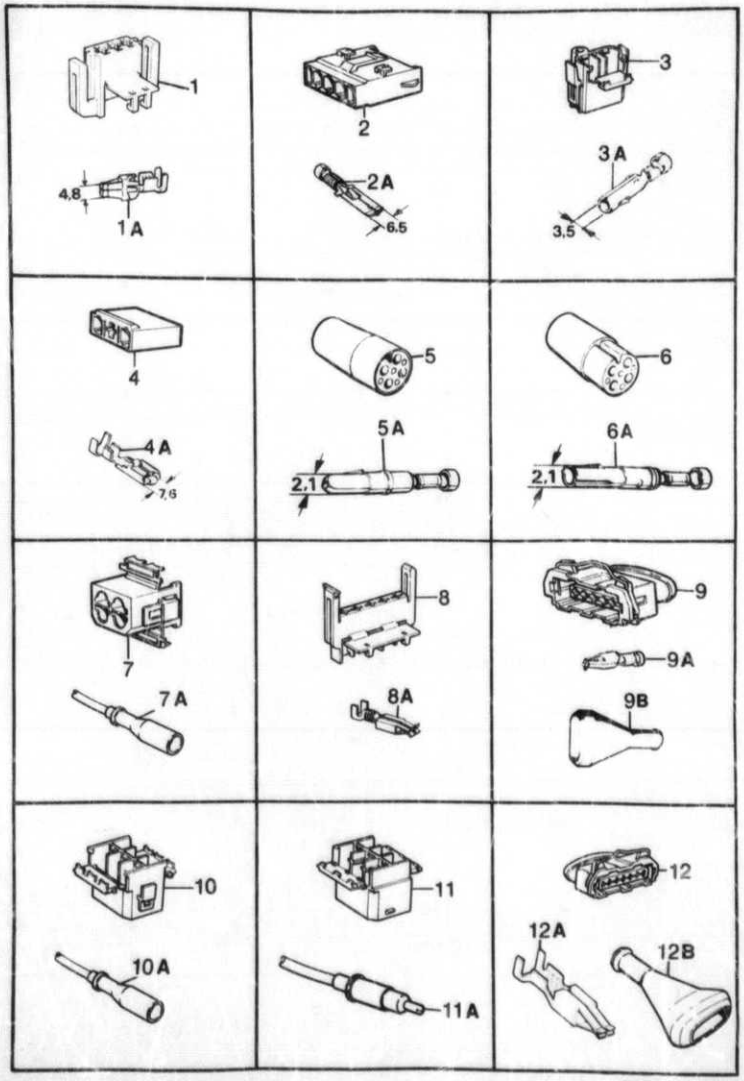

F0736 - 9000

0104	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 165		SEAT, JOINT PIECE, FUEL LEVEL TRANSMITTER	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0030	1A	91 20 775		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	91 20 783		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0060	2	95 03 012		JOINT PIECEL	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0080	2A	85 93 089		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	95 03 293		DIRECTION LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0120	3A	*85 44 298*		AREA 1,0-2,5 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0140	4	95 07 658		SWITCH INNER LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0160	4A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0180	5	85 30 081		LOUD SPEAKER	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0200	5A	85 22 591		AREA, 0,5-1,0 MM2 (8503161)	X	Cable terminal	Kabelsko	3
0230	6	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0250	6A	85 22 583		AREA, 0,5-1,0 MM2, (8503153)	X	Cable terminal	Kabelsko	5
0280	7	95 03 434		CONTROL UNIT ACC	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0300	7A	78 74 498			X	Connection	Skarv	5
0320	8	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0340	8A	*95 02 923*		AREA, 4,0-6,0 MM2 NLS - USE 9120767	X	Cable terminal	Kabelsko	5
0360	9	85 93 931		AIR MESS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0380	9A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0390	9B	85 82 082			X	Protection	Skydd	4
0410	10	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0430	10A	78 74 498			X	Connection	Skarv	5
0450	11	95 06 668		JOINT PIECE	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0470	11A	78 74 506			X	Connection	Skarv	5
0490	12	85 93 949		ELECTRONIC UNIT IGNITION SYSTEM	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0510	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0520	12B	85 74 048			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A14

Contact housing etc
1985

Kontakthus etc
1985

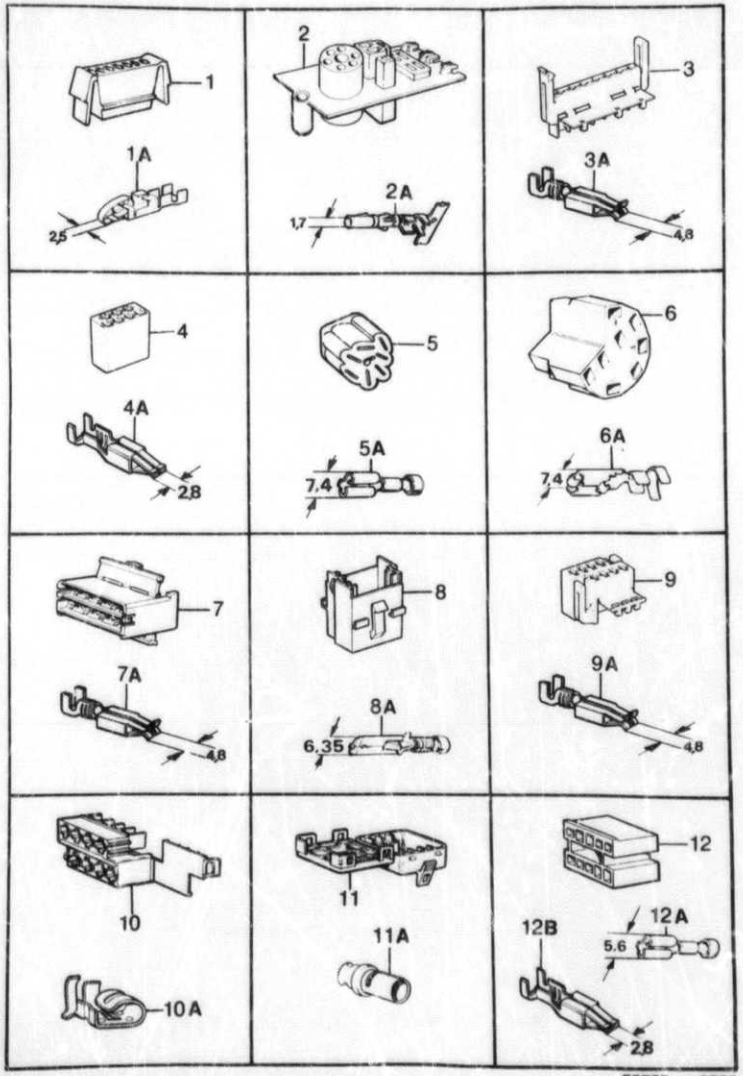

F0737 - 9000

0106	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*81 35 600*		INSTRUMENTS	X	Contact housing	Kontakthus	5
0020				NLS		7-pole, female	7-polig, hylsa	
0030	1A	81 35 147		AREA, 0,75-1,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	81 38 679		AREA, 1,0-3,5 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	85 21 700		TEST CONNECTOR	X	Contact	Kontakt	4
0070						7-pole, female	7-polig, hylsa	
0080	2A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	91 22 787		THEFT ALARM, SWITCH	X	Contact housing	Kontakthus	4
0110				DIRECTION INDICATOR,		7-pole, female	7-polig, hylsa	
0120				SWITCH SPEED CONTROL,				
0130				TAIL LIGHT				
0140	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0150								
0160	4	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0170						7-pole, female	7-polig, hylsa	
0180	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	5	95 03 251		HEATING FAN	X	Contact housing	Kontakthus	5
0210						7-pole, female	7-polig, hylsa	
0220	5A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0220				USE 8522534				
0230								
0240	6	85 44 363		SWITCH REAR FOGLIGHT	X	Contact housing	Kontakthus	4
0250						8-pole, female	8-polig, hylsa	
0260	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0260				USE 8560476				
0270	6A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0280								
0290	7	85 33 655		ELECTRONIC UNIT SPEED	X	Contact housing	Kontakthus	4
0300				CONTROL		8-pole, female	8-polig, hylsa	
0310	7A	91 20 775		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0320								
0330	8	91 24 181		JOINT PIECE, EL-HEATED	X	Contact housing	Kontakthus	4
0340				SEAT		8-pole, male	8-polig, stift	
0350	8A	*71 55 062*		AREA, 0,8-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0350				USE 8522542				
0360	8A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0370								
0380	9	91 24 090		JOINT PIECE, SWITCH REAR	X	Contact housing	Kontakthus	4
0390				DEMIST, SWITCH WINDOW		8-pole, female	8-polig, hylsa	
0400				REGULATOR, SWITCH SUN				
0410				ROOF, CENTRAL LOCK,				
0420				TOW HOOK				
0430	9A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0440	9A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450								
0460	10	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing	Kontakthus	4
0470						8-pole, female	8-polig, hylsa	
0480	10A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0490								
0500	11	95 12 930		LOCK STEERING COLUMN	X	Contact housing	Kontakthus	4
0510						9-pole, female	9-polig, hylsa	
0520	11A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0530								
0540	12	85 44 371		REOSTAT, SWITCH REAR FOG	X	Connector housing	Skarvhus	4
0550				LIGHT, SWITCH AC, SWITCH		10-pole, female	10-polig, hylsa	
0560				RECIRCULATION				
0570	12A	85 44 389		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0580	12B	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A16

Contact housing etc — *Kontakthus etc*

1985 — *1985*

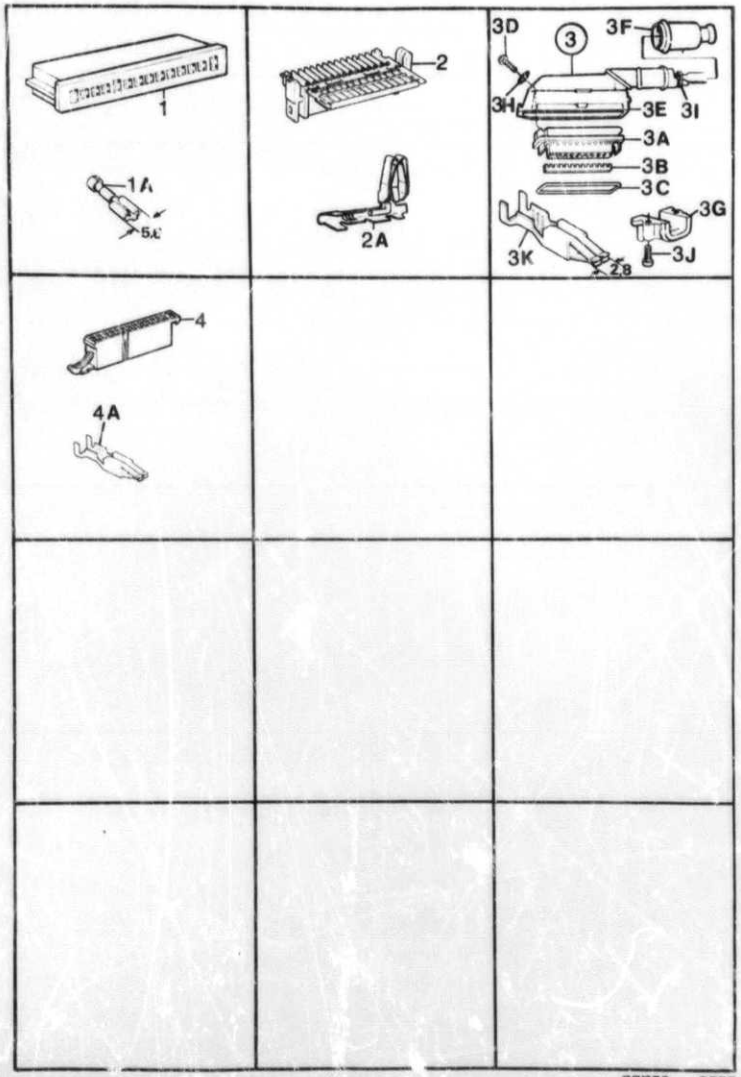

F0738 - 9000

0108	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 74 121		APC	X	Contact housing	Kontakthus	4
0020						14-pole, female	14-polig, hylsa	
0030	1A	85 44 389		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	95 03 020		INSTRUMENTS	X	Contact housing	Kontakthus	4
0060						14-pole, female	14-polig, hylsa	
0070	2A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	85 79 930		ELECTRONIC UNIT LH	X	Contact housing	Kontakthus	4
0100						25-pole, female	25-polig, hylsa	
0110	3A	85 87 420			1	.Contact housing	.Kontakthus	4
0120	3B	85 87 438		1)	1	.Striker plate	.Låsbleck	5
0130	3C	85 87 453		1)	1	.Seal	.Tätning	5
0140	3D	85 87 487		1)	1	.Screw	.Skruv	5
0150	3E	85 87 412		1)	1	.Cover	.Kåpa	4
0160	3F	85 87 446		1)	1	.Bushing	.Bussning	6
0170	3G	85 87 495		1)	1	.Bracket	.Hållare	4
0180	3H	85 87 461		1)	1	.Seal	.Tätning	5
0190	3I	79 71 872		1), (8558256)	1	.Tensioning band	.Spännband	5
0200	3J	79 71 351			2	.Screw	.Skruv	5
0210	3K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0220								
0230	4	95 06 650		ELECTRONIC UNIT ACC	X	Contact housing	Kontakthus	4
0240						25-pole, male	25-polig, stift	
0250	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

1. Not as separate spare part. Ej som separat reservdel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-A18

Contact housing etc 1986

Kontakthus etc 1986

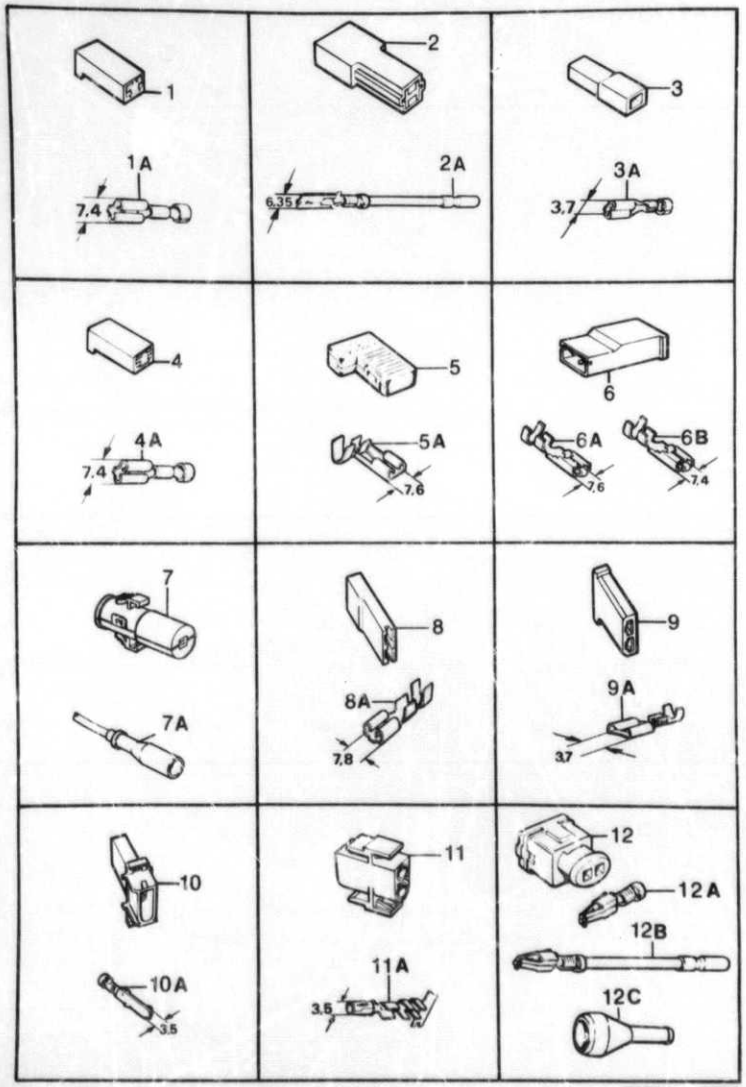

F0739 - 9000


0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, JOINT PIECE	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0030	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050	2	71 55 120		JOINT PIECE, EL-MIRROR, EL- CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0070	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0090	3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0110	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0130	4	85 33 184		LOUDSPEAKER, JOINT PIECE PRESSURE SENSOR APC	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0150	4B	*85 33 028*		AREA, 0,5-1,5 MM2 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
0170	5	85 21 692		LIGHT INSTEP, IGNITION COIL, JOINT PIECE, SWITCH BRAKE LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0200	5A	*85 21 676*		AREA, 0,5-1,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0210	5A	85 22 526		AREA, 0,5-1,5 MM2 (8582421)	X	Cable terminal	Kabelsko	5
0230	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0250	6	85 41 229		LIGHT INSTEP, SAFETY BELT WARNING, SWITCH SPOTLIGHT, JOINT PIECE	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0280	6A	*85 41 203*		AREA, 0,5-1,0 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0290	6B	*85 82 405*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0300	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0310	6B	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0330	7	95 03 418		COMPRESSOR	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0350	7A	78 74 498			X	Connection	Skarv	5
0370	8	85 16 916		STARTER, LIGHT LUGGAGE COMPARTMENT, CIGARETTE LIGHTER, JOINT PIECE, SIGNAL, APC PRESSURE SENSOR, PRESSURE SWITCH, BRAKE CONTACT, SIGNAL, HAND BRAKE, THERMO CONTACT, LAMBA SOND, THROTTLE SWITCH GEAR INDICATOR, TEMP SENSOR GEAR INDICATOR	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
0480	8A	85 14 036		AREA, 0,3-0,8 MM2	X	Cable terminal	Kabelsko	5
0490	8A	*85 14 028*		AREA, 0,3-0,8 MM2 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0500	8A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0510	8A	*71 55 039*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
0530	9	83 78 630		PEDAL CONTACT, SUCTION FAN INDOOR TEMP SENSOR ACC	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0560	9A	*85 09 846*		AREA, 0,5-1,4 MM2 NLS - USE 8522575	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

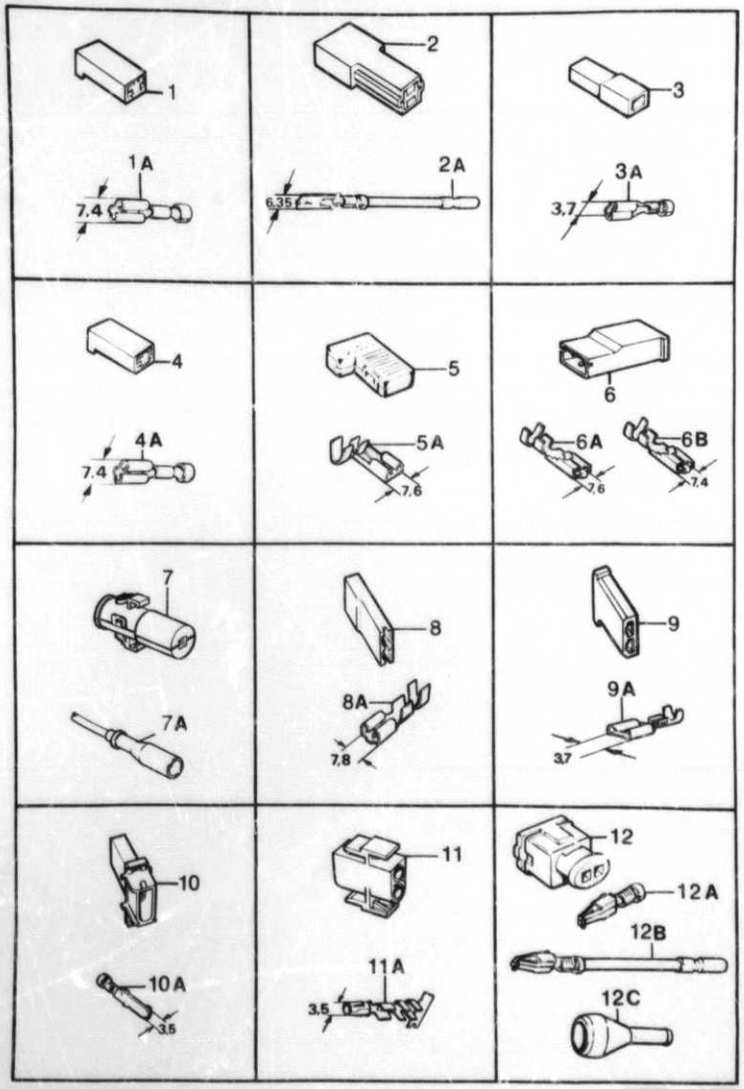

F0739 - 9000

Wiring and fuses

3-A20

Contact housing etc

1986

Ledningar och säkringar

Kontakthus etc

1986

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	10	85 61 623		JOINT PIECE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0590								
0600	10A	*85 44 314*		AREA, 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0600								
0610								
0620	11	85 61 631		JOINT PIECE, MOTOR CENTRAL LOCK	X	Connector housing 2-pole, female	Skarvhus 2-polig, hylsa	4
0630								
0640	11A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0640								
0650								
0660	12	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, JOINT PIECE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0670								
0680								
0690	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0700	12B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0710	12C	85 71 382			X	Protection	Skydd	4

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**3-A06**
Cable terminals	**3-E16**

3-A22

Contact housing etc
1986

Kontakthus etc
1986

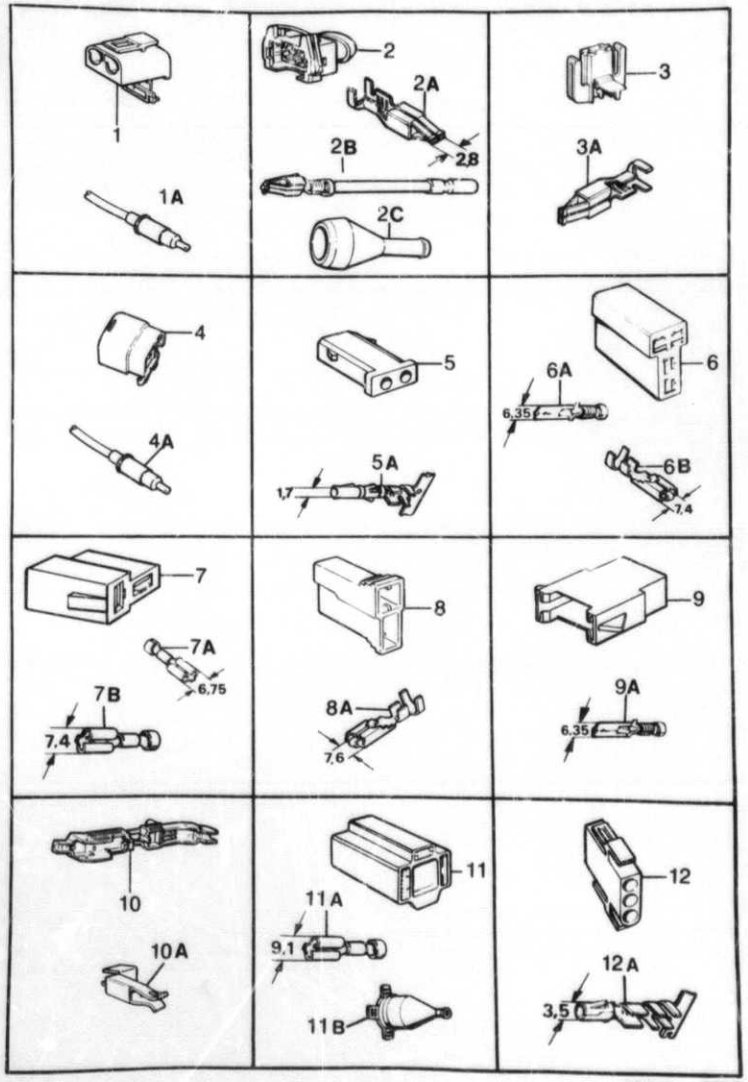

F0740 - 9000


Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
1	95 03 319		EL. WINDOW REGULATOR, CENTRAL LOCK, DOOR INDICATOR, STD FAN, SOLENOID VALVE APC, WASHER PUMP, LEVEL SWITCH, WASHER MOTOR, FAN MOTOR, FAN AC, OIL LEVEL, JOINT PIECE, SWITCH BACK-UP LIGHT, OUTER TEMP, LOCK INDICATOR, PRESSURE SWITCH GEAR INDICATOR, RECIRCULATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
1A	78 74 506			X	Connection	Skarv	5
2	85 93 915		THERMO SWITCH	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
2B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
2C	85 71 382			X	Protection	Skydd	4
3	91 24 157		LIGHT MIRROR, JOINT PIECE, ACC, MOTOR CENTRAL LOCK COVER FUEL FILLING, SUN SENSOR, INNER TEMP	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
3A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
4	95 01 685		JOINT PIECE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
4A	78 74 506			X	Connection	Skarv	5
5	95 06 643		MIXING TEMP ACC	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
5A	85 87 552		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6	71 55 104		JOINT PIECE	X	Contact housing	Kontakthus	4
6A	85 82 637		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
6B	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
7	85 58 538		FEED PUMP, CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
7A	*85 03 476*		AREA 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
7B	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
7B	*71 55 153*		AREA 0,8-2,1 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
8	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
8A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
9	*95 02 998*		JOINT PIECE NLS - USE 4069829	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
9A	*71 55 062*		AREA 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
10	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
10A	95 52 191			X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

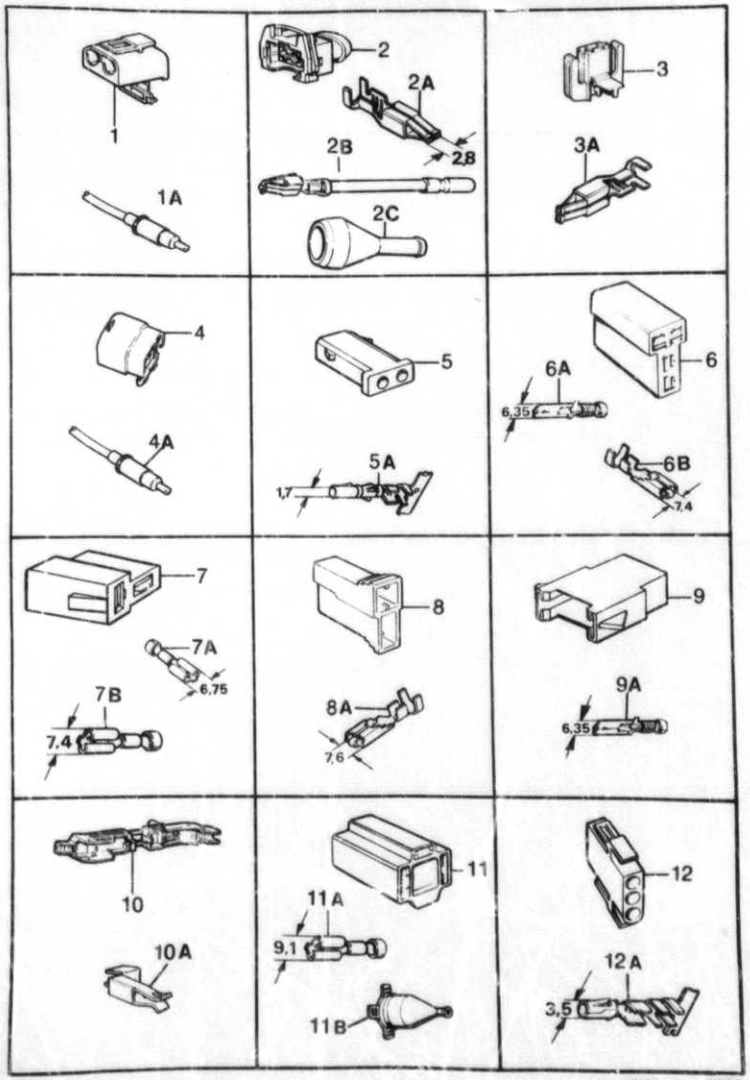

F0740 - 9000

Wiring and fuses

3-A24

Contact housing etc

1986

Ledningar och säkringar

Kontakthus etc

1986

0112	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	11	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0620						3-pole, female	3-polig, hylsa	
0630	11A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0640	11B	85 52 721			X	Cable protection	Kabelskydd	4
0650								
0660	12	85 64 916		JOINT PIECE	X	Contact housing	Kontakthus	4
0670						3-pole, female	3-polig, hylsa	
0680	12A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - U - 8582595	X	Cable terminal	Kabelsko	5
0680								

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B02

Contact housing etc
1986

Kontakthus etc
1986

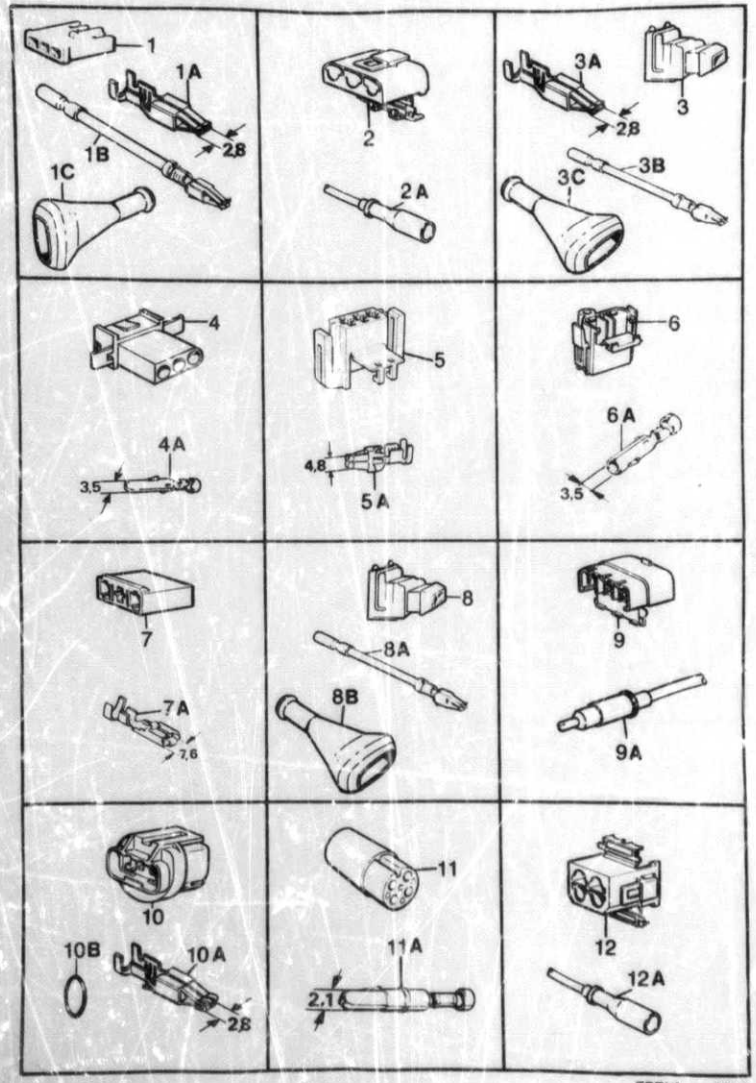

F0741 - 9000

0114	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 74 097		DISTRIBUTOR	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0050	1C	85 74 105			X	Protection	Skydd	4
0070	2	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, JOINT PIECE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0110	2A	78 74 498			X	Connection	Skarv	5
0130	3	85 93 907		THROTTLE SWITCH	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0150	3A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0160	3B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0170	3C	85 79 955			X	Protection	Skydd	4
0190	4	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0210	4A	*85 44 314*		AREA 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0220	4A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0240	5	91 24 165		JOINT PIECE, FUEL LEVEL TRANSMITTER, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0280	5A	91 20 775		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0290	5A	91 20 783		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0310	6	95 03 293		DIRECTION LIGHT, PARKING LIGHT, DAY RUNNING LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0330	6A	*85 44 298*		AREA 1,0-2,5 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0350	7	95 07 658		SWITCH INNER LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0370	7A	91 20 775		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0380	7A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0400	8	85 93 923		IDLE COMPENSATOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0420	8A	85 22 617		AREA 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0430	8B	85 79 955			X	Protection	Skydd	4
0450	9	95 03 327		JOINT PIECE	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0470	9A	78 74 506			X	Connection	Skarv	5
0490	10	95 14 803		HEADLIGHT US	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0510	10A	*95 08 748*		AREA, 1,5-2,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0520	10B	95 14 811			X	Protection	Skydd	4
0540	11	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0560	11A	85 22 583		AREA, 0,5-1,0 MM2 (8503153)	X	Cable terminal	Kabelsko	5
0580	12	95 03 434		CONTROL UNIT ACC, PRESSURE SWITCH	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0600	12A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B04

Contact housing etc
1986

Kontakthus etc
1986

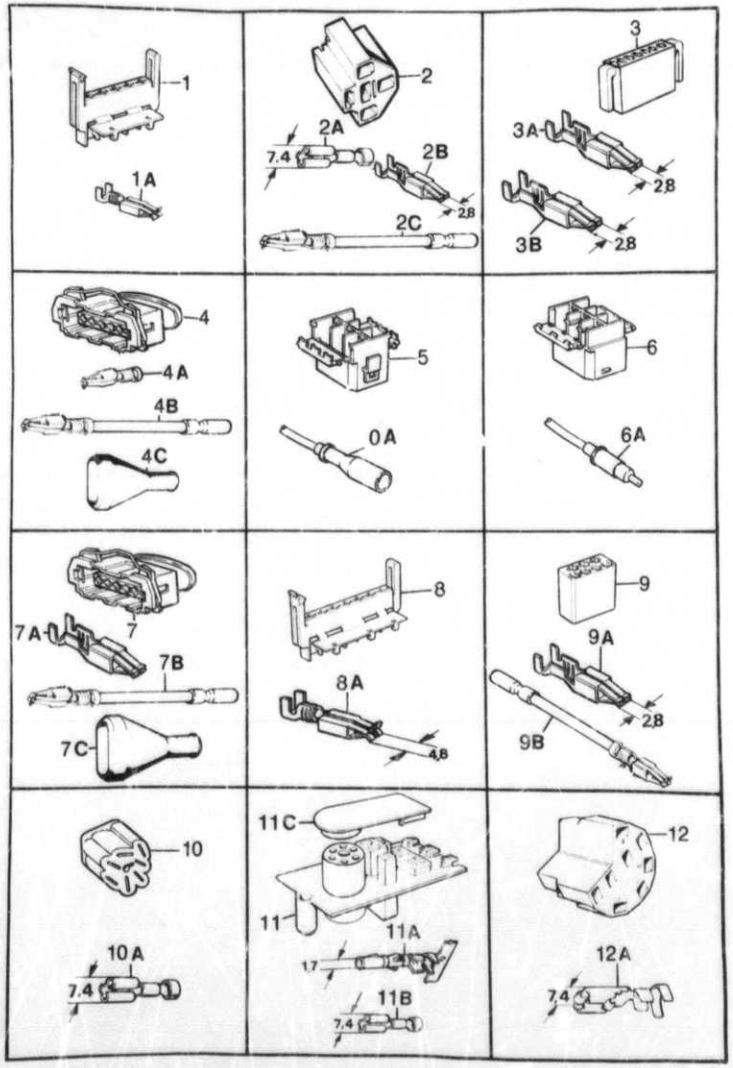

F4087 9000


0116	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 22 789		RESISTOR HEATING FAN	X	Contact housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030	1A	91 20 767		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	85 33 697		RELAY WINDOW REGULATOR, TIME RELAY COOLING FAN, GEAR INDICATOR, REAR FOG LIGHT EXTRA	X	Contact housing	Kontakthus	4
0060						5-pole, female	5-polig, hylsa	
0070								
0080								
0090	2A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0100	2A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0110	2A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0120	2B	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0130	2C	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0140								
0150	3	91 24 173		GEAR INDICATOR, JOINT PIECE	X	Contact housing	Kontakthus	4
0160						5-pole, female	5-polig, hylsa	
0170	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0180	3B	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	4	85 93 931		AIR MESS METER LH	X	Contact housing	Kontakthus	4
0210						6-pole, female	6-polig, hylsa	
0220	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230	4B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0240	4C	85 82 082			X	Protection	Skydd	4
0250								
0260	5	95 03 475		JOINT PIECE	X	Contact housing	Kontakthus	4
0270						6-pole, female	6-polig, hylsa	
0280	5A	78 74 498			X	Connection	Skarv	5
0290								
0300	6	95 06 668		JOINT PIECE	X	Contact housing	Kontakthus	4
0310						6-pole, male	6-polig, stift	
0320	6A	78 74 506			X	Connection	Skarv	5
0330								
0340	7	85 93 949		ELECTRONIC UNIT IGNITION SYSTEM	X	Contact housing	Kontakthus	4
0350						7-pole, female	7-polig, hylsa	
0360	7A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0370	7B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0380	7C	85 74 048			X	Protection	Skydd	4
0390								
0400	8	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT	X	Contact housing	Kontakthus	4
0410						7-pole, female	7-polig, hylsa	
0420								
0430								
0440	8A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0450	8A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0460								
0470	9	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0480						7-pole, female	7-polig, hylsa	
0490	9A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	9B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0510								
0520	10	95 03 251		HEATING FAN	X	Contact housing	Kontakthus	5
0530						7-pole, female	7-polig, hylsa	
0540	10A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0550								
0560	11	95 12 591		TEST CONNECTOR	X	Contact	Kontakt	4
0570						7-pole, female	7-polig, hylsa	
0580	11A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0590	11A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0600	11B	*85 82 454*		AREA, 0,5-1,05MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0600								
0610	11C	95 20 974			X	Cover	Lock	9
0620								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

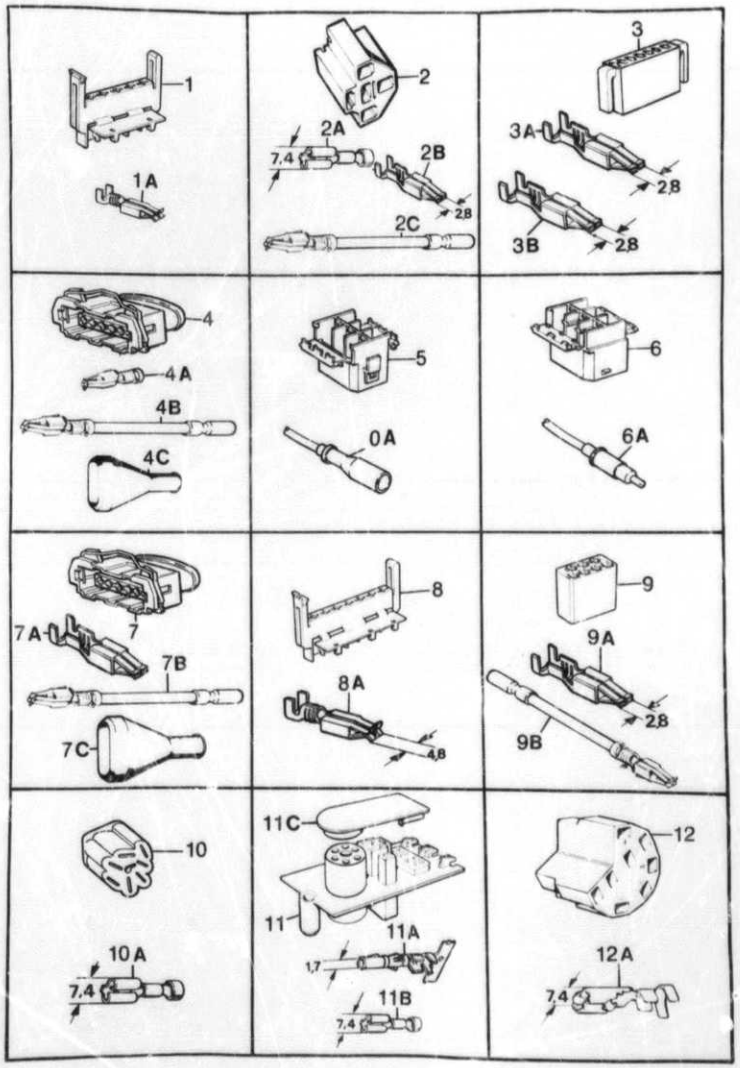

F4087 9000

0116	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	12	85 44 363		SWITCH REAR FOGLIGHT	X	Contact housing	Kontakthus	4
0640						8-pole, female	8-polig, hylsa	
0650	12A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0650								
0660	12A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B08

Contact housing etc
1986

Kontakthus etc
1986

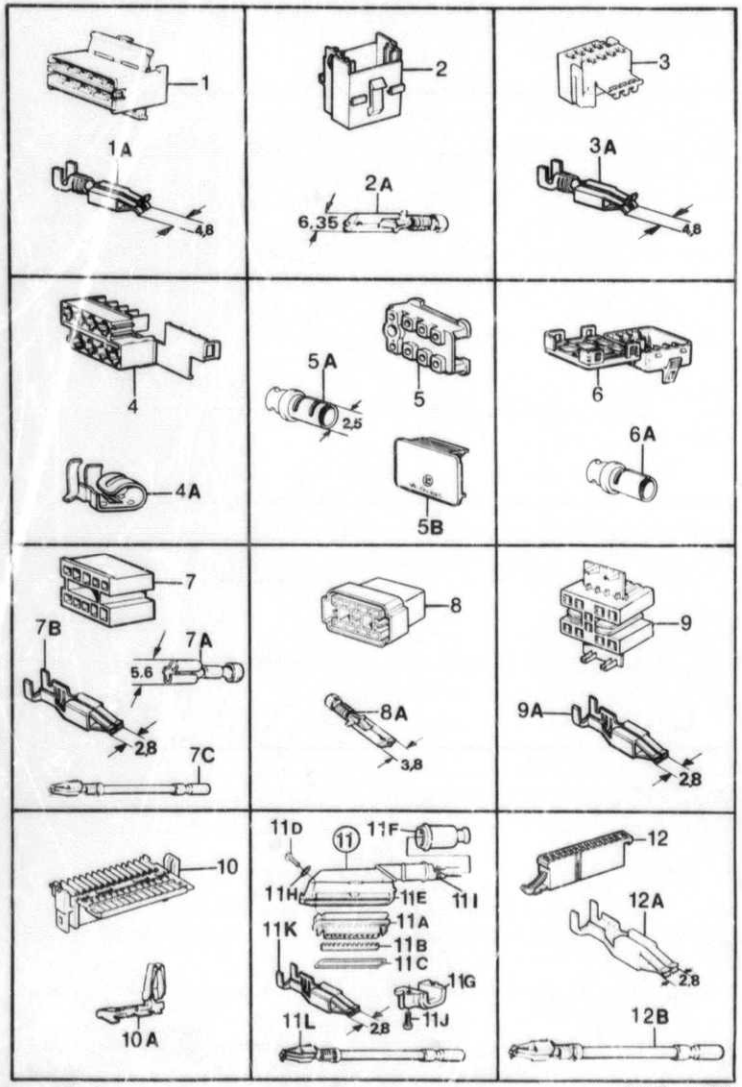

F0743 - 9000

0118	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0030	1A	91 20 775		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050	2	91 24 181		JOINT PIECE, EL-HEATED SEAT	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
0070	2A	*71 55 062*		AREA, 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0080	2A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	91 24 090		JOINT PIECE, SWITCH REAR DEMIST, SWITCH WINDOW REGULATOR, SWITCH SUN ROOF, CENTRAL LOCK, TOW HOOK, ACC	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0150	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0160	3A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0170	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0190	4	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0210	4A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230	5	95 52 159		ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0250	5A	95 52 175			X	Cable terminal	Kabelsko	5
0260	5B	95 52 167			X	Cover	Lock	4
0280	6	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0300	6A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0320	7	85 44 371		LEVEL CONTROL	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0340	7A	85 44 389		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0350	7B	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0360	7C	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0380	8	91 22 557		RADIO	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0400	8A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	9	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, DCC, RADIO, REOSTAT, FOG LIGHT EXTRA	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0460	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0470	9A	*95 08 748*		AREA, 1,5-2,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0490	10	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0510	10A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0530	11	85 79 930		ELECTRONIC UNIT LH	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0550	11A	85 87 420			1	.Contact housing	.Kontakthus	4
0560	11B	85 87 438		1)	1	.Striker plate	.Låsbleck	5
0570	11C	85 87 453		1)	1	.Seal	.Tätning	5
0580	11D	85 87 487		1)	1	.Screw	.Skruv	5
0590	11E	85 87 412		1)	1	.Cover	.Kåpa	4

1. Not as separate spare part. Ej som separat reservdel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B10

Contact housing etc 1986

Kontakthus etc 1986

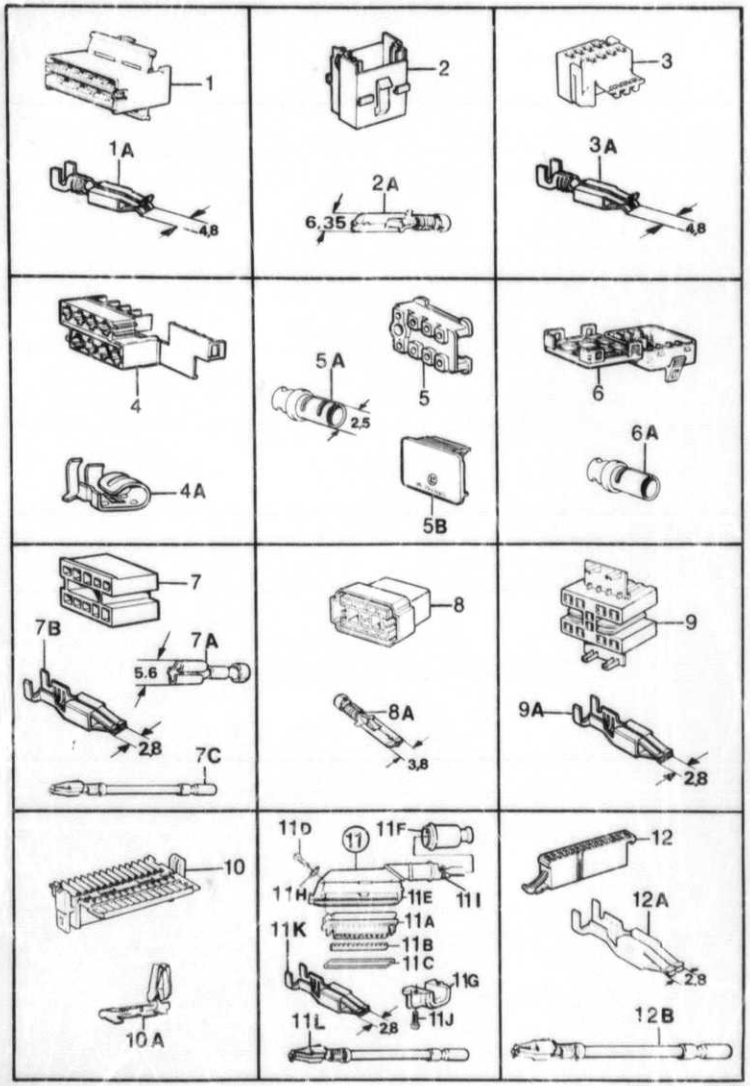

F0743 - 9000

0118	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	11F	85 87 446		1)	1	. Bushing	. Bussning	6
0610	11G	85 87 495		1)	1	. Bracket	. Hållare	4
0620	11H	85 87 461		1)	1	. Seal	. Tätning	5
0630	11I	79 71 872		1) (8558256)	1	. Tensioning band	. Spännband	5
0640	11J	79 71 351			2	. Screw	. Skruv	5
0650	11K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0660	11L	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0670								
0680	12	95 06 650		ELECTRONIC UNIT ACC	X	Contact housing	Kontakthus	4
0690						25-pole, female	25-polig, hylsa	
0700	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0710	12B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B12

Contact housing etc *1986*

Kontakthus etc *1986*

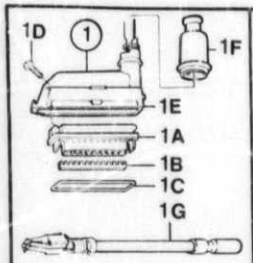

0120	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 86 802		EZK, APC	X	Contact housing	Kontakthus	4
0020						25-pole, female	25-polig, hylsa	
0030	1A	85 87 420			1	. Contact housing	. Kontakthus	4
0040	1B	85 87 438		1)	1	. Striker plate	. Låsbleck	5
0050	1C	85 87 453		1)	1	. Seal	. Tätning	5
0060	1D	85 87 487		1)	1	. Screw	. Skruv	5
0070	1E	85 87 503		1)	1	. Cover	. Kåpa	4
0080	1F	85 87 511		1)	1	. Rubber protection	. Gummiskydd	4
0090	1G	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02

3B GROUP INDEX


Connectors	3-A06
Cable terminals	3-E16

F0744 - 9000

3-B14

Contact housing etc
1987

Kontakthus etc
1987

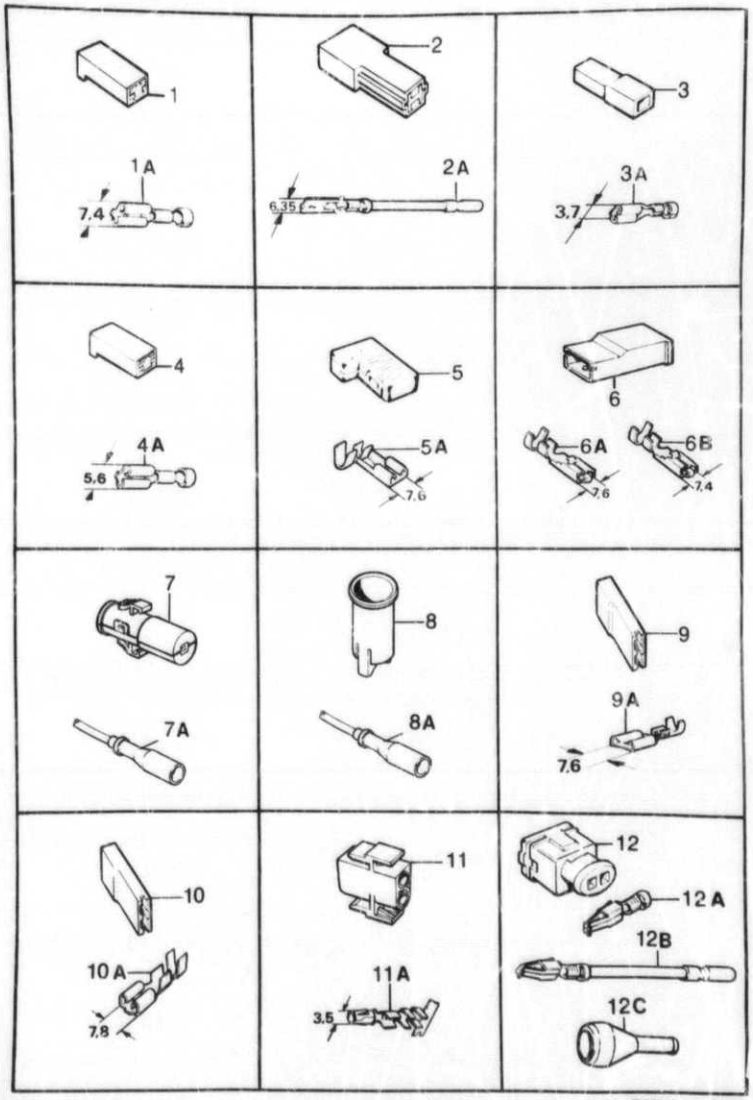

F0745 - 9000

0122	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, JOINT PIECE, SIGNAL	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0030	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1A	*71 55 153*		AREA, 0,8-2,1 MM2 NLS - USE 9522534	X	Cable terminal	Kabelsko	5
0050	1A	*85 82 397*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
0060	1A	85 82 546		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0080	2	71 55 120		JOINT PIECE, EL-MIRROR, EL-CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0100	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0120	3	85 30 115		LOUDSPEAKER, TUBE, JOINT PIECE	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0140	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0160	4	85 33 184		LOUDSPEAKER, PRESSURE SENSOR APC, JOINT PIECE, TUBE	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0180	4A	*85 33 028*		AREA, 0,5-1,5 MM2 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
0210	5	85 21 692		LIGHT INSTEP, IGNITION COIL, JOINT PIECE, SWITCH BRAKE LIGHT, PRESSURE SWITCH, SWITCH ENGINE COMPARTMENT LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0260	5A	*85 21 676*		AREA, 0,5-1,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0270	5A	85 22 526		AREA, 0,5-1,5 MM2 (8582421)	X	Cable terminal	Kabelsko	5
0290	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0310	6	85 41 229		LIGHT INSTEP, SAFETY BELT WARNING, SWITCH SPOTLIGHT, JOINT PIECE	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0340	6A	*85 41 203*		AREA, 0,5-1,0 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0350	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0370	7	95 03 418		COMPRESSOR, JOINT PIECE	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0390	7A	78 74 498			X	Connection	Skarv	5
0410	8	95 03 426		JOINT PIECE	X	Connector housing 1-pole, male	Skarvhus 1-polig, stift	4
0430	8A	78 74 498			X	Connection	Skarv	5
0450	9	85 16 916		STARTER, SPEED CONTROL, JOINT PIECE, HAND BRAKE, APC PRESSURE SENSOR, PRESSURE SWITCH, BRAKE CONTACT, THERMO CONTACT, LAMBDA SOND, THROTTLE-SWITCH GEAR INDICATOR, TEMP SENSOR GEAR INDICATOR, CIGARETTE LIGHTER	X	Insulation 2-pole, female	Isolering 2-polig, hylsa	4
0540	9A	85 14 036		AREA, 0,3-0,8 MM2	X	Cable terminal	Kabelsko	5
0550	9A	*85 14 028*		AREA, 0,3-0,8 MM2 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0560	9A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	9A	*71 55 039*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B16

Contact housing etc
1987

Kontakthus etc
1987

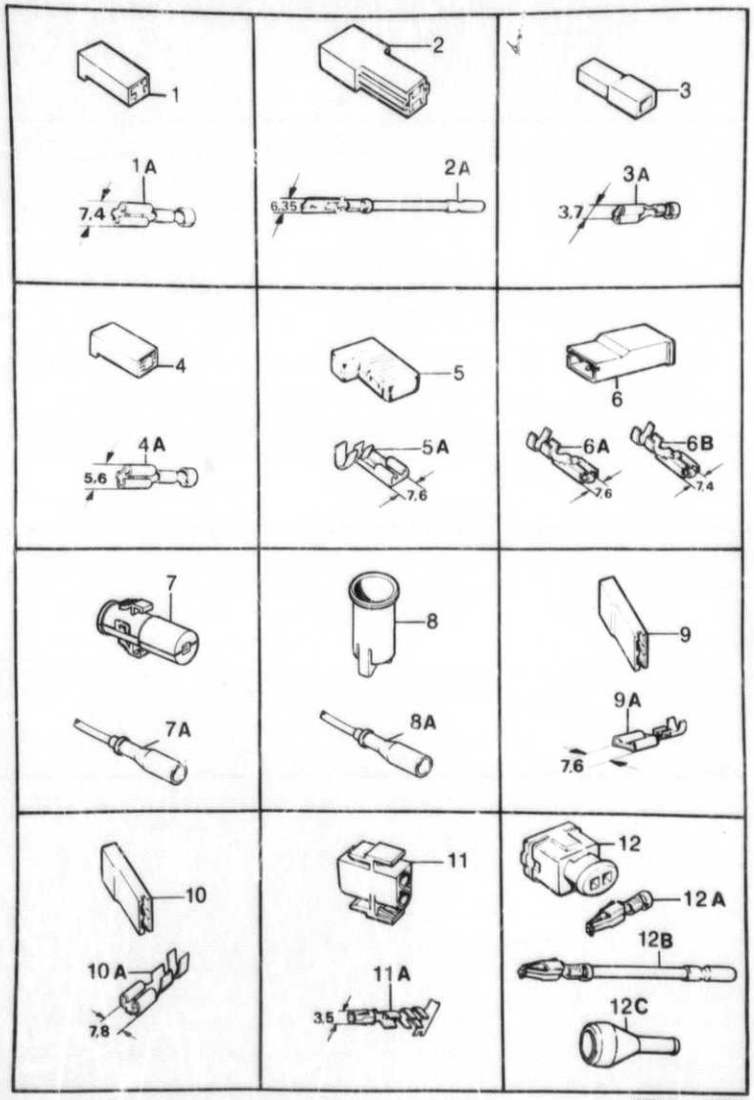

F0745 - 9000


0122	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	10	83 78 630		PEDAL CONTACT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0600								
0610	10A	*85 09 846*		AREA, 0,5-1,4 MM2 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0610								
0620								
0630	11	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, JOINT PIECE, EZK, APC, SENSOR ABS, VENTILATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0640								
0650								
0660								
0670								
0680	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0690	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0690								
0700	11C	85 21 619			X	Protection	Skydd	4
0710								
0720	12	95 03 319		EL. WINDOW REGULATOR, CENTRAL LOCK, STD FAN SOLENOID VALVE APC, WASHER PUMP, LEVEL SWITCH, WASHER MOTOR, FAN MOTOR, FAN AC, OIL LEVEL, JOINT PIECE, SWITCH BACK-UP LIGHT, OUTER TEMP, PRESSURE SWITCH GEAR INDICATOR, FEED PUMP, ACC, LEVEL SWITCH WASHER PUMP, FAN, APC, FOG LIGHT EXTRA, ABS, JOINT PIECE CABLE HARNESS ENGINE, JOINT PIECE ENGINE COMPARTMENT LIGHT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0730								
0740								
0750								
0760								
0770								
0780								
0790								
0800								
0810								
0820								
0830								
0840								
0850								
0860								
0870								
0880								
0890	12A	78 74 506			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

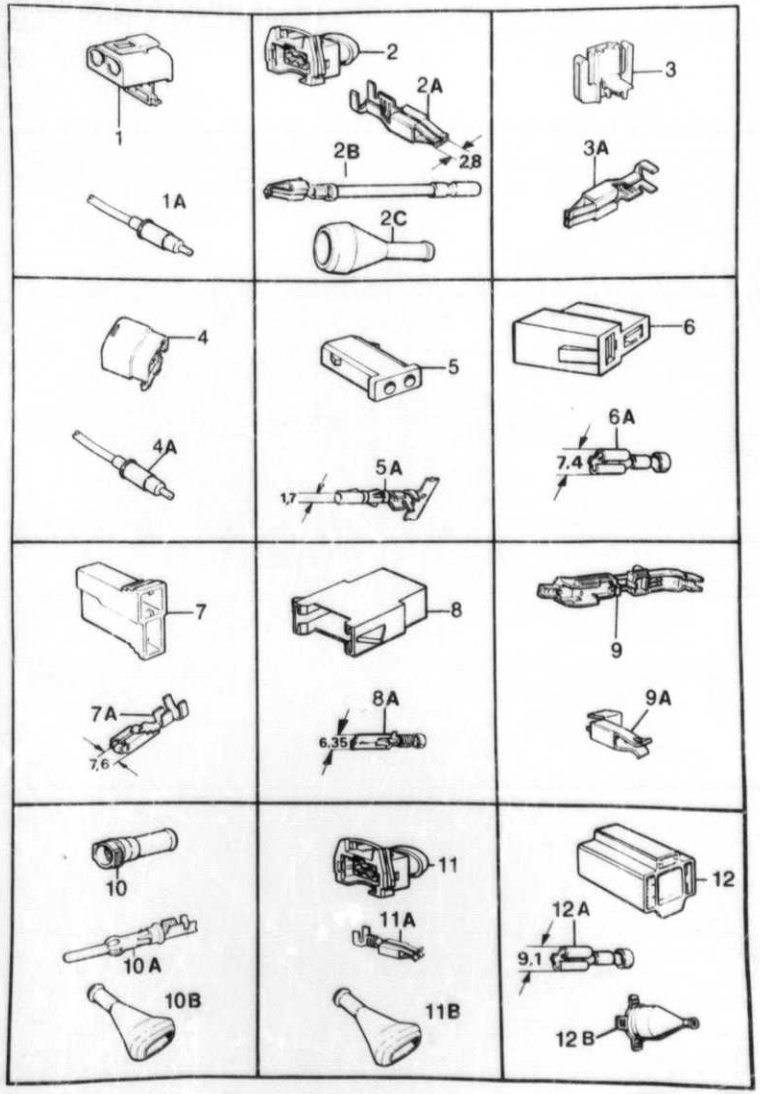

F0746 - 9000

0124	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 319		EL. WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0020				CENTRAL LOCK, DOOR		2-pole, female	2-polig, hylsa	
0030				INDICATOR, STD FAN,				
0040				SOLENOID VALVE APC,				
0050				WASHER PUMP, LEVEL				
0060				SWITCH, WASHER MOTOR,				
0070				FAN MOTOR, FAN AC, OIL				
0080				LEVEL, JOINT PIECE,				
0090				SWITCH BACK-UP LIGHT,				
0100				OUTER TEMP, LOCK INDICA-				
0110				TOR, PRESSURE SWITCH				
0120				GEAR INDICATOR, FEED				
0130				PUMP, RECIRCULATION,				
0140				ACC, APC, LEVEL SWITCH				
0150				WASHER PUMP, FOG LIGHT				
0160				EXTRA, ABS, FAN				
0170	1A	78 74 506			X	Connection	Skarv	5
0180								
0190	2	85 93 915		THERMO SWITCH	X	Contact housing	Kontakthus	4
0200						2-pole, female	2-polig, hylsa	
0210	2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0220	2B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0230	2C	85 71 382			X	Protection	Skydd	4
0240								
0250	3	91 24 157		LIGHT MIRROR, JOINT	X	Contact housing	Kontakthus	4
0260				PIECE, ACC, MOTOR		2-pole, female	2-polig, hylsa	
0270				CENTRAL LOCK COVER FUEL				
0280				FILLING, SUN SENSOR,				
0290				INNER TEMP, SIDE DIRECT				
0300				INDICATOR, FAN AC, AC,				
0310				EDU II DCC, SPEED CONT-				
0320				ROL				
0330	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0340	3A	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0350	3A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360								
0370	4	95 01 685		JOINT PIECE, ENGINE	X	Contact housing	Kontakthus	4
0380				COMPARTMENT LIGHT		2-pole, male	2-polig, stift	
0390	4A	78 74 506			X	Connection	Skarv	5
0400								
0410	5	95 06 643		MIXING TEMP ACC	X	Contact housing	Kontakthus	4
0420						2-pole, female	2-polig, hylsa	
0430	5A	85 87 552		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0440								
0450	6	85 58 538		CIGARETTE LIGHTER,	X	Contact housing	Kontakthus	4
0460				ELECTRONIC UNIT BELT		2-pole, female	2-polig, hylsa	
0470				TENSIONER				
0480	6A	*85 82 454*		AREA 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0480				USE 8522534				
0490	6A	*71 55 153*		AREA 0,8-2,1 MM2 NLS -	X	Cable terminal	Kabelsko	5
0490				USE 8522534				
0500								
0510	7	85 74 949		SPEED SENSOR	X	Contact housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530	7A	*85 41 203*		AREA 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0530				USE 8560476				
0540								
0550	8	*95 02 998*		JOINT PIECE, EDU II DCC	X	Contact housing	Kontakthus	4
0560				NLS - USE 4069829		2-pole, male	2-polig, stift	
0570	8A	*71 55 062*		AREA 0,8-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0570				USE 8522542				
0580								
0590	9	95 52 183		BELT TENSIONER	X	Contact housing	Kontakthus	4
0600						2-pole, female	2-polig, hylsa	
0610	9A	95 52 191			X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmiasion	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B20

Contact housing etc 1987

Kontakthus etc 1987

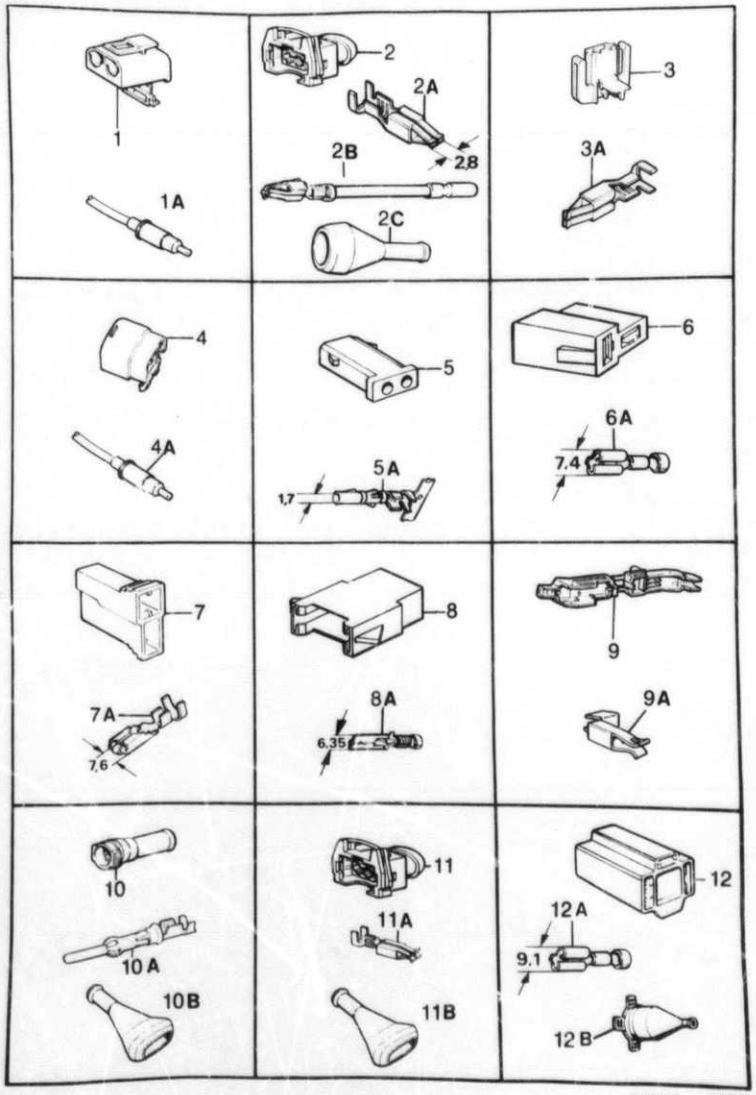

F0746 - 9000


0124	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620								
0630	10	95 19 406		SENSOR ABS	X	Contact housing	Kontakthus	4
0640						2-pole, male	2-polig, stift	
0650	10A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0660	10B	85 79 955			X	Protection	Skydd	4
0670								
0680	11	95 19 422		PUMP ABS	X	Contact housing	Kontakthus	4
0690						2-pole, female	2-polig, hylsa	
0700	11A	91 20 767		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0710	11B	85 79 955			X	Protection	Skydd	4
0720								
0730	12	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0740						3-pole, female	3-polig, hylsa	
0750	12A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0760	12B	85 52 721			X	Cable protection	Kabelskydd	4

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

3B GROUP INDEX

Connectors	**3-A06**
Cable terminals	**3-E16**

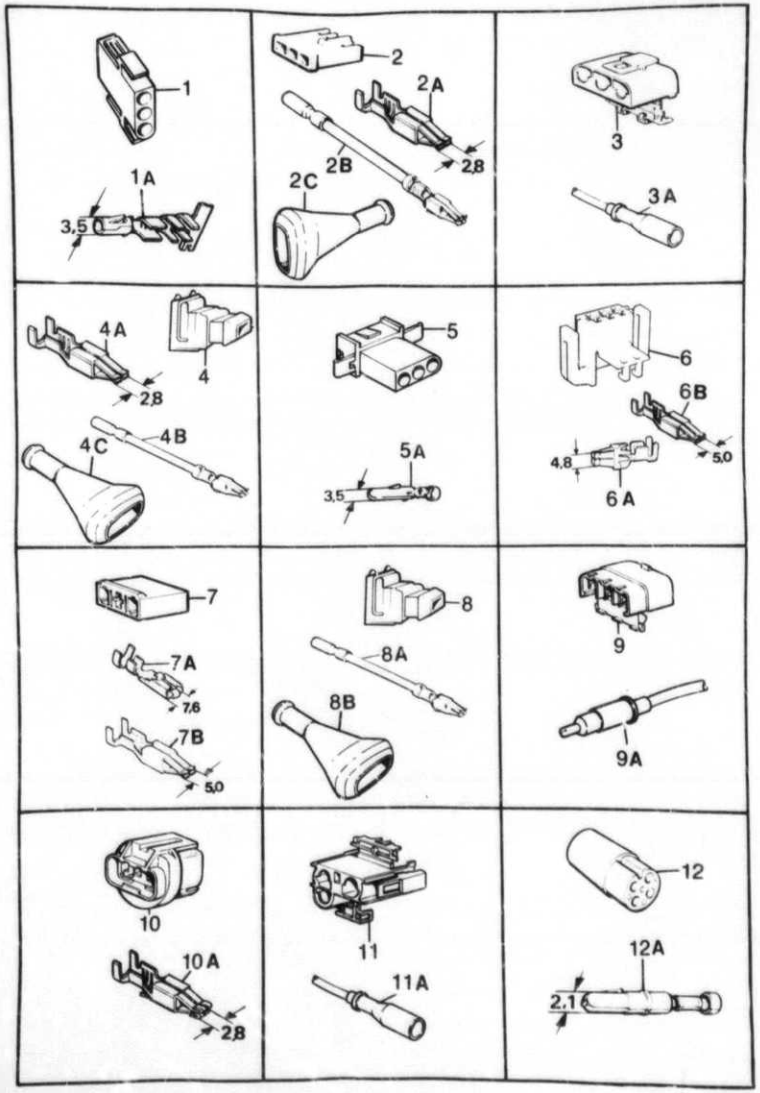

F0747 - 9000

0126	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 64 916		JOINT PIECE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0030	1A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0050	2	85 74 097		DISTRIBUTOR	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0070	2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0080	2B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0090	2C	85 74 105			X	Protection	Skydd	4
0110	3	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, JOINT PIECE, CENTRAL LOCK	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0150	3A	78 74 498			X	Connection	Skarv	5
0170	4	85 93 907		THROTTLE SWITCH	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0190	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0200	4B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0210	4C	85 79 955			X	Protection	Skydd	4
0230	5	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0250	5A	*85 44 314*		AREA 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0260	5A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0280	6	91 24 165		JOINT PIECE, FUEL LEVEL TRANSMITTER, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0330	6A	91 20 775		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0340	6B	95 21 972		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0350	6B	*95 21 980*		AREA 1,5-2,5 MM2 NLS - USE 9120783	X	Cable terminal	Kabelsko	5
0370	7	95 07 658		SWITCH INNER LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0390	7A	91 20 775		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	7A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0410	7B	95 21 972		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0430	8	85 93 923		IDLE COMPENSATOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0450	8A	85 22 617		AREA 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0460	8B	85 79 955			X	Protection	Skydd	4
0480	9	95 03 327		JOINT PIECE	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0500	9A	78 74 506			X	Connection	Skarv	5
0520	10	95 14 603		HEADLIGHT US	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0540	10A	*95 08 748*		AREA, 1,5-2,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0560	11	95 19 679		PARKING LIGHT, DIRECTION LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0580	11A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-B24

Contact housing etc *1987*

Kontakthus etc *1987*

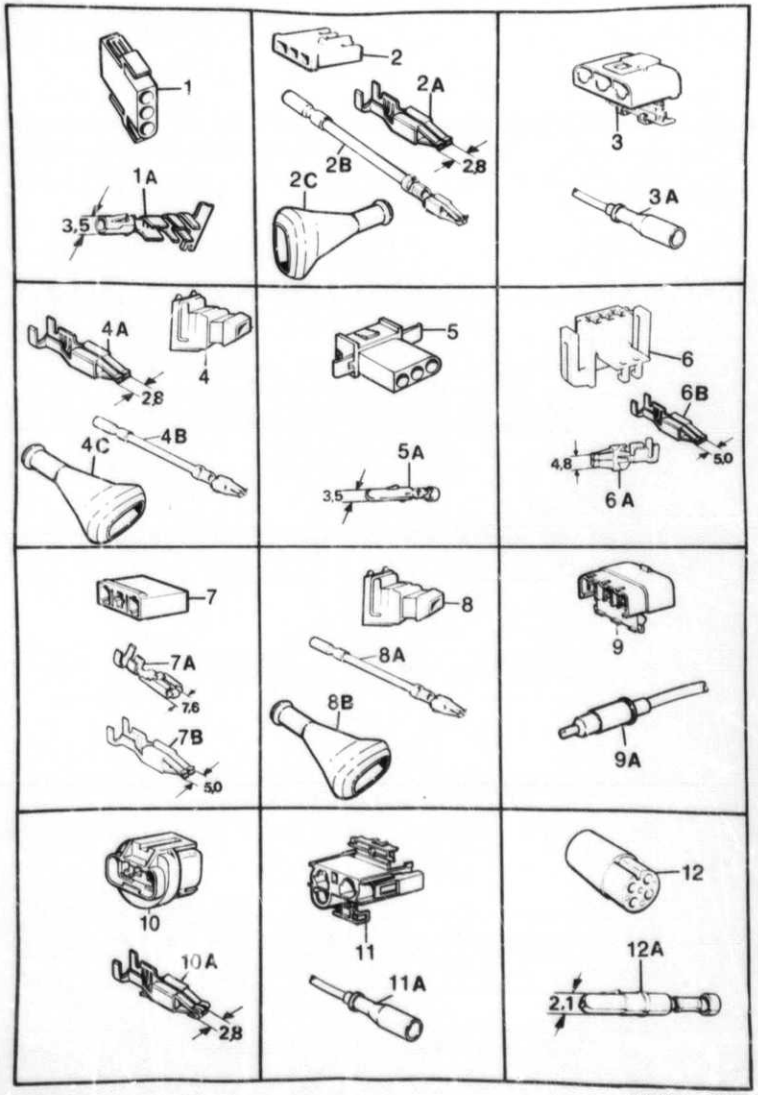

F0747 - 9000

0126	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	12	85 30 099		ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0610						4-pole, female	4-polig, hylsa	
0620	12A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C02

Contact housing etc
1987

Kontakthus etc
1987

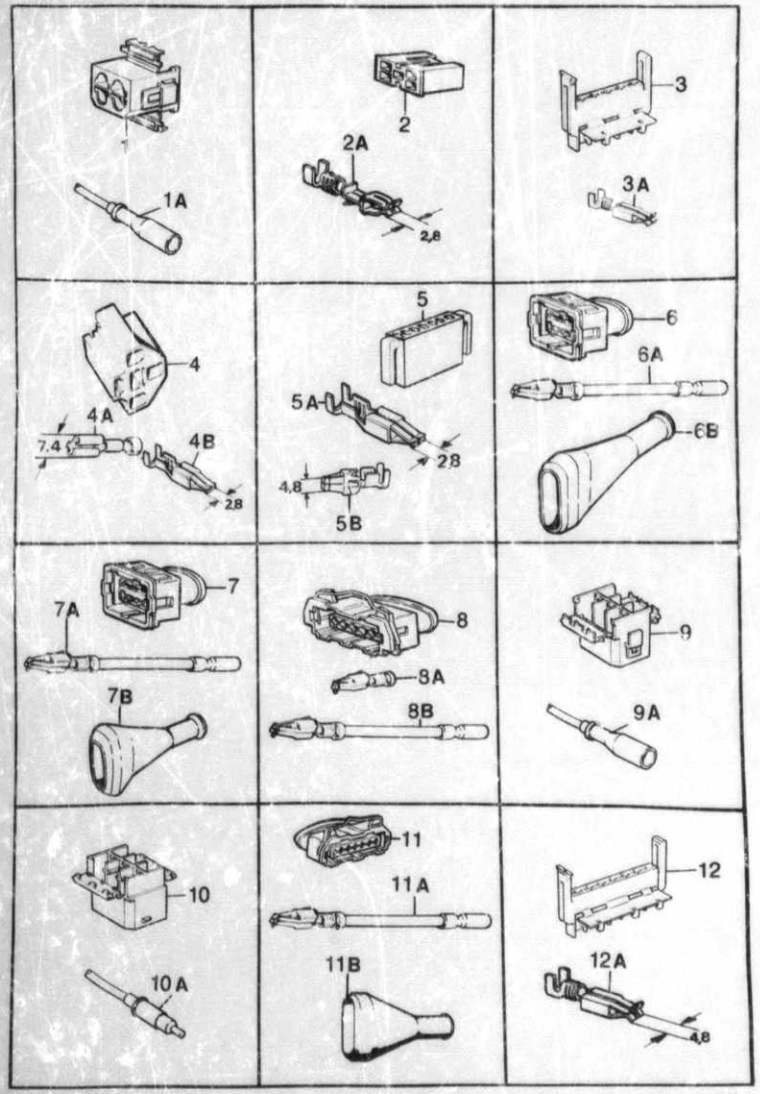

F0748 - 9000

0128	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0030	1A	78 74 498			X	Connection	Skarv	5
0050	2	91 23 555		FAN INDOOR TEMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0070	2A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0090	3	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0110	3A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0120	3A	91 20 767		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0140	4	85 33 697		RELAY WINDOW REGULATOR, TIME RELAY COOLING FAN, REAR FOG LIGHT EXTRA, DIM DIP	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0180	4A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190	4A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0200	4A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0210	4B	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0230	5	91 24 173		GEAR INDICATOR, JOINT PIECE	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0250	5A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0260	5A	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0270	5B	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290	6	95 19 414		SENSOR ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0310	6A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0320	6B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4
0340	7	95 19 455		LEVEL ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0360	7A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0370	7B	95 19 430			X	Protection	Skydd	4
0390	8	85 93 931		AIR MESS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0410	8A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	8B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0440	9	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0460	9A	78 74 498			X	Connection	Skarv	5
0480	10	95 06 668		JOINT PIECE	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0500	10A	78 74 506			X	Connection	Skarv	5
0520	11	85 93 949		EZK, POWER STAGE, VALVE,	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0540	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0550	11B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0560	11C	85 74 048			X	Protection	Skydd	4
0580	12	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT , REAR FOG LIGHT, JOINT PIECE	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0630	12A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C04

Contact housing etc
1987

Kontakthus etc
1987

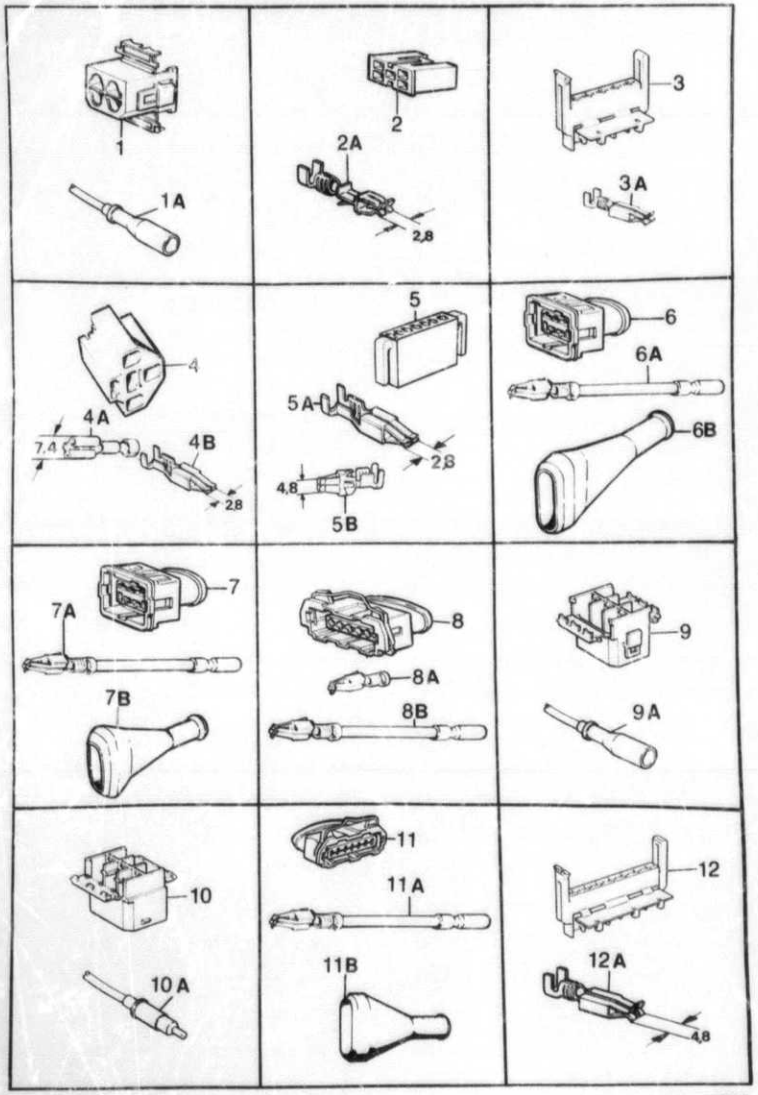

F0748 - 9000

0128	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0650	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C06

Contact housing etc
1987

Kontakthus etc
1987

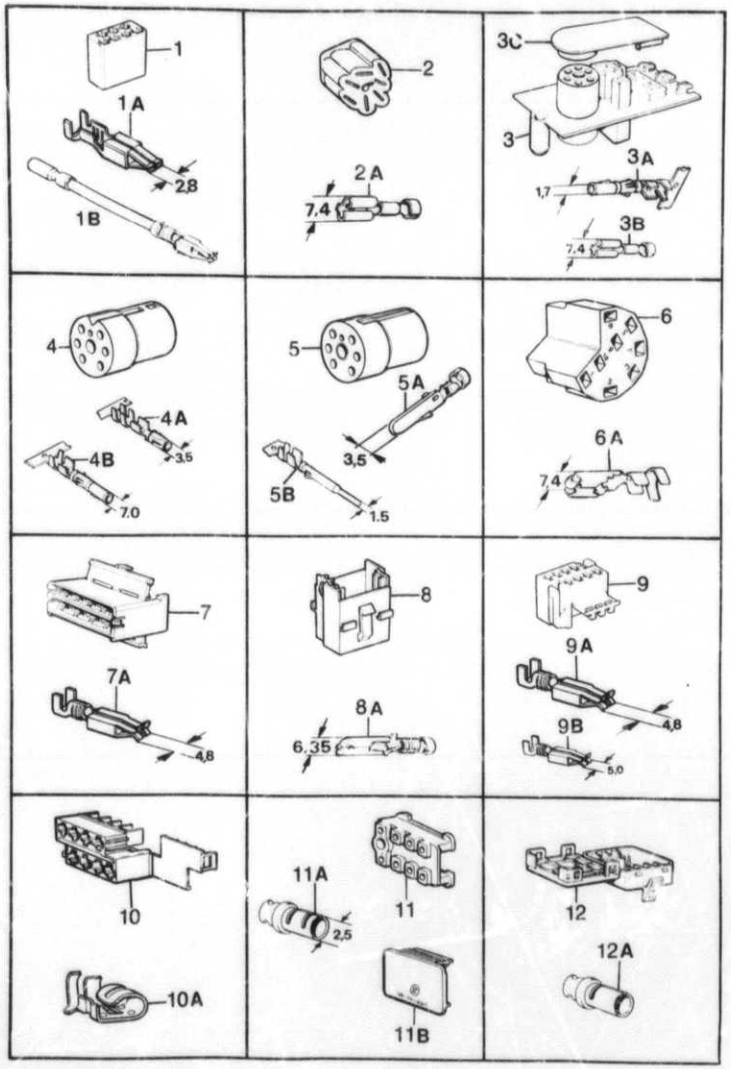

F4088 9000

Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
1	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
2	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
2A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
3	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
3A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
3A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3B	*85 82 454*		AREA, 0,5-1,05MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
3C	95 20 974			X	Cover	Lock	9
4	85 21 700		JOINT PIECE	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
4A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
4B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 21 718		JOINT PIECE	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
5A	*85 44 314*		AREA, 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
5B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6	85 44 363		SWITCH REAR FOGLIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
6A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
7	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
7A	91 20 775		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
8	91 24 181		JOINT PIECE, EL-HEATED SEAT, EDU II	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
8A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
8A	*71 55 062*		AREA, 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
8A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
9	91 24 090		JOINT PIECE, SWITCH REAR DEMIST, SWITCH SUN ROOF, REGULATOR, SWITCH SUN CENTRAL LOCK, TOW HOOK, ACC, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, SWITCH FAN, DCC, EDU I, ALARM	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
9A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
9A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
9B	95 21 972		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
9B	*95 21 980*		AREA, 1,5-2,5 MM2 NLS - USE 9120783	X	Cable terminal	Kabelsko	5
10	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
10A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C08

Contact housing etc
1987

Kontakthus etc
1987

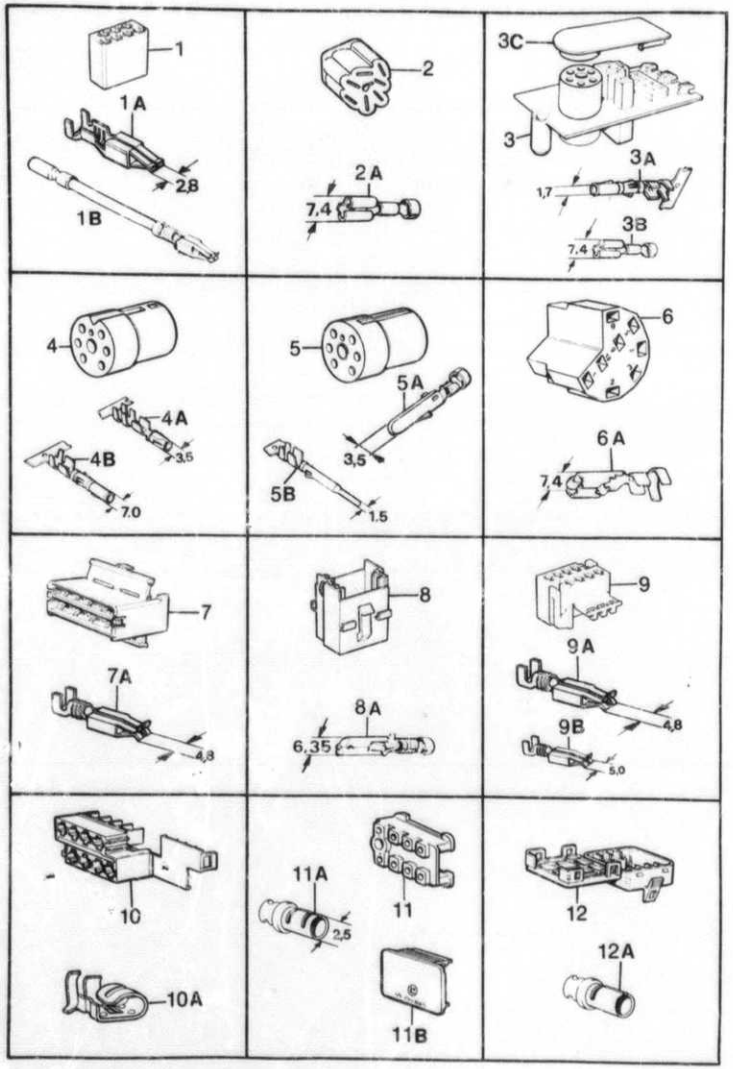

F4088 9000

0130	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600								
0610	11	95 52 159		ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0620								
0630	11A	95 52 175			X	Cable terminal	Kabelsko	5
0640	11B	95 52 167			X	Cover	Lock	4
0650								
0660	12	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0670								
0680	12A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C10

Contact housing etc 1987

Kontakthus etc 1987

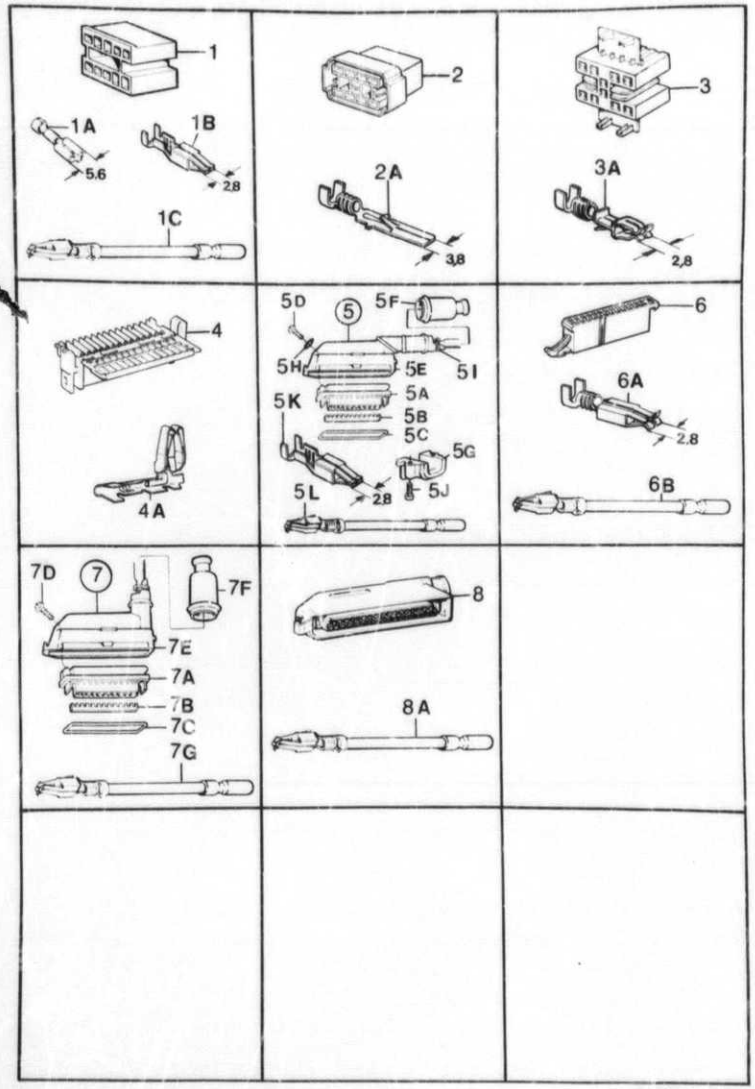

F0750 - 9000

0132	Pos	Part No/Art nr	Y S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 371		LEVEL CONTROL	X	Connector housing	Skarvhus	4
0020						10-pole, female	10-polig, hylsa	
0030	1A	85 44 389		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050	1C	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0060								
0070	2	91 22 557		RADIO	X	Connector housing	Skarvhus	4
0080						10-pole, male	10-polig, stift	
0090	2A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0100								
0110	3	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, RADIO, REOSTAT, FOG LIGHT EXTRA, REOSTAT EL-PAD	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0120								
0130								
0140								
0150								
0160	3A	*95 08 706*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0170	3A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0180	3A	*95 08 748*		AREA, 1,5-2,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190								
0200	4	95 03 020		INSTRUMENTS	X	Contact housing	Kontakthus	4
0210						14-pole, female	14-polig, hylsa	
0220	4A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0230								
0240	5	85 79 930		ELECTRONIC UNIT LH	X	Contact housing	Kontakthus	4
0250						25-pole, female	25-polig, hylsa	
0260	5A	85 87 420			1	.Contact housing	.Kontakthus	4
0270	5B	85 87 438			1	.Striker plate	.Låsbleck	5
0280	5C	85 87 453			1	.Seal	.Tätning	5
0290	5D	85 87 487			1	.Screw	.Skruv	5
0300	5E	85 87 412			1	.Cover	.Kåpa	4
0310	5F	85 87 446			1	.Bushing	.Bussning	6
0320	5G	85 87 495			1	.Bracket	.Hållare	4
0330	5H	85 87 461			1	.Seal	.Tätning	5
0340	5I	79 71 872		(8558256)	1	.Tensioning band	.Spännband	5
0350	5J	79 71 351			2	.Screw	.Skruv	5
0360	5K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0370	5L	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0380								
0390	6	95 06 650		ELECTRONIC UNIT ACC	X	Contact housing	Kontakthus	4
0400						25-pole, female	25-polig, hylsa	
0410	6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	6B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0430								
0440	7	85 86 802		EZK, APC	X	Contact housing	Kontakthus	4
0450						25-pole, female	25-polig, hylsa	
0460	7A	85 87 420			1	.Contact housing	.Kontakthus	4
0470	7B	85 87 438			1	.Striker plate	.Låsbleck	5
0480	7C	85 87 453			1	.Seal	.Tätning	5
0490	7D	85 87 487			1	.Screw	.Skruv	5
0500	7E	85 87 503			1	.Cover	.Kåpa	4
0510	7F	85 87 511			1	.Rubber protection	.Gummiskydd	4
0520	7G	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0530								
0540	8	85 39 363		ELECTRONIC UNIT ABS	X	Contact housing	Kontakthus	4
0550						35-pole, female	35-polig, hylsa	
0560	8A	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C12

Contact housing etc 1988

Kontakthus etc 1988

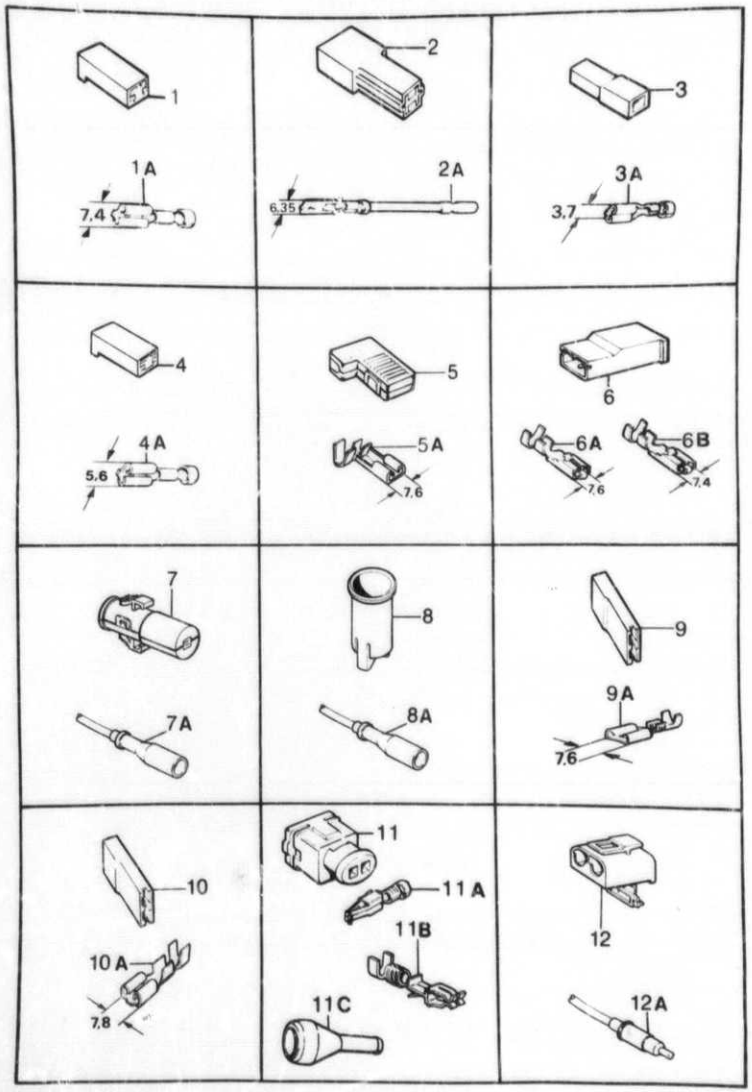

F0751 - 9000

0134	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, JOINT PIECE, SIGNAL	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0030	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1A	*71 55 153*		AREA, 0,8-2,1 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0050	1A	*85 82 397*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5
0060	1A	85 82 546		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0080	2	71 55 120		JOINT PIECE, EL-MIRROR, EL-CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0100	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0120	3	85 30 115		LOUDSPEAKER, TUBE, JOINT PIECE	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0140	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0160	4	85 33 184		LOUDSPEAKER, PRESSURE SENSOR APC, JOINT PIECE, TUBE	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0190	4A	*85 33 028*		AREA, 0,5-1,5 MM2 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
0210	5	85 21 692		LIGHT INSTEP, IGNITION COIL, JOINT PIECE, SWITCH BRAKE LIGHT, PRESSURE SWITCH, SWITCH ENGINE COMPARTMENT LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0260	5A	*85 21 676*		AREA, 0,5-1,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0270	5A	85 22 526		AREA, 0,5-1,5 MM2 (8582421)	X	Cable terminal	Kabelsko	5
0290	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0310	6	85 41 229		LIGHT INSTEP, SAFETY BELT WARNING, SWITCH SPOTLIGHT, JOINT PIECE	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0340	6A	*85 41 203*		AREA, 0,5-1,0 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0350	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0370	7	95 03 418		COMPRESSOR, JOINT PIECE	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0390	7A	78 74 498			X	Connection	Skarv	5
0410	8	95 03 426		JOINT PIECE	X	Connector housing 1-pole, male	Skarvhus 1-polig, stift	4
0430	8A	78 74 498			X	Connection	Skarv	5
0450	9	85 16 916		STARTER, SPEED CONTROL, JOINT PIECE, HAND BRAKE, APC PRESSURE SENSOR, PRESSURE SWITCH, BRAKE CONTACT, THERMO CONTACT, LAMBDA SOND, THROTTLE-SWITCH GEAR INDICATOR, TEMP SENSOR GEAR INDICATOR, CIGARETTE LIGHTER	X	Insulation 2-pole, female	Isolering 2-polig, hylsa	4
0540	9A	85 14 036		AREA, 0,3-0,8 MM2	X	Cable terminal	Kabelsko	5
0550	9A	*85 14 028*		AREA, 0,3-0,8 MM2 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0560	9A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	9A	*71 55 039*		AREA, 1,0-2,5 MM2 NLS	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C14

Contact housing etc
Kontakthus etc
1988

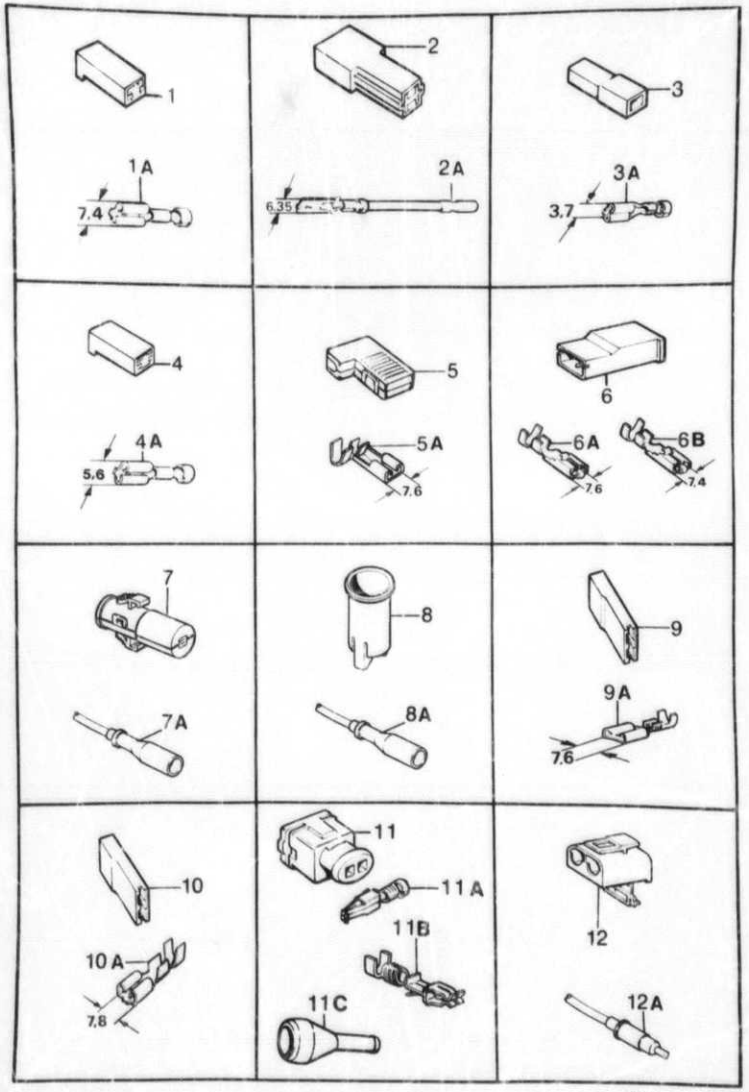

F0751 - 9000

0134	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	10	83 78 630		PEDAL CONTACT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0600								
0610	10A	*85 09 846*		AREA, 0,5-1,4 MM2 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0610								
0620								
0630	11	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, JOINT PIECE, EZK, APC, SENSOR ABS, VENTILATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0640								
0650								
0660								
0670								
0680	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0690	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0690								
0700	11C	85 21 619			X	Protection	Skydd	4
0710								
0720	12	95 03 319		EL. WINDOW REGULATOR, CENTRAL LOCK, STD FAN SOLENOID VALVE APC, WASHER PUMP, LEVEL SWITCH, WASHER MOTOR, FAN MOTOR, FAN AC, OIL LEVEL, JOINT PIECE, SWITCH BACK-UP LIGHT, OUTER TEMP, PRESSURE SWITCH GEAR INDICATOR, FEED PUMP, ACC, LEVEL SWITCH WASHER PUMP, FAN, APC, FOG LIGHT EXTRA, ABS, JOINT PIECE CABLE HARNESS ENGINE, JOINT PIECE ENGINE COMPARTMENT LIGHT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0730								
0740								
0750								
0760								
0770								
0780								
0790								
0800								
0810								
0820								
0830								
0840								
0850								
0860								
0870								
0880								
0890	12A	78 74 506			X	Connection	Skarv	5

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**3-A06**
Cable terminals	**3-E16**

3-C16

Contact housing etc
1988

Kontakthus etc
1988

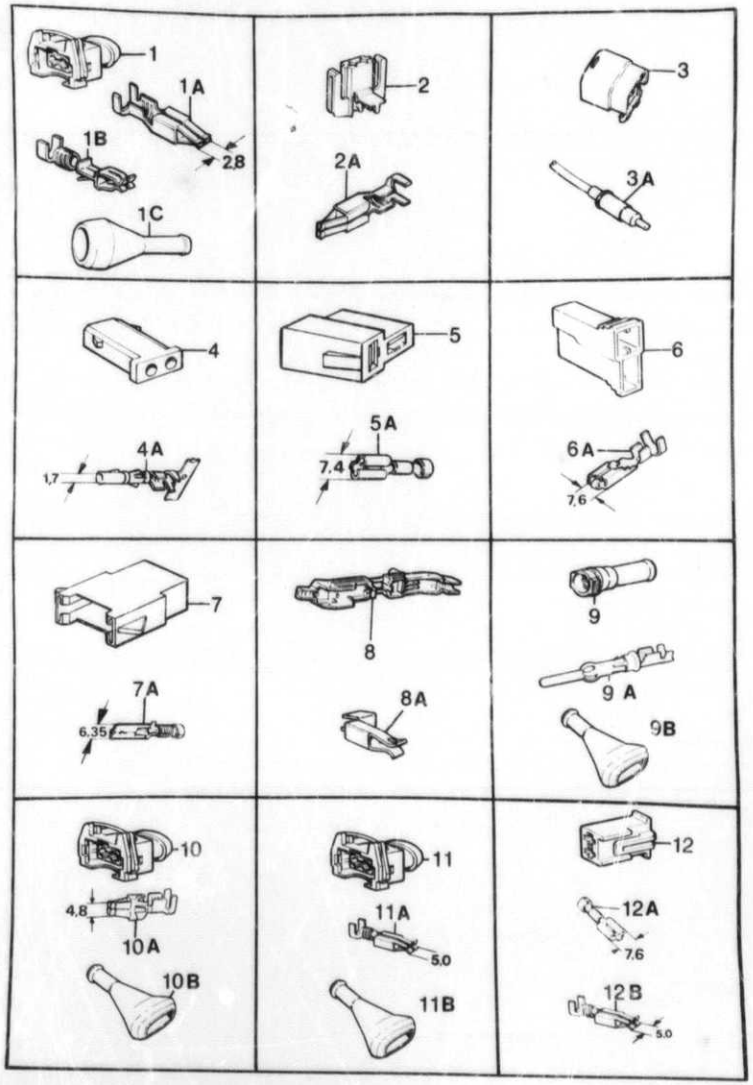

F0752 - 9000

0136	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 93 915		THERMO SWITCH	X	Contact housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0050	1C	85 71 382			X	Protection	Skydd	4
0070	2	91 24 157		LIGHT MIRROR, JOINT PIECE, ACC, MOTOR CENTRAL LOCK COVER FUEL FILLING, SIDE DIRECT INDICATOR, FAN AC, AC, EDU II DCC, SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0140	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0160	3	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, JOINT PIECE CABLE HARNESS ENGINE, WARNING LAMP ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0200	3A	78 74 506			X	Connection	Skarv	5
0220	4	95 06 643		MIXING TEMP ACC	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0240	4A	85 87 552		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0260	5	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0290	5A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0300	5A	*71 55 153*		AREA 0,8-2,1 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0320	6	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0340	6A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0360	7	*95 02 998*		JOINT PIECE, EDU II DCC NLS - USE 4069829	X	Contact housing 2-pole, male	Kontakthus 2-pclig, stift	4
0380	7A	85 93 089		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0390	7A	*71 55 062*		AREA 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0410	8	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0430	8A	95 52 19*			X	Cable terminal	Kabelsko	5
0450	9	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0470	9A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0480	9B	85 79 955			X	Protection	Skydd	4
0500	10	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0520	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0530	10B	85 79 955			X	Protection	Skydd	4
0550	11	85 97 064		IDLE COMPENSATOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0570	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0580	11B	85 71 382			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C18

Contact housing etc 1988

Kontakthus etc 1988

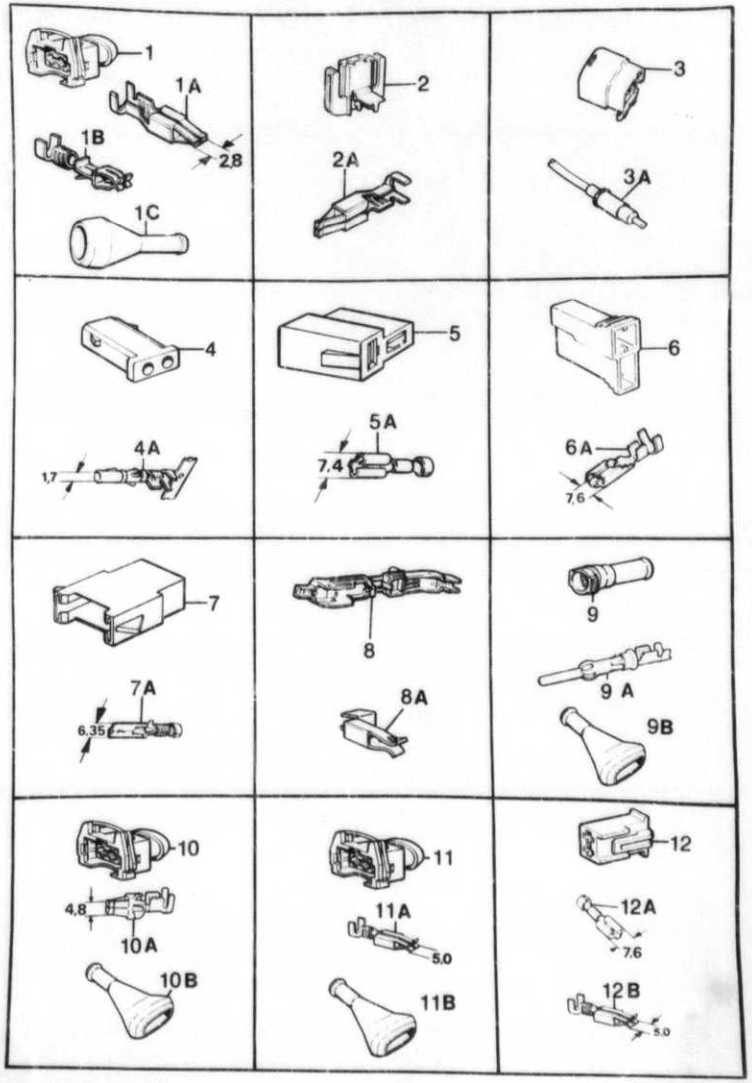

F0752 - 9000

0136	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	12	91 23 548		SIGNAL	X	Contact housing	Kontakthus	4
0610						2-pole, female	2-polig, hylsa	
0620	12A	71 55 716		AREA, 0,4-1,0 MM2	X	Cable terminal	Kabelsko	5
0630	12B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0630								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C20

Contact housing etc
1988

Kontakthus etc
1988

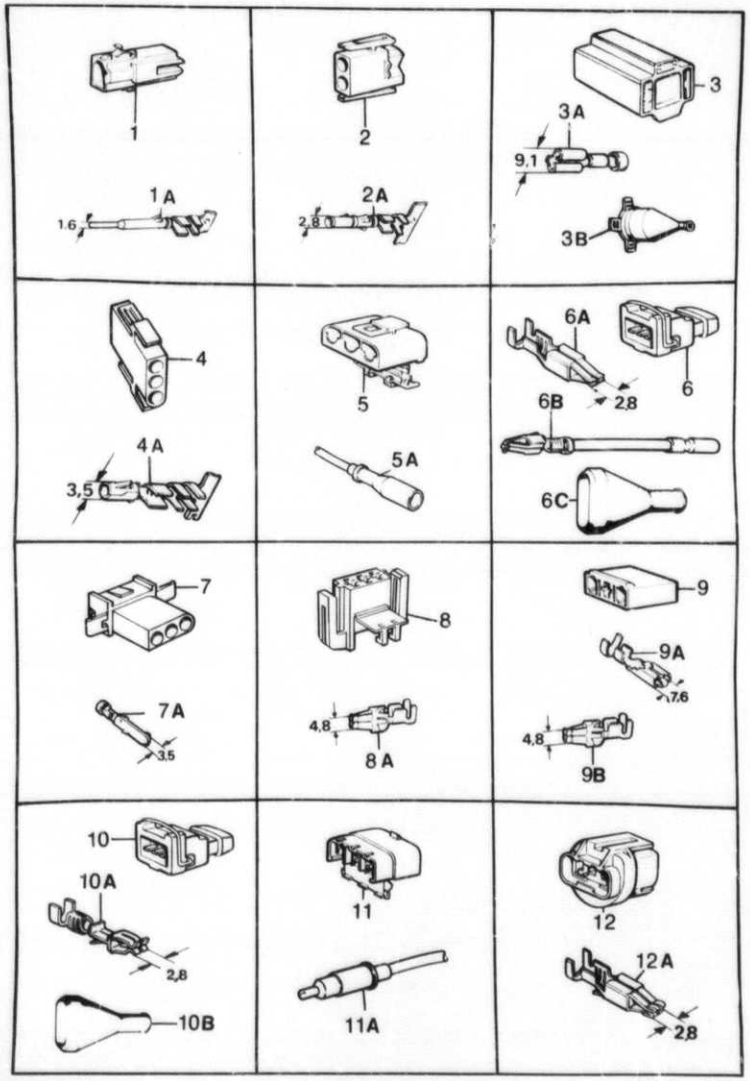

F0753 - 9000

0138	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 25 080		BELT TENSIONER	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0030	1A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0050	2	95 25 809		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0070	2A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0090	3	71 55 021		HEADLIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	5
0110	3A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0120	3B	85 52 721			X	Cable protection	Kabelskydd	4
0140	4	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0160	4A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0180	5	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, JOINT PIECE, CENTRAL LOCK,ABS, SENSOR BELT TENSIONER	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0230	5A	78 74 498			X	Connection	Skarv	5
0250	6	85 93 907		THROTTLE SWITCH, JOINT PIECE, PRESSURE SWITCH, DISTRIBUTOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0280	6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0290	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0300	6B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0310	6C	85 79 955			X	Protection	Skydd	4
0330	7	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0360	7A	*85 44 314*		AREA 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0370	7A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0390	8	91 24 165		JOINT PIECE, FUEL LEVEL TRANSMITTER, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, PRESSURE SWITCH	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0460	8A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0480	9	95 07 658		SWITCH INNER LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0500	9A	91 20 775		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0510	9A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0520	9B	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0540	10	85 93 923		IDLE COMPENSATOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0560	10A	*91 20 668*		AREA 0,75-1,0 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0570	10B	85 79 955			X	Protection	Skydd	4
0590	11	95 03 327		JOINT PIECE, JOINT PIECE CABLE HARNESS ENGINE	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-C22

Contact housing etc
1988

Kontakthus etc
1988

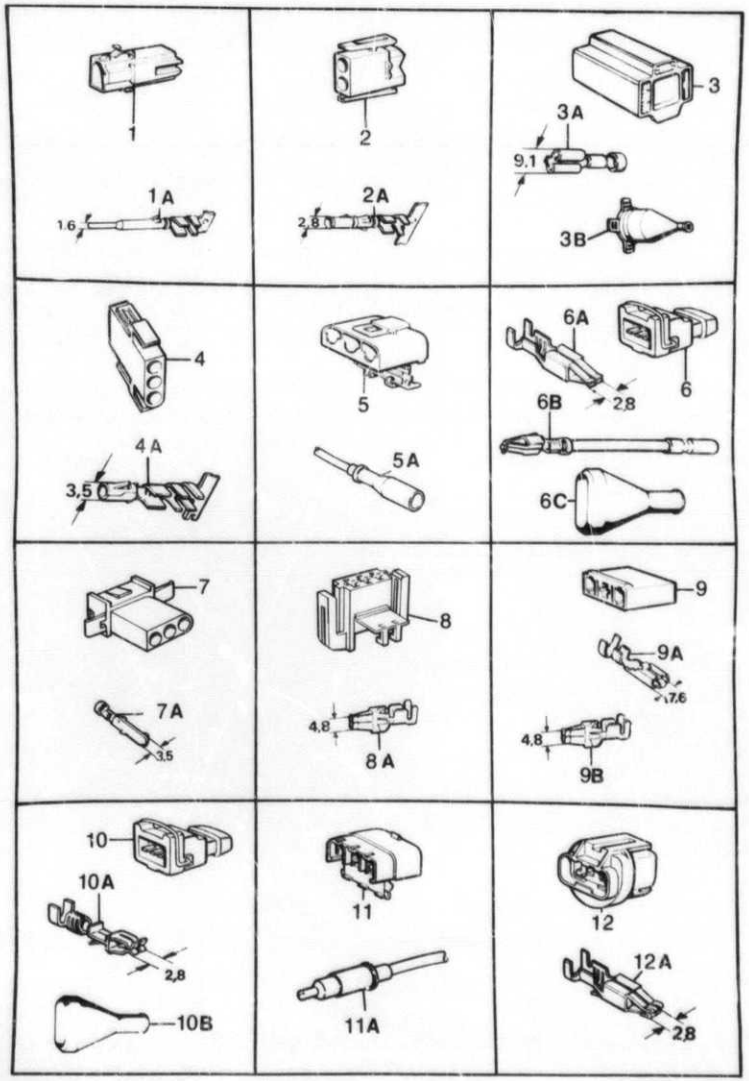

F0753 - 9000

0138	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	11A	78 74 506			X	Connection	Skarv	5
0620								
0630	12	95 14 803		HEADLIGHT US	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0640								
0650	12A	*95 08 748*		AREA, 1,5-2,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0650								

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


3B GROUP INDEX

Connectors	3-A03
Cable terminals	3-E16

3-C24

Contact housing etc
1988

Kontakthus etc
1988

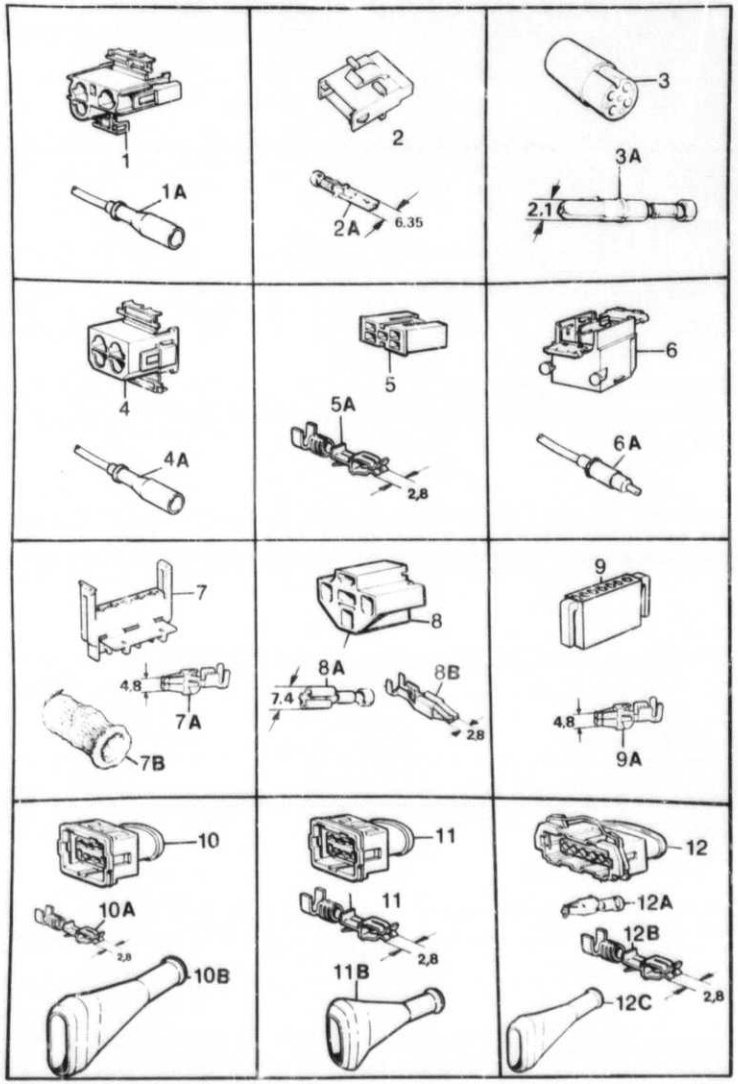

F0754 - 9000

0140	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 19 679		PARKING LIGHT, DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0040	1A	78 74 498			X	Connection	Skarv	5
0060	2	95 03 012		JOINT PIECE	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0080	2A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0120	3A	85 22 583		AREA, 0,5-1,0 MM2 (8503153)	X	Cable terminal	Kabelsko	5
0150	4	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, JOINT PIECE CABLE HARNESS ENGINE, IGNITION CASSETTE, CRANKSHAFT POSITION SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0210	4A	78 74 498			X	Connection	Skarv	5
0230	5	91 23 555		FAN INDOOR TEMP, DIAGNOSTIC UNIT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0250	5A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0260	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0280	6	95 03 442		JOINT PIECE CABLE HARNESS ENGINE, IGNITION CASSETTE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0310	6A	78 74 506			X	Connection	Skarv	5
0330	7	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0350	7A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0360	7B	*95 68 775*		NLS	X	Insulation	Isolering	4
0380	8	85 33 697		RELAY WINDOW REGULATOR, TIME RELAY COOLING FAN, REAR FOG LIGHT EXTRA	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0410	8A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	8A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0430	8A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0440	8B	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0460	9	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0490	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0510	10	95 19 414		SENSOR ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0530	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0540	10B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4
0560	11	95 19 455		LEVEL ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0580	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0590	11B	95 19 430			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
9B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D02

Contact housing etc
1988

Kontakthus etc
1988

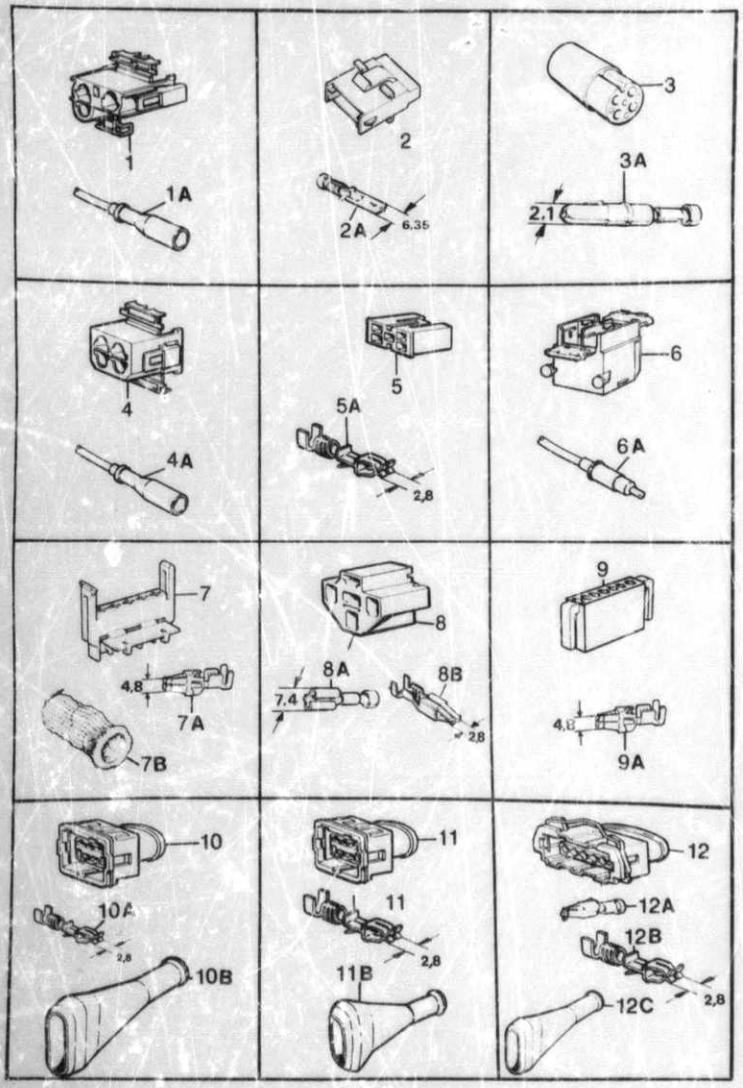

F0754 - 9000

0140	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	12	85 93 931		AIR MESS METER LH	X	Contact housing	Kontakthus	4
0620						6-pole, female	6-polig, hylsa	
0630	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0640	12B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0640								
0650	12C	85 82 082			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D04

Contact housing etc
1988

Kontakthus etc
1988

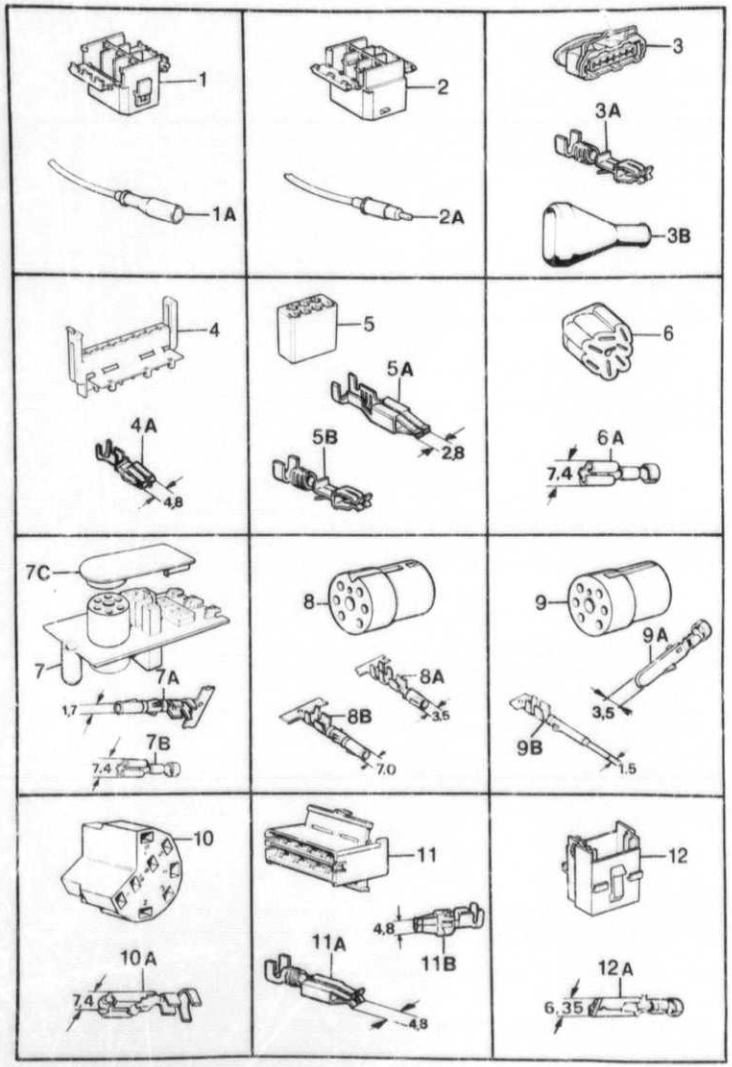

F4089 9000

0142	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 475		JOINT PIECE, JOINT PIECE CABLE HARNESS ENGINE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0030	1A	78 74 498			X	Connection	Skarv	5
0050	2	95 06 668		JOINT PIECE, JOINT PIECE CABLE HARNESS ENGINE	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0070	2A	78 74 506			X	Connection	Skarv	5
0090	3	85 93 949		EZK, POWER STAGE, VALVE,	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0110	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0120	3B	85 74 048			X	Protection	Skydd	4
0140	4	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0180	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0200	5	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0220	5A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230	5B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0250	6	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0270	6A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0290	7	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0310	7A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0320	7A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0330	7B	*85 82 454*		AREA, 0,5-1,05MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0340	7C	95 20 974			X	Cover	Lock	9
0360	8	85 21 700		JOINT PIECE, JOINT PIECE MAIN CABLE HARNESS REAR LH AND RH, JOINT PIECE A-PILLAR RH	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0400	8A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0410	8B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0430	9	85 21 718		JOINT PIECE, JOINT PIECE MAIN CABLE HARNESS A-PILLAR RH, JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0470	9A	*85 44 314*		AREA, 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0480	9B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	10	85 44 363		SWITCH REAR FOGLIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0520	10A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0530	10A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0550	11	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0570	11A	91 20 775		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0580	11B	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D06

Contact housing etc 1988

Kontakthus etc 1988

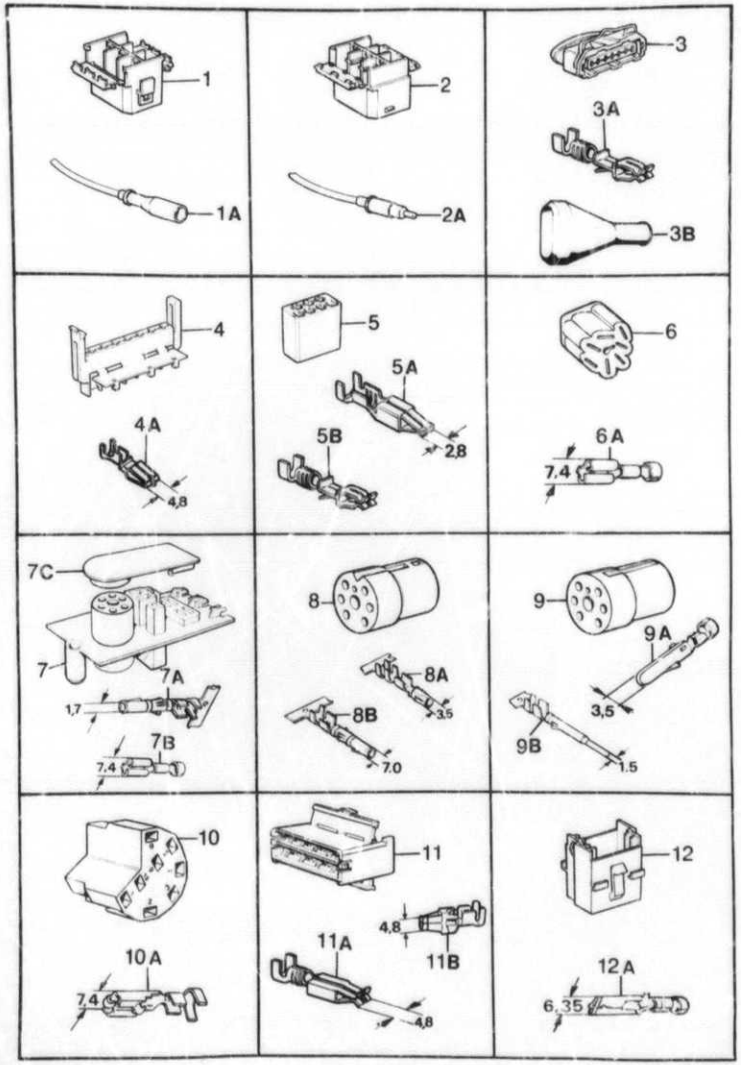

F4089 9000

0142	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590								
0600	12	91 24 181		JOINT PIECE, EL-HEATED	X	Contact housing	Kontakthus	4
0610				SEAT, EDU II, JOINT		8-pole, male	8-polig, stift	
0620				PIECE CABLE HARNESS ROOF				
0630	12A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0640	12A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D08

Contact housing etc
1988

Kontakthus etc
1988

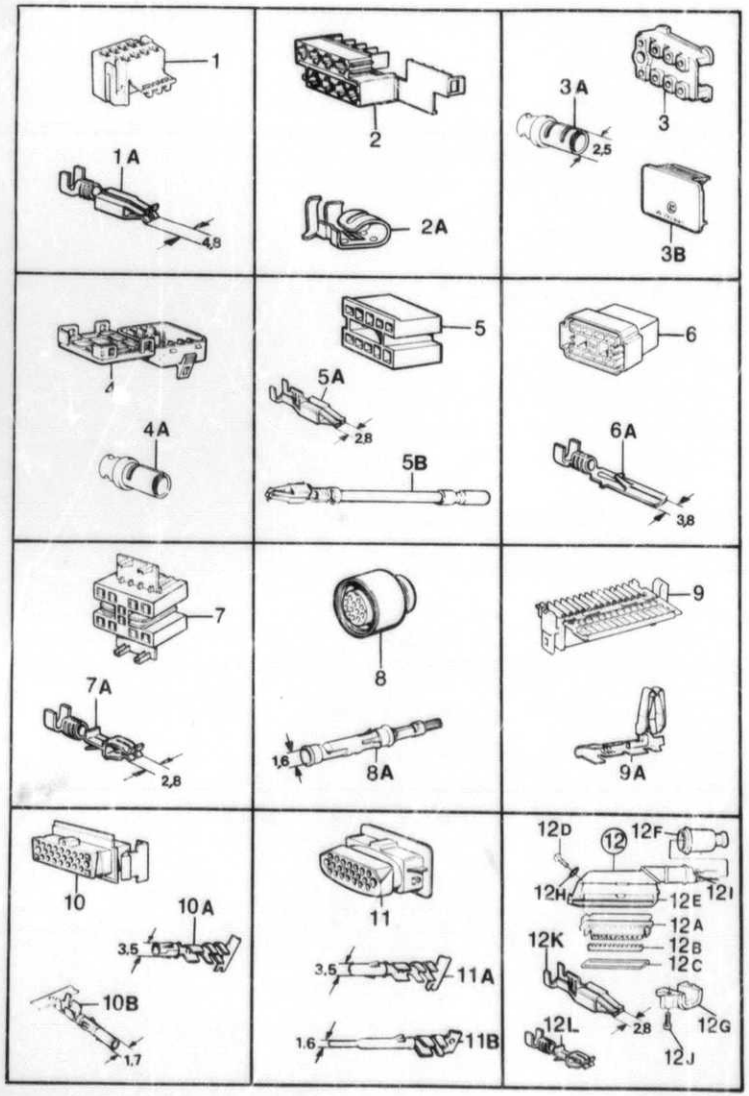

F0756 - 9000

0144	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 090		JOINT PIECE, SWITCH REAR DEMIST, SWITCH SUN ROOF, REGULATOR, SWITCH SUN CENTRAL LOCK, TOW HOOK, ACC, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, SWITCH FAN, DCC, EDU I, ALARM, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0100	1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0120	2	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0140	2A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0160	3	95 52 159		ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0180	3A	95 52 175			X	Cable terminal	Kabelsko	5
0190	3B	95 52 167			X	Cover	Lock	4
0210	4	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0230	4A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0250	5	85 44 371		LEVEL CONTROL	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0270	5A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0280	5B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0300	6	91 22 557		RADIO, JOINT PIECE MAIN CABLE HARNESS SAAB DI	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0320	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0340	7	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, RADIO, REOSTAT, FOG LIGHT EXTRA, REOSTAT EL-PAD, HEADLIGHT LEVELING, SAAB DI	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0400	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0420	8	95 29 538		BELT TENSIONER	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	4
0440	8A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0460	9	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0480	9A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0500	10	95 25 106		JOINT PIECE	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0520	10A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0540	10B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0550	11	95 25 114		JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0570	11A	*85 44 314*		AREA, 2,0-4,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0580	11B	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0600	12	85 79 930		ELECTRONIC UNIT LH	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0620	12A	85 87 420			1	Contact housing	Kontakthus	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D10

Contact housing etc
1988

Kontakthus etc
1988

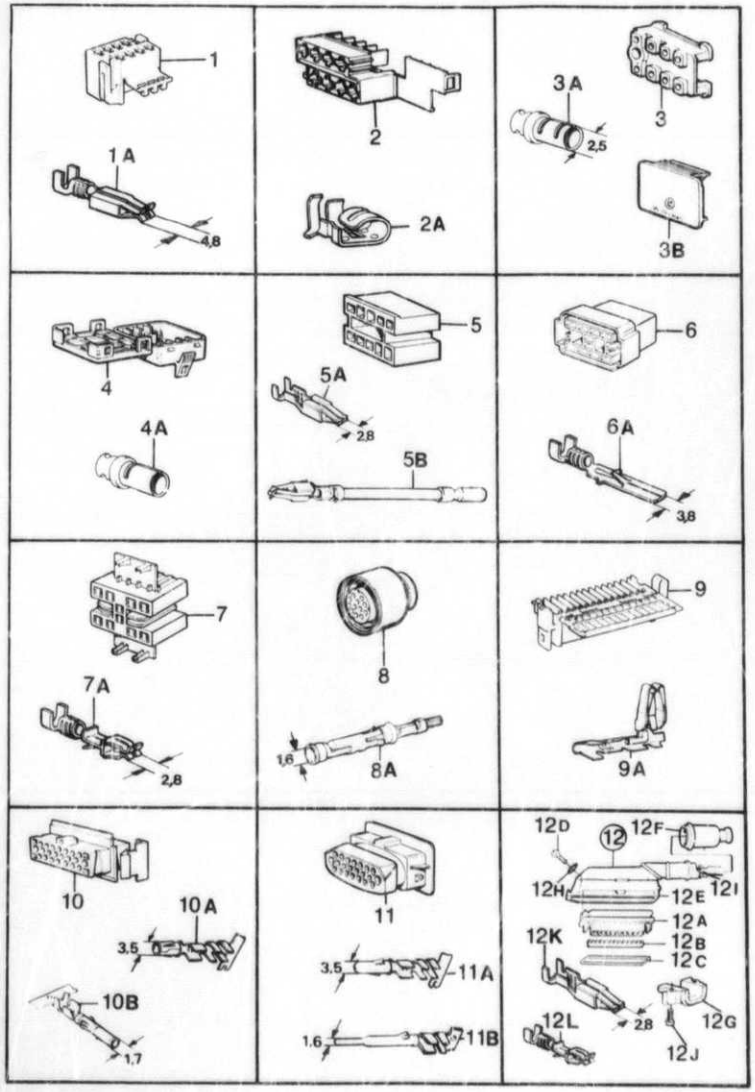

F0756 - 9000

0144	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	12B	85 87 438			1	.Striker plate	.Låsbleck	5
0640	12C	85 87 453			1	.Seal	.Tätning	5
0650	12D	85 87 487			1	.Screw	.Skruv	5
0660	12E	85 87 412			1	.Cover	.Kåpa	4
0670	12F	85 87 446			1	.Bushing	.Bussning	6
0680	12G	85 87 495			1	.Bracket	.Hållare	4
0690	12H	85 87 461			1	.Seal	.Tätning	5
0700	12I	79 71 872		(8558256)	1	.Tensioning band	.Spännband	5
0710	12J	79 71 351			2	.Screw	.Skruv	5
0720	12K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0730	12L	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0730								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D12

Contact housing etc
1988

Kontakthus etc
1988

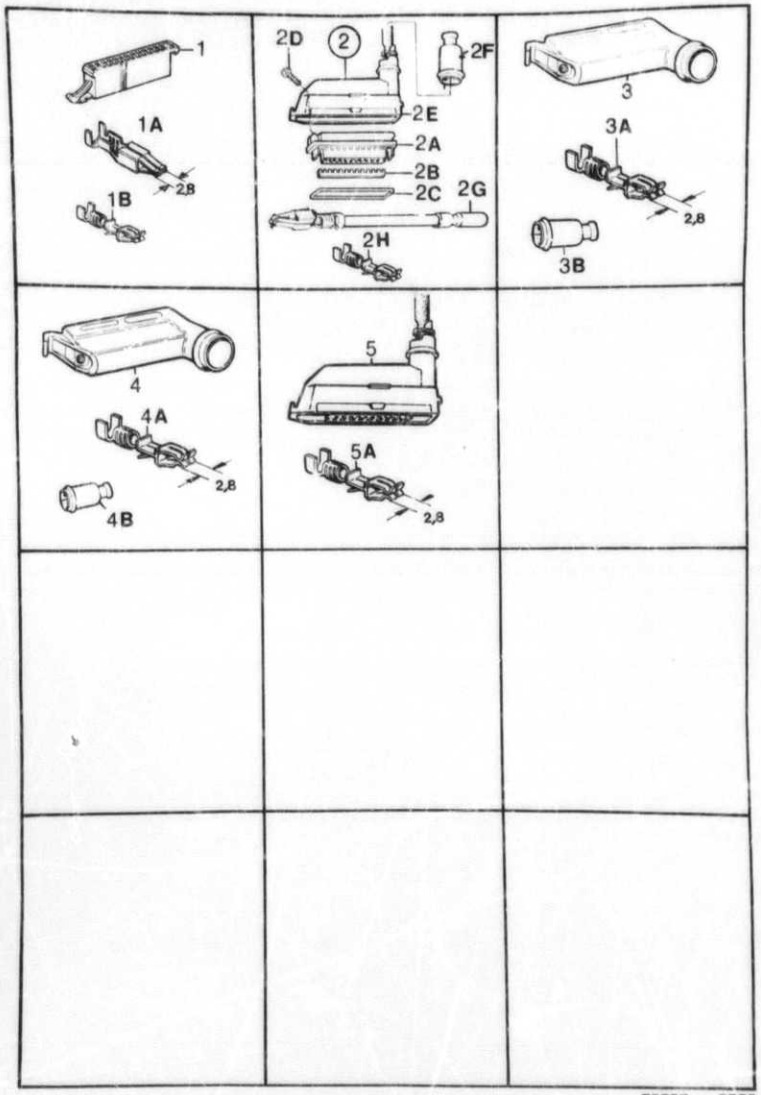

F0757 - 9000

0140	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 06 650		ELECTRONIC UNIT ACC	X	Contact housing 25-pole, male	Kontakthus 25-polig, stift	4
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0060	2	85 86 802		EZK, APC	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0080	2A	85 87 420			1	.Contact housing	.Kontakthus	4
0090	2B	85 87 438			1	.Striker plate	.Låsbleck	5
0100	2C	85 87 453			1	.Seal	.Tätning	5
0110	2D	85 87 487			1	.Screw	.Skruv	5
0120	2E	85 87 503			1	.Cover	.Kåpa	4
0130	2F	85 87 511			1	.Rubber protection	.Gummiskydd	4
0140	2G	85 22 617		AREA, 1,0-2,8 MM2	X	Cable terminal	Kabelsko	5
0150	2H	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0170	3	95 64 071		ELECTRONIC UNIT SAAB DI	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0190	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0200	3B	85 87 511			X	Rubber protection	Gummiskydd	4
0220	4	95 64 089		APC, EZ100K	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0240	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0250	4B	85 87 511			X	Rubber protection	Gummiskydd	4
0270	5	95 29 496		ELECTRONIC UNIT ABS	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0290	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D14

Contact housing etc
1989

Kontakthus etc
1989

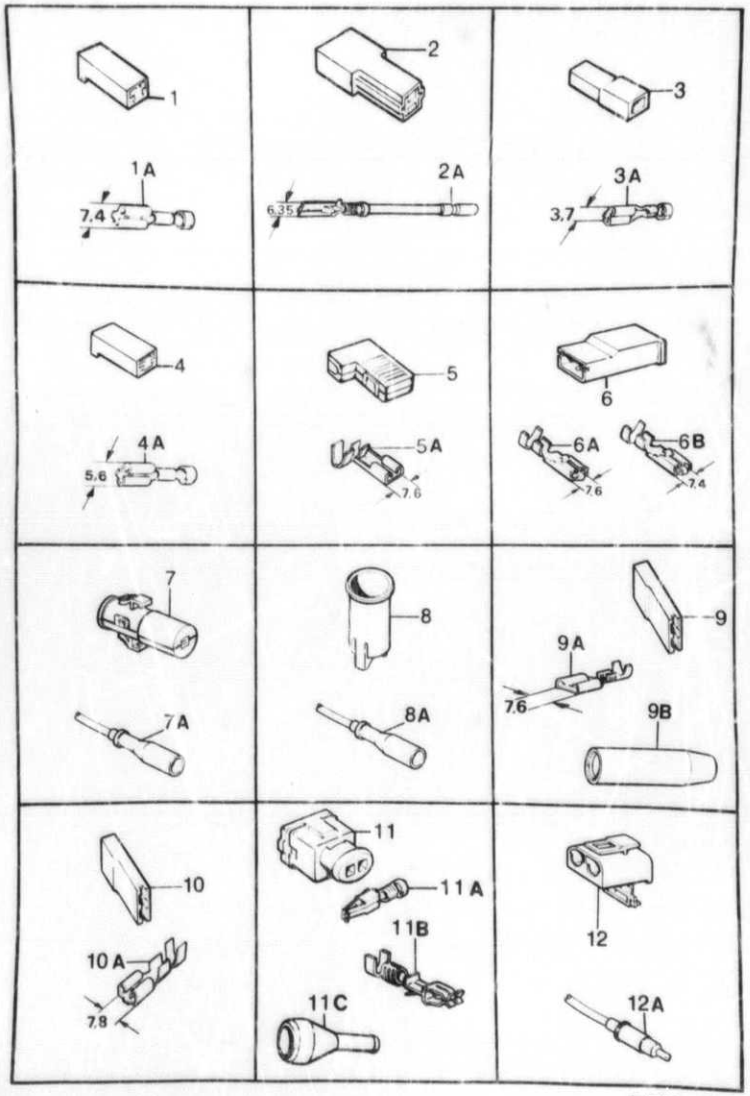

F0758 - 9000

0148	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT	X	Contact housing	Kontakthus	4
0020				GEAR INDICATOR, JOINT		1-pole, female	1-polig, hylsa	
0030				PIECE TRUNK LID, MAKE-				
0040				UP MIRROR, JOINT PIECE				
0050				BRAKE LIGHT,				
0060	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0070	1A	*71 55 153*		AREA, 0,8-2,1 MM2 NLS -	X	Cable terminal	Kabelsko	5
0070				USE 8522534				
0080								
0090	2	71 55 120		EL-MIRROR, EL-CENTRAL,	X	Contact housing	Kontakthus	4
0100				SPEED CONTROL		1-pole, male	1-polig, stift	
0110	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	3	85 30 115		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0140						1-pole, male	1-polig, stift	
0150	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0160								
0170	4	85 33 184		LOUDSPEAKER, PRESSURE	X	Contact housing	Kontakthus	4
0180				SENSOR APC		1-pole, male	1-polig, stift	
0190	4A	*85 33 028*		AREA, 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	3
0190				USE 8582439				
0200								
0210	5	85 21 692		IGNITION COIL, SWITCH	X	Contact housing	Kontakthus	4
0220				BRAKE LIGHT, PRESSURE		1-pole, female	1-polig, hylsa	
0230				SWITCH, SWITCH ENGINE				
0240				COMPARTMENT LIGHT, JOINT				
0250				PIECE TRUNK LID				
0260	5A	*85 21 676*		AREA, 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0260				USE 8522526				
0270	5A	85 22 526		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0280				(8582421)				
0290	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0290				USE 8522526				
0300								
0310	6	85 41 229		SPOTLIGHT, SAFETY BELT	X	Sleeve	Isoleringshylsa	5
0320				WARNING, SWITCH SPOT-		1-pole, male	1-polig, stift	
0330				LIGHT, JOINT PIECE,				
0340				LIGHT GLOVE BOX, LIGHT				
0350				CONTROL, SPEED CONTROL				
0360	6A	*85 41 203*		AREA, 0,5-1,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0360				USE 8560476				
0370	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0380								
0390	7	95 03 418		COMPRESSOR, JOINT PIECE,	X	Connector housing	Skarvhus	4
0400				LAMBDA SOND, FUEL PUMP		1-pole, female	1-polig, hylsa	
0410	7A	78 74 498			X	Connection	Skarv	5
0420								
0430	8	95 03 426		JOINT PIECE, IGNITION	X	Connector housing	Skarvhus	4
0440				SYSTEM, EZK, LAMBDA		1-pole, male	1-polig, stift	
0450	8A	78 74 506			X	Connection	Skarv	5
0460								
0470	9	85 16 916		SPEED CONTROL, THERMO	X	Insulation	Isolering	4
0480				CONTACT, APC PRESSURE		2-pole, female	2-polig, hylsa	
0490				SENSOR, ELECTRONIC UNIT				
0500				ACC, LIGHT ASH TRAY,				
0510				SWITCH DOOR FAN, SWITCH				
0520				HORN, LIGHT LUGGAGE COM-				
0530				PARTMENT, DOOR SWITCH				
0540				INTERIOR LIGHT, THEFT				
0550				ALARM, SWITCH HAND BRAKE				
0560	9A	85 14 036		AREA, 0,3-0,8 MM2	X	Cable terminal	Kabelsko	5
0570	9A	*85 14 028*		AREA, 0,3-0,8 MM2 NLS -	X	Cable terminal	Kabelsko	5
0570				USE 7155716				
0580	9A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0590	9B	95 69 997			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D16

Contact housing etc
1989

Kontakthus etc
1989

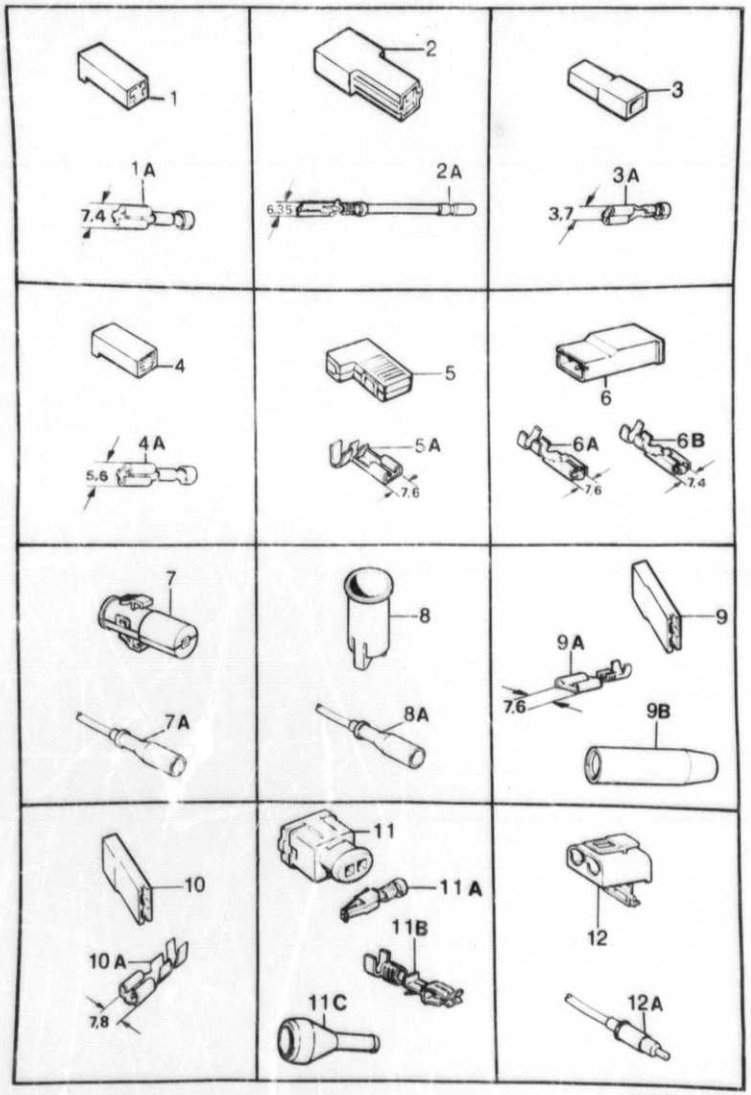

F0758 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
10	83 78 630		PEDAL CONTACT	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
10A	*85 09 846*		AREA, 0,5-1,4 MM2 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
11	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, SENSOR ABS, FUEL SYSTEM, PREHEATING LAMBDA, VENTILATION, COLD START VALVE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
11C	85 21 619			X	Protection	Skydd	4
12	95 03 319		EL. WINDOW REGULATOR, CENTRAL LOCK, STD FAN SOLENOID VALVE APC, WASHER PUMP, LEVEL SWITCH, WASHER MOTOR, FAN MOTOR, FAN AC, JOINT PIECE, OUTER TEMP, FEED PUMP, LEVEL SWITCH WASHER PUMP, FAN, FOG LIGHT EXTRA, ABS, JOINT PIECE CABLE HARNESS ENGINE, JOINT PIECE ENGINE COMPARTMENT LIGHT HORN, SWITCH BRAKE LIGHT JOINT PIECE MAIN CABLE HARNESS, BY-PASS, APC DISSANGAGEMENT, EJECTOR PUMP, THEFT ALARM, JOINT PIECE TRUNK LID,	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
12A	78 74 506			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D18

Contact housing etc
1989

Kontakthus etc
1989

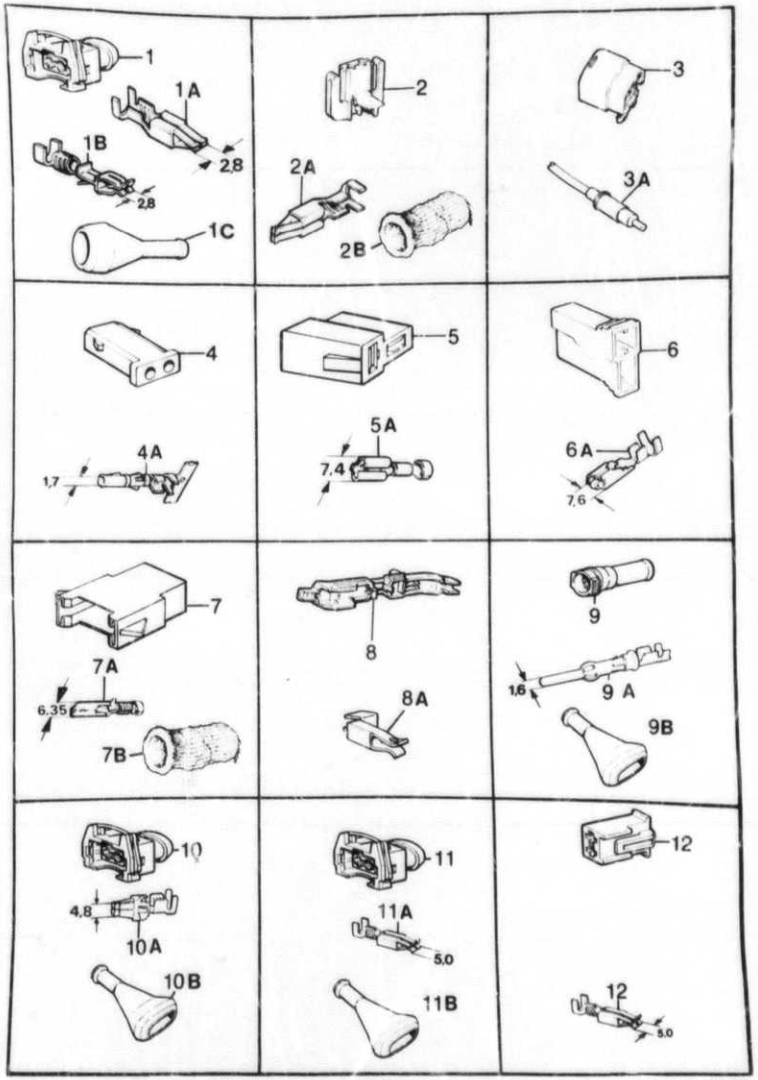

F0759 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 93 915		THERMO SWITCH	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1C	85 71 382			X	Protection	Skydd	4
2	91 24 157		LIGHT MIRROR, ACC, MOTOR CENTRAL LOCK COVER FUEL FILLING, SIDE DIRECT INDICATOR, FAN AC, EDU II DCC, SPEED CONTROL, DOOR FAN, MOTOR ANTENNA, LIGHT CONTROL, BELT TENSIONER, JOINT PIECE GEAR INDICATOR,	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
2B	*95 68 775*		NLS	X	Insulation	Isolering	4
3	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, WARNING LAMP ABS, OIL LEVEL, GEAR INDICATOR	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
3A	78 74 506			X	Connection	Skarv	5
4	95 06 643		MIXING TEMP ACC	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
4A	85 87 552		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
5A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
5A	*71 55 153*		AREA 0,8-2,1 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
6	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
6A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
7	*95 02 998*		EDU II DCC, JOINT PIECE GEAR INDICATOR, SWITCH DOORS NLS - USE 4069829	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
7A	85 93 089		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
7A	*71 55 062*		AREA 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
7B	*95 68 775*		NLS	X	Insulation	Isolering	4
8	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
8A	95 52 191			X	Cable terminal	Kabelsko	5
9	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
9A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
9B	85 79 955			X	Protection	Skydd	4
10	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
10B	85 79 955			X	Protection	Skydd	4

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D20

Contact housing etc 1989

Kontakthus etc 1989

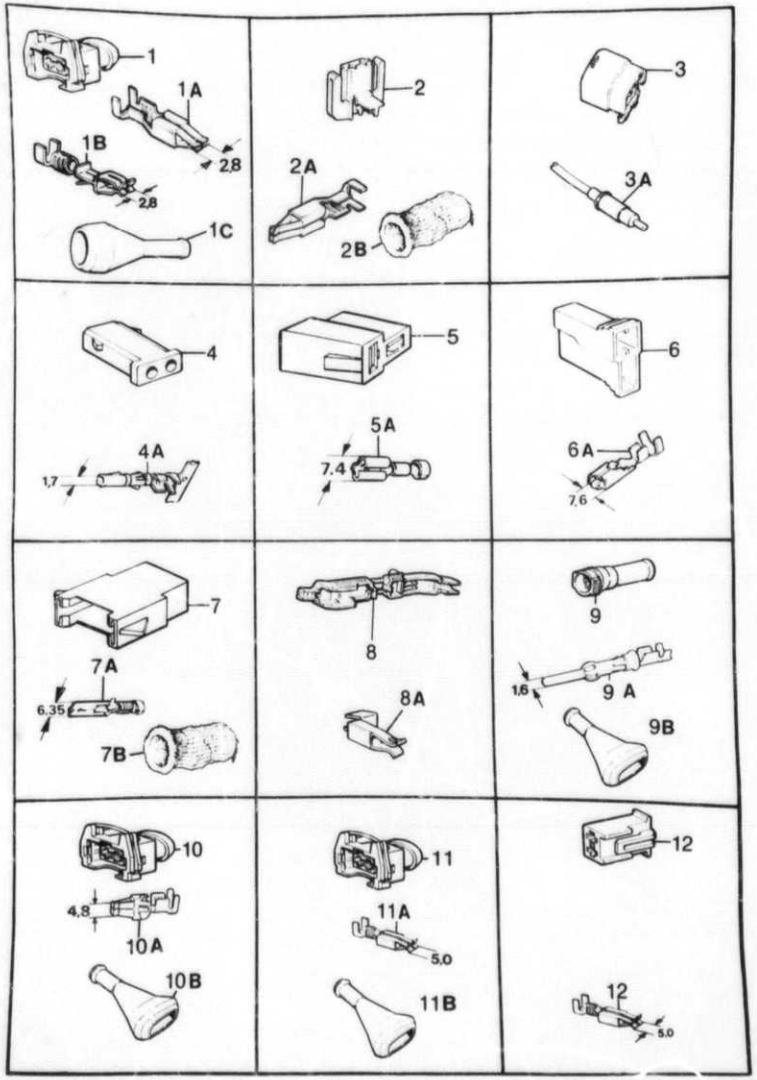

F0759 - 5700

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0150								
0600	11	85 97 064		IDLE COMPENSATOR	X	Contact housing	Kontakthus	4
0610						2-pole, female	2-polig, hylsa	
0620	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0630	11B	85 71 382			X	Protection	Skydd	4
0650	12	91 23 548		SIGNAL, HIGH MOUNTED STOP LIGHT, CONTROL LAMP LIGHT, THEFT ALARM, JOINT PIECE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0690	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**3-A06**
Cable terminals	**3-E16**

3-D22

Contact housing etc
1989

Kontakthus etc
1989

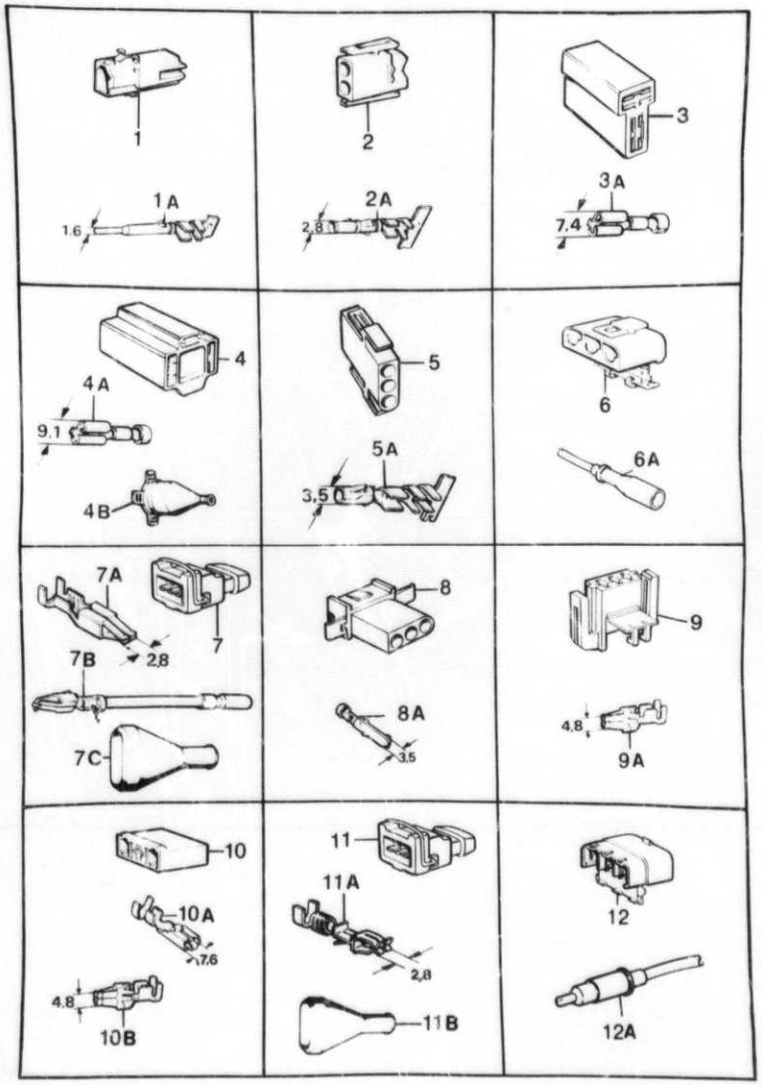

F0760 - 9000

0152	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 25 080		INFLATOR AIR-BAG	X	Contact housing	Kontakthus	4
0020						2-pole, male	2-polig, stift	
0030	1A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	95 25 809		INFLATOR AIR-BAG	X	Contact housing	Kontakthus	4
0060						2-pole, female	2-polig, hylsa	
0070	2A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing	Skarvhus	4
0100						2-pole, female	2-polig, hylsa	
0110	3A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	4	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0140						3-pole, female	3-polig, hylsa	
0150	4A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0160	4B	85 52 721			X	Cable protection	Kabelskydd	4
0170								
0180	5	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing	Kontakthus	4
0190						3-pole, female	3-polig, hylsa	
0200	5A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0200								
0210								
0220	6	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, JOINT PIECE, ABS, HEADLIGHT LEVELING, FAN, SENSOR ABS, BY-PASS, THEFT ALARM DOOR	X	Contact housing	Kontakthus	4
0230						3-pole, female	3-polig, hylsa	
0240								
0250								
0260								
0270								
0280								
0290	6A	78 74 498			X	Connection	Skarv	5
0300								
0310	7	85 93 907		THROTTLE SWITCH, JOINT PIECE DI/APC, PRESSURE SWITCH, DISTRIBUTOR, SOLENOID VALVE APC	X	Contact housing	Kontakthus	4
0320						3-pole, female	3-polig, hylsa	
0330								
0340								
0350	7A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0360	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0360								
0370	7B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0380	7C	85 79 955			X	Protection	Skydd	4
0390								
0400	8	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing	Kontakthus	5
0410						3-pole, male	3-polig, stift	
0420								
0430								
0440	8A	*85 44 314*		AREA 0,5-2,0 MM2 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
0440								
0450	8A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0460								
0470	9	91 24 165		JOINT PIECE, FUEL LEVEL TRANSMITTER, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT	X	Contact housing	Kontakthus	4
0480						3-pole, female	3-polig, hylsa	
0490								
0500								
0510								
0520								
0530								
0540	9A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	10	95 07 658		SWITCH INNER LIGHT	X	Contact housing	Kontakthus	4
0570						3-pole, female	3-polig, hylsa	
0580	10A	91 20 775		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0590	10A	*85 41 203*		AREA 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0590								
0600	10B	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0610								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-D24

Contact housing etc 1989

Kontakthus etc 1989

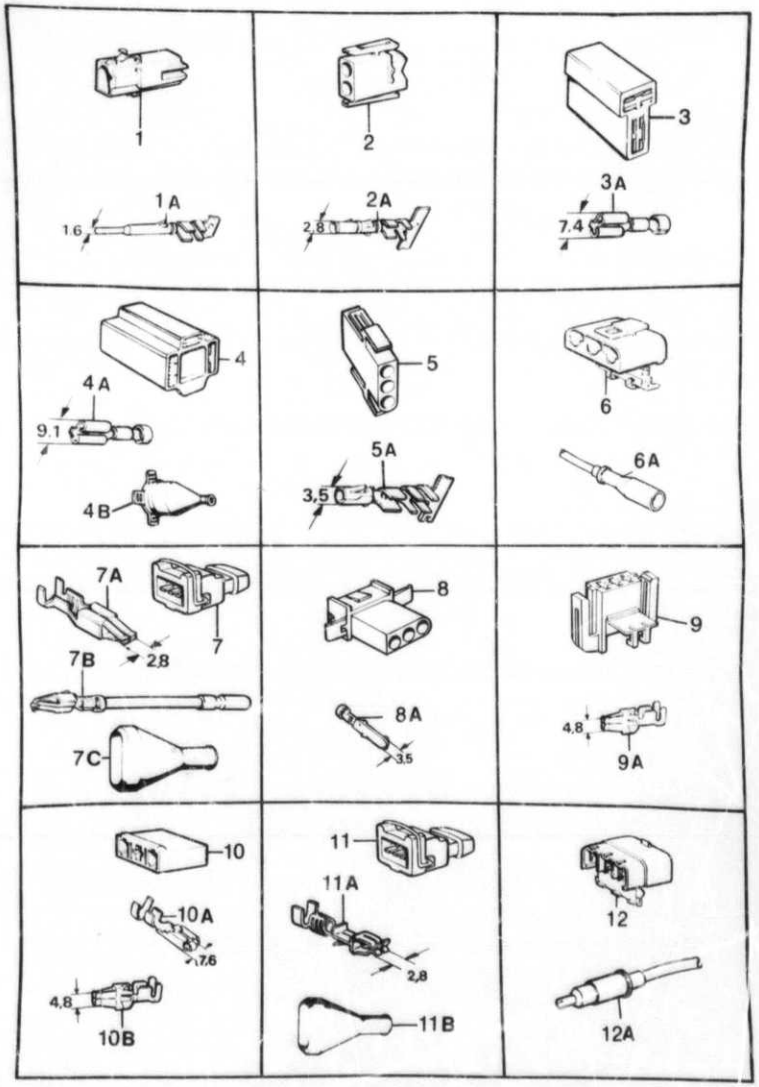

F0760 - 9000


0152	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	11	85 93 923		IDLE COMPENSATOR	X	Contact housing	Kontakthus	4
0630						3-pole, female	3-polig, hylsa	
0640	11A	*91 20 668*		AREA 0,75-1,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0540				USE 9120957				
0650	11B	85 79 955			X	Protection	Skydd	4
0660								
0670	12	95 03 327		JOINT PIECE, JOINT PIECE	X	Contact housing	Kontakthus	4
0680				CABLE HARNESS ENGINE,		3-pole, female	3-polig, hylsa	
0690				JOINT PIECE MAIN CABLE				
0700				HARNESS/ABS				
0710	12A	78 74 506			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

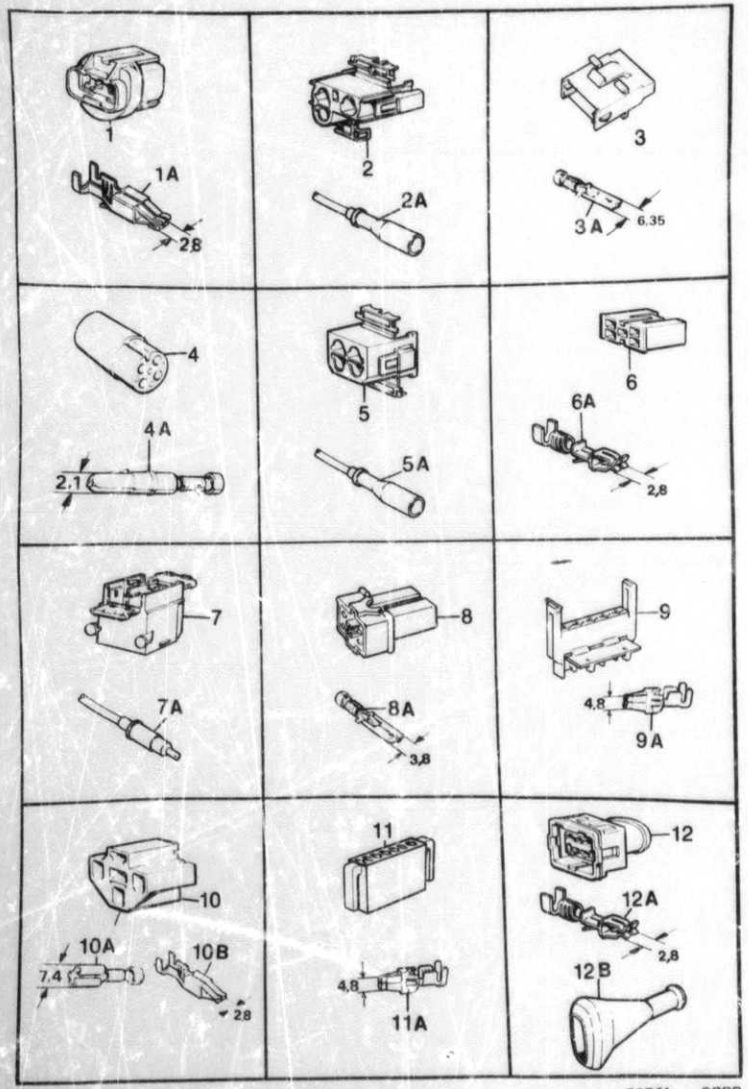

F0761 - 9000

Wiring and fuses

3-E02

Contact housing etc

1989

Ledningar och säkringar

Kontakthus etc

1989


0154	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 14 803		HEADLIGHT US	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0020								
0030	1A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0040								
0050	2	95 19 679		DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0060								
0070	2A	78 74 498			X	Connection	Skarv	5
0080								
0090	3	95 03 012		JOINT PIECE SAAB DI/AP EL-ADJUSTED CHAIR	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0100								
0110	3A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0120	3A	*71 55 062*		AREA, 0,8-2,5 MM2 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0120								
0130								
0140	4	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0150								
0160	4A	85 23 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0170								
0180	5	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, JOINT PIECE CABLE HARNESS ENGINE, IGNITION CASSETTE, CRANKSHAFT POSITION SENSOR, JOINT PIECE MAIN CABLE HARNESS THERMOSTAT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0190								
0200								
0210								
0220								
0230								
0240								
0250								
0260	5A	78 74 498			X	Connection	Skarv	5
0270								
0280	6	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0290								
0300								
0310	6A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0310								
0320	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0320								
0330								
0340	7	95 03 442		JOINT PIECE CABLE HARNESS ENGINE, IGNITION CASSETTE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0350								
0360								
0370	7A	78 74 506			X	Connection	Skarv	5
0380								
0390	8	95 18 739		JOINT PIECE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0400								
0410	8A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0420								
0430	9	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0440								
0450	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0460								
0470	10	85 33 697		RELAY WINDOW REGULATOR,	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0480								
0490	10A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	10A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0500								
0510	10A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0520	10B	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0530								
0540	11	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0550								
0560								
0570	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0580								
0590	12	95 19 414		SENSOR ABS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0600								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

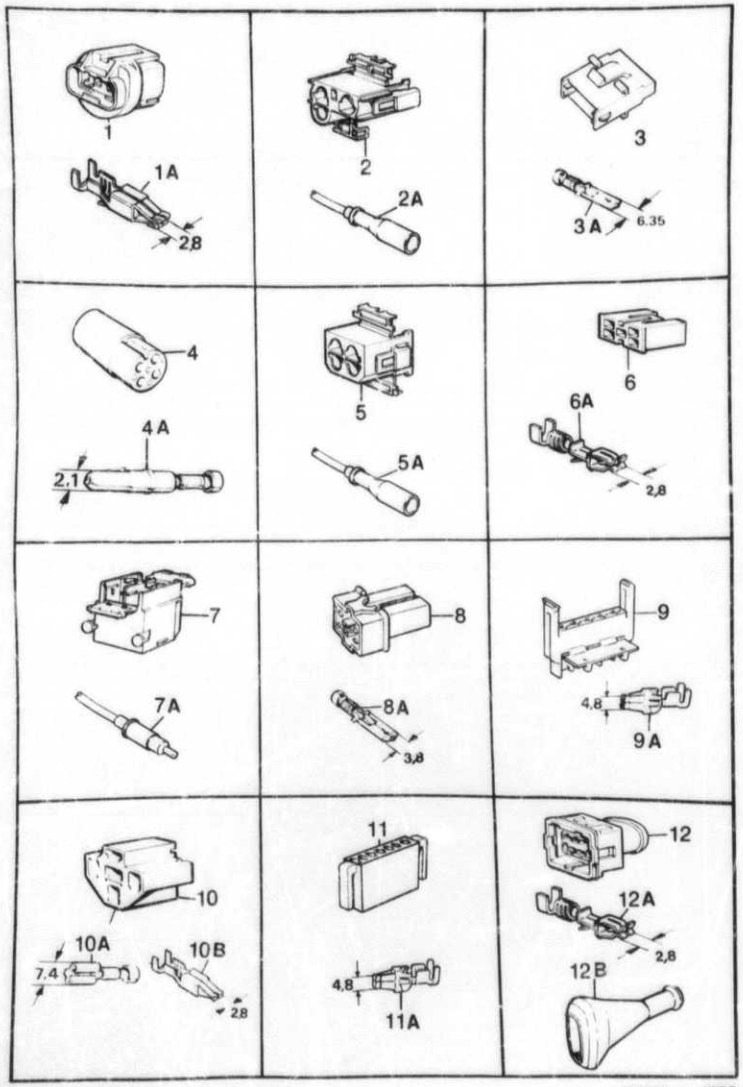

F0761 - 9000

Wiring and fuses

3-E04

Contact housing etc

1989

Ledningar och säkringar

Kontakthus etc

1989

0154	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0610				USE 9120957				
0620	12B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E06

Contact housing etc
1989

Kontakthus etc
1989

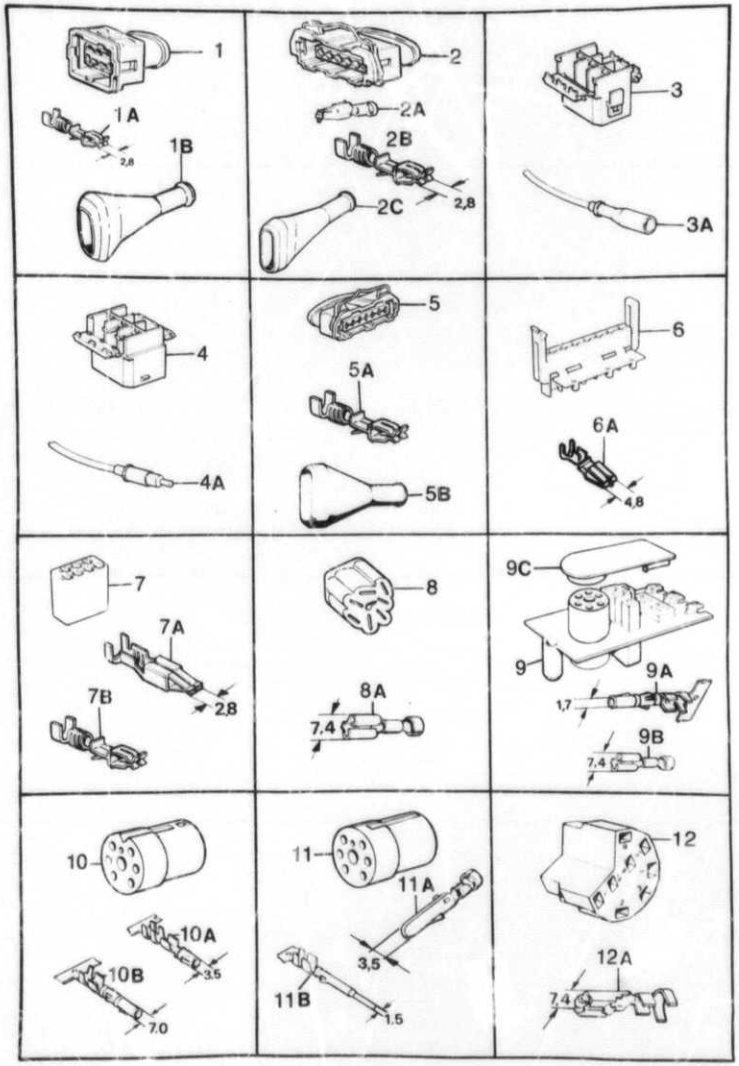

F4090 9000

0156	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 19 455		LEVEL ABS	X	Contact housing	Kontakthus	4
0020						5-pole, female	5-polig, hylsa	
0030	1A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0030				USE 9120957				
0040	1B	95 19 430			X	Protection	Skydd	4
0050								
0060	2	85 93 931		AIR MESS METER LH	X	Contact housing	Kontakthus	4
0070						6-pole, female	6-polig, hylsa	
0080	2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0090	2B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0090				USE 9120957				
0100	2C	85 82 082			X	Protection	Skydd	4
0110								
0120	3	95 03 475		JOINT PIECE, JOINT PIECE	X	Contact housing	Kontakthus	4
0130				CABLE HARNESS ENGINE		6-pole, female	6-polig, hylsa	
0140	3A	78 74 498			X	Connection	Skarv	5
0150								
0160	4	95 06 668		JOINT PIECE, JOINT PIECE	X	Contact housing	Kontakthus	4
0170				CABLE HARNESS ENGINE		6-pole, male	6-polig, stift	
0180	4A	78 74 506			X	Connection	Skarv	5
0190								
0200	5	85 93 949		POWER STAGE, VALVE,	X	Contact housing	Kontakthus	4
0210				OUTPOT STAGE, VALVE ABS,		7-pole, female	7-polig, hylsa	
0220	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0220				USE 9120957				
0230	5B	85 74 048			X	Protection	Skydd	4
0240								
0250	6	91 22 797		THEFT ALARM, SWITCH	X	Contact housing	Kontakthus	4
0260				DIRECTION INDICATOR,		7-pole, female	7-polig, hylsa	
0270				SWITCH SPEED CONTROL,				
0280				TAIL LIGHT, SWITCH				
0290				FLASHER				
0300	6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0310								
0320	7	91 23 36 .		SWITCH ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0330						7-pole, female	7-polig, hylsa	
0340	7A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0350	7B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0350				USE 9120957				
0360								
0370	8	95 03 251		HEATING FAN	X	Contact housing	Kontakthus	5
0380						7-pole, female	7-polig, hylsa	
0390	8A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0390				USE 8522534				
0400								
0410	9	95 12 591		TEST CONNECTOR	X	Contact	Kontakt	4
0420						7-pole, female	7-polig, hylsa	
0430	9A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0440	9A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450	9B	*85 82 454*		AREA, 0,5-1,05MM2 NLS -	X	Cable terminal	Kabelsko	5
0450				USE 8522534				
0460	9C	95 20 974			X	Cover	Lock	9
0470								
0480	10	85 21 700		JOINT PIECE, JOINT PIECE	X	Contact	Kontakt	4
0490				REAR DOOR		7-pole, female	7-polig, hylsa	
0500	10A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0500				USE 8582595				
0510	10B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0520								
0530	11	85 21 718		JOINT PIECE, JOINT PIECE	X	Contact housing	Kontakthus	4
0540				CABLE HARNESS DOORS		7-pole, male	7-polig, stift	
0550	11A	*85 44 314*		AREA, 0,5-2,0 MM2 NLS -	X	Cable terminal	Kabelsko	5
0550				USE 8582603				
0560	11B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E08

Contact housing etc
1989

Kontakthus etc
1989

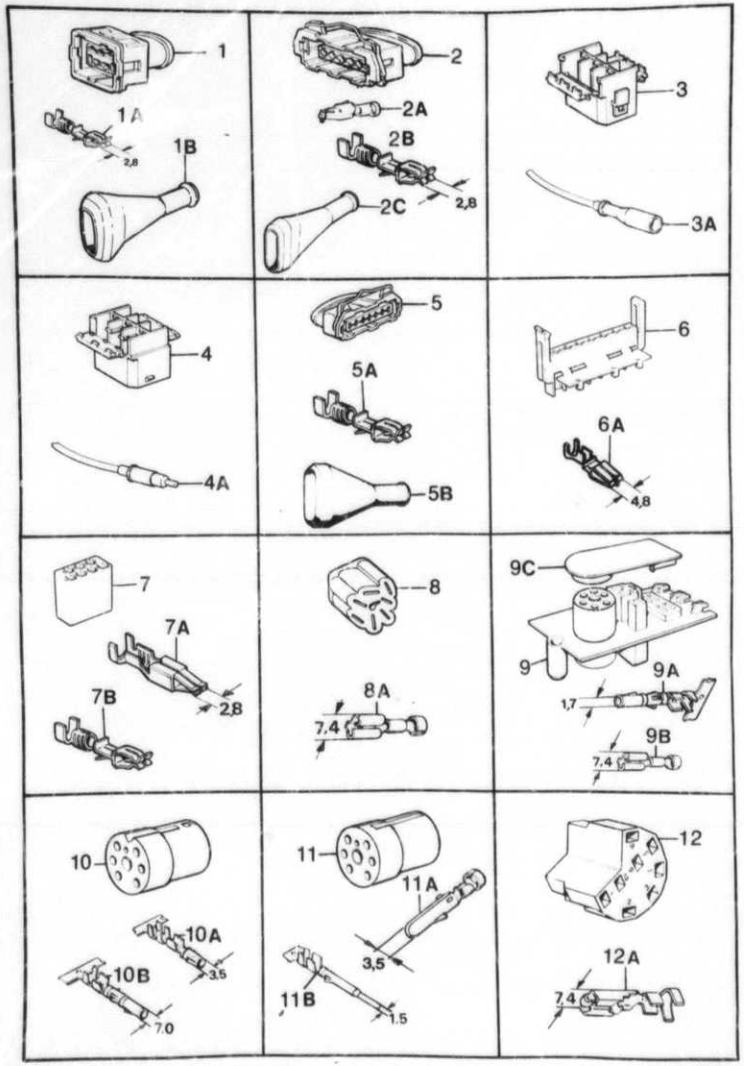

F4090 9000

0156	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	12	85 44 363		SWITCH REAR FOGLIGHT	X	Contact housing	Kontakthus	4
0590						8-pole, female	8-polig, hylsa	
0600	12A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0600								
0610	12A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E10

Contact housing etc
1989

Kontakthus etc
1989

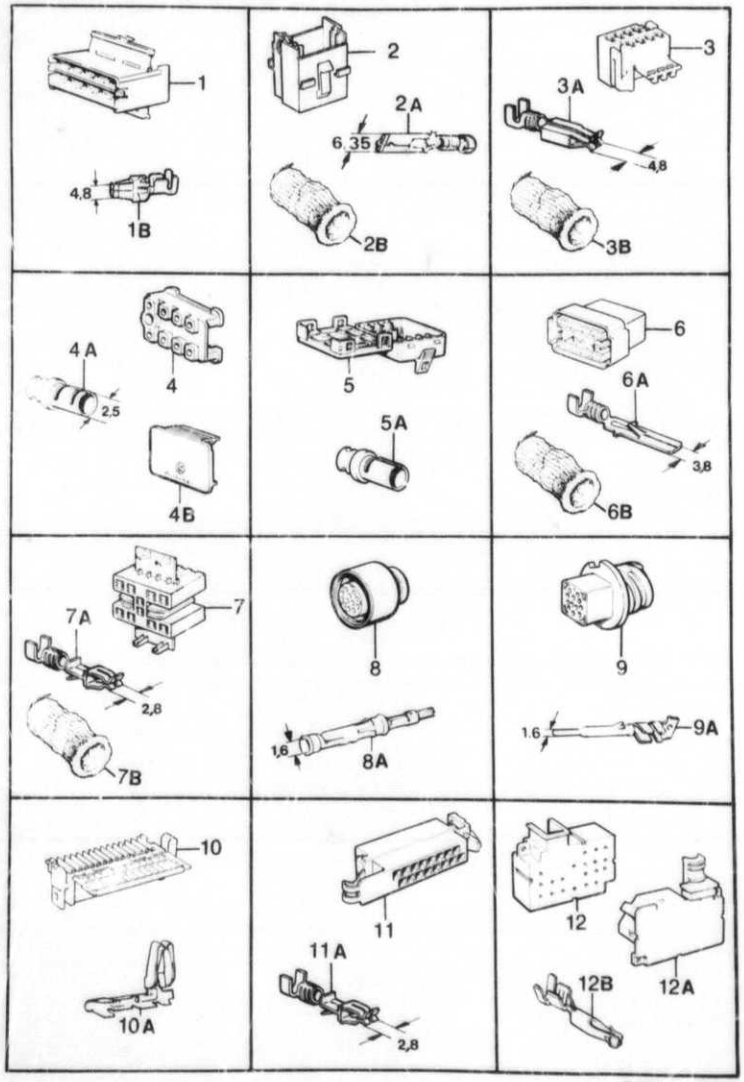

F0763 - 9000

0158	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0030	1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0050	2	91 24 181		JOINT PIECE, EL-HEATED SEAT, EDU II, JOINT PIECE CABLE HARNESS ROOF SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
0090	2A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0100	2A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0110	2B	*95 68 775*		NLS	X	Insulation	Isolering	4
0130	3	91 24 090		JOINT PIECE, SWITCH REAR DEMIST, SWITCH SUN ROOF, REGULATOR, SWITCH SUN CENTRAL LOCK, TOW HOOK, ACC, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, SWITCH FAN, DCC, EDU I, ALARM, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0220	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0230	3B	*95 68 775*		NLS	X	Insulation	Isolering	4
0250	4	95 52 159		ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0270	4A	95 52 175			X	Cable terminal	Kabelsko	5
0280	4B	95 52 167			X	Cover	Lock	4
0300	5	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0320	5A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0340	6	91 22 557		RADIO, JOINT PIECE MAIN CABLE HARNESS SAAB DI, DIAGNOS UNIT	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0370	6A	*95 52 126*		AREA, 0,5-1,0 MM2 NLS - USE 9552100	X	Cable terminal	Kabelsko	5
0380	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0390	6B	*95 68 775*		NLS	X	Insulation	Isolering	4
0410	7	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT LIGHT INSTEP, THEFT ALARM	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0490	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0500	7B	*95 68 775*		NLS	X	Insulation	Isolering	4
0520	8	95 29 538		DIAGNOS AIR-BAG	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	4
0540	8A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0560	9	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0580	9A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0600	10	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0620	10A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


3B GROUP INDEX

Connectors	**3-A06**
Cable terminals	**3-E16**

3-E12

Contact housing etc
1989

Kontakthus etc
1989

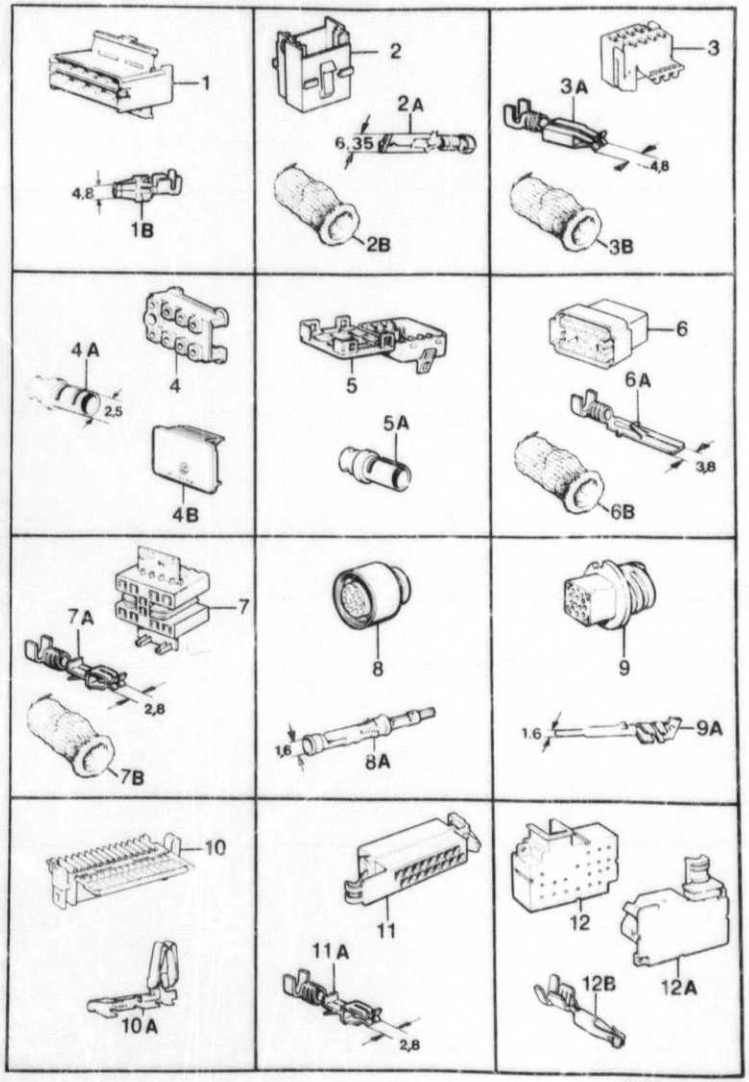

F0763 - 9000

0158	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	11	95 66 282		ELECTRONIC UNIT THEFT ALARM	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
0660	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0680	12	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0700	12A	95 27 763			X	Contact housing	Kontakthus	4
0710	12B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E14

Contact housing etc
1989

Kontakthus etc
1989

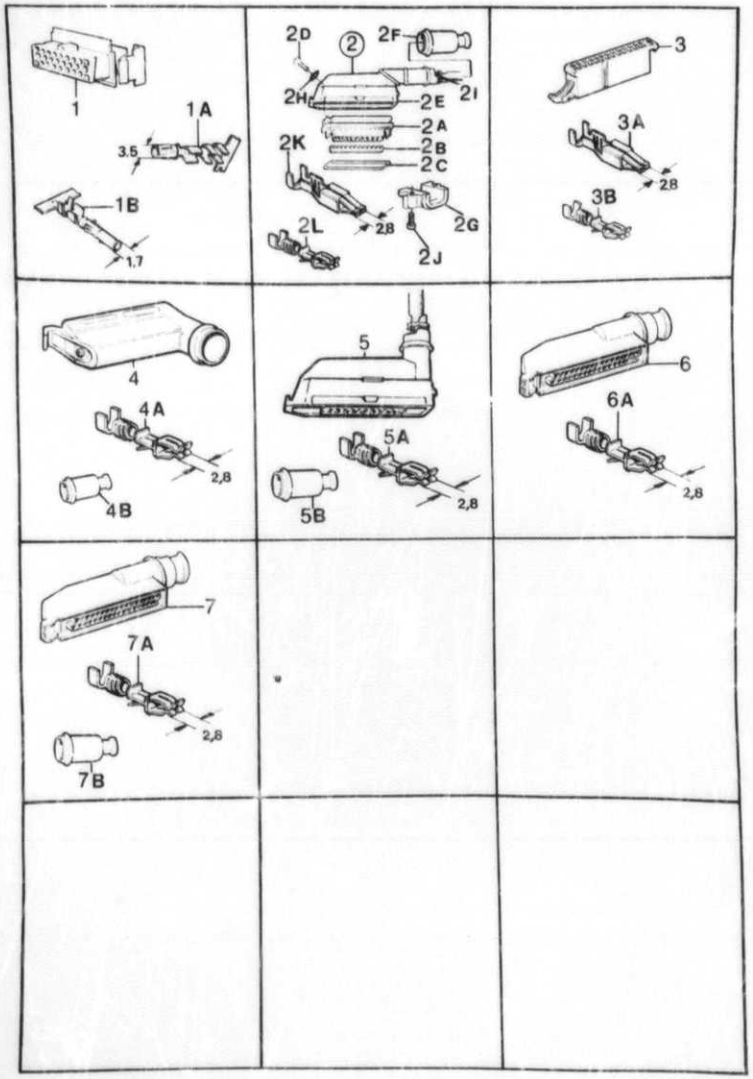

F0764 - 9000

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0020								
0030	1A	*85 44 298*		AREA, 0,5-2,0 MM2 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0040	1B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	85 79 930		ELECTRONIC UNIT LH	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0070								
0080	2A	85 87 420			1	. Contact housing	. Kontakthus	4
0090	2B	85 87 438			1	. Striker plate	. Låsbleck	5
0100	2C	85 87 453			1	. Seal	. Tätning	5
0110	2D	85 87 487			1	. Screw	. Skruv	5
0120	2E	85 87 412			1	. Cover	. Kåpa	4
0130	2F	85 87 446			1	. Bushing	. Bussning	6
0140	2G	85 87 495			1	. Bracket	. Hållare	4
0150	2H	85 87 461			1	. Seal	. Tätning	5
0160	2I	79 71 872		(8558256)	1	. Tensioning band	. Spännband	5
0170	2J	79 71 351			2	. Screw	. Skruv	5
0180	2K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190	2L	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190								
0200								
0210	3	95 06 650		ELECTRONIC UNIT ACC	X	Contact housing 25-pole, male	Kontakthus 25-polig, stift	4
0220								
0230	3A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0240	3B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0240								
0250								
0260	4	95 64 089		APC, EZ100K	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0270								
0280	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0280								
0290	4B	85 87 511			X	Rubber protection	Gummiskydd	4
0300								
0310	5	95 29 496		ELECTRONIC UNIT ABS	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0320								
0330	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0330								
0340	5B	85 87 511			X	Rubber protection	Gummiskydd	4
0350								
0360	6	91 25 519		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0370								
0380	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0380								
0390								
0400	7	*95 66 266*		ELECTRONIC UNIT APC/DI NLS - USE 4109310	X	Contact housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0410								
0420	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0420								
0430	7B	91 20 106			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E16

Cable terminal
1985

Ledningssko
1985

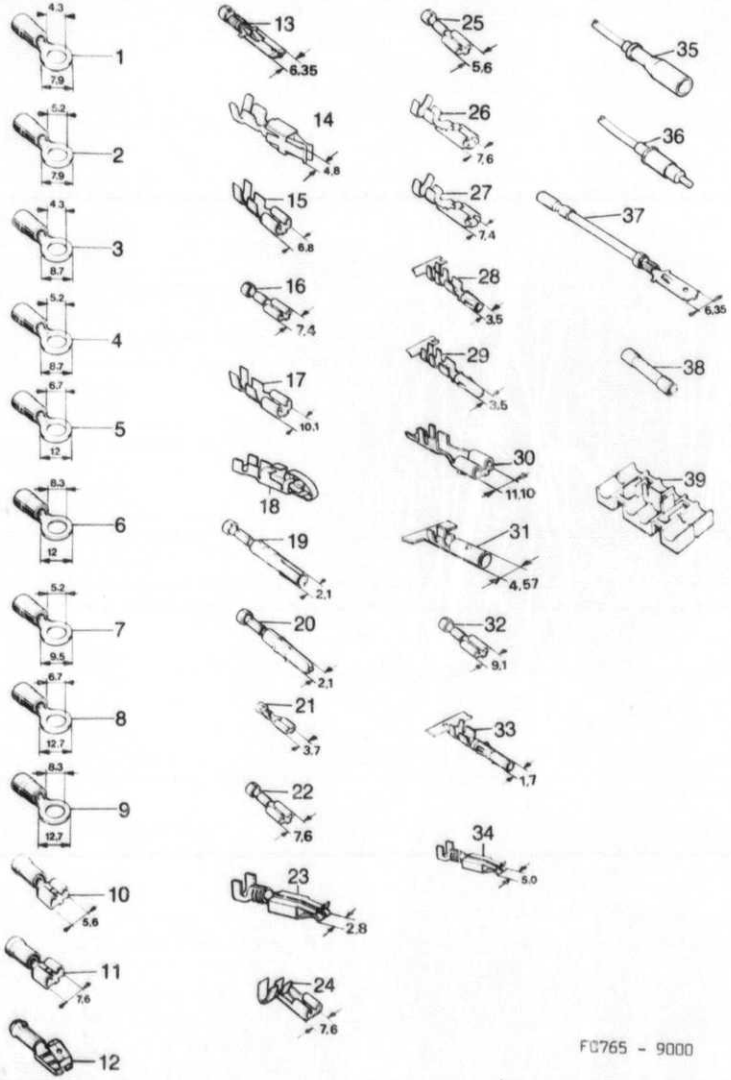

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 211		17) 40/253 152 003	X	Cable terminal	Kabelsko	5
2	71 55 229		17) 40/253 153 001	X	Cable terminal	Kabelsko	5
3	71 55 237		18) 40/253 172 001	X	Cable terminal	Kabelsko	5
4	71 17 880		18) 40/253 173 009	X	Cable terminal	Kabelsko	5
5	78 29 617		18) 40/253 174 007	X	Cable terminal	Kabelsko	5
6	79 59 349		18)	X	Cable terminal	Kabelsko	5
7	71 55 658		19) 40/253 210 009	X	Cable terminal	Kabelsko	5
8	78 29 666		19) 40/253 211 007	X	Cable terminal	Kabelsko	5
9	78 29 674		19) 40/253 212 005	X	Cable terminal	Kabelsko	5
10	79 69 231		21)	X	Cable terminal	Kabelsko	5
11	78 29 625		20) 40/253 195 002	X	Connector	Anslutning	3
11	78 29 682		22) 40/253 226 005	X	Cable terminal	Kabelsko	3
11	*78 29 633*		20) 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
11	78 29 609		16) 40/253 168 009	X	Cable terminal	Kabelsko	5
12	78 29 641		20) 45/30 24 650	X	Manifold	Förgrening	3
13	*71 55 062*		100), JOINT PIECE, FOR CONTACT HOUSING, 9124181 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
13	85 16 957		105), FOR CONTACT HOUSING 9124181	X	Cable terminal	Kabelsko	5
13	85 93 089		101), FOR CONTACT HOUSING 9503012	X	Cable terminal	Kabelsko	5
14	91 20 775		101), EL-CENTRAL, FAILUR SENSOR, FLASHER UNIT, FUEL PUMP RELAY, MAIN RELAY, RELAY HORN, RELAY REAR DEMIST, RELAY AC, INTERVAL RELAY, AC DIOD, INTERIOR LIGHT, FOR CONTACT HOUSING 9122797, 9124090, 9124157,9124165	X	Cable terminal	Kabelsko	5
15	*71 55 039*		102), EL-CENTRAL, FOR CONTACT HOUSING 8516916 NLS	X	Cable terminal	Kabelsko	5
15	71 55 716		104), EL-CENTRAL, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
16	*71 55 153*		103), FOR CONTACT HOUSING 7155096 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
16	*79 72 029*		106), REAR DEMIST, FOR CONTACT HOUSING, 9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
16	79 71 708		107), FOR CONTACT HOUSING 7342892	X	Cable terminal	Kabelsko	5
17	79 69 256		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
18	81 35 147		108), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5

16. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
20. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
21. Blue colour code (area 1,0-3,4 MM2). Blå färgkod (area 1,0-3,4 MM2).
22. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
100. Area 0,8-2,5 MM2.
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,4-1,0 MM2.
105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
108. Area 0,75-1,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E18

Cable terminal
1985

Ledningssko
1985

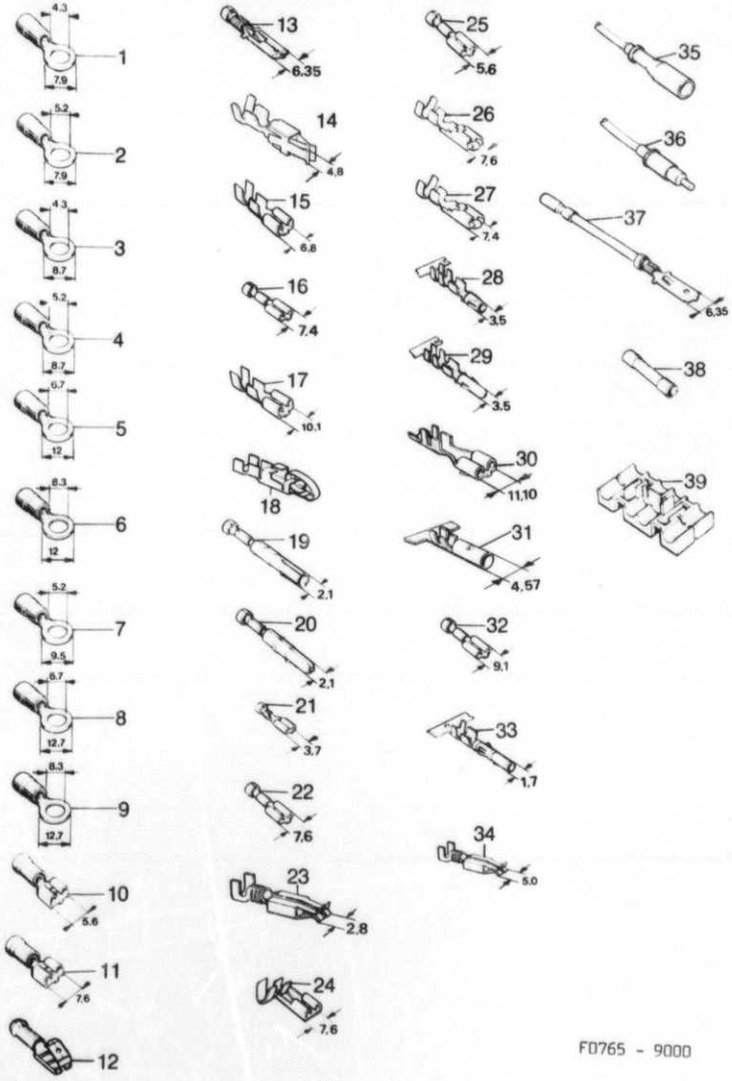

Poc	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
18	81 38 679		109), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
19	85 22 583		101), FOR CONTACT HOUSING 8530099(8503153)	X	Cable terminal	Kabelsko	5
20	85 22 591		101), FOR CONTACT HOUSING 8530081(8503161)	X	Cable terminal	Kabelsko	3
21	*85 09 846*		111), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
21	85 30 107		107), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
22	*85 14 028*		112), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
22	85 14 036		106), FOR CONTACT HOUSING 8516916, 8572083	X	Cable terminal	Kabelsko	5
23	85 21 593		107), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
23	91 20 783		106), EL-CENTRAL FAILUR SENSOR, RELAY LIGHT, RELAY FUEL PUMP, MAIN RELAY, RELAY HORN, RELAY REAR DEMIST, RELAY AC, INTERVAL RELAY, AC DIOD, FOR CONTACT HOUSING, 9124090, 9124157,9124165 9122797, 9502048	X	Cable terminal	Kabelsko	5
23	91 20 791		113), EL-CENTRAL, FAILUR SENSOR, RELAY AC, RELAY IGNITION LOCK	X	Cable terminal	Kabelsko	5
24	*85 21 676*		107), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		106), FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		107), FOR CONTACT HOUSING 8521692(8582421)	X	Cable terminal	Kabelsko	5
25	85 44 389		107), FOR CONTACT HOUSING 8544371, 8574121	X	Cable terminal	Kabelsko	5
25	*85 33 028*		107), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
26	*85 41 203*		107), JOINT PIECE, FOR CONTACT HOUSING 8541229 8544363, 9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5

101. Area 0,5-1,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
109. Area 1,0-3,5 MM2.
111. Area 0,5-1,4 MM2.
112. Area 0,3-0,8 MM2.
113. Area 2,5-4,0 MM2.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E20 Cable terminal 1985 / Ledningssko 1985

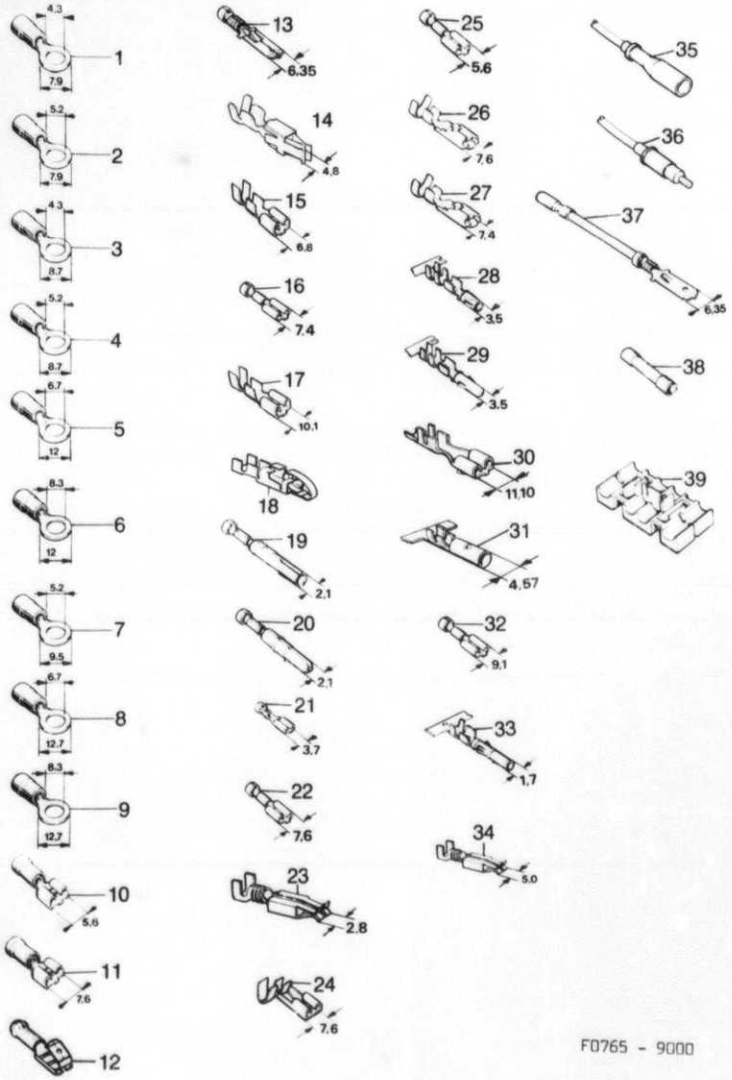

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0930	27	85 41 211		113), JOINT PIECE, FOR CONTACT HOUSING 8541229 8544363	X	Cable terminal	Kabelsko	5
0960	28	*85 44 298*		110), JOINT PIECE, FOR CONTACT HOUSING, 8564916 8561631, 9503293 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
0990	28	85 44 306		114), JOINT PIECE	X	Cable terminal	Kabelsko	5
1000	28	85 82 090		107), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
1020	29	*85 44 314*		110), FOR CONTACT HOUSING 8561623, 8564924 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
1040	29	85 44 322		114), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
1060	30	85 69 139		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
1070	31	85 72 596		115), COMPRESSOR AC	X	Cable terminal	Kabelsko	5
1080	32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
1100	33	85 87 552		107), FOR CONTACT HOUSING 8521700, 9506643	X	Cable terminal	Kabelsko	5
1120	34	*95 02 923*		105), EL-CENTRAL, RELAY REAR DEMIST, FOR CONTACT HOUSING 9122789 NLS - USE 9120767	X	Cable terminal	Kabelsko	5
1150	35	78 74 498		FOR CONTACT HOUSING, 9503277, 9503316,9503319 9503434, 9503475	X	Connection	Skarv	5
1180	36	*78 74 506*		FOR CONTACT HOUSING, 9501685, 9506668	X	Connection	Skarv	5
1200	37	85 22 542		18), FOR CONTACT HOUSING, 7155112	X	Cable terminal	Kabelsko	5
1220	38	71 55 203		17) 40/253 164 008	X	Splice	Skarvhylsa	5
1230	38	71 55 146		18) 40/253 188 007	X	Splice	Skarvhylsa	5
1240	38	71 55 633		19) 40/253 221 006	X	Splice	Skarvhylsa	5
1250	39	85 87 198		117)	X	Cable joint	Ledningsförbindning	3
1260	39	85 21 668		103)	X	Cable joint	Ledningsförbindning	3

17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
103. Area 0,8-2,1 MM2.
105. Area 4,0-6,0 MM2.
107. Area 0,5-1,5 MM2.
110. Area 0,5-2,0 MM2.
113. Area 2,5-4,0 MM2.
114. Area 2,0-4,0 MM2.
115. Area 0,6-1,4 MM2.
116. Area 1,3-3,4 MM2.
117. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E22

Cable terminal
1986

Ledningssko
1986

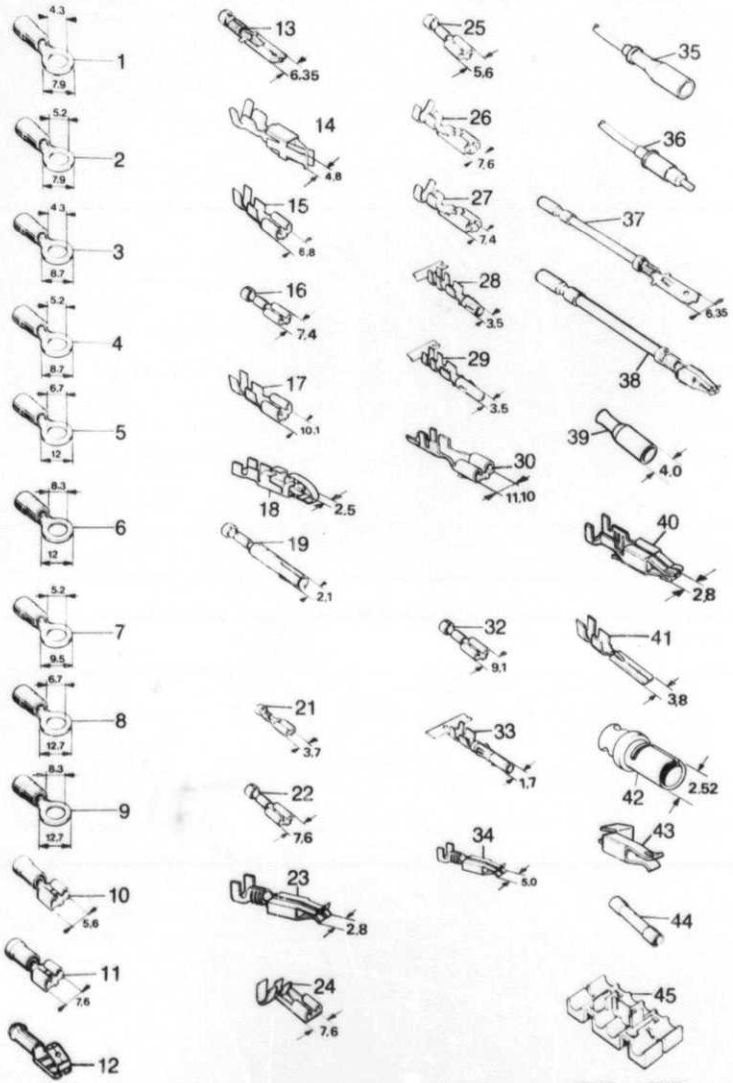

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 211		17) 40/253 152 003	X	Cable terminal	Kabelsko	5
2	71 55 229		17) 40/253 153 001	X	Cable terminal	Kabelsko	5
3	71 55 237		18) 40/253 172 001	X	Cable terminal	Kabelsko	5
4	71 17 880		18) 40/253 173 009	X	Cable terminal	Kabelsko	5
5	78 29 617		18) 40/253 174 007	X	Cable terminal	Kabelsko	5
6	79 59 349		18)	X	Cable terminal	Kabelsko	5
7	71 55 658		19) 40/253 210 009	X	Cable terminal	Kabelsko	5
8	78 29 666		19) 40/253 211 007	X	Cable terminal	Kabelsko	5
9	78 29 674		19) 40/253 212 005	X	Cable terminal	Kabelsko	5
10	79 69 231		21)	X	Cable terminal	Kabelsko	5
11	78 29 625		20) 40/253 195 002	X	Connector	Anslutning	3
12	78 29 682		22) 40/253 226 005	X	Cable terminal	Kabelsko	3
11	*78 29 633*		20) 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
11	78 29 609		16) 40/253 168 009	X	Cable terminal	Kabelsko	5
12	78 29 641		20) 45/30 24 650	X	Manifold	Förgrening	3
13	*71 55 062*		100), JOINT PIECE, FOR CONTACT HOUSING, 9124181 9502998, 9503012 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
13	85 16 957		105), FOR CONTACT HOUSING 9124181	X	Cable terminal	Kabelsko	5
13	85 82 637		103), FOR CONTACT HOUSING 7155104	X	Cable terminal	Kabelsko	5
14	91 20 775		101), EL-CENTRAL, FAILUR SENSOR, FLASHER UNIT, FUEL PUMP RELAY, MAIN RELAY, RELAY HORN, RELAY REAR DEMIST, RELAY AC, INTERVAL RELAY, AC DIOD, INTERIOR LIGHT, IGNITION SETTING, LIGHT, FOR CONTACT HOUSING 8533697, 9122797, 9124090,9124157 9124173, 9124157,9124165 9507658	X	Cable terminal	Kabelsko	5
15	*71 55 039*		102), EL-CENTRAL, EARTH, FOR CONTACT HOUSING 8516916 NLS	X	Cable terminal	Kabelsko	5
15	*71 55 047*		118), EARTH NLS	X	Cable terminal	Kabelsko	5
15	71 55 716		104), EL-CENTRAL, JOINT PIECE, CIGARETTE LIGHTER FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
16	*71 55 153*		103), FOR CONTACT HOUSING 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5

16. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
20. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
21. Blue colour code (area 1,0-3,4 MM2). Blå färgkod (area 1,0-3,4 MM2).
22. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
100. Area 0,8-2,5 MM2.
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,4-1,0 MM2.
105. Area 4,0-6,0 MM2.
118. Area 3,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-E24

Cable terminal
1986

Ledningssko
1986

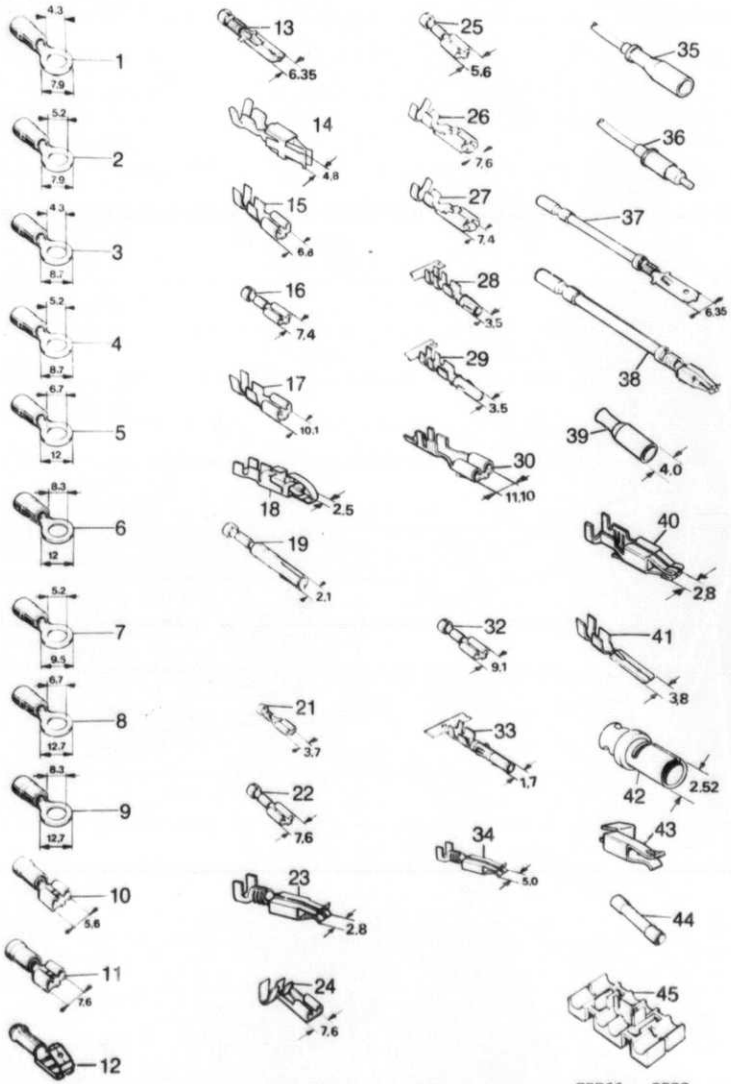

1002	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	16	*79 72 029*		106), FOR CONTACT	X	Cable terminal	Kabelsko	5
0460				HOUSING, 8533697,9120791				
0470				9503251 NLS - USE				
0470				8522534				
0480	16	79 71 708		107), FOR CONTACT	X	Cable terminal	Kabelsko	5
0490				HOUSING 7155112, 8533697				
0500	16	79 68 068		105), FOR CONTACT	X	Cable terminal	Kabelsko	5
0510				HOUSING 8533697				
0520	16	*85 03 476*		106), FOR CONTACT	X	Cable terminal	Kabelsko	5
0530				HOUSING 8558538 NLS				
0540	16	*85 82 454*		107), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0550				CONTACT HOUSING, 8558538				
0560				9512591 NLS - USE				
0560				8522534				
0570	17	79 69 256		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
0580	18	81 35 147		108), FOR CONTACT	X	Cable terminal	Kabelsko	5
0590				HOUSING 8135600				
0600	18	81 38 679		109), FOR CONTACT	X	Cable terminal	Kabelsko	5
0610				HOUSING 8135600				
0620	19	85 22 583		101), FOR CONTACT	X	Cable terminal	Kabelsko	5
0630				HOUSING 8530099(8503153)				
0640	21	*85 09 846*		111), FOR CONTACT	X	Cable terminal	Kabelsko	5
0650				HOUSING 8378630 NLS -				
0650				USE 8522575				
0660	21	85 30 107		107), FOR CONTACT	X	Cable terminal	Kabelsko	3
0670				HOUSING 8530115				
0680	22	*85 14 028*		112), TEMP SENSOR, OIL	X	Cable terminal	Kabelsko	5
0690				PRESSURE SENSOR,				
0700				ALTERNATOR, FOR CONTACT				
0710				HOUSING 8516916 NLS -				
0710				USE 7155716				
0720	22	85 14 036		106), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
0730				FOR CONTACT HOUSING				
0740				8516916				
0750	23	85 21 593		107), FAILUR SENSOR,	X	Cable terminal	Kabelsko	5
076				INTERVAL RELAY, FOR				
077				CONTACT HOUSING, 8544371				
0780				8574097, 8574121,8579930				
0790				8593899, 8593907,9593915				
0800				8593931, 8593949,9123381				
0810				9506650				
0820	23	91 20 783		106), EL-CENTRAL FAILUR	X	Cable terminal	Kabelsko	5
0830				SENSOR, RELAY LIGHT,				
0840				RELAY FUEL PUMP, MAIN				
0850				RELAY, RELAY HORN, RELAY				
0860				REAR DEMIST, RELAY AC,				
0870				INTERVAL RELAY, AC DIOD,				
0880				JOINT PIECE, FOR CONTACT				
0890				HOUSING, 9124090,9124157				
0900				9124165, 9124173,9122797				
0910				9502048				

101. Area 0,5-1,0 MM2.
105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
108. Area 0,75-1,0 MM2.
109. Area 1,0-3,5 MM2.
111. Area 0,5-1,4 MM2.
112. Area 0,3-0,8 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F02 Cable terminal 1986

Ledningssko 1986

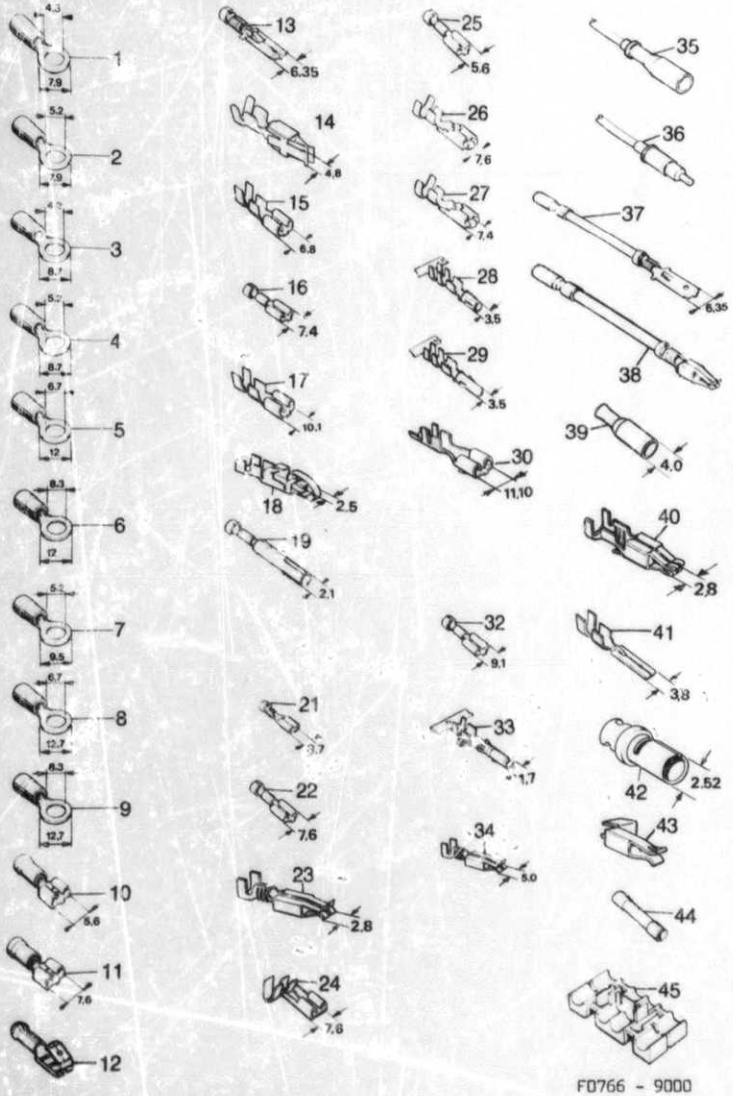

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
23	91 20 791		113), EL-CENTRAL, FAILUR SENSOR, RELAY AC, RELAY IGNITION LOCK, JOINT PIECE, REAR DEMIST, FOR CONTACT HOUSING 9122797, 9124090	X	Cable terminal	Kabelsko	5
24	*85 21 676*		107), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		106), FOR CONTACT HOUSING 8521692 9518416 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		107), FOR CONTACT HOUSING 8521692(8582421)	X	Cable terminal	Kabelsko	5
25	85 44 389		107), FOR CONTACT HOUSING 8544371	X	Cable terminal	Kabelsko	5
25	*85 33 028*		107), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
26	*85 41 203*		107), JOINT PIECE, FOR CONTACT HOUSING 7155104 8541229, 8544363,8574949 9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		120), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
27	*85 82 405*		107), FOR CONTACT HOUSING 8541229 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 41 211		113), JOINT PIECE, FOR CONTACT HOUSING 8541229 8544363	X	Cable terminal	Kabelsko	5
28	*85 44 298*		110), JOINT PIECE, FOR CONTACT HOUSING, 8564916 8561631, 9503293 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		114), JOINT PIECE	X	Cable terminal	Kabelsko	5
28	85 82 090		107), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
29	*85 44 314*		110), FOR CONTACT HOUSING 8561623, 8564924 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		114), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
32	85 82 413		116), JOINT PIECE, FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
33	85 87 552		107), FOR CONTACT HOUSING 9506643, 9512591	X	Cable terminal	Kabelsko	5
33	85 87 560		106), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5


105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
110. Area 0,5-2,0 MM2.
113. Area 2,5-4,0 MM2.
114. Area 2,0-4,0 MM2.
116. Area 1,3-3,4 MM2.
120. Area 0,9-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

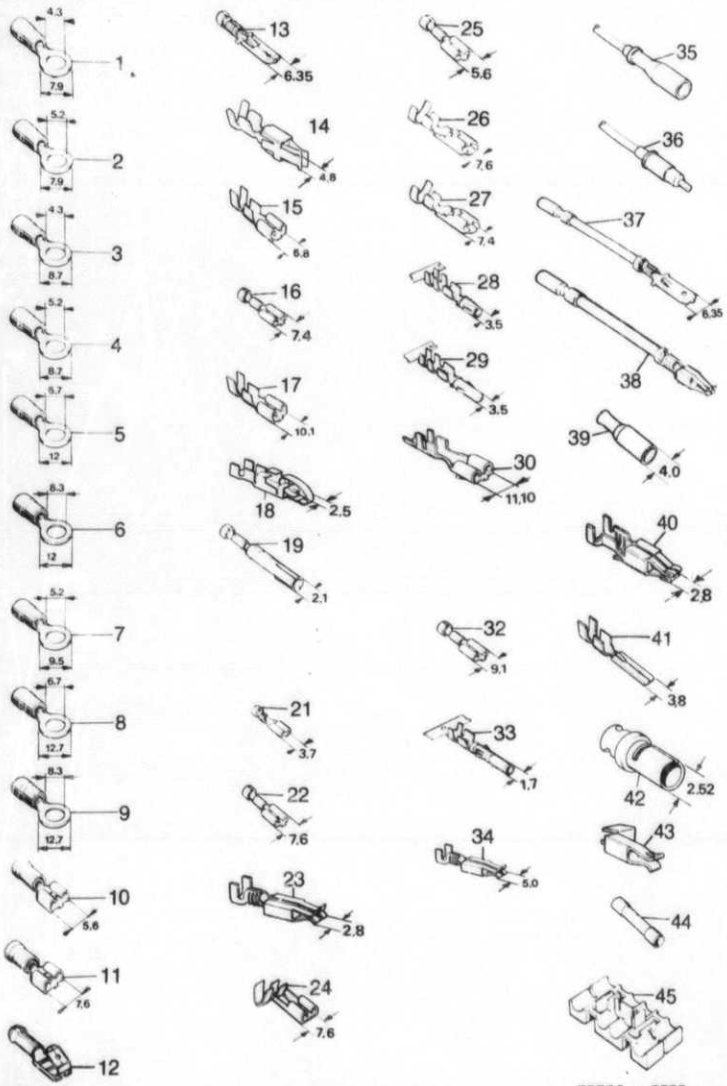

1002	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
1370	34	91 20 767		105), EL-CENTRAL, RELAY REAR DEMIST, RELAY FUEL PUMP, FOR CONTACT HOUSING 9122789	X	Cable terminal	Kabelsko	5
1410	34	95 21 972		101), RELAY EARTH SHEET	X	Cable terminal	Kabelsko	5
1420	34	*95 21 980*		102), RELAY EARTH SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
1430	34	*91 20 668*		121), FOR CONTACT HOUSING 9123399 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1450	35	78 74 498		FOR CONTACT HOUSING, 9503277, 9503316,9503319 9503418, 9503434,9503475	X	Connection	Skarv	5
1480	36	78 74 506		FOR CONTACT HOUSING, 9501685, 9503327,9503319 9506668	X	Connection	Skarv	5
1510	37	85 22 542		18), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
1530	38	85 22 617		119), BULB CONTROL, AC, INTERVAL RELAY, BELT WARNING US, FOR CONTACT HOUSING, 8533697,8544371 8574097, 8579930,8586802 8593899, 8593907,8593915 8593923, 8593931,8593949 9123381, 9506650	X	Cable terminal	Kabelsko	5
1610	39	85 82 579		101), JOINT PIECE	X	Cable terminal	Kabelsko	5
1620	40	*95 08 706*		121), RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1630	40	*95 08 748*		102), FOR CONTACT HOUSING, 9123399,9514803 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1650	41	95 52 100		121), FOR CONTACT HOUSING, 9122557	X	Cable terminal	Kabelsko	5
1670	42	95 52 175		FOR CONTACT HOUSING, 9552159, 9552167	X	Cable terminal	Kabelsko	5
1690	43	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
1710	44	71 55 203		17) 40/253 164 008	X	Splice	Skarvhylsa	5
1720	44	71 55 146		18) 40/253 188 007	X	Splice	Skarvhylsa	5
1730	44	71 55 633		19) 40/253 221 006	X	Splice	Skarvhylsa	5
1740	45	85 87 198		117)	X	Cable joint	Ledningsförbindning	3
1750	45	85 21 668		103)	X	Cable joint	Ledningsförbindning	3

17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
105. Area 4,0-6,0 MM2.
117. Area 0,5-0,75 MM2.
119. Area 1,0-2,6 MM2.
121. Area 0,75-1,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F06

Cable terminal
1987

Ledningssko
1987

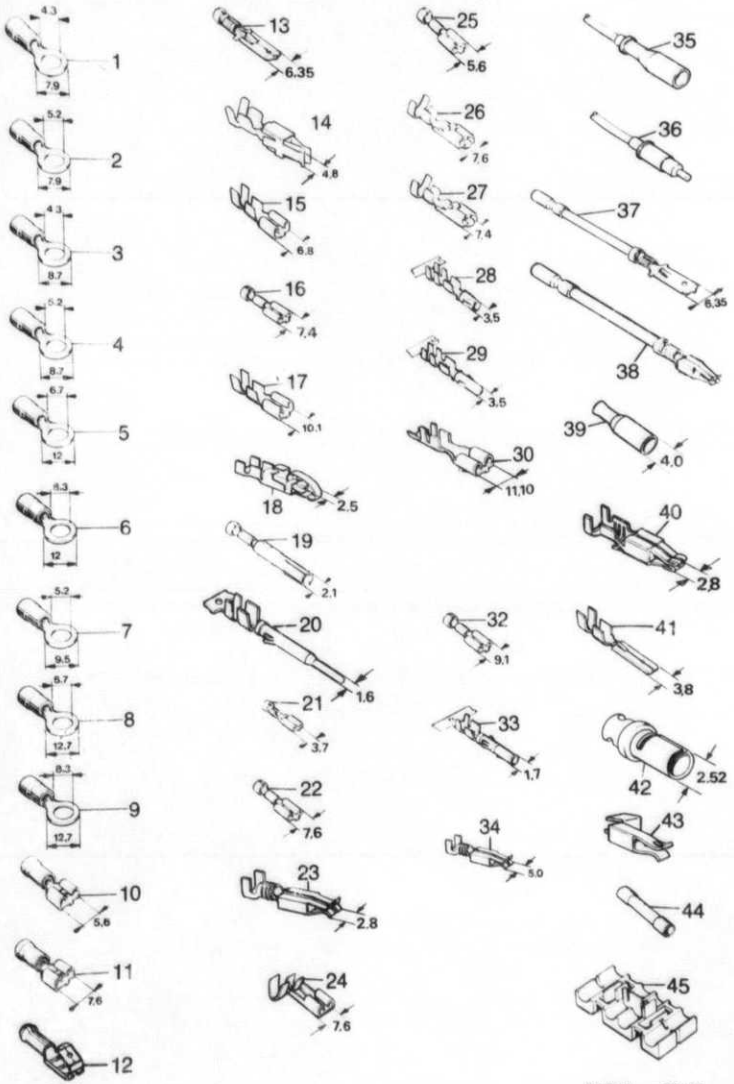

1004	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		17) 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		17) 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		18) 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		18) 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		18) 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		18)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		19) 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		19) 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		19) 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		106), EARTH	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		21)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		20) 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		22) 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		20) 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		16) 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		20) 45/30 24 650	X	Manifold	Förgrening	3
0170	13	*71 55 062*		100), JOINT PIECE, FOR CONTACT HOUSING, 9124181 9502998 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0180	13	85 93 089		101), FOR CONTACT HOUSING, 9124181	X	Cable terminal	Kabelsko	5
0190	14	91 20 775		101), EL-CENTRAL, FAILUR SENSOR, FLASHER UNIT, FUEL PUMP RELAY, MAIN RELAY, RELAY HORN, RELAY REAR DEMIST, RELAY AC, INTERVAL RELAY, AC DIOD, INTERIOR LIGHT, IGNITION SETTING, LIGHT, HORN, AC BULB CONTROL, TIME RELAY AC, JOINT PIECE, GEAR INDICATOR, BELT WARNING, RELAY GEAR INDICATOR, FOR CONTACT HOUSING 8533655, 8533697,9122789 9122797, 9124090,9124157 9124173, 9124165,9507658	X	Cable terminal	Kabelsko	5
0200	15	*71 55 039*		102), EL-CENTRAL, EARTH, FOR CONTACT HOUSING 8516916 NLS	X	Cable terminal	Kabelsko	5
0210	15	*71 55 047*		118), EARTH NLS	X	Cable terminal	Kabelsko	5
0220	15	71 55 716		104), EL-CENTRAL, JOINT PIECE, DOOR SWITCH, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0230	16	*71 55 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5


16. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
20. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
21. Blue colour code (area 1,0-3,4 MM2). Blå färgkod (area 1,0-3,4 MM2).
22. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
100. Area 0,8-2,5 MM2.
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,4-1,0 MM2.
106. Area 1,0-2,5 MM2.
118. Area 3,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-F16

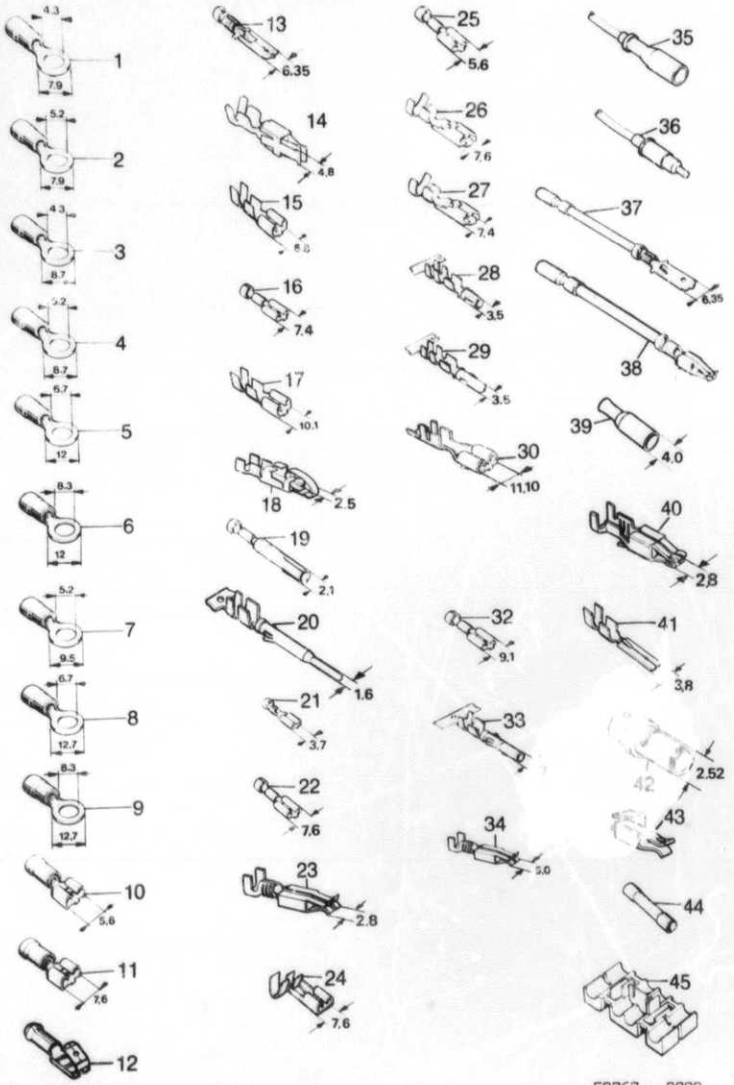

F0767 - 9000

Wiring and fuses

3-F08

Cable terminal

1987

Ledningar och säkringar

Ledningssko

1987

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
16	*79 72 029*		106), FOR CONTACT HOUSING, 8533697 9120791 9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
16	79 71 708		107), FOR CONTACT HOUSING 7155112, 8533697	X	Cable terminal	Kabelsko	5
16	79 68 068		105), FOR CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
16	*85 03 476*		106), FOR CONTACT HOUSING 7155112 NLS	X	Cable terminal	Kabelsko	5
16	*85 82 454*		107), JOINT PIECE, FOR CONTACT HOUSING, 8558538 9512591 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
17	79 69 256		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
18	81 35 147		108), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
18	81 38 679		109), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
19	85 22 583		122), FOR CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
20	85 93 964		107), FOR CONTACT HOUSING 8521718	X	Cable terminal	Kabelsko	5
20	95 19 398		124), FOR CONTACT HOUSING 9519406	X	Cable terminal	Kabelsko	5
21	*85 09 846*		111), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
21	85 30 107		107), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
22	*85 14 028*		112), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
22	85 14 036		106),RELAY GROUND SHEET, JOINT PIECE, FOR CONTACT HOUSING, 8516916	X	Cable terminal	Kabelsko	5
23	85 21 593		107), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
23	91 20 783		106), EL-CENTRAL FAILUR SENSOR, RELAY LIGHT, AC, RELAY FUEL PUMP, MAIN RELAY, RELAY REAR DEMIST, RELAY AC, AC, INTERVAL RELAY, AC DIOD, TIME RELAY, FOR CONTACT HOUSING, 9124090,9124157 9124173, 9122797,9502048	X	Cable terminal	Kabelsko	5

105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
108. Area 0,75-1,0 MM2.
109. Area 1,0-3,5 MM2.
111. Area 0,5-1,4 MM2.
112. Area 0,3-0,8 MM2.
122. Area 0,8-3,4 MM2.
124. Area 0,8-1,5 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F10 Cable terminal 1987

Ledningssko 1987

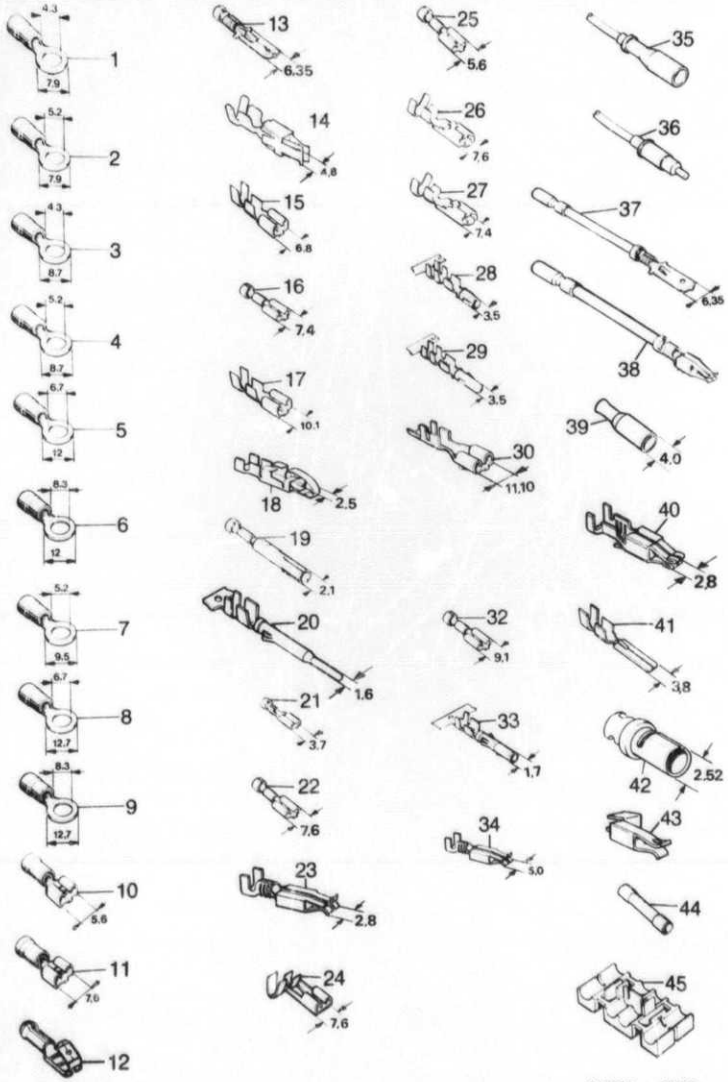

F0767 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
23	91 20 791		113), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, FOR CONTACT HOUSING 9122797, 9124090	X	Cable terminal	Kabelsko	5
24	*85 21 676*		107), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		106), FOR CONTACT HOUSING 8521692,9518416 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		107), FOR CONTACT HOUSING 8521692(8582421)	X	Cable terminal	Kabelsko	5
24	95 59 469		106), DIM DIP	X	Cable terminal	Kabelsko	5
25	85 44 389		107), FOR CONTACT HOUSING 8544371	X	Cable terminal	Kabelsko	5
25	*85 33 028*		107), FOR CONTACT HOUSING 8533184 NLS - USE 8532439	X	Cable terminal	Kabelsko	3
25	85 82 439		107), JOINT PIECE	X	Cable terminal	Kabelsko	5
26	*85 41 203*		107), JOINT PIECE, FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		120), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
27	85 41 211		113), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
28	*85 44 298*		110), JOINT PIECE, FOR CONTACT HOUSING, 8521700 8564919, 8561631 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		114), JOINT PIECE	X	Cable terminal	Kabelsko	5
28	85 82 090		107), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
29	*85 44 314*		110), FOR CONTACT HOUSING 8521718, 8564924 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		114), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
30	79 69 264		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
32	85 82 413		116), JOINT PIECE, FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
33	85 87 552		107), FOR CONTACT HOUSING 8521700, 9506643 9512591	X	Cable terminal	Kabelsko	5
33	85 87 560		106), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
34	91 20 767		105), EL-CENTRAL, RELAY REAR DEMIST, RELAY FUEL PUMP, FOR CONTACT HOUSING 9519422, 9122789	X	Cable terminal	Kabelsko	5

105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
110. Area 0,5-2,0 MM2.
113. Area 2,5-4,0 MM2.
114. Area 2,0-4,0 MM2.
116. Area 1,3-3,4 MM2.
120. Area 0,9-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F12

Cable terminal
1987

Ledningssko
1987

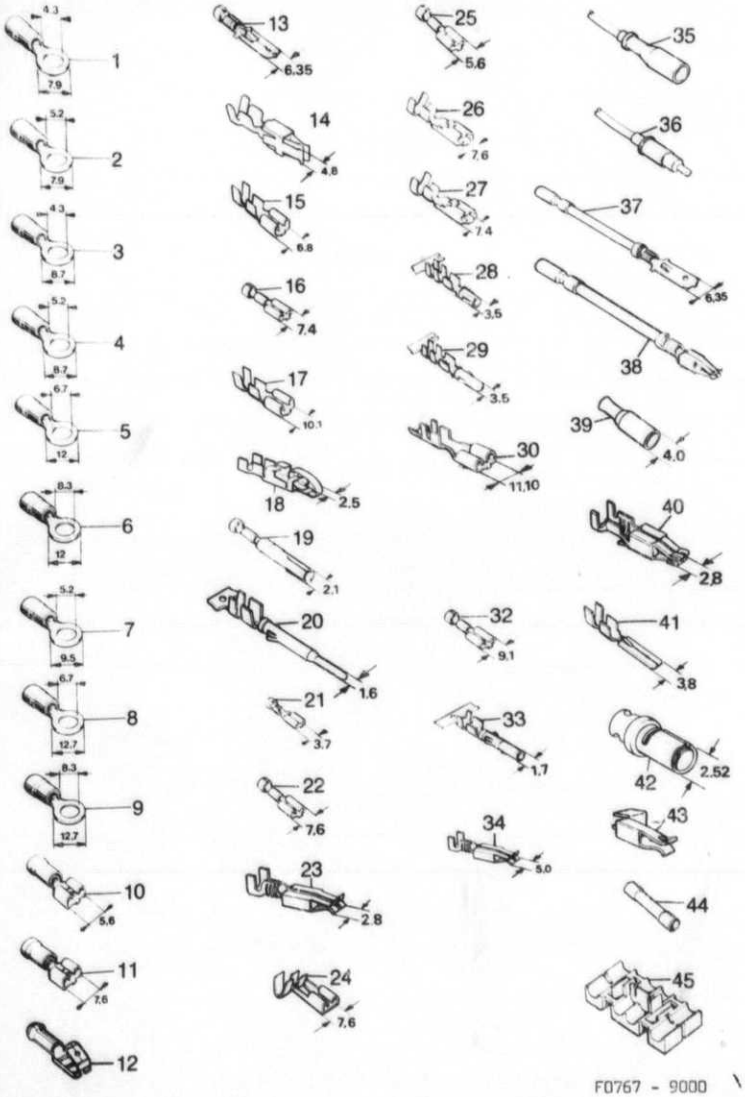

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
34	95 21 972		101), RELAY EARTH SHEET, FOR CONTACT HOUSING, 9124090, 9124157,9124165 9124173, 9521972	X	Cable terminal	Kabelsko	5
34	*95 21 980*		102), RELAY EARTH SHEET, FOR CONTACT HOUSING, 9124090, 9124165 NLS - USE 9120783	X	Cable terminal	Kabelsko	5
35	78 74 498		FOR CONTACT HOUSING, 9503277, 9503316,9503319 9503418, 9503426,9503434 9503475, 9519679	X	Connection	Skarv	5
36	78 74 506		FOR CONTACT HOUSING, 9501685, 9503327,9503319 9506668	X	Connection	Skarv	5
37	85 22 542		18), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
38	85 22 617		119), BULB CONTROL, AC, GEAR INDICATOR, FOR CONTACT HOUSING, 8539363 8544371, 8574097,8579930 8586802, 8593899,8593907 8593915, 8593923,8593931 8593949, 9123381,9506650 9519414, 9519455	X	Cable terminal	Kabelsko	5
39	85 82 579		101), JOINT PIECE	X	Cable terminal	Kabelsko	5
40	*95 08 706*		121) RELAY GROUND SHEET FOR CONTACT HOUSING, 9123399 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
40	*95 08 748*		102), FOR CONTACT HOUSING, 9123399,9514803 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
40	*95 08 714*		123), FOR CONTACT HOUSING, 9123399,9123555 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
41	95 52 100		121), FOR CONTACT HOUSING, 9122557	X	Cable terminal	Kabelsko	5
42	95 52 175		FOR CONTACT HOUSING, 9552159, 9552167	X	Cable terminal	Kabelsko	5
42	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
43	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
44	71 55 203		17) 40/253 164 008	X	Splice	Skarvhylsa	5
44	71 55 146		18) 40/253 188 007	X	Splice	Skarvhylsa	5
44	71 55 633		19) 40/253 221 006	X	Splice	Skarvhylsa	5
45	85 87 198		117)	X	Cable joint	Ledningsförbindning	3
45	85 21 668		103)	X	Cable joint	Ledningsförbindning	3

17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
117. Area 0,5-0,75 MM2.
119. Area 1,0-2,6 MM2.
121. Area 0,75-1,5 MM2.
123. Area 0,3-0,6 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F14

Cable terminal
1988

Ledningssko
1988

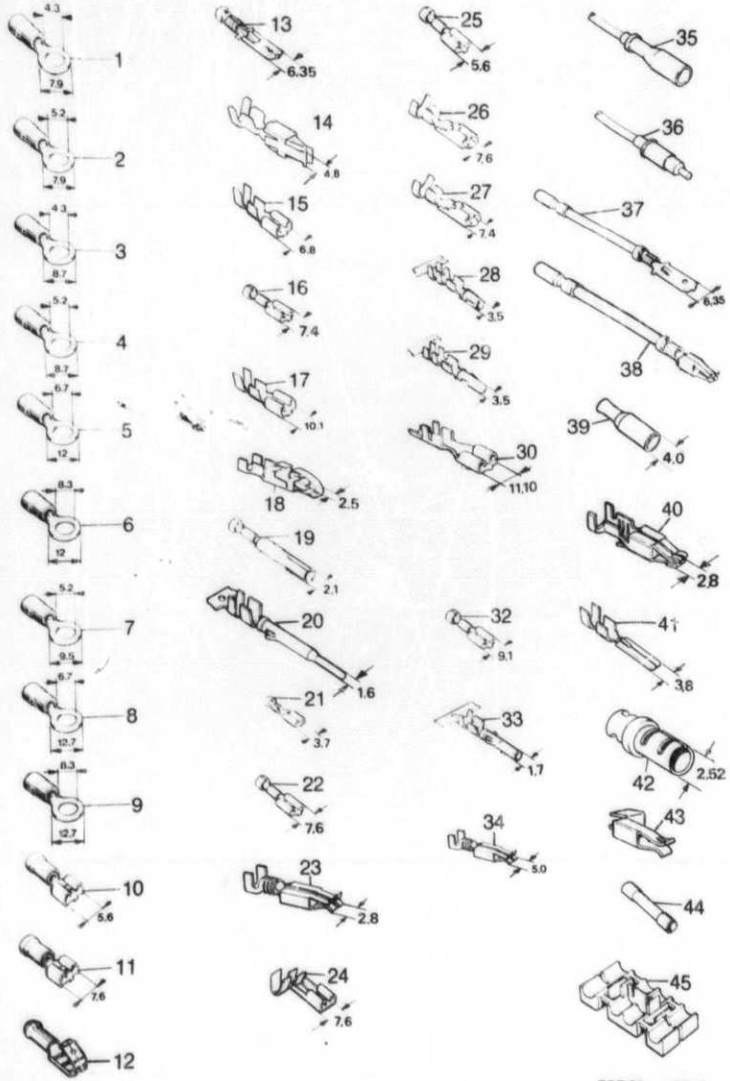

1006	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		17) 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		17) 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		18) 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		18) 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		18) 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		18)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		19) 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		19) 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		19) 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	10	79 69 231		21)	X	Cable terminal	Kabelsko	5
0110	11	78 29 625		20) 40/253 195 002	X	Connector	Anslutning	3
0120	11	78 29 682		22) 40/253 226 005	X	Cable terminal	Kabelsko	3
0130	11	*78 29 633*		20) 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0140	11	78 29 609		16) 40/253 168 009	X	Cable terminal	Kabelsko	5
0150	12	78 29 641		20) 45/30 24 650	X	Manifold	Förgrening	3
0160	13	*71 55 062*		100), JOINT PIECE, FOR CONTACT HOUSING, 9502998 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0170								
0180	13	85 93 089		101), JOINT PIECE, FOR CONTACT HOUSING, 9124181 9502998, 9503012	X	Cable terminal	Kabelsko	5
0190								
0200								
0210	14	91 20 775		101), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, FOR CONTACT HOUSING 8533655, 8533697,9507658	X	Cable terminal	Kabelsko	5
0220								
0230								
0240								
0250								
0260	15	*71 55 039*		102), EL-CENTRAL, EARTH, FOR CONTACT HOUSING 8516916 NLS	X	Cable terminal	Kabelsko	5
0270								
0280								
0290	15	*71 55 047*		118), EARTH NLS	X	Cable terminal	Kabelsko	5
0300	15	71 55 716		104), EL-CENTRAL, JOINT PIECE, DOOR SWITCH, CIGARETTE LIGHTER, FOR CONTACT HOUSING 8516916, 9123548	X	Cable terminal	Kabelsko	5
0310								
0320								
0330								
0340								
0350	16	*71 55 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0370	16	*79 72 029*		106), FOR CONTACT HOUSING, 8533697,9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0380								
0390	16	79 71 708		107), FOR CONTACT HOUSING 7155112, 8533697	X	Cable terminal	Kabelsko	5
0400								
0410	16	79 68 068		105), TIME RELAY COOLING FAN, FOR CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0420								
0430								

16. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
20. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
21. Blue colour code (area 1,0-3,4 MM2). Blå färgkod (area 1,0-3,4 MM2).
22. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
100. Area 0,8-2,5 MM2.
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,4-1,0 MM2.
105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
118. Area 3,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	8-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F16

Cable terminal
1988

Ledningssko
1988

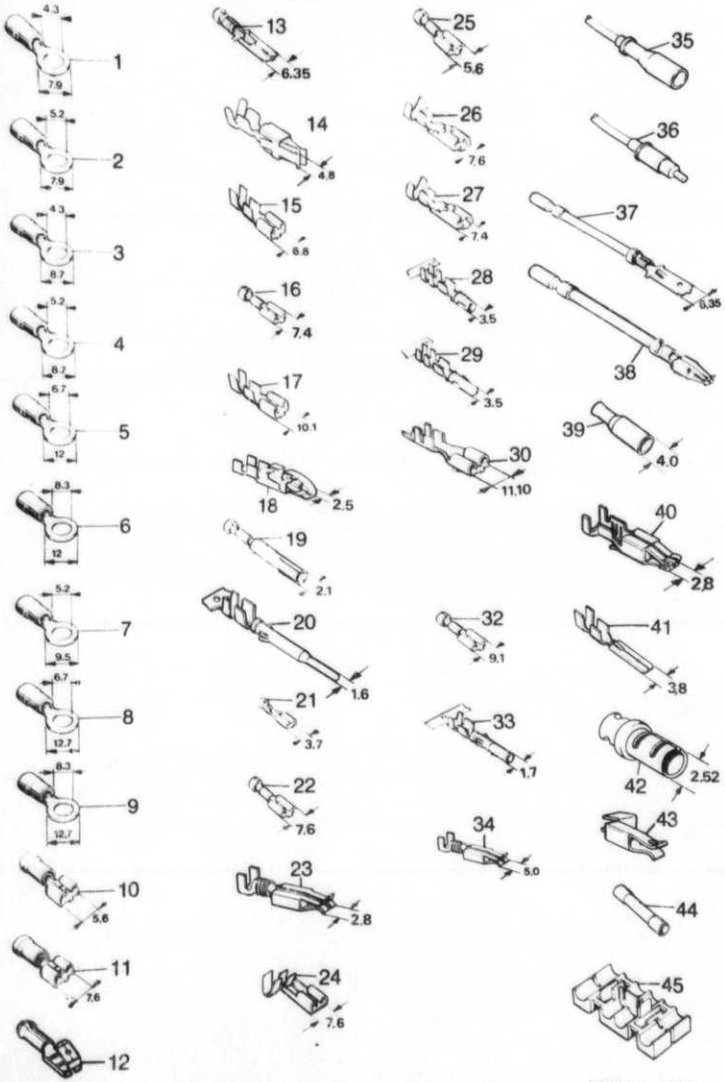

F0768 - 9000

1000	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	16	*85 82 454*		107), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0450				CONTACT HOUSING, 8558538 9512591 NLS - USE 8522534				
0460								
0460								
0470	16	*85 82 397*		106), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0480				CONTACT HOUSING, 7155112 NLS				
0480								
0490	16	85 82 546		105), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0500				CONTACT HOUSING, 7155112				
0510	17	79 69 256		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
0520	18	81 35 147		108), FOR CONTACT	X	Cable terminal	Kabelsko	5
0530				HOUSING 8135600				
0540	18	81 38 679		109), FOR CONTACT	X	Cable terminal	Kabelsko	5
0550				HOUSING 8135600				
0560	19	85 22 583		101), FOR CONTACT	X	Cable terminal	Kabelsko	5
0570				HOUSING 8530099(8503153)				
0580	19	85 22 583		122), FOR CONTACT	X	Cable terminal	Kabelsko	5
0590				HOUSING 8530099				
0600	20	85 93 964		107), FOR CONTACT	X	Cable terminal	Kabelsko	5
0610				HOUSING 8521718, 8593964				
0620	20	95 19 398		124), FOR CONTACT	X	Cable terminal	Kabelsko	5
0630				HOUSING 8579955, 9519406				
0640	21	*85 09 846*		111), FOR CONTACT	X	Cable terminal	Kabelsko	5
0650				HOUSING 8378630 NLS - USE 8522575				
0650								
0660	21	85 30 107		107), FOR CONTACT	X	Cable terminal	Kabelsko	3
0670				HOUSING 8530115				
0680	22	*85 14 028*		112), TEMP SENSOR, OIL	X	Cable terminal	Kabelsko	5
0690				PRESSURE SENSOR,				
0700				ALTERNATOR, FOR CONTACT				
0710				HOUSING 8516916 NLS -				
0710				USE 7155716				
0720	22	85 14 036		106),RELAY GROUND SHEET,	X	Cable terminal	Kabelsko	5
0730				JOINT PIECE, FOR CONTACT				
0740				HOUSING, 8516916				
0750	23	85 21 593		107), FAILUR SENSOR,	X	Cable terminal	Kabelsko	5
0760				INTERVAL RELAY, FOR				
0770				CONTACT HOUSING, 8544371				
0780				8574097, 8574121,8579930				
0790				8593899, 8593907,8593915				
0800				8593931, 8593949,9123381				
0810				9506650				
0820	23	91 20 783		106), AC DIOD,	X	Cable terminal	Kabelsko	5
0830				FOR CONTACT HOUSING, 9502048				
0840								

101. Area 0,5-1,0 MM2.
105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
108. Area 0,75-1,0 MM2.
109. Area 1,0-3,5 MM2.
111. Area 0,5-1,4 MM2.
112. Area 0,3-0,8 MM2.
122. Area 0,8-3,4 MM2.
124. Area 0,8-1,5 MM2.

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F18

Cable terminal
1988

Ledningssko
1988

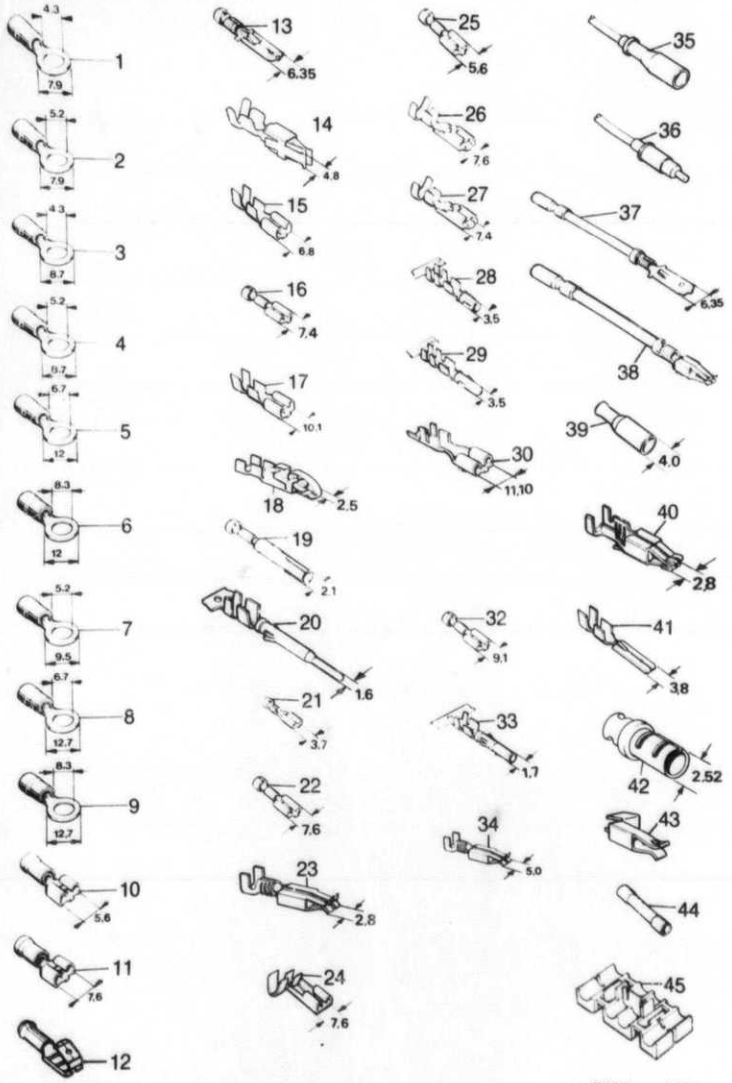

F0768 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
23	91 20 791		113), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, TIME RELAY, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, RELAY LIGHT RELAY MOTOR, RELAY AC, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, FOR CONTACT HOUSING 8533655, 9122789,9122797 9124090, 9124157,9124165 9124173, 9507658,9519422	X	Cable terminal	Kabelsko	5
24	*85 21 676*		107), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		106), FOR CONTACT HOUSING 8521692,9518416 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		107), FOR CONTACT HOUSING 8521692(8582421)	X	Cable terminal	Kabelsko	5
24	95 59 469		106), DIM DIP	X	Cable terminal	Kabelsko	5
25	*85 33 028*		107), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
25	85 82 439		107), LIGHT ENGINE COMPARTMENT	X	Cable terminal	Kabelsko	5
26	*85 41 203*		107), JOINT PIECE, FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		120), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
27	85 41 211		113), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
28	*85 44 298*		110), JOINT PIECE, FOR CONTACT HOUSING, 8521700 8564919, 9525106 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		114), JOINT PIECE	X	Cable terminal	Kabelsko	5
28	85 82 090		107), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
29	*85 44 314*		110), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		114), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
30	79 69 264		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5

105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
110. Area 0,5-2,0 MM2.
113. Area 2,5-4,0 MM2.
114. Area 2,0-4,0 MM2.
120. Area 0,9-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F20

Cable terminal
1988

Ledningssko
1988

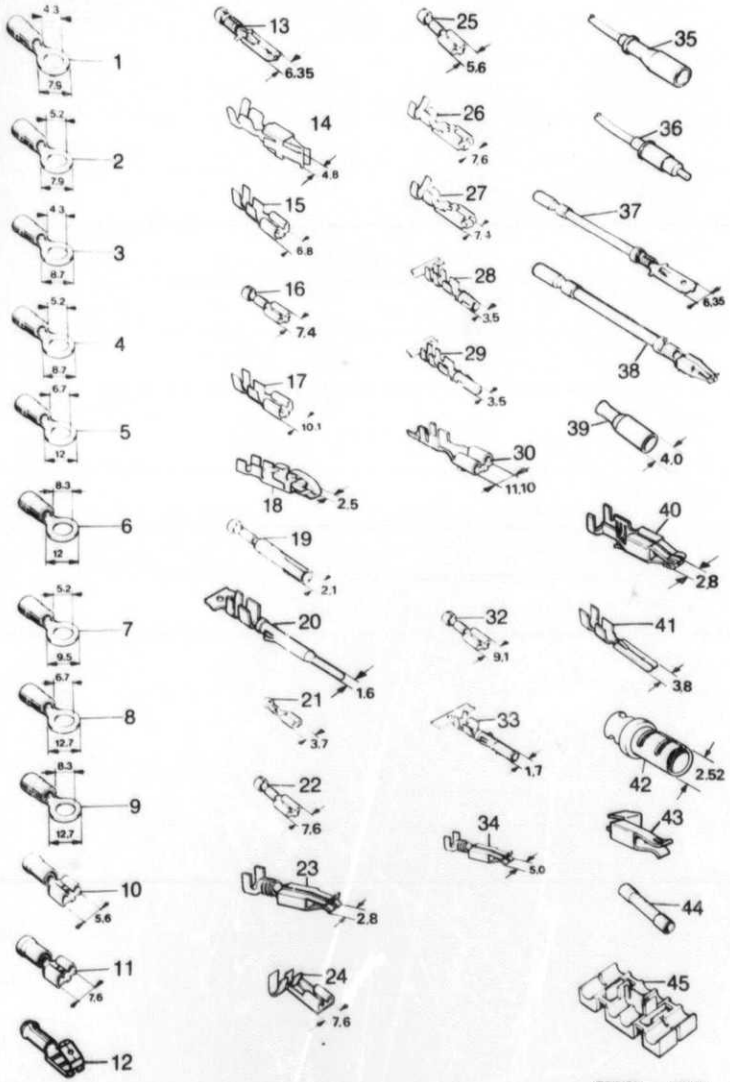

1006	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1350	32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
1370	33	85 87 552		107), FOR CONTACT HOUSING 8521700, 9506643 9512591, 9525106	X	Cable terminal	Kabelsko	5
1400	33	85 87 560		106), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
1420	34	95 21 972		101), RELAY EARTH SHEET, FOR CONTACT HOUSING, 9521972	X	Cable terminal	Kabelsko	5
1450	34	*95 21 980*		102), RELAY EARTH SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
1460	35	78 74 498		FOR CONTACT HOUSING, 9503277, 9503316,9503319 9503418, 9503426,9503434 9503475, 9506668,9519679	X	Connectio.	Skarv	5
1500	36	78 74 506		FOR CONTACT HOUSING, 9501685, 9503327,9506668	X	Connection	Skarv	5
1520	37	85 22 542		18), FOR CONTACT HOUSING 7155120	X	Cable terminal	Kabelsko	5
1540	38	85 22 617		119), AC, FOR CONTACT HOUSING, 8544371,8586802	X	Cable terminal	Kabelsko	5
1560	39	85 82 579		101), JOINT PIECE	X	Cable terminal	Kabelsko	5
1570	40	*95 08 706*		121) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1580	40	*91 20 668*		121), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, FOR CONTACT HOUSING, 8539363, 8579930, 8586802,8593899 8593907, 8593915,8593923 8593931, 8593949,8597064 9123381, 9123548,9123555 9506650, 9519414,9519455 NLS - USE 9120957 9529496, 9561358,9564071 9564089	X	Cable terminal	Kabelsko	5
1690	40	*95 08 748*		102), FOR CONTACT HOUSING, 9514803 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1710	41	95 52 100		121), FOR CONTACT HOUSING, 9122557	X	Cable terminal	Kabelsko	5
1730	42	95 52 175		FOR CONTACT HOUSING, 9552159	X	Cable terminal	Kabelsko	5
1750	42	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1770	43	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
1790	44	71 55 203		17) 40/253 164 008	X	Splice	Skarvhylsa	5
1800	44	71 55 146		18) 40/253 188 007	X	Splice	Skarvhylsa	5
1810	44	71 55 633		19) 40/253 221 006	X	Splice	Skarvhylsa	5
1820	45	85 87 198		117)	X	Cable joint	Ledningsförbindning	3


17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
116. Area 1,3-3,4 MM2.
117. Area 0,5-0,75 MM2.
119. Area 1,0-2,6 MM2.
121. Area 0,75-1,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

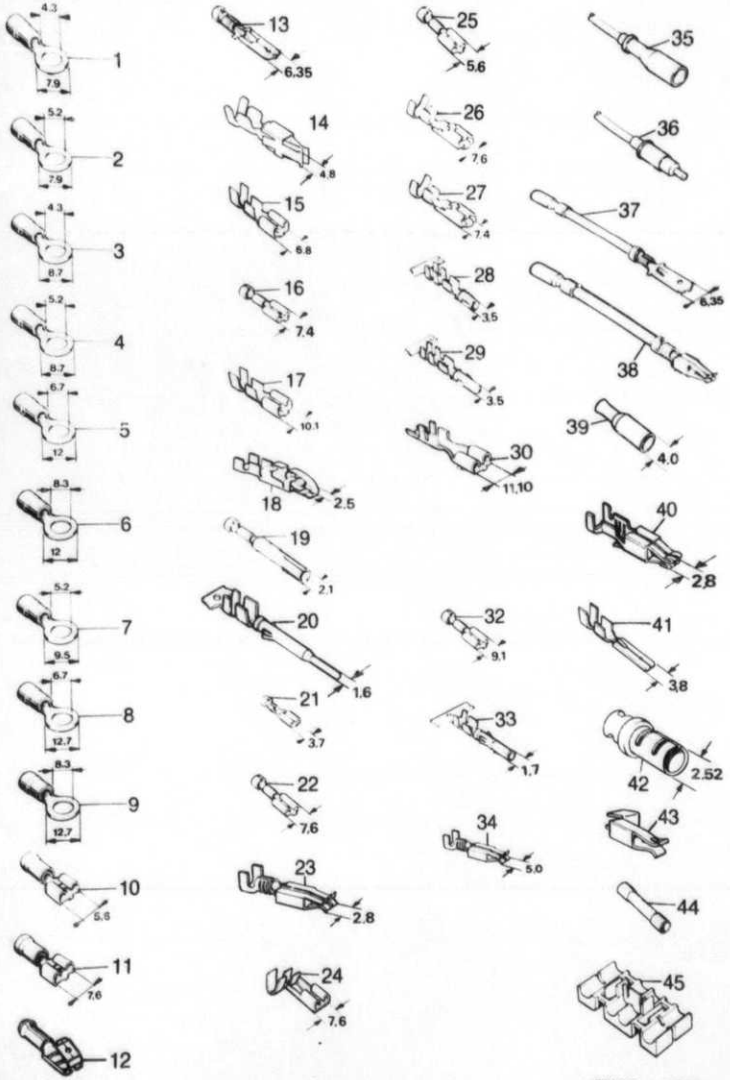

1006	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1830	45	85 21 668		103)	X	Cable joint	Ledningsförbindning	3

103. Area 0,8-2,1 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-F24

Cable terminal
1989

Ledningssko
1989

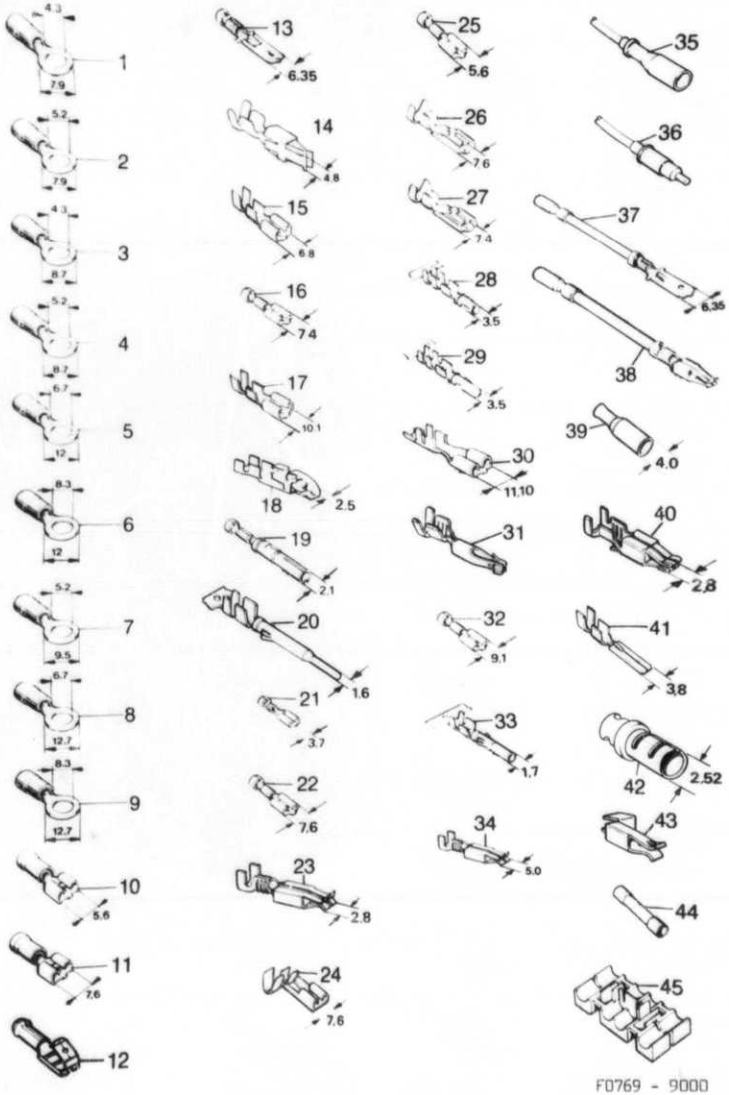

1008	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		17) 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		17) 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		18) 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		18) 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		18) 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		18)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		19) 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		19) 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		19) 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		106), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		21)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		20) 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		22) 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		20) 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		16) 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		20) 45/30 24 650	X	Manifold	Förgrening	3
0170	13	*71 55 062*		100), JOINT PIECE, FOR CONTACT HOUSING, 9502998 9503012 NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0200	13	85 93 089		101), JOINT PIECE TRUNK LID, HIGH MOUNTED STOP LIGHT, FOR CONTACT HOUSING, 9124181, 9502998, 9503012	X	Cable terminal	Kabelsko	5
0250	14	91 20 775		101), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, FOR CONTACT HOUSING 8533697,9507658	X	Cable terminal	Kabelsko	5
0300	15	*71 55 039*		102), EL-CENTRAL, EARTH NLS	X	Cable terminal	Kabelsko	5
0310	15	71 55 716		104), EL-CENTRAL, DOOR SWITCH, CIGARETTE LIGHTER, DISTRIBUTOR TERMINAL, JOINT PIECE TRUNK LID, JOINT PIECE BRAKE LIGHT, FOR CONTACT HOUSING, 8516916,8561623	X	Cable terminal	Kabelsko	5
0380	16	*71 55 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0400	16	*79 72 029*		106), FOR CONTACT HOUSING, 8533697,9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0420	16	79 71 708		107), FOR CONTACT HOUSING 7155096,7155112 8533697	X	Cable terminal	Kabelsko	5


16. Red colour code (area 0,3-1,5 MM2). Röd färgkod (area 0,3-1,5 MM2).
17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
20. Blue colour code (area 1,5-2,5 MM2). Blå färgkod (area 1,5-2,5 MM2).
21. Blue colour code (area 1,0-3,4 MM2). Blå färgkod (area 1,0-3,4 MM2).
22. Yellow colour code (area 3,0-6,0 MM2). Gul färgkod (area 3,0-6,0 MM2).
100. Area 0,8-2,5 MM2.
101. Area 0,5-1,0 MM2.
102. Area 1,5-2,5 MM2.
103. Area 0,8-2,1 MM2.
104. Area 0,4-1,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A0
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

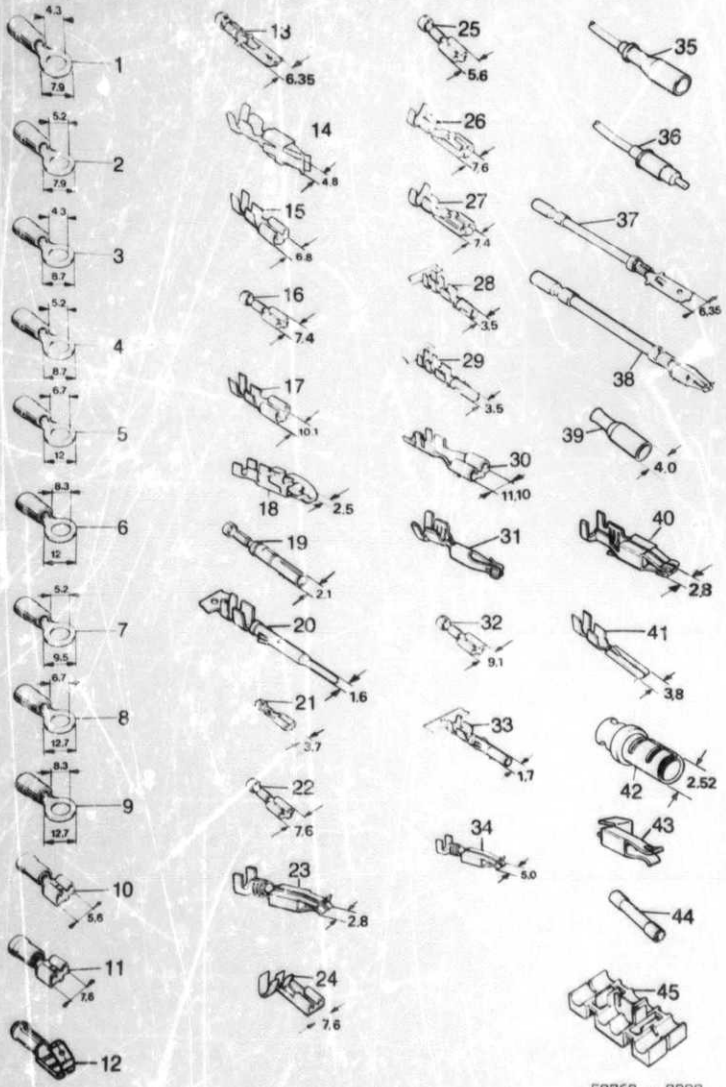

F0769 - 9000

Wiring and fuses

3-G02 Cable terminal 1989

Ledningar och säkringar

Ledningssko 1989

1008	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	16	79 68 068		105), FOR CONTACT HOUSING, 8533697	X	Cable terminal	Kabelsko	5
0460	16	*85 82 454*		107), TEST CONNECTOR,FOR CONTACT HOUSING, 8558538 9512591 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0500	17	79 69 256		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL, DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0530	18	81 35 147		108), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0550	18	81 38 679		109), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0570	19	85 22 583		122), FOR CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
0590	20	85 93 964		107), FOR CONTACT HOUSING 8521718, 8593964	X	Cable terminal	Kabelsko	5
0610	20	95 19 398		124), FOR CONTACT HOUSING, 9519406	X	Cable terminal	Kabelsko	5
0630	20	95 26 401		125), FOR CONTACT HOUSING, 9529512	X	Cable terminal	Kabelsko	5
0650	21	*85 09 846*		111), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0670	21	85 30 107		107), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0690	22	*85 14 028*		112), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0730	22	85 14 036		106), STARTER, EARTH, JOINT PIECE, FOR CONTACT HOUSING, 8516916	X	Cable terminal	Kabelsko	5
0760	23	85 21 593		107), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
0830	23	91 20 783		106), AC DIOD, FOR CONTACT HOUSING, 9502048	X	Cable terminal	Kabelsko	5
0860	23	91 20 791		113), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS,	X	Cable terminal	Kabelsko	5

105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
109. Area 1,0-3,5 MM2.
111. Area 0,5-1,4 MM2.
112. Area 0,3-0,8 MM2.
113. Area 2,5-4,0 MM2.
122. Area 0,8-3,4 MM2.
124. Area 0,8-1,5 MM2.
125. Area 0,2-0,56 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-G04 Cable terminal 1989

Ledningssko 1989

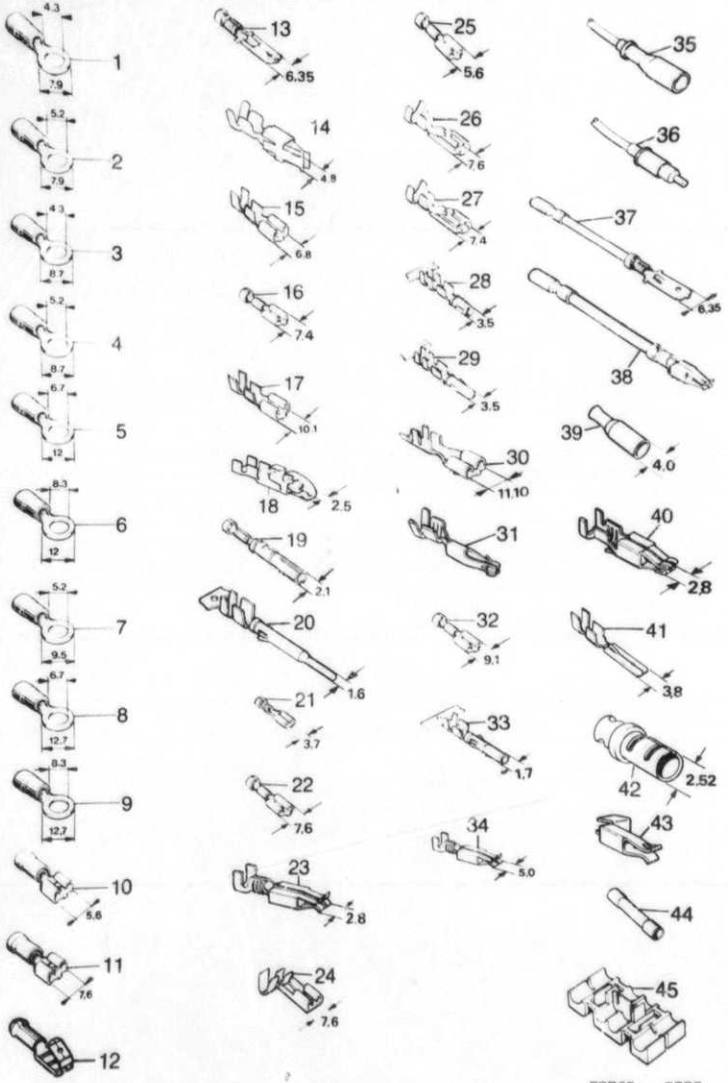

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, FOR CONTACT HOUSING 8533655, 9122789,9122797 9124090, 9124157,9124165 9124173, 9507658,9519422				
24	*85 21 676*		107), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		106), FOR CONTACT HOUSING 8521692,9518416 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		107), LIGHT INSTEP, FOR CONTACT HOUSING 8521692, (8582421)	X	Cable terminal	Kabelsko	5
24	95 59 469		106), DIM DIP	X	Cable terminal	Kabelsko	5
25	*85 33 028*		107), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
25	85 82 439		107), LIGHT ENGINE COMPARTMENT	X	Cable terminal	Kabelsko	5
26	*85 41 203*		107), LIGHT GLOVE BOX, LIGHT CONTROLS, LIGHT INSTEP, SPOTLIGHT, FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		120), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
27	85 41 211		113), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
28	*85 44 298*		110), JOINT PIECE, FOR CONTACT HOUSING, 8521700 8564919, 9525106 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		114), JOINT PIECE	X	Cable terminal	Kabelsko	5
28	85 82 090		107), FOR CONTACT HOUSING 8503525	X	Cable terminal	Kabelsko	5
29	*85 44 314*		110), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		114), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
30	95 15 024		126), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5

105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
110. Area 0,5-2,0 MM2.
113. Area 2,5-4,0 MM2.
114. Area 2,0-4,0 MM2.
120. Area 0,9-2,0 MM2.
126. Area 6,0-8,5 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-G06 Cable terminal 1989

Ledningssko 1989

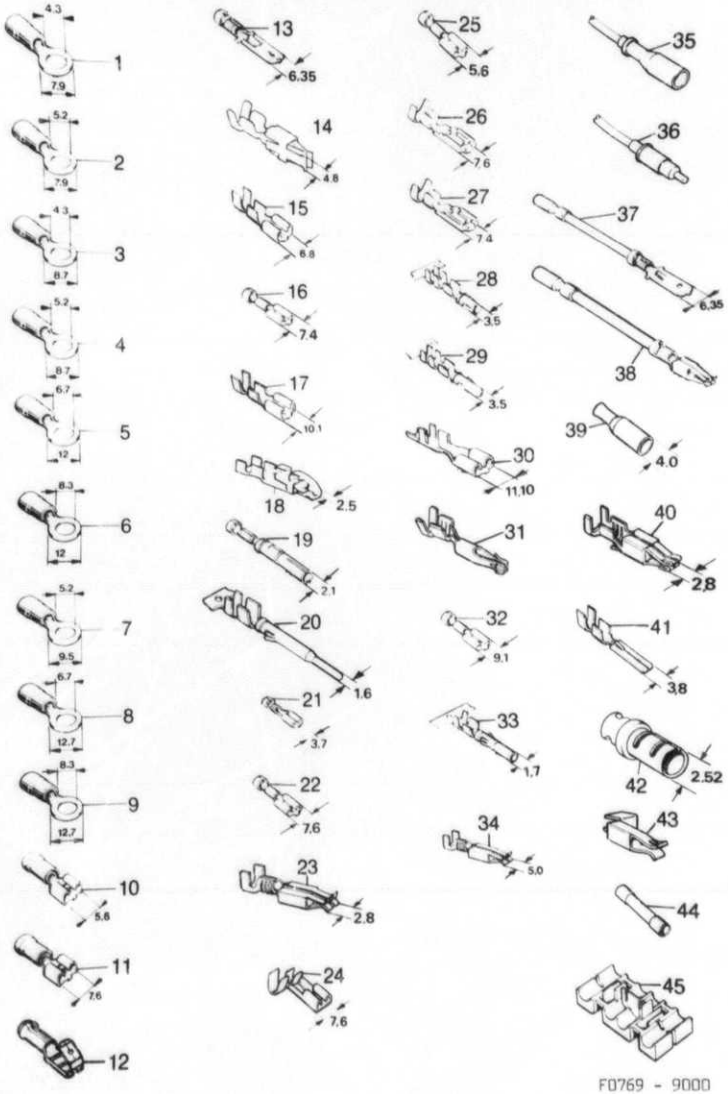

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
30	79 69 264		105), EL-CENTRAL	X	Cable terminal	Kabelsko	5
31	95 27 771		FOR CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
33	85 87 552		107), FOR CONTACT HOUSING 8521700, 9506643 9512591, 9525106	X	Cable terminal	Kabelsko	5
33	85 87 560		106), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
34	95 21 972		101), RELAY EARTH SHEET	X	Cable terminal	Kabelsko	5
34	*95 21 980*		102), RELAY EARTH SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
35	78 74 498		FOR CONTACT HOUSING, 9503277, 9503316,9503319 9503418, 9503426,9503434 9503475, 9506668,9519679	X	Connection	Skarv	5
36	78 74 506		FOR CONTACT HOUSING, 9501685, 9503327,9503426 9506668	X	Connection	Skarv	5
37	85 22 542		18), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
38	85 22 617		119), AC	X	Cable terminal	Kabelsko	5
39	85 82 579		101), JOINT PIECE	X	Cable terminal	Kabelsko	5
40	*95 08 706*		121) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
40	*91 20 668*		121), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, FOR CONTACT HOUSING, 8579930, 8593899 8593907, 8593915,8593923 8593931, 8593949,8597064 9123381, 9123548,9123555 NLS - USE 9120957 9125519, 9506650,9519414 9514803, 9519455,9529496 9564089, 9566266,9566282	X	Cable terminal	Kabelsko	5
41	95 52 100		121), FOR CONTACT HOUSING, 9122557,9518739	X	Cable terminal	Kabelsko	5
41	*95 52 126*		101), FOR CONTACT HOUSING, 9122557 NLS - USE 9552100	X	Cable terminal	Kabelsko	5
42	95 52 175		FOR CONTACT HOUSING, 9552159, 9552167	X	Cable terminal	Kabelsko	5
42	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
43	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
44	71 55 203		17) 40/253 164 008	X	Splice	Skarvhylsa	5
44	71 55 146		18) 40/253 188 007	X	Splice	Skarvhylsa	5
44	71 55 633		19) 40/253 221 006	X	Splice	Skarvhylsa	5

17. Red colour code (area 0,25-1,6 MM2). Röd färgkod (area 0,25-1,6 MM2).
18. Blue colour code (area 1,0-2,6 MM2). Blå färgkod (area 1,0-2,6 MM2).
19. Yellow colour code (area 2,7-6,6 MM2). Gul färgkod (area 2,7-6,6 MM2).
101. Area 0,5-1,0 MM2.
105. Area 4,0-6,0 MM2.
106. Area 1,0-2,5 MM2.
107. Area 0,5-1,5 MM2.
116. Area 1,3-3,4 MM2.
119. Area 1,0-2,6 MM2.
121. Area 0,75-1,5 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16

3-G08 Cable terminal 1989

Ledningssko 1989

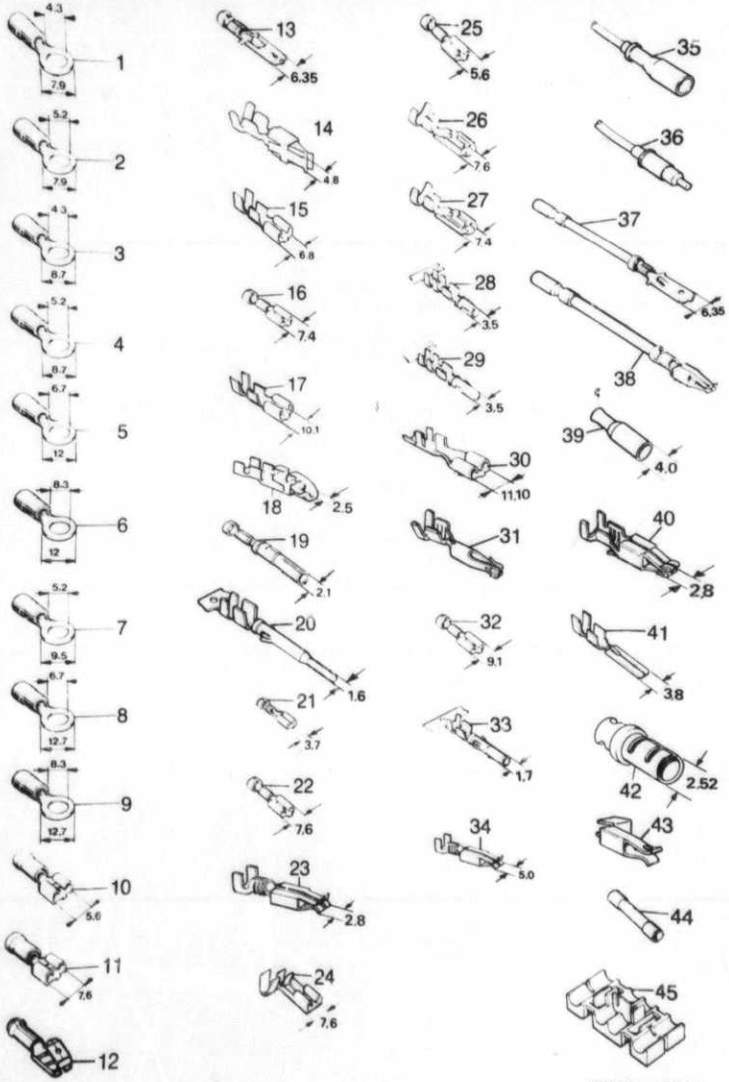

1008	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1930	45	85 87 198		117)	X	Cable joint	Ledningsförbindning	3
1940	45	85 21 668		103)	X	Cable joint	Ledningsförbindning	3

103. Area 0,8-2,1 MM2.
117. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E16



Transmission
Kraftöverföring
Transmisión

TABLE OF CONTENTS

Clutch			
Clutch, clutch disc		4 : 5	3-H06
Clutch control			
Pedal, master cylinder		4 : 7	3-H08
Gear box, manual			
Gear box assy		4 : 11	3-H12
Gear box case		4 : 13	3-H14
Release bearing, slave cylinder		4 : 17	3-H18
Gear shift forks, -shafts		4 : 19	3-H20
Shafts, gears		4 : 23	3-H24
Differential, inner universal joint		4 : 27	3-I04
Gear box control, manual			
Gear shift lever, -housing and -rod		4 : 31	3-I08
Drive shafts, outer universal joint		4 : 35	3-I12
Gear box, automatic			
Gear box assy		4 : 39	3-I16
Converter housing, converter		4 : 41	3-I18
Gear box case, cover		4 : 43	3-I20
Planetary gear, pinion Part 1		4 : 47	3-I24
Planetary gear, pinion Part 2		4 : 51	3-J04
Planetary gear, pinion Part 3		4 : 53	3-J06
Control system		4 : 59	3-J12
Controls in gear box		4 : 61	3-J14
Differential, inner universal joint		4 : 29	3-I06
Gear box control, automatic			
Gear selector lever, -housing and -cable		4 : 65	3-J18
Drive shafts, outer universal joint		4 : 35	3-I12
Rear axle, see group 7			
Complete sets			
Transmission		4 : 67	3-J20

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H03

INNEHÅLLSFÖRTECKNING

Koppling		
Koppling, lamell	4 : 5	3-H06
Kopplingsmanövrering		
Pedal, huvudcylinder	4 : 7	3-H08
Växellåda, manuell		
Växellåda kpl	4 : 11	3-H12
Växellådshus	4 : 13	3-H14
Urtrampningslager, slavcylinder	4 : 17	3-H18
Växelförargaffiar, -axlar	4 : 19	3-H20
Axlar, kugghjul	4 : 23	3-H24
Differential, inre knut	4 : 27	3-I04
Växellådsmanövrering, manuell		
Växelspak, växelspakshus	4 : 31	3-I08
Drivaxlar yttre knut	4 : 35	3-I12
Växellåda, automatisk		
Växellåda kpl	4 : 39	3-I16
Momentomvandlarhus, momentomvandlare	4 : 41	3-I18
Växellådshus, lock	4 : 43	3-I20
Planetväxel, pinjong Del 1	4 : 47	3-I24
Planetväxel, pinjong Del 2	4 : 51	3-J04
Planetväxel, pinjong Del 3	4 : 53	3-J06
Kontrollsystem	4 : 59	3-J12
Reglage i växellådshus	4 : 61	3-J14
Differential, inre knut	4 : 29	3-I06
Växellådsmanövrering, automatisk		
Växelväljarspak, hus och kabel	4 : 65	3-J18
Drivaxlar, yttre knut	4 : 35	3-I12
Bakaxel, se grupp 7		
Satser		
Kraftöverföring	4 : 67	3-J20

3-H04

SUMARIO

Embrague		
Embrague, disco de embrague	4 : 5	3-H06
Mando de embrague		
Pedal, cilindro principal	4 : 7	3-H08
Caja de cambios, manual		
Caja de cambios, compl.	4 : 11	3-H12
Cárter de caja de cambios	4 : 13	3-H14
Cojinete de empuje, cilindro esclavo	4 : 17	3-H18
Horquillas de cambio, ejes de horquilla de cambio	4 : 19	3-H20
Ejes, engranajes	4 : 23	3-H24
Diferencial, junta homocinetica interior	4 : 27	3-I04
Mandos del cambio, manual		
Palanca, caja y barra de cambios	4 : 31	3-I08
Eje de accionamiento, junta homocinetica exterior	4 : 35	3-I12
Caja de cambios, automatica		
Caja de cambios, compl.	4 : 39	3-I16
Carter de convertidor de par, convertidor	4 : 41	3-I18
Carter de caja de cambios, tapas	4 : 43	3-I20
Engranajes planetarios, pinon de a taque 1a parte	4 : 47	3-I24
Engranajes planetarios, pinon de a taque 2a parte	4 : 51	3-J04
Engranajes planetarios, pinon de a taque 3a parte	4 : 53	3-J06
Sistem de control	4 : 59	3-J12
Mando de caja de cambios	4 : 61	3-J14
Differencial y junta homocinetica interior	4 : 29	3-I06
Mando de caja de cambios		
Palanca selectora, caja y cable	4 : 65	3-J18
Eje de accionamiento, junta homocinetica exterior	4 : 35	3-I12
Eje trasero, ver grupo 7		
Juegos completos		
Transmision	4 : 67	3-J20

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H06

Clutch, clutch disc

Koppling, lamell

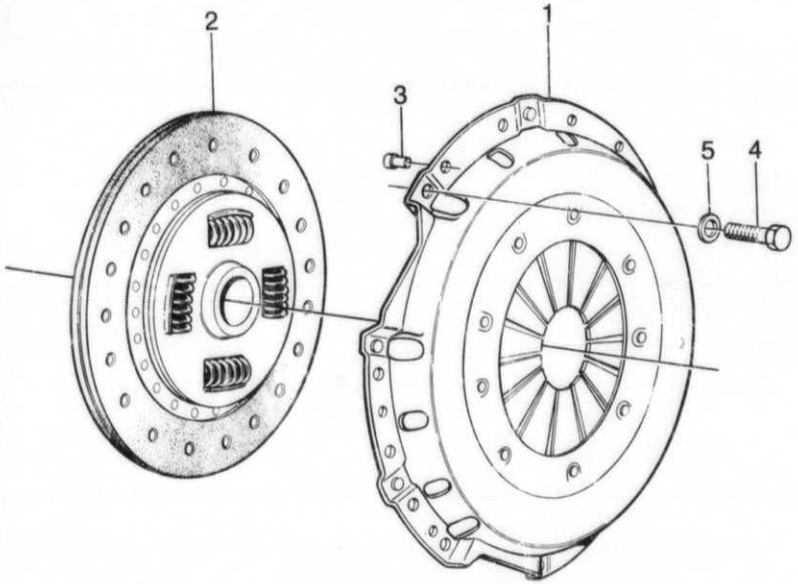

R 7163-9000

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 22 589	S	TURBO	1	Pressure plate	Tryckskiva	2
0015	1	87 22 589	S	1896, I	1	Pressure plate	Tryckskiva	2
0040	1	87 28 123	S	1987, I(8720245,8725400)	1	Pressure plate	Tryckskiva	2
0080	2	87 27 695		50), TURBO (8723371,	1	Clutch disc	Lamell	2
0081				8724833,8725533,8727950)	1			
0090	2	87 27 695	S	50), 1986, I (8723371)	1	Clutch disc	Lamell	2
0100	2	*87 26 606*	S	50), 1987-, I NLS - USE	1	Clutch disc	Lamell	2
0100				8730806				
0110	3	*79 49 712*		NLS - USE 8034472	3	Pin	Pinne	5
0120	3	83 07 407		1987-, I	3	Pin	Pinne	5
0130	4	80 82 968			6	Screw	Skruv	5
0140	5	83 80 982			6	Washer	Bricka	5
0150								
0160		*87 81 049*		49)	X	Clutch kit	Kopplingssats	2
0170				See page 4-067, 3-J20				
0170				NLS - USE 8781320				
0180		*87 81 056*		49), 1987-, I	X	Clutch kit	Kopplingssats	2
0190				See page 4-067, 3-J20				
0190				NLS - USE 8781312				
0200		*87 81 254*		50)	X	Clutch kit	Kopplingssats	2
0210				See page 4-067, 3-J20				
0210				NLS - USE 8781320				
0220		*87 81 262*		50), 1987-, I	X	Clutch kit	Kopplingssats	2
0230				See page 4-067, 3-J20				
0230				NLS - USE 8781338				

49. Asbestos Asbest
50. Asbestos free. Asbestfri.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H08

Pedal, master cylinder

Pedal, huvudcylinder

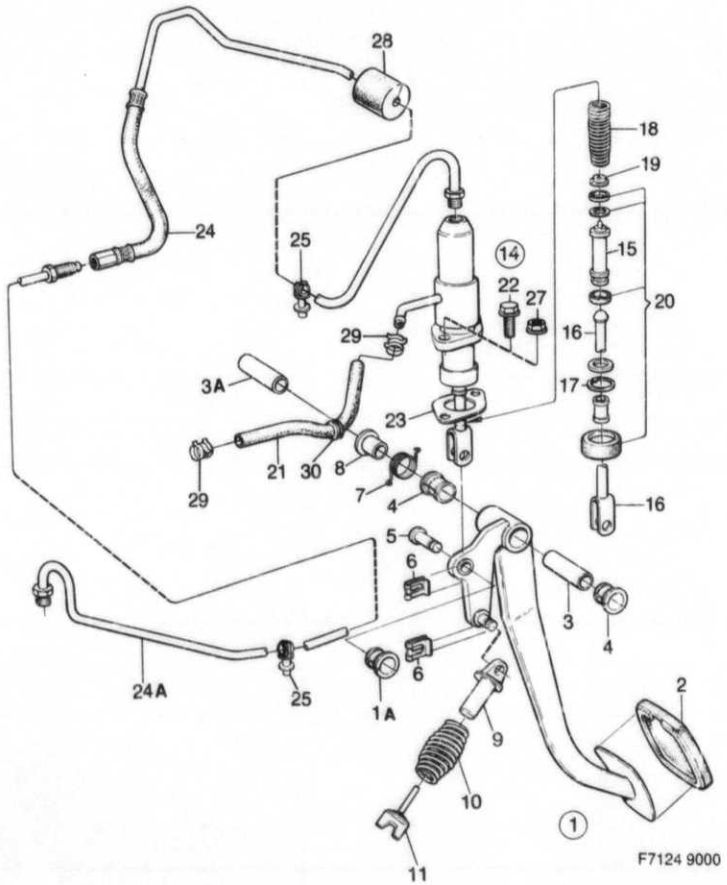

F7124 9000

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 57 367		TURBO	1	Clutch pedal	Kopplingspedal	6
0020	1	*89 63 639*		I NLS - USE 8957367	1	Clutch pedal	Kopplingspedal	6
0030	1	89 65 535		RHD, (8964165)	1	Clutch pedal	Kopplingspedal	6
0040	1A	89 59 082		PART OF 8963639	1	.Plastic bushing	.Plastbussning	4
0050	2	89 16 272		PART OF 8963639	1	.Pedal pad	.Pedalgummi	5
0060	2	89 65 345		PART OF 8965535, RHD	1	.Pedal pad	.Pedalgummi	3
0070	3	89 50 933			1	Spacer tube	Distansrör	6
0080	3A	89 50 297		RHD	1	Spacer tube	Distansrör	5
0090	4	89 62 128			2	Bearing bushing	Lagerbussning	4
0100	5	89 56 450			2	Bolt	Bult	5
0110	5	*89 56 443*		RHD NLS - USE 4105821	1	Bolt	Bult	5
0120	6	82 52 553			2	Clip	Clips	5
0130	7	89 62 052		-1987	1	Return spring	Returfjäder	3
0140	7	89 66 756		RHD	1	Return spring	Returfjäder	3
0150	8	*89 62 045*		-1987 NLS - USE 8970196	1	Spacer sleeve	Distanshylsa	6
0160	8	89 70 196		1988-	1	Spacer sleeve	Distanshylsa	6
0170	9	89 55 924		1988-, LHD	1	Guide	Styrning	6
0180	10	89 58 316		1988-, LHD	1	Spring	Fjäder	3
0190	11	89 57 813		1988-, LHD	1	Guide	Styrning	6
0200	14	• 43 85 001		7), (8957169)	1	Clutch cylinder	Kopplingscylinder	2
0210	14	• 43 85 019		7), RHD (8957292)	1	Clutch cylinder	Kopplingscylinder	2
0212	15	• 43 85 027		162)	1	.Piston	.Kolv	6
0215	16	• 43 85 035		162)	1	.Push rod	.Stötstång	5
0220	16	*89 57 201*		160), -1987 NLS - USE 8968711	1	.Push rod	.Stötstång	5
0230	16	89 68 711		160), 1988-	1	.Push rod	.Stötstång	5
0240	16	*89 57 318*		161), -1987, RHD NLS - USE 4385035	1	.Push rod	.Stötstång	5
0250	16	89 68 729		161), 1988-, RHD	1	.Push rod	.Stötstång	5
0260	17	73 13 232		(8957193)	1	.Lock ring	.Låsring	5
0280	18	89 86 622			1	.Spring	.Fjäder	3
0290	19	89 45 156			1	.Spring support	.Fjäderstöd	5
0300	20	89 93 156		See page 4-067, 3-J20	1	.Repair kit	.Reparationssats	1
0310	21	89 57 227			1	Hose	Slang	5
0320	21	*89 66 855*		143), ABS NLS - USE 4027793	1	Hose	Slang	5
0330	21	40 27 793		144), ABS	1	Hose	Slang	5
0340	21	89 57 326		RHD	1	Hose	Slang	5
0350	21	*89 66 889*		143), RHD, ABS NLS - USE 4385068	1	Hose	Slang	5
0360	21	41 18 949		144), RHD, ABS	1	Hose	Slang	5
0370	22	79 75 113			2	Screw	Skruv	5
0380	23	89 41 478			1	Gasket	Packning	5
0390	24	*89 63 712*		-1986, (8962920) NLS - USE 8966806	1	Hose	Slang	2
0400	24	89 66 806		1987-, 123)	1	Clutch hose	Kopplingsslang	2
0410	24	40 28 833		124)	1	Clutch hose	Kopplingsslang	2
0420	24	*89 64 009*		-1986, RHD NLS - USE 7598188	1	Hose	Slang	2
0440	24	75 98 188		1987-, 123), RHD(8966905)	1	Clutch hose	Kopplingsslang	2
0450	24	*40 28 791*		124), RHD NLS - USE 4280921	1	Clutch hose	Kopplingsslang	2
0460	24A	89 63 704		-1986	1	Tube	Rör	2
0470	24A	*89 66 814*		1987-, 123) NLS - USE 4028742	1	Tube	Rör	2

7. Gear box 323504-
123. Ch. --K1022036, --K2012843, --K8000986.
124. Ch. K1022037--, K2012844--, K8000987--.
143. Ch. --K1027593, --K2016419.
144. Ch. K1027594--, K2016420--.
160. Part of: 8957169 Ingår i: 8957169
161. Part of: 8957292 Ingår i: 8957292
162. Part of: 4385001, 4385019 Ingår i: 4385001, 4385019

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H10

Pedal, master cylinder

Pedal, huvudcylinder

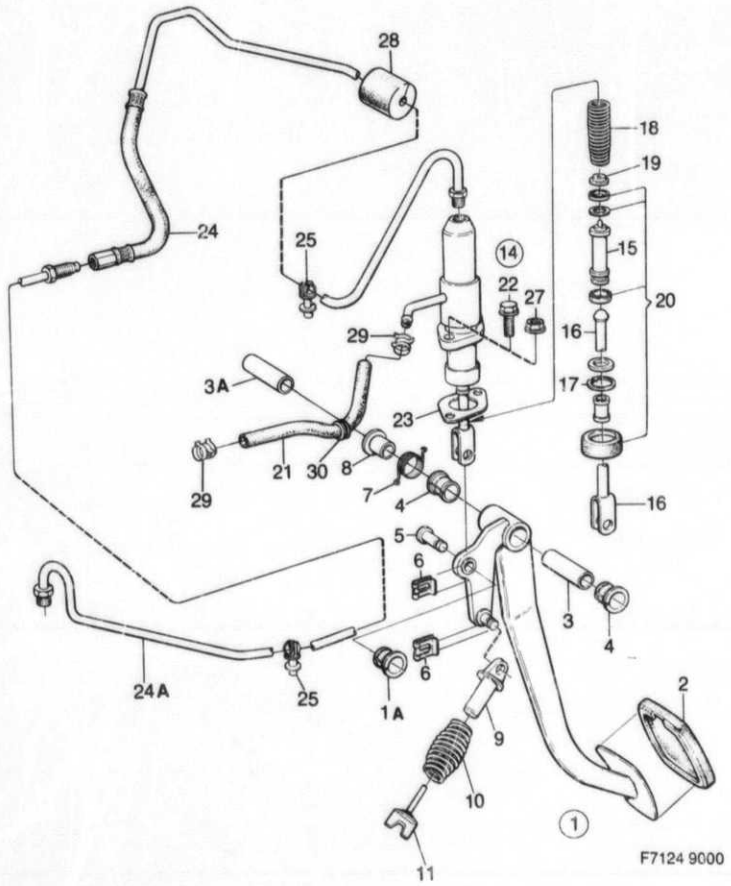

F7124 9000

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	24A	40 28 742		124)	1	Tube	Rör	2
0490	25	79 63 887		123)	2	Tube clamp	Rörklamma	5
0500	25	73 52 651		124)	2	Tube clamp	Rörklamma	5
0510	27	79 71 922		RHD	2	Nut	Mutter	3
0520	28	*89 66 103*		1986-1987 NLS - USE 7599004	1	Grommet	Genomföring	3
0520								
0530	28	75 99 004		1988-	1	Grommet	Genomföring	3
0540	29	79 73 605		1987-	1	Hose clamp	Slangklamma	5
0550	29	79 73 605		ABS	2	Hose clamp	Slangklamma	5
0560	30	73 99 199		ABS	1	Grommet	Genomföring	4

123. Ch. -K1022036, -K2012843, -K8000986.
124. Ch. K1022037-, K2012844-, K8000987-.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H12

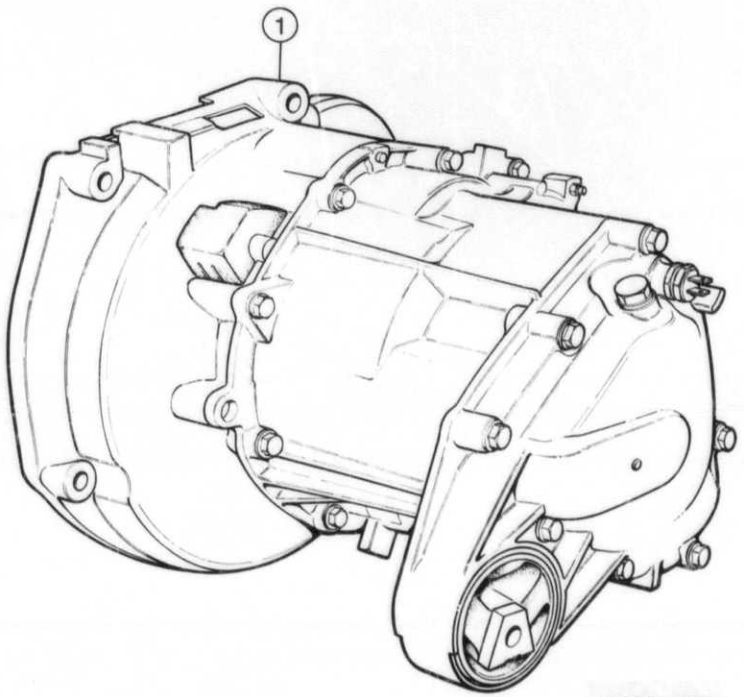

R 6661–9000

	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0175								
0010	1	*87 20 005*		-1986, TURBO	1	Gearbox	Växellåda	5
0020				MARKED: GMT 5301 NLS				
0030	1	*87 24 007*		6), I	1	Gearbox	Växellåda	5
0040				MARKED: GMT 5101 NLS				
0050	1	*87 24 254*		7), -1986, I	1	Gearbox	Växellåda	5
0060				MARKED: GMT 5201 NLS				
0070	1	*87 24 635*		700), 1987, I	1	Gearbox	Växellåda	5
0080				MARKED: GMT 5202 NLS -				
0080				USE 7896939				
0090	1	*87 24 767*		700), 1987, I	1	Gearbox	Växellåda	5
0100				MARKED: GMT 5203 NLS -				
0100				USE 7896947				
0110	1	*87 24 502*		700), 1987, TURBO	1	Gearbox	Växellåda	5
0120				MARKED: GMT 5401 NLS -				
0120				USE 8823122				
0130	1	*87 25 459*		700), 1988, I	1	Gearbox	Växellåda	5
0140				MARKED: GM 65101 NLS -				
0140				USE 8823130				
0150	1	*87 25 426*		700), 1988, TURBO	1	Gearbox	Växellåda	5
0160				MARKED: GM 75401 NLS -				
0160				USE 8823122				
0170	1	*87 27 125*		500,700), 1989-, I	1	Gearbox	Växellåda	5
0180				MARKED: 65102 NLS - USE				
0180				8727547				
0190	1	*87 27 067*		500,700), 1989-, TURBO	1	Gearbox	Växellåda	5
0200				MARKED: 75301 NLS - USE				
0200				8728321				

6. Gear box -323503
7. Gear box 323504-
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H14

Gear box case — Växellådshus

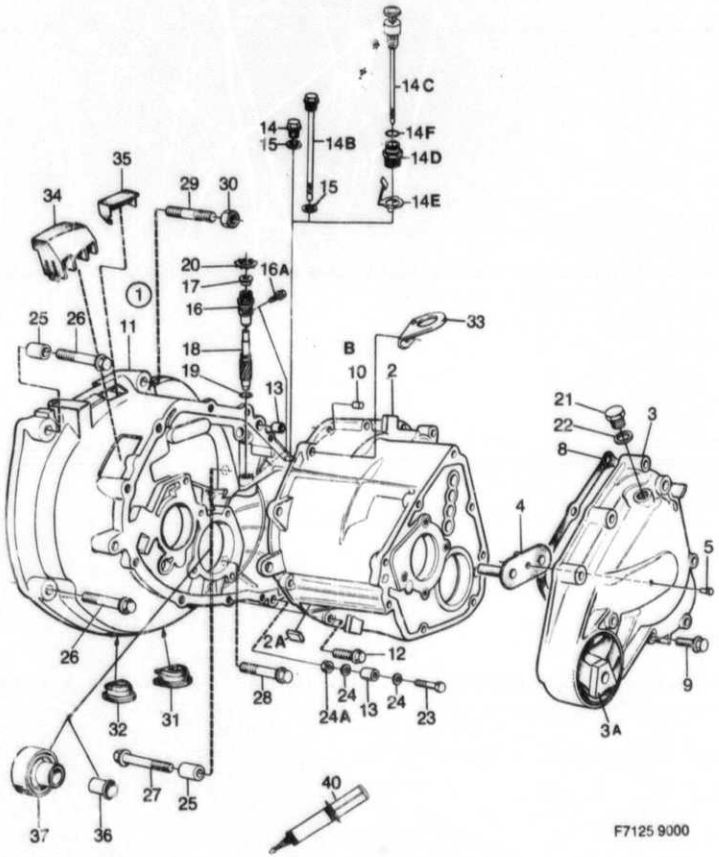

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	2	*87 25 186*		153,157), -1987 NLS - USE 8727760	1	.Gearbox housing	.Växellådshus	6
0030	2	*87 26 705*		1988- NLS - USE 8727760	1	.Gearbox housing	.Växellådshus	6
0050	2A	87 27 745		1986- (8721458)	1	.Magnet	.Magnet	3
0060	3	87 23 983		14)	1	.Cover	.Lock	5
0070	3	87 24 619	S	15,163)	1	.Cover	.Lock	5
0075	3	• 87 28 107	S	164)	1	.Cover	.Lock	5
0077	3A			1)	1	..Vibration damper	..Vibrationsdämpare	
0080	4	87 22 183			1	..Oil collector	..Oljesamlare	5
0090	5	80 94 732			1	..Rivet	..Nit	5
0100	8	87 28 685		26) (8719627)	1	.Gasket	.Packning	3
0110	8	87 25 061	S	27)	1	.Gasket	.Packning	3
0120	9	81 25 221			8	.Screw	.Skruv	5
0130	10	87 01 658			1	.Sintered compact	.Sinterkropp	3
0140	11	87 25 178		153), -1987	1	.Bell housing	.Kopplingskåpa	5
0150	11	87 26 697		1988-,151)	1	.Bell housing	.Kopplingskåpa	5
0160	11	87 27 521		152)	1	.Bell housing	.Kopplingskåpa	5
0170	12	81 25 221			16	.Screw	.Skruv	5
0180	13	87 23 967			2	.Guide pin	.Styrstift	5
0190	14	81 23 762		22)	1	.Plug	.Propp	4
0200	14B	87 24 924		23), -1988	1	.Dipstick	.Mätsticka	3
0210	14C	87 26 762		500), 1989-	1	.Dipstick	.Mätsticka	3
0220	14D	87 26 770		500), 1989-	1	.Nipple	.Nippel	3
0230	14E	87 27 737		500), 1989-	1	.Spring	.Fjäder	5
0240	14F	81 09 642		500), 1989-	1	.O-ring	.O-ring	2
0250	15	81 24 182		-1988	1	.Gasket	.Packning	2
0290	16	87 27 828		(8721789,8723884,8724858	1	.Sleeve	.Hylsa	5
0300	16A	87 24 882		29)	1	.Screw	.Skruv	5
0310	17	87 13 463		28)	1	.Seal	.Tätning	4
0320	17	87 24 874	S	29)	1	.Seal	.Tätning	4
0330	18	*87 20 641*		-1985 NLS - USE 8723892	1	.Gear	.Kugghjul	4
0340	18	87 23 892		1986-1988	1	.Gear	.Kugghjul	5
0350	18	87 27 240		500), 1989-	1	.Gear	.Kugghjul	5
0360	19	87 11 707			1	.O-ring	.O-ring	5
0370	20	87 17 308		28)	1	.Locking	.Låsning	5
0380	21	87 23 405		4,163)	1	.Screw	.Skruv	5
0390	22	81 24 133		4,163)	1	.Gasket	.Packning	5
0400	23	81 25 213		-1987	2	.Screw	.Skruv	5
0410	23	81 25 221		1988-	2	.Screw	.Skruv	5
0420	24	70 61 328			4	.Washer	.Bricka	5
0430	24A	80 74 106		-1987	2	.Nut	.Mutter	5
0440	24A	81 51 235		1988-	2	.Nut	.Mutter	5
0450	25	83 46 470			2	Guide	Styrning	
0460	26	79 74 819			3	Screw	Skruv	5
0470	27	79 74 801			1	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
4. For cars without gear indicator. För bilar utan växlingsindikator.
14. Gear box --331129
15. Gear box 331130--
22. Gear box --341090
23. Gear box 341091--
26. Gear box --347972
27. Gear box 347973--
28. Gear box --344859
29. Gear box 344860--
151. Gear box --341090.
152. Gear box 341091--.
153. See PI group 4, No. 1/90. Se PI grupp 4, No. 1/90.
157. Superseded by 87 27 760, 87 24 924 and 81 24 182. Ersatt av 87 27 760, 87 24 924 och 81 24 182.
163. Gear box --141888
164. Gear box 141889--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H16

Gear box case

Växellådshus

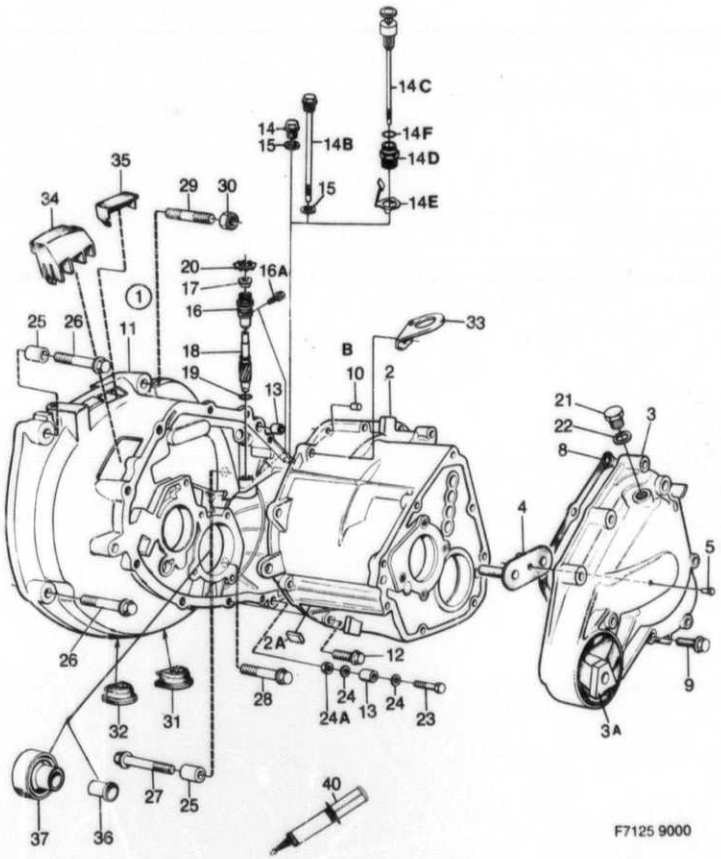


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	28	79 74 793			1	Screw	Skruv	5
0490	29	75 53 688			1	Stud	Pinnskruv	5
0500	30	79 76 962			1	Nut	Mutter	5
0510	31	*93 86 459*		NLS - USE 4119640	2	Plug	Plugg	5
0520	32	*93 86 467*		NLS - USE 4119657	2	Plug	Plugg	5
0530	33	87 22 506			1	Lifting eye	Lyftögla	5
0540	34	87 22 449			1	Cover	Lock	6
0550	35	87 23 223			1	Cover	Lock	6
0560	36	87 23 538			1	Tube	Rör	4
0570	37	87 19 825			1	Seal	Tätning	4
0600	40	• 93 21 795		25 ML	X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

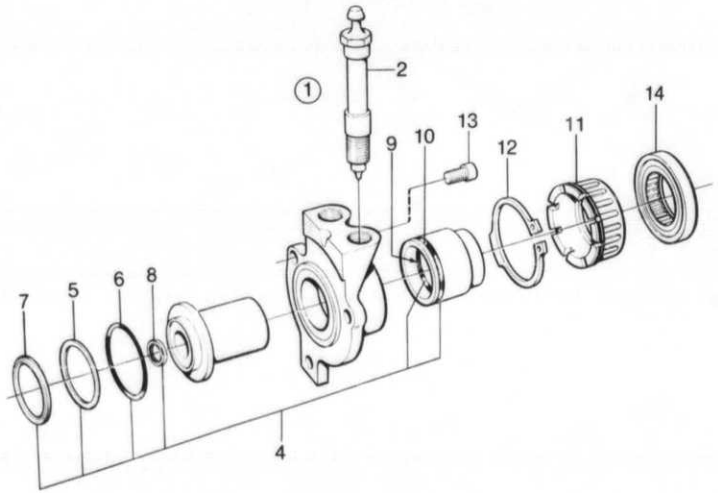

F0457 - 9000

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0040	1	87 81 189		(8781130)	1	.Slave cylinder	.Slavcylinder	2
0050				See page 4-067, 3-J20				
0060	2	87 22 746			1	..Nipple	..Nippel	6
0070	4	87 81 122		See page 4-067, 3-J20	1	..Sealing kit	..Tätningssats	1
0080	5	87 18 579	S		1	...O-ring	...O-ring	3
0090	6	*87 23 488*	S	NLS - USE 8723520	1	...O-ring	...O-ring	3
0100	7	87 23 520	S	ALT. TO 8718579 AND 8723488	1	...O-ring	...O-ring	3
0120	8	87 22 001	S	1)	1	...Seal	...Tätning	2
0130	9	87 22 126	S	1)	1	...Seal	...Tätning	3
0140	10	87 22 118	S	1)	1	...Seal	...Tätning	3
0150	11	87 22 100			1	..Seal	..Tätning	6
0160	12	87 14 420			1	..Retaining ring	..Spårring	5
0170	13	87 23 322			3	.Screw	.Skruv	5
0180	14	87 21 995	S		1	.Release bearing	.Urtrampningslager	2

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H20

Gear shift forks, gear shift shafts

Växelförargafflar, växelföraraxlar

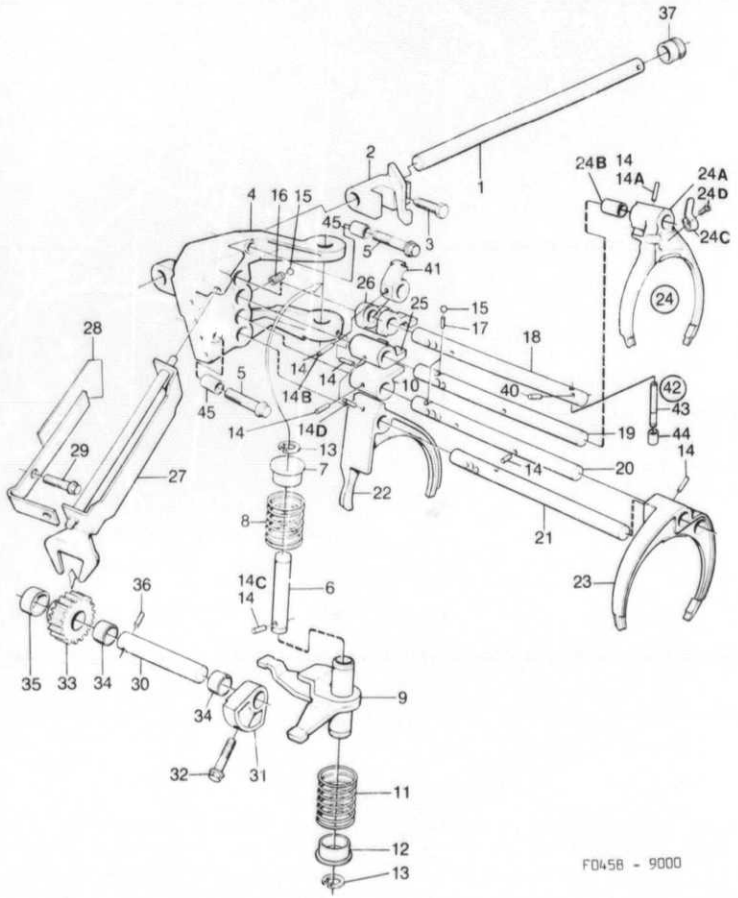

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	*87 19 635*		NLS - USE 8730772	1	. Gear rod	. Växelstång	6
0030	2	87 19 643			1	. Shifter	. Växlare	5
0040	3	87 19 999			1	. Screw	. Skruv	5
0050	4	87 21 466			1	. Bearing bracket	. Lagerbock	5
0060	5	81 25 221			2	. Screw	. Skruv	5
0070	6	87 21 557			1	. Pivot pin	. Lagertapp	6
0080	7	87 21 565			1	. Guide	. Styrning	4
0090	8	87 21 573			1	. Spring	. Fjäder	5
0100	9	87 21 581			1	. Gear selector	. Växelförare	6
0110	10	87 19 593			1	. Companion flange	. Medbringare	5
0120	11	87 21 615			1	. Spring	. Fjäder	5
0130	12	87 21 623			1	. Spring guide	. Fjäderstyrning	4
0140	13	*87 21 631*		115) NLS - USE 8726754	2	. Retaining ring	. Spårring	5
0150	13	87 26 754		116)	2	. Retaining ring	. Spårring	5
0160	14	81 17 657			7	. Pin	. Pinne	5
0170	14A	80 34 373		15)	1	. Pin	. Pinne	5
0180	14B	81 17 640		15)	1	. Roll pin	. Spännstift	5
0190	14C	80 49 553		500), 1989-	1	. Roll pin	. Spännstift	5
0200	14D	81 17 640		500), 1989-	1	. Roll pin	. Spännstift	5
0210	15	87 17 027			7	. Ball	. Kula	5
0220	16	87 23 397			4	. Spring	. Fjäder	5
0230	17	87 19 684			2	. Pin	. Pinne	5
0240	18	87 20 161		14)	1	. Shift rail R	. Växelföraraxel R	6
0260	18	87 24 395		15)	1	. Shift rail R	. Växelföraraxel R	6
0280	19	87 19 718		14)	1	. Shift rail 5	. Växelföraraxel 5	6
0300	19	*87 24 387*		15) NLS - USE 8727927	1	. Shift rail 5	. Växelföraraxel 5	6
0320	20	87 19 700			1	. Shift rail 3/4	. Växelföraraxel 3/4	6
0340	21	87 19 692			1	. Shift rail 1/2	. Växelföraraxel 1/2	6
0360	22	87 22 332			1	. Gear selector fork 1/2	. Växelförargaffel 1/2	5
0380	23	*87 19 551*		137) NLS - USE 8727869	1	. Gear selector fork 3/4	. Växelförargaffel 3/4	5
0400	23	87 27 869		138)	1	. Gear selector fork 3/4	. Växelförargaffel 3/4	5
0420	24	87 19 569		14)	1	. Gear selector fork 5	. Växelförargaffel 5	5
0460	24	87 26 689		15) (8724403)	1	. Gear selector fork 5	. Växelförargaffel 5	5
0480	24A	87 24 296		15)	1	.. Gear selector fork	.. Växelförargaffel	5
0490	24B	87 24 411		15)	1	.. Bushing	.. Bussning	4
0500	24C	87 24 429		15,34)	1	.. Spring	.. Fjäder	5
0510	24C	87 25 368		35)	1	.. Spring	.. Fjäder	5
0520	24C	87 24 668		15,34), ALT TO 8724429	1	.. Spring	.. Fjäder	5
0530	24D	87 24 825		15,34), ALT TO 8724429	1	.. Screw	.. Skruv	5
0540	25	87 19 601			1	. Companion flange	. Medbringare	5
0550	26	87 19 619		14)	1	. Companion flange	. Medbringare	5
0560	26	87 24 346		15)	1	. Companion flange	. Medbringare	5

14. Gear box --331129
15. Gear box 331130--
34. Gear box --351477
35. Gear box 351478--
115. Gear box --116602.
116. Gear box 116603--.
137. Gear box --145684.
138. Gear box 145685--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H22

Gear shift forks, gear shift shafts

Växelförargafflar, växelföraraxlar

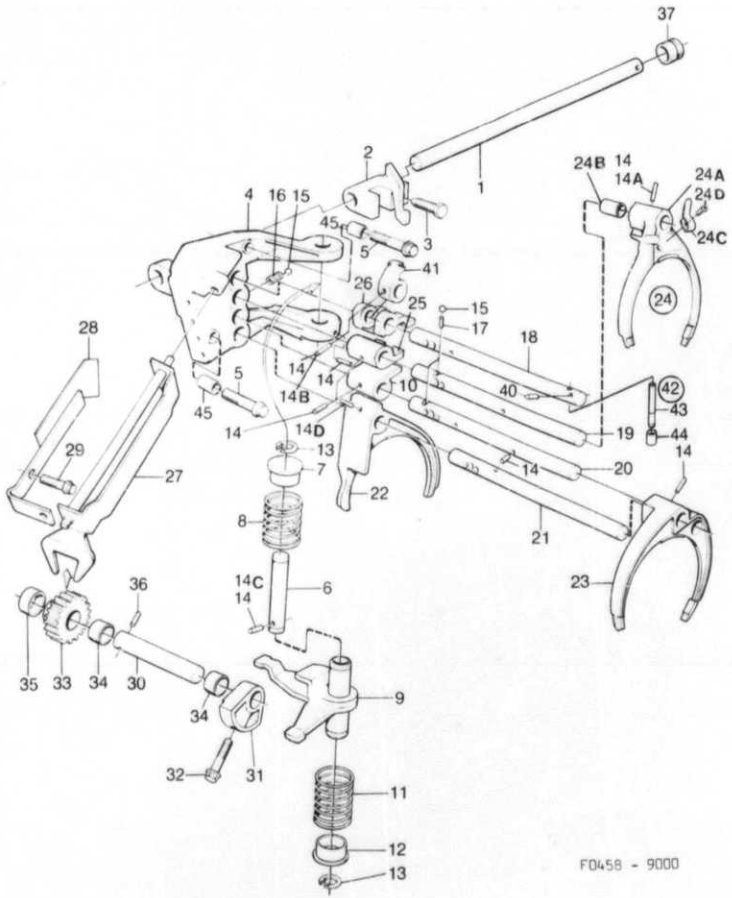

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	27	87 21 664			1	.Lever	.Hävarm	5
0580						R	R	
0590	28	87 21 508			1	.Bearing bracket	.Lagerkonsol	5
0600	29	81 25 163			1	.Screw	.Skruv	5
0610	30	87 19 148			1	.Shift rail	.Växelföraraxel	6
0620						R	R	
0630	31	87 20 880			1	.Support	.Stöd	5
0640	32	81 25 221			1	.Screw	.Skruv	5
0690	33	87 27 885		(8722787,8725905)	1	.Gear	.Kugghjul	5
0700						R	R	
0710	34	14 87 222			2	..Bushing	..Bussning	4
0720	35	87 20 153		139)	1	.Spacer sleeve	.Distanshylsa	5
0730	36	81 17 640			1	.Roll pin	.Spännstift	5
0740	37	*83 44 335*		NLS - USE 8730764	1	.Seal	.Tätning	4
0750	40	81 17 616		15)	1	.Pin	.Pinne	5
0760	41	87 24 304		15)	1	.Companion flange	.Medbringare	5
0770	42	87 24 643		15)	1	.Shift rail	.Växelföraraxel	6
0780	43	*87 24 353*		1,15) NLS - USE 8724643	1	..Shift rail	..Växelföraraxel	6
0790	44	87 24 627		15)	1	..Bushing	..Bussning	4
0800	45	87 19 650			2	.Guide sleeve	.Styrhylsa	5
0810								
0820		93 21 423		14) (9321381)	X	Service kit	Servicesats	5
0830				See page 4-073, 3-K02				

1. Not as separate spare part. Ej som separat reservdel.
14. Gear box --331129
15. Gear box 331130--
139. Gear box --140433.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H05
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-H24

Shafts, gears
Axlar, kugghjul

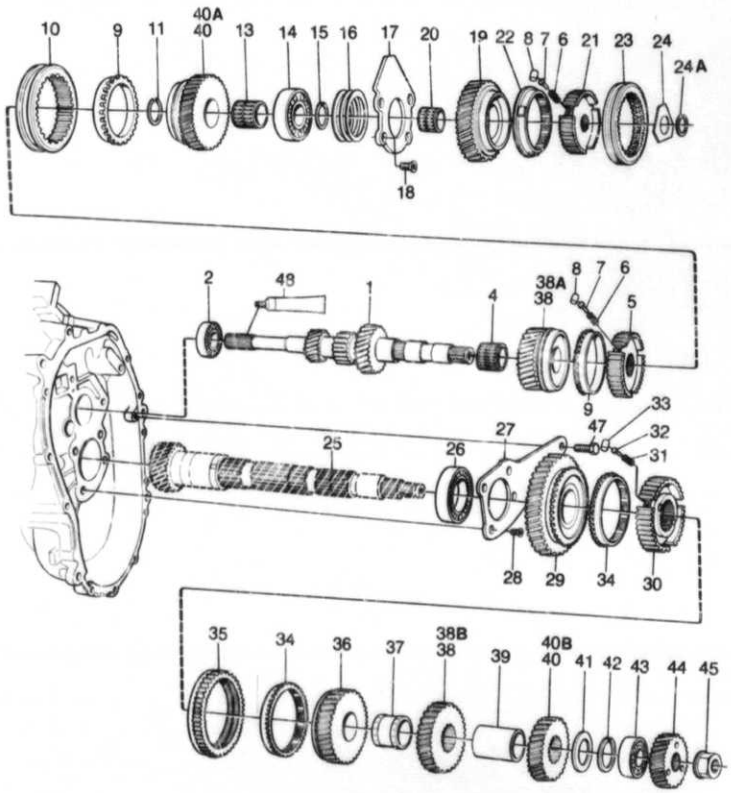

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
1	87 21 169		GMT 5301, 5101, 5201, 5202, 5203, 5401, GM 65101, 75401	1	.Shaft	.Axel	6
1	87 26 986		GM 65102, 75301	1	.Shaft	.Axel	6
2	87 19 163			1	.Roller bearing	.Rullager	3
4	87 20 534			1	.Needle bearing	.Nållager	3
5	87 20 088			1	.Hub	.Nav	5
6	87 23 330			6	.Compression spring	.Tryckfjäder	4
7	87 16 821			6	.Plunger	.Plunge	5
8	87 16 839			6	.Roller	.Rulle	5
9	87 20 112			2	.Synchromesh	.Synkronisering	3
10	*87 20 146*		NLS - USE 8736365	1	.Sleeve	.Muff	5
11	87 19 189			1	.Lock ring	.Låsring	5
13	87 20 526			1	.Needle bearing	.Nållager	3
14	87 20 278			1	.Roller bearing	.Rullager	3
15	87 21 946			1	.Retaining ring	.Spårring	4
16	87 16 607		0,10MM	X	.Adjusting washer	.Justerbricka	5
16	87 16 615		0,15MM	X	.Adjusting washer	.Justerbricka	5
16	87 16 623		0,30MM	X	.Adjusting washer	.Justerbricka	5
16	87 16 631		1,00MM	X	.Adjusting washer	.Justerbricka	5
17	87 22 191			1	.Support	.Stöd	5
18	87 10 816			4	.Screw	.Skruv	5
19	87 20 351		GMT 5301, 5201, 5202	1	.Gear 5	.Kuggdrev 5	4
19	87 23 736		GMT 5101	1	.Gear 5	.Kuggdrev 5	4
19	87 24 155		GMT 5203,5401 GM 75401	1	.Gear 5	.Kuggdrev 5	4
19	*87 25 319*		GM 65101, 65102 GM 75301 NLS - USE 8730327	1	.Gear 5	.Kuggdrev 5	4
20	87 21 953			1	.Needle bearing	.Nållager	3
21	87 20 369			1	.Hub	.Nav	5
22	87 20 104			1	.Synchromesh	.Synkronisering	5
23	*87 20 138*		121) NLS - USE 8727794	1	.Sleeve	.Muff	5
23	87 27 794		122)	1	.Sleeve	.Muff	5
24	*87 18 447*		38) NLS - USE 8725723	1	.Support	.Stöd	5
24	87 25 723		39)	1	.Support	.Stöd	5
24A	87 19 205			1	.Retaining ring	.Spårring	5
25			See page 4-027, 3-I04	1	.Shaft	.Axel	
26	*87 16 920*		NLS - USE 8729378	1	.Roller bearing	.Rullager	3
27	87 24 023		(8721698)	1	.Support	.Stöd	5
28	87 10 816			4	.Screw	.Skruv	5
29	87 22 357		GMT 5301, 5101, 5201 5202, 5203, 5401, GM 65101, 75401	1	.Gear 1	.Kugghjul 1	4
29	87 27 158		GM 65102, 75301	1	.Gear 1	.Kugghjul 1	4
30	87 20 088			1	.Hub	.Nav	5
31	87 22 571			3	.Compression spring	.Tryckfjäder	4
32	87 16 821			3	.Plunger	.Plunge	5
33	87 16 839			3	.Roller	.Rulle	5
34	87 20 112			2	.Synchromesh	.Synkronisering	3
35	87 22 340			1	.Sleeve	.Muff	5
35	*87 25 913*		ALT. TO 87 22 340 NLS - USE 8736357	1	.Sleeve	.Muff	5

38. Gear box --349938
39. Gear box 349939--
121. Gear box --139016.
122. Gear box 139017--.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H08
Clutch con...ol	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-102

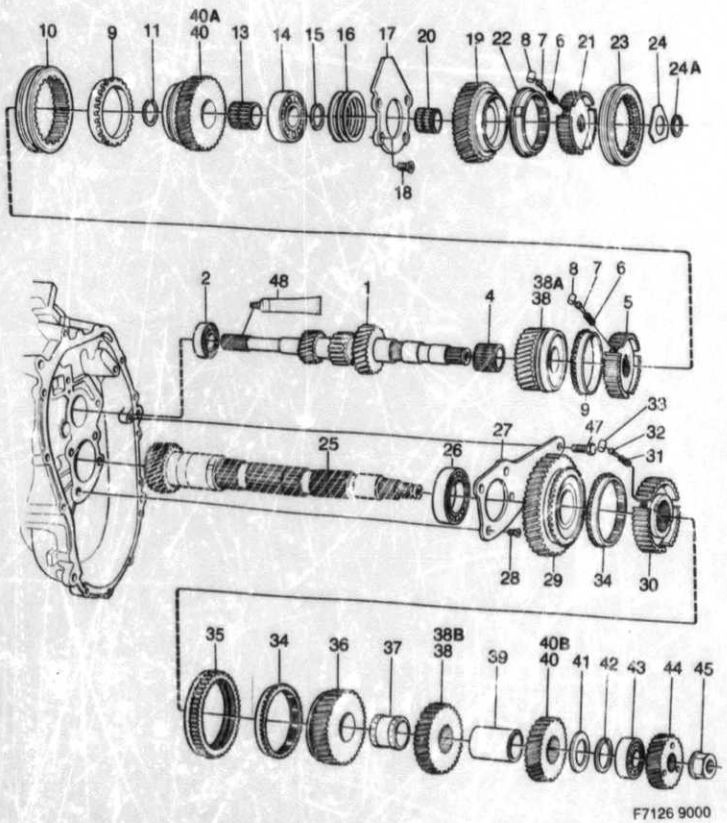

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	36	87 22 365		5101, 5301, 5201,	1	.Gear	.Kugghjul	4
0570				5202, 5203, 5401,		2	2	
0580				GM 65101, 75401				
0590	36	87 26 994		GM 65102, 75301	1	.Gear	.Kugghjul	4
0600						2	2	
0610	37	87 20 310			1	.Bearing bushing	.Lagerbussning	3
0620	38	*87 81 171*		45,159), GMT 5101,	1	.Drive gear set	.Drevsats	4
0630				5301,5201,5202,5203,5401		3	3	
0630				NLS - USE 8730301,				
0630				8730319				
0640	38A	*87 24 130*		46), GMT 5202, 5203,	1	.Gear	.Kuggdrev	4
0650				5401, GM 75401, 65101,		3	3	
0660				65102, 75301 NLS - USE				
0660				8730301				
0670	38B	*87 24 163*		46), GMT 5202, 5203,	1	.Gear	.Kugghjul	4
0680				5401, GM 75401, 65101		3	3	
0690				65102, 75301 NLS - USE				
0690				8730319				
0700	39	*87 20 302*		165) NLS	1	.Spacer sleeve	.Distanshylsa	5
0710	40	*87 81 148*		158), GMT 5301,5201	1	.Drive gear set	.Drevsats	4
0720				NLS - USE 8724148,		4	4	
0720				8724171				
0730	40	87 81 197		GMT 5101	1	.Drive gear set	.Drevsats	4
0740						4	4	
0750	40A	87 24 148		GMT 5202, 5203, 5401,	1	.Gear	.Kuggdrev	4
0760				GM 75401		4	4	
0770	40A	87 25 301		GM 65101, 65102, 75301	1	.Gear	.Kuggdrev	4
0780					1	4	4	
0790	40B	87 24 171		GMT 5202, 5203, 5401,	1	.Gear	.Kugghjul	4
0800				GM 75401		4	4	
0810	40B	87 25 327		GM 65101, 65102, 75301	1	.Gear	.Kugghjul	4
0820						4	4	
0830	41	*87 20 203*		165) NLS	1	.Spring disc	.Fjädertallrik	4
0840	42	*87 20 195*		165) NLS	1	.Spacer washer	.Distansbricka	4
0850	43	87 20 278			1	.Roller bearing	.Rullager	3
0860	44	87 19 312		GMT 5301, 5201, 5202	1	.Gear	.Kugghjul	4
0870						5	5	
0880	44	87 23 769		GMT 5101	1	.Gear	.Kugghjul	4
0890						5	5	
0900	44	87 24 189		GMT 5203, 5401,	1	.Gear	.Kugghjul	4
0910				GM 75401		5	5	
0920	44	87 25 335		GM 65101, 65102, 75301	1	.Gear	.Kugghjul	4
0930						5	5	
0940	45	87 16 490			1	.Nut	.Mutter	5
0950	47	81 25 221			1	.Screw	.Skruv	5
0960	48	• 87 81 684		50 GR	X	Grease	Fett	

45. Gear box -336554
46. Gear box 336555-
158. Superseded by 87 24 148 and 87 24 171. Ersatt av 87 24 148 och 87 24 171.
159. Superseded by 87 30 301 and 87 30 319. Ersatt av 87 30 301 och 87 30 319.
165. Superseded by kit 8781502 Ersatt av sats 8781502


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-104

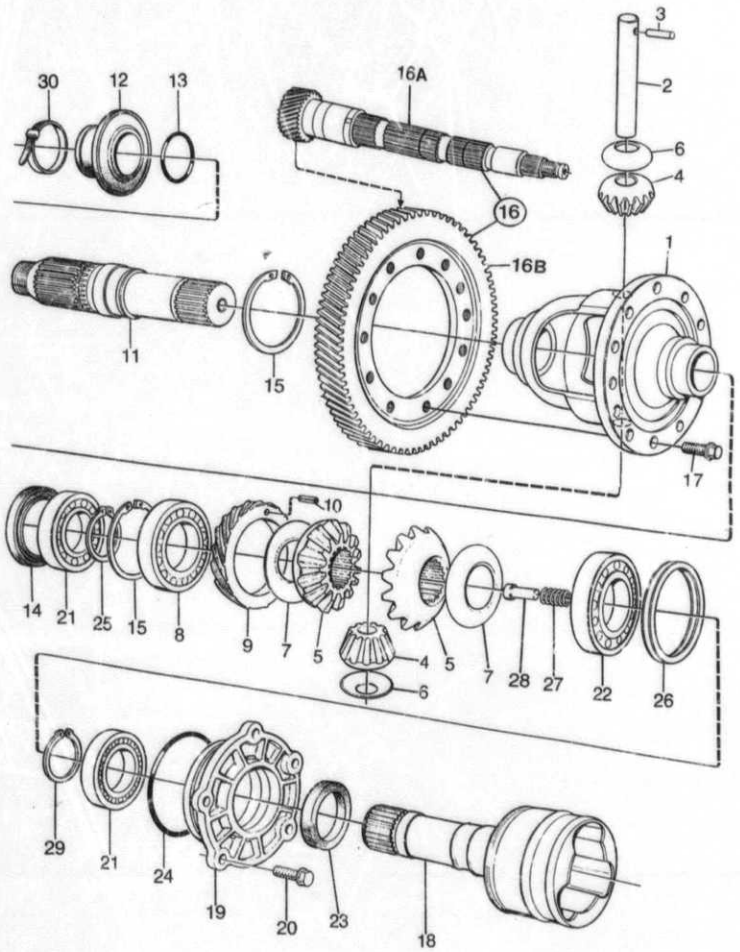

F7127 9000

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	87 19 908			1	.Differential housing	.Differentialhus	5
0030	2	87 19 940			1	.Differential shaft	.Differentialaxel	5
0040	3	80 49 736			1	.Cotter pin	.Fjäderpinne	5
0050	4	*87 19 858*		NLS - USE 8729394	2	.Differential pinion	.Differentialdrev	4
0060	5	87 19 866			2	.Differential side gear	.Differentialhjul	4
0070	6	*87 19 874*		NLS - USE 8731788	2	.Washer	.Bricka	3
0080	7	87 19 882			2	.Washer	.Bricka	3
0090	8	87 19 254			1	.Roller bearing	.Rullager	3
0100	9	87 20 633		-1988	1	.Drive gear	.Drev	5
0110	9	87 27 232		500), 1989-	1	.Drive gear	.Drev	5
0120	10	80 49 298		-1988	1	.Pin	.Pinne	6
0130	11	87 23 132			1	.Shaft	.Axel	5
0140	12	87 20 997			1	.Sealing ring	.Tätningsring	2
0160	13	*80 46 625*		(8109370) NLS - USE 7970361	1	.O-ring	.O-ring	2
0160								
0170	14	87 21 078			1	.Seal	.Tätning	5
0180	15	80 48 324	S	(7915036)	2	.Ring	.Ring	6
0200	16	87 81 106		-1988, TURBO	1	.Final drive	.Slutväxel	5
0210	16	87 81 288		500), 1989-, TURBO	1	.Final drive	.Slutväxel	5
0220	16A	*87 24 122*		NLS - USE 8729659, 8729857	1	.Pinion shaft	.Pinjongaxel	5
0220								
0230	16B	87 24 114			1	.Crown wheel	.Kronhjul	5
0240	17	*87 19 262*		NLS - USE 7571862	12	.Screw	.Skruv	5
0250	18	87 20 948		LH	1	.Companion flange	.Medbringare	3
0260	19	87 19 098			1	.Bearing seat	.Lagersäte	5
0270	20	81 25 199			5	.Screw	.Skruv	5
0280	21	87 04 306			2	.Ball bearing	.Kullager	3
0290	22	*87 08 836*		NLS - USE 8704389	1	.Pinion bearing	.Pinjonglager	3
0300	23	*87 04 298*		NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0310	24	87 16 656			1	.O-ring	.O-ring	2
0320	25	*80 47 813*		141) NLS - USE 8728198	1	.Retaining ring	.Spårring	5
0330	25	87 28 198		142)	1	.Retaining ring	.Spårring	5
0340	26	87 16 292		0,10MM	X	.Adjusting washer	.Justerbricka	5
0350	26	41 22 123		0,15MM (8716300)	X	.Adjusting washer	.Justerbricka	5
0360	26	41 22 156		0,30MM (8716318)	X	.Adjusting washer	.Justerbricka	5
0370	26	87 16 326		0,50MM	X	.Adjusting washer	.Justerbricka	5
0380	27	87 04 314			1	.Spring	.Fjäder	4
0390	28	87 04 322			1	.Plunger	.Plunge	5
0400	29	*80 47 813*		141) NLS - USE 8728198	1	.Retaining ring	.Spårring	5
0410	29	87 28 198		142)	1	.Retaining ring	.Spårring	5
0420	30	79 71 880			1	Tensioning band	Spännband	4

141. Gear box --143809.
142. Gear box 143810--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-106

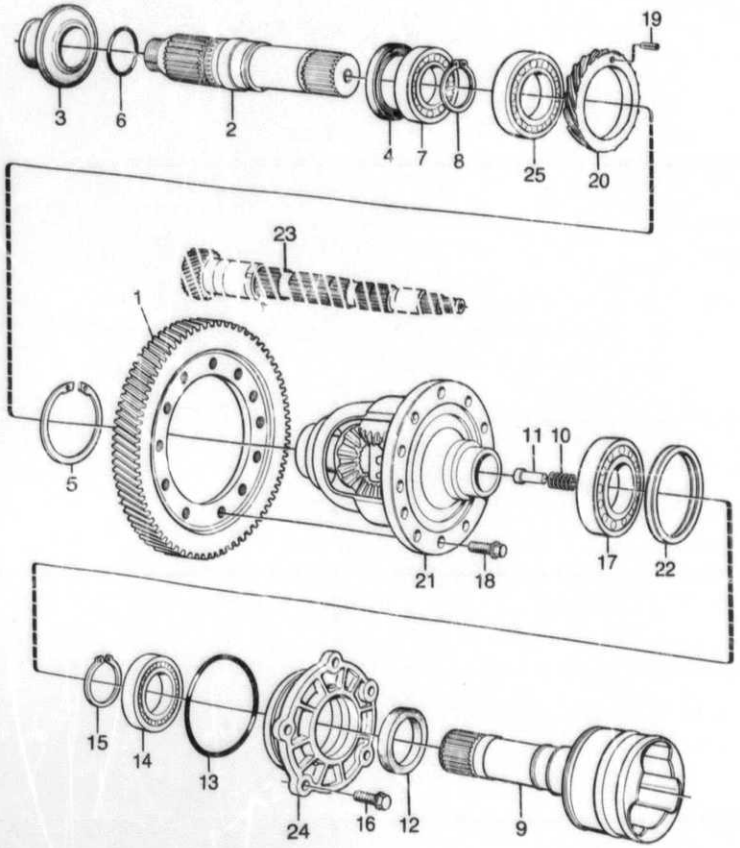

R 9812 - 9000

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 71 854			1	.Crown wheel	.Kronhjul	5
0030	2	87 23 140	S		1	.Shaft	.Axel	5
0040	3	75 71 912	S	-1986	1	.Sealing ring	.Tätningsring	3
0050	3	87 20 997	S	1987-	1	.Sealing ring	.Tätningsring	2
0060	4	87 21 078	S	-1986	1	.Seal	.Tätning	5
0070	4	75 92 223	S	1987-	1	.Seal	.Tätning	5
0080	5	80 48 324	S	(7915036)	1	.Ring	.Ring	6
0100	6	*75 71 904*	S	-1987 NLS - USE 7594898	1	.O-ring	.O-ring	3
0110	6	75 94 898		1988-	1	.O-ring	.O-ring	3
0120	7	75 58 950			1	.Ball bearing	.Kullager	5
0130	8	*80 47 813*		NLS - USE 8728198	1	.Retaining ring	.Spårring	5
0140	9	87 20 948	S	LH	1	.Companion flange	.Medbringare	3
0150	10	87 04 314	S		1	.Spring	.Fjäder	4
0160	11	87 04 322	S		1	.Plunger	.Plunge	5
0170	12	*87 04 298*	S	-1986 NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0180	12	*75 92 231*	S	1987- NLS - USE 4280376	1	.Seal	.Tätning	5
0200	13	75 94 120		(7577976)	1	.O-ring	.O-ring	3
0210	14	75 58 950	S		1	.Ball bearing	.Kullager	5
0220	15	87 28 198	S	(7915200)	1	.Retaining ring	.Spårring	5
0230	16	75 58 497			5	.Hexagon screw	.Sexkantsskruv	5
0240	17	75 58 430			1	.Roller bearing	.Rullager	3
0250	18	75 71 862			11	.Screw	.Skruv	5
0260	19	80 49 298		-1988	1	.Pin	.Pinne	6
0270	20	87 20 633		-1988	1	.Drive gear	.Drev	5
0280	20	87 27 232		500), 1989-	1	.Drive gear	.Drev	5
0300	21	87 27 778		(8721136)	1	.Differential	.Differential	6
0310	22	*75 97 677*		0,15MM NLS - USE 4122123	X	.Adjusting washer	.Justerbricka	5
0320	22	*75 97 685*		0,20MM NLS - USE 4122131	X	.Adjusting washer	.Justerbricka	5
0330	22	*75 97 693*		0,25MM NLS - USE 4122149	X	.Adjusting washer	.Justerbricka	5
0340	22	*75 97 701*		0,30MM NLS - USE 4122156	X	.Adjusting washer	.Justerbricka	5
0350	22	75 97 719		0,35MM	X	.Adjusting washer	.Justerbricka	5
0360	22	75 97 727		0,40MM	X	.Adjusting washer	.Justerbricka	5
0370	22	75 97 735		0,70MM	X	.Adjusting washer	.Justerbricka	5
0380	22	75 97 743		1,00MM	X	.Adjusting washer	.Justerbricka	5
0390	22	75 97 750		1,20MM	X	.Adjusting washer	.Justerbricka	5
0400	22	75 97 768		1,50MM	X	.Adjusting washer	.Justerbricka	5
0410	23			See page 4-053, 3-J06		.Pinion	.Pinjong	
0420	24	87 19 098			1	.Bearing seat	.Lagersäte	5
0430	25	75 58 448			1	.Roller bearing	.Rullager	3
0440								
0450		75 75 509		DRIVE SHAFT	X	.Sealing kit	.Tätningssats	3
0460				See page 4-071, 3-J24				
0470		75 75 566		LH, DRIVE SHAFT	X	.Repair kit	.Reparationssats	5
0480				See page 4-073, 3-K02				
0490		75 75 574		RH, DRIVE SHAFT	X	.Repair kit	.Reparationssats	
0500				See page 4-073, 3-K02				
0510		74 96 094			X	Gasket kit	Packningsats	3
0520				See page 4-079, 3-K08		Stage 1-2	Steg 1-2	
0530		74 96 102			X	Gasket kit	Packningsats	3
0540				See page 4-079, 3-K08		Stage 3	Steg 3	

500. Also valid for SE 1988B. Gäller även för SE 1989B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I08

Gear shift lever
Växelspak

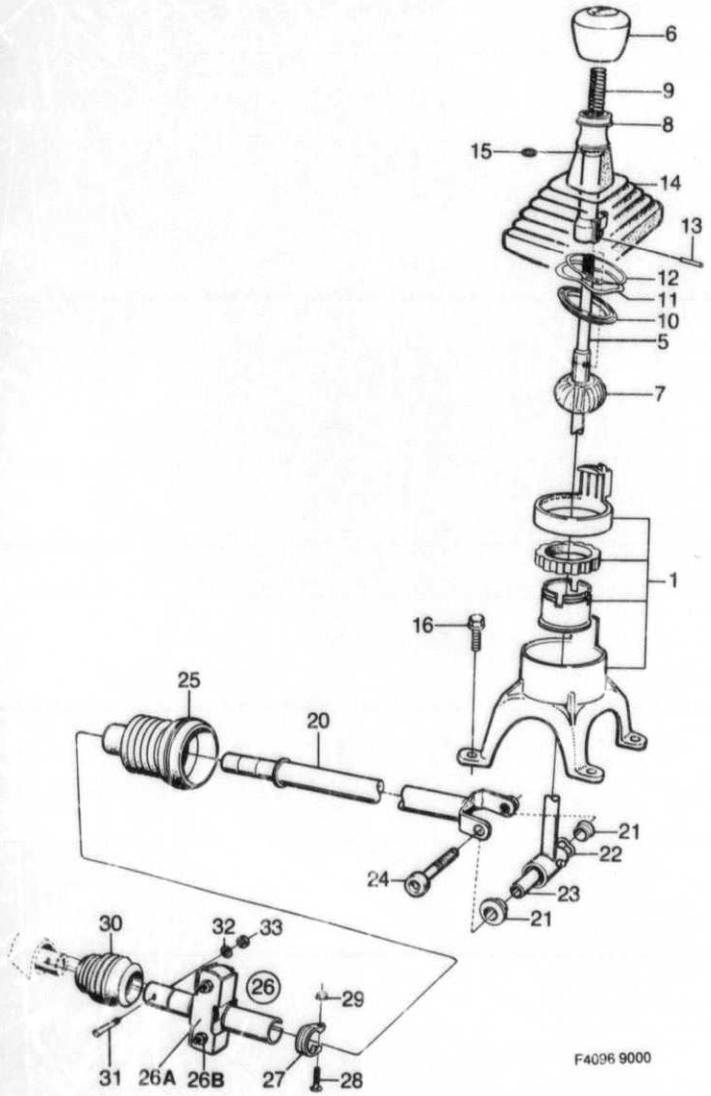

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 79 462*		12) NLS - USE 7592843	1	Gear shift housing	Växelspakshus	5
0020	1	*75 79 873*	S	13,16) NLS - USE 7592843	1	Gear shift housing	Växelspakshus	5
0030	1	75 92 843		17)	1	Gear shift housing	Växelspakshus	5
0040	5	*75 59 222*		8) NLS	1	Gear lever	Växelspak	5
0050	5	75 59 859		11)	1	Gear lever	Växelspak	5
0060	6	93 82 425	S		1	Knob	Knopp	5
0070	7	75 99 988		12), (9379611)	1	Ball	Kula	5
0080	7	*75 77 653*	S	13,85) NLS - USE 7599988	1	Ball	Kula	5
0090	7	75 99 988		86)	1	Ball	Kula	5
0100	8	*75 53 852*		12) NLS - USE 7577646	1	Companion flange	Medbringare	3
0110	8	75 77 646	S	13)	1	Companion flange	Medbringare	3
0120	9	93 79 637			1	Spring	Fjäder	5
0130	10	93 79 470			1	Bearing shell	Lagerskål	6
0140	11	93 79 488			1	Washer	Bricka	4
0150	12	73 98 308			1	Retaining ring	Spårring	5
0160	13	*79 56 238*		NLS - USE 7399678	1	Pin	Pinne	5
0170	14	75 53 761		91)	1	Gaiter	Damask	6
0180	14	75 99 442		92)	1	Gaiter	Damask	6
0190	14	*75 53 779*		91), RHD NLS - USE 7599434	1	Gaiter	Damask	6
0200	14	75 99 434		92), RHD	1	Gaiter	Damask	6
0210	15	79 77 424			1	O-ring	O-ring	2
0220	16	79 65 544			4	Screw	Skruv	5
0230	20	75 76 689		(7572845)	1	Gear rod	Växelstång	5
0240	21	93 79 595		8)	2	Bushing	Bussning	3
0250	21	75 59 875		11)	1	Bushing	Bussning	3
0260	22	93 79 603		8)	1	Washer	Bricka	
0270	23	93 79 587		8)	1	Spacer	Distans	3
0280	23	75 73 611		9)	1	Spacer	Distans	3
0290	23	75 77 729		10)	1	Spacer	Distans	3
0300	24	*75 54 561*		NLS - USE 4118659, 7554553	1	Screw	Skruv	5
0310	25	93 86 236		71)	1	Gaiter	Damask	5
0320	25	75 99 400		72)	1	Gaiter	Damask	5
0360	26	75 99 178		(7559248,7578404,7577620	1	Joint	Knut	5
0370	26A	75 76 416			1	▲Joint	▲Knut	5
0380	26B	80 73 512			4	▲Lock nut	▲Låsmutter	3
0390	27	93 48 533			1	Clamp	Klammer	5
0400	28	75 41 907			1	Screw	Skruv	5
0410	29	79 75 501			1	Nut	Mutter	5
0420	30	*93 84 868*		119) NLS - USE 4029575	1	Bellows	Bälg	5
0430	30	40 29 575		120)	1	Bellows	Bälg	5
0440	31	83 75 172			1	Pin	Pinne	3
0450	32	80 29 944			1	Washer	Bricka	5
0460	33	83 35 002			1	Nut	Mutter	5
0470								

8. Ch. - G1016649
9. Ch. G1016650--G1028315
10. Ch. G1028316--
11. Ch. G1016650--
12. Ch. --G1026304
13. Ch. G1026305--
16. Ch. --H1005513, --H8000597
17. Ch. H1005514--, H8000598--
71. Ch. --J1017777, --J2009761, --J8001167
72. Ch. J1017778--, J2009762--, J8001168--
85. Ch. --J1023582, - J2013697, --J8001590
86. Ch. J1023583--, J2013698--, J8001591--
91. Ch. --J1021474, --J2012109, --J8001410
92. Ch. J1021475--, J2012110--, J8001411--
119. Ch. --K1017209, --K2009769, --K8000540
120. Ch. K1017210--, K2009770--, K8000541--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I15
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I10

Gear shift lever
Växelspak

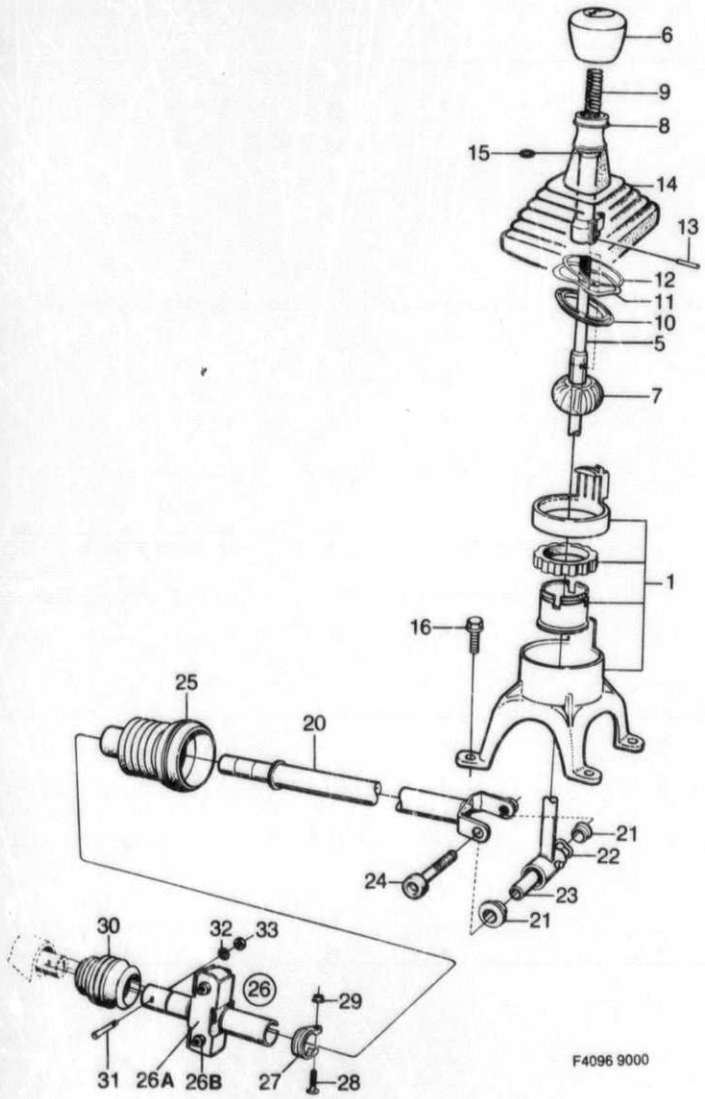

F4096 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400							
0480	*93 21 407*		12), GEAR SHIFT, REVERSE GEAR BRAKE	X	Kit	Sats	5
0490			See page 4-073, 3-K02				
0500			NLS				
0500							

12. Ch. --G1026304


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I12 Drive shafts, outer universal joint — Drivaxlar, yttre knut

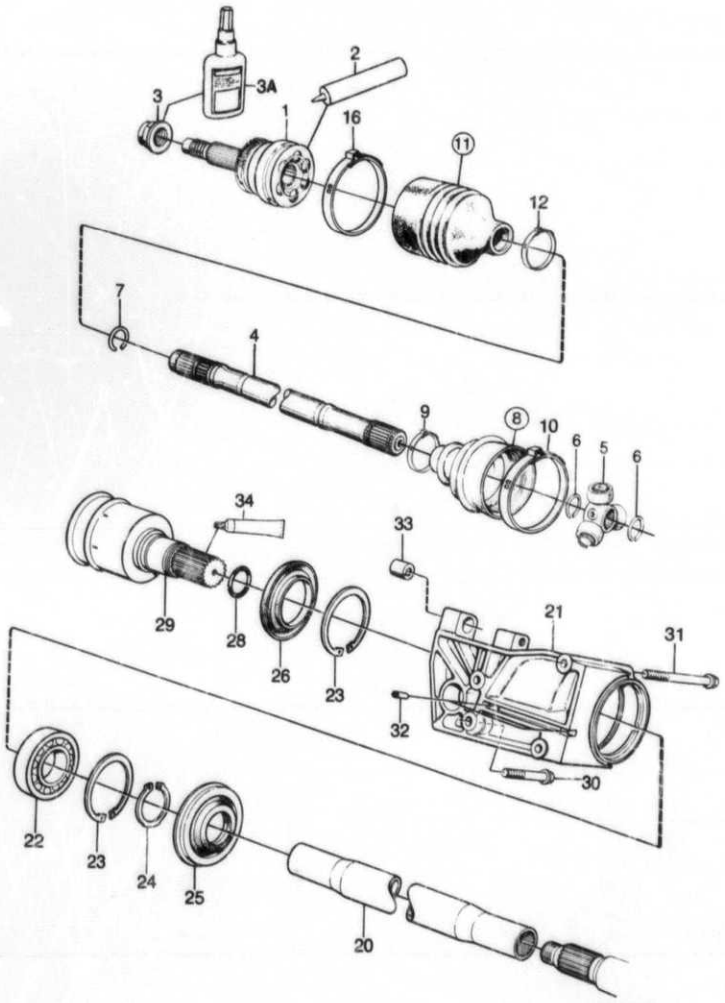

F7128 9000

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 52 905		700)	2	Universal joint	Drivknut	4
0020	1	*89 63 571*		125,700), ABS NLS - USE 4002911	2	Universal joint	Drivknut	4
0030	1	40 02 911		126,700), ABS	2	Universal joint	Drivknut	4
0040	2	• 87 81 676		300 GR	X	Grease	Fett	
0050	3	89 65 360		(8964710)	2	Lock nut	Låsmutter	3
0060	3A	• 74 96 276		25 ML	X	Nut lock strong green	Gängsäkring stark grön	5
0070								
0080								
0090	4	89 52 970		700)	2	Drive shaft	Drivaxel	5
0100	4	89 58 241		700), LH, A	1	Drive shaft	Drivaxel	5
0110	4	89 52 970		700), RH, A	1	Drive shaft	Drivaxel	5
0120	5	89 50 628		700)	2	Companion flange	Medbringare	3
0130	6	89 50 636			2	Lock ring	Låsring	5
0140	7	89 21 520			2	Lock ring	Låsring	5
0150	8	*89 61 872*		111)	2	Bellows kit	Bälgsats	3
0160				See page 4-069, 3-J22				
0160				NLS - USE 8993636				
0170	8	89 93 636		112)	2	Bellows kit	Bälgsats	3
0180				See page 4-069, 3-J22				
0190	9	41 95 822	S		1	• Clamp	• Klämma	3
0200	10	89 72 986	S		1	• Clamp	• Klämma	5
0210	11	*89 61 864*		-1988	2	Bellows kit	Bälgsats	2
0220				See page 4-067, 3-J20				
0220				NLS - USE 8993628				
0230	11	89 93 628		1989-	2	Bellows kit	Bälgsats	2
0240				See page 4-067, 3-J20				
0250	12	41 95 822	S		1	• Clamp	• Klämma	3
0260	16	40 00 667	S		1	• Clamp	• Klämma	5
0270	20	87 23 124			1	Countershaft	Mellanaxel	5
0280	20	87 23 546		A	1	Countershaft	Mellanaxel	5
0290	21	*75 50 056*		81,154) NLS - USE 7592959, 7973738	1	Bearing bracket	Lagerbock	5
0290								
0300	21	75 92 959		82)	1	Bearing bracket	Lagerbock	5
0310	21	*93 87 333*		93,155), A NLS - USE 7592942, 7973738	1	Bearing bracket	Lagerbock	5
0310								
0320	21	75 92 942		94), A	1	Bearing bracket	Lagerbock	5
0330	22	93 81 450			1	Ball bearing	Kullager	3
0340	23	79 73 738		83)	1	Retaining ring	Spårring	5
0350	23	79 73 738		84)	2	Retaining ring	Spårring	5
0360	24	93 78 332			1	Retaining ring	Spårring	5
0370	25	93 85 931			1	Ring	Ring	5
0380	25	75 79 964		A	1	Sealing ring	Tätningsring	5
0390	26	93 87 044			1	Sealing ring	Tätningsring	5
0400	28	*80 46 625*		(7971997) NLS - USE 7970361	1	O-ring	O-ring	2
0400								
0410	29	87 23 108		RH	1	Companion flange	Medbringare	3
0420	30	79 70 015			2	Screw	Skruv	5
0430	31	79 74 795			2	Screw	Skruv	5
0440	32	79 74 074			2	Cotter pin	Fjäderpinne	5

81. Ch. --J1021384, --J2012292, --J8001362
82. Ch. J1021385--, J2012293--, J8001363--
83. Ch. M = --J1021384, --J2012292, --J8001358 Ch. A = --J1025769, --J2015095, --J8001358
84. Ch. M = J1021385--, J2012293--, J8001359-- Ch. A = J1025770--, J2015096--, J8001359--
93. Ch. --J1025769, --J2015095, --J8001358
94. Ch. J1025770--, J2015096--, J8001359--
111. Ch. --K1002690, --K2001222, --K8000042. For SW 1988B: Ch. --J1050265, --J2030661, --J8005205.
112. Ch. K1002691--, K2001223--, K8000043--, For SW 1988B: J1050266--, J2030662--, J8005206--.
125. Ch. --K1019709, --K2011280, --K8000966.
126. Ch. K1019710--, K2011281--, K8000967--.
154. Superseded by 75 92 959 and 79 73 738. Ersatt av 75 92 959 och 79 73 738.
155. Superseded by 75 92 942 and 79 73 738. Ersatt av 75 92 942 och 79 73 738.
700. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I14 Drive shafts, outer universal joint — Drivaxlar, yttre knut

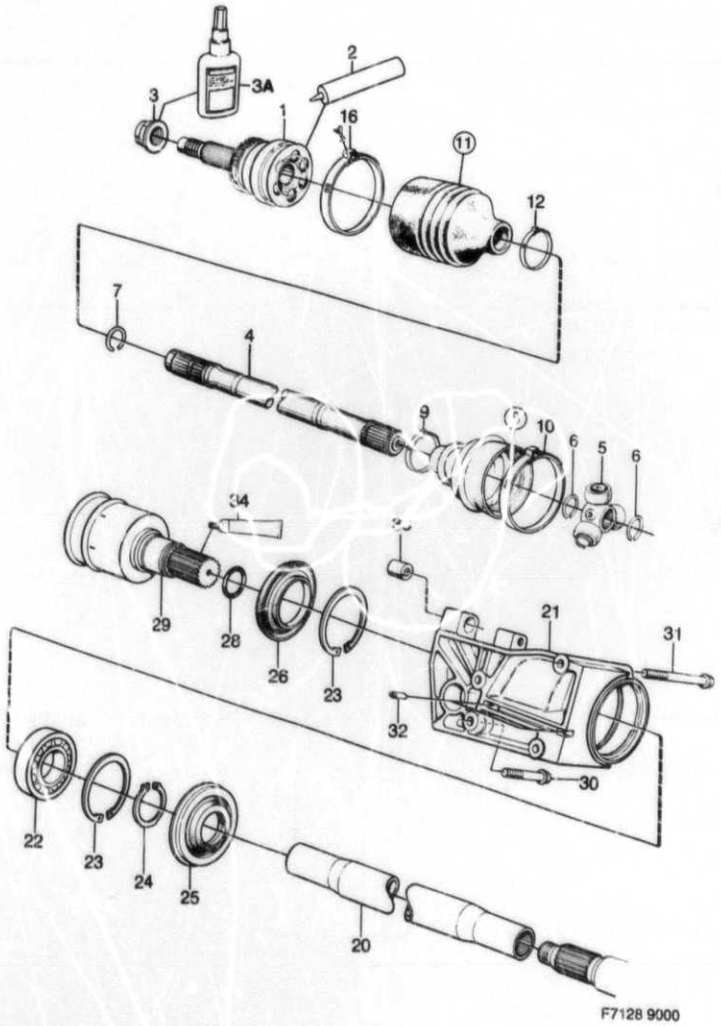

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	33	75 50 270		103)	1	Bushing	Bussning	6
0460	33	75 93 080		104)	1	Bushing	Bussning	6
0470	33	75 93 080		623), 1989-	1	Bushing	Bussning	6
0480	34	87 81 684		50 GR	X	Grease	Fett	

103. Ch. --K1006560, --K2002956, --8000929. For SW 1988B: --J1050638, --J2031711.
104. Ch. K1006561--, K2002957--, K8000930--. For SW 1988B: J1050639--, J2031712--.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I16

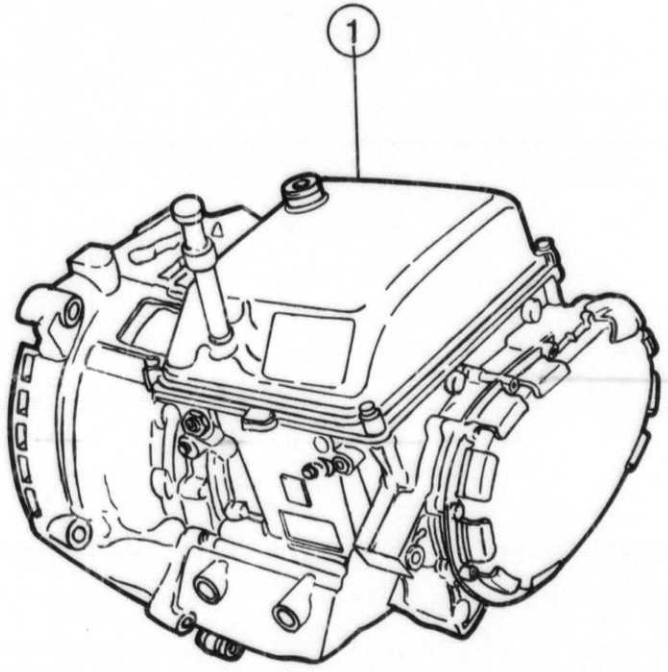

R 7790–9000

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 59 214*		700), 1986, MARKED: GAT 4401 NLS	1	Gearbox	Växellåda	5
0020	1	75 92 306		700), 1986, MARKED: GAT 4301S ALTERN TO 7559214	1	Gearbox	Växellåda	5
0040	1	*75 77 125*		700), 1987, TURBO MARKED: GAT 4301 NLS	1	Gearbox	Växellåda	5
0060	1	*75 77 141*		700), 1987, I MARKED: GAT 4102 NLS	1	Gearbox	Växellåda	5
0080	1	*75 92 488*		700), 1988, I MARKED: GA 64101 NLS	1	Gearbox	Växellåda	5
0100	1	*75 92 496*		700), 1988, TURBO MARKED: GA 74301 NLS	1	Gearbox	Växellåda	5
0120	1	*75 97 586*		500,127,700), 1989-, I MARKED: GA 64102 NLS	1	Gearbox	Växellåda	5
0140	1	*75 99 657*		128,700), I MARKED: GA 64103 NLS - USE 4280343	1	Gearbox	Växellåda	5
0160	1	*75 97 594*		500,127,700), 1989-, TURBO, MARKED: GA 74302 NLS	1	Gearbox	Växellåda	5
0180	1	*75 99 665*		128,700), TURBO MARKED: GA 74303 NLS - USE 4280350	1	Gearbox	Växellåda	5

127. Ch. –K1023243, –K2013759, –K8001531.
128. Ch. K1023244–, K2013760–, K8001532–.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

4 GROUP INDEX

Clutch	**3-H06**
Clutch control	**3-H08**
Gear box, manual	**3-H12**
Gear box control, manual	**3-I08**
Gear box, automatic	**3-I16**
Gear box control, automatic	**3-J18**
Complete sets	**3-J20**


Gear box, automatic

3-I18

Converter housing, converter

Växellåda, automatisk

Momentomvandlarhus, momentomvandlare

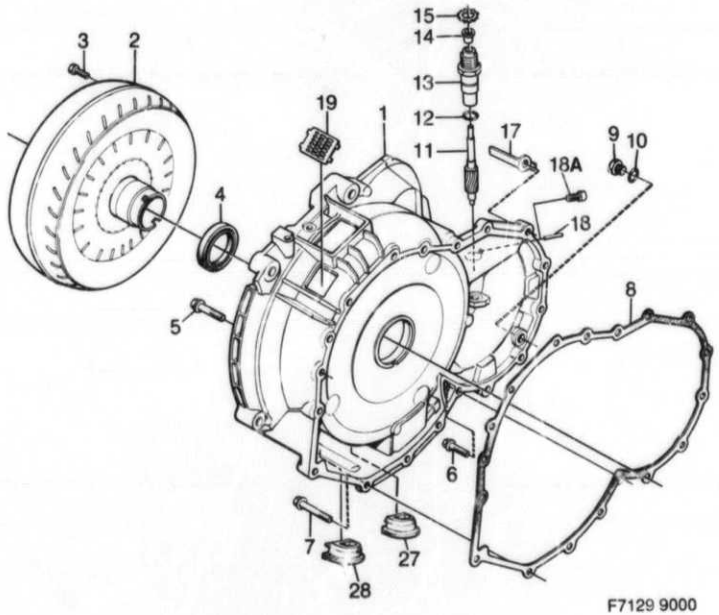

F7129 9000

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 92 702		59)	1	.Converter shell	.Momentomvandlarhus	5
0030	1	75 96 976		60,127)	1	.Converter shell	.Momentomvandlarhus	5
0040	1	*75 96 851*		128) NLS - USE 4119376	1	.Converter shell	.Momentomvandlarhus	5
0050	2	75 92 181			1	.Torque converter	.Momentomvandlare	9
0060	3	*75 53 449*		NLS - USE 4121760	3	.Screw	.Skruv	5
0070	4	*75 58 406*		NLS - USE 4280582	1	.Shaft seal	.Axeltätning	5
0080	5	75 58 497			6	.Hexagon screw	.Sexkantsskruv	5
0090	6	80 83 974			1	.Screw	.Skruv	5
0100	7	75 72 159			11	.Hexagon screw	.Sexkantsskruv	5
0110	8	75 70 542			1	.Gasket	.Packning	3
0120	9	75 58 505			1	.Plug	.Plugg	5
0130	10	75 72 175			1	.Sealing ring	.Tätningsring	3
0140	11	87 23 892	S	-1988, (8720641)	1	.Gear	.Kugghjul	5
0150	11	87 27 240		500), 1989-	1	.Gear	.Kugghjul	5
0160	12	87 11 707	S	47)	1	.O-ring	.O-ring	5
0170	12	75 95 325	S	48)	1	.O-ring	.O-ring	5
0200	13	87 27 828		(8723884,8724858)	1	.Sleeve	.Hylsa	5
0210	14	87 13 463	S	48)	1	.Seal	.Tätning	4
0220	14	87 24 874	S	49)	1	.Seal	.Tätning	4
0230	15	87 17 308	S	47)	1	.Locking	.Låsning	5
0240	17	75 93 247		42,53)	1	.Bracket	.Fäste	6
0250	18	75 94 708		54,127)	1	.Cotter pin	.Fjäderpinne	5
0260	18A	87 24 882		128)	1	.Screw	.Skruv	5
0270	19	75 76 911			1	.Protecting casing	.Skyddskåpa	5
0273	27	*93 86 459*		NLS - USE 4119640	2	Plug	Plugg	5
0276	28	*93 86 467*		NLS - USE 4119657	2	Plug	Plugg	5
0280								
0290		75 75 459		SPEEDOMETER DRIVE, GEAR BOX GAT 4102,4301,4401	X	.Sealing kit	.Tätningssats	3
0300				See page 4-071, 3-J24				
0310								
0320		75 75 517		SPEEDOMETER DRIVE, GEAR BOX GAT 4102,4301,4401	X	.Repair kit	.Reparationssats	5
0330				See page 4-073, 3-K02				
0340								
0350		74 96 094			X	Gasket kit	Packningsats	3
0360				See page 4-079, 3-K08		Stage 1-2	Steg 1-2	
0370		74 96 102			X	Gasket kit	Packningsats	3
0380				See page 4-079, 3-K08		Stage 3	Steg 3	
0390		74 96 110		127), TURBO	X	Conversion kit	Ombyggnadssats	9
0400				See page 4-079, 3-K08				
0410		74 96 128		127), I	X	Conversion kit	Ombyggnadssats	9
0420				See page 4-079, 3-K08				

42. Ch. H1010682--, H8000482--
47. Gear box --8323
48. Gear box 8324--
49. Asbestos Asbest
53. Gear box -8638
54. Gear box 8639-
59. Gear box --12630
60. Gear box 12631--
127. Ch. --K1023243, --K2013759, --K8001531.
128. Ch. K1023244--, K2013760--, K8001532--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


4 GROUP INDEX

Clutch	**3-H06**
Clutch control	**3-H08**
Gear box, manual	**3-H12**
Gear box control, manual	**3-I08**
Gear box, automatic	**3-I16**
Gear box control, automatic	**3-J18**
Complete sets	**3-J20**

3-I20

Gear box case, cover

Växellådshus, lock

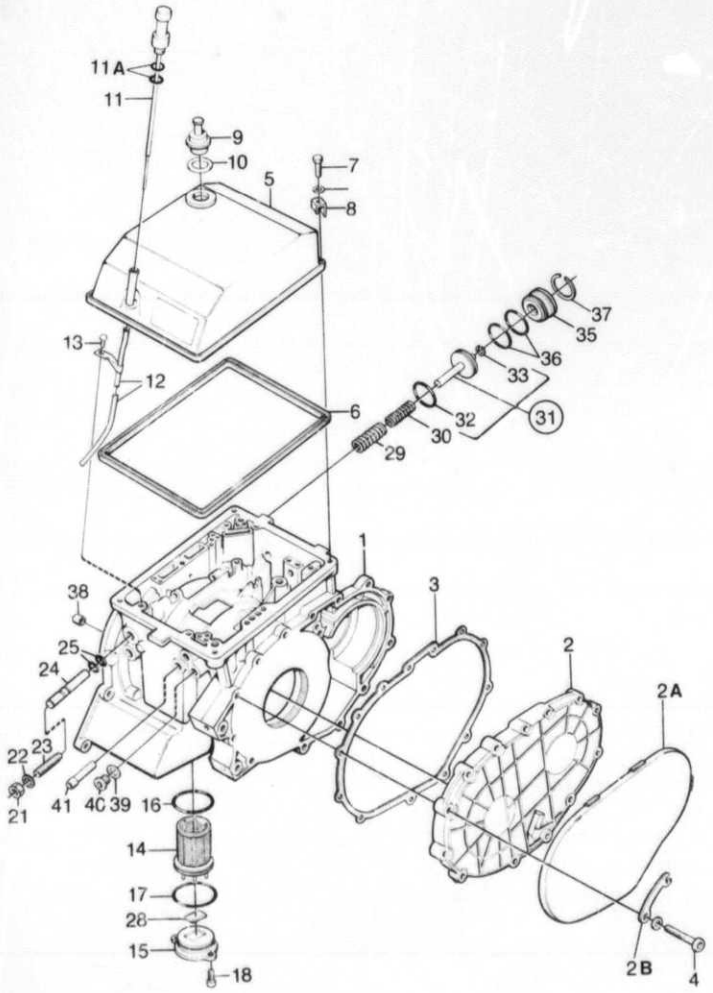

F0104 - 9000

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 77 521		1986, TURBO	1	.Gearbox housing	.Växellådshus	6
0030	1	75 79 014		1987-,101), TURBO	1	.Gearbox housing	.Växellådshus	6
0040	1	40 25 078		102,127), TURBO	1	.Gearbox housing	.Växellådshus	6
0050	1	*40 25 086*		128), TURBO NLS - USE 4280038	1	.Gearbox housing	.Växellådshus	6
0060	1	75 79 428		1987-,101), I	1	.Gearbox housing	.Växellådshus	6
0070	1	75 99 780		102,127), I	1	.Gearbox housing	.Växellådshus	6
0080	1	*75 99 798*		128), I NLS - USE 4280046	1	.Gearbox housing	.Växellådshus	6
0090	2	75 71 920		GAT 4401	1	.Cover	.Lock	5
0100	2	*75 79 089*		GAT 4102, 4301, 4301S NLS - USE 7597784	1	.Cover	.Lock	5
0120	2	*75 94 930*		75), GA 64101, 74301 NLS - USE 7597784	1	.Cover	.Lock	5
0140	2	75 97 602		76), -1988, GA 64101, 74301	1	.Cover	.Lock	5
0160	2	75 97 784		500), 1989-	1	.Cover	.Lock	5
0170	2A	*75 78 313*		-1988 NLS - USE 7597784	1	.Cover	.Lock	5
0180	2B	75 78 362		-1988	4	.Brace	.Bygel	5
0190	3	75 56 228	S		1	.Gasket	.Packning	3
0200	4	75 57 754		30)	13	.Screw	.Skruv	5
0210	4	75 92 504		31), -1988	13	.Screw	.Skruv	5
0220	4	75 57 754		500), 1989-	13	.Screw	.Skruv	5
0230	5	75 74 031			1	.Sump	.Oljesump	6
0250	6	75 92 330	S	(7556012)	1	.Gasket	.Packning	2
0260	7	75 57 895			4	.Screw	.Skruv	5
0270	8	75 58 828			4	.Lock plate	.Låsplåt	5
0280	9	*75 71 409*		32) NLS - USE 7593502	1	.Plug	.Plugg	5
0290	9	75 93 502		33,133)	1	.Air vent valve	.Avluftningsventil	5
0300	9	75 97 222		134)	1	.Air vent valve	.Avluftningsventil	5
0310	10	75 71 391	S	133)	1	.Sealing ring	.Tätningsring	5
0340	11	75 94 948		135), (7577711,7592074)	1	.Dipstick	.Mätsticka	5
0350	11	40 26 449		136)	1	.Dipstick	.Mätsticka	5
0380	11A	75 94 880			X	..O-ring	..O-ring	3
0390	12	75 71 334			1	.Tube	.Rör	5
0400	13	75 57 887			1	.Screw	.Skruv	5
0430	14	75 99 525	S	(7577539,7597461)	1	.Filter	.Filter	3
0440	15	75 77 562		(7555972)	1	.Cover	.Lock	5
0460	16	75 94 187		(7571425)	1	.O-ring	.O-ring	3
0490	17	75 97 776		(7552102,7594138)	1	.O-ring	.O-ring	3
0500	18	75 57 804			3	.Screw	.Skruv	5
0510	21	75 57 960	S	147)	1	.Nut	.Mutter	5
0520	21	40 26 753	S	148)	1	.Nut	.Mutter	5
0530	22	79 33 872	S		1	.Washer	.Bricka	5
0540	23	75 54 934	S		1	.Adjustment screw	.Justerskruv	5

30. Gear box --5409
31. Gear box 5410--
32. Gear box --7108
33. Gear box 7109--
75. Gear box --20425
76. Gear box 20426--
101. Gear box --33905.
102. Gear box 33906--.
127. Ch. --K1023243, --K2013759, --K8001531.
128. Ch. K1023244--, K2013760--, K8001532--.
133. Gear box --46287.
134. Gear box 46288--.
135. Gear box --50179.
136. Gear box 50180--.
147. Gear box --49258.
148. Gear box 49259--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J16
Complete sets	3-J20

3-I22

Gear box case, cover

Växellådshus, lock

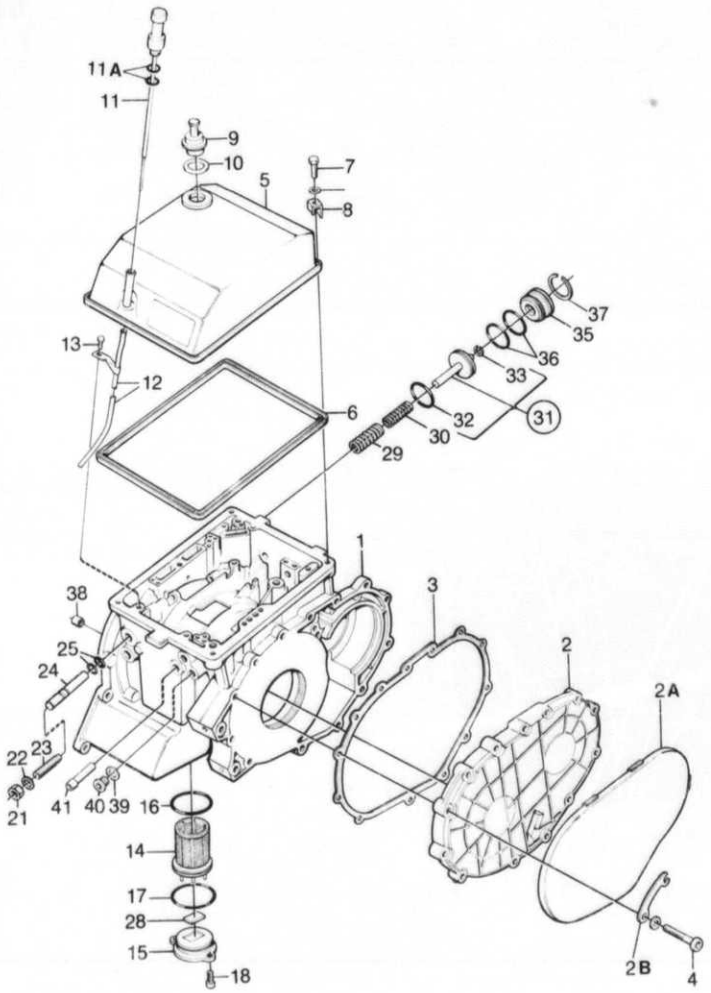

F0104 - 9000

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	24	75 54 926	S		1	.Bolt	.Bult	5
0560	25	75 52 144	S	-1987	1	.O-ring	.O-ring	3
0570	25	75 94 179		1988-	2	.O-ring	.O-ring	3
0580	28	75 76 788			1	.Magnet	.Magnet	3
0590	29	75 58 232			1	.Compression spring	.Tryckfjäder	5
0600	30	75 58 240			1	.Compression spring	.Tryckfjäder	5
0610	31	75 76 937			1	.Piston	.Kolv	5
0620	32	75 52 250			1	..O-ring	..O-ring	5
0630	33	75 59 008			1	..Retaining ring	..Spårring	5
0640	35	75 54 967			1	.Cover	.Lock	9
0650	36	75 56 996			2	.O-ring	.O-ring	5
0660	37	75 57 093			1	.Lock ring	.Låsring	5
0670	38	75 73 819			1	.Sleeve	.Hylsa	5
0680	39	75 58 356			2	.Sealing ring	.Tätningsring	3
0690	40	75 58 521			2	.Plug	.Plugg	5
0700	41	75 71 490			1	.Tube	.Rör	5
0710								
0720		75 75 442		FILTER COVER	X	.Sealing kit	.Tätningssats	3
0730				GEAR BOX GAT 4401				
0740				See page 4-073, 3-K02				
0750		75 75 475		OIL PAN	X	.Sealing kit	.Tätningssats	3
0760				GEAR BOX GAT 4401				
0770				See page 4-067, 3-J20				
0780		75 75 525		FILTER INSERT	X	.Repair kit	.Reparationssats	4
0790				See page 4-069, 3-J22				
0800		75 75 467		PRIMARY GEAR	X	.Sealing kit	.Tätningssats	3
0810				GEAR BOX GAT 4401				
0820				See page 4-069, 3-J22				
0830		75 75 491		BRAKE LINING	X	.Sealing kit	.Tätningssats	3
0840				GEAR BOX GAT 4401, 4301				
0850				See page 4-069, 3-J22				
0860		75 75 558		BRAKE LINING	X	.Repair kit	.Reparationssats	3
0870				GEAR BOX GAT 4401, 4301				
0880				See page 4-071, 3-J24				
0890		74 96 094			X	Gasket kit	Packningsats	3
0900				See page 4-079, 3-K08		Stage 1-2	Steg 1-2	
0910		74 96 102			X	Gasket kit	Packningsats	3
0920				See page 4-079, 3-K08		Stage 3	Steg 3	
0930		74 96 110		127), TURBO	X	Conversion kit	Ombyggnadssats	9
0940				See page 4-079, 3-K08				
0950		74 96 128		127), I	X	Conversion kit	Ombyggnadssats	9
0960				See page 4-079, 3-K08				

127. Ch. --K1023243, --K2013759, --K8001531.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-I24

Gears, pinion
Part 1

Drev, pinjong
Del 1

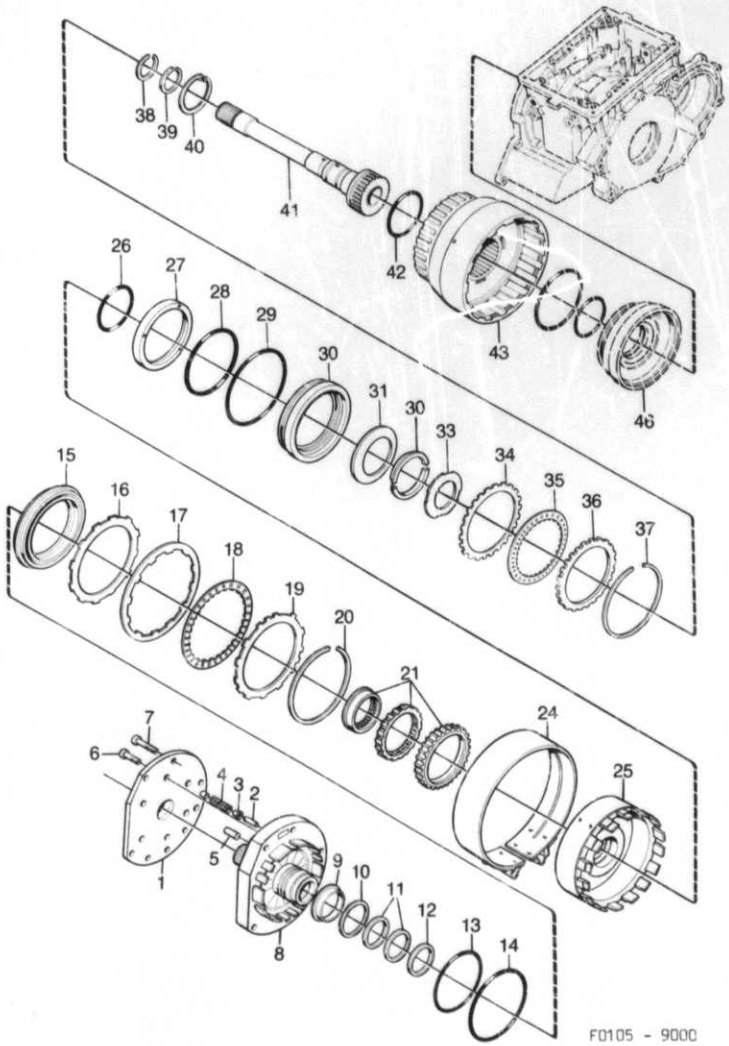

0650	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 53 522		61)	1	.Pump	.Pump	5
0030	1	75 96 935		62)	1	.Pump	.Pump	5
0040	2	75 56 319			1	.Valve	.Ventil	9
0050	3	75 56 327			1	.Spring guide	.Fjäderstyrning	5
0060	4	75 57 986			1	.Compression spring	.Tryckfjäder	5
0070	5	75 57 911		131)	2	.Guide pin	.Styrstift	5
0080	5	40 26 839		132)	2	.Guide pin	.Styrstift	5
0090	6	75 57 747			6	.Screw	.Skruv	5
0100	7	75 57 754			8	.Screw	.Skruv	5
0110	8	*75 74 254*		-1988 NLS - USE 4280061	1	.Intermediate section	.Mellanstycke	5
0120	8	75 97 164		1989-,105,500)	1	.Intermediate section	.Mellanstycke	5
0130	8	40 26 407		106)	1	.Intermediate section	.Mellanstycke	5
0140	9	75 52 896			1	.Angle washer	.Vinkelbricka	5
0150	10	*75 57 275*		1,00MM NLS - USE 4025979	X	.Washer	.Bricka	5
0160	10	*75 57 267*		1,20MM NLS - USE 4025961	X	.Washer	.Bricka	5
0170	10	*75 57 259*		1,40MM NLS - USE 4025953	X	.Washer	.Bricka	5
0180	10	*75 57 242*		1,60MM NLS - USE 4025946	X	.Washer	.Bricka	5
0190	10	*75 57 234*		1,80MM NLS - USE 4025938	X	.Washer	.Bricka	5
0200	10	*75 57 226*		2,00MM NLS - USE 4025920	X	.Washer	.Bricka	5
0210	10	75 57 218		2,20MM	X	.Washer	.Bricka	5
0220	10	*75 57 200*		2,40MM NLS - USE 4025904	X	.Washer	.Bricka	5
0230	10	75 57 192		2,60MM	X	.Washer	.Bricka	5
0240	10	*75 57 184*		2,80MM NLS - USE 4025888	X	.Washer	.Bricka	5
0250	10	*75 57 176*		3,00MM NLS - USE 4025870	X	.Washer	.Bricka	5
0260	10	*75 57 168*		3,20MM NLS - USE 4025862	X	.Washer	.Bricka	5
0270	10	*75 57 150*		3,40MM NLS - USE 4025854	X	.Washer	.Bricka	5
0280	10	*75 57 143*		3,60MM NLS - USE 4025847	X	.Washer	.Bricka	5
0290	11	75 76 077			2	.Piston ring	.Kolvring	5
0300	12	*75 78 271*		NLS - USE 4120945	1	.Piston ring	.Kolvring	5
0310	13	75 74 833			1	.O-ring	.O-ring	5
0320	14	75 52 151			1	.O-ring	.O-ring	5
0330	15	75 74 841			1	.Piston	.Kolv	5
0340	16	75 53 084			3	.Clutch disc	.Lamell	5
0350	17	75 52 961			1	.Spring disc	.Fjädertallrik	5
0360	18	75 70 740			3	.Clutch disc	.Lamell	5
0370	19	75 92 249			1	.Clutch disc	.Lamell	5
0380	20	75 72 639		0,90MM	X	.Lock ring	.Låsring	5
0390	20	75 72 621		1,10MM	X	.Lock ring	.Låsring	5
0400	20	75 72 613		1,30MM	X	.Lock ring	.Låsring	5
0410	20	75 58 786		1,50MM	X	.Lock ring	.Låsring	5
0420	20	75 72 605		1,70MM	X	.Lock ring	.Låsring	5
0430	20	75 74 890		1,90MM	X	.Lock ring	.Låsring	5
0440	20	75 95 895		-1986, 2,10MM	X	.Lock ring	.Låsring	5
0450	20	75 95 903		-1986, 2,30MM	X	.Lock ring	.Låsring	5
0460	20	75 95 887		-1986, 2,50MM	X	.Lock ring	.Låsring	5
0470	21	75 97 610			1	.Free wheel	.Frihjul	5
0480	24	*75 52 979*		NLS - USE 4026860	1	.Brake lining	.Bromsband	5
0490	24	40 26 860		GA 64103, 74303	1	.Brake lining	.Bromsband	5
0500	25	*75 78 743*		NLS - USE 4280426	1	.Cylinder	.Cylinder	5
0510	26	75 97 161			1	.O-ring	.O-ring	5
0520	27	75 70 351			1	.Spacer	.Mellanlägg	5
0530	28	75 52 268			1	.O-ring	.O-ring	5
0540	29	75 52 151			1	.O-ring	.O-ring	5
0550	30	75 73 280			1	.Piston	.Kolv	5
0560	30	75 54 868		TURBO	1	.Piston	.Kolv	5

61. Gear box --16849
62. Gear box 16850--
105. Gear box --39861.
106. Gear box 39862--.
131. Gear box --47917.
132. Gear box 47918--.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J02

Gears, pinion
Part 1

Drev, pinjong
Del 1

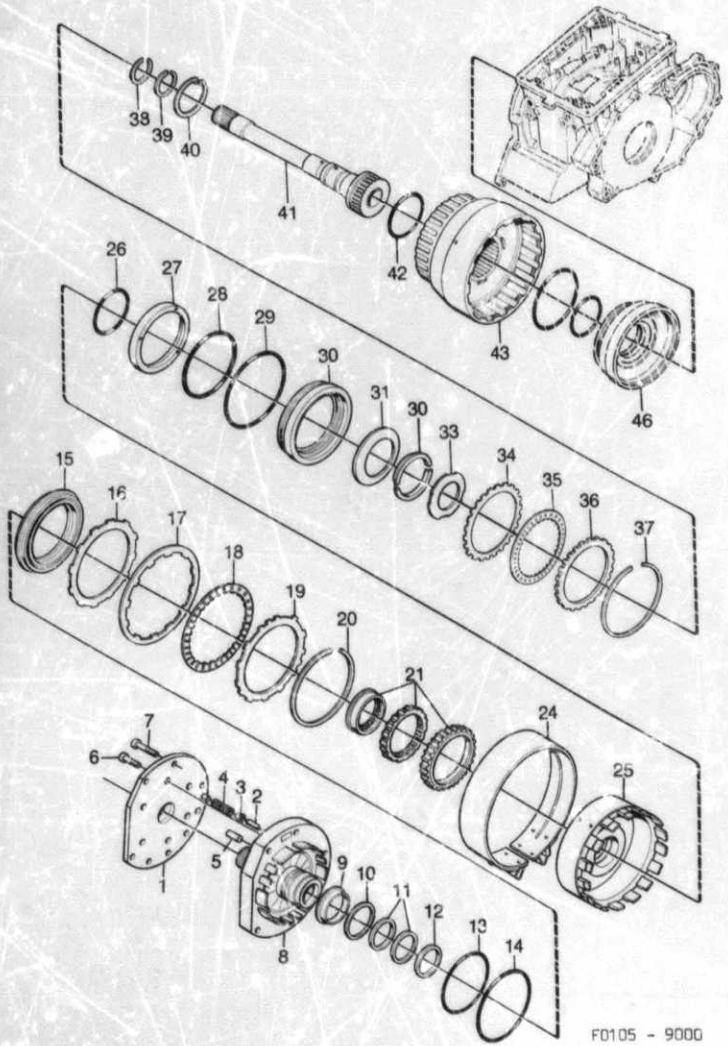


0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	31	75 52 912			1	.Spring disc	.Fjädertallrik	5
0580	32	75 54 900			1	.Stop ring	.Stoppring	5
0590	33	75 52 904			1	.Thrust washer	.Tryckbricka	5
0600	34	75 53 068		I	2	.Clutch disc	.Lamell	5
0610	34	75 53 068		TURBO	3	.Clutch disc	.Lamell	5
0620	35	75 72 704		I	2	.Clutch disc	.Lamell	5
0630	35	75 72 704		TURBO	3	.Clutch disc	.Lamell	5
0640	36	75 53 092			1	.Clutch disc	.Lamell	5
0650	37	75 53 217			1	.Lock ring	.Låsring	5
0660	38	75 75 632			1	.Piston ring	.Kolvring	5
0670	39	75 75 624			1	.Piston ring	.Kolvring	5
0680	40	75 59 024			1	.Stop ring	.Stoppring	5
0690	41	75 70 526			1	.Turbine shaft	.Turbinaxel	5
0700	42	75 94 153			1	.O-ring	.O-ring	5
0710	43	75 77 075			1	.Cylinder	.Cylinder	5
0720	46			See page 4-051, 3-J04		.Piston	.Kolv	
0730		74 96 052		See page 4-077, 3-K06	X	Disc kit	Lamellsats	2
0740						Clutch "B"	Koppling "B"	
0750		74 96 060		See page 4-077, 3-K06	X	Disc kit	Lamellsats	2
0760						Clutch "C"	Koppling "C"	
0770		74 96 094		See page 4-079, 3-K08	X	Gasket kit	Packningsats	3
0780						Stage 1-2	Steg 1-2	
0790		74 96 102		See page 4-079, 3-K08	X	Gasket kit	Packningsats	3
0800						Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

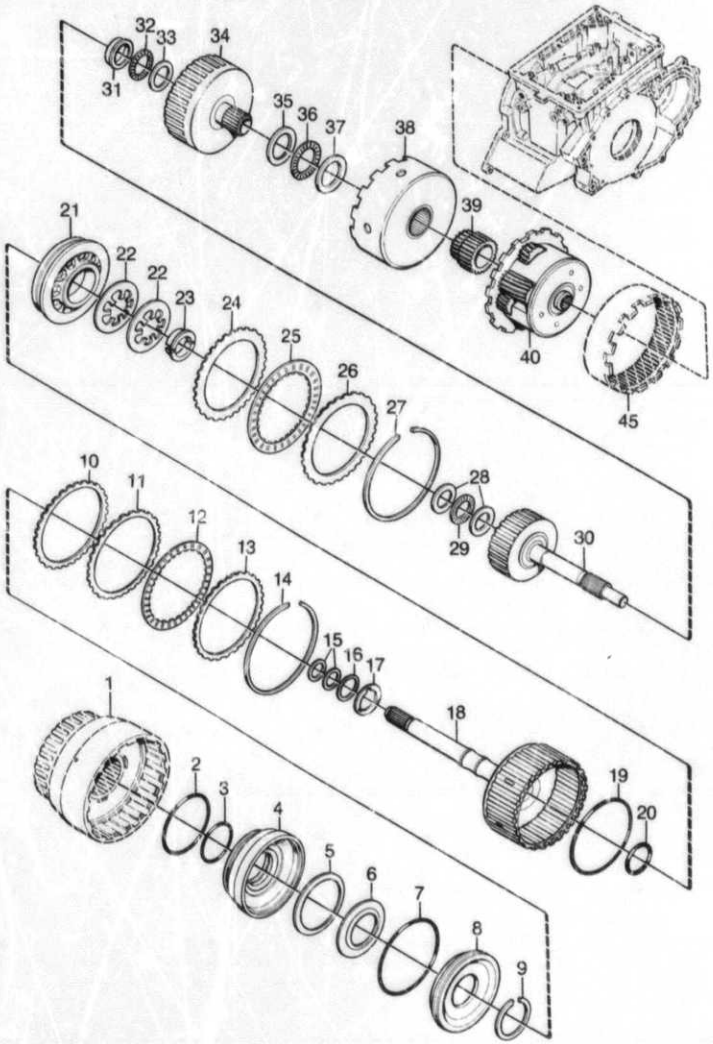

R 9816 - 9000

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1			See page 4-047, 3-I24		.Cylinder	.Cylinder	
0030	2	*75 52 185*		NLS - USE 4280558	1	.O-ring	.O-ring	5
0040	3	75 52 243			1	.O-ring	.O-ring	5
0050	4	75 56 061			1	.Piston	.Kolv	5
0060	5	75 77 588			1	.Spring disc	.Fjädertallrik	5
0070	6	75 52 920			1	.Spring disc	.Fjädertallrik	5
0080	7	75 52 193			1	.O-ring	.O-ring	5
0090	8	75 77 596			1	.Oil dam	.Balanskolv	5
0100	9	75 57 440			1	.Lock ring	.Låsring	5
0110	10	75 53 050			1	.Clutch disc	.Lamell	5
0120	11	75 53 068			5	.Clutch disc	.Lamell	5
0130	12	75 52 292			5	.Clutch disc	.Lamell	5
0140	13	75 53 092			1	.Clutch disc	.Lamell	5
0150	14	75 53 183		1,00MM	X	.Lock ring	.Låsring	5
0160	14	75 53 191		1,20MM	X	.Lock ring	.Låsring	5
0170	14	75 53 209		1,40MM	X	.Lock ring	.Låsring	5
0180	14	75 53 217		1,60MM	X	.Lock ring	.Låsring	5
0190	14	75 53 225		1,80MM	X	.Lock ring	.Låsring	5
0200	14	75 53 233		2,00MM	X	.Lock ring	.Låsring	5
0210	14	75 53 241		2,20MM	X	.Lock ring	.Låsring	5
0220	14	75 53 258		2,40MM	X	.Lock ring	.Låsring	5
0230	14	75 53 266		2,60MM	X	.Lock ring	.Låsring	5
0240	14	75 53 274		2,80MM	X	.Lock ring	.Låsring	5
0250	15	75 57 457			2	.Piston ring	.Kolvring	5
0260	16	75 74 817			1	.Piston ring	.Kolvring	5
0270	17	*75 70 146*		NLS - USE 4122800	1	.Thrust washer	.Tryckbricka	5
0280	18	75 72 530			1	.Motor shaft	.Motoraxel	5
0290	19	75 52 235			1	.O-ring	.O-ring	5
0300	20	75 52 201			1	.O-ring	.O-ring	5
0310	21	75 79 485		I	1	.Piston	.Kolv	5
0320	21	75 76 846		TURBO	1	.Piston	.Kolv	5
0330	22	75 53 605			2	.Spring disc	.Fjädertallrik	5
0340	23	*75 56 681*		NLS - USE 4122990	1	.Stop ring	.Stoppring	5
0350	24	75 72 571		I	4	.Clutch disc	.Lamell	5
0360	24	75 72 571		TURBO	5	.Clutch disc	.Lamell	5
0380	25	75 97 933		(7577109), I	4	.Clutch disc	.Lamell	5
0400	25	75 97 933		(7577109), TURBO	5	.Clutch disc	.Lamell	5
0410	26	75 76 796		I	1	.Clutch disc	.Lamell	5
0420	26	75 76 853		TURBO	1	.Clutch disc	.Lamell	5
0430	27	75 57 085			1	.Lock ring	.Låsring	5
0440	28	75 52 862			2	.Thrust washer	.Axialbricka	5
0450	29	75 52 870			1	.Angle washer	.Vinkelbricka	5
0460	30	75 54 801			1	.Countershaft	.Mellanaxel	5
0470	31	75 52 839			1	.Angle washer	.Vinkelbricka	5
0480	32	75 52 847			1	.Angle washer	.Vinkelbricka	5
0490	33	75 52 854			1	.Thrust washer	.Axialbricka	5
0500	34	75 56 079			1	.Sun gear	.Solhjul	5
0510	35	75 52 805			1	.Angle washer	.Vinkelbricka	5
0520	36	75 52 813			1	.Angle washer	.Vinkelbricka	5
0530	37	75 52 821			1	.Thrust washer	.Axialbricka	5
0550	38	75 95 937		(7554918)	1	.Cylinder	.Cylinder	5
0560	39	*75 53 548*		NLS - USE 4279808	1	.Sun gear	.Solhjul	5
0570	40	*75 78 768*		NLS - USE 4026423	1	.Planetary gear housing	.Planetväxelhus	5
0580	45			See page 4-053, 3-J06		.Ring gear	.Ringdrev	
0590		74 96 045		See page 4-077, 3-K06	X	Disc kit	Lamellsats	2
0600						Clutch "A"	Koppling "A"	
0610		74 96 086		See page 4-077, 3-K06	X	Disc kit	Lamellsats	2
0620						Clutch "E"	Koppling "E"	
0630		74 96 094		See page 4-079, 3-K08	X	Gasket kit	Packningssats	3
0640						Stage 1-2	Steg 1-2	
0650		74 96 102		See page 4-079, 3-K08	X	Gasket kit	Packningssats	3
0660						Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H09
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J06

Gears, pinion
Part 3

Drev, pinjong
Del 3

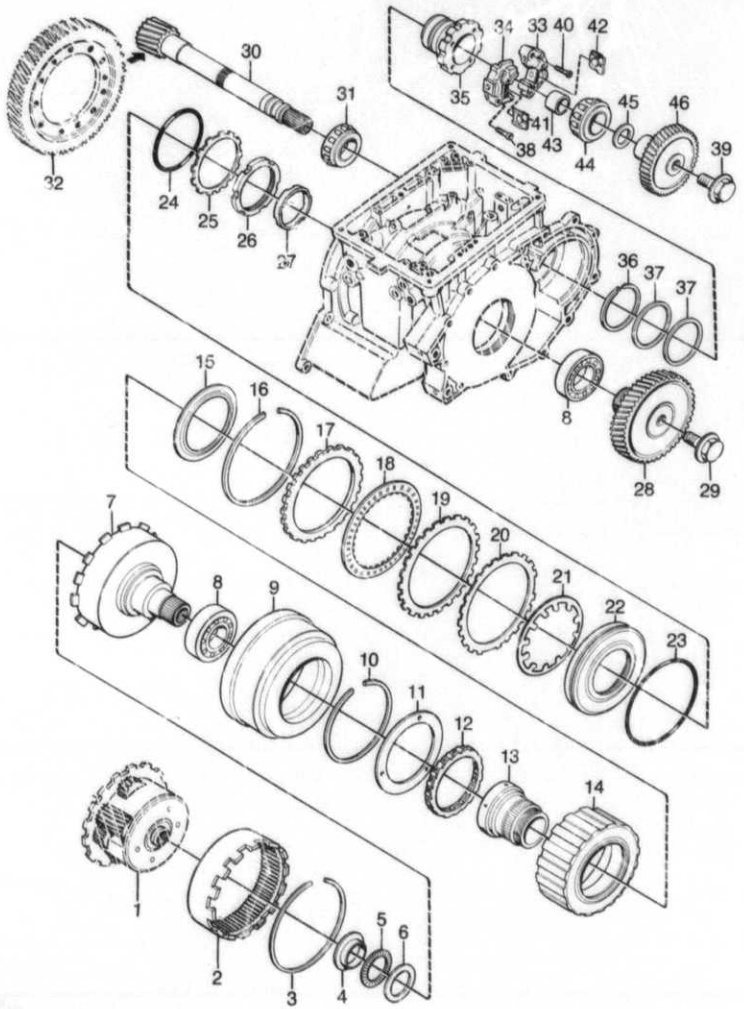

R 9817 - 9000

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	5
0020	1			See page 4-051, 3-J04		.Planetary gear	.Planetväxel	5
0040	2	75 97 214		(7555006)	1	.Ring gear	.Ringdrev	5
0050	3	75 57 101			1	.Lock ring	.Låsring	5
0060	4	75 52 797			1	.Angle washer	.Vinkelbricka	5
0070	5	75 71 938			1	.Needle bearing	.Axialnållager	5
0080	6	75 52 771			1	.Thrust washer	.Axialbricka	5
0090	7	*75 56 269*		NLS - USE 4122305	1	.Shaft	.Axel	5
0100	8	75 58 455			2	.Roller bearing	.Rullager	5
0110	9	*75 54 629*		NLS - USE 4122586	1	.Cylinder	.Cylinder	5
0120	10	*75 57 069*		NLS - USE 4120937	1	.Lock ring	.Låsring	5
0130	11	75 70 666			1	.Stop ring	.Stoppring	5
0140	12	*75 52 763*		-1988 NLS - USE 4025342	1	.Free wheel	.Frihjul	5
0150	12	40 25 342		500), 1989-	1	.Free wheel	.Frihjul	5
0160	13	75 78 248			1	.Free wheel hub	.Frihjulsnav	5
0170	14	*75 78 255*		NLS - USE 4122677	1	.Free wheel hub	.Frihjulsnav	5
0180	15	75 95 481		1988-	1	.Washer	.Bricka	5
0190	15	75 78 925		1987-	1	.Washer	.Bricka	5
0200	16	75 53 241		1988-, 2,20MM	X	.Lock ring	.Låsring	5
0210	16	75 53 266		2,60MM	X	.Lock ring	.Låsring	5
0220	16	75 77 273		3,00MM	X	.Lock ring	.Låsring	5
0230	16	75 77 265		3,50MM	X	.Lock ring	.Låsring	5
0240	16	75 77 257		4,00MM	X	.Lock ring	.Låsring	5
0250	16	75 77 240		-1987, 4,50MM	X	.Lock ring	.Låsring	5
0260	17	75 53 092			1	.Clutch disc	.Lamell	5
0270	18	75 52 326			6	.Clutch disc	.Lamell	5
0280	19	75 53 068			6	.Clutch disc	.Lamell	5
0290	20	75 53 050			1	.Clutch disc	.Lamell	5
0300	21	75 77 182			1	.Lock spring	.Låsfjäder	5
0310	22	75 77 224		1986	1	.Piston	.Kolv	5
0320	22	75 79 105		1987-	1	.Piston	.Kolv	5
0330	23	75 52 151			1	.O-ring	.O-ring	5
0340	24	*75 52 177*		1986	1	.O-ring	.O-ring	5
0350	24	75 97 354		1987-	1	.O-ring	.O-ring	5
0360	25	75 71 961			1	.Lock washer	.Låsbricka	5
0370	26	75 71 979			1	.Castle nut	.Kronmutter	5
0380	27	75 78 388		5,87MM	X	.Shim	.Shim	5
0390	27	75 78 396		5,90MM	X	.Shim	.Shim	5
0400	27	75 78 412		5,93MM	X	.Shim	.Shim	5
0410	27	75 78 420		5,96MM	X	.Shim	.Shim	5
0420	27	75 78 438		5,99MM	X	.Shim	.Shim	5
0430	27	75 78 446		6,02MM	X	.Shim	.Shim	5
0440	27	75 78 453		6,05MM	X	.Shim	.Shim	5
0450	27	75 78 461		6,08MM	X	.Shim	.Shim	5
0460	27	75 78 479		6,11MM	X	.Shim	.Shim	5
0470	27	75 78 487		6,14MM	X	.Shim	.Shim	5
0480	27	75 78 495		6,17MM	X	.Shim	.Shim	5
0490	27	75 78 503		6,20MM	X	.Shim	.Shim	5
0500	27	75 78 511		6,23MM	X	.Shim	.Shim	5
0510	27	75 78 529		6,26MM	X	.Shim	.Shim	5
0520	27	75 78 537		6,29MM	X	.Shim	.Shim	5
0530	27	75 78 545		6,32MM	X	.Shim	.Shim	5
0540	27	75 78 552		6,35MM	X	.Shim	.Shim	5
0550	27	75 78 560		6,38MM	X	.Shim	.Shim	5
0560	27	75 78 578		6,41MM	X	.Shim	.Shim	5
0570	27	75 78 586		6,44MM	X	.Shim	.Shim	5
0580	27	75 78 594		6,47MM	X	.Shim	.Shim	5
0590	27	75 78 602		6,50MM	X	.Shim	.Shim	5
0600	27	75 78 610		6,53MM	X	.Shim	.Shim	5
0610	27	75 78 628		6,56MM	X	.Shim	.Shim	5
0620	27	75 78 636		6,59MM	X	.Shim	.Shim	5
0630	28	75 79 444		I	1	.Gear	.Kugghjul	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J08

Gears, pinion
Part 3

Drev, pinjong
Del 3

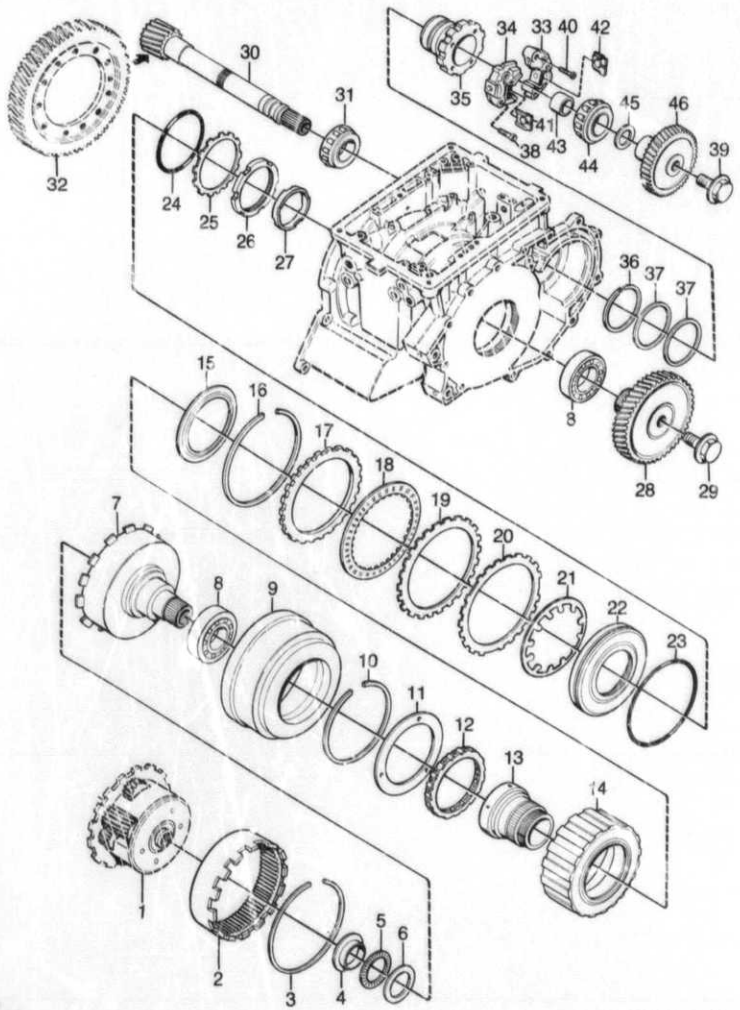

R 9817 - 9000

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	28	75 79 063		TURBO	1	.Gear	.Kugghjul	5
0660	29	75 97 347		(7571839)	1	.Screw	.Skruv	5
0670	30	*75 78 222*		NLS - USE 4122495	1	.Pinion shaft	.Pinjongaxel	5
0680	31	75 58 430			1	.Roller bearing	.Rullager	3
0690	32			See page 4-029, 3-I06		.Crown wheel	.Kronhjul	
0700	33	75 73 942	S	GAT 4401, 4301 4301S	1	.Valve housing	.Ventilhus	5
0720	33	75 92 140	S	GAT 4102	1	.Valve housing	.Ventilhus	5
0760	33	40 26 761	S	113), GA 64101, 64102 (7592678,7597362)	1	.Valve housing	.Ventilhus	5
0780	33	*40 25 219*	S	114), GA 64102 NLS - USE 4026761	1	.Valve housing	.Ventilhus	5
0790	33	75 92 603	S	65), GA 74301	1	.Valve housing	.Ventilhus	5
0820	33	75 99 731	S	66), GA 74301, 74302 (7597271)	1	.Valve housing	.Ventilhus	5
0840	34	75 97 248	S	55), GAT 4401, 4301S, 4301 (7578834)	1	.Valve housing	.Ventilhus	5
0860	34	75 96 877	S	56,69), GAT 4301	1	.Valve housing	.Ventilhus	5
0870	34	75 97 248	S	70), GAT 4301	1	.Valve housing	.Ventilhus	5
0880	34	75 97 255	S	55), GAT 4102 (7576099)	1	.Valve housing	.Ventilhus	5
0890	34	75 96 885	S	56,69), GAT 4102	1	.Valve housing	.Ventilhus	5
0900	34	75 97 255	S	70), GAT 4102	1	.Valve housing	.Ventilhus	5
0910	34	75 95 580	S	69), GA 64101	1	.Valve housing	.Ventilhus	5
0920	34	75 97 388	S	70), -1988, GA64101	1	.Valve housing	.Ventilhus	5
0940	34	75 97 388	S	1989-, GA 64102	1	.Valve housing	.Ventilhus	5
0950	34	75 95 614	S	69), GA 74301	1	.Valve housing	.Ventilhus	5
0960	34	75 97 412	S	70), -1988, GA 74301	1	.Valve housing	.Ventilhus	5
0980	34	75 97 412	S	1989-, GA 74302	1	.Valve housing	.Ventilhus	5
1010	35	75 92 298		GAT 4301S, 4401, 4301, 4102 (7574999)	1	.Regulator	.Regulator	5
1030	35	75 92 280		73), GA 64101, 74301,	1	.Regulator	.Regulator	6
1050	35	75 97 628		74), GA 64101, 74301	1	.Regulator	.Regulator	5
1070	36	*75 75 640*	S	32) NLS - USE 7592272	1	.Piston ring	.Kolvring	6
1080	36	75 92 272		33)	1	.Piston ring	.Kolvring	5
1090	37	75 57 465	S		2	.Seal	.Tätning	5
1100	38	75 57 804	S		2	.Screw	.Skruv	5
1110	39	75 97 347			1	.Screw	.Skruv	5
1120	40	75 57 804	S	GAT 4401, 4102, 4301, 4301S	2	.Screw	.Skruv	5
1140	40	75 92 645	S	GA 64101, 74301	3	.Screw	.Skruv	5
1150	41	75 53 001			1	.Fixing plate	.Fixerplatta	5
1160	42	75 75 038			1	.Fixing plate	.Fixerplatta	5
1170	43	75 74 221			1	.Spacer sleeve	.Distanshylsa	5
1180	44	75 74 205			1	.Roller bearing	.Rullager	3
1190	45	75 78 032		1,00MM	X	.Adjusting washer	.Justerbricka	5
1200	45	75 78 040		1,05MM	X	.Adjusting washer	.Justerbricka	5
1210	45	75 78 057		1,10MM	X	.Adjusting washer	.Justerbricka	5
1220	45	75 78 065		1,15MM	X	.Adjusting washer	.Justerbricka	5
1230	45	75 78 073		1,20MM	X	.Adjusting washer	.Justerbricka	5
1240	45	75 78 081		1,25MM	X	.Adjusting washer	.Justerbricka	5
1250	45	75 78 099		1,30MM	X	.Adjusting washer	.Justerbricka	5
1260	45	75 78 107		1,35MM	X	.Adjusting washer	.Justerbricka	5

32. Gear box --7108
33. Gear box -7109--
55. Gear box -18716
56. Gear box 18717-
65. Gear box --20662
66. Gear box 20663--
69. Gear box --24090
70. Gear box 24091--
73. Gear box --24090
74. Gear box 24091--
113. Gear box --44134.
114. Gear box 44135--.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J10

Gears, pinion
Part 3

Drev, pinjong
Del 3

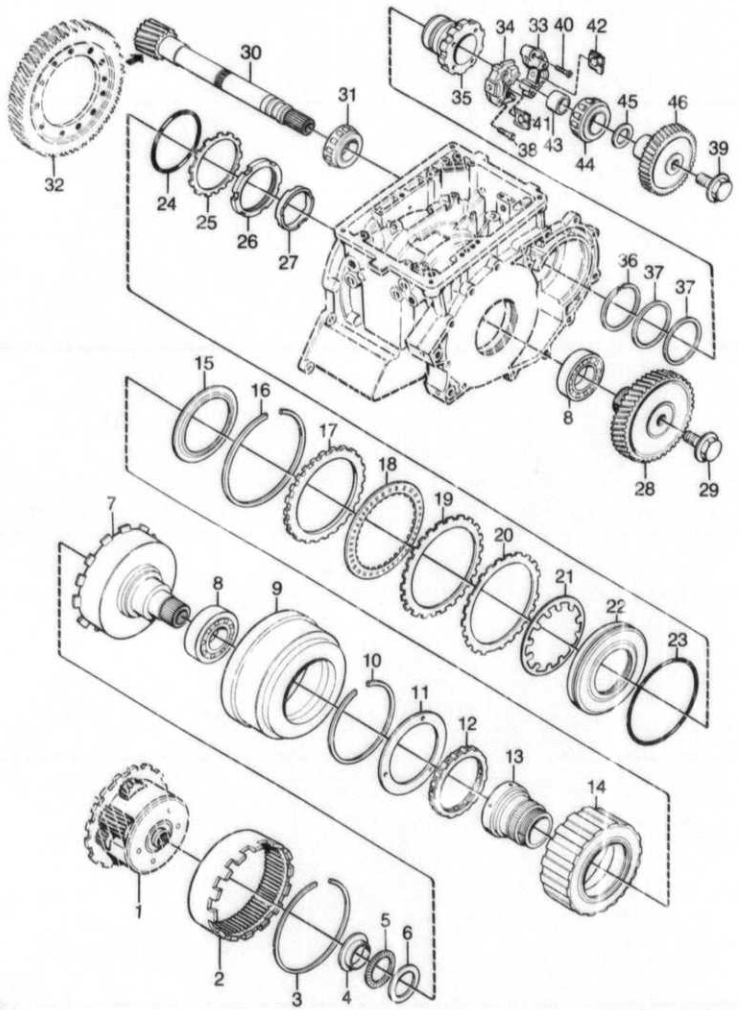

R 9817 - 9000

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1270	45	75 78 115		1,40MM	X	.Adjusting washer	.Justerbricka	5
1280	45	75 78 123		1,45MM	X	.Adjusting washer	.Justerbricka	5
1290	45	75 78 131		1,50MM	X	.Adjusting washer	.Justerbricka	5
1300	45	75 78 149		1,55MM	X	.Adjusting washer	.Justerbricka	5
1310	45	75 78 156		1,60MM	X	.Adjusting washer	.Justerbricka	5
1320	45	75 78 164		1,65MM	X	.Adjusting washer	.Justerbricka	5
1330	45	75 78 172		1,70MM	X	.Adjusting washer	.Justerbricka	5
1340	45	75 78 180		1,75MM	X	.Adjusting washer	.Justerbricka	5
1350	45	75 78 198		1,80MM	X	.Adjusting washer	.Justerbricka	5
1360	45	75 78 206		1,85MM	X	.Adjusting washer	.Justerbricka	5
1370	45	75 78 214		1,90MM	X	.Adjusting washer	.Justerbricka	5
1380	45	40 25 094		1,95MM	X	.Adjusting washer	.Justerbricka	5
1390	46	75 79 451		I	1	.Gear	.Kugghjul	5
1400	46	75 79 071		TURBO	1	.Gear	.Kugghjul	5
1410								
1420		75 75 582		GOVERNOR HOUSING	X	.Repair kit	.Reparationssats	5
1430				GAT 4401				
1440				See page 4-069, 3-J22				
1450		74 96 078		See page 4-077, 3-K06	X	Disc kit	Lamellsats	2
1460						Clutch "D"	Koppling "D"	
1470		74 96 094		See page 4-079, 3-K08	X	Gasket kit	Packningsats	3
1480						Stage 1-2	Steg 1-2	
1490		74 96 102		See page 4-079, 3-K08	X	Gasket kit	Packningsats	3
1500						Stage 3	Steg 3	


MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

4 GROUP INDEX

Clutch	**3-H06**
Clutch control	**3-H08**
Gear box, manual	**3-H12**
Gear box control, manual	**3-I08**
Gear box, automatic	**3-I16**
Gear box control, automatic	**3-J18**
Complete sets	**3-J20**

3-J12

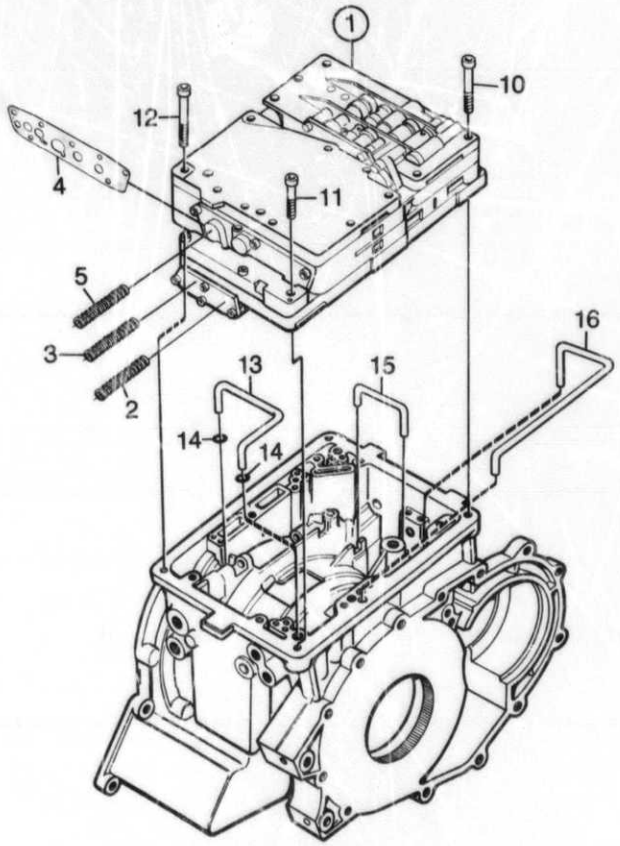

F7130 9000

0700	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010					See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1		*75 79 311*		156),1986, GAT 4401,4301 NLS - USE 7595002, 7597917	1	.Control unit	.Kontrollenhet	5
0030	1		*75 79 592*		1987-,30,156), GAT 4301, 4301S NLS - USE 7595002, 7597917	1	.Control unit	.Kontrollenhet	5
0050	1		*75 92 447*		31,156), GAT 4301, 4301S NLS - USE 7595002, 7597917	1	.Control unit	.Kontrollenhet	5
0060	1		75 92 058		GAT 4102	1	.Control unit	.Kontrollenhet	5
0070	1		75 97 917		GA 74301, 74302 (7592579,7597891)	1	.Control unit	.Kontrollenhet	5
0090	1		40 26 704		GA 74303	1	.Control unit	.Kontrollenhet	5
0100	1		75 97 909		GA 64101, 64102 (7592652,7597883)	1	.Control unit	.Kontrollenhet	5
0120	1		40 26 829		GA 64103	1	.Control unit	.Kontrollenhet	5
0130	2		75 77 166			1	..Spring reverse	..Fjäder back	6
0150	3	•	44 78 046			1	..Spring front	..Fjäder fram	6
0170	4	•	44 77 386			1	..Gasket	..Packning	
0180	5	•	75 58 141		166)	1	..Spring	..Fjäder	6
0190	5	•	75 75 251		166)	1	..Spring	..Fjäder	6
0200	10		75 57 846		51)	9	.Screw	.Skruv	5
0210	10		75 93 650		52)	8	.Screw	.Skruv	5
0220	11		75 57 754			1	.Screw	.Skruv	5
0230	12		75 57 846		52)	1	.Screw	.Skruv	5
0240	13		*75 70 252*		51), TURBO NLS - USE 7595002	1	.Tube	.Rör	4
0250	13		75 95 002		52), TURBO	1	.Tube	.Rör	4
0260	14		75 77 482	S	32), TURBO	2	.O-ring	.O-ring	3
0270	14		75 94 146	S	33), TURBO	2	.O-ring	.O-ring	3
0280	15		75 70 294			1	.Tube	.Rör	5
0290	16		75 70 310			1	.Tube	.Rör	5
0300			74 96 094		See page 4-079, 3-K08	X	Gasket kit Stage 1-2	Packningsats Steg 1-2	3
0320			74 96 102		See page 4-079, 3-K08	X	Gasket kit Stage 3	Packningsats Steg 3	3

30. Gear box --5409
31. Gear box 5410--
32. Gear box --7108
33. Gear box 7109--
51. Gear box -15705
52. Gear box 15706-
156. Superseded by 75 97 917 and 79 95 002. Ersatt av 75 97 917 och 79 95 002.
166. See SI 440-1542 Se SI 440-1542


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch contrc'	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J14

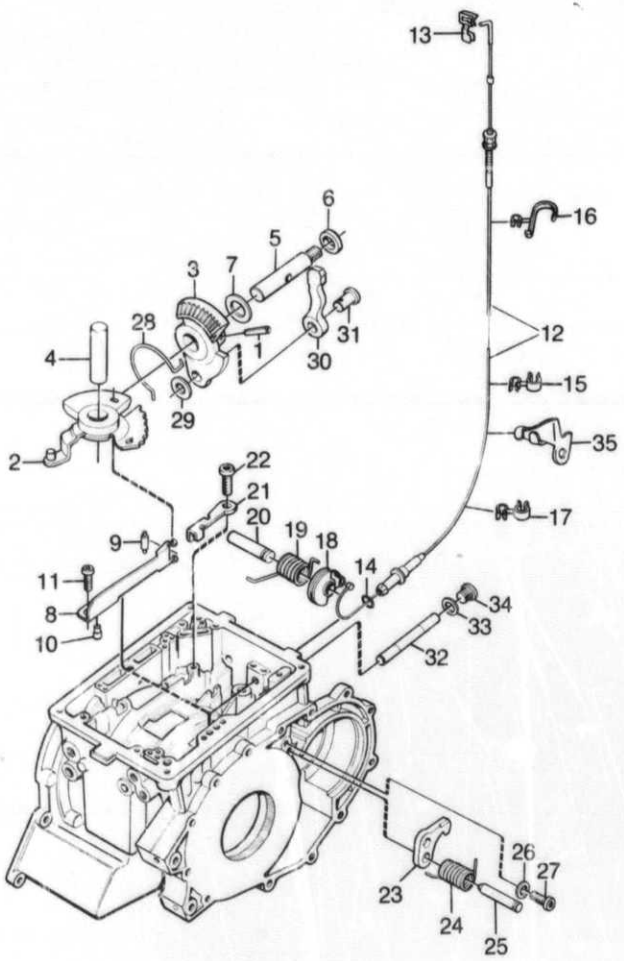

F2475 - 9000

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 57 952			1	.Pin	.Pinne	5
0030	2	*75 74 130*		NLS - USE 4122578	1	.Catch	.Spärrskiva	4
0040	3	75 56 103	S		1	.Segment	.Segment	5
0050	4	75 56 913		(7575285)	1	.Bolt	.Bult	4
0060	5	75 56 095	S		1	.Shaft	.Axel	5
0070	6	75 52 276			1	.Shaft seal	.Axeltätning	3
0080	7	75 56 889	S	0,5MM	1	.Washer	.Bricka	4
0090	7	75 56 871	S	0,6MM	X	.Washer	.Bricka	4
0100	7	75 56 863	S	0,7MM	X	.Washer	.Bricka	4
0110	7	75 56 855	S	0,8MM	X	.Washer	.Bricka	4
0120	7	75 56 848	S	0,9MM	X	.Washer	.Bricka	4
0130	7	75 71 599	S	1,0MM	X	.Washer	.Bricka	4
0140	7	75 71 581	S	1,1MM	X	.Washer	.Bricka	4
0150	7	75 71 573	S	1,2MM	X	.Washer	.Bricka	4
0160	7	75 71 565	S	1,3MM	X	.Washer	.Bricka	4
0170	7	75 71 557	S	1,4MM	X	.Washer	.Bricka	4
0180	7	75 71 540	S	1,5MM	X	.Washer	.Bricka	4
0190	7	75 71 532	S	1,6MM	X	.Washer	.Bricka	4
0200	7	75 71 524	S	1,7MM	X	.Washer	.Bricka	4
0210	7	75 71 516	S	1,8MM	X	.Washer	.Bricka	4
0220	7	75 71 508	S	1,9MM	X	.Washer	.Bricka	4
0230	8	75 73 934			1	.Spring	.Fjäder	4
0240	9	75 58 836			1	.Roller	.Rulle	4
0250	10	75 56 905	S		1	.Pin	.Pinne	4
0260	11	75 57 762	S		2	.Screw	.Skruv	5
0270	12	40 26 282		GAT 4401, 4301S (7579287)	1	.Cable	.Kabel	4
0280								
0290	12	40 26 274		GAT 4102, 4301 (7577430)	1	.Cable	.Kabel	4
0310	12	40 28 239		1988-, GA 64101, 74301 (7595713)	1	.Cable	.Kabel	4
0320								
0330	13	83 08 389		GAT 4401, 4301S	1	..Clip	..Clips	5
0340	13	83 22 331		GAT 4301, 4102, GA 64101, 74301	1	..Clip	..Clips	5
0350								
0360	14	*75 75 392*	S	NLS - USE 4119244	1	..Sealing ring	..Tätningsring	3
0370	15	73 99 272		1987-,20)	1	.Clamp	.Klammer	5
0380	15	73 99 272		21)	2	.Clamp	.Klammer	5
0390	15	73 99 272		1987-,20), RHD	1	.Clamp	.Klammer	5
0400	15	75 11 256		21), -1987, RHD	1	.Clamp	.Klammer	5
0410	15	73 99 272		1988-, RHD	1	.Clamp	.Klammer	5
0420	16	73 99 652		1988-	1	.Clamp	.Klammer	5
0430	17	73 99 660		1988-, ABS	1	.Clamp	.Klammer	5
0440	18	75 56 111	S		1	.Cam disc	.Kamskiva	5
0450	19	75 56 145	S		1	.Spring	.Fjäder	6
0460	20	75 56 137	S		1	.Shaft	.Axel	6
0470	21	75 56 939	S		1	.Fixing plate	.Fixerplatta	5
0480	22	75 57 903	S		1	.Hexagon screw	.Sexkantsskruv	5
0490	23	75 54 702	S	43)	1	.Stop	.Spärrklack	4
0500	23	75 95 564		44,73)	1	.Stop	.Spärrklack	4
0510	23	75 97 115		74,127)	1	.Stop	.Spärrklack	4
0520	23	40 25 136		128)	1	.Stop	.Spärrklack	4
0530	24	75 54 710	S		1	.Spring	.Fjäder	4
0540	25	75 54 728	S		1	.Pin	.Pinne	4
0550	26	75 54 694			1	.Washer	.Bricka	5
0560	27	75 57 762			1	.Screw	.Skruv	5

20. Ch. --H1011639
21. Ch. H1011640--, H8000041--
43. Gear box --8405
44. Gear box 8406--
73. Gear box --24090
74. Gear box 24091--
127. Ch. --K1023243, --K2013759, --K8001531.
128. Ch. K1023244--, K2013760--, K8001532--.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J16

Controls in gear box

Reglage i växellådshus

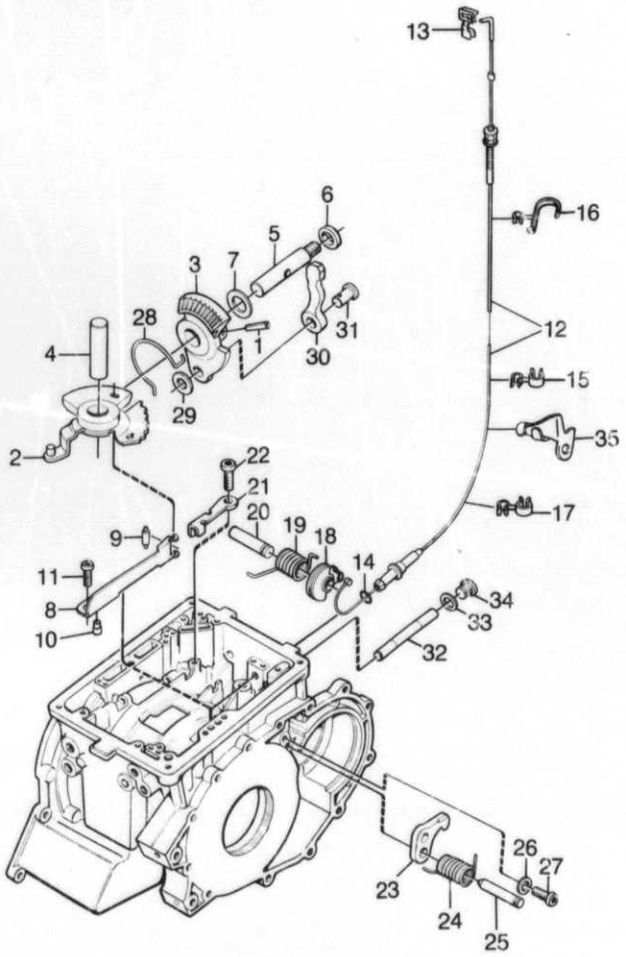

F2475 - 9000

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	28	75 54 660	S		1	.Spring clamp	.Fjäderklämma	5
0580	29	75 54 694	S		1	.Washer	.Bricka	5
0590	30	75 54 678	S		1	.Lock lug	.Låsklack	4
0600	31	75 54 686	S		1	.Pin	.Pinne	5
0610	32	75 54 736	S		1	.Shaft	.Axel	6
0620	33	75 52 342	S		1	.Seal	.Tätning	5
0630	34	75 58 513			1	.Hexagon screw	.Sexkantsskruv	5
0635	35	41 18 311		ABS	1	.Bracket	.Konsol	5
0640								
0650		75 75 483		THROTTLE CABLE	X	.Sealing kit	.Tätningssats	3
0660				GAT 4301, 4401				
0670				See page 4-071, 3-J24				
0680		75 75 533		THROTTLE CABLE	X	.Repair kit	.Reparationssats	4
0690				GAT 4301, 4401				
0700				See page 4-071, 3-J24				
0710		75 75 541		PARKING BRAKE PAWL	X	.Repair kit	.Reparationssats	5
0720				GAT 4401				
0730				See page 4-071, 3-J24				
0740		75 56 962	S	SPACER WASHER	X	.Washer	.Bricka	4
0750				GAT 4401				
0760				See page 4-071, 3-J24				
0770		74 96 094		See page 4-079, 3-K08	X	Gasket kit	Packningssats	3
0780						Stage 1-2	Steg 1-2	
0790		74 96 102		See page 4-079, 3-K08	X	Gasket kit	Packningssats	3
0800						Stage 3	Steg 3	

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

3-J18

Gear selector lever — *Växelväljarspak*

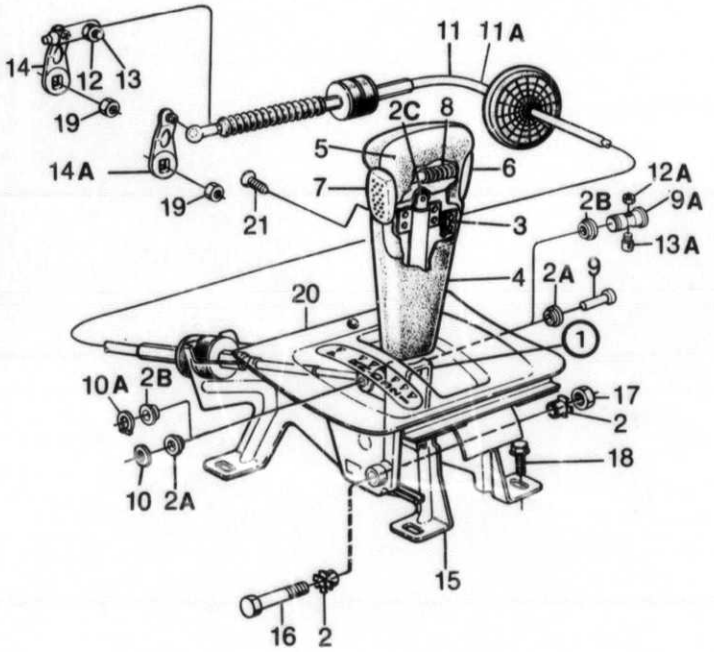

F4099 9000

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 59 115		18)	1	Gear lever	Växelspak	5
0020	1	*75 93 064*		19) NLS - USE 4280830	1	Gear lever	Växelspak	5
0030	2	75 50 841			2	.Bushing	.Bussning	3
0040	2A	75 50 825		18)	2	.Bushing	.Bussning	3
0050	2B	75 79 253		19)	2	.Bushing	.Bussning	3
0060	2C	75 53 365			1	.Roller	.Rulle	3
0070	3	75 50 783			1	Spacer	Distans	4
0080	4	*75 77 349*		NLS - USE 4118089	1	Outer casing	Hölje	6
0090	5	75 50 742			1	Cover	Lock	5
0100	6	75 50 718			1	Button	Knapp	4
0110	7	75 50 726			1	Button	Knapp	4
0120	8	75 50 734			1	Spring	Fjäder	5
0130	9	75 50 833		18)	1	Pin	Axeltapp	4
0140	9A	75 79 246		19,36)	1	Bracket	Fäste	6
0150	9A	75 93 148		37)	1	Bracket	Fäste	6
0160	10	79 68 076		18)	1	Retaining ring	Spårring	5
0170	10A	79 15 093		19)	2	Retaining ring	Spårring	5
0180	11	75 72 852		18)	1	Gear selector	Växelväljare	3
0190	11A	75 77 927		19)	1	Gear selector	Växelväljare	3
0200	11	75 77 018		18), RHD	1	Gear selector	Växelväljare	3
0210	11A	*75 77 919*		19,36), RHD NLS - USE 7577000, 7577927	1	Gear selector	Växelväljare	3
0220	11A	75 77 927		37), RHD	1	Gear selector	Växelväljare	3
0230	11B	75 50 973			1	.Grommet	.Genomföring	3
0240	11B	75 77 000		36), RHD	1	.Grommet	.Genomföring	3
0250	11B	75 50 973		37), RHD	1	.Grommet	.Genomföring	3
0260	12	80 74 106		18)	1	Nut	Mutter	5
0270	12A	79 74 298		19,97)	1	Nut	Mutter	5
0280	12A	79 71 658		98)	1	Nut	Mutter	5
0290	13	75 51 526		18)	1	Bolt	Bult	3
0300	13A	75 77 935		19,36)	1	Bolt	Bult	3
0310	13A	75 93 130		37)	1	Bolt	Bult	3
0320	14	*75 59 602*		24) NLS - USE 7592033	1	Ball joint	Kulled	5
0330	14A	75 92 033		25)	1	Ball joint	Kulled	5
0340	15	*75 50 650*		NLS - USE 4281457	1	Bracket	Konsol	6
0350	15	75 92 025		RHD	1	Bracket	Konsol	6
0360	16	75 50 858			1	Screw	Skruv	5
0370	17	80 74 106		-1987	1	Nut	Mutter	5
0380	17	81 51 235		1988-	1	Nut	Mutter	5
0390	18	82 86 296			4	Screw	Skruv	5
0400	19	79 77 630			1	Nut	Mutter	5
0405	20			See page 8B-025, 5-B02		Cover	Kåpa	
0407	21	79 70 320			2	Screw	Skruv	5
0410				See page 3A-077, 2-D06		Switch	Strömställare	

18. Ch. --H1005768, --H8000481
19. Ch. H1005769--, H8000482--
24. Ch. --H1016945, --H8000481
25. Ch. H1016946--, H8000482--
36. Ch. --H1022892, --H8001049
37. Ch. H1022893--, H8001050--
97. Ch. --J1027694, --J2016803. --J8001618
98. Ch. J1027695--, J2016804--, J8001619--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20


Complete set
3-J20
Transmission


Satser
Kraftöverföring

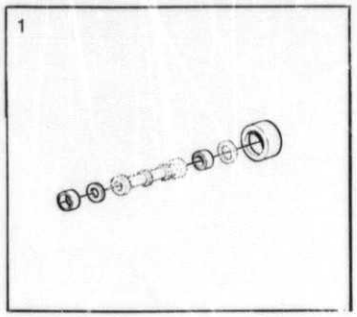


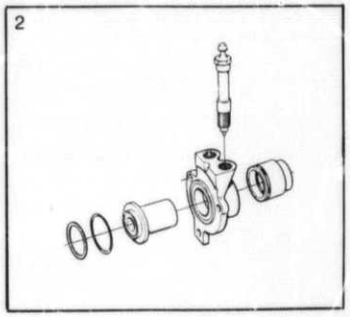

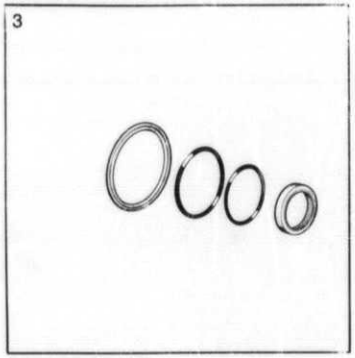

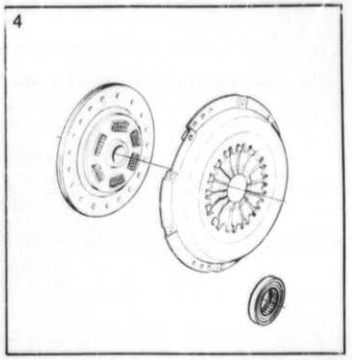

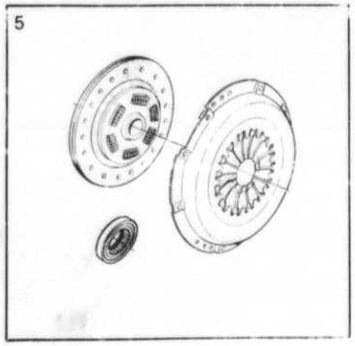

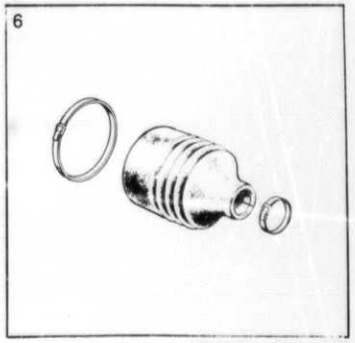

R 9034-9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 156		MASTER CYLINDER, CLUTCH	X	Repair kit	Reparationssats	1
0020		89 03 304			1	.Gasket	.Packning	
0030		*73 13 182*		NLS	1	.Washer	.Bricka	
0040		89 40 769			1	.Gasket	.Packning	5
0050		73 13 240			1	.Seal	.Tätning	6
0060		89 45 248			1	.Gasket	.Packning	5
0070		89 45 255			1	.Washer	.Bricka	5
0080								
0140	2	87 81 189		(8781130)	X	Slave cylinder	Slavcylinder	2
0150		87 23 504		1)	1	.Slave cylinder	.Slavcylinder	2
0160		87 23 520			1	.O-ring	.O-ring	3
0170								
0180	3	87 81 122		SLAVE CYLINDER	X	Sealing kit	Tätningssats	1
0190		87 22 118		1)	1	.Seal	.Tätning	3
0200		87 22 126		1)	1	.Seal	.Tätning	3
0210		87 22 001		1)	1	.Seal	.Tätning	2
0220		87 23 520		1)	1	.O-ring	.O-ring	3
0230								
0240	4	*87 81 049*		49) NLS - USE 8781320	X	Clutch kit	Kopplingssats	2
0250		[illegible]89			1	.Pressure plate	.Tryckskiva	2
0260		[illegible]7		NLS - USE 8727695	1	.Clutch disc	.Lamell	2
0270		87 [illegible]995			1	.Release bearing	.Urtrampningslager	2
0280								
0290	4	*87 81 254*		50) NLS - USE 8781320	X	Clutch kit	Kopplingssats	2
0300		87 22 589			1	.Pressure plate	.Tryckskiva	2
0310		*87 27 950*		NLS - USE 8727695	1	.Clutch disc	.Lamell	2
0320		87 21 995			1	.Release bearing	.Urtrampningslager	2
0330								
0340	5	*87 81 056*		49), 1987-, I NLS - USE 8781312	X	Clutch kit	Kopplingssats	2
0350		87 28 123			1	.Pressure plate	.Tryckskiva	2
0360		*87 26 606*		NLS - USE 8730806	1	.Clutch disc	.Lamell	2
0370		87 21 995			1	.Release bearing	.Urtrampningslager	2
0380								
0390	5	*87 81 262*		50), 1987-, I NLS - USE 8781338	X	Clutch kit	Kopplingssats	2
0400		87 28 123			1	.Pressure plate	.Tryckskiva	2
0410		*87 26 606*		NLS - USE 8730806	1	.Clutch disc	.Lamell	2
0420		87 21 995			1	.Release bearing	.Urtrampningslager	2
0430								
0440	6	*89 61 864*		-1988, OUTER UNIV. JOINT NLS - USE 8993628	X	Bellows kit	Bälgsats	2
0450		*89 53 135*		1) NLS - USE 4002747	1	.Bellows	.Bälg	2
0460		71 67 117			2	.Band iron	.Bandjärn	3
0470		70 48 473			2	.Clamp	.Klammer	3
0480								
0490	6	89 93 628		1989-, OUTER UNIV. JOINT	X	Bellows kit	Bälgsats	2
0500		40 02 747		1)	1	.Bellows	.Bälg	2
0510		71 67 117			2	.Band iron	.Bandjärn	3
0520		70 48 473			2	.Clamp	.Klammer	3

1. Not as separate spare part. Ej som separat reservdel.
49. Asbestos Asbest
50. Asbestos free. Asbestfri.


MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**


4 GROUP INDEX


Clutch	**3-H06**
Clutch control	**3-H08**
Gear box, manual	**3-H12**
Gear box control, manual	**3-I08**
Gear box, automatic	**3-I16**
Gear box control, automatic	**3-J18**
Complete sets	**3-J20**


3-J22

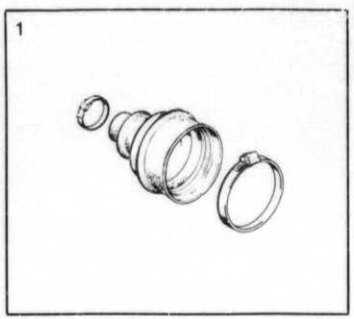


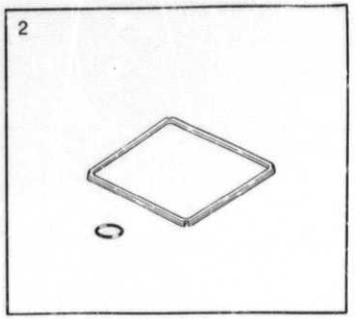

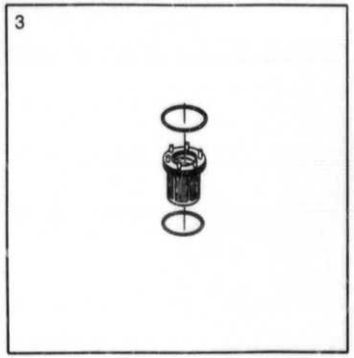

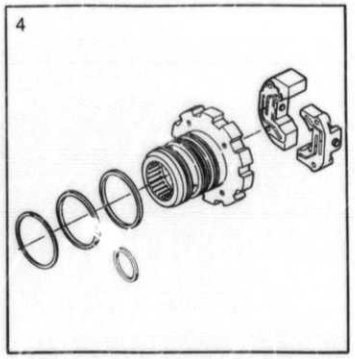

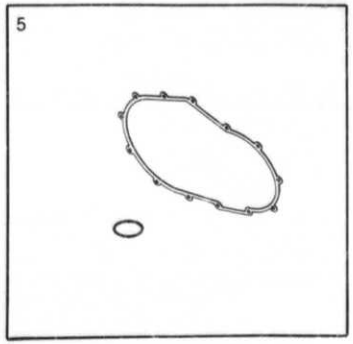

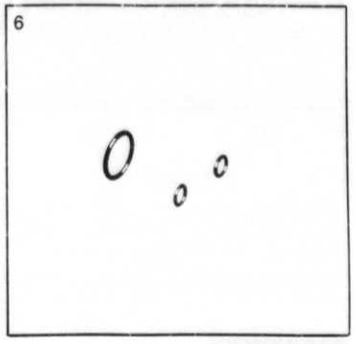

R 8626 - 9000

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 61 872*		111), DRIVE SHAFT NLS - USE 8993636	X	Bellows kit	Bälgsats	3
0020		89 55 007		1)	1	.Bellows	.Bälg	3
0030		70 48 465			1	.Band iron	.Bandjärn	5
0040		70 48 473			1	.Clamp	.Klammer	3
0050		79 70 163			1	.Hose clamp	.Slangklamma	5
0070	1	89 93 636		112), DRIVE SHAFT	X	Bellows kit	Bälgsats	3
0080		89 55 007		1)	1	.Bellows	.Bälg	3
0090		70 48 465			1	.Band iron	.Bandjärn	5
0100		70 48 473			1	.Clamp	.Klammer	3
0110		89 72 986			1	.Clamp	.Klämma	5
0130	2	75 75 475		A, OIL PAN GEAR BOX GAT 4401	X	Sealing kit	Tätningssats	3
0150		75 92 330			1	.Gasket	.Packning	2
0160		75 71 391			1	.Sealing ring	.Tätningsring	5
0180	3	75 75 525		A, FILTER INSERT	X	Repair kit	Reparationssats	4
0190		75 94 187			1	.O-ring	.O-ring	3
0200		75 97 776			1	.O-ring	.O-ring	3
0210		75 99 525			1	.Filter	.Filter	3
0220		75 71 391			1	.Sealing ring	.Tätningsring	5
0240	4	75 75 582		A, GOVERNOR HOUSING GEAR BOX GAT 4401	X	Repair kit	Reparationssats	5
0260		75 97 776			1	.O-ring	.O-ring	3
0270		75 56 228			1	.Gasket	.Packning	3
0280		75 57 465			2	.Seal	.Tätning	5
0290		75 73 942			1	.Valve housing	.Ventilhus	5
0300		75 73 959			1	.Valve housing	.Ventilhus	5
0310		75 92 298			1	.Regulator	.Regulator	5
0320		*75 75 640*		NLS - USE 7592272	1	.Piston ring	.Kolvring	6
0340	5	75 75 467		A, PRIMARY GEAR GEAR BOX GAT 4401	X	Sealing kit	Tätningssats	3
0360		75 97 776			1	.O-ring	.O-ring	3
0370		75 56 228			1	.Gasket	.Packning	3
0390	6	75 75 491		A, BRAKE LINING GEAR BOX GAT 4301, -4401	X	Sealing kit	Tätningssats	3
0410		75 52 144			1	.O-ring	.O-ring	3
0420		75 71 482			2	.O-ring	.O-ring	3

1. Not as separate spare part. Ej som separat reservdel.
111. Ch. --K1002690, --K2001222, --K8000042. For SW 1988B: Ch. --J1050265, --J2030661, --J8005205.
112. Ch. K1002691--, K2001223--, K8000043--. For SW 1988B: J1050266--, J2030662--, J8005206--.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20


Complete set
3-J24
Transmission


Satser
Kraftöverföring

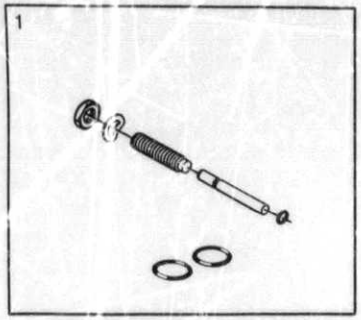


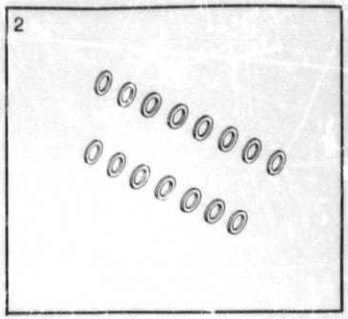

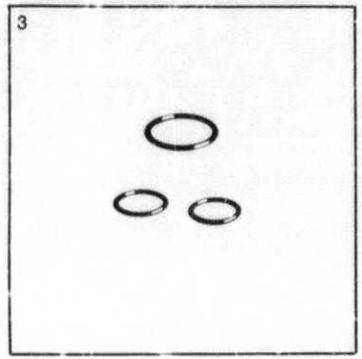

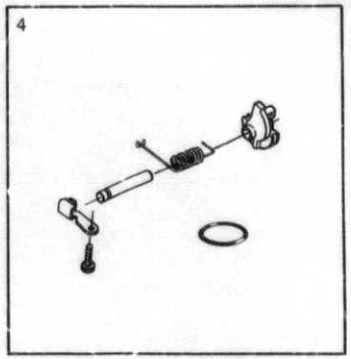

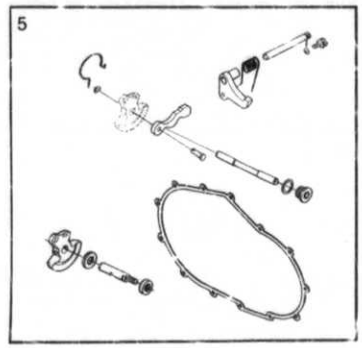

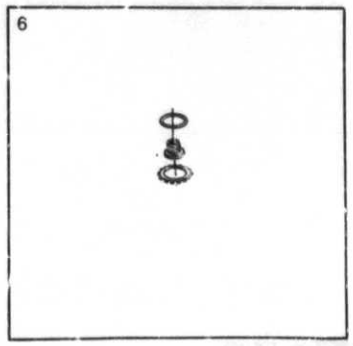

R 8627 - 9000


1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 75 558		A, BRAKE LINING GEAR BOX GAT 4301, 4401	X	Repair kit	Reparationssats	3
0020								
0030		75 52 144			1	.O-ring	.O-ring	3
0040		75 54 926			1	.Bolt	.Bult	5
0050		75 54 934			1	.Adjustment screw	.Justerskruv	5
0060		75 57 960			1	.Nut	.Mutter	5
0070		75 71 482			2	.O-ring	.O-ring	3
0080		79 33 872			1	.Washer	.Bricka	5
0090								
0100	2	75 56 962		A, SPACER WASHER GEAR BOX GAT 4401	X	Washer	Bricka	4
0110								
0120		75 56 848			1	.Washer	.Bricka	4
0130		75 56 855			1	.Washer	.Bricka	4
0140		75 56 863			1	.Washer	.Bricka	4
0150		75 56 871			1	.Washer	.Bricka	4
0160		75 56 889			1	.Washer	.Bricka	4
0170		75 71 508			1	.Washer	.Bricka	4
0180		75 71 516			1	.Washer	.Bricka	4
0190		75 71 524			1	.Washer	.Bricka	4
0200		75 71 532			1	.Washer	.Bricka	4
0210		75 71 540			1	.Washer	.Bricka	4
0220		75 71 557			1	.Washer	.Bricka	4
0230		75 71 565			1	.Washer	.Bricka	4
0240		75 71 573			1	.Washer	.Bricka	4
0250		75 71 581			1	.Washer	.Bricka	4
0260		75 71 599			1	.Washer	.Bricka	4
0270								
0280	3	75 75 483		A, THROTTLE CABLE GEAR BOX GAT 4301, 4401	X	Sealing kit	Tätningssats	3
0290								
0300		75 71 482			2	.O-ring	.O-ring	3
0310		*75 75 392*		NLS - USE 4119244	1	.Sealing ring	.Tätningsring	3
0320								
0330	4	75 75 533		GEAR BOX GAT 4301, 4401	X	Repair kit	Reparationssats	4
0340		75 56 111			1	.Cam disc	.Kamskiva	5
0350		75 56 137			1	.Shaft	.Axel	6
0360		75 56 145			1	.Spring	.Fjäder	6
0370		75 56 939			1	.Fixing plate	.Fixerplatta	5
0380		75 57 903			1	.Hexagon screw	.Sexkantsskruv	5
0390		75 71 482			2	.O-ring	.O-ring	3
0400								
0410	5	75 75 541		A, PARKING BRAKE PAWL GEAR BOX GAT 4401	X	Repair kit	Reparationssats	5
0420								
0430		75 52 276			1	.Shaft seal	.Axeltätning	3
0440		75 52 342			1	.Seal	.Tätning	5
0450		75 54 660			1	.Spring clamp	.Fjäderklämma	5
0460		75 54 678			1	.Lock lug	.Låsklack	4
0470		75 54 686			1	.Pin	.Pinne	5
0480		75 54 694			1	.Washer	.Bricka	5
0490		75 54 702			1	.Stop	.Spärrklack	4
0500		75 54 710			1	.Spring	.Fjäder	5
0510		75 54 728			1	.Pin	.Pinne	4
0520		75 54 736			1	.Shaft	.Axel	6
0530		75 56 095			1	.Shaft	.Axel	5
0540		75 56 103			1	.Segment	.Segment	5
0550		75 56 228			1	.Gasket	.Packning	3
0560		75 56 905			1	.Pin	.Pinne	4
0570		75 56 962			1	.Washer	.Bricka	4
0580		75 57 762			2	.Screw	.Skruv	5
0590								
0600	6	75 75 459		A, SPEEDOMETER DRIVE GEAR BOX GAT 4401	X	Sealing kit	Tätningssats	3
0610								
0620		87 11 707			1	.O-ring	.O-ring	5
0630		87 13 463			1	.Seal	.Tätning	4
0640		87 17 308			1	.Locking	.Låsning	5


MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-J08
Gear box, automatic	3-J16
Gear box control, automatic	3-J18
Complete sets	3-J20

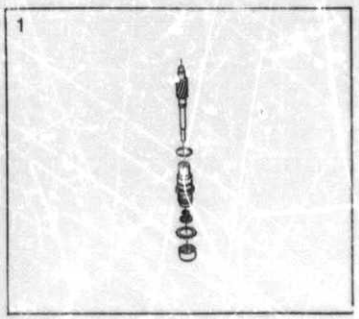


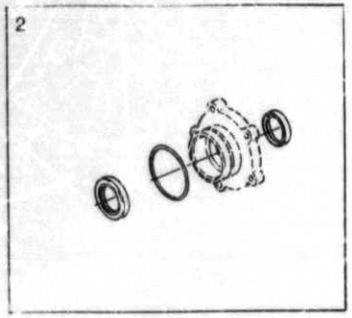

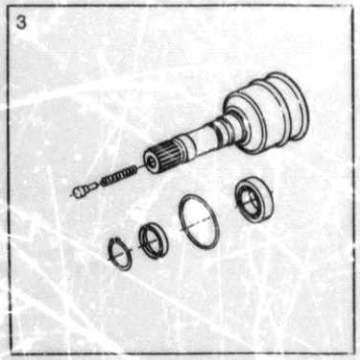

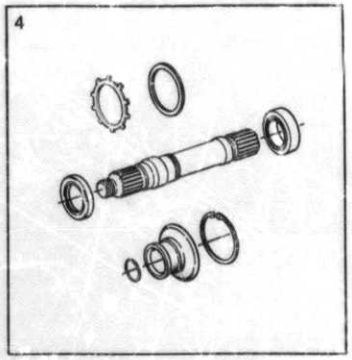

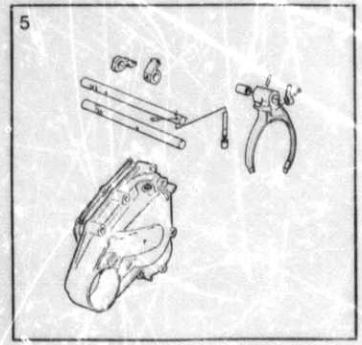

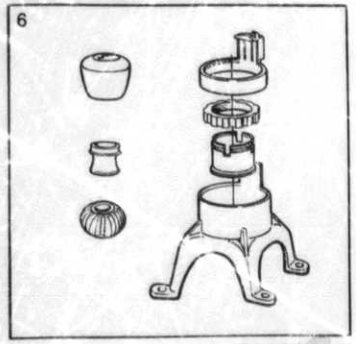

R 9035-9000

Complete set
3-K02
Transmission

Satser
Kraftöverföring

1150 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	75 75 517		A, SPEEDOMETER DRIVE GEAR BOX GAT 4401	X	Repair kit	Reparationssats	5
0020							
0030	87 11 707			1	.O-ring	.O-ring	5
0040	87 13 463			1	.Seal	.Tätning	4
0050	87 17 308			1	.Locking	.Låsring	5
0060	*87 20 641*		NLS - USE 8723892	1	.Gear	.Kuggh.jul	4
0070	*87 21 789*		NLS - USE 8727828	1	.Sleeve	.Hylsa	5
0080							
0090 2	75 75 509		A, DRIVE SHAFT	X	Sealing kit	Tätningssats	3
0100	75 52 128			1	.O-ring	.O-ring	3
0110	*87 04 298*		NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0120	87 21 078			1	.Seal	.Tätning	5
0130							
0140 3	75 75 566		A, DRIVE SHAFT, LH	X	Repair kit	Reparationssats	5
0150	75 97 776			1	.O-ring	.O-ring	3
0160	75 52 128			1	.O-ring	.O-ring	3
0170	75 58 950			1	.Ball bearing	.Kullager	5
0180	87 28 198			1	.Retaining ring	.Spårring	5
0190	*87 04 298*		NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0200	87 04 314			1	.Spring	.Fjäder	4
0210	87 04 322			1	.Plunger	.Plunge	5
0220	87 20 948			1	.Companion flange	.Medbringare	3
0230							
0240 4	75 75 574		A, DRIVE SHAFT, RH	X	Repair kit	Reparationssats	
0250	75 97 776			1	.O-ring	.O-ring	3
0260	75 58 950			1	.Ball bearing	.Kullager	5
0270	87 23 140			1	.Shaft	.Axel	5
0280	*75 71 904*		NLS - USE 7594853	1	.O-ring	.O-ring	3
0290	87 20 997		(7571912)	1	.Sealing ring	.Tätningsring	2
0300	80 48 324			1	.Ring	.Ring	6
0320	*79 15 200*		NLS - USE 8728198	1	.Lock ring	.Låsring	5
0330	87 21 078			1	.Seal	.Tätning	5
0340							
0350 5	*93 21 381*		14), REVERSE GEAR BRAKE USE TOGETHER WITH KIT 9321407 NLS - USE 9321423	X	Service kit	Servicesats	5
0360							
0370							
0370							
0380	80 34 373			1	.Pin	.Pinne	5
0390	81 17 616			1	.Pin	.Pinne	5
0400	81 24 133			1	.Gasket	.Packning	5
0410	87 23 405			1	.Screw	.Skruv	5
0420	87 24 304			1	.Companion flange	.Medbringare	5
0430	87 24 346			1	.Companion flange	.Medbringare	5
0440	*87 24 387*		NLS - USE 8727927	1	.Shift rail	.Växelföraraxel	6
0450	87 24 395			1	.Shift rail	.Växelföraraxel	6
0470	87 26 689			1	.Gear selector fork	.Växelförargaffel	5
0480	87 24 296			1	..Gear selector fork	..Växelförargaffel	5
0490	87 24 411			1	..Bushing	..Bussning	4
0500	87 25 368			1	..Spring	..Fjäder	5
0510	87 24 619			1	.Cover	.Lock	5
0520	87 24 643			1	.Shift rail	.Växelföraraxel	6
0530	*87 24 353*		1) NLS - USE 8724643	1	..Shift rail	..Växelföraraxel	6
0540	87 24 627			1	..Bushing	..Bussning	4
0550	87 25 061			1	.Gasket	.Packning	3
0560							
0570 6	*93 21 407*		12), GEAR SHIFT, REVERSE GEAR BRAKE USE TOGETHER WITH KIT 9321381 NLS	X	Kit	Sats	5
0580							
0590							
0600							
0610	*75 77 620*		NLS - USE 7599178	1	.Joint	.Knut	5

1. Not as separate spare part. Ej som separat reservdel.
12. Ch. --G1026304
14. Gear box --331129

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20


Complete set
3-K04
Transmission


Satser
Kraftöverföring

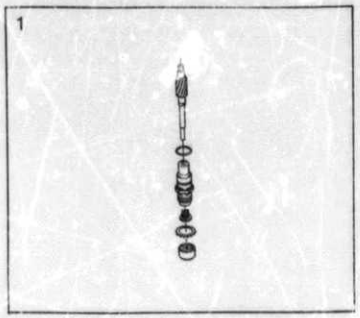


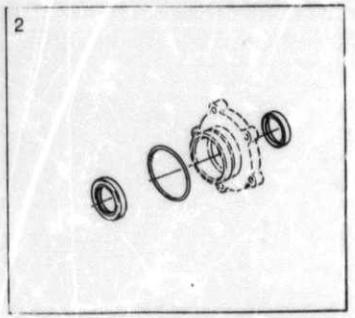

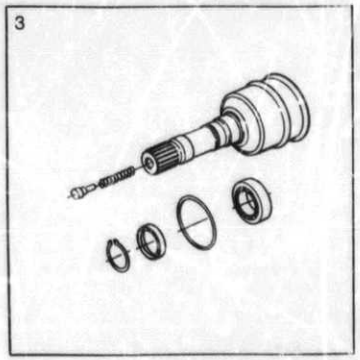

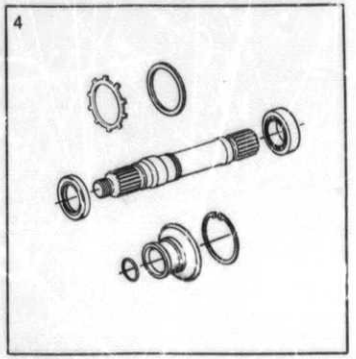

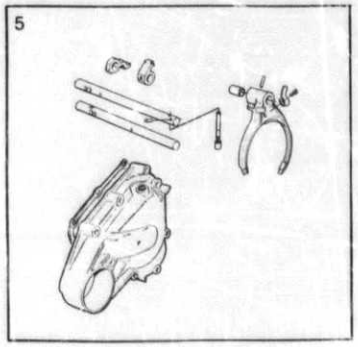

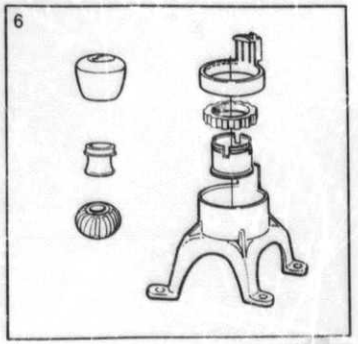

R 9035-9000

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620		75 77 646			1	. Companion flange	. Medbringare	3
0630		*75 77 653*		NLS - USE 7599988	1	. Ball	. Kula	5
0640		*75 79 873*		NLS - USE 7592843	1	. Gear shift housing	. Växelspakshus	5
0650		93 82 425			1	. Knob	. Knopp	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	5-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-H08
Gear box, automatic	3-H16
Gear box control, automatic	3-J18
Complete sets	3-J20

Complete set
3-K06
Transmission

Satser
Kraftöverföring

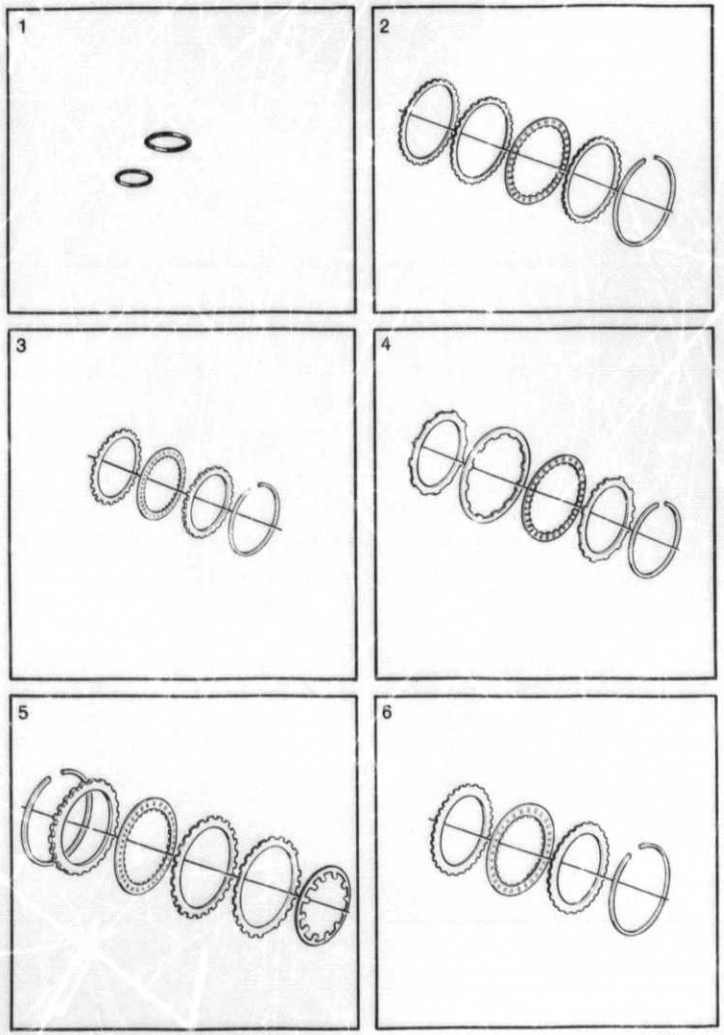

F4100 9000

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 75 442		FILTER COVER	X	Sealing kit	Tätningssats	3
0020		75 97 776			1	. O-ring	. O-ring	3
0030		75 71 391			1	. Sealing ring	. Tätningsring	5
0035								
0040	2	74 96 045		A	X	Disc kit	Lamellsats	2
0050						Clutch "A"	Koppling "A"	
0060		75 52 292			5	. Clutch disc	. Lamell	5
0070		75 53 050			1	. Clutch disc	. Lamell	5
0080		75 53 068			5	. Clutch disc	. Lamell	5
0090		75 53 092			1	. Clutch disc	. Lamell	5
0100		75 53 183			1	. Lock ring	. Låsring	5
0110		75 53 191			1	. Lock ring	. Låsring	5
0120		75 53 209			1	. Lock ring	. Låsring	5
0130		75 53 217			1	. Lock ring	. Låsring	5
0140		75 53 225			1	. Lock ring	. Låsring	5
0150		75 53 233			1	. Lock ring	. Låsring	5
0160		75 53 241			1	. Lock ring	. Låsring	5
0170		75 53 258			1	. Lock ring	. Låsring	5
0180		75 53 266			1	. Lock ring	. Låsring	5
0190		75 53 274			1	. Lock ring	. Låsring	5
0200								
0210	3	74 96 052		A	X	Disc kit	Lamellsats	2
0220						Clutch "B"	Koppling "B"	
0230		75 53 068			3	. Clutch disc	. Lamell	5
0240		75 53 092			1	. Clutch disc	. Lamell	5
0250		75 53 217			1	. Lock ring	. Låsring	5
0260		75 72 704			3	. Clutch disc	. Lamell	5
0270								
0280	4	74 96 060		A	X	Disc kit	Lamellsats	2
0290						Clutch "C"	Koppling "C"	
0300		75 52 961			1	. Spring disc	. Fjädertallrik	5
0310		75 53 084			3	. Clutch disc	. Lamell	5
0320		75 53 786			1	. Lock ring	. Låsring	5
0330		75 70 740			3	. Clutch disc	. Lamell	5
0340		75 72 605			1	. Lock ring	. Låsring	5
0350		75 72 613			1	. Lock ring	. Låsring	5
0360		75 72 621			1	. Lock ring	. Låsring	5
0370		75 72 639			1	. Lock ring	. Låsring	5
0380		75 74 890			1	. Lock ring	. Låsring	5
0390		75 92 249			1	. Clutch disc	. Lamell	5
0400								
0410	5	74 96 078		A	1	Disc kit	Lamellsats	2
0420						Clutch "D"	Koppling "D"	
0430		75 52 326			6	. Clutch disc	. Lamell	5
0440		75 53 050			1	. Clutch disc	. Lamell	5
0450		75 53 068			6	. Clutch disc	. Lamell	5
0460		75 53 092			1	. Clutch disc	. Lamell	5
0470		75 53 225			1	. Lock ring	. Låsring	5
0480		75 53 233			1	. Lock ring	. Låsring	5
0490		75 53 241			1	. Lock ring	. Låsring	5
0500		75 53 266			1	. Lock ring	. Låsring	5
0510		75 77 182			1	. Lock spring	. Låsfjäder	5
0520		75 77 257			1	. Lock ring	. Låsring	5
0530		75 77 265			1	. Lock ring	. Låsring	5
0540		75 77 273			1	. Lock ring	. Låsring	5
0550								
0560	6	74 96 086		A	X	Disc kit	Lamellsats	2
0570						Clutch "E"	Koppling "E"	
0580		75 57 085			1	. Lock ring	. Låsring	5
0590		75 72 571			5	. Clutch disc	. Lamell	5
0600		75 76 796			1	. Clutch disc	. Lamell	5
0610		75 76 853			1	. Clutch disc	. Lamell	5
0620		75 97 933			5	. Clutch disc	. Lamell	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

Complete set
3-K08
Transmission

Satser
Kraftöverföring

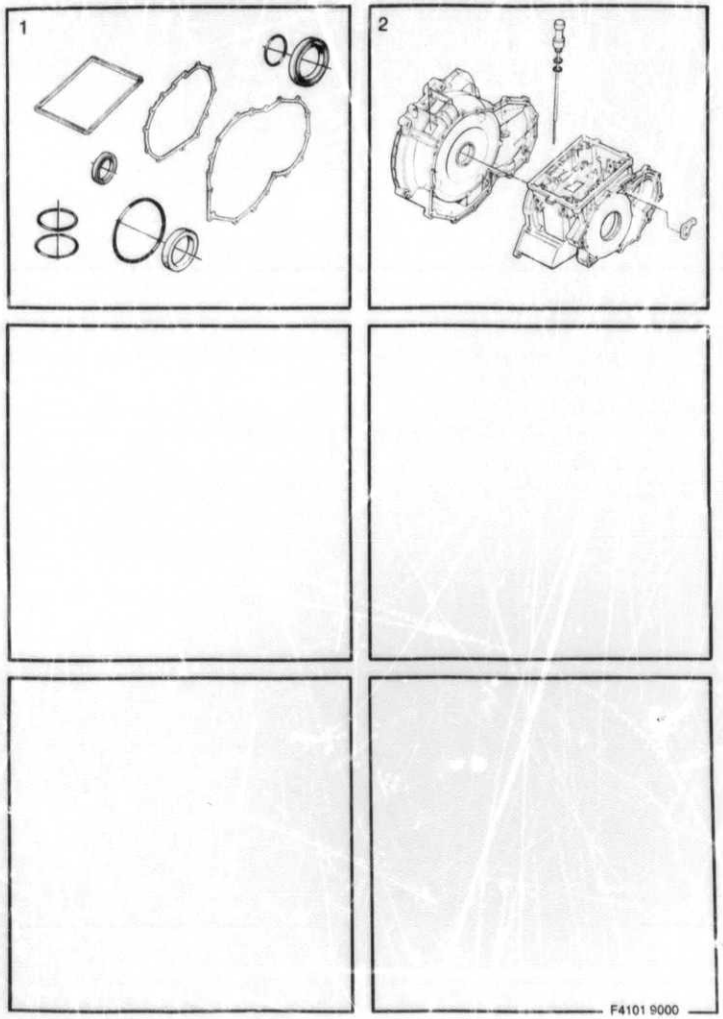

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	1	74 96 094		A	X	Gasket kit	Packningsats	3
0610						Stage 1-2	Steg 1-2	
0620		41 19 244			1	Sealing ring	Tätningsring	3
0630		75 52 250			1	O-ring	O-ring	5
0640		75 52 276			1	Shaft seal	Axeltätning	3
0650		75 52 342			1	Seal	Tätning	5
0660		75 56 228			1	Gasket	Packning	3
0670		75 56 996			2	O-ring	O-ring	5
0680		75 58 356			2	Sealing ring	Tätningsring	3
0690		*75 58 406*		NLS - USE 4280582	1	Shaft seal	Axeltätning	5
0700		75 70 542			1	Gasket	Packning	3
0710		75 71 391			1	Sealing ring	Tätningsring	5
0720		75 72 175			1	Sealing ring	Tätningsring	3
0730		75 92 223			1	Seal	Tätning	5
0740		*75 92 231*		NLS - USE 4280376	1	Seal	Tätning	5
0750		75 92 330			1	Gasket	Packning	2
0760		75 94 120			1	O-ring	O-ring	3
0770		75 94 146			2	O-ring	O-ring	3
0780		75 94 179			2	O-ring	O-ring	3
0790		75 94 187			1	O-ring	O-ring	3
0800		75 94 898			1	O-ring	O-ring	3
0810		75 95 325			1	O-ring	O-ring	5
0820		75 97 776			1	O-ring	O-ring	3
0830		87 24 874			1	Seal	Tätning	4
0840								
0850	1	74 96 102		A	X	Gasket kit	Packningsats	3
0860						Stage 3	Steg 3	
0870		40 26 936			1	O-ring	O-ring	5
0880		41 19 244			1	Sealing ring	Tätningsring	3
0890		75 52 151			3	O-ring	O-ring	5
0900		75 52 193			1	O-ring	O-ring	5
0910		75 52 201			1	O-ring	O-ring	5
0920		75 52 235			1	O-ring	O-ring	3
0930		75 52 243			1	O-ring	O-ring	5
0940		75 52 250			1	O-ring	O-ring	5
0950		75 52 268			1	O-ring	O-ring	5
0960		75 52 276			1	Shaft seal	Axeltätning	3
0970		75 52 342			1	Seal	Tätning	5
0980		75 56 228			1	Gasket	Packning	3
0990		75 56 996			2	O-ring	O-ring	5
1000		75 57 457			2	Piston ring	Kolvring	5
1010		75 57 465			2	Seal	Tätning	5
1020		75 58 356			2	Sealing ring	Tätningsring	3
1030		*75 58 406*		NLS - USE 4280582	1	Shaft seal	Axeltätning	5
1040		75 70 542			1	Gasket	Packning	3
1050		75 71 391			1	Sealing ring	Tätningsring	5
1060		75 72 175			1	Sealing ring	Tätningsring	3
1070		75 74 833			1	O-ring	O-ring	5
1080		75 92 223			1	Seal	Tätning	5
1090		*75 92 231*		NLS - USE 4280376	1	Seal	Tätning	5
1100		75 92 330			1	Gasket	Packning	2
1110		75 94 120			1	O-ring	O-ring	3
1120		75 94 146			2	O-ring	O-ring	3
1130		75 94 153			1	O-ring	O-ring	5
1140		75 94 161			1	O-ring	O-ring	5
1150		75 94 179			2	O-ring	O-ring	3
1160		75 94 187			1	O-ring	O-ring	3
1170		75 94 880			2	O-ring	O-ring	3
1180		75 94 898			1	O-ring	O-ring	3
1190		75 95 325			1	O-ring	O-ring	5
1200		75 97 354			1	O-ring	O-ring	5
1210		75 97 776			1	O-ring	O-ring	3
1220		87 24 874			1	Seal	Tätning	4
1230								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20


Complete set


3-K10

Transmission

Satser

Kraftöverföring

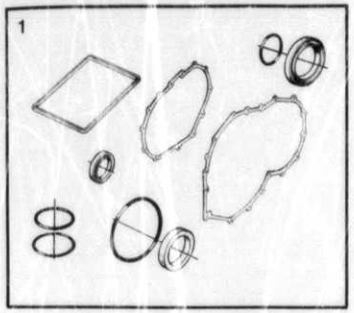

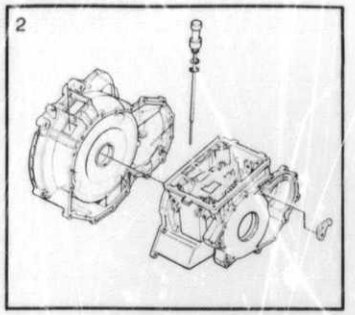

F4101 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2	74 96 110		127), TURBO, A	X	Conversion kit	Ombyggnadssats	9
	40 25 086		NLS - USE 4280032	1	. Gearbox housing	. Växellådshus	6
	40 25 136			1	. Stop	. Spärrklack	4
	40 26 449			1	. Dipstick	. Mätsticka	5
	41 19 376			1	. Converter shell	. Momentomvandlarhus	5
	87 24 882			1	. Screw	. Skruv	5
2	74 96 128		127), I, A	X	Conversion kit	Ombyggnadssats	9
	75 99 798		NLS - USE 4280046	1	. Gearbox housing	. Växellådshus	6
	40 25 136			1	. Stop	. Spärrklack	4
	40 26 449			1	. Dipstick	. Mätsticka	5
	41 19 376			1	. Converter shell	. Momentomvandlarhus	5
	87 24 882			1	. Screw	. Skruv	5

127. Ch. --K1023243, --K2013759, --K8001531.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J18
Complete sets	3-J20

4-A02



Brakes
Bromsar
Frenos

0041
0020
0040
0060
0080
0100
0120
0140
0160
0180
0200
0220
0230
0240
0250
0260
0270
0280
0290
0295

TABLE OF CONTENTS

Front wheel brake	5 : 5	4-A06
Rear wheel brake	5 : 9	4-A10
Footbrake system		
Master cylinder and power brake unit	5 : 11	4-A12
Hydraulic unit ABS	5 : 13	4-A14
Brake lines	5 : 17	4-A18
Brake lines ABS	5 : 19	4-A20
Brake operation LHD	5 : 21	4-A22
Brake operation RHD	5 : 23	4-A24
Parking brake system	5 : 25	4-B02
Complete sets		
Brakes	5 : 27	4-B04

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A03

0042
0300
0320
0340
0360
0380
0440
0460
0480
0500
0510
0520
0530
0540
0550
0560
0570
0575
1120
1140
1160
1180
1200
1260
1280
1300
1320
1330
1340
1350
1360
1370
1380
1390
1395
1400
1410

INNEHÅLLSFÖRTECKNING

Framhjulsbroms	5 : 5	4-A06
Bakhjulsbroms	5 : 9	4-A10
Fotbromssystem		
Huvudcylinder och vacuumservo	5 : 11	4-A12
Hydralenhet ABS	5 : 13	4-A14
Bromsledningar	5 : 17	4-A18
Bromsledningar ABS	5 : 19	4-A20
Bromsmanövrering LHD	5 : 21	4-A22
Bromsmanövrering RHD	5 : 23	4-A24
Parkeringsbromssystem	5 : 25	4-B02
Satser		
Bromsar	5 : 27	4-B04

SUMARIO

Freno del	5 : 5	4-A06
Freno tras	5 : 9	4-A10
Sistema de freno de pie		
Cylindro principal y servoasistencia	5 : 11	4-A12
Unidad hydraulico ABS	5 : 13	4-A14
Conductos de freno	5 : 17	4-A18
Conductos de freno ABS	5 : 19	4-A20
Mando de freno d. pie D a I	5 : 21	4-A22
Mando de freno de pie D a D	5 : 23	4-A24
Sistema de freno de mano	5 : 25	4-B02
Juegos completos		
Frenos	5 : 27	4-B04


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A06 Front wheel brake — Framhjulsbroms

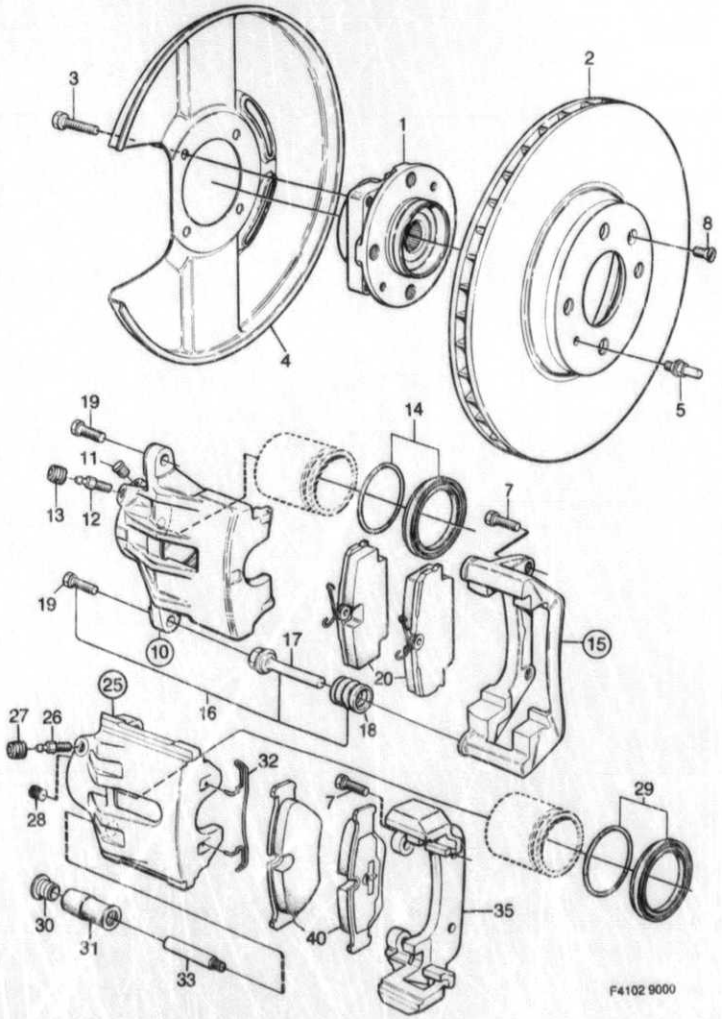

Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*89 52 996*		14)	2	Wheel hub with bearing	Hjulnav med lager	5
			NLS				
2	89 65 550		-1986 (8955171)	2	Brake disc	Bromsskiva	3
2	*89 66 962*		10), 1987 NLS - USE 4002150, 8968588	2	Brake disc	Bromsskiva	3
2	40 02 150		1988- ! (8970709)	2	Brake disc	Bromsskiva	3
2	40 02 143		1988- TURBO (8965980)	2	Brake disc	Bromsskiva	3
3	79 78 794		(8083180)	8	Screw	Skruv	5
4	*89 52 939*		1985	2	Protecting plate	Skyddsplåt	6
4	40 02 671		1986- (8965261,8967184)	2	Protecting plate	Skyddsplåt	6
4	*89 68 752*		1988 TURBO NLS - USE 4002689	2	Protecting plate	Skyddsplåt	6
4	40 02 689		500) 1988- TURBO	2	Protecting plate	Skyddsplåt	6
5	89 53 176		-1987	2	Pin	Pinne	4
5	89 68 588		1988-	2	Pin	Pinne	4
7	89 53 283			4	Screw	Skruv	5
8	80 56 160			2	Screw	Skruv	5
10	89 55 908		700), -1986 LH	1	Brake housing	Bromshus	4
10	89 55 916		700), -1986 RH	1	Brake housing	Bromshus	4
10	91 02 971		700), 1987- LH (8967770)	1	Brake housing	Bromshus	4
10	89 67 788		700), 1987 RH	1	Brake housing	Bromshus	4
10	91 02 989		700), 1988- RH, I	1	Brake housing	Bromshus	4
11	89 55 973			1	.Plug	.Plugg	6
12	89 55 072			2	.Bleed screw	.Luftningsskruv	2
13	89 55 080			2	.Protecting casing	.Skyddskåpa	3
14	89 61 799		See page 5-027, 4-B04	2	.Gasket kit	.Packningsats	2
15	89 55 098		-1986	2	Retainer	Hållare	5
15	89 67 713		1987-	2	Retainer	Hållare	5
16	89 61 807		See page 5-027, 4-B04	2	.Bellows kit	.Bälgsats	3
17	*89 55 114*		1) NLS - USE 8961807	2	..Slide pin	..Glidpinne	3
18	*89 55 130*		1) NLS	2	..Protecting casing	..Skyddskåpa	6
19	89 55 122	S		2	..Screw	..Skruv	5
20	• 89 93 974		12), -1987	1	Brake pad kit	Bromsklotssats	
			See page 5-027, 4-B04				
20	• 89 93 974		12), I, 1988-, SE,EU,GB	1	Brake pad kit	Bromsklotssats	
			See page 5-027, 4-B04				
20	• 89 93 719		12), I,1988-,ME,FE,JP,AU	1	Brake pad kit	Bromsklotssats	1
			See page 5-027, 4-B04				
20	• 41 07 116		12,13)	1	Brake pad kit	Bromsklotssats	1
			See page 5-027, 4-B04				
25	89 68 943		700), 1988- LH, TURBO	1	Brake housing	Bromshus	4
25	89 68 950		700), 1988- RH, TURBO	1	Brake housing	Bromshus	4
26	89 55 411		1988- TURBO	2	.Bleed screw	.Luftningsskruv	2
27	89 08 576		1988- TURBO	2	.Protecting casing	.Skyddskåpa	3
28	89 55 973		1988- TURBO	1	.Plug	.Plugg	6
29	89 68 968		1988- TURBO	2	.Gasket kit	.Packningsats	2
			See page 5-027, 4-B04				
30	89 55 478		1988- TURBO	2	.Cover	.Lock	3
31	89 69 107		1988- TURBO	2	.Sleeve	.Hylsa	6
32	89 69 123		1988- TURBO	1	.Spring	.Fjäder	3
33	89 69 651		1988- TURBO	4	.Slide pin	.Glidpinne	3
35	89 69 115		1988- TURBO	2	.Retainer	.Hållare	5
40	89 68 976		12), 1988- TURBO, SE, EU	1	Brake pad kit	Bromsklotssats	1
			See page 5-027, 4-B04				

1. Not as separate spare part. Ej som separat reservdel.
10. Superseded by 40 02 150 and 89 68 588. Ersatt av 40 02 150 och 89 68 588.
12. See SI 500-1034 Se SI 500-1034
13. Only for cars that will be repaired in USA and Canada Endast för bilar som repareras i USA och Canada
14. Superseded by kit wheel hub/steering knuckle housing 8993875 LH, 8993883 RH, 8993891 LH ABS, 8993909 RH ABS. Ersatt av sats hjulnav/styrspindelhus 8993875 LH 8993883 RH, 8993891 LH ABS, 8993909 RH ABS.
500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A08 Front wheel brake — Framhjulsbroms

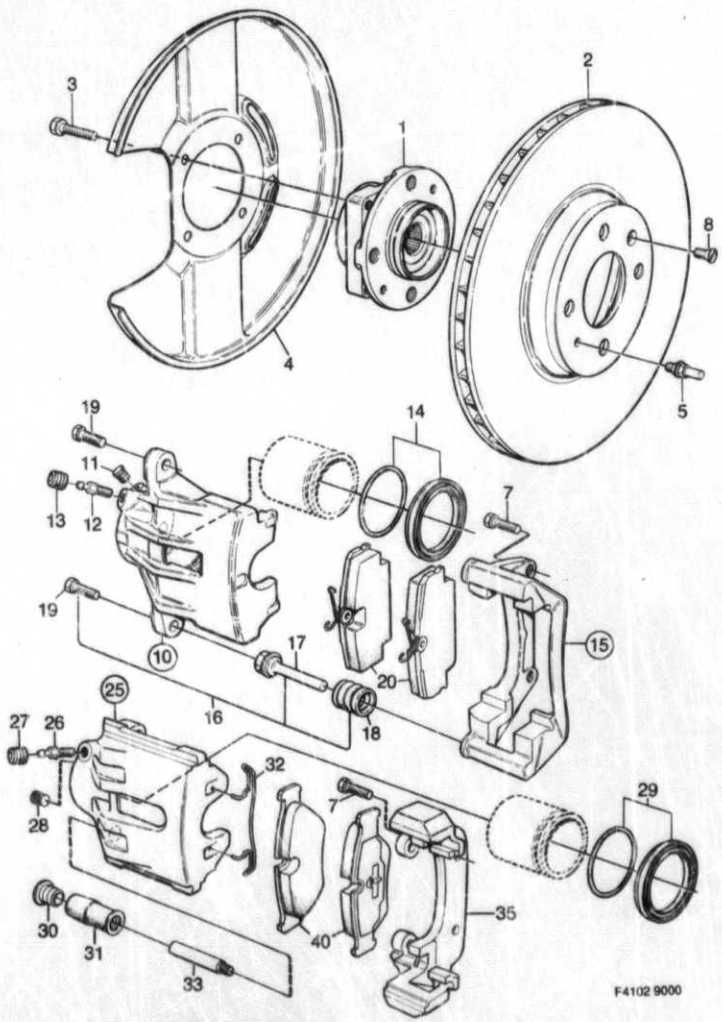

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	40	• 89 93 768		12), 1988- TURBO, GB, ME FE, JP, AU, US	1	Brake pad kit	Bromsklotssats	1
0540				See page 5-027, 4-B04				
0550								

12. See SI 500-1034 Se SI 500-1034


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A10 Rear wheel brake — Bakhjulsbroms

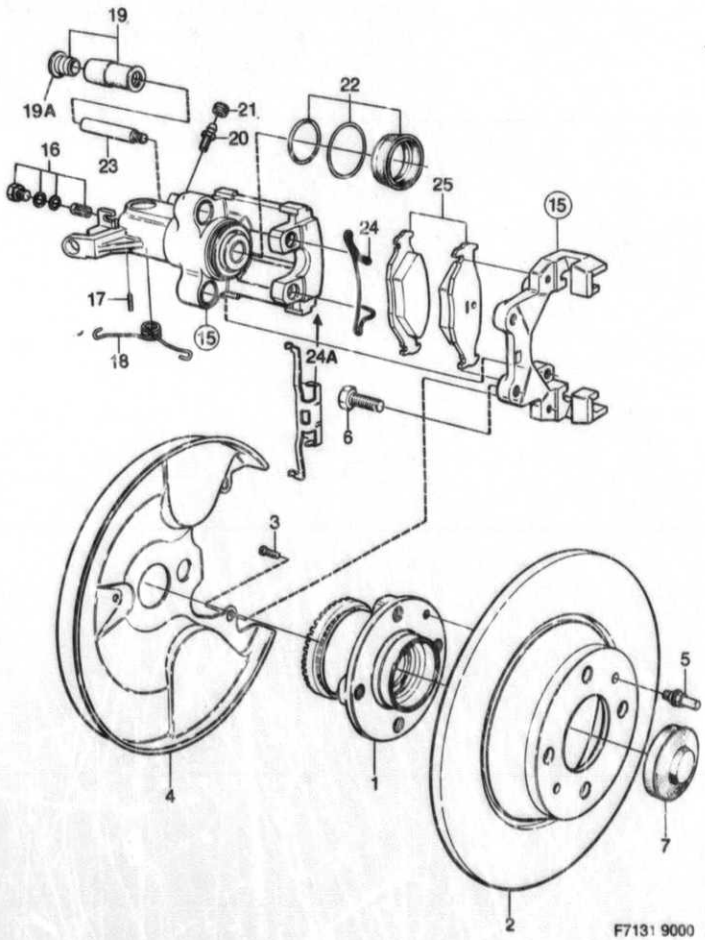

F7131 9000

Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	89 71 095		(8952582)	2	Wheel hub with bearing	Hjulnav med lager	5
1	89 71 111		ABS (8963084)	2	Wheel hub with bearing	Hjulnav med lager	5
2	*89 51 543*		11), -1987 NLS - USE 8968588, 8970717	2	Brake disc	Bromsskiva	2
2	89 70 717		1988-	2	Brake disc	Bromsskiva	3
3	79 72 441			6	Screw	Skruv	5
4	89 54 547			2	Protecting plate	Skyddsplåt	6
4	89 63 027		ABS	2	Protecting plate	Skyddsplåt	6
5	89 53 176		-1987	2	Pin	Pinne	4
5	89 68 588		1988-	2	Pin	Pinne	4
6	*89 52 673*		-1987 NLS - USE 8970428	4	Screw	Skruv	5
6	89 70 428		1988-	4	Screw	Skruv	5
7	89 52 665			2	Cap	Kapsel	2
15	89 70 618		700), LH (8961823)	1	Brake housing	Bromshus	5
15	89 70 626		700), RH (8961831)	1	Brake housing	Bromshus	5
16	41 07 793		See page 5-033, 4-B10	1	.Adjuster kit	.Justeringssats	4
17	89 55 437			1	.Pin	.Pinne	3
18	89 55 395		LH	1	.Spring	.Fjäder	3
18	89 55 403		RH	1	.Spring	.Fjäder	3
19	*89 55 445*		See page 5-031, 4-B08	4	.Guide	.Styrning	6
			NLS - USE 4467064				
19A	89 55 478			4	..Cover	..Lock	3
20	89 55 411			2	.Bleed screw	.Luftningsskruv	2
21	89 08 576		(8955429)	2	.Protecting casing	.Skyddskåpa	3
22	89 61 849		See page 5-027, 4-B04	2	.Gasket kit	.Packningsats	4
23	89 55 486			4	.Slide pin	.Glidpinne	3
24	89 70 816			2	.Spring	.Fjäder	3
24A	89 55 528			2	.Spring	.Fjäder	3
25	• 41 96 317		12)	1	Brake pad kit	Bromsklotssats	1
			See page 5-027, 4-B04				

11. Superseded by 89 70 717 and 89 68 588. Ersatt av 89 70 717 och 89 68 588
12. See SI 500-1034 Se SI 500-1034
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX


Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

Footbrake system

4-A12 Master cylinder and power brake unit

Fotbromssystem

Huvudcylinder och vacuumservo

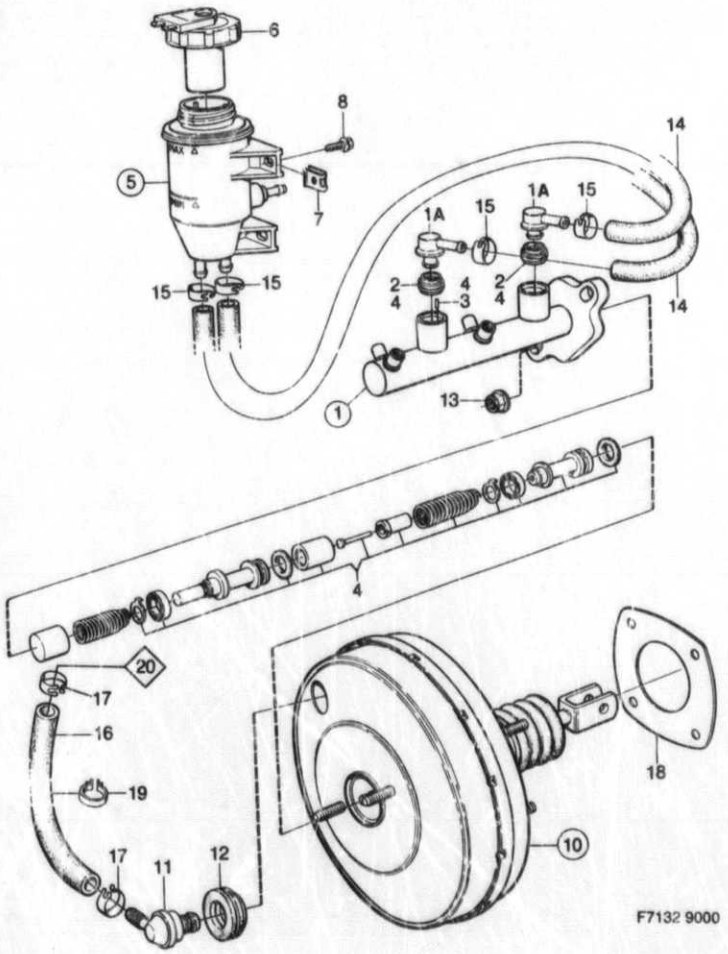

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*89 58 142*		2) NLS - USE 8964728, 8964769, 8964801, 8964843, 8964892	1	Master cylinder	Huvudcylinder	4
1	89 64 892		3)	1	Master cylinder	Huvudcylinder	4
1A	89 58 175			2	.Nipple	.Nippel	6
2	*89 86 911*	S	NLS - USE 4425229	2	.Gasket	.Packning	4
3	39 65 808	S	(8986952)	1	.Pin	.Pinne	4
4	89 88 149		2)	1	.Sealing kit	.Tätningssats	2
			See page 5-027, 4-B04				
4	89 65 329		3)	1	.Sealing kit	.Tätningssats	4
			See page 5-027, 4-B04				
5	89 59 132			1	Reservoir	Behållare	5
6	89 59 157			1	.Level warner	.Nivåvarnare	5
7	94 41 239			2	Clip nut	Clipsmutter	3
8	*79 73 126*		NLS - USE 7972128	2	Screw	Skruv	5
10	89 58 423			1	Vacuum servo	Vakuumservo	5
11	89 86 705			1	.Non-return valve	.Backventil	4
12	89 86 713			1	.Seal	.Tätning	6
13	79 69 306			2	Lock nut	Låsmutter	5
14	89 59 181		-1986	2	Hose	Slang	3
14	*89 68 034*		1987- NLS - USE 4425211	2	Hose	Slang	5
15	79 73 522			4	Hose clamp	Slangklamma	5
16	89 66 954		(8958191)	1	Vacuum hose	Vakuumslang	5
17	89 43 177			2	Hose clamp	Slangklämma	5
18	89 58 357			1	Seal	Tätning	6
19	85 39 587		1987-	1	Clip	Clips	5
20			See page 2-069, 1-D22		Intake manifold	Inloppsrör	

2. Ch. -F4003363.
3. Ch. F4003364-.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A14

Hydraulic unit ABS
Hydraulenhet ABS

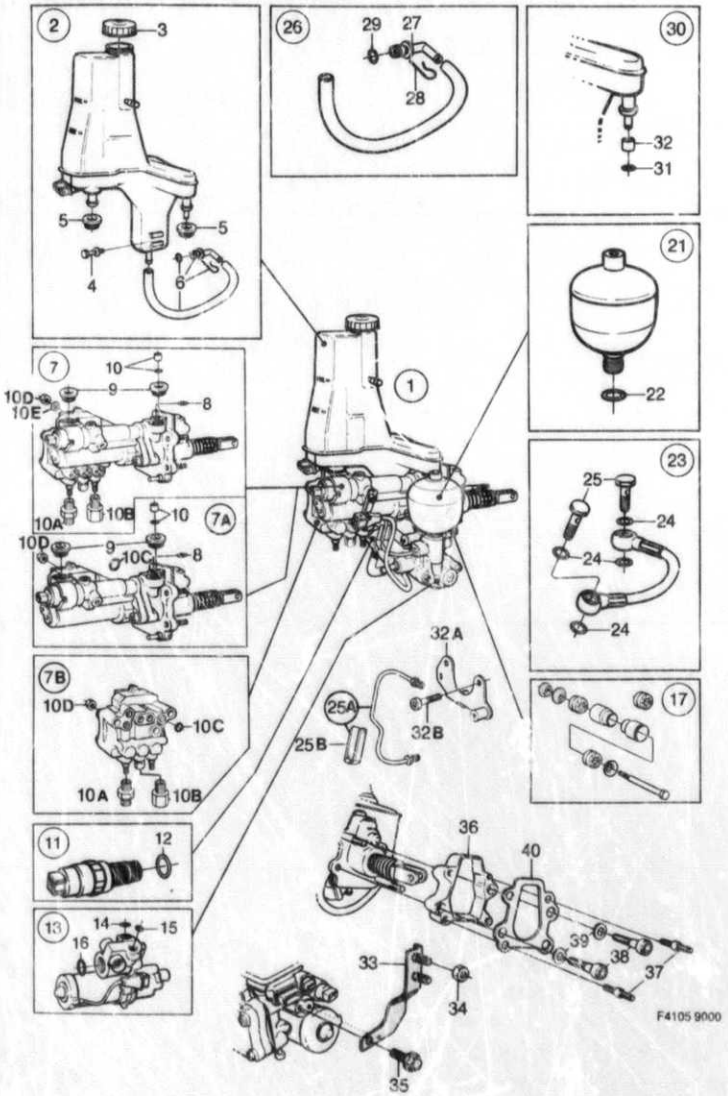

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 64 900		8)	1	Hydraulic unit	Hydraulenhet	6
0020	1	40 00 113		9)	1	Hydraulic unit	Hydraulenhet	6
0030	2	89 67 333		8)	1	.Reservoir	.Behållare	5
0040				See page 5-031, 4-B08				
0050	2	*40 03 141*		9)	1	.Reservoir	.Behållare	6
0060				See page 5-031, 4-B08				
0060				NLS - USE 4190617				
0070	3	89 66 152			1	..Cover	..Lock	4
0080	4	89 66 368			1	..Screw	..Skruv	5
0090	5	89 66 335			2	..Rubber bushing	..Gummibussning	6
0100	6	89 67 341		8)	1	..Hose kit	..Slangsats	5
0110				See page 5-031, 4-B08				
0120	6	40 02 861		9)	1	..Hose kit	..Slangsats	5
0130				See page 5-031, 4-B08				
0140	7	89 67 457		8)	1	.Master cylinder kit	.Huvudcylindersats	6
0150				See page 5-033, 4-B10				
0160	7	40 03 182		9)	1	.Master cylinder kit	.Huvudcylindersats	6
0170				See page 5-033, 4-B10				
0171	7A	41 95 905		8)	1	..Master cylinder kit	..Huvudcylindersats	6
0172				See page 5-035, 4-B12				
0173	7A	41 95 897		9)	1	..Master cylinder kit	..Huvudcylindersats	6
0174				See page 5-035, 4-B12				
0180	8	89 67 408		(8967267)	1	...O-ring	...O-ring	2
0190	9	89 66 335			2	...Rubber bushing	...Gummibussning	6
0191	10	89 67 390		See page 5-033, 4-B10	1	...O-ring kit	...O-ringsats	2
0192	10C	41 95 855			5	...O-ring	...O-ring	2
0200	10D	80 74 106			3	...Nut	...Mutter	5
0201	7B	41 95 863			1	..Valve body	..Ventilblock	6
0205	10A	89 66 376			2	...Intermediate section	...Mellanstycke	5
0206	10B	89 66 384			1	...Intermediate section	...Mellanstycke	5
0207	10C	41 95 855			5	...O-ring	...O-ring	2
0208	10D	80 74 106			3	...Nut	...Mutter	5
0209	10E	79 16 497			3	..Washer	..Bricka	5
0210	11	89 67 309		See page 5-031, 4-B08	1	.Pressure monitor	.Tryckvakt	4
0220	12	89 67 325			1	..O-ring	..O-ring	2
0230	13	89 67 424		8)	1	.Pump kit	.Pumpsats	6
0240				See page 5-033, 4-B10				
0250	13	40 03 158		9)	1	.Pump kit	.Pumpsats	6
0260				See page 5-033, 4-B10				
0270	14	89 67 234			1	..O-ring	..O-ring	2
0280	15	89 67 408		(8967267)	1	..O-ring	..O-ring	2
0290	16	89 67 325			1	..O-ring	..O-ring	2
0300	17	89 67 283		8)	1	.Suspension kit	.Upphängningssats	5
0310				See page 5-033, 4-B10				
0320	17	40 02 895		9)	1	.Suspension kit	.Upphängningssats	5
0330				See page 5-033, 4-B10				
0340	21	89 67 218		8)	1	.Accumulator	.Ackumulator	5
0350				See page 5-031, 4-B08				
0360	21	40 02 267		9)	1	.Accumulator	.Ackumulator	5
0370				See page 5-031, 4-B08				
0380	22	89 67 234			1	..O-ring	..O-ring	2
0390	23	89 67 259		8)	1	.Hose kit	.Slangsats	5
0400				See page 5-031, 4-B08				
0420	24	89 67 408		8) (8967267)	4	..O-ring	..O-ring	2
0430	25	89 66 327		8)	2	..Fitting	..Förskruvning	6
0440	25A	89 93 644		9)	1	.Delivery pipe	.Tryckrör	5
0450	25B	*40 02 093*		9) NLS - USE 8993644	1	..Absorber	..Dämpare	5
0460	26	89 67 341		8)	1	.Hose kit	.Slangsats	5
0461				See page 5-033, 4-B10				


8. Ch. -K1009731, -K2004996, -K8000276
9. Ch. K1009732-, K2004997-, K8000277-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

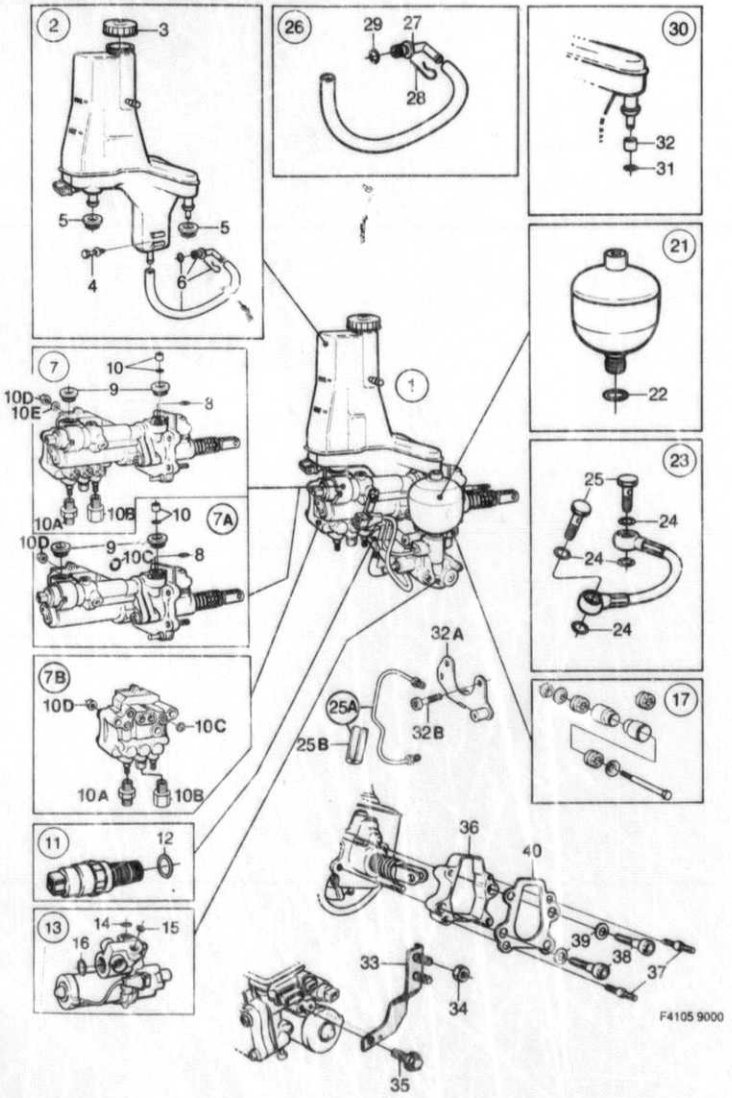

Footbrake system

4-A16

Hydraulic unit ABS

Fotbromssystem

Hydraulenhet ABS

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0465	26	40 02 861		9)	1	.Hose kit	.Slangsats	5
0466				See page 5-033, 4-B10				
0470	27	89 66 285		1,8)	1	..Nipple	..Nippel	6
0475	27	*91 04 738*		1,9) NLS	1	..Nipple	..Nippel	
0480	28	89 66 293		8)	1	..Needle	..Nål	6
0490	29	89 67 408		8)	1	..O-ring	..O-ring	2
0500	29	40 03 117		9)	1	..O-ring	..O-ring	5
0510	30	89 67 390		See page 5-033, 4-B10	1	.O-ring kit	.O-ringsats	2
0520	31	*89 66 681*		1) NLS - USE 8967390	1	..O-ring	..O-ring	4
0530	32	*89 66 939*		1) NLS - USE 8967390	1	..Sleeve	..Hylsa	6
0540	32A	40 02 069		9)	1	.Holder	.Hållare	5
0550	32B	89 66 491		9)	2	.Screw	.Skruv	5
0560	33	89 67 028			1	Stay	Stag	5
0570	34	79 71 658			2	Nut	Mutter	5
0580	35	79 69 223			1	Screw	Skruv	5
0590	36	89 66 012			1	Adapter	Adapter	6
0600	37	89 66 038			2	Stud	Pinnskruv	5
0610	38	80 98 311			2	Screw	Skruv	5
0620	39	80 29 993			2	Washer	Bricka	5
0630	40	91 04 456			2	Seal	Tätning	6

1. Not as separate spare part. Ej som separat reservdel.
8. Ch. -K1009731, -K2004996, -K8000276
9. Ch. K1009732-, K2004997-, K8000277-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A18

Brake lines

Bromsledningar

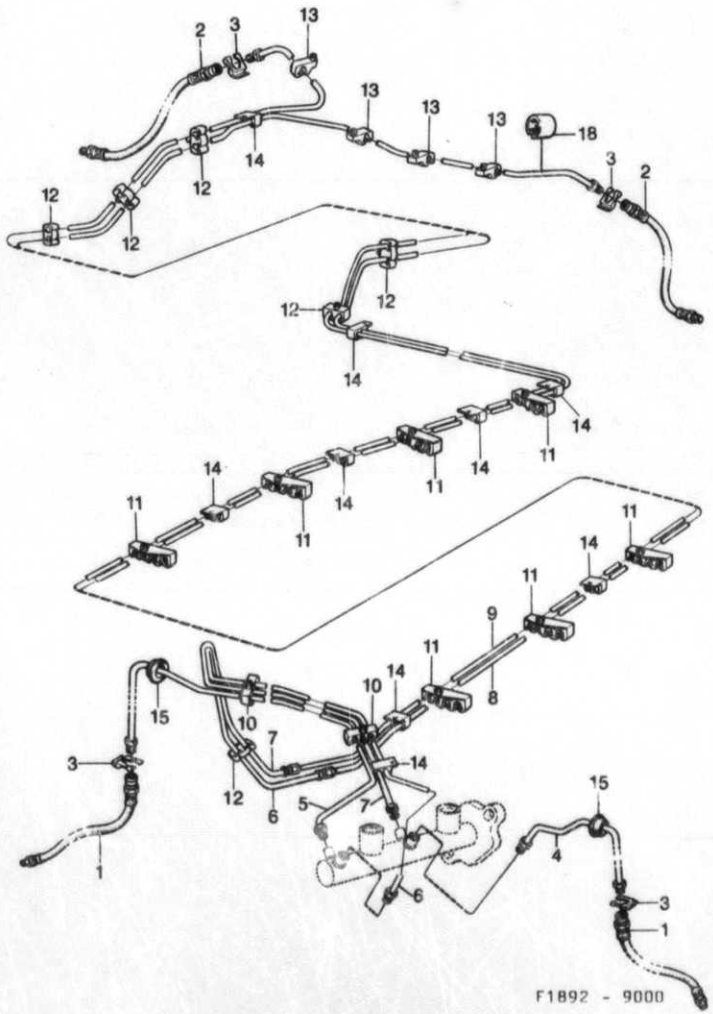

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	*89 73 034*		(8953291) NLS - USE 4426490	2	Brake hose	Bromsslang	4
0040	2	89 69 206		(8965139)	2	Brake hose	Bromsslang	4
0060	3	89 52 699			4	Bracket	Hållare	5
0080	4	89 59 223		2) LH	1	Brake pipe	Bromsrör	5
0085	4	89 64 843		3) LH	1	Brake pipe	Bromsrör	4
0100	5	89 59 488		2) RH	1	Brake pipe	Bromsrör	5
0105	5	89 64 801		3) RH	1	Brake pipe	Bromsrör	4
0120	6	89 59 447		2) LH	1	Brake pipe	Bromsrör	5
0125	6	89 64 769		3) LH	1	Brake pipe	Bromsrör	4
0140	7	89 59 264		2) RH	1	Brake pipe	Bromsrör	5
0145	7	89 64 728		3) RH	1	Brake pipe	Bromsrör	4
0160	8	*89 59 348*		-1988 LH NLS - USE 4103875	1	Brake pipe	Bromsrör	6
0165	8	40 00 188		500) 1989-, LH	1	Brake pipe	Bromsrör	6
0180	9	89 59 306		RH	1	Brake pipe	Bromsrör	6
0200	10	89 61 021			2	Tube clamp	Rörklamma	5
0220	11	89 58 548		-1986	7	Tube clamp	Rörklamma	
0225	11	89 68 166		1987-	7	Tube clamp	Rörklamma	5
0240	12	89 59 520			6	Tube clamp	Rörklamma	5
0260	13	89 59 538			5	Tube clamp	Rörklamma	5
0280	14	89 58 530			8	Clamp	Klammer	5
0300	15	84 59 497			2	Plug	Plugg	5
0310	18	89 65 097			3	Tube clamp	Rörklamma	5


2. Ch. -F4003363.
3. Ch. F4003364-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

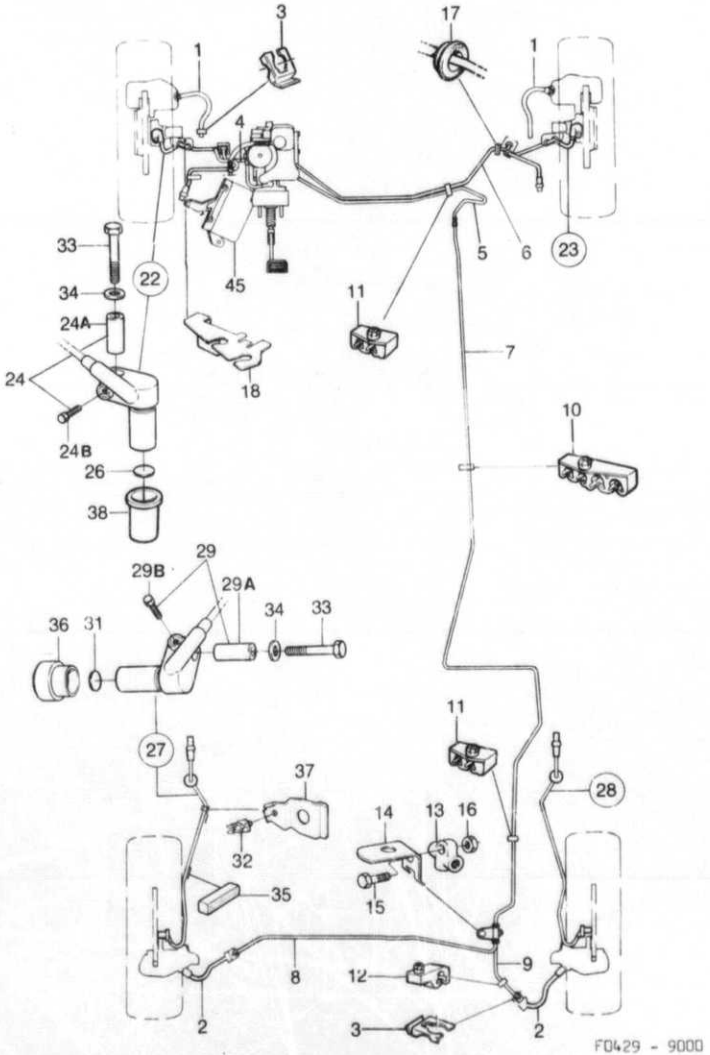

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	*89 73 034*		(8953291) NLS - USE 4426490	2	Brake hose	Bromslang	4
0040	2	89 69 206		(8965139)	2	Brake hose	Bromsslang	4
0060	3	89 52 699			4	Bracket	Hållare	5
0080	4	89 64 413		8)	1	Brake pipe	Bromsrör	5
0090	4	40 01 970		9)	1	Brake pipe	Bromsrör	5
0100	5	89 64 496		8)	1	Brake pipe	Bromsrör	6
0110	5	40 01 996		9)	1	Brake pipe	Bromsrör	6
0120	6	89 64 454		8)	1	Brake pipe	Bromsrör	6
0130	6	40 02 010		9)	1	Brake pipe	Bromsrör	6
0140	7	*89 64 553*		NLS - USE 4103891	1	Brake pipe	Bromsrör	6
0160	8	89 64 595		-1988	1	Brake pipe	Bromsrör	6
0170	8	40 00 204		500) 1989-	1	Brake pipe	Bromsrör	6
0180	9	89 64 637			1	Brake pipe	Bromsrör	6
0200	10	89 58 548			7	Tube clamp	Rörklamma	
0220	11	89 59 520			7	Tube clamp	Rörklamma	5
0240	12	89 59 538			5	Tube clamp	Rörklamma	5
0260	13	89 64 686			1	T-piece	T-stycke	5
0280	14	89 64 678			1	Bracket	Fäste	5
0300	15	80 82 968			1	Screw	Skruv	5
0320	16	80 74 106		-1987	1	Nut	Mutter	5
0330	16	81 51 235		1988-	1	Nut	Mutter	5
0340	17	84 59 497			2	Plug	Plugg	5
0360	18	89 63 621		LH	1	Bracket	Hållare	5
0380	18	89 63 647		RH	1	Bracket	Hållare	5
0440	22	89 63 092		LH	1	Sensor	Givare	3
0460	23	89 63 613		RH	1	Sensor	Givare	3
0470	24	91 05 115		See page 5-033, 4-B10	1	.Screw kit	.Skruvsats	5
0480	24A	*89 67 374*		1) NLS	1	..Sleeve	..Hylsa	6
0500	24B	*89 67 382*		1) NLS	1	..Screw	..Skruv	5
0520	26	89 67 507			2	.Spacer	.Distansstycke	5
0540	27	89 65 857		LH	1	Sensor	Givare	3
0560	28	89 65 840		RH	1	Sensor	Givare	3
0570	29	91 05 115		See page 5-033, 4-B10	1	.Screw kit	.Skruvsats	5
0580	29A	*89 67 374*		NLS	2	..Sleeve	..Hylsa	6
0600	29B	*89 67 382*		NLS	2	..Screw	..Skruv	5
0620	31	89 67 507			2	.Spacer	.Distansstycke	5
0640	32	73 99 140			2	Clip	Clips	5
0660	33	80 21 925			4	Screw	Skruv	5
0680	34	80 29 951			4	Washer	Bricka	5
0700	35	89 67 226			4	Set ring	Kuts	5
0720	36	89 63 019			2	Sleeve	Hylsa	5
0740	37	89 66 988			2	Bracket	Hållare	5
0750	38	89 65 634			2	Sleeve	Hylsa	5
0760	45			See page 3A-097, 2-E02	1	Electronic unit	Elektronikenhet	

1. Not as separate spare part. Ej som separat reservdel.
8. Ch. --K1009731, --K2004996, --K8000276
9. Ch. K1009732--, K2004997--, K8000277--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A22

Brake operation LHD

Bromsmanövrering LHD

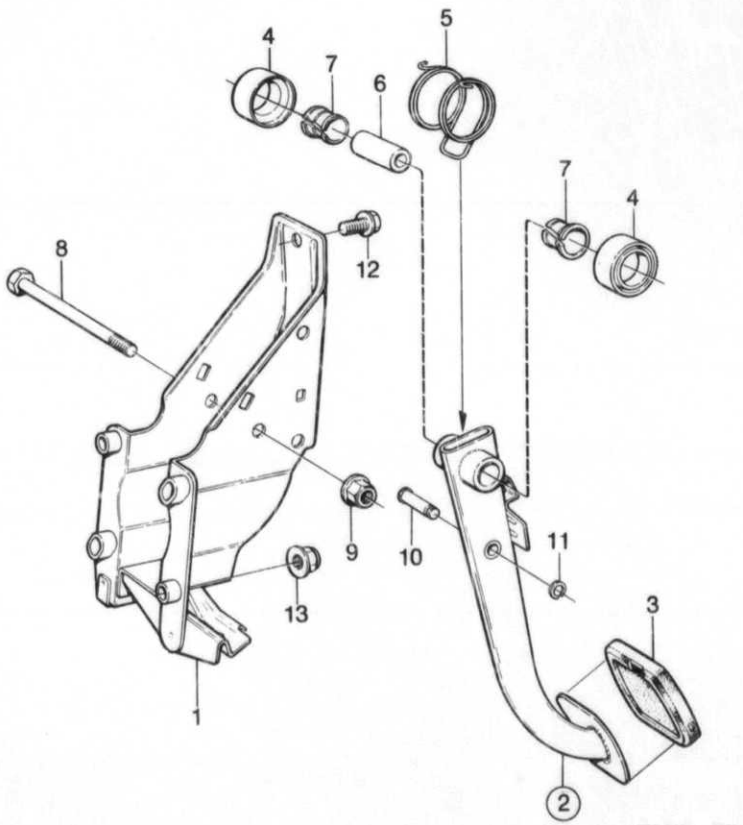

R 6364-9000

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	89 57 672		(8965766)	1	Bracket	Konsol	6
0040	2	89 51 840			1	Brake pedal	Bromspedal	6
0050	2	89 52 244		A	1	Brake pedal	Bromspedal	6
0060	3	89 16 272			1	▪Pedal pad	▪Pedalgummi	5
0070	3	89 56 393		A	1	▪Pedal pad	▪Pedalgummi	5
0080	4	*89 50 024*		-1987 NLS - USE 8970204	2	Spacer sleeve	Distanshylsa	5
0090	4	89 70 204		1988-	2	Spacer sleeve	Distanshylsa	5
0100	5	89 51 527			1	Spring	Fjäder	6
0120	6	89 50 297			1	Spacer tube	Distansrör	5
0140	7	89 62 128			2	Bearing bushing	Lagerbussning	4
0170	8	79 79 248		(8084246)	1	Screw	Skruv	5
0180	9	79 69 306			1	Lock nut	Låsmutter	5
0200	10	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0220	11	82 52 553			1	Clip	Clips	5
0240	12	79 67 938		-1988	1	Screw	Skruv	5
0250	12	79 70 288		500) 1989-	1	Screw	Skruv	5
0260	13	79 71 922			4	Nut	Mutter	3

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-A24

Brake operation RHD

Bromsmanövrering RHD

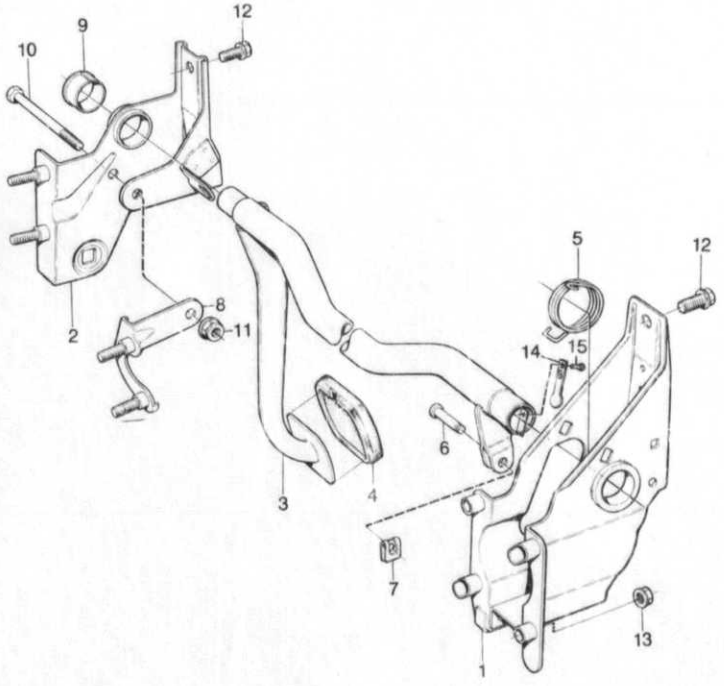

R 7517–9000

0325	Pos	Part No/Ar: nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 65 600		LH (8957847)	1	Bracket	Konsol	6
0040	2	*89 65 584*		-1988 RH (8962169) NLS - USE 9970444	1	Bracket	Konsol	6
0050	2	89 70 444		500) 1989-	1	Bracket	Konsol	6
0060	3	89 65 618		(8964108)	1	Brake pedal	Bromspedal	6
0070	3	89 65 626		A	1	Brake pedal	Bromspedal	6
0080	4	89 16 272			1	,Pedal pad	,Pedalgummi	5
0090	4	89 56 393		A	1	,Pedal pad	,Pedalgummi	5
0100	5	89 62 300			1	Return spring	Returfjäder	6
0120	6	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0140	7	82 52 553			1	Clip	Clips	5
0160	8	89 57 482			1	Bracket	Konsol	6
0180	9	89 53 390			2	Plastic bushing	Plastbussning	6
0210	10	79 79 248		(8084246)	1	Screw	Skruv	5
0220	11	79 69 306			1	Lock nut	Låsmutter	5
0240	12	79 67 938		-1988	2	Screw	Skruv	5
0250	12	79 70 288		500) 1989-	2	Screw	Skruv	5
0260	13	79 71 922			8	Nut	Mutter	3
0280	14	89 65 501		RHD	1	Stop	Anslag	6
0281						speed control system	farthållningssystem	
0300	15	79 22 800		RHD	1	Screw	Skruv	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-B02 Parking brake system — Parkeringsbromssystem

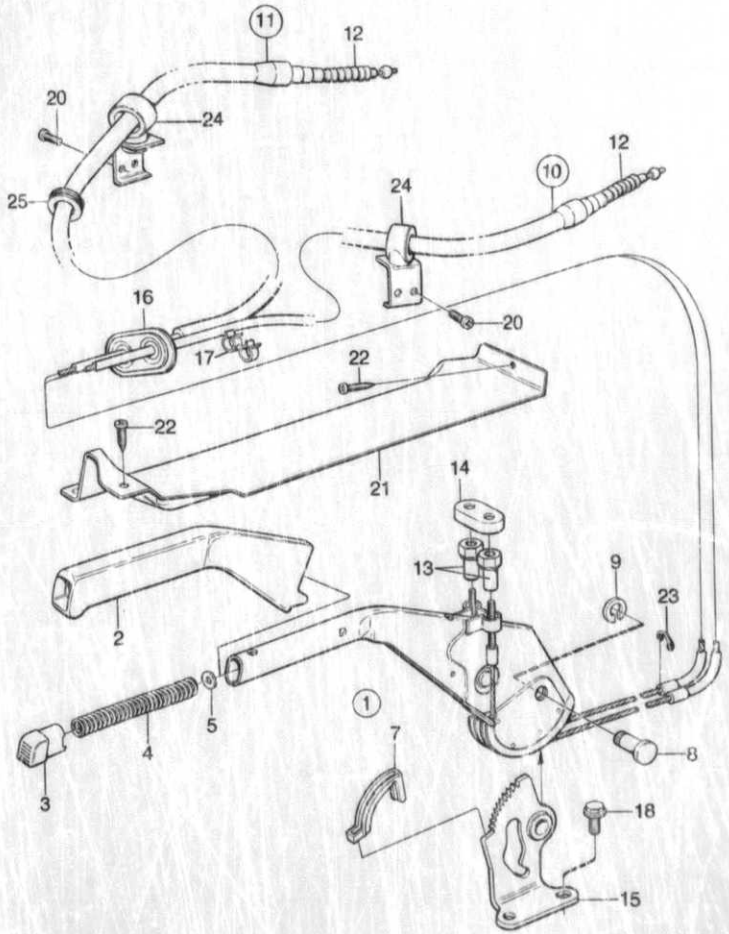

R 9822 - 9000

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 56 179			1	Handbrake lever	Handbromsspak	5
0060	2	89 62 649			1	.Handle	.Handtag	5
0080	3	89 53 788			1	.Push button	.Tryckknapp	5
0100	4	89 53 739			1	.Spring	.Fjäder	5
0120	5	80 29 969			1	.Washer	.Bricka	5
0160	7	89 61 062			1	Slide rail	Glidskena	4
0180	8	89 53 762			1	Bolt	Bult	5
0200	9	*79 15 077*		NLS - USE 7963143	1	E-circlip	Spårryttare	5
0220	10	89 64 348		-1986 LH	1	Parking brake cable	Parkeringsbromswire	4
0242	10	89 67 481		1987- LH	1	Parking brake cable	Parkeringsbromswire	4
0260	11	89 64 363		-1986 RH	1	Parking brake cable	Parkeringsbromswire	4
0290	11	89 70 733		1987-, RH (8967499)	1	Parking brake cable	Parkeringsbromswire	4
0300	12	89 54 455			2	.Bellows	.Bälg	2
0320	13	89 53 796			2	Adjusting nut	Justermutter	3
0340	14	89 53 879			1	Turn stop	Vridstopp	6
0360	15	89 53 689			1	Segment	Segment	6
0380	16	89 54 646			1	Grommet	Genomföring	5
0400	17	73 98 464			1	Clamp	Klammer	5
0420	18	79 67 938			2	Screw	Skruv	5
0460	20	79 72 805			2	Screw	Skruv	5
0480	21	97 64 044			1	Protection	Skydd	6
0500	22	79 72 805			3	Screw	Skruv	5
0520	23	89 66 608		1987-	1	Clamp	Klammer	5
0540	24	89 67 655			2	Bracket	Hållare	6
0560	25	89 70 725		7)	1	Grommet	Genomföring	5

7. Ch. J1016109-, J2008896-, J8001015-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04


Complete set


4-B04


Brakes


Satser


Bromsar

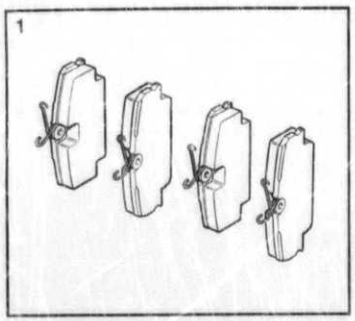


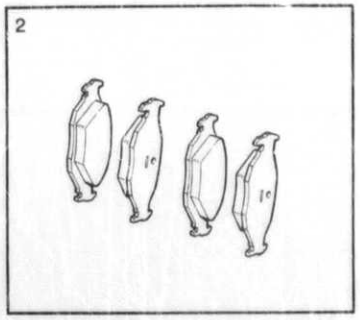

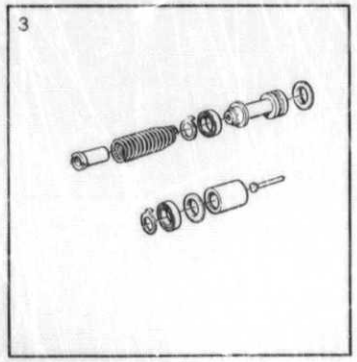

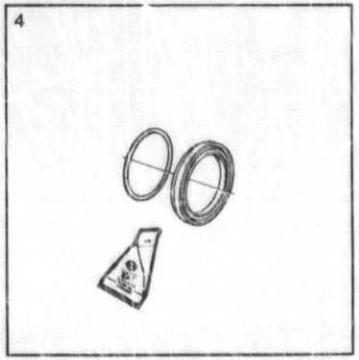

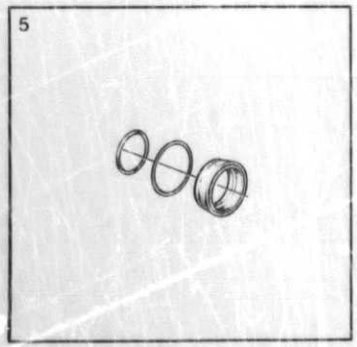

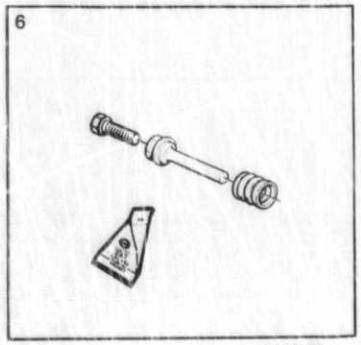

F4106 9000

1000	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	•	89 93 719		12)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0020									
0030		•	41 05 433		1)	4	.Brake pad	.Bromsklots	1
0040			89 55 122			2	.Screw	.Skruv	5
0050									
0060	1	•	41 07 116		12,13)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0070									
0080		•	41 05 433		1)	4	.Brake pad	.Bromsklots	1
0090			89 55 122			2	.Screw	.Skruv	5
0100									
0110	1		89 68 976		12), 1988- TURBO, SE, EU	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0120									
0130			89 69 412		1)	2	.Brake pad	.Bromsklots	1
0140			*89 69 446*		1) NLS	2	.Brake pad	.Bromsklots	1
0150									
0160	1	•	89 93 768		12), 1988- TURBO, GB, ME FE, JP, AU, US	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0170									
0180		•	41 98 941		1)	2	.Brake pad	.Bromsklots	1
0190		•	41 98 958		1)	2	.Brake pad	.Bromsklots	1
0200									
0210	2	•	41 96 317		12)	X	Brake pad kit rear brake	Bromsklotssats bakbroms	1
0220									
0230		•	41 96 267		1)	2	.Brake pad	.Bromsklots	1
0240		•	41 96 275		1)	2	.Brake pad	.Bromsklots	1
0250									
0260	3		89 88 149		2)	X	Sealing kit master cylinder	Tätningssats huvudcylinder	2
0270									
0280			89 86 945		1)	1	.Piston	.Kolv	6
0290			*89 86 911*		NLS - USE 4425229	2	.Gasket	.Packning	4
0300			89 86 986		1)	1	.Seal	.Tätning	6
0310			89 87 018		1)	1	.Sealing ring	.Tätningsring	6
0320			89 86 994		1)	1	.Seal	.Tätning	6
0330			89 65 808			1	.Pin	.Pinne	4
0340									
0350	3		89 65 329		3)	X	Sealing kit master cylinder	Tätningssats huvudcylinder	4
0360									
0370			89 65 782		1)	1	.Piston	.Kolv	6
0380			*89 86 911*		NLS - USE 4425229	2	.Gasket	.Packning	4
0390			89 86 986		1)	1	.Seal	.Tätning	6
0400			89 87 018		1)	1	.Sealing ring	.Tätningsring	6
0410			89 86 994		1)	1	.Seal	.Tätning	6
0420			89 65 808			1	.Pin	.Pinne	4
0430									
0440	4		89 61 799			X	Gasket kit front brake	Packningsats frambroms	2
0450									
0460			89 55 056		1)	1	.Gaiter	.Damask	6
0470			89 55 064		1)	1	.Seal	.Tätning	6
0480			89 55 155		1)	1	.Grease	.Fett	6
0490									
0500	4		89 68 968		1988- TURBO	X	Gasket kit front brake	Packningsats frambroms	2
0510									
0520			89 69 081		1)	1	.Gaiter	.Damask	2
0530			89 69 099		1)	1	.Seal	.Tätning	2
0540			89 55 536		1)	1	.Grease	.Fett	6
0550									
0560	5		89 61 849			X	Gasket kit rear brake	Packningsats bakbroms	4
0570									
0580			89 55 288		1)	1	.Seal	.Tätning	6

1. Not as separate spare part. Ej som separat reservdel.
2. Ch. -F4003363.
3. Ch. F4003364-.
12. See SI 500-1034 Se SI 500-1034
13. Only for cars that will b repaired in USA and Canada Endast för bilar som repareras i USA och Canada

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04


Complete set

4-B06

Brakes

Satser

Bromsar

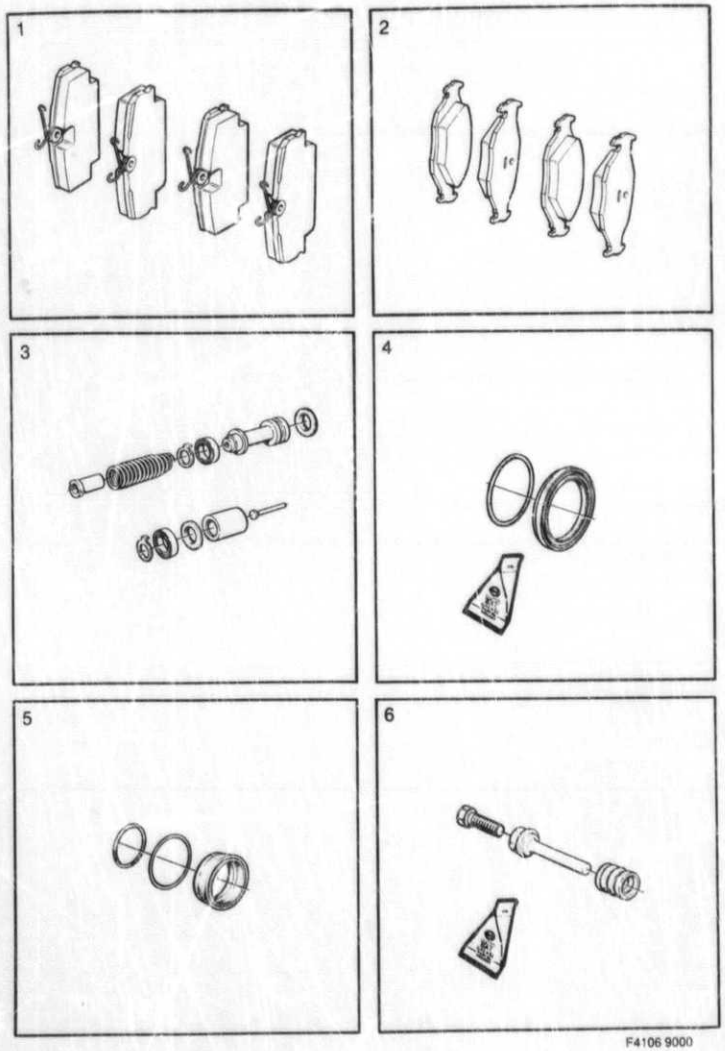

F4106 9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590		89 55 296		1)	1	.Gaiter	.Damask	6
0600		89 55 239		1)	1	.Ring	.Ring	6
0610								
0620	6	89 61 807			X	Bellows kit front brake	Bälgsats frambroms	3
0630								
0640		*89 55 114*		NLS - USE 8961807	2	.Slide pin	.Glidpinne	3
0650		89 55 122			2	.Screw	.Skruv	5
0660		*89 55 130*		1) NLS	2	.Protecting casing	.Skyddskåpa	6
0670		89 55 148		1)	X	.Grease	.Fett	6

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


5 GROUP INDEX


Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04


Complete set
4-B08
Brakes


Satser
Bromsar

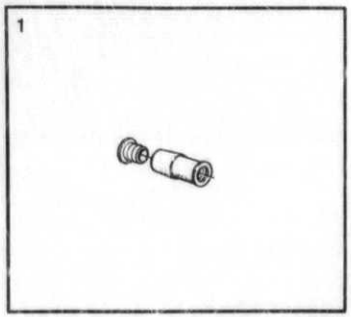


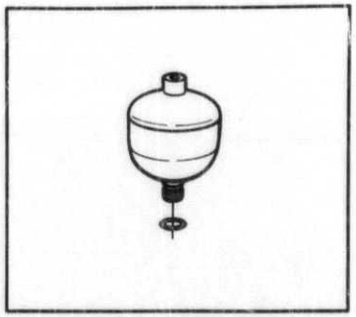

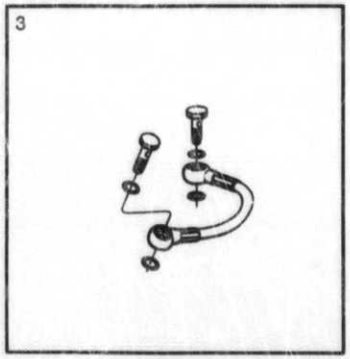

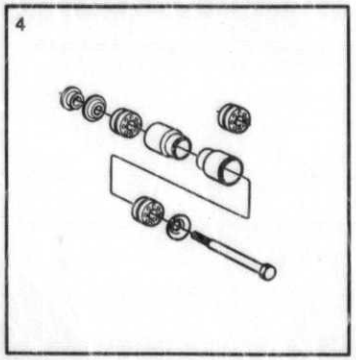

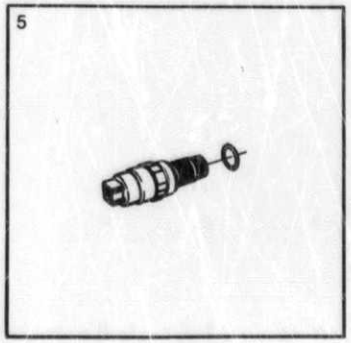

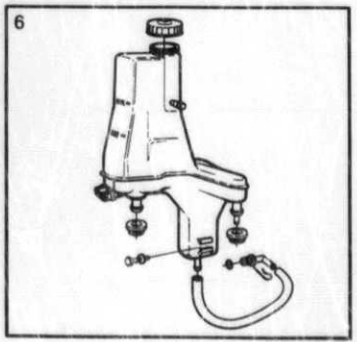

F7133 9000

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 55 445*		NLS - USE 4467064	X	Guide	Styrning	6
0020		89 55 452		1)	2	.Bushing	.Bussning	6
0030		89 55 460		1)	2	.Sleeve	.Hylsa	6
0040		89 55 478			2	.Cover	.Lock	3
0050								
0060	2	89 67 218		8)	X	Accumulator	Ackumulator	5
0070		89 66 277		1)	1	.Accumulator	.Ackumulator	5
0080		89 67 234			1	.O-ring	.O-ring	2
0090		89 66 707		1)	1	.Label	.Etikett	6
0100								
0110	2	40 02 267		9)	X	Accumulator	Ackumulator	5
0120		*40 01 814*		1) NLS	1	.Accumulator	.Ackumulator	5
0130		89 67 234			1	.O-ring	.O-ring	2
0140		89 66 707		1)	1	.Label	.Etikett	6
0150								
0160	3	89 67 259		8)	X	Hose kit	Slangsats	5
0180		89 66 319		1)	1	.High pressure hose	.Högtrycksslang	5
0190		89 67 408			4	.O-ring	.O-ring	2
0200		89 66 327			2	.Fitting	.Förskruvning	6
0210								
0220	4	89 67 283		8)	X	Suspension kit	Upphängningssats	5
0230		89 66 236		1)	3	.Bracket	.Upphängning	5
0240		*89 66 244*		1) NLS	1	.Spacer	.Distans	6
0250		*89 66 269*		1) NLS	1	.Screw	.Skruv	5
0260		*89 66 251*		1) NLS	1	.Washer	.Bricka	5
0270								
0280	4	40 02 895		9)	X	Suspension kit	Upphängningssats	5
0290		*91 04 811*		1) NLS	2	.Bracket	.Upphängning	5
0300		89 66 236		1)	1	.Bracket	.Upphängning	5
0310		*40 03 083*		1) NLS	1	.Spacer	.Distans	5
0320		91 04 829		1)	1	.Screw	.Skruv	5
0330		*91 04 944*		1) NLS	2	.Sleeve	.Hylsa	6
0340		*89 66 251*		1) NLS	1	.Washer	.Bricka	5
0350								
0360	5	89 67 309			X	Pressure monitor	Tryckvakt	4
0380		89 66 160		1)	1	.Pressure monitor	.Tryckvakt	4
0390		89 67 325			1	.O-ring	.O-ring	2
0400								
0410	6	89 67 333		8)	X	Reservoir	Behållare	5
0420		89 66 137		1)	1	.Reservoir	.Behållare	5
0430		89 66 368			1	.Screw	.Skruv	5
0440		89 66 152			1	.Cover	.Lock	4
0450		89 66 350		1)	1	.Bracket	.Hållare	5
0460		89 66 335			2	.Rubber bushing	.Gummibussning	6
0470		89 67 341			1	.Hose kit	.Slangsats	5
0480								
0490	6	*40 03 141*		9) NLS - USE 4190617	X	Reservoir	Behållare	6
0500		89 66 137		1)	1	.Reservoir	.Behållare	5
0510		89 66 368			1	.Screw	.Skruv	5
0520		89 66 152			1	.Cover	.Lock	4
0530		*40 02 051*		1) NLS	1	.Bracket	.Hållare	5
0540		89 66 335			2	.Rubber bushing	.Gummibussning	6
0550		40 02 861			1	.Hose kit	.Slangsats	5
0560		89 67 390			1	.O-ring kit	.O-ringsats	2

1. Not as separate spare part. Ej som separat reservdel.
8. Ch. --K1009731, --K2004996, --K8000276
9. Ch. K1009732--, K2004997--, K8000277--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

Complete set
4-B10
Brakes

Satser
Bromsar

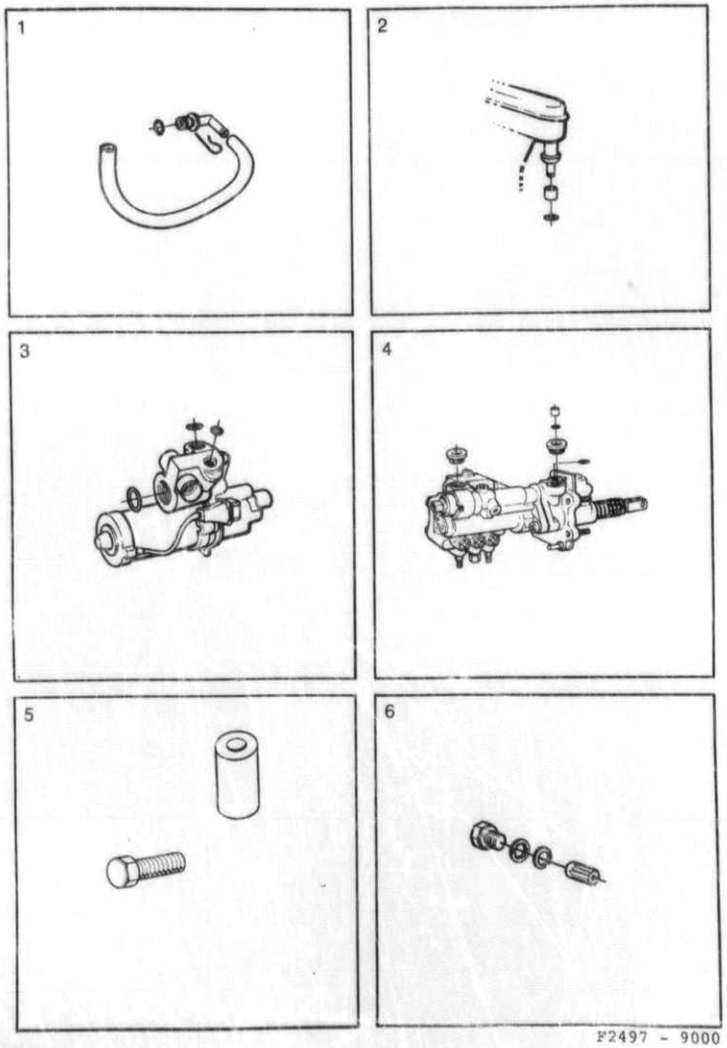

F2497 - 9000

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 67 341		8)	X	Hose kit	Slangsats	5
0020		89 66 301		1)	1	.Hose	.Slang	5
0030		89 66 285		1)	1	.Nipple	.Nippel	6
0040		89 66 293			1	.Needle	.Nål	6
0050		89 67 408			1	.O-ring	.O-ring	2
0060								
0070	1	40 02 861		9)	X	Hose kit	Slangsats	5
0080		*91 04 746*		1) NLS	1	.Hose	.Slang	
0090		*91 04 738*		1) NLS	1	.Nipple	.Nippel	
0100		40 03 117			1	.O-ring	.O-ring	5
0110								
0120	2	89 67 390			X	O-ring kit	O-ringsats	2
0130		*89 66 681*		1) NLS - USE 8967390	1	.O-ring	.O-ring	4
0140		*89 66 939*		1) NLS - USE 8967390	1	.Sleeve	.Hylsa	6
0150								
0160	3	89 67 424		8)	X	Pump kit	Pumpsats	6
0170		89 67 440		1)	1	.Pump motor	.Pumpmotor	6
0180		89 67 234			1	.O-ring	.O-ring	2
0190		89 67 408			1	.O-ring	.O-ring	2
0200		89 67 325			1	.O-ring	.O-ring	2
0210								
0220	3	40 03 158		9)	X	Pump kit	Pumpsats	6
0230		*40 03 166*		1) NLS	1	.Pump motor	.Pumpmotor	6
0240		89 67 234			1	.O-ring	.O-ring	2
0250		89 67 325			1	.O-ring	.O-ring	2
0260								
0270	4	89 67 457		8)	X	Master cylinder kit	Huvudcylindersats	6
0280		89 67 473		1)	1	.Brake servo	.Bromsservo	6
0290		89 66 426		1)	1	.Master cylinder	.Huvudcylinder	6
0300		89 66 392		1)	1	.Valve body	.Ventilblock	6
0310		89 67 408			1	.O-ring	.O-ring	2
0320		89 66 376			2	.Intermediate section	.Mellanstycke	5
0330		89 66 384			1	.Intermediate section	.Mellanstycke	5
0340		89 66 335			2	.Rubber bushing	.Gummibussning	6
0350		80 74 106			3	.Nut	.Mutter	5
0360		79 16 497			3	.Washer	.Bricka	5
0370		89 67 390			1	.O-ring kit	.O-ringsats	2
0380								
0390	4	40 03 182		9)	X	Master cylinder kit	Huvudcylindersats	6
0400		*40 03 174*		1) NLS - USE 4003182	1	.Master cylinder	.Huvudcylinder	6
0410		89 66 376			2	.Intermediate section	.Mellanstycke	5
0420		89 66 392		1)	1	.Valve body	.Ventilblock	6
0430		89 66 384			1	.Intermediate section	.Mellanstycke	5
0440		89 66 335			2	.Rubber bushing	.Gummibussning	6
0450		89 67 390			1	.O-ring kit	.O-ringsats	2
0460		80 74 106			3	.Nut	.Mutter	5
0470		79 16 497			3	.Washer	.Bricka	5
0480								
0490	5	91 05 115		ABS	2	Screw kit	Skruvsats	5
0500		*89 67 374*		1) NLS	1	.Sleeve	.Hylsa	6
0510		*89 67 382*		1) NLS	1	.Screw	.Skruv	5
0520								
0530	6	41 07 793			*	Adjuster kit rear brake	Justeringssats bakbroms	4
0540								
0550		41 07 801		1)	1	.Washer	.Bricka	5
0560		*89 55 304*		1) NLS - USE 4107793	1	.Adjustment screw	.Justerskruv	5
0570		89 55 312		1)	1	.Screw	.Skruv	5
0580		*89 70 147*		1) NLS - USE 4107793	1	.Stop ring	.Stoppring	5

1. Not as separate spare part. Ej som separat reservdel.
8. Ch. -K1009731, -K2004996, -K8000276
9. Ch. K1009732-, K2004997-, K8000277-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	8-D02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

Complete set
Brakes

Satser
Bromsar

4-B12

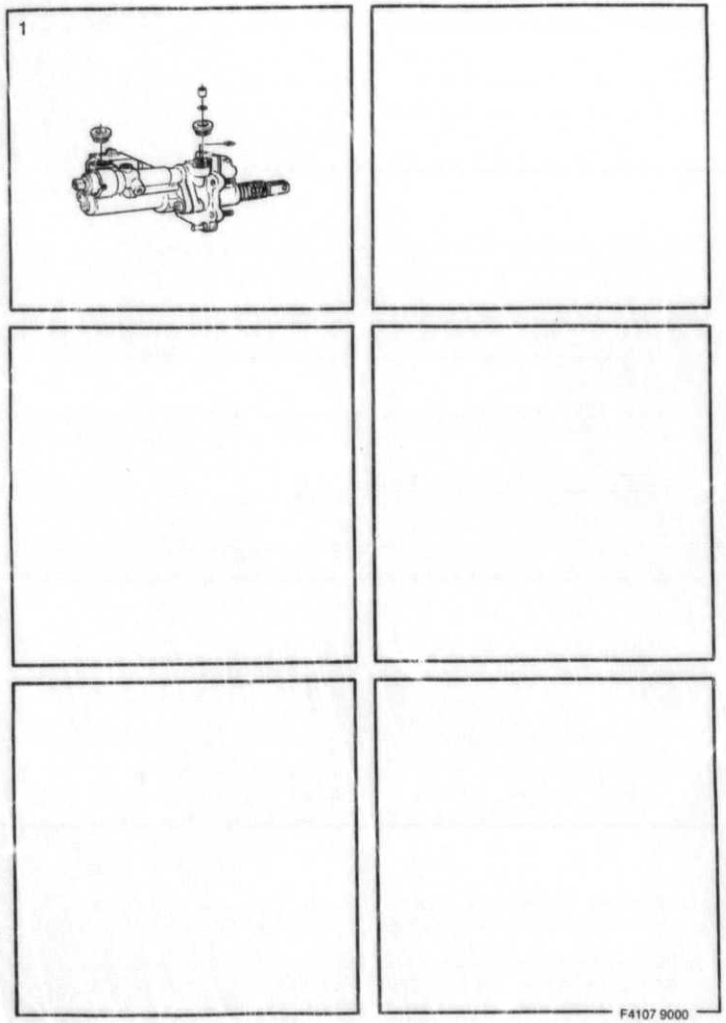

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 95 905		8)	1	Master cylinder kit	Huvudcylindersats	6
0020		89 67 408			1	.O-ring	.O-ring	2
0030		89 66 335			2	.Rubber bushing	.Gummibussning	6
0040		41 95 855			5	.O-ring	.O-ring	2
0050		80 74 106			3	.Nut	.Mutter	5
0060		89 67 390			1	.O-ring kit	.O-ringsats	2
0070								
0080	1	41 95 897		9)	1	Master cylinder kit	Huvudcylindersats	6
0090		89 67 408			1	.O-ring	.O-ring	2
0100		89 66 335			2	.Rubber bushing	.Gummibussning	6
0110		41 95 855			5	.O-ring	.O-ring	2
0120		80 74 106			3	.Nut	.Mutter	5
0130		89 67 390			1	.O-ring kit	.O-ringsats	2
0140								

8. Ch. --K1009731, --K2004996, --K8000276
9. Ch. K1009732--, K2004997--, K8000277--


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A10
Footbrake system	4-A12
Parking brake system	4-B02
Complete sets	4-B04

4-C02

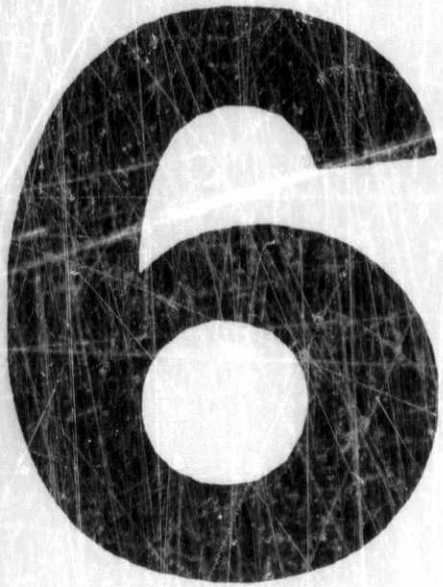

Front assembly, Steering
Framvagn, Styrinrättning
Tren delantero, Dirección

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0095
0100
0105
0110
0120
0130
0150
0160

TABLE OF CONTENTS

Front wheel suspension		
Front wheel suspension	6 : 5	4-C06
Steering device		
Steering shaft	6 : 7	4-C08
Steering wheel, horn button	6 : 9	4-C10
Countershaft, bracket	6 : 11	4-C12
Power steering gear	6 : 15	4-C16
Hydraulic pump, hoses	6 : 19	4-C20
Belt tensioner	6 : 21	4-C22
Belt tensioner, 115 amp alternator	6 : 23	4-C24
Complete sets		
Front wheel suspension, steering device	6 : 25	4-D02

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

4-C03

0042
0170
0180
0190
0200
0210
0220
0230
0240
0250
0252
0255
0260
0270
0280
0290
0310
0320
0650
0660
0670
0680
0690
0700
0710
0720
0730
0732
0735
0740
0750
0760
0770
0790
0800

INNEHÅLLSFÖRTECKNING

Framvagn		
Framvagn	6 : 5	4-C06
Styrinrättning		
Rattstång	6 : 7	4-C08
Ratt, signalknapp	6 : 9	4-C10
Mellanaxel, konsol	6 : 11	4-C12
Servostyrväxel	6 : 15	4-C16
Hydraulpump, slangar	6 : 19	4-C20
Remspännare	6 : 21	4-C22
Remspännare, 115 amp generator	6 : 23	4-C24
Satser		
Framvagn, styrinrättning	6 : 25	4-D02

SUMARIO

Tren delantero		
Tren delantero	6 : 5	4-C06
Direccion		
Barra volante	6 : 7	4-C08
Volante, buton bocina	6 : 9	4-C10
Eje intermedio, consola	6 : 11	4-C12
Servomecanismo de direccion	6 : 15	4-C16
Bomba hidraulica, mangueras	6 : 19	4-C20
Tensor de correa	6 : 21	4-C22
Tensor de correa, 115 amp alternador	6 : 23	4-C24
Juegos completos		
Mecanismos delanteros, direccin, cambio en el volante	6 : 25	4-D02


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

4-C06 *Front wheel suspension* *Framvagn*

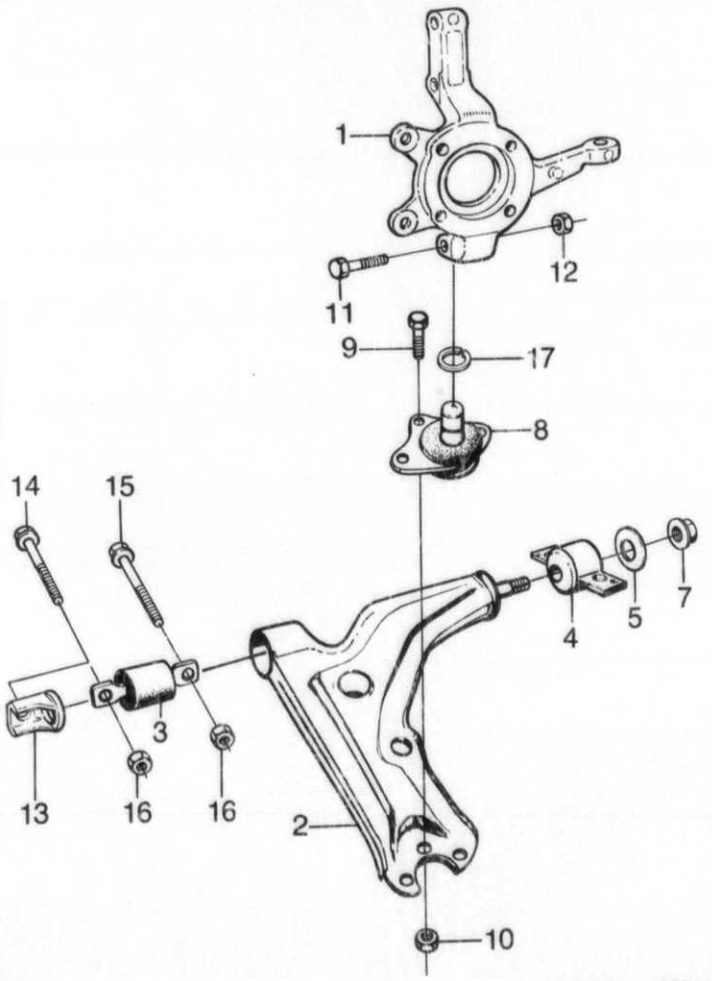

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 65 279		LH (8951923)	1	Steering knuckle housing	Styrspindelhus	5
0020	1	89 65 287		RH (8951931)	1	Steering knuckle housing	Styrspindelhus	5
0030	1	89 63 209		LH ABS	1	Steering knuckle housing	Styrspindelhus	5
0040	1	89 63 217		RH ABS	1	Steering knuckle housing	Styrspindelhus	5
0050	2	89 58 365		LH	1	Swivel arm	Svängarm	4
0060	2	89 58 373		RH	1	Swivel arm	Svängarm	4
0070	3	89 61 476			2	Bushing	Bussning	5
0080	4	89 65 253		(8954158)	2	Bearing anchorage	Lagerfäste	5
0090	5	89 58 779			2	Washer	Bricka	5
0100	7	79 71 765			2	Nut	Mutter	5
0110	8	89 72 135		(8957045)	2	End piece	Ändstycke	2
0120	9	*79 77 382*		NLS - USE 7982986	6	Screw	Skruv	5
0130	10	79 75 501			6	Nut	Mutter	5
0140	11	89 65 121		(7977291)	2	Screw	Skruv	5
0150	12	79 77 309			2	Nut	Mutter	3
0160	13	89 69 669		(8961484)	4	Bearing support	Lagerstöd	6
0170	14	79 79 248		(8084246)	2	Screw	Skruv	5
0180	15	89 62 037		-1988	2	Screw	Skruv	5
0190	15	40 01 111		500),1989-	2	Screw	Skruv	5
0200	16	*79 73 464*		NLS - USE 7978620	4	Nut	Mutter	3
0210	17	79 63 168		500),1989-	2	Lock ring	Låsring	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

6 GROUP INDEX

Front wheel suspension	**4-C06**
Steering device	**4-C08**
Complete sets	**4-D02**

4-C08

Steering shaft
Rattstång

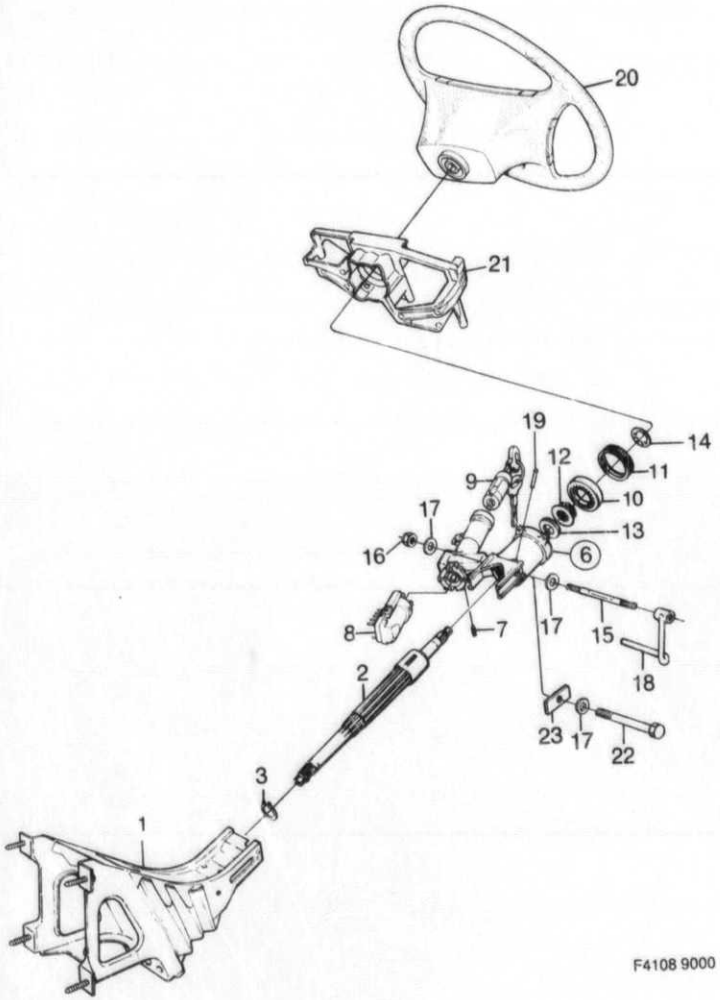

F4108 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1			See page 6-011, 4-C12		Bracket	Konsol	
2	89 53 549			1	Steering shaft	Rattstång	5
2	89 72 929		AIR-BAG	1	Steering shaft	Rattstång	5
3	79 15 119			1	Retaining ring	Spårring	5
6	89 62 912		-1985	1	Lock	Lås	6
6	*89 63 100*		29), 1986-1987 NLS - USE 4002648, 8971343	1	Lock	Lås	6
6	89 72 358		1988-,13)	1	Lock	Lås	6
6	*89 71 350*		14,21) NLS - USE 4002648	1	Lock	Lås	6
6	40 02 648		22)	1	Lock	Lås	6
7	73 98 381			2	.Screw	.Skruv	5
8	95 07 906		-1985	1	.Contact	.Kontakt	4
8	*40 62 782*		(9509605,9569062) NLS - USE 4085783	1	.Contact	.Kontakt	4
9			See page 8A-071, 4-H24		Lock cylinder	Låscylinder	
10	89 50 701			1	Ball bearing	Kullager	6
11	89 50 172			1	Ring	Ring	5
12	*89 54 364*		-1987 NLS - USE 8972374	1	Bushing	Bussning	3
12	89 72 374		1988-	1	Bushing	Bussning	3
13	40 00 360		1988-(8970378)	1	Washer	Bricka	5
14	89 54 281			1	Lock ring	Låsring	5
15	*89 63 365*		NLS - USE 4192910	1	Screw	Skruv	5
16	73 98 324			1	Nut	Mutter	3
17	80 73 108			2	Washer	Bricka	5
18	*89 63 373*		-1985 NLS - USE 8967762	1	Control arm	Manöverarm	5
18	89 67 762		1986-	1	Control arm	Manöverarm	5
19	73 98 290			1	Spring pin	Rörpinne	5
20			See page 6-009, 4-C10		Steering wheel	Ratt	
21			See page 3A-069, 2-C22		Holder	Hållare	
22	89 69 032		AIR-BAG	1	Screw	Skruv	5
23	89 69 024		AIR-BAG	1	Spacer	Distans	5


13. Ch.--J1028916, --J2017138, --J8001833
14. Ch. J1028917--, J2017139--, J8001834--
21. Ch.--K1019484, --K2011124, --K8001004
22. Ch.K1019485--, K2011125--, K8001005--
29. Superseded by 40 02 648 and 89 71 343. Ersatt av 40 02 648 och 89 71 343.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

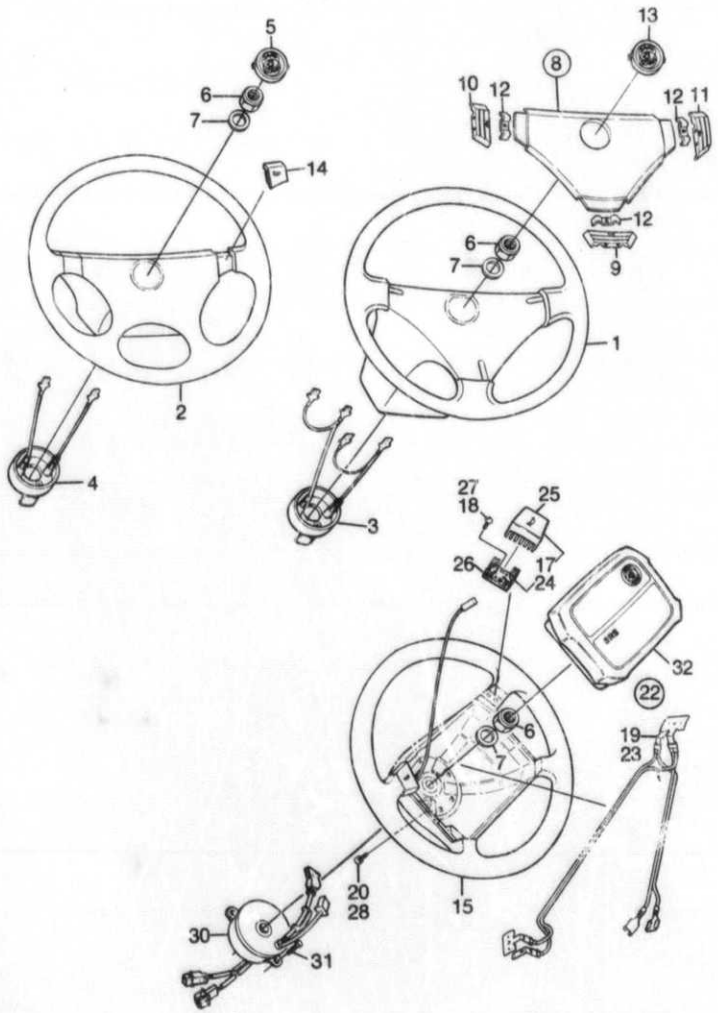

F7134 9000

Steering device
4-C10
Steering wheel
Horn button

Styrinrättning
Ratt
Signalknapp

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 87 422*		31), -1985	1	Steering wheel	Ratt	5
0020				NLS		three spoke	treekrad	
0030	1	*89 73 547*		31), 1986- (8965436)	1	Steering wheel	Ratt	5
0040				NLS		three spoke	treekrad	
0050	2	89 65 477		1986-	1	Steering wheel	Ratt	5
0060						four spoke	fyrekrad	
0070	3	89 61 120			1	Companion flange	Medbringare	5
0080	4	89 58 787			1	Companion flange	Medbringare	6
0090	5	89 89 659		1986-	1	Emblem	Emblem	3
0100	6	89 54 315			1	Nut	Mutter	5
0110	7	79 33 872			1	Washer	Bricka	5
0120	8	89 90 376			1	Steering wheel pad	Rattkudde	3
0130	9	89 90 962			1	.Horn button	.Signalknapp	6
0140	10	89 90 970			1	.Horn button	.Signalknapp	6
0150	11	89 90 988			1	.Horn button	.Signalknapp	6
0160	12	89 87 406			3	.Contact plate	.Kontaktplatta	6
0170	13	89 90 103			1	.Emblem	.Emblem	3
0180	14	89 61 096		1986-, LH	1	Horn button	Signalknapp	5
0190	14	89 61 104		1986-, RH	1	Horn button	Signalknapp	5
0200								
0210	15	91 04 613		28,26) (8993578)	1	Steering wheel	Ratt	5
0220	15	40 02 945		28,27)	1	Steering wheel	Ratt	5
0230	17	• 43 68 627		28,26),(4003349,4003356)	1	.Horn button	.Signalknapp	
0240	18	89 68 703		28,26)	4	.Screw	.Skruv	5
0250	19	40 03 364		28,26)	1	.Cable	.Kabel	6
0260	20	89 68 315		28,26)	2	.Screw	.Skruv	5
0270								
0280	22	40 03 398		28,27)	1	.Cable	.Kabel	6
0290	23	*40 00 139*		1,28,27) NLS	1	..Cable	..Kabel	6
0295	24	• 43 68 627		28,27)	1	..Horn button	..Signalknapp	
0300	24	40 03 372		28,27), LH	1	...Horn button	...Signalknapp	6
0310	24	40 03 380		28,27), RH	1	...Horn button	...Signalknapp	6
0320	25	40 02 622		1,28,27), LH	1	....Horn button	....Signalknapp	5
0330	25	40 02 630		1,28,27), RH	1	....Horn button	....Signalknapp	6
0340	26	89 68 679		1,28,27)	1	....Housing	....Hus	6
0350	27	89 68 703		28,27)	4	.Screw	.Skruv	5
0360	28	89 68 315		28,27)	2	.Screw	.Skruv	5
0370	30	89 72 200		28)	1	Contact unit	Kontaktenhet	6
0380	31	79 72 193		28)	2	Screw	Skruv	5
0390	32	*89 71 301*		28,26,33) NLS	1	Steering wheel pad	Rattkudde	5
0400	32	*40 02 960*		28,27,33) NLS	1	Airbag module	Airbagmodul	5

1. Not as separate spare part. Ej som separat reservdel.
26. CH.--K1028314. --K2017665
27. CH.K1028315--, K2017666--
28. AIR-BAG.
31. Superseded by 4103453 and 4416087. Ersatt av 4103453 och 4416087.
33. Superseded by 4416061. Ersatt av 4416061.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

4-C12

Steering device
Countershaft
Bracket

Styrinrättning
Mellanaxel
Konsol

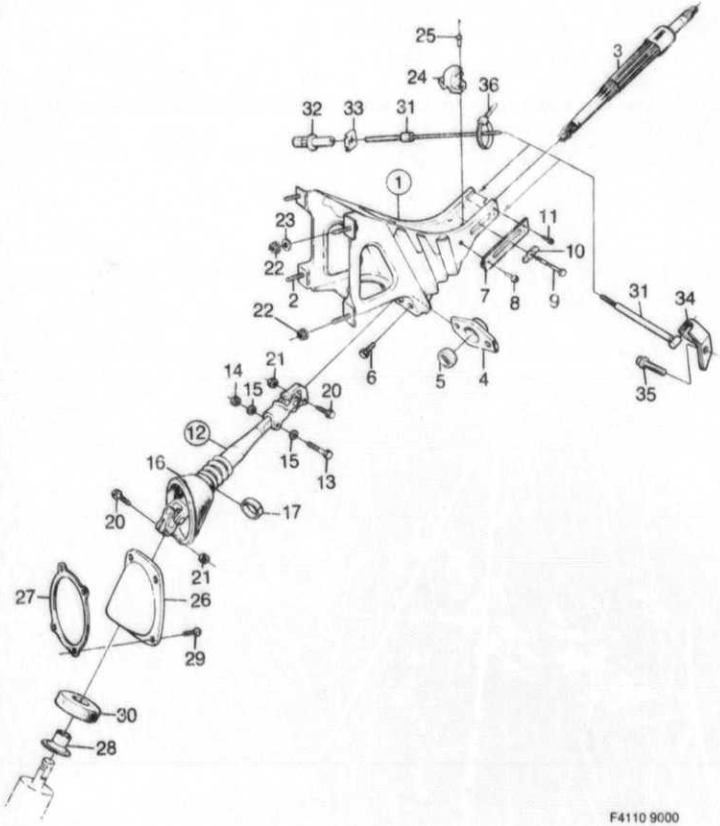

F4110 9000

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0630	1	89 73 448		(8966053,8969917)	1	Bracket	Konsol	6
0640	1	40 02 994		AIR-BAG	1	Bracket	Konsol	6
0650	1	89 73 455		RHD (8966061)	1	Bracket	Konsol	6
0070	2	*89 54 497*		-1985 NLS	4	•Screw	•Skruv	5
0080	2	*73 98 787*		1986- NLS	4	•Screw	•Skruv	5
0090	3			See page 6-007, 4-C08		Steering shaft	Rattstång	
0100	4	89 52 194			1	Bearing housing	Lagerhus	6
0110	5	89 56 104			1	Needle bearing	Nållager	5
0130	6	73 99 934		(8082919)	2	Screw	Skruv	5
0135	7	*89 63 332*		13) NLS - USE 4002648, 8971343	2	Slide rail	Glidskena	5
0140	7	89 71 343		14)	2	Slide rail	Glidskena	5
0150	7	89 71 657		AIR-BAG	2	Slide rail	Glidskena	5
0160	8	79 73 761		-1986	2	Screw	Skruv	5
0170	8	79 74 512		1987-	2	Screw	Skruv	5
0180	9			See page 6-007, 4-C08		Screw	Skruv	
0190	10			See page 6-007, 4-C08		Spacer	Distans	
0200	11	79 73 753			4	Screw	Skruv	5
0210	12	*89 67 523*		-1987 (8963928) NLS - USE 4002259, 7399934	1	Countershaft	Mellanaxel	5
0220	12	*89 56 849*		1988-,10) NLS - USE 4002226, 7399934	1	Countershaft	Mellanaxel	5
0230	12	*89 56 849*		11),-1988 TURBO NLS - USE 4002226, 7399934	1	Countershaft	Mellanaxel	5
0240	12	40 02 226		500),1989- TURBO	1	Countershaft	Mellanaxel	5
0250	12	*89 67 523*		11),-1988 I NLS - USE 4002259, 7399934	1	Countershaft	Mellanaxel	5
0260	12	40 02 259		500),1989- I	1	Countershaft	Mellanaxel	5
0270	12	*89 67 549*		10) RHD NLS - USE 4002234, 7399934	1	Countershaft	Mellanaxel	5
0280	12	89 57 581		11),-1988, TURBO RHD	1	Countershaft	Mellanaxel	5
0290	12	*40 02 242*		500),1989- TURBO RHD NLS - USE 4002234	1	Countershaft	Mellanaxel	5
0300	12	*89 67 549*		11),-1988 I RHD NLS - USE 4002234, 7399934	1	Countershaft	Mellanaxel	5
0310	12	40 02 234		500),1989- I RHD	1	Countershaft	Mellanaxel	5
0320	13	79 72 334		(8083958)	1	•Hexagon screw	•Sexkantsskruv	5
0330	14	79 68 415		(7965767)	1	•Lock nut	•Låsmutter	3
0340	15	80 29 985			1	•Washer	•Bricka	5
0350	16	89 56 252			1	•Bellows	•Bälg	5
0360	17	40 04 206		-1988	1	•Bushing	•Bussning	3
0370	17	40 01 400		1989-	1	•Bushing	•Bussning	3
0380	20	79 72 334			2	Hexagon screw	Sexkantsskruv	5
0390	21	79 68 415			2	Lock nut	Låsmutter	3
0400	22	79 74 371		-1987	4	Nut	Mutter	5
0410	22	79 79 602		1988-	4	Nut	Mutter	5
0420	23	73 98 852		1988-	1	Washer	Bricka	5
0430	24	89 55 809			1	Bracket	Hållare	6
0440	25	*79 61 675*		NLS - USE 9449752	2	Rivet	Nit	5
0450	26	89 56 211			1	Protecting casing	Skyddskåpa	6
0460	27	89 56 245			2	Seal	Tätning	5
0470	28	89 56 534			1	Bushing	Bussning	3
0480	29	79 71 294			4	Screw	Skruv	5
0490	30	89 67 572			1	Seal	Tätning	5
0500	31	95 86 900		AIR-BAG	1	Cable	Wire	5
0510	32	91 01 221		AIR-BAG	1	Adjusting nut	Justermutter	3
0520	33	95 87 171		AIR-BAG	1	Washer	Bricka	5
0530	34	95 86 918		AIR-BAG	1	Bracket	Fäste	5

10. Ch.-J1029486, -J2017445, -J8001631.
11. Ch. J1029487-, J2017446-, J8001632-.
13. Ch.-J1028916, -J2017138, -J8001833
14. Ch. J1028917-, J2017139-, J8001834-
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02


Steering device

4-C14

Countershaft Bracket

Styrinrättning

Mellanaxel Konsol

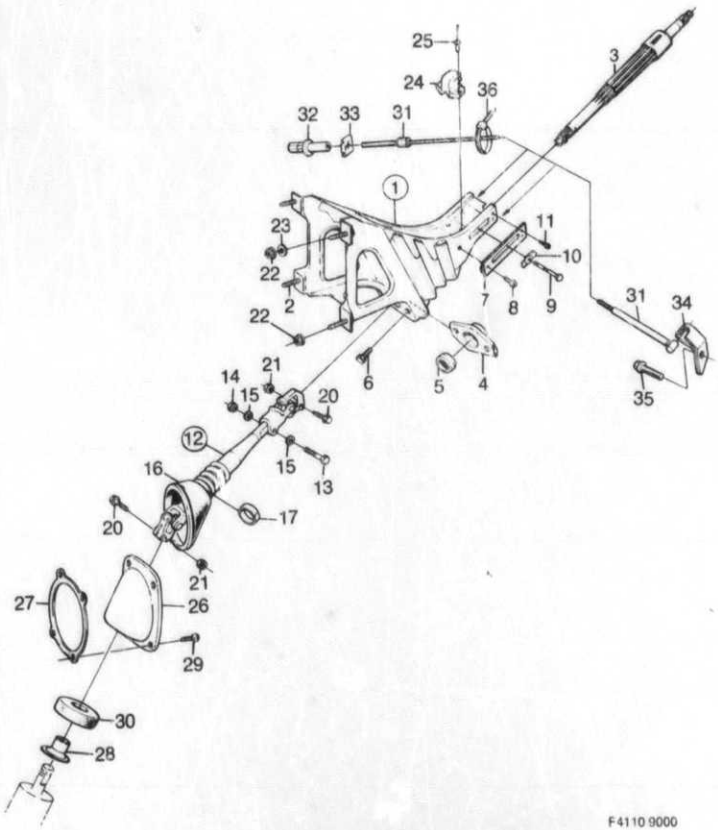

F4110 9000

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	35	79 75 113		AIR-BAG	1	Screw	Skruv	5
0550	36	79 71 864		AIR-BAG	1	Tensioning band	Spännband	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02


Steering device

4-C16

Power steering gear

Styrinrättning

Servostyrväxel

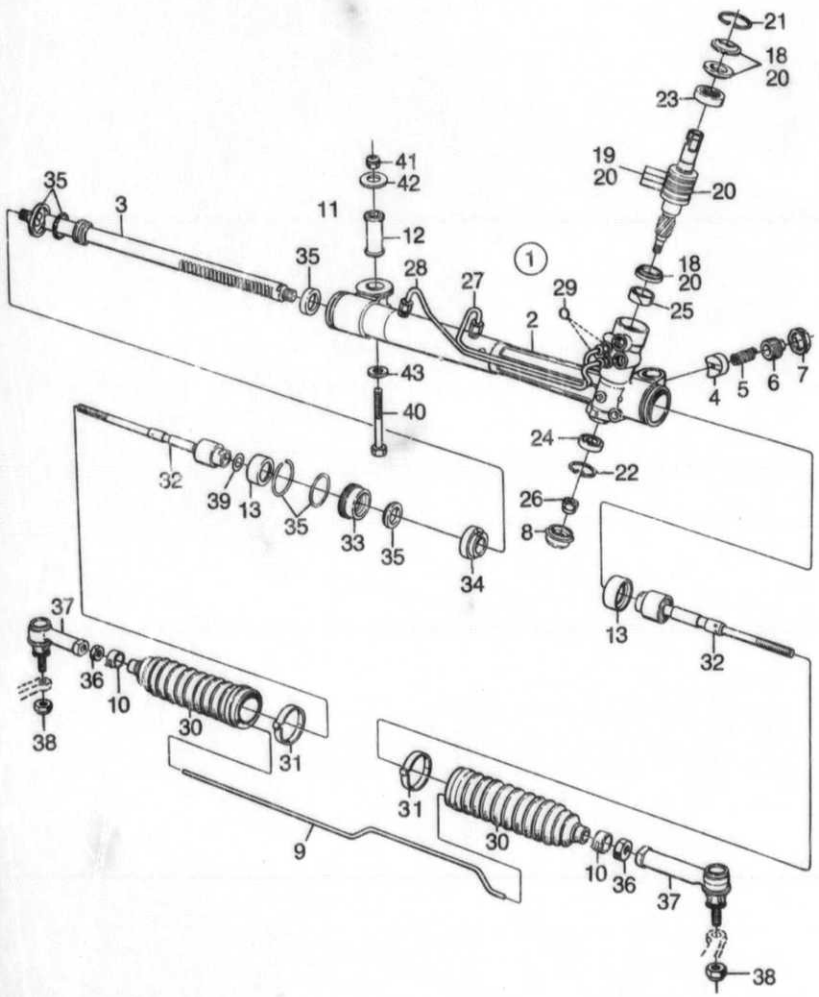

F4111 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	41 05 052		700), (8959595,8969560, 8971921)	1	Steering gear	Styrväxel	4
1	*89 93 529*		32) NLS - USE 8993669	1	Steering gear	Styrväxel	4
1	41 05 060		700), RHD (8960585, 8969586,8971939)	1	Steering gear	Styrväxel	4
2	*89 68 737*		1) NLS - USE 4004842	2	.Steering gear	.Styrväxel	4
3	89 55 601			1	..Rack	..Kuggstång	6
3	*89 60 536*		RHD NLS - USE 4105516	1	..Rack	..Kuggstång	6
4	*89 37 005*		NLS - USE 4199923	1	..Plunger	..Plunge	4
5	89 63 985			1	..Spring	..Fjäder	6
6	89 37 021			1	..Screw	..Skruv	5
7	89 37 039			1	..Lock nut	..Låsmutter	3
8	89 55 742			1	..Cap	..Kapsel	2
9	89 55 718			1	..Pipe	..Rör	4
10	89 37 161			2	..Clamp	..Klämma	5
11	89 93 511			1	..Rubber bushing kit	..Gummibussningssats	3
12	89 34 119			2	...Rubber bushing	...Gummibussning	3
13	89 36 684			2	..Ring	..Ring	4
18	41 04 493			X	..Sealing kit pinion	..Tätningssats pinjong	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 592	S	1)	1	...Seal	...Tätning	3
19	41 04 519			X	..Sealing kit pinion	..Tätningssats pinjong	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
20	41 04 535		LHD	X	..Repair kit pinion	..Reparationssats pinjong	4
	89 67 929	S	1)	1	...Pinion	...Pinjong	
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 592	S	1)	1	...Seal	...Tätning	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
25	89 36 619	S		1	...Bushing	...Bussning	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
20	41 04 550		RHD	X	..Repair kit pinion	..Reparationssets pinjong	4
	89 67 937	S	1)	1	...Pinion	...Pinjong	
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 592	S	1)	1	...Seal	...Tätning	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
25	89 36 619	S		1	...Bushing	...Bussning	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
21	89 36 908			1	..Lock ring	..Låsring	5
22	89 36 973			1	..Lock ring	..Låsring	5
23	89 36 932			1	..Needle bearing	..Nållager	6
24	89 36 965			1	..Ball bearing	..Kullager	6
25	89 36 619			1	..Bushing	..Bussning	3
26	41 04 162			1	..Lock nut	..Låsmutter	5
27	41 05 565		LHD	X	..Pipe set short	..Rörsats kort	4
	89 62 565	S	1)	1	...Pipe	...Rör	
29	41 04 014	S		1	...O-ring	...O-ring	3

1. Not as separate spare part. Ej som separat reservdel.
32. Only for cars that will be repaired in USA Endast för bilar som repareras i USA
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02


Steering device

4-C18

Power steering gear

Styrinrättning

Servostyrväxel

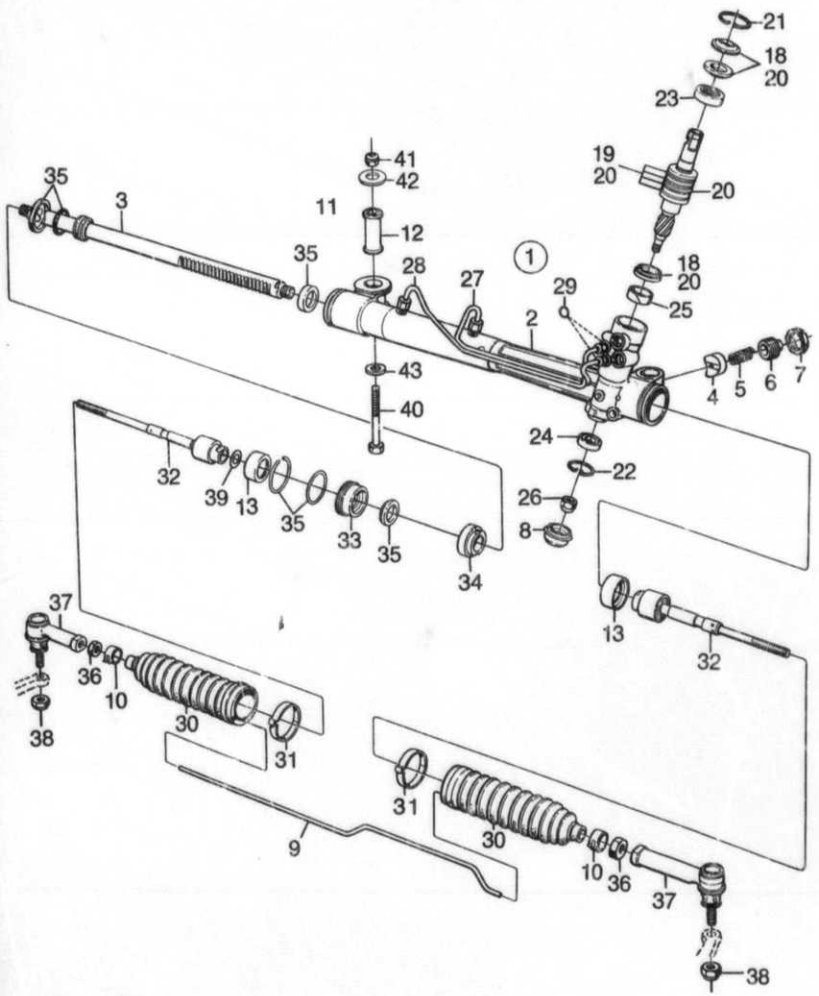

F4111 9000

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Beskrivning	S L
0610								
0620	27	41 05 581		RHD	X	..Pipe set short	..Rörsats kort	4
0630								
0640		89 64 090	S	1)	1	...Pipe	...Rör	
0650	29	41 04 014	S		1	...O-ring	...O-ring	3
0660								
0670	28	41 05 573		LHD	X	..Pipe set long	..Rörsats långt	4
0680								
0690		89 62 573		1)	1	...Pipe	...Rör	
0700	29	41 04 014	S		1	...O-ring	...O-ring	3
0710								
0720	28	41 05 599		RHD	X	..Pipe set long	..Rörsats långt	4
0730								
0740		89 64 082	S	1)	1	...Pipe	...Rör	
0750	29	41 04 014	S		1	...O-ring	...O-ring	3
0760								
0770	30	89 62 243		LH	X	..Bellows	..Bälg	3
0780		89 55 692		1)	1	...Bellows	...Bälg	
0790	31	89 61 310			1	...Clamp	...Klammer	5
0810								
0820	30	89 62 516		RH	X	..Bellows	..Bälg	3
0830		89 62 524		1)	1	...Bellows	...Bälg	
0840	31	89 61 310			1	...Clamp	...Klammer	5
0860								
0870	32	89 62 250			X	..Steering rod	..Styrstag	4
0880		89 55 650		1)	1	...Steering rod	...Styrstag	
0890	13	89 36 684			1	...Ring	...Ring	4
0900	31	89 61 310			1	...Clamp	...Klammer	5
0910	10	89 37 161			1	...Clamp	...Klämma	5
0920								
0930	33	89 55 619			1	..End plate	..Gavel	5
0940	34	89 55 635			1	..Bushing	..Bussning	5
0950								
0960	35	41 04 527			X	..Sealing kit rack	..Tätningssats kuggstång	3
0970								
0980		41 03 958		1)	1	...O-ring	...O-ring	3
0990		41 03 966		1)	1	...Seal	...Tätning	3
1000		41 03 974		1)	1	...Seal	...Tätning	3
1010		41 03 982		1)	1	...O-ring	...O-ring	3
1020		89 37 070		1)	1	...Piston ring	...Kolvring	5
1030		89 70 873		1)	1	...Piston ring	...Kolvring	5
1040		89 55 643		1)	1	...Lock ring	...Låsring	5
1050	31	89 61 310			2	...Clamp	...Klammer	5
1060								
1070	36	89 59 587			2	Nut	Mutter	5
1080	37	89 93 453		See page 6-025, 4-D02	2	Drag link end	Styrstagsända	2
1090	38	*80 73 546*	S	-1987 NLS - USE 8151482	2	.Lock nut	.Låsmutter	5
1100	38	81 51 482	S	1988-	2	.Lock nut	.Låsmutter	5
1110	39	89 46 360		11)	X	Spacer washer	Distansbricka	5
1120	40	89 65 956			2	Screw	Skruv	5
1140	41	81 51 482		(8073546)	2	Lock nut	Låsmutter	5
1150	42	89 34 259			2	Washer	Bricka	5
1160	43	80 73 116		1986-, RH	1	Washer	Bricka	5

1. Not as separate spare part. Ej som separat reservdel.
11. Ch. J1029487–, J2017446–, J8001632–.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX


Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

Steering device

4-C20 *Hydraulic pump*

Styrinrättning

Hydraulpump

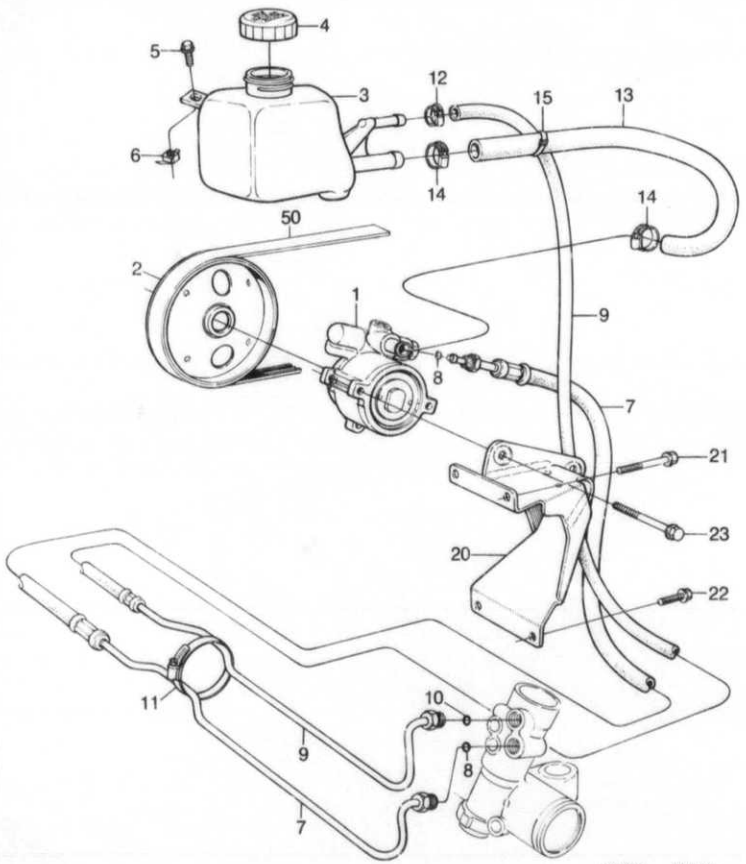

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*89 63 993*		1985 (8956203) NLS - USE 4105045	1	Hydraulic pump	Hydraulpump	3
0025	1	41 05 045		1986-1987 (8966541)	1	Hydraulic pump	Hydraulpump	3
0030	1	*89 72 770*		1988- NLS - USE 4105045	1	Hydraulic pump 80 A alternator	Hydraulpump 80 A generator	3
0035	1	*89 72 424*		500), 1989- NLS - USE 4105037	1	Hydraulic pump 115 A alternator	Hydraulpump 115 A generator	3
0040	2	*89 56 914*		19) NLS - USE 7599475	1	Pulley	Remskiva	3
0050	2	75 99 475		20)	1	Pulley	Remskiva	3
0060	3	*89 65 832*		(8957912) NLS - USE 4197406	1	Reservoir	Behållare	4
0080	4	*89 56 385*		NLS - USE 4197380	1	₁Cover	₁Lock	5
0100	5	*79 77 432*		NLS - USE 7978133	1	Screw	Skruv	5
0120	6	79 75 006			1	Nut	Mutter	5
0140	7	*89 59 033*		23) NLS - USE 8972416	1	Hose	Slang	4
0141	7	89 72 416		24)	1	Hose	Slang	4
0150	7	*89 63 308*		23) RHD NLS - USE 8972945	1	Hose	Slang	4
0151	7	89 72 945		24) RHD	1	Hose	Slang	4
0160	8	*89 37 500*		NLS - USE 4104048	2	₁O-ring	₁O-ring	3
0180	9	89 59 090			1	Hose	Slang	4
0190	9	89 63 357		RHD	1	Hose	Slang	4
0200	10	*89 37 500*		NLS - USE 4104048	1	₁O-ring	₁O-ring	3
0220	11	79 70 130			1	Hose clamp	Slangklamma	5
0230	11	79 70 122		RHD	1	Hose clamp	Slangklamma	5
0240	12	*79 63 507*		NLS - USE 7970049	1	Hose clamp	Slangklamma	5
0260	13	89 59 116			1	Hose	Slang	5
0280	14	79 63 531			2	Hose clamp	Slangklamma	5
0300	15	73 98 373			1	Clamp	Klammer	5
0360	20	75 50 361			1	Bracket	Konsol	6
0370	20	75 93 452			1	Bracket 115 A alternator	Konsol 115 A generator	6
0380	21	75 51 641			2	Screw	Skruv	5
0400	22	79 67 938			2	Screw	Skruv	5
0420	23	79 73 787			2	Screw	Skruv	5
0430	23	79 73 795			2	Screw 115 A alternator	Skruv 115 A generator	5
0440								
0635	50			See page 3A-009, 2-A10		Belt	Rem	
0640		*89 89 857*		See page 6-025, 4-D02	X	Gasket kit	Packningsats	4
0660				NLS - USE 4104766		hydraulic pump	hydraulpump	

19. CH.--K1018015, --K2010264, --K8000691
20. CH.K1018016--, K2010265--, K8000692--
23. Ch.--K1024651, --K2014666, --K8001181
24. Ch.K1024652--, K2014667--, K8001182 -
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

6 GROUP INDEX

Front wheel suspension	**4-C06**
Steering device	**4-C08**
Complete sets	**4-D02**

4-C22

Belt tensioner
Remspännare

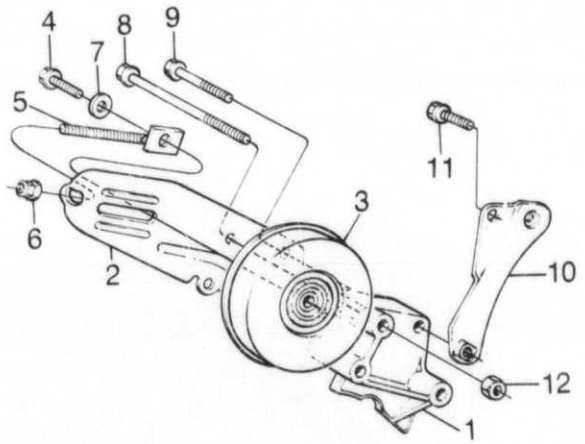

F0090 - 9000

0350	Pos	Part No/Art nr	V S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 51 245*		1985 NLS - USE 7576242	1	Base	Fot	6
0020	1	75 76 242		1986-	1	Base	Fot	6
0030	2	*93 82 003*		2,30) NLS - USE 7575871, 7575889	1	Tensioner	Spänndon	6
0040	2	75 75 871		3)	1	Tensioner	Spänndon	5
0050	3	*75 54 221*		4) NLS - USE 7575871, 7575889, 7598679, 7598634, 7971922, 8125213, 9166372	1	Tension pulley	Spännrulle	
0060	3	*75 79 840*		5,15) NLS - USE 7596679, 7598634, 8125213	1	Tension pulley	Spännrulle	3
0065	3	75 98 034		16)	1	Tension pulley	Spännrulle	3
0070	4	79 70 288		4)	1	Screw	Skruv	5
0080	4	79 72 334		5,15)	1	Hexagon screw	Sexkantsskruv	5
0085	4	*80 83 958*		16) NLS - USE 8125213	1	Screw	Skruv	5
0090	5	93 82 268		2)	1	Screw	Skruv	5
0100	5	75 75 889		3)	1	Screw	Skruv	5
0110	6	79 71 922			1	Nut	Mutter	3
0120	7	80 29 985		5)	1	Washer	Bricka	5
0130	8	93 86 533			3	Screw	Skruv	5
0140	9	79 72 292			1	Screw	Skruv	5
0150	10	93 86 210			1	Stay	Stag	3
0160	11	79 67 938			1	Screw	Skruv	5
0170	12	80 74 106		-1987	1	Nut	Mutter	5
0180	12	81 51 235		1988-	1	Nut	Mutter	5

2. Ch.--G1013752.
3. Ch.G1013753--.
4. Ch. --H1004065.
5. Ch. H1004066--, H8000036--
15. Ch.--J1028860, --J2017104, --J8001696.
16. Ch.J1028861--, J2017105--, J8001697--.
30. Superseded by 75 75 871 and 75 75 889. Ersatt av 75 75 871 och 75 75 889.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX


Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

Steering device

4-C24 Belt tensioner 115 A alternator

Styrinrättning

Remspännare 115 A generator

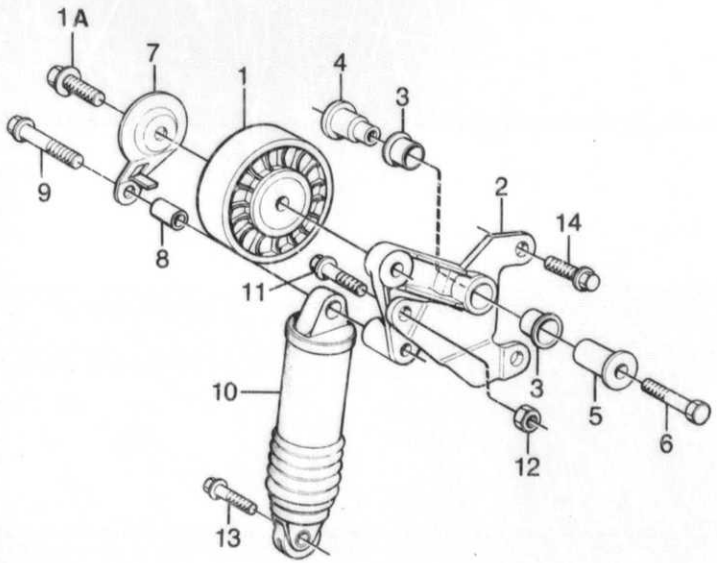

F0091 -- 9000

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	75 92 017			1	Tension pulley	Spännrulle	3
0030	1A	79 72 748			1	Screw	Skruv	5
0040	2	75 93 429			1	Tensioner	Spänndon	5
0050	3	75 99 806			2	.Bushing	.Bussning	4
0060	4	75 99 814			1	.Bearing	.Lagring	4
0070	5	75 99 822			1	.Bearing	.Lagring	4
0080	6	93 46 354			1	.Screw	.Skruv	5
0090	7	75 96 612			1	Stay	Stag	5
0100	8	*75 93 387*		NLS - USE 4283032	1	Bushing	Bussning	4
0105	8	42 83 032		ALTERNATIVE	1	Bushing	Bussning	4
0110	9	79 75 527			1	Screw	Skruv	5
0120	10	75 93 395			1	Spring unit	Fjäderenhet	5
0130	11	79 72 292			1	Screw	Skruv	5
0140	12	80 74 106			1	Nut	Mutter	5
0150	13	79 72 342			1	Screw	Skruv	5
0160	14			See page 6-019, 4-C20	2	Screw	Skruv	

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02


Complete sets

4-D02

Fore carriage
Steering device

Satser

Framvagn
Styrinrättning

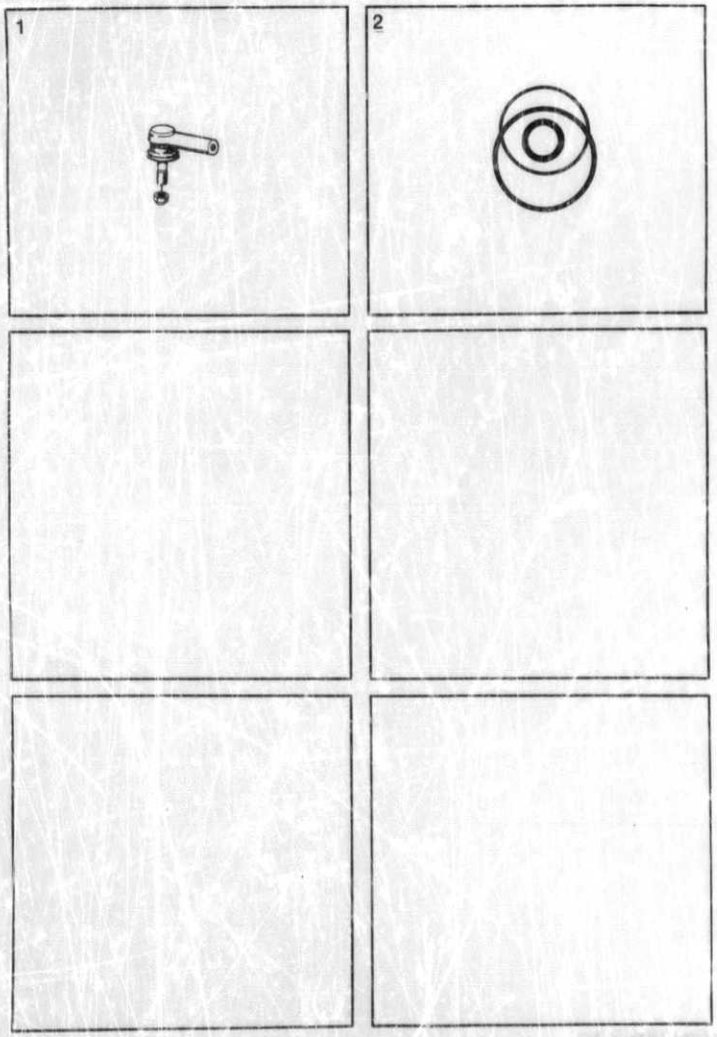

R 9079-9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 453			X	Drag link end	Styrstagsända	2
0020		89 57 839			1	. Drag link end	. Styrstagsända	2
0030		81 51 482			1	. Lock nut	. Låsmutter	5
0040								
0050	2	*89 89 857*		NLS - USE 4104766	X	Gasket kit hydraulic pump	Packningsats hydraulpump	4
0060								
0070				1)	1	. Gasket	. Packning	
0080				1)	1	. Gasket	. Packning	
0090				1)	1	. Gasket	. Packning	

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D02

4-E02



Suspension, Wheels
Fjädringssystem, Hjul
Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0120
0130
0140
0160
0170
0175

TABLE OF CONTENTS

Front suspension	7 : 5	4-E06
Wheel	7 : 7	4-E08
Rear suspension	7 : 9	4-E10
Rear axle	7 : 11	4-E12
Complete sets		
Suspension system, wheels	7 : 13	4-E14

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

4-E03

0042
0020
0040
0060
0240
0260
0280
0290
0300
0320
0330
0335
0660
0680
0700
0720
0740
0760
0770
0780
0800
0810
0820

INNEHÅLLSFÖRTECKNING

Främre fjädring	7 : 5	4-E06
Hjul	7 : 7	4-E08
Bakre fjädring	7 : 9	4-E10
Bakaxel	7 : 11	4-E12
Satser		
Fjädringssystem, hjul	7 : 13	4-E14

SUMARIO

Suspension Del	7 : 5	4-E06
Ruedas	7 : 7	4-E08
Suspension Tras	7 : 9	4-E10
Eje Tras	7 : 11	4-E12
Juegos completos		
Suspensin ruedas	7 : 13	4-E14


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

4-E06 Front suspension — Främre fjädring

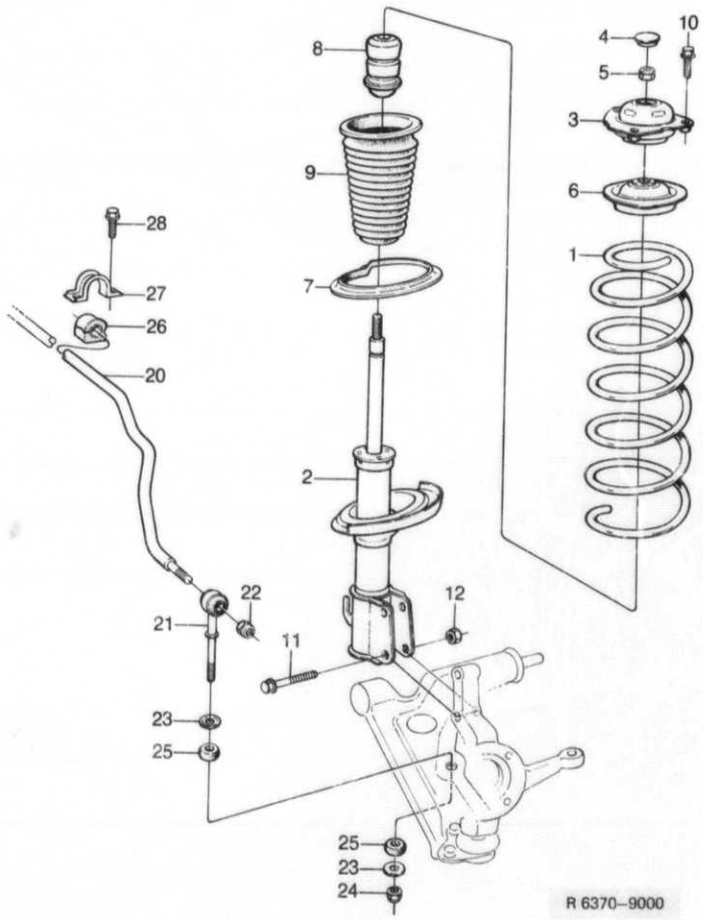

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0100								
0010	1	89 71 822		TURBO, (8962847)	2	Spring	Fjäder	5
0020						brown or purple ALT 1 red/yellow ALT 2	brun eller lila ALT 1 röd/gul ALT 2	
0030								
0040	1	89 71 806		20) (8961377)	2	Spring	Fjäder	5
0050						orange or pink ALT 1 red/blue ALT 2	orange eller rosa ALT 1 röd/blå ALT 2	
0060								
0070	1	89 71 814		15) I (8962839)	2	Spring	Fjäder	5
0080						light blue or beige ALT 1 red/red ALT 2	ljusblå eller beige ALT 1 röd/röd ALT 2	
0090								
0100	1	*89 71 848*		16) (8961393) NLS - USE 4193413	2	Spring	Fjäder	5
0110						green or grey ALT 1 red/green ALT 2	grön eller grå ALT 1 röd/grön ALT 2	
0120								
0130	1	89 71 830		17) (8961385)	2	Spring	Fjäder	5
0140						dark blue or white ALT 1 red/white ALT 2	mörkblå eller vit ALT 1 röd/vit ALT 2	
0150								
0160	2	89 54 026		4)	2	Spring strut	Fjäderben	6
0170	2	*89 67 861*		5) NLS - USE 4199881	2	Spring strut	Fjäderben	6
0180	2	*89 71 780*		500),1989- I NLS - USE 4199907	2	Spring strut	Fjäderben	6
0190	2	*89 71 780*		4D NLS - USE 4199907	2	Spring strut	Fjäderben	6
0200	3	*89 63 282*		NLS - USE 4106969	2	Support bearing	Stödlager	6
0210	4	89 64 207			2	Protecting casing	Skyddskåpa	5
0220	5	*79 73 654*		-1987 NLS - USE 7979537	2	Lock nut	Låsmutter	3
0230	5	79 79 537		1988-	2	Lock nut	Låsmutter	3
0240	6	89 54 067		4)	2	Spring seat	Fjädersäte	6
0250	6	89 68 067		5)	2	Spring seat	Fjädersäte	6
0260	7	89 57 102			2	Spring seat	Fjädersäte	6
0270	8	89 68 521		(8958522)	2	Buffer	Buffert	5
0280	9	89 58 084			2	Bellows	Bälg	6
0290	10	*89 63 340*		NLS - USE 7984511	6	Screw	Skruv	5
0300	11	*89 62 813*		-1986 NLS - USE 8966129	4	Screw	Skruv	5
0310	11	89 66 129		1987-	4	Screw	Skruv	5
0320	12	79 71 765			4	Nut	Mutter	5
0330	20	89 62 144			1	Anti-roll bar	Krängningshämmare	6
0340	21	89 58 944			2	Link	Länk	6
0350	22	79 79 578		(7975303)	2	Nut	Mutter	3
0360	23	89 60 171			4	Washer	Bricka	5
0370	24	*80 73 538*		-1987 NLS - USE 7977812	2	Lock nut	Låsmutter	5
0380	24	*81 51 474*		1988- NLS - USE 7977812	2	Lock nut	Låsmutter	5
0390	25	89 53 986			4	Block	Block	5
0400	26	89 65 378		(8953994)	2	Bushing	Bussning	
0410	27	89 54 000			2	Cap	Överfall	5
0420	28	73 99 330		(7975212)	4	Screw	Skruv	5

4. Ch.–H1015469, –H8000555
5. Ch.H1015470–, H8000556–
15. Cars without AC and sun roof. Bilar utan AC och soltak.
16. A and AC A och AC
17. A without AC A utan AC
20. Cars with AC Bilar med AC
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

4-E08 *Wheel* *Hjul*

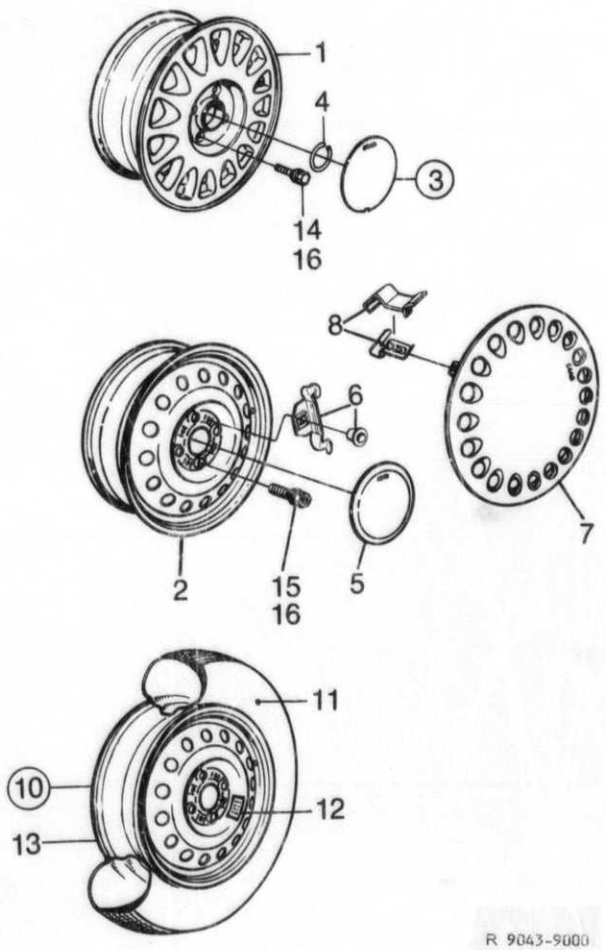

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 58 910		6 X 15", 40/105 122 907	4	Wheel	Hjul	4
0020	1	89 65 212		1986- ONLY JP, 6 X 15" 40/105 122 907	4	Wheel	Hjul	4
0030	2	*89 60 254*		3) 5,5 X 15" NLS - USE 8961492	4	Wheel steel-wheel	Hjul stålhjul	4
0040	2	*89 60 288*		3) 6 X 15" NLS - USE 8961526	4	Wheel steel-wheel	Hjul stålhjul	4
0050	2	*89 62 383*		1986- 6 X 15" NLS - USE 8962391	4	Wheel steel-wheel,black	Hjul stålhjul,svart	4
0060	3	89 87 620		40/105 123 400	4	Wheel cap	Hjulkapsel	2
0070	4	89 87 802			4	.Spring ring	.Fjäderring	2
0080	5	89 87 596			4	Wheel cap	Hjulkapsel	2
0090	6	91 01 510		(9100546,9100553)	8	Clamp kit	Klammersats	2
0105	7	89 72 812		(8987604)	4	Wheel cap	Hjulkapsel	2
0110	8	91 01 502		1986-,13)	6	.Clamp kit	.Klammersats	2
0111				See page 7-013, 4-E14				
0115	8	89 73 422		14)	1	.Clamp kit	.Klammersats	2
0116				See page 7-013, 4-E14				
0120	10	*41 06 373*		(8964199,8969958) NLS - USE 4106365	1	Wheel	Hjul	5
0142	10	*40 00 816*		1988- NLS - USE 4194999	1	Wheel	Hjul	5
0160	11	91 03 565		(8990160)	1	.Tyre	.Däck	6
0171	11	91 05 461		1988-	1	.Tyre	.Däck	6
0180	12	89 90 632		-1987	1	.Label	.Etikett	5
0190	12	91 03 680		1988-	1	.Label	.Etikett	5
0200	13	*89 62 367*		ME NLS - USE 8962375	1	Wheel	Hjul	4
0210	14	*89 58 043*		-1987,18) L=50MM NLS - USE 8965307	16	Wheel screw	Hjulskruv	2
0210								
0240	15	89 62 094		-1987,19) L=35MM	16	Wheel screw	Hjulskruv	2
0260	16	89 65 907		1988-	16	Wheel screw	Hjulskruv	2

3. Alternative for snow-tire Alternativ för snödäck
13. CH. -K1007941, -K2003624, -K8000140, For SE 1988B: -J1050720, -J2032129, -J8005395
14. CH. K1007942-, K2003625-, K8000141-, For SE 1988B: J1050721-, J2032130-, J8005396-
18. For aluminium wheel För aluminiumhjul
19. For steel wheel För stålhjul


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

4-E10 Rear suspension — Bakre fjädring

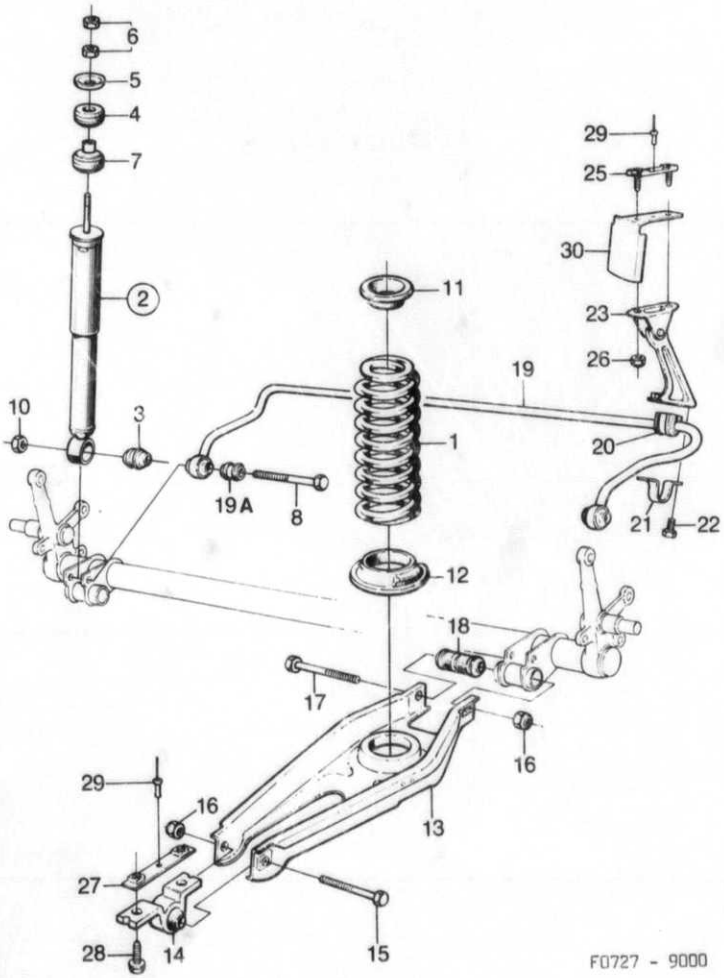

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 60 932			2	Spring	Fjäder	5
0020	1	89 60 940		20)	2	Spring	Fjäder	5
0030	1	89 69 966		12,500) 1989-	2	Spring	Fjäder	5
0040	2	89 62 003		4)	2	Shock absorber kit	Stötdämparsats	1
0050				See page 7-013, 4-E14				
0060	2	89 68 570		5)	2	Shock absorber kit	Stötdämparsats	1
0070				See page 7-013, 4-E14				
0075	2	*89 72 127*		500),1989- I	2	Shock absorber kit	Stötdämparsats	1
0076				See page 7-013, 4-E14				
0076				NLS - USE 4001004				
0080	2	*40 01 434*		12,500),1989-	2	Shock absorber kit	Stötdämparsats	1
0090				See page 7-013, 4-E14				
0090				NLS - USE 8993750				
0100	2	*89 72 127*		1988, 4D	2	Shock absorber kit	Stötdämparsats	1
0110				See page 7-013, 4-E14				
0110				NLS - USE 4001004				
0120	2	40 01 004		500),1989-, 4D	2	Shock absorber kit	Stötdämparsats	1
0130				See page 7-013, 4-E14				
0140	2	*40 01 426*		12,500),1989-, 4D	2	Shock absorber kit	Stötdämparsats	1
0150				See page 7-013, 4-E14				
0150				NLS - USE 8993750				
0160	3	89 52 749	S		2	..Bearing bushing	..Lagerbussning	1
0165	3	89 63 944	S	12)	2	..Bearing bushing	..Lagerbussning	1
0170	4	89 52 335	S		2	.Rubber bushing	.Gummibussning	1
0180	5	89 59 934	S		2	.Washer	.Bricka	5
0190	6	*83 15 558*	S	-1987 NLS - USE 7979511	4	.Nut	.Mutter	5
0200	6	79 79 511	S	1988-	4	.Nut	.Mutter	5
0210	7	89 52 327	S		2	.Rubber bushing	.Gummibussning	1
0220	8	*80 84 410*		-1988 NLS - USE 7979594	2	Screw	Skruv	5
0230	8	*79 79 396*		500), 1989- NLS - USE 7979594	2	Screw	Skruv	5
0230								
0240	10	79 71 765			2	Nut	Mutter	5
0250	11	89 52 285			2	Spring insulator	Fjäderisolator	4
0260	12	89 50 438			2	Spring insulator	Fjäderisolator	4
0280	13	89 70 782		(8957037)	2	Spring link	Fjäderlänk	4
0290	14	89 57 714			2	Bearing anchorage	Lagerfäste	5
0300	15	*80 84 212*		-1988 NLS - USE 7982028	2	Screw	Skruv	5
0310	15	79 79 214		500),1989-	2	Screw	Skruv	5
0320	16	*80 73 538*		-1987 NLS - USE 7977812	8	Lock nut	Låsmutter	5
0330	16	*81 51 474*		1988- NLS - USE 7977812	8	Lock nut	Låsmutter	5
0350	17	79 79 248		(8084246)	2	Screw	Skruv	5
0360	18	89 51 063			2	Bushing	Bussning	3
0370	19	89 61 765		5D	1	Anti-roll bar	Krängningshämmare	6
0375	19	89 71 368		4D	1	Anti-roll bar	Krängningshämmare	6
0378	19A	89 62 011			2	.Bearing bushing	.Lagerbussning	1
0380	20	89 52 129			2	Rubber bushing	Gummibussning	3
0390	21	89 52 137			2	Brace	Bygel	3
0400	22	80 82 927			4	Screw	Skruv	5
0410	23	89 65 105		LH	1	Link	Länk	4
0420	23	89 65 113		RH	1	Link	Länk	4
0430	25	89 61 625			2	Attaching plate	Fästplatta	6
0440	26	79 71 922			4	Nut	Mutter	3
0450	27	89 58 498			2	Nut piece	Mutterstycke	6
0460	28	79 76 905			4	Screw	Skruv	5
0470	29	79 61 642			2	Rivet	Nit	5
0480	30	89 69 214		RH	1	Protecting plate	Skyddsplåt	6

4. Ch.–H1015469, –H8000555
5. Ch.H1015470–, H8000556–
12. Cars with automatic level control Bilar med automatisk nivåkontroll
20. Cars with AC Bilar med AC
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

4-E12 Rear axle Bakaxel

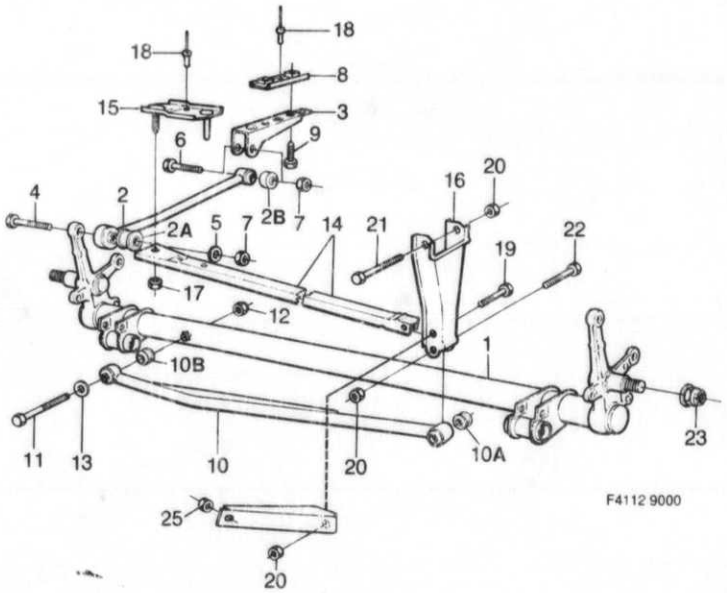

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 57 706		(8951907)	1	Rear axle	Bakaxel	4
0030	1	*89 63 050*		ABS NLS - USE 8957706	1	Rear axle	Bakaxel	4
0040	2	89 52 046			2	Stay	Stag	4
0050	2A	89 55 759			1	.Bushing	.Bussning	3
0055	2B	89 56 468			1	.Bushing	.Bussning	3
0060	3	89 51 915			2	Bracket	Fäste	6
0080	4	80 84 204		-1988	2	Screw	Skruv	5
0090	4	79 79 586		500),1989- (7979487)	2	Screw	Skruv	5
0100	5	89 52 277			2	Washer	Bricka	5
0120	6	*80 84 162*		-1988 NLS - USE 7982002	2	Screw	Skruv	5
0130	6	79 79 172		500),1989-	2	Screw	Skruv	5
0140	7	*80 73 538*		-1987 NLS - USE 7977812	4	Lock nut	Låsmutter	5
0150	7	*81 51 474*		1988- NLS - USE 7977812	4	Lock nut	Låsmutter	5
0160	8	89 58 514			2	Nut piece	Mutterstycke	6
0180	9	79 76 897			4	Screw	Skruv	5
0200	10	89 57 722		10)	1	Stay	Stag	5
0210	10	*89 73 000*		11) NLS - USE 8957722	1	Stay	Stag	5
0215	10A	89 72 648			1	.Bushing	.Bussning	3
0217	10B	89 72 655			1	.Bushing	.Bussning	3
0220	11	*80 84 436*		-1988 NLS - USE 7982069	1	Screw	Skruv	5
0230	11	79 79 412		500),1989-	1	Screw	Skruv	5
0250	12	81 51 482		(8073546)	1	Lock nut	Låsmutter	5
0260	13	79 16 521			1	Washer	Bricka	5
0290	14	89 68 471		(8958589)	1	Stay	Stag	4
0300	15	89 58 746			1	Washer	Bricka	6
0320	16	89 58 613			1	Bracket	Fäste	6
0340	17	*80 73 546*		-1987 NLS - USE 8151482	1	Lock nut	Låsmutter	5
0350	17	81 51 482		1988-	1	Lock nut	Låsmutter	5
0360	18	79 61 642			1	Rivet	Nit	5
0380	19	*79 75 097*		-1987, (7975089) NLS - USE 7982085	1	Screw	Skruv	5
0390	19	79 78 695		1988-	1	Screw	Skruv	5
0400	20	*80 73 538*		-1987 NLS - USE 7977812	3	Lock nut	Låsmutter	5
0410	20	*81 51 474*		1988- NLS - USE 7977812	3	Lock nut	Låsmutter	5
0420	21	*79 75 105*		-1987 NLS - USE 7982093	1	Screw	Skruv	5
0430	21	*79 78 703*		1988- NLS - USE 7982093	1	Screw	Skruv	5
0440	22	*79 75 097*		-1987 NLS - USE 7982085	1	Screw	Skruv	5
0450	22	79 78 695		1988-	1	Screw	Skruv	5
0460	23	89 65 360		(8964710)	2	Lock nut	Låsmutter	3
0470	24	89 68 505		11)	1	Bracket	Fäste	6
0480	25	79 71 922		11)	1	Nut	Mutter	3


10. Ch.–J1016108. –J2008895. –J8001014.
11. Ch.J1016109–. J2008896–. J8001015–.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

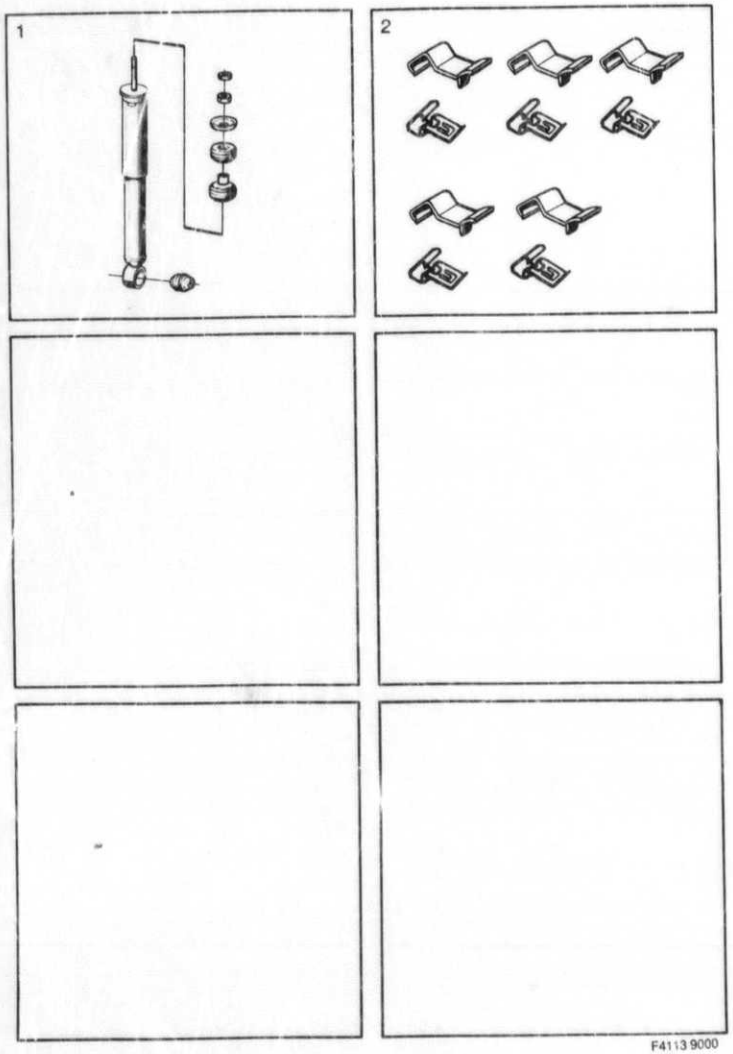

F4113 9000

1000	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 62 003		4)	X	Shock absorber kit	Stötdämparsats	1
0030		89 64 272		1)	1	.Shock absorber	.Stötdämpare	6
0050		89 52 327			1	.Rubber bushing	.Gummibussning	1
0060		89 52 335			1	.Rubber bushing	.Gummibussning	1
0070		89 59 934			1	.Washer	.Bricka	5
0080		79 79 511			2	.Nut	.Mutter	5
0090								
0100	1	89 68 570		5)	X	Shock absorber kit	Stötdämparsats	1
0120		*89 68 513*		1) NLS	1	.Shock absorber	.Stötdämpare	6
0140		89 52 327			1	.Rubber bushing	.Gummibussning	1
0150		89 52 335			1	.Rubber bushing	.Gummibussning	1
0160		89 59 934			1	.Washer	.Bricka	5
0170		79 79 511			2	.Nut	.Mutter	5
0180								
0181	1	*89 72 127*		500),1989- I NLS - USE 4001004	X	Shock absorber kit	Stötdämparsats	1
0181								
0183		89 72 028		1)	1	.Shock absorber	.Stötdämpare	6
0185		89 52 327			1	.Rubber bushing	.Gummibussning	1
0186		89 52 335			1	.Rubber bushing	.Gummibussning	1
0187		89 59 934			1	.Washer	.Bricka	5
0188		79 79 511			2	.Nut	.Mutter	5
0189								
0190	1	*40 01 434*		12,500),1989- NLS - USE 8993750	X	Shock absorber kit	Stötdämparsats	1
0190								
0210		*89 63 415*		1) NLS	1	.Shock absorber	.Stötdämpare	6
0230		89 52 327			1	.Rubber bushing	.Gummibussning	1
0240		89 52 335			1	.Rubber bushing	.Gummibussning	1
0250		89 59 934			1	.Washer	.Bricka	5
0260		79 79 511			2	.Nut	.Mutter	5
0270								
0280	1	*89 72 127*		1988, 4D NLS - USE 4001004	X	Shock absorber kit	Stötdämparsats	1
0280								
0300		89 72 028		1)	1	.Shock absorber	.Stötdämpare	6
0320		89 52 327			1	.Rubber bushing	.Gummibussning	1
0330		89 52 335			1	.Rubber bushing	.Gummibussning	1
0340		89 59 934			1	.Washer	.Bricka	5
0350		79 79 511			2	.Nut	.Mutter	5
0360								
0370	1	40 01 004		500),1989- 4D	X	Shock absorber kit	Stötdämparsats	1
0390		40 00 998		1)	1	.Shock absorber	.Stötdämpare	6
0410		89 52 327			1	.Rubber bushing	.Gummibussning	1
0420		89 52 335			1	.Rubber bushing	.Gummibussning	1
0430		89 59 934			1	.Washer	.Bricka	5
0440		79 79 511			2	.Nut	.Mutter	5
0450								
0460	1	*40 01 426*		12,500),1989- 4D NLS - USE 8993750	X	Shock absorber kit	Stötdämparsats	1
0480								
0480		*89 71 962*		1) NLS - USE 4193249	1	.Shock absorber	.Stötdämpare	6
0500		89 52 327			1	.Rubber bushing	.Gummibussning	1
0510		89 52 335			1	.Rubber bushing	.Gummibussning	1
0520		89 59 934			1	.Washer	.Bricka	5
0530		79 79 511			2	.Nut	.Mutter	5
0540								
0550	2	89 73 422			X	Clamp kit	Klammersats	2
0560		89 72 846			5	.Clip	.Clips	
0570		89 72 853			5	.Plastic cover	.Plastskydd	

1. Not as separate spare part. Ej som separat reservdel.
4. Ch.--H1015469, --H8000355
5. Ch.H1015470--, H8000556--
12. Cars with automatic level control Bilar med automatisk nivåkontroll
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

7 GROUP INDEX

Front suspension	4-E06
Wheel	4-E08
Rear suspension	4-E10
Rear axle	4-E12
Complete sets	4-E14

8A

Body, external
Kaross, utvändig
Carrocería, exterior

TABLE OF CONTENTS

Main body			
Front- and center floor		8A : 5	4-F06
Rear floor		8A : 7	4-F08
Roof		8A : 11	4-F12
Sun roof, electrically operated		8A : 13	4-F14
Cowl plate		8A : 19	4-F20
Front wheel housings		8A : 23	4-F24
Rear wheel housings		8A : 25	4-G02
Valances		8A : 27	4-G04
Valances, 4D		8A : 29	4-G06
Door frame		8A : 31	4-G08
Plugs etc		8A : 33	4-G10
Hood, front, fenders			
Hood, hood hinges and hood lock		8A : 35	4-G12
Front member, grille		8A : 39	4-G16
Front fenders		8A : 41	4-G18
Doors, trunk lid			
Front doors, hinges, window regulators etc		8A : 45	4-G22
Rear doors, hinges, window regulators etc		8A : 49	4-H02
Door lock, front door		8A : 53	4-H06
Door lock, rear door		8A : 57	4-H10
Trunk door, hinges, lock		8A : 61	4-H14
Trunk lid, hinges, lock, 4D		8A : 65	4-H18
Outside handle		8A : 69	4-H22
Lock- and lock cylinder sets		8A : 71	4-H24
External details, glass, sealings			
Emblem		8A : 73	4-I02
Mouldings etc		8A : 75	4-I04
Mouldings etc, 4D		8A : 77	4-I06
Spoiler		8A : 79	4-I08
External mirror		8A : 83	4-I12
Windshield, rear window		8A : 91	4-I20
Doors and side windows		8A : 95	4-I24
Mud guards		8A : 99	4-J04
Outer sealings		8A : 101	4-J06
Bumpers and touch-up paint			
Bumper, front		8A : 107	4-J12
Bumper, front, 4D		8A : 109	4-J14
Bumper, rear		8A : 111	4-J16
Bumper, rear, 4D		8A : 113	4-J18
Touch-up paint, 1-can		8A : 115	4-J20
Touch-up paint, 2-can		8A : 117	4-J22
Touch-up paint, two-coat type		8A : 119	4-J24
Touch-up paint, two-coat type, Pearl		8A : 121	4-K02
Touch-up paint, other paint		8A : 123	4-K04
Complete sets			
Car body, external		8A : 125	4-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

INNEHÅLLSFÖRTECKNING

Karosseristomme		
Främre och mittre golv	8A : 5	4-F06
Bakre golv	8A : 7	4-F08
Tak	8A : 11	4-F12
Soltak, el-manövrerat	8A : 13	4-F14
Torpedplåt	8A : 19	4-F20
Hjulhus, främre	8A : 23	4-F24
Hjulhus, bakre	8A : 25	4-G02
Sidoplåtar	8A : 27	4-G04
Sidoplåtar, 4D	8A : 29	4-G06
Dörram	8A : 31	4-G08
Pluggar etc	8A : 33	4-G10
Motorhuv, front, skärmar		
Motorhuv, huvgångjärn och huvlås	8A : 35	4-G12
Frontbalk, grill	8A : 39	4-G16
Framskärmar	8A : 41	4-G18
Dörrar, bagagerumslucka		
Framdörrar, gångjärn, fönsterhissar etc	8A : 45	4-G22
Bakdörrar, gångjärn, fönsterhissar etc	8A : 49	4-H02
Dörrlås, framdörr	8A : 53	4-H06
Dörrlås, bakdörr	8A : 57	4-H10
Bagagerumsdörr, gångjärn, lås	8A : 61	4-H14
Bagagelucka , gångjärn, lås, 4D	8A : 65	4-H18
Yttre handtag	8A : 69	4-H22
Lås- och låscylindersatser	8A : 71	4-H24
Utvändiga detaljer. glas. tätningslister		
Emblem	8A : 73	4-I02
Dekor etc	8A : 75	4-I04
Dekor etc, 4D	8A : 77	4-I06
Spoiler	8A : 79	4-I08
Utvändiga backspeglar	8A : 83	4-I12
Vind- och bakruta	8A : 91	4-I20
Dörr- och sidorutor	8A : 95	4-I24
Stänkskydd	8A : 99	4-J04
Övriga tätningslister	8A : 101	4-J06
Stötfångare och bättringsfärg		
Stötfångare, främre	8A : 107	4-J12
Stötfångare, främre, 4D	8A : 109	4-J14
Stötfångare, bakre	8A : 111	4-J16
Stötfångare, bakre, 4D	8A : 113	4-J18
Bättringsfärg, 1-komponent	8A : 115	4-J20
Bättringsfärg, 2-komponent	8A : 117	4-J22
Bättringsfärg, tvåskiktstyp	8A : 119	4-J24
Bättringsfärg, tvåskiktstyp, Pärlemor	8A : 121	4-K02
Bättringsfärg, övrig färg	8A : 123	4-K04
Satser:		
Kaross, utvändig	8A : 125	4-K06

SUMARIO


Cuerpo de la carroceria		
Piso del. y tras.	8A : 5	4-F06
Piso tras.	8A : 7	4-F08
Techo	8A : 11	4-F12
Techo corredizo, maniobra electrica	8A : 13	4-F14
Placa torpedo	8A : 19	4-F20
Paso rueda, Del	8A : 23	4-F24
Huercos de rueda Tras	8A : 25	4-G02
Placas laterales	8A : 27	4-G04
Placas laterales, 4D	8A : 29	4-G06
Bastidor de puertas	8A : 31	4-G08
Tapones etc	8A : 33	4-G10
Capot. plancha frontal, guardabarros		
Capot, bisagras de capot y cerradura de capot	8A : 35	4-G12
Viga del, parilla	8A : 39	4-G16
Guardabarros del	8A : 41	4-G18
Puertas, tapa de cofre		
Porta delantera, bisagras, levantcristales, etc	8A : 45	4-G22
Porta trasera, bisagras, levantcristales, etc	8A : 49	4-H02
Cerraduras de puerta, Del	8A : 53	4-H06
Cerraduras de puerta, Tras	8A : 57	4-H10
Puerta trasera, bisagras, cerradura	8A : 61	4-H14
Tapa del maletero, bisagras, cerradura	8A : 65	4-H18
Empunaduras exteriores	8A : 69	4-H22
Cerraduras y cilindros de cerradura	8A : 71	4-H24
Detalles exteriores, vidrios, juntas		
Emblemas	8A : 73	4-I02
Embellecedores	8A : 75	4-I04
Embellecedores, 4D	8A : 77	4-I06
Espoilers	8A : 79	4-I08
Espejos retrovisores exteriores	8A : 83	4-I12
Parabrisas y luna trasera	8A : 91	4-I20
Ventanilla de puerta y lateral	8A : 95	4-I24
Faldones	8A : 99	4-J04
Otras juntas	8A : 101	4-J06
Parachoques y pintura de retoque		
Parachoques, Del	8A : 107	4-J12
Parachoques, Del, 4D	8A : 109	4-J14
Parachoques, Tras	8A : 111	4-J16
Parachoques, Tras, 4D	8A : 113	4-J18
Pintura de retoque, tipo 1-componentes	8A : 115	4-J20
Pintura de retoque, tipo 2-componentes	8A : 117	4-J22
Pintura de retoque, tipo de dos capas	8A : 119	4-J24
Pintura de retoque, tipo de dos capas, Nacar	8A : 121	4-K02
Pintura de retoque, otro pintura	8A : 123	4-K04
Juegos completos		
Carosseria, exterior	8A : 125	4-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

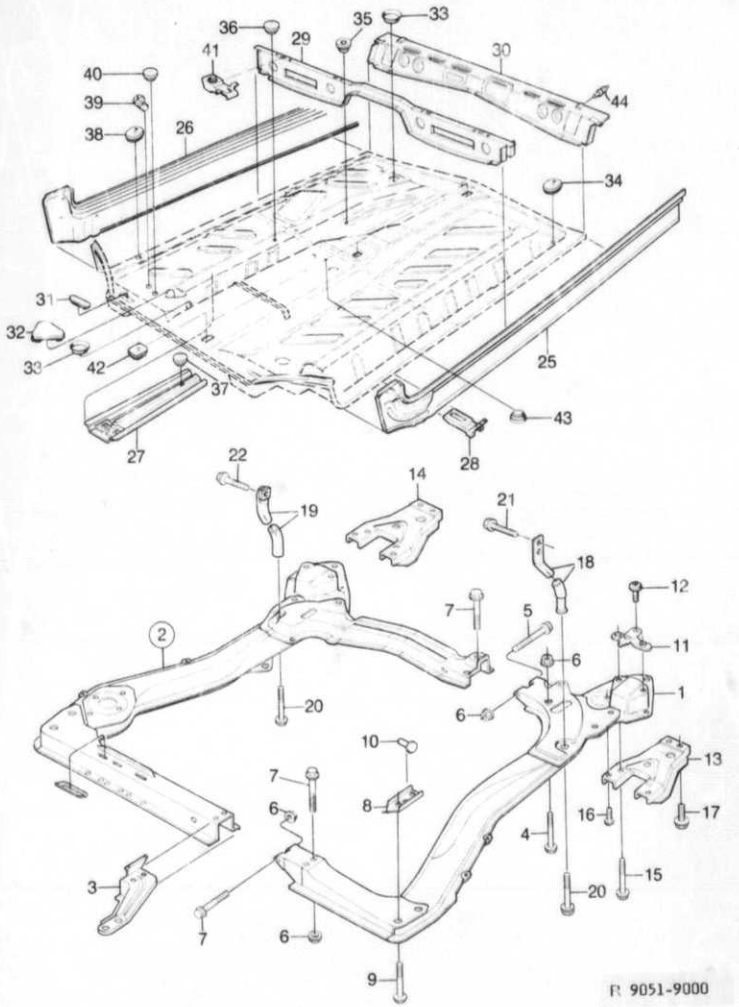

Car body

4-F06

Front and centre floor

Karosskrov

Främre och mittre golv

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020		*92 65 745*		NLS	1	Body	Kaross	6
0060	1	*89 54 935*		LH NLS - USE 4426227	1	Frame	Ram	5
0080	2	89 54 943		RH	1	Frame	Ram	5
0100	3	89 61 948			1	Bracket	Konsol	5
0120	4	79 73 852			2	Screw	Skruv	5
0140	5	*79 72 136*		NLS - USE 7983158	1	Screw	Skruv	5
0160	6	79 69 306			5	Lock nut	Låsmutter	5
0180	7	79 73 571			2	Screw	Skruv	5
0200	8	89 61 070		4)	2	Bracket	Hållare	5
0220	9	79 76 913			4	Screw	Skruv	5
0240	10	89 61 997			4	Plug	Plugg	5
0260	11	89 61 054		5)	2	Bracket	Hållare	5
0280	12	89 66 087		(8961088)	2	Screw	Skruv	5
0300	13	89 60 247		LH	1	Reinforcement	Förstärkning	5
0320	14	89 60 122		RH	1	Reinforcement	Förstärkning	5
0340	15	79 76 921			4	Screw	Skruv	5
0360	16	79 23 014		(8426199)	4	Screw	Skruv	5
0380	17	92 92 699			4	Screw	Skruv	5
0400	18	*89 61 344*		LH NLS - USE 4103412, 7982564	1	Stanchion	Stötta	6
0400								
0420	19	89 61 237		RH	1	Stanchion	Stötta	6
0440	20	79 74 777			2	Screw	Skruv	5
0460	21	79 73 779			2	Screw	Skruv	5
0480	22	79 69 298			1	Screw	Skruv	5
0520	25	*92 66 172*		LH NLS - USE 4100418	1	Sill	Tröskel	6
0540	26	*92 66 164*		RH NLS - USE 4293767	1	Sill	Tröskel	6
0560	27	92 66 123		4)	1	Beam	Balk	4
0580	28	92 66 156		4) LH	1	Jack support	Domkraftstöd	6
0620	28	92 66 149		4) RH	1	Jack support	Domkraftstöd	6
0660	29	92 66 131		4)	1	Beam	Balk	6
0680	30	92 66 180		5)	1	Beam	Balk	6
0700	31	89 62 292			2	Cover	Täcklock	5
0720	32	92 67 691			2	Cover	Lock	5
0730	33	73 13 752			4	Cover	Lock	5
0740	34	92 67 899			2	Plug	Plugg	5
0750	35	92 67 881		-1985	7	Plug	Plugg	5
0755	35	92 67 881		1986-	6	Plug	Plugg	5
0760	36	92 67 808			6	Plug	Plugg	5
0770	37	92 67 923			3	Plug	Plugg	5
0780	38	92 67 907		-1985	3	Plug	Plugg	5
0781	38	92 67 907		1986-	2	Plug	Plugg	5
0790	39	92 67 998		-1985	4	Plug	Plugg	5
0791	39	92 [illegible]		1986-	3	Plug	Plugg	5
0800	40	[illegible]		-1985	10	Plug	Plugg	5
0802	40	[illegible]		1986-	12	Plug	Plugg	5
0820	41	[illegible]			4	Cage nut	Korgmutter	5
0840	42	[illegible]			6	Plug	Plugg	5
0860	43	92 67 923		1987-	1	Plug	Plugg	5
0880	44	73 93 454		1987-	1	Nut	Mutter	5

4. Front Främre
5. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F08

Rear floor
Bakre golv

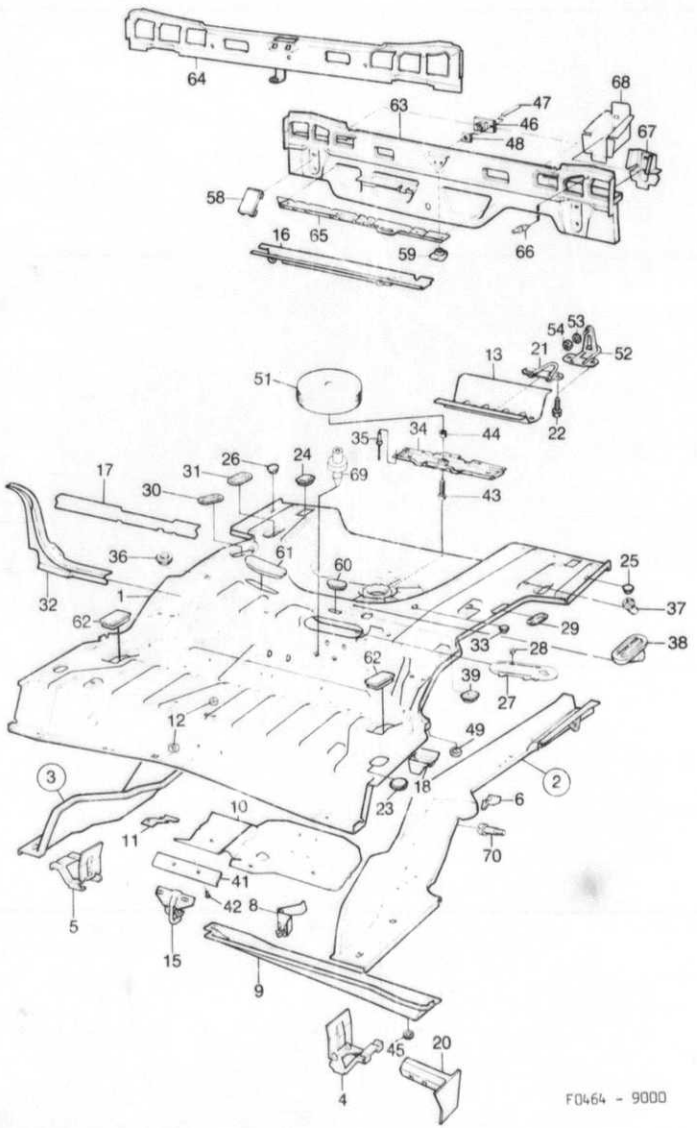

F0464 - 9000

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 65 943*		NLS - USE 4006276, 4319968	1	Floor	Golv	6
0020	2	*92 65 976*		-1985 LH NLS - USE 4293916	1	Beam	Balk	6
0030	2	*92 76 932*		1986- LH NLS - USE 4293916	1	Beam	Balk	6
0040	3	*92 65 968*		-1985 RH NLS - USE 9276924	1	Beam	Balk	6
0050	3	92 76 924		1986- RH	1	Beam	Balk	6
0060	4	*92 65 984*		LH, -1986 NLS - USE 4100731	1	▪Jack support	▪Domkraftstöd	6
0070	4	*69 58 011*		LH, 1987- NLS - USE 4100731	1	Jack support	Domkraftstöd	6
0080	5	*92 65 992*		RH, -1986 NLS - USE 4100723	1	▪Jack support	▪Domkraftstöd	6
0090	5	*69 58 003*		RH, 1987- NLS - USE 4100723	1	Jack support	Domkraftstöd	6
0100	6	*92 66 016*		LH NLS	1	▪Bracket	▪Fäste	6
0110	6	*92 66 008*		RH NLS	1	▪Bracket	▪Fäste	6
0120	8	*92 65 950*		-1988, 4) NLS - USE 6976278	1	Bracket	Upphängning	6
0130	8	69 76 278		1989-,4,500)	1	Bracket	Upphängning	6
0140	9	92 66 024		5)	1	Crossmember	Tvärbalk	6
0150	10	92 66 032			1	Reinforcement	Förstärkning	6
0160	11	92 66 040			1	Bracket	Hållare	6
0170	12	79 68 415		(7965767)	3	Lock nut	Låsmutter	3
0180	13	*92 66 057*		-1985 NLS - USE 9276940	1	Support shape	Stödprofil	6
0190	13	92 76 940		1986-	1	Support shape	Stödprofil	6
0200	15	92 66 073			1	Bracket	Upphängning	6
0210	16	*92 66 081*		NLS - USE 4009528	1	Support shape	Stödprofil	6
0220	17	92 66 099			1	Bevel wall	Snedvägg	6
0230	18	*92 66 115*		-1987, LH NLS	1	Bracket	Hållare	6
0240	18	*92 66 107*		-1987, RH NLS	1	Bracket	Hållare	6
0250	20	92 67 717		LH	1	Protection	Skydd	5
0260	20	92 67 709		RH	1	Protection	Skydd	5
0270	21	*92 62 619*		471) NLS - USE 9278912	1	Towing hook	Bogserkrok	5
0280	21	92 78 912		472)	1	Towing hook	Bogserkrok	5
0290	22	*79 74 850*		100) NLS - USE 8130064	2	Screw	Skruv	5
0300	22	81 30 064		101)	2	Screw	Skruv	5
0310	23	92 67 865			2	Cover	Lock	5
0320	24	92 67 774			2	Cover	Lock	5
0330	25	92 68 814			1	Plug	Plugg	5
0340	26	92 68 822			1	Plug	Plugg	5
0350	27	93 87 994			1	Cover	Lock	6
0360	28	93 87 911			2	Catch	Hake	6
0370	29	89 62 342		LH	1	Cover	Täcklock	6
0380	30	89 62 359		RH	1	Cover	Täcklock	6
0390	31	89 62 334			2	Cover	Täcklock	6
0400	32	92 65 935		LH	1	Bevel wall	Snedvägg	6
0410	32	92 65 927		RH	1	Bevel wall	Snedvägg	6
0420	33	82 39 170			2	Plug	Plugg	5
0430	34	*92 69 184*		68) NLS - USE 7398688, 7967953, 9276106	1	Support member	Stödbalk	6
0440	34	92 76 106		69)	1	Support member	Stödbalk	6

4. Front Främre
5. Rear Bakre
68. Ch. --G1013436
69. Ch. G1013437--
100. Ch. --G1015404
101. Ch. G1015405--
471. Ch. --G1023448
472. Ch. G1023449--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F10

Rear floor
Bakre golv

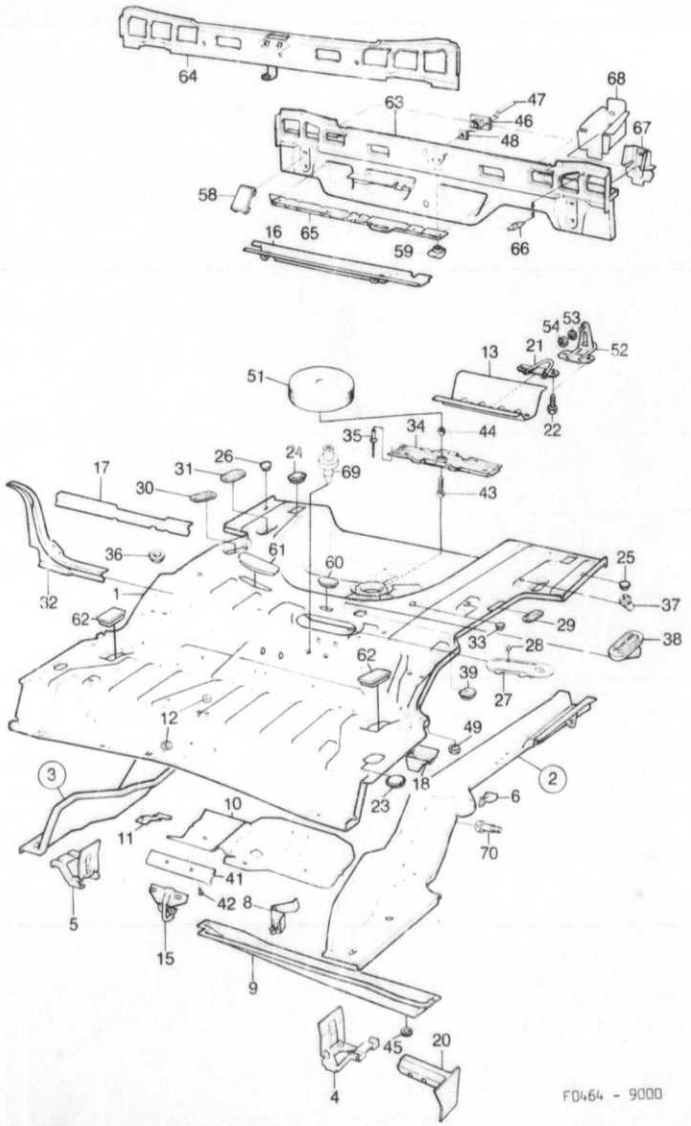

F0464 - 9000

0125	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	35	82 35 178			10	Pop rivet	Popnit	5
0460	36	69 19 658			2	Plug	Plugg	5
0470	37	92 67 998		-1985	4	Plug	Plugg	5
0480	37	92 67 998		1986-	7	Plug	Plugg	5
0490	38	92 67 980		5) LH	1	Plug	Plugg	5
0500	39	82 39 170			2	Plug	Plugg	5
0510	40	*92 72 378*		102) NLS	1	Protecting moulding	Skyddslist	5
0520	41	92 71 263			1	Cover plate	Täckplåt	3
0530	42	82 35 178			2	Pop rivet	Popnit	5
0540	43	73 98 688		69)	1	Screw	Skruv	5
0550	44	79 67 953		69)	1	Nut	Mutter	5
0560		92 83 127			X	Tape	Tape	5
0570	45	82 06 096		1986-	1	Plug	Plugg	5
0580	46	96 53 502		1986-, AU	3	Nut plate	Mutterplatta	5
0590	47	79 72 490		1986-, AU	6	Rivet	Nit	5
0600	48	92 30 293		1986-, AU	6	Washer	Bricka	5
0610	49	82 41 325		1987-	2	Plug	Plugg	5
0620	51	69 62 542		282)	1	Seal	Tätning	6
0630	52	69 39 805		4D	1	Towing hook	Bogserkrok	5
0640	53	69 39 839		4D	1	Washer	Bricka	5
0650	54	79 78 620		-1988, 4D	1	Nut	Mutter	3
0660	54	79 67 979		1989-,500) 4D	1	Nut	Mutter	5
0670	58	69 58 987		4D	2	Cover	Täcklock	5
0680	59	82 66 876		4D	1	Plug	Plugg	6
0690	60	69 73 812			1	Seal	Tätning	5
0700	61	69 73 820			1	Seal	Tätning	6
0710	62	69 73 838			2	Seal	Tätning	6
0720	63	92 66 198			1	Rear section	Bakdel	6
0730	63	69 63 912		4D	1	Rear section	Bakdel	5
0740	64	69 62 625		PART OF 9266198	1	.Sill	.Tröskel	5
0750	64	69 63 920		PART OF 6963912	1	.Sill	.Tröskel	6
0760	65	69 63 904			1	.Support shape	.Stödprofil	6
0770	66	73 99 454			1	.Nut	.Mutter	6
0780	67	92 66 065		PART OF 9266198	2	.Support	.Stöd	5
0790	68	69 73 564		LH, PART OF 6963912	1	.Spacer	.Distansstycke	6
0800	68	69 73 556		RH, PART OF 6963912	1	.Spacer	.Distansstycke	6
0810	69	69 60 975		4D	4	Plug	Plugg	5
0820	70	69 73 440		434)	1	Screw	Skruv	5

5. Rear Bakre
69. Ch. G1013437--
102. Ch. --G1018185
282. Ch. H1033811--, H8001835--
434. Body 7210164--, Ch. J8001034--
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F12

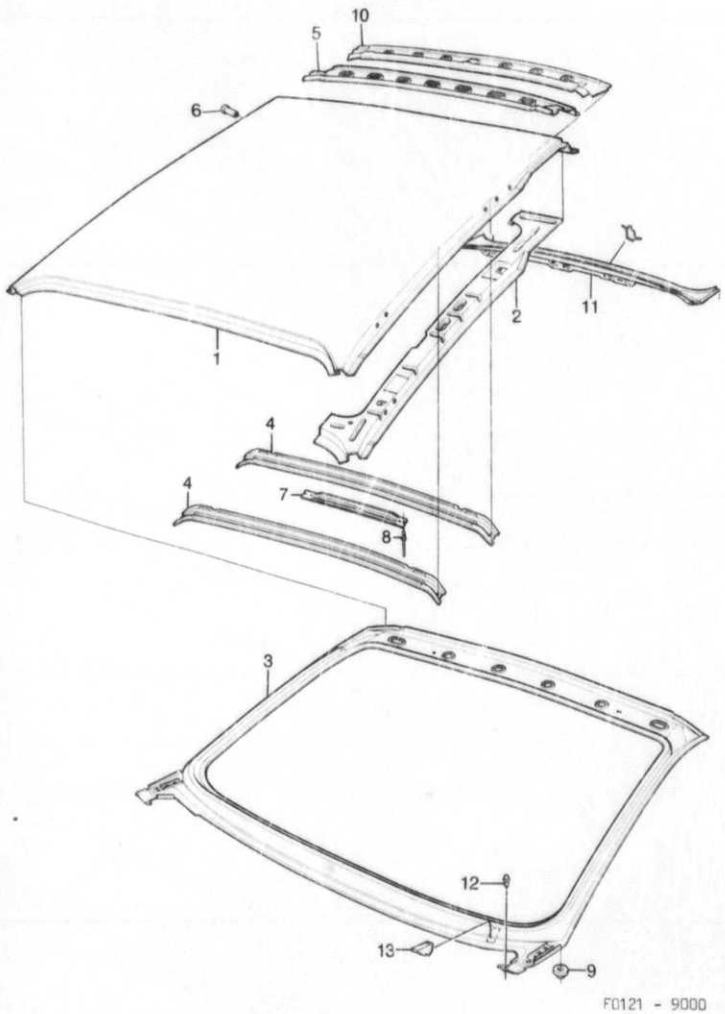

F0121 - 9000

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*92 65 901*		NLS - USE 4009965, 8284374, 8284382	1	Roof	Tak	5
0030	1	69 59 282		4D	1	Roof	Tak	5
0040	2	*92 65 893*		LH NLS - USE 4098471	1	Beam	Balk	6
0050	2	69 59 274		LH, 4D	1	Beam	Balk	6
0060	2	92 65 885		RH	1	Beam	Balk	6
0070	2	69 59 266		RH, 4D	1	Beam	Balk	6
0080	3	92 65 851			1	Frame	Ram	6
0100	4	92 65 869			2	Beam	Balk	6
0120	5	92 65 877		5)	1	Beam	Balk	6
0140	6	92 67 485			8	Nut	Mutter	5
0150	7	69 55 322			1	Bracket	Konsol	6
0160	8	82 35 178			4	Pop rivet	Popnit	5
0170	9	92 23 991		1987-	2	Bushing	Bussning	5
0180	10	69 59 258		5) 4D	1	Beam	Balk	6
0190	11	69 59 225		4D	1	Beam	Balk	6
0200	12	73 99 454		4D	1	Nut	Mutter	5
0220	13	69 73 515		4D	2	Seal	Tätning	5



5. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-i02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F14

Sun roof
Soltak

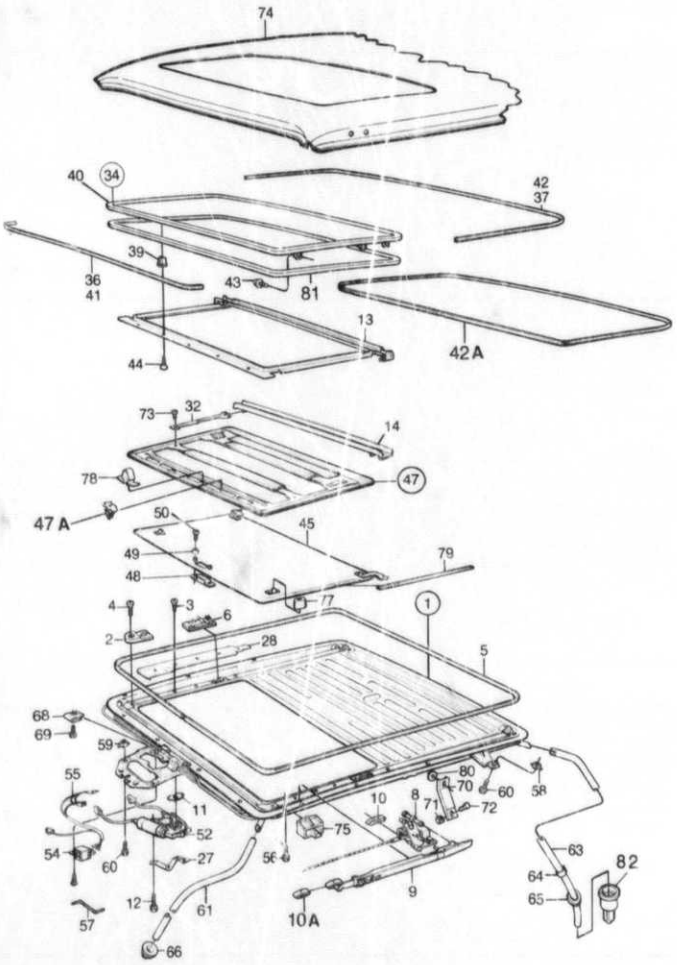

F2483 - 9000

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 54 236			1	Frame	Ram	6
0020	2	69 59 787		1987-	2	.Spacer	.Mellanlägg	5
0030	3	*92 59 391*		-1986 NLS - USE 6959795	6	.Screw	.Skruv	5
0040	3	69 59 795		1987-	6	.Screw	.Skruv	5
0050	4	79 75 162			6	.Screw	.Skruv	5
0060	5	*92 54 566*		NLS - USE 4303731	1	.Sealing strip	.Tätningslist	5
0070	6	92 54 558		LH	1	.Guide	.Styrning	6
0080	6	92 54 541		RH	1	.Guide	.Styrning	6
0090	8	*92 54 517*		-1985, LH, GLASS LID NLS - USE 9275959	1	Cam follower	Lyftare	5
0100	8	*92 54 509*		-1985, RH, GLASS LID NLS - USE 9275942	1	Cam follower	Lyftare	5
0110	8	92 75 959		1986-1987, LH, GLASS LID	1	Cam follower	Lyftare	5
0120	8	92 75 942		1986-1987, RH, GLASS LID	1	Cam follower	Lyftare	5
0130	8	69 63 854		1988-, LH, GLASS LID	1	Cam follower	Lyftare	5
0140	8	69 63 847		1988-, RH, GLASS LID	1	Cam follower	Lyftare	5
0150	8	92 76 031		-1987, LH, STEEL LID	1	Cam follower	Lyftare	5
0160	8	92 76 023		-1987, RH, STEEL LID	1	Cam follower	Lyftare	5
0170	8	69 63 870		1988-, LH, STEEL LID	1	Cam follower	Lyftare	5
0180	8	69 63 862		1988-, RH, STEEL LID	1	Cam follower	Lyftare	5
0190	9	*92 54 434*		-1985, LH NLS - USE 6961791	1	Sliding plane	Glidbana	5
0200	9	*92 54 426*		-1985, RH NLS - USE 6961783	1	Sliding plane	Glidbana	5
0210	9	*92 77 773*		1986-,144) LH NLS - USE 6961791	1	Sliding plane	Glidbana	5
0220	9	*92 77 765*		1986-,144) RH NLS - USE 6961783	1	Sliding plane	Glidbana	5
0230	9	69 57 674		145,251) LH	1	Sliding plane	Glidbana	5
0240	9	69 61 783		145,251) RH(6957666)	1	Sliding plane	Glidbana	5
0250	9	69 61 791		252) LH	1	Sliding plane	Glidbana	5
0260	9	69 61 783		252) RH	1	Sliding plane	Glidbana	5
0270	10	*92 54 590*		5) -1985 NLS - USE 4005195	2	Slide dog	Glidklack	5
0280	10	*92 75 991*		5) 1986-1988 NLS - USE 4005195	2	Slide dog	Glidklack	5
0290	10	40 05 195		1989-,5,500)	2	Slide dog	Glidklack	5
0300	10A	92 54 848		4,145)	2	Slide dog	Glidklack	5
0310	11	*92 54 327*		NLS	1	Guide	Styrning	6
0320	12	92 71 909		(8059446,9259409)	3	Screw	Skruv	5
0330	13	92 54 442		FOR GLASS LID	1	Roof gutter	Ränna	5
0340	14	92 63 930		FOR STEEL LID	1	Roof gutter	Ränna	5
0350	27	92 60 142			1	Bracket	Fäste	5
0360	28	92 54 533		LH FOR GLASS LID	1	Slide rail	Glidskena	5
0370	28	92 54 525		RH FOR GLASS LID	1	Slide rail	Glidskena	5
0380	28	92 63 955		LH FOR STEEL LID	1	Slide rail	Glidskena	5
0390	28	92 63 948		RH FOR STEEL LID	1	Slide rail	Glidskena	5
0400	32	92 64 698		LH FOR STEEL LID, PART OF 6974711	1	Link rod	Länkstång	6
0420	32	92 64 680		RH FOR STEEL LID, PART OF 6974711	1	Link rod	Länkstång	6
0440	34	69 55 512		98) GLASS LID (9254053)	1	Sunroof	Sollucka	5
0450	34	69 55 512		99) GLASS LID	1	Sunroof	Sollucka	5
0460	36	69 61 049		-1986,4) (9269515)	1	.Sealing strip	.Tätningslist	5

4. Front Främre
5. Rear Bakre
98. Ch. --G1007742
99. Ch. G1007743--
144. Ch. --H1003743
145. Ch. H1003744--, H8000041--
251. Ch. --H1009497
252. Ch. H1009498--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F16

Sun roof
Soltak

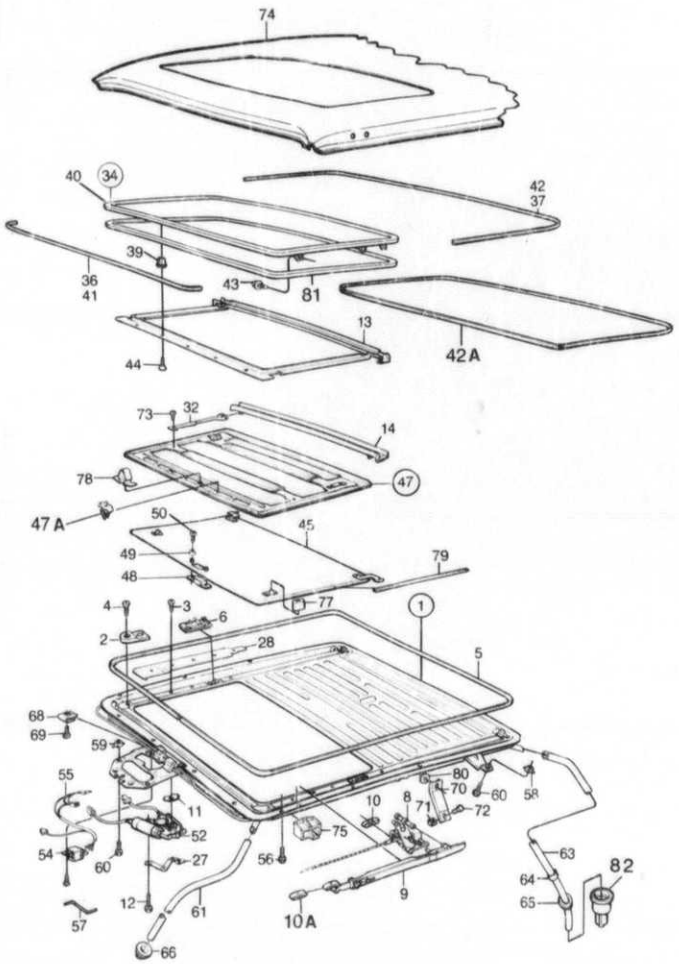

F2483 - 9000

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	36	69 61 049		1987-,4)	1	.Sealing strip	.Tätningslist	5
0480	37	69 55 520		5,98) (9269531)	1	.Sealing strip	.Tätningslist	5
0490	37	69 55 520		5,99)	1	.Sealing strip	.Tätningslist	5
0500	39	92 54 129			5	.Washer	.Bricka	3
0510	40	92 62 205		STEEL LID	1	Hatch	Lucka	5
0520	41	69 61 049		4,427)	1	Sealing strip	Tätningslist	5
0530	42	69 55 520		5,427)	1	Sealing strip	Tätningslist	5
0540	42A	40 06 292		428) FOR STEEL LID	1	Sealing strip	Tätningslist	5
0550	43	92 54 103			6	Screw	Skruv	5
0560	44	*92 59 391*		-1986 NLS - USE 6959795	5	Screw	Skruv	5
0570	44	69 59 795		1987-	5	Screw	Skruv	5
0580	45	*92 79 639*		105) (9254418) NLS	1	Sun visor	Solskydd	5
0590	45	*92 79 639*		106)-1988 NLS	1	Sun visor	Solskydd	5
0600	45	69 74 679		1989-,500)	1	Sun visor	Solskydd	5
0610	47	*92 63 716*		-1988, FOR STEEL LID NLS - USE 4006441	1	Upholstery	Klädsel	6
0620	47	40 06 441		-1988, ALT TO 9263716	1	Upholstery	Klädsel	6
0630	47	*69 74 711*		1989-,500) FOR STEEL LID NLS - USE 4005666	1	Upholstery	Klädsel	6
0640	47	40 05 666		1989-,500)	1	Upholstery	Klädsel	6
0650	47A	*40 05 740*		1989-,500) NLS - USE 4101036	2	.Clip	.Clips	5
0660	48	92 54 459			1	Handle	Handtag	6
0670	49	*92 54 467*		105) NLS	2	Spacer sleeve	Distanshylsa	5
0680	50	79 75 154		105)	2	Screw	Skruv	5
0690	50	92 79 712		106)	2	Screw	Skruv	5
0700	52	40 06 219		-1985 (9505306)	1	Electric motor	Elmotor	4
0710	52	40 06 219		1986-,318) (6957799)	1	Electric motor	Elmotor	4
0720	52	*69 63 813*		319) -1988 NLS - USE 4305603, 9505793	1	Electric motor	Elmotor	4
0730	52	40 06 219		1989-,500)	1	Electric motor	Elmotor	4
0740	54	95 05 793			1	Relay	Relä	5
0750	55	95 05 801			1	Cable harness	Ledningsnät	6
0760	56	*79 75 170*		507) NLS - USE 7982366	10	Screw	Skruv	5
0770	56	79 82 366		508)	10	Screw	Skruv	5
0780	57	92 54 608			1	Crank	Vev	5
0790	58	79 74 983			2	Cage nut	Korgmutter	5
0800	59	79 74 231			2	Cage nut	Korgmutter	5
0810	60	92 59 524			4	Screw	Skruv	5
0820	61	*92 78 995*		4) -1986 (9254632) NLS - USE 6957898	2	Draining hose	Dräneringsslang	5
0830	61	69 57 898		1987-	2	Draining hose	Dräneringsslang	5
0840	63	92 54 640		5)	2	Draining hose	Dräneringsslang	5
0850	64	92 28 149			4	Clip	Clips	5
0860	65	92 54 707			2	Grommet	Genomföring	5
0870	66	92 23 991		-1986	2	Bushing	Bussning	5
0880	66	69 55 744		1987-	2	Bushing	Bussning	5
0890	68	79 72 573			1	Clip nut	Clipsmutter	5
0900	69	79 22 800			1	Screw	Skruv	5
0910	70	92 69 234			2	Bracket	Fäste	5

4. Front Främre
5. Rear Bakre

98. Ch. --G1007742
99. Ch. G1007743--
105. Ch. --G1009277
106. Ch. G1009278--
318. Ch. --J1006649, --J2002952, --J8000729
319. Ch. J1006650--, J2002953--, J8000730--
427. Ch. --K1000167, --K2000118, --K8000011, SE 1988B: --J1050029, --J2030061, --J8005106
428. Ch. K1000168--, K2000119--, K8000012--, SE 1988B: J1050030--, J2030062--, J8005107--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
507. Ch. --K1024693, --K2014843
508. Ch. K1024694--, K2014844--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F18

Sun roof — Soltak

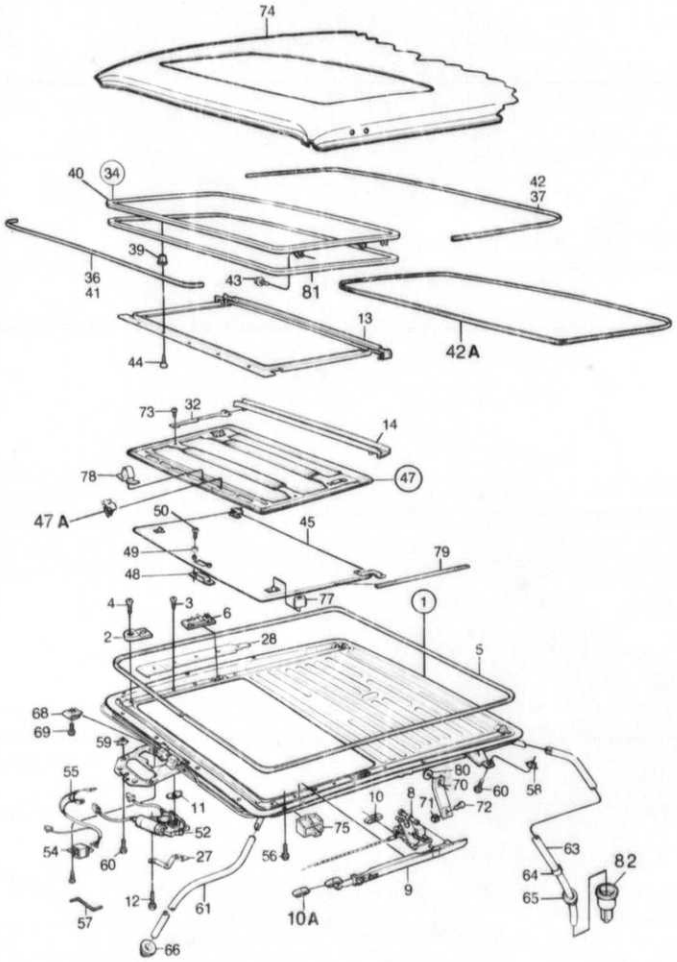

F2483 - 9000

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920	71	82 78 467			2	Nut	Mutter	5
0930	72	79 74 694			2	Screw	Skruv	5
0940	73	92 59 383		PART OF 6974711	2	Rivet	Nit	
0950	74	*69 58 996*		NLS - USE 4009999, 8284374, 8284382	1	Roof	Tak	5
0950								
0960	74	69 59 001		4D	1	Roof	Tak	5
0970	75	*92 77 781*		99,144) NLS	2	Slide dog	Glidklack	5
0980	75	69 57 344		145)	2	Slide dog	Glidklack	5
0990	77	92 79 654		106)	2	Slide dog	Glidklack	5
1000	78	92 63 922		1987-	4	Upholstery clip	Klädselfäste	6
1010	79	92 59 342		1987-	2	Felt strip	Filtlist	5
1020	80	79 16 497		133)	2	Washer	Bricka	5
1030	81	69 63 805		230) STEEL LID	1	Tape	Tape	5
1040	82	69 61 064		322)	4	Non-return valve	Backventil	5

99. Ch. G1007743--
106. Ch. G1009278--
133. Ch. H1006268--, H8000041--
144. Ch. --H1003743
145. Ch. H1003744--, H8000041--
230. Ch. H1002487--, H8000041--
322. Ch. J1000876--, J2000021--, J8000145--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F20

Cowl plate
Torpedplåt

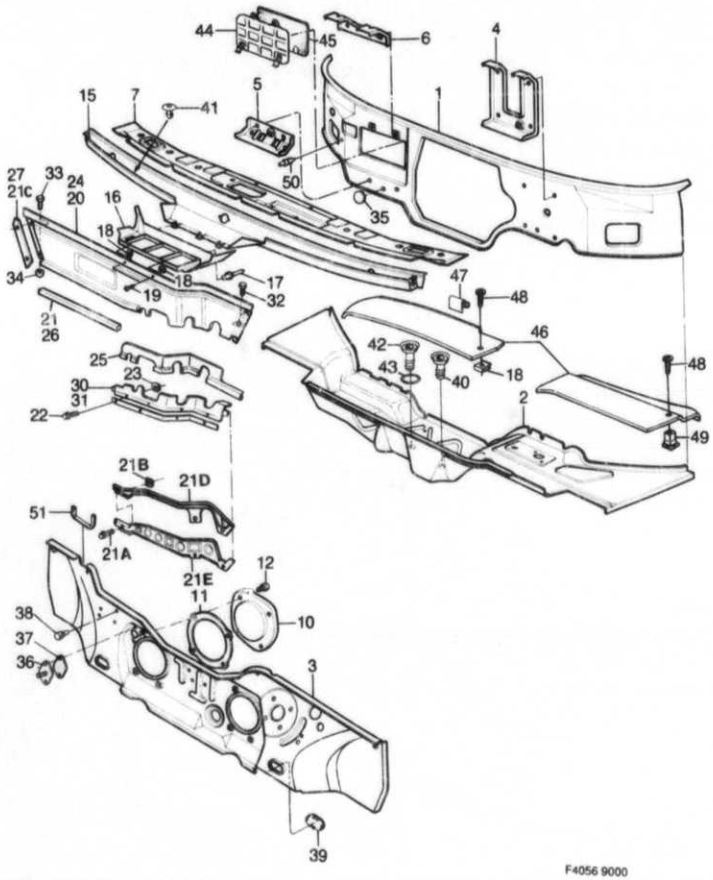

F4056 9000

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 65 760		5)	1	Cowl plate	Torpedplåt	6
0020	2	92 65 828		4)	1	Cowl plate	Torpedplåt	6
0030	3	92 65 810			1	Cowl plate	Torpedplåt	2
0040	4	*92 65 778*		LH NLS - USE 4293734	1	Bracket	Konsol	6
0050	5	92 65 786		RH	1	Bracket	Konsol	6
0060	6	92 65 794		RH	1	Bracket	Konsol	6
0070	7	92 65 802			1	Cover plate	Täckplåt	5
0080	10	89 56 294			1	Cover	Täcklock	5
0090	11	89 56 245			1	Seal	Tätning	5
0100	12	79 71 294			4	Screw	Skruv	5
0110	15	92 60 696			1	Screen	Avskärmning	5
0120	16	92 76 049		(9260688)	1	Air inlet	Luftintag	5
0130	17	92 20 880			6	Rivet	Nit	5
0140	18	79 67 995			2	Clip nut	Clipsmutter	3
0150	18	79 67 995		17)	2	Clip nut	Clipsmutter	3
0160	19	79 22 354		(9220880)	2	Screw	Skruv	5
0170	20	*92 63 344*		-1985 NLS	1	Cowl plate	Torpedplåt	6
0180	21	*92 64 474*		-1985 NLS	1	Sealing strip	Tätningslist	5
0190	21A	79 73 134		-1985	7	Screw	Skruv	5
0200	21B	79 67 995		-1985	7	Clip nut	Clipsmutter	3
0210	21C	*92 61 751*		-1985 LH NLS	1	Seal	Tätning	5
0220	21C	*92 61 744*		-1985 RH NLS	1	Seal	Tätning	5
0230	21D	*92 60 811*		-1985 NLS	1	Bracket	Fäste	5
0240	21E	*92 60 803*		-1985 NLS	1	Grommet	Genomföring	5
0250	22	82 86 296		1986-	4	Screw	Skruv	5
0260	23	79 67 995		1986-	1	Clip nut	Clipsmutter	3
0270	24	92 71 693		33)	1	Cowl plate	Torpedplåt	6
0280	24	*92 70 265*		17) NLS - USE 4008223	1	Cowl plate	Torpedplåt	6
0290	25	92 70 349		1986-	1	.Seal	.Tätning	5
0300	26	92 71 297		1986-	1	.Seal	.Tätning	5
0310	27	92 79 464		1986- LH	1	.Seal	.Tätning	5
0320	27	92 79 456		1986- RH	1	.Seal	.Tätning	5
0330	30	92 70 380		1986-	1	Guide	Styrning	5
0340	31	92 70 398		1986-	1	.Seal	.Tätning	5
0350	32	79 75 337		1986-	1	Screw	Skruv	5
0360	33	82 62 958		1986-	1	Screw	Skruv	5
0370	34	79 77 374		1986-	1	Cage nut	Korgmutter	5
0380	35	89 29 531			1	Sealing washer	Tätningsbricka	5
0390	36	89 71 582		70) (8942021)	1	Plate	Plåt	2
0400	36	*89 66 558*		71,-1987) NLS - USE 3971582	1	Plate	Plåt	2
0410	36	89 71 582		1988-	1	Plate	Plåt	2
0420	37	89 41 478			1	Gasket	Packning	5
0430	38	82 09 009			2	Buffer	Buffert	5
0440	39	92 67 816			2	Cover	Lock	5
0450	40	82 06 096		563)	1	Plug	Plugg	5
0460	41	92 76 353			6	Plug	Plugg	5
0470	42	92 68 871		564,290)	2	Draining plug	Dräneringsplugg	5
0480	42	69 55 561		291)	2	Draining pipe	Dräneringsrör	5
0490	43	92 88 127			X	Tape	Tape	5
0500	44	*96 27 738*		-1986 NLS - USE 9628124	1	Hatch	Lucka	
0510	44	96 28 124		1987-	1	Hatch	Lucka	6
0520	45	96 27 746			1	.Seal	.Tätning	5

4. Front Främre
5. Rear Bakre
17. Ch. G1000171--
33. Ch. --G1000170
70. Ch. --G1014228
71. Ch. G1014229--
290. Ch. --J1000152, --J2000020, --J8000030
291. Ch. J1000153--, J2000021--, J8000031--
563. Ch. --G1023524
564. Ch. G1023525--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F22

Cowl plate
Torpedplåt

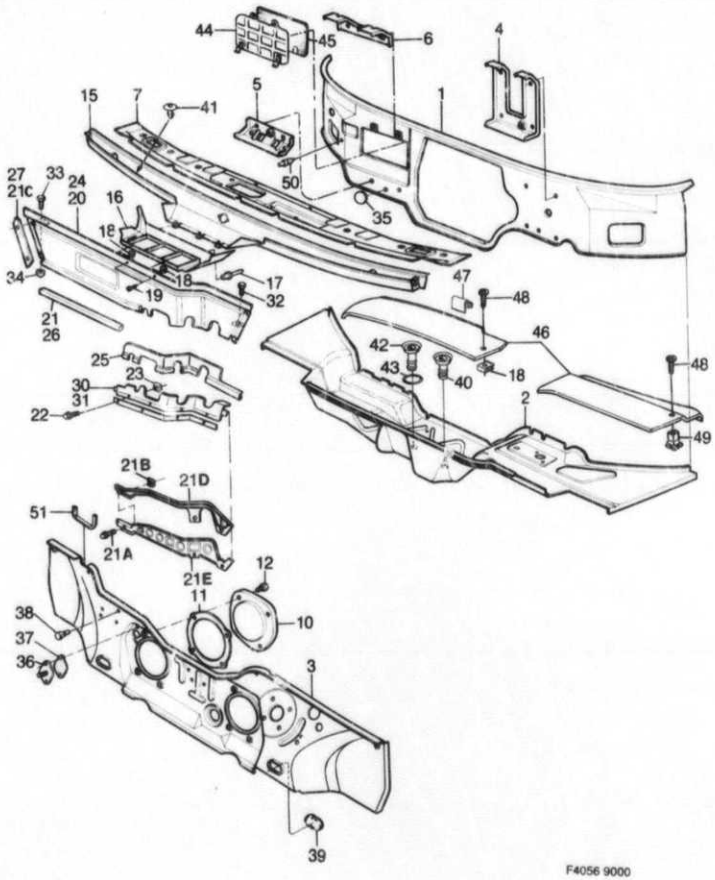

F4056 9000

0250	Pos	Part No/Art nr	K. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	46	97 86 120		-1987, LH	1	Cover	Täcklock	5
0540	46	95 80 366		1988-, LH	1	Cover	Täcklock	5
0550	46	97 86 138		-1987, RH	1	Cover	Täcklock	5
0560	46	95 75 234		1988-, RH	1	Cover	Täcklock	5
0570	47	84 00 350		84)	4	Clip	Clips	5
0580	47	84 00 350		85)	5	Clip	Clips	5
0590	48	79 70 601		-1987	2	Screw	Skruv	5
0600	48	79 70 601		1988-	4	Screw	Skruv	5
0610	49	79 77 341		1988-	2	Press nut	Pressmutter	5
0620	50	73 99 454		1988-	1	Nut	Mutter	5
0630	51	96 25 641		CARS WITHOUT AC	2	Seal	Tätning	5
0640		82 83 715		8283715= 3M	X	Tape	Tape	3

84. Ch. -G1001418
85. Ch. G1001419-

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-F24

Wheel housing, front
Hjulhus, främre

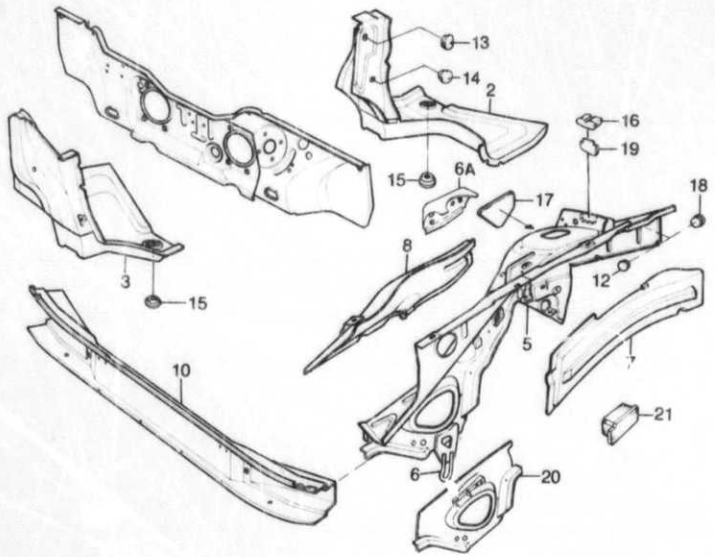

F4057 9000

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 8A-019, 4-F20	1	Cowl plate	Torpedplåt	
0020	2	92 65 844			1	Reinforcement	Förstärkning	6
0030	3	*92 65 836*		NLS - USE 4293726	1	Reinforcement	Förstärkning	6
0040	5	*92 65 554*		LH,	1	Wheel housing	Hjulhus	5
0050				SEE WORKSHOP MANUAL 8:1				
0050				NLS - USE 4100897,				
0050				4294393, 7975436				
0060	5	92 65 547		RH,	1	Wheel housing	Hjulhus	5
0070				SEE WORKSHOP MANUAL 8:1				
0080	6	69 55 678		RH ONLY	1	.Towing hook	.Bogserkrok	6
0090	6A	42 93 882		RH ONLY	1	.Bracket	.Konsol	5
0100	7	*92 65 570*		-1985 LH NLS - USE	1	Reinforcement	Förstärkning	4
0100				9275793				
0110	7	*92 65 562*		-1985 RH NLS - USE	1	Reinforcement	Förstärkning	4
0110				9275785				
0120	7	92 75 793		1986- LH	1	Reinforcement	Förstärkning	4
0130	7	92 75 785		1986- RH	1	Reinforcement	Förstärkning	4
0140	8	92 65 596		-1987, LH	1	Beam	Balk	4
0150	8	92 65 588		-1987, RH	1	Beam	Balk	4
0160	10	40 09 700		-1987 (9265521)	1	Beam	Balk	4
0170	10	*69 61 940*		1988- NLS - USE 4009700	1	Beam	Balk	4
0180	12	82 06 096			1	Plug	Plugg	5
0190	13	92 67 915			3	Plug	Plugg	5
0200	14	92 68 806		262)	2	Plug	Plugg	5
0210	14	92 68 178		263)	2	Plug	Plugg	5
0220	15	92 68 863			2	Plug	Plugg	5
0230	16	89 68 133		1987-, ABS WITHOUT AC/	1	Seal	Tätning	6
0240				ACC, RH ONLY				
0250	17	*92 67 857*		312) LH NLS - USE	1	Cover	Lock	5
0250				6973077				
0260	17	69 73 077		313) LH	1	Cover	Lock	5
0270	17	92 67 840		312) RH	1	Cover	Lock	5
0280	17	69 73 069		313) RH	1	Cover	Lock	5
0290	18	70 38 342	S	1987-, WITH AC/ACC,	1	Plug	Plugg	5
0300				RH ONLY				
0310	19	96 25 641		CARS WITHOUT AC	2	Seal	Tätning	5
0320	20	*69 62 609*		LH NLS - USE 4098695	1	Plate	Plåt	3
0330	20	*69 62 617*		RH NLS - USE 4098703	1	Plate	Plåt	3
0340	21	69 73 853		1988-,503), 4D, LH	1	Seal	Tätning	4
0350	21	40 09 775		504), 4D, LH	1	Seal	Tätning	4
0360	21	69 73 846		503), 1988-, 4D, RH	1	Seal	Tätning	4
0370	21	40 09 767		504), 4D, RH	1	Seal	Tätning	4
0380		82 83 715		8283715= 3M	X	Tape	Tape	3

262. Ch. --H1027370, --H8001350
263. Ch. H1027371--, H8001351--
312. Ch. --J1009777, --J2004722, --J8000517
313. Ch. J1009778--, J2004723--, J8000518--
503. Ch. --K1024077, --K2014376, --K8001094
504. Ch. K1024078--, K2014377--, K8001095--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G02

Wheel housing, rear

Hjulhus, bakre

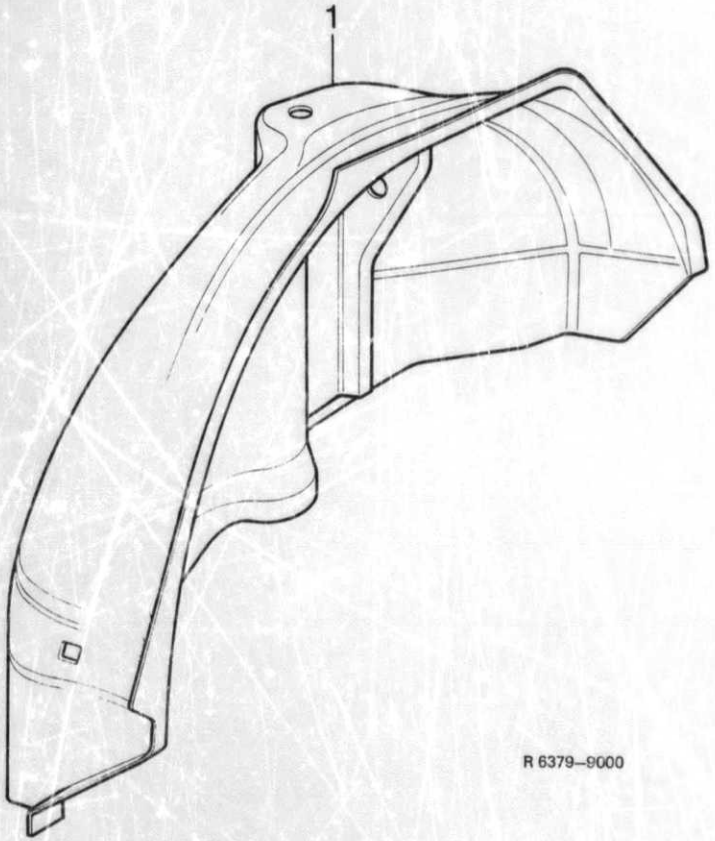

R 6379–9000

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 66 214		LH	1	Wheel housing	Hjulhus	6
0020	1	92 66 206		RH	1	Wheel housing	Hjulhus	6
0030	1	• 42 94 583		RH, ALT. TO 9266206	1	Wheel housing	Hjulhus	6

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


Car body

4-G04

Side plate

Karosskrov

Sidoplåt

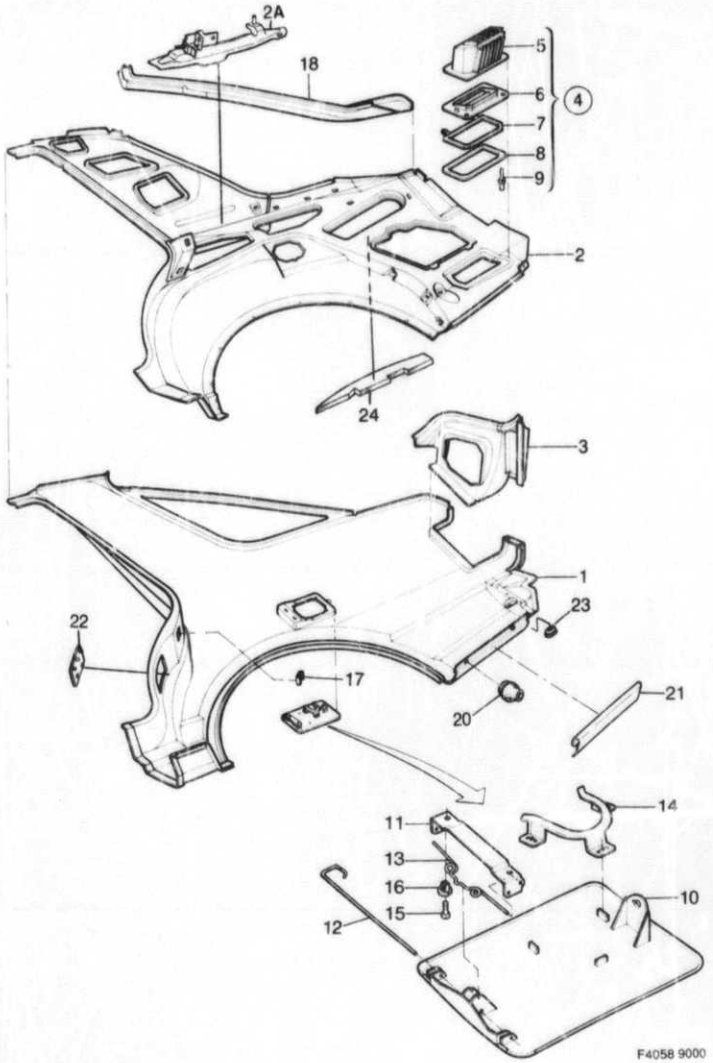

0415	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 66 438*		LH NLS - USE 4101317	1	Side plate	Sidoplåt	4
0020	1	*92 66 420*		RH NLS - USE 4101309, 4306510	1	Side plate	Sidoplåt	4
0030	2	*92 66 370*		LH NLS - USE 4293874	1	Side plate	Sidoplåt	6
0040	2	92 66 362		RH	1	Side plate	Sidoplåt	6
0050	2A	42 94 237		LH	1	Reinforcement	Förstärkning	6
0060	2A	42 94 229		RH	1	Reinforcement	Förstärkning	6
0070	3	92 66 479		LH	1	Corner	Hörn	5
0080	3	92 66 461		RH	1	Corner	Hörn	5
0090	4	92 65 372			1	Air outlet	Luftutsläpp	5
0100	5	92 64 359			1	,Cover	,Kåpa	5
0110	6	92 64 367			1	,Grille	,Galler	5
0120	7	92 64 375			1	,Flap	,Klaff	5
0130	8	92 64 383			1	,Seal	,Tätning	5
0140	9	79 75 717		(7961725)	2	Rivet	Nit	5
0150	10	*92 76 387*		-1988 (9250788) NLS - USE 6957955	1	Cover	Täcklock	5
0160	10	69 57 955		1989-,500)	1	Cover	Täcklock	5
0170	11	92 55 910			1	Hinge	Gångjärn	5
0180	12	92 76 403		66) (9257403)	1	Shaft	Axel	5
0190	12	92 76 403		67)	1	Shaft	Axel	5
0200	13	40 05 948		-1988, (9252511)	1	Spring	Fjäder	5
0210	13	40 05 948		1989-,500)	1	Spring	Fjäder	5
0220	14	92 61 801		-1988	1	Bracket	Hållare	5
0230	15	79 67 730			2	Screw	Skruv	5
0240	16	*92 36 589*		NLS - USE 4013165	2	Clip	Clips	5
0250	17	92 66 495		LH	1	Bracket	Hållare	5
0260	17	*92 66 487*		RH NLS - USE 4293189	1	Bracket	Hållare	5
0270	18	92 66 453		LH	1	Roof gutter	Ränna	5
0280	18	92 66 446		RH	1	Roof gutter	Ränna	5
0290	20	92 68 160			2	Plug	Plugg	5
0300	21	92 72 352			2	Protecting moulding	Skyddslist	5
0310	22	92 67 527			2	Cover	Lock	5
0320	23	92 77 880			2	Plug	Plugg	5
0330	24	40 06 433		1989-,500)	1	Seal	Tätning	5


66. Ch. -G1018332
67. Ch. G1018333-
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

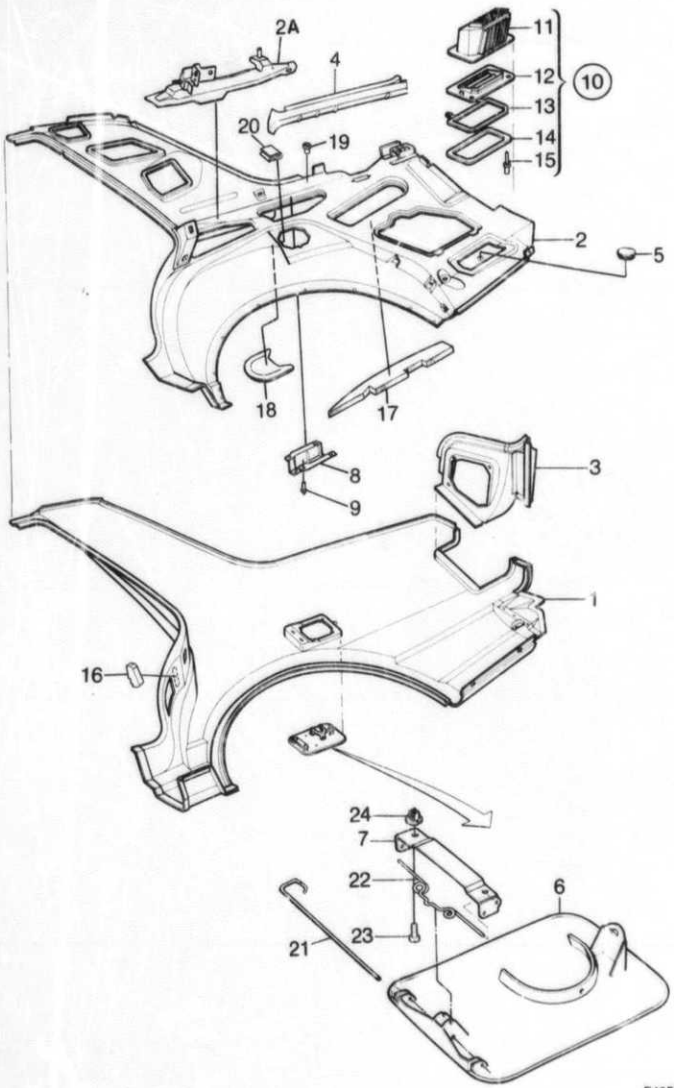

F4059 9000

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 73 036*		LH NLS - USE 4098570	1	Side plate	Sidoplåt	4
0020	1	*69 73 044*		RH NLS - USE 4101903	1	Side plate	Sidoplåt	4
0030	2	*69 73 051*		-1988, LH NLS - USE 4007233	1	Side plate	Sidoplåt	6
0040	2	*69 76 237*		1989-, LH NLS - USE 4007233	1	Side plate	Sidoplåt	6
0050	2	69 76 229		RH	1	Side plate	Sidoplåt	6
0060	2A	40 07 332		1988-, LH	1	Reinforcement	Förstärkning	6
0070	2A	40 07 324		1988-, RH	1	Reinforcement	Förstärkning	6
0080	3	69 73 002		LH	1	Corner	Hörn	5
0090	3	69 63 961		RH	1	Corner	Hörn	5
0100	4	69 73 028		LH	1	Roof gutter	Ränna	5
0110	4	69 73 010		RH	1	Roof gutter	Ränna	5
0120	5	92 67 899		LH ONLY	1	Plug	Plugg	5
0130	6	*92 77 559*		NLS - USE 4306510	1	Cover	Täcklock	5
0140	7	*92 77 567*		-1988 NLS - USE 9255910	1	Hinge	Gångjärn	5
0150	7	92 55 910		1989-,500)	1	Hinge	Gångjärn	5
0160	8	69 41 017			1	Spacer	Distansstycke	5
0170	9	69 45 505			4	Rivet	Nit	5
0180	10	96 28 843		4D	1	Air outlet	Luftutsläpp	5
0190	11	96 28 850			1	.Cover	.Kåpa	5
0200	12	96 28 868			1	.Grille	.Galler	5
0210	13	96 28 876			2	.Flap	.Klaff	5
0220	14	96 28 884			1	.Seal	.Tätning	5
0230	15	79 75 717			1	Rivet	Nit	5
0240	16	69 73 549			2	Seal	Tätning	5
0250	17	69 75 460		426)	1	Damper mat	Dämpmatta	5
0260	18	89 82 472		431)	1	Sealing collar	Tätningskrage	5
0270	19	73 99 454		435)	1	Nut	Mutter	5
0280	20	69 75 510		435)	1	Protection	Skydd	5
0290	21	92 76 403			1	Shaft	Axel	5
0300	22	*92 52 511*		-1988 NLS - USE 4005948	1	Spring	Fjäder	5
0310	22	40 05 948		1989-	1	Spring	Fjäder	5
0320	23	79 67 730			2	Screw	Skruv	5
0330	24	*92 36 589*		NLS - USE 4013165	2	Clip	Clips	5

426. Ch. J1026302--
431. Ch. K1000082--, Body 8032468--
435. Body 7398654--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G08

Door frame
Dörram

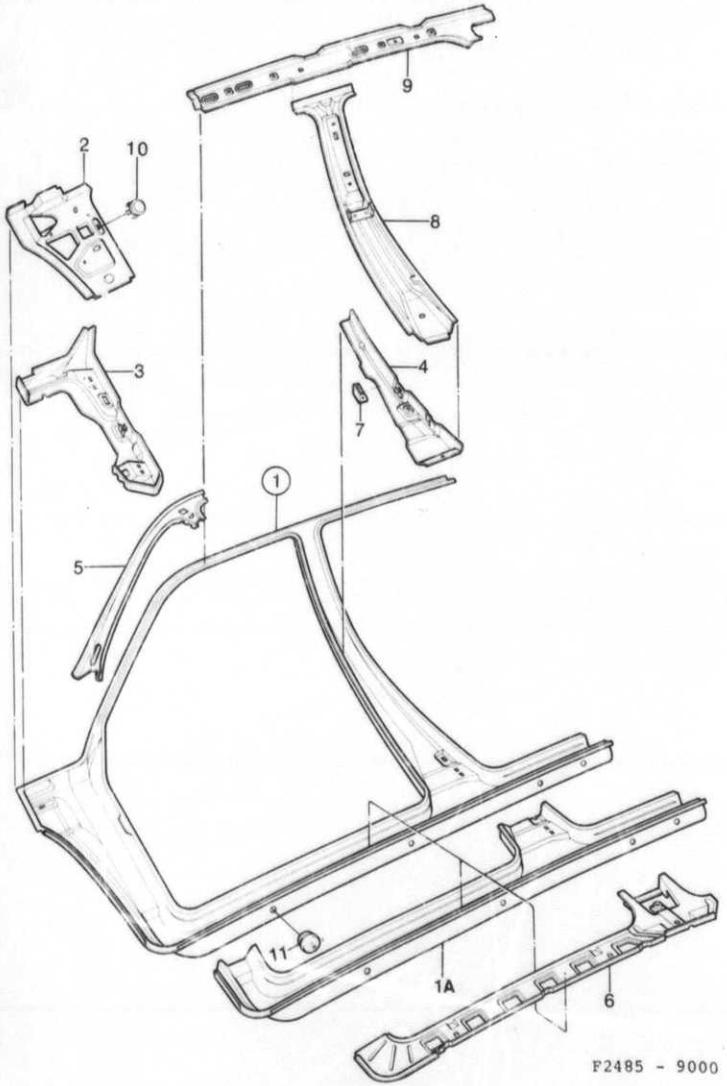

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 66 255*		-1987, LH NLS - USE 4101630, 6961999, 8284366	1	Door frame	Dörram	6
0020	1	*69 62 062*		1988-,229) LH NLS - USE 4101630, 8272635, 8284366	1	Door frame	Dörram	6
0030	1	*92 66 248*		-1987, RH NLS - USE 4101648, 6961981, 8284358	1	Door frame	Dörram	6
0040	1	*69 62 070*		1988-,229) RH NLS - USE 4101648, 8272635, 8284358	1	Door frame	Dörram	6
0050				SEE WORKSHOP MANUAL 8:1				
0060								
0070	1A	40 99 636		LH	1	▪Sill	▪Tröskel	6
0080	1A	40 99 628		RH	1	▪Sill	▪Tröskel	6
0090	2	*92 66 230*		LH NLS - USE 4293759	1	Cover plate	Täckplåt	6
0100	2	*92 66 222*		RH NLS - USE 4293908	1	Cover plate	Täckplåt	6
0110	3	92 66 271		LH	1	Reinforcement	Förstärkning	6
0120	3	*92 66 263*		RH NLS - USE 6976146	1	Reinforcement	Förstärkning	6
0130	4	92 66 297		LH	1	Reinforcement	Förstärkning	6
0140	4	*92 66 289*		RH NLS	1	Reinforcement	Förstärkning	6
0150	5	*92 66 339*		LH NLS - USE 6976054	1	A-pillar	A-stolpe	6
0160	5	*92 66 321*		RH NLS - USE 6976062	1	A-pillar	A-stolpe	6
0170	6	*92 66 313*		LH NLS - USE 6976112	1	Sill	Tröskel	6
0180	6	*92 66 305*		RH NLS - USE 6976104	1	Sill	Tröskel	6
0190	7	92 66 347			2	Bracket	Hållare	5
0200	8	*92 66 396*		-1985 LH NLS	1	Plate	Plåt	6
0210	8	92 66 388		-1985 RH	1	Plate	Plåt	6
0220	8	*92 76 973*		1986- LH NLS	1	B-pillar	B-stolpe	6
0230	8	*92 76 965*		1986- RH NLS - USE 4005203	1	B-pillar	B-stolpe	6
0240	8	40 05 211		LH, ALT TO 9276973	1	B-pillar	B-stolpe	6
0250	8	40 05 203		RH, ALT TO 9276965	1	B-pillar	B-stolpe	6
0260	9	*92 66 412*		LH NLS - USE 6976096	1	Beam	Balk	6
0270	9	*92 66 404*		RH NLS - USE 6976088	1	Beam	Balk	6
0280	10	92 68 988			2	Cover	Lock	5
0290	11	92 67 931		-1985	10	Plug	Plugg	5
0300	11	92 67 931		1986-	8	Plug	Plugg	5

229. Use stoneguard LH, 6961999 and RH, 6961981 Använd stenskottsskydd V, 6961999, och H, 6961981

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G10

Plugs
Pluggar

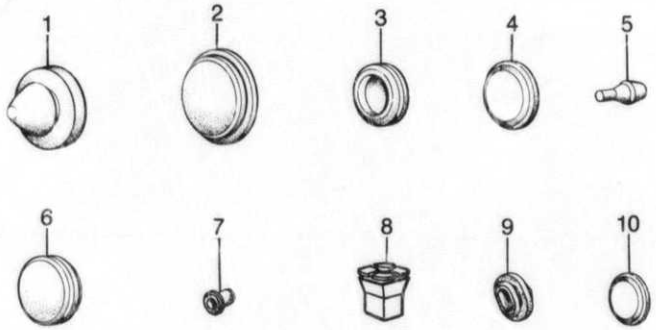

R 9056-9000

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 30 572		HOLE ∅ 5,8MM	X	Plug	Plugg	5
0020	1	82 67 296		HOLE ∅ 7,4MM	X	Plug	Plugg	5
0030	2	85 75 599		HOLE ∅ 25MM	X	Plug	Plugg	5
0040	3	92 68 178		HOLE ∅ 16MM	X	Plug	Plugg	5
0050	4	71 55 708		HOLE ∅ 35MM	X	Plug	Plugg	5
0060	5	70 38 342		HOLE ∅ 22MM	X	Plug	Plugg	5
0070	6	82 06 096		HOLE ∅ 12MM	X	Plug	Plugg	5
0080	7	82 72 635		HOLE ∅ 10MM	X	Plug	Plugg	5
0090	8	79 75 261		SQUARE HOLE, 8MM	X	Nut	Mutter	5
0100	9	92 67 915		OVAL HOLE ∅ 12 - 16MM	X	Plug	Plugg	5
0110	10	92 68 186		HOLE ∅ 11MM	X	Plug	Plugg	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G12

Hood, hinges and locks

Huv, gångjärn och lås

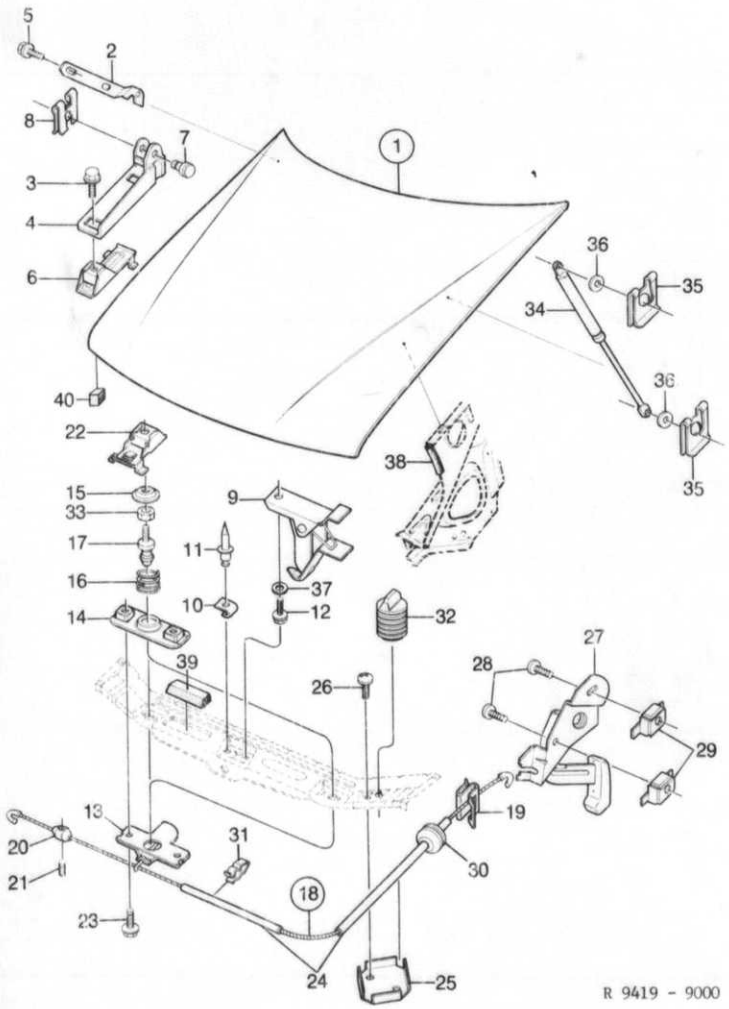

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 57 393		-1987 (9252602)	1	Bonnet	Motorhuv	3
0020	1	69 57 393		1988-	1	Bonnet	Motorhuv	3
0030	2	92 55 779		LH	1	Hinge	Gångjärn	3
0040	2	92 55 761		RH	1	Hinge	Gångjärn	3
0050	3	92 62 958			4	Screw	Skruv	5
0060	4	92 55 738		LH	1	Hinge	Gångjärn	3
0070	4	92 55 720		RH	1	Hinge	Gångjärn	3
0080	5	82 62 958			4	Screw	Skruv	5
0090	6	79 74 470			4	Cage nut	Korgmutter	5
0100	7	92 55 712			2	Pin	Tapp	5
0110	8	82 52 553			2	Clip	Clips	5
0120	9	*92 69 010*		NLS - USE 6973622	1	Catch	Hake	3
0130	10	92 59 912			1	Guard	Skydd	4
0140	11	75 72 474			1	Pop rivet	Popnit	3
0150	12	79 69 223		-1986	1	Screw	Skruv	5
0160	12	82 86 296		1987-	1	Screw	Skruv	5
0170	13	*92 61 603*		20) NLS - USE 9698523	2	Bonnet lock	Huvlås	3
0180	13	92 79 480		21,233)	2	Bonnet lock	Huvlås	3
0190	13	*69 61 239*		234) NLS - USE 6973689	2	Bonnet lock	Huvlås	3
0200	13	92 64 557		20), RHD	2	Bonnet lock	Huvlås	3
0210	13	*92 79 506*		21,233) RHD NLS - USE 9698515	2	Bonnet lock	Huvlås	3
0220	13	69 61 213		234) RHD	2	Bonnet lock	Huvlås	3
0230	14	*92 53 675*		NLS - USE 6973671	2	Guide	Styrning	5
0240	15	92 61 645			2	Washer	Bricka	5
0250	16	92 53 758			2	Return spring	Returfjäder	5
0260	17	*92 61 686*		22) NLS - USE 9278557	2	Lock pin	Låstapp	4
0270	17	92 78 557		23,233)	2	Lock pin	Låstapp	4
0280	17	69 61 254		234,455)	2	Lock pin	Låstapp	4
0290	17	69 73 788		456)	2	Lock pin	Låstapp	4
0300	18	69 73 218		-1987 (9253865)	1	Hood lock wire	Huvlåswire	2
0310	18	69 73 218		1988-	1	Hood lock wire	Huvlåswire	2
0320	19	82 64 855			1	▪Clip	▪Clips	5
0330	20	69 73 804		-1987 (9261884)	2	Clip	Clips	5
0340	20	69 73 804		1988-	2	Clip	Clips	5
0350	21	79 75 477			2	Set screw	Stoppskruv	5
0360	22	79 75 352			2	Cage nut	Korgmutter	5
0370	23	82 86 296			4	Screw	Skruv	5
0380	24	92 61 652			1	Tube	Rör	5
0390	25	92 64 508		316)	1	Cap	Överfall	5
0400	25	69 59 753		317)	1	Cap	Överfall	5
0410	26	79 72 909		316)	2	Screw	Skruv	5
0420	26	79 73 001		317)	2	Screw	Skruv	5
0430	27	40 54 912		595) (9763020)	1	Control	Reglage	5
0440	27	*96 63 089*		596) NLS - USE 4054912	1	Control	Reglage	5
0450	27	96 63 097		595) RHD (9765835)	1	Control	Reglage	5
0460	27	96 63 097		596) RHD	1	Control	Reglage	5
0470	28	80 59 396			2	Screw	Skruv	5
0480	29	79 74 231			2	Cage nut	Korgmutter	5
0490	30	79 61 311			1	Bushing	Bussning	5
0500	31	92 66 552			1	Tube clamp	Rörklamma	5

20. Ch. --G1004013
21. Ch. G1004014--
22. Ch. --G1004008
23. Ch. G1004009--
233. Ch. --H1022423, --H8000920
234. Ch. H1022424--, H8000921--
316. Ch. --J1006665, --J2002967, --J8000460
317. Ch. J1006666--, J2002968--, J8000461--
455. Ch. --J1027651, --J2016415, --J8001495
456. Ch. J1027652--, J2016416--, J8001496--
595. Ch. --G1007357
596. Ch. G1007358--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G14

Hood, hinges and locks

Huv, gångjärn och lås

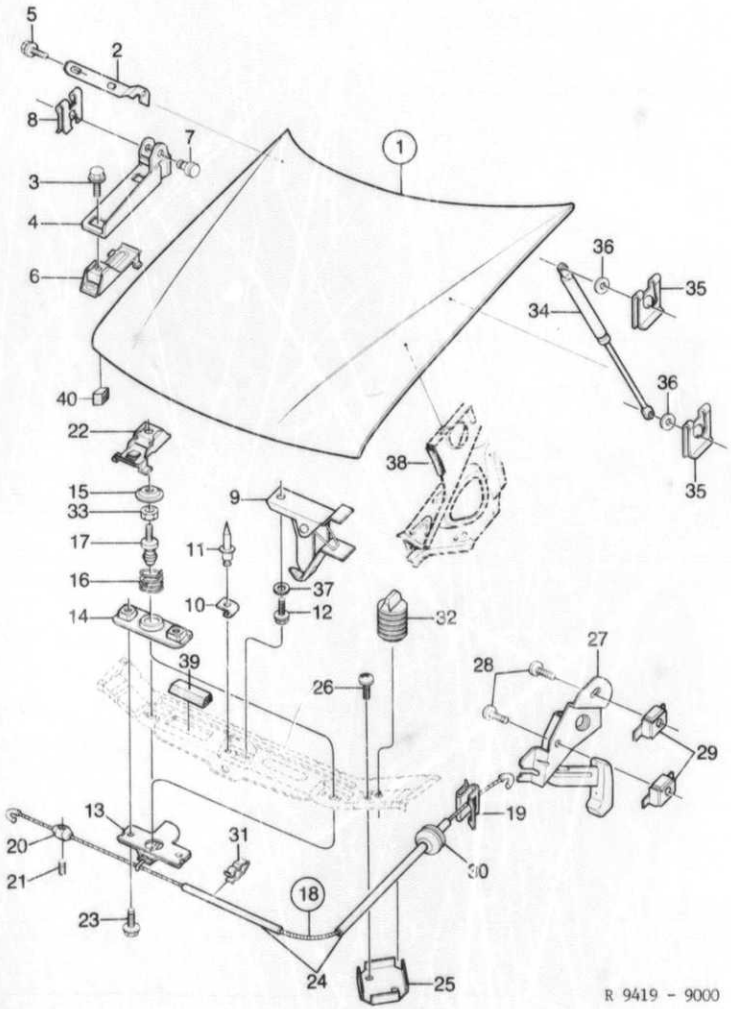

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	32	*82 78 343*		-1986 NLS - USE 4304234	2	Buffer	Buffert	4
0520	32	92 75 744		1987-	2	Buffer	Buffert	5
0530	33	*80 73 942*		233) NLS - USE 8151060	2	Nut	Mutter	5
0540	33	80 74 106		234),-1987	2	Nut	Mutter	5
0550	33	81 51 235		1988-	2	Nut	Mutter	5
0560	34	92 70 240			2	Spring	Fjäder	3
0570	35	82 52 553			4	Clip	Clips	5
0580	36	82 52 363			8	Washer	Bricka	5
0590	37	71 19 845		247)	1	Washer	Bricka	5
0600	38	82 78 558			1	Protecting moulding	Skyddslist	5
0610	39	92 69 390			2	Support	Stöd	5
0620	40	69 59 027		1987-	2	Rubber bushing	Gummibussning	4
0630		96 98 523		See page 8A-125, 4-K06	2	Bonnet lock kit	Huvlåssats	3
0640		96 98 515		RHD	2	Bonnet lock kit	Huvlåssats	3
0650				See page 8A-125, 4-K06				

233. Ch. --H1022423, --H8000320
234. Ch. H1022424--, H8000321--
247. --H1019479, --H8001825

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX


Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-G16

Front member
Grille

Frontbalk
Grill

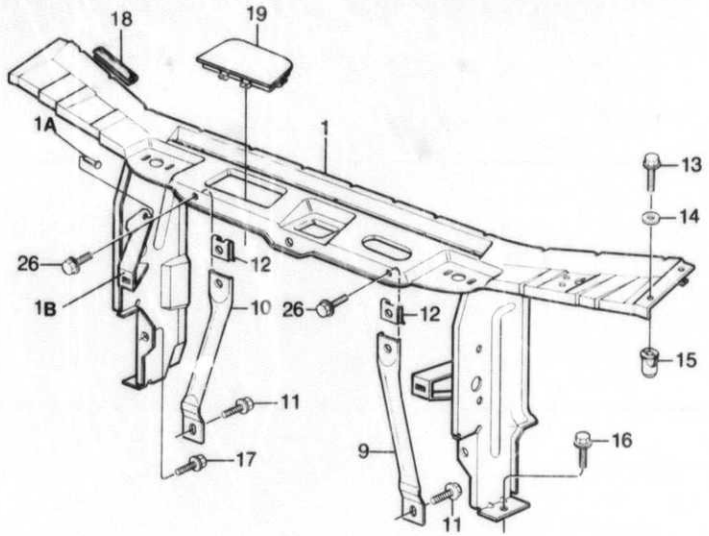

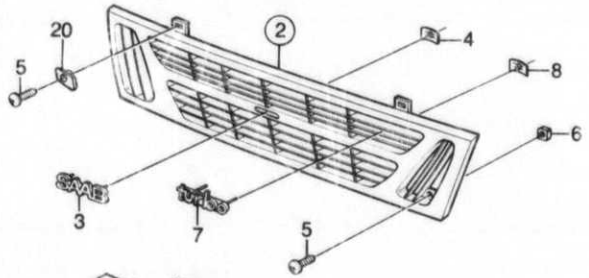

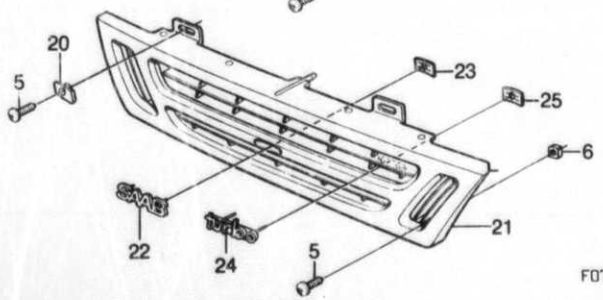

F0779 - 9000

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*92 65 513*		-1986 NLS - USE 6961858, 7972516, 9273970	1	Beam	Balk	3
0022	1	69 61 858		1987-	1	Beam	Balk	3
0024	1A	79 61 691		1987-	4	Rivet	Nit	5
0026	1B	92 73 970		1987-	2	Bracket	Fäste	3
0030	1B	69 39 755		4D	2	Bracket	Fäste	3
0040	2	92 53 592		CHROMED	1	Grille	Grill	3
0050	2	92 53 584		1986-, PAINTED	1	Grille	Grill	3
0060	3	92 53 022		"SAAB"	1	.Emblem	.Emblem	3
0080	4	79 19 483			2	.Clip	.Clips	5
0100	5	79 70 536		-1987	4	Screw	Skruv	6
0110	5	79 77 960		1988-	4	Screw	Skruv	5
0120	6	79 75 261			2	Nut	Mutter	5
0140	7	92 63 997		"TURBO"	1	Emblem	Emblem	3
0160	8	79 19 483			2	Clip	Clips	5
0180	9	92 60 712		LH	1	Stay	Stag	5
0200	10	92 60 704		RH	1	Stay	Stag	5
0220	11	79 73 209			2	Screw	Skruv	5
0240	12	79 69 272		78)	2	Clip	Clips	5
0242	12	73 99 181		79)	2	Clip	Clips	5
0260	13	79 74 694		-1987	4	Screw	Skruv	5
0270	13	*73 99 223*		1988- NLS - USE 7974694	4	Screw	Skruv	5
0280	14	73 98 829		(7311764)	4	Washer	Bricka	5
0300	15	92 68 913			4	Cage nut	Korgmutter	5
0320	16	79 73 134			2	Screw	Skruv	5
0340	17	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0350	18	82 78 558		1986-	1	Protecting moulding	Skyddslist	5
0360	19	75 77 331		I WITH AC, US, ME, FE, JA, AU, CA	1	Protecting casing	Skyddskåpa	4
0380	20	*69 60 090*		1987-1988 NLS - USE 4089454	2	Clip	Clips	3
0382	20	40 89 462		1989-,500)	2	Clip	Clips	3
0400	21	92 78 136		309) CHROMED	1	Grille	Grill	3
0420	22	69 56 593		309) "SAAB"	1	.Emblem	.Emblem	3
0440	23	79 19 483		309)	2	.Clip	.Clips	5
0460	24	69 62 823		309)"TURBO"	1	Emblem	Emblem	3
0480	25	79 19 483		309)	2	Clip	Clips	5
0490	26	79 73 209		-1987	2	Screw	Skruv	5
0500	26	79 75 782		1988-	2	Screw	Skruv	5

78. Ch.--G1023847
79. Ch.G1023848--
309. For cars with integrated bumpers För bilar med integrerade stötfångare
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G18

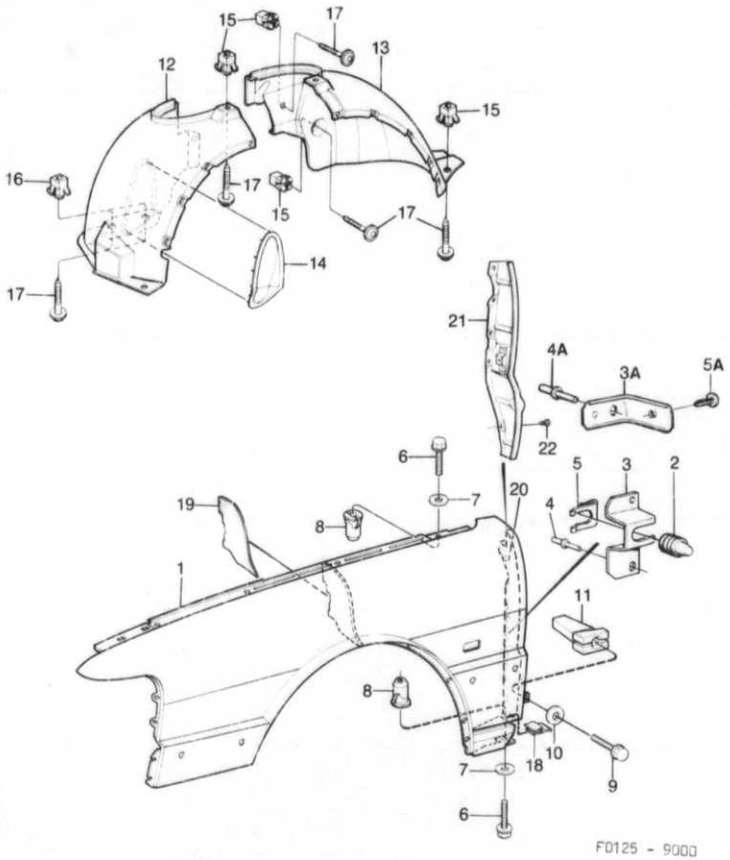

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 52 677		-1985, LH	1	Front fender	Framskärm	3
0020	1	92 52 669		-1985, RH	1	Front fender	Framskärm	3
0030	1	92 73 939		1986-, LH	1	Front fender	Framskärm	3
0040	1	92 73 921		1986-, RH	1	Front fender	Framskärm	3
0050	2	92 68 111		62)	2	Buffer	Buffert	3
0060	3	92 68 129		62) LH	1	Bracket	Fäste	4
0070	3	92 68 137		62) RH	1	Bracket	Fäste	4
0080	4	79 72 490		62)	4	Rivet	Nit	5
0090	5	92 68 145		62)	2	Clip	Clips	5
0100	3A	92 40 078		63), -1987	2	Bracket	Hållare	4
0110	4A	79 72 490		63), -1987	2	Rivet	Nit	5
0120	4A	79 72 490		1988-	10	Rivet	Nit	5
0130	5A	73 98 555		63)	2	Screw	Skruv	5
0140	6	79 74 694		-1987	10	Screw	Skruv	5
0150	6	*73 99 223*		1988- NLS - USE 7974694	10	Screw	Skruv	5
0160	7	73 98 829		(7311764)	10	Washer	Bricka	5
0170	8	92 68 913			10	Cage nut	Korgmutter	5
0180	9	*92 52 966*		NLS - USE 7923014	2	Screw	Skruv	5
0190	10	80 29 977			2	Washer	Bricka	5
0200	11	92 52 958			2	Clip	Clips	3
0210								
0220	12	*92 67 832*		-1986, LH NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0230	12	*69 55 371*		126,459) LH, A NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0240	12	*69 55 413*		1987-,459) LH NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0250	12	*69 58 938*		459) LH, 4D NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0260	12	*69 61 577*		459) LH, 4D, A NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0270	12	*69 45 315*		460) LH NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0280	12	*92 67 824*		-1986, RH NLS - USE 6945380	1	Wheel housing	Hjulhus	5
0290	12	*69 55 405*		1987, RH NLS - USE 6945380	1	Wheel housing	Hjulhus	5
0300	12	69 45 380		1988-, RH	1	Wheel housing	Hjulhus	5
0310								
0320	13	*92 48 519*		14) LH NLS - USE 6945356	1	Wheel housing	Hjulhus	5
0340	13	*92 74 697*		-1986,15) LH NLS - USE 6945356	1	Wheel housing	Hjulhus	5
0350	13	69 45 356		1987-, LH	1	Wheel housing	Hjulhus	5
0355	13	*92 48 501*		14) RH NLS - USE 6955447	1	Wheel housing	Hjulhus	5
0360	13	*92 74 689*		-1986,15) RH NLS - USE 6955447	1	Wheel housing	Hjulhus	5
0370	13	69 55 447		1987-, RH	1	Wheel housing	Hjulhus	5
0380								
0390	14	92 62 601			2	Cover	Kåpa	3
0400	15	79 75 261			10	Nut	Mutter	5
0410	16	79 75 279			4	Nut	Mutter	5
0420	17	79 77 465			14	Screw	Skruv	5
0430	18	*69 55 652*		-1987, LH,(9273954) NLS - USE 6959811	1	Protection	Skydd	5
0440	18	69 59 811		1988-, LH	1	Protection	Skydd	5

14. Ch. --F4004175
15. Ch. F4004176--
62. LH, Ch. --G1016483, RH, Ch. --G1012253
63. LH, Ch. G1016484--, RH, Ch. G1012254--
126. Ch. G1027959--
459. Ch. --K1004821, --K2002185, --K8000031
460. Ch. K1004822--, K2002186--, K8000032--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, fittings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G20

Front fender

Framskärm

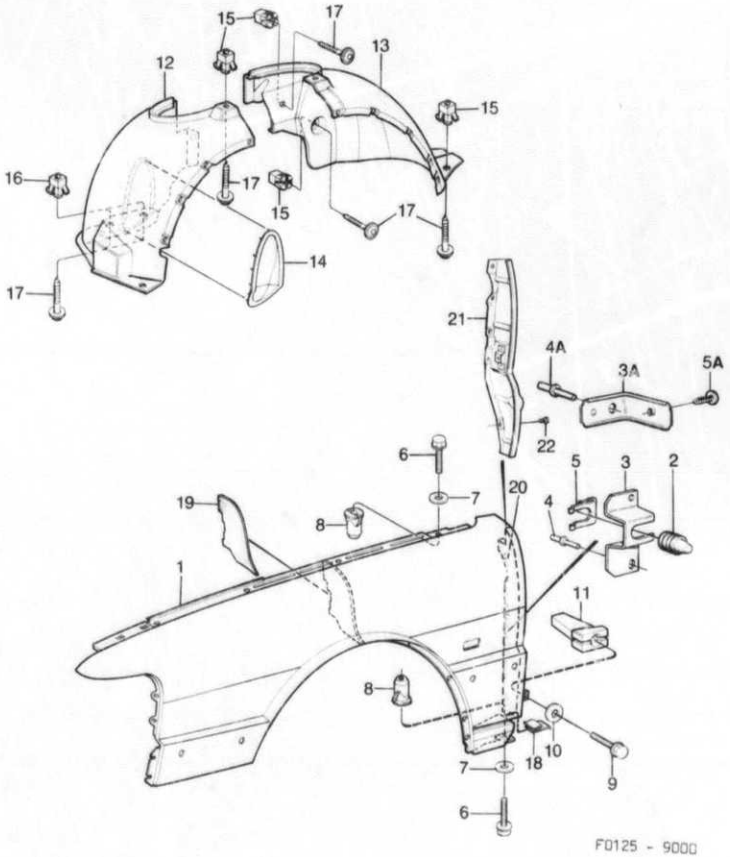

F0125 - 9000

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	18	*69 55 660*		-1987, RH,(9273947) NLS - USE 6959803	1	Protection	Skydd	5
0460	18	69 59 803		1988-, RH	1	Protection	Skydd	5
0470	19	*92 76 288*		-1985 NLS	2	Screen	Avskärmning	5
0480	19	92 76 312		58)	2	Screen	Avskärmning	5
0490	19	92 79 860		59)	2	Screen	Avskärmning	5
0500	20	69 57 708			2	Screen	Avskärmning	5
0510	21	69 73 333		1988-, LH	1	End p	Gavel	5
0520	21	*69 73 325*		1988-, RH NLS - USE 4296208, 9240078	1	End p	Gavel	5
0530	22	79 72 516		1988-	5	Rivet	Nit	5

58. Ch. -G1014941
59. Ch. G1014942-

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G22

Front doors, hinges, window regulators

Framdörrar, gångjärn, fönsterhissar

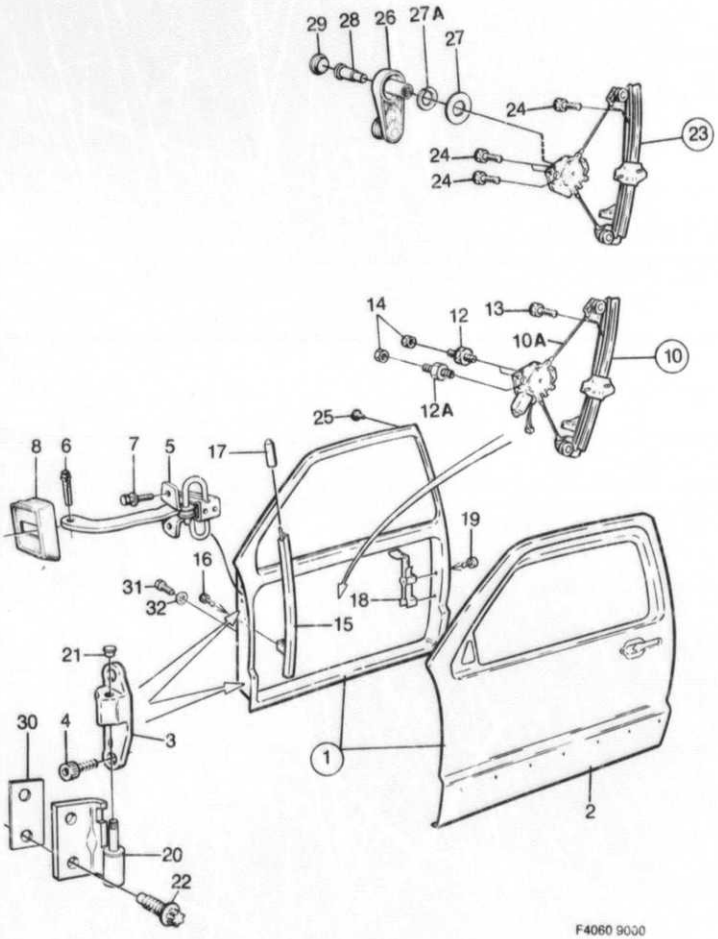

F4060 9000

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	69 75 791		-1985, LH (9252693)	1	Door	Dörr	4
0020	1	69 75 791		1986, LH (9276619)	1	Door	Dörr	4
0030	1	69 75 791		1987, LH (6958854)	1	Door	Dörr	4
0040	1	69 75 791		1988, LH (6962674)	1	Door	Dörr	4
0050	1	69 75 791		1989-,500) LH	1	Door	Dörr	4
0060	1	69 75 783		-1985, RH (9252685)	1	Door	Dörr	4
0070	1	69 75 783		1986, RH (9276601)	1	Door	Dörr	4
0080	1	69 75 783		1987, RH (6958847)	1	Door	Dörr	4
0090	1	69 75 783		1988, RH (6962666)	1	Door	Dörr	4
0100	1	69 75 783		1989-,500) RH	1	Door	Dörr	4
0110	2	92 52 719		LH	1	▪Outer panel	▪Ytterplåt	3
0120	2	92 52 701		RH	1	▪Outer panel	▪Ytterplåt	3
0130	3	82 84 085		-1986, LH (9257452)	2	Hinge kit	Gångjärnssats	5
0140	3	82 84 077		-1986, RH (9257445)	2	Hinge kit	Gångjärnssats	5
0150	3	82 84 085		1987, LH (6958979)	2	Hinge kit	Gångjärnssats	5
0160	3	82 84 077		1987, RH (6958961)	2	Hinge kit	Gångjärnssats	5
0170	3	*69 61 718*		1988-, LH NLS - USE 4306809	2	Hinge	Gångjärn	5
0180	3	*69 61 700*		1988-, RH NLS - USE 4306791	2	Hinge	Gångjärn	5
0190	4	73 98 761		(9267535)	8	Screw	Skruv	5
0200	5	92 79 886		(9250697)	2	Restrainer	Dörrstopp	6
0210	6	92 67 477			2	Pipe set	Rörsats	5
0220	7	92 70 257			4	Screw	Skruv	5
0230	8	92 68 194			2	Protection	Skydd	5
0240	10	92 55 217		535) LH	1	Window lift	Fönsterhiss	5
0250	10	92 55 209		535) RH	1	Window lift	Fönsterhiss	
0260	10A	82 85 280			1	▪Cable	▪Wire	9
0270		43 03 186			3	▪▪Absorber	▪▪Dämpare	5
0280	12	*92 63 823*		NLS - USE 4303186	4	▪Absorber	▪Dämpare	5
0290	12A	*92 68 608*		NLS - USE 4303186	2	▪Absorber	▪Dämpare	5
0300	13	79 69 223			6	Screw	Skruv	5
0310	14	79 71 658			6	Nut	Mutter	5
0320	15	*92 61 272*		LH NLS - USE 4089694	1	Guide moulding	Styrlist	5
0330	15	*92 61 264*		RH NLS - USE 4089686	1	Guide moulding	Styrlist	5
0340	16	79 69 223			2	Screw	Skruv	5
0350	17	92 63 658			2	Protecting cap	Skyddshuv	5
0360	18	92 62 353		LH	1	Bracket	Hållare	5
0370	18	92 62 346		RH	1	Bracket	Hållare	5
0380	19	79 75 196		-1987	2	Screw	Skruv	5
0390	19	79 79 610		1988-	2	Screw	Skruv	5
0400	20	*92 57 494*		-1987, LH NLS - USE 8284085	2	Hinge	Gångjärn	4
0410	20	*92 57 486*		-1987, RH NLS - USE 8284077	2	Hinge	Gångjärn	4
0420	20	69 60 793		1988-, LH	2	Hinge	Gångjärn	4
0430	20	69 60 785		1988-, RH	2	Hinge	Gångjärn	4
0440	21	92 59 938			4	Plug	Plugg	5
0450	22	73 98 761		(9267535)	8	Screw	Skruv	5
0460	23	*92 55 175*		1987-, LH NLS - USE 6993034	1	Window lift	Fönsterhiss	5
0470	23	*92 55 167*		1987-, RH NLS - USE 6993026	1	Window lift	Fönsterhiss	5
0480	24	79 69 223		1987-	12	Screw	Skruv	5
0490	25	69 30 572		1986-	2	Plug	Plugg	5
0500	26	*97 54 771*		1987 NLS - USE 9534322	2	Crank	Vev	4
0510	26	95 34 322		1988-	2	Crank	Vev	4
0520	27	97 59 671		1987-	2	Washer	Bricka	5
0530	27A	79 69 967		1987-	2	Washer	Bricka	5
0540	28	98 35 737		1987-	2	Screw	Skruv	5
0550	29	97 59 689		1987	2	Cover	Lock	4

500. Also valid for SE 1988B. Gäller även för SE 1988B.
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-G24

Front doors, hinges, window regulators

Framdörrar, gångjärn, fönsterhissar

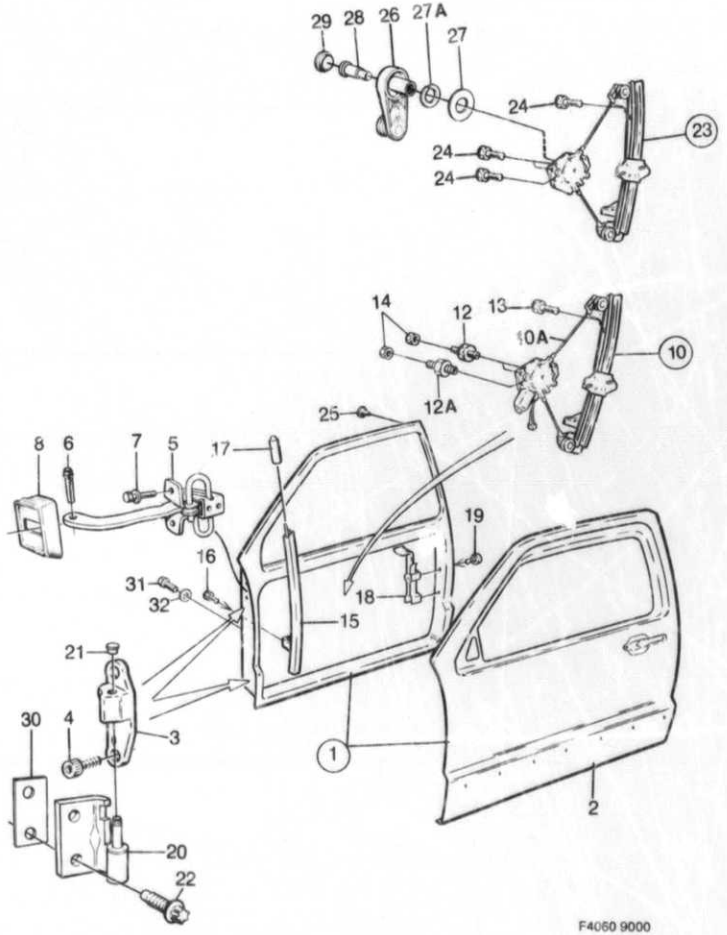

F4060 9000

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	29	95 34 355		1988-	2	Cover	Lock	4
0570	30	92 79 514		1986-	X	Spacer	Mellanlägg	3
0580	31	79 72 466		1986-	4	Screw	Skruv	5
0590	32	80 29 969		1986-	4	Washer	Bricka	5
0600		82 84 085		1988-, LH	1	Hinge kit	Gångjärnssats	5
0610				See page 8A-133, 4-K14				
0620		82 84 077		1988-, RH	1	Hinge kit	Gångjärnssats	5
0630				See page 8A-133, 4-K14				
0640		85 47 291		535) 1987-, I	1	Window lift	Fönsterhiss	5
0650				See page 8A-129, 4-K10				
0660		85 47 333		1987, I	1	Cable harness	Ledningsnät	5
0670				See page 8A-129, 4-K10				
0680		85 47 473		1988-, I	1	Cable harness kit	Ledningsnätssats	5
0690				See page 8A-129, 4-K10				

535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H02

Rear doors, hinges, window regulators

Bakdörrar, gångjärn, fönsterhissar

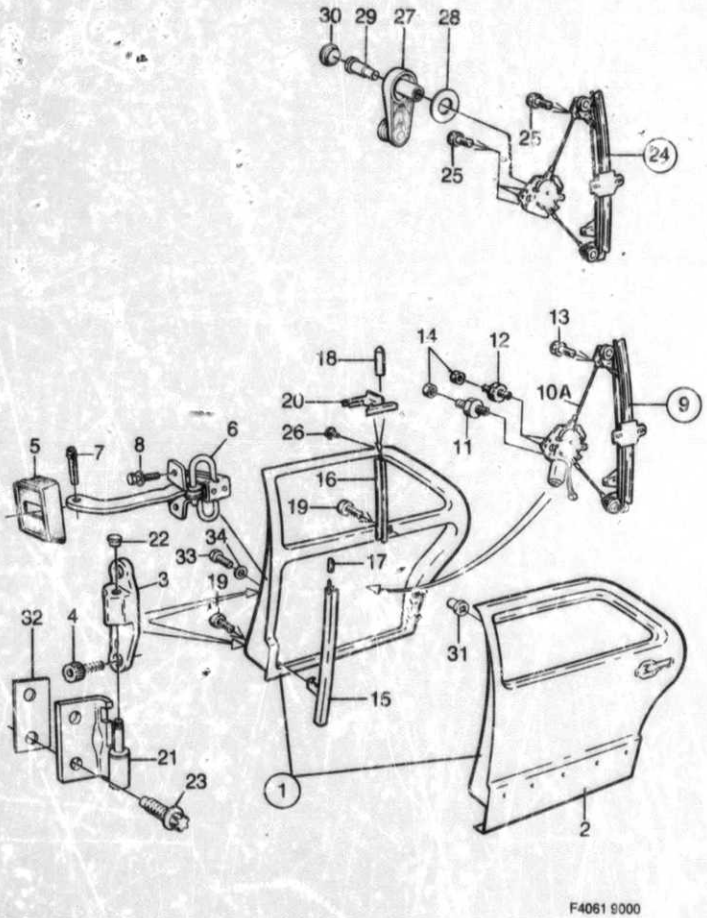

F4061 9000

0760	Pos	Part No/Art nr	K $	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1	*69 75 916*		-1985, LH (9252792) NLS - USE 4101812	1	Door	Dörr	5
0020	1	*69 75 916*		1986, LH (9276635) NLS - USE 4101812	1	Door	Dörr	5
0030	1	*69 75 916*		1987, LH (6958896) NLS - USE 4101812	1	Door	Dörr	5
0040	1	*69 75 916*		1988, LH (6962690) NLS - USE 4101812	1	Door	Dörr	5
0050	1	*69 75 916*		1989-,500) LH NLS - USE 4101812	1	Door	Dörr	5
0060	1	*69 75 908*		-1985, RH (9252784) NLS - USE 4101804	1	Door	Dörr	5
0070	1	*69 75 908*		1986, RH (9276627) NLS - USE 4101804	1	Door	Dörr	5
0080	1	*69 75 908*		1987, RH (6958888) NLS - USE 4101804	1	Door	Dörr	5
0090	1	*69 75 908*		1988, RH (6962682) NLS - USE 4101804	1	Door	Dörr	5
0100	1	*69 75 908*		1989-,500) RH NLS - USE 4101804	1	Door	Dörr	5
0110	2	92 52 776		LH	1	.Outer panel	.Ytterplåt	5
0120	2	92 52 768		RH	1	.Outer panel	.Ytterplåt	5
0130	3	82 84 085		-1986, LH (9257452)	2	Hinge kit	Gångjärnssats	5
0140	3	82 84 077		-1986, RH (9257445)	2	Hinge kit	Gångjärnssats	5
0150	3	82 84 085		1987, LH (6958979)	2	Hinge kit	Gångjärnssats	5
0160	3	82 84 077		1987, RH (6958961)	2	Hinge kit	Gångjärnssats	5
0170	3	*69 61 718*		1988-, LH NLS - USE 4306809	2	Hinge	Gångjärn	5
0180	3	*69 61 700*		1988-, RH NLS - USE 4306791	2	Hinge	Gångjärn	5
0190	4	73 98 761		(9267535)	8	Screw	Skruv	5
0200	5	92 62 627			2	Protection	Skydd	5
0210	6	92 79 886		(9250697)	2	Restrainer	Dörrstopp	6
0220	7	92 67 477			2	Pipe set	Rörsats	5
0230	8	92 70 257			4	Screw	Skruv	5
0240	9	92 55 233		535) LH	1	Window lift	Fönsterhiss	5
0250	9	92 55 225		535) RH	1	Window lift	Fönsterhiss	5
0260	10A	82 85 298			1	.Cable	.Wire	9
0270		43 03 186			3	..Absorber	..Dämpare	5
0280	11	*92 63 823*		NLS - USE 4303186	4	.Absorber	.Dämpare	5
0290	12	*92 66 608*		NLS - USE 4303186	2	.Absorber	.Dämpare	5
0300	13	79 69 223			6	Screw	Skruv	5
0310	14	79 71 658			6	Nut	Mutter	5
0320	15	92 61 256		LH	1	Guide moulding	Styrlist	5
0330	15	92 61 249		RH	1	Guide moulding	Styrlist	5
0340	16	*92 61 231*		LH NLS - USE 4094132	1	Guide moulding	Styrlist	5
0350	16	*92 61 223*		RH NLS - USE 4094124	1	Guide moulding	Styrlist	5
0360	17	92 48 006			2	Protecting cap	Skyddshuv	5
0370	18	92 63 658			2	Protecting cap	Skyddshuv	5
0380	19	79 69 223			4	Screw	Skruv	5
0390	20	92 63 641			2	Spacer	Mellanlägg	5
0400	21	*92 57 494*		-1987, LH NLS - USE 8284085	2	Hinge	Gångjärn	4
0410	21	*92 57 486*		-1987, RH NLS - USE 8284077	2	Hinge	Gångjärn	4
0420	21	69 60 793		1988-, RH	2	Hinge	Gångjärn	4
0430	21	69 60 785		1988-, RH	2	Hinge	Gångjärn	4
0440	22	92 59 938			4	Plug	Plugg	5
0450	23	73 98 761		(9267535)	8	Screw	Skruv	5
0460	24	*92 55 191*		1987-, LH NLS - USE 6993059	1	Window lift	Fönsterhiss	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H04

Rear doors, hinges, window regulators

Bakdörrar, gångjärn, fönsterhissar

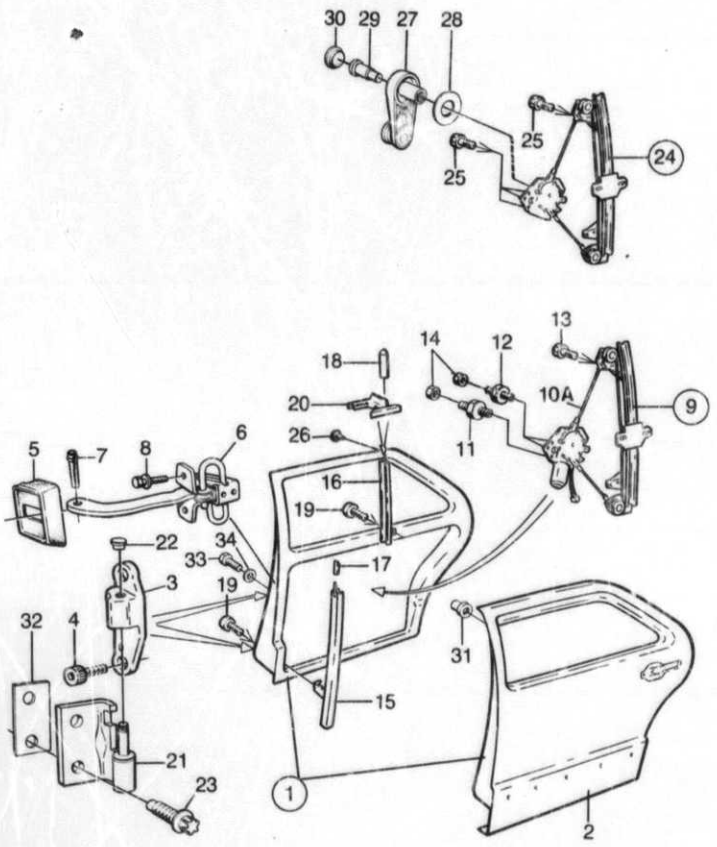

F4061 9000

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	24	*92 55 183*		1987-, RH NLS - USE 6993042	1	Window lift	Fönsterhiss	5
0470								
0480	25	79 69 223		1987-	12	Screw	Skruv	5
0490	26	69 30 572		1986-	2	Plug	Plugg	5
0500	27	*97 54 771*		1987 NLS - USE 9534322	2	Crank	Vev	4
0510	27	95 34 322		1988-	2	Crank	Vev	4
0520	28	97 59 671		1987-	2	Washer	Bricka	5
0530	28A	79 69 967		1987-	2	Washer	Bricka	5
0540	29	98 35 737		1987-	2	Screw	Skruv	5
0550	30	97 59 689		1987-	2	Cover	Lock	4
0560	30	95 34 355		1988-	2	Cover	Lock	4
0570	31	92 58 807			20	Bolt	Bult	5
0580	32	92 79 514		1986-	X	Spacer	Mellanlägg	3
0590	33	79 72 466		1986-	4	Screw	Skruv	5
0600	34	80 29 969		1986-	4	Washer	Bricka	5
0610		82 84 085		1988-, LH	1	Hinge kit	Gångjärnssats	5
0620				See page 8A-133, 4-K14				
0630		82 84 077		1988-, RH	1	Hinge kit	Gångjärnssats	5
0640				See page 8A-133, 4-K14				
0650		85 47 309		1987-, I	1	Window lift	Fönsterhiss	5
0660				See page 8A-129, 4-K10				
0670		85 47 390		5), 1987-, I	1	Cable harness	Ledningsnät	5
0680				See page 8A-133, 4-K14				

5. Rear Bakre

MASTER INDEX

0	**General**	1-A02
2	**Engine**	1-B02
3A	**Electrical system, general**	2-A02
3B	**Electrical, contact housing**	3-A02
4	**Transmission**	3-H02
5	**Brakes**	4-A02
6	**Front assembly, Steering**	4-C02
7	**Suspension, Wheels**	4-E02
8A	**Body, external**	4-F02
8B	**Body, internal**	5-A02
8C	**Body, heating and ventilation**	6-A02
9	**Tools, Labels**	6-C02
10	**Numerical register**	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H06

Door lock
Front door

Dörrlås
Framdörr

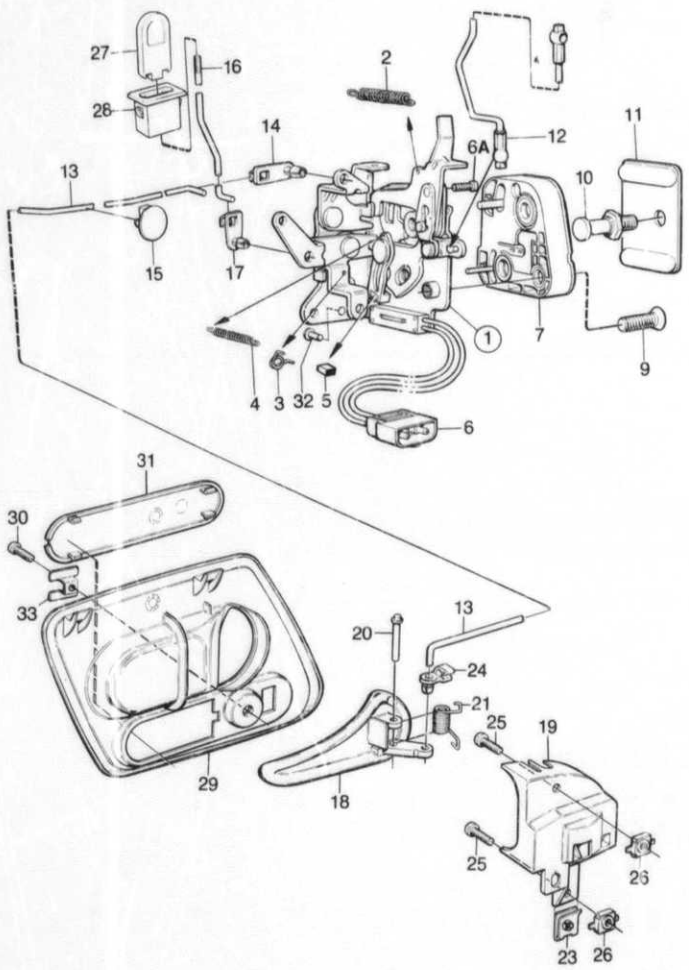

F2486 - 9000

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 53 519*		LH NLS - USE 4093050	1	Door lock	Dörrlås	4
0020	1	*92 53 527*		RH NLS - USE 4093308	1	Door lock	Dörrlås	4
0030	1	*92 53 535*		LH FOR RHD NLS - USE 4093316	1	Door lock	Dörrlås	4
0040	1	*92 53 501*		RH FOR RHD NLS - USE 4093043	1	Door lock	Dörrlås	4
0050	2	92 57 080			2	.Spring	.Fjäder	5
0060	3	92 57 171		LH	1	.Spring	.Fjäder	5
0070	3	92 57 163		RH	1	.Spring	.Fjäder	5
0080	4	92 63 401			2	.Spring	.Fjäder	5
0090	5	95 08 011			2	.Magnet	.Magnet	4
0100	6	95 05 454			2	.Contact	.Kontakt	3
0110	6A	80 59 214			2	Screw	Skruv	5
0120	7	*92 53 451*		-1988, LH NLS - USE 6948970	1	Door lock	Dörrlås	4
0130	7	69 48 970		1989-,500) LH	1	Door lock	Dörrlås	4
0140	7	*92 53 444*		-1988, RH NLS - USE 6948962	1	Door lock	Dörrlås	4
0150	7	69 48 962		1989-,500) RH	1	Door lock	Dörrlås	4
0160	9	80 56 228		-1988	6	Screw	Skruv	5
0170	9	79 82 184		1989-,500)	6	Screw	Skruv	5
0180	10	*92 58 252*		-1988 NLS - USE 6947824	2	Pin	Tapp	5
0190	10	69 91 004		1989-,500)	2	Pin	Tapp	5
0200	11	*92 68 483*		-1988 NLS - USE 4251518	2	Spacer	Distans	6
0210	11	69 91 012		1989-,500)	2	Spacer	Distans	6
0220	12	92 79 340		76) LH (9263633)	1	Rod	Stång	5
0230	12	92 79 340		77) LH	1	Rod	Stång	5
0240	12	92 79 332		76) RH (9263625)	1	Rod	Stång	5
0250	12	92 79 332		77) RH	1	Rod	Stång	5
0260	13	92 62 031		LH	1	Rod	Stång	5
0270	13	92 62 023		RH	1	Rod	Stång	5
0280	14	84 53 755			2	Clip	Clips	5
0290	15	92 63 583			2	Clip	Clips	5
0300	16	*92 59 615*		LH NLS - USE 4089975	1	Rod	Stång	5
0310	16	*92 59 607*		RH NLS - USE 4089967	1	Rod	Stång	5
0320	17	84 53 755			2	Clip	Clips	5
0330	18	97 54 763		LH	1	Handle	Handtag	5
0340	18	97 54 755		RH	1	Handle	Handtag	5
0350	19	97 69 118		LH	1	Bracket	Konsol	6
0360	19	97 69 100		RH	1	Bracket	Konsol	6
0370	20	97 76 139			2	Rivet	Nit	5
0380	21	97 76 188		LH	1	Return spring	Returfjäder	5
0390	21	97 76 105		RH	1	Return spring	Returfjäder	5
0400	23	97 76 121			2	Nut	Mutter	3
0410	24	97 82 566			2	Clamp	Klämma	5
0420	25	80 59 396			4	Screw	Skruv	5
0430	26	79 74 231			4	Cage nut	Korgmutter	5
0440	27	97 62 030		444)	2	Lock button	Låsknapp	5
0450	27	40 37 735		445)	2	Lock button	Låsknapp	5
0460	28	97 62 048			2	Bushing	Bussning	4
0470	29	95 78 808		285) LH (9758152)	1	Attaching plate	Fästplatta	6
0480	29	95 78 808		286) LH	1	Attaching plate	Fästplatta	6
0490	29	*97 58 145*		285) RH NLS - USE 9578790	1	Attaching plate	Fästplatta	6
0500	29	95 78 790		286) RH	1	Attaching plate	Fästplatta	6
0510	30	79 72 888		1985	2	Screw	Skruv	5

76. Ch.- G1021137
77. Ch.G1021138--
285. Ch. -H1035251, --J2000448, --H8002010
286. Ch. H1035252--, J2000449-, H8002011--
444. Ch. -K1005610, --K2002628, --K8000427, SE 1988B: --J1050546, --J2031579
445. Ch. K1005611--, K2002629-, K8000428--, SE 1988B: J1050547--, J2031580--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H08

Door lock
Front door

Dörrlås
Framdörr

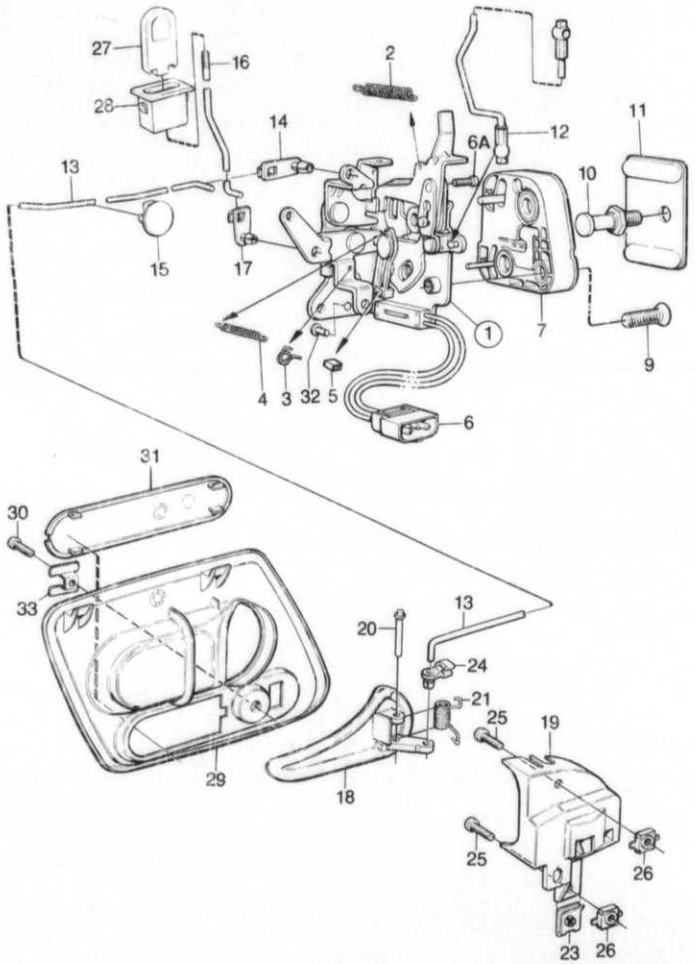

F2486 - 9000

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	30	*79 72 896*		1986-,285) NLS - USE 7965684, 8073090	2	Screw	Skruv	5
0530	30	79 65 684		286)	2	Screw	Skruv	6
0540	31	97 58 186		535)	1	Cover washer	Täckbricka	5
0550	31	97 58 186			2	Cover washer	Täckbricka	5
0560	32	95 08 094			4	Rivet	Nit	5
0570	33	95 78 386		286)	2	Washer	Bricka	6

285. Ch. --H1035251, --J2000448, --H8002010
286. Ch. H1035252--, J2000449--, H8002011--
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H10

Door lock
Rear door

Dörrlås
Bakdörr

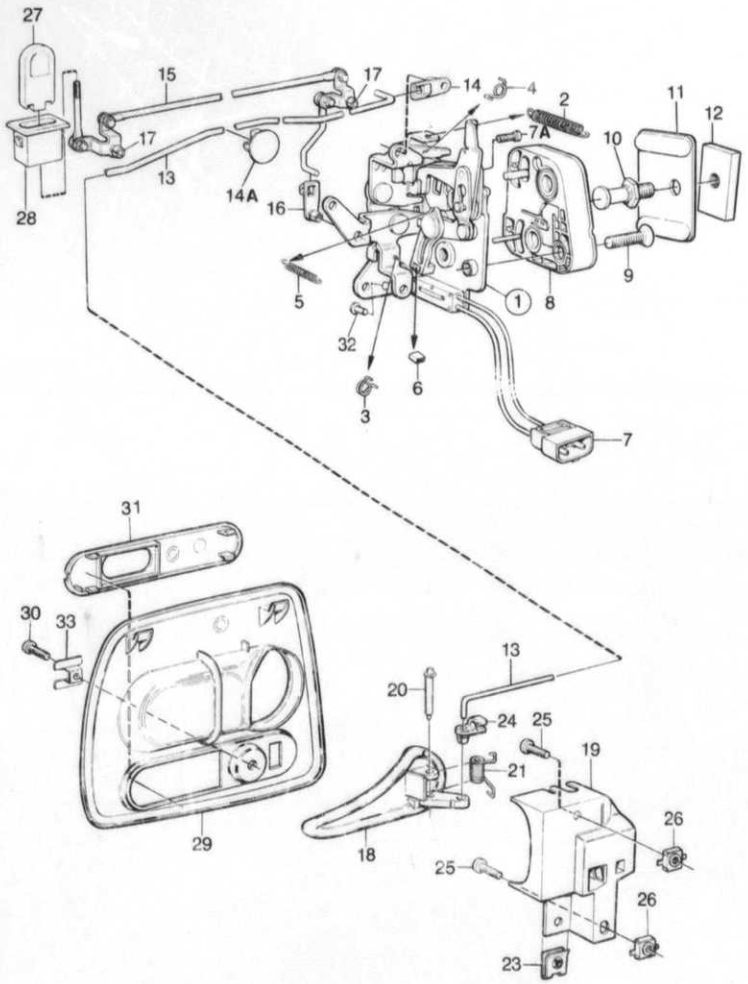

F2487 - 9000

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 53 410*		-1985, LH NLS - USE 9275306	1	Door lock	Dörrlås	4
0030	1	92 75 306		1986-,150) LH	1	Door lock	Dörrlås	4
0040	1	69 56 429		151) LH	1	Door lock	Dörrlås	4
0042	1	*92 53 402*		-1985, RH NLS - USE 9275298	1	Door lock	Dörrlås	4
0050	1	92 75 298		1986-,150) RH	1	Door lock	Dörrlås	4
0060	1	69 56 411		151) RH	1	Door lock	Dörrlås	4
0070	2	92 57 080			2	.Spring	.Fjäder	5
0080	3	92 57 171		LH	1	.Spring	.Fjäder	5
0090	3	92 57 163		RH	1	.Spring	.Fjäder	5
0100	4	92 59 433		LH	1	.Spring	.Fjäder	5
0110	4	92 59 425		RH	1	.Spring	.Fjäder	5
0120	5	92 63 401			2	.Spring	.Fjäder	5
0130	6	95 08 011			2	.Magnet	.Magnet	4
0140	7	95 05 454			2	.Contact	.Kontakt	3
0150	7A	80 59 214			2	Screw	Skruv	5
0160	8	*92 53 451*		-1988, OUTER, LH NLS - USE 6948970	1	Door lock	Dörrlås	4
0170	8	69 48 970		1989-,500) OUTER, LH	1	Door lock	Dörrlås	4
0180	8	*92 53 444*		-1988, OUTER, RH NLS - USE 6948962	1	Door lock	Dörrlås	4
0190	8	69 48 962		1989-,500) OUTER, RH	1	Door lock	Dörrlås	4
0200	9	80 56 228		-1988	6	Screw	Skruv	5
0210	9	79 82 184		1989-,500)	6	Screw	Skruv	5
0220	10	*92 58 252*		-1988 NLS - USE 6947824	2	Pin	Tapp	5
0230	10	69 91 004		1989-,500)	2	Pin	Tapp	5
0240	11	*92 68 483*		-1988 NLS - USE 4251518	2	Spacer	Distans	6
0250	11	69 91 012		1989-,500)	2	Spacer	Distans	6
0260	12	*92 60 183*		NLS - USE 9085077	2	Plate	Platta	6
0270	13	69 54 341		-1985, LH (9255258)	1	Rod	Stång	5
0280	13	69 54 341		1986-,150) LH	1	Rod	Stång	5
0290	13	69 56 676		151) LH	1	Rod	Stång	5
0300	13	*92 55 241*		-1985, RH NLS - USE 6954333	1	Rod	Stång	5
0310	13	69 54 333		1986-,150) RH	1	Rod	Stång	5
0320	13	69 56 668		151) RH	1	Rod	Stång	5
0330	14	84 53 755			2	Clip	Clips	5
0340	14A	92 63 583			2	Clip	Clips	5
0350	15	92 63 617		-1987, LH	1	Latch	Regel	5
0360	15	69 48 640		1988-, LH	1	Latch	Regel	5
0370	15	92 63 609		-1987, RH	1	Latch	Regel	5
0380	15	69 48 632		1988-, RH	1	Latch	Regel	5
0390	16	84 53 755			2	Clip	Clips	5
0400	17	92 66 644			2	Clip	Clips	5
0410	18	97 54 763		LH	1	Handle	Handtag	5
0420	18	97 54 755		RH	1	Handle	Handtag	5
0430	19	97 69 134		LH	1	Bracket	Konsol	6
0440	19	97 69 126		RH	1	Bracket	Konsol	6
0450	20	97 76 139			2	Rivet	Nit	5
0460	21	97 76 188		LH	1	Return spring	Returfjäder	5
0470	21	97 76 105		RH	1	Return spring	Returfjäder	5
0480	23	97 76 121			2	Nut	Mutter	3
0490	24	97 82 566			2	Clamp	Klämma	5
0500	25	80 59 [illegible]			4	Screw	Skruv	5
0510	26	79 74 231			4	Cage nut	Korgmutter	5
0520	27	97 62 030		444)	2	Lock button	Låsknapp	5

150. Ch. --H1013339, --H8000537
151. Ch. H1013340--, H8000538--
444. Ch. --K1005610, --K2002628, --K8000427, SE 1988B: --J1050546, --J2031579
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H12

Door lock
Rear door

Dörrlås
Bakdörr

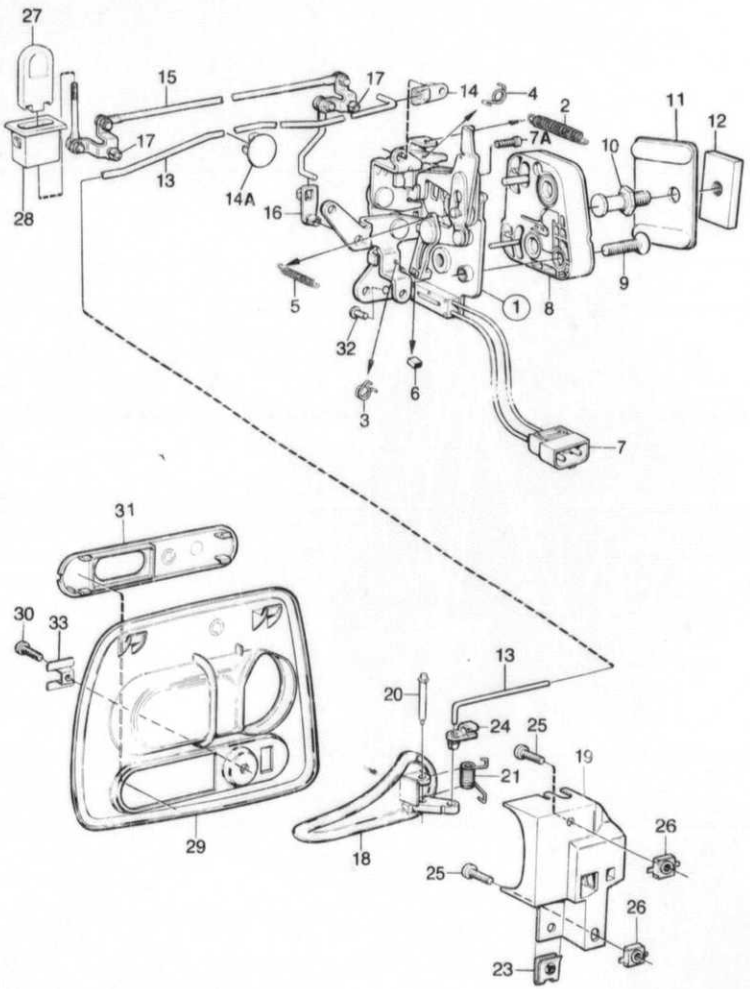

F2487 - 9000

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	27	40 37 735		445)	2	Lock button	Låsknapp	5
0540	28	97 62 048			2	Bushing	Bussning	4
0550	29	95 78 824		285) LH (9758178)	1	Attaching plate	Fästplatta	6
0560	29	95 78 824		286) LH	1	Attaching plate	Fästplatta	6
0570	29	95 78 816		285) RH (9758160)	1	Attaching plate	Fästplatta	6
0580	29	95 78 816		286) RH	1	Attaching plate	Fästplatta	6
0590	30	79 72 888		1985	2	Screw	Skruv	5
0600	30	*79 72 896*		1986-,285) NLS - USE 7965684, 8073090	2	Screw	Skruv	5
0610	30	79 65 684		286)	2	Screw	Skruv	6
0620	31	97 67 559			2	Cover	Täcklock	5
0630	32	95 08 094			4	Rivet	Nit	5
0640	33	95 76 386		286)	2	Washer	Bricka	6


285. Ch. --H1035251, --J2000448, --H8002010
286. Ch. H1035252--, J2000449--, H8002011--
445. Ch. K1005611--, K2002629--, K8000428--, SE 1985B: J1050547--, J2031580--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

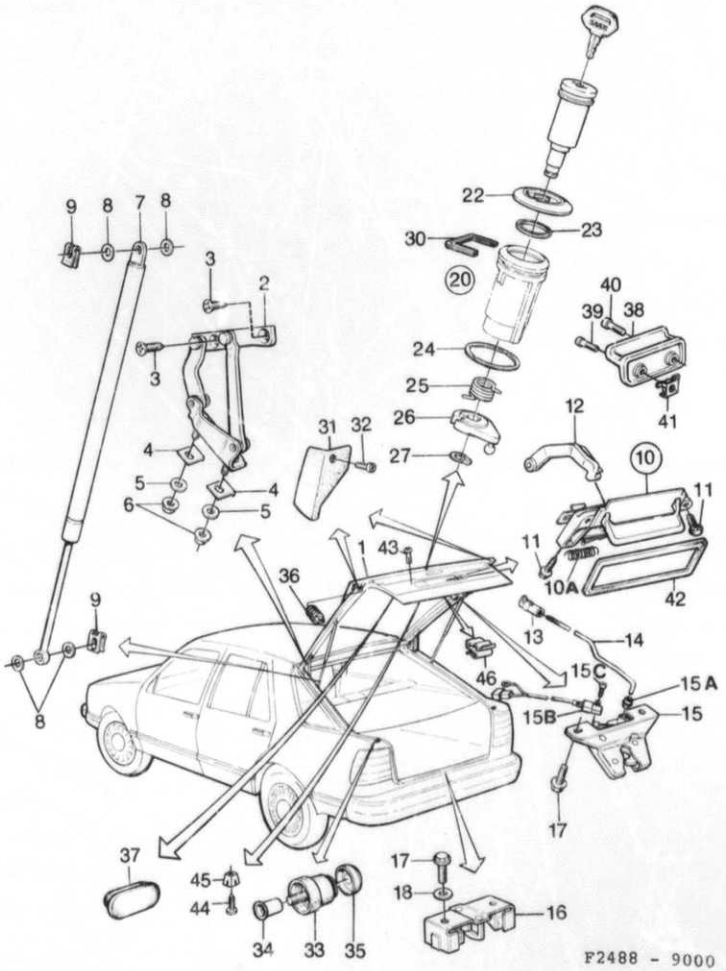

Doors, trunk lid

4-H14

Trunk door, hinges

Lock

Dörrar, bagagerumslucka

Bagagerumsdörr, gångjärn

Lås

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*92 52 800*		255) NLS - USE 6956288, 6958284	1	Trunk lid	Bagagelucka	4
0025	1	69 58 284		256)	1	Trunk lid	Bagagelucka	4
0030	2	92 55 530		LH	1	Hinge	Gångjärn	5
0040	2	92 55 522		RH	1	Hinge	Gångjärn	5
0045	3	80 56 160		169)	4	Screw	Skruv	5
0050	3	79 77 713		170),-1988	4	Screw	Skruv	5
0055	3	73 99 892		1989-	4	Screw	Skruv	5
0060	4	92 63 393		LH	2	Seal	Tätning	5
0070	4	92 63 385		RH	2	Seal	Tätning	5
0080	5	73 11 772			4	Washer	Bricka	5
0090	6	79 67 953			4	Nut	Mutter	5
0100	7	92 53 964		131)	2	Spring	Fjäder	3
0110	7	69 56 288		132)	2	Gas spring	Gasfjäder	5
0120	7	69 56 262		1986-,131,536)	2	Spring	Fjäder	3
0140	7	69 56 270		132,536)	2	Gas spring	Gasfjäder	3
0160	8	82 52 363			8	Washer	Bricka	5
0170	9	82 52 553			4	Clip	Clips	5
0180	10	*92 59 417*		-1986 NLS - USE 8284861	1	Handle	Handtag	5
0185	10	*69 60 298*		1987- NLS - USE 8284861	1	Handle	Handtag	5
0187	10	69 60 306		537)	1	Handle	Handtag	5
0188	10A	69 91 855			1	.Tension spring	.Dragfjäder	5
0190	11	*79 73 423*		NLS - USE 7977283	4	Screw	Skruv	5
0200	12	92 60 068			1	Control link	Manöverlänk	5
0205	12	92 52 214		537)	1	Control link	Manöverlänk	5
0210	13	92 56 488			1	Ball joint	Kulländ	5
0220	14	69 54 325		(9255084)	1	Control link	Manöverlänk	5
0230	15	92 52 198		463)	1	Lock	Lås	4
0232	15	69 92 184		464)	1	Lock	Lås	4
0240	15A	92 56 306			1	.Clip	.Clips	4
0242	15B	69 93 570		464) PART OF 6992184	1	.Switch	.Brytare	5
0244	15C	*80 59 206*		464) PART OF 8992184 NLS - USE 8059214	1	.Screw	.Skruv	6
0244								
0250	16	92 52 206			1	End plate	Slutbleck	5
0260	17	79 69 223			4	Screw	Skruv	5
0270	18	79 16 497		-1987	2	Washer	Bricka	5
0275	18	79 81 954		1988-	2	Washer	Bricka	5
0280	20			See page 8A-071, 4-H24	1	Lock	Lås	
0290	22	92 61 579			1	.Cover	.Täcklock	3
0300	23	92 62 163			1	.Seal	.Tätning	4
0310	24	*92 61 595*		NLS - USE 4092409	1	.Spacer	.Mellanlägg	4
0320	25	92 61 561			1	.Spring	.Fjäder	5
0330	26	92 61 538			1	.Companion flange	.Medbringare	3
0335	26	92 61 546		537)	1	.Companion flange	.Medbringare	3
0340	27	79 35 992			1	.E-circlip	.Spårryttare	5
0350	30	92 62 486			1	Clip	Clips	5
0360	31	92 64 433		LH	1	Protection	Skydd	5
0370	31	*92 64 425*		RH NLS - USE 4101127	1	Protection	Skydd	5
0380	32	80 59 578			2	Screw	Skruv	5
0390	33	92 68 947			2	Support	Stöd	5
0400	34	92 68 889		-1987	2	Nut	Mutter	5
0405	34	73 99 710		1988-	2	Nut	Mutter	5
0410	35	92 68 921			2	Protecting cap	Skyddshuv	5

131. Ch. --H1007931, --H8000099
132. Ch. H1007932--, H8000100--
169. Ch. --H1006093, --H8000576
170. Ch. H1006094--, H8000577--
255. Ch. --H1007931
256. Ch. H1007932--
463. Ch. --K1009547, --K2004988, --K8000444
464. Ch. K1009548--, K2004989--, K8000445--
536. Without spoiler Utan spoiler
537. Without central lock Utan centrallås

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H16

Trunk door, hinges
Lock

Bagagerumsdörr, gångjärn
Lås

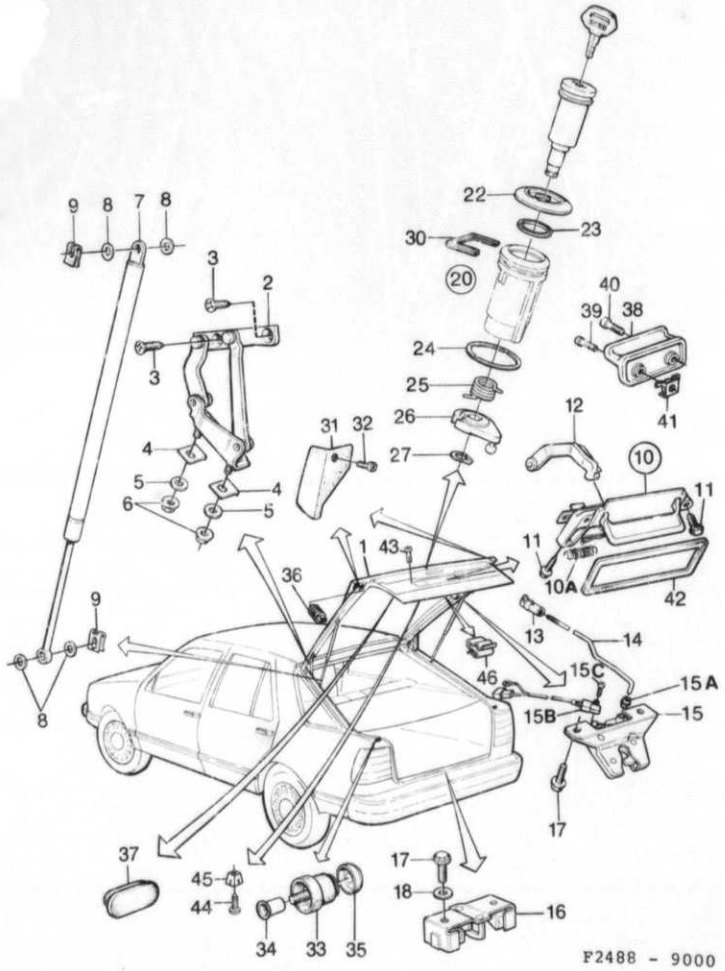

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	36	92 75 744			2	Buffer	Buffert	5
0430	37	73 98 886		30)	2	Plug	Plugg	5
0440	38	*97 67 682*		-1986 NLS - USE 9670548	1	Handle	Handtag	5
0450	38	96 70 548		1987-	1	Handle	Handtag	6
0460	39	84 26 199		1985 -	2	Screw	Skruv	5
0470	39	84 26 199		1986-	1	Screw	Skruv	5
0480	40	79 70 023		1986-	1	Screw	Skruv	5
0490	41	97 74 456		1985 -	1	Nut	Mutter	5
0500	41	79 74 231			1	Cage nut	Korgmutter	5
0510	42	69 56 189		HANDLE	1	Seal	Tätning	4
0520	43	92 21 987		US, CA, JA	2	Plug	Plugg	5
0540	44	79 70 536		464)	1	Screw	Skruv	6
0560	45	79 75 261		464)	1	Nut	Mutter	5
0580	46	40 11 698		464)	3	Clamp	Klämma	4

30. Ch. G1005827--
464. Ch. K1009548--, K2004989--, K8000445--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H18

Trunk lid, hinges, lock
4D

Baklucka, gångjärn, lås
4D

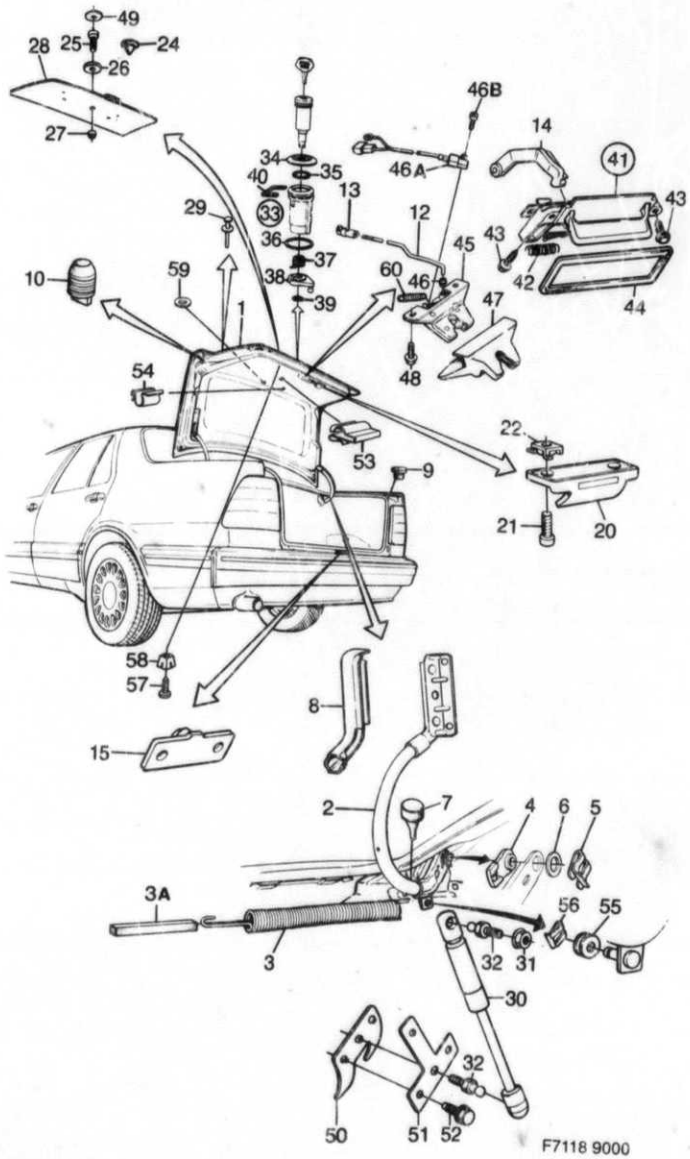

F7118 9000

0825	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*69 63 987*		NLS - USE 4006086, 4088274	1	Trunk lid	Bagagelucka	4
0020	2	69 63 995		LH	1	Hinge	Gångjärn	5
0030	2	69 63 953		RH	1	Hinge	Gångjärn	5
0040	3	69 61 866			2	Spring	Fjäder	5
0050	3A	• 43 05 330			2	Absorber	Dämpare	5
0060	4	92 25 475			2	Bushing	Bussning	3
0070	5	82 57 750			2	Locking	Låsning	5
0080	6	69 73 317			2	Washer	Bricka	5
0090	7	69 45 497		HINGE	2	Buffer	Buffert	5
0100	8	69 62 534		LH	1	Cover	Avtäckning	5
0110	8	69 62 526		RH	1	Cover	Avtäckning	5
0120	9	69 74 000			1	Protecting moulding	Skyddslist	5
0130	10	69 61 874		TRUNK LID	2	Buffer	Buffert	5
0140	12	69 63 029			1	Control rod	Manöverstång	5
0150	13	92 56 488			1	Ball joint	Kullänk	5
0160	14	69 56 791			1	Control link	Manöverlänk	5
0170	15	69 91 553			1	End plate	Slutbleck	5
0180	20	95 74 302			1	Handle	Handtag	5
0190	21	84 26 199			2	Screw	Skruv	5
0200	22	97 74 456			2	Nut	Mutter	5
0210	24	73 99 447			4	Plastic plug	Plastplugg	5
0220	24	73 99 447		US	3	Plastic plug	Plastplugg	5
0230	25	79 77 010		NOT US	1	Screw	Skruv	5
0240	26	69 62 567		NOT US	1	Washer kit	Bricksats	5
0250	27	73 99 629		461)	3	Nut	Mutter	5
0260	27	75 53 308		462)	3	Nut	Mutter	5
0270	27	73 99 629		461) US	4	Nut	Mutter	5
0280	27	75 53 308		462) US	4	Nut	Mutter	5
0290	28	*92 79 423*		NLS - USE 4005849, 9293911	1	Cover	Avtäckning	3
0300	28	69 55 306		US	1	Cover	Avtäckning	3
0310	29	92 79 621			10	Rivet	Nit	5
0320	30	69 76 369		390)	1	Spring	Fjäder	3
0330	31	79 67 953		390)	1	Nut	Mutter	5
0340	32	69 51 974		390)	2	Ballpin	Kultapp	5
0350	33			See page 8A-071, 4-H24	1	Lock	Lås	
0360	34	92 61 579			1	.Cover	.Täcklock	3
0370	35	92 62 163			1	.Seal	.Tätning	4
0380	36	*92 61 595*		NLS - USE 4092409	1	.Spacer	.Mellanlägg	4
0390	37	92 61 561			1	.Spring	.Fjäder	5
0400	38	92 61 538			1	.Companion flange	.Medbringare	3
0410	39	79 35 992			1	.E-circlip	.Spårryttare	5
0420	40	92 62 486			1	Clip	Clips	5
0430	41	*69 60 298*		NLS - USE 8284861	1	Handle	Handtag	5
0440	42	69 91 855			1	.Tension spring	.Dragfjäder	5
0450	43	*79 73 423*		NLS - USE 7977283	4	Screw	Skruv	5
0460	44	69 56 189			1	Seal	Tätning	4
0470	45	92 52 198		463)	1	Lock	Lås	4
0480	45	69 92 184		464)	1	Lock	Lås	4
0490	46	92 56 306			1	.Clip	.Clips	4
0500	46A	69 93 570		464) PART OF 6992184	1	.Switch	.Brytare	5
0510	46B	*80 59 206*		464) PART OF 6992184 NLS - USE 8059214	1	.Screw	.Skruv	6
0520	47	69 56 957		463)	1	Protection	Skydd	6
0530	47	40 10 260		464)	1	Protection	Skydd	6
0540	48	79 69 223			4	Screw	Skruv	5

390. Ch. J1024929--
461. Ch. --K1001371
462. Ch. K1001372--
463. Ch. --K1009547, --K2004988, --K8000444
464. Ch. K1009548--, K2004989--, K8000445--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H20

Trunk lid, hinges, lock
4D

Baklucka, gångjärn, lås
4D

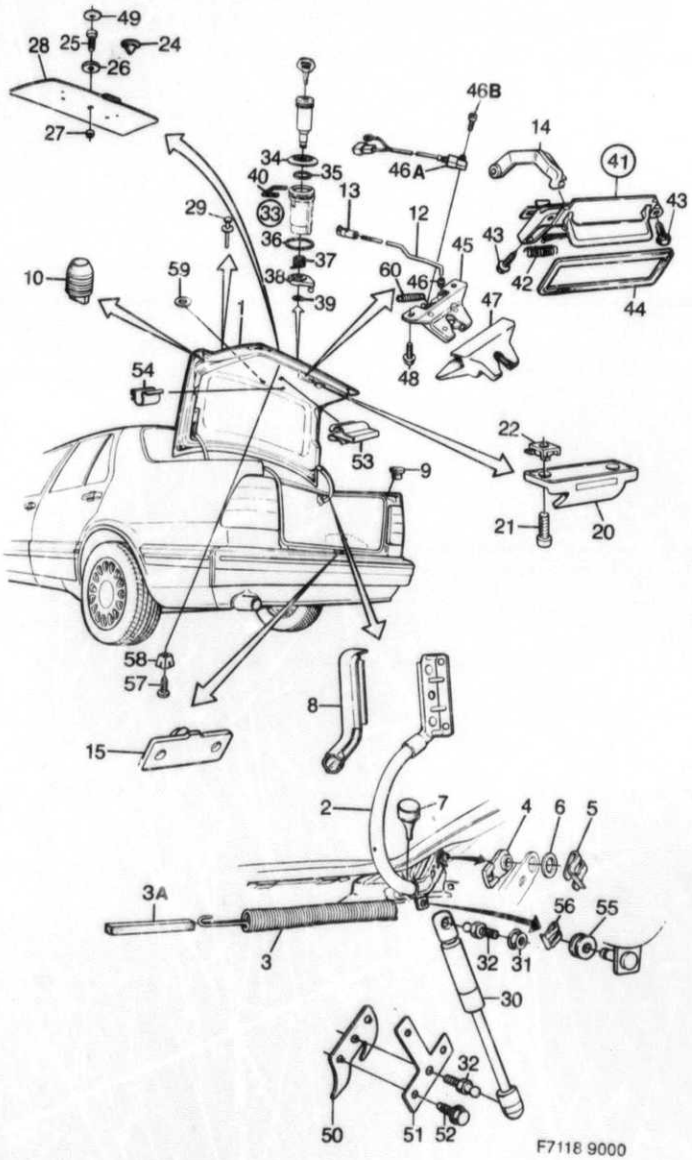

F7118 9000

0825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	49	69 75 403		1989-,500) NOT CA, JA	1	Absorber	Dämpare	3
0560	50	69 45 711		390)	1	Attaching plate	Fästplåt	5
0570	51	69 45 760		390)	1	Washer	Bricka	3
0580	52	79 75 451		390)	2	Screw	Skruv	5
0590	53	40 11 698		1989-,500)	2	Clamp	Klämma	4
0600	54	79 51 783		1989-,500)	1	Clamp	Klammer	5
0610	55	40 06 557			2	Bushing	Bussning	5
0620	56	82 52 553			2	Clip	Clips	5
0630	57	79 70 536		464)	1	Screw	Skruv	6
0640	58	79 75 261		464)	1	Nut	Mutter	5
0650	59	40 05 153		473)	2	Washer	Bricka	5
0660	60	40 88 209			1	Spring	Fjäder	5

390. Ch. J1024929--
464. Ch. K1009548--, K2004989--, K8000445--
473. Ch. K1011701--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H22

Outside handle
Ytterhandtag

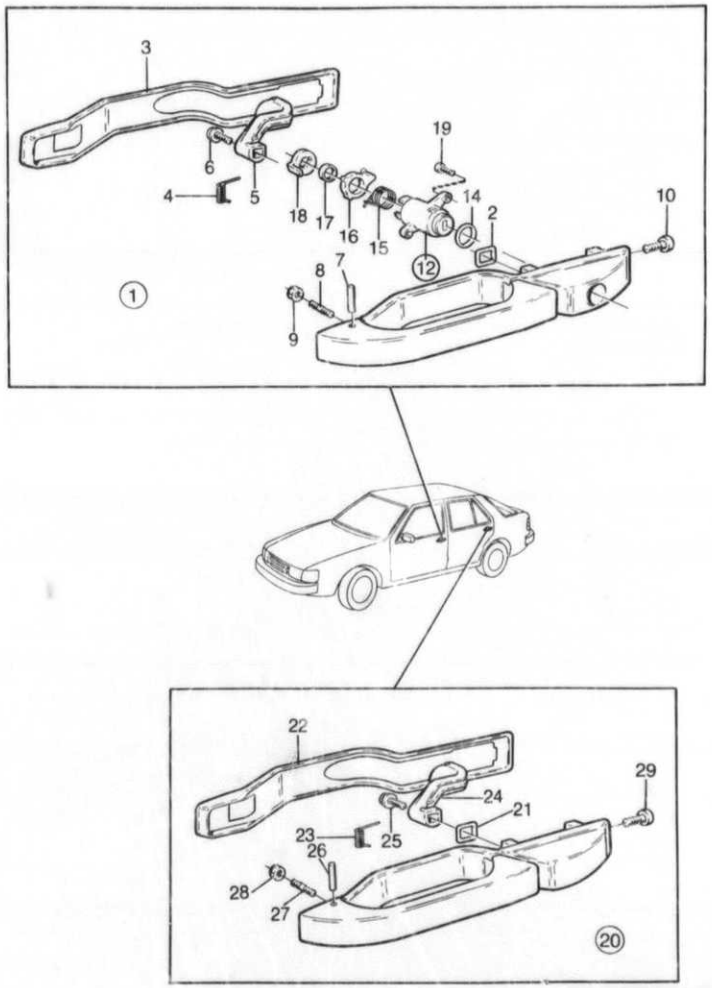

R 6392–9000

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 92 490		4,122) LH (9260217)	1	Handle	Handtag	5
0020	1	*69 54 119*		4,123,610) LH NLS - USE 4092490	1	Handle	Handtag	5
0030	1	*69 54 135*		4,123) LH, CHROME NLS - USE 4092516	1	Handle	Handtag	5
0040	1	40 92 482		4,122) RH (9260209)	1	Handle	Handtag	5
0050	1	*69 54 101*		4,123,610) RH NLS - USE 4092482	1	Handle	Handtag	5
0060	1	*69 54 127*		4,123) RH, CHROME NLS - USE 4092508	1	Handle	Handtag	5
0070	2	92 60 266			2	.Absorber	.Dämpare	4
0080	3	92 60 274		122)	2	.Seal	.Tätning	
0090	3	69 56 403		123)	2	.Seal	.Tätning	4
0100	4	92 60 290		LH	1	.Spring	.Fjäder	5
0110	4	92 60 282		RH	1	.Spring	.Fjäder	5
0120	5	*92 60 233*		LH NLS - USE 4096061	1	.Arm	.Arm	5
0130	5	*92 60 225*		RH NLS - USE 4096053	1	.Arm	.Arm	5
0140	6	92 60 530			1	.Screw	.Skruv	5
0150	7	92 60 514			2	.Pin	.Pinne	4
0160	8	92 60 506			2	.Stud	.Pinnskruv	5
0170	9	79 71 658			2	Nut	Mutter	5
0180	10	79 75 196			2	Screw	Skruv	5
0190	12			See page 8A-071, 4-H24	1	Lock	Lås	
0210	14	92 62 163			2	.Seal	.Tätning	4
0220	15	92 62 387			2	.Spring	.Fjäder	5
0230	16	92 62 403			2	.Companion flange	.Medbringare	3
0240	17	92 62 361			2	.Lock ring	.Säkringsring	5
0250	18	92 62 395			2	.Link stay	.Länkstag	5
0260	19	92 62 973			4	Screw	Skruv	5
0270								
0280								
0290	20	*69 54 077*		5,122) LH (9260357) NLS - USE 6943450	1	Handle	Handtag	5
0300	20	*69 54 077*		5,123,610) LH NLS - USE 6943450	1	Handle	Handtag	5
0310	20	69 54 093		5,123) LH, CHROME	1	Handle	Handtag	5
0320	20	*69 54 069*		5,122) RH (9260340) NLS - USE 6943443	1	Handle	Handtag	5
0330	20	*69 54 069*		5,123,610) RH NLS - USE 6943443	1	Handle	Handtag	5
0340	20	69 54 085		5,123) RH, CHROME	1	Handle	Handtag	5
0350	21	92 60 266			2	.Absorber	.Dämpare	4
0360	22	92 60 274		122)	2	.Seal	.Tätning	
0370	22	69 56 403		123)	2	.Seal	.Tätning	4
0380	23	92 60 290		LH	1	.Spring	.Fjäder	5
0390	23	92 60 282		RH	1	.Spring	.Fjäder	5
0400	24	92 60 373		LH	1	.Arm	.Arm	5
0410	24	92 60 365		RH	1	.Arm	.Arm	5
0420	25	92 60 530			1	.Screw	.Skruv	5
0430	26	92 60 514			2	.Pin	.Pinne	4
0440	27	92 60 506			2	.Stud	.Pinnskruv	5
0450	28	79 71 658			2	Nut	Mutter	5
0460	29	79 75 196			2	Screw	Skruv	5

4. Front Främre
5. Rear Bakre
122. Ch. --H1000481, --H8000048
123. Ch. H1000482--, H8000049--
610. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating an ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fonders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-H24

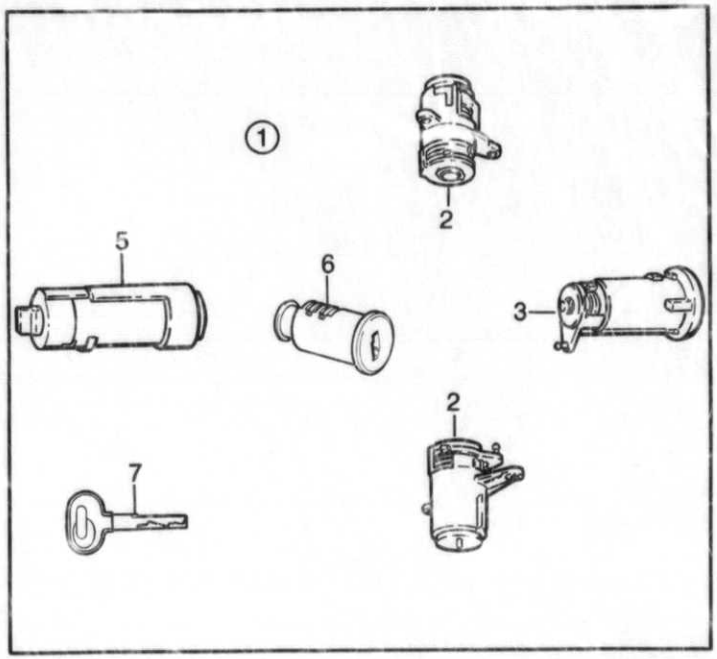

F7119 9000

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 46 389			1	Lock kit	Låssats	5
0020								
0030	1	82 84 242		537)	1	Lock kit	Låssats	5
0040								
0050		97 46 397		DOOR, LH, WITH 2 KEYS	X	. Door mechanism	. Dörrmekanism	5
0060		97 46 405		DOOR, RH, WITH 2 KEYS	X	. Door mechanism	. Dörrmekanism	5
0070								
0080		97 46 439		TRUNKDOOR, WITH 2 KEYS	X	. Lock	. Lås	4
0090								
0100								
0110		82 84 259		537) TRUNKDOOR, WITH 2 KEYS	X	. Lock	. Lås	4
0120								
0130								
0140		97 46 454		IGNITION, WITH 2 KEYS	X	. Lock cylinder	. Låscylinder	5
0150								
0160		92 61 108		GLOVE COMPARTMENT WITH 2 KEYS	X	. Glove compartment lock	. Handskfackslås	3
0170								
0180								
0190								
0200				538)		Lock	Lås	
0210								
0220	2	69 63 300		DOOR, LH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0230								
0240	2	69 63 318		DOOR, RH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0250								
0260	3	92 61 090		TRUNKDOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0270								
0280	3	92 61 082		537) TRUNKDOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0290								
0300	5	89 60 221		IGNITION, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0310	6	82 84 192		GLOVE COMPARTMENT STATE KEY CODE	X	Glove compartment lock	Handskfackslås	3
0320								
0330	7	97 46 603		STATE KEY CODE	X	Key	Nyckel	5
0340	7	96 98 077		BLANK	X	Key	Nyckel	3


537. Without central lock Utan centrallås
538. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nyckel till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

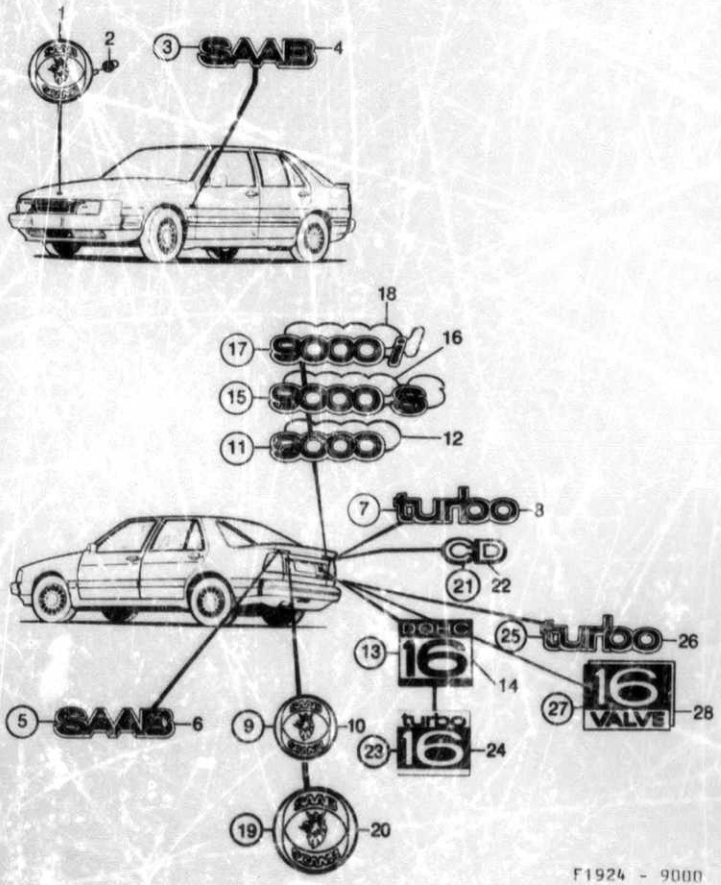

4-102

External details, glass, sealings
Emblem

Utvändiga detaljer, glas, tätningslister
Emblem

0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 11 895		"SAAB-SCANIA"	1	Emblem	Emblem	3
0020	2	69 15 706			2	Bushing	Bussning	3
0030	3	92 65 158		"SAAB"	2	Emblem	Emblem	3
0040	4	92 65 174			2	.Decal tape	.Emblemtejp	3
0050	5	92 65 018		"SAAB"	1	Emblem	Emblem	3
0060	5	69 63 375		"SAAB"4D	1	Emblem	Emblem	3
0070	6	92 65 034			1	.Decal tape	.Emblemtejp	3
0080	7	92 65 059		"TURBO"	1	Emblem	Emblem	3
0090	8	92 65 075			1	.Decal tape	.Emblemtejp	3
0100	9	*92 64 946*		-1987, "SAAB-SCANIA" NLS - USE 6963367	1	Emblem	Emblem	3
0110	9	69 63 367		1988-, "SAAB-SCANIA"	1	Emblem	Emblem	3
0120	10	69 11 861			1	.Decal tape	.Emblemtejp	3
0130	11	92 64 987		"9000"	1	Emblem	Emblem	3
0140	11	69 63 243		"9000"4D	1	Emblem	Emblem	3
0150	12	92 65 000			1	.Decal tape	.Emblemtejp	3
0160	13	92 93 911		-1988,"DOHC 16"	1	Emblem	Emblem	3
0170	14	92 93 937		-1988	1	.Decal tape	.Emblemtejp	3
0180	15	92 75 017		1986-, "9000S", US, CA	1	Emblem	Emblem	4
0190	15	40 88 415		1989-, "9000S", US, 4D	1	Emblem	Emblem	3
0200	16	92 75 033		1986-, US, CA	1	.Decal tape	.Emblemtejp	3
0210	17	92 64 805		1986-, "9000i",	1	Emblem	Emblem	3
0220	18	92 64 821		1986-	1	.Decal tape	.Emblemtejp	3
0230	19	69 60 280		"SAAB-SCANIA"4D	1	Emblem	Emblem	3
0240	20	69 60 272		4D	1	.Decal tape	.Emblemtejp	3
0250	21	69 91 673		"CD"4D	1	Emblem	Emblem	3
0260	22	69 48 681		4D	1	.Decal tape	.Emblemtejp	3
0270	23	69 43 583		"TURBO 16"4D	1	Emblem	Emblem	3
0280	24	69 43 575		4D	1	.Decal tape	.Emblemtejp	3
0290	25	92 65 059		"TURBO", 4D, US	1	Emblem	Emblem	3
0300	26	92 65 075			1	.Decal tape	.Emblemtejp	3
0310	27	69 92 903		1989-,500) "16 VALVE"	1	Emblem	Emblem	3
0320	28	69 92 895		1989-,500)	1	.Decal tape	.Emblemtejp	3

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-I04

External details, glass, sealings

Decor, 5D

Utvändiga detaljer, glas, tätningslister

Dekor, 5D

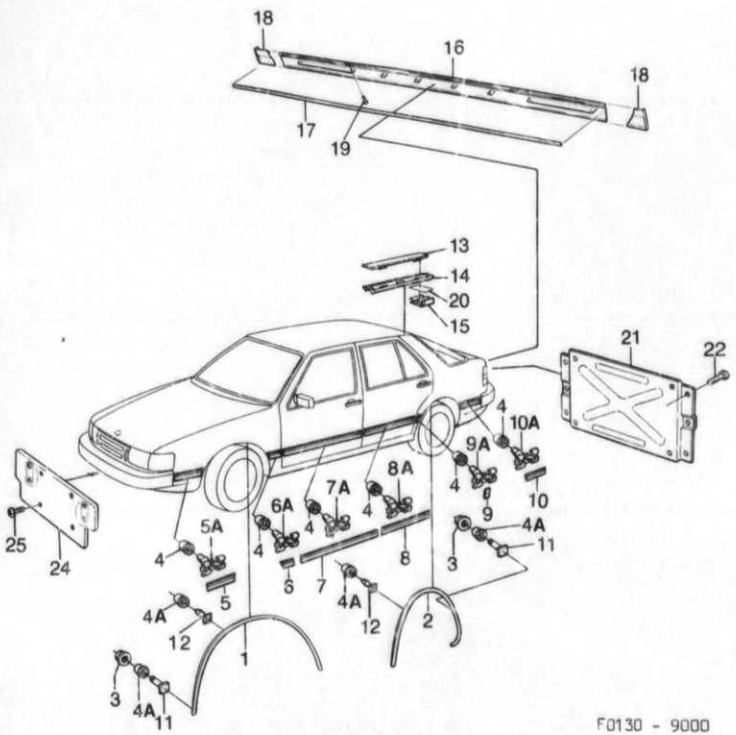

F0130 - 9000

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 57 965		LH	1	Wheel house moulding	Hjulhusdekor	2
0020	1	92 57 957		RH	1	Wheel house moulding	Hjulhusdekor	2
0030	2	92 58 237		LH	1	Wheel house moulding	Hjulhusdekor	2
0040	2	92 58 229		RH	1	Wheel house moulding	Hjulhusdekor	2
0050	3	73 98 423		18)	14	Nut	Mutter	5
0060	3	73 98 423		19) -1986	22	Nut	Mutter	5
0070	3	73 99 488		1987-	22	Nut	Mutter	5
0080	4	73 73 269		18)	70	Bushing	Bussning	5
0090	4	73 73 269		19)-1986	56	Bushing	Bussning	5
0100	4	73 73 269		19)1987-	40	Bushing	Bussning	5
0110	4A	92 78 151		19,163)	14	Bushing	Bussning	5
0120	4A	92 78 151		164)	12	Bushing	Bussning	5
0130	5	92 55 266		LH	1	Decor strip	Dekorlist	2
0140	5	92 55 274		RH	1	Decor strip	Dekorlist	2
0150	5A	92 66 651			2	▪Clip	▪Clips	5
0160	6	92 55 282		LH	1	Decor strip	Dekorlist	2
0170	6	92 55 290		RH	1	Decor strip	Dekorlist	2
0180	6A	92 66 651			2	▪Clip	▪Clips	5
0190	7	92 55 308		LH	1	Decor strip	Dekorlist	2
0200	7	92 55 316		RH	1	Decor strip	Dekorlist	2
0210	7A	92 66 651			7	▪Clip	▪Clips	5
0220	8	92 55 324		LH	1	Decor strip	Dekorlist	2
0230	8	92 55 332		RH	1	Decor strip	Dekorlist	2
0240	8A	92 66 651			5	▪Clip	▪Clips	5
0250	9	92 55 340		LH	1	Decor strip	Dekorlist	2
0260	9	92 55 357		RH	1	Decor strip	Dekorlist	2
0270	9A	92 66 651			1	▪Clip	▪Clips	5
0280	10	*92 55 365*		LH NLS - USE 4254207	1	Decor strip	Dekorlist	2
0290	10	*92 55 373*		RH NLS - USE 4254215	1	Decor strip	Dekorlist	2
0300	10A	92 66 651			3	▪Clip	▪Clips	5
0310	11	73 98 365		18)	14	Screw	Skruv	5
0320	11	73 98 365		19) -1986	22	Screw	Skruv	5
0330	11	73 99 470		1987-	22	Screw	Skruv	5
0340	12	92 53 329		18)	16	Clip	Clips	5
0350	12	92 53 329		19,163)	8	Clip	Clips	5
0360	12	92 53 329		164)	16	Clip	Clips	5
0370	13	92 68 202		LH	1	Decor	Dekor	5
0380	13	92 67 394		RH	1	Decor	Dekor	5
0390	14	92 69 713		LH	1	Decor strip	Dekorlist	5
0400	14	92 69 705		RH	1	Decor strip	Dekorlist	5
0410	15	92 69 697			4	Clip	Clips	5
0420	16	92 51 471			1	Shield plate	Avskärmningsplåt	5
0430	17	92 52 057			1	Sealing strip	Tätningslist	4
0440	18	92 52 131		LH	1	End piece	Ändstycke	3
0450	18	92 52 123		RH	1	End piece	Ändstycke	3
0460	19	79 65 544			4	Screw	Skruv	5
0470	20	*92 77 245*		NLS - USE 9288127	6	Tape	Tape	5
0480	21	92 72 139		US,CA,JA	1	Bracket	Hållare	5
0490	22	80 59 578		US,CA,JA	4	Screw	Skruv	5
0510	24			See page 8A-107, 4-J12	1	Bracket	Hållare	
0520	25			See page 8A-107, 4-J12	4	Screw	Skruv	
0530		92 40 086		See page 8A-127, 4-K08 US, CA, JA	1	Mounting kit	Monteringssats	5
0540								
0560		74 96 029		See page 8A-135, 4-K16	1	Mounting kit	Monteringssats	4
0580		74 96 037		See page 8A-135, 4-K16	1	Mounting kit	Monteringssats	4

18. Ch. --G1000374
19. Ch. G1000375--
163. Ch. --H1000418.
164. Ch. H1000419--, H8000041--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-I06

External details, glass, sealings

Decor, 4D

Utvändiga detaljer, glas, tätningslister

Dekor, 4D

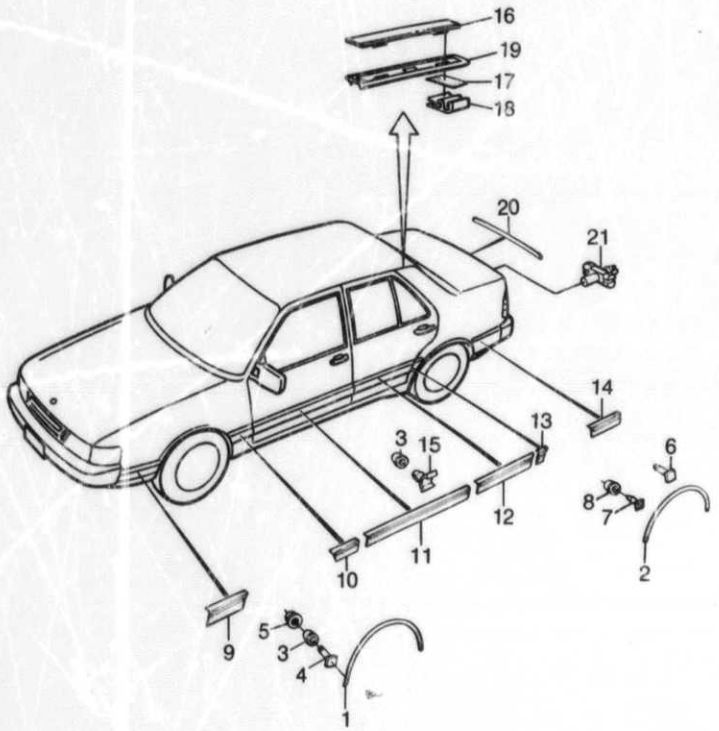

F4062 9000

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 57 965		LH	1	Wheel house moulding	Hjulhusdekor	2
0040	1	92 57 957		RH	1	Wheel house moulding	Hjulhusdekor	2
0060	2	92 58 237		LH	1	Wheel house moulding	Hjulhusdekor	2
0080	2	92 58 229		RH	1	Wheel house moulding	Hjulhusdekor	2
0100	3	73 73 269			42	Bushing	Bussning	5
0120	4	73 99 470			16	Screw	Skruv	5
0140	5	73 99 488			22	Nut	Mutter	5
0160	6	73 99 470			6	Screw	Skruv	5
0180	7	92 53 329			8	Clip	Clips	5
0200	8	92 78 151			6	Bushing	Bussning	5
0220	9	92 78 177		LH	1	Decor strip	Dekorlist	2
0240	9	92 78 185		RH	1	Decor strip	Dekorlist	2
0260	10	92 78 193		LH	1	Decor strip	Dekorlist	2
0280	10	92 78 201		RH	1	Decor strip	Dekorlist	2
0300	11	92 78 219		LH	1	Decor strip	Dekorlist	2
0320	11	92 78 227		RH	1	Decor strip	Dekorlist	2
0340	12	92 78 235		LH	1	Decor strip	Dekorlist	2
0360	12	92 78 243		RH	1	Decor strip	Dekorlist	2
0380	13	92 78 250		LH	1	Decor strip	Dekorlist	2
0400	13	92 78 268		RH	1	Decor strip	Dekorlist	2
0420	14	69 54 176		LH	1	Decor strip	Dekorlist	2
0440	14	69 54 184		RH	1	Decor strip	Dekorlist	2
0445	15	69 91 079			X	▪Clip	▪Clips	5
0500	16	92 77 393		LH	1	Decor strip	Dekorlist	5
0520	16	92 78 003		RH	1	Decor strip	Dekorlist	5
0540	17	*92 77 245*		NLS - USE 9288127	6	Tape	Tape	5
0560	18	92 69 697			4	Clip	Clips	5
0562	19	92 77 336		LH	1	Decor strip	Dekorlist	5
0564	19	92 77 344		RH	1	Decor strip	Dekorlist	5
0600	20	69 59 100			1	Decor strip	Dekorlist	3
0620	21	69 59 175			7	Clip	Clips	5
0640		74 96 029		See page 8A-135, 4-K16	1	Mounting kit	Monteringssats	4
0660		74 96 037		See page 8A-135, 4-K16	1	Mounting kit	Monteringssats	4

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-108

External details, glass, sealings

Spoiler

Utvändiga detaljer, glas, tätningslister

Spoiler

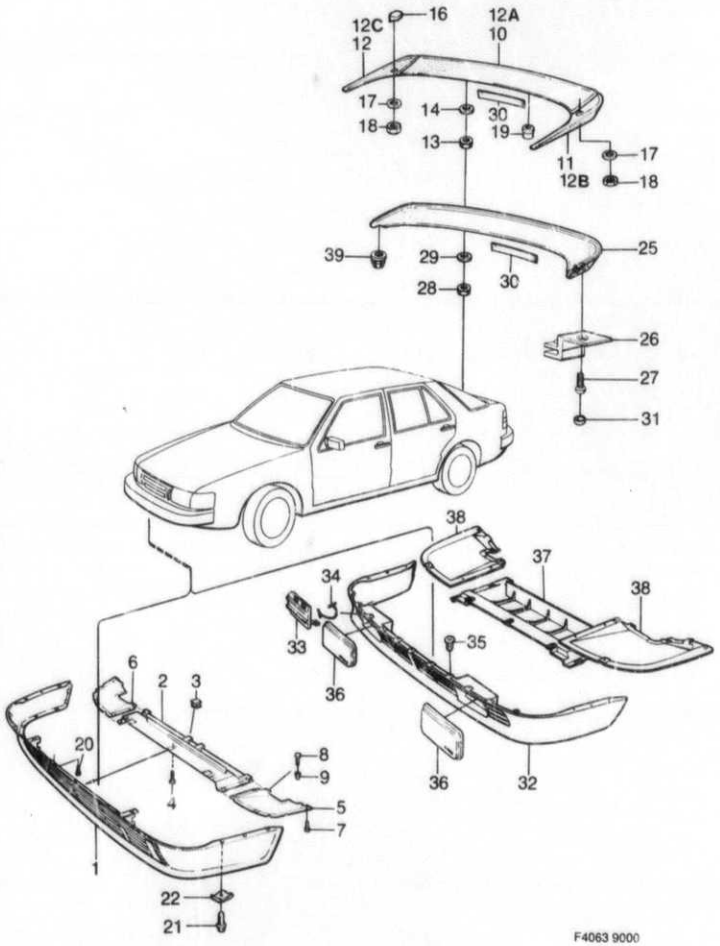

F4063 9000

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 62 759		4)	1	Spoiler	Spoiler	3
0020	2	92 68 079			1	Air shield	Luftskärm	5
0030	2	92 76 064		1986-, A, FOR CARS WITH AIR OIL COOLED TRANSM	1	Air shield	Luftskärm	5
0040								
0050	3	92 65 331			4	▪Clamp	▪Klammer	5
0060	4	79 76 988	S		3	Screw	Skruv	5
0070	5	92 67 972		LH	1	Shield	Sköld	5
0080	6	92 67 964		RH	1	Shield	Sköld	5
0090	7	79 76 988	S		9	Screw	Skruv	5
0100	8	79 75 774	S	-1985 (7973142)	4	Screw	Skruv	5
0110	8	79 77 465		1986-	4	Screw	Skruv	5
0120	9	79 75 279	S		4	Nut	Mutter	5
0130	10	92 55 993		-1985, CENTRE PART	1	Spoiler	Spoiler	3
0140	11	92 56 017		-1985, LH PART	1	Spoiler	Spoiler	3
0150	12	92 56 009		-1985, RH PART	1	Spoiler	Spoiler	3
0160	12A	*69 57 815*		-1985,57) CENTRE PART NLS	1	Spoiler	Spoiler	
0160								
0170	12B	69 57 823		-1985,57) LH PART	1	Spoiler	Spoiler	
0180	12C	69 57 831		-1985,57) RH PART	1	Spoiler	Spoiler	
0190	13	80 29 548		1985-	5	Nut	Mutter	5
0200	14	92 28 255		-1985	5	Washer	Bricka	5
0210	16	92 65 281		-1985, RH	1	Cover	Lock	5
0220	17	79 16 497		-1985	2	Washer	Bricka	5
0230	18	80 74 106		-1985	2	Nut	Mutter	5
0240	19	97 03 232		-1985	4	Bushing	Bussning	5
0250	20	79 76 996	S		11	Screw	Skruv	5
0260	21	79 73 134	S		8	Screw	Skruv	5
0270	22	79 77 523	S		6	Clip	Clips	5
0280	25	*78 74 811*		132,498) See page 8A-129, 4-K10 NLS - USE 8284283	1	Spoiler	Spoiler	5
0290								
0300	25	82 84 283		499) See page 8A-129, 4-K10	1	Spoiler	Spoiler	5
0310								
0320	25	*92 77 609*		498) NLS	1	Spoiler	Spoiler	3
0330	25	69 92 838		499)	1	Spoiler	Spoiler	3
0340	26	92 77 864		1986-	2	Attaching bracket	Fästvinkel	5
0350	27	80 59 537		1986-	2	Screw	Skruv	5
0360	28	79 73 365		1986-1987	5	Nut	Mutter	5
0370	28	73 58 423		1988-	5	Nut	Mutter	5
0380	29	92 30 293	S	1986-498)	5	Washer	Bricka	5
0390	29	40 89 389	S	499)	7	Washer	Bricka	5
0400	30	78 74 662		COIL 5 METER	X	Tape	Tape	5
0410	31	92 78 847		1986-	2	Protecting cap	Skyddshuv	5
0420	32	*69 54 929*		4) 4D NLS - USE 4343117, 7982325	1	Spoiler	Spoiler	3
0420								
0430	33	69 42 429		4D	1	▪Cover	▪Lock	4
0440	34	69 60 926		4D	1	▪Bracket	▪Hållare	5
0450	35	92 88 846		4D	3	▪Nut	▪Mutter	5
0460	36	*69 56 254*		LH, 4D NLS - USE 6991624	1	Cover	Lock	4
0470	36	*69 56 247*		RH, 4D NLS - USE 6991616	1	Cover	Lock	4
0480	37	*92 79 589*		4D NLS - USE 4008884	1	Air shield	Luftskärm	5
0490	38	*69 54 879*		LH PART, 4D NLS - USE 4008256	1	Shield	Sköld	5
0490								
0500	38	*69 54 861*		RH PART, 4D NLS - USE 4008249	1	Shield	Sköld	5
0500								
0510	39	40 13 454	S	499)	2	Clip	Clips	5
0520		92 69 127		-1987 See page 8A-125, 4-K06	1	Mounting kit	Monteringssats	3
0530								


4. Front Främre
57. With rounded edges Med rundade kanter
132. Ch. H1007932-, H8000100-
498. Ch. -K1021884, -K2012733, -K8001395
499. Ch. K1021885-, K2012734-, K8001396-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

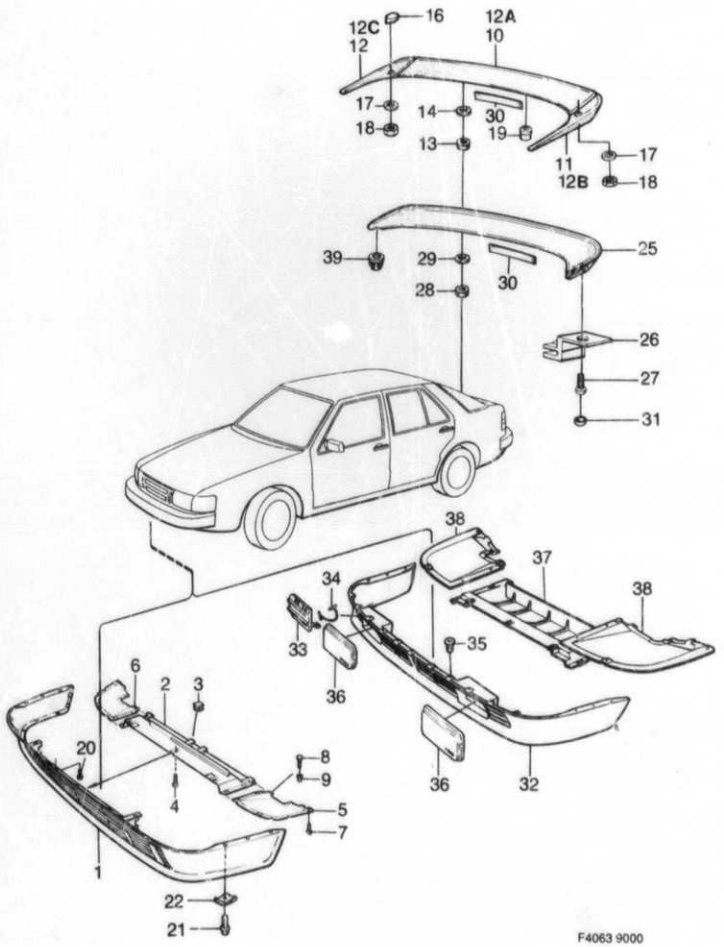

F4063 9000

4-I10

External details, glass, sealings

Spoiler

Utvändiga detaljer, glas, tätningslister

Spoiler

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	92 69 135		-1987	1	Mounting kit	Monteringssats	3
0550			See page 8A-125, 4-K06				
0560	69 62 708		1988-	1	Mounting kit	Monteringssats	3
0570			See page 8A-133, 4-K14				
0580	*78 74 688*		1986-498)	1	Spoiler	Spoiler	5
0590			See page 8A-129, 4-K10				
0590			NLS - USE 8284275				
0600	82 84 275		499)	1	Spoiler	Spoiler	5
0610			See page 8A-129, 4-K10				
0620	96 98 374		498) REAR	1	Mounting kit	Monteringssats	5
0630			See page 8A-125, 4-K06				
0640	82 84 267		499) REAR	1	Mounting kit	Monteringssats	5
0650			See page 8A-125, 4-K06				
0660	92 67 956		4)	1	Mounting kit	Monteringssats	3
0670			See page 8A-125, 4-K06				

4. Front Främre
498. Ch. --K1021884, --K2012733, --K8001395
499. Ch. K1021885--, K2012734--, K8001396--


MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8A GROUP INDEX

Main body	**4-F06**
Hood, front, fenders	**4-G12**
Doors, trunk lid	**4-G22**
External details, glass, sealings	**4-I02**
Bumpers and touch-up paint	**4-J12**
Complete sets:	**4-K06**

4-I12 External mirror — Utvändiga backspeglar

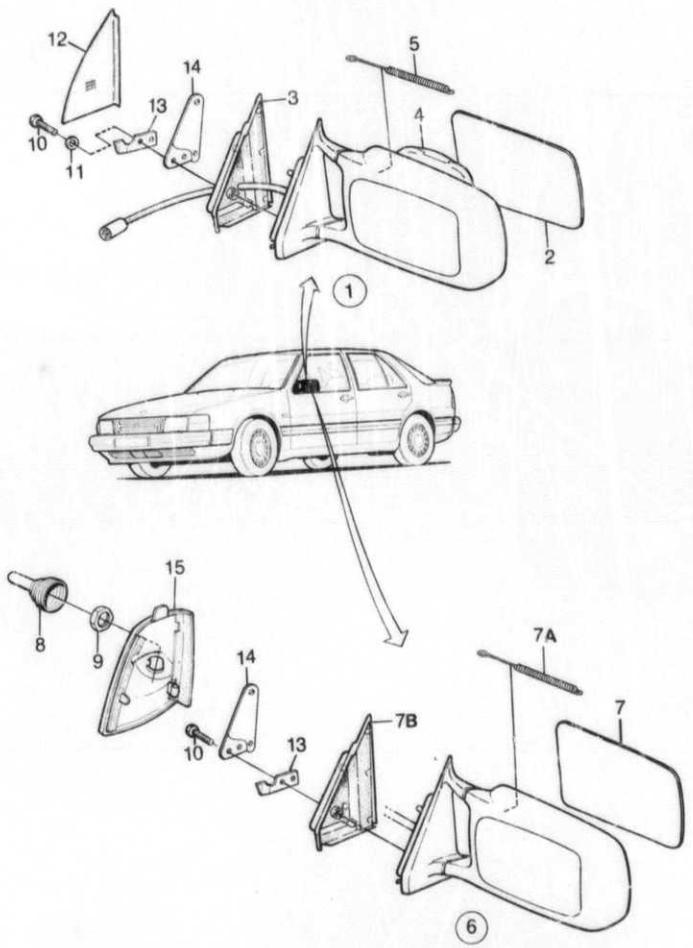

F2491 - 9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*97 65 157*		535,215) LH,WIDE ANGLE,SE 1986- SE, FI, EU, ME NLS - USE 9661307	1	Rear view mirror	Backspegel	4
0030	1	96 61 307		216,535) LH, WIDE ANGLE, SE, FI, EU, ME	1	Rear view mirror	Backspegel	4
0050	1	96 61 307		1989-,535) LH, WIDE ANGLE, FE	1	Rear view mirror	Backspegel	4
0070	1	*97 76 600*		535) RH,CONVEX GLASS, SE 1986-,24) SE,FI,EU,ME,JP NLS - USE 9661364	1	Rear view mirror	Backspegel	4
0090	1	96 61 364		1986-,25,535) RH, CONVEX GLASS, SE,FI,EU,ME,JP	1	Rear view mirror	Backspegel	4
0110	1	96 61 364		1989-,535) RH, CONVEX GLASS, FE	1	Rear view mirror	Backspegel	4
0130	1	*97 77 343*		1986-,26,535) LH, FLAT GLASS, US, CA NLS - USE 9661323	1	Rear view mirror	Backspegel	4
0150	1	96 61 323		1986-,27,535) LH, FLAT GLASS, US, CA	1	Rear view mirror	Backspegel	4
0170	1	*97 77 384*		1986-,24,535) RH, CONVEX GLASS, US CA NLS - USE 9661380	1	Rear view mirror	Backspegel	4
0190	1	96 61 380		1986-,25,535) RH, CONVEX GLASS, US, CA	1	Rear view mirror	Backspegel	4
0210	1	*97 77 368*		1986-,217,535) LH, CONVEX GLASS, JP NLS - USE 9661331	1	Rear view mirror	Backspegel	4
0230	1	96 61 331		218,535) LH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0250	1	*97 76 600*		1986-,24,535) RH, CONVEX GLASS, JP NLS - USE 9661364	1	Rear view mirror	Backspegel	4
0270	1	96 61 364		25,535) RH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0290	1	*97 76 626*		1986-,28,535) LH FOR RHD CONVEX GLASS, GB, ME, FE NLS - USE 9661208	1	Rear view mirror	Backspegel	
0310	1	96 61 208		1986-,29,535) LH FOR RHD CONVEX GLASS, GB, ME, FE	1	Rear view mirror	Backspegel	4
0330	1	*97 76 634*		1986-,26,535) RH FOR RHD WIDE ANGLE GLASS, GB NLS - USE 9661240	1	Rear view mirror	Backspegel	4
0350	1	96 61 240		1986-,27,535) RH FOR RHD WIDE ANGLE GLASS, GB	1	Rear view mirror	Backspegel	4
0370	1	*97 77 400*		1986-,213,535) LH FOR RHD, FLAT GLASS, AU NLS - USE 9661216	1	Rear view mirror	Backspegel	4
0390	1	96 61 216		214,535) LH FOR RHD FLAT GLASS, AU	1	Rear view mirror	Backspegel	4

24. Ch. --G1004354
25. Ch. G1004355--
26. Ch. --G1004023
27. Ch. G1004024--
28. Ch. --G1002067
29. Ch. G1002068--
213. Ch. --G1015943
214. Ch. G1015944--
215. Ch. --G1006103
216. Ch. G1006104--
217. Ch. --G1007011
218. Ch. G1007012--
535. Electrically operated — Elektriskt manövrerad

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-I14

External mirror
Utvändiga backspeglar

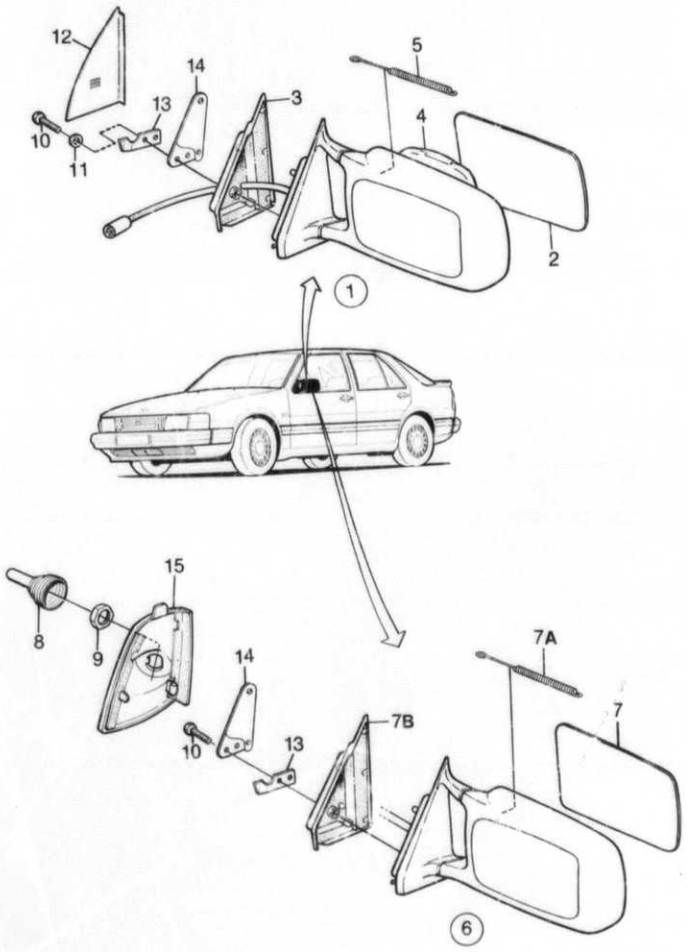

F2491 - 9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	1	*97 77 426*		1986-,213,535) RH FOR RHD, FLAT GLASS, AU NLS - USE 3661257	1	Rear view mirror	Backspegel	4
0430	1	96 61 257		214,535) RH FOR RHD, FLAT GLASS, AU	1	Rear view mirror	Backspegel	4
0450	1	*97 76 626*		1986-,535) LH FOR RHD CONVEX GLASS, ME, FE NLS - USE 9661208	1	Rear view mirror	Backspegel	
0470	1	*97 77 442*		1986-,219,535) RH FOR RHD, CONVEX GLASS, ME,FE NLS - USE 9661265	1	Rear view mirror	Backspegel	4
0490	1	96 61 265		220,535) RH FOR RHD, CONVEX GLASS, ME, FE	1	Rear view mirror	Backspegel	4
0510	1	96 61 208		452,535) LH FOR RHD, JP, HEATED GLASS	1	Rear view mirror	Backspegel	4
0530	1	96 61 265		452,535) RH FOR RHD, JP, HEATED GLASS	1	Rear view mirror	Backspegel	4
0550	1	85 47 317		1987-, I See page 8A-129, 4-K10	1	Rear view mirror kit	Backspegelsats	4
0570	1	85 47 325		1987-, I, RHD See page 8A-129, 4-K10	1	Rear view mirror kit	Backspegelsats	4
0590		85 47 333		1987,4) I See page 8A-129, 4-K10	1	Cable harness	Ledningsnät	5
0610		85 47 473		1988-,4) I See page 8A-129, 4-K10	1	Cable harness kit	Ledningsnätssats	5
0630	2	97 97 044		LH, WIDE ANGLE, SE	1	.Mirror glass	.Spegelglas	3
0650	2	97 97 069		1986-, SE, FI, EU, ME RH, CONVEX, SE	1	.Mirror glass	.Spegelglas	3
0670	2	97 97 093		1986-, SE, FI, EU, ME LH, FLAT, US,CA	1	.Mirror glass	.Spegelglas	3
0680	2	97 97 101		1986-, RH, CONVEX, US,CA	1	.Mirror glass	.Spegelglas	3
0690	2	97 97 051		1986-, LH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0700	2	97 97 069		1986-, RH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0710	2	97 97 051		1986-, LH FOR RHD, CONVEX, GB	1	.Mirror glass	.Spegelglas	3
0730	2	97 97 077		1986-, RH FOR RHD, WIDE ANGLE, GB	1	.Mirror glass	.Spegelglas	3
0750	2	97 97 051		1986-, LH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0770	2	97 97 069		1986-, RH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0790	2	97 97 093		1986-, LH FOR RHD, FLAT, AU	1	.Mirror glass	.Spegelglas	3
0810	2	97 97 119		1986-, RH FOR RHD, FLAT, AU	1	.Mirror glass	.Spegelglas	3
0830	3	97 53 419		28) LH	1	.Gasket	.Packning	5
0840	3	97 53 427		28) RH	1	.Gasket	.Packning	5
0850	3	96 61 448		29) LH	1	.Gasket	.Packning	5
0860	3	96 61 455		29) RH	1	.Gasket	.Packning	5
0870	4	97 76 584			2	.Drive unit	.Drivenhet	5
0880	5	94 72 580			4	.Spring	.Fjäder	5
0900	6	96 78 749		1987-, LH FOR RHD, GB, ME, FE	1	Mirror	Spegel	3


4. Front Främre
28. Ch. --G1002067
29. Ch. G1002068--
213. Ch. --G1015943
214. Ch. G1015944--
219. Ch. --G1009298
220. Ch. G1009299--
452. Ch. K1001096--, K8000007--
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

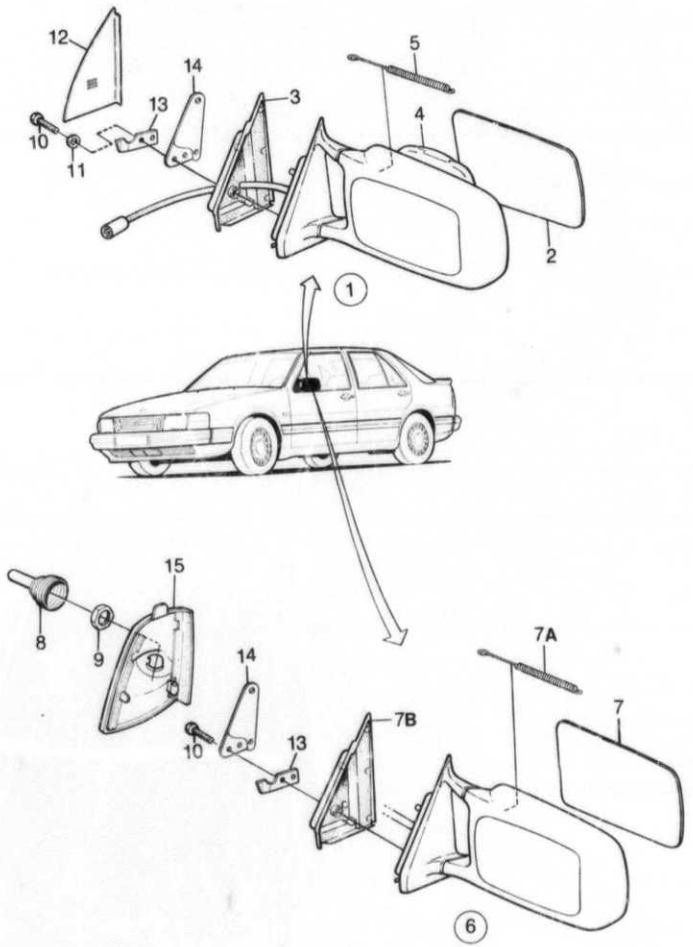

F2491 - 9000

External details, glass, sealings

4-I16 *External mirror*

Utvändiga detaljer, glas, tätningslister

Utvändiga backspeglar

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920	6	96 78 764		1987-, RH FOR RHD, GB	1	Mirror	Spegel	3
0930	6	95 91 108		1989-, RH FOR RHD, GB HEATED	1	Mirror	Spegel	3
0940								
0950	6	96 78 798		1987-, LH FOR LHD, SE, FI, EU	1	Mirror	Spegel	3
0960								
0970	6	96 78 798		1989-, LH FOR LHD, FE	1	Mirror	Spegel	3
0980	6	96 78 822		1987-, RH FOR LHD, SE, FI, EU, JP	1	Mirror	Spegel	3
0990								
1000	6	96 78 822		1989-, RH FOR LHD, FE	1	Mirror	Spegel	3
1010	6	*96 78 756*		1987-, LH FOR RHD, AU NLS	1	Mirror	Spegel	3
1010								
1020	6	*96 78 772*		1987-, RH FOR RHD, AU NLS	1	Mirror	Spegel	3
1020								
1030	6	96 78 780		1987-, RH FOR RHD, ME,FE	1	Mirror	Spegel	3
1040	6	*96 78 814*		1987-, LH, JP NLS	1	Mirror	Spegel	3
1050	6	96 78 749		452) LH FOR RHD, JP	1	Mirror	Spegel	3
1060	6	96 78 780		452) RH FOR RHD, JP	1	Mirror	Spegel	3
1070	7	98 33 559		1987-, LH, WIDE ANGLE, SE, FI, EU	1	.Mirror glass	.Spegelglas	3
1080								
1090	7	98 33 575		1987-, RH, CONVEX, SE, FI, EU	1	.Mirror glass	.Spegelglas	3
1100								
1110	7	98 33 591		1987-, LH FOR RHD, CONVEX, GB	1	.Mirror glass	.Spegelglas	3
1120								
1130	7	98 37 246		1987-, RH FOR RHD, WIDE ANGLE, GB	1	.Mirror glass	.Spegelglas	3
1140								
1150	7	97 97 077		1989-, RH FOR RHD, WIDE ANGLE,GB, HEATED	1	.Mirror glass	.Spegelglas	3
1160								
1170	7	98 33 518		1987-, LH FOR RHD, AU	1	.Mirror glass	.Spegelglas	3
1180	7	98 33 617		1987-, RH FOR RHD, AU	1	.Mirror glass	.Spegelglas	3
1190	7A	94 72 580			4	.Spring	.Fjäder	5
1200	7B	97 53 419		28) LH	1	.Gasket	.Packning	5
1210	7B	97 53 427		28) RH	1	.Gasket	.Packning	5
1220	7B	96 61 448		29) LH	1	.Gasket	.Packning	5
1230	7B	96 61 455		29) RH	1	.Gasket	.Packning	5
1240	8	96 78 608			2	Rubber bellows kit	Gummibälgsats	5
1250	9	96 78 616		1987-	2	Nut	Mutter	5
1260	10	80 59 396		46)	4	Screw	Skruv	5
1270	10	79 77 689		47)	6	Screw	Skruv	5
1280	11	80 29 944		566)	4	Washer	Bricka	5
1290	12	97 53 153		1985, LH	1	Cover	Täcklock	5
1300	12	97 53 161		1985, RH	1	Cover	Täcklock	5
1310	12	*96 94 704*		1986-,159) LH (9660069) NLS - USE 4268389	1	Cover	Täcklock	5
1310								
1320	12	*96 60 051*		1986-,159) RH NLS - USE 9694696	1	Cover	Täcklock	5
1320								
1330	12	96 72 767		160,264) LH	1	Cover	Täcklock	5
1340	12	96 72 759		160,264) RH	1	Cover	Täcklock	5
1350	12	*96 94 704*		265,292) LH (9660069) NLS - USE 4268389	1	Cover	Täcklock	5
1350								
1360	12	*96 60 051*		265,292) RH NLS - USE 9694696	1	Cover	Täcklock	5
1360								

28. Ch. --G1002067
29. Ch. G1002068--
46. Ch. --G1002479
47. Ch. G1002480--
159. Ch. --H1013929, --H8000563
160. Ch. H1013930--, H8000564--
264. Ch. --H1034685, --H8002013
265. Ch. H1034686--, H8002014--
292. Ch. --J1006384, --J2002776, --J8000563
452. Ch. K1001096--, K8000007--
566. Ch. --G1015943

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-I18

External mirror
Utvändiga backspeglar

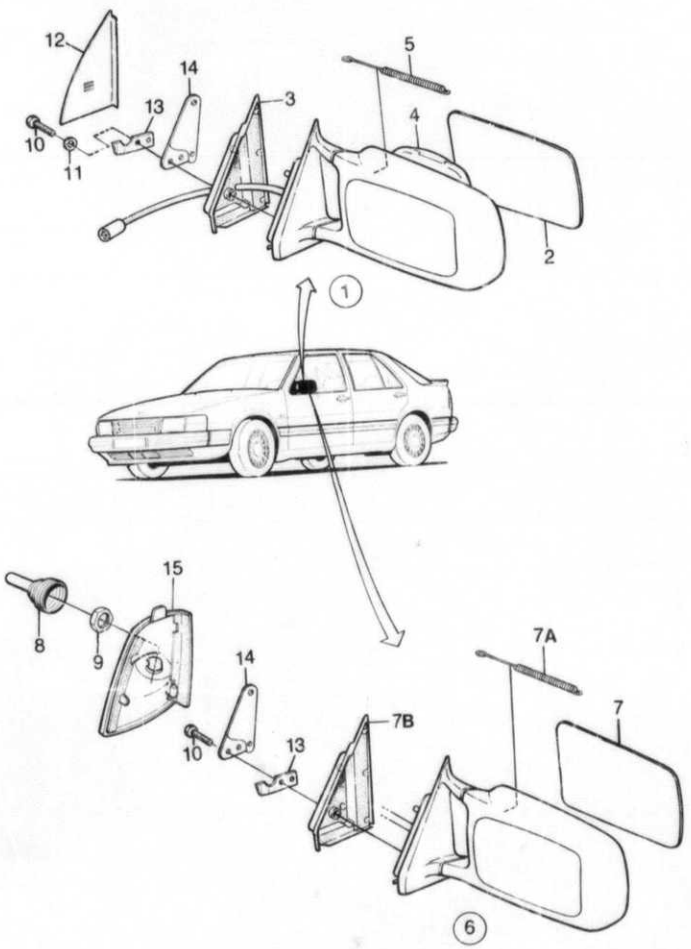

F2491 - 9000

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1370	12	*96 94 704*		293) LH NLS - USE 4268389	1	Cover	Täcklock	5
1380	12	96 94 696		293) RH	1	Cover	Täcklock	5
1390	13	*97 93 001*		48) LH NLS	1	Reinforcement	Förstärkning	3
1400	13	*97 91 930*		48) RH NLS	1	Reinforcement	Förstärkning	3
1410	13	96 58 972		49) LH	1	Reinforcement	Förstärkning	3
1420	13	96 58 980		49) RH	1	Reinforcement	Förstärkning	3
1430	14	96 71 926		LH	1	Gasket	Packning	5
1440	14	96 71 934		LH	1	Gasket	Packning	5
1450	15	*96 94 720*		1987-,159) LH (9677329) NLS - USE 4268421	1	Cover	Täcklock	4
1460	15	*96 94 712*		1987-,159) RH (9677311) NLS - USE 4268439	1	Cover	Täcklock	4
1470	15	96 94 373		160,264) LH	1	Cover	Täcklock	4
1480	15	96 94 365		160,264) RH	1	Cover	Täcklock	4
1490	15	*96 94 720*		265,292) LH (9677329) NLS - USE 4268421	1	Cover	Täcklock	4
1500	15	*96 94 712*		265,292) RH (9677311) NLS - USE 4268439	1	Cover	Täcklock	4
1510	15	*96 94 720*		293) LH NLS - USE 4268421	1	Cover	Täcklock	4
1520	15	*96 94 712*		293) RH NLS - USE 4268439	1	Cover	Täcklock	4

48. Ch. --G1002204
49. Ch. G1002205--
159. Ch. --H1013929, --H8000563
160. Ch. H1013930--, H8000564--
264. Ch. --H1034685, --H8002013
265. Ch. H1034686--, H8002014--
292. Ch. --J1006384, --J2002776, --J8000563
293. Ch. J1006385--, J2002777--, J8000564--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-I20

Windscreen, rear window
Vindruta, bakruta

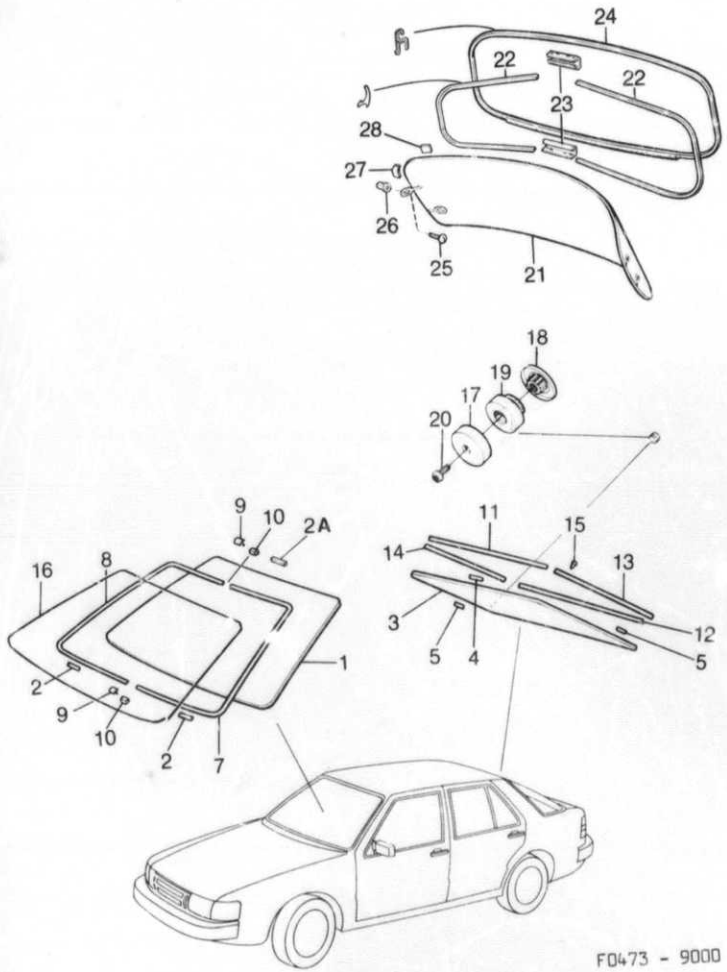

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 74 97 050		COLOURED	1	Windscreen	Vindruta	3
0020				See page 8A-127, 4-K08				
0030								
0040	1	• 74 97 043		COLOURED	1	Windscreen	Vindruta	3
0050				WITH CUT FOR CH. NUMBER				
0060				See page 8A-127, 4-K08				
0070								
0080	1	• 82 85 330		US	1	Windscreen	Vindruta	3
0090				See page 8A-127, 4-K08				
0100								
0110	1	• 82 85 272		AU	1	Windscreen	Vindruta	3
0120				See page 8A-127, 4-K08				
0121								
0130		82 84 531		See page 8A-127, 4-K08	1	Mounting kit windscreen	Monteringssats vindruta	3
0140								
0150	2	92 59 532	S	-1986	2	.Spacer	.Distans	3
0160	2	69 56 650		1987-1988	2	.Spacer	.Distans	3
0170	2	69 91 244		1989-,500)	2	.Spacer	.Distans	3
0180	2A	40 13 603		1989-,500)	2	Spacer	Distans	3
0190	3	*82 83 988*		See page 8A-127, 4-K08	1	Rear window	Bakruta	4
0190				NLS - USE 8284580				
0200	3	*82 84 101*		GB, WITH WIPER HOLE	1	Rear window	Bakruta	4
0210				See page 8A-127, 4-K08				
0210				NLS - USE 8284598				
0220	4	92 59 581	S	171)	1	.Spacer	.Distans	3
0230	4	69 56 734		172)	1	.Spacer	.Distans	3
0240	5	92 59 599	S	171) LH, RH	2	.Spacer	.Distans	3
0250	5	69 56 734		172) LH, RH	2	.Spacer	.Distans	3
0260	7	92 61 439		124) LH	1	Decor strip	Dekorlist	3
0270	7	92 78 318		125) LH	1	Strip holder	Hållarlist	3
0280	8	92 61 447		124) RH	1	Decor strip	Dekorlist	3
0290	8	92 78 300		125) RH	1	Strip holder	Hållarlist	3
0300	9	92 62 924		124)	2	Connector	Skarvstycke	3
0310	9	92 78 334		125)	2	Connector	Skarvstycke	3
0320	10	92 62 916			2	Clip	Clips	5
0330	11	*92 61 470*		31) NLS - USE 4014155	1	Decor strip	Dekorlist	3
0340	11	40 14 155		32,314) (9275207)	1	Decor strip	Dekorlist	3
0350	11	*69 48 855*		315,496) NLS - USE	1	Decor strip	Dekorlist	3
0350				4014155				
0360	11	40 14 155		497)	1	Decor strip	Dekorlist	3
0370	12	40 14 163		314)(9261488)	1	Decor strip	Dekorlist	3
0380	12	*69 63 235*		315,496) NLS - USE	1	Decor strip	Dekorlist	3
0380				4014163				
0390	12	40 14 163		497)	1	Decor strip	Dekorlist	3
0400	13	69 55 900		LH, -1986 (9262155)	1	Decor strip	Dekorlist	3
0410	13	69 55 900		LH, 1987-	1	Decor strip	Dekorlist	3
0420	14	*92 62 148*		RH, -1986 NLS - USE	1	Decor strip	Dekorlist	3
0420				6955892				
0430	14	69 55 892		RH, 1987-	1	Decor strip	Dekorlist	3
0440	15	79 72 425			8	Screw	Skruv	5
0450	16	*92 78 326*		125) NLS - USE 4250320	1	Decor strip	Dekorlist	3
0460	17	69 48 574		1988-	1	Cover	Lock	5

31. Ch. --F4002881
32. Ch. F4002882--
124. Ch. --G1005169
125. Ch. G1005170--
171. Ch. --H1019419, --H8001034
172. Ch. H1019420--, H8001035--
314. Ch. --J1012784, --J2006661, --J8000746
315. Ch. J1012785--, J2006662--, J8000747--
496. Ch. --K1018592, --K2010604, --K8000801
497. Ch. K1018593--, K2010605--, K8000802--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-I22

Windscreen, rear window

Vindruta, bakruta

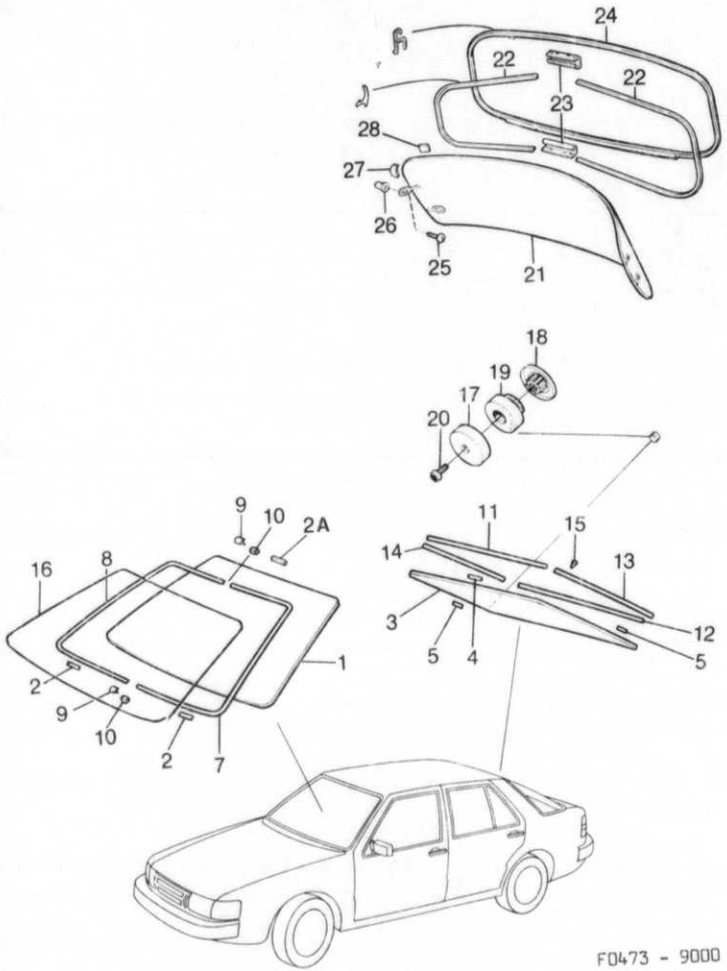

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	18	69 37 981		1988-	1	Cover	Lock	5
0480	19	69 48 566		1988-	1	Grommet	Genomföring	5
0490	20	79 65 833		1988-	1	Screw	Skruv	5
0500	21	82 84 069		4D	1	Rear window	Bakruta	4
0510				See page 8A-133, 4-K14				
0520	22	69 62 815		LH, 4D	1	.Strip holder	.Hållarlist	3
0530	22	69 62 807		RH, 4D	1	.Strip holder	.Hållarlist	3
0540	23	92 78 334		4D	2	.Connector	.Skarvstycke	3
0550	24	69 48 871		4D	1	.Cover moulding	.Täcklist	3
0560	25	*79 67 771*		4D NLS - USE 7970601	4	Screw	Skruv	5
0570	26	79 75 261		4D	4	Nut	Mutter	5
0580	27	69 91 244		4D, PART OF 8284069	4	Spacer	Distans	3
0590	28	69 92 028		4D, PART OF 8284069	3	Spacer	Distans	3

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-I24

Doors and side windows — Dörr- och sidorutor

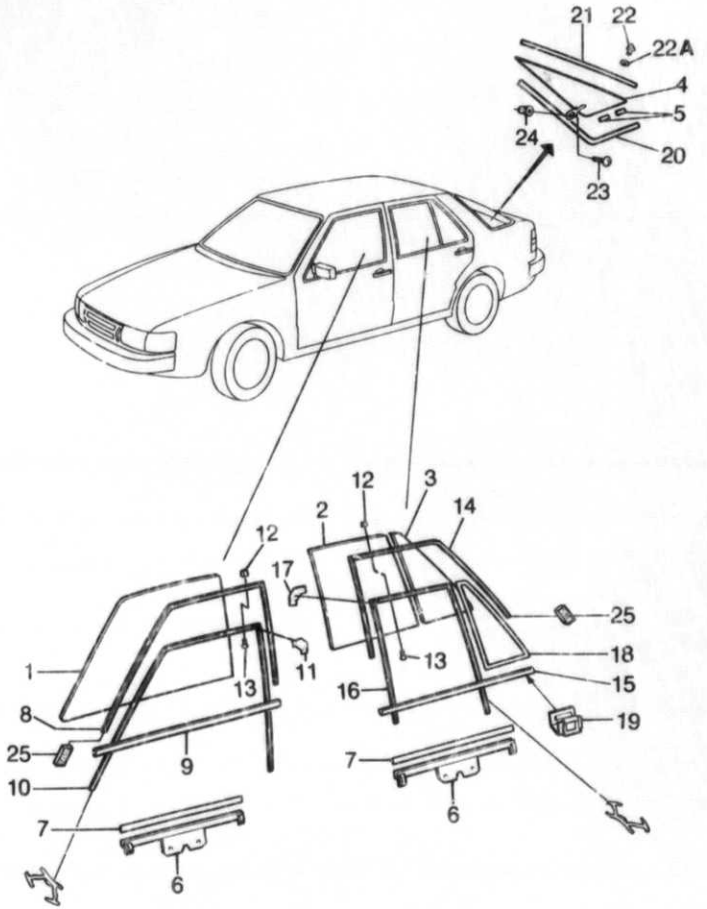

F0784 - 9000

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 66 990*		LH NLS - USE 4304176	1	Door window	Dörruta	4
0020	1	*92 66 982*		RH NLS - USE 4304168	1	Door window	Dörruta	4
0030	2	*92 67 014*		LH NLS - USE 4304192	1	Door window	Dörruta	5
0040	2	*92 67 006*		RH NLS - USE 4304184	1	Door window	Dörruta	5
0050	3	92 67 055		LH	1	Door window	Dörruta	5
0060	3	*92 67 048*		RH NLS - USE 4303244	1	Door window	Dörruta	5
0070	4	82 83 897		LH	1	Side window	Sidoruta	5
0080				See page 8A-127, 4-K08				
0090	4	82 83 905		RH	1	Side window	Sidoruta	5
0100				See page 8A-127, 4-K08				
0110	5	92 59 557	S		2	.Spacer	.Distans	3
0120	6	*92 63 690*		-1985 NLS - USE 6956700	4	Window bracket	Rutfäste	5
0130	6	69 56 700		1986 (9269671)	4	Window bracket	Rutfäste	5
0140	6	69 56 700		1987-	4	Window bracket	Rutfäste	5
0150	7	92 63 708			4	Spacer	Mellanlägg	5
0160	8	92 61 132		LH, BLACK/CHROME	1	Decor frame	Dekorram	3
0170	8	92 61 124		RH, BLACK/CHROME	1	Decor frame	Dekorram	3
0180	9	92 62 288		501), LH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0190	9	40 14 171		502), LH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0200	9	92 62 296		501), RH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0210	9	40 14 189		502), RH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0220	10	92 59 367		14)	2	Seal	Tätning	5
0230	10	92 74 267		15,490) LH	1	Seal	Tätning	5
0240	10	*69 91 095*		491) LH NLS - USE 4171914	1	Seal	Tätning	5
0250	10	92 74 275		15,490) RH	1	Seal	Tätning	5
0260	10	*69 91 087*		491) RH NLS - USE 4171906	1	Seal	Tätning	5
0270	11	92 77 278		1986-, FRONT	1	Seal	Tätning	3
0280	12	92 68 616			36	Clip	Clips	5
0290	13	*92 75 009*		60) NLS - USE 6956601	36	Screw	Skruv	5
0300	13	*92 79 399*		61) NLS - USE 6956601	36	Screw	Skruv	5
0310	14	92 61 157		LH, BLACK/CHROME	1	Decor frame	Dekorram	3
0320	14	92 61 140		RH, BLACK/CHROME	1	Decor frame	Dekorram	3
0330	15	92 62 320		501), LH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0340	15	40 14 288		502), LH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0350	15	92 62 338		501), RH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0360	15	40 14 296		502), RH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0370	16	*92 59 375*		14) NLS	2	Seal	Tätning	5
0380	16	92 74 325		15,490) LH	1	Seal	Tätning	5
0390	16	*69 91 111*		491) LH NLS - USE 4171930	1	Seal	Tätning	5
0400	16	92 74 333		15,490) RH	1	Seal	Tätning	5
0410	16	*69 91 103*		491) RH NLS - USE 4171922	1	Seal	Tätning	5
0420	17	92 77 286		1986-, REAR	1	Seal	Tätning	3
0430	18	92 60 001		LH	1	Seal	Tätning	5
0440	18	92 60 019		RH	1	Seal	Tätning	5
0450	19	92 68 558		-1985	2	Clip	Clips	5
0460	19	92 63 591		1986-	2	Clip	Clips	5
0470								
0480	20	92 74 895		LH, LOWER	1	Decor strip	Dekorlist	4
0490	20	92 74 903		RH, LOWER	1	Decor strip	Dekorlist	4
0500	21	92 62 130		84) LH, UPPER	1	Decor strip	Dekorlist	4

14. Ch. --F4004175
15. Ch. F4004176--
60. Ch. --G1013930
61. Ch. G1013931--
84. Ch. --G1001418
490. Ch. --K1018431, --K2010464, --K8001090
491. Ch. K1018432--, K2010465--, K8001091--
501. Ch. --K1019557, --K2011148, --K8001090
502. Ch. K1019558--, K2011149--, K8001091--


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J02 *Doors and side windows* *Dörr- och sidorutor*

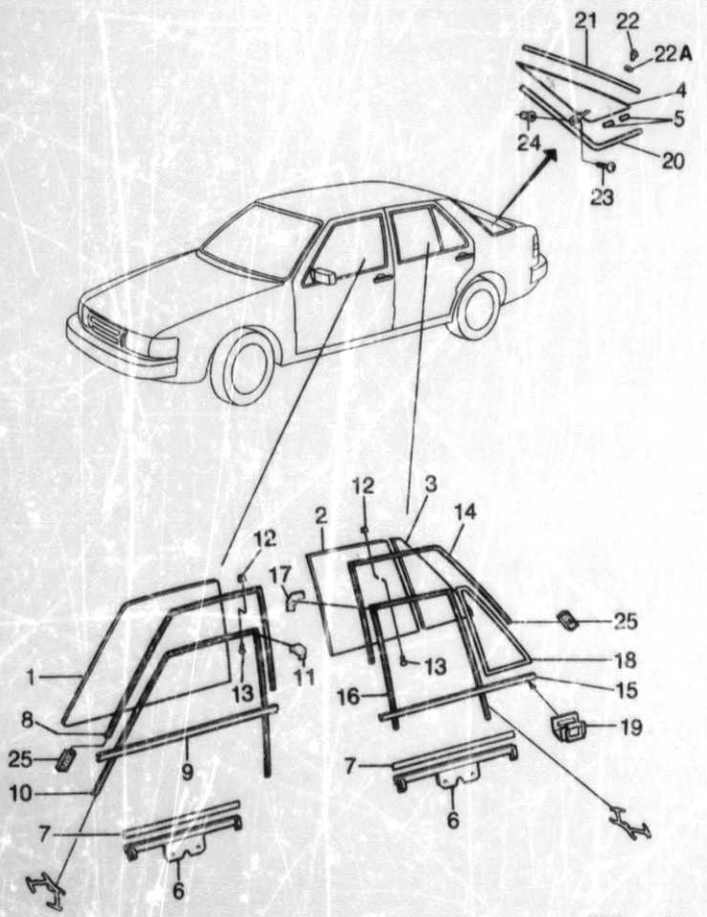

F0784 - 9000

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	21	92 77 294		85) LH, UPPER	1	Decor strip	Dekorlist	4
0520	21	92 62 122		84) RH, UPPER	1	Decor strip	Dekorlist	4
0530	21	92 77 302		85) RH, UPPER	1	Decor strip	Dekorlist	4
0540	22	79 70 601		1985	8	Screw	Skruv	5
0550	22	*79 77 663*		1986-1987 NLS - USE 7970601, 7975261	8	Screw	Skruv	5
0560	22	79 70 601		1988-	8	Screw	Skruv	5
0570	22A	92 30 293		1988-	8	Washer	Bricka	5
0580	23	*79 67 771*		1989-,500) NLS - USE 7970601	2	Screw	Skruv	5
0590	24	79 75 261		1989-,500)	2	Nut	Mutter	5
0600	25	40 10 336		1989-,500)	8	Seal	Tätning	4

84. Ch. --G1001418
85. Ch. G1001419--
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J04 *Splash guard* *Stänkskydd*

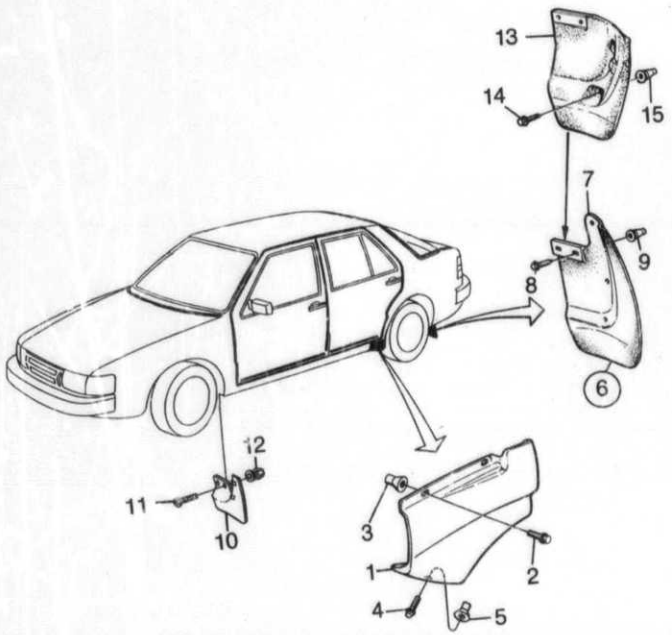

F4064 9000

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 69 432		-1987, LH	1	Protection	Skydd	5
0020	1	69 61 999		1988-, LH	1	Protection	Skydd	5
0030	1	92 69 424		-1987, RH	1	Guard	Skydd	5
0040	1	69 61 981		1988-, RH	1	Protection	Skydd	5
0050	2	79 69 314		1985	4	Screw	Skruv	5
0060	2	97 76 006		1986-1987	4	Screw	Skruv	5
0070	2	97 76 006		1988-	6	Screw	Skruv	5
0080	3	79 75 261		-1987	4	Nut	Mutter	5
0090	3	79 75 261		1988-	6	Nut	Mutter	5
0100	4	79 73 134			4	Screw	Skruv	5
0110	5	79 75 279			4	Nut	Mutter	5
0120	6	78 74 431		See page 8A-125, 4-K06	1	Baffle	Stänkskydd	3
0130	6	96 98 440		5) LH	1	Baffle	Stankskydd	3
0140				See page 8A-133, 4-K14				
0150	6	96 98 457		5) RH	1	Baffle	Stänkskydd	3
0160				See page 8A-133, 4-K14				
0170	7	92 68 038		5) LH	1	.Baffle	.Stänkskydd	3
0180	7	92 68 020		5) RH	1	.Baffle	.Stänkskydd	3
0190	8	79 75 774		-1985 (7973142)	10	Screw	Skruv	5
0200	8	79 77 465		1986-1987	10	Screw	Skruv	5
0210	8	*79 78 646*		1988- NLS - USE 7972672, 8029944	10	Screw	Skruv	5
0220	9	79 75 261			10	Nut	Mutter	5
0230	10	*96 98 416*		4) LH AND RH	1	Baffle	Stänkskydd	3
0240				See page 8A-133, 4-K14				
0240				NLS - USE 8284721				
0250	10	*96 98 424*		4) LH	1	Baffle	Stänkskydd	3
0260				See page 8A-133, 4-K14				
0260				NLS - USE 8284747				
0270	10	*96 98 432*		4) RH	1	Baffle	Stänkskydd	3
0280				See page 8A-133, 4-K14				
0280				NLS - USE 8284739				
0290	10	*92 71 495*		4,52), LH, FI NLS - USE 4008959	1	Baffle	Stänkskydd	4
0300	10	*92 79 415*		4,53), LH, FI NLS - USE 4008959	1	Baffle	Stänkskydd	4
0310	10	*92 71 487*		4,52), RH, FI NLS - USE 4008942	1	Baffle	Stänkskydd	4
0320	10	92 79 407		4,53), RH, FI	1	Baffle	Stänkskydd	4
0330	11	*79 81 947*		FI NLS - USE 7335540, 8019598	4	Screw	Skruv	5
0340	12	92 88 846		FI	4	Nut	Mutter	5
0350	13	69 38 914		1988-,289) LH	1	Baffle	Stänkskydd	3
0360	13	69 38 906		1988-,289) RH	1	Baffle	Stänkskydd	3
0370	14	79 73 191		1988-,289)	8	Screw	Skruv	5
0380	15	79 75 261		1988-,289)	8	Nut	Mutter	5


4. Front Främre
5. Rear Bakre
52. Ch. -G1009904.
53. Ch. G1009905-.
289. Not FI, CA, AU Ej FI, CA, AU

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

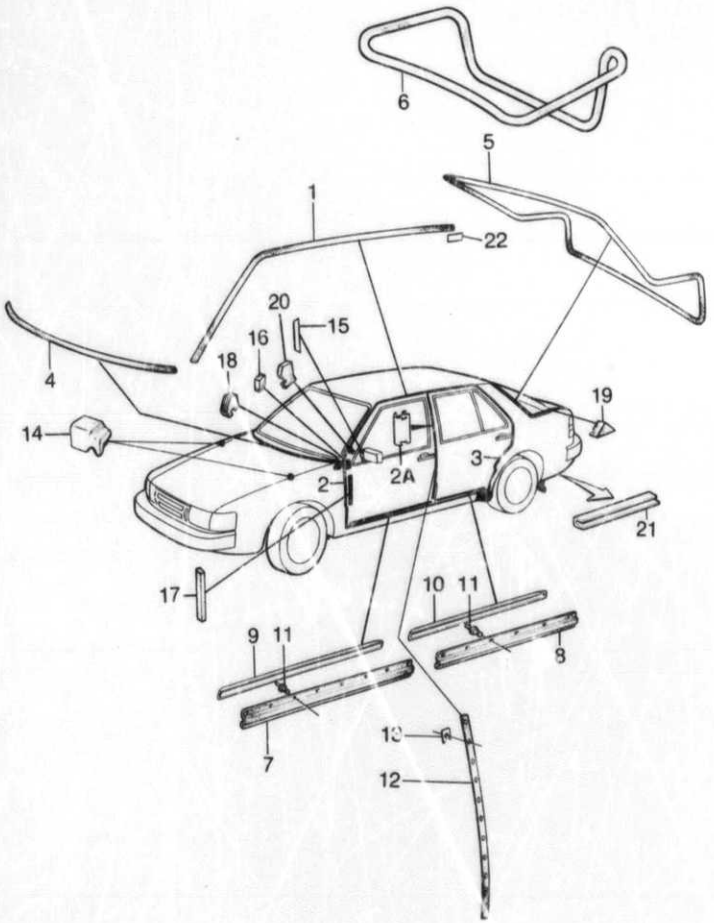

F4065 9000

4-J06

External details, glass, sealings

Other sealings

Utvändiga detaljer, glas, tätningslister

Övriga tätningslister

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 70 166*		LH NLS - USE 4306114	1	Seal	Tätning	5
0020	1	*92 70 174*		RH NLS - USE 4306106	1	Seal	Tätning	5
0030								
0040	2	92 77 153		-1987,560) LH	1	Seal	Tätning	5
0050	2	40 10 526		1988,560) LH (6960108)	1	Seal	Tätning	5
0060	2	40 10 526		1989-,560) LH	1	Seal	Tätning	5
0070	2	92 77 161		-1987,560) RH	1	Seal	Tätning	5
0080	2	*69 60 116*		1988,560) RH NLS - USE 4010518	1	Seal	Tätning	5
0090	2	40 10 518		1989-,560) RH	1	Seal	Tätning	5
0100								
0110	2	69 91 327		358,590) LH (9277112)	1	Seal	Tätning	5
0120	2	69 91 327		359,590) -1988, LH	1	Seal	Tätning	5
0130	2	*40 10 369*		590) LH, ALT TO 6991327 NI S - USE 6991327	1	Seal	Tätning	5
0140	2	40 10 567		1989-,500,590) LH	1	Seal	Tätning	5
0150	2	40 10 351		358,590) RH (9277120)	1	Seal	Tätning	5
0160	2	*69 91 335*		359,590) -1988, RH NLS - USE 4010351	1	Seal	Tätning	5
0170	2	40 10 351		590) RH, ALT TO 6991335	1	Seal	Tätning	5
0180	2	40 10 559		1989-,500,590) RH	1	Seal	Tätning	5
0190								
0200	2	92 77 138		-1987,580) LH	1	Seal	Tätning	5
0210	2	40 10 443		1988,580) LH (6962864)	1	Seal	Tätning	5
0220	2	40 10 443		1989-,500,580) LH	1	Seal	Tätning	5
0230	2	92 77 146		-1987,580) RH	1	Seal	Tätning	5
0240	2	40 10 435		1988,580) RH (6962872)	1	Seal	Tätning	5
0250	2	40 10 435		1989-,500,580) RH	1	Seal	Tätning	5
0260								
0270	2	40 10 401		1986-1988,610) LH (9277179)	1	Seal	Tätning	5
0290	2	40 10 401		1989-,500,610) LH	1	Seal	Tätning	5
0300	2	40 10 393		1986-1988,610) RH (9277187)	1	Seal	Tätning	5
0320	2	40 10 393		1989-,500,610) RH	1	Seal	Tätning	5
0330								
0340	2	92 77 195		1987,600) LH	1	Seal	Tätning	5
0350	2	40 10 484		1988-,358,600) LH (6960124)	1	Seal	Tätning	5
0370	2	40 10 484		359,600) LH (6991400)	1	Seal	Tätning	5
0380	2	92 77 203		1987,600) RH	1	Seal	Tätning	5
0390	2	69 60 132		1988-,358,600) RH	1	Seal	Tätning	5
0400	2	69 91 418		359,600) RH	1	Seal	Tätning	5
0410	2	40 10 476		600) RH, ALT TO 6991418	1	Seal	Tätning	5
0420								
0430	2A	84 12 215			28	Clip	Clips	5
0440								
0450	3	92 67 212		560) LH	1	Seal	Tätning	3
0460	3	69 60 140		1988,560) LH	1	Seal	Tätning	3
0470	3	40 10 542		1989-,560) LH	1	Seal	Tätning	3
0480	3	92 67 204		-1987,560) RH	1	Seal	Tätning	3
0490	3	69 60 157		1988,560) RH	1	Seal	Tätning	3
0500	3	40 10 534		1989-,560) RH	1	Seal	Tätning	3
0510								
0520	3	92 67 196		-1988,590) LH	1	Seal	Tätning	3

358. Ch. --J1023671, --J2014038, --J8001167
359. Ch J1023672--, J2014039--, J8001168--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J08 *Other sealings* *Övriga tätningslister*

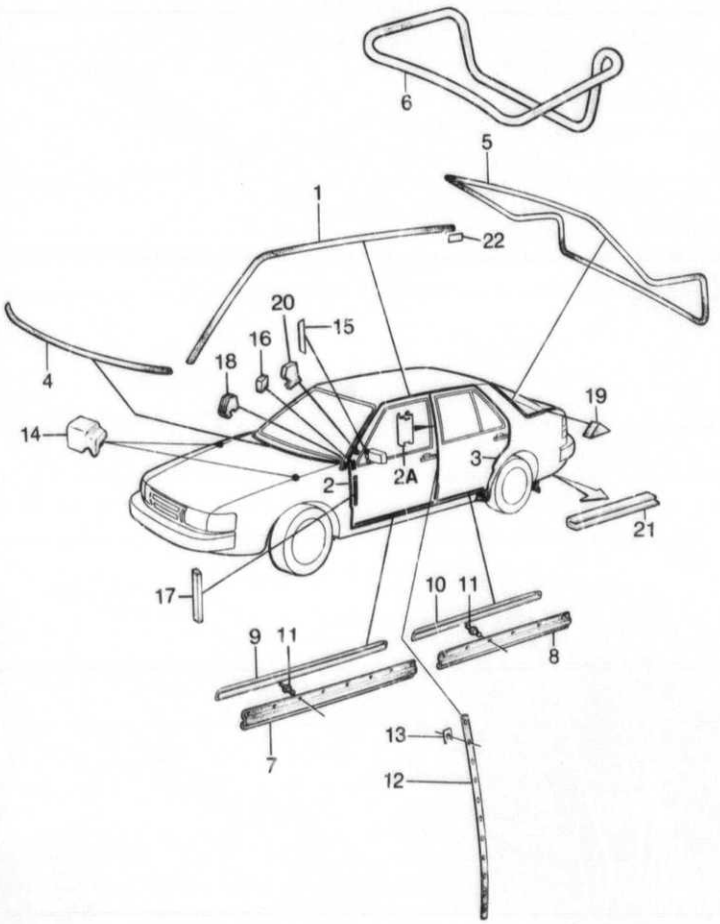

F4065 9000

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	3	40 10 385		590) LH, ALT TO 9267196	1	Seal	Tätning	3
0540	3	40 10 583		1989-,500,590) LH	1	Seal	Tätning	3
0550	3	92 67 188		-1988,590) RH	1	Seal	Tätning	3
0560	3	40 10 377		590) RH, ALT TO 9267188	1	Seal	Tätning	3
0570	3	40 10 575		1989-,500,590) RH	1	Seal	Tätning	3
0580								
0590	3	92 67 238		-1987,580) LH	1	Seal	Tätning	3
0600	3	40 10 468		1988,580) LH (6962880)	1	Seal	Tätning	3
0610	3	40 10 468		1989-,580) LH	1	Seal	Tätning	3
0620	3	92 67 220		-1987,580) RH	1	Seal	Tätning	3
0630	3	40 10 450		1988,580) RH (6962898)	1	Seal	Tätning	3
0640	3	40 10 450		1989-,580) RH	1	Seal	Tätning	3
0650								
0660	3	40 10 427		610)1986-1988, LH (9274051)	1	Seal	Tätning	5
0670								
0680	3	40 10 427		1989-,500,610) LH	1	Seal	Tätning	5
0690	3	40 10 419		610) 1986-1988, RH (9274069)	1	Seal	Tätning	5
0700								
0710	3	40 10 419		1989-,500,610) RH	1	Seal	Tätning	5
0720								
0730	3	92 74 077		1987,600) LH	1	Seal	Tätning	5
0740	3	40 10 500		1988-,600) LH (6960165)	1	Seal	Tätning	5
0750	3	92 74 085		1987,600) RH	1	Seal	Tätning	5
0760	3	40 10 492		1988-,600) RH (6960173)	1	Seal	Tätning	5
0770								
0780	4	92 53 337			1	Seal	Tätning	3
0790	5	69 63 045		283) 5D, (9252172)	1	Seal	Tätning	4
0800	5	69 63 045		284) 5D	1	Seal	Tätning	4
0810	6	69 60 066		4D	1	Seal	Tätning	4
0820	7	*92 66 792*		NLS - USE 4092995	2	Seal	Tätning	3
0830	8	92 66 800		391)	2	Seal	Tätning	3
0840	8	69 62 054		392), LH	1	Seal	Tätning	3
0850	8	*69 62 047*		392), RH NLS - USE 4096889	1	Seal	Tätning	3
0860	9	69 48 897		360) (9264854)	2	Decor strip	Dekorlist	3
0870	9	69 48 897		361)	2	Decor strip	Dekorlist	3
0880	10	92 64 862		360)	2	Decor strip	Dekorlist	3
0890	10	69 48 905		361)	2	Decor strip	Dekorlist	3
0900	11	92 63 674			28	Pop rivet	Popnit	5
0910	12	92 62 965		LH	1	Seal	Tätning	5
0920	12	92 62 957		RH	1	Seal	Tätning	5
0930	13	92 62 940			20	Clip	Clips	
0940	14	92 66 701		127) LH	1	Seal	Tätning	5
0950	14	92 67 261		127) RH	1	Seal	Tätning	5
0960	14	69 56 783		128)	2	Seal	Tätning	5
0970	15	92 77 237			2	Spacer	Mellanlägg	5
0980	16	92 77 690		1986-	2	Sealing strip	Tätningslist	4
0990	17	92 77 708		1986-,241)	2	Sealing strip	Tätningslist	4
1000	18	92 72 311		FOR CARS WITH SUNROOF	2	Seal	Tätning	5

127. Ch. --G1027443
128. Ch. G1027444--
241. Ch. --H1022413, --H8001190.
283. Ch. --J1008887, --J2004139, --J8000460
284. Ch. J1008888--, J2004140--, J8000461--
360. Ch. --J1022336, --J2013414, --J8001297.
361. Ch. J1022337--, J2013415--, J8001298--.
391. Ch. --J1026199, --J2015299, --J8000005
392. Ch. J1026200--, J2015300--, J8000006--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J10 *Other sealings* / *Övriga tätningslister*

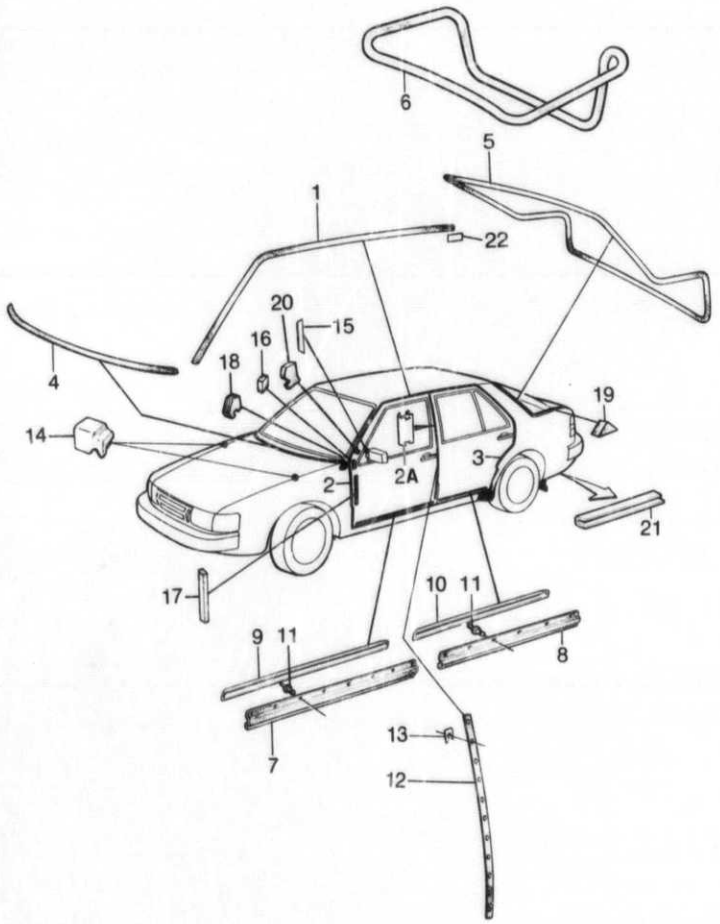

F4065 9000

1100 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1010 18	92 78 466		FOR CARS WITHOUT SUNROOF	2	Seal	Tätning	5
1020 19	92 79 548		54)	2	Sealing strip	Tätningslist	4
1030 20	92 78 755		-1988, LH	1	Seal	Tätning	5
1040 20	40 10 732		1989-,500) LH	1	Seal	Tätning	5
1050 20	92 78 748		-1988, RH	1	Seal	Tätning	5
1060 20	40 10 724		1989-,500) RH	1	Seal	Tätning	5
1070 21	69 61 270		4D	2	Protecting moulding	Skyddslist	5
1080 22	92 88 127		LENGTH 770MM	X	Tape	Tape	5

54. Ch. G1008768-.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J12 *Bumper, front, 5D*

Stötfångare, främre, 5D

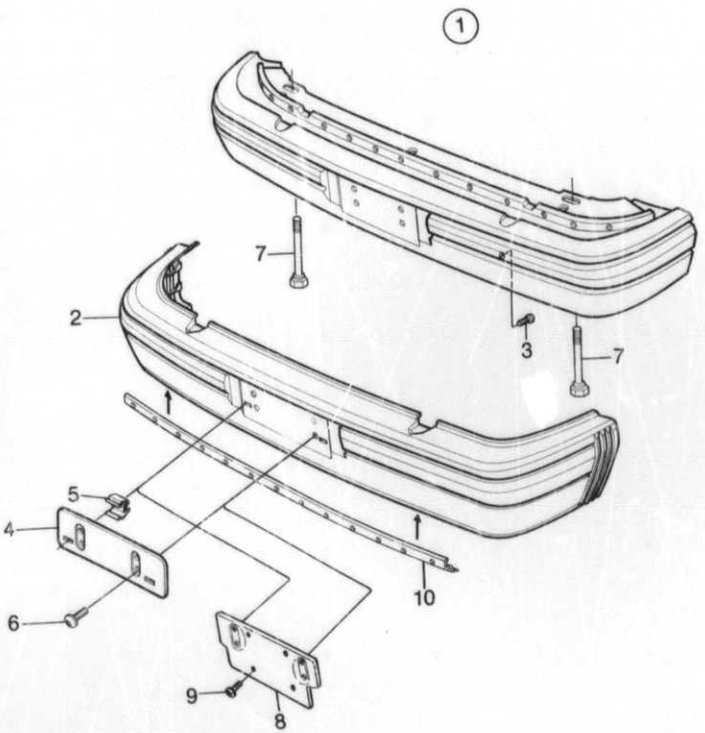

R 9857 - 9000

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 78 714		307)	1	Bumper	Stötfångare	3
0020	1	92 78 714		308)	1	Bumper	Stötfångare	3
0030								
0040	1	40 90 825		308)	1	Bumper	Stötfångare	3
0050								
0060	2	*92 62 742*		-1985 NLS - USE 9278698	1	.Outer casing	.Hölje	3
0070	2	92 78 698		1986	1	.Outer casing	.Hölje	3
0080	2	*69 57 849*		1987-,307) NLS - USE 9278698	1	.Outer casing	.Hölje	3
0080								
0090	2	92 78 698		308)	1	.Outer casing	.Hölje	3
0100								
0110	2	*69 44 649*		308) US NLS - USE 6944623	1	.Outer casing	.Hölje	3
0110								
0120	2	69 44 623		308) US, ALT TO 6944649	1	.Outer casing	.Hölje	3
0130								
0140	3	*79 75 550*		NLS - USE 4446290	24	.Screw	.Skruv	5
0150	4	82 58 428			1	Bracket	Hållare	3
0160	5	79 70 403			2	.Cage nut	.Korgmutter	5
0170	6	80 59 578			4	Screw	Skruv	5
0180	7	92 49 459		-1988	2	Screw	Skruv	5
0190	7	73 99 884		1989-,500)	2	Screw	Skruv	5
0200	8	69 21 142		US	1	Bracket	Hållare	3
0210	9	79 77 390		US	1	Screw	Skruv	5
0220	10	92 49 566			1	Attaching rail	Fästskena	6

307. Ch. --J1009049, --J2004360
308. Ch. J1009050--, J2004361--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J14 *Bumper, front, 4D*

Stötfångare, främre, 4D

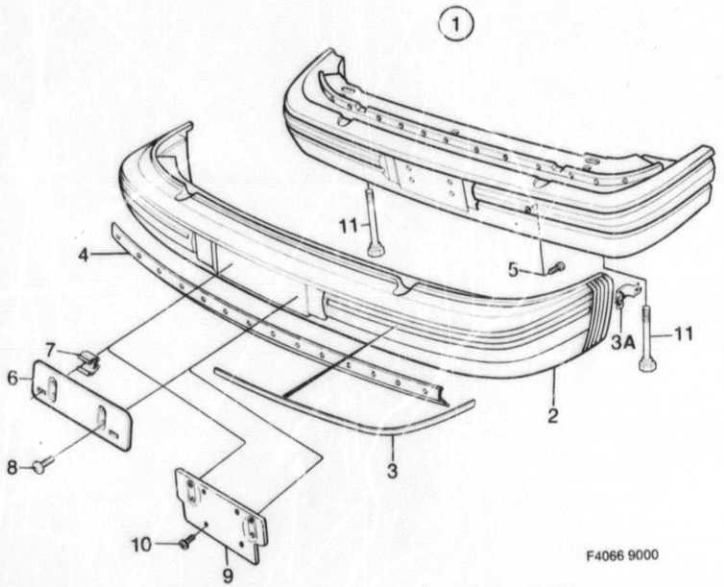

F4066 9000

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 54 952			1	Bumper	Stötfångare	3
0020	1	*69 62 591*		US NLS - USE 6961924	1	Bumper	Stötfångare	3
0030	1	69 61 924		US, ALT TO 69 62 591	1	Bumper	Stötfångare	3
0040	2	92 77 484			1	.Outer casing	.Hölje	3
0050	2	*69 62 583*		US NLS - USE 6961916	1	.Outer casing	.Hölje	3
0060	2	69 61 916		US, ALT TO 69 62 583	1	.Outer casing	.Hölje	3
0070	3	69 55 033			2	.Decor strip	.Dekorlist	3
0080	3A	69 59 142			2	.Spring	.Fjäder	4
0090	4	69 55 009			1	.Attaching rail	.Fästskena	6
0100	5	*79 75 550*		NLS - USE 4446290	24	.Screw	.Skruv	5
0110	6	82 58 428			1	Bracket	Hållare	3
0120	7	79 70 403			2	.Cage nut	.Korgmutter	5
0130	8	80 59 578			4	Screw	Skruv	5
0140	9	69 21 142		US	1	Bracket	Hållare	3
0150	10	79 77 390		US	4	Screw	Skruv	5
0160	11	73 99 884			2	Screw	Skruv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J16 *Bumper, rear, 5D*

Stötfångare, bakre, 5D

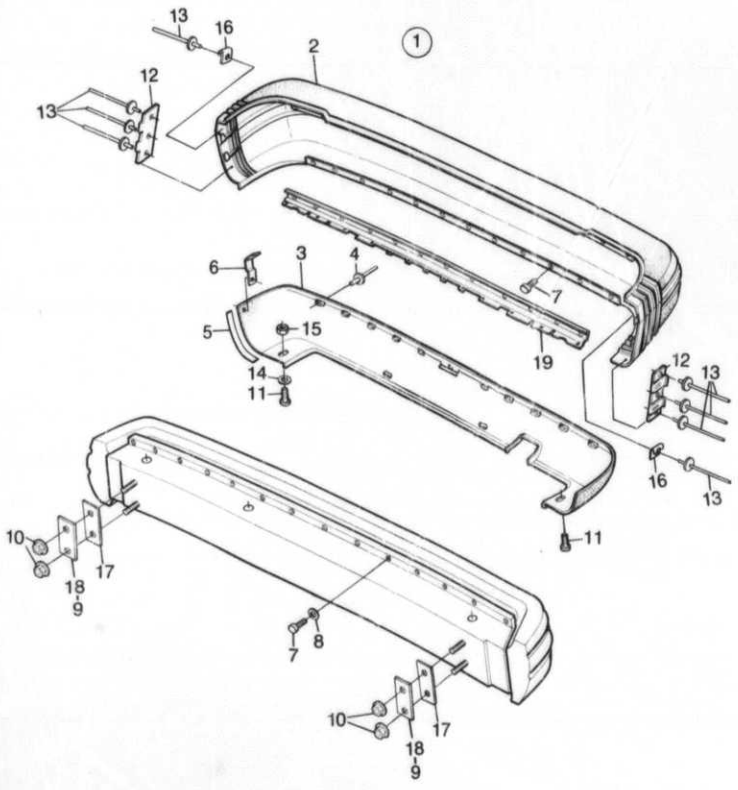

R 9859 - 9000

1300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 78 730		-1985 (9253949)	1	Bumper	Stötfångare	4
0020	1	92 78 730		1986	1	Bumper	Stötfångare	4
0030								
0040	1	*69 57 880*		1987-1988 NLS - USE 6955256	1	Bumper	Stötfångare	4
0050	1	69 55 256		1987-1988 ALT TO 69 57 880	1	Bumper	Stötfångare	4
0060								
0070								
0080	1	*69 73 242*		1989-,500) NLS - USE 6944854, 6944953, 6944961	1	Bumper	Stötfångare	4
0090	1	*69 43 773*		1989-,500) ALT TO 69 73 242 NLS - USE 6944854, 6944953, 6944961	1	Bumper	Stötfångare	4
0100								
0110								
0120	2	92 78 706		-1985 (9262718)	1	.Outer casing	.Hölje	3
0130	2	92 78 706		1986	1	.Outer casing	.Hölje	3
0140								
0150	2	*69 57 864*		1987-1988 NLS - USE 9278706	1	.Outer casing	.Hölje	3
0160	2	92 78 706		1987-1988 ALT TO 69 57 864	1	.Outer casing	.Hölje	3
0170								
0180								
0190	2	69 62 302		1989-,500)	1	.Outer casing	.Hölje	3
0200	2	*69 42 742*		1989-,500) ALT TO 69 62 302 NLS - USE 6944870, 6944953, 6944961	1	.Outer casing	.Hölje	3
0210								
0220								
0230	3	92 49 772		-1986 (9262734)	1	.Screen	.Avskärmning	3
0240	3	92 49 772		1987-1988	1	.Screen	.Avskärmning	3
0250	4	82 35 178		-1988	11	.Pop rivet	.Popnit	5
0260	5	92 71 271		-1986	2	.Sealing strip	.Tätningslist	5
0270	6	92 71 289		-1988	2	.Bracket	.Konsol	5
0280	7	*79 75 550*		NLS - USE 4446290	20	.Screw	.Skruv	5
0290	8	*80 73 223*		NLS - USE 9166380	11	.Washer	.Bricka	5
0300	9	69 55 298		1987-1988	2	.Seal	.Tätning	5
0310	9	69 92 325		500) 1989	4	.Seal	.Tätning	5
0320	10	79 67 953		-1986	4	Nut	Mutter	5
0330	10	79 67 979		1987-	4	Nut	Mutter	5
0340	11	79 70 304			2	Screw	Skruv	5
0350	12	92 60 993		LH	1	Bracket	Hållare	5
0360	12	92 60 985		RH	1	Bracket	Hållare	5
0370	13	79 72 516			8	Rivet	Nit	5
0380	14	73 98 878		(7088073)	2	Lock washer	Låsbricka	5
0390	15	79 33 682			2	Spring nut	Fjädermutter	3
0400	16	92 76 304		16)	2	Bracket	Hållare	5
0410	17	*92 49 681*		NLS - USE 6991863	2	Spacer	Mellanlägg	5
0420	18	92 49 699		-1986	2	Seal	Tätning	5
0430	19	92 49 665		-1988	1	Attaching rail	Fästskena	6

16. Ch. F4002421–
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J18

Bumper, rear, 4D
Stötfångare, bakre, 4D

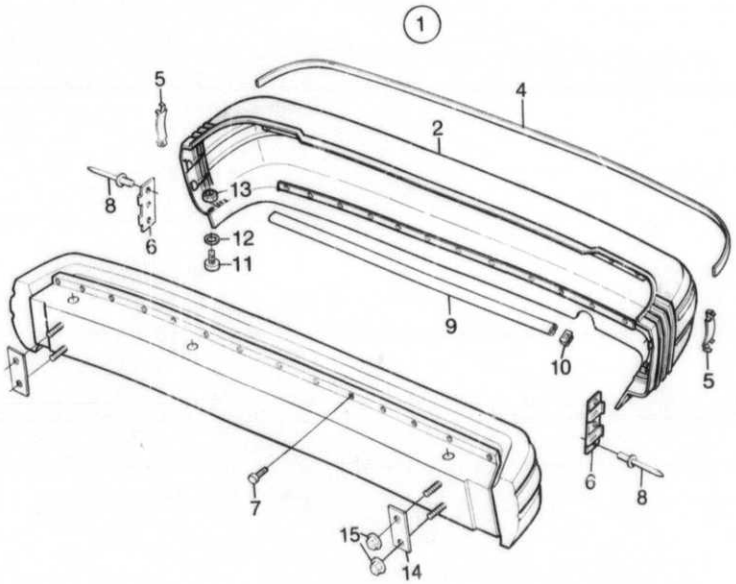

F2492 - 9000

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*69 59 712*		NLS - USE 4093969	1	Bumper	Stötfångare	4
0030	1	*69 55 173*		ALT TO 69 59 712 NLS - USE 4093969	1	Bumper	Stötfångare	4
0030								
0035								
0040	2	*69 59 720*		NLS - USE 4093977	1	.Outer casing	.Hölje	3
0050	2	*92 76 320*		ALT TO 69 59 720 NLS - USE 4093977	1	.Outer casing	.Hölje	3
0050								
0060								
0070	4	69 73 945			1	.Decor strip	.Dekorlist	3
0080	5	69 59 142			2	.Spring	.Fjäder	4
0100	6	92 75 843		LH	1	.Bracket	.Hållare	5
0120	6	92 75 835		RH	1	.Bracket	.Hållare	5
0140	7	*79 75 550*		NLS - USE 4446290	22	.Screw	.Skruv	5
0180	8	79 72 516			6	Rivet	Nit	5
0200	9	40 10 625		425)	1	Strip	List	5
0220	10	40 13 256		425)	7	Clip	Clips	5
0240	11	79 70 304			2	Screw	Skruv	5
0260	12	70 88 073			2	Washer	Bricka	5
0280	13	79 33 682			2	Spring nut	Fjädermutter	3
0300	14	69 92 325			4	Seal	Tätning	5
0320	15	79 67 979			4	Nut	Mutter	5

425. Ch. J1081141--

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8A GROUP INDEX

Main body	**4-F06**
Hood, front, fenders	**4-G12**
Doors, trunk lid	**4-G22**
External details, glass, sealings	**4-I02**
Bumpers and touch-up paint	**4-J12**
Complete sets:	**4-K06**

4-J20

Bumpers and touch-up paint
1-can

Stötfångare och bättringsfärg
1-komponent

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 168		1987-, BODY COLOUR 198	X	Touch-up paint Embassy blue	Bättringsfärg Ambassadblå	3
0030								
0040	1/4L	96 98 176		1987-, BODY COLOUR 198	X	Touch-up paint Embassy blue	Bättringsfärg Ambassadblå	3
0050								
0060	1L	84 87 969		-1987, BODY COLOUR 127	X	Touch-up paint Cherry red	Bättringsfärg Cherryröd	3
0070								
0080	1L	96 98 853		1988-, BODY COLOUR 214	X	Touch-up paint Cherry red	Bättringsfärg Cherryröd	3
0090								
0100	1/4L	84 87 977		-1987, BODY COLOUR 127	X	Touch-up paint Cherry red	Bättringsfärg Cherryröd	3
0110								
0120	1/4L	96 98 861		1988-, BODY COLOUR 214	X	Touch-up paint Cherry red	Bättringsfärg Cherryröd	3
0130								
0140	1L	96 98 481		1988-, BODY COLOUR 213	X	Touch-up paint Rodonite red	Bättringsfärg Rodonitröd	3
0150								
0160	1/4L	96 98 499		1988-, BODY COLOUR 213	X	Touch-up paint Rodonite red	Bättringsfärg Rodonitröd	3
0170								
0180	1L	82 84 127		1989-,500) BODY COLOUR 215	X	Touch-up paint Ultramarine	Bättringsfärg Ultramarin	3
0190								
0200	1/4L	82 84 135		1989-,500) BODY COLOUR 215	X	Touch-up paint Ultramarine	Bättringsfärg Ultramarin	3
0210								
0220	1L	82 84 168		1989-,500) BODY COLOUR 217	X	Touch-up paint Ascot grey	Bättringsfärg Ascotgrå	3
0230								
0240	1/4L	82 84 176		1989-,500) BODY COLOUR 217	X	Touch-up paint Ascot grey	Bättringsfärg Ascotgrå	3
0250								
0260	1L	84 87 266		BODY COLOUR 153	X	Touch-up paint Cirrus white	Bättringsfärg Cirrusvit	3
0270								
0280	1/4L	84 87 274		BODY COLOUR 153	X	Touch-up paint Cirrus white	Bättringsfärg Cirrusvit	3
0290								
0300	1L	78 20 228		BODY COLOUR 170	X	Touch-up paint Black	Bättringsfärg Svart	3
0310								
0320	1/4L	78 20 244		BODY COLOUR 170	X	Touch-up paint Black	Bättringsfärg Svart	3
0330								
0340	1L	96 98 341			X	Touch-up paint Charcoal grey 119 for sill	Bättringsfärg Antracitgrå 119 för tröskel	3
0350								
0360								
0370	1/4L	96 98 358			X	Touch-up paint Charcoal grey 119 for sill	Bättringsfärg Antracitgrå 119 för tröskel	3
0380								
0390								
0400	1L	84 87 753			X	Thinner	Förtunning	5
0410	5L	84 87 761			X	Thinner	Förtunning	5
120	1L	*88 16 415*		618), 20-80° NLS	X	Hardener	Härdare	5
0430								
0440						PRIMER	GRUNDFÄRG	
0450	1L	• 74 97 019			X	Primer 1K-Füllprimer	Grundfärg 1K-Füllprimer	6
0460								
0470	1L	82 85 231			X	Thinner 2K-Expressverdünnung	Förtunning 2K-Expressverdünnung	5
0480								
0490								
0500						FILLER	SPACKEL	
0510	2KG	• 82 85 488			X	Polyester filler	Polyesterspackel	6
0520		• 82 85 496			X	Hardener	Härdare	5
0530	1L	84 87 621			X	Spray filler	Sprutspackel	6

500. Also valid for SE 1988B. Gäller även för SE 1988B.
618. For quick through-drying För snabb genomtorkning

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J22

Bumpers and touch-up paint
2-can

Stötfångare och bättringsfärg
2-komponent

1750	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010							FINISHING PAINT	TÄCKFÄRG	
0020	1L		84 87 985		-1987, BODY COLOUR 127	X	Touch-up paint	Bättringsfärg	3
0030							Cherry red	Cherryröd	
0040	1L		96 98 879		1988-, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0050							Cherry red	Cherryröd	
0060	1L		84 87 282		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0070							Cirrus white	Cirrusvit	
0080	1L		96 98 184		1987-, BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0090							Embassy blue	Ambassadblå	
0100	1L		82 84 143		1989-,500) BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0110							Ultramarine	Ultramarin	
0120	1L		97 46 264		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0130							Black	Svart	
0140	1L		96 98 507		1988-, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0150							Rodonite red	Rodonitröd	
0160	1L		82 84 184		1989-,500) BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0170							Ascot grey	Ascotgrå	
0180	1L		82 85 231			X	Thinner	Förtunning	5
0190							2K-Expressverdünnung	2K-Expressverdünnung	
0200	1/2L		84 86 300			X	Hardener	Härdare	5
0210						X	2K-Spezialhärter	2K-Spezialhärter	
0220	1L		84 86 292			X	Hardener	Härdare	5
0230							2K-Spezialhärter	2K-Spezialhärter	
0240									
0250							PRIMER	GRUNDFÄRG	
0260	4L	•	74 97 001			X	Primer	Grundfärg	6
0270							2K-Toppfüller	2K-Toppfüller	
0280	1/2L		84 86 300			X	Hardener	Härdare	5
0290						X	2K-Spezialhärter	2K-Spezialhärter	
0300	1L		84 86 292			X	Hardener	Härdare	5
0310							2K-Spezialhärter	2K-Spezialhärter	
0320									
0330							INTERMEDIATE PAINT	MELLANFÄRG	
0340	1L		84 87 712			X	Intermediate paint	Mellanfärg	6
0350							2K-Fillsealer	2K-Fillsealer	
0360							Colourable	Infärgningsbar	
0370	1L		82 85 231			X	Thinner	Förtunning	5
0380							2K-Expressverdünnung	2K-Expressverdünnung	
0390	1/2L		84 86 300			X	Hardener	Härdare	5
0400							2K-Spezialhärter	2K-Spezialhärter	
0410	1L		84 86 292			X	Hardener	Härdare	5
0420							2K-Spezialhärter	2K-Spezialhärter	
0430									
0440							FILLER	SPACKEL	
0450	2KG	•	82 85 488			X	Polyester filler	Polyesterspackel	6
0460		•	82 85 496			X	Hardener	Härdare	5
0470	1L		84 87 621			X	Spray filler	Sprutspackel	6

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-J24

Bumpers and touch-up paint
Two-coat type

Stötfångare och bättringsfärg
Tvåskiktstyp

1775	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						BASE METALLIC COAT	BASMETALLICFÄRG	
0020	1L	84 87 217		-1986, BODY COLOUR 172	X	Touch-up paint	Bättringsfärg	3
0030						Silver	Silver	
0040	1L	96 98 044		1987-, BODY COLOUR 200	X	Touch-up paint	Bättringsfärg	3
0050						Silver	Silver	
0060	1L	96 98 465		1988-, BODY COLOUR 212	X	Touch-up paint	Bättringsfärg	3
0070						Magenta brown	Magentabrun	
0080	1L	97 46 363		-1986, BODY COLOUR 117	X	Touch-up paint	Bättringsfärg	3
0090						Platinum blue	Platinablå	
0100	1L	96 98 085		1987-, BODY COLOUR 203	X	Touch-up paint	Bättringsfärg	3
0110						Platinum blue	Platinablå	
0120	1L	97 46 587		-1986, BODY COLOUR 120	X	Touch-up paint	Bättringsfärg	3
0130						Cochineal red	Cochenilleröd	
0140	1L	96 98 119		1987, BODY COLOUR 206	X	Touch-up paint	Bättringsfärg	3
0150						Cochineal red	Cochenilleröd	
0160	1L	97 46 595		-1986, BODY COLOUR 129	X	Touch-up paint	Bättringsfärg	3
0170						Rose quartz	Rosenkvarts	
0180	1L	96 98 069		1987-, BODY COLOUR 202	X	Touch-up paint	Bättringsfärg	3
0190						Rose quartz	Rosenkvarts	
0200	1L	97 46 801		-1986, BODY COLOUR 158	X	Touch-up paint	Bättringsfärg	3
0210						Odoardo grey	Odoardogrå	
0220	1L	96 98 093		1987-, BODY COLOUR 204	X	Touch-up paint	Bättringsfärg	3
0230						Odoardo grey	Odoardogrå	
0240	1L	96 98 051		1987-, BODY COLOUR 201	X	Touch-up paint	Bättringsfärg	3
0250						Bronze	Bronze	
0260	1L	97 46 819		-1986, BODY COLOUR 159	X	Touch-up paint	Bättringsfärg	3
0270						Malachite green	Malakitgrön	
0280	1L	96 98 101		1987-, BODY COLOUR 205	X	Touch-up paint	Bättringsfärg	3
0290						Malachite green	Malakitgrön	
0300	1L	82 84 150		1989-,500) BODY	X	Touch-up paint	Bättringsfärg	3
0310				COLOUR 216		Beryl green	Beryllgrön	
0320	1L	97 46 975			X	Thinner	Förtunning	5
0330								
0340						PRIMER	GRUNDFÄRG	
0350	1L	• 74 97 019			X	Primer	Grundfärg	6
0360						1K-Füllprimer	1K-Füllprimer	
0370	1L	82 85 231			X	Thinner	Förtunning	5
0380						2K-Expressverdünnung	2K-Expressverdünnung	
0390								
0400						CLEAR ENAMEL	KLARLACK	
0410	1L	84 87 225			X	Clear enamel	Klarlack	3
0420	1L	82 85 231			X	Thinner	Förtunning	5
0430						2K-Expressverdünnung	2K-Expressverdünnung	
0440	1/2L	84 86 300			X	Hardener	Härdare	5
0450						2K-Spezialhärter	2K-Spezialhärter	
0460	1L	84 86 292			X	Hardener	Härdare	5
0470						2K-Spezialhärter	2K-Spezialhärter	
0480								
0490						FILLER	SPACKEL	
0500	2KG	• 82 85 488			X	Polyester filler	Polyesterspackel	6
0510		• 82 85 496			X	Hardener	Härdare	5
0520	1L	84 87 621			X	Spray filler	Sprutspackel	6

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-K02

Bumpers and touch-up paint

Pearl

Stötfångare och bättringsfärg

Pärlemor

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020						EFFECT PRIMER	EFFECT PRIMER	
0040	1L	97 46 488			X	Touch-up paint	Bättringsfärg	3
0090								
0100						EFFECT COAT	EFFECT COAT	
0120	1L	97 46 504		BODY COLOUR 156	X	Touch-up paint	Bättringsfärg	3
0160								
0180						CLEAR ENAMEL	KLARLACK	
0200	1L	97 46 611		GLASURIT 923-54	X	Clear enamel	Klarlack	3
0220								
0240						HARDENER	HÄRDARE	
0260	1/2L	97 46 629		GLASURIT 929-29	X	Hardener	Härdare	5
0280	1/2L	97 46 637		GLASURIT 929-28	X	Hardener	Härdare	5
0320	1/2L	97 46 645		GLASURIT 929-29/1	X	Hardener	Härdare	5
0360								
0380						THINNER	FÖRTUNNING	
0400	1L	97 46 652		GLASURIT 352-91	X	Thinner	Förtunning	5
0420	1L	97 46 660		GLASURIT 352-50	X	Thinner	Förtunning	5
0440	1L	97 46 678		GLASURIT 352-216	X	Thinner	Förtunning	5
0500								
0560	5L	97 46 686		GLASURIT 541-5 SILICONENT	X	Degreasing agent	Avfettningsmedel	5
0580								
0900								
0920						FILLER	SPACKEL	
0940	2KG	84 87 613			X	Polyestar filler	Polyesterspackel	6
0960	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-K04

Other paint
Övrig färg

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1/4L	97 46 835		619)	X	Touch-up paint	Bättringsfärg	3
					Charcoal grey 176	Antracitgrå 176	
1L	97 46 975			X	Thinner	Förtunning	5
1/4L	97 46 850		619)	X	Touch-up paint	Bättringsfärg	3
					Black 175	Svart 175	
1L	82 85 231			X	Thinner	Förtunning	5
					2K-Expressverdünnung	2K-Expressverdünnung	
					PRIMER	GRUNDFÄRG	
1L	82 85 249		619)	X	Primer	Grundfärg	6
					1K-Plastic primer ready to spray	1K-Plastic primer sprutfärdig	
1L	82 85 256		619)	X	Primer	Grundfärg	6
					1K-Plastic füller	1K-Plastic füller	
1L	97 46 967			X	Thinner	Förtunning	5
					PLASTICIZER	MJUKGÖRARE	
1L	97 46 314		619)	X	Plasticizer	Mjukgörare	6
					2K-Elastic adetiv	2K-Elastic adetiv	
5L	97 46 884		620)	X	Cleaning agent	Rengöringsmedel	6
1KG	82 85 264		620)	X	Filler	Spackel	6
2L	97 46 892		620)	X	Primer	Grundfärg	6
1L	97 46 900		620)	X	Hardener	Härdare	6
1L	97 46 926		620)	X	Intermediate paint	Mellanfärg	6
1L	97 46 934		620)	X	Hardener	Härdare	5
1L	97 46 959		620)	X	Plasticizer	Mjukgörare	6
1L	97 46 652		620)	X	Thinner	Förtunning	5
5L	84 87 779			X	Cleaning agent silicon remover	Rengöringsmedel silikonborttagare	6
1KG	*79 94 510*		NLS	X	Underseal	Underredsmassa	6
1KG	79 94 882		621)	X	Stone chip interpaint	Stenskottsmellanfärg	6
	79 94 890		621) NLS	X	Hardener	Härdare	5
5L	*84 87 787*		622) NLS	X	Thinner	Förtunning	6
1/4L	97 46 843			X	Touch-up paint	Bättringsfärg	3
1L	*84 87 639*		NLS	X	Touch-up paint	Bättringsfärg	6
1L	*97 46 306*		NLS	X	Primer	Grundfärg	6
1L	*84 87 670*		NLS	X	Primer	Grundfärg	6
5L	*84 87 688*		NLS	X	Primer	Grundfärg	6
2,5L	*84 87 704*		NLS	X	Primer	Grundfärg	6
1L	*84 87 696*		NLS	X	Hardener	Härdare	6
1,5L	*84 87 647*		NLS	X	Thinner	Förtunning	6
1L	*84 87 795*		NLS	X	Thinner	Förtunning	6
1L	*84 86 318*		NLS - USE 9746975	X	Thinner	Förtunning	5
5L	84 86 326			X	Thinner	Förtunning	5
1L	*84 87 738*		NLS	X	Thinner	Förtunning	5
5L	*84 87 746*		NLS	X	Thinner	Förtunning	5
	97 46 293		NLS	X	Filler	Spackel	6

619. For plastic För plast
620. For rear spoiler (soft, rubber) För bakre spoiler (mjuk, gummi)
621. 2K, IR-lamp with minimum 100°C 2K, IR-lampa med minst 100°C
622. For cleaning airguns För rengöring av sprutpistoler


MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX


Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-K06

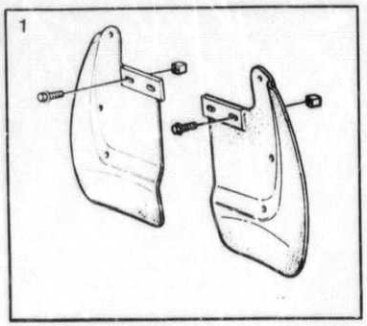


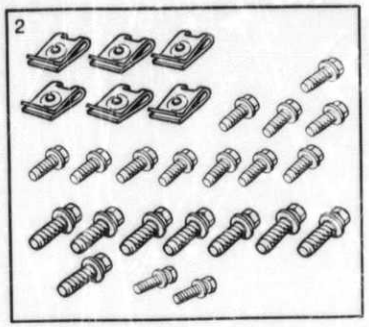

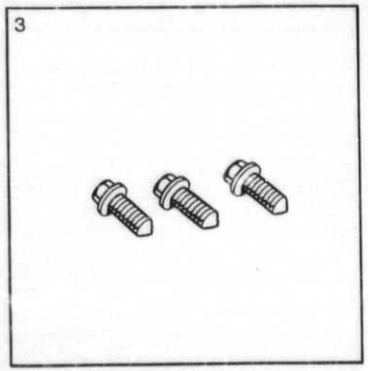

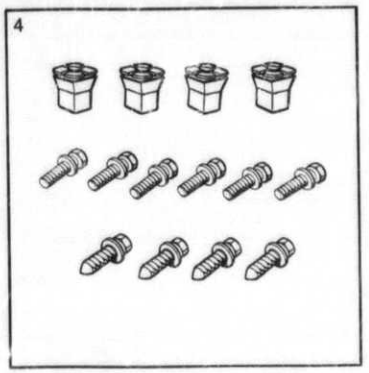

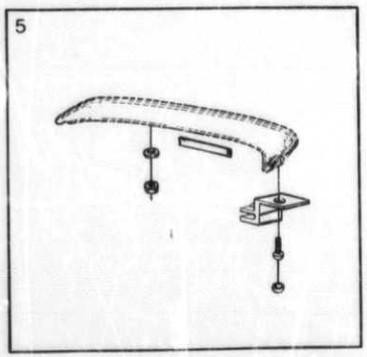

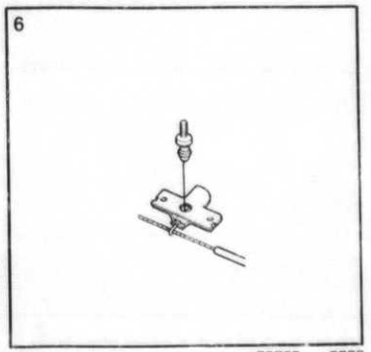

F0785 - 9000

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	78 74 431		REAR	X	Baffle	Stänkskydd	3
0020		92 68 038		LH	1	.Baffle	.Stänkskydd	3
0030		92 68 020		RH	1	.Baffle	.Stänkskydd	3
0040		79 73 175			10	.Screw	.Skruv	5
0050		79 75 261			10	.Nut	.Mutter	5
0060								
0070	2	92 67 956		4)	X	Mounting kit	Monteringssets	3
0080						Spoiler	Spoiler	
0090		79 73 134			8	.Screw	.Skruv	5
0100		79 77 523			6	.Clip	.Clips	5
0102		79 76 988			2	.Screw	.Skruv	5
0110		79 76 996			11	.Screw	.Skruv	5
0120								
0130	3	92 69 127		-1987	X	Mounting kit	Monteringssats	3
0140						Air shield	Luftskärm	
0150		79 76 988			3	.Screw	.Skruv	5
0160								
0170	4	92 69 135		-1987	X	Mounting kit	Monteringssats	3
0180						Shield	Sköld	
0190		79 76 988			6	.Screw	.Skruv	5
0200		79 75 279			4	.Nut	.Mutter	5
0210		79 77 465			4	.Screw	.Skruv	5
0220								
0240	5	96 98 374		5,498)	X	Mounting kit	Monteringssats	5
0245						Spoiler	Spoiler	
0260		79 73 365			5	.Nut	.Mutter	5
0280		80 59 537			2	.Screw	.Skruv	5
0300		92 30 293			5	.Washer	.Bricka	5
0320		92 77 864			2	.Attaching bracket	.Fästvinkel	5
0340		92 78 847			2	.Protecting cap	.Skyddshuv	5
0360								
0362	5	82 84 267		5,499)	X	Mounting kit	Monteringssats	5
0363						Spoiler	Spoiler	
0364		73 98 423			5	.Nut	.Mutter	5
0366		80 59 537			2	.Screw	.Skruv	5
0368		40 89 389			7	.Washer	.Bricka	5
0369		40 13 454			2	.Clip	.Clips	5
0370		92 77 864			2	.Attaching bracket	.Fästvinkel	5
0372		92 78 847			2	.Protecting cap	.Skyddshuv	5
0378								
0380	6	96 98 523			X	Bonnet lock kit	Huvlåssats	3
0400		69 73 689			1	.Bonnet lock	.Huvlås	3
0420		69 73 788			1	.Lock pin	.Låstapp	4
0440								
0460	6	96 98 515		RHD	X	Bonnet lock kit	Huvlåssats	3
0480		69 73 697		RHD	1	.Bonnet lock	.Huvlås	3
0500		69 73 788			1	.Lock pin	.Låstapp	4

4. Front Främre
5. Rear Bakre

498. Ch. --K1021884, --K2012733, --K8001395
499. Ch. K1021885--, K2012734--, K8001396--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

Complete sets
4-K08
Car body, external

Satser
Kaross, utvändig

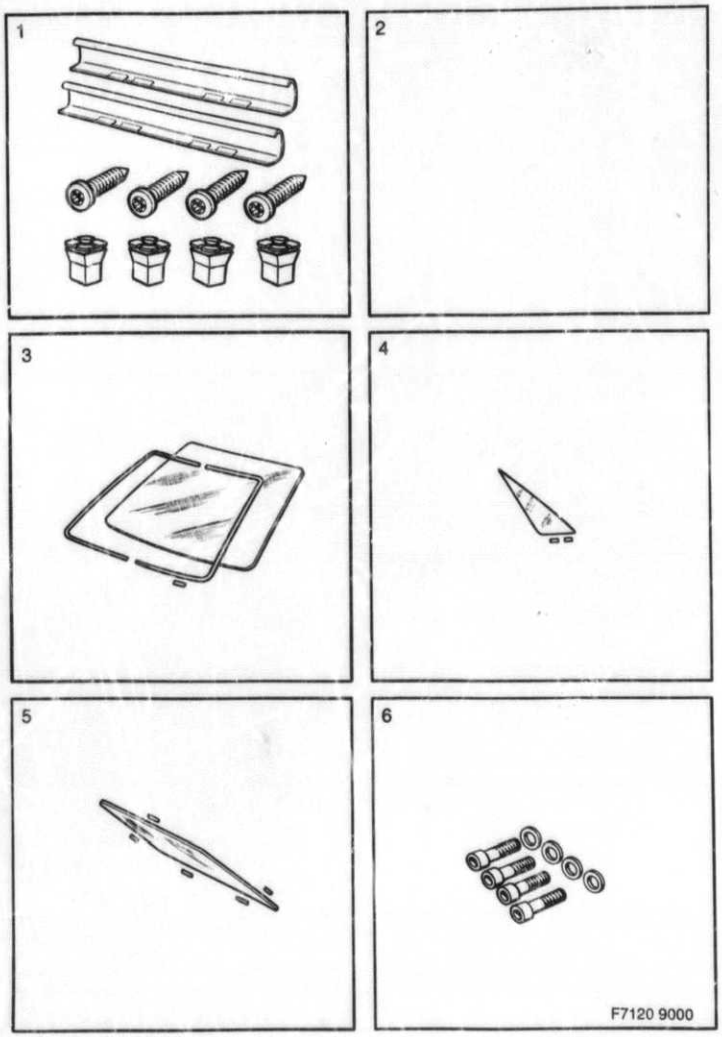

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1	82 84 531			X	Mounting kit windscreen	Monteringssats vindruta	3
0030		• 42 50 320			1	.Decor strip	.Dekorlist	3
0040		79 70 601			4	.Screw	.Skruv	5
0050		79 75 261			4	.Nut	.Mutter	5
0060		92 78 334			2	.Connector	.Skarvstycke	3
0080	3	• 74 97 050		COLOURED	X	Windscreen	Vindruta	3
0090		• *43 05 884*		1) NLS	1	.Windscreen	.Vindruta	3
0100		• 74 97 084			1	.Spacer	.Distans	5
0110		40 13 603			2	..Spacer	..Distans	3
0120		69 91 244			2	..Spacer	..Distans	3
0130		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0140		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0160	3	• 74 97 043		COLOURED WITH CUT FOR CH. NUMBER	X	Windscreen	Vindruta	3
0180		• *42 50 460*		1) NLS	1	.Windscreen	.Vindruta	3
0190		• 74 97 084			1	.Spacer	.Distans	5
0200		40 13 603			2	..Spacer	..Distans	3
0210		69 91 244			2	..Spacer	..Distans	3
0220		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0230		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0250	3	• 82 85 330		US	X	Windscreen	Vindruta	3
0260		*43 04 143*		1) NLS	1	.Windscreen	.Vindruta	3
0270		• 74 97 084			1	.Spacer	.Distans	5
0280		40 13 603			2	..Spacer	..Distans	3
0290		69 91 244			2	..Spacer	..Distans	3
0300		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0310		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0330	3	• 82 85 272		AU	X	Windscreen	Vindruta	3
0340		*42 50 262*		1) NLS	1	.Windscreen	.Vindruta	3
0350		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0360		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0380	4	82 83 897		LH	X	Side window	Sidoruta	5
0390		69 91 509		1)	1	.Side window	.Sidoruta	5
0400		92 59 557			2	.Spacer	.Distans	3
0420	4	82 83 905		RH	X	Side window	Sidoruta	5
0430		69 91 491		1)	1	.Side window	.Sidoruta	5
0440		92 59 557			2	.Spacer	.Distans	3
0460	5	*82 83 988*		NLS - USE 8284580	X	Rear window	Bakruta	4
0470		92 77 229		1)	1	.Rear window	.Bakruta	4
0480		69 56 734	S		3	.Spacer	.Distans	3
0490		92 59 565	S		2	.Spacer	.Distans	3
0510	5	*82 84 101*		GB NLS - USE 8284598	X	Rear window	Bakruta	4
0520		69 48 590		1) WITH WIPER HOLE	1	.Rear window	.Bakruta	4
0530		69 56 734	S		3	.Spacer	.Distans	3
0540		92 59 565	S		1	.Spacer	.Distans	3
0560	6	92 40 086			X	Mounting kit Number plate	Monteringssats Nummerplåt	5
0580		73 98 506		1)	4	.Washer	.Bricka	5
0590		79 77 390		1)	4	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX


Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


4-K10

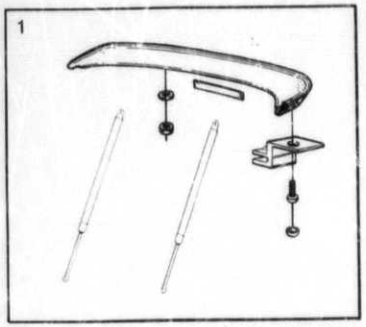

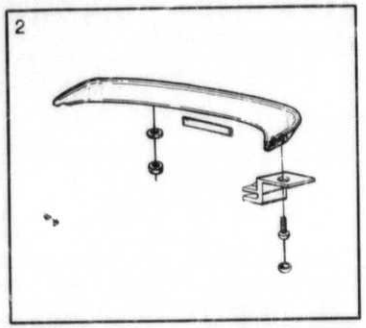

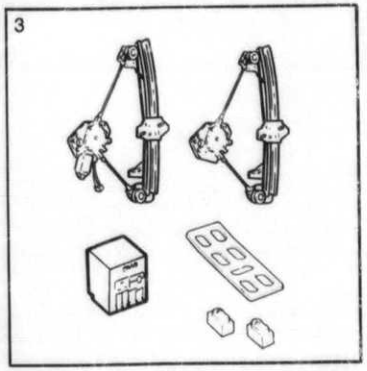

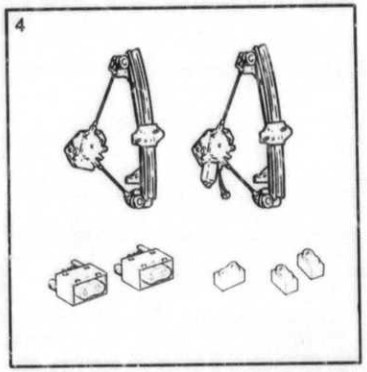

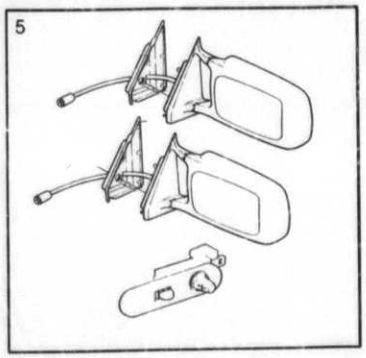



F0787 - 9000

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*78 74 811*		132,498) NLS - USE 8284283	X	Spoiler	Spoiler	5
0020		69 56 288			2	.Gas spring	.Gasfjäder	5
0030		*92 77 609*		NLS	1	.Spoiler	.Spoiler	3
0040		96 98 374			1	.Mounting kit	.Monteringssats	5
0050								
0060	1	82 84 283		499)	X	Spoiler	Spoiler	5
0070		69 56 288			2	.Gas spring	.Gasfjäder	5
0080		69 92 838			1	.Spoiler	.Spoiler	3
0090		82 84 267			1	.Mounting kit	.Monteringssats	5
0100								
0110	2	*78 74 688*		1986-,498) NLS - USE 8284275	X	Spoiler	Spoiler	5
0120		*92 77 609*		NLS	1	.Spoiler	.Spoiler	3
0130		96 98 374			1	.Mounting kit	.Monteringssats	5
0140								
0150	2	82 84 275		499)	X	Spoiler	Spoiler	5
0160		69 92 838			1	.Spoiler	.Spoiler	3
0170		82 84 267			1	.Mounting kit	.Monteringssats	5
0180								
0190	3	85 47 291		1987-,4,535) I	X	Window lift	Fönsterhiss	5
0200		79 71 658			6	.Nut	.Mutter	5
0210		79 22 420			1	.Screw	.Skruv	5
0220		88 17 884			2	.Cover washer	.Täckbricka	6
0230		92 55 217		LH	1	.Window lift	.Fönsterhiss	5
0240		92 55 209		RH	1	.Window lift	.Fönsterhiss	
0250		95 01 859			1	.Switch	.Strömställare	3
0260		95 01 891			5	.Cover washer	.Täckbricka	5
0270		95 06 676			1	.Retainer	.Hållare	6
0280		95 12 310			1	.Switch	.Strömställare	3
0290		95 12 823			1	.Relay	.Relä	5
0300		88 17 892			2	.Clip	.Clips	
0310								
0320	4	85 47 309		1987-,5,535) I	X	Window lift	Fönsterhiss	5
0330		79 71 658			6	.Nut	.Mutter	5
0340		88 17 884			2	.Cover washer	.Täckbricka	6
0350		92 55 233		LH	1	.Window lift	.Fönsterhiss	5
0360		92 55 225		RH	1	.Window lift	.Fönsterhiss	5
0370		95 01 867			2	.Switch	.Strömställare	3
0380		95 01 875		"ON-OFF"	1	.Switch	.Strömställare	3
0390		95 03 772			2	.Switch	.Strömställare	3
0400		88 17 892			2	.Clip	.Clips	
0410								
0420	5	85 47 317		1987-,535) I, LHD	X	Rear view mirror kit	Backspegelsats	4
0430		95 05 488			1	.Switch	.Strömställare	3
0440		*96 94 704*		LH NLS - USE 4268389	1	.Cover	.Täcklock	5
0450		*96 60 051*		RH NLS - USE 9694696	1	.Cover	.Täcklock	5
0460		96 61 307		LH	1	.Rear view mirror	.Backspegel	4
0470		96 61 364		RH	1	.Rear view mirror	.Backspegel	4
0480								
0490	5	85 47 325		1987-,535) I, RHD	X	Rear view mirror kit	Backspegelsats	4
0500		95 05 488			1	.Switch	.Strömställare	3
0510		*96 94 704*		LH NLS - USE 4268389	1	.Cover	.Täcklock	5
0520		*96 60 051*		RH NLS - USE 9694696	1	.Cover	.Täcklock	5
0530		96 61 208		LH	1	.Rear view mirror	.Backspegel	4
0540		96 61 240		RH	1	.Rear view mirror	.Backspegel	4
0550								

4. Front Främre
5. Rear Bakre
132. Ch. H1007932-, H8000100-
498. Ch. -K1021884, -K2012733, -K8001395
499. Ch. K1021885-, K2012734-, K8001396-
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06


Complete sets


4-K12


Car body, external


Satser


Kaross, utvändig

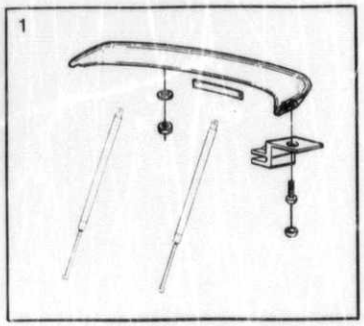


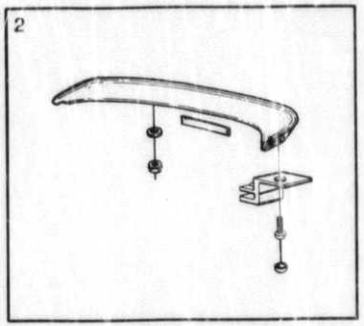

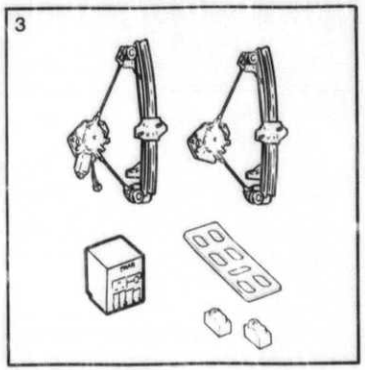

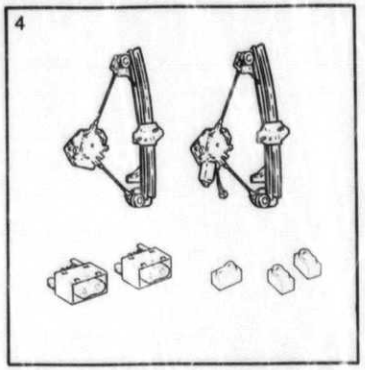

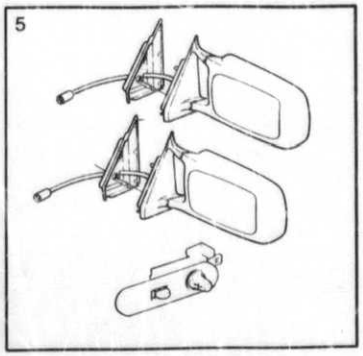

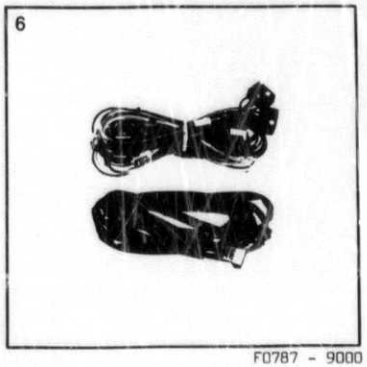

F0787 - 9000

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	6	85 47 333		1987,4,535) I	X	Cable harness	Ledningsnät	5
0570						Window lift	Fönsterhiss	
0580						Rear view mirror	Backspegel	
0590		95 23 556			1	.Cable harness	.Ledningsnät	5
0600		95 23 572			1	.Cable harness	.Ledningsnät	5
0610								
0620	6	85 47 473		1988-,4,535) I	X	Cable harness kit	Ledningsnätssats	5
0630						Window lift	Fönsterhiss	
0640						Rear view mirror	Backspegel	
0650		95 67 959			1	.Cable harness	.Ledningsnät	5
0660		95 26 872			1	.Cable harness	.Ledningsnät	5
0670		79 71 880			6	.Tensioning band	.Spännband	4

4. Front Främre
535. Electrically operated Elektriskt manövrerad

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets	4-K06

Complete sets
4-K14
Car body, external

Satser
Kaross, utvändig

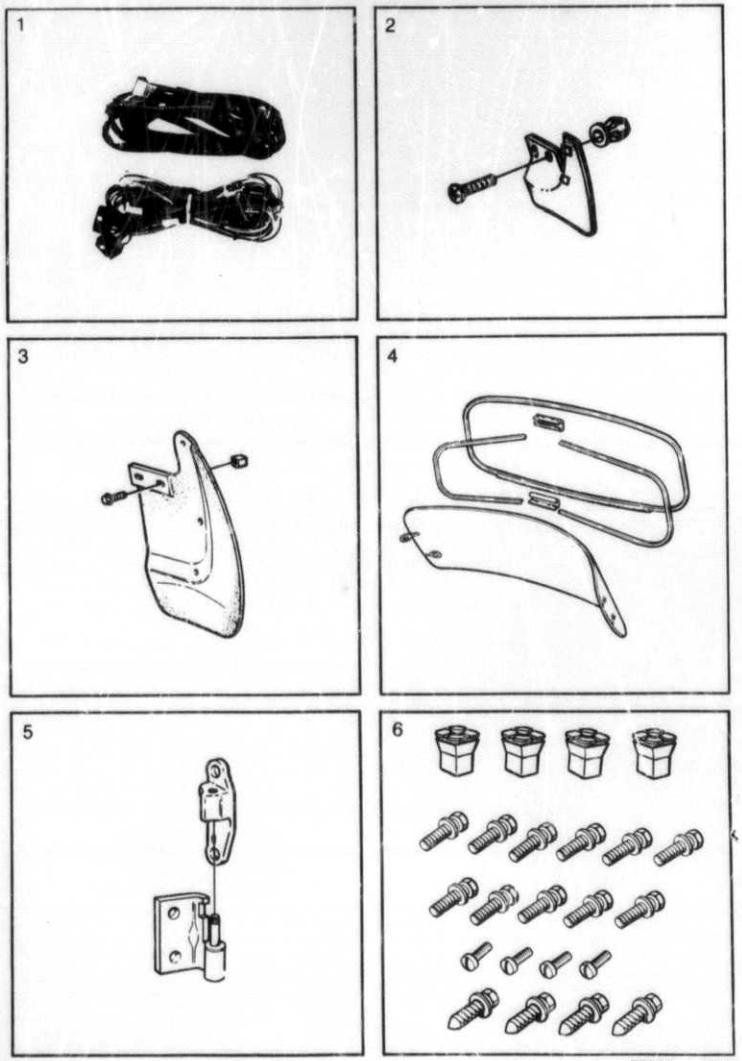

F0788 - 9000

2650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 47 390		1987-,5,535) I	X	Cable harness	Ledningsnät	5
0030						Window lift	Fönsterhiss	
0040		95 23 598			2	.Cable harness	.Ledningsnät	5
0050		79 71 880			2	.Tensioning band	.Spännband	4
0060								
0070	2	*96 98 416*		FRONT, LH AND RH NLS - USE 8284721	X	Baffle	Stänkskydd	3
0090		80 59 271		FOR MOUNTING	1	.Screw	.Skruv	5
0100		*79 81 947*		NLS - USE 7335540, 8019598	4	.Screw	.Skruv	5
0110		40 08 959		LH	1	.Baffle	.Stänkskydd	4
0120		92 79 407		RH	1	.Baffle	.Stänkskydd	4
0130		92 88 846			4	.Nut	.Mutter	5
0140								
0150	2	*96 98 424*		FRONT, LH NLS - USE 8284747	X	Baffle	Stänkskydd	3
0160		*79 81 947*		NLS - USE 7335540, 8019598	2	.Screw	.Skruv	5
0170		*92 79 415*		NLS - USE 4008959	1	.Baffle	.Stänkskydd	4
0180								
0190	2	*96 98 432*		FRONT, RH NLS - USE 8284739	X	Baffle	Stänkskydd	3
0200		*79 81 947*		NLS - USE 7335540, 8019598	2	.Screw	.Skruv	5
0210		92 79 407			1	.Baffle	.Stänkskydd	4
0220								
0230	3	96 98 440		REAR, LH	X	Baffle	Stänkskydd	3
0240		79 73 191			5	.Screw	.Skruv	5
0250		92 68 038			1	.Baffle	.Stänkskydd	3
0260								
0270	3	96 98 457		REAR, RH	X	Baffle	Stänkskydd	3
0280		79 73 191			5	.Screw	.Skruv	5
0290		92 68 020			1	.Baffle	.Stänkskydd	3
0300								
0310	4	82 84 069		4D	X	Rear window	Bakruta	4
0320		*69 43 559*		1) NLS - USE 4304150	1	.Rear window	.Bakruta	4
0330		69 48 871			1	.Cover moulding	.Täcklist	3
0340		69 62 807		RH	1	.Strip holder	.Hållarlist	3
0350		69 62 815		LH	1	.Strip holder	.Hållarlist	3
0360		92 78 334			2	.Connector	.Skarvstycke	3
0370		69 91 244			4	.Spacer	.Distans	3
0380		69 92 028			3	.Spacer	.Distans	3
0390								
0400	5	82 84 085		1988-, LH	X	Hinge kit	Gångjärnssats	5
0420		69 60 793		FIXED, LH	1	.Hinge	.Gångjärn	4
0440		*69 61 718*		LH NLS - USE 4306809	1	.Hinge	.Gångjärn	5
0460								
0480	5	82 84 077		1988-, RH	X	Hinge kit	Gångjärnssats	5
0500		69 60 785		FIXED, RH	1	.Hinge	.Gångjärn	4
0520		*69 61 700*		RH NLS - USE 4306791	1	.Hinge	.Gångjärn	5
0540								
0560	6	69 62 708		1988-	X	Mounting kit	Monteringssats	3
0600		79 75 279			4	.Nut	.Mutter	5
0620		79 76 988			11	.Screw	.Skruv	5
0640		79 77 465			4	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
5. Rear Bakre
535. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

4-K16

Car body, external

Kaross, utvändig

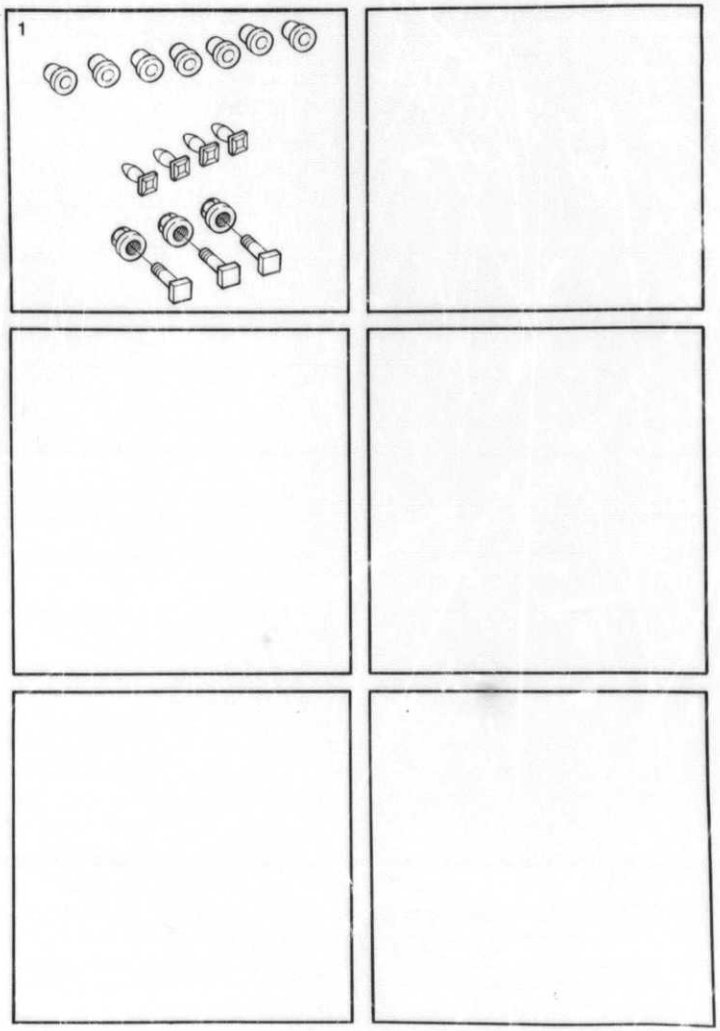

F2494 - 9000

2700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 96 029		4)	X	Mounting kit	Monteringssats	4
0020						Wheel house moulding	Hjulhusdekor	
0030		73 73 269			8	.Bushing	.Bussning	5
0040		73 99 470			8	.Screw	.Skruv	5
0050		73 99 488			8	.Nut	.Mutter	5
0060								
0070	1	74 96 037		5)	X	Mounting kit	Monteringssats	4
0080						Wheel house moulding	Hjulhusdekor	
0090		73 73 269			7	.Bushing	.Bussning	5
0100		73 99 470			3	.Screw	.Skruv	5
0110		73 99 488			3	.Nut	.Mutter	5
0120		92 53 329			4	.Clip	.Clips	5

4. Front Främre
5. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8A GROUP INDEX

Main body	4-F06
Hood, front, fenders	4-G12
Doors, trunk lid	4-G22
External details, glass, sealings	4-I02
Bumpers and touch-up paint	4-J12
Complete sets:	4-K06

8B

Body, internal
Kaross, invändig
Carrocería, inferior

5-A02

TABLE OF CONTENTS

0041	**Instrument panel**		
0020	Instrument panel, upper section	8B : 5	5-A06
0030	Instrument panel, panel	8B : 11	5-A12
0040	Instrument panel, instrument frame	8B : 17	5-A18
0050	Instrument panel, glove compartment	8B : 19	5-A20
0060	Instrumentpanel, centre console	8B : 25	5-B02
0160	**Upholstery**		
0170	Insulation	8B : 31	5-B08
0175	Sound insulation	8B : 35	5-B12
0180	Covers "Contour design" 1985	8B : 41	5-B18
0190	Covers "Contour design" 1986	8B : 45	5-B22
0200	Covers "Block pattern" 1987	8B : 51	5-C04
0400	Covers "Contour design" 1987	8B : 55	5-C08
0410	Covers "Horizon pattern" 1988	8B : 59	5-C12
0420	Covers "Contour design" 1988	8B : 67	5-C20
0430	Covers "Horizon pattern" 1989	8B : 71	5-C24
0440	Covers "Contour design" 1989	8B : 79	5-D08
0450	Door trim etc. 1985	8B : 83	5-D12
0460	Door trim etc. 1986	8B : 91	5-D20
0470	Door trim etc. 1987	8B : 103	5-E08
0480	Door trim etc. 1988	8B : 115	5-E20
0482	Door trim etc. 1989	8B : 127	5-F08
0484	Upholstery luggage compartment	8B : 137	5-F18
0490	Carpets etc. 1985	8B : 141	5-F22
0500	Carpets etc. 1986	8B : 143	5-F24
0510	Carpets etc. 1987	8B : 147	5-G04
0515	Carpets etc. 1988	8B : 157	5-G14
0516	Carpets etc. 1989	8B : 161	5-G18
0517	Headlining, pillar linning, etc	8B : 165	5-G22
0520	**Other interior equipment**		
0530	Front seats Part 1 -1987	8B : 171	5-H04
0540	Front seats Part 2 -1987	8B : 173	5-H06
0545	Front seats Part 3 -1987	8B : 177	5-H10
0547	Front seats Part 1 1988-	8B : 181	5-H14
0550	Front seats Part 2 1988-	8B : 187	5-H20
0559	Front seats Part 3 1988-	8B : 191	5-H24
0560	Front seats Part 1 1989-, electrically adjustable	8B : 197	5-I06
0570	Front seats Part 2 1989-, electrically adjustable	8B : 201	5-I10
0580	Front seats Part 3 1989-, electrically adjustable	8B : 203	5-I12
0582	Rear seat, seat cushion	8B : 205	5-I14
0584	Rear seat, back cushion	8B : 209	5-I18
0586	Rear seat, fixed, seat cushion	8B : 213	5-I22
0587	Rear seat, fixed, back cushion	8B : 215	5-I24
0588	Equipment luggage compartment	8B : 219	5-J04
0589	Scuff plate protector	8B : 223	5-J08
0590	Other interior equipment	8B : 229	5-J14
0592	Shelf	8B : 231	5-J16
0594	Safety belt, front seat	8B : 237	5-J22
0596	Safety belt, rear seat	8B : 243	5-K04
0600	**Complete sets:**		
0610	Car body, internal	8B : 245	5-K06
0620			
0625			
0630			
0640			
0780			
0790			

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A03

INNEHÅLLSFÖRTECKNING

Instrumentpanel
- Instrumentpanel, överdel ... 8B : 5 ... 5-A06
- Instrumentpanel, panel ... 8B : 11 ... 5-A12
- Instrumentpanel, instrumentram ... 8B : 17 ... 5-A18
- Instrumentpanel, handskfack ... 8B : 19 ... 5-A20
- Instrumentpanel, mittkonsol ... 8B : 25 ... 5-B02

Klädsel
- Isolering ... 8B : 31 ... 5-B08
- Ljudisolering ... 8B : 35 ... 5-B12
- Klädselpåsar "Contour design" 1985 ... 8B : 41 ... 5-B18
- Klädselpåsar "Contour design" 1986 ... 8B : 45 ... 5-B22
- Klädselpåsar "Block mönster" 1987 ... 8B : 51 ... 5-C04
- Klädselpåsar "Contour design" 1987 ... 8B : 55 ... 5-C08
- Klädselpåsar "Horisont mönster " 1988 ... 8B : 59 ... 5-C12
- Klädselpåsar "Contour design" 1988 ... 8B : 67 ... 5-C20
- Klädselpåsar "Horisont mönster " 1989 ... 8B : 71 ... 5-C24
- Klädselpåsar "Contour design" 1989 ... 8B : 79 ... 5-D08
- Dörrklädsel etc. 1985 ... 8B : 83 ... 5-D12
- Dörrklädsel etc. 1986 ... 8B : 91 ... 5-D20
- Dörrklädsel etc. 1987 ... 8B : 103 ... 5-E08
- Dörrklädsel etc. 1988 ... 8B : 115 ... 5-E20
- Dörrklädsel etc. 1989 ... 8B : 127 ... 5-F08
- Klädsel bagagerum ... 8B : 137 ... 5-F18
- Mattor etc. 1985 ... 8B : 141 ... 5-F22
- Mattor etc. 1986 ... 8B : 143 ... 5-F24
- Mattor etc. 1987 ... 8B : 147 ... 5-G04
- Mattor etc. 1988 ... 8B : 157 ... 5-G14
- Mattor etc. 1989 ... 8B : 161 ... 5-G18
- Takklädsel, stolpklädsel. etc ... 8B : 165 ... 5-G22

Övrig invändig utrustning
- Stolar Del 1 -1987 ... 8B : 171 ... 5-H04
- Stolar Del 2 -1987 ... 8B : 173 ... 5-H06
- Stolar Del 3 -1987 ... 8B : 177 ... 5-H10
- Stolar Del 1 1988- ... 8B : 181 ... 5-H14
- Stolar Del 2 1988- ... 8B : 187 ... 5-H20
- Stolar Del 3 1988- ... 8B : 191 ... 5-H24
- Stolar Del 1 1989-, elmanövrerade ... 8B : 197 ... 5-I06
- Stolar Del 2 1989-, elmanövrerade ... 8B : 201 ... 5-I10
- Stolar Del 3 1989-, elmanövrerade ... 8B : 203 ... 5-I12
- Baksäte, sittdyna ... 8B : 205 ... 5-I14
- Baksäte, ryggdyna ... 8B : 209 ... 5-I18
- Baksäte, fast, sittdyna ... 8B : 213 ... 5-I22
- Baksäte, fast, ryggdyna ... 8B : 215 ... 5-I24
- Utrustning bagagerum ... 8B : 219 ... 5-J04
- Tröskelskydd ... 8B : 223 ... 5-J08
- Övrig invändig utrustning ... 8B : 229 ... 5-J14
- Hatthylla ... 8B : 231 ... 5-J16
- Bilbälte, framsäte ... 8B : 237 ... 5-J22
- Bilbälte, baksäte ... 8B : 243 ... 5-K04

Satser:
- Kaross, invändig ... 8B : 245 ... 5-K06

5-A04

SUMARIO

Tablero de instrumentos
- Tablero de instrumentos, seccion superior ... 8B : 5 ... 5-A06
- Tablero de instrumentos, panel ... 8B : 11 ... 5-A12
- Tablero de instrumentos, bastidor instrumentos ... 8B : 17 ... 5-A18
- Tablero de instrumentos, guantera ... 8B : 19 ... 5-A20
- Tablero de instrumentos, soporte central ... 8B : 25 ... 5-B02

Tapiceria
- Aislamiento ... 8B : 31 ... 5-B08
- Aislation de sonido ... 8B : 35 ... 5-B12
- Fundas de asiento, diseno "Contour" 1985 ... 8B : 41 ... 5-B18
- Fundas de asiento, diseno "Contour" 1986 ... 8B : 45 ... 5-B22
- Fundas de asiento, muestra en Bloque 1987 ... 8B : 51 ... 5-C04
- Fundas de asiento, diseno "Contour" 1987 ... 8B : 55 ... 5-C08
- Fundas de asiento, muestra en Horizon" 1988 ... 8B : 59 ... 5-C12
- Fundas de asiento, diseno "Contour" 1988 ... 8B : 67 ... 5-C20
- Fundas de asiento, muestra en Horizon" 1989 ... 8B : 71 ... 5-C24
- Fundas de asiento, diseno "Contour" 1989 ... 8B : 79 ... 5-D08
- Tapiceria de puerta, etc. 1985 ... 8B : 83 ... 5-D12
- Tapiceria de puerta, etc. 1986 ... 8B : 91 ... 5-D20
- Tapiceria de puerta, etc. 1987 ... 8B : 103 ... 5-E08
- Tapiceria de puerta, etc. 1988 ... 8B : 115 ... 5-E20
- Tapiceria de puerta, etc. 1989 ... 8B : 127 ... 5-F08
- Tapiceria compartimento de equipajes ... 8B : 137 ... 5-F18
- Moquetas etc. 1985 ... 8B : 141 ... 5-F22
- Moquetas etc. 1986 ... 8B : 143 ... 5-F24
- Moquetas etc. 1987 ... 8B : 147 ... 5-G04
- Moquetas etc. 1988 ... 8B : 157 ... 5-G14
- Moquetas etc. 1989 ... 8B : 161 ... 5-G18
- Tapiceria del techo, de los montantes, etc ... 8B : 165 ... 5-G22

Otro equipo interior
- Asientos Del 1a parte -1987 ... 8B : 171 ... 5-H04
- Asientos Del 2a parte -1987 ... 8B : 173 ... 5-H06
- Asientos Del 3a parte -1987 ... 8B : 177 ... 5-H10
- Asientos Del 1a parte 1988- ... 8B : 181 ... 5-H14
- Asientos Del 2a parte 1988- ... 8B : 187 ... 5-H20
- Asientos Del 3a parte 1988- ... 8B : 191 ... 5-H24
- Asientos Del 1a parte 1989-, maniobra electrica ... 8B : 197 ... 5-I06
- Asientos Del 2a parte 1989-, maniobra electrica ... 8B : 201 ... 5-I10
- Asientos Del 3a parte 1989-, maniobra electrica ... 8B : 203 ... 5-I12
- Asientos Tras, almohadillo del cojin ... 8B : 205 ... 5-I14
- Asientos Tras, cojin de respaldo ... 8B : 209 ... 5-I18
- Asientos Tras, fijo, almohadillo del cojin ... 8B : 213 ... 5-I22
- Asientos Tras, fijo,cojin de respaldo ... 8B : 215 ... 5-I24
- Compartimento para equipo ... 8B : 219 ... 5-J04
- Proteccion de umbral ... 8B : 223 ... 5-J08
- Otro equipo interior ... 8B : 229 ... 5-J14
- Tablilla trassera ... 8B : 231 ... 5-J16
- Cinturon de seguridad, Del ... 8B : 237 ... 5-J22
- Cinturon de seguridad, Tras ... 8B : 243 ... 5-K04

Juegos completos
- Carosseria, interior ... 8B : 245 ... 5-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A
Upholstery	5-B
Other interior equipment	5-H04
Complete sets:	5-K06


Instrument panel

5-A06

Upper section

Instrumentpanel

Överdel

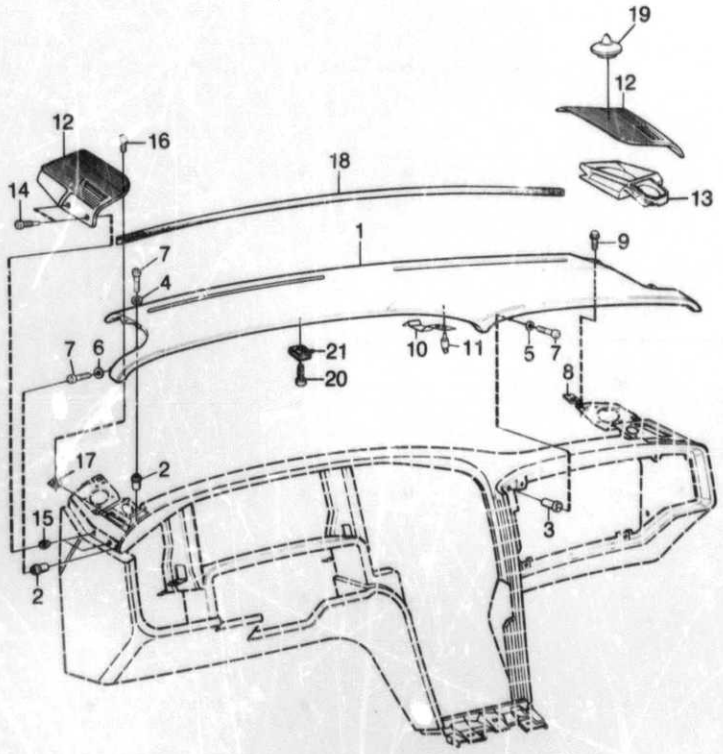

F7135 9000

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 80 206		560,325)(9768524,9570318	1	Cover	Lock	6
0020	1	*96 79 754*		560,326) NLS - USE 4080206	1	Cover	Lock	6
0030	1	97 68 565		560,205) RHD	1	Cover	Lock	6
0040	1	96 79 879		560,206) RHD (9570367)	1	Cover	Lock	6
0060	1	97 68 540		580), -1986	1	Cover	Lock	6
0070	1	96 79 788		580), 1987	1	Cover	Lock	6
0080	1	*96 79 770*		580), 1988- NLS - USE 4080222	1	Cover	Lock	6
0090	1	97 68 581		580), -1986, RHD	1	Cover	Lock	6
0100	1	96 79 903		580), 1987, RHD	1	Cover	Lock	6
0110	1	96 79 895		580), 1988-, RHD	1	Cover	Lock	6
0130	1	97 68 532		590), -1986	1	Cover	Lock	6
0140	1	*96 69 797*		1987-,205,590) NLS - USE 9679796	1	Cover	Lock	6
0150	1	96 79 796		590,206,-1988) (9570326)	1	Cover	Lock	6
0160	1	*95 82 834*		590,500), 1989- NLS - USE 4080230	1	Cover	Lock	6
0170	1	97 68 573		590), -1986, RHD	1	Cover	Lock	6
0180	1	96 69 623		1987-,205,590) RHD	1	Cover	Lock	6
0190	1	96 79 911		590,206), -1988, RHD (9570375)	1	Cover	Lock	6
0210	1	95 82 677		590,500), 1989-, RHD	1	Cover	Lock	6
0230	1	*97 68 557*		1986-,205,570) NLS - USE 4080214	1	Cover	Lock	6
0240	1	40 80 214		570,206)(9570342,9679804	1	Cover	Lock	6
0250	1	97 68 599		1986-,205,570) RHD	1	Cover	Lock	6
0260	1	40 80 248		570,206,339)RHD(9570391)	1	Cover	Lock	6
0270	1	96 79 929		570,340) RHD	1	Cover	Lock	6
0290	1	96 79 762		600) (9798489,9570300)	1	Cover	Lock	6
0300	1	97 98 497		1987- ,600) RHD	1	Cover	Lock	6
0310	1	96 79 887		600,2.., ..HD (9570359)	1	Cover	Lock	6
0320	2	*97 55 729*		-1986 NLS - USE 7399579	4	Nut	Mutter	5
0330	2	73 99 579		1987-	2	Blind rivet nut	Blindnitmutter	5
0340	3	97 59 846		-1986	1	Blind rivet nut	Blindnitmutter	5
0350	3	97 59 846		1987-	3	Blind rivet nut	Blindnitmutter	5
0360	4	70 45 776			2	Washer	Bricka	5
0370	5	*80 29 936*		NLS - USE 9166356	1	Washer	Bricka	5
0380	6	*80 29 936*		-1987 NLS - USE 9166356	2	Washer	Bricka	5
0390	6	79 15 556		1988-	2	Star washer	Taggbricka	5
0400	7	80 59 263			5	Screw	Skruv	5
0410	8	79 72 573			2	Clip nut	Clipsmutter	5
0420	9	*79 73 126*		NLS - USE 7972128	2	Screw	Skruv	5
0430	10	*97 61 933*		NLS - USE 4035093	1	Spring	Fjäder	5
0440	11	*79 61 634*		-1986 NLS - USE 7977804	2	Rivet	Nit	5
0450	11	79 77 804		1987-	2	Rivet	Nit	5
0460	12	97 68 243		560), LH	1	Loudspeaker grille	Högtalargaller	5

205. Ch. --H1019316
206. Ch. H1019317--
325. Ch. --J8000221, --J1003178, --J2001035
326. Ch. J8000222--, J1003179--, J2001036--
339. Ch --J1017313
340. Ch J1017314--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A08

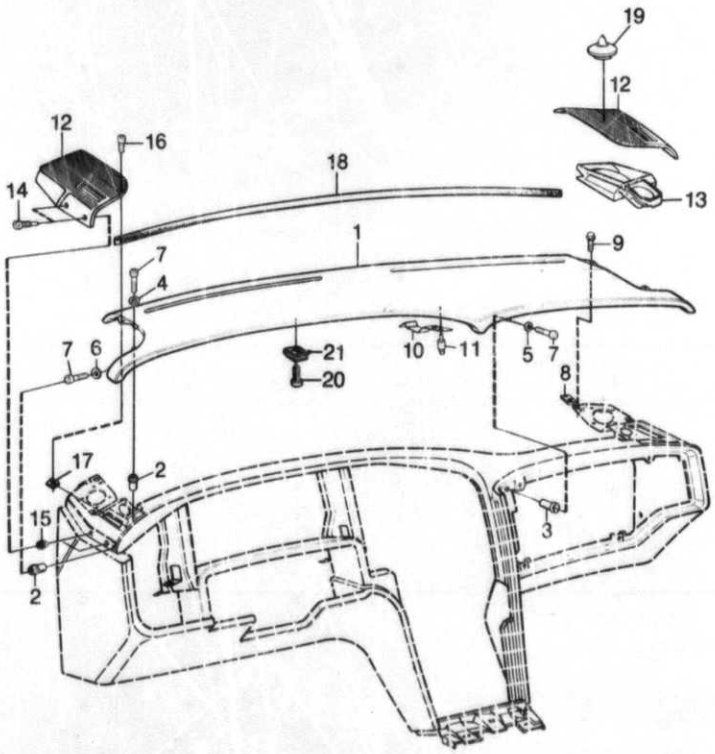

F7135 9000

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	12	*95 92 973*		560,531,500), 1989-, LH NLS - USE 4041323	1	Loudspeaker grille	Högtalargaller	5
0480	12	*97 68 326*		560), LH, RHD NLS	1	Loudspeaker grille	Högtalargaller	5
0500	12	97 68 284		580), -1987, LH	1	Loudspeaker grille	Högtalargaller	5
0510	12	*96 76 339*		580), 1988-, LH NLS - USE 4041174	1	Loudspeaker grille	Högtalargaller	5
0520	12	*95 92 999*		580,531), 1989-, LH NLS - USE 4041349	1	Loudspeaker grille	Högtalargaller	5
0530	12	*97 68 367*		580), -1987, LH, RHD NLS	1	Loudspeaker grille	Högtalargaller	5
0540	12	96 76 388		580), 1988-, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0560	12	97 98 604		600), 1987-, LH	1	Loudspeaker grille	Högtalargaller	5
0570	12	97 98 612		600), 1987-, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0590	12	97 68 268		590), -1986, LH	1	Loudspeaker grille	Högtalargaller	5
0600	12	96 69 755		590),1987-1988, LH	1	Loudspeaker grille	Högtalargaller	5
0610	12	95 82 800		590,500), 1989-, LH	1	Loudspeaker grille	Högtalargaller	5
0620	12	95 93 005		590,531), 1989-, LH	1	Loudspeaker grille	Högtalargaller	5
0630	12	97 68 342		590), -1986, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0640	12	96 69 581		590), 1987-88, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0650	12	95 82 636		590,500)1989-, LH, RHD,	1	Loudspeaker grille	Högtalargaller	5
0670	12	*97 68 300*		570), 1986-, LH NLS - USE 4041158	1	Loudspeaker grille	Högtalargaller	5
0680	12	*95 93 021*		570,531), 1989-, LH NLS - USE 4041331	1	Loudspeaker grille	Högtalargaller	5
0690	12	97 68 383		570), 1986-, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0710	12	*97 68 250*		560,221) RH NLS - USE 4041141	1	Loudspeaker grille	Högtalargaller	5
0720	12	*96 60 630*		560,222) RH NLS - USE 4041141	1	Loudspeaker grille	Högtalargaller	5
0730	12	*97 68 334*		560), RH, RHD, RED NLS	1	Loudspeaker grille	Högtalargaller	5
0750	12	*97 68 292*		580,225) RH NLS - USE 9660655	1	Loudspeaker grille	Högtalargaller	5
0760	12	96 60 655		580,226)-1987, RH	1	Loudspeaker grille	Högtalargaller	5
0770	12	96 76 347		580), 1988-, RH	1	Loudspeaker grille	Högtalargaller	5
0780	12	*97 68 375*		580), -1987, RH, RHD NLS	1	Loudspeaker grille	Högtalargaller	5
0790	12	96 76 396		580), 1988-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0810	12	*97 68 276*		590,223) RH NLS - USE 9660648	1	Loudspeaker grille	Högtalargaller	5
0820	12	96 60 648		590,224) -1986, RH	1	Loudspeaker grille	Högtalargaller	5
0830	12	96 69 763		590), 1987-88, RH	1	Loudspeaker grille	Högtalargaller	5
0840	12	*95 82 818*		590,500), 1989-, RH NLS - USE 4041208	1	Loudspeaker grille	Högtalargaller	5
0850	12	97 68 359		590), -1986, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0860	12	96 69 599		590), 1987-88, RH, RHD	1	Loudspeaker grille	Högtalargaller	5

221. Ch. --G1015560
222. Ch. G1015561--
223. Ch. --G1019208
224. Ch. G1019209--
225. Ch. --G1016567
226. Ch. G1016568--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
531. With theft alarm Med stöldlarm
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A10

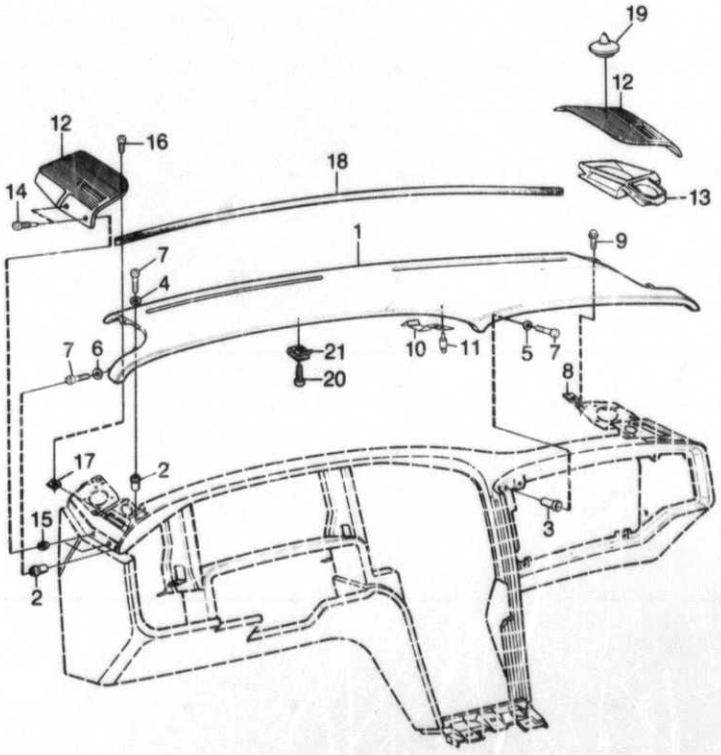

F7135 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
12	95 82 644		590,500), 1989-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
12	40 41 166		570,207) RH (9768318)	1	Loudspeaker grille	Högtalargaller	5
12	*96 60 663*		570,208) RH NLS - USE 4041166	1	Loudspeaker grille	Högtalargaller	5
12	*97 68 391*		570), 1986-, RH, RHD NLS - USE 4041265	1	Loudspeaker grille	Högtalargaller	5
12	96 60 622		600), 1987-, RH	1	Loudspeaker grille	Högtalargaller	5
12	97 98 653		600), 1987-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
13	*97 79 802*		-1986, LH NLS	1	Sealing collar	Tätningskrage	5
13	96 78 517		1987-, LH	1	Sealing collar	Tätningskrage	5
13	97 79 828		-1986, LH, RHD	1	Sealing collar	Tätningskrage	5
13	*96 78 582*		1987-, LH, RHD NLS - USE 4032074	1	Sealing collar	Tätningskrage	5
13	*96 60 440*		-1986, RH NLS	1	Sealing collar	Tätningskrage	5
13	*96 78 525*		1987-, RH NLS - USE 4032041	1	Sealing collar	Tätningskrage	5
13	97 79 836		-1986, RH, RHD	1	Sealing collar	Tätningskrage	5
13	*96 78 590*		1987-, RH, RHD NLS - USE 4032066	1	Sealing collar	Tätningskrage	5
14	79 77 648		(9781618)	4	Screw	Skruv	5
15	79 35 703		(9781626)	4	Clip nut	Klämmutter	5
16	79 75 535			2	Screw	Skruv	5
17	79 72 771			2	Clip nut	Clipsmutter	5
18	98 91 367		-1985	1	Strip	List	5
18	95 45 534		1988-	1	Felt strip	Filtlist	5
19	96 60 739		560), 1986-	1	Cover	Kåpa	5
19	96 60 747		590), -1986	1	Cover	Kåpa	
19	96 72 239		590), 1987-1988	1	Cover	Kåpa	5
19	95 81 539		590,500), 1989-	1	Cover	Kåpa	5
19	96 60 754		580), -1987	1	Cover	Kåpa	5
19	96 76 719		580), 1988-	1	Cover	Kåpa	5
19	96 60 762		570), 1986-	1	Cover	Kåpa	5
19	96 60 721		600), 1987-	1	Cover	Kåpa	5
20	*79 65 353*		1988- NLS - USE 7970601	1	Screw	Skruv	5
21	79 77 317		1988-	1	Clip nut	Klämmutter	5

207. Ch. --G1014606
208. Ch. G1014607--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Instrument panel
5-A12
Panel

Instrumentpanel
Panel

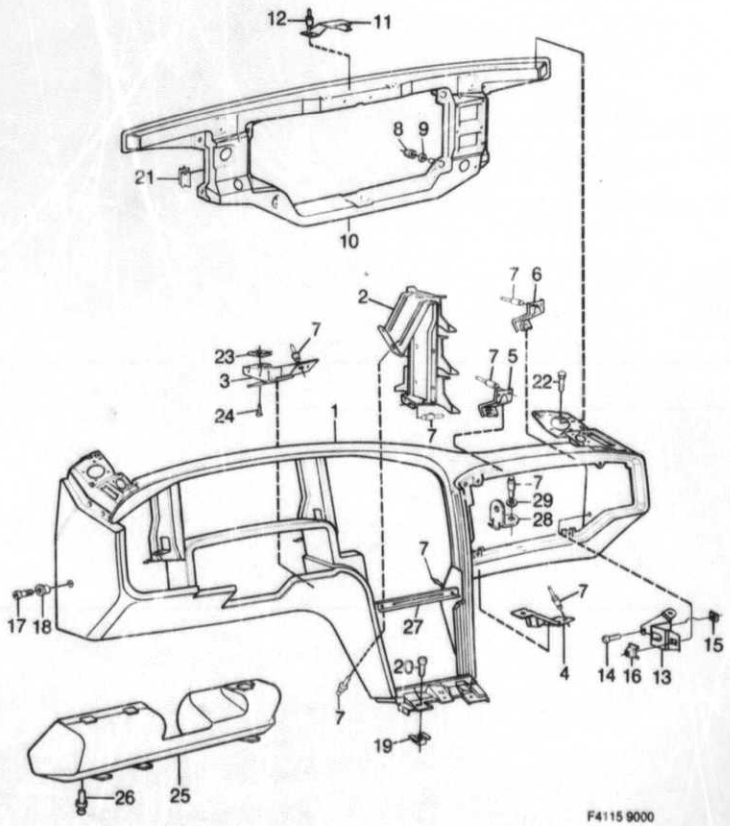

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*97 68 441*		560,193,624) NLS - USE 9547589, 9570615	1	Panel	Panel	6
0040	1	95 47 589		560,194)(9570219,9679697	1	Panel	Panel	6
0050	1	*97 68 482*		560,203) RHD NLS - USE 9570664, 9679812	1	Panel	Panel	6
0060	1	95 70 268		560,204,335) RHD	1	Panel	Panel	6
0070	1	96 79 812		560,336) RHD	1	Panel	Panel	6
0100	1	96 79 721		580), -1987 (9768486)	1	Panel	Panel	6
0120	1	95 47 605		580) 1988- (9679713)	1	Panel	Panel	6
0140	1	96 79 846		580),-1987, RHD(9768508)	1	Panel	Panel	6
0150	1	96 79 838		580), 1988-, RHD	1	Panel	Panel	6
0170	1	97 68 458		590), -1986	1	Panel	Panel	6
0180	1	*96 69 789*		1987-,195,590,625) NLS - USE 9547621, 9570623	1	Panel	Panel	6
0200	1	95 47 621		590,196),-1988 (9570227,9679739)	1	Panel	Panel	6
0220	1	95 47 613		590), 1989-	1	Panel	Panel	6
0230	1	97 68 490		590), -1986, RHD	1	Panel	Panel	6
0240	1	*96 69 615*		1987-,205,590) RHD NLS - USE 9570672, 9679853	1	Panel	Panel	6
0260	1	96 79 853		590,206) -1988, RHD (9570276)	1	Panel	Panel	6
0270	1	95 82 669		590,500), 1989-, RHD	1	Panel	Panel	6
0290	1	*97 68 474*		1986-,297,570,626) NLS - USE 9547639, 9572074	1	Panel	Panel	6
0310	1	95 47 639		570,298)(9570243,9679747	1	Panel	Panel	6
0330	1	*97 68 516*		1986-,299,570,627) RHD NLS - USE 4079604, 9572132	1	Panel	Panel	6
0340	1	40 79 604		570,300,339)RHD(9570292)	1	Panel	Panel	6
0350	1	96 79 861		570,340) RHD	1	Panel	Panel	6

193. Ch. --H1019122, --H8000786
194. Ch. H1019123--, H8000787--
195. Ch. --H1019124, --H8000768
196. Ch. H1019125--, H8000769--
203. Ch. --H1019384
204. Ch. H1019385--
205. Ch. --H1019316
206. Ch. H1019317--
297. Ch. --H1017376, --H8001145
298. Ch. H1017377--, H8001146--
299. Ch. --H1018027
300. Ch. H1018028--
335. Ch. --J1004123
336. Ch. J1004124--
339. Ch. --J1017313
340. Ch. J1017314--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
624. Superseded by 95 47 589 and 95 70 615. Ersatt av 95 47 589 och 95 70 615.
625. Superseded by 95 47 621 and 95 70 623. Ersatt av 95 47 621 och 95 70 623.
626. Superseded by 95 47 639 and 95 72 074. Ersatt av 95 47 639 och 95 72 074.
627. Superseded by 40 79 604 and 95 72 132. Ersatt av 40 79 604 och 95 72 132.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A14

Panel

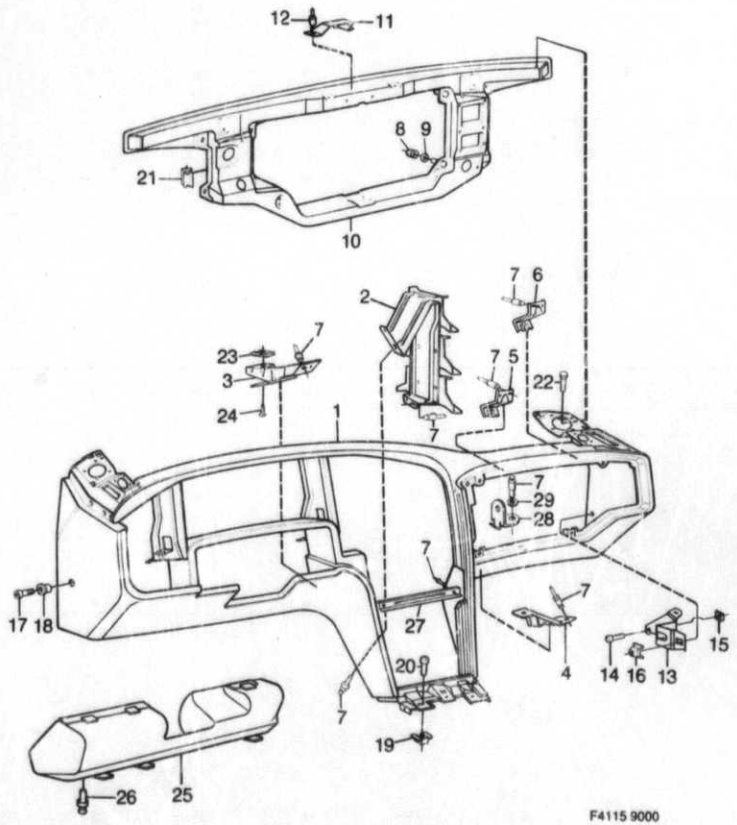

F4115 9000

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0370	1	*97 98 448*		1987-,191,600,628) NLS - USE 9547597, 9570607	1	Panel	Panel	6
0380	1	95 47 597		600,192,327) (9570201)	1	Panel	Panel	6
0390	1	96 79 705		600,328,382)	1	Panel	Panel	6
0400	1	95 47 597		600,383)	1	Panel	Panel	6
0410	1	*97 98 455*		1987-,201,600) RHD NLS - USE 9570656, 9679820	1	Panel	Panel	6
0430	1	96 79 820		600,202) RHD (9570250)	1	Panel	Panel	6
0460	2	96 91 189		(9766155)	1	Guide rail	Styrskena	6
0470	2	97 66 171		386), RHD	1	Guide rail	Styrskena	6
0480	2	96 91 197		387), RHD	1	Guide rail	Styrskena	6
0490	3	97 55 117		LH	1	Bracket	Konsol	6
0500	3	97 67 302		LH, RHD	1	Bracket	Konsol	6
0510	4	97 55 125		RH	1	Bracket	Konsol	6
0520	4	97 67 294		RH, RHD	1	Bracket	Konsol	6
0530	5	97 67 526		LH	1	Bracket	Konsol	6
0540	5	*97 69 167*		-1986, LH, RHD NLS - USE 9671355	1	Bracket	Konsol	
0550	5	96 71 355		1987-, LH, RHD	1	Bracket	Konsol	6
0560	6	97 67 534		RH	1	Bracket	Konsol	6
0570	6	*97 69 175*		-1986, RH, RHD NLS - USE 9671363	1	Bracket	Konsol	
0580	6	96 71 363		1987-, RH, RHD	1	Bracket	Konsol	6
0600	7	79 77 804		(7961634)	X	Rivet	Nit	5
0610	8	79 74 371		-1987	4	Nut	Mutter	5
0620	8	79 79 602		1988-	4	Nut	Mutter	5
0630	9	89 29 531			8	Sealing washer	Tätningsbricka	5
0640	10	*97 55 075*		-1986 NLS - USE 4077079	1	Carrier	Bärare	6
0650	10	96 71 876		1987	1	Carrier	Bärare	6
0660	10	95 79 194		1988-,505)	1	Carrier	Bärare	6
0670	10	40 77 079		506)	1	Carrier	Bärare	6
0680	10	*97 59 234*		-1986, RHD NLS - USE 9579202	1	Carrier	Bärare	6
0690	10	96 71 884		1987, RHD	1	Carrier	Bärare	6
0700	10	95 79 202		1988-,505), RHD	1	Carrier	Bärare	6
0710	10	40 77 087		506), RHD	1	Carrier	Bärare	6
0720	11	97 61 941			1	Bracket	Konsol	5
0730	12	79 68 845			2	Rivet	Nit	5
0740	13	*97 67 377*		34) RH NLS	1	Bracket	Fäste	6
0750	13	96 63 022		35) RH	1	Bracket	Fäste	6
0760	13	*97 67 385*		34) LH, RHD NLS	1	Bracket	Fäste	6
0770	13	96 63 030		35) LH, RHD	1	Bracket	Fäste	6
0780	14	80 59 396			2	Screw	Skruv	5
0790	15	79 74 231			2	Cage nut	Korgmutter	5
0800	16	86 01 916		34)	2	Clip nut	Clipsmutter	3
0810	16	79 75 071		35)	2	Clip nut	Klämmutter	5

34. Ch. --G1007357
35. Ch. G1007358--
191. Ch. --H1017598, --H8000631
192. Ch. H1017599--, H8000632--
201. Ch. --H1018937
202. Ch. H1018938--
327. Ch. --J1002648, --J2000739, --J8001211
328. Ch. J1002649--, J2000740--, J8001212--
382. Ch. --J1027678, --J2016333, --J8001959
383. Ch. J1027679--, J2016334--, J8001960--
386. Ch. --J1002091, --J2000804, --J8000223.
387. Ch. J1002092--, J2000805--, J8000224--.
505. Ch. --K1023175, --K2013699, --K8001161
506. CH. K1023176--, K2013700--, K8001162--
600. Brown Brun
628. Superseded by 95 47 597 and 95 70 607. Ersatt av 95 47 597 och 95 70 607.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Instrument panel
Panel

Instrumentpanel
Panel

5-A16

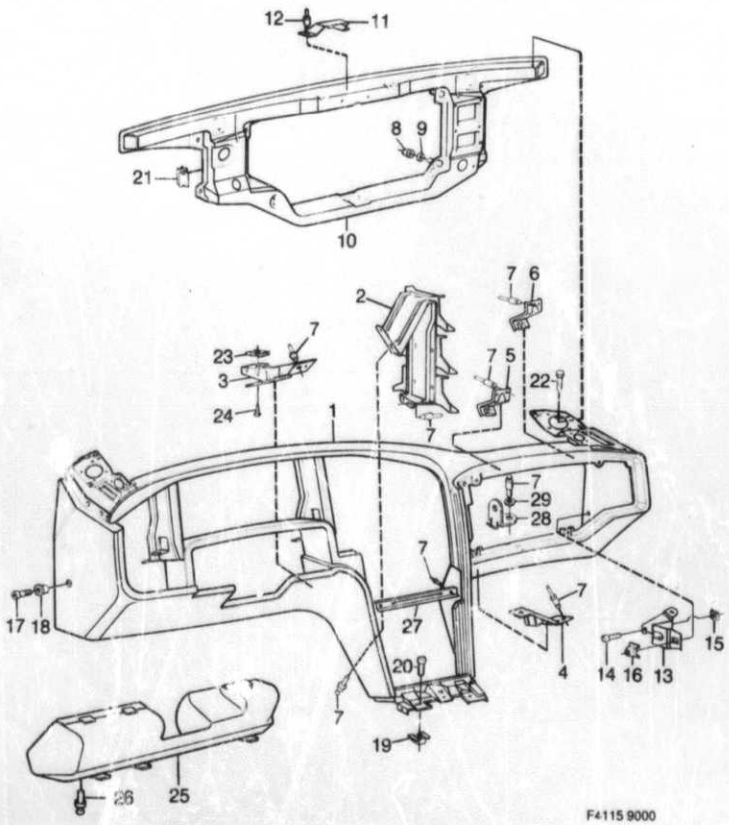

F4115 9000

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0820	17	79 22 297		1986	2	Screw	Skruv	5
0830	17	79 22 818		1987-1988	2	Screw	Skruv	5
0840	17	79 72 128		1989-,500)	2	Screw	Skruv	5
0850	18	97 68 409		560,189)	2	Cover	Täcklock	5
0860	18	96 76 263		560,190)	2	Cover	Täcklock	5
0870	18	97 68 425		580,189)	2	Cover	Täcklock	5
0880	18	96 76 297		580,190), -1987	2	Cover	Täcklock	5
0890	18	96 76 354		580), 1988-	2	Cover	Täcklock	5
0900	18	*97 68 417*		590), -1986 NLS	2	Cover	Täcklock	5
0910	18	96 69 771		1987-,189,590)	2	Cover	Täcklock	5
0920	18	96 76 271		590,190), -1988	2	Cover	Täcklock	5
0930	18	95 82 651		590,500), 1989-	2	Cover	Täcklock	5
0940	18	97 68 433		1986-,189,570)	2	Cover	Täcklock	5
0950	18	96 76 305		570,190)	2	Cover	Täcklock	5
0960	18	97 98 703		1987-,189,600)	2	Cover	Täcklock	5
0970	18	96 76 289		600,190)	2	Cover	Täcklock	5
0980	19	82 38 305		341)	2	Clip	Clips	3
0990	19	73 99 215		342)	2	Clip nut	Klämmutter	5
1000	20	79 22 354		341)	2	Screw	Skruv	5
1010	20	79 22 974		342)	2	Screw	Skruv	5
1020	21	97 62 543			2	Clamp	Klämma	5
1030	21	*97 83 523*		RHD NLS - USE 9762543	2	Clamp	Klämma	5
1040	22	80 19 895		119)	2	Screw	Skruv	5
1050	22	79 72 607		120)-1987	2	Screw	Skruv	5
1060	22	*73 99 421*		1988- NLS - USE 7972466	2	Screw	Skruv	5
1070	23	79 75 071			2	Clip nut	Klämmutter	5
1080	24	79 22 818			2	Screw	Skruv	5
1090	25	95 87 023		429) AIRBAG	1	Foam part	Skumdel	5
1100	25	*40 32 181*		430) AIRBAG NLS - USE 4312906	1	Knee protection	Knäskydd	5
1110	26	79 61 683		AIRBAG	3	Rivet	Nit	5
1120	27	96 78 533		378), LHD	1	Reinforcement	Förstärkning	6
1130	27	96 79 937		379), RHD	1	Reinforcement	Förstärkning	6
1140	28	95 78 442		RHD	2	Attaching bracket	Fästvinkel	5
1150	29	*80 29 936*		RHD NLS - USE 9166356	2	Washer	Bricka	5

119. Ch. --G1019964
120. Ch. G1019965--
189. Ch. --H1016128, --H8001093
190. Ch. H1015129-, H8001094--
341. Ch. --G1001393.
342. Ch. G1001394--
378. Part of: 9679697, 9679705, 9679739, 9679747. Ingår i: 9679697, 9679705, 9679739, 9679747.
379. Part of: 9679812, 9679820, 9679853, 9679861. Ingår i: 9679812, 9679820, 9679853, 9679861.
429. Ch. --K1001029
430. Ch. K1001030--
500. Also valid for SE 1988. Gäller även för SE 1988.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-J02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8B GROUP INDEX

Instrument panel	**5-A06**
Upholstery	**5-B08**
Other interior equipment	**5-H04**
Complete sets:	**5-K06**


Instrument panel

5-A18

Instrument frame

Instrumentpanel

Instrumentram

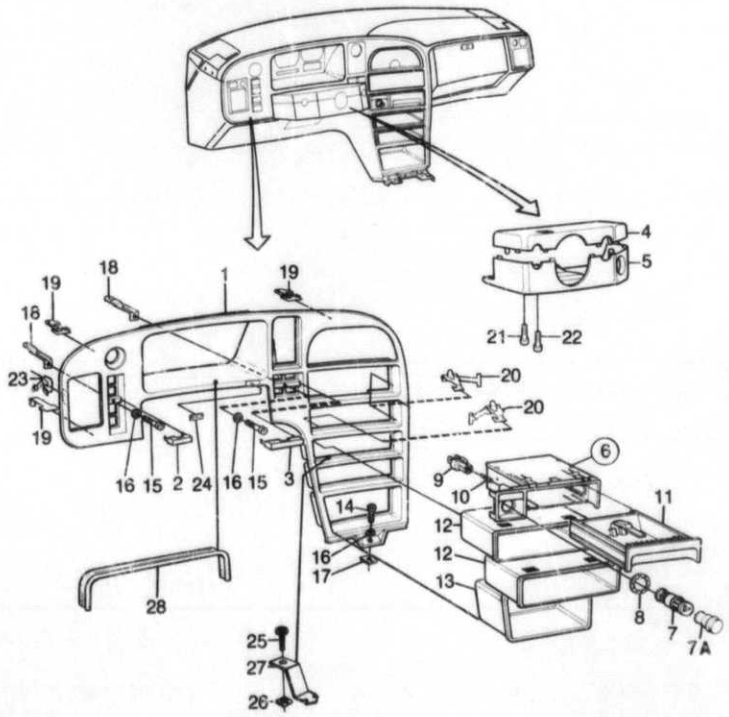

0510	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1		95 48 157		(9759408,9678418)	1	Instrument frame	Instrumentram	6
0040	1		95 48 173		253) RHD (9779851)	1	Instrument frame	Instrumentram	6
0050	1		96 78 426		254),-1988, RHD	1	Instrument frame	Instrumentram	6
0060	1		95 48 173		500), 1989-, RHD	1	Instrument frame	Instrumentram	6
0070	2		97 60 372		LH	1	Cover washer	Täckbricka	5
0080	3		97 60 380		RH	1	Cover washer	Täckbricka	5
0090	4		97 96 699		409)	1	Cover	Kåpa	6
0100	4		95 45 260		410)	1	Cover	Kåpa	6
0110	5		97 96 707		409)	1	Cover	Kåpa	6
0120	5		95 45 245		410)	1	Cover	Kåpa	6
0130	5		96 93 763		1988-,409), AIRBAG	1	Cover	Kåpa	6
0140	5		95 45 229		410), AIRBAG	1	Cover	Kåpa	6
0150	6		97 78 218			1	Ashtray housing	Askkoppshus	6
0170	7		85 74 469		(9507773)	1	.Cigarette lighter	.Cigarettändare	4
0175	7A	•	85 59 221		1988-	1	..Lighter unit	..Tändarenhet	4
0180	8		85 32 426			1	.Clip	.Clips	5
0190	9		85 09 697			1	.Bulb socket	.Lamphållare	5
0200	10		85 00 613			1	.Bulb	.Glödlampa	2
0220	11		95 74 724		(9778291)	1	Ashtray	Askkopp	5
0230	12		97 14 817			2	Storage tray	Förvaringsfack	6
0240	13		97 55 216			1	Storage tray	Förvaringsfack	5
0250	13		97 64 762		RHD	1	Storage tray	Förvaringsfack	5
0260	14		79 22 271		-1987	1	Screw	Skruv	5
0270	14		79 65 338		1988-	1	Screw	Skruv	6
0280	15		*79 22 313*		NLS	2	Screw	Skruv	5
0290	16		*80 29 936*		NLS - USE 9166356	3	Washer	Bricka	5
0300	17		*79 75 295*		-1987 NLS - USE 7977317	1	Clip nut	Klämmutter	3
0310	17		79 77 317		1988-	1	Clip nut	Klämmutter	5
0320	18		97 67 179			2	Clip nut	Klämmutter	5
0330	19		97 61 552			3	Clamp	Klämma	5
0340	20		*97 62 519*		253) NLS - USE 9678541	3	Clamp	Klämma	5
0350	21		79 74 512			2	Screw	Skruv	5
0360	22		79 71 443			2	Screw	Skruv	5
0370	23		73 98 332		253)	2	Clip	Clips	5
0380	24		96 59 764		1986-, "UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0390									
0400	24		96 77 049		1987-, "ENDAST BLYFRI BENSIN"	1	Text plate	Textskylt	5
0410									
0420	24		96 77 055		1987-, "NUR BLEIFREIES BENZIN"	1	Emblem	Emblem	5
0430									
0440	24		96 77 063		1987-, "ESSENCE SANS PLOMB SEULEMENT"	1	Emblem	Emblem	5
0450									
0460	25		*79 65 353*		254) NLS - USE 7970601	2	Screw	Skruv	5
0470	26		79 77 317		254)	2	Clip nut	Klämmutter	5
0480	27		96 78 541		254)	2	Clamp	Klämma	5
0490	28		95 48 165		500) 1989-	1	Piping	Kederlist	5

253. Ch. --J100962, --J2000083, --J8000047, RHD --H1031633
254. Ch. J1000963--, J2000084--, J8000048--, RHD H1031634--
409. Ch --J1028916, --J2017138, --J8001833
410. Ch J1028917--, J2017139--, J8001834--
500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A20

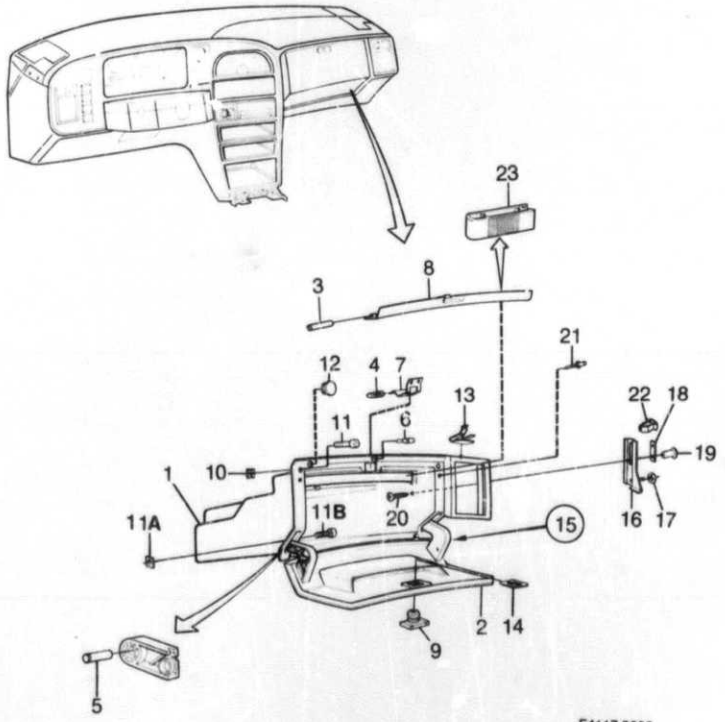

F4117 9000

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 58 675		211)	1	Glove compartment	Handskfack	6
0020	1	95 72 199		212,450)	1	Glove compartment	Handskfack	6
0030	1	*95 46 664*		451,523) NLS - USE 9571191, 9592098	1	Glove compartment	Handskfack	6
0040	1	*40 41 083*		524) NLS - USE 9571191	1	Glove compartment	Handskfack	6
0050	1	*96 58 725*		211) RHD NLS	1	Glove compartment	Handskfack	6
0060	1	95 72 256		212) RHD	1	Glove compartment	Handskfack	6
0070								
0080	2	97 68 169		560,193,186)	1	Glove compartment lid	Handskfacklucka	5
0090	2	95 70 615		560,194,211,186)	1	Glove compartment lid	Handskfacklucka	5
0100	2	95 72 025		560,212,45[illegible]	1	Glove compartment lid	Handskfacklucka	5
0110	2	95 46 730		560,451)	1	Glove compartment lid	Handskfacklucka	5
0120	2	97 68 201		560,203,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0130	2	95 70 664		560,204,211,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0140	2	95 72 082		560,212) RHD	1	Glove compartment lid	Handskfacklucka	5
0150								
0160	2	97 68 177		590,186) -1986	1	Glove compartment lid	Handskfacklucka	5
0170	2	96 69 839		1987-,195,186,590)	1	Glove compartment lid	Handskfacklucka	5
0180	2	95 70 623		590,196,211,186)	1	Glove compartment lid	Handskfacklucka	5
0190	2	95 72 066		590,212)-1988	1	Glove compartment lid	Handskfacklucka	5
0200	2	95 46 763		590), 1989-	1	Glove compartment lid	Handskfacklucka	5
0210	2	97 68 219		590), -1986, RHD	1	Glove compartment lid	Handskfacklucka	5
0220	2	96 69 656		1987-,205,186,590) RHD	1	Glove compartment lid	Handskfacklucka	5
0230	2	95 70 672		590,206,211,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0240	2	95 72 124		590,212) RHD	1	Glove compartment lid	Handskfacklucka	5
0250								
0260	2	97 68 185		580,211,186)	1	Glove compartment lid	Handskfacklucka	5
0270	2	95 72 058		580,212)-1987	1	Glove compartment lid	Handskfacklucka	5
0280	2	95 72 041		1988-,450,580)	1	Glove compartment lid	Handskfacklucka	5
0290	2	95 46 755		580,451)	1	Glove compartment lid	Handskfacklucka	5
0300	2	97 68 227		580,211,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0310	2	95 72 116		580,212)-1987, RHD	1	Glove compartment lid	Handskfacklucka	5
0320	2	95 72 108		580), 1988-, RHD	1	Glove compartment lid	Handskfacklucka	5
0330								
0340	2	97 68 193		570,297,186)	1	Glove compartment lid	Handskfacklucka	5
0350	2	95 70 649		570,298,211,186)	1	Glove compartment lid	Handskfacklucka	5
0360	2	95 72 074		570,212,450)	1	Glove compartment lid	Handskfacklucka	5
0370	2	95 46 789		570,451)	1	Glove compartment lid	Handskfacklucka	5
0380	2	97 68 235		1986-,299,186,570) RHD	1	Glove compartment lid	Handskfacklucka	5

186. Also use glove box lid adjustment kit 9698309. Använd också justeringssats handskfackslucka 9698309.
193. Ch. --H1019122, --H8000786
194. Ch. H1019123--, H8000787--
195. Ch. --H1019124, --H8000768
196. Ch. H1019125--, H8000769--
203. Ch. --H1019384
204. Ch. H1019385--
205. Ch. --H1019316
206. Ch. H1019317--
211. Ch. --H1022779, --H8001035, RHD --H1027683
212. Ch. H1022780--, H8001036--, RHD H1027684--
297. Ch. --H1017376, --H8001145
298. Ch. H1017377--, H8001146--
299. Ch. --H1018027
450. Ch. --K1004916, --K2002237, --K8000114, --K4000005 SE 1988B: --J1004916, --J2031215, --J8005309
451. Ch. K1004617--, K2002238--, K8000115--, K4000006-- SE 1988B: J1050423--, J2031216--, J8005310--
523. Ch. --K1025352, --K2015345, --K8001285
524. Ch. K1025353--, K2015346--, K8001286--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Instrument panel

5-A22 *Glove compartment*

Instrumentpanel

Handskfack

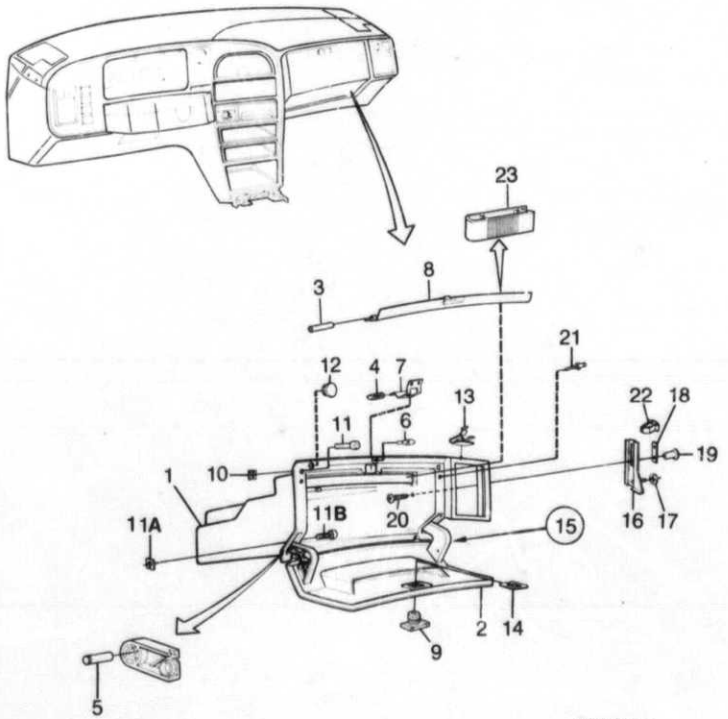

F4117 9000

0520	Pos	Part No/Art nr	K. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	2	*95 70 698*		570,300,211,186) RHD NLS - USE 9572132	1	Glove compartment lid	Handskfacklucka	5
0400	2	95 72 132		570,300) RHD (9570698)	1	Glove compartment lid	Handskfacklucka	5
0420	2	97 98 547		600,191,186)	1	Glove compartment lid	Handskfacklucka	5
0430	2	95 70 607		600,192,211,186)	1	Glove compartment lid	Handskfacklucka	5
0440	2	95 72 033		600,212)	1	Glove compartment lid	Handskfacklucka	5
0450	2	97 98 554		600,201,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0460	2	95 70 656		600,202,211,186) RHD	1	Glove compartment lid	Handskfacklucka	5
0470	2	95 72 090		600,212) RHD	1	Glove compartment lid	Handskfacklucka	5
0480	3	97 82 343			2	Pin	Pinne	5
0490	4	98 96 994		1986-	1	Rubber bushing	Gummibussning	5
0500	5	79 10 755			2	Pin	Pinne	5
0510	6	97 59 861		344)	2	Absorber	Dämpare	3
0520	6	97 59 861		345)	3	Absorber	Dämpare	3
0530	7	97 55 257			1	End plate	Slutbleck	5
0540	7	97 69 183		RHD	1	End plate	Slutbleck	5
0550	8	97 67 567			1	Cover	Lock	5
0560	8	97 67 575		RHD	1	Cover	Lock	5
0570	9			See page 8A-071, 4-H24	1	Glove compartment lock	Handskfackslås	
0620	10	79 77 317		(7975600)	4	Clip nut	Klämmutter	5
0630	11	79 65 338		-1985	4	Screw	Skruv	6
0640	11	79 65 684		1986-	4	Screw	Skruv	6
0650	11A	*79 39 796*		-1985 NLS	2	Clip nut	Klämmutter	5
0660	11A	79 77 317		1986-	2	Clip nut	Klämmutter	5
0670	11B	84 27 841		-1985	2	Screw	Skruv	5
0680	11B	79 65 684		1986-	2	Screw	Skruv	6
0690	12	97 82 251			1	Plug	Plugg	5
0700	13	73 98 332			2	Clip	Clips	5
0710	14	82 62 610		1986-	1	Clip	Clips	5
0720	15	96 98 309		See page 8B-251, 5-K12	1	Adjusting kit	Justersats	4
0730	16	*95 71 027*		1,442) LH NLS - USE 4030201	1	.Hinge	.Gångjärn	4
0740	16	40 30 201		1,443) LH	1	.Hinge	.Gångjärn	4
0750	16	*95 71 035*		1,442) RH NLS - USE 4030219	1	.Hinge	.Gångjärn	4
0760	16	40 30 219		1,443) RH	1	.Hinge	.Gångjärn	4
0770	17	79 65 809			2	.Clip	.Clips	5
0780	18	95 71 084		1,442)	2	.Nut washer	.Mutterbricka	5
0790	18	95 85 985		1,443)	2	.Nut washer	.Mutterbricka	5
0800	19	85 73 677		1,432)	2	.Hose	.Slang	5
0810	19	95 85 522		1,433)	2	.Protection	.Skydd	5
0820	20	97 76 006		1), -1987	4	.Screw	.Skruv	5
0830	20	95 71 118		1,442), 1988-	4	.Screw	.Skruv	5
0840	20	95 85 829		1,443)	4	.Screw	.Skruv	5
0850	21	95 94 508		1988-	2	Rivet	Nit	5

1. Not as separate spare part. Ej som separat reservdel.
186. Also use glove box lid adjustment kit 9698309. Använd också justeringssats handskfackslucka 9698309.
191. Ch. --H1017598, --H8000631
192. Ch. H1017599--, H8000632--
201. Ch. --H1018937
202. Ch. H1018938--
211. Ch. --H1022779, --H8001035, RHD --H1027683
212. Ch. H1022780--, H8001036--, RHD H1027684--
300. Ch. H1018028--
344. Ch. --J1015343, --J2008241, --J8001161
345. Ch. J1015344--, J2008242--, J8001162--
432. Ch. --J1016922, --J2009239, --J8001011
433. Ch. J1016923--, J2009240--, J8001012--
442. Ch. --K1004916, --K2002237, SE 1988B: --J1050522, --J2031215
443. Ch. K1004917--, K2002238--, SE 1988B: J1050423--, J2031216--
570. Grey Grå
600. Brown Brun


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-A24

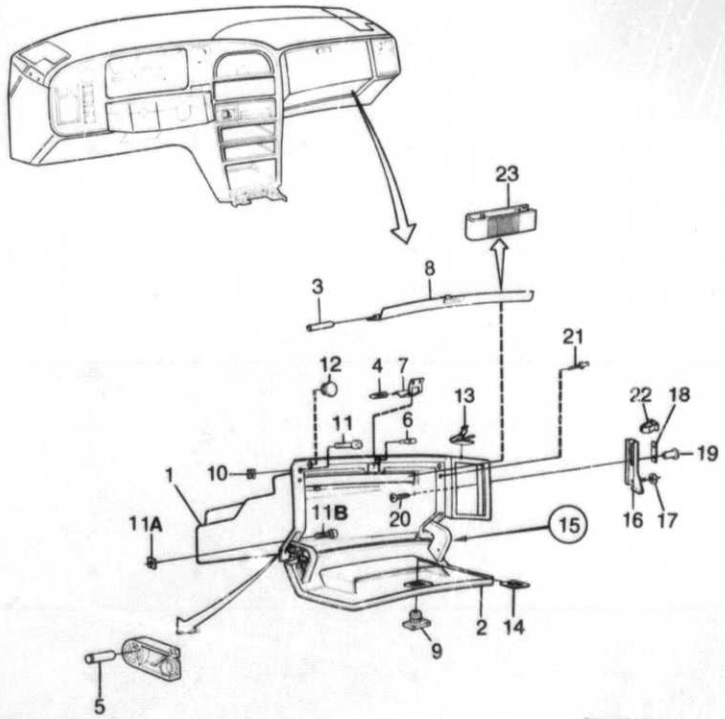

F4117 9000

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0860	22	*95 85 514*		433) NLS	2	Clamp	Klammer	5
-a/70	23			See page 3A-153, 2-G10	1	Fuse clip	Säkringsklämma	

433. Ch. J1016923–, J2009240–, J8001012–

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Instrument panel

5-B02

Centre console

Instrumentpanel

Mittkonsol

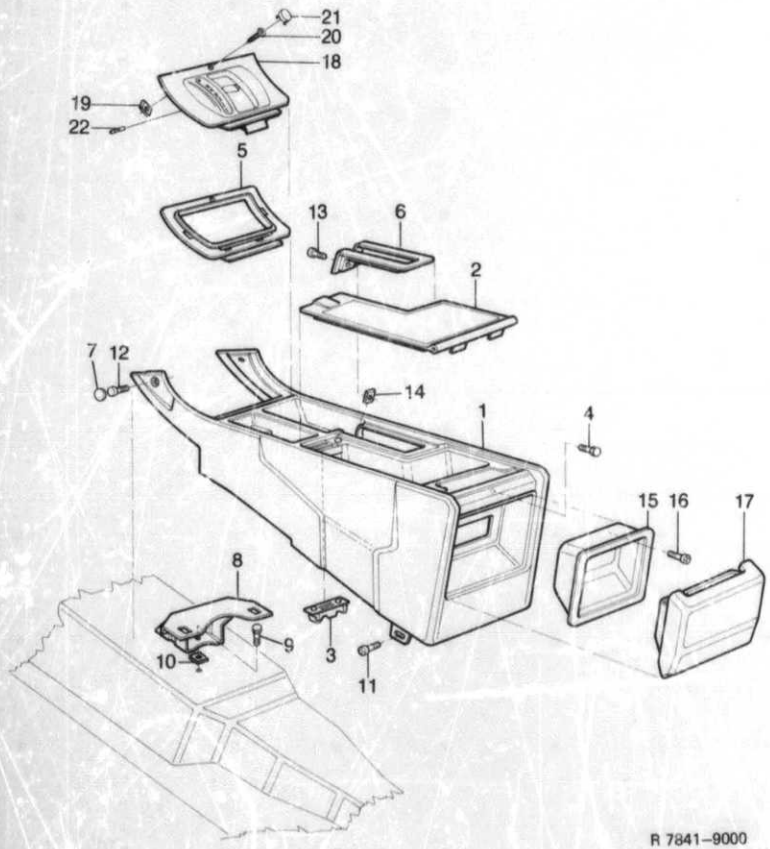

R 7841–9000

0530	Pns	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*97 81 972*		560), -1986 NLS - USE 4078416, 9569948	1	Centre console	Mittkonsol	6
0020	1	*96 51 670*		1987-,509,560) NLS - USE 4078416, 9569948	1	Centre console	Mittkonsol	6
0030	1	*40 33 676*		560,510) NLS - USE 4078416	1	Centre console	Mittkonsol	6
0040	1	*97 82 020*		560), -1986, RHD NLS - USE 9778481	1	Centre console	Mittkonsol	6
0050	1	96 51 688		1987-,517,560), RHD	1	Centre console	Mittkonsol	6
0060	1	40 33 726		560,518), RHD	1	Centre console	Mittkonsol	6
0070								
0080	1	97 81 980		590), -1986	1	Centre console	Mittkonsol	6
0090	1	95 73 882		590) 1987-1988 (9669938)	1	Centre console	Mittkonsol	6
0100	1	*95 81 919*		1989-,500,515,590) NLS - USE 4427068, 9569948	1	Centre console	Mittkonsol	6
0110	1	*40 33 700*		590,516) NLS - USE 4427068	1	Centre console	Mittkonsol	6
0120	1	*97 82 038*		590), -1986, RHD NLS	1	Centre console	Mittkonsol	6
0130	1	96 69 979		1987-,278,590) RHD	1	Centre console	Mittkonsol	6
0140	1	95 73 965		590,279) -1988, RHD	1	Centre console	Mittkonsol	6
0150	1	*95 81 943*		590,527,500)1989- RHD NLS - USE 4033759, 9569948	1	Centre console	Mittkonsol	6
0160	1	40 33 759		590,528), RHD	1	Centre console	Mittkonsol	6
0170								
0180	1	96 51 712		580),-1987 (9781998)	1	Centre console	Mittkonsol	6
0190	1	96 79 960		1988-,513,580)	1	Centre console	Mittkonsol	6
0200	1	*40 33 692*		580,514) NLS - USE 4078432	1	Centre console	Mittkonsol	6
0210	1	96 51 720		580),-1987, RHD(9782046)	1	Centre console	Mittkonsol	6
0220	1	96 90 165		1988-,521,580), RHD	1	Centre console	Mittkonsol	6
0230	1	40 33 742		580,522), RHD	1	Centre console	Mittkonsol	6
0240								
0250	1	*97 82 004*		570), -1986 NLS	1	Centre console	Mittkonsol	6
0260	1	*96 51 738*		1987-,274,570) NLS - USE 4427084, 9569948	1	Centre console	Mittkonsol	6
0270	1	*95 73 890*		570,275,511) NLS - USE 4427084, 9569948	1	Centre console	Mittkonsol	6
0280	1	*40 33 684*		570,512) NLS - USE 4427084	1	Centre console	Mittkonsol	6

274. Ch. -H1018108, --H8000011
275. Ch. H1018109--, H8000012--
278. Ch. --H1034497
279. Ch. H1034498--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
509. Ch. --K1023171, --K2013745, --K8001190
510. Ch. K1023172--, K2013746--, K8001191--
511. Ch. --K1023233, --K2013781, --K8001129
512. Ch. K1023234--, K2013782--, K8001130--
513. Ch. --K1024485, --K2014725
514. Ch. K1024138--, K2014465--, K8001146--
516. Ch. K1024486--, K2014726--
517. Ch. --K1023919
518. Ch. K1023920--
521. Ch. --K1025140
522. Ch. K1025141--
527. Ch. --K1026037
528. Ch. K1026038--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Instrument panel

5-B04 *Centre console*

Instrumentpanel

Mittkonsol

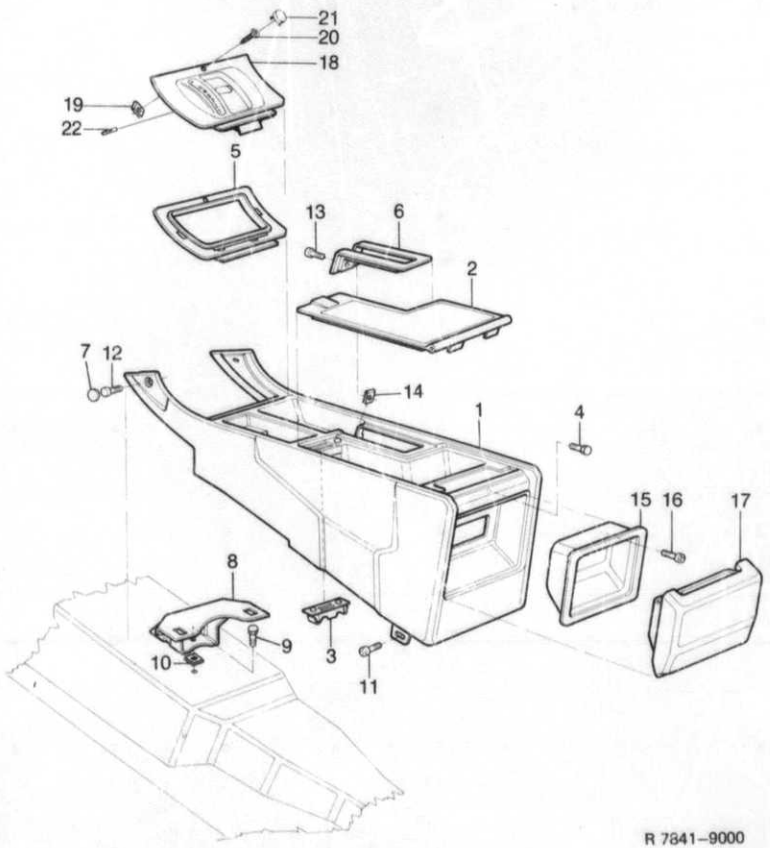

R 7841-9000

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0290	1	*97 82 053*		570), -1986, RHD NLS - USE 9778473	1	Centre console	Mittkonsol	6
0300	1	96 51 746		1987-,209,570) RHD	1	Centre console	Mittkonsol	6
0310	1	95 73 973		570,210,519) RHD	1	Centre console	Mittkonsol	6
0320	1	*40 33 734*		570,520) RHD NLS - USE 4616421	1	Centre console	Mittkonsol	6
0340	1	96 51 589		1987-,270,600)	1	Centre console	Mittkonsol	6
0350	1	95 73 866		600,271)	1	Centre console	Mittkonsol	6
0360	1	96 51 597		1987-,276,600) RHD	1	Centre console	Mittkonsol	6
0370	1	95 73 940		600,277) RHD	1	Centre console	Mittkonsol	6
0390	2	40 77 004		350,560)(9574161,9778812	1	Cover	Lock	6
0400	2	*95 78 634*		560,351,480) NLS - USE 4077004	1	Cover	Lock	6
0410	2	*40 30 813*		560,481) NLS - USE 4077004	1	Cover	Lock	6
0430	2	97 78 820		590), -1986	1	Cover	Lock	6
0440	2	95 78 642		590) 1987-1988 (9574179)	1	Cover	Lock	6
0450	2	*95 81 745*		1989-,500,480,590) NLS - USE 4077012	1	Cover	Lock	6
0460	2	*40 30 847*		590,481) NLS - USE 4077012	1	Cover	Lock	6
0480	2	95 74 195		580), -1987 (9778838)	1	Cover	Lock	6
0490	2	40 77 020		580), 1988- (9674995, 9578659,4030839)	1	Cover	Lock	6
0520	2	40 77 038		350,570)(9574203,9778804	1	Cover	Lock	6
0530	2	*95 78 675*		570,351,480) NLS - USE 4077038	1	Cover	Lock	6
0540	2	*40 30 821*		570,481) NLS - USE 4077038	1	Cover	Lock	6
0560	2	95 78 683		600), 1987-1988	1	Cover	Lock	6
0570	3	97 63 228			1	Magnet	Magnet	6
0580	4	92 20 880			2	Rivet	Nit	5
0590	5	97 60 596			1	Collar	Krage	6
0600	5	97 64 200		RHD	1	Collar	Krage	6
0610	6	97 89 391		560)	1	Frame	Ram	6
0620	6	97 93 159		590), -1986	1	Frame	Ram	6
0630	6	96 69 953		590), 1987-1988	1	Frame	Ram	6
0640	6	95 81 901		1989-,500,590)	1	Frame	Ram	6
0650	6	97 90 015		580), -1987	1	Frame	Ram	6

209. Ch. --H1020550
210. Ch. H1020551--
270. Ch. --H1034165, --H8002166
271. Ch. H1034166--, H8002167--
276. Ch. --H1034432
277. Ch. H1034433--
350. Ch. --J1002724, --J2000786, --J8000315
351. Ch. J1002725--, J2000787--, J8000316--
480. Ch. --K1016928, --K2009379, --K8000782
481. Ch. K1016929--, K2009380--, K8000783--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
519. Ch. --K1023260
520. Ch. K1023261--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Instrument panel

5-B06

Centre console

Instrumentpanel

Mittkonsol

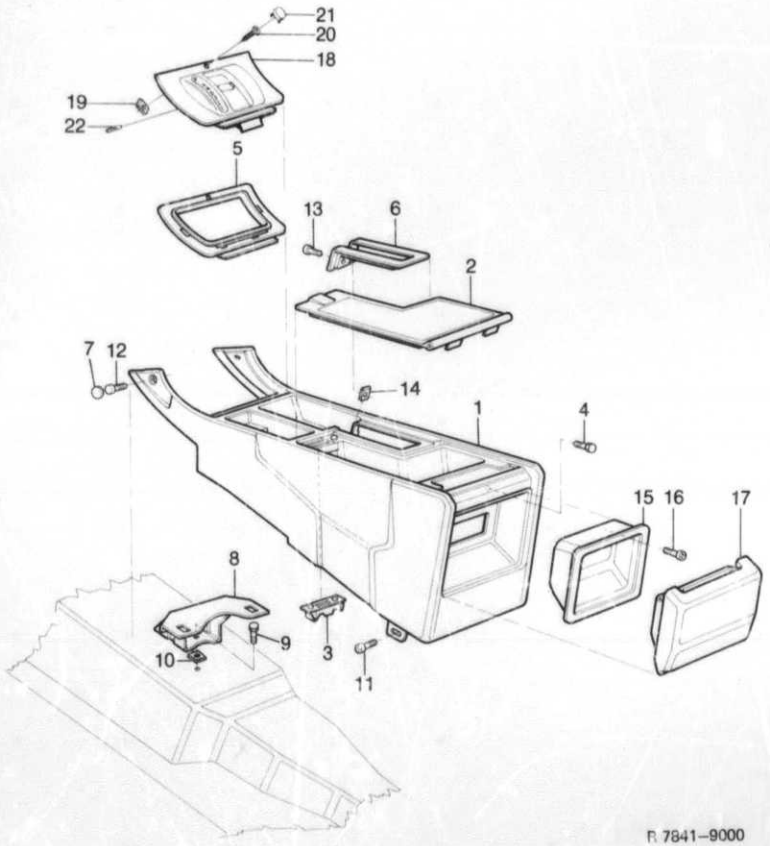

R 7841–9000

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660	6	96 79 994		580), 1988-	1	Frame	Ram	6
0670	6	97 90 007		570), 1986-	1	Frame	Ram	6
0680	6	96 51 613		600), 1987-	1	Frame	Ram	6
0690	7	97 78 929		560)	2	Cover	Täcklock	6
0700	7	*97 78 937*		590), -1986 NLS	2	Cover	Täcklock	6
0710	7	96 69 946		590), 1987-1988	2	Cover	Täcklock	6
0720	7	95 81 893		1989-,500,590)	2	Cover	Täcklock	6
0730	7	97 78 945		580), -1987	2	Cover	Täcklock	6
0740	7	96 79 986		580), 1988-	2	Cover	Täcklock	6
0750	7	97 78 911		570), 1986-	2	Cover	Täcklock	6
0760	7	96 51 605		600), 1987-	2	Cover	Täcklock	6
0770	8	97 60 141		74)	1	Bracket	Fäste	6
0780	8	96 63 048		75)	1	Bracket	Fäste	6
0790	8	*97 78 655*		74) RHD NLS	1	Bracket	Fäste	6
0800	8	96 63 055		75) RHD	1	Bracket	Fäste	6
0810	9	80 59 396		72)	2	Screw	Skruv	5
0820	9	79 69 223		73)	2	Screw	Skruv	5
0830	10	79 74 231		72)	2	Cage nut	Korgmutter	5
0840	10	79 74 728		73,82)	2	Cage nut	Korgmutter	5
0850	10	79 74 538		83), -1986	2	Cage nut	Korgmutter	5
0860	11	79 73 050		-1986	2	Screw	Skruv	5
0870	11	79 72 607		1987-	2	Screw	Skruv	5
0880	12	79 65 338			2	Screw	Skruv	6
0890	13	79 70 304			1	Screw	Skruv	5
0900	14	79 72 573			1	Clip nut	Clipsmutter	5
0910	15	97 60 695			1	Ashtray housing	Askkoppshus	6
0920	16	97 81 501			4	Screw	Skruv	5
0930	17	97 51 074			1	Ashtray	Askkopp	5
0940	18	95 92 908		371) A (9675125,9679671)	1	Gear lever gaiter	Växelspakskåpa	6
0950	18	95 92 916		140) A, RHD (9675133)	1	Gear lever gaiter	Växelspakskåpa	6
0960	18	96 90 009		141,370) A, RHD	1	Cover	Lock	6
0970	18	95 92 916		371) A, RHD	1	Gear lever gaiter	Växelspakskåpa	6
0980	19	79 72 771		A	1	Clip nut	Clipsmutter	5
0990	20	84 27 841		A	1	Screw	Skruv	5
1000	21	92 85 404		A	1	Cover	Täcklock	3
1010	22	85 00 613		A	1	Bulb	Glödlampa	2


72. Ch. --G1006839
73. Ch. G1006840--
74. Ch.--G1009504
75. Ch.G1009505--
82. Ch. --G1021287
83. Ch. G1021288--
140. Ch. --H1007401, --H8000481
141. Ch. H1007402--, H8000482--
370. Ch. --J1020901, --J2011975, --J8001190, RHD --J1026023
371. Ch. J1020902--, J2011976--, J8001191--, RHD J1026024--
500. Also valid for SE 1988. Gäller även för SE 1988.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

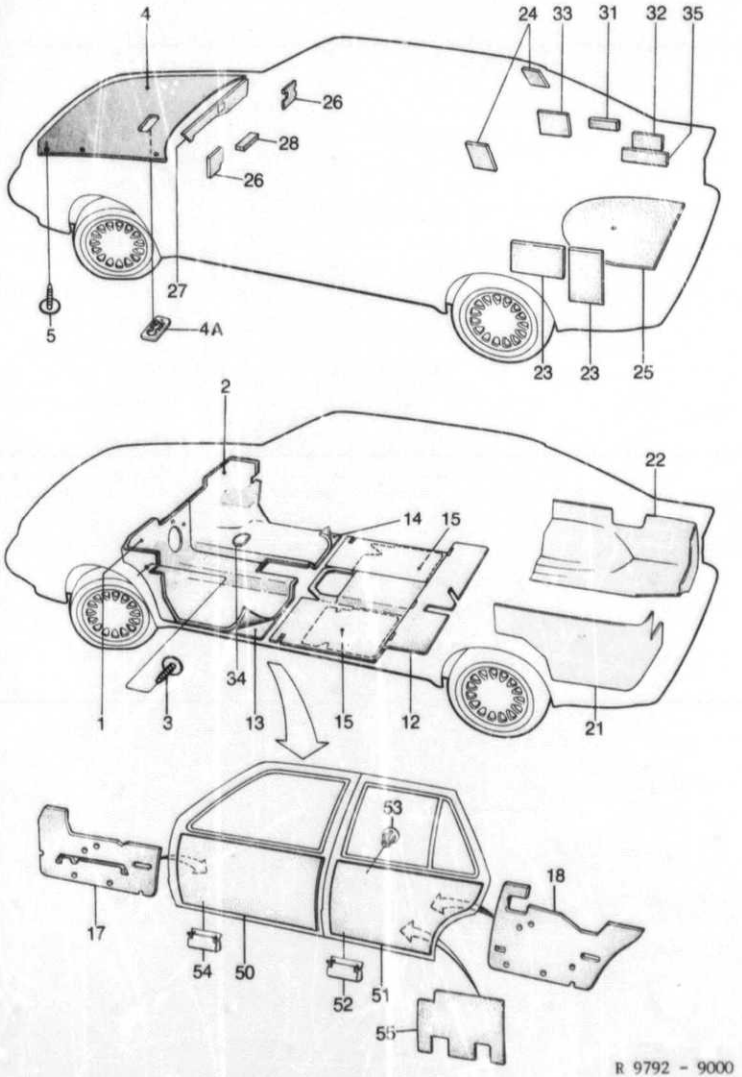

R 9792 - 9000

Upholstery
5-B08
Insulation

Klädsel
Isolering

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 64 143		-1985, LH	1	Insulation	Isolering	6
0020	1	96 57 164		1986-,114), LH	1	Insulation	Isolering	6
0030	1	96 76 206		115,103), LH	1	Insulation	Isolering	6
0040	1	96 63 204		104)-1987, LH	1	Insulation	Isolering	6
0050	1	96 76 065		1988, LH	1	Insulation	Isolering	6
0060	1	95 74 062		302), 1988, LH (9584921)	1	Insulation	Isolering	6
0070	1	95 74 062		500) 1989-, LH	1	Insulation	Isolering	6
0080	1	*96 57 206*		114), LH, RHD (9784745) NLS	1	Insulation	Isolering	6
0090	1	96 76 214		115,103), LH, RHD	1	Insulation	Isolering	6
0100	1	96 63 220		104)-1987, LH, RHD	1	Insulation	Isolering	6
0110	1	96 76 107		1988-,348), LH, RHD	1	Insulation	Isolering	6
0120	1	95 45 336		349), LH, RHD	1	Insulation	Isolering	6
0130								
0140	2	97 64 150		-1985, RH	1	Insulation	Isolering	6
0150	2	96 57 172		1986, RH	1	Insulation	Isolering	6
0160	2	96 63 212		1987, RH	1	Insulation	Isolering	6
0170	2	95 74 435		1988, RH	1	Insulation	Isolering	6
0180	2	95 74 070		302), 1988, RH (9584939)	1	Insulation	Isolering	6
0190	2	95 74 070		500) 1989-, RH	1	Insulation	Isolering	6
0200	2	96 57 214		-1986, RH, RHD (9784737)	1	Insulation	Isolering	6
0210	2	96 63 238		1987, RH, RHD	1	Insulation	Isolering	6
0220	2	95 45 344		1988-, RH, RHD (9586843)	1	Insulation	Isolering	6
0230	3	97 76 659		-1987	6	Clamp	Klämma	6
0240	3	97 76 659		1988-	4	Clamp	Klämma	6
0250	4	*97 60 133*		-1985 NLS - USE 4267738	1	Insulation	Isolering	3
0260	4	42 67 738		1986-1987 (9659756)	1	Insulation	Isolering	3
0270	4	*97 57 196*		1987 NLS - USE 4267738	1	Insulation with cut for lamp	Isolering med uttag för lampa	3
0290	4	*95 72 728*		1988- NLS - USE 4267738	1	Insulation	Isolering	3
0300	4A	98 96 234		1987-	1	Attaching plate	Fästplåt	3
0310	5	97 60 497			19	Clamp	Klämma	6
0320	12	*97 86 096*		-1987 NLS - USE 4265328	1	Insulation	Isolering	6
0330	12	*96 76 149*		1988- NLS - USE 4265328	1	Insulation	Isolering	6
0340	13	97 86 104		-1985, LH	1	Insulation	Isolering	6
0350	13	96 57 180		1986-,114), LH	1	Insulation	Isolering	6
0360	13	96 76 222		115,103), LH	1	Insulation	Isolering	6
0370	13	96 63 246		104)-1987, LH	1	Insulation	Isolering	6
0380	13	96 76 081		1988, LH	1	Insulation	Isolering	6
0390	13	*95 84 947*		302) 1988, LH NLS - USE 9574062	1	Insulation	Isolering	6
0400	13	*96 57 230*		114), LH, RHD (9795162) NLS	1	Insulation	Isolering	6
0410	13	96 76 230		115,103), LH, RHD	1	Insulation	Isolering	6
0420	13	96 63 261		104)-1987, LH, RHD	1	Insulation	Isolering	6
0430	13	96 76 123		1988-,348), LH, RHD	1	Insulation	Isolering	6
0450	14	*97 86 112*		-1985, RH NLS	1	Insulation	Isolering	6
0460	14	96 57 198		1986, RH	1	Insulation	Isolering	6
0470	14	96 63 253		1987, RH	1	Insulation	Isolering	6
0480	14	95 74 443		1988, RH	1	Insulation	Isolering	6
0490	14	*95 84 954*		302), 1988, RH NLS - USE 9574070	1	Insulation	Isolering	6
0500	14	*96 57 222*		-1986, RH, RHD (9795170) NLS	1	Insulation	Isolering	6

103. Ch. --H1000751, --H8000040
104. Ch. H1000752-, H8000041--
114. Ch. --G1013168
115. Ch. G1013169--
302. AIR-BAG
348. Ch --J1019688, - J2011078, --J8001182
349. Ch J1019689-, J2011079--, J8001183--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-B10

Insulation
Isolering

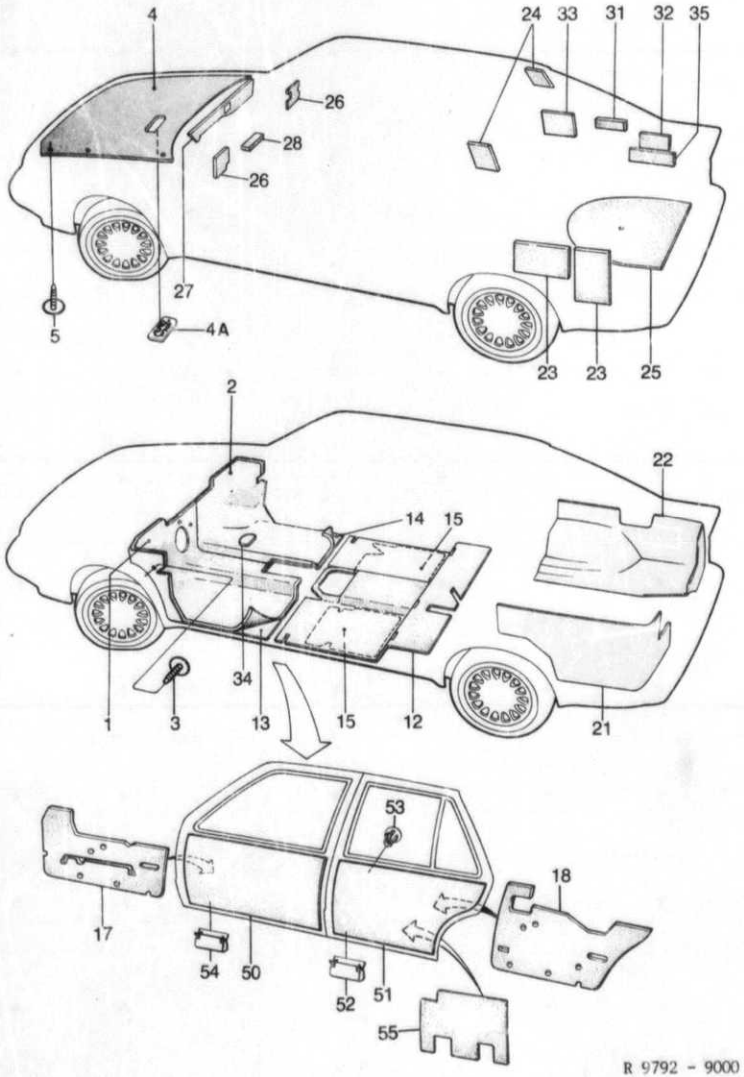

R 9792 - 9000

1200	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	14	96 63 279		1987, RH, RHD	1	Insulation	Isolering	6
0520	14	*95 86 850*		1988-,348), RH, RHD	1	Insulation	Isolering	6
0530				(9676131) NLS				
0540	15	*97 63 970*		-1987, LH NLS - USE 4257515	1	Base	Underlägg	6
0540								
0550	15	96 78 285		1988-, LH	1	Base	Underlägg	6
0560	15	97 64 002		RH	1	Base	Underlägg	6
0570	17	97 95 857			2	Insulation	Isolering	6
0580	18	*97 95 865*		-1986 NLS - USE 9678731	2	Insulation	Isolering	6
0590	18	96 78 731		1987-	2	Insulation	Isolering	6
0600	21	97 99 313		244), LH	1	Insulation	Isolering	6
0610	22	97 99 321		244), RH	1	Insulation	Isolering	6
0620	23	97 76 956			2	Insulation	Isolering	6
0630	24	97 76 964			2	Insulation	Isolering	6
0640	25	97 75 941			1	Insulation	Isolering	6
0650	26	97 75 917		-1986, LH	1	Insulation	Isolering	6
0660	26	97 75 925		-1986, RH	1	Insulation	Isolering	6
0670	27	96 59 004		1986 (9775933)	1	Insulation	Isolering	6
0680	28	*97 91 591*		-1987, LH NLS - USE 9788563	1	Insulation	Isolering	5
0690	28	97 88 563		1988-, LH	1	Insulation	Isolering	6
0700	31	97 88 563		RH	1	Insulation	Isolering	6
0710	32	97 86 146		RH	1	Insulation	Isolering	6
0720	32	96 77 154		RH, 4D	1	Insulation	Isolering	6
0730	33	97 88 571		RH	1	Insulation	Isolering	6
0740	34	97 98 281			2	Cover	Lock	5
0750	35	96 77 162		RH, 4D	1	Insulation	Isolering	6
0760	50	97 83 317		245)	2	Water drainage	Vattenavledare	5
0770	50	95 71 019		246)	2	Water drainage	Vattenavledare	5
0780	51	97 83 325		110)	2	Water drainage	Vattenavledare	5
0790	51	96 71 918		111)	2	Water drainage	Vattenavledare	5
0800	52	96 72 908		111)	6	Clamp	Klammer	5
0810	53	96 76 057		111)	2	Clamp	Klammer	5
0820	54	96 72 908		246)	12	Clamp	Klammer	5
0830	55	96 94 472		1987-	2	Water drainage	Vattenavledare	5

110. Ch. --H1000230, --H8000014
111. Ch. H1000231--, H8000015--
244. Ch --H1027949, --H8001379
245. Ch --H1019530, --H8000869
246. Ch H1019531--, H8000870--
348. Ch --J1019688, --J2011078, --J8001182

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	8-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5 K06

5-B12

Sound insulation
Ljudisolering

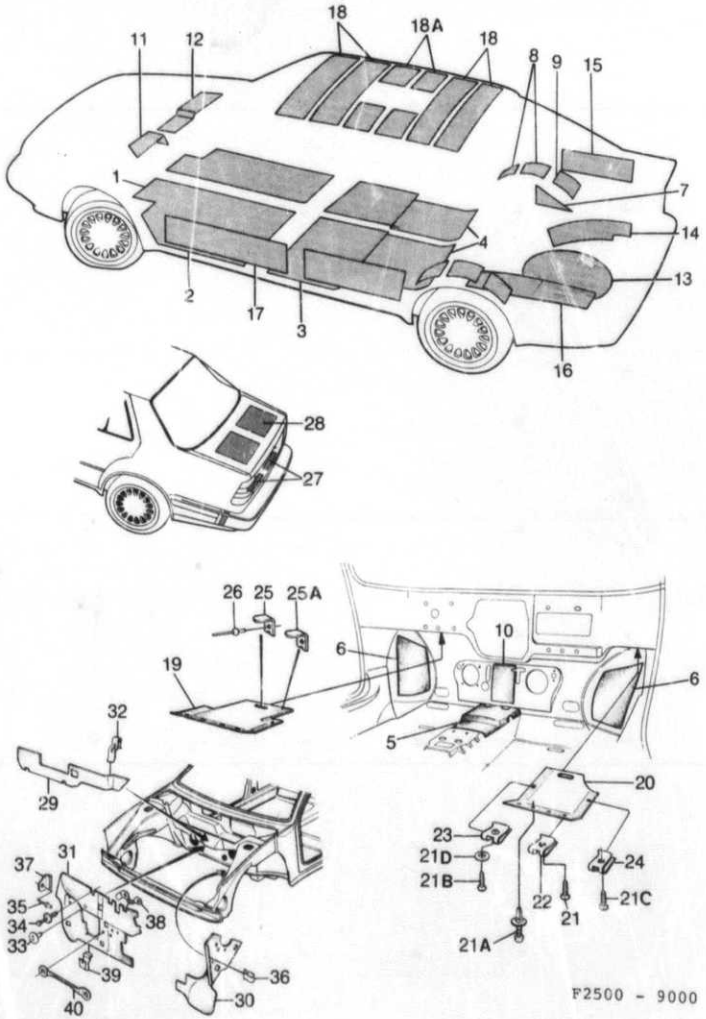

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 57 709		LH	1	Damper mat	Dämpmatta	6
0020	1	*97 57 725*		RH NLS	1	Damper mat	Dämpmatta	6
0030	2	*97 72 476*		LH NLS	1	Damper mat	Dämpmatta	6
0040	2	97 72 468		RH	1	Damper mat	Dämpmatta	6
0050	3	97 57 741		LH	1	Damper mat	Dämpmatta	6
0060	3	*97 57 733*		RH NLS - USE 4265468	1	Damper mat	Dämpmatta	6
0070	4	97 72 484		LH	1	Damper mat	Dämpmatta	6
0080	4	40 53 716		173), RH (9757758)	1	Damper mat	Dämpmatta	6
0090	4	*96 76 024*		174), RH NLS - USE 4053716	1	Damper mat	Dämpmatta	6
0100	5	*96 59 582*		-1987 NLS - USE 4271417	1	Damper mat	Dämpmatta	6
0110	5	95 91 280		1988-	1	Damper mat	Dämpmatta	6
0120	6	97 57 618		LH	1	Damper mat	Dämpmatta	6
0130	6	97 75 750		RH	1	Damper mat	Dämpmatta	6
0140	7	97 75 784		LH	1	Damper mat	Dämpmatta	6
0150	7	97 75 818		RH	1	Damper mat	Dämpmatta	6
0160	8	97 75 792			4	Damper mat	Dämpmatta	6
0170	9	97 75 800			2	Damper mat	Dämpmatta	6
0180	10	97 57 675			1	Damper mat	Dämpmatta	6
0190	11	97 75 875		-1987, LH	1	Damper mat	Dämpmatta	6
0200	11	95 83 154		1988-, LH	1	Damper mat	Dämpmatta	6
0210	12	97 75 883		RH	1	Damper mat	Dämpmatta	6
0220	13	96 59 467			1	Damper mat	Dämpmatta	6
0230						spare wheel	reservhjul	
0240	14	97 75 842		LH	1	Damper mat	Dämpmatta	6
0250						spare wheel	reservhjul	
0260	14	97 94 611		RH	1	Damper mat	Dämpmatta	6
0270						spare wheel	reservhjul	
0280	15	97 75 867		-1988	2	Damper mat	Dämpmatta	6
0290	15	97 75 867		1989-, LH	2	Damper mat	Dämpmatta	6
0300	15	40 51 504		1989-, RH	2	Damper mat	Dämpmatta	6
0310	16	97 57 766			1	Damper mat	Dämpmatta	6
0320	17	*97 57 683*		93) NLS - USE 9544834	8	Damping disc	Dämpskiva	5
0330	17	*97 57 683*		94)-1987 NLS - USE 9544834	4	Damping disc	Dämpskiva	5
0340	17	95 44 834		1988-	4	Damper mat	Dämpmatta	5
0350	18	97 57 691		1987-	4	Damper mat	Dämpmatta	5
0360	18	97 57 691		1987-, SR	3	Damper mat	Dämpmatta	5
0370	18A	84 90 708		1987-	4	Cardboard	Pappskiva	5
0380	19	95 86 264		590), 1988,LH,(9694407)	1	Sound insulation	Ljudisolering	6
0390	19	95 80 689		590,500), 1989-, LH	1	Sound insulation	Ljudisolering	6
0400	19	95 84 962		590,302)-1988, LH	1	Sound insulation	Ljudisolering	6
0410	19	95 45 120		590,302,500),1989-,LH	1	Sound insulation	Ljudisolering	6
0420	19	96 94 423		590), 1988, LH, RHD	1	Sound insulation	Ljudisolering	6
0430	19	95 80 655		590,500), 1989-, LH, RHD	1	Sound insulation	Ljudisolering	6
0440								
0450	19	96 71 017		570), -1987,LH,(9760513)	1	Sound insulation	Ljudisolering	6
0460	19	95 86 124		570), 1988-,LH,(9664111)	1	Sound insulation	Ljudisolering	6
0470	19	96 64 111		570,302), LH	1	Sound insulation	Ljudisolering	6
0480	19	97 81 295		570), -1987, LH, RHD	1	Sound insulation	Ljudisolering	6
0490	19	96 64 137		570), 1988-, LH, RHD	1	Sound insulation	Ljudisolering	6
0500								
0510	20	96 94 415		590), 1988, RH	1	Sound insulation	Ljudisolering	6
0520	20	95 80 697		590,500), 1988-, RH	1	Sound insulation	Ljudisolering	6
0530	20	95 76 844		590,302)-1988, RH	1	Sound insulation	Ljudisolering	6

93. Ch. --G1010057
94. Ch. G1010058--
173. Ch. --G1010499
174. Ch. G1010500--
302. AIR-BAG
500. Also valid for SE 1988B. Gäller även för SE 1988B.
570. Grey Grå
590. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-B14

Sound insulation
Ljudisolering

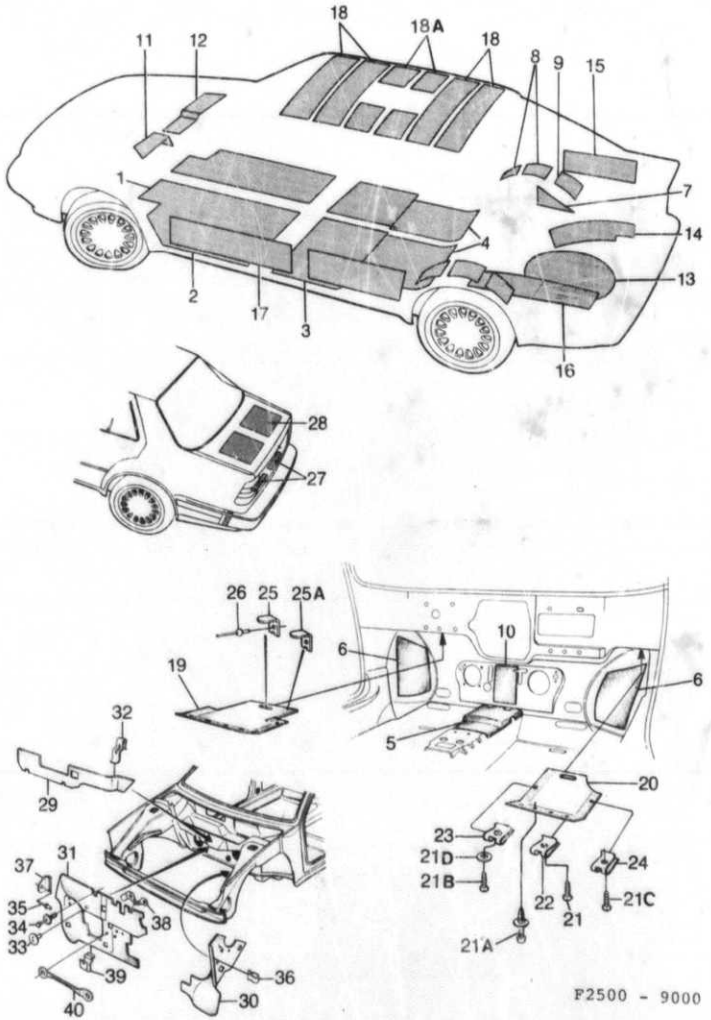

1250	Pos	Part No/Ar. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	20	95 80 705		590,302,500), 1989-, RH,	1	Sound insulation	Ljudisolering	6
0550	20	96 94 431		590), 1988, RH, RHD	1	Sound insulation	Ljudisolering	6
0560	20	95 80 663		590,500), 1989-, RH, RHD	1	Sound insulation	Ljudisolering	6
0570								
0580	20	97 60 521		570), -1987, RH	1	Sound insulation	Ljudisolering	6
0590	20	96 64 129		570), 1988-, RH	1	Sound insulation	Ljudisolering	6
0600	20	95 72 744		570,302), RH	1	Sound insulation	Ljudisolering	6
0610	20	96 71 868		570), -1987, RH, RHD	1	Sound insulation	Ljudisolering	6
0620	20	96 64 145		570), 1988-, RH, RHD	1	Sound insulation	Ljudisolering	6
0630	21	97 76 006		-1985	12	Screw	Skruv	5
0640	21A	96 72 254		570), 1986-	8	Screw rivet	Skruvnit	6
0650	21A	96 94 449		590), 1988	8	Screw rivet	Skruvnit	6
0660	21A	95 80 671		590,500), 1989-	8	Screw rivet	Skruvnit	6
0670	21B	79 72 946		1986-	2	Screw	Skruv	5
0680	21C	97 76 006		1986-	2	Screw	Skruv	5
0690	21D	70 88 073		1986-	2	Washer	Bricka	5
0700	22	79 75 410		-1985	8	Clip nut	Clipsmutter	5
0710	23	79 72 573		-1985	2	Clip nut	Clipsmutter	5
0720	23	79 68 001		1986-	2	Clip nut	Clipsmutter	5
0730	24	79 67 995		-1985	2	Clip nut	Clipsmutter	3
0740	24	79 68 001		1986-	2	Clip nut	Clipsmutter	5
0750	25	97 63 442			2	Bracket	Fäste	6
0760	25	97 63 442		302)	1	Bracket	Fäste	6
0770	25A	95 75 622		302)	1	Bracket	Fäste	6
0780	26	79 75 402			2	Rivet	Nit	5
0790	27	96 77 147		398), 4D	2	Damper mat	Dämpmatta	6
0800	27	95 94 938		399), 4D	2	Damper mat	Dämpmatta	6
0810	28	*95 89 649*		-1988, 4D NLS - USE 4053773	2	Damper mat	Dämpmatta	5
0820	28	40 53 773		500) 1989-, 4D	2	Damper mat	Dämpmatta	5
0830	29	*95 75 911*		1988-, I NLS - USE 4256913	1	Sound absorber	Ljudabsorbent	6
0840	29	*95 75 911*		4D NLS - USE 4256913	1	Sound absorber	Ljudabsorbent	6
0850	29	*95 75 911*		500), 1989-, TURBO NLS - USE 4256913	1	Sound absorber	Ljudabsorbent	6
0860	30	95 76 000		1988-, I, LH	1	Sound absorber	Ljudabsorbent	6
0870	30	95 76 000		4D, LH	1	Sound absorber	Ljudabsorbent	6
0880	30	95 76 000		500) 1989-, TURBO, LH	1	Sound absorber	Ljudabsorbent	6
0890	31	95 75 929		1988-, I, RH	1	Sound absorber	Ljudabsorbent	6
0900	31	95 75 929		4D, RH	1	Sound absorber	Ljudabsorbent	6
0910	31	95 75 929		500) 1989-, TURBO, RH	1	Sound absorber	Ljudabsorbent	6
0920	31	95 75 937		1988-, I, RH, RHD	1	Sound absorber	Ljudabsorbent	6
0930	31	95 75 937		4D, RH, RHD	1	Sound absorber	Ljudabsorbent	6
0940	31	95 75 937		500),1989-, TURBO,RH,RHD	1	Sound absorber	Ljudabsorbent	6
0950	32	95 77 677		1988-, I	5	Clamp	Klammer	5
0960	32	95 77 677		4D	5	Clamp	Klammer	5
0970	32	95 77 677		500), 1989-, TURBO	5	Clamp	Klammer	5
0980	33	73 99 686		1988-, I	1	Push nut	Tryckmutter	3
0990	33	73 99 686		4D	1	Push nut	Tryckmutter	3
1000	33	73 99 686		500), 1989-, TURBO	1	Push nut	Tryckmutter	3
1010	34	73 99 694		1988-, I	1	Rivet	Nit	3
1020	34	73 99 694		4D	1	Rivet	Nit	3
1030	34	73 99 694		500), 1989-, TURBO	1	Rivet	Nit	3
1040	35	93 93 968		1988-, I	1	Rivet	Nit	5
1050	35	93 93 968		4D	1	Rivet	Nit	5
1060	35	93 93 968		500), 1989-, TURBO	1	Rivet	Nit	5
1070	36	95 78 964		1988-, I	3	Clamp	Klammer	5

302. AIR-BAG
398. Ch --J1021999
399. Ch J1022000--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
570. Grey Grå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-B16

Sound insulation

Ljudisolering

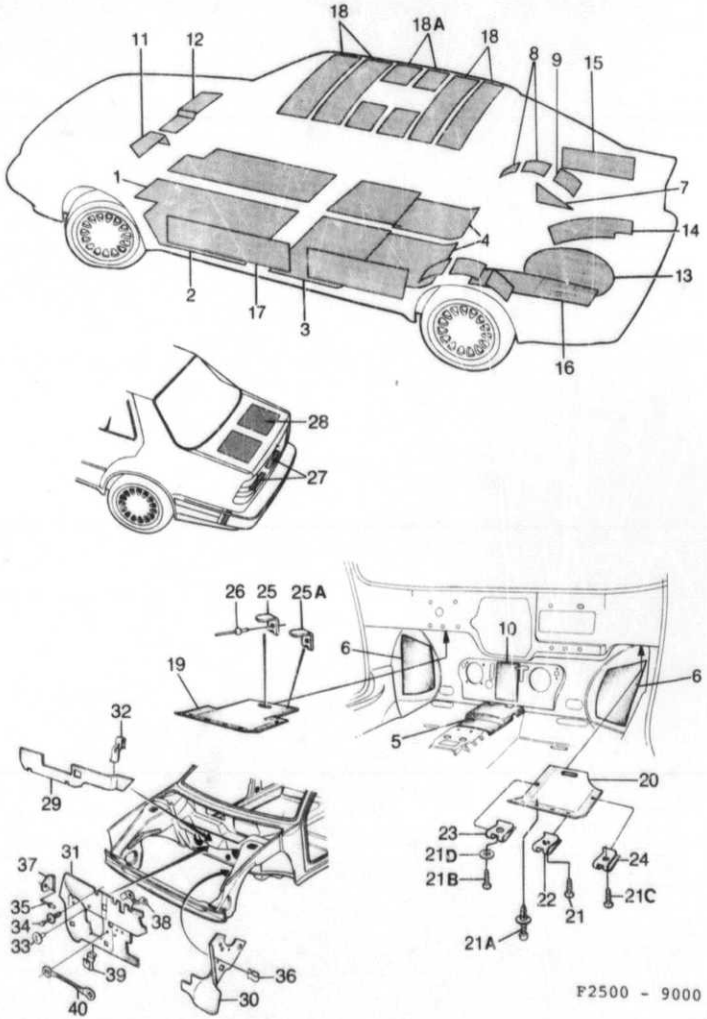

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1080	36	95 78 964		4D	3	Clamp	Klammer	5
1090	36	95 78 964		500), 1989-, TURBO	3	Clamp	Klammer	5
1100	37	95 79 251		1988-, I	1	Attaching bracket	Fästvinkel	6
1110	37	95 79 251		4D	1	Attaching bracket	Fästvinkel	6
1120	37	95 79 251		500), 1989-, TURBO	1	Attaching bracket	Fästvinkel	6
1130	38	*95 45 112*		1988-,448), I NLS - USE 9547340	3	Clamp	Klammer	5
1140	38	*95 45 112*		448), 4D NLS - USE 9547340	3	Clamp	Klammer	5
1150	38	*95 45 112*		1989-,448), TURBO NLS - USE 9547340	3	Clamp	Klammer	5
1160	38	95 47 340		449)	1	Clamp	Klammer	5
1170	39	95 84 814		1988-, I	4	Clamp	Klammer	5
1180	39	95 84 814		4D	4	Clamp	Klammer	5
1190	39	95 84 814		500), 1989-, TURBO	4	Clamp	Klammer	5
1200	40	95 45 211		1988-, I	1	Clamp	Klammer	5
1210	40	95 45 211		4D	1	Clamp	Klammer	5
1220	40	95 45 211		500), 1989-, TURBO	1	Clamp	Klammer	5


448. Ch --K1005077
449. Ch K1005078--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

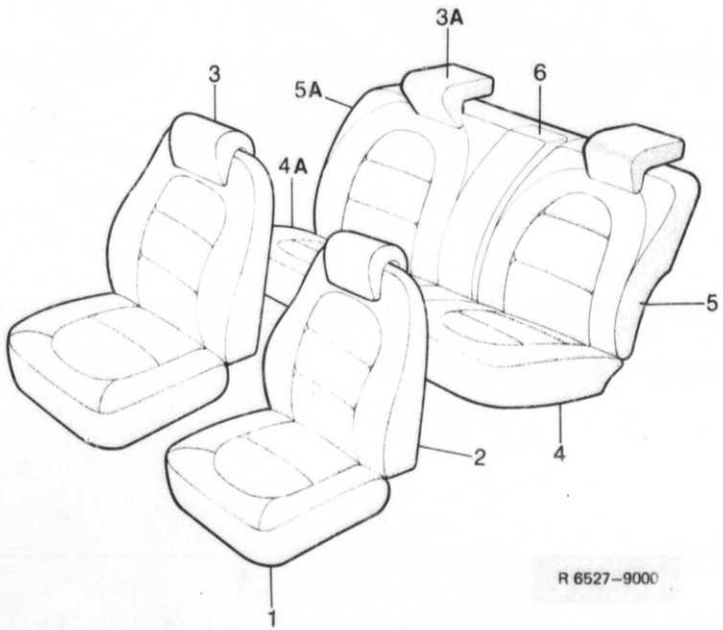

Upholstery

5-B18

Covers 1985
Contour design

Klädsel

Klädselpåsar 1985
Contour design

1280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C20				
0020	1	97 75 271		560)	2	Seat cover	Sitspåse	6
0030	2	97 75 339		560)	2	Back cover	Ryggpåse	6
0040	3	97 75 453		560)	2	Head restraint cover	Nackstödspåse	6
0050	3A	97 74 415		560)	2	Head restraint cover	Nackstödspåse	6
0060	4	97 75 008		560), LH	1	Seat cover	Sitspåse	6
0070	4A	97 74 944		560), RH	1	Seat cover	Sitspåse	6
0080	5	97 75 123		560), LH	1	Back cover	Ryggpåse	6
0090	5A	97 75 065		560), RH	1	Back cover	Ryggpåse	6
0100	6	97 75 180		560)	1	Arm rest cover	Armstödspåse	6
0110				TRIM COLOUR C21				
0120	1	97 75 289		590)	2	Seat cover	Sitspåse	6
0130	2	97 75 347		590)	2	Back cover	Ryggpåse	6
0140	3	97 75 461		590)	2	Head restraint cover	Nackstödspåse	6
0150	3A	97 74 423		590)	2	Head restraint cover	Nackstödspåse	6
0160	4	97 75 016		590), LH	1	Seat cover	Sitspåse	6
0170	4A	97 74 951		590), RH	1	Seat cover	Sitspåse	6
0180	5	97 75 131		590), LH	1	Back cover	Ryggpåse	6
0190	5A	*97 75 073*		590), RH NLS	1	Back cover	Ryggpåse	6
0200	6	97 75 198		590)	1	Arm rest cover	Armstödspåse	6
0210				TRIM COLOUR C22				
0220	1	97 75 305		590,3)	2	Seat cover	Sitspåse	6
0230	2	97 75 362		590,3)	2	Back cover	Ryggpåse	6
0240	3	97 75 487		590,3)	2	Head restraint cover	Nackstödspåse	6
0250	3A	97 74 381		590,3)	2	Head restraint cover	Nackstödspåse	6
0260	4	97 75 032		590,3), LH	1	Seat cover	Sitspåse	6
0270	4A	97 74 977		590,3), RH	1	Seat cover	Sitspåse	6
0280	5	97 75 156		590,3), LH	1	Back cover	Ryggpåse	6
0290	5A	97 75 099		590,3), RH	1	Back cover	Ryggpåse	6
0300	6	97 75 214		590,3)	1	Arm rest cover	Armstödspåse	6
0310				TRIM COLOUR C23				
0320	1	97 75 313		560,3)	2	Seat cover	Sitspåse	6
0330	2	97 75 370		560,3)	2	Back cover	Ryggpåse	6
0340	3	97 75 495		560,3)	2	Head restraint cover	Nackstödspåse	6
0350	3A	97 74 399		560,3)	2	Head restraint cover	Nackstödspåse	6
0360	4	97 75 040		560,3), LH	1	Seat cover	Sitspåse	6
0370	4A	*97 74 985*		560,3), RH NLS	1	Seat cover	Sitspåse	6
0380	5	97 75 164		560,3), LH	1	Back cover	Ryggpåse	6
0390	5A	97 75 107		560,3), RH	1	Back cover	Ryggpåse	6
0400	6	*97 75 222*		560,3) NLS	1	Arm rest cover	Armstödspåse	6
0410				TRIM COLOUR C24				
0420	1	97 75 297		580)	2	Seat cover	Sitspåse	6
0430	2	97 75 354		580)	2	Back cover	Ryggpåse	6
0440	3	97 75 479		580)	2	Head restraint cover	Nackstödspåse	6
0450	3A	*97 74 431*		580) NLS	2	Head restraint cover	Nackstödspåse	6
0460	4	*97 75 024*		580), LH NLS	1	Seat cover	Sitspåse	6
0470	4A	97 74 969		580), RH	1	Seat cover	Sitspåse	6
0480	5	*97 75 149*		580), LH NLS	1	Back cover	Ryggpåse	6
0490	5A	*97 75 081*		580), RH NLS	1	Back cover	Ryggpåse	6
0500	6	*97 75 206*		580) NLS	1	Arm rest cover	Armstödspåse	6
0510								
0520		*98 27 254*		590) NLS	X	Cloth	Tyg	6
0530		*97 40 838*		560) NLS	X	Cloth	Tyg	6
0540		98 27 262		580)	X	Cloth	Tyg	6
0550								
0560		97 41 018		590)	X	Coated fabric	Vävplast	6
0570		97 41 489		560)	X	Coated fabric	Vävplast	6
0580		98 34 458		580)	X	Coated fabric	Vävplast	6
0590								


3. For cars with leather covers. För bilar med läderklädsel.
560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

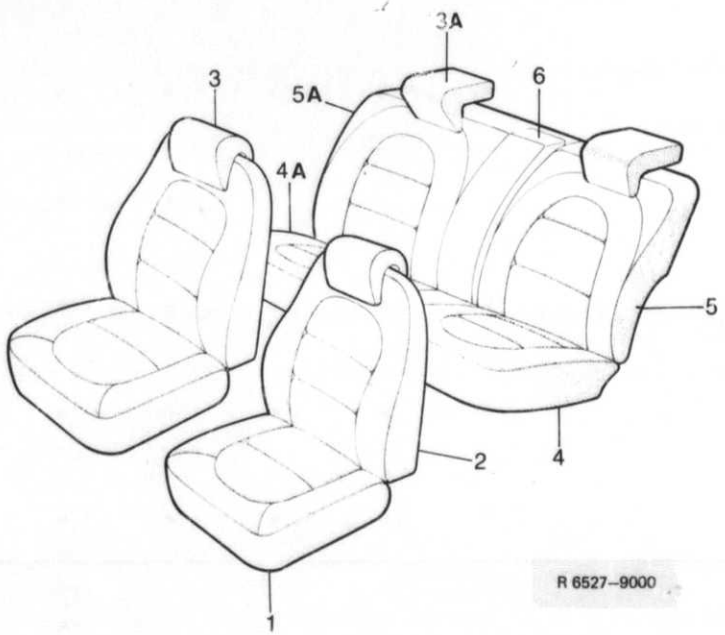

R 6527–9000

1280

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	*97 08 561*		590) NLS	X	Piping	Kederlist	6
0610	*73 77 344*		560) NLS	X	Piping	Kederlist	6
0620	*97 41 042*		580) NLS	X	Piping	Kederlist	6

560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-B22

Covers 1986
Contour design

Klädsel

Klädselpåsar 1986
Contour design

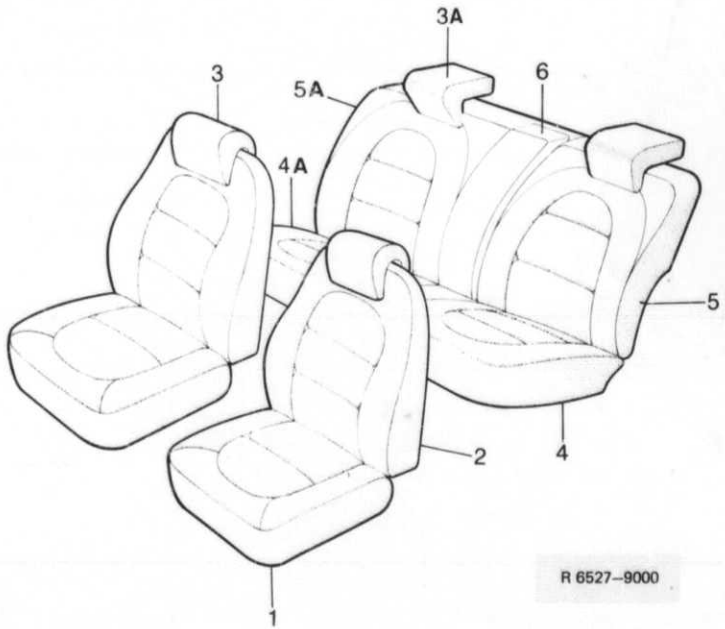

R 6527–9000

1285	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A13				
0020	1	98 92 779		590)	2	Seat cover	Sitspåse	
0030	2	98 92 837		590)	2	Back cover	Ryggpåse	
0050	3	98 92 951		590)	2	Head restraint cover	Nackstödspåse	6
0080	3A	96 54 906		590)	2	Head restraint cover	Nackstödspåse	6
0110	4	98 98 255		590), LH	1	Seat cover	Sitspåse	
0130	4A	98 98 198		590), RH	1	Seat cover	Sitspåse	
0150	5	*98 98 131*		590), LH NLS	1	Back cover	Ryggpåse	
0170	5A	*98 98 073*		590), RH NLS	1	Back cover	Ryggpåse	
0190	6	*98 98 313*		590) NLS	1	Arm rest cover	Armstödspåse	6
0210				TRIM COLOUR A23				
0230	1	97 75 289		590)	2	Seat cover	Sitspåse	6
0250	2	97 75 347		590)	2	Back cover	Ryggpåse	6
0270	3	97 75 461		590)	2	Head restraint cover	Nackstödspåse	6
0300	3A	97 74 423		590)	2	Head restraint cover	Nackstödspåse	6
0330	4	97 75 016		590), LH	1	Seat cover	Sitspåse	6
0350	4A	97 74 951		590), RH	1	Seat cover	Sitspåse	6
0370	5	97 75 131		590), LH	1	Back cover	Ryggpåse	6
0390	5A	*97 75 073*		590), RH NLS	1	Back cover	Ryggpåse	6
0410	6	97 75 198		590)	1	Arm rest cover	Armstödspåse	6
0430				TRIM COLOUR A33				
0450	1	97 75 305		590)	2	Seat cover	Sitspåse	6
0470	2	97 75 362		590)	2	Back cover	Ryggpåse	6
0490	3	97 75 487		590)	2	Head restraint cover	Nackstödspåse	6
0520	3A	97 74 381		590)	2	Head restraint cover	Nackstödspåse	6
0550	4	97 75 032		590), LH	1	Seat cover	Sitspåse	6
0580	4A	97 74 977		590), RH	1	Seat cover	Sitspåse	6
0610	5	97 75 156		590), LH	1	Back cover	Ryggpåse	6
0640	5A	97 75 099		590), RH	1	Back cover	Ryggpåse	6
0670	6	97 75 214		590)	1	Arm rest cover	Armstödspåse	6
1140				TRIM COLOUR C13				
1150	1	98 92 761		560)	2	Seat cover	Sitspåse	
1170	2	98 92 829		560)	2	Back cover	Ryggpåse	
1190	3	98 92 944		560)	2	Head restraint cover	Nackstödspåse	6
1220	3A	96 54 898		560)	2	Head restraint cover	Nackstödspåse	6
1250	4	*98 98 248*		560), LH NLS	1	Seat cover	Sitspåse	
1270	4A	*98 98 180*		560), RH NLS	1	Seat cover	Sitspåse	
1290	5	*98 98 123*		560), LH NLS	1	Back cover	Ryggpåse	
1310	5A	*98 98 065*		560), RH NLS	1	Back cover	Ryggpåse	
1330	6	*98 98 305*		560) NLS	1	Arm rest cover	Armstödspåse	6
1350				TRIM COLOUR C23				
1370	1	97 75 271		560)	2	Seat cover	Sitspåse	6
1390	2	97 75 339		560)	2	Back cover	Ryggpåse	6
1410	3	97 75 453		560)	2	Head restraint cover	Nackstödspåse	6
1440	3A	97 74 415		560)	2	Head restraint cover	Nackstödspåse	6
1470	4	97 75 008		560), LH	1	Seat cover	Sitspåse	6
1490	4A	97 74 944		560), RH	1	Seat cover	Sitspåse	6
1510	5	97 75 123		560), LH	1	Back cover	Ryggpåse	6
1530	5A	97 75 065		560), RH	1	Back cover	Ryggpåse	6
1550	6	97 75 180		560)	1	Arm rest cover	Armstödspåse	6
1570				TRIM COLOUR C33				
1590	1	97 75 313		560)	2	Seat cover	Sitspåse	6
1610	2	97 75 370		560)	2	Back cover	Ryggpåse	6
1630	3	97 75 495		560)	2	Head restraint cover	Nackstödspåse	6
1660	3A	97 74 399		560)	2	Head restraint cover	Nackstödspåse	6
1690	4	97 75 040		560), LH	1	Seat cover	Sitspåse	6
1720	4A	*97 74 985*		560), RH NLS	1	Seat cover	Sitspåse	6
1750	5	97 75 164		560), LH	1	Back cover	Ryggpåse	6
1780	5A	97 75 107		560), RH	1	Back cover	Ryggpåse	6
1810	6	*97 75 222*		560) NLS	1	Arm rest cover	Armstödspåse	6
1820								

560. Red Röd
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-B24

Covers 1986
Contour design

Klädsel

Klädselpåsar 1986
Contour design

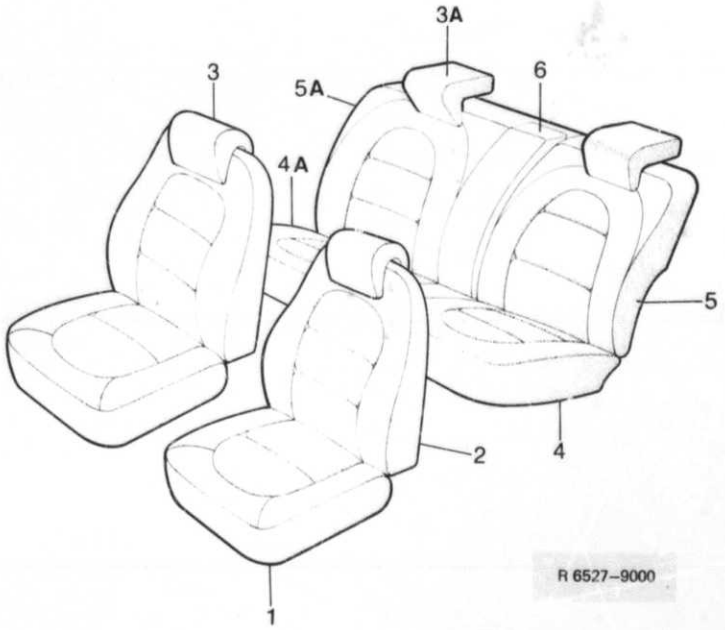

R 6527–9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR D13				
1	98 92 787		580)	2	Seat cover	Sitspåse	6
2	98 92 845		580)	2	Back cover	Ryggpåse	
3	98 92 969		580)	2	Head restraint cover	Nackstödspåse	6
3A	96 54 914		580)	2	Head restraint cover	Nackstödspåse	6
4	*98 98 263*		580), LH NLS	1	Seat cover	Sitspåse	
4A	98 98 206		580), RH	1	Seat cover	Sitspåse	
5	*98 98 149*		580), LH NLS	1	Back cover	Ryggpåse	
5A	*98 98 081*		580), RH NLS	1	Back cover	Ryggpåse	
6	*98 98 321*		580) NLS	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR D23				
1	97 75 297		580)	2	Seat cover	Sitspåse	6
2	97 75 354		580)	2	Back cover	Ryggpåse	6
3	97 75 479		580)	2	Head restraint cover	Nackstödspåse	6
3A	*97 74 431*		580) NLS	2	Head restraint cover	Nackstödspåse	6
4	*97 75 024*		580), LH NLS	1	Seat cover	Sitspåse	6
4A	97 74 969		580), RH	1	Seat cover	Sitspåse	6
5	*97 75 149*		580), LH NLS	1	Back cover	Ryggpåse	6
5A	*97 75 081*		580), RH NLS	1	Back cover	Ryggpåse	6
6	*97 75 206*		580) NLS	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR E13				
1	98 92 795		570)	2	Seat cover	Sitspåse	
2	98 92 852		570)	2	Back cover	Ryggpåse	
3	98 92 977		570)	2	Head restraint cover	Nackstödspåse	6
3A	96 54 922		570)	2	Head restraint cover	Nackstödspåse	6
4	98 98 271		570), LH	1	Seat cover	Sitspåse	
4A	98 98 214		570), RH	1	Seat cover	Sitspåse	
5	98 98 156		570), LH	1	Back cover	Ryggpåse	
5A	*98 98 099*		570), RH NLS	1	Back cover	Ryggpåse	
6	98 98 339		570)	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR E23				
1	98 95 079		570)	2	Seat cover	Sitspåse	6
2	98 95 095		570)	2	Back cover	Ryggpåse	6
3	98 95 137		570)	2	Head restraint cover	Nackstödspåse	6
3A	96 54 856		570)	2	Head restraint cover	Nackstödspåse	6
4	96 53 676		570), LH	1	Seat cover	Sitspåse	6
4A	96 53 650		570), RH	1	Seat cover	Sitspåse	6
5	96 53 635		570), LH	1	Back cover	Ryggpåse	6
5A	96 53 692		570), RH	1	Back cover	Ryggpåse	6
6	96 53 718		570)	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR E33				
1	98 90 203		570)	2	Seat cover	Sitspåse	6
2	98 90 211		570)	2	Back cover	Ryggpåse	6
3	*98 90 229*		570) NLS	2	Head restraint cover	Nackstödspåse	6
3A	96 54 864		570)	2	Head restraint cover	Nackstödspåse	6
4	98 90 690		570), LH	1	Seat cover	Sitspåse	6
4A	98 90 682		570), RH	1	Seat cover	Sitspåse	6
5	98 90 716		570), LH	1	Back cover	Ryggpåse	6
5A	98 90 708		570), RH	1	Back cover	Ryggpåse	6
6	98 90 724		570)	1	Arm rest cover	Armstödspåse	6
	98 27 254		590) NLS	X	Cloth	Tyg	6
	98 51 262		600)	X	Cloth	Tyg	6
	97 40 838		560) NLS	X	Cloth	Tyg	6
	98 63 291		580)	X	Cloth	Tyg	6
	98 51 031		570)	X	Cloth	Tyg	6
	97 41 018		590)	X	Coated fabric	Vävplast	6

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-C02

Covers 1986
Contour design

Klädselpåsar 1986
Contour design

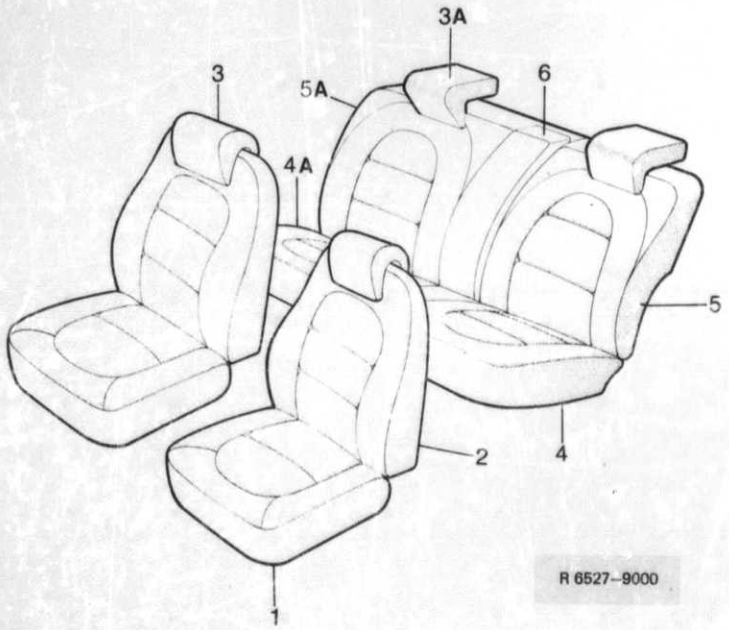

1285 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
3025	98 57 475		600)	X	Coated fabric	Vävplast	6
3030	97 41 489		560)	X	Coated fabric	Vävplast	6
3040	98 34 458		580)	X	Coated fabric	Vävplast	6
3050	*98 51 098*		570) NLS	X	Coated fabric	Vävplast	6
3060							
3070	*97 08 561*		590) NLS	X	Piping	Kederlist	6
3080	*98 57 624*		600) NLS	X	Piping	Kederlist	6
3090	*73 77 344*		560) NLS	X	Piping	Kederlist	6
3110	*97 41 042*		580) NLS	X	Piping	Kederlist	6
3130	98 51 429		570)	X	Piping	Kederlist	6

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-C04

Covers 1987
Block pattern

Klädsel

Klädselpåsar 1987
Blockmönster

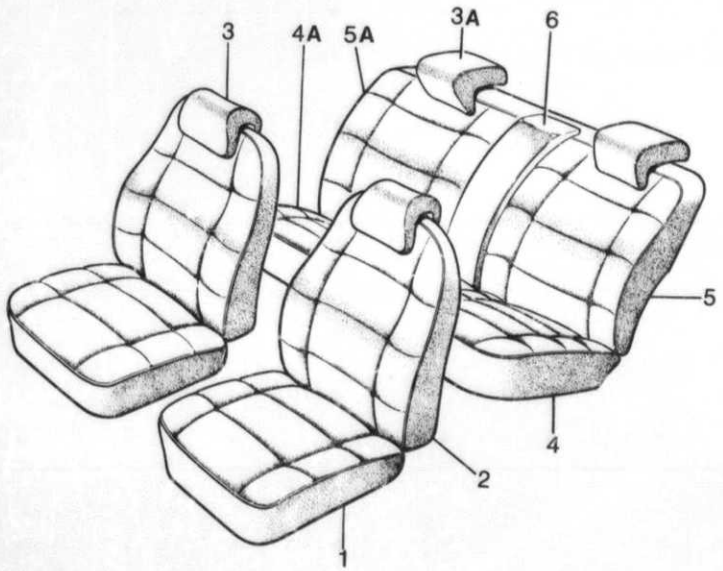

R 8307–9000

1290	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A12				
0020	1	96 65 290		590)	2	Seat cover	Sitspåse	6
0030	2	96 65 530		590)	2	Back cover	Ryggpåse	6
0050	3	98 92 951		590)	2	Head restraint cover	Nackstödspåse	6
0080	3A	96 54 906		590)	2	Head restraint cover	Nackstödspåse	6
0110	4	96 66 090		590), LH	1	Seat cover	Sitspåse	6
0130	4A	96 66 736		590), RH	1	Seat cover	Sitspåse	6
0150	5	96 67 049		590), LH	1	Back cover	Ryggpåse	6
0170	5A	96 67 106		590), RH	1	Back cover	Ryggpåse	6
0190	6	*98 98 313*		590) NLS	1	Arm rest cover	Armstödspåse	6
0200				TRIM COLOUR B12				
0220	1	96 65 274		600)	2	Seat cover	Sitspåse	6
0240	2	96 65 514		600)	2	Back cover	Ryggpåse	6
0260	3	98 92 936		600)	2	Head restraint cover	Nackstödspåse	6
0290	3A	96 54 880		600)	2	Head restraint cover	Nackstödspåse	6
0320	4	96 66 074		600), LH	1	Seat cover	Sitspåse	6
0340	4A	96 66 710		600), RH	1	Seat cover	Sitspåse	6
0360	5	96 67 023		600), LH	1	Back cover	Ryggpåse	6
0380	5A	96 67 080		600), RH	1	Back cover	Ryggpåse	6
0400	6	98 98 297		600)	1	Arm rest cover	Armstödspåse	6
0410				TRIM COLOUR C12				
0430	1	96 65 282		560)	2	Seat cover	Sitspåse	6
0450	2	96 65 522		560)	2	Back cover	Ryggpåse	6
0470	3	98 92 944		560)	2	Head restraint cover	Nackstödspåse	6
0500	3A	96 54 898		560)	2	Head restraint cover	Nackstödspåse	6
0530	4	96 66 082		560), LH	1	Seat cover	Sitspåse	6
0550	4A	96 66 728		560), RH	1	Seat cover	Sitspåse	6
0570	5	96 67 031		560), LH	1	Back cover	Ryggpåse	6
0590	5A	96 67 098		560), RH	1	Back cover	Ryggpåse	6
0610	6	*98 98 305*		560) NLS	1	Arm rest cover	Armstödspåse	6
0620				TRIM COLOUR D12				
0640	1	96 65 308		580)	2	Seat cover	Sitspåse	6
0660	2	96 65 548		580)	2	Back cover	Ryggpåse	6
0680	3	96 67 866		580)	2	Head restraint cover	Nackstödspåse	6
0710	3A	96 68 013		580)	2	Head restraint cover	Nackstödspåse	6
0740	4	96 66 108		580), LH	1	Seat cover	Sitspåse	6
0760	4A	96 66 744		580), RH	1	Seat cover	Sitspåse	6
0780	5	96 67 056		580), LH	1	Back cover	Ryggpåse	6
0800	5A	96 67 114		580), RH	1	Back cover	Ryggpåse	6
0820	6	96 67 940		580)	1	Arm rest cover	Armstödspåse	6
0830				TRIM COLOUR E12				
0850	1	96 65 316		570)	2	Seat cover	Sitspåse	6
0870	2	96 65 555		570)	2	Back cover	Ryggpåse	6
0890	3	98 92 977		570)	2	Head restraint cover	Nackstödspåse	6
0920	3A	96 54 922		570)	2	Head restraint cover	Nackstödspåse	6
0950	4	96 66 116		570), LH	1	Seat cover	Sitspåse	6
0970	4A	96 66 751		570), RH	1	Seat cover	Sitspåse	6
0990	5	96 67 064		570), LH	1	Back cover	Ryggpåse	6
1010	5A	96 67 122		570), RH	1	Back cover	Ryggpåse	6
1030	6	98 98 339		570)	1	Arm rest cover	Armstödspåse	6
1050								
1070		98 34 342		590), TRIM COLOUR A12	X	Cloth	Tyg	6
1075		*98 27 254*		590), TRIM COLOUR A23 NLS	X	Cloth	Tyg	6
1080	•	*98 34 318*		600), TRIM COLOUR B12 NLS	X	Cloth	Tyg	6
1085		98 51 262		600), TRIM COLOUR B23	X	Cloth	Tyg	6
1090		98 50 900		560), TRIM COLOUR C12	X	Cloth	Tyg	6

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B03
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-C06

Covers 1987
Block pattern

Klädsel

Klädselpåsar 1987
Blockmönster

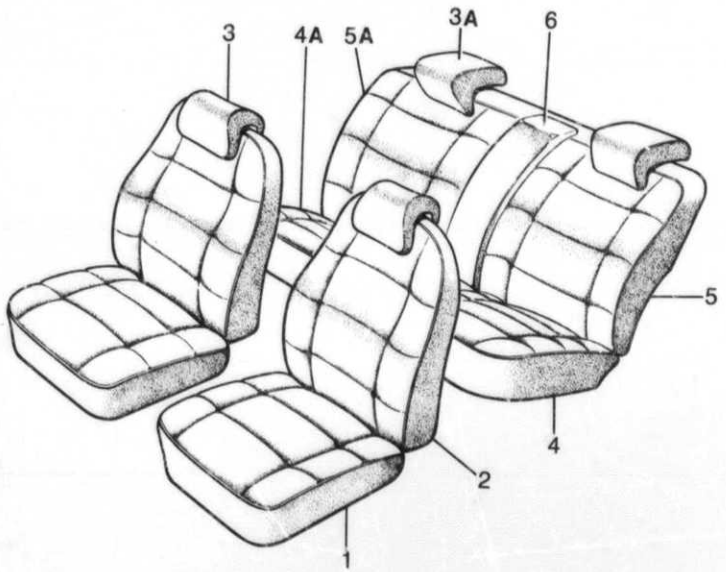

R 8307–9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1095	*97 40 838*		560), TRIM COLOUR C23	X	Cloth	Tyg	6
1095			NLS				
1100	98 63 291		580), TRIM COLOUR D12	X	Cloth	Tyg	6
1105	98 27 262		580), TRIM COLOUR D23	X	Cloth	Tyg	6
1110	98 78 158		570), TRIM COLOUR E12	X	Cloth	Tyg	6
1115	98 51 031		570), TRIM COLOUR E23	X	Cloth	Tyg	6
1120							
1130	97 41 018		590)	X	Coated fabric	Vävplast	6
1140	98 57 475		600)	X	Coated fabric	Vävplast	6
1150	97 41 489		560)	X	Coated fabric	Vävplast	6
1160	98 34 458		580)	X	Coated fabric	Vävplast	6
1170	*98 51 098*		570) NLS	X	Coated fabric	Vävplast	6
1180							
1190	97 28 676		590)	X	Piping	Kederlist	6
1210	98 63 515		600)	X	Piping	Kederlist	6
1230	98 07 975		560)	X	Piping	Kederlist	6
1250	96 92 732		580)	X	Piping	Kederlist	6
1270	98 51 411		570)	X	Piping	Kederlist	6


560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

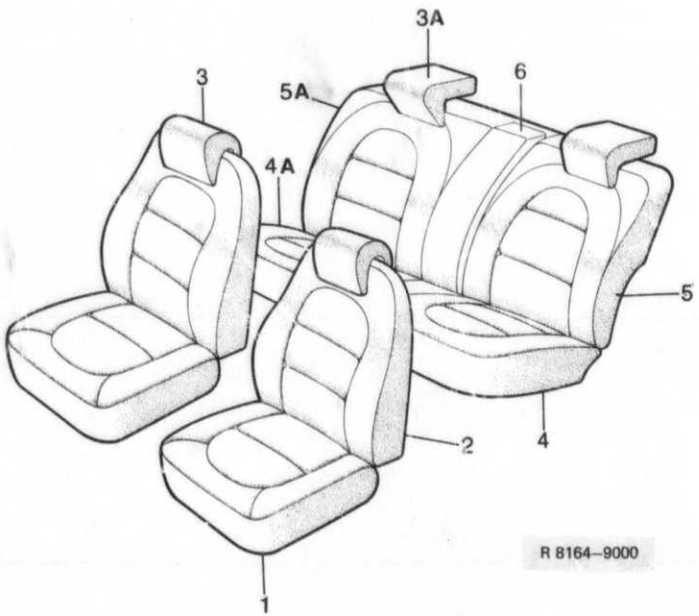

1295	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A23				
0020	1	97 75 289		590)	2	Seat cover	Sitspåse	6
0040	2	97 75 347		590)	2	Back cover	Ryggpåse	6
0060	3	97 75 461		590)	2	Head restraint cover	Nackstödspåse	6
0090	3A	97 74 423		590)	2	Head restraint cover	Nackstödspåse	6
0120	4	97 75 016		590), LH	1	Seat cover	Sitspåse	6
0140	4A	97 74 951		590), RH	1	Seat cover	Sitspåse	6
0160	5	97 75 131		590), LH	1	Back cover	Ryggpåse	6
0180	5A	*97 75 073*		590), RH NLS	1	Back cover	Ryggpåse	6
0200	6	97 75 198		590)	1	Arm rest cover	Armstödspåse	6
0210				TRIM COLOUR A33				
0230	1	97 75 305		590,112)	2	Seat cover	Sitspåse	6
0250	2	97 75 362		590,112)	2	Back cover	Ryggpåse	6
0270	3	97 75 487		590,112)	2	Head restraint cover	Nackstödspåse	6
0300	3A	97 74 381		590,112)	2	Head restraint cover	Nackstödspåse	6
0330	4	97 75 032		590,112), LH	1	Seat cover	Sitspåse	6
0350	4A	97 74 977		590,112), RH	1	Seat cover	Sitspåse	6
0370	5	97 75 156		590,112), LH	1	Back cover	Ryggpåse	6
0390	5A	97 75 099		590,112), RH	1	Back cover	Ryggpåse	6
0410	6	97 75 214		590,112)	1	Arm rest cover	Armstödspåse	6
0420				TRIM COLOUR A33				
0440	1	96 74 136		590,113)	2	Seat cover	Sitspåse	6
0460	2	96 74 144		590,113)	2	Back cover	Ryggpåse	6
0480	3	*96 74 151*		590,113) NLS	2	Head restraint cover	Nackstödspåse	6
0510	3A	*96 74 755*		590,113) NLS	2	Head restraint cover	Nackstödspåse	6
0540	4	96 74 391		590,113), LH	1	Seat cover	Sitspåse	6
0560	4A	96 74 383		590,113), RH	1	Seat cover	Sitspåse	6
0580	5	96 74 417		590,113), LH	1	Back cover	Ryggpåse	6
0600	5A	96 74 409		590,113), RH	1	Back cover	Ryggpåse	6
0620	6	96 74 425		590,113)	1	Arm rest cover	Armstödspåse	6
0630				TRIM COLOUR B23				
0650	1	98 95 061		600)	2	Seat cover	Sitspåse	6
0670	2	98 95 087		600)	2	Back cover	Ryggpåse	6
0690	3	98 95 129		600)	2	Head restraint cover	Nackstödspåse	6
0720	3A	96 54 849		600)	2	Head restraint cover	Nackstödspåse	6
0750	4	96 53 668		600), LH	1	Seat cover	Sitspåse	6
0770	4A	96 53 643		600), RH	1	Seat cover	Sitspåse	6
0790	5	96 53 627		600), LH	1	Back cover	Ryggpåse	6
0810	5A	96 53 684		600), RH	1	Back cover	Ryggpåse	6
0830	6	96 53 700		600)	1	Arm rest cover	Armstödspåse	6
0840				TRIM COLOUR B33				
0860	1	96 68 161		600)	2	Seat cover	Sitspåse	6
0880	2	96 68 179		600)	2	Back cover	Ryggpåse	6
0900	3	96 69 086		600)	2	Head restraint cover	Nackstödspåse	6
0930	3A	96 69 193		600)	2	Head restraint cover	Nackstödspåse	6
0960	4	96 68 559		600), LH	1	Seat cover	Sitspåse	6
0980	4A	96 68 542		600), RH	1	Seat cover	Sitspåse	6
1000	5	96 68 534		600), LH	1	Back cover	Ryggpåse	6
1020	5A	96 68 526		600), RH	1	Back cover	Ryggpåse	6
1040	6	96 68 997		600)	1	Arm rest cover	Armstödspåse	6
1060								


112. Ch. --H1001912, --H3000040
113. Ch. H1001913–, H8000041--
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

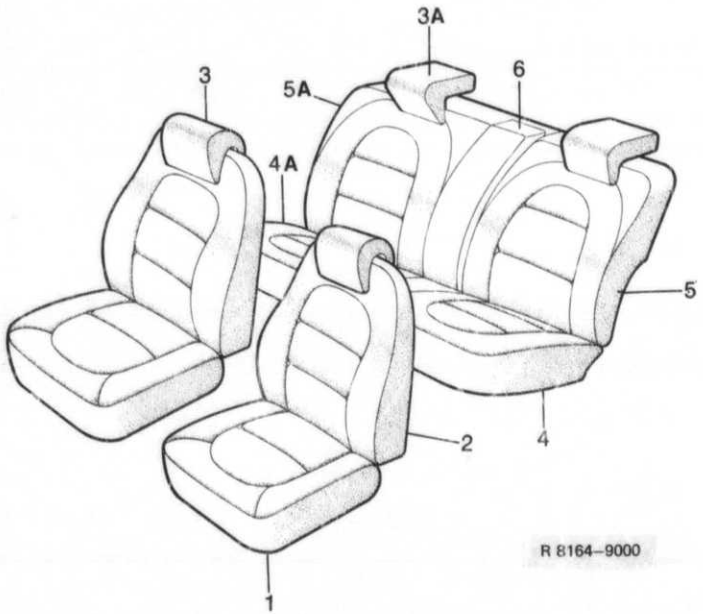

Upholstery

5-C10

Covers 1987
Contour design

Klädsel

Klädselpåsar 1987
Contour design

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR C23				
1	97 75 271		560)	2	Seat cover	Sitspåse	6
2	97 75 339		560)	2	Back cover	Ryggpåse	6
3	97 75 453		560)	2	Head restraint cover	Nackstödspåse	6
3A	97 74 415		560)	2	Head restraint cover	Nackstödspåse	6
4	97 75 008		560), LH	1	Seat cover	Sitspåse	6
4A	97 74 944		560), RH	1	Seat cover	Sitspåse	6
5	97 75 123		560), LH	1	Back cover	Ryggpåse	6
5A	97 75 065		560), RH	1	Back cover	Ryggpåse	6
6	97 75 180		560)	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR C33				
1	97 75 313		560)	2	Seat cover	Sitspåse	6
2	97 75 370		560)	2	Back cover	Ryggpåse	6
3	97 75 495		560)	2	Head restraint cover	Nackstödspåse	6
3A	97 74 399		560)	2	Head restraint cover	Nackstödspåse	6
4	97 75 040		560), LH	1	Seat cover	Sitspåse	6
4A	*97 74 985*		560), RH NLS	1	Seat cover	Sitspåse	6
5	97 75 164		560), LH	1	Back cover	Ryggpåse	6
5A	97 75 107		560), RH	1	Back cover	Ryggpåse	6
6	*97 75 222*		560) NLS	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR D23				
1	97 75 297		580)	2	Seat cover	Sitspåse	6
2	97 75 354		580)	2	Back cover	Ryggpåse	6
3	97 75 479		580)	2	Head restraint cover	Nackstödspåse	6
3A	*97 74 431*		580) NLS	2	Head restraint cover	Nackstödspåse	6
4	*97 75 024*		580), LH NLS	1	Seat cover	Sitspåse	6
4A	97 74 969		580), RH	1	Seat cover	Sitspåse	6
5	*97 75 149*		580), LH NLS	1	Back cover	Ryggpåse	6
5A	*97 75 081*		580), RH NLS	1	Back cover	Ryggpåse	6
6	*97 75 206*		580) NLS	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR E23				
1	98 95 079		570)	2	Seat cover	Sitspåse	6
2	98 95 095		570)	2	Back cover	Ryggpåse	6
3	98 95 137		570)	2	Head restraint cover	Nackstödspåse	6
3A	96 54 856		570)	2	Head restraint cover	Nackstödspåse	6
4	96 53 676		570), LH	1	Seat cover	Sitspåse	6
4A	96 53 650		570), RH	1	Seat cover	Sitspåse	6
5	96 53 635		570), LH	1	Back cover	Ryggpåse	6
5A	96 53 692		570), RH	1	Back cover	Ryggpåse	6
6	96 53 718		570)	1	Arm rest cover	Armstödspåse	6
			TRIM COLOUR E33				
1	98 90 203		570)	2	Seat cover	Sitspåse	6
2	98 90 211		570)	2	Back cover	Ryggpåse	6
3	*98 90 229*		570) NLS	2	Head restraint cover	Nackstödspåse	6
3A	96 54 864		570)	2	Head restraint cover	Nackstödspåse	6
4	98 90 690		570), LH	1	Seat cover	Sitspåse	6
4A	98 90 682		570), RH	1	Seat cover	Sitspåse	6
5	98 90 716		570), LH	1	Back cover	Ryggpåse	6
5A	98 90 708		570), RH	1	Back cover	Ryggpåse	6
6	98 90 724		570)	1	Arm rest cover	Armstödspåse	6

See page 8B-051, 5-C04

CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER

TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR

560. Red Röd
570. Grey Grå
580. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-C12

Covers 1988
Horizon pattern

Klädsel

Klädselpåsar 1988
Horisontmönster

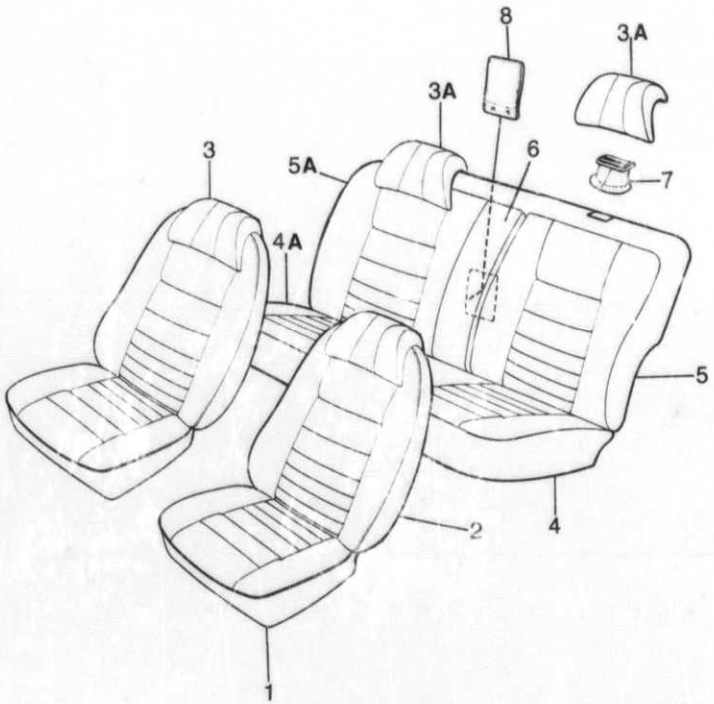

R 9794 - 9000

1297	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A14				
0020	1	96 96 246		590)	2	Seat cover	Sitspåse	6
0030	2	96 96 295		590)	2	Back cover	Ryggpåse	6
0040	3	98 92 951		590)	2	Head restraint cover	Nackstödspåse	6
0050	3A	96 54 906		590)	2	Head restraint cover	Nackstödspåse	6
0060	4	96 97 046		590), LH	1	Seat cover	Sitspåse	6
0070	4A	96 97 095		590), RH	1	Seat cover	Sitspåse	6
0080	5	96 97 145		590), LH	1	Back cover	Ryggpåse	6
0090	5A	96 97 194		590), RH	1	Back cover	Ryggpåse	6
0100	6	*98 98 313*		590) NLS	1	Arm rest cover	Armstödspåse	6
0110				TRIM COLOUR A24				
0120	1	96 96 186		590)	2	Seat cover	Sitspåse	6
0130	2	96 88 029		590)	2	Back cover	Ryggpåse	6
0140	3	97 75 461		590)	2	Head restraint cover	Nackstödspåse	6
0150	3A	97 74 423		590)	2	Head restraint cover	Nackstödspåse	6
0160	3A	*95 79 525*		590), 4D NLS - USE 9699562	2	Head restraint cover	Nackstödspåse	6
0170	4	96 97 277		590), LH	1	Seat cover	Sitspåse	6
0180	4	95 75 143		590), 4D	1	Seat cover	Sitspåse	6
0190	4A	96 97 327		590), RH	1	Seat cover	Sitspåse	6
0200	5	96 97 376		590), LH	1	Back cover	Ryggpåse	6
0210	5	95 75 192		590), 4D	1	Back cover	Ryggpåse	6
0220	5A	96 97 426		590), RH	1	Back cover	Ryggpåse	6
0230	6	97 75 198		590)	1	Arm rest cover	Armstödspåse	6
0240	7	95 79 632		590), 4D	2	Collar	Krage	6
0250	7	95 94 268		590,388,413), 4D	2	Collar	Krage	6
0260	8	95 78 725		590), 4D	1	Hatch	Lucka	6
0270				TRIM COLOUR B14				
0280	1	96 96 220		600)	2	Seat cover	Sitspåse	6
0290	2	96 96 279		600)	2	Back cover	Ryggpåse	6
0300	3	96 96 337		600)	2	Head restraint cover	Nackstödspåse	6
0310	3A	96 97 517		600)	2	Head restraint cover	Nackstödspåse	6
0320	4	96 97 020		600), LH	1	Seat cover	Sitspåse	6
0330	4A	96 97 079		600), RH	1	Seat cover	Sitspåse	6
0340	5	96 97 129		600), LH	1	Back cover	Ryggpåse	6
0350	5A	96 97 178		600), RH	1	Back cover	Ryggpåse	6
0360	6	96 97 236		600)	1	Arm rest cover	Armstödspåse	6
0370				TRIM COLOUR B24				
0380	1	96 96 170		600)	2	Seat cover	Sitspåse	6
0390	2	96 88 003		600)	2	Back cover	Ryggpåse	6
0400	3	98 95 129		600)	2	Head restraint cover	Nackstödspåse	6
0410	3A	96 54 849		600)	2	Head restraint cover	Nackstödspåse	6
0420	3A	*95 79 509*		600), 4D NLS - USE 9699570	2	Head restraint cover	Nackstödspåse	6
0430	4	96 97 251		600), LH	1	Seat cover	Sitspåse	6
0440	4	95 75 127		600), 4D	1	Seat cover	Sitspåse	6
0450	4A	96 97 301		600), RH	1	Seat cover	Sitspåse	6
0460	5	96 97 350		600), LH	1	Back cover	Ryggpåse	6
0470	5	95 75 176		600), 4D	1	Back cover	Ryggpåse	6
0480	5A	96 97 400		600), RH	1	Back cover	Ryggpåse	6
0490	6	96 53 700		600)	1	Arm rest cover	Armstödspåse	6
0500	7	95 79 616		600), 4D	2	Collar	Krage	6
0510	7	*95 94 243*		600,388,413), 4D NLS	2	Collar	Krage	6
0520	8	*95 78 709*		600), 4D NLS	1	Hatch	Lucka	6
0530								


388. Prepared for child restraint anchorages — Förbered för barnstolsinfästning
413. Ch J1030884--
590. Yellow — Gul
600. Brown — Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

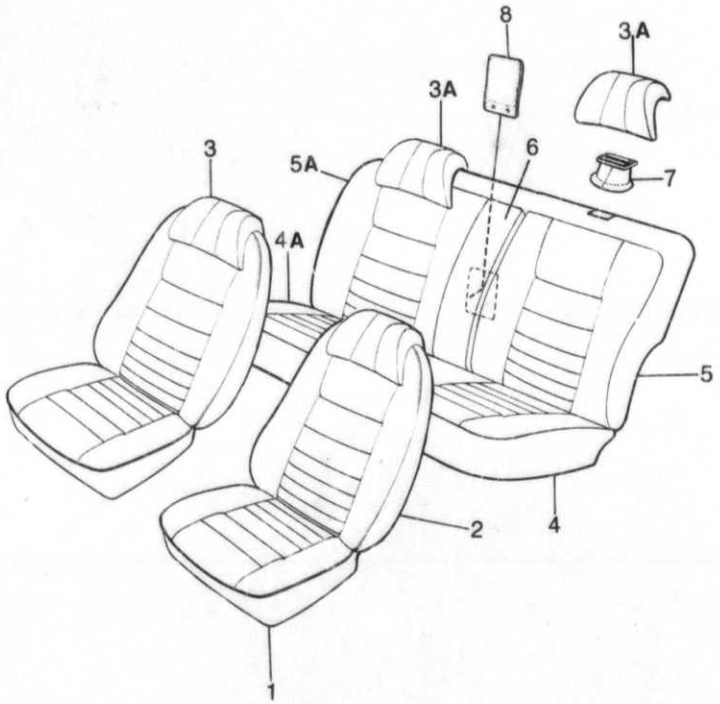

R 9794 - 9000

1297	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540				TRIM COLOUR C14				
0550	1	96 96 238		560)	2	Seat cover	Sitspåse	6
0560	2	96 96 287		560)	2	Back cover	Ryggpåse	6
0570	3	98 92 944		560)	2	Head restraint cover	Nackstödspåse	6
0580	3A	96 54 898		560)	2	Head restraint cover	Nackstödspåse	6
0590	4	96 97 038		560), LH	1	Seat cover	Sitspåse	6
0600	4A	96 97 087		560), RH	1	Seat cover	Sitspåse	6
0610	5	96 97 137		560), LH	1	Back cover	Ryggpåse	6
0620	5A	96 97 186		560), RH	1	Back cover	Ryggpåse	6
0630	6	*98 98 305*		560) NLS	1	Arm rest cover	Armstödspåse	6
0640				TRIM COLOUR C24				
0650	1	96 96 188		560)	2	Seat cover	Sitspåse	6
0660	2	96 88 011		560)	2	Back cover	Ryggpåse	6
0670	3	97 75 453		560)	2	Head restraint cover	Nackstödspåse	6
0680	3A	97 74 415		560)	2	Head restraint cover	Nackstödspåse	6
0690	3A	*95 79 517*		560), 4D NLS - USE 9699588	2	Head restraint cover	Nackstödspåse	6
0700	4	96 97 269		560), LH	1	Seat cover	Sitspåse	6
0710	4	95 75 135		560), 4D	1	Seat cover	Sitspåse	6
0720	4A	96 97 319		560), RH	1	Seat cover	Sitspåse	6
0730	5	96 97 368		560), LH	1	Back cover	Ryggpåse	6
0740	5	95 75 184		560), 4D	1	Back cover	Ryggpåse	6
0750	5A	96 97 418		560), RH	1	Back cover	Ryggpåse	6
0760	6	97 75 180		560)	1	Arm rest cover	Armstödspåse	6
0770	7	95 79 624		560), 4D	2	Collar	Krage	6
0780	7	95 94 250		560,388,413), 4D	2	Collar	Krage	6
0790	8	95 78 717		560), 4D	1	Hatch	Lucka	6
0800				TRIM COLOUR E14				
0810	1	96 96 261		570)	2	Seat cover	Sitspåse	6
0820	2	96 96 311		570)	2	Back cover	Ryggpåse	6
0830	3	98 92 977		570)	2	Head restraint cover	Nackstödspåse	6
0840	3A	96 54 922		570)	2	Head restraint cover	Nackstödspåse	6
0850	4	96 97 061		570), LH	1	Seat cover	Sitspåse	6
0860	4A	96 97 111		570), RH	1	Seat cover	Sitspåse	6
0870	5	96 97 160		570), LH	1	Back cover	Ryggpåse	6
0880	5A	96 97 210		570), RH	1	Back cover	Ryggpåse	6
0890	6	98 98 339		570)	1	Arm rest cover	Armstödspåse	6
0900				TRIM COLOUR E24				
0910	1	96 96 212		570)	2	Seat cover	Sitspåse	6
0920	2	96 88 045		570)	2	Back cover	Ryggpåse	6
0930	3	98 95 137		570)	2	Head restraint cover	Nackstödspåse	6
0940	3A	96 54 856		570)	2	Head restraint cover	Nackstödspåse	6
0950	3A	*95 79 533*		570), 4D NLS - USE 9699596	2	Head restraint cover	Nackstödspåse	6
0960	4	96 97 293		570), LH	1	Seat cover	Sitspåse	6
0970	4	95 75 168		570), 4D	1	Seat cover	Sitspåse	6
0980	4A	96 97 343		570), RH	1	Seat cover	Sitspåse	6
0990	5	96 97 392		570), LH	1	Back cover	Ryggpåse	6
1000	5	95 75 218		570), 4D	1	Back cover	Ryggpåse	6
1010	5A	96 97 442		570), RH	1	Back cover	Ryggpåse	6
1020	6	96 53 718		570)	1	Arm rest cover	Armstödspåse	6
1030	7	95 79 640		570), 4D	2	Collar	Krage	6
1040	7	95 94 276		570,388,413), 4D	2	Collar	Krage	6
1050	8	95 78 741		570), 4D	1	Hatch	Lucka	6
1060								


388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
413. Ch J1030884--
560. Red Röd
570. Grey Grå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

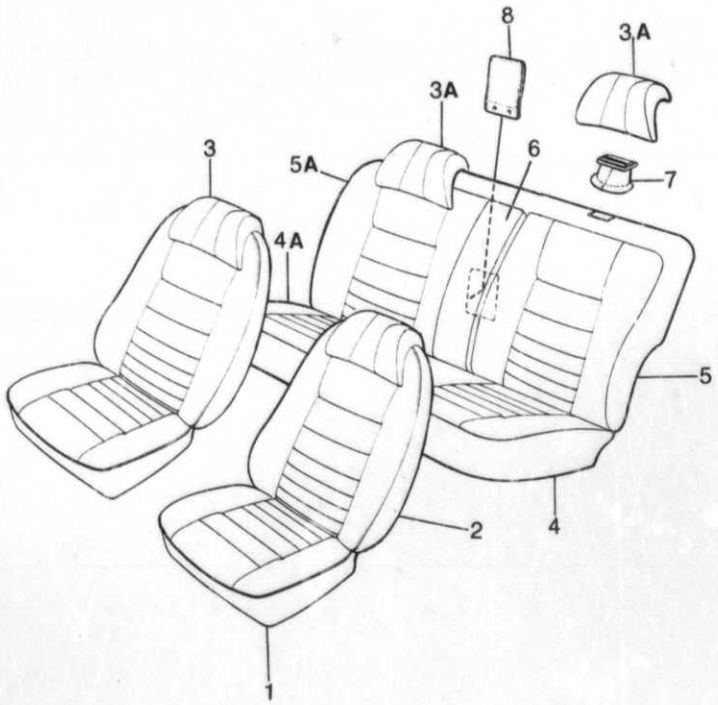

R 9794 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR F14				
1	96 96 253		580)	2	Seat cover	Sitspåse	6
2	96 96 303		580)	2	Back cover	Ryggpåse	6
3	96 96 329		580)	2	Head restraint cover	Nackstödspåse	6
3A	96 96 477		580)	2	Head restraint cover	Nackstödspåse	6
4	96 97 053		580), LH	1	Seat cover	Sitspåse	6
4A	96 97 103		580), RH	1	Seat cover	Sitspåse	6
5	96 97 152		580), LH	1	Back cover	Ryggpåse	6
5A	96 97 202		580), RH	1	Back cover	Ryggpåse	6
6	96 97 228		580)	1	Upholstery	Klädsel	6
			TRIM COLOUR F24				
1	96 96 204		580)	2	Seat cover	Sitspåse	6
2	96 88 037		580)	2	Back cover	Ryggpåse	6
3	96 95 214		580)	2	Head restraint cover	Nackstödspåse	6
3A	96 96 493		580)	2	Head restraint cover	Nackstödspåse	6
3A	*95 79 541*		580), 4D NLS - USE 9699604	2	Head restraint cover	Nackstödspåse	6
4	96 97 285		580), LH	1	Seat cover	Sitspåse	6
4	95 75 150		580), 4D	1	Seat cover	Sitspåse	6
4A	96 97 335		580), RH	1	Seat cover	Sitspåse	6
5	96 97 384		580), LH	1	Back cover	Ryggpåse	6
5	95 75 200		580), 4D	1	Back cover	Ryggpåse	6
5A	96 97 434		580), RH	1	Back cover	Ryggpåse	6
6	96 97 244		580)	1	Arm rest cover	Armstödspåse	6
7	95 79 657		580), 4D	2	Collar	Krage	6
7	95 94 284		580,388,413), 4D	2	Collar	Krage	6
8	95 78 733		580), 4D	1	Hatch	Lucka	6
	98 34 342		590,394) TRIM COLOUR A14	X	Cloth	Tyg	6
	98 34 334		590,395) TRIM COLOUR A14	X	Cloth	Tyg	6
	98 27 254		590,394) TRIM COLOUR A24 NLS	X	Cloth	Tyg	6
	97 40 853		590,395) TRIM COLOUR A24	X	Cloth	Tyg	6
	96 18 042		600,394) TRIM COLOUR B14	X	Cloth	Tyg	6
	96 18 034		600,395) TRIM COLOUR B14	X	Cloth	Tyg	6
	98 51 262		600,394) TRIM COLOUR B24	X	Cloth	Tyg	6
	98 51 270		600,395) TRIM COLOUR B24	X	Cloth	Tyg	6
	98 50 900		560,394) TRIM COLOUR C14	X	Cloth	Tyg	6
	98 50 892		560,395) TRIM COLOUR C14	X	Cloth	Tyg	6
	97 40 838		560,394) TRIM COLOUR C24 NLS	X	Cloth	Tyg	6
	98 27 247		560,395) TRIM COLOUR C24	X	Cloth	Tyg	6
	98 78 158		570,394) TRIM COLOUR E14	X	Cloth	Tyg	6
	98 78 141		570,395) TRIM COLOUR E14	X	Cloth	Tyg	6
	98 51 031		570,394) TRIM COLOUR E24	X	Cloth	Tyg	6
	98 51 049		570,395) TRIM COLOUR E24	X	Cloth	Tyg	6


388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
394. Thickness = 3 MM Tjocklek = 3 MM
395. Thickness = 10 MM Tjocklek = 10 MM
413. Ch J1030884--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

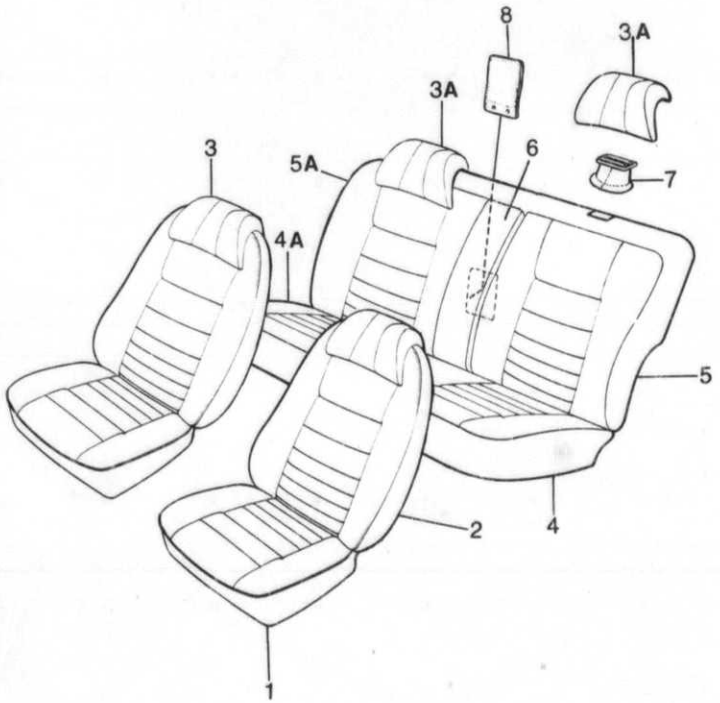

R 9794 - 9000

1297	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1580		*98 78 273*		580,394) TRIM COLOUR F14 NLS	X	Cloth	Tyg	6
1590		98 78 265		580,395) TRIM COLOUR F14	X	Cloth	Tyg	6
1610		98 78 307		580,394) TRIM COLOUR F24	X	Cloth	Tyg	6
1620		98 78 315		580,395) TRIM COLOUR F24	X	Cloth	Tyg	6
1640		97 41 018		590)	X	Coated fabric	Vävplast	6
1650		98 57 475		600)	X	Coated fabric	Vävplast	6
1660		97 41 489		560)	X	Coated fabric	Vävplast	6
1670		*98 51 098*		570) NLS	X	Coated fabric	Vävplast	6
1680		98 79 909		580)	X	Coated fabric	Vävplast	6
1700		*97 08 561*		590) NLS	X	Piping	Kederlist	6
1710		*98 57 624*		600) NLS	X	Piping	Kederlist	6
1720		98 07 975		560)	X	Piping	Kederlist	6
1730		96 51 429		570)	X	Piping	Kederlist	6
1740		96 95 172		580) (9878851)	X	Piping	Kederlist	6


394. Thickness = 3 MM Tjocklek = 3 MM
395. Thickness = 10 MM Tjocklek = 10 MM
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8B GROUP INDEX

Instrument panel	**5-A06**
Upholstery	**5-B08**
Other interior equipment	**5-H04**
Complete sets:	**5-K06**

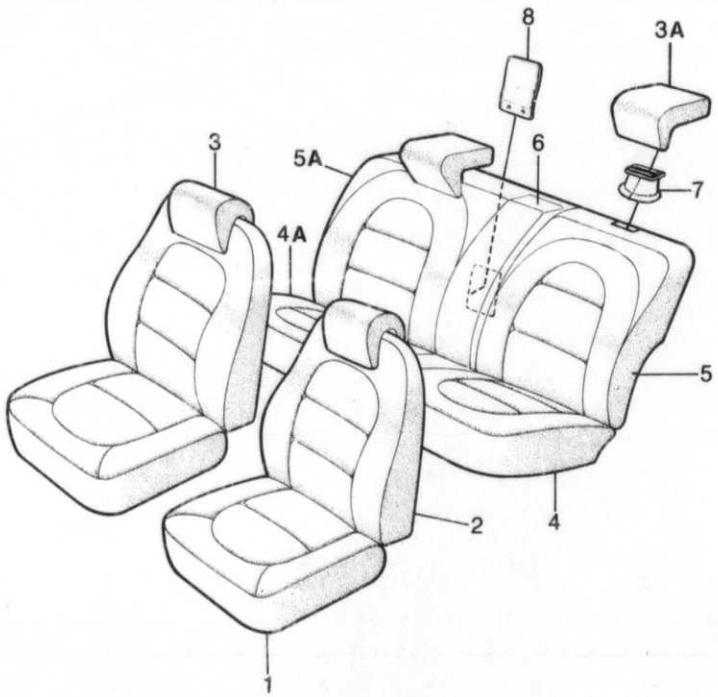

R 9795 - 9000

Upholstery

5-C20

Covers 1988
Contour design

Klädsel

Klädselpåsar 1988
Contour design

1299	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A33				
0020	1	96 74 136		590)	2	Seat cover	Sitspåse	6
0030	2	96 74 144		590,356)	2	Back cover	Ryggpåse	6
0040	2	95 94 946		590,357)	2	Back cover	Ryggpåse	6
0050	3	95 78 501		590)	2	Head restraint cover	Nackstödspåse	6
0060	3A	95 78 535		590)	2	Head restraint cover	Nackstödspåse	6
0070	3A	*95 79 558*		590), 4D NLS - USE	2	Head restraint cover	Nackstödspåse	6
0070				9699513				
0080	4	96 74 391		590), LH	1	Seat cover	Sitspåse	6
0090	4	95 76 075		590), 4D	1	Seat cover	Sitspåse	6
0100	4A	96 74 383		590), RH	1	Seat cover	Sitspåse	6
0110	5	95 74 417		590), LH	1	Back cover	Ryggpåse	6
0120	5	95 76 133		590), 4D	1	Back cover	Ryggpåse	6
0130	5A	96 74 409		590), RH	1	Back cover	Ryggpåse	6
0140	6	96 74 425		590)	1	Arm rest cover	Armstödspåse	6
0150	7	95 79 632		590), 4D	2	Collar	Krage	6
0160	7	95 94 268		590,388,413), 4D	2	Collar	Krage	6
0170	8	95 78 725		590), 4D	1	Hatch	Lucka	6
0180				TRIM COLOUR B33				
0190	1	96 68 161		600)	2	Seat cover	Sitspåse	6
0200	2	96 68 179		600,356)	2	Back cover	Ryggpåse	6
0210	2	95 94 979		600,357)	2	Back cover	Ryggpåse	6
0220	3	95 78 527		600)	2	Head restraint cover	Nackstödspåse	6
0230	3A	95 78 550		600)	2	Head restraint cover	Nackstödspåse	6
0240	3A	*95 79 582*		600), 4D NLS - USE	2	Head restraint cover	Nackstödspåse	6
0240				9699521				
0250	4	96 68 559		600), LH	1	Seat cover	Sitspåse	6
0260	4	95 76 109		600), 4D	1	Seat cover	Sitspåse	6
0270	4A	96 68 542		600), RH	1	Seat cover	Sitspåse	6
0280	5	96 68 534		600), LH	1	Back cover	Ryggpåse	6
0290	5	95 76 166		600), 4D	1	Back cover	Ryggpåse	6
0300	5A	96 68 526		600), RH	1	Back cover	Ryggpåse	6
0310	6	96 68 997		600)	1	Arm rest cover	Armstödspåse	6
0320	7	95 79 616		600), 4D	2	Collar	Krage	6
0330	7	*95 94 243*		600,388,413), 4D NLS	2	Collar	Krage	6
0340	8	*95 78 709*		600), 4D NLS	1	Hatch	Lucka	6
0350				TRIM COLOUR C33				
0360	1	95 72 959		560)	2	Seat cover	Sitspåse	6
0370	2	95 72 967		560,356)	2	Back cover	Ryggpåse	6
0380	2	95 94 953		560,357)	2	Back cover	Ryggpåse	6
0390	3	95 72 975		560)	2	Head restraint cover	Nackstödspåse	6
0400	3A	95 73 205		560)	2	Head restraint cover	Nackstödspåse	6
0410	3A	*95 79 566*		560), 4D NLS - USE	2	Head restraint cover	Nackstödspåse	6
0410				9699539				
0420	4	95 73 304		560), LH	1	Seat cover	Sitspåse	6
0430	4	95 76 083		560), 4D	1	Seat cover	Sitspåse	6
0440	4A	95 73 296		560), RH	1	Seat cover	Sitspåse	6
0450	5	95 73 320		560), LH	1	Back cover	Ryggpåse	6
0460	5	95 76 141		560), 4D	1	Back cover	Ryggpåse	6
0470	5A	95 73 312		560), RH	1	Back cover	Ryggpåse	6
0480	6	95 73 338		560)	1	Arm rest cover	Armstödspåse	6
0490	7	95 79 624		560), 4D	2	Collar	Krage	6
0500	7	95 94 250		560,388,413), 4D	2	Collar	Krage	6
0510	8	95 78 717		560), 4D	1	Hatch	Lucka	6
0520								


356. Ch --J1016350, --J2008912, --J8001034
357. Ch J1016351--, J2008913--, J8001035--
388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
413. Ch J1030884--
560. Red Röd
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

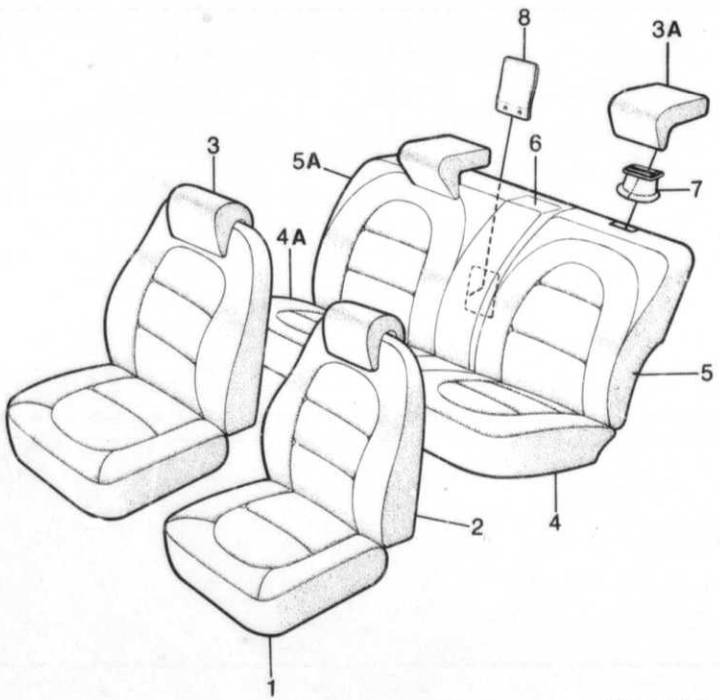

R 9795 - 9000

1299	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530				TRIM COLOUR E33				
0540	1	98 90 203		570)	2	Seat cover	Sitspåse	6
0550	2	98 90 211		570,356)	2	Back cover	Ryggpåse	6
0560	2	95 94 961		570,357)	2	Back cover	Ryggpåse	6
0570	3	95 78 519		570)	2	Head restraint cover	Nackstödspåse	6
0580	3A	95 78 543		570)	2	Head restraint cover	Nackstödspåse	6
0590	3A	*95 79 574*		570), 4D NLS - USE 9699547	2	Head restraint cover	Nackstödspåse	6
0600	4	98 90 690		570), LH	1	Seat cover	Sitspåse	6
0610	4	95 76 091		570), 4D	1	Seat cover	Sitspåse	6
0620	4A	98 90 682		570), RH	1	Seat cover	Sitspåse	6
0630	5	98 90 716		570), LH	1	Back cover	Ryggpåse	6
0640	5	95 76 158		570), 4D	1	Back cover	Ryggpåse	6
0650	5A	98 90 708		570), RH	1	Back cover	Ryggpåse	6
0660	6	98 90 724		570)	1	Arm rest cover	Armstödspåse	6
0670	7	95 79 640		570), 4D	2	Collar	Krage	6
0680	7	95 94 276		570,388,413), 4D	2	Collar	Krage	6
0690	8	95 78 741		570), 4D	1	Hatch	Lucka	6
0700								
0710				See page 8B-059, 5-C12		CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER	TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR	
0720								
0730								
0740								

356. Ch --J1016350, --J2008912, --J8001034
357. Ch J1016351--, J2008913--, J8001035--
388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
413. Ch J1030884--
570. Grey Grå

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8B GROUP INDEX

Instrument panel	**5-A06**
Upholstery	**5-B08**
Other interior equipment	**5-H04**
Complete sets:	**5-K06**


Upholstery

5-C24

Covers 1989 500), Horizon pattern

Klädsel

Klädselpåsar 1989 500), Horisontmönster

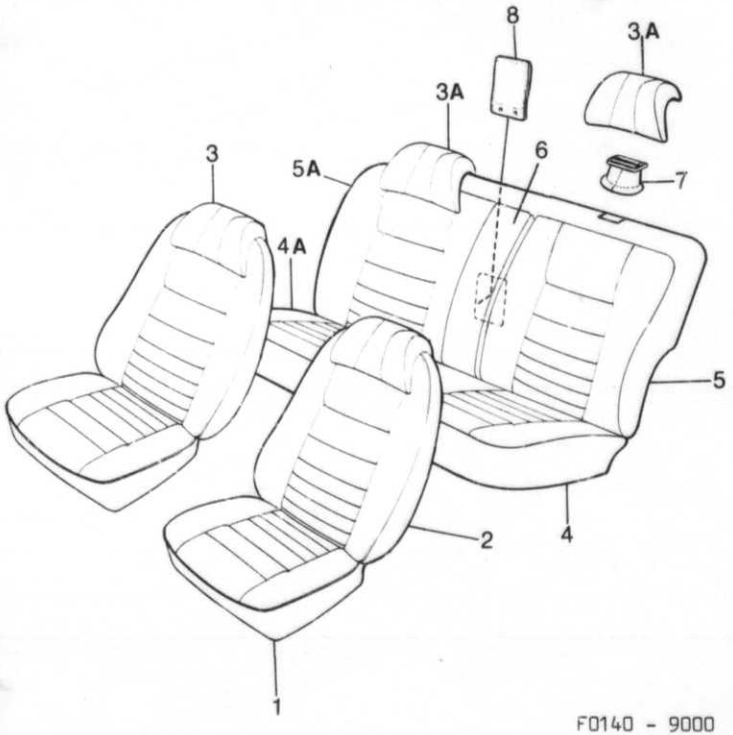

F0140 - 9000

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C24				
0020	1	40 38 253		560)	2	Seat cover	Sitspåse	6
0030	2	96 88 011		560)	2	Back cover	Ryggpåse	6
0040	3	97 75 453		560)	2	Head restraint cover	Nackstödspåse	6
0050	3A	97 74 415		560)	2	Head restraint cover	Nackstödspåse	5
0060	3A	*95 79 517*		560), 4D NLS - USE 9699588	2	Head restraint cover	Nackstödspåse	6
0070	4	96 97 269		560), LH	1	Seat cover	Sitspåse	6
0080	4	95 75 135		560), 4D	1	Seat cover	Sitspåse	6
0090	4A	96 97 319		560), RH	1	Seat cover	Sitspåse	6
0100	5	96 97 368		560), LH	1	Back cover	Ryggpåse	6
0110	5	95 75 184		560), 4D	1	Back cover	Ryggpåse	6
0120	5A	96 97 418		560), RH	1	Back cover	Ryggpåse	6
0130	6	97 75 180		560)	1	Arm rest cover	Armstödspåse	6
0140	7	95 79 624		560), 4D	2	Collar	Krage	6
0150	7	95 94 250		560,388), 4D	2	Collar	Krage	6
0160	8	95 78 717		560), 4D	1	Hatch	Lucka	6
0170				TRIM COLOUR C44				
0180	1	95 92 270		560)	2	Seat cover	Sitspåse	6
0190	2	95 88 799		560)	2	Back cover	Ryggpåse	6
0200	3	95 88 849		560)	2	Head restraint cover	Nackstödspåse	6
0210	3A	95 87 122		560)	2	Head restraint cover	Nackstödspåse	6
0220	3A	*95 94 607*		560), 4D NLS - USE 9699620	2	Head restraint cover	Nackstödspåse	6
0230	4	95 87 361		560), LH	1	Seat cover	Sitspåse	6
0240	4	95 92 791		560), 4D	1	Seat cover	Sitspåse	6
0250	4A	95 87 437		560), RH	1	Seat cover	Sitspåse	6
0260	5	95 87 502		560), LH	1	Back cover	Ryggpåse	6
0270	5	95 92 841		560), 4D	1	Back cover	Ryggpåse	6
0280	5A	95 87 569		560), RH	1	Back cover	Ryggpåse	6
0290	6	95 87 627		560)	1	Arm rest cover	Armstödspåse	6
0300	7	95 48 249		560), 4D	2	Collar	Krage	6
0310	7	95 94 722		560,388), 4D	2	Collar	Krage	6
0320	8	95 78 717		560), 4D	1	Hatch	Lucka	6
0330				TRIM COLOUR E24				
0340	1	40 38 261		570)	2	Seat cover	Sitspåse	6
0350	2	96 88 045		570)	2	Back cover	Ryggpåse	6
0360	3	98 95 137		570)	2	Head restraint cover	Nackstödspåse	6
0370	3A	96 54 856		570)	2	Head restraint cover	Nackstödspåse	6
0380	3A	*95 79 533*		570), 4D NLS - USE 9699596	2	Head restraint cover	Nackstödspåse	6
0390	4	96 97 293		570), LH	1	Seat cover	Sitspåse	6
0400	4	95 75 168		570), 4D	1	Seat cover	Sitspåse	6
0410	4A	96 97 343		570), RH	1	Seat cover	Sitspåse	6
0420	5	96 97 392		570), LH	1	Back cover	Ryggpåse	6
0430	5	95 75 218		570), 4D	1	Back cover	Ryggpåse	6
0440	5A	96 97 442		570), RH	1	Back cover	Ryggpåse	6
0450	6	96 53 718		570)	1	Arm rest cover	Armstödspåse	6
0460	7	95 79 640		570), 4D	2	Collar	Krage	6
0470	7	95 94 276		570,388), 4D	2	Collar	Krage	6
0480	8	95 78 741		570), 4D	1	Hatch	Lucka	6
0490								


388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

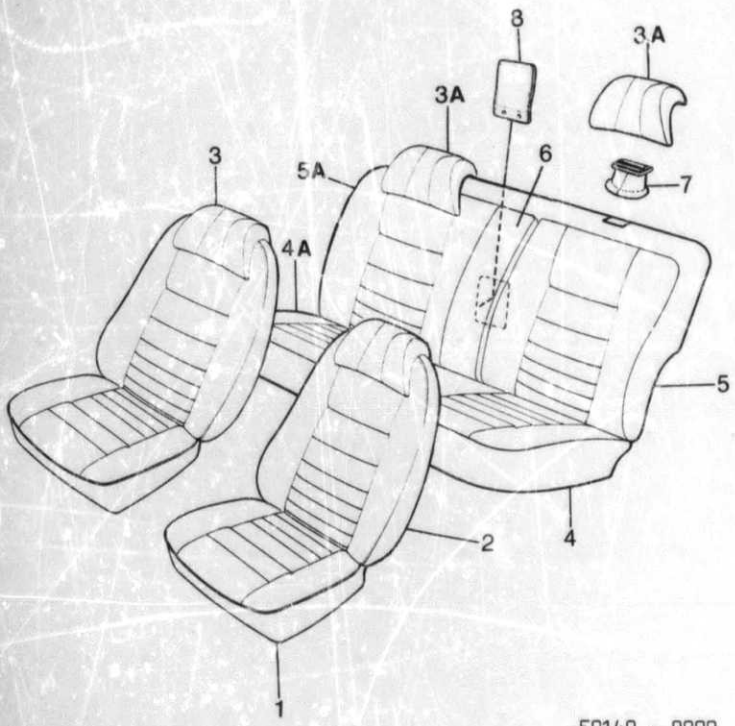

F0140 - 9000

Upholstery

5-D02

Covers 1989
500), Horizon pattern

Kladsel

Kladselpasar 1989
500), Horisontmonster

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500				TRIM COLOUR E44				
0510	1	95 92 304		570)	2	Seat cover	Sitspåse	6
0520	2	95 88 823		570)	2	Back cover	Ryggpåse	6
0530	3	95 88 872		570)	2	Head restraint cover	Nackstödspåse	6
0540	3A	95 87 155		570)	2	Head restraint cover	Nackstödspåse	6
0550	3A	*95 94 615*		570), 4D NLS - USE 9699638	2	Head restraint cover	Nackstödspåse	6
0560	4	95 87 395		570), LH	1	Seat cover	Sitspåse	6
0570	4	95 92 825		570), 4D	1	Seat cover	Sitspåse	6
0580	4A	95 87 460		570), RH	1	Seat cover	Sitspåse	6
0590	5	95 87 536		570), LH	1	Back cover	Ryggpåse	6
0600	5	95 92 874		570), 4D	1	Back cover	Ryggpåse	6
0610	5A	95 87 593		570), RH	1	Back cover	Ryggpåse	6
0620	6	95 87 650		570)	1	Arm rest cover	Armstödspåse	6
0630	7	95 48 256		570), 4D	2	Collar	Krage	6
0640	7	95 94 730		570,388), 4D	2	Collar	Krage	6
0650	8	95 78 741		570), 4D	1	Hatch	Lucka	6
0660				TRIM COLOUR F24				
0670	1	40 38 279		580)	2	Seat cover	Sitspåse	6
0680	2	96 88 037		580)	2	Back cover	Ryggpåse	6
0690	3	96 95 214		580)	2	Head restraint cover	Nackstödspåse	6
0700	3A	96 96 493		580)	2	Head restraint cover	Nackstödspåse	6
0710	3A	*95 79 541*		580), 4D NLS - USE 9699604	2	Head restraint cover	Nackstödspåse	6
0720	4	96 97 285		580), LH	1	Seat cover	Sitspåse	6
0730	4	95 75 150		580), 4D	1	Seat cover	Sitspåse	6
0740	4A	96 97 335		580), RH	1	Seat cover	Sitspåse	6
0750	5	96 97 384		580), LH	1	Back cover	Ryggpåse	6
0760	5	95 75 200		580), 4D	1	Back cover	Ryggpåse	6
0770	5A	96 97 434		580), RH	1	Back cover	Ryggpåse	6
0780	6	96 97 244		580)	1	Arm rest cover	Armstödspåse	6
0790	7	95 79 657		580), 4D	2	Collar	Krage	6
0800	7	95 94 284		580,388), 4D	2	Collar	Krage	6
0810	8	95 78 723		580), 4D	1	Hatch	Lucka	6
0820				TRIM COLOUR F44				
0830	1	95 92 296		580)	2	Seat cover	Sitspåse	6
0840	2	95 88 815		580)	2	Back cover	Ryggpåse	6
0850	3	95 88 864		580)	2	Head restraint cover	Nackstödspåse	6
0860	3A	95 87 148		580)	2	Head restraint cover	Nackstödspåse	6
0870	3A	*95 94 623*		580), 4D NLS - USE 9699646	2	Head restraint cover	Nackstödspåse	6
0880	4	95 87 387		580), LH	1	Seat cover	Sitspåse	6
0890	4	95 92 817		580), 4D	1	Seat cover	Sitspåse	6
0900	4A	95 87 452		580), RH	1	Seat cover	Sitspåse	6
0910	5	95 87 528		580), LH	1	Back cover	Ryggpåse	6
0920	5	95 92 866		580), 4D	1	Back cover	Ryggpåse	6
0930	5A	95 87 585		580), RH	1	Back cover	Ryggpåse	6
0940	6	95 87 643		580)	1	Arm rest cover	Armstödspåse	6
0950	7	95 48 264		580), 4D	2	Collar	Krage	6
0960	7	95 94 748		580,388), 4D	2	Collar	Krage	6
0970	8	95 78 733		580), 4D	1	Hatch	Lucka	6
0980								

388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
500. Also valid for SE 1988B. Gäller även för SE 1988B.
570. Grey Grå
580. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-D04

Covers 1989 500), Horizon pattern

Klädselpåsar 1989 500), Horisontmönster

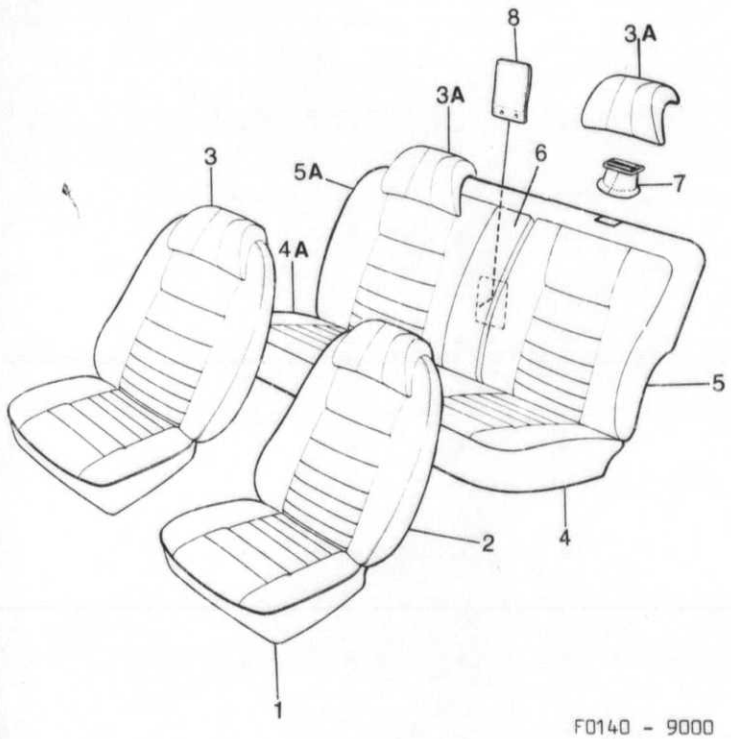

F0140 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR G24				
1	40 38 287		590)	2	Seat cover	Sitspåse	6
2	95 91 777		590)	2	Back cover	Ryggpåse	6
3	95 91 785		590)	2	Head restraint cover	Nackstödspåse	6
3A	95 87 106		590)	2	Head restraint cover	Nackstödspåse	6
3A	*95 87 163*		590), 4D NLS - USE 9699612	2	Head restraint cover	Nackstödspåse	5
4	95 87 346		590), LH	1	Seat cover	Sitspåse	6
4	95 87 403		590), 4D	1	Seat cover	Sitspåse	6
4A	95 87 411		590), RH	1	Seat cover	Sitspåse	6
5	95 87 486		590), LH	1	Back cover	Ryggpåse	6
5	95 87 478		590), 4D	1	Back cover	Ryggpåse	6
5A	95 87 544		590), RH	1	Back cover	Ryggpåse	6
6	95 87 601		590)	1	Arm rest cover	Armstödspåse	6
7	95 85 969		590), 4D	2	Collar	Krage	6
7	95 94 292		590,388), 4D	2	Collar	Krage	6
8	95 91 462		590), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G44				
1	95 92 288		590)	2	Seat cover	Sitspåse	6
2	95 88 807		590)	2	Back cover	Ryggpåse	6
3	95 88 856		590)	2	Head restraint cover	Nackstödspåse	6
3A	95 87 130		590)	2	Head restraint cover	Nackstödspåse	6
3A	*95 94 631*		590), 4D NLS - USE 9699653	2	Head restraint cover	Nackstödspåse	6
4	95 87 379		590), LH	1	Seat cover	Sitspåse	6
4	95 92 809		590), 4D	1	Seat cover	Sitspåse	6
4A	95 87 445		590), RH	1	Seat cover	Sitspåse	6
5	95 87 510		590), LH	1	Back cover	Ryggpåse	6
5	95 92 858		590), 4D	1	Back cover	Ryggpåse	6
5A	95 87 577		590), RH	1	Back cover	Ryggpåse	6
6	95 87 635		590)	1	Arm rest cover	Armstödspåse	6
7	95 48 272		590), 4D	2	Collar	Krage	6
7	95 94 755		590,388), 4D	2	Collar	Krage	6
8	95 91 462		590), 4D	1	Hatch	Lucka	6
	97 40 838		560,394) TRIM COLOUR C24 NLS	X	Cloth	Tyg	6
	95 32 904		560,394) TRIM COLOUR C44 NLS	X	Cloth	Tyg	6
	98 27 247		560,395) TRIM COLOUR C24	X	Cloth	Tyg	6
	95 32 896		560,395) TRIM COLOUR C44 NLS	X	Cloth	Tyg	6
	98 51 031		570,394) TRIM COLOUR E24	X	Cloth	Tyg	6
	95 32 946		570,394) TRIM COLOUR E44	X	Cloth	Tyg	6
	98 51 049		570,395) TRIM COLOUR E24	X	Cloth	Tyg	6
	95 32 938		570,395) TRIM COLOUR E44 NLS	X	Cloth	Tyg	6
	98 78 307		580,394) TRIM COLOUR F24	X	Cloth	Tyg	6
	95 32 987		580,394) TRIM COLOUR F44	X	Cloth	Tyg	6
	98 78 315		580,395) TRIM COLOUR F24	X	Cloth	Tyg	6
	95 32 979		580,395) TRIM COLOUR F44	X	Cloth	Tyg	6
	95 31 641		590,394) TRIM COLOUR G24	X	Cloth	Tyg	6

388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
394. Thickness = 3 MM Tjocklek = 3 MM
395. Thickness = 10 MM Tjocklek = 10 MM
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-D06

Covers 1989 500), Horizon pattern

Klädsel

Klädselpåsar 1989 500), Horisontmönster

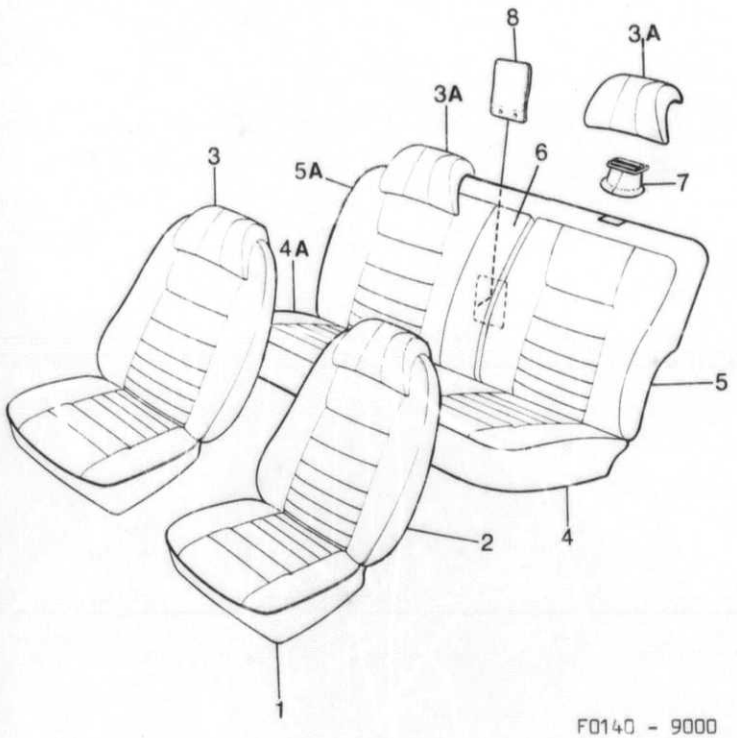

F0140 - 9000

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1480		95 33 027		590,394) TRIM COLOUR G44	X	Cloth	Tyg	6
1490		95 31 658		590,395) TRIM COLOUR G24	X	Cloth	Tyg	6
1500		95 33 019		590,395) TRIM COLOUR G44	X	Cloth	Tyg	6
1510								
1520		97 41 489		560)	X	Coated fabric	Vävplast	6
1530		*98 51 098*		570) NLS	X	Coated fabric	Vävplast	6
1540		98 79 909		580)	X	Coated fabric	Vävplast	6
1550		95 31 674		590)	X	Coated fabric	Vävplast	6
1560								
1570		97 93 977		560), TRIM COLOUR C24	X	Piping	Kederlist	6
1580		95 40 493		560), TRIM COLOUR C44	X	Piping	Kederlist	6
1590		98 07 975		560), TRIM COLOUR C33	X	Piping	Kederlist	6
1600								
1610		96 53 973		570), TRIM COLOUR E24	X	Piping	Kederlist	6
1620		95 40 501		570), TRIM COLOUR E44	X	Piping	Kederlist	6
1630		98 51 411		570), TRIM COLOUR E33	X	Piping	Kederlist	6
1640								
1650		98 78 976		580), TRIM COLOUR F24	X	Piping	Kederlist	6
1660		95 40 519		580), TRIM COLOUR F44	X	Piping	Kederlist	6
1670		96 95 172		580), TRIM COLOUR F33	X	Piping	Kederlist	6
1680								
1690		95 40 477		590), TRIM COLOUR G24	X	Piping	Kederlist	6
1700		95 40 527		590), TRIM COLOUR G44	X	Piping	Kederlist	6
1710		95 31 690		590), TRIM COLOUR G33	X	Piping	Kederlist	6

394. Thickness = 3 MM Tjocklek = 3 MM
395. Thickness = 10 MM Tjocklek = 10 MM
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-D08

Covers 1989 500), Contour design

Klädsel

Klädselpåsar 1989 500), Contour design

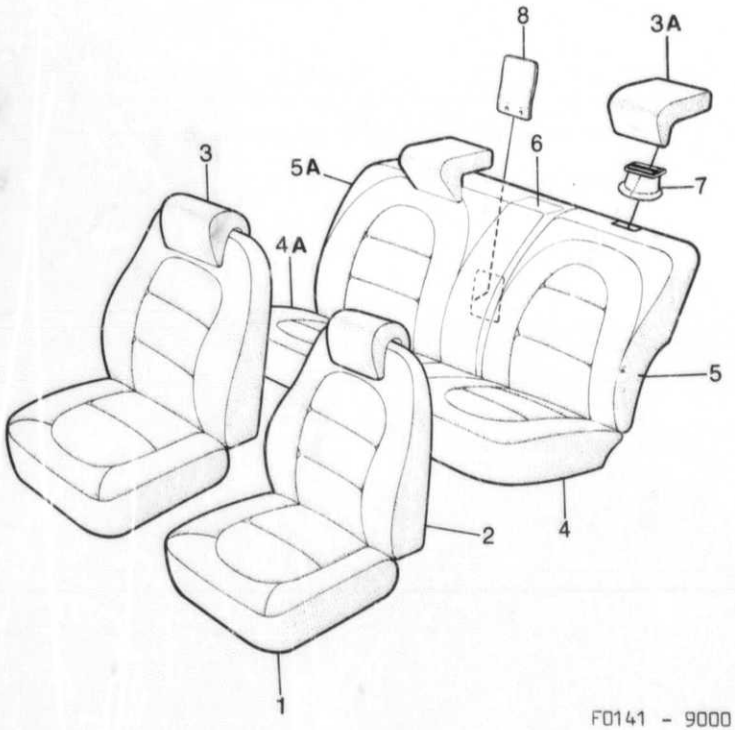

F0141 - 9000

1303	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C33				
0020	1	40 38 204		560)	2	Seat cover	Sitspåse	6
0030	2	95 94 953		560)	2	Back cover	Ryggpåse	6
0050	3	95 72 975		560)	2	Head restraint cover	Nackstödspåse	6
0080	3A	95 73 205		560)	2	Head restraint cover	Nackstödspåse	6
0110	3A	*95 79 566*		560), 4D NLS - USE 9699539	2	Head restraint cover	Nackstödspåse	6
0110								
0140	4	95 73 304		560), LH	1	Seat cover	Sitspåse	6
0170	4	95 76 083		560), 4D	1	Seat cover	Sitspåse	6
0190	4A	95 73 296		560), RH	1	Seat cover	Sitspåse	6
0220	5	95 73 320		560), LH	1	Back cover	Ryggpåse	6
0250	5	95 76 141		560), 4D	1	Back cover	Ryggpåse	6
0270	5A	95 73 312		560), RH	1	Back cover	Ryggpåse	6
0300	6	95 73 338		560)	1	Arm rest cover	Armstödspåse	6
0320	7	95 79 624		560), 4D	2	Collar	Krage	6
0340	7	95 94 250		560,388), 4D	2	Collar	Krage	6
0360	8	95 78 717		560), 4D	1	Hatch	Lucka	6
0390				TRIM COLOUR E33				
0400	1	40 38 212		570)	2	Seat cover	Sitspåse	6
0410	2	95 94 961		570)	2	Back cover	Ryggpåse	6
0430	3	95 78 519		570)	2	Head restraint cover	Nackstödspåse	6
0460	3A	95 78 543		570)	2	Head restraint cover	Nackstödspåse	6
0490	3A	*95 79 574*		570), 4D NLS - USE 9699547	2	Head restraint cover	Nackstödspåse	6
0490								
0520	4	98 90 690		570), LH	1	Seat cover	Sitspåse	6
0540	4	95 76 091		570), 4D	1	Seat cover	Sitspåse	6
0560	4A	98 90 682		570), RH	1	Seat cover	Sitspåse	6
0580	5	98 90 716		570), LH	1	Back cover	Ryggpåse	6
0600	5	95 76 158		570), 4D	1	Back cover	Ryggpåse	6
0620	5A	98 90 708		570), RH	1	Back cover	Ryggpåse	6
0640	6	98 90 724		570)	1	Arm rest cover	Armstödspåse	6
0660	7	95 79 640		570), 4D	2	Collar	Krage	6
0680	7	95 94 276		570,388), 4D	2	Collar	Krage	6
0700	8	95 78 741		570), 4D	1	Hatch	Lucka	6
0710				TRIM COLOUR F33				
0730	1	40 38 303		580)	2	Seat cover	Sitspåse	6
0750	2	40 38 311		580)	2	Back cover	Ryggpåse	6
0770	3	40 38 329		580)	2	Head restraint cover	Nackstödspåse	6
0800	3A	40 39 517		580)	2	Head restraint cover	Nackstödspåse	6
0830	3A	40 39 624		580), 4D	2	Head restraint cover	Nackstödspåse	6
0860	4	40 38 857		580), LH	1	Seat cover	Sitspåse	6
0880	4	40 39 368		580), 4D	1	Seat cover	Sitspåse	6
0900	4A	40 38 840		580), RH	1	Seat cover	Sitspåse	6
0920	5	40 38 873		580), LH	1	Back cover	Ryggpåse	6
0940	5	40 39 376		580), 4D	1	Back cover	Ryggpåse	6
0960	5A	40 38 865		580), RH	1	Back cover	Ryggpåse	6
0980	6	40 38 881		580)	1	Arm rest cover	Armstödspåse	6
1000	7	95 79 657		580), 4D	2	Collar	Krage	6
1020	7	95 94 284		580,388), 4D	2	Collar	Krage	6
1040	8	95 78 733		580), 4D	1	Hatch	Lucka	6
1050								

388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-D10 Covers 1989 500), Contour design

Klädsel

Klädselpåsar 1989 500), Contour design

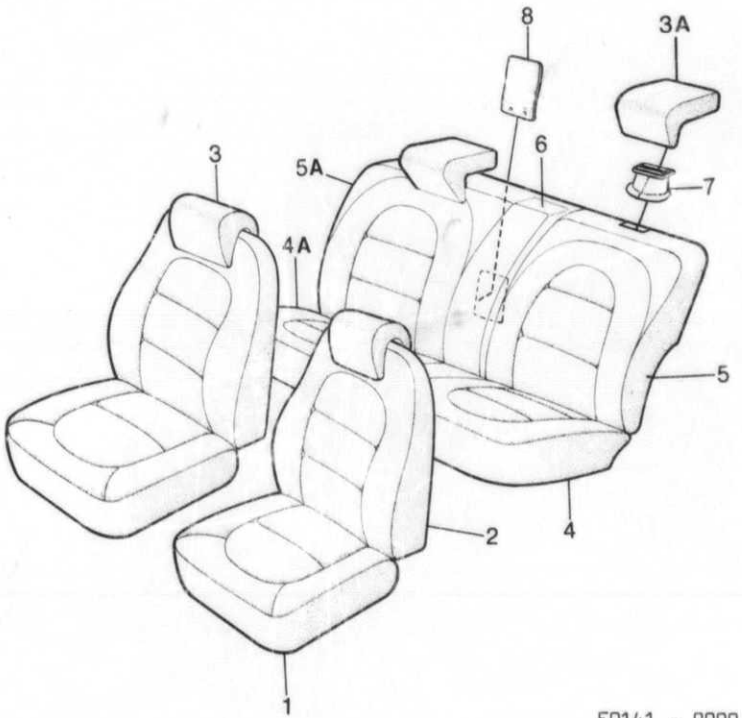

F0141 - 9000

1303	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1070				TRIM COLOUR G33				
1080	1	40 38 238		590)	2	Seat cover	Sitspåse	6
1090	2	95 89 193		590)	2	Back cover	Ryggpåse	6
1110	3	95 89 201		590)	2	Head restraint cover	Nackstödspåse	6
1140	3A	95 85 845		590)	2	Head restraint cover	Nackstödspåse	6
1170	3A	*95 85 951*		590), 4D NLS - USE 9699554	2	Head restraint cover	Nackstödspåse	6
1200	4	95 90 050		590), LH	1	Seat cover	Sitspåse	6
1220	4	95 89 664		590), 4D	1	Seat cover	Sitspåse	6
1240	4A	95 90 043		590), RH	1	Seat cover	Sitspåse	6
1260	5	95 90 076		590), LH	1	Back cover	Ryggpåse	6
1280	5	95 89 672		590), 4D	1	Back cover	Ryggpåse	6
1300	5A	95 90 068		590), RH	1	Back cover	Ryggpåse	6
1320	6	95 89 680		590)	1	Arm rest cover	Armstödspåse	6
1340	7	95 85 969		590), 4D	2	Collar	Krage	6
1360	7	95 94 292		590,388), 4D	2	Collar	Krage	6
1380	8	95 91 462		590), 4D	1	Hatch	Lucka	6
1400								
1410				See page 8B-071, 5-C24		CLOTH, COATED FABRIC AND PLASTIC STRIPS FOR UPHOLSTERY COVER	TYG, VÄVPLAST OCH KEDERLISTER FÖR KLÄDSELPÅSAR	
1420								
1430								
1440								

388. Prepared for child restraint anchorages Förbered för barnstolsinfästning
500. Also valid for SE 1988B. Gäller även för SE 1988B.
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-D12

Door trim 1985
Front door

Klädsel

Dörrklädsel 1985
Framdörr

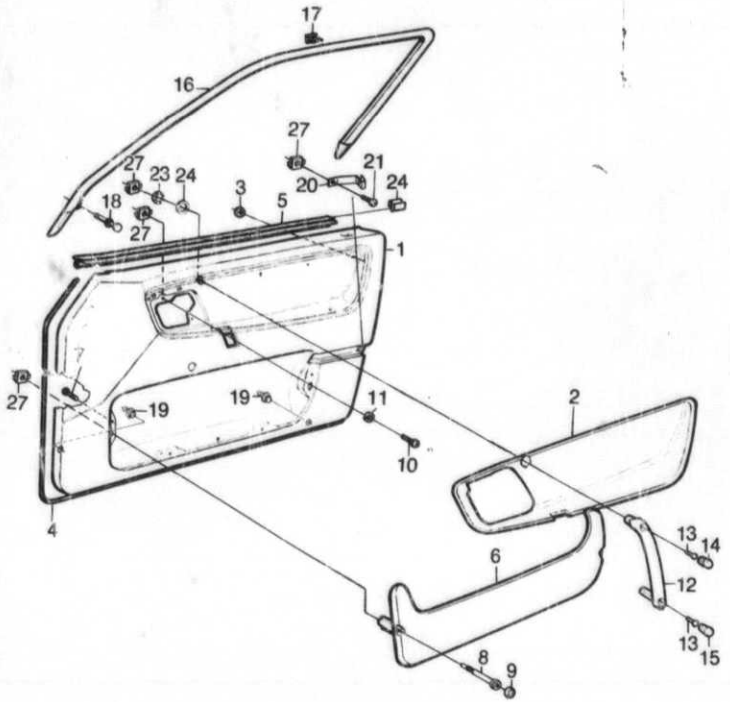

F4118 9000

1310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C20, C23				
0020	1	*97 76 337*		560), LH NLS - USE 4268215, 4268389, 7965684, 8073090, 9660077, 9660143, 9677444, 9796939	1	Door trim	Dörrklädsel	6
0030	1	97 76 329		560), RH	1	Door trim	Dörrklädsel	6
0040	2	97 80 651		560), LH	1	. Arm rest	. Armstöd	6
0050	2	*97 80 644*		560), RH NLS	1	. Arm rest	. Armstöd	6
0060	3	*97 76 196*		NLS - USE 9695081	7	. Washer	. Bricka	5
0070	4	*97 80 057*		560) NLS	2	. Strip	. List	6
0080	5	*97 64 267*		14), LH NLS	1	. Sealing strip	. Tätningslist	6
0090	5	97 64 259		14), RH	1	. Sealing strip	. Tätningslist	6
0100	5	96 60 986		15), LH	1	. Sealing strip	. Tätningslist	6
0110	5	96 60 838		15), RH	1	. Sealing strip	. Tätningslist	6
0120	6	97 77 095		560), LH	1	Pocket	Ficka	6
0130	6	97 77 103		560), RH	1	Pocket	Ficka	6
0140				TRIM COLOUR C21, C22				
0150	1	*97 76 352*		590), LH NLS	1	Door trim	Dörrklädsel	6
0160	1	*97 76 345*		590), RH NLS	1	Door trim	Dörrklädsel	6
0170	2	97 80 677		590), LH	1	. Arm rest	. Armstöd	6
0180	2	97 80 669		590), RH	1	. Arm rest	. Armstöd	6
0190	3	*97 76 196*		NLS - USE 9695081	7	. Washer	. Bricka	5
0200	4	97 80 065		590)	2	. Strip	. List	6
0210	5	*97 64 267*		14), LH NLS	1	. Sealing strip	. Tätningslist	6
0220	5	97 64 259		14), RH	1	. Sealing strip	. Tätningslist	6
0230	5	96 60 986		15), LH	1	. Sealing strip	. Tätningslist	6
0240	5	96 60 838		15), RH	1	. Sealing strip	. Tätningslist	6
0250	6	*97 77 111*		590), LH NLS	1	Pocket	Ficka	6
0260	6	*97 77 129*		590), RH NLS	1	Pocket	Ficka	6
0270				TRIM COLOUR C24				
0280	1	97 76 378		580), LH	1	Door trim	Dörrklädsel	6
0290	1	*97 76 360*		580), RH NLS	1	Door trim	Dörrklädsel	6
0300	2	97 80 693		580), LH	1	. Arm rest	. Armstöd	6
0310	2	*97 80 685*		580), RH NLS	1	. Arm rest	. Armstöd	6
0320	3	*97 76 196*		NLS - USE 9695081	7	. Washer	. Bricka	5
0330	4	97 80 073		580)	2	. Strip	. List	6
0340	5	*97 64 267*		14), LH NLS	1	. Sealing strip	. Tätningslist	6
0350	5	97 64 259		14), RH	1	. Sealing strip	. Tätningslist	6
0360	5	96 60 986		15), LH	1	. Sealing strip	. Tätningslist	6
0370	5	96 60 838		15), RH	1	. Sealing strip	. Tätningslist	6
0380	6	*97 77 137*		580), LH NLS	1	Pocket	Ficka	6
0390	6	*97 77 145*		580), RH NLS	1	Pocket	Ficka	6
0400								
0410	7	79 71 393			8	Screw	Skruv	5
0420	8	97 80 156			4	Screw	Skruv	5
0430	9	97 77 160		560)	4	Cover	Täcklock	5
0440	9	97 77 178		590)	4	Cover	Täcklock	5
0450	9	97 77 186		580)	4	Cover	Täcklock	5
0460	10	80 59 396			2	Screw	Skruv	5
0470	11	80 29 944			2	Washer	Bricka	5
0480								
0490	12	97 76 410		560), LH	1	Handle	Handtag	5
0500	12	97 76 402		560), RH	1	Handle	Handtag	5
0510								
0520	12	97 76 436		590), LH	1	Handle	Handtag	5
0530	12	97 76 428		590), RH	1	Handle	Handtag	5
0540								

14. Ch. --F4004175
15. Ch. F4004176--
560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-D14

Door trim 1985
Front door

Klädsel

Dörrklädsel 1985
Framdörr

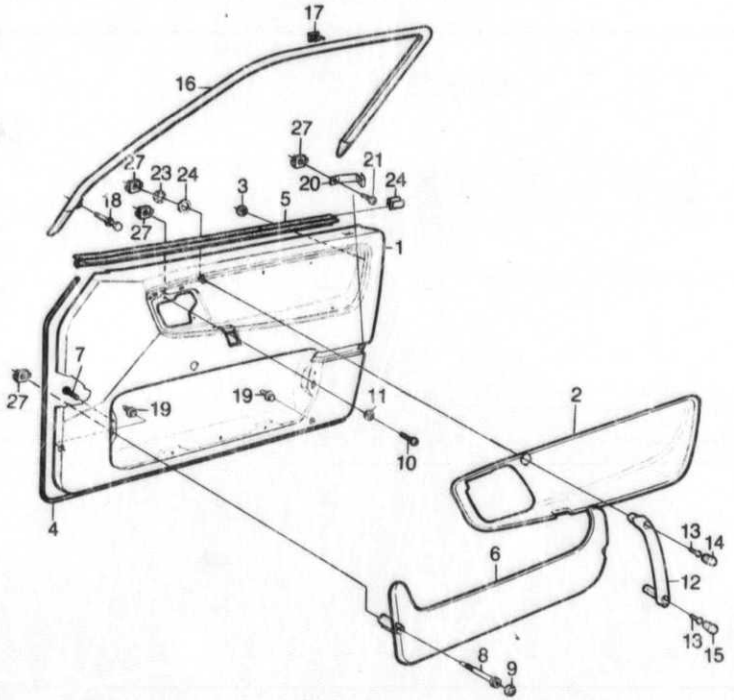

F4118 9000

1310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	12	97 76 451		580), LH	1	Handle	Handtag	5
0560	12	97 76 444		580), RH	1	Handle	Handtag	5
0570								
0580	13	80 59 396			4	Screw	Skruv	5
0590	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0600	14	97 76 485		590)	2	Cover washer	Täckbricka	5
0610	14	97 76 493		580)	2	Cover washer	Täckbricka	5
0620								
0630	15	97 76 519		560)	2	Cover washer	Täckbricka	5
0640	15	97 76 527		590)	2	Cover washer	Täckbricka	5
0650	15	97 76 535		580)	2	Cover washer	Täckbricka	5
0660								
0670	16	97 50 035		LH	1	Upholstery	Klädsel	6
0680	16	97 50 027		RH	1	Upholstery	Klädsel	6
0690	17	97 76 014			24	Clamp	Klämma	5
0700	18	97 50 399			2	Clamp	Klämma	5
0710	19	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
0720	20	97 96 616			2	Clamp	Klämma	6
0730	21	80 59 396			2	Screw	Skruv	5
0740	22	97 97 200			2	Washer	Bricka	5
0750	23	98 91 391			2	Washer	Bricka	5
0760	24	84 12 215			10	Clip	Clips	5
0770	27	79 74 231			X	Cage nut	Korgmutter	5

560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-D16

Door trim 1985
Rear door

Klädsel

Dörrklädsel 1985
Bakdörr

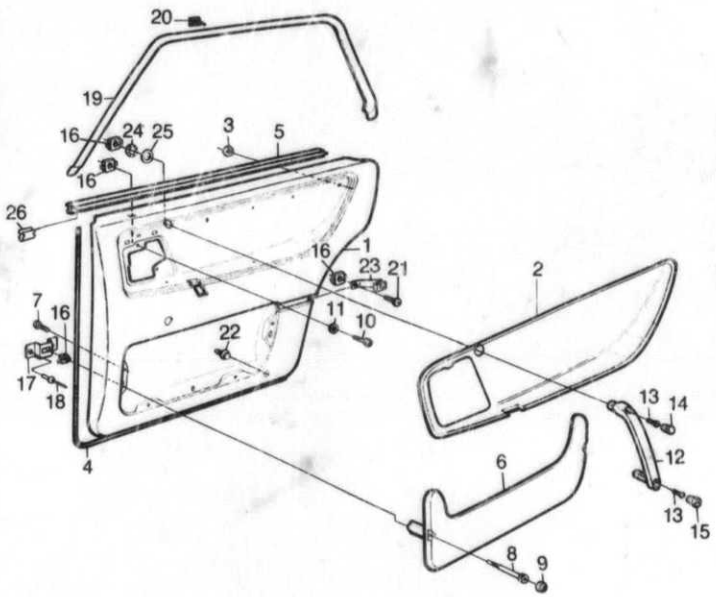

F4119 9000

1312	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C20, C23				
0020	1	97 79 091		560), LH	1	Door trim	Dörrklädsel	6
0030	1	97 79 083		560), RH	1	Door trim	Dörrklädsel	6
0040	2	*97 80 347*		560), LH NLS	1	. Arm rest	. Armstöd	6
0050	2	*97 80 339*		560), RH NLS	1	. Arm rest	. Armstöd	6
0060	3	*97 76 196*		NLS - USE 9695081	8	. Washer	. Bricka	5
0070	4	*97 80 107*		560) NLS	2	. Strip	. List	3
0080	5	97 64 283		LH	1	. Sealing strip	. Tätningslist	5
0090	5	97 64 275		RH	1	. Sealing strip	. Tätningslist	5
0100	6	97 79 604		560), LH	1	Pocket	Ficka	6
0110	6	*97 79 596*		560), RH NLS	1	Pocket	Ficka	6
0120				TRIM COLOUR C21, C22				
0130	1	97 79 117		590), LH	1	Door trim	Dörrklädsel	6
0140	1	97 79 109		590), RH	1	Door trim	Dörrklädsel	6
0150	2	97 80 362		590), LH	1	. Arm rest	. Armstöd	6
0160	2	97 80 354		590), RH	1	. Arm rest	. Armstöd	6
0170	3	*97 76 196*		NLS - USE 9695081	8	. Washer	. Bricka	5
0180	4	97 80 115		590)	2	. Strip	. List	3
0190	5	97 64 283		LH	1	. Sealing strip	. Tätningslist	5
0200	5	97 64 275		RH	1	. Sealing strip	. Tätningslist	5
0210	6	97 79 620		590), LH	1	Pocket	Ficka	6
0220	6	*97 79 612*		590), RH NLS	1	Pocket	Ficka	6
0230				TRIM COLOUR C24				
0240	1	97 79 133		580), LH	1	Door trim	Dörrklädsel	6
0250	1	97 79 125		580), RH	1	Door trim	Dörrklädsel	6
0260	2	*97 80 388*		580), LH NLS	1	. Arm rest	. Armstöd	6
0270	2	*97 80 370*		580), RH NLS	1	. Arm rest	. Armstöd	6
0280	3	*97 76 196*		NLS - USE 9695081	8	. Washer	. Bricka	5
0290	4	*97 80 123*		580) NLS	2	. Strip	. List	3
0300	5	97 64 283		LH	1	. Sealing strip	. Tätningslist	5
0310	5	97 64 275		RH	1	. Sealing strip	. Tätningslist	5
0320	6	*97 79 646*		580), LH NLS	1	Pocket	Ficka	6
0330	6	*97 79 638*		580), RH NLS	1	Pocket	Ficka	6
0340								
0350	7	79 71 393			8	Screw	Skruv	5
0360	8	97 80 156			4	Screw	Skruv	5
0370	9	97 77 160		560)	4	Cover	Täcklock	5
0380	9	97 77 178		590)	4	Cover	Täcklock	5
0390	9	97 77 186		580)	4	Cover	Täcklock	5
0400	10	80 59 396			2	Screw	Skruv	5
0410	11	80 29 944			2	Washer	Bricka	5
0420								
0430	12	97 79 174		560), LH	1	Handle	Handtag	5
0440	12	97 79 166		560), RH	1	Handle	Handtag	5
0450								
0460	12	97 79 190		590), LH	1	Handle	Handtag	5
0470	12	97 79 182		590), RH	1	Handle	Handtag	5
0480								
0490	12	97 79 216		580), LH	1	Handle	Handtag	5
0500	12	97 79 208		580), RH	1	Handle	Handtag	5
0510								
0520	13	80 59 396			4	Screw	Skruv	5
0530	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0540	14	97 76 485		590)	2	Cover washer	Täckbricka	5
0550	14	97 76 493		580)	2	Cover washer	Täckbricka	5
0560								
0570	15	97 76 519		560)	2	Cover washer	Täckbricka	5
0580	15	97 76 527		590)	2	Cover washer	Täckbricka	5
0590	15	97 76 535		580)	2	Cover washer	Täckbricka	5
0600								

560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-D18 Door trim 1985 Rear door

Kiädsel

Dörrklädsel 1985 Bakdörr

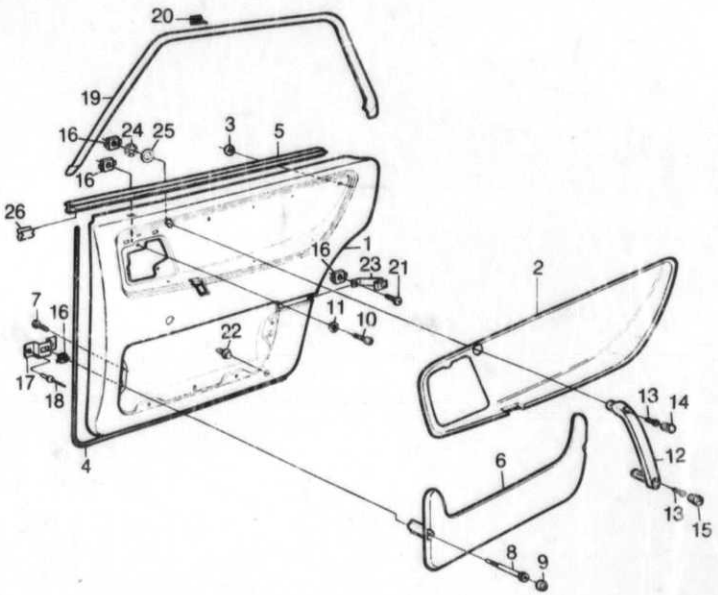

F4119 9000

1312	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	16	79 74 231			20	Cage nut	Korgmutter	5
0620	17	97 79 844			2	Bracket	Hållare	6
0630	18	79 73 258			4	Rivet	Nit	5
0640	19	*97 50 431*		LH NLS - USE 4268249	1	Upholstery	Klädsel	
0650	19	*97 50 423*		RH NLS - USE 4268231	1	Upholstery	Klädsel	6
0660	20	97 76 014			12	Clamp	Klammer	5
0670	21	80 59 396			4	Screw	Skruv	5
0680	22	97 95 386			2	Clamp	Klämma	6
0690	23	97 96 624			2	Clamp	Klämma	6
0700	24	97 97 200			2	Washer	Bricka	5
0710	25	93 91 391			4	Washer	Bricka	5
0720	26	84 12 215			5	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5--D20

Door trim 1986
Front door

Klädsel

Dörrklädsel 1986
Framdörr

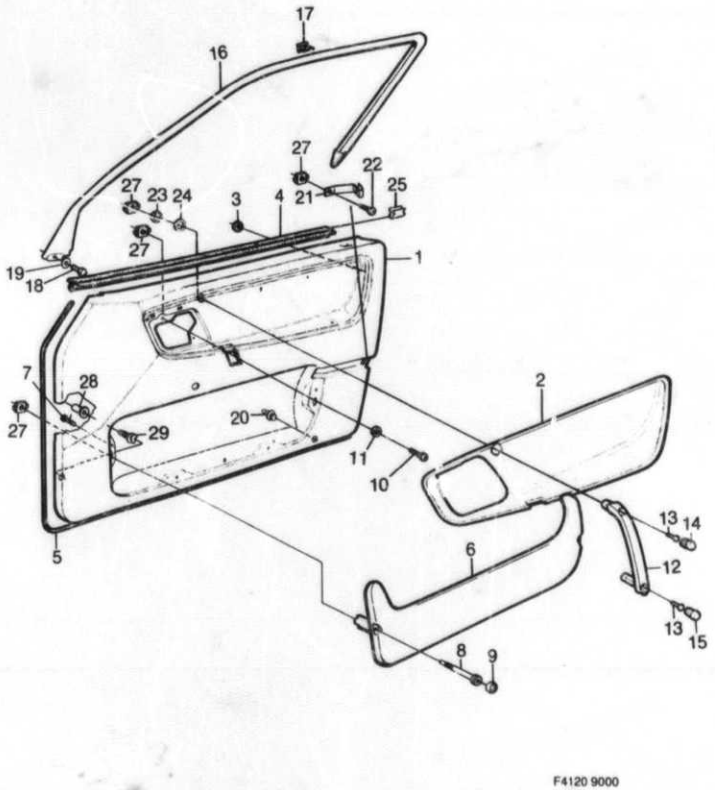

F4120 9000

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A13,A23,A33				
0020	1	*96 59 863*		590,38), LH NLS - USE 4268223, 4268389, 9657446, 9660143	1	Door trim	Dörrklädsel	6
0030	1	*96 59 855*		590,38), RH NLS - USE 4268215, 9657438, 9660143, 9694696	1	Door trim	Dörrklädsel	6
0040	1	96 57 446		590,39), LH	1	Door trim	Dörrklädsel	6
0050	1	96 57 438		590,39), RH	1	Door trim	Dörrklädsel	6
0060	2	97 80 677		590,38), LH	1	.Arm rest	.Armstöd	6
0070	2	97 80 669		590,38), RH	1	.Arm rest	.Armstöd	6
0080	2	96 57 545		590,39), LH	1	.Arm rest	.Armstöd	6
0090	2	96 57 537		590,39), RH	1	.Arm rest	.Armstöd	6
0100	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0110	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0120	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0130	5	97 80 065		590)	2	.Strip	.List	6
0140	6	*97 77 111*		590,38), LH NLS	1	Pocket	Ficka	6
0150	6	*97 77 129*		590,38), RH NLS	1	Pocket	Ficka	6
0160	6	96 58 097		590,39), LH	1	Pocket	Ficka	6
0170	6	96 58 105		590,39), RH	1	Pocket	Ficka	6
0180				TRIM COLOUR C13,C23,C33				
0190	1	*96 59 848*		560,36), LH NLS	1	Door trim	Dörrklädsel	6
0200	1	96 59 830		560,36), RH	1	Door trim	Dörrklädsel	6
0210	1	96 57 420		560,37), LH	1	Door trim	Dörrklädsel	6
0220	1	96 57 412		560,37), RH	1	Door trim	Dörrklädsel	6
0230	2	97 80 651		560,36), LH	1	.Arm rest	.Armstöd	6
0240	2	*97 80 644*		560,36), RH NLS	1	.Arm rest	.Armstöd	6
0250	2	96 57 529		560,37), LH	1	.Arm rest	.Armstöd	6
0260	2	96 57 511		560,37), RH	1	.Arm rest	.Armstöd	6
0270	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0280	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0290	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0300	5	*97 80 057*		560) NLS	2	.Strip	.List	6
0310	6	97 77 095		560,36), LH	1	Pocket	Ficka	6
0320	6	97 77 103		560,36), RH	1	Pocket	Ficka	6
0330	6	96 58 071		560,37), LH	1	Pocket	Ficka	6
0340	6	96 58 089		560,37), RH	1	Pocket	Ficka	6

36. Ch. --G1002347
37. Ch. G1002348--
38. Ch. --G1001658
39. Ch. G1001659--
560. Red Röd
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


9B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-D22

Door trim 1986
Front door

Dörrklädsel 1986
Framdörr

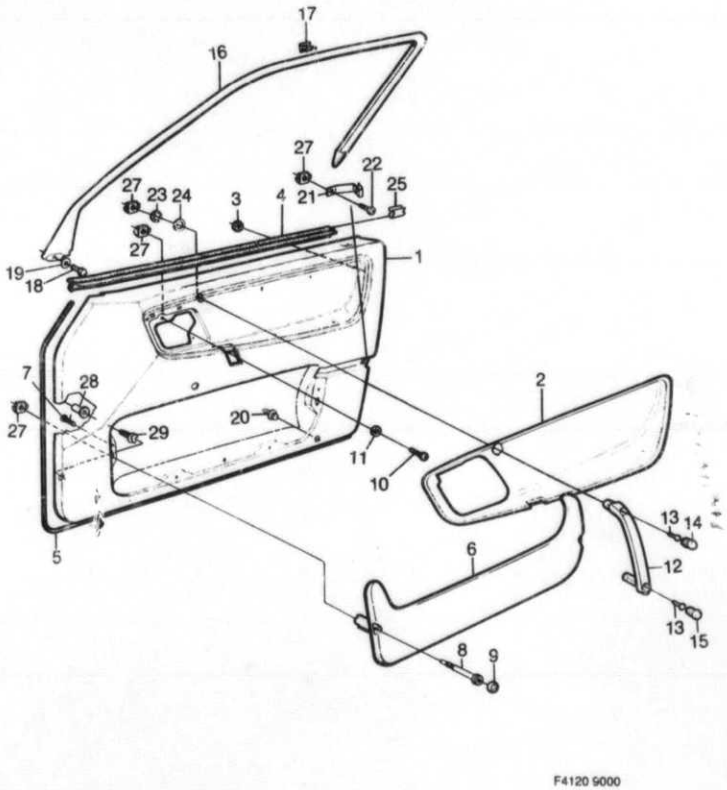

F4120 9000

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0350				TRIM COLOUR D13, D23				
0360	1	*96 59 889*		580,40), LH NLS - USE	1	Door trim	Dörrklädsel	6
0360				4268223, 4268389,				
0360				9657461, 9660143				
0370	1	*96 59 871*		580,40), RH NLS	1	Door trim	Dörrklädsel	6
0380	1	96 57 461		580,41), LH	1	Door trim	Dörrklädsel	6
0390	1	96 57 453		580,41), RH	1	Door trim	Dörrklädsel	6
0400	2	97 80 693		580,40), LH	1	.Arm rest	.Armstöd	6
0410	2	*97 80 685*		580,40), RH NLS	1	.Arm rest	.Armstöd	6
0420	2	96 57 560		580,41), LH	1	.Arm rest	.Armstöd	6
0430	2	96 57 552		580,41), RH	1	.Arm rest	.Armstöd	6
0440	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0450	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0460	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0470	5	97 80 073		580)	2	.Strip	.List	6
0480	6	*97 77 137*		580,40), LH NLS	1	Pocket	Ficka	6
0490	6	*97 77 145*		580,40), RH NLS	1	Pocket	Ficka	6
0500	6	96 58 113		580,41), LH	1	Pocket	Ficka	6
0510	6	*96 58 121*		580,41), RH NLS	1	Pocket	Ficka	6
0515								
0520				TRIM COLOUR E13,E23,E33				
0530	1	*96 59 905*		570,42), LH NLS - USE	1	Door trim	Dörrklädsel	6
0530				4268223, 4268389,				
0530				9657487, 9660143				
0540	1	*96 59 897*		570,42), RH NLS - USE	1	Door trim	Dörrklädsel	6
0540				4268215, 9657479,				
0540				9660143, 9694696				
0550	1	96 57 487		570,43), LH	1	Door trim	Dörrklädsel	6
0560	1	96 57 479		570,43), RH	1	Door trim	Dörrklädsel	6
0570	2	96 57 586		570), LH	1	.Arm rest	.Armstöd	6
0580	2	96 57 578		570), RH	1	.Arm rest	.Armstöd	6
0590	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0600	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0610	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0620	5	98 95 699		570)	2	.Strip	.List	6
0630	6	*97 99 966*		570,42), LH NLS	1	Pocket	Ficka	6
0640	6	*97 99 974*		570,42), RH NLS	1	Pocket	Ficka	6
0650	6	96 58 139		570,43), LH	1	Pocket	Ficka	6
0660	6	96 58 147		570,43), RH	1	Pocket	Ficka	6
0670								
0680	7	79 71 393			8	Screw	Skruv	5
0690	8	97 80 156			4	Screw	Skruv	5
0700	9	97 77 178		590)	4	Cover	Täcklock	5
0710	9	97 77 160		560)	4	Cover	Täcklock	5
0720	9	97 77 186		580)	4	Cover	Täcklock	5
0730	9	97 99 875		570)	4	Cover	Täcklock	5
0740	10	80 59 396			2	Screw	Skruv	5
0750	11	80 29 944			2	Washer	Bricka	5
0760								
0770	12	97 76 436		590), LH	1	Handle	Handtag	5
0780	12	97 76 428		590), RH	1	Handle	Handtag	5
0790								
0800	12	97 76 410		560), LH	1	Handle	Handtag	5
0810	12	97 76 402		560), RH	1	Handle	Handtag	5
0820								

40. Ch. --G1002054
41. Ch. G1002055--
42. Ch. --G1001942
43. Ch. G1001943--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery
5-D24
Door trim 1986
Front door

Klädsel
Dörrklädsel 1986
Framdörr

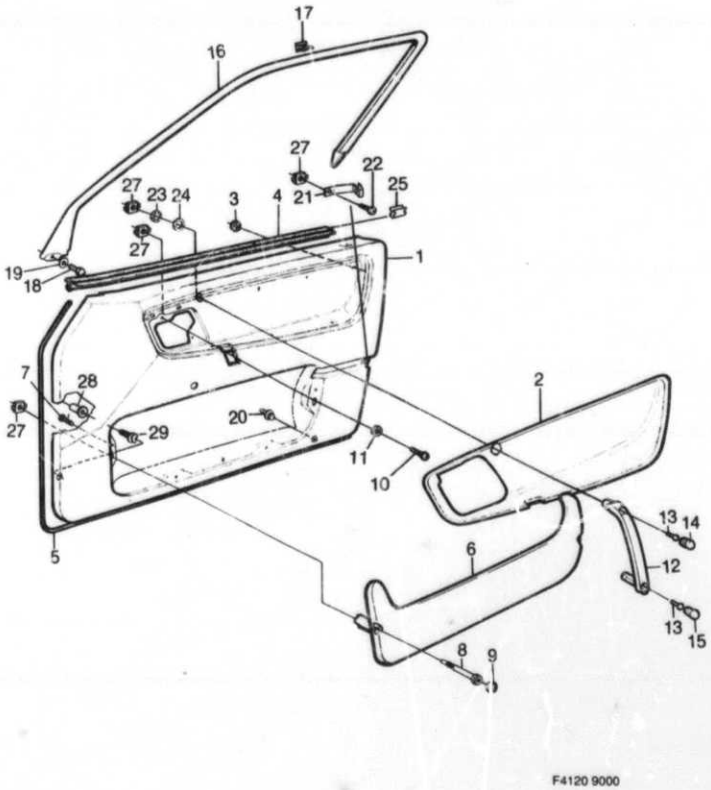

F4120 9000

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	12	97 76 451		580), LH	1	Handle	Handtag	5
0840	12	97 76 444		580), RH	1	Handle	Handtag	5
0850								
0860	12	98 90 112		570), LH	1	Handle	Handtag	5
0870	12	98 90 104		570), RH	1	Handle	Handtag	5
0880								
0890	13	80 59 420		(8059396)	4	Screw	Skruv	5
0900	14	97 76 485		590)	2	Cover washer	Täckbricka	5
0910	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0920	14	97 76 493		580)	2	Cover washer	Täckbricka	5
0930	14	98 90 146		570)	2	Cover washer	Täckbricka	5
0940								
0950	15	97 76 527		590)	2	Cover washer	Täckbricka	5
0960	15	97 76 519		560)	2	Cover washer	Täckbricka	5
0970	15	97 76 535		580)	2	Cover washer	Täckbricka	5
0980	15	98 90 153		570)	2	Cover washer	Täckbricka	5
0990								
1000	16	96 60 044		LH	1	Upholstery	Klädsel	6
1010	16	*96 94 670*		RH (9660036) NLS - USE 4268215	1	Upholstery	Klädsel	6
1010								
1020	17	96 60 143			24	Clamp	Klammer	5
1030	18	79 77 689			2	Screw	Skruv	5
1040	19	96 60 077			2	Washer	Bricka	5
1050	20	97 96 939			2	Clamp	Klämma	6
1060	21	97 96 616			2	Clamp	Klämma	6
1070	22	80 59 396			2	Screw	Skruv	5
1080	23	97 97 200			2	Washer	Bricka	5
1090	24	98 91 391		(9671389)	2	Washer	Bricka	5
1100	25	84 12 215			10	Clip	Clips	5
1110	27	79 74 231			X	Cage nut	Korgmutter	5
1120	28	95 45 906			2	Sleeve	Hylsa	5
1130	29	95 45 898			2	Upholstery clip	Klädselfäste	5

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-E02

Door trim 1986
Rear door

Dörrklädsel 1986
Bakdörr

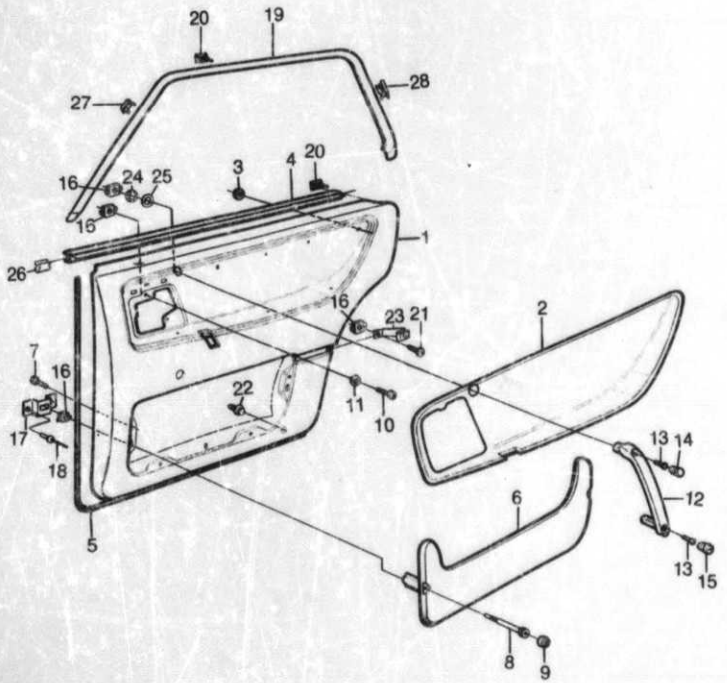

F4121 9000

1317	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A13,A23,A33				
0020	1	97 79 117		590,38), LH	1	Door trim	Dörrklädsel	6
0030	1	97 79 109		590,38), RH	1	Door trim	Dörrklädsel	6
0040	1	96 57 644		590,39) LH	1	Door trim	Dörrklädsel	6
0050	1	96 57 636		590,39), RH	1	Door trim	Dörrklädsel	6
0060	2	97 80 362		590,38), LH	1	.Arm rest	.Armstöd	6
0070	2	97 80 354		590,38), RH	1	.Arm rest	.Armstöd	6
0080	2	96 57 743		590,39), LH	1	.Arm rest	.Armstöd	6
0090	2	96 57 735		590,39), RH	1	.Arm rest	.Armstöd	6
0100	3	*97 76 196*		NLS - USE 9695081	8	.Washer	.Bricka	5
0110	4	97 64 283		89), LH	1	.Sealing strip	.Tätningslist	5
0120	4	97 64 275		89), RH	1	.Sealing strip	.Tätningslist	5
0130	4	96 60 994		90), LH	1	.Sealing strip	.Tätningslist	3
0140	4	96 60 846		90), RH	1	.Sealing strip	.Tätningslist	3
0150	5	97 80 115		590)	2	.Strip	.List	3
0160	6	97 79 620		590,38), LH	1	Pocket	Ficka	6
0170	6	*97 79 612*		590,38), RH NLS	1	Pocket	Ficka	6
0180	6	96 58 337		590,39), LH	1	Pocket	Ficka	6
0190	6	96 58 329		590,39), RH	1	Pocket	Ficka	6
0200				TRIM COLOUR C13,C23,C33				
0210	1	97 79 091		560,36), LH	1	Door trim	Dörrklädsel	6
0220	1	97 79 083		560,36), RH	1	Door trim	Dörrklädsel	6
0230	1	96 57 625		560,37), LH	1	Door trim	Dörrklädsel	6
0240	1	96 57 616		560,37), RH	1	Door trim	Dörrklädsel	6
0250	2	*97 80 347*		560,36), LH NLS	1	.Arm rest	.Armstöd	6
0260	2	*97 80 339*		560,36), RH NLS	1	.Arm rest	.Armstöd	6
0270	2	96 57 727		560,37), LH	1	.Arm rest	.Armstöd	6
0280	2	96 57 719		560,37), RH	1	.Arm rest	.Armstöd	6
0290	3	*97 76 196*		NLS - USE 9695081	8	.Washer	.Bricka	5
0300	4	97 64 283		89), LH	1	.Sealing strip	.Tätningslist	5
0310	4	97 64 275		89), RH	1	.Sealing strip	.Tätningslist	5
0320	4	96 60 994		90), LH	1	.Sealing strip	.Tätningslist	3
0330	4	96 60 846		90), RH	1	.Sealing strip	.Tätningslist	3
0340	5	*97 80 107*		590) NLS	2	.Strip	.List	3
0350	6	97 79 604		560,36), LH	1	Pocket	Ficka	6
0360	6	*97 79 596*		560,36), RH NLS	1	Pocket	Ficka	6
0370	6	96 58 311		560,37), LH	1	Pocket	Ficka	6
0380	6	96 58 303		560,37), RH	1	Pocket	Ficka	6

36. Ch. --G1002347
37. Ch. G1002348--
38. Ch. --G1001658
39. Ch. G1001659--
89. Ch. --G1001658
90. Ch. G1001659--
560. Red Röd
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-E04

Door trim 1986
Rear door

Dörrklädsel 1986
Bakdörr

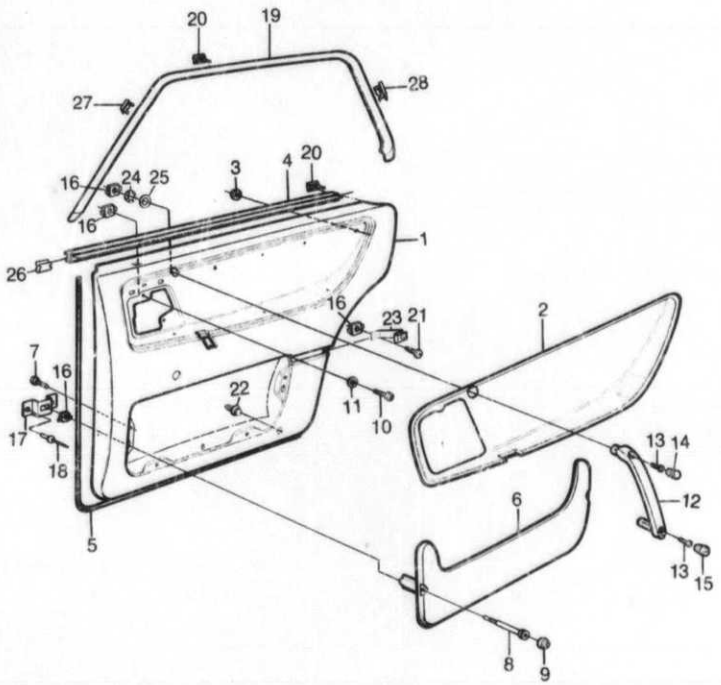

F4121 9000

1317	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400				TRIM COLOUR D13, D23				
0410	1	97 79 133		580,40), LH	1	Door trim	Dörrklädsel	6
0420	1	97 79 125		580,40), RH	1	Door trim	Dörrklädsel	6
0430	1	96 57 669		580,41), LH	1	Door trim	Dörrklädsel	6
0440	1	96 57 651		580,41), RH	1	Door trim	Dörrklädsel	6
0450	2	*97 80 388*		580,40), LH NLS	1	.Arm rest	.Armstöd	6
0460	2	*97 80 370*		580,40), RH NLS	1	.Arm rest	.Armstöd	6
0470	2	*96 57 768*		580,41), LH NLS	1	.Arm rest	.Armstöd	6
0480	2	96 57 750		580,41), RH	1	.Arm rest	.Armstöd	6
0490	3	*97 76 196*		NLS - USE 9695081	8	.Washer	.Bricka	5
0500	4	97 64 283		89), LH	1	.Sealing strip	.Tätningslist	5
0510	4	97 64 275		89), RH	1	.Sealing strip	.Tätningslist	5
0520	4	96 60 994		90), LH	1	.Sealing strip	.Tätningslist	3
0530	4	96 60 846		90), RH	1	.Sealing strip	.Tätningslist	3
0540	5	*97 80 123*		580) NLS	2	.Strip	.List	3
0550	6	*97 79 646*		580,40), LH NLS	1	Pocket	Ficka	6
0560	6	*97 79 638*		580,40), RH NLS	1	Pocket	Ficka	6
0570	6	*96 58 352*		580,41), LH NLS	1	Pocket	Ficka	6
0580	6	*96 58 345*		580,41), RH NLS	1	Pocket	Ficka	6
0590				TRIM COLOUR E13,E23,E33				
0600	1	98 95 830		570,42), LH	1	Door trim	Dörrklädsel	6
0610	1	*98 95 822*		570,42), RH NLS	1	Door trim	Dörrklädsel	6
0620	1	96 57 685		570,43), LH	1	Door trim	Dörrklädsel	6
0630	1	96 57 677		570,43), RH	1	Door trim	Dörrklädsel	6
0640	2	96 57 784		570), LH	1	.Arm rest	.Armstöd	6
0650	2	96 57 776		570), RH	1	.Arm rest	.Armstöd	6
0660	3	*97 76 196*		NLS - USE 9695081	8	.Washer	.Bricka	5
0670	4	97 64 283		89), LH	1	.Sealing strip	.Tätningslist	5
0680	4	97 64 275		89), RH	1	.Sealing strip	.Tätningslist	5
0690	4	96 60 994		90), LH	1	.Sealing strip	.Tätningslist	3
0700	4	96 60 846		90), RH	1	.Sealing strip	.Tätningslist	3
0710	5	98 95 970		570)	2	.Strip	.List	6
0720	6	*97 99 859*		570,42), LH NLS	1	Pocket	Ficka	6
0730	6	*97 99 842*		570,42), RH NLS	1	Pocket	Ficka	6
0740	6	96 58 378		570,43), LH	1	Pocket	Ficka	6
0750	6	96 58 360		570,43), RH	1	Pocket	Ficka	6
0760								
0770	7	79 71 393			8	Screw	Skruv	5
0780	8	97 80 156			4	Screw	Skruv	5
0790	9	97 77 178		590)	4	Cover	Täcklock	5
0800	9	97 77 160		560)	4	Cover	Täcklock	5
0810	9	97 77 186		580)	4	Cover	Täcklock	5
0820	9	97 99 875		570)	4	Cover	Täcklock	5
0830	10	80 59 396			2	Screw	Skruv	5
0840	11	80 29 944			2	Washer	Bricka	5
0850								
0860	12	97 79 190		590), LH	1	Handle	Handtag	5
0870	12	97 79 182		590), RH	1	Handle	Handtag	5
0880								
0890	12	97 79 174		560), LH	1	Handle	Handtag	5
0900	12	97 79 166		560), RH	1	Handle	Handtag	5
0910								
0920	12	97 79 216		580), LH	1	Handle	Handtag	5

40. Ch. --G1002054
41. Ch. G1002055--
42. Ch. --G1001942
43. Ch. G1001943--
89. Ch. --G1001658
90. Ch. G1001659--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-E06

Door trim 1986
Rear door

Dörrklädsel 1986
Bakdörr

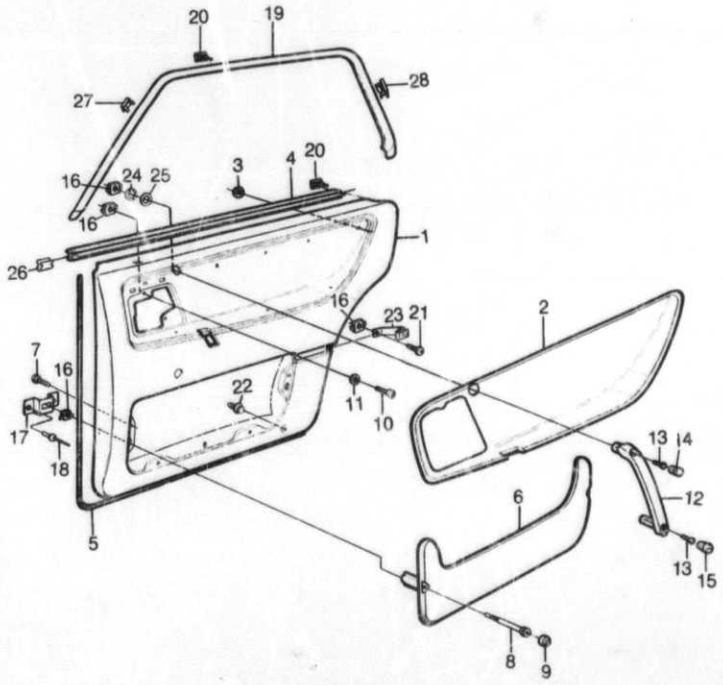

F4121 9000

1317	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0930	12	97 79 208		580), RH	1	Handle	Handtag	5
0940								
0950	12	98 95 871		570), LH	1	Handle	Handtag	5
0960	12	98 95 863		570), RH	1	Handle	Handtag	5
0970								
0980	13	80 59 420		(8059396)	4	Screw	Skruv	5
0990	14	97 76 485		590)	2	Cover washer	Täckbricka	5
1000	14	97 76 477		560)	2	Cover washer	Täckbricka	5
1010	14	97 76 493		580)	2	Cover washer	Täckbricka	5
1020	14	98 90 146		570)	2	Cover washer	Täckbricka	5
1030								
1040	15	97 76 527		590)	2	Cover washer	Täckbricka	5
1050	15	97 76 519		560)	2	Cover washer	Täckbricka	5
1060	15	97 76 535		580)	2	Cover washer	Täckbricka	5
1070	15	98 90 153		570)	2	Cover washer	Täckbricka	5
1080	16	79 74 231			20	Cage nut	Korgmutter	5
1090	17	97 79 844			2	Bracket	Hållare	6
1100	18	79 61 642			4	Rivet	Nit	5
1110	19	*96 94 746*		LH (9660093) NLS - USE 4268249	1	Upholstery	Klädsel	6
1110								
1120	19	*96 60 085*		RH NLS - USE 4268231	1	Upholstery	Klädsel	6
1130	20	96 60 143			5	Clamp	Klammer	5
1140	21	80 59 396			2	Screw	Skruv	5
1150	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1160	23	97 96 624		89)	2	Clamp	Klämma	6
1170	23	96 60 820		90)	4	Clamp	Klämma	6
1180	24	97 97 200			4	Washer	Bricka	5
1190	25	98 91 391		(9671389)	2	Washer	Bricka	5
1200	26	84 12 215			10	Clip	Clips	5
1210	27	96 60 150			6	Clamp	Klammer	5
1220	28	96 60 168			6	Clamp	Klammer	5


89. Ch. --G1001658
90. Ch. G1001659--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

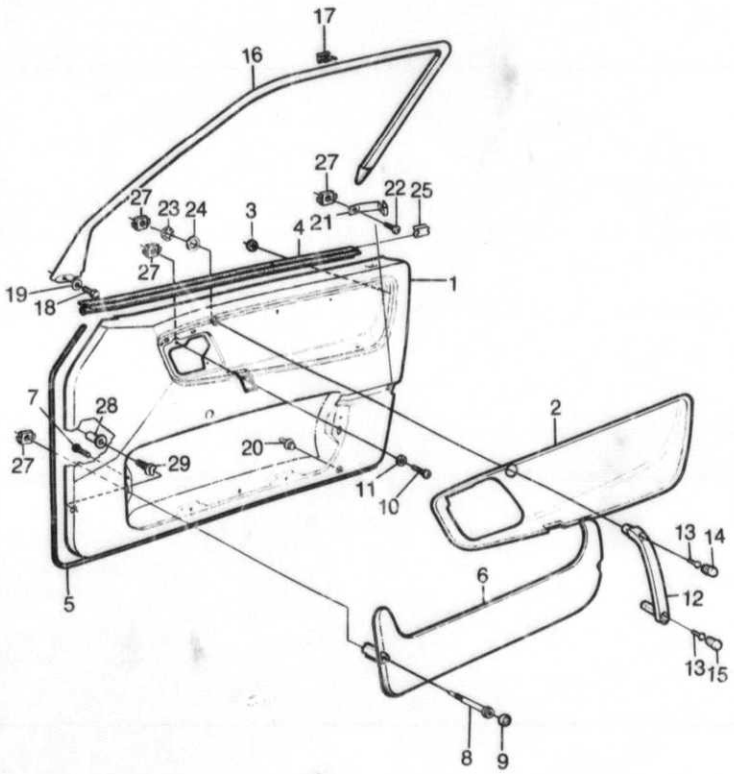

F4122 9000

Upholstery
5-E08
Door trim 1987
Front door

Klädsel
Dörrklädsel 1987
Framdörr

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A12,A23,A33				
0020	1	96 57 446		590), LH	1	Door trim	Dörrklädsel	6
0030	1	96 57 438		590), RH	1	Door trim	Dörrklädsel	6
0040	1	*98 91 508*		590,116), LH NLS - USE 9657446	1	Door trim	Dörrklädsel	6
0050	1	*98 91 490*		590,116), RH NLS - USE 9657438	1	Door trim	Dörrklädsel	6
0060	2	96 57 545		590), LH	1	.Arm rest	.Armstöd	6
0070	2	96 57 537		590), RH	1	.Arm rest	.Armstöd	6
0080	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0090	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0100	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0110	5	97 80 065		590)	2	.Strip	.List	6
0120	6	96 58 097		590), LH	1	Pocket	Ficka	6
0130	6	96 58 105		590), RH	1	Pocket	Ficka	6
0140				TRIM COLOUR B12,B23,B33				
0150	1	96 63 592		600), LH	1	Door trim	Dörrklädsel	6
0160	1	96 63 584		600), RH	1	Door trim	Dörrklädsel	6
0170	1	*96 63 634*		600,116), LH NLS - USE 9663592	1	Door trim	Dörrklädsel	6
0180	1	*96 63 626*		600,116), RH NLS - USE 9663584	1	Door trim	Dörrklädsel	6
0190	2	96 63 675		600), LH	1	.Arm rest	.Armstöd	6
0200	2	96 63 667		600), RH	1	.Arm rest	.Armstöd	6
0210	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0220	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0230	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0240	5	98 95 681		600)	2	.Strip	.List	6
0250	6	96 58 055		600), LH	1	Pocket	Ficka	6
0260	6	96 58 063		600), RH	1	Pocket	Ficka	6
0270				TRIM COLOUR C12,C23,C33				
0280	1	96 57 420		560), LH	1	Door trim	Dörrklädsel	6
0290	1	96 57 412		560), RH	1	Door trim	Dörrklädsel	6
0300	1	*98 91 482*		560,116), LH NLS - USE 9677444	1	Door trim	Dörrklädsel	6
0310	1	*98 91 474*		560,116), RH NLS - USE 9657412	1	Door trim	Dörrklädsel	6
0320	2	96 57 529		560), LH	1	.Arm rest	.Armstöd	6
0330	2	96 57 511		560), RH	1	.Arm rest	.Armstöd	6
0340	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0350	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0360	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0370	5	*97 80 057*		560) NLS	2	.Strip	.List	6
0380	6	96 58 071		560), LH	1	Pocket	Ficka	6
0390	6	96 58 089		560), RH	1	Pocket	Ficka	6


116. For cars with manual window regulators För bilar med manuella fönsterhissar
560. Red Röd
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

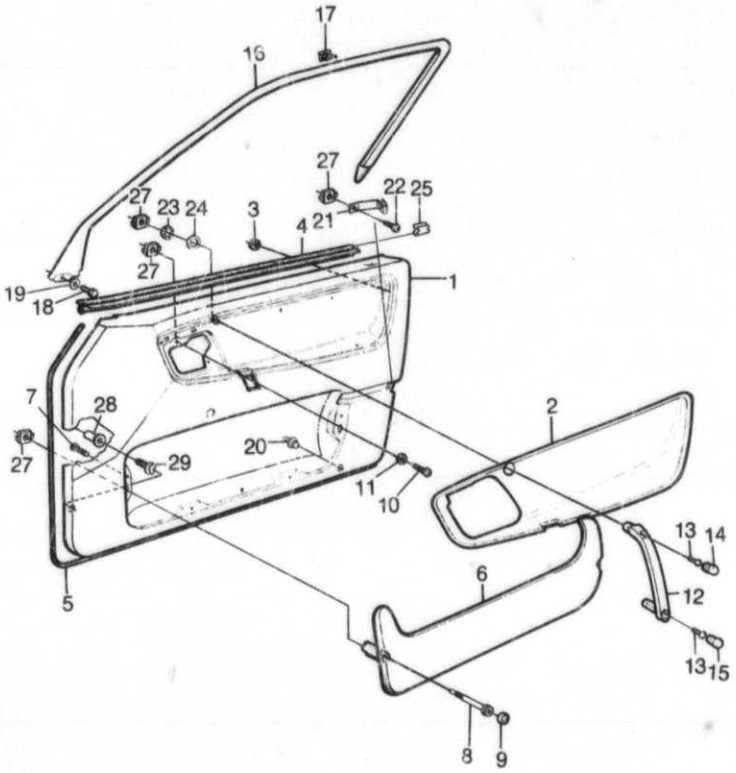

F4122 9000

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400				TRIM COLOUR D12, D23				
0410	1	96 63 618		580), LH	1	Door trim	Dörrklädsel	6
0420	1	96 63 600		580), RH	1	Door trim	Dörrklädsel	6
0430	1	*96 63 659*		580,116), LH NLS - USE 9663618	1	Door trim	Dörrklädsel	6
0440	1	*96 63 642*		580,116), RH NLS - USE 9663600	1	Door trim	Dörrklädsel	6
0450	2	96 63 691		580), LH	1	.Arm rest	.Armstöd	6
0460	2	96 63 683		580), RH	1	.Arm rest	.Armstöd	6
0470	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0480	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0490	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0500	5	97 80 073		580)	2	.Strip	.List	6
0510	6	96 58 113		580), LH	1	Pocket	Ficka	6
0520	6	*96 58 121*		580), RH NLS	1	Pocket	Ficka	6
0530								
0540				TRIM COLOUR E12,E23,E33				
0550	1	96 57 487		570), LH	1	Door trim	Dörrklädsel	6
0560	1	96 57 479		570), RH	1	Door trim	Dörrklädsel	6
0570	1	98 91 540		570,116), LH	1	Door trim	Dörrklädsel	6
0580	1	98 91 532		570,116), RH	1	Door trim	Dörrklädsel	6
0590	2	96 57 586		570), LH	1	.Arm rest	.Armstöd	6
0600	2	96 57 578		570), RH	1	.Arm rest	.Armstöd	6
0610	3	*97 76 196*		NLS - USE 9695081	7	.Washer	.Bricka	5
0620	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0630	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0640	5	98 95 699		570)	2	.Strip	.List	6
0650	6	96 58 139		570), LH	1	Pocket	Ficka	6
0660	6	96 58 147		570), RH	1	Pocket	Ficka	6
0670								
0680	7	79 71 393			8	Screw	Skruv	5
0690	8	97 80 156			4	Screw	Skruv	5
0700	9	97 77 178		590)	4	Cover	Täcklock	5
0710	9	97 99 867		600)	4	Cover	Täcklock	5
0720	9	97 77 160		560)	4	Cover	Täcklock	5
0730	9	97 77 186		580)	4	Cover	Täcklock	5
0740	9	97 99 875		570)	4	Cover	Täcklock	5
0750	10	73 99 264			2	Screw	Skruv	5
0760	11	80 29 944			2	Washer	Bricka	5
0770								
0780	12	97 76 436		590), LH	1	Handle	Handtag	5
0790	12	97 76 428		590), RH	1	Handle	Handtag	5
0800								
0810	12	98 90 096		600), LH	1	Handle	Handtag	5
0820	12	98 90 088		600), RH	1	Handle	Handtag	5
0830								
0840	12	97 76 410		560), LH	1	Handle	Handtag	5
0850	12	97 76 402		560), RH	1	Handle	Handtag	5
0860								
0870	12	97 76 451		580), LH	1	Handle	Handtag	5
0880	12	97 76 444		580), RH	1	Handle	Handtag	5
0890								
0900	12	98 90 112		570), LH	1	Handle	Handtag	5
0910	12	98 90 104		570), RH	1	Handle	Handtag	5
0920								
0930	13	73 99 264		(8059396)	4	Screw	Skruv	5
0940								


116. For cars with manual window regulators För bilar med manuella fönsterhissar
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

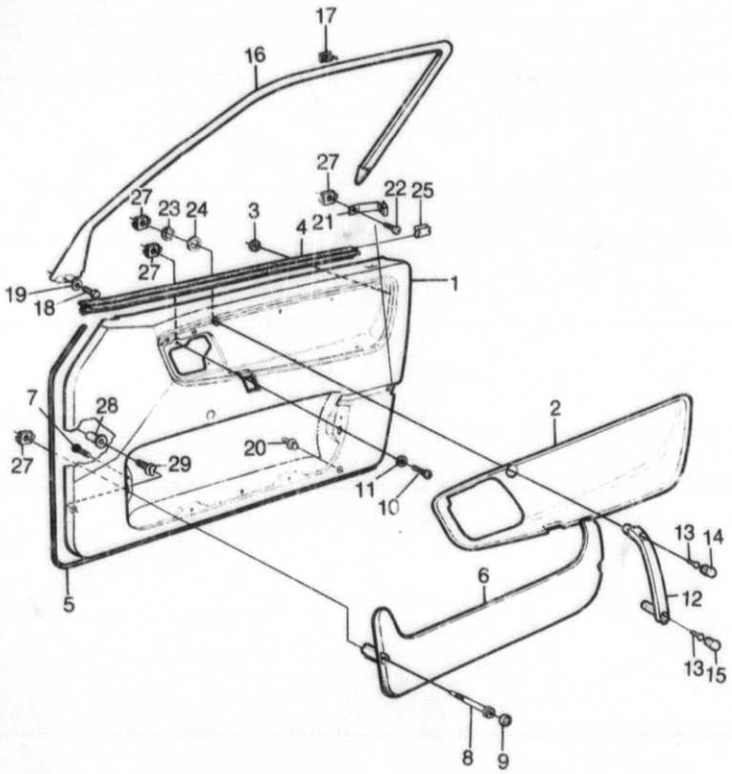

F4122 9000

1320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0950	14	97 76 485		590)	2	Cover washer	Täckbricka	5
0960	14	98 90 120		600)	2	Cover washer	Täckbricka	5
0970	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0980	14	97 76 493		580)	2	Cover washer	Täckbricka	5
0990	14	98 90 146		570)	2	Cover washer	Täckbricka	5
1000								
1010	15	97 76 527		590)	2	Cover washer	Täckbricka	5
1020	15	98 90 138		600)	2	Cover washer	Täckbricka	5
1030	15	97 76 519		560)	2	Cover washer	Täckbricka	5
1040	15	97 76 535		580)	2	Cover washer	Täckbricka	5
1050	15	98 90 153		570)	2	Cover washer	Täckbricka	5
1060								
1070	16	96 60 044		159), LH	1	Upholstery	Klädsel	6
1080	16	96 72 742		160,264), LH	1	Upholstery	Klädsel	6
1090	16	96 60 044		265), LH	1	Upholstery	Klädsel	6
1100	16	*96 60 036*		159), RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1110	16	96 72 734		160,264), RH	1	Upholstery	Klädsel	6
1120	16	*96 60 036*		265), RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1130	17	96 60 143			24	Clamp	Klammer	5
1140	18	79 77 689			2	Screw	Skruv	5
1150	19	96 60 077			2	Washer	Bricka	5
1160	20	97 96 939			2	Clamp	Klämma	6
1170	21	97 96 616			2	Clamp	Klämma	6
1180	22	73 99 264			2	Screw	Skruv	5
1190	23	97 97 200			2	Washer	Bricka	5
1200	24	98 91 391		(9671389)	2	Washer	Bricka	5
1210	25	84 12 215			10	Clip	Clips	5
1220	27	79 74 231			X	Cage nut	Korgmutter	5
1230	28	95 45 906			2	Sleeve	Hylsa	5
1240	29	95 45 888			2	Upholstery clip	Klädselfäste	5


159. Ch. --H1013929, --H8000563
160. Ch. H1013930--, H8000564--
264. Ch. --H1034685, --H8002013
265. Ch. H1034686--, H8002014--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

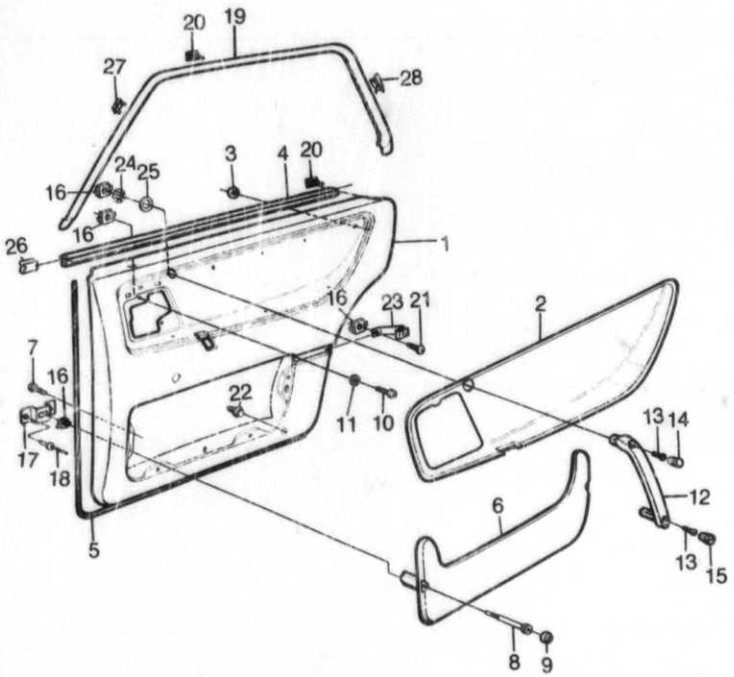

F4123 9000

1322	Pos	Part No/Art No	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A12,A23,A33				
0020	1	96 57 644		590), LH	1	Door trim	Dörrklädsel	6
0030	1	96 57 636		590), RH	1	Door trim	Dörrklädsel	6
0040	1	*98 91 698*		590,116), LH NLS - USE 9657644	1	Door trim	Dörrklädsel	6
0050	1	*98 91 680*		590,116), RH NLS - USE 9657636	1	Door trim	Dörrklädsel	6
0060	2	96 57 743		590), LH	1	.Arm rest	.Armstöd	6
0070	2	96 57 735		590), RH	1	.Arm rest	.Armstöd	6
0080	3	96 95 081			8	.Washer	.Bricka	5
0090	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0100	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0110	5	97 80 115		590)	2	.Strip	.List	3
0120	6	96 58 337		590), LH	1	Pocket	Ficka	6
0130	6	96 58 329		590), RH	1	Pocket	Ficka	6
0140				TRIM COLOUR b12,B23,B33				
0150	1	96 63 758		600), LH	1	Door trim	Dörrklädsel	6
0160	1	96 63 741		600), RH	1	Door trim	Dörrklädsel	6
0170	1	*96 63 790*		600,116), LH NLS - USE 9663758	1	Door trim	Dörrklädsel	6
0180	1	*96 63 782*		600,116), RH NLS - USE 9663741	1	Door trim	Dörrklädsel	6
0190	2	96 63 832		600), LH	1	.Arm rest	.Armstöd	6
0200	2	96 63 824		600), RH	1	.Arm rest	.Armstöd	6
0210	3	96 95 081			8	.Washer	.Bricka	5
0220	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0230	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0240	5	98 95 962		600)	2	.Strip	.List	6
0250	6	96 58 295		600), LH	1	Pocket	Ficka	6
0260	6	96 58 287		600), RH	1	Pocket	Ficka	6
0270				TRIM COLOUR C12,C23,C33				
0280	1	96 57 628		560), LH	1	Door trim	Dörrklädsel	6
0290	1	96 57 610		560), RH	1	Door trim	Dörrklädsel	6
0300	1	*98 91 672*		560,116), LH NLS - USE 9657628	1	Door trim	Dörrklädsel	6
0310	1	*98 91 664*		560,116), RH NLS - USE 9657610	1	Door trim	Dörrklädsel	6
0320	2	96 57 727		560), LH	1	.Arm rest	.Armstöd	6
0330	2	96 57 719		560), RH	1	.Arm rest	.Armstöd	6
0340	3	96 95 081			8	.Washer	.Bricka	5
0350	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0360	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0370	5	*97 80 107*		560) NLS	2	.Strip	.List	3
0380	6	96 58 311		560), LH	1	Pocket	Ficka	6
0390	6	96 58 303		560), RH	1	Pocket	Ficka	6


116. For cars with manual window regulators — För bilar med manuella fönsterhissar
560. Red — Röd
590. Yellow — Gul
600. Brown — Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

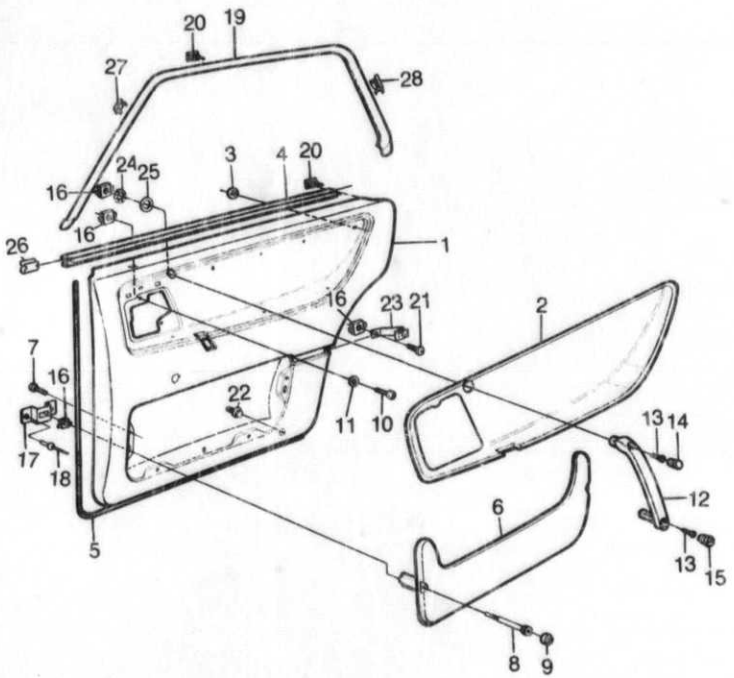

F4123 9000

1322	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400				TRIM COLOUR D12, D23				
0410	1	96 63 774		580), LH	1	Door trim	Dörrklädsel	6
0420	1	96 63 766		580), RH	1	Door trim	Dörrklädsel	6
0430	1	*96 63 816*		580,116), LH NLS - USE 9663774	1	Door trim	Dörrklädsel	6
0440	1	*96 63 808*		580,116), RH NLS - USE 9663766	1	Door trim	Dörrklädsel	6
0450	2	96 63 857		580), LH	1	.Arm rest	.Armstöd	6
0460	2	96 63 840		580), RH	1	.Arm rest	.Armstöd	6
0470	3	96 95 081			8	.Washer	.Bricka	5
0480	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0490	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0500	5	*97 80 123*		580) NLS	2	.Strip	.List	3
0510	6	*96 58 352*		580), LH NLS	1	Pocket	Ficka	6
0520	6	*96 58 345*		580), RH NLS	1	Pocket	Ficka	6
0525								
0530				TRIM COLOUR E12,E23,E33				
0540	1	96 57 685		570), LH	1	Door trim	Dörrklädsel	6
0550	1	96 57 677		570), RH	1	Door trim	Dörrklädsel	6
0560	1	98 91 730		570,116), LH	1	Door trim	Dörrklädsel	6
0570	1	*98 91 722*		570,116), RH NLS - USE 9657677	1	Door trim	Dörrklädsel	6
0580	2	96 57 784		570), LH	1	.Arm rest	.Armstöd	6
0590	2	96 57 776		570), RH	1	.Arm rest	.Armstöd	6
0600	3	96 95 081			8	.Washer	.Bricka	5
0610	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0620	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0630	5	98 95 970		570)	2	.Strip	.List	6
0640	6	96 58 378		570), LH	1	Pocket	Ficka	6
0650	6	96 58 360		570), RH	1	Pocket	Ficka	6
0660								
0670	7	79 71 393			8	Screw	Skruv	5
0680	8	97 80 156			4	Screw	Skruv	5
0690	9	97 77 178		590)	4	Cover	Täcklock	5
0700	9	97 99 867		600)	4	Cover	Täcklock	5
0710	9	97 77 160		560)	4	Cover	Täcklock	5
0720	9	97 77 186		580)	4	Cover	Täcklock	5
0730	9	97 99 875		570)	4	Cover	Täcklock	5
0740	10	73 99 264			2	Screw	Skruv	5
0750	11	80 29 944			2	Washer	Bricka	5
0760								
0770	12	97 79 190		590), LH	1	Handle	Handtag	5
0780	12	97 79 182		590), RH	1	Handle	Handtag	5
0790								
0800	12	98 95 855		600), LH	1	Handle	Handtag	5
0810	12	*98 95 848*		600), RH NLS	1	Handle	Handtag	5
0820								
0830	12	97 79 174		560), LH	1	Handle	Handtag	5
0840	12	97 79 166		560), RH	1	Handle	Handtag	5
0850								
0860	12	97 79 216		580), LH	1	Handle	Handtag	5
0870	12	97 79 208		580), RH	1	Handle	Handtag	5
0880								
0890	12	98 95 871		570), LH	1	Handle	Handtag	5
0900	12	98 95 863		570), RH	1	Handle	Handtag	5
0910								
0920	13	73 99 264		(8059396)	4	Screw	Skruv	5

116. For cars with manual window regulators För bilar med manuella fönsterhissar
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-E18

Door trim 1987
Rear door

Dörrklädsel 1987
Bakdörr

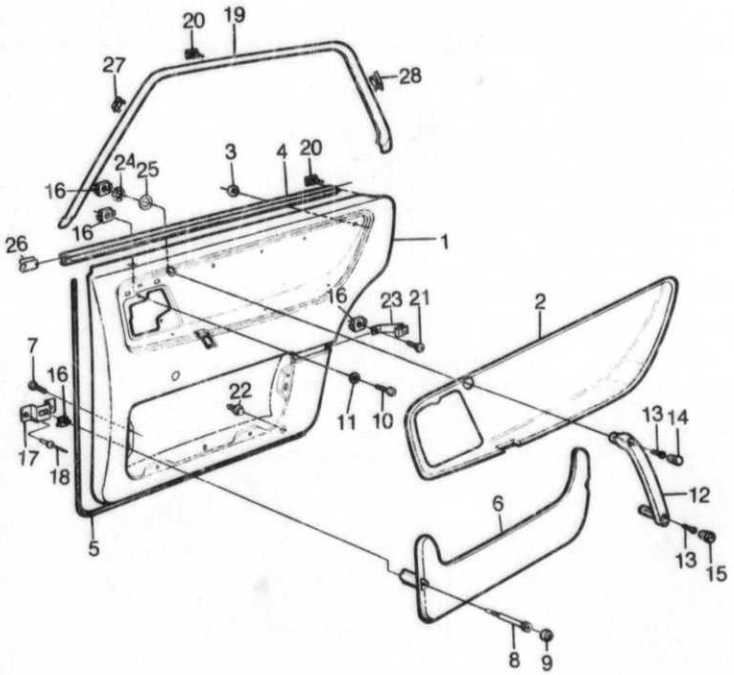

F4123 9000

1322	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0930								
0940	14	97 76 485		590)	2	Cover washer	Täckbricka	5
0950	14	98 90 120		600)	2	Cover washer	Täckbricka	5
0960	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0970	14	97 76 493		580)	2	Cover washer	Täckbricka	5
0980	14	98 90 146		570)	2	Cover washer	Täckbricka	5
0990								
1000	15	97 76 527		590)	2	Cover washer	Täckbricka	5
1010	15	98 90 138		600)	2	Cover washer	Täckbricka	5
1020	15	97 76 519		560)	2	Cover washer	Täckbricka	5
1030	15	97 76 535		580)	2	Cover washer	Täckbricka	5
1040	15	98 90 153		570)	2	Cover washer	Täckbricka	5
1050								
1060	16	79 74 231			20	Cage nut	Korgmutter	5
1070	17	97 79 844			2	Bracket	Hållare	6
1080	18	79 61 642			4	Rivet	Nit	5
1090	19	*96 94 746*		159), LH (9660093) NLS - USE 4268249	1	Upholstery	Klädsel	6
1090								
1100	19	96 72 783		160,280), LH	1	Upholstery	Klädsel	6
1110	19	*96 94 746*		281), LH (9660093) NLS - USE 4268249	1	Upholstery	Klädsel	6
1110								
1120	19	*96 60 085*		159), RH NLS - USE 4268231	1	Upholstery	Klädsel	6
1120								
1130	19	96 72 775		160,280), RH	1	Upholstery	Klädsel	6
1140	19	*96 60 085*		281), RH NLS - USE 4268231	1	Upholstery	Klädsel	6
1140								
1150	20	96 60 143			5	Clamp	Klammer	5
1160	21	80 59 396			2	Screw	Skruv	5
1170	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1180	23	96 60 820			4	Clamp	Klämma	6
1190	24	97 97 200			2	Washer	Bricka	5
1200	25	98 91 391		(9671389)	2	Washer	Bricka	5
1210	26	84 12 215			10	Clip	Clips	5
1220	27	96 60 150			6	Clamp	Klammer	5
1230	28	96 60 168			6	Clamp	Klammer	5

159. Ch. --H1013929, --H8000563
160. Ch. H1013930--, H8000564--
280. Ch. --H1034685, --H8002013
281. Ch. H1034686--, H8002014--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-E20

Door trim 1988
Front door

Dörrklädsel 1988
Framdörr

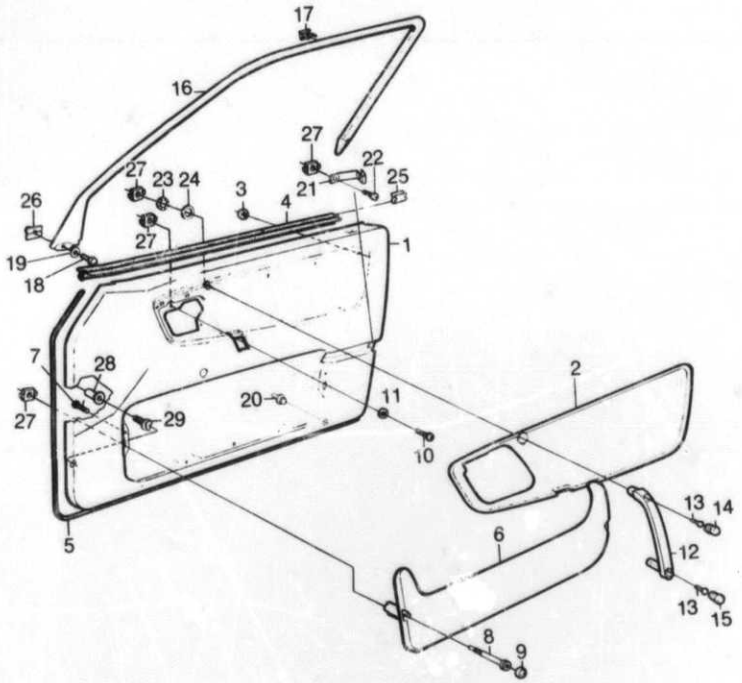

F4124 9000

1325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A14,A24,A33				
0020	1	96 57 446		590), LH	1	Door trim	Dörrklädsel	6
0030	1	96 57 438		590), RH	1	Door trim	Dörrklädsel	6
0040	1	*98 91 508*		590,116), LH NLS - USE 9657446	1	Door trim	Dörrklädsel	6
0050	1	*98 91 490*		590,116), RH NLS - USE 9657438	1	Door trim	Dörrklädsel	6
0060	2	96 57 545		590), LH	1	.Arm rest	.Armstöd	6
0070	2	96 57 537		590), RH	1	.Arm rest	.Armstöd	6
0080	3	96 95 081			7	.Washer	.Bricka	5
0090	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0100	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0110	5	97 80 065		590)	2	.Strip	.List	6
0120	6	96 58 097		590), LH	1	Pocket	Ficka	6
0130	6	96 58 105		590), RH	1	Pocket	Ficka	6
0140				TRIM COLOUR B14,B24,B33				
0150	1	96 77 220		600), LH	1	Door trim	Dörrklädsel	6
0160	1	96 77 212		600), RH	1	Door trim	Dörrklädsel	6
0170	1	*96 77 204*		600,116), LH NLS - USE 9677220	1	Door trim	Dörrklädsel	6
0180	1	96 77 196		600,116), RH	1	Door trim	Dörrklädsel	6
0190	2	96 77 246		600), LH	1	.Arm rest	.Armstöd	6
0200	2	96 77 238		600), RH	1	.Arm rest	.Armstöd	6
0210	3	96 95 081			7	.Washer	.Bricka	5
0220	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0230	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0240	5	95 72 355		600)	2	.Strip	.List	6
0250	6	96 58 055		600), LH	1	Pocket	Ficka	6
0260	6	96 58 063		600), RH	1	Pocket	Ficka	6
0270				TRIM COLOUR C14,C24,C33				
0280	1	96 77 444		560), LH	1	Door trim	Dörrklädsel	6
0290	1	96 77 436		560), RH	1	Door trim	Dörrklädsel	6
0300	1	96 77 428		560,116), LH	1	Door trim	Dörrklädsel	6
0310	1	96 77 410		560,116), RH	1	Door trim	Dörrklädsel	6
0320	2	96 57 529		560), LH	1	.Arm rest	.Armstöd	6
0330	2	96 57 511		560), RH	1	.Arm rest	.Armstöd	6
0340	3	96 95 081			7	.Washer	.Bricka	5
0350	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0360	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0370	5	95 72 363		560)	2	.Strip	.List	6
0380	6	96 77 501		560), LH	1	Pocket	Ficka	6
0390	6	96 77 493		560), RH	1	Pocket	Ficka	6
0400				TRIM COLOUR E14,E24,E33				
0410	1	96 57 487		570), LH	1	Door trim	Dörrklädsel	6
0420	1	96 57 479		570), RH	1	Door trim	Dörrklädsel	6
0430	1	98 91 540		570,116), LH	1	Door trim	Dörrklädsel	6
0440	1	98 91 532		570,116), RH	1	Door trim	Dörrklädsel	6
0450	2	96 57 586		570), LH	1	.Arm rest	.Armstöd	6
0460	2	96 57 578		570), RH	1	.Arm rest	.Armstöd	6
0470	3	96 95 081			7	.Washer	.Bricka	5
0480	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0490	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0500	5	98 95 699		570)	2	.Strip	.List	6
0510	6	96 58 139		570), LH	1	Pocket	Ficka	6
0520	6	96 58 147		570), RH	1	Pocket	Ficka	6
0530								

116. For cars with manual window regulators För bilar med manuella fönsterhissar
560. Red Röd
570. Grey Grå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-E22

Door trim 1988
Front door

Klädsel

Dörrklädsel 1988
Framdörr

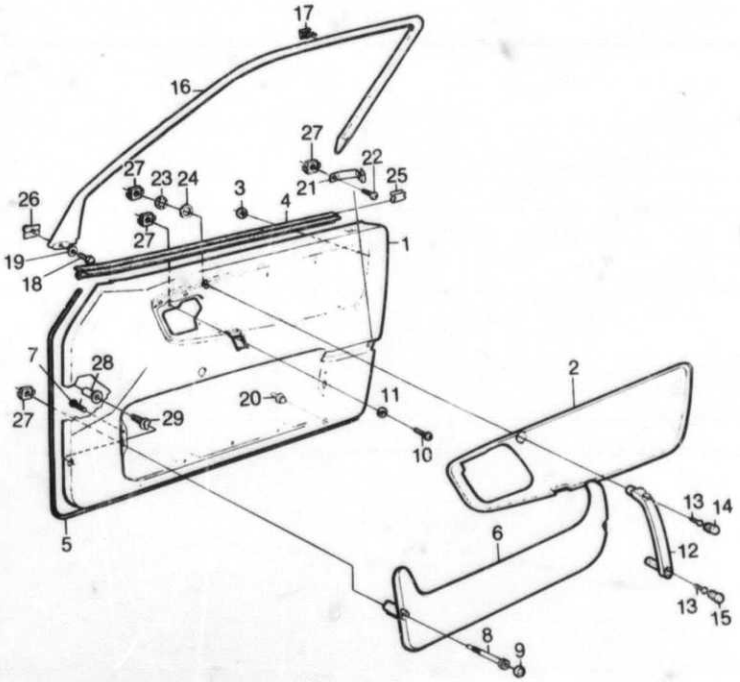

F4124 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR F14, F24				
1	96 77 733		580), LH	1	Door trim	Dörrklädsel	6
1	96 77 725		580), RH	1	Door trim	Dörrklädsel	6
1	96 77 717		580,116), LH NLS - USE 9677733	1	Door trim	Dörrklädsel	6
1	96 77 709		580,116), RH	1	Door trim	Dörrklädsel	6
2	96 77 808		580), LH	1	. Arm rest	. Armstöd	6
2	96 77 790		580), RH	1	. Arm rest	. Armstöd	6
3	96 95 081			7	. Washer	. Bricka	5
4	96 60 986		LH	1	. Sealing strip	. Tätningslist	6
4	96 60 838		RH	1	. Sealing strip	. Tätningslist	6
5	96 77 766		580)	2	. Strip	. List	6
6	96 77 865		580), LH	1	Pocket	Ficka	6
6	96 77 857		580), RH	1	Pocket	Ficka	6
7	79 71 393			8	Screw	Skruv	5
8	97 80 156			4	Screw	Skruv	5
9	97 77 178		590)	4	Cover	Täcklock	5
9	97 99 867		600)	4	Cover	Täcklock	5
9	97 77 160		560)	4	Cover	Täcklock	5
9	97 99 875		570)	4	Cover	Täcklock	5
9	96 75 612		580)	4	Cover	Täcklock	5
10	73 99 264			2	Screw	Skruv	5
11	96 56 398			2	Washer	Bricka	5
12	97 76 436		590), LH	1	Handle	Handtag	5
12	97 76 428		590), RH	1	Handle	Handtag	5
12	98 90 096		600), LH	1	Handle	Handtag	5
12	98 90 088		600), RH	1	Handle	Handtag	5
12	97 76 410		560), LH	1	Handle	Handtag	5
12	97 76 402		560), RH	1	Handle	Handtag	5
12	98 90 112		570), LH	1	Handle	Handtag	5
12	98 90 104		570), RH	1	Handle	Handtag	5
12	96 75 588		580), LH	1	Handle	Handtag	5
12	96 75 570		580), RH	1	Handle	Handtag	5
13	73 99 264		(8059396)	4	Screw	Skruv	5
14	97 76 485		590)	2	Cover washer	Täckbricka	5
14	98 90 120		600)	2	Cover washer	Täckbricka	5
14	97 76 477		560)	2	Cover washer	Täckbricka	5
14	98 90 146		570)	2	Cover washer	Täckbricka	5
14	96 75 596		580)	2	Cover washer	Täckbricka	5
15	97 76 527		590)	2	Cover washer	Täckbricka	5
15	98 90 138		600)	2	Cover washer	Täckbricka	5
15	97 76 519		560)	2	Cover washer	Täckbricka	5
15	98 90 153		570)	2	Cover washer	Täckbricka	5
15	96 75 604		580)	2	Cover washer	Täckbricka	5
16	96 60 044		292), LH	1	Upholstery	Klädsel	6


116. For cars with manual window regulators — För bilar med manuella fönsterhissar
292. Ch. --J1006384, --J2002776, --J8000563
560. Red — Röd
570. Grey — Grå
580. Blue — Blå
590. Yellow — Gul
600. Brown — Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

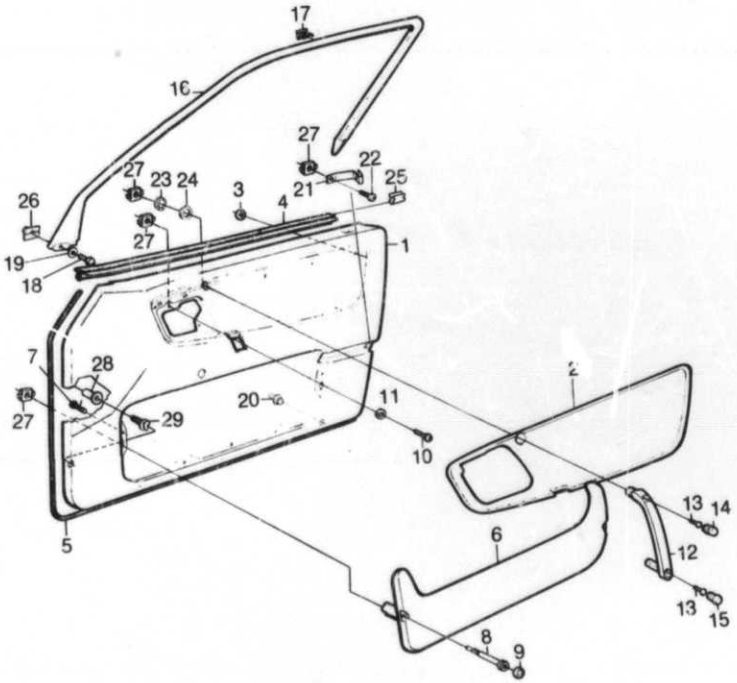

F4124 9000

1325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1080	16	*96 94 688*		293), LH NLS - USE 4268223	1	Upholstery	Klädsel	6
1090	16	*96 60 036*		292), RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1100	16	*96 94 670*		293), RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1110	17	96 60 143			24	Clamp	Klammer	5
1120	18	79 77 689		380)	2	Screw	Skruv	5
1130	18	*79 72 896*		381) NLS - USE 7965584, 8073090	2	Screw	Skruv	5
1140	19	96 60 077			2	Washer	Bricka	5
1150	20	97 96 939			2	Clamp	Klämma	6
1160	21	97 96 616			2	Clamp	Klämma	6
1170	22	73 99 264			4	Screw	Skruv	5
1180	23	97 97 200			2	Washer	Bricka	5
1190	24	98 91 391		(9671389)	2	Washer	Bricka	5
1200	25	84 12 215			10	Clip	Clips	5
1210	26	96 71 033		381)	2	Clamp	Klämma	6
1220	27	79 74 231			X	Cage nut	Korgmutter	5
1230	28	95 45 906			2	Sleeve	Hylsa	5
1240	29	95 45 898			2	Upholstery clip	Klädselfäste	5

292. Ch. --J1006384, --J2002776, --J8000563
293. Ch. J1006385--, J2002777--, J8000564--
380. Ch --J1002110, --J2000464, --J8000270
381. Ch J1002111--, J2000465--, J8000271--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Upholstery

5-F02

Door trim 1988
Rear door

Klädsel

Dörrklädsel 1988
Bakdörr

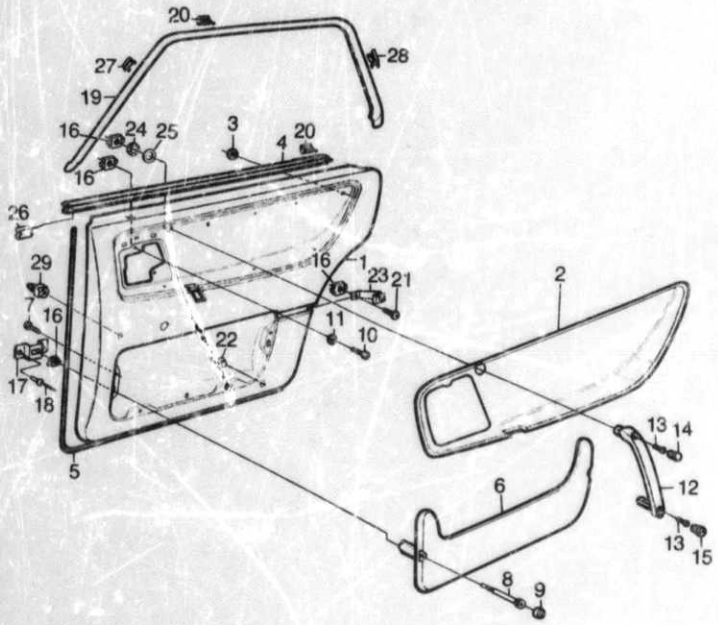

F4125 9000

1327	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A14,A24,A33				
0020	1	96 57 644		590), LH	1	Door trim	Dörrklädsel	6
0030	1	96 57 636		590), RH	1	Door trim	Dörrklädsel	6
0040	1	*98 91 698*		590,116), LH NLS - USE 9657644	1	Door trim	Dörrklädsel	6
0050	1	*98 91 680*		590,116), RH NLS - USE 9657636	1	Door trim	Dörrklädsel	6
0060	1	96 79 242		590,240), LH	1	Door trim	Dörrklädsel	6
0070	1	96 79 259		590,240), RH	1	Door trim	Dörrklädsel	6
0080	2	96 57 743		590), LH	1	.Arm rest	.Armstöd	6
0090	2	96 57 735		590), RH	1	.Arm rest	.Armstöd	6
0100	3	96 95 081			8	.Washer	.Bricka	5
0110	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0120	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0130	5	97 80 115		590)	2	.Strip	.List	3
0140	6	96 58 337		590), LH	1	Pocket	Ficka	6
0150	6	96 58 329		590), RH	1	Pocket	Ficka	6
0160				TRIM COLOUR B14,B24,B33				
0170	1	96 77 345		600), LH	1	Door trim	Dörrklädsel	6
0180	1	96 77 337		600), RH	1	Door trim	Dörrklädsel	6
0190	1	96 77 303		600,116), LH	1	Door trim	Dörrklädsel	6
0200	1	96 77 295		600,116), RH	1	Door trim	Dörrklädsel	6
0210	1	96 79 200		600,240), LH	1	Door trim	Dörrklädsel	6
0220	1	96 79 218		600,240), RH	1	Door trim	Dörrklädsel	6
0230	2	96 77 360		600), LH	1	.Arm rest	.Armstöd	6
0240	2	96 77 352		600), RH	1	.Arm rest	.Armstöd	6
0250	3	96 95 081			8	.Washer	.Bricka	5
0260	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0270	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0280	5	95 72 371		600)	2	.Strip	.List	6
0290	6	96 58 295		600), LH	1	Pocket	Ficka	6
0300	6	96 58 287		600), RH	1	Pocket	Ficka	6
0310				TRIM COLOUR C14,C24,C33				
0320	1	96 77 584		560), LH	1	Door trim	Dörrklädsel	6
0330	1	96 77 576		560), RH	1	Door trim	Dörrklädsel	6
0340	1	96 77 568		560,116), LH	1	Door trim	Dörrklädsel	6
0350	1	96 77 550		560,116), RH	1	Door trim	Dörrklädsel	6
0360	1	96 79 226		560,240), LH	1	Door trim	Dörrklädsel	6
0370	1	96 79 234		560,240), RH	1	Door trim	Dörrklädsel	6
0380	2	96 57 727		560), LH	1	.Arm rest	.Armstöd	6
0390	2	96 57 719		560), RH	1	.Arm rest	.Armstöd	6
0400	3	96 95 081			8	.Washer	.Bricka	5
0410	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0420	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0430	5	95 72 389		560)	2	.Strip	.List	6
0440	6	96 77 642		560), LH	1	Pocket	Ficka	6
0450	6	96 77 634		560), RH	1	Pocket	Ficka	6
0460								

116. For cars with manual window regulators För bilar med manuella fönsterhissar
240. For cars with door fan För bilar med dörrfläkt
560. Red Röd
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3E	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-F04 Door trim 1988 Rear door

Klädsel

Dörrklädsel 1988 Bakdörr

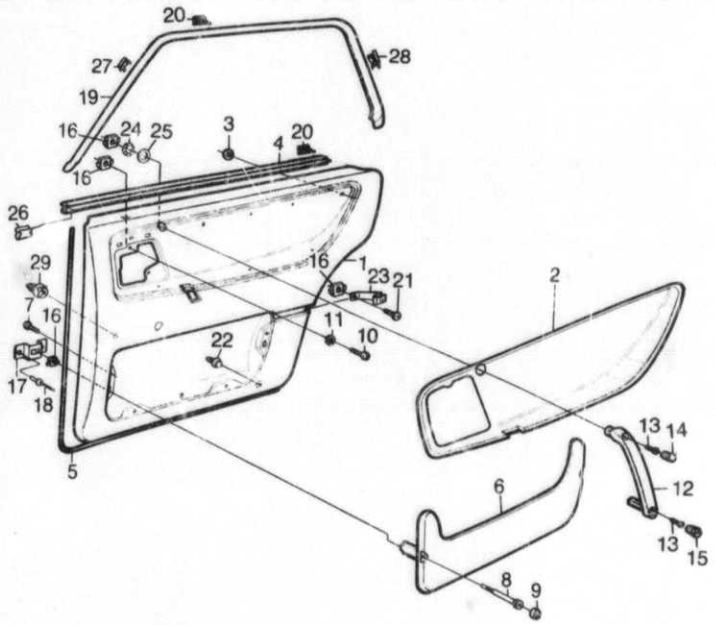

F4125 9000

1327	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470				TRIM COLOUR E14,E24,E33				
0480	1	96 57 685		570), LH	1	Door trim	Dörrklädsel	6
0490	1	96 57 677		570), RH	1	Door trim	Dörrklädsel	6
0500	1	98 91 730		570,116), LH	1	Door trim	Dörrklädsel	6
0510	1	*98 91 722*		570,116), RH NLS - USE 9657677	1	Door trim	Dörrklädsel	6
0520	1	96 79 267		570,240), LH	1	Door trim	Dörrklädsel	6
0530	1	96 79 275		570,240), RH	1	Door trim	Dörrklädsel	6
0540	2	96 57 784		570), LH	1	.Arm rest	.Armstöd	6
0550	2	96 57 776		570), RH	1	.Arm rest	.Armstöd	6
0560	3	96 95 081			8	.Washer	.Bricka	5
0570	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0580	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0590	5	98 95 970		570)	2	.Strip	.List	6
0600	6	96 58 378		570), LH	1	Pocket	Ficka	6
0610	6	96 58 360		570), RH	1	Pocket	Ficka	6
0620				TRIM COLOUR F14, F24				
0630	1	96 77 956		580), LH	1	Door trim	Dörrklädsel	6
0640	1	96 77 949		580), RH	1	Door trim	Dörrklädsel	6
0650	1	96 77 931		580,116), LH	1	Door trim	Dörrklädsel	6
0660	1	96 77 923		580,116), RH	1	Door trim	Dörrklädsel	6
0670	1	96 79 283		580,240), LH	1	Door trim	Dörrklädsel	6
0680	1	96 79 291		580,240), RH	1	Door trim	Dörrklädsel	6
0690	2	96 78 012		580), LH	1	.Arm rest	.Armstöd	6
0700	2	96 78 004		580), RH	1	.Arm rest	.Armstöd	6
0710	3	96 95 081			8	.Washer	.Bricka	5
0720	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0730	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0740	5	96 78 020		580)	2	.Strip	.List	3
0750	6	96 78 087		580), LH	1	Pocket	Ficka	6
0760	6	96 78 079		580), RH	1	Pocket	Ficka	6
0770								
0780	7	79 71 393			8	Screw	Skruv	5
0790	8	97 80 156			4	Screw	Skruv	5
0800	9	97 77 178		590)	4	Cover	Täcklock	5
0810	9	97 99 867		600)	4	Cover	Täcklock	5
0820	9	97 77 160		560)	4	Cover	Täcklock	5
0830	9	97 99 875		570)	4	Cover	Täcklock	5
0840	9	96 75 612		580)	4	Cover	Täcklock	5
0850	10	73 99 264			2	Screw	Skruv	5
0860	11	96 56 398			2	Washer	Bricka	5
0870								
0880	12	97 79 190		590), LH	1	Handle	Handtag	5
0890	12	97 79 182		590), RH	1	Handle	Handtag	5
0900								
0910	12	98 95 855		600), LH	1	Handle	Handtag	5
0920	12	*98 95 848*		600), RH NLS	1	Handle	Handtag	5
0930								
0940	12	97 79 174		560), LH	1	Handle	Handtag	5
0950	12	97 79 166		560), RH	1	Handle	Handtag	5
0960								
0970	12	98 95 871		570), LH	1	Handle	Handtag	5
0980	12	98 95 863		570), RH	1	Handle	Handtag	5
0990								
1000	12	96 75 638		580), LH	1	Handle	Handtag	5
1010	12	96 75 620		580), RH	1	Handle	Handtag	5

116. For cars with manual window regulators För bilar med manuella fönsterhissar
240. For cars with door fan För bilar med dörrfläkt
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F06

Door trim 1988
Rear door

Dörrklädsel 1988
Bakdörr

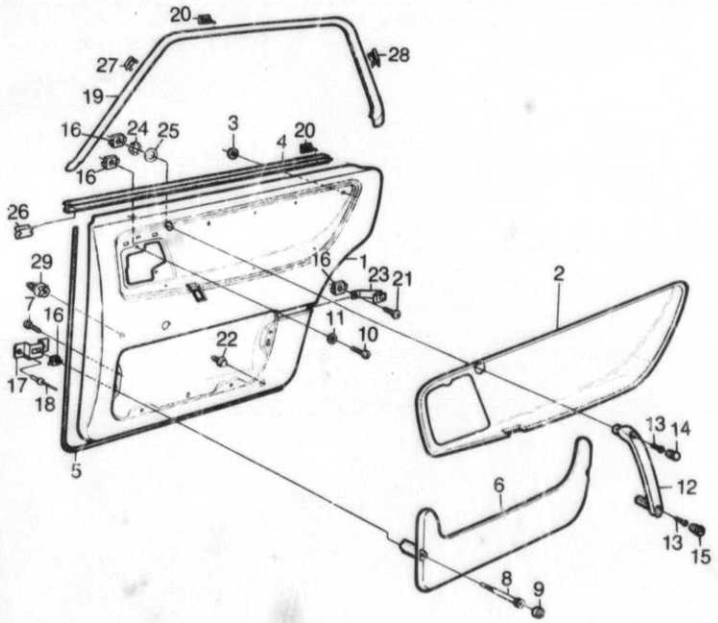

F4125 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1020							
1030	13	73 99 264	(8059396)	4	Screw	Skruv	5
1040							
1050	14	97 76 485	590)	2	Cover washer	Täckbricka	5
1060	14	98 90 120	600)	2	Cover washer	Täckbricka	5
1070	14	97 76 477	560)	2	Cover washer	Täckbricka	5
1080	14	98 90 146	570)	2	Cover washer	Täckbricka	5
1090	14	96 75 596	580)	2	Cover washer	Täckbricka	5
1100							
1110	15	97 76 527	590)	2	Cover washer	Täckbricka	5
1120	15	98 90 138	600)	2	Cover washer	Täckbricka	5
1130	15	97 76 519	560)	2	Cover washer	Täckbricka	5
1140	15	98 90 153	570)	2	Cover washer	Täckbricka	5
1150	15	96 75 604	580)	2	Cover washer	Täckbricka	5
1160							
1170	16	79 74 231		20	Cage nut	Korgmutter	5
1180	17	97 79 844		2	Bracket	Hållare	6
1190	18	79 81 642		4	Rivet	Nit	5
1200	19	*96 94 746*	LH (9660093) NLS - USE 4268249	1	Upholstery	Klädsel	6
1210	19	*96 60 085*	292), RH NLS - USE 4268231	1	Upholstery	Klädsel	6
1220	19	96 94 738	293), RH	1	Upholstery	Klädsel	6
1230	20	96 60 143		5	Clamp	Klammer	5
1240	21	80 59 396		2	Screw	Skruv	5
1250	22	*97 94 686*	NLS - USE 9796939	2	Clamp	Klämma	6
1260	23	96 60 820		4	Clamp	Klämma	6
1270	24	97 97 200		2	Washer	Bricka	5
1280	25	98 91 391	(9671389)	2	Washer	Bricka	5
1290	26	84 12 215		10	Clip	Clips	5
1300	27	96 60 150		6	Clamp	Klammer	5
1310	28	96 60 168		6	Clamp	Klammer	5
1320	29	96 78 996	240)	2	Clamp	Klämma	5

240. For cars with door fan För bilar med dörrfläkt
292. Ch. --J1006384, --J2002776, --J8000563
293. Ch. J1006385--, J2002777--, J8000564--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-F08 Door trim 1989 500), Front door

Klädsel

Dörrklädsel 1989 500), Framdörr

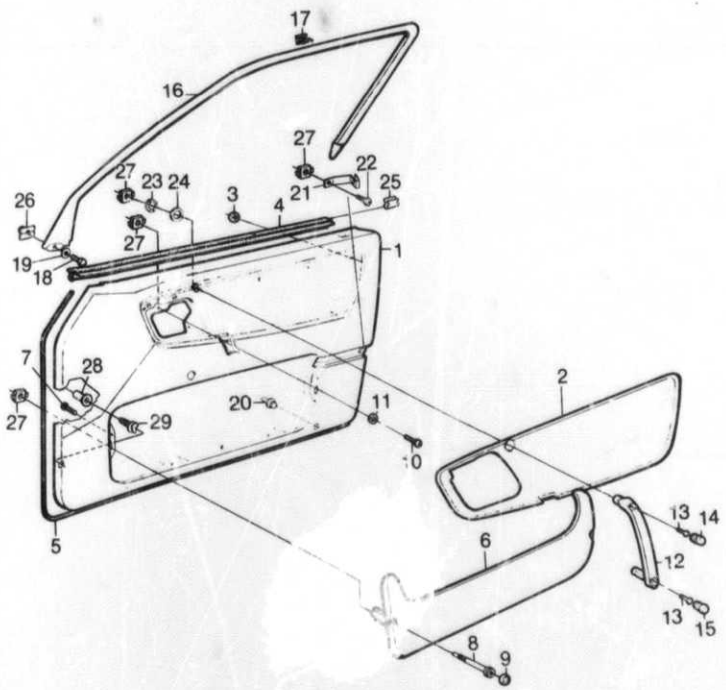

F4126 9000

1329	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				TRIM COLOUR C24,C44,C33				
0020	1	96 77 444		560), LH	1	Door trim	Dörrklädsel	6
0030	1	96 77 436		560), RH	1	Door trim	Dörrklädsel	6
0040	1	96 77 428		560,116), LH	1	Door trim	Dörrklädsel	6
0050	1	96 77 410		560,116), RH	1	Door trim	Dörrklädsel	6
0060	2	96 57 529		560), LH	1	.Arm rest	.Armstöd	6
0070	2	96 57 511		560), RH	1	.Arm rest	.Armstöd	6
0080	3	96 95 081			7	.Washer	.Bricka	5
0090	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0100	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0110	5	95 72 363		560)	2	.Strip	.List	6
0120	6	96 77 501		560), LH	1	Pocket	Ficka	6
0130	6	96 77 493		560), RH	1	Pocket	Ficka	6
0140				TRIM COLOUR E24,E44,E33				
0150	1	96 57 487		570), LH	1	Door trim	Dörrklädsel	6
0160	1	96 57 479		570), RH	1	Door trim	Dörrklädsel	6
0170	1	98 91 540		570,116), LH	1	Door trim	Dörrklädsel	6
0180	1	98 91 532		570,116), RH	1	Door trim	Dörrklädsel	6
0190	2	96 57 586		570), LH	1	.Arm rest	.Armstöd	6
0200	2	96 57 578		570), RH	1	.Arm rest	.Armstöd	6
0210	3	96 95 081			7	.Washer	.Bricka	5
0220	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0230	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0240	5	98 95 099		570)	2	.Strip	.List	6
0250	6	96 58 139		570), LH	1	Pocket	Ficka	6
0260	6	96 58 147		570), RH	1	Pocket	Ficka	6
0270				TRIM COLOUR F24,F44,F33				
0280	1	96 77 733		580), LH	1	Door trim	Dörrklädsel	6
0290	1	96 77 725		580), RH	1	Door trim	Dörrklädsel	6
0300	1	*96 77 717*		580,116), LH NLS - USE 9677733	1	Door trim	Dörrklädsel	6
0310	1	96 77 709		580,116), RH	1	Door trim	Dörrklädsel	6
0320	2	96 77 808		580), LH	1	.Arm rest	.Armstöd	6
0330	2	96 77 790		580), RH	1	.Arm rest	.Armstöd	6
0340	3	96 95 081			7	.Washer	.Bricka	5
0350	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0360	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0370	5	96 77 766		580)	2	.Strip	.List	6
0380	6	96 77 865		580), LH	1	Pocket	Ficka	6
0390	6	96 77 857		580), RH	1	Pocket	Ficka	6
0400				TRIM COLOUR G24,G44,G33				
0410	1	95 82 040		590), LH	1	Door trim	Dörrklädsel	6
0420	1	95 82 149		590), RH	1	Door trim	Dörrklädsel	6
0430	1	95 82 032		590,116), LH	1	Door trim	Dörrklädsel	6
0440	1	95 82 024		590,116), RH	1	Door trim	Dörrklädsel	6
0450	2	95 82 081		590), LH	1	.Arm rest	.Armstöd	6
0460	2	95 82 180		590), RH	1	.Arm rest	.Armstöd	6
0470	3	96 95 081			7	.Washer	.Bricka	5
0480	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0490	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0500	5	95 82 099		590)	2	.Strip	.List	6
0510	6	95 82 065		590), LH	1	Pocket	Ficka	6
0520	6	95 82 164		590), RH	1	Pocket	Ficka	6
0530								
0540	7	79 71 393			8	Screw	Skruv	5
0550	8	97 80 156			4	Screw	Skruv	5
0560	9	97 77 160		560)	4	Cover	Täcklock	5

116. For cars with manual window regulators För bilar med manuella fönsterhissar
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F10

Door trim 1989 500), Front door

Dörrklädsel 1989 500), Framdörr

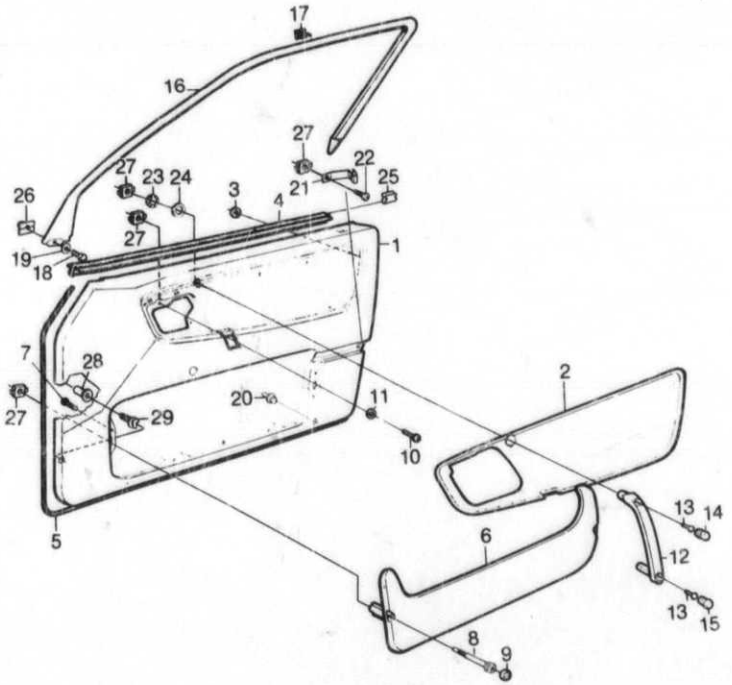

F4126 9000

1328	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0570	9	97 99 875		570)	4	Cover	Täcklock	5
0580	9	96 75 612		580)	4	Cover	Täcklock	5
0590	9	95 82 313		590)	4	Cover	Täcklock	5
0600	10	73 99 264			2	Screw	Skruv	5
0610	11	96 56 398			2	Washer	Bricka	5
0620								
0630	12	97 76 410		560), LH	1	Handle	Handtag	5
0640	12	97 76 402		560), RH	1	Handle	Handtag	5
0650								
0660	12	98 90 112		570), LH	1	Handle	Handtag	5
0670	12	98 90 104		570), RH	1	Handle	Handtag	5
0680								
0690	12	96 75 588		580), LH	1	Handle	Handtag	5
0700	12	96 75 570		580), RH	1	Handle	Handtag	5
0710								
0720	12	95 82 057		590), LH	1	Handle	Handtag	5
0730	12	95 82 156		590), RH	1	Handle	Handtag	5
0740								
0750	13	73 99 264		(8059396)	4	Screw	Skruv	5
0760								
0770	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0780	14	98 90 146		570)	2	Cover washer	Täckbricka	5
0790	14	96 75 596		580)	2	Cover washer	Täckbricka	5
0800	14	95 82 297		590)	2	Cover washer	Täckbricka	5
0810								
0820	15	97 76 519		560)	2	Cover washer	Täckbricka	5
0830	15	98 90 153		570)	2	Cover washer	Täckbricka	5
0840	15	96 75 604		580)	2	Cover washer	Täckbricka	5
0850	15	95 82 305		590)	2	Cover washer	Täckbricka	5
0860								
0870	16	*96 94 688*		LH NLS - USE 4268223	1	Upholstery	Klädsel	6
0880	16	*96 94 670*		RH NLS - USE 4268215	1	Upholstery	Klädsel	6
0890	17	96 60 143			24	Clamp	Klammer	5
0900	18	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
0900								
0910	19	96 60 077			2	Washer	Bricka	5
0920	20	97 96 939			2	Clamp	Klämma	6
0930	21	97 96 616			2	Clamp	Klämma	6
0940	22	73 99 264			4	Screw	Skruv	5
0950	23	97 97 200			2	Washer	Bricka	5
0960	24	98 91 391		(9671389)	2	Washer	Bricka	5
0970	25	84 12 215			10	Clip	Clips	5
0980	26	96 71 033			2	Clamp	Klämma	6
0990	27	79 74 231			X	Cage nut	Korgmutter	5
1000	28	95 45 906			2	Sleeve	Hylsa	5
1010	29	95 45 898			2	Upholstery clip	Klädselläste	5


500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

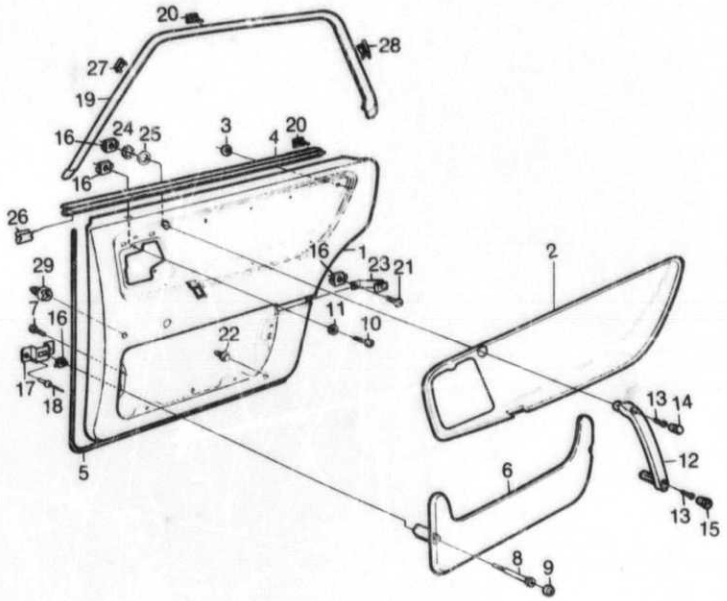

F4127 9000

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C24,C44,C33				
0020	1	96 77 584		560), LH	1	Door trim	Dörrklädsel	6
0030	1	96 77 576		560), RH	1	Door trim	Dörrklädsel	6
0040	1	96 77 568		560,116), LH	1	Door trim	Dörrklädsel	6
0050	1	96 77 550		560,116), RH	1	Door trim	Dörrklädsel	6
0060	1	96 79 226		560,240), LH	1	Door trim	Dörrklädsel	6
0070	1	96 79 234		560,240), RH	1	Door trim	Dörrklädsel	6
0080	2	96 57 727		560), LH	1	.Arm rest	.Armstöd	6
0090	2	96 57 719		560), RH	1	.Arm rest	.Armstöd	6
0100	3	96 95 081			8	.Washer	.Bricka	5
0110	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0120	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0130	5	95 72 389		560)	2	.Strip	.List	6
0140	6	96 77 642		560), LH	1	Pocket	Ficka	6
0150	6	96 77 634		560), RH	1	Pocket	Ficka	6
0160				TRIM COLOUR E24,E44,E33				
0170	1	96 57 685		570), LH	1	Door trim	Dörrklädsel	6
0180	1	96 57 677		570), RH	1	Door trim	Dörrklädsel	6
0190	1	98 91 730		570,116), LH	1	Door trim	Dörrklädsel	6
0200	1	*98 91 722*		570,116), RH NLS - USE 9657677	1	Door trim	Dörrklädsel	6
0210	1	96 79 267		570,240), LH	1	Door trim	Dörrklädsel	6
0220	1	96 79 275		570,240), RH	1	Door trim	Dörrklädsel	6
0230	2	96 57 784		570), LH	1	.Arm rest	.Armstöd	6
0240	2	96 57 776		570), RH	1	.Arm rest	.Armstöd	6
0250	3	96 95 081			8	.Washer	.Bricka	5
0260	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0270	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0280	5	98 95 970		570)	2	.Strip	.List	6
0290	6	96 58 378		570), LH	1	Pocket	Ficka	6
0300	6	96 58 360		570), RH	1	Pocket	Ficka	6
0310				TRIM COLOUR F24,F44,F33				
0320	1	96 77 956		580), LH	1	Door trim	Dörrklädsel	6
0330	1	96 77 949		580), RH	1	Door trim	Dörrklädsel	6
0340	1	96 77 931		580,116), LH	1	Door trim	Dörrklädsel	6
0350	1	96 77 923		580,116), RH	1	Door trim	Dörrklädsel	6
0360	1	96 79 283		580,240), LH	1	Door trim	Dörrklädsel	6
0370	1	96 79 291		580,240), RH	1	Door trim	Dörrklädsel	6
0380	2	96 78 012		580), LH	1	.Arm rest	.Armstöd	6
0390	2	96 78 004		580), RH	1	.Arm rest	.Armstöd	6
0400	3	96 95 081			8	.Washer	.Bricka	5
0410	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0420	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0430	5	96 78 020		580)	2	.Strip	.List	3
0440	6	96 78 087		580), LH	1	Pocket	Ficka	6
0450	6	96 78 079		580), RH	1	Pocket	Ficka	6
0460								

116. For cars with manual window regulators För bilar med manuella fönsterhissar
240. For cars with door fan För bilar med dörrfläkt
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-F14 Door trim 1989 500), Rear door

Klädsel

Dörrklädsel 1989 500), Bakdörr

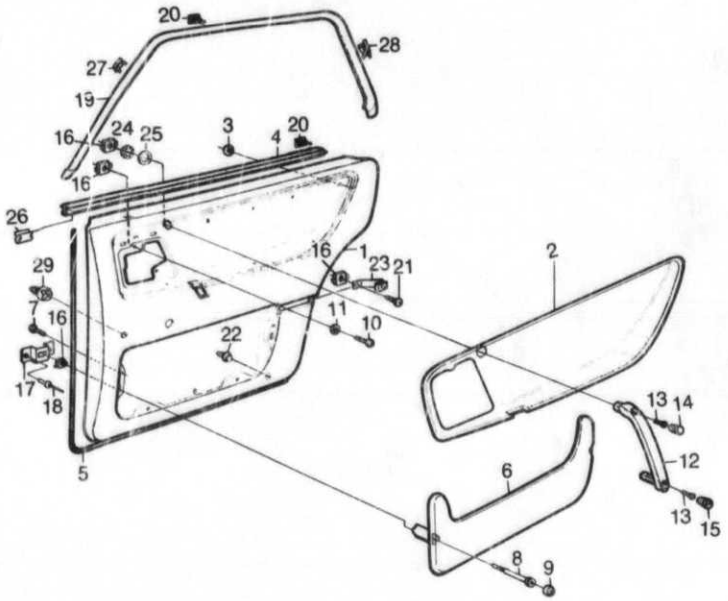

F4127 9000

1331	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470				TRIM COLOUR G24,G44,G33				
0480	1	95 82 347		590), LH	1	Door trim	Dörrklädsel	6
0490	1	95 82 446		590), RH	1	Door trim	Dörrklädsel	6
0500	1	95 82 339		590,116), LH	1	Door trim	Dörrklädsel	6
0510	1	95 82 321		590,116), RH	1	Door trim	Dörrklädsel	6
0520	1	95 82 552		590,240), LH	1	Door trim	Dörrklädsel	6
0530	1	95 82 578		590,240), RH	1	Door trim	Dörrklädsel	6
0540	2	95 82 388		590), LH	1	.Arm rest	.Armstöd	6
0550	2	95 82 487		590), RH	1	.Arm rest	.Armstöd	6
0560	3	96 95 081			8	.Washer	.Bricka	5
0570	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0580	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0590	5	95 82 396		590)	2	.Strip	.List	3
0600	6	95 82 362		590), LH	1	Pocket	Ficka	6
0610	6	95 82 461		590), RH	1	Pocket	Ficka	6
0620								
0630	7	79 71 393			8	Screw	Skruv	5
0640	8	97 80 156			4	Screw	Skruv	5
0650	9	97 77 160		560)	4	Cover	Täcklock	5
0660	9	97 99 875		570)	4	Cover	Täcklock	5
0670	9	96 75 612		580)	4	Cover	Täcklock	5
0680	9	95 82 313		590)	4	Cover	Täcklock	5
0690	10	73 99 264			2	Screw	Skruv	5
0700	11	96 56 398			2	Washer	Bricka	5
0710								
0720	12	97 79 174		560), LH	1	Handle	Handtag	5
0730	12	97 79 166		560), RH	1	Handle	Handtag	5
0740								
0750	12	98 95 871		570), LH	1	Handle	Handtag	5
0760	12	98 95 863		570), RH	1	Handle	Handtag	5
0770								
0780	12	96 75 638		580), LH	1	Handle	Handtag	5
0790	12	96 75 620		580), RH	1	Handle	Handtag	5
0800								
0810	12	95 82 354		590), LH	1	Handle	Handtag	5
0820	12	95 82 453		590), RH	1	Handle	Handtag	5
0830								
0840	13	73 99 264		(8059396)	4	Screw	Skruv	5
0850								
0860	14	97 76 477		560)	2	Cover washer	Täckbricka	5
0870	14	98 90 146		570)	2	Cover washer	Täckbricka	5
0880	14	96 75 596		580)	2	Cover washer	Täckbricka	5
0890	14	95 82 297		590)	2	Cover washer	Täckbricka	5
0900								
0910	15	97 76 519		560)	2	Cover washer	Täckbricka	5
0920	15	98 90 153		570)	2	Cover washer	Täckbricka	5
0930	15	96 75 604		580)	2	Cover washer	Täckbricka	5
0940	15	95 82 305		590)	2	Cover washer	Täckbricka	5
0950								
0960	16	79 74 231			20	Cage nut	Korgmutter	5
0970	17	97 79 844			2	Bracket	Hållare	6
0980	18	79 61 642			4	Rivet	Nit	5
0990	19	*96 94 746*		LH NLS - USE 4268249	1	Upholstery	Klädsel	6
1000	19	96 94 738		RH	1	Upholstery	Klädsel	6
1010	20	96 60 143			5	Clamp	Klammer	5
1020	21	80 59 396			2	Screw	Skruv	5

116. For cars with manual window regulators För bilar med manuella fönsterhissar
240. For cars with door fan För bilar med dörrfläkt
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Upholstery

5-F16 Door trim 1989 500), Rear door

Klädsel

Dörrklädsel 1989 500), Bakdörr

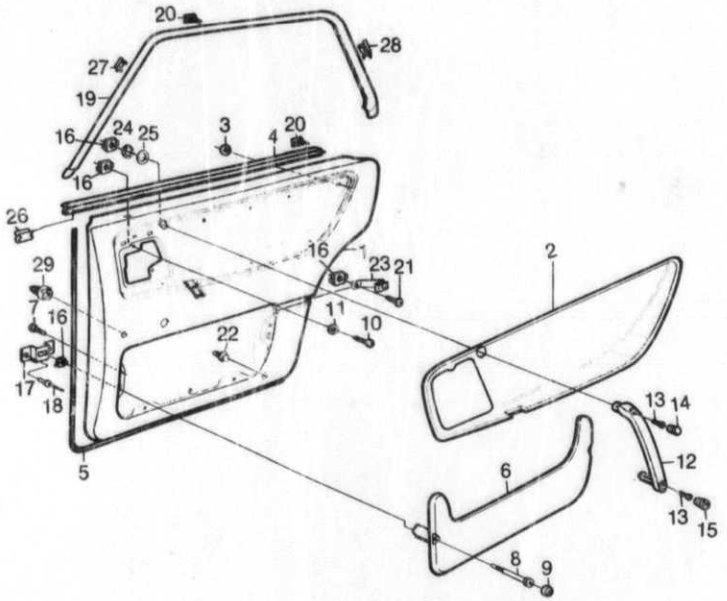

F4127 9000

1331	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1030	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1040	23	96 60 820			4	Clamp	Klämma	6
1050	24	97 97 200			2	Washer	Bricka	5
1060	25	98 91 391		(9671389)	2	Washer	Bricka	5
1070	26	84 12 215			10	Clip	Clips	5
1080	27	96 60 150			6	Clamp	Klammer	5
1090	28	96 60 168			6	Clamp	Klammer	5
1100	29	96 78 996		240)	2	Clamp	Klämma	5

240. For cars with door fan — För bilar med dörrfläkt
500. Also valid for SE 1988B. — Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F18

Luggage compartment
Bagagerum

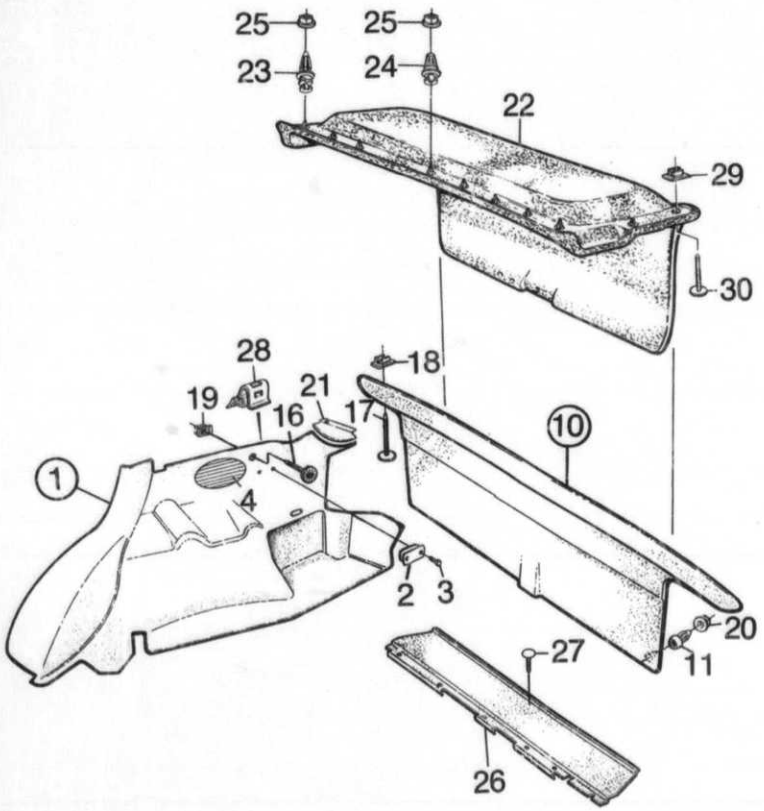

F7137 9000

1340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 54 672		1985-1986, LH	1	Upholstery	Klädsel	6
0020	1	96 70 506		1987-,237), LH	1	Upholstery	Klädsel	6
0030	1	95 71 639		238)-1987, LH	1	Upholstery	Klädsel	6
0040	1	96 90 033		1988-,476) LH	1	Upholstery	Klädsel	6
0050	1	40 51 660		477), LH	1	Upholstery	Klädsel	6
0060	1	97 54 672		1987-,237), LH	1	Upholstery	Klädsel	6
0070						without electrical antenn	utan elantenn	
0080	1	95 71 647		238)-1987, LH	1	Upholstery	Klädsel	6
0090						without electrical antenn	utan elantenn	
0100	1	96 90 025		1988-,476), LH	1	Upholstery	Klädsel	6
0110						without electrical antenn	utan elantenn	
0120	1	40 51 652		477), LH	1	Upholstery	Klädsel	6
0130						without electrical antenn	utan elantenn	
0140	1	96 92 922		453), 4D, LH	1	Upholstery	Klädsel	6
0150	1	95 45 468		454), 4D, LH	1	Upholstery	Klädsel	6
0160	1	96 92 930		453), 4D, LH	1	Upholstery	Klädsel	6
0170						without electrical antenn	utan elantenn	
0180	1	95 45 476		454), 4D, LH	1	Upholstery	Klädsel	6
0190						without electrical antenn	utan elantenn	
0200								
0210	1	97 54 680		1985-,237), RH	1	Upholstery	Klädsel	6
0220	1	95 71 654		238)-1987, RH	1	Upholstery	Klädsel	6
0230	1	*96 90 041*		1988-,476), RH NLS - USE 4051678	1	Upholstery	Klädsel	6
0240	1	40 51 678		477), RH	1	Upholstery	Klädsel	6
0250	1	41 41 776		453), 4D, RH (9692948)	1	Upholstery	Klädsel	6
0260	1	*95 45 484*		454), 4D, RH NLS - USE 4141776	1	Upholstery	Klädsel	6
0270	2			4D, RH	1	.Lamp	.Lampa	
0280				See page 3A-051, 2-C04				
0290	3			4D, RH	2	.Screw	.Skruv	
0300				See page 3A-051, 2-C04				
0310	4			4D, RH	1	.Grille	.Galler	
0320				See page 8B-219, 5-J04				
0330	10	*97 54 839*		NLS - USE 9658998	1	Upholstery	Klädsel	6
0340	10	96 58 998		1986-	1	Upholstery	Klädsel	6
0350						high mounted stop light	högt monterad stopplyckta	
0360	11	97 86 997			6	.Clamp	.Klämma	6
0370	16	94 64 926			3	Special screw	Snabbskruv	5
0380	16	94 64 926		453), 4D	4	Special screw	Snabbskruv	5
0390	16	96 68 153		454), 4D	4	Clip	Clips	5
0400	17	94 23 658			X	Special screw	Snabbskruv	5
0410	18	79 72 573		1985	X	Clip nut	Clipsmutter	5
0420	18	84 52 898		1986-	X	Quick nut	Snabbmutter	3
0430	19	84 52 898		5D	X	Quick nut	Snabbmutter	3
0440	19	84 52 898		453), 4D	4	Quick nut	Snabbmutter	3
0450	19	94 73 877		454), 4D	2	Sleeve	Hylsa	5
0460	20	94 73 877			6	Sleeve	Hylsa	5
0470	21	97 95 808		5D	2	Bracket	Hållare	5
0480	22	95 89 631		484), 4D	1	Upholstery	Klädsel	6
0490	22	*95 45 872*		485,525), 4D NLS - USE 4268348, 8452898, 9491689	1	Upholstery	Klädsel	6
0490								
0490								

237. Ch --H1027949, --H8001379
238. Ch H1027950--, H8001380--
453. Ch --K1001130, --K8000006
454. Ch K1001131--, K8000007--
476. Ch. --K1013749, --K2007509, --K8000666
477. Ch. K1013750--, K2007510--, K8000667--
484. Ch. --K1007241
485. Ch. K1007242--
525. Ch. --K1025649, --K2016282

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F20

Luggage compartment
Bagagerum

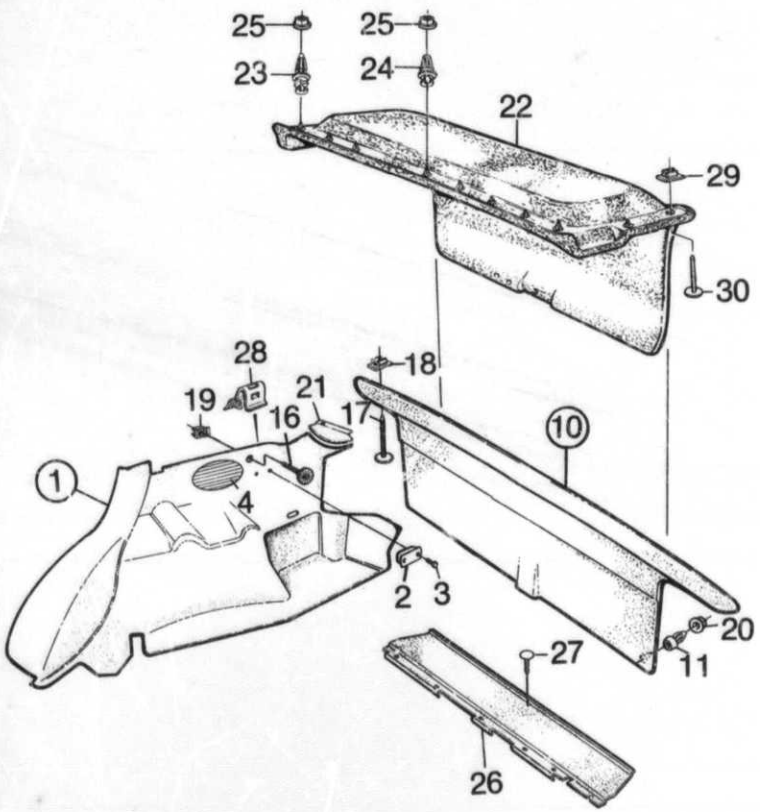

F7137 9000

1340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	22	*40 54 979*		526), 4D NLS - USE 4268348	1	Upholstery	Klädsel	6
0510	23	97 96 939		525), 4D	4	.Clamp	.Klämma	6
0520	24	97 86 997		525), 4D	X	.Clamp	.Klämma	6
0530	25	94 73 877		320), 4D	18	Sleeve	Hylsa	5
0540	25	94 73 877		321,525), 4D	16	Sleeve	Hylsa	5
0550	26	*96 58 899*		4D NLS - USE 4141644	1	Upholstery	Klädsel	6
0560	27	96 68 153		4D	5	Clip	Clips	5
0570	28	96 90 264		4D	6	Clamp	Klämma	5
0580	29	84 52 898		321,425), 4D	2	Quick nut	Snabbmutter	3
0590	29	84 52 898		426), 4D	6	Quick nut	Snabbmutter	3
0600	30	94 91 689		321,425), 4D	2	Special screw	Snabbskruv	5
0610	30	94 91 689		426), 4D	6	Special screw	Snabbskruv	5

320. Ch --J1014843
321. Ch J1014844--
425. Ch. J1031141--
426. Ch. J1026302--
525. Ch. --K1025649, --K2016282
526. Ch. K1025650--, K2016283--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F22

Carpets 1985
Mattor 1985

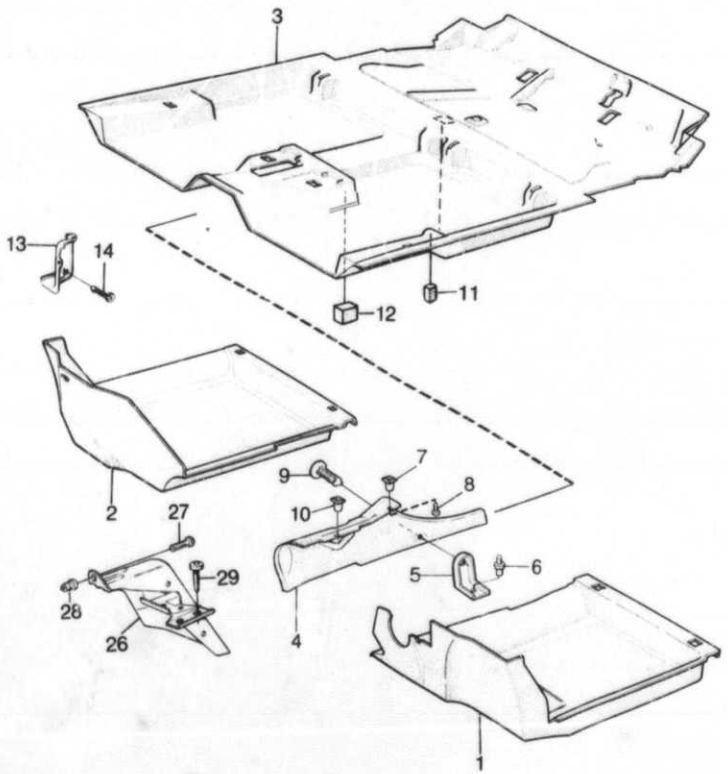

F4129 9000

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C20, C23				
0025	1	*97 72 633*		560), LH NLS	1	Carpet	Matta	6
0030	2	*97 72 807*		560), RH NLS	1	Carpet	Matta	6
0040	1	*97 72 799*		560), LH, RHD NLS	1	Carpet	Matta	6
0050	2	*97 72 641*		560), RH, RHD NLS	1	Carpet	Matta	6
0060	3	97 94 652		560)	1	Carpet	Matta	6
0070	4	*97 72 997*		560), LH NLS	1	Carpet	Matta	6
0080	4	*97 73 003*		560), RH NLS	1	Carpet	Matta	6
0090	4	*97 84 885*		560), LH, RHD NLS	1	Carpet	Matta	6
0100	4	*97 84 893*		560), RH, RHD NLS	1	Carpet	Matta	6
0130				TRIM COLOUR C21, C22				
0135	1	*97 72 658*		590), LH NLS	1	Carpet	Matta	6
0140	2	*97 72 823*		590), RH NLS	1	Carpet	Matta	6
0150	1	*97 72 815*		590), LH, RHD NLS	1	Carpet	Matta	6
0160	2	*97 72 666*		590), RH, RHD NLS	1	Carpet	Matta	6
0170	3	*97 94 660*		590) NLS	1	Carpet	Matta	6
0180	4	*97 73 011*		590), LH NLS	1	Carpet	Matta	6
0190	4	*97 73 029*		590), RH NLS	1	Carpet	Matta	6
0200	4	*97 84 901*		590), LH, RHD NLS	1	Carpet	Matta	6
0210	4	*97 84 919*		590), RH, RHD NLS	1	Carpet	Matta	6
0240				TRIM COLOUR C24				
0245	1	*97 72 674*		580), LH NLS	1	Carpet	Matta	6
0250	2	*97 72 849*		580), RH NLS	1	Carpet	Matta	6
0260	1	*97 72 831*		580), LH, RHD NLS	1	Carpet	Matta	6
0270	2	*97 72 682*		580), RH, RHD NLS	1	Carpet	Matta	6
0280	3	97 94 678		580)	1	Carpet	Matta	6
0290	4	*97 73 037*		580), LH NLS	1	Carpet	Matta	6
0300	4	*97 73 045*		580), RH NLS	1	Carpet	Matta	6
0310	4	*97 84 927*		580), LH, RHD NLS	1	Carpet	Matta	6
0320	4	*97 84 935*		580), RH, RHD NLS	1	Carpet	Matta	6
0330								
0340	5	*97 69 084*		LH NLS	1	Bracket	Fäste	5
0350	5	*97 69 092*		RH NLS	1	Bracket	Fäste	5
0360	6	98 49 514			2	Rivet	Nit	5
0370	7	79 77 341			2	Press nut	Pressmutter	5
0380	8	97 76 006			2	Screw	Skruv	5
0390	9	*97 94 702*		560) NLS - USE 9668120	4	Clip	Clips	5
0400	9	*97 94 710*		590) NLS - USE 9668138	4	Clip	Clips	5
0410	9	*97 94 728*		580) NLS - USE 9668146	4	Clip	Clips	5
0420	10	79 77 341			2	Press nut	Pressmutter	5

560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-F24

Carpets 1986
Mattor 1986

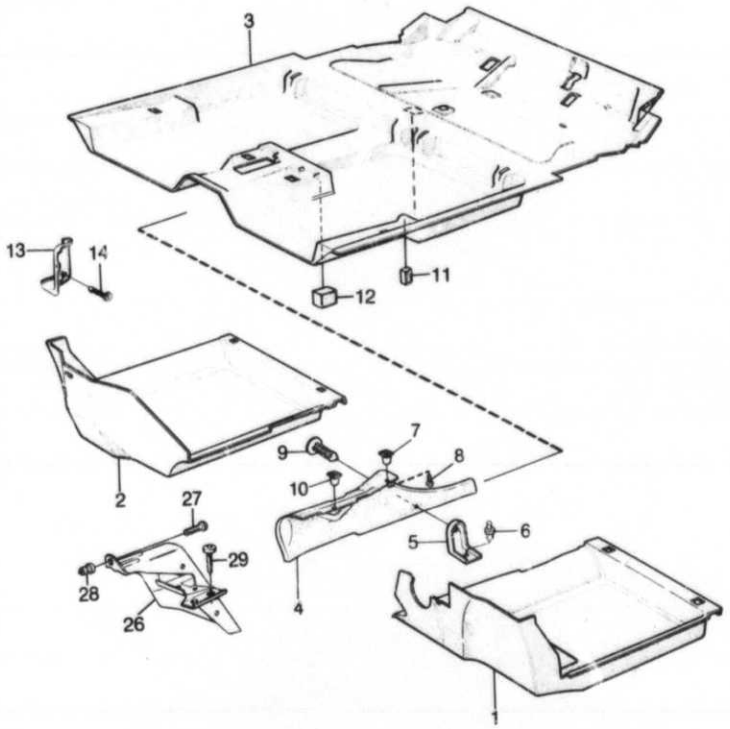

F4130 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR A13, A23				
1	*97 97 663*		590), LH NLS	1	Carpet	Matta	
2	*97 97 689*		590), RH NLS	1	Carpet	Matta	
1	*97 97 838*		590), LH, RHD NLS	1	Carpet	Matta	
2	97 97 812		590), RH, RHD	1	Carpet	Matta	
3	*97 94 660*		590) NLS	1	Carpet	Matta	6
4	97 97 408		590), LH	1	Carpet	Matta	6
4	97 97 416		590), RH	1	Carpet	Matta	6
4	*97 97 523*		590), LH, RHD NLS	1	Carpet	Matta	6
4	*97 97 531*		590), RH, RHD NLS	1	Carpet	Matta	6
			TRIM COLOUR A33				
1	*97 98 885*		590), LH NLS	1	Carpet	Matta	
2	97 98 901		590), RH	1	Carpet	Matta	
1	*97 98 968*		590), LH, RHD NLS	1	Carpet	Matta	
2	97 98 943		590), RH, RHD	1	Carpet	Matta	
3	*97 99 008*		590) NLS	1	Carpet	Matta	6
4	*97 98 802*		590), LH NLS	1	Carpet	Matta	6
4	97 98 810		590), RH	1	Carpet	Matta	6
4	*97 98 844*		590), LH, RHD NLS	1	Carpet	Matta	6
4	*97 98 851*		590), RH, RHD NLS	1	Carpet	Matta	6
			TRIM COLOUR C13, C23				
1	97 97 630		560), LH	1	Carpet	Matta	
2	*97 97 655*		560), RH NLS	1	Carpet	Matta	
1	*97 97 804*		560), LH, RHD NLS	1	Carpet	Matta	
2	97 97 788		560), RH, RHD	1	Carpet	Matta	
3	97 94 652		560)	1	Carpet	Matta	6
4	*97 97 382*		560), LH NLS	1	Carpet	Matta	6
4	97 97 390		560), RH	1	Carpet	Matta	6
4	*97 97 507*		560), LH, RHD NLS	1	Carpet	Matta	6
4	97 97 515		560), RH, RHD	1	Carpet	Matta	6
			TRIM COLOUR C33				
1	97 99 099		560), LH	1	Carpet	Matta	
2	*97 99 115*		560), RH NLS	1	Carpet	Matta	
1	*97 99 149*		560), LH, RHD NLS	1	Carpet	Matta	
2	*97 99 123*		560), RH, RHD NLS	1	Carpet	Matta	
3	97 99 156		560)	1	Carpet	Matta	6
4	*97 99 164*		560), LH NLS	1	Carpet	Matta	6
4	*97 99 172*		560), RH NLS	1	Carpet	Matta	6
4	*97 99 180*		560), LH, RHD NLS	1	Carpet	Matta	6
4	*97 99 198*		560), RH, RHD NLS	1	Carpet	Matta	6
			TRIM COLOUR D13, D23				
1	97 97 697		580), LH	1	Carpet	Matta	
2	97 97 713		580), RH	1	Carpet	Matta	
1	*97 97 861*		580), LH, RHD NLS	1	Carpet	Matta	
2	*97 97 846*		580), RH, RHD NLS	1	Carpet	Matta	
3	97 94 678		580)	1	Carpet	Matta	6
4	97 97 424		580), LH	1	Carpet	Matta	6
4	97 97 432		580), RH	1	Carpet	Matta	6
4	*97 97 549*		580), LH, RHD NLS	1	Carpet	Matta	6
4	*97 97 556*		580), RH, RHD NLS	1	Carpet	Matta	6

560. Red Röd
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G02

Carpets 1986

Mattor 1986

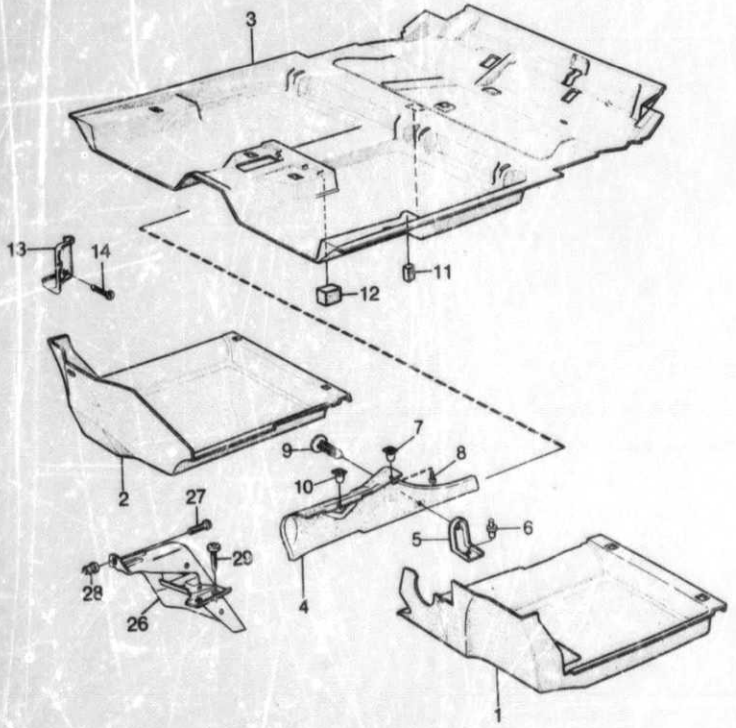

F4130 9000

1355	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550				TRIM COLOUR E13, E23				
0555	1	*97 97 721*		570), LH NLS	1	Carpet	Matta	
0560	2	*97 97 747*		570), RH NLS	1	Carpet	Matta	
0570	1	97 97 895		570), LH, RHD	1	Carpet	Matta	
0580	2	*97 97 879*		570), RH, RHD NLS	1	Carpet	Matta	
0590	3	*97 97 978*		570) NLS	1	Carpet	Matta	6
0600	4	*97 97 440*		570), LH NLS	1	Carpet	Matta	
0610	4	97 97 457		570), RH	1	Carpet	Matta	6
0620	4	*97 97 564*		570), LH, RHD NLS	1	Carpet	Matta	6
0630	4	*97 97 572*		570), RH, RHD NLS	1	Carpet	Matta	6
0645				TRIM COLOUR E33				
0650	1	97 98 919		570), LH	1	Carpet	Matta	
0660	2	97 98 935		570), RH	1	Carpet	Matta	
0670	1	*97 98 992*		570), LH, RHD NLS	1	Carpet	Matta	
0680	2	*97 98 976*		570), RH, RHD NLS	1	Carpet	Matta	
0690	3	97 99 016		570)	1	Carpet	Matta	6
0700	4	97 98 828		570), LH	1	Carpet	Matta	6
0710	4	97 98 836		570), RH	1	Carpet	Matta	6
0720	4	*97 98 869*		570), LH, RHD NLS	1	Carpet	Matta	6
0730	4	*97 98 877*		570), RH, RHD NLS	1	Carpet	Matta	6
0740								
0750	5	*97 69 084*		LH NLS	1	Bracket	Fäste	5
0760	5	*97 69 092*		RH NLS	1	Bracket	Fäste	5
0770	6	98 49 514			2	Rivet	Nit	5
0780	7	79 77 341		187)	2	Press nut	Pressmutter	5
0790	7	79 77 358		188)	2	Press nut	Pressmutter	5
0800	8	97 76 006		187)	2	Screw	Skruv	5
0810	8	97 71 320		188)	2	Screw	Skruv	5
0820	9	*97 94 710*		590) NLS - USE 9668138	4	Clip	Clips	5
0830	9	*97 94 702*		560) NLS - USE 9668120	4	Clip	Clips	5
0840	9	*97 94 728*		580) NLS - USE 9668146	4	Clip	Clips	5
0850	9	*97 97 598*		570) NLS - USE 9668153	4	Clip	Clips	5
0860	10	79 77 341			2	Press nut	Pressmutter	5
0870	11	98 97 919			2	Spacer	Mellanlägg	5
0880	12	98 97 901			2	Spacer	Mellanlägg	5
0890	13	*96 59 236*		591), RHD NLS	1	Cover	Kåpa	6
0900	13	*96 59 277*		592), RHD NLS	1	Cover	Kåpa	6
0910	13	*96 59 228*		561), RHD NLS	1	Cover	Kåpa	6
0920	13	*96 59 269*		562), RHD NLS	1	Cover	Kåpa	6
0930	13	*96 59 244*		580), RHD NLS	1	Cover	Kåpa	6
0940	13	*96 59 251*		571), RHD NLS	1	Cover	Kåpa	6
0950	13	*96 59 285*		572), RHD NLS	1	Cover	Kåpa	6
0960	14	96 59 442		590)	1	Special screw	Snabbskruv	5
0970	14	96 59 434		560)	1	Special screw	Snabbskruv	5
0980	14	*96 59 459*		580) NLS	1	Special screw	Snabbskruv	5
0990	14	94 91 689		570)	1	Special screw	Snabbskruv	5

187. Ch. --G1027013
188. Ch. G1027014--
560. Red Röd
561. Trim colour C12, C13, C23, red Trim colour C12, C13, C23, röd
562. Trim colour C33, red Trim colour C33, röd
570. Grey Grå
571. Trim colour E12, E13, E23, grey Trim colour E12, E13, E23, grå
572. Trim colour E33, grey Trim colour E33, grå
580. Blue Blå
590. Yellow Gul
591. Trim colour A12, A13, A23, yellow Trim colour A12, A13, A23, gul
592. Trim colour A33, yellow Trim colour A33, gul

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G04

Carpets 1987
Mattor 1987

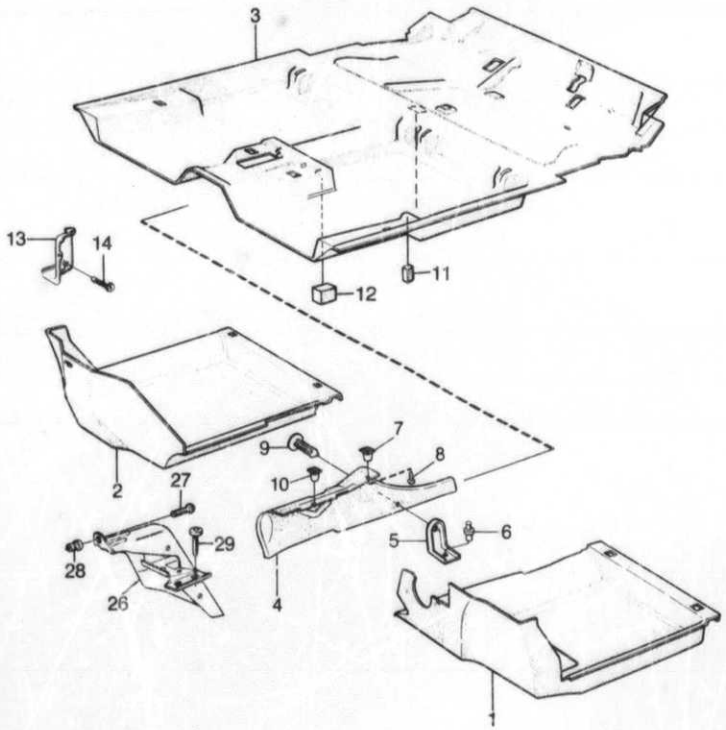

F4131 9000

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR A12, A23				
0020	1	*97 97 663*		590,103) LH NLS	1	Carpet	Matta	
0030	2	*97 97 689*		590,103), RH NLS	1	Carpet	Matta	
0040	1	96 64 509		590,104), LH	1	Carpet	Matta	6
0050	2	96 64 525		590,104), RH	1	Carpet	Matta	6
0060	1	*97 97 838*		590,103), LH, RHD NLS	1	Carpet	Matta	
0070	2	97 97 812		590,103), RH, RHD	1	Carpet	Matta	
0080	1	96 64 533		590,104), LH, RHD	1	Carpet	Matta	6
0090	2	96 64 517		590,104), RH, RHD	1	Carpet	Matta	6
0100	3	*97 94 660*		590) NLS	1	Carpet	Matta	6
0110	4	97 97 408		590,103), LH	1	Carpet	Matta	6
0120	4	97 97 416		590,103), RH	1	Carpet	Matta	6
0130	4	96 64 566		590,104), LH	1	Carpet	Matta	6
0140	4	96 64 574		590,104), RH	1	Carpet	Matta	6
0150	4	*97 97 523*		590,103), LH, RHD NLS	1	Carpet	Matta	6
0160	4	*97 97 531*		590,103), RH, RHD NLS	1	Carpet	Matta	6
0170	4	96 64 582		590,104), LH, RHD	1	Carpet	Matta	6
0180	4	96 64 590		590,104), RH, RHD	1	Carpet	Matta	6
0190				TRIM COLOUR A33				
0200	1	*97 98 885*		590,103) LH NLS	1	Carpet	Matta	
0210	2	97 98 901		590,103), RH	1	Carpet	Matta	
0220	1	96 64 806		590,104,153), LH	1	Carpet	Matta	6
0230	2	96 64 822		590,104,153), RH	1	Carpet	Matta	6
0240	1	96 64 509		590,154), LH	1	Carpet	Matta	6
0250	2	96 64 525		590,154), RH	1	Carpet	Matta	6
0260	1	*97 98 968*		590,103), LH, RHD NLS	1	Carpet	Matta	
0270	2	97 98 943		590,103), RH, RHD	1	Carpet	Matta	
0280	1	96 64 830		590,104,153), LH, RHD	1	Carpet	Matta	6
0290	2	96 64 814		590,104,153), RH, RHD	1	Carpet	Matta	6
0300	1	96 64 533		590,154), LH, RHD	1	Carpet	Matta	6
0310	2	96 64 517		590,154), RH, RHD	1	Carpet	Matta	6
0320	3	*97 99 008*		590,153) NLS	1	Carpet	Matta	6
0330	3	*97 94 660*		590,154) NLS	1	Carpet	Matta	6
0340	4	*97 98 802*		590,103), LH NLS	1	Carpet	Matta	6
0350	4	97 98 810		590,103), RH	1	Carpet	Matta	6
0360	4	96 64 863		590,104,153), LH	1	Carpet	Matta	6
0370	4	96 64 871		590,104,153), RH	1	Carpet	Matta	6
0380	4	96 64 566		590,154), LH	1	Carpet	Matta	6
0390	4	96 64 574		590,154), RH	1	Carpet	Matta	6
0400	4	*97 98 844*		590,103), LH, RHD NLS	1	Carpet	Matta	6
0410	4	*97 98 851*		590,103), RH, RHD NLS	1	Carpet	Matta	6
0420	4	96 64 889		590,104,153), LH, RHD	1	Carpet	Matta	6
0430	4	96 64 897		590,104,153), RH, RHD	1	Carpet	Matta	6
0440	4	96 64 582		590,154), LH, RHD	1	Carpet	Matta	6
0450	4	96 64 590		590,154), RH, RHD	1	Carpet	Matta	6
0460								

103. Ch. --H1000751, --H8000040
104. Ch. H1000752--, H8000041--
153. Ch. --H1013855, --H8000139
154. Ch. H1013856--, H8000140--
590. Yellow Gul


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G06

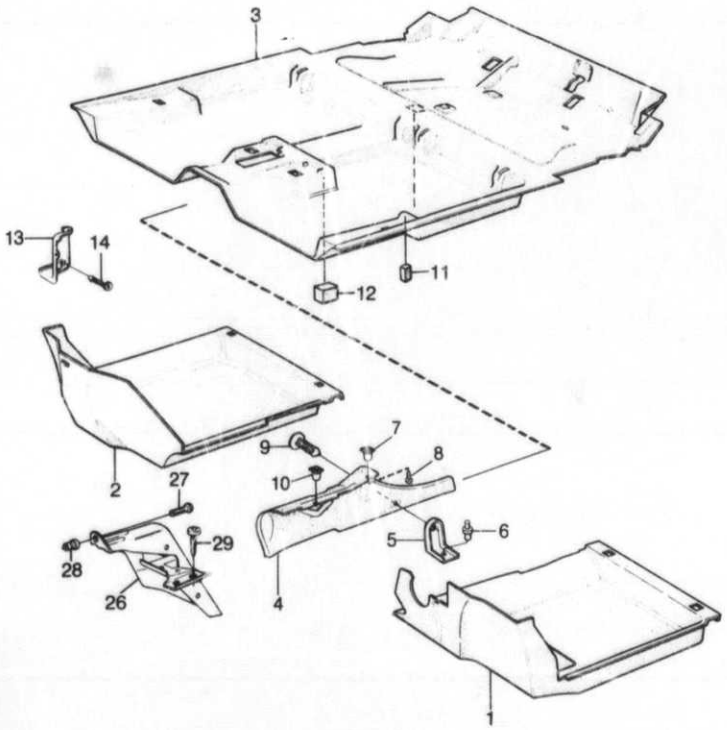

F4131 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR B12,B23,B33				
1	97 97 606		600,103), LH	1	Carpet	Matta	6
2	97 97 622		600,103), RH	1	Carpet	Matta	6
1	96 64 178		600,104), LH	1	Carpet	Matta	6
2	96 64 194		600,104), RH	1	Carpet	Matta	6
1	96 64 202		600,104), LH, RHD	1	Carpet	Matta	6
2	96 64 186		600,104), RH, RHD	1	Carpet	Matta	6
3	97 97 960		600)	1	Carpet	Matta	6
4	97 97 366		600,103), LH	1	Carpet	Matta	6
4	97 97 374		600,103), RH	1	Carpet	Matta	6
4	96 64 210		600,104), LH	1	Carpet	Matta	6
4	96 64 228		600,104), RH	1	Carpet	Matta	6
4	96 64 236		600,104), LH, RHD	1	Carpet	Matta	6
4	96 64 244		600,104), RH, RHD	1	Carpet	Matta	6
			TRIM COLOUR C12, C23				
1	97 97 630		560,103) LH	1	Carpet	Matta	
2	*97 97 655*		560,103), RH NLS	1	Carpet	Matta	
1	96 64 277		560,104), LH	1	Carpet	Matta	6
2	96 64 293		560,104), RH	1	Carpet	Matta	6
1	*97 97 804*		560,103), LH, RHD NLS	1	Carpet	Matta	
2	97 97 788		560,103), RH, RHD	1	Carpet	Matta	
1	96 64 301		560,104), LH, RHD	1	Carpet	Matta	6
2	96 64 285		560,104), RH, RHD	1	Carpet	Matta	6
3	97 94 652		560)	1	Carpet	Matta	6
4	*97 97 382*		560,103), LH NLS	1	Carpet	Matta	6
4	97 97 390		560,103), RH	1	Carpet	Matta	6
4	96 64 335		560,104), LH	1	Carpet	Matta	6
4	96 64 343		560,104), RH	1	Carpet	Matta	6
4	*97 97 507*		560,103), LH, RHD NLS	1	Carpet	Matta	6
4	97 97 515		560,103), RH, RHD	1	Carpet	Matta	6
4	96 64 350		560,104), LH, RHD	1	Carpet	Matta	6
4	96 64 368		560,104), RH, RHD	1	Carpet	Matta	6

103. Ch. --H1000751, --H8000040
104. Ch. H1000752--, H8000041--
560. Red Röd
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G08

Carpets 1987
Mattor 1987

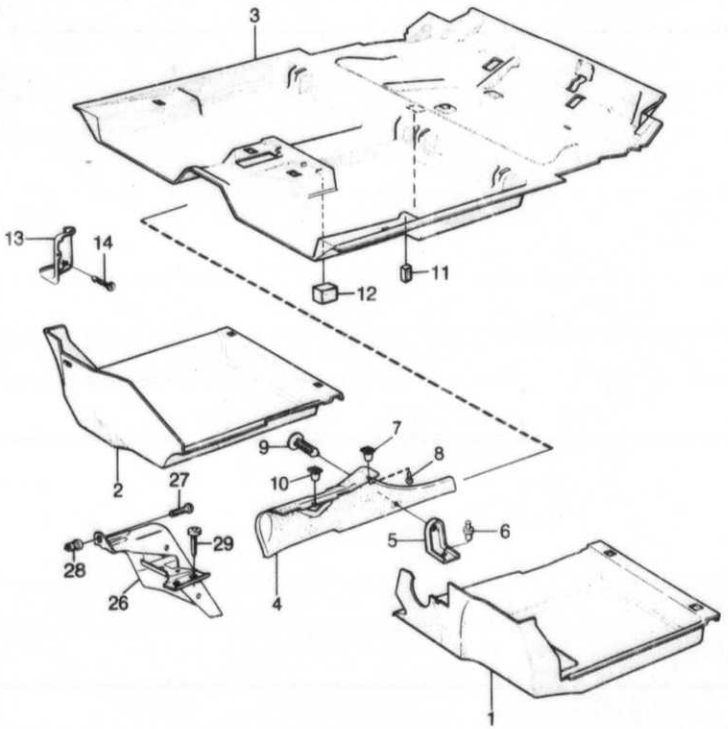

F4131 9000

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0800				TRIM COLOUR C33				
0810	1	97 99 099		560,103) LH	1	Carpet	Matta	
0820	2	*97 99 115*		560,103), RH NLS	1	Carpet	Matta	
0830	1	96 64 905		560,104,155), LH	1	Carpet	Matta	6
0840	2	96 64 921		560,104,155), RH	1	Carpet	Matta	6
0850	1	96 64 277		560,156), LH	1	Carpet	Matta	6
0860	2	96 64 293		560,156), RH	1	Carpet	Matta	6
0870	1	*97 99 149*		560,103), LH, RHD NLS	1	Carpet	Matta	
0880	2	*97 99 123*		560,103), RH, RHD NLS	1	Carpet	Matta	
0890	1	96 64 939		560,104,155), LH, RHD	1	Carpet	Matta	6
0900	2	96 64 913		560,104,155), RH, RHD	1	Carpet	Matta	6
0910	1	96 64 301		560,156), LH, RHD	1	Carpet	Matta	6
0920	2	96 64 285		560,156), RH, RHD	1	Carpet	Matta	6
0930	3	97 99 156		560,155)	1	Carpet	Matta	6
0940	3	97 94 652		560,156)	1	Carpet	Matta	6
0950	4	*97 99 164*		560,103), LH NLS	1	Carpet	Matta	6
0960	4	*97 99 172*		560,103), RH NLS	1	Carpet	Matta	6
0970	4	96 64 962		560,104,155), LH	1	Carpet	Matta	6
0980	4	96 64 970		560,104,155), RH	1	Carpet	Matta	6
0990	4	96 64 335		560,156), LH	1	Carpet	Matta	6
1000	4	96 64 343		560,156), RH	1	Carpet	Matta	6
1010	4	*97 99 180*		560,103), LH, RHD NLS	1	Carpet	Matta	6
1020	4	*97 99 198*		560,103), RH, RHD NLS	1	Carpet	Matta	6
1030	4	96 64 988		560,104,155), LH, RHD	1	Carpet	Matta	6
1040	4	96 64 996		560,104,155), RH, RHD	1	Carpet	Matta	6
1050	4	96 64 350		560,156), LH, RHD	1	Carpet	Matta	6
1060	4	96 64 368		560,156), RH, RHD	1	Carpet	Matta	6
1070				TRIM COLOUR D12, D23				
1080	1	97 97 697		580,103) LH	1	Carpet	Matta	
1090	2	97 97 713		580,103), RH	1	Carpet	Matta	
1100	1	96 64 608		580,104), LH	1	Carpet	Matta	6
1110	2	96 64 624		580,104), RH	1	Carpet	Matta	6
1120	1	*97 97 861*		580,103), LH, RHD NLS	1	Carpet	Matta	
1130	2	*97 97 846*		580,103), RH, RHD NLS	1	Carpet	Matta	
1140	1	96 64 632		580,104), LH, RHD	1	Carpet	Matta	6
1150	2	96 64 616		580,104), RH, RHD	1	Carpet	Matta	6
1160	3	97 94 678		580)	1	Carpet	Matta	6
1170	4	97 97 424		580,103), LH	1	Carpet	Matta	6
1180	4	97 97 432		580,103), RH	1	Carpet	Matta	6
1190	4	96 64 665		580,104), LH	1	Carpet	Matta	6
1200	4	96 64 673		580,104), RH	1	Carpet	Matta	6
1210	4	*97 97 549*		580,103), LH, RHD NLS	1	Carpet	Matta	6
1220	4	*97 97 556*		580,103), RH, RHD NLS	1	Carpet	Matta	6
1230	4	96 64 681		580,104), LH, RHD	1	Carpet	Matta	6
1240	4	96 64 699		580,104), RH, RHD	1	Carpet	Matta	6
1250								

103. Ch. --H1000751, --H8000040
104. Ch. H1000752--, H8000041--
155. Ch. --H1016318, --H8000139
156. Ch. H1016319--, H8000140--
560. Red Röd
580. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G10

Carpets 1987

Mattor 1987

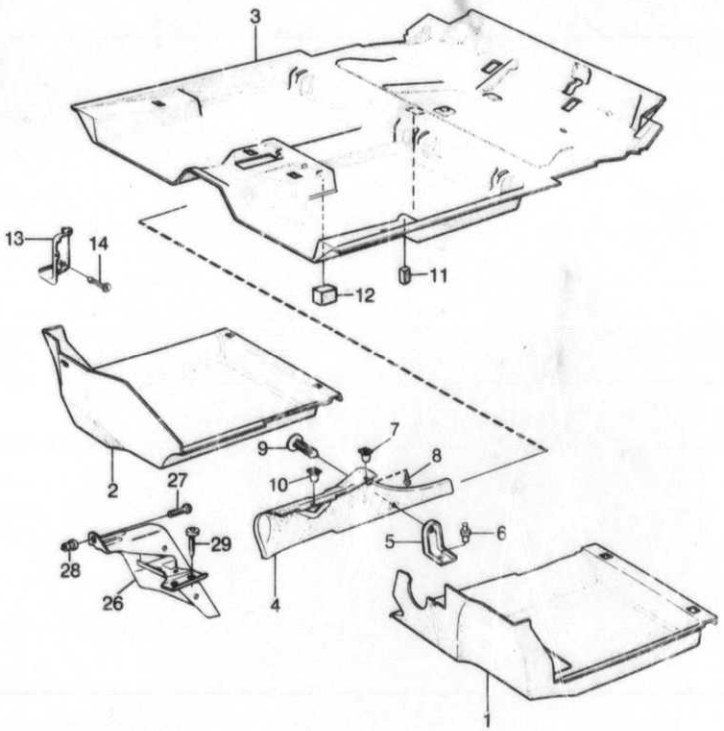

F4131 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR E12, E23				
1	*97 97 721*		570,103) LH NLS	1	Carpet	Matta	
2	*97 97 747*		570,103), RH NLS	1	Carpet	Matta	
1	96 64 707		570,104), LH	1	Carpet	Matta	6
2	96 64 723		570,104), RH	1	Carpet	Matta	6
1	97 97 895		570,103), LH, RHD	1	Carpet	Matta	
2	*97 97 879*		570,103), RH, RHD NLS	1	Carpet	Matta	
1	96 64 731		570,104), LH, RHD	1	Carpet	Matta	6
2	96 64 715		570,104), RH, RHD	1	Carpet	Matta	6
3	*97 97 978*		570) NLS	1	Carpet	Matta	6
4	*97 97 440*		570,103), LH NLS	1	Carpet	Matta	
4	97 97 457		570,103), RH	1	Carpet	Matta	6
4	96 64 764		570,104), LH	1	Carpet	Matta	6
4	96 64 772		570,104), RH	1	Carpet	Matta	6
4	*97 97 564*		570,103), LH, RHD NLS	1	Carpet	Matta	6
4	*97 97 572*		570,103), RH, RHD NLS	1	Carpet	Matta	6
4	96 64 780		570,104), LH, RHD	1	Carpet	Matta	6
4	96 64 798		570,104), RH, RHD	1	Carpet	Matta	6
			TRIM COLOUR E33				
1	97 98 919		570,103), LH	1	Carpet	Matta	
2	97 98 935		570,103), RH	1	Carpet	Matta	
1	96 64 707		570,104), LH	1	Carpet	Matta	6
2	96 64 723		570,104), RH	1	Carpet	Matta	6
1	*97 98 992*		570,103), LH, RHD NLS	1	Carpet	Matta	
2	*97 98 976*		570,103), RH, RHD NLS	1	Carpet	Matta	
1	96 64 731		570,104), LH, RHD	1	Carpet	Matta	6
2	96 64 715		570,104), RH, RHD	1	Carpet	Matta	6
3	97 99 016		570,103)	1	Carpet	Matta	6
3	*97 97 978*		570,104) NLS	1	Carpet	Matta	6
4	97 98 828		570,103), LH	1	Carpet	Matta	6
4	97 98 836		570,103), RH	1	Carpet	Matta	6
4	96 64 764		570,104), LH	1	Carpet	Matta	6
4	96 64 772		570,104), RH	1	Carpet	Matta	6
4	*97 98 869*		570,103), LH, RHD NLS	1	Carpet	Matta	6
4	*97 98 877*		570,103), RH, RHD NLS	1	Carpet	Matta	6
4	96 64 780		570,104), LH, RHD	1	Carpet	Matta	6
4	96 64 798		570,104), RH, RHD	1	Carpet	Matta	6
5	*97 69 084*		161), LH NLS	1	Bracket	Fäste	5
5	96 63 345		162), LH	1	Bracket	Fäste	5
5	*97 69 092*		161), RH NLS	1	Bracket	Fäste	5
5	96 63 352		162), RH	1	Bracket	Fäste	5
6	98 49 514			2	Rivet	Nit	5
7	79 77 358			2	Press nut	Pressmutter	5
8	97 71 320			2	Screw	Skruv	5
9	96 68 138		590)	4	Clip	Clips	5
9	96 68 112		600)	4	Clip	Clips	5
9	96 68 120		560)	4	Clip	Clips	5
9	96 68 146		580)	4	Clip	Clips	5
9	96 68 153		570)	4	Clip	Clips	5
10	79 77 341			2	Press nut	Pressmutter	5
11	98 97 919			2	Spacer	Mellanlägg	5
12	98 97 901			2	Spacer	Mellanlägg	5
13	*96 59 236*		590), RHD NLS	1	Cover	Kåpa	6

103. Ch. --H1000751, --H8000040
104. Ch. H1000752--, H8000041--
161. Ch. --H1000751
162. Ch. H1000752--
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G12

Carpets 1987
Mattor 1987

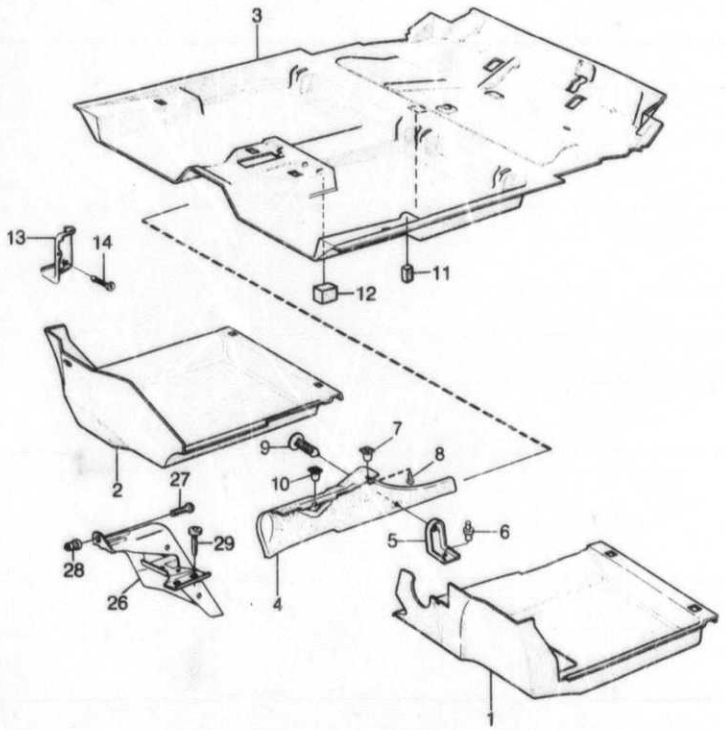

F4131 9000

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1800	13	*96 59 210*		600), RHD NLS	1	Cover	Kåpa	6
1810	13	*96 59 228*		560), RHD NLS	1	Cover	Kåpa	6
1820	13	*96 59 244*		580), RHD NLS	1	Cover	Kåpa	6
1830	13	*96 59 251*		570), RHD NLS	1	Cover	Kåpa	6
1840	14	96 59 442		590)	1	Special screw	Snabbskruv	5
1850	14	96 59 426		600)	1	Special screw	Snabbskruv	5
1860	14	96 59 434		560)	1	Special screw	Snabbskruv	5
1870	14	*96 59 459*		580) NLS	1	Special screw	Snabbskruv	5
1880	14	94 91 689		570)	1	Special screw	Snabbskruv	5
1890	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
1900	27	79 77 283		RHD	1	Screw	Skruv	5
1910	28	73 98 936		RHD	1	Nut	Mutter	5
1920	29	79 77 366		RHD	2	Screw	Skruv	5

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G14

Carpets 1988
Mattor 1988

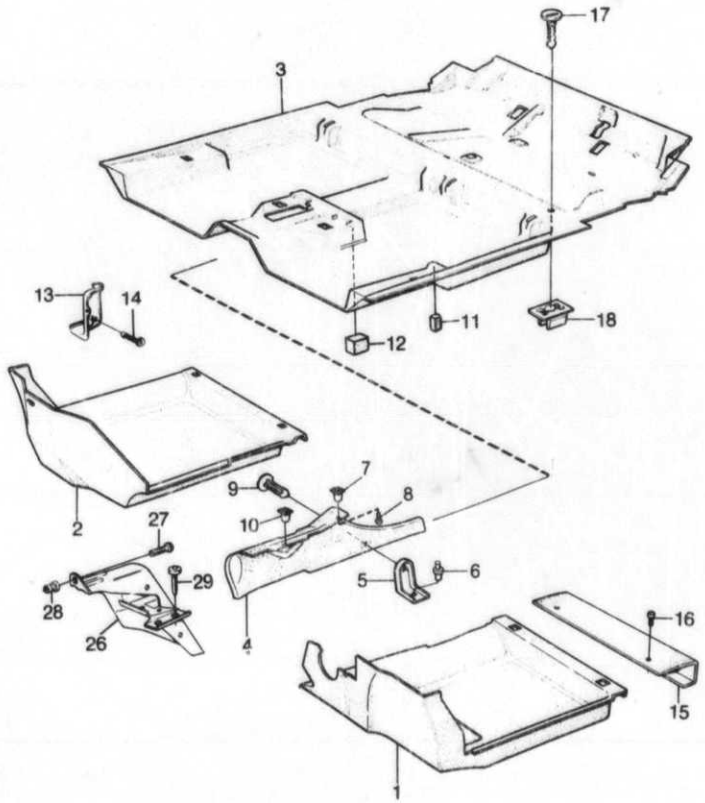

F4132 9000

1365	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR A14,A24,A33				
0025	1	96 64 509		590), LH	1	Carpet	Matta	6
0030	2	95 75 366		590), RH	1	Carpet	Matta	6
0040	1	96 64 533		590), LH, RHD	1	Carpet	Matta	6
0050	2	96 64 517		590), RH, RHD	1	Carpet	Matta	6
0060	3	96 91 866		590)	1	Carpet	Matta	6
0070	3	96 92 427		590), 4D	1	Carpet	Matta	6
0080	4	96 90 611		590), LH	1	Carpet	Matta	6
0090	4	96 90 660		590), RH	1	Carpet	Matta	6
0100	4	96 90 710		590), LH, RHD	1	Carpet	Matta	6
0110	4	96 90 769		590), RH, RHD	1	Carpet	Matta	6
0140				TRIM COLOUR B14,B24,B33				
0145	1	96 64 178		600), LH	1	Carpet	Matta	6
0150	2	95 75 341		600), RH	1	Carpet	Matta	6
0160	1	96 64 202		600), LH, RHD	1	Carpet	Matta	6
0170	2	96 64 186		600), RH, RHD	1	Carpet	Matta	6
0180	3	96 91 841		600)	1	Carpet	Matta	6
0190	3	96 92 401		600), 4D	1	Carpet	Matta	6
0200	4	96 90 595		600), LH	1	Carpet	Matta	6
0210	4	96 90 645		600), RH	1	Carpet	Matta	6
0220	4	96 90 694		600), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 744		600), RH, RHD	1	Carpet	Matta	6
0260				TRIM COLOUR C14,C24,C33				
0265	1	96 64 277		560), LH	1	Carpet	Matta	6
0270	2	95 75 358		560), RH	1	Carpet	Matta	6
0280	1	96 64 301		560), LH, RHD	1	Carpet	Matta	6
0290	2	96 64 285		560), RH, RHD	1	Carpet	Matta	6
0300	3	96 91 858		560)	1	Carpet	Matta	6
0310	3	96 92 419		560), 4D	1	Carpet	Matta	6
0320	4	96 90 603		560), LH	1	Carpet	Matta	6
0330	4	96 90 652		560), RH	1	Carpet	Matta	6
0340	4	96 90 702		560), LH, RHD	1	Carpet	Matta	6
0350	4	96 90 751		560), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR E14,E24,E33				
0385	1	96 64 707		570), LH	1	Carpet	Matta	6
0390	2	95 75 374		570), RH	1	Carpet	Matta	6
0400	1	96 64 731		570), LH, RHD	1	Carpet	Matta	6
0410	2	96 64 715		570), RH, RHD	1	Carpet	Matta	6
0420	3	42 64 941		570) (9691874)	1	Carpet	Matta	6
0430	3	96 92 435		570), 4D	1	Carpet	Matta	6
0440	4	96 90 629		570), LH	1	Carpet	Matta	6
0450	4	96 90 678		570), RH	1	Carpet	Matta	6
0460	4	96 90 728		570), LH, RHD	1	Carpet	Matta	6
0470	4	96 90 777		570), RH, RHD	1	Carpet	Matta	6
0480								
0500				TRIM COLOUR F14, F24				
0505	1	96 90 538		580), LH	1	Carpet	Matta	6
0510	2	95 75 382		580), RH	1	Carpet	Matta	6
0520	1	96 90 587		580), LH, RHD	1	Carpet	Matta	6
0530	2	96 90 561		580), RH, RHD	1	Carpet	Matta	6
0540	3	42 64 958		580) (9691700)	1	Carpet	Matta	6
0550	3	96 92 443		580), 4D	1	Carpet	Matta	6
0560	4	96 90 637		580), LH	1	Carpet	Matta	6
0570	4	96 90 686		580), RH	1	Carpet	Matta	6
0580	4	96 90 736		580), LH, RHD	1	Carpet	Matta	6
0590	4	96 90 785		580), RH, RHD	1	Carpet	Matta	6
0600								
0610	5	96 63 345		LH	1	Bracket	Fäste	5

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G16

Carpets 1988
Mattor 1988

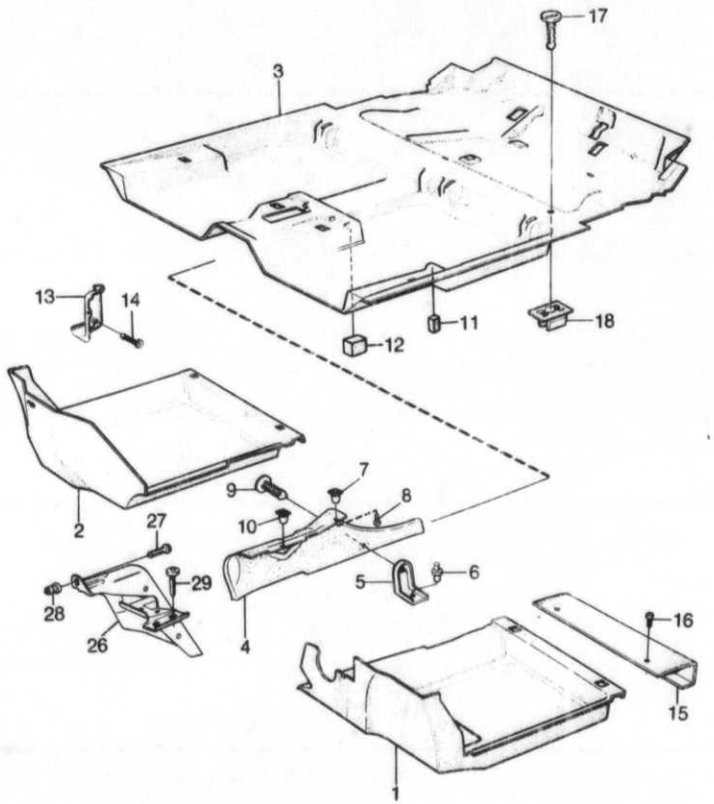

F4132 9000

1365	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	5	96 63 352		RH	1	Bracket	Fäste	5
0630	6	98 49 514			2	Rivet	Nit	5
0640	7	79 77 358			2	Press nut	Pressmutter	5
0650	8	97 71 320			2	Screw	Skruv	5
0660	9	96 68 138		590)	4	Clip	Clips	5
0670	9	96 68 112		600)	4	Clip	Clips	5
0680	9	96 68 120		560)	4	Clip	Clips	5
0690	9	96 68 153		570)	4	Clip	Clips	5
0700	9	96 75 646		580)	4	Clip	Clips	5
0710	10	79 77 341			2	Press nut	Pressmutter	5
0720	11	98 97 919			2	Spacer	Mellanlägg	5
0730	12	98 97 901			2	Spacer	Mellanlägg	5
0740	13	96 92 799		590), RHD	1	Cover	Kåpa	6
0750	13	96 92 773		600), RHD	1	Cover	Kåpa	6
0760	13	96 92 781		560), RHD	1	Cover	Kåpa	6
0770	13	96 92 807		570), RHD	1	Cover	Kåpa	6
0780	13	96 90 926		580), RHD	1	Cover	Kåpa	6
0790	14	96 59 442		590)	1	Special screw	Snabbskruv	5
0800	14	96 59 426		600)	1	Special screw	Snabbskruv	5
0810	14	96 59 434		560)	1	Special screw	Snabbskruv	5
0820	14	94 91 689		570)	1	Special screw	Snabbskruv	5
0830	14	96 75 653		580)	1	Special screw	Snabbskruv	5
0840								
0850	15	96 78 186		590)	1	Cover	Kåpa	6
0860	15	96 78 160		600)	1	Cover	Kåpa	6
0870	15	96 78 178		560)	1	Cover	Kåpa	6
0880	15	96 78 194		570)	1	Cover	Kåpa	6
0890	15	96 78 202		580)	1	Cover	Kåpa	6
0900								
0910	16	79 77 283			1	Screw	Skruv	5
0920	17	96 59 442		590), 4D	4	Special screw	Snabbskruv	5
0930	17	96 59 426		600), 4D	4	Special screw	Snabbskruv	5
0940	17	96 59 434		560), 4D	4	Special screw	Snabbskruv	5
0950	17	94 91 689		570), 4D	4	Special screw	Snabbskruv	5
0960	17	96 75 653		580), 4D	4	Special screw	Snabbskruv	5
0970	18	84 52 898		4D	4	Quick nut	Snabbmutter	3
0980	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
0990	27	79 77 283		RHD	1	Screw	Skruv	5
1000	28	73 98 936		RHD	1	Nut	Mutter	5
1010	29	79 77 366		RHD	2	Screw	Skruv	5

560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmissi...	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G18

500), Carpets 1989

500), Mattor 1989

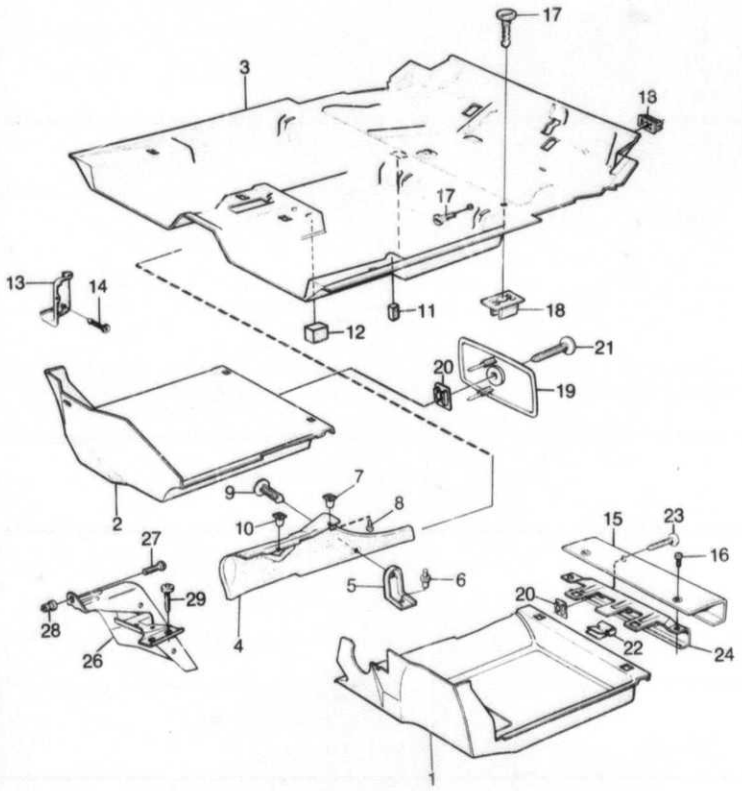

F4133 9000

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C24,C44,C33				
0025	1	95 87 775		560), LH	1	Carpet	Matta	6
0030	2	95 87 874		560), RH	1	Carpet	Matta	6
0040	1	95 87 882		560), LH, RHD	1	Carpet	Matta	6
0050	2	95 87 783		560), RH, RHD	1	Carpet	Matta	6
0060	3	95 87 809		560)	1	Carpet	Matta	6
0070	3	95 88 583		560), 4D	1	Carpet	Matta	6
0080	4	96 90 603		560), LH	1	Carpet	Matta	6
0090	4	96 90 652		560), RH	1	Carpet	Matta	6
0100	4	96 90 702		560), LH, RHD	1	Carpet	Matta	6
0110	4	96 90 751		560), RH, RHD	1	Carpet	Matta	6
0140				TRIM COLOUR E24,E44,E33				
0145	1	95 87 817		570), LH	1	Carpet	Matta	6
0150	2	95 87 916		570), RH	1	Carpet	Matta	6
0160	1	95 87 924		570), LH, RHD	1	Carpet	Matta	6
0170	2	95 87 825		570), RH, RHD	1	Carpet	Matta	6
0180	3	*95 87 890*		570) NLS - USE 4264941	1	Carpet	Matta	6
0190	3	*95 88 591*		570), 4D NLS - USE 4265047	1	Carpet	Matta	6
0200	4	96 90 629		570), LH	1	Carpet	Matta	6
0210	4	96 90 678		570), RH	1	Carpet	Matta	6
0220	4	96 90 728		570), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		570), RH, RHD	1	Carpet	Matta	6
0260				TRIM COLOUR F24,F44,F33				
0265	1	95 87 833		580), LH	1	Carpet	Matta	6
0270	2	95 87 932		580), RH	1	Carpet	Matta	6
0280	1	95 87 940		580), LH, RHD	1	Carpet	Matta	6
0290	2	95 87 841		580), RH, RHD	1	Carpet	Matta	6
0300	3	95 87 908		580)	1	Carpet	Matta	6
0310	3	95 88 609		580), 4D	1	Carpet	Matta	6
0320	4	96 90 637		580), LH	1	Carpet	Matta	6
0330	4	96 90 686		580), RH	1	Carpet	Matta	6
0340	4	96 90 736		580), LH, RHD	1	Carpet	Matta	6
0350	4	96 90 785		580), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR G24,G44,G33				
0385	1	95 44 859		590), LH	1	Carpet	Matta	6
0390	2	95 44 875		590), RH	1	Carpet	Matta	6
0400	1	95 44 883		590), LH, RHD	1	Carpet	Matta	6
0410	2	95 44 867		590), RH, RHD	1	Carpet	Matta	6
0420	3	*95 44 917*		590) NLS - USE 4264966	1	Carpet	Matta	6
0430	3	95 44 925		590), 4D	1	Carpet	Matta	6
0440	4	95 80 911		590), LH	1	Carpet	Matta	6
0450	4	95 80 929		590), RH	1	Carpet	Matta	6
0460	4	95 80 820		590), LH, RHD	1	Carpet	Matta	6
0470	4	95 80 838		590), RH, RHD	1	Carpet	Matta	6
0480								
0490	5	96 63 345		LH	1	Bracket	Fäste	5
0500	5	96 63 352		RH	1	Bracket	Fäste	5
0510	6	98 49 514			2	Rivet	Nit	5
0520	7	79 77 358			2	Press nut	Pressmutter	5
0530	8	97 71 320			2	Screw	Skruv	5
0540	9	96 68 120		560)	4	Clip	Clips	5
0550	9	96 68 153		570)	4	Clip	Clips	5
0560	9	96 75 646		580)	4	Clip	Clips	5
0570	9	95 80 846		590)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5
0600	12	98 97 901			2	Spacer	Mellanlägg	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G20

500), Carpets 1989

500), Mattor 1989

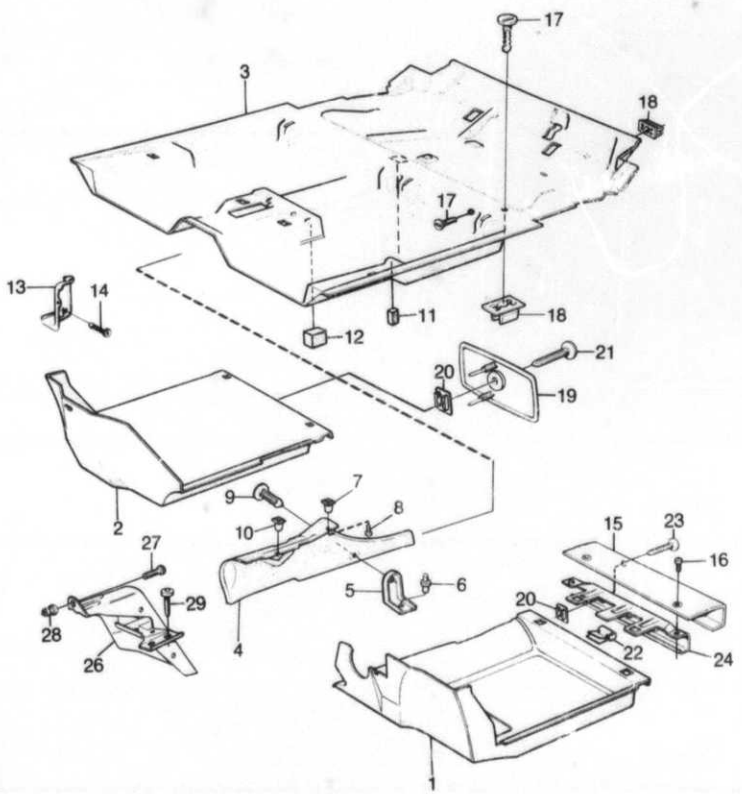

F4133 9000

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	13	96 92 781		560), RHD	1	Cover	Kåpa	6
0620	13	96 92 807		570), RHD	1	Cover	Kåpa	6
0630	13	96 90 926		580), RHD	1	Cover	Kåpa	6
0640	13	95 80 853		590), RHD	1	Cover	Kåpa	6
0650	14	96 59 434		560)	1	Special screw	Snabbskruv	5
0660	14	94 91 689		570)	1	Special screw	Snabbskruv	5
0670	14	96 75 653		580)	1	Special screw	Snabbskruv	5
0680	14	95 80 861		590)	1	Special screw	Snabbskruv	5
0690								
0700	15	40 42 933		560)	1	Cover	Kåpa	6
0710	15	40 42 941		570)	1	Cover	Kåpa	6
0720	15	40 42 958		580)	1	Cover	Kåpa	6
0730	15	40 42 966		590), (9581133)	1	Cover	Kåpa	6
0740	16	79 77 283			1	Screw	Skruv	5
0750	17	96 59 434		560), 4D	4	Special screw	Snabbskruv	5
0760	17	94 91 689		570), 4D	4	Special screw	Snabbskruv	5
0770	17	96 75 653		580), 4D	4	Special screw	Snabbskruv	5
0780	17	95 80 861		590), 4D	4	Special screw	Snabbskruv	5
0790	18	84 52 898		4D	4	Quick nut	Snabbmutter	3
0800	19	95 47 993			1	Cover	Kåpa	6
0810						test connector	diagnostikuttag	
0820	20	84 52 898			2	Quick nut	Snabbmutter	3
0830	21	98 67 821			1	Special screw	Snabbskruv	5
0840	22	40 48 401			2	Clamp	Klämma	5
0850	23	94 91 689			1	Special screw	Snabbskruv	5
0860	24	41 38 590			1	Cover	Kåpa	6
0870	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
0880	27	79 77 283		RHD	1	Screw	Skruv	5
0890	28	73 98 936		RHD	1	Nut	Mutter	5
0900	29	79 77 366		RHD	2	Screw	Skruv	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G22

Head- and pillar lining
Takklädsel,stolpklädsel

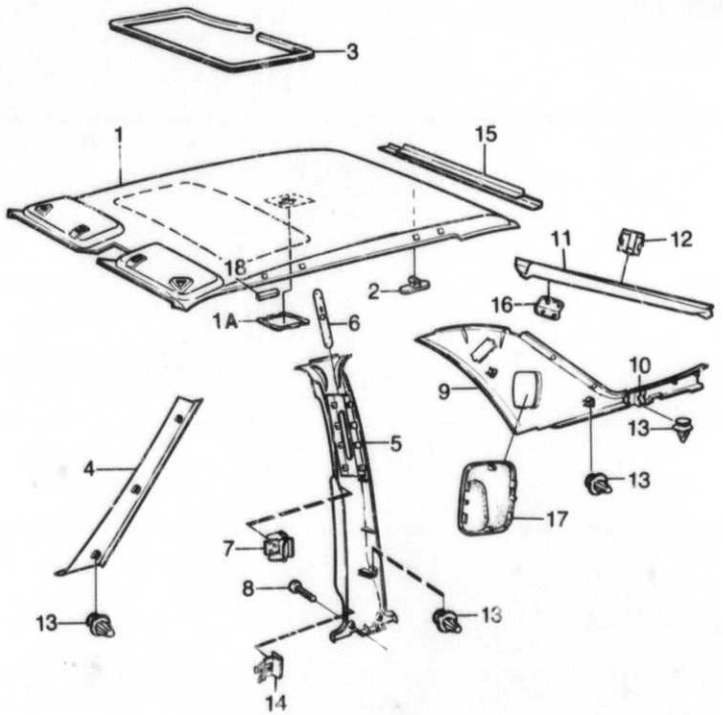

F7138 9000

1400)	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*97 71 734*		-1988 NLS - USE 9593294	1	Head lining	Takklädsel	6
0020	1	95 93 294		500), 1989-	1	Head lining	Takklädsel	6
0030	1	96 75 380		1988, 4D	1	Head lining	Takklädsel	6
0040	1	*95 83 980*		500), 1989-, 4D NLS - USE 4273652	1	Head lining	Takklädsel	6
0050	1	97 71 742		-1988, SR	1	Head lining	Takklädsel	6
0060	1	95 83 964		1989-,500,486), SR	1	Head lining	Takklädsel	6
0070	1	95 92 361		487), SR	1	Head lining	Takklädsel	6
0080	1	96 75 398		1988, 4D, SR	1	Head lining	Takklädsel	6
0090	1	95 84 004		500), 1989-, 4D, SR	1	Head lining	Takklädsel	6
0100	1A	• 97 56 974			1	•Protection	•Skydd	6
0110	2	97 85 031			1	Upholstery clip	Klädselfäste	5
0120	3	*97 71 759*		64), SR NLS - USE 9663907	1	Strip	List	6
0130	3	96 63 907		65), SR	1	Strip	List	6
0150	4	97 56 826		560,178), LH	1	Crash pad	Stötskydd	6
0160	4	96 90 330		560,179), LH	1	Crash pad	Stötskydd	6
0170	4	97 56 834		560,178), RH	1	Crash pad	Stötskydd	6
0180	4	96 90 348		560,179), RH	1	Crash pad	Stötskydd	6
0200	4	97 56 842		590,180), LH	1	Crash pad	Stötskydd	6
0210	4	96 90 355		590,181)-1988, LH	1	Crash pad	Stötskydd	6
0220	4	95 80 515		590,500), 1989-, LH	1	Crash pad	Stötskydd	6
0230	4	97 56 859		590,180), RH	1	Crash pad	Stötskydd	6
0240	4	96 90 363		590,181)-1988, RH	1	Crash pad	Stötskydd	6
0250	4	95 80 531		590,500), 1989-, RH	1	Crash pad	Stötskydd	6
0270	4	97 57 063		1987-,176,600), LH	1	Crash pad	Stötskydd	6
0280	4	96 90 314		600,177), LH	1	Crash pad	Stötskydd	6
0290	4	*97 57 071*		1987-,176,600), RH NLS	1	Crash pad	Stötskydd	6
0300	4	96 90 322		600,177), RH	1	Crash pad	Stötskydd	6
0320	4	97 56 867		580,182), LH	1	Crash pad	Stötskydd	6
0330	4	96 90 371		580,183)-1987, LH	1	Crash pad	Stötskydd	6
0340	4	95 71 308		580), 1988-, LH	1	Crash pad	Stötskydd	6
0350	4	*97 56 875*		580,182), RH NLS	1	Crash pad	Stötskydd	6
0360	4	96 90 389		580,183)-1987, RH	1	Crash pad	Stötskydd	6
0370	4	*95 71 316*		580), 1988-, RH NLS - USE 4140737	1	Crash pad	Stötskydd	6
0390	4	97 57 089		1986-,184,570), LH	1	Crash pad	Stötskydd	6

64. Ch. --G1013061
65. Ch. G1013062--
176. Ch. --H1018889, --H8000663
177. Ch. H1018890--, H8000664--
178. Ch. --H1018339, --H8000828
179. Ch. H1018340--, H8000829--
180. Ch. --H1019374, --H8000826
181. Ch. H1019375--, H8000827--
182. Ch. --H1020631, --H8000837
183. Ch. H1020632--, H8000838--
184. Ch. --H1018558, --H8000827
486. Ch. --K1016581, --K2009463, --K8000272
487. Ch. K1016582--, K2009464--, K8000273--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-G24

Head- and pillar lining
Takklädsel,stolpklädsel

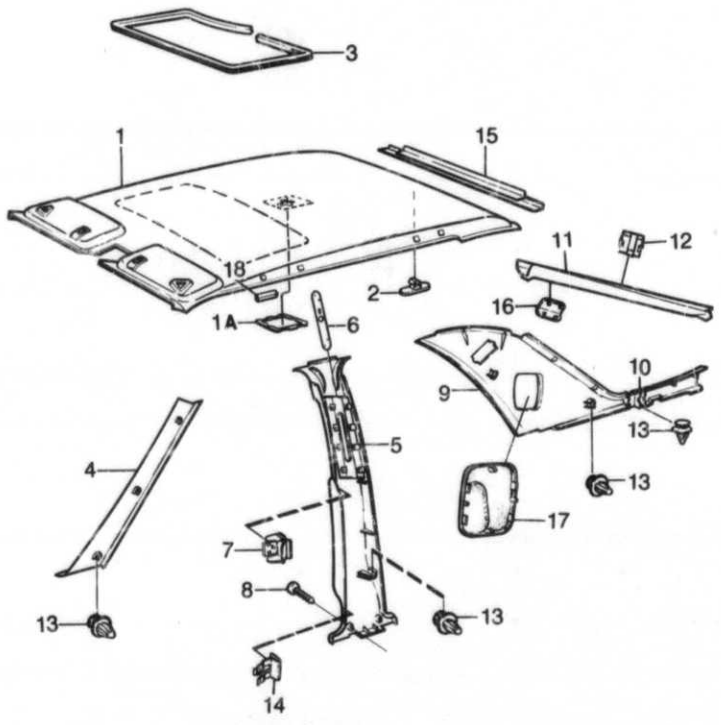

F7138 9000

Pos	Part No Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
4	*96 90 397*		570,185), LH NLS - USE 4140703	1	Crash pad	Stötskydd	6
4	97 57 097		1986-,184,570), RH	1	Crash pad	Stötskydd	6
4	*96 90 405*		570,185), RH NLS - USE 4140711	1	Crash pad	Stötskydd	6
5	98 92 068		560), -1987, LH(9771833)	1	Crash pad	Stötskydd	6
5	95 71 399		560), 1988, LH	1	Crash pad	Stötskydd	6
5	95 93 625		560,500), 1989-, LH	1	Crash pad	Stötskydd	6
5	98 92 076		560), -1987, RH(9771841)	1	Crash pad	Stötskydd	6
5	95 71 407		560), 1988, RH	1	Crash pad	Stötskydd	6
5	95 93 633		560,500), 1989-, RH	1	Crash pad	Stötskydd	6
5	95 93 666		590) -1988, LH (9771853,9892084)	1	Crash pad	Stötskydd	6
5	95 93 781		590,500), 1989-, LH	1	Crash pad	Stötskydd	6
5	95 93 674		590) -1988, RH (9771856,9892092)	1	Crash pad	Stötskydd	6
5	95 93 799		590,500), 1989-, RH	1	Crash pad	Stötskydd	6
5	*98 92 043*		600), 1987-, LH NLS - USE 9593583	1	Crash pad	Stötskydd	6
5	95 93 591		600), 1987-, RH(9892050)	1	Upholstery	Klädsel	6
5	*97 71 874*		580), 1985, LH NLS - USE 9892100	1	Crash pad	Stötskydd	6
5	98 92 100		580), 1986-1987, LH	1	Crash pad	Stötskydd	6
5	95 93 708		580), 1988-, LH(9571332)	1	Crash pad	Stötskydd	6
5	*97 71 882*		580), 1985, RH NLS - USE 9892118	1	Crash pad	Stötskydd	6
5	98 92 118		580), 1986-1987, RH	1	Crash pad	Stötskydd	6
5	95 93 716		580), 1988-, RH(9571340)	1	Crash pad	Stötskydd	6
5	95 93 740		570), LH (9892126)	1	Crash pad	Stötskydd	6
5	95 93 757		570), RH (9892134)	1	Crash pad	Stötskydd	6
6	97 71 890			2	Rail	Skena	5
7	97 71 189			2	Clamp	Klämma	5
8	79 75 337			4	Screw	Skruv	5
9	*97 71 924*		1985, LH NLS	1	Crash pad	Stötskydd	6
9	98 92 282		1986-1988, LH	1	Crash pad	Stötskydd	6
9	95 84 020		1989-,446,500), LH	1	Crash pad	Stötskydd	6
9	*95 91 850*		447,474), LH NLS - USE 4267480	1	Crash pad	Stötskydd	6
9	*40 35 614*		475), LH NLS - USE 4267480	1	Crash pad	Stötskydd	6
9	97 71 932		1985, RH	1	Crash pad	Stötskydd	6
9	98 92 290		1986-1988, RH	1	Crash pad	Stötskydd	6
9	*95 84 046*		1989-,446,500), RH NLS - USE 4267498	1	Crash pad	Stötskydd	6

184. Ch. --H1018558, --H8000827
185. Ch. H1018559--, H8000828--
446. Ch --K1004750, --K2002045, --K8000139, SE 1988B: --J1050410 --J2031073, --J8005390
447. Ch K1004751--, K2002046--, K8000140--, SE 1988B: K1050411-- K2031074--, K8005391--
474. Ch. --K1013749, --K2007509, --K80000605
475. Ch. K1013750--, K2007510--, K80000606--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H02

Head- and pillar lining
Takklädsel,stolpklädsel

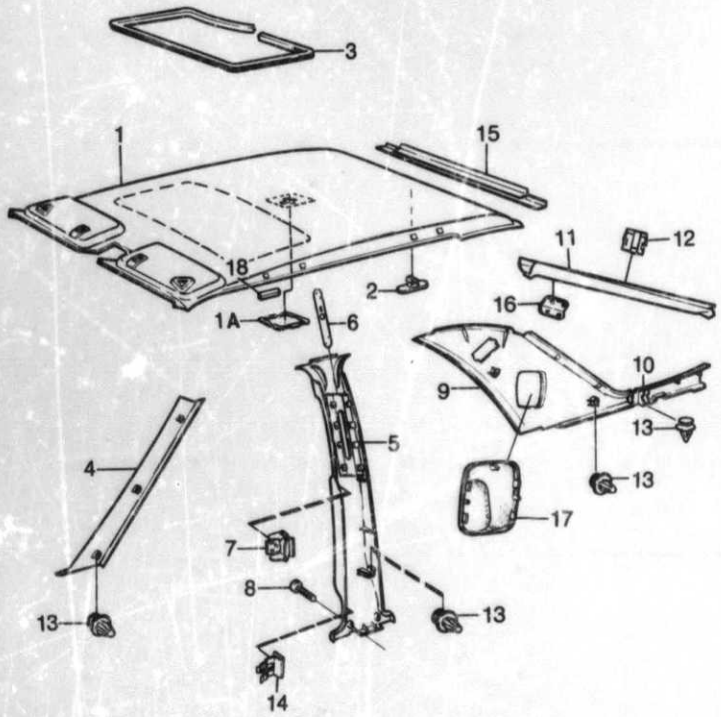

F7138 9000

1400	Pos	Part No/Art nr	k S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	9	*40 32 421*		447,474), RH NLS - USE	1	Crash pad	Stötskydd	6
0830				4267498				
0840	9	*40 35 622*		475), RH NLS - USE	1	Crash pad	Stötskydd	6
0840				4267498				
0850	9	96 61 067		1988, LH, 4D	1	Crash pad	Stötskydd	6
0860	9	95 84 087		500), 1989-, LH, 4D	1	Crash pad	Stötskydd	6
0870	9	96 61 075		1988, RH, 4D	1	Crash pad	Stötskydd	6
0880	9	95 84 103		500), 1989-, RH, 4D	1	Crash pad	Stötskydd	6
0890								
0900	10	97 71 965		LH	1	Strip	List	5
0910	10	97 71 973		RH	1	Strip	List	5
0920								
0930	11	97 71 940		457), LH	1	Crash pad	Stötskydd	6
0940	11	97 56 792		458), LH	1	Crash pad	Stötskydd	6
0950	11	97 71 957		457), RH	1	Crash pad	Stötskydd	6
0960	11	97 56 800		458), RH	1	Crash pad	Stötskydd	6
0970	12	97 65 611			6	Clamp	Klämma	5
0980	13	97 50 753		446)	18	Clip	Clips	5
0990	13	94 73 869		447)	8	Clip	Clips	5
1000	13	97 50 753		-1988, 4D	10	Clip	Clips	5
1010	13	94 73 8[illegible]9		500), 1989-, 4D	8	Clip	Clips	5
1020	14	97 95 709			2	Clamp	Klämma	5
1030	15	97 71 767		-1987	1	Strip	List	6
1040	15	95 41 319		1988-	1	Strip	List	6
1050	16	96 60 192		457)	4	Cover	Täcklock	5
1060	16	97 56 776		458), LH	1	Cover	Täcklock	5
1070	16	97 56 784		458), RH	1	Cover	Täcklock	5
1080	17	96 91 262		LH	1	Grommet	Genomföring	5
1090	17	96 91 254		RH	1	Grommet	Genomföring	5
1100	18	95 80 721		1988, SR	10	Gasket	Packning	6


446. Ch --K1004750, --K2002045, --K8000139, SE 1988B: --J1050410 --J2031073, --J8005390
447. Ch K1004751--, K2002046--, K8000140--, SE 1988B: K1050411-- K2031074--, K8005391--
457. Ch. --K1008295, --K2004023, --K8000204, SE 1988B: --J1050727 , --J2[illegible]2398
458. Ch. K1008296--, K2004024--, K8000205--, SE 1988B J1050728-- , J2037[illegible]99--
474. Ch. --K1013749, --K2007509, --K80000605
475. Ch. K1013750--, K2007510--, K80000606--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

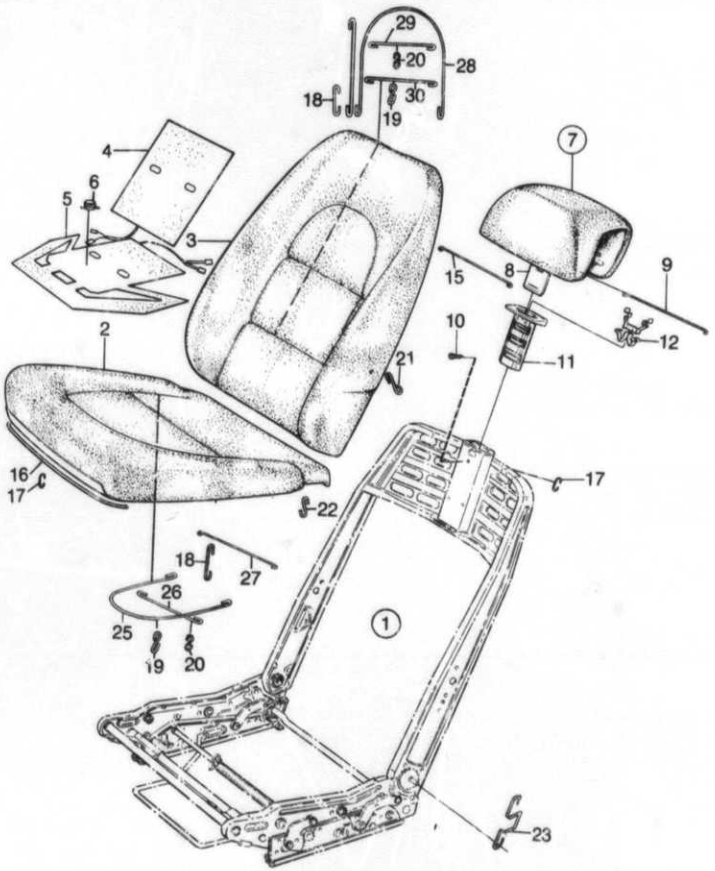

F7139 9000

1455	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 77 780		227) -1985 LH	1	Seat	Stol	6
0020	1	97 77 947		227) -1985 RH	1	Seat	Stol	6
0030	1	97 77 806		3,227) -1985 LH	1	Seat	Stol	6
0040	1	97 77 962		3,227) -1985 RH	1	Seat	Stol	6
0050	1	98 92 407		582) 1986-1987 LH	1	Seat	Stol	6
0060	1	98 94 684		582) 1986-1987 RH	1	Seat	Stol	6
0070	1	98 94 742		582) 1986-1987 LH RHD	1	Seat	Stol	6
0080	1	*98 92 464*		582) 1986-1987 RH RHD NLS	1	Seat	Stol	6
0090	2	*96 96 618*		109), 1987 (9874645) NLS - USE 4416525	1	.Seat cushion	.Sittdyna	6
0100	2	96 77 014		261), (9758707)	1	.Seat cushion	.Sittdyna	6
0110	3	97 58 715		261)	1	.Backrest cushion	.Ryggdyna	6
0120	3	98 74 629		109), 1987	1	.Backrest cushion	.Ryggdyna	6
0130	4	85 47 523		261,167)	1	.Heating element kit	.Värmedynesats	9
0140				See page 8B-251, 5-K12				
0150	4	95 69 955		261,168) (8593030)	1	.Heating pad	.Värmedyna	4
0160	4	95 19 877		109), 1987	1	.Heating pad	.Värmedyna	4
0170	5	85 47 507		-1986	1	.Heating element kit	.Värmedynesats	9
0180				See page 8B-251, 5-K12				
0190	5	85 47 515		1987-,167,261)	1	.Heating element kit	.Värmedynesats	9
0200				See page 8B-251, 5-K12				
0210	5	*95 27 706*		261,168) NLS - USE 4063855	1	.Heating pad	.Värmedyna	4
0220	5	95 19 869		109), 1987	1	.Heating pad	.Värmedyna	4
0230	6	95 24 745		(8513632,9556358)	1	..Thermostat	..Termostat	3
0240	7	97 67 807		226)	1	.Head restraint	.Nackstöd	6
0250	8	*97 67 815*		NLS - USE 9547688	1	..Head restraint	..Nackstöd	6
0260	9	94 59 868			2	..Wire rod	..Trådten	6
0270	10	79 74 348			1	.Screw	.Skruv	5
0280	11	40 31 563		(9795949)	1	.Sleeve	.Hylsa	5
0290	12	97 96 848		(9457557)	1	.Locking spring	.Spärrfjäder	5
0300	15	97 81 592			2	.Cover rod	.Klädselbåge	5
0310	16	97 82 558			1	.Cover rod	.Klädselbåge	5
0320	17	*70 90 640*		1985 NLS - USE 9450685	X	.Clamp	.Klammer	5
0330	17	94 50 685		1986-1987	X	.Clamp	.Klammer	5
0340	18	97 69 209		40 MM	X	.Hook	.Krok	5
0350	19	97 69 217		30 MM	X	.Hook	.Krok	5
0360	20	97 69 225		20 MM	X	.Hook	.Krok	5
0370	21	98 49 530		109)	X	.Wire rod	.Trådten	5
0380	22	96 92 864		109,232),-1987	2	.Hook	.Krok	5
0390	23	97 83 408		248)	2	.Attaching brace	.Fästbygel	5
0400	25	96 92 906		261)	1	.Wire rod	.Trådten	5
0410	26	97 21 499		261)	1	.Wire rod	.Trådten	5
0420	27	95 84 715			1	.Wire rod	.Trådten	5
0430	28	96 71 041		261)	1	.Wire rod	.Trådten	5
0440	29	97 21 481		261)	1	.Wire rod	.Trådten	5
0450	30	97 21 499		261)	1	.Wire rod	.Trådten	5
0460		96 76 818		261)	X	.Mounting kit	.Monteringssats	6
0470				See page 8B-245, 5-K06				

3. For cars with leather covers. För bilar med läderklädsel.
109. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
167. Ch. --H1018516, --H8000780
168. Ch. H1018517--, H8000781--
227. State upholstery colour and year model Uppge klädselfärg och årsmodell
228. State upholstery colour and ch No Uppge klädselfärg och ch nr
232. Ch. H1022982--, H8001069--
248. Ch. H1017424--, H8000708--
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
582. State upholstery colour, ch No and the type of heating pad (thermostat or rheostat). Uppge klädselfärg, ch nr och vilken typ av värmedyna (termostat eller reostat).

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H06

Front seats Part 2 -1987

Stolar Del 2 -1987

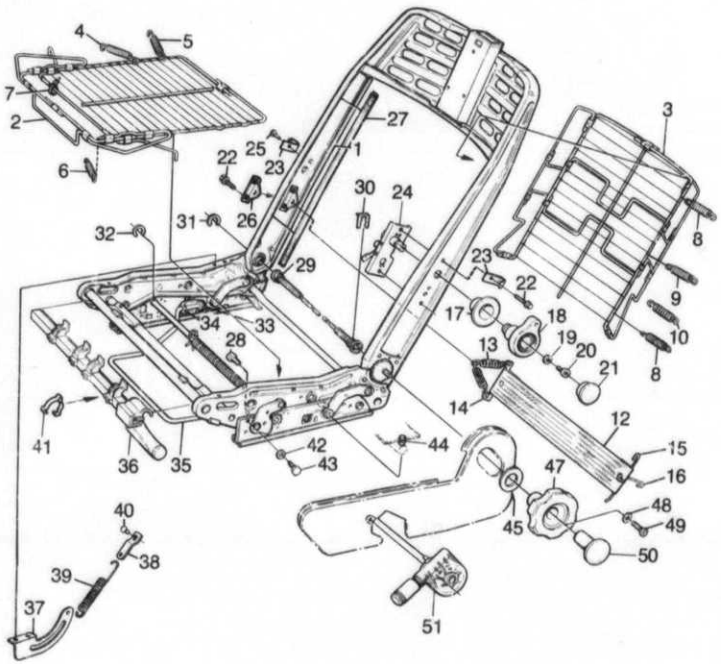

F4134 9000

1460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-171, 5-H04		Seat	Stol	
0020	1	98 96 424		165) LH	1	.Seat frame	.Stolram	6
0030	1	96 94 571		166) LH	1	.Seat frame	.Stolram	6
0040	1	*98 96 341*		616), RH NLS	1	.Seat frame	.Stolram	6
0050	1	*98 96 341*		616), LH RHD NLS	1	.Seat frame	.Stolram	6
0060	1	*98 96 440*		165) RH RHD NLS - USE 4257689, 8073108, 9618752	1	.Seat frame	.Stolram	6
0070	1	*96 94 589*		166) RH RHD NLS - USE 4257689, 8073108, 9618752	1	.Seat frame	.Stolram	6
0080	2	96 56 869		146,414) (9758673)	1	.Wire matting	.Resårmatta	6
0090	2	96 73 179		414,147)	1	.Wire matting	.Resårmatta	6
0100	2	97 83 283		1986-,146,415)	1	.Wire matting	.Resårmatta	6
0110	2	96 73 450		415,147)	1	.Wire matting	.Resårmatta	6
0120	3	96 97 525		(9759051)	1	.Wire matting	.Resårmatta	6
0130	4	97 58 954		146)	6	.Spring	.Fjäder	6
0140	4	96 73 146		147)	6	.Spring	.Fjäder	6
0150	5	97 58 988		146)	2	.Spring	.Fjäder	6
0160	5	96 73 435		147)	2	.Spring	.Fjäder	6
0170	6	97 58 947		414)	2	.Spring	.Fjäder	6
0180	7	79 71 872			2	.Tensioning band	.Spännband	5
0190	8	97 59 069			4	.Spring	.Fjäder	6
0200	9	97 59 077			2	.Spring	.Fjäder	6
0210	10	97 71 205		415)	2	.Spring	.Fjäder	6
0220	12	97 70 918		414)	1	.Strip	.Band	6
0230	13	*97 65 355*		414) NLS - USE 9579293	2	.Spring	.Fjäder	6
0240	14	97 70 942		414)	1	.Brace	.Bygel	5
0250	15	97 70 926		414)	1	.Brace	.Bygel	5
0260	16	97 70 934		414)	1	.Hook	.Krok	5
0270	17	97 85 015		414)	1	.Cover washer	.Täckbricka	6
0280	18	97 63 632		414)	1	.Steering wheel	.Ratt	5
0290	19	80 29 944		414)	1	.Washer	.Bricka	5
0300	20	80 59 396		414)	1	.Screw	.Skruv	5
0310	21	97 63 624		414)	1	.Cover	.Täcklock	6
0320	22	79 74 330		414)	4	.Screw	.Skruv	5
0330	23	97 78 895			2	.Brace	.Bygel	5
0340	24	97 63 657		414), -1986	1	.Control	.Reglage	6
0350	24	96 17 325		414), 1987	1	.Control	.Reglage	6
0360	24	97 77 533		414), -1986, RHD	1	.Control	.Reglage	6
0370	24	96 17 333		414), 1987, RHD	1	.Control	.Reglage	6
0380	25	79 75 402		414)	1	.Rivet	.Nit	5
0390	25	79 75 402		415)	2	.Rivet	.Nit	5
0400	26	97 65 330		414), -1986	1	.Bracket	.Konsol	5
0410	26	98 64 349		414), 1987	1	.Bracket	.Konsol	5
0420	27	96 71 835		1986-1987	2	.Protecting moulding	.Skyddslist	6
0430	28	80 19 713		414)	2	.Screw	.Skruv	5
0440	29	97 58 608			1	.Shaft	.Axel	6
0450	30	97 77 327			2	.E-circlip	.Spårryttare	5
0460	31	*79 15 077*		NLS - USE 7963143	1	.E-circlip	.Spårryttare	5
0470	32	*79 15 077*		414), 1985 NLS - USE 7963143	1	.E-circlip	.Spårryttare	5
0480	32	79 63 143		414), 1986-1987	1	.E-circlip	.Spårryttare	5
0490	33	*79 75 592*		1985 NLS - USE 7398282	2	.Washer	.Bricka	5


146. Driver seat --H1004334, passenger seat --H1005116 Förarstol --H1004334, passagerarstol --H1005116
147. Driver seat H1004335-, H8000041--, passenger seat H1005117-, H8000041-- Förarstol H1004335-, H8000041--, passagerarstol H1005117-, H8000041--
165. Ch. --H1019856, --H8000754
166. Ch. H1019857--, H8000755--
414. Driver seat Förarstol
415. Passenger seat Passagerarstol
616. Superseded by 4125209 LHD and 9618752 or 4125225 RHD and 9618752 Ersatt av 4125209 LHD och 9618752 eller 4125225 RHD och 9618752

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

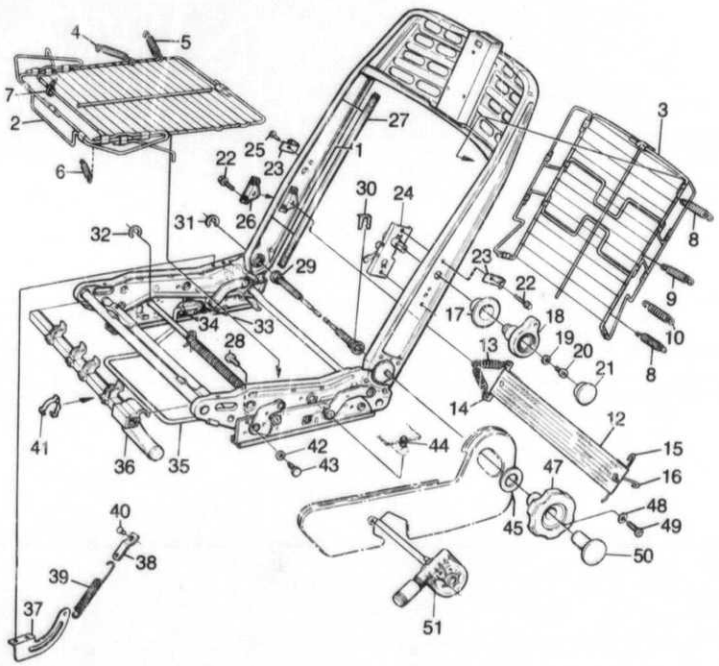

F4134 9000

1460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	33	73 98 282		1986-1987	2	.Washer	.Bricka	5
0510	34	97 82 582		1985	2	.Ring	.Ring	5
0520	35	97 81 774		138)	1	.Shaft	.Axel	6
0530	35	96 59 012		414,139)	1	.Shaft	.Axel	6
0540	35	96 59 020	S	415,139)	1	.Shaft	.Axel	6
0550	36	96 60 853		414), (9765298)	1	.Camshaft	.Kamaxel	6
0560	36	*97 77 541*		414), 1985, RHD NLS - USE 9660861	1	.Camshaft	.Kamaxel	6
0570	36	96 60 861		414), 1986-1987, RHD	1	.Camshaft	.Kamaxel	6
0580	37	97 95 618		LH	1	.Spring retainer	.Fjäderhållare	5
0590	37	97 95 626		RH	1	.Spring retainer	.Fjäderhållare	5
0600	38	97 95 634			2	.Spring retainer	.Fjäderhållare	5
0610	39	97 95 642			2	.Spring	.Fjäder	6
0620	40	79 75 402			6	.Rivet	.Nit	5
0630	41	97 67 518		414)	2	.Clamp	.Klämma	5
0640	42	79 16 497		415)	4	.Washer	.Bricka	5
0650	43	79 72 623		415)	4	.Screw	.Skruv	5
0660	44	*97 65 314*		414) NLS - USE 9678434	2	.Stop lug	.Stoppklack	6
0670	45	97 97 028		95)	1	.Spacer	.Mellanlägg	5
0680	46	95 89 045			1	.Reinforcement	.Förstärkning	5
0690	47	97 58 871		12)	1	.Steering wheel	.Ratt	5
0700	47	97 98 356		13)	1	.Steering wheel	.Ratt	5
0710	48	80 29 944		13)	1	.Washer	.Bricka	5
0720	49	80 59 396		13)	1	.Screw	.Skruv	5
0730	50	*97 65 132*		NLS - USE 9851619	1	.Cover	.Täcklock	6
0740	51	96 58 584		414) (9758632)	1	.Control	.Reglage	6
0750	51	*97 77 525*		414), 1985, RHD NLS - USE 9658592	1	.Control	.Reglage	6
0760	51	96 58 592		414), 1986-1987, RHD	1	.Control	.Reglage	6

12. Ch. --F4002814
13. Ch. F4002815--
95. Ch. G1019093--
138. Ch. --G1000540
139. Ch. G1000541--
414. Driver seat Förarstol
415. Passenger seat Passagerarstol

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H10

Front seats Part 3 -1987

Stolar Del 3 -1987

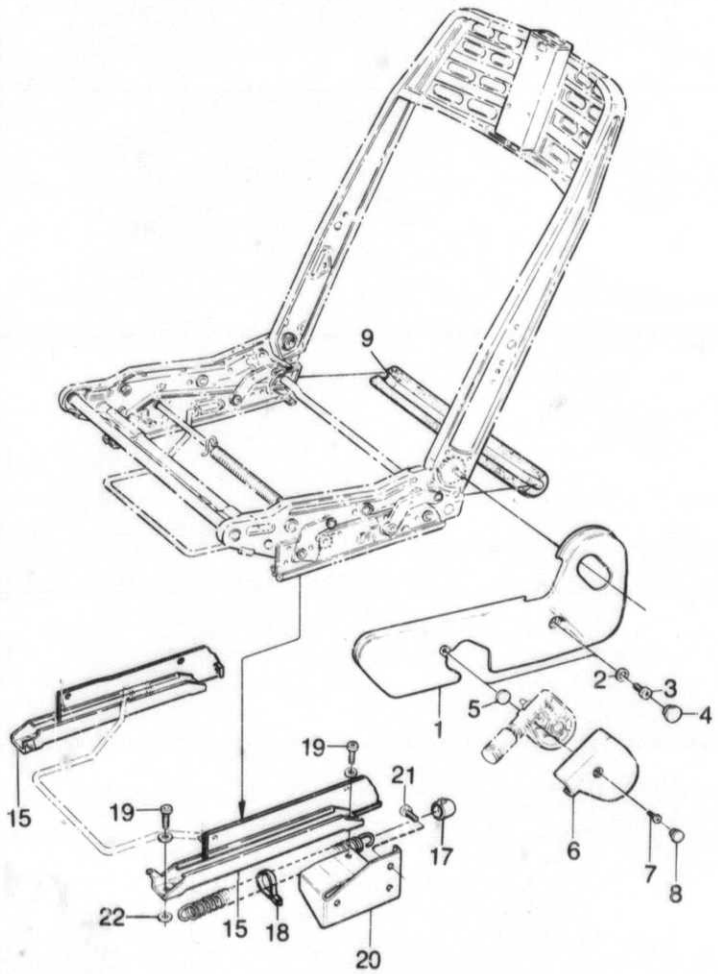

F4135 9000

1465	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S I
0010				See page 8B-171, 5-H04		Seat	Stol	
0020	1	*97 75 529*		590,414), -1986 NLS	1	.Cover	.Kåpa	6
0030	1	96 69 466		590,414), 1987	1	.Cover	.Kåpa	6
0040	1	*97 80 842*		590,415), -1986 NLS	1	.Cover	.Kåpa	6
0050	1	96 69 540		590,415), 1987	1	.Cover	.Kåpa	6
0060	1	98 92 662		600,414), 1987	1	.Cover	.Kåpa	6
0070	1	*98 94 924*		600,415), 1987 NLS	1	.Cover	.Kåpa	6
0080	1	*97 75 511*		560,414) NLS - USE 4033783	1	.Cover	.Kåpa	6
0090	1	97 80 834		560,415)	1	.Cover	.Kåpa	6
0100	1	97 75 537		580,414)	1	.Cover	.Kåpa	6
0110	1	*97 80 859*		580,415) NLS	1	.Cover	.Kåpa	6
0120	1	98 92 688		610,414), 1986-	1	.Cover	.Kåpa	6
0130	1	40 33 890		610,415), 1986-(9894940)	1	.Cover	.Kåpa	6
0140								
0150	1	*97 81 006*		590,415), -1986, RHD NLS	1	.Cover	.Kåpa	6
0160	1	96 69 532		590,415), 1987, RHD	1	.Cover	.Kåpa	6
0170	1	*97 80 966*		590,414), -1986, RHD NLS	1	.Cover	.Kåpa	6
0180	1	96 69 474		590,414), 1987, RHD	1	.Cover	.Kåpa	6
0190	1	*98 94 932*		600,415), 1987, RHD NLS	1	.Cover	.Kåpa	6
0200	1	98 92 670		600,414), 1987, RHD	1	.Cover	.Kåpa	6
0210	1	*97 80 990*		560,415), 1986-, RHD NLS	1	.Cover	.Kåpa	6
0220	1	*97 80 958*		560,414), 1986-, RHD NLS	1	.Cover	.Kåpa	6
0230	1	*97 81 014*		580,415), RHD NLS	1	.Cover	.Kåpa	6
0240	1	*97 80 974*		580,414), RHD NLS	1	.Cover	.Kåpa	6
0250	1	*98 94 957*		610,415), 1986-, RHD NLS - USE 4033940	1	.Cover	.Kåpa	6
0260	1	98 92 696		610,414), 1986-, RHD	1	.Cover	.Kåpa	6
0270								
0280	2	79 16 489		1985	2	.Washer	.Bricka	5
0290	2	80 29 951		1986-1987	2	.Washer	.Bricka	5
0300	3	80 59 537		414)	2	.Screw	.Skruv	5
0310	3	79 71 294		415)	2	.Screw	.Skruv	5
0320	4	97 75 560		590,414), -1986	1	.Cover	.Täcklock	
0330	4	96 69 508		590,414), 1987	1	.Cover	.Täcklock	6
0340	4	97 80 917		590,415), -1986	2	.Cover	.Täcklock	
0350	4	96 69 557		590,415), 1987	2	.Cover	.Täcklock	6
0360	4	98 92 704		600,414), 1987	1	.Cover	.Täcklock	6
0370	4	98 94 965		600,415), 1987	2	.Cover	.Täcklock	6
0380	4	97 75 552		560,414)	1	.Cover	.Täcklock	6
0390	4	97 80 909		560,415)	2	.Cover	.Täcklock	6
0400	4	97 75 578		580,414)	1	.Cover	.Täcklock	6
0410	4	97 80 925		580,415)	2	.Cover	.Täcklock	6
0420	4	98 92 720		610,414), 1986-	1	.Cover	.Täcklock	6
0430	4	98 94 973		610,415), 1986-	2	.Cover	.Täcklock	6
0440								
0450	4	*97 82 640*		590,414), -1986, RHD NLS	1	.Cover	.Täcklock	
0460	4	96 69 516		590,414), 1987, RHD	1	.Cover	.Täcklock	6
0470	4	98 92 712		600,414), 1987, RHD	1	.Cover	.Täcklock	6
0480	4	97 82 632		560,414), 1986-, RHD	1	.Cover	.Täcklock	6
0490	4	97 82 657		580,414), RHD	1	.Cover	.Täcklock	6
0500	4	98 92 738		610,414), 1986-, RHD	1	.Cover	.Täcklock	6
0510								
0520	5	97 95 014		590,414), -1986	1	.Cover	.Täcklock	3
0530	5	96 69 458		590,414), 1987	1	.Cover	.Täcklock	3
0540	5	98 92 647		600,414), 1987	1	.Cover	.Täcklock	3

414. Driver seat Förarstol
415. Passenger seat Passagerarstol
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H12

Front seats Part 3 -1987

Stolar Del 3 -1987

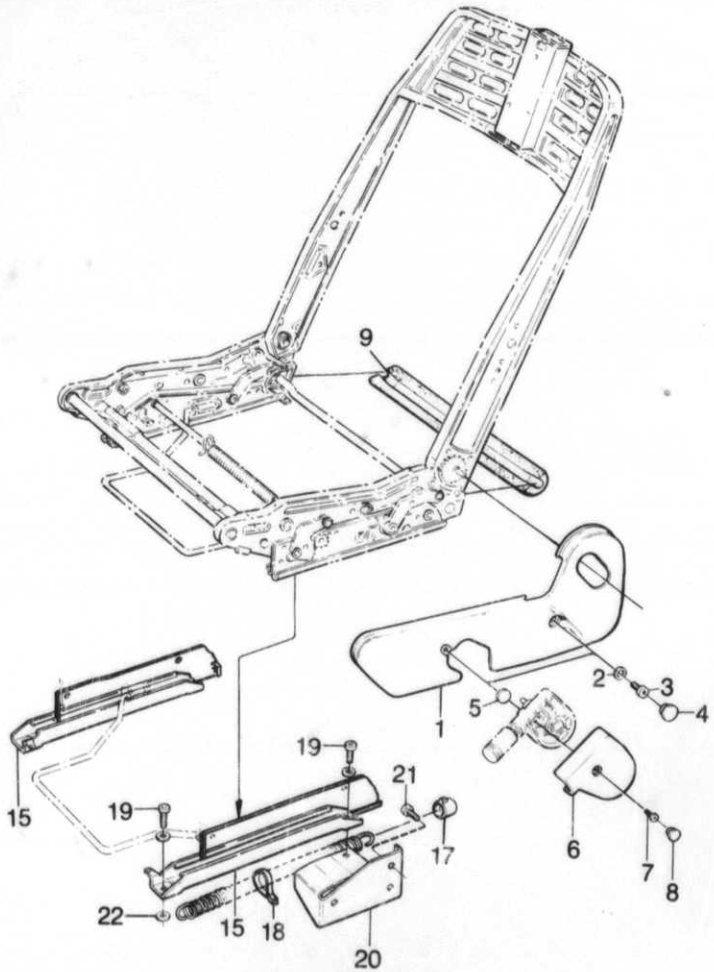

F4135 9000

1465	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	5	97 95 006		560,414)	1	.Cover	.Täcklock	3
0560	5	97 95 022		580,414)	1	.Cover	.Täcklock	3
0570	5	98 92 654		610,414), 1986-	1	.Cover	.Täcklock	3
0580								
0590	6	97 75 602		590,414), -1986	1	.Cover	.Kåpa	
0600	6	96 69 482		590,414), 1987	1	.Cover	.Kåpa	6
0610	6	*97 81 436*		590,414), -1986, RHD NLS	1	.Cover	.Kåpa	
0620	6	96 69 490		590,414), 1987, RHD	1	.Cover	.Kåpa	6
0630	6	98 92 985		600,414), 1987	1	.Cover	.Kåpa	6
0640	6	*98 92 993*		600,414), 1987, RHD NLS	1	.Cover	.Kåpa	6
0650	6	97 75 594		560,414)	1	.Cover	.Kåpa	6
0660	6	*97 81 428*		560,414), 1986-, RHD NLS	1	.Cover	.Kåpa	6
0670	6	*97 75 610*		580,414) NLS	1	.Cover	.Kåpa	6
0680	6	*97 81 444*		580,414), RHD NLS	1	.Cover	.Kåpa	6
0690	6	98 93 009		610,414), 1986-	1	.Cover	.Kåpa	6
0700	6	98 93 017		610,414), 1986, RHD	1	.Cover	.Kåpa	6
0710								
0720	7	*79 71 385*		414), 1985 NLS - USE 7922271	1	.Screw	.Skruv	5
0730	7	79 22 271		414), 1986-	1	.Screw	.Skruv	5
0740	8	97 75 644		590,414), -1986	1	.Cover	.Täcklock	
0750	8	96 69 524		590,414), 1987	1	.Cover	.Täcklock	6
0760	8	*98 93 025*		600,414), 1987 NLS	1	.Cover	.Täcklock	6
0770	8	97 75 636		560,414)	1	.Cover	.Täcklock	6
0780	8	97 75 651		580,414)	1	.Cover	.Täcklock	6
0790	8	98 93 033		610,414), 1986-	1	.Cover	.Täcklock	6
0800								
0810	9	97 92 391			1	.Crash pad	.Stötskydd	6
0820	15			414,617)	1	.Seat rail	.Stolskena	
0830	15	*97 69 902*		415,138), LH NLS	1	.Seat rail	.Stolskena	6
0840	15	*97 69 910*		415,138), RH NLS	1	.Seat rail	.Stolskena	6
0850	15	*96 59 053*	S	415,139,165), LH NLS - USE 4255832, 8073108	1	.Seat rail	.Stolskena	6
0860	15	*96 59 061*	S	415,139,165), RH NLS - USE 4255840, 8073108	1	.Seat rail	.Stolskena	6
0870	15	96 94 894		415,166), LH	1	.Seat rail	.Stolskena	6
0880	15	96 94 902		415,166), RH	1	.Seat rail	.Stolskena	6
0890	17	96 68 401		415)	2	.Protection	.Skydd	6
0900	18	79 71 872		415)	2	.Tensioning band	.Spännband	5
0910	19	97 81 204			8	Screw	Skruv	5
0920	20	*97 81 162*		LH NLS	1	Bracket	Konsol	5
0930	20	*97 82 210*		RH NLS	1	Bracket	Konsol	5
0940	21	79 74 884			6	Screw	Skruv	5
0950	22	80 73 108		599)	4	Washer	Bricka	5
0960		96 98 259		See page 8B-251, 5-K12	X	Rail kit	Skensats	6

138. Ch. --G1000540
139. Ch. G1000541--
165. Ch. --H1019856, --H8000754
166. Ch. H1019857-, H8000755--
414. Driver seat Förarstol
415. Passenger seat Passagerarstol
560. Red Röd
580. Blue Blå
590. Yellow Gul
599. Use together with M91 rail for older cars Används tillsammans med M91 skena för äldre bilar
600. Brown Brun
610. Black Svart
617. Part of pos 1 seat frame Ingår i pos 1 stolram

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H14

Front seats Part 1 1988-

Stolar Del 1 1988-

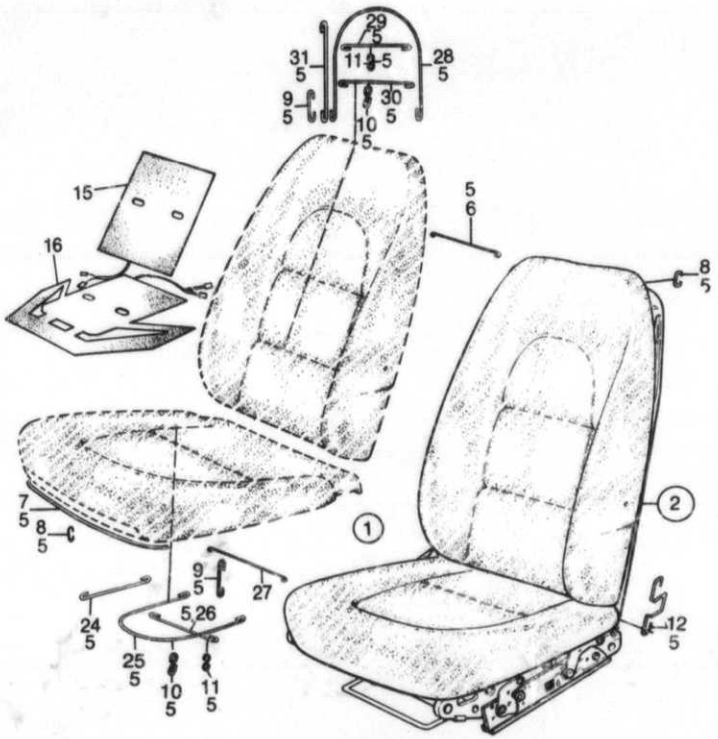

F7140 9000

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 98 929		257,260) LH	1	Seat	Stol	6
0020	1	96 98 937		257,260) RH	1	Seat	Stol	6
0030	1	96 98 945		257,260) RH, RHD	1	Seat	Stol	6
0040	1	96 98 952		257,260) LH, RHD	1	Seat	Stol	6
0050								
0060	1	96 98 960		258,260) LH	1	Seat	Stol	6
0070	1	96 98 978		258,260) RH	1	Seat	Stol	6
0080	1	96 98 986		258,260) RH, RHD	1	Seat	Stol	6
0090	1	96 98 994		258,260) LH, RHD	1	Seat	Stol	6
0100								
0110	1	96 98 887		259,260) LH	1	Seat	Stol	6
0120	1	96 98 895		259,260) RH	1	Seat	Stol	6
0130	1	96 98 903		259,260) RH, RHD	1	Seat	Stol	6
0140	1	96 98 911		259,260) LH, RHD	1	Seat	Stol	6
0150								
0160	2	*96 97 905*		303,257,258,601) LH NLS - USE 4257572, 8073108	1	.Seat frame	.Stolram	6
0170	2	*95 85 167*		304,257,258,601)-1988,LH NLS - USE 4257572, 8073108	1	.Seat frame	.Stolram	6
0180	2	*95 47 068*		500,257,258,601)1989-,LH NLS - USE 4257572, 8073108	1	.Seat frame	.Stolram	6
0190	2	*96 97 913*		1,614,303,257,258,601)RH NLS	1	.Seat frame	.Stolram	6
0200	2	95 85 183		304,257,258,601)-1988,RH	1	.Seat frame	.Stolram	6
0210	2	*95 47 902*		500,257,258,601)1989-,RH NLS - USE 4257622, 8073108	1	.Seat frame	.Stolram	6
0220	2	40 48 757		303,239,258,601) RH (9572553)	1	.Seat frame	.Stolram	6
0240	2	95 85 225		304,239,258,601)-1988,RH	1	.Seat frame	.Stolram	6
0250	2	*95 47 969*		500,239,258,601)1989-,RH NLS - USE 4048757	1	.Seat frame	.Stolram	6
0260								
0270	2	*96 97 921*		303,257,258,601) RH, RHD NLS - USE 4257580, 8073108	1	.Seat frame	.Stolram	6
0280	2	95 85 175		304,257,258,601), -1988 RH, RHD	1	.Seat frame	.Stolram	6
0300	2	*95 46 995*		500,257,258,601), 1989- RH, RHD NLS - USE 4257580, 8073108	1	.Seat frame	.Stolram	6
0320	2	*96 97 913*		1,614,303,257,258,601) LH, RHD NLS	1	.Seat frame	.Stolram	6
0340	2	95 85 191		304,257,258,601), -1988 LH, RHD	1	.Seat frame	.Stolram	6
0360	2	*95 47 894*		500,257,258,601), 1989- LH, RHD NLS - USE 4257614, 8073108	1	.Seat frame	.Stolram	6

1. Not as separate spare part. Ej som separat reservdel.
239. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
257. Trim colour A14, B14, C14, E14, F14, B44, C44, E44, F44, G44
258. Trim colour A24, B24, C24, E24, F24 G24
259. Trim colour A33, B33, C33, E33, F33, G33
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
303. Driver seat ch. --J1016350, --J2008912, --J8001034, passenger seat ch. --J1017311, --J2009511, --J8001034
Förarstol ch. --J1016350, --J2008912, --J8001034, passagerarstol ch. --J1017311, --J2009511, --J8001034
304. Driver seat ch. J1016351--, J2008913--, J8001035--, passenger seat J1017312--, J2009512--, J8001035--
Förarstol ch. J1016351--, J2008913--, J8001035--, passagerarstol J1017312--, J2009512--, J8001035--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
601. See following sections for contents Se följande avsnitt för ingående artiklar
614. Superseded by 9585183 LHD or 9585191 RHD Ersatt av 9585183 LHD eller 9585191 RHD

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H16

Front seats Part 1 1988-

Stolar Del 1 1988-

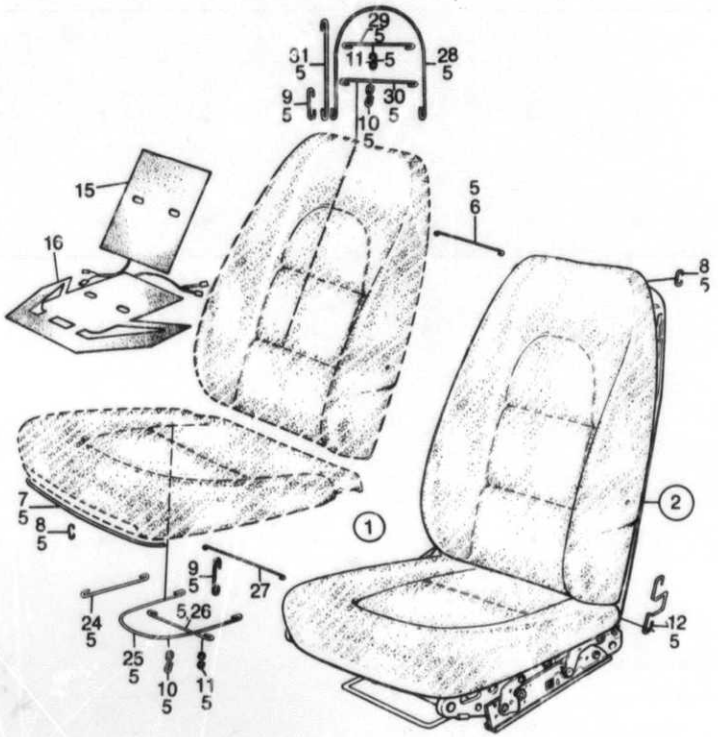

F7140 9000

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0380	2	95 47 977		303,239,258,601) LH, RHD	1	.Seat frame	.Stolram	6
0390				(9572561)	1			
0400	2	95 85 233		304,239,258,601), -1988	1	.Seat frame	.Stolram	6
0410				LH, RHD	1			
0420	2	95 47 977		500,239,258,601), 1989-	1	.Seat frame	.Stolram	6
0430				LH, RHD	1			
0440								
0450	2	*96 94 514*		303,259,601) LH NLS -	1	.Seat frame	.Stolram	6
0450				USE 4257556, 8073108				
0460	2	*95 73 734*		304,259,601)-1988, LH	1	.Seat frame	.Stolram	6
0460				NLS - USE 4257556,				
0460				8073108				
0470	2	*95 47 050*		500,259,601) 1989-, LH	1	.Seat frame	.Stolram	6
0470				NLS - USE 4257556,				
0470				8073108				
0480	2	*96 94 530*		1,615,303,259,601) RH	1	.Seat frame	.Stolram	6
0480				NLS				
0490	2	95 73 718		304,259,601)-1988, RH	1	.Seat frame	.Stolram	6
0500	2	*95 47 985*		500,259,601) 1989-, RH	1	.Seat frame	.Stolram	6
0500				NLS - USE 4257606,				
0500				8073108				
0510	2	40 48 765		239,259,601) RH	1	.Seat frame	.Stolram	6
0520				(9572512,9585209)				
0530	2	95 47 944		500,239,259,601)1989-,RH	1	.Seat frame	.Stolram	6
0540								
0550	2	*96 94 522*		303,259,601) RH, RHD NLS	1	.Seat frame	.Stolram	6
0550				- USE 4257564, 8073108				
0560	2	95 85 142		304,259,601)-1988,RH,RHD	1	.Seat frame	.Stolram	6
0570	2	*95 47 043*		500,259,601)1989-,RH,RHD	1	.Seat frame	.Stolram	6
0570				NLS - USE 4257564,				
0570				8073108				
0580	2	*96 94 530*		1,615,303,259,601)LH,RHD	1	.Seat frame	.Stolram	6
0580				NLS				
0590	2	95 85 159		304,259,601)-1988,LH,RHD	1	.Seat frame	.Stolram	6
0600	2	95 47 951		500,259,601)1989-,LH,RHD	1	.Seat frame	.Stolram	6
0610	2	95 47 837		303,239,259,601) LH, RHD	1	.Seat frame	.Stolram	6
0620				(9572520)				
0630	2	95 85 217		304,239,259,601), -1988	1	.Seat frame	.Stolram	6
0640				LH, RHD				
0650	2	95 47 837		500,239,259,601), 1989-	1	.Seat frame	.Stolram	6
0660				LH, RHD				
0670								
0680	5	96 97 939		231)	1	.Mounting kit	.Monteringssats	6
0690				See page 8B-245, 5-K06				
0700	5	96 76 818		261)	1	.Mounting kit	.Monteringssats	6
0710				See page 8B-245, 5-K06				
0715	5	96 71 751		261)	1	.Mounting kit	.Monteringssats	6
0716				See page 8B-245, 5-K06				
0720	6	97 81 592			2	..Cover rod	..Klädselbåge	5
0730	7	97 82 558			1	..Cover rod	..Klädselbåge	5

1. Not as separate spare part. Ej som separat reservdel.
231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
239. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
258. Trim colour A24, B24, C24, E24, F24, G24
259. Trim colour A33, B33, C33, E33, F33, G33
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
303. Driver seat ch. --J1016350, --J2008912, --J8001034, passenger seat ch. --J1017311, --J2009511, --J8001034
Förarstol ch. --J1016350, --J2008912, --J8001034, passagerarstol ch. --J1017311, --J2009511, --J8001034
304. Driver seat ch. J1016351--, J2008913--, J8001035--, passenger seat J1017312--, J2009512--, J8001035--
Förarstol ch. J1016351--, J2008913--, J8001035--, passagerarstol J1017312--, J2009512--, J8001035--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
601. See following sections for contents Se följande avsnitt för ingående artiklar
615. Superseded by 9573718 LHD or 9585159 RHD Ersatt av 9573718 LHD eller 9585159 RHD

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H18

Front seats Part 1 1988-

Stolar Del 1 1988-

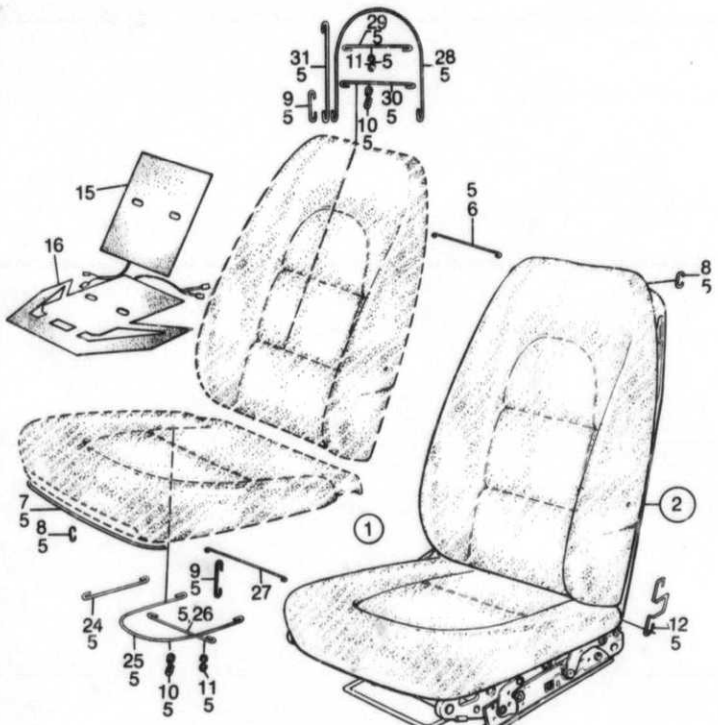

F7140 9000

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0740	8	94 50 685			X	..Clamp	..Klammer	5
0750	9	97 69 209		40 MM	X	..Hook	..Krok	5
0760	10	97 69 217		30 MM	X	..Hook	..Krok	5
0770	11	97 69 225		261) 20 MM	X	..Hook	..Krok	5
0780	12	97 83 408		303)	2	..Attaching brace	..Fästbygel	5
0790	12	95 93 245		304)	2	..Attaching brace	..Fästbygel	5
0800	15	95 19 877		231)	1	.Heating pad	.Värmedyna	4
0810	15	95 69 955		261) (8593030)	1	.Heating pad	.Värmedyna	4
0820	16	*95 28 704*		231) NLS - USE 4063871	1	.Heating pad	.Värmedyna	4
0830	16	*95 27 706*		261) NLS - USE 4063855	1	.Heating pad	.Värmedyna	4
0840	24	95 84 723		231)	2	.Wire rod	.Trådten	5
0850	25	96 92 906		261)	1	.Wire rod	.Trådten	5
0860	26	96 94 969		231)	1	.Wire rod	.Trådten	5
0870	26	97 21 499		261)	1	.Wire rod	.Trådten	5
0880	27	95 84 715			1	.Wire rod	.Trådten	5
0890	28	96 71 041		261)	1	.Wire rod	.Trådten	5
0900	29	96 94 969		231)	1	.Wire rod	.Trådten	5
0910	29	97 21 481		261)	1	.Wire rod	.Trådten	5
0920	30	97 21 499		261)	1	.Wire rod	.Trådten	5
0930	31	95 84 715		231)	2	.Wire rod	.Trådten	5
0940		96 71 744		-1988	1	.Mounting kit	.Monteringssats	6
0950				See page 8B-245, 5-K06				
0960		95 88 542		500) 1989-	1	.Mounting kit	.Monteringssats	6
0970				See page 8B-245, 5-K06				
0980		95 88 534		500) 1989-	1	.Mounting kit drivers seat	.Monteringssats förarstol	6
0990				See page 8B-245, 5-K06				
1000		95 88 559		500)1989-	1	.Mounting kit passenger seat	.Monteringssats passagerarstol	6
1010				See page 8B-245, 5-K06				
1020		96 18 752		See page 8B-253, 5-K14	1	.Mounting kit	.Monteringssats	6


231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
303. Driver seat ch. --J1016350, --J2008912, --J8001034. passenger seat ch. --J1017311, --J2009511, --J8001034
Förarstol ch. --J1016350, --J2008912, --J8001034, passagerarstol ch. --J1017311, --J2009511, --J8001034
304. Driver seat ch. J1016351--, J2008913--, J8001035--, passenger seat J1017312--, J2009512--, J8001035--
Förarstol ch. J1016351--, J2008913--, J8001035--, passagerarstol J1017312--, J2009512--, J8001035--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

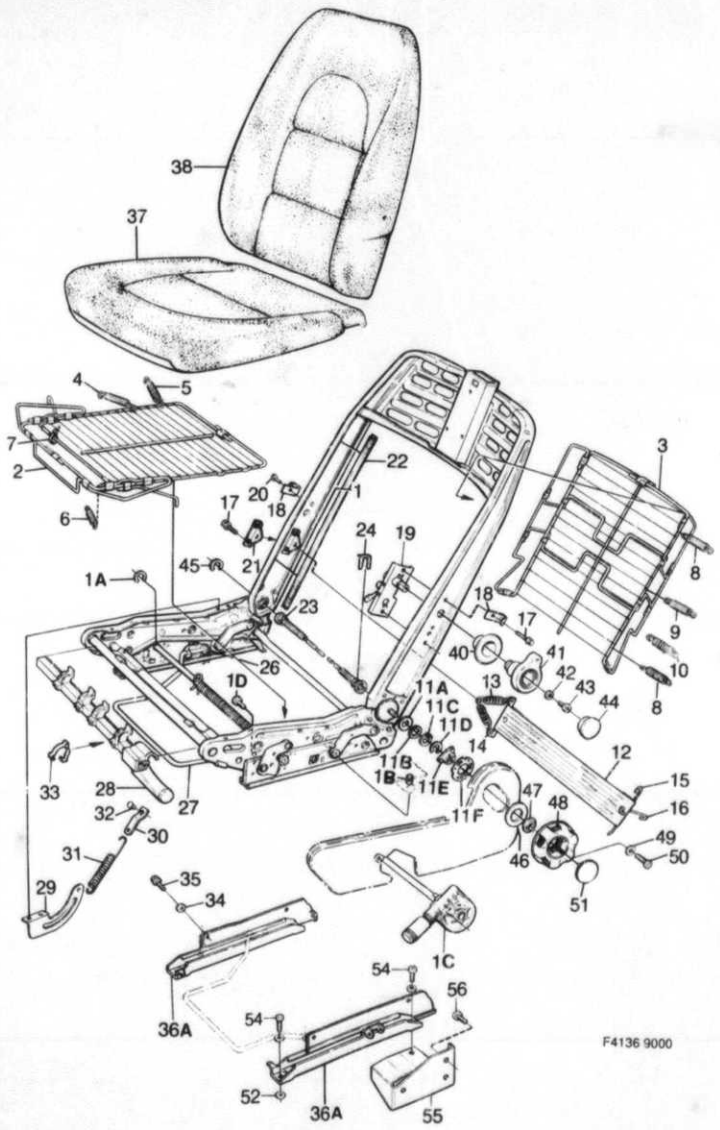

Other interior equipment

5-H20

Front seats Part 2

1988-

Övrig invändig utrustning

Stolar Del 2

1988-

1475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-181, 5-H14		Seat	Stol	
0020				See page 8B-181, 5-H14		.Seat frame	.Stolram	
0030	1	96 94 571		303) LH	1	..Seat frame	..Stolram	6
0040	1	95 83 758		304)-1988, LH	1	..Seat frame	..Stolram	6
0050	1	95 47 076		500) 1989-, LH	1	..Seat frame	..Stolram	6
0060	1	*98 96 341*		616,303) RH NLS	1	..Seat frame	..Stolram	6
0070	1	*95 84 624*		304) RH NLS - USE 4123105, 8073108	1	..Seat frame	..Stolram	6
0080	1	*96 94 589*		303) RH RHD NLS - USE 4257689, 8073108, 9618752	1	..Seat frame	..Stolram	6
0090	1	95 83 766		304)-1988, RH RHD	1	..Seat frame	..Stolram	6
0100	1	*95 47 001*		500) 1989-, RH RHD NLS - USE 4257689, 8073108	1	..Seat frame	..Stolram	6
0110	1	*98 96 341*		616,303) LH RHD NLS	1	..Seat frame	..Stolram	6
0120	1	*95 84 632*		304) LH RHD NLS - USE 4257697, 8073108	1	..Seat frame	..Stolram	6
0130	1A	79 63 143		414)	1	...E-circlip	...Spårryttare	5
0140	1B	96 78 434		414)	4	...Stop ring	...Stoppring	5
0150	1C	96 58 584		414)	1	...Control	...Reglage	6
0160	1C	96 58 592		414), RHD	1	...Control	...Reglage	6
0170	1D	80 19 713		414)	2	...Screw	...Skruv	5
0180	2	96 73 179		414)	1	..Wire matting	..Resårmatta	6
0190	2	96 73 450		415)	1	..Wire matting	..Resårmatta	6
0200	2	96 73 179		415,239)	1	..Wire matting	..Resårmatta	6
0210	3	96 97 525			1	..Wire matting	..Resårmatta	6
0220	4	96 73 146			6	..Spring	..Fjäder	6
0230	5	96 73 435			2	..Spring	..Fjäder	6
0240	6	97 58 947		414)	2	..Spring	..Fjäder	6
0250	6	97 58 947		415,239)	2	..Spring	..Fjäder	6
0260	7	79 71 872		415)	2	..Tensioning band	..Spännband	5
0270	8	97 59 069			4	..Spring	..Fjäder	6
0280	9	97 59 077			2	..Spring	..Fjäder	6
0290	10	97 71 205		415)	2	..Spring	..Fjäder	6
0300	11A	95 86 967		304)	1	..Washer	..Bricka	5
0310	11B	95 86 975		304)	1	..Ring	..Ring	5
0320	11C	95 86 983		304)	1	..Washer	..Bricka	5
0330	11D	*79 36 016*		304) NLS - USE 8123473	1	..E-circlip	..Spårryttare	5
0340	11E	95 85 613		304)	1	..Brake	..Broms	6
0350	11F	95 85 621		304,-1988)	1	..Spring clamp	..Fjäderklämma	6
0360	11F	40 43 394		1989-	1	..Spring clamp	..Fjäderklämma	6
0370	12	97 70 918		414)	1	..Strip	..Band	6
0380	13	95 79 293		414)	2	..Spring	..Fjäder	6
0390	14	97 70 942		414)	1	..Brace	..Bygel	5
0400	15	97 70 926		414)	1	..Brace	..Bygel	5
0410	16	97 70 934		414)	1	..Hook	..Krok	5
0420	17	79 74 330		414)	4	..Screw	..Skruv	5
0430	18	97 78 895			2	..Brace	..Bygel	5
0440	19	96 17 325		414)	1	..Control	..Reglage	6
0450	19	96 17 333		414), RHD	1	..Control	..Reglage	6
0460	20	79 75 402		414)	1	..Rivet	..Nit	5
0470	20	79 75 402		415)	2	..Rivet	..Nit	5
0480	21	98 64 349		414)	1	..Bracket	..Konsol	5

239. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
303. Driver seat ch. --J1016350, --J2008912, --J8001034, passenger seat ch. --J1017311, --J2009511, --J8001034
Förarstol ch. --J1016350, --J2008912, --J8001034, passagerarstol ch. --J1017311, --J2009511, --J8001034
304. Driver seat ch. J1016351--, J2008913--, J8001035--, passenger seat J1017312--, J2009512--, J8001035--
Förarstol ch. J1016351--, J2008913--, J8001035--, passagerarstol J1017312--, J2009512--, J8001035--
414. Driver seat Förarstol
415. Passenger seat Passagerarstol
500. Also valid for SE 1988B. Gäller även för SE 1988B.
616. Superseded by 4125209 LHD and 9618752 or 4125225 RHD and 9618752 Ersatt av 4125209 LHD och 9618752 eller 4125225 RHD och 9618752

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H22

Front seats Part 2 1988-

Stolar Del 2 1988-

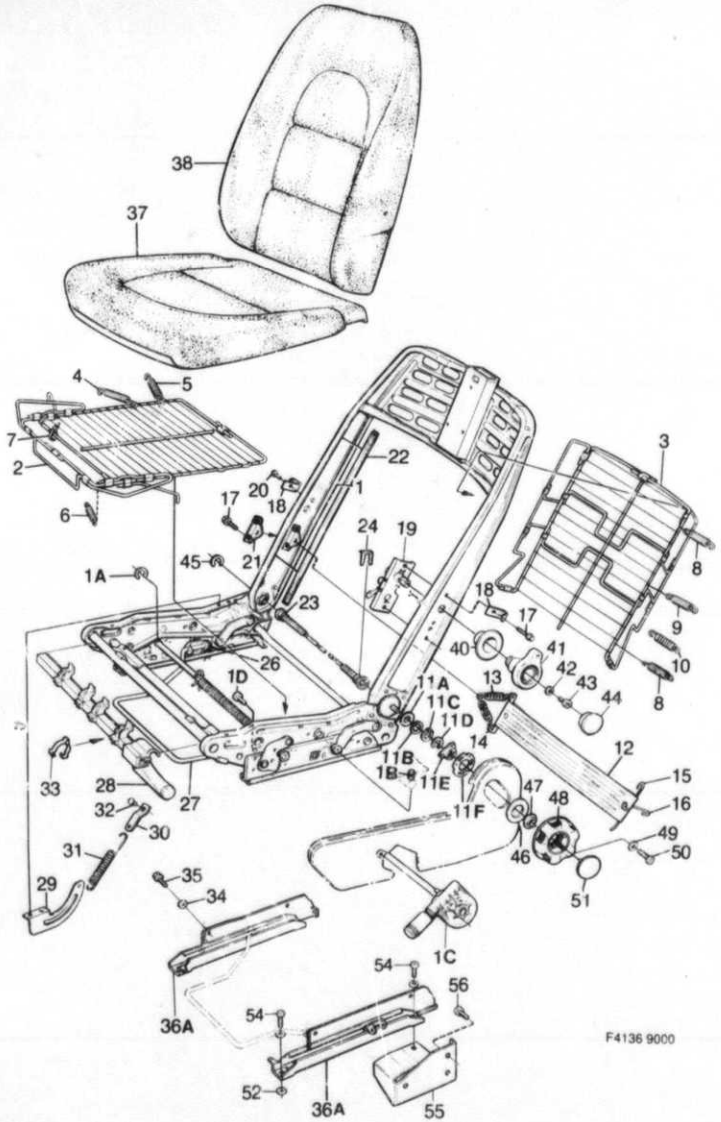

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
22	96 71 835			2	..Protecting moulding	..Skyddslist	6
23	97 58 608		303)	1	..Shaft	..Axel	6
23	95 86 249		304)	1	..Shaft	..Axel	6
24	97 77 327			2	..E-circlip	..Spårryttare	5
26	73 98 282			2	..Washer	..Bricka	5
27	96 59 012		414)	1	..Shaft	..Axel	6
27	96 59 020	S	415)	1	..Shaft	..Axel	6
28	96 60 853		414)	1	..Camshaft	..Kamaxel	6
28	96 60 861		415,239)	1	..Camshaft	..Kamaxel	6
28	96 60 361		414), RHD	1	..Camshaft	..Kamaxel	6
28	96 60 853		414,239), RHD	1	..Camshaft	..Kamaxel	6
29	97 95 618		303) LH	1	..Spring retainer	..Fjäderhållare	5
29	97 95 626		303) RH	1	..Spring retainer	..Fjäderhållare	5
30	97 95 634		303)	2	..Spring retainer	..Fjäderhållare	5
31	97 95 642		303)	2	..Spring	..Fjäder	6
32	79 75 402		303)	6	..Rivet	..Nit	5
33	97 67 518		414)	2	..Clamp	..Klämma	5
33	97 67 518		415,239)	2	..Clamp	..Klämma	5
34	79 16 497		415)	4	..Washer	..Bricka	5
35	79 72 623		415)	4	..Screw	..Skruv	5
36A			414,617)	1	..Seat rail	..Stolskena	
36A	96 94 894		415), -1988, LH	1	..Seat rail	..Stolskena	6
36A	96 94 902		415), -1988, RH	1	..Seat rail	..Stolskena	6
36A	95 47 852		415,500), 1989-, LH	1	..Seat rail	..Stolskena	6
36A	95 47 860		415,500), 1989-, RH	1	..Seat rail	..Stolskena	6
37	*96 96 618*		231) NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
37	96 77 014		261)	1	..Seat cushion	..Sittdyna	6
38	*96 96 600*		231) NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
38	97 58 715		261)	1	..Backrest cushion	..Ryggdyna	6
40	97 85 015		414)	1	.Cover washer	.Täckbricka	6
41	97 63 632		414)	1	.Steering wheel	.Ratt	5
42	80 29 944		414)	1	.Washer	.Bricka	5
43	80 59 396		414)	1	.Screw	.Skruv	5
44	97 63 624		414)	1	.Cover	.Täcklock	6
45	*79 15 077*		NLS - USE 7963143	1	.E-circlip	.Spårryttare	5
46	97 97 028		303)	1	.Spacer	.Mellanlägg	5
47	95 89 045		304)	1	.Reinforcement	.Förstärkning	5
48	97 98 356		303)	1	.Steering wheel	.Ratt	5
48	95 46 946		304)	1	.Hand wheel	.Ratt	5
49	80 29 944		303)	1	.Washer	.Bricka	5
49	80 29 951		304)	1	.Washer	.Bricka	5
50	80 59 396		303)	1	.Screw	.Skruv	5
50	80 59 560		304)	1	.Screw	.Skruv	5
51	*97 65 132*		303) NLS - USE 9851619	1	.Cover	.Täcklock	6
51	98 51 619		304)	1	.Cover	.Täcklock	6
52	80 73 108		599)	4	.Washer	.Bricka	5
54	97 81 204			4	.Screw	.Skruv	5
55	*97 81 162*		LH NLS	1	.Bracket	.Konsol	5
55	*97 82 210*		RH NLS	1	.Bracket	.Konsol	5
56	79 74 884			3	.Screw	.Skruv	5

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
239. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
303. Driver seat ch. -J1016350, -J2008912, -J8001034 passenger seat ch. -J1017311, -J2009511, -J8001034 Förarstol ch. -J1016350, -J2008912, -J8001034. passagerarstol ch. -J1017311, -J2009511, -J8001034
304. Driver seat ch. J1016351-, J2008913-, J8001035-, passenger seat J1017312-, J2009512-, J8001035- Förarstol ch. J1016351-, J2008913-, J8001035-, passagerarstol J1017312-, J2009512-, J8001035-
414. Driver seat Förarstol
415. Passenger seat Passagerarstol
500. Also valid for SE 1988B. Gäller även för SE 1988B.
599. Use together with M91 rail for older cars Används tillsammans med M91 skena för äldre bilar
617. Part of pos 1 seat frame Ingår i pos 1 stolram

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-H24

Front seats Part 3
1988-

Stolar Del 3
1988-

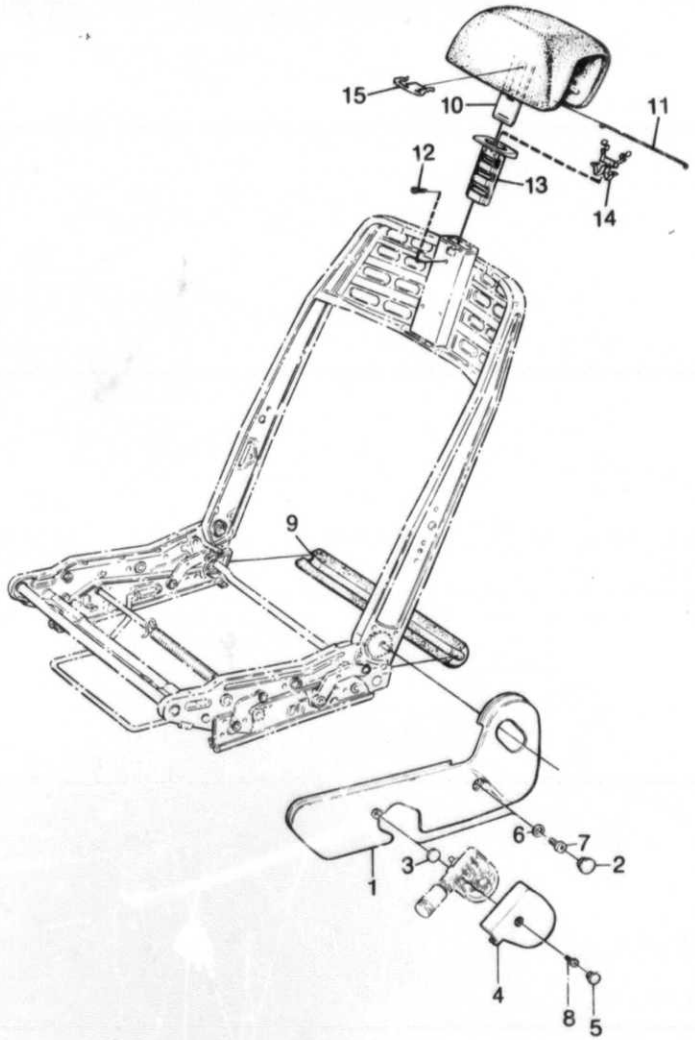

F0801 - 9000

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-181, 5-H14		Seat	Stol	
0020	1	96 69 466		590,414), -1988	1	.Cover	.Kåpa	6
0030	1	40 33 817		590,414,500) 1989-	1	.Cover	.Kåpa	6
0040	1	96 69 540		590,415), -1988	1	.Cover	.Kåpa	6
0050	1	40 33 916		590,415,500), 1989-	1	.Cover	.Kåpa	6
0060								
0070	1	98 92 662		600,414), 1988	1	.Cover	.Kåpa	6
0080	1	*98 94 924*		600,415), -1988 NLS	1	.Cover	.Kåpa	6
0090								
0100	1	*97 75 511*		560,414), -1988 NLS -	1	.Cover	.Kåpa	6
0100				USE 4033783				
0110	1	40 33 783		560,414,500) 1989-	1	.Cover	.Kåpa	6
0120	1	97 80 834		560,415), -1988	1	.Cover	.Kåpa	6
0130	1	40 33 882		560,415,500)1989-	1	.Cover	.Kåpa	6
0140								
0150	1	96 76 909		580,414), -1988	1	.Cover	.Kåpa	6
0160	1	40 33 809		580,414,500) 1989-	1	.Cover	.Kåpa	6
0170	1	96 76 982		580,415), -1988	1	.Cover	.Kåpa	6
0180	1	40 33 908		580,415,500), 1989-	1	.Cover	.Kåpa	6
0190								
0200	1	98 92 688		610,414), -1988	1	.Cover	.Kåpa	6
0210	1	40 33 791		610,414,500) 1989-	1	.Cover	.Kåpa	6
0220	1	40 33 890		610,415) (9894940)	1	.Cover	.Kåpa	6
0230								
0240	1	96 69 532		590,415), -1988, RHD	1	.Cover	.Kåpa	6
0250	1	40 33 965		590,415,500), 1989-, RHD	1	.Cover	.Kåpa	6
0260	1	96 69 474		590,414), -1988, RHD	1	.Cover	.Kåpa	6
0270	1	40 33 836		590,414,500), 1989-, RHD	1	.Cover	.Kåpa	6
0280								
0290	1	*98 94 932*		600,415), -1988, RHD NLS	1	.Cover	.Kåpa	6
0300	1	98 92 670		600,414), -1988, RHD	1	.Cover	.Kåpa	6
0310								
0320	1	*97 80 990*		560,415), -1988, RHD NLS	1	.Cover	.Kåpa	6
0330	1	40 33 932		560,415,500), 1989-, RHD	1	.Cover	.Kåpa	6
0340	1	*97 80 958*		560,414), -1988, RHD NLS	1	.Cover	.Kåpa	6
0350	1	40 33 833		560,414,500), 1989-, RHD	1	.Cover	.Kåpa	6
0360								
0370	1	96 76 974		580,415), -1988, RHD	1	.Cover	.Kåpa	6
0380	1	40 33 957		580,415,500), 1989-, RHD	1	.Cover	.Kåpa	6
0390	1	96 76 917		580,414), -1988, RHD	1	.Cover	.Kåpa	6
0400	1	40 33 858		580,414,500), 1989-, RHD	1	.Cover	.Kåpa	6
0410								
0420	1	*98 94 957*		610,415), -1988, RHD NLS	1	.Cover	.Kåpa	6
0420				- USE 40339 [illegible]				
0430	1	40 33 940		610,415,500), 1989-, RHD	1	.Cover	.Kåpa	6
0440	1	98 92 696		610,414), -1988, RHD	1	.Cover	.Kåpa	6
0450	1	40 33 841		610,414,500), 1989-, RHD	1	.Cover	.Kåpa	6
0460								
0470	2	96 69 508		590,414), -1988	1	.Cover	.Täcklock	6
0480	2	95 80 432		590,414,500), 1989-	1	.Cover	.Täcklock	6
0490	2	96 69 557		590,415), -1988	2	.Cover	.Täcklock	6
0500	2	95 80 507		590,415,500), 1989-	2	.Cover	.Täcklock	6
0510	2	98 92 704		600,414), -1988	1	.Cover	.Täcklock	6
0520	2	98 94 965		600,415), -1988	2	.Cover	.Täcklock	6
0530	2	97 75 552		560,414)	1	.Cover	.Täcklock	6

414. Driver seat Förarstol
415. Passenger seat Passagerarstol
500. Also valid for SE 1988B. Gäller även för SE 1988B.
550. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-102

Front seats Part 3 1988-

Stolar Del 3 1988-

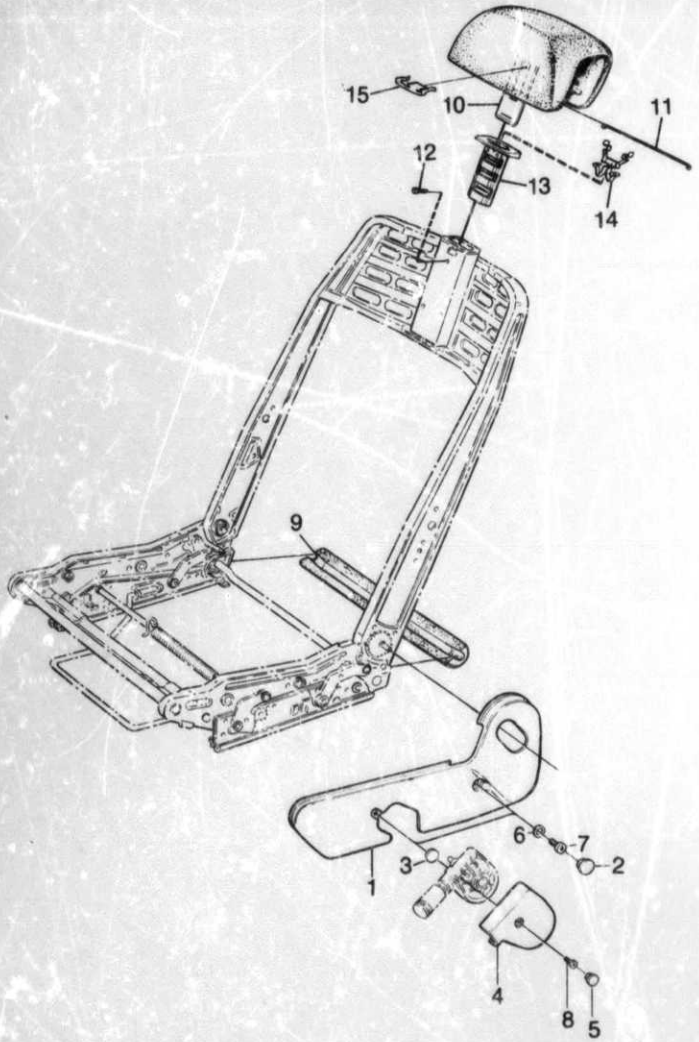

F0801 - 9000

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	2	97 [illegible] 909		560,415)	2	.Cover	.Täcklock	6
0550	2	96 76 941		580,414)	1	.Cover	.Täcklock	6
0560	2	96 76 990		580,415)	2	.Cover	.Täcklock	6
0570	2	98 92 720		610,414)	1	.Cover	.Täcklock	6
0580	2	98 94 973		610,415)	2	.Cover	.Täcklock	6
0590								
0600	2	96 69 516		590,414), -1988, RHD	1	.Cover	.Täcklock	6
0610	2	95 80 440		590,414,500), 1989-, RHD	1	.Cover	.Täcklock	6
0620	2	98 92 712		600,414), -1988, RHD	1	.Cover	.Täcklock	6
0630	2	97 82 632		560,414), RHD	1	.Cover	.Täcklock	6
0640	2	96 76 958		580,414), RHD	1	.Cover	.Täcklock	6
0650	2	98 92 738		610,414), RHD	1	.Cover	.Täcklock	6
0660								
0670	3	96 69 458		590,414), -1988	1	.Cover	.Täcklock	3
0680	3	95 80 408		590,414,500), 1989-	1	.Cover	.Täcklock	3
0690	3	98 92 647		600,414), -1988	1	.Cover	.Täcklock	3
0700	3	97 95 006		560,414)	1	.Cover	.Täcklock	3
0710	3	*96 76 891*		580,414) NLS - USE 9892654	1	.Cover	.Täcklock	3
0720	3	98 92 654		610,414)	1	.Cover	.Täcklock	3
0730								
0740	4	96 69 482		590,414,362)	1	.Cover	.Kåpa	6
0750	4	96 69 490		590,414,362), RHD	1	.Cover	.Kåpa	6
0760	4	98 92 985		600,414,362)	1	.Cover	.Kåpa	6
0770	4	*98 92 993*		600,414,362), RHD NLS	1	.Cover	.Kåpa	6
0780	4	97 75 594		560,414,362)	1	.Cover	.Kåpa	6
0790	4	*97 81 428*		560,414,362), RHD NLS	1	.Cover	.Kåpa	6
0800	4	96 76 925		580,414,362)	1	.Cover	.Kåpa	6
0810	4	96 76 933		580,414,362), RHD	1	.Cover	.Kåpa	6
0820	4	98 93 009		610,414,362)	1	.Cover	.Kåpa	6
0830	4	98 93 017		610,414,362), RHD	1	.Cover	.Kåpa	6
0840	4	98 93 009		610,414,363)	1	.Cover	.Kåpa	6
0850	4	98 93 017		610,414,363), RHD	1	.Cover	.Kåpa	6
0860								
0870	5	96 69 524		590,414,362)	1	.Cover	.Täcklock	6
0880	5	*98 93 025*		600,414,362) NLS	1	.Cover	.Täcklock	6
0890	5	97 75 636		560,414,362)	1	.Cover	.Täcklock	6
0900	5	96 76 966		580,414,362)	1	.Cover	.Täcklock	6
0910	5	98 93 033		610,414,362)	1	.Cover	.Täcklock	6
0920	5	98 93 033		610,414,363)	1	.Cover	.Täcklock	6
0930								
0940	6	80 29 951			2	.Washer	.Bricka	5
0950	7	80 59 537		414)	2	.Screw	.Skruv	5
0960	7	79 71 294		415)	2	.Screw	.Skruv	5
0970	8	79 22 271		414)	1	.Screw	.Skruv	5
0980	9	97 92 391			1	.Crash pad	.Stötskydd	6
0990	10	*97 67 815*		-1988 NLS - USE 9547688	1	.Head restraint	.Nackstöd	6
1000	10	95 47 688		500) 1989-	1	.Head restraint	.Nackstöd	6
1010	11	94 59 868			2	.Wire rod	.Trådten	6
1020	12	79 22 396			1	.Screw	.Skruv	5
1030	13	95 71 696		438)	1	.Sleeve	.Hylsa	5


362. Ch. --J1022925, --J2017049, --J8001593
363. Ch. J1022926--, J2017050--, J8001594--
414. Driver seat Förarstol
415. Passenger seat Passagerarstol
438. Ch. --K1005299, --K2001372, --K8000112
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	8-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

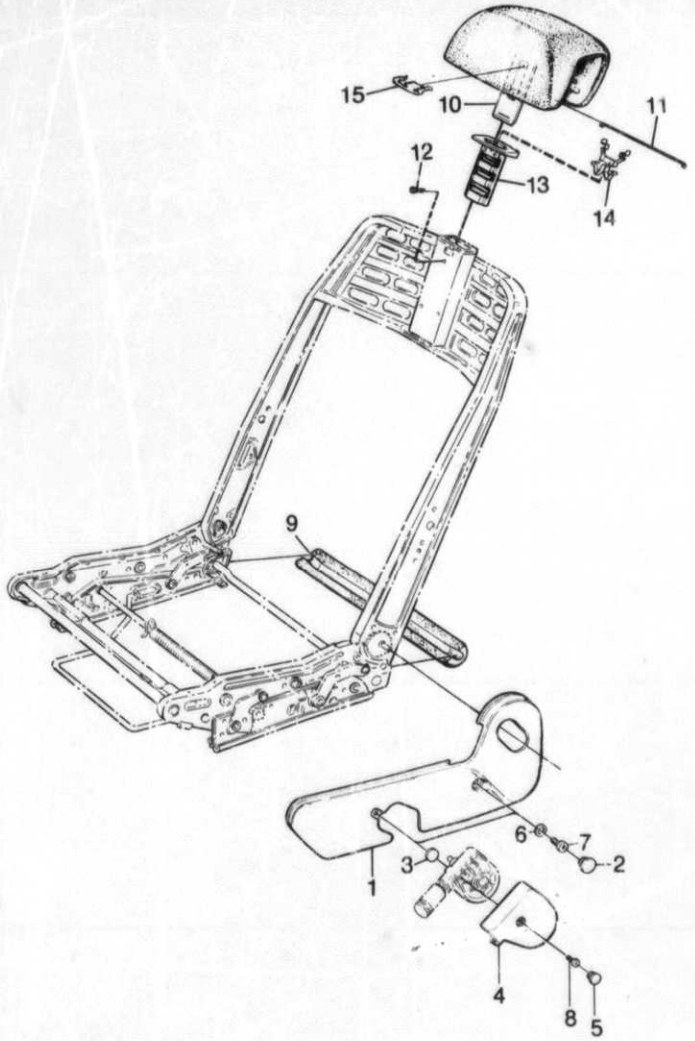

F0801 - 9000

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1040	13	40 31 563		439)	1	.Sleeve	.Hylsa	5
1050	14	97 96 848			1	.Locking spring	.Spärrfjäder	5
1060	15	95 45 104		1989-	1	.Clamp	.Klämma	5

439. Ch. K1005300-, K2001373-, K8000113-

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-106

Front seats Part 1 1989
500) Electrically adjust

Stolar Del 1 1989
500) Elmanövrerade

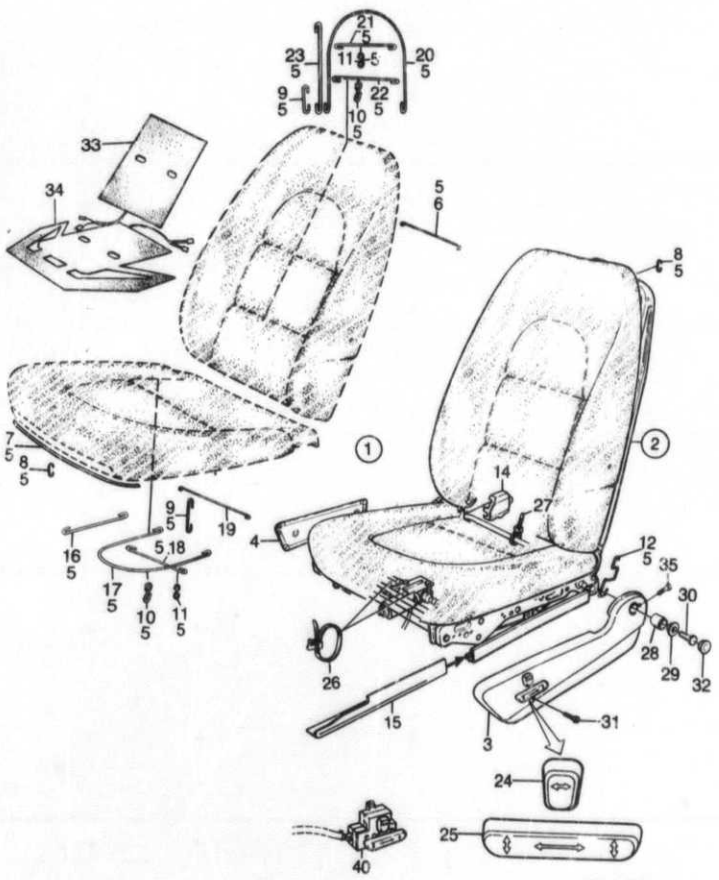

1485

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 281	231,260) LH	1	Seat	Stol	6
0020	1	96 99 299	231,260) RH	1	Seat	Stol	6
0030	1	96 99 307	261,260) LH	1	Seat	Stol	6
0040	1	96 99 315	261,260) RH	1	Seat	Stol	6
0050	2	95 86 066	231,601) LH	1	.Seat frame	.Stolram	6
0060	2	95 86 074	231,601) RH	1	.Seat frame	.Stolram	6
0070	2	*95 80 309*	261,601) LH NLS - USE 4258901, 8073108	1	.Seat frame	.Stolram	6
0080	2	95 80 317	261,601) RH	1	.Seat frame	.Stolram	6
0090	3	95 92 395	560), LH	1	.Cover	.Kåpa	6
0100	3	95 92 403	610), LH	1	.Cover	.Kåpa	6
0110	3	95 92 411	580), LH	1	.Cover	.Kåpa	6
0120	3	95 92 429	590), LH	1	.Cover	.Kåpa	6
0130							
0140	3	95 92 445	560), RH	1	.Cover	.Kåpa	6
0150	3	95 92 452	610), RH	1	.Cover	.Kåpa	6
0160	3	95 92 460	580), RH	1	.Cover	.Kåpa	6
0170	3	95 92 478	590), RH	1	.Cover	.Kåpa	6
0180							
0190	4	95 92 494	560), LH	1	.Cover	.Kåpa	6
0200	4	95 92 502	570), LH	1	.Cover	.Kåpa	6
0210	4	95 92 510	580), LH	1	.Cover	.Kåpa	6
0220	4	95 92 528	590), LH	1	.Cover	.Kåpa	6
0230							
0240	4	95 92 544	560), RH	1	.Cover	.Kåpa	6
0250	4	95 92 551	570), RH	1	.Cover	.Kåpa	6
0260	4	95 92 569	580), RH	1	.Cover	.Kåpa	6
0270	4	95 92 577	590), RH	1	.Cover	.Kåpa	6
0280	5	96 97 939	231) See page 8B-245, 5-K06	1	.Mounting kit	.Monteringssats	6
0300	5	96 76 818	261) See page 8B-245, 5-K06	1	.Mounting kit	.Monteringssats	6
0320	5	96 71 751	261) See page 8B-245, 5-K06	1	.Mounting kit	.Monteringssats	6
0340	6	97 81 592		2	..Cover rod	..Klädselbåge	5
0350	7	95 47 332		1	..Cover rod	..Klädselbåge	5
0360	8	94 50 685		X	..Clamp	..Klammer	5
0370	9	97 69 209	40 MM	X	..Hook	..Krok	5
0380	10	97 69 217	30 MM	X	..Hook	..Krok	5
0390	11	97 69 225	261) 20 MM	X	..Hook	..Krok	5
0400	12	95 93 245		2	..Attaching brace	..Fästbygel	5
0410	14	40 34 054	LH	1	.Cover	.Kåpa	5
0420	14	40 34 047	RH	1	.Cover	.Kåpa	5
0430	15	96 95 909	LH	1	.Cover	.Kåpa	6
0440	15	96 95 917	RH	1	.Cover	.Kåpa	6
0450	16	95 84 723	231)	2	.Wire rod	.Trådten	5
0460	17	96 92 906	261)	1	.Wire rod	.Trådten	5
0470	18	96 94 969	231)	1	.Wire rod	.Trådten	5
0480	18	97 21 499	261)	1	.Wire rod	.Trådten	5
0490	19	95 84 715		1	.Wire rod	.Trådten	5
0500	20	96 71 041	261)	1	.Wire rod	.Trådten	5
0510	21	96 94 969	231)	1	.Wire rod	.Trådten	5
0520	21	97 21 481	261)	1	.Wire rod	.Trådten	5

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
601. See following sections for contents Se följande avsnitt för ingående artiklar
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-108

Front seats Part 1 1989
500) Electrically adjust

Stolar Del 1 1989
500) Elmanövrerade

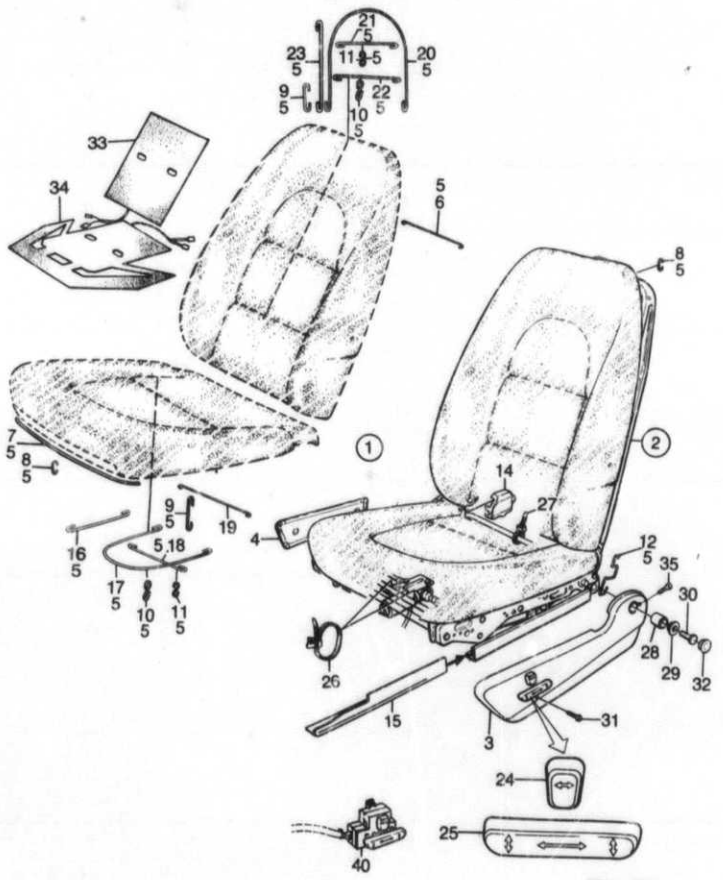

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	22	97 21 499		261)	1	.Wire rod	.Trådten	5
0540	23	95 84 715		231)	2	.Wire rod	.Trådten	5
0550	24	95 65 003			1	.Button	.Knapp	5
0560	25	95 65 011			1	.Button	.Knapp	5
0570	26	85 52 663			3	.Tensioning band	.Spännband	5
0580	27	79 71 872			3	.Tensioning band	.Spännband	5
0590	28	84 58 598			2	.Sleeve	.Hylsa	5
0600	29	96 18 232			1	.Spacer	.Distans	5
0610	30	80 59 412			1	.Screw	.Skruv	5
0620	31	79 71 401			1	.Screw	.Skruv	5
0630	32	95 92 692		560)	1	.Cover	.Täcklock	6
0640	32	95 92 700		610)	1	.Cover	.Täcklock	6
0650	32	95 92 718		580)	1	.Cover	.Täcklock	6
0660	32	95 92 726		590)	1	.Cover	.Täcklock	6
0670	33	95 19 877		231)	1	.Heating pad	.Värmedyna	4
0680	33	95 69 955		261)	1	.Heating pad	.Värmedyna	4
0690	34	*95 28 704*		231) NLS - USE 4063871	1	.Heating pad	.Värmedyna	4
0700	34	*95 27 706*		261) NLS - USE 4063855	1	.Heating pad	.Värmedyna	4
0710	35	79 72 821			1	.Screw	.Skruv	5
0720	40			See page 8B-201, 5-I10	1	.Switch	.Strömställare	
0730		95 88 542		See page 8B-245, 5-K06	1	.Mounting kit	.Monteringssats	6
0740		95 86 108		See page 8B-245, 5-K06	1	.Mounting kit	.Monteringssats	6

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-I10

Front seats Part 2 1989
500) Electrically adjust

Stolar Del 2 1989
500) Elmanövrerade

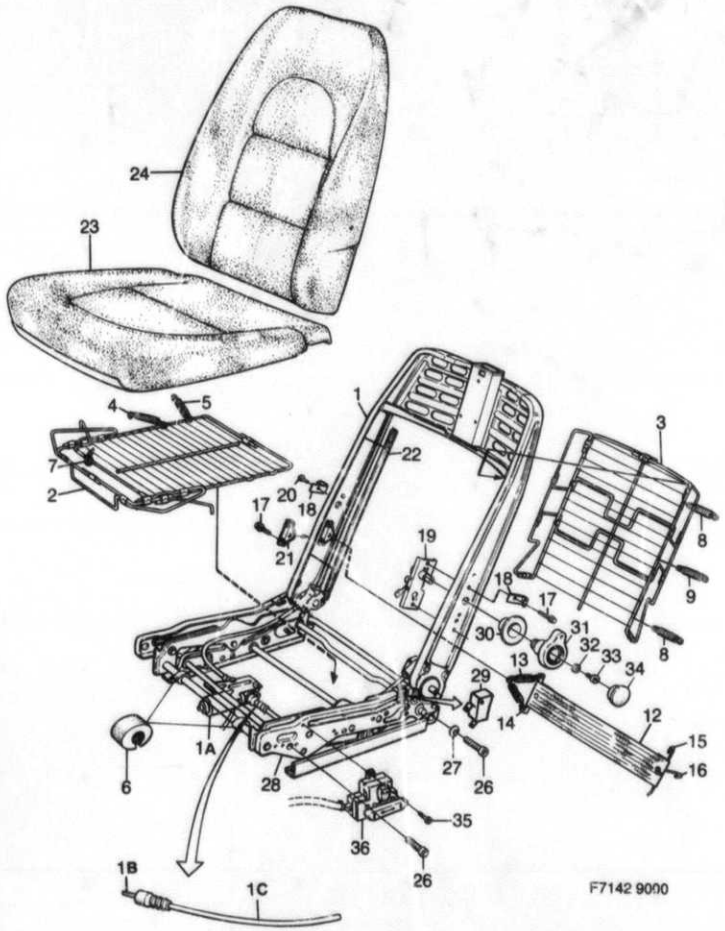

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010				See page 8B-197, 5-I06		Seat	Stol	
0020				See page 8B-197, 5-I06		.Seat frame	.Stolram	
0030	1	*95 92 155*		NLS - USE 4131751	1	..Seat frame	..Stolram	6
0040	1A	• 96 95 768			1	...Electric motor	...Elmotor	
0050	1B	• 95 79 715		LH	1	...Drive shaft	...Drivaxel	6
0060	1B	• 95 42 317		RH	1	...Drive shaft	...Drivaxel	6
0070	1C	• 95 42 309			2	...Outer casing	...Hölje	6
0080	2	40 32 934			1	..Wire matting	..Resårmatta	6
0090	3	96 97 525			1	..Wire matting	..Resårmatta	6
0100	4	96 73 146			6	..Spring	..Fjäder	6
0110	5	96 73 435			2	..Spring	..Fjäder	6
0120	6	40 33 486			2	..Rubber spacer	..Gummidistans	5
0130	7	79 71 872			2	..Tensioning band	..Spännband	5
0140	8	97 59 069			4	..Spring	..Fjäder	6
0150	9	97 59 077			2	..Spring	..Fjäder	6
0160	12	97 70 918			1	..Strip	..Band	6
0170	13	95 79 293			2	..Spring	..Fjäder	6
0180	14	97 70 942			1	..Brace	..Bygel	5
0190	15	97 70 926			1	..Brace	..Bygel	5
0200	16	97 70 934			1	..Hook	..Krok	5
0210	17	79 74 330			4	..Screw	..Skruv	5
0220	18	97 78 895			2	..Brace	..Bygel	5
0230	19	96 17 325		LH	1	..Control	..Reglage	6
0240	19	96 17 333		RH	1	..Control	..Reglage	6
0250	20	79 75 402			1	..Rivet	..Nit	5
0260	21	98 64 349			1	..Bracket	..Konsol	5
0270	22	96 71 835			2	..Protecting moulding	..Skyddslist	6
0280	23	*96 96 618*		231) NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
0290	23	96 77 014		261)	1	..Seat cushion	..Sittdyna	6
0300	24	*96 96 600*		231) NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
0310	24	97 58 715		261)	1	..Backrest cushion	..Ryggdyna	6
0320	26	75 76 580			4	..Screw	..Skruv	5
0330	27	95 47 381			2	..Washer	..Bricka	5
0340	28			See page 8B-203, 5-I12		..Seat frame	..Stolschassi	
0350	29	40 36 299			1	.Switch	.Brytare	5
0360	30	97 85 015			1	.Cover washer	.Täckbricka	6
0370	31	97 63 632			1	.Steering wheel	.Ratt	5
0380	32	80 29 944			1	.Washer	.Bricka	5
0390	33	80 59 396			1	.Screw	.Skruv	5
0400	34	97 63 624			1	.Cover	.Täcklock	6
0410	35	79 22 354			3	.Screw	.Skruv	5
0420	36	*95 64 980*		LH NLS - USE 4117081	1	.Switch	.Strömställare	5
0430	36	*95 66 993*		RH NLS - USE 4117073	1	.Switch	.Strömställare	5

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-I12

Front seats Part 3 1989
500) Electrically adjust

Stolar Del 3 1989
500) Elmanövrerade

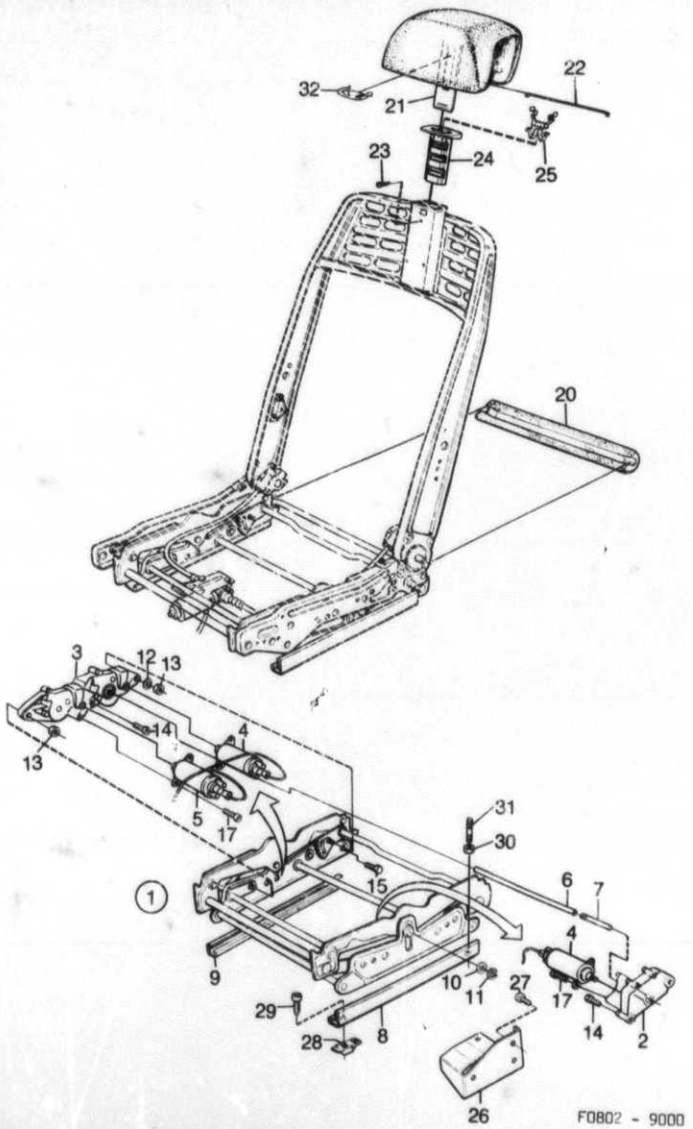

1495	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-197, 5-I06		Seat	Stol	
0020				See page 8B-197, 5-I06		.Seat frame	.Stolram	
0030	1	*96 95 248*		NLS - USE 4312625, 8073108	1	..Seat frame	..Stolschassi	5
0040	2	96 95 321			1	...Gear	...Växel	6
0050	3	96 95 354			1	...Gear	...Växel	6
0060	4	96 95 347			2	...Electric motor	...Elmotor	6
0070	5	95 79 798			1	...Electric motor	...Elmotor	6
0080	6	95 79 772			1	...Shaft	...Axel	6
0090	7	95 79 780			1	...Shaft	...Axel	6
0100	8	96 95 305		LH	1	...Rail	...Skena	6
0110	9	96 95 313		RH	1	...Rail	...Skena	6
0120	10	95 86 165			2	...Washer	...Bricka	5
0130	11	95 86 173			2	...E-circlip	...Spårryttare	5
0140	12	95 79 764			2	...Spacer washer	...Distansbricka	5
0150	13	95 86 132			4	...Nut	...Mutter	5
0160	14	95 86 157			3	...Screw	...Skruv	5
0170	15	95 86 181			4	...Screw	...Skruv	5
0190	17	95 86 207			6	...Screw	...Skruv	5
0200	20	97 92 391			1	.Crash pad	.Stötskydd	6
0210	21	95 47 688			1	.Head restraint	.Nackstöd	6
0220	22	94 53 868			2	.Wire rod	.Trådten	6
0230	23	79 22 396			1	.Screw	.Skruv	5
0240	24	95 71 696		438)	1	.Sleeve	.Hylsa	5
0245	24	40 31 563		439)	1	.Sleeve	.Hylsa	5
0250	25	97 96 848			1	.Locking spring	.Spärrfjäder	5
0260	26	*97 81 162*		LH NLS	1	.Bracket	.Konsol	5
0270	26	*97 82 210*		RH NLS	1	.Bracket	.Konsol	5
0280	27	79 74 884			3	.Screw	.Skruv	5
0290	28	79 75 766			2	.Cage nut	.Korgmutter	5
0300	29	95 85 423			2	.Screw	.Skruv	5
0310	30	*79 79 479*		NLS - USE 4134003	2	.Nut	.Mutter	5
0320	31	95 85 431			2	.Stud	.Pinnskruv	5
0330	32	95 45 104			1	.Clamp	.Klämma	5

438. Ch. --K1005299, --K2001372, --K8000112
439. Ch. K1005300--, K2001373--, K8000113--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-I14

Rear seat
Seat cushion

Baksäte
Sittdyna

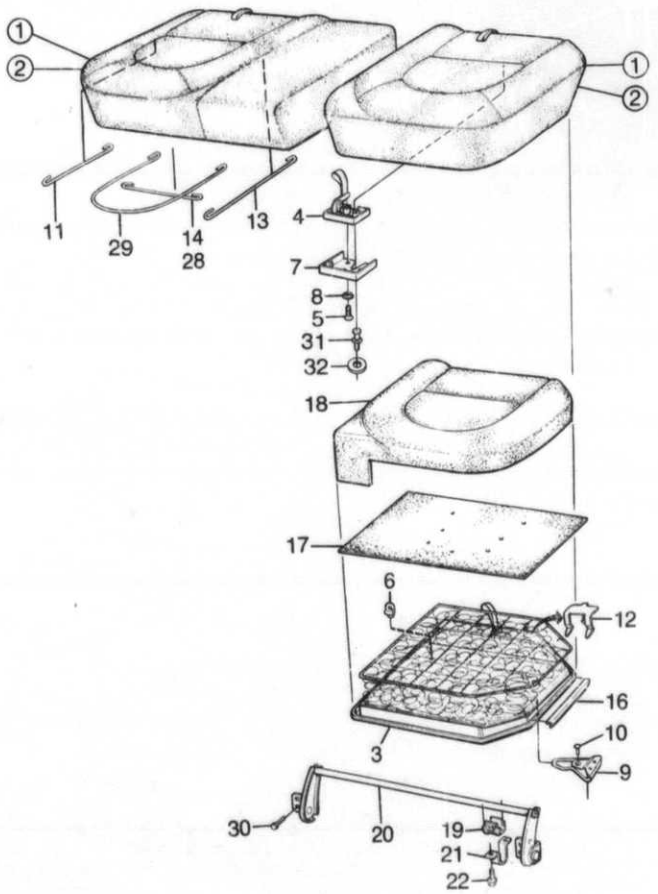

F0329 - 9000

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 51 728		227), -1987 LH	1	Seat cushion	Sittdyna	6
0020						textile	textil	
0030	1	97 82 103		228), -1987 LH	1	Seat cushion	Sittdyna	6
0040						leather	läder	
0050	1	96 99 158		259,260), 1988- LH	1	Seat cushion	Sittdyna	6
0060	1	96 99 166		257,260), 1988- LH	1	Seat cushion	Sittdyna	6
0070	1	96 99 174		258,260), 1988- LH	1	Seat cushion	Sittdyna	6
0080	1	97 51 710		227), -1987 RH	1	Seat cushion	Sittdyna	6
0090						textile	textil	
0100	1	97 82 095		228), -1987 RH	1	Seat cushion	Sittdyna	6
0110						leather	läder	
0120	1	96 99 125		259,260), 1988- RH	1	Seat cushion	Sittdyna	6
0130	1	96 99 133		257,260), 1988- RH	1	Seat cushion	Sittdyna	6
0140	1	96 99 141		258,260), 1988- RH	1	Seat cushion	Sittdyna	6
0150								
0160	2	96 72 619		259,532), 1988- LH	1	.Seat cushion	.Sittdyna	6
0170	2	96 96 675		257,258,532), 1988- LH	1	.Seat cushion	.Sittdyna	6
0180	2	96 72 627		259,532), 1988- RH	1	.Seat cushion	.Sittdyna	6
0190	2	96 96 667		257,258,532), 1988- RH	1	.Seat cushion	.Sittdyna	6
0200	3	97 52 239		261) LH	1	..Spring housing	..Resårhus	6
0210	3	96 61 794		109) LH	1	..Spring housing	..Resårhus	6
0220	3	96 96 030		231) LH	1	..Spring housing	..Resårhus	6
0230	3	97 52 007		261) RH	1	..Spring housing	..Resårhus	6
0240	3	96 61 778		109) RH	1	..Spring housing	..Resårhus	6
0250	3	96 96 758		231) RH	1	..Spring housing	..Resårhus	6
0260	4	97 74 175		LH	1	...Lock	...Lås	5
0270	4	97 74 183		RH	1	...Lock	...Lås	5
0280	5	79 77 028			2	...Screw	...Skruv	5
0290	6	97 81 469			X	...Hook	...Krok	5
0300	7	97 81 576		LH	1	...Protecting casing	...Skyddskåpa	6
0310	7	97 84 604		RH	1	...Protecting casing	...Skyddskåpa	6
0320	8	97 87 516			2	...Washer	...Bricka	5
0330	9	*97 71 296*		LH NLS - USE 4140059	1	...Bracket	...Hållare	6
0340	9	*97 89 751*		RH NLS - USE 4140042	1	...Bracket	...Hållare	6
0350	10	79 72 516			3	...Rivet	...Nit	5
0360	11	95 84 749		231)	2	..Wire rod	..Trådten	5
0370	12	96 73 831		231)	3	..Clamp	..Klammer	5
0380	13	96 93 094			1	..Wire rod	..Trådten	5
0390	14	97 21 499		231)	1	..Wire rod	..Trådten	5
0400	16	96 97 459		175)	1	..Strip	..List	6
0410	17	*97 61 859*		376) LH NLS - USE	1	..Padding	..Vadd	5
0410				9696048				
0420	17	97 61 842		376) RH	1	..Padding	..Vadd	5
0430	17	96 96 048		377) LH	1	..Padding	..Vadd	5
0440	17	96 96 766		377) RH	1	..Padding	..Vadd	5
0450	17	96 96 048		231) LH	1	..Padding	..Vadd	5
0460	17	96 96 766		231) RH	1	..Padding	..Vadd	5
0470	18	97 95 220		261) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0480	18	96 91 353		109) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0490	18	95 84 640		231) LH (9696121)	1	..Foam plastic cushion	..Skumplastdyna	6

109. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
175. Ch. H1015194--, H8000586--
227. State upholstery colour and year model Uppge klädselfärg och årsmodell
228. State upholstery colour and ch No Uppge klädselfärg och ch nr
231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
257. Trim colour A14, B14, C14, E14, F14, B44, C44, E44, F44, G44
258. Trim colour A24, B24, C24, E24, F24, G24
259. Trim colour A33, B33, C33, E33, F33, G33
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
376. Ch. --J1003432, --J2001149, --J8000006
377. Ch. J1003433--, J2001150--, J8000007--
532. Without upholstery Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-116

Rear seat
Seat cushion

Baksäte
Sittdyna

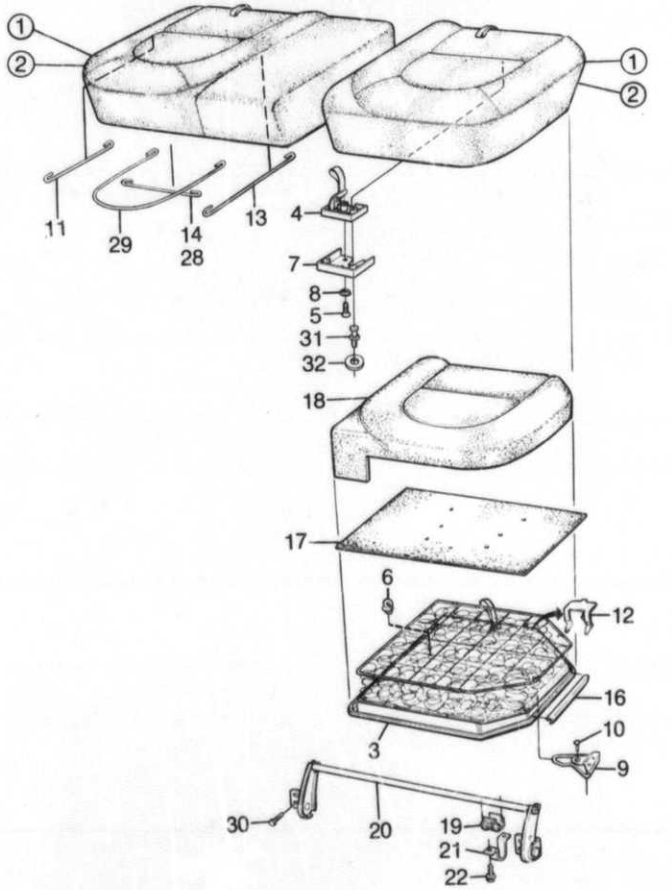

F0329 - 9000

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500	18	97 95 212		261) RH	1	.. Foam plastic cushion	.. Skumplastdyna	6
0510	18	96 91 361		109) RH	1	.. Foam plastic cushion	.. Skumplastdyna	6
0520	18	95 84 665		231) RH (9696774)	1	.. Foam plastic cushion	.. Skumplastdyna	6
0530	19	*97 19 808*		529) NLS - USE 4048260, 4048278	2	.. Bushing	.. Bussning	6
0540	19	40 48 260		530)	2	.. Bushing	.. Bussning	6
0550	20	96 63 410		LH (9752262)	1	.. Link arm	.. Länkarm	5
0560	20	96 63 402		RH (9752056)	1	.. Link arm	.. Länkarm	5
0570	21	*97 19 790*		529) NLS - USE 4048260, 4048278	2	.. Cap	.. Överfall	6
0580	21	40 48 278		530)	2	.. Cap	.. Överfall	6
0590	22	79 74 397			4	.. Screw	.. Skruv	5
0600	28	98 28 658		261)	1	. Wire rod	. Trådten	5
0610	29	97 87 532		261)	1	. Wire rod	. Trådten	5
0620	30	97 78 952			8	Screw	Skruv	5
0630	31	*97 51 249*		-1985 NLS - USE 9671025	2	Lock pin	Låspinne	5
0640	31	96 71 025		1986-	2	Lock pin	Låspinne	5
0650	32	83 11 904		408)	2	Washer	Bricka	5
0660		*97 46 736*		See page 8B-251, 5-K12 NLS	1	Clamp kit	Klammersats	
0670		96 72 668		See page 8B-245, 5-K06	1	Mounting kit	Monteringssats	6

109. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
408. Ch J1027403–, J2016375–, J8001706–
529. Ch. –K1028107, –K2017558, –K8001494
530. Ch. K1028108–, K2017559–, K8001495–

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-J08
Other interior equipment	5-H04
Complete sets:	5-K06

5-I18

Rear seat — Baksäte
Back cushion — Ryggdyna

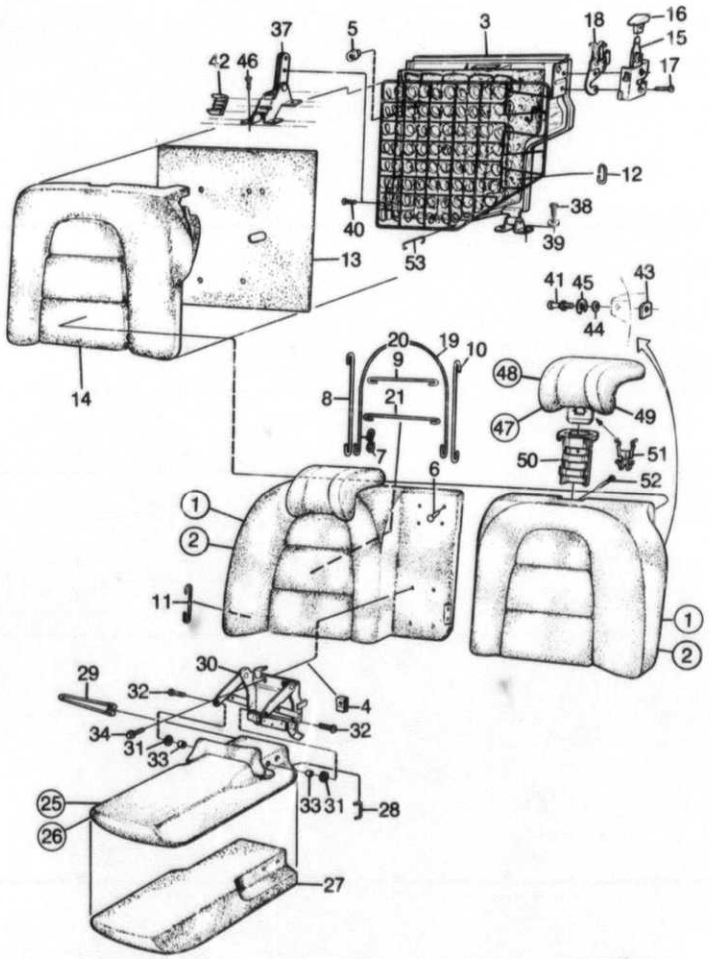

F7143 9000

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 51 876		227), -1987 LH	1	Backrest cushion	Ryggdyna	6
0020						textile	textil	
0030	1	97 82 186		228), -1987 LH	1	Backrest cushion	Ryggdyna	6
0040						leather	läder	
0050	1	96 99 067		259,260), 1988- LH	1	Backrest cushion	Ryggdyna	6
0060	1	96 99 075		257,260), 1988- LH	1	Backrest cushion	Ryggdyna	6
0070	1	96 99 083		258,260), 1988- LH	1	Backrest cushion	Ryggdyna	6
0080	1	97 51 736		227), -1987 RH	1	Backrest cushion	Ryggdyna	6
0090						textile	textil	
0100	1	97 82 111		228), -1987 RH	1	Backrest cushion	Ryggdyna	6
0110						leather	läder	
0120	1	96 99 034		259,260), 1988- RH	1	Backrest cushion	Ryggdyna	6
0130	1	96 99 042		257,260), 1988- RH	1	Backrest cushion	Ryggdyna	6
0140	1	96 99 059		258,260), 1988- RH	1	Backrest cushion	Ryggdyna	6
0150								
0160	2	96 72 635		259,532), 1988- LH	1	.Backrest cushion	.Ryggdyna	6
0170	2	96 96 659		257,258,532), 1988- LH	1	.Backrest cushion	.Ryggdyna	6
0180	2	96 72 643		259,532), 1988- RH	1	.Backrest cushion	.Ryggdyna	6
0190	2	96 96 642		257,258,532), 1988- RH	1	.Backrest cushion	.Ryggdyna	6
0200	3	97 51 884		261) -1987, LH	1	..Spring housing	..Resårhus	6
0210	3	95 72 892		261) 1988-, LH	1	..Spring housing	..Resårhus	6
0220	3	96 61 760		109) LH	1	..Spring housing	..Resårhus	6
0230	3	95 72 926		231) LH	1	..Spring housing	..Resårhus	6
0240	3	97 51 744		261) -1987, RH	1	..Spring housing	..Resårhus	6
0250	3	95 72 900		261) 1988-, RH	1	..Spring housing	..Resårhus	6
0260	3	96 61 711		109) RH	1	..Spring housing	..Resårhus	6
0270	3	95 72 918		231) RH	1	..Spring housing	..Resårhus	6
0280	4	79 72 573			4	...Clip nut	...Clipsmutter	5
0290	5	97 81 469			X	...Hook	...Krok	5
0300	6	79 72 516			2	...Rivet	...Nit	5
0310	7	97 69 217		231), 1988-, 30 MM	2	..Hook	..Krok	5
0320	7	• 97 99 057		261), 20 MM	2	..Hook	..Krok	5
0330	8	95 79 244		231), 1988-	2	..Wire rod	..Trådten	5
0340	9	97 21 499		231), 1988-	2	..Wire rod	..Trådten	5
0350	10	• 97 61 495			1	..Wire rod	..Trådten	6
0360	11	• 98 97 927			1	..Wire rod	..Trådten	6
0370	12	94 50 685			3	..Clamp	..Klammer	5
0380	13	97 61 826		376)	1	..Padding	..Vadd	5
0390	13	96 96 691		377)	1	..Padding	..Vadd	5
0400	13	96 96 691		231), 1988-	1	..Padding	..Vadd	5
0410	14	97 88 928		261) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0420	14	96 91 387		109) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0430	14	95 84 772		231) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0440	14	97 88 910		261) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0450	14	96 91 379		109) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0460	14	95 84 764		231) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0470	15	97 51 579		LH	1	..Lock	..Lås	5
0480	15	97 51 587		RH	1	..Lock	..Lås	5
0490	16	97 55 935			1	..Handle	..Handtag	5
0500	17	79 77 028			2	..Screw	..Skruv	5
0510	18	97 96 723		LH (9789801)	1	..Bracket	..Hållare	5

109. For cars with upholstery "BLOCK PATTERN" För bilar med klädsel "BLOCK MÖNSTER"
227. State upholstery colour and year model Uppge klädselfärg och årsmodell
228. State upholstery colour and ch No Uppge klädselfärg och ch nr
231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
257. Trim colour A14, B14, C14, E14, F14, B44, C44, E44, F44, G44
258. Trim colour A24, B24, C24, E24, F24, G24
259. Trim colour A33, B33, C33, E33, F33, G33
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
376. Ch. --J1003432, --J2001149, --J8000006
377. Ch. J1003433--, J2001150--, J8000007--
532. Without upholstery Utan klädsel

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Eiectrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-120

Rear seat — Baksäte
Back cushion — Ryggdyna

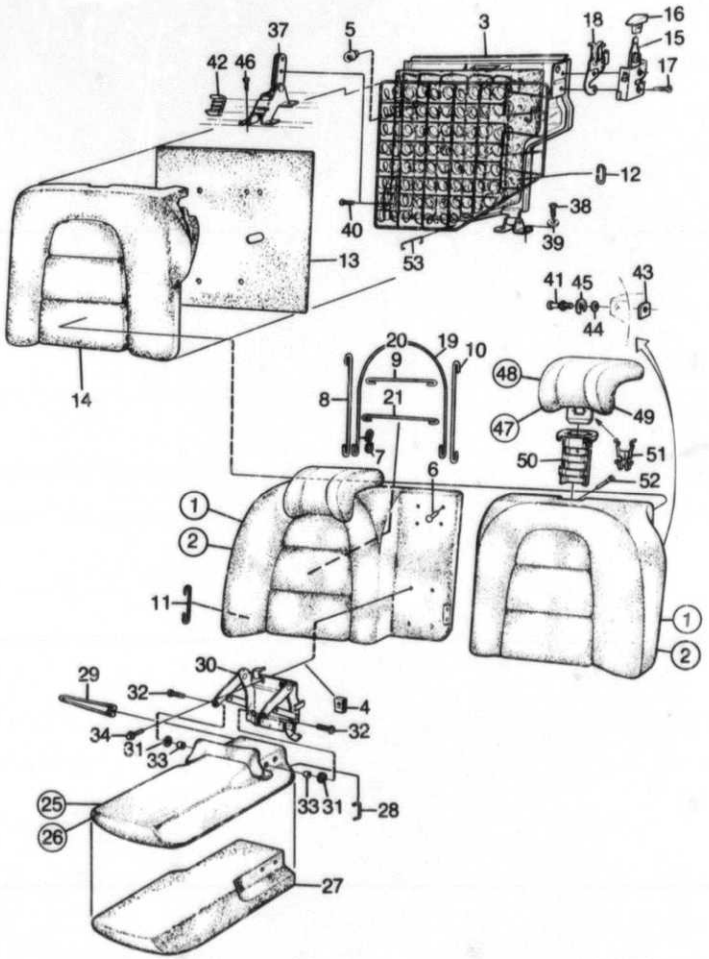

F7143 9000

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	18	97 95 816		RH (9783309)	1	..Bracket	..Hållare	5
0530	19	97 21 598		261)	1	.Wire rod	.Trådten	5
0540	20	98 28 641		261)	1	.Wire rod	.Trådten	5
0550	21	98 28 658		261)	1	.Wire rod	.Trådten	5
0560	25	97 51 314		227)	1	Arm rest	Armstöd	6
0570						textile	textil	
0580	25	97 82 129		228)	1	Arm rest	Armstöd	6
0590						leather	läder	
0600	26	96 72 650		532)	1	.Arm rest	.Armstöd	6
0610				See page 8B-251, 5-K12				
0620	27	97 81 337			1	..Cushion	..Kudde	6
0630	28	84 38 467			2	..Staple	..Häftklammer	5
0640	29	94 45 909			1	..Clamp	..Trådbygel	6
0650	30	*97 81 147*		-1985 NLS - USE 9593948	1	..Bracket	..Konsol	6
0660	30	95 93 948		1986- (9896531)	1	..Bracket	..Konsol	6
0670	31	84 57 541			4	..Washer	..Bricka	5
0680	32	*94 91 325*		NLS - USE 4055133	4	..Screw	..Skruv	5
0690	33	84 58 598			4	..Sleeve	..Hylsa	5
0700	34	79 75 774		436)	4	..Screw	..Skruv	5
0710	34	79 72 607		437)	4	..Screw	..Skruv	5
0720	37	97 61 974			1	Joint	Led	5
0730	38	79 74 033		-1987	4	Screw	Skruv	5
0740	38	79 76 212		1988-,366)	2	Screw	Skruv	5
0750	38	79 76 897		367)	2	Screw	Skruv	5
0760	39	79 16 497		1988-	2	Washer	Bricka	5
0770	40	79 77 010		-1988	4	Screw	Skruv	5
0780	40	79 81 921		500) 1989-	4	Screw	Skruv	5
0790	41	*97 51 249*		1985 NLS - USE 9671025	2	Lock pin	Låspinne	5
0800	41	96 71 025		1986-	2	Lock pin	Låspinne	5
0810	42	97 89 769			1	Plastic buffer	Plastbuffert	5
0820	43	97 65 272			2	Nut plate	Mutterplatta	5
0830	44	97 91 971			2	Washer	Bricka	5
0840	45	*97 89 090*		NLS - USE 4288189	2	Washer	Bricka	6
0850	46	80 59 552		(9793563)	4	Screw	Skruv	5
0860	47	97 [illegible] 300		228),-1987	2	Head restraint	Nackstöd	6
0870	47	96 99 182		261,228),1988-	2	Head restraint	Nackstöd	6
0880	47	96 99 190		231,228),1988-	2	Head restraint	Nackstöd	6
0890	48	96 72 700		261,228,532),1988-	1	.Head restraint	.Nackstöd	6
0900	48	95 75 945		231,228,532),1988-	1	.Head restraint	.Nackstöd	6
0910	49	97 54 557			1	..Head restraint	..Nackstöd	6
0920	49	95 74 278		231)	1	..Head restraint	..Nackstöd	6
0930	50	40 31 563		249) (9795949)	1	..Sleeve	..Hylsa	5
0940	50	95 71 696		250,438)	1	..Sleeve	..Hylsa	5
0950	50	40 31 563		439)	1	..Sleeve	..Hylsa	5
0960	51	97 96 848		(9457557)	1	..Locking spring	..Spärrfjäder	5
0970	52	96 58 279		1986-	1	..Screw	..Skruv	5
0980	53	*97 46 736*		See page 8B-251, 5-K12 NLS	1	Clamp kit	Klammersats	
0990		96 72 668		See page 8B-245, 5-K06	1	Mounting kit	Monteringssats	

227. State upholstery colour and year model — Uppge klädselfärg och årsmodell
228. State upholstery colour and ch No — Uppge klädselfärg och ch nr
231. For cars with upholstery "HORIZON" — För bilar med klädsel "HORISONT"
249. Ch. --H1032574, --H8001798
250. Ch. H1032575--, H8001799--
261. For cars with upholstery "CONTUR" — För bilar med klädsel "CONTUR"
366. Ch. --J1001014, --J2000124, --J8000188
367. Ch. J1001015--, J2000125--, J8000189--
436. Ch. --K1004788, --K2001171, --K8005405
437. Ch. K1004789--, K2001172--, K8005406--
438. Ch. --K1005299, --K2001372, --K8000112
439. Ch. K1005300--, K2001373--, K8000113--
500. Also valid for SE 1988B. — Gäller även för SE 1988B.
532. Without upholstery — Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5--122

Rear seat, fixed
Seat cushion

Baksäte, fast
Sittdyna

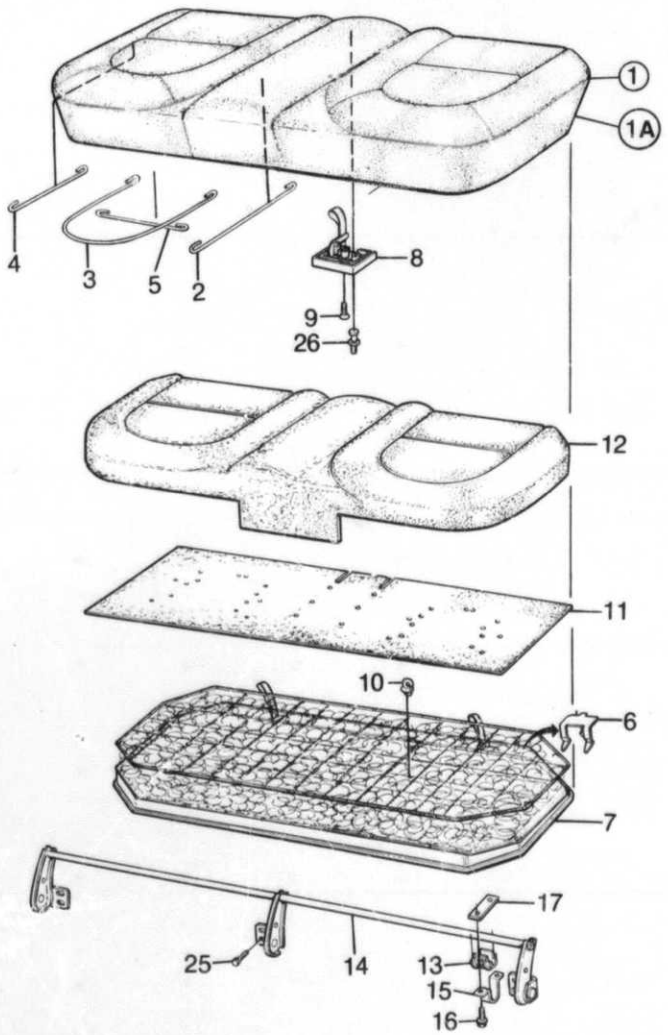

F0112 - 9000

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 091		259,260)	1	Seat cushion	Sittdyna	6
0020	1	96 99 117		258,260)	1	Seat cushion	Sittdyna	6
0030								
0040	1A	97 51 231		259,532)	1	.Seat cushion	.Sittdyna	6
0050	1A	96 75 216		258,532)	1	.Seat cushion	.Sittdyna	6
0060	2	96 93 094			2	..Wire rod	..Trådten	5
0070	3	97 87 532		261)	2	..Wire rod	..Trådten	5
0080	4	95 84 749		231)	4	..Wire rod	..Trådten	5
0090	5	98 28 658		261)	2	..Wire rod	..Trådten	5
0100	5	97 21 499		231)	2	..Wire rod	..Trådten	5
0110	6	96 73 831		231)	2	..Clamp	..Klammer	5
0120	7	97 52 379		261)	1	..Spring housing	..Resårhus	6
0130	7	96 75 174		231)	1	..Spring housing	..Resårhus	6
0140	8	95 72 454			1	...Lock	...Lås	5
0150	9	79 77 028			2	...Screw	...Skruv	5
0160	10	97 81 469			X	...Hook	...Krok	5
0170	11	97 61 867			1	..Padding	..Vadd	5
0180	12	97 52 395		261)	1	..Foam plastic cushion	..Skumplastdyna	6
0190	12	96 75 265		231,364)	1	..Foam plastic cushion	..Skumplastdyna	6
0200	12	95 91 793		231,365)	1	..Foam plastic cushion	..Skumplastdyna	6
0210	13	*97 19 808*		529) NLS - USE 4048260, 4048278	4	..Bushing	..Bussning	6
0210								
0220	13	40 48 260		530)	4	..Bushing	..Bussning	6
0230	14	95 72 470			1	..Link arm	..Länkarm	5
0240	15	*97 19 790*		529) NLS - USE 4048260, 4048278	4	..Cap	..Överfall	6
0240								
0250	15	40 48 278		530)	4	..Cap	..Överfall	6
0260	16	79 65 544		418)	8	..Screw	..Skruv	5
0270	16	79 75 436		419)	8	..Screw	..Skruv	5
0280	17	95 72 447			12	..Spacer	..Distans	5
0290	25	97 78 952			6	Screw	Skruv	5
0300	26	96 71 025			1	Lock pin	Låspinne	5
0310		*97 46 736*		See page 8B-251, 5-K12 NLS	1	Clamp kit	Klammersats	
0310								

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
258. Trim colour A24, B24, C24, E24, F24, G24
259. Trim colour A33, B33, C33, E33, F33, G33
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
364. Ch. --J1023844
365. Ch. J1023845--
418. Ch. --J1031641
419. Ch. J1031642--
529. Ch. --K1028107, --K2017558, --K8001494
530. Ch. K1028108--, K2017559--, K8001495--
532. Without upholstery Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B06
Other interior equipment	5-H04
Complete sets:	5-K06

5-124

Rear seat, fixed
Back cushion

Baksäte, fast
Ryggdyna

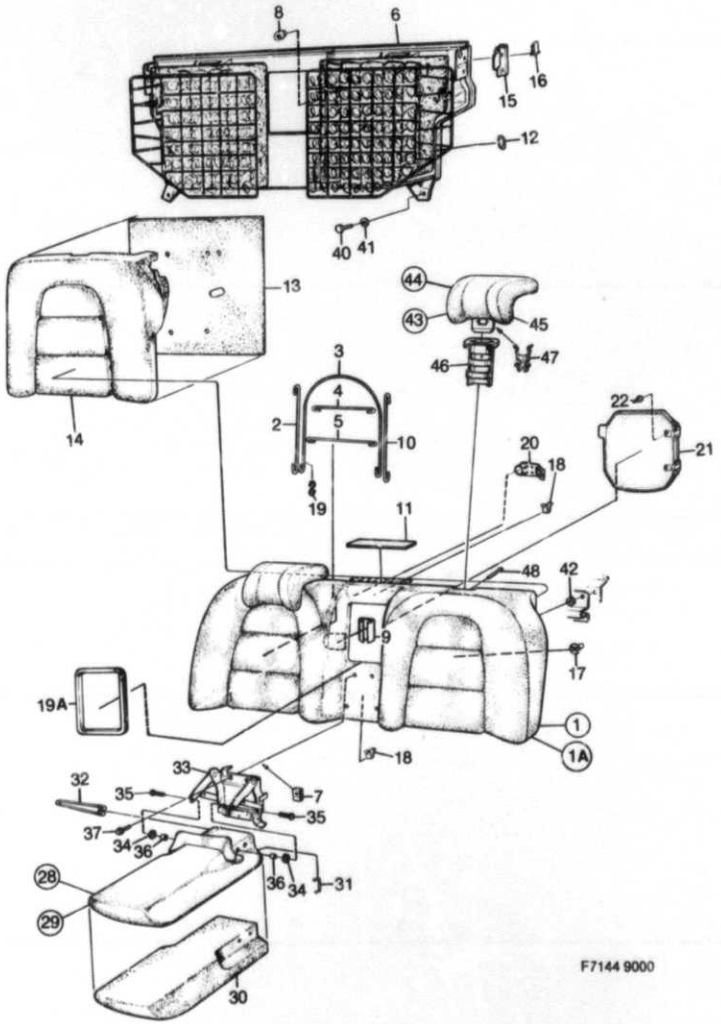

1575	Pos		Part No/Art nr	K S	Noter/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		96 99 000		259,260)	1	Backrest cushion	Ryggdyna	6
0020	1		96 99 026		258,260)	1	Backrest cushion	Ryggdyna	6
0030									
0040	1A		97 51 298		259,532)	1	.Backrest cushion	.Ryggdyna	6
0050	1A		96 75 208		258,532)	1	.Backrest cushion	.Ryggdyna	6
0060	2		95 79 244		231)	4	..Wire rod	..Trådten	5
0070	3		97 21 598		261)	2	..Wire rod	..Trådten	5
0080	4		97 21 499		231)	4	..Wire rod	..Trådten	5
0090	4		98 28 641		261)	2	..Wire rod	..Trådten	5
0100	5		98 28 658		261)	2	..Wire rod	..Trådten	5
0110	6		97 51 322		261)	1	..Spring housing	..Resårhus	6
0120	6		96 93 177		231)	1	..Spring housing	..Resårhus	6
0130	7		79 72 573			4	...Clip nut	...Clipsmutter	5
0140	8		97 81 469			X	...Hook	...Krok	5
0150	9		95 72 835			1	...Plastic lining	...Plastskoning	6
0155	10	•	97 61 495			1	..Wire rod	..Trådten	6
0160	11		40 35 747		1989-	1	..Strip	..List	6
0170	12		*98 49 498*		261) NLS - USE 9450685	2	..Clamp	..Klammer	5
0180	12		*98 49 498*		231) NLS - USE 9450685	6	..Clamp	..Klammer	5
0190	13		96 96 691			2	..Padding	..Vadd	5
0200	14		97 88 928		261), LH	1	..Foam plastic cushion	..Skumplastdyna	6
0210	14		97 88 910		261), RH	1	..Foam plastic cushion	..Skumplastdyna	6
0220	14		95 84 772		231), LH	1	..Foam plastic cushion	..Skumplastdyna	6
0230	14		95 84 764		231), RH	1	..Foam plastic cushion	..Skumplastdyna	6
0240	15		95 73 817		LH	1	..Upholstery clip	..Klädselfäste	5
0250	15		95 73 809		RH	1	..Upholstery clip	..Klädselfäste	5
0260	16		73 99 496			2	..Clamp	..Klammer	5
0270	17		96 91 320			1	..Solenoid housing	..Magnethus	5
0280	18		97 71 288			8	..Clamp	..Klammer	5
0290	19		97 69 217		231), 30 MM	4	..Hook	..Krok	5
0295	19	•	97 99 057		261), 20 MM	4	..Hook	..Krok	5
0300	19A		95 80 358			1	..Strip	..List	6
0310	20		96 97 848		-1988	1	..Cover washer	..Täckbricka	6
0320	20		40 37 529		1989-	1	..Cover washer	..Täckbricka	6
0330	21		40 37 537		(9673849)	1	.Hatch	.Lucka	6
0340	22		79 70 577			2	.Screw	.Skruv	5
0350	28		97 51 314		260)	1	Arm rest	Armstöd	6
0360							textile	textil	
0370	28		97 82 129		260)	1	Arm rest	Armstöd	6
0380							leather	läder	
0390	29		96 72 650		532)	1	.Arm rest	.Armstöd	6
0400					See page 8B-251, 5-K12				
0410	30		97 81 337			1	..Cushion	..Kudde	6
0420	31		84 38 467			2	..Staple	..Häftklammer	5
0430	32		94 45 909			1	..Clamp	..Trådbygel	6
0440	33		95 93 948		(9896531)	1	..Bracket	..Konsol	6
0450	34		84 57 541			4	..Washer	..Bricka	5
0460	35		*94 91 325*		NLS - USE 4055133	4	..Screw	..Skruv	5
0470	36		84 58 598			4	..Sleeve	..Hylsa	5
0480	37		79 75 774		436)	4	..Screw	..Skruv	5
0490	37		79 72 607		437)	4	..Screw	..Skruv	5
0500	40		79 76 897			2	Screw	Skruv	5
0510	41		73 11 772			2	Washer	Bricka	5
0520	42		79 67 953			2	Nut	Mutter	5
0530	43		96 99 208		231,260)	2	Head restraint	Nackstöd	6

231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
258. Trim colour A24, B24, C24, E24, F24, G24
259. Trim colour A33, B33, C33, E33, F33, G33
260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
436. Ch. --K1004788, --K2001171, --K8005405
437. Ch. K1004789--, K2001172--, K8005406--
532. Without upholstery Utan klädsel

MASTER INDEX

0 General 1-A02
2 Engine 1-B02
3A Electrical system, general 2-A02
3B Electrical, central housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 4-F02
8B Body, internal 5-A02
8C Body, heating and ventilation 6-A02
9 Tools, Labels 6-C02
10 Numerical register 6-D02


8B GROUP INDEX

Instrument panel 5-A06
Upholstery 5-B08
Other interior equipment 5-H04
Complete sets: 5-K06

5-J02

Rear seat, fixed
Back cushion

Baksäte, fast
Ryggdyna

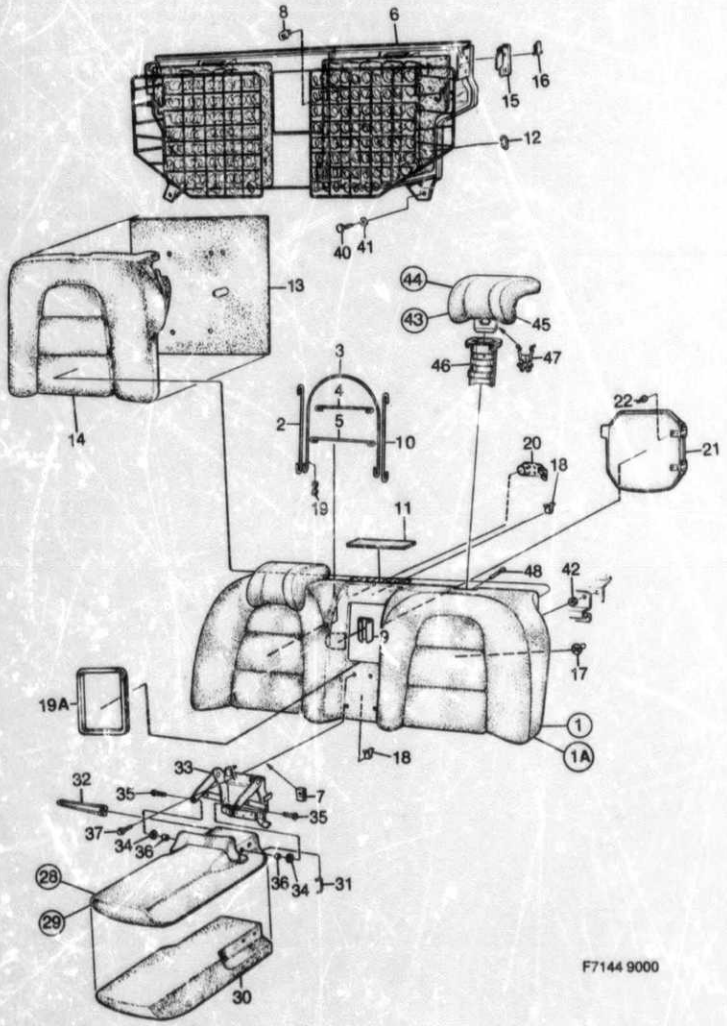

F7144 9000

1575	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	43	96 99 216		261,260)	2	Head restraint	Nackstöd	6
0550	44	95 77 032		532)	2	.Head restraint	.Nackstöd	6
0560	44	95 93 088		532), AU	2	.Head restraint	.Nackstöd	6
0570	45	95 83 402			1	..Head restraint	..Nackstöd	6
0580	45	*95 93 070*		AU NLS	1	..Head restraint	..Nackstöd	6
0590	46	95 71 696		438)	1	..Sleeve	..Hylsa	5
0600	46	40 31 563		439)	1	..Sleeve	..Hylsa	5
0610	47	97 96 848		NOT AU	1	..Locking spring	..Spärrfjäder	5
0620	48	96 58 279		NOT AU	1	..Screw	..Skruv	5
0630		*97 46 736*		See page 8B-251, 5-K12 NLS	1	Clamp kit	Klammersats	
0630								

260. State upholstery colour and ch No Uppge klädselfärg och ch nr
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
438. Ch. --K1005299, --K2001372, --K8000112
439. Ch. K1005300--, K2001373--, K8000113--
532. Without upholstery Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J04

Equipment luggage compartment

Utrustning bagagerum

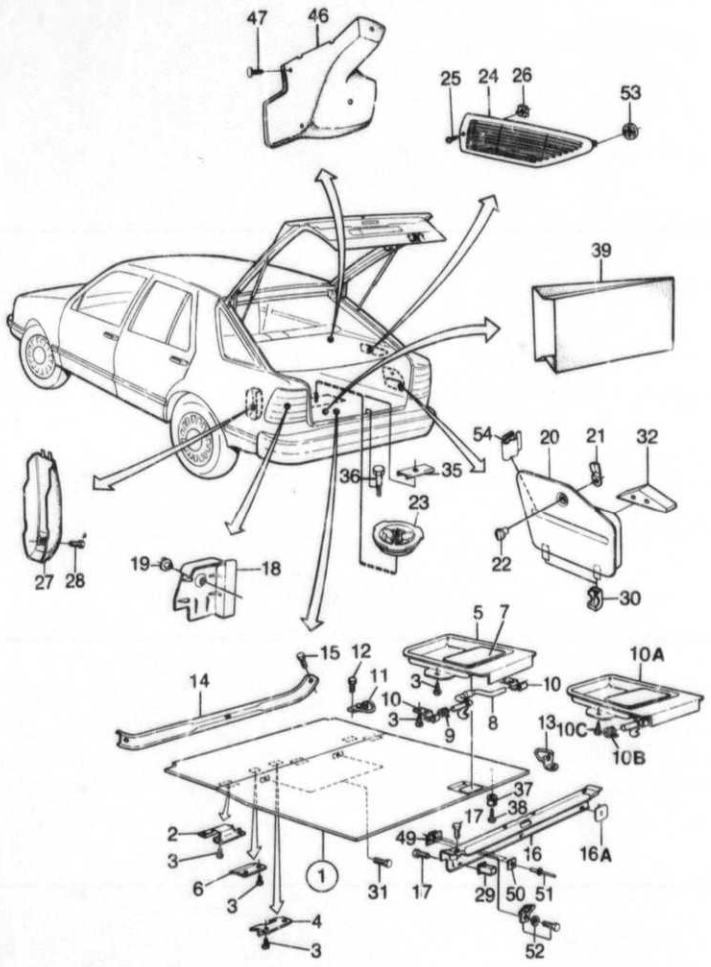

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 75 630		(9759903,9790957)	1	Floor	Golv	5
0020	2	97 64 853		50)	3	.Hinge	.Gångjärn	5
0030	2	97 64 853		51) LH	1	.Hinge	.Gångjärn	5
0040	2	97 90 981		51) CENTRE AND RH	2	.Hinge	.Gångjärn	5
0050	3	97 75 230			24	.Screw	.Skruv	5
0060	4	*97 78 317*		50) NLS	2	.Plate	.Plåt	6
0070	5	97 74 266		50)	1	.Cover	.Kåpa	5
0080	6	97 78 309		50)	1	.Clamp	.Klämma	5
0090	7	97 82 509		50)	1	.Handle	.Handtag	5
0100	8	97 74 258		50)	1	.Brace	.Bygel	6
0110	9	97 74 282		50)	1	.Spring	.Fjäder	6
0120	10	97 82 228		50)	2	.Bracket	.Fäste	5
0130	10A	96 57 123		51)	1	.Lock	.Lås	6
0140	10B	97 74 282		51)	1	.Spring	.Fjäder	6
0150	10C	97 75 230		51,396)	2	.Screw	.Skruv	5
0160	10C	80 59 248		397)	2	.Screw	.Skruv	5
0170	11	97 74 217			2	Eye	Ögla	6
0180	12	79 22 420			4	Screw	Skruv	5
0190	13	97 77 749			2	Eye	Ögla	6
0200	14	*97 65 215*		-1986 NLS - USE 9574468	1	Cover	Kåpa	5
0210	14	95 74 468		1987-	1	Cover	Kåpa	5
0220	15	*84 41 503*		NLS - USE 7970601	3	Screw	Skruv	5
0230	16	97 54 847			1	Sill protection	Tröskelskydd	5
0240	16	*41 41 636*		374), 4D (9791906) NLS - USE 4271235	1	Sill protection	Tröskelskydd	6
0240								
0250	16	95 45 450		375), 4D	1	Sill protection	Tröskelskydd	6
0260	16	*96 56 968*		1986-, AU NLS - USE 4258596	1	Sill protection	Tröskelskydd	5
0260								
0270	16	*96 56 968*		1989-, CA NLS - USE 4258596	1	Sill protection	Tröskelskydd	5
0270								
0280	16A	96 58 618		1986-, AU	3	Plug	Plugg	5
0290	17	97 71 320			7	Screw	Skruv	5
0300	17	97 71 320		4D	9	Screw	Skruv	5
0310	18			See page 3A-043, 2-B20	1	Cover	Kåpa	
0320	19			See page 3A-043, 2-B20	2	.Knob	.Vred	
0330	20	*95 48 108*		(9796996,9578923) NLS - USE 4499778	1	Tool box	Verktygslåda	6
0330								
0340	21	97 67 799			1	.Catch	.Hake	5
0350	22	97 67 781			1	.Knob	.Vred	5
0360	23	97 74 290			1	Knob	Vred	5
0370	24	95 71 043		5D, (9782327)	1	Grille	Galler	5
0380	24	97 84 752		406), 4D	1	Grille	Galler	5
0390	24	95 45 443		407), 4D	1	Grille	Galler	5
0400	25	79 71 500		242), 5D	1	Screw	Skruv	5
0410	25	79 77 960		243), 5D	1	Screw	Skruv	5
0420	25	94 91 689		406), 4D	1	Special screw	Snabbskruv	5
0430	26	86 01 916		242), 5D	1	Clip nut	Clipsmutter	3
0440	26	82 38 305		243), 5D	1	Clip	Clips	3
0450	26	84 52 898		406), 4D	1	Quick nut	Snabbmutter	3
0460	27	97 67 971		5D	1	Cover	Kåpa	5
0470	27	97 89 605		372), 4D	1	Cover	Kåpa	5


50. Ch. --G1004543
51. Ch. G1004544--
242. Ch --H1028949, --H8001755
243. Ch H1028950--, H8001756--
372. Ch --J1024012
374. Ch --J1020812
375. Ch J1020813--
396. Ch --J1027775, --J2016398, --J8001657
397. Ch J1027776--, J2016399--, J8001658--
406. Ch --J1028805, --J1029670
407. Ch J1028806--, J1029671--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

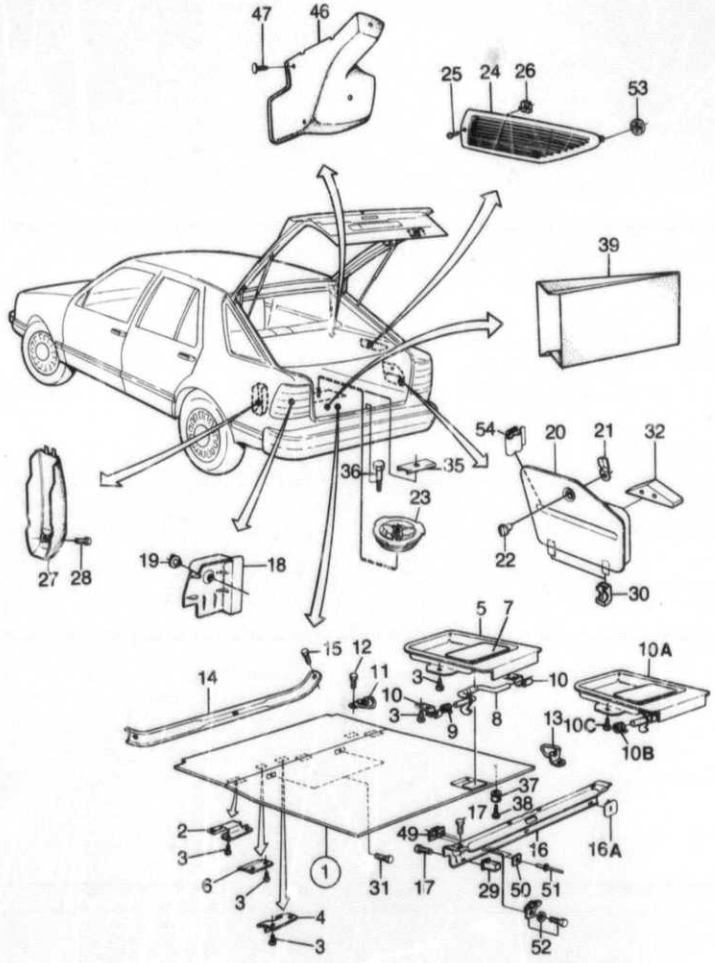

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	27	95 45 351		373), 4D	1	Cover	Kåpa	5
0490	28	84 26 199			1	Screw	Skruv	5
0500								
0510	29	79 77 358			3	Press nut	Pressmutter	5
0520	29	79 77 358		4D	1	Press nut	Pressmutter	5
0530	30	97 95 717			2	Cover	Kåpa	5
0540	31	79 22 354		-1987	2	Screw	Skruv	5
0550	31	79 72 938		1988-	2	Screw	Skruv	5
0560	32	96 61 877			1	Holder	Hållare	6
0570	35	97 33 338			1	Washer	Bricka	5
0580						big spare wheel	stort reservhjul	
0590	36	*96 61 018*		NLS - USE 4141784	1	Screw	Skruv	5
0600						big spare wheel	stort reservhjul	
0610	37	97 94 264			1	Knob	Knopp	6
0620	38	97 75 230			1	Screw	Skruv	5
0630	39	94 59 728		4D	1	Bag	Påse	6
0640	46	95 76 513		4D, LH	1	Protection	Skydd	4
0650	46	95 76 505		4D, RH	1	Protection	Skydd	4
0660	47	96 68 153		492), 4D	6	Clip	Clips	5
0670	47	96 68 153		493), 4D	4	Clip	Clips	5
0680	49	96 53 502		1986-, AU	3	Nut plate	Mutterplatta	5
0690	49	95 83 790		1989-, CA	3	Nut plate	Mutterplatta	5
0700	50	92 30 293		1986-, AU	3	Washer	Bricka	5
0710	50	92 30 293		1989-, CA	3	Washer	Bricka	5
0720	51	79 72 490		1986-, AU	3	Rivet	Nit	5
0730	51	79 72 490		1989-, CA	3	Rivet	Nit	5
0740	52	95 93 542		1989-, CA	1	Attaching washer	Fästbricka	6
0750	52	95 93 534		1989-, 4D, CA	1	Attaching washer	Fästbricka	6
0760	53	95 45 427		407), 4D	7	Washer	Bricka	5
0770	54	95 48 355		393,500),1989-	1	Clamp	Klämma	3

373. Ch J1024013--
393. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
407. Ch J1028806--, J1029671--
492. Ch. --K1022575, --K2013143
493. Ch. K1022576--, K2013144--
500. Also valid for SE 1988B. — Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J08

Scuff plate protector

Tröskelskydd

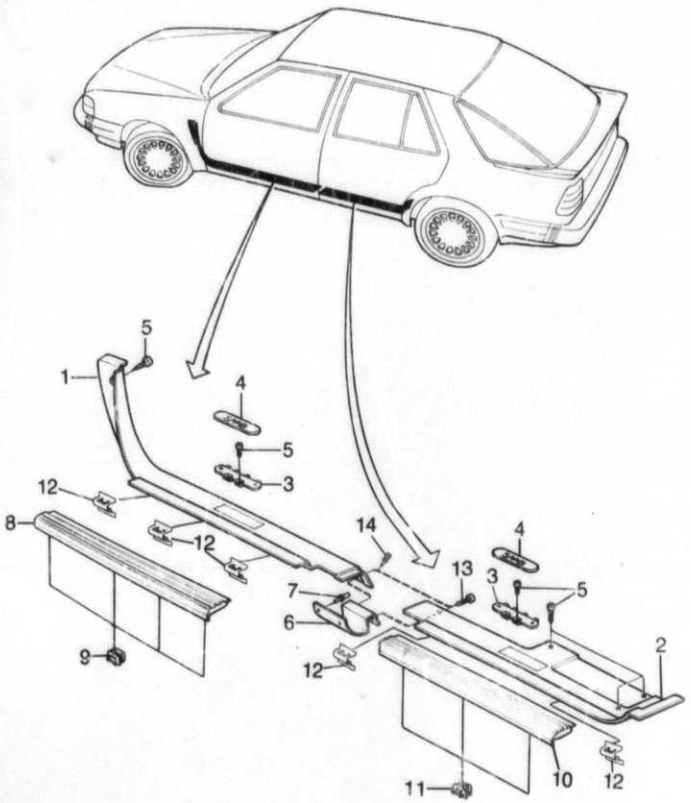

F0803 - 9000

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*97 94 363*		560,44) LH NLS	1	Sill protection	Tröskelskydd	5
0020	1	*97 94 371*		560,44) RH NLS	1	Sill protection	Tröskelskydd	5
0030	1	96 56 414		560,45)-1987, LH	1	Sill protection	Tröskelskydd	5
0040	1	96 75 695		560), 1988-, LH	1	Sill protection	Tröskelskydd	5
0050	1	95 85 712		560,302), LH	1	Sill protection	Tröskelskydd	5
0060	1	*96 56 422*		560,45)-1987, RH NLS - USE 9697574	1	Sill protection	Tröskelskydd	5
0070	1	96 97 574		560), 1988-, RH	1	Sill protection	Tröskelskydd	5
0090	1	*97 94 389*		560,44) LH, RHD NLS	1	Sill protection	Tröskelskydd	5
0100	1	*97 94 397*		560,44) RH, RHD NLS	1	Sill protection	Tröskelskydd	5
0110	1	96 56 455		560,45)-1987 LH, RHD	1	Sill protection	Tröskelskydd	5
0120	1	96 75 703		560), 1988-, LH, RHD	1	Sill protection	Tröskelskydd	5
0130	1	*96 56 463*		560,45)-1987 RH, RHD NLS - USE 9697574	1	Sill protection	Tröskelskydd	5
0140	1	96 97 582		560), 1988-, RH, RHD	1	Sill protection	Tröskelskydd	5
0160	1	*97 94 405*		590,44) LH NLS	1	Sill protection	Tröskelskydd	5
0170	1	*97 94 413*		590,44) RH NLS	1	Sill protection	Tröskelskydd	5
0180	1	96 56 497		590,45) -1986, LH	1	Sill protection	Tröskelskydd	5
0190	1	96 56 505		590,45) -1986, RH	1	Sill protection	Tröskelskydd	5
0200	1	96 64 376		590), 1987, LH	1	Sill protection	Tröskelskydd	5
0210	1	96 75 711		590), 1988, LH	1	Sill protection	Tröskelskydd	5
0220	1	*95 80 960*		590,500), 1989-, LH NLS - USE 9580986	1	Sill protection	Tröskelskydd	5
0230	1	95 85 720		590,302)-1988, LH	1	Sill protection	Tröskelskydd	5
0240	1	95 87 700		590,302,500), 1989-, LH,	1	Sill protection	Tröskelskydd	5
0250	1	96 64 384		590), 1987, RH	1	Sill protection	Tröskelskydd	5
0260	1	96 97 590		590), 1988, RH	1	Sill protection	Tröskelskydd	5
0270	1	95 80 978		590,500), 1989-, RH	1	Sill protection	Tröskelskydd	5
0290	1	*97 94 421*		590,44,630) LH, RHD NLS - USE 9656539, 9656695	1	Sill protection	Tröskelskydd	5
0300	1	*97 94 439*		590,44) RH, RHD NLS	1	Sill protection	Tröskelskydd	5
0310	1	96 56 539		590,45) -1986, LH, RHD	1	Sill protection	Tröskelskydd	5
0320	1	96 56 547		590,45) -1986, RH, RHD	1	Sill protection	Tröskelskydd	5
0330	1	96 64 392		590), 1987, LH, RHD	1	Sill protection	Tröskelskydd	5
0340	1	96 75 729		590), 1988, LH, RHD	1	Sill protection	Tröskelskydd	5
0350	1	95 80 986		590,500), 1989-, LH, RHD	1	Sill protection	Tröskelskydd	5
0360	1	96 64 400		590), 1987, RH, RHD	1	Sill protection	Tröskelskydd	5
0370	1	96 97 608		590), 1988, RH, RHD	1	Sill protection	Tröskelskydd	5
0380	1	95 80 994		590,500), 1989-, RH, RHD	1	Sill protection	Tröskelskydd	5
0400	1	97 98 000		600), 1987, LH	1	Sill protection	Tröskelskydd	5
0410	1	96 75 679		600), 1988-, LH	1	Sill protection	Tröskelskydd	5
0420	1	95 85 704		600,302), LH	1	Sill protection	Tröskelskydd	5
0430	1	96 97 556		600), 1987-, RH(9798018)	1	Sill protection	Tröskelskydd	5
0450	1	97 98 083		600), 1987, LH, RHD	1	Sill protection	Tröskelskydd	5
0460	1	96 75 687		600), 1988-, LH, RHD	1	Sill protection	Tröskelskydd	5
0470	1	96 97 566		600)1987-,RH,RHD(9798091	1	Sill protection	Tröskelskydd	5
0490	1	*97 94 447*		580,44) LH NLS	1	Sill protection	Tröskelskydd	5
0500	1	*97 94 454*		580,44) RH NLS	1	Sill protection	Tröskelskydd	5

44. Ch. --F4002625
45. Ch. F4002626--
302. AIR-BAG
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
630. Superseded by 96 56 539 and 96 56 695. Ersatt av 96 56 539 och 96 56 695.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J10

Scuff plate protector

Tröskelskydd

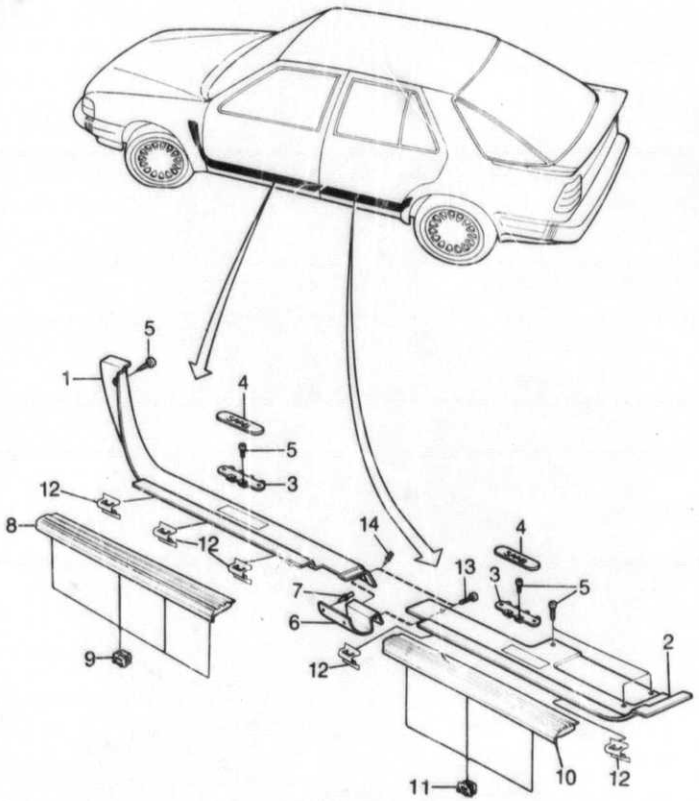

F0803 - 9000

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	1	96 56 570		580,45)-1987, LH	1	Sill protection	Tröskelskydd	5
0520	1	*96 75 752*		580), 1988-, LH NLS - USE 9675760	1	Sill protection	Tröskelskydd	5
0530	1	95 85 746		580,302), LH	1	Sill protection	Tröskelskydd	5
0540	1	*96 56 588*		580,45)-1987, RH NLS	1	Sill protection	Tröskelskydd	5
0550	1	95 72 397		580), 1988-, RH, BLUE	1	Sill protection	Tröskelskydd	5
0560								
0570	1	*97 94 462*		580,44), LH, RHD NLS	1	Sill protection	Tröskelskydd	5
0580	1	*97 94 470*		580,44) RH, RHD NLS	1	Sill protection	Tröskelskydd	5
0590	1	*96 56 612*		580,45)-1987 LH, RHD NLS	1	Sill protection	Tröskelskydd	5
0600	1	96 75 760		580), 1988-, LH, RHD	1	Sill protection	Tröskelskydd	5
0610	1	*96 56 620*		580,45)-1987 RH, RHD NLS	1	Sill protection	Tröskelskydd	5
0620	1	95 72 405		580), 1988-, RH, RHD	1	Sill protection	Tröskelskydd	5
0630								
0640	1	97 98 042		610), 1986-1987, LH	1	Sill protection	Tröskelskydd	5
0650	1	*96 75 737*		610), 1988-, LH NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0660	1	95 85 738		610,302), LH	1	Sill protection	Tröskelskydd	5
0670	1	96 97 616		610), 1986-, RH(9798059)	1	Sill protection	Tröskelskydd	5
0680								
0690	1	97 98 125		610), 1986-1987, LH, RHD	1	Sill protection	Tröskelskydd	5
0700	1	*96 75 745*		610), 1988-, LH, RHD NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0710	1	*97 98 133*		610), 1986-1987, RH, RHD NLS - USE 9697616	1	Sill protection	Tröskelskydd	5
0720	1	*96 97 624*		610), 1988-, RH, RHD NLS - USE 9697616	1	Sill protection	Tröskelskydd	5
0730								
0740	2	*97 95 055*		560,44) LH NLS	1	Sill protection	Tröskelskydd	5
0750	2	*97 95 063*		560,44) RH NLS - USE 9656661	1	Sill protection	Tröskelskydd	5
0760	2	96 56 653		560,45) LH	1	Sill protection	Tröskelskydd	5
0770	2	96 56 661		560,45) RH	1	Sill protection	Tröskelskydd	5
0780								
0790	2	*97 95 071*		590,44) LH NLS	1	Sill protection	Tröskelskydd	5
0800	2	*97 95 089*		590,44) RH NLS	1	Sill protection	Tröskelskydd	5
0810	2	96 56 695		590,45) -1986, LH	1	Sill protection	Tröskelskydd	5
0820	2	96 66 454		590), 1987-1988, LH	1	Sill protection	Tröskelskydd	5
0830	2	95 81 174		590,500), 1989-, LH	1	Sill protection	Tröskelskydd	5
0840	2	96 56 703		590,45) -1986, RH	1	Sill protection	Tröskelskydd	5
0850	2	96 66 462		590), 1987-1988, RH	1	Sill protection	Tröskelskydd	5
0860	2	95 81 182		590,500), 1989-, RH	1	Sill protection	Tröskelskydd	5
0870								
0880	2	97 98 166		600), 1987-, LH	1	Sill protection	Tröskelskydd	5
0890	2	97 98 174		600), 1987-, RH	1	Sill protection	Tröskelskydd	5
0900								
0910	2	*97 95 097*		580,44) LH NLS	1	Sill protection	Tröskelskydd	5
0920	2	*97 95 105*		580,44) RH NLS	1	Sill protection	Tröskelskydd	5
0930	2	96 56 737		580,45)-1987, LH	1	Sill protection	Tröskelskydd	5
0940	2	96 75 919		580), 1988-, LH	1	Sill protection	Tröskelskydd	5
0950	2	*96 56 745*		580,45)-1987, RH NLS	1	Sill protection	Tröskelskydd	5
0960	2	96 75 927		580), 1988-, RH	1	Sill protection	Tröskelskydd	5
0970								
0980	2	97 98 208		610), 1986-, LH	1	Sill protection	Tröskelskydd	5

44. Ch. -F4002625
45. Ch. F4002626-
302. AIR-BAG
500. Also valid for SE 1988B. Gäller även för SE 1968B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J12

Scuff plate protector

Tröskelskydd

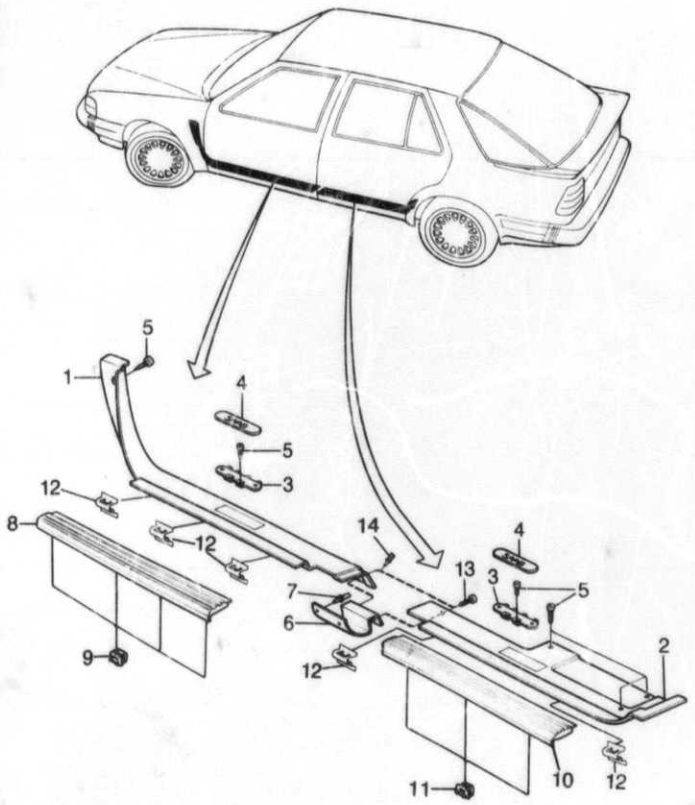

F0803 - 9000

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0990	2	97 98 216		610), 1986-, RH	1	Sill protection	Tröskelskydd	5
1000								
1010	3	97 67 641		-1987	4	Plate	Plåt	6
1020	3	96 72 262		1988-, LH	1	Plate	Plåt	6
1030						front	främre	
1040	3	97 67 641		1988-, RH	1	Plate	Plåt	6
1050						front	främre	
1060	3	97 67 641		1988-	2	Plate	Plåt	6
1070						rear	bakre	
1080	4	95 71 548		560), -1985 (9772583)	4	Cover	Täcklock	6
1090	4	*96 56 778*		560), 1986-1987 NLS - USE 9571548	4	Cover	Täcklock	6
1100	4	95 71 548		560), 1988-	4	Cover	Täcklock	6
1110	4	*97 72 591*		590), -1985 NLS	4	Cover	Täcklock	6
1120	4	96 56 786		590), 1986	4	Cover	Täcklock	6
1130	4	96 64 459		590), 1987	4	Cover	Täcklock	6
1140	4	95 71 555		590), 1988	4	Cover	Täcklock	6
1150	4	95 81 000		590,500), 1989-	4	Cover	Täcklock	6
1160	4	*97 72 609*		580), -1985 NLS	4	Cover	Täcklock	6
1170	4	96 56 794		580), 1986-1987	4	Cover	Täcklock	6
1180	4	95 72 439		580), 1988-	4	Cover	Täcklock	6
1190	4	97 98 257		610), -1987	4	Cover	Täcklock	6
1200	4	95 71 563		610), 1988-	4	Cover	Täcklock	6
1210	4	*97 98 240*		600), 1987 NLS - USE 9571530	4	Cover	Täcklock	6
1220	4	95 71 530		600), 1988-	4	Cover	Täcklock	6
1230	5	79 77 366			12	Screw	Skruv	5
1240	6	97 65 181			2	Bracket	Fäste	5
1250	7	79 77 804		(7961634)	4	Rivet	Nit	5
1260	8	*97 70 280*		NLS - USE 4048955	2	Sill protection	Tröskelskydd	5
1270	9	97 83 531			8	▪Clamp	▪Klämma	5
1280	10	*97 77 665*		LH NLS - USE 4048989	1	Sill protection	Tröskelskydd	5
1290	10	*97 70 306*		RH NLS - USE 4048971	1	Sill protection	Tröskelskydd	5
1300	11	97 83 531			6	▪Clamp	▪Klämma	5
1310	12	97 94 504			X	Clamp	Klämma	5
1320	13	*79 65 353*		-1986 NLS - USE 7970601	4	Screw	Skruv	5
1330	13	79 77 366		1987-	4	Screw	Skruv	5
1340	14	92 55 845		479)	4	Rivet	Nit	5


479. Ch. J8001919–
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
580. Blue Blå
590. Yellow Gul
600. Brown Brun
610. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

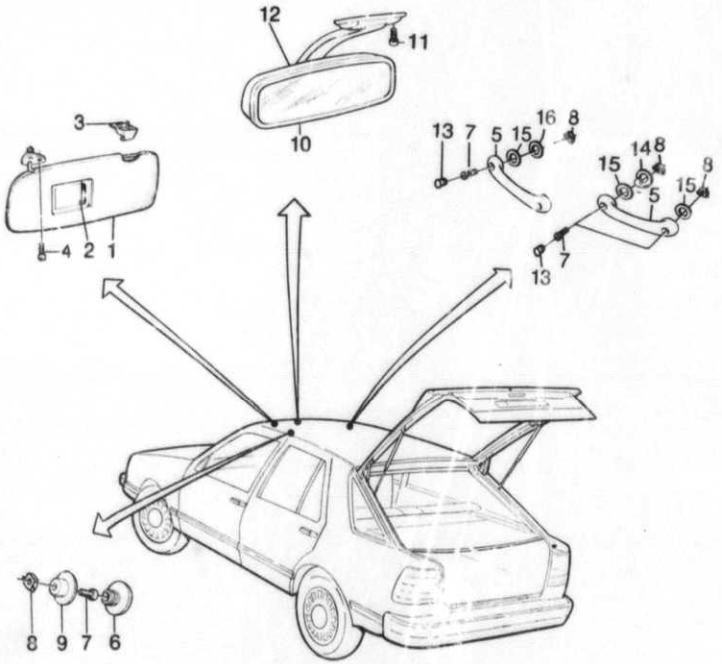

F4141 9000

1620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 70 611		LH	1	Sun visor	Solskydd	5
0020	1	97 70 629		RH	1	Sun visor	Solskydd	5
0030	1	97 70 637		LH	1	Sun visor	Solskydd	5
0040						with mirror	med spegel	
0050	1	*97 70 645*		RH	1	Sun visor	Solskydd	5
0060				NLS - USE 4208280		with mirror	med spegel	
0070	1	95 78 428		500), 1989-, LH	1	Sun visor	Solskydd	5
0080						mirror with light	spegel med belysning	
0090	1	95 78 436		500), 1989-, RH	1	Sun visor	Solskydd	5
0100						mirror with light	spegel med belysning	
0110	2			See page 3A-051, 2-C04		Bulb	Glödlampa	
0120	3	97 70 603			2	Support	Stöd	5
0130	3	95 78 444		500), 1989-	2	Support	Stöd	5
0140						mirror with light	spegel med belysning	
0150	4	79 75 048		-1986	6	Screw	Skruv	5
0160	4	79 73 951		1987-	6	Screw	Skruv	5
0180	5	95 91 405		(9770553)	3	Curve handle	Kurvhandtag	5
0190	6	97 70 561			2	Cover washer	Täckbricka	5
0200	7	80 59 396		1985	8	Screw	Skruv	5
0205	7	80 59 420		1986-	8	Screw	Skruv	5
0210	8	79 74 983			8	Cage nut	Korgmutter	5
0220	9	*97 70 579*		-1988 NLS - USE 4141610	2	Bracket	Fäste	5
0230	9	*95 91 421*		500), 1989- NLS - USE 4141610	2	Bracket	Fäste	5
0250	10	95 91 314		(9770256)	1	Rear view mirror	Backspegel	4
0260	11	79 75 329			3	▪ Screw	▪ Skruv	5
0270	12			See page 3A-051, 2-C04	1	▪ Bulb	▪ Glödlampa	
0280	13	97 70 595			6	Cover	Täcklock	5
0290	14	97 53 724			2	Hook	Krok	5
0300	15	97 82 293			4	Spacer washer	Distansbricka	5
0310	16	80 73 249		1988, SR	8	Washer	Bricka	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J16

Shelf
Hatthylla

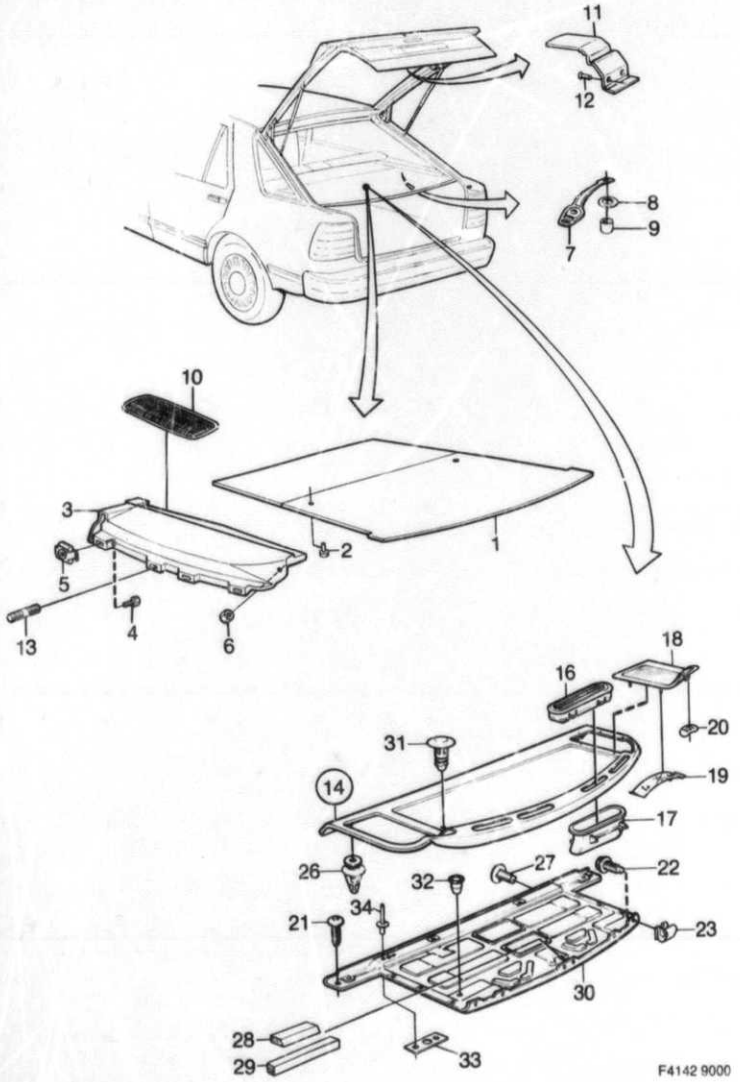

1625	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*98 97 406*		560), -1985 NLS - USE	8	Rear shelf	Hatthylla	
0010				9673732				
0020	1	96 73 732		560), 1986-1987	1	Rear shelf	Hatthylla	5
0030	1	96 90 959		560), 1988-	1	Rear shelf	Hatthylla	5
0050	1	96 73 740		590), -1988 (9897414)	1	Rear shelf	Hatthylla	5
0060	1	95 81 281		500,590), 1989-	1	Rear shelf	Hatthylla	5
0080	1	96 73 765		570), 1986- (9799453)	1	Rear shelf	Hatthylla	5
0090	1	96 73 724		600), 1987-	1	Rear shelf	Hatthylla	5
0110	1	96 73 757		580), -1987 (9897422)	1	Rear shelf	Hatthylla	5
0120	1	96 90 967		580), 1988-	1	Rear shelf	Hatthylla	5
0130	2	96 73 773		(9896788)	2	▪ Set screw	▪ Stoppskruv	5
0140	3	98 97 430		560), -1987, LH	1	Support	Stöd	5
0150	3	95 76 570		560), 1988-, LH	1	Support	Stöd	5
0160	3	98 97 448		560), -1987, RH	1	Support	Stöd	5
0170	3	96 90 983		560), 1988-, RH	1	Support	Stöd	5
0180								
0190	3	*98 97 455*		590), -1987, LH NLS -	1	Support	Stöd	5
0190				USE 9576588				
0200	3	95 76 588		590), 1988, LH	1	Support	Stöd	5
0210	3	95 81 265		500,590), 1989-, LH	1	Support	Stöd	5
0220	3	98 97 463		590), -1988, RH	1	Support	Stöd	5
0230	3	95 81 273		500,590), 1989-, RH	1	Support	Stöd	5
0240								
0260	3	95 76 596		570), 1986-, LH(9799768)	1	Support	Stöd	5
0270	3	97 99 776		570), 1986-, RH	1	Support	Stöd	5
0280								
0290	3	*97 99 743*		600), 1987, LH NLS - USE	1	Support	Stöd	5
0290				9576562				
0300	3	95 76 562		600), 1988-, LH	1	Support	Stöd	5
0310	3	97 99 750		600), 1987-, RH	1	Support	Stöd	5
0320								
0330	3	98 97 471		580), -1987, LH	1	Support	Stöd	5
0340	3	95 76 604		580), 1988-, LH	1	Support	Stöd	5
0350	3	*98 97 489*		580), -1987, RH NLS	1	Support	Stöd	5
0360	3	96 91 007		580), 1988-, RH	1	Support	Stöd	5
0370	4	79 69 223		80)	10	Screw	Skruv	5
0380	4	82 86 296		81,148)	6	Screw	Skruv	5
0390	4	*79 75 170*		149) NLS - USE 7982366	8	Screw	Skruv	5
0400	5	79 74 728			10	Cage nut	Korgmutter	5
0410	6	79 71 658		80)	2	Nut	Mutter	5
0420	6	79 71 658		81)	6	Nut	Mutter	5
0430	7	84 67 409			1	Strap	Stropp	5
0440	8	97 94 520			1	Spring nut	Fjädermutter	5
0450	9	97 96 327		88)	1	Cap	Hatt	6
0460						only cars without	endast bilar utan	
0470						loudspeaker grille	högtalargaller	
0480	10	97 83 002		560), 1986-, LH	1	Loudspeaker grille	Högtalargaller	5
0490	10	97 83 010		560), 1986-, RH	1	Loudspeaker grille	Högtalargaller	5
0500	10	*97 83 028*		590), 1986, LH NLS	1	Loudspeaker grille	Högtalargaller	5
0510	10	*97 83 036*		590), 1986, RH NLS	1	Loudspeaker grille	Högtalargaller	5
0520	10	96 70 456		590), 1987-1988, LH	1	Loudspeaker grille	Högtalargaller	5
0530	10	95 81 331		500,590), 1989-, LH	1	Loudspeaker grille	Högtalargaller	5

80. Ch. --G1002494
81. Ch. G1002495--
88. Ch. F4001001--
148. Ch. --H1000674, --H8000005
149. Ch. H1000675--, H8000006--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J18

Shelf
Hatthylla

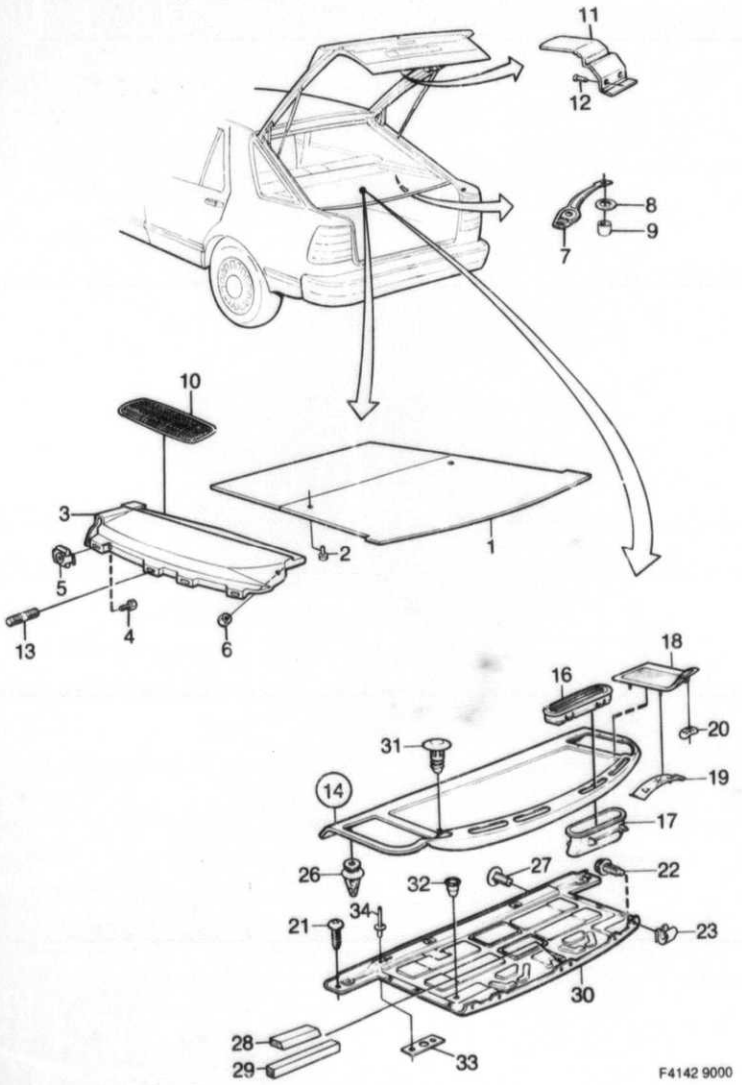

F4142 9000

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	10	96 70 464		590), 1987-1988, RH	1	Loudspeaker grille	Högtalargaller	5
0550	10	95 81 372		500,590), 1989-, RH	1	Loudspeaker grille	Högtalargaller	5
0560	10	97 99 628		570), 1986-, LH	1	Loudspeaker grille	Högtalargaller	5
0570	10	*97 99 636*		570), 1986-, RH NLS - USE 4264461	1	Loudspeaker grille	Högtalargaller	5
0580	10	97 99 602		600), 1987-, LH	1	Loudspeaker grille	Högtalargaller	5
0590	10	97 99 610		600), 1987-, RH	1	Loudspeaker grille	Högtalargaller	5
0600	10	*97 83 044*		580), 1986-1987, LH NLS	1	Loudspeaker grille	Högtalargaller	5
0610	10	96 91 114		580), 1988-, LH	1	Loudspeaker grille	Högtalargaller	5
0620	10	*97 83 051*		580), 1986-1987, RH NLS	1	Loudspeaker grille	Högtalargaller	5
0630	10	96 91 122		580), 1988-, RH	1	Loudspeaker grille	Högtalargaller	5
0640	11	97 97 085		235)	1	Profile	Profil	6
0650	11	97 97 085		236)	2	Profile	Profil	6
0660	12	98 49 514		235)	2	Rivet	Nit	5
0670	12	98 49 514		236)	4	Rivet	Nit	5
0680	13	94 46 881		81)	4	Stud	Pinnskruv	5
0690								
0710	14	95 45 013		590), -1988, 4D(9693862)	1	Rear shelf	Hatthylla	5
0720	14	*95 45 070*		590,500), 1989-, 4D NLS - USE 4044079	1	Rear shelf	Hatthylla	5
0740	14	95 45 039		600), 4D (9693847)	1	Rear shelf	Hatthylla	5
0750	14	40 43 576		560,339), 4D (9693854)	1	Rear shelf	Hatthylla	5
0760	14	95 45 021		560,340), 4D	1	Rear shelf	Hatthylla	5
0770	14	40 43 626		580,339), 4D (9693888)	1	Rear shelf	Hatthylla	5
0780	14	*95 45 054*		580,340), 4D NLS - USE 4043626	1	Rear shelf	Hatthylla	5
0790	14	40 43 899		570,339), 4D (9693870)	1	Rear shelf	Hatthylla	5
0800	14	*95 45 047*		570,340), 4D NLS - USE 4043899	1	Rear shelf	Hatthylla	5
0830	16	96 94 316		590), 1988, 4D	4	.Air outlet	.Luftutsläpp	5
0840	16	95 81 422		590,500), 1989-, 4D	4	.Air outlet	.Luftutsläpp	5
0850	16	96 94 290		600), 4D	4	.Air outlet	.Luftutsläpp	5
0860	16	96 94 308		560), 4D	4	.Air outlet	.Luftutsläpp	5
0870	16	96 94 332		580), 4D	4	.Air outlet	.Luftutsläpp	5
0880	16	96 94 324		570), 4D	4	.Air outlet	.Luftutsläpp	5
0890	17	96 74 896		4D	4	.Air outlet	.Luftutsläpp	5
0900								
0910	18	96 93 987		590), 1988, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
0920	18	95 81 448		590,500), 1989-, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
0930	18	96 93 995		590), 1988, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
0940	18	95 81 430		590,500), 1989-, 4D RH	1	.Loudspeaker grille	.Högtalargaller	5
0950	18	96 93 946		600), 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
0960	18	96 93 953		600), 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
0970	18	96 93 961		560), 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
0980	18	96 93 979		560), 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
0990	18	96 94 027		580), 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1000	18	96 94 035		580), 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1010	18	96 94 001		570), 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1020	18	96 94 019		570), 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1023	19	95 78 246		4D	10	.Clamp	.Klämma	5
1026	20	96 92 724		4D	2	.Clamp	.Klämma	5

81. Ch. G1002495--
235. Ch --H1013083, --H8000473
236. Ch H1013084--, H8000474-
339. Ch --J1017313
340. Ch J1017314--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J20

Shelf
Hatthylla

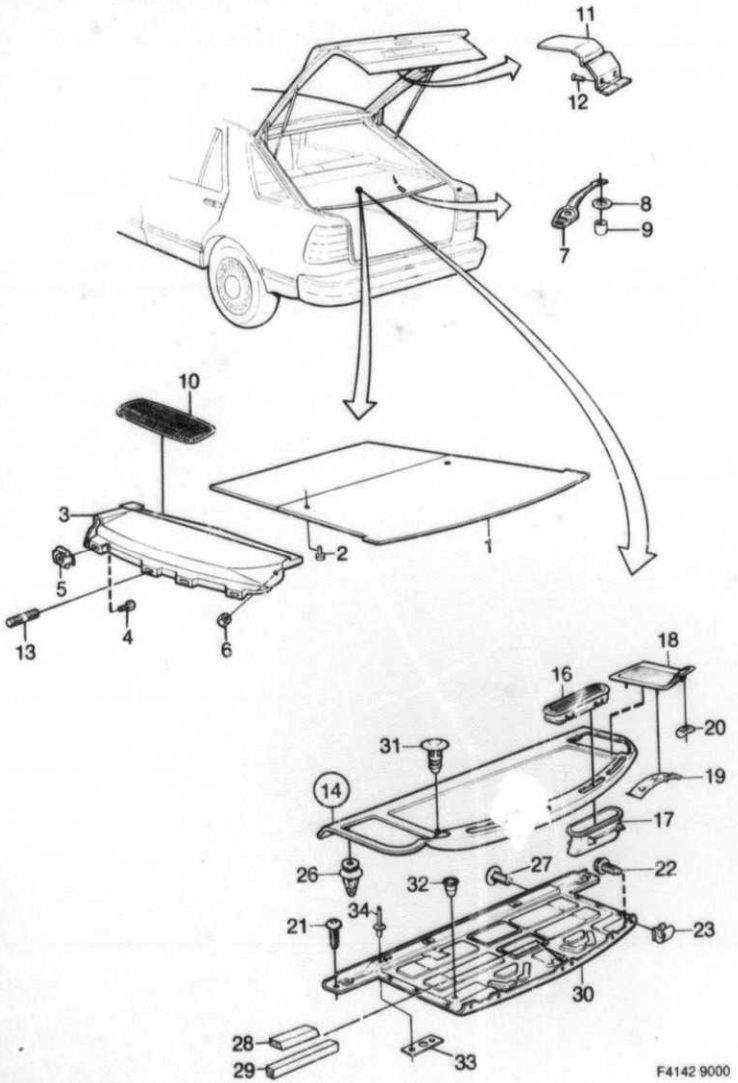

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1030								
1120	21	79 71 294		4D	2	Screw	Skruv	5
1130	22	82 86 296		4D	6	Screw	Skruv	5
1140	23	79 77 895		4D	6	Cage nut	Korgmutter	5
1170	26	95 78 238		4D	4	Clamp	Klämma	5
1180	27	95 91 629		590), 1988, 4D	3	Cover	Täcklock	5
1190	27	95 91 892		590,500), 1989-, 4D	3	Cover	Täcklock	5
1200	27	95 91 603		600), 4D	3	Cover	Täcklock	5
1210	27	95 91 611		560), 4D	3	Cover	Täcklock	5
1220	27	95 91 645		580), 4D	3	Cover	Täcklock	5
1230	27	95 91 637		570), 4D	3	Cover	Täcklock	5
1240	28	40 30 342		424), 4D	1	Seal	Tätning	5
1250	29	40 34 369		424), 4D	1	Seal	Tätning	5
1500	30	96 73 666		4D	1	Support	Stöd	5
1510	31	95 83 188		590), 1988, 4D	2	Plug	Plugg	5
1520	31	95 83 576		590,500), 1989-, 4D	2	Plug	Plugg	5
1530	31	95 83 162		600), 4D	2	Plug	Plugg	5
1540	31	95 83 170		560), 4D	2	Plug	Plugg	5
1550	31	95 83 204		580), 4D	2	Plug	Plugg	5
1560	31	95 83 196		570), 4D	2	Plug	Plugg	5
1600	32	95 80 275		4D	2	Sleeve	Hylsa	5
1610	33	95 83 790		CA	3	Nut plate	Mutterplatta	5
1620	33	96 53 502		AU	3	Nut plate	Mutterplatta	5
1630	34	79 72 490		CA, AU	6	Rivet	Nit	5

424. For cars with high mounted stop light För bilar med högt monterat bromsljus
500. Also valid for SE 1988B. Gäller även för SE 1988B.
560. Red Röd
570. Grey Grå
580. Blue Blå
590. Yellow Gul
600. Brown Brun

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrumont panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J22

Safety belt, front seat
Bilbälte framsäte

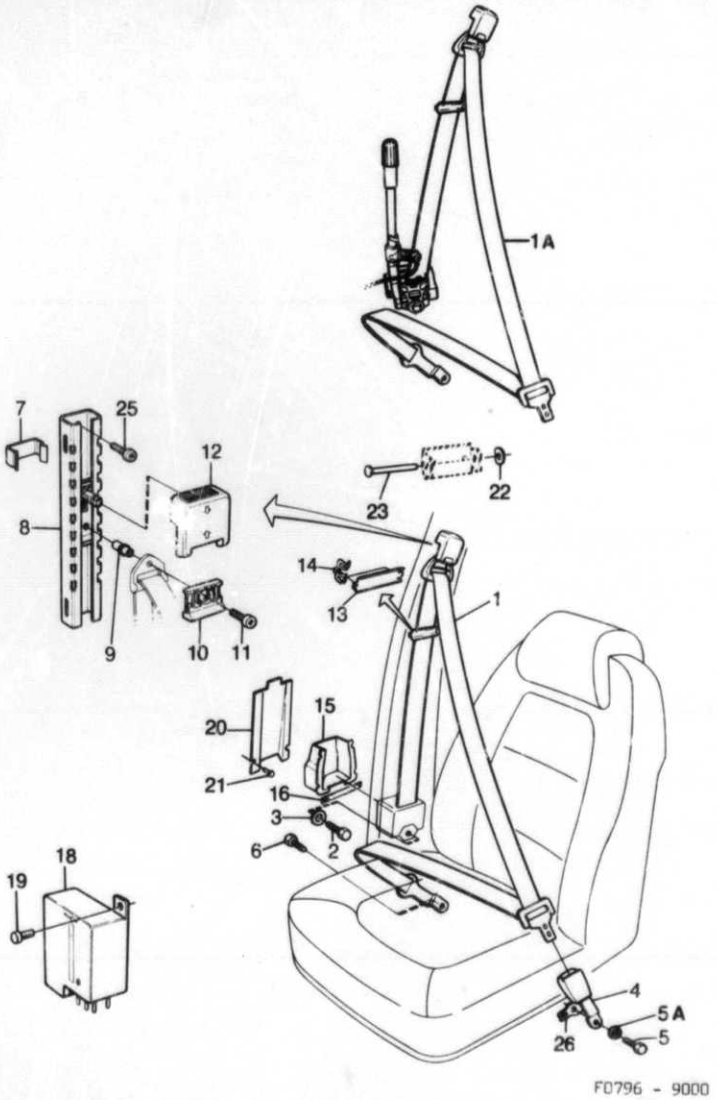

F0796 - 9000

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 78 327		-1985, LH (9788803)	1	Seat belt	Säkerhetsbälte	5
0020	1	96 78 335		-1985, RH (9788811)	1	Seat belt	Säkerhetsbälte	5
0030	1	98 96 218		1986, LH	1	Seat belt	Säkerhetsbälte	5
0040	1	*98 96 226*		1986, RH NLS - USE 9678335	1	Seat belt	Säkerhetsbälte	5
0050	1	96 78 327		1987-,467) LH	1	Seat belt	Säkerhetsbälte	5
0060	1	96 78 335		1987-,467) RH	1	Seat belt	Säkerhetsbälte	5
0070	1	*40 32 470*		468) LH NLS - USE 4080859	1	Seat belt	Säkerhetsbälte	5
0080	1	*40 32 470*		468), LH, US, AIRBAG NLS - USE 4080859	1	Seat belt	Säkerhetsbälte	5
0090	1	*40 32 488*		468) RH NLS - USE 4080867	1	Seat belt	Säkerhetsbälte	5
0100	1	95 73 759		467) LH, US, AIRBAG	1	Seat belt	Säkerhetsbälte	5
0110						Superseded by 4032470	Ersatt av 4032470	
0120	1	95 46 912		1989-,467,393,500), LH US, AIRBAG	1	Seat belt	Säkerhetsbälte	5
0140	1	95 46 870		1989-,467,393,500) LH, NOT US	1	Seat belt	Säkerhetsbälte	5
0160	1	95 46 888		1989-,467,393,500) RH, NOT US	1	Seat belt	Säkerhetsbälte	5
0180	1	*40 32 546*		468,393) LH, ALSO FOR NLS - USE 4080875	1	Seat belt	Säkerhetsbälte	5
0190	1	*40 32 546*		468,393), LH, US, AIRBAG NLS - USE 4080875	1	Seat belt	Säkerhetsbälte	5
0200	1	40 32 553		468,393) RH, NOT US	1	Seat belt	Säkerhetsbälte	5
0220	1A	95 83 600		533,467) LH	1	Seat belt	Säkerhetsbälte	5
0230	1A	95 83 618		533,467) RH	1	Seat belt	Säkerhetsbälte	5
0240	1A	*40 32 496*		533,468) LH NLS - USE 4080891	1	Seat belt	Säkerhetsbälte	5
0250	1A	*40 32 504*		533,468) RH NLS - USE 4080909	1	Seat belt	Säkerhetsbälte	5
0260	1A	*96 58 535*		533,117,613,629) LH NLS - USE 9672569, 9673294, 9673385	1	Seat belt	Säkerhetsbälte	5
0270	1A	*96 58 543*		533,117,613) RH NLS - USE 9672569, 9673302, 9673385	1	Seat belt	Säkerhetsbälte	5
0280	1A	96 73 294		533,118,467,613) LH	1	Seat belt	Säkerhetsbälte	5
0290	1A	96 73 302		533,118,467,613) RH	1	Seat belt	Säkerhetsbälte	5
0300	1A	40 32 520		533,468,613) LH	1	Seat belt	Säkerhetsbälte	5
0310	1A	*40 32 538*		533,468,613) RH NLS - USE 4288221	1	Seat belt	Säkerhetsbälte	5
0320	1A	*40 32 561*		533,393,500)1989- LH, EU NLS - USE 4080917	1	Seat belt	Säkerhetsbälte	5
0330	1A	*40 32 579*		533,393,500)1989- RH, EU NLS - USE 4080925	1	Seat belt	Säkerhetsbälte	5
0340	1A	95 46 920		533,467,393,613)1989- LH	1	Seat belt	Säkerhetsbälte	5
0350	1A	95 46 938		533,467,393,613)1989- RH	1	Seat belt	Säkerhetsbälte	5
0360	1A	*40 32 595*		533,468,393,613) LH NLS - USE 4288197	1	Seat belt	Säkerhetsbälte	5

117. Ch. --G1000349
118. Ch. G1000350--
393. For cars with electrically adjustable seats För bilar med elmanövrerade stolar
467. Ch. --K1011062, --K2005656, --K8000364
468. Ch. K1011063--, K2005657--, K8000365--
500. Also valid for SE 1988B. Gäller även för SE 1988B.
533. With tensioner Med sträckare
613. Only for cars that will be repaired in USA Endast för bilar som repareras i USA
629. Superseded by 96 73 294, 96 72 569 and 96 73 385. Ersatt av 96 73 294, 96 72 569 och 96 73 385.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-J24

Safety belt, front seat
Bilbälte framsäte

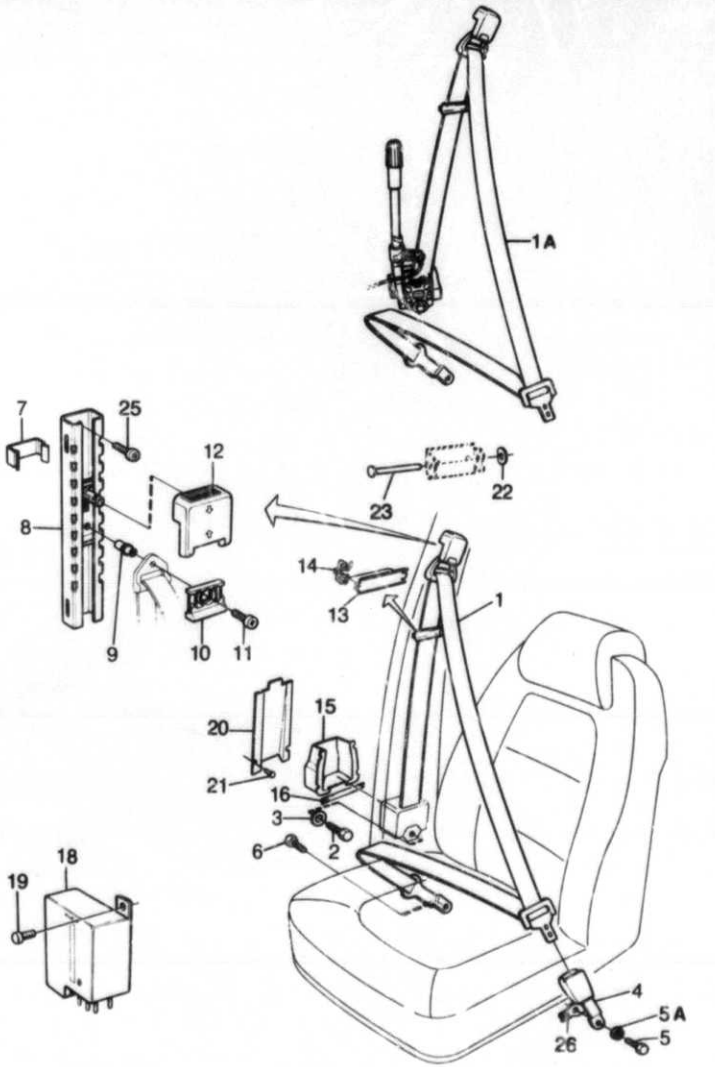

F0796 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1A	*40 32 603*		533,468,393,613) RH NLS - USE 4288205	1	Seat belt	Säkerhetsbälte	5
2	84 99 204		1988-	2	.Screw	.Skruv	5
3	98 92 399		1986-	2	.Lock washer	.Låsbricka	5
4	95 82 933		467)(9660200,9697814, 9787581)	2	Belt catch	Bältlås	5
4	95 82 925		467,534), RH (9660218,9697822)	1	Belt catch	Bältlås	5
4	40 32 439		468)	2	Belt catch	Bältlås	5
4	*40 32 447*		534,468,482) RH NLS - USE 4032439	1	Belt catch	Bältlås	5
4	40 32 439		483) RH	1	Belt catch	Bältlås	5
4	40 32 454		1989-,467,393,500,534) SE, FI, EU, GB,	2	Belt catch	Bältlås	5
4	40 30 278		1989-,467,393)	2	Belt catch	Bältlås	5
4	40 30 284		1989-,467,393,534) RH	1	Belt catch	Bältlås	5
4	40 32 454		468,393)	2	Belt catch	Bältlås	5
4	*40 32 462*		534,468,393,482) RH NLS - USE 4032454	1	Belt catch	Bältlås	5
4	40 32 454		393,483) RH	1	Belt catch	Bältlås	5
5	96 72 791		(9763954)	2	.Screw	.Skruv	5
5	95 86 827		393)	2	.Screw	.Skruv	5
5A	95 48 058		393)	2	.Spacer sleeve	.Distanshylsa	5
6	84 99 204			2	Screw	Skruv	5
6	95 44 818		393)	2	Screw	Skruv	5
7	97 71 429			4	Clamp	Klämma	5
8	95 47 696		117) (9764192)	2	Height adjustment	Höjdjustering	6
8	*96 73 393*		118) NLS - USE 9547696	2	Height adjustment	Höjdjustering	6
9	97 63 392		117)	2	Spacer sleeve	Distanshylsa	5
9	96 72 569		118)	2	Spacer sleeve	Distanshylsa	5
10	*97 80 867*		354) NLS - USE 9694951	2	Push button	Tryckknapp	6
10	96 94 951		355)	2	Push button	Tryckknapp	6
11	97 64 366		117)	2	Screw	Skruv	5
11	96 73 385		118)	2	Screw	Skruv	5
12	97 64 457			2	Cover	Kåpa	6
13	*97 64 465*		-1985 NLS	2	Guide	Styrning	6
13	92 76 262		1986-,294)	2	Guide	Styrning	5
14	92 77 732		1986	2	Clamp	Klämma	5
14	96 94 936		1987-,294)	2	Clamp	Klämma	5
15	96 57 149			2	Protecting casing	Skyddskåpa	4
16	97 91 070			2	Seal	Tätning	5
18	*98 90 674*		533), 1986- NLS - USE 4313722	1	Sensor	Givare	5
19	*79 67 771*		533), 1986- NLS - USE 7970601	2	Screw	Skruv	5
20	96 57 156		1986-	2	Protecting casing	Skyddskåpa	6
21	73 98 845		1986-	4	Rivet	Nit	5
22	79 77 937		1987-,268)	2	Washer	Bricka	5

117. Ch. --G1000349
118. Ch. G1000350--
268. Ch. --H1032962, --H8001959
294. Ch. --H8001920, BODY --6331234
354. Ch. --H1022896, --J8001161
355. Ch. H1022897--, J8001162--
393. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
467. Ch. --K1011062, --K2005656, --K8000364
468. Ch. K1011063--, K2005657--, K8000365--
482. Ch. --K1019437, --K1021088, --K8000457
483. Ch. K1019438--, K2011089--, K8000458--
500. Also valid for SE 1988B. — Gäller även för SE 1988B.
533. With tensioner — Med sträckare
534. Without belt warning. — Utan bältesvarning.
613. Only for cars that will be repaired in US \ — Endast för bilar som repareras i USA

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


2B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K04

5-K02

Safety belt, front seat

Bilbälte framsäte

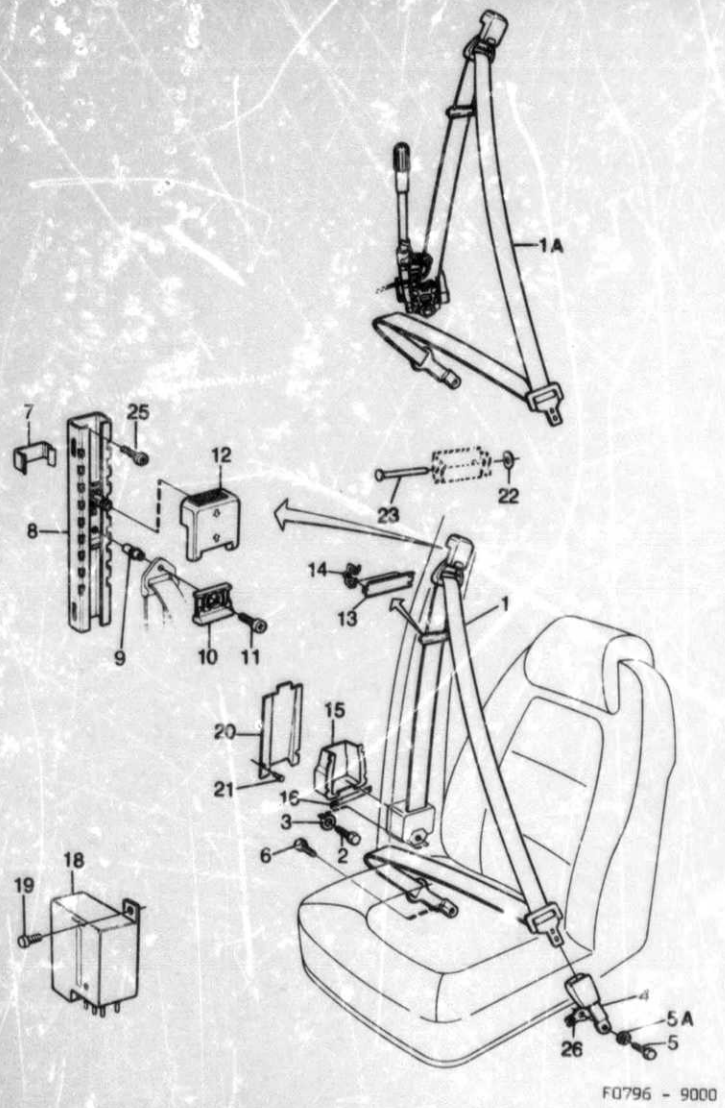

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0800	22	79 79 651		269)	2	Washer	Bricka	5
0810	23	96 92 815		1987-	2	Pin	Pinne	5
0820	25	97 94 132			4	Screw	Skruv	5
0830	26	95 92 197		440,393)	2	Reinforcement	Förstärkning	6
0840	26	40 42 974		441,393)	2	Reinforcement	Förstärkning	6

269. Ch. H1032963--, H8001960--
393. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
440. Ch. --K1000574, --K2000361
441. Ch. K1000675--, K2000362--

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

5-K04

Safety belt, rear seat

Bilbälte, baksäte

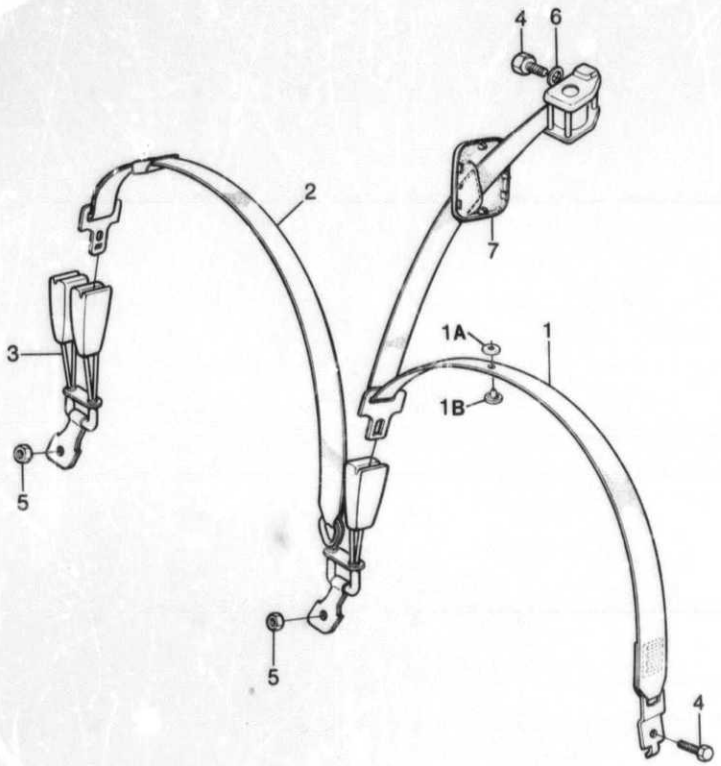

F7146 9000

1700	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		97 88 829		469) LH	1	Seat belt	Säkerhetsbälte	5
0020	1		*40 32 637*		470) LH NLS - USE 4079679	1	Seat belt	Säkerhetsbälte	5
0030	1		97 88 837		469) RH	1	Seat belt	Säkerhetsbälte	5
0040	1		*40 32 645*		470) RH NLS - USE 4079687	1	Seat belt	Säkerhetsbälte	5
0050	1		96 75 935		469) LH, 4D	1	Seat belt	Säkerhetsbälte	5
0060	1		*40 32 652*		470) LH, 4D NLS - USE 4079695	1	Seat belt	Säkerhetsbälte	5
0070	1		96 75 943		469) RH, 4D	1	Seat belt	Säkerhetsbälte	5
0080	1		*40 32 660*		470) RH, 4D NLS - USE 4079703	1	Seat belt	Säkerhetsbälte	5
0090	1A	•	96 17 846		470)	1	•Button	•Knapp	5
0100	1B	•	96 17 853		470)	1	•Button	•Knapp	5
0150	2		95 83 907		1987-,469) LH (9787573, (9660952,9570953)	1	Seat belt	Säkerhetsbälte	5
0151									
0162	2		40 32 629		470) LH	1	Seat belt	Säkerhetsbälte	5
0170	3		*97 87 599*		-1985 NLS	1	Belt catch	Bältlås	5
0180	3		96 60 945		1986	1	Belt catch	Bältlås	5
0190	3		96 97 798		1987	1	Belt catch	Bältlås	5
0200	3		95 83 899		1988-,469)	1	Belt catch	Bältlås	5
0202	3		40 32 611		470)	1	Belt catch	Bältlås	5
0210	4		84 99 204			4	Screw	Skruv	5
0220	5		79 18 725		-1988	2	Lock nut	Låsmutter	5
0222	5		73 99 793		1989-,500)	2	Lock nut	Låsmutter	5
0230	6		79 77 507			4	Washer	Bricka	5
0240	7				LH AND RH		Grommet	Genomföring	
0250					See page 8B-165, 5-G22				

469. Ch. -K1011062, -K2005656, -K8000366
470. Ch. K1011063-, K2005657-, K8000367-
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Complete set
5-K06
Car body, internal

Satser
Kaross, invändig

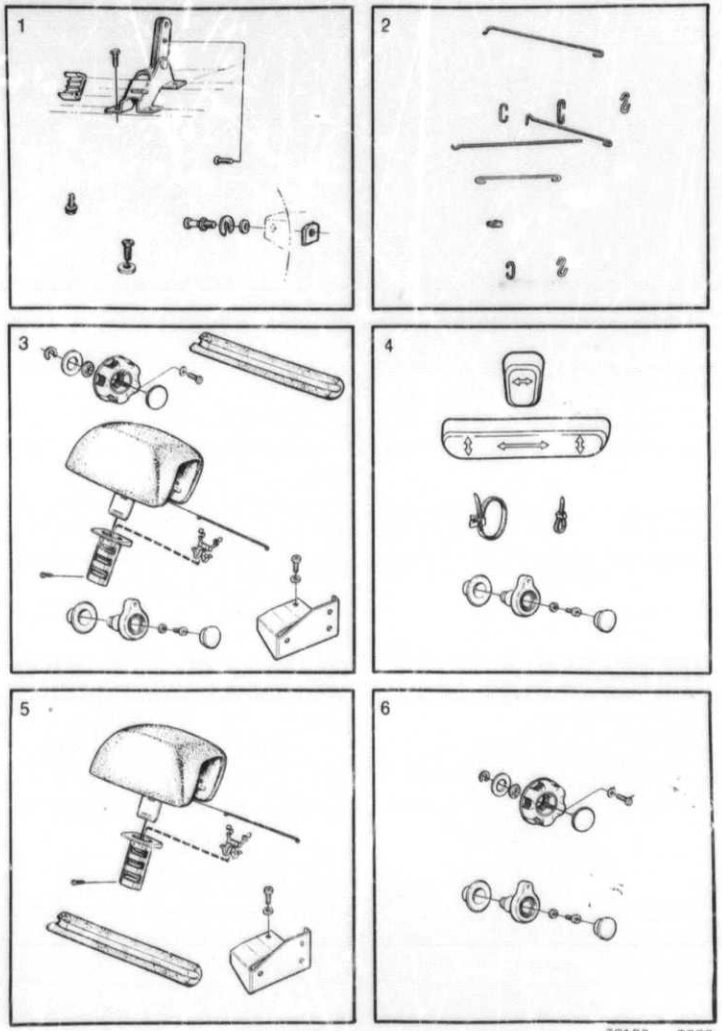

F0138 - 9000

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 72 668			1	Mounting kit rear seat	Monteringssats baksäte	6
0030		79 16 497			2	.Washer	.Bricka	5
0040		79 75 212			2	.Screw	.Skruv	5
0050		79 81 921			4	.Screw	.Skruv	5
0060		80 59 552			4	.Screw	.Skruv	5
0070		83 11 904			2	.Washer	.Bricka	5
0080		96 71 025			4	.Lock pin	.Låspinne	5
0090		97 61 974			1	.Joint	.Led	5
0100		97 65 272			2	.Nut plate	.Mutterplatta	5
0110		97 78 952			8	.Screw	.Skruv	5
0120		*97 89 090*		NLS - USE 4288189	2	.Washer	.Bricka	6
0130		97 89 769			1	.Plastic buffer	.Plastbuffert	5
0140		97 91 971			2	.Washer	.Bricka	5
0150								
0160	2	96 76 818		261)	2	Mounting kit	Monteringssats	6
0170		96 71 041			1	.Wire rod	.Trådten	5
0180		96 92 906			1	.Wire rod	.Trådten	5
0190		97 21 481			1	.Wire rod	.Trådten	5
0200		97 21 499			2	.Wire rod	.Trådten	5
0210		97 69 209			4	.Hook	.Krok	5
0220		97 69 217			7	.Hook	.Krok	5
0230		97 69 225			4	.Hook	.Krok	5
0240		97 82 558			1	.Cover rod	.Klädselbåge	5
0250		97 83 408			2	.Attaching brace	.Fästbygel	5
0260								
0270	2	96 71 751		261) 1988-	2	Mounting kit front seat	Monteringssats framstol	6
0290		97 81 592			2	.Cover rod	.Klädselbåge	5
0300		94 50 685			6	.Clamp	.Klammer	5
0310		97 69 209			2	.Hook	.Krok	5
0320								
0330	2	96 97 939		231) 1988-	2	Mounting kit front seat	Monteringssats framstol	6
0350		95 47 332			1	.Cover rod	.Klädselbåge	5
0360		96 94 969		1)	2	.Wire rod	.Trådten	5
0370		94 50 685			6	.Clamp	.Klammer	5
0380		95 84 715		1)	2	.Wire rod	.Trådten	5
0350		97 69 217			6	.Hook	.Krok	5
0400		97 81 592			2	.Cover rod	.Klädselbåge	5
0410		95 84 723		1)	2	.Wire rod	.Trådten	5
0420		95 93 245			2	.Attaching brace	.Fästbygel	5
0430		97 69 209			6	.Hook	.Krok	5
0440								
0450	3	96 71 744		1988-	2	Mounting kit front seat	Monteringssats framstol	6
0470		80 59 396			2	.Screw	.Skruv	5
0480		97 81 204			4	.Screw	.Skruv	5
0490		80 59 537			2	.Screw	.Skruv	5
0500		79 71 294			2	.Screw	.Skruv	5
0510		79 22 396			1	.Screw	.Skruv	5
0520		79 22 271			1	.Screw	.Skruv	5
0530		79 75 766			2	.Cage nut	.Korgmutter	5
0540		80 29 951			2	.Washer	.Bricka	5
0550		80 29 944			1	.Washer	.Bricka	5
0560		*97 67 815*		NLS - USE 9547688	1	.Head restraint	.Nackstöd	6
0570		97 40 663		1)	2	.Elastic	.Resårband	6
0580		94 59 868			2	.Wire rod	.Trådten	6
0590		40 31 563			1	.Sleeve	.Hylsa	5
0600		95 46 946			1	.Hand wheel	.Ratt	5

1. Not as separate spare part. Ej som separat reservdel.
231. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
261. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

Complete set
5-K08
Car body, internal

Satser
Kaross, invändig

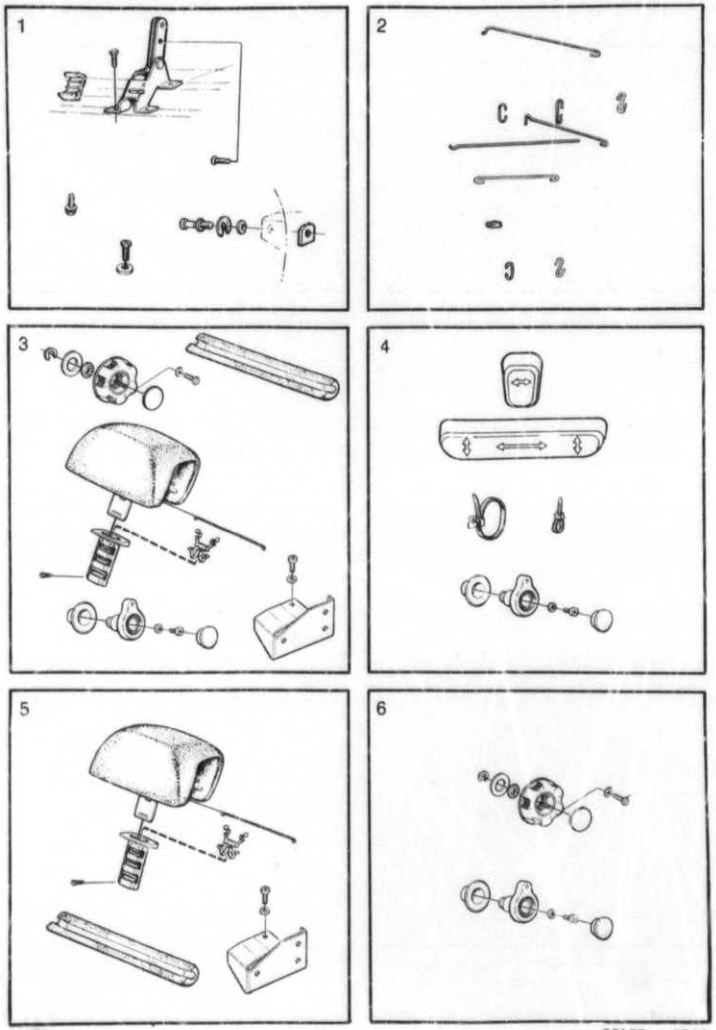

F0138 - 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	95 89 045			1	.Reinforcement	.Förstärkning	5
0620	98 51 619			1	.Cover	.Täcklock	6
0630	98 64 000		1)	1	.Cloth	.Tyg	6
0640	*97 81 162*		LH NLS	1	.Bracket	.Konsol	5
0650	*97 82 210*		RH NLS	1	.Bracket	.Konsol	5
0660	79 74 884			3	.Screw	.Skruv	5
0670	*79 15 077*		NLS - USE 7963143	1	.E-circlip	.Spårryttare	5
0680	79 22 396			1	.Screw	.Skruv	5
0690	97 96 848			1	.Locking spring	.Spärrfjäder	5
0700	97 85 015			1	.Cover washer	.Täckbricka	6
0710	97 63 632			1	.Steering wheel	.Ratt	5
0720	97 63 624			1	.Cover	.Täcklock	6
0730	97 92 391			1	.Crash pad	.Stötskydd	6
0740							
0750	95 86 108		393) 1989-	X	Mounting kit	Monteringssats	6
0760	80 59 396			1	.Screw	.Skruv	5
0770	95 44 818			1	.Screw	.Skruv	5
0780	95 85 423			2	.Screw	.Skruv	5
0790	79 22 354			3	.Screw	.Skruv	5
0800	*79 79 479*		NLS - USE 4134003	2	.Nut	.Mutter	5
0810	80 29 944			1	.Washer	.Bricka	5
0820	97 85 015			1	.Cover washer	.Täckbricka	6
0830	97 63 632			1	.Steering wheel	.Ratt	5
0840	97 63 624			1	.Cover	.Täcklock	6
0850	85 52 663			3	.Tensioning band	.Spännband	5
0860	79 71 872			4	.Tensioning band	.Spännband	5
0870	95 65 003			1	.Button	.Knapp	5
0880	95 65 011			1	.Button	.Knapp	5
0890	95 85 431			2	.Stud	.Pinnskruv	5
0900	40 34 054		LH	1	.Cover	.Kåpa	5
0910	40 34 047		RH	1	.Cover	.Kåpa	5
0920	40 59 671			1	.Stop bracket	.Stoppkonsol	5
0930	40 42 974			1	.Reinforcement	.Förstärkning	6
0940							
0950	5 95 88 542		1989-	2	Mounting kit front seat	Monteringssats framstol	6
0960							
0970	79 22 396			1	.Screw	.Skruv	5
0980	79 75 766			2	.Cage nut	.Korgmutter	5
0990	95 47 688			1	.Head restraint	.Nackstöd	6
1000	97 40 663		1)	2	.Elastic	.Resårband	6
1010	94 59 868			2	.Wire rod	.Trådten	6
1020	40 31 563			1	.Sleeve	.Hylsa	5
1030	*97 81 162*		LH NLS	1	.Bracket	.Konsol	5
1040	*97 82 210*		RH NLS	1	.Bracket	.Konsol	5
1050	79 74 884			3	.Screw	.Skruv	5
1060	97 96 848			1	.Locking spring	.Spärrfjäder	5
1070	98 64 000		1)	1	.Cloth	.Tyg	6
1080	97 92 391			1	.Crash pad	.Stötskydd	6
1090							
1100	6 95 88 559		1989-	X	Mounting kit passenger seat	Monteringssats passagerarstol	6
1110							
1120	97 81 204			4	.Screw	.Skruv	5
1130	79 71 294			2	.Screw	.Skruv	5
1140	80 29 951			3	.Washer	.Bricka	5
1150	95 46 946			1	.Hand wheel	.Ratt	5
1160	95 89 045			1	.Reinforcement	.Förstärkning	5
1170	98 51 619			1	.Cover	.Täcklock	6
1180	80 59 560			1	.Screw	.Skruv	5
1190	84 99 204			1	.Screw	.Skruv	5
1200							

1. Not as separate spare part. Ej som separat reservdel.
393. For cars with electrically adjustable seats För bilar med elmanövrerade stolar

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Complete set


5-K10


Car body, internal


Satser


Kaross, invändig

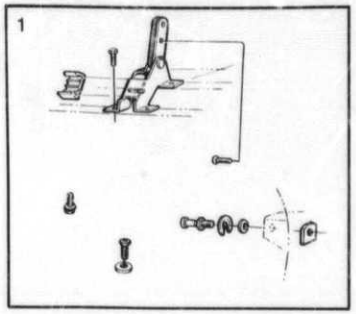


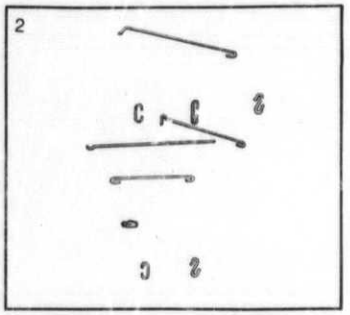

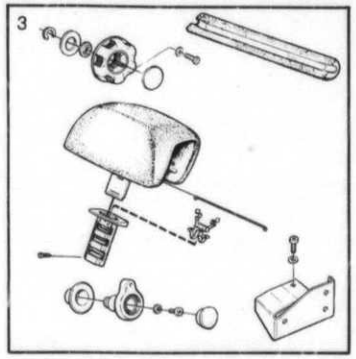

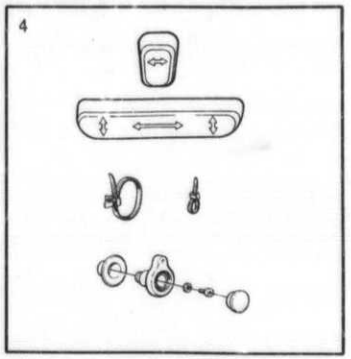

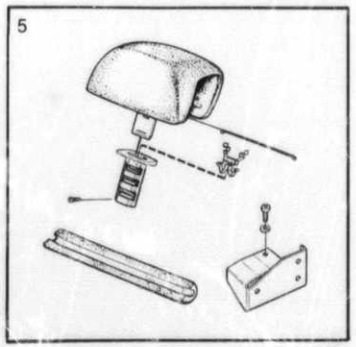

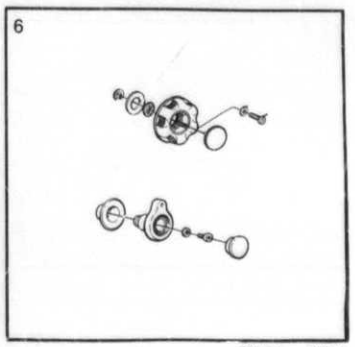

F0138 - 9000

2500 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1210 6	95 88 534		1989-	X	Mounting kit drivers seat	Monteringssats förarstol	6
1230	97 81 204			4	. Screw	. Skruv	5
1240	79 22 354			1	. Screw	. Skruv	5
1250	80 29 951			3	. Washer	. Bricka	5
1260	80 29 944			1	. Washer	. Bricka	5
1270	95 46 946			1	. Hand wheel	. Ratt	5
1280	97 63 632			1	. Steering wheel	. Ratt	5
1290	95 89 045			1	. Reinforcement	. Förstärkning	5
1300	98 51 619			1	. Cover	. Täcklock	6
1310	80 59 560			1	. Screw	. Skruv	5
1320	84 99 204			1	. Screw	. Skruv	5
1330	80 59 396			1	. Screw	. Skruv	5
1340	80 59 537			2	. Screw	. Skruv	5
1350	97 63 624			1	. Cover	. Täcklock	6
1360	97 85 015			1	. Cover washer	. Täckbricka	6

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Complete set


5-K12


Car body, internal


Satser


Kaross, invändig

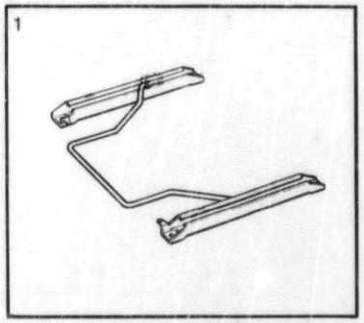


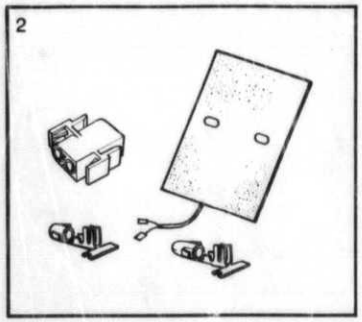

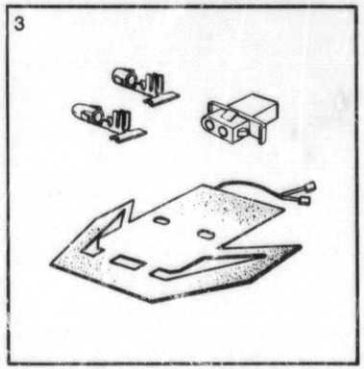

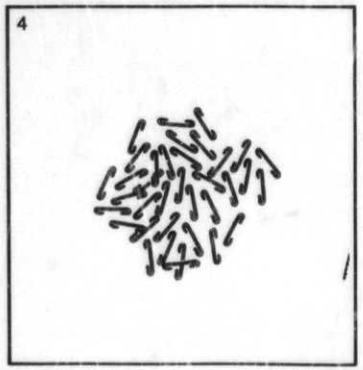

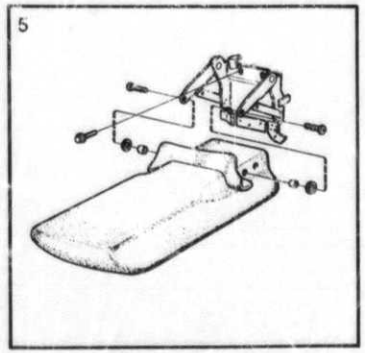

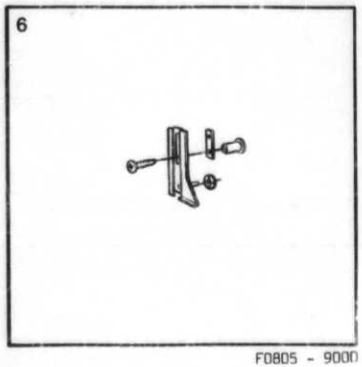

F0805 - 9000

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 98 259			X	Rail kit ...	Skensats ...	6
0020						passenger seat	passagerarstol	
0030		96 59 020			1	.Shaft ...	.Axel ...	6
0040		96 94 894		LH	1	.Seat rail ...	.Stolskena ...	6
0050		96 94 902		RH	1	.Seat rail ...	.Stolskena ...	6
0060								
0070	2	85 47 523		167)	X	Heating element kit ...	Värmedynesats ...	9
0080						backrest cushion	ryggdyna	
0090		*85 44 298*		NLS - USE 8582595	2	.Cable terminal ...	.Kabelsko ...	5
0100		85 61 631			1	.Connector housing ...	.Skarvhus ...	4
0110		95 69 955			1	.Heating pad ...	.Värmedyna ...	4
0120								
0130	3	85 47 507		1986 ...	X	Heating element kit ...	Värmedynesats ...	9
0140						seat cushion	sittdyna	
0150		*85 44 314*		NLS - USE 8582603 ...	2	.Cable terminal ...	.Kabelsko ...	5
0160		85 61 623			1	.Contact housing ...	.Kontakthus ...	4
0170		*95 27 698*		NLS - USE 4063848 ...	1	.Heating pad ...	.Värmedyna ...	4
0180								
0190	3	85 47 515		1987-,167) ...	X	Heating element kit ...	Värmedynesats ...	9
0200						seat cushion	sittdyna	
0210		• 85 82 603			2	.Cable terminal ...	.Kabelsko ...	5
0220		85 61 623			1	.Contact housing ...	.Kontakthus ...	4
0230		*95 27 706*		NLS - USE 4063855 ...	1	.Heating pad ...	.Värmedyna ...	4
0240								
0250	4	*97 46 736*		NLS ...	X	Clamp kit ...	Klammersats ...	
0260		*98 49 498*		1) NLS - USE 9450685 ...	100	.Clamp ...	.Klammer ...	5
0270								
0280	5	96 72 650			1	Arm rest ...	Armstöd ...	6
0290		79 72 607			4	.Screw ...	.Skruv ...	5
0300		84 57 541			4	.Washer ...	.Bricka ...	5
0310		84 58 598			4	.Sleeve ...	.Hylsa ...	5
0320		94 45 909			1	.Clamp ...	.Trådbygel ...	6
0330		*94 91 325*		NLS - USE 4055133 ...	4	.Screw ...	.Skruv ...	5
0340		97 81 337			1	.Cushion ...	.Kudde ...	6
0350		95 93 945			1	.Bracket ...	.Konsol ...	6
0360								
0370	6	96 98 309			X	Adjusting kit ...	Justersats ...	4
0380						glove compartment lid	handsfacklucka	
0390		*95 71 027*		LH NLS - USE 4030201 ...	1	.Hinge ...	.Gångjärn ...	4
0400		*95 71 035*		RH NLS - USE 4030219 ...	1	.Hinge ...	.Gångjärn ...	4
0410		79 65 809			2	.Clip ...	.Clips ...	5
0420		95 71 084			2	.Nut washer ...	.Mutterbricka ...	5
0430		85 73 677			2	.Hose ...	.Slang ...	5
0440		97 76 006			4	.Screw ...	.Skruv ...	5

1. Not as separate spare part. Ej som separat reservdel.
167. Ch. -H1018516, -H8000780

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06


Complete set

5-K14

Car body, internal

Satser

Kaross, invändig

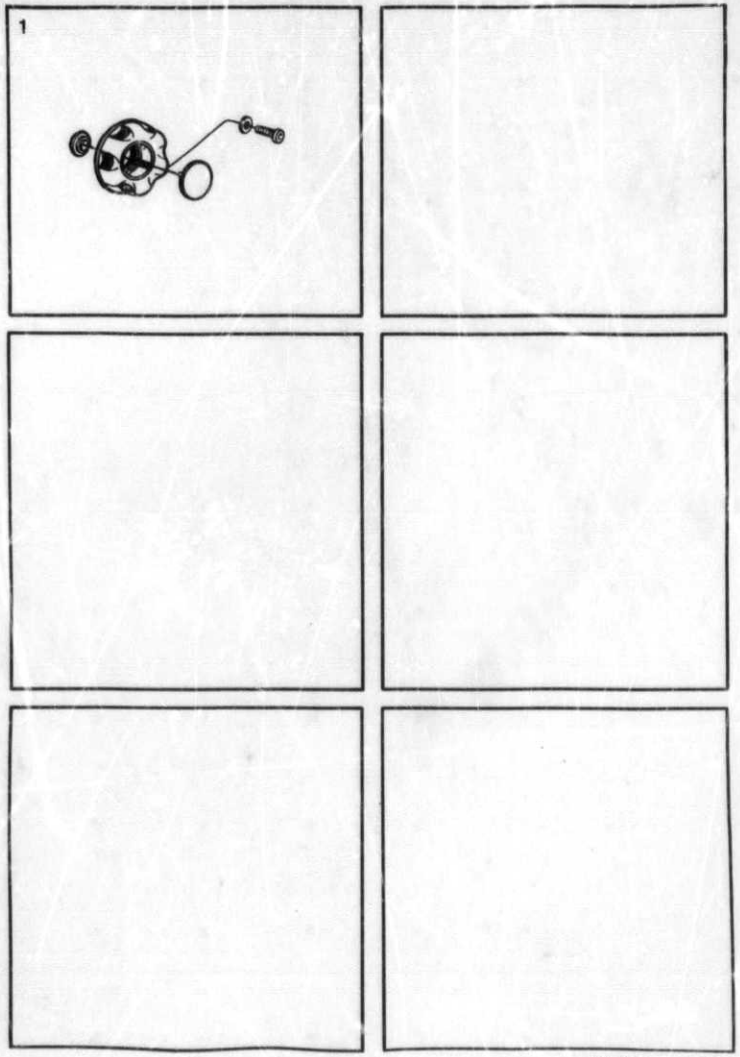

F1907 - 9000

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1010	1	96 18 752			X	Mounting kit	Monteringssats	6
1040		80 29 951			1	.Washer	.Bricka	5
1050		95 46 946			1	.Hand wheel	.Ratt	5
1060		95 89 045			1	.Reinforcement	.Förstärkning	5
1070		98 51 619			1	.Cover	.Täcklock	6
1080		80 59 560			1	.Screw	.Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8B GROUP INDEX

instrument panel	5-A06
Upholstery	5-B08
Other interior equipment	5-H04
Complete sets:	5-K06

8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041
0020
0030
0040
0050
0060
0600
0660
0700
0710
0720
0725
0730
0740
0780
0790

TABLE OF CONTENTS

Heating and ventilation system		
Control panel	8C : 5	6-A06
Heater core, fan unit	8C : 7	6-A08
Heater core, fan unit, servo unit ACC	8C : 9	6-A10
Draft channels	8C : 11	6-A12
Doorfan	8C : 15	6-A16
Air conditioning, compressor part (Cycling clutch)	8C : 17	6-A18
Air conditioning, evaporator part	8C : 21	6-A22
Complete sets		
Car body, heating and ventilation	8C : 27	6-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6--A03

0042
0800
0810
0820
1450
1455
1460
1470
1480
1485
1490
1500
1540
1550
1560
3090
3100
3730
3735
3740
3750
3760
3765
3770
3780
3820
3830

INNEHÅLLSFÖRTECKNING

Värme- och ventilationssystem

Reglagepanel	8C : 5	6-A06
Värmeväxlare, fläktenhet	8C : 7	6-A08
Värmeväxlare, fläktenhet, servoenhet ACC	8C : 9	6-A10
Fördelningskanaler	8C : 11	6-A12
Dörrfläkt	8C : 15	6-A16
Luftkonditionering, kompressordel (cycling clutch)	8C : 17	6-A18
Luftkonditionering, förångardel	8C : 21	6-A22

Satser

Kaross, värme och ventilation	8C : 27	6-B04

SUMARIO

Sistema de calefaccion y ventilacion

Tablero de mandos	8C : 5	6-A06
Cambiador de calor, ventilador de la calefaccion	8C : 7	6-A08
Cambiador de calor, ventilador de la calefaccion, servomecanismo ACC	8C : 9	6-A10
Canales de distribucion	8C : 11	6-A12
Ventilador de la puerta	8C : 15	6-A16
Aire acondicionado, unidad de compresor (cycling clutch)	8C : 17	6-A18
Aire acondicionado, unidad de evaporador	8C : 21	6-A22

Juegos completos

Carosseria, calefaccion y ventilation	8C : 27	6-B04

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A06

Control panel
Reglagepanel

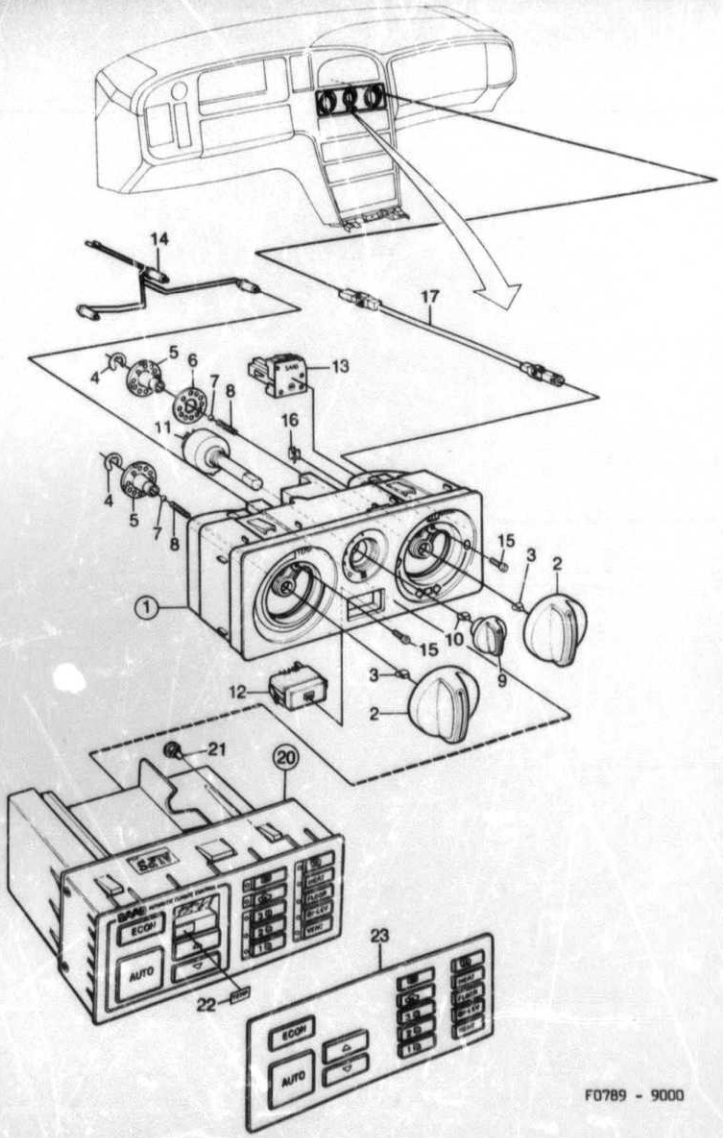

F0789 - 9000

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*96 25 229*		-1988 NLS - USE 9631235	1	Panel	Panel	5
0020	1	96 31 235		1989-,500)	1	Panel	Panel	5
0030	2	96 23 737			2	.Steering wheel	.Ratt	3
0040	3	96 21 897			2	..Bracket	..Hållare	5
0050	4	79 36 008			2	.E-circlip	.Spårryttare	5
0060	5	96 25 245			2	.Disc	.Skiva	5
0070	6	96 25 252			1	.Spring latch bolt	.Snäppregel	5
0080	7	94 20 043			2	.Ball	.Kula	5
0090	8	94 20 035			2	.Spring	.Fjäder	5
0100	9	96 23 745			1	.Steering wheel	.Ratt	3
0110	10	96 21 897			1	..Bracket	..Hållare	5
0120	11	95 00 927			1	.Switch	.Strömställare	3
0130	12	95 05 744			1	.Switch	.Strömställare	3
0140	13	95 05 421			1	.Contact	.Kontakt	3
0150	14	95 06 601		-1985	1	.Cable harness	.Ledningsnät	5
0160	14	95 14 787		1986-	1	.Cable harness	.Ledningsnät	5
0170		85 00 613		1986-	3	..Bulb	..Glödlampa	2
0180	15	79 71 393			2	.Screw	.Skruv	5
0190	16	96 25 351			1	.Clamp	.Klämma	5
0200								
0210	17	96 22 390			1	Control arm	Reglagearm	5
0220	17	96 26 383		RHD	1	Control arm	Reglagearm	5
0230								
0240	20	96 28 397		700) ACC, (9627274)	1	Control panel	Reglagepanel	5
0250	21	96 25 575			3	.Bulb	.Glödlampa	4
0260	22	*96 28 389*		-1987 NLS - USE 4071106	1	.Sign	.Skylt	5
0270	23	40 71 106			1	Symbol strip	Symbolskiva	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.
700. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A08

Heat exchanger
Fan unit

Värmeväxlare
Fläktenhet

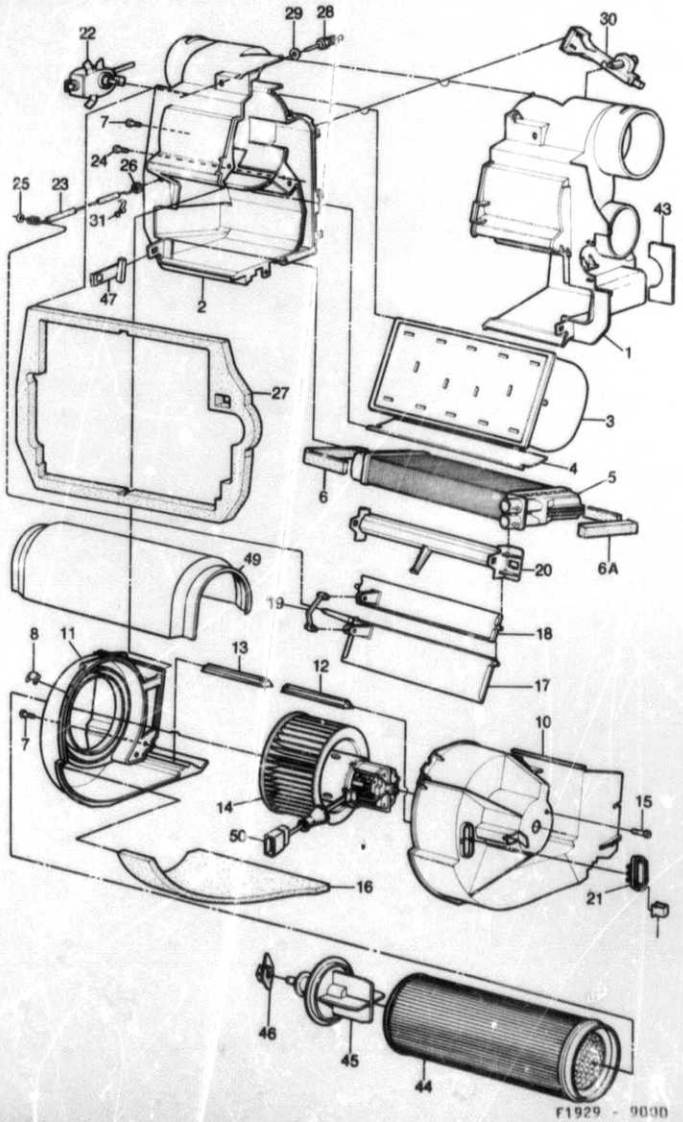

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	96 22 663		LH	1	Heater housing	Värmehus	6
0060	2	*96 22 671*		-1988 RH NLS - USE 9630799	1	Heater housing	Värmehus	6
0070	2	96 30 799		1989- RH	1	Heater housing	Värmehus	6
0100	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0140	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0160	5	96 20 238			1	Heat exchanger	Värmeväxlare	4
0170	6	96 26 300			1	Seal	Tätning	5
0180	6A	96 26 318			1	Seal	Tätning	5
0190	7	79 71 443			2	Screw	Skruv	5
0200	8	96 25 989			10	Clamp	Klämma	5
0220	10	*96 22 606*		-1986 LH NLS - USE 9628272	1	Fan housing	Fläkthus	5
0230	10	96 28 272		1987- LH	1	Fan housing	Fläkthus	5
0240	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0260	12	96 25 138		LH	1	Air deflector	Luftledare	5
0280	13	96 25 120		RH	1	Air deflector	Luftledare	5
0300	14	*96 22 622*		-1986 NLS - USE 9501685, 9628587	1	Fan unit	Fläktenhet	4
0310	14	96 28 587		1987-	1	Fan unit	Fläktenhet	4
0320	15	80 59 230			1	Screw	Skruv	5
0340	16	96 25 955			1	Insulation	Isolering	6
0360	17	96 24 321			1	Shutter	Spjäll	5
0400	18	96 24 305			1	Shutter	Spjäll	5
0440	19	96 24 347			1	Link	Länk	5
0460	20	96 22 655			1	Intermediate section	Mellanstycke	5
0480	21	*96 29 429*		NLS - USE 4382420	1	Resistor	Motstånd	5
0500	22	96 23 570			1	Angle gear	Vinkelväxel	5
0520	23	96 23 455			1	Control cable	Reglagewire	5
0540	24	79 71 393			1	Screw	Skruv	5
0560	25	79 75 485			1	Washer	Bricka	5
0580	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0600	27	*96 26 987*		-1987 (9620345) NLS - USE 9631490	1	Seal	Tätning	5
0610	27	96 29 379		1988	1	Seal	Tätning	5
0615	27	96 31 490		500) 1989-	1	Seal	Tätning	5
0620	28	*79 74 090*		NLS - USE 7399348	2	Screw	Skruv	5
0660	29	79 16 489		-1987	2	Washer	Bricka	5
0670	29	80 29 969		1988-	2	Washer	Bricka	5
0680	30	96 25 146			1	Gear rod	Växelstång	5
0685	31	96 22 432			2	Clamp	Klammer	5
0700	43	96 22 697			1	Bracket	Hållare	5
0720	44	96 22 457			1	Air filter kit	Luftfiltersats	2
0740	45	96 25 724			1	Bracket	Fäste	6
0780	46	96 25 765			1	Bracket	Fäste	6
0790	47	96 27 415		LH	1	Attaching plate	Fästplåt	6
0800	47	96 27 407		RH	1	Attaching plate	Fästplåt	6
0810	48	73 99 207			2	Clip	Clips	6
0830	49	96 28 603		1987-	1	Cover	Kåpa	6
0850	50			See page 3B-08b, 3-D14		Contact housing	Kontakthus	

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A10

Heat exchanger, servo
Fan unit, ACC

Värmeväxlare, servo
Fläktenhet, ACC

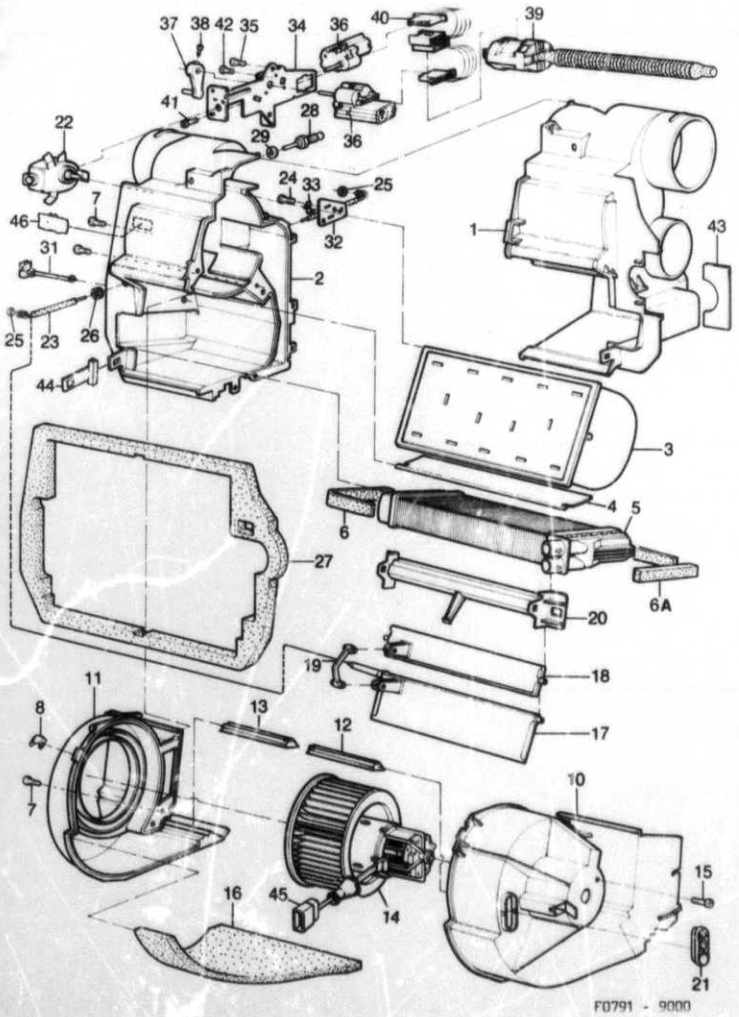

1875	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	96 22 663		LH	1	Heater housing	Värmehus	6
0060	2	*96 22 671*		-1988, RH NLS - USE 9630799	1	Heater housing	Värmehus	6
0070	2	96 30 799		1989-, RH	1	Heater housing	Värmehus	6
0100	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0140	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0160	5	96 20 238			1	Heat exchanger	Värmeväxlare	4
0170	6	96 26 300			1	Seal	Tätning	5
0180	6A	96 26 318			1	Seal	Tätning	5
0200	7	79 71 443			2	Screw	Skruv	5
0220	8	96 25 989			10	Clamp	Klämma	5
0240	10	*96 22 606*		-1986 LH NLS - USE 9628272	1	Fan housing	Fläkthus	5
0250	10	96 28 272		1987- LH	1	Fan housing	Fläkthus	5
0260	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0280	12	96 25 138		LH	1	Air deflector	Luftledare	5
0300	13	96 25 120		RH	1	Air deflector	Luftledare	5
0320	14	*96 22 622*		-1986 NLS - USE 9501685, 9628587	1	Fan unit	Fläktenhet	4
0330	14	96 28 587		1987-	1	Fan unit	Fläktenhet	4
0340	15	80 59 230			1	Screw	Skruv	5
0360	16	96 25 955			1	Insulation	Isolering	6
0380	17	96 24 321			1	Shutter	Spjäll	5
0420	18	96 24 305			1	Shutter	Spjäll	5
0460	19	96 24 347			1	Link	Länk	5
0480	20	96 22 655			1	Intermediate section	Mellanstycke	5
0500	21	96 22 812			1	Cover	Täcklock	6
0520	22	96 23 869			1	Angle gear	Vinkelväxel	5
0540	23	96 23 935			1	Control cable	Reglagewire	5
0560	24	79 71 393			1	Screw	Skruv	5
0580	25	79 75 485			2	Washer	Bricka	5
0600	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0620	27	*96 26 987*		-1987 (9620345) NLS - USE 9631490	1	Seal	Tätning	5
0630	27	96 29 379		1988	1	Seal	Tätning	5
0635	27	96 31 490		1989-	1	Seal	Tätning	5
0640	28	*79 74 090*		NLS - USE 7399348	2	Screw	Skruv	5
0660	29	79 16 489		-1987	2	Washer	Bricka	5
0670	29	80 29 969		1988-	2	Washer	Bricka	5
0680	31			See page 3A-083, 2-D12	1	Sensor	Givare	
0720	32	96 23 315			1	Attaching plate	Fästplåt	6
0740	33	96 22 432			1	Clamp	Klammer	5
0760	34	96 25 534			1	Attaching plate	Fästplatta	6
0800	35	79 71 443			2	Screw	Skruv	5
0820	36	96 25 435			2	Electric motor	Elmotor	4
0840	37	96 23 968			1	Lever	Hävarm	5
0860	38	79 75 584			1	Screw	Skruv	5
0880	39	96 26 052		-1986	1	Fan	Fläkt	4
0900	40	96 24 123			1	Cable harness	Ledningsnät	6
0920	41	80 59 107			6	Screw	Skruv	5
0940	42	79 71 336		-1986	2	Screw	Skruv	5
0960	43	96 22 697			1	Bracket	Hållare	5
0970	44	96 27 415		LH	1	Attaching plate	Fästplåt	6
0980	44	96 27 407		RH	1	Attaching plate	Fästplåt	6
1000	45			See page 3B-085, 3-D14		Contact housing	Kontakthus	
1010	46	96 29 411		1989-	1	Clamp	Klamma	5

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A12

Duct
Kanal

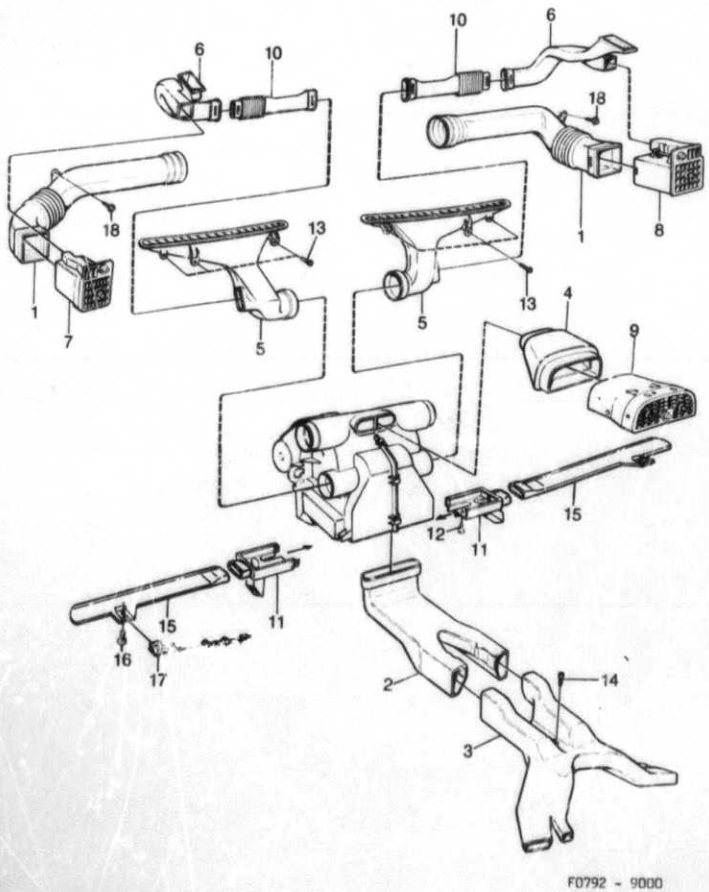

F0792 - 9000

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 23 323		-1988, LH	1	Duct	Kanal	5
0020	1	96 23 331		-1988, RH	1	Duct	Kanal	5
0030	1	*96 25 278*		-1988, LH FOR RHD NLS - USE 4382487	1	Duct	Kanal	5
0040	1	*96 25 260*		-1988, RH FOR RHD NLS - USE 4382479	1	Duct	Kanal	5
0042	1	*96 30 732*		1989-,500) LH NLS - USE 4382487	1	Duct	Kanal	5
0044	1	96 30 724		1989-,500) RH	1	Duct	Kanal	5
0050	2	96 25 088		-1985	1	Air duct	Luftkanal	5
0060	2	*96 27 787*		55) NLS - USE 9628173, 9630138	1	Air duct	Luftkanal	5
0070	2	*96 28 181*		56),-1987 NLS - USE 9630138	1	Air duct	Luftkanal	5
0075	2	96 30 138		1988-	1	Air duct	Luftkanal	5
0080	3	*96 27 316*		55) NLS - USE 9628173, 9630138	1	Air duct	Luftkanal	5
0090	3	96 28 173		56)	1	Air duct	Luftkanal	5
0100	3	96 28 595		1987-	1	Air duct	Luftkanal	5
0110	4	96 20 105			1	Duct	Kanal	5
0130	4	96 22 325		RHD	1	Duct	Kanal	5
0150	5	*96 24 966*		-1985,LH NLS - USE 4073615	1	Duct	Kanal	5
0160	5	*96 27 456*		1986-1987,LH NLS - USE 4073615	1	Duct	Kanal	5
0170	5	96 28 942		1988,LH	1	Duct	Kanal	5
0175	5	40 70 140		1989-,LH	1	Duct	Kanal	5
0180	5	*96 24 974*		-1985,RH NLS - USE 4073623	1	Duct	Kanal	5
0190	5	*96 27 464*		1986-1987,RH NLS - USE 4073623	1	Duct	Kanal	5
0200	5	96 28 959		1988,RH	1	Duct	Kanal	5
0205	5	40 70 157		1989-,RH	1	Duct	Kanal	5
0210	6	96 27 506		LH	1	Duct	Kanal	6
0220	6	96 27 498		RH	1	Duct	Kanal	6
0230	6	96 27 522		LH FOR RHD	1	Duct	Kanal	6
0240	6	96 27 514		RH FOR RHD	1	Duct	Kanal	6
0250	7	*96 25 062*		-1988, LH NLS - USE 4070215	1	Air outlet	Luftutsläpp	6
0255	7	40 70 215		500), 1989-, LH	1	Air outlet	Luftutsläpp	6
0260	8	*96 25 070*		-1988, RH NLS - USE 4070223	1	Air outlet	Luftutsläpp	6
0265	8	40 70 223		500), 1989-, RH	1	Air outlet	Luftutsläpp	6
0270	9	*96 20 170*		287) CENTRE NLS - USE 4382545	1	Air outlet	Luftutsläpp	6
0280	9	*96 26 953*		288) CENTRE NLS - USE 4382545	1	Air outlet	Luftutsläpp	6
0290	10	*96 22 119*		-1987 NLS - USE 9628967	2	Duct	Kanal	6
0300	10	96 28 967		1988-	2	Duct	Kanal	6
0310	11	96 22 986		-1987, LH	1	Air outlet	Luftutsläpp	6
0320	11	96 29 056		1988, LH	1	Air outlet	Luftutsläpp	6
0325	11	40 71 189		1989-, LH	1	Air outlet	Luftutsläpp	6
0330	11	*96 22 978*		-1985, RH NLS - USE 7922818, 9627803	1	Air outlet	Luftutsläpp	6
0340	11	96 27 803		1986-1987, RH	1	Air outlet	Luftutsläpp	6
0350	11	96 29 098		1988-,368), RH	1	Air outlet	Luftutsläpp	6

55. Ch. -G1008223
56. Ch. G1008224-
287. Ch. -F4001855
288. Ch. F4001856-
368. Ch. -J1023426, -J2013601, -J8001875
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A14

Duct
Kanal

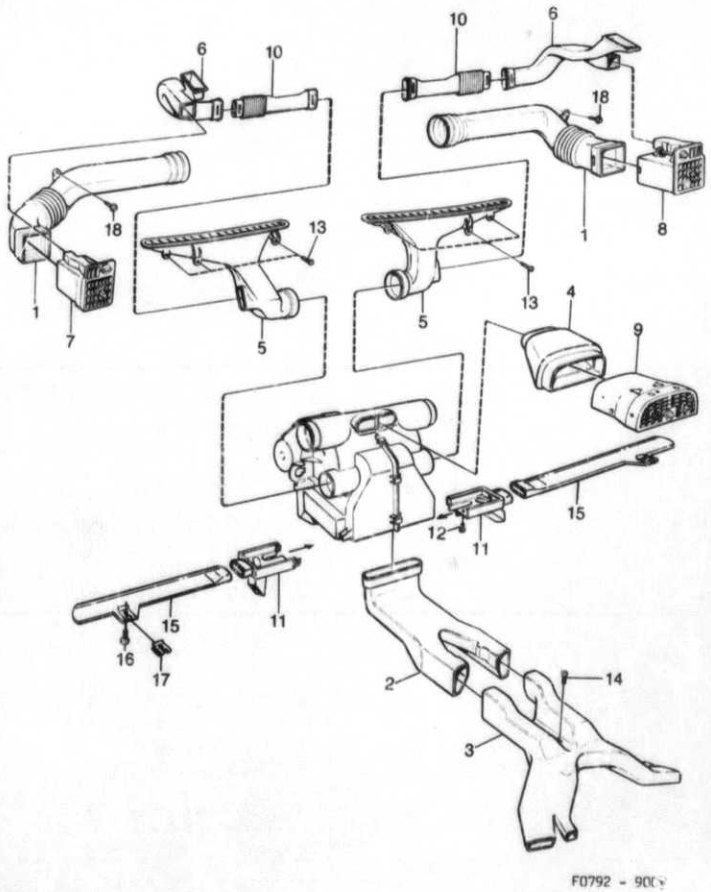

F0792 - 90C-

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0355	11	96 27 357		369)-1988, RH	1	Air outlet	Luftutsläpp	6
0357	11	40 71 171		1989-, RH	1	Air outlet	Luftutsläpp	6
0360	12	79 22 354		1986-,368)	1	Screw	Skruv	5
0365	12	96 72 254		369)	1	Screw rivet	Skruvnit	6
0370	13	79 22 347		-1985	4	Screw	Skruv	5
0380	13	79 22 347		1986-1987	6	Screw	Skruv	5
0385	13	79 22 420		1988-	6	Screw	Skruv	5
0390	14	97 71 320			1	Screw	Skruv	5
0400	15	96 30 336		1988-, LH	1	Duct	Kanal	6
0410	15	96 27 365		1988-, RH	1	Duct	Kanal	6
0420	15	96 29 122		1988-, LH FOR RHD	1	Duct	Kanal	6
0430	15	96 29 114		1988-, RH FOR RHD	1	Duct	Kanal	6
0440	16	79 22 826		1988-	2	Screw	Skruv	5
0450	17	79 68 001		1988-	2	Clip nut	Clipsmutter	5
0460	18	79 72 938		1989-,500)	2	Screw	Skruv	5

368. Ch. -J1023426, -J2013601, -J8001875
369. Ch. J1023427-, J2013602-, J8001876-
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A16

Door fan
Dörrfläkt

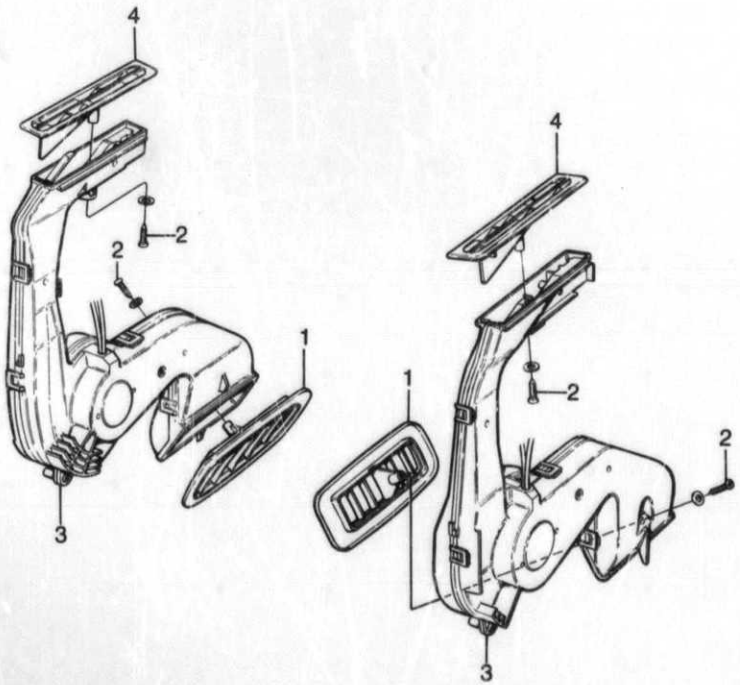

R 9069-9000

1910

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	96 28 413		2	Air inlet	Luftintag	9
0040	2	79 71 393		4	Screw	Skruv	5
0060	3	96 28 454	LH	1	Fan unit	Fläktenhet	4
0080	3	96 28 462	RH	1	Fan unit	Fläktenhet	4
0100	4	96 28 447	LH	1	Air outlet	Luftutsläpp	9
0120	4	96 28 512	RH	1	Air outlet	Luftutsläpp	9
0300		86 05 057	See page 8C-031, 6-B08	1	Door fan kit	Dörrfläktsats	4
0320		86 05 065	See page 8C-031, 6-B08	1	Retainer kit	Hållarsats	6
0360		86 05 073	See page 8C-031, 6-B08	1	Cable harness kit	Ledningsnätssats	5


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-AC2
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A18

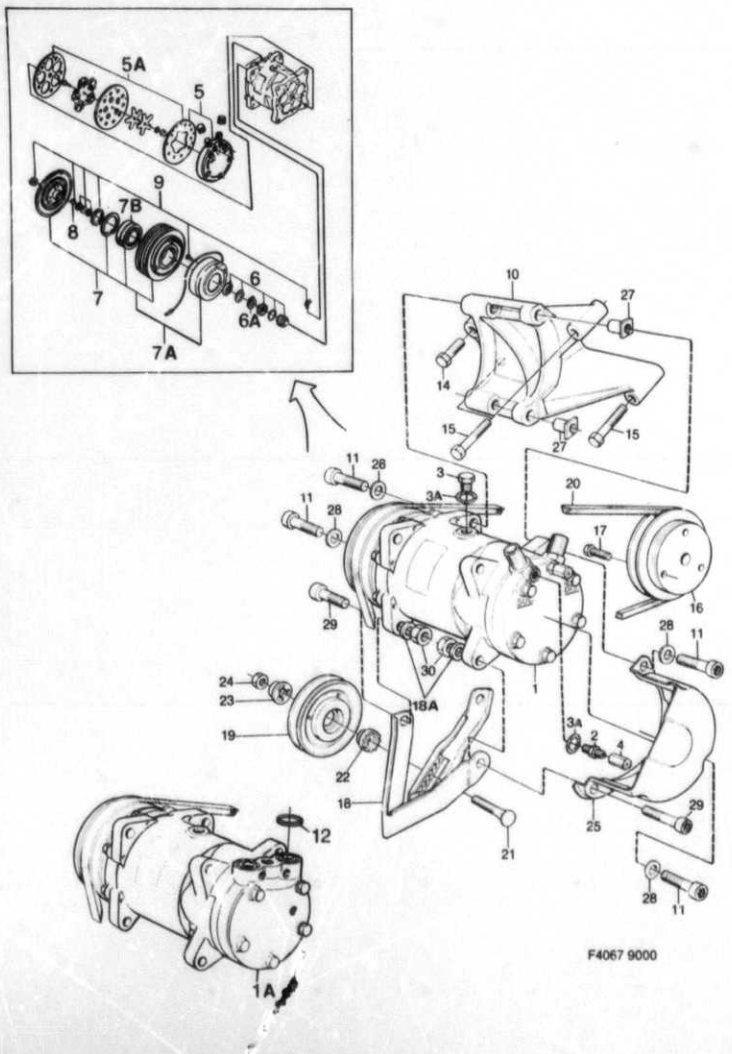

1960	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		96 24 115		-1985, SD510	1	Compressor	Kompressor	
0020	1		*96 29 254*		1986-1987 (9627175) NLS - USE 4319992	1	Compressor	Kompressor	5
0030	1		*96 29 254*		1988-,494) SD709 NLS - USE 4319992	1	Compressor	Kompressor	5
0040	1		43 19 992		1986-,494) SD709A ALT TO SD709	1	Compressor	Kompressor	5
0050	1A		*96 29 601*		495), SD709 NLS - USE 4319810	1	Compressor	Kompressor	5
0060	2		94 79 452			2	.Valve	.Ventil	6
0070	3		94 79 478			1	.Plug	.Plugg	5
0075	3	•	40 72 450		SD709A	1	.Plug	.Plugg	5
0080	3A		94 79 486			3	.O-ring	.O-ring	2
0090	4		96 26 896			2	.Plug	.Plugg	5
0100	5		94 79 759		-1987, SD510	1	.Cylinder head	.Cylinderlock	6
0110	5		96 29 502		1988-,494), SD709	1	.Cylinder head	.Cylinderlock	6
0120	5		40 72 435		495), SD709	1	.Cylinder head	.Cylinderlock	6
0125	5	•	74 95 179		SD709A	1	.Cylinder head	.Cylinderlock	6
0130	5A		94 79 742		-1987, SD510	1	.Gasket kit	.Packningsats	4
0140	5A		96 29 494		1988-, SD709	1	.Gasket kit	.Packningsats	4
0145	5A	•	43 83 287		SD709A	1	.Gasket kit	.Packningsats	4
0150	6		94 82 357		-1987, SD510	1	.Sealing kit	.Tätningssats	4
0160	6		96 29 478		1988-, SD709	1	.Sealing kit	.Tätningssats	4
0165	6	•	43 83 261		SD709A	1	.Sealing kit	.Tätningssats	4
0170	6A		94 82 381		-1987, SD510	1	.Retaining ring	.Spårring	5
0180	6A		96 29 486		1988-, SD709	1	.Lock ring	.Låsring	5
0185	6A	•	43 83 279		SD709A	1	.Lock ring	.Låsring	5
0190	7		96 26 888		1985, SD510	1	.Clutch	.Koppling	6
0200	7		96 31 409		1986-1987, SD510	1	.Clutch	.Koppling	6
0210	7		*96 29 445*		1988-, SD709 NLS - USE 4382263	1	.Clutch	.Koppling	6
0220	7A		96 26 912		1985, SD510	1	.Clutch	.Koppling	6
0230	7A		96 27 183		1986-1987, SD510	1	.Clutch	.Koppling	6
0240	7A		43 82 263		1988-, SD709	1	.Clutch	.Koppling	6
0245	7A	•	43 83 337		SD709A	1	.Clutch	.Koppling	6
0250	7B		94 80 856		-1987, SD510	1	.Ball bearing	.Kullager	5
0260	7B		96 29 452		1988-, SD709	1	.Ball bearing	.Kullager	6
0265	7B	•	43 83 303		SD709A	1	.Ball bearing	.Kullager	6
0270	8		*94 79 726*		494) NLS	1	.Key	.Kil	5
0280	8		40 72 468		495)	1	.Key	.Kil	5
0285	8		40 72 468		SD709A	1	.Key	.Kil	5
0290	9		96 26 904		-1987, SD510	1	.Accessories kit	.Tillbehörsats	4
0300	9		96 29 460		1988-,494), SD709	1	.Accessories kit	.Tillbehörsats	4
0310	9		40 72 476		495), SD709	1	.Accessories kit	.Tillbehörsats	4
0315	9	•	43 83 360		SD709A	1	.Accessories kit	.Tillbehörsats	4
0320	10		75 53 316		-1985	1	Bracket	Konsol	6
0330	10		75 96 000		1986-1987 (7573454)	1	Bracket	Konsol	6

494. Ch. --K1020490, --K2011975, --K8001004
495. Ch. k1020491--, K2011976--, K8001005--


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A20

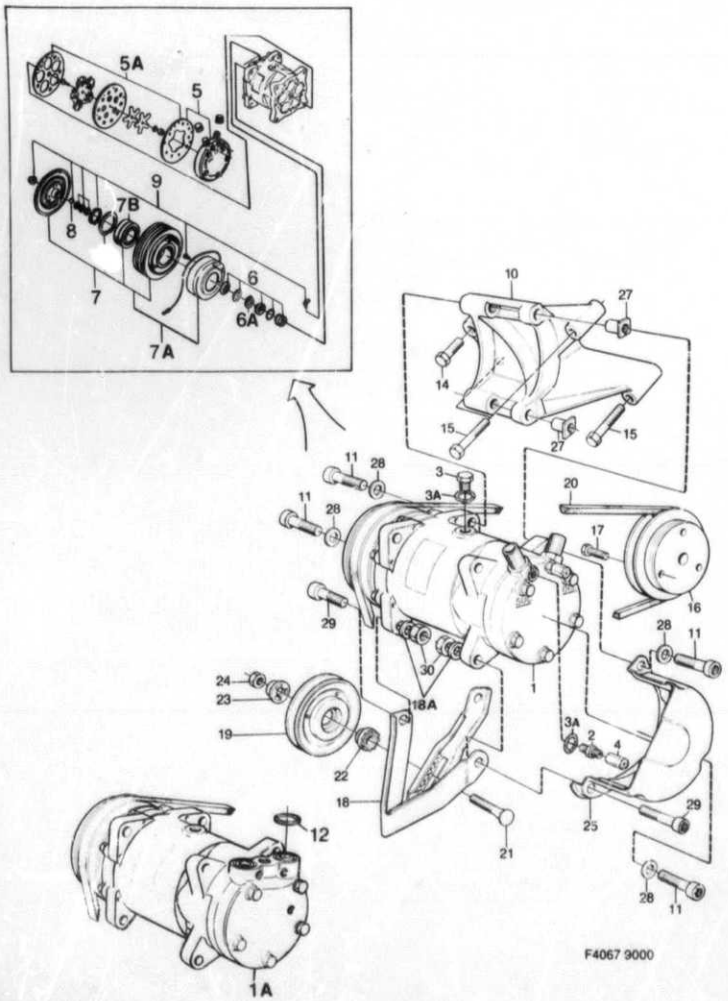

1960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S t.
0340	10	75 96 000		1988-	1	Bracket	Konsol	6
0350	11	79 76 970		-1986	4	Screw	Skruv	5
0360	11	75 76 580		1987-	4	Screw	Skruv	5
0370	12	40 71 999			2	O-ring	O-ring	2
0380	14	79 70 015			1	Screw	Skruv	5
0390	15	79 73 787		-1985	3	Screw	Skruv	5
0400	15	79 77 606		1986-	3	Screw	Skruv	5
0410	16	93 82 342		-1988	1	Pulley	Remskiva	5
0420	17	80 19 945		-1988	3	Screw	Skruv	5
0430	18	93 82 359		-1985	1	Arm	Arm	6
0440	18	*75 54 165*		1986-,488) NLS - USE 7554215, 9382359	1	Arm	Arm	5
0450	18	93 82 359		489)	1	Arm	Arm	6
0460	18A	75 54 215		489)	1	Spacer	Distans	5
0470	19	*93 25 663*		NLS - USE 4118964	1	Pulley	Remskiva	5
0480	20	93 82 383			1	V-belt	Kilrem	1
0490	21	93 82 466			1	Screw	Skruv	5
0500	22	93 86 343			1	Pin	Axeltapp	5
0510	23	93 86 350			1	Sleeve	Hylsa	5
0520	24	79 68 415			1	Lock nut	Låsmutter	3
0530	25	40 70 926		-1987 (7573967)	1	Shield	Sköld	6
0540	25	*75 98 170*		1988 NLS	1	Shield	Sköld	6
0550	25	*40 28 759*		1989-, 593) NLS	1	Shield	Sköld	6
0560	25	40 70 926		594)	1	Shield	Sköld	6
0570	27	75 53 324			2	Sleeve	Hylsa	3
0580	28	70 61 328			4	Washer	Bricka	5
0590	29	79 75 030			2	Screw	Skruv	5
0600	30	81 51 243			2	Nut	Mutter	5
0610								
0620				See page 8C-025, 8-B02	X	Air conditioning kit	Luftkonditioneringssats	

488. Ch. --K1018085, --K2010306, --K8000743
489. Ch. K1018086--, K2010307--, K8000744--
593. Ch. --K1028847, --K2018142
594. Ch. K1028848--, K2018143--


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A22

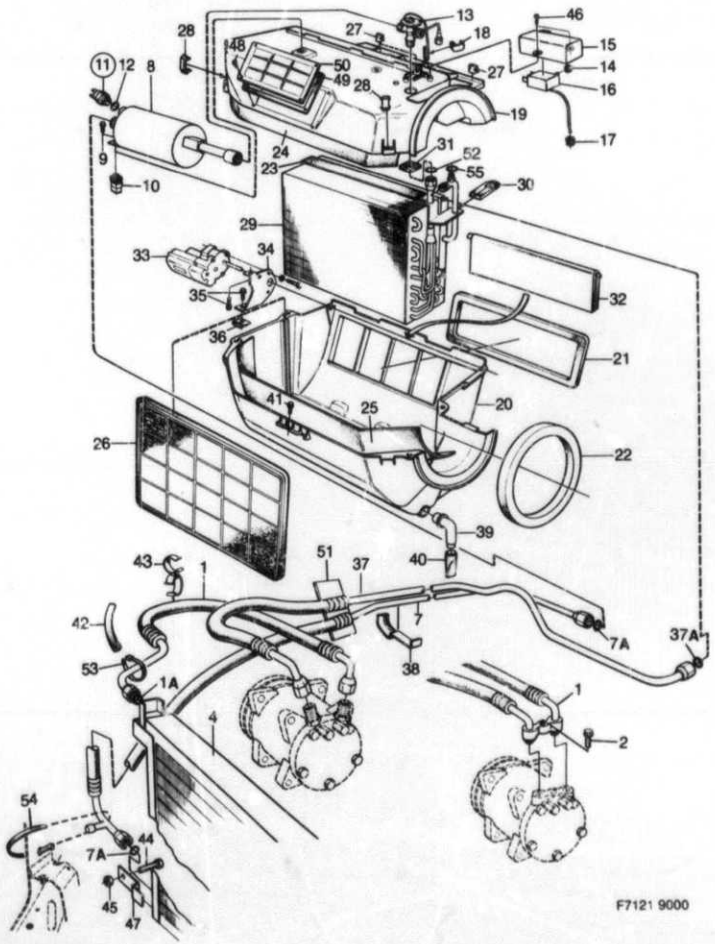

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 26 458		-1985	1	Hose	Slang	5
0020	1	96 29 304		1986-1987 TURBO(9626474)	1	Hose	Slang	6
0030	1	96 29 304		1988-,494) TURBO	1	Hose	Slang	6
0040	1	96 29 577		495) TURBO	1	Hose	Slang	6
0050	1	96 29 312		1986-1987,B202I(9626490)	1	Hose	Slang	6
0060	1	96 29 312		1988-,494) B202I	1	Hose	Slang	6
0070	1	96 29 585		495) I	1	Hose	Slang	6
0080	1A	*79 72 094*		NLS - USE 4318036	1	O-ring	O-ring	2
0090	2	79 78 307			1	Screw	Skruv	5
0100	4	96 29 403		-1987 (9626433)	1	Condenser	Kondensor	5
0110	4	96 29 403		1988-	1	Condenser	Kondensor	5
0120	7	96 26 243		-1985	1	Hose	Slang	5
0130	7	96 29 320		1986-1987 (9626524)	1	Hose	Slang	6
0140	7	96 29 320		1988-	1	Hose	Slang	6
0150	7A	*79 72 086*		NLS - USE 4318028	2	O-ring	O-ring	2
0160	8	*96 24 040*		NLS - USE 4071007	1	Reservoir	Behållare	4
0170	9	*79 73 126*		NLS - USE 7972128	1	Screw	Skruv	5
0180	10	96 25 583			1	Nut	Mutter	5
0190	11	96 27 142		-1985, (9480005)	1	Contact	Kontakt	5
0200	11	96 27 159			1	Pressure monitor	Tryckvakt	4
0210	12	*94 73 851*		NLS - USE 4073979	1	O-ring	O-ring	2
0220	13	94 80 914			1	Valve	Ventil	5
0230	14	85 66 598			1	Nut	Mutter	5
0240	15	96 25 096			1	Protecting casing	Skyddskåpa	6
0250	16	95 07 849			1	Thermo contact	Termokontakt	4
0260	17	94 60 742			1	Bushing	Bussning	5
0270	18	96 29 197		-1986 (9479536)	1	Clamp	Klamma	5
0280	18	96 29 197		1987-	1	Clamp	Klamma	5
0290	19	96 25 419			1	Casing	Hus	5
0300	20	96 29 262		-1987 (9625427)	1	Casing	Hus	5
0310	20	96 29 262		1988-	1	Casing	Hus	5
0320	21	*96 20 733*		-1985 NLS - USE 4072237	1	Seal	Tätning	4
0330	21	*96 27 431*		1986-1988 NLS - USE 4072237	1	Seal	Tätning	4
0340	21	40 72 237		500), 1989-	1	Seal	Tätning	4
0350	22	*96 20 741*		-1987 NLS - USE 9630286	1	Seal	Tätning	4
0360	22	96 30 286		1988-	1	Seal	Tätning	4
0370	23	96 22 572			1	Seal	Tätning	4
0380	24	96 24 032			1	Insulation	Isolering	4
0390	25	96 24 107			1	Insulation	Isolering	4
0400	26	96 25 674			1	Air filter	Luftfilter	2
0410	27	96 26 037			3	Clamp	Klämma	5
0420	28	96 25 989			5	Clamp	Klämma	5
0430	29	96 24 925			1	Evaporator	Förångare	
0440	30	96 25 328			1	Seal	Tätning	4
0450	31	96 25 336			1	Seal	Tätning	4
0460	32	96 23 398			1	Shutter	Spjäll	5
0470	33	96 24 867			1	Electric motor	Elmotor	5
0480	34	96 25 112			1	Attaching plate	Fästplatta	6
0490	35	*79 73 126*		NLS - USE 7972128	2	Screw	Skruv	5
0500	36	79 67 995			1	Clip nut	Clipsmutter	3
0510	37	96 29 296		-1987 (9626227)	1	Hose	Slang	6
0520	37	96 29 296		1988-,494)	1	Hose	Slang	6
0530	37A	*79 72 482*		NLS - USE 4318044	1	O-ring	O-ring	2
0540	38	96 25 633			1	Bracket	Hållare	6
0550	39	96 25 054			1	Draining hose	Dräneringsslang	6
0560	40	96 23 307			1	Non-return valve	Backventil	5
0570	41	*79 74 769*		-1985 NLS - USE 7922891	1	Screw	Skruv	5
0580	41	79 22 420		1986-	1	Screw	Skruv	5
0590	42	82 78 558	S	-1986	1	Protecting moulding	Skyddslist	5

494. Ch. --K1020490, --K2011975, --K8001004
495. Ch. K1020491--, K2011976--, K8001005--
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-A24

AC evaporator
AC förångare

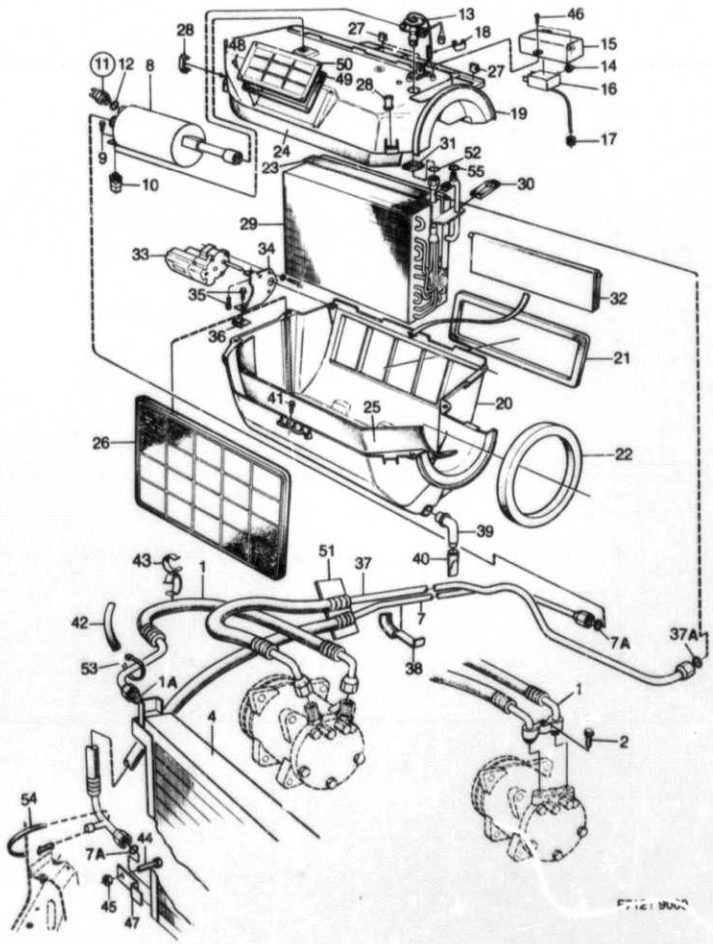

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	42	82 78 558	S	1987	2	Protecting moulding	Skyddslist	5
0610	42	96 31 367		1988-	1	Protection	Skydd	5
0620	43	96 27 266			1	Clamp	Klammer	5
0630	44	79 74 280		1986-, I	2	Screw	Skruv	5
0640	45	79 74 298		1986-, I	3	Nut	Mutter	5
0650	46	79 71 351			2	Screw	Skruv	5
0660	47	75 76 218		(9381138), I	1	Bracket	Fäste	6
0670	48	79 22 214		1986- WITHOUT ACC	4	Screw	Skruv	5
0680	49	96 25 823		1986- WITHOUT ACC	1	Seal	Tätning	6
0690	50	96 28 090		1986- WITHOUT ACC	1	Cover	Lock	5
0700	51	96 30 310		1988-	1	Base	Underlägg	6
0710	52	*79 72 094*		NLS - USE 4318036	1	O-ring	O-ring	2
0720	53	79 71 898			1	Tensioning band	Spännband	5
0730	54	79 71 872			1	Tensioning band	Spännband	5
0740	55	• 79 72 078			1	O-ring	O-ring	2

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-B02

2100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		• 86 05 412		1986-, B202, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0020				See page 8C-027, 6-B04				
0030		• 86 05 438		1986-, TURBO, R134A	X	Additional kit	Tilläggssats	4
0040				See page 8C-027, 6-B04		hoses	slangar	
0050		• 86 05 446		1986-, I, R134A	X	Additional kit	Tilläggssats	4
0060				See page 8C-027, 6-B04		hoses	slangar	
0070		• 86 05 297		1986-, R134A	X	Additional kit	Tilläggssats	4
0080				See page 8C-027, 6-B04		brackets	konsoler	
0090		75 77 042		1986-, TURBO, R134A	X	Ac-accesory kit	Ac-tillbehör	4
0100				See page 8C-027, 6-B04		AC switch off	AC-bortkoppling	
0110		96 27 373		1986-, TURBO,A,R134A	X	Fan	Fläkt	4
0120				See page 8C-027, 6-B04				

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

8C GROUP INDEX

Heating and ventilation system	**6-A06**
Complete sets:	**6-B04**

Complete sets
6-B04
Body
Heating and ventilation

Satser
Kaross
Värme och ventilation

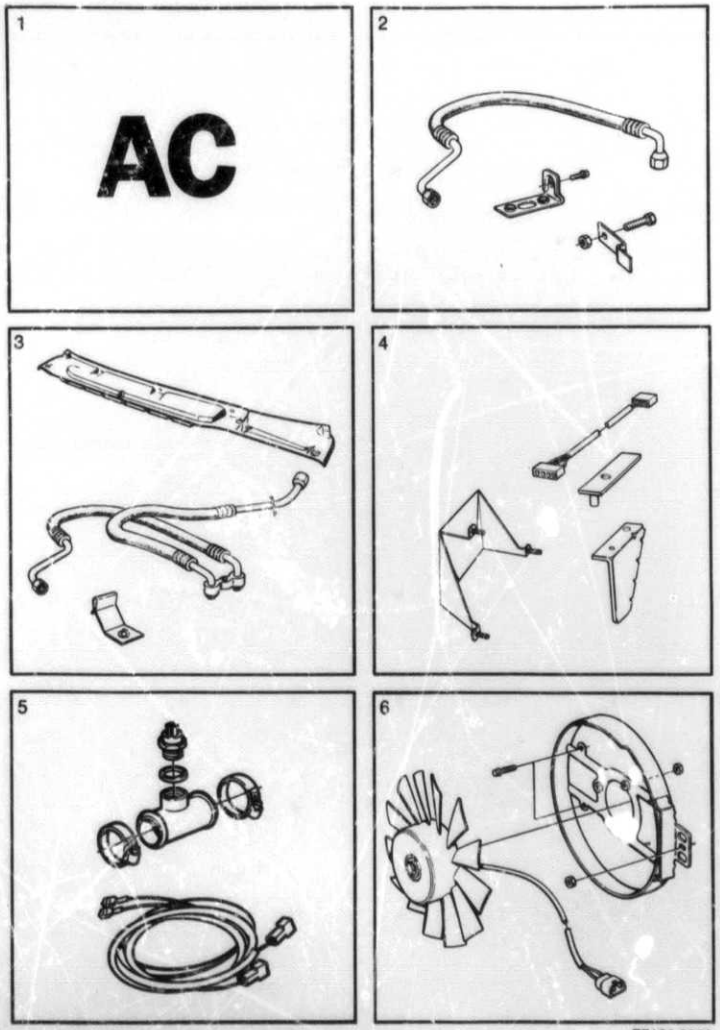

F7122 9000


2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 86 05 412		1986-, B202, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0020		• 40 71 940			1	.Evaporator housing	.Förångarhus	6
0030		• 40 74 340			1	.Reservoir	.Behållare	4
0040		• 41 13 999			1	.Clip	.Clips	5
0050		• 41 17 602			1	.Bracket	.Hållare	6
0060		• 41 18 964			1	.Pulley	.Remskiva	5
0070		• 41 79 933			1	.Relay	.Relä	3
0080		• 42 83 164			1	.Hose	.Slang	3
0090		• 43 18 382			1	.Pipe bracket	.Rörhållare	6
0100		• 43 18 531			1	.Pipe bracket	.Rörhållare	6
0110		• 43 19 570			1	.Tube	.Rör	5
0120		• 43 19 570			1	.Tube	.Rör	5
0130		• 43 19 588			1	.Hose	.Slang	6
0140		• 43 19 984			1	.Pressure monitor	.Tryckvakt	4
0150		• 43 56 291			1	.V-belt	.Kilrem	1
0160		• 43 57 067			1	.Bracket	.Konsol	6
0170		• 43 82 404			1	.Condenser	.Kondensor	5
0180		• 43 82 636			1	.Hose	.Slang	6
0190		• 43 82 735			1	.Compressor	.Kompressor	5
0200		• 43 82 750			1	.Label	.Etikett	5
0210		• 73 98 266			3	.Screw	.Skruv	5
0220		73 98 852			2	.Washer	.Bricka	5
0230		75 50 346			1	.Bracket	.Fäste	5
0240		75 50 353			1	.Rubber bushing	.Gummibussning	5
0250		79 68 415			1	.Lock nut	.Låsmutter	3
0260		79 71 864			1	.Tensioning band	.Spännband	5
0270		79 71 880			2	.Tensioning band	.Spännband	4
0280		79 72 441			1	.Screw	.Skruv	5
0290		79 73 001			2	.Screw	.Skruv	5
0300		79 74 280			2	.Screw	.Skruv	5
0310		79 74 298			2	.Nut	.Mutter	5
0320		79 74 637			1	.Fuse	.Säkring	1
0330		79 74 678			1	.Fuse	.Säkring	1
0340		◦ 79 77 929			2	.Nut	.Mutter	5
0350		79 78 117			1	.Screw	.Skruv	5
0360		• 79 78 174			2	.Screw	.Skruv	5
0370		• 79 78 208			1	.Screw	.Skruv	5
0380		79 79 602			2	.Nut	.Mutter	5
0390		• 79 82 119			3	.Screw	.Skruv	5
0400		85 06 941			1	.Label	.Etikett	5
0410		85 22 310			1	.Relay	.Relä	2
0420		85 36 401			1	.Relay	.Relä	3
0430		85 64 973			2	.Protecting moulding	.Skyddslist	6
0440		• 86 05 230			1	.Bracket	.Fäste	6
0450		93 82 466			1	.Screw	.Skruv	5
0460		93 86 343			1	.Pin	.Axeltapp	5
0470		93 86 350			1	.Sleeve	.Hylsa	5
0480		93 90 964			1	.Label	.Etikett	4
0490		95 03 426			1	.Connector housing	.Skarvhus	4
0500		95 03 442			1	.Contact housing	.Kontakthus	4
0510		95 12 690			1	.Switch	.Strömställare	3
0520		95 23 788			1	.Switch	.Strömställare	3
0530		96 27 266			1	.Clamp	.Klammer	5
0540		96 30 310			2	.Base	.Underlägg	6
0550		96 31 367			1	.Protection	.Skydd	5
0560								
0570	3	• 86 05 438		1986-, TURBO, R134A	X	Additional kit hoses	Tilläggssats slangar	4
0580								
0590		• 40 28 767			1	.Cover plate	.Täckplåt	5
0600		• 43 18 606			1	.Cover	.Lock	5
0610		• 43 82 610			1	.Hose	.Slang	6
0620		79 72 607			1	.Screw	.Skruv	5
0630		• 79 78 141			2	.Hexagon screw	.Sexkantsskruv	5
0640								

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4 02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

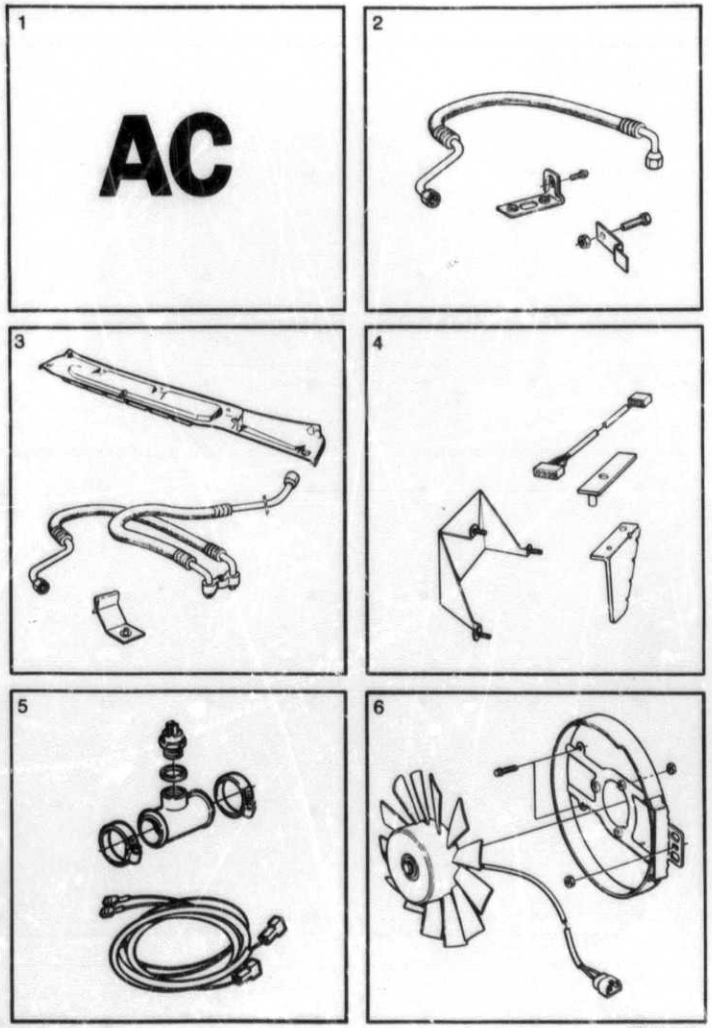

F7122 9000

Complete sets
6-B06
Body
Heating and ventilation

Satser
Kaross
Värme och ventilation

	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2500									
0650	3	•	86 05 446		1986-, I, R134A	X	Additional kit	Tilläggssats	4
0660							hoses	slangar	
0670		•	43 18 606			1	. Cover	. Lock	5
0680		•	43 82 628			1	. Hose	. Slang	6
0690		•	79 78 141			2	. Hexagon screw	. Sexkantsskruv	5
0700									
0710	4	•	86 05 297		1986-, R134A	X	Additional kit	Tilläggssats	4
0720							brackets	konsoler	
0730		•	40 74 431			1	. Pipe bracket	. Rörhållare	6
0740			79 72 938			1	. Screw	. Skruv	5
0750			80 29 951			1	. Washer	. Bricka	5
0760			*80 73 223*		NLS - USE 9166380	3	. Washer	. Bricka	5
0770			80 73 512			3	. Lock nut	. Låsmutter	3
0780			80 74 288			1	. Nut	. Mutter	5
0790			82 35 178			5	. Pop rivet	. Popnit	5
0800		•	85 48 315			1	. Cable harness	. Ledningsnät	6
0810		•	86 05 347			1	. Bracket	. Konsol	6
0820		•	86 05 354			1	. Bracket	. Konsol	6
0830		•	86 05 362			1	. Bracket	. Fäste	6
0840		•	86 05 370			1	. Bracket	. Fäste	6
0850			*95 13 219*		NLS - USE 4179925	1	. Relay	. Relä	5
0860									
0870	5		75 77 042		1986-, TURBO, R134A	X	Ac-accesory kit	Ac-tillbehör	4
0880							AC switch off	AC-bortkoppling	
0890			75 76 960			1	. Tube	. Rör	5
0900			79 70 114			2	. Hose clamp	. Slangklamma	5
0910			79 71 880			7	. Tensioning band	. Spännband	4
0920			83 30 268			1	. Seal	. Tätning	5
0930			95 23 119			1	. Cable harness	. Ledningsnät	6
0940			*95 26 526*		NLS - USE 4086724	1	. Thermo contact	. Termokontakt	2
0950									
0960	6		96 27 373		1986-, A, R134A	X	Fan	Fläkt	4
0970			75 77 885			1	. Fan shroud	. Fläktkåpa	4
0980			75 98 980			1	. Fan unit	. Fläktenhet	4
0990			79 75 576			3	. Nut	. Mutter	5
1000			79 71 658			1	. Nut	. Mutter	5
1010			79 72 607			2	. Screw	. Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02


8C GROUP INDEX


Heating and ventilation system	6-A06
Complete sets:	6-B04


6-B08

Body
Heating and ventilation

Kaross
Värme och ventilation

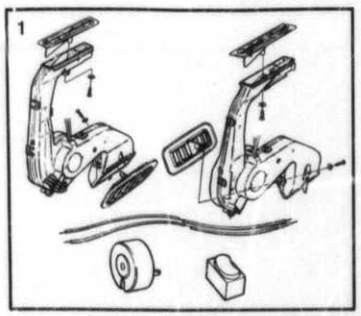

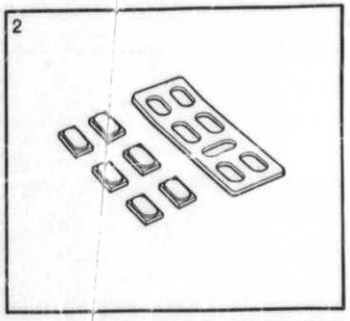

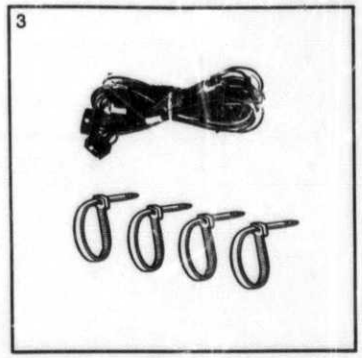

F7123 9000

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	86 05 057			1	Door fan kit	Dörrfläktsats	4
0020		79 69 967			1	.Washer	.Bricka	5
0030		79 71 393			4	.Screw	.Skruv	5
0040		80 29 548			1	.Nut	.Mutter	5
0050		80 59 420			1	.Screw	.Skruv	5
0060		85 47 556		1)	1	.Cable harness	.Ledningsnät	5
0070		85 87 198			1	.Cable joint	.Ledningsförbindning	3
0080		95 26 609			1	.Switch	.Strömställare	3
0090		95 65 375			1	.Resistor	.Motstånd	5
0100		96 28 413			2	.Air inlet	.Luftintag	9
0110		96 28 447		LH	1	.Air outlet	.Luftutsläpp	9
0120		96 28 454		LH	1	.Fan unit	.Fläktenhet	4
0130		96 28 462		RH	1	.Fan unit	.Fläktenhet	4
0140		96 28 512		RH	1	.Air outlet	.Luftutsläpp	9
0150								
0160	2	86 05 065		FOR CARS WITHOUT HOLDER	1	Retainer kit	Hållarsats	6
0170		95 01 891			7	.Cover washer	.Täckbricka	6
0180		95 06 676			1	.Retainer	.Hållare	8
0190								
0200	3	86 05 073		FOR 8605057, NOT MODEL 1987	1	Cable harness kit	Ledningsnätssats	5
0210								
0220		79 71 880			4	.Tensioning band	.Spännband	4
0230		95 28 928			1	.Cable harness	.Ledningsnät	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

8C GROUP INDEX

Heating and ventilation system	6-A06
Complete sets:	6-B04

6-C02



Tool, Labels
Verktyg, Etiketter
Herramient, Etiquetas

CONTENTS.

Tool kit	9 : 5	6-C06
Labels		
Labels, part 1	9 : 7	6-C08
Labels, part 2	9 : 11	6-C12
Labels, part 3	9 : 13	6-C14

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C03

0042

0020
0040
0060
0180
0200
0220
0230
0240
0250
0260
0460
0480
0500
0520
0540
0560
0570
0580
0590
0600

INNEHÅLLSFÖRTECKNING

Verktygssats	9 : 5	6–C06
Etiketter		
Etiketter, del 1	9 : 7	6–C08
Etiketter, del 2	9 : 11	6–C12
Etiketter, del 3	9 : 13	6–C14

SUMARIO

Bolsa de herramientas	9 : 5	6–C06
Etiquetas		
Etiquetas, 1a parte	9 : 7	6–C08
Etiquetas, 2a parte	9 : 11	6–C12
Etiquetas, 3a parte	9 : 13	6–C14


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C06 Tool kit — Verktygsats

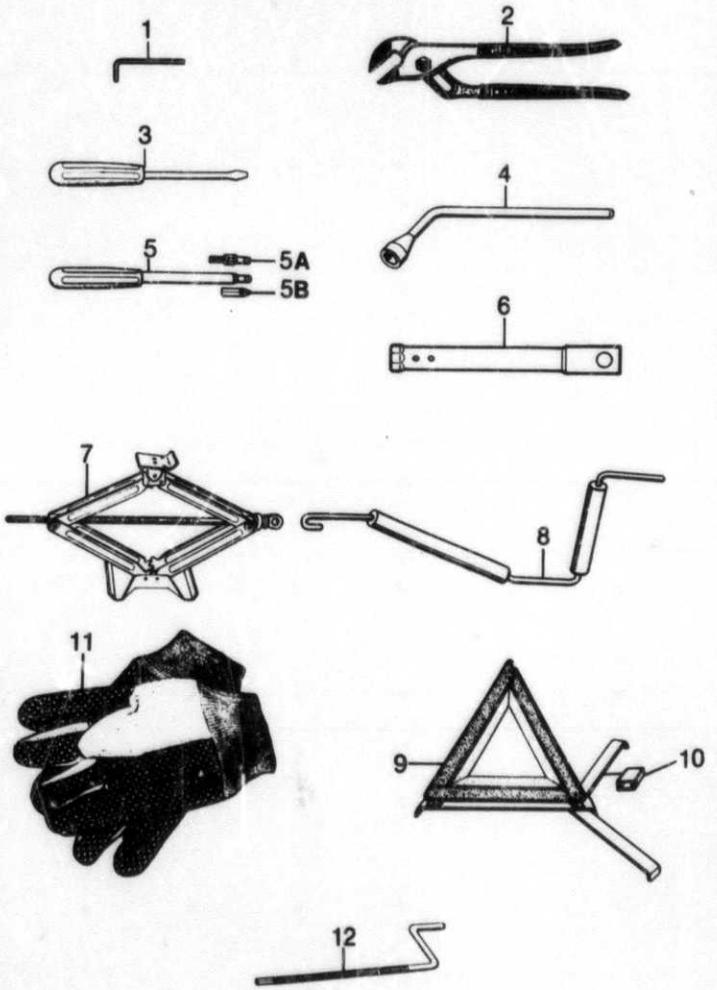

F1890 - 9000

	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0100								
0020	1	89 46 097			1	Key	Nyckel	5
0040						front seat	framstol	
0060	2	*89 61 732*		NLS - USE 4195954	1	Pliers	Tång	5
0080	3	70 37 492			1	Screwdriver	Skruvmejsel	5
0100	4	73 48 287		WHEEL NUT	1	Socket wrench	Hylsnyckel	4
0140	5	89 91 549		TORX	1	Screwdriver	Skruvmejsel	5
0150	5A	89 91 564		TORX 25/30	1	.Screwdriver insert	.Skruvmejselinsats	5
0155	5A	89 71 087		1988- TORX 10/20	1	Screwdriver insert	Skruvmejselinsats	5
0160	5B	91 01 056			1	Cross-recess screw driver	Krysspårmejsel	5
0180	6	*89 86 663*		NLS - USE 4193157	1	Spark plug spanner	Tändstiftnyckel	4
0200	7	89 61 740			1	Jack	Domkraft	4
0220	8	89 64 991			1	Crank	Vev	4
0240	9	42 66 003		-1987 (8539900)	1	Warning triangle	Varningstriangel	6
0242	9	95 65 920		1988	1	Warning triangle	Varningstriangel	6
0243	9	95 26 963		500), 1989-	1	Warning triangle	Varningstriangel	6
0250	10	95 66 316		1988	1	.Spacer	.Mellanlägg	6
0260	11			45/3012952	1	Work gloves	Skyddshandskar	
0270	12	95 48 363		500), 1989-	1	Crank	Vev	6
0280						front seat	framstol	

500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C08 Labels Part 1

Etiketter Del 1

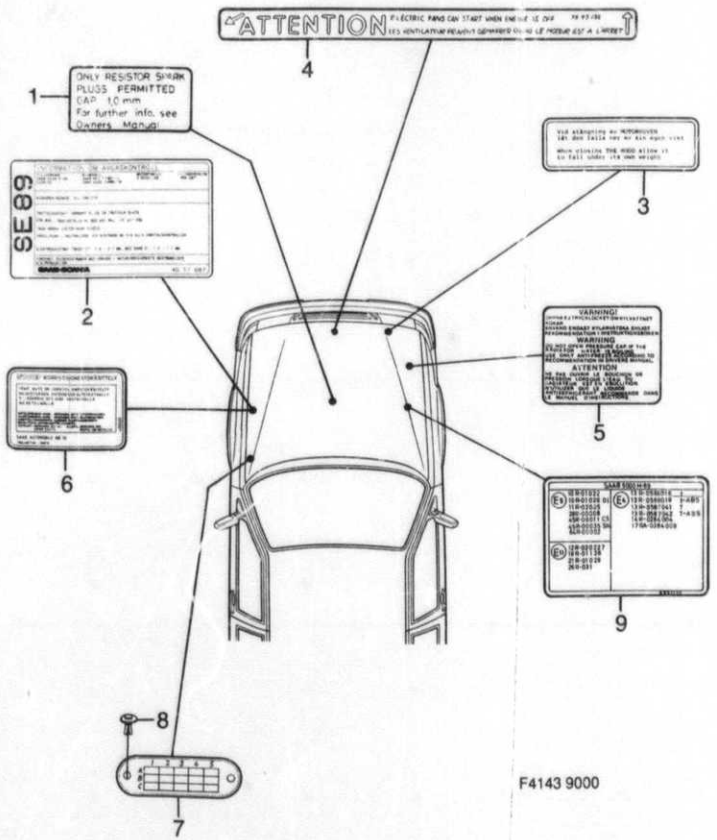

F4143 9000

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	74 87 937		SPARK-PLUGS DI	1	Label	Etikett	4
2	93 89 651		1985,11) SE TURBO	1	Label	Etikett	4
2	93 91 004		1986,11) SE TURBO	1	Label	Etikett	4
2	93 94 115		1987,11) SE TURBO	1	Label	Etikett	4
2	89 81 466		1988,11) SE TURBO	1	Label	Etikett	4
2	89 75 229		1987,11,15) SE TURBO	1	Label	Etikett	4
2	75 39 471		1988,11,15) SE TURBO	1	Label	Etikett	4
2	89 81 474		1988,11,15) SE TURBO DI	1	Label	Etikett	4
2	40 16 721		500,11,15)1989 SE TURBO DI	1	Label	Etikett	4
2	40 17 687		1989,11,15) SE TURBO DI	1	Label	Etikett	4
2	93 91 046		1986,11) SE I	1	Label	Etikett	4
2	93 94 107		1987,11) SE I	1	Label	Etikett	4
2	75 91 977		1988,11) SE I	1	Label	Etikett	4
2	75 90 284		1987,11,15) SE I	1	Label	Etikett	4
2	89 77 878		1988,11,15)SE,I(7591993)	1	Label	Etikett	4
2	89 79 866		500,11,15) 1989, SE, I	1	Label	Etikett	4
2	40 17 679		1989,11,15) SE, I	1	Label	Etikett	4
2	93 94 164		1987,11,15) CH TURBO	1	Label	Etikett	4
2	*89 78 728*		1988,11,15) CH TURBO NLS	1	Label	Etikett	4
2	75 91 712		1987,11,15) CH I	1	Label	Etikett	4
2	40 17 687		11)FROM FEB.1989-,DK TURBO	1	Label	Etikett	4
2	40 17 679		11)FROM FEB.1989-,DK I	1	Label	Etikett	4
2	93 91 061		1986,11) CA TURBO	1	Label	Etikett	4
2	93 94 131		1987,11) CA TURBO	1	Label	Etikett	4
2	75 39 539		1988,11) CA TURBO	1	Label	Etikett	4
2	89 82 597		1989,11) CA TURBO	1	Label	Etikett	4
2	93 94 180		1987,11) CA I	1	Label	Etikett	4
2	75 39 521		1988,11) CA I	1	Label	Etikett	4
2	89 79 924		1989,11) CA I	1	Label	Etikett	4
2	93 91 087		1986,11) US TURBO	1	Label	Etikett	4
2	93 94 149		1987,11) US, JP TURBO	1	Label	Etikett	4
2	89 78 447		1988,11) US, JP TURBO	1	Label	Etikett	4
2	89 82 217		1989,11) US, JP TURBO	1	Label	Etikett	4
2	93 94 206		1987,11) US JP I	1	Label	Etikett	4
2	89 79 288		1988,11) US JP I	1	Label	Etikett	4
2	89 79 940		1989,11) US JP I	1	Label	Etikett	4
2	93 91 020		1986,11) AU TURBO	1	Label	Etikett	4
2	93 94 123		1987,11) AU TURBO	1	Label	Etikett	4
2	75 39 513		1988,11) AU TURBO	1	Label	Etikett	4
2	89 82 464		1989,11) AU TURBO	1	Label	Etikett	4
2	93 94 198		1987,11) AU I	1	Label	Etikett	4
2	75 39 505		1988,11) AU I	1	Label	Etikett	4
2	89 82 456		1989,11) AU I	1	Label	Etikett	4
3	92 70 547		ENGINE HOOD	1	Label	Etikett	3
4	75 73 132		ELECTRIC FANS	1	Label	Etikett	3
4	91 50 004		ELECTRIC FANS, FI	1	Label	Etikett	3
5	93 41 439		2) COOLING WATER FI	1	Label	Etikett	5

2. Ch. H1010723-, H8000056-
11. Exhaust emission control device Avgasrening
15. With catalytic converter. Med katalytisk reaktor.
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C10 Labels Part 1

Etiketter Del 1

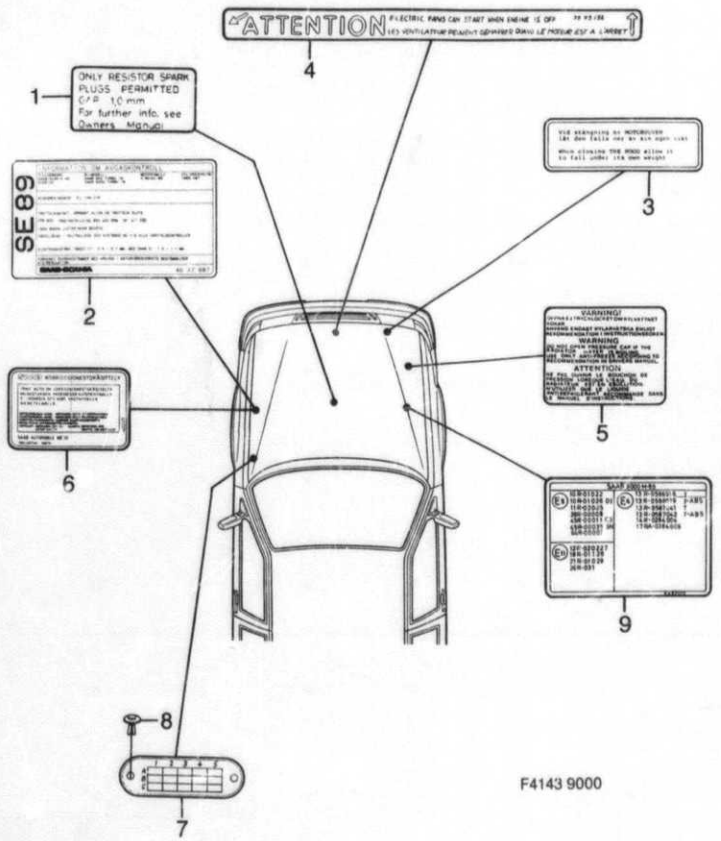

F4143 9000

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	5	*75 45 742*		1988-,7) COOLING WATER NLS - USE 4017596	1	Label	Etikett	5
0600	5	40 17 596		8)COOLING WATER	1	Label	Etikett	5
0620	6	69 38 864		1988-,5) CORR-PROTECTION FI	1	Label	Etikett	5
0640	6	40 13 132		6) CORR-PROTECTION FI	1	Label	Etikett	5
0660	7	92 83 722		CAMPAIGN	1	Sign	Skylt	5
0670	8	79 73 258			2	Rivet	Nit	5
0690	9	69 54 820		-1986 ECE-APPROVALS	1	Label	Etikett	6
0700	9	69 40 035		1987 ECE-APPROVALS	1	Label	Etikett	6
0710	9	69 62 484		1988 ECE-APPROVALS	1	Label	Etikett	6
0720	9	69 91 814		1988- ECE APPROVALS CARS WITH CATALYTIC REAKTOR	1	Label	Etikett	6
0750	9	69 92 010		1989-ECE-APPROVALS	1	Label	Etikett	6

5. Ch.-J1023120. -J2013352.
6. Ch.J1023121-, J2013353-.
7. Ch.-J1050384. -J2001946.
8. Ch. J1050385-, J2001947-.

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C12 Labels Part 2

Etiketter Del 2

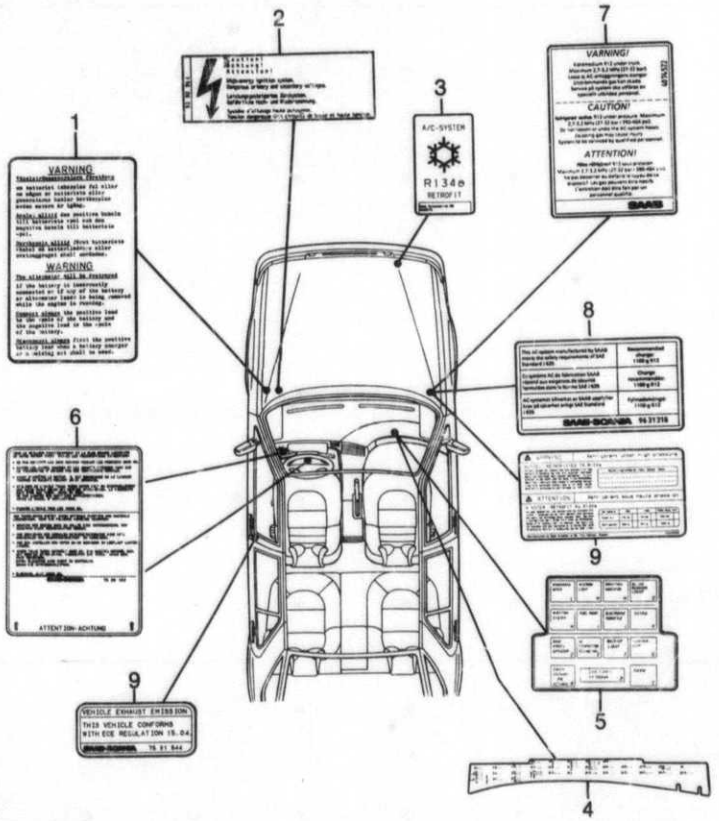

F7147 9000

0200	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		85 06 941		ALTERNATOR BOSCH SWEDISH-ENGLISH	1	Label	Etikett	5
0020									
0030	1		85 06 925		1986- ALTERNATOR BOSCH FI	1	Label	Etikett	6
0040									
0050									
0060	2		85 40 981		-1987 IGNITION SYSTEM SE,FI	1	Label	Etikett	6
0070									
0080	2		93 90 964		1988- IGNITION SYSTEM SE,FI,US,CA,JP,AU	1	Label	Etikett	4
0090									
0100									
0110	3	•	45 42 270		R134A RETROFIT	1	Label	Etikett	5
0120									
0130	4		*95 09 902*		1985 FUSE BOX NLS	1	Label	Etikett	5
0140	4		95 18 697		1986 FUSE BOX SE, FI, EU, ME	1	Label	Etikett	5
0150									
0160	4		95 23 960		1987 FUSE BOX SE FI, EU, ME	1	Label	Etikett	5
0170									
0180	4		91 22 193		1988 FUSE BOX SE, FI, EU, ME	1	Label	Etikett	5
0190									
0200	4		91 25 576		500), 1989- FUSE BOX SE, FI, EU, ME	1	Label	Etikett	5
0210									
0220	4		95 18 994		1986 FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0230	4		95 23 978		1987 FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0240	4		91 22 219		1988 FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0250	4		91 25 592		1989- FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0260	4		95 18 663		1986 FUSE BOX, US,CA,JP	1	Label	Etikett	5
0270	4		95 23 986		1987 FUSE BOX, US,CA,JP	1	Label	Etikett	5
0280	4		91 22 201		1988 FUSE BOX, US,CA,JP	1	Label	Etikett	5
0290	4		91 25 584		1989- FUSE BOX, US,CA,JP	1	Label	Etikett	5
0300									
0310	5		95 18 473		1986-1987 RELAY	1	Label	Etikett	5
0320	5		95 23 945		1987 RELAY GB,FE,AU	1	Label	Etikett	5
0330	5		95 63 511		1988 RELAY	1	Label	Etikett	5
0340	5		91 21 880		500), 1989- RELAY	1	Label	Etikett	5
0350									
0360	6		75 28 417		-1988 TURBO, SE	1	Label	Etikett	4
0370	6		75 28 169		1987-88 TURBO,EU	1	Label	Etikett	4
0380	6		75 28 177		-1988 TURBO, CA,AU, GB,ME,FE	1	Label	Etikett	4
0390									
0400	6		75 31 692		-1986, TURBO, US	1	Label	Etikett	4
0410	6		75 91 167		1987-1988, TURBO, US	1	Label	Etikett	4
0420									
0430	7		96 31 300		FREONGAS	1	Label	Etikett	5
0440									
0450	8		96 31 318		500), 1989- FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0460									
0470									
0480	9	•	45 42 262		R134A, RETROFIT, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0490									
0500									
0510	10	•	75 31 544		ECE REGULATION, FE	1	Label	Etikett	4

500. Also valid for SE 1988B. Gäller även för SE 1988B.


MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6--C14 Labels Part 3 — Etiketter Del 3

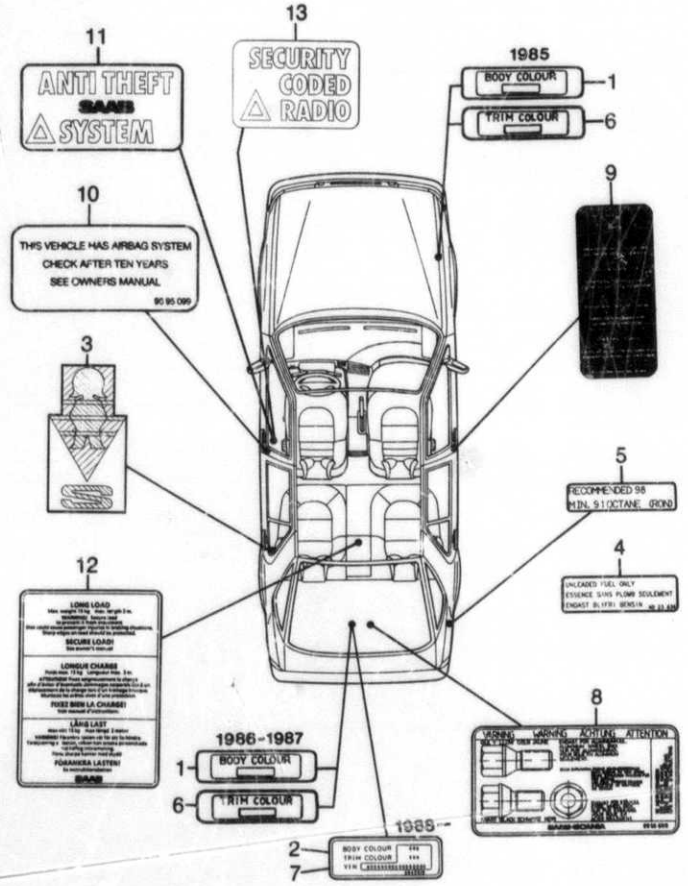

F7148 9000

0250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0580	1	92 90 230		-1987,12) 112	1	Label	Etikett	6
0590	1	92 94 646		-1987,12) 117	1	Label	Etikett	6
0600	1	69 13 396		-1987,12) 120	1	Label	Etikett	6
0610	1	92 90 255		-1987,12) 127	1	Label	Etikett	6
0620	1	69 13 388		-1987,12) 129	1	Label	Etikett	6
0630	1	92 90 297		-1987,12) 153	1	Label	Etikett	6
0640	1	69 13 222		-1987,12) 156	1	Label	Etikett	6
0650	1	69 26 216		-1987,12) 158	1	Label	Etikett	6
0660	1	69 26 224		-1987,12) 159	1	Label	Etikett	6
0670	1	92 90 339		-1987,12) 170	1	Label	Etikett	6
0680	1	92 90 347		-1987,12) 172	1	Label	Etikett	6
0690	1	69 24 831		-1987,12) 188	1	Label	Etikett	6
0700	1	69 35 688		-1987,12) 198	1	Label	Etikett	6
0710	1	69 58 151		-1987,12) 200	1	Label	Etikett	6
0720	1	69 58 169		-1987,12) 201	1	Label	Etikett	6
0730	1	69 58 177		-1987,12) 202	1	Label	Etikett	6
0740	1	69 58 185		-1987,12) 203	1	Label	Etikett	6
0750	1	69 58 193		-1987,12) 204	1	Label	Etikett	6
0760	1	69 58 201		-1987,12) 205	1	Label	Etikett	6
0770	1	69 58 219		-1987,12) 206	1	Label	Etikett	6
0780	1	*69 42 093*		-1987,12) 212 NLS	1	Label	Etikett	6
0790	1	*69 42 114*		-1987,12) 213 NLS	1	Label	Etikett	6
0795								
0800	2	69 42 619		1988-,12,14) BLANK, REPLACEMENT LABEL	1	Label	Etikett	6
0810								
0815								
1070	3	84 45 637		16), CHILD LOCK	1	Label	Etikett	5
1075	3	69 56 684		17), CHILD LOCK	1	Label	Etikett	5
1080								
1120	4	*93 62 534*		13) CA,US,AU NLS - USE 4023636	1	Label	Etikett	4
1140	4	75 37 764		1987-,13) SE I, TURBO WITH CATALYTIC REAKTOR	1	Label	Etikett	4
1160	4	75 37 988		1987-,13) EU I, TURBO WITH CATALYTIC REAKTOR	1	Label	Etikett	4
1180	4	40 22 141		13) FROM FEB. 1989-, DK	1	Label	Etikett	4
1190	4	83 30 953		1987-,13) I US, AU	1	Label	Etikett	4
1200	4	83 30 953		1989-,13) JP	1	Label	Etikett	4
1210								
1270	5	93 91 111		FUEL 98/91	1	Label	Etikett	4
1280	5	75 39 711		1988- FUEL 95/91 SE,EU,I,TURBO WITH CATALYTIC REAKTOR	1	Label	Etikett	4
1290								
1300								
1305								
1310	6	96 81 842		-1987,14) A12	1	Label	Etikett	6
1320	6	96 81 826		-1987,14) B12	1	Label	Etikett	6
1330	6	96 81 834		-1987,14) C12	1	Label	Etikett	6
1340	6	96 81 867		-1987,14) E12	1	Label	Etikett	6
1350	6	98 62 269		-1987,14) E13	1	Label	Etikett	6
1360	6	98 62 285		-1987,14) C13	1	Label	Etikett	6
1370	6	98 62 293		-1987,14) D13	1	Label	Etikett	6
1380	6	98 62 301		-1987,14) E13	1	Label	Etikett	6
1390	6	*97 06 870*		-1987,14) C20 NLS - USE 6942619	1	Label	Etikett	6
1400	6	*97 31 316*		-1987,14) C21 NLS - USE 6942619	1	Label	Etikett	6
1410	6	*97 38 303*		-1987,14) C22 NLS - USE 6942619	1	Label	Etikett	6

12. Body colour Body colour
13. Unleaded fuel only Endast blyfri bensin
14. Trim colour Trim colour
16. Ch. --H1013339, --H8000537
17. Ch. H1013340--, H8000538--

MASTER INDEX


0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08

6-C16 Labels Part 3

Etiketter Del 3

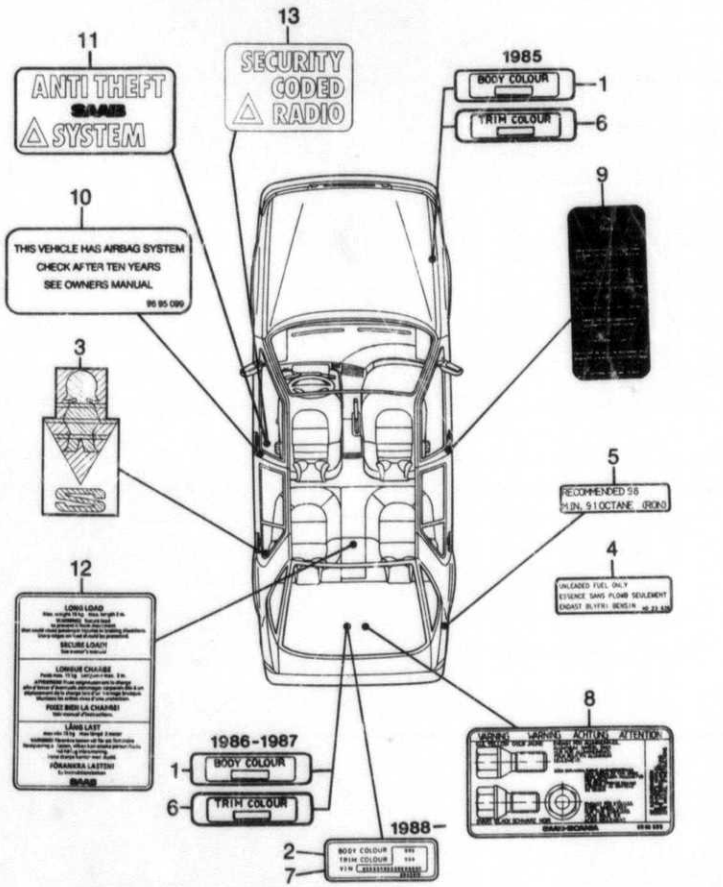

F7148 9000

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1420	6	*98 08 130*		-1987,14) C23 NLS - USE 6942619	1	Label	Etikett	6
1430	6	*98 62 368*		-1987,14) A23 NLS - USE 6942619	1	Label	Etikett	6
1440	6	*98 62 384*		-1987,14) C23 NLS - USE 6942619	1	Label	Etikett	6
1450	6	*98 62 392*		-1987,14) D23 NLS - USE 6942619	1	Label	Etikett	6
1460	6	*98 62 400*		-1987,14) E23 NLS - USE 6942619	1	Label	Etikett	6
1470	6	*98 62 418*		-1987,14) A33 NLS - USE 6942619	1	Label	Etikett	6
1480	6	96 19 404		-1987,14) B33	1	Label	Etikett	6
1490	6	*98 62 426*		-1987,14) C33 NLS - USE 6942619	1	Label	Etikett	6
1500	6	*98 62 434*		-1987,14) E33 NLS - USE 6942619	1	Label	Etikett	6
1510	7	69 42 619		1988-,14) BLANK, REPLACEMENT LABEL	1	Label	Etikett	6
1530	8	89 66 699		WHEEL BOLT	1	Label	Etikett	5
1620	9	96 72 221		-1988 SEAT BELT PRETENSION	2	Label	Etikett	5
1640	9	*40 33 395*		1989-,9)SEAT BELT PRETENSION SE,EU,GB,US,CA AND CARS WITH AIR-BAG NLS - USE 4078911	2	Label	Etikett	5
1680	9	40 78 911		10) SEAT BELT PRETENSION SE,EU,GB,US,CA AND CARS WITH AIR-BAG	2	Label	Etikett	5
1710	9	40 36 174		1989- SEAT BELT PRETENSION FI	2	Label	Etikett	5
1760	10	96 95 099		AIR-BAG SYSTEM	1	Label	Etikett	5
1780	11	95 68 049		1989- ANTI-THEFT SYSTEM US	2	Label	Etikett	5
1840	12	95 46 961		500), 1989- LONG LOAD	1	Label	Etikett	5
1860	13	• 95 67 579		500), 1989-, SECURITY CODED RADIO	2	Label	Etikett	5

9. Ch.--K1020330, --K2011679, --K8001033
10. Ch.K1020331--, K2011680--, K8001034--
14. Trim colour Trim colour
500. Also valid for SE 1988B. Gäller även för SE 1988B.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

9 GROUP INDEX

Tool kit	6-C06
Labels	6-C08



Numerical register
Nummerregister
Indice numérico

6-D02 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
14 87 222	04	021	3-H22
17 54 506	02	035	1-C12
21 96 772	02	029	1-C06
21 96 772	02	031	1-C08
29 61 357	02	027	1-C04
29 61 357	02	031	1-C08
30 37 140	02	019	1-B20
34 89 937	02	035	1-C12
40 00 113	05	013	4-A14
40 00 139	06	009	4-C10
40 00 188	05	017	4-A18
40 00 204	05	019	4-A20
40 00 360	06	007	4-C08
40 00 485	03A	097	2-E02
40 00 667	04	035	3-I12
40 00 816	07	007	4-E08
40 00 996	07	013	4-E14
40 01 004	07	009	4-E10
40 01 004	07	013	4-E14
40 01 111	06	005	4-C06
40 01 400	06	011	4-C12
40 01 426	07	009	4-E10
40 01 426	07	013	4-E14
40 01 434	07	009	4-E10
40 01 434	07	013	4-E14
40 01 756	03A	097	2-E02
40 01 814	05	031	4-B08
40 01 970	05	019	4-A20
40 01 996	05	019	4-A20
40 02 010	05	019	4-A20
40 02 051	05	031	4-B08
40 02 069	05	015	4-A16
40 02 093	05	013	4-A14
40 02 143	05	005	4-A06
40 02 150	05	005	4-A06
40 02 226	06	011	4-C12
40 02 234	06	011	4-C12
40 02 242	06	011	4-C12
40 02 259	06	011	4-C12
40 02 267	05	013	4-A14
40 02 267	05	031	4-B08
40 02 622	06	009	4-C10
40 02 630	06	009	4-C10
40 02 648	06	007	4-C08
40 02 671	05	005	4-A06
40 02 689	05	005	4-A06
40 02 747	04	067	3-J20
40 02 861	05	013	4-A14
40 02 861	05	015	4-A16
40 02 861	05	031	4-B08
40 02 861	05	033	4-B10
40 02 895	05	013	4-A14
40 02 895	05	031	4-B08
40 02 911	04	035	3-I12
40 02 945	06	009	4-C10
40 02 960	06	009	4-C10
40 02 994	06	011	4-C12
40 03 083	05	031	4-B08
40 03 117	05	015	4-A16
40 03 117	05	033	4-B10
40 03 141	05	013	4-A14
40 03 141	05	031	4-B08
40 03 158	05	013	4-A14
40 03 158	05	033	4-B10
40 03 166	05	033	4-B10
40 03 174	05	033	4-B10
40 03 182	05	013	4-A14
40 03 182	05	033	4-B10
40 03 364	06	009	4-C10
40 03 372	06	009	4-C10
40 03 380	06	009	4-C10
40 03 398	06	009	4-C10
40 04 206	06	011	4-C12
40 05 153	08A	067	4-H20
40 05 195	08A	013	4-F14
40 05 203	08A	031	4-G08
40 05 211	08A	031	4-G08
40 05 666	08A	015	4-F16
40 05 740	08A	015	4-F16
40 05 948	08A	027	4-G04
40 05 948	08A	029	4-G06
40 06 219	08A	015	4-F16
40 06 292	08A	015	4-F16
40 06 433	08A	027	4-G04
40 06 441	08A	015	4-F16
40 06 557	08A	067	4-H20
40 07 324	08A	029	4-G06
40 07 332	08A	029	4-G06
40 08 959	08A	133	4-K14
40 09 700	08A	023	4-F24
40 09 767	08A	023	4-F24
40 09 775	08A	023	4-F24
40 10 260	08A	065	4-H18
40 10 336	08A	097	4-J02
40 10 351	08A	101	4-J06
40 10 369	08A	101	4-J06
40 10 377	08A	103	4-J08
40 10 385	08A	103	4-J08
40 10 393	08A	101	4-J06
40 10 401	08A	101	4-J06
40 10 419	08A	103	4-J08
40 10 427	08A	103	4-J08
40 10 435	08A	101	4-J06
40 10 443	08A	101	4-J06
40 10 450	08A	103	4-J08
40 10 468	08A	103	4-J08
40 10 476	08A	101	4-J06
40 10 484	08A	101	4-J06
40 10 492	08A	103	4-J08
40 10 500	08A	103	4-J08
40 10 518	08A	101	4-J06
40 10 526	08A	101	4-J06
40 10 534	08A	101	4-J06
40 10 542	08A	101	4-J06
40 10 559	08A	101	4-J06
40 10 567	08A	101	4-J06
40 10 575	08A	103	4-J08
40 10 583	08A	103	4-J08
40 10 625	08A	113	4-J18
40 10 724	08A	105	4-J10
40 10 732	08A	105	4-J10
40 11 300	03A	049	2-C02
40 11 698	08A	063	4-H16
40 11 698	08A	067	4-H20
40 12 639	03A	067	2-C20
40 13 017	03A	029	2-B06
40 13 017	03A	033	2-B10
40 13 025	03A	029	2-B06
40 13 025	03A	033	2-B10
40 13 132	09	009	6-C10
40 13 165	03A	047	2-B24
40 13 256	08A	113	4-J18
40 13 371	03A	055	2-C08
40 13 454	08A	079	4-I08
40 13 454	08A	125	4-K06
40 13 579	03A	055	2-C08
40 13 603	08A	091	4-I20
40 13 603	08A	127	4-K08
40 14 155	08A	091	4-I20
40 14 163	08A	091	4-I20
40 14 171	08A	095	4-I24
40 14 189	08A	095	4-I24
40 14 288	08A	095	4-I24
40 14 296	08A	095	4-I24
40 14 619	03A	057	2-C10
40 14 619	03A	059	2-C12
40 14 619	03A	061	2-C14
40 15 764	02	047	1-C24
40 16 721	09	007	6-C08
40 17 299	03A	015	2-A16
40 17 596	09	009	6-C10
40 17 679	09	007	6-C08
40 17 687	09	007	6-C08
40 18 495	02	059	1-D12
40 18 586	02	067	1-D20
40 19 998	02	059	1-D12
40 19 998	02	147	1-H04
40 20 848	02	059	1-D12
40 20 848	02	147	1-H04
40 22 141	09	013	6-C14
40 22 588	02	099	1-F04
40 22 588	02	103	1-F08
40 22 588	02	143	1-G24
40 22 588	02	147	1-H04
40 22 596	02	099	1-F04
40 22 596	02	103	1-F08
40 22 596	02	143	1-G24
40 22 596	02	145	1-H02
40 22 596	02	147	1-H04
40 22 604	02	097	1-F02
40 22 604	02	099	1-F04
40 22 604	02	101	1-F06
40 22 604	02	103	1-F08
40 22 612	02	103	1-F08
40 22 612	02	143	1-G24
40 22 612	02	145	1-H02
40 22 612	02	147	1-H04
40 23 636	02	143	1-G24
40 23 636	02	145	1-H02
40 23 636	02	147	1-H04
40 24 956	02	101	1-F06
40 24 972	02	097	1-F02
40 24 998	02	097	1-F02
40 25 078	04	043	3-I20
40 25 086	04	043	3-I20
40 25 086	04	081	3-K10
40 25 094	04	057	3-J10
40 25 136	04	061	3-J14
40 25 136	04	081	3-K10
40 25 219	04	055	3-J08
40 25 342	04	053	3-J06
40 26 274	04	061	3-J14
40 26 282	04	061	3-J14
40 26 407	04	047	3-I24
40 26 449	04	043	3-I20
40 26 449	04	081	3-K10
40 26 639	04	047	3-I24
40 26 704	04	059	3-J12
40 26 753	04	043	3-I20
40 26 761	04	055	3-J08
40 26 829	04	059	3-J12
40 26 860	04	047	3-I24
40 26 936	04	079	3-K08
40 27 488	02	105	1-F10
40 27 488	02	113	1-F18
40 27 595	02	109	1-F14
40 27 793	04	007	3-H08
40 28 239	04	061	3-J14
40 28 742	04	009	3-H10
40 28 759	08C	019	6-A20
40 28 767	08C	027	6-B04
40 28 775	02	005	1-B06
40 28 791	04	007	3-H08
40 28 833	04	007	3-H08
40 29 286	02	119	1-F24
40 29 294	02	119	1-F24
40 29 302	02	119	1-F24
40 29 310	02	119	1-F24
40 29 328	02	119	1-F24
40 29 336	02	119	1-F24
40 29 344	02	119	1-F24
40 29 575	04	031	3-I08
40 30 201	08B	021	5-A22
40 30 219	08B	021	5-A22
40 30 276	08B	239	5-J24
40 30 284	08B	239	5-J24
40 30 342	08B	235	5-J20
40 30 813	08B	027	5-B04
40 30 821	08B	027	5-B04
40 30 847	08B	027	5-B04
40 31 563	08B	171	5-H04
40 31 563	08B	195	5-I04
40 31 563	08B	203	5-I12
40 31 563	08B	211	5-I20
40 31 563	08B	217	5-J02
40 31 563	08B	245	5-K06
40 31 563	08B	247	5-K08
40 32 181	08B	015	5-A16
40 32 421	08B	169	5-H02
40 32 439	08B	239	5-J24

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D03 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 32 447	08B	239	5-J24
40 32 454	08B	239	5-J24
40 32 462	08B	239	5-J24
40 32 470	08B	237	5-J22
40 32 488	08B	237	5-J22
40 32 496	08B	237	5-J22
40 32 504	08B	237	5-J22
40 32 520	08B	237	5-J22
40 32 538	08B	237	5-J22
40 32 546	08B	237	5-J22
40 32 553	08B	237	5-J22
40 32 561	08B	237	5-J22
40 32 579	08B	237	5-J22
40 32 595	08B	237	5-J22
40 32 603	08B	239	5-J24
40 32 611	08B	243	5-K04
40 32 629	08B	243	5-K04
40 32 637	08B	243	5-K04
40 32 645	08B	243	5-K04
40 32 652	08B	243	5-K04
40 32 660	08B	243	5-K04
40 32 934	08B	201	5-I10
40 33 395	09	015	6-C16
40 33 486	08B	201	5-I10
40 33 676	08B	025	5-B02
40 33 684	08B	025	5-B02
40 33 692	08B	025	5-B02
40 33 700	08B	025	5-B02
40 33 726	08B	025	5-B02
40 33 734	08B	027	5-B04
40 33 742	08B	025	5-B02
40 33 759	08B	025	5-B02
40 33 783	08B	191	5-H24
40 33 791	08B	191	5-H24
40 33 809	08B	191	5-H24
40 33 817	08B	191	5-H24
40 33 833	08B	191	5-H24
40 33 841	08B	191	5-H24
40 33 858	08B	191	5-H24
40 33 866	08B	191	5-H24
40 33 882	08B	191	5-H24
40 33 890	08B	177	5-H10
40 33 890	08B	191	5-H24
40 33 908	08B	191	5-H24
40 33 916	08B	191	5-H24
40 33 932	08B	191	5-H24
40 33 940	08B	191	5-H24
40 33 957	08B	191	5-H24
40 33 965	08B	191	5-H24
40 34 047	08B	197	5-I06
40 34 047	08B	247	5-K08
40 34 054	08B	197	5-I06
40 34 054	08B	247	5-K08
40 34 369	08B	235	5-J20
40 35 614	08B	167	5-G24
40 35 622	08B	169	5-H02
40 35 747	08B	215	5-I24
40 36 174	09	015	6-C16
40 36 299	08B	201	5-I10
40 37 529	08B	215	5-I24
40 37 537	08B	215	5-I24
40 37 735	08A	053	4-H06
40 37 735	03A	059	4-H12
40 38 204	08B	079	5-D08
40 38 212	08B	079	5-D08
40 38 238	08B	081	5-D10
40 38 253	08B	071	5-C24
40 38 261	08B	071	5-C24
40 38 279	08B	073	5-D02
40 38 287	08B	075	5-D04
40 38 303	08B	079	5-D08
40 38 311	08B	079	5-D08
40 38 329	08B	079	5-D08
40 38 840	09B	079	5-D08
40 38 857	08B	079	5-D08
40 38 865	08B	079	5-D08
40 38 873	08B	079	5-D08
40 38 881	08B	079	5-D08
40 39 368	08B	079	5-D08
40 39 376	08B	079	5-D08
40 39 517	08B	079	5-D08
40 39 624	08B	079	5-D08
40 41 083	08B	019	5-A20
40 41 166	08B	009	5-A10
40 42 933	08B	163	5-G20
40 42 941	08B	163	5-G20
40 42 958	08B	163	5-G20
40 42 966	08B	163	5-G20
40 42 974	08B	241	5-K02
40 42 974	08B	247	5-K08
40 43 394	08B	187	5-H20
40 43 576	08B	233	5-J18
40 43 626	08B	233	5-J18
40 43 899	08B	233	5-J18
40 48 260	08B	207	5-I16
40 48 260	08B	213	5-I22
40 48 278	08B	207	5-I16
40 48 278	08B	213	5-I22
40 48 401	08B	163	5-G20
40 48 757	08B	181	5-H14
40 48 765	08B	183	5-H16
40 51 504	08B	035	5-B12
40 51 652	08B	137	5-F18
40 51 660	08B	137	5-F18
40 51 678	08B	137	5-F18
40 53 716	08B	035	5-B12
40 53 773	08B	037	5-B14
40 54 912	08A	035	4-G12
40 54 979	08B	139	5-F20
40 54 987	08B	247	5-K08
40 59 671	08B	247	5-K08
40 60 067	03A	097	2-E02
40 60 083	02	107	1-F12
40 60 091	02	107	1-F12
40 60 133	03A	059	2-C12
40 60 133	03A	061	2-C14
40 60 158	03A	151	2-G08
40 60 190	03A	131	2-F12
40 60 349	03A	151	2-G08
40 60 398	03A	051	2-C04
40 60 406	03A	051	2-C04
40 61 362	03A	075	2-D04
40 61 388	03A	151	2-G08
40 61 891	03A	005	2-A06
40 61 917	03A	073	2-D02
40 62 063	03A	097	2-E02
40 62 782	06	007	4-C08
40 63 384	03A	075	2-D04
40 63 400	03A	087	2-D16
40 63 418	03A	087	2-D16
40 63 426	03A	087	2-D16
40 63 434	03A	087	2-D16
40 63 459	02	107	1-F12
40 63 640	03A	077	2-D06
40 63 640	03A	093	2-D22
40 63 657	03A	077	2-D06
40 63 681	03A	139	2-F20
40 63 830	03A	131	2-F12
40 65 397	03A	085	2-D14
40 65 405	03A	085	2-D14
40 66 296	03A	151	2-G08
40 68 946	03A	085	2-D14
40 68 961	03A	085	2-D14
40 70 140	08C	011	6-A12
40 70 157	08C	011	6-A12
40 70 215	08C	011	6-A12
40 70 223	08C	011	6-A12
40 70 926	08C	019	6-A20
40 71 106	08C	005	6-A06
40 71 171	08C	013	6-A14
40 71 189	08C	011	6-A12
40 71 940	08C	027	6-B04
40 71 999	08C	019	6-A20
40 72 237	08C	021	6-A22
40 72 435	08C	017	6-A18
40 72 450	08C	017	6-A18
40 72 468	08C	017	6-A18
40 72 476	08C	017	6-A18
40 74 340	08C	027	6-B04
40 74 431	08C	029	6-B06
40 77 004	08B	027	5-B04
40 77 020	08B	027	5-B04
40 77 038	08B	027	5-B04
40 77 079	08B	013	5-A14
40 77 087	08B	013	5-A14
40 78 911	09	015	6-C16
40 79 604	08B	011	5-A12
40 80 206	08B	005	5-A06
40 80 214	08B	005	5-A06
40 80 248	08B	005	5-A06
40 84 554	03A	071	2-C24
40 84 554	03A	175	2-H08
40 88 209	08A	067	4-H20
40 88 415	08A	073	4-I02
40 89 389	08A	079	4-I08
40 89 389	08A	125	4-K06
40 89 462	08A	039	4-G16
40 90 825	08A	107	4-J12
40 90 981	03A	093	2-D22
40 92 482	08A	069	4-H22
40 92 490	08A	069	4-H22
40 99 628	08A	031	4-G08
40 99 636	03A	031	4-G08
41 03 958	06	017	4-C18
41 03 966	06	017	4-C18
41 03 974	06	017	4-C18
41 03 982	06	017	4-C18
41 03 990	06	015	4-C16
41 04 014	06	015	4-C16
41 04 014	06	017	4-C18
41 04 022	06	015	4-C16
41 04 162	06	015	4-C16
41 04 493	06	015	4-C16
41 04 519	06	015	4-C16
41 04 527	06	017	4-C18
41 04 535	06	015	4-C16
41 04 550	06	015	4-C16
41 04 592	06	015	4-C16
41 05 045	06	019	4-C20
41 05 052	06	015	4-C16
41 05 060	06	015	4-C16
41 05 433	05	027	4-B04
41 05 565	06	015	4-C16
41 05 573	06	017	4-C18
41 05 581	06	017	4-C18
41 05 599	06	017	4-C18
41 06 373	07	007	4-E08
41 07 116	05	005	4-A06
41 07 116	05	027	4-B04
41 07 793	05	009	4-A10
41 07 793	05	033	4-B10
41 07 801	05	033	4-B10
41 13 999	08C	027	6-B04
41 17 602	08C	027	6-B04
41 18 311	04	063	3-J16
41 18 949	04	007	3-H08
41 18 964	08C	027	6-B04
41 19 244	04	079	3-K08
41 19 376	04	081	3-K10
41 22 123	04	027	3-I04
41 22 156	04	027	3-I04
41 38 590	08B	163	5-G20
41 41 636	08B	219	5-J04
41 41 776	08B	137	5-F18
41 56 014	02	101	1-F06
41 56 030	02	101	1-F06
41 56 055	02	097	1-F02
41 56 071	02	097	1-F02
41 60 099	03A	015	2-A16
41 60 123	03A	015	2-A16
41 60 149	03A	015	2-A16
41 61 493	02	059	1-D12
41 61 766	02	059	1-D12
41 79 933	08C	027	6-B04
41 95 822	04	035	3-I12
41 95 855	05	013	4-A14
41 95 855	05	035	4-B12
41 95 863	05	013	4-A14
41 95 897	05	013	4-A14
41 95 897	05	035	4-B12
41 95 905	05	013	4-A14

6-D04 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 95 905	05	035	4-B12
41 96 267	05	027	4-B04
41 96 275	05	027	4-B04
41 96 317	05	009	4-A10
41 96 317	05	027	4-B04
41 98 941	05	027	4-B04
41 99 958	05	027	4-B04
42 50 262	08A	127	4-K08
42 50 320	08A	127	4-K08
42 50 460	08A	127	4-K08
42 51 856	03A	029	2-B06
42 51 864	03A	029	2-B06
42 64 941	09B	157	5-G14
42 64 958	09B	157	5-G14
42 66 003	09	005	6-C06
42 67 738	09B	031	5-B08
42 83 032	06	023	4-C24
42 83 164	08C	027	6-B04
42 84 212	02	117	1-F22
42 93 882	08A	023	4-F24
42 94 229	08A	027	4-G04
42 94 237	08A	027	4-G04
42 94 583	08A	025	4-G02
43 03 186	08A	045	4-G22
43 03 186	08A	049	4-H02
43 04 143	08A	127	4-K08
43 05 330	08A	065	4-H18
43 05 884	08A	127	4-K08
43 18 382	08C	027	6-B04
43 18 531	08C	027	6-B04
43 18 606	08C	027	6-B04
43 18 606	08C	029	6-B06
43 19 570	08C	027	6-B04
43 19 588	08C	027	6-B04
43 19 984	08C	027	6-B04
43 19 992	08C	017	6-A18
43 50 476	03A	081	2-D10
43 53 538	03A	177	2-H10
43 53 702	03A	127	2-F08
43 53 702	09A	135	2-F16
43 54 817	03A	177	2-H10
43 56 291	08C	027	6-B04
43 56 598	02	105	1-F10
43 56 606	02	105	1-F10
43 56 879	03A	009	2-A10
43 56 887	03A	009	2-A10
43 56 887	03A	011	2-A12
43 57 067	08C	027	6-B04
43 68 627	06	009	4-C10
43 81 463	03A	029	2-B06
43 81 471	03A	029	2-B06
43 81 489	03A	029	2-B06
43 82 253	08C	017	6-A18
43 82 404	08C	027	6-B04
43 82 610	08C	027	6-B04
43 82 628	08C	029	6-B06
43 82 636	08C	027	6-B04
43 82 735	08C	027	6-B04
43 82 750	08C	027	6-B04
43 83 261	08C	017	6-A18
43 83 279	08C	017	6-A18
43 83 287	08C	017	6-A18
43 83 303	08C	017	6-A18
43 83 337	08C	017	6-A18
43 83 360	08C	017	6-A18
43 85 001	04	007	3-H08
43 85 019	04	007	3-H08
43 85 027	04	007	3-H08
43 85 035	04	007	3-H08
43 93 799	02	099	1-F04
43 93 799	02	103	1-F08
43 93 807	02	099	1-F04
43 93 807	02	103	1-F08
43 93 807	02	147	1-H04
43 93 823	02	147	1-H04
43 93 831	02	147	1-H04
44 24 172	03A	097	2-E02
44 40 020	02	099	1-F04
44 40 020	02	103	1-F08
44 40 020	02	147	1-H04
44 48 049	03A	057	2-C10
44 48 049	03A	059	2-C12
44 48 049	03A	061	2-C14
44 48 056	03A	057	2-C10
44 48 056	03A	059	2-C12
44 48 056	03A	061	2-C14
44 48 064	03A	057	2-C10
44 48 064	03A	059	2-C12
44 48 064	03A	061	2-C14
44 48 064	03A	173	2-H06
44 77 386	04	059	3-J12
44 78 046	04	059	3-J12
45 42 262	09	011	6-C12
45 42 270	09	011	6-C12
69 11 861	08A	073	4-I02
69 11 895	08A	073	4-I02
69 13 222	09	013	6-C14
69 13 388	09	013	6-C14
69 13 396	09	013	6-C14
69 15 706	08A	073	4-I02
69 19 658	08A	009	4-F10
69 21 142	08A	107	4-J12
69 21 142	08A	109	4-J14
69 24 831	09	013	6-C14
69 26 216	09	013	6-C14
69 26 224	09	013	6-C14
69 30 572	08A	033	4-G10
69 30 572	08A	045	4-G22
69 30 572	08A	051	4-H04
69 35 688	09	013	6-C14
69 37 981	08A	093	4-I22
69 38 864	09	009	6-C10
69 38 906	08A	099	4-J04
69 38 914	08A	099	4-J04
69 39 755	08A	039	4-G16
69 39 805	08A	009	4-F10
69 39 839	08A	009	4-F10
69 40 035	09	009	6-C10
69 41 017	08A	029	4-G06
69 42 098	09	013	6-C14
69 42 114	09	013	6-C14
69 42 429	08A	079	4-I08
69 42 619	09	013	6-C14
69 42 619	09	015	6-C16
69 42 742	08A	111	4-J16
69 42 775	03A	141	2-F22
69 43 559	08A	133	4-K14
69 43 575	08A	073	4-I02
69 43 583	08A	073	4-I02
69 43 773	08A	111	4-J16
69 44 623	08A	107	4-J12
69 44 649	08A	107	4-J12
69 45 315	08A	041	4-G18
69 45 356	08A	041	4-G18
69 45 380	08A	041	4-G18
69 45 497	08A	065	4-H18
69 45 505	08A	029	4-G06
69 45 711	08A	067	4-H20
69 45 760	08A	067	4-H20
69 48 566	08A	093	4-I22
69 48 574	08A	091	4-I20
69 48 590	08A	127	4-K08
69 48 632	08A	057	4-H10
69 48 640	08A	057	4-H10
69 48 681	08A	073	4-I02
69 48 855	08A	091	4-I20
69 48 871	08A	093	4-I22
69 48 871	08A	133	4-K14
69 48 897	08A	103	4-J08
69 48 905	08A	103	4-J08
69 48 962	08A	053	4-H06
69 48 962	08A	057	4-H10
69 48 970	08A	053	4-H06
69 48 970	08A	057	4-H10
69 51 974	08A	065	4-H18
69 54 069	08A	069	4-H22
69 54 077	08A	069	4-H22
69 54 085	08A	069	4-H22
69 54 093	08A	069	4-H22
69 54 101	08A	069	4-H22
69 54 119	08A	069	4-H22
69 54 127	08A	069	4-H22
69 54 135	08A	069	4-H22
69 54 176	08A	077	4-I06
69 54 184	08A	077	4-I06
69 54 325	08A	061	4-H14
69 54 333	08A	057	4-H10
69 54 341	08A	057	4-H10
69 54 820	09	009	6-C10
69 54 861	08A	079	4-I08
69 54 879	08A	079	4-I08
69 54 929	08A	079	4-I08
69 54 952	08A	109	4-J14
69 55 009	08A	109	4-J14
69 55 033	08A	109	4-J14
69 55 173	08A	113	4-J18
69 55 256	08A	111	4-J16
69 55 298	08A	111	4-J16
69 55 306	08A	065	4-H18
69 55 322	08A	011	4-F12
69 55 371	08A	041	4-G18
69 55 405	08A	041	4-G18
69 55 413	08A	041	4-G18
69 55 447	08A	041	4-G18
69 55 512	08A	013	4-F14
69 55 520	08A	015	4-F16
69 55 561	08A	019	4-F20
69 55 652	08A	041	4-G18
69 55 660	08A	043	4-G20
69 55 678	08A	023	4-F24
69 55 744	08A	015	4-F16
69 55 892	08A	091	4-I20
69 55 900	08A	091	4-I20
69 56 189	09A	063	4-H16
69 56 189	08A	065	4-H18
69 56 247	08A	079	4-I08
69 56 254	08A	079	4-I08
69 56 262	08A	061	4-H14
69 56 270	08A	061	4-H14
69 56 288	08A	061	4-H14
69 56 288	08A	129	4-K10
69 56 403	08A	069	4-H22
69 56 411	08A	057	4-H10
69 56 429	08A	057	4-H10
69 56 593	08A	039	4-G16
69 56 650	08A	091	4-I20
69 56 668	08A	057	4-H10
69 56 676	08A	057	4-H10
69 56 684	09	013	6-C14
69 56 700	08A	095	4-I24
69 56 734	08A	091	4-I20
69 56 734	08A	127	4-K08
69 56 783	08A	103	4-J08
69 56 791	08A	065	4-H18
69 56 957	08A	065	4-H18
69 57 344	08A	017	4-F18
69 57 393	08A	035	4-G12
69 57 674	08A	013	4-F14
69 57 708	08A	043	4-G20
69 57 815	08A	079	4-I08
69 57 823	08A	079	4-I08
69 57 831	08A	079	4-I08
69 57 849	08A	107	4-J12
69 57 864	08A	111	4-J16
69 57 880	08A	111	4-J16
69 57 898	08A	015	4-F16
69 57 955	08A	027	4-G04
69 58 003	08A	007	4-F08
69 58 011	08A	007	4-F08
69 58 151	09	013	6-C14
69 58 169	09	013	6-C14
69 58 177	09	013	6-C14
69 58 185	09	013	6-C14
69 58 193	09	013	6-C14
69 58 201	09	013	6-C14
69 58 219	09	013	6-C14
69 58 284	08A	061	4-H14
69 58 938	08A	041	4-G18
69 58 987	08A	009	4-F10
69 58 995	08A	017	4-F18

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D05 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 59 001	08A	017	4-F18
69 59 027	08A	037	4-G14
69 59 100	08A	077	4-I06
69 59 142	08A	109	4-J14
69 59 142	08A	113	4-J18
69 59 175	08A	077	4-I06
69 59 225	08A	011	4-F12
69 59 258	08A	011	4-F12
69 59 266	08A	011	4-F12
69 59 274	08A	011	4-F12
69 59 282	08A	011	4-F12
69 59 712	08A	113	4-J18
69 59 720	08A	113	4-J18
69 59 753	08A	035	4-G12
69 59 787	08A	013	4-F14
69 59 795	08A	013	4-F14
69 59 795	08A	015	4-F16
69 59 803	08A	043	4-G20
69 59 811	08A	041	4-G18
69 60 066	08A	103	4-J08
69 60 090	08A	039	4-G16
69 60 116	08A	101	4-J06
69 60 132	08A	101	4-J06
69 60 140	08A	101	4-J06
69 60 157	08A	101	4-J06
69 60 272	08A	073	4-I02
69 60 280	08A	073	4-I02
69 60 298	08A	061	4-H14
69 60 298	08A	065	4-H18
69 60 306	08A	061	4-H14
69 60 785	08A	045	4-G22
69 60 785	08A	049	4-H02
69 60 785	08A	133	4-K14
69 60 793	08A	045	4-G22
69 60 793	08A	049	4-H02
69 60 793	08A	133	4-K14
69 60 926	08A	079	4-I08
69 60 975	08A	009	4-F10
69 61 049	08A	013	4-F14
69 61 049	08A	015	4-F16
69 61 064	08A	017	4-F18
69 61 213	08A	035	4-G12
69 61 239	08A	035	4-G12
69 61 254	08A	035	4-G12
69 61 270	08A	105	4-J10
69 61 288	03A	005	2-A06
69 61 577	08A	041	4-G18
69 61 700	08A	045	4-G22
69 61 700	08A	049	4-H02
69 61 700	08A	133	4-K14
69 61 718	08A	045	4-G22
69 61 718	08A	049	4-H02
69 61 718	08A	133	4-K14
69 61 783	08A	013	4-F14
69 61 791	08A	013	4-F14
69 61 858	08A	039	4-G16
69 61 866	08A	065	4-H18
69 61 874	08A	065	4-H18
69 61 916	08A	109	4-J14
69 61 924	08A	109	4-J14
69 61 940	08A	023	4-F24
69 61 981	08A	039	4-G16
69 61 999	08A	099	4-J04
69 62 047	08A	103	4-J08
69 62 054	08A	103	4-J08
69 62 062	08A	031	4-G08
69 62 070	08A	031	4-G08
69 62 302	08A	111	4-J16
69 62 484	09	009	6-C10
69 62 526	08A	065	4-H18
69 62 534	08A	065	4-H18
69 62 542	08A	009	4-F10
69 62 567	08A	065	4-H18
69 62 583	08A	109	4-J14
69 62 591	08A	109	4-J14
69 62 609	08A	023	4-F24
69 62 617	08A	023	4-F24
69 62 625	08A	009	4-F10
69 62 708	08A	081	4-I10
69 62 708	08A	133	4-K14
69 62 807	08A	093	4-I22
69 62 807	08A	133	4-K14
69 62 815	08A	093	4-I22
69 62 815	08A	133	4-K14
69 62 823	08A	039	4-G16
69 63 029	08A	065	4-H18
69 63 045	08A	103	4-J08
69 63 235	08A	091	4-I20
69 63 243	08A	073	4-I02
69 63 300	08A	071	4-H24
69 63 318	08A	071	4-H24
69 63 367	08A	073	4-I02
69 63 375	08A	073	4-I02
69 63 805	08A	017	4-F18
69 63 813	08A	015	4-F16
69 63 847	08A	013	4-F14
69 63 854	08A	013	4-F14
69 63 862	08A	013	4-F14
69 63 870	08A	013	4-F14
69 63 904	08A	009	4-F10
69 63 912	08A	009	4-F10
69 63 920	08A	009	4-F10
69 63 953	08A	065	4-H18
69 63 961	08A	029	4-G06
69 63 987	08A	065	4-H18
69 63 995	08A	065	4-H18
69 73 002	08A	029	4-G06
69 73 010	08A	029	4-G06
69 73 028	08A	029	4-G06
69 73 036	08A	029	4-G06
69 73 044	08A	029	4-G06
69 73 051	08A	029	4-G06
69 73 069	08A	023	4-F24
69 73 077	08A	023	4-F24
69 73 218	08A	035	4-G12
69 73 242	08A	111	4-J16
69 73 317	08A	065	4-H18
69 73 325	08A	043	4-G20
69 73 333	08A	043	4-G20
69 73 440	08A	009	4-F10
69 73 515	08A	011	4-F12
69 73 549	08A	029	4-G06
69 73 556	08A	009	4-F10
69 73 564	08A	009	4-F10
69 73 689	08A	125	4-K06
69 73 697	08A	125	4-K06
69 73 788	08A	035	4-G12
69 73 788	08A	125	4-K06
69 73 804	08A	035	4-G12
69 73 812	08A	009	4-F10
69 73 820	08A	009	4-F10
69 73 838	08A	009	4-F10
69 73 846	08A	023	4-F24
69 73 853	08A	023	4-F24
69 73 945	08A	113	4-J18
69 74 000	08A	065	4-H18
69 74 679	08A	015	4-F16
69 74 711	08A	015	4-F16
69 75 403	08A	067	4-H20
69 75 460	08A	029	4-G06
69 75 510	08A	029	4-G06
69 75 783	08A	045	4-G22
69 75 791	08A	045	4-G22
69 75 908	08A	049	4-H02
69 75 916	08A	049	4-H02
69 76 229	08A	029	4-G06
69 76 237	08A	029	4-G06
69 76 278	08A	007	4-F08
69 76 369	08A	065	4-H18
69 91 004	08A	053	4-H06
69 91 004	08A	057	4-H10
69 91 012	08A	053	4-H06
69 91 012	08A	057	4-H10
69 91 079	08A	077	4-I06
69 91 087	08A	095	4-I24
69 91 095	08A	095	4-I24
69 91 103	08A	095	4-I24
69 91 111	08A	095	4-I24
69 91 244	08A	091	4-I20
69 91 244	08A	093	4-I22
69 91 244	08A	127	4-K08
69 91 244	08A	133	4-K14
69 91 327	08A	101	4-J06
69 91 335	08A	101	4-J06
69 91 418	08A	101	4-J06
69 91 491	08A	127	4-K08
69 91 509	08A	127	4-K08
69 91 533	08A	065	4-H18
69 91 673	08A	073	4-I02
69 91 814	09	009	6-C10
69 91 855	08A	061	4-H14
69 91 855	08A	065	4-H18
69 92 010	09	009	6-C10
69 92 028	08A	097	4-J22
69 92 028	08A	133	4-K14
69 92 184	08A	061	4-H14
69 92 184	08A	065	4-H18
69 92 325	08A	111	4-J16
69 92 325	08A	113	4-J18
69 92 838	08A	079	4-I08
69 92 838	08A	129	4-K10
69 92 895	08A	073	4-I02
69 92 903	08A	073	4-I02
69 93 570	08A	061	4-H14
69 93 570	08A	065	4-H18
70 37 492	09	005	6-C06
70 38 342	02	047	1-C24
70 38 342	08A	023	4-F24
70 38 342	08A	033	4-G10
70 45 776	08B	005	5-A06
70 48 465	04	069	3-J22
70 48 473	04	067	3-J20
70 48 473	04	069	3-J22
70 81 328	04	013	3-H14
70 81 328	08C	019	6-A20
70 84 197	03A	043	2-B20
70 84 197	03A	045	2-B22
70 84 197	03A	051	2-C04
70 84 197	03A	053	2-C06
70 88 073	08A	113	4-J18
70 88 073	08B	037	5-B14
70 90 640	08B	171	5-H04
71 08 491	03A	027	2-B04
71 08 491	03A	075	2-D04
71 08 491	03A	147	2-G04
71 16 452	03A	151	2-G08
71 17 880	03B	111	3-E16
71 17 880	03B	117	3-E22
71 17 880	03B	125	3-F06
71 17 880	03B	133	3-F14
71 54 719	03A	043	2-B20
71 54 719	03A	045	2-B22
71 54 727	03A	039	2-B16
71 54 727	03A	043	2-B20
71 54 727	03A	045	2-B22
71 55 021	03B	009	3-A10
71 55 021	03B	023	3-A24
71 55 021	03B	043	3-B20
71 55 021	03B	067	3-C20
71 55 021	03B	093	3-D22
71 55 039	03B	005	3-A06
71 55 039	03B	017	3-A18
71 55 039	03B	037	3-B14
71 55 039	03B	059	3-C12
71 55 039	03B	111	3-E16
71 55 039	03B	117	3-E22
71 55 039	03B	125	3-F06
71 55 039	03B	133	3-F14
71 55 047	03B	117	3-E22
71 55 047	03B	125	3-F06
71 55 047	03B	133	3-F14
71 55 062	03B	041	3-B18
71 55 062	03B	053	3-C06
71 55 062	03B	063	3-C16
71 55 062	03B	089	3-D18
71 55 062	03B	097	3-E02
71 55 062	03B	111	3-E16
71 55 062	03B	117	3-E22
71 55 062	03B	125	3-F06
71 55 062	03B	133	3-F14
71 55 062	03B	143	3-F24
71 55 096	03B	005	3-A06
71 55 096	03B	093	3-D22
71 55 104	03B	021	3-A22
71 55 112	03B	005	3-A06
71 55 112	03B	017	3-A18
71 55 112	03B	037	3-B14
71 55 112	03B	059	3-C12
71 55 112	03B	085	3-D14
71 55 120	03B	005	3-A06
71 55 120	03B	017	3-A18
71 55 120	03B	037	3-B14
71 55 120	03B	059	3-C12
71 55 120	03B	085	3-D14
71 55 146	03B	115	3-E20
71 55 146	03B	123	3-F04
71 55 146	03B	131	3-F12
71 55 146	03B	139	3-F20
71 55 146	03B	149	3-G06
71 55 153	03B	005	3-A06
71 55 153	03B	021	3-A22
71 55 153	03B	037	3-B14
71 55 153	03B	041	3-B18
71 55 153	03B	059	3-C12
71 55 153	03B	063	3-C16
71 55 153	03B	085	3-D14
71 55 153	03B	089	3-D18
71 55 153	03B	111	3-E16
71 55 153	03B	117	3-E22
71 55 153	03B	125	3-F06
71 55 153	03B	133	3-F14
71 55 203	03B	143	3-F24
71 55 203	03B	115	3-E20
71 55 203	03B	123	3-F04
71 55 203	03B	131	3-F12
71 55 203	03B	139	3-F20
71 55 203	03B	149	3-G06
71 55 211	03B	111	3-E16
71 55 211	03B	117	3-E22
71 55 211	03B	125	3-F06
71 55 211	03B	133	3-F14
71 55 211	03B	143	3-F24
71 55 229	03B	111	3-E16
71 55 229	03B	117	3-E22
71 55 229	03B	125	3-F06
71 55 229	03B	133	3-F14
71 55 229	03B	143	3-F24
71 55 237	03B	111	3-E16
71 55 237	03B	117	3-E22
71 55 237	03B	125	3-F06
71 55 237	03B	133	3-F14

6-D06 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
71 55 062	03B	041	3-B18
71 55 062	03B	053	3-C06
71 55 062	03B	063	3-C16
71 55 062	03B	089	3-D18
71 55 062	03B	097	3-E02
71 55 062	03B	111	3-E16
71 55 062	03B	117	3-E22
71 55 062	03B	125	3-F06
71 55 062	03B	133	3-F14
71 55 062	03B	143	3-F24
71 55 096	03B	005	3-A06
71 55 096	03B	093	3-D22
71 55 104	03B	021	3-A22
71 55 112	03B	005	3-A06
71 55 112	03B	017	3-A18
71 55 112	03B	037	3-B14
71 55 112	03B	059	3-C12
71 55 112	03B	085	3-D14
71 55 120	03B	005	3-A06
71 55 120	03B	017	3-A18
71 55 120	03B	037	3-B14
71 55 120	03B	059	3-C12
71 55 120	03B	085	3-D14
71 55 146	03B	115	3-E20
71 55 146	03B	123	3-F04
71 55 146	03B	131	3-F12
71 55 146	03B	139	3-F20
71 55 146	03B	149	3-G06
71 55 153	03B	005	3-A06
71 55 153	03B	021	3-A22
71 55 153	03B	037	3-B14
71 55 153	03B	041	3-B18
71 55 153	03B	059	3-C12
71 55 153	03B	063	3-C16
71 55 153	03B	085	3-D14
71 55 153	03B	089	3-D18
71 55 153	03B	111	3-E16
71 55 153	03B	117	3-E22
71 55 153	03B	125	3-F06
71 55 153	03B	133	3-F14
71 55 203	03B	143	3-F24
71 55 203	03B	115	3-E20
71 55 203	03B	123	3-F04
71 55 203	03B	131	3-F12
71 55 203	03B	139	3-F20
71 55 203	03B	149	3-G06
71 55 211	03B	111	3-E16
71 55 211	03B	117	3-E22
71 55 211	03B	125	3-F06
71 55 211	03B	133	3-F14
71 55 211	03B	143	3-F24
71 55 229	03B	111	3-E16
71 55 229	03B	117	3-E22
71 55 229	03B	125	3-F06
71 55 229	03B	133	3-F14
71 55 229	03B	143	3-F24
71 55 237	03B	111	3-E16
71 55 237	03B	117	3-E22
71 55 237	03B	125	3-F06
71 55 237	03B	133	3-F14
73 98 423	03A	043	2-B20
73 98 423	03A	045	2-B22
73 98 423	03A	095	2-D24
73 98 423	08A	075	4-I04
73 98 423	08A	079	4-I08
73 98 423	08A	125	4-K06
73 98 456	03A	017	2-A18
73 98 464	02	119	1-F24
73 98 464	03A	139	2-F20
73 98 464	05	025	4-B02
73 98 506	08A	127	4-K08
73 98 555	08A	041	4-G18
73 98 621	02	089	1-E18
73 98 688	08A	009	4-F10
73 98 712	02	133	1-G14
73 98 761	08A	045	4-G22
73 98 761	08A	049	4-H02
73 98 787	06	011	4-C12
73 98 803	02	099	1-F04
73 98 803	02	103	1-F08
73 98 829	08A	039	4-G16
73 98 829	08A	041	4-G18
73 98 845	08B	239	5-J24
73 98 852	06	011	4-C12
73 98 852	08C	027	6-B04
73 98 878	08A	111	4-J16
73 98 886	08A	063	4-H16
73 98 894	02	117	1-F22
73 98 936	08B	155	5-G12
73 98 936	08B	159	5-G16
73 98 936	08B	163	5-G20
73 98 944	03A	075	2-D04
73 98 944	03A	139	2-F20
73 98 977	03A	075	2-D04
73 98 977	03A	139	2-F20
73 99 033	03A	097	2-E02
73 99 116	02	119	1-F24
73 99 140	05	019	4-A20
73 99 181	08A	039	4-G16
73 99 199	04	009	3-H10
73 99 207	08C	007	6-A08
73 99 215	08B	015	5-A16
73 99 223	08A	039	4-G16
73 99 223	08A	041	4-G18
73 99 256	03A	087	2-D16
73 99 264	08B	105	5-E10
73 99 264	08B	107	5-E12
73 99 264	08B	111	5-E16
73 99 264	08B	117	5-E22
73 99 264	08B	119	5-E24
73 99 264	08B	123	5-F04
73 99 264	08B	125	5-F06
73 99 264	08B	129	5-F10
73 99 264	08B	133	5-F14
73 99 272	02	103	1-F08
73 99 272	04	061	3-J14
73 99 330	07	005	4-E06
73 99 348	03A	141	2-F22
73 99 355	02	063	1-D16
73 99 421	08B	015	5-A16
73 99 447	08A	065	4-H18
73 99 454	03A	081	2-D10
73 99 454	08A	005	4-F06
73 99 454	08A	009	4-F10
73 99 454	08A	011	4-F12
73 99 454	08A	021	4-F22
73 99 454	08A	029	4-G06
73 99 470	08A	075	4-I04
73 99 470	08A	077	4-I06
73 99 470	08A	135	4-K16
73 99 488	08A	075	4-I04
73 99 488	08A	077	4-I06
73 99 488	08A	135	4-K16
73 99 496	08B	215	5-I24
73 99 520	03A	081	2-D10
73 99 520	03A	141	2-F22
73 99 579	08B	005	5-A06
73 99 587	03A	081	2-D10
73 99 603	02	119	1-F24
73 99 603	02	143	1-G24
73 99 611	02	119	1-F24
73 99 629	08A	065	4-H18
73 99 652	04	061	3-J14
73 99 660	04	061	3-J14
73 99 686	08B	037	5-B14
73 99 694	08B	037	5-B14
73 99 710	08A	061	4-H14
73 99 793	08B	243	5-K04
73 99 884	08A	107	4-J12
73 99 884	08A	109	4-J14
73 99 892	08A	061	4-H14
73 99 934	06	011	4-C12
74 78 027	02	087	1-E16
74 78 027	02	141	1-G22
74 78 142	03A	133	2-F14
74 80 056	03A	027	2-B04
74 80 429	02	007	1-B08
74 80 429	02	011	1-B12
74 80 429	02	137	1-G18
74 80 437	02	007	1-B08
74 80 437	02	011	1-B12
74 80 437	02	137	1-G18
74 80 445	02	007	1-B08
74 80 445	02	011	1-B12
74 80 445	02	137	1-G18
74 80 452	02	007	1-B08
74 80 452	02	011	1-B12
74 80 452	02	137	1-G18
74 80 460	02	007	1-B08
74 80 460	02	011	1-B12
74 80 460	02	137	1-G18
74 80 932	02	035	1-C12
74 81 021	02	063	1-D16
74 81 062	02	035	1-C12
74 81 088	02	035	1-C12
74 81 336	02	063	1-D16
74 81 385	03A	025	2-B02
74 81 393	03A	025	2-A24
74 81 682	02	063	1-E12

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D07 Numerical register Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
74 81 690	02	083	1-E12
74 81 708	02	083	1-E12
74 82 540	03A	019	2-A20
74 82 540	03A	027	2-B04
74 82 714	02	071	1-D24
74 82 748	02	073	1-E02
74 83 035	02	129	1-G10
74 83 183	02	079	1-E08
74 83 514	03A	027	2-B04
74 83 522	02	133	1-G14
74 83 910	02	077	1-E06
74 83 928	02	077	1-E06
74 83 936	02	077	1-E06
74 83 944	02	077	1-E06
74 83 951	02	077	1-E06
74 84 140	02	077	1-E06
74 84 272	03A	027	2-B04
74 84 306	03A	027	2-B04
74 84 314	02	071	1-D24
74 84 348	02	073	1-E02
74 84 363	02	073	1-E02
74 84 405	02	137	1-G18
74 84 439	03A	025	2-B02
74 84 454	02	013	1-B14
74 84 504	03A	017	2-A18
74 84 512	03A	017	2-A18
74 84 520	03A	019	2-A20
74 84 801	02	009	1-B10
74 84 850	02	129	1-G10
74 84 850	02	131	1-G12
74 84 868	03A	025	2-B02
74 84 876	03A	025	2-B02
74 84 884	03A	025	2-B02
74 84 892	03A	025	2-B02
74 84 892	03A	173	2-H06
74 84 900	02	009	1-B10
74 84 934	02	027	1-C04
74 84 934	02	031	1-C08
74 85 550	02	061	1-D14
74 85 576	02	133	1-G14
74 85 808	03A	027	2-B04
74 85 998	02	009	1-B10
74 86 061	02	129	1-G10
74 86 079	02	129	1-G10
74 86 095	02	129	1-G10
74 86 129	02	065	1-D18
74 86 624	02	083	1-E12
74 86 814	03A	019	2-A20
74 86 905	02	063	1-D16
74 86 913	02	063	1-D16
74 86 921	02	063	1-D16
74 86 939	02	063	1-D16
74 86 954	02	063	1-D16
74 87 127	02	061	1-D14
74 87 143	02	061	1-D14
74 87 432	02	077	1-E06
74 87 440	02	077	1-E06
74 87 457	02	077	1-E06
74 87 572	02	019	1-B20
74 87 648	02	077	1-E06
74 87 796	02	077	1-E06
74 87 804	02	077	1-E06
74 87 937	09	007	6-C08
74 87 952	03A	019	2-A20
74 95 179	08C	017	6-A18
74 96 029	08A	075	4-I04
74 96 029	08A	077	4-I06
74 96 029	08A	135	4-K16
74 96 037	08A	075	4-I04
74 96 037	08A	077	4-I06
74 96 037	08A	135	4-K16
74 96 045	04	051	3-J04
74 96 045	04	077	3-K06
74 96 052	04	049	3-J02
74 96 052	04	077	3-K06
74 96 060	04	049	3-J02
74 96 060	04	077	3-K06
74 96 078	04	057	3-J10
74 96 078	04	077	3-K06
74 96 086	04	051	3-J04
74 96 086	04	077	3-K06
74 96 094	04	029	3-I06
74 96 094	04	041	3-I18
74 96 094	04	045	3-I22
74 96 094	04	049	3-J02
74 96 094	04	051	3-J04
74 96 094	04	057	3-J10
74 96 094	04	059	3-J12
74 96 094	04	063	3-J16
74 96 094	04	079	3-K08
74 96 102	04	029	3-I06
74 96 102	04	041	3-I18
74 96 102	04	045	3-I22
74 96 102	04	049	3-J02
74 96 102	04	051	3-J04
74 96 102	04	057	3-J10
74 96 102	04	059	3-J12
74 96 102	04	063	3-J16
74 96 102	04	079	3-K08
74 96 110	04	041	3-I18
74 96 110	04	045	3-I22
74 96 110	04	081	3-K10
74 96 128	04	041	3-I18
74 96 128	04	045	3-I22
74 96 128	04	081	3-K10
74 96 276	04	035	3-I12
74 96 292	02	025	1-C02
74 97 001	08A	117	4-J22
74 97 019	08A	115	4-J20
74 97 019	08A	119	4-J24
74 97 043	08A	091	4-I20
74 97 043	08A	127	4-K08
74 97 050	08A	091	4-I20
74 97 050	08A	127	4-K08
74 97 084	08A	127	4-K08
75 00 069	02	007	1-B08
75 00 069	02	011	1-B12
75 00 069	02	137	1-G18
75 00 085	02	007	1-B08
75 00 085	02	009	1-B10
75 00 127	02	019	1-B20
75 00 150	02	019	1-B20
75 00 218	02	125	1-G06
75 00 507	03A	021	2-A22
75 00 697	02	019	1-B20
75 00 713	02	007	1-B08
75 00 713	02	009	1-B10
75 00 739	02	023	1-B24
75 01 216	03A	021	2-A22
75 01 216	03A	023	2-A24
75 01 216	03A	025	2-B02
75 01 348	02	007	1-B08
75 01 349	02	009	1-B10
75 01 380	02	019	1-B20
75 01 398	02	027	1-C04
75 01 398	02	031	1-C08
75 01 430	02	031	1-C08
75 01 604	02	023	1-B24
75 01 612	02	075	1-E04
75 01 612	02	079	1-E08
75 02 263	02	035	1-C12
75 02 537	02	129	1-G10
75 03 469	02	007	1-B08
75 03 592	03A	017	2-A18
75 03 600	03A	017	2-A18
75 03 709	02	007	1-B08
75 03 709	02	011	1-B12
75 03 725	02	007	1-B08
75 03 725	02	011	1-B12
75 03 832	03A	017	2-A18
75 04 004	02	089	1-E18
75 04 483	03A	017	2-A18
75 04 483	03A	173	2-H06
75 04 491	03A	017	2-A18
75 04 491	03A	173	2-H06
75 04 509	03A	017	2-A18
75 04 509	03A	173	2-H06
75 04 517	03A	017	2-A18
75 04 517	03A	173	2-H06
75 04 525	03A	017	2-A18
75 04 673	02	075	1-E04
75 04 673	02	077	1-E06
75 04 749	02	007	1-B08
75 04 749	02	009	1-B10
75 04 897	02	089	1-E18
75 04 897	02	091	1-E20
75 05 134	02	007	1-B08
75 05 134	02	009	1-B10
75 05 241	02	139	1-G20
75 05 423	02	075	1-E04
75 05 423	02	077	1-E06
75 05 845	02	019	1-B20
75 06 264	02	075	1-E04
75 06 264	02	077	1-E06
75 06 652	02	089	1-E18
75 06 652	02	091	1-E20
75 06 793	03A	017	2-A18
75 07 072	02	065	1-D18
75 07 080	02	075	1-E04
75 07 080	02	077	1-E06
75 07 247	02	123	1-G04
75 07 700	02	035	1-C12
75 07 700	02	141	1-G22
75 07 973	02	071	1-D24
75 07 973	02	073	1-E02
75 07 973	02	089	1-E18
75 07 973	02	091	1-E20
75 08 393	02	089	1-E18
75 08 468	02	007	1-B08
75 08 468	02	009	1-B10
75 08 476	02	007	1-B08
75 08 476	02	011	1-B12
75 08 690	02	019	1-B20
75 08 708	02	027	1-C04
75 08 708	02	031	1-C08
75 08 955	02	027	1-C04
75 08 955	02	031	1-C08
75 09 102	02	025	1-C02
75 09 896	02	075	1-E04
75 11 256	04	061	3-J14
75 11 751	02	047	1-C24
75 11 975	02	007	1-B08
75 11 975	02	011	1-B12
75 12 015	02	007	1-B08
75 12 015	02	011	1-B12
75 14 375	02	011	1-B12
75 15 190	02	007	1-B08
75 15 190	02	011	1-B12
75 15 190	02	137	1-G18
75 15 208	02	069	1-D22
75 15 208	02	071	1-D24
75 15 208	02	073	1-E02
75 15 547	02	007	1-B08
75 15 547	02	009	1-B10
75 15 588	02	137	1-G18
75 15 596	02	137	1-G18
75 15 885	02	069	1-D22
75 15 885	02	071	1-D24
75 15 885	02	073	1-E02
75 15 893	02	123	1-G04
75 16 248	02	015	1-B16
75 16 529	02	007	1-B08
75 16 529	02	009	1-B10
75 16 784	02	027	1-C04
75 16 792	02	083	1-E12
75 16 859	02	015	1-B16
75 16 974	02	075	1-E04
75 16 974	02	079	1-E08
75 17 006	02	069	1-D22
75 17 048	02	007	1-B08
75 17 048	02	011	1-B12
75 17 113	02	019	1-B20
75 17 188	02	027	1-C04
75 17 345	02	139	1-G20
75 17 444	02	069	1-D22
75 17 444	02	071	1-D24
75 17 477	02	133	1-G14
75 17 741	02	035	1-C12
75 17 758	02	129	1-G10
75 17 766	02	129	1-G10

6-D08 Numerical register Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 17 782	02	029	1-C06
75 17 782	02	031	1-C08
75 18 335	02	007	1-B08
75 18 335	02	009	1-B10
75 18 491	02	075	1-E04
75 18 491	02	079	1-E08
75 18 517	02	075	1-E04
75 18 525	02	127	1-G08
75 18 533	02	075	1-E04
75 18 640	02	019	1-B20
75 18 661	02	063	1-D16
75 18 848	02	019	1-B20
75 18 970	02	035	1-C12
75 18 970	02	141	1-G22
75 18 996	02	085	1-E14
75 18 996	02	087	1-E16
75 18 996	02	101	1-F06
75 18 996	02	137	1-G18
75 18 996	02	141	1-G22
75 19 010	02	085	1-E14
75 19 010	02	087	1-E16
75 19 085	03A	021	2-A22
75 19 085	03A	023	2-A24
75 19 085	03A	025	2-B02
75 19 101	03A	021	2-A22
75 19 101	03A	023	2-A24
75 19 101	03A	025	2-B02
75 19 119	03A	021	2-A22
75 19 119	03A	023	2-A24
75 19 127	03A	021	2-A22
75 19 127	03A	023	2-A24
75 19 135	03A	021	2-A22
75 19 135	03A	023	2-A24
75 19 135	03A	025	2-B02
75 19 143	03A	021	2-A22
75 19 143	03A	023	2-A24
75 19 143	03A	025	2-B02
75 19 150	03A	021	2-A22
75 19 226	02	093	1-E22
75 19 309	03A	021	2-A22
75 19 416	02	071	1-D24
75 19 416	02	073	1-E02
75 19 432	02	095	1-E24
75 19 432	02	097	1-F02
75 19 432	02	099	1-F04
75 19 432	02	129	1-G10
75 19 432	02	141	1-G22
75 19 499	02	075	1-E04
75 19 697	02	013	1-B14
75 19 697	02	125	1-G06
75 19 788	02	125	1-G06
75 20 018	02	125	1-G06
75 20 026	02	125	1-G06
75 20 034	02	125	1-G06
75 20 042	02	089	1-E18
75 20 042	02	091	1-E20
75 20 042	02	141	1-G22
75 20 141	02	089	1-E18
75 20 224	02	129	1-G10
75 20 224	02	141	1-G22
75 20 240	02	007	1-B08
75 20 372	02	027	1-C04
75 20 380	02	007	1-B08
75 20 380	02	011	1-B12
75 20 380	02	137	1-G18
75 20 513	02	023	1-B24
75 20 521	02	023	1-B24
75 20 539	02	023	1-B24
75 20 927	02	023	1-B24
75 20 935	02	023	1-B24
75 20 943	02	023	1-B24
75 20 950	02	023	1-B24
75 20 968	02	023	1-B24
75 20 984	02	023	1-B24
75 20 992	02	023	1-B24
75 21 008	02	023	1-B24
75 21 016	02	023	1-B24
75 21 024	02	023	1-B24
75 21 065	02	075	1-E04
75 21 073	02	085	1-E14
75 21 081	02	087	1-E16
75 21 131	03A	021	2-A22
75 21 222	02	007	1-B08
75 21 222	02	009	1-B10
75 21 230	02	069	1-D22
75 21 230	02	071	1-D24
75 21 230	02	073	1-E02
75 21 255	02	023	1-B24
75 21 313	02	007	1-B08
75 21 313	02	011	1-B12
75 21 321	02	129	1-G10
75 21 321	02	141	1-G22
75 21 552	02	081	1-E10
75 21 560	02	081	1-E10
75 21 610	02	025	1-C02
75 21 818	02	133	1-G14
75 21 875	02	075	1-E04
75 21 875	02	079	1-E08
75 22 303	02	007	1-B08
75 22 303	02	011	1-B12
75 22 402	02	027	1-C04
75 22 402	02	031	1-C08
75 22 477	02	069	1-D22
75 22 493	02	125	1-G06
75 22 519	02	089	1-E18
75 22 519	02	091	1-E20
75 22 584	02	085	1-E14
75 22 709	02	029	1-C06
75 22 709	02	031	1-C08
75 22 709	02	137	1-G18
75 22 709	02	139	1-G20
75 22 790	02	011	1-B12
75 22 949	02	011	1-B12
75 22 998	03A	017	2-A18
75 23 004	03A	017	2-A18
75 23 806	02	027	1-C04
75 23 806	02	031	1-C08
75 23 822	02	031	1-C08
75 23 897	02	123	1-G04
75 23 962	02	011	1-B12
75 23 962	02	137	1-G18
75 24 069	02	093	1-E22
75 24 069	02	141	1-G22
75 24 143	02	133	1-G14
75 24 150	02	133	1-G14
75 24 895	02	023	1-B24
75 24 903	02	023	1-B24
75 24 911	02	023	1-B24
75 24 929	02	023	1-B24
75 24 937	02	023	1-B24
75 24 945	02	087	1-E16
75 24 978	02	023	1-B24
75 25 603	02	103	1-F08
75 25 694	02	127	1-G08
75 25 710	02	061	1-D14
75 26 163	02	057	1-D10
75 26 973	02	127	1-G08
75 27 716	03A	013	2-A14
75 27 724	03A	013	2-A14
75 27 724	03A	015	2-A16
75 27 732	03A	013	2-A14
75 27 732	03A	015	2-A16
75 27 740	03A	013	2-A14
75 27 757	03A	013	2-A14
75 27 757	03A	015	2-A16
75 27 765	03A	013	2-A14
75 27 765	03A	015	2-A16
75 27 773	03A	013	2-A14
75 27 781	03A	013	2-A14
75 27 799	03A	013	2-A14
75 27 807	03A	013	2-A14
75 27 807	03A	015	2-A16
75 27 815	03A	013	2-A14
75 27 823	03A	013	2-A14
75 27 831	03A	013	2-A14
75 27 849	03A	013	2-A14
75 27 849	03A	015	2-A16
75 27 856	03A	013	2-A14
75 27 856	03A	015	2-A16
75 27 872	03A	013	2-A14
75 27 872	03A	015	2-A16
75 27 880	03A	013	2-A14
75 27 880	03A	015	2-A16
75 28 144	02	081	1-E10
75 28 169	09	011	6-C12
75 28 177	09	011	6-C12
75 28 417	09	011	6-C12
75 28 425	02	089	1-E18
75 28 433	02	089	1-E18
75 28 953	02	099	1-F04
75 28 953	02	103	1-F08
75 28 953	02	143	1-G24
75 28 953	02	145	1-H02
75 28 953	02	147	1-H04
75 31 544	09	011	6-C12
75 31 692	09	011	6-C12
75 32 054	02	067	1-D20
75 32 153	03A	015	2-A16
75 33 102	02	127	1-G08
75 33 136	02	127	1-G08
75 33 326	02	067	1-D20
75 35 255	03A	015	2-A16
75 35 263	03A	015	2-A16
75 35 271	03A	015	2-A16
75 35 289	03A	015	2-A16
75 35 297	03A	015	2-A16
75 35 305	03A	015	2-A16
75 35 313	03A	015	2-A16
75 35 321	03A	015	2-A16
75 35 339	03A	015	2-A16
75 35 404	03A	065	2-C18
75 35 446	02	061	1-D14
75 35 487	02	063	1-D16
75 35 487	02	065	1-D18
75 36 444	02	127	1-G08
75 36 451	02	127	1-G08
75 36 501	02	127	1-G08
75 36 840	02	047	1-C24
75 36 857	02	005	1-B06
75 37 764	09	013	6-C14
75 37 988	09	013	6-C14
75 38 655	02	061	1-D14
75 38 663	02	061	1-D14
75 38 671	02	061	1-D14
75 38 697	03A	027	2-B04
75 38 853	02	127	1-G08
75 39 216	02	067	1-D20
75 39 240	02	067	1-D20
75 39 257	02	067	1-D20
75 39 471	09	007	6-C08
75 39 505	09	007	6-C08
75 39 513	09	007	6-C08
75 39 521	09	007	6-C08
75 39 539	09	007	6-C08
75 39 711	09	013	6-C14
75 39 950	02	063	1-D16
75 41 725	02	111	1-F16
75 41 733	02	111	1-F16
75 41 907	04	031	3-I08
75 45 742	09	009	6-C10
75 50 015	02	107	1-F12
75 50 023	02	113	1-F18
75 50 056	04	035	3-I12
75 50 080	02	105	1-F10
75 50 098	02	105	1-F10
75 50 122	02	105	1-F10
75 50 130	02	105	1-F10
75 50 148	02	105	1-F10
75 50 270	04	037	3-I14
75 50 346	02	113	1-F18
75 50 346	08C	027	6-B04
75 50 353	02	113	1-F18
75 50 353	08C	027	6-B04
75 50 361	06	019	4-C20
75 50 528	02	005	1-B06
75 50 650	04	065	3-J18

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 50 718	04	065	3-J18
75 50 726	04	065	3-J18
75 50 734	04	065	3-J18
75 50 742	04	065	3-J18
75 50 783	04	065	3-J18
75 50 825	04	065	3-J18
75 50 833	04	065	3-J18
75 50 841	04	065	3-J18
75 50 858	04	065	3-J18
75 50 973	04	065	3-J18
75 51 104	02	005	1-B06
75 51 187	02	105	1-F10
75 51 245	06	021	4-C22
75 51 328	02	005	1-B06
75 51 385	02	005	1-B06
75 51 526	04	065	3-J18
75 51 641	06	019	4-C20
75 51 831	02	005	1-B06
75 51 963	02	005	1-B06
75 51 971	02	005	1-B06
75 51 997	02	005	1-B06
75 52 128	04	073	3-K02
75 52 144	04	045	3-I22
75 52 144	04	069	3-J22
75 52 144	04	071	3-J24
75 52 151	04	047	3-I24
75 52 151	04	053	3-J06
75 52 151	04	079	3-K08
75 52 177	04	053	3-J06
75 52 185	04	051	3-J04
75 52 193	04	051	3-J04
75 52 193	04	079	3-K08
75 52 201	04	051	3-J04
75 52 201	04	079	3-K08
75 52 235	04	051	3-J04
75 52 235	04	079	3-K08
75 52 243	04	051	3-J04
75 52 243	04	079	3-K08
75 52 250	04	045	3-I22
75 52 250	04	079	3-K08
75 52 268	04	047	3-I24
75 52 268	04	079	3-K08
75 52 276	04	061	3-J14
75 52 276	04	071	3-J24
75 52 276	04	079	3-K08
75 52 292	04	051	3-J04
75 52 292	04	077	3-K06
75 52 326	04	053	3-J06
75 52 326	04	077	3-K06
75 52 342	04	063	3-J16
75 52 342	04	071	3-J24
75 52 342	04	079	3-K08
75 52 763	04	053	3-J06
75 52 771	04	053	3-J06
75 52 797	04	053	3-J06
75 52 805	04	051	3-J04
75 52 813	04	051	3-J04
75 52 821	04	051	3-J04
75 52 839	04	051	3-J04
75 52 847	04	051	3-J04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 52 854	04	051	3-J04
75 52 862	04	051	3-J04
75 52 870	04	051	3-J04
75 52 896	04	047	3-I24
75 52 904	04	049	3-J02
75 52 912	04	049	3-J02
75 52 920	04	051	3-J04
75 52 961	04	047	3-I24
75 52 961	04	077	3-K06
75 52 979	04	047	3-I24
75 53 001	04	055	3-J08
75 53 050	04	051	3-J04
75 53 050	04	053	3-J06
75 53 050	04	077	3-K06
75 53 068	04	049	3-J02
75 53 068	04	051	3-J04
75 53 068	04	053	3-J06
75 53 068	04	077	3-K06
75 53 084	04	047	3-I24
75 53 084	04	077	3-K06
75 53 092	04	049	3-J02
75 53 092	04	051	3-J04
75 53 092	04	053	3-J06
75 53 092	04	077	3-K06
75 53 183	04	051	3-J04
75 53 183	04	077	3-K06
75 53 191	04	051	3-J04
75 53 191	04	077	3-K06
75 53 209	04	051	3-J04
75 53 209	04	077	3-K06
75 53 217	04	049	3-J02
75 53 217	04	051	3-J04
75 53 217	04	077	3-K06
75 53 225	04	051	3-J04
75 53 225	04	077	3-K06
75 53 233	04	051	3-J04
75 53 233	04	077	3-K06
75 53 241	04	051	3-J04
75 53 241	04	053	3-J06
75 53 241	04	077	3-K06
75 53 258	04	051	3-J04
75 53 258	04	077	3-K06
75 53 266	04	051	3-J04
75 53 266	04	053	3-J06
75 53 266	04	077	3-K06
75 53 274	04	051	3-J04
75 53 274	04	077	3-K06
75 53 308	02	105	1-F10
75 53 308	08A	065	4-H18
75 53 316	08C	017	6-A18
75 53 324	08C	019	6-A20
75 53 365	04	065	3-J18
75 53 415	02	105	1-F10
75 53 449	04	041	3-I18
75 53 522	04	047	3-I24
75 53 548	04	051	3-J04
75 53 605	04	051	3-J04
75 53 688	04	015	3-H16
75 53 761	04	031	3-I08
75 53 779	04	031	3-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 53 852	04	031	3-I08
75 53 878	02	115	1-F20
75 53 886	02	115	1-F20
75 53 894	02	105	1-F10
75 53 894	02	113	1-F18
75 54 009	02	105	1-F10
75 54 017	02	105	1-F10
75 54 025	02	105	1-F10
75 54 033	02	105	1-F10
75 54 165	08C	019	6-A20
75 54 215	08C	019	6-A20
75 54 223	06	021	4-C22
75 54 249	02	115	1-F20
75 54 306	02	107	1-F12
75 54 348	02	107	1-F12
75 54 439	02	005	1-B06
75 54 538	02	119	1-F24
75 54 538	02	141	1-G22
75 54 546	02	121	1-G02
75 54 546	02	143	1-G24
75 54 561	04	031	3-I08
75 54 629	04	053	3-J06
75 54 660	04	063	3-J16
75 54 660	04	071	3-J24
75 54 678	04	063	3-J16
75 54 678	04	071	3-J24
75 54 686	04	063	3-J16
75 54 686	04	071	3-J24
75 54 694	04	061	3-J14
75 54 694	04	063	3-J16
75 54 694	04	071	3-J24
75 54 702	04	061	3-J14
75 54 702	04	071	3-J24
75 54 710	04	061	3-J14
75 54 710	04	071	3-J24
75 54 728	04	061	3-J14
75 54 728	04	071	3-J24
75 54 736	04	063	3-J16
75 54 736	04	071	3-J24
75 54 801	04	051	3-J04
75 54 868	04	047	3-I24
75 54 900	04	049	3-J02
75 54 926	04	045	3-I22
75 54 926	04	071	3-J24
75 54 934	04	043	3-I20
75 54 934	04	071	3-J24
75 54 967	04	045	3-I22
75 56 061	04	051	3-J04
75 56 079	04	051	3-J04
75 56 095	04	061	3-J14
75 56 095	04	071	3-J24
75 56 103	04	061	3-J14
75 56 103	04	071	3-J24
75 56 111	04	061	3-J14
75 56 111	04	071	3-J24
75 56 137	04	061	3-J14
75 56 137	04	071	3-J24
75 56 145	04	061	3-J14
75 56 145	04	071	3-J24
75 56 228	04	043	3-I20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 56 228	04	069	3-J22
75 56 228	04	071	3-J24
75 56 228	04	079	3-K08
75 56 269	04	053	3-J06
75 56 319	04	047	3-I24
75 56 327	04	047	3-I24
75 56 681	04	051	3-J04
75 56 848	04	061	3-J14
75 56 848	04	071	3-J24
75 56 855	04	061	3-J14
75 56 855	04	071	3-J24
75 56 863	04	061	3-J14
75 56 863	04	071	3-J24
75 56 871	04	061	3-J14
75 56 871	04	071	3-J24
75 56 889	04	061	3-J14
75 56 889	04	071	3-J24
75 56 905	04	061	3-J14
75 56 905	04	071	3-J24
75 56 913	04	061	3-J14
75 56 939	04	061	3-J14
75 56 939	04	071	3-J24
75 56 962	04	063	3-J16
75 56 962	04	071	3-J24
75 56 996	04	045	3-I22
75 56 996	04	079	3-K08
75 57 069	04	053	3-J06
75 57 085	04	051	3-J04
75 57 085	04	077	3-K06
75 57 093	04	045	3-I22
75 57 101	04	053	3-J06
75 57 143	04	047	3-I24
75 57 150	04	047	3-I24
75 57 168	04	047	3-I24
75 57 176	04	047	3-I24
75 57 184	04	047	3-I24
75 57 192	04	047	3-I24
75 57 200	04	047	3-I24
75 57 218	04	047	3-I24
75 57 226	04	047	3-I24
75 57 234	04	047	3-I24
75 57 242	04	047	3-I24
75 57 259	04	047	3-I24
75 57 267	04	047	3-I24
75 57 275	04	047	3-I24
75 57 440	04	051	3-J04
75 57 457	04	051	3-J04
75 57 457	04	079	3-K08
75 57 465	04	055	3-J08
75 57 465	04	069	3-J22
75 57 465	04	079	3-K08
75 57 747	04	047	3-I24
75 57 754	04	043	3-I20
75 57 754	04	047	3-I24
75 57 754	04	059	3-J12
75 57 762	04	061	3-J14
75 57 762	04	071	3-J24
75 57 804	04	043	3-I20
75 57 804	04	055	3-J08
75 57 846	04	059	3-J12

6-D10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 57 887	04	043	3-I20
75 57 895	04	043	3-I20
75 57 903	04	061	3-J14
75 57 903	04	071	3-J24
75 57 911	04	047	3-I24
75 57 952	04	061	3-J14
75 57 960	04	043	3-I20
75 57 960	04	071	3-J24
75 57 986	04	047	3-I24
75 58 141	04	059	3-J12
75 58 232	04	045	3-I22
75 58 240	04	045	3-I22
75 58 356	04	045	3-I22
75 58 356	04	079	3-K08
75 58 406	04	041	3-I18
75 58 406	04	079	3-K08
75 58 430	04	029	3-I06
75 58 430	04	055	3-J08
75 58 448	04	029	3-I06
75 58 455	04	053	3-J06
75 58 497	04	029	3-I06
75 58 497	04	041	3-I18
75 58 505	04	041	3-I18
75 58 513	04	063	3-J16
75 58 521	04	045	3-I22
75 58 786	04	047	3-I24
75 58 786	04	077	3-K06
75 58 828	04	043	3-I20
75 58 836	04	061	3-J14
75 58 950	04	029	3-I06
75 58 950	04	073	3-K02
75 59 008	04	045	3-I22
75 59 024	04	049	3-J02
75 59 081	02	107	1-F12
75 59 115	04	065	3-J18
75 59 214	04	039	3-I16
75 59 222	04	031	3-I08
75 59 263	02	115	1-F20
75 59 263	02	117	1-F22
75 59 271	02	115	1-F20
75 59 271	02	117	1-F22
75 59 347	02	115	1-F20
75 59 347	02	117	1-F22
75 59 354	02	115	1-F20
75 59 354	02	117	1-F22
75 59 362	02	115	1-F20
75 59 362	02	117	1-F22
75 59 396	02	005	1-B06
75 59 461	02	119	1-F24
75 59 479	02	119	1-F24
75 59 487	02	119	1-F24
75 59 537	02	119	1-F24
75 59 537	02	141	1-G22
75 59 602	04	065	3-J18
75 59 735	02	119	1-F24
75 59 743	02	005	1-B06
75 59 768	02	119	1-F24
75 59 776	02	113	1-F18
75 59 859	04	031	3-I08
75 59 875	04	031	3-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 60 105	02	031	1-C08
75 60 139	02	027	1-C04
75 60 154	02	007	1-B08
75 60 154	02	009	1-B10
75 60 162	02	063	1-D16
75 60 170	02	063	1-D16
75 60 212	02	063	1-D16
75 60 246	02	089	1-E18
75 60 311	02	083	1-E12
75 60 337	02	083	1-E12
75 60 345	02	083	1-E12
75 60 758	02	017	1-B18
75 60 808	02	007	1-B08
75 60 808	02	009	1-B10
75 60 931	02	007	1-B08
75 60 931	02	011	1-B12
75 60 964	02	007	1-B08
75 60 964	02	009	1-B10
75 61 210	02	063	1-D16
75 61 467	02	009	1-B10
75 61 665	02	011	1-B12
75 61 673	02	011	1-B12
75 61 756	02	125	1-G06
75 61 798	03A	025	2-B02
75 61 806	03A	023	2-A24
75 61 814	03A	023	2-A24
75 61 863	02	025	1-C02
75 61 947	02	011	1-B12
75 62 002	02	007	1-B08
75 62 002	02	009	1-B10
75 62 051	02	079	1-E08
75 62 069	02	127	1-G08
75 62 119	02	089	1-E18
75 62 168	02	133	1-G14
75 62 176	02	129	1-G10
75 62 259	02	023	1-B24
75 62 275	02	023	1-B24
75 62 382	02	079	1-E08
75 62 481	02	087	1-E16
75 62 515	02	087	1-E16
75 62 531	02	087	1-E16
75 62 531	02	141	1-G22
75 63 042	02	027	1-C04
75 63 042	02	029	1-C06
75 63 042	02	031	1-C08
75 63 067	03A	017	2-A18
75 63 075	02	013	1-B14
75 63 521	02	079	1-E08
75 63 539	02	079	1-E08
75 63 562	02	063	1-D16
75 63 562	02	073	1-E02
75 63 679	02	015	1-B16
75 64 065	02	079	1-E08
75 64 073	02	063	1-D16
75 64 123	02	063	1-D16
75 64 131	02	063	1-D16
75 64 222	02	015	1-B16
75 64 222	02	071	1-D24
75 64 222	02	073	1-E02
75 64 222	02	123	1-G04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 64 230	02	123	1-G04
75 64 289	02	073	1-E02
75 64 297	02	073	1-E02
75 64 305	02	083	1-E12
75 64 321	02	097	1-F02
75 64 321	02	099	1-F04
75 64 321	02	101	1-F06
75 64 321	02	103	1-F08
75 64 420	03A	023	2-A24
75 64 420	03A	025	2-B02
75 64 438	03A	023	2-A24
75 64 446	03A	023	2-A24
75 64 453	02	011	1-B12
75 64 461	02	011	1-B12
75 64 537	02	073	1-E02
75 64 834	02	079	1-E08
75 65 351	02	083	1-E12
75 65 583	02	129	1-G10
75 65 591	02	129	1-G10
75 65 609	02	129	1-G10
75 65 617	02	129	1-G10
75 65 658	02	129	1-G10
75 65 666	02	129	1-G10
75 65 716	02	129	1-G10
75 66 243	02	071	1-D24
75 66 276	02	079	1-E08
75 66 284	02	079	1-E08
75 66 292	02	127	1-G08
75 66 300	02	079	1-E08
75 66 433	02	027	1-C04
75 66 433	02	031	1-C08
75 66 474	02	031	1-C08
75 66 474	02	035	1-C12
75 66 581	02	123	1-G04
75 66 581	02	139	1-G20
75 66 623	02	035	1-C12
75 66 730	02	063	1-D16
75 66 748	02	073	1-E02
75 66 789	02	123	1-G04
75 67 514	02	125	1-G06
75 67 514	02	141	1-G22
75 67 522	02	125	1-G06
75 67 837	02	073	1-E02
75 67 910	02	035	1-C12
75 67 951	02	139	1-G20
75 68 058	02	063	1-D16
75 68 082	02	129	1-G10
75 68 108	02	129	1-G10
75 68 439	02	019	1-B20
75 68 512	02	035	1-C12
75 68 801	02	133	1-G14
75 68 900	02	137	1-G18
75 69 304	02	011	1-B12
75 69 510	02	017	1-B18
75 69 569	02	077	1-E06
75 69 585	02	077	1-E06
75 69 601	02	077	1-E06
75 69 734	02	009	1-B10
75 69 742	02	017	1-B18
75 69 809	02	025	1-C02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 69 916	02	089	1-E18
75 69 916	02	091	1-E20
75 69 916	02	141	1-G22
75 70 146	04	051	3-J04
75 70 252	04	059	3-J12
75 70 294	04	059	3-J12
75 70 310	04	059	3-J12
75 70 351	04	047	3-I24
75 70 526	04	049	3-J02
75 70 542	04	041	3-I18
75 70 542	04	079	3-K08
75 70 666	04	053	3-J06
75 70 740	04	047	3-I24
75 70 740	04	077	3-K06
75 70 757	02	119	1-F24
75 70 757	02	141	1-G22
75 70 757	02	143	1-G24
75 70 823	02	119	1-F24
75 70 823	02	143	1-G24
75 71 334	04	043	3-I20
75 71 391	04	043	3-I20
75 71 391	04	069	3-J22
75 71 391	04	077	3-K06
75 71 391	04	079	3-K08
75 71 409	04	043	3-I20
75 71 482	04	059	3-J12
75 71 482	04	069	3-J22
75 71 482	04	071	3-J24
75 71 490	04	045	3-I22
75 71 508	04	061	3-J14
75 71 508	04	071	3-J24
75 71 516	04	061	3-J14
75 71 516	04	071	3-J24
75 71 524	04	061	3-J14
75 71 524	04	071	3-J24
75 71 532	04	061	3-J14
75 71 532	04	071	3-J24
75 71 540	04	061	3-J14
75 71 540	04	071	3-J24
75 71 557	04	061	3-J14
75 71 557	04	071	3-J24
75 71 565	04	061	3-J14
75 71 565	04	071	3-J24
75 71 573	04	061	3-J14
75 71 573	04	071	3-J24
75 71 581	04	061	3-J14
75 71 581	04	071	3-J24
75 71 599	04	061	3-J14
75 71 599	04	071	3-J24
75 71 854	04	029	3-I06
75 71 862	04	029	3-I06
75 71 904	04	029	3-I06
75 71 904	04	073	3-K02
75 71 912	04	029	3-I06
75 71 920	04	043	3-I20
75 71 938	04	053	3-J06
75 71 961	04	053	3-J06
75 71 979	04	053	3-J06
75 72 159	04	041	3-I18
75 72 175	04	041	3-I18

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D11 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 72 175	04	079	3-K08
75 72 530	04	051	3-J04
75 72 571	04	051	3-J04
75 72 571	04	077	3-K06
75 72 605	04	047	3-I24
75 72 605	04	077	3-K06
75 72 613	04	047	3-I24
75 72 613	04	077	3-K06
75 72 621	04	047	3-I24
75 72 621	04	077	3-K06
75 72 639	04	047	3-I24
75 72 639	04	077	3-K06
75 72 704	04	049	3-J02
75 72 704	04	077	3-K06
75 72 852	04	065	3-J18
75 72 886	02	117	1-F22
75 72 894	02	117	1-F22
75 72 944	02	117	1-F22
75 72 985	02	117	1-F22
75 73 132	09	007	6-C08
75 73 280	04	047	3-I24
75 73 611	04	031	3-I08
75 73 744	02	141	1-G22
75 73 744	02	143	1-G24
75 73 751	02	119	1-F24
75 73 751	02	141	1-G22
75 73 751	02	143	1-G24
75 73 769	02	119	1-F24
75 73 769	02	143	1-G24
75 73 777	02	119	1-F24
75 73 777	02	143	1-G24
75 73 819	04	045	3-I22
75 73 934	04	061	3-J14
75 73 942	04	055	3-J08
75 73 942	04	069	3-J22
75 73 959	04	069	3-J22
75 74 031	04	043	3-I20
75 74 130	04	061	3-J14
75 74 205	04	055	3-J08
75 74 221	04	055	3-J08
75 74 254	04	047	3-I24
75 74 817	04	051	3-J04
75 74 833	04	047	3-I24
75 74 833	04	079	3-K08
75 74 841	04	047	3-I24
75 74 890	04	047	3-I24
75 74 890	04	077	3-K06
75 75 038	04	055	3-J08
75 75 251	04	059	3-J12
75 75 392	04	061	3-J14
75 75 392	04	071	3-J24
75 75 442	04	045	3-I22
75 75 442	04	077	3-K06
75 75 459	04	041	3-I18
75 75 459	04	071	3-J24
75 75 467	04	045	3-I22
75 75 467	04	069	3-J22
75 75 475	04	045	3-I22
75 75 475	04	069	3-J22
75 75 483	04	063	3-J16
75 75 483	04	071	3-J24
75 75 491	04	045	3-I22
75 75 491	04	069	3-J22
75 75 509	04	029	3-I06
75 75 509	04	073	3-K02
75 75 517	04	041	3-I18
75 75 517	04	073	3-K02
75 75 525	04	045	3-I22
75 75 525	04	069	3-J22
75 75 533	04	063	3-J16
75 75 533	04	071	3-J24
75 75 541	04	063	3-J16
75 75 541	04	071	3-J24
75 75 558	04	045	3-I22
75 75 558	04	071	3-J24
75 75 566	04	029	3-I06
75 75 566	04	073	3-K02
75 75 574	04	029	3-I06
75 75 574	04	073	3-K02
75 75 582	04	067	3-J10
75 75 582	04	069	3-J22
75 75 624	04	049	3-J02
75 75 632	04	049	3-J02
75 75 640	04	055	3-J08
75 75 640	04	069	3-J22
75 75 848	03A	171	2-H04
75 75 871	06	021	4-C22
75 75 889	06	021	4-C22
75 76 077	04	047	3-I24
75 76 200	02	105	1-F10
75 76 218	08C	023	6-A24
75 76 226	02	105	1-F10
75 76 234	02	105	1-F10
75 76 242	06	021	4-C22
75 76 283	02	005	1-B06
75 76 382	02	105	1-F10
75 76 390	02	107	1-F12
75 76 416	04	031	3-I08
75 76 580	08B	201	5-I10
75 76 580	08C	019	6-A20
75 76 689	04	031	3-I08
75 76 721	02	005	1-B06
75 76 788	04	045	3-I22
75 76 796	04	051	3-J04
75 76 796	04	077	3-K06
75 76 846	04	051	3-J04
75 76 853	04	051	3-J04
75 76 853	04	077	3-K06
75 76 911	04	041	3-I18
75 76 937	04	045	3-I22
75 76 960	02	107	1-F12
75 76 960	08C	029	6-B06
75 77 000	04	065	3-J18
75 77 018	04	065	3-J18
75 77 042	08C	025	6-B02
75 77 042	08C	029	6-B06
75 77 075	04	049	3-J02
75 77 125	04	039	3-I16
75 77 141	04	039	3-I16
75 77 166	04	059	3-J12
75 77 182	04	053	3-J06
75 77 182	04	077	3-K06
75 77 224	04	053	3-J06
75 77 240	04	053	3-J06
75 77 257	04	053	3-J06
75 77 257	04	077	3-K06
75 77 265	04	053	3-J06
75 77 265	04	077	3-K06
75 77 273	04	053	3-J06
75 77 273	04	077	3-K06
75 77 323	02	107	1-F12
75 77 331	08A	039	4-G16
75 77 349	04	065	3-J18
75 77 356	02	119	1-F24
75 77 356	02	143	1-G24
75 77 364	02	119	1-F24
75 77 364	02	143	1-G24
75 77 521	04	043	3-I20
75 77 554	02	005	1-B06
75 77 562	04	043	3-I20
75 77 588	04	051	3-J04
75 77 596	04	051	3-J04
75 77 620	04	073	3-K02
75 77 646	04	031	3-I08
75 77 646	04	075	3-K04
75 77 653	04	031	3-I08
75 77 653	04	075	3-K04
75 77 695	02	005	1-B06
75 77 729	04	031	3-I08
75 77 885	02	109	1-F14
75 77 885	08C	029	6-B06
75 77 893	02	005	1-B06
75 77 919	04	065	3-J18
75 77 927	04	065	3-J18
75 77 935	04	065	3-J18
75 78 032	04	055	3-J08
75 78 040	04	055	3-J08
75 78 057	04	055	3-J08
75 78 065	04	055	3-J08
75 78 073	04	055	3-J08
75 78 081	04	055	3-J08
75 78 099	04	055	3-J08
75 78 107	04	055	3-J08
75 78 115	04	057	3-J10
75 78 123	04	057	3-J10
75 78 131	04	057	3-J10
75 78 149	04	057	3-J10
75 78 156	04	057	3-J10
75 78 164	04	057	3-J10
75 78 172	04	057	3-J10
75 78 180	04	057	3-J10
75 78 198	04	057	3-J10
75 78 206	04	057	3-J10
75 78 214	04	057	3-J10
75 78 222	04	055	3-J08
75 78 248	04	053	3-J06
75 78 255	04	053	3-J06
75 78 271	04	047	3-I24
75 78 313	04	043	3-I20
75 78 362	04	043	3-I20
75 78 388	04	053	3-J06
75 78 396	04	053	3-J06
75 78 412	04	053	3-J06
75 78 420	04	053	3-J06
75 78 438	04	053	3-J06
75 78 446	04	053	3-J06
75 78 453	04	053	3-J06
75 78 461	04	053	3-J06
75 78 479	04	053	3-J06
75 78 487	04	053	3-J06
75 78 495	04	053	3-J06
75 78 503	04	053	3-J06
75 78 511	04	053	3-J06
75 78 529	04	053	3-J06
75 78 537	04	053	3-J06
75 78 545	04	053	3-J06
75 78 552	04	053	3-J06
75 78 560	04	053	3-J06
75 78 578	04	053	3-J06
75 78 586	04	053	3-J06
75 78 743	04	047	3-I24
75 78 768	04	051	3-J04
75 78 925	04	053	3-J06
75 79 014	04	043	3-I20
75 79 063	04	055	3-J08
75 79 071	04	057	3-J10
75 79 089	04	043	3-I20
75 79 105	04	053	3-J06
75 79 246	04	065	3-J18
75 79 253	04	065	3-J18
75 79 311	04	059	3-J12
75 79 428	04	043	3-I20
75 79 444	04	053	3-J06
75 79 451	04	057	3-J10
75 79 485	04	051	3-J04
75 79 592	04	059	3-J12
75 79 840	06	021	4-C22
75 79 873	04	031	3-I08
75 79 873	04	075	3-K04
75 79 881	03A	007	2-A08
75 79 881	03A	009	2-A10
75 79 964	04	035	3-I12
75 80 152	02	063	1-D16
75 80 160	02	063	1-D16
75 81 721	02	019	1-B20
75 81 762	02	019	1-B20
75 81 846	02	071	1-D24
75 81 879	02	073	1-E02
75 81 895	02	077	1-E06
75 81 903	02	077	1-E06
75 81 911	02	077	1-E06
75 81 929	02	077	1-E06
75 82 299	02	123	1-G04
75 82 299	02	141	1-G22
75 83 198	02	125	1-G06

6-D12 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 83 461	02	125	1-G06
75 83 461	02	141	1-G22
75 83 628	02	125	1-G06
75 83 628	02	141	1-G22
75 83 784	02	087	1-E16
75 83 792	02	087	1-E16
75 83 792	02	141	1-G22
75 83 933	02	089	1-E18
75 83 933	02	137	1-G18
75 84 063	02	063	1-D16
75 84 071	02	063	1-D16
75 84 436	02	071	1-D24
75 84 436	02	073	1-E02
75 84 436	02	137	1-G18
75 84 592	03A	017	2-A18
75 84 790	02	123	1-G04
75 84 790	02	141	1-G22
75 84 998	02	035	1-C12
75 85 011	02	035	1-C12
75 85 045	02	009	1-B10
75 85 045	02	137	1-G18
75 85 086	02	019	1-B20
75 85 532	02	011	1-B12
75 85 540	03A	017	2-A18
75 85 565	02	123	1-G04
75 85 755	02	133	1-G14
75 85 771	02	133	1-G14
75 85 797	03A	027	2-B04
75 85 813	02	087	1-E16
75 85 847	02	009	1-B10
75 86 019	02	083	1-E12
75 86 050	02	035	1-C12
75 86 100	02	007	1-B08
75 86 134	02	009	1-B10
75 86 142	02	009	1-B10
75 86 308	02	011	1-B12
75 86 456	02	061	1-D14
75 86 464	02	061	1-D14
75 86 464	02	063	1-D16
75 86 498	02	073	1-E02
75 86 811	03A	027	2-B04
75 86 837	02	011	1-B12
75 86 860	02	071	1-D24
75 86 860	02	073	1-E02
75 86 878	02	071	1-D24
75 86 878	02	073	1-E02
75 86 993	02	019	1-B20
75 87 785	02	123	1-G04
75 87 785	02	141	1-G22
75 88 056	02	137	1-G18
75 88 098	02	069	1-D22
75 88 098	02	071	1-D24
75 88 098	02	073	1-E02
75 88 098	02	141	1-G22
75 88 270	02	079	1-E08
75 88 296	03A	021	2-A22
75 88 296	03A	173	2-H06
75 88 304	03A	025	2-B02
75 88 304	03A	173	2-H06
75 88 312	03A	023	2-A24
75 88 312	03A	173	2-H06
75 88 320	02	009	1-B10
75 88 320	02	015	1-B16
75 88 338	02	015	1-B16
75 88 387	02	083	1-E12
75 88 395	02	083	1-E12
75 88 403	02	083	1-E12
75 88 429	02	063	1-D16
75 88 445	02	083	1-E12
75 88 544	03A	017	2-A18
75 88 551	02	125	1-G06
75 88 643	02	065	1-D18
75 89 815	03A	027	2-B04
75 89 823	03A	027	2-B04
75 89 831	03A	027	2-B04
75 89 856	03A	027	2-B04
75 89 864	03A	027	2-B04
75 90 235	02	061	1-D14
75 90 284	09	007	6-C08
75 90 680	02	089	1-E18
75 90 789	02	089	1-E18
75 90 805	02	113	1-F18
75 90 854	02	059	1-D12
75 90 870	02	089	1-E18
75 91 027	02	061	1-D14
75 91 035	02	063	1-D16
75 91 035	03A	141	2-F22
75 91 043	02	057	1-D10
75 91 167	09	011	6-C12
75 91 183	02	061	1-D14
75 91 266	02	053	1-D06
75 91 274	02	053	1-D06
75 91 324	02	051	1-D04
75 91 332	02	051	1-D04
75 91 399	02	057	1-D10
75 91 480	02	097	1-F02
75 91 480	02	099	1-F04
75 91 480	02	101	1-F06
75 91 480	02	103	1-F08
75 91 498	02	061	1-D14
75 91 712	09	007	6-C08
75 91 837	02	067	1-D20
75 91 852	02	053	1-D06
75 91 878	02	053	1-D06
75 91 902	02	059	1-D12
75 91 928	02	131	1-G12
75 91 936	02	131	1-G12
75 91 944	02	131	1-G12
75 91 951	02	131	1-G12
75 91 977	09	007	6-C08
75 92 017	06	023	4-C24
75 92 025	04	065	3-J18
75 92 033	04	065	3-J18
75 92 058	04	059	3-J12
75 92 140	04	055	3-J08
75 92 181	04	041	3-I18
75 92 223	04	029	3-I06
75 92 223	04	079	3-K08
75 92 231	04	029	3-I06
75 92 231	04	079	3-K08
75 92 249	04	047	3-I24
75 92 249	04	077	3-K06
75 92 272	04	055	3-J08
75 92 280	04	055	3-J08
75 92 298	04	055	3-J08
75 92 298	04	069	3-J22
75 92 306	04	039	3-I16
75 92 330	04	043	3-I20
75 92 330	04	069	3-J22
75 92 330	04	079	3-K08
75 92 447	04	059	3-J12
75 92 488	04	039	3-I16
75 92 496	04	039	3-I16
75 92 504	04	043	3-I20
75 92 603	04	055	3-J08
75 92 645	04	055	3-J08
75 92 702	04	041	3-I18
75 92 819	02	109	1-F14
75 92 819	02	111	1-F16
75 92 843	04	031	3-I08
75 92 884	02	117	1-F22
75 92 918	02	109	1-F14
75 92 918	02	111	1-F16
75 92 942	04	035	3-I12
75 92 959	04	035	3-I12
75 93 064	04	065	3-J18
75 93 080	04	037	3-I14
75 93 130	04	065	3-J18
75 93 148	04	065	3-J18
75 93 221	02	119	1-F24
75 93 221	02	143	1-G24
75 93 247	04	041	3-I18
75 93 387	06	023	4-C24
75 93 395	06	023	4-C24
75 93 429	06	023	4-C24
75 93 452	06	019	4-C20
75 93 502	04	043	3-I20
75 93 650	04	059	3-J12
75 94 120	04	029	3-I06
75 94 120	04	079	3-K08
75 94 146	04	059	3-J12
75 94 146	04	079	3-K08
75 94 153	04	049	3-J02
75 94 153	04	079	3-K08
75 94 161	04	047	3-I24
75 94 161	04	079	3-K08
75 94 179	04	045	3-I22
75 94 179	04	079	3-K08
75 94 187	04	043	3-I20
75 94 187	04	069	3-J22
75 94 187	04	079	3-K08
75 94 708	04	041	3-I18
75 94 880	04	043	3-I20
75 94 880	04	079	3-K08
75 94 898	04	029	3-I06
75 94 898	04	079	3-K08
75 94 930	04	043	3-I20
75 94 948	04	043	3-I20
75 95 002	04	059	3-J12
75 95 325	04	041	3-I18
75 95 325	04	079	3-K08
75 95 481	04	053	3-J06
75 95 564	04	061	3-J14
75 95 580	04	055	3-J08
75 95 614	04	055	3-J08
75 95 887	04	047	3-I24
75 95 895	04	047	3-I24
75 95 903	04	047	3-I24
75 95 937	04	051	3-J04
75 96 000	08C	017	6-A18
75 96 000	08C	019	6-A20
75 96 612	06	023	4-C24
75 96 679	03A	009	2-A10
75 96 679	03A	011	2-A12
75 96 851	04	041	3-I18
75 96 877	04	055	3-J08
75 96 885	04	055	3-J08
75 96 935	04	047	3-I24
75 96 976	04	041	3-I18
75 97 115	04	061	3-J14
75 97 164	04	047	3-I24
75 97 214	04	053	3-J06
75 97 222	04	043	3-I20
75 97 248	04	055	3-J08
75 97 255	04	055	3-J08
75 97 347	04	055	3-J08
75 97 354	04	053	3-J06
75 97 354	04	079	3-K08
75 97 388	04	055	3-J08
75 97 412	04	055	3-J08
75 97 586	04	039	3-I16
75 97 594	04	039	3-I16
75 97 602	04	043	3-I20
75 97 610	04	047	3-I24
75 97 628	04	055	3-J08
75 97 677	04	029	3-I06
75 97 685	04	029	3-I06
75 97 693	04	029	3-I06
75 97 701	04	029	3-I06
75 97 719	04	029	3-I06
75 97 727	04	029	3-I06
75 97 735	04	029	3-I06
75 97 743	04	029	3-I06
75 97 750	04	029	3-I06
75 97 768	04	029	3-I06
75 97 776	04	043	3-I20
75 97 776	04	069	3-J22
75 97 776	04	073	3-K02
75 97 776	04	077	3-K06
75 97 776	04	079	3-K08
75 97 784	04	043	3-I20
75 97 909	04	059	3-J12
75 97 917	04	059	3-J12
75 97 933	04	051	3-J04
75 97 933	04	077	3-K06
75 98 170	08C	019	6-A20
75 98 188	04	007	3-H08
75 98 212	02	107	1-F12
75 98 311	02	119	1-F24
75 98 311	02	141	1-G22

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 98 311	02	143	1-G24
75 98 634	06	021	4-C22
75 98 980	02	109	1-F14
75 98 980	08C	029	6-B06
75 99 004	04	009	3-H10
75 99 178	04	031	3-I08
75 99 400	04	031	3-I08
75 99 434	04	031	3-I08
75 99 442	04	031	3-I08
75 99 475	06	019	4-C20
75 99 525	04	043	3-I20
75 99 525	04	069	3-J22
75 99 657	04	039	3-I16
75 99 665	04	039	3-I16
75 99 731	04	055	3-J08
75 99 780	04	043	3-I20
75 99 798	04	043	3-I20
75 99 798	04	081	3-K10
75 99 806	06	023	4-C24
75 99 814	06	023	4-C24
75 99 822	06	023	4-C24
75 99 988	04	031	3-I08
78 14 619	03A	013	2-A14
78 20 228	08A	115	4-J20
78 20 244	08A	115	4-J20
78 29 609	03B	111	3-E16
78 29 609	03B	117	3-E22
78 29 609	03B	125	3-F06
78 29 609	03B	133	3-F14
78 29 609	03B	143	3-F24
78 29 617	03B	111	3-E16
78 29 617	03B	117	3-E22
78 29 617	03B	125	3-F06
78 29 617	03B	133	3-F14
78 29 617	03B	143	3-F24
78 29 625	03B	111	3-E16
78 29 625	03B	117	3-E22
78 29 625	03B	125	3-F06
78 29 625	03B	133	3-F14
78 29 625	03B	143	3-F24
78 29 633	03B	111	3-E16
78 29 633	03B	117	3-E22
78 29 633	03B	125	3-F06
78 29 633	03B	133	3-F14
78 29 633	03B	143	3-F24
78 29 641	03B	111	3-E16
78 29 641	03B	117	3-E22
78 29 641	03B	125	3-F06
78 29 641	03B	133	3-F14
78 29 641	03B	143	3-F24
78 29 666	03B	111	3-E16
78 29 666	03B	117	3-E22
78 29 666	03B	125	3-F06
78 29 666	03B	133	3-F14
78 29 666	03B	143	3-F24
78 29 674	03B	111	3-E16
78 29 674	03B	117	3-E22
78 29 674	03B	125	3-F06
78 29 674	03B	133	3-F14
78 29 674	03B	143	3-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
78 29 682	03B	111	3-E16
78 29 682	03B	117	3-E22
78 29 682	03B	125	3-F06
78 29 682	03B	133	3-F14
78 29 682	03B	143	3-F24
78 56 149	02	025	1-C02
78 56 172	02	023	1-B24
78 58 756	02	011	1-B12
78 72 922	02	061	1-D14
78 74 431	08A	099	4-J04
78 74 431	08A	125	4-K06
78 74 498	03B	009	3-A10
78 74 498	03B	011	3-A12
78 74 498	03B	017	3-A18
78 74 498	03B	025	3-B02
78 74 498	03B	027	3-B04
78 74 498	03B	037	3-B14
78 74 498	03B	045	3-B22
78 74 498	03B	049	3-C02
78 74 498	03B	059	3-C12
78 74 498	03B	067	3-C20
78 74 498	03B	071	3-C24
78 74 498	03B	075	3-D04
78 74 498	03B	085	3-D14
78 74 498	03B	093	3-D22
78 74 498	03B	097	3-E02
78 74 498	03B	101	3-E06
78 74 498	03B	115	3-E20
78 74 498	03B	123	3-F04
78 74 498	03B	131	3-F12
78 74 498	03B	139	3-F20
78 74 498	03B	149	3-G06
78 74 506	03A	081	2-D10
78 74 506	03B	009	3-A10
78 74 506	03B	011	3-A12
78 74 506	03B	021	3-A22
78 74 506	03B	025	3-B02
78 74 506	03B	027	3-B04
78 74 506	03B	039	3-B16
78 74 506	03B	041	3-B18
78 74 506	03B	045	3-B22
78 74 506	03B	049	3-C02
78 74 506	03B	061	3-C14
78 74 506	03B	063	3-C16
78 74 506	03B	069	3-C22
78 74 506	03B	071	3-C24
78 74 506	03B	075	3-D04
78 74 506	03B	085	3-D14
78 74 506	03B	087	3-D16
78 74 506	03B	089	3-D18
78 74 506	03B	095	3-D24
78 74 506	03B	097	3-E02
78 74 506	03B	101	3-E06
78 74 506	03B	115	3-E20
78 74 506	03B	123	3-F04
78 74 506	03B	131	3-F12
78 74 506	03B	139	3-F20
78 74 506	03B	149	3-G06
78 74 662	08A	079	4-I08
78 74 688	08A	081	4-I10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
78 74 688	08A	129	4-K10
78 74 811	08A	079	4-I08
78 74 811	08A	129	4-K10
79 10 516	02	057	1-D10
79 10 755	08B	021	5-A22
79 15 077	05	025	4-B02
79 15 077	08B	173	5-H06
79 15 077	08B	189	5-H22
79 15 077	08B	247	5-K08
79 15 093	04	065	3-J18
79 15 119	06	007	4-C08
79 15 200	04	073	3-K02
79 15 556	03A	087	2-D16
79 15 556	08B	005	5-A06
79 16 489	08B	177	5-H10
79 16 489	08C	007	6-A08
79 16 489	08C	009	6-A10
79 16 497	05	013	4-A14
79 16 497	05	033	4-B10
79 16 497	08A	017	4-F18
79 16 497	08A	061	4-H14
79 16 497	08A	079	4-I08
79 16 497	08B	175	5-H08
79 16 497	08B	189	5-H22
79 16 497	08B	211	5-I20
79 16 497	08B	245	5-K06
79 16 521	07	011	4-E12
79 18 725	08B	243	5-K04
79 19 483	08A	039	4-G16
79 22 214	03A	051	2-C04
79 22 214	03A	083	2-D12
79 22 214	08C	023	6-A24
79 22 230	03A	043	2-B20
79 22 230	03A	047	2-B24
79 22 263	03A	095	2-D24
79 22 271	03A	171	2-H04
79 22 271	08B	017	5-A18
79 22 271	08B	179	5-H12
79 22 271	08B	193	5-I02
79 22 271	08B	245	5-K06
79 22 297	03A	149	2-G06
79 22 297	03A	151	2-G08
79 22 297	08B	015	5-A16
79 22 313	08B	017	5-A18
79 22 347	02	135	1-G16
79 22 347	03A	019	2-A20
79 22 347	03A	053	2-C06
79 22 347	03A	079	2-D08
79 22 347	03A	141	2-F22
79 22 347	03A	175	2-H08
79 22 347	08C	013	6-A14
79 22 354	03A	141	2-F22
79 22 354	03A	151	2-G08
79 22 354	08A	019	4-F20
79 22 354	08B	015	5-A16
79 22 354	08B	201	5-I10
79 22 354	08B	221	5-J06
79 22 354	08B	247	5-K08
79 22 354	08B	249	5-K10
79 22 354	08C	013	6-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 22 362	02	133	1-G14
79 22 362	03A	151	2-G08
79 22 370	03A	077	2-D06
79 22 388	03A	019	2-A20
79 22 396	08B	193	5-I02
79 22 396	08B	203	5-I12
79 22 396	08B	245	5-K06
79 22 396	08B	247	5-K08
79 22 420	03A	063	2-C16
79 22 420	03A	067	2-C20
79 22 420	03A	089	2-D18
79 22 420	03A	141	2-F22
79 22 420	03A	151	2-G08
79 22 420	08A	129	4-K10
79 22 420	08B	219	5-J04
79 22 420	08C	013	6-A14
79 22 420	08C	021	6-A22
79 22 438	03A	033	2-B10
79 22 438	03A	035	2-B12
79 22 438	03A	037	2-B14
79 22 438	03A	039	2-B16
79 22 503	02	127	1-G08
79 22 602	03A	087	2-D16
79 22 602	03A	089	2-D18
79 22 644	03A	087	2-D16
79 22 800	02	109	1-F14
79 22 800	02	111	1-F16
79 22 800	03A	053	2-C06
79 22 800	05	023	4-A24
79 22 800	08A	015	4-F16
79 22 818	03A	073	2-D02
79 22 818	03A	077	2-D06
79 22 818	03A	079	2-D08
79 22 818	03A	087	2-D16
79 22 818	03A	091	2-D20
79 22 818	03A	093	2-D22
79 22 818	08B	015	5-A16
79 22 826	02	133	1-G14
79 22 826	03A	019	2-A20
79 22 826	03A	073	2-D02
79 22 826	03A	075	2-D04
79 22 826	03A	079	2-D08
79 22 826	03A	091	2-D20
79 22 826	03A	141	2-F22
79 22 826	03A	157	2-G14
79 22 826	08C	013	6-A14
79 22 834	03A	085	2-D14
79 22 834	03A	087	2-D16
79 22 891	02	089	1-E18
79 22 891	03A	031	2-B08
79 22 891	03A	073	2-D02
79 22 891	03A	085	2-D14
79 22 909	08A	035	4-G12
79 22 974	03A	093	2-D22
79 22 974	08B	015	5-A16
79 23 014	08A	005	4-F06
79 33 443	02	135	1-G16
79 33 443	03A	139	2-F20
79 33 682	03A	097	2-E02
79 33 682	08A	111	4-J16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 33 682	08A	113	4-J18
79 33 849	03A	011	2-A12
79 33 872	04	043	3-I20
79 33 872	04	071	3-J24
79 33 872	06	009	4-C10
79 35 703	08B	009	5-A10
79 35 992	08A	061	4-H14
79 35 992	08A	065	4-H18
79 36 008	08C	005	6-A06
79 36 016	03A	057	2-C10
79 36 016	03A	059	2-C12
79 36 016	08B	187	5-H20
79 39 796	08B	021	5-A22
79 46 734	03A	097	2-E02
79 49 712	04	005	3-H06
79 51 783	08A	067	4-H20
79 56 238	04	031	3-I08
79 58 770	02	127	1-G08
79 59 349	03B	111	3-E16
79 59 349	03B	117	3-E22
79 59 349	03B	125	3-F06
79 59 349	03B	133	3-F14
79 59 349	03B	143	3-F24
79 61 311	08A	035	4-G12
79 61 337	02	047	1-C24
79 61 337	03A	065	2-C18
79 61 634	08B	005	5-A06
79 61 642	03A	093	2-D22
79 61 642	03A	149	2-G06
79 61 642	03A	151	2-G08
79 61 642	07	009	4-E10
79 61 642	07	011	4-E12
79 61 642	08B	101	5-E06
79 61 642	08B	113	5-E18
79 61 642	08B	125	5-F06
79 61 642	08B	133	5-F14
79 61 675	06	011	4-C12
79 61 683	08B	015	5-A16
79 61 691	08A	039	4-G16
79 61 949	03A	149	2-G06
79 63 135	03A	057	2-C10
79 63 143	08B	173	5-H06
79 63 143	08B	187	5-H20
79 63 168	06	005	4-C06
79 63 507	06	019	4-C20
79 63 515	02	125	1-G06
79 63 515	02	141	1-G22
79 63 523	02	081	1-E10
79 63 523	02	125	1-G06
79 63 531	02	081	1-E10
79 63 531	02	083	1-E12
79 63 531	06	019	4-C20
79 63 549	02	083	1-E12
79 63 887	04	009	3-H10
79 63 937	03A	051	2-C04
79 65 338	08B	017	5-A18
79 65 338	08B	021	5-A22
79 65 338	08B	029	5-B06
79 65 353	08B	009	5-A10
79 65 353	08B	017	5-A18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 65 353	08B	227	5-J12
79 65 544	02	119	1-F24
79 65 544	02	143	1-G24
79 65 544	03A	063	2-C16
79 65 544	04	031	3-I08
79 65 544	08A	075	4-I04
79 65 544	08B	213	5-I22
79 65 585	03A	057	2-C10
79 65 585	03A	059	2-C12
79 65 585	03A	061	2-C14
79 65 684	08A	055	4-H08
79 65 684	08A	059	4-H12
79 65 684	08B	021	5-A22
79 65 809	08B	021	5-A22
79 65 809	08B	251	5-K12
79 65 833	08A	093	4-I22
79 67 730	08A	027	4-G04
79 67 730	08A	029	4-G06
79 67 771	08A	093	4-I22
79 67 771	08A	097	4-J02
79 67 771	08B	239	5-J24
79 67 870	02	101	1-F06
79 67 870	02	103	1-F08
79 67 870	02	141	1-G22
79 67 938	02	027	1-C04
79 67 938	02	031	1-C08
79 67 938	03A	081	2-D10
79 67 938	03A	141	2-F22
79 67 938	05	021	4-A22
79 67 938	05	023	4-A24
79 67 938	05	025	4-B02
79 67 938	06	019	4-C20
79 67 938	06	021	4-C22
79 67 953	02	095	1-E24
79 67 953	02	097	1-F02
79 67 953	02	099	1-F04
79 67 953	02	101	1-F06
79 67 953	02	103	1-F08
79 67 953	02	147	1-H04
79 67 953	03A	093	2-D22
79 67 953	08A	009	4-F10
79 67 953	08A	061	4-H14
79 67 953	08A	065	4-H18
79 67 953	08A	111	4-J16
79 67 953	08B	215	5-I24
79 67 979	08A	009	4-F10
79 67 979	08A	111	4-J16
79 67 979	08A	113	4-J18
79 67 995	03A	097	2-E02
79 67 995	03A	139	2-F20
79 67 995	03A	151	2-G08
79 67 995	08A	019	4-F20
79 67 995	08B	037	5-B14
79 67 995	08C	021	6-A22
79 68 001	03A	097	2-E02
79 68 001	08B	037	5-B14
79 68 001	08C	013	6-A14
79 68 068	03B	027	3-B04
79 68 068	03B	049	3-C02
79 68 068	03B	071	3-C24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 68 068	03B	097	3-E02
79 68 068	03B	119	3-E24
79 68 068	03B	127	3-F08
79 68 068	03B	133	3-F14
79 68 068	03B	145	3-G02
79 68 076	04	065	3-J18
79 68 308	02	059	1-D12
79 68 308	02	147	1-H04
79 68 316	03A	027	2-B04
79 68 415	06	011	4-C12
79 68 415	08A	007	4-F08
79 68 415	08C	019	6-A20
79 68 415	08C	027	6-B04
79 68 555	03A	149	2-G06
79 68 555	03A	151	2-G08
79 68 845	08B	013	5-A14
79 69 223	02	093	1-E22
79 69 223	02	119	1-F24
79 69 223	03A	029	2-B06
79 69 223	03A	031	2-B08
79 69 223	03A	033	2-B10
79 69 223	03A	067	2-C20
79 69 223	05	015	4-A16
79 69 223	08A	035	4-G12
79 69 223	08A	045	4-G22
79 69 223	08A	049	4-H02
79 69 223	08A	051	4-H04
79 69 223	08A	061	4-H14
79 69 223	08A	065	4-H18
79 69 223	08B	029	5-B06
79 69 223	08B	231	5-J16
79 69 231	03B	111	3-E16
79 69 231	03B	117	3-E22
79 69 231	03B	125	3-F06
79 69 231	03B	133	3-F14
79 69 231	03B	143	3-F24
79 69 256	03B	111	3-E16
79 69 256	03B	119	3-E24
79 69 256	03B	127	3-F08
79 69 256	03B	135	3-F16
79 69 256	03B	145	3-G02
79 69 264	03B	129	3-F10
79 69 264	03B	137	3-F18
79 69 264	03B	149	3-G06
79 69 272	08A	039	4-G16
79 69 298	08A	005	4-F06
79 69 306	02	005	1-B06
79 69 306	05	011	4-A12
79 69 306	05	021	4-A22
79 69 306	05	023	4-A24
79 69 306	08A	005	4-F06
79 69 314	08A	099	4-J04
79 69 363	03A	139	2-F20
79 69 462	03A	139	2-F20
79 69 488	03A	139	2-F20
79 69 967	08A	045	4-G22
79 69 967	08A	051	4-H04
79 69 967	08C	031	6-B08
79 70 015	04	035	3-I12
79 70 015	08C	019	6-A20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 70 023	08A	063	4-H16
79 70 031	02	105	1-F10
79 70 072	02	105	1-F10
79 70 098	02	105	1-F10
79 70 098	02	131	1-G12
79 70 114	02	105	1-F10
79 70 114	02	107	1-F12
79 70 114	08C	029	6-B06
79 70 122	02	073	1-E02
79 70 122	02	105	1-F10
79 70 122	06	019	4-C20
79 70 130	02	047	1-C24
79 70 130	02	113	1-F18
79 70 130	06	019	4-C20
79 70 148	02	043	1-C20
79 70 148	02	045	1-C22
79 70 148	02	047	1-C24
79 70 148	02	113	1-F18
79 70 148	02	131	1-G12
79 70 155	02	043	1-C20
79 70 155	02	045	1-C22
79 70 155	02	113	1-F18
79 70 155	02	131	1-G12
79 70 163	04	069	3-J22
79 70 288	02	005	1-B06
79 70 288	02	035	1-C12
79 70 288	05	021	4-A22
79 70 288	05	023	4-A24
79 70 288	06	021	4-C22
79 70 304	08A	111	4-J16
79 70 304	08A	113	4-J18
79 70 304	08B	029	5-B06
79 70 320	04	065	3-J18
79 70 346	03A	051	2-C04
79 70 403	02	007	1-B08
79 70 403	08A	107	4-J12
79 70 403	08A	109	4-J14
79 70 437	02	095	1-E24
79 70 437	02	097	1-F02
79 70 437	02	099	1-F04
79 70 437	02	101	1-F06
79 70 437	02	103	1-F08
79 70 437	02	143	1-G24
79 70 437	02	145	1-H02
79 70 437	02	147	1-H04
79 70 536	02	047	1-C24
79 70 536	03A	077	2-D06
79 70 536	08A	039	4-G16
79 70 536	08A	063	4-H16
79 70 536	08A	067	4-H20
79 70 577	08B	215	5-I24
79 70 601	03A	097	2-E02
79 70 601	03A	175	2-H08
79 70 601	08A	021	4-F22
79 70 601	08A	097	4-J02
79 70 601	08A	127	4-K08
79 71 294	02	127	1-G08
79 71 294	06	011	4-C12
79 71 294	08A	019	4-F20
79 71 294	08B	177	5-H10

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D15 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 71 294	08B	193	5-I02
79 71 294	08B	235	5-J20
79 71 294	08B	245	5-K06
79 71 294	08B	247	5-K08
79 71 336	08C	009	6-A10
79 71 344	02	059	1-D12
79 71 344	03A	067	2-C20
79 71 351	03A	053	2-C06
79 71 351	03B	015	3-A16
79 71 351	03B	033	3-B10
79 71 351	03B	057	3-C10
79 71 351	03B	081	3-D10
79 71 351	03B	109	3-E14
79 71 351	08C	023	6-A24
79 71 385	08B	179	5-H12
79 71 393	03A	051	2-C04
79 71 393	08B	083	5-D12
79 71 393	08B	087	5-D16
79 71 393	08B	093	5-D22
79 71 393	08B	099	5-E04
79 71 393	08B	105	5-E10
79 71 393	08B	111	5-E16
79 71 393	08B	117	5-E22
79 71 393	08B	123	5-F04
79 71 393	08B	127	5-F08
79 71 393	08B	133	5-F14
79 71 393	08C	005	6-A06
79 71 393	08C	007	6-A08
79 71 393	08C	009	6-A10
79 71 393	08C	015	6-A16
79 71 393	08C	031	6-B08
79 71 401	08B	199	5-I08
79 71 443	08B	017	5-A18
79 71 443	08C	007	6-A08
79 71 443	08C	009	6-A10
79 71 500	08B	219	5-J04
79 71 658	02	005	1-B06
79 71 658	02	109	1-F14
79 71 658	02	111	1-F16
79 71 658	02	119	1-F24
79 71 658	02	143	1-G24
79 71 658	03A	005	2-A06
79 71 658	04	065	3-J18
79 71 658	05	015	4-A16
79 71 658	08A	045	4-G22
79 71 658	08A	049	4-H02
79 71 658	08A	069	4-H22
79 71 658	08A	129	4-K10
79 71 658	08B	231	5-J16
79 71 658	08C	029	6-B06
79 71 708	03B	009	3-A10
79 71 708	03B	017	3-A18
79 71 708	03B	027	3-B04
79 71 708	03B	037	3-B14
79 71 708	03B	049	3-C02
79 71 708	03B	059	3-C12
79 71 708	03B	071	3-C24
79 71 708	03B	085	3-D14
79 71 708	03B	093	3-D22
79 71 708	03B	097	3-E02
79 71 708	03B	111	3-E16
79 71 708	03B	119	3-E24
79 71 708	03B	127	3-F08
79 71 708	03B	133	3-F14
79 71 708	03B	143	3-F24
79 71 757	02	035	1-C12
79 71 757	02	095	1-E24
79 71 757	02	097	1-F02
79 71 757	02	099	1-F04
79 71 757	02	101	1-F06
79 71 757	02	103	1-F08
79 71 757	03A	073	2-D02
79 71 757	03A	141	2-F22
79 71 765	02	005	1-B06
79 71 765	06	005	4-C06
79 71 765	07	005	4-E06
79 71 765	07	009	4-E10
79 71 823	02	107	1-F12
79 71 823	02	109	1-F14
79 71 823	02	111	1-F16
79 71 823	02	115	1-F20
79 71 823	02	117	1-F22
79 71 823	03A	067	2-C20
79 71 823	03A	141	2-F22
79 71 864	02	133	1-G14
79 71 864	03A	139	2-F20
79 71 864	03A	175	2-H08
79 71 864	06	013	4-C14
79 71 864	08C	027	6-B04
79 71 872	03B	015	3-A16
79 71 872	03B	033	3-B10
79 71 872	03B	057	3-C10
79 71 872	03B	081	3-D10
79 71 872	03B	109	3-E14
79 71 872	08B	173	5-H06
79 71 872	08B	179	5-H12
79 71 872	08B	187	5-H20
79 71 872	08B	199	5-I08
79 71 872	08B	201	5-I10
79 71 872	08B	247	5-K08
79 71 872	08C	023	6-A24
79 71 880	02	047	1-C24
79 71 880	02	107	1-F12
79 71 880	03A	065	2-C18
79 71 880	03A	139	2-F20
79 71 880	04	027	3-I04
79 71 880	08A	131	4-K12
79 71 880	08A	133	4-K14
79 71 880	08C	027	6-B04
79 71 880	08C	029	6-B06
79 71 880	09C	031	6-B08
79 71 898	08A	139	2-F20
79 71 898	08C	023	6-A24
79 71 922	02	053	1-D06
79 71 922	03A	081	2-D10
79 71 922	04	009	3-H10
79 71 922	05	021	4-A22
79 71 922	05	023	4-A24
79 71 922	06	021	4-C22
79 71 922	07	009	4-E10
79 71 922	07	011	4-E12
79 72 029	03B	013	3-A14
79 72 029	03B	027	3-B04
79 72 029	03B	049	3-C02
79 72 029	03B	053	3-C06
79 72 029	03B	071	3-C24
79 72 029	03B	075	3-D04
79 72 029	03B	097	3-E02
79 72 029	03B	101	3-E06
79 72 029	03B	111	3-E16
79 72 029	03B	119	3-E24
79 72 029	03B	127	3-F08
79 72 029	03B	133	3-F14
79 72 029	03B	143	3-F24
79 72 045	02	109	1-F14
79 72 045	02	111	1-F16
79 72 045	02	133	1-G14
79 72 078	08C	023	6-A24
79 72 086	08C	021	6-A22
79 72 094	08C	021	6-A22
79 72 094	08C	023	6-A24
79 72 128	03A	087	2-D16
79 72 128	06B	015	5-A16
79 72 136	08A	005	4-F06
79 72 193	06	009	4-C10
79 72 284	03A	063	2-C16
79 72 292	02	005	1-B06
79 72 292	06	021	4-C22
79 72 292	06	023	4-C24
79 72 334	06	011	4-C12
79 72 334	06	021	4-C22
79 72 342	06	023	4-C24
79 72 425	08A	091	4-I20
79 72 441	02	113	1-F18
79 72 441	05	009	4-A10
79 72 441	08C	027	6-B04
79 72 466	03A	057	2-C10
79 72 466	03A	059	2-C12
79 72 466	03A	061	2-C14
79 72 466	03A	141	2-F22
79 72 466	08A	047	4-G24
79 72 466	08A	051	4-H04
79 72 474	08A	035	4-G12
79 72 482	08C	021	6-A22
79 72 490	08A	009	4-F10
79 72 490	08A	041	4-G18
79 72 490	08B	221	5-J06
79 72 490	08B	235	5-J20
79 72 516	08A	043	4-G20
79 72 516	08A	111	4-J16
79 72 516	08A	113	4-J18
79 72 516	08B	205	5-I14
79 72 516	08B	209	5-I18
79 72 573	02	109	1-F14
79 72 573	02	111	1-F16
79 72 573	08A	015	4-F16
79 72 573	08B	005	5-A06
79 72 573	08B	029	5-B06
79 72 573	08B	037	5-B14
79 72 573	08B	137	5-F18
79 72 573	08B	209	5-I18
79 72 573	08B	215	5-I24
79 72 607	02	109	1-F14
79 72 607	03A	141	2-F22
79 72 607	08B	015	5-A16
79 72 607	08B	029	5-B06
79 72 607	08B	211	5-I20
79 72 607	08B	215	5-I24
79 72 607	08B	251	5-K12
79 72 607	08C	027	6-B04
79 72 607	08C	029	6-B06
79 72 623	08B	175	5-H08
79 72 623	08B	189	5-H22
79 72 672	02	061	1-D14
79 72 698	02	027	1-C04
79 72 698	02	031	1-C08
79 72 698	02	123	1-G04
79 72 698	02	139	1-G20
79 72 748	06	023	4-C24
79 72 771	03A	051	2-C04
79 72 771	08B	009	5-A10
79 72 771	08B	029	5-B06
79 72 797	02	113	1-F18
79 72 805	03A	143	2-F24
79 72 805	05	025	4-B02
79 72 821	08B	199	5-I08
79 72 888	02	037	1-C14
79 72 888	02	039	1-C16
79 72 888	02	041	1-C18
79 72 888	02	043	1-C20
79 72 888	02	045	1-C22
79 72 888	08A	053	4-H06
79 72 888	08A	059	4-H12
79 72 896	03A	089	2-D18
79 72 896	08A	055	4-H08
79 72 896	08A	059	4-H12
79 72 896	08B	119	5-E24
79 72 896	08B	129	5-F10
79 72 938	03A	089	2-D18
79 72 938	08B	221	5-J06
79 72 938	08C	013	6-A14
79 72 938	08C	029	6-B06
79 72 946	08B	037	5-B14
79 72 953	02	135	1-G16
79 73 001	08A	035	4-G12
79 73 001	08C	027	6-B04
79 73 050	08B	029	5-B06
79 73 126	05	011	4-A12
79 73 126	08B	005	5-A06
79 73 126	08C	021	6-A22
79 73 134	08A	019	4-F20
79 73 134	08A	039	4-G16
79 73 134	08A	079	4-I08
79 73 134	08A	099	4-J04
79 73 134	08A	125	4-K06
79 73 159	03A	029	2-B06
79 73 159	03A	031	2-B08
79 73 159	03A	033	2-B10
79 73 159	03A	035	2-B12

6-D16 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 73 175	08A	125	4-K06
79 73 191	03A	017	2-A18
79 73 191	08A	099	4-J04
79 73 191	08A	133	4-K14
79 73 209	08A	039	4-G16
79 73 258	08B	089	5-D18
79 73 258	09	009	6-C10
79 73 365	02	109	1-F14
79 73 365	03A	043	2-B20
79 73 365	08A	079	4-I08
79 73 365	08A	125	4-K06
79 73 423	08A	061	4-H14
79 73 423	08A	065	4-H18
79 73 456	02	089	1-E18
79 73 456	02	133	1-G14
79 73 464	06	005	4-C06
79 73 522	02	057	1-D10
79 73 522	02	113	1-F18
79 73 522	02	133	1-G14
79 73 522	05	011	4-A12
79 73 555	03A	141	2-F22
79 73 571	02	005	1-B06
79 73 571	08A	005	4-F06
79 73 605	02	051	1-D04
79 73 605	04	009	3-H10
79 73 613	02	057	1-D10
79 73 654	07	005	4-E06
79 73 738	04	035	3-I12
79 73 753	06	011	4-C12
79 73 761	06	011	4-C12
79 73 779	02	005	1-B06
79 73 779	08A	005	4-F06
79 73 787	06	019	4-C20
79 73 787	08C	019	6-A20
79 73 795	06	019	4-C20
79 73 803	02	005	1-B06
79 73 852	08A	005	4-F06
79 73 951	08B	229	5-J14
79 73 993	02	057	1-D10
79 74 009	02	133	1-G14
79 74 033	08B	211	5-I20
79 74 074	04	035	3-I12
79 74 090	03A	141	2-F22
79 74 090	03A	155	2-G12
79 74 090	03A	157	2-G14
79 74 090	08C	007	6-A08
79 74 090	08C	009	6-A10
79 74 108	03A	007	2-A08
79 74 108	03A	009	2-A10
79 74 231	08A	015	4-F16
79 74 231	08A	035	4-G12
79 74 231	08A	053	4-H06
79 74 231	08A	057	4-H10
79 74 231	08A	063	4-H16
79 74 231	08B	013	5-A14
79 74 231	08B	029	5-B06
79 74 231	08B	085	5-D14
79 74 231	08B	089	5-D18
79 74 231	08B	095	5-D24
79 74 231	08B	101	5-E06
79 74 231	08B	107	5-E12
79 74 231	08B	113	5-E18
79 74 231	08B	119	5-E24
79 74 231	08B	125	5-F06
79 74 231	08B	129	5-F10
79 74 231	08B	133	5-F14
79 74 280	08C	023	6-A24
79 74 280	08C	027	6-B04
79 74 298	02	109	1-F14
79 74 298	02	111	1-F16
79 74 298	02	119	1-F24
79 74 298	03A	141	2-F22
79 74 298	04	065	3-J18
79 74 298	08C	023	6-A24
79 74 298	08C	027	6-B04
79 74 306	02	061	1-D14
79 74 330	08B	173	5-H06
79 74 330	08B	187	5-H20
79 74 330	08B	201	5-I10
79 74 348	08B	171	5-H04
79 74 371	06	011	4-C12
79 74 371	08B	013	5-A14
79 74 397	03A	141	2-F22
79 74 397	08B	207	5-I16
79 74 447	02	005	1-B06
79 74 470	08A	035	4-G12
79 74 512	03A	027	2-B04
79 74 512	06	011	4-C12
79 74 512	08B	017	5-A18
79 74 538	08B	029	5-B06
79 74 546	02	053	1-D06
79 74 546	02	059	1-D12
79 74 553	02	053	1-D06
79 74 611	03A	163	2-G20
79 74 637	03A	153	2-G10
79 74 637	03A	155	2-G12
79 74 637	03A	157	2-G14
79 74 637	03A	159	2-G16
79 74 637	03A	163	2-G20
79 74 637	08C	027	6-B04
79 74 645	03A	153	2-G10
79 74 645	03A	155	2-G12
79 74 645	03A	157	2-G14
79 74 645	03A	159	2-G16
79 74 645	03A	163	2-G20
79 74 652	03A	153	2-G10
79 74 652	03A	155	2-G12
79 74 652	03A	157	2-G14
79 74 652	03A	159	2-G16
79 74 652	03A	163	2-G20
79 74 660	03A	153	2-G10
79 74 660	03A	155	2-G12
79 74 660	03A	157	2-G14
79 74 660	03A	159	2-G16
79 74 660	03A	163	2-G20
79 74 678	03A	153	2-G10
79 74 678	03A	155	2-G12
79 74 678	03A	157	2-G14
79 74 678	03A	159	2-G16
79 74 678	03A	163	2-G20
79 74 678	08C	027	6-B04
79 74 694	02	033	1-C10
79 74 694	08A	017	4-F18
79 74 694	08A	039	4-G16
79 74 694	08A	041	4-G18
79 74 728	08B	029	5-B06
79 74 728	08B	231	5-J16
79 74 769	03A	005	2-A06
79 74 769	08C	021	6-A22
79 74 777	02	005	1-B06
79 74 777	03A	007	2-A08
79 74 777	03A	009	2-A10
79 74 777	08A	005	4-F06
79 74 785	04	035	3-I12
79 74 793	04	015	3-H16
79 74 801	04	013	3-H14
79 74 819	04	013	3-H14
79 74 850	08A	007	4-F08
79 74 884	08B	179	5-H12
79 74 884	08B	189	5-H22
79 74 884	08B	203	5-I12
79 74 884	08B	247	5-K08
79 74 975	02	107	1-F12
79 74 983	03A	051	2-C04
79 74 983	08A	015	4-F16
79 74 983	08B	229	5-J14
79 75 006	03A	057	2-C10
79 75 006	03A	059	2-C12
79 75 006	03A	061	2-C14
79 75 006	03A	065	2-C18
79 75 006	06	019	4-C20
79 75 030	08C	019	6-A20
79 75 048	08B	229	5-J14
79 75 071	08B	013	5-A14
79 75 071	08B	015	5-A16
79 75 097	07	011	4-E12
79 75 105	07	011	4-E12
79 75 113	04	007	3-H08
79 75 113	06	013	4-C14
79 75 154	08A	015	4-F16
79 75 162	08A	013	4-F14
79 75 170	03A	029	2-B06
79 75 170	03A	033	2-B10
79 75 170	03A	035	2-B12
79 75 170	08A	015	4-F16
79 75 170	08A	039	4-G16
79 75 170	08B	231	5-J16
79 75 196	08A	045	4-G22
79 75 196	08A	069	4-H22
79 75 212	08B	215	5-I20
79 75 212	08B	245	5-K06
79 75 220	02	005	1-B06
79 75 261	02	061	1-D14
79 75 261	02	133	1-G14
79 75 261	03A	019	2-A20
79 75 261	03A	073	2-D02
79 75 261	03A	075	2-D04
79 75 261	03A	077	2-D06
79 75 261	03A	085	2-D14
79 75 261	03A	087	2-D16
79 75 261	03A	091	2-D20
79 75 261	03A	143	2-F24
79 75 261	03A	157	2-G14
79 75 261	08A	033	4-G10
79 75 261	08A	039	4-G16
79 75 261	08A	041	4-G18
79 75 261	08A	063	4-H16
79 75 261	08A	067	4-H20
79 75 261	08A	093	4-I22
79 75 261	08A	097	4-J02
79 75 261	08A	099	4-J04
79 75 261	08A	125	4-K06
79 75 261	08A	127	4-K08
79 75 279	03A	017	2-A18
79 75 279	08A	041	4-G18
79 75 279	08A	079	4-I08
79 75 279	08A	099	4-J04
79 75 279	08A	125	4-K06
79 75 279	08A	133	4-K14
79 75 295	08B	017	5-A18
79 75 329	08B	229	5-J14
79 75 337	08A	019	4-F20
79 75 337	08B	167	5-G24
79 75 352	08A	035	4-G12
79 75 402	08B	037	5-B14
79 75 402	08B	173	5-H06
79 75 402	08B	175	5-H08
79 75 402	08B	187	5-H20
79 75 402	08B	189	5-H22
79 75 402	08B	201	5-I10
79 75 410	08B	037	5-B14
79 75 436	08B	213	5-I22
79 75 451	03A	005	2-A06
79 75 451	08A	067	4-H20
79 75 469	02	105	1-F10
79 75 469	03A	065	2-C18
79 75 477	08A	035	4-G12
79 75 485	08C	007	6-A08
79 75 485	08C	009	6-A10
79 75 501	04	031	3-I08
79 75 501	06	005	4-C06
79 75 519	03A	017	2-A18
79 75 527	02	005	1-B06
79 75 537	06	023	4-C24
79 75 535	03A	053	2-C06
79 75 535	08B	009	5-A10
79 75 543	02	081	1-E10
79 75 550	08A	107	4-J12
79 75 550	08A	109	4-J14
79 75 550	08A	111	4-J16
79 75 550	08A	113	4-J18
79 75 576	02	109	1-F14
79 75 576	02	135	1-G16
79 75 576	03A	017	2-A18
79 75 576	03A	141	2-F22
79 75 576	08C	029	6-B06
79 75 584	08C	009	6-A10
79 75 592	08B	173	5-H06
79 75 618	02	133	1-G14
79 75 642	03A	139	2-F20

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D17 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 75 659	03A	139	2-F20
79 75 667	03A	139	2-F20
79 75 717	08A	027	4-G04
79 75 717	08A	029	4-G06
79 75 725	02	105	1-F10
79 75 766	08A	005	4-F06
79 75 766	08B	203	5-I12
79 75 766	08B	245	5-K06
79 75 766	08B	247	5-K08
79 75 774	02	053	1-D06
79 75 774	08A	079	4-I08
79 75 774	08A	099	4-J04
79 75 774	08B	211	5-I20
79 75 774	08B	215	5-I24
79 75 782	08A	039	4-G16
79 76 897	07	011	4-E12
79 76 897	08B	211	5-I20
79 76 897	08B	215	5-I24
79 76 905	07	009	4-E10
79 76 913	08A	005	4-F06
79 76 921	08A	005	4-F06
79 76 939	03A	013	2-A14
79 76 939	03A	015	2-A16
79 76 947	03A	065	2-C18
79 76 954	03A	029	2-B06
79 76 954	03A	033	2-B10
79 76 962	04	015	3-H16
79 76 970	08C	019	6-A20
79 76 988	08A	079	4-I08
79 76 988	08A	125	4-K06
79 76 988	08A	133	4-K14
79 76 996	08A	079	4-I08
79 76 996	08A	125	4-K06
79 77 010	08A	065	4-H18
79 77 010	08B	211	5-I20
79 77 028	08B	205	5-I14
79 77 028	08B	209	5-I18
79 77 028	08B	213	5-I22
79 77 176	02	133	1-G14
79 77 176	03A	065	2-C18
79 77 234	02	131	1-G12
79 77 267	02	005	1-B06
79 77 283	08B	155	5-G12
79 77 283	08B	159	5-G16
79 77 283	08B	163	5-G20
79 77 309	06	005	4-C06
79 77 317	08B	009	5-A10
79 77 317	08B	017	5-A18
79 77 317	08B	021	5-A22
79 77 333	03A	051	2-C04
79 77 341	08A	021	4-F22
79 77 341	08B	141	5-F22
79 77 341	08B	145	5-G02
79 77 341	08B	153	5-G10
79 77 341	08B	159	5-G16
79 77 341	08B	161	5-G18
79 77 358	08B	145	5-G02
79 77 358	08B	153	5-G10
79 77 358	08B	159	5-G16
79 77 358	08B	161	5-G18
79 77 358	08B	221	5-J06
79 77 366	08B	155	5-G12
79 77 366	08B	159	5-G16
79 77 366	08B	163	5-G20
79 77 366	08B	227	5-J12
79 77 374	02	099	1-F04
79 77 374	02	103	1-F08
79 77 374	02	143	1-G24
79 77 374	02	145	1-H02
79 77 374	02	147	1-H04
79 77 374	08A	019	4-F20
79 77 382	06	005	4-C06
79 77 390	08A	107	4-J12
79 77 390	08A	109	4-J14
79 77 390	08A	127	4-K08
79 77 424	04	031	3-I08
79 77 432	06	019	4-C20
79 77 457	03A	017	2-A18
79 77 465	08A	041	4-G18
79 77 465	08A	079	4-I08
79 77 465	08A	099	4-J04
79 77 465	08A	125	4-K06
79 77 465	08A	133	4-K14
79 77 499	03A	005	2-A06
79 77 507	08B	243	5-K04
79 77 523	08A	079	4-I08
79 77 523	08A	125	4-K06
79 77 556	03B	125	3-F06
79 77 556	03B	143	3-F24
79 77 580	02	119	1-F24
79 77 580	02	141	1-G22
79 77 580	02	143	1-G24
79 77 598	02	117	1-F22
79 77 606	08C	019	6-A20
79 77 630	04	065	3-I18
79 77 648	08B	009	5-A10
79 77 663	08A	097	4-J02
79 77 671	03A	087	2-D16
79 77 689	08A	087	4-I16
79 77 689	08B	095	5-D24
79 77 689	08B	107	5-E12
79 77 689	08B	119	5-E24
79 77 713	08A	061	4-H14
79 77 788	02	039	1-C16
79 77 788	02	041	1-C18
79 77 788	02	045	1-C22
79 77 804	08B	005	5-A06
79 77 804	08B	013	5-A14
79 77 804	08B	227	5-J12
79 77 861	02	133	1-G14
79 77 895	08B	235	5-J20
79 77 929	08C	027	6-B04
79 77 937	08B	239	5-J24
79 77 960	08A	039	4-G16
79 77 960	08B	219	5-J04
79 78 083	03A	057	2-C10
79 78 083	03A	059	2-C12
79 78 083	03A	061	2-C14
79 78 117	03A	087	2-D16
79 78 117	08C	027	6-B04
79 78 133	02	105	1-F10
79 78 141	08C	027	6-B04
79 78 141	08C	029	6-B06
79 78 174	08C	027	6-B04
79 78 208	08C	027	6-B04
79 78 307	09C	021	6-A22
79 78 372	03A	097	2-E02
79 78 620	08A	009	4-F10
79 78 646	08A	099	4-J04
79 78 695	07	011	4-E12
79 78 703	07	011	4-E12
79 78 745	03A	011	2-A12
79 78 794	05	005	4-A06
79 79 172	07	011	4-E12
79 79 214	07	009	4-E10
79 79 248	05	021	4-A22
79 79 248	05	023	4-A24
79 79 248	06	005	4-C06
79 79 248	07	009	4-E10
79 79 396	07	009	4-E10
79 79 412	07	011	4-E12
79 79 479	08B	203	5-I12
79 79 479	08B	247	5-K08
79 79 511	07	009	4-E10
79 79 511	07	013	4-E14
79 79 537	07	005	4-E06
79 79 578	07	005	4-E06
79 79 586	07	011	4-E12
79 79 602	06	011	4-C12
79 79 602	08B	013	5-A14
79 79 602	08C	027	6-B04
79 79 610	08A	045	4-G22
79 79 651	08B	241	5-K02
79 81 921	08B	211	5-I20
79 81 921	08B	245	5-K06
79 81 947	08A	099	4-J04
79 81 947	08A	133	4-K14
79 81 954	08A	061	4-H14
79 82 119	08C	027	6-B04
79 82 184	08A	053	4-H06
79 82 184	08A	057	4-H10
79 82 333	03A	069	2-C22
79 82 366	08A	015	4-F16
79 94 510	08A	123	4-K04
79 94 882	08A	123	4-K04
79 94 890	08A	123	4-K04
80 05 910	02	071	1-D24
80 05 910	02	073	1-E02
80 05 928	02	071	1-D24
80 05 928	02	073	1-E02
80 05 936	02	071	1-D24
80 05 936	02	073	1-E02
80 07 486	02	075	1-E04
80 07 486	02	079	1-E08
80 19 697	03A	085	2-D14
80 19 705	03A	087	2-D16
80 19 713	08B	173	5-H06
80 19 713	08B	187	5-H20
80 19 747	03A	017	2-A18
80 19 887	02	063	1-D16
80 29 895	02	015	1-B16
80 29 911	02	071	1-D24
80 29 911	02	073	1-E02
80 29 911	02	123	1-G04
80 29 911	03A	065	2-C18
80 29 929	02	019	1-B20
80 29 929	02	091	1-E20
80 29 935	08C	019	6-A20
80 29 943	03A	063	2-C16
80 29 548	03A	087	2-D16
80 29 548	08A	079	4-I08
80 29 548	08C	031	6-B08
80 29 555	02	109	1-F14
80 29 555	03A	049	2-C02
80 29 555	03A	063	2-C16
80 29 555	03A	149	2-G06
80 29 936	02	079	1-E08
80 29 936	08B	005	5-A06
80 29 936	08B	015	5-A16
80 29 936	08B	017	5-A18
80 29 944	04	031	3-I08
80 29 944	08A	087	4-I16
80 29 944	08B	083	5-D12
80 29 944	08B	105	5-E10
80 29 944	08B	111	5-E16
80 29 944	08B	173	5-H06
80 29 944	08B	175	5-H08
80 29 944	08B	189	5-H22
80 29 944	08B	201	5-I10
80 29 944	08B	249	5-K10
80 29 951	02	019	1-B20
80 29 951	03A	087	2-D16
80 29 951	08B	189	5-H22
80 29 951	08B	193	5-I02
80 29 951	08B	245	5-K06
80 29 951	08B	247	5-K08
80 29 951	08B	249	5-K10
80 29 951	08B	253	5-K14
80 29 951	08C	029	6-B06
80 29 969	05	025	4-B02
80 29 969	08A	047	4-G24
80 29 969	08A	051	4-H04
80 29 969	08C	007	6-A08
80 29 969	08C	009	6-A10
80 29 977	08A	041	4-G18
80 29 985	06	011	4-C12
80 29 985	06	021	4-C22
80 29 993	05	015	4-A16
80 34 373	04	019	3-H20
80 34 373	04	073	3-K02
80 34 456	02	019	1-B20
80 34 761	02	015	1-B16
80 34 902	02	023	1-B24
80 34 928	02	023	1-B24
80 46 542	02	065	1-D18
80 46 625	02	027	1-C04
80 46 625	02	029	1-C06
80 46 625	02	031	1-C08
80 46 625	02	033	1-C10
80 46 625	04	027	3-I04
80 46 625	04	035	3-I12
80 47 813	04	029	3-I06
80 48 324	04	027	3-I04
80 48 324	04	029	3-I06
80 48 324	04	073	3-K02
80 48 670	02	019	1-B20
80 49 298	04	027	3-I04
80 49 298	04	029	3-I06
80 49 553	04	019	3-H20
80 49 736	04	027	3-I04
80 50 593	02	075	1-E04
80 50 593	02	079	1-E08
80 56 004	02	119	1-F24
80 56 004	02	143	1-G24
80 56 160	05	005	4-A06
80 56 160	08A	061	4-H14
80 56 228	08A	053	4-H06
80 56 228	08A	057	4-H10
80 59 073	02	075	1-E04
80 59 073	02	077	1-E06
80 59 107	08C	009	6-A10
80 59 206	08A	061	4-H14
80 59 206	08A	065	4-H18
80 59 214	08A	053	4-H06
80 59 214	08A	057	4-H10
80 59 230	03A	087	2-D16
80 59 230	08C	007	6-A08
80 59 230	08C	009	6-A10
80 59 248	08B	219	5-J04
80 59 263	08B	005	5-A06
80 59 271	08A	133	4-K14
80 59 396	03A	069	2-C22
80 59 396	08A	035	4-G12
80 59 396	08A	053	4-H06
80 59 396	08A	057	4-H10
80 59 396	08A	087	4-I16
80 59 396	08B	013	5-A14
80 59 396	08B	029	5-B06
80 59 396	08B	083	5-D12
80 59 396	08B	085	5-D14
80 59 396	08B	087	5-D16
80 59 396	08B	089	5-D18
80 59 396	08B	093	5-D22
80 59 396	08B	095	5-D24
80 59 396	08B	099	5-E04
80 59 396	08B	101	5-E06
80 59 396	08B	113	5-E18
80 59 396	08B	125	5-F06
80 59 396	08B	133	5-F14
80 59 396	08B	173	5-H06
80 59 396	08B	175	5-H08
80 59 396	08B	189	5-H22
80 59 396	08B	201	5-I10
80 59 396	08B	229	5-J14
80 59 396	08B	245	5-K06
80 59 396	08B	247	5-K08
80 59 396	08B	249	5-K10
80 59 412	02	089	1-E18
80 59 412	02	133	1-G14
80 59 412	08B	199	5-I08
80 59 420	02	133	1-G14
80 59 420	08B	095	5-D24
80 59 420	08B	101	5-E06
80 59 420	08B	229	5-J14
80 59 420	08C	031	6-B08
80 59 537	08A	079	4-I08
80 59 537	08A	125	4-K06
80 59 537	08B	177	5-H10
80 59 537	08B	193	5-I02
80 59 537	08B	245	5-K06
80 59 537	08B	249	5-K10
80 59 552	03A	059	2-C12
80 59 552	03A	061	2-C14
80 59 552	03A	141	2-F22
80 59 552	08B	211	5-I20
80 59 552	08B	245	5-K06
80 59 560	08B	189	5-H22
80 59 560	08B	247	5-K08
80 59 560	08B	249	5-K10
80 59 560	08B	253	5-K14
80 59 578	03A	151	2-G08
80 59 578	08A	061	4-H14
80 59 578	08A	075	4-I04
80 59 578	08A	107	4-J12
80 59 578	08A	109	4-J14
80 59 743	03A	035	2-C08
80 69 015	02	075	1-E04
80 69 015	02	079	1-E08
80 73 108	02	129	1-G10
80 73 108	06	007	4-C08
80 73 108	08B	179	5-H12
80 73 108	08B	189	5-H22
80 73 116	06	017	4-C18
80 73 223	02	015	1-B16
80 73 223	02	123	1-G04
80 73 223	08A	111	4-J16
80 73 223	08C	029	6-B06
80 73 249	02	085	1-E14
80 73 249	02	087	1-E16
80 73 249	08B	229	5-J14
80 73 512	04	031	3-I08
80 73 512	08C	029	6-B06
80 73 538	07	005	4-E06
80 73 538	07	009	4-E10
80 73 538	07	011	4-E12
80 73 546	06	017	4-C18
80 73 546	07	011	4-E12
80 73 942	08A	037	4-G14
80 74 106	03A	011	2-A12
80 74 106	03A	055	2-C08
80 74 106	03A	057	2-C10
80 74 106	03A	059	2-C12
80 74 106	04	013	3-H14
80 74 106	04	065	3-J18
80 74 106	05	013	4-A14
80 74 106	05	019	4-A20
80 74 106	05	033	4-B10
80 74 106	05	035	4-B12
80 74 106	06	021	4-C22
80 74 106	06	023	4-C24
80 74 106	08A	037	4-G14
80 74 106	08A	079	4-I08
80 74 288	02	075	1-E04
80 74 288	02	079	1-E08
80 74 288	03A	073	2-D02
80 74 288	08C	029	6-B06
80 82 927	07	009	4-E10
80 82 935	02	007	1-B08
80 82 935	02	011	1-B12
80 82 935	03A	141	2-F22
80 82 943	02	005	1-B06
80 82 950	03A	021	2-A22
80 82 950	03A	023	2-A24
80 82 950	03A	025	2-B02
80 82 968	04	005	3-H06
80 82 968	05	019	4-A20
80 83 958	06	021	4-C22
80 83 974	04	041	3-I18
80 84 063	02	107	1-F12
80 84 162	07	011	4-E12
80 84 204	07	011	4-E12
80 84 212	07	009	4-E10
80 84 410	07	009	4-E10
80 84 436	07	011	4-E12
80 91 738	03A	141	2-F22
80 94 732	04	013	3-H14
80 96 364	02	079	1-E08
80 97 867	02	015	1-B16
80 97 883	02	019	1-B20
80 97 883	02	083	1-E12
80 98 311	05	015	4-A16
80 98 378	03A	007	2-A08
80 98 378	03A	009	2-A10
80 98 378	03A	011	2-A12
81 09 647	04	013	3-H14
81 09 670	02	027	1-C04
81 09 670	02	031	1-C08
81 17 020	02	141	1-G22
81 17 038	02	141	1-G22
81 17 816	04	021	3-H22
81 17 616	04	073	3-K02
81 17 640	04	019	3-H20
81 17 640	04	021	3-H22
81 17 657	04	019	3-H20
81 23 143	02	009	1-B10
81 23 176	02	019	1-B20
81 23 218	02	007	1-B08
81 23 218	02	009	1-B10
81 23 218	02	015	1-B16
81 23 465	02	007	1-B08
81 23 465	02	011	1-B12
81 23 671	02	077	1-E06
81 23 721	02	015	1-B16
81 23 721	02	071	1-D24
81 23 721	02	073	1-E02
81 23 721	02	123	1-G04
81 23 739	02	087	1-E16
81 23 762	04	013	3-H14
81 23 788	02	123	1-G04
81 23 903	02	035	1-C12
81 24 133	04	013	3-H14
81 24 133	04	073	3-K02
81 24 141	02	015	1-B16
81 24 141	02	035	1-C12
81 24 141	02	069	1-D22
81 24 141	02	071	1-D24
81 24 141	02	073	1-E02
81 24 141	02	089	1-E18
81 24 141	02	091	1-E20
81 24 141	02	123	1-G04
81 24 141	02	141	1-G22
81 24 158	02	123	1-G04
81 24 158	02	125	1-G06
81 24 158	02	141	1-G22
81 24 182	04	013	3-H14
81 24 208	02	123	1-G04
81 24 216	02	027	1-C04
81 25 007	02	079	1-E08
81 25 007	02	083	1-E12
81 25 023	02	027	1-C04
81 25 023	02	031	1-C08
81 25 023	02	083	1-E12
81 25 023	03A	027	2-B04
81 25 031	02	029	1-C06
81 25 031	02	031	1-C08
81 25 049	02	019	1-B20
81 25 130	02	095	1-E24
81 25 130	02	097	1-F02
81 25 130	02	099	1-F04
81 25 130	02	101	1-F06
81 25 130	02	103	1-F08

6-D18 Numerical register — Nummerregister

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 25 148	02	063	1-D16
81 25 148	02	123	1-G04
81 25 148	02	131	1-G12
81 25 155	02	063	1-D16
81 25 155	02	073	1-E02
81 25 163	02	015	1-B16
81 25 163	02	031	1-C08
81 25 163	02	035	1-C12
81 25 163	02	073	1-E02
81 25 163	04	021	3-H22
81 25 189	02	007	1-B08
81 25 189	02	009	1-B10
81 25 189	02	015	1-B16
81 25 189	02	027	1-C04
81 25 189	02	031	1-C08
81 25 189	02	075	1-E04
81 25 189	02	125	1-G06
81 25 189	04	027	3-I04
81 25 197	02	069	1-D22
81 25 197	02	071	1-D24
81 25 197	02	073	1-E02
81 25 197	02	123	1-G04
81 25 197	02	133	1-G14
81 25 205	02	011	1-B12
81 25 205	02	015	1-B16
81 25 205	02	027	1-C04
81 25 205	02	031	1-C08
81 25 205	02	069	1-D22
81 25 205	02	071	1-D24
81 25 205	02	073	1-E02
81 25 213	02	007	1-B08
81 25 213	02	009	1-B10
81 25 213	02	019	1-B20
81 25 213	04	013	3-H14
81 25 221	02	031	1-C08
81 25 221	04	013	3-H14
81 25 221	04	019	3-H20
81 25 221	04	021	3-H22
81 25 221	04	025	3-I02
81 25 239	02	019	1-B20
81 25 239	02	123	1-G04
81 25 247	02	019	1-B20
81 25 254	02	027	1-C04
81 25 254	02	031	1-C08
81 25 262	02	015	1-B16
81 25 262	02	019	1-B20
81 25 262	02	027	1-C04
81 25 262	02	031	1-C08
81 25 304	02	027	1-C04
81 25 304	02	031	1-C08
81 29 868	03A	019	2-A20
81 29 868	03A	027	2-B04
81 29 876	02	127	1-G08
81 30 064	02	005	1-B06
81 30 064	08A	007	4-F08
81 31 989	02	089	1-E18
81 31 989	02	091	1-E20
81 31 989	02	141	1-G22
81 32 227	02	123	1-G04
81 32 227	02	141	1-G22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 32 235	02	089	1-E18
81 32 235	02	091	1-E20
81 32 235	02	141	1-G22
81 35 147	03B	013	3-A14
81 35 147	03B	111	3-E16
81 35 147	03B	119	3-E24
81 35 147	03B	127	3-F08
81 35 147	03B	135	3-F16
81 35 147	03B	145	3-G02
81 35 600	03B	013	3-A14
81 38 679	03B	013	3-A14
81 38 679	03B	113	3-E18
81 38 679	03B	119	3-E24
81 38 679	03B	127	3-F08
81 38 679	03B	135	3-F16
81 38 679	03B	145	3-G02
81 39 339	03A	019	2-A20
81 39 339	03A	027	2-B04
81 39 362	03A	019	2-A20
81 45 542	02	123	1-G04
81 45 542	02	141	1-G22
81 45 559	02	089	1-E18
81 45 559	02	091	1-E20
81 45 559	02	141	1-G22
81 51 045	02	079	1-E08
81 51 052	02	075	1-E04
81 51 052	02	079	1-E08
81 51 219	03A	063	2-C16
81 51 227	03A	049	2-C02
81 51 227	03A	063	2-C16
81 51 235	03A	055	2-C08
81 51 235	04	013	3-H14
81 51 235	04	065	3-J18
81 51 235	05	019	4-A20
81 51 235	06	021	4-C22
81 51 235	08A	037	4-G14
81 51 243	08C	019	6-A20
81 51 326	02	029	1-C06
81 51 326	02	079	1-E08
81 51 474	07	005	4-E06
81 51 474	07	009	4-E10
81 51 474	07	011	4-E12
81 51 482	06	017	4-C18
81 51 482	06	025	4-D02
81 51 482	07	011	4-E12
81 52 381	02	029	1-C06
81 52 381	02	033	1-C10
82 06 096	03A	073	2-D02
82 06 096	08A	009	4-F10
82 06 096	08A	019	4-F20
82 06 096	08A	023	4-F24
82 06 096	08A	033	4-G10
82 09 009	08A	019	4-F20
82 35 178	08A	009	4-F10
82 35 178	08A	011	4-F12
82 35 178	08A	111	4-J16
82 35 178	08C	029	6-B06
82 38 305	08B	015	5-A16
82 38 305	08B	219	5-J04
82 39 170	08A	007	4-F08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 39 170	08A	009	4-F10
82 41 325	08A	009	4-F10
82 52 363	08A	037	4-G14
82 52 363	08A	061	4-H14
82 52 553	04	007	3-H08
82 52 553	05	021	4-A22
82 52 553	05	023	4-A24
82 52 553	08A	035	4-G12
82 52 553	08A	037	4-G14
82 52 553	08A	061	4-H14
82 52 553	08A	067	4-H20
82 57 750	08A	065	4-H18
82 58 428	08A	107	4-J12
82 58 428	08A	109	4-J14
82 62 610	08B	021	5-A22
82 62 958	02	099	1-F04
82 62 958	02	103	1-F08
82 62 958	02	143	1-G24
82 62 958	02	145	1-H02
82 62 958	02	147	1-H04
82 62 958	08A	019	4-F20
82 62 958	08A	035	4-G12
82 64 355	08A	035	4-G12
82 66 876	08A	009	4-F10
82 67 296	03A	019	2-A20
82 67 296	08A	033	4-G10
82 72 635	08A	033	4-G10
82 78 343	08A	037	4-G14
82 78 467	03A	063	2-C16
82 78 467	08A	017	4-F18
82 78 558	03A	141	2-F22
82 78 558	08A	037	4-G14
82 78 558	08A	039	4-G16
82 78 558	08C	021	6-A22
82 78 558	08C	023	6-A24
82 83 715	08A	021	4-F22
82 83 715	08A	023	4-F24
82 83 897	08A	095	4-I24
82 83 897	08A	127	4-K08
82 83 905	08A	095	4-I24
82 83 905	08A	127	4-K08
82 83 988	08A	091	4-I20
82 83 988	08A	127	4-K08
82 84 069	08A	093	4-I22
82 84 069	08A	133	4-K14
82 84 077	08A	045	4-G22
82 84 077	08A	047	4-G24
82 84 077	08A	049	4-H02
82 84 077	08A	051	4-H04
82 84 077	08A	133	4-K14
82 84 085	08A	045	4-G22
82 84 085	08A	047	4-G24
82 84 085	08A	049	4-H02
82 84 085	08A	051	4-H04
82 84 085	08A	133	4-K14
82 84 101	08A	091	4-I20
82 84 101	08A	127	4-K08
82 84 127	08A	115	4-J20
82 84 135	08A	115	4-J20
82 84 143	08A	117	4-J22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 84 150	08A	119	4-J24
82 84 168	08A	115	4-J20
82 84 176	08A	115	4-J20
82 84 184	08A	117	4-J22
82 84 192	08A	071	4-H24
82 84 242	08A	071	4-H24
82 84 259	08A	071	4-H24
82 84 267	08A	081	4-I10
82 84 267	08A	125	4-K06
82 84 267	08A	129	4-K10
82 84 275	08A	081	4-I10
82 84 275	08A	129	4-K10
82 84 283	08A	079	4-I08
82 84 283	08A	129	4-K10
82 84 531	08A	091	4-I20
82 84 531	08A	127	4-K08
82 85 231	08A	115	4-J20
82 85 231	08A	117	4-J22
82 85 231	08A	119	4-J24
82 85 231	08A	123	4-K04
82 85 249	08A	123	4-K04
82 85 256	08A	123	4-K04
82 85 264	08A	123	4-K04
82 85 272	08A	091	4-I20
82 85 272	08A	127	4-K08
82 85 280	08A	045	4-G22
82 85 298	08A	049	4-H02
82 85 330	08A	091	4-I20
82 85 330	08A	127	4-K08
82 85 488	08A	115	4-J20
82 85 488	08A	117	4-J22
82 85 488	08A	119	4-J24
82 85 496	08A	115	4-J20
82 85 496	08A	117	4-J22
82 85 496	08A	119	4-J24
82 86 296	03A	141	2-F22
82 86 296	04	065	3-J18
82 86 296	08A	019	4-F20
82 86 296	08A	035	4-G12
82 86 296	08B	231	5-J16
82 86 296	08B	235	5-J20
83 00 725	02	027	1-C04
83 00 725	02	031	1-C08
83 07 407	04	005	3-H06
83 08 389	04	061	3-J14
83 11 904	08B	207	5-I16
83 11 904	08B	245	5-K06
83 15 467	02	047	1-C24
83 15 558	07	009	4-E10
83 17 828	02	081	1-E10
83 19 915	02	053	1-D06
83 20 319	02	065	1-D18
83 22 331	04	061	3-J14
83 22 927	02	053	1-D06
83 23 362	03A	023	2-A24
83 25 656	02	051	1-D04
83 26 704	02	053	1-D06
83 26 704	02	057	1-D10
83 26 704	02	069	1-D22
83 26 704	02	071	1-D24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
83 26 704	02	073	1-E02
83 26 704	03A	091	2-D20
83 30 268	02	107	1-F12
83 30 268	08C	029	6-B06
83 30 953	09	013	6-C14
83 32 587	02	051	1-D04
83 32 587	02	055	1-D08
83 34 005	02	081	1-E10
83 35 002	04	031	3-I08
83 35 614	02	079	1-E08
83 41 257	02	145	1-H02
83 44 335	04	021	3-H22
83 46 470	02	015	1-B16
83 46 470	04	013	3-H14
83 46 983	02	023	1-B24
83 47 106	02	023	1-B24
83 47 122	02	019	1-B20
83 47 270	02	025	1-C02
83 47 577	02	023	1-B24
83 47 650	02	023	1-B24
83 47 676	02	023	1-B24
83 48 047	02	015	1-B16
83 48 534	02	019	1-B20
83 48 609	02	027	1-C04
83 48 609	02	031	1-C08
83 48 641	02	075	1-E04
83 49 938	02	023	1-B24
83 49 946	02	023	1-B24
83 50 936	02	023	1-B24
83 50 977	02	025	1-C02
83 50 985	02	025	1-C02
83 52 502	02	015	1-B16
83 52 692	02	125	1-G06
83 52 692	02	139	1-G20
83 53 484	02	075	1-E04
83 53 484	02	077	1-E06
83 55 315	02	023	1-B24
83 55 323	02	025	1-C02
83 55 331	02	025	1-C02
83 55 349	02	023	1-B24
83 55 356	02	023	1-B24
83 55 364	02	023	1-B24
83 57 345	02	075	1-E04
83 57 345	02	077	1-E06
83 57 378	02	075	1-E04
83 57 378	02	079	1-E08
83 57 436	02	093	1-E22
83 57 444	02	093	1-E22
83 57 444	02	145	1-H02
83 57 451	02	093	1-E22
83 57 451	02	141	1-G22
83 57 543	02	071	1-D24
83 57 543	02	073	1-E02
83 57 832	02	081	1-E10
83 59 275	02	125	1-G06
83 59 275	02	141	1-G22
83 59 937	02	069	1-D22
83 59 937	02	071	1-D24
83 59 937	02	073	1-E02
83 60 240	02	011	1-B12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
83 60 943	02	087	1-E16
83 60 943	02	141	1-G22
83 62 287	03A	021	2-A22
83 62 287	03A	023	2-A24
83 62 287	03A	025	2-B02
83 66 007	02	015	1-B16
83 66 262	02	129	1-G10
83 66 262	02	141	1-G22
83 69 829	02	019	1-B20
83 71 650	02	107	1-F12
83 75 172	04	031	3-I08
83 78 630	03B	005	3-A06
83 78 630	03B	017	3-A18
83 78 630	03B	039	3-B16
83 78 630	03B	061	3-C14
83 78 630	03B	087	3-D16
83 80 982	04	005	3-H06
84 00 350	08A	021	4-F22
84 10 961	03A	143	2-F24
84 10 961	03A	177	2-H10
84 12 215	08A	101	4-J06
84 12 215	08B	085	5-D14
84 12 215	08B	089	5-D18
84 12 215	08B	095	5-D24
84 12 215	08B	101	5-E06
84 12 215	08B	107	5-E12
84 12 215	08B	113	5-E18
84 12 215	08B	119	5-E24
84 12 215	08B	125	5-F06
84 12 215	08B	129	5-F10
84 12 215	08B	135	5-F16
84 26 199	08A	063	4-H16
84 26 199	08A	065	4-H18
84 26 199	08B	221	5-J06
84 27 841	08B	021	5-A22
84 27 841	08B	029	5-B06
84 28 997	03A	051	2-C04
84 38 467	08B	211	5-I20
84 38 467	08B	215	5-I24
84 41 503	03A	097	2-E02
84 41 503	08B	219	5-J04
84 45 637	09	013	6-C14
84 52 898	08B	137	5-F18
84 52 898	08B	139	5-F20
84 52 898	08B	159	5-G16
84 52 898	08B	163	5-G20
84 52 898	08B	219	5-J04
84 53 755	08A	053	4-H06
84 53 755	08A	057	4-H10
84 57 541	08B	211	5-I20
84 57 541	08B	215	5-I24
84 57 541	08B	251	5-K12
84 58 598	08B	199	5-I08
84 58 598	08B	211	5-I20
84 58 598	08B	215	5-I24
84 58 598	08B	251	5-K12
84 59 497	05	017	4-A18
84 59 497	05	019	4-A20
84 67 409	08B	231	5-J16
84 86 292	08A	117	4-J22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
84 86 292	08A	119	4-J24
84 86 300	08A	117	4-J22
84 86 300	08A	119	4-J24
84 86 318	08A	123	4-K04
84 86 326	08A	123	4-K04
84 87 217	08A	119	4-J24
84 87 225	08A	119	4-J24
84 87 266	08A	115	4-J20
84 87 274	08A	115	4-J20
84 87 282	08A	117	4-J22
84 87 613	08A	121	4-K02
84 87 621	08A	115	4-J20
84 87 621	08A	117	4-J22
84 87 621	08A	119	4-J24
84 87 621	08A	121	4-K02
84 87 639	08A	123	4-K04
84 87 647	08A	123	4-K04
84 87 670	08A	123	4-K04
84 87 688	08A	123	4-K04
84 87 696	08A	123	4-K04
84 87 704	08A	123	4-K04
84 87 712	08A	117	4-J22
84 87 738	08A	123	4-K04
84 87 746	08A	123	4-K04
84 87 753	08A	115	4-J20
84 87 761	08A	115	4-J20
84 87 779	08A	123	4-K04
84 87 787	08A	123	4-K04
84 87 795	08A	123	4-K04
84 87 969	08A	115	4-J20
84 87 977	08A	115	4-J20
84 87 985	08A	117	4-J22
84 90 708	08B	035	5-B12
84 99 204	08B	239	5-J24
84 99 204	08B	243	5-K04
84 99 204	08B	247	5-K08
84 99 204	08B	249	5-K10
85 00 613	03A	053	2-C06
85 00 613	03A	069	2-C22
85 00 613	08B	017	5-A18
85 00 613	08B	029	5-B06
85 00 613	08C	005	6-A06
85 01 264	03A	051	2-C04
85 03 476	03B	021	3-A22
85 03 476	03B	119	3-E24
85 03 476	03B	127	3-F08
85 04 029	03A	057	2-C10
85 04 144	03A	065	2-C18
85 06 925	09	011	6-C12
85 06 941	08C	027	6-B04
85 06 941	09	011	6-C12
85 08 848	02	135	1-G16
85 08 848	03A	065	2-C18
85 09 002	02	133	1-G14
85 09 002	03A	065	2-C18
85 09 002	03A	073	2-D02
85 09 697	08B	017	5-A18
85 09 846	03B	005	3-A06
85 09 846	03B	017	3-A18
85 09 846	03B	039	3-B16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 09 846	03B	061	3-C14
85 09 846	03B	087	3-D16
85 09 846	03B	113	3-E18
85 09 846	03B	119	3-E24
85 09 846	03B	127	3-F08
85 09 846	03B	135	3-F16
85 09 846	03B	145	3-G02
85 10 091	02	133	1-G14
85 10 851	03A	029	2-B06
85 10 851	03A	031	2-B08
85 13 574	03A	065	2-C18
85 14 028	03B	005	3-A06
85 14 028	03B	017	3-A18
85 14 028	03B	037	3-B14
85 14 028	03B	059	3-C12
85 14 028	03B	085	3-D14
85 14 028	03B	113	3-E18
85 14 028	03B	119	3-E24
85 14 028	03B	127	3-F08
85 14 028	03B	135	3-F16
85 14 028	03B	145	3-G02
85 14 036	03B	005	3-A06
85 14 036	03B	017	3-A18
85 14 036	03B	037	3-B14
85 14 036	03B	059	3-C12
85 14 036	03B	085	3-D14
85 14 036	03B	113	3-E18
85 14 036	03B	119	3-E24
85 14 036	03B	127	3-F08
85 14 036	03B	135	3-F16
85 14 036	03B	145	3-G02
85 16 916	03B	005	3-A06
85 16 916	03B	017	3-A18
85 16 916	03B	037	3-B14
85 16 916	03B	059	3-C12
85 16 916	03B	085	3-D14
85 16 957	03B	013	3-A14
85 16 957	03B	031	3-B08
85 16 957	03B	053	3-C06
85 16 957	03B	077	3-D06
85 16 957	03B	105	3-E10
85 16 957	03B	111	3-E16
85 16 957	03B	117	3-E22
85 18 557	03A	065	2-C18
85 21 593	03B	007	3-A08
85 21 593	03B	009	3-A10
85 21 593	03B	011	3-A12
85 21 593	03B	013	3-A14
85 21 593	03B	015	3-A16
85 21 593	03B	019	3-A20
85 21 593	03B	021	3-A22
85 21 593	03B	025	3-B02
85 21 593	03B	027	3-B04
85 21 593	03B	031	3-B08
85 21 593	03B	033	3-B10
85 21 593	03B	039	3-B16
85 21 593	03B	041	3-B18
85 21 593	03B	045	3-B22
85 21 593	03B	049	3-C02
85 21 593	03B	053	3-C06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D21 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 21 593	03B	057	3-C10
85 21 593	03B	061	3-C14
85 21 593	03B	063	3-C16
85 21 593	03B	067	3-C20
85 21 593	03B	073	3-D02
85 21 593	03B	075	3-D04
85 21 593	03B	079	3-D08
85 21 593	03B	081	3-D10
85 21 593	03B	083	3-D12
85 21 593	03B	087	3-D16
85 21 593	03B	089	3-D18
85 21 593	03B	093	3-D22
85 21 593	03B	101	3-E06
85 21 593	03B	109	3-E14
85 21 593	03B	113	3-E18
85 21 593	03B	119	3-E24
85 21 593	03B	127	3-F08
85 21 593	03B	135	3-F16
85 21 593	03B	145	3-G02
85 21 619	03B	039	3-B16
85 21 619	03B	061	3-C14
85 21 619	03B	067	3-D16
85 21 668	03B	115	3-E20
85 21 668	03B	123	3-F04
85 21 668	03B	131	3-F12
85 21 668	03B	141	3-F22
85 21 668	03B	151	3-G08
85 21 676	03B	005	3-A06
85 21 676	03B	017	3-A18
85 21 676	03B	037	3-B14
85 21 676	03B	059	3-C12
85 21 676	03B	085	3-D14
85 21 676	03B	113	3-E18
85 21 676	03B	121	3-F02
85 21 676	03B	129	3-F10
85 21 676	03B	137	3-F18
85 21 676	03B	147	3-G04
85 21 684	03B	005	3-A06
85 21 684	03B	017	3-A18
85 21 684	03B	037	3-B14
85 21 684	03B	059	3-C12
85 21 684	03B	085	3-D14
85 21 684	03B	113	3-E18
85 21 684	03B	121	3-F02
85 21 684	03B	129	3-F10
85 21 684	03B	137	3-F18
85 21 684	03B	147	3-G04
85 21 692	03B	005	3-A06
85 21 692	03B	017	3-A18
85 21 692	03B	037	3-B14
85 21 692	03B	059	3-C12
85 21 692	03B	085	3-D14
85 21 700	03B	013	3-A14
85 21 700	03B	053	3-C06
85 21 700	03B	075	3-D04
85 21 700	03B	101	3-E06
85 21 718	03B	053	3-C06
85 21 718	03B	075	3-D04
85 21 718	03B	101	3-E06
85 22 310	03A	153	2-G10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 22 310	03A	155	2-G12
85 22 310	03A	157	2-G14
85 22 310	03A	159	2-G16
85 22 310	03A	163	2-G20
85 22 310	03A	165	2-G22
85 22 310	08C	027	6-B04
85 22 492	03A	077	2-D06
85 22 526	03B	005	3-A06
85 22 526	03B	017	3-A18
85 22 526	03B	037	3-B14
85 22 526	03B	059	3-C12
85 22 526	03B	085	3-D14
85 22 526	03B	113	3-E18
85 22 526	03B	121	3-F02
85 22 526	03B	129	3-F10
85 22 526	03B	137	3-F18
85 22 526	03B	147	3-G04
85 22 542	03B	005	3-A06
85 22 542	03B	017	3-A18
85 22 542	03B	037	3-B14
85 22 542	03B	059	3-C12
85 22 542	03B	085	3-D14
85 22 542	03B	115	3-E20
85 22 542	03B	123	3-F04
85 22 542	03B	131	3-F12
85 22 542	03B	139	3-F20
85 22 542	03B	149	3-G06
85 22 583	03B	011	3-A12
85 22 583	03B	025	3-B02
85 22 583	03B	047	3-B24
85 22 583	03B	071	3-C24
85 22 583	03B	097	3-E02
85 22 583	03B	113	3-E18
85 22 583	03B	119	3-E24
85 22 583	03B	127	3-F08
85 22 583	03B	135	3-F16
85 22 583	03B	145	3-G02
85 22 591	03B	011	3-A12
85 22 591	03B	113	3-E18
85 22 617	03B	019	3-A20
85 22 617	03B	021	3-A22
85 22 617	03B	025	3-B02
85 22 617	03B	027	3-B04
85 22 617	03B	031	3-B08
85 22 617	03B	033	3-B10
85 22 617	03B	035	3-B12
85 22 617	03B	041	3-B18
85 22 617	03B	045	3-B22
85 22 617	03B	049	3-C02
85 22 617	03B	053	3-C06
85 22 617	03B	057	3-C10
85 22 617	03B	067	3-C20
85 22 617	03B	079	3-D08
85 22 617	03B	083	3-D12
85 22 617	03B	093	3-D22
85 22 617	03B	123	3-F04
85 22 617	03B	131	3-F12
85 22 617	03B	139	3-F20
85 22 617	03B	149	3-G06
85 30 081	03B	011	3-A12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 30 099	03B	011	3-A12
85 30 099	03B	025	3-B02
85 30 099	03B	047	3-B24
85 30 099	03B	071	3-C24
85 30 099	03B	097	3-E02
85 30 107	03B	005	3-A06
85 30 107	03B	017	3-A18
85 30 107	03B	037	3-B14
85 30 107	03B	059	3-C12
85 30 107	03B	085	3-D14
85 30 107	03B	113	3-E18
85 30 107	03B	119	3-E24
85 30 107	03B	127	3-F08
85 30 107	03B	135	3-F16
85 30 107	03B	145	3-G02
85 30 115	03B	005	3-A06
85 30 115	03B	017	3-A18
85 30 115	03B	037	3-B14
85 30 115	03B	059	3-C12
85 30 115	03B	085	3-D14
85 30 917	03A	139	2-F20
85 32 426	08B	017	5-A18
85 32 756	03A	037	2-B14
85 32 756	03A	039	2-B16
85 32 756	03A	043	2-B20
85 32 756	03A	045	2-B22
85 33 028	03B	005	3-A06
85 33 028	03B	017	3-A18
85 33 028	03B	037	3-B14
85 33 028	03B	059	3-C12
85 33 028	03B	085	3-D14
85 33 028	03B	113	3-E18
85 33 028	03B	121	3-F02
85 33 028	03B	129	3-F10
85 33 028	03B	137	3-F18
85 33 028	03B	147	3-G04
85 33 176	03A	097	2-E02
85 33 184	03B	005	3-A06
85 33 184	03B	017	3-A18
85 33 184	03B	037	3-B14
85 33 184	03B	059	3-C12
85 33 184	03B	085	3-D14
85 33 358	03A	065	2-C18
85 33 366	03A	065	2-C18
85 33 366	03A	077	2-D06
85 33 655	03B	013	3-A14
85 33 655	03B	031	3-B08
85 33 655	03B	053	3-C06
85 33 655	03B	075	3-D04
85 33 655	03B	105	3-E10
85 33 697	03A	175	2-H08
85 33 697	03B	027	3-B04
85 33 697	03B	049	3-C02
85 33 697	03B	071	3-C24
85 33 697	03B	097	3-E02
85 35 692	03A	039	2-B16
85 35 692	03A	043	2-B20
85 35 692	03A	045	2-B22
85 35 692	03A	049	2-C02
85 36 401	03A	153	2-G10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 36 401	03A	155	2-G12
85 36 401	03A	157	2-G14
85 36 401	03A	159	2-G16
85 36 401	03A	163	2-G20
85 36 401	08C	027	6-B04
85 36 419	02	107	1-F12
85 36 419	03A	139	2-F20
85 37 672	03A	037	2-B14
85 37 672	03A	045	2-B22
85 39 363	03B	057	3-C1[illegible]
85 39 587	05	011	4-A12
85 40 981	09	011	6-C12
85 41 203	03B	005	3-A06
85 41 203	03B	011	3-A12
85 41 203	03B	013	3-A14
85 41 203	03B	017	3-A18
85 41 203	03B	021	3-A22
85 41 203	03B	025	3-B02
85 41 203	03B	029	3-B06
85 41 203	03B	037	3-B14
85 41 203	03B	041	3-B18
85 41 203	03B	045	3-B22
85 41 203	03B	053	3-C06
85 41 203	03B	059	3-C12
85 41 203	03B	063	3-C16
85 41 203	03B	067	3-C20
85 41 203	03B	075	3-D04
85 41 203	03B	085	3-D14
85 41 203	03B	089	3-D18
85 41 203	03B	093	3-D22
85 41 203	03B	103	3-E08
85 41 203	03B	113	3-E18
85 41 203	03B	121	3-F02
85 41 203	03B	129	3-F10
85 41 203	03B	137	3-F18
85 41 203	03B	147	3-G04
85 41 211	03B	005	3-A06
85 41 211	03B	013	3-A14
85 41 211	03B	017	3-A18
85 41 211	03B	029	3-B06
85 41 211	03B	053	3-C06
85 41 211	03B	075	3-D04
85 41 211	03B	103	3-E08
85 41 211	03B	115	3-E20
85 41 211	03B	121	3-F02
85 41 211	03B	129	3-F10
85 41 211	03B	137	3-F18
85 41 211	03B	147	3-G04
85 41 229	03B	005	3-A06
85 41 229	03B	017	3-A18
85 41 229	03B	037	3-B14
85 41 229	03B	059	3-C12
85 41 229	03B	085	3-D14
85 42 912	03A	069	2-C22
85 44 298	03B	007	3-A08
85 44 298	03B	009	3-A10
85 44 298	03B	011	3-A12
85 44 298	03B	019	3-A20
85 44 298	03B	023	3-A24
85 44 298	03B	025	3-B02

6-D22 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 44 298	03B	045	3-B22
85 44 298	03B	053	3-C06
85 44 298	03B	067	3-C20
85 44 298	03B	075	3-D04
85 44 298	03B	079	3-D08
85 44 298	03B	093	3-D22
85 44 298	03B	101	3-E06
85 44 298	03B	109	3-E14
85 44 298	03B	115	3-E20
85 44 298	03B	121	3-F02
85 44 298	03B	129	3-F10
85 44 298	03B	137	3-F18
85 44 298	03B	147	3-G04
85 44 298	08B	251	5-K12
85 44 306	03B	115	3-E20
85 44 306	03B	121	3-F02
85 44 306	03B	129	3-F10
85 44 306	03B	137	3-F18
85 44 306	03B	147	3-G04
85 44 314	03B	005	3-A06
85 44 314	03B	009	3-A10
85 44 314	03B	019	3-A20
85 44 314	03B	025	3-B02
85 44 314	03B	045	3-B22
85 44 314	03B	053	3-C06
85 44 314	03B	067	3-C20
85 44 314	03B	075	3-D04
85 44 314	03B	079	3-D08
85 44 314	03B	093	3-D22
85 44 314	03B	101	3-E06
85 44 314	03B	115	3-E20
85 44 314	03B	121	3-F02
85 44 314	03B	129	3-F10
85 44 314	03B	137	3-F18
85 44 314	03B	147	3-G04
85 44 314	08B	251	5-K12
85 44 322	03B	009	3-A10
85 44 322	03B	025	3-B02
85 44 322	03B	045	3-B22
85 44 322	03B	067	3-C20
85 44 322	03B	093	3-D22
85 44 322	03B	115	3-E20
85 44 322	03B	121	3-F02
85 44 322	03B	129	3-F10
85 44 322	03B	137	3-F18
85 44 322	03B	147	3-G04
85 44 363	03B	013	3-A14
85 44 363	03B	029	3-B06
85 44 363	03B	053	3-C06
85 44 363	03B	075	3-D04
85 44 363	03B	103	3-E08
85 44 371	03B	013	3-A14
85 44 371	03B	031	3-B08
85 44 371	03B	057	3-C10
85 44 371	03B	079	3-D08
85 44 389	03B	013	3-A14
85 44 389	03B	015	3-A16
85 44 389	03B	031	3-B08
85 44 389	03B	057	3-C10
85 44 389	03B	113	3-E18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 44 389	03B	121	3-F02
85 44 389	03B	129	3-F10
85 44 413	03A	057	2-C10
85 44 413	03A	059	2-C12
85 44 413	03A	061	2-C14
85 44 421	03A	057	2-C10
85 44 421	03A	059	2-C12
85 44 421	03A	061	2-C14
85 44 660	03A	065	2-C18
85 44 728	03A	065	2-C18
85 44 801	03A	037	2-B14
85 44 801	03A	039	2-B16
85 47 077	03A	063	2-C16
85 47 077	03A	173	2-H06
85 47 291	08A	047	4-G24
85 47 291	08A	129	4-K10
85 47 309	08A	051	4-H04
85 47 309	08A	129	4-K10
85 47 317	08A	085	4-I14
85 47 317	08A	129	4-K10
85 47 325	08A	085	4-I14
85 47 325	08A	129	4-K10
85 47 333	08A	047	4-G24
85 47 333	08A	085	4-I14
85 47 333	08A	131	4-K12
85 47 358	03A	173	2-H06
85 47 374	03A	057	2-C10
85 47 374	03A	059	2-C12
85 47 374	03A	173	2-H06
85 47 390	08A	051	4-H04
85 47 390	08A	133	4-K14
85 47 408	03A	063	2-C16
85 47 408	03A	173	2-H06
85 47 473	08A	047	4-G24
85 47 473	08A	085	4-I14
85 47 473	08A	131	4-K12
85 47 507	08B	171	5-H04
85 47 507	08B	251	5-K12
85 47 515	08B	171	5-H04
85 47 515	08B	251	5-K12
85 47 523	08B	171	5-H04
85 47 523	08B	251	5-K12
85 47 556	08C	031	6-B08
85 47 564	03A	061	2-C14
85 47 564	03A	173	2-H06
85 47 622	03A	067	2-C20
85 47 622	03A	175	2-H08
85 47 838	03A	029	2-B06
85 47 838	03A	175	2-H08
85 47 846	03A	031	2-B08
85 47 846	03A	175	2-H08
85 48 059	03A	175	2-H08
85 48 075	03A	079	2-D08
85 48 075	03A	175	2-H08
85 48 315	08C	029	6-B06
85 48 489	03A	059	2-C12
85 48 489	03A	061	2-C14
85 48 547	03A	055	2-C08
85 48 554	03A	127	2-F08
85 48 554	03A	135	2-F16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 48 554	03A	177	2-H10
85 48 992	03A	071	2-C24
85 50 824	03A	029	2-B06
85 50 824	03A	031	2-B08
85 50 824	03A	033	2-B10
85 52 044	03A	065	2-C18
85 52 044	03A	077	2-D06
85 52 325	03A	043	2-B20
85 52 663	03A	139	2-F20
85 52 863	03A	177	2-H10
85 52 663	08B	199	5-I08
85 52 663	08B	247	5-K08
85 52 721	03A	141	2-F22
85 52 721	03B	009	3-A10
85 52 721	03B	023	3-A24
85 52 721	03B	043	3-B20
85 52 721	03B	067	3-C20
85 52 721	03B	093	3-D22
85 53 315	03A	069	2-C22
85 53 356	03A	069	2-C22
85 53 463	03A	153	2-G10
85 53 463	03A	155	2-G12
85 53 463	03A	157	2-G14
85 53 463	03A	159	2-G16
85 53 463	03A	163	2-G20
85 53 794	03A	051	2-C04
85 58 538	03B	021	3-A22
85 58 538	03B	041	3-B18
85 58 538	03B	063	3-C16
85 58 538	03B	089	3-D18
85 59 221	08B	017	5-A18
85 59 320	03A	057	2-C10
85 59 320	03A	059	2-C12
85 59 320	03A	061	2-C14
85 60 476	03B	017	3-A18
85 60 476	03B	037	3-B14
85 60 476	03B	059	3-C12
85 60 476	03B	085	3-D14
85 60 476	03B	121	3-F02
85 60 476	03B	129	3-F10
85 60 476	03B	137	3-F18
85 60 476	03B	147	3-G04
85 61 623	03B	005	3-A06
85 61 623	03B	019	3-A20
85 61 623	08B	251	5-K12
85 61 631	03B	007	3-A08
85 61 631	03B	019	3-A20
85 61 631	08B	251	5-K12
85 64 916	03B	009	3-A10
85 64 916	03B	023	3-A24
85 64 916	03B	045	3-B22
85 64 916	03B	067	3-C20
85 64 916	03B	093	3-D22
85 64 924	03B	009	3-A10
85 64 924	03B	025	3-B02
85 64 924	03B	045	3-B22
85 64 924	03B	067	3-C20
85 64 924	03B	093	3-D22
85 64 973	03A	005	2-A06
85 64 973	03A	141	2-F22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 64 973	08C	027	6-B04
85 65 590	03A	007	2-A08
85 65 855	03A	067	2-C20
85 65 855	03A	077	2-D06
85 65 855	03A	175	2-H08
85 66 135	03A	139	2-F20
85 66 143	03A	139	2-F20
85 66 259	03A	073	2-D02
85 66 374	03A	017	2-A18
85 66 598	08C	021	6-A22
85 66 762	03A	069	2-C22
85 66 853	03A	171	2-H04
85 68 693	03A	171	2-H04
85 69 139	03B	115	3-E20
85 69 139	03B	121	3-F02
85 69 139	03B	129	3-F10
85 69 139	03B	137	3-F18
85 69 139	03B	147	3-G04
85 71 382	03B	007	3-A08
85 71 382	03B	009	3-A10
85 71 382	03B	019	3-A20
85 71 382	03B	021	3-A22
85 71 382	03B	041	3-B18
85 71 382	03B	063	3-C16
85 71 382	03B	089	3-D18
85 71 382	03B	091	3-D20
85 71 861	03A	007	2-A08
85 71 887	03A	007	2-A08
85 71 986	03A	007	2-A08
85 71 986	03A	009	2-A10
85 71 986	03A	011	2-A12
85 72 034	03A	007	2-A08
85 72 190	03A	153	2-G10
85 72 596	03B	115	3-E20
85 73 669	03A	065	2-C18
85 73 677	03A	065	2-C18
85 73 677	08B	021	5-A22
85 73 677	08B	251	5-K12
85 73 826	03A	017	2-A18
85 73 834	03A	017	2-A18
85 74 048	03B	011	3-A12
85 74 048	03B	027	3-B04
85 74 048	03B	049	3-C02
85 74 048	03B	075	3-D04
85 74 048	03B	101	3-E06
85 74 097	03B	009	3-A10
85 74 097	03B	025	3-B02
85 74 097	03B	045	3-B22
85 74 105	03A	141	2-F22
85 74 105	03B	009	3-A10
85 74 105	03B	025	3-B02
85 74 105	03B	045	3-B22
85 74 121	03B	015	3-A16
85 74 139	03A	085	2-D14
85 74 469	08B	017	5-A18
85 74 816	03A	017	2-A18
85 74 949	03B	021	3-A22
85 74 949	03B	041	3-B18
85 74 949	03B	063	3-C16
85 74 949	03B	089	3-D18

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-D23 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 75 599	03A	141	2-F22
85 75 599	08A	033	4-G10
85 77 801	03A	051	2-C04
85 78 262	03A	027	2-B04
85 78 775	03A	053	2-C06
85 79 930	03B	015	3-A16
85 79 930	03B	031	3-B08
85 79 930	03B	057	3-C10
85 79 930	03B	079	3-D08
85 79 930	03B	109	3-E14
85 79 955	03A	141	2-F22
85 79 955	03B	009	3-A10
85 79 955	03B	025	3-B02
85 79 955	03B	043	3-B20
85 79 955	03B	045	3-B22
85 79 955	03B	049	3-C02
85 79 955	03B	063	3-C16
85 79 955	03B	067	3-C20
85 79 955	03B	071	3-C24
85 79 955	03B	089	3-D18
85 79 955	03B	093	3-D22
85 79 955	03B	095	3-D24
85 79 955	03B	099	3-E04
85 82 082	03B	011	3-A12
85 82 082	03B	027	3-B04
85 82 082	03B	073	3-D02
85 82 082	03B	101	3-E06
85 82 090	03B	013	3-A14
85 82 090	03B	031	3-B08
85 82 090	03B	053	3-C06
85 82 090	03B	079	3-D08
85 82 090	03B	115	3-E20
85 82 090	03B	121	3-F02
85 82 090	03B	129	3-F10
85 82 090	03B	137	3-F18
85 82 090	03B	147	3-G04
85 82 397	03B	037	3-B14
85 82 397	03B	059	3-C12
85 82 397	03B	135	3-F16
85 82 405	03B	017	3-A18
85 82 405	03B	121	3-F02
85 82 413	03B	009	3-A10
85 82 413	03B	023	3-A24
85 82 413	03B	043	3-B20
85 82 413	03B	067	3-C20
85 82 413	03B	093	3-D22
85 82 413	03B	115	3-E20
85 82 413	03B	121	3-F02
85 82 413	03B	129	3-F10
85 82 413	03B	139	3-F20
85 82 413	03B	149	3-G06
85 82 439	03B	129	3-F10
85 82 439	03B	137	3-F18
85 82 439	03B	147	3-G04
85 82 454	03B	021	3-A22
85 82 454	03B	027	3-B04
85 82 454	03B	041	3-B18
85 82 454	03B	053	3-C06
85 82 454	03B	063	3-C16
85 82 454	03B	075	3-D04
85 82 454	03B	089	3-D18
85 82 454	03B	101	3-E06
85 82 454	03B	119	3-E24
85 82 454	03B	127	3-F08
85 82 454	03B	135	3-F16
85 82 454	03B	145	3-G02
85 82 546	03B	037	3-B14
85 82 546	03B	059	3-C12
85 82 546	03B	135	3-F16
85 82 579	03B	123	3-F04
85 82 579	03B	131	3-F12
85 82 579	03B	139	3-F20
85 82 579	03B	149	3-G06
85 82 603	08B	251	5-K12
85 82 637	03B	021	3-A22
85 82 637	03B	117	3-E22
85 83 627	03A	153	2-G10
85 83 627	03A	155	2-G12
85 83 627	03A	157	2-G14
85 83 627	03A	159	2-G16
85 83 627	03A	163	2-G20
85 86 802	03B	035	3-B12
85 86 802	03B	057	3-C10
85 86 802	03B	083	3-D12
85 87 016	03A	073	2-D02
85 87 024	03A	073	2-D02
85 87 081	03A	073	2-D02
85 87 099	03A	073	2-D02
85 87 107	03A	073	2-D02
85 87 198	03B	115	3-E20
85 87 198	03B	123	3-F04
85 87 198	03B	131	3-F12
85 87 198	03B	139	3-F20
85 87 198	03B	151	3-G08
85 87 198	08C	031	6-B08
85 87 248	03A	007	2-A08
85 87 248	03A	009	2-A10
85 87 248	03A	011	2-A12
85 87 347	03A	075	2-D04
85 87 412	03B	015	3-A16
85 87 412	03B	031	3-B08
85 87 412	03B	057	3-C10
85 87 412	03B	081	3-D10
85 87 412	03B	109	3-E14
85 87 420	03B	015	3-A16
85 87 420	03B	031	3-B08
85 87 420	03B	035	3-B12
85 87 420	03B	057	3-C10
85 87 420	03B	079	3-D08
85 87 420	03B	083	3-D12
85 87 420	03B	109	3-E14
85 87 438	03B	015	3-A16
85 87 438	03B	031	3-B08
85 87 438	03B	035	3-B12
85 87 438	03B	057	3-C10
85 87 438	03B	081	3-D10
85 87 438	03B	083	3-D12
85 87 438	03B	109	3-E14
85 87 446	03B	015	3-A16
85 87 446	03B	033	3-B10
85 87 446	03B	057	3-C10
85 87 446	03B	081	3-D10
85 87 446	03B	109	3-E14
85 87 453	03B	015	3-A16
85 87 453	03B	031	3-B08
85 87 453	03B	035	3-B12
85 87 453	03B	057	3-C10
85 87 453	03B	081	3-D10
85 87 453	03B	083	3-D12
85 87 453	03B	109	3-E14
85 87 461	03B	015	3-A16
85 87 461	03B	033	3-B10
85 87 461	03B	057	3-C10
85 87 461	03B	081	3-D10
85 87 461	03B	109	3-E14
85 87 487	03B	015	3-A16
85 87 487	03B	031	3-B08
85 87 487	03B	035	3-B12
85 87 487	03B	057	3-C10
85 87 487	03B	081	3-D10
85 87 487	03B	083	3-D12
85 87 487	03B	109	3-E14
85 87 495	03B	015	3-A16
85 87 495	03B	033	3-B10
85 87 495	03B	057	3-C10
85 87 495	03B	081	3-D10
85 87 495	03B	083	3-D12
85 87 495	03B	109	3-E14
85 87 503	03B	035	3-B12
85 87 503	03B	057	3-C10
85 87 503	03B	083	3-D12
85 87 511	03B	035	3-B12
85 87 511	03B	057	3-C10
85 87 511	03B	083	3-D12
85 87 511	03B	109	3-E14
85 87 552	03B	009	3-A10
85 87 552	03B	013	3-A14
85 87 552	03B	021	3-A22
85 87 552	03B	027	3-B04
85 87 552	03B	041	3-B18
85 87 552	03B	053	3-C06
85 87 552	03B	063	3-C16
85 87 552	03B	075	3-D04
85 87 552	03B	089	3-D16
85 87 552	03B	101	3-E06
85 87 552	03B	109	3-E14
85 87 552	03B	115	3-E20
85 87 552	03B	121	3-F02
85 87 552	03B	129	3-F10
85 87 552	03B	139	3-F20
85 87 560	03B	027	3-B04
85 87 560	03B	053	3-C06
85 87 560	03B	075	3-D04
85 87 560	03B	101	3-E06
85 87 560	03B	121	3-F02
85 87 560	03B	129	3-F10
85 87 560	03B	139	3-F20
85 87 560	03B	149	3-G06
85 87 636	03A	153	2-G10
85 87 636	03A	155	2-G12
85 87 636	03A	157	2-G14
85 87 636	03A	161	2-G18
85 87 636	03A	165	2-G22
85 90 549	03A	007	2-A08
85 90 549	03A	009	2-A10
85 90 549	03A	011	2-A12
85 90 689	03A	073	2-D02
85 90 838	03A	069	2-C22
85 90 903	03A	009	2-A10
85 90 911	03A	007	2-A08
85 90 911	03A	009	2-A10
85 90 929	03A	009	2-A10
85 90 945	03A	009	2-A10
85 90 986	03A	009	2-A10
85 90 994	03A	007	2-A08
85 90 994	03A	009	2-A10
85 90 994	03A	011	2-A12
85 91 075	03A	007	2-A08
85 91 216	03A	067	2-C20
85 91 224	03A	067	2-C20
85 91 729	03A	155	2-G12
85 91 729	03A	157	2-G14
85 91 729	03A	159	2-G16
85 93 089	03B	011	3-A12
85 93 089	03B	053	3-C06
85 93 089	03B	063	3-C16
85 93 089	03B	071	3-C24
85 93 089	03B	077	3-D06
85 93 089	03B	089	3-D18
85 93 089	03B	097	3-E02
85 93 089	03B	105	3-E10
85 93 089	03B	111	3-E16
85 93 089	03B	125	3-F06
85 93 089	03B	133	3-F14
85 93 089	03B	143	3-F24
85 93 329	03A	009	2-A10
85 93 899	03B	007	3-A08
85 93 899	03B	019	3-A20
85 93 899	03B	039	3-B16
85 93 899	03B	061	3-C14
85 93 899	03B	087	3-D16
85 93 907	03B	009	3-A10
85 93 907	03B	025	3-B02
85 93 907	03B	045	3-B22
85 93 907	03B	067	3-C20
85 93 907	03B	093	3-D22
85 93 915	03B	009	3-A10
85 93 915	03B	021	3-A22
85 93 915	03B	041	3-B18
85 93 915	03B	063	3-C16
85 93 915	03B	089	3-D18
85 93 923	03B	025	3-B02
85 93 923	03B	045	3-B22
85 93 923	03B	067	3-C20
85 93 923	03B	095	3-D24
85 93 931	03B	011	3-A12
85 93 931	03B	027	3-B04
85 93 931	03B	049	3-C02
85 93 931	03B	073	3-D02

6-D24 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 93 931	03B	101	3-E06
85 93 949	03B	011	3-A12
85 93 949	03B	027	3-B04
85 93 949	03B	049	3-C02
85 93 949	03B	075	3-D04
85 93 949	03B	101	3-E06
85 93 964	03B	053	3-C06
85 93 964	03B	075	3-D04
85 93 964	03B	079	3-D08
85 93 964	03B	101	3-E06
85 93 964	03B	127	3-F08
85 93 964	03B	135	3-F16
85 93 964	03B	145	3-G02
85 94 335	03A	085	2-D14
85 94 632	03A	077	2-D06
85 96 124	03A	091	2-D20
85 97 064	03B	063	3-C16
85 97 064	03B	091	3-D20
85 97 924	03A	007	2-A08
85 98 096	03A	007	2-A08
85 98 195	03A	073	2-D02
85 98 286	03A	049	2-C02
86 01 916	08B	013	5-A14
86 01 916	08B	219	5-J04
86 05 057	08C	015	6-A16
86 05 057	08C	031	6-B08
86 05 065	08C	015	6-A16
86 05 065	08C	031	6-B08
86 05 073	08C	015	6-A16
86 05 073	08C	031	6-B08
86 05 230	08C	027	6-B04
86 05 297	08C	025	6-B02
86 05 297	08C	029	6-B06
86 05 347	08C	029	6-B06
86 05 354	08C	029	6-B06
86 05 362	08C	029	6-B06
86 05 370	08C	029	6-B06
86 05 412	08C	025	6-B02
86 05 412	08C	027	6-B04
86 05 438	08C	025	6-B02
86 05 438	08C	027	6-B04
86 05 446	08C	025	6-B02
86 05 446	08C	029	6-B06
87 01 658	04	013	3-H14
87 04 298	04	027	3-I04
87 04 298	04	029	3-I06
87 04 298	04	073	3-K02
87 04 306	04	027	3-I04
87 04 314	04	027	3-I04
87 04 314	04	029	3-I06
87 04 314	04	073	3-K02
87 04 322	04	027	3-I04
87 04 322	04	029	3-I06
87 04 322	04	073	3-K02
87 08 836	04	027	3-I04
87 10 816	04	023	3-H24
87 11 707	04	013	3-H14
87 11 707	04	041	3-I18
87 11 707	04	071	3-J24
87 11 707	04	073	3-K02
87 13 463	04	013	3-H14
87 13 463	04	041	3-I18
87 13 463	04	071	3-J24
87 13 463	04	073	3-K02
87 14 420	04	017	3-H18
87 16 292	04	027	3-I04
87 16 326	04	027	3-I04
87 16 490	04	025	3-I02
87 16 607	04	023	3-H24
87 16 615	04	023	3-H24
87 16 623	04	023	3-H24
87 16 631	04	023	3-H24
87 16 656	04	027	3-I04
87 16 821	04	023	3-H24
87 16 839	04	023	3-H24
87 16 920	04	023	3-H24
87 17 027	04	019	3-H20
87 17 308	04	013	3-H14
87 17 308	04	041	3-I18
87 17 308	04	071	3-J24
87 17 308	04	073	3-K02
87 18 439	02	137	1-G18
87 18 439	02	139	1-G20
87 18 447	04	023	3-H24
87 18 579	04	017	3-H18
87 19 098	04	027	3-I04
87 19 098	04	029	3-I06
87 19 148	04	021	3-H22
87 19 163	04	023	3-H24
87 19 189	04	023	3-H24
87 19 205	04	023	3-H24
87 19 254	04	027	3-I04
87 19 262	04	027	3-I04
87 19 312	04	025	3-I02
87 19 551	04	019	3-H20
87 19 569	04	019	3-H20
87 19 593	04	019	3-H20
87 19 601	04	019	3-H20
87 19 619	04	019	3-H20
87 19 635	04	019	3-H20
87 19 643	04	019	3-H20
87 19 650	04	021	3-H22
87 19 684	04	019	3-H20
87 19 692	04	019	3-H20
87 19 700	04	019	3-H20
87 19 718	04	019	3-H20
87 19 825	04	015	3-H16
87 19 858	04	027	3-I04
87 19 866	04	027	3-I04
87 19 874	04	027	3-I04
87 19 882	04	027	3-I04
87 19 908	04	027	3-I04
87 19 940	04	027	3-I04
87 19 999	04	019	3-H20
87 20 005	04	011	3-H12
87 20 088	04	023	3-H24
87 20 104	04	023	3-H24
87 20 112	04	023	3-H24
87 20 138	04	023	3-H24
87 20 146	04	023	3-H24
87 20 153	04	021	3-H22
87 20 161	04	019	3-H20
87 20 195	04	025	3-I02
87 20 203	04	025	3-I02
87 20 278	04	023	3-H24
87 20 278	04	025	3-I02
87 20 302	04	025	3-I02
87 20 310	04	025	3-I02
87 20 351	04	023	3-H24
87 20 369	04	023	3-H24
87 20 526	04	023	3-H24
87 20 534	04	023	3-H24
87 20 633	04	027	3-I04
87 20 633	04	029	3-I06
87 20 641	04	013	3-H14
87 20 641	04	073	3-K02
87 20 880	04	021	3-H22
87 20 948	04	027	3-I04
87 20 948	04	029	3-I06
87 20 948	04	073	3-K02
87 20 997	04	027	3-I04
87 20 997	04	029	3-I06
87 20 997	04	073	3-K02
87 21 078	04	027	3-I04
87 21 078	04	029	3-I06
87 21 078	04	073	3-K02
87 21 169	04	023	3-H24
87 21 466	04	019	3-H20
87 21 508	04	021	3-H22
87 21 557	04	019	3-H20
87 21 565	04	019	3-H20
87 21 573	04	019	3-H20
87 21 581	04	019	3-H20
87 21 615	04	019	3-H20
87 21 623	04	019	3-H20
87 21 631	04	019	3-H20
87 21 664	04	021	3-H22
87 21 789	04	073	3-K02
87 21 946	04	023	3-H24
87 21 953	04	023	3-H24
87 21 995	04	017	3-H18
87 21 995	04	067	3-J20
87 22 001	04	017	3-H18
87 22 001	04	067	3-J20
87 22 100	04	017	3-H18
87 22 118	04	017	3-H18
87 22 118	04	067	3-J20
87 22 126	04	017	3-H18
87 22 126	04	067	3-J20
87 22 183	04	013	3-H14
87 22 191	04	023	3-H24
87 22 332	04	019	3-H20
87 22 340	04	023	3-H24
87 22 357	04	023	3-H24
87 22 365	04	025	3-I02
87 22 449	04	015	3-H16
87 22 506	04	015	3-H16
87 22 571	04	023	3-H24
87 22 589	04	005	3-H06
87 22 589	04	067	3-J20
87 22 746	04	017	3-H18
87 23 108	04	035	3-I12
87 23 124	04	035	3-I12
87 23 132	04	027	3-I04
87 23 140	04	029	3-I06
87 23 140	04	073	3-K02
87 23 223	04	015	3-H16
87 23 322	04	017	3-H18
87 23 330	04	023	3-H24
87 23 397	04	019	3-H20
87 23 405	04	013	3-H14
87 23 405	04	073	3-K02
87 23 488	04	017	3-H18
87 23 504	04	067	3-J20
87 23 520	04	017	3-H18
87 23 520	04	067	3-J20
87 23 538	04	015	3-H16
87 23 546	04	035	3-I12
87 23 727	04	023	3-H24
87 23 769	04	025	3-I02
87 23 892	04	013	3-H14
87 23 892	04	041	3-I18
87 23 967	04	013	3-H14
87 23 983	04	013	3-H14
87 24 007	04	011	3-H12
87 24 023	04	023	3-H24
87 24 114	04	027	3-I04
87 24 122	04	027	3-I04
87 24 130	04	025	3-I02
87 24 148	04	025	3-I02
87 24 155	04	023	3-H24
87 24 163	04	025	3-I02
87 24 171	04	025	3-I02
87 24 189	04	025	3-I02
87 24 254	04	011	3-H12
87 24 296	04	019	3-H20
87 24 296	04	073	3-K02
87 24 304	04	021	3-H22
87 24 304	04	073	3-K02
87 24 346	04	019	3-H20
87 24 346	04	073	3-K02
87 24 353	04	021	3-H22
87 24 353	04	073	3-K02
87 24 367	04	019	3-H20
87 24 367	04	073	3-K02
87 24 395	04	019	3-H20
87 24 395	04	073	3-K02
87 24 411	04	019	3-H20
87 24 411	04	073	3-K02
87 24 429	04	019	3-H20
87 24 502	04	011	3-H12
87 24 619	04	013	3-H14
87 24 619	04	073	3-K02
87 24 627	04	021	3-H22
87 24 627	04	073	3-K02
87 24 635	04	011	3-H12
87 24 643	04	021	3-H22
87 24 643	04	073	3-K02
87 24 668	04	019	3-H20
87 24 767	04	011	3-H12

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6–E01 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
87 24 825	04	019	3-H20
87 24 833	04	067	3-J20
87 24 874	04	013	3-H14
87 24 874	04	041	3-I18
87 24 874	04	079	3-K08
87 24 882	04	013	3-H14
87 24 882	04	041	3-I18
87 24 8[illegible]	04	081	3-K10
87 24 [illegible]4	04	013	3-H14
87 25 0[illegible]	04	013	3-H14
87 25 061	04	073	3-K02
87 25 178	04	013	3-H14
87 25 186	04	013	3-H14
87 25 301	04	025	3-I02
87 25 319	04	023	3-H24
87 25 327	04	025	3-I02
87 25 335	04	025	3-I02
87 25 368	04	019	3-H20
87 25 368	04	073	3-K02
87 25 426	04	011	3-H12
87 25 459	04	011	3-H12
87 25 723	04	023	3-H24
87 25 913	04	023	3-H24
87 26 606	04	005	3-H06
87 26 606	04	067	3-J20
87 26 689	04	019	3-H20
87 26 689	04	073	3-K02
87 26 697	04	013	3-H14
87 26 705	04	013	3-H14
87 [illegible] 754	04	019	3-H20
87 26 762	04	013	3-H14
87 26 770	04	013	3-H14
87 26 986	04	023	3-H24
87 26 994	04	025	3-I02
87 27 067	04	011	3-H12
87 27 125	04	011	3-H12
87 27 158	04	023	3-H24
87 27 232	04	027	3-I04
87 27 232	04	029	3-I06
87 27 240	04	013	3-H14
87 27 240	04	041	3-I18
87 27 521	04	013	3-H14
87 27 695	04	005	3-H06
87 27 737	04	013	3-H14
87 27 745	04	013	3-H14
87 27 778	04	029	3-I06
87 27 794	04	023	3-H24
87 27 828	04	013	3-H14
87 27 828	04	041	3-I18
87 27 869	04	019	3-H20
87 27 885	04	021	3-H22
87 27 950	04	067	3-J20
87 28 107	04	013	3-H14
87 28 123	04	005	3-H06
87 28 123	04	067	3-J20
87 28 198	04	027	3-I04
87 28 198	04	029	3-I06
87 28 198	04	073	3-K02
87 28 685	04	013	3-H14
87 81 049	04	005	3-H06
87 81 049	04	067	3-J20
87 81 056	04	005	3-H06
87 81 05[illegible]	04	067	3-J20
87 81 106	04	027	3-I04
87 81 122	04	017	3-H18
87 81 122	04	067	3-J20
87 81 148	04	025	3-I02
87 81 171	04	025	3-I02
87 81 189	04	017	3-H18
87 81 189	04	067	3-J20
87 81 197	04	025	3-I02
87 81 254	04	005	3-H06
87 81 254	04	067	3-J20
87 81 262	04	005	3-H06
87 81 262	04	067	3-J20
87 81 288	04	027	3-I04
87 81 676	04	035	3-I12
87 81 684	04	025	3-I02
87 81 684	04	037	3-I14
87 86 055	02	107	1-F12
87 86 071	02	005	1-B06
87 87 228	02	023	1-B24
87 87 269	02	129	1-G10
87 87 277	02	129	1-G10
87 87 285	02	129	1-G10
87 87 301	02	129	1-G10
87 87 319	02	129	1-G10
87 87 335	02	129	1-G10
87 87 657	02	065	1-D18
87 88 150	02	019	1-B20
87 88 267	02	017	1-B18
87 88 275	02	017	1-B18
87 88 572	02	071	1-D24
87 88 572	02	073	1-E02
87 88 580	02	073	1-E02
87 88 754	02	129	1-G10
88 00 914	02	007	1-B08
88 00 914	02	013	1-B14
88 16 415	08A	115	4-J20
88 17 298	02	125	1-G06
88 17 298	02	139	1-G20
88 17 512	02	007	1-B08
88 17 512	02	013	1-B14
88 17 512	02	137	1-G18
88 17 520	03A	173	2-H06
88 17 538	02	125	1-G06
88 17 538	02	139	1-G20
88 17 553	02	057	1-D10
88 17 561	02	027	1-C04
88 17 561	02	031	1-C08
88 17 561	02	137	1-G18
88 17 686	02	029	1-C06
88 17 686	02	137	1-G18
88 17 884	08A	129	4-K10
88 17 892	08A	129	4-K10
88 17 918	02	123	1-G04
88 17 918	02	139	1-G20
88 18 007	02	007	1-B08
88 18 007	02	013	1-B14
88 18 007	02	137	1-G18
88 18 254	02	013	1-B14
88 18 254	02	137	1-G18
88 18 528	02	027	1-C04
88 18 544	02	033	1-C10
88 18 544	02	137	1-G18
88 18 569	02	129	1-G10
88 18 569	02	131	1-G12
88 18 569	02	141	1-G22
88 18 973	02	131	1-G12
88 18 973	02	141	1-G22
88 19 138	02	029	1-C06
88 19 138	02	137	1-G18
88 19 260	02	099	1-F04
88 19 260	02	143	1-G24
88 19 294	02	139	1-G20
88 19 294	03A	017	2-A18
88 19 302	03A	017	2-A18
88 19 823	02	013	1-B14
88 19 823	02	137	1-G18
88 19 831	02	013	1-B14
88 19 831	02	137	1-G18
88 19 864	02	033	1-C10
88 19 864	02	139	1-G20
88 19 963	02	103	1-F08
88 19 963	02	143	1-G24
88 22 157	02	097	1-F02
88 22 207	02	095	1-E24
88 22 207	02	097	1-F02
88 22 215	02	101	1-F06
88 22 215	02	103	1-F08
88 22 223	02	097	1-F02
88 22 223	02	099	1-F04
88 22 231	02	101	1-F06
88 22 231	02	103	1-F08
88 22 249	02	097	1-F02
88 22 249	02	099	1-F04
88 22 249	02	101	1-F06
88 22 249	02	103	1-F08
88 22 256	02	101	1-F06
88 22 256	02	103	1-F08
88 22 314	02	095	1-E24
88 22 314	02	097	1-F02
88 22 314	02	099	1-F04
88 22 322	02	095	1-E24
88 22 322	02	097	1-F02
88 22 322	02	101	1-F06
88 22 330	02	097	1-F02
88 56 965	02	025	1-C02
88 59 191	02	025	1-C02
88 59 324	02	019	1-B20
89 03 304	04	067	3-J20
89 08 576	05	005	4-A06
89 08 576	05	009	4-A10
89 16 272	04	007	3-H08
89 16 272	05	021	4-A22
89 16 272	05	023	4-A24
89 21 520	04	035	3-I12
89 25 067	02	129	1-G10
89 29 531	08A	019	4-F20
89 29 531	08B	013	5-A14
89 34 119	06	015	4-C16
89 34 259	06	017	4-C18
89 36 619	06	015	4-C16
89 36 684	06	015	4-C16
89 36 684	06	017	4-C18
89 36 882	06	015	4-C16
89 36 908	06	015	4-C16
89 36 932	06	015	4-C16
89 36 965	06	015	4-C16
89 36 973	06	015	4-C16
89 37 005	06	015	4-C16
89 37 021	06	015	4-C16
89 37 039	06	015	4-C16
89 37 070	06	017	4-C18
89 37 161	06	015	4-C16
89 37 161	06	017	4-C18
89 37 500	06	019	4-C20
89 40 769	04	067	3-J20
89 41 478	04	007	3-H08
89 41 478	08A	019	4-F20
89 43 177	05	011	4-A12
89 45 156	04	007	3-H08
89 45 248	04	067	3-J20
89 45 255	04	067	3-J20
89 46 097	09	005	6-C06
89 46 360	06	017	4-C18
89 50 024	05	021	4-A22
89 50 172	06	007	4-C08
89 50 297	04	007	3-H08
89 50 297	05	021	4-A22
89 50 396	02	127	1-G08
89 50 438	07	009	4-E10
89 50 628	04	035	3-I12
89 50 636	04	035	3-I12
89 50 701	06	007	4-C08
89 50 933	04	007	3-H08
89 51 063	07	009	4-E10
89 51 527	05	021	4-A22
89 51 543	05	009	4-A10
89 51 840	05	021	4-A22
89 51 915	07	011	4-E12
89 52 046	07	011	4-E12
89 52 129	07	009	4-E10
89 52 137	07	009	4-E10
89 52 194	06	011	4-C12
89 52 244	05	021	4-A22
89 52 277	07	011	4-E12
89 52 285	07	009	4-E10
89 52 327	07	009	4-E10
89 52 327	07	013	4-E14
89 52 335	07	009	4-E10
89 52 335	07	013	4-E14
89 52 665	05	009	4-A10
89 52 673	05	009	4-A10
89 52 699	05	017	4-A18
89 52 699	05	019	4-A20
89 52 749	07	009	4-E10
89 52 905	04	035	3-I12
89 52 939	05	005	4-A06
89 52 970	04	035	3-I12

6–E02 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
89 52 996	05	005	4-A06
89 53 135	04	067	3-J20
89 53 176	05	005	4-A06
89 53 176	05	009	4-A10
89 53 283	05	005	4-A06
89 53 390	05	023	4-A24
89 53 549	06	007	4-C08
89 53 689	05	025	4-B02
89 53 739	05	025	4-B02
89 53 762	05	025	4-B02
89 53 788	05	025	4-B02
89 53 796	05	025	4-B02
89 53 879	05	025	4-B02
89 53 986	07	005	4-E06
89 54 000	07	005	4-E06
89 54 026	07	005	4-E06
89 54 067	07	005	4-E06
89 54 281	06	007	4-C08
89 54 315	06	009	4-C10
89 54 364	06	007	4-C08
89 54 455	05	025	4-B02
89 54 497	06	011	4-C12
89 54 547	06	009	4-A10
89 54 596	03A	077	2-D06
89 54 646	05	025	4-B02
89 54 935	08A	005	4-F06
89 54 943	08A	005	4-F06
89 55 007	04	069	3-J22
89 55 056	05	027	4-B04
89 55 064	05	027	4-B04
89 55 072	05	005	4-A06
89 55 080	05	005	4-A06
89 55 098	05	005	4-A06
89 55 114	05	005	4-A06
89 55 114	05	029	4-B06
89 55 122	05	005	4-A06
89 55 122	05	027	4-B04
89 55 122	05	029	4-B06
89 55 130	05	005	4-A06
89 55 130	05	029	4-B06
89 55 148	05	029	4-B06
89 55 155	05	027	4-B04
89 55 239	05	029	4-B06
89 55 288	05	027	4-B04
89 55 296	05	029	4-B06
89 55 304	05	033	4-B10
89 55 312	05	033	4-B10
89 55 395	05	009	4-A10
89 55 403	05	009	4-A10
89 55 411	05	005	4-A06
89 55 411	05	009	4-A10
89 55 437	05	009	4-A10
89 55 445	05	009	4-A10
89 55 445	05	031	4-B08
89 55 452	05	031	4-B08
89 55 460	05	031	4-B08
89 55 478	05	005	4-A06
89 55 478	05	009	4-A10
89 55 478	05	031	4-B08
89 55 486	05	009	4-A10
89 55 528	05	009	4-A10
89 55 536	05	027	4-B04
89 55 601	06	015	4-C16
89 55 619	06	017	4-C18
89 55 635	06	017	4-C18
89 55 643	06	017	4-C18
89 55 650	06	017	4-C18
89 55 692	06	017	4-C18
89 55 718	06	015	4-C16
89 55 742	06	015	4-C16
89 55 759	07	011	4-E12
89 55 809	06	011	4-C12
89 55 908	05	005	4-A06
89 55 916	05	005	4-A06
89 55 924	04	007	3-H08
89 55 973	05	005	4-A06
89 56 104	06	011	4-C12
89 56 179	05	025	4-B02
89 56 211	06	011	4-C12
89 56 245	06	011	4-C12
89 56 245	08A	019	4-F20
89 56 252	06	011	4-C12
89 56 294	08A	019	4-F20
89 56 385	06	019	4-C20
89 56 393	05	021	4-A22
89 56 393	05	023	4-A24
89 56 443	04	007	3-H08
89 56 443	05	021	4-A22
89 56 443	05	023	4-A24
89 56 450	04	007	3-H08
89 56 468	07	011	4-E12
89 56 534	06	011	4-C12
89 56 559	02	127	1-G08
89 56 849	06	011	4-C12
89 56 914	06	019	4-C20
89 57 102	07	005	4-E06
89 57 201	04	007	3-H08
89 57 227	04	007	3-H08
89 57 318	04	007	3-H08
89 57 326	04	007	3-H08
89 57 367	04	007	3-H08
89 57 482	05	023	4-A24
89 57 565	02	127	1-G08
89 57 581	06	011	4-C12
89 57 672	05	021	4-A22
89 57 706	07	011	4-E12
89 57 714	07	009	4-E10
89 57 722	07	011	4-E12
89 57 813	04	007	3-H08
89 57 839	06	025	4-D02
89 58 043	07	007	4-E08
89 58 084	07	005	4-E06
89 58 142	05	011	4-A12
89 58 175	05	011	4-A12
89 58 241	04	035	3-I12
89 58 316	04	007	3-H08
89 58 357	05	011	4-A12
89 58 365	06	005	4-C06
89 58 373	06	005	4-C06
89 58 423	05	011	4-A12
89 58 498	07	009	4-E10
89 58 514	07	011	4-E12
89 58 530	05	017	4-A18
89 58 548	05	017	4-A18
89 58 548	05	019	4-A20
89 58 613	07	011	4-E12
89 58 746	07	011	4-E12
89 58 779	06	005	4-C06
89 58 787	06	009	4-C10
89 58 910	07	007	4-E08
89 58 944	07	005	4-E06
89 59 033	06	019	4-C20
89 59 082	04	007	3-H08
89 59 090	06	019	4-C20
89 59 116	06	019	4-C20
89 59 132	05	011	4-A12
89 59 157	05	011	4-A12
89 59 181	05	011	4-A12
89 59 223	05	017	4-A18
89 59 264	05	017	4-A18
89 59 306	05	017	4-A18
89 59 348	05	017	4-A18
89 59 447	05	017	4-A18
89 59 488	05	017	4-A18
89 59 520	05	017	4-A18
89 59 520	05	019	4-A20
89 59 538	05	017	4-A18
89 59 538	05	019	4-A20
89 59 587	06	017	4-C18
89 59 934	07	009	4-E10
89 59 934	07	013	4-E14
89 60 090	02	127	1-G08
89 60 122	08A	005	4-F06
89 60 171	07	005	4-E06
89 60 221	08A	071	4-H24
89 60 247	08A	005	4-F06
89 60 254	07	007	4-E08
89 60 288	07	007	4-E08
89 60 536	06	015	4-C16
89 60 924	02	127	1-G08
89 60 932	07	009	4-E10
89 60 940	07	009	4-E10
89 61 021	05	017	4-A18
89 61 054	08A	005	4-F06
89 61 062	05	025	4-B02
89 61 070	08A	005	4-F06
89 61 096	06	009	4-C10
89 61 104	06	009	4-C10
89 61 120	06	009	4-C10
89 61 195	02	127	1-G08
89 61 237	08A	005	4-F06
89 61 310	06	017	4-C18
89 61 344	08A	005	4-F06
89 61 476	06	005	4-C06
89 61 625	07	009	4-E10
89 61 732	09	005	6-C06
89 61 740	09	005	6-C06
89 61 765	07	009	4-E10
89 61 799	05	005	4-A06
89 61 799	05	027	4-B04
89 61 807	05	005	4-A06
89 61 807	05	029	4-B06
89 61 849	05	009	4-A10
89 61 849	05	027	4-B04
89 61 864	04	035	3-I12
89 61 864	04	067	3-J20
89 61 872	04	035	3-I12
89 61 872	04	069	3-J22
89 61 948	08A	005	4-F06
89 61 997	08A	005	4-F06
89 62 003	07	009	4-E10
89 62 003	07	013	4-E14
89 62 011	07	009	4-E10
89 62 037	06	005	4-C06
89 62 045	04	007	3-H08
89 62 052	04	007	3-H08
89 62 094	07	007	4-E08
89 62 128	04	007	3-H08
89 62 128	05	021	4-A22
89 62 144	07	005	4-E06
89 62 243	06	017	4-C18
89 62 250	06	017	4-C18
89 62 292	08A	005	4-F06
89 62 300	05	023	4-A24
89 62 334	08A	007	4-F08
89 62 342	08A	007	4-F08
89 62 359	08A	007	4-F08
89 62 367	07	007	4-E08
89 62 383	07	007	4-E08
89 62 516	06	017	4-C18
89 62 524	06	017	4-C18
89 62 565	06	015	4-C16
89 62 573	06	017	4-C18
89 62 649	05	025	4-B02
89 62 813	07	005	4-E06
89 62 912	06	007	4-C08
89 63 019	05	019	4-A20
89 63 027	05	009	4-A10
89 63 050	07	011	4-E12
89 63 092	05	019	4-A20
89 63 100	06	007	4-C08
89 63 209	06	005	4-C06
89 63 217	06	005	4-C06
89 63 282	07	005	4-E06
89 63 308	06	019	4-C20
89 63 332	06	011	4-C12
89 63 340	07	005	4-E06
89 63 357	06	019	4-C20
89 63 365	06	007	4-C08
89 63 373	06	007	4-C08
89 63 415	07	013	4-E14
89 63 571	04	035	3-I12
89 63 613	05	019	4-A20
89 63 621	05	019	4-A20
89 63 639	04	007	3-H08
89 63 647	05	019	4-A20
89 63 704	04	007	3-H08
89 63 712	04	007	3-H08
89 63 944	07	009	4-E10
89 63 985	06	015	4-C16

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 63 993	06	019	4-C20
89 64 009	04	007	3-H08
89 64 082	06	017	4-C18
89 64 090	06	017	4-C18
89 64 132	02	127	1-G08
89 64 207	07	005	4-E06
89 64 272	07	013	4-E14
89 64 348	05	025	4-B02
89 64 363	05	025	4-B02
89 64 413	05	019	4-A20
89 64 454	05	019	4-A20
89 64 496	05	019	4-A20
89 64 553	05	019	4-A20
89 64 595	05	019	4-A20
89 64 637	05	019	4-A20
89 64 678	05	019	4-A20
89 64 686	05	019	4-A20
89 64 728	05	017	4-A18
89 64 769	05	017	4-A18
89 64 801	05	017	4-A18
89 64 843	05	017	4-A18
89 64 892	05	011	4-A12
89 64 900	05	013	4-A14
89 64 991	09	005	6-C06
89 65 097	05	017	4-A18
89 65 105	07	009	4-E10
89 65 113	07	009	4-E10
89 65 121	06	005	4-C06
89 65 212	07	007	4-E08
89 65 253	06	005	4-C06
89 65 279	06	005	4-C06
89 65 287	06	005	4-C06
89 65 329	05	011	4-A12
89 65 329	05	027	4-B04
89 65 345	04	007	3-H08
89 65 360	04	035	3-I12
89 65 360	07	011	4-E12
89 65 378	07	005	4-E06
89 65 477	06	009	4-C10
89 65 501	05	023	4-A24
89 65 535	04	007	3-H08
89 65 550	05	005	4-A06
89 65 584	05	023	4-A24
89 65 600	05	023	4-A24
89 65 618	05	023	4-A24
89 65 626	05	023	4-A24
89 65 634	05	019	4-A20
89 65 659	03A	097	2-E02
89 65 782	05	027	4-B04
89 65 808	05	011	4-A12
89 65 808	05	027	4-B04
89 65 832	06	019	4-C20
89 65 840	05	019	4-A20
89 65 857	05	019	4-A20
89 65 907	07	007	4-E08
89 65 949	02	127	1-G08
89 65 956	06	017	4-C18
89 66 012	05	015	4-A16
89 66 038	05	015	4-A16
89 66 087	08A	005	4-F06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 66 103	04	009	3-H10
89 66 129	07	005	4-E06
89 66 137	05	031	4-B08
89 66 152	05	013	4-A14
89 66 152	05	031	4-B08
89 66 160	05	031	4-B08
89 66 236	05	031	4-B08
89 66 244	05	031	4-B08
89 66 251	05	031	4-B08
89 66 269	05	031	4-B08
89 66 277	05	031	4-B08
89 66 285	05	015	4-A16
89 66 285	05	033	4-B10
89 66 293	05	015	4-A16
89 66 293	05	033	4-B10
89 66 301	05	033	4-B10
89 66 319	05	031	4-B08
89 66 327	05	013	4-A14
89 66 327	05	031	4-B08
89 66 335	05	013	4-A14
89 66 335	05	031	4-B08
89 66 335	05	033	4-B10
89 66 [illegible]	05	035	4-B12
89 66 350	05	031	4-B08
89 66 368	05	013	4-A14
89 66 368	05	031	4-B08
89 66 376	05	013	4-A14
89 66 376	05	033	4-B10
89 66 384	05	013	4-A14
89 66 384	05	033	4-B10
89 66 392	05	033	4-B10
89 66 426	05	033	4-B10
89 66 491	05	015	4-A16
89 66 558	08A	019	4-F20
89 66 608	05	025	4-B02
89 66 624	03A	097	2-E02
89 66 681	05	015	4-A16
89 66 681	05	033	4-B10
89 66 699	09	015	6-C16
89 66 707	05	031	4-B08
89 66 756	04	007	3-H08
89 66 806	04	007	3-H08
89 66 814	04	007	3-H08
89 66 855	04	007	3-H08
89 66 889	04	007	3-H08
89 66 939	05	015	4-A16
89 66 939	05	033	4-B10
89 66 954	05	011	4-A12
89 66 962	05	005	4-A06
89 66 988	05	019	4-A20
89 [illegible]28	05	015	4-A16
89 67 218	05	013	4-A14
89 67 218	05	031	4-B08
89 67 226	05	019	4-A20
89 67 234	05	013	4-A14
89 67 234	05	031	4-B08
89 67 234	05	033	4-B10
89 67 259	05	013	4-A14
89 67 259	05	031	4-B08
89 67 283	05	013	4-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 67 283	05	031	4-B08
89 67 309	05	013	4-A14
89 67 309	05	031	4-B08
89 67 325	05	013	4-A14
89 67 325	05	031	4-B08
89 67 325	05	033	4-B10
89 67 333	05	013	4-A14
89 67 333	05	031	4-B08
89 67 341	05	013	4-A14
89 67 341	05	031	4-B08
89 67 341	05	033	4-B10
89 67 374	05	019	4-A20
89 67 374	05	033	4-B10
89 67 382	05	019	4-A20
89 67 382	05	033	4-B10
89 67 390	05	013	4-A14
89 67 390	05	015	4-A16
89 67 390	05	031	4-B08
89 67 390	05	033	4-B10
89 67 390	05	035	4-B12
89 67 408	05	013	4-A14
89 67 408	05	015	4-A16
89 67 408	05	031	4-B08
89 67 408	05	033	4-B10
89 67 408	05	035	4-B12
89 67 424	05	013	4-A14
89 67 424	05	033	4-B10
89 67 440	05	033	4-B10
89 67 457	05	013	4-A14
89 67 457	05	033	4-B10
89 67 473	05	033	4-B10
89 67 481	05	025	4-B02
89 67 507	05	019	4-A20
89 67 523	06	011	4-C12
89 67 549	06	011	4-C12
89 67 572	06	011	4-C12
89 67 655	05	025	4-B02
89 67 713	05	005	4-A06
89 67 762	06	007	4-C08
89 67 788	05	005	4-A06
89 67 861	07	005	4-E06
89 67 903	02	127	1-G08
89 67 929	06	015	4-C16
89 67 937	06	015	4-C16
89 68 034	05	011	4-A12
89 68 067	07	005	4-E06
89 68 091	02	127	1-G08
89 68 133	08A	023	4-F24
89 68 166	05	017	4-A18
89 68 315	06	009	4-C10
89 68 471	07	011	4-E12
89 68 505	07	011	4-E12
89 68 513	07	013	4-E14
89 68 521	07	005	4-E06
89 68 570	07	009	4-E10
89 68 570	07	013	4-E14
89 68 588	05	005	4-A06
89 68 588	05	009	4-A10
89 68 679	06	009	4-C10
89 68 703	06	009	4-C10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 68 711	04	007	3-H08
89 68 729	04	007	3-H08
89 68 737	06	015	4-C16
89 68 752	05	005	4-A06
89 68 943	05	005	4-A06
89 68 950	05	005	4-A06
89 68 968	05	005	4-A06
89 68 968	05	027	4-B04
89 68 976	05	005	4-A06
89 68 976	05	027	4-B04
89 69 024	06	007	4-C08
89 69 032	06	007	4-C08
89 69 081	05	027	4-B04
89 69 099	05	027	4-B04
89 69 107	05	005	4-A06
89 69 115	05	005	4-A06
89 69 123	05	005	4-A06
89 69 206	05	017	4-A18
89 69 206	05	019	4-A20
89 69 214	07	009	4-E10
89 69 412	05	027	4-B04
89 69 446	05	027	4-B04
89 69 651	05	005	4-A06
89 69 669	06	005	4-C06
89 69 966	07	009	4-E10
89 70 147	05	033	4-B10
89 70 196	04	007	3-H08
89 70 204	05	021	4-A22
89 70 287	03A	097	2-E02
89 70 386	03A	097	2-E02
89 70 402	03A	097	2-E02
89 70 428	05	009	4-A10
89 70 444	05	023	4-A24
89 70 618	05	009	4-A10
89 70 626	05	009	4-A10
89 70 717	05	009	4-A10
89 70 725	05	025	4-B02
89 70 733	05	025	4-B02
89 70 782	07	009	4-E10
89 70 816	05	009	4-A10
89 70 873	06	017	4-C18
89 71 087	09	005	6-C06
89 71 095	05	009	4-A10
89 71 111	05	009	4-A10
89 71 301	06	009	4-C10
89 71 343	06	011	4-C12
89 71 350	06	007	4-C08
89 71 368	07	009	4-E10
89 71 582	08A	019	4-F20
89 71 657	06	011	4-C12
89 71 780	07	005	4-E06
89 71 806	07	005	4-E06
89 71 814	07	005	4-E06
89 71 822	07	005	4-E06
89 71 830	07	005	4-E06
89 71 848	07	005	4-E06
89 71 962	07	013	4-E14
69 71 970	03A	097	2-E02
89 72 028	07	013	4-E14
89 72 127	07	009	4-E10

6-E04 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 72 127	07	013	4-E14
89 72 135	06	005	4-C06
89 72 176	02	127	1-G08
89 72 200	06	009	4-C10
89 72 358	06	007	4-C08
89 72 374	06	007	4-C08
89 72 416	06	019	4-C20
89 72 424	06	019	4-C20
89 72 648	07	011	4-E12
89 72 655	07	011	4-E12
89 72 770	06	019	4-C20
89 72 812	07	007	4-E08
89 72 846	07	013	4-E14
89 72 853	07	013	4-E14
89 72 929	06	007	4-C08
89 72 945	06	019	4-C20
89 72 986	04	035	3-I12
89 72 986	04	069	3-J22
89 73 000	07	011	4-E12
89 73 034	05	017	4-A18
89 73 034	05	019	4-A20
89 73 422	07	007	4-E08
89 73 422	07	013	4-E14
89 73 448	06	011	4-C12
89 73 455	06	011	4-C12
89 73 547	06	009	4-C10
89 75 062	02	099	1-F04
89 75 104	02	053	1-D06
89 75 153	02	053	1-D06
89 75 229	09	007	6-C08
89 75 294	02	061	1-D14
89 75 484	02	057	1-D10
89 76 516	02	031	1-C08
89 76 607	02	045	1-C22
89 76 706	02	045	1-C22
89 77 142	02	135	1-G16
89 77 373	02	053	1-D06
89 77 761	02	053	1-D06
89 77 779	02	053	1-D06
89 77 878	09	007	6-C08
89 77 936	02	097	1-F02
89 77 936	02	099	1-F04
89 77 936	02	101	1-F06
89 77 936	02	103	1-F08
89 78 280	02	061	1-D14
89 78 355	02	061	1-D14
89 78 371	02	047	1-C24
89 78 447	09	007	6-C08
89 78 637	02	133	1-G14
89 78 678	02	133	1-G14
89 78 728	09	007	6-C08
89 78 769	02	135	1-G16
89 78 827	02	053	1-D06
89 78 934	02	053	1-D06
89 79 155	02	101	1-F06
89 79 155	02	103	1-F08
89 79 163	02	097	1-F02
89 79 163	02	099	1-F04
89 79 288	09	007	6-C08
89 79 866	09	007	6-C08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 79 924	09	007	6-C08
89 79 940	09	007	6-C08
89 80 021	02	059	1-D12
89 80 039	02	059	1-D12
89 80 047	02	059	1-D12
89 80 328	02	101	1-F06
89 80 328	02	103	1-F08
89 80 401	02	135	1-G16
89 80 500	02	047	1-C24
89 81 417	02	065	1-D18
89 81 466	09	007	6-C08
89 81 474	09	007	6-C08
89 81 581	02	065	1-D18
89 81 607	02	047	1-C24
89 81 615	02	051	1-D04
89 81 680	02	047	1-C24
89 81 698	02	133	1-G14
89 81 813	02	047	1-C24
89 81 904	02	131	1-G12
89 81 961	02	053	1-D06
89 81 961	02	071	1-D24
89 81 961	02	073	1-E02
89 81 961	02	119	1-F24
89 81 961	02	143	1-G24
89 81 979	02	053	1-D06
89 81 987	02	065	1-D18
89 82 191	02	047	1-C24
89 82 191	02	143	1-G24
89 82 191	02	145	1-H02
89 82 191	02	147	1-H04
89 82 191	02	149	1-H06
89 82 209	02	047	1-C24
89 82 209	02	143	1-G24
89 82 209	02	145	1-H02
89 82 209	02	147	1-H04
89 82 209	02	149	1-H06
89 82 217	09	007	6-C08
89 82 225	02	047	1-C24
89 82 456	09	007	6-C08
89 82 464	09	007	6-C08
89 82 472	08A	029	4-G06
89 82 597	09	007	6-C08
89 86 622	04	007	3-H08
89 86 663	09	005	6-C06
89 86 705	05	011	4-A12
89 86 713	05	011	4-A12
89 86 911	05	011	4-A12
89 86 911	05	027	4-B04
89 86 945	05	027	4-B04
89 86 986	05	027	4-B04
89 86 994	05	027	4-B04
89 87 018	05	027	4-B04
89 87 406	06	009	4-C10
89 87 422	06	009	4-C10
89 87 596	07	007	4-E08
89 87 620	07	007	4-E08
89 87 802	07	007	4-E08
89 88 149	05	011	4-A12
89 88 149	05	027	4-B04
89 89 659	06	009	4-C10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 89 857	06	019	4-C20
89 89 857	06	025	4-D02
89 90 103	06	009	4-C10
89 90 376	06	009	4-C10
89 90 632	07	007	4-E08
89 90 962	06	009	4-C10
89 90 970	06	009	4-C10
89 90 988	06	009	4-C10
89 91 549	09	005	6-C06
89 91 564	09	005	6-C06
89 93 156	04	007	3-H08
89 93 156	04	067	3-J20
89 93 453	06	017	4-C18
89 93 453	06	025	4-D02
89 93 511	06	015	4-C16
89 93 529	06	015	4-C16
89 93 628	04	035	3-I12
89 93 628	04	067	3-J20
89 93 636	04	035	3-I12
89 93 636	04	069	3-J22
89 93 644	05	013	4-A14
89 93 719	05	005	4-A06
89 93 719	05	027	4-B04
89 93 768	05	007	4-A08
89 93 768	05	027	4-B04
89 93 974	05	005	4-A06
91 01 056	09	005	6-C06
91 01 221	06	011	4-C12
91 01 502	07	007	4-E08
91 01 510	07	007	4-E08
91 02 971	05	005	4-A06
91 02 989	05	005	4-A06
91 03 565	07	007	4-E08
91 03 680	07	007	4-E08
91 04 456	05	015	4-A16
91 04 613	06	009	4-C10
91 04 738	05	015	4-A16
91 04 738	05	033	4-B10
91 04 746	05	033	4-B10
91 04 811	05	031	4-B08
91 04 829	05	031	4-B08
91 04 944	05	031	4-B08
91 05 115	05	019	4-A20
91 05 115	05	033	4-B10
91 05 461	07	007	4-E08
91 07 376	02	009	1-B10
91 12 475	02	029	1-C06
91 12 475	02	031	1-C08
91 12 491	02	083	1-E12
91 12 541	02	137	1-G18
91 12 541	03A	017	2-A18
91 14 455	03A	027	2-B04
91 14 711	02	061	1-D14
91 14 729	02	061	1-D14
91 14 810	02	029	1-C06
91 14 810	02	031	1-C08
91 14 885	02	013	1-B14
91 14 976	03A	027	2-B04
91 16 146	02	063	1-D16
91 16 369	02	125	1-G06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 16 369	02	141	1-G22
91 16 385	02	139	1-G20
91 16 385	03A	017	2-A18
91 16 443	02	023	1-B24
91 16 625	02	027	1-C04
91 16 757	02	015	1-B16
91 16 765	02	125	1-G06
91 16 765	02	141	1-G22
91 16 864	02	023	1-B24
91 17 029	02	027	1-C04
91 17 029	02	031	1-C08
91 17 235	02	077	1-E06
91 17 417	02	013	1-B14
91 17 425	02	011	1-B12
91 17 839	02	019	1-B20
91 17 847	02	019	1-B20
91 18 001	03A	027	2-B04
91 18 506	02	035	1-C12
91 19 348	03A	027	2-B04
91 19 561	03A	023	2-A24
91 20 080	03A	145	2-G02
91 20 106	03A	143	2-F24
91 20 106	03B	109	3-E14
91 20 114	03A	175	2-H08
91 20 452	03A	093	2-D22
91 20 460	03A	093	2-D22
91 20 486	03A	057	2-C10
91 20 502	03A	061	2-C14
91 20 510	03A	061	2-C14
91 20 528	03A	061	2-C14
91 20 536	03A	061	2-C14
91 20 668	03B	031	3-B08
91 20 668	03B	039	3-B16
91 20 668	03B	061	3-C14
91 20 668	03B	063	3-C16
91 20 668	03B	065	3-C18
91 20 668	03B	067	3-C20
91 20 668	03B	071	3-C24
91 20 668	03B	073	3-D02
91 20 668	03B	075	3-D04
91 20 668	03B	079	3-D08
91 20 668	03B	081	3-D10
91 20 668	03B	083	3-D12
91 20 668	03B	087	3-D16
91 20 668	03B	089	3-D18
91 20 668	03B	091	3-D20
91 20 668	03B	093	3-D22
91 20 668	03B	095	3-D24
91 20 668	03B	097	3-E02
91 20 668	03B	099	3-E04
91 20 668	03B	101	3-E06
91 20 668	03B	105	3-E10
91 20 668	03B	107	3-E12
91 20 668	03B	109	3-E14
91 20 668	03B	123	3-F04
91 20 668	03B	139	3-F20
91 20 668	03B	149	3-G06
91 20 767	03B	027	3-B04
91 20 767	03B	043	3-B20
91 20 767	03B	049	3-C02

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 20 767	03B	123	3-F04
91 20 767	03B	129	3-F10
91 20 775	03B	009	3-A10
91 20 775	03B	011	3-A12
91 20 775	03B	013	3-A14
91 20 775	03B	021	3-A22
91 20 775	03B	025	3-B02
91 20 775	03B	027	3-B04
91 20 775	03B	031	3-B08
91 20 775	03B	041	3-B18
91 20 775	03B	045	3-B22
91 20 775	03B	049	3-C02
91 20 775	03B	053	3-C06
91 20 775	03B	067	3-C20
91 20 775	03B	071	3-C24
91 20 775	03B	075	3-D04
91 20 775	03B	093	3-D22
91 20 775	03B	097	3-E02
91 20 775	03B	111	3-E16
91 20 775	03B	117	3-E22
91 20 775	03B	125	3-F06
91 20 775	03B	133	3-F14
91 20 775	03B	143	3-F24
91 20 783	03B	009	3-A10
91 20 783	03B	011	3-A12
91 20 783	03B	013	3-A14
91 20 783	03B	021	3-A22
91 20 783	03B	025	3-B02
91 20 783	03B	027	3-B04
91 20 783	03B	031	3-B08
91 20 783	03B	041	3-B18
91 20 783	03B	049	3-C02
91 20 783	03B	051	3-C04
91 20 783	03B	053	3-C06
91 20 783	03B	113	3-E18
91 20 783	03B	119	3-E24
91 20 783	03B	127	3-F08
91 20 783	03B	135	3-F16
91 20 783	03B	145	3-G02
91 20 791	03B	027	3-B04
91 20 791	03B	031	3-B08
91 20 791	03B	051	3-C04
91 20 791	03B	053	3-C06
91 20 791	03B	063	3-C16
91 20 791	03B	067	3-C20
91 20 791	03B	071	3-C24
91 20 791	03B	075	3-D04
91 20 791	03B	079	3-D08
91 20 791	03B	089	3-D18
91 20 791	03B	093	3-D22
91 20 791	03B	097	3-E02
91 20 791	03B	101	3-E06
91 20 791	03B	105	3-E10
91 20 791	03B	113	3-E18
91 20 791	03B	121	3-F02
91 20 791	03B	129	3-F10
91 20 791	03B	137	3-F18
91 20 791	03B	145	3-G02
91 20 882	03A	063	2-C16
91 20 882	03A	173	2-H06
91 20 890	03A	063	2-C16
91 21 674	03A	151	2-G08
91 21 732	03A	167	2-G24
91 21 815	03A	037	2-B14
91 21 823	03A	037	2-B14
91 21 864	03A	129	2-F10
91 21 872	03A	151	2-G08
91 21 880	09	011	6-C12
91 21 955	03A	167	2-G24
91 21 963	03A	167	2-G24
91 21 971	03A	167	2-G24
91 21 989	03A	167	2-G24
91 22 102	03A	045	2-B22
91 22 110	03A	045	2-B22
91 22 128	03A	045	2-B22
91 22 193	09	011	6-C12
91 22 201	09	011	6-C12
91 22 219	09	011	6-C12
91 22 227	03A	039	2-B16
91 22 235	03A	039	2-B16
91 22 243	03A	039	2-B16
91 22 250	03A	039	2-B16
91 22 268	03A	039	2-B16
91 22 383	03A	061	2-C14
91 22 409	03A	061	2-C14
91 22 540	03A	151	2-G08
91 22 557	03B	031	3-B08
91 22 557	03B	057	3-C10
91 22 557	03B	079	3-D08
91 22 557	03B	105	3-E10
91 22 672	03A	033	2-B10
91 22 680	03A	033	2-B10
91 22 698	03A	033	2-B10
91 22 706	03A	033	2-B10
91 22 730	03A	149	2-G06
91 22 730	03A	151	2-G08
91 22 748	03A	149	2-G06
91 22 748	03A	151	2-G08
91 22 755	03A	149	2-G06
91 22 755	03A	151	2-G08
91 22 789	03B	011	3-A12
91 22 789	03B	027	3-B04
91 22 789	03B	049	3-C02
91 22 789	03B	071	3-C24
91 22 789	03B	097	3-E02
91 22 797	03B	013	3-A14
91 22 797	03B	027	3-B04
91 22 797	03B	049	3-C02
91 22 797	03B	075	3-D04
91 22 797	03B	101	3-E06
91 23 076	03A	045	2-B22
91 23 084	03A	045	2-B22
91 23 118	03A	045	2-B22
91 23 126	03A	045	2-B22
91 23 159	03A	045	2-B22
91 23 167	03A	045	2-B22
91 23 175	03A	037	2-B14
91 23 183	03A	037	2-B14
91 23 308	03A	151	2-G08
91 23 316	03A	151	2-G08
91 23 324	03A	171	2-H04
91 23 357	03A	137	2-F18
91 23 381	03B	013	3-A14
91 23 381	03B	027	3-B04
91 23 381	03B	053	3-C06
91 23 381	03B	075	3-D04
91 23 381	03B	101	3-E06
91 23 399	03B	031	3-B08
91 23 399	03B	057	3-C10
91 23 399	03B	079	3-D08
91 23 399	03B	105	3-E10
91 23 407	03A	151	2-G08
91 23 464	03A	069	2-C22
91 23 548	03B	065	3-C18
91 23 548	03B	091	3-D20
91 23 555	03B	049	3-C02
91 23 555	03B	071	3-C24
91 23 555	03B	097	3-E02
91 24 074	03A	081	2-D10
91 24 082	03A	075	2-D04
91 24 090	03B	013	3-A14
91 24 090	03B	031	3-B08
91 24 090	03B	053	3-C06
91 24 090	03B	079	3-D08
91 24 090	03B	105	3-E10
91 24 124	03A	063	2-C16
91 24 132	03A	053	2-C06
91 24 140	03A	053	2-C06
91 24 157	03B	009	3-A10
91 24 157	03B	021	3-A22
91 24 157	03B	041	3-B18
91 24 157	03B	063	3-C16
91 24 157	03B	089	3-D18
91 24 165	03B	011	3-A12
91 24 165	03B	025	3-B02
91 24 165	03B	045	3-B22
91 24 165	03B	067	3-C20
91 24 165	03B	093	3-D22
91 24 173	03B	027	3-B04
91 24 173	03B	049	3-C02
91 24 173	03B	071	3-C24
91 24 173	03B	097	3-E02
91 24 181	03B	013	3-A14
91 24 181	03B	031	3-B08
91 24 181	03B	053	3-C06
91 24 181	03B	077	3-D06
91 24 181	03B	105	3-E10
91 24 223	03A	073	2-D02
91 24 264	03A	011	2-A12
91 24 272	03A	011	2-A12
91 24 280	03A	011	2-A12
91 24 314	03A	011	2-A12
91 24 348	03A	011	2-A12
91 24 355	03A	011	2-A12
91 24 363	03A	011	2-A12
91 24 371	03A	011	2-A12
91 24 397	03A	011	2-A12
91 24 454	03A	067	2-C20
91 24 520	03A	131	2-F12
91 24 546	03A	131	2-F12
91 24 553	03A	137	2-F18
91 24 579	03A	171	2-H04
91 24 579	03A	173	2-H06
91 24 603	03A	139	2-F20
91 24 843	03A	133	2-F14
91 24 850	03A	133	2-F14
91 24 884	03A	073	2-D02
91 25 006	03A	151	2-G08
91 25 014	03A	039	2-B16
91 25 022	03A	039	2-B16
91 25 030	03A	039	2-B16
91 25 048	03A	039	2-B16
91 25 212	03A	071	2-C24
91 25 279	03A	031	2-B08
91 25 287	03A	031	2-B08
91 25 295	03A	031	2-B08
91 25 303	03A	031	2-B08
91 25 360	03A	145	2-G02
91 25 378	03A	145	2-G02
91 25 386	03A	151	2-G08
91 25 519	03B	109	3-E14
91 25 543	03A	097	2-E02
91 25 576	09	011	6-C12
91 25 584	09	011	6-C12
91 25 592	09	011	6-C12
91 27 069	02	027	1-C04
91 27 069	02	031	1-C08
91 27 440	03A	019	2-A20
91 27 440	03A	027	2-B04
91 33 505	02	019	1-B20
91 36 243	02	007	1-B08
91 36 243	02	011	1-B12
91 36 243	02	013	1-B14
91 36 243	02	063	1-D16
91 36 243	02	065	1-D18
91 36 243	02	089	1-E18
91 36 243	02	091	1-E20
91 36 243	02	131	1-G12
91 36 243	02	133	1-G14
91 36 243	02	135	1-G16
91 36 243	03A	021	2-A22
91 36 243	03A	023	2-A24
91 36 243	03A	077	2-D06
91 36 243	03A	079	2-D08
91 36 243	03A	091	2-D20
91 50 004	09	007	6-C08
92 20 880	08A	019	4-F20
92 20 880	08B	027	5-B04
92 21 987	08A	063	4-H16
92 23 082	03A	063	2-C16
92 23 991	08A	011	4-F12
92 23 991	08A	015	4-F16
92 25 475	08A	065	4-H18
92 28 149	08A	015	4-F16
92 28 255	08A	079	4-I08
92 30 293	08A	009	4-F10
92 30 293	08A	079	4-I08
92 30 293	08A	097	4-J02
92 30 293	08A	125	4-K06
92 30 293	08B	221	5-J06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 36 589	03A	043	2-B20
92 36 589	03A	047	2-B24
92 36 589	08A	027	4-G04
92 36 589	08A	029	4-G06
92 40 078	08A	041	4-G18
92 40 086	08A	075	4-I04
92 40 086	08A	127	4-K08
92 48 006	08A	049	4-H02
92 48 501	08A	041	4-G18
92 48 519	08A	041	4-G18
92 49 459	08A	107	4-J12
92 49 566	08A	107	4-J12
92 49 665	08A	111	4-J16
92 49 681	08A	111	4-J16
92 49 699	08A	111	4-J16
92 49 772	08A	111	4-J16
92 51 471	08A	075	4-I04
92 52 057	08A	075	4-I04
92 52 123	08A	075	4-I04
92 52 131	08A	075	4-I04
92 52 198	08A	061	4-H14
92 52 198	08A	065	4-H18
92 52 206	08A	061	4-H14
92 52 214	08A	061	4-H14
92 52 511	08A	029	4-G06
92 52 669	08A	041	4-G18
92 52 677	08A	041	4-G18
92 52 701	08A	045	4-G22
92 52 719	08A	045	4-G22
92 52 768	08A	049	4-H02
92 52 776	08A	049	4-H02
92 52 800	08A	061	4-H14
92 52 958	08A	041	4-G18
92 52 966	08A	041	4-G18
92 53 022	08A	039	4-G16
92 53 329	08A	075	4-I04
92 53 329	08A	077	4-I06
92 53 329	08A	135	4-K16
92 53 337	08A	103	4-J08
92 53 402	08A	057	4-H10
92 53 410	08A	057	4-H10
92 53 444	08A	053	4-H06
92 53 444	08A	057	4-H10
92 53 451	08A	053	4-H06
92 53 451	08A	057	4-H10
92 53 501	08A	053	4-H06
92 53 519	08A	053	4-H06
92 53 527	08A	053	4-H06
92 53 535	08A	053	4-H06
92 53 584	08A	039	4-G16
92 53 592	08A	039	4-G16
92 53 675	08A	035	4-G12
92 53 758	08A	035	4-G12
92 53 964	08A	061	4-H14
92 54 103	08A	015	4-F16
92 54 129	08A	015	4-F16
92 54 236	08A	013	4-F14
92 54 327	08A	013	4-F14
92 54 426	08A	013	4-F14
92 54 434	08A	013	4-F14
92 54 442	08A	013	4-F14
92 54 467	08A	015	4-F16
92 54 509	08A	013	4-F14
92 54 517	08A	013	4-F14
92 54 525	08A	013	4-F14
92 54 533	08A	013	4-F14
92 54 541	08A	013	4-F14
92 54 558	08A	013	4-F14
92 54 566	08A	013	4-F14
92 54 590	08A	013	4-F14
92 54 608	08A	015	4-F16
92 54 640	08A	015	4-F16
92 54 707	08A	015	4-F16
92 54 848	08A	013	4-F14
92 55 167	08A	045	4-G22
92 55 175	08A	045	4-G22
92 55 183	08A	051	4-H04
92 55 191	08A	049	4-H02
92 55 209	08A	045	4-G22
92 55 209	08A	129	4-K10
92 55 217	08A	045	4-G22
92 55 217	08A	129	4-K10
92 55 225	08A	049	4-H02
92 55 225	08A	129	4-K10
92 55 233	08A	049	4-H02
92 55 233	08A	129	4-K10
92 55 241	08A	057	4-H10
92 55 266	08A	075	4-I04
92 55 274	08A	075	4-I04
92 55 282	08A	075	4-I04
92 55 290	08A	075	4-I04
92 55 308	08A	075	4-I04
92 55 316	08A	075	4-I04
92 55 324	08A	075	4-I04
92 55 332	08A	075	4-I04
92 55 340	08A	075	4-I04
92 55 357	08A	075	4-I04
92 55 365	08A	075	4-I04
92 55 373	08A	075	4-I04
92 55 522	08A	061	4-H14
92 55 530	08A	061	4-H14
92 55 712	08A	035	4-G12
92 55 720	08A	035	4-G12
92 55 738	08A	035	4-G12
92 55 761	08A	035	4-G12
92 55 779	08A	035	4-G12
92 55 845	03A	067	2-C20
92 55 845	08B	227	5-J12
92 55 910	08A	029	4-G06
92 55 993	08A	079	4-I08
92 56 009	08A	079	4-I08
92 56 017	08A	079	4-I08
92 56 306	08A	061	4-H14
92 56 306	08A	065	4-H18
92 56 488	08A	061	4-H14
92 56 488	08A	065	4-H18
92 57 080	08A	053	4-H06
92 57 080	08A	057	4-H10
92 57 163	08A	053	4-H06
92 57 163	08A	057	4-H10
92 57 171	08A	053	4-H06
92 57 171	08A	057	4-H10
92 57 486	08A	045	4-G22
92 57 486	08A	049	4-H02
92 57 494	08A	045	4-G22
92 57 494	08A	049	4-H02
92 57 957	08A	075	4-I04
92 57 957	08A	077	4-I06
92 57 965	08A	075	4-I04
92 57 965	08A	077	4-I06
92 58 229	08A	075	4-I04
92 58 229	08A	077	4-I06
92 58 237	08A	075	4-I04
92 58 237	08A	077	4-I06
92 58 252	08A	053	4-H06
92 58 252	08A	057	4-H10
92 59 807	08A	051	4-H04
92 59 342	08A	017	4-F18
92 59 367	08A	095	4-I24
92 59 375	08A	095	4-I24
92 59 383	08A	017	4-F18
92 59 391	08A	013	4-F14
92 59 391	08A	015	4-F16
92 59 417	08A	061	4-H14
92 59 425	08A	057	4-H10
92 59 433	08A	057	4-H10
92 59 524	03A	051	2-C04
92 59 524	03A	095	2-D24
92 59 524	08A	015	4-F16
92 59 532	08A	091	4-I20
92 59 557	08A	095	4-I24
92 59 557	08A	127	4-K08
92 59 565	08A	127	4-K08
92 59 581	08A	091	4-I20
92 59 599	08A	091	4-I20
92 59 607	08A	053	4-H06
92 59 615	08A	053	4-H06
92 59 912	08A	035	4-G12
92 59 938	08A	045	4-G22
92 59 938	08A	049	4-H02
92 60 001	08A	095	4-I24
92 60 019	08A	095	4-I24
92 60 068	08A	061	4-H14
92 60 142	08A	013	4-F14
92 60 183	08A	057	4-H10
92 60 225	08A	069	4-H22
92 60 233	08A	069	4-H22
92 60 266	08A	069	4-H22
92 60 274	08A	069	4-H22
92 60 282	08A	069	4-H22
92 60 290	08A	069	4-H22
92 60 365	08A	069	4-H22
92 60 373	08A	069	4-H22
92 60 506	08A	069	4-H22
92 60 514	08A	069	4-H22
92 60 530	08A	069	4-H22
92 60 696	08A	019	4-F20
92 60 704	08A	039	4-G16
92 60 712	08A	039	4-G16
92 60 803	08A	019	4-F20
92 60 811	08A	019	4-F20
92 60 985	08A	111	4-J16
92 60 993	08A	111	4-J16
92 61 082	08A	071	4-H24
92 61 090	08A	071	4-H24
92 61 108	08A	071	4-H24
92 61 124	08A	095	4-I24
92 61 132	08A	095	4-I24
92 61 140	08A	095	4-I24
92 61 157	08A	095	4-I24
92 61 223	08A	049	4-H02
92 61 231	08A	049	4-H02
92 61 249	08A	049	4-H02
92 61 256	08A	049	4-H02
92 61 264	08A	045	4-G22
92 61 272	08A	045	4-G22
92 61 439	08A	091	4-I20
92 61 447	08A	091	4-I20
92 61 470	08A	091	4-I20
92 61 538	08A	061	4-H14
92 61 538	08A	065	4-H18
92 61 546	08A	061	4-H14
92 61 561	08A	061	4-H14
92 61 561	08A	065	4-H18
92 61 579	08A	061	4-H14
92 61 579	08A	065	4-H18
92 61 595	08A	061	4-H14
92 61 595	08A	065	4-H18
92 61 603	08A	035	4-G12
92 61 645	08A	035	4-G12
92 61 652	08A	035	4-G12
92 61 686	08A	035	4-G12
92 61 744	08A	019	4-F20
92 61 751	08A	019	4-F20
92 61 801	08A	027	4-G04
92 62 023	08A	053	4-H06
92 62 031	08A	053	4-H06
92 62 122	08A	097	4-J02
92 62 130	08A	095	4-I24
92 62 148	08A	091	4-I20
92 62 163	08A	061	4-H14
92 62 163	08A	065	4-H18
92 62 163	08A	069	4-H22
92 62 205	08A	015	4-F16
92 62 288	08A	095	4-I24
92 62 296	08A	095	4-I24
92 62 320	08A	095	4-I24
92 62 338	08A	095	4-I24
92 62 346	08A	045	4-G22
92 62 353	08A	045	4-G22
92 62 361	08A	069	4-H22
92 62 387	08A	069	4-H22
92 62 395	08A	069	4-H22
92 62 403	08A	069	4-H22
92 62 486	08A	061	4-H14
92 62 486	08A	065	4-H18
92 62 601	08A	041	4-G18
92 62 619	08A	007	4-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 62 627	08A	049	4-H02
92 62 742	08A	107	4-J12
92 62 759	08A	079	4-I08
92 62 916	08A	091	4-I20
92 62 924	08A	091	4-I20
92 62 940	08A	103	4-J08
92 62 957	08A	103	4-J08
92 62 965	08A	103	4-J08
92 62 97[illegible]	08A	069	4-H22
92 63 344	08A	019	4-F20
92 63 385	08A	061	4-H14
92 63 393	08A	061	4-H14
92 63 401	08A	053	4-H06
92 63 401	08A	057	4-H10
92 63 583	08A	053	4-H06
92 63 583	08A	057	4-H10
92 63 591	08A	095	4-I24
92 63 609	08A	057	4-H10
92 63 617	08A	057	4-H10
92 63 641	08A	049	4-H02
92 63 658	08A	045	4-G22
92 63 658	08A	049	4-H02
92 63 674	08A	103	4-J08
92 63 690	08A	095	4-I24
92 63 708	08A	095	4-I24
92 63 716	08A	015	4-F16
92 63 823	08A	045	4-G22
92 63 823	08A	049	4-H02
92 63 922	08A	017	4-F18
92 63 930	08A	013	4-F14
92 63 948	08A	013	4-F14
92 63 955	08A	013	4-F14
92 63 997	08A	039	4-G16
92 64 359	08A	027	4-G04
92 64 367	08A	027	4-G04
92 64 375	08A	027	4-G04
92 64 383	08A	027	4-G04
92 64 425	08A	061	4-H14
92 64 433	08A	061	4-H14
92 64 474	08A	019	4-F20
92 64 508	08A	035	4-G12
92 64 557	08A	035	4-G12
92 64 680	08A	013	4-F14
92 64 698	08A	013	4-F14
92 64 805	08A	073	4-I02
92 64 821	08A	073	4-I02
92 64 862	08A	103	4-J08
92 64 946	08A	073	4-I02
92 64 987	08A	073	4-I02
92 65 000	08A	073	4-I02
92 65 018	08A	073	4-I02
92 65 034	08A	073	4-I02
92 65 059	08A	073	4-I02
92 65 075	08A	073	4-I02
92 65 158	08A	073	4-I02
92 65 174	08A	073	4-I02
92 65 281	08A	079	4-I08
92 65 331	08A	079	4-I08
92 65 372	08A	027	4-G04
92 65 513	08A	039	4-G16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 65 547	08A	023	4-F24
92 65 554	08A	023	4-F24
92 65 562	08A	023	4-F24
92 65 570	08A	023	4-F24
92 65 588	08A	023	4-F24
92 65 596	08A	023	4-F24
92 65 745	08A	005	4-F06
92 65 760	08A	019	4-F20
92 65 778	08A	019	4-F20
92 65 786	08A	019	4-F20
92 65 794	08A	019	4-F20
92 65 802	08A	019	4-F20
92 65 810	08A	019	4-F20
92 65 828	08A	019	4-F20
92 65 836	08A	023	4-F24
92 65 844	08A	023	4-F24
92 65 851	08A	011	4-F12
92 65 869	08A	011	4-F12
92 65 877	08A	011	4-F12
92 65 885	08A	011	4-F12
92 65 893	08A	011	4-F12
92 65 901	08A	011	4-F12
92 65 927	08A	007	4-F08
92 65 935	08A	007	4-F08
92 65 943	08A	007	4-F08
92 65 950	08A	007	4-F08
92 65 968	08A	007	4-F08
92 65 976	08A	007	4-F08
92 65 984	08A	007	4-F08
92 65 992	08A	007	4-F08
92 66 008	08A	007	4-F08
92 66 016	08A	007	4-F08
92 66 024	08A	007	4-F08
92 66 032	08A	007	4-F08
92 66 040	08A	007	4-F08
92 66 057	08A	007	4-F08
92 66 065	08A	009	4-F10
92 66 073	08A	007	4-F08
92 66 081	08A	007	4-F08
92 66 099	08A	007	4-F08
92 66 107	08A	007	4-F08
92 66 115	08A	007	4-F08
92 66 123	08A	005	4-F06
92 66 131	08A	005	4-F06
92 66 149	08A	005	4-F06
92 66 156	08A	005	4-F06
92 66 164	08A	005	4-F06
92 66 172	08A	005	4-F06
92 66 180	08A	005	4-F06
92 66 198	08A	009	4-F10
92 66 206	08A	025	4-G02
92 66 214	08A	025	4-G02
92 66 222	08A	031	4-G08
92 66 230	08A	031	4-G08
92 66 248	08A	031	4-G08
92 66 255	08A	031	4-G08
92 66 263	08A	031	4-G08
92 66 271	08A	031	4-G08
92 66 289	08A	031	4-G08
92 66 297	08A	031	4-G08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 66 305	08A	031	4-G08
92 66 313	08A	031	4-G08
92 66 321	08A	031	4-G08
92 66 339	08A	031	4-G08
92 66 347	08A	031	4-G08
92 66 362	08A	027	4-G04
92 66 370	08A	027	4-G04
92 66 388	08A	031	4-G08
92 66 396	08A	031	4-G08
92 66 404	08A	031	4-G08
92 66 412	08A	031	4-G08
92 66 420	08A	027	4-G04
92 66 438	08A	027	4-G04
92 66 446	08A	027	4-G04
92 66 453	08A	027	4-G04
92 66 461	08A	027	4-G04
92 66 479	08A	027	4-G04
92 66 487	08A	027	4-G04
92 66 495	08A	027	4-G04
92 66 552	08A	035	4-G12
92 66 644	08A	057	4-H10
92 66 651	08A	075	4-I04
92 66 701	08A	103	4-J08
92 66 792	08A	103	4-J08
92 66 800	08A	103	4-J08
92 66 982	08A	095	4-I24
92 66 990	08A	095	4-I24
92 67 006	08A	095	4-I24
92 67 014	08A	095	4-I24
92 67 048	08A	095	4-I24
92 67 055	08A	095	4-I24
92 67 188	08A	103	4-J08
92 67 196	08A	101	4-J06
92 67 204	08A	101	4-J06
92 67 212	08A	101	4-J06
92 67 220	08A	103	4-J08
92 67 238	08A	103	4-J08
92 67 261	08A	103	4-J08
92 67 394	08A	075	4-I04
92 67 477	08A	045	4-G22
92 67 477	08A	049	4-H02
92 67 485	08A	011	4-F12
92 67 527	08A	027	4-G04
92 67 691	08A	005	4-F06
92 67 709	08A	007	4-F08
92 67 717	08A	007	4-F08
92 67 774	08A	007	4-F08
92 67 808	08A	005	4-F06
92 67 816	08A	019	4-F20
92 67 824	08A	041	4-G18
92 67 832	08A	041	4-G18
92 67 840	08A	023	4-F24
92 67 857	08A	023	4-F24
92 67 865	08A	007	4-F08
92 67 881	03A	141	2-F22
92 67 881	08A	005	4-F06
92 67 899	08A	005	4-F06
92 67 899	08A	029	4-G06
92 67 907	08A	005	4-F06
92 67 915	08A	023	4-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 67 915	08A	033	4-G10
92 67 923	08A	005	4-F06
92 67 931	08A	031	4-G08
92 67 956	08A	081	4-I10
92 67 956	08A	125	4-K06
92 67 964	08A	079	4-I08
92 67 972	08A	079	4-I08
92 67 980	08A	009	4-F10
92 67 998	08A	005	4-F06
92 67 998	08A	009	4-F10
92 68 020	08A	099	4-J04
92 68 020	08A	125	4-K06
92 68 020	08A	133	4-K14
92 68 038	08A	099	4-J04
92 68 038	08A	125	4-K06
92 68 038	08A	133	4-K14
92 68 079	08A	079	4-I08
92 68 111	08A	041	4-G18
92 68 129	08A	041	4-G18
92 68 137	08A	041	4-G18
92 68 145	08A	041	4-G18
92 68 160	08A	027	4-G04
92 68 178	08A	005	4-F06
92 68 178	08A	023	4-F24
92 68 178	08A	033	4-G10
92 68 186	03A	097	2-E02
92 68 186	08A	033	4-G10
92 68 194	08A	045	4-G22
92 68 202	08A	075	4-I04
92 68 483	08A	053	4-H06
92 68 483	08A	057	4-H10
92 68 558	08A	095	4-I24
92 68 608	08A	045	4-G22
92 68 608	08A	049	4-H02
92 68 616	08A	095	4-I24
92 68 806	08A	023	4-F24
92 68 814	08A	007	4-F08
92 68 822	08A	007	4-F08
92 68 863	08A	023	4-F24
92 68 871	08A	019	4-F20
92 68 889	08A	061	4-H14
92 68 913	08A	039	4-G16
92 68 913	08A	041	4-G18
92 68 921	08A	061	4-H14
92 68 947	08A	061	4-H14
92 68 988	08A	031	4-G08
92 69 010	08A	035	4-G12
92 69 127	08A	079	4-I08
92 69 127	08A	125	4-K06
92 69 135	08A	081	4-I10
92 69 135	08A	125	4-K06
92 69 184	08A	007	4-F08
92 69 234	08A	015	4-F16
92 69 390	08A	037	4-G14
92 69 424	08A	099	4-J04
92 69 432	08A	099	4-J04
92 69 697	08A	075	4-I04
92 69 697	08A	077	4-I06
92 69 705	08A	075	4-I04
92 69 713	08A	075	4-I04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 70 166	08A	101	4-J06
92 70 174	08A	101	4-J06
92 70 240	08A	037	4-G14
92 70 257	08A	045	4-G22
92 70 257	08A	049	4-H02
92 70 265	08A	019	4-F20
92 70 349	08A	019	4-F20
92 70 380	08A	019	4-F20
92 70 398	08A	019	4-F20
92 70 547	09	007	6-C08
92 71 263	08A	009	4-F10
92 71 271	08A	111	4-J16
92 71 289	08A	111	4-J16
92 71 297	08A	019	4-F20
92 71 487	08A	099	4-J04
92 71 495	08A	099	4-J04
92 71 693	08A	019	4-F20
92 71 909	08A	013	4-F14
92 72 139	08A	075	4-I04
92 72 311	08A	103	4-J08
92 72 352	08A	027	4-G04
92 72 378	08A	009	4-F10
92 73 921	08A	041	4-G18
92 73 939	08A	041	4-G18
92 73 970	08A	039	4-G16
92 74 077	08A	103	4-J08
92 74 085	08A	103	4-J08
92 74 267	08A	095	4-I24
92 74 275	08A	095	4-I24
92 74 325	08A	095	4-I24
92 74 333	08A	095	4-I24
92 74 689	08A	041	4-G18
92 74 697	08A	041	4-G18
92 74 895	08A	095	4-I24
92 74 903	08A	095	4-I24
92 75 009	08A	095	4-I24
92 75 017	08A	073	4-I02
92 75 033	08A	073	4-I02
92 75 298	08A	057	4-H10
92 75 306	08A	057	4-H10
92 75 744	08A	037	4-G14
92 75 744	08A	063	4-H16
92 75 785	08A	023	4-F24
92 75 793	08A	023	4-F24
92 75 835	08A	113	4-J18
92 75 843	08A	113	4-J18
92 75 942	08A	013	4-F14
92 75 959	08A	013	4-F14
92 75 991	08A	013	4-F14
92 76 023	08A	013	4-F14
92 76 031	08A	013	4-F14
92 76 049	08A	019	4-F20
92 76 064	08A	079	4-I08
92 76 106	08A	007	4-F08
92 76 262	08B	239	5-J24
92 76 288	08A	043	4-G20
92 76 304	08A	111	4-J16
92 76 312	08A	043	4-G20
92 76 320	08A	113	4-J18
92 76 353	08A	019	4-F20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 76 387	08A	027	4-G04
92 76 403	08A	027	4-G04
92 76 403	08A	029	4-G06
92 76 924	08A	007	4-F08
92 76 932	08A	007	4-F08
92 76 940	08A	007	4-F08
92 76 965	08A	031	4-G08
92 76 973	08A	031	4-G08
92 77 138	08A	101	4-J06
92 77 146	08A	101	4-J06
92 77 153	08A	101	4-J06
92 77 161	08A	101	4-J06
92 77 195	08A	101	4-J06
92 77 203	08A	101	4-J06
92 77 229	08A	127	4-K08
92 77 237	08A	103	4-J08
92 77 245	08A	075	4-I04
92 77 245	08A	077	4-I06
92 77 278	08A	095	4-I24
92 77 286	08A	095	4-I24
92 77 294	08A	097	4-J02
92 77 302	08A	097	4-J02
92 77 336	08A	077	4-I06
92 77 344	08A	077	4-I06
92 77 393	08A	077	4-I06
92 77 484	08A	109	4-J14
92 77 559	08A	029	4-G06
92 77 567	08A	029	4-G06
92 77 609	08A	079	4-I08
92 77 609	08A	129	4-K10
92 77 690	08A	103	4-J08
92 77 708	08A	103	4-J08
92 77 732	08B	239	5-J24
92 77 765	08A	013	4-F14
92 77 773	08A	013	4-F14
92 77 781	08A	017	4-F18
92 77 864	08A	079	4-I08
92 77 864	08A	125	4-K06
92 77 880	08A	027	4-G04
92 78 003	08A	077	4-I06
92 78 136	08A	039	4-G16
92 78 151	08A	075	4-I04
92 78 151	08A	077	4-I06
92 78 177	08A	077	4-I06
92 78 185	08A	077	4-I06
92 78 193	08A	077	4-I06
92 78 201	08A	077	4-I06
92 78 219	08A	077	4-I06
92 78 227	08A	077	4-I06
92 78 235	08A	077	4-I06
92 78 243	08A	077	4-I06
92 78 250	08A	077	4-I06
92 78 268	08A	077	4-I06
92 78 300	08A	091	4-I20
92 78 300	08A	127	4-K08
92 78 318	08A	091	4-I20
92 78 318	08A	127	4-K08
92 78 326	08A	091	4-I20
92 78 334	08A	091	4-I20
92 78 334	08A	093	4-I22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 78 334	08A	127	4-K08
92 78 334	08A	133	4-K14
92 78 466	08A	105	4-J10
92 78 557	08A	035	4-G12
92 78 698	08A	107	4-J12
92 78 706	08A	111	4-J16
92 78 714	08A	107	4-J12
92 78 730	08A	111	4-J16
92 78 748	08A	105	4-J10
92 78 755	08A	105	4-J10
92 78 847	08A	079	4-I08
92 78 847	08A	125	4-K06
92 78 912	08A	007	4-F08
92 78 995	08A	015	4-F16
92 79 332	08A	053	4-H06
92 79 340	08A	053	4-H06
92 79 399	08A	095	4-I24
92 79 407	08A	099	4-J04
92 79 407	08A	133	4-K14
92 79 415	08A	099	4-J04
92 79 415	08A	133	4-K14
92 79 423	08A	065	4-H18
92 79 456	08A	019	4-F20
92 79 464	08A	019	4-F20
92 79 480	08A	035	4-G12
92 79 506	08A	035	4-G12
92 79 514	08A	047	4-G24
92 79 514	08A	051	4-H04
92 79 548	08A	105	4-J10
92 79 589	08A	079	4-I08
92 79 621	08A	065	4-H18
92 79 639	08A	015	4-F16
92 79 654	08A	017	4-F18
92 79 712	08A	015	4-F16
92 79 860	08A	043	4-G20
92 79 878	03A	097	2-E02
92 79 886	08A	045	4-G22
92 79 886	08A	049	4-H02
92 83 722	09	009	6-C10
92 85 404	08B	029	5-B06
92 88 127	08A	009	4-F10
92 88 127	08A	019	4-F20
92 88 127	08A	105	4-J10
92 88 846	08A	079	4-I08
92 88 846	08A	099	4-J04
92 88 846	08A	133	4-K14
92 90 230	09	013	6-C14
92 90 255	09	013	6-C14
92 90 297	09	013	6-C14
92 90 339	09	013	6-C14
92 90 347	09	013	6-C14
92 92 699	08A	005	4-F06
92 93 911	08A	073	4-I02
92 93 937	08A	073	4-I02
92 94 646	09	013	6-C14
93 00 591	02	027	1-C04
93 00 625	02	043	1-C20
93 00 625	02	145	1-H02
93 01 532	02	119	1-F24
93 01 532	02	143	1-G24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
93 01 540	02	027	1-C04
93 01 706	02	131	1-G12
93 01 706	02	141	1-G22
93 01 714	02	141	1-G22
93 01 722	02	141	1-G22
93 06 812	02	085	1-E14
93 06 812	02	087	1-E16
93 06 820	02	085	1-E14
93 06 820	02	087	1-E16
93 06 820	02	141	1-G22
93 08 180	02	031	1-C08
93 08 537	02	015	1-B16
93 09 204	02	019	1-B20
93 09 576	02	027	1-C04
93 09 576	02	031	1-C08
93 09 956	03A	021	2-A22
93 09 956	03A	023	2-A24
93 09 998	02	027	1-C04
93 09 998	02	031	1-C08
93 10 004	02	143	1-G24
93 10 004	02	145	1-H02
93 12 802	02	071	1-D24
93 12 802	02	073	1-E02
93 14 501	02	075	1-E04
93 14 501	02	079	1-E08
93 16 142	02	127	1-G08
93 19 294	02	005	1-B06
93 20 383	02	137	1-G18
93 20 383	02	139	1-G20
93 21 381	04	073	3-K02
93 21 407	04	033	3-I10
93 21 407	04	073	3-K02
93 21 423	04	021	3-H22
93 21 548	02	019	1-B20
93 21 589	02	023	1-B24
93 21 787	03A	027	2-B04
93 21 795	02	015	1-B16
93 21 795	02	021	1-B22
93 21 795	04	015	3-H16
93 21 837	02	019	1-B20
93 21 928	02	147	1-H04
93 21 928	02	149	1-H06
93 24 021	02	051	1-D04
93 25 663	08C	019	6-A20
93 28 105	02	095	1-E24
93 28 105	02	097	1-F02
93 28 105	02	099	1-F04
93 28 105	02	101	1-F06
93 28 105	02	103	1-F08
93 31 554	02	057	1-D10
93 33 790	02	053	1-D06
93 37 510	02	057	1-D10
93 37 528	02	057	1-D10
93 41 439	09	007	6-C08
93 42 064	02	133	1-G14
93 42 270	02	133	1-G14
93 42 627	02	113	1-F18
93 46 354	06	023	4-C24
93 48 533	04	031	3-I08
93 50 158	02	015	1-B16

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E09 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
93 50 208	02	089	1-E18
93 50 216	02	091	1-E20
93 50 224	02	091	1-E20
93 50 471	02	129	1-G10
93 50 505	02	129	1-G10
93 50 505	02	141	1-G22
93 50 513	02	129	1-G10
93 50 570	02	129	1-G10
93 50 588	02	085	1-E14
93 50 588	02	087	1-E16
93 50 653	02	065	1-D18
93 50 653	02	081	1-E10
93 50 752	02	079	1-E08
93 55 389	02	027	1-C04
93 55 389	02	031	1-C08
93 55 389	02	115	1-F20
93 55 389	02	117	1-F22
93 56 486	02	063	1-D16
93 57 021	02	063	1-D16
93 57 021	02	069	1-D22
93 57 021	02	071	1-D24
93 57 021	02	073	1-E02
93 57 203	02	015	1-B16
93 57 716	02	007	1-B08
93 57 716	02	009	1-B10
93 58 037	02	133	1-G14
93 58 177	02	071	1-D24
93 58 177	02	073	1-E02
93 58 235	02	007	1-B08
93 58 391	02	007	1-B08
93 58 391	02	009	1-B10
93 58 870	02	007	1-B08
93 58 870	02	009	1-B10
93 59 050	02	075	1-E04
93 59 050	02	079	1-E08
93 59 084	02	085	1-E14
93 59 647	02	007	1-B08
93 59 647	02	011	1-B12
93 59 647	02	137	1-G18
93 59 985	02	123	1-G04
93 61 544	02	027	1-C04
93 61 544	02	031	1-C08
93 61 668	02	057	1-D10
93 62 534	09	013	6-C14
93 63 268	02	051	1-D04
93 63 540	02	057	1-D10
93 65 164	03A	139	2-F20
93 67 731	02	057	1-D10
93 67 756	02	057	1-D10
93 68 572	02	141	1-G22
93 68 846	02	051	1-D04
93 73 598	02	095	1-E24
93 75 601	02	037	1-C14
93 75 643	02	061	1-D14
93 76 799	03A	013	2-A14
93 77 334	02	105	1-F10
93 77 920	02	037	1-C14
93 77 920	02	043	1-C20
93 78 332	04	035	3-H12
93 79 462	04	031	3-H08
93 79 470	04	031	3-H08
93 79 488	04	031	3-H08
93 79 587	04	031	3-H08
93 79 595	04	031	3-H08
93 79 603	04	031	3-H08
93 79 637	04	031	3-H08
93 80 890	02	107	1-F12
93 81 120	02	113	1-F18
93 81 450	04	035	3-H12
93 81 724	02	113	1-F18
93 81 971	02	037	1-C14
93 81 971	02	043	1-C20
93 82 003	06	021	4-C22
93 82 102	02	111	1-F16
93 82 110	02	111	1-F16
93 82 144	02	109	1-F14
93 82 144	02	111	1-F16
93 82 268	06	021	4-C22
93 82 342	08C	019	6-A20
93 82 359	08C	019	6-A20
93 82 383	08C	019	6-A20
93 82 425	04	031	3-H08
93 82 425	04	075	3-K04
93 82 466	08C	019	6-A20
93 82 466	08C	027	6-B04
93 82 524	02	037	1-C14
93 82 649	02	105	1-F10
93 82 656	02	105	1-F10
93 82 771	02	051	1-D04
93 82 789	02	051	1-D04
93 82 839	02	051	1-D04
93 82 870	02	053	1-D06
93 82 938	02	051	1-D04
93 82 961	02	047	1-C24
93 83 035	02	047	1-C24
93 83 043	02	047	1-C24
93 83 050	02	047	1-C24
93 83 076	02	061	1-D14
93 83 175	02	005	1-B06
93 83 506	02	051	1-D04
93 83 522	02	057	1-D10
93 83 662	02	105	1-F10
93 83 670	02	105	1-F10
93 83 688	02	105	1-F10
93 83 969	02	057	1-D10
93 84 033	02	047	1-C24
93 84 041	02	047	1-C24
93 84 280	02	053	1-D06
93 84 777	02	053	1-D06
93 84 868	04	031	3-H08
93 85 121	02	067	1-D20
93 85 147	02	037	1-C14
93 85 147	02	043	1-C20
93 85 709	02	105	1-F10
93 85 824	02	105	1-F10
93 85 832	02	107	1-F12
93 85 931	04	035	3-H12
93 86 210	06	021	4-C22
93 86 236	04	031	3-H08
93 86 244	02	099	1-F04
93 86 244	02	103	1-F08
93 86 244	02	147	1-H04
93 86 251	02	099	1-F04
93 86 251	02	103	1-F08
93 86 251	02	147	1-H04
93 86 269	02	095	1-E24
93 86 277	02	103	1-F08
93 86 285	02	105	1-F10
93 86 343	08C	019	6-A20
93 86 343	08C	027	6-B04
93 86 350	08C	019	6-A20
93 86 350	08C	027	6-B04
93 86 459	04	015	3-H16
93 86 459	04	041	3-I18
93 86 467	04	015	3-H16
93 86 467	04	041	3-I18
93 86 491	02	057	1-D10
93 86 509	08A	005	4-F06
93 86 533	06	021	4-C22
93 86 541	02	027	1-C04
93 86 541	02	031	1-C08
93 86 798	02	057	1-D10
93 86 871	02	113	1-F18
93 87 002	02	047	1-C24
93 87 044	04	035	3-H12
93 87 168	02	061	1-D14
93 87 333	04	035	3-H12
93 87 341	02	047	1-C24
93 87 564	02	051	1-D04
93 87 598	02	051	1-D04
93 87 671	02	113	1-F18
93 87 689	02	113	1-F18
93 87 697	02	113	1-F18
93 87 705	02	113	1-F18
93 87 713	02	053	1-D06
93 87 887	02	047	1-C24
93 87 895	02	061	1-D14
93 87 903	02	047	1-C24
93 87 911	08A	007	4-F08
93 87 994	08A	007	4-F08
93 88 018	02	037	1-C14
93 88 034	02	051	1-D04
93 88 232	02	027	1-C04
93 88 232	02	031	1-C08
93 88 398	03A	017	2-A18
93 88 430	02	053	1-D06
93 88 448	02	053	1-D06
93 88 455	02	053	1-D06
93 88 463	02	053	1-D06
93 88 471	02	061	1-D14
93 88 513	02	061	1-D14
93 88 539	02	133	1-G14
93 88 554	03A	017	2-A18
93 88 588	02	095	1-E24
93 88 588	02	097	1-F02
93 88 588	02	099	1-F04
93 88 588	02	101	1-F06
93 88 588	02	103	1-F08
93 88 588	02	105	1-F10
93 88 604	02	133	1-G14
93 88 612	02	133	1-G14
93 88 620	02	133	1-G14
93 88 653	02	015	1-B16
93 88 661	02	015	1-B16
93 88 752	02	133	1-G14
93 88 794	02	027	1-C04
93 88 794	02	031	1-C08
93 88 968	02	043	1-C20
93 88 968	02	045	1-C22
93 88 976	02	043	1-C20
93 88 992	02	043	1-C20
93 89 198	02	061	1-D14
93 89 271	02	037	1-C14
93 89 313	02	089	1-E18
93 89 321	02	131	1-G12
93 89 396	02	057	1-D10
93 89 446	02	131	1-G12
93 89 461	02	113	1-F18
93 89 545	02	061	1-D14
93 89 560	02	095	1-E24
93 89 560	02	097	1-F02
93 89 651	09	007	6-C08
93 89 750	02	061	1-D14
93 89 768	02	061	1-D14
93 89 917	02	081	1-E10
93 89 925	02	081	1-E10
93 89 933	02	081	1-E10
93 89 941	02	081	1-E10
93 89 958	02	081	1-E10
93 89 990	02	015	1-B16
93 90 022	02	131	1-G12
93 90 121	02	035	1-C12
93 90 121	02	093	1-E22
93 90 154	02	027	1-C04
93 90 154	02	031	1-C08
93 90 170	02	039	1-C16
93 90 170	02	041	1-C18
93 90 170	02	045	1-C22
93 90 220	03A	017	2-A18
93 90 246	02	093	1-E22
93 90 253	02	093	1-E22
93 90 287	02	093	1-E22
93 90 360	02	093	1-E22
93 90 428	02	061	1-D14
93 90 451	02	051	1-D04
93 90 535	02	093	1-E22
93 90 600	02	099	1-F04
93 90 600	02	143	1-G24
93 90 832	02	051	1-D04
93 90 840	03A	017	2-A18
93 90 940	03A	173	2-H06
93 90 873	02	131	1-G12
93 90 907	02	039	1-C16
93 90 907	02	041	1-C18
93 90 907	02	045	1-C22
93 90 915	02	039	1-C16
93 90 915	02	041	1-C18
93 90 915	02	045	1-C22
93 90 923	02	113	1-F18
93 90 956	02	113	1-F18
93 90 964	08C	027	6-B04

6-E10 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
93 90 964	09	011	6-C12
93 90 972	02	101	1-F06
93 91 004	09	007	6-C08
93 91 020	09	007	6-C08
93 91 046	09	007	6-C08
93 91 061	09	007	6-C08
93 91 087	09	007	6-C08
93 91 111	09	013	6-C14
93 91 178	02	061	1-D14
93 91 186	02	061	1-D14
93 91 467	02	027	1-C04
93 91 467	02	031	1-C08
93 91 509	02	113	1-F18
93 91 590	02	043	1-C20
93 91 608	02	039	1-C16
93 91 608	02	041	1-C18
93 91 616	02	039	1-C16
93 91 616	02	041	1-C18
93 91 616	02	045	1-C22
93 91 764	02	067	1-D20
93 92 200	02	047	1-C24
93 92 283	02	133	1-G14
93 92 309	02	067	1-D20
93 92 457	02	099	1-F04
93 92 457	02	103	1-F08
93 92 457	02	143	1-G24
93 92 457	02	145	1-H02
93 92 457	02	147	1-H04
93 92 465	02	095	1-E24
93 92 465	02	097	1-F02
93 92 465	02	099	1-F04
93 92 465	02	101	1-F06
93 92 465	02	103	1-F08
93 92 473	02	097	1-F02
93 92 473	02	099	1-F04
93 92 473	02	101	1-F06
93 92 473	02	103	1-F08
93 92 473	02	147	1-H04
93 92 598	02	099	1-F04
93 92 598	02	103	1-F08
93 92 606	02	047	1-C24
93 92 606	02	067	1-D20
93 92 689	02	051	1-D04
93 92 747	02	089	1-E18
93 92 762	02	099	1-F04
93 92 762	02	103	1-F08
93 92 895	02	051	1-D04
93 92 903	02	051	1-D04
93 92 911	02	057	1-D10
93 92 929	02	101	1-F06
93 93 034	02	047	1-C24
93 93 299	02	047	1-C24
93 93 315	02	047	1-C24
93 93 331	02	053	1-D06
93 93 349	02	099	1-F04
93 93 455	02	103	1-F08
93 93 455	02	145	1-H02
93 93 463	02	061	1-D14
93 93 513	02	053	1-D06
93 93 794	02	051	1-D04
93 93 802	02	051	1-D04
93 93 810	02	051	1-D04
93 93 935	02	057	1-D10
93 93 950	02	051	1-D04
93 93 968	02	097	1-F02
93 93 968	02	099	1-F04
93 93 968	02	101	1-F06
93 93 968	02	103	1-F08
93 93 968	02	143	1-G24
93 93 968	02	145	1-H02
93 93 968	02	147	1-H04
93 93 968	08B	037	5-B14
93 94 016	02	057	1-D10
93 94 057	02	099	1-F04
93 94 057	02	103	1-F08
93 94 065	02	099	1-F04
93 94 065	02	103	1-F08
93 94 073	02	097	1-F02
93 94 073	02	099	1-F04
93 94 073	02	101	1-F06
93 94 073	02	103	1-F08
93 94 081	02	103	1-F08
93 94 107	09	007	6-C08
93 94 115	09	007	6-C08
93 94 123	09	007	6-C08
93 94 131	09	007	6-C08
93 94 149	09	007	6-C08
93 94 164	09	007	6-C08
93 94 180	09	007	6-C08
93 94 198	09	007	6-C08
93 94 206	09	007	6-C08
93 94 339	02	135	1-G16
93 94 347	02	135	1-G16
93 94 388	02	093	1-E22
93 94 503	02	059	1-D12
93 94 529	02	059	1-D12
93 94 602	02	059	1-D12
93 94 628	02	059	1-D12
93 94 669	02	053	1-D06
93 94 685	02	095	1-E24
93 94 685	02	097	1-F02
93 94 685	02	099	1-F04
93 94 685	02	101	1-F06
93 94 685	02	103	1-F08
93 94 867	02	047	1-C24
93 94 875	02	047	1-C24
94 20 035	08C	005	6-A06
94 20 043	08C	005	6-A06
94 23 658	08B	137	5-F18
94 27 014	02	109	1-F14
94 27 014	02	111	1-F16
94 41 739	05	011	4-A12
94 43 920	02	067	1-D20
94 45 909	08B	211	5-I20
94 45 909	08B	215	5-I24
94 45 909	08B	251	5-K12
94 46 881	03A	005	2-A06
94 46 881	08B	233	5-J18
94 50 685	08B	171	5-H04
94 50 685	08B	185	5-H18
94 50 685	08B	197	5-I06
94 50 685	08B	209	5-I18
94 50 685	08B	245	5-K06
94 59 728	08B	221	5-J06
94 59 868	08B	171	5-H04
94 59 868	08B	193	5-I02
94 59 868	08B	203	5-I12
94 59 868	08B	245	5-K06
94 59 868	08B	247	5-K08
94 60 742	08C	021	6-A22
94 64 926	08B	137	5-F18
94 72 580	08A	085	4-I14
94 72 580	08A	087	4-I16
94 73 851	08C	021	6-A22
94 73 869	03A	071	2-C24
94 73 869	08B	169	5-H02
94 73 877	08B	137	5-F18
94 73 877	08B	139	5-F20
94 73 943	03A	171	2-H04
94 79 452	08C	017	6-A18
94 79 478	08C	017	6-A18
94 79 486	08C	017	6-A18
94 79 726	08C	017	6-A18
94 79 742	08C	017	6-A18
94 79 759	08C	017	6-A18
94 80 856	08C	017	6-A18
94 80 914	08C	021	6-A22
94 82 357	08C	017	6-A18
94 82 381	08C	017	6-A18
94 91 325	08B	211	5-I20
94 91 325	08B	215	5-I24
94 91 325	08B	251	5-K12
94 91 689	08B	139	5-F20
94 91 689	08B	145	5-G02
94 91 689	08B	155	5-G12
94 91 689	08B	159	5-G16
94 91 689	08B	163	5-G20
94 91 689	08B	219	5-J04
95 00 117	03A	037	2-B14
95 00 125	03A	037	2-B14
95 00 158	03A	037	2-B14
95 00 166	03A	037	2-B14
95 00 273	03A	051	2-C04
95 00 299	03A	069	2-C22
95 00 471	03A	065	2-C18
95 00 513	03A	069	2-C22
95 00 927	08C	005	6-A06
95 00 984	03A	103	2-E08
95 00 984	03A	111	2-E16
95 00 992	03A	103	2-E08
95 00 992	03A	111	2-E16
95 01 099	03A	103	2-E08
95 01 099	03A	111	2-E16
95 01 115	03A	105	2-E10
95 01 115	03A	113	2-E18
95 01 172	03A	029	2-B06
95 01 180	03A	029	2-B06
95 01 230	03A	029	2-B06
95 01 255	03A	029	2-B06
95 01 495	03A	063	2-C16
95 01 503	03A	037	2-B14
95 01 628	03A	043	2-B20
95 01 636	03A	063	2-C16
95 01 685	03B	009	3-A10
95 01 685	03B	021	3-A22
95 01 685	03B	041	3-B18
95 01 685	03B	063	3-C16
95 01 685	03B	089	3-D18
95 01 693	03A	043	2-B20
95 01 859	03A	071	2-C24
95 01 859	08A	129	4-K10
95 01 867	03A	071	2-C24
95 01 867	08A	129	4-K10
95 01 875	03A	071	2-C24
95 01 875	08A	129	4-K10
95 01 891	03A	071	2-C24
95 01 891	08A	129	4-K10
95 01 891	08C	031	6-B08
95 01 941	03A	051	2-C04
95 01 990	03A	051	2-C04
95 02 006	03A	051	2-C04
95 02 055	03A	051	2-C04
95 02 550	03A	055	2-C08
95 02 584	03A	063	2-C16
95 02 592	03A	063	2-C16
95 02 618	03A	029	2-B06
95 02 691	03A	067	2-C20
95 02 709	03A	067	2-C20
95 02 717	03A	067	2-C20
95 02 725	03A	067	2-C20
95 02 741	03A	067	2-C20
95 02 766	03A	029	2-B06
95 02 840	03A	141	2-F22
95 02 923	03B	011	3-A12
95 02 923	03B	115	3-E20
95 02 998	03B	021	3-A22
95 02 998	03B	041	3-B18
95 02 998	03B	063	3-C16
95 02 998	03B	089	3-D18
95 03 012	03B	011	3-A12
95 03 012	03B	071	3-C24
95 03 012	03B	097	3-E02
95 03 020	03B	015	3-A16
95 03 020	03B	031	3-B08
95 03 020	03B	057	3-C10
95 03 020	03B	079	3-D08
95 03 020	03B	105	3-E10
95 03 046	03A	005	2-A06
95 03 053	03A	005	2-A06
95 03 061	03A	067	2-C20
95 03 079	03A	067	2-C20
95 03 087	03A	067	2-C20
95 03 095	03A	005	2-A06
95 03 251	03B	013	3-A14
95 03 251	03B	027	3-B04
95 03 251	03B	053	3-C06
95 03 251	03B	075	3-D04
95 03 251	03B	101	3-E06
95 03 277	03B	009	3-A10
95 03 277	03B	025	3-B02

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E11 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 03 277	03B	045	3-B22
95 03 277	03B	067	3-C20
95 03 277	03B	093	3-D22
95 03 293	03B	011	3-A12
95 03 293	03B	025	3-B02
95 03 319	03B	009	3-A10
95 03 319	03B	021	3-A22
95 03 319	03B	039	3-B16
95 03 319	03B	041	3-B18
95 03 319	03B	061	3-C14
95 03 319	03B	087	3-D16
95 03 327	03A	029	2-B06
95 03 327	03A	031	2-B08
95 03 327	03A	063	2-C16
95 03 327	03A	081	2-D10
95 03 327	03A	175	2-H08
95 03 327	03B	025	3-B02
95 03 327	03B	045	3-B22
95 03 327	03B	067	3-C20
95 03 327	03B	095	3-D24
95 03 350	03A	043	2-B20
95 03 368	03A	043	2-B20
95 03 418	03B	017	3-A18
95 03 418	03B	037	3-B14
95 03 418	03B	059	3-C12
95 03 418	03B	085	3-D14
95 03 426	03B	037	3-B14
95 03 426	03B	059	3-C12
95 03 426	03B	085	3-D14
95 03 426	08C	027	6-B04
95 03 434	03B	011	3-A12
95 03 434	03B	025	3-B02
95 03 434	03B	049	3-C02
95 03 434	03B	071	3-C24
95 03 434	03B	097	3-E02
95 03 442	08C	027	6-B04
95 03 475	03B	011	3-A12
95 03 475	03B	027	3-B04
95 03 475	03B	049	3-C02
95 03 475	03B	075	3-D04
95 03 475	03B	101	3-E06
95 03 491	03A	141	2-F22
95 03 525	03B	013	3-A14
95 03 525	03B	031	3-B08
95 03 525	03B	053	3-C06
95 03 525	03B	079	3-D08
95 03 533	03A	171	2-H04
95 03 715	03A	007	2-A08
95 03 715	03A	009	2-A10
95 03 715	03A	011	2-A12
95 03 723	03A	067	2-C20
95 03 772	03A	071	2-C24
95 03 772	08A	129	4-K10
95 04 424	03A	057	2-C10
95 04 424	03A	059	2-C12
95 04 424	03A	061	2-C14
95 04 630	03A	029	2-B06
95 04 630	03A	033	2-B10
95 04 648	03A	029	2-B06
95 04 648	03A	031	2-B08
95 04 648	03A	033	2-B10
95 04 648	03A	035	2-B12
95 04 671	03A	169	2-H02
95 04 689	03A	167	2-G24
95 04 705	03A	167	2-G24
95 04 721	03A	167	2-G24
95 04 739	03A	167	2-G24
95 05 058	03A	067	2-C20
95 05 074	03A	169	2-H02
95 05 082	03A	167	2-G24
95 05 116	03A	171	2-H04
95 05 157	03A	029	2-B06
95 05 165	03A	029	2-B06
95 05 298	03A	169	2-H02
95 05 397	03B	015	3-A16
95 05 397	03B	031	3-B08
95 05 397	03B	057	3-C10
95 05 397	03B	079	3-D08
95 05 397	03B	105	3-E10
95 05 421	08C	005	6-A06
95 05 439	03A	053	2-C06
95 05 447	03A	053	2-C06
95 05 454	08A	053	4-H06
95 05 454	08A	057	4-H10
95 05 462	03A	077	2-D06
95 05 488	03A	071	2-C24
95 05 488	08A	129	4-K10
95 05 520	03A	171	2-H04
95 05 538	03A	171	2-H04
95 05 546	03A	171	2-H04
95 05 553	03A	169	2-H02
95 05 561	03A	169	2-H02
95 05 587	03A	169	2-H02
95 05 629	03A	169	2-H02
95 05 637	03A	169	2-H02
95 05 645	03A	069	2-C22
95 05 652	03A	077	2-D06
95 05 694	03A	077	2-D06
95 05 744	08C	005	6-A06
95 05 751	03A	069	2-C22
95 05 793	08A	015	4-F16
95 05 801	08A	015	4-F16
95 05 918	03A	153	2-G10
95 05 918	03A	155	2-G12
95 05 926	03A	153	2-G10
95 05 926	03A	155	2-G12
95 05 926	03A	157	2-G14
95 05 959	03A	149	2-G06
95 05 959	03A	151	2-G08
95 06 080	03A	051	2-C04
95 06 080	03A	053	2-C06
95 06 122	03A	171	2-H04
95 06 361	03A	009	2-A10
95 06 379	03A	065	2-C18
95 06 387	03A	065	2-C18
95 06 395	03A	065	2-C18
95 06 403	03A	065	2-C18
95 06 411	03A	065	2-C18
95 06 601	08C	005	6-A06
95 06 619	03A	169	2-H02
95 06 643	03B	009	3-A10
95 06 643	03B	021	3-A22
95 06 643	03B	041	3-B18
95 06 643	03B	063	3-C16
95 06 643	03B	089	3-D18
95 06 650	03B	015	3-A16
95 06 650	03B	033	3-B10
95 06 650	03B	057	3-C10
95 06 650	03B	083	3-D12
95 06 650	03B	109	3-E14
95 06 668	03B	011	3-A12
95 06 668	03B	027	3-B04
95 06 668	03B	049	3-C02
95 06 668	03B	075	3-D04
95 06 668	03B	101	3-E06
95 06 676	03A	071	2-C24
95 06 676	08A	129	4-K10
95 06 676	08C	031	6-B08
95 06 858	03A	073	2-D02
95 06 882	03A	073	2-D02
95 06 924	03A	149	2-G06
95 07 617	03A	065	2-C18
95 07 633	03A	065	2-C18
95 07 658	03B	011	3-A12
95 07 658	03B	025	3-B02
95 07 658	03B	045	3-B22
95 07 658	03B	067	3-C20
95 07 658	03B	093	3-D22
95 07 668	03A	141	2-F22
95 07 674	03A	071	2-C24
95 07 690	03A	141	2-F22
95 07 708	03A	037	2-B14
95 07 708	03A	039	2-B16
95 07 740	03A	079	2-D08
95 07 849	08C	021	6-A22
95 07 906	06	007	4-C08
95 07 914	03A	139	2-F20
95 07 971	03A	085	2-D14
95 07 989	03A	055	2-C08
95 08 003	03A	071	2-C24
95 08 011	08A	053	4-H06
95 08 011	08A	057	4-H10
95 08 029	03A	149	2-G06
95 08 029	03A	151	2-G08
95 08 037	03A	139	2-F20
95 08 045	03A	139	2-F20
95 08 078	03A	069	2-C22
95 08 086	03A	069	2-C22
95 08 094	03A	067	2-C20
95 08 094	08A	055	4-H08
95 08 094	08A	059	4-H12
95 08 318	03A	057	2-C10
95 08 318	03A	059	2-C12
95 08 318	03A	061	2-C14
95 08 367	03A	077	2-D06
95 08 441	03A	149	2-G06
95 08 441	03A	151	2-G08
95 08 482	03A	141	2-F22
95 08 524	03A	139	2-F20
95 08 532	03A	139	2-F20
95 08 599	03A	149	2-G06
95 08 706	03B	057	3-C10
95 08 706	03B	123	3-F04
95 08 706	03B	131	3-F12
95 08 706	03B	139	3-F20
95 08 706	03B	149	3-G06
95 08 714	03B	049	3-C02
95 08 714	03B	057	3-C10
95 08 714	03B	071	3-C24
95 08 714	03B	097	3-E02
95 08 714	03B	131	3-F12
95 08 748	03B	025	3-B02
95 08 748	03B	031	3-B08
95 08 748	03B	045	3-B22
95 08 748	03B	057	3-C10
95 08 748	03B	069	3-C22
95 08 748	03B	123	3-F04
95 08 748	03B	131	3-F12
95 08 748	03B	139	3-F20
95 08 789	03A	105	2-E10
95 08 789	03A	113	2-E18
95 08 789	03A	121	2-F02
95 08 862	03A	169	2-H02
95 08 870	03A	053	2-C06
95 08 904	03A	043	2-B20
95 08 904	03A	045	2-B22
95 08 920	03A	171	2-H04
95 08 946	03A	149	2-G06
95 08 979	03A	099	2-E04
95 08 987	03A	099	2-E04
95 08 995	03A	099	2-E04
95 09 076	03A	087	2-D16
95 09 100	03A	063	2-C16
95 09 118	03A	063	2-C16
95 09 126	03A	063	2-C16
95 09 175	03A	169	2-H02
95 09 449	03A	169	2-H02
95 09 456	03A	169	2-H02
95 09 464	03A	101	2-E06
95 09 597	03A	053	2-C06
95 09 621	03A	057	2-C10
95 09 621	03A	059	2-C12
95 09 688	03A	063	2-C16
95 09 696	03A	063	2-C16
95 09 746	03B	013	3-A14
95 09 746	03B	031	3-B08
95 09 746	03B	055	3-C08
95 09 746	03B	079	3-D08
95 09 746	03B	105	3-E10
95 09 746	03B	131	3-F12
95 09 746	03B	139	3-F20
95 09 746	03B	149	3-G06
95 09 795	03A	173	2-H06
95 09 902	09	011	6-C12
95 09 944	03A	153	2-G10
95 09 944	03A	155	2-G12
95 09 944	03A	157	2-G14
95 09 951	03A	155	2-G12

6-E12 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 09 951	03A	157	2-G14
95 09 993	03A	171	2-H04
95 12 013	03A	171	2-H04
95 12 229	03A	077	2-D06
95 12 229	03A	093	2-D22
95 12 252	03A	051	2-C04
95 12 294	03A	073	2-D02
95 12 302	03A	073	2-D02
95 12 310	03A	071	2-C24
95 12 310	08A	129	4-K10
95 12 328	03A	033	2-B10
95 12 393	03A	033	2-B10
95 12 401	03A	033	2-B10
95 12 401	03A	035	2-B12
95 12 450	03A	043	2-B20
95 12 468	03A	043	2-B20
95 12 567	03A	057	2-C10
95 12 567	03A	059	2-C12
95 12 591	03B	027	3-B04
95 12 591	03B	053	3-C06
95 12 591	03B	075	3-D04
95 12 591	03B	101	3-E06
95 12 666	03A	069	2-C22
95 12 682	03A	069	2-C22
95 12 690	03A	069	2-C22
95 12 690	08C	027	6-B04
95 12 823	03A	155	2-G12
95 12 823	03A	157	2-G14
95 12 823	03A	159	2-G16
95 12 823	03A	163	2-G20
95 12 823	08A	129	4-K10
95 12 880	03A	053	2-C06
95 12 898	03A	053	2-C06
95 12 906	03A	053	2-C06
95 12 930	03B	013	3-A14
95 12 930	03B	031	3-B08
95 12 930	03B	055	3-C08
95 12 930	03B	079	3-D08
95 12 930	03B	105	3-E10
95 13 037	03A	033	2-B10
95 13 078	03A	033	2-B10
95 13 086	03A	033	2-B10
95 13 128	03A	009	2-A10
95 13 128	03A	011	2-A12
95 13 144	03A	009	2-A10
95 13 169	03A	009	2-A10
95 13 177	03A	009	2-A10
95 13 185	03A	009	2-A10
95 13 193	03A	009	2-A10
95 13 219	03A	155	2-G12
95 13 219	03A	157	2-G14
95 13 219	03A	159	2-G16
95 13 219	03A	163	2-G20
95 13 219	08C	029	6-B06
95 13 268	03A	063	2-C16
95 13 268	03A	173	2-H06
95 13 276	03A	077	2-D06
95 13 276	03A	173	2-H06
95 13 334	03A	171	2-H04
95 13 573	03A	149	2-G06
95 13 581	03A	029	2-B06
95 13 599	03A	007	2-A08
95 13 599	03A	009	2-A10
95 13 599	03A	011	2-A12
95 13 763	03A	009	2-A10
95 13 862	03A	167	2-G24
95 13 888	03A	169	2-H02
95 13 896	03A	167	2-G24
95 13 904	03A	167	2-G24
95 13 912	03A	169	2-H02
95 13 979	03A	167	2-G24
95 14 183	03A	077	2-D06
95 14 183	03A	173	2-H06
95 14 233	03A	049	2-C02
95 14 258	03A	053	2-C06
95 14 324	03A	053	2-C06
95 14 357	03A	087	2-D16
95 14 787	08C	005	6-A06
95 14 803	03B	025	3-B02
95 14 803	03B	045	3-B22
95 14 803	03B	069	3-C22
95 14 803	03B	097	3-E02
95 14 811	03A	033	2-B10
95 14 811	03B	025	3-B02
95 14 845	03A	169	2-H02
95 14 860	03A	077	2-D06
95 14 860	03A	093	2-D22
95 14 878	03A	077	2-D06
95 14 886	03A	077	2-D06
95 14 894	03A	169	2-H02
95 14 951	03A	049	2-C02
95 14 969	03A	049	2-C02
95 15 008	03A	109	2-E14
95 15 016	03A	109	2-E14
95 15 024	03B	147	3-G04
95 15 099	03A	153	2-G10
95 15 099	03A	155	2-G12
95 15 099	03A	157	2-G14
95 15 099	03A	159	2-G16
95 15 099	03A	163	2-G20
95 15 180	03A	007	2-A08
95 15 180	03A	009	2-A10
95 15 180	03A	011	2-A12
95 15 198	03A	169	2-H02
95 15 206	03A	169	2-H02
95 15 214	03A	169	2-H02
95 15 222	03A	005	2-A06
95 15 230	03A	005	2-A06
95 15 321	03A	109	2-E14
95 15 339	03A	109	2-E14
95 15 412	03A	141	2-F22
95 16 006	03A	087	2-D16
95 16 014	03A	087	2-D16
95 16 048	03A	109	2-E14
95 16 055	03A	111	2-E16
95 16 055	03A	119	2-E24
95 16 055	03A	127	2-F08
95 16 055	03A	135	2-F16
95 16 063	03A	111	2-E16
95 16 063	03A	119	2-E24
95 16 063	03A	127	2-F08
95 16 063	03A	135	2-F16
95 16 089	03A	167	2-G24
95 16 154	03A	167	2-G24
95 16 162	03A	169	2-H02
95 16 212	03A	147	2-G04
95 16 329	03A	073	2-D02
95 16 337	03A	073	2-D02
95 16 337	03A	075	2-D04
95 16 394	03A	107	2-E12
95 16 402	03A	107	2-E12
95 16 410	03A	107	2-E12
95 16 428	03A	107	2-E12
95 16 444	03A	107	2-E12
95 16 469	03A	107	2-E12
95 16 477	03A	107	2-E12
95 16 485	03A	107	2-E12
95 16 493	03A	107	2-E12
95 16 493	03A	115	2-E20
95 16 501	03A	107	2-E12
95 16 519	03A	107	2-E12
95 16 527	03A	107	2-E12
95 16 535	03A	107	2-E12
95 16 543	03A	107	2-E12
95 16 550	03A	107	2-E12
95 16 568	03A	107	2-E12
95 16 576	03A	107	2-E12
95 16 584	03A	107	2-E12
95 17 376	03A	107	2-E12
95 17 376	03A	115	2-E20
95 17 376	03A	123	2-F04
95 17 376	03A	131	2-F12
95 17 384	03A	005	2-A06
95 17 392	03A	005	2-A06
95 17 400	03A	115	2-E20
95 17 400	03A	123	2-F04
95 17 400	03A	131	2-F12
95 17 517	03A	069	2-C22
95 17 533	03A	069	2-C22
95 17 798	03A	073	2-D02
95 17 806	03A	069	2-C22
95 17 871	03A	139	2-F20
95 17 921	03A	103	2-E08
95 17 921	03A	111	2-E16
95 17 921	03A	119	2-E24
95 17 921	03A	127	2-F08
95 17 921	03A	135	2-F16
95 17 939	03A	103	2-E08
95 17 939	03A	111	2-E16
95 17 939	03A	119	2-E24
95 17 939	03A	127	2-F08
95 17 939	03A	135	2-F16
95 17 947	03A	103	2-E08
95 17 947	03A	111	2-E16
95 17 947	03A	119	2-E24
95 17 947	03A	127	2-F08
95 17 947	03A	135	2-F16
95 17 970	03A	099	2-E04
95 18 119	03A	145	2-G02
95 18 135	03A	153	2-G10
95 18 135	03A	155	2-G12
95 18 135	03A	157	2-G14
95 18 150	03A	171	2-H04
95 18 218	03A	069	2-C22
95 18 226	03A	069	2-C22
95 18 242	03A	069	2-C22
95 18 267	03A	049	2-C02
95 18 291	03A	069	2-C22
95 18 309	03A	069	2-C22
95 18 424	03A	005	2-A06
95 18 473	09	011	6-C12
95 18 481	03A	155	2-G12
95 18 481	03A	157	2-G14
95 18 507	03A	041	2-B18
95 18 523	03A	109	2-E14
95 18 523	03A	117	2-E22
95 18 523	03A	125	2-F06
95 18 556	03A	085	2-D14
95 18 648	03A	111	2-E16
95 18 663	09	011	6-C12
95 18 697	09	011	6-C12
95 18 713	03A	093	2-D22
95 18 739	03B	097	3-E02
95 18 820	03A	071	2-C24
95 18 879	03A	043	2-B20
95 18 887	03A	043	2-B20
95 18 895	03A	043	2-B20
95 18 903	03A	043	2-B20
95 18 952	03A	043	2-B20
95 18 960	03A	043	2-B20
95 18 978	03A	043	2-B20
95 18 986	03A	043	2-B20
95 18 994	09	011	6-C12
95 19 000	03A	171	2-H04
95 19 026	03A	095	2-D24
95 19 034	03A	095	2-D24
95 19 042	03A	107	2-E12
95 19 075	03A	043	2-B20
95 19 083	03A	043	2-B20
95 19 133	03A	159	2-G16
95 19 133	03A	163	2-G20
95 19 224	03A	155	2-G12
95 19 224	03A	157	2-G14
95 19 224	03A	159	2-G16
95 19 372	03A	095	2-D24
95 19 398	03B	043	3-B20
95 19 398	03B	063	3-C16
95 19 398	03B	089	3-D18
95 19 398	03B	127	3-F08
95 19 398	03B	135	3-F16
95 19 398	03B	145	3-G02
95 19 406	03B	043	3-B20
95 19 406	03B	063	3-C16
95 19 406	03B	089	3-D18
95 19 414	03B	089	3-C02
95 19 414	03B	071	3-C24
95 19 414	03B	097	3-E02
95 19 422	03B	043	3-B20
95 19 422	03B	063	3-C16
95 19 422	03B	089	3-D18

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 19 430	03B	049	3-C02
95 19 430	03B	071	3-C24
95 19 430	03B	101	3-E06
95 19 448	03A	059	2-C12
95 19 448	03A	061	2-C14
95 19 455	03B	049	3-C02
95 19 455	03B	071	3-C24
95 19 455	03B	101	3-E06
95 19 570	03A	141	2-F22
95 19 638	03A	075	2-D04
95 19 646	03A	075	2-D04
95 19 679	03B	045	3-B22
95 19 679	03B	071	3-C24
95 19 679	03B	097	3-E02
95 19 695	03A	097	2-E02
95 19 703	03A	097	2-E02
95 19 737	03A	005	2-A06
95 19 737	03A	141	2-F22
95 19 786	03A	139	2-F20
95 19 869	08B	171	5-H04
95 19 877	08B	171	5-H04
95 19 877	08B	185	5-H18
95 19 877	08B	199	5-I08
95 19 919	03A	097	2-E02
95 19 927	03A	097	2-E02
95 19 950	03A	097	2-E02
95 20 057	03A	115	2-E20
95 20 073	03A	115	2-E20
95 20 099	03A	115	2-E20
95 20 115	03A	115	2-E20
95 20 131	03A	115	2-E20
95 20 156	03A	115	2-E20
95 20 172	03A	107	2-E12
95 20 172	03A	115	2-E20
95 20 214	03A	115	2-E20
95 20 255	03A	115	2-E20
95 20 271	03A	115	2-E20
95 20 313	03A	115	2-E20
95 20 339	03A	115	2-E20
95 20 354	03A	115	2-E20
95 20 370	03A	115	2-E20
95 20 396	03A	115	2-E20
95 20 412	03A	115	2-E20
95 20 438	03A	115	2-E20
95 20 453	03A	115	2-E20
95 20 479	03A	115	2-E20
95 20 495	03A	115	2-E20
95 20 511	03A	115	2-E20
95 20 511	03A	123	2-F04
95 20 586	03A	097	2-E02
95 20 610	03A	121	2-F02
95 20 677	03A	073	2-D02
95 20 685	03A	167	2-G24
95 20 693	03A	169	2-H02
95 20 768	03A	167	2-G24
95 20 776	03A	169	2-H02
95 20 784	03A	169	2-H02
95 20 792	03A	169	2-H02
95 20 867	03A	097	2-E02
95 20 883	03A	169	2-H02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 20 891	03A	167	2-G24
95 20 909	03A	169	2-H02
95 20 917	03A	167	2-G24
95 20 941	03A	005	2-A06
95 20 974	03B	027	3-B04
95 20 974	03B	053	3-C06
95 20 974	03B	075	3-D04
95 20 974	03B	101	3-E06
95 21 089	03A	167	2-G24
95 21 097	03A	167	2-G24
95 21 139	03A	169	2-H02
95 21 147	03A	167	2-G24
95 21 188	03A	091	2-D20
95 21 352	03A	035	2-B12
95 21 360	03A	035	2-B12
95 21 774	03A	035	2-B12
95 21 782	03A	035	2-B12
95 21 816	03A	035	2-B12
95 21 824	03A	035	2-B12
95 21 857	03A	053	2-C06
95 21 881	03A	031	2-B08
95 21 956	03A	031	2-B08
95 21 964	03A	031	2-B08
95 21 972	03B	041	3-B18
95 21 972	03B	045	3-B22
95 21 972	03B	049	3-C02
95 21 972	03B	053	3-C06
95 21 972	03B	123	3-F04
95 21 972	03B	131	3-F12
95 21 972	03B	139	3-F20
95 21 972	03B	149	3-G06
95 21 980	03B	045	3-B22
95 21 980	03B	053	3-C06
95 21 980	03B	123	3-F04
95 21 980	03B	131	3-F12
95 21 980	03B	139	3-F20
95 21 980	03B	149	3-G06
95 22 061	03A	153	2-G10
95 22 061	03A	155	2-G12
95 22 061	03A	157	2-G14
95 22 061	03A	159	2-G16
95 22 061	03A	163	2-G20
95 22 079	03A	069	2-C22
95 22 095	03A	059	2-C12
95 22 434	03A	045	2-B22
95 22 442	03A	045	2-B22
95 22 459	03A	045	2-B22
95 22 467	03A	045	2-B22
95 22 475	03A	045	2-B22
95 22 483	03A	045	2-B22
95 22 491	03A	045	2-B22
95 22 509	03A	045	2-B22
95 22 590	03A	045	2-B22
95 22 608	03A	045	2-B22
95 22 616	03A	045	2-B22
95 22 624	03A	087	2-D16
95 22 632	03A	087	2-D16
95 22 640	03A	171	2-H04
95 22 806	03A	087	2-D16
95 22 814	03A	087	2-D16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 22 822	03A	097	2-E02
95 22 855	03A	073	2-D02
95 22 889	03A	077	2-D06
95 23 010	03A	039	2-B16
95 23 028	03A	039	2-B16
95 23 119	03A	107	2-E12
95 23 119	03A	115	2-E20
95 23 119	03A	123	2-F04
95 23 119	03A	131	2-F12
95 23 119	08C	029	6-B06
95 23 184	03A	009	2-A10
95 23 184	03A	011	2-A12
95 23 218	03A	145	2-G02
95 23 432	03A	057	2-C10
95 23 432	03A	059	2-C12
95 23 432	03A	061	2-C14
95 23 465	03A	141	2-F22
95 23 556	03A	119	2-E24
95 23 556	08A	131	4-K12
95 23 564	03A	119	2-E24
95 23 572	03A	119	2-E24
95 23 572	08A	131	4-K12
95 23 598	03A	119	2-E24
95 23 598	03A	127	2-F08
95 23 598	03A	135	2-F16
95 23 598	08A	133	4-K14
95 23 622	03A	141	2-F22
95 23 747	03A	069	2-C22
95 23 754	03A	061	2-C14
95 23 762	03A	069	2-C22
95 23 788	03A	069	2-C22
95 23 788	08C	027	6-B04
95 23 804	03A	071	2-C24
95 23 812	03A	069	2-C22
95 23 945	09	011	6-C12
95 23 960	09	011	6-C12
95 23 978	09	011	6-C12
95 23 986	09	011	6-C12
95 23 994	03A	085	2-D14
95 24 018	03A	049	2-C02
95 24 042	03A	087	2-D16
95 24 117	03A	109	2-E14
95 24 117	03A	117	2-E22
95 24 125	03A	117	2-E22
95 24 133	03A	117	2-E22
95 24 141	03A	109	2-E14
95 24 141	03A	117	2-E22
95 24 158	03A	117	2-E22
95 24 166	03A	117	2-E22
95 24 174	03A	117	2-E22
95 24 208	03A	005	2-A06
95 24 224	03A	063	2-C16
95 24 232	03A	063	2-C16
95 24 307	03A	087	2-D16
95 24 315	03A	087	2-D16
95 24 372	03A	087	2-D16
95 24 398	03A	087	2-D16
95 24 406	03A	087	2-D16
95 24 455	03A	045	2-B22
95 24 463	03A	045	2-B22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 24 513	03A	045	2-B22
95 24 521	03A	045	2-B22
95 24 570	03A	045	2-B22
95 24 596	03A	031	2-B08
95 24 638	03A	145	2-G02
95 24 646	03A	171	2-H04
95 24 653	03A	159	2-G16
95 24 679	03A	159	2-G16
95 24 711	03A	085	2-D14
95 24 745	08B	171	5-H04
95 24 778	03A	129	2-F10
95 24 778	03A	137	2-F18
95 24 786	03A	085	2-D14
95 24 786	03A	123	2-F04
95 24 786	03A	131	2-F12
95 24 802	03A	151	2-G08
95 24 836	03A	159	2-G16
95 24 836	03A	163	2-G20
95 24 844	03A	065	2-C18
95 24 851	03A	077	2-D06
95 24 935	03A	151	2-G08
95 24 992	03A	065	2-C18
95 25 007	03A	151	2-G08
95 25 015	03A	031	2-B08
95 25 080	03B	067	3-C20
95 25 080	03B	093	3-D22
95 25 106	03B	079	3-D08
95 25 106	03B	109	3-E14
95 25 114	03B	079	3-D08
95 25 122	03A	147	2-G04
95 25 221	03A	139	2-F20
95 25 254	03A	031	2-B08
95 25 254	03A	035	2-B12
95 25 262	03A	031	2-B08
95 25 262	03A	035	2-B12
95 25 312	03A	031	2-B08
95 25 320	03A	031	2-B08
95 25 445	03A	167	2-G24
95 25 452	03A	169	2-H02
95 25 460	03A	151	2-G08
95 25 486	03A	151	2-G08
95 25 494	03A	085	2-D14
95 25 502	03A	085	2-D14
95 25 536	03A	169	2-H02
95 25 544	03A	167	2-G24
95 25 569	03A	167	2-G24
95 25 585	03A	169	2-H02
95 25 643	03A	169	2-H02
95 25 700	03A	169	2-H02
95 25 742	03A	169	2-H02
95 25 809	03B	067	3-C20
95 25 809	03B	093	3-D22
95 25 817	03B	067	3-C20
95 25 817	03B	079	3-D08
95 25 817	03B	093	3-D22
95 25 817	03B	105	3-E10
95 25 833	03A	169	2-H02
95 25 841	03A	167	2-G24
95 25 858	03A	167	2-G24
95 25 908	03A	151	2-G08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 25 999	03A	169	2-H02
95 26 013	03A	145	2-G02
95 26 039	03A	069	2-C22
95 26 054	03A	069	2-C22
95 26 088	03A	145	2-G02
95 26 096	03A	087	2-D16
95 26 237	03A	057	2-C10
95 26 237	03A	059	2-C12
95 26 260	03A	035	2-B12
95 26 328	03A	151	2-G08
95 26 336	03A	151	2-G08
95 26 344	03A	031	2-B08
95 26 351	03A	031	2-B08
95 26 401	03B	067	3-C20
95 26 401	03B	093	3-D22
95 26 401	03B	105	3-E10
95 26 401	03B	145	3-G02
95 26 419	03A	085	2-D14
95 26 484	03A	035	2-B12
95 26 518	02	105	1-F10
95 26 526	02	107	1-F12
95 26 526	08C	029	6-B06
95 26 567	03A	045	2-B22
95 26 609	03A	071	2-C24
95 26 609	08C	031	6-B08
95 26 757	03A	073	2-D02
95 26 765	03A	159	2-G16
95 26 773	03A	147	2-G04
95 26 781	03A	065	2-C18
95 26 799	03A	151	2-G08
95 26 872	03A	127	2-F08
95 26 872	03A	135	2-F16
95 26 872	08A	131	4-K12
95 26 898	03A	127	2-F08
95 26 898	03A	135	2-F16
95 26 906	03A	081	2-D10
95 26 963	09	005	6-C06
95 27 037	03A	123	2-F04
95 27 052	03A	123	2-F04
95 27 078	03A	123	2-F04
95 27 094	03A	123	2-F04
95 27 110	03A	123	2-F04
95 27 151	03A	123	2-F04
95 27 193	03A	123	2-F04
95 27 235	03A	123	2-F04
95 27 250	03A	123	2-F04
95 27 292	03A	123	2-F04
95 27 318	03A	123	2-F04
95 27 334	03A	123	2-F04
95 27 359	03A	123	2-F04
95 27 375	03A	123	2-F04
95 27 417	03A	123	2-F04
95 27 433	03A	123	2-F04
95 27 490	03A	171	2-H04
95 27 631	03A	151	2-G08
95 27 698	08B	251	5-K12
95 27 706	08B	171	5-H04
95 27 706	08B	185	5-H18
95 27 706	08B	199	5-I08
95 27 706	08B	251	5-K12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 27 730	03A	171	2-H04
95 27 755	03B	107	3-E12
95 27 763	03B	107	3-E12
95 27 771	03B	107	3-E12
95 27 771	03B	149	3-G06
95 27 789	03A	151	2-G08
95 27 797	03A	151	2-G08
95 27 839	03A	123	2-F04
95 27 854	03A	123	2-F04
95 27 870	03A	123	2-F04
95 27 896	03A	123	2-F04
95 27 904	03A	071	2-C24
95 27 904	03A	175	2-H08
95 27 912	03A	129	2-F10
95 27 938	03A	123	2-F04
95 27 953	03A	123	2-F04
95 27 961	03A	085	2-D14
95 27 979	03A	085	2-D14
95 28 019	03A	139	2-F20
95 28 092	03A	127	2-F08
95 28 092	03A	135	2-F16
95 28 134	03A	137	2-F18
95 28 159	03A	087	2-D16
95 28 167	03A	087	2-D16
95 28 704	08B	185	5-H18
95 28 704	08B	199	5-I08
95 28 720	03A	041	2-B18
95 28 795	03A	065	2-C18
95 28 910	03A	059	2-C12
95 28 910	03A	061	2-C14
95 28 928	08C	031	6-B08
95 29 033	03A	009	2-A10
95 29 173	03A	087	2-D16
95 29 181	03A	087	2-D16
95 29 199	03A	087	2-D16
95 29 207	03A	087	2-D16
95 29 215	03A	087	2-D16
95 29 223	03A	087	2-D16
95 29 249	03A	085	2-D14
95 29 256	03A	085	2-D14
95 29 355	03A	091	2-D20
95 29 363	03A	077	2-D06
95 29 371	03A	079	2-D08
95 29 389	03A	079	2-D08
95 29 405	03A	041	2-B18
95 29 413	03A	055	2-C08
95 29 421	03A	055	2-C08
95 29 488	03A	057	2-C10
95 29 488	03A	061	2-C14
95 29 496	03B	083	3-D12
95 29 496	03B	109	3-E14
95 29 504	03A	059	2-C12
95 29 504	03A	061	2-C14
95 29 512	03B	105	3-E10
95 29 520	03A	143	2-F24
95 29 538	03B	079	3-D08
95 29 538	03B	105	3-E10
95 29 561	03A	059	2-C12
95 29 561	03A	061	2-C14
95 29 660	03A	141	2-F22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 29 702	03A	057	2-C10
95 29 702	03A	059	2-C12
95 29 702	03A	061	2-C14
95 29 777	03A	129	2-F10
95 29 785	03A	029	2-B06
95 29 785	03A	175	2-H08
95 29 793	03A	029	2-B06
95 29 793	03A	031	2-B08
95 29 793	03A	175	2-H08
95 29 827	03A	041	2-B18
95 29 835	03A	041	2-B18
95 29 843	03A	041	2-B18
95 29 868	03A	041	2-B18
95 29 876	03A	041	2-B18
95 29 884	03A	041	2-B18
95 29 900	03A	041	2-B18
95 29 975	03A	067	2-C20
95 29 975	03A	175	2-H08
95 29 983	03A	169	2-H02
95 29 991	03A	057	2-C10
95 29 991	03A	059	2-C12
95 29 991	03A	061	2-C14
95 31 641	08B	075	5-D04
95 31 658	08B	077	5-D06
95 31 674	08B	077	5-D06
95 31 690	08B	077	5-D06
95 32 896	08B	075	5-D04
95 32 904	08B	075	5-D04
95 32 938	08B	075	5-D04
95 32 946	08B	075	5-D04
95 32 979	08B	075	5-D04
95 32 987	08B	075	5-D04
95 33 019	08B	077	5-D06
95 33 027	08B	077	5-D06
95 34 322	08A	045	4-G22
95 34 322	08A	051	4-H04
95 34 355	08A	047	4-G24
95 34 355	08A	051	4-H04
95 40 477	08B	077	5-D06
95 40 493	08B	077	5-D06
95 40 501	08B	077	5-D06
95 40 519	08B	077	5-D06
95 40 527	08B	077	5-D06
95 41 319	08B	169	5-H02
95 42 309	08B	201	5-I10
95 42 317	08B	201	5-I10
95 44 818	08B	239	5-J24
95 44 818	08B	247	5-K08
95 44 834	08B	035	5-B12
95 44 859	08B	161	5-G18
95 44 867	08B	161	5-G18
95 44 875	08B	161	5-G18
95 44 883	08B	161	5-G18
95 44 917	08B	161	5-G18
95 44 925	08B	161	5-G18
95 45 013	08B	233	5-J18
95 45 021	08B	233	5-J18
95 45 039	08B	233	5-J18
95 45 047	08B	233	5-J18
95 45 054	08B	233	5-J18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 45 070	08B	233	5-J18
95 45 104	08B	195	5-I04
95 45 104	08B	203	5-I12
95 45 112	08B	039	5-B16
95 45 120	08B	035	5-B12
95 45 211	08B	039	5-B16
95 45 229	08B	017	5-A18
95 45 245	08B	017	5-A18
95 45 260	08B	017	5-A18
95 45 336	08B	031	5-B08
95 45 344	08B	031	5-B08
95 45 351	08B	221	5-J06
95 45 427	08B	221	5-J06
95 45 435	03A	051	2-C04
95 45 443	08B	219	5-J04
95 45 450	08B	219	5-J04
95 45 468	08B	137	5-F18
95 45 476	08B	137	5-F18
95 45 484	08B	137	5-F18
95 45 534	08B	009	5-A10
95 45 872	08B	137	5-F18
95 45 898	08B	095	5-D24
95 45 898	08B	107	5-E12
95 45 898	08B	119	5-E24
95 45 898	08B	129	5-F10
95 45 906	08B	095	5-D24
95 45 906	08B	107	5-E12
95 45 906	08B	119	5-E24
95 45 906	08B	129	5-F10
95 46 664	08B	019	5-A20
95 46 730	08B	019	5-A20
95 46 755	08B	019	5-A20
95 46 763	08B	019	5-A20
95 46 789	08B	019	5-A20
95 46 870	08B	237	5-J22
95 46 888	08B	237	5-J22
95 46 912	08B	237	5-J22
95 46 920	08B	237	5-J22
95 46 938	08B	237	5-J22
95 46 946	08B	189	5-H22
95 46 946	08B	245	5-K06
95 46 946	08B	247	5-K08
95 46 946	08B	249	5-K10
95 46 946	08B	253	5-K14
95 46 961	09	015	6-C16
95 46 995	08B	181	5-H14
95 47 001	08B	187	5-H20
95 47 043	08B	183	5-H16
95 47 050	08B	183	5-H16
95 47 068	08B	181	5-H14
95 47 076	08B	187	5-H20
95 47 332	08B	197	5-I06
95 47 332	08B	245	5-K06
95 47 340	08B	039	5-B16
95 47 381	08B	201	5-I10
95 47 589	08B	011	5-A12
95 47 597	08B	013	5-A14
95 47 605	08B	011	5-A12
95 47 613	08B	011	5-A12
95 47 621	08B	011	5-A12

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E15 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 47 639	08B	011	5-A12
95 47 688	08B	193	5-I02
95 47 638	08B	203	5-I12
95 47 688	08B	247	5-K08
95 47 696	08B	239	5-J24
95 47 837	08B	183	5-H16
95 47 852	08B	189	5-H22
95 47 860	08B	189	5-H22
95 47 894	08B	181	5-H14
95 47 902	08B	181	5-H14
95 47 944	08B	183	5-H16
95 47 951	08B	183	5-H16
95 47 969	08B	181	5-H14
95 47 977	08B	183	5-H16
95 47 985	08B	183	5-H16
95 47 993	08B	163	5-G20
95 48 058	08B	239	5-J24
95 48 108	08B	219	5-J04
95 48 157	08B	017	5-A18
95 48 165	08B	017	5-A18
95 48 173	08B	017	5-A18
95 48 249	08B	071	5-C24
95 48 256	08B	073	5-D02
95 48 264	08B	073	5-D02
95 48 272	08B	075	5-D04
95 48 355	08B	221	5-J06
95 48 363	09	005	6-C06
95 50 476	03A	085	2-D14
95 51 953	03A	049	2-C02
95 52 100	03A	093	2-D22
95 52 100	03B	031	3-B08
95 52 100	03B	057	3-C10
95 52 100	03B	079	3-D08
95 52 100	03B	097	3-E02
95 52 100	03B	105	3-E10
95 52 100	03B	123	3-F04
95 52 100	03B	131	3-F12
95 52 100	03B	139	3-F20
95 52 100	03B	149	3-G06
95 52 126	03B	105	3-E10
95 52 126	03B	149	3-G06
95 52 159	03B	031	3-B08
95 52 159	03B	055	3-C08
95 52 159	03B	079	3-D08
95 52 159	03B	105	3-E10
95 52 167	03B	031	3-B08
95 52 167	03B	055	3-C08
95 52 167	03B	079	3-D08
95 52 167	03B	105	3-E10
95 52 175	03B	031	3-B08
95 52 175	03B	055	3-C08
95 52 175	03B	079	3-D08
95 52 175	03B	105	3-E10
95 52 175	03B	123	3-F04
95 52 175	03B	131	3-F12
95 52 175	03B	139	3-F20
95 52 175	03B	149	3-G06
95 52 183	03B	021	3-A22
95 52 183	03B	041	3-B18
95 52 183	03B	063	3-C16
95 52 183	03B	089	3-D18
95 52 191	03B	021	3-A22
95 52 191	03B	041	3-B18
95 52 191	03B	063	3-C16
95 52 191	03B	089	3-D18
95 52 191	03B	123	3-F04
95 52 191	03B	131	3-F12
95 52 191	03B	139	3-F20
95 52 191	03B	149	3-G06
95 53 512	03A	049	2-C02
95 53 546	03A	159	2-G16
95 53 546	03A	163	2-G20
95 55 194	03A	073	2-D02
95 55 913	03A	139	2-F20
95 56 309	03A	063	2-C16
95 56 390	03A	159	2-G16
95 56 390	03A	163	2-G20
95 56 705	03A	031	2-B08
95 56 986	03A	039	2-B16
95 56 994	03A	037	2-B14
95 56 994	03A	039	2-B16
95 58 073	03A	155	2-G12
95 58 073	03A	157	2-G14
95 58 149	03A	063	2-C16
95 58 875	03A	077	2-D06
95 59 469	03B	129	3-F10
95 59 469	03B	137	3-F18
95 59 469	03B	147	3-G04
95 59 998	03A	075	2-D04
95 60 004	03A	075	2-D04
95 60 012	03A	075	2-D04
95 60 905	03A	073	2-D02
95 63 099	03A	175	2-H08
95 63 263	03A	061	2-C14
95 63 313	03A	155	2-G12
95 63 313	03A	157	2-G14
95 63 313	03A	159	2-G16
95 63 313	03A	163	2-G20
95 63 321	03A	163	2-G20
95 63 339	03A	163	2-G20
95 63 511	09	011	6-C12
95 63 560	03A	147	2-G04
95 63 677	03A	051	2-C04
95 63 685	03A	051	2-C04
95 64 071	03B	083	3-D12
95 64 089	03B	083	3-D12
95 64 089	03B	109	3-E14
95 64 139	03A	159	2-G16
95 64 139	03A	163	2-G20
95 64 147	03A	159	2-G16
95 64 147	03A	163	2-G20
95 64 154	03A	159	2-G16
95 64 154	03A	163	2-G20
95 64 162	03A	073	2-D02
95 64 204	03A	143	2-F24
95 64 238	03A	029	2-B06
95 64 253	03A	051	2-C04
95 64 261	03A	051	2-C04
95 64 345	03A	175	2-H08
95 64 352	03A	031	2-B08
95 64 402	03A	125	2-F06
95 64 410	03A	125	2-F06
95 64 428	03A	125	2-F06
95 64 436	03A	125	2-F06
95 64 444	03A	125	2-F06
95 64 477	03A	085	2-D14
95 64 519	03A	087	2-D16
95 64 717	03A	159	2-G16
95 64 741	03A	087	2-D16
95 64 857	03A	091	2-D20
95 64 865	03A	073	2-D02
95 64 881	03A	067	2-C20
95 64 980	08B	201	5-I10
95 65 003	08B	199	5-I08
95 65 003	08B	247	5-K08
95 65 011	08B	199	5-I08
95 65 011	08B	247	5-K08
95 65 136	03A	085	2-D14
95 65 144	03A	131	2-F12
95 65 169	03A	167	2-G24
95 65 177	03A	167	2-G24
95 65 185	03A	167	2-G24
95 65 193	03A	167	2-G24
95 65 284	03A	169	2-H02
95 65 292	03A	169	2-H02
95 65 300	03A	169	2-H02
95 65 318	03A	169	2-H02
95 65 409	03A	169	2-H02
95 65 417	03A	145	2-G02
95 65 607	03A	011	2-A12
95 65 839	03A	093	2-D22
95 65 912	03A	061	2-C14
95 65 920	09	005	6-C06
95 65 938	03A	029	2-B06
95 65 946	03A	029	2-B06
95 65 953	03A	029	2-B06
95 65 961	03A	029	2-B06
95 65 995	03A	093	2-D22
95 66 100	03A	093	2-D22
95 66 159	03A	093	2-D22
95 66 266	03B	109	3-E14
95 66 282	03B	107	3-E12
95 66 316	09	005	6-C06
95 66 332	03A	065	2-C18
95 66 381	03A	075	2-D04
95 66 399	03A	073	2-D02
95 66 399	03A	075	2-D04
95 66 407	03A	073	2-D02
95 66 407	03A	075	2-D04
95 66 415	03A	073	2-D02
95 66 423	03A	073	2-D02
95 66 423	03A	075	2-D04
95 66 449	03A	075	2-D04
95 66 456	03A	075	2-D04
95 66 464	03A	075	2-D04
95 66 472	03A	075	2-D04
95 66 480	03A	073	2-D02
95 66 548	03A	073	2-D02
95 66 563	03A	085	2-D14
95 66 647	03A	159	2-G16
95 66 647	03A	163	2-G20
95 66 662	03A	031	2-B08
95 66 662	03A	175	2-H08
95 66 696	03A	055	2-C08
95 66 944	03A	123	2-F04
95 66 969	03A	123	2-F04
95 66 993	08B	201	5-I10
95 67 199	03A	087	2-D16
95 67 207	03A	087	2-D16
95 67 223	03A	049	2-C02
95 67 272	03A	137	2-F18
95 67 330	03A	093	2-D22
95 67 405	03A	087	2-D16
95 67 561	03A	129	2-F10
95 67 561	03A	137	2-F18
95 67 579	09	015	6-C16
95 67 702	03A	151	2-G08
95 67 801	03A	169	2-H02
95 67 850	03A	169	2-H02
95 67 959	03A	127	2-F08
95 67 959	03A	135	2-F16
95 67 959	08A	131	4-K12
95 67 967	02	107	1-F12
95 68 049	09	015	6-C16
95 68 122	03A	069	2-C22
95 68 775	03B	071	3-C24
95 68 775	03B	089	3-D18
95 68 775	03B	105	3-E10
95 68 866	03A	087	2-D16
95 68 973	03A	063	2-C16
95 68 981	03A	063	2-C16
95 68 999	03A	063	2-C16
95 69 005	03A	063	2-C16
95 69 013	03A	065	2-C18
95 69 021	03A	073	2-D02
95 69 054	02	107	1-F12
95 69 070	03A	137	2-F18
95 69 088	03A	137	2-F18
95 69 138	03A	131	2-F12
95 69 153	03A	131	2-F12
95 69 195	03A	131	2-F12
95 69 211	03A	131	2-F12
95 69 237	03A	131	2-F12
95 69 252	03A	131	2-F12
95 69 278	03A	131	2-F12
95 69 310	03A	131	2-F12
95 69 351	03A	131	2-F12
95 69 393	03A	131	2-F12
95 69 419	03A	131	2-F12
95 69 435	03A	131	2-F12
95 69 476	03A	131	2-F12
95 69 492	03A	131	2-F12
95 69 518	03A	131	2-F12
95 69 534	03A	131	2-F12
95 69 559	03A	131	2-F12

6-E16 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 69 575	03A	131	2-F12
95 69 591	03A	131	2-F12
95 69 633	03A	131	2-F12
95 69 658	03A	131	2-F12
95 69 674	03A	131	2-F12
95 69 682	03A	133	2-F14
95 69 690	03A	133	2-F14
95 69 708	03A	133	2-F14
95 69 716	03A	133	2-F14
95 69 724	03A	137	2-F18
95 69 740	03A	137	2-F18
95 69 781	03A	077	2-D06
95 69 948	03A	053	2-C06
95 69 955	08B	171	5-H04
95 69 955	08B	185	5-H18
95 69 955	08B	199	5-I08
95 69 955	08B	251	5-K12
95 69 963	03A	029	2-B06
95 69 963	03A	031	2-B08
95 69 963	03A	175	2-H08
95 69 997	03A	093	2-D22
95 69 997	03B	085	3-D14
95 70 268	08B	011	5-A12
95 70 607	08B	021	5-A22
95 70 615	08B	019	5-A20
95 70 623	08B	019	5-A20
95 70 649	08B	019	5-A20
95 70 656	08B	021	5-A22
95 70 664	08B	019	5-A20
95 70 672	08B	019	5-A20
95 70 698	08B	021	5-A22
95 71 019	08B	033	5-B10
95 71 027	08B	021	5-A22
95 71 027	08B	251	5-K12
95 71 035	08B	021	5-A22
95 71 035	08B	251	5-K12
95 71 043	08B	219	5-J04
95 71 084	08B	021	5-A22
95 71 084	08B	251	5-K12
95 71 118	08B	021	5-A22
95 71 159	03A	089	2-D18
95 71 308	08B	165	5-G22
95 71 316	08B	165	5-G22
95 71 399	08B	167	5-G24
95 71 407	08B	167	5-G24
95 71 530	08B	227	5-J12
95 71 548	08B	227	5-J12
95 71 555	08B	227	5-J12
95 71 563	08B	227	5-J12
95 71 589	03A	081	2-D10
95 71 621	03A	089	2-D18
95 71 639	08B	137	5-F18
95 71 647	08B	137	5-F18
95 71 654	08B	137	5-F18
95 71 696	08B	193	5-I02
95 71 696	08B	203	5-I12
95 71 696	08B	211	5-I20
95 71 696	08B	217	5-J02
95 72 025	08B	019	5-A20
95 72 033	08B	021	5-A22
95 72 041	08B	019	5-A20
95 72 058	08B	019	5-A20
95 72 066	08B	019	5-A20
95 72 074	08B	019	5-A20
95 72 082	08B	019	5-A20
95 72 090	08B	021	5-A22
95 72 108	08B	019	5-A20
95 72 116	08B	019	5-A20
95 72 124	08B	019	5-A20
95 72 132	08B	021	5-A22
95 72 199	08B	019	5-A20
95 72 256	08B	019	5-A20
95 72 355	08B	115	5-E20
95 72 363	08B	115	5-E20
95 72 363	08B	127	5-F08
95 72 371	08B	121	5-F02
95 72 389	08B	121	5-F02
95 72 389	08B	131	5-F12
95 72 397	08B	225	5-J10
95 72 405	08B	225	5-J10
95 72 439	08B	227	5-J12
95 72 447	08B	213	5-I22
95 72 454	08B	213	5-I22
95 72 470	08B	213	5-I22
95 72 728	08B	031	5-B08
95 72 744	08B	037	5-B14
95 72 835	08B	215	5-I24
95 72 892	08B	209	5-I18
95 72 900	08B	209	5-I18
95 72 918	08B	209	5-I18
95 72 926	08B	209	5-I18
95 72 959	08B	067	5-C20
95 72 967	08B	067	5-C20
95 72 975	08B	067	5-C20
95 72 975	08B	079	5-D08
95 73 205	08B	067	5-C20
95 73 205	08B	079	5-D08
95 73 296	08B	067	5-C20
95 73 296	08B	079	5-D08
95 73 304	08B	067	5-C20
95 73 304	08B	079	5-D08
95 73 312	08B	067	5-C20
95 73 312	08B	079	5-D08
95 73 320	08B	067	5-C20
95 73 320	08B	079	5-D08
95 73 338	08B	067	5-C20
95 73 338	08B	079	5-D08
95 73 718	08B	183	5-H16
95 73 734	08B	183	5-H16
95 73 759	08B	237	5-J22
95 73 809	08B	215	5-I24
95 73 817	08B	215	5-I24
95 73 866	08B	027	5-B04
95 73 882	08B	025	5-B02
95 73 890	08B	025	5-B02
95 73 940	08B	027	5-B04
95 73 965	08B	025	5-B02
95 73 973	08B	027	5-B04
95 74 062	08B	031	5-B08
95 74 070	08B	031	5-B08
95 74 195	08B	027	5-B04
95 74 278	08B	211	5-I20
95 74 302	08A	065	4-H18
95 74 435	08B	031	5-B08
95 74 443	08B	031	5-B08
95 74 468	08B	219	5-J04
95 74 724	08B	017	5-A18
95 75 127	08B	059	5-C12
95 75 135	08B	061	5-C14
95 75 135	08B	071	5-C24
95 75 143	08B	059	5-C12
95 75 150	08B	063	5-C16
95 75 150	08B	073	5-D02
95 75 168	08B	061	5-C14
95 75 168	08B	071	5-C24
95 75 176	08B	059	5-C12
95 75 184	08B	061	5-C14
95 75 184	08B	071	5-C24
95 75 192	08B	059	5-C12
95 75 200	08B	063	5-C16
95 75 200	08B	073	5-D02
95 75 218	08B	061	5-C14
95 75 218	08B	071	5-C24
95 75 234	08A	021	4-F22
95 75 341	08B	157	5-G14
95 75 358	08B	157	5-G14
95 75 366	08B	157	5-G14
95 75 374	08B	157	5-G14
95 75 382	08B	157	5-G14
95 75 622	08B	037	5-B14
95 75 630	08B	219	5-J04
95 75 903	03A	053	2-C06
95 75 903	03A	175	2-H08
95 75 911	08B	037	5-B14
95 75 929	08B	037	5-B14
95 75 937	08B	037	5-B14
95 75 945	08B	211	5-I20
95 76 000	08B	037	5-B14
95 76 075	08B	067	5-C20
95 76 083	08B	067	5-C20
95 76 083	08B	079	5-D08
95 76 091	08B	069	5-C22
95 76 091	08B	079	5-D08
95 76 109	08B	067	5-C20
95 76 133	08B	067	5-C20
95 76 141	08B	067	5-C20
95 76 141	08B	079	5-D08
95 76 158	08B	069	5-C22
95 76 158	08B	079	5-D08
95 76 166	08B	067	5-C20
95 76 505	08B	221	5-J06
95 76 513	08B	221	5-J06
95 76 562	08B	231	5-J16
95 76 570	08B	231	5-J16
95 76 588	08B	231	5-J16
95 76 596	08B	231	5-J16
95 76 604	08B	231	5-J16
95 76 844	08B	035	5-B12
95 77 032	08B	217	5-J02
95 77 677	08B	037	5-B14
95 78 238	08B	235	5-J20
95 78 246	08B	233	5-J18
95 78 386	08A	055	4-H08
95 78 386	08A	059	4-H12
95 78 428	08B	229	5-J14
95 78 436	08B	229	5-J14
95 78 444	08B	229	5-J14
95 78 501	08B	067	5-C20
95 78 519	08B	069	5-C22
95 78 519	08B	079	5-D08
95 78 527	08B	067	5-C20
95 78 535	08B	067	5-C20
95 78 543	08B	069	5-C22
95 78 543	08B	079	5-D08
95 78 550	08B	067	5-C20
95 78 618	03A	053	2-C06
95 78 634	08B	027	5-B04
95 78 642	08B	027	5-B04
95 78 675	08B	027	5-B04
95 78 683	08B	027	5-B04
95 78 709	08B	059	5-C12
95 78 709	08B	067	5-C20
95 78 717	08B	061	5-C14
95 78 717	08B	067	5-C20
95 78 717	08B	071	5-C24
95 78 717	08B	079	5-D08
95 78 725	08B	059	5-C12
95 78 725	08B	067	5-C20
95 78 733	08B	063	5-C16
95 78 733	08B	073	5-D02
95 78 733	08B	079	5-D08
95 78 741	08B	061	5-C14
95 78 741	08B	069	5-C22
95 78 741	08B	071	5-C24
95 78 741	08B	073	5-D02
95 78 741	08B	079	5-D08
95 78 790	08A	053	4-H06
95 78 808	08A	053	4-H06
95 78 816	08A	059	4-H12
95 78 824	08A	059	4-H12
95 78 964	08B	037	5-B14
95 78 964	08B	039	5-B16
95 79 194	08B	013	5-A14
95 79 202	08B	013	5-A14
95 79 244	08B	209	5-I18
95 79 244	08B	215	5-I24
95 79 251	08B	039	5-B16
95 79 293	08B	187	5-H20
95 79 293	08B	201	5-I10
95 79 509	08B	059	5-C12
95 79 517	08B	061	5-C14
95 79 517	08B	071	5-C24
95 79 525	08B	059	5-C12
95 79 533	08B	061	5-C14
95 79 533	08B	071	5-C24
95 79 541	08B	063	5-C16
95 79 541	08B	073	5-D02
95 79 558	08B	067	5-C20
95 79 566	08B	067	5-C20
95 79 566	08B	079	5-D08

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E17 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 79 574	08B	069	5-C22
95 79 574	08B	079	5-D08
95 79 582	08B	067	5-C20
95 79 616	08B	059	5-C12
95 79 616	08B	067	5-C20
95 79 624	08B	061	5-C14
95 79 624	08B	067	5-C20
95 79 624	08B	071	5-C24
95 79 624	08B	079	5-D08
95 79 632	08B	059	5-C12
95 79 632	08B	067	5-C20
95 79 640	08B	061	5-C14
95 79 640	08B	069	5-C22
95 79 640	08B	071	5-C24
95 79 640	08B	079	5-D08
95 79 657	08B	063	5-C16
95 79 657	08B	073	5-D02
95 79 657	08B	079	5-D08
95 79 715	08B	201	5-I10
95 79 764	08B	203	5-I12
95 79 772	08B	203	5-I12
95 79 780	08B	203	5-I12
95 79 798	08B	203	5-I12
95 80 275	08B	235	5-J20
95 80 309	08B	197	5-I06
95 80 317	08B	197	5-I06
95 80 358	08B	215	5-I24
95 80 366	08A	021	4-F22
95 80 408	08B	193	5-I02
95 80 432	08B	191	5-H24
95 80 440	08B	193	5-I02
95 80 507	08B	191	5-H24
95 80 515	08B	165	5-G22
95 80 531	08B	165	5-G22
95 80 655	08B	035	5-B12
95 80 663	08B	037	5-B14
95 80 671	08B	037	5-B14
95 80 689	08B	035	5-B12
95 80 697	08B	035	5-B12
95 80 705	08B	037	5-B14
95 80 721	08B	169	5-H02
95 80 820	08B	161	5-G18
95 80 838	08B	161	5-G18
95 80 846	08B	161	5-G18
95 80 853	08B	163	5-G20
95 80 861	08B	163	5-G20
95 80 911	08B	161	5-G18
95 80 929	08B	161	5-G18
95 80 960	08B	223	5-J08
95 80 978	08B	223	5-J08
95 80 986	08B	223	5-J08
95 80 994	08B	223	5-J08
95 81 000	08B	227	5-J12
95 81 174	08B	225	5-J10
95 81 182	08B	225	5-J10
95 81 265	08B	231	5-J16
95 81 273	08B	231	5-J16
95 81 281	08B	231	5-J16
95 81 331	08B	231	5-J16
95 81 372	08B	233	5-J18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 81 422	08B	233	5-J18
95 81 430	08B	233	5-J18
95 81 448	08B	233	5-J18
95 81 539	08B	009	5-A10
95 81 745	08B	027	5-B04
95 81 893	08B	029	5-B06
95 81 901	08B	027	5-B04
95 81 919	08B	025	5-B02
95 81 943	08B	025	5-B02
95 82 024	08B	127	5-F08
95 82 032	08B	127	5-F08
95 82 040	08B	127	5-F08
95 82 057	08B	129	5-F10
95 82 065	08B	127	5-F08
95 82 081	08B	127	5-F08
95 82 099	08B	127	5-F08
95 82 149	08B	127	5-F08
95 82 156	08B	129	5-F10
95 82 164	08B	127	5-F08
95 82 180	08B	127	5-F08
95 82 297	08B	129	5-F10
95 82 297	08B	133	5-F14
95 82 305	08B	129	5-F10
95 82 305	08B	133	5-F14
95 82 313	08B	129	5-F10
95 82 313	08B	133	5-F14
95 82 321	08B	133	5-F14
95 82 339	08B	133	5-F14
95 82 347	08B	133	5-F14
95 82 354	08B	133	5-F14
95 82 362	08B	133	5-F14
95 82 388	08B	133	5-F14
95 82 396	08B	133	5-F14
95 82 446	08B	133	5-F14
95 82 453	08B	133	5-F14
95 82 461	08B	133	5-F14
95 82 487	08B	133	5-F14
95 82 552	08B	133	5-F14
95 82 578	08B	133	5-F14
95 82 636	08B	007	5-A08
95 82 644	08B	009	5-A10
95 82 651	08B	015	5-A16
95 82 669	08B	011	5-A12
95 82 677	08B	005	5-A06
95 82 800	08B	007	5-A08
95 82 818	08B	007	5-A08
95 82 834	08B	005	5-A06
95 82 925	08B	239	5-J24
95 82 933	08B	239	5-J24
95 83 154	08B	035	5-B12
95 83 162	08B	235	5-J20
95 83 170	08B	235	5-J20
95 83 188	08B	235	5-J20
95 83 196	08B	235	5-J20
95 83 204	08B	235	5-J20
95 83 402	08B	217	5-J02
95 83 576	08B	235	5-J20
95 83 600	08B	237	5-J22
95 83 618	08B	237	5-J22
95 83 758	08B	187	5-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 83 766	08B	187	5-H20
95 83 790	08B	221	5-J06
95 83 790	08B	235	5-J20
95 83 899	08B	243	5-K04
95 83 907	08B	243	5-K04
95 83 964	08B	165	5-G22
95 83 980	08B	165	5-G22
95 84 004	08B	165	5-G22
95 84 020	08B	167	5-G24
95 84 046	08B	167	5-G24
95 84 087	08B	169	5-H02
95 84 103	08B	169	5-H02
95 84 624	08B	187	5-H20
95 84 632	08B	187	5-H20
95 84 640	08B	205	5-I14
95 84 665	08B	207	5-I16
95 84 715	08B	171	5-H04
95 84 715	08B	185	5-H18
95 84 715	08B	197	5-I06
95 84 715	08B	199	5-I08
95 84 715	08B	245	5-K06
95 84 723	08B	185	5-H18
95 84 723	08B	197	5-I06
95 84 723	08B	245	5-K06
95 84 749	08B	205	5-I14
95 84 749	08B	213	5-I22
95 84 764	08B	209	5-I18
95 84 764	08B	215	5-I24
95 84 772	08B	209	5-I18
95 84 772	08B	215	5-I24
95 84 814	08B	039	5-B16
95 84 947	08B	031	5-B08
95 84 954	08B	031	5-B08
95 84 962	08B	035	5-B12
95 85 142	08B	183	5-H16
95 85 159	08B	183	5-H16
95 85 167	08B	181	5-H14
95 85 175	08B	181	5-H14
95 85 183	08B	181	5-H14
95 85 191	08B	181	5-H14
95 85 217	08B	183	5-H16
95 85 225	08B	181	5-H14
95 85 233	08B	183	5-H16
95 85 423	08B	203	5-I12
95 85 423	08B	247	5-K08
95 85 431	08B	203	5-I12
95 85 431	08B	247	5-K08
95 85 514	08B	023	5-A24
95 85 522	08B	021	5-A22
95 85 613	08B	187	5-H20
95 85 621	08B	187	5-H20
95 85 704	08B	223	5-J08
95 85 712	08B	223	5-J08
95 85 720	08B	223	5-J08
95 85 738	08B	225	5-J10
95 85 746	08B	225	5-J10
95 85 829	08B	021	5-A22
95 85 845	08B	081	5-D10
95 85 951	08B	081	5-D10
95 85 969	08B	075	5-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 85 969	08B	081	5-D10
95 85 985	08B	021	5-A22
95 86 066	08B	197	5-I06
95 86 074	08B	197	5-I06
95 86 108	08B	199	5-I08
95 86 108	08B	247	5-K08
95 86 124	08B	035	5-B12
95 86 132	08B	203	5-I12
95 86 157	08B	203	5-I12
95 86 165	08B	203	5-I12
95 86 173	08B	203	5-I12
95 86 181	08B	203	5-I12
95 86 207	08B	203	5-I12
95 86 249	08B	189	5-H22
95 86 264	08B	035	5-B12
95 86 827	08B	239	5-J24
95 86 850	08B	033	5-B10
95 86 900	06	011	4-C12
95 86 918	06	011	4-C12
95 86 967	08B	187	5-H20
95 86 975	08B	187	5-H20
95 86 983	08B	187	5-H20
95 87 023	08B	015	5-A16
95 87 106	08B	075	5-D04
95 87 122	08B	071	5-C24
95 87 130	08B	075	5-D04
95 87 148	08B	073	5-D02
95 87 155	08B	073	5-D02
95 87 163	08B	075	5-D04
95 87 171	06	011	4-C12
95 87 346	08B	075	5-D04
95 87 361	08B	071	5-C24
95 87 379	08B	075	5-D04
95 87 387	08B	073	5-D02
95 87 395	08B	073	5-D02
95 87 403	08B	075	5-D04
95 87 411	08B	075	5-D04
95 87 437	08B	071	5-C24
95 87 445	08B	075	5-D04
95 87 452	08B	073	5-D02
95 87 460	08B	073	5-D02
95 87 478	08B	075	5-D04
95 87 486	08B	075	5-D04
95 87 502	08B	071	5-C24
95 87 510	08B	075	5-D04
95 87 528	08B	073	5-D02
95 87 536	08B	073	5-D02
95 87 544	08B	075	5-D04
95 87 569	08B	071	5-C24
95 87 577	08B	075	5-D04
95 87 585	08B	073	5-D02
95 87 593	08B	073	5-D02
95 87 601	08B	075	5-D04
95 87 627	08B	071	5-C24
95 87 635	08B	075	5-D04
95 87 643	08B	073	5-D02
95 87 650	08B	073	5-D02
95 87 700	08B	223	5-J08
95 87 775	08B	161	5-G18
95 87 783	08B	161	5-G18

6-E18 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 87 809	08B	161	5-G18
95 87 817	08B	161	5-G18
95 87 825	08B	161	5-G18
95 87 833	08B	161	5-G18
95 87 841	08B	161	5-G18
95 87 874	08B	161	5-G18
95 87 882	08B	161	5-G18
95 87 890	08B	161	5-G18
95 87 908	08B	161	5-G18
95 87 916	08B	161	5-G18
95 87 924	08B	161	5-G18
95 87 932	08B	161	5-G18
95 87 940	08B	161	5-G18
95 88 534	08B	185	5-H18
95 88 534	08B	249	5-K10
95 88 542	08B	185	5-H18
95 88 542	08B	199	5-I08
95 88 542	08B	247	5-K08
95 88 559	08B	185	5-H18
95 88 559	08B	247	5-K08
95 88 583	08B	161	5-G18
95 88 591	08B	161	5-G18
95 88 609	08B	161	5-G18
95 88 799	08B	071	5-C24
95 88 807	08B	075	5-D04
95 88 815	08B	073	5-D02
95 88 823	08B	073	5-D02
95 88 849	08B	071	5-C24
95 88 856	08B	075	5-D04
95 88 864	08B	073	5-D02
95 88 872	08B	073	5-D02
95 89 045	08B	175	5-H08
95 89 045	08B	189	5-H22
95 89 045	08B	247	5-K08
95 89 045	08B	249	5-K10
95 89 045	08B	253	5-K14
95 89 193	08B	081	5-D10
95 89 201	08B	081	5-D10
95 89 631	08B	137	5-F18
95 89 649	08B	037	5-B14
95 89 664	08B	081	5-D10
95 89 672	08B	081	5-D10
95 89 680	08B	081	5-D10
95 90 043	08B	081	5-D10
95 90 050	08B	081	5-D10
95 90 068	08B	081	5-D10
95 90 076	08B	081	5-D10
95 91 108	08A	087	4-I16
95 91 280	08B	035	5-B12
95 91 314	08B	229	5-J14
95 91 405	08B	229	5-J14
95 91 421	08B	229	5-J14
95 91 462	08B	075	5-D04
95 91 462	08B	081	5-D10
95 91 603	08B	235	5-J20
95 91 611	08B	235	5-J20
95 91 629	08B	235	5-J20
95 91 637	08B	235	5-J20
95 91 645	08B	235	5-J20
95 91 777	08B	075	5-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 91 785	08B	075	5-D04
95 91 793	08B	213	5-I22
95 91 850	08B	167	5-G24
95 91 892	08B	235	5-J20
95 92 098	03A	051	2-C04
95 92 155	08B	201	5-I10
95 92 197	08B	241	5-K02
95 92 270	08B	071	5-C24
95 92 288	08B	075	5-D04
95 92 296	08B	073	5-D02
95 92 304	08B	073	5-D02
95 92 361	08B	165	5-G22
95 92 395	08B	197	5-I06
95 92 403	08B	197	5-I06
95 92 411	08B	197	5-I06
95 92 429	08B	197	5-I06
95 92 445	08B	197	5-I06
95 92 452	08B	197	5-I06
95 92 460	08B	197	5-I06
95 92 478	08B	197	5-I06
95 92 494	08B	197	5-I06
95 92 502	08B	197	5-I06
95 92 510	08B	197	5-I06
95 92 528	08B	197	5-I06
95 92 544	08B	197	5-I06
95 92 551	08B	197	5-I06
95 92 569	08B	197	5-I06
95 92 577	08B	197	5-I06
95 92 692	08B	199	5-I08
95 92 700	08B	199	5-I06
95 92 718	08B	199	5-I08
95 92 726	08B	199	5-I08
95 92 791	08B	071	5-C24
95 92 809	08B	075	5-D04
95 92 817	08B	073	5-D02
95 92 825	08B	073	5-D02
95 92 841	08B	071	5-C24
95 92 858	08B	075	5-D04
95 92 866	08B	073	5-D02
95 92 874	08B	073	5-D02
95 92 908	08B	029	5-B06
95 92 916	08B	029	5-B06
95 92 973	08B	007	5-A08
95 92 999	08B	007	5-A08
95 93 005	08B	007	5-A08
95 93 021	08B	007	5-A08
95 93 070	08B	217	5-J02
95 93 088	08B	217	5-J02
95 93 161	03A	093	2-D22
95 93 245	08B	185	5-H18
95 93 245	08B	197	5-I06
95 93 245	08B	245	5-K06
95 93 294	08B	165	5-G22
95 93 534	08B	221	5-J06
95 93 542	08B	221	5-J06
95 93 591	08B	167	5-G24
95 93 625	08B	167	5-G24
95 93 633	08B	167	5-G24
95 93 666	08B	167	5-G24
95 93 674	08B	167	5-G24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 93 708	08B	167	5-G24
95 93 716	08B	167	5-G24
95 93 740	08B	167	5-G24
95 93 757	08B	167	5-G24
95 93 781	08B	167	5-G24
95 93 799	08B	167	5-G24
95 93 948	08B	211	5-I20
95 93 948	08B	215	5-I24
95 93 948	08B	251	5-K12
95 94 243	08B	059	5-C12
95 94 243	08B	067	5-C20
95 94 250	08B	061	5-C14
95 94 250	08B	067	5-C20
95 94 250	08B	071	5-C24
95 94 250	08B	079	5-D08
95 94 268	08B	059	5-C12
95 94 268	08B	067	5-C20
95 94 276	08B	061	5-C14
95 94 276	08B	069	5-C22
95 94 276	08B	071	5-C24
95 94 276	08B	079	5-D08
95 94 284	08B	063	5-C16
95 94 284	08B	073	5-D02
95 94 284	08B	079	5-D08
95 94 292	08B	075	5-D04
95 94 292	08B	081	5-D10
95 94 508	08B	021	5-A22
95 94 607	08B	071	5-C24
95 94 615	08B	073	5-D02
95 94 623	08B	073	5-D02
95 94 631	08B	075	5-D04
95 94 722	08B	071	5-C24
95 94 730	08B	073	5-D02
95 94 748	08B	073	5-D02
95 94 755	08B	075	5-D04
95 94 938	08B	037	5-B14
95 94 946	08B	067	5-C20
95 94 953	08B	067	5-C20
95 94 953	08B	079	5-D08
95 94 961	08B	069	5-C22
95 94 961	08B	079	5-D08
95 94 979	08B	067	5-C20
96 17 325	08B	173	5-H06
96 17 325	08B	187	5-H20
96 17 325	08B	201	5-I10
96 17 333	08B	173	5-H06
96 17 333	08B	187	5-H20
96 17 333	08B	201	5-I10
96 17 846	08B	243	5-K04
96 17 853	08B	243	5-K04
96 18 034	08B	063	5-C16
96 18 042	08B	063	5-C16
96 18 232	08B	199	5-I08
96 18 752	08B	185	5-H18
96 18 752	08B	253	5-K14
96 19 404	09	015	6-C16
96 20 105	08C	011	6-A12
96 20 170	08C	011	6-A12
96 20 238	08C	007	6-A08
96 20 238	08C	009	6-A10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 20 733	08C	021	6-A22
96 20 741	08C	021	6-A22
96 21 897	08C	005	6-A06
96 22 119	08C	011	6-A12
96 22 325	08C	011	6-A12
96 22 390	08C	005	6-A06
96 22 432	08C	007	6-A08
96 22 432	08C	009	6-A10
96 22 457	08C	007	6-A08
96 22 572	08C	021	6-A22
96 22 606	08C	007	6-A08
96 22 606	08C	009	6-A10
96 22 614	08C	007	6-A03
96 22 614	08C	009	6-A10
96 22 622	08C	007	6-A08
96 22 622	08C	009	6-A10
96 22 655	08C	007	6-A08
96 22 655	08C	009	6-A10
96 22 663	08C	007	6-A08
96 22 663	08C	009	6-A10
96 22 671	08C	007	6-A08
96 22 671	08C	009	6-A10
96 22 697	08C	007	6-A08
96 22 697	08C	009	6-A10
96 22 747	03A	083	2-D12
96 22 762	03A	083	2-D12
96 22 788	03A	083	2-D12
96 22 812	08C	009	6-A10
96 22 978	08C	011	6-A12
96 22 986	08C	011	6-A12
96 23 265	03A	083	2-D12
96 23 307	08C	021	6-A22
96 23 315	08C	009	6-A10
96 23 323	08C	011	6-A12
96 23 331	08C	011	6-A12
96 23 398	08C	021	6-A22
96 23 455	08C	007	6-A08
96 23 570	08C	007	6-A08
96 23 737	08C	005	6-A06
96 23 745	08C	005	6-A06
96 23 869	08C	009	6-A10
96 23 935	08C	009	6-A10
96 23 968	08C	009	6-A10
96 24 032	08C	021	6-A22
96 24 040	08C	021	6-A22
96 24 107	08C	021	[illegible]
96 24 115	08C	017	[illegible]
96 24 123	08C	009	6-A10
96 24 305	08C	007	6-A08
96 24 305	08C	009	6-A10
96 24 321	08C	007	6-A08
96 24 321	08C	009	6-A10
96 24 347	08C	007	6-A08
96 24 347	08C	009	6-A10
96 24 578	08C	007	6-A08
96 24 578	08C	009	6-A10
96 24 867	08C	021	6-A22
96 24 925	08C	021	6-A22
96 24 966	08C	011	6-A12
96 24 974	08C	011	6-A12

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E19 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 25 054	08C	021	6-A22
96 25 062	08C	011	6-A12
96 25 070	08C	011	6-A12
96 25 088	08C	011	6-A12
96 25 096	08C	021	6-A22
96 25 112	08C	021	6-A22
96 25 120	08C	007	6-A08
96 25 120	08C	009	6-A10
96 25 138	08C	007	6-A08
96 25 138	08C	009	6-A10
96 25 146	08C	007	6-A08
96 25 229	08C	005	6-A06
96 25 245	08C	005	6-A06
96 25 252	08C	005	6-A06
96 25 260	08C	011	6-A12
96 25 278	08C	011	6-A12
96 25 328	08C	021	6-A22
96 25 336	08C	021	6-A22
96 25 351	08C	005	6-A06
96 25 419	08C	021	6-A22
96 25 435	08C	009	6-A10
96 25 468	08C	007	6-A08
96 25 468	08C	009	6-A10
96 25 534	08C	009	6-A10
96 25 575	08C	005	6-A06
96 25 583	08C	021	6-A22
96 25 633	03A	097	2-E02
96 25 633	08C	021	6-A22
96 25 641	08A	021	4-F22
96 25 641	08A	023	4-F24
96 25 674	08C	021	6-A22
96 25 724	08C	007	6-A08
96 25 765	08C	007	6-A08
96 25 823	03A	083	2-D12
96 25 823	08C	023	6-A24
96 25 831	08C	007	6-A08
96 25 831	08C	009	6-A10
96 25 955	08C	007	6-A08
96 25 955	08C	009	6-A10
96 25 989	08C	007	6-A08
96 25 989	08C	009	6-A10
96 25 989	08C	021	6-A22
96 26 037	08C	021	6-A22
96 26 052	08C	009	6-A10
96 26 243	08C	021	6-A22
96 26 300	08C	007	6-A08
96 26 300	08C	009	6-A10
96 26 318	08C	007	6-A08
96 26 318	08C	009	6-A10
96 26 375	03A	083	2-D12
96 26 383	08C	005	6-A06
96 26 458	08C	021	6-A22
96 26 888	08C	017	6-A18
96 26 896	08C	017	6-A18
96 26 904	08C	017	6-A18
96 26 912	08C	017	6-A18
96 26 953	08C	011	6-A12
96 26 987	08C	007	6-A08
96 26 987	08C	009	6-A10
96 27 142	08C	021	6-A22
96 27 159	08C	021	6-A22
96 27 183	08C	017	6-A18
96 27 266	08C	023	6-A24
96 27 266	08C	027	6-B04
96 27 316	08C	011	6-A12
96 27 357	08C	013	6-A14
96 27 365	08C	013	6-A14
96 27 373	02	109	1-F14
96 27 373	08C	025	6-B02
96 27 373	08C	029	6-B06
96 27 407	08C	007	6-A08
96 27 407	08C	009	6-A10
96 27 415	08C	007	6-A08
96 27 415	08C	009	6-A10
96 27 431	08C	021	6-A22
96 27 456	08C	011	6-A12
96 27 464	08C	011	6-A12
96 27 498	08C	011	6-A12
96 27 506	08C	011	6-A12
96 27 514	08C	011	6-A12
96 27 522	08C	011	6-A12
96 27 738	08A	019	4-F20
96 27 746	08A	019	4-F20
96 27 787	08C	011	6-A12
96 27 803	08C	011	6-A12
96 27 811	03A	083	2-D12
96 27 837	03A	083	2-D12
96 27 845	03A	083	2-D12
96 28 033	03A	083	2-D12
96 28 090	08C	023	6-A24
96 28 124	08A	019	4-F20
96 28 173	08C	011	6-A12
96 28 181	08C	011	6-A12
96 28 272	08C	007	6-A08
96 28 272	08C	009	6-A10
96 28 389	08C	005	6-A06
96 28 397	08C	005	6-A06
96 28 413	08C	015	6-A16
96 28 413	08C	031	6-B08
96 28 447	08C	031	6-B08
96 28 454	08C	015	6-A16
96 28 454	08C	031	6-B08
96 28 462	08C	015	6-A16
96 28 462	08C	031	6-B08
96 28 512	08C	015	6-A16
96 28 512	08C	031	6-B08
96 28 587	08C	007	6-A08
96 28 587	08C	009	6-A10
96 28 595	08C	011	6-A12
96 28 603	08C	007	6-A08
96 28 843	08A	029	4-G06
96 28 850	08A	029	4-G06
96 28 868	08A	029	4-G06
96 28 876	08A	029	4-G06
96 28 884	08A	029	4-G06
96 28 942	08C	011	6-A12
96 28 959	08C	011	6-A12
96 28 967	08C	011	6-A12
96 29 056	08C	011	6-A12
96 29 098	08C	011	6-A12
96 29 106	03A	083	2-D12
96 29 114	08C	013	6-A14
96 29 122	08C	013	6-A14
96 29 197	08C	021	6-A22
96 29 247	03A	083	2-D12
96 29 254	08C	017	6-A18
96 29 262	08C	021	6-A22
96 29 296	08C	021	6-A22
96 29 304	08C	021	6-A22
96 29 312	08C	021	6-A22
96 29 320	08C	021	6-A22
96 29 379	08C	007	6-A08
96 29 379	08C	009	6-A10
96 29 403	08C	021	6-A22
96 29 411	08C	009	6-A10
96 29 429	08C	007	6-A08
96 29 445	08C	017	6-A18
96 29 452	08C	017	6-A18
96 29 460	08C	017	6-A18
96 29 478	08C	017	6-A18
96 29 486	08C	017	6-A18
96 29 494	08C	017	6-A18
96 29 502	08C	017	6-A18
96 29 577	08C	021	6-A22
96 29 585	08C	021	6-A22
96 29 601	08C	017	6-A18
96 30 138	08C	011	6-A12
96 30 286	08C	021	6-A22
96 30 310	08C	023	6-A24
96 30 310	08C	027	6-B04
96 30 336	03C	013	6-A14
96 30 724	08C	011	6-A12
96 30 732	08C	011	6-A12
96 30 799	08C	007	6-A08
96 30 799	08C	009	6-A10
96 31 235	08C	005	6-A06
96 31 300	09	011	6-C12
96 31 318	09	011	6-C12
96 31 367	08C	023	6-A24
96 31 367	08C	027	6-B04
96 31 409	08C	017	6-A18
96 31 490	08C	007	6-A08
96 31 490	08C	009	6-A10
96 51 589	08B	027	5-B04
96 51 597	08B	027	5-B04
96 51 605	08B	029	5-B06
96 51 613	08B	029	5-B06
96 51 670	08B	025	5-B02
96 51 688	08B	025	5-B02
96 51 712	08B	025	5-B02
96 51 720	08B	025	5-B02
96 51 738	08B	025	5-B02
96 51 746	08B	027	5-B04
96 53 502	08A	009	4-F10
96 53 502	08B	221	5-J06
96 53 502	08B	235	5-J20
96 53 627	08B	055	5-C08
96 53 635	08B	047	5-B24
96 53 635	08B	057	5-C10
96 53 643	08B	055	5-C08
96 53 650	08B	047	5-B24
96 53 650	08B	057	5-C10
96 53 668	08B	055	5-C08
96 53 676	08B	047	5-B24
96 53 676	08B	057	5-C10
96 53 684	08B	055	5-C08
96 53 692	08B	047	5-B24
96 53 692	08B	057	5-C10
96 53 700	08B	055	5-C08
96 53 700	08B	059	5-C12
96 53 718	08B	047	5-B24
96 53 718	08B	057	5-C10
96 53 718	08B	061	5-C14
96 53 718	08B	071	5-C24
96 53 973	08B	077	5-D06
96 54 849	08B	055	5-C08
96 54 849	08B	059	5-C12
96 54 856	08B	047	5-B24
96 54 856	08B	057	5-C10
96 54 856	08B	061	5-C14
96 54 856	08B	071	5-C24
96 54 864	08B	047	5-B24
96 54 864	08B	057	5-C10
96 54 880	08B	051	5-C04
96 54 898	08B	045	5-B22
96 54 898	08B	051	5-C04
96 54 898	08B	061	5-C14
96 54 906	08B	045	5-B22
96 54 906	08B	051	5-C04
96 54 906	08B	059	5-C12
96 54 914	08B	047	5-B24
96 54 922	08B	047	5-B24
96 54 922	08B	051	5-C04
96 54 922	08B	061	5-C14
96 56 398	08B	117	5-E22
96 56 398	08B	123	5-F04
96 56 398	08B	129	5-F10
96 56 398	08B	133	5-F14
96 56 414	08B	223	5-J08
96 56 422	08B	223	5-J08
96 56 455	08B	223	5-J08
96 56 463	08B	223	5-J08
96 56 497	08B	223	5-J08
96 56 505	08B	223	5-J08
96 56 539	08B	223	5-J08
96 56 547	08B	223	5-J08
96 56 570	08B	225	5-J10
96 56 588	08B	225	5-J10
96 56 612	08B	225	5-J10
96 56 620	08B	225	5-J10
96 56 653	08B	225	5-J10
96 56 661	08B	225	5-J10
96 56 695	08B	225	5-J10
96 56 703	08B	225	5-J10
96 56 737	08B	225	5-J10
96 56 745	08B	225	5-J10
96 56 778	08B	227	5-J12
96 56 786	08B	227	5-J12
96 56 794	08B	227	5-J12

6-E20 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 56 869	08B	173	5-H06
96 56 901	03A	073	2-D02
96 56 968	08B	219	5-J04
96 57 123	08B	219	5-J04
96 57 149	08B	239	5-J24
96 57 156	08B	239	5-J24
96 57 164	08B	031	5-B08
96 57 172	08B	031	5-B08
96 57 180	08B	031	5-B08
96 57 198	08B	031	5-B08
96 57 206	08B	031	5-B08
96 57 214	08B	031	5-B08
96 57 222	08B	031	5-B08
96 57 230	08B	031	5-B08
96 57 412	08B	091	5-D20
96 57 412	08B	103	5-E08
96 57 420	08B	091	5-D20
96 57 420	08B	103	5-E08
96 57 438	08B	091	5-D20
96 57 438	08B	103	5-E08
96 57 438	08B	115	5-E20
96 57 446	08B	091	5-D20
96 57 446	08B	103	5-E08
96 57 446	08B	115	5-E20
96 57 453	08B	093	5-D22
96 57 461	08B	093	5-D22
96 57 479	08B	093	5-D22
96 57 479	08B	105	5-E10
96 57 479	08B	115	5-E20
96 57 479	08B	127	5-F08
96 57 487	08B	093	5-D22
96 57 487	08B	105	5-E10
96 57 487	08B	115	5-E20
96 57 487	08B	127	5-F08
96 57 511	08B	091	5-D20
96 57 511	08B	103	5-E08
96 57 511	08B	115	5-E20
96 57 511	08B	127	5-F08
96 57 529	08B	091	5-D20
96 57 529	08B	103	5-E08
96 57 529	08B	115	5-E20
96 57 529	08B	127	5-F08
96 57 537	08B	091	5-D20
96 57 537	08B	103	5-E08
96 57 537	08B	115	5-E20
96 57 545	08B	091	5-D20
96 57 545	08B	103	5-E08
96 57 545	08B	115	5-E20
96 57 552	08B	093	5-D22
96 57 560	08B	093	5-D22
96 57 578	08B	093	5-D22
96 57 578	08B	105	5-E10
96 57 578	08B	115	5-E20
96 57 578	08B	127	5-F08
96 57 586	08B	093	5-D22
96 57 586	08B	105	5-E10
96 57 586	08B	115	5-E20
96 57 586	08B	127	5-F08
96 57 610	08B	097	5-E02
96 57 610	08B	109	5-E14
96 57 628	08B	097	5-E02
96 57 628	08B	109	5-E14
96 57 636	08B	097	5-E02
96 57 636	08B	109	5-E14
96 57 636	08B	121	5-F02
96 57 644	08B	097	5-E02
96 57 644	08B	109	5-E14
96 57 644	08B	121	5-F02
96 57 651	08B	099	5-E04
96 57 669	08B	099	5-E04
96 57 677	08B	099	5-E04
96 57 677	08B	111	5-E16
96 57 677	08B	123	5-F04
96 57 677	08B	131	5-F12
96 57 685	08B	099	5-E04
96 57 685	08B	111	5-E16
96 57 685	08B	123	5-F04
96 57 685	08B	131	5-F12
96 57 719	08B	097	5-E02
96 57 719	08B	109	5-E14
96 57 719	08B	121	5-F02
96 57 719	08B	131	5-F12
96 57 727	08B	097	5-E02
96 57 727	08B	109	5-E14
96 57 727	08B	121	5-F02
96 57 727	08B	131	5-F12
96 57 735	08B	097	5-E02
96 57 735	08B	109	5-E14
96 57 735	08B	121	5-F02
96 57 743	08B	097	5-E02
96 57 743	08B	109	5-E14
96 57 743	08B	121	5-F02
96 57 750	08B	099	5-E04
96 57 768	08B	099	5-E04
96 57 776	08B	099	5-E04
96 57 776	08B	111	5-E16
96 57 776	08B	123	5-F04
96 57 776	08B	131	5-F12
96 57 784	08B	099	5-E04
96 57 784	08B	111	5-E16
96 57 784	08B	123	5-F04
96 57 784	08B	131	5-F12
96 58 055	08B	103	5-E08
96 58 055	08B	115	5-E20
96 58 063	08B	103	5-E08
96 58 063	08B	115	5-E20
96 58 071	08B	091	5-D20
96 58 071	08B	103	5-E08
96 58 089	08B	091	5-D20
96 58 089	08B	103	5-E08
96 58 097	08B	091	5-D20
96 58 097	08B	103	5-E08
96 58 097	08B	115	5-E20
96 58 105	08B	091	5-D20
96 58 105	08B	103	5-E08
96 58 105	08B	115	5-E20
96 58 113	08B	093	5-D22
96 58 113	08B	105	5-E10
96 58 121	08B	093	5-D22
96 58 121	08B	105	5-E10
96 58 139	08B	093	5-D22
96 58 139	08B	105	5-E10
96 58 139	08B	115	5-E20
96 58 139	08B	127	5-F08
96 58 147	08B	093	5-D22
96 58 147	08B	105	5-E10
96 58 147	08B	115	5-E20
96 58 147	08B	127	5-F08
96 58 279	08B	211	5-I20
96 58 279	08B	217	5-J02
96 58 287	08B	109	5-E14
96 58 287	08B	121	5-F02
96 58 295	08B	109	5-E14
96 58 295	08B	121	5-F02
96 58 303	08B	097	5-E02
96 58 303	08B	109	5-E14
96 58 311	08B	097	5-E02
96 58 311	08B	109	5-E14
96 58 329	08B	097	5-E02
96 58 329	08B	109	5-E14
96 58 329	08B	121	5-F02
96 58 337	08B	097	5-E02
96 58 337	08B	109	5-E14
96 58 337	08B	121	5-F02
96 58 345	08B	099	5-E04
96 58 345	08B	111	5-E16
96 58 352	08B	099	5-E04
96 58 352	08B	111	5-E16
96 58 360	08B	099	5-E04
96 58 360	08B	111	5-E16
96 58 360	08B	123	5-F04
96 58 360	08B	131	5-F12
96 58 378	08B	099	5-E04
96 58 378	08B	111	5-E16
96 58 378	08B	123	5-F04
96 58 378	08B	131	5-F12
96 58 535	08B	237	5-J22
96 58 543	08B	237	5-J22
96 58 584	08B	175	5-H08
96 58 584	08B	187	5-H20
96 58 592	08B	175	5-H08
96 58 592	08B	187	5-H20
96 58 600	08B	155	5-G12
96 58 600	08B	159	5-G16
96 58 600	08B	163	5-G20
96 58 618	08B	219	5-J04
96 58 675	08B	019	5-A20
96 58 725	08B	019	5-A20
96 58 899	08B	139	5-F20
96 58 972	08A	089	4-I18
96 58 980	08A	089	4-I18
96 58 998	08B	137	5-F18
96 59 004	08B	033	5-B10
96 59 012	08B	175	5-H08
96 59 012	08B	189	5-H22
96 59 020	08B	175	5-H08
96 59 020	08B	189	5-H22
96 59 020	08B	251	5-K12
96 59 053	08B	179	5-H12
96 59 061	08B	179	5-H12
96 59 210	08B	155	5-G12
96 59 228	08B	145	5-G02
96 59 228	08B	155	5-G12
96 59 236	08B	145	5-G02
96 59 236	08B	153	5-G10
96 59 244	08B	145	5-G02
96 59 244	08B	155	5-G12
96 59 251	08B	145	5-G02
96 59 251	08B	155	5-G12
96 59 269	08B	145	5-G02
96 59 277	08B	145	5-G02
96 59 285	08B	145	5-G02
96 59 301	03A	049	2-C02
96 59 426	08B	155	5-G12
96 59 426	08B	159	5-G16
96 59 434	08B	145	5-G02
96 59 434	08B	155	5-G12
96 59 434	08B	159	5-G16
96 59 434	08B	163	5-G20
96 59 442	08B	145	5-G02
96 59 442	08B	155	5-G12
96 59 442	08B	159	5-G16
96 59 459	08B	145	5-G02
96 59 459	08B	155	5-G12
96 59 467	08B	035	5-B12
96 59 582	08B	035	5-B12
96 59 764	02	143	1-G24
96 59 764	02	145	1-H02
96 59 764	02	147	1-H04
96 59 764	08B	017	5-A18
96 59 830	08B	091	5-D20
96 59 848	08B	091	5-D20
96 59 855	08B	091	5-D20
96 59 863	08B	091	5-D20
96 59 871	08B	093	5-D22
96 59 889	08B	093	5-D22
96 59 897	08B	093	5-D22
96 59 905	08B	093	5-D22
96 60 036	08B	107	5-E12
96 60 036	08B	119	5-E24
96 60 044	08B	095	5-D24
96 60 044	08B	107	5-E12
96 60 044	08B	117	5-E22
96 60 051	08A	087	4-I16
96 60 051	08A	129	4-K10
96 60 077	08B	095	5-D24
96 60 077	08B	107	5-E12
96 60 077	08B	119	5-E24
96 60 077	08B	129	5-F10
96 60 085	08B	101	5-E06
96 60 085	08B	113	5-E18
96 60 085	08B	125	5-F06
96 60 143	08B	095	5-D24
96 60 143	08B	101	5-E06
96 60 143	08B	107	5-E12
96 60 143	08B	113	5-E18
96 60 143	08B	119	5-E24
96 60 143	08B	125	5-F06
96 60 143	08B	129	5-F10
96 60 143	08B	133	5-F14

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-E21 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 60 150	08B	101	5-E06
96 60 150	08B	113	5-E18
96 60 150	08B	125	5-F06
96 60 150	08B	135	5-F16
96 60 168	08B	101	5-E06
96 60 168	08B	113	5-E18
96 60 168	08B	125	5-F06
96 60 168	08B	135	5-F16
96 60 176	03A	053	2-C06
96 60 176	03A	175	2-H08
96 60 184	03A	051	2-C04
96 60 192	08B	169	5-H02
96 60 440	08B	009	5-A10
96 60 622	08B	009	5-A10
96 60 630	08B	007	5-A08
96 60 648	08B	007	5-A08
96 60 655	08B	007	5-A08
96 60 663	08B	009	5-A10
96 60 721	08B	009	5-A10
96 60 739	08B	009	5-A10
96 60 747	08B	009	5-A10
96 60 754	08B	009	5-A10
96 60 762	08B	009	5-A10
96 60 820	08B	101	5-E06
96 60 820	08B	113	5-E18
96 60 820	08B	125	5-F06
96 60 820	08B	135	5-F16
96 60 838	08B	083	5-D12
96 60 838	08B	091	5-D20
96 60 838	08B	093	5-D22
96 60 838	08B	103	5-E08
96 60 838	08B	105	5-E10
96 60 838	08B	115	5-E20
96 60 838	08B	117	5-E22
96 60 838	08B	127	5-F08
96 60 846	08B	097	5-E02
96 60 846	08B	099	5-E04
96 60 846	08B	109	5-E14
96 60 846	08B	111	5-E16
96 60 846	08B	121	5-F02
96 60 846	08B	123	5-F04
96 60 846	08B	131	5-F12
96 60 846	08B	133	5-F14
96 60 853	08B	175	5-H08
96 60 853	08B	189	5-H22
96 60 861	08B	175	5-H08
96 60 861	08B	189	5-H22
96 60 945	08B	243	5-K04
96 60 986	08B	083	5-D12
96 60 986	08B	091	5-D20
96 60 986	08B	093	5-D22
96 60 986	08B	103	5-E08
96 60 986	08B	105	5-E10
96 60 986	08B	115	5-E20
96 60 986	08B	117	5-E22
96 60 986	08B	127	5-F08
96 60 994	08B	097	5-E02
96 60 994	08B	099	5-E04
96 60 994	08B	109	5-E14
96 60 994	08B	111	5-E16
96 60 994	08B	121	5-F02
96 60 994	08B	123	5-F04
96 60 994	08B	131	5-F12
96 60 994	08B	133	5-F14
96 60 994	08B	169	5-H02
96 60 994	08B	175	5-H08
96 60 994	08B	189	5-H22
96 61 018	08B	221	5-J06
96 61 067	08B	169	5-H02
96 61 075	08B	169	5-H02
96 61 208	08A	083	4-I12
96 61 208	08A	085	4-I14
96 61 208	08A	129	4-K10
96 61 216	08A	083	4-I12
96 61 240	08A	083	4-I12
96 61 240	08A	129	4-K10
96 61 257	08A	085	4-I14
96 61 265	08A	085	4-I14
96 61 307	08A	083	4-I12
96 61 307	08A	129	4-K10
96 61 323	08A	063	4-I12
96 61 331	08A	083	4-I12
96 61 364	08A	083	4-I12
96 61 364	08A	129	4-K10
96 61 380	08A	083	4-I12
96 61 448	08A	085	4-I14
96 61 448	08A	087	4-I16
96 61 455	08A	085	4-I14
96 61 455	08A	087	4-I16
96 61 711	08B	209	5-I18
96 61 760	08B	209	5-I18
96 61 778	08B	205	5-I14
96 61 794	08B	205	5-I14
96 61 877	08B	221	5-J06
96 63 022	08B	013	5-A14
96 63 030	08B	013	5-A14
96 63 048	08B	029	5-B06
96 63 055	08B	029	5-B06
96 63 089	08A	035	4-G12
96 63 097	08A	035	4-G12
96 63 204	08B	031	5-B08
96 63 212	08B	031	5-B08
96 63 220	08B	031	5-B08
96 63 238	08B	031	5-B08
96 63 246	08B	031	5-B08
96 63 253	08B	031	5-B08
96 63 261	08B	031	5-B08
96 63 279	08B	033	5-B10
96 63 345	08B	153	5-G10
96 63 345	08B	157	5-G14
96 63 345	08B	161	5-G18
96 63 352	08B	153	5-G10
96 63 352	08B	159	5-G16
96 63 352	08B	161	5-G18
96 63 378	03A	051	2-C04
96 63 402	08B	207	5-I16
96 63 410	08B	207	5-I16
96 63 584	08B	103	5-E08
96 63 592	08B	103	5-E08
96 63 600	08B	105	5-E10
96 63 618	08B	105	5-E10
96 63 626	08B	103	5-E08
96 63 634	08B	103	5-E08
96 63 642	08B	105	5-E10
96 63 659	08B	105	5-E10
96 63 667	08B	103	5-E08
96 63 675	08B	103	5-E08
96 63 683	08B	105	5-E10
96 63 691	08B	105	5-E10
96 63 741	08B	109	5-E14
96 63 758	08B	109	5-E14
96 63 766	08B	111	5-E16
96 63 774	08B	111	5-E16
96 63 782	08B	109	5-E14
96 63 790	08B	109	5-E14
96 63 808	08B	111	5-E16
96 63 816	08B	111	5-E16
96 63 824	08B	109	5-E14
96 63 832	08B	109	5-E14
96 63 840	08B	111	5-E16
96 63 857	08B	111	5-E16
96 63 907	08B	165	5-G22
96 64 111	08B	035	5-B12
96 64 129	08B	037	5-B14
96 64 137	08B	035	5-B12
96 64 145	08B	037	5-B14
96 64 178	08B	149	5-G06
96 64 178	08B	157	5-G14
96 64 186	08B	149	5-G06
96 64 186	08B	157	5-G14
96 64 194	08B	149	5-G06
96 64 202	08B	149	5-G06
96 64 202	08B	157	5-G14
96 64 210	08B	149	5-G06
96 64 228	08B	149	5-G06
96 64 236	08B	149	5-G06
96 64 244	08B	149	5-G06
96 64 277	08B	149	5-G06
96 64 277	08B	151	5-G08
96 64 277	08B	157	5-G14
96 64 285	08B	149	5-G06
96 64 285	08B	151	5-G08
96 64 285	08B	157	5-G14
96 64 293	08B	149	5-G06
96 64 293	08B	151	5-G08
96 64 301	08B	149	5-G06
96 64 301	08B	151	5-G08
96 64 301	08B	157	5-G14
96 64 335	08B	149	5-G06
96 64 335	08B	151	5-G08
96 64 343	08B	149	5-G06
96 64 343	08B	151	5-G08
96 64 350	08B	149	5-G06
96 64 350	08B	151	5-G08
96 64 368	08B	149	5-G06
96 64 368	08B	151	5-G08
96 64 376	08B	223	5-J08
96 64 384	08B	223	5-J08
96 64 392	08B	223	5-J08
96 64 400	08B	223	5-J08
96 64 459	08B	227	5-J12
96 64 509	08B	147	5-G04
96 64 509	08B	157	5-G14
96 64 517	08B	147	5-G04
96 64 517	08B	157	5-G14
96 64 525	08B	147	5-G04
96 64 533	08B	147	5-G04
96 64 533	08B	157	5-G14
96 64 566	08B	147	5-G04
96 64 574	08B	147	5-G04
96 64 582	08B	147	5-G04
96 64 590	08B	147	5-G04
96 64 608	08B	151	5-G08
96 64 616	08B	151	5-G08
96 64 624	08B	151	5-G08
96 64 632	08B	151	5-G08
96 64 665	08B	151	5-G08
96 64 673	08B	151	5-G08
96 64 681	08B	151	5-G08
96 64 723	08B	153	5-G10
96 64 731	08B	153	5-G10
96 64 731	08B	157	5-G14
96 64 764	08B	153	5-G10
96 64 772	08B	153	5-G10
96 64 780	08B	153	5-G10
96 64 798	08B	153	5-G10
96 64 806	08B	147	5-G04
96 64 814	08B	147	5-G04
96 64 822	08B	147	5-G04
96 64 830	08B	147	5-G04
96 64 863	08B	147	5-G04
96 64 871	08B	147	5-G04
96 64 889	08B	147	5-G04
96 64 897	08B	147	5-G04
96 64 905	08B	151	5-G08
96 64 913	08B	151	5-G08
96 64 921	08B	151	5-G08
96 64 939	08B	151	5-G08
96 64 962	08B	151	5-G08
96 64 970	08B	151	5-G08
96 64 988	08B	151	5-G08
96 64 996	08B	151	5-G08
96 65 274	08B	051	5-C04
96 65 282	08B	051	5-C04
96 65 290	08B	051	5-C04
96 65 308	08B	051	5-C04
96 65 316	08B	051	5-C04
96 65 514	08B	051	5-C04
96 65 522	08B	051	5-C04
96 65 530	08B	051	5-C04
96 65 548	08B	051	5-C04
96 65 555	08B	051	5-C04
96 66 074	08B	051	5-C04
96 66 082	08B	051	5-C04
96 66 090	08B	051	5-C04
96 66 108	08B	051	5-C04
96 66 116	08B	051	5-C04
96 66 454	08B	225	5-J10

6-E22 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 66 462	08B	225	5-J10
96 66 710	08B	051	5-C04
96 66 728	08B	051	5-C04
96 66 736	08B	051	5-C04
96 66 744	08B	051	5-C04
96 66 751	08B	051	5-C04
96 67 023	08B	051	5-C04
96 67 031	08B	051	5-C04
96 67 049	08B	051	5-C04
96 67 056	08B	051	5-C04
96 67 064	08B	051	5-C04
96 67 080	08B	051	5-C04
96 67 098	08B	051	5-C04
96 67 106	08B	051	5-C04
96 67 114	08B	051	5-C04
96 67 122	08B	051	5-C04
96 67 866	08B	051	5-C04
96 67 940	08B	051	5-C04
96 68 013	08B	051	5-C04
96 68 112	08B	153	5-G10
96 68 112	08B	159	5-G16
96 68 120	08B	153	5-G10
96 68 120	08B	159	5-G16
96 68 120	08B	161	5-G18
96 68 138	08B	153	5-G10
96 68 138	08B	159	5-G16
96 68 146	08B	153	5-G10
96 68 153	08B	137	5-F18
96 68 153	08B	139	5-F20
96 68 153	08B	153	5-G10
96 68 153	08B	159	5-G16
96 68 153	08B	161	5-G18
96 68 153	08B	221	5-J06
96 68 161	08B	055	5-C08
96 68 161	08B	067	5-C20
96 68 179	08B	055	5-C08
96 68 179	08B	067	5-C20
96 68 401	08B	179	5-H12
96 68 526	08B	055	5-C08
96 68 526	08B	067	5-C20
96 68 534	08B	055	5-C08
96 68 534	08B	067	5-C20
96 68 542	08B	055	5-C08
96 68 542	08B	067	5-C20
96 68 559	08B	055	5-C08
96 68 559	08B	067	5-C20
96 68 997	08B	055	5-C08
96 68 997	08B	067	5-C20
96 69 086	08B	055	5-C08
96 69 193	08B	055	5-C08
96 69 458	08B	177	5-H10
96 69 458	08B	193	5-I02
96 69 466	08B	177	5-H10
96 69 466	08B	191	5-H24
96 69 474	08B	177	5-H10
96 69 474	08B	191	5-H24
96 69 482	08B	179	5-H12
96 69 482	08B	193	5-I02
96 69 490	08B	179	5-H12
96 69 490	08B	193	5-I02
96 69 508	08B	177	5-H10
96 69 508	08B	191	5-H24
96 69 516	08B	177	5-H10
96 69 516	08B	193	5-I02
96 69 524	08B	179	5-H12
96 69 524	08B	193	5-I02
96 69 532	08B	177	5-H10
96 69 532	08B	191	5-H24
96 69 540	08B	177	5-H10
96 69 540	08B	191	5-H24
96 69 557	08B	177	5-H10
96 69 557	08B	191	5-H24
96 69 581	08B	007	5-A08
96 69 599	08B	007	5-A08
96 69 615	08B	011	5-A12
96 69 623	08B	005	5-A06
96 69 656	08B	019	5-A20
96 69 755	08B	007	5-A08
96 69 763	08B	007	5-A08
96 69 771	08B	015	5-A16
96 69 789	08B	011	5-A12
96 69 797	08B	005	5-A06
96 69 839	08B	019	5-A20
96 69 946	08B	029	5-B06
96 69 953	08B	027	5-B04
96 69 979	08B	025	5-B02
96 70 456	08B	231	5-J16
96 70 464	08B	233	5-J18
96 70 506	08B	137	5-F18
96 70 548	08A	063	4-H16
96 71 017	08B	035	5-B12
96 71 025	08B	207	5-I16
96 71 025	08B	211	5-I20
96 71 025	08B	213	5-I22
96 71 025	08B	245	5-K06
96 71 033	08B	119	5-E24
96 71 033	08B	129	5-F10
96 71 041	08B	171	5-H04
96 71 041	08B	185	5-H18
96 71 041	08B	197	5-I06
96 71 041	08B	245	5-K06
96 71 355	08B	013	5-A14
96 71 363	08B	013	5-A14
96 71 744	08B	185	5-H18
96 71 744	08B	245	5-K06
96 71 751	08B	183	5-H16
96 71 751	08B	197	5-I06
96 71 751	08B	245	5-K06
96 71 835	08B	173	5-H06
96 71 835	08B	189	5-H22
96 71 835	08B	201	5-I10
96 71 868	08B	037	5-B14
96 71 876	08B	013	5-A14
96 71 884	08B	013	5-A14
96 71 918	08B	033	5-B10
96 71 926	08A	089	4-I18
96 71 934	08A	089	4-I18
96 72 221	09	015	6-C16
96 72 239	08B	009	5-A10
96 72 254	08B	037	5-B14
96 72 254	08C	013	6-A14
96 72 262	08B	227	5-J12
96 72 569	08B	239	5-J24
96 72 619	08B	205	5-I14
96 72 627	08B	205	5-I14
96 72 635	08B	209	5-I18
96 72 643	08B	209	5-I18
96 72 650	08B	211	5-I20
96 72 650	08B	215	5-I24
96 72 650	08B	251	5-K12
96 72 668	08B	207	5-I16
96 72 668	08B	211	5-I20
96 72 668	08B	245	5-K06
96 72 700	08B	211	5-I20
96 72 734	08B	107	5-E12
96 72 742	08B	107	5-E12
96 72 759	08A	087	4-I16
96 72 767	08A	087	4-I16
96 72 775	08B	113	5-E18
96 72 783	08B	113	5-E18
96 72 791	08B	239	5-J24
96 72 908	08B	033	5-B10
96 73 146	08B	173	5-H06
96 73 146	08B	187	5-H20
96 73 146	08B	201	5-I10
96 73 179	08B	173	5-H06
96 73 179	08B	187	5-H20
96 73 294	08B	237	5-J22
96 73 302	08B	237	5-J22
96 73 385	08B	239	5-J24
96 73 393	08B	239	5-J24
96 73 435	08B	173	5-H06
96 73 435	08B	187	5-H20
96 73 435	08B	201	5-I10
96 73 450	08B	173	5-H06
96 73 450	08B	187	5-H20
96 73 666	08B	235	5-J20
96 73 724	08B	231	5-J16
96 73 732	08B	231	5-J16
96 73 740	08B	231	5-J16
96 73 757	08B	231	5-J16
96 73 765	08B	231	5-J16
96 73 773	08B	231	5-J16
96 73 831	08B	205	5-I14
96 73 831	08B	213	5-I22
96 74 136	08B	055	5-C08
96 74 136	08B	067	5-C20
96 74 144	08B	055	5-C08
96 74 144	08B	067	5-C20
96 74 151	08B	055	5-C08
96 74 383	08B	055	5-C08
96 74 383	08B	067	5-C20
96 74 391	08B	055	5-C08
96 74 391	08B	067	5-C20
96 74 409	08B	055	5-C08
96 74 409	08B	067	5-C20
96 74 417	08B	055	5-C08
96 74 417	08B	067	5-C20
96 74 425	08B	055	5-C08
96 74 425	08B	067	5-C20
96 74 755	08B	055	5-C08
96 74 896	08B	233	5-J18
96 75 174	08B	213	5-I22
96 75 208	08B	215	5-I24
96 75 216	08B	213	5-I22
96 75 265	08B	213	5-I22
96 75 380	08B	165	5-G22
96 75 398	08B	165	5-G22
96 75 570	08B	117	5-E22
96 75 570	08B	129	5-F10
96 75 588	08B	117	5-E22
96 75 588	08B	129	5-F10
96 75 596	08B	117	5-E22
96 75 596	08B	125	5-F06
96 75 596	08B	129	5-F10
96 75 596	08B	133	5-F14
96 75 604	08B	117	5-E22
96 75 604	08B	125	5-F06
96 75 604	08B	129	5-F10
96 75 604	08B	133	5-F14
96 75 612	08B	117	5-E22
96 75 612	08B	123	5-F04
96 75 612	08B	129	5-F10
96 75 612	08B	133	5-F14
96 75 620	08B	123	5-F04
96 75 620	08B	133	5-F14
96 75 638	08B	123	5-F04
96 75 638	08B	133	5-F14
96 75 646	08B	159	5-G16
96 75 646	08B	161	5-G18
96 75 653	08B	159	5-G16
96 75 653	08B	163	5-G20
96 75 679	08B	223	5-J08
96 75 687	08B	223	5-J08
96 75 695	08B	223	5-J08
96 75 703	08B	223	5-J08
96 75 711	08B	223	5-J08
96 75 729	08B	223	5-J08
96 75 737	08B	225	5-J10
96 75 745	08B	225	5-J10
96 75 752	08B	225	5-J10
96 75 760	08B	225	5-J10
96 75 919	08B	225	5-J10
96 75 927	08B	225	5-J10
96 75 935	08B	243	5-K04
96 75 943	08B	243	5-K04
96 76 024	08B	035	5-B12
96 76 057	08B	033	5-B10
96 76 065	08B	031	5-B08
96 76 081	08B	031	5-B08
96 76 107	08B	031	5-B08
96 76 123	08B	031	5-B08
96 76 149	08B	031	5-B08
96 76 206	08B	031	5-B08
96 76 214	08B	031	5-B08
96 76 222	08B	031	5-B08
96 76 230	08B	031	5-B08
96 76 263	08B	015	5-A16
96 76 271	08B	015	5-A16
96 76 289	08B	015	5-A16

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 76 297	08B	015	5-A16
96 76 305	08B	015	5-A16
96 76 339	08B	007	5-A08
96 76 347	08B	007	5-A08
96 76 354	08B	015	5-A16
96 76 388	08B	007	5-A08
96 76 396	08B	007	5-A08
96 76 719	08B	009	5-A10
96 76 818	08B	171	5-H04
96 76 818	08B	183	5-H16
96 76 818	08B	197	5-I06
96 76 818	08B	245	5-K06
96 76 891	08B	193	5-I02
96 76 909	08B	191	5-H24
96 76 917	08B	191	5-H24
96 76 925	08B	193	5-I02
96 76 933	08B	193	5-I02
96 76 941	08B	193	5-I02
96 76 958	08B	193	5-I02
96 76 966	08B	193	5-I02
96 76 974	08B	191	5-H24
96 76 982	08B	191	5-H24
96 76 990	08B	193	5-I02
96 77 014	08B	171	5-H04
96 77 014	08B	189	5-H22
96 77 014	08B	201	5-I10
96 77 048	02	143	1-G24
96 77 048	02	145	1-H02
96 77 048	08B	017	5-A18
96 77 055	08B	017	5-A18
96 77 063	08B	017	5-A18
96 77 147	08B	037	5-B14
96 77 154	08B	033	5-B10
96 77 162	08B	033	5-B10
96 77 196	08B	115	5-E20
96 77 204	08B	115	5-E20
96 77 212	08B	115	5-E20
96 77 220	08B	115	5-E20
96 77 238	08B	115	5-E20
96 77 246	08B	115	5-E20
96 77 295	08B	121	5-F02
96 77 303	08B	121	5-F02
96 77 337	08B	121	5-F02
96 77 345	08B	121	5-F02
96 77 352	08B	121	5-F02
96 77 360	08B	121	5-F02
96 77 410	08B	115	5-E20
96 77 410	08B	127	5-F08
96 77 428	08B	115	5-E20
96 77 428	08B	127	5-F08
96 77 436	08B	115	5-E20
96 77 436	08B	127	5-F08
96 77 444	08B	115	5-E20
96 77 444	08B	127	5-F08
96 77 493	08B	115	5-E20
96 77 493	08B	127	5-F08
96 77 501	08B	115	5-E20
96 77 501	08B	127	5-F08
96 77 550	08B	121	5-F02
96 77 550	08B	131	5-F12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 77 568	08B	121	5-F02
96 77 568	08B	131	5-F12
96 77 576	08B	121	5-F02
96 77 576	08B	131	5-F12
96 77 584	08B	121	5-F02
96 77 584	08B	131	5-F12
96 77 634	08B	121	5-F02
96 77 634	08B	131	5-F12
96 77 642	08B	121	5-F02
96 77 642	08B	131	5-F12
96 77 709	08B	117	5-E22
96 77 709	08B	127	5-F08
96 77 717	08B	117	5-E22
96 77 717	08B	127	5-F08
96 77 725	08B	117	5-E22
96 77 725	08B	127	5-F08
96 77 733	08B	117	5-E22
96 77 733	08B	127	5-F08
96 77 766	08B	117	5-E22
96 77 766	08B	127	5-F08
96 77 790	08B	117	5-E22
96 77 790	08B	127	5-F08
96 77 808	08B	117	5-E22
96 77 808	08B	127	5-F08
96 77 857	08B	117	5-E22
96 77 857	08B	127	5-F08
96 77 865	08B	117	5-E22
96 77 865	08B	127	5-F08
96 77 923	08B	123	5-F04
96 77 923	08B	131	5-F12
96 77 931	08B	123	5-F04
96 77 931	08B	131	5-F12
96 77 949	08B	123	5-F04
96 77 949	08B	131	5-F12
96 77 956	08B	123	5-F04
96 77 956	08B	131	5-F12
96 78 004	08B	123	5-F04
96 78 004	08B	131	5-F12
96 78 012	08B	123	5-F04
96 78 012	08B	131	5-F12
96 78 020	08B	123	5-F04
96 78 020	08B	131	5-F12
96 78 079	08B	123	5-F04
96 78 079	08B	131	5-F12
96 78 087	08B	123	5-F04
96 78 087	08B	131	5-F12
96 78 160	08B	159	5-G16
96 78 178	08B	159	5-G16
96 78 186	08B	159	5-G16
96 78 194	08B	159	5-G16
96 78 202	08B	159	5-G16
96 78 285	08B	033	5-B10
96 78 327	08B	237	5-J22
96 78 335	08B	237	5-J22
96 78 426	08B	017	5-A18
96 78 434	08B	187	5-H20
96 78 442	08B	015	5-A16
96 78 517	08B	009	5-A10
96 78 525	08B	009	5-A10
96 78 533	08B	015	5-A16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 78 541	08B	017	5-A18
96 78 582	08B	009	5-A10
96 78 590	08B	009	5-A10
96 78 608	08A	087	4-I16
96 78 616	08A	087	4-I16
96 78 731	08B	033	5-B10
96 78 749	08A	085	4-I14
96 78 749	08A	087	4-I16
96 78 756	08A	087	4-I16
96 78 764	08A	087	4-I16
96 78 772	08A	087	4-I16
96 78 780	08A	087	4-I16
96 78 798	08A	087	4-I16
96 78 814	08A	087	4-I16
96 78 822	08A	087	4-I16
96 78 996	08B	125	5-F06
96 78 996	08B	135	5-F16
96 79 200	08B	121	5-F02
96 79 218	08B	121	5-F02
96 79 226	08B	121	5-F02
96 79 226	08B	131	5-F12
96 79 234	08B	121	5-F02
96 79 234	08B	131	5-F12
96 79 242	08B	121	5-F02
96 79 259	08B	121	5-F02
96 79 267	08B	123	5-F04
96 79 267	08B	131	5-F12
96 79 275	08B	123	5-F04
96 79 275	08B	131	5-F12
96 79 283	08B	123	5-F04
96 79 283	08B	131	5-F12
96 79 291	08B	123	5-F04
96 79 291	08B	131	5-F12
96 79 705	08B	013	5-A14
96 79 721	08B	011	5-A12
96 79 754	08B	005	5-A06
96 79 762	08B	005	5-A06
96 79 770	08B	005	5-A06
96 79 788	08B	005	5-A06
96 79 796	08B	005	5-A06
96 79 812	08B	011	5-A12
96 79 820	08B	013	5-A14
96 79 838	08B	011	5-A12
96 79 846	08B	011	5-A12
96 79 853	08B	011	5-A12
96 79 861	08B	011	5-A12
96 79 879	08B	005	5-A06
96 79 887	08B	005	5-A06
96 79 895	08B	005	5-A06
96 79 903	08B	005	5-A06
96 79 911	08B	005	5-A06
96 79 929	08B	005	5-A06
96 79 937	08B	015	5-A16
96 79 960	08B	025	5-B02
96 79 986	08B	029	5-B06
96 79 994	08B	029	5-B06
96 81 826	09	013	6-C14
96 81 834	09	013	6-C14
96 81 842	09	013	6-C14
96 81 867	09	013	6-C14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 88 003	08B	059	5-C12
96 88 011	08B	061	5-C14
96 88 011	08B	071	5-C24
96 88 029	08B	059	5-C12
96 88 037	08B	063	5-C16
96 88 037	08B	073	5-D02
96 88 045	08B	061	5-C14
96 88 045	08B	071	5-C24
96 90 009	08B	029	5-B06
96 90 025	08B	137	5-F18
96 90 033	08B	137	5-F18
96 90 041	08B	137	5-F18
96 90 165	08B	025	5-B02
96 90 264	08B	139	5-F20
96 90 314	08B	165	5-G22
96 90 322	08B	165	5-G22
96 90 330	08B	165	5-G22
96 90 348	08B	165	5-G22
96 90 355	08B	165	5-G22
96 90 363	08B	165	5-G22
96 90 371	08B	165	5-G22
96 90 389	08B	165	5-G22
96 90 397	08B	167	5-G24
96 90 405	08B	167	5-G24
96 90 538	08B	157	5-G14
96 90 561	08B	157	5-G14
96 90 587	08B	157	5-G14
96 90 595	08B	157	5-G14
96 90 603	08B	157	5-G14
96 90 603	08B	161	5-G18
96 90 611	08B	157	5-G14
96 90 629	08B	157	5-G14
96 90 629	08B	161	5-G18
96 90 637	08B	157	5-G14
96 90 637	08B	161	5-G18
96 90 645	08B	157	5-G14
96 90 652	08B	157	5-G14
96 90 652	08B	161	5-G18
96 90 660	08B	157	5-G14
96 90 678	08B	157	5-G14
96 90 678	08B	161	5-G18
96 90 686	08B	157	5-G14
96 90 686	08B	161	5-G18
96 90 694	08B	157	5-G14
96 90 702	08B	157	5-G14
96 90 702	08B	161	5-G18
96 90 710	08B	157	5-G14
96 90 728	08B	157	5-G14
96 90 728	08B	161	5-G18
96 90 736	08B	157	5-G14
96 90 736	08B	161	5-G18
96 90 744	08B	157	5-G14
96 90 751	08B	157	5-G14
96 90 751	08B	161	5-G18
96 90 769	08B	157	5-G14
96 90 777	08B	157	5-G14
96 90 777	08B	161	5-G18
96 90 785	08B	157	5-G14
96 90 785	08B	161	5-G18
96 90 926	08B	159	5-G16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 90 926	08B	163	5-G20
96 90 959	08B	231	5-J16
96 90 967	08B	231	5-J16
96 90 983	08B	231	5-J16
96 91 007	08B	231	5-J16
96 91 114	08B	233	5-J18
96 91 122	08B	233	5-J18
96 91 189	08B	013	5-A14
96 91 197	08B	013	5-A14
96 91 254	08B	169	5-H02
96 91 262	08B	169	5-H02
96 91 320	08B	215	5-I24
96 91 353	08B	205	5-I14
96 91 361	08B	207	5-I16
96 91 379	08B	209	5-I18
96 91 387	08B	209	5-I18
96 91 841	08B	157	5-G14
96 91 858	08B	157	5-G14
96 91 866	08B	157	5-G14
96 92 401	08B	157	5-G14
96 92 419	08B	157	5-G14
96 92 427	08B	157	5-G14
96 92 435	08B	157	5-G14
96 92 443	08B	157	5-G14
96 92 724	08B	233	5-J18
96 92 732	08B	053	5-C06
96 92 773	08B	159	5-G16
96 92 781	08B	159	5-G16
96 92 781	08B	163	5-G20
96 92 799	08B	159	5-G16
96 92 807	08B	159	5-G16
96 92 807	08B	163	5-G20
96 92 815	08B	241	5-K02
96 92 849	03A	089	2-D18
96 92 864	08B	171	5-H04
96 92 906	08B	171	5-H04
96 92 906	08B	185	5-H18
96 92 906	08B	197	5-I06
96 92 906	08B	245	5-K06
96 92 922	08B	137	5-F18
96 92 930	08B	137	5-F18
96 93 094	08B	205	5-I14
96 93 094	08B	213	5-I22
96 93 177	08B	215	5-I24
96 93 763	08B	017	5-A18
96 93 946	08B	233	5-J18
96 93 953	08B	233	5-J18
96 93 961	08B	233	5-J18
96 93 979	08B	233	5-J18
96 93 987	08B	233	5-J18
96 93 995	08B	233	5-J18
96 94 001	08B	233	5-J18
96 94 019	08B	233	5-J18
96 94 027	08B	233	5-J18
96 94 035	08B	233	5-J18
96 94 290	08B	233	5-J18
96 94 308	08B	233	5-J18
96 94 316	08B	233	5-J18
96 94 324	08B	233	5-J18
96 94 332	08B	233	5-J18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 94 365	08A	089	4-I18
96 94 373	08A	089	4-I18
96 94 415	08B	035	5-B12
96 94 423	08B	035	5-B12
96 94 431	08B	037	5-B14
96 94 449	08B	037	5-B14
96 94 472	08B	033	5-B10
96 94 514	08B	183	5-H16
96 94 522	08B	183	5-H16
96 94 530	08B	183	5-H16
96 94 571	08B	173	5-H06
96 94 571	08B	187	5-H20
96 94 589	08B	173	5-H06
96 94 589	08B	187	5-H20
96 94 670	08B	095	5-D24
96 94 670	08B	119	5-E24
96 94 670	08B	129	5-F10
96 94 688	08B	119	5-E24
96 94 688	08B	129	5-F10
96 94 696	08A	089	4-I18
96 94 704	08A	087	4-I16
96 94 704	08A	089	4-I18
96 94 704	08A	129	4-K10
96 94 712	08A	089	4-I18
96 94 720	08A	089	4-I18
96 94 738	08B	125	5-F06
96 94 738	08B	133	5-F14
96 94 746	08B	101	5-E06
96 94 746	08B	113	5-E18
96 94 746	08B	125	5-F06
96 94 746	08B	133	5-F14
96 94 894	08B	179	5-H12
96 94 894	08B	189	5-H22
96 94 894	08B	251	5-K12
96 94 902	08B	179	5-H12
96 94 902	08B	189	5-H22
96 94 902	08B	251	5-K12
96 94 936	08B	239	5-J24
96 94 951	08B	239	5-J24
96 94 969	08B	185	5-H18
96 94 969	08B	197	5-I06
96 94 969	08B	245	5-K06
96 95 081	08B	109	5-E14
96 95 081	08B	111	5-E16
96 95 081	08B	115	5-E20
96 95 081	08B	117	5-E22
96 95 081	08B	121	5-F02
96 95 081	08B	123	5-F04
96 95 081	08B	127	5-F08
96 95 081	08B	131	5-F12
96 95 081	08B	133	5-F14
96 95 099	09	015	6-C16
96 95 172	08B	065	5-C18
96 95 172	08B	077	5-D06
96 95 214	08B	063	5-C16
96 95 214	08B	073	5-D02
96 95 248	08B	203	5-I12
96 95 305	08B	203	5-I12
96 95 313	08B	203	5-I12
96 95 321	08B	203	5-I12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 95 347	08B	203	5-I12
96 95 354	08B	203	5-I12
96 95 768	08B	201	5-I10
96 95 909	08B	197	5-I06
96 95 917	08B	197	5-I06
96 96 030	08B	205	5-I14
96 96 048	08B	205	5-I14
96 96 170	08B	059	5-C12
96 96 188	08B	061	5-C14
96 96 196	08B	059	5-C12
96 96 204	08B	063	5-C16
96 96 212	08B	061	5-C14
96 96 220	08B	059	5-C12
96 96 238	08B	061	5-C14
96 96 246	08B	059	5-C12
96 96 253	08B	063	5-C16
96 96 261	08B	061	5-C14
96 96 279	08B	059	5-C12
96 96 287	08B	061	5-C14
96 96 295	08B	059	5-C12
96 96 303	08B	063	5-C16
96 96 311	08B	061	5-C14
96 96 329	08B	063	5-C16
96 96 337	08B	059	5-C12
96 96 477	08B	063	5-C16
96 96 493	08B	063	5-C16
96 96 493	08B	073	5-D02
96 96 600	08B	189	5-H22
96 96 600	08B	201	5-I10
96 96 618	08B	171	5-H04
96 96 618	08B	189	5-H22
96 96 618	08B	201	5-I10
96 96 626	03A	081	2-D10
96 96 642	08B	209	5-I18
96 96 659	08B	209	5-I18
96 96 667	08B	205	5-I14
96 96 675	08B	205	5-I14
96 96 691	08B	209	5-I18
96 96 691	08B	215	5-I24
96 96 758	08B	205	5-I14
96 96 766	08B	205	5-I14
96 97 020	08B	059	5-C12
96 97 038	08B	061	5-C14
96 97 046	08B	059	5-C12
96 97 053	08B	063	5-C16
96 97 061	08B	061	5-C14
96 97 079	08B	059	5-C12
96 97 087	08B	061	5-C14
96 97 095	08B	059	5-C12
96 97 103	08B	063	5-C16
96 97 111	08B	061	5-C14
96 97 129	08B	059	5-C12
96 97 137	08B	061	5-C14
96 97 145	08B	059	5-C12
96 97 152	08B	063	5-C16
96 97 160	08B	061	5-C14
96 97 178	08B	059	5-C12
96 97 186	08B	061	5-C14
96 97 194	08B	059	5-C12
96 97 202	08B	063	5-C16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 97 210	08B	061	5-C14
96 97 228	08B	063	5-C16
96 97 236	08B	059	5-C12
96 97 244	08B	063	5-C16
96 97 244	08B	073	5-D02
96 97 251	08B	059	5-C12
96 97 269	08B	061	5-C14
96 97 269	08B	071	5-C24
96 97 277	08B	059	5-C12
96 97 285	08B	063	5-C16
96 97 285	08B	073	5-D02
96 97 293	08B	061	5-C14
96 97 293	08B	071	5-C24
96 97 301	08B	059	5-C12
96 97 319	08B	061	5-C14
96 97 319	08B	071	5-C24
96 97 327	08B	059	5-C12
96 97 335	08B	063	5-C16
96 97 335	08B	073	5-D02
96 97 343	08B	061	5-C14
96 97 343	08B	071	5-C24
96 97 350	08B	059	5-C12
96 97 368	08B	061	5-C14
96 97 368	08B	071	5-C24
96 97 376	08B	059	5-C12
96 97 384	08B	063	5-C16
96 97 384	08B	073	5-D02
96 97 392	08B	061	5-C14
96 97 392	08B	071	5-C24
96 97 400	08B	059	5-C12
96 97 418	08B	061	5-C14
96 97 418	08B	071	5-C24
96 97 426	08B	059	5-C12
96 97 434	08B	063	5-C16
96 97 434	08B	073	5-D02
96 97 442	08B	061	5-C14
96 97 442	08B	071	5-C24
96 97 459	08B	205	5-I14
96 97 517	08B	059	5-C12
96 97 525	08B	173	5-H06
96 97 525	08B	187	5-H20
96 97 525	08B	201	5-I10
96 97 558	08B	223	5-J08
96 97 566	08B	223	5-J08
96 97 574	08B	223	5-J08
96 97 582	08B	223	5-J08
96 97 590	08B	223	5-J08
96 97 608	08B	223	5-J08
96 97 616	08B	225	5-J10
96 97 624	08B	225	5-J10
96 97 798	08B	243	5-K04
96 97 848	08B	215	5-I24
96 97 905	08B	181	5-H14
96 97 913	08B	181	5-H14
96 97 921	08B	181	5-H14
96 97 939	08B	183	5-H16
96 97 939	08B	197	5-I06
96 97 939	08B	245	5-K06
96 98 036	03A	061	2-C04
96 98 036	03A	175	2-H08

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-F01 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 98 044	08A	119	4-J24
96 98 051	08A	119	4-J24
96 98 069	08A	119	4-J24
96 98 077	08A	071	4-H24
96 98 085	08A	119	4-J24
96 98 093	08A	119	4-J24
96 98 101	08A	119	4-J24
96 98 119	08A	119	4-J24
96 98 168	08A	115	4-J20
96 98 176	08A	115	4-J20
96 98 184	08A	117	4-J22
96 98 259	08B	179	5-H12
96 98 259	08B	251	5-K12
96 98 309	08B	021	5-A22
96 98 309	08B	251	5-K12
96 98 341	08A	115	4-J20
96 98 358	08A	115	4-J20
96 98 374	08A	081	4-I10
96 98 374	08A	125	4-K06
96 98 374	08A	129	4-K10
96 98 416	08A	099	4-J04
96 98 416	08A	133	4-K14
96 98 424	08A	099	4-J04
96 98 424	08A	133	4-K14
96 98 432	08A	099	4-J04
96 98 432	08A	133	4-K14
96 98 440	08A	099	4-J04
96 98 440	08A	133	4-K14
96 98 457	08A	099	4-J04
96 98 457	08A	133	4-K14
96 98 465	08A	119	4-J24
96 98 481	08A	115	4-J20
96 98 499	08A	115	4-J20
96 98 507	08A	117	4-J22
96 98 515	08A	037	4-G14
96 98 515	08A	125	4-K06
96 98 523	08A	037	4-G14
96 98 523	08A	125	4-K06
96 98 853	08A	115	4-J20
96 98 861	08A	115	4-J20
96 98 879	08A	117	4-J22
96 98 887	08B	181	5-H14
96 98 895	08B	181	5-H14
96 98 903	08B	181	5-H14
96 98 911	08B	181	5-H14
96 98 929	08B	181	5-H14
96 98 937	08B	181	5-H14
96 98 945	08B	181	5-H14
96 98 952	08B	181	5-H14
96 98 960	08B	181	5-H14
96 98 978	08B	181	5-H14
96 98 986	08B	181	5-H14
96 98 994	08B	181	5-H14
96 99 000	08B	215	5-I24
96 99 026	08B	215	5-I24
96 99 034	08B	209	5-I18
96 99 042	08B	209	5-I18
96 99 059	08B	209	5-I18
96 99 067	08B	209	5-I18
96 99 075	08B	209	5-I18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 99 083	08B	209	5-I18
96 99 091	08B	213	5-I22
96 99 117	08B	213	5-I22
96 99 125	08B	205	5-I14
96 99 133	08B	205	5-I14
96 99 141	08B	205	5-I14
96 99 158	08B	205	5-I14
96 99 166	08B	205	5-I14
96 99 174	08B	205	5-I14
96 99 182	08B	211	5-I20
96 99 190	08B	211	5-I20
96 99 208	08B	215	5-I24
96 99 216	08B	217	5-J02
96 99 281	08B	197	5-I06
96 99 299	08B	197	5-I06
96 99 307	08B	197	5-I06
96 99 315	08B	197	5-I06
97 03 232	08A	079	4-I08
97 06 870	09	013	6-C14
97 08 561	08B	043	5-B20
97 08 561	08B	049	5-C02
97 08 561	08B	065	5-C18
97 14 817	08B	017	5-A18
97 19 790	08B	207	5-I16
97 19 790	08B	213	5-I22
97 19 808	08B	207	5-I16
97 19 808	08B	213	5-I22
97 21 481	08B	171	5-H04
97 21 481	08B	185	5-H18
97 21 481	08B	197	5-I06
97 21 481	08B	245	5-K06
97 21 499	08B	171	5-H04
97 21 499	08B	185	5-H18
97 21 499	08B	197	5-I06
97 21 499	08B	199	5-I08
97 21 499	08B	205	5-I14
97 21 499	08B	209	5-I18
97 21 499	08B	213	5-I22
97 21 499	08B	215	5-I24
97 21 499	08B	245	5-K06
97 21 598	08B	211	5-I20
97 21 598	08B	215	5-I24
97 28 676	08B	053	5-C06
97 31 316	09	013	6-C14
97 33 338	08B	221	5-J06
97 38 303	09	013	6-C14
97 40 663	08B	245	5-K06
97 40 663	08B	247	5-K08
97 40 838	08B	041	5-B18
97 40 838	08B	047	5-B24
97 40 838	08B	053	5-C06
97 40 838	08B	063	5-C16
97 40 838	08B	075	5-D04
97 40 853	08B	063	5-C16
97 41 018	08B	041	5-B18
97 41 018	08B	047	5-B24
97 41 018	08B	053	5-C06
97 41 018	08B	065	5-C18
97 41 042	08B	043	5-B20
97 41 042	08B	049	5-C02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 41 489	08B	041	5-B18
97 41 489	08B	049	5-C02
97 41 489	08B	053	5-C06
97 41 489	08B	065	5-C18
97 41 489	08B	077	5-D06
97 46 264	08A	117	4-J22
97 46 298	08A	123	4-K04
97 46 306	08A	123	4-K04
97 46 314	08A	123	4-K04
97 46 363	08A	119	4-J24
97 46 389	08A	071	4-H24
97 46 397	08A	071	4-H24
97 46 405	08A	071	4-H24
97 46 439	08A	071	4-H24
97 46 454	08A	071	4-H24
97 46 488	08A	121	4-K02
97 46 504	08A	121	4-K02
97 46 587	08A	119	4-J24
97 46 595	08A	119	4-J24
97 46 603	08A	071	4-H24
97 46 611	08A	121	4-K02
97 46 629	08A	121	4-K02
97 46 637	08A	121	4-K02
97 46 645	08A	121	4-K02
97 46 652	08A	121	4-K02
97 46 652	08A	123	4-K04
97 46 660	08A	121	4-K02
97 46 678	08A	121	4-K02
97 46 686	08A	121	4-K02
97 46 736	08B	207	5-I16
97 46 736	08B	211	5-I20
97 46 736	08B	213	5-I22
97 46 736	08B	217	5-J02
97 46 736	08B	251	5-K12
97 46 801	08A	119	4-J24
97 46 819	08A	119	4-J24
97 46 835	08A	123	4-K04
97 46 843	08A	123	4-K04
97 46 850	08A	123	4-K04
97 46 884	08A	123	4-K04
97 46 892	08A	123	4-K04
97 46 900	08A	123	4-K04
97 46 926	08A	123	4-K04
97 46 934	08A	123	4-K04
97 46 959	08A	123	4-K04
97 46 967	08A	123	4-K04
97 46 975	08A	119	4-J24
97 46 975	08A	123	4-K04
97 50 027	08B	085	5-D14
97 50 035	08B	085	5-D14
97 50 399	08B	085	5-D14
97 50 423	08B	089	5-D18
97 50 431	08B	089	5-D18
97 50 753	08B	169	5-H02
97 51 074	08B	029	5-B06
97 51 231	08B	213	5-I22
97 51 249	08B	207	5-I16
97 51 249	08B	211	5-I20
97 51 298	08B	215	5-I24
97 51 314	08B	211	5-I20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 51 314	08B	215	5-I24
97 51 322	08B	215	5-I24
97 51 579	08B	209	5-I18
97 51 587	08B	209	5-I18
97 51 710	08B	205	5-I14
97 51 728	08B	205	5-I14
97 51 736	08B	209	5-I18
97 51 744	08B	209	5-I18
97 51 876	08B	209	5-I18
97 51 884	08B	209	5-I18
97 52 007	08B	205	5-I14
97 52 239	08B	205	5-I14
97 52 379	08B	213	5-I22
97 52 395	08B	213	5-I22
97 53 153	08A	087	4-I16
97 53 161	08A	087	4-I16
97 53 419	08A	085	4-I14
97 53 419	08A	087	4-I16
97 53 427	08A	085	4-I14
97 53 427	08A	087	4-I16
97 53 724	08B	229	5-J14
97 54 557	08B	211	5-I20
97 54 672	08B	137	5-F18
97 54 680	08B	137	5-F18
97 54 755	08A	053	4-H06
97 54 755	08A	057	4-H10
97 54 763	08A	053	4-H06
97 54 763	08A	057	4-H10
97 54 771	08A	045	4-G22
97 54 771	08A	051	4-H04
97 54 839	08B	137	5-F18
97 54 847	08B	219	5-J04
97 55 075	08B	013	5-A14
97 55 117	08B	013	5-A14
97 55 125	08B	013	5-A14
97 55 216	08B	017	5-A18
97 55 257	08B	021	5-A22
97 55 729	08B	005	5-A06
97 55 935	08B	209	5-I18
97 56 776	08B	169	5-H02
97 56 784	08B	169	5-H02
97 56 792	08B	169	5-H02
97 56 800	08B	169	5-H02
97 56 826	08B	165	5-G22
97 56 834	08B	165	5-G22
97 56 842	08B	165	5-G22
97 56 859	08B	165	5-G22
97 56 867	08B	165	5-G22
97 56 875	08B	165	5-G22
97 56 974	08B	165	5-G22
97 57 063	08B	165	5-G22
97 57 071	08B	165	5-G22
97 57 089	08B	165	5-G22
97 57 097	08B	167	5-G24
97 57 196	08B	031	5-B08
97 57 618	08B	035	5-B12
97 57 675	08B	035	5-B12
97 57 683	08B	035	5-B12
97 57 691	08B	035	5-B12
97 57 709	08B	035	5-B12

6-F02 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 57 725	08B	035	5-B12
97 57 733	08B	035	5-B12
97 57 741	08B	035	5-B12
97 57 766	08B	035	5-B12
97 58 145	08A	053	4-H06
97 58 186	08A	055	4-H08
97 58 608	08B	173	5-H06
97 58 608	08B	189	5-H22
97 58 715	08B	171	5-H04
97 58 715	08B	189	5-H22
97 58 715	08B	201	5-I10
97 58 871	08B	175	5-H08
97 58 947	08B	173	5-H06
97 58 947	08B	187	5-H20
97 58 954	08B	173	5-H06
97 58 988	08B	173	5-H06
97 59 069	08B	173	5-H06
97 59 069	08B	187	5-H20
97 59 069	08B	201	5-I10
97 59 077	08B	173	5-H06
97 59 077	08B	187	5-H20
97 59 077	08B	201	5-I10
97 59 234	08B	013	5-A14
97 59 671	08A	045	4-G22
97 59 671	08A	051	4-H04
97 59 689	08A	045	4-G22
97 59 689	08A	051	4-H04
97 59 846	08B	005	5-A06
97 59 861	08B	021	5-A22
97 60 133	08B	031	5-B08
97 60 141	08B	029	5-B06
97 60 372	08B	017	5-A18
97 60 380	08B	017	5-A18
97 60 497	08B	031	5-B08
97 60 521	08B	037	5-B14
97 60 596	08B	027	5-B04
97 60 695	08B	029	5-B06
97 61 495	08B	209	5-I18
97 61 495	08B	215	5-I24
97 61 552	08B	017	5-A18
97 61 826	08B	209	5-I18
97 61 842	08B	205	5-I14
97 61 859	08B	205	5-I14
97 61 867	08B	213	5-I22
97 61 933	08B	005	5-A06
97 61 941	08B	013	5-A14
97 61 974	08B	211	5-I20
97 61 974	08B	245	5-K06
97 62 030	08A	053	4-H06
97 62 030	08A	057	4-H10
97 62 048	08A	053	4-H06
97 62 048	08A	059	4-H12
97 62 519	08B	017	5-A18
97 62 543	08B	015	5-A16
97 63 228	08B	027	5-B04
97 63 392	08B	239	5-J24
97 63 442	08B	037	5-B14
97 63 624	08B	173	5-H06
97 63 624	08B	189	5-H22
97 63 624	08B	201	5-I10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 63 624	08B	247	5-K08
97 63 624	08B	249	5-K10
97 63 632	08B	173	5-H06
97 63 632	08B	189	5-H22
97 63 632	08B	201	5-I10
97 63 632	08B	247	5-K08
97 63 632	08B	249	5-K10
97 63 657	08B	173	5-H06
97 63 970	08B	033	5-B10
97 64 002	08B	033	5-B10
97 64 044	05	025	4-B02
97 64 143	08B	031	5-B08
97 64 150	08B	031	5-B08
97 64 200	08B	027	5-B04
97 64 259	08B	083	5-D12
97 64 267	08B	083	5-D12
97 64 275	08B	087	5-D16
97 64 275	08B	097	5-E02
97 64 275	08B	099	5-E04
97 64 283	08B	087	5-D16
97 64 283	08B	097	5-E02
97 64 283	08B	099	5-E04
97 64 366	08B	239	5-J24
97 64 457	08B	239	5-J24
97 64 465	08B	239	5-J24
97 64 762	08B	017	5-A18
97 64 853	08B	219	5-J04
97 65 132	08B	175	5-H08
97 65 132	08B	189	5-H22
97 65 157	08A	083	4-I12
97 65 181	08B	227	5-J12
97 65 215	08B	219	5-J04
97 65 272	08B	211	5-I20
97 65 272	08B	245	5-K06
97 65 314	08B	175	5-H08
97 65 330	08B	173	5-H06
97 65 355	08B	173	5-H06
97 65 553	03A	053	2-C06
97 65 595	03A	051	2-C04
97 65 603	03A	051	2-C04
97 65 611	08B	169	5-H02
97 66 114	03A	053	2-C06
97 66 171	08B	013	5-A14
97 67 179	08B	017	5-A18
97 67 294	08B	013	5-A14
97 67 302	08B	013	5-A14
97 67 377	08B	013	5-A14
97 67 385	08B	013	5-A14
97 67 518	08B	175	5-H08
97 67 518	08B	189	5-H22
97 67 526	08B	013	5-A14
97 67 534	08B	013	5-A14
97 67 559	08A	059	4-H12
97 67 567	08B	021	5-A22
97 67 575	08B	021	5-A22
97 67 641	08B	227	5-J12
97 67 682	08A	063	4-H16
97 67 781	08B	219	5-J04
97 67 799	08B	219	5-J04
97 67 807	08B	171	5-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 67 815	08B	171	5-H04
97 67 815	08B	193	5-I02
97 67 815	08B	245	5-K06
97 67 955	03A	043	2-B20
97 67 963	03A	043	2-B20
97 67 971	08B	219	5-J04
97 68 169	08B	019	5-A20
97 68 177	08B	019	5-A20
97 68 185	08B	019	5-A20
97 68 193	08B	019	5-A20
97 68 201	08B	019	5-A20
97 68 219	08B	019	5-A20
97 68 227	08B	019	5-A20
97 68 235	08B	019	5-A20
97 68 243	08B	005	5-A06
97 68 250	08B	007	5-A08
97 68 268	08B	007	5-A08
97 68 276	08B	007	5-A08
97 68 284	08B	007	5-A08
97 68 292	08B	007	5-A08
97 68 300	08B	007	5-A08
97 68 326	08B	007	5-A08
97 68 334	08B	007	5-A08
97 68 342	08B	007	5-A08
97 68 359	08B	007	5-A08
97 68 367	08B	007	5-A08
97 68 375	08B	007	5-A08
97 68 383	08B	007	5-A08
97 68 391	08B	009	5-A10
97 68 409	08B	015	5-A16
97 68 417	08B	015	5-A16
97 68 425	08B	015	5-A16
97 68 433	08B	015	5-A16
97 68 441	08B	011	5-A12
97 68 458	08B	011	5-A12
97 68 474	08B	011	5-A12
97 68 482	08B	011	5-A12
97 68 490	08B	011	5-A12
97 68 516	08B	011	5-A12
97 68 532	08B	005	5-A06
97 68 540	08B	005	5-A06
97 68 557	08B	005	5-A06
97 68 565	08B	005	5-A06
97 68 573	08B	005	5-A06
97 68 581	08B	005	5-A06
97 68 599	08B	005	5-A06
97 69 084	08B	141	5-F22
97 69 084	08B	145	5-G02
97 69 084	08B	153	5-G10
97 69 092	08B	141	5-F22
97 69 092	08B	145	5-G02
97 69 092	08B	153	5-G10
97 69 100	08A	053	4-H06
97 69 118	08A	053	4-H06
97 69 126	08A	057	4-H10
97 69 134	08A	057	4-H10
97 69 167	08B	013	5-A14
97 69 175	08B	013	5-A14
97 69 183	08B	021	5-A22
97 69 209	08B	171	5-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 69 209	08B	185	5-H18
97 69 209	08B	197	5-I06
97 69 209	08B	245	5-K06
97 69 217	08B	171	5-H04
97 69 217	08B	185	5-H18
97 69 217	08B	197	5-I06
97 69 217	08B	209	5-I18
97 69 217	08B	215	5-I24
97 69 217	08B	245	5-K06
97 69 225	08B	171	5-H04
97 69 225	08B	185	5-H18
97 69 225	08B	197	5-I06
97 69 225	08B	245	5-K06
97 69 902	08B	179	5-H12
97 69 910	08B	179	5-H12
97 70 280	08B	227	5-J12
97 70 306	08B	227	5-J12
97 70 561	08B	229	5-J14
97 70 579	08B	229	5-J14
97 70 595	08B	229	5-J14
97 70 603	08B	229	5-J14
97 70 611	08B	229	5-J14
97 70 629	08B	229	5-J14
97 70 637	08B	229	5-J14
97 70 645	08B	229	5-J14
97 70 918	08B	173	5-H06
97 70 918	08B	187	5-H20
97 70 918	08B	201	5-I10
97 70 926	08B	173	5-H06
97 70 926	08B	187	5-H20
97 70 926	08B	201	5-I10
97 70 934	08B	173	5-H06
97 70 934	08B	187	5-H20
97 70 934	08B	201	5-I10
97 70 942	08B	173	5-H06
97 70 942	08B	187	5-H20
97 70 942	08B	201	5-I10
97 71 189	08B	167	5-G24
97 71 205	08B	173	5-H06
97 71 205	08B	187	5-H20
97 71 288	08B	215	5-I24
97 71 296	08B	205	5-I14
97 71 320	08B	145	5-G02
97 71 320	08B	153	5-G10
97 71 320	08B	159	5-G16
97 71 320	08B	161	5-G18
97 71 320	08B	219	5-J04
97 71 320	08C	013	6-A14
97 71 429	08B	239	5-J24
97 71 734	08B	165	5-G22
97 71 742	08B	165	5-G22
97 71 759	08B	165	5-G22
97 71 767	08B	169	5-H02
97 71 874	08B	167	5-G24
97 71 882	08B	167	5-G24
97 71 890	08B	167	5-G24
97 71 924	08B	167	5-G24
97 71 932	08B	167	5-G24
97 71 940	08B	169	5-H02
97 71 957	08B	169	5-H02

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-F03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 71 965	08B	169	5-H02
97 71 973	08B	169	5-H02
97 72 468	08B	035	5-B12
97 72 476	08B	035	5-B12
97 72 484	08B	035	5-B12
97 72 591	08B	227	5-J12
97 72 609	08B	227	5-J12
97 72 633	08B	141	5-F22
97 72 641	08B	141	5-F22
97 72 658	08B	141	5-F22
97 72 666	08B	141	5-F22
97 72 674	08B	141	5-F22
97 72 682	08B	141	5-F22
97 72 799	08B	141	5-F22
97 72 807	08B	141	5-F22
97 72 815	08B	141	5-F22
97 72 823	08B	141	5-F22
97 72 831	08B	141	5-F22
97 72 849	08B	141	5-F22
97 72 997	08B	141	5-F22
97 73 003	08B	141	5-F22
97 73 011	08B	141	5-F22
97 73 029	08B	141	5-F22
97 73 037	08B	141	5-F22
97 73 045	08B	141	5-F22
97 74 175	08B	205	5-I14
97 74 183	08B	205	5-I14
97 74 217	08B	219	5-J04
97 74 258	08B	219	5-J04
97 74 266	08B	219	5-J04
97 74 282	08B	219	5-J04
97 74 290	08B	219	5-J04
97 74 381	08B	041	5-B18
97 74 381	08B	045	5-B22
97 74 381	08B	055	5-C08
97 74 399	08B	041	5-B18
97 74 399	08B	045	5-B22
97 74 399	08B	057	5-C10
97 74 415	08B	041	5-B18
97 74 415	08B	045	5-B22
97 74 415	08B	057	5-C10
97 74 415	08B	061	5-C14
97 74 415	08B	071	5-C24
97 74 423	08B	041	5-B18
97 74 423	08B	045	5-B22
97 74 423	08B	055	5-C08
97 74 423	08B	059	5-C12
97 74 431	08B	041	5-B18
97 74 431	08B	047	5-B24
97 74 431	08B	057	5-C10
97 74 456	08A	063	4-H16
97 74 456	08A	065	4-H18
97 74 944	08B	041	5-B18
97 74 944	08B	045	5-B22
97 74 944	08B	057	5-C10
97 74 951	08B	041	5-B18
97 74 951	08B	045	5-B22
97 74 951	08B	055	5-C08
97 74 969	08B	041	5-B18
97 74 969	08B	047	5-B24
97 74 969	08B	057	5-C10
97 74 977	08B	041	5-B18
97 74 977	08B	045	5-B22
97 74 977	08B	055	5-C08
97 74 985	08B	041	5-B18
97 74 985	08B	045	5-B22
97 74 985	08B	057	5-C10
97 75 008	08B	041	5-B18
97 75 008	08B	045	5-B22
97 75 008	08B	057	5-C10
97 75 016	08B	041	5-B18
97 75 016	08B	045	5-B22
97 75 016	08B	055	5-C08
97 75 024	08B	041	5-B18
97 75 024	08B	047	5-B24
97 75 024	08B	057	5-C10
97 75 032	08B	041	5-B18
97 75 032	08B	045	5-B22
97 75 032	08B	055	5-C08
97 75 040	08B	041	5-B18
97 75 040	08B	045	5-B22
97 75 040	08B	057	5-C10
97 75 065	08B	041	5-B18
97 75 065	08B	045	5-B22
97 75 065	08B	057	5-C10
97 75 073	08B	041	5-B18
97 75 073	08B	045	5-B22
97 75 073	08B	055	5-C08
97 75 081	08B	041	5-B18
97 75 081	08B	047	5-B24
97 75 081	08B	057	5-C10
97 75 099	08B	041	5-B18
97 75 099	08B	045	5-B22
97 75 099	08B	055	5-C08
97 75 107	08B	041	5-B18
97 75 107	08B	045	5-B22
97 75 107	08B	057	5-C10
97 75 123	08B	041	5-B18
97 75 123	08B	045	5-B22
97 75 123	08B	057	5-C10
97 75 131	08B	041	5-B18
97 75 131	08B	045	5-B22
97 75 131	08B	055	5-C08
97 75 149	08B	041	5-B18
97 75 149	08B	047	5-B24
97 75 149	08B	057	5-C10
97 75 156	08B	041	5-B18
97 75 156	08B	045	5-B22
97 75 156	08B	055	5-C08
97 75 164	08B	041	5-B18
97 75 164	08B	045	5-B22
97 75 164	08B	057	5-C10
97 75 180	08B	041	5-B18
97 75 180	08B	045	5-B22
97 75 180	08B	057	5-C10
97 75 180	08B	061	5-C14
97 75 180	08B	071	5-C24
97 75 198	08B	041	5-B18
97 75 198	08B	045	5-B22
97 75 198	08B	055	5-C08
97 75 198	08B	059	5-C12
97 75 206	08B	041	5-B18
97 75 206	08B	047	5-B24
97 75 206	08B	057	5-C10
97 75 214	08B	041	5-B18
97 75 214	08B	045	5-B22
97 75 214	08B	055	5-C08
97 75 222	08B	041	5-B18
97 75 222	08B	045	5-B22
97 75 222	08B	057	5-C10
97 75 230	08B	219	5-J04
97 75 230	08B	221	5-J06
97 75 271	08B	041	5-B18
97 75 271	08B	045	5-B22
97 75 271	08B	057	5-C10
97 75 289	08B	041	5-B18
97 75 289	08B	045	5-B22
97 75 289	08B	055	5-C08
97 75 297	08B	041	5-B18
97 75 297	08B	047	5-B24
97 75 297	08B	057	5-C10
97 75 305	08B	041	5-B18
97 75 305	08B	045	5-B22
97 75 305	08B	055	5-C08
97 75 313	08B	041	5-B18
97 75 313	08B	045	5-B22
97 75 313	08B	057	5-C10
97 75 339	08B	041	5-B18
97 75 339	08B	045	5-B22
97 75 339	08B	057	5-C10
97 75 347	08B	041	5-B18
97 75 347	08B	045	5-B22
97 75 347	08B	055	5-C08
97 75 354	08B	041	5-B18
97 75 354	08B	047	5-B24
97 75 354	08B	057	5-C10
97 75 362	08B	041	5-B18
97 75 362	08B	045	5-B22
97 75 362	08B	055	5-C08
97 75 370	08B	041	5-B18
97 75 370	08B	045	5-B22
97 75 370	08B	057	5-C10
97 75 453	08B	041	5-B18
97 75 453	08B	045	5-B22
97 75 453	08B	057	5-C10
97 75 453	08B	061	5-C14
97 75 453	08B	071	5-C24
97 75 461	08B	041	5-B18
97 75 461	08B	045	5-B22
97 75 461	08B	055	5-C08
97 75 461	08B	059	5-C12
97 75 479	08B	041	5-B18
97 75 479	08B	047	5-B24
97 75 479	08B	057	5-C10
97 75 487	08B	041	5-B18
97 75 487	08B	045	5-B22
97 75 487	08B	055	5-C08
97 75 495	08B	041	5-B18
97 75 495	08B	045	5-B22
97 75 495	08B	057	5-C10
97 75 511	08B	177	5-H10
97 75 511	08B	191	5-H24
97 75 529	08B	177	5-H10
97 75 537	08B	177	5-H10
97 75 552	08B	177	5-H10
97 75 552	08B	191	5-H24
97 75 560	08B	177	5-H10
97 75 578	08B	177	5-H10
97 75 594	08B	179	5-H12
97 75 594	08B	193	5-I02
97 75 602	08B	179	5-H12
97 75 610	08B	179	5-H12
97 75 636	08B	179	5-H12
97 75 636	08B	193	5-I02
97 75 644	08B	179	5-H12
97 75 651	08B	179	5-H12
97 75 750	08B	035	5-B12
97 75 784	08B	035	5-B12
97 75 792	08B	035	5-B12
97 75 800	08B	035	5-B12
97 75 818	08B	035	5-B12
97 75 842	08B	035	5-B12
97 75 867	08B	035	5-B12
97 75 875	08B	035	5-B12
97 75 883	08B	035	5-B12
97 75 917	08B	033	5-B10
97 75 925	08B	033	5-B10
97 75 941	08B	033	5-B10
97 76 006	08A	099	4-J04
97 76 006	08B	021	5-A22
97 76 006	08B	037	5-B14
97 76 006	08B	141	5-F22
97 76 006	08B	145	5-G02
97 76 006	08B	251	5-K12
97 76 014	08B	085	5-D14
97 76 014	08B	089	5-D18
97 76 105	08A	053	4-H06
97 76 105	08A	057	4-H10
97 76 121	08A	053	4-H06
97 76 121	08A	057	4-H10
97 76 139	08A	053	4-H06
97 76 139	08A	057	4-H10
97 76 188	08A	053	4-H06
97 76 188	08A	057	4-H10
97 76 196	08B	083	5-D12
97 76 196	08B	087	5-D16
97 76 196	08B	091	5-D20
97 76 196	08B	093	5-D22
97 76 196	08B	097	5-E02
97 76 196	08B	099	5-E04
97 76 196	08B	103	5-E08
97 76 196	08B	105	5-E10
97 76 329	08B	083	5-D12
97 76 337	08B	083	5-D12
97 76 345	08B	083	5-D12
97 76 352	08B	083	5-D12
97 76 360	08B	083	5-D12
97 76 378	08B	083	5-D12
97 76 402	08B	083	5-D12
97 76 402	08B	093	5-D22

6-F04 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 76 402	08B	105	5-E10
97 76 402	08B	117	5-E22
97 76 402	08B	129	5-F10
97 76 410	08B	083	5-D12
97 76 410	08B	093	5-D22
97 76 410	08B	105	5-E10
97 76 410	08B	117	5-E22
97 76 410	08B	129	5-F10
97 76 428	08B	083	5-D12
97 76 428	08B	093	5-D22
97 76 428	08B	105	5-E10
97 76 428	08B	117	5-E22
97 76 436	08B	083	5-D12
97 76 436	08B	093	5-D22
97 76 436	08B	105	5-E10
97 76 436	08B	117	5-E22
97 76 444	08B	085	5-D14
97 76 444	08B	095	5-D24
97 76 444	08B	105	5-E10
97 76 451	08B	085	5-D14
97 76 451	08B	095	5-D24
97 76 451	08B	105	5-E10
97 76 477	08B	085	5-D14
97 76 477	08B	087	5-D16
97 76 477	08B	095	5-D24
97 76 477	08B	101	5-E06
97 76 477	08B	107	5-E12
97 76 477	08B	113	5-E18
97 76 477	08B	117	5-E22
97 76 477	08B	125	5-F06
97 76 477	08B	129	5-F10
97 76 477	08B	133	5-F14
97 76 485	08B	085	5-D14
97 76 485	08B	087	5-D16
97 76 485	08B	095	5-D24
97 76 485	08B	101	5-E06
97 76 485	08B	107	5-E12
97 76 485	08B	113	5-E18
97 76 485	08B	117	5-E22
97 76 485	08B	125	5-F06
97 76 493	08B	085	5-D14
97 76 493	08B	087	5-D16
97 76 493	08B	095	5-D24
97 76 493	08B	101	5-E06
97 76 493	08B	107	5-E12
97 76 493	08B	113	5-E18
97 76 519	08B	085	5-D14
97 76 519	08B	087	5-D16
97 76 519	08B	095	5-D24
97 76 519	08B	101	5-E06
97 76 519	08B	107	5-E12
97 76 519	08B	113	5-E18
97 76 519	08B	117	5-E22
97 76 519	08B	125	5-F06
97 76 519	08B	129	5-F10
97 76 519	08B	133	5-F14
97 76 527	08B	085	5-D14
97 76 527	08B	087	5-D16
97 76 527	08B	095	5-D24
97 76 527	08B	101	5-E06
97 76 527	08B	107	5-E12
97 76 527	08B	113	5-E18
97 76 527	08B	117	5-E22
97 76 527	08B	125	5-F06
97 76 535	08B	085	5-D14
97 76 535	08B	087	5-D16
97 76 535	08B	095	5-D24
97 76 535	08B	101	5-E06
97 76 535	08B	107	5-E12
97 76 535	08B	113	5-E18
97 76 584	08A	085	4-I14
97 76 600	08A	083	4-I12
97 76 626	08A	083	4-I12
97 76 626	08A	085	4-I14
97 76 634	08A	083	4-I12
97 76 659	08B	031	5-B08
97 76 956	08B	033	5-B10
97 76 964	08B	033	5-B10
97 77 095	08B	083	5-D12
97 77 095	08B	091	5-D20
97 77 103	08B	083	5-D12
97 77 103	08B	091	5-D20
97 77 111	08B	083	5-D12
97 77 111	08B	091	5-D20
97 77 129	08B	083	5-D12
97 77 129	08B	091	5-D20
97 77 137	08B	083	5-D12
97 77 137	08B	093	5-D22
97 77 145	08B	083	5-D12
97 77 145	08B	093	5-D22
97 77 160	08B	083	5-D12
97 77 160	08B	087	5-D16
97 77 160	08B	093	5-D22
97 77 160	08B	099	5-E04
97 77 160	08B	105	5-E10
97 77 160	08B	111	5-E16
97 77 160	08B	117	5-E22
97 77 160	08B	123	5-F04
97 77 160	08B	127	5-F08
97 77 160	08B	133	5-F14
97 77 178	08B	083	5-D12
97 77 178	08B	087	5-D16
97 77 178	08B	093	5-D22
97 77 178	08B	099	5-E04
97 77 178	08B	105	5-E10
97 77 178	08B	111	5-E16
97 77 178	08B	117	5-E22
97 77 178	08B	123	5-F04
97 77 186	08B	083	5-D12
97 77 186	08B	087	5-D16
97 77 186	08B	093	5-D22
97 77 186	08B	099	5-E04
97 77 186	08B	105	5-E10
97 77 186	08B	111	5-E16
97 77 327	08B	173	5-H06
97 77 327	08B	189	5-H22
97 77 343	08A	083	4-I12
97 77 368	08A	083	4-I12
97 77 384	08A	083	4-I12
97 77 400	08A	083	4-I12
97 77 426	08A	085	4-I14
97 77 442	08A	085	4-I14
97 77 525	08B	175	5-H08
97 77 533	08B	173	5-H06
97 77 541	08B	175	5-H08
97 77 665	08B	227	5-J12
97 77 681	03A	043	2-B20
97 77 749	08B	219	5-J04
97 77 780	08B	171	5-H04
97 77 806	08B	171	5-H04
97 77 947	08B	171	5-H04
97 77 962	08B	171	5-H04
97 78 218	08B	017	5-A18
97 78 309	08B	219	5-J04
97 78 317	08B	219	5-J04
97 78 655	08B	029	5-B06
97 78 820	08B	027	5-B04
97 78 895	08B	173	5-H06
97 78 895	08B	187	5-H20
97 78 895	08B	201	5-I10
97 78 911	08B	029	5-B06
97 78 929	08B	029	5-B06
97 78 937	08B	029	5-B06
97 78 945	08B	029	5-B06
97 78 952	08B	207	5-I16
97 78 952	08B	213	5-I22
97 78 952	08B	245	5-K06
97 79 083	08B	087	5-D16
97 79 083	08B	097	5-E02
97 79 091	08B	087	5-D16
97 79 091	08B	097	5-E02
97 79 109	08B	087	5-D16
97 79 109	08B	097	5-E02
97 79 117	08B	087	5-D16
97 79 117	08B	097	5-E02
97 79 125	08B	087	5-D16
97 79 125	08B	099	5-E04
97 79 133	08B	087	5-D16
97 79 133	08B	099	5-E04
97 79 166	08B	087	5-D16
97 79 166	08B	099	5-E04
97 79 166	08B	111	5-E16
97 79 166	08B	123	5-F04
97 79 166	08B	133	5-F14
97 79 174	08B	087	5-D16
97 79 174	08B	099	5-E04
97 79 174	08B	111	5-E16
97 79 174	08B	123	5-F04
97 79 174	08B	133	5-F14
97 79 182	08B	087	5-D16
97 79 182	08B	099	5-E04
97 79 182	08B	111	5-E16
97 79 182	08B	123	5-F04
97 79 190	08B	087	5-D16
97 79 190	08B	099	5-E04
97 79 190	08B	111	5-E16
97 79 190	08B	123	5-F04
97 79 208	08B	087	5-D16
97 79 208	08B	101	5-E06
97 79 206	08B	111	5-E16
97 79 216	08B	087	5-D16
97 79 216	08B	099	5-E04
97 79 216	08B	111	5-E16
97 79 596	08B	087	5-D16
97 79 596	08B	097	5-E02
97 79 604	08B	087	5-D16
97 79 604	08B	097	5-E02
97 79 612	08B	087	5-D16
97 79 612	08B	097	5-E02
97 79 620	08B	087	5-D16
97 79 620	08B	097	5-E02
97 79 638	08B	087	5-D16
97 79 638	08B	099	5-E04
97 79 646	08B	087	5-D16
97 79 646	08B	099	5-E04
97 79 802	08B	009	5-A10
97 79 828	08B	009	5-A10
97 79 836	08B	009	5-A10
97 79 844	08B	089	5-D18
97 79 844	08B	101	5-E06
97 79 844	08B	113	5-E18
97 79 844	08B	125	5-F06
97 79 844	08B	133	5-F14
97 80 057	08B	083	5-D12
97 80 057	08B	091	5-D20
97 80 057	08B	103	5-E08
97 80 065	08B	083	5-D12
97 80 065	08B	091	5-D20
97 80 065	08B	103	5-E08
97 80 065	08B	115	5-E20
97 80 073	08B	083	5-D12
97 80 073	08B	093	5-D22
97 80 073	08B	105	5-E10
97 80 107	08B	087	5-D16
97 80 107	08B	097	5-E02
97 80 107	08B	109	5-E14
97 80 115	08B	087	5-D16
97 80 115	08B	097	5-E02
97 80 115	08B	109	5-E14
97 80 115	08B	121	5-F02
97 80 123	08B	087	5-D16
97 80 123	08B	099	5-E04
97 80 123	08B	111	5-E16
97 80 156	08B	083	5-D12
97 80 156	08B	087	5-D16
97 80 156	08B	093	5-D22
97 80 156	08B	099	5-E04
97 80 156	08B	105	5-E10
97 80 156	08B	111	5-E16
97 80 156	08B	117	5-E22
97 80 156	08B	123	5-F04
97 80 156	08B	127	5-F08
97 80 156	08B	133	5-F14
97 80 339	08B	087	5-D16
97 80 339	08B	097	5-E02
97 80 347	08B	087	5-D16
97 80 347	08B	097	5-E02
97 80 354	08B	087	5-D16
97 80 354	08B	097	5-E02
97 80 362	08B	087	5-D16

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-F05 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 80 362	08B	097	5-E02
97 80 370	08B	087	5-D16
97 80 370	08B	099	5-E04
97 80 388	08B	087	5-D16
97 80 388	08B	099	5-E04
97 80 644	08B	083	5-D12
97 80 644	08B	091	5-D20
97 80 651	08B	083	5-D12
97 80 651	08B	091	5-D20
97 80 669	08B	083	5-D12
97 80 669	08B	091	5-D20
97 80 677	08B	083	5-D12
97 80 677	08B	091	5-D20
97 80 685	08B	083	5-D12
97 80 685	08B	093	5-D22
97 80 693	08B	083	5-D12
97 80 693	08B	093	5-D22
97 80 834	08B	177	5-H10
97 80 834	08B	191	5-H24
97 80 842	08B	177	5-H10
97 80 859	08B	177	5-H10
97 80 867	08B	239	5-J24
97 80 909	08B	177	5-H10
97 80 909	08B	193	5-I02
97 80 917	08B	177	5-H10
97 80 925	08B	177	5-H10
97 80 958	08B	177	5-H10
97 80 958	08B	191	5-H24
97 80 966	08B	177	5-H10
97 80 974	08B	177	5-H10
97 80 990	08B	177	5-H10
97 80 990	08B	191	5-H24
97 81 006	08B	177	5-H10
97 81 014	08B	177	5-H10
97 81 147	08B	211	5-I20
97 81 162	08B	179	5-H12
97 81 162	08B	189	5-H22
97 81 162	08B	203	5-I12
97 81 162	08B	247	5-K08
97 81 204	08B	179	5-H12
97 81 204	08B	189	5-H22
97 81 204	08B	245	5-K06
97 81 204	08B	247	5-K08
97 81 204	08B	249	5-K10
97 81 295	08B	035	5-B12
97 81 337	08B	211	5-I20
97 81 337	08B	215	5-I24
97 81 337	08B	251	5-K12
97 81 428	08B	179	5-H12
97 81 428	08B	193	5-I02
97 81 436	08B	179	5-H12
97 81 444	08B	179	5-H12
97 81 469	08B	205	5-I14
97 81 469	03B	209	5-I18
97 81 469	08B	213	5-I22
97 81 469	08B	215	5-I24
97 81 501	08B	029	5-B06
97 81 576	08B	205	5-I14
97 81 592	08B	171	5-H04
97 81 592	08B	183	5-H16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 81 592	08B	197	5-I06
97 81 592	08B	245	5-K06
97 81 774	08B	175	5-H08
97 81 972	08B	025	5-B02
97 81 980	08B	025	5-B02
97 82 004	08B	025	5-B02
97 82 020	08B	025	5-B02
97 82 038	08B	025	5-B02
97 82 053	08B	027	5-B04
97 82 095	08B	205	5-I14
97 82 103	08B	205	5-I14
97 82 111	08B	209	5-I18
97 82 129	08B	211	5-I20
97 82 129	08B	215	5-I24
97 82 186	08B	209	5-I18
97 82 210	08B	179	5-H12
97 82 210	08B	189	5-H22
97 82 210	08B	203	5-I12
97 82 210	08B	247	5-K08
97 82 228	08B	219	5-J04
97 82 251	08B	021	5-A22
97 82 293	08B	229	5-J14
97 82 343	08B	021	5-A22
97 82 509	08B	219	5-J04
97 82 558	08B	171	5-H04
97 82 558	08B	183	5-H16
97 82 558	08B	245	5-K06
97 82 566	08A	053	4-H06
97 82 566	08A	057	4-H10
97 82 582	08B	175	5-H08
97 82 632	08B	177	5-H10
97 82 632	08B	193	5-I02
97 82 640	08B	177	5-H10
97 82 657	08B	177	5-H10
97 83 002	08B	231	5-J16
97 83 010	08B	231	5-J16
97 83 028	08B	231	5-J16
97 83 036	08B	231	5-J16
97 83 044	08B	233	5-J18
97 83 051	08B	233	5-J18
97 83 283	08B	173	5-H06
97 83 317	08B	033	5-B10
97 83 325	08B	033	5-B10
97 83 408	08B	171	5-H04
97 83 408	08B	185	5-H18
97 83 408	08B	245	5-K06
97 83 523	08B	015	5-A16
97 83 531	08B	227	5-J12
97 84 604	08B	205	5-I14
97 84 752	08B	219	5-J04
97 84 885	08B	141	5-F22
97 84 893	08B	141	5-F22
97 84 901	08B	141	5-F22
97 84 919	08B	141	5-F22
97 84 927	08B	141	5-F22
97 84 935	08B	141	5-F22
97 85 015	08B	173	5-H06
97 85 015	08B	189	5-H22
97 85 015	08B	201	5-I10
97 85 015	08B	247	5-K08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 85 015	08B	249	5-K10
97 85 031	08B	165	5-G22
97 86 096	08B	031	5-B08
97 86 104	08B	031	5-B08
97 86 112	08B	031	5-B08
97 86 120	08A	021	4-F22
97 86 138	08A	021	4-F22
97 86 146	08B	033	5-B10
97 86 997	08B	137	5-F18
97 86 997	08B	139	5-F20
97 87 516	08B	205	5-I14
97 87 532	08B	207	5-I16
97 87 532	08B	213	5-I22
97 87 599	08B	243	5-K04
97 88 563	08B	033	5-B10
97 88 571	08B	033	5-B10
97 88 605	08B	219	5-J04
97 88 829	08B	243	5-K04
97 88 837	08B	243	5-K04
97 88 910	08B	209	5-I18
97 88 910	08B	215	5-I24
97 88 928	08B	209	5-I18
97 88 928	08B	215	5-I24
97 89 090	08B	211	5-I20
97 89 090	08B	245	5-K06
97 89 751	08B	205	5-I14
97 89 769	08B	211	5-I20
97 89 769	08B	245	5-K06
97 89 991	08B	027	5-B04
97 90 007	08B	029	5-B06
97 90 015	08B	027	5-B04
97 90 981	08B	219	5-J04
97 91 070	08B	239	5-J24
97 91 591	08B	033	5-B10
97 91 930	08A	089	4-I18
97 91 971	08B	211	5-I20
97 91 971	08B	245	5-K06
97 92 300	08B	211	5-I20
97 92 391	08B	179	5-H12
97 92 391	08B	193	5-I02
97 92 391	08B	203	5-I12
97 92 391	08B	247	5-K08
97 93 001	08A	089	4-I18
97 93 159	08B	027	5-B04
97 93 977	08B	077	5-D06
97 94 132	08B	241	5-K02
97 94 264	08B	221	5-J06
97 94 363	08B	223	5-J08
97 94 371	08B	223	5-J08
97 94 389	08B	223	5-J08
97 94 397	08B	223	5-J08
97 94 405	08B	223	5-J08
97 94 413	08B	223	5-J08
97 94 421	08B	223	5-J08
97 94 439	08B	223	5-J08
97 94 447	08B	223	5-J08
97 94 454	08B	223	5-J08
97 94 462	08B	225	5-J10
97 94 470	08B	225	5-J10
97 94 504	08B	227	5-J12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 94 520	08B	231	5-J16
97 94 611	08B	035	5-B12
97 94 652	08B	141	5-F22
97 94 652	08B	143	5-F24
97 94 652	08B	149	5-G06
97 94 652	08B	151	5-G08
97 94 660	08B	141	5-F22
97 94 660	08B	143	5-F24
97 94 660	08B	147	5-G04
97 94 678	08B	141	5-F22
97 94 678	08B	143	5-F24
97 94 678	08B	151	5-G08
97 94 686	08B	085	5-D14
97 94 686	08B	101	5-E06
97 94 686	08B	113	5-E18
97 94 686	08B	125	5-F06
97 94 686	08B	135	5-F16
97 94 702	08B	141	5-F22
97 94 702	08B	145	5-G02
97 94 710	08B	141	5-F22
97 94 710	08B	145	5-G02
97 94 728	08B	141	5-F22
97 94 728	08B	145	5-G02
97 95 006	08B	179	5-H12
97 95 006	08B	193	5-I02
97 95 014	08B	177	5-H10
97 95 022	08B	179	5-H12
97 95 055	08B	225	5-J10
97 95 063	08B	225	5-J10
97 95 071	08B	225	5-J10
97 95 089	08B	225	5-J10
97 95 097	08B	225	5-J10
97 95 105	08B	225	5-J10
97 95 212	08B	207	5-I16
97 95 220	08B	205	5-I14
97 95 386	08B	089	5-D18
97 95 618	08B	175	5-H08
97 95 618	08B	189	5-H22
97 95 626	08B	175	5-H08
97 95 626	08B	189	5-H22
97 95 634	08B	175	5-H08
97 95 634	08B	189	5-H22
97 95 642	08B	175	5-H08
97 95 642	08B	189	5-H22
97 95 709	08B	169	5-H02
97 95 717	08B	221	5-J06
97 95 808	08B	137	5-F18
97 95 816	08B	211	5-I20
97 95 857	08B	033	5-B10
97 95 865	08B	033	5-B10
97 96 327	08B	231	5-J16
97 96 616	08B	085	5-D14
97 96 616	08B	095	5-D24
97 96 616	08B	107	5-E12
97 96 616	08B	119	5-E24
97 96 616	08B	129	5-F10
97 96 624	08B	089	5-D18
97 96 624	08B	101	5-E06
97 96 699	08B	017	5-A18
97 96 707	08B	017	5-A18

6-F06 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 96 723	08B	209	5-I18
97 96 848	08B	171	5-H04
97 96 848	08B	195	5-I04
97 96 848	08B	203	5-I12
97 96 848	08B	211	5-I20
97 96 848	08B	217	5-J02
97 96 848	08B	247	5-K08
97 96 939	08B	095	5-D24
97 96 939	08B	107	5-E12
97 96 939	08B	119	5-E24
97 96 939	08B	129	5-F10
97 96 939	08B	139	5-F20
97 97 028	08B	175	5-H08
97 97 028	08B	189	5-H22
97 97 044	08A	085	4-I14
97 97 051	08A	085	4-I14
97 97 069	08A	085	4-I14
97 97 077	08A	085	4-I14
97 97 077	08A	087	4-I16
97 97 085	08B	233	5-J18
97 97 093	08A	085	4-I14
97 97 101	08A	085	4-I14
97 97 119	08A	085	4-I14
97 97 200	08B	085	5-D14
97 97 200	08B	089	5-D18
97 97 200	08B	095	5-D24
97 97 200	08B	101	5-E06
97 97 200	08B	107	5-E12
97 97 200	08B	113	5-E18
97 97 200	08B	119	5-E24
97 97 200	08B	125	5-F06
97 97 200	08B	129	5-F10
97 97 200	08B	135	5-F16
97 97 366	08B	149	5-G06
97 97 374	08B	149	5-G06
97 97 382	08B	143	5-F24
97 97 382	08B	149	5-G06
97 97 390	08B	143	5-F24
97 97 390	08B	149	5-G06
97 97 408	08B	143	5-F24
97 97 408	08B	147	5-G04
97 97 416	08B	143	5-F24
97 97 416	08B	147	5-G04
97 97 424	08B	143	5-F24
97 97 424	08B	151	5-G08
97 97 432	08B	143	5-F24
97 97 432	08B	151	5-G08
97 97 440	08B	145	5-G02
97 97 440	08B	153	5-G10
97 97 457	08B	145	5-G02
97 97 457	08B	153	5-G10
97 97 507	08B	143	5-F24
97 97 507	08B	149	5-G06
97 97 515	08B	143	5-F24
97 97 515	08B	149	5-G06
97 97 523	08B	143	5-F24
97 97 523	08B	147	5-G04
97 97 531	08B	143	5-F24
97 97 531	08B	147	5-G04
97 97 549	08B	143	5-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 97 549	08B	151	5-G08
97 97 556	08B	143	5-F24
97 97 556	08B	151	5-G08
97 97 564	08B	145	5-G02
97 97 564	08B	153	5-G10
97 97 572	08B	145	5-G02
97 97 572	08B	153	5-G10
97 97 598	08B	145	5-G02
97 97 606	08B	149	5-G06
97 97 622	08B	149	5-G06
97 97 630	08B	143	5-F24
97 97 630	08B	149	5-G06
97 97 655	08B	143	5-F24
97 97 655	08B	149	5-G06
97 97 663	08B	143	5-F24
97 97 663	08B	147	5-G04
97 97 689	08B	143	5-F24
97 97 689	08B	147	5-G04
97 97 697	08B	143	5-F24
97 97 697	08B	151	5-G08
97 97 713	08B	143	5-F24
97 97 713	08B	151	5-G08
97 97 721	08B	145	5-G02
97 97 721	08B	153	5-G10
97 97 747	08B	145	5-G02
97 97 747	08B	153	5-G10
97 97 788	08B	143	5-F24
97 97 788	08B	149	5-G06
97 97 804	08B	143	5-F24
97 97 804	08B	149	5-G06
97 97 812	08B	143	5-F24
97 97 812	08B	147	5-G04
97 97 838	08B	143	5-F24
97 97 838	08B	147	5-G04
97 97 846	08B	143	5-F24
97 97 846	08B	151	5-G08
97 97 861	08B	143	5-F24
97 97 861	08B	151	5-G08
97 97 879	08B	145	5-G02
97 97 879	08B	153	5-G10
97 97 895	08B	145	5-G02
97 97 895	08B	153	5-G10
97 97 960	08B	149	5-G06
97 97 978	08B	145	5-G02
97 97 978	08B	153	5-G10
97 98 000	08B	223	5-J08
97 98 042	08B	225	5-J10
97 98 083	08B	223	5-J08
97 98 125	08B	225	5-J10
97 98 133	08B	225	5-J10
97 98 166	08B	225	5-J10
97 98 174	08B	225	5-J10
97 98 208	08B	225	5-J10
97 98 216	08B	227	5-J12
97 98 240	08B	227	5-J12
97 98 257	08B	227	5-J12
97 98 281	08B	033	5-B10
97 98 356	08B	175	5-H08
97 98 356	08B	189	5-H22
97 98 448	08B	013	5-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 98 455	08B	013	5-A14
97 98 497	08B	005	5-A06
97 98 547	08B	021	5-A22
97 98 554	08B	021	5-A22
97 98 604	08B	007	5-A08
97 98 612	08B	007	5-A08
97 98 653	08B	009	5-A10
97 98 703	08B	015	5-A16
97 98 802	08B	143	5-F24
97 98 802	08B	147	5-G04
97 98 810	08B	143	5-F24
97 98 810	08B	147	5-G04
97 98 828	08B	145	5-G02
97 98 828	08B	153	5-G10
97 98 836	08B	145	5-G02
97 98 836	08B	153	5-G10
97 98 844	08B	143	5-F24
97 98 844	08B	147	5-G04
97 98 851	08B	143	5-F24
97 98 851	08B	147	5-G04
97 98 869	08B	145	5-G02
97 98 869	08B	153	5-G10
97 98 877	08B	145	5-G02
97 98 877	08B	153	5-G10
97 98 885	08B	143	5-F24
97 98 885	08B	147	5-G04
97 98 901	08B	143	5-F24
97 98 901	08B	147	5-G04
97 98 919	08B	145	5-G02
97 98 919	08B	153	5-G10
97 98 935	08B	145	5-G02
97 98 935	08B	153	5-G10
97 98 943	08B	143	5-F24
97 98 943	08B	147	5-G04
97 98 968	08B	143	5-F24
97 98 968	08B	147	5-G04
97 98 976	08B	145	5-G02
97 98 976	08B	153	5-G10
97 98 992	08B	145	5-G02
97 98 992	08B	153	5-G10
97 99 008	08B	143	5-F24
97 99 008	08B	147	5-G04
97 99 016	08B	145	5-G02
97 99 016	08B	153	5-G10
97 99 057	08B	209	5-I18
97 99 057	08B	215	5-I24
97 99 099	08B	143	5-F24
97 99 099	08B	151	5-G08
97 99 115	08B	143	5-F24
97 99 115	08B	151	5-G08
97 99 123	08B	143	5-F24
97 99 123	08B	151	5-G08
97 99 149	08B	143	5-F24
97 99 149	08B	151	5-G08
97 99 156	08B	143	5-F24
97 99 156	08B	151	5-G08
97 99 164	08B	143	5-F24
97 99 164	08B	151	5-G08
97 99 172	08B	143	5-F24
97 99 172	08B	151	5-G08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 99 180	08B	143	5-F24
97 99 180	08B	151	5-G08
97 99 198	08B	143	5-F24
97 99 198	08B	151	5-G08
97 99 313	08B	033	5-B10
97 99 321	08B	033	5-B10
97 99 354	03A	053	2-C06
97 99 602	08B	233	5-J18
97 99 610	08B	233	5-J18
97 99 628	08B	233	5-J18
97 99 636	08B	233	5-J18
97 99 743	08B	231	5-J16
97 99 750	08B	231	5-J16
97 99 776	08B	231	5-J16
97 99 842	08B	099	5-E04
97 99 859	08B	099	5-E04
97 99 867	08B	105	5-E10
97 99 867	08B	111	5-E16
97 99 867	08B	117	5-E22
97 99 867	08B	123	5-F04
97 99 875	08B	093	5-D22
97 99 875	08B	099	5-E04
97 99 875	08B	105	5-E10
97 99 875	08B	111	5-E16
97 99 875	08B	117	5-E22
97 99 875	08B	123	5-F04
97 99 875	08B	129	5-F10
97 99 875	08B	133	5-F14
97 99 966	08B	093	5-D22
97 99 974	08B	093	5-D22
98 07 975	08B	053	5-C06
98 07 975	08B	065	5-C1[illegible]
98 07 975	08B	077	5-D0[illegible]
98 08 130	09	015	6-C[illegible]
98 27 247	08B	[illegible]	[illegible]
98 27 247	[illegible]	[illegible]	[illegible]
98 27 2[illegible]	[illegible]	041	[illegible]
98 27 [illegible]	[illegible]	[illegible]	[illegible]
98 27 [illegible]	[illegible]	051	5-C04
98 2[illegible]	08B	063	5-C16
98 2[illegible]	[illegible]	041	5-B[illegible]
98 2[illegible]	08B	05[illegible]	5-C[illegible]
98 2[illegible]	08B	211	5-I20
98 2[illegible]	[illegible]	215	5-I24
98 2[illegible] 658	[illegible]	[illegible]	5-I16
98 2[illegible] 658	08B	211	5-I20
98 28 658	08B	213	5-I22
98 28 658	08B	215	5-I24
98 33 518	08A	087	4-I16
98 33 559	08A	087	4-I16
98 33 575	08A	087	4-I16
98 33 591	08A	087	4-I16
98 33 617	08A	087	4-I16
98 34 318	08B	051	5-C04
98 34 334	08B	063	5-C16
98 34 342	08B	051	5-C04
98 34 342	08B	063	5-C16
98 34 458	08B	041	5-B18
98 34 458	08B	049	5-C02
98 34 458	08B	053	5-C06

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-F07 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
98 35 737	08A	045	4-G22
98 35 737	08A	051	4-H04
98 37 246	08A	087	4-I16
98 49 498	08B	215	5-I24
98 49 498	08B	251	5-K12
98 49 514	08B	141	5-F22
98 49 514	08B	145	5-G02
98 49 514	08B	153	5-G10
98 49 514	08B	159	5-G16
98 49 514	08B	161	5-G18
98 49 514	08B	233	5-J18
98 49 530	08B	171	5-H04
98 50 892	08B	063	5-C16
98 50 900	08B	051	5-C04
98 50 900	08B	063	5-C16
98 51 031	08B	047	5-B24
98 51 031	08B	053	5-C06
98 51 031	08B	063	5-C16
98 51 031	08B	075	5-D04
98 51 049	08B	063	5-C16
98 51 049	08B	075	5-D04
98 51 098	08B	049	5-C02
98 51 098	08B	053	5-C06
98 51 098	08B	065	5-C18
98 51 098	08B	077	5-D06
98 51 262	08B	047	5-B24
98 51 262	08B	051	5-C04
98 51 262	08B	063	5-C16
98 51 270	08B	063	5-C16
98 51 411	08B	053	5-C06
98 51 411	08B	077	5-D06
98 51 429	08B	049	5-C02
98 51 429	08B	065	5-C18
98 51 619	08B	189	5-H22
98 51 619	08B	247	5-K08
98 51 619	08B	249	5-K10
98 51 619	08B	253	5-K14
98 57 475	08B	049	5-C02
98 57 475	08B	053	5-C06
98 57 475	08B	065	5-C18
98 57 624	08B	049	5-C02
98 57 624	08B	065	5-C18
98 62 269	09	013	6-C14
98 62 285	09	013	6-C14
98 62 293	09	013	6-C14
98 62 301	09	013	6-C14
98 62 368	09	015	6-C16
98 62 384	09	015	6-C16
98 62 392	09	015	6-C16
98 62 400	09	015	6-C16
98 62 418	09	015	6-C16
98 62 426	09	015	6-C16
98 62 434	09	015	6-C16
98 63 291	08B	047	5-B24
98 63 291	08B	053	5-C06
98 63 515	08B	053	5-C06
98 64 000	08B	247	5-K08
98 64 349	08B	173	5-H06
98 64 349	08B	187	5-H20
98 64 349	08B	201	5-I10
98 67 821	08B	163	5-G20
98 74 629	08B	171	5-H04
98 78 141	08B	063	5-C16
98 78 158	08B	053	5-C06
98 78 158	08B	063	5-C16
98 78 265	08B	065	5-C18
98 78 273	08B	065	5-C18
98 78 307	08B	065	5-C18
98 78 307	08B	075	5-D04
98 78 315	08B	065	5-C18
98 78 315	08B	075	5-D04
98 78 976	08B	077	5-D06
98 79 909	08B	065	5-C18
98 79 909	08B	077	5-D06
98 90 088	08B	105	5-E10
98 90 088	08B	117	5-E22
98 90 096	08B	105	5-E10
98 90 096	08B	117	5-E22
98 90 104	08B	095	5-D24
98 90 104	08B	105	5-E10
98 90 104	08B	117	5-E22
98 90 104	08B	129	5-F10
98 90 112	08B	095	5-D24
98 90 112	08B	105	5-E10
98 90 112	08B	117	5-E22
98 90 112	08B	129	5-F10
98 90 120	08B	107	5-E12
98 90 120	08B	113	5-E18
98 90 120	08B	117	5-E22
98 90 120	08B	125	5-F06
98 90 138	08B	107	5-E12
98 90 138	08B	113	5-E18
98 90 138	08B	117	5-E22
98 90 138	08B	125	5-F06
98 90 146	08B	095	5-D24
98 90 146	08B	101	5-E06
98 90 146	08B	107	5-E12
98 90 146	08B	113	5-E18
98 90 146	08B	117	5-E22
98 90 146	08B	125	5-F06
98 90 146	08B	129	5-F10
98 90 146	08B	133	5-F14
98 90 153	08B	095	5-D24
98 90 153	08B	101	5-E06
98 90 153	08B	107	5-E12
98 90 153	08B	113	5-E18
98 90 153	08B	117	5-E22
98 90 153	08B	125	5-F06
98 90 153	08B	129	5-F10
98 90 153	08B	133	5-F14
98 90 203	08B	047	5-B24
98 90 203	08B	057	5-C10
98 90 203	08B	069	5-C22
98 90 211	08B	047	5-B24
98 90 211	08B	057	5-C10
98 90 211	08B	069	5-C22
98 90 229	08B	047	5-B24
98 90 229	08B	057	5-C10
98 90 674	08B	239	5-J24
98 90 682	08B	047	5-B24
98 90 682	08B	057	5-C10
98 90 682	08B	069	5-C22
98 90 682	08B	079	5-D08
98 90 690	08B	047	5-B24
98 90 690	08B	057	5-C10
98 90 690	08B	069	5-C22
98 90 690	08B	079	5-D08
98 90 708	08B	047	5-B24
98 90 708	08B	057	5-C10
98 90 708	08B	069	5-C22
98 90 708	08B	079	5-D08
98 90 716	08B	047	5-B24
98 90 716	08B	057	5-C10
98 90 716	08B	069	5-C22
98 90 716	08B	079	5-D08
98 90 724	08B	047	5-B24
98 90 724	08B	057	5-C10
98 90 724	08B	069	5-C22
98 90 724	08B	079	5-D08
98 91 367	08B	009	5-A10
98 91 391	08B	085	5-D14
98 91 391	08B	089	5-D18
98 91 391	08B	095	5-D24
98 91 391	08B	101	5-E06
98 91 391	08B	107	5-E12
98 91 391	08B	113	5-E18
98 91 391	08B	119	5-E24
98 91 391	08B	125	5-F06
98 91 391	08B	129	5-F10
98 91 391	08B	135	5-F16
98 91 474	08B	103	5-E08
98 91 482	08B	103	5-E08
98 91 490	08B	103	5-E08
98 91 490	08B	115	5-E20
98 91 508	08B	103	5-E08
98 91 508	08B	115	5-E20
98 91 532	08B	105	5-E10
98 91 532	08B	115	5-E20
98 91 532	08B	127	5-F08
98 91 540	08B	105	5-E10
98 91 540	08B	115	5-E20
98 91 540	08B	127	5-F08
98 91 664	08B	109	5-E14
98 91 672	08B	109	5-E14
98 91 680	08B	109	5-E14
98 91 680	08B	121	5-F02
98 91 698	08B	109	5-E14
98 91 698	08B	121	5-F02
98 91 722	08B	111	5-E16
98 91 722	08B	123	5-F04
98 91 722	08B	131	5-F12
98 91 730	08B	111	5-E16
98 91 730	08B	123	5-F04
98 91 730	08B	131	5-F12
98 92 043	08B	167	5-G24
98 92 068	08B	167	5-G24
98 92 076	08B	167	5-G24
98 92 100	08B	167	5-G24
98 92 118	08B	167	5-G24
98 92 282	08B	167	5-G24
98 92 290	08B	167	5-G24
98 92 399	08B	239	5-J24
98 92 407	08B	171	5-H04
98 92 464	08B	171	5-H04
98 92 647	08B	177	5-H10
98 92 647	08B	193	5-I02
98 92 654	08B	179	5-H12
98 92 654	08B	193	5-I02
98 92 662	08B	177	5-H10
98 92 662	08B	191	5-H24
98 92 670	08B	177	5-H10
98 92 670	08B	191	5-H24
98 92 688	08B	177	5-H10
98 92 688	08B	191	5-H24
98 92 696	08B	177	5-H10
98 92 696	08B	191	5-H24
98 92 704	08B	177	5-H10
98 92 704	08B	191	5-H24
98 92 712	08B	177	5-H10
98 92 712	08B	193	5-I02
98 92 720	08B	177	5-H10
98 92 720	08B	193	5-I02
98 92 738	08B	177	5-H10
98 92 738	08B	193	5-I02
98 92 761	08B	045	5-B22
98 92 779	08B	045	5-B22
98 92 787	08B	047	5-B24
98 92 795	08B	047	5-B24
98 92 829	08B	045	5-B22
98 92 837	08B	045	5-B22
98 92 845	08B	047	5-B24
98 92 852	08B	047	5-B24
98 92 936	08B	051	5-C04
98 92 944	08B	045	5-B22
98 92 944	08B	051	5-C04
98 92 944	08B	061	5-C14
98 92 951	08B	045	5-B22
98 92 951	08B	051	5-C04
98 92 951	08B	059	5-C12
98 92 969	08B	047	5-B24
98 92 977	08B	047	5-B24
98 92 977	08B	051	5-C04
98 92 977	08B	061	5-C14
98 92 985	08B	179	5-H12
98 92 985	08B	193	5-I02
98 92 993	08B	179	5-H12
98 92 993	08B	193	5-I02
98 93 009	08B	179	5-H12
98 93 009	08B	193	5-I02
98 93 017	08B	179	5-H12
98 93 017	08B	193	5-I02
98 93 025	08B	179	5-H12
98 93 025	08B	193	5-I02
98 93 033	08B	179	5-H12
98 93 033	08B	193	5-I02
98 94 684	08B	171	5-H04
98 94 742	08B	171	5-H04
98 94 924	08B	177	5-H10
98 94 924	08B	191	5-H24
98 94 932	08B	177	5-H10

6-F08 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
98 94 932	08B	191	5-H24
98 94 957	08B	177	5-H10
98 94 957	08B	191	5-H24
98 94 965	08B	177	5-H10
98 94 965	08B	191	5-H24
98 94 973	08B	177	5-H10
98 94 973	08B	193	5-I02
98 95 061	08B	055	5-C08
98 95 079	08B	047	5-B24
98 95 079	08B	057	5-C10
98 95 087	08B	055	5-C08
98 95 095	08B	047	5-B24
98 95 095	08B	057	5-C10
98 95 129	08B	055	5-C08
98 95 129	08B	059	5-C12
98 95 137	08B	047	5-B24
98 95 137	08B	057	5-C10
98 95 137	08B	061	5-C14
98 95 137	08B	071	5-C24
98 95 681	08B	103	5-E08
98 95 699	08B	093	5-D22
98 95 699	08B	105	5-E10
98 95 699	08B	115	5-E20
98 95 699	08B	127	5-F08
98 95 822	08B	099	5-E04
98 95 830	08B	099	5-E04
98 95 848	08B	111	5-E16
98 95 848	08B	123	5-F04
98 95 855	08B	111	5-E16
98 95 855	08B	123	5-F04
98 95 863	08B	101	5-E06
98 95 863	08B	111	5-E16
98 95 863	08B	123	5-F04
98 95 863	08B	133	5-F14
98 95 871	08B	101	5-E06
98 95 871	08B	111	5-E16
98 95 871	08B	123	5-F04
98 95 871	08B	133	5-F14
98 95 962	08B	109	5-E14
98 95 970	08B	099	5-E04
98 95 970	08B	111	5-E16
98 95 970	08B	123	5-F04
98 95 970	08B	131	5-F12
98 96 218	08B	237	5-J22
98 96 226	08B	237	5-J22
98 96 234	08B	031	5-B08
98 96 341	08B	173	5-H06
98 96 341	08B	187	5-H20
98 96 424	08B	173	5-H06
98 96 440	08B	173	5-H06
98 96 994	08B	021	5-A22
98 97 406	08B	231	5-J16
98 97 430	08B	231	5-J16
98 97 448	08B	231	5-J16
98 97 455	08B	231	5-J16
98 97 463	08B	231	5-J16
98 97 471	08B	231	5-J16
98 97 489	08B	231	5-J16
98 97 901	08B	145	5-G02
98 97 901	08B	153	5-G10
98 97 901	08B	159	5-G16
98 97 901	08B	161	5-G18
98 97 919	08B	145	5-G02
98 97 919	08B	153	5-G10
98 97 919	08B	159	5-G16
98 97 919	08B	161	5-G18
98 97 927	08B	209	5-I18
98 98 065	08B	045	5-B22
98 96 073	08B	045	5-B22
98 98 081	08B	047	5-B24
98 98 099	08B	047	5-B24
98 98 123	08B	045	5-B22
98 98 131	08B	045	5-B22
98 98 149	08B	047	5-B24
98 98 156	08B	047	5-B24
98 98 180	08B	045	5-B22
98 98 198	08B	045	5-B22
98 98 206	08B	047	5-B24
98 98 214	08B	047	5-B24
98 98 248	08B	045	5-B22
98 98 255	08B	045	5-B22
98 98 263	08B	047	5-B24
98 98 271	08B	047	5-B24
98 98 297	08B	051	5-C04
98 98 305	08B	045	5-B22
98 98 305	08B	051	5-C04
98 98 305	08B	061	5-C14
98 98 313	08B	045	5-B22
98 98 313	08B	051	5-C04
98 98 313	08B	059	5-C12
98 98 321	08B	047	5-B24
98 98 339	08B	047	5-B24
98 98 339	08B	051	5-C04
98 98 339	08B	061	5-C14

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02

6-F10 *New articles* *Nya artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 28 767	08C	027	6-B04
40 71 940	08C	027	6-B04
40 72 450	08C	017	6-A18
40 74 340	08C	027	6-B04
40 74 431	08C	029	6-B06
41 05 433	05	027	4-B04
41 07 116	05	005	4-A06
41 07 116	05	027	4-B04
41 13 999	08C	027	6-B04
41 17 602	08C	027	6-B04
41 18 964	08C	027	6-B04
41 79 933	08C	027	6-B04
41 96 267	05	027	4-B04
41 96 275	05	027	4-B04
41 96 317	05	009	4-A10
41 96 317	05	027	4-B04
41 98 941	05	027	4-B04
41 98 958	05	027	4-B04
42 50 320	08A	127	4-K08
42 50 460	08A	127	4-K08
42 83 164	08C	027	6-B04
42 94 583	08A	025	4-G02
43 05 330	08A	065	4-H18
43 05 884	08A	127	4-K08
43 18 382	08C	027	6-B04
43 18 531	08C	027	6-B04
43 18 606	08C	027	6-B04
43 18 606	08C	029	6-B06
43 19 570	08C	027	6-B04
43 19 588	08C	027	6-B04
43 19 984	08C	027	6-B04
43 56 291	08C	027	6-B04
43 56 598	02	105	1-F10
43 56 606	02	105	1-F10
43 57 067	08C	027	6-B04
43 68 627	06	009	4-C10
43 81 463	03A	029	2-B06
43 81 471	03A	029	2-B06
43 81 489	03A	029	2-B06
43 82 404	08C	027	6-B04
43 82 610	08C	027	6-B04
43 82 628	08C	029	6-B06
43 82 636	08C	027	6-B04
43 82 735	08C	027	6-B04
43 82 750	08C	027	6-B04
43 83 261	08C	017	6-A18
43 83 279	08C	017	6-A18
43 83 287	08C	017	6-A18
43 83 303	08C	017	6-A18
43 83 337	08C	017	6-A18
43 83 360	08C	017	6-A18
43 85 001	04	007	3-H08
43 85 019	04	007	3-H08
43 85 027	04	007	3-H08
43 85 035	04	007	3-H08
43 93 799	02	099	1-F04
43 93 799	02	103	1-F08
43 93 807	02	099	1-F04
43 93 807	02	103	1-F08
43 93 807	02	147	1-H04
43 93 823	02	147	1-H04
43 93 831	02	147	1-H04
44 24 172	03A	097	2-E02
44 40 020	02	099	1-F04
44 40 020	02	103	1-F08
44 40 020	02	147	1-H04
44 48 049	03A	057	2-C10
44 48 049	03A	059	2-C12
44 48 049	03A	061	2-C14
44 48 056	03A	057	2-C10
44 48 056	03A	059	2-C12
44 48 056	03A	061	2-C14
44 48 064	03A	057	2-C10
44 48 064	03A	059	2-C12
44 48 064	03A	061	2-C14
44 48 064	03A	173	2-H06
44 77 386	04	059	3-J12
44 78 046	04	059	3-J12
45 42 262	09	011	6-C12
45 42 270	09	011	6-C12
73 98 266	08C	027	6-B04
73 98 290	06	007	4-C08
74 95 179	08C	017	6-A18
74 96 276	04	035	3-I12
74 96 292	02	025	1-C02
74 97 001	08A	117	4-J22
74 97 019	08A	115	4-J20
74 97 019	08A	119	4-J24
74 97 043	08A	091	4-I20
74 97 043	08A	127	4-K08
74 97 050	08A	091	4-I20
74 97 050	08A	127	4-K08
74 97 084	08A	127	4-K08
75 31 544	09	011	6-C12
75 58 141	04	059	3-J12
75 75 251	04	059	3-J12
75 88 304	03A	025	2-B02
75 88 304	03A	173	2-H06
79 72 078	08C	023	6-A24
79 77 929	08C	027	6-B04
79 78 141	08C	027	6-B04
79 78 141	08C	029	6-B06
79 78 174	08C	027	6-B04
79 78 208	08C	027	6-B04
79 82 119	08C	027	6-B04
81 52 381	02	029	1-C06
81 52 381	02	033	1-C10
82 85 272	08A	091	4-I20
82 85 272	08A	127	4-K08
82 85 330	08A	091	4-I20
82 85 330	08A	127	4-K08
82 85 488	08A	115	4-J20
82 85 488	08A	117	4-J22
82 85 488	08A	119	4-J24
82 85 496	08A	115	4-J20
82 85 496	08A	117	4-J22
82 85 496	08A	119	4-J24
84 10 961	03A	143	2-F24
84 10 961	03A	177	2-H10
85 48 315	08C	029	6-B06
85 48 992	03A	071	2-C24
85 59 221	08B	017	5-A18
85 82 603	08B	251	5-K12
86 05 230	08C	027	6-B04
86 05 297	08C	025	6-B02
86 05 297	08C	029	6-B06
86 05 347	08C	029	6-B06
86 05 354	08C	029	6-B06
86 05 362	08C	029	6-B06
86 05 370	08C	029	6-B06
86 05 412	08C	025	6-B02
86 05 412	08C	027	6-B04
86 05 438	08C	025	6-B02
86 05 438	08C	027	6-B04
86 05 446	08C	025	6-B02
86 05 446	08C	029	6-B06
87 28 107	04	013	3-H14
87 81 676	04	035	3-I12
87 81 684	04	025	3-I02
87 81 684	04	037	3-I14
88 22 157	02	097	1-F02
88 22 207	02	095	1-E24
88 22 207	02	097	1-F02
88 22 215	02	101	1-F06
88 22 215	02	103	1-F08
88 22 223	02	097	1-F02
88 22 223	02	099	1-F04
88 22 231	02	101	1-F06
88 22 231	02	103	1-F08
88 22 249	02	097	1-F02
88 22 249	02	099	1-F04
88 22 249	02	101	1-F06
88 22 249	02	103	1-F08
88 22 256	02	101	1-F06
88 22 256	02	103	1-F08
88 22 314	02	095	1-E24
88 22 314	02	097	1-F02
88 22 314	02	099	1-F04
88 22 322	02	095	1-E24
88 22 322	02	097	1-F02
88 22 322	02	101	1-F06
88 22 330	02	097	1-F02
89 93 719	05	005	4-A06
89 93 719	05	027	4-B04
89 93 768	05	007	4-A08
89 93 768	05	027	4-B04
89 93 974	05	005	4-A06
93 21 787	03A	027	2-B04
93 21 795	02	015	1-B16
93 21 795	02	021	1-B22
93 21 795	04	015	3-H16
93 21 837	02	019	1-B20
93 21 928	02	147	1-H04
93 21 928	02	149	1-H06
93 37 510	02	057	1-D10
95 42 309	08B	201	5-I10
95 42 317	08B	201	5-I10
95 67 579	09	015	6-C16
95 79 715	08B	201	5-I10
96 17 846	08B	243	5-K04
96 17 853	08B	243	5-K04
96 95 768	08B	201	5-I10
97 56 974	08B	165	5-G22
97 61 495	08B	209	5-I18
97 61 495	08B	215	5-I24
97 65 553	03A	053	2-C06
97 99 057	08B	209	5-I18
97 99 057	08B	215	5-I24
98 34 318	08B	051	5-C04
98 97 927	08B	209	5-I18

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-B02**
3A	**Electrical system, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-H02**
5	**Brakes**	**4-A02**
6	**Front assembly, Steering**	**4-C02**
7	**Suspension, Wheels**	**4-E02**
8A	**Body, external**	**4-F02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**6-A02**
9	**Tools, Labels**	**6-C02**
10	**Numerical register**	**6-D02**

6-F12 *Deleted parts* *Utgångna artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 03 349			
40 03 356			
43 04 291			
43 04 309			
69 44 631			
69 56 924			
69 56 932			
69 56 940			
69 57 856			
75 39 927			
75 85 425			
75 97 842			
78 81 212			
79 18 261			
79 71 724			
79 74 272			
79 78 034			
81 09 548			
82 83 889			
82 83 954			
82 83 962			
82 83 970			
82 83 996			
82 84 002			
82 84 010			
82 84 028			
82 84 036			
82 84 044			
82 85 223			
84 87 654			
84 87 662			
85 71 804			
85 74 881			
89 57 169			
89 57 292			
89 58 621			
89 61 815			
89 67 077			
89 67 101			
89 67 119			
89 68 018			
89 68 026			
89 75 419			
89 77 928			
89 79 130			
89 79 650			
89 79 700			
89 82 415			
92 53 931			
93 12 471			
93 79 124			
93 81 252			
93 93 364			
95 07 476			
95 13 946			
95 26 310			
95 93 594			
96 24 024			
96 26 094			
96 27 134			
96 27 282			
96 30 302			
97 46 520			

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3A	Electrical system, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	4-F02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-A02
9	Tools, Labels	6-C02
10	Numerical register	6-D02