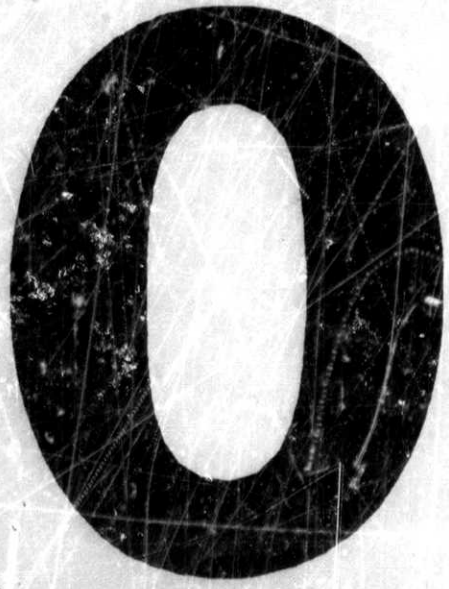


General
Allmänt
Generalidades

SAAB 9000

M 1990-1993

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 170001

© Saab Automobile AB 1994

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

0	General Allmänt Generalidades
2	Engine Motor Motor
3 A B	Electrical system Elektriskt system Sistema elétrico
4	Transmission Kraftöverföring Transmisión
5	Brakes Bromsar Frenos
6	Front assembly, steering Framvagn, styrinrättning Tren delantero, dirección
7	Suspension, wheels Fjädringssystem, hjul Suspensión, ruedas
8 A B C	Body Kaross Caroccería
9	Tools, labels Verktyg, etiketter Herramientas, etiquetas
10	Numerical register Nummerregister Indice numérico

GENERAL

INTRODUCTION	1-A05
ABBREVIATIONS	1-A06
MODEL IDENTIFICATION	1-A11
CHASSIS NUMBER	1-A13
ENGINE AND GEARBOX NUMBER	1-A15
STOCK-KEEPING LEVEL	1-A16
INSTRUCTIONS	1-A19
COLOUR MARKING SPRING, -STRUT	1-B03

ALLMÄNT

INLEDNING	1-A05
FÖRKORTNINGAR	1-A06
MODELLIDENTIFIKATION	1-A11
CHASSINUMMER	1-A13
MOTOR- OCH VÄXELLÅDSNUMMER	1-A15
LAGERHÅLLNINGSNIVÅ	1-A17
ANVISNINGAR	1-A19
FÄRGMÄRKNING FJÄDER, -BEN	1-B03

GENERALIDADES

INTRODUCCION	1-A05
ABREVIACIONES	1-A08
IDENTIFICACION DEL MODELO	1-A11
NUM. DE CHASIS	1-A13
NUM. DE MOTOR Y CAJA DE CAMBIOS	1-A15
NIVEL DE ALMACENAJE	1-A18
INSTRUCCIONES	1-A20
MARCACIÓN DE COLOR RESORTE, BRAZO-	1-B03

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

This Parts Catalogue is applicable to the 1990-1993 models of the Saab 9000. It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering upholstery.
Parts may be listed in this catalogue that are no longer available from SAAB warehouses, but of which importers or dealers may have stock. These articles are indicated by the term "No Longer Serviced" or **NLS** being included in the notes column. If there is a replacing part no. it is shown after NLS (NLS - use 7519132).

Denna reservdelskatalog för Saab 9000 omfattar årsmodellerna 1990-1993. Den kommer att hållas aktuell genom att nya fiche ges ut.
Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.
I denna katalog kan finnas artiklar som inte längre finns tillgängliga från SAAB´s lager men som kan finnas tillgängliga hos importör eller återförsäljare. Dessa artiklar är märkta i anmärkningskolumnen med **NLS** (No Longer Serviced). Finns ersättande artikel skrivs art.nr. efter NLS (NLS - use 7519132)

Este catálogo de piezas de recambio del Saab 9000 comprende los modelos de los anos 1990-1993, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, que indicar el tipo del coche clave color de la tapicería.
En este catálogo pueden existir artículos no existentes ya en la actualidad en el almacén de SAAB, pero disponibles todavía en algunos casos [illegible]las dependencias del importador o concesionario. Estos artículos han sido marcados con **NLS** (No Longer Serviced) en la columna dedicada a las observaciones. En caso de existir un artículo sustitutorio, el número del mismo se escribe inmediatamente después de NLS (NLS - use 7519132).

A	Automatic transmission	Automatisk växellåda
ABS	Anti block system	Låsningsfria bromsar
AC	Air Conditioning	Luftkonditionering
ACC	Automatic Climate Control	Automatisk klimatkontroll
ASR	Traction control system for A	Anti spinn system för A
B202	2,0 l engine with twin cam	2,0 l motor med två kamaxlar
B202S	2,0 l turbo engine with twin cam **without** charge cooler	2,0 l turbomotor med två kamaxlar, **utan** laddluftkyl
B204	2,0 l engine with twin cam and two balancer shafts	2,0 l motor med två kamaxlar och två balansaxlar
B204S	2,0 l turbo engine with twin cam and two balancer shafts, **without** charge cooler	2,0 l turbo motor med två kamaxlar och två balansaxlar, **utan** laddluftkyl
B204L	2,0 l turbo engine with twin cam and two balancer shafts, **with** charge cooler	2,0 l turbo motor med två kamaxlar och två balansaxlar, **med** laddluftkyl
B234	2,3 l engine with twin cam and two balancer shafts	2,3 l motor med två kamaxlar och två balansaxlar
B234E	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **low** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **låg** effekt
B234L	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **normal** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **normal** effekt
B234R	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **high** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **hög** effekt
CL	Central locking	Centrallås
CS	Combi-Sedan	Kombi-Sedan
D	Door	Dörr
DI	Direct ignition	Direkt tändning

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

EAS	Electrically adjustable seat	Elmanövrerad stol
EGR	Exhaust Gas Recirculation	Avgasrecirkulation
ELCD	Evaporative Loss Control Device	Slutet bränslesystem
EM	Electrical mirrors	Elmanövrerade backspeglar
ETS	Electronic Throttle System	Elektroniskt styrd trottel
EW	Electrical window regulators	Elmanövrerade fönsterhissar
I	Fuel injection	Motor med bränsleinsprutning
IAC	Idle speed control	Tomgångsreglering
KW	Kilo Watt	Kilo Watt
L	Length	Längd
LH	Left hand	Vänster
LHD	Left hand drive	Vänsterstyrd
M	Manual transmission	Manuell växellåda
MM	Millimetre	Millimeter
R	Reverse	Backväxel
RAC	Rear AC	Bakre AC
RH	Right hand	Höger
RHD	Right hand drive	Högerstyrd
SAI	Secondary air injection	Sekundärluft
SR	Sun roof	Sollucka
T16S	9000 Sport -1992	9000 Sport -1992
T16SA	9000 Sport, with Aero-kit -1992	9000 Sport, med Aero-kit -1992
T16S B	9000 Sport, basic version -1992	9000 Sport, basversion -1992
TCS	Traction Control System for M	Anti spinn system för M
X	Quantity as required	Antal efter behov

A	Caja de cambios automatico
ABS	Frenos antibloqueo
AC	Acondiciona miento de aire
ACC	Contol automatico de clima
ASR	Sistema de control de tracción para A
B202	Motor de 2,0 litros con dos ejes de levas
B202S	Motor de 2,0 litros con turbo y dos ejes de levas **sin** entriamiento de aire de admision
B204	Motor de 2,0 litros con dos ejes de levas y dos ejes equilibradores
B204S	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, **sin** entriamiento de aire de admision
B204L	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, **con** entriamiento de aire de admision
B234	Motor de 2,3 litros con dos ejes de levas y dos ejes equilibradores
B234E	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, sin entriamiento de aire de admision, **potencia baja**
B234L	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamie.nto de aire de admision, **potencia normal**
B234R	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamiento de aire de admision, **potencia alta**
CL	Cerradura
CS	Combi-sédan
D	Puerta
DI	Encendido directo

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


EAS	Asientos maniobra eléctrica
EGR	Recirculation de los gase de escape
ELCD	Sistema de combustible cerrado
EM	Espejos retrovisores elétricos
ETS	Sistema electrónico de aceleración
EW	Levantacristales eléctricos
I	Motor de inyeccion
IAC	Regulacion de ralentí
KW	Kilowattio
L	Longitud
LH	Lado izquierdo
LHD	Tracción a la izquierda
M	Caja de cambios manual
MM	Milímetros
R	Marcha atras
RAC	AC trasero
RH	Lado derecho
RHD	Volante a la derecha
SAI	Aire secundario
SR	Techo corredizo
TCS	Sistema de control de tracción para M
T16S	9000 Sport -1992
T16SB	9000 Sport, ejecución básica -1992
T16SA	9000 Sport, con Kit Aero -1992 (parachoques y spoiler integrados)
X	Cantidad segun necesidad

AR	Argentina	Argentina	Argentina
AU	Australia	Australien	Australia
BE	Belgium	Belgien	Bélgica
BR	Brazil	Brasilien	Brasil
CA	Canada	Canada	Canadá
CH	Switzerland	Schweiz	Suiza
DK	Denmark	Danmark	Dinamarca
DT	Germany	Tyskland	Alemania
EU	Europe	Europa	Europa
FE	Far East	Fjärran Östern	Extremo Oriente
FI	Finland	Finland	Finlandia
FR	France	Frankrike	Francia
GB	Great Britain	England	Gran Bretana
IL	Israel	Israel	Israel
IT	Italy	Italien	Italia
JP	Japan	Japan	Japón
KR	Korea	Korea	Corea
LA	Latin America	Latinamerika	Latinoamérica
ME	Middle East	Mellersta Östern	Próximo Oriente
NO	Norway	Norge	Noruega
PA	Pacific	Stilla-havsområdet	Zona del Pacífico
SE	Sweden	Sverige	Suecia
SG	Singapore	Singapore	Singapur
TR	Turkey	Turkiet	Turquía
TW	Taiwan	Taiwan	Taiwan
UC	USA-California	USA-Kalifornien	EE.UU. Californi.
UF	USA-Federal	USA-Federalt	EE.UU., Federal
US	USA	USA	EE.UU


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


1-A11

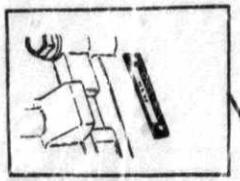

Gear box number
Växellådsnummer
Núm. de cajas de cambios

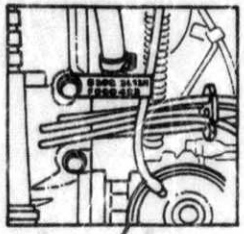

Engine number
Motornummer
Núm. de motor

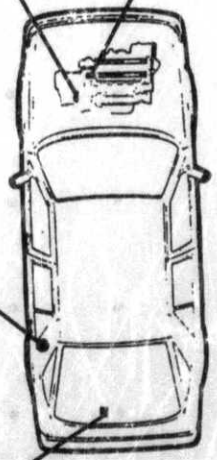

1991-




Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería

1990




Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería

1-A12




Body number
Karossnummer
Número de carrocería

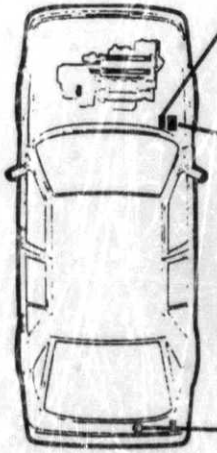



Chassis number
Chassinummer
Núm. de chasis

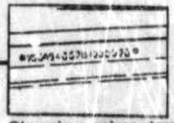


Chassis number stamped on the body.
Chassinumret är instansat i karossen.
Núm. de chasis estampado en la carrocería.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Vehicle identification Number, VIN (chassis number)

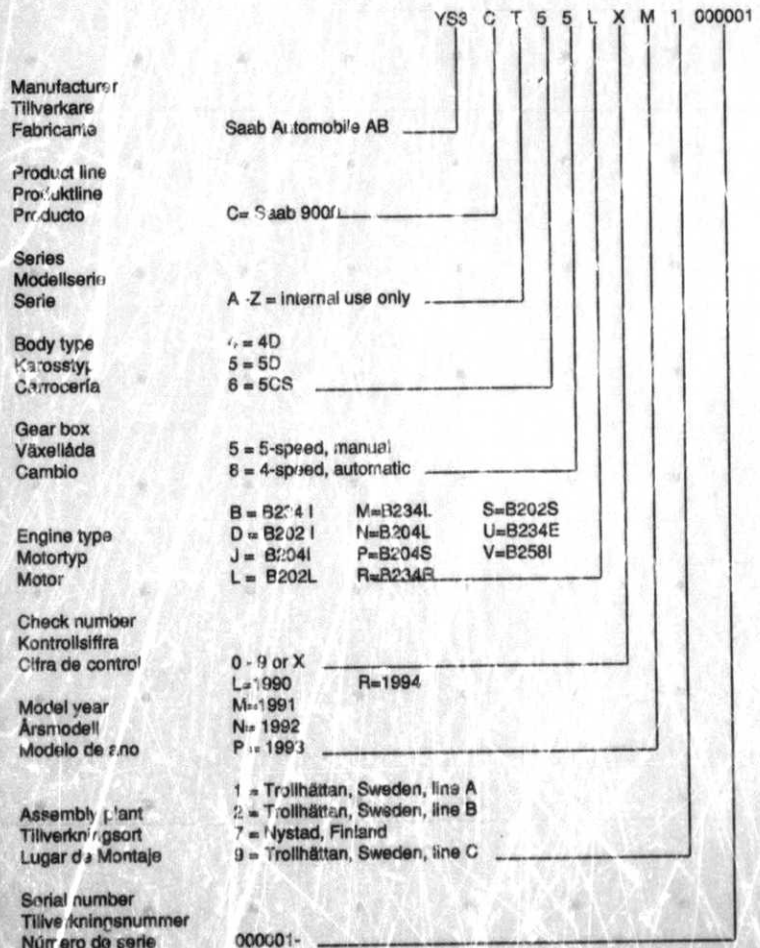

1990

YS3CD55LXL1000001-YS3CC58B3L1028512

YS3CC55D2L2000001-YS3CC55B1L2018662

YS3CC55D6L8000001-YS3CC55D1L8002053

1991

YS3CD58M2M1000001-YS3CC55D3M1029224

YS3CD45M1M2000001-YS3CD48M6M2012513

1992

YS3CD48M8N1000001-YS3CC65BXN1049024


YS3CL48M2N9000001-YS3CD58V8N9000068

1993

YS3CD65M4P1000001-YS3CD68M2P1042386

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

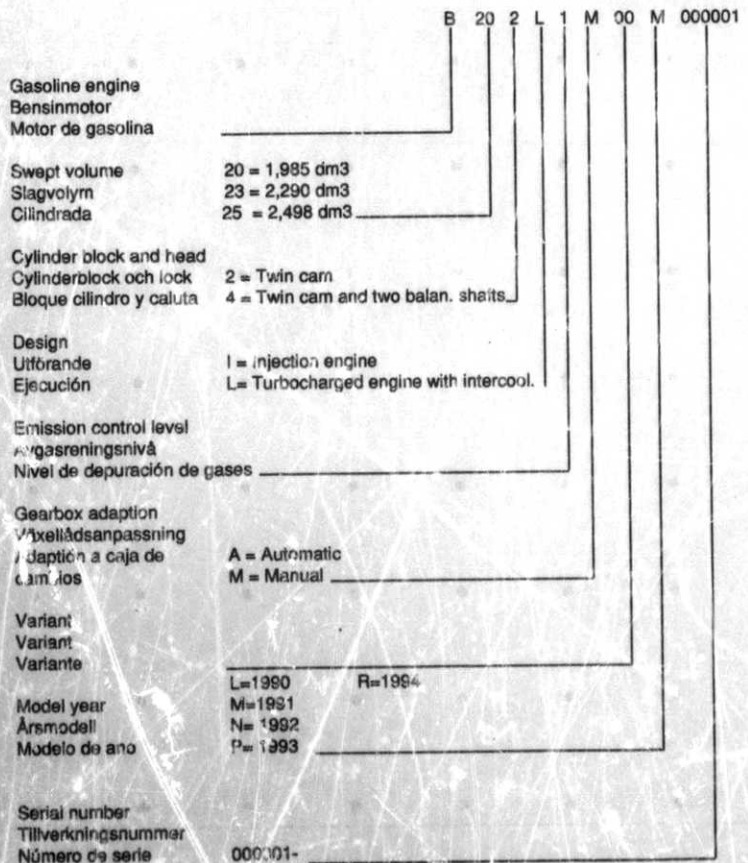

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column bellow.

Stock-keeping level 1	Parts for sevice and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts fromrecommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Oulet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Oulet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Automobile central stores in Nyköping, Sweden

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicearbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar ur lagerhållningsnivå 1-2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder artiklar ur lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saab Automobiles centrallager i Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los concepros siguientes.

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc
Nivel 6	Artículos de poco movimiento en grado extremo

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente

Nivel 1	Tallares y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precesente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén pricipalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y alguns concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Saab Automobile almacén central en Nyköping, Suecia.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Microfiche layouts

Each mircofiche card has a heading which provides information on:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Transmission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Car modell
2. Model years included on the microfiche. Edition and date.
3. Catalogue groups included on the microfiche.
4. Microfiche part number and language variant.
5. Microfiche card number.

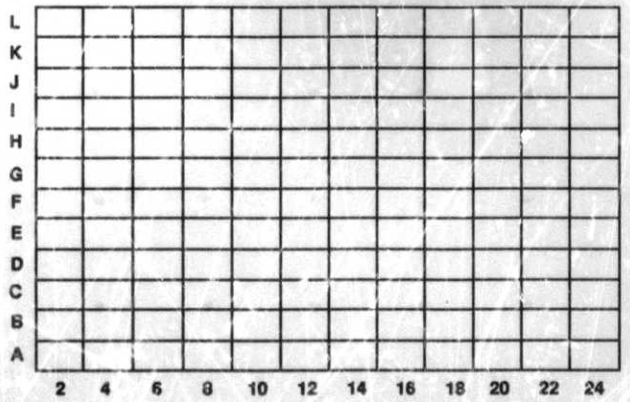

The microfiche card contains 12x12 boxes with illustration and text pages.
Each horizontal line has a letter combination and each vertical column has a digit combination.
Each box is thus given an alpha-numeric coordinate.

Microfichens uppläggning

Varje microfichekort har ett rubrikfält som ger information om:

1. Bilmodell
2. Årsmodeller som microfichen innehåller. Utgåva och datum.
3. Kataloggruppar som finns på kortet.
4. Microfichens artikelnummer och språkvariant.
5. Microfichekortets nummer.


Microfichekortet innehåller 12x12 rutor med bild och textsidor.
Varje horisontell rad har en bokstavsbeteckning och varje vertikal rad en sifferbeteckning.
Varje ruta får på detta sätt en koordinatbeteckning bokstav-siffra.

Disposición de la microficha

Cada tarjeta de microficha cuenta con un encabezamiento que proporciona la siguiente información:

SAAB 9000 ①	M 90- Ed 6 March 9 ②	3 El. syst instr. A02 4 Transmission J02 ③	④ Art No 170001 GB/SE	2/4 ⑤

1. Modelo del automóvil.
2. Años de modelos contenidos en la microficha. Edición y fecha.
3. Grupos de catálogo incluídos en la microficha.
4. Número de artículo y variante de idioma de la microficha.
5. Número de tarjeta de la microficha.

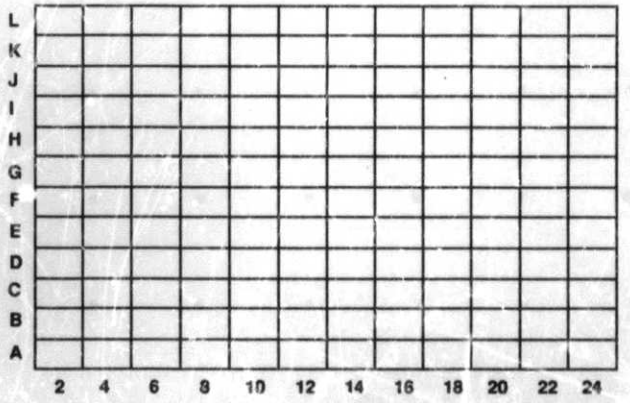

Cada tarjeta contiene 12x12 casillas con páginas de figuras y de texto.
Cada línea horizontal cuenta con una denominación alfabética y cada columna verticale con una numérica.
Cada casilla obtiene de esta manera una coordenada alfa-numérica.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


Illustration page
Each text section has an illustration page. The illustration page is repeated as long as the text section in question is continued.

A complete unit is marked with a ring around the item number.

A kit can be indicated through the item number poiting to several parts.

A kit can also be indicated through the item number being repeated several times.

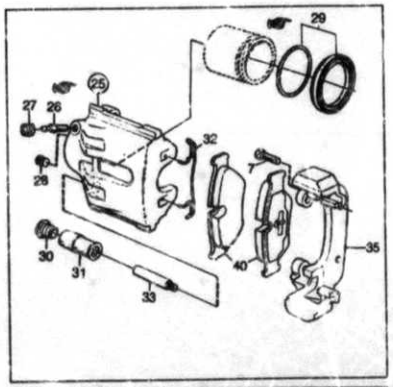

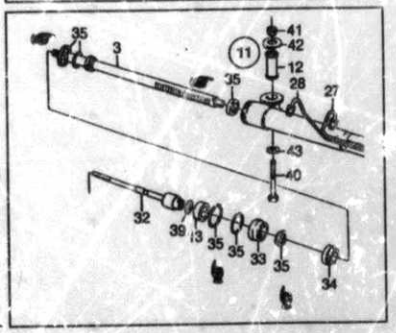

Bildsida
Varje textsida har en bildsida. Bildsidan uppredas så länge resp. textavsnitt varar.

Komplett enhet markeras med en ring runt positionsnumret.

En sats kan visas genom att positionsnumret pekar på flera delar.

En sats kan också visas genom att positionsnumret upprepas flera gånger.

Las páginas con figuras
A cada sección de texto le corresponde una página con una figura. Esta página se repite hasta que el texto en cuestión haya finalizado.

Cada unidad completa se marca con un círculo alrededor del número de posición.


Un juego puede ser indicado con el número de posición señalando hacia las distintas piezas.

Un juego puede también ser indicado repitiendo varias veces el número de posición.

Deviations for certain markets or alternative designs are sometimes indicated in a box.

Avvikelser för vissa marknader eller alternativa utföranden visas ibland i ruta.


Las posibles distintas ejecuciones para algunos mercados, o diseños alternativos, son mostrados a veces en recuadros en una casilla.

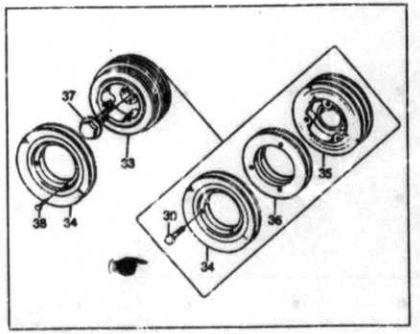

Adjecent parts are indicated on certain illustrations by means of dotted lines or with a rhomb and a note on the text page indicates where you can find the part.

På vissa bilder tecknas *närliggande artiklar* in med prickad linje eller med en romb och en not på textsidan visar var du kan finna artikeln.

Las piezas adyacentes han sido dibujadas en algunas ilustraciones con líneas punteadas o con un rombo, indicando una nota en la página de texto donde puede encontrarse la pieza.

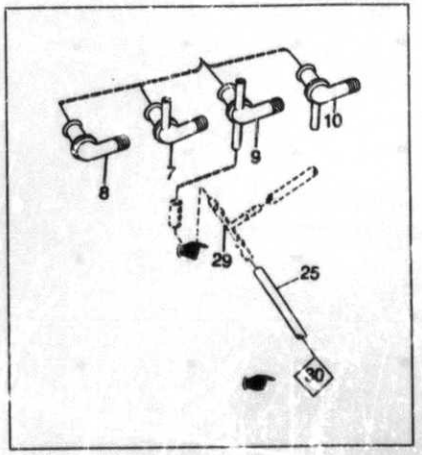


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

1-A23

Text page | **Text sida**
Las páginas con texto

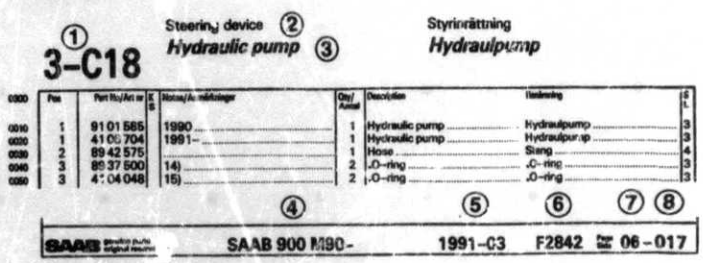


1. Microfiche coordinate for the retrievel system, 3-C18 where 3 is the serial number of the microfiche card, C is the microfiche line and 18 is the microfiche column.
2. Subgroup titel in English and Swedish.
3. Section title in English and Swedish.
4. Car model and model years included in the microfiche card.
5. Date (for internal use).
6. Illustration number (for internal use).
7. Main group.
8. Page number within main group.

1. Fichekoordinat för söksystemet, 3-C18 där 3 är fichekortets löpnummer, C är horisontell ficherad och 18 vertikal ficherad.
2. Undergruppstitel på engelska och svenska.
3. Avsnittstitel på engelska och svenska.
4. Bilmodell och årsmodeller som fichekortet täcker.
5. Datum (för internt bruk).
6. Illustrations nummer (för internt bruk).
7. Huvudgrupp.
8. Sidnummer inom huvudgruppen.

1. Coordenada de la microficha para el sistema de búsqueda, 3-C18 en la que 3 es el número de serie de la tarjeta, C es la línea de la microficha y 18 la columna de la misma.
2. Titulo del subgrupo en inglés y sueco.
3. Titulo de la sección en inglés y sueco.
4. Modelos y años de automóviles incluidos en la tarjeta.
5. Fecha (para uso interno).
6. Número de la figura (para uso interno).
7. Groupo principal.
8. Número de página dentro del grupo principal.

1-A24

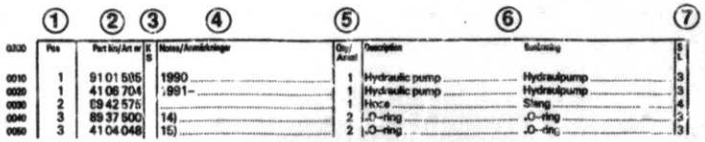

1. Item numbers for the part illustrated on the illustration page. Note that the item can be repeated.
   The item is specified in most cases with digits but digit + letter combinations can also occur.
2. Part numbers. A dot to the left of the part number indicates that the number has been added since the preceding edition.
3. An "S" in this column indicates that the part is included in a kit.
4. Comments column. Limitations and restrictions of various kinds are indicated here.
   To permit part numbers which have expired to be identified, the old numbers is written in parentheses.
5. Quantity column.
6. Names in English and Swedish. A dot in front of the name indicates that the part is included in the immediately superior article. For example: item 3 is included in item 2 and accompanies item 2 when item 2 is purchased.
7. Stock keeping level.

1. Positionsnummer på den illustrerade artikeln på bildsidan. Observera att position kan upprepas.
   Positionen anges i de flesta fall med siffror men även siffra + bokstav kan förekomma.
2. Artikelnummer. En punkt till vänster om artikelnumret visar att numret tillkommit sedan föregående utgåva.
3. Ett "S" i kolumnen markerar att artikeln ingår i en sats.
4. Anmärkningskolumn, här anges begränsningar och restriktioner av olika slag.
   För att kunna identifiera utgångna artikelnummer skrivs det gamla numret ut inom parentes.
5. Antalskolumn.
6. Benämning på engelska och svenska. Punktmarkering framför benämningen anger att artikeln ingår i närmast överordnad artikel. Ex: pos 3 ingår i pos 2 och medföljer vid köp av pos 2.
7. Lagerhållningsnivå.

1. Números de posición de la pieza presentada en la página con figura. Observar que esta pieza puede aparecer varias veces.
   La posición se indica en la mayoría de los casos con cifras aunque también pueden aparecer combinaciones alfanuméricas.
2. Números de artículo. Un punto a la izquierda del número de artículo indica que este numero ha sido añadido después de la edición precedente.
3. Una "S" en la columna indica que el artículo forma parte de un juego.

4. Columna para observaciones. En esta se indican las distintas limitaciones y restricciones.
   Para poder identificar un número de artículo suprimido, los números antiguos aparecen entre paréntesis.
5. Columna de cantidad.
6. Denominaciones en inglés y sueco. La marcación punteada delante de la denominación indica que el artículo forma parte del artículo inmediatamente superior. Por ejemplo: el art. 3 forma parte del art. 2 y es incluido al comprar el art. 2.
7. Nivel de almacenamiento.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Master and group indexes

The catalogue is divided into 12 main groups. The master index which is located on the top righthand corner on each microfiche box, indicates the coordinate at which each main group begins.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3	Electrical system,	
	Instruments	2-A02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly,	
	Steering	3-C02
7	Suspension,	
	Wheels	3-E02
8A	Body, external	3-F02
8B	Body, internal	4-A02
8C	Body, heating and	
	ventilation	4-G02
9	Tools,	
	Labels	4-I02
10	Numerical	
	register	4-J02

The main groups are subdivided into subgroups. The group index indicates the coordinate at which the subgroups begin.

2 GROUP INDEX

Engine body	1-B10
Lubrication system	1-C16
Fuel system	1-D02
Inlet and exhaust system	1-D24
Cooling system	1-F18
Engine control	1-G18
Supercharging system	1-G20
Kits	1-H02

Numerical register
Registro numérico

4–K23 *Numerical register*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 33 385	08A	089	3–H18
98 33 476	088	093	4–D22
98 33 484	088	093	4–D22
98 33 492	088	093	4–D22
98 33 500	088	093	4–D22
98 41 958	03	055	2–C08
98 43 608	088	113	4–E18
98 47 377	08A	089	3–H18
98 47 385	08A	089	3–H18
98 48 169	088	127	4–F08
98 67 896	088	071	4–C24
98 67 896	088	075	4–D04
98 68 977	088	059	4–C12
98 68 977	088	073	4–D02
98 68 985	088	059	4–C12
98 81 665	088	077	4–D08
98 81 806	088	117	4–E22
98 81 913	08A	111	3–I16
98 81 921	08A	111	3–I16
98 82 051	088	079	4–D08

On the last microfiche card there is a numerical register with coordinate reference to the page where the part number is located.
En la última tarjeta de la microficha exista un registro numérico que mediante coorde-

Nummerregister

Nummerregister

På sista fichekortet i katalogen finns ett nummerregister med koordinathänvisning till den sida som artikelnumret finns på.

nadas indica la página donde aparece el número de artículo.

New parts
Artículos nuevos

4–K24 *New parts*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 89 828	03	117	2–E22
40 89 836	03	145	2–G02
40 84 935	088	013	4–A14
40 84 943	088	011	4–A12
40 84 950	088	011	4–A12
41 75 923	03	053	2–C06
41 79 949	03	085	2–D14
41 95 954	03	035	4–I06
42 83 198	03	017	3–C18
43 50 427	08C	009	4–G10

In the end of the numerical register there is a register for additional parts since the preceding edition.
Al final del registro numérico existe un registro sobre los artículos aparecidos desde

Nya artiklar

Nya artiklar

I slutet av nummerregistret finns ett register på nytillkomna artiklar sedan föregående utgåva.
la edición precedente.

Deleted parts
Artículos suprimidos

4–L02 *Deleted parts*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
66 52 717			
75 97 286			
82 43 990			
82 44 006			
84 26 316			

Last in the numerical register there is a register for parts that has been deleted since the preceding edition.
Al final del registro numérico existe en registro de los artículos suprimidos desde la edición precedente.

Utgångna artiklar

Utgångna artiklar


Sist i nummerregistret finns ett register på artiklar som utgått sedan föregående utgåva.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


1-B03

Colour marking spring and spring strut
Färgmärkning fjäder och fjäderben
Marcación de color resorte y brazo amuelle

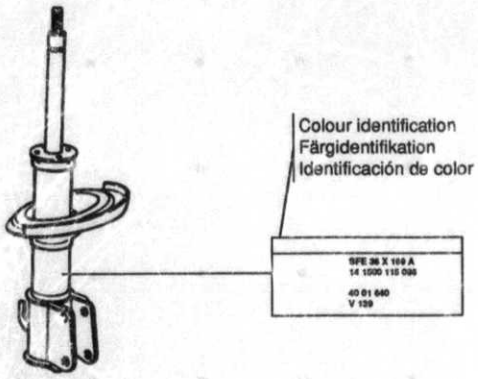

Alt 1

Alt 2

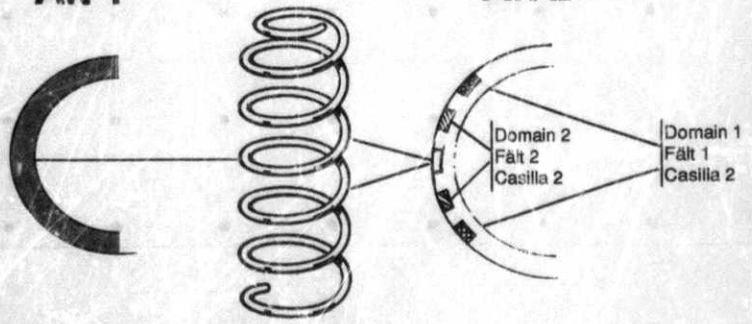

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

1-C02



Engine
Motor
Motor

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370
0380
0390
0400

TABLE OF CONTENTS

Engine body		
Engine suspension	2 : 9	1-C10
Cylinder head B202	2 : 11	1-C12
Cylinder head B234	2 : 15	1-C16
Cylinder block B202	2 : 19	1-C20
Cylinder block B234	2 : 21	1-C22
Short engine	2 : 23	1-C24
Transmission B202	2 : 25	1-D02
Transmission B234	2 : 27	1-D04
Transmission balancer shafts B234	2 : 29	1-D06
Crankshaft, connecting rod, piston, flywheel, B202	2 : 31	1-D08
Crankshaft, connecting rod, piston, flywheel, B234	2 : 35	1-D12
Lubrication system		
Oil pump, oil filter, B202 Turbo	2 : 39	1-D16
Oil pump, oil filter, B202 I	2 : 41	1-D18
Oil pump, oil filter, B234	2 : 43	1-D20
Oil pipes, B202 Turbo	2 : 45	1-D22
Oil pipes, B234 Turbo	2 : 47	1-D24
Fuel system		
Air cleaner, Turbo	2 : 49	1-E02
Air cleaner, 128), B202I	2 : 51	1-E04
Air cleaner, 129), B202I	2 : 53	1-E06
Air cleaner, B234I	2 : 55	1-E08
Filler device, -1991	2 : 57	1-E10
Filler device, 1992-	2 : 59	1-E12
Fuel tank	2 : 61	1-E14
Fuel pump -1991	2 : 65	1-E18
Fuel pump 1992-	2 : 67	1-E20
Distribution pipe B202	2 : 69	1-E22
Distribution pipe B234	2 : 71	1-E24
Electronic unit, LH	2 : 75	1-F04
Electronic unit, TRIONIC	2 : 77	1-F06
Bracket electronic unit, LH, TRIONIC	2 : 79	1-F08
Evaporative loss control device, (ELCD) -1991	2 : 81	1-F10
Evaporative loss control device, (ELCD) 1992-	2 : 83	1-F12

128) Ch. --N1038980.
129) Ch. N1038981--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-C03

TABLE OF CONTENTS

Inlet and exhaust system		
Inlet manifold, B202, Not US	2 : 85	1-F14
Inlet manifold, parted, B202	2 : 87	1-F16
Inlet manifold, B234 i	2 : 89	1-F18
Inlet manifold, B234I, not US, 1991	2 : 91	1-F20
Inlet manifold, B234I, US, -1991	2 : 93	1-F22
Inlet manifold, B234I, 1992-	2 : 95	1-F24
Inlet manifold, B234 Turbo	2 : 97	1-G02
Throttle valve housing	2 : 99	1-G04
Automatic idling speed control system, B202	2 : 103	1-G08
Automatic idling speed control system, B234I	2 : 105	1-G10
Automatic idling speed control system, B234TURBO	2 : 107	1-G12
Electronic Throttle System (ETS)	2 : 109	1-G14
Exhaust manifold, Turbo	2 : 111	1-G16
Exhaust manifold, B202 I	2 : 113	1-G18
Exhaust manifold, B234 I	2 : 115	1-G20
EGR system	2 : 117	1-G22
EGR system, electronic	2 : 119	1-G24
Exhaust system, Turbo	2 : 121	1-H02
Exhaust system, Turbo with catalytic converter	2 : 123	1-H04
Exhaust system, B234 Turbo, 1993, SE, US	2 : 125	1-H06
Exhaust system, I	2 : 127	1-H08
Exhaust system, I with catalytic converter	2 : 129	1-H10
Exhaust system, B234 I, 1993, SE, US	2 : 131	1-H12
Cooling system		
Radiator, etc	2 : 133	1-H14
Fan, B202 Turbo	2 : 139	1-H20
Fan, B202 I	2 : 141	1-H22
Charge cooler	2 : 143	1-H24
Air oil cooler, engine, B202	2 : 145	1-I02
Air oil cooler, engine, B234	2 : 147	1-I04
Air oil cooler, automatic transmission, 62)	2 : 149	1-I06
Air oil cooler, automatic transmission, 63)	2 : 151	1-I08
Coolant pump, B202	2 : 153	1-I10
Coolant pump, B234	2 : 155	1-I12
Thermostat, etc	2 : 157	1-I14
Engine control		
Accelerator control	2 : 161	1-I18
Supercharging system		
Turbocharger TE05	2 : 163	1-I20
Turbocharger T25, TD04	2 : 165	1-I22
APC-system	2 : 169	1-J02
Kits		
Engine	2 : 171	1-J04

62. Ch. --L1013312, --L2009535, --L8001517.
63. Ch. L1013313--, L2009536--, L8001518--.

1-C04

INNEHÅLLSFÖRTECKNING

Motorkropp		
Motorupphängning	2 : 9	1-C10
Cylinderhuvud B202	2 : 11	1-C12
Cylinderhuvud B234	2 : 15	1-C16
Cylinderblock B202	2 : 19	1-C20
Cylinderblock B234	2 : 21	1-C22
Grundmotor	2 : 23	1-C24
Transmission B202	2 : 25	1-D02
Transmission B234	2 : 27	1-D04
Transmission balansaxlar B234	2 : 29	1-D06
Vevaxel, vevstake, kolv, svänghjul, B202	2 : 31	1-D08
Vevaxel, vevstake, kolv, svänghjul, B234	2 : 35	1-D12
Smörjsystem		
Oljepump, oljefilter, B202 Turbo	2 : 39	1-D16
Oljepump, oljefilter, B202 I	2 : 41	1-D18
Oljepump, oljefilter, B234	2 : 43	1-D20
Oljerör, B202 Turbo	2 : 45	1-D22
Oljerör, B234 Turbo	2 : 47	1-D24
Bränslesystem		
Luftrenare, Turbo	2 : 49	1-E02
Luftrenare, 128), B202I	2 : 51	1-E04
Luftrenare, 129), B202I	2 : 53	1-E06
Luftrenare, B234I	2 : 55	1-E08
Påfyllningsdon, -1991	2 : 57	1-E10
Påfyllningsdon, 1992-	2 : 59	1-E12
Bränsletank	2 : 61	1-E14
Bränslepump -1991	2 : 65	1-E18
Bränslepump 1992-	2 : 67	1-E20
Fördelningsrör B202	2 : 69	1-E22
Fördelningsrör B234	2 : 71	1-E24
Elektronikenhet LH	2 : 75	1-F04
Elektronikenhet TRIONIC	2 : 77	1-F06
Fäste elektronikenhet LH, TRIONIC	2 : 79	1-F08
Slutet bränslesystem (ELCD) -1991	2 : 81	1-F10
Slutet bränslesystem (ELCD) 1992-	2 : 83	1-F12

128) Ch. --N1038980.
129) Ch. N1038981--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-C05

INNEHÅLLSFÖRTECKNING

Inlopps- och avgassystem		
Inloppsrör, B202, Ej US	2 : 85	1-F14
Inloppsrör, delat, B202	2 : 87	1-F16
Inloppsrör, B234 I	2 : 89	1-F18
Inloppsrör, B234 I, ej US, 1991	2 : 91	1-F20
Inloppsrör, B234 I, US, -1991	2 : 93	1-F22
Inloppsrör, B234 I, 1992-	2 : 95	1-F24
Inloppsrör, B234 Turbo	2 : 97	1-G02
Spjällhus	2 : 99	1-G04
Automatisk tomgångsreglering, B202	2 : 103	1-G08
Automatisk tomgångsreglering, B234I	2 : 105	1-G10
Automatisk tomgångsreglering, B234TURBO	2 : 107	1-G12
Electronic Throttle System (ETS)	2 : 109	1-G14
Avgassamlare, Turbo	2 : 111	1-G16
Avgassamlare, B202 I	2 : 113	1-G18
Avgassamlare, B234 I	2 : 115	1-G20
EGR-system	2 : 117	1-G22
EGR-system, elektroniskt	2 : 119	1-G24
Avgassystem, Turbo	2 : 121	1-H02
Avgassystem, Turbo med katalytisk reaktor	2 : 123	1-H04
Avgassystem, B234 Turbo, 1993, SE, uS	2 : 125	1-H06
Avgassystem, I	2 : 127	1-H08
Avgassystem, I med katalytisk reaktor	2 : 129	1-H10
Avgassystem, B234 I, 1993, SE, US	2 : 131	1-H12
Kylsystem		
Kylare, etc	2 : 133	1-H14
Fläkt, Turbo	2 : 139	1-H20
Fläkt, I	2 : 141	1-H22
Laddluftkylare	2 : 143	1-H24
Luftoljekylare, motor, B202	2 : 145	1-I02
Luftoljekylare, motor, B234	2 : 147	1-I04
Luftoljekylare, automatväxellåda, 62)	2 : 149	1-I06
Luftoljekylare, automatväxellåda, 63)	2 : 151	1-I08
Kylvätskepump, B202	2 : 153	1-I10
Kylvätskepump, B234	2 : 155	1-I12
Termostat, etc	2 : 157	1-I14
Motorreglage		
Gasreglage	2 : 161	1-I18
Överladdningssystem		
Turbokompressor TE05	2 : 163	1-I20
Turbokompressor T25, TD04	2 : 165	1-I22
APC-system	2 : 169	1-J02
Satser		
Motor	2 : 171	1-J04

62. Ch. --L1013312, --L2009535, --L8001517.
63. Ch. L1013313--, L2009536--, L8001518--.

1-C06

SUMARIO

Cuerpo del motor		
Soportes del motor	2 : 9	1-C10
Culata, B202	2 : 11	1-C12
Culata, B234	2 : 15	1-C16
Bloque de cilindros, B202	2 : 19	1-C20
Bloque de cilindros, B234	2 : 21	1-C22
Motor de base	2 : 23	1-C24
Distribucion, B202	2 : 25	1-D02
Distribucion, B234	2 : 27	1-D04
Distribucion, ejes equilibradores, B234	2 : 29	1-D06
Ciguenal, bielas, pistones, volante, B202	2 : 31	1-D08
Ciguenal, bielas, pistones, volante, B234	2 : 35	1-D12
Sistema de engrase		
Bomba de aceite, filtro de aceite, B202Turbo	2 : 39	1-D16
Bomba de aceite, filtro de aceite, B202I	2 : 41	1-D18
Bomba de aceite, filtro de aceite, B234	2 : 43	1-D20
Tubo de aceite, B202 Turbo	2 : 45	1-D22
Tubo de aceite, B234 Turbo	2 : 47	1-D24
Sistema de combustible		
Depurador de aire, Turbo	2 : 49	1-E02
Depurador de aire, 128), B202I	2 : 51	1-E04
Depurador de aire, 129), B202I	2 : 53	1-E06
Depurador de aire, B234I	2 : 55	1-E08
Combustible dispositivo de illenado,-1991	2 : 57	1-E10
Combustible dispositivo de illenado,1992-	2 : 59	1-E12
Desposito de combustible	2 : 61	1-E14
Bomba de combustible -1991	2 : 65	1-E18
Bomba de combustible 1992-	2 : 67	1-E20
Medidor de flujo de aire B202 -1993	2 : 69	1-E22
Medidor de flujo de aire B204, B234	2 : 71	1-E24
Unidad electronica LH	2 : 75	1-F04
Unidad electronica TRIONIC	2 : 77	1-F06
Fijacion unidad electronica LH, TRIONIC	2 : 79	1-F08
Sistema cerrado de combustible, (ELCD) -1991	2 : 81	1-F10
Sistema cerrado de combustible, (ELCD) 1992-	2 : 83	1-F12

128) Ch. --N1039980.
129) Ch. N1039981--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

SUMARIO

Sistema de admision y de escape		
Colector de admision, B202n No US	2 : 85	1-F14
Divisible colector de admision, B202	2 : 87	1-F16
Colector de admision, B234 I	2 : 89	1-F18
Colector de admision, B234I, no US, 1991	2 : 91	1-F20
Colector de admision, B234i, US, -1991	2 : 93	1-F22
Colector de admision, B234I, 1992-	2 : 95	1-F24
Colector de admision, B234 Turbo	2 : 97	1-G02
Caja de maripoa	2 : 99	1-G04
Regulacion automatica de ralenti, B202	2 : 103	1-G08
Regulacion automatica de ralenti, B234I	2 : 105	1-G10
Regulacion automatica de ralenti, B234TURBO	2 : 107	1-G12
Electronic Throttle System (ETS)	2 : 109	1-G14
Colector de escape, Turbo	2 : 111	1-G16
Colector de escape, B202 I	2 : 113	1-G18
Colector de escape, B234 I	2 : 115	1-G20
Sistema EGR	2 : 117	1-G22
Sistema EGR, electronica	2 : 119	1-G24
SAI, Bomba aire	2 :	0-000
SAI, Valvula retancion	2 :	0-000
Sistema de escape, Turbo	2 : 121	1-H02
Sistema de escape, Turbo con reactor catalituco	2 : 123	1-H04
Sistema de escape, B234 Turbo, 1993, SE, US	2 : 125	1-H06
Sistema de escape, I	2 : 127	1-H08
Sistema de escape, I con reactor catalituco	2 : 129	1-H10
Sistema de escape, B234 I, 1993, SE , US	2 : 131	1-H12
Sistema de refrigeracion		
Radiador, etc	2 : 133	1-H14
Ventilador, Turbo	2 : 139	1-H20
Ventilador, I	2 : 141	1-H22
Radiador de air de alimentacion	2 : 143	1-H24
Radiador de aceite a aire, motor, B202	2 : 145	1-I02
Radiador de aceite a aire, motor, B234	2 : 147	1-I04
Radiador de aceite, caja de cambios automatica, 62)	2 : 149	1-I06
Radiador de aceite, caja de cambios automatica, 63)	2 : 151	1-I08
Bomba de liquido de refrigeracion, B202	2 : 153	1-I10
Bomba de liquido de refrigeracion, B234	2 : 155	1-I12
Termostato, etc	2 : 157	1-I14
Mandos del motor		
Mando de acelerador	2 : 161	1-I18
Sistema de sobrealimentacion		
Turbocompresor TE05	2 : 163	1-I20
Turbocompresor T25 TD04	2 : 165	1-I22
Sistema Air	2 : 169	1-J02
Juegos completos		
Motor	2 : 171	1-J04

62. Ch. --L1013312, --L2009535, --L8001517.
63. Ch. L1013313--, L2009536--, L8001518--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-C10

Engine suspension
Motorupphängning

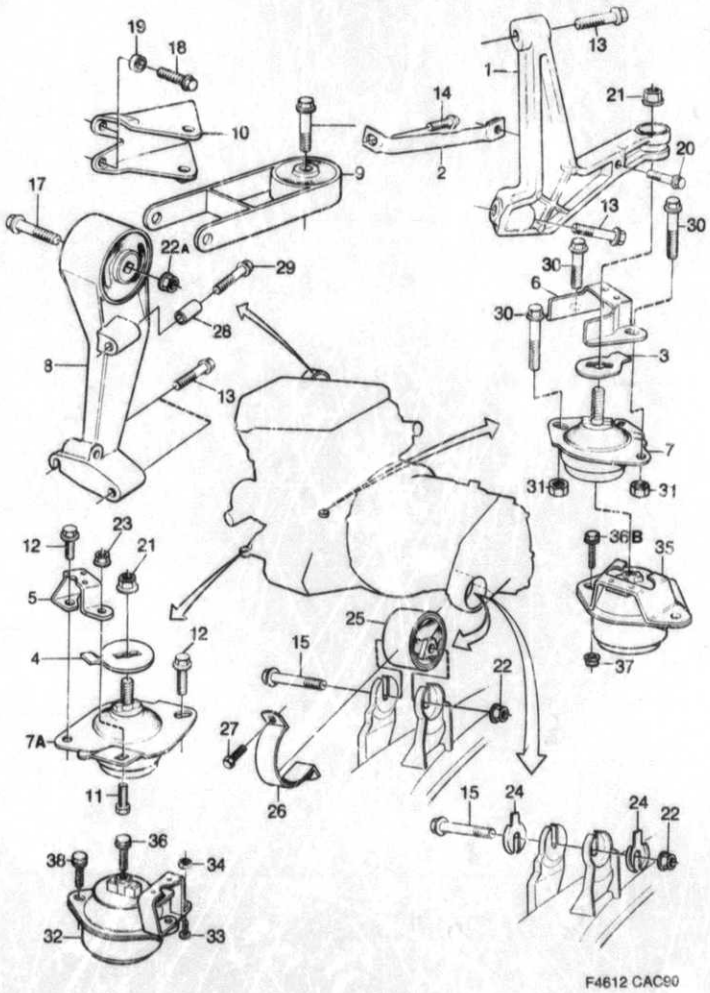

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 77 695		B202	1	Bracket	Konsol	5
0020	1			B234		Bearing bracket	Lagerbock	
0030				See page 4-C35, 3-H12				
0040	2	75 50 528			1	Stay	Stag	4
0050	3	75 51 971			1	Limiter	Begränsare	5
0060	4	75 51 963		B202TURBO	1	Limiter	Begränsare	5
0070	5	40 28 775		B202TURBO	1	Stop	Anslag	5
0080	6	40 27 520				Stop	Anslag	5
0090	7	87 86 006			1	Vibration damper	Vibrationsdämpare	3
0100	7A	87 86 006		B202TURBO	1	Vibration damper	Vibrationsdämpare	3
0110	7A	75 92 975		B202 I	1	Vibration damper	Vibrationsdämpare	3
0120	8	75 77 554		B202	1	Engine anchorage	Motorfäste	4
0130	8	75 96 521		B234	1	Engine anchorage	Motorfäste	4
0150	9	75 99 913			1	Torque rod	Momentstag	5
0160	10	87 86 071		B202	1	Bracket	Fäste	5
0170	10	75 73 413		B234	1	Bracket	Fäste	5
0180	11	75 51 385			1	Screw	Skruv	5
0190	12	79 82 143			2	Screw	Skruv	5
0200	13	79 72 292			4	Screw	Skruv	5
0210	14	79 73 779			1	Screw	Skruv	5
0220	15	79 73 571			1	Screw	Skruv	5
0230	16	79 77 267			1	Screw	Skruv	5
0250	17	79 74 777			1	Screw	Skruv	5
0260	18	80 82 943			3	Screw	Skruv	5
0270	19	75 77 893			3	Spacer	Distans	3
0280	20	79 72 292			1	Screw	Skruv	5
0290	21	79 71 765		-1991	2	Nut	Mutter	5
0300	21	79 79 552		1992-	2	Nut	Mutter	5
0310	22	79 67 979			2	Nut	Mutter	5
0320	23	79 71 658			1	Nut	Mutter	5
0330	24	93 19 294			2	Washer	Bricka	5
0340	25			M	1	Vibration damper	Vibrationsdämpare	
0350				See page 4-013, 3-H14				
0370	25	75 51 831		A	1	Vibration damper	Vibrationsdämpare	5
0380	26	75 51 328		A	1	Cap	Överfall	6
0400	27	79 70 288		A	2	Screw	Skruv	5
0420	28	75 36 857		18)	1	Spacer	Distans	6
0430	29	79 72 292			1	Screw	Skruv	5
0440	29	79 73 803		18)	1	Screw	Skruv	5
0450	29	73 78 257		B234	1	Screw	Skruv	5
0460	30	79 82 127			3	Screw	Skruv	5
0470	31	79 69 306			3	Lock nut	Låsmutter	5
0480	32	75 99 848		B234	1	Vibration damper	Vibrationsdämpare	3
0490	33	75 51 385			1	. Screw	. Skruv	5
0500	34	79 71 658			1	. Nut	. Mutter	5
0510	35	75 99 855		B234	1	Vibration damper	Vibrationsdämpare	3
0520	36	79 82 127		B234	2	Screw	Skruv	5
0530	36B	79 82 127		82), B234	3	Screw	Skruv	5
0540	36B	79 82 721		83), B234	3	Screw	Skruv	5
0550	37	79 69 306		B234	3	Lock nut	Låsmutter	5
0560	38	79 82 143		82), B234	3	Screw	Skruv	5
0570	38	79 82 721		83), B234	3	Screw	Skruv	5


18. For cars with parted inlet manifold. För bilar med delat inloppsrör.
82. Ch. --M1003240, --M2002036.
83. Ch. M1003241--, M2002037--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

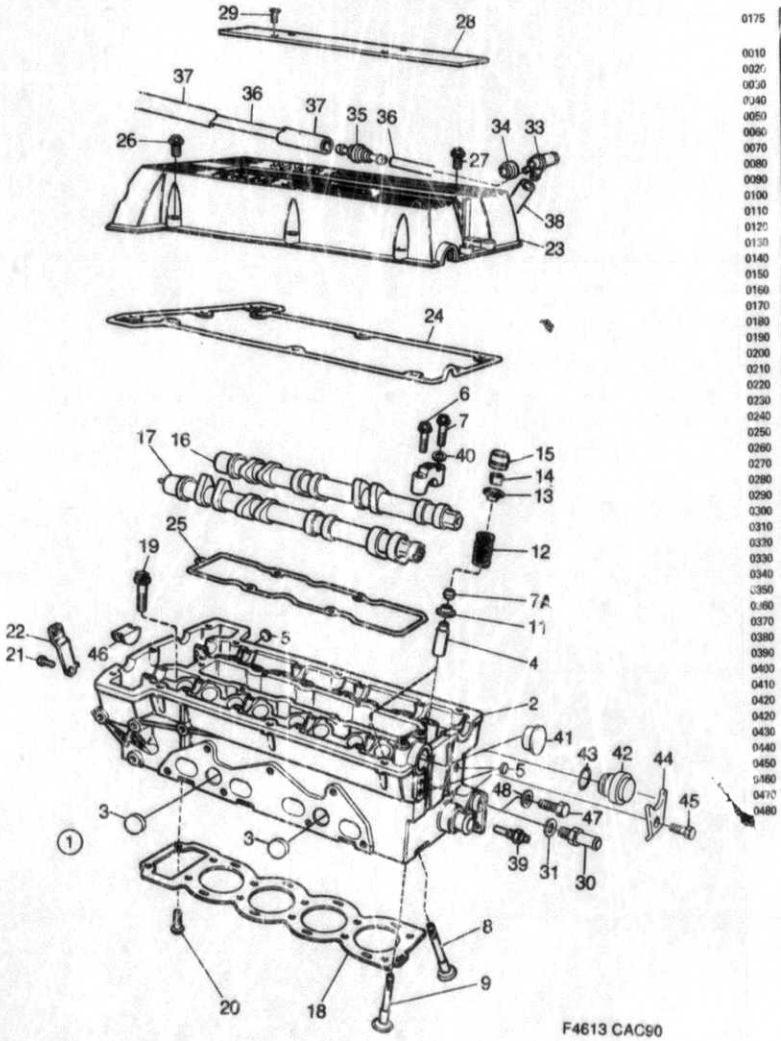

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Jmf Antal	Description	Benämning	S L
0010	1	91 07 376		7,11,12)	1	Cylinder head	Cylinderhuvud	5
0020	2	91 07 053			1	.Cylinder head	.Cylinderlock	5
0030	3	75 88 320			2	..Sealing washer	..Tätningsbricka	3
0040	4	75 60 154			16	..Valve guide	..Ventilstyrning	4
0050	4	75 69 734		36)	16	..Valve guide	..Ventilstyrning	2
0060	5	81 23 143			3	..Plug	..Plugg	3
0070	6	81 25 2*3			12	..Screw	..Skruv	5
0080	7	75 85 847			8	..Screw	..Skruv	5
0090	7A	75 00 713			16	..Seal	..Tätning	3
0100	8	74 84 801		11)	8	.Inlet valve	.Inloppsventil	3
0110	9	*75 00 085*		-1991 NLS - USE 9165598	8	.Exhaust valve	.Avgasventil	2
0120	9	91 36 250		1992-	8	.Exhaust valve	.Avgasventil	2
0130	11	75 05 134			16	.Washer	.Bricka	4
0140	12	*93 58 391*		-1991 NLS - USE 912965	16	.Spring	.Fjäder	3
0150	12	91 29 651		1992-	16	.Spring	.Fjäder	3
0160	13	75 01 349			16	.Washer	.Bricka	4
0170	14	75 15 547			32	.Valve cotte	.Knaster	2
0180	15	*93 57 716*		121) NLS - USE 91344 20	16	Tappet	Ventillyftare	
0190	15	91 34 420		122)	16	Tappet	Ventillyftare	3
0200	16	75 61 467		38)	1	Camshaft	Kamaxel	
0210	17	75 60 964		39)	1	Camshaft	Kamaxel	5
0220	18	*74 84 405*		-1992 NLS - USE 91[illegible]9079	1	Gasket	Packning	2
0230	18	91 69 079		1993-	1	Gasket	Packning	2
0240	19	*75 18 335*		99) NLS - USE 912[illegible]909	10	Screw	Skruv	5
0250	19	91 29 909		100)	10	Screw	Skruv	5
0260	20	81 25 189			2	Screw	Skruv	5
0270	21	75 04 749			1	Screw	Skruv	5
0280	22	75 21 222			1	Lifting eye	Lyftögla	6
0290	23	*91 16 062*		68) NLS - USE 7[illegible]58756	1	Valve cover	Ventilkåpa	5
0300	23	78 58 756		69)	1	Valve cover	Ventilkåpa	5
0310	24	*75 83 056*	S	40) NLS - USE 9133026	1	Gasket	Packning	1
0320	24	75 69 304	S	41)	1	Gasket	Packning	1
0330	25	75 23 962	S		1	Gasket	Packning	1
0340	26	75 60 931			16	Screw	Skruv	5
0350	26	75 60 931		DI	11	Screw	Skruv	5
0360	27	81 25 205		DI	5	Screw	Skruv	5
0370	28	75 85 532			1	Cover	Lock	3
0380	29	75 86 837		DI	4	Screw	Skruv	5
0390	29	75 86 837		68)	4	Screw	Skruv	5
0400	29	88 57 872		69)	4	Screw	Skruv	5
0410	30	74 86 906		1991-, [illegible]	1	Nipple	Nippel	5
0420	31	*83 26 712*		1991-, NLS - USE 4161162	1	Seal	Tätning	5
0430	33	75 17 048		-1991	1	Nipple	Nippel	5
0440	33	91 26 586		1992-	1	Nipple	Nippel	5
0450	34	75 15 190			1	Bushing	Bussning	5
0460	35	75 21 313			1	Non-return valve	Backventil	6
0470	36	91 36 243		L=40MM	1	Vaccum hose	Vakuumslang	5
0480	36	91 36 243		L=290MM	1	Vaccum hose	Vakuumslang	5


7. Also available as exchange unit. Finns även som utbytesenhet.
11. With Stellite coated intake valves Med Stellitebelagda inloppsventiler.
12. With valves. Med ventiler.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.
40. Engine B202 --L015906, Engine B234 --L200531.
41. Engine B202 L015907-, Engine B234 L200532-.
68. Engine --L050918.
69. Engine L050919-.
99. Engine --M038386.
100. Engine M038387-.
121. Engine --N238284.
122. Engine N238285-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

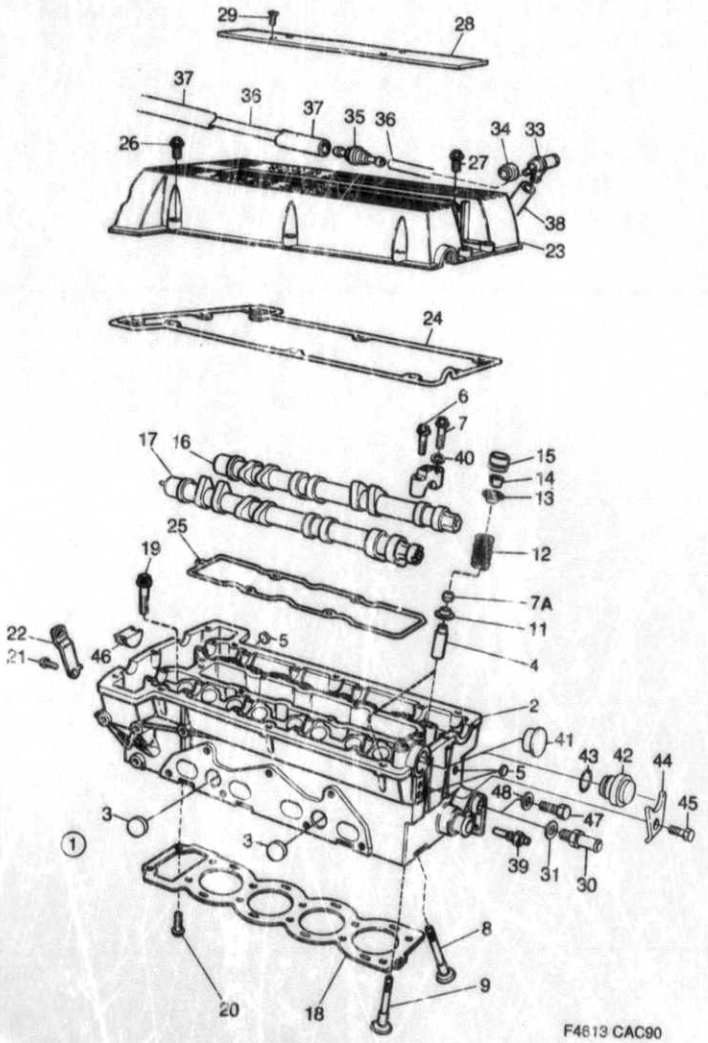

F4613 CAC90

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	37	87 86 436		L=290MM	1	Hose	Slang	4
0500	37	87 86 444		L=360MM	1	Hose	Slang	4
0510	38	74 84 454		I	1	Hose	Slang	4
0520	38	75 19 697		TURBO	1	Hose	Slang	4
0530	39	*88 00 914*		70) NLS - USE 9108291	1	Sensor	Givare	2
0540	39	*88 59 233*		71,-1990) NLS - USE 9108291	1	Sensor	Givare	2
0550	39	91 08 291		1991-	1	EC temperature sensor	Temperaturgivare	2
0560	40	91 14 885			16	Sealing washer	Tätningsbricka	5
0570	41	75 63 075		-1990	1	Plug	Plugg	2
0580	42	91 31 004		1991-	1	Plug	Plugg	2
0590	43	75 19 143		1991-	1	O-ring	O-ring	6
0600	44	83 62 287		1991-	1	Bracket	Hållare	5
0610	45	*80 82 950*		1991-1992 NLS - USE 9166323	1	Screw	Skruv	5
0620	45	91 66 323		1993-	1	Screw	Skruv	5
0630	46	75 00 069	S	40)	3	Plug	Plugg	2
0640	47	*81 23 721*		142), I NLS - USE 7563042	1	Plug	Propp	5
0650	48	*85 26 712*		142), I NLS - USE 4161162	1	Seal	Tätning	5
0660								
0670		*88 18 254*		40)	X	Gasket kit	Packningsats	1
0680				See page 2-171, 1-J04 NLS - USE 8822041				
0690		93 21 404		41)	X	Gasket kit	Packningsats	1
0700				See page 2-171, 1-J04				
0710		88 19 831		See page 2-171, 1-J04	X	Gasket kit	Sotningssats	2
0720								
0730		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


40. Engine B202 -L015906, Engine B234 -L200531.
41. Engine B202 L015907-, Engine B234 L200532-.
70. Engine -L030814.
71. Engine L030815-.
142. Engine N337174-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

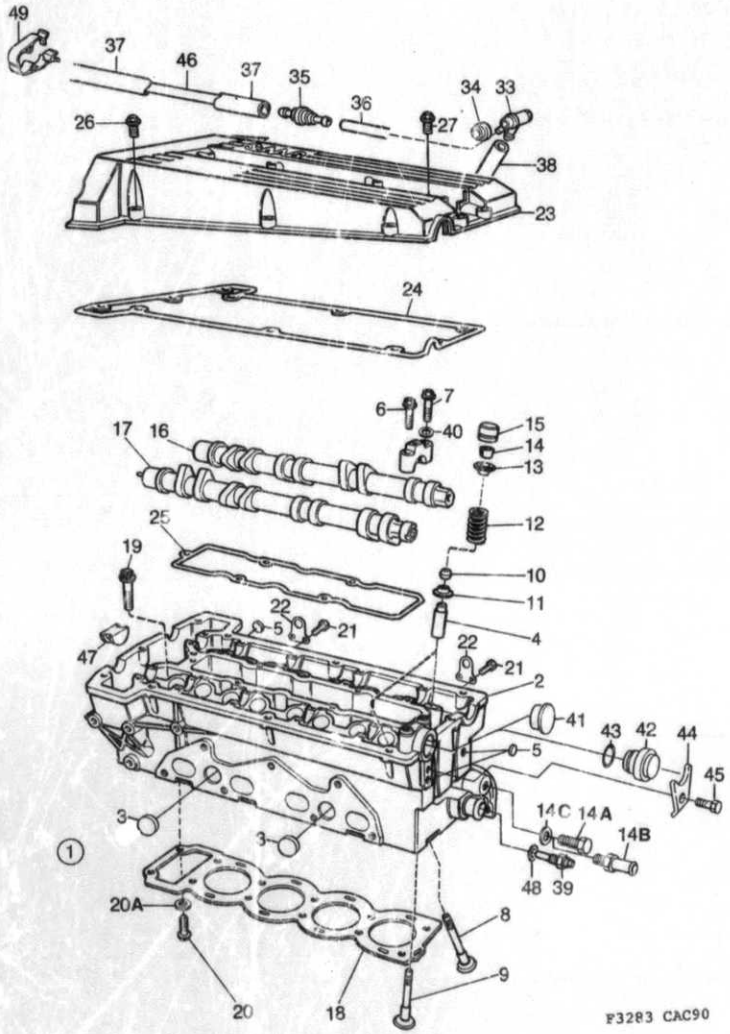

0185	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*91 15 346*		7,11,58) NLS - USE 9129669	1	Cylinder head	Cylinderhuvud	5
0020	1	*93 57 765*		7,11,59)-1990 NLS - USE 9129669	1	Cylinder head	Cylinderhuvud	5
0030	1	*88 57 765*		7,11)-1990, US NLS - USE 9129669	1	Cylinder head	Cylinderhuvud	5
0040	1	*78 72 070*		7), 1991-, I NLS - USE 9129669	1	Cylinder head	Cylinderhuvud	5
0050	1	91 29 689		7), 1991-, TURBO	1	Cylinder head	Cylinderhuvud	5
0060	2	91 15 353			1	.Cylinder head	.Cylinderlock	5
0070	3	75 88 320			2	..Sealing washer	..Tätningsbricka	3
0080	4	74 80 577			16	..Valve guide	..Ventilstyrning	4
0100	4	74 80 569		-1990,36)	16	..Valve guide	..Ventilstyrning	2
0110	4	91 19 942		1991-,36)	16	..Valve guide	..Ventilstyrning	2
0120	5	81 23 143			3	..Plug	..Plugg	3
0130	6	81 25 213			12	..Screw	..Skruv	5
0140	7	75 85 847			8	..Screw	..Skruv	5
0150	8	74 84 801		11)	8	.Inlet valve	.Inloppsventil	3
0160	9	*75 00 085*		-1991 NLS - USE 9165598	8	.Exhaust valve	.Avgasventil	2
0170	9	91 36 250		1992-	8	.Exhaust valve	.Avgasventil	2
0180	10	75 00 713			16	.Seal	.Tätning	3
0190	11	75 05 134			16	.Washer	.Bricka	4
0200	12	*93 58 391*		-1991, I NLS - USE 9129651	16	.Spring	.Fjäder	3
0210	12	91 29 636		-1991, TURBO	16	.Spring	.Fjäder	3
0220	12	91 29 651		1992-	16	.Spring	.Fjäder	3
0230	13	75 01 349			16	.Washer	.Bricka	4
0240	14	75 15 547			32	.Valve cone	.Knaster	2
0250	14A	*81 23 721*		58) NLS - USE 7563042	1	Plug	Propp	5
0260	14B	*74 86 806*		59)	1	Nipple	Nippel	5
0270	14B	*74 86 806*		US	1	Nipple	Nippel	5
0280	14C	*89 81 961*		58)	1	Seal	Tätning	5
0290	14C	*83 26 712*		59) NLS - USE 4161162	1	Seal	Tätning	5
0300	14C	*83 26 712*		US NLS - USE 4161162	1	Seal	Tätning	5
0310	15	*93 57 716*		123) NLS - USE 9134420	16	Tappet	Ventillyftare	
0320	15	91 34 420		124)	16	Tappet	Ventillyftare	3
0330	16	*91 16 690*		-1992,38) NLS - USE 9145657	1	Camshaft	Kamaxel	5
0340	16	*91 48 305*		1993,38) NLS - USE 9145657	1	Camshaft	Kamaxel	5
0350	17	*91 16 708*		-1992,39) NLS - USE 9148313	1	Camshaft	Kamaxel	5
0360	17	91 48 313		1993,39)	1	Camshaft	Kamaxel	5
0370	18	*74 84 405*		-1992 NLS - USE 9169079	1	Gasket	Packning	2
0380	18	91 69 079		1993	1	Gasket	Packning	2
0390	19	*75 18 335*		90) NLS - USE 9129909	10	Screw	Skruv	5
0400	19	91 29 909		91)	10	Screw	Skruv	5
0410	20	80 98 097			2	Screw	Skruv	5
0420	20A	80 29 985		-1992	2	Washer	Bricka	5
0430	20A	91 66 372		1993	2	Washer	Bricka	5
0440	21	75 04 749			4	Screw	Skruv	5
0450	22	74 81 757			2	Lifting eye	Lyftögla	6


7. Also available as exchange unit. Finns även som utbytesenhet.
11. With Stellite coated intake valves Med Stellitbelagda inloppsventiler.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.
58. Engine --L206394.
59. Engine L206395--.
90. Engine --M215388.
91. Engine M215389--.
123. Engine --N421000.
124. Engine N421001--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

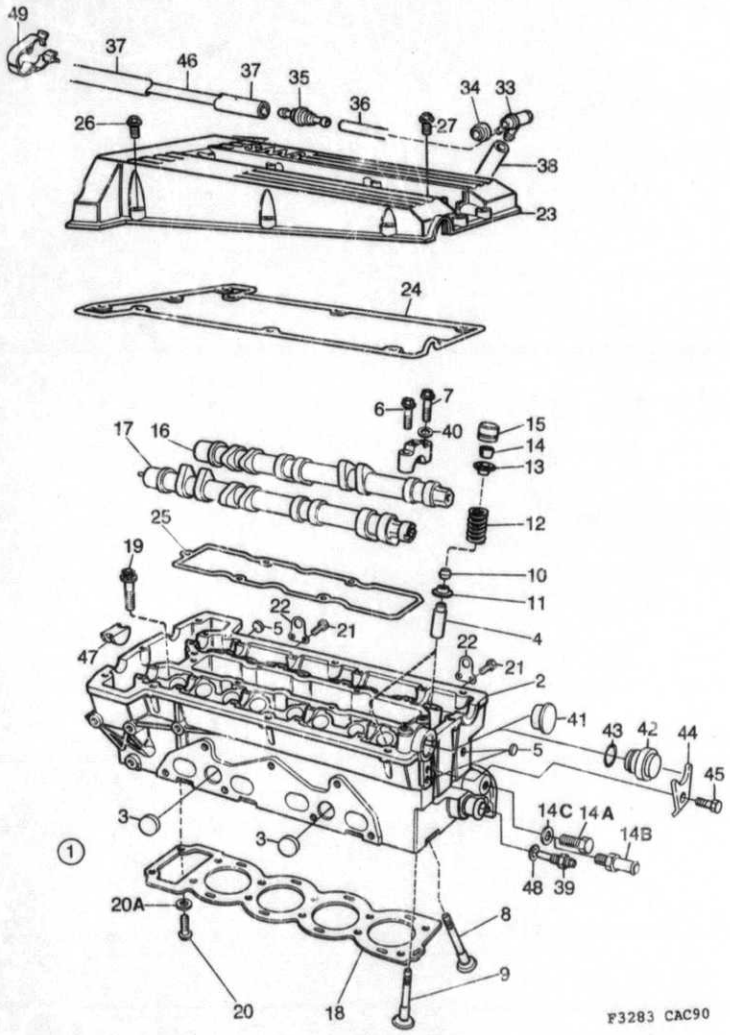

0185	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460	23	87 88 135			1	Valve cover	Ventilkåpa	5
0470	24	*75 88 056*	S	40) NLS - USE 9133026	1	Gasket	Packning	1
0480	24	75 69 304	S	41)	1	Gasket	Packning	1
0490	25	75 23 962	S		1	Gasket	Packning	1
0500	26	91 19 967		165)	11	Screw	Skruv	5
0510	26	75 60 931		166)	11	Screw	Skruv	5
0520	27	75 60 931			5	Screw	Skruv	5
0530	33	75 17 048			1	Nipple	Nippel	5
0540	34	75 15 190			1	Bushing	Bussning	5
0550	35	75 21 313		TURBO	1	Non-return valve	Backventil	6
0560	36	91 36 243		I, L=130MM	1	Vaccum hose	Vakuumslang	5
0570	36	91 36 243		TURBO, L=85 MM	1	Vaccum hose	Vakuumslang	5
0580	37	87 86 444		TURBO	1	Hose	Slang	4
0590	38	87 88 499		I	1	Hose	Slang	5
0600	38	75 19 697		TURBO	1	Hose	Slang	4
0610	39	*88 00 914*		70) NLS - USE 9108291	1	Sensor	Givare	2
0620	39	*88 59 233*		71,-1990) NLS - USE 9108291	1	Sensor	Givare	2
0630	39	91 08 291		1991-	1	EC temperature sensor	Temperaturgivare	2
0640	40	91 14 885			16	Sealing washer	Tätningsbricka	5
0650	41	75 63 075		1990	1	Plug	Plugg	2
0660	42	91 31 004		1991-	1	Plug	Plugg	2
0670	43	75 19 143		1991-	1	O-ring	O-ring	6
0680	44	83 62 287		1991-	1	Bracket	Hållare	5
0690	45	*90 82 950*		1991-1992 NLS - USE 9166323	1	Screw	Skruv	5
0700	45	91 66 323		1993	1	Screw	Skruv	5
0710	46	91 36 243		-1992, TURBO, L=360 MM	1	Vaccum hose	Vakuumslang	5
0720	46	91 36 243		1993, TURBO, L=260 MM	1	Vaccum hose	Vakuumslang	5
0730	47	75 00 069	S	40)	3	Plug	Plugg	2
0740	48	*89 81 979*		NLS - USE 4443883	1	Seal	Tätning	5
0750	49	91 17 417		TURBO	1	Tensioning band	Spännband	5
0760								
0770		*88 18 254*		40)	X	Gasket kit	Packningsats	1
0780				See page 2-171, 1-J04				
0780				NLS - USE 8822041				
0790		93 21 464		41)	X	Gasket kit	Packningsats	1
0800				See page 2-171, 1-J04				
0810		93 21 605		See page 2-171, 1-J04	X	Gasket kit	Sotningssats	2
0820								
0830		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

40. Engine B202 --L015906, Engine B234 --L200531.
41. Engine B202 L015907--, Engine B234 L200532--.
70. Engine --L030814.
71. Engine L030815--.
165. Engine --P220197.
166. Engine P220198--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

Engine body

1-C20 Cylinder block B202

Motorkropp

Cylinderblock B202

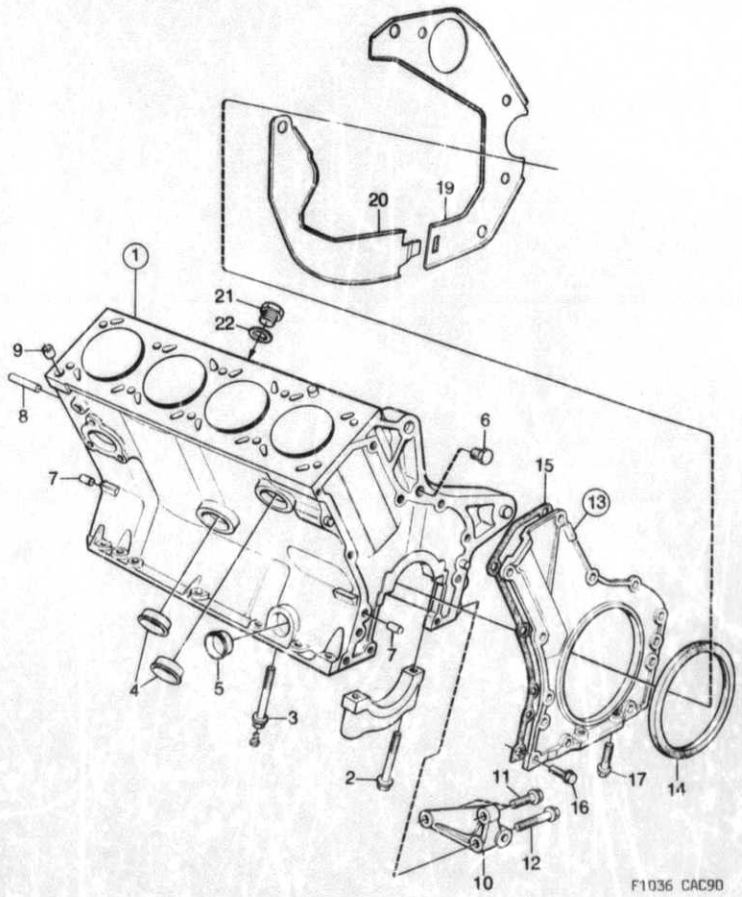

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 859			1	Cylinder block	Cylinderblock	6
0020	2	83 52 502			6	.Screw	.Skruv	5
0030	3	93 08 537			4	.Screw	.Skruv	5
0040	4	91 16 757			2	.Sealing washer	.Tätningsbricka	3
0050	5	75 88 320			1	.Sealing washer	.Tätningsbricka	3
0060	6	83 48 047			1	.Plug	.Propp	5
0070	7	83 66 007			4	.Guide	.Styrning	5
0080	8	80 34 761			1	.Pin	.Pinne	5
0090	9	83 46 470			4	.Guide	.Styrning	
0100	10	93 57 203			1	.Bracket	.Konsol	6
0110	11	81 25 205			2	.Screw	.Skruv	5
0120	12	81 25 262			1	.Screw	.Skruv	5
0130	13	75 16 248			1	Plate	Platta	6
0140	14	*93 50 158*		-1991 NLS - USE 8787764	1	.Seal	.Tätning	2
0150	14	87 87 764		1992-	1	.Seal	.Tätning	2
0160	15	*75 63 679*		113) NLS - USE 9321795	1	Gasket	Packning	4
0170	15	93 21 795		114)	X	Flange sealant	Flänstätning	5
0180				See page 2-175, 1-J08				
0190	16	81 25 163			9	Screw	Skruv	5
0200	17	81 25 189			2	Screw	Skruv	5
0210	19	93 88 653		1990	1	Baffle	Stänkskydd	6
0220	19	93 89 990		1991-	1	Baffle	Stänkskydd	6
0230	19	93 89 990		A	1	Baffle	Stänkskydd	6
0240	20	93 88 661			1	Baffle	Stänkskydd	6
0250	21	*81 23 721*		I NLS - USE 7563042	1	Plug	Propp	5
0260	22	81 24 141		I	1	Seal	Tätning	5


113. Engine --N312959.
114. Engine N312960--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

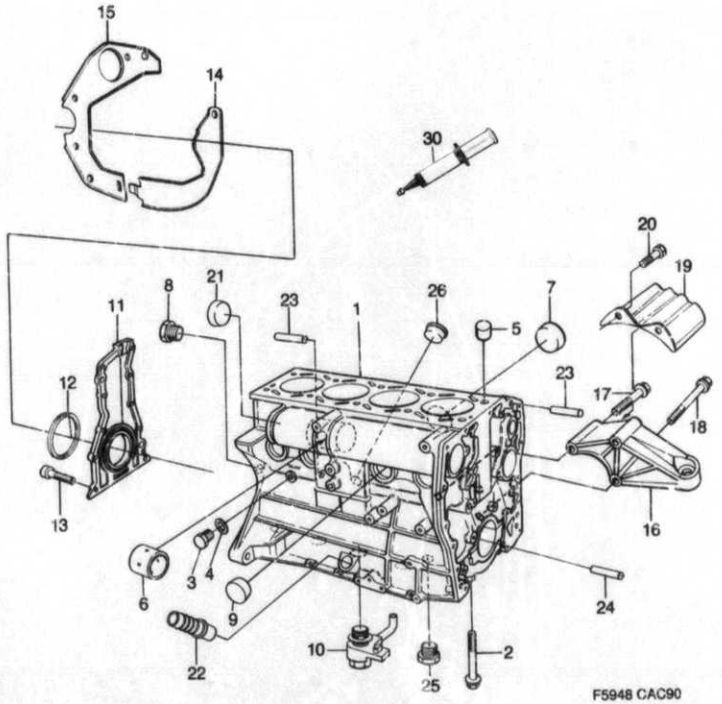

F5948 CAC90

0205	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 17 821		-1991, I	1	Cylinder block	Cylinderblock	6
0020	1	*78 71 965*		-1991, TURBO NLS - USE 9134818	1	Cylinder block	Cylinderblock	6
0030	1	91 34 818		1992-	1	Cylinder block	Cylinderblock	6
0040	2	83 52 502			10	.Screw	.Skruv	5
0050	3	*81 23 721*		NLS - USE 7563042	1	.Plug	.Propp	5
0060	4	81 24 141			1	.Seal	.Tätning	5
0070	5	83 46 470			5	.Guide	.Styrning	
0080	6	75 88 684			2	.Bushing	.Bussning	5
0090	7	79 85 120		(3463171)	6	.Sealing washer	.Tätningsbricka	3
0100	8	83 48 047			1	.Plug	.Propp	5
0110	9	34 83 419			1	.Sealing washer	.Tätningsbricka	3
0120	10	91 09 919		TURBO	4	Piston cooling jet	Kolvkylningsmunstycke	5
0130	11	91 14 372			1	Plate	Platta	6
0140	12	*93 50 159*		-1991 NLS - USE 8787764	1	.Seal	.Tätning	2
0150	12	87 87 764		1992-	1	.Seal	.Tätning	2
0160	13	81 25 031			11	Screw	Skruv	5
0170	14	75 87 470			1	Baffle	Stänkskydd	6
0180	15	74 83 068			1	Baffle	Stänkskydd	6
0190	16	91 17 557			1	Bracket	Konsol	5
0200	17	81 25 452			2	Screw	Skruv	5
0210	18	81 25 494			1	Screw	Skruv	5
0220	19	91 17 284		TURBO	1	Heat shield	Värmesköld	5
0230	20	81 29 876		TURBO	2	Screw	Skruv	5
0240	21	81 23 259			2	.Sealing washer	.Tätningsbricka	3
0250	22	78 55 950			1	.Nipple	.Nippel	5
0260	23	75 85 052			4	.Guide	.Styrning	5
0270	24	80 35 040			1	.Pin	.Pinne	5
0280	25	91 15 049		I	4	.Plug	.Propp	5
0290	26	81 23 218		I	1	.Sealing washer	.Tätningsbricka	3
0300	30	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0250								
0010		87 [illegible] 275		7), TURBO, B202	1	Engine	Motor	5
0020		78 72 690		7), TURBO, B234	1	Engine	Motor	5
0030		87 88 267		7), I, B202	1	Engine	Motor	5
0040		87 86 576		7), I, B234	1	Engine	Motor	5
0050								
0060						. Cylinder block	. Cylinderblock	
0070						. Crankshaft	. Vevaxel	
0080						. Connecting rod	. Vevstake	
0090						. Piston	. Kolv	
0100						. Timing gear casing	. Transmissionshåpe	
0110						. Transmission	. Transmission	
0120						. End plate	. Gavelplatta	
0130						. Pulley	. Remskiva	
0140						. Oil pump	. Oljepump	
0150						. Coolant pump	. Kylvätskepump	


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

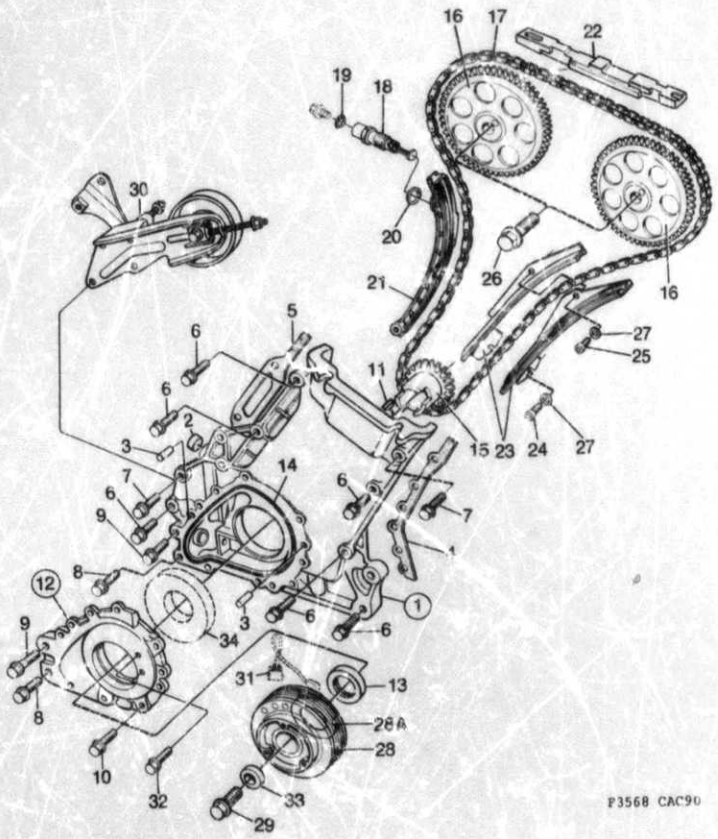

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 17 113			1	Cover	Kåpa	5
0020	2	81 23 176			1	•Plug	•Plugg	6
0030	3	*80 34 456*		-1992 NLS - USE 7949696	2	•Pin	•Pinne	5
0040	3	79 49 696		1993-	2	•Pin	•Pinne	5
0050	4	*91 17 847*		113) NLS - USE 9321795	1	Gasket	Packning	2
0060	4	93 21 795		114)	X	Flange sealant	Flänstätning	5
0070				See page 2-175, 1-J08				
0080	5	*91 17 839*		113) NLS - USE 9321795	1	Gasket	Packning	2
0090	5	93 21 795		114)	X	Flange sealant	Flänstätning	5
0100				See page 2-175, 1-J08				
0110	6	81 25 213			6	Screw	Skruv	5
0120	7	81 25 239			3	Screw	Skruv	5
0130	8	81 25 247			1	Screw	Skruv	5
0140	9	81 25 262			1	Screw	Skruv	5
0150	10	81 25 049			8	Screw	Skruv	5
0160	11	83 47 122		1990-	1	Key	Kil	5
0170	11	91 16 864		1991-	1	Key	Kil	5
0180	12	75 86 993			1	Oil pump housing	Oljepumphus	6
0190	13	*93 09 204*		NLS - USE 9149964	1	•Seal	•Tätning	2
0200	14	*83 69 829*		-1991 NLS - USE 9125824	1	Seal	Tätning	3
0210	14	91 25 824		1992-	1	O-ring	O-ring	2
0220	15	75 18 640			1	Chain gear	Kedjehjul	4
0230	16	75 00 127			2	Chain gear	Kedjehjul	5
0240	17	75 00 697			1	Chain	Kedja	3
0250	17	93 21 837		ALTERNATIVE	1	Chain	Kedja	3
0260						Open, with chain link	Öppen, med kedjelänk	
0270								
0280	18	75 85 086			1	Chain tensioner	Kedjespännare	3
0290	19	80 48 670			1	•O-ring	•O-ring	2
0300	20	75 08 690			1	Seal	Tätning	5
0310	21	*91 17 805*		1990 NLS - USE 8858276	1	Chain control	Kedjestyrning	3
0320	21	*91 33 513*		1991 NLS - USE 8858276	1	Chain control	Kedjestyrning	3
0330	21	88 58 276		1992-	1	Chain control	Kedjestyrning	3
0340	22	88 59 324			1	Chain control	Kedjestyrning	3
0350	23	*88 59 092*		1990 NLS - USE 9133505	1	Chain control	Kedjestyrning	3
0360	23	91 33 505		1991-	1	Chain control	Kedjestyrning	3
0370	24	91 66 299		(8019929)	1	Screw	Skruv	5
0380	25	91 66 307		(8019960)	1	Screw	Skruv	5
0390	26	91 07 541			2	Screw	Skruv	5
0400	27	91 66 364		(8029951)	2	Washer	Bricka	5
0410	28	93 21 530		79), TURBO	1	Pulley	Remskiva	4
0420	28	93 21 548		79), I	1	Pulley	Remskiva	4
0430	28	*87 89 307*		80)-1991 NLS - USE 9143686	1	Pulley	Remskiva	4
0440	28	91 43 686		1992-	1	Pulley	Remskiva	4
0450	28A			See page 3A-027, 2-B04		Aperture disc	Bländarskiva	
0460				See page 3A-021, 2-A22		Aperture disc	Bländarskiva	
0470	29	83 48 534		1990-	1	Screw	Skruv	5
0480	29	91 16 443		1991-	1	Screw	Skruv	5
0490	30			See page 6-025, 4-D02		Tension pulley	Spännrulle	
0500	31			See page 3A-027, 2-B04		Sensor	Givare	
0510	32	87 88 150			2	Screw	Skruv	5
0520	33	78 56 172		1991-	1	Spacer	Distans	5
0530	34			See page 2-039, 1-D16		Pump kit	Pumpsats	


79. Engine --L074038.
80. Engine L074039--.
113. Engine --N312959.
114. Engine N312960--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-M02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

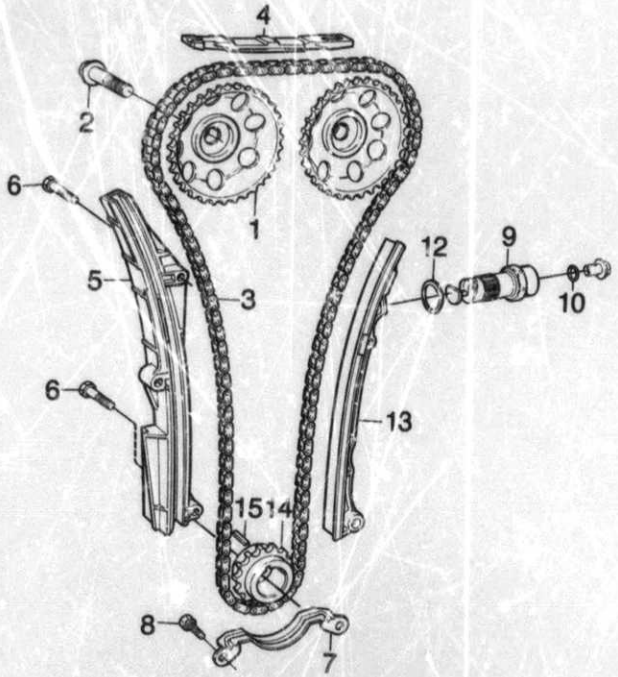

F4776 CAC90

0305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 15 205			2	Chain gear	Kedjehjul	5
0020	2	91 07 541			2	Screw	Skruv	5
0030	3	*74 83 761*		140) NLS - USE 9131145	1	Chain	Kedja	3
0040	3	91 31 145		141)	1	Chain	Kedja	3
0050	3	93 21 845		ALTERNATIVE	1	Chain	Kedja	3
0060						Open, with chain link	Öppen, med kedjelänk	
0070								
0080	4	88 59 324			1	Chain control	Kedjestyrning	3
0090	5	*91 14 299*		1990 NLS - USE 9134230	1	Chain control	Kedjestyrning	3
0100	5	*88 59 118*		1991-,119) NLS - USE 9134230	1	Chain control	Kedjestyrning	3
0110	5	91 34 230		120)	1	Chain control	Kedjestyrning	3
0120	6	81 25 072			3	Screw	Skruv	5
0130	7	91 12 293			1	Chain protection	Kedjeskydd	5
0140	8	81 25 015			2	Screw	Skruv	5
0150	9	75 85 086			1	Chain tensioner	Kedjesträckare	3
0160	10	80 43 670			1	▪ O-ring	▪ O-ring	2
0170	12	75 08 690			1	Seal	Tätning	5
0180	13	*91 14 273*		119) NLS - USE 9134248	1	Chain control	Kedjestyrning	3
0190	13	91 34 248		120)	1	Chain control	Kedjestyrning	3
0200	14	91 15 197			1	Chain gear	Kedjehjul	4
0210	15	91 16 864			1	Key	Kil	5


119. Engine --N418766.
120. Engine N418767--.
140. Engine --N418766.
141. Engine N418767--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

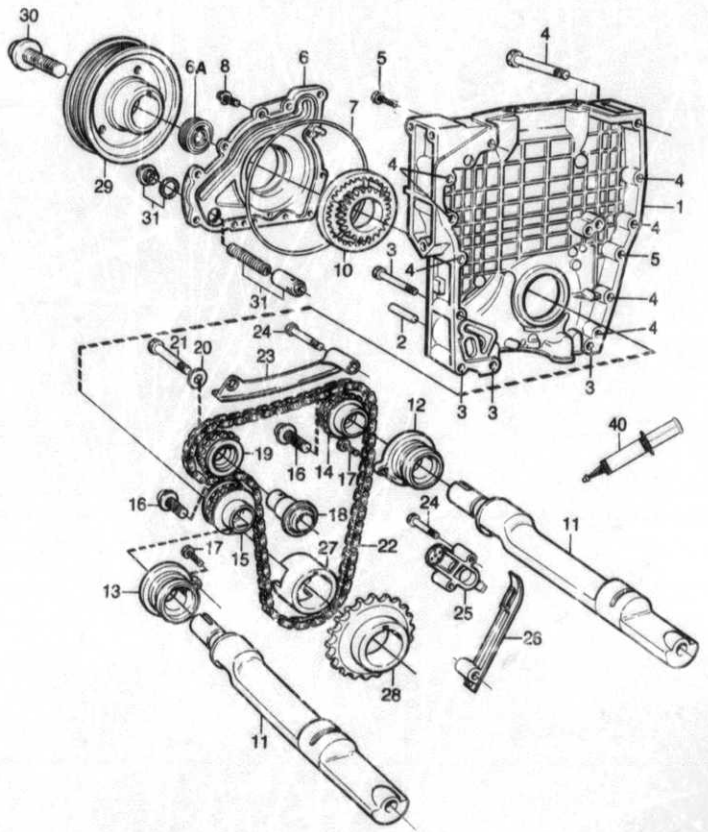

F5946 CAC90

0310	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0310	1	87 89 786			1	Cover	Kåpa	5
0020	2	*80 34 456*		-1992 NLS - USE 7949696	2	Pin	Pinne	5
0030	2	79 49 696		1993	2	Pin	Pinne	5
0040	3	81 25 296			4	Screw	Skruv	5
0050	4	81 25 247			8	Screw	Skruv	5
0060	5	81 25 254			2	Screw	Skruv	5
0070	6	91 15 122			1	Oil pump housing	Oljepumphus	6
0080	6A	*93 09 204*		NLS - USE 9149964	1	▪Seal	▪Tätning	2
0090	7	88 59 605		-1991	2	O-ring	O-ring	2
0100	7	91 25 816		1992-	2	O-ring	O-ring	2
0110	8	81 25 049			8	Screw	Skruv	5
0120	10			See page 2-043, 1-D20	1	Pump kit	Pumpsats	
0130	10			See page 2-171, 1-J04	1	Pump kit	Pumpsats	
0140	11	*91 16 047*		48) NLS - USE 9128802	2	Balance shaft	Balansaxel	5
0150	11	*91 06 949*		49),-1991 NLS - USE 9128802	2	Balance shaft	Balansaxel	5
0160	11	91 28 802		1992-	2	Balance shaft	Balansaxel	5
0170	12	91 15 288		38)	1	Bearing housing	Lagerhus	5
0180	13	91 15 288		39)	1	Bearing housing	Lagerhus	5
0190	14	*91 16 393*		-1992 NLS - USE 9140690	1	Chain gear	Kedjehjul	4
0200	14	91 40 690		1993	1	Chain gear	Kedjehjul	4
0210	15	*91 16 419*		-1992 NLS - USE 9140674	1	Chain gear	Kedjehjul	4
0220	15	91 40 674		1993	1	Chain gear	Kedjehjul	4
0230	16	*75 84 394*		54) NLS - USE 9107541	2	Screw	Skruv	5
0240	16	91 07 541		55)	2	Screw	Skruv	5
0250	17	81 25 031			2	Screw	Skruv	5
0260	18	91 13 119			1	Shaft	Axel	5
0270	19	*91 16 898*		-1992 NLS - USE 9140658	1	Chain gear	Kedjehjul	4
0280	19	91 40 658		1993	1	Chain gear	Kedjehjul	4
0290	20	91 13 424			1	Thrust washer	Axialbricka	5
0300	21	*80 83 024*		-1992 NLS - USE 9166349	1	Screw	Skruv	5
0310	21	91 66 349		1993	1	Screw	Skruv	5
0320	22	74 85 105			1	Chain	Kedja	4
0330	23	*91 14 331*		-1991 NLS - USE 9132812	1	Chain control	Kedjestyrning	3
0340	23	91 32 812		1992-	1	Chain control	Kedjestyrning	3
0350	24	81 25 072			4	Screw	Skruv	5
0360	25	91 14 356			1	Chain tensioner	Kedjesträckare	3
0370	26	91 14 315			1	Chain control	Kedjestyrning	3
0380	27	91 15 247			1	Companion flange	Medbringare	5
0390	28	*88 57 575*		-1991 NLS - USE 9140716	1	Chain gear	Kedjehjul	4
0400	28	91 40 716		1992-	1	Chain gear	Kedjehjul	4
0410	29	*91 12 855*		-1991 NLS - USE 9143199	1	Pulley	Remskiva	4
0420	29	*91 43 181*		1992 NLS - USE 9143199	1	Pulley	Remskiva	4
0430	29	91 43 199		1993	1	Pulley	Remskiva	4
0440	30	91 16 443			1	Screw	Skruv	5
0450	31			See page 2-043, 1-D20	1	Reduction valve	Reducerventil	
0460	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5


38. Intake. Inlopp.
39. Exhaust. Avgas.
48. Engine -L204468.
49. Engine L204469-.
54. Engine -L206400.
55. Engine L206401-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

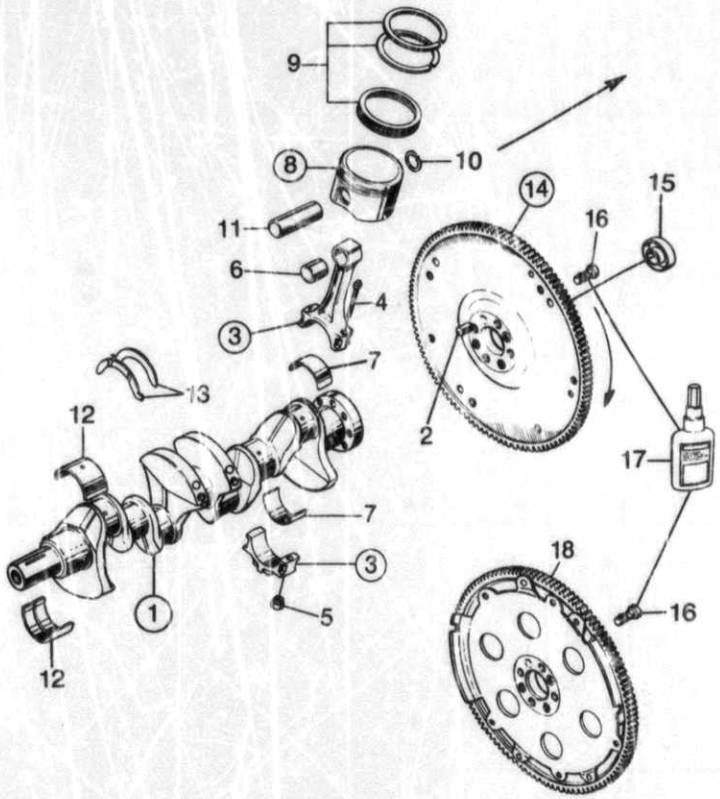

F4778 CAC90

Engine body

1-D08 Crankshaft, connecting rod, piston, B202

Motorkropp

Vevaxel, vevstake, kolv, B202

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	93 21 589		1990	1	Crankshaft	Vevaxel	6
	87 87 228		PART OF 9321589	1	.Crankshaft	.Vevaxel	6
	78 56 172		PART OF 9321589	1	.Spacer	.Distans	5
	91 16 443		PART OF 9321589	1	.Screw	.Skruv	5
	91 16 864		PART OF 9321589	1	.Key	.Kil	5
1	87 87 228		1991-	1	Crankshaft	Vevaxel	6
2	80 34 928			1	Pin	Pinne	5
3	75 62 259			4	Connecting rod	Vevstake	5
4	75 21 255			8	.Screw	.Skruv	5
5	75 62 275			8	.Nut	.Mutter	5
6	83 47 676			4	.Bushing	.Bussning	5
7	83 47 650			8	Con.bearing Red	Vevstakslager Röd	
7	83 55 349			8	Con.bearing Blue	Vevstakslager Blå	
7	83 49 938		37), 0,25 MM,	8	Con.bearing Yellow	Vevstakslager Gul	4
7	83 55 356		37), 0,25 MM,	8	Con.bearing Green	Vevstakslager Grön	
7	83 49 946		37), 0,50 MM,	8	Con.bearing White	Vevstakslager Vit	4
7	83 55 364		37), 0,50 MM,	8	Con.bearing Brown	Vevstakslager Brun	4
8	75 20 927		I, CLASS AB	4	Piston	Kolv	5
8	75 24 895		94), TURBO, CLASS AB	4	Piston	Kolv	5
8	91 15 841		95), TURBO, CLASS AB	4	Piston	Kolv	5
8	91 15 841		US, TURBO, CLASS AB	4	Piston	Kolv	5
8	75 20 935		I, CLASS B	4	Piston	Kolv	5
8	75 24 903		94), TURBO, CLASS B	4	Piston	Kolv	5
8	91 15 858		95), TURBO, CLASS B	4	Piston	Kolv	5
8	91 15 858		US, TURBO CLASS B	4	Piston	Kolv	5
8	75 20 943		I, CLASS C	4	Piston	Kolv	5
8	75 24 911		94), TURBO CLASS C	4	Piston	Kolv	5
8	91 15 866		95), CLASS C	4	Piston	Kolv	5
8	91 15 866		US, TURBO CLASS C	4	Piston	Kolv	5
8	75 20 950		36), I, 0,50 MM	4	Piston	Kolv	5
8	75 24 929		36,94), TURBO, 0,50 MM	4	Piston	Kolv	5
8	*91 15 874*		36,95), TURBO, 0,50 MM NLS - USE 7524929	4	Piston	Kolv	5
8	75 20 968		36), I, 1,0 MM	4	Piston	Kolv	5
8	75 24 937		36,94), TURBO, 1,0 MM	4	Piston	Kolv	5
8	91 15 882		36,95), TURBO, 1,0 MM	4	Piston	Kolv	5
9	75 20 513		STD	4	.Piston ring kit	.Kolvringsats	3
9	75 20 521		36), 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
9	75 20 539		36), 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
10	83 47 577			8	Lock ring	Låsring	5
11	83 46 983		L=73MM	4	Gudgeon pin	Kolvtapp	5
11	75 68 942		81), L=68MM	4	Gudgeon pin	Kolvtapp	5
12	83 50 936			10	Main bearing Red	Ramlager Röd	5


36. Oversize. Överdimension.
37. Undersize. Underdimension.
81. For pistons 9115841, 9115858, 9115866, 9115874, 9115882. För kolvar 9115841, 9115858, 9115866, 9115874, 9115882.
94. Engine --M028368.
95. Engine M028369--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

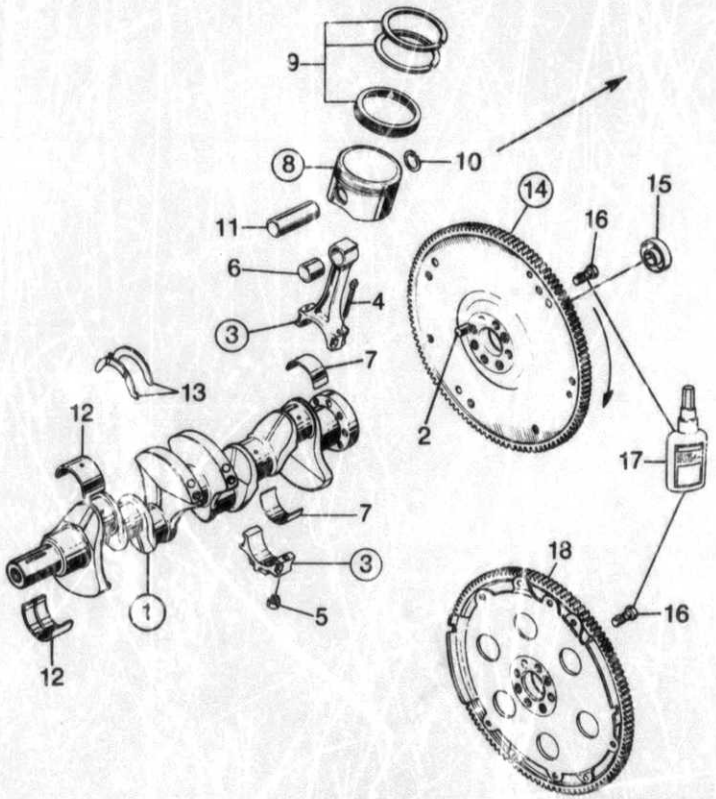

F4778 CAC90

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description / Benämning	S L
0560	12	83 55 315			10	Main bearing / Ramlager Blue / Blå	5
0570							
0580	12	83 50 977		37), 0,25 MM	10	Main bearing / Ramlager Yellow / Gul	5
0590							
0600	12	83 55 323		37), 0,25 MM	10	Main bearing / Ramlager Green / Grön	5
0610							
0620	12	83 50 985		37), 0,50 MM	10	Main bearing / Ramlager White / Vit	5
0630							
0640	12	83 55 331		37), 0,50 MM	10	Main bearing / Ramlager Brown / Brun	5
0650							
0660	13	83 47 270			2	Thrust washer / Tryckbricka	4
0670	14	75 21 610		TURBO	1	Flywheel / Svänghjul	5
0680	14	75 09 102		I	1	Flywheel / Svänghjul	5
0690	15	75 69 809			1	Guide ring / Styrring	3
0700	16	88 59 191			7	Screw / Skruv	5
0710	17	74 96 292		50ML	X	Nut lock / Gängsäkring strong / stark red / röd	5
0720							
0730							
0740	18	88 56 965		A	1	Companion flange / Medbringare	4


37. Undersize. Undermimension.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

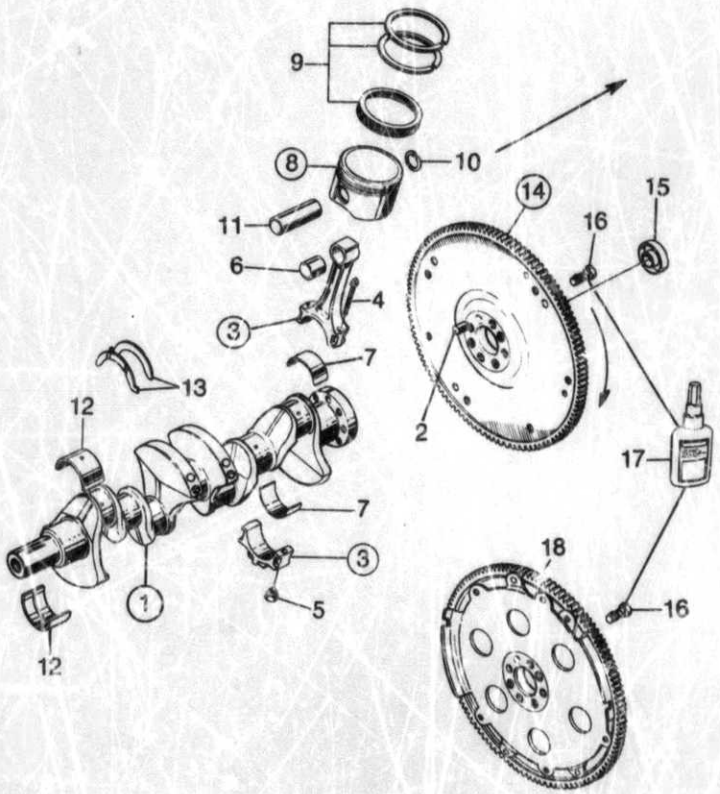

F4780 CAC90

Engine body

1-D12 Crankshaft, connecting rod, piston, B234

Motorkropp

Vevaxel, vevstake, kolv, B234

0355	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	11 16 310			1	Crankshaft	Vevaxel	6
0020	2	83 34 928			1	Pin	Pinne	5
0030	3	74 80 841			4	Connecting rod	Vevstake	5
0040	4	74 90 643			8	.Screw	.Skruv	5
0050	5	74 90 684			8	.Nut	.Mutter	5
0060	6	83 47 676		117)	4	.Bushing	.Bussning	5
0070	6	91 39 946		118)	4	.Bushing	.Bussning	5
0080								
0090	7	83 47 650			8	Con.bearing	Vevstakslager	
0100						Red	Röd	
0110	7	83 55 349			8	Con.bearing	Vevstakslager	
0120						Blue	Blå	
0130	7	83 49 918		37), 0,25 MM,	8	Con.bearing	Vevstakslager	4
0140						Yellow	Gul	
0150	7	83 55 357		37), 0,25 MM,	8	Con.bearing	Vevstakslager	
0160						Green	Grön	
0170	7	83 49 946		37), 0,50 MM,	8	Con.bearing	Vevstakslager	4
0180						White	Vit	
0190	7	83 55 364		37), 0,50 MM,	8	Con.bearing	Vevstakslager	4
0200						Brown	Brun	
0210	7	83 49 953		37), 0,75 MM, TURBO	8	Con.bearing	Vevstakslager	4
0220	7	83 49 961		37), 1,00 MM, TURBO	8	Con.bearing	Vevstakslager	4
0230								
0240	8	88 59 357		I, CLASS AB	4	Piston	Kolv	5
0250	8	88 59 365		I, CLASS B	4	Piston	Kolv	5
0260	8	88 59 373		I, CLASS C	4	Piston	Kolv	5
0270	8	88 59 381		36), I, 0,50 MM	4	Piston	Kolv	5
0280	8	88 59 399		36), I, 1,0 MM	4	Piston	Kolv	5
0290								
0300	8	78 55 828		-1992,TURBO, CLASS AB	4	Piston	Kolv	5
0310	8	78 55 836		-1992,TURBO, CLASS B	4	Piston	Kolv	5
0320	8	78 55 844		-1992,TURBO, CLASS C	4	Piston	Kolv	5
0330	8	78 55 851		36), -1992,TURBO, 0,50 MM	4	Piston	Kolv	5
0340	8	78 55 869		36), -1992,TURBO, 1,0 MM	4	Piston	Kolv	5
0350								
0360	8	91 42 506		1993,TURBO, CLASS AB	4	Piston	Kolv	5
0370	8	91 42 514		1993,TURBO, CLASS B	4	Piston	Kolv	5
0380	8	91 42 530		1993,TURBO, CLASS C	4	Piston	Kolv	5
0390	8	91 42 555		36),1993,TURBO, 0,50 MM	4	Piston	Kolv	5
0400	8	91 42 571		36),1993,TURBO, 1,0 MM	4	Piston	Kolv	5
0410								
0420	9	88 59 134		-1991, I, STD	4	.Piston ring kit	.Kolvringsats	3
0430	9	88 59 142		-1991,36), I, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0440	9	88 59 159		-1991,36), I, 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0450								
0460	9	93 21 506		-1991, TURBO, STD	4	.Piston ring kit	.Kolvringsats	3
0470	9	93 21 514		-1991,36),TURBO, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0480	9	93 21 522		-1991,36),TURBO, 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0490								
0500	9	93 21 506		1992, STD	4	.Piston ring kit	.Kolvringsats	3
0510	9	93 21 514		1992,36), 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0520	9	93 21 522		1992,36), 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0530								
0540	9	93 21 506		1993, I, STD	4	.Piston ring kit	.Kolvringsats	3
0550	9	93 21 514		1993,36), I, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0560	9	93 21 522		1993,36), I, 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0570								
0580	9	91 48 105		1993, TURBO, STD	4	.Piston ring kit	.Kolvringsats	3
0590	9	91 48 113		1993,36),TURBO, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3

36. Oversize. Overdimension.
37. Undersize. Underdimension.
117. Engine -N413019.
118. Engine N413020-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

Engine body

1-D14 Crankshaft, connecting rod, piston, B234

Motorkropp

Vevaxel, vevstake, kolv, B234

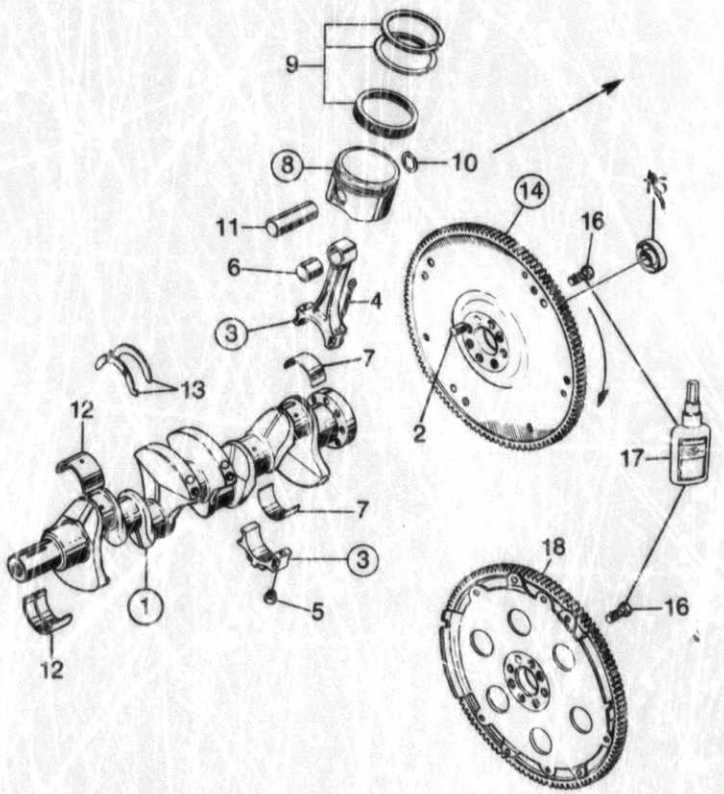

F4780 CAC90

0355	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	9	91 49 121		1993,36),TURBO, 1,0 MM	4	. Piston ring kit	. Kolvringsats	3
0610								
0620								
0630	10	88 59 514			8	Lock ring	Låsring	5
0640	11	75 68 934		I, L=60MM	4	Gudgeon pin	Kolvtapp	5
0650	11	75 68 942		TURBO, L=68MM	4	Gudgeon pin	Kolvtapp	5
0660								
0670	12	91 12 657			10	Main bearing Red	Ramlager Röd	5
0680								
0690	12	91 12 665			10	Main bearing Blue	Ramlager Blå	5
0700								
0710	12	91 12 673		37), 0,25 MM	10	Main bearing Yellow	Ramlager Gul	5
0720								
0730	12	91 12 681		37), 0,25 MM	10	Main bearing Green	Ramlager Grön	5
0740								
0750	12	91 14 893		37), 0,50 MM	10	Main bearing White	Ramlager Vit	5
0760								
0770	12	91 14 901		37), 0,50 MM	10	Main bearing Brown	Ramlager Brun	5
0780								
0790								
0800								
0810	13	75 88 783			2	Thrust washer	Tryckbricka	4
0820	14	75 09 102		I	1	Flywheel	Svänghjul	5
0830	14	91 17 615		TURBO	1	Flywheel	Svänghjul	5
0840	15	75 69 809			1	Guide ring	Styrring	3
0850	16	88 59 191			7	Screw	Skruv	5
0860	17	74 96 292		50ML	X	Nut lock strong red	Gängsäkring stark röd	5
0870								
0880								
0890	18	98 56 965		A	1	Companion flange	Medbringare	4

36. Oversize. Överdimension.
37. Undersize. Underdimension.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

Lubrication system

1-D16 Oil pump, oil filter, B202 Turbo

Smörjsystem

Oljepump, oljefilter, B202 Turbo

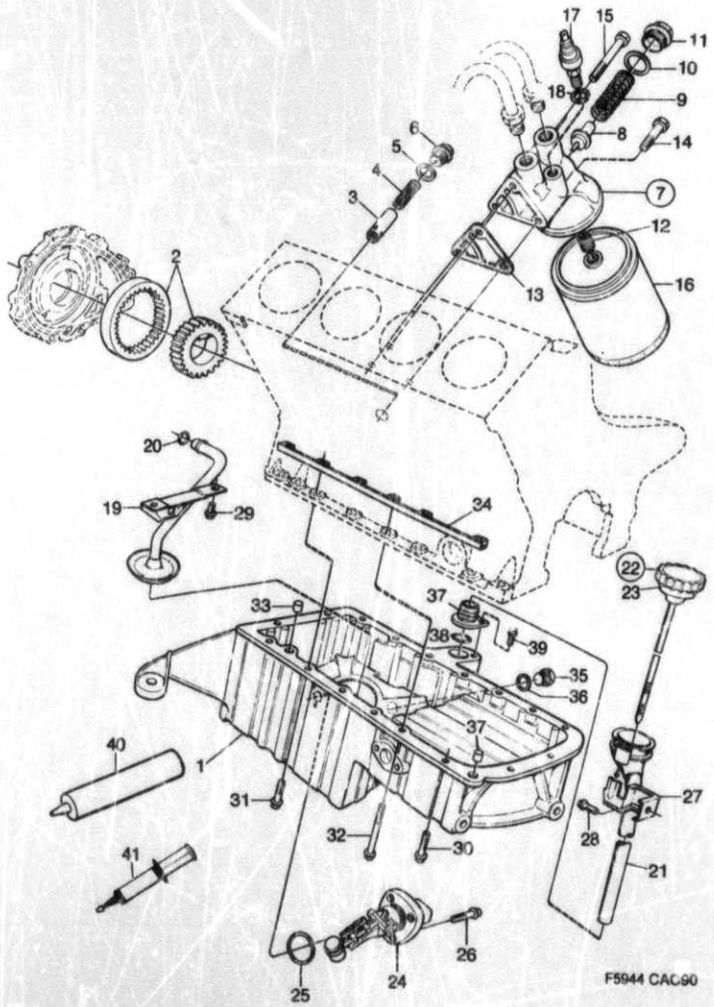

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 17 029*		1990 NLS - USE 9133158	1	Sump	Oljesump	6
0020	1	91 33 158		1991-	1	Sump	Oljesump	6
0030	2	*88 17 561*		-1991	1	Pump kit	Pumpsats	5
0040				See page 2-171, 1-J04				
0040				NLS - USE 9321779				
0050	2	93 21 779		1992-	1	Pump kit	Pumpsats	5
0060				See page 2-171, 1-J04				
0070	3	75 08 708			1	Piston	Kolv	6
0080	4	93 09 998			1	Spring	Fjäder	6
0090	5	93 55 389			1	Gasket	Packning	4
0100	6	75 08 955			1	Plug	Propp	5
0110	7	75 60 139			1	Intermediate section	Mellanstycke	6
0120	8	93 01 540			1	▪ Thermostat	▪ Termostat	2
0130	9	93 00 591			1	▪ Spring	▪ Fjäder	5
0140	10	91 09 162			1	▪ Gasket	▪ Packning	4
0150	11	75 20 372			1	▪ Plug	▪ Propp	5
0160	12	83 48 609			1	▪ Junction pipe	▪ Skarvrör	6
0170	13	75 66 433			1	Gasket	Packning	4
0180	14	81 25 254			1	Screw	Skruv	5
0190	15	81 25 304			2	Screw	Skruv	5
0200	16	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
0210	17	91 12 459			1	Oil pressure sensor	Oljetrycksgivare	3
0220	18	*81 24 216*		NLS - USE 9109182	1	Gasket	Packning	4
0230	19	91 27 069			1	Oil pipe	Oljesugrör	6
0240	20	79 72 698			1	O-ring	O-ring	2
0250	21	93 88 794			1	Tube	Rör	6
0260	22	93 91 467			1	Dipstick	Oljestick a	3
0270	23	93 61 544			1	▪ Ring-gland	▪ Packningsring	4
0280	24	93 90 154			1	Sensor	Givare	3
0290	25	79 70 361		(3046625)	1	O-ring	O-ring	2
0300	26	81 25 023			3	Screw	Skruv	5
0310	27	*93 88 232*		NLS - USE 8976516	1	Bracket	Fäste	6
0320	28	79 67 938			1	Screw	Skruv	5
0330	29	*29 61 357*		-1992 NLS - USE 9166414	2	Screw	Skruv	5
0340	29	91 66 414		1993	2	Screw	Skruv	5
0350	30	81 25 189			11	Screw	Skruv	5
0360	31	81 25 205			4	Screw	Skruv	5
0370	32	81 25 262			2	Screw	Skruv	5
0380	33	74 84 934			2	Sleeve	Hylsa	5
0390	34	75 01 398			1	Bracket	Hållare	6
0400	35	75 63 042		-1990	1	Plug	Propp	1
0410	35	91 32 929		1991-1993	1	Plug	Propp	1
0420	36	75 22 709		-1990	1	Gasket	Packning	1
0430	36	91 32 937		1991-	1	Gasket	Packning	1
0440	37	88 56 833		-1991	1	Nipple	Nippel	5
0450	37	43 91 959		1992-	1	Nipple	Nippel	5
0460	38	*80 46 625*		NLS - USE 7970361	1	O-ring	O-ring	2
0470	39	81 25 031			1	Screw	Skruv	5
0480	40	81 52 381		-1990, 300 ML	X	Flange sealant	Flänstätning	3
0490	41	93 21 795		1991-, 25 ML	X	Flange sealant	Flänstätning	5
0500								
0510		88 17 686		TURBO	X	Service kit	Servicesats	1
0520				See page 2-171, 1-J04				
0530		88 19 135		TURBO WITH DI	X	Service kit	Servicesats	1
0540				See page 2-171, 1-J04				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-D18 Oil pump, oil filter, B202I

Oljepump, oljefilter, B202I

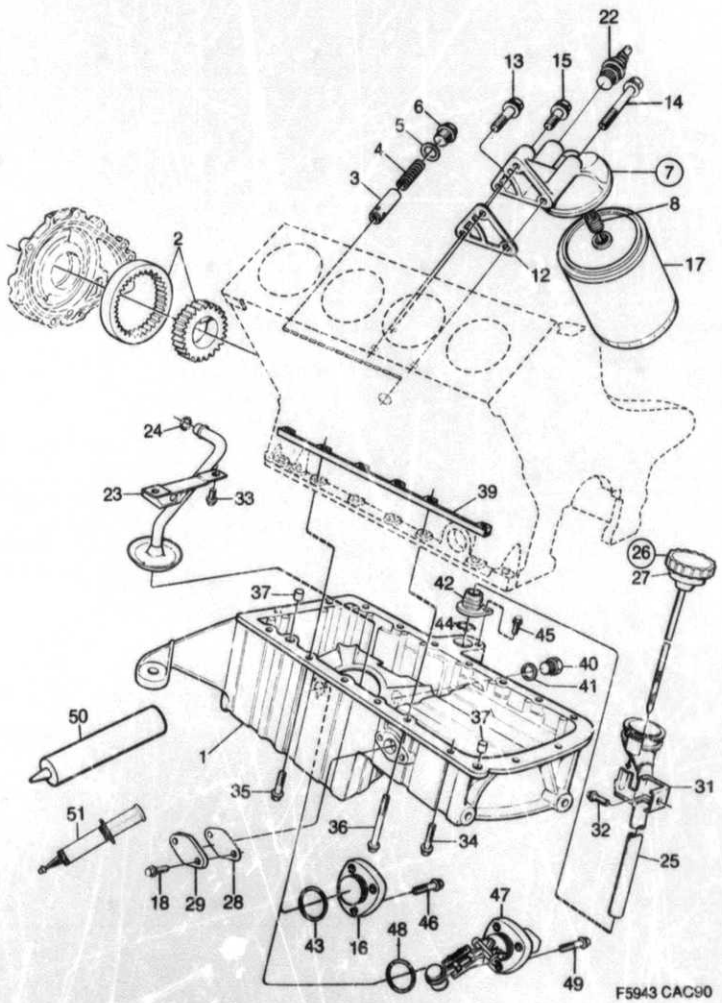

0425	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*91 17 029*		1990 NLS - USE 9133158	1	Sump	Oljesump	6
0020	1	91 33 158		1991-	1	Sump	Oljesump	6
0030	2	*88 17 561*		-1991	1	Pump kit	Pumpsats	5
0040				See page 2-171, 1-J04				
0040				NLS - USE 9321779				
0050	2	93 21 779		1992-	1	Pump kit	Pumpsats	5
0060				See page 2-171, 1-J04				
0070	3	75 08 708			1	Piston	Kolv	6
0080	4	93 09 998			1	Spring	Fjäder	6
0090	5	93 55 389			1	Gasket	Packning	4
0100	6	75 08 955			1	Plug	Propp	5
0110	7	75 60 105			1	Intermediate section	Mellanstycke	6
0120	8	83 48 609			1	▲Junction pipe	▲Skarvrör	6
0130	12	75 66 433			1	Gasket	Packning	4
0140	13	81 25 254			1	Screw	Skruv	5
0150	14	81 25 304			1	Screw	Skruv	5
0160	15	81 25 221			1	Screw	Skruv	5
0170	16	75 23 822			1	Cover	Lock	5
0180	17	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
0190	18	81 25 163			2	Screw	Skruv	5
0200	22	91 12 459			1	Oil pressure sensor	Oljetrycksgivare	3
0210	23	91 27 069			1	Oil pipe	Oljesugrör	6
0220	24	79 72 698			1	O-ring	O-ring	2
0230	25	93 88 794			1	Tube	Rör	6
0240	26	93 91 467			1	Dipstick	Oljesticka	3
0250	27	93 61 544			1	▲Ring-gland	▲Packningsring	4
0260	28	75 66 474			1	Gasket	Packning	3
0270	29	75 01 430			1	Flange	Fläns	5
0280	31	89 76 516			1	Bracket	Fäste	6
0290	32	79 67 938			1	Screw	Skruv	5
0300	33	*29 61 357*		-1992 NLS - USE 9166414	2	Screw	Skruv	5
0310	33	91 66 414		1993	2	Screw	Skruv	5
0320	34	81 25 189			11	Screw	Skruv	5
0330	35	81 25 205			4	Screw	Skruv	5
0340	36	81 25 262			2	Screw	Skruv	5
0350	37	74 84 934			2	Sleeve	Hylsa	5
0360	39	75 01 398			1	Bracket	Hållare	6
0370	40	75 63 042		-1990	1	Plug	Propp	1
0380	40	91 32 929		1991-	1	Plug	Propp	1
0390	41	75 22 709		-1990	1	Gasket	Packning	1
0400	41	91 32 937		1991-1993	1	Gasket	Packning	1
0410	42	88 56 833		-1991	1	Nipple	Nippel	5
0420	42	43 91 959		1992-	1	Nipple	Nippel	5
0430	43	79 70 361		(8046625)	1	O-ring	O-ring	2
0440	44	79 70 361		(8046625)	1	O-ring	O-ring	2
0450	45	81 25 031			1	Screw	Skruv	5
0460	46	81 25 023			3	Screw	Skruv	5
0470	47	93 90 154		US, CA	1	Sensor	Givare	3
0480	48	*79 71 997*		US, CA NLS - USE 7970361	1	O-ring	O-ring	2
0490	49	79 74 694		US, CA	3	Screw	Skruv	5
0500	50	81 52 381		-1990, 300 ML	X	Flange sealant	Flänstätning	3
0510	51	93 21 795		1991-, 25 ML	X	Flange sealant	Flänstätning	5
0520								
0530		88 19 864		-1991, I		Service kit	Servicesats	1
0540				See page 2-171, 1-J04				
0550		93 21 746		1992-, I		Service kit	Servicesats	1
0560				See page 2-171, 1-J04				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

Lubrication system

1-D20 Oil pump, oil filter, B234

Smörjsystem

Oljepump, oljefilter, B234

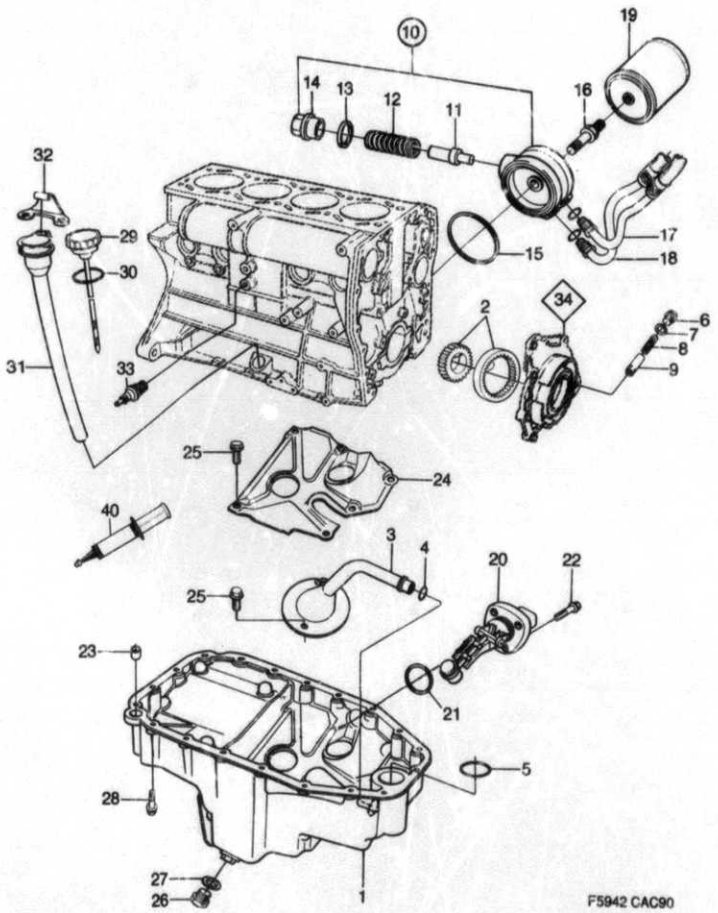

F5942 CAC90

0435	Pos	Part No/Art nr	K o	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 15 015			1	Sump	Oljesump	6
0020	2	*88 17 561*		-1991	1	Pump kit	Pumpsats	5
0030				See page 2-171, 1-J04				
0030				NLS - USE 9321779				
0040	2	93 21 779		1992-	1	Pump kit	Pumpsats	5
0050				See page 2-171, 1-J04				
0060	3	*91 09 901*		1990 NLS - USE 9126731	1	Tube	Rör	6
0070	3	91 26 731		1991-	1	Tube	Rör	6
0080	4	21 96 772		-1991	1	O-ring	O-ring	2
0090	4	91 38 009		1992-	1	O-ring	O-ring	2
0100	5	*81 09 688*		-1991 NLS - USE 9138017	1	O-ring	O-ring	2
0110	5	91 38 017		1992-	1	O-ring	O-ring	2
0120	6	75 08 955			1	Plug	Propp	5
0130	7	93 55 389			1	Gasket	Packning	4
0140	8	93 09 998			1	Spring	Fjäder	6
0150	9	91 09 067			1	Piston	Kolv	6
0160	10	91 15 296			1	Intermediate section	Mellanstycke	6
0170	11	93 01 540			1	▪ Thermostat	▪ Termostat	2
0180	12	93 00 591			1	▪ Spring	▪ Fjäder	5
0190	13	91 09 182			1	▪ Gasket	▪ Packning	4
0200	14	75 20 372			1	▪ Plug	▪ Propp	5
0210	15	80 47 128			1	O-ring	O-ring	2
0220	16	83 48 609		20)	1	Junction pipe	Skarvrör	6
0230	16	91 13 267		-1991	1	Junction pipe	Skarvrör	6
0240	16	91 39 866		1992-	1	Junction pipe	Skarvrör	6
0250	17			See page 2-147, 1-I04	1	Hose	Slang	
0260	18			See page 2-147, 1-I04	1	Hose	Slang	
0270	19	*93 09 576*		NLS - USE 9144445	1	Filter	Filter	1
0280	20	93 90 154			1	Sensor	Givare	3
0290	21	79 70 361		(8046625)	1	O-ring	O-ring	2
0300	22	81 25 031			3	Screw	Skruv	5
0310	23	83 46 470			1	Guide	Styrning	
0320	24	91 18 480			1	Protection	Skydd	6
0330	25	81 25 015			8	Screw	Skruv	5
0340	26	75 63 042		-1990	1	Plug	Propp	1
0350	26	91 32 929		1991-	1	Plug	Propp	1
0360	27	75 22 709		-1990	1	Gasket	Packning	1
0370	27	91 32 937		1991-	1	Gasket	Packning	1
0380	28	81 25 189			19	Screw	Skruv	5
0390	29	91 17 466		I	1	Dipstick	Oljesticka	3
0400	29	87 87 731		TURBO	1	Dipstick	Oljesticka	3
0410	30	93 61 544			1	▪ Ring-gland	▪ Packningsring	4
0420	31	74 81 617		I	1	Tube	Rör	6
0430	31	87 87 707		TURBO	1	Tube	Rör	6
0440	32	91 13 275		1990, I	1	Bracket	Fäste	6
0450	32	87 89 638		1990, I, US	1	Bracket	Fäste	6
0460	32	87 89 638		1991-, I	1	Bracket	Fäste	6
0470	32	*87 87 723*		TURBO NLS - USE 9125899	1	Bracket	Fäste	6
0480	33	91 12 459			1	Oil pressure sensor	Oljetrycksgivare	3
0490	34			See page 2-029, 1-D03	1	Oil pump housing	Oljepumphus	
0500	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0510								
0520		88 19 138		TURBO	X	Service kit	Servicesats	1
0530				See page 2-171, 1-J04				
0540		74 96 011		I	X	Service kit	Servicesats	1
0550				See page 2-171, 1-J04				

20. For cars without air oil cooler. För bilar utan luftoljekylare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

Lubrication system

1-D22 Oil pipe B202 Turbo

Smörjsystem

Oljerör B202 Turbo

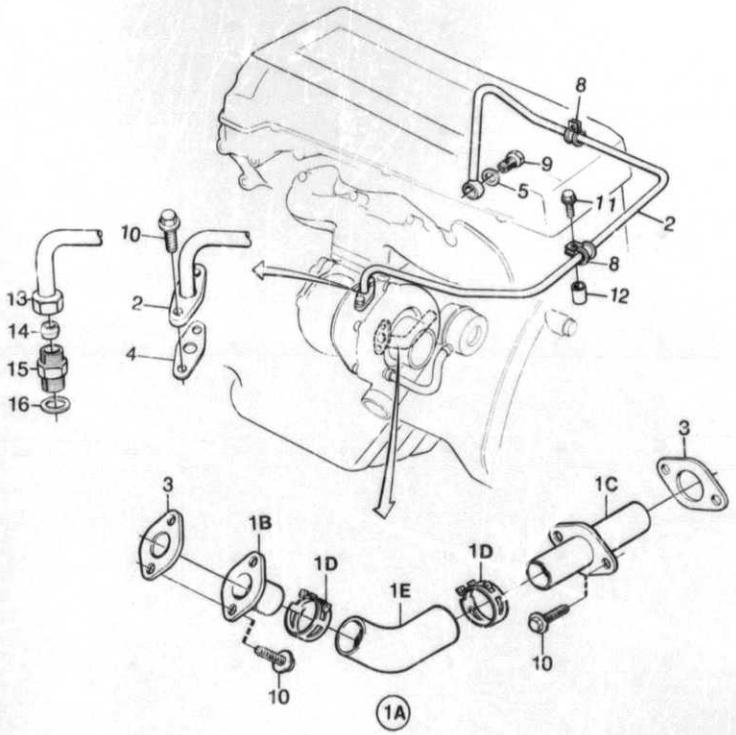

F1046 CAC90

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1A	74 80 932		TE05	1	Oil pipe	Oljerör	4
0020	1B	74 81 062		TE05	1	.Tube	.Rör	4
0030	1C	74 81 088		TE05	1	.Tube	.Rör	4
0040	1D	75 86 050		TE05	1	.Clamp	.Klamma	5
0050	1E	91 18 506		TE05	1	.Hose	.Slang	5
0060	1B	91 14 406		T25	1	Tube	Rör	5
0070	1C	91 14 414		T25	1	Tube	Rör	5
0080	1D	87 87 061		T25	2	Spring clamp	Fjäderklämma	5
0090	1E	91 14 521		T25	1	Hose	Slang	5
0100	2	75 85 011		TE05	1	Tube	Rör	5
0110	2	91 14 505		T25	1	Tube	Rör	5
0120	3	75 18 970		TE05	1	Gasket	Packning	4
0130	3	91 17 599		T25	2	Gasket	Packning	2
0140	4	75 07 700			1	Gasket	Packning	4
0150	5	81 24 141			2	Seal	Tätning	5
0160	7	75 66 474			1	Gasket	Packning	3
0170	8	17 54 506		TE05	2	Clamp	Klammer	5
0180	8	79 85 112		T25, (3212586)	2	Clamp	Klammer	5
0190	9	81 23 903			1	Banjo screw	Banjoskruv	5
0200	10	81 25 163			6	Screw	Skruv	5
0210	11	79 70 288			1	Screw	Skruv	5
0220	11	*79 71 757*		A NLS - USE 7528953	1	Screw	Skruv	5
0230	12	93 90 121			1	Spacer	Distans	4
0240	13	81 45 534		T25	1	Fitting nut	Kopplingsmutter	5
0250	14	81 32 219		T25	1	Ferrule	Skärring	5
0260	15	81 31 963		T25	1	Nipple	Nippel	5
0270	16	81 24 133		T25	1	Gasket	Packning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-D24

Oil pipe
B234

Oljerör
B234

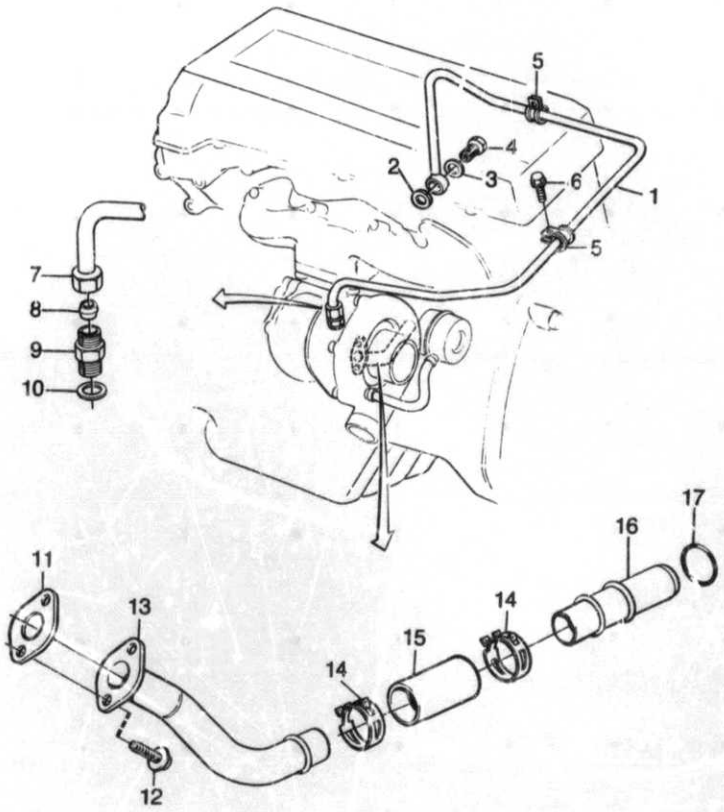

F2900 CAC90

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 07 566*		-1992 NLS - USE 9138728	1	Tube	Rör	5
0020	1	91 38 728		1993, T25	1	Tube	Rör	5
0030	1	91 38 769		1993, TD04	1	Tube	Rör	5
0040	2	*83 26 712*		NLS - USE 4161162	1	Seal	Tätning	5
0050	3	81 24 141			1	Seal	Tätning	5
0060	4	81 23 903			1	Banjo screw	Banjoskruv	5
0070	5	79 85 112		(3212586)	1	Clamp	Klammer	5
0080	6	79 75 451			1	Screw	Skruv	5
0090	7	81 45 534			1	Fitting nut	Kopplingsmutter	5
0100	8	81 32 219			1	Ferrule	Skärring	5
0110	9	81 31 953			1	Nipple	Nippel	5
0120	10	81 24 133			1	Gasket	Packning	5
0130	11	91 14 075		T25	1	Gasket	Packning	5
0140	11	91 07 582		TD04	1	Seal	Tätning	5
0150	12	81 25 163		T25	2	Screw	Skruv	5
0160	12	81 25 015		TD04	2	Screw	Skruv	5
0170	13	91 14 018		T25	1	Tube	Rör	5
0180	13	*91 25 642*		168), TD04 NLS - USE 9168204	1	Tube	Rör	5
0190	13	91 68 204		169), TD04	1	Tube	Rör	5
0200	14	75 86 050			2	Clamp	Klamma	5
0210	15	*91 14 042*		96) NLS - USE 9133489	1	Hose	Slang	5
0220	15	91 33 489		97)	1	Hose	Slang	5
0230	16	91 14 059			1	Tube	Rör	5
0240	17	75 02 263			1	O-ring	O-ring	2

96. Engine --M218480.
97. Engine M218481-.
168. Engine --P222964.
169 Engine P222965-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E02 Air cleaner TURBO

Luftrenare TURBO

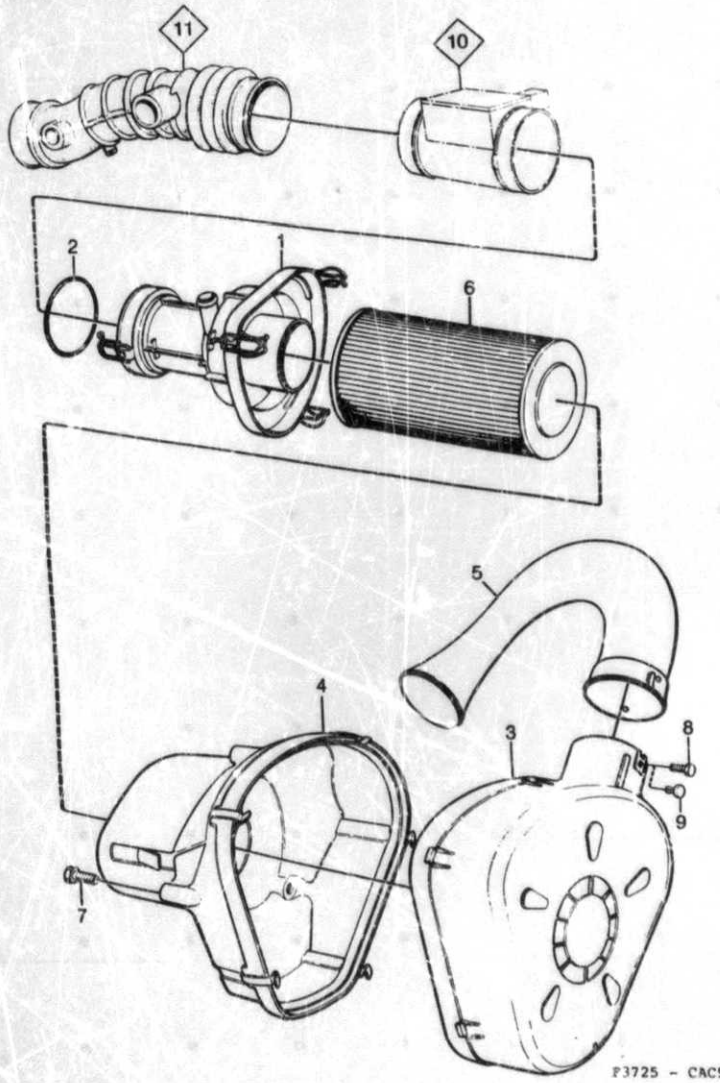

F3725 - CAC90

0651	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 91 608		B202	1	Cover	Lock	6
0020	1	40 20 806		-1992, B234	1	Cover	Lock	6
0030	1	40 16 861		1993, B234	1	Cover	Lock	6
0040	2	40 23 834		B234	1	O-ring	O-ring	3
0050	3	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0060	4	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0070	5	93 90 915		1990	1	Pipe	Rör	6
0080	5	89 76 813		1991-133)	1	Air tube	Luftrör	6
0090	5	93 90 915		134)	1	Pipe	Rör	6
0100	6	93 90 907			1	Air filter	Luftfilter	1
0110	7	79 78 091			3	Screw	Skruv	5
0120	8	79 72 889		1990	2	Screw	Skruv	5
0130	8	79 72 938		1991	2	Screw	Skruv	5
0140	9	95 65 417		1992-	1	Rivet	Nit	3
0150	10			See page 2-069, 1-E22		Mass air flow sensor	Luftmassamätare	
0160	10			See page 2-071, 1-E24		Mass air flow sensor	Luftmassamätare	
0170	11			See page 2-165, 1-I22		Hose	Slang	


133. Ch --N1033004.
134. Ch N1033005--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I13
Supercharging system	1-I20
Kits	1-J04

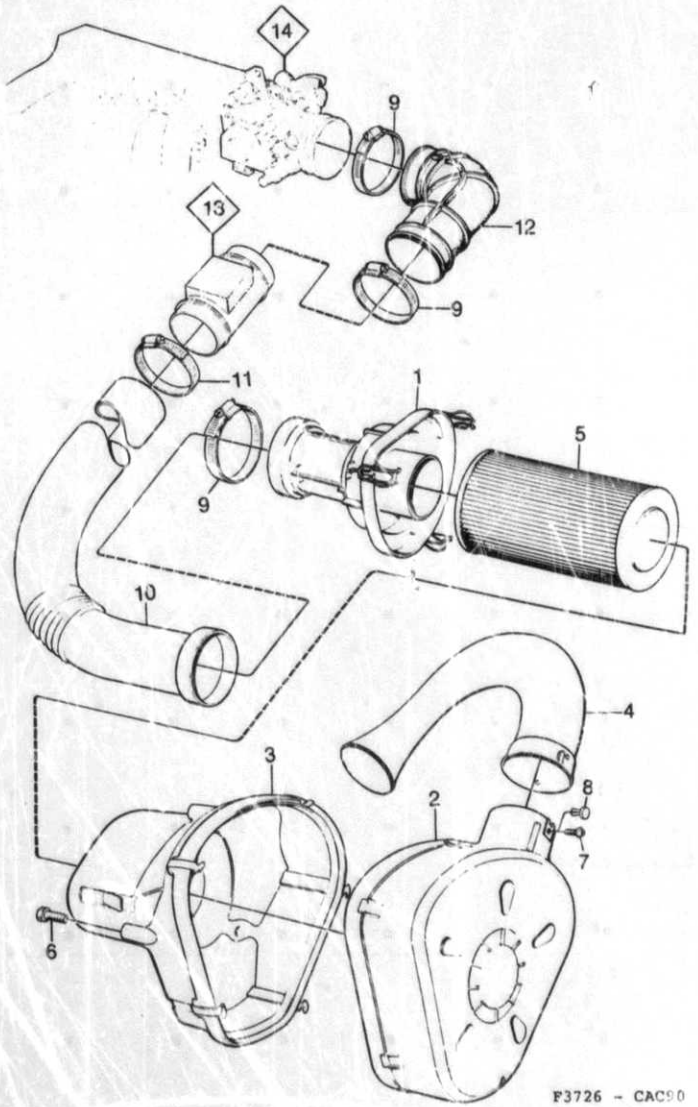

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 76 706			1	Cover	Lock	6
0020	2	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0030	3	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0040	4	93 90 915			1	Pipe	Rör	6
0050	5	93 90 907			1	Air filter	Luftfilter	1
0060	6	79 77 788			3	Screw	Skruv	5
0070	7	79 72 888		-1990	2	Screw	Skruv	5
0080	7	79 72 938		1991	2	Screw	Skruv	5
0090	8	95 65 417		1992-	1	Rivet	Nit	3
0100	9	79 70 155			3	Hose clamp	Slangklamma	5
0110	10	89 76 607			1	Tube	Rör	4
0120	11	79 70 148			1	Hose clamp	Slangklamma	5
0130	12	93 88 968			1	Hose	Slang	4
0140	13			See page 2-069, 1-E22		Mass air flow sensor	Luftmassamätare	
0150	14			See page 2-099, 1-G04		Throttle body	Spjällhus	

128. Ch --N1038980.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E06

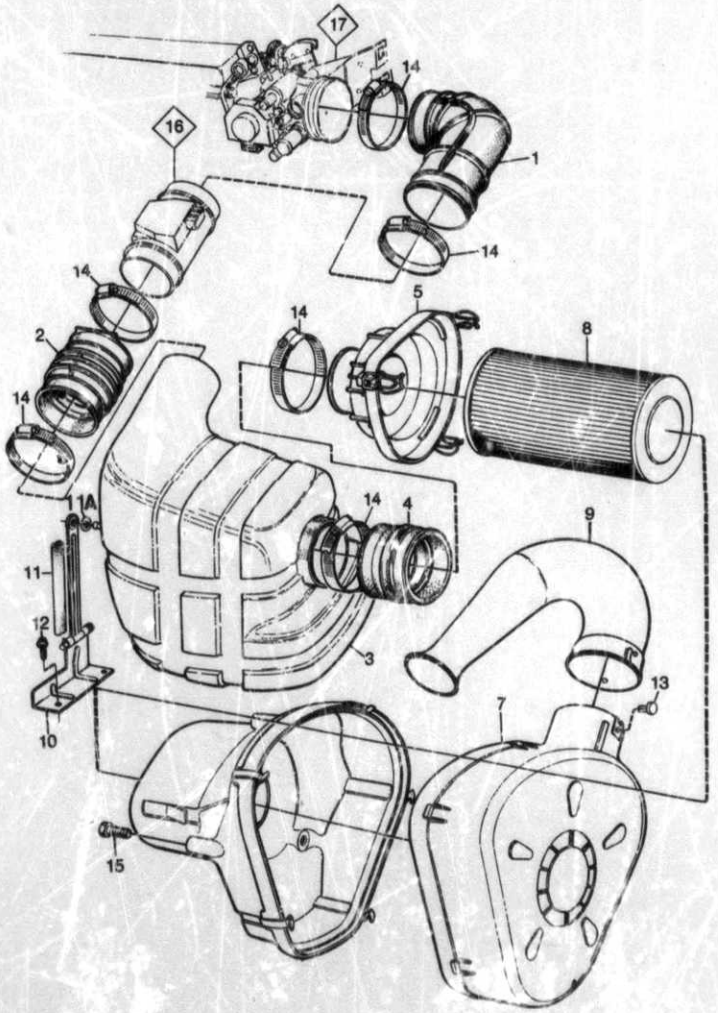

F4783 CAC90

0675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 88 968			1	Hose	Slang	4
0020	2	43 91 686			1	Hose	Slang	4
0030	3	41 58 234			1	Silencer	Ljuddämpare	5
0040	4	40 15 947			1	Hose	Slang	4
0050	5	40 16 861			1	Cover	Lock	6
0060	6	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0070	7	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0080	8	93 90 907			1	Air filter	Luftfilter	1
0090	9	93 90 915			1	Pipe	Rör	6
0100	10	41 58 168			1	Bracket	Fäste	5
0110	11	95 28 910			1	.Protection	.Skydd	5
0120	11A	79 33 500			1	.Bushing	.Bussning	5
0130	12	79 72 938			4	Screw	Skruv	5
0140	13	95 65 417			1	Rivet	Nit	3
0150	14	79 70 155			6	Hose clamp	Slangklamma	5
0160	15	79 77 788			3	Screw	Skruv	5
0170	16			See page 2-069, 1-E22		Mass air flow sensor	Luftmassamätare	
0180	17			See page 2-099, 1-G04		Throttle body	Spjällhus	

129. Ch N1038981-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E08 Air cleaner B234I

Luftrenare B234I

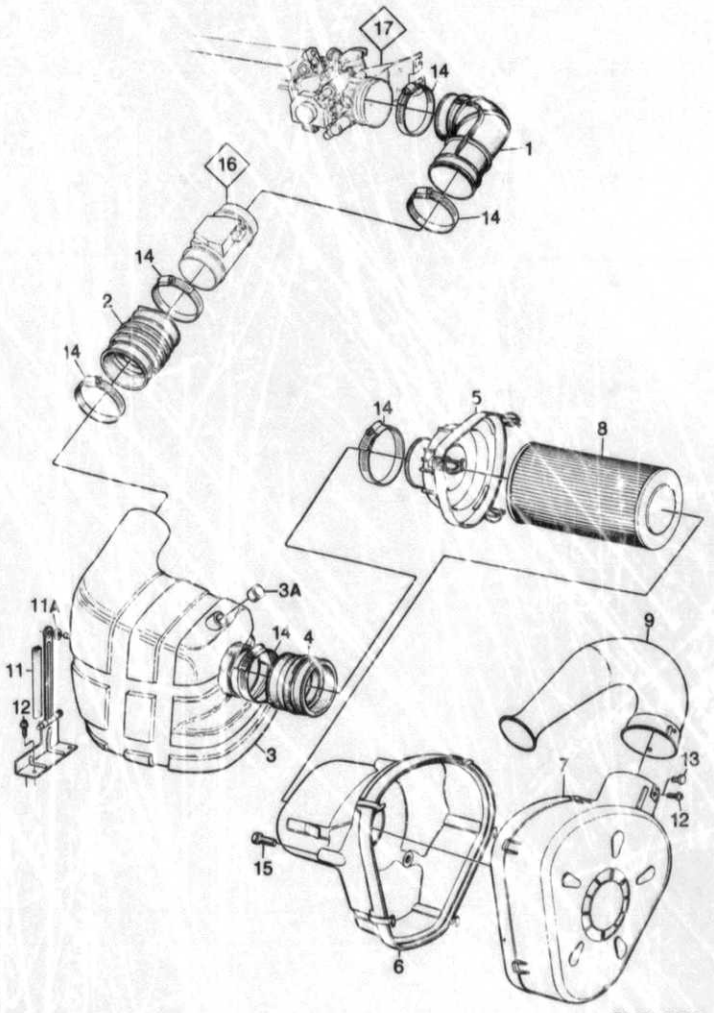


0680	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 76 090			1	Hose	Slang	4
0020	2	40 15 962			1	Hose	Slang	4
0030	3	41 58 234			1	Silencer	Ljuddämpare	5
0040	3A	45 25 028			1	₀Plug	₀Plugg	4
0050	4	40 15 947			1	Hose	Slang	4
0060	5	40 16 861			1	Cover	Lock	6
0070	6	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0080	7	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0090	8	93 90 907			1	Air filter	Luftfilter	1
0100	9	89 78 480			1	Pipe	Rör	6
0110	10	41 58 168		(4017257)	1	Bracket	Fäste	5
0120	11	95 28 910			1	₀Protection	₀Skydd	5
0130	11A	79 33 500			1	₀Bushing	₀Bussning	5
0140	12	79 72 888		-1990	4	Screw	Skruv	5
0150	12	79 72 938		1991-	4	Screw	Skruv	5
0160	13	95 66 417		1992-	1	Rivet	Nit	3
0170	14	79 70 155			6	Hose clamp	Slangklamma	5
0180	15	79 77 788			3	Screw	Skruv	5
0190	16			See page 2-071, 1-E24		Mass air flow sensor	Luftmassamätare	
0200	17			See page 2-099, 1-G04		Throttle body	Spjällhus	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1 C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

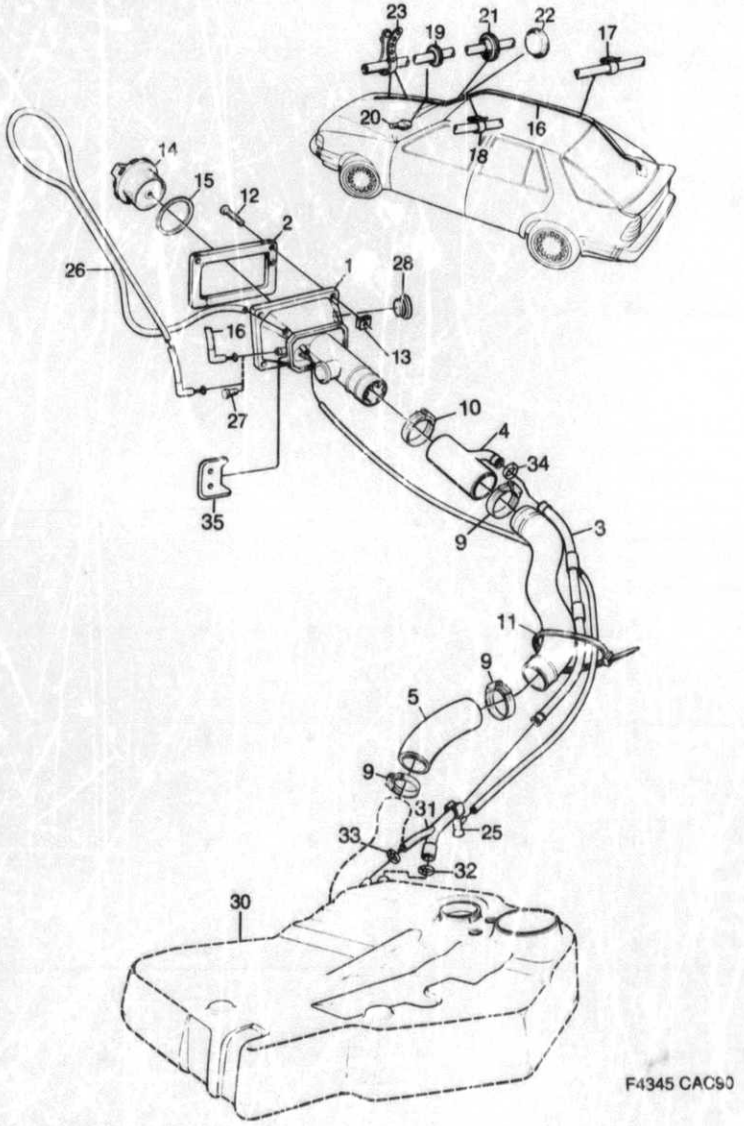

F4345 CAC90

0810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 225			1	Filler pipe	Påfyllningsrör	5
0020	1	89 82 191		25)	1	Filler pipe	Påfyllningsrör	5
0030	2	93 87 002			1	▲Dust seal	▲Dammtätning	5
0040	3	40 19 519			1	Filler pipe	Påfyllningsrör	5
0050	4	40 15 590			1	Hose	Slang	5
0060	5	40 15 475			1	Hose	Slang	5
0070	8	*93 87 341*		NLS - USE 7970072	1	Hose clamp	Slangklamma	5
0080	9	79 70 130			3	Hose clamp	Slangklamma	5
0090	10	79 70 148			1	Hose clamp	Slangklamma	5
0100	11	79 71 880			1	Tensioning band	Spännband	4
0110	12	79 70 536			4	Screw	Skruv	6
0120	13	89 78 371			2	Nut	Mutter	5
0130	14	*89 82 209*		NLS - USE 4391058	1	Filler cap	Tanklock	2
0140	14	41 63 226		BR	1	Filler cap	Tanklock	2
0150	15	75 11 751			1	▲Gasket	▲Packning	4
0160	16	40 15 764			1	Tube	Rör	6
0170	17	93 83 043			5	Clamp	Klammer	5
0180	18	93 65 164			1	Clip	Clips	5
0190	19	79 61 337			1	Bushing	Bussning	6
0200	20	70 38 342		13)	1	Plug	Plugg	5
0210	21	93 87 903			1	Grommet	Genomföring	6
0220	22	71 55 708		13)	1	Plug	Plugg	5
0230	23	93 92 606			3	Tensioning band	Spännband	5
0240	24	93 94 867		13)	1	Hose	Slang	5
0250	25	93 94 875		13)	1	Funnel	Tratt	4
0260	26	93 33 299		13)	1	Tube	Rör	6
0270	27	75 36 840			1	Plastic plug	Plastplugg	5
0280	28	71 63 066			1	Plug	Plugg	5
0290	30			See page 2-061, 1-E14		Tank	Tank	
0300	31	40 19 501			1	Hose	Slang	5
0310	32	79 70 080			1	Hose clamp	Slangklamma	5
0320	33	79 77 879			1	Hose clamp	Slangklamma	5
0330	34	79 70 072			2	Hose clamp	Slangklamma	5
0340	35			See page 8A-029, 5-B06		Sealing collar	Tätningskrage	

13. For cars without carbon filter. För bilar utan kolfilter.
25. Unleaded fuel. Blyfri bensin.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E12 Filler pipe 1992- / Påfyllningsrör 1992-

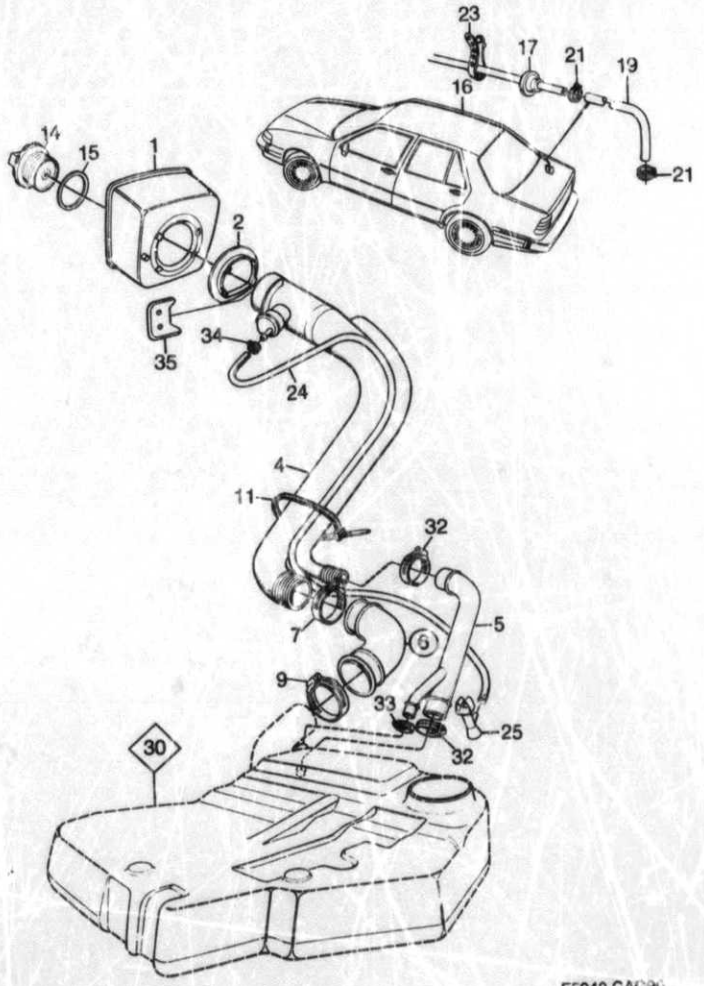

F5940 CAC90

0312	Pos	Part No/Art nr	KS	Notes/Anm. teningar	Qty/ Antal	Description	Benämning	SL
0010	1	41 60 537		1992	1	Filler pipe	Påfyllningsrör	5
0020	1	43 90 423		1993	1	Filler pipe	Påfyllningsrör	5
0030	1	40 15 988		1992, 5CS	1	Filler pipe	Påfyllningsrör	5
0040	1	43 90 431		1993, 5CS	1	Filler pipe	Påfyllningsrör	5
0050	2	40 23 362			1	.Washer	.Bricka	5
0060	4	40 20 996			1	Filler pipe	Påfyllningsrör	5
0070	4	41 59 356		13,	1	Filler pipe	Påfyllningsrör	5
0080					1	Filler pipe	Påfyllningsrör	5
0090	5	88 22 140			1	Hose	Slang	5
0100		40 22 950		1)	1	.Hose	.Slang	5
0110	(32)	79 70 090			2	.Hose clamp	.Slangklamma	5
0120	(33)	79 77 879			1	.Hose clamp	.Slangklamma	5
0130	6	88 22 132			1	Hose	Slang	5
0140		40 22 927		1)	1	.Hose	.Slang	5
0150	7	44 41 697		(7970114)	1	.Hose clamp	.Slangklamma	5
0160	9	44 41 689		(7970130)	1	.Hose clamp	.Slangklamma	5
0170	11	79 71 880			1	Tensioning band	Spännband	4
0180	14	41 64 372		1992	1	Filler cap	Tanklock	2
0190	14	43 91 058		1993	1	Filler cap	Tanklock	2
0200	14	41 63 226		BR	1	Filler cap	Tanklock	2
0210	15	75 11 751			1	.Gasket	.Packning	4
0220	16	40 21 002			1	Tube	Rör	6
0230	17	40 21 010			1	.Grommet	.Genomföring	5
0240	19	40 17 844			1	.Hose	.Slang	5
0250	21	79 73 522			2	.Hose clamp	.Slangklamma	5
0260	23	93 92 606			3	Tensioning band	Spännband	5
0270	24	41 63 895		13)	1	Hose	Slang	5
0280	25	93 94 875		13)	1	Funnel	Tratt	4
0290	30			See page 2-061, 1-E14		Tank	Tank	
0300	32	79 70 080			1	Hose clamp	Slangklamma	5
0310	33	79 77 879			1	Hose clamp	Slangklamma	5
0320	34	79 73 522			1	Hose clamp	Slangklamma	5
0330	35			See page 8A-029, 5-B06		Sealing collar	Tätningskrage	

1. Not as separate spare part. Ej som separat reservdel.
13. For cars without carbon filter. För bilar utan kolfilter.
163. Ch. -P1027851.
164. Ch. P1027852-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E14

Fuel tank
Bränsletank

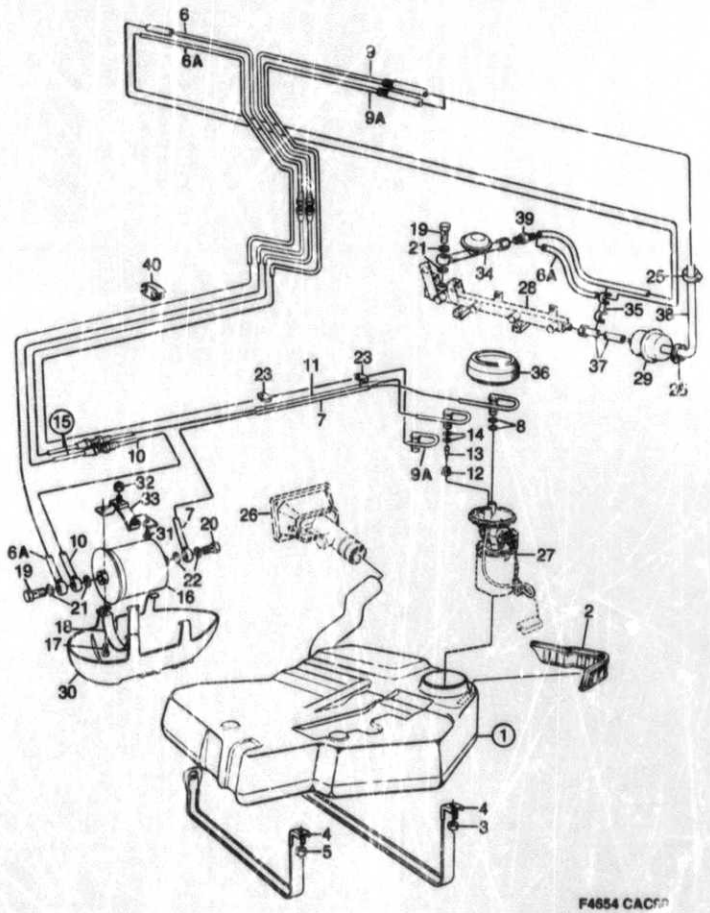

GR20	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 167		-1991	1	Tank	Tank	6
0020	1	41 62 665		1992-	1	Tank	Tank	6
0030	2	93 88 034			1	Support	Stöd	6
0040	3	40 15 426			1	Tensioning band	Spännband	6
0050	4	89 75 153			1	Tensioning band	Spännband	6
0060	5	79 71 922			3	Nut	Mutter	3
0070								
0080	6	40 18 412		148,182), B202	1	Fuel pipe	Bränsleledning	5
0090								
0100	6	40 20 509		73), B234I	1	Fuel pipe	Bränsleledning	5
0110	6	41 59 745		74,126), B234I	1	Fuel pipe	Bränsleledning	5
0120	6	41 64 224		127,148,182), B234I	1	Fuel pipe	Bränsleledning	5
0130								
0140	6	41 60 735		126), B234TURBO	1	Fuel pipe	Bränsleledning	5
0150	6	41 64 398		127)-1992, B234TURBO	1	Fuel pipe	Bränsleledning	5
0160	6	43 91 595		1993-,148,182),B234TURBO	1	Fuel pipe	Bränsleledning	5
0170	6	41 64 398		1993-,148), B234TURBO ME	1	Fuel pipe	Bränsleledning	5
0180	6	41 63 184		149,161,185),B234TURBOME	1	Fuel pipe	Bränsleledning	5
0190	6	41 63 184		B234TURBO BR	1	Fuel pipe	Bränsleledning	5
0200								
0210	6A	44 40 103		149), B202	1	Fuel pipe	Bränsleledning	5
0220	6A	44 40 111		149), B234I	1	Fuel pipe	Bränsleledning	5
0230	6A	44 40 079		149), B234TURBO	1	Fuel pipe	Bränsleledning	5
0240	6A	44 41 184		162), B234TURBO ME	1	Fuel pipe	Bränsleledning	5
0250								
0260	7	40 15 681		77)	1	Fuel pipe	Bränsleledning	5
0270	7	41 61 758		78)	1	Fuel pipe	Bränsleledning	5
0280	7	41 63 176		BR	1	Fuel pipe	Bränsleledning	5
0290	8	79 74 546			2	.O-ring	.O-ring	2
0300								
0310	9	40 17 646		148,183)	1	Fuel pipe	Bränsleledning	5
0320	9	41 60 743		148,183), B234TURBO	1	Fuel pipe	Bränsleledning	5
0330	9	41 63 192		149,161,186),B234TURBOME	1	Fuel pipe	Bränsleledning	5
0340	9	41 63 192		B234TURBO BR	1	Fuel pipe	Bränsleledning	5
0350								
0360	9A	44 40 137		149)	1	Fuel pipe	Bränsleledning	5
0370	9A	44 40 087		149), B234TURBO	1	Fuel pipe	Bränsleledning	5
0380	9A	44 40 087		162), B234TURBO ME	1	Fuel pipe	Bränsleledning	5
0390								
0400	10	40 17 455		148,182)	1	Fuel pipe	Bränsleledning	5
0410	10	41 63 200		149,161,185), ME	1	Fuel pipe	Bränsleledning	5
0420	10	41 63 200		BR	1	Fuel pipe	Bränsleledning	5
0430								
0440	11	75 91 274		148,183)	1	Fuel pipe	Bränsleledning	5
0450	11	41 63 218		149,161,186), ME	1	Fuel pipe	Bränsleledning	5
0460	11	41 63 218		BR	1	Fuel pipe	Bränsleledning	5
0470								
0480	12	89 77 779			1	.Non-return valve	.Backventil	6
0490	13	89 77 761			1	.Valve peg	.Ventilkägla	6

73. Ch. --L1023714, --L2016668.
74. Ch. L1023715--, L2016669--.
77. Ch. --L1020823, --L2014947.
78. Ch. L1020824--, L2014948--.
126. Ch --N1021204.
127. Ch N1021205--.
148. Ch --P1001543.
149. Ch P1001544--.
161. Ch. --P1013123.
162. Ch. P1013124--.
182. Ch. P1001544--, See pos 6A. Ch. P1001544--, Se pos 6A.
183. Ch. P1001544--, See pos 9A. Ch. P1001544--, Se pos 9A.
185. Ch. P1013124--, See pos 6A. Ch. P1013124--, Se pos 6A.
186. Ch. P1013124--, See pos 9A. Ch. P1013124--, Se pos 9A.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E16

Fuel tank
Bränsletank

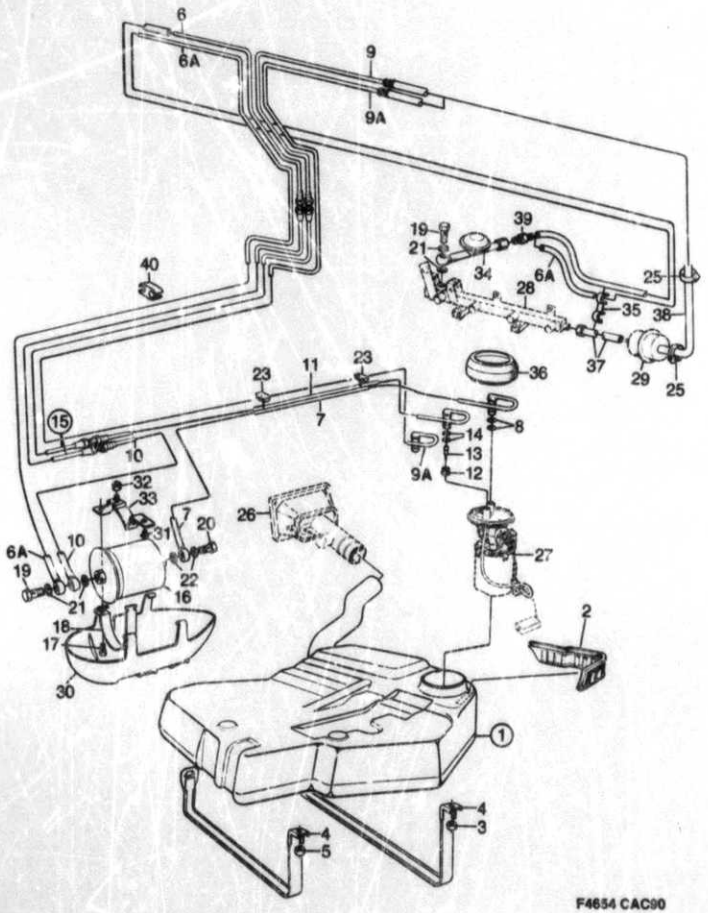

0820	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0500	14	79 74 546			2	O-ring	O-ring	2
0510	15	89 78 934		148,184)	1	Tube	Rör	5
0520	15	41 63 234		149,161,187), ME	1	Tube	Rör	5
0530	15	41 63 234		BR	1	Tube	Rör	5
0540	16	*93 33 790*		-1991 NLS - USE 4163853	1	Fuel filter	Bränslefilter	2
0550	16	41 63 953		1992-	1	Fuel filter	Bränslefilter	2
0560	16	41 63 168		BR	1	Fuel filter	Bränslefilter	2
0570	17	79 22 354		1990	1	Screw	Skruv	5
0580	17	79 77 466		1991-	1	Screw	Skruv	5
0590	18	40 16 320			1	Tensioning band	Spännband	6
0600	19	*83 19 915*		-1991 NLS - USE 4374203	2	Banjo bolt	Hålbult	5
0610	19	43 74 203		1992-	2	Banjo bolt	Hålbult	5
0620	19	41 63 119		BR	1	Banjo bolt	Hålbult	5
0630	20	*83 22 927*		-1991 NLS - USE 4374211	1	Banjo bolt	Hålbult	5
0640	20	43 74 211		1992-	1	Banjo bolt	Hålbult	5
0650	20	41 63 135		BR	1	Banjo bolt	Hålbult	5
0660	21	*89 81 979*		131) NLS - USE 4443883	4	Seal	Tätning	5
0670	21	*41 59 265*		132) NLS - USE 4443883	4	Seal	Tätning	5
0680	22	89 81 961		131)	2	Seal	Tätning	5
0690	22	41 61 162		132)	2	Seal	Tätning	5
0700	23	*93 82 870*		NLS - USE 8978827	4	Clamp	Klamma	5
0710	24	89 76 827			3	Clamp	Klammer	5
0720	25	83 32 587			1	Hose clamp	Slangklamma	5
0730	26			See page 2-057, 1-E10		Filler pipe	Påfyllningsrör	
0740	27			See page 2-065, 1-E18		Fuel pump	Bränslepump	
0750	28			See page 2-069, 1-E22		Tube	Rör	
0760	29			See page 2-069, 1-E22		Regulator	Regulator	
0770	30	40 15 707		160)	1	Protection	Skydd	9
0780	31	93 93 968			1	Rivet	Nit	5
0790	32	79 67 979			1	Nut	Mutter	5
0800	33	41 57 723			1	Bracket	Fäste	6
0810	34	91 33 539		B234, BR	1	Absorber	Dämpare	6
0820	34	40 20 566		1990, B234	1	Absorber	Dämpare	6
0830	34	41 64 232		1991-, B234	1	Absorber	Dämpare	6
0840	35	73 98 464		B234TURBO	1	Clamp	Klammer	5
0850	35	73 98 464		73), B234I	1	Clamp	Klammer	5
0860	35	79 71 864		74), B234I	1	Tensioning band	Spännband	5
0870	36	40 20 673		1990	1	Seal	Tätning	3
0880	36	41 60 305		1991-	1	Seal	Tätning	3
0890	37			See page 2-069, 1-E22		Fuel pipe	Bränsleledning	
0900	38	41 62 038		B234 TURBO	1	Hose	Slang	5
0910	38	41 63 150		B234 TURBO, BR	1	Hose	Slang	5
0920	39	93 68 234		127)	1	Nipple	Nippel	5
0930	40	93 84 298		149)	6	Clamp	Klammer	5


73. Ch. --L1023714, --L2016668.
74. Ch. L1023715--, L2016669--.
127. Ch N1021205--.
131. Ch --N1038163.
132. Ch N1038164--.
148. Ch --P1001543.
149. Ch P1001544--.
160. Ch. --P1021468.
161. Ch. --P1013123.
184. Ch. P1001544--, See pos 6A + 9A. Ch. P1001544--, Se pos 6A + 9A.
187. Ch. P1013124--, See pos 6A + 9A. Ch. P1013124--, Se pos 6A + 9A.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

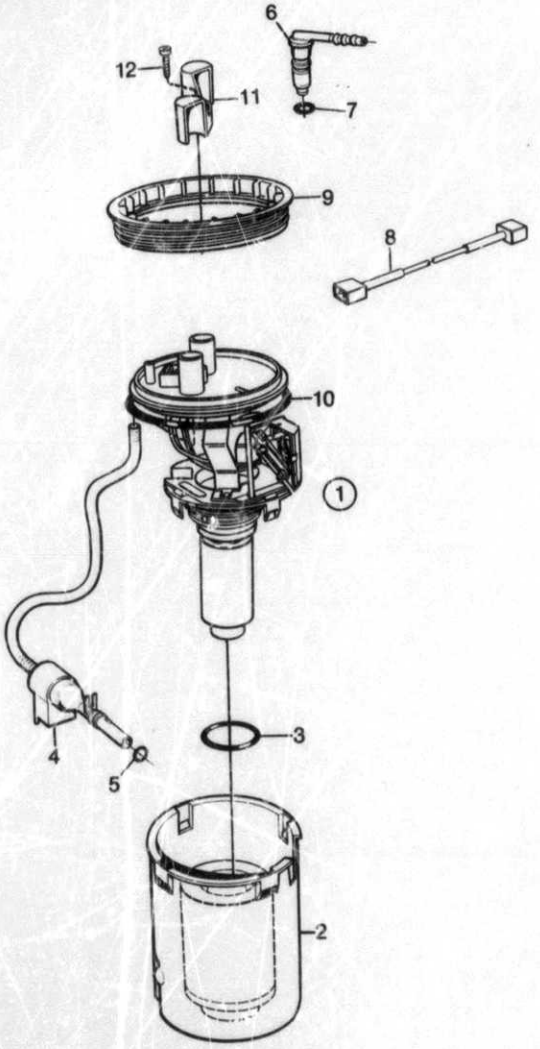

F4753 CAC90

0860	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*40 23 230*		77),TURBO NLS - USE 9321621	1	Fuel pump	Bränslepump	5
0010								
0020	1	*40 23 222*		77),I NLS - USE 9321621	1	Fuel pump	Bränslepump	5
0030	1	93 21 621		78)	1	Fuel pump	Bränslepump	5
0040	1	41 62 970		LA	1	Fuel pump	Bränslepump	5
0050	2	89 80 021		77)	1	.Reservoir	.Behållare	5
0060	3	75 91 902		77)	1	..O-ring	..O-ring	2
0070	4	89 80 047		77)	1	.Ejector unit	.Ejektorenhet	5
0080	5	93 94 602			1	..O-ring	..O-ring	2
0090	6	41 61 766		78)	1	.Non-return valve	.Backventil	3
0100	7	79 74 546		78)	2	.O-ring	.O-ring	2
0110	8	43 93 484		PART OF 9321621	1	.Connection	.Skarv	5
0120	9	41 56 550			1	Cover	Lock	6
0130	10	*41 56 469*		1990 NLS - USE 4160511	1	Seal	Tätning	6
0140	10	41 60 511		1991-	1	Seal	Tätning	6
0150	11	93 94 628			1	Lock brace	Låsbygel	5
0160	12	79 71 344			1	Screw	Skruv	5
0170				See page 2-175, 1-J08	X	Hose kit	Slangsats	

77. Ch. --L1020823, --L2014947.
78. Ch. L1020824--, L2014948--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-E20 Fuel pump 1992-

Bränslepump 1992-

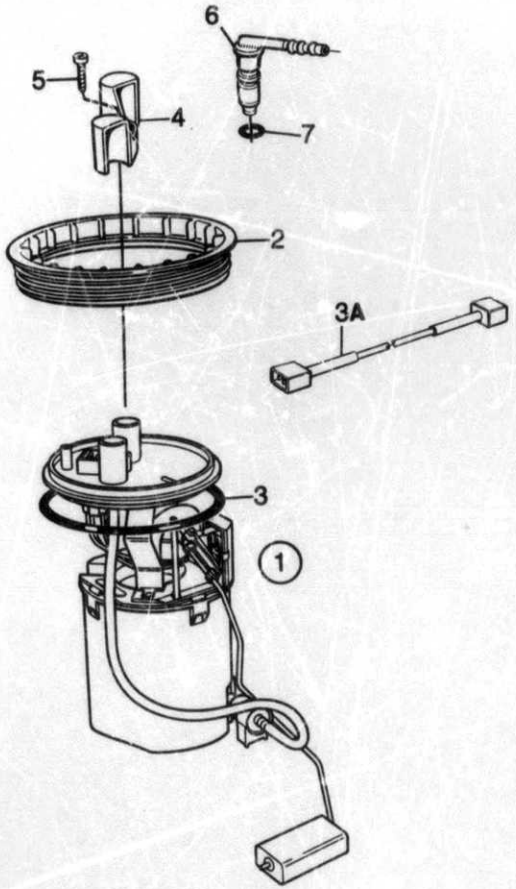

F4785 CAC90

0865	Pos	Part No/Art nr	A S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 21 712		1992	1	Fuel pump	Bränslepump	5
0020	1	93 21 878		1993	1	Fuel pump	Bränslepump	5
0030	1	41 63 564		BR	1	Fuel pump	Bränslepump	5
0040	2	41 56 550			1	.Cover	.Lock	6
0050	3	41 60 511			1	.Seal	.Tätning	6
0060	3A	43 93 484		1992	1	.Connection	.Skarv	5
0070	3A	43 93 195		1993	1	.Connection	.Skarv	5
0080	4	93 94 628		158)	1	Lock brace	Låsbygel	5
0090	4	43 92 957		159)	1	Lock brace	Låsbygel	5
0100	5	79 71 344			1	Screw	Skruv	5
0110	6	41 61 766			1	Non-return valve	Backventil	3
0120	7	79 74 546			1	O-ring	O-ring	2


158. Ch. --P1013267.
159. Ch. P1013268--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

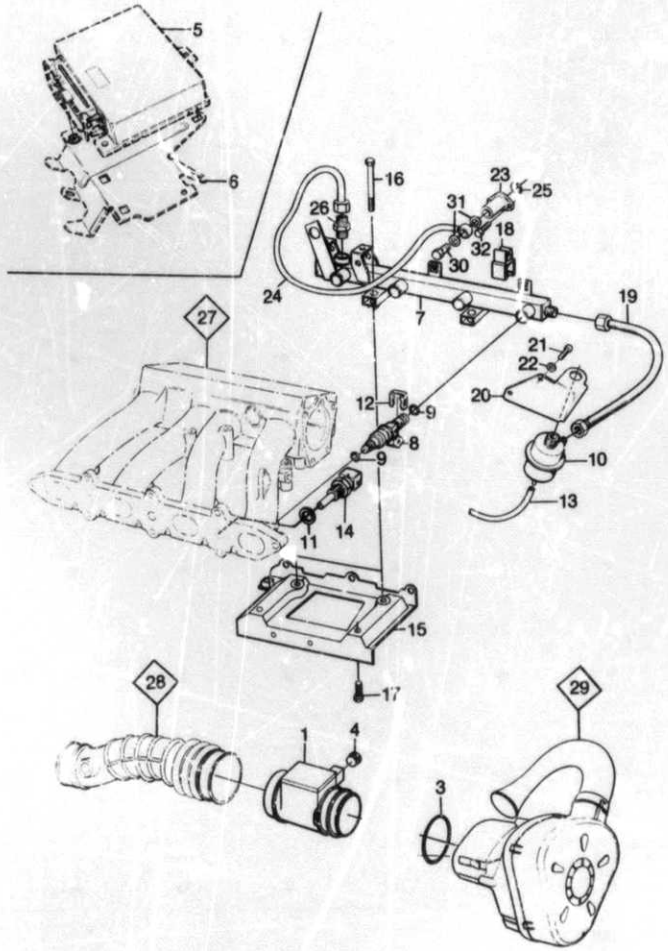

F6249 CAC93

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 78 280		5,7),1990, TURBO	1	Mass air flow sensor	Luftmassamätare	4
0020	1	78 72 393		5,7),1991-, TURBO	1	Mass air flow sensor	Luftmassamätare	4
0030	1	75 38 655		4,7), TURBO	1	Mass air flow sensor	Luftmassamätare	4
0040								
0050	1	75 91 183		5,7),1990, I	1	Mass air flow sensor	Luftmassamätare	4
0060	1	78 72 385		5,7),1991-, I	1	Mass air flow sensor	Luftmassamätare	4
0070	1	75 38 663		4,7), I	1	Mass air flow sensor	Luftmassamätare	4
0080								
0100	3	79 74 306			1	O-ring	O-ring	3
0110	4	75 25 710			1	Plug	Plugg	5
0120	4	93 83 076		4), I	1	Plug	Plugg	5
0130	5			See page 2-075, 1-F04	1	Electronic unit	Elektronikenhet	
0140	6			See page 2-079, 1-F08	1	Bracket	Fäste	
0150	7	78 72 922			1	Tube	Rör	6
0160	8	75 60 170		7), TURBO	4	Injection valve	Insprutningsventil	2
0170	8	75 60 162		7), I	4	Injection valve	Insprutningsventil	2
0180	9	75 61 210			9	O-ring	O-ring	2
0190	10	74 86 913		5), TURBO	1	Regulator	Regulator	5
0200	10	74 86 905		4), TURBO	1	Regulator	Regulator	5
0210	10	74 86 921		4), TURBO, IT,(137KW)	1	Regulator	Regulator	5
0220	10	74 86 921		I	1	Regulator	Regulator	5
0230	11	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0240	12	93 56 486			4	Clamp	Klammer	5
0250	13	91 36 243		L=530 MM	1	Vaccum hose	Vakuumslang	5
0260	14	93 57 021			1	Temperature sensor	Temperaturgivare	2
0270	15	74 81 336			1	Bracket	Konsol	5
0280	16	75 66 730			2	Screw	Skruv	5
0290	17	81 25 148			2	Screw	Skruv	5
0300	18	75 39 950			1	Clamp	Klammer	5
0310	19	74 86 954			1	Fuel pipe	Bränsleledning	5
0320	20	87 87 657		1990	1	Bracket	Fäste	5
0330	20	87 87 665		1991-	1	Bracket	Fäste	5
0340	21	93 50 653			2	Screw	Skruv	5
0350	22	80 29 951		-1992	2	Washer	Bricka	5
0360	22	91 66 364		1993	2	Washer	Bricka	5
0370	23	74 86 129		I	1	Starter valve	Startventil	4
0380	24	89 81 417		I	1	Fuel pipe	Bränsleledning	5
0390	25	80 46 542		I	1	O-ring	O-ring	2
0400	26	89 81 581		I	1	Nipple	Nippel	3
0410	27			See page 2-085, 1-F14		Intake manifold	Inloppsrör	
0420	27			See page 2-087, 1-F16		Intake manifold	Inloppsrör	
0430	28			See page 2-163, 1-I20		Hose	Slang	
0440	28			See page 2-165, 1-I22		Hose	Slang	
0450	28			See page 2-051, 1-E04		Hose	Slang	
0460	29			See page 2-049, 1-E02		Air cleaner housing	Luftrenarhus	
0470	29			See page 2-051, 1-E04		Air cleaner housing	Luftrenarhus	
0480	30	83 20 319			1	Banjo bolt	Hålbult	5
0490	31	89 81 987			2	Seal	Tätning	5
0500	32	75 07 072			2	Screw	Skruv	5
0510								
0520		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

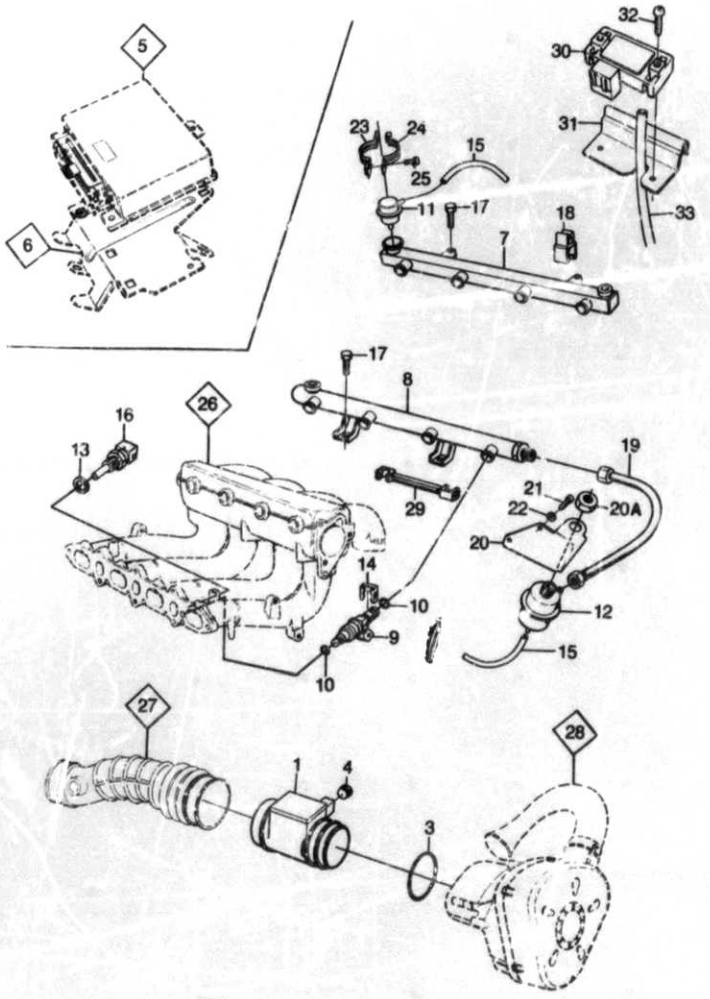

F6248 CAC93

0905	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 13 846		4,7), TURBO	1	Mass air flow sensor	Luftmassamätare	4
0020	1	91 13 838		4,7), I	1	Mass air flow sensor	Luftmassamätare	4
0030	1	78 72 385		5,7), I	1	Mass air flow sensor	Luftmassamätare	4
0040	3	79 74 306		I	1	O-ring	O-ring	3
0050	3			TURBO	1	O-ring	O-ring	
0060				See page 2-049, 1-E02				
0070	4	93 83 076		I	1	Plug	Plugg	5
0080	5			See page 2-075, 1-F04	1	Electronic unit	Elektronikenhet	
0090				LH	1			
0100	5			See page 2-077, 1-F06	1	Electronic unit	Elektronikenhet	
0110				TRIONIC	1			
0120	6			See page 2-079, 1-F08	1	Bracket	Fäste	
0130	7	88 56 981		TURBO	1	Tube	Rör	6
0140	7	*91 36 318*		TURBO, BR NLS - USE 8856981	1	Tube	Rör	6
0150	8	87 88 473		I	1	Tube	Rör	6
0160	9	88 57 153		7), -1992, TURBO	4	Injection valve	Inspruthingsventil	2
0170	9	91 35 120		7), 1993, TURBO	4	Injection valve	Inspruthingsventil	2
0180	9	91 36 300		7), BR	4	Injection valve	Inspruthingsventil	2
0190	9	91 13 721		7), I	4	Injection valve	Inspruthingsventil	2
0200	10	75 61 210			2	O-ring	O-ring	2
0210	11	91 31 061		TURBO	1	Regulator	Regulator	5
0220	12	74 86 921		I	1	Regulator	Regulator	5
0230	13	*83 26 704*		NLS - USE 4443883	1	Seal	Tätning	5
0240	14	93 56 486			4	Clamp	Klammer	5
0250	15	91 36 243		TURBO, L=130 MM	1	Vacuum hose	Vakuumslang	5
0260	15	91 36 243		I, L=290 MM	1	Vacuum hose	Vakuumslang	5
0270	16	93 57 021			1	Temperature sensor	Temperaturgivare	2
0280	16	87 88 200		TCS	1	Sensor	Givare	2
0290	17	81 25 148		I	2	Screw	Skruv	5
0300	17	81 25 007		TURBO	2	Screw	Skruv	5
0310	18	41 58 846		TURBO	1	Clamp	Klammer	5
0320	19	74 86 954			1	Fuel pipe	Bränsleledning	5
0330	20	88 58 359			1	Bracket	Fäste	5
0340	20A	81 51 177		I	1	Nut	Mutter	5
0350	21	93 50 653			2	Screw	Skruv	5
0360	22	80 29 951		-1992	2	Washer	Bricka	5
0370	22	91 66 364		1993	2	Washer	Bricka	5
0380	23	91 08 226		92), TURBO	1	Bracket	Fäste	5
0390	23	91 28 836		93), TURBO	1	Bracket	Fäste	5
0400	24	*91 08 242*		92), TURBO NLS - USE 9128851	1	Bracket	Fäste	5
0410	24	91 28 851		93), TURBO	1	Bracket	Fäste	5
0420	25	91 09 539		92), TURBO	1	Screw	Skruv	5
0430	25	81 25 007		93), TURBO	1	Screw	Skruv	5
0440	26			See page 2-089, 1-F18		Intake manifold	Inloppsrör	
0450	26			See page 2-091, 1-F20		Intake manifold	Inloppsrör	
0460	26			See page 2-093, 1-F22		Intake manifold	Inloppsrör	
0470	26			See page 2-097, 1-G02		Intake manifold	Inloppsrör	
0480	27			See page 2-165, 1-I22		Hose	Slang	
0490	27			See page 2-055, 1-E08		Hose	Slang	
0500	28			See page 2-049, 1-E02		Air cleaner housing	Luftrenarhus	
0510	28			See page 2-055, 1-E08		Air cleaner housing	Luftrenarhus	
0520	29	91 38 231		TRIONIC	2	Retainer	Hållare	3
0530	30	91 32 374		TRIONIC	1	Pressure sensor	Tryckgivare	3
0540	31	41 61 899		TRIONIC	1	Bracket	Konsol	5
0550	32	79 22 396		TRIONIC	2	Screw	Skruv	5
0560	33	41 64 141		TRIONIC	1	Vacuum hose	Vakuumslang	3

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
92. Engine --M215981.
93. Engine M215982--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front essembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F02

Distribution pipe
B234

Fördelningsrör
B234

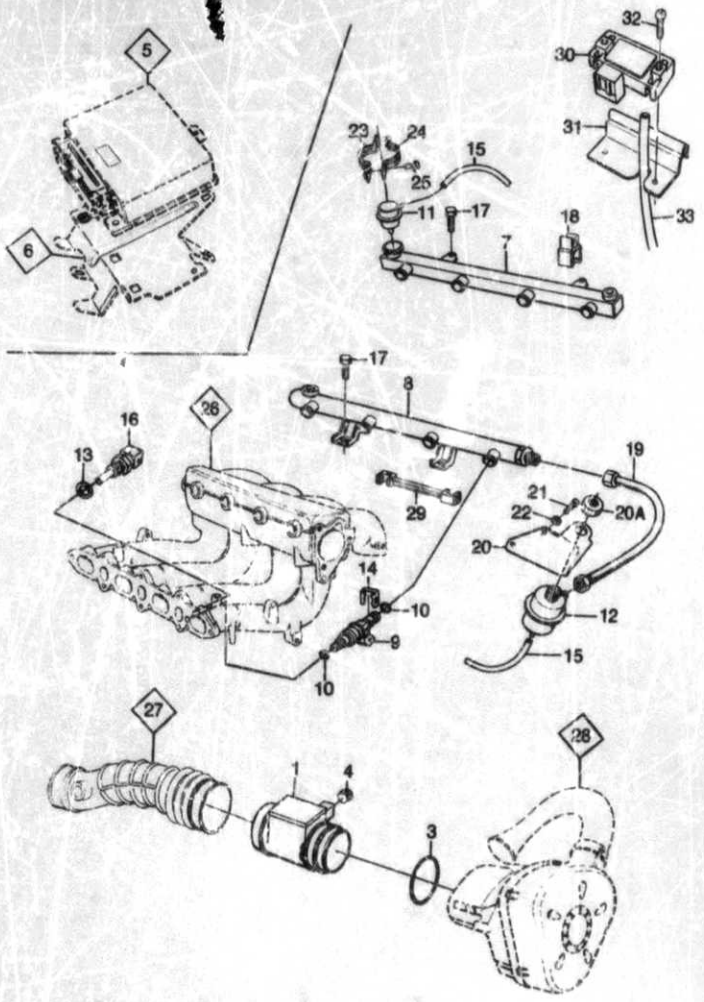

F6248 CAC93

0905 Pos	Part No/Art nr	X S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570 0580	91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F04 Electronic unit LH / Elektronikenhet LH

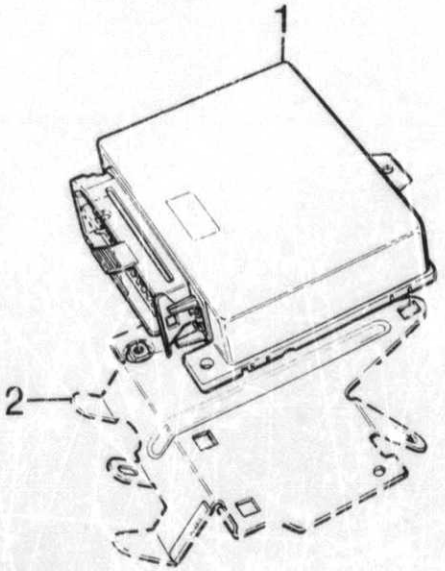

F3733 - CAC90

0907	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010								
0020				B202		B202	B202	
0030								
0040	1	91 14 711		5,7,26),1990, I, M	1	Electronic unit	Elektronikenhet	3
0050	1	74 87 127		5,7,26),1990, I, A	1	Electronic unit	Elektronikenhet	3
0060	1	78 72 203		5,7,26),1991-, I	1	Electronic unit	Elektronikenhet	3
0070	1	91 19 470		4,7,26), I	1	Electronic unit	Elektronikenhet	3
0080	1	91 19 496		4,7,26),1990, I, UC	1	Electronic unit	Elektronikenhet	3
0090								
0100	1	91 19 520		5,7,26),1990, TURBO, M	1	Electronic unit	Elektronikenhet	3
0110	1	91 19 538		5,7,26),1990, TURBO, A	1	Electronic unit	Elektronikenhet	3
0120	1	78 72 211		5,7,26),1991-, TURBO	1	Electronic unit	Elektronikenhet	3
0130	1	91 19 488		4,7,26),1990 TURBO	1	Electronic unit	Elektronikenhet	3
0140	1	87 87 079		4,7,26),1990, TURBO, UC	1	Electronic unit	Elektronikenhet	3
0150	1	91 26 194		4,7,26),1991-, TURBO	1	Electronic unit	Elektronikenhet	3
0160	1	91 26 202		4,7,26),1991-,TURBO,TCS	1	Electronic unit	Elektronikenhet	3
0170								
0180				B234		B234	B234	
0190								
0200	1	88 57 187		-1992,4,7,27), TURBO	1	Electronic unit	Elektronikenhet	3
0210	1	43 00 059		-1992,4,7,27), TURBO, BR	1	Electronic unit	Elektronikenhet	3
0220	1	78 72 260		-1992,4,7,27), TURBO TCS	1	Electronic unit	Elektronikenhet	3
0230								
0240	1	91 13 804		4,7,27), 1990, I	1	Electronic unit	Elektronikenhet	3
0250	1	78 72 237		4,7,27), 1991-1992, I	1	Electronic unit	Elektronikenhet	3
0260	1	78 72 237		4,7,27), 1993, I	1	Electronic unit	Elektronikenhet	3
0270	1	43 00 224		4,7,27), 1993, I, SE,US	1	Electronic unit	Elektronikenhet	3
0280	1	78 72 229		5,7,27), 1991-, I	1	Electronic unit	Elektronikenhet	3
0290								
0300	2			See page 2-079, 1-F08	1	Bracket	Fäste	

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
26. B202. B202.
27. B234. B234.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H16
Engine control	1-I13
Supercharging system	1-I20
Kits	1-J04

1-F06 Electronic unit TRIONIC / Elektronikenhet TRIONIC

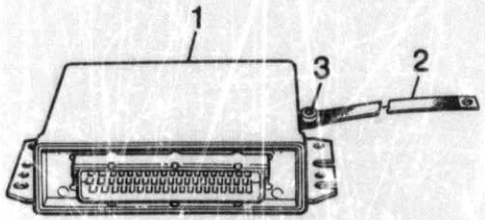

F4787 CAC90

0908	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010								
0020				B234		B234	B234	
0030								
0040	1	91 36 474		7)	1	Electronic unit	Elektronikenhet	3
0050	1	91 36 490		7), TCS, ASR	1	Electronic unit	Elektronikenhet	3
0060	1	43 00 810		7), B234R	1	Electronic unit	Elektronikenhet	3
0070	1	91 36 516		7), B234R, TCS	1	Electronic unit	Elektronikenhet	3
0080								
0090	2	43 01 677			1	•Ground cable	•Jordkabel	6
0100	3	79 22 354			1	•Screw	•Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F08 Bracket / Electronic unit

Fäste / Elektronikenhet

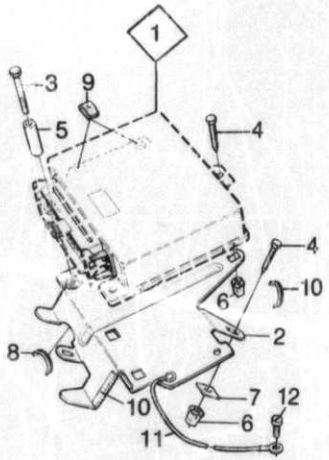

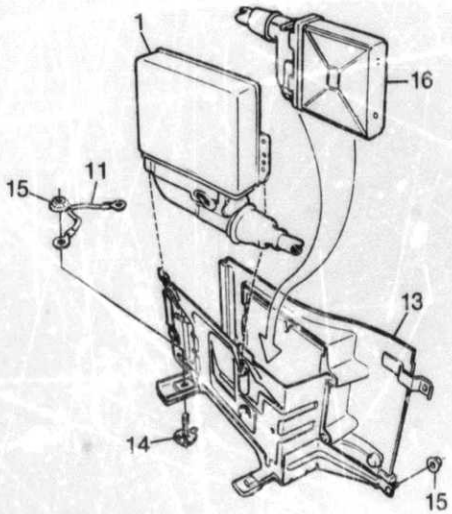

0910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
0010	1			LH	1	Electronic unit	Elektronikenhet	
0020				See page 2-075, 1-F04				
0030	1			TRIONIC	1	Electronic unit	Elektronikenhet	
0040				See page 2-077, 1-F06				
0050	2	40 23 115		-1991	1	Bracket	Fäste	5
0060	3	80 21 743		-1991	1	Screw	Skruv	5
0070	4	79 72 672		-1991	5	Screw	Skruv	5
0080	5	93 87 895		-1991	1	Spacer sleeve	Distanshylsa	5
0090	6	79 75 261		-1991	5	Nut	Mutter	5
0100	7	93 89 198		-1991	5	Base	Underlägg	2
0110	8	75 91 035		-1991	1	Protecting moulding	Skyddslist	5
0120	9	73 99 355		-1991	1	Clip	Clips	5
0130	10	75 35 487		-1991	1	Protecting moulding	Skyddslist	5
0140	11	41 75 386		1991-, LH	1	Ground cable	Jordkabel	6
0150	11			TRIONIC	1	Ground cable	Jordkabel	
0160				See page 2-077, 1-F06				
0170	12	82 86 296		1991-	2	Screw	Skruv	5
0180	13	*41 59 869*		1992 NLS - USE 4164802	1	Bracket	Fäste	5
0190	13	41 64 802		1993-	1	Bracket	Fäste	5
0200				1)	1	Sound absorber	Ljudabsorbent	
0210	14	40 08 579		1992-	1	Cage screw	Korgskruv	5
0220	15	79 77 929		1992-	2	Nut	Mutter	5
0230	16			See page 3A-021, 2-A22	1	Electronic unit	Elektronikenhet	

1. Not as separate spare part. Ej som separat reservdel.


F3734 - CAC90

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

2 GROUP INDEX

Engine body 1-C10
Lubrication system 1-D16
Fuel system 1-E02
Inlet and exhaust system 1-F14
Cooling system 1-H14
Engine control 1-I18
Supercharging system 1-I20
Kits 1-J04

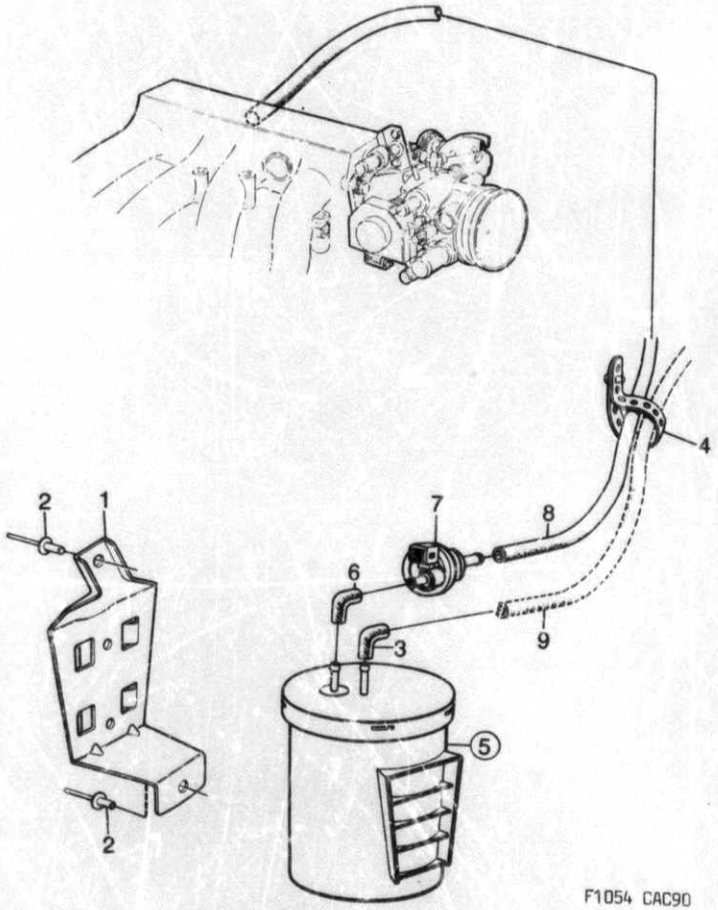

F1054 CAC90


0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 91 764			1	Bracket	Fäste	6
0020	2	93 93 968			2	Rivet	Nit	5
0030	3	93 85 121			1	Hose	Slang	5
0040	4	95 28 019			4	Tensioning band	Spännband	5
0050	5	75 39 216			1	Carbon filter	Kolfilter	3
0060	6	*40 18 586*		NLS - USE 7539240	1	Hose	Slang	5
0070	7	75 39 257			1	Tank ventilation valve	Tankurluftningsventil	5
0080	8	75 91 837		B202	1	Hose	Slang	5
0090	8	40 17 786		B234I	1	Hose	Slang	5
0100	8	40 24 485		B234TURBO	1	Hose	Slang	5
0110	9			See page 2-057, 1-E10		Hose	Slang	
0120	10	79 63 895		B234TURBO	1	Tube clamp	Rörklamma	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A0
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

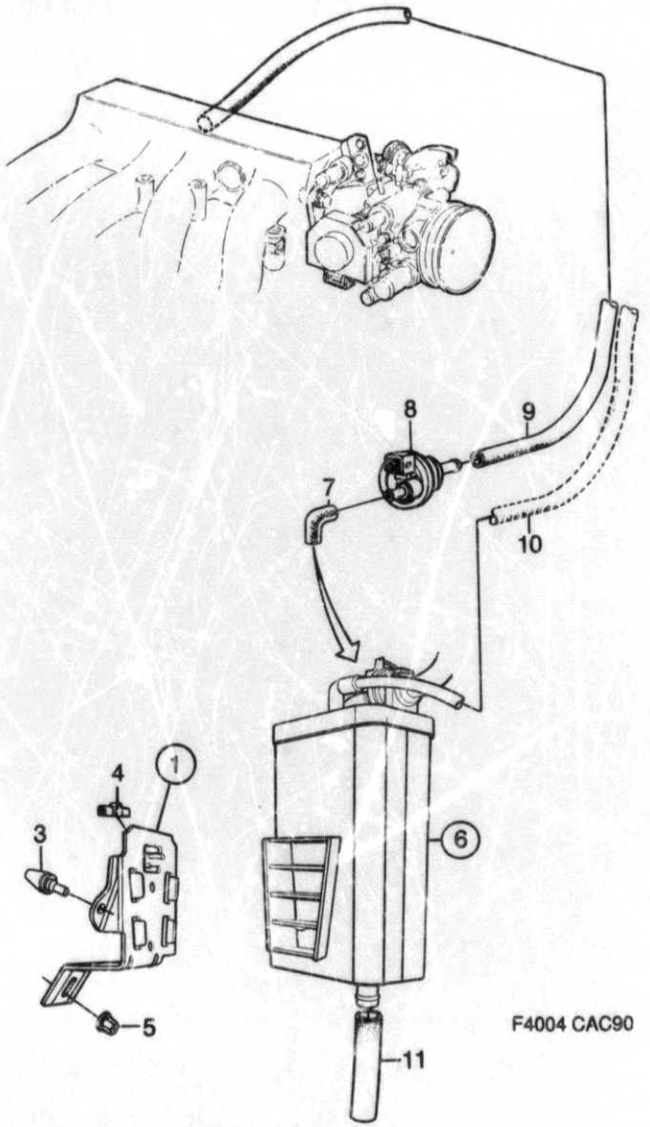

F4004 CAC90

0955	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 62 319			1	Bracket	Fäste	6
0020		*41 61 378*		1) NLS - USE 4162319	1	. Bracket	. Fäste	6
0030	3	41 62 046			2	. Rubber damper	. Gummidämpare	5
0040	4	41 62 152			1	. Wear protection	. Skavskydd	5
0050	5	40 87 128			1	Plastic nut	Plastmutter	5
0060	6	41 61 451			1	Carbon filter	Kolfilter	3
0070	7	75 39 240			1	Hose	Slang	5
0080	8	75 39 257			1	Tank ventilation valve	Tankventiluftningsventil	5
0090	9	75 91 837		B20J	1	Hose	Slang	5
0100	9	40 17 786		B234I	1	Hose	Slang	5
0110	9	40 24 48b		1992, B234TURBO	1	Hose	Slang	5
0120	9	40 24 485		1993, B234TURBO	1	Hose	Slang	5
0130	9	43 93 328		1993, B234TURBO TRIONIC	1	Hose	Slang	5
0140	10			See page 2-059, 1-E12		Hose	Slang	
0150	11	41 62 343			1	Draining hose	Dräneringsslang	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F14

inlet manifold
B202, not US

Inloppsrör
B202, ej US

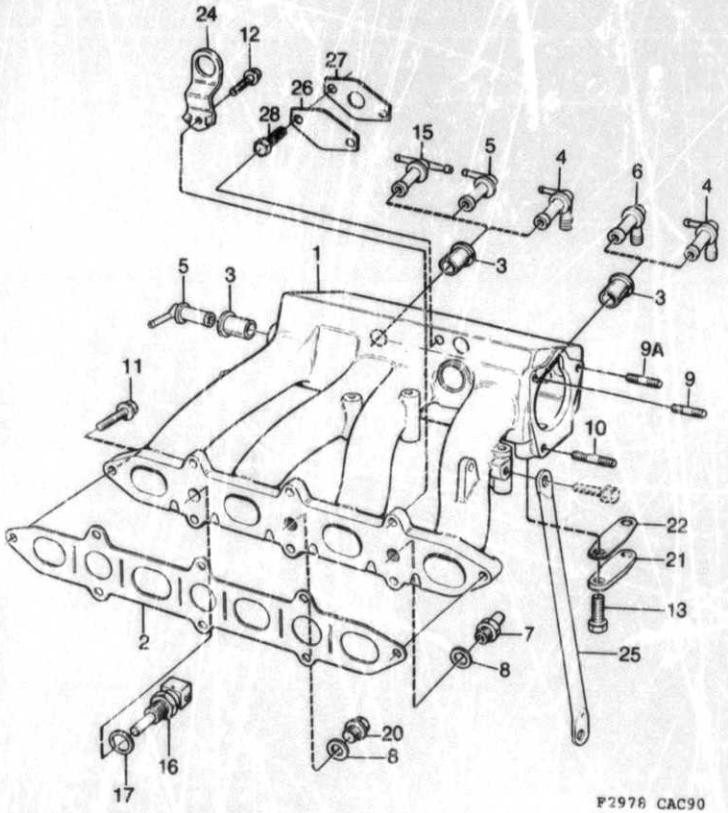

F2978 CAC90

1060	Pos	Part No/Art nr	K S	Noter/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 86 477			1	Intake manifold	Inloppsrör	6
0020	1	88 58 300		ETS	1	Intake manifold	Inloppsrör	6
0030	2	75 84 436			1	Gasket	Packning	2
0040	3	75 15 208			2	Bushing	Bussning	5
0050	4	93 12 802			1	Nipple	Nippel	4
0060	5	83 59 937		4)	2	Nipple	Nippel	4
0070	5	83 59 937			1	Nipple	Nippel	4
0080	6	83 57 543			1	Nipple	Nippel	4
0090	7	74 86 806			1	Nipple	Nippel	5
0100	8	*83 26 712*		NLS - USE 4161162	2	Seal	Tätning	5
0110	9	80 05 910			1	Stud	Pinnskruv	5
0120	9A	80 05 928		-1991	1	Stud	Pinnskruv	5
0125	9A	80 05 910		1992-	1	Stud	Pinnskruv	5
0130	10	80 05 936			1	Stud	Pinnskruv	5
0140	11	81 25 197			7	Screw	Skruv	5
0150	12	81 25 205			1	Screw	Skruv	5
0160	13	*80 19 903*		NLS - USE 9166281	2	Screw	Skruv	5
0170	15	75 22 477		ETS	1	Nipple	Nippel	4
0180	16			See page 2-069, 1-E22	1	Sensor	Givare	
0190	17			See page 2-069, 1-E22	1	Seal	Tätning	
0200	20	*81 23 721*		NLS - USE 7563042	1	Plug	Propp	5
0210	21	93 58 177			1	Flange	Fläns	6
0220	22	75 07 973			1	Gasket	Packning	4
0230	24	75 21 230			1	Lifting eye	Lyftögla	6
0240	25	87 88 572			1	Stay	Stag	6
0250	26	75 86 860			1	Flange	Fläns	4
0260	27	75 86 878			1	Gasket	Packning	4
0270	28	80 19 895			1	Screw	Skruv	5

4. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F16

Inlet manifold, parted
Inloppsrör, delat
B202

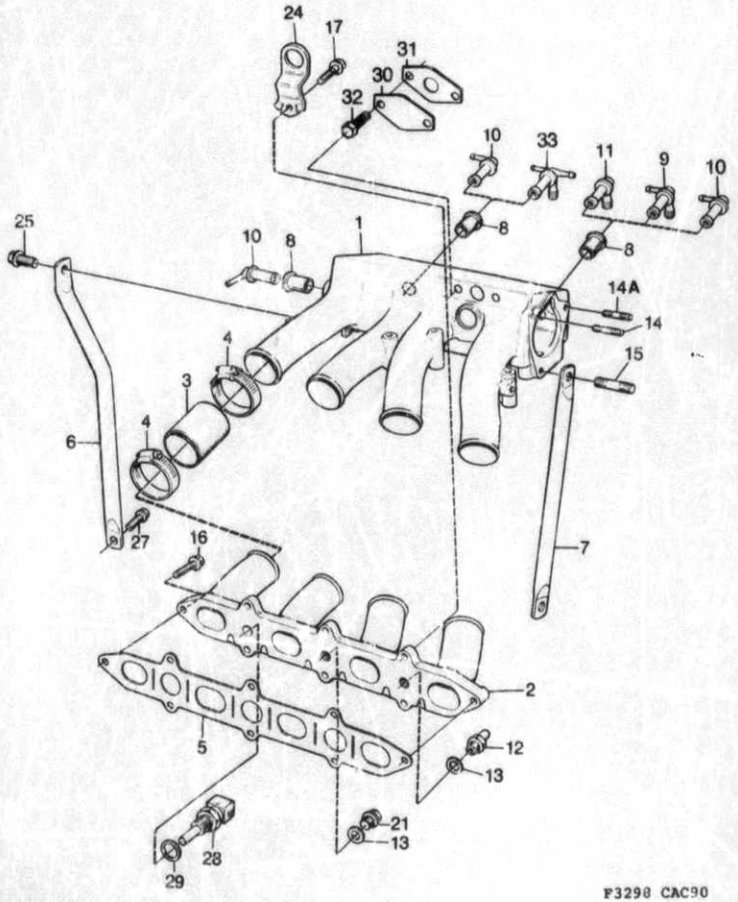

F3298 CAC90

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	§ L
0010	1	87 86 584			1	Intake manifold	Inloppsrör	6
0020	2	74 84 363			1	Intake manifold	Inloppsrör	6
0030	3	75 66 748			4	Hose	Slang	4
0040	4	79 70 122			8	Hose clamp	Slangklamma	5
0050	5	75 84 436			1	Gasket	Packning	2
0060	6	87 88 580			1	Stay	Stag	6
0070	7	87 88 572			1	Stay	Stag	6
0080	8	75 15 208			3	Bushing	Bussning	5
0090	9	93 12 802			1	Nipple	Nippel	4
0100	10	83 59 937			1	Nipple	Nippel	4
0110	11	83 57 543			1	Nipple	Nippel	4
0120	12	74 86 806			1	Nipple	Nippel	5
0130	13	*83 26 712*		NLS - USE 4161162	2	Seal	Tätning	5
0140	14	80 05 910			1	Stud	Pinnskruv	5
0150	14A	80 05 928		-1991	1	Stud	Pinnskruv	5
0155	14A	80 05 910		1992-	1	Stud	Pinnskruv	5
0160	15	80 05 936			1	Stud	Pinnskruv	5
0170	16	81 25 197			7	Screw	Skruv	5
0180	17	81 25 205			1	Screw	Skruv	5
0190	21	*81 23 721*		NLS - USE 7563042	1	Plug	Propp	5
0200	24	75 21 230			1	Lifting eye	Lyftögla	6
0210	25	81 25 163			1	Screw	Skruv	5
0220	27	81 25 155			1	Screw	Skruv	5
0230	28			See page 2-069, 1-E22	1	Sensor	Givare	
0240	29			See page 2-069, 1-E22	1	Seal	Tätning	
0250	30	75 86 860			1	Flange	Fläns	4
0260	31	75 86 878			1	Gasket	Packning	4
0270	32	80 19 895			2	Screw	Skruv	5
0280	33	75 22 477			1	Nipple	Nippel	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1--F18

Inlet manifold
B234 I, not US, 1990

Inloppsrör
B234 I, ej US, 1990

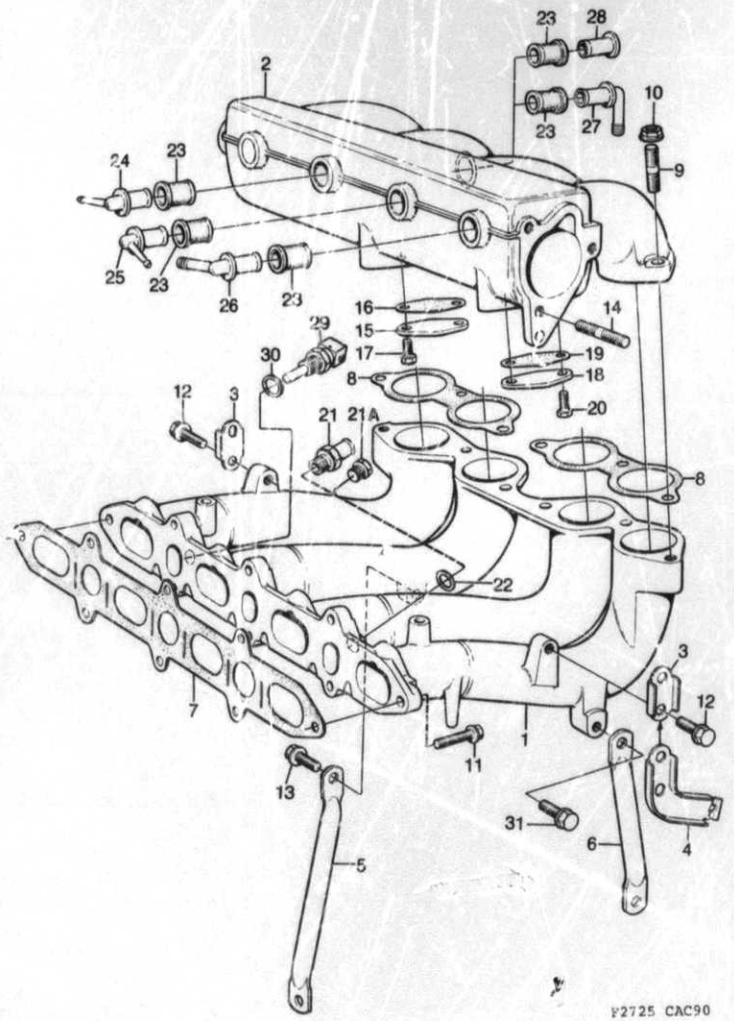

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 88 317			1	Intake manifold	Inloppsrör	6
0020	2	87 88 333			1	Intake manifold	Inloppsrör	6
0030	3	91 13 556		M	2	Stay	Stag	6
0040	3	91 13 556		A	1	Stay	Stag	6
0050	4	91 18 365		A	1	Stay	Stag	6
0060	5	91 13 531			1	Stay	Stag	6
0070	6	87 89 695			1	Stay	Stag	6
0080	7	*75 84 451*		NLS - USE 9126277	1	Gasket	Packning	2
0090	8	91 15 490			2	Gasket	Packning	2
0100	9	80 05 936			6	Stud	Pinnskruv	5
0110	10	81 51 326			6	Nut	Mutter	5
0120	11	81 25 197			8	Screw	Skruv	5
0130	12	81 25 155			4	Screw	Skruv	5
0140	13	81 25 163			2	Screw	Skruv	5
0150	14	80 05 910			3	Stud	Pinnskruv	5
0160	15	75 86 860			1	Flange	Fläns	4
0170	16	75 86 878			1	Gasket	Packning	4
0180	17	80 19 895			2	Screw	Skruv	5
0190	18	93 58 177			1	Flange	Fläns	6
0200	19	75 07 973			1	Gasket	Packning	4
0210	20	80 19 895			2	Screw	Skruv	5
0220	21	74 86 806		58)	1	Nipple	Nippel	5
0230	21A	*81 23 721*		59) NLS - USE 7563042	1	Plug	Propp	5
0240	22	89 81 961		58)	1	Seal	Tätning	5
0250	22	*83 26 712*		59) NLS - USE 4 61162	1	Seal	Tätning	5
0260	23	75 15 209			4	Bushing	Bussning	5
0270	24	83 59 937			1	Nipple	Nippel	4
0280	25	83 59 937			1	Nipple	Nippel	4
0290	26	83 57 543			1	Nipple	Nippel	4
0300	27	83 57 543			1	Nipple	Nippel	4
0310	28	91 14 000		ABS	1	Plug	Propp	4
0320	29			See page 2-069, 1-E22	1	Sensor	Givare	
0330	30			See page 2-069, 1-E22	1	Seal	Tätning	
0340	31	79 78 208			1	Screw	Skruv	5

58. Engine --L206394.
59. Engine L206395--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact unit/wiring	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F20

Inlet manifold
B234 I, not US, 1991

Inloppsrör
B234 I, ej US, 1991

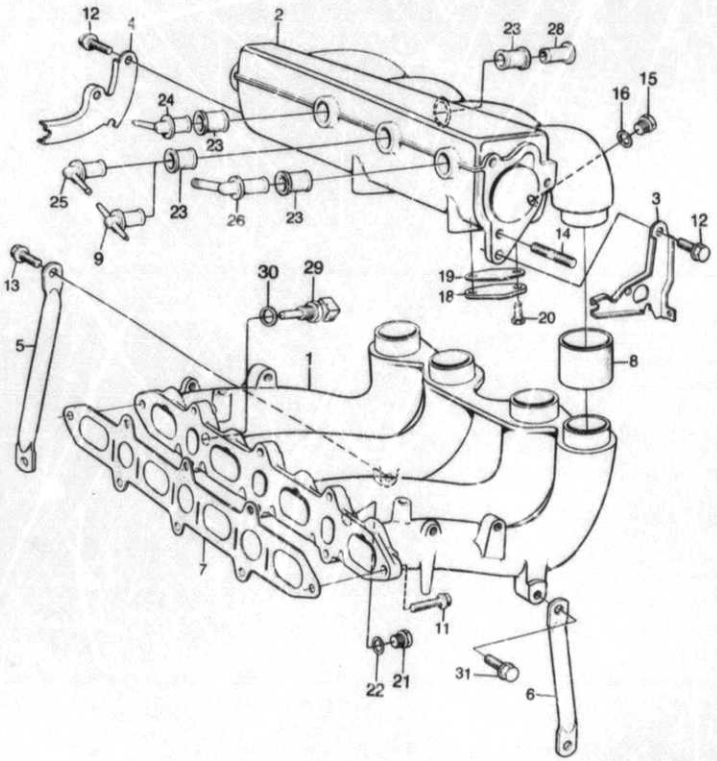

F2979 CAC90

1082	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 26 873			1	Intake manifold	Inloppsrör	6
0020	2	87 89 489			1	Intake manifold	Inloppsrör	6
0030	3	87 89 570			1	Anchorage	Fäste	6
0040	4	87 89 562			1	Anchorage	Fäste	6
0050	5	91 13 531			1	Stay	Stag	6
0060	6	87 89 695			1	Stay	Stag	6
0070	7	91 26 277			1	Gasket	Packning	2
0080	8	87 89 596			4	Hose	Slang	4
0090	9	91 16 088			1	Nipple	Nippel	4
0100	11	81 25 197			8	Screw	Skruv	5
0110	12	81 25 155			8	Screw	Skruv	5
0120	13	81 25 163			2	Screw	Skruv	5
0130	14	80 05 910			3	Stud	Pinnskruv	5
0140	15	87 89 323			1	Plug	Propp	4
0150	16	81 24 125			1	Gasket	Packning	4
0160	18	93 58 177			1	Flange	Fläns	6
0170	19	75 07 973			1	Gasket	Packning	4
0180	20	81 25 015			2	Screw	Skruv	5
0190	21	*81 23 721*		NLS - USE 7563042	1	Plug	Propp	5
0200	22	*83 26 712*		NLS - USE 4161162	1	Seal	Tätning	5
0210	23	75 15 208			4	Bushing	Bussning	5
0220	24	83 59 937			1	Nipple	Nippel	4
0230	25	83 59 937			1	Nipple	Nippel	4
0240	26	83 57 543			1	Nipple	Nippel	4
0250	28	91 14 000			1	Plug	Propp	4
0260	29			See page 2-069, 1-E22	1	Sensor	Givare	
0270	30			See page 2-069, 1-E22	1	Seal	Tätning	
0280	31	79 78 208			1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F22

Inlet manifold
B234 I, US, -1991

Inloppsrör
B234 I, US, -1991

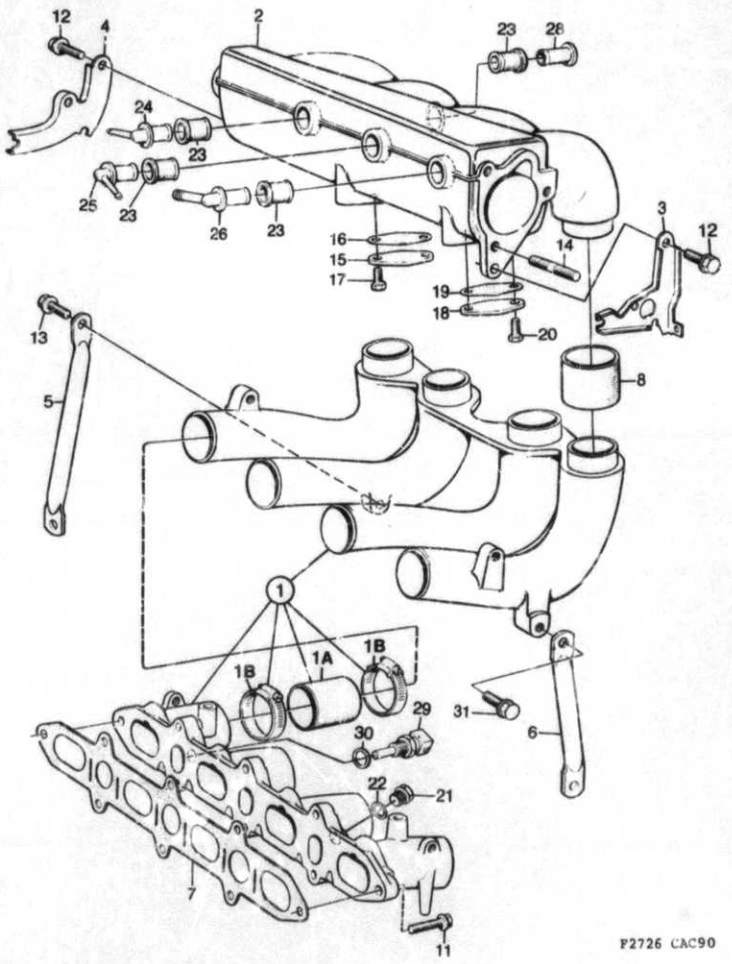

F2726 CAC90

1085	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*87 89 513*		NLS - USE 9133885	1	Intake manifold	Inloppsrör	6
0020	1A	87 89 588			4	*Hose	*Slang	4
0030	1B	79 70 130			8	*Hose clamp	*Slangklämma	5
0040	2	87 89 489			1	Intake manifold	Inloppsrör	6
0050	3	87 89 570			1	Anchorage	Fäste	6
0060	4	87 89 562			1	Anchorage	Fäste	6
0070	5	91 13 531			1	Stay	Stag	6
0080	6	87 89 695			1	Stay	Stag	6
0090	7	*75 84 451*		NLS - USE 9126277	1	Gasket	Packning	2
0100	8	87 89 596			4	Hose	Slang	4
0110	11	81 25 197			8	Screw	Skruv	5
0120	12	81 25 155			8	Screw	Skruv	5
0130	13	81 25 163			2	Screw	Skruv	5
0140	14	80 05 910			3	Stud	Pinnskruv	5
0150	15	75 86 860			1	Flange	Fläns	4
0160	16	75 86 878			1	Gasket	Packning	4
0170	17	80 19 895		-1990	2	Screw	Skruv	5
0180	17	81 25 015		1991	2	Screw	Skruv	5
0190	18	93 58 177			1	Flange	Fläns	6
0200	19	75 07 973			1	Gasket	Packning	4
0210	20	80 19 895		-1990	2	Screw	Skruv	5
0220	20	81 25 015		1991	2	Screw	Skruv	5
0230	21	87 89 323			1	Plug	Propp	4
0240	22	81 24 125			1	Gasket	Packning	4
0250	23	75 15 208			4	Bushing	Bussning	5
0260	24	83 59 937			1	Nipple	Nippel	4
0270	25	83 59 937			1	Nipple	Nippel	4
0280	26	83 57 543			1	Nipple	Nippel	4
0290	28	91 14 000			1	Plug	Propp	4
0300	29			See page 2-069, 1-E22	1	Sensor	Givare	
0310	30			See page 2-069, 1-E22	1	Seal	Tätning	
0320	31	79 78 208			1	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-F24

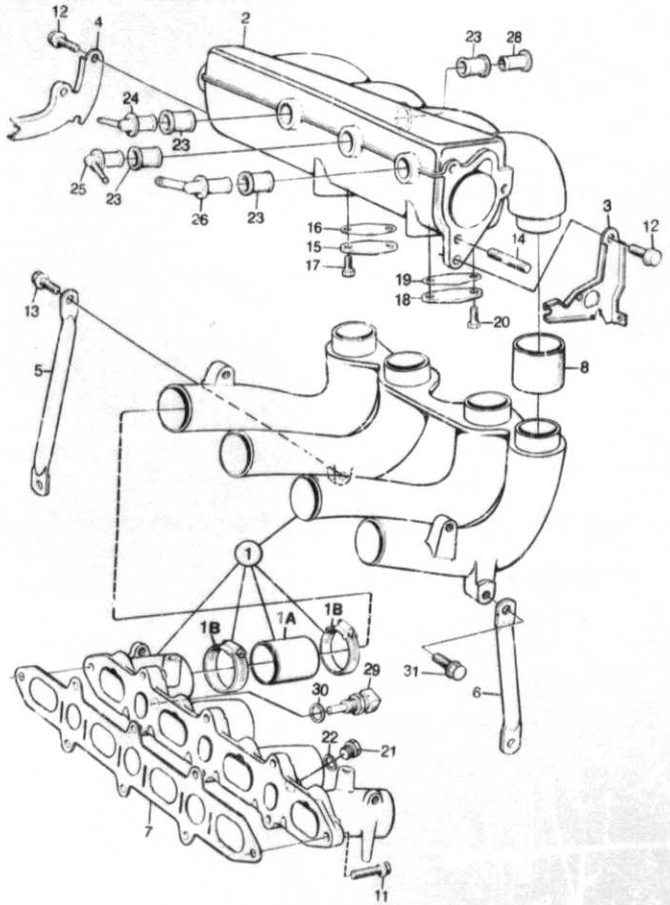

1987	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0015	1	91 33 885			1	Intake manifold	Inloppsrör	6
0025	1A	91 34 727			4	. Hose	. Slang	4
0030	1B	79 70 130			8	. Hose clamp	. Slangklämma	5
0045	2	87 89 489			1	Intake manifold	Inloppsrör	6
0050	3	87 89 570			1	Anchorage	Fäste	6
0060	4	87 89 562			1	Anchorage	Fäste	6
0070	5	91 13 531			1	Stay	Stag	6
0080	6	87 89 605			1	Stay	Stag	6
0090	7	91 26 277			1	Gasket	Packning	2
0105	8	91 34 735			4	Hose	Slang	4
0110	11	81 25 197			8	Screw	Skruv	5
0120	12	81 25 148			8	Screw	Skruv	5
0130	13	81 25 163			2	Screw	Skruv	5
0140	14	80 05 910			3	Stud	Pinnskruv	5
0150	15	75 86 860			1	Flange	Fläns	4
0160	16	75 86 878			1	Gasket	Packning	4
0180	17	81 25 015			2	Screw	Skruv	5
0190	18	93 58 177			1	Flange	Fläns	6
0200	19	75 07 973			1	Gasket	Packning	4
0220	20	81 25 015			2	Screw	Skruv	5
0230	21	87 89 323			1	Plug	Propp	4
0240	22	81 24 125			1	Gasket	Packning	4
0250	23	75 15 208			4	Bushing	Bussning	5
0260	24	83 59 937			1	Nipple	Nippel	4
0270	25	83 59 937			1	Nipple	Nippel	4
0280	26	83 57 543			1	Nipple	Nippel	4
0290	28	91 14 000			1	Plug	Propp	4
0300	29			See page 2-069, 1-E22	1	Sensor	Givare	
0310	30			See page 2-069, 1-E22	1	Seal	Tätning	
0320	31	79 78 208			1	Screw	Skruv	5


F3740 - CAC90

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-M02
5	Brake	4-AL2
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H16
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

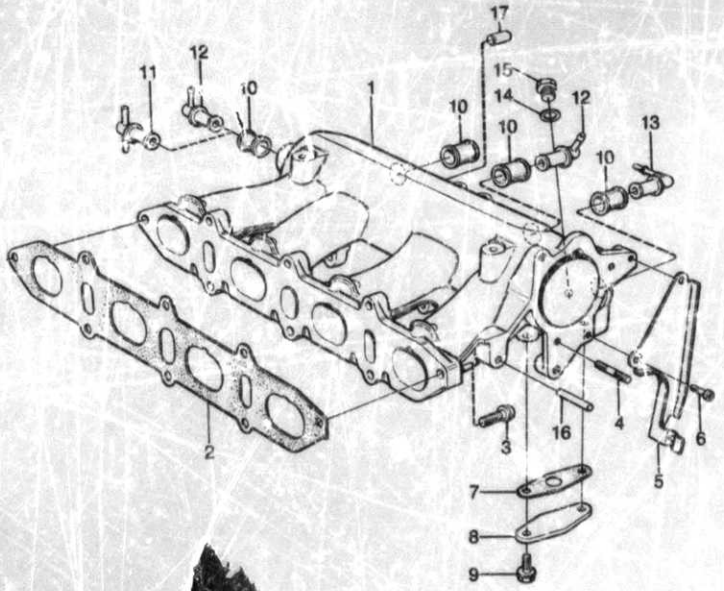

F4444 CAC90

1090	Pos	Part No.	Y S	Anm./Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 09 869		-1991	1	Intake manifold	Inloppsrör	6
0020	1	91 34 438		1992	1	Intake manifold	Inloppsrör	6
0030	1	91 46 689		1993	1	Intake manifold	Inloppsrör	6
0040	2	91 26 277			1	Gasket	Packning	2
0050	3	81 25 197			8	Screw	Skruv	5
0060	4	80 05 928			3	Stud	Pinnskruv	5
0070	4	80 05 910		UC	3	Stud	Pinnskruv	5
0080	5	91 15 445			1	Bracket	Fäste	6
0090	6	79 71 294			2	Screw	Skruv	5
0100	7	75 07 973			1	Gasket	Packning	4
0110	8	93 58 177			1	Flange	Fläns	6
0120	9	81 25 007			2	Screw	Skruv	5
0130	10	75 15 208		-1992	4	Bushing	Bussning	5
0140	10	81 32 045		1993	2	Plug	Propp	5
0150	10	81 32 045		1993, M, ETS	3	Plug	Propp	5
0180	11	91 16 038		-1992	1	Nipple	Nippel	4
0190	12	83 59 937		-1992	2	Nipple	Nippel	4
0200	12	43 46 508		1993	1	Nipple	Nippel	5
0210	13	91 07 699		-1992	1	Nipple	Nippel	4
0220	14	81 24 125			1	Gasket	Packning	4
0230	15	87 89 323			1	Plug	Propp	4
0240	16	80 48 827			1	Spring pin	Rörpinne	4
0250	17	83 60 463		137) NLS - USE 8335614	1	Plug	Plugg	6

137. For cars without ETS. För bilar utan ETS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-G04

Throttle valve housing — Spjällhus

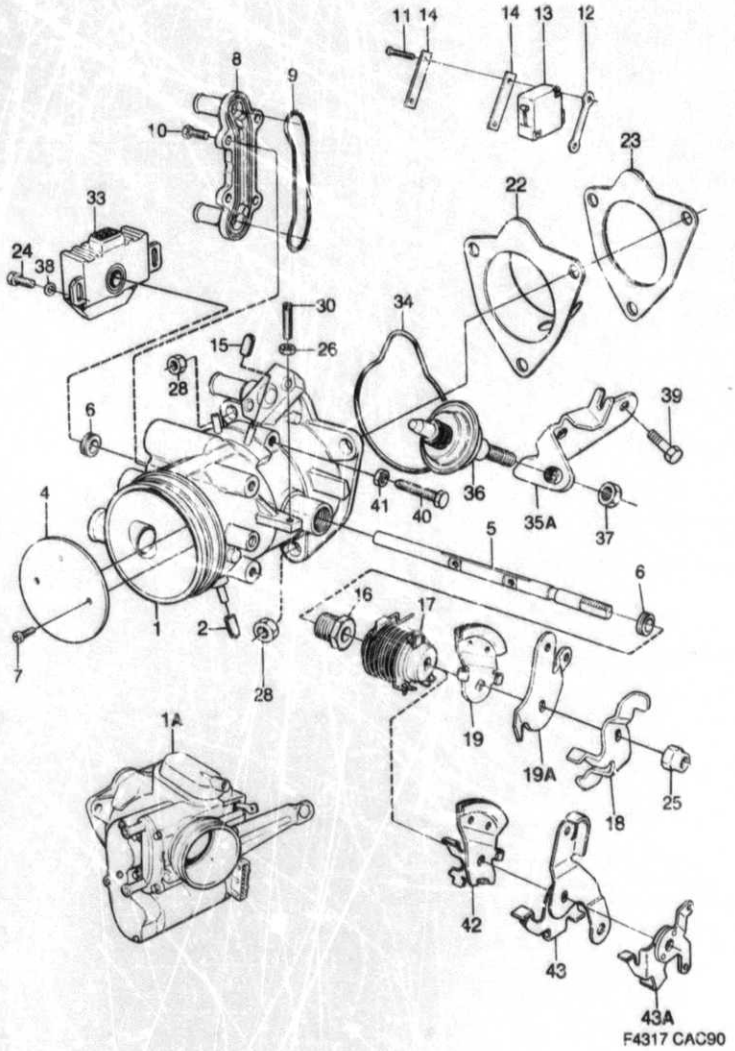

F4317 CAC90

1110	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0010	1	91 19 215		4), 1990, B202 TURBO, EU, UF	1	Throttle body	Spjällhus	6
0020								
0030	1	*91 19 249*		4), 1990, B202 TURBO, UC NLS - USE 9116724	1	Throttle body	Spjällhus	6
0040	1	91 16 724		4), 1991-, B202 TURBO	1	Throttle body	Spjällhus	6
0050	1	78 71 437		4), B234 TURBO	1	Throttle body	Spjällhus	6
0060								
0070	1	91 19 231		5), 1990, B202 TURBO, EU, GB	1	Throttle body	Spjällhus	6
0080								
0090	1	91 19 223		5), 1990, B202 TURBO, ME	1	Throttle body	Spjällhus	6
0100	1	78 71 395		5), 1991-, B202 TURBO	1	Throttle body	Spjällhus	6
0110								
0120	1	91 19 207		4), 1990, B202 I, EU, UF	1	Throttle body	Spjällhus	6
0130	1	91 16 716		4), 1990, B202 I, UC	1	Throttle body	Spjällhus	6
0140	1	91 16 963		4), 1991-, B202 I	1	Throttle body	Spjällhus	6
0150	1	91 17 656		4), 1990, B234 I	1	Throttle body	Spjällhus	6
0160	1	91 07 616		4), 1991-, B234 I	1	Throttle body	Spjällhus	6
0170								
0180	1	91 19 181		5), 1990, B202 I	1	Throttle body	Spjällhus	6
0190	1	91 19 199		5), 1990, B202 I, ME	1	Throttle body	Spjällhus	6
0200	1	78 71 387		5), 1991-, B202 I	1	Throttle body	Spjällhus	6
0210	1	91 07 608		5), 1991-, B234 I	1	Throttle body	Spjällhus	6
0220								
0230	1A	89 82 001		4), B202, ETS	1	Throttle body	Spjällhus	6
0240	1A	91 09 075		B234 TURBO, ETS	1	Throttle body	Spjällhus	6
0250								
0260	2	*83 60 463*		1990, UC NLS - USE 8335614	1	Plug	Plugg	6
0270	4	83 53 484			1	Shutter	Spjäll	6
0280	5	*75 04 673*		64) NLS - USE 8057259, 9107624	1	Shutter shaft	Spjällaxel	6
0280								
0290	5	91 07 624		65)-1990	1	Shutter shaft	Spjällaxel	6
0300	5	91 28 224		1991-	1	Shutter shaft	Spjällaxel	6
0310	6	83 57 345			2	Seal	Tätning	5
0320	7	80 59 073		64)	2	Screw	Skruv	5
0330	7	80 57 253		65)	2	Screw	Skruv	5
0340	8	75 05 423		1990	1	Cover	Lock	5
0350	9	75 06 264		1990	1	O-ring	O-ring	2
0360	10	75 07 080		1990	4	Screw	Skruv	5
0370	11	80 96 364		TURBO	2	Screw	Skruv	5
0380	12	75 64 834		TURBO	1	Bracket	Hållare	5
0390	13	75 88 270		TURBO	1	Switch	Strömställare	3
0400	14	75 64 065		TURBO	2	Washer	Bricka	5
0410	15	83 35 614			1	Plug	Propp	4
0420	16	93 59 050			1	Plug	Plugg	5
0430	17	75 16 974			1	Return spring	Returfjäder	5
0440	18	75 66 276			1	Lever	Hävarm	6
0450	19	75 66 300		M	1	Cam disc	Kamskiva	6
0460	19A	74 93 183		A	1	Lever	Hävarm	6
0470	22	78 56 446		B234 TURBO	1	Air shield	Luftskärm	4
0480	23	78 56 479		B234 TURBO	1	Gasket	Packning	4
0490	24	75 07 080		1990	2	Screw	Skruv	5
0500	24	*74 82 490*		1991 NLS - USE 9127440	2	Screw	Skruv	5
0510	24	79 85 187		1992-	2	Screw	Skruv	5
0520	25	80 74 288		-1992	1	Nut	Mutter	5
0530	25	91 86 406		1993	1	Nut	Mutter	5
0540	26	81 51 045			1	Nut	Mutter	5
0550	28	81 51 326			3	Nut	Mutter	5
0560	30	*80 07 486*		NLS - USE 4067706	1	Set screw	Stoppskruv	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
64. Engine B202 --L048146. Engine B234 --L207595.
65. Engine B202 L048147--. Engine B234 L207596--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I16
Supercharging system	1-I20
Kits	1-J04

1-G06

Throttle valve housing
Spjälhus

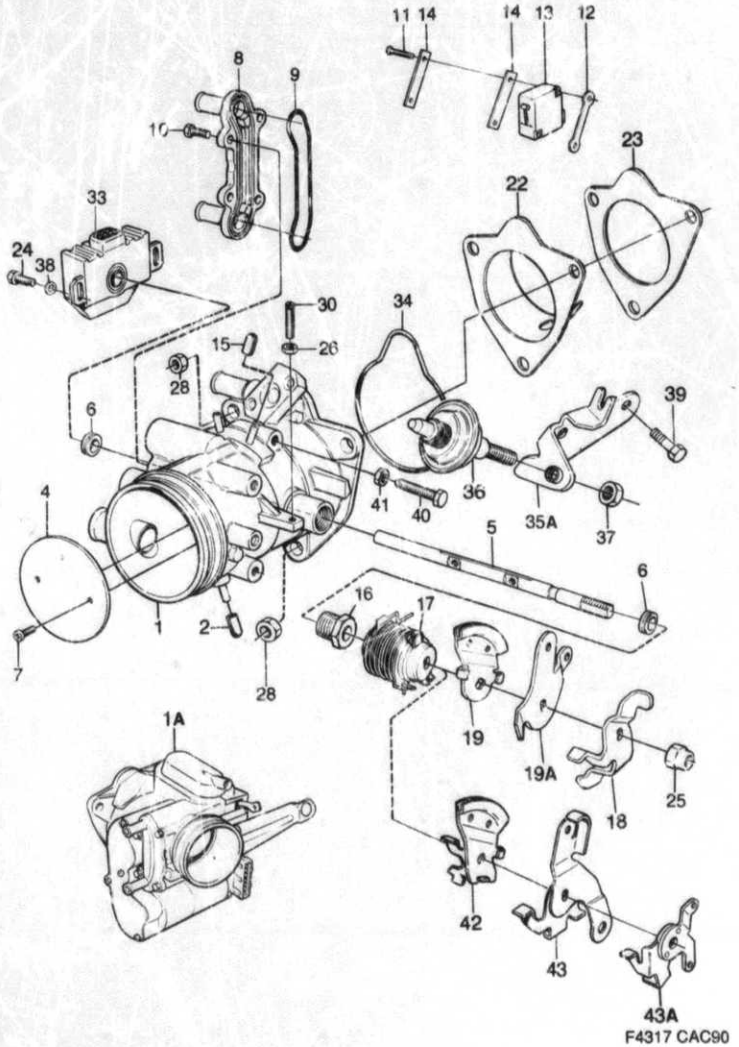

F4317 CAC90

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	33	75 01 612		1990	1	Potentiometer	Potentiometer	6
0580	33	75 01 612		4), 1991-, B202 I	1	Potentiometer	Potentiometer	6
0590	33	88 57 195		1991-	1	Potentiometer	Potentiometer	6
0600	34	75 21 875			1	O-ring	O-ring	4
0610	35A	75 66 284			1	Bracket	Konsol	6
0620	36	93 14 501			1	Absorber	Dämpare	3
0630	37	80 69 015			1	Nut	Mutter	5
0640	38	*80 29 936*		1990 NLS - USE 9166356	2	Washer	Bricka	5
0650	39	81 25 007			2	Screw	Skruv	5
0660	40	83 57 378		1990	2	Screw	Skruv	5
0670	41	*80 50 601*		1990 NLS - USE 8151052	1	Nut	Mutter	5
0680	42	78 55 992		1990, B234, M	1	Lever	Hävarm	6
0690	42	91 27 168		1991-, B234, M	1	Cam disc	Kamskiva	6
0700	43	78 56 006		1990, B234, A	1	Lever	Hävarm	6
0710	43A	91 27 176		1991-, B234, A	1	Lever	Hävarm	6


4. With catalytic converter. Med katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D10
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

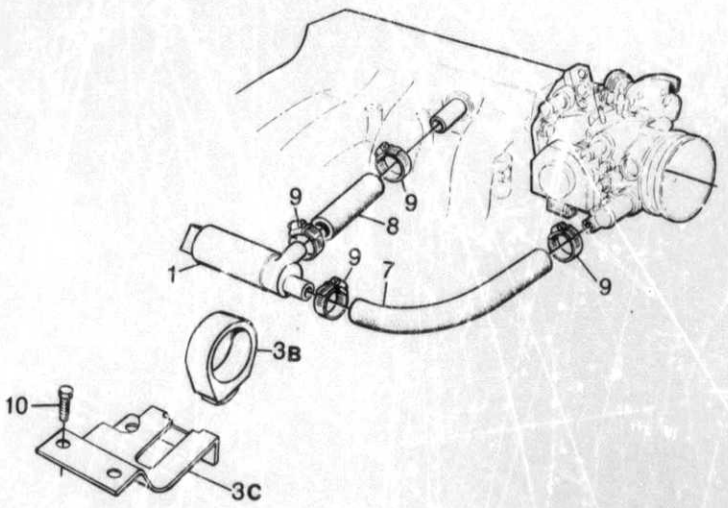

F0984 CAC90

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 16 792		5), 1990, TURBO	1	Control valve	Reglerventil	4
0020	1	88 57 179		5), 1991-, TURBO	1	Control valve	Reglerventil	4
0030	1	75 86 019		4), TURBO	1	Control valve	Reglerventil	4
0040	1	75 16 792		5), 1990, I	1	Control valve	Reglerventil	4
0050	1	88 57 179		5), 1991-, I	1	Control valve	Reglerventil	4
0060	1	75 86 019		4), I	1	Control valve	Reglerventil	4
0070	3B	74 81 682		5)	1	Retainer	Hållare	5
0080	3B	74 81 690		4), I	1	Retainer	Hållare	5
0090	3B	74 81 690		4), TURBO	1	Retainer	Hållare	5
0100	3C	74 81 708			1	Bracket	Fäste	5
0110	7	75 88 445		5)	1	Hose	Slang	4
0120	7	75 88 403		4)	1	Hose	Slang	4
0130	8	74 86 624		4)	1	Hose	Slang	4
0140	9	91 12 491		5)	1	Hose	Slang	4
0150	9	*79 63 549*		NLS - USE 7970080	4	Hose clamp	Slangklamma	5
0160	10	81 25 007			3	Screw	Skruv	5


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

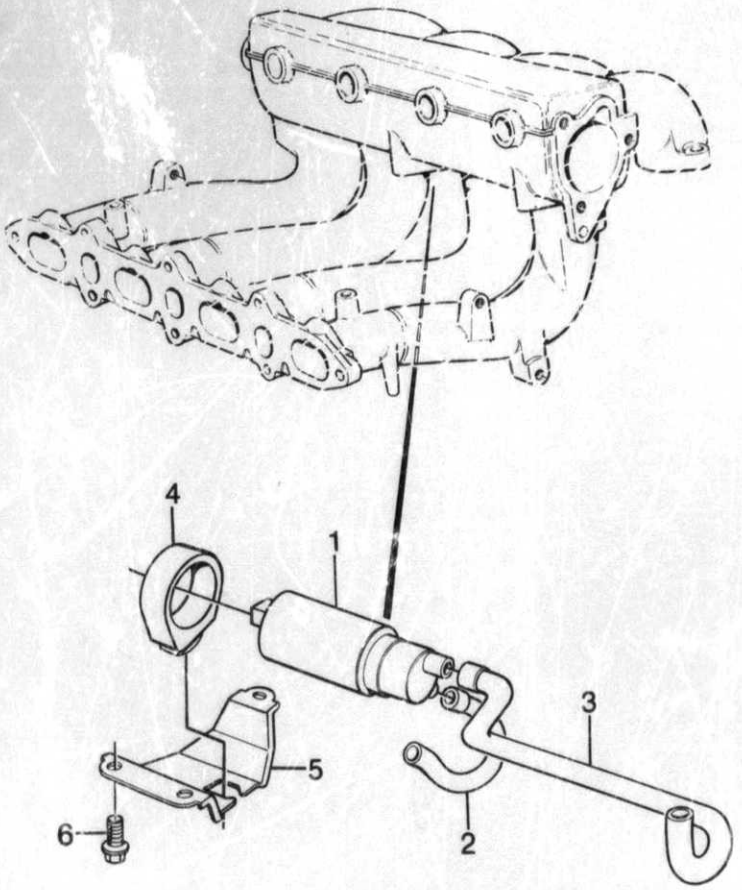

F0985 CAC90


1160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 86 019		1990	1	Control valve	Reglerventil	4
0020	1	88 57 179		1991-	1	Control valve	Reglerventil	4
0030	2	91 17 409		1990	1	Hose	Slang	4
0040	2	87 89 612		1990, US	1	Hose	Slang	4
0050	2	78 57 972		1991-	1	Hose	Slang	4
0060	3	91 17 714		1990	1	Hose	Slang	4
0070	3	78 57 964		1991-	1	Hose	Slang	4
0080	4	91 15 478		1990	1	Retainer	Hållare	5
0090	4	78 56 933		1990, US	1	Retainer	Hållare	5
0100	4	87 87 988		1991-	1	Retainer	Hållare	5
0110	5	91 13 572		1990	1	Bracket	Fäste	5
0120	6	81 25 148		1990	3	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I16
Supercharging system	1-I20
Kits	1-J04

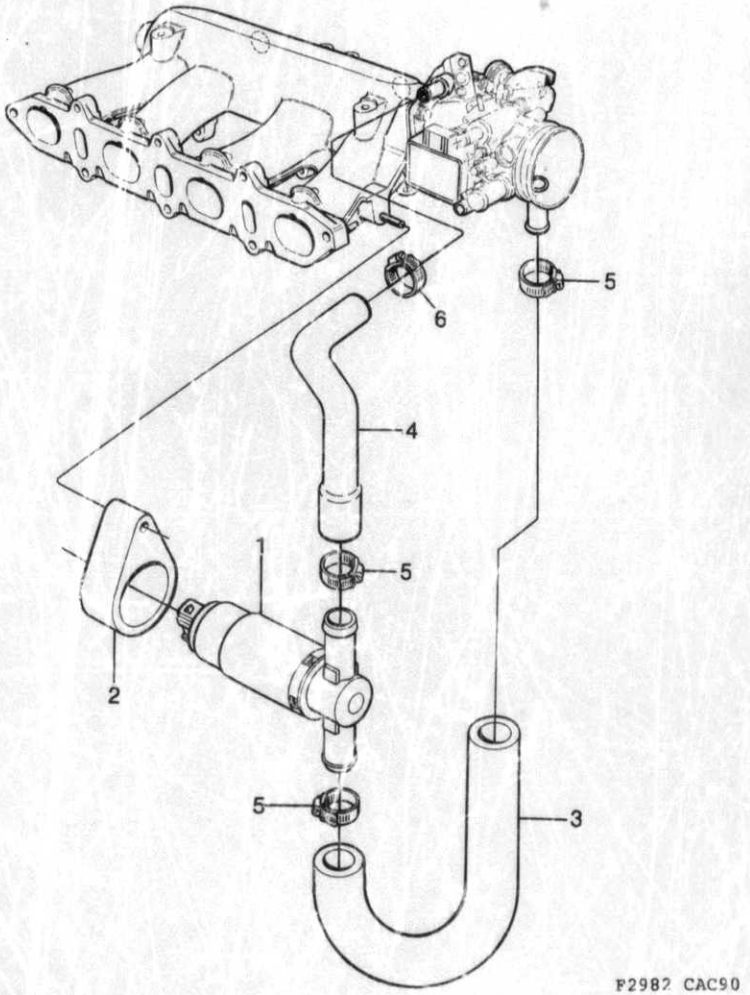

1165	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 87 996		-1992	1	Valve	Ventil	4
0020	1	87 87 996		1993	1	Valve	Ventil	4
0030	1	91 27 200		137), 1993	1	Valve	Ventil	4
0040	2	87 87 988		-1992	1	Retainer	Hållare	5
0050	2	87 87 988		1993	1	Retainer	Hållare	5
0060	2	78 56 933		137), 1993	1	Retainer	Hållare	5
0070	3	87 87 905		-1992	1	Hose	Slang	4
0080	3	87 87 905		1993	1	Hose	Slang	4
0090	3	91 28 703		137), 1993	1	Hose	Slang	4
0100	4	87 87 913		-1992	1	Hose	Slang	4
0110	4	87 87 913		1993	1	Hose	Slang	4
0120	4	91 28 695		137), 1993	1	Hose	Slang	4
0130	5	*79 63 549*		NLS - USE 7970030	3	Hose clamp	Slangklamma	5
0140	6	79 63 523			1	Hose clamp	Slangklamma	5

137. For cars without ETS. För bilar utan ETS.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-G14

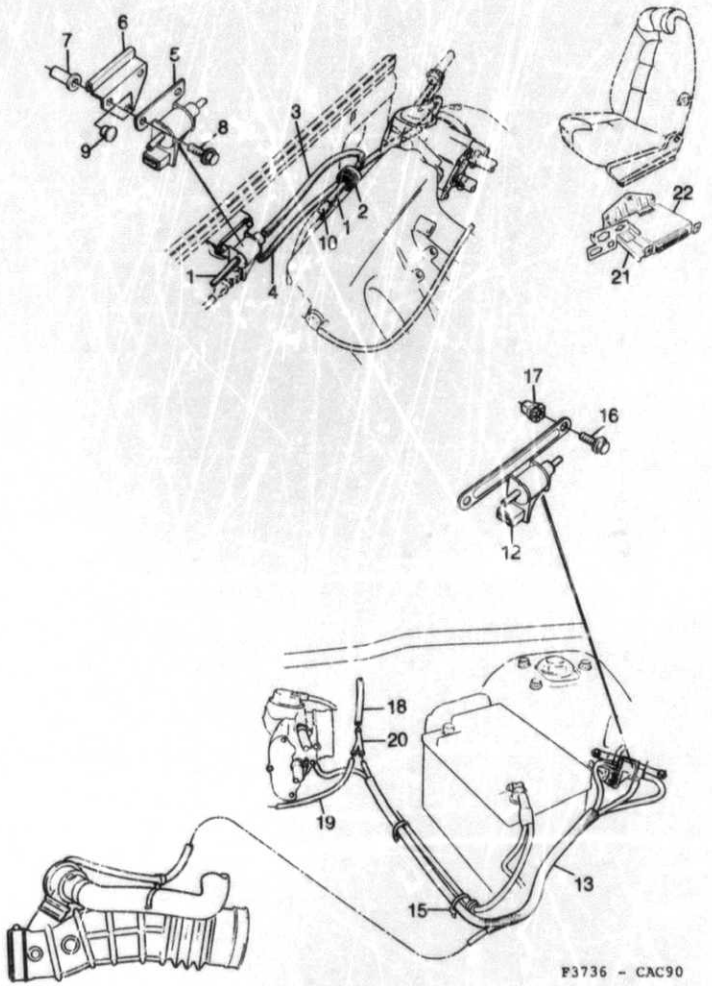

1190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 36 243		L=40 MM	2	Vaccum hose	Vakuumslang	5
0020	2	43 01 669			1	Non-return valve	Backventil	5
0030	3	91 36 243		L=240 MM	1	Vaccum hose	Vakuumslang	5
0040	4	91 36 243		L=700 MM	1	Vaccum hose	Vakuumslang	5
0050	5	40 15 202			1	Bleeder valve	Urluftningsventil	5
0060	6	75 90 680		-1991	1	Bracket	Fäste	6
0070	6	41 61 881		1992-	1	Bracket	Konsol	5
0080	7	79 73 456			2	Expanding nut	Expandermutter	5
0090	8	80 59 396			2	Screw	Skruv	5
0100	9	71 62 308			1	Plug	Plugg	5
0110	10			See page 2-085, 1-F14	1	Nipple	Nippel	
0120	12	40 19 253			1	Control valve	Manöverventil	5
0130	13	91 36 243		L=1460 MM	1	Vaccum hose	Vakuumslang	5
0140	13	91 36 243		L=2675 MM, B234 TURBO TRIONIC	1	Vaccum hose	Vakuumslang	5
0150								
0160	15	79 71 864			2	Tensioning band	Spännband	5
0170	16	79 73 191			2	Screw	Skruv	5
0180	17	79 75 279			2	Nut	Mutter	5
0190	18			See page 2-169, 1-J02	1	Hose	Slang	
0200	19			See page 2-169, 1-J02	1	Hose	Slang	
0210	20			See page 2-169, 1-J02	1	Tube	Rör	
0220	21			See page 3A-189, 2-H22	1	Bracket	Fäste	
0230	22			See page 3A-119, 2-E24	1	Electronic unit	Elektronikenhet	
0240								
0250		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6 K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-G16

Exhaust manifold
Turbo

Avgassamlare
Turbo

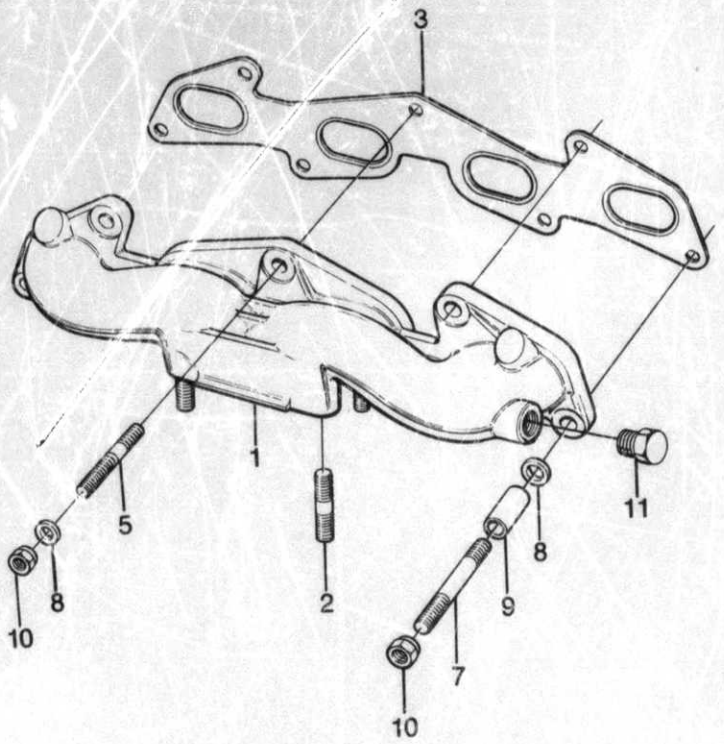

F3299 CAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 19 645		4), -1990, T25	1	Exhaust manifold	Avgassamlare	3
0020	1	91 19 645		5), -1990, T25, GB	1	Exhaust manifold	Avgassamlare	3
0030	1	75 21 073		5), -1990, TE05	1	Exhaust manifold	Avgassamlare	3
0040	1	91 19 645		1991-	1	Exhaust manifold	Avgassamlare	3
0050	2	93 59 084		-1990, TE05	4	Stud	Pinnskruv	5
0060	3	75 18 996			1	Gasket	Packning	2
0070	5	*75 19 010*		-1992 NLS - USE 7985146	3	Stud screw	Pinnbult	5
0080	5	79 85 146		1993	3	Stud screw	Pinnbult	5
0090	7	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0100	7	79 85 161		1993	4	Stud screw	Pinnbult	5
0110	8	80 73 249			7	Washer	Bricka	5
0120	9	93 06 812			4	Spacer sleeve	Distanshylsa	3
0130	10	88 59 878			7	Nut	Mutter	3
0140	11	81 23 739		4)	1	Plug	Propp	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-G18

Exhaust manifold
B202I

Avgassamlare
B202I

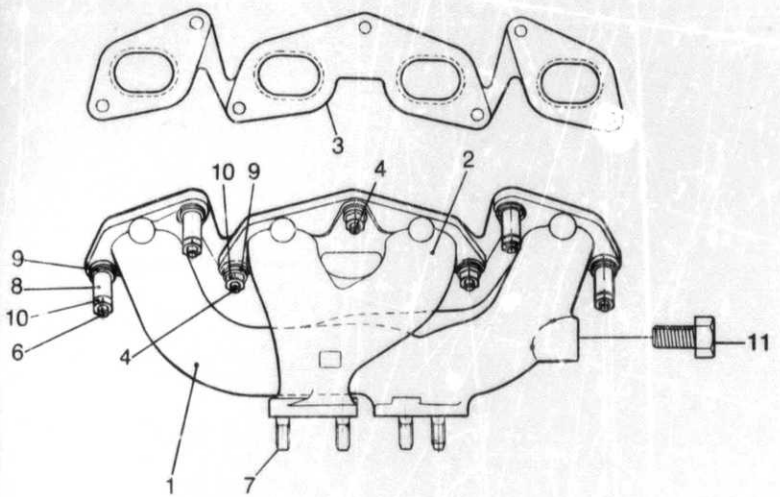

F2176 CAC90

1250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	75 62 515		1990	1	Exhaust manifold	Avgassamlare	3
0020	1	91 18 027		1991-	1	Exhaust manifold	Avgassamlare	3
0030	2	75 83 784		1990	1	Exhaust manifold	Avgassamlare	3
0040	2	91 18 019		1991-	1	Exhaust manifold	Avgassamlare	3
0050	3	75 18 996			1	Gasket	Packning	2
0060	4	*75 19 010*		-1992 NLS - USE 7985146	3	Stud screw	Pinnbult	5
0070	4	79 85 146		1993	3	Stud screw	Pinnbult	5
0080	6	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0090	6	79 85 161		1993	4	Stud screw	Pinnbult	5
0100	7	83 60 943			4	Stud screw	Pinnbult	5
0110	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0120	9	80 73 249			7	Washer	Bricka	5
0130	10	88 59 878			7	Nut	Mutter	3
0140	11	81 23 739			1	Plug	Propp	5

MASTER INDEX


0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

2 GROUP INDEX

Engine body 1-C10
Lubrication system 1-D16
Fuel system 1-E02
Inlet and exhaust system 1-F14
Cooling system 1-H14
Engine control 1-I18
Supercharging system 1-I20
Kits 1-J04

1-G20 Exhaust manifold / Avgassamlare

B234I

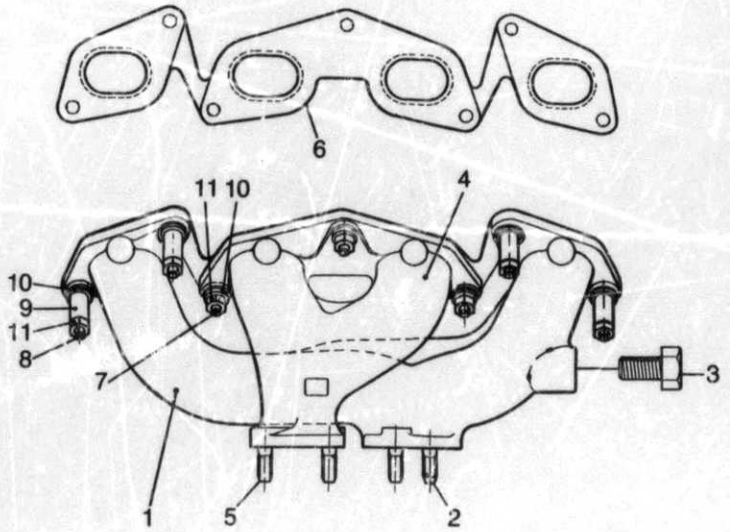

F2983 CAC90

1260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 19 678		1990	1	Exhaust manifold	Avgassamlare	3
0020	1	91 18 027		1991-	1	Exhaust manifold	Avgassamlare	3
0030	2	83 60 943			2	▪ Stud screw	▪ Pinnbult	5
0040	3	91 23 739		72)	1	Plug	Propp	5
0050	4	91 18 019			1	Exhaust manifold	Avgassamlare	3
0060	5	83 60 943			2	▪ Stud screw	▪ Pinnbult	5
0070	6	75 18 996			1	Gasket	Packning	2
0080	7	*75 19 010*		-1992 NLS - USE 7985146	3	Stud screw	Pinnbult	5
0090	7	79 85 146		1993	3	Stud screw	Pinnbult	5
0100	8	*93 50 588*		-1992 NLS - USE 7985161	4	Stud screw	Pinnbult	5
0110	8	79 85 161		1993	4	Stud screw	Pinnbult	5
0120	9	93 06 812			4	Spacer sleeve	Distanshylsa	3
0130	10	80 73 249			7	Washer	Bricka	5
0140	11	88 59 878			7	Nut	Mutter	3

72. For cars without EGR. För bilar utan EGR.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

1-G22

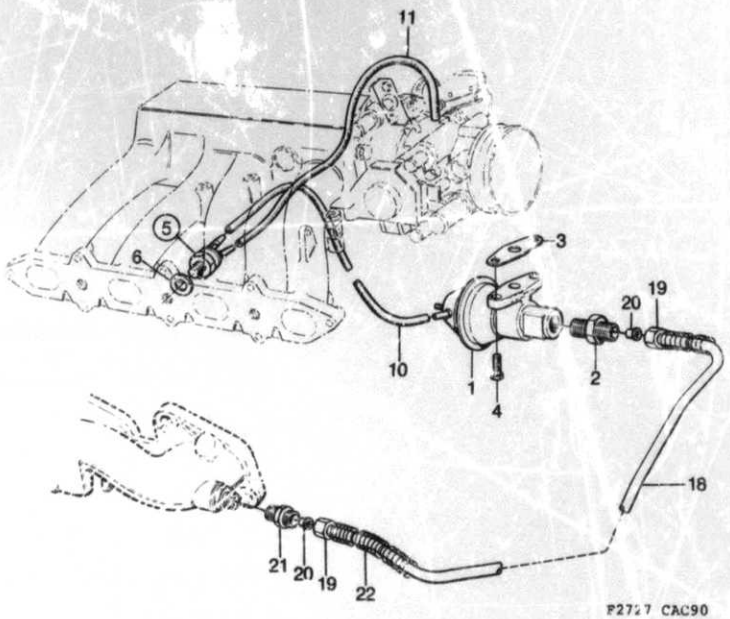

1300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 50 216*		56,5), B202 I NLS - USE 8859969	1	EGR-valve	EGR-ventil	3
0020	1	88 59 969		57,5), B202 I	1	EGR-valve	EGR-ventil	3
0030	1	93 50 224		56,5), B202 TURBO	1	EGR-valve	EGR-ventil	3
0040	1	88 59 977		57,5), B202 TURBO	1	EGR-valve	EGR-ventil	3
0050	1	78 73 284		B234 I	1	EGR-valve	EGR-ventil	3
0060	2	75 06 652		B202 TURBO	1	Nipple	Nippel	6
0070	2	75 06 652		B202 I, M	1	Nipple	Nippel	6
0080	2	75 83 933		B202 I, A	1	Nipple	Nippel	4
0090	2	75 06 652		B234 I	1	Nipple	Nippel	6
0100	3	75 07 973			1	Gasket	Packning	4
0110	4	*80 19 929*		-1992 NLS - USE 9166299	2	Screw	Skruv	5
0120	4	91 66 299		1993	2	Screw	Skruv	5
0130	5	75 04 897			1	Valve	Ventil	3
0140	6	81 24 141		B202	1	Seal	Tätning	5
0150	6	*83 26 712*		B234 NLS - USE 4161162	1	Seal	Tätning	5
0160	10	91 36 243		56), B202, L=215 MM	1	Vaccum hose	Vakuumslang	5
0170	10	91 36 243		57), B202, L=330 MM	1	Vaccum hose	Vakuumslang	5
0180	10	91 36 243		1990, B234 I, L=215 MM	1	Vaccum hose	Vakuumslang	5
0190	10	91 36 243		1991-, B234 I, L=260 MM	1	Vaccum hose	Vakuumslang	5
0200	11	91 36 243		1990, B202, L=410 MM	1	Vaccum hose	Vakuumslang	5
0210	11	91 36 243		1991-, B202, L=460 MM	1	Vaccum hose	Vakuumslang	5
0220	11	91 36 243		B234 I, L=330 MM	1	Vaccum hose	Vakuumslang	5
0230	18	75 22 519		1990, B202 TURBO	1	EGR-pipe	EGR-rör	6
0240	18	78 72 898		1991-, B202 TURBO	1	EGR-pipe	EGR-rör	6
0250	18	75 69 916		B202 I	1	EGR-pipe	EGR-rör	6
0260	18	75 69 916		B234 I	1	EGR-pipe	EGR-rör	6
0270	19	81 45 559			2	Nut	Mutter	5
0280	20	81 32 235			2	Ferrule	Skärring	5
0290	21	81 31 989			1	Nipple	Nippel	5
0300	22	75 20 042		B202 TURBO	1	Protection	Skydd	6
0310	22	*75 17 642*		B202 I NLS - USE 7520042	1	Protection	Skydd	6
0320	22	75 20 042		B234	1	Protection	Skydd	6
0330								
0340		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

5. Without catalytic converter. Utan katalytisk reaktor.
56. Engine --L041162.
57. Engine L041163--.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-G24

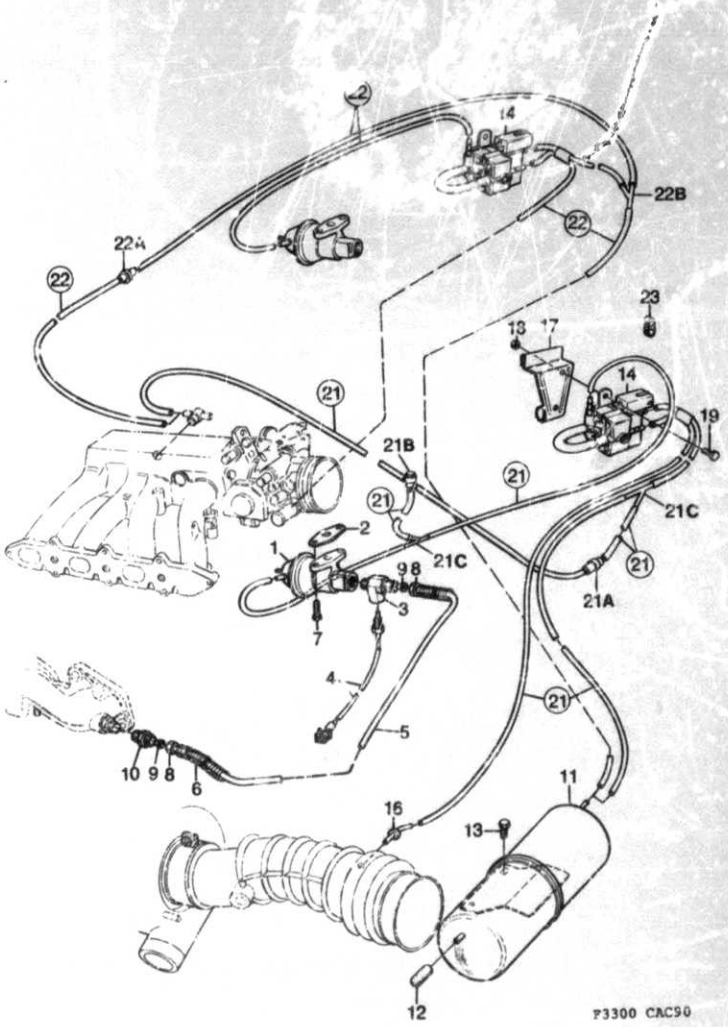

1310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 88 721			1	EGR-valve	EGR ventil	3
0020	2	75 07 973			1	Gasket	Packning	4
0030	3	91 19 728			1	Nipple	Nippel	6
0040	4	91 19 512			1	Sensor	Givare	5
0050	5	75 22 519		TURBO	1	EGR-pipe	EGR-rör	6
0060	5	75 69 916		I	1	EGR-pipe	EGR-rör	6
0070	6	75 20 042			1	Protection	Skydd	5
0080	7	*80 19 929*		-1992 NLS - USE 9166299	2	Screw	Skruv	5
0090	7	91 66 299		1993	2	Screw	Skruv	5
0100	8	81 45 559			2	Nut	Mutter	5
0110	9	81 32 235			2	Ferrule	Skärring	5
0120	10	81 31 989			1	Nipple	Nippel	5
0130	11	40 16 101		TURBO	1	Vacuum tank	Vakuumtank	5
0140	11	41 59 489		I	1	Vacuum tank	Vakuumtank	4
0150	12	83 35 614			1	Plug	Propp	6
0160	13	79 72 888			2	Screw	Skruv	5
0170	14	91 19 504			1	Timing valve	Taktventil	4
0180	16	40 16 036		TURBO	1	Nipple	Nippel	6
0190	17	40 16 028			1	Bracket	Fäste	5
0200	18	79 73 456			2	Expanding nut	Expandermutter	5
0210	19	80 59 396			2	Screw	Skruv	5
0220	21	91 36 243		TURBO, L=3615 MM	1	Vacuum hose	Vakuumslang	5
0230	21A	*40 23 297*		NLS - USE 4301669	1	Non-return valve	Backventil	5
0240	21B	40 23 701			1	Delivery valve	Tryckventil	5
0250	21C	85 09 002			2	Tube	Rör	2
0260	22	91 36 243		I, L=2440 MM	1	Vacuum hose	Vakuumslang	5
0270	22A	*40 23 297*		NLS - USE 4301669	1	Non-return valve	Backventil	5
0280	22B	85 09 002			1	Tube	Rör	2
0290	23	73 08 621			1	Clamp	Klämma	5
0300								
0310		91 36 243		L=5000 MM	X	Vacuum hose	Vakuumslang	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

1-H02

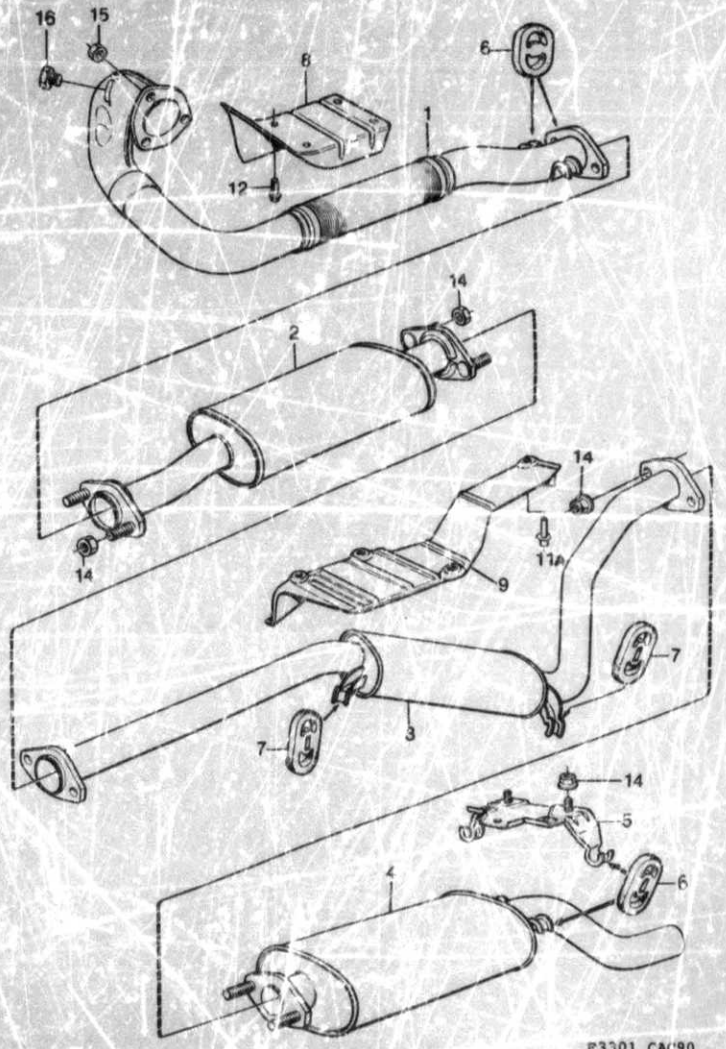

F3301 CA090

1510

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010	1	93 89 560	-1990	1	Exhaust pipe	Avgasrör	2
0020	1	89 82 688	-1990, GB	1	Exhaust pipe	Avgasrör	2
0030	1	40 20 798	1991-1992, B202	1	Exhaust pipe	Avgasrör	2
0040	1	41 63 929	1993, B202	1	Exhaust pipe	Avgasrör	2
0050	2	*93 89 784*	NLS - USE 7539927	1	Silencer	Ljuddämpare	1
0060	2	75 39 927	SE, ME	1	Silencer	Ljuddämpare	1
0070	2	75 39 927	4D	1	Silencer	Ljuddämpare	1
0080	3	89 79 700	-1991	1	Silencer	Ljuddämpare	1
0090	3	40 18 867	1992-	1	Silencer	Ljuddämpare	1
0100	3	43 93 898	1992-, ME	1	Silencer	Ljuddämpare	1
0110	4	89 77 926	5D	1	Silencer	Ljuddämpare	1
0120	4	41 56 055	5D, SG	1	Silencer	Ljuddämpare	1
0130	4	89 80 542	5D, T16S	1	Silencer	Ljuddämpare	1
0140	4	89 79 163	4D	1	Silencer	Ljuddämpare	1
0150	4	41 56 071	4D, SG	1	Silencer	Ljuddämpare	1
0160	4	41 59 976	5CS	1	Silencer	Ljuddämpare	1
0170	5	89 77 936		1	Suspension hook	Upphängningskrok	5
0180	6	93 92 465		4	Rubber mounting	Gummiupphängning	1
0190	7	93 28 105	-1991	2	Rubber mounting	Gummiupphängning	1
0200	7	93 92 465	1992-	2	Rubber mounting	Gummiupphängning	1
0210	8	75 64 321	111)	1	Heat shield	Värmesköld	3
0220	9	40 22 604	-1991	1	Heat shield	Värmesköld	3
0230	9	40 22 505	1992-	1	Heat shield	Värmesköld	3
0240	11A	93 93 968		4	Rivet	Nit	5
0250	11A	75 91 480	85)	4	Rivet	Nit	5
0260	12	81 25 130		4	Screw	Skruv	5
0270	14	79 67 953		8	Nut	Mutter	5
0280	15	75 19 432		3	Nut	Mutter	5
0290	16	81 23 747		1	Plug	Propp	5
0300							
0310		*43 53 807*	1991, IT	X	Catalytic converter kit	Katalysatorsats	4
0320			See page 2-000, 0-000				
0320			NLS				


85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
111. Engine --M048873

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-K02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

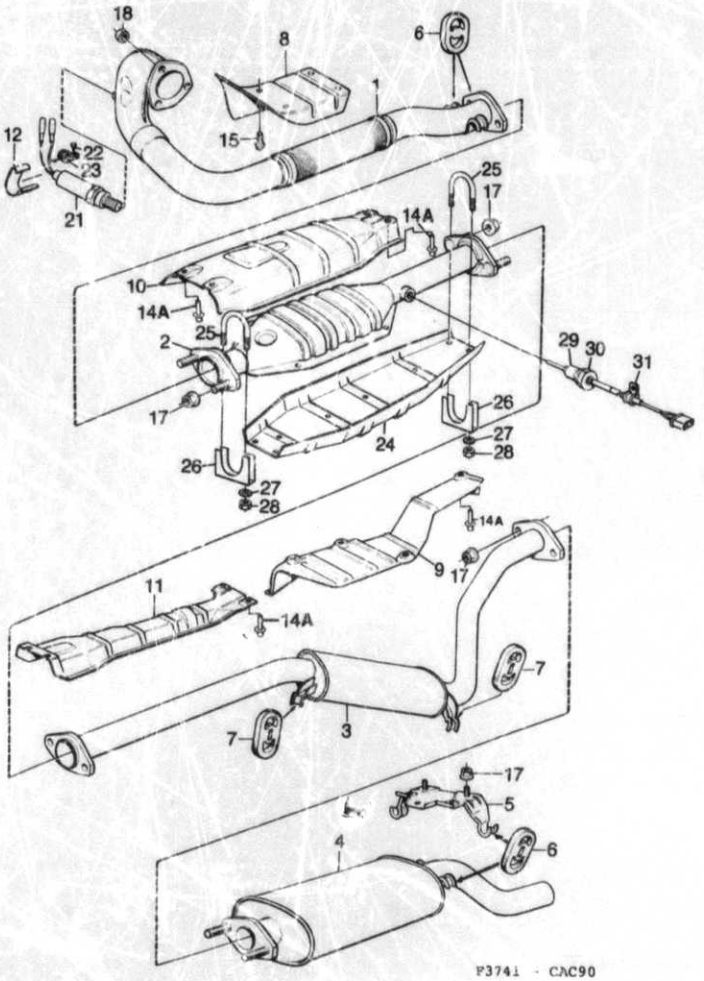

F3741 - CAC90

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 82 688		-1990	1	Exhaust pipe	Avgasrör	2
0020	1	40 20 798		1991-1992, B202	1	Exhaust pipe	Avgasrör	2
0030	1	41 63 929		1993, B202	1	Exhaust pipe	Avgasrör	2
0040	1	40 20 749		1991-1992, B234	1	Exhaust pipe	Avgasrör	2
0050	1	41 63 945		1993, B234	1	Exhaust pipe	Avgasrör	2
0060	1			1993, B234, SE, US		Exhaust pipe	Avgasrör	
0070				See page 2-125, 1-H06				
0080	2	93 92 457			1	TW catalytic converter	Katalysator	4
0090	2	44 40 020		-1991, JT	1	TW catalytic converter	Katalysator	4
0100	2	40 24 253		JP	1	TW catalytic converter	Katalysator	4
0110	2			1993, B234, SE, US		TW catalytic converter	Katalysator	
0120				See page 2-125, 1-H06				
0130	3	89 79 700		-1991	1	Silencer	Ljuddämpare	1
0140	3	40 18 067		1992-	1	Silencer	Ljuddämpare	1
0150	3	43 93 890		1992-, ME	1	Silencer	Ljuddämpare	1
0160	4	89 77 928		5D	1	Silencer	Ljuddämpare	1
0170	4	89 80 542		5D, T16S	1	Silencer	Ljuddämpare	1
0180	4	89 79 163		4D	1	Silencer	Ljuddämpare	1
0190	4	41 59 976		5CS	1	Silencer	Ljuddämpare	1
0200	4	40 15 814		5CS, AERO	1	Silencer	Ljuddämpare	1
0210	5	89 77 936			1	Suspension hook	Upphängningskrok	5
0220	6	93 92 465			4	Rubber mounting	Gummiupphängning	1
0230	7	93 28 105		-1991	2	Rubber mounting	Gummiupphängning	1
0240	7	93 92 465		1992-	2	Rubber mounting	Gummiupphängning	1
0250	8	75 64 321		111), B202	1	Heat shield	Värmesköld	3
0260	8	91 12 780		111), B234	1	Heat shield	Värmesköld	3
0270	9	40 22 604		-1991	1	Heat shield	Värmesköld	3
0280	9	40 22 505		1992-	1	Heat shield	Värmesköld	3
0290	10	40 22 588			1	Heat shield	Värmesköld	3
0300	11	40 22 596			1	Heat shield	Värmesköld	3
0310	12	41 58 762		B234	1	Clip	Clips	5
0320	14A	93 93 968			12	Rivet	Nit	5
0330	14A	75 91 480		85)	12	Rivet	Nit	5
0340	15	81 25 130			4	Screw	Skruv	5
0350	17	79 67 953			8	Nut	Mutter	5
0360	18	75 19 432			3	Nut	Mutter	5
0370	21	93 92 762		-1991	1	Lambda sonde	Lambdasond	4
0380	21	91 32 564		1992	1	Lambda sonde	Lambdasond	4
0390	21	91 29 743		-1991, LA NLS - USE 9321696	1	Lambda sonde	Lambdasond	4
0400	21	41 64 323		1992-, LA, ME	1	Lambda sonde	Lambdasond	4
0410	22	79 71 757		NLS - USE 7528953	2	Screw	Skruv	5
0420	23	73 98 803		50)	1	Clamp	Klammer	5
0430	23	40 87 078		51)	1	Clamp	Klammer	5
0440	24	40 24 279		JP	1	Heat shield	Värmesköld	9
0450	25	40 24 295		JP	2	Brace	Bygel	9
0460	26	40 24 303		JP	2	Yoke bracket	Bygelfäste	6
0470	27	80 29 985		-1992, JP	4	Washer	Bricka	5
0480	27	91 66 372		1993, JP	4	Washer	Bricka	5
0490	28	79 65 767		JP NLS - USE 7968415	4	Lock nut	Låsmutter	5
0500	29	41 60 065		JP	1	Sensor	Givare	4
0510	30	40 62 329		JP	1	Nut	Mutter	5
0520	31	79 99 348		JP	1	Clamp	Klammer	5


50. Ch. --L1011390, --L2008507, --L8001402.
51. Ch. L1011391--, L2008508--, L8001403--.
85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
111. Engine --M048873

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C19
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

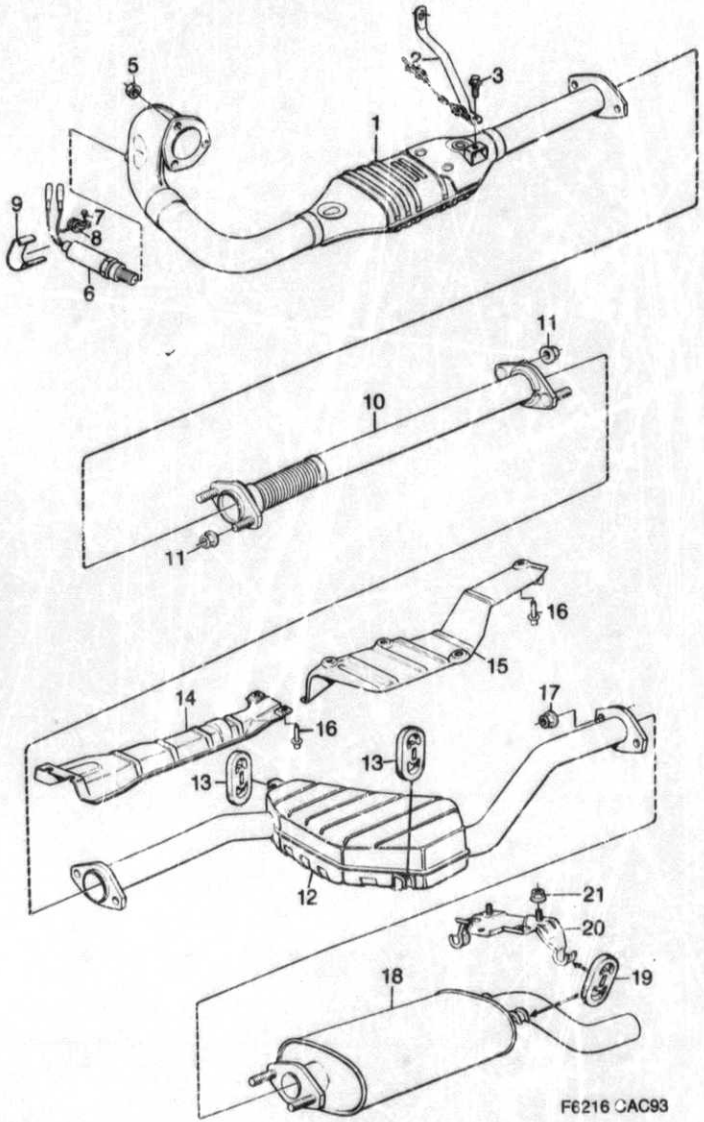

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 93 575			1	TW catalytic converter	Katalysator	4
0020	2	41 62 632			1	Stay	Stag	5
0030	3	79 84 511			1	Screw	Skruv	5
0050	5	75 19 432			3	Nut	Mutter	5
0060	6	91 32 564			1	Lambda sonde	Lambdasond	4
0070	7	79 75 451			2	Screw	Skruv	5
0080	8	40 87 078			1	Clamp	Klammer	5
0090	9	41 58 762			1	Clip	Clips	5
0100	10	43 93 583			1	Intermediate pipe	Mellanrör	1
0110	11	79 67 953			4	Nut	Mutter	5
0120	12	40 18 867			1	Silencer	Ljuddämpare	1
0130	13	93 92 465			2	Rubber mounting	Gummiupphängning	1
0140	14	40 22 596			1	Heat shield	Värmesköld	3
0150	15	40 22 505			1	Heat shield	Värmesköld	3
0160	16	93 93 968			12	Rivet	Nit	5
0170	16	75 91 480		85)	12	Rivet	Nit	5
0180	17	79 67 953			2	Nut	Mutter	5
0190	18	89 77 923		5D	1	Silencer	Ljuddämpare	1
0200	18	89 80 642		5D, T16S	1	Silencer	Ljuddämpare	1
0210	18	89 79 163		4D	1	Silencer	Ljuddämpare	1
0220	18	41 59 976		5CS	1	Silencer	Ljuddämpare	1
0230	18	40 15 814		5CS, AERO	1	Silencer	Ljuddämpare	1
0240	19	93 92 465			2	Rubber mounting	Gummiupphängning	1
0250	20	89 77 936			1	Suspension hook	Upphängningskrok	5
0260	21	79 67 953			2	Nut	Mutter	5

85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A12
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-H08

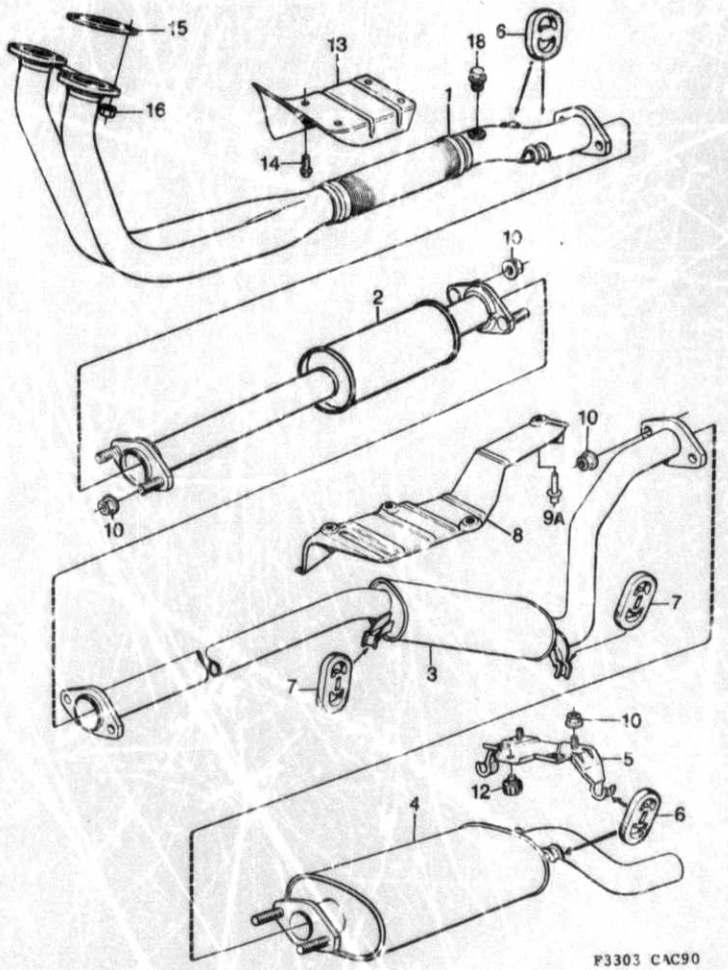

1530	Pos	Part No/Art.nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	93 93 455		-1992, B202	1	Exhaust pipe	Avgasrör	2
0020	1	41 63 91		1993, B202	1	Exhaust pipe	Avgasrör	2
0030	1	40 19 53		-1992, B234	1	Exhaust pipe	Avgasrör	2
0040	1	41 63 93		1993, B234	1	Exhaust pipe	Avgasrör	2
0050	2	93 81 25		1993	1	Silencer	Ljuddämpare	1
0060	3	89 79 65		-1991	1	Silencer	Ljuddämpare	1
0070	3	40 18 87		1992-	1	Silencer	Ljuddämpare	1
0080	4	89 79 13		5D	1	Silencer	Ljuddämpare	1
0090	4	41 56 01		5D, SG	1	Silencer	Ljuddämpare	1
0100	4	89 79 15		4D	1	Silencer	Ljuddämpare	1
0110	4	41 56 03		4D, SG	1	Silencer	Ljuddämpare	1
0120	4	41 62 06		5CS	1	Silencer	Ljuddämpare	1
0130	5	89 77 93			1	Suspension hook	Upphängningskrok	5
0140	6	93 92 46			4	Rubber mounting	Gummiupphängning	1
0150	7	93 28 10		-1991	2	Rubber mounting	Gummiupphängning	1
0160	7	93 92 46		1992-	2	Rubber mounting	Gummiupphängning	1
0170	8	40 22 60		-1991	1	Heat shield	Värmesköld	3
0180	8	40 22 50		1992-	1	Heat shield	Värmesköld	3
0190	9A	93 93 96			4	Rivet	Nit	5
0200	9A	75 91 48		85)	4	Rivet	Nit	5
0210	10	79 67 96			8	Nut	Mutter	5
0220	12	93 88 58			1	Plug	Plugg	1
0230	13	75 64 32			1	Heat shield	Värmesköld	3
0240	14	81 25 13			4	Screw	Skruv	5
0250	15	89 80 37			2	Gasket	Packning	1
0260	16	*79 67 87*		NLS - USE 7979503	4	Nut	Mutter	5
0270	18	81 23 74		1993	1	Plug	Propp	5
0280								
0290		*43 93 80*		-1991, IT	X	Catalytic converter kit	Katalysatorsats	4
0300				See page 2-000, 6-000				
0300				NLS				

85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.

MASTER INDEX


0	General	1-A02
2	Engine	2-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

Exhaust system / Avgassystem

1-H10 With catalytic converter / Med katalytisk reaktor

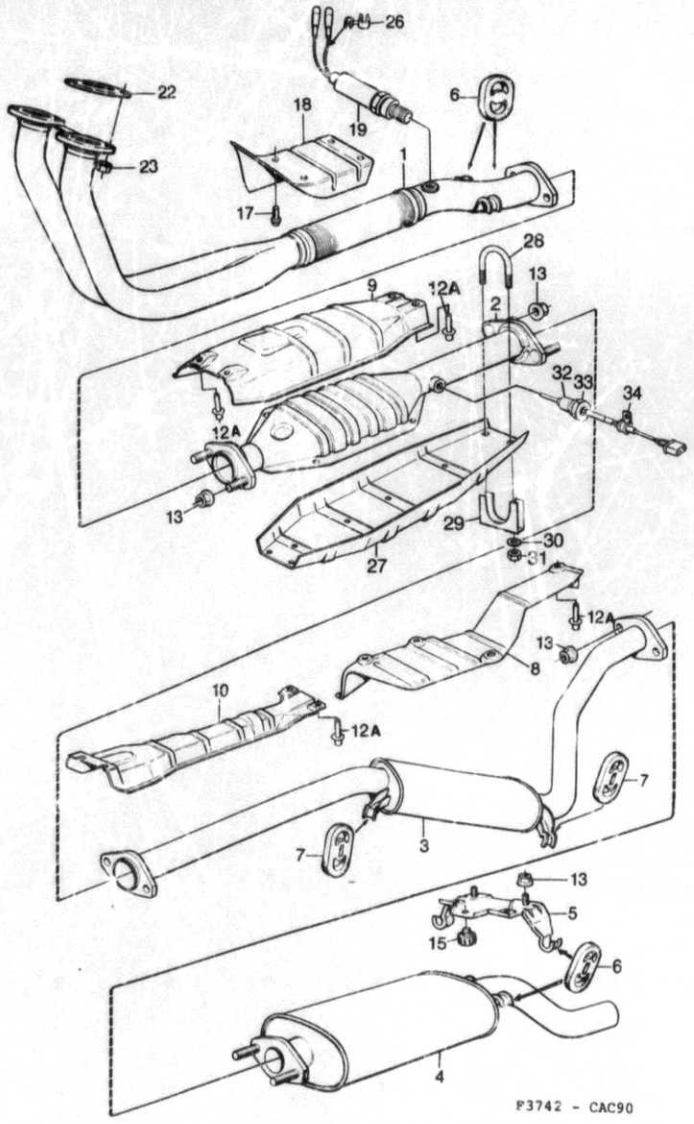

1540	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 93 455		-1992, B202	1	Exhaust pipe	Avgasrör	2
0020	1	41 63 911		1993, B202	1	Exhaust pipe	Avgasrör	2
0030	1	40 19 535		-1992, B234	1	Exhaust pipe	Avgasrör	2
0040	1	41 63 937		1993, B234	1	Exhaust pipe	Avgasrör	2
0050	1			1993, B234, SE, US		Exhaust pipe	Avgasrör	
0060				See page 2-131, 1-H12				
0070	2	93 92 457			1	TW catalytic converter	Katalysator	4
0080	2	44 40 020		-1991, IT	1	TW catalytic converter	Katalysator	4
0090	2	40 24 253		JP	1	TW catalytic converter	Katalysator	4
0100	2			1993, B234, SE, US		TW catalytic converter	Katalysator	
0110				See page 2-131, 1-H12				
0120	3	89 79 650		-1991	1	Silencer	Ljuddämpare	1
0130	3	40 18 875		1992-	1	Silencer	Ljuddämpare	1
0140	3	43 93 898		1992-, ME	1	Silencer	Ljuddämpare	1
0150	4	89 79 130		5D	1	Silencer	Ljuddämpare	1
0160	4	89 79 155		4D	1	Silencer	Ljuddämpare	1
0170	4	41 62 061		5CS	1	Silencer	Ljuddämpare	1
0180	5	89 77 936			1	Suspension hook	Upphängningskrok	5
0190	6	93 92 465			4	Rubber mounting	Gummiupphängning	1
0200	7	93 28 105		-1991	2	Rubber mounting	Gummiupphängning	1
0210	7	93 92 465		1992-	2	Rubber mounting	Gummiupphängning	1
0220	8	40 22 604		-1991	1	Heat shield	Värmesköld	3
0230	8	40 22 905		1992-	1	Heat shield	Värmesköld	3
0240	9	40 22 588			1	Heat shield	Värmesköld	3
0250	10	40 22 596			1	Heat shield	Värmesköld	3
0260	12A	93 93 958			8	Rivet	Nit	5
0270	12A	75 91 430		85)	8	Rivet	Nit	5
0280	13	79 67 903			8	Nut	Mutter	5
0290	15	93 88 548			1	Plug	Plugg	1
0300	17	81 25 130			4	Screw	Skruv	5
0310	18	75 64 321		B202	1	Heat shield	Värmesköld	3
0320	18	91 12 780		B234	1	Heat shield	Värmesköld	5
0330	19	93 92 762		-1991	1	Lambda sonde	Lambdasond	4
0340	19	91 32 564		1992-	1	Lambda sonde	Lambdasond	4
0350	22	89 80 328			2	Gasket	Packning	1
0360	23	79 67 870		NLS - USE 7979503	4	Nut	Mutter	5
0370	26	73 99 272			1	Clamp	Klammer	5
0380	27	40 24 279		JP	1	Heat shield	Värmesköld	9
0390	28	40 24 295		JP	2	Brace	Bygel	9
0400	29	40 24 303		JP	2	Yoke bracket	Bygelfäste	6
0410	30	80 29 985		-1992, JP	4	Washer	Bricka	5
0420	30	91 66 372		1993, JP	4	Washer	Bricka	5
0430	31	79 65 767		JP NLS - USE 7968415	4	Lock nut	Låsmutter	5
0440	32	41 60 065		JP	1	Sensor	Givare	4
0450	33	40 62 329		JP	1	Nut	Mutter	5
0460	34	79 69 348		JP	1	Clamp	Klammer	5


85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

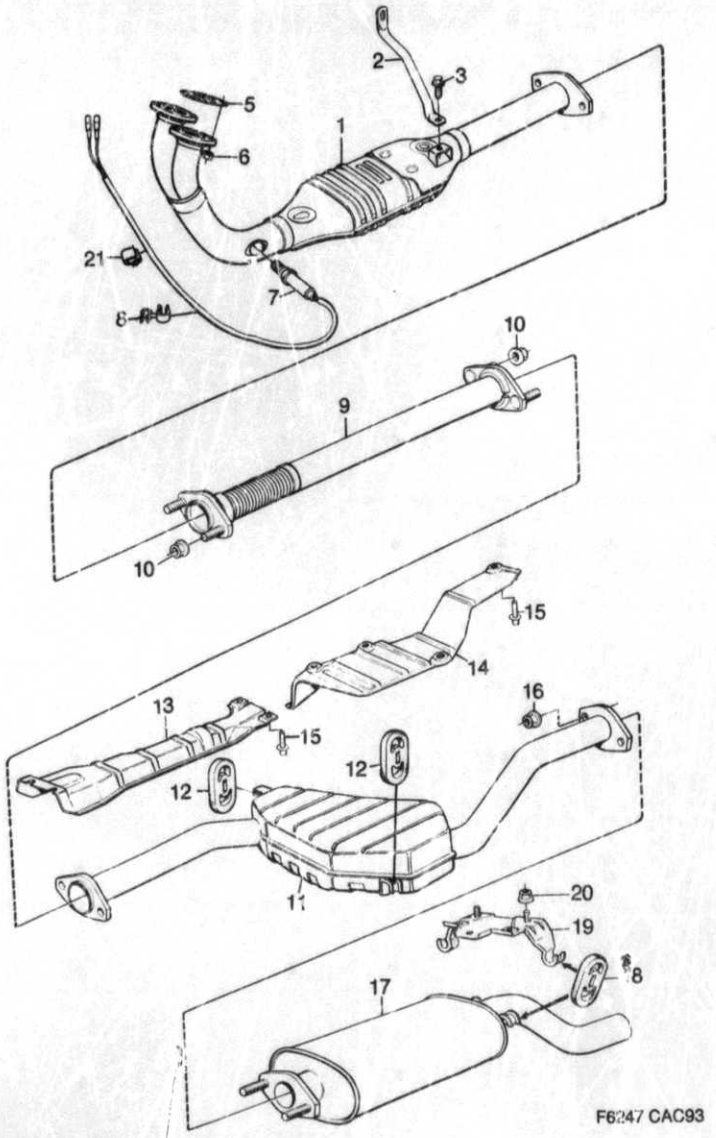

1545 Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010 1	43 93 567			1	TW catalytic converter	Katalysator	4
0020 2	41 62 632			1	Stay	Stag	5
0030 3	79 84 511			1	Screw	Skruv	5
0050 5	89 80 328			2	Gasket	Packning	1
0060 6	*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0070 7	43 90 266			1	Lambda sonde	Lambdasond	4
0080 8	73 98 415			1	Clamp	Klämma	5
0090 9	43 93 583			1	Intermediate pipe	Mellanrör	1
0100 10	79 67 953			4	Nut	Mutter	5
0110 11	40 18 875			1	Silencer	Ljuddämpare	1
0120 12	93 92 465			2	Rubber mounting	Gummiupphängning	1
0130 13	40 22 596			1	Heat shield	Värmesköld	3
0140 14	40 22 505			1	Heat shield	Värmesköld	3
0150 15	93 93 968			8	Rivet	Nit	5
0160 15	75 91 480		85)	8	Rivet	Nit	5
0170 16	79 67 953			2	Nut	Mutter	5
0180 17	89 79 130		5D	1	Silencer	Ljuddämpare	1
0190 17	89 79 155		4D	1	Silencer	Ljuddämpare	1
0200 17	41 62 061		5CS	1	Silencer	Ljuddämpare	1
0210 18	93 92 465			2	Rubber mounting	Gummiupphängning	1
0220 19	89 77 936			1	Suspension hook	Upphängningskrok	5
0230 20	79 67 953			2	Nut	Mutter	5
0240 21	73 98 746			3	Clamp	Klämmer	5

85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

1-H14

Radiator, etc

Kylare, etc

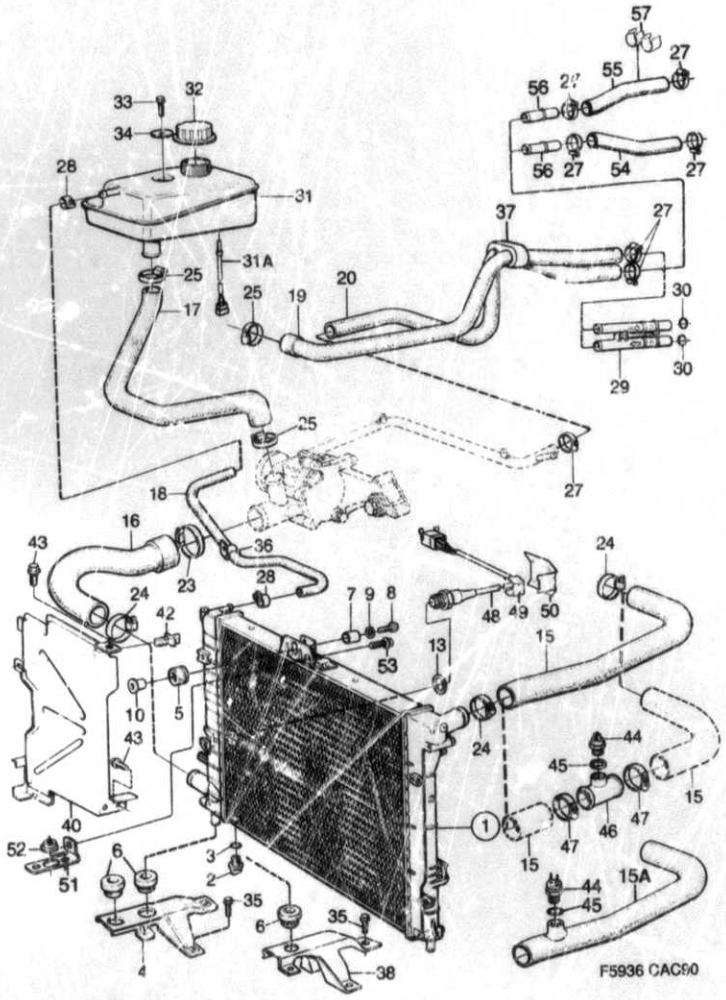

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*93 82 649*		1990, TURBO M NLS - USE 7599285	1	Radiator	Kylare	4
0020	1	*75 50 080*		1990, TURBO A NLS - USE 7599194	1	Radiator	Kylare	4
0030	1	93 82 656		1990, TURBO M, AC	1	Radiator	Kylare	4
0040	1	75 50 098		1990, TURBO A, AC	1	Radiator	Kylare	4
0050	1	*93 82 649*		1991-,138), TURBO M NLS - USE 7599285	1	Radiator	Kylare	4
0060	1	75 99 285		139), TURBO M	1	Radiator	Kylare	4
0070	1	*75 50 080*		1991-,138), TURBO A NLS - USE 7599194	1	Radiator	Kylare	4
0080	1	75 99 194		139), TURBO A	1	Radiator	Kylare	4
0100	1	*93 82 649*		52), I, M NLS - USE 7599285	1	Radiator	Kylare	4
0120	1	93 82 631		53), B202 I, M, (NOT AC) SE, FI, EU, GB	1	Radiator	Kylare	4
0140	1	*93 82 649*		53,138),B202 I,M,(NOT AC) NOT SE, FI, EU, GB NLS - USE 7599285	1	Radiator	Kylare	4
0160	1	75 99 285		139), B202 I, M,(NOT AC) NOT SE, FI, EU, GB	1	Radiator	Kylare	4
0190	1	*93 82 649*		53,138), B202 I, M, AC NLS - USE 7599285	1	Radiator	Kylare	4
0200	1	75 99 285		139), B202 I, M, AC	1	Radiator	Kylare	4
0220	1	*93 82 649*		53,138), B234 I, M NLS - USE 7599285	1	Radiator	Kylare	4
0230	1	75 99 285		139), B234 I, M	1	Radiator	Kylare	4
0250	1	*75 50 080*		138), I, A NLS - USE 7599194	1	Radiator	Kylare	4
0260	1	75 99 194		139), I, A	1	Radiator	Kylare	4
0280	2	93 85 824			1	*Drain valve	*Avtappningsventil	3
0290	3	79 75 725			1	*O-ring	*O-ring	2
0300	4	75 76 382		TURBO	1	Bracket	Fäste	6
0310	5	93 77 334			1	Rubber bushing	Gummibussning	4
0320	6	40 27 488			2	Rubber bushing	Gummibussning	4
0330	7	75 53 415			1	Rubber bushing	Gummibussning	4
0340	8	79 78 133			1	Screw	Skruv	5
0350	9	79 75 469			1	Washer	Bricka	5
0360	10	75 76 200			1	Nut	Mutter	5
0370	13	93 86 285			1	Seal	Tätning	5
0380	15	75 51 187			1	Hose	Slang	2
0390	15	*43 56 598*		145,150) NLS - USE 4359691	1	Hose	Slang	2
0400	15A	41 18 188			1	Hose	Slang	2
0410	15A	*43 59 006*		145,147) NLS - USE 4359709	1	Hose	Slang	2
0420	16	93 83 670		1990, TURBO	1	Hose	Slang	3
0430	16	93 83 688		1990, TURBO, AC	1	Hose	Slang	3
0440	16	93 83 662		1990 B202 I	1	Hose	Slang	3
0450	16	93 83 670		1990, B202 I, AC	1	Hose	Slang	3

52. Ch. --L1002727, --L2001990, --L8000283.
53. Ch. L1002728--, L2001991--, L8000284--.
138. Ch --N1038973.
139. Ch N1038974--.
145. For markets with mean temperature over 10° Celsius. För marknader med medeltemperatur över 10° Celsius.
147. Alternative for 41 18 188. Alternativ för 41 18 188.
150. Alternative for 75 51 187. Alternativ för 75 51 187.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

1–H16

Radiator, etc

Kylare, etc

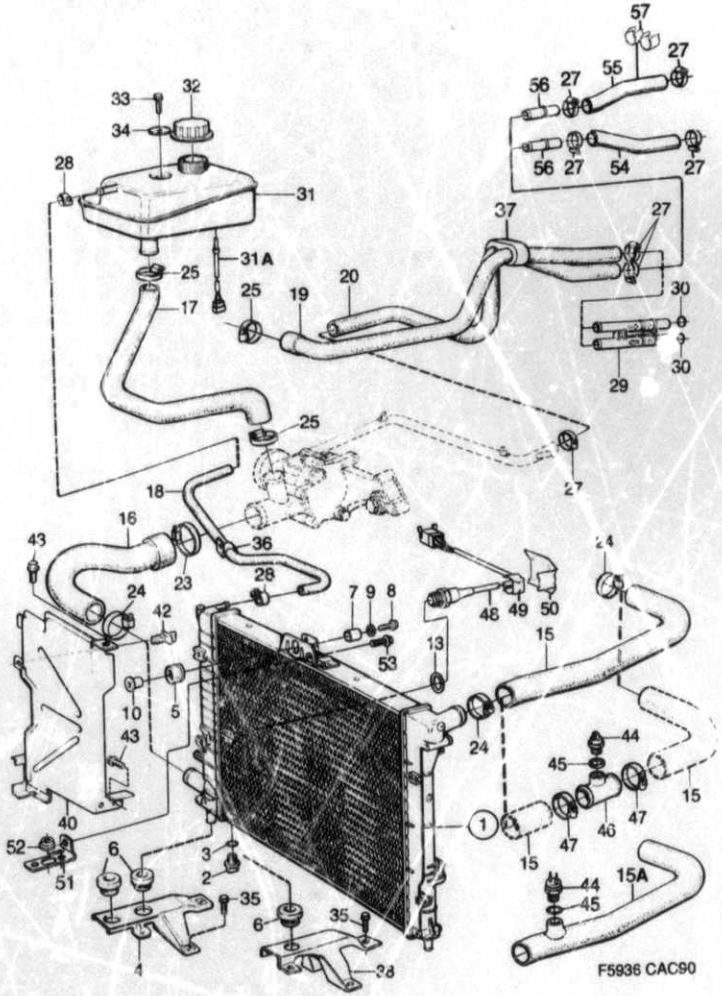

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
16	93 83 670		1991-, B202 TURBO	1	Hose	Slang	3
16	93 83 670		1991-, B202I, AC	1	Hose	Slang	3
16	93 83 662		1991-84), B202I	1	Hose	Slang	3
16	75 76 663		B234	1	Hose	Slang	3
17	75 54 009		B202	1	Hose	Slang	3
17	75 54 017		-1992, B202, AC	1	Hose	Slang	3
17	42 83 164		93), B202, AC	1	Hose	Slang	3
17	75 76 671		B234	1	Hose	Slang	3
18	*41 18 048*		1990, TURBO M NLS	1	Hose	Slang	2
18	41 18 030		1990, TURBO A	1	Hose	Slang	2
18	41 18 030		1990, TURBO, AC	1	Hose	Slang	2
18	75 50 122		1990, B202 I M	1	Hose	Slang	2
18	*41 18 048*		1990, B202 I A NLS	1	Hose	Slang	2
18	*41 18 048*		1990, B202 I, AC NLS	1	Hose	Slang	2
18	*41 18 048*		1990, B234 I NLS	1	Hose	Slang	2
18	41 18 956		1991	1	Hose	Slang	2
18	42 84 196		84),1992-,B202 I,B204I	1	Hose	Slang	2
18	42 84 188		1992-	1	Hose	Slang	2
19	75 54 025		-1991	1	Hose	Slang	3
19	43 56 606		145,151), -1991	1	Hose	Slang	2
19	40 28 593		1992-	1	Hose	Slang	3
19	*43 59 022*		145,146), 1992- NLS - USE 4359725	1	Hose	Slang	3
20	75 54 033		-1991, B202	1	Hose	Slang	3
20	40 28 643		1992-, B202	1	Hose	Slang	3
20	40 27 785		60), B234	1	Hose	Slang	3
20	41 20 366		61), -1991, B234	1	Hose	Slang	3
20	41 20 465		1992-, B234	1	Hose	Slang	3
23	79 70 122			1	Hose clamp	Slangklamma	5
24	79 70 114			3	Hose clamp	Slangklamma	5
25	79 70 098			3	Hose clamp	Slangklamma	5
27	79 70 072			6	Hose clamp	Slangklamma	5
28	79 70 031		-1991, B202	2	Hose clamp	Slangklamma	5
28	79 70 049		-1991, B234	2	Hose clamp	Slangklamma	5
28	79 70 049		1992-	2	Hose clamp	Slangklamma	5
29	93 85 709		-1991	1	Snap-on coupling	Snabbkoppling	5
30	79 74 975		-1991	2	O-ring	O-ring	2
31	87 86 055		-1991	1	Expansion tank	Expansionstank	3
31	41 21 067		1992-	1	Expansion tank	Expansionstank	3
31A	75 54 348			1	Level sensor	Nivågivare	3
32	75 77 323			1	Cover	Lock	3
33	80 84 063			1	Screw	Skruv	5
34	93 71 650			1	Washer	Bricka	5
35	80 19 895			3	Screw	Skruv	5
36	85 36 419		-1991	1	Clip	Clips	5
36	79 71 880		-1991, AC	1	Tensioning band	Spännband	4
37	75 98 212		-1991	1	Grommet	Genomföring	4
37	41 21 828		1992-	1	Grommet	Genomföring	4
38	75 76 390		I	1	Bracket	Fäste	6
40	75 50 015		-1991, I AC	1	Cover plate	Täckplåt	5
40	*75 50 007*		53)-1991, B202 I, M SE, FI, EU, GB NLS - USE 4118378	1	Cover plate	Täckplåt	5
40	41 18 360		1992-, B202 WITH AC/ACC B234 I	1	Cover plate	Täcknlåt	5


53. Ch. L1002728–, L2001991–, L8000284–.
80. Ch. –L1013818, –L2009856.
81. Ch. L1013819–, L2009857–.
84. For cars without air conditioning. För bilar utan luftkonditionering.
98. For cars with refrigerant medium R134a. För bilar med köldmedia R134a.
145. For markets with mean temperature over 10° Celsius. För marknader med medeltemperatur över 10° Celsius.
146. Alternative for 40 28 593. Alternativ för 40 28 593.
151. Alternative for 75 54 025. Alternativ för 75 54 025.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

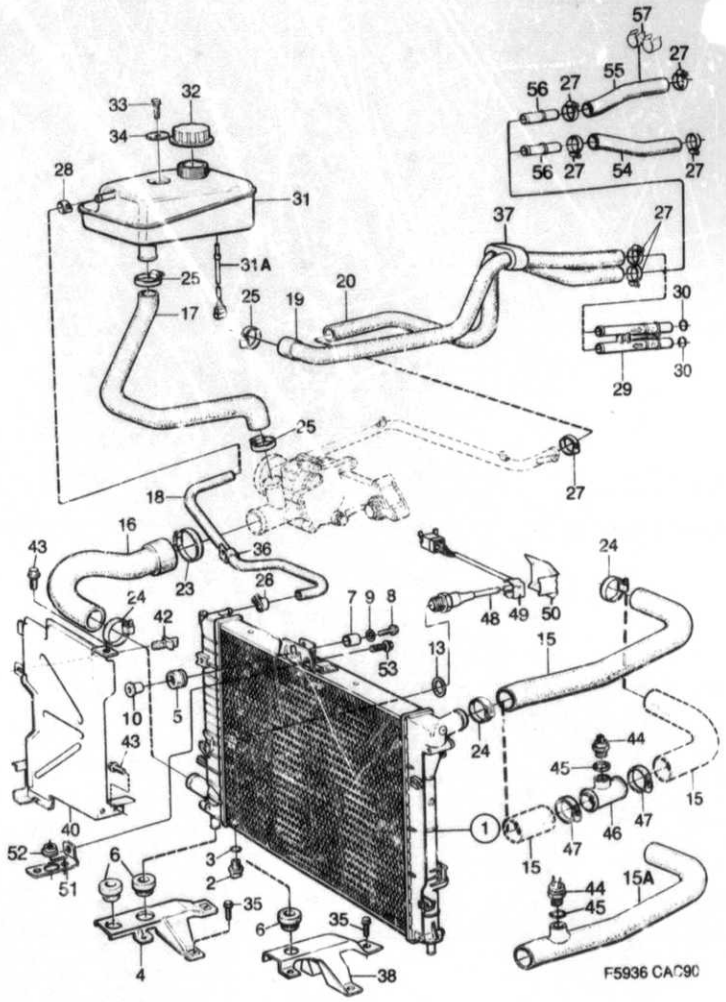

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
40	41 1[illegible]378		1992-, B202I, M, WITHOUT AC/ACC	1	Cover plate	Täckplåt	5
42	93 85 [illegible]32		I	1	Rubber strap	Gummistropp	4
43	79 71 8[illegible]3		I, AC	3	Screw	Skruv	5
44	*95 26 52*[illegible]		19), -1991 NLS - USE 4066724	1	Thermo contact	Termokontakt	2
44	40 86 724		1992-	1	Thermo contact	Termokontakt	2
45	83 30 268		19)	1	Seal	Tätning	5
46	75 76 960		19)	1	Tube	Rör	5
47	79 70 114		19)	2	Hose clamp	Slangklamma	5
48	*41 10 508*		-1991 NLS - USE 408669[illegible]	1	Thermo contact	Termokontakt	2
48	40 86 690		1[illegible]92-	1	Thermo contact	Termokontakt	2
48	*95 67 537*		86[illegible]-1991 NLS - USE 408[illegible]682	1	Thermo contact	Termokontakt	2
48	40 86 682		86), 1992-	1	Thermo contact	Termokontakt	2
49	40 60 083		-199[illegible] TURBO	1	Clip	Clips	5
50	40 63 459		-1992, TURBO	1	Protection	Skydd	5
51	75 50 346		AC		Bracket	Fäste	5
51	75 50 346		B234 TURBO	1	Bracket	Fäste	5
52	75 50 353		AC	1	Rubber bushing	Gummibussning	5
52	75 50 353		B234 TURBO	1	Rubber bushing	Gummibussning	5
52	75 50 353		B234 TURBO, AC	2	Rubber bushing	Gummibussning	5
53	79 72 441		AC	1	Screw	Skruv	5
53	79 72 441		B234 TURBO	1	Screw	Skruv	5
54	40 28 619		1992-	1	Hose	Slang	5
55	40 28 635		1992-	1	Hose	Slang	5
56	40 28 650		1992-	1	Junction pipe	Skarvrör	5
57	96 27 266		1992-, TURBO	1	Clamp	Klammer	5
			See page 8C-033, 6-L10	X	Ac switch off	Ac-bortkoppling	
			AC See page 8C-033, 6-L10	X	Cooling system kit	Kylsystemssats	
			145) See page 2-175, 1-J0[illegible]	X	Temperature gauge kit	Temperaturmätare sats	

19. Part of AC-disengagement kit 75 77 042. Ingår i sats, AC-frånkoppling 75 77 042.
86. For twostep cooling fan. För tvåstegs kylfläkt.
145. For markets with mean temperature over 10° Celsius. För marknader med medeltemperatur över 10° Celsius.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-H20 Fan, etc / Fläkt, etc
Turbo / Turbo

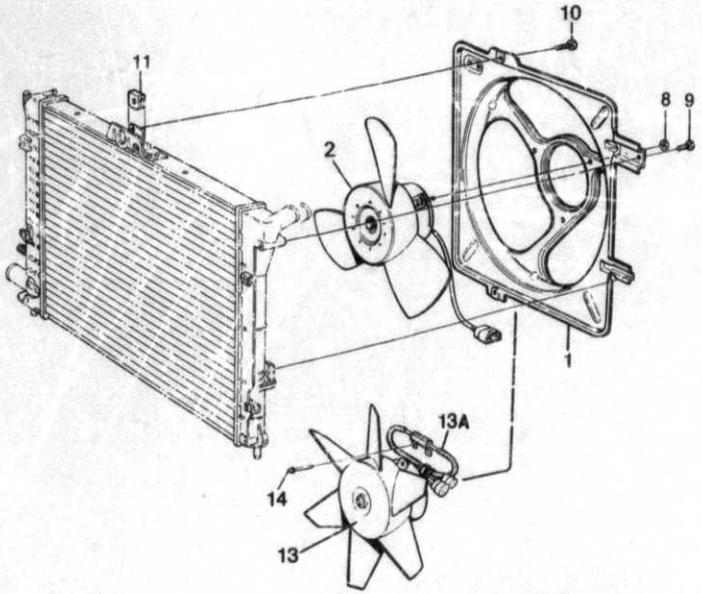

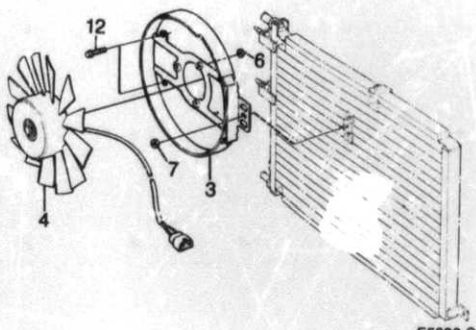

F5938 CAC90

1560	Pos	Part No/Art.nr	K S	Anmärkningar / Remarks	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 918			1	Fan shroud	Fläktkåpa	4
0020	2	75 82 144		130)	1	Fan unit	Fläktenhet	4
0030	3	75 77 885			1	Fan shroud	Fläktkåpa	4
0040	4	75 98 980	S	A?	1	Fan unit	Fläktenhet	4
0050	6	79 75 576	S		3	Nut	Mutter	5
0060	7	79 71 658			1	Nut	Mutter	5
0070	8	79 74 298	S		3	Nut	Mutter	5
0080	9	79 71 823			1	Screw	Skruv	5
0090	10	79 22 800			2	Screw	Skruv	5
0100	11	94 27 014			2	Clip nut	Clipsmutter	3
0110	12	79 72 607	S		2	Screw	Skruv	5
0120	13	75 92 819		87, 154) NLS - USE 4360962	1	Fan unit	Fläktenhet	4
0120								
0130	13	43 56 994		87 155)	1	Fan unit	Fläktenhet	4
0140	13A	43 95 034			1	▪Cable harness	▪Kabelhärva	
0150	14	79 72 045		-1991 NLS - USE 7961659	2	Rivet	Nit	5
0160	14	98 49 514		1992-	2	Rivet	Nit	5
0170								
0180		96 27 373		See page 8C-033, 6-L10	X	Fan	Fläkt	4

87. Twostep. Tvåstegs.
130. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.
154. Ch -P1006966.
155. Ch P1006967-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-H22 Fan, etc / Fläkt, etc

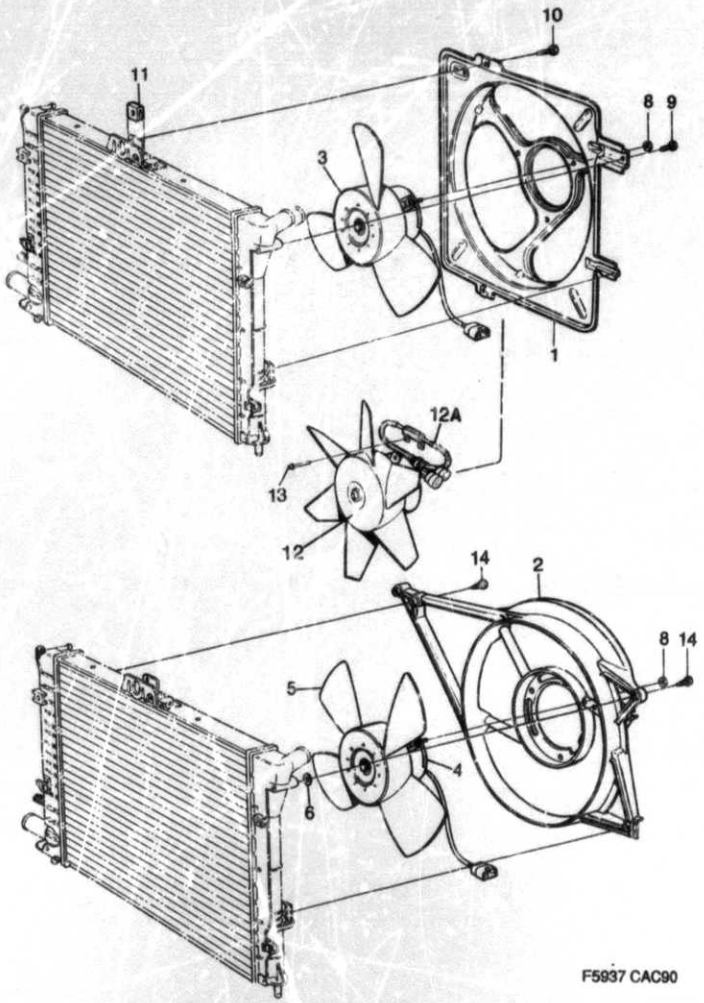

F5937 CAC90

1565	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 918			1	Fan shroud, sheet metal	Fläktkåpa plåt	4
0020								
0030	2	*93 82 102*		53,174), B202 I, M, SE, FI, EU, GB NLS - USE 4237061	1	Fan shroud, plastic	Fläktkåpa plast	4
0040								
0050	2	42 37 061		175), B202 I, M, SE, FI, EU, GB	1	Fan shroud, plastic	Fläktkåpa plast	4
0060								
0070	3	93 82 144		130)	1	Fan unit	Fläktenhet	4
0080	4	93 82 110		53,84,130,172), B202 I,M, SE, FI, EU, GB	1	Fan motor	Fläktmotor	4
0090								
0100	4	43 56 986		84,130,173), B202 I, M, SE, FI, EU, GB	1	Fan motor	Fläktmotor	4
0110								
0120	5	75 41 725		1,130)	1	▪Fan blade	▪Fläktblad	4
0130	6	75 41 733		130)	1	▪Clip	▪Clips	5
0140	8	79 74 298			3	Nut	Mutter	5
0150	9	79 71 823			1	Screw	Skruv	5
0160	10	79 22 800			2	Screw	Skruv	5
0170	11	94 27 014			2	Clip nut	Clipsmutter	3
0180	12	*75 92 819*		87,154) NLS - USE 4360967	1	Fan unit	Fläktenhet	4
0190								
0200	12	43 56 994		87,155)	1	Fan unit	Fläktenhet	4
0220	12A	43 95 034			1	▪Cable harness	▪Kabelhärva	
0230	13	*79 72 045*		-1991 NLS - USE 7961659	2	Rivet	Nit	5
0240	13	98 49 514		1992-	2	Rivet	Nit	5
0250	14	79 73 597		53), B202 I, M, SE, FI, EU, GB	2	Screw	Skruv	5
0260								

1. Not as separate spare part. Ej som separat reservdel.
53. Ch. L1002728–, L2001991–, L8000284–.
84. For cars without air conditioning. För bilar utan luftkonditionering.
87. Twostep. Tvåstegs.
130. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad komplettenhet.
154. Ch –P1006966.
155. Ch P1006967–.
172. Ch. –P1025188.
173. Ch. P1025189–.
174. Ch. –P1023559.
175. Ch. P1023560–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-H24

Charge cooler
Laddluftkylare

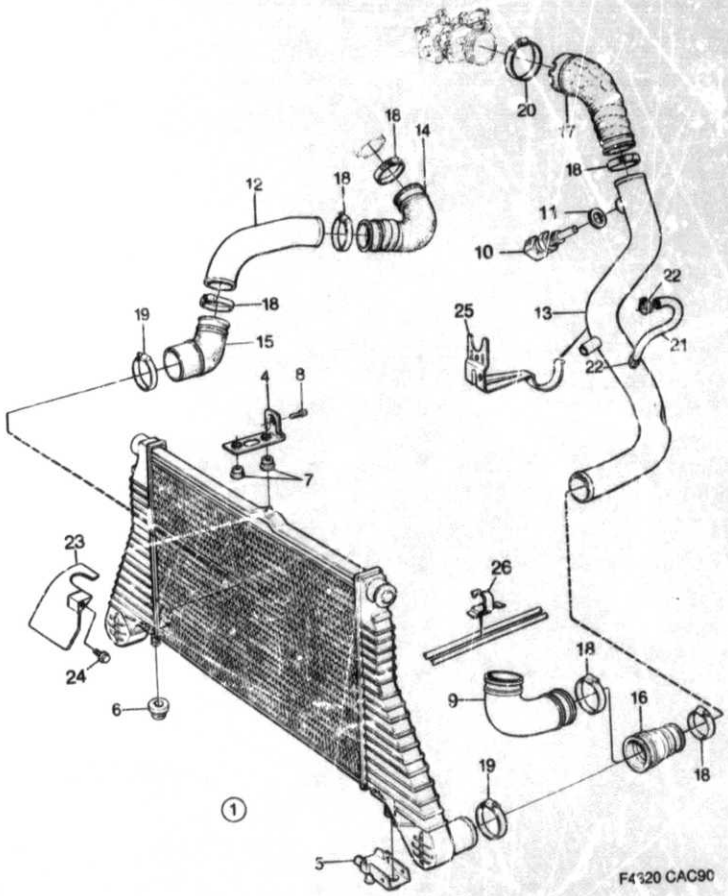

1570	Ref	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010	1	75 59 776		1990	1	Charge air cooler	Laddluftkylare	4
0020	1	75 96 257		1991-	1	Charge air cooler	Laddluftkylare	4
0030	4	75 50 346			1	Bracket	Fäste	5
0040	5	93 81 120		1990	1	Bracket	Fäste	6
0050	6	40 27 488			2	Rubber bushing	Gummibussning	4
0060	7	75 50 353			1	Rubber bushing	Gummibussning	5
0070	8	79 72 441			1	Screw	Skruv	5
0080	9	89 76 912		1991-	1	Hose	Slang	4
0090	9	41 64 745		B202S	1	Hose	Slang	6
0100	10	88 59 886		1991-	1	Temperature sensor	Temperaturgivare	3
0110	11	41 61 261		1991-	1	Washer	Bricka	2
0120	12	93 81 724		1990, TE05	1	Tube	Rör	5
0130	12	40 15 871		1990, T25	1	Tube	Rör	5
0140	12	41 57 038		1991-	1	Tube	Rör	5
0150								
0160	13	75 90 805		1990, B202, M	1	Pipe	Rör	6
0170	13	40 22 398		1991-1993, B202, M	1	Pipe	Rör	6
0180	13	93 90 923		1990, B202, A	1	Pipe	Rör	6
0190	13	40 22 406		1991-, B202, A	1	Pipe	Rör	6
0200								
0210	13	41 64 687		B202S, M	1	Pipe	Rör	6
0220	13	41 64 695		B202S, A	1	Pipe	Rör	6
0230								
0240	13	41 56 642		1991-, B234, M	1	Pipe	Rör	6
0250	13	41 56 451		1991-, B234, A	1	Pipe	Rör	6
0260								
0270	14	93 87 671		1990, TE05	1	Hose	Slang	3
0280	14	40 15 863		1990, T25	1	Hose	Slang	5
0290	14	41 57 [illegible]		1991-	1	Hose	Slang	5
0300	15	93 87 [illegible]		1990	1	Hose	Slang	5
0310	15	41 57 048		1991-	1	Hose	Slang	5
0320	16	93 90 356		1990	1	Hose	Slang	4
0330	17	93 91 509		1990, B202	1	Hose	Slang	6
0340	17	40 24 600		1991-, B202	1	Hose	Slang	6
0350	17	93 91 509		B202S	1	Hose	Slang	6
0360	17	41 56 444		1991-, B234	1	Hose	Slang	6
0370	18	79 70 130			5	Hose clamp	Slangklamma	5
0380	19	79 70 148			2	Hose clamp	Slangklamma	5
0390	20	79 70 155			1	Hose clamp	Slangklamma	5
0400	21	93 42 627		1990, A	1	Hose	Slang	3
0410	21	41 56 345		1991-, A, L=180 MM	1	Hose	Slang	3
0420	21	88 78 652		B202S, A, L=305 MM	1	Hose	Slang	3
0430	22	79 73 542		A	2	Hose clamp	Slangklamma	6
0440	23	40 28 767		5CS, AC	1	Cover plate	Täckplåt	5
0450	24	79 72 607		5CS, AC	2	Screw	Skruv	5
0460	25	43 90 589		B202S	1	Holder	Hållare	6
0470	26	92 28 156		B202S, A	2	Clip	Clips	6


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-B02
4 Transmission 3-K02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 1-F02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

2 GROUP INDEX

Engine body 1-C10
Lubrication system 1-D16
Fuel system 1-E02
Inlet and exhaust system 1-F14
Cooling system 1-H14
Engine control 1-H18
Supercharging system 1-J20
Kits 1-J04

1-H02

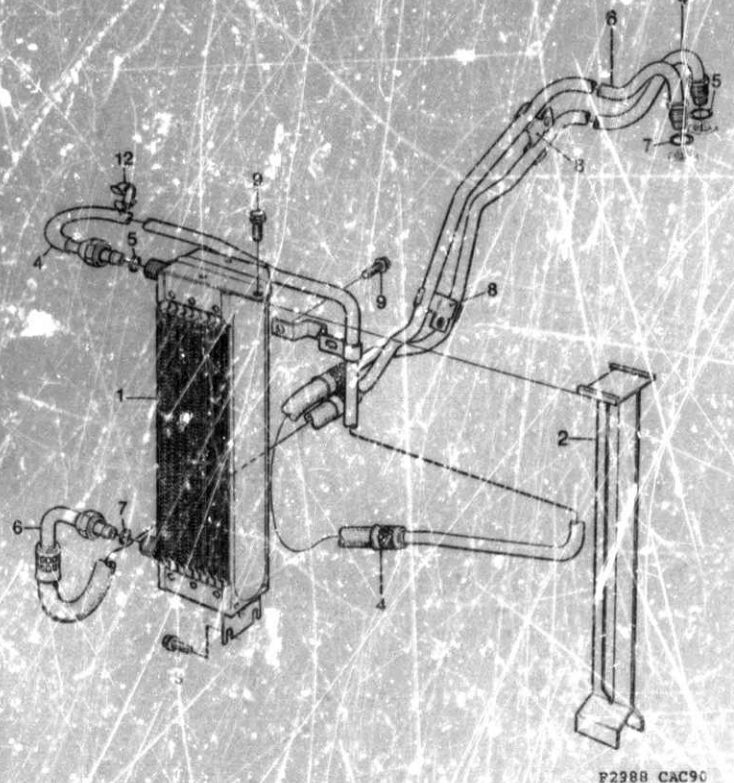

1595	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0010	1	75 72 886		46) NLS - USE 4029625	1	Oil cooler	Oljekylare	4
0020	1	40 29 625		47)	1	Oil cooler	Oljekylare	4
0030	1	75 72 894		1990, AC	1	Oil cooler	Oljekylare	4
0040	1	75 96 018		1991-, AC	1	Oil cooler	Oljekylare	4
0050	2	75 96 604		1991-	1	Cover plate	Täckplåt	5
0060	4	75 92 884		-1991 NLS - USE 4284213	1	Hose	Slang	4
0070	4	42 84 212		1992-	1	Hose	Slang	3
0080	5	79 77 598			2	O-ring	O-ring	2
0090	6	75 72 944			1	Hose	Slang	3
0100	7	79 77 598			2	O-ring	O-ring	2
0110	8	75 72 965			2	Clamp	Klammer	5
0120	9	78 71 823			4	Screw	Skruv	5
0130	12	73 98 894			1	Clamp	Klammer	5

46. Ch. -L1006097, -L2004598, -L8001564.
47. Ch. L1006098-, L2004599-, L8001565-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C12
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-F02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-I04

Air oil cooler
Engine, B234

Luftoljekylare
Motor, B234

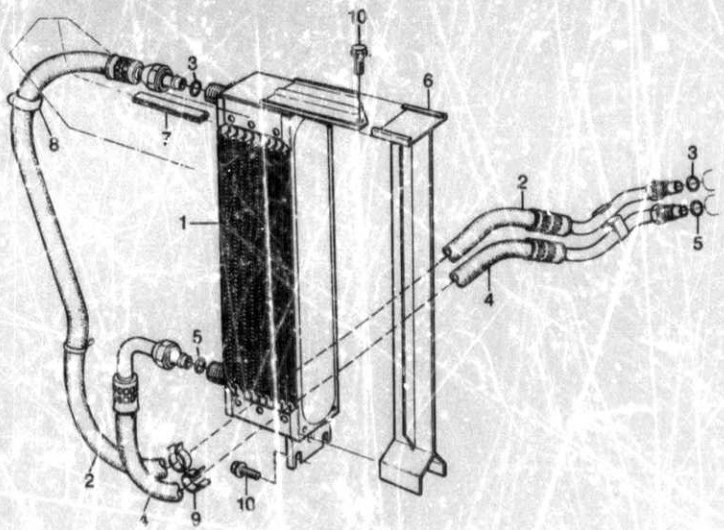

F0999 CAC90

1990	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 29 625		I	1	Oil cooler	Oljekylare	4
0020	1	75 96 018		TURBO	1	Oil cooler	Oljekylare	4
0030	2	*42 83 222*		-1991 NLS - USE 4284204	1	Hose	Slang	3
0040	2	42 84 204		1992-	1	Hose	Slang	3
0050	3	79 77 598			2	▲O-ring	▲O-ring	2
0060	4	42 83 230			1	Hose	Slang	3
0070	5	79 77 598			2	▲O-ring	▲O-ring	2
0080	6	75 96 604			1	Cover plate	Täckplåt	5
0090	7	82 78 558		-1991	1	Protecting moulding	Skyddslist	5
0100	8	73 98 894			1	Clamp	Klammer	5
0110	9	40 28 569			1	Clamp	Klammer	5
0120	10	79 71 823			3	Screw	Skruv	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-I06

Air oil cooler
62) Aut. transmission

Luftoljekylare
62) Automatisk växellåda

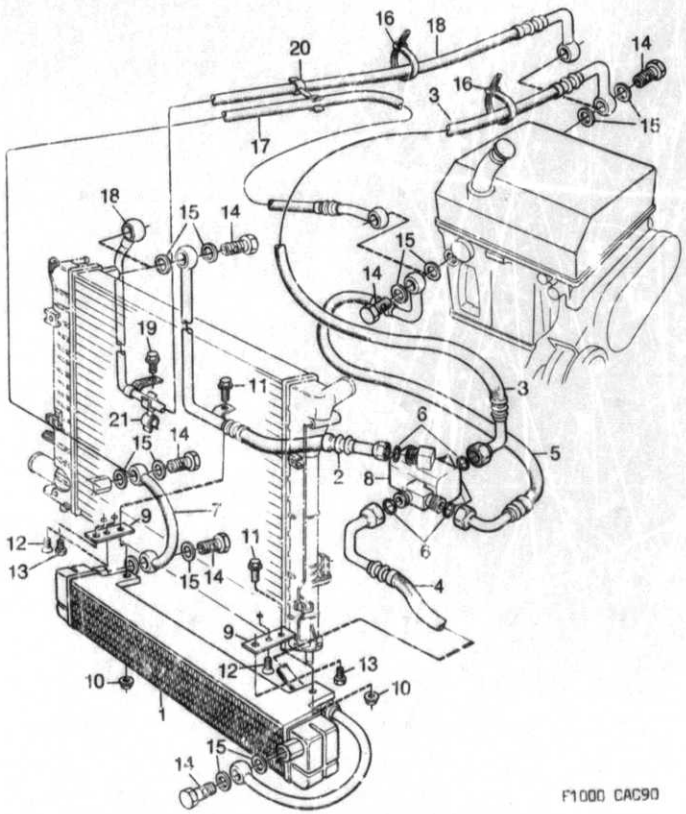

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 98 311			1	Oil cooler	Oljekylare	4
0020	2	75 77 356		TURBO	1	Hydraulic hose	Hydraulslang	3
0030	2	75 77 364		I	1	Hydraulic hose	Hydraulslang	3
0040	3	40 29 294			1	Hydraulic hose	Hydraulslang	3
0050	4	40 29 302			1	Hydraulic hose	Hydraulslang	3
0060	5	40 29 286			1	Hydraulic hose	Hydraulslang	3
0070	6	79 77 580			1	O-ring	O-ring	2
0080	7	75 59 537		TURBO	1	Hydraulic hose	Hydraulslang	4
0090	7	75 70 823		I	1	Hydraulic hose	Hydraulslang	4
0100	8	75 73 777			1	Thermostat	Termostat	3
0110	9	75 70 75.			2	Bracket	Konsol	5
0120	10	79 74 298			2	Nut	Mutter	5
0130	11	79 65 544			2	Screw	Skruv	5
0140	12	73 99 611			2	Screw	Skruv	5
0150	13	73 99 603			2	Screw	Skruv	5
0160	14	*93 01 532*		NLS - USE 4374217	6	Banjo screw	Banjoskruv	5
0170	15	89 81 961			12	Seal	Tätning	5
0180	16	75 53 221			1	Tensioning band	Spännband	5
0190	17	40 29 344		20), B202 I	1	Hydraulic hose	Hydraulslang	3
0200	17	40 29 344		20), TURBO	1	Hydraulic hose	Hydraulslang	3
0210	17	40 29 336		20), TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0220	18	*40 29 310*		20), B202 I NLS - USE 4028862	1	Hydraulic hose	Hydraulslang	3
0230	18	*40 29 310*		20), TURBO NLS - USE 4028862	1	Hydraulic hose	Hydraulslang	3
0240	18	40 29 328		20), TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0250	19	79 69 223			1	Screw	Skruv	5
0260	20	73 98 464			1	Clamp	Klammer	5
0270	21	75 59 768			1	Clip	Clips	5
0280								
0290		75 54 538		TURBO WITH AC See page 2-175, 1-J08	X	Oil cooler kit	Oljekylarsats	4
0300		75 54 546		TURBO WITHOUT AC I See page 2-175, 1-J08	X	Oil cooler kit	Oljekylarsats	4
0310								
0320								
0330								

20. For cars without air oil cooler. För bilar utan luftoljekylare.
62. Ch. --L1013312, --L2009535, --L8001517.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Lamps	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-108

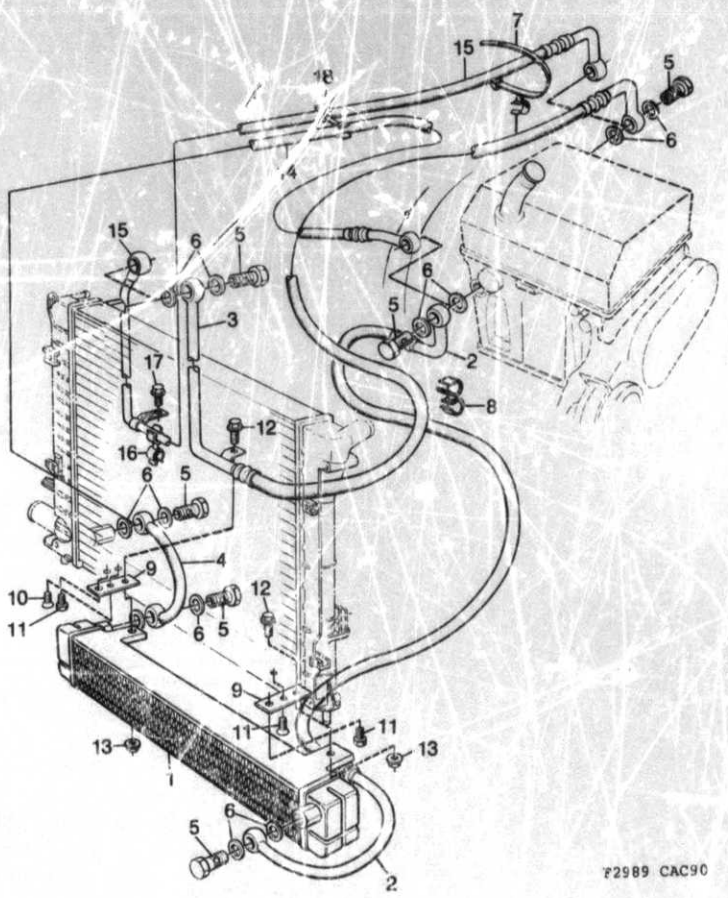

1:10	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 98 311			1	Oil cooler	Oljekylare	4
0020	2	*40 28 890*		101) NLS - USE 4284279	1	Hydraulic hose	Hydraulslang	3
0030	2	42 84 279		102,170)	1	Hydraulic hose	Hydraulslang	3
0040	2	43 57 604		171)	1	Hydraulic hose	Hydraulslang	3
0050	3	40 28 882		1990, I	1	Hydraulic hose	Hydraulslang	3
0060	3	40 28 882		1990, TURBO	1	Hydraulic hose	Hydraulslang	3
0070	3	40 28 874		1990, TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0080	3	40 28 882		1991-	1	Hydraulic hose	Hydraulslang	3
0090	4	75 70 823		1990, I	1	Hydraulic hose	Hydraulslang	4
0100	4	75 70 823		1990, TURBO	1	Hydraulic hose	Hydraulslang	4
0110	4	75 98 537		1990, TURBO, AC	1	Hydraulic hose	Hydraulslang	4
0120	4	75 70 823		1991-	1	Hydraulic hose	Hydraulslang	4
0130	5	*33 01 532*		115) NLS - USE 4374211	6	Banjo screw	Banjoskruv	5
0140	5	*83 22 927*		116) NLS - USE 4374211	6	Banjo bolt	Hålbult	5
0150	6	89 81 961		-1992	12	Seal	Tätning	5
0160	6	41 61 162		1993-	12	Seal	Tätning	5
0170	7	75 93 221			1	Tensioning band	Spännband	5
0180	8	73 98 464			1	Clamp	Klammer	5
0190	9	75 70 757		138)	2	Bracket	Konsol	5
0200	10	73 98 611		138)	2	Screw	Skruv	5
0210	11	73 99 603		138)	2	Screw	Skruv	5
0220	12	79 65 544			2	Screw	Skruv	5
0230	13	79 74 298		138)	2	Nut	Mutter	5
0240	13	79 74 298		139)	1	Nut	Mutter	5
0250	14	40 29 344		20), 1990, B202I	1	Hydraulic hose	Hydraulslang	3
0260	14	40 29 344		20), 1990, TURBO	1	Hydraulic hose	Hydraulslang	3
0270	14	40 29 336		20), 1990, TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0280	14	40 29 344		20), 1991-	1	Hydraulic hose	Hydraulslang	3
0290	15	*40 29 310*		20), 1990, B202I NLS - USE 4028862	1	Hydraulic hose	Hydraulslang	3
0300	15	*40 29 310*		20), 1990, TURBO NLS - USE 4028882	1	Hydraulic hose	Hydraulslang	3
0310	15	40 29 328		20), 1990, TURBO, AC	1	Hydraulic hose	Hydraulslang	3
0320	15	*40 29 310*		1991-,20,138) NLS - USE 4028882	1	Hydraulic hose	Hydraulslang	3
0330	15	40 28 882		20,139)	1	Hydraulic hose	Hydraulslang	3
0340	16	75 59 768		20)	2	Clip	Clips	5
0350	17	79 69 223		20,138)	1	Screw	Skruv	5
0360	17	79 65 544		20,139)	1	Screw	Skruv	5
0370	18	73 98 464		20)	1	Clamp	Klammer	5
0380								
0390		40 28 858		1990, TURBO WITH AC See page 2-175, I-J08	1	Oil cooler kit	Oljekylarsats	4
0400								
0410		40 28 866		TURBO WITHOUT AC, I See page 2-175, 1-J08	1	Oil cooler kit	Oljekylarsats	4
0420								

20. For cars without air oil cooler. För bilar utan luftoljekylare.
63. Ch. L1013313–, L2009536–, L8001518–.
101. Ch. –M1019601.
102. Ch. M1019602–.
115. Ch –N1014970.
116. Ch N1014971–.
138. Ch –N1038973.
139. Ch N1038974–.
170. Ch. –P1027851.
171. Ch. P1027852–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J26
Kits	1-J04

1-I10

Coolant pump
Kylvätskepump
B202

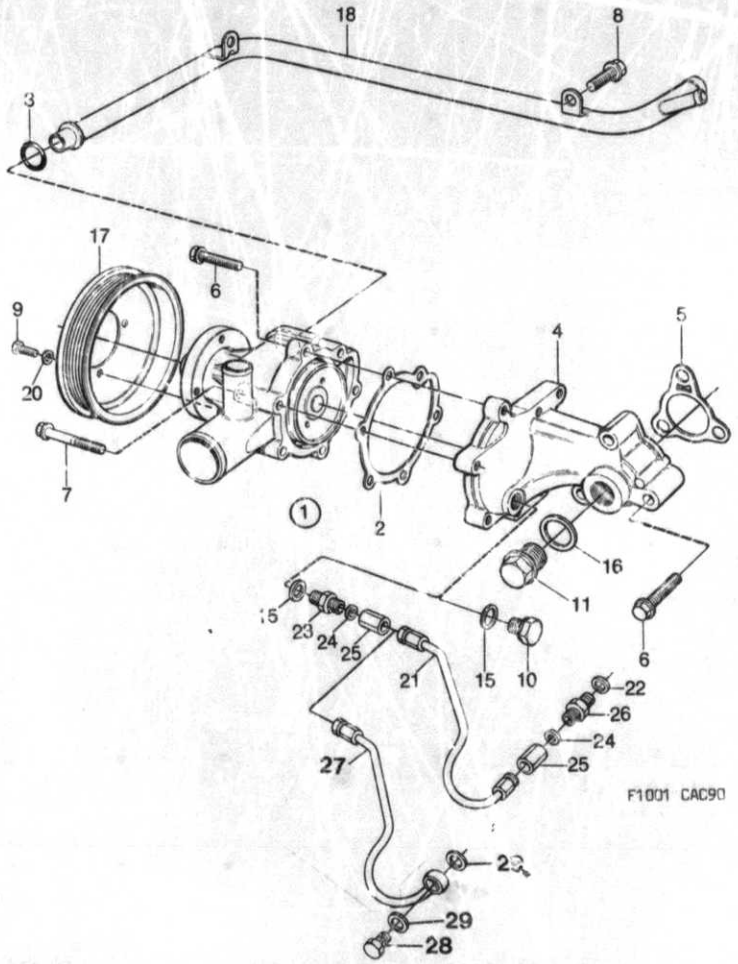

1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 17 918*		7), 1990	1	Coolant pump	Kylvätskepump	2
0020				See page 2-171, 1-J04				
0020				NLS - USE 9321670				
0030	1	93 21 670		7), 1991-	1	Coolant pump	Kylvätskepump	2
0040				See page 2-171, 1-J04				
0050	2	75 66 581			1	▪Gasket	▪Packning	2
0060	3	79 72 690			1	▪O-ring	▪O-ring	2
0070	4	75 07 247			1	Bracket	Konsol	6
0080	5	75 23 897			1	Gasket	Packning	4
0090	6	81 25 197			6	Screw	Skruv	5
0100	7	81 25 239			5	Screw	Skruv	5
0110	8	81 25 148			1	Screw	Skruv	5
0120	9	*50 15 903*		NLS - USE 9166281	4	Screw	Skruv	5
0130	10	*81 23 721*		NLS - USE 9183042	1	Plug	Propp	5
0140	11	81 23 788			1	Plug	Propp	6
0150	15	81 24 141			1	Seal	Tätning	5
0160	16	*81 24 208*		NLS - USE 9116856	1	Gasket	Packning	4
0170	17	93 59 985			1	Pulley	Remskiva	6
0180	18	75 85 565			1	Tube	Rör	5
0190	20	*80 73 223*		-1992 NLS - USE 9166360	4	Washer	Bricka	5
0200	20	91 66 380		1993-	4	Washer	Bricka	5
0210	21	75 02 299		1990, TURBO, TE05	1	Tube	Rör	5
0220	22	81 24 158		1990, TURBO, TE05	2	Gasket	Packning	2
0230	23	75 87 785		1990, TURBO, TE05	1	Nipple	Nippel	3
0240	24	81 32 227		1990, TURBO, TE05	2	Ferrule	Skärring	5
0250	25	81 45 542		1990, TURBO, TE05	2	Nut	Mutter	5
0260	26	75 84 790		1990, TURBO, TE05	1	Nipple	Nippel	5
0270	27	91 14 463		1990, TURBO, T25	1	Tube	Rör	5
0280	27	91 28 018		1991-, TURBO, T25	1	Tube	Rör	5
0290	28	81 23 903		TURBO, T25	1	Banjo screw	Banjoskruv	5
0300	29	81 24 141		TURBO, T25	2	Seal	Tätning	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, control housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-I12

Coolant pump
Kylvätskepump
B234

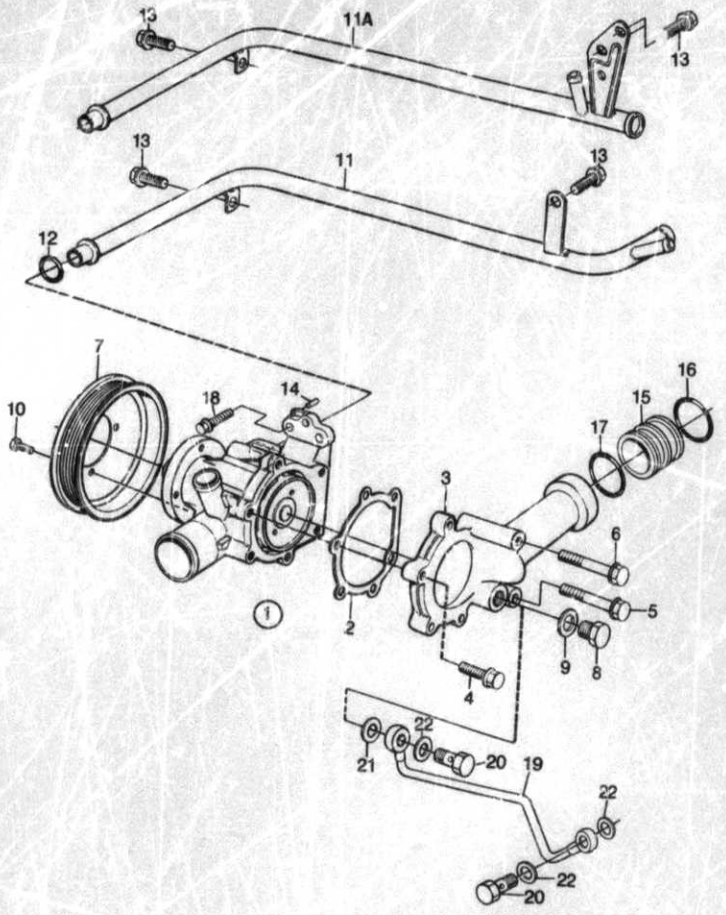

F3305 CAC90

1710	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 19 948*		7), 1990	1	Coolant pump	Kylvätskepump	2
0020				See page 2-171, 1-J04				
0020				NLS - USE 9321688				
0030	1	93 21 688		7), 1991-	1	Coolant pump	Kylvätskepump	2
0040				See page 2-171, 1-J04				
0050	2	91 13 325			1	▲Gasket	▲Packning	2
0060	3	91 14 265			1	Bracket	Konsol	6
0070	4	81 25 189			4	Screw	Skruv	5
0080	5	81 25 247			1	Screw	Skruv	5
0090	6	81 25 270			1	Screw	Skruv	5
0100	7	75 65 104			1	Pulley	Remskiva	6
0110	8	*81 23 721*		NLS - USE 7563042	1	Plug	Propp	5
0120	9	75 22 709			1	Gasket	Packning	1
0130	10	*80 19 903*		NLS - USE 9166281	4	Screw	Skruv	5
0140	11	91 13 358		58)	1	Tube	Rör	5
0150	11A	78 58 921		59)	1	Tube	Rör	5
0160	11A	78 58 921		US	1	Tube	Rör	5
0170	12	79 72 698			1	▲O-ring	▲O-ring	2
0180	13	81 25 007		58)	2	Screw	Skruv	5
0190	13	81 29 892		59)	3	Screw	Skruv	5
0200	13	81 29 892		US	3	Screw	Skruv	5
0210	14	*80 49 405*		-1992 NLS - USE 7918337	1	Tube	Rör	6
0220	14	79 18 337		1993	1	Tube	Rör	5
0230	15	91 13 341			1	Tube	Rör	5
0240	16	*80 46 674*		NLS - USE 9146606	1	▲O-ring	▲O-ring	2
0250	17	80 46 682			1	▲O-ring	▲O-ring	2
0260	18	81 25 197			3	Screw	Skruv	5
0270	19	91 14 083		TURBO T25	1	Tube	Rör	6
0280	19	91 37 928		TURBO TD04	1	Tube	Rör	5
0290	20	81 23 903		TURBO T25	2	Banjo screw	Banjoskruv	5
0300	20	91 36 524		TURBO TD04	2	Banjo screw	Banjoskruv	5
0310	21	*83 26 712*		TURBO NLS - USE 4161162	1	Seal	Tätning	5
0320	22	81 24 141		TURBO T25	3	Seal	Tätning	5
0330	22	81 24 133		TURBO TD04	3	Gasket	Packning	5

7 Also available as exchange unit. Finns även som utbytesenhet.
58. Engine --L206394.
59. Engine L206395--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

1-I14

Thermostat, etc

Termostat, etc

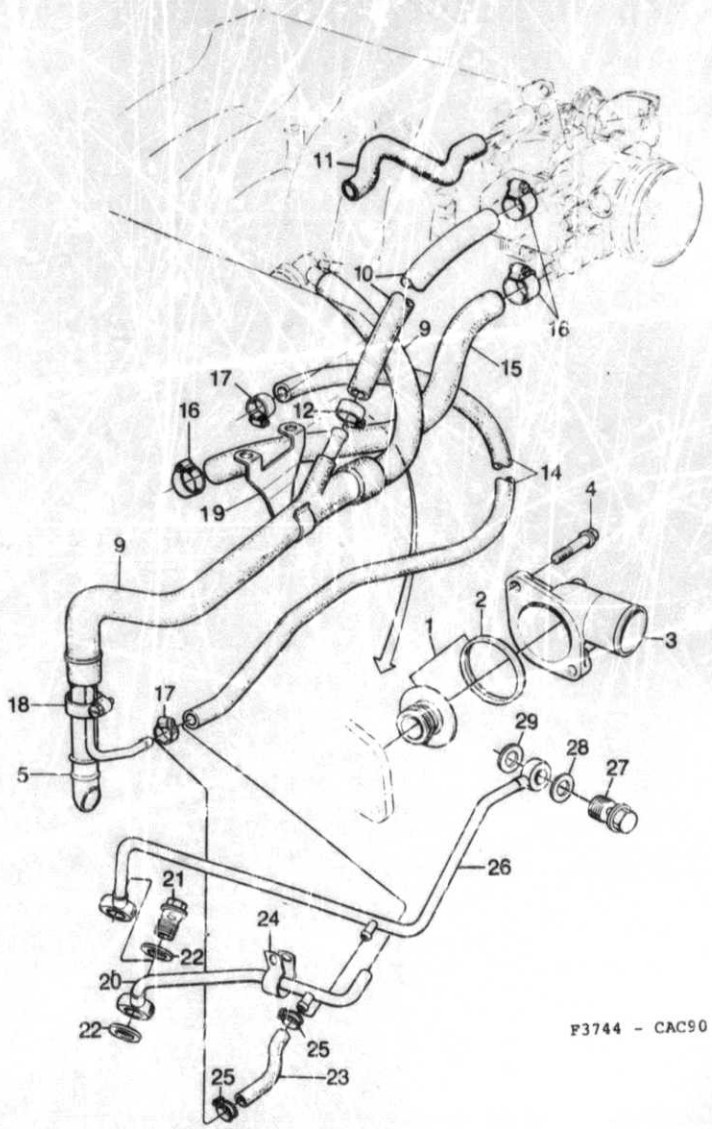

F3744 - CAC90

1750	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*88 17 298*		89° C	1	Thermostat kit	Termostatsats	1
0020				See page 2-171, 1-J04				
0020				NLS - USE 8822025				
0030	1	88 17 538		82° C	1	Thermostat kit	Termostatsats	1
0040				See page 2-171, 1-J04				
0050	2	83 52 692			1	Gasket	Packning	2
0060	3	91 17 508			1	Cover	Lock	5
0070	4	81 26 189			2	Screw	Skruv	5
0080	5	75 88 551		-1992	1	Tube	Rör	5
0090	5	91 34 487		1993	1	Tube	Rör	5
0100	9	75 61 756		B202 I	1	Hose	Slang	4
0110	9	75 19 897		TURBO	1	Hose	Slang	4
0120	10	75 20 018		B202 TURBO	1	Hose	Slang	4
0130	10	75 19 531		B234 TURBO	1	Hose	Slang	4
0140	10	75 20 034		1990, B202 I	1	Hose	Slang	4
0150	10	78 73 045		1991-,135), B202 I	1	Hose	Slang	5
0160	10	75 20 034		136), B202 I	1	Hose	Slang	4
0170	11	87 86 568		58), B234 I	1	Hose	Slang	4
0180	11	91 07 640		59), B234 I	1	Hose	Slang	4
0190	11	91 07 640		B234 I, US	1	Hose	Slang	4
0200	12	79 63 515		1990	1	Hose clamp	Slangklamma	5
0210	12	83 59 275		1991-	1	Hose clamp	Slangklamma	5
0220	14	75 20 026		I	1	Hose	Slang	4
0230	14	75 67 514		1990, TURBO TE05	1	Hose	Slang	5
0240	14	75 67 514		75), TURBO T25	1	Hose	Slang	5
0250	15	75 20 034		B202	1	Hose	Slang	4
0260	15	91 17 607		58), B234 I	1	Hose	Slang	4
0270	15	91 07 632		59), B234 I	1	Hose	Slang	4
0280	15	91 07 632		B234 I, US	1	Hose	Slang	4
0290	15	91 06 998		B234 TURBO	1	Hose	Slang	4
0300	16	40 87 649			3	Hose clamp	Slangklamma	5
0310	17	83 59 275		I	2	Hose clamp	Slangklamma	5
0320	17	79 63 515		TURBO	2	Hose clamp	Slangklamma	5
0330	18	79 63 523			1	Hose clamp	Slangklamma	5
0340	19	*75 19 788*		1990 NLS - USE 9125832	1	Bracket	Konsol	6
0350	19	*75 19 788*		1991-, I NLS - USE 9125832	1	Bracket	Konsol	6
0360	19	91 25 832		1991-,125), TURBO	1	Bracket	Konsol	6
0370	20	91 16 369		1990, TURBO, TE05	1	Tube	Rör	5
0380	20	91 14 489		75), TURBO, T25	1	Tube	Rör	5
0390	21	75 83 628		TURBO	1	Screw	Skruv	5
0400	22	81 24 158		TURBO	2	Gasket	Packning	2
0410	23	91 16 765		TURBO	1	Hose	Slang	4
0420	24	75 83 461		1990, TURBO TE05	1	Clamp	Klammer	5
0430	24	75 83 461		75), TURBO T25	1	Clamp	Klammer	5
0440	25	83 59 275		-1990, TURBO	2	Hose clamp	Slangklamma	5
0450	25	79 68 308		1991-, TURBO	2	Hose clamp	Slangklamma	5
0460				ALT TO 89 75 237				
0470	26	*91 14 109*		76)-1992, TURBO T25 NLS - USE 9138744	1	Tube	Rör	5
0480	26	*91 14 109*		1993, B202, TURBO T25 NLS - USE 9138744	1	Tube	Rör	5
0490	26	91 38 744		1993, B234, TURBO T25	1	Tube	Rör	5
0500	26	91 38 785		1993, B234, TURBO TD04	1	Tube	Rör	5
0510	27	81 23 903		76), TURBO	1	Banjo screw	Banjoskruv	5
0520	28	81 24 141		76), TURBO	1	Seal	Tätning	5


58. Engine --L206394.
59. Engine L206395--.
75. Engine --L069576.
76. Engine L069577--.
125. Engine --N324515 B202, Engine --N1[illegible]5661 B234.
135. Engine --N337173.
136. Engine N337174--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

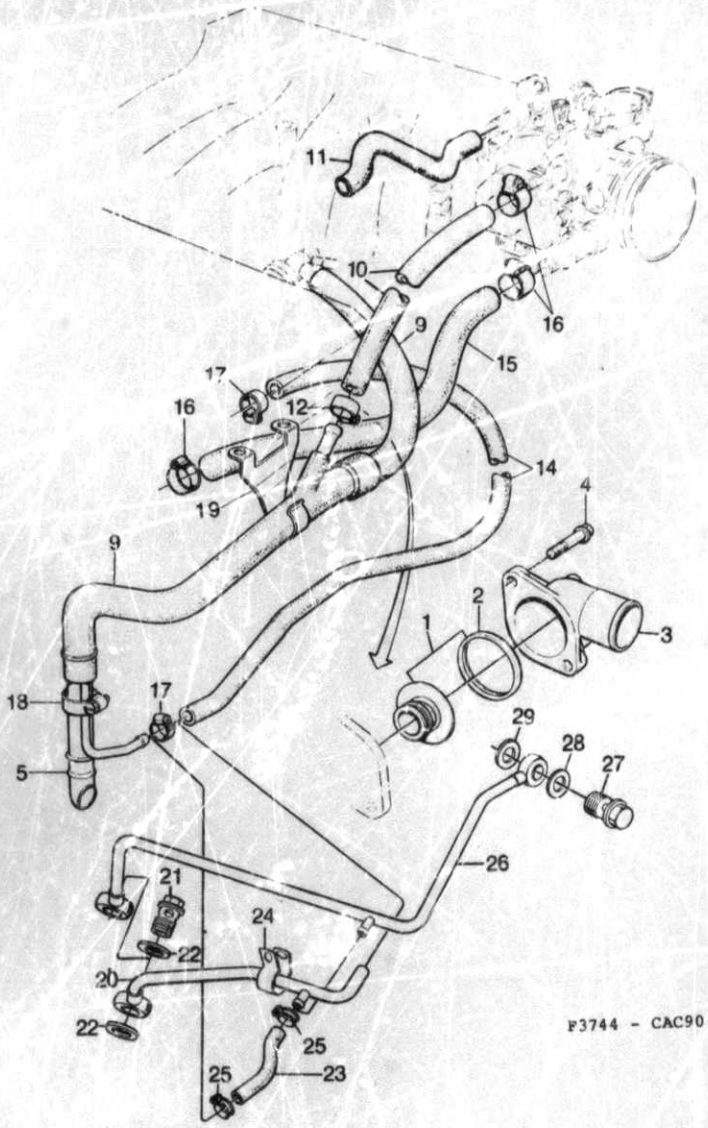

F3744 - CAC90

1750 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530 29	*83 26 712*		76), TURBO NLS - USE	1	Seal	Tätning	5
0530			4150162				

76. Engine L069577-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-A02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

1-I18

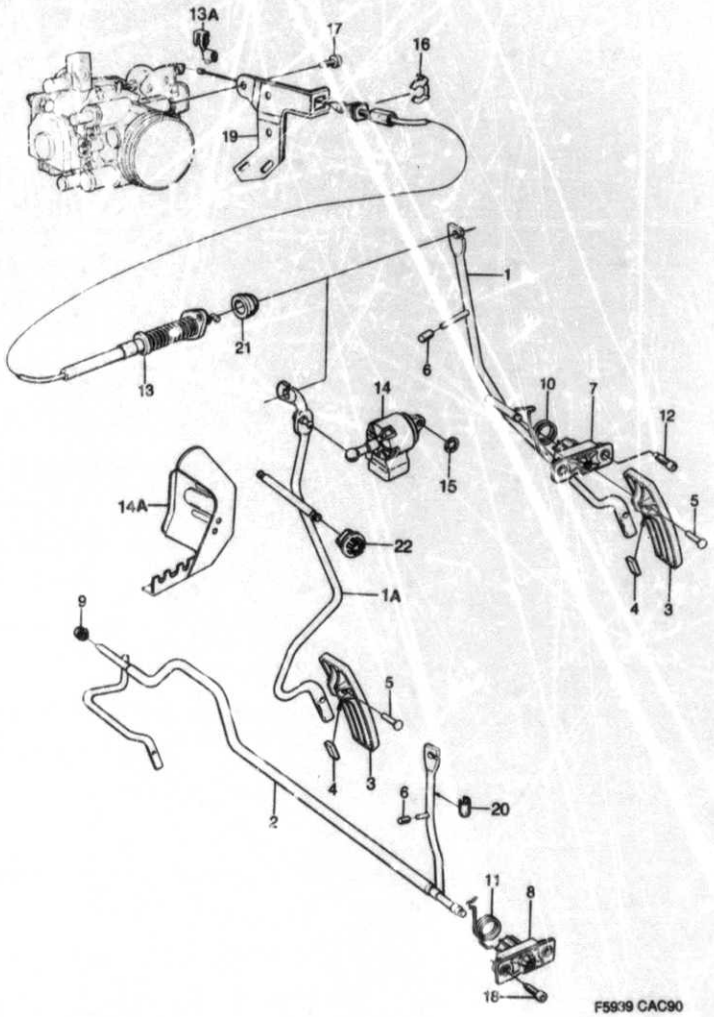

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 67 903			1	Accelerator arm	Gaspedalarm	6
0020	1A	40 00 386		ETS	1	Accelerator arm	Gaspedalarm	6
0030	2	89 72 176		RHD	1	Accelerator arm	Gaspedalarm	6
0040	2	41 05 276		RHD, ETS	1	Accelerator arm	Gaspedalarm	6
0050	3	71 83 965			1	Pedal plate	Pedalplatta	5
0060	4	71 83 973			1	Spacer	Mellanlägg	6
0070	5	79 58 770			1	Rivet	Nit	5
0080	6	89 50 396			1	Absorber	Dämpare	5
0090	7	89 60 924			1	Bearing centre	Lagercentrum	6
0100	8	89 60 924		RHD	1	Bearing centre	Lagercentrum	6
0110	9	89 57 565		RHD	1	Plastic bushing	Plastbussning	6
0120	10	89 60 080		M	1	Spring	Fjäder	5
0130	10	89 65 949		A	1	Spring	Fjäder	5
0140	11	89 60 080		RHD WITHOUT ETS	1	Spring	Fjäder	5
0150	12	89 61 195			2	Screw	Skruv	5
0160	13	75 36 444		42), M, B202	1	Cable	Kabel	3
0170	13	40 18 289		43), M, B202	1	Throttle control cable	Gasreglagewire	3
0180	13	89 80 922		1991-, M, B202, ETS	1	Throttle control cable	Gasreglagewire	3
0190	13A	40 18 172			1	▪Clamp	▪Klämma	5
0200	13	*41 60 248*		1991-, M, B202, ETS, RHD NLS	1	Cable	Kabel	3
0200								
0210	13A	40 18 172			1	▪Clamp	▪Klämma	5
0220	13	40 18 263		-1990, M, B234	1	Throttle control cable	Gasreglagewire	3
0230	13	41 61 907		1991-, M, B234	1	Throttle control cable	Gasreglagewire	3
0240	13	40 22 737		1991-, M, B234, ETS	1	Throttle control cable	Gasreglagewire	3
0250	13A	40 18 172			1	▪Clamp	▪Klämma	5
0260	13	40 18 313		1991-, M, B234, ETS, RHD	1	Throttle control cable	Gasreglagewire	3
0270	13A	40 18 172			1	▪Clamp	▪Klämma	5
0280	13	75 36 451		42), A, B202	1	Cable	Kabel	3
0290	13	40 18 297		43), A, B202	1	Throttle control cable	Gasreglagewire	3
0300	13	40 18 271		-1990, A, B234	1	Throttle control cable	Gasreglagewire	3
0310	13	41 61 915		1991-, A, B234	1	Throttle control cable	Gasreglagewire	3
0320	14	40 15 194		ETS, M	1	Pedal sensor	Pedalgivare	5
0330	14	41 61 238		ETS, A	1	Pedal sensor	Pedalgivare	5
0340	14A	44 26 532		RHD, ETS	1	Protection	Skydd	6
0350	15	40 15 574		ETS	1	Lock ring	Låsring	5
0360	16	75 33 136		ETS	1	Lock ring	Säkringsring	5
0370	17	79 71 294		-1992	3	Screw	Skruv	5
0380	17	79 72 607		1993	3	Screw	Skruv	5
0390	18	89 61 195		RHD	2	Screw	Skruv	5
0400	19	75 66 292		-1992, B202	1	Bracket	Konsol	6
0410	19	75 66 292		1993, B202	1	Bracket	Konsol	6
0420	19	43 91 553		1993, B202, TCS	1	Bracket	Konsol	5
0430	19	74 82 300		1990, B234	1	Bracket	Konsol	6
0440	19	91 26 939		1991-1992, B234	1	Bracket	Konsol	5
0450	19	91 26 939		1993, B234	1	Bracket	Konsol	5
0460	19	43 91 561		1993, B234, TCS	1	Bracket	Konsol	5
0470	20	41 90 021		RHD, ETS	1	Absorber	Dämpare	5
0480	21	75 36 501			1	Bushing	Bussning	5
0490	22	89 33 392		ETS	2	Plastic bushing	Plastbussning	5


42. Ch. --L1005374, --L2003856.
43. Ch. L1005375--, L2003857--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

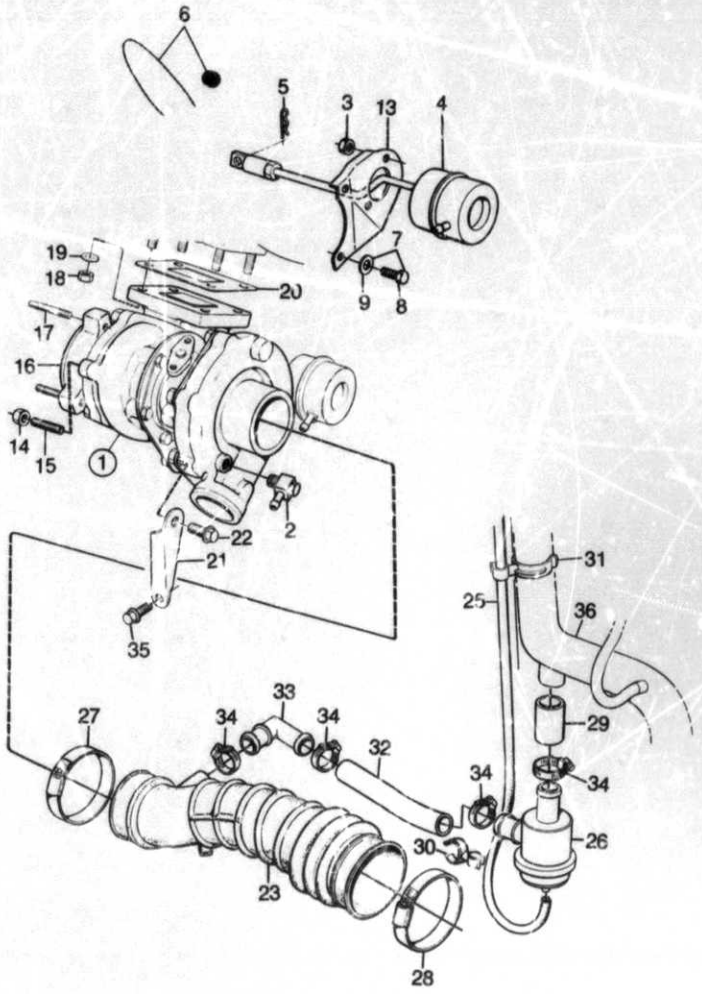

F4443 CAC90

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*74 86 095*		5,7,66,103), EU NLS - USE 8788796	1	Turbocharger	Turbokompressor	4
0010						Turbocharger	Turbokompressor	4
0020	1	87 88 796		5,7,67,103), EU	1	Turbocharger	Turbokompressor	4
0030	1	87 88 796		5,7,103), ME	1	Turbocharger	Turbokompressor	4
0040	2	87 87 319			1	. Nipple	. Nippel	3
0050	3	93 60 513			2	. Nut	. Mutter	5
0060	4	87 87 269		88)	1	. Pressure regulator	. Tryckregulator	4
0070	4	88 58 094		89)	1	. Pressure regulator	. Tryckregulator	4
0080	5	89 25 067			1	.. Lock needle	.. Låsnål	5
0090	6	88 18 569			1	.. Sealing kit	.. Plomberingssats	2
0100	7	87 88 754			1	.. Screw	.. Skruv	5
0110	8	*87 87 277*		NLS - USE 8788754	2	... Screw	... Skruv	5
0120	9	*87 87 285*		NLS	2	... Washer	... Bricka	5
0130	13	75 65 583			1	. Bracket	. Fäste	5
0140	14	75 19 432			5	. Nut	. Mutter	5
0150	15	75 65 716			5	. Stud	. Pinnskruv	5
0160	16	87 87 335			1	. Cover	. Lock	5
0170	17	75 20 224			2	Stud	Pinnskruv	5
0180	18	75 21 321			4	Nut	Mutter	5
0190	19	*80 30 009*		NLS - USE 7985179	4	Washer	Bricka	5
0200	20	83 66 262			1	Gasket	Packning	2
0210	21	74 84 850			1	Stay	Stag	5
0220	22	81 25 148			1	Screw	Skruv	5
0230	23	75 91 928			1	Hose	Slang	5
0240	25	91 36 243		L=600 MM	1	Vaccum hose	Vakuumslang	5
0250	26	09 61 904			1	Valve	Ventil	2
0260	27	79 70 148			1	Hose clamp	Slangklamma	5
0270	28	79 70 155			1	Hose clamp	Slangklamma	5
0280	29	75 91 936			1	Hose	Slang	4
0290	30	73 98 407			1	Clamp	Klammer	5
0300	31	73 98 415			1	Clamp	Klämma	5
0310	32	75 91 944			1	Hose	Slang	4
0320	33	75 91 951			1	Nipple	Nippel	5
0330	34	*79 77 234*		NLS - USE 7970098	5	Hose clamp	Slangklamma	5
0340	35			See page 2-039, 1-D16		Screw	Skruv	
0350								
0360	36			See page 2-143, 1-H24		Pipe	Rör	
0370								
0380		88 18 569		See page 2-175, 1-J08	X	Sealing kit	Plomberingssats	2
0390								
0400		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
66. Engine --L051963.
67. Engine L051964-.
88. Part of 74 86 095. Del av 74 86 095.
89. Part of 87 88 796. Del av 87 88 796.
103. With basic charging pressure. Med grundladdtryck.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

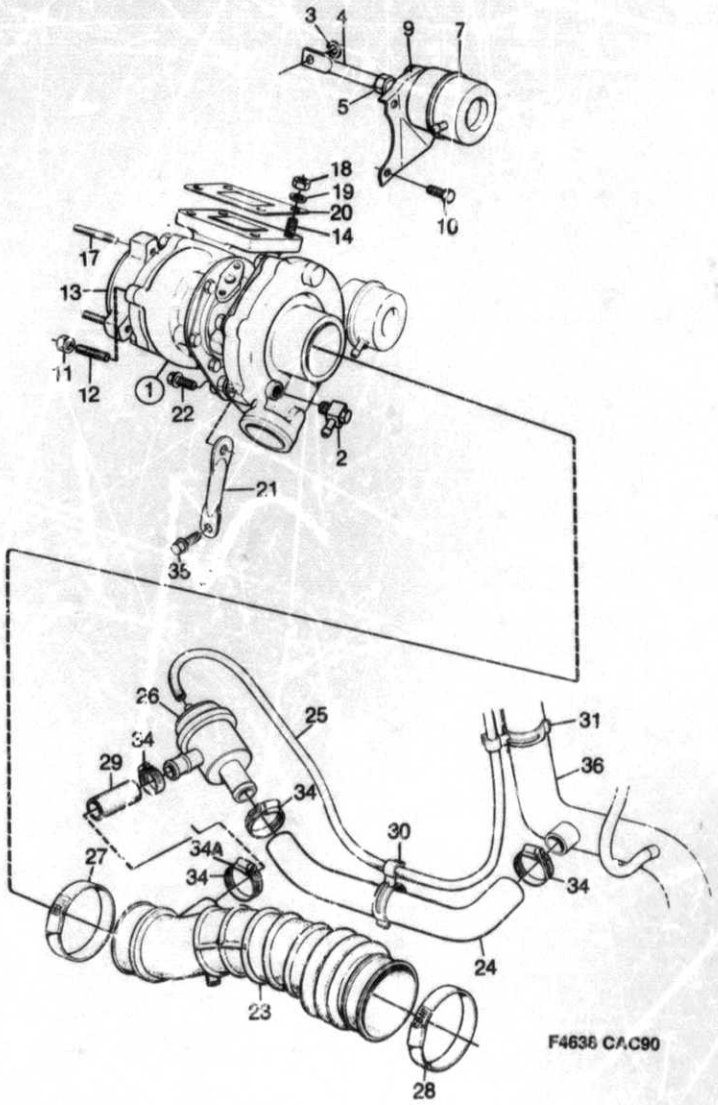

F4638 CAC90

1855	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 88 796		5,7,103), 1990, EU, ME	1	Turbocharger	Turbokompressor	4
0020	1	91 19 322		4,7,103), 1990	1	Turbocharger	Turbokompressor	4
0030	1	91 13 903		5,7,103), GB, 1990	1	Turbocharger	Turbokompressor	4
0040	1	78 72 096		4,7,103), 1991-, B202	1	Turbocharger	Turbokompressor	4
0050	1	78 72 088		5,7,103), 1991-, B202	1	Turbocharger	Turbokompressor	4
0060	1	91 26 343		4,7,103), 1991-,B234,T25	1	Turbocharger	Turbokompressor	4
0070	1	91 39 551		4,7,103), B234R, TD04	1	Turbocharger	Turbokompressor	4
0080								
0090	2	87 87 319		104)	1	.Nipple	.Nippel	3
0100	2	75 65 591			1	.Nipple	.Nippel	3
0110	3	93 50 505			1	.Spring clip	.Spårryttare	2
0120	4	88 58 110		110)	1	.End piece	.Ändstycke	3
0130	5	88 58 128		110)	1	.Nut	.Mutter	5
0140	7	88 58 094		104)	1	.Pressure regulator	.Tryckregulator	4
0150	7	88 58 086		105)	1	.Pressure regulator	.Tryckregulator	4
0160	7	88 58 144		106)	1	.Pressure regulator	.Tryckregulator	4
0170	7	91 26 913		107)	1	.Pressure regulator	.Tryckregulator	4
0180	7	91 26 921		108,109)	1	.Pressure regulator	.Tryckregulator	4
0190	7	91 67 727		167)	1	.Pressure regulator	.Tryckregulator	4
0200	9	75 65 583		104)	1	.Bracket	.Fäste	5
0210	10	88 58 102		110)	2	.Screw	.Skruv	5
0220	10	80 82 935		167)	2	.Screw	.Skruv	5
0230	10A	79 15 672		167) NLS	2	.Washer	.Bricka	5
0240	11	75 19 432		105,106), 1990	5	.Nut	.Mutter	5
0250	12	88 58 151		105,106)	5	.Stud	.Pinnskruv	5
0260	12	75 65 716		104)	5	.Stud	.Pinnskruv	5
0270	13	91 13 929		105,106)	1	.Cover	.Lock	5
0280	13	87 87 335		104)	1	.Cover	.Lock	5
0290	14	75 20 190		T25	4	Stud	Pinnskruv	5
0300	14	93 57 138		TD04	4	Screw	Skruv	5
0310	17	75 20 190		1990	3	Stud	Pinnskruv	5
0320	17	91 07 996		1991-, T25	3	Stud	Pinnskruv	5
0330	17	91 41 730		TD04	3	Screw	Skruv	5
0340	18	91 16 674			4	Nut	Mutter	5
0350	19	80 29 985		-1992	4	Washer	Bricka	5
0360	19	91 66 372		1993	4	Washer	Bricka	5
0370	20	91 13 937			1	Gasket	Packning	2
0380	21	91 14 547		B202	1	Stay	Stag	5
0390	21	88 57 070		B234, T25	1	Stay	Stag	5
0400	21	91 25 717		B234, TD04	1	Stay	Stag	5
0410	22	81 25 148			1	Screw	Skruv	5
0420	23	41 56 774		B202	1	Hose	Slang	5
0430	23	41 56 766		21), B202	1	Hose	Slang	5
0440	23	40 20 822		-1992, B234	1	Hose	Slang	5
0450	23	41 63 432		1993, B234	1	Hose	Slang	4
0460	23	40 21 473		21), B234	1	Hose	Slang	5
0470	24	40 23 875		-1992	1	Hose	Slang	4
0480	24	40 23 875		1993	1	Hose	Slang	4
0490	24	75 91 936		1993, B234	1	Hose	Slang	4


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
21. Cars with electronic EGR. Bilar med elektronisk EGR.
103. With basic charging pressure. Med grundladdtryck.
104. Part of 87 88 796. Del av 87 88 796.
105. Part of 91 19 322. Del av 91 19 322.
106. Part of 91 13 903. Del av 91 13 903.
107. Part of 78 72 096. Del av 78 72 096.
108. Part of 78 72 088. Del av 78 72 088.
109. Part of 91 26 343. Del av 91 26 343.
110. Part of 9119322, 9113903, 7872096, 7872088 and 9126343. Del av 9119322, 9113903, 7872096, 7872088 och 9126343.
167. Part of 91 39 551. Del av 91 39 551.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-I20
Kits	1-J04

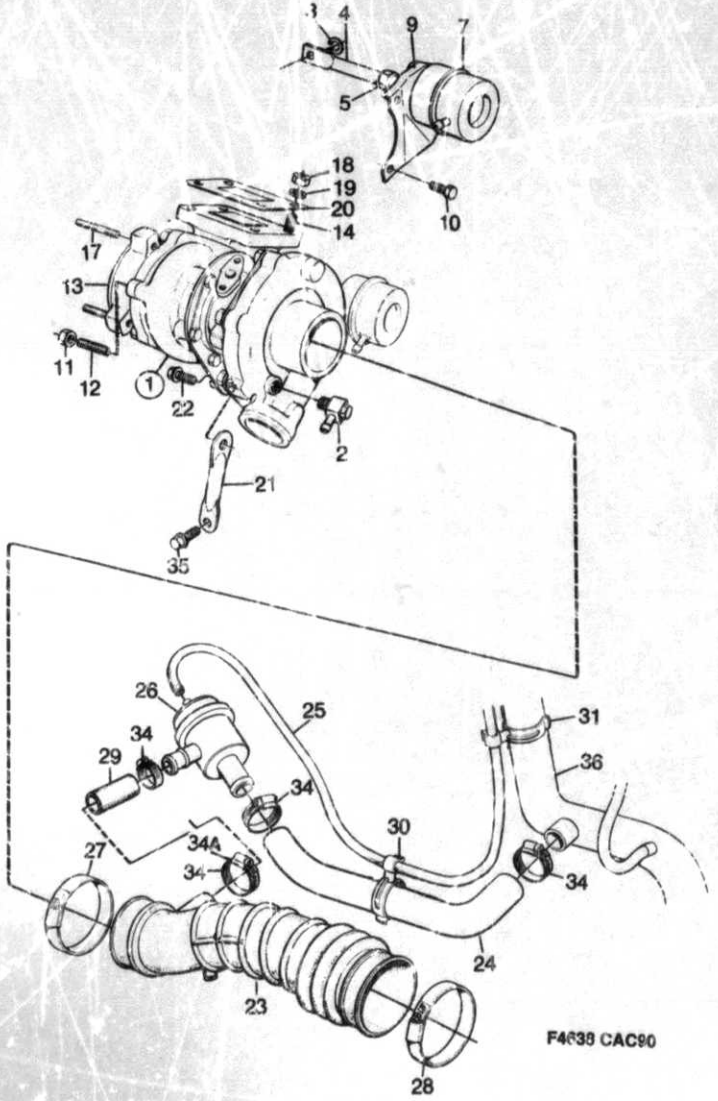

F4638 CAC90

1855	Pos	Part No/Artikel	K S	Notes/Anmärkningar	Qty/Antal		Description	Benämning	S L
0500	25	91 36 243		1990, L=900 MM	1		Vacuum hose	Vakuumslang	5
0510	25	91 36 243		112), 19[illegible]1992, L=650MM	1		Vacuum hose	Vakuumslang	5
0520	25	91 36 243		112), 1993-, L=650 MM	1		Vacuum hose	Vakuumslang	5
0530	25	91 36 243		1993, B202S, L=1250 MM	1		Vacuum hose	Vakuumslang	5
0540	26	*93 90 022*		143,178) NLS - USE 4441895	1		Valve	Ventil	2
0550	26	43 91 157		144,179)	1		Valve	Ventil	2
0560	27	79 70 148			1		Hose clamp	Slangklamma	5
0570	28	79 70 155			1		Hose clamp	Slangklamma	5
0580	29	41 63 432		1993, B234	1		Hose	Slang	4
0590	30	73 98 407			1		Clamp	Klämmer	5
0600	31	73 98 415			1		Clamp	Klämma	5
0610	34	*79 77 234*		-1991 NLS - USE 7970098	5		Hose clamp	Slangklamma	5
0620	34	79 70 098		1992-	5		Hose clamp	Slangklamma	5
0630	34	79 70 098		B202S	3		Hose clamp	Slangklamma	5
0640	34A	79 82 937		B202S	1		Hose clamp	Slangklamma	5
0650	35	81 26 148		B234	1		Screw	Skruv	5
0660	35			B202	1		Screw	Skruv	
0670				See page 2-039, 1-D16					
0680	36			See page 2-143, 1-H24			Pipe	Rör	
0690									
0700		88 18 569		See page 2-175, 1-J08	X		Sealing kit	Plomberingssats	2
0710									
0720		91 36 243		L=5000 MM	X		Vacuum hose	Vakuumslang	5

112. Without TCS. Utan TCS.
143. Ch -N1040436.
144. Ch N1040437-.
179. See SI 241-1415. Se SI 241-1415.


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

2 GROUP INDEX

Engine body 1-C10
Lubrication system 1-D16
Fuel system 1-E02
Inlet and exhaust system 1-F14
Cooling system 1-H14
Engine control 1-I18
Supercharging system 1-I20
Kits 1-J94

1-J02

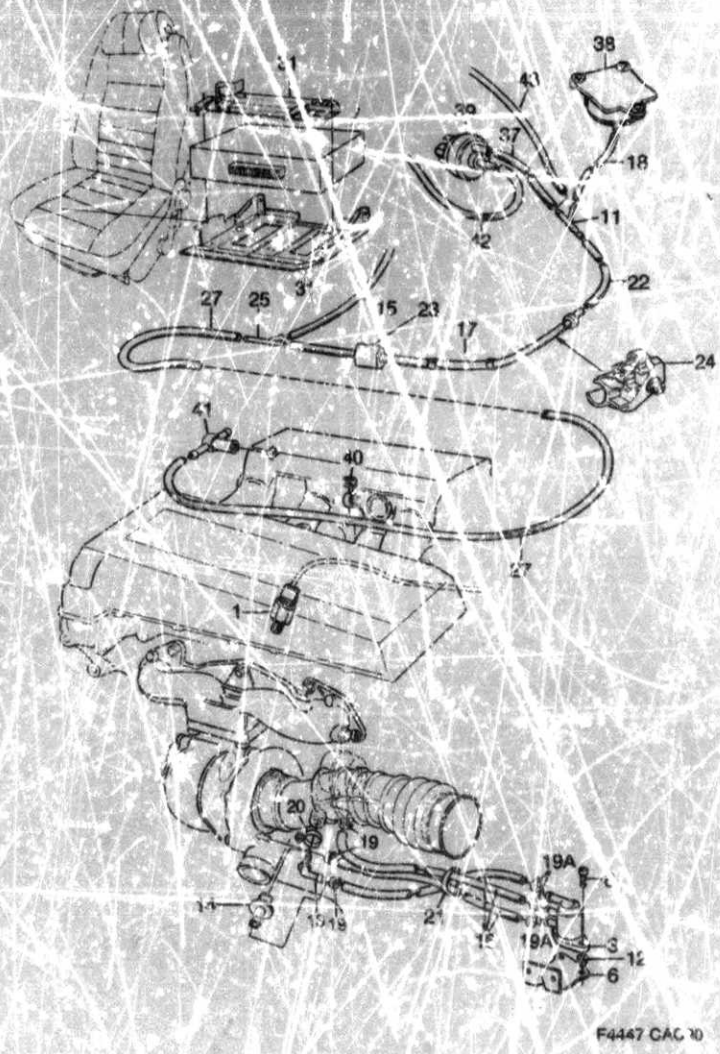

F4447 CAC 00

1990	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 68 801			1	Knock sensor	Knacksensor	3
0020	1	75 85 755		DI	1	Knock sensor	Knacksensor	3
0030	3	74 85 576			1	Solenoid valve	Magnetventil	3
0040	4			See page 3A-027, 2-B04	1	Electronic unit	Elektronikenhet	
0050	6	89 78 678			1	Bracket	Konsol	5
0060	7	79 72 045		NLS - USE 7961659	2	Rivet	Nit	5
0070	8	80 59 420			2	Screw	Skruv	5
0080	11	85 09 002		1990	1	Tube	Rör	2
0090	12	79 73 456			2	Expanding nut	Expanderande mutter	5
0100	15	*93 42 270*		1990 NLS - USE 4160263	1	Nipple	Nippel	3
0110	14	41 60 263		1991-1993	1	Nipple	Nippel	3
0120	15			See page 2-163, 1-I22		Hose	Slang	
0130				See page 2-165, 1-I22				
0140	15			ETS		Hose	Slang	
0150				See page 2-109, 1-G14				
0160	16	89 78 637		1990, B202, T25	1	Hose	Slang	3
0170	16	40 16 888		B202, T25	1	Hose	Slang	3
0180	16	40 22 224		B234	1	Hose	Slang	3
0190	16	40 34 828		B234R	1	Hose	Slang	3
0200	17	40 15 897			1	Hose	Slang	5
0210	18	91 36 243		1990, L=70 MM	1	Vacuum hose	Vakuumslang	5
0220	19	79 73 522			3	Hose clamp	Slangklämma	5
0230	19A	79 73 522		-1992	3	Hose clamp	Slangklämma	5
0240	20	79 74 009		-1992 NLS	1	Hose clamp	Slangklämma	5
0250	20	79 74 008		1993 NLS	1	Hose clamp	Slangklämma	5
0260	20	79 70 050		1993, B234	1	Hose clamp	Slangklämma	5
0270	21	79 71 864			1	Tensioning band	Spännband	5
0280	22	93 48 560		1990	1	Hose	Slang	5
0290	22	91 36 243		1990, THD, L=1000 MM	1	Vacuum hose	Vakuumslang	5
0300	23			Plug		Plug	Plugg	
0310				See page 8A-019, 5-A20				
0320	24	89 78 336		1991	1	Pipe clip	Rörklämma	5
0330	24	42 81 317		1992-	1	Pipe clip	Rörklämma	5
0340	25	85 09 002			1	Tube	Rör	2
0350	25	85 08 378		1992, B202S	1	Junction pipe	Skarvrör	5
0360	27	91 36 243		1992, L=650 MM	1	Vacuum hose	Vakuumslang	5
0370	27	91 36 243		1993, L=650 MM	1	Vacuum hose	Vakuumslang	5
0380	27	91 36 243		1993, B202S, L=1250 MM	1	Vacuum hose	Vakuumslang	5
0390	31			See page 3A-189, 2-H22	1	Bracket	Fäste	
0400	37	91 36 243		5), 1990, L=140 MM	1	Vacuum hose	Vakuumslang	5
0410	39			1990	1	Sensor	Givare	
0420				See page 3A-027, 2-B04				
0430	39			1990	1	Pressure monitor	Tryckvakt	
0440				See page 3A-101, 2-E06				
0450	40	73 98 415			1	Clamp	Klämma	5
0460	41			See page 2-065, 1-F14	1	Nipple	Nippel	
0470				See page 2-037, 1-F16	1			
0480	42	91 36 243		5), 1990, L=600 MM	1	Vacuum hose	Vakuumslang	5
0490	43	91 36 243		1990, L=600 MM	1	Vacuum hose	Vakuumslang	5
0500								
0510		91 36 243		L=5000 MM	X	Vacuum hose	Vakuumslang	5

5. Without catalytic converter. Utan katalytisk reaktor.

SAAB Automobile AB, Trollhättan, Sweden. Alla rättigheter förbehålles. Copyright reserved.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, cabinet housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX


Engine body	1-C10
Lubrication system	1-E16
Fuel system	1-E32
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-H18
Supercharging system	1-J02
Kits	1-J04


1-J04

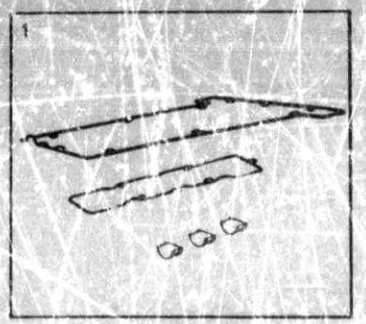


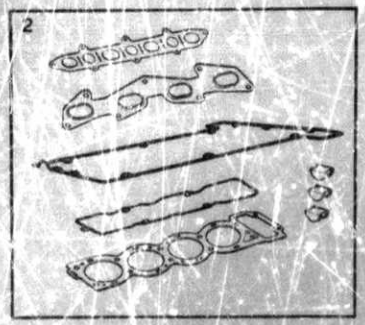

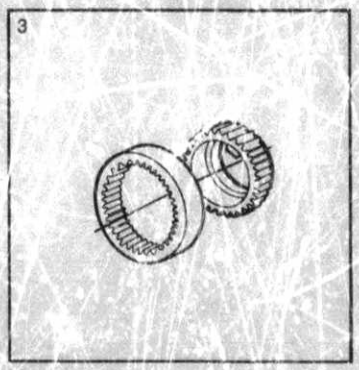

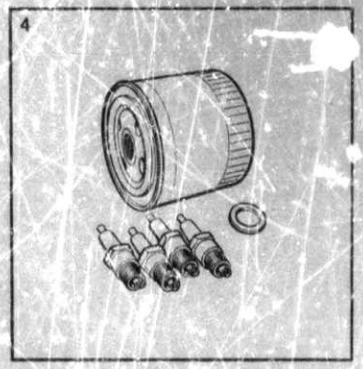

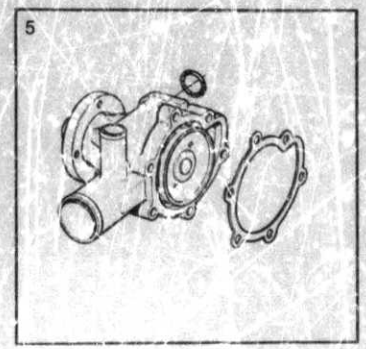

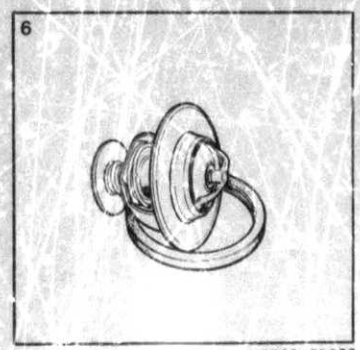

F2735 CAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*88 18 254*		40) NLS - USE 8822041	X	Gasket kit	Packningssats	1
0020		*75 58 056*		NLS - USE 9133026	1	.Gasket	.Packning	1
0030		75 23 962			1	.Gasket	.Packning	1
0040		75 00 069			3	.Plug	.Plugg	2
0050								
0060	1	93 21 464		41)	X	Gasket kit	Packningssats	1
0070		75 23 962			1	.Gasket	.Packning	1
0080		75 69 304			1	.Gasket	.Packning	1
0090								
0100	2	98 19 831		B202	X	Gasket kit	Tätningssats	2
0110		75 [illegible] 436			1	.Gasket	.Packning	2
0120		75 18 996			1	.Gasket	.Packning	2
0130		*75 67 301*		NLS - USE 9169079	1	.Cylinder head gasket	.Cylinderhuvpackning	2
0140		*88 18 254*		NLS - USE 8822041	1	.Gasket kit	.Packningssats	1
0150								
0160	2	93 21 605		B234	X	Gasket kit	Tätningssats	2
0170		*75 85 045*		NLS - USE 9169079	1	.Gasket	.Packning	2
0180		75 18 996			1	.Gasket	.Packning	2
0190		91 26 277			1	.Gasket	.Packning	2
0200		93 21 464			1	.Gasket kit	.Packningssats	1
0210								
0220	3	*88 17 561*		-1991 NLS - USE 9321779	X	Pump kit	Pumpsats	5
0230		75 15 588		1)	1	.Pump rotor	.Pumphjul	5
0240		*75 [illegible] 896*		1) NLS - USE 9127366	1	.Pump rotor	.Pumphjul	5
0250								
0260	3	*88 17 561*		1992- NLS - USE 9321779	X	Pump kit	Pumpsats	5
0270		75 15 588		1)	1	.Pump rotor	.Pumphjul	5
0280		91 27 366		1)	1	.Pump rotor	.Pumphjul	5
0290								
0300	4	88 19 138		B202 TURBO DI	X	Service kit	Servicesats	1
0310		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0320		87 18 439			1	.Gasket	.Packning	3
0330		91 12 541			4	.Spark plug	.Tändstift	1
0340								
0350	4	88 19 138		B234 TURBO	X	Service kit	Servicesats	1
0360		87 24 141			1	.Seal	.Tätning	5
0370		91 12 541			4	.Spark plug	.Tändstift	1
0380		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0390								
0400	4	88 19 364		-1991, B202 I	X	Service kit	Servicesats	1
0410		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0420		87 24 141			1	.Seal	.Tätning	5
0430		87 13 439			1	.Gasket	.Packning	3
0440		91 10 385			4	.Spark plug	.Tändstift	1
0450								
0460	4	93 21 746		1992-, B202 I	X	Service kit	Servicesats	1
0470		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0480		87 28 057			1	.Gasket	.Packning	3
0490		87 24 141			1	.Seal	.Tätning	5
0500		91 36 276			4	.Spark plug	.Tändstift	1
0510								
0520	4	74 96 011		B234 I	X	Service kit	Servicesats	1
0530		87 24 141			1	.Seal	.Tätning	5
0540		91 17 565			4	.Spark plug	.Tändstift	1
0550		*93 20 383*		1) NLS - USE 7496144	1	.Oil filter	.Oljefilter	1
0560								
0570	5	*88 17 918*		7), 1990, B202 NLS - USE 9321670	X	Coolant pump	Kylvätskepump	2
0580		*91 27 234*		1) NLS - USE 9148255	1	.Coolant pump	.Kylvätskepump	2

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
40. Engine B202 -L015906, Engine B234 -L200531.
41. Engine B202 L015907-, Engine B234 L200532-.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


2 GROUP INDEX

Engine block	1-C10
Lubrication system	1-D1[illegible]
Fuel system	1-E02
Inlet and exhaust system	1-F1[illegible]
Cooling system	1-H1[illegible]
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04


1--J06

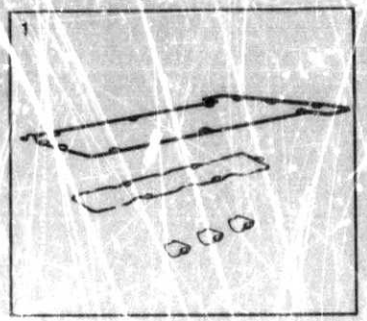


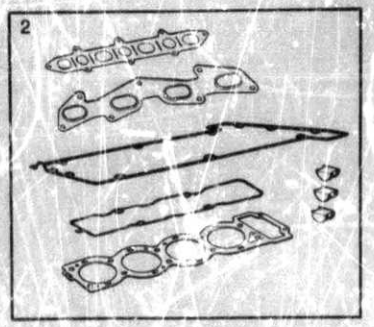

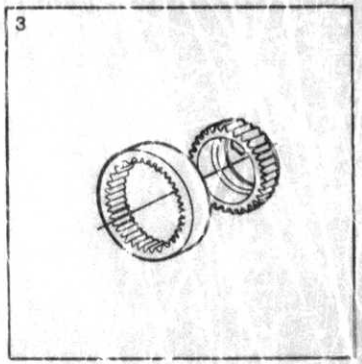



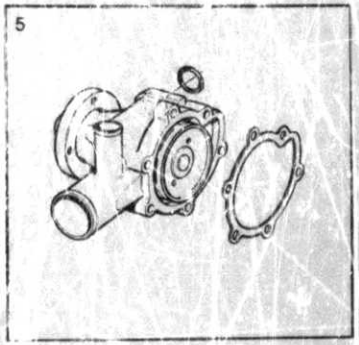

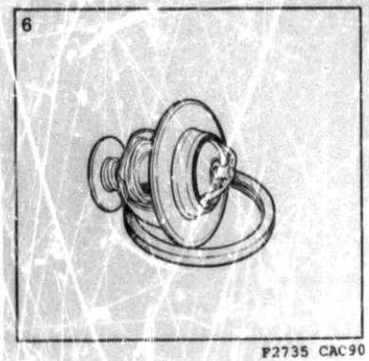

F2735 CAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580		75 66 581			1	.Gasket	.Packning	2
0600		79 72 698			1	.O-ring	.O-ring	2
0610								
0620	5	93 21 670		7), 1991-, B202	X	Coolant pump	Kylvätskepump	2
0630		*91 28 479*		1), -1992 NLS - USE 9148255	1	.Coolant pump	.Kylvätskepump	2
0630								
0640		91 48 255		1), 1993-	1	.Coolant pump	.Kylvätskepump	2
0650		75 66 581			1	.Gasket	.Packning	2
0660		79 72 698			1	.O-ring	.O-ring	2
0670								
0680	5	*88 19 948*		7), 1990-, B234 NLS - USE 9321688	X	Coolant pump	Kylvätskepump	2
0690		91 14 240		1)	1	.Coolant pump	.Kylvätskepump	2
0690		91 13 325			1	.Gasket	.Packning	2
0700								
0710								
0720	5	93 21 688		7), 1991-, B234	X	Coolant pump	Kylvätskepump	
0730		*91 28 471*		1), -1992 NLS - USE 9148289	1	.Coolant pump	.Kylvätskepump	2
0730								
0740		91 48 289		1), 1993-	1	.Coolant pump	.Kylvätskepump	2
0750		91 13 325			1	.Gasket	.Packning	2
0760		78 72 698			1	.O-ring	.O-ring	2
0770		*80 46 674*		NLS - USE 9146606	1	.O-ring	.O-ring	2
0780		80 46 682			1	.O-ring	.O-ring	2
0790								
0800	6	*88 17 298*		89°C NLS - USE 8822025	X	Thermostat kit	Termostatsats	1
0810		*75 05 241*		1) NLS - USE 9166867	1	.Thermostat	.Termostat	1
0820		83 52 692			1	.Gasket	.Packning	2
0830								
0840	6	88 17 538		82°C	X	Thermostat kit	Termostatsats	1
0850		75 17 345		1)	1	.Thermostat	.Termostat	1
0860		83 52 692			1	.Gasket	.Packning	2


1. Not as separate spare part. Ej som separat reservdel.
7 Also available as exchange unit. Finns även som utbytesenhet

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, control housing	3-A02
4	Transmission	3-H02
5	Brakes	4-J02
6	Front assembly, Steering	4-A22
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-H14
Engine control	1-J18
Supercharging system	1-J20
Kits	1-J04

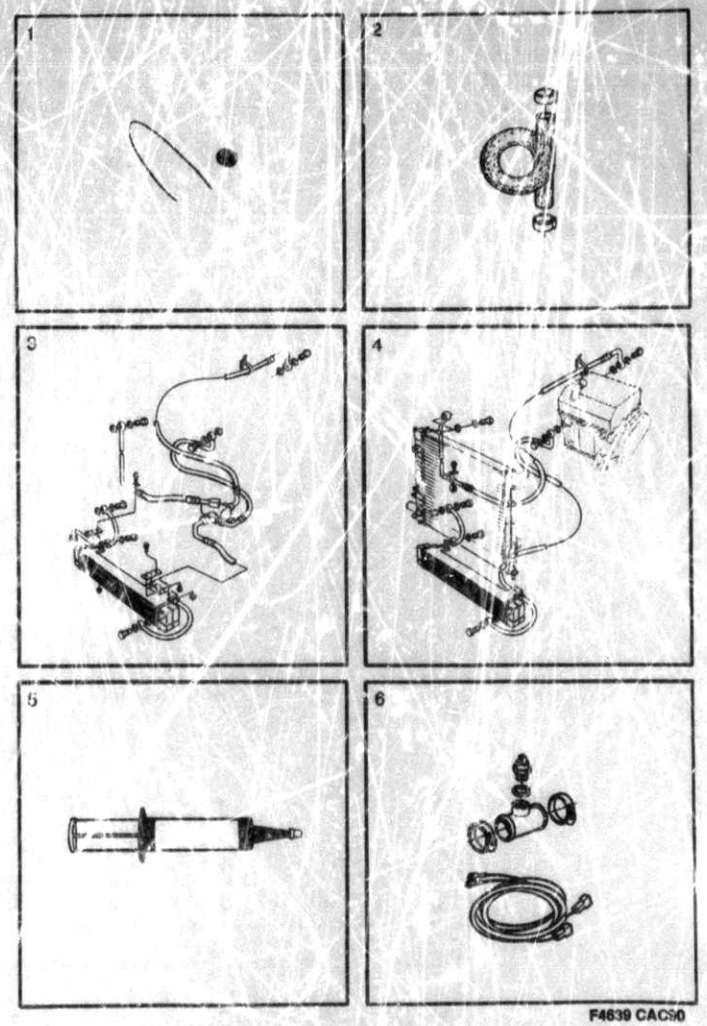

Kits
1-J08
Engine

Satser
Motor

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	8 18 569		TURBO	X	Sealing kit	Plomberingssats	2
0020		91 68 352		)	1	.Seal	.Plomb	2
0030								
0040	2	40 20 848			X	Hose kit	Slangsats	5
0050		40 19 998			1	.Hose	.Slang	5
0060		29 68 308			2	.Hose clamp	.Slangklamma	5
0070								
0080	3	75 54 538		62), TURBO A	X	Oil cooler kit	Oljekylarsats	4
0090		75 98 311			1	.Oil cooler	.Oljekylare	4
0100		75 59 537			1	.Hydraulic hose	.Hydraulslang	4
0110		75 70 757			2	.Bracket	.Konsol	5
0120		*75 73 744*		NLS - USE 4029286	1	.Hydraulic hose	.Hydraulslang	3
0130		79 77 580			1	..O-ring	..O-ring	2
0140		75 73 751			1	.Hydraulic hose	.Hydraulslang	3
0150		79 77 580			1	..O-ring	..O-ring	2
0160		75 73 769			1	.Hydraulic hose	.Hydraulslang	3
0170		79 77 580			1	..O-ring	..O-ring	2
0180		75 73 777			1	.Thermostat	.Termostat	3
0190		75 77 396			1	.Hydraulic hose	.Hydraulslang	3
0200		79 77 580			1	..O-ring	..O-ring	2
0210		75 93 221			1	.Tensioning band	.Spännband	5
0220		79 65 544			2	.Screw	.Skruv	5
0230		79 71 658			2	.Nut	.Mutter	5
0240		73 99 603			2	.Screw	.Skruv	5
0250		80 56 004			2	.Screw	.Skruv	5
0260		89 81 961			12	.Seal	.Tätning	5
0270		*93 61 532*		115) NLS - USE 4374211	6	.Banjo screw	.Banjoskruv	5
0280		*83 22 927*		116) NLS - USE 4374211	6	.Banjo bolt	.Hålbult	5
0290								
0300	3	75 54 546		62), IA	X	Oil cooler kit	Oljekylarsats	4
0310		75 98 311			1	.Oil cooler	.Oljekylare	4
0320		75 70 757			2	.Bracket	.Konsol	5
0330		75 70 823			1	.Hydraulic hose	.Hydraulslang	4
0340		*75 73 744*		NLS - USE 4029286	1	.Hydraulic hose	.Hydraulslang	3
0350		79 77 580			1	..O-ring	..O-ring	2
0360		75 73 751			1	.Hydraulic hose	.Hydraulslang	3
0370		79 77 580			1	..O-ring	..O-ring	2
0380		75 73 769			1	.Hydraulic hose	.Hydraulslang	3
0390		79 77 580			1	..O-ring	..O-ring	2
0400		75 73 777			1	.Thermostat	.Termostat	3
0410		75 77 384			1	.Hydraulic hose	.Hydraulslang	3
0420		79 77 580			1	..O-ring	..O-ring	2
0430		75 93 221			1	.Tensioning band	.Spännband	5
0440		79 65 544			2	.Screw	.Skruv	5
0450		79 71 658			2	.Nut	.Mutter	5
0460		73 99 603			2	.Screw	.Skruv	5
0470		80 56 004			2	.Screw	.Skruv	5
0480		89 81 961			12	.Seal	.Tätning	5
0490		*93 61 532*		115) NLS - USE 4374211	6	.Banjo screw	.Banjoskruv	5
0500		*83 22 927*		116) NLS - USE 4374211	6	.Banjo bolt	.Hålbult	5
0510								
0520	4	40 28 858		63), TURBO A WITH AC	X	Oil cooler kit	Oljekylarsats	4
0530		40 28 874			1	.Hydraulic hose	.Hydraulslang	3
0540		*40 28 890*		NLS - USE 4284279	1	.Hydraulic hose	.Hydraulslang	3
0550		73 98 464			1	.Clamp	.Klammer	5
0560		73 99 603			2	.Screw	.Skruv	5
0570		73 99 611			2	.Screw	.Skruv	5
0580		75 59 537			1	.Hydraulic hose	.Hydraulslang	4


1. Not as separate spare part. Ej som separat reservdel.
62. Ch. –L1013312, –L2009535, –L9001517.
63. Ch. L1013313–, L2009536–, L9001518–.
115. Ch –N1014970.
116. Ch N1014971–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brake	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F04
Cooling system	1-H14
Engine control	1-I18
Supercharging system	1-J20
Kits	1-J04

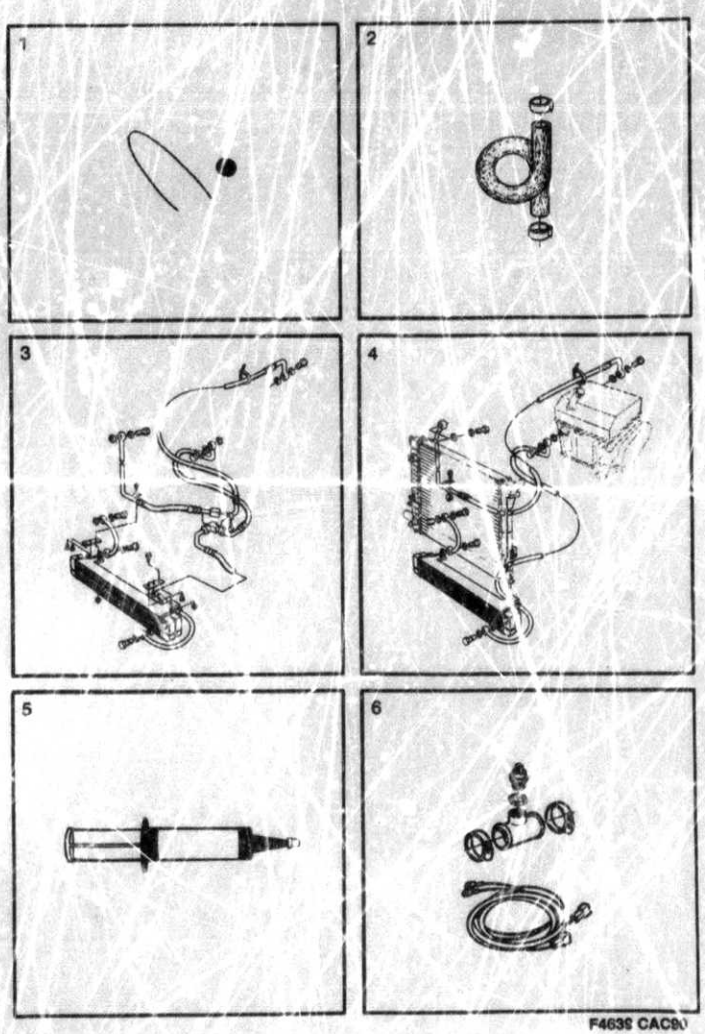

F4638 CAC90

2550	Pos	Part no/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590		75 70 757			2	. Bracket	. Konsol	5
0600		75 93 221			1	. Tensioning band	. Spännband	5
0610		75 98 311			1	. Oil cooler	. Oljekylare	4
0620		79 65 544			2	. Screw	. Skruv	5
0630		79 74 298			2	. Nut	. Mutter	5
0640		88 81 961			12	. Seal	. Tätning	5
0650		*93 01 532*		115) NLS - USE 4374211	6	. Banjo screw	. Banjoskruv	5
0660		*93 22 927*		116) NLS - USE 4374211	6	. Banjo bolt	. Hålbult	5
0670								
0680	4	40 28 866		63), TURBO A WITHOUT AC, IA	X	Oil cooler kit	Oljekylarsats	4
0690								
0700		40 28 882			1	. Hydraulic hose	. Hydraulslang	5
0710		*40 28 890*		NLS - USE 4284279	1	. Hydraulic hose	. Hydraulslang	5
0720		73 98 464			1	. Clamp	. Klammer	5
0730		73 99 603			2	. Screw	. Skruv	5
0740		73 98 611			2	. Screw	. Skruv	5
0750		75 70 757			2	. Bracket	. Konsol	5
0760		75 70 823			1	. Hydraulic hose	. Hydraulslang	4
0770		75 93 221			1	. Tensioning band	. Spännband	5
0780		75 98 311			1	. Oil cooler	. Oljekylare	4
0790		79 65 544			2	. Screw	. Skruv	5
0800		79 74 298			2	. Nut	. Mutter	5
0810		88 81 961			12	. Seal	. Tätning	5
0820		*93 01 532*		115) NLS - USE 4374211	6	. Banjo screw	. Banjoskruv	5
0830		*93 22 927*		116) NLS - USE 4374211	6	. Banjo bolt	. Hålbult	5
0840								
0850	5	93 21 795		25ML	X	Flange sealant	Flänstätning	5
0860								
0870	6	85 47 853		1993	X	Temperature gauge	Temperaturmätare	5
0880		75 76 980			1	. Tube	. Rör	5
0890		79 70 114			2	. Hose clamp	. Slangklamma	5
0900		83 30 268			1	. Seal	. Tätning	5
0910		44 33 306			1	. Cable harness	. Ledningsnät	5
0920		40 86 716		(9526534)	1	. Thermo contact	. Termokontakt	2
0930		44 32 969			1	. Diode	. Diod	5

63. Ch. L1013313-, L2009536-, L8001518-.
115. Ch -N1014970.
116. Ch N1014971-.

MASTER INDEX

0	General	1-A01
2	Engine	1-B02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H04
5	Brakes	4-A02
6	Front assembly, Steering	4-C03
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

2 GROUP INDEX

Engine body	1-C10
Lubrication system	1-D16
Fuel system	1-E02
Inlet and exhaust system	1-F14
Cooling system	1-K14
Engine control	1-H18
Supercharging system	1-J20
Kits	1-J04

3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

TABLE OF CONTENTS

Battery		
Battery	3A : 9	2-A10
Alternator		
Alternator, Bosch 80A	3A : 11	2-A12
Alternator, Bosch 90A	3A : 13	2-A14
Alternator, Bosch 115A	3A : 15	2-A16
Starter		
Starter, B202	3A : 17	2-A18
Starter, B234	3A : 19	2-A20
Ignition system		
EZK	3A : 21	2-A22
Ignition leads, spark plugs etc	3A : 23	2-A24
Distributor I, Bosch	3A : 25	2-B02
SAAB DI, -1992	3A : 27	2-B04
TRIONIC, 1993	3A : 31	2-B08
Lighting		
Headlamps, 5D 1990	3A : 33	2-B10
Headlamps, 5D 1991-	3A : 35	2-B12
Headlamps, 4D	3A : 37	2-B14
Headlamps, 5CS	3A : 39	2-B16
Headlamps, sealed beam, 5D 1990	3A : 41	2-B18
Headlamps, sealed beam, 5D 1991-	3A : 43	2-B20
Headlamps, sealed beam, 4D	3A : 45	2-B22
Headlamps, sealed beam, 5CS	3A : 47	2-B24
Lamp cluster, 5D 1990	3A : 49	2-C02
Lamp cluster, 5D 1991-	3A : 51	2-C04
Lamp cluster, 4D	3A : 53	2-C06
Lamp cluster, 5CS	3A : 55	2-C08
Fog light	3A : 57	2-C10
Tail lamp, 5D	3A : 59	2-C12
Tail lamp, 4D	3A : 61	2-C14
Tail lamp, 5CS	3A : 65	2-C18
Stop light, high mounted	3A : 67	2-C20
Other lights	3A : 69	2-C22
Electrical equipment, other		
Signal horn	3A : 73	2-D02
Signal button	6 : 9	4-C10
Windshield wipers	3A : 75	2-D04
Rear window wiper, 5CS	3A : 77	2-D06
Headlight wipers, 5D, 4D	3A : 79	2-D08
Headlight wipers, 5CS	3A : 83	2-D12
Windshield- and headlight washer -1991	3A : 85	2-D14
Windshield- and headlight washer 1992-	3A : 87	2-D16
Central lock	3A : 91	2-D20
Switches	3A : 93	2-D22
Speed control system	3A : 97	2-E02
Operating device	3A : 101	2-E06
AIR-BAG	3A : 103	2-E08
Operating device ACC	3A : 105	2-E10
Radio, motor aerial	3A : 107	2-E12
Loudspeaker	3A : 111	2-E16
Anti theft alarm	3A : 115	2-E20
Speed warning system	3A : 117	2-E22
Electrical system, ABS, TCS, ASR, ETS	3A : 119	2-E24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-B02
5	Brakes	4-A02
6	Front assembly, Steering	5-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A03

Wiring and fuses

Wiring, 1990	3A : 123	2-F04
Wiring, 1991	3A : 135	2-F16
Wiring, 1992	3A : 147	2-G04
Wiring, 1993	3A : 163	2-G20
Bushing, clamps	3A : 177	2-H10
Mounting kit, body	3A : 183	2-H16
Mounting kit, doors	3A : 187	2-H20
Holders and brackets	3A : 189	2-H22
Relays and fuses, 1990	3A : 193	2-I02
Relays and fuses, 1991	3A : 197	2-I06
Relays and fuses, 1992	3A : 199	2-I08
Relays and fuses, 1993	3A : 203	2-I12
Instruments -1991	3A : 207	2-I16
Instruments 1992-	3A : 211	2-I20

Complete sets

Electrical system	3A : 215	2-I24

2-A04

INNEHÅLLSFÖRTECKNING

Batteri

Batteri	3A : 9	2-A10

Generator

Generator, Bosch 80A	3A : 11	2-A12
Generator, Bosch 90A	3A : 13	2-A14
Generator, Bosch 115A	3A : 15	2-A16

Startmotor

Startmotor, B202	3A : 17	2-A18
Startmotor, B234	3A : 19	2-A20

Tändsystem

EZK	3A : 21	2-A22
Tändkablar, tändstift etc	3A : 23	2-A24
Tändfördelare I, Bosch	3A : 25	2-B02
SAAB DI, -1992	3A : 27	2-B04
TRIONIC, 1993	3A : 31	2-B08

Belysning

Strålkastare, 5D 1990	3A : 33	2-B10
Strålkastare, 5D 1991-	3A : 35	2-B12
Strålkastare, 4D	3A : 37	2-B14
Strålkastare, 5CS	3A : 39	2-B16
Strålkastare, seald beam, 5D 1990	3A : 41	2-B18
Strålkastare, seald beam, 5D 1991-	3A : 43	2-B20
Strålkastare, seald beam, 4D	3A : 45	2-B22
Strålkastare, seald beam, 5CS	3A : 47	2-B24
Kombinationslykta, 5D 1990	3A : 49	2-C02
Kombinationslykta, 5D 1991-	3A : 51	2-C04
Kombinationslykta, 4D	3A : 53	2-C06
Kombinationslykta, 5CS	3A : 55	2-C08
Dimljus	3A : 57	2-C10
Baklykta, 5D	3A : 59	2-C12
Baklykta, 4D	3A : 61	2-C14
Baklykta, 5CS	3A : 65	2-C18
Stopplykta, högt monterad	3A : 67	2-C20
Övrig belysning	3A : 69	2-C22

Övrig elektrisk utrustning

Signalhorn	3A : 73	2-D02
Signalkontakt	6 : 9	4-C10
Vindrutetorkare	3A : 75	2-D04
Bakrutetorkare, 5CS	3A : 77	2-D06
Strålkastartorkare, 5D, 4D	3A : 79	2-D08
Strålkastartorkare, 5CS	3A : 83	2-D12
Vindrute- och strålkastarspolare -1991	3A : 85	2-D14
Vindrute- och strålkasterspolare 1992-	3A : 87	2-D16
Centrallås	3A : 91	2-D20
Strömställare	3A : 93	2-D22
Farthållningssystem	3A : 97	2-E02
Manöverdon	3A : 101	2-E06
AIR-BAG	3A : 103	2-E08
Manöverdon ACC	3A : 105	2-E10
Radio, motorantenn	3A : 107	2-E12
Högtalare	3A : 111	2-E16
Stöldlarm	3A : 115	2-E20
Fartvarningssystem	3A : 117	2-E22
Elektriskt system, ABS, TCS, ASR, ETS	3A : 119	2-E24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A05

Ledningar och säkringar
- Ledningar, 1990 — 3A : 123 — 2-F04
- Ledningar, 1991 — 3A : 135 — 2-F16
- Ledningar, 1992 — 3A : 147 — 2-G04
- Ledningar, 1993 — 3A : 163 — 2-G20
- Bussningar, klammer — 3A : 177 — 2-H10
- Monteringsdetaljer, kaross — 3A : 183 — 2-H16
- Monteringsdetaljer, dörrar — 3A : 187 — 2-H20
- Hållare och konsoler — 3A : 189 — 2-H22
- Reläer och säkringar, 1990 — 3A : 193 — 2-I02
- Reläer och säkringar, 1991 — 3A : 197 — 2-I06
- Reläer och säkringar, 1992 — 3A : 199 — 2-I08
- Reläer och säkringar, 1993 — 3A : 203 — 2-I12
- Instrument -1991 — 3A : 207 — 2-I16
- Instrument 1992- — 3A : 211 — 2-I20

Satser
- Elektriskt system — 3A : 215 — 2-I24

2-A06

SUMARIO

Bateria
- Bateria — 3A : 9 — 2-A10

Alternador
- Alternador, Bosch 80A — 3A : 11 — 2-A12
- Alternador, Bosch 90A — 3A : 13 — 2-A14
- Alternador, Bosch 115A — 3A : 15 — 2-A16

Motor de arranque
- Motor de arranque, B202 — 3A : 17 — 2-A18
- Motor de arranque, B234 — 3A : 19 — 2-A20

Sistema de encendido
- EZK — 3A : 21 — 2-A22
- Cable encendido, bujías etc — 3A : 23 — 2-A24
- Distribuidor, Bosch I — 3A : 25 — 2-B02
- SAAB DI, -1992 — 3A : 27 — 2-B04
- TRIONIC, 1993 — 3A : 31 — 2-B08

Alumbrado
- Faros, 5D 1990 — 3A : 33 — 2-B10
- Faros, 5D 1991- — 3A : 35 — 2-B12
- Faros, 4D — 3A : 37 — 2-B14
- Faros, 5CS — 3A : 39 — 2-B16
- Faros, seald beam, 5D 1990 — 3A : 41 — 2-B18
- Faros, seald beam, 5D 1991- — 3A : 43 — 2-B20
- Faros, seald beam, 4D — 3A : 45 — 2-B22
- Faros, seald beam, 5CS — 3A : 47 — 2-B24
- Faro combinado, 5D 1990 — 3A : 49 — 2-C02
- Faro combinado, 5D 1991- — 3A : 51 — 2-C04
- Faro combinado, 4D — 3A : 53 — 2-C06
- Faro combinado, 5CS — 3A : 55 — 2-C08
- Faros antiniebla — 3A : 57 — 2-C10
- Piloto trasera, 5D — 3A : 59 — 2-C12
- Piloto trasera, 4D — 3A : 61 — 2-C14
- Piloto trasera, 5CS — 3A : 65 — 2-C18
- Lampara de paro montada — 3A : 67 — 2-C20
- Otro alumbrado — 3A : 69 — 2-C22

Otro equipo electrico
- Senal acustica — 3A : 73 — 2-D02
- Contacto de senal acustica — 6 : 9 — 4-C10
- Limpiaparabrisas — 3A : 75 — 2-D04
- Limpiaparabrisas post, 5CS — 3A : 77 — 2-D06
- Limpiacristales de faro, 5D, 4D — 3A : 79 — 2-D08
- Limpiacristales de faro, 5CS — 3A : 83 — 2-D12
- Lavaparabrisas y lavacristales de faro -1991 — 3A : 85 — 2-D14
- Lavaparabrisas y lavacristales de faro 1992- — 3A : 87 — 2-D16
- Cerradura central — 3A : 91 — 2-D20
- Contactos — 3A : 93 — 2-D22
- Control de velocidad de crucero — 3A : 97 — 2-E02
- Dispositivos de mando — 3A : 101 — 2-E06
- AIR-BAG — 3A : 103 — 2-E08
- Dispositivos de mando ACC — 3A : 105 — 2-E10
- Radio, motor de antena — 3A : 107 — 2-E12
- Altavoz — 3A : 111 — 2-E16
- Alarma antirobo — 3A : 115 — 2-E20
- Sistema de advertencia de velocidad — 3A : 117 — 2-E22
- Sistema electrico, ABS, TCS, ASR, ETS — 3A : 119 — 2-E24

MASTER INDEX

- 0 General — 1-A02
- 2 Engine — 1-C02
- 3A Electrical, general — 2-A02
- 3B Electrical, contact housing — 3-A02
- 4 Transmission — 3-H02
- 5 Brakes — 4-A02
- 6 Front assembly, Steering — 4-C02
- 7 Suspension, Wheels — 4-E02
- 8A Body, external — 5-A02
- 8B Body, internal — 6-A02
- 8C Body, heating and ventilation — 6-K02
- 9 Tools, Labels — 7-A02
- 10 Numerical register — 7-B02

3A GROUP INDEX

- Battery — 2-A10
- Alternator — 2-A12
- Starter — 2-A18
- Ignition system — 2-A22
- Lighting — 2-B10
- Electrical equipment, other — 2-D02
- Wiring and fuses — 2-F04
- Complete sets — 2-I24

2-A07

0042

Conductos y fusibles

1360 Conductos, 1990	3A : 123	2-F04
1370 Conductos, 1991	3A : 135	2-F16
1380 Conductos, 1992	3A : 147	2-G04
1390 Conductos, 1993	3A : 163	2-G20
1400 Manguitos, abrazaderas	3A : 177	2-H10
1410 Equipo de montaje, carroceria	3A : 183	2-H16
1420 Equipo de montaje, puertas	3A : 187	2-H20
1430 Portafusibles y consolas	3A : 189	2-H22
1440 Reles, fusibles, 1990	3A : 193	2-I02
1450 Reles, fusibles, 1991	3A : 197	2-I06
1460 Reles, fusibles, 1992	3A : 199	2-I08
1470 Reles, fusibles, 1993	3A : 203	2-I12
1480 Instrumentos -1991	3A : 207	2-I16
1490 Instrumentos 1992-	3A : 211	2-I20
1500 **Juegos completos**		
1510 Sistema electrico	3A : 215	2-I24


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A10 Battery Batteri

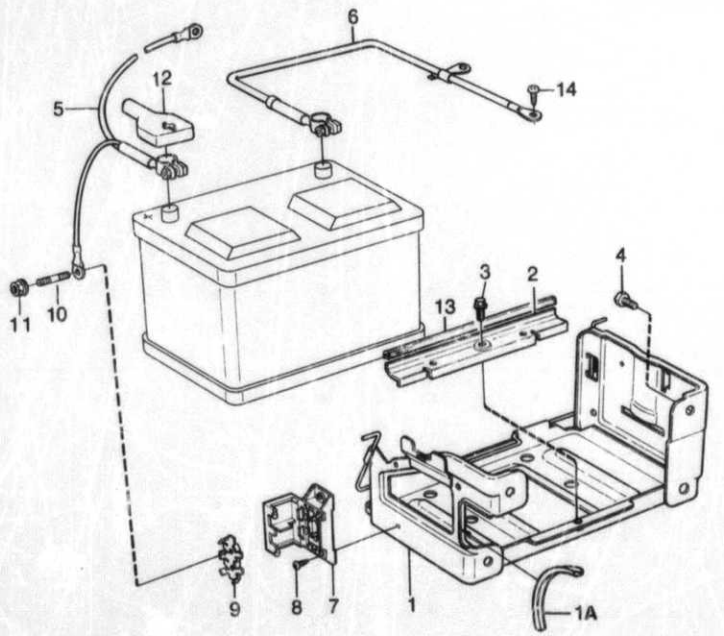

F3986 CAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						Battery	Batteri	
0020						SEE ACCESSORIES CATALOGUE	SE TILLBEHÖRSKATALOG	
0030	1	69 61 288		-1991	1	Battery shelf	Batterihylla	6
0040	1	40 09 429		-1991, TCS	1	Battery shelf	Batterihylla	6
0050	1	42 93 619		1992-	1	Battery shelf	Batterihylla	6
0060	1A	*84 97 471*		78) NLS - USE 8564973	1	. Protecting moulding	. Skyddslist	6
0070	2	95 15 222			1	. Brace	. Bygel	5
0080	3	79 77 499			1	. Screw	. Skruv	5
0090	4	79 75 451			4	Screw	Skruv	5
0100	5	95 24 208		+	1	Cable	Kabel	5
0110	6	95 17 392		183), -	1	Cable	Kabel	4
0120	6	40 69 530		184), -	1	Cable	Kabel	4
0130	7	40 61 891			1	Bracket	Hållare	5
0140	8	*79 74 769*		NLS - USE 7922891	2	Screw	Skruv	5
0150	9	95 03 053			1	Casing	Förgreningshus	3
0160	10	94 46 881			2	Stud	Pinnskruv	5
0170	11	79 71 658			2	Nut	Mutter	5
0180	12	95 18 424			1	Cover	Kåpa	6
0190	13	*84 97 471*		92) NLS - USE 8564973	1	Protecting moulding	Skyddslist	6
0200	14	40 87 003			1	Screw	Skruv	5
0210						gearbox	växellåda	


78. Part of 40 09 429. Del av 40 09 429.
92. Ch -L1010360, -L2007967, -L8001441.
183. Ch -L1010359, -L2007966.
184. Ch L1010360-, L2007967-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

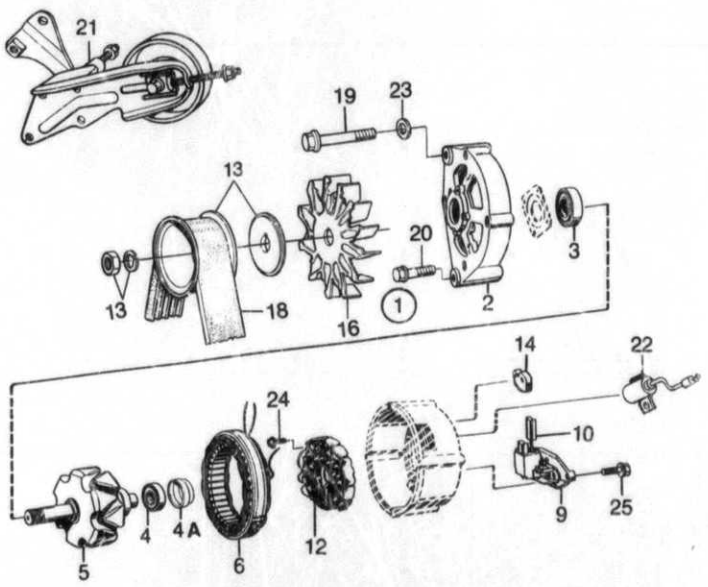

F4448 CAC90

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 29 033		7), B202	1	Generator	Generator	5
0020	1	95 62 752		7), B234	1	Generator	Generator	5
0030	2	95 13 763			1	.Bearing	.Drivlager	6
0040	3	95 13 128		2)	1	.Ball bearing	.Kullager	3
0050	4	*95 13 185*		3) NLS - USE 9124348	1	.Ball bearing	.Kullager	6
0060	4A	*95 13 193*		NLS - USE 9124355	1	.O-ring	.O-ring	4
0070	5	95 13 144			1	.Rotor	.Rotor	6
0080	6	95 13 169			1	.Stator	.Stator	6
0090	9	85 90 549			1	.Regulator	.Regulator	2
0100	10	95 15 180			1	..Brush set	..Borstsats	3
0110	12	95 13 177			1	.Rectifier	.Likriktare	6
0120	13	85 90 994			1	.Part kit	.Delsats	6
0130	14	85 93 329		B+	1	.Protection	.Skydd	6
0140	15	95 03 715		B202	1	Pulley	Remskiva	5
0150	15	40 93 475		B234	1	Pulley	Remskiva	5
0160	16	85 87 248			1	Fan disc	Fläktskiva	6
0170	18	75 96 679		B202	1	Belt	Rem	1
0180	18	43 56 887		B202, ME, ALT.TO 7596679	1	Belt	Rem	1
0190								
0200	18	40 29 195		B234	1	Belt	Rem	1
0210	18	43 56 895		B234, ME, ALT.TO 4029195	1	Belt	Rem	1
0220								
0230	18	40 29 203		B234 AC/ACC	1	Belt	Rem	1
0240	18	43 56 903		B234 AC/ACC, ME, ALT.TO 4029203	1	Belt	Rem	1
0250								
0260	19	79 74 777		B202	1	Screw	Skruv	5
0270	19	80 98 378		B234	1	Screw	Skruv	5
0280	20	80 98 378			1	Screw	Skruv	5
0290	21			See page 6-023, 4-C24		Tension pulley	Spännrulle	
0300	22	95 23 184			1	Capacitor	Kondensator	4
0310	23	80 73 108			1	Washer	Bricka	5
0320	24	95 13 599			3	Screw	Skruv	5
0330	25	85 71 986			2	Screw	Skruv	5

2. Front. Främre.
3. Rear. Bakre.
7. Also available as exchange unit. Finns även som utbytesenhet.
228. Ch -R1006711.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A14

Generator
Bosch 90A
229)

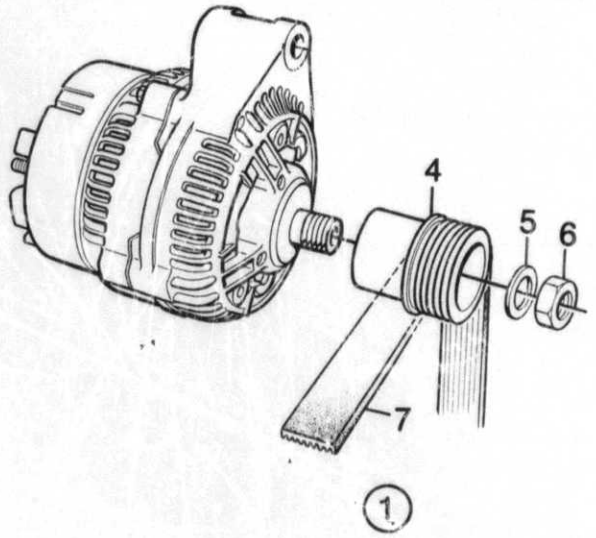

1

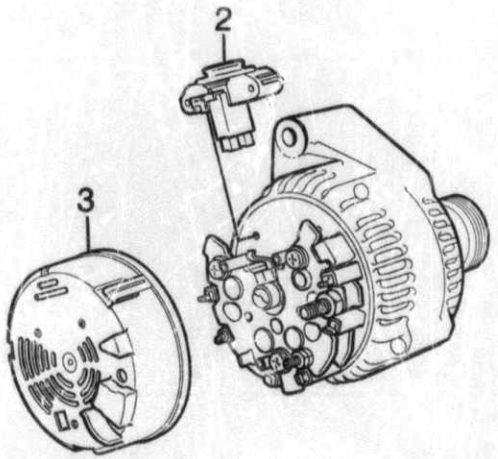

F5913 CAC90

0180	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 34 056		7)	1	Generator	Generator	5
0020	2	44 09 983			1	.Regulator	.Regulator	2
0030	3	44 09 991			1	.Protection	.Skydd	6
0040	4	44 10 007			1	.Pulley	.Remskiva	5
0050	5	44 89 316			1	.Washer	.Bricka	5
0060	6	44 89 308			1	.Nut	.Mutter	5
0070	7	40 29 195			1	Belt	Rem	1
0080	7	43 95 448		SE, EU, US, CA, JP,KR,TW	1	Belt	Rem	1
0090	7	43 56 895		ME, ALT. TO 4029195	1	Belt	Rem	1
0100	7	43 56 903		AC/ACC	1	Belt	Rem	1

7. Also available as exchange unit. Finns även som utbytesenhet.
229. Ch R1006712-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A16

Generator
Bosch 115A

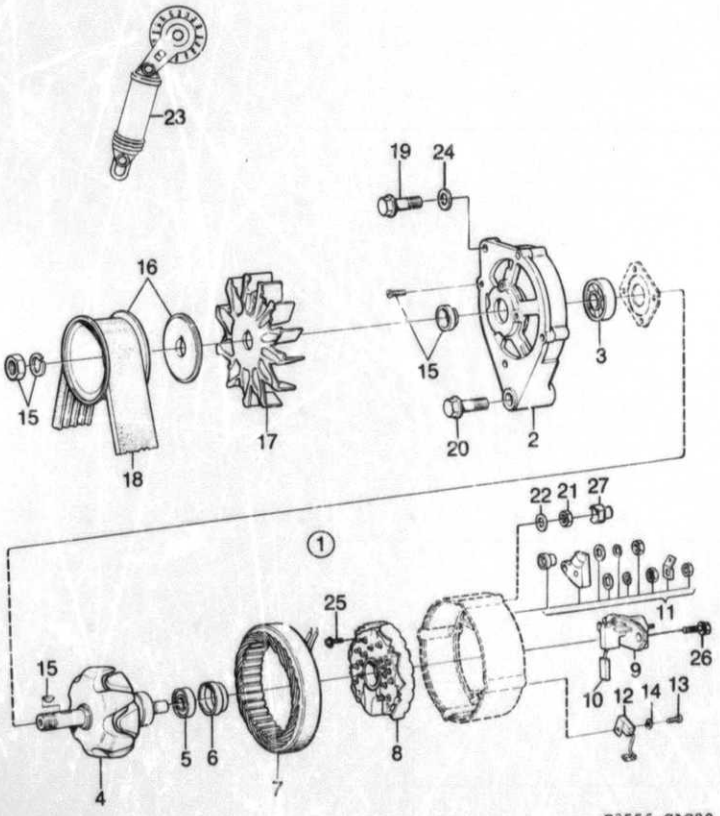

F3556 CAC90

0190	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 65 607		7), B202	1	Generator	Generator	5
0020	1	91 20 981		7), B234	1	Generator	Generator	5
0030	2	91 24 280			1	. Bearing	. Drivlager	6
0040	3	95 13 128		2)	1	. Ball bearing	. Kullager	3
0050	4	91 24 314			1	. Rotor	. Rotor	6
0060	5	91 24 348		3)	1	. Ball bearing	. Kullager	6
0070	6	91 24 355			1	. O-ring	. O-ring	4
0080	7	91 24 363			1	. Stator	. Stator	6
0090	8	91 24 371			1	. Rectifier	. Likriktare	6
0100	9	85 90 549			1	. Regulator	. Regulator	2
0110	10	95 15 180			1	.. Brush set	.. Borstsats	3
0120	11	91 24 397		B+, D+	1	. Part kit	. Delsats	6
0130	12	95 23 184			1	Capacitor	Kondensator	4
0140	13	91 24 264			1	Screw	Skruv	5
0150	14	91 24 272			1	Washer	Bricka	5
0160	15	85 90 994			1	Part kit	Delsats	6
0170						rotor	rotor	
0180	16	95 03 715		B202	1	Pulley	Remskiva	5
0190	16	40 63 475		B234	1	Pulley	Remskiva	5
0200	17	85 87 248			1	Fan disc	Fläktskiva	6
0210	18	75 96 679		B202	1	Belt	Rem	1
0220	18	43 56 887		B202, ME,	1	Belt	Rem	1
0230				ALT.TO 7596679				
0240	18	40 29 195		B234	1	Belt	Rem	1
0250	18	43 56 895		B234, ME,	1	Belt	Rem	1
0260				ALT.TO 4029195				
0270	18	40 29 203		B234 AC/ACC	1	Belt	Rem	1
0280	18	43 56 903		B234 AC/ACC, ME,	1	Belt	Rem	1
0290				ALT.TO 4029203				
0300	19	79 78 745		169), B202	1	Screw	Skruv	5
0310	19	79 74 777		170), B202	1	Screw	Skruv	5
0320	19	80 98 378		B234	1	Screw	Skruv	5
0330	20	80 98 378			1	Screw	Skruv	5
0340	21	80 74 106		B+	1	Nut	Mutter	5
0350	22	79 33 849		79), B+	1	Washer	Bricka	5
0360	22	*73 11 764*		80), B+ NLS - USE	1	Washer	Bricka	5
0360				7399835				
0370	23			See page 6-025, 4-D02		Tension pulley	Spännrulle	
0380	24	80 73 108		B234	1	Washer	Bricka	5
0390	25	95 13 599			6	Screw	Skruv	5
0400	26	85 71 986			2	Screw	Skruv	5
0410	27	91 24 645		80), B+	1	Plastic cover	Plastskydd	6

2. Front. Främre.
3. Rear. Bakre.
7. Also available as exchange unit. Finns även som utbytesenhet.
79. Ch -L1002769, -L2002023, -L8000523.
80. Ch L1002770-, L2002024-, L8000524-.
169. Ch -M1019414, -M2012513.
170. Ch M1019415-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A18 Starter motor B202 — Startmotor B202

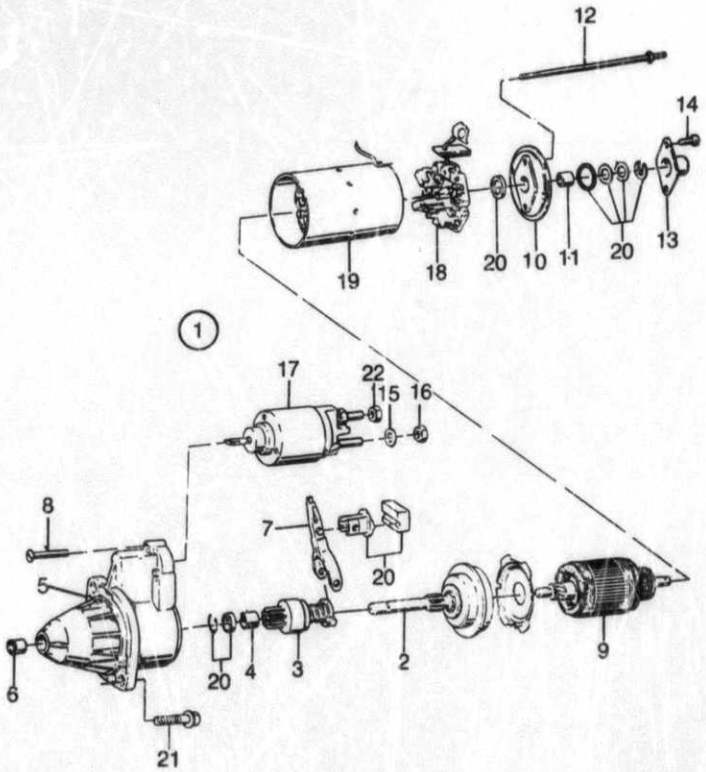

F4806 CAC90

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 17 299		7)	1	Starter motor	Startmotor	5
0020	2	75 35 255			1	.Planetary gear	.Planetväxel	5
0030	3	41 60 009			1	.Drive gear	.Drev	3
0040	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0050	5	41 60 149			1	.Gear house	.Drevhus	6
0060	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0070	7	75 27 765		1)	1	.Engagement lever	.Kopplingsarm	6
0080	8	75 35 271			3	.Screw	.Skruv	5
0090	9	41 60 123		1)	1	.Rotor	.Rotor	5
0100	10	75 35 297		1)	1	.Ball bearing	.Kullager	6
0110	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0120	12	75 35 305		1)	2	.Screw	.Skruv	5
0130	13	75 35 313		1)	1	.Cap	.Kapsel	6
0140	14	75 35 321		1)	2	.Screw	.Skruv	5
0150	15	75 27 849			1	.Washer	.Bricka	5
0160	16	75 35 339		1)	1	.Nut	.Mutter	5
0170	17	75 27 856			1	.Actuator solenoid	.Manövermagnet	3
0180	18	75 27 864			1	.Plate	.Platta	6
0190	19	75 27 872		1)	1	.Casing	.Hus	6
0200	20	75 27 880			1	.Kit	.Sats	6
0210	21	79 76 939			2	Screw	Skruv	5
0220	22	79 77 929			1	Nut	Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A20 Starter motor B234

Startmotor B234

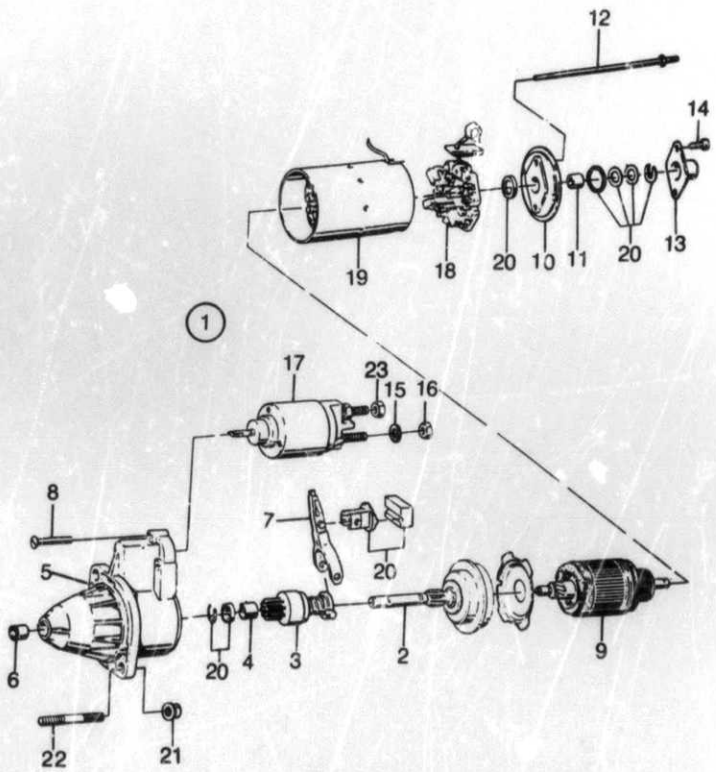

F4807 CAC90

0270	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 77 498		7)	1	Starter motor	Startmotor	5
0020	2	75 35 255			1	.Planetary gear	.Planetväxel	5
0030	3	41 60 099			1	.Drive gear	.Drev	3
0040	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0050	5	41 60 115			1	.Gear house	.Drevhus	6
0060	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0070	7	75 27 765		1)	1	.Engagement lever	.Kopplingsarm	6
0080	8	75 35 271			3	.Screw	.Skruv	5
0090	9	41 60 123		1)	1	.Rotor	.Rotor	5
0100	10	75 35 297		1)	1	.Ball bearing	.Kullager	6
0110	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0120	12	75 35 305		1)	2	.Screw	.Skruv	5
0130	13	75 35 313		1)	1	.Cap	.Kapsel	6
0140	14	75 35 321		1)	2	.Screw	.Skruv	5
0150	15	75 27 849			1	.Washer	.Bricka	5
0160	16	75 35 339		1)	1	.Nut	.Mutter	5
0170	17	75 27 856			1	.Actuator solenoid	.Manövermagnet	3
0180	18	75 27 864			1	.Plate	.Platta	6
0190	19	75 27 872		1)	1	.Casing	.Hus	6
0200	20	75 27 880			1	.Kit	.Sats	6
0210	21	79 67 979			2	Nut	Mutter	5
0220	22	79 71 112			2	Stud	Pinnskruv	5
0230	23	79 77 929			1	Nut	Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A22

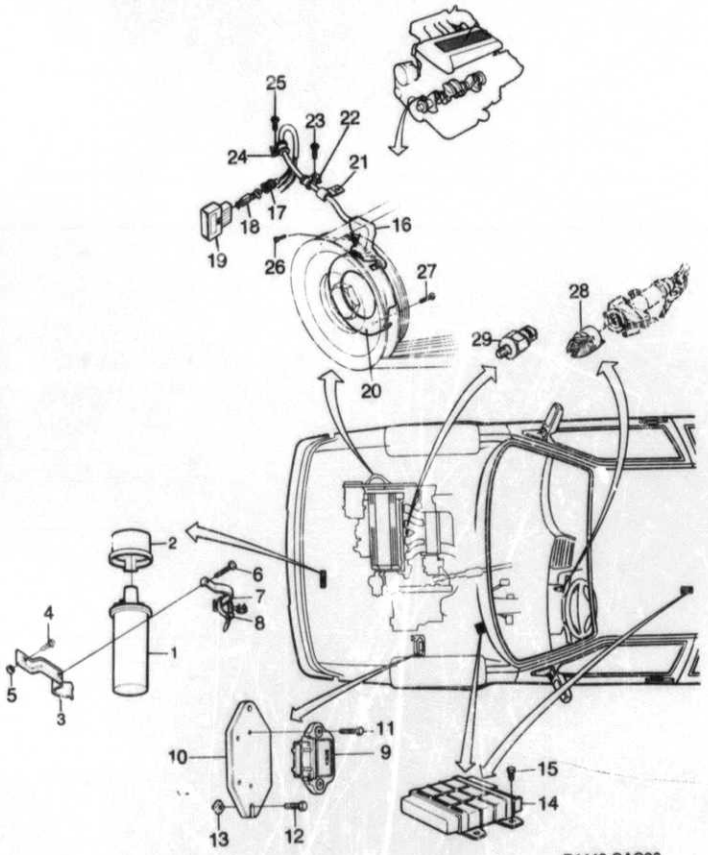

F4449 CAC90

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 73 834			1	Ignition coil	Tändspole	4
0020	2	85 66 374			1	Protecting casing	Skyddskåpa	4
0030	3	93 88 398			1	Bracket	Fäste	5
0040	4	80 19 747		-1991	1	Screw	Skruv	5
0050	4	80 59 420		1992-	1	Screw	Skruv	5
0060	5	79 75 576			1	Nut	Mutter	5
0070	6	79 77 457			1	Screw	Skruv	5
0080	7	93 88 554			1	Cap	Överfall	5
0090	8	73 98 456			1	Clamp	Klämma	5
0100								
0110	9	*75 03 600*		100) NLS - USE 4023149	1	Power unit	Effektsteg	5
0120	9	40 23 149		101)	1	Power unit	Effektsteg	5
0130	10	85 74 816			1	Cooling body	Kylkropp	5
0140	11	79 75 519			2	Screw	Skruv	5
0150	12	79 73 191			2	Screw	Skruv	5
0160	13	79 75 279			2	Nut	Mutter	5
0170								
0180	14	74 84 504		4,7)	1	Electronic unit	Elektronikenhet	5
0190	14	74 84 512		5,7), 1990, M	1	Electronic unit	Elektronikenhet	5
0200	14	78 72 286		5,7), 1991-, M	1	Electronic unit	Elektronikenhet	5
0210	14	74 84 520		5,7), 1990, A	1	Electronic unit	Elektronikenhet	5
0220	14	78 72 294		5,7), 1991-, A	1	Electronic unit	Elektronikenhet	5
0230	15	79 22 347		-1991	4	Screw	Skruv	5
0240								
0250	16	74 82 540		-1991	1	Sensor	Givare	4
0260	16	91 33 067		1992-	1	Sensor	Givare	4
0270	17	40 61 966		179)	3	.Seal	.Tätning	5
0280	18	40 61 578		179)	3	.Cable terminal	.Ledningssko	5
0290	19	41 13 619		179), 1992	1	.Connector housing	.Kontakthus	4
0300	19	41 13 601		179), 1993	1	.Connector housing	.Kontakthus	4
0310	20	91 17 979		141)	1	Aperture disc	Bländarskiva	4
0320	20	91 17 201		142)	1	Aperture disc	Bländarskiva	4
0330	21	74 87 952			1	Clamp	Klämma	5
0340	22	*81 39 362*		-1992 NLS - USE 7969389	1	Clamp	Klammer	5
0350	22	79 69 389		1993	1	Clamp	Klammer	5
0360	23	81 29 868			1	Screw	Skruv	5
0370	24	*81 39 339*		NLS - USE 7969348	1	Clamp	Klammer	5
0380	25	81 29 868			1	Screw	Skruv	5
0390	26	*91 14 455*		1990 NLS - USE 9127440	2	Screw	Skruv	5
0400	26	91 27 440		1991-	2	Screw	Skruv	5
0410	27	*74 82 490*		NLS - USE 9127440	3	Screw	Skruv	5
0420								
0430	28			See page 6-007, 4-C08		Starter switch	Startkontakt	
0440	29			See page 2-169, 1-J02		Knock sensor	Knacksensor	
0450								
0460				See page 3A-023, 2-A24		Ignition lead	Tändkabel	
0470				See page 3A-023, 2-A24		Spark plug	Tändstift	

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
100. Ch --L1015954, --L2011504, --L8001732.
101. Ch L1015955--, L2011505--, L8001733--.
141. Engine --L74038.
142. Engine L74039--.
179. Part of 91 33 067. Del av 91 33 067.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-A24

Ignition leads, spark plugs etc

Tändkablar, tändstift etc

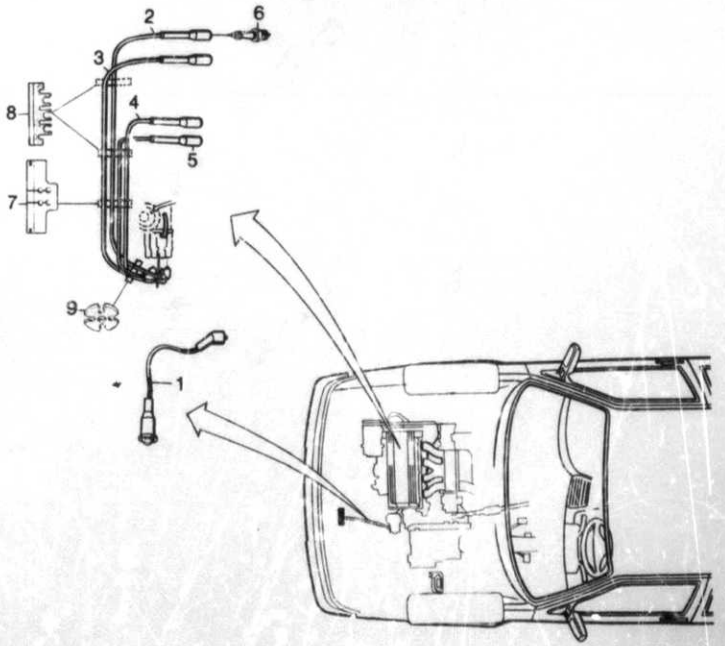

F3311 CAC90

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 90 840	S	-1991	1	Ignition lead ignition coil	Tändkabel tändspole	3
0020								
0030	1	43 74 336	S	1992-	1	Ignition lead ignition coil	Tändkabel tändspole	3
0040								
0050								
0060	2	75 04 483	S		1	Ignition lead cylinder 1	Tändkabel cylinder 1	3
0070								
0080	3	75 04 491	S		1	Ignition lead cylinder 2	Tändkabel cylinder 2	3
0090								
0100	4	75 04 509	S		1	Ignition lead cylinder 3	Tändkabel cylinder 3	3
0110								
0120	5	75 04 517	S		1	Ignition lead cylinder 4	Tändkabel cylinder 4	3
0130								
0140								
0150	6	91 16 385		-1991, B202 I, NGK BCP5ES	4	Spark plug	Tändstift	1
0160	6	91 36 276		1992-, B202 I, NGK BCP5EV	4	Spark plug	Tändstift	1
0170	6	91 17 565		B234 I, NGK BCPR6ES 1,1	4	Spark plug	Tändstift	1
0180	6	91 12 541		TURBO, NGK BCPR7ES 1,1	4	Spark plug	Tändstift	1
0190								
0200	7	75 04 525			1	Retainer	Hållare	2
0210	8	75 85 540			2	Retainer	Hållare	2
0220	9	75 06 793			1	Retainer	Hållare	2
0230								
0240		88 17 520		See page 3A-215, 2-I24	X	Kit ignition cables	Tändkabelsats	3


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B02 Ignition distributor / Tändfördelare /

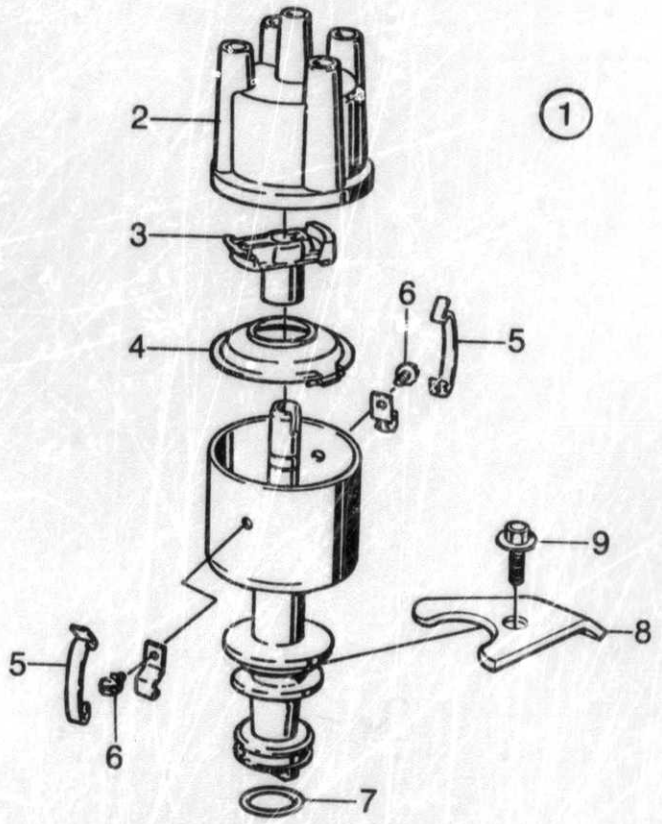

F3557 CAC90


0447	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	74 84 439			1	Ignition distributor	Tändfördelare	5
0020	2	75 01 216			1	.Distributor cap	.Fördelarlock	2
0030	3	75 64 420			1	.Rotor	.Rotor	3
0040	4	75 19 135			1	.Cover	.Lock	6
0050	5	75 19 085			2	.Spring	.Fjäder	5
0060	6	75 19 101			2	.Screw	.Skruv	5
0070	7	75 19 143			1	.O-ring	.O-ring	6
0080	8	83 62 287			1	Bracket	Hållare	5
0090	9	*80 82 950*		-1992 NLS - USE 9166323	1	Screw	Skruv	5
0100	9	91 66 323		1993	1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

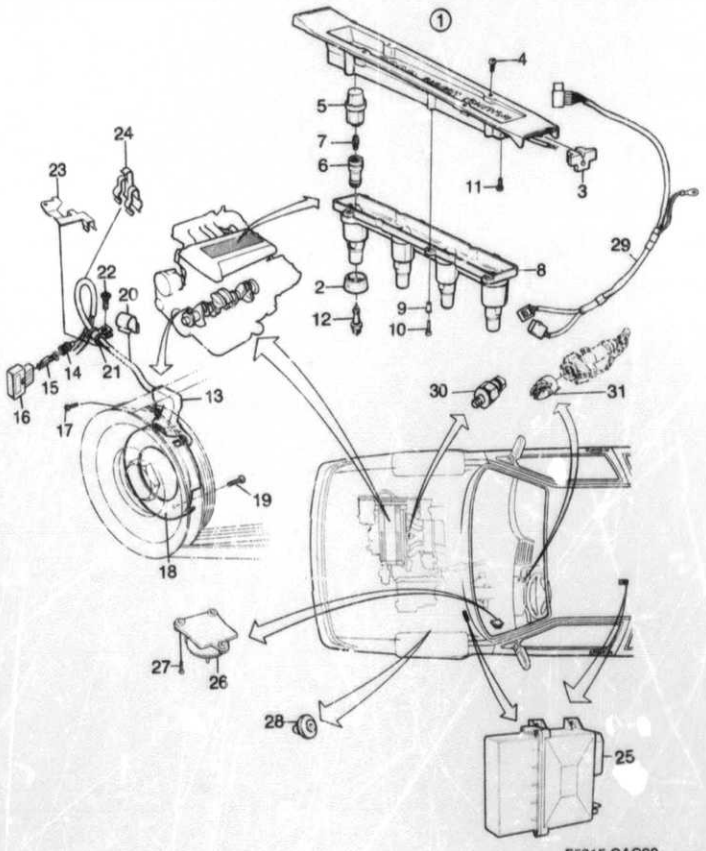

F5915 CAC90

Ignition system
2-B04
SAAB DI
-1992

Tändsystem
SAAB DI
-1992

0448	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*74 85 808*		NLS - USE 9134404, 9321787	1	Ignition cassette	Tändkassett	4
0020	2	74 80 056			4	.Seal	.Tätning	4
0030	3	75 86 811			1	.Grommet	.Genomföring	5
0040	4	*91 14 976*		82) NLS - USE 8059578	4	.Screw	.Skruv	5
0050	4	88 57 872		83)	4	.Screw	.Skruv	5
0060	5	75 89 815			4	.Ignition coil	.Tändspole	4
0070	6	75 89 831			4	.Sleeve	.Hylsa	4
0080	7	75 89 823			4	..Spring	..Fjäder	4
0090	8	75 89 856			1	.Lower section	.Underdel	4
0100	9	75 89 864			6	.Spacer sleeve	.Distanshylsa	4
0110	10	79 68 316			6	.Screw	.Skruv	5
0120	11	79 74 512			2	.Screw	.Skruv	5
0130	12			See page 3A-023, 2-A24		Spark plug	Tändstift	
0140								
0150	13	74 82 540		-1991, B202	1	Sensor	Givare	4
0160	13	91 33 067		1992, B202	1	Sensor	Givare	4
0170	13	87 86 246		-1991, B234	1	Sensor	Givare	4
0180	13	91 30 493		1992, B234	1	Sensor	Givare	4
0190	14	40 61 966		178)	3	.Seal	.Tätning	5
0200	15	40 61 578		178)	3	.Cable terminal	.Ledningssko	5
0210	16	41 13 619		178), 1992	1	.Connector housing	.Kontakthus	4
0220	17	*91 14 455*		1990 NLS - USE 9127440	2	Screw	Skruv	5
0230	17	91 27 440		1991-	2	Screw	Skruv	5
0240	18	91 18 001		141), B202	1	Aperture disc	Bländarskiva	4
0250	18	91 17 177		141), B234 I	1	Aperture disc	Bländarskiva	4
0260	19	91 17 177		142)	1	Aperture disc	Bländarskiva	4
0270	19	*91 14 455*		NLS - USE 9127440	3	Screw	Skruv	5
0280	20	41 58 671			1	Clip	Clips	5
0290	21	*81 39 353*		NLS - USE 7969348	1	Clamp	Klammer	5
0300	22	81 25 023			1	Screw	Skruv	5
0310	23	88 56 890		B234 TURBO	1	Clamp	Klammer	5
0320	24	88 56 908		B234 TURBO	1	Clamp	Klammer	5
0330								
0340	25	88 56 858		1990, BE, 157HP, (116KW), T3	1	Electronic unit	Elektronikenhet	3
0360	25	78 59 705		1991-, BE, 157HP, (116KW), T3	1	Electronic unit	Elektronikenhet	3
0380	25	91 19 397		4,7), 1990, 165HP, (122KW), T25	1	Electronic unit	Elektronikenhet	4
0400	25	78 59 721		4,7), 1991-, 165HP, (122KW), T25	1	Electronic unit	Elektronikenhet	4
0420	25	78 59 721		4,7), 1991, TCS, 165HP, (122KW), T25	1	Electronic unit	Elektronikenhet	4
0440	25	91 19 405		4,7), 1990, 175HP, (129KW), T25	1	Electronic unit	Elektronikenhet	4
0460								
0470	25	43 00 109		4,7), B202S	1	Electronic unit	Elektronikenhet	4
0480	25	43 00 125		4,7,190), B202 TURBO, T25, 185HP, (137KW)	1	Electronic unit	Elektronikenhet	4
0500								
0510	25	78 59 747		4,7,205), B234 TURBO, M	1	Electronic unit	Elektronikenhet	5

4. With catalytic converter. Med katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
82. Engine --L015462, --L200464.
83. Engine L015463-, L200465-.
141. Engine --L74038.
142. Engine L74039-.
178. Part of 91 33 067 and 91 30 493. Del av 91 33 067 och 91 30 493.
190. Ch N1015621-.
205. Ch --N1037539.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B06

Ignition system
SAAB DI
-1992

Tändsystem
SAAB DI
-1992

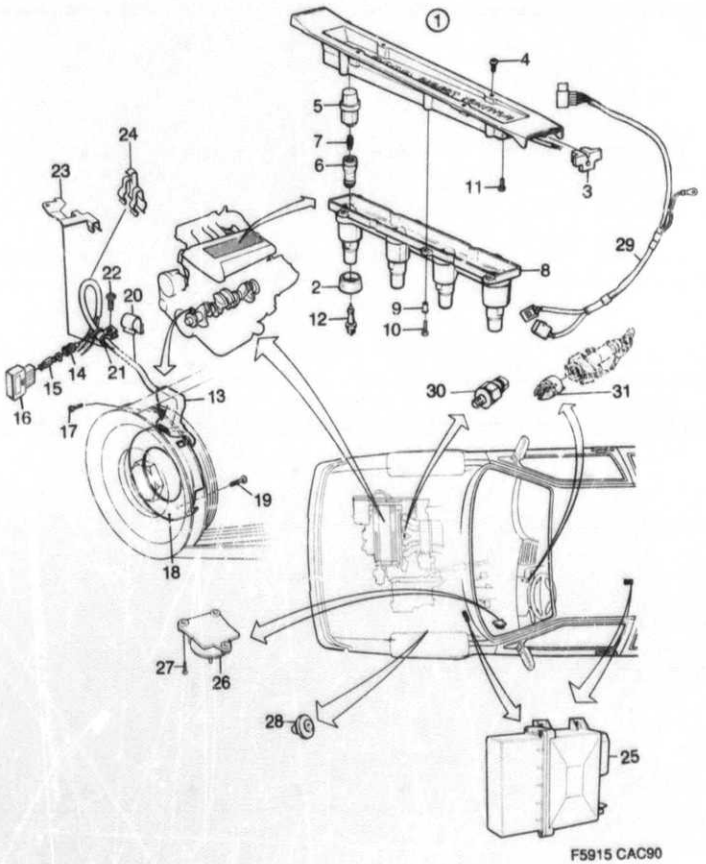

F5915 CAC90

0448	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	25	78 59 747		4,7,206), B234 TURBO M, TCS	1	Electronic unit	Elektronikenhet	5
0530								
0540	25	43 00 448		4,7,206), B234 TURBO M	1	Electronic unit	Elektronikenhet	4
0550								
0560	25	91 08 531		4,7,205), B234 TURBO, A	1	Electronic unit	Elektronikenhet	4
0570	25	91 08 531		4,7,206), B234 TURBO A, ASR	1	Electronic unit	Elektronikenhet	4
0580								
0590	25	43 00 455		4,7,206), B234 TURBO A	1	Electronic unit	Elektronikenhet	4
0600								
0610	25	91 13 879		4,7), 1990, B234 I	1	Electronic unit	Elektronikenhet	5
0620	25	78 59 689		7), 1991-, B234 I	1	Electronic unit	Elektronikenhet	5
0630								
0640	25	87 88 614		5,7), 1990, BE, 175 HP, (129KW), TEO5	1	Electronic unit	Elektronikenhet	4
0650								
0660	25	87 88 614		5,7), 1990, 175HP, (129KW), TEO5	1	Electronic unit	Elektronikenhet	4
0670								
0680	25	91 19 363		5,7), 1990, 175HP, (129KW), T25	1	Electronic unit	Elektronikenhet	4
0690								
0700	25	78 59 697		5,7), 1991-, 175HP, (129KW), T25	1	Electronic unit	Elektronikenhet	4
0710								
0720	25	91 19 371		5,7), 1990, 185HP, (136KW), T25	1	Electronic unit	Elektronikenhet	4
0730								
0740	25	78 59 713		5,7), 1991-, 185HP, (136KW), T25	1	Electronic unit	Elektronikenhet	4
0750								
0760	25	43 00 125		5,7), 1992, 195HP, (144KW), T25	1	Electronic unit	Elektronikenhet	4
0770								
0780								
0790	26	75 38 697		1990	1	Sensor	Givare	3
0800	27	79 22 446		1990	3	Screw	Skruv	5
0810								
0820	28	82 67 296			2	Plug	Plugg	5
0830	29	93 21 787			1	Cable harness	Ledningsnät	6
0840								
0850	30			See page 2-169, 1-J02		Knock sensor	Knacksensor	
0860	31			See page 6-007, 4-C08		Starter switch	Startkontakt	
0870				See page 3A-133, 2-F14		Cable harness	Ledningsnät	

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
205. Ch -N1037539.
206. Ch N1037540-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B08

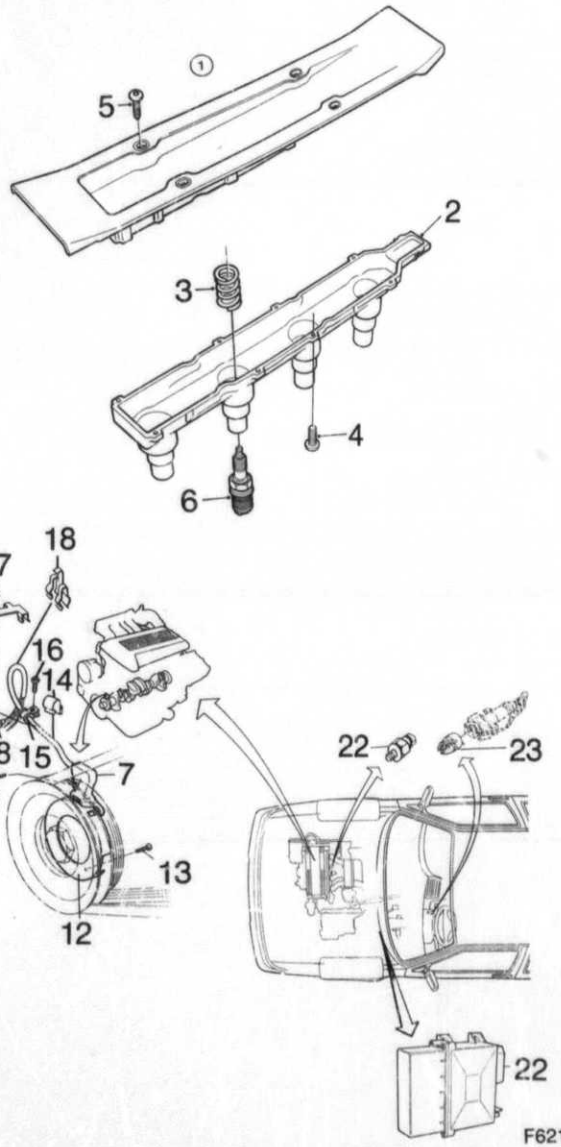

F6217 CAC93

0449	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 34 404			1	Ignition cassette	Tändkassett	4
0020	2	91 67 016			1	. Lower section	. Underdel	4
0030	3	91 67 032			4	. Spring	. Fjäder	4
0040	4	79 68 316			8	. Screw	. Skruv	5
0050	5	91 45 764			4	Screw	Skruv	5
0060	6			See page 3A-023, 2-A24		Spark plug	Tändstift	
0070								
0080	7	91 33 067		B202	1	Sensor	Givare	4
0090	7	91 30 493		B234	1	Sensor	Givare	4
0100	8	40 61 966			3	. Seal	. Tätning	5
0110	9	40 61 578			3	. Cable terminal	. Ledningssko	5
0120	10	41 13 001			1	. Connector housing	. Kontakthus	4
0130	11	91 27 440			2	Screw	Skruv	5
0140	12	91 17 177			1	Aperture disc	Bländarskiva	4
0150	13	*91 14 455*		NLS - USE 9127440	3	Screw	Skruv	5
0160	14	41 58 671			1	Clip	Clips	5
0170	15	*81 39 339*		NLS - USE 7969348	1	Clamp	Klammer	5
0180	16	81 25 023			1	Screw	Skruv	5
0190	17	88 56 890		B234 TURBO	1	Clamp	Klammer	5
0200	18	88 56 908		B234 TURBO	1	Clamp	Klammer	5
0210								
0220	20			See page 2-169, 1-J02		Knock sensor	Knacksensor	
0230	21			See page 6-007, 4-C08		Starter switch	Startkontakt	
0240								
0250	22	78 59 705		BE, 157HP, (116KW), T3	1	Electronic unit	Elektronikenhet	3
0260	22	78 59 721		4,7), 165HP,(122KW), T25	1	Electronic unit	Elektronikenhet	4
0270	22	78 59 721		4,7), 165HP, TCS, (122KW), T25	1	Electronic unit	Elektronikenhet	4
0280								
0290								
0300	22	43 00 109		4,7), B202S	1	Electronic unit	Elektronikenhet	4
0310								
0320	22	43 00 125		4,7), B202 TURBO, T25, 185HP, (137KW)	1	Electronic unit	Elektronikenhet	4
0330								
0340								
0350	22	78 59 747		4,7), B234 TURBO, M, TCS	1	Electronic unit	Elektronikenhet	5
0360	22	43 00 448		4,7), B234 TURBO M	1	Electronic unit	Elektronikenhet	4
0370								
0380	22	91 08 531		4,7), B234 TURBO, A, ASR	1	Electronic unit	Elektronikenhet	4
0390	22	43 00 455		4,7), B234 TURBO A	1	Electronic unit	Elektronikenhet	4
0400								
0410	22	78 59 689		7), B234 I	1	Electronic unit	Elektronikenhet	5
0420								
0430	22	78 59 697		5,7), 175HP, (129KW), T25	1	Electronic unit	Elektronikenhet	4
0440								
0450	22	43 00 125		5,7), 195HP, (144KW), T25	1	Electronic unit	Elektronikenhet	4
0460								


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

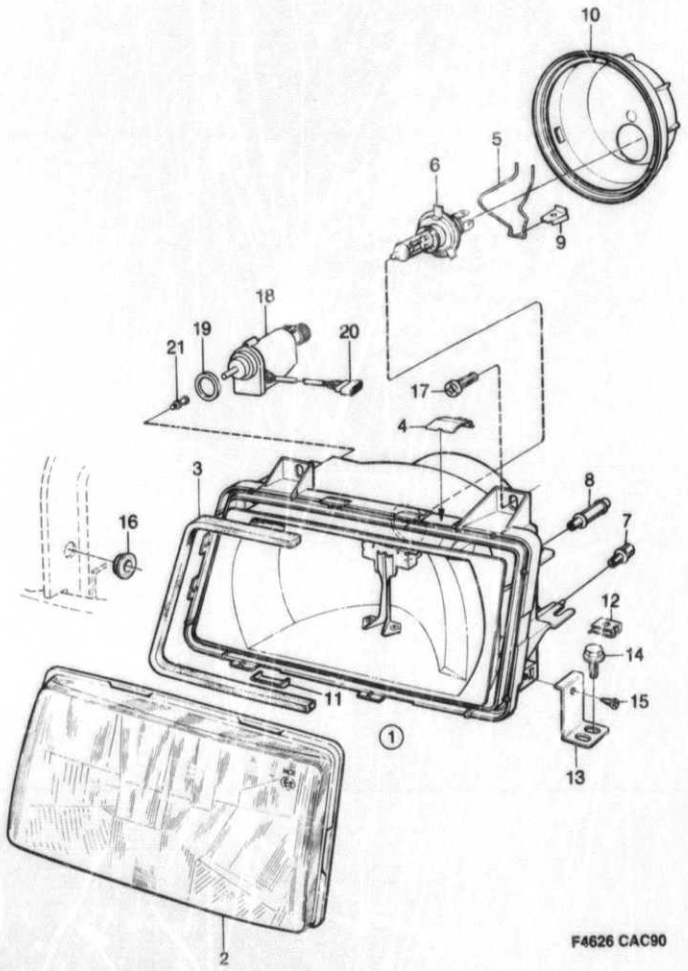

F4626 CAC90

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 65 938		LH	1	Headlamp	Strålkastare	4
0020	1	95 65 946		RH	1	Headlamp	Strålkastare	4
0030	1	95 65 953		20), LH	1	Headlamp	Strålkastare	4
0040	1	95 65 961		20), RH	1	Headlamp	Strålkastare	4
0050	2	95 01 172		LH	1	.Glass	.Strålkastarglas	2
0060	2	95 01 180		RH	1	.Glass	.Strålkastarglas	2
0070	2	95 05 157		20), LH	1	.Glass	.Strålkastarglas	2
0080	2	95 05 165		20), RH	1	.Glass	.Strålkastarglas	2
0090	3	42 51 856		LH	1	.Seal	.Tätning	3
0095	3	42 51 864		RH	1	.Seal	.Tätning	3
0100	4	95 01 230			6	.Clip	.Clips	5
0110	5	95 01 255			1	.Spring	.Fjäder	3
0120	6	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0121	7	43 81 463			2	.Bearing sleeve	.Lagerhylsa	3
0122	8	43 81 471			1	.Bearing sleeve	.Lagerhylsa	3
0123	9	43 81 489			1	.Clip	.Clips	3
0130	10	95 13 581		B202	2	Cover	Täcklock	4
0135	10	40 12 951		B234	2	Cover	Täcklock	4
0140	11	95 64 238		CA	2	Support	Stöd	6
0150	12	85 50 824			2	Clip	Clips	3
0160	13	40 13 017		LH	1	Attaching bracket	Fästvinkel	6
0170	13	40 13 025		RH	1	Attaching bracket	Fästvinkel	6
0180	14	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0190	15	79 73 159			2	Screw	Skruv	5
0200	16	95 04 648			4	Bushing	Bussning	3
0210	17	79 73 159			4	Screw	Skruv	5
0240								
0250	18	95 29 785	S		2	Electric motor	Elmotor	3
0255						headlamp levelling	ljuslängdsreglering	
0260	19	95 29 793	S		1	.Sealing ring	.Tätningsring	9
0270	20	95 03 327	S		1	.Contact housing	.Kontakthus	4
0275						3-pole, female	3-polig, hylsa	
0280	21	95 69 963			2	Adapter	Adapter	5
0285						headlamp levelling	ljuslängdsreglering	
0290		85 47 838		See page 3A-215, 2-I24	X	Lamp adjustment kit	Ljusregleringssats	5
0295						headlamp levelling	ljuslängdsreglering	

20. For left hand traffic. För vänstertrafik.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B12

Lighting
Headlamp
5D, 1991-

Belysning
Strålkastare
5D, 1991-

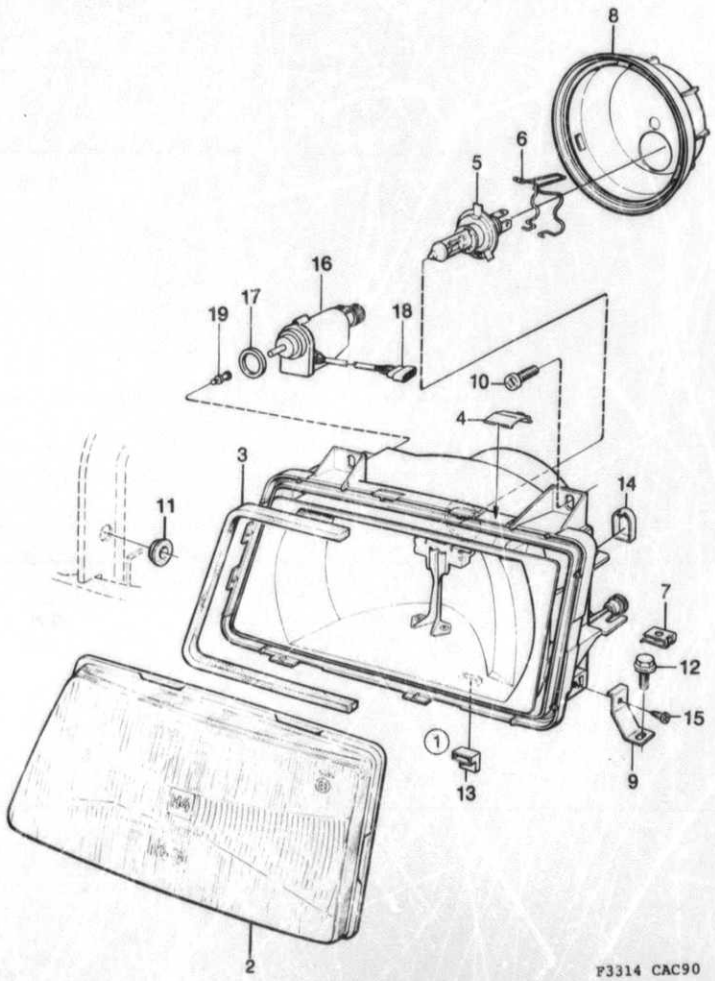

0455	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 25 279		LH	1	Headlamp	Strålkastare	4
0020	1	91 25 287		RH	1	Headlamp	Strålkastare	4
0030	1	91 25 295		20), LH	1	Headlamp	Strålkastare	4
0040	1	91 25 303		20), RH	1	Headlamp	Strålkastare	4
0050	2	95 21 956		LH	1	.Glass	.Strålkastarglas	2
0060	2	95 21 964		RH	1	.Glass	.Strålkastarglas	2
0070	2	95 25 312		20), LH	1	.Glass	.Strålkastarglas	2
0080	2	95 25 320		20), RH	1	.Glass	.Strålkastarglas	2
0090	3	95 21 881			1	.Seal	.Tätning	4
0100	4	95 56 705			9	.Clip	.Clips	5
0110	5	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0115	6	95 64 352			1	.Spring	.Fjäder	4
0120	7	85 50 824			1	.Clip	.Clips	3
0130	8	95 25 015			2	Cover	Kåpa	5
0140	9	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0150	9	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0160	10	79 73 159			4	Screw	Skruv	5
0170	11	95 04 648			2	Bushing	Bussning	3
0180	12	79 69 223			2	Screw	Skruv	5
0190	13	95 26 351			2	Vent pipe	Urluftningsrör	9
0200	14	95 26 344			2	Bleeder cover	Urluftningslock	9
0210	15	79 73 159			2	Screw	Skruv	5
0240								
0250	16	95 66 662	S		2	Electric motor	Elmotor	3
0255						headlamp levelling	ljuslängdareglering	
0260	17	95 29 793	S		1	.Sealing ring	.Tätningsring	9
0270	18	95 03 327	S		1	.Contact housing	.Kontakthus	4
0275						3-pole, female	3-polig, hylsa	
0280	19	95 69 963	S		1	.Adapter	.Adapter	5
0290		85 47 846		See page 3A-215, 2-I24	X	Lamp adjustment kit	Ljusregleringssats	5
0300						headlamp levelling	ljuslängdsreglering	


20. For left hand traffic. För vänstertrafik.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

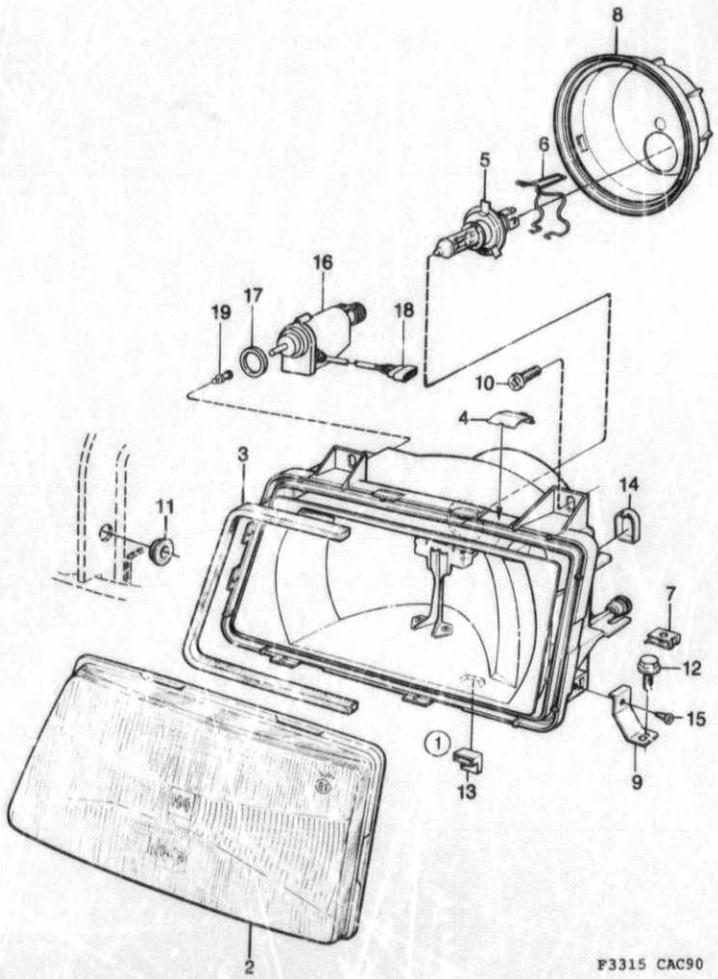

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 25 279		LH	1	Headlamp	Strålkastare	4
0020	1	91 25 287		RH	1	Headlamp	Strålkastare	4
0030	1	91 25 295		20), LH	1	Headlamp	Strålkastare	4
0040	1	91 25 303		20), RH	1	Headlamp	Strålkastare	4
0050	2	95 21 956		LH	1	.Glass	.Strålkastarglas	2
0060	2	95 21 964		RH	1	.Glass	.Strålkastarglas	2
0070	2	95 25 312		20), LH	1	.Glass	.Strålkastarglas	2
0080	2	95 25 320		20), RH	1	.Glass	.Strålkastarglas	2
0090	3	95 21 881			1	.Seal	.Tätning	4
0100	4	95 56 705			9	.Clip	.Clips	5
0110	5	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	9
0115	6	95 64 352			1	.Spring	.Fjäder	4
0120	7	85 50 824			1	.Clip	.Clips	3
0130	8	95 25 015			2	Cover	Kåpa	5
0140	9	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0150	9	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0160	10	79 73 159			4	Screw	Skruv	5
0170	11	95 04 648			2	Bushing	Bussning	3
0180	12	79 69 223			2	Screw	Skruv	5
0190	13	95 26 351			2	Vent pipe	Urluftningsrör	9
0200	14	95 26 344			2	Bleeder cover	Urluftningslock	9
0210	15	79 73 159			2	Screw	Skruv	5
0240								
0250	16	95 66 662	S		2	Electric motor headlamp levelling	Elmotor ljuslängdsreglering	3
0255								
0260	17	95 29 793	S		1	.Sealing ring	.Tätningsring	9
0270	18	95 03 327	S		1	.Contact housing 3-pole, female	.Kontakthus 3-polig, hylsa	4
0275								
0280	19	95 69 963	S		1	.Adapter	.Adapter	5
0290		85 47 846		See page 3A-215, 2-I24	X	Lamp adjustment kit headlamp levelling	Ljusregleringssats ljuslängdsreglering	5
0300								

20. For left hand traffic. För vänstertrafik.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

Lighting

2-B16 Headlamp 5CS

Belysning

Strålkastare 5CS

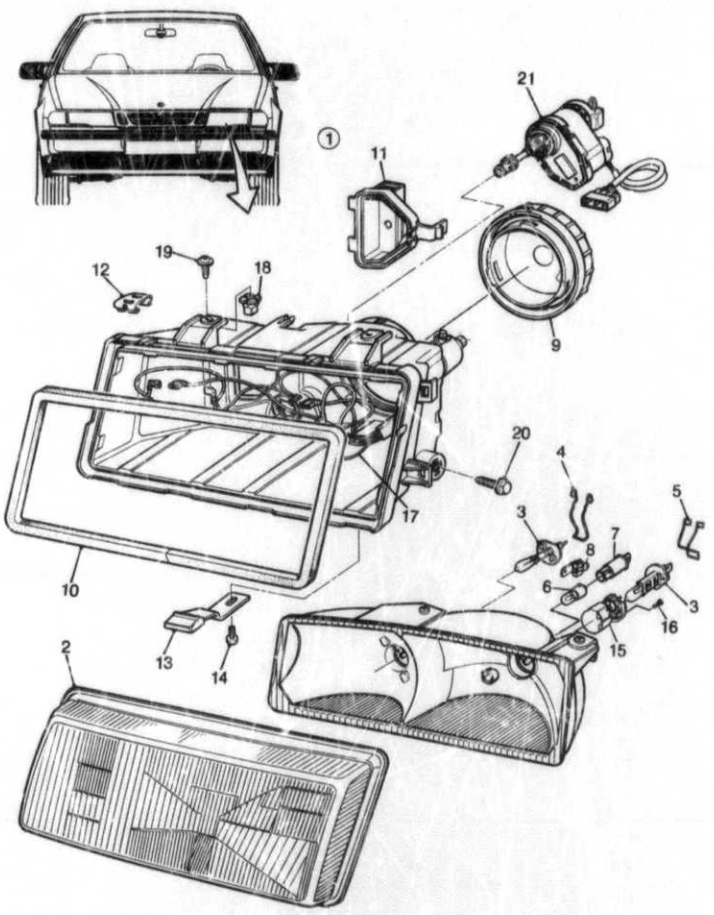

F6144 CAC90

0470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 81 373		LH	1	Headlamp	Strålkastare	4
0020	1	90 81 381		RH	1	Headlamp	Strålkastare	4
0030	1	90 85 671		152), LH, FR	1	Headlamp	Strålkastare	4
0040	1	90 85 689		152), RH, FR	1	Headlamp	Strålkastare	4
0050	1	90 82 918		20), LH	1	Headlamp	Strålkastare	4
0060	1	90 82 926		20), RH	1	Headlamp	Strålkastare	4
0070	2	90 81 431		LH	1	.Glass	.Strålkastarglas	2
0080	2	90 81 449		RH	1	.Glass	.Strålkastarglas	2
0090	2	90 89 772		153), LH	1	.Glass	.Strålkastarglas	2
0100	2	90 89 780		154), RH	1	.Glass	.Strålkastarglas	2
0110	2	90 84 013		155), LH	1	.Glass	.Strålkastarglas	2
0120	2	90 84 021		156), RH	1	.Glass	.Strålkastarglas	2
0130	3	40 60 364			2	.Bulb	.Glödlampa	3
0140	4	40 89 256			1	.Spring	.Fjäder	4
0150	5	44 47 744		(4380085)	1	.Spring	.Fjäder	4
0160	6	71 57 309		40/238 274 005	1	.Bulb	.Glödlampa	3
0170	7	43 81 448			1	.Bulb socket	.Lamphållare	6
0180	8	43 81 455			1	.Clip	.Jordningstunga	5
0190	9	85 33 710			1	.Sealing cover	.Tätningslock	4
0200	10	90 82 439			1	.Seal	.Tätning	4
0210	11	90 85 416			1	.Cover	.Lock	4
0220	12	95 56 705			10	.Clip	.Clips	5
0230	13	90 82 579			1	.Stop	.Stopp	3
0240	14	79 22 891			1	.Screw	.Skruv	5
0250	15	44 47 736			1	.Bulb socket	.Lamphållare	3
0260	16	44 47 751			3	.Screw	.Skruv	5
0270	17	42 53 407			1	.Cable harness	.Ledningsnät	5
0280	18	79 75 261			4	Nut	Mutter	5
0290	19	79 73 001			4	Screw	Skruv	5
0300	20	79 78 109			4	Screw	Skruv	5
0310	21	40 94 967		LH	1	Electric motor	Elmotor	3
0320	21	43 43 125		RH	1	Electric motor	Elmotor	3

20. For left hand traffic. För vänstertrafik.
152. Yellow. Gul.
153. Part of 90 85 671. Del av 90 85 671.
154. Part of 90 85 689. Del av 90 85 689.
155. Part of 90 82 918. Del av 90 82 918.
156. Part of 90 82 926. Del av 90 82 926.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24


Lighting

2-B18

Headlamp, sealed beam
5D, 1990

Belysning

Strålkastare, sealed beam
5D, 1990

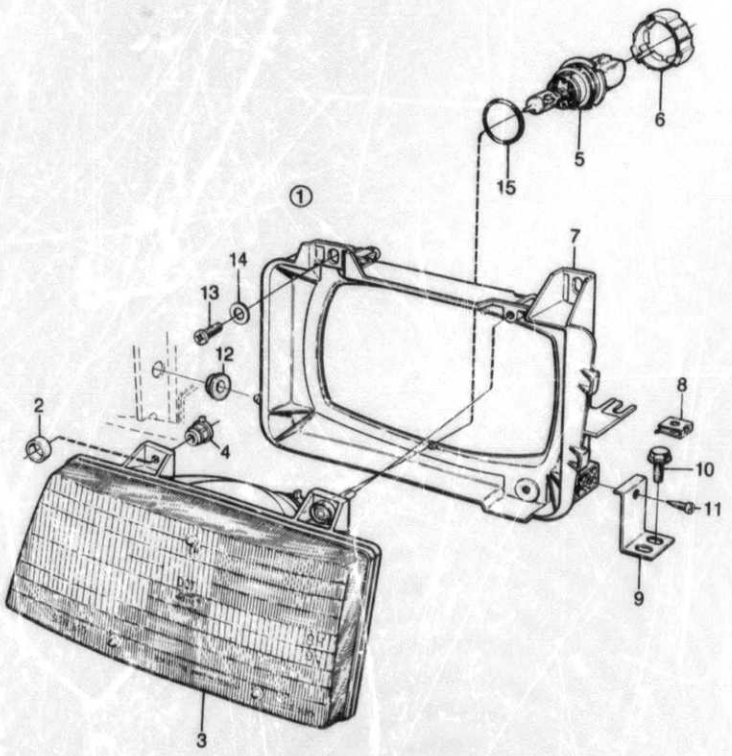

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 22 672		LH	1	Headlamp	Strålkastare	4
0020	1	91 22 680		RH	1	Headlamp	Strålkastare	4
0030	2	95 13 037			3	.Clamping sleeve	.Klämhylsa	3
0040	3	91 22 698		LH	1	.Headlamp insert	.Strålkastarinsats	1
0050	3	91 22 706		RH	1	.Headlamp insert	.Strålkastarinsats	1
0060	4	95 12 328			3	..Bearing sleeve	..Lagerhylsa	3
0070	5	95 12 401		40/238 301 006	1	.Bulb	.Glödlampa	1
0080	6	95 12 393			1	.Lock ring	.Låsring	3
0090	7	95 13 078		LH	1	.Attaching frame	.Fästram	3
0100	7	95 13 086		RH	1	.Attaching frame	.Fästram	3
0110	8	85 50 824			1	..Clip	..Clips	3
0120	9	40 13 017		LH	1	Attaching bracket	Fästvinkel	6
0130	9	40 13 025		RH	1	Attaching bracket	Fästvinkel	6
0140	10	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0150	11	79 22 438			2	Screw	Skruv	5
0160	12	95 04 648			2	Bushing	Bussning	3
0170	13	79 22 438			4	Screw	Skruv	5
0180	14	80 29 951			4	Washer	Bricka	5
0190	15	95 14 911		US	2	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B20

Headlamp, sealed beam
5D, 1991-

Strålkastare, sealed beam
5D, 1991-

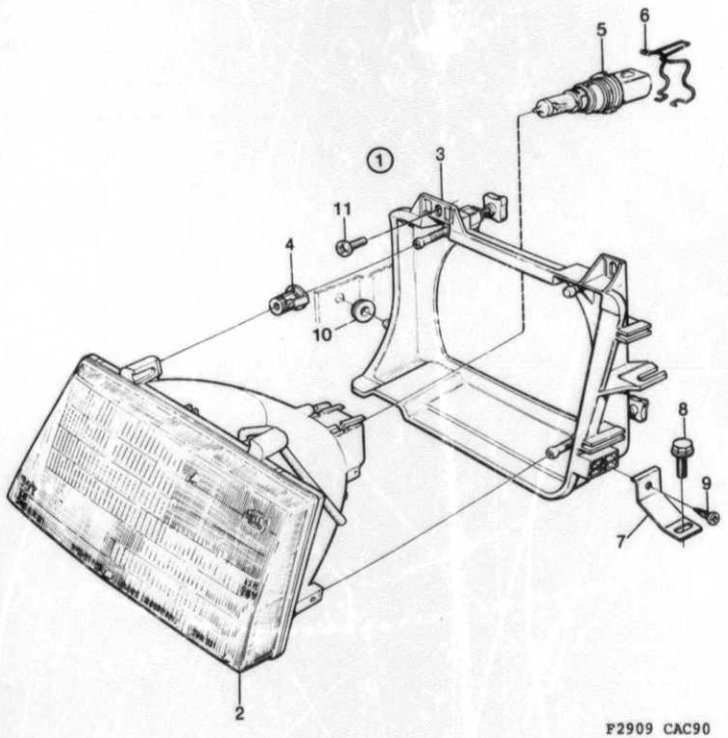

F2909 CAC90

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 21 352		LH	1	Headlamp	Strålkastare	4
0020	1	95 21 360		RH	1	Headlamp	Strålkastare	4
0030	2	95 21 774		LH	1	. Headlamp insert	. Strålkastarinsats	1
0040	2	95 21 782		RH	1	. Headlamp insert	. Strålkastarinsats	1
0050	3	95 21 816		LH	1	. Attaching frame	. Fästram	3
0060	3	95 21 824		RH	1	. Attaching frame	. Fästram	3
0070	4	95 26 484			3	.. Bearing sleeve	.. Lagerhylsa	3
0080	5	95 12 401		40/238 301 006	1	. Bulb	. Glödlampa	1
0090	6	95 26 260			1	. Spring	. Fjäder	4
0100	7	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0110	7	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0120	8	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0130	9	79 22 438			2	Screw	Skruv	5
0140	10	95 04 648			2	Bushing	Bussning	3
0150	11	79 73 159			4	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B22 Headlamp, sealed beam 4D / Strålkastare, sealed beam 4D

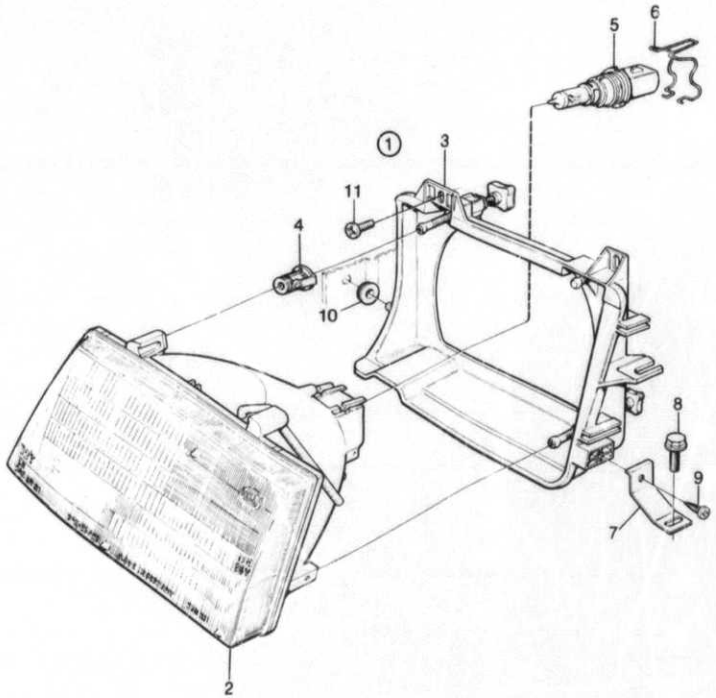

F1107 CAC90

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 21 352		LH	1	Headlamp	Strålkastare	4
0020	1	95 21 360		RH	1	Headlamp	Strålkastare	4
0030	2	95 21 774		LH	1	. Headlamp insert	. Strålkastarinsats	1
0040	2	95 21 782		RH	1	. Headlamp insert	. Strålkastarinsats	1
0050	3	95 21 816		LH	1	. Attaching frame	. Fästram	3
0060	3	95 21 824		RH	1	. Attaching frame	. Fästram	3
0070	4	95 26 484			3	.. Bearing sleeve	.. Lagerhylsa	3
0080	5	95 12 401		40/238 301 006	1	. Bulb	. Glödlampa	1
0090	6	95 26 260			1	. Spring	. Fjäder	4
0100	7	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0110	7	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0120	8	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0130	9	79 22 438			2	Screw	Skruv	5
0140	10	95 04 648			2	Bushing	Bussning	3
0150	11	79 73 159			4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-B24

Headlamp, sealed beam
5CS

Strålkastare, sealed beam
5CS

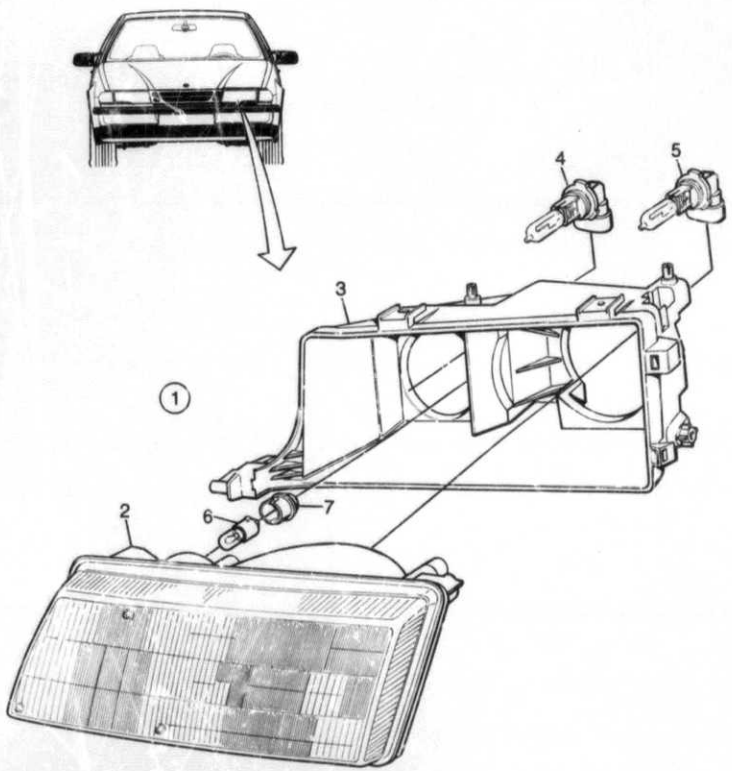

F4451 CAC90

0520	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	90 82 892		LH	1	Headlamp	Strålkastare	4
0020	1	90 82 900		RH	1	Headlamp	Strålkastare	4
0030	2	90 84 112		LH	1	.Headlamp insert	.Strålkastarinsats	1
0040	2	90 84 120		RH	1	.Headlamp insert	.Strålkastarinsats	1
0050	3	90 84 179		LH	1	.Attaching frame	.Fästram	3
0050	3	90 84 187		RH	1	.Attaching frame	.Fästram	3
0070	4	40 89 264			1	.Bulb	.Glödlampa	3
0080	5	40 89 272			1	.Bulb	.Glödlampa	3
0090	6	71 57 308		40/238 274 005	1	.Bulb	.Glödlampa	3
0100	7	42 52 581			1	.Bulb socket	.Lamphållare	3

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-C02 Lamp cluster 5D, 1990

Kombinationslykta 5D, 1990

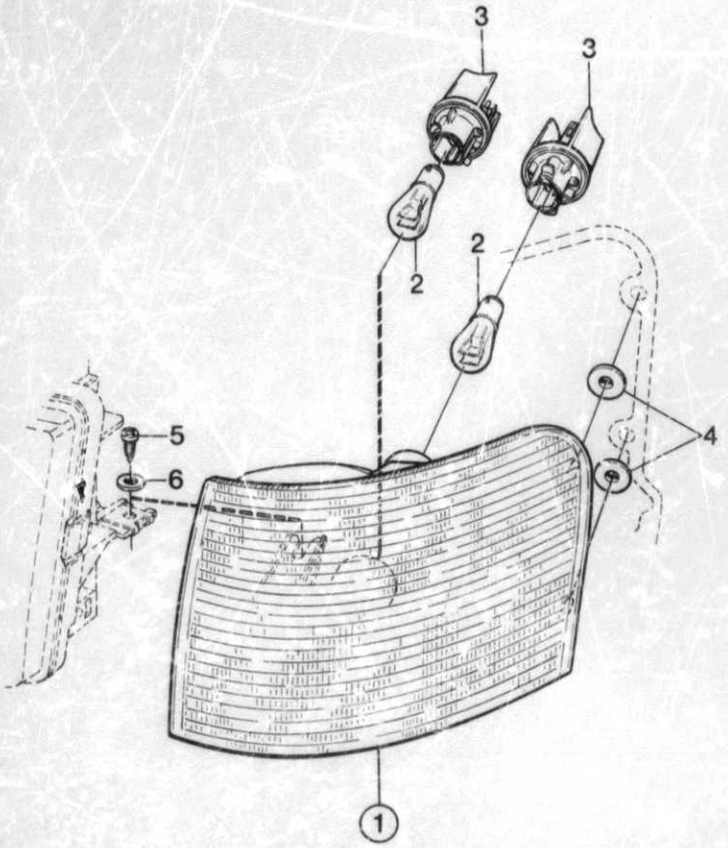

F1108 CAC90


0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 175		LH	1	Direction indicator	Blinklykta	2
0020	1	91 23 183		RH	1	Direction indicator	Blinklykta	2
0030								
0040	1	91 21 815		LH, US, CA, JP	1	Direction indicator	Blinklykta	2
0050	1	91 21 823		RH, US, CA, JP	1	Direction indicator	Blinklykta	2
0060	2	*85 37 672*		40/238 292 007 NLS - USE 4320594	2	.Bulb	.Glödlampa	1
0060								
0070	2	85 32 756		US,CA,JP, 40/238 291 009	2	.Bulb	.Glödlampa	1
0080	3	95 56 994			2	.Bulb socket	.Lamphållare	6
0090	4	95 07 708			4	Bushing	Bussning	3
0100	5	79 22 438			2	Screw	Skruv	5
0110	6	85 44 801			2	Washer	Bricka	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

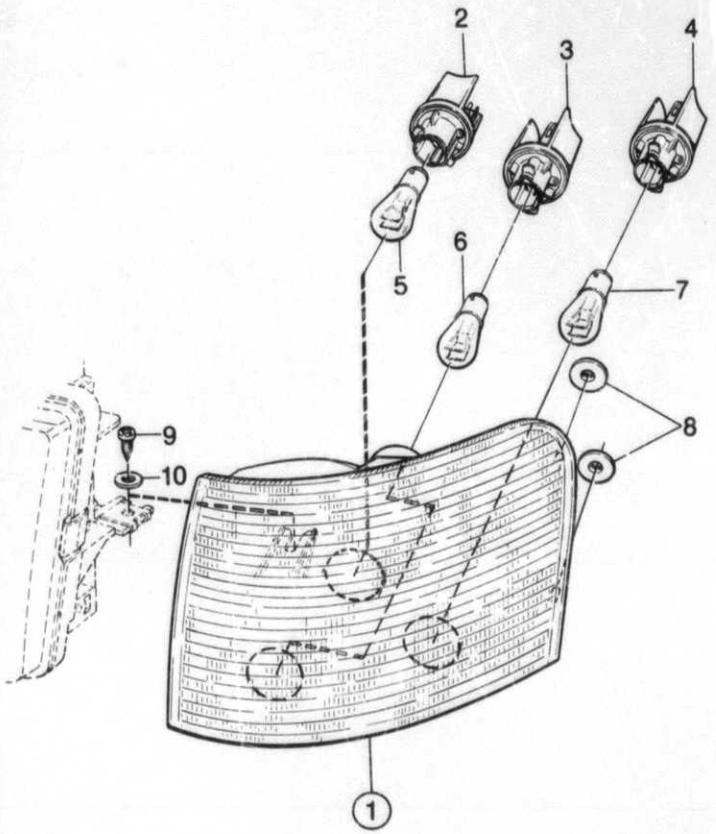

F2910 CAC90

Lighting

2-C04 Lamp cluster 5D, 1991-

Belysning

Kombinationslykta 5D, 1991-


0555	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	42 52 250		LH, SE	1	Direction indicator	Blinklykta	2
0040	1	42 52 268		RH, SE	1	Direction indicator	Blinklykta	2
0050								
0100	1	42 52 276		LH, FI, GB, EU, ME,FE,AU	1	Direction indicator	Blinklykta	2
0110	1	42 52 284		RH, FI, GB, EU, ME,FE,AU	1	Direction indicator	Blinklykta	2
0120								
0145	1	42 52 292		LH, US, CA, JP	1	Direction indicator	Blinklykta	2
0147	1	42 52 300		RH, US, CA, JP	1	Direction indicator	Blinklykta	2
0150	2	91 22 227		SE, FI, GB, EU, ME, FE, AU	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0160								
0170	2	95 56 994		US, CA, JP	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0180								
0190								
0200	3	95 56 986		SE, FI, GB, EU, ME, FE, AU	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0210								
0220	3	95 56 994		US, CA, JP	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0230								
0240								
0250	4	95 56 986		SE	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0260								
0270	4	91 22 227		US, CA, JP	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0280								
0290	5	71 54 719		SE, FI, GB, EU,ME,FE,AU 40/238 290 001	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0300								
0310	5	85 32 756		US, CA, JP, 40/238 291 009	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0320								
0330	6	71 54 727		SE, FI, GB, EU,ME,FE,AU, 40/238 254 007	1	.Bulb position lamp	.Glödlampa positionslykta	1
0340								
0350	6	85 32 756		US, CA, JP, 40/238 291 009	1	.Bulb position lamp	.Glödlampa positionslykta	1
0360								
0370	7	71 54 719		SE, 40/238 290 001	1	.Bulb reverse lamp	.Glödlampa backlampa	1
0380								
0390	7	85 35 692		US, CA, JP, 40/238 304 000	1	.Bulb reverse lamp	.Glödlampa backlampa	1
0400								
0410								
0420	8	95 07 708			4	Bushing	Bussning	3
0430	9	79 22 438			2	Screw	Skruv	5
0440	10	85 44 801			2	Washer	Bricka	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

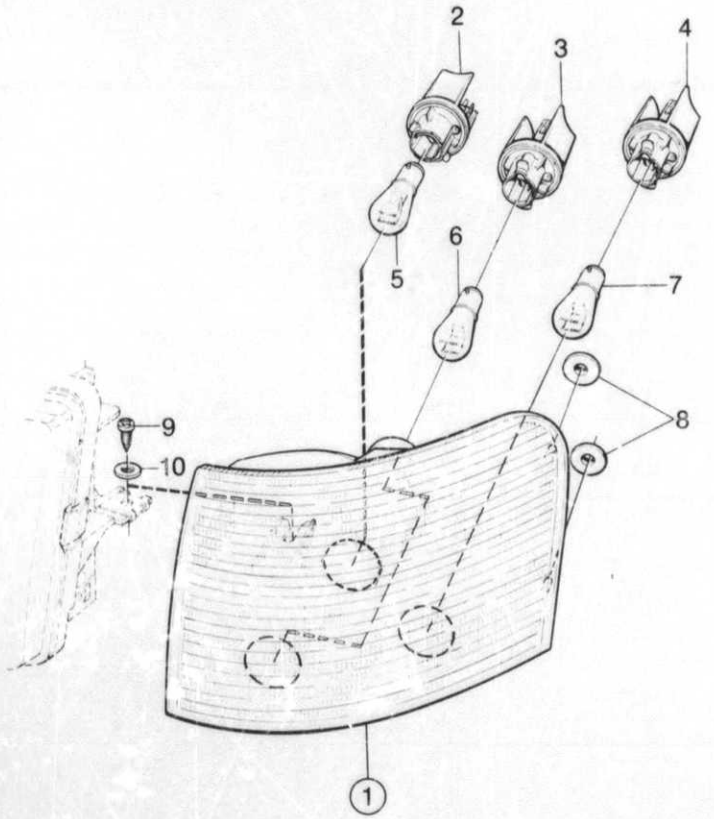

F1109 CAC90

Lighting

2-C06 Lamp cluster 4D

Belysning

Kombinationslykta 4D

0560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*91 25 014*		1990, LH, SE NLS - USE 4252250	1	Direction indicator	Blinklykta	2
0020	1	*91 25 022*		1990, RH, SE NLS - USE 4252268	1	Direction indicator	Blinklykta	2
0025	1	42 52 250		1991-, LH, SE	1	Direction indicator	Blinklykta	2
0027	1	42 52 268		1991-, RH, SE	1	Direction indicator	Blinklykta	2
0040	1	*91 22 250*		1990, LH, FI, GB, EU, ME, FE, AU NLS - USE 4252276	1	Direction indicator	Blinklykta	2
0050	1	*91 22 268*		1990, RH, FI, GB, EU ME, FE, AU NLS - USE 4252284	1	Direction indicator	Blinklykta	2
0055	1	42 52 276		1991-, LH, FI, GB, EU, ME, FE, AU	1	Direction indicator	Blinklykta	2
0057	1	42 52 284		1991-, RH, FI, GB, EU, ME, FE, AU	1	Direction indicator	Blinklykta	2
0070	1	*91 25 030*		1990, LH, US, CA, JP NLS - USE 4252292	1	Direction indicator	Blinklykta	2
0080	1	*91 25 048*		1990, RH, US, CA, JP NLS - USE 4252300	1	Direction indicator	Blinklykta	2
0085	1	42 52 292		1991-, LH, US, CA, JP	1	Direction indicator	Blinklykta	2
0087	1	42 52 300		1991-, RH, US, CA, JP	1	Direction indicator	Blinklykta	2
0090	2	91 22 227		SE, FI, GB, EU, ME, FE, AU	1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0110	2	95 56 994		US, CA, JP	1	. Bulb socket 3-pole	. Lamphållare 3-polig	6
0130	3	95 56 986		SE, FI, GB, EU, ME, FE, AU	1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0150	3	95 56 994		US, CA, JP	1	. Bulb socket 3-pole	. Lamphållare 3-polig	6
0170	4	95 56 986		SE	1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0190	4	91 22 227		US, CA, JP	1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0210	5	71 54 719		SE, FI, GB, EU, ME, FE, AU 40/238 290 001	1	. Bulb direction indicator	. Glödlampa blinklykta	1
0240	5	85 32 756		US, CA, JP, 40/238 291 009	1	. Bulb direction indicator	. Glödlampa blinklykta	1
0260	6	71 54 727		SE, FI, GB, EU, ME, FE, AU, 40/238 254 007	1	. Bulb position lamp	. Glödlampa positionslykta	1
0290	6	85 32 756		US, CA, JP, 40/238 291 009	1	. Bulb position lamp	. Glödlampa positionslykta	1
0310	7	71 54 719		SE, 40/238 290 001	1	. Bulb reverse lamp	. Glödlampa backlampa	1
0330	7	85 35 692		US, CA, JP, 40/238 304 000	1	. Bulb reverse lamp	. Glödlampa backlampa	1
0360	8	95 07 708			4	Bushing	Bussning	3
0370	9	79 22 438			2	Screw	Skruv	5
0380	10	85 44 801			2	Washer	Bricka	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

Lighting

2-C08 Lamp cluster 5CS

Belysning

Kombinationslykta 5CS

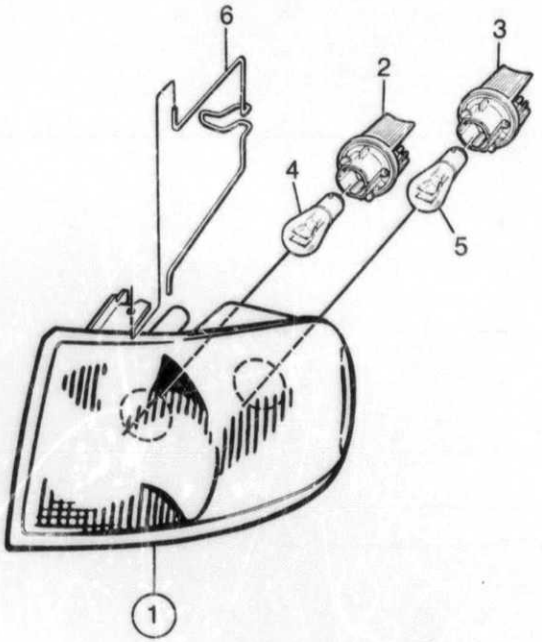

F3782 - CAC90

0565	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	43 44 032		LH	1	Direction indicator	Blinklykta	2
0020	1	43 44 040		RH	1	Direction indicator	Blinklykta	2
0030								
0040	1	43 44 016		160), LH	1	Direction indicator	Blinklykta	2
0050	1	43 44 024		160), RH	1	Direction indicator	Blinklykta	2
0060								
0061	1	43 44 057		LH, US	1	Direction indicator	Blinklykta	2
0062	1	43 44 065		RH, US	1	Direction indicator	Blinklykta	2
0063								
0090	2	91 22 227			1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0100								
0110	2	95 56 994		US	1	. Bulb socket 3-pole	. Lamphållare 3-polig	6
0120								
0130	3	43 40 998			1	. Bulb socket 2-pole	. Lamphållare 2-polig	6
0140								
0150	4	71 54 719		40/238 290 001	1	. Bulb	. Glödlampa	1
0170								
0175	4	85 32 756		US, 40/238 291 009	1	. Bulb	. Glödlampa	1
0177								
0180	5	71 54 719		40/238 290 001	1	. Bulb	. Glödlampa	1
0200								
0205	5	85 35 692		US, 40/238 304 000	1	. Bulb	. Glödlampa	1
0207								
0210	6	43 42 937		LH	1	Brace	Bygel	6
0220	6	43 42 945		RH	1	Brace	Bygel	6

160. With side back up light. Med sidobackljus.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-C10

Fog light — *Dimljus*

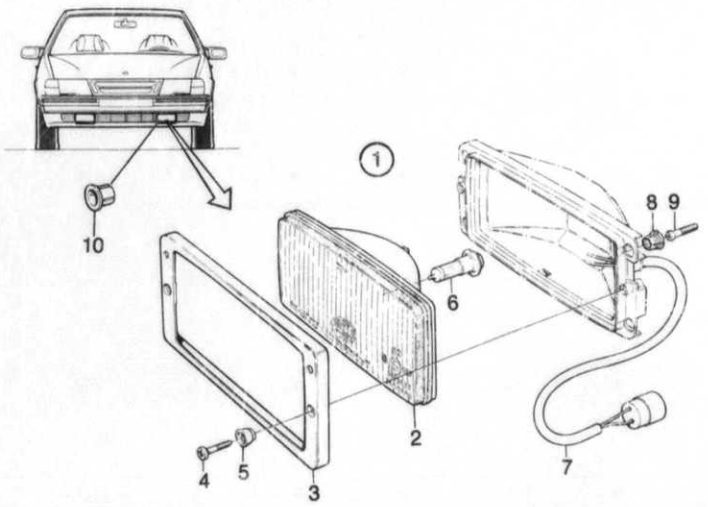

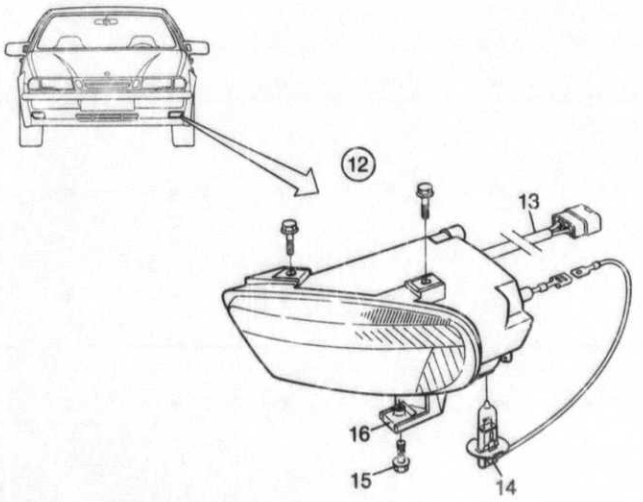

F4452 CAC90

0570	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0020	1	95 29 900		4D, 5D	2	Fog light	Dimljus	9
0030	2	95 29 884			1	.Insert	.Insats	9
0040	3	95 29 868			1	.Frame	.Ram	9
0050	4	95 29 405			2	.Screw	.Skruv	5
0060	5	95 28 720			2	.Sleeve	.Hylsa	3
0070	6	*95 29 876*		40/238 216 006 NLS - USE 8529109	1	.Bulb	.Glödlampa	1
0070								
0080	7	95 18 507			1	.Cable harness	.Ledningsnät	6
0090	8	95 29 827			3	.Bushing	.Bussning	3
0100	9	95 29 843			3	.Screw	.Skruv	2
0110	10	95 29 835			3	.Nut	.Mutter	3
0120								
0130	12	40 14 312		5CS, LH	1	Fog light	Dimljus	4
0140	12	40 14 320		5CS, RH	1	Fog light	Dimljus	4
0145	12	43 44 198		152), 5CS, LH, FR	1	Fog light	Dimljus	4
0147	12	43 44 206		152), 5CS, RH, FR	1	Fog light	Dimljus	4
0150	13	43 50 328			1	.Cable harness	.Ledningsnät	6
0160	14	*95 29 876*		NLS - USE 8529109	1	.Bulb	.Glödlampa	1
0170	15	79 69 223		5CS	6	Screw	Skruv	5
0180	16	43 41 095		5CS	6	Clip nut	Klämmutter	5

152. Yellow. Gul.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2 C12 Tail lamp / Baklykta

5D

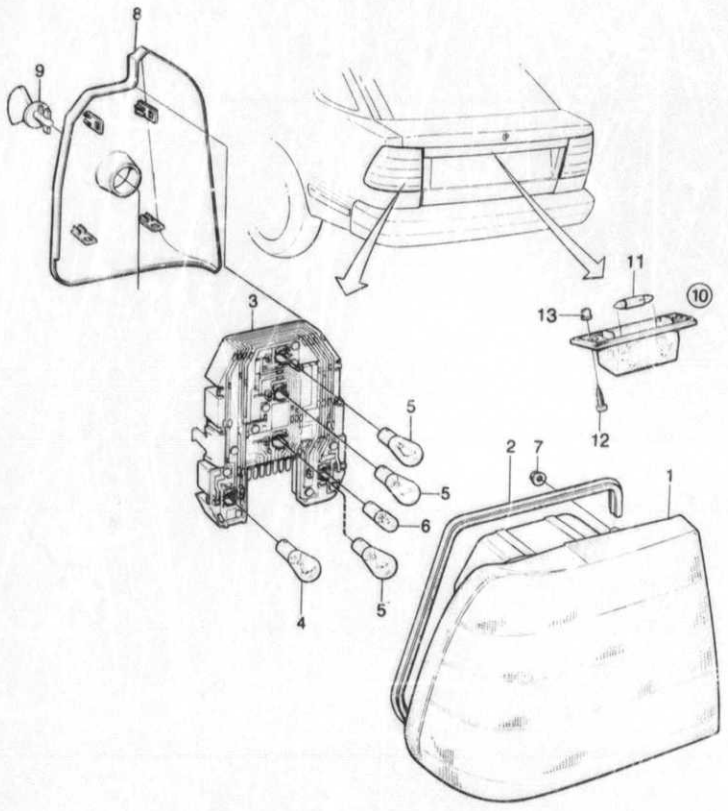


0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 18 879		-1991, LH, SE, FI, GB,EU	1	Tail lamp	Baklykta	3
0015	1	95 18 879		1992-,LH, SE,FI,GB,EU,ME	1	Tail lamp	Baklykta	3
0020	1	95 18 895		-1991, LH, US, CA, JP	1	Tail lamp	Baklykta	3
0021	1	95 18 895		1992-, LH, US, CA, JP,PA	1	Tail lamp	Baklykta	3
0030	1	95 19 075		-1991, LH, AU, ME, FE	1	Tail lamp	Baklykta	3
0031								
0040	1	95 18 887		-1991, RH, SE, FI, GB,EU	1	Tail lamp	Baklykta	3
0041	1	95 18 887		1992-,RH, SE,FI,GB,EU,ME	1	Tail lamp	Baklykta	3
0050	1	95 18 903		-1991, RH, US, CA, JP	1	Tail lamp	Baklykta	3
0051	1	95 18 903		1992-, RH, US, CA, JP,PA	1	Tail lamp	Baklykta	3
0060	1	95 19 083		-1991, RH, AU, ME, FE	1	Tail lamp	Baklykta	3
0070	2	95 01 628			1	•Seal	•Tätning	5
0080	3	95 18 952		-1991, LH, SE, FI, GB,EU	1	Bulb socket	Lamphållare	5
0085	3	42 53 597		1992-,LH, SE,GB,EU,AU,ME	1	Bulb socket	Lamphållare	5
0090	3	95 18 978		-1991, LH, US, CA, JP	1	Bulb socket	Lamphållare	5
0100	3	95 18 978		-1991, LH, AU, ME, FE	1	Bulb socket	Lamphållare	5
0105	3	42 53 613		1992-, LH, US, CA, PA	1	Bulb socket	Lamphållare	5
0110	3	95 18 960		-1991, RH, SE, FI, GB,EU	1	Bulb socket	Lamphållare	5
0115	3	42 53 605		1992-,RH, SE,GB,EU,AU,ME	1	Bulb socket	Lamphållare	5
0120	3	95 19 986		-1991, RH, US, CA, JP	1	Bulb socket	Lamphållare	5
0130	3	95 18 986		-1991, RH, AU, ME, FE	1	Bulb socket	Lamphållare	5
0135	3	42 53 621		1992-, RH, US, CA, PA	1	Bulb socket	Lamphållare	5
0140	4	95 08 904		40/238 297 006	2	Bulb	Glödlampa	1
0150	4	85 32 756		US,CA,JP, 40/238 291 009	2	Bulb	Glödlampa	1
0160	5	71 54 719		40/238 290 001	6	Bulb	Glödlampa	1
0170	5	85 35 692		US,CA,JP, 40/238 304 000	6	Bulb	Glödlampa	1
0180	6	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0190	6	71 54 727		US,CA,JP, 40/238 254 007	2	Bulb	Glödlampa	1
0200	7	73 98 423			8	Nut	Mutter	5
0210	8	97 67 955		LH	1	Cover	Kåpa	5
0220	8	97 67 963		RH	1	Cover	Kåpa	5
0230	9	97 77 681			1	•Screw	•Skruv	5
0240	10	95 01 693			2	Lighting	Belysning	5
0250	11	70 84 197		5W	1	•Bulb	•Glödlampa	1
0260	12	79 22 230			4	Screw	Skruv	5
0270	13	*92 36 589*		NLS - USE 4013165	4	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

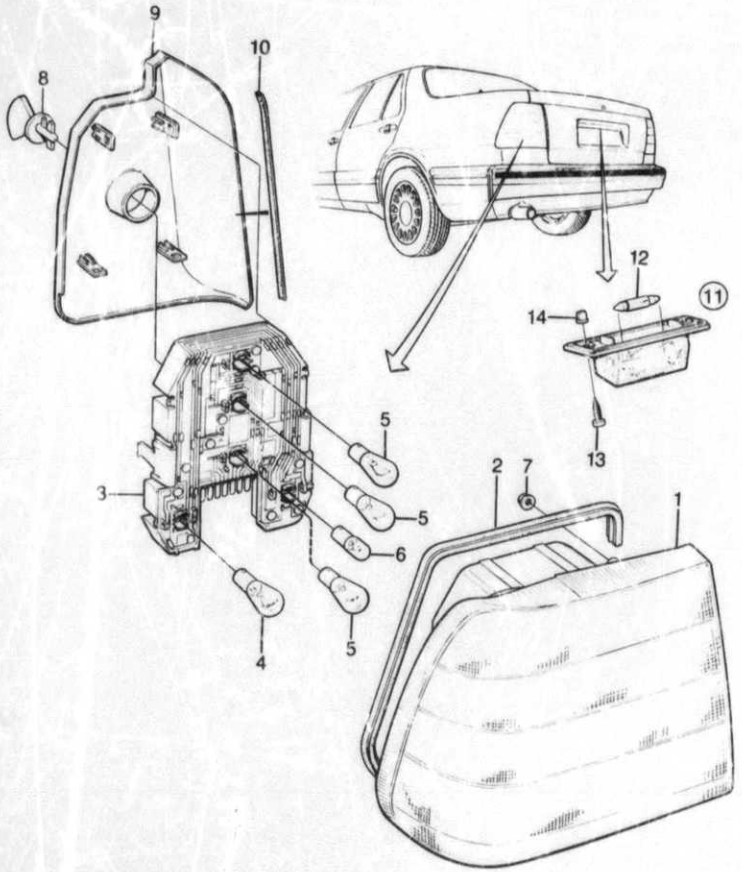

F1112 CAC90

Lighting

2-C14 *Tail lamp 4D*

Belysning

Baklykta 4D

0610	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 22 434		140), -1991, LH, SE, FI, EU, GB	1	Tail lamp	Baklykta	3
0030	1	95 22 434		140), 1992, LH, SE, FI, EU, GB, ME	1	Tail lamp	Baklykta	3
0050	1	95 22 434		1993-,140,222), LH, SE, FI, EU, GB, ME, PA	1	Tail lamp	Baklykta	3
0070	1	95 22 442		140), -1991, RH, SE, FI, EU, GB	1	Tail lamp	Baklykta	3
0090	1	95 22 442		140), 1992, RH, SE, FI, EU, GB, ME	1	Tail lamp	Baklykta	3
0110	1	95 22 442		1993-,140,222), RH, SE, FI, EU, GB, ME, PA	1	Tail lamp	Baklykta	3
0140	1	91 23 076		13), -1991, LH, SE, FI, EU, GB, BR	1	Tail lamp	Baklykta	3
0160	1	91 23 076		13), 1992, LH, SE, FI, EU, GB, BR, ME	1	Tail lamp	Baklykta	3
0171	1	91 23 076		13), 1993-, LH, SE, FI, EU, GB, BR, ME, PA	1	Tail lamp	Baklykta	3
0180	1	91 23 084		13), -1991, RH, SE, FI, EU, GB, BR	1	Tail lamp	Baklykta	3
0200	1	91 23 084		13), 1992, RH, SE, FI, EU, GB, BR, ME	1	Tail lamp	Baklykta	3
0215	1	91 23 084		13), 1993-, RH, SE, FI, EU, GB, BR, ME, PA	1	Tail lamp	Baklykta	3
0230	1	95 22 459		140),-1991, LH, US,CA,JP	1	Tail lamp	Baklykta	3
0240	1	95 22 459		140), 1992, LH, US, CA, JP, PA	1	Tail lamp	Baklykta	3
0251	1	95 22 459		1993-,140,222), LH, US, JP, PA	1	Tail lamp	Baklykta	3
0260	1	95 22 467		140),-1991, RH, US,CA,JP	1	Tail lamp	Baklykta	3
0270	1	95 22 467		140), 1992, RH, US, CA, JP, PA	1	Tail lamp	Baklykta	3
0290	1	95 22 467		1993-, 140,222), RH, US, CA	1	Tail lamp	Baklykta	3
0310	1	91 23 159		13), -1991, LH, US,CA,JP	1	Tail lamp	Baklykta	3
0320	1	91 23 159		13), 1992, LH, US, CA, JP, PA	1	Tail lamp	Baklykta	3
0331	1	91 23 159		13), 1993-, LH, US, CA,	1	Tail lamp	Baklykta	3
0340	1	91 23 167		13), -1991, RH, US,CA,JP	1	Tail lamp	Baklykta	3
0350	1	91 23 167		13), 1992, RH, US, CA, JP, PA	1	Tail lamp	Baklykta	3
0361	1	91 23 167		13), 1993-, RH, US, CA	1	Tail lamp	Baklykta	3
0390	1	95 24 513		140),-1991, LH, AU,ME,FE	1	Tail lamp	Baklykta	3
0390	1	95 24 521		140),-1991, RH, AU,ME,FE	1	Tail lamp	Baklykta	3
0410	1	91 23 118		13), -1991, LH, AU,ME,FE	1	Tail lamp	Baklykta	3
0420	1	91 23 126		13), -1991, RH, AU,ME,FE	1	Tail lamp	Baklykta	3
0430	2	95 22 616			1	▪Seal	▪Tätning	5
0440	3	95 24 455		-1991, LH,SE,FI,EU,GB,BR	1	Bulb socket	Lamphållare	5
0450	3	95 24 463		-1991, RH,SE,Fi,EU,GB,BR	1	Bulb socket	Lamphållare	5
0470	3	42 53 639		1992, LH, SE, EU, GB, AU, ME, BR	1	Bulb socket	Lamphållare	5
0485	3	42 53 639		1993-, LH, SE, EU, GB, AU, ME, BR, PA	1	Bulb socket	Lamphållare	5


13. Grey. Grå.
140. Untinted. Ofärgat.
199. Ch --N1034646.
222. Ch --P1031392.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

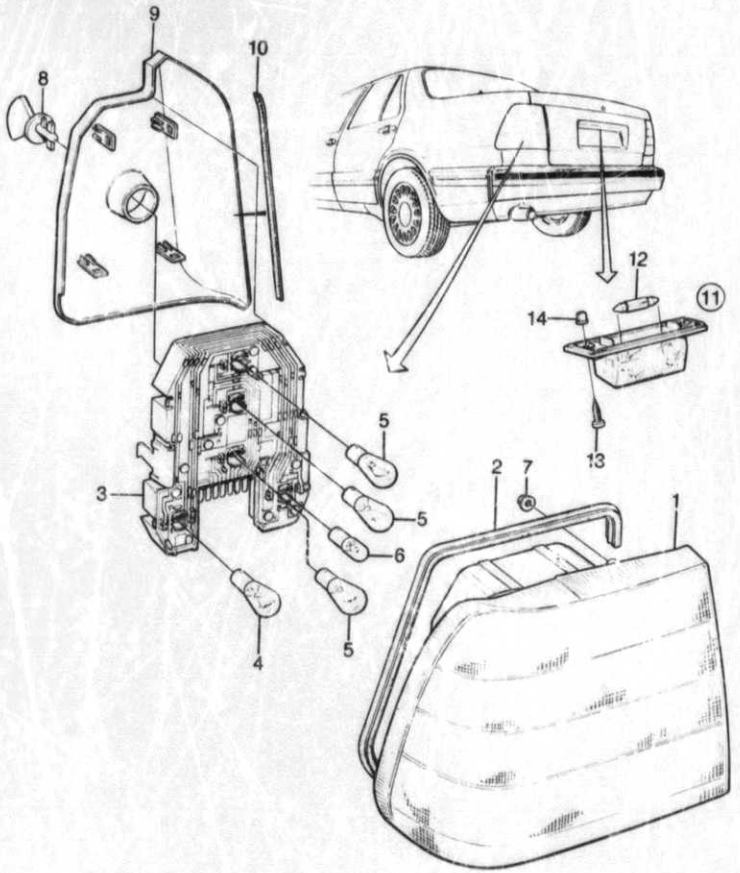

F1112 CAC90

2-C16

Lighting
Tail lamp
4D

Belysning
Baklykta
4D

0610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	3	42 53 647		1992, RH, SE, EU, GB, AU, ME, BR	1	Bulb socket	Lamphållare	5
0500								
0505	3	42 53 647		1993-, RH, SE, EU, GB, AU, ME, BR, PA	1	Bulb socket	Lamphållare	5
0506								
0510								
0520	3	95 22 590		-1991, LH, US, CA	1	Bulb socket	Lamphållare	5
0530	3	95 22 608		-1991, RH, US, CA	1	Bulb socket	Lamphållare	5
0540								
0550	3	42 53 654		1992, LH, US, CA, PA	1	Bulb socket	Lamphållare	5
0555	3	42 53 654		1993-, LH, US, CA	1	Bulb socket	Lamphållare	5
0560	3	42 53 662		1992, RH, US, CA, PA	1	Bulb socket	Lamphållare	5
0565	3	42 53 662		1993-, RH, US, CA	1	Bulb socket	Lamphållare	5
0570								
0580	3	95 22 590		-1991, LH, JP, AU, ME,FE	1	Bulb socket	Lamphållare	5
0590	3	95 22 608		-1991, RH, JP, AU, ME,FE	1	Bulb socket	Lamphållare	5
0600								
0610	4	95 08 904		-1992, SE, FI, EU, GB,BR	2	Bulb	Glödlampa	1
0620				40/238 297 006				
0625	4	95 08 904		1993-,SE, FI,EU,GB,BR,PA	2	Bulb	Glödlampa	1
0626				40/238 297 006				
0630	4	85 32 756		-1992, US, CA, JP,	2	Bulb	Glödlampa	1
0631				40/238 291 009				
0635	4	85 32 756		1993, US, CA,	2	Bulb	Glödlampa	1
0637				40/238 291 009				
0640	4	*85 37 672*		AU,ME,FE, 40/238 292 007	2	Bulb	Glödlampa	1
0640				NLS - USE 4320594				
0650								
0660	5	71 54 719		-1992, SE, FI, EU, GB, AU, ME, FE, BR	6	Bulb	Glödlampa	1
0661								
0670				40/238 290 001				
0675	5	71 54 719		1993-, SE, FI,EU,GB, AU, ME, FE, BR, PA	6	Bulb	Glödlampa	1
0676								
0677				40/238 290 001				
0680	5	85 35 692		US,CA,JP, 40/238 304 000	6	Bulb	Glödlampa	1
0690	6	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0700	7	73 98 423			2	Nut	Mutter	5
0710	8	95 24 570			2	Knob	Vred	3
0720	9	91 22 110		-1991, LH	1	Cover	Kåpa	5
0730	9	43 81 778		1992-, LH	1	Cover	Kåpa	5
0740	9	91 22 128		-1991, RH	1	Cover	Kåpa	5
0750	9	43 81 786		1992-, RH	1	Cover	Kåpa	5
0760	10	91 22 102			1	•Felt strip	•Filtlist	6
0770								
0780	11	95 26 567			2	Lighting	Belysning	5
0790	12	70 84 197		40/238 261 002	1	•Bulb	•Glödlampa	1
0800	13	79 22 230			4	Screw	Skruv	5
0810	14	40 13 165			4	Clip	Clips	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-C18 Tail lamp / Baklykta

5CS

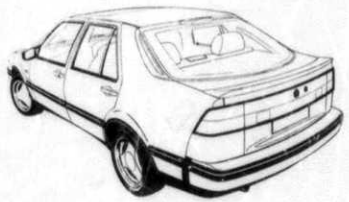

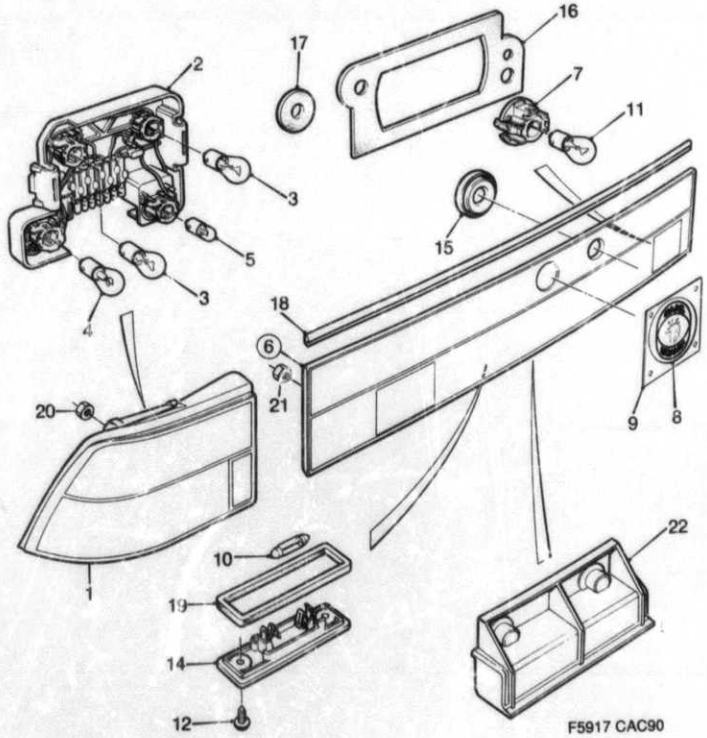

F5917 CAC90

0620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 84 039		LH	1	Tail lamp	Baklykta	3
0020	1	90 84 047		RH	1	Tail lamp	Baklykta	3
0030	1	90 85 358		LH, US, CA, PA	1	Tail lamp	Baklykta	3
0040	1	90 85 366		RH, US, CA, PA	1	Tail lamp	Baklykta	3
0050	2	90 84 070		LH	1	Bulb socket	Lamphållare	5
0060	2	90 84 088		RH	1	Bulb socket	Lamphållare	5
0070	3	71 54 719		40/238 290 001	4	Bulb	Glödlampa	1
0080	3	85 35 692		US,CA,PA, 40/238 304 000	4	Bulb	Glödlampa	1
0090	4	*85 37 672*		NLS - USE 4320594	2	Bulb	Glödlampa	1
0100	4	85 32 756		US,CA,PA, 40/238 291 009	2	Bulb	Glödlampa	1
0110	5	71 54 727			2	Bulb	Glödlampa	1
0120	5	85 52 325		US, CA, PA	2	Bulb	Glödlampa	1
0130								
0140	6	*90 83 734*		189,193) NLS - USE 4521175	1	Decor panel	Dekorpanel	3
0150	6	43 80 291		189,194)	1	Decor panel	Dekorpanel	3
0160	6	*90 83 551*		189,193), RHD NLS - USE 4380317	1	Decor panel	Dekorpanel	3
0170	6	43 80 317		189,194), RHD	1	Decor panel	Dekorpanel	3
0180	6	*90 83 742*		193) NLS - USE 4380309	1	Decor panel	Dekorpanel	3
0190	6	43 80 309		194)	1	Decor panel	Dekorpanel	3
0200	6	43 80 309		US, CA	1	Decor panel	Dekorpanel	3
0210	7	40 90 114			2	.Bulb socket	.Lamphållare	5
0220	8	41 71 856			1	.Emblem	.Emblem	3
0230	9	42 54 249			1	..Decal tape	..Emblemtejp	3
0240	10	70 84 197		40/238 261 002	2	.Bulb	.Glödlampa	1
0250	11	71 54 719		40/238 290 001	2	.Bulb	.Glödlampa	1
0260	11	85 35 692		US, CA, PA, 40/238 304 000	2	.Bulb	.Glödlampa	1
0270								
0280	12	79 22 271			4	.Screw	.Skruv	5
0290	14	90 86 224			2	.Lens	.Glas	3
0300	15	90 86 232		193)	1	.Sealing collar	.Tätningskrage	4
0310	15	43 80 325		194)	1	.Sealing collar	.Tätningskrage	4
0320	16	90 86 240			2	.Seal	.Tätning	5
0330	17	90 86 265			4	.Seal	.Tätning	6
0340	18	90 86 273		193)	1	.Seal	.Tätning	6
0350	18	43 80 382		194)	1	.Seal	.Tätning	6
0360	19	90 86 281			2	.Seal	.Tätning	5
0370	20	73 98 423			4	Nut	Mutter	5
0380	21	73 98 423			8	Nut	Mutter	5
0390	22	43 44 222			1	Handle	Handtag	5


189. With rear fog light. Med dimbaklykta.
193. Ch -N1031138.
194. Ch N1031139-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

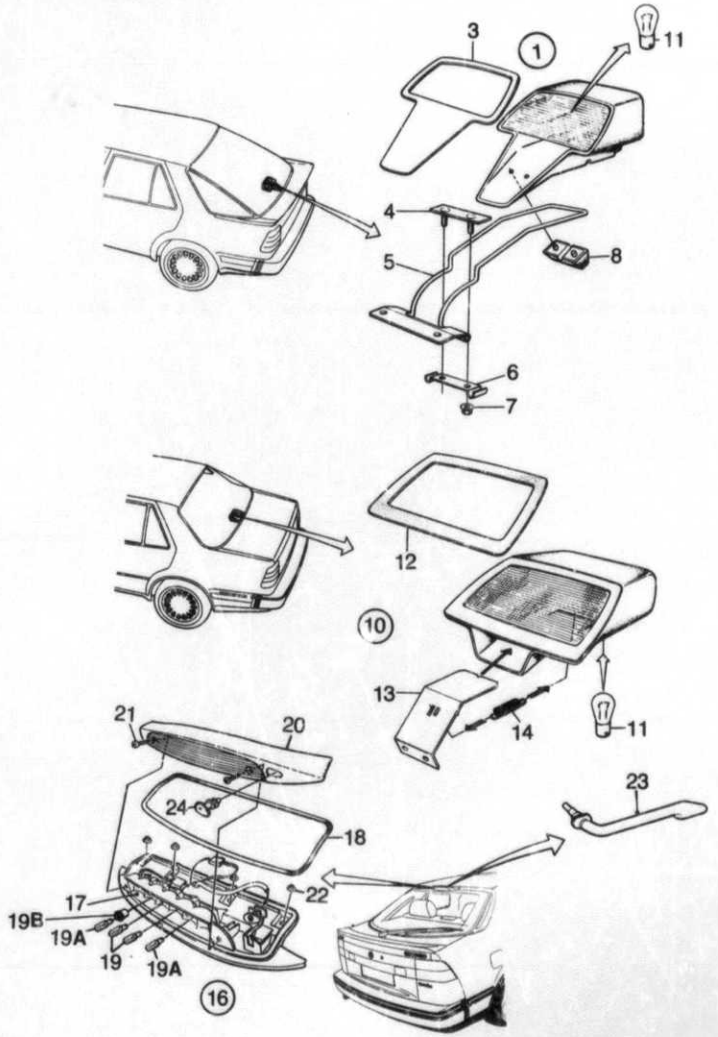

F4810 CAC90

Lighting

2-C20

Stop light
High mounted

Belysning

Stopplykta
Högt monterad

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 67 223		5D	1	Stop light	Stopplykta	3
0020	2	85 35 692		40/238 304 000	1	.Bulb	.Glödlampa	1
0030	3	95 14 233			1	.Seal	.Tätning	3
0040	4	95 14 969		5D	1	Attaching plate	Fästplåt	6
0050	5	95 18 267		5D	1	Tensioner	Spännare	6
0060	6	95 14 951		5D	1	Clamping-piece	Klämstycke	6
0070	7	81 51 227		5D	2	Nut	Mutter	5
0080	8	96 59 301		5D	1	Gasket	Packning	6
0090								
0100	10	85 98 286		1990, 4D	1	Stop light	Stopplykta	3
0105	10	43 41 194		1991-, 4D	1	Stop light	Stopplykta	3
0110	11	85 35 692		40/238 304 000	1	.Bulb	.Glödlampa	1
0120	12	95 51 953			1	.Seal	.Tätning	3
0130	13	*40 90 015*		1990, 4D NLS	1	Bracket	Konsol	6
0140	13	40 90 007		1991-, 4D	1	Bracket	Konsol	6
0150	14	95 53 512		4D	1	.Spring	.Fjäder	6
0160								
0170	16	40 14 429		5CS	1	Stop light	Stopplykta	3
0175	16	43 44 834		5CS, GB	1	Stop light	Stopplykta	3
0180	17	40 14 452			1	.Bulb socket	.Lamphållare	3
0190	18	40 14 478			1	.Sealing strip	.Tätningslist	3
0200	19	95 12 880			2	.Bulb	.Glödlampa	1
0205	19	95 05 116		GB, 40/238 288 005	2	.Bulb	.Glödlampa	4
0207	19A	95 12 880			2	.Bulb	.Glödlampa	1
0209	19B	44 48 999			4	.Bulb socket	.Lamphållare	3
0210	20	43 20 255		5CS	1	Lens	Lyktglas	5
0220	20	40 14 460		159), 5CS	1	Lens	Lyktglas	5
0230	21	79 74 025		5CS	2	Screw	Skruv	5
0240	22	73 98 423		5CS	4	Nut	Mutter	5
0250	23			5CS		Grommet	Genomföring	
0260				See page 3A-087, 2-D16		high mounted stop light	högt monterad stopplykta	
0270	24			5CS		Nozzle	Munstycke	
0280				See page 3A-087, 2-D16				

159. With rear window wiper. Med bakrutetorkare.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-C22

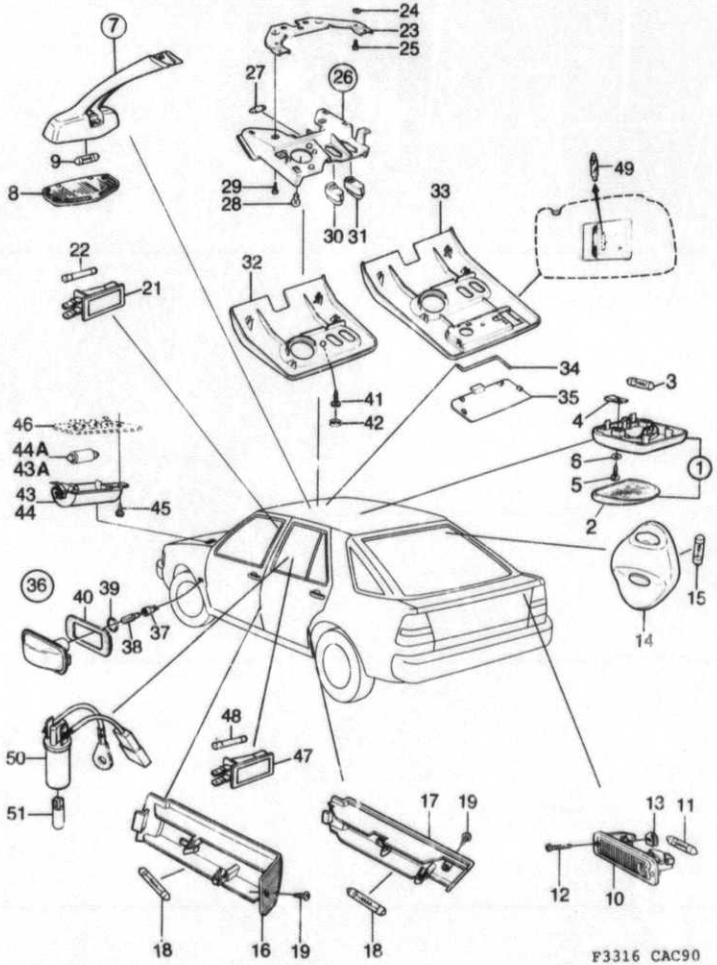

0700	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	40 60 398		88)	1	Dome lamp	Taklampa	4
0015	1	40 90 239		89)	1	Dome lamp	Taklampa	4
0020	2	40 60 406			1	.Lamp lens	.Lampglas	6
0030	3	85 01 264		40/238 265 003	1	.Bulb	.Glödlampa	2
0040	4	79 77 333		98)	2	Nut	Mutter	3
0045	4	79 67 995		99)	2	Clip nut	Clipsmutter	3
0050	5	79 63 937		98)	2	Screw	Skruv	5
0055	5	79 22 388		99)	2	Screw	Skruv	5
0060	6	84 28 997		98)	2	Washer	Bricka	5
0070	7	95 01 941			1	Lamp	Lampa	5
0075						rear view mirror	backspegel	
0080	8	95 02 055			1	.Lamp lens	.Lampglas	6
0090	9	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0100	10	85 77 801			1	Lamp	Lampa	3
0105						boot	bagagerum	
0110	11	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
0120	12	79 70 346		5D, 5CS	2	Screw	Skruv	5
0130	12	79 71 393		-1991, 4D	2	Screw	Skruv	5
0135	12	79 70 346		1992-, 4D	2	Screw	Skruv	5
0140	13	79 72 771		5D	2	Clip nut	Clipsmutter	5
0150	13	95 45 435		4D	2	Clamp	Klämma	5
0160	14	95 00 273			2	Lamp	Lampa	4
0170	15	95 06 080			1	.Bulb	.Glödlampa	2
0180	16	95 64 253		LH	1	Lamp	Lampa	4
0185						front door	framdörr	
0190	16	95 64 261		RH	1	Lamp	Lampa	4
0195						front door	framdörr	
0200								
0210	17	95 63 677		LH	1	Lamp	Lampa	4
0215						rear door	bakdörr	
0220	17	95 63 685		RH	1	Lamp	Lampa	4
0225						rear door	bakdörr	
0230	18	70 84 197		40/238 261 002	4	Bulb	Glödlampa	1
0240	19	79 63 937			4	Screw	Skruv	5
0250	21	95 92 098			1	Lamp	Lampa	9
0255						glove compartment	handskfack	
0260	22	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0270	23	97 65 595			1	Bracket	Konsol	6
0280	24	79 74 983			2	Cage nut	Korgmutter	5
0290	25	92 59 524			2	Screw	Skruv	5
0300	26	*95 75 903*		66) NLS - USE 4037701	1	Base plate	Bottenplatta	6
0305	26	40 37 701		67)	1	Base plate	Bottenplatta	6
0310	27	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0320	28	95 06 080			1	.Bulb	.Glödlampa	2
0330	29	79 22 347			4	Screw	Skruv	5
0340	30	95 05 447			1	Switch	Strömställare	3
0345						reading lamp	läslampa	
0350	31	95 05 439			1	Switch	Strömställare	3
0355						interior illum.	innerbelysning	
0360	32	96 60 176		22)	1	Cover	Lock	
0370	33	97 65 553		21)	1	Cover	Lock	6
0380	34			See page 8A-015, 5-A16		Crank	Vev	
0390	35	97 66 114		21)	1	Cover	Lock	6
0400	36	91 24 132			2	Side light	Sidolampa	3
0410	37	95 21 857			1	.Bulb socket	.Lamphållare	6

21. For cars with el. sun roof. För bilar med el. soltak.
22. For cars without el. sun roof. För bilar utan el. soltak.
66. Ch --L1001204, --L2000896, --L8000056.
67. Ch L1001205--, L2000897--, L8000057--.
88. Ch --L1007844, --L2005950, --L8000741.
89. Ch L1007845--, L2005951--, L8000742--.
98. Ch --L1013171, --L2009404, --L8001442.
99. Ch L1013172--, L2009405--, L8001443--.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-C24

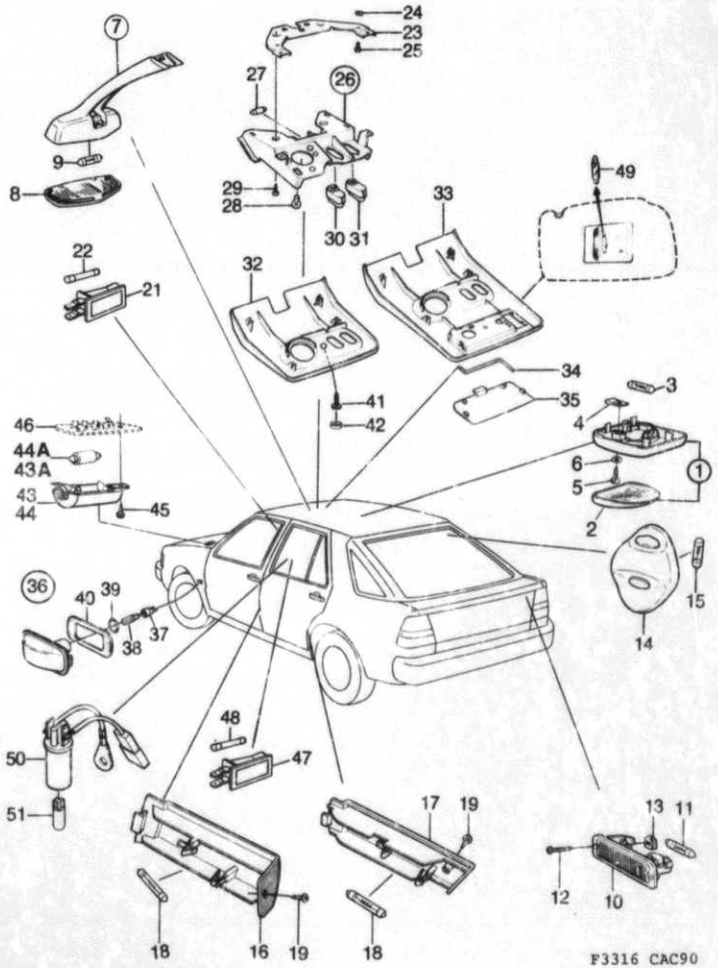

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	38	95 12 880		40/238 300 008	1	. Bulb	. Glödlampa	1
0430	39	95 12 898			1	. Gasket	. Packning	6
0440	40	91 24 140			2	. Seal	. Tätning	6
0450	41	79 71 351			1	Screw	Skruv	5
0460	42	97 99 354			1	Cover	Täcklock	5
0470	43	95 14 258		1990 NLS - USE 4320339	1	Engine compartment lamp	Motorrumslampa	5
0475	43A	95 14 324		1990	1	Bulb	Glödlampa	3
0477	44	43 20 339		1991-	1	Engine compartment lamp	Motorrumslampa	5
0480	44A	95 14 324		1991-	1	. Bulb	. Glödlampa	3
0490	45	79 22 800			1	Screw	Skruv	5
0500	46			See page 8B-019, 6-A20		Attaching plate	Fästplåt	
0510	47	95 69 948			1	Lighting centre console	Belysning mittkonsol	4
0515								
0529	48	70 84 197		40/238 261 002	1	. Bulb	. Glödlampa	1
0530	49	95 78 618			2	Lamp sun visor	Lampa solskydd	3
0535								
0540	50	85 78 775		A	1	Bulb socket gear position indicator	Lamphållare växellägesindikator	4
0545								
0550	51	85 00 613		A	1	Bulb gear position indicator	Glödlampa växellägesindikator	2
0555								

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D02

Horn
Signalhorn

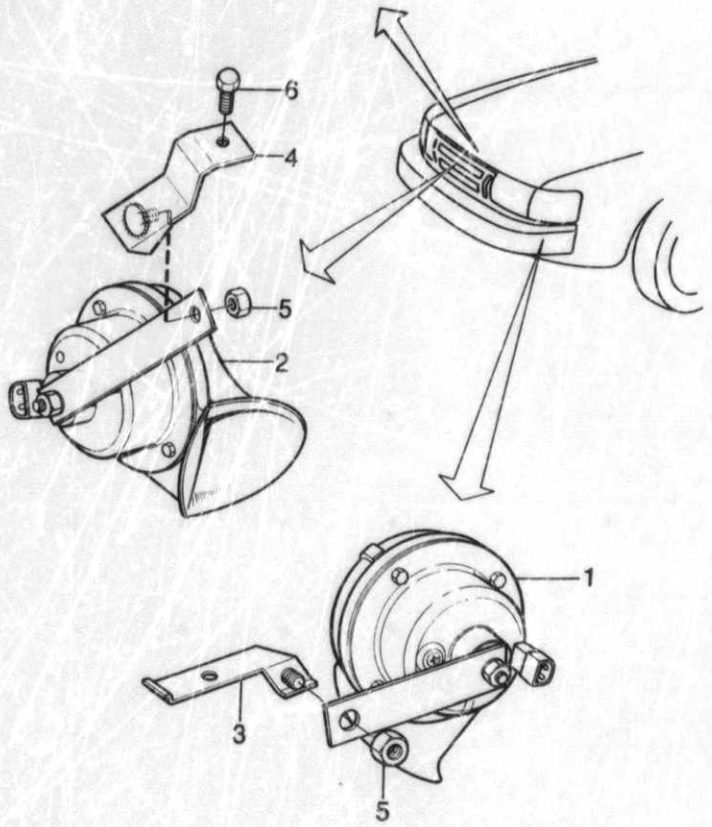

F6218 CAC93

0750	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 29 413		LH	1	Horn	Signalhorn	4
0020				high tone			hög ton	
0030	1	42 52 482		5CS, RH	1	Horn	Signalhorn	4
0040				high tone			hög ton	
0050	2	95 29 421			1	Horn	Signalhorn	4
0060				low tone			låg ton	
0070	2	42 52 474		5CS	1	Horn	Signalhorn	4
0080				low tone			låg ton	
0090	3	95 66 696		LH	1	Bracket	Fäste	6
0100	4	40 13 371		1990, 5D	1	Bracket	Fäste	6
0110	4	40 13 579		1990, 4D	1	Bracket	Fäste	6
0120	4	40 13 579		1991-	1	Bracket	Fäste	6
0130	5	81 51 235			2	Nut	Mutter	5
0140	6	80 59 743			1	Screw	Skruv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D04

Windscreen wiper
Vindrutetorkare

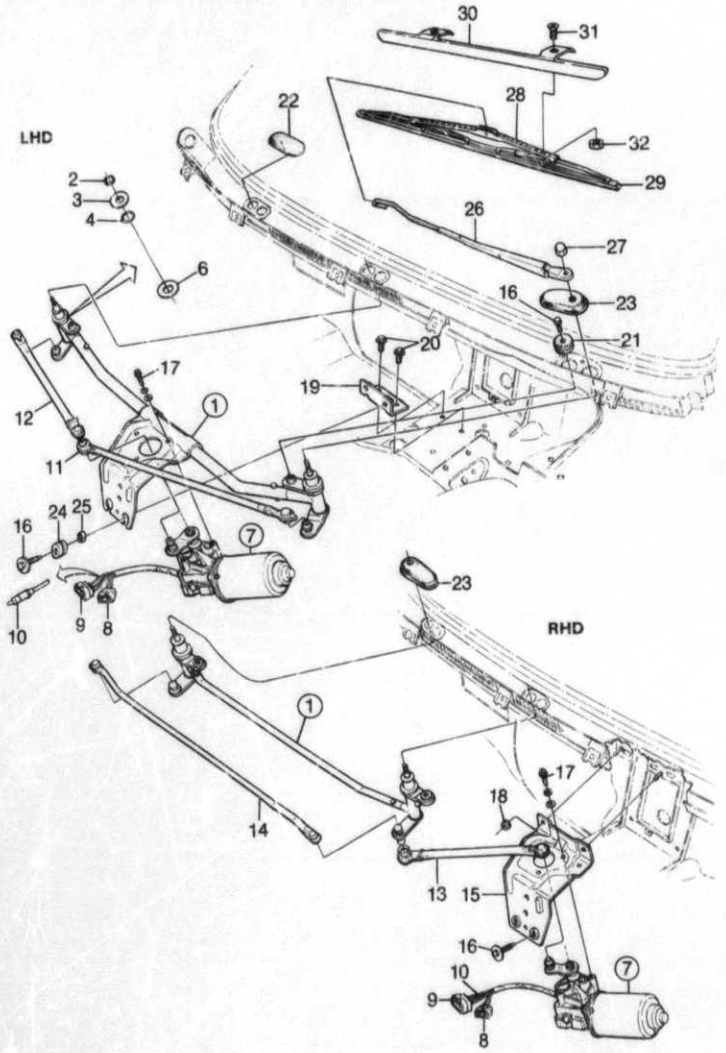

0810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 688			1	Spindle frame	Spindelram	6
0015	1	40 60 497		RHD	1	Spindle frame	Spindelram	6
0020	2	91 23 837			2	.Retaining ring	.Sprärring	5
0030	3	91 23 845			2	.Washer	.Bricka	5
0040	4	91 23 852			2	.O-ring	.O-ring	2
0060	6	91 23 894			2	.Washer	.Bricka	5
0070	7	91 23 662			1	Electric motor	Elmotor	4
0080	7	40 60 489		RHD	1	Electric motor	Elmotor	4
0090	8	95 01 685			1	.Contact housing 2-pole	.Kontakthus 2-polig	4
0095								
0100	9	95 03 327			1	.Contact housing 3-pole	.Kontakthus 3-polig	4
0105								
0110	10	85 47 770			5	.Connector	.Skarvstycke	5
0120	11	91 23 696		LH, LHD	1	Crank arm	Vevarm	5
0130	12	91 23 704		RH, LHD	1	Crank arm	Vevarm	5
0140	13	40 60 513		LH, RHD	1	Crank arm	Vevarm	5
0150	14	40 60 505		RH, RHD	1	Crank arm	Vevarm	5
0160	15	40 63 574		RHD	1	Bracket	Konsol	5
0170	16	73 99 900			4	Hexagon screw	Sexkantsskruv	5
0180	17	40 63 814			3	Screw	Skruv	5
0190	18	79 77 929		RHD	2	Nut	Mutter	5
0200	19	91 24 751			1	Bracket	Konsol	5
0210	20	79 69 223			2	Screw	Skruv	5
0220	21	91 23 589		LHD	2	Rubber bushing	Gummibussning	3
0230	22	91 23 639			1	Plug	Plugg	4
0240	23	91 23 597		LH, LHD	1	Cover	Kåpa	3
0250	23	91 23 605		RH, LHD	1	Cover	Kåpa	3
0260	23	91 23 613		RHD	2	Cover	Kåpa	3
0270	24	91 23 753		LHD	2	Bushing	Bussning	5
0280	25	91 23 761		LHD	2	Sleeve	Hylsa	5
0290	26	91 23 977		-1991, LH, LHD	1	Wiper arm	Torkararm	3
0295	26	40 95 626		1992-, LH, LHD	1	Wiper arm	Torkararm	3
0300	26	91 23 985		-1991, RH, LHD	1	Wiper arm	Torkararm	3
0305	26	40 95 634		1992-, RH, LHD	1	Wiper arm	Torkararm	3
0306								
0310	26	*40 63 806*		-1991, LH, RHD NLS - USE 4095659	1	Wiper arm	Torkararm	3
0315	26	40 95 659		1992-, LH, RHD	1	Wiper arm	Torkararm	3
0320	26	*40 63 798*		-1991, RH, RHD NLS - USE 4095642	1	Wiper arm	Torkararm	3
0325	26	40 95 642		1992-, RH, RHD	1	Wiper arm	Torkararm	3
0330	27	95 65 912			2	Cap nut	Kupolmutter	5
0340	28	*95 29 488*		-1991, LHD NLS - USE 4381844	2	Wiper blade	Torkarblad	3
0345	28	43 81 844		1992-, LHD	2	Wiper blade	Torkarblad	3
0350	28	*95 23 754*		-1991, RHD NLS - USE 4381851	2	Wiper blade	Torkarblad	3
0355	28	43 81 851		1992-, RHD	2	Wiper blade	Torkarblad	3
0357	28	44 48 049		221), PA	2	Wiper blade	Torkarblad	3
0358	28	44 48 056		221), RHD, PA	2	Wiper blade	Torkarblad	3
0360	29		S	1)	2	.Profile	.Profil	
0361	30	40 92 748		73), LHD	1	Spoiler	Spoiler	3
0362	30	40 93 035		73), RHD	1	Spoiler	Spoiler	3
0363	31	40 92 755		73)	2	Screw	Skruv	5
0364	32	40 92 763		73)	2	Nut	Mutter	5
0370		85 47 564		See page 3A-215, 2-I24	X	Profiled rubber kit	Gummiprofilsats	2
0380		44 48 064		221), PA See page 3A-215, 2-I24	X	Profiled rubber kit	Gummiprofilsats	2
0390								

1. Not as separate spare part. Ej som separat reservdel.
73. Ch L1000078–, L2000046–, L8000011–.
221. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D06 Rear window wiper / Bakrutetorkare

5CS

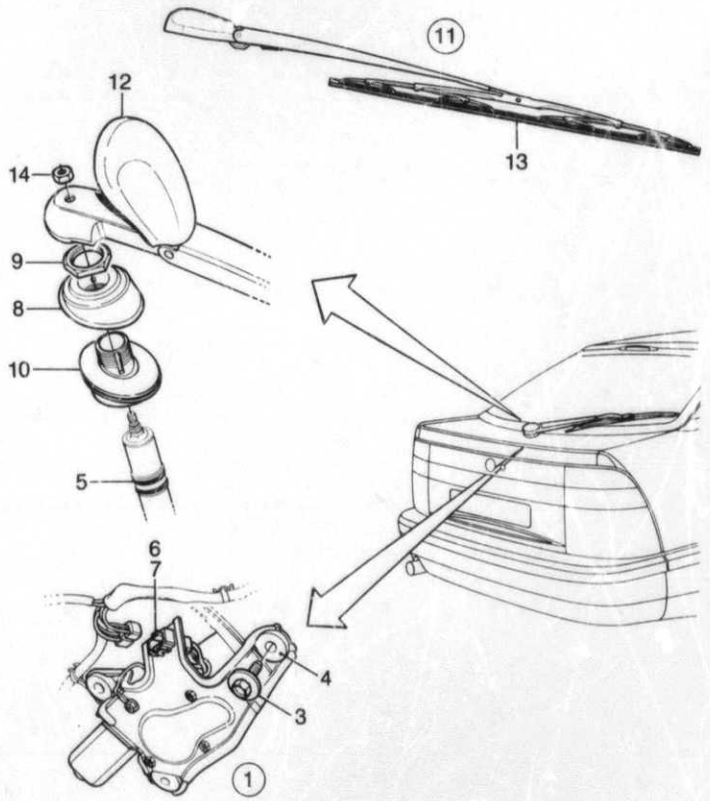

F3786 - CAC90


0820	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	90 86 869			1	Wiper motor	Torkarmotor	4
0020	3	90 86 935			3	.Screw	.Skruv	5
0030	4	90 86 943			3	.Rubber bushing	.Gummibussning	3
0040	5	90 86 950			2	.O-ring	.O-ring	2
0050	6	95 18 739			1	.Contact housing 4-pole, male	.Kontakthus 4-polig, stift	4
0060								
0070	7	95 52 100		AREA, 0,75-1,5 MM2	4	.Cable terminal	.Kabelsko	5
0080	8	90 86 885			1	Steering knuckle retainer	Spindelhållare	9
0090	9	90 86 901			1	Nut	Mutter	5
0095	10	90 86 877			1	Steering knuckle retainer	Spindelhållare	5
0100								
0110	11	90 83 684			1	Wiper arm	Torkararm	3
0120	12	43 20 453			1	.Cover	.Kåpa	3
0130	13	*95 23 488*		NLS - USE 4381844	1	Wiper blade	Torkarblad	3
0140	14	79 77 929			1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

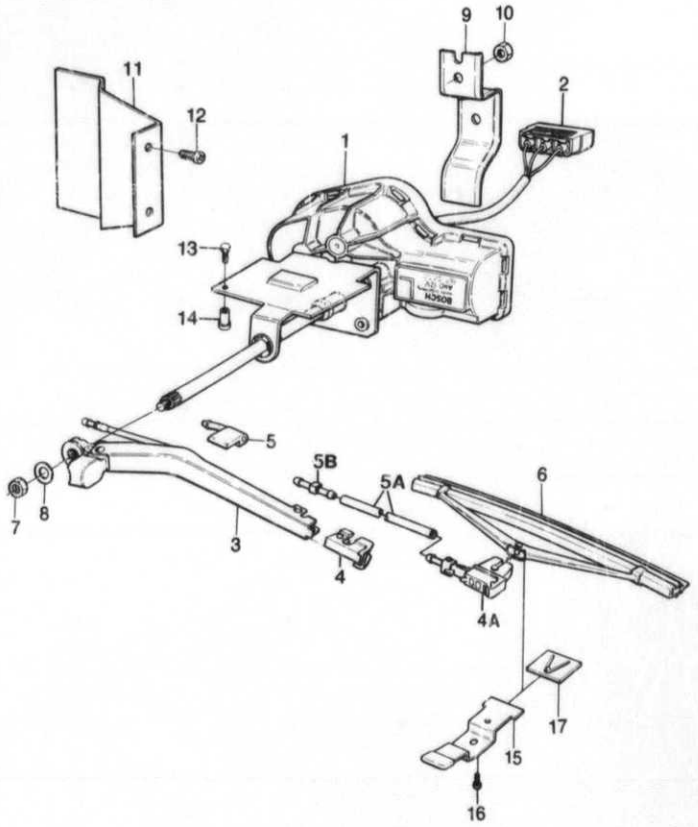

F3787 - CAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 09 683		1990, LH, 5D	1	Electric motor	Elmotor	3
0020	1	95 09 696		1990, RH, 5D	1	Electric motor	Elmotor	3
0030	1	*95 24 232*		1990, LH, 4D NLS - USE 4094942	1	Electric motor	Elmotor	3
0040	1	*95 24 224*		1990, RH, 4D NLS - USE 4094926	1	Electric motor	Elmotor	3
0050	1	40 94 942		1991-, LH	1	Electric motor	Elmotor	3
0060	1	40 94 926		1991-, RH	1	Electric motor	Elmotor	3
0070	1	91 23 233		LH, US	1	Electric motor	Elmotor	3
0080	1	91 23 241		RH, US	1	Electric motor	Elmotor	3
0090	2	95 03 327		1990, 4D	1	.Contact housing	.Kontakthus	4
0100				See page 3B-005, 3-A06		3-pole, male	3-polig, stift	
0110	2	95 03 327		1991-	1	.Contact housing	.Kontakthus	4
0120				See page 3B-005, 3-A06		3-pole, male	3-polig, stift	
0130	3	95 02 584		1990, LH, 5D	1	Wiper arm	Torkararm	4
0140	3	95 02 592		1990, RH, 5D	1	Wiper arm	Torkararm	4
0150	3	95 68 973		1990, LH, 4D	1	Wiper arm	Torkararm	4
0160	3	95 68 981		1990, RH, 4D	1	Wiper arm	Torkararm	4
0170	3	95 68 973		1991, LH	1	Wiper arm	Torkararm	4
0180	3	95 68 981		1991, RH	1	Wiper arm	Torkararm	4
0185	3	42 50 197		1992-, LH	1	Wiper arm	Torkararm	4
0187	3	42 50 205		1992-, RH	1	Wiper arm	Torkararm	4
0190	3	95 64 295		-1991, LH, US	1	Wiper arm	Torkararm	4
0200	3	95 64 303		-1991, RH, US	1	Wiper arm	Torkararm	4
0205	3	42 51 476		1992-, LH, US	1	Wiper arm	Torkararm	4
0207	3	42 51 484		1992-, RH, US	1	Wiper arm	Torkararm	4
0210	4	95 09 100		1990, 5D	1	.Adapter	.Adapter	5
0220	4	95 58 149		1990, 4D	1	.Adapter	.Adapter	5
0230	4	95 58 149		1991-	1	.Adapter	.Adapter	5
0240	4A	91 23 217		LH, US	1	.Adapter	.Adapter	5
0250	4A	91 23 225		RH, US	1	.Adapter	.Adapter	5
0260	5	95 09 118		1990, LH, 5D	1	.Nozzle	.Munstycke	2
0270	5	95 09 126		1990, RH, 5D	1	.Nozzle	.Munstycke	2
0280	5	95 68 999		1990, LH, 4D	1	.Nozzle	.Munstycke	2
0290	5	95 69 005		1990, RH, 4D	1	.Nozzle	.Munstycke	2
0300	5	95 68 999		1991-, LH	1	.Nozzle	.Munstycke	2
0310	5	95 69 005		1991-, RH	1	.Nozzle	.Munstycke	2
0320	5A	42 54 603		-1991, US, L=130 MM	1	.Hose	.Slang	5
0330	5B	40 14 783		-1991, US	1	.Junction pipe	.Skarvrör	2
0340	6	*95 13 268*	S	1990, 5D, (9120890) NLS - USE 4095063	2	Wiper blade	Torkarblad	2
0350	6	91 20 882	S	1990, 4D	2	Wiper blade	Torkarblad	2
0360	6	40 95 063	S	1991-	2	Wiper blade	Torkarblad	2
0365	6	91 20 882	S	US	2	Wiper blade	Torkarblad	2
0370	7	81 51 219		1990, 5D	2	Nut	Mutter	5
0380	7	80 29 548		1990, 4D	2	Nut	Mutter	5
0390	7	80 29 548		1991-1992	2	Nut	Mutter	5
0395	7	79 77 911		1993	2	Nut	Mutter	5
0400	8	79 72 284		-1992	2	Washer	Bricka	5
0410	9	95 01 495			2	Bracket	Fäste	5
0420	10	81 51 227			2	Nut	Mutter	5
0430	11	91 24 124		15)	1	Shield	Sköld	5
0440	12	79 22 420			2	Screw	Skruv	5
0450	13	79 65 544		1990, 4D	4	Screw	Skruv	5
0460	13	79 65 544		1991-	4	Screw	Skruv	5
0470	14	92 23 082		1990, 4D	4	Nut	Mutter	5
0480	14	92 23 082		1991-	4	Nut	Mutter	5
0481	15	95 02 618		1990, 5D	2	Stop	Stopp	3
0482	15	95 24 596		1990, 4D	2	Stop	Stopp	3
0483	15	95 24 596		1991-	2	Stop	Stopp	3
0484	16	79 22 891		1990, 4D	2	Screw	Skruv	5
0485	16	79 22 891		1991-	2	Screw	Skruv	5

15. For cars with oil cooler. För bilar med oljekylare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D10

Headlamp wiper
5D, 4D

Stråkastartorkare
5D, 4D

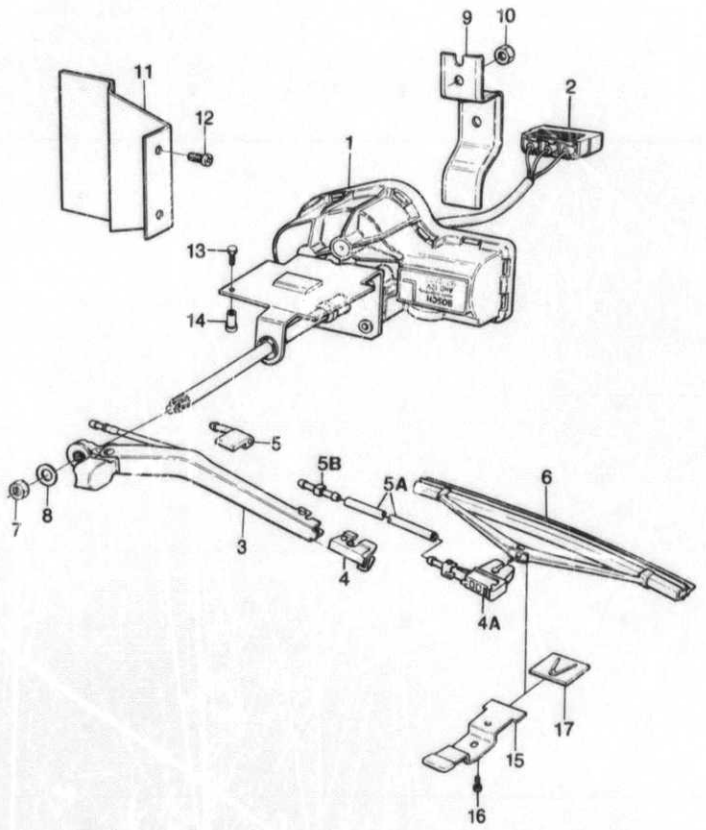

F3787 - CAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0486	17	95 02 766		1990, 5D	2	Bracket	Fäste	5
0490		*85 47 077*		1990, 5D	X	Wiper blade kit	Torkarbladssats	2
0500				See page 3A-215, 2-I24				
0500				NLS - USE 85 48 042				
0510		85 47 408		1990, 4D	X	Wiper blade kit	Torkarbladssats	2
0520				See page 3A-215, 2-I24				
0530		85 48 042		1991-	X	Wiper blade kit	Torkarbladssats	2
0540				See page 3A-215, 2-I24				
0550		85 47 408		US	X	Wiper blade kit	Torkarbladssats	2
0560				See page 3A-215, 2-I24				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D12

Headlamp wiper
5CS

Strålkastartorkare
5CS

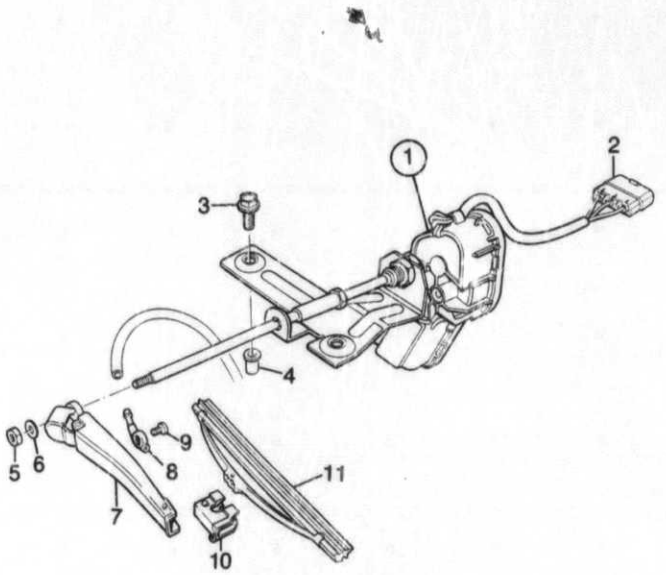

F4307 CAC90

0860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 470		LH	1	Electric motor	Elmotor	3
0020	1	90 82 488		RH	1	Electric motor	Elmotor	3
0030	2	95 03 327			1	.Contact housing 3-pole, male	.Kontakthus 3-polig, stift	4
0040								
0050	3	79 78 117			4	Screw	Skruv	5
0060	4	73 99 454			4	Nut	Mutter	5
0070	5	80 29 548			2	Nut	Mutter	5
0080	6	79 72 284			2	Washer	Bricka	5
0090								
0100	7	90 82 553		LH	1	Wiper arm	Torkararm	4
0110	7	90 82 561		RH	1	Wiper arm	Torkararm	4
0120	8	90 89 129		LH	1	.Nozzle	.Munstycke	2
0130	8	90 89 111		RH	1	.Nozzle	.Munstycke	2
0140	9	42 51 021			1	.Screw	.Skruv	5
0150	10	95 58 149			1	.Adapter	.Adapter	5
0160	11	90 82 587	S		2	Wiper blade	Torkarblad	2
0165	11	90 88 238	S	US	2	Wiper blade	Torkarblad	2
0170		85 48 299		See page 3A-215, 2-I24	X	Wiper blade kit	Torkarbladssats	2
0175		85 48 281		US	X	Wiper blade kit	Torkarbladssats	2
0180				See page 3A-215, 2-I24				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

Electric equipment, other

2-D14 Washer unit -1991

Övr. elektrisk utrustning

Spolaranläggning -1991

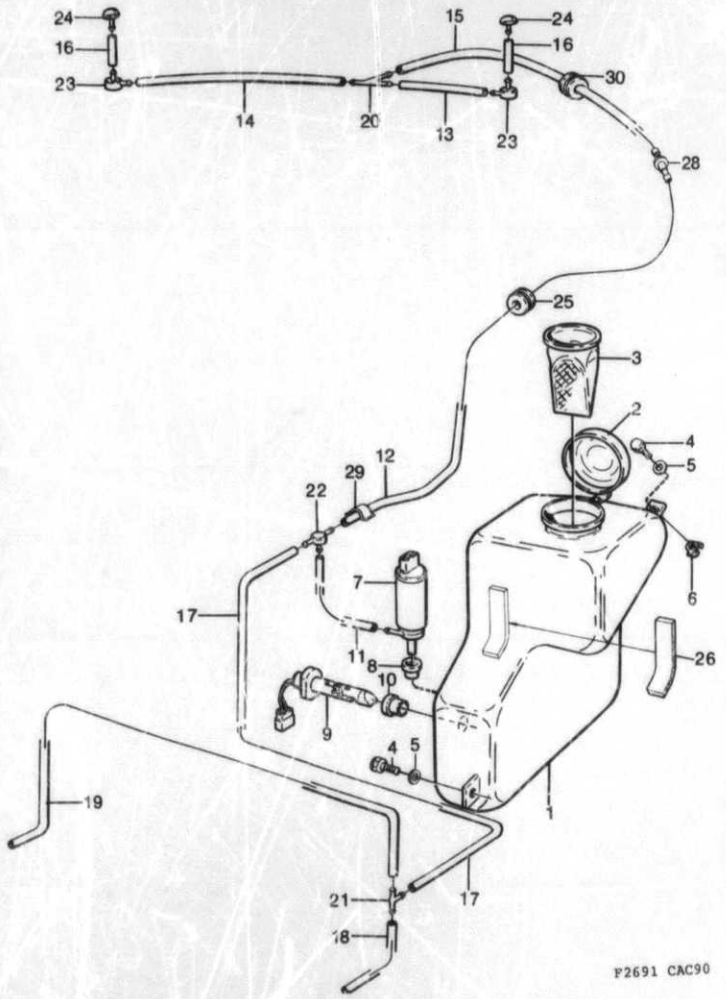

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 24 992			1	Washer fluid reservoir	Spolarburk	3
0020	2	85 18 557			1	.Cover	.Lock	2
0030	3	95 66 332			1	.Filter	.Filter	4
0040	4	*80 19 911*		NLS - USE 7399603	2	Screw	Skruv	5
0050	5	79 75 469			2	Washer	Bricka	5
0060	6	79 75 006			1	Nut	Mutter	5
0070	7	95 06 379			1	Washer pump	Spolarpump	2
0080	8	95 28 795			1	Rubber bushing	Gummibussning	3
0090	9	95 07 633			1	Level guard	Nivåvakt	5
0100	10	95 07 617			1	Bushing	Bussning	3
0110	11	85 52 044		L=60 MM	1	Hose	Slang	5
0120	12	95 24 944		L=950 MM	1	Hose	Slang	5
0130	13	95 06 387		L=90 MM	1	Hose	Slang	5
0140	14	85 33 366		L=450 MM	1	Hose	Slang	5
0150	15	40 88 001		L=385 MM	1	Hose	Slang	5
0160	16	85 73 677		L=30 MM	2	Hose	Slang	5
0170	17	85 33 358		L=350 MM	1	Hose	Slang	5
0180	18	95 06 411		L=250 MM	1	Hose	Slang	5
0190	19	95 06 403		L=1250 MM	1	Hose	Slang	5
0200	20	85 09 002			2	Tube	Rör	2
0210	21	85 44 660			1	T-pipe	T-rör	2
0220	22	*85 73 651*		5D NLS - USE 9569013	1	Valve	Ventil	3
0230	22	95 69 013		4D	1	Valve	Ventil	3
0240	23	85 73 669			2	Valve	Ventil	
0250	24	85 04 144		23)	2	Nozzle	Munstycke	2
0270	25	79 61 337			1	Bushing	Bussning	6
0280	26	75 35 404			1	Seal	Tätning	4
0300	28			See page 8A-019, 5-A20	1	Junction pipe	Skarvrör	
0310	29	85 13 574			1	Clip	Clips	6
0320	30	79 61 345			1	Bushing	Bussning	5

23. With two holes. Med två hål.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D16

Washer unit
1992-

Spolaranläggning
1992-

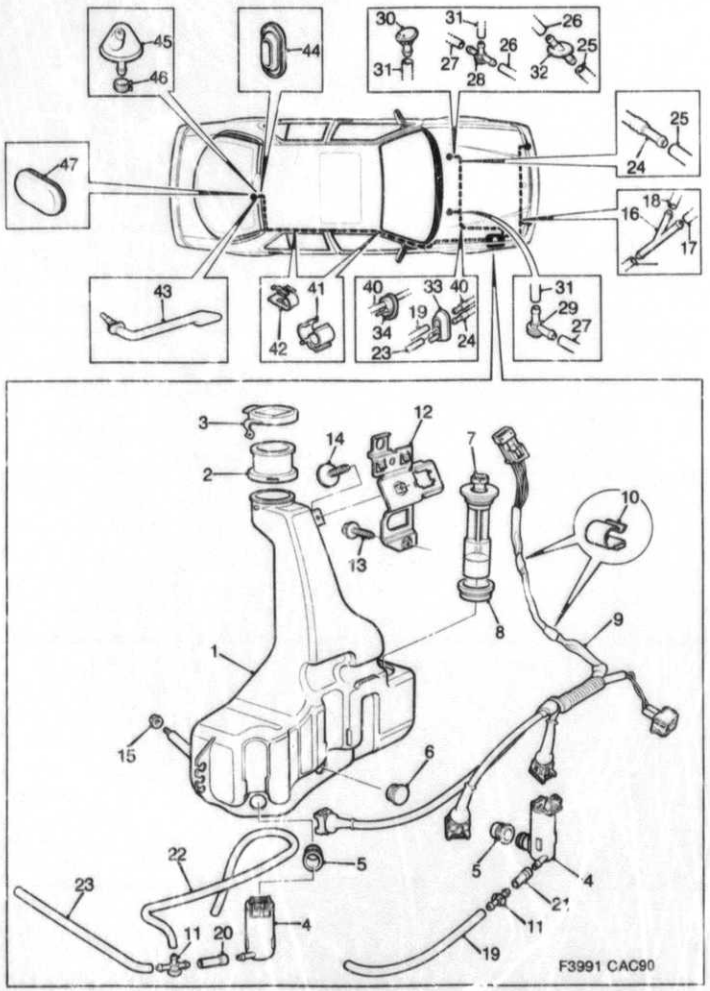

0910	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	40 92 342			1	Washer fluid reservoir	Spolarburk	3
0020	2	43 41 145			1	Filler pipe	Påfyllningsrör	4
0030	3	40 92 359			1	Cover	Lock	2
0040	4	43 20 123			1	Washer pump	Spolarpump	2
0050	4	43 20 123		159), 5CS	2	Washer pump	Spolarpump	2
0060	5	95 07 617			1	Bushing	Bussning	3
0070	6	43 41 111		174), 5CS	1	Bushing	Bussning	3
0080	7	41 71 146			1	Level guard	Nivåvakt	5
0090	8	41 71 153			1	Bushing	Bussning	3
0100	9	41 71 161			1	Cable harness	Ledningsnät	6
0110	9	41 71 179		159), 5CS	1	Cable harness	Ledningsnät	6
0120	10	71 08 491			X	Clamp	Klammer	5
0130	11	*85 73 651*		NLS - USE 9569013	1	Valve	Ventil	3
0140	11	41 71 112		159), 5CS	1	Valve	Ventil	3
0150	12	41 71 203			1	Bracket	Konsol	6
0160	13	79 78 091			1	Screw	Skruv	5
0170	14	73 99 900			1	Hexagon screw	Sexkantsskruv	5
0180	15	79 77 929			2	Nut	Mutter	5
0190	16	85 09 002			1	Tube	Rör	2
0200	17	85 48 273		L=1150 MM	1	Hose	Slang	5
0210	18	85 48 273		L=60 MM	1	Hose	Slang	5
0220	19	85 48 273		L=150 MM	1	Hose	Slang	5
0230	20	85 48 273		L=30 MM	1	Hose	Slang	5
0240	21	85 48 273		L=30 MM	1	Hose	Slang	5
0250	22	85 48 273		L=500 MM	1	Hose	Slang	5
0260	23	85 48 273		L=220 MM	1	Hose	Slang	5
0270	24	42 52 458			1	Hose	Slang	5
0280	25	85 48 273		L=245 MM	1	Hose	Slang	5
0290	26	85 48 273		L=200 MM	1	Hose	Slang	5
0300	27	85 48 273		L=600 MM	1	Hose	Slang	5
0310	28	95 60 013		LH	1	Valve	Ventil	3
0320	29	85 73 669		RH	1	Valve	Ventil	
0330	30	42 54 645			2	Nozzle	Munstycke	2
0340	31	85 48 273		L=30 MM	2	Hose	Slang	5
0350	32			See page 8A-019, 5-A20		Connector	Skarvstycke	
0360	33	40 96 012			1	Grommet	Genomföring	3
0370	34	42 54 611			1	Grommet	Genomföring	3
0380								
0390	40	40 96 020		5CS	1	Hose	Slang	5
0400	41	40 96 038		5CS	X	Clamp	Klammer	5
0410	42	42 51 997		5CS	X	Clamp	Klammer	5
0420	43	41 71 245		19,159), 5CS	1	Grommet	Genomföring	3
0425				1)	1	.Cable harness	.Ledningsnät	
0430	43	*41 71 252*		159,168,181), 5CS NLS - USE 4380515	1	Grommet	Genomföring	3
0430								
0435	43	43 80 390		159,168,182,191), 5CS	1	Grommet	Genomföring	3
0437	43	43 80 515		159,168,192), 5CS	1	Grommet	Genomföring	3
0440	43	41 71 260		19,174), 5CS	1	Grommet	Genomföring	3
0445				1)	1	.Cable harness	.Ledningsnät	
0450	44	41 71 278		5CS	1	Sealing plug	Tätningsplugg	3
0460	45	40 92 144		159,168), 5CS	1	Nozzle	Munstycke	2
0470	45	41 72 441		19,159), 5CS	1	Nozzle	Munstycke	2
0475	46	79 84 768		19,159), 5CS	X	Clamp	Klamma	5
0480	47	82 72 494		168,174), 5CS	1	Plug	Plugg	5

1. Not as separate spare part. Ej som separat reservdel.
19. High mounted stop light. Högt monterat stoppljus.
159. With rear window wiper. Med bakrutetorkare.
168. Without high mounted stop light. Utan högt monterat stoppljus.
174. Without rear window wiper. Utan bakrutetorkare.
181. Ch -N1005685.
182. Ch N1005686-.
191. Ch -N1030094.
192. Ch N1030095-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D18 *Washer unit* 1992-

Spolaranläggning 1992-

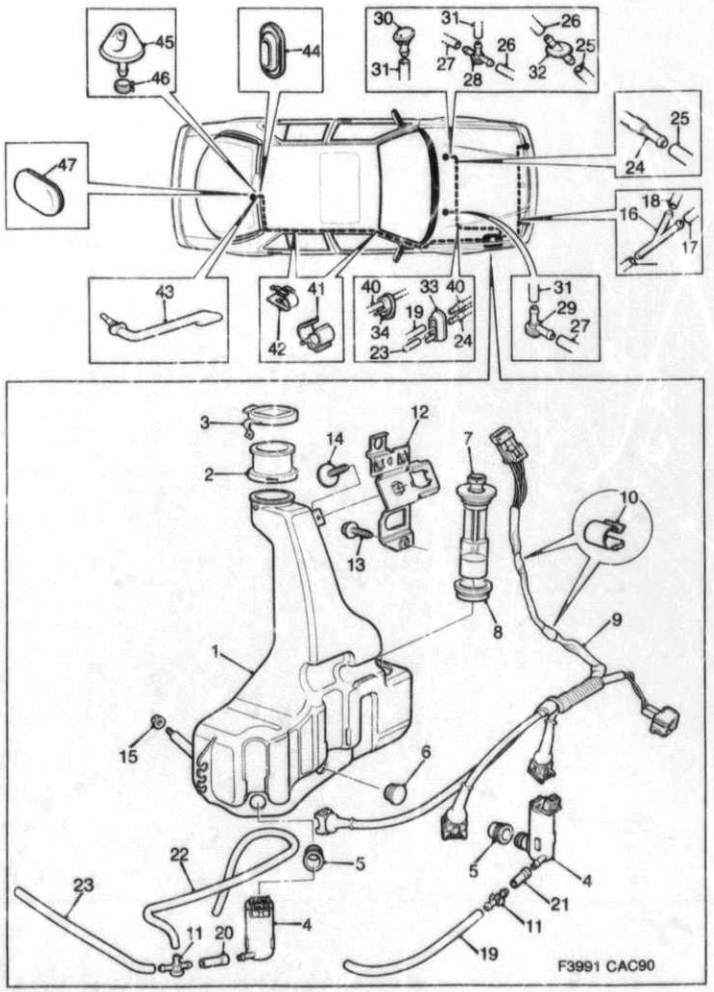

0910 / 0490 / 0500 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
	85 48 273		L=5000 MM	X	Hose	Slang	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D20

Central lock — Centrallås

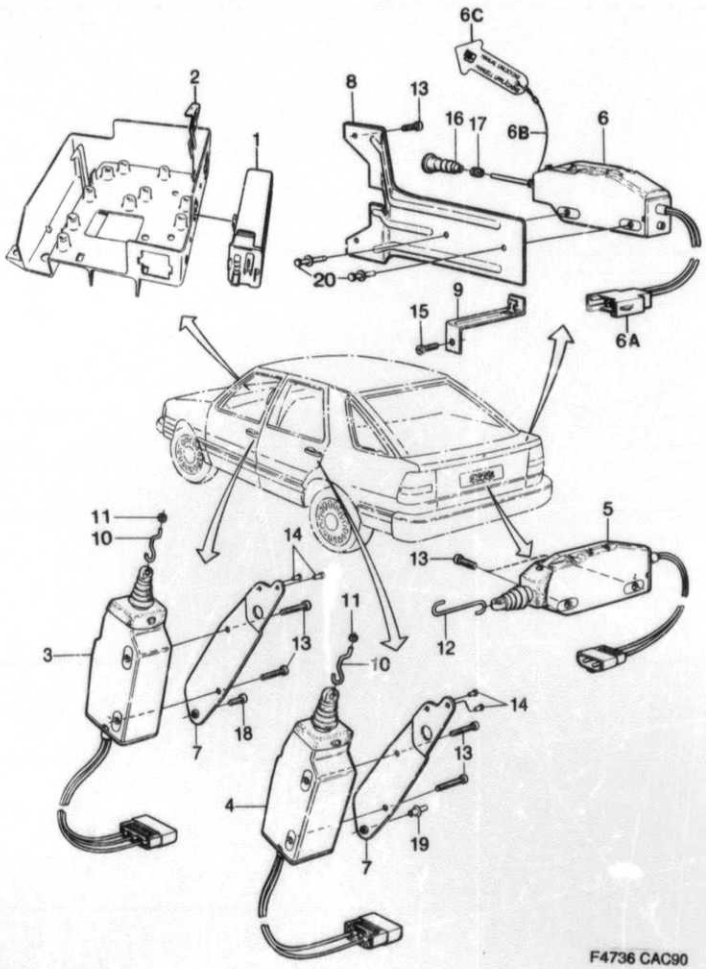

0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 29 975		-1992	1	Electronic unit	Elektronikenhet	3
0020	1	41 02 851		1993	1	Electronic unit	Elektronikenhet	3
0030				See page 8A-057, 5-C10		Door lock	Dörrlås	
0040	2	85 65 855			1	Clip	Clips	6
0050	3	85 91 216		-1992	1	Control device	Styrdon	3
0060	3	85 91 224		1993	1	Electric motor	Elmotor	3
0070	4	85 91 224			3	Electric motor	Elmotor	3
0080	5	40 12 639		5D	1	Electric motor	Elmotor	3
0090	5			4D		Lock	Lås	
0100				See page 8A-065, 5-C18				
0110	5			5CS		Lock	Lås	
0120				See page 8A-069, 5-C22				
0130	6	95 03 723		-1991	1	Electric motor	Elmotor	3
0140	6	43 04 911		1993	1	Electric motor	Elmotor	3
0150	6A	41 17 560			1	.Connector housing	.Kontakthus	4
0155	6B			1)	1	.Cable	.Lina	
0157	6C			1)	1	.Handle	.Handtag	
0160	7	95 03 079		LH	2	Bracket	Konsol	6
0170	7	95 03 061		RH	2	Bracket	Konsol	6
0180	8	95 02 691		-1991	1	Bracket	Konsol	6
0190	8	43 04 929		1993	1	Bracket	Konsol	6
0195	8	90 87 552		1993, 5CS	1	Bracket	Konsol	6
0200	9	91 24 454		-1991	1	Clamp	Klammer	6
0210	9	91 24 454		1993	1	Clamp	Klammer	6
0220	10	95 64 881			4	Pull rod	Dragstång	5
0230	11	95 05 058			4	Bushing	Bussning	4
0240	12	95 02 741			1	Pull rod	Dragstång	5
0250	13	79 71 823		-1991	12	Screw	Skruv	5
0260	13	79 71 823		1992-	10	Screw	Skruv	5
0270	14	95 08 094			8	Rivet	Nit	5
0280	15	79 22 420		-1991	1	Screw	Skruv	5
0290	15	79 22 420		1993-	1	Screw	Skruv	5
0300	16	95 02 709		-1991	1	Bellows	Bälg	4
0310	16	95 02 709		1993-	1	Bellows	Bälg	4
0320	17	95 02 717		-1991	1	Bushing	Bussning	4
0330	17	95 02 717		1993-	1	Bushing	Bussning	4
0340	18	79 69 223			2	Screw	Skruv	5
0350	19	92 55 845			2	Rivet	Nit	5
0360	20	79 71 823		-1991	2	Screw	Skruv	5
0370	20	*79 61 634*		1993- NLS - USE 7977804	2	Rivet	Nit	5
0380								
0390				See page 3A-115, 2-E20		Switch door	Brytare dörr	
0400								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D22

Switch — Strömställare

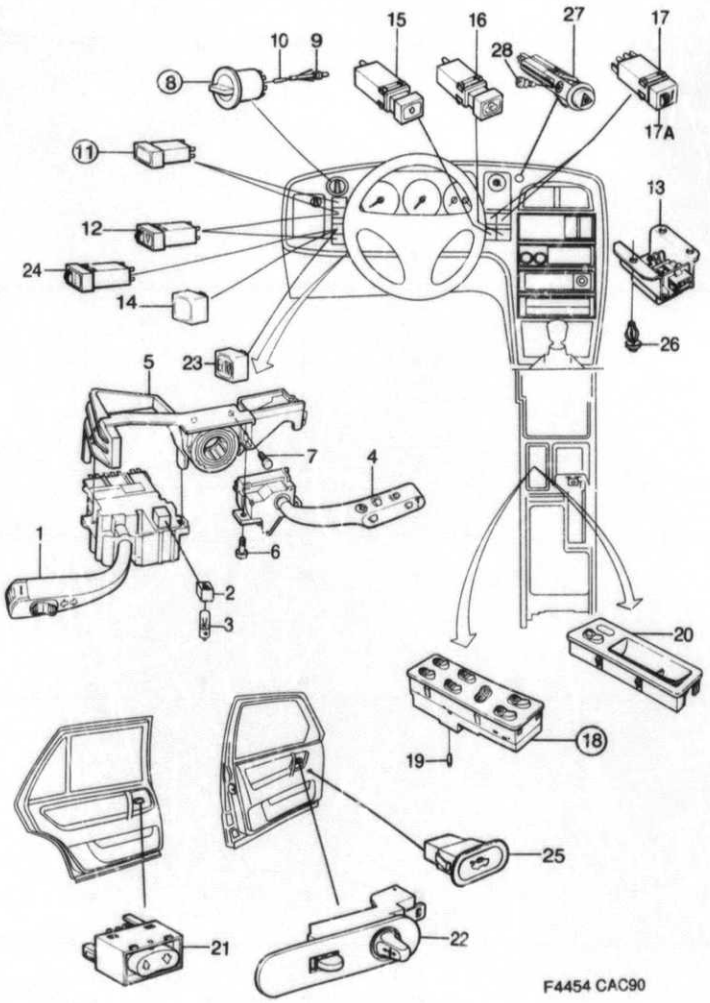

0950	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 26 054		11), -1991	1	Switch direction indicator	Strömställare blinkers	2
0020								
0025	1	40 68 870		11), 1992-	1	Switch direction indicator	Strömställare blinkers	2
0026								
0030	1	95 26 039		12), -1991	1	Switch direction indicator	Strömställare blinkers	2
0040								
0045	1	40 68 862		12), 1992-	1	Switch direction indicator	Strömställare blinkers	2
0047								
0050	2	95 18 309		-1991	1	▪Button	▪Knapp	5
0060	3	95 18 291		-1991	1	▪Bulb	▪Glödlampa	1
0070	4	95 18 226			1	Switch windscreen wiper	Strömställare vindrutetorkare	2
0080								
0090	4	95 23 812		16), 1990	1	Switch windscreen wiper	Strömställare vindrutetorkare	2
0100								
0105	4	95 64 394		159), 5CS	1	Switch windscreen wiper	Strömställare vindrutetorkare	2
0106								
0110	5	95 00 513			1	Retainer	Hållare	6
0120	5	91 23 464		14)	1	Bracket	Hållare	6
0130	6	79 82 333			4	Screw	Skruv	5
0140	7	79 82 333			3	Screw	Skruv	5
0150	8	85 90 838			1	Switch light switch	Strömställare ljusomkopplare	3
0160								
0170	9	85 53 356			1	▪Bracket	▪Hållare	4
0180	10	85 00 613			1	▪Bulb	▪Glödlampa	2
0190	11	95 23 747			1	Switch rear fog light	Strömställare dimbaklykta	3
0200								
0210	11	95 23 762		US, CA	1	Switch front fog light	Strömställare dimstrålkastare	3
0220								
0225	11	40 85 577			1	Switch front fog light	Strömställare dimstrålkastare	3
0226								
0230	12	95 17 806			1	Rheostat instrument lighting	Reostat instrumentbelysning	3
0240								
0250	13	95 22 079			1	Rheostat cooling body	Reostat kylkropp	3
0260								
0270	14	95 68 122			X	Button	Knapp	5
0280	15	95 23 788		AC	1	Switch	Strömställare	3
0290	16	95 12 690			1	Switch recirculation	Strömställare recirkulation	3
0300								
0310	17	95 18 820		-1992	2	Switch heating pad	Strömställare värmedyna	3
0320								
0325	17	44 39 014		1993	2	Switch heating pad	Strömställare värmedyna	3
0327								
0330	17A	40 84 554		See page 3A-219, 2-J04	X	Switch button kit	Strömställarknapp sats	5
0340								
0350	18	91 24 652		-1992, EW, SR	1	Switch	Strömställare	3
0355	18	40 85 502		1993, EW, SR	1	Switch	Strömställare	3
0360	18	91 24 660		-1992, EW	1	Switch	Strömställare	3
0365	18	40 85 510		1993, EW	1	Switch	Strömställare	3
0370	18	91 24 686		-1992, SR	1	Switch	Strömställare	3
0377	18	40 85 528		1993, SR	1	Switch	Strömställare	3
0380	19	40 69 373			1	▪Bulb	▪Glödlampa	4
0390	20	91 24 678		-1992	1	Coin box	Myntfack	5
0395	20	40 85 536		1993	1	Switch coin box	Strömställare myntfack	3
0396								
0400	21	95 03 772		EW	2	Switch	Strömställare	3
0410	22	95 05 488		EM	1	Switch	Strömställare	3

11. With speed control system. Med fartkontrollsystem.
12. Without speed control system. Utan fartkontrollsystem.
14. AIR-BAG.
16. For cars without headlight wipers. För bilar utan strålkastartorkare.
159. With rear window wiper. Med bakrutetorkare.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-D24

Switch
Strömställare

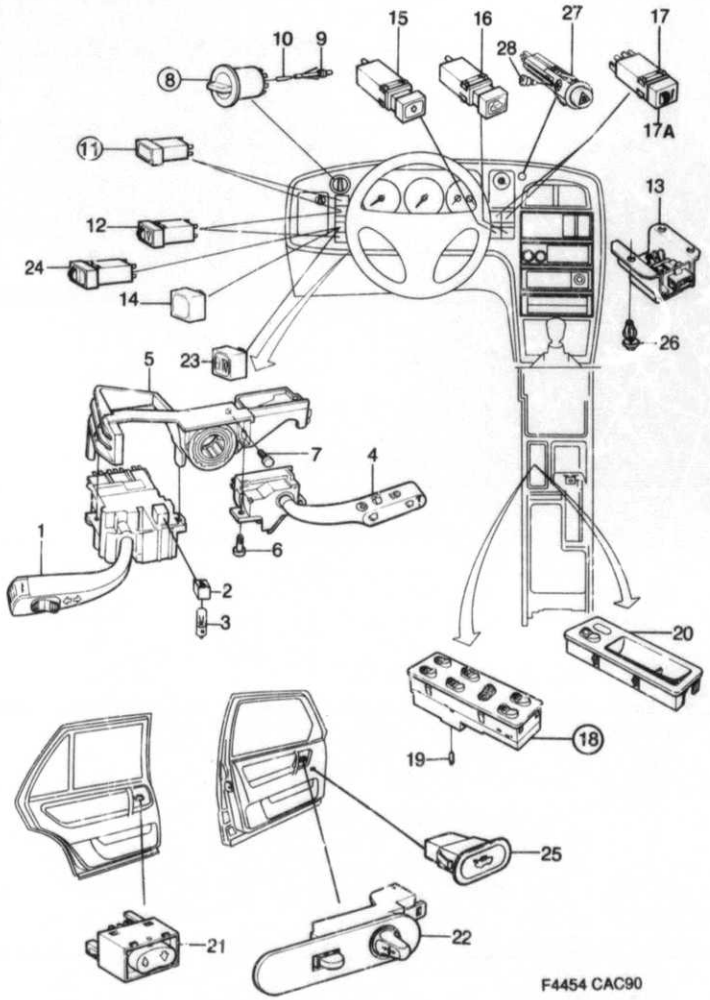

F4454 CAC90

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	22	41 08 825		90,91)-199*, RHD, EM	1	Switch	Strömställare	3
0430	23	95 23 804			1	Switch	Strömställare	3
0440						extra	extra	
0450	24	95 27 904			1	Switch	Strömställare	3
0460						headlamp levelling	ljuslängdsreglering	
0470	24	40 83 879		5CS	1	Switch	Strömställare	3
0480						headlamp levelling	ljuslängdsreglering	
0490	25	40 61 883		4D	1	Switch	Strömställare	9
0500						luggage compartment lock	bagagerumslås	
0510	25	40 61 25[illegible]		4D, RHD	1	Switch	Strömställare	5
0511						luggage compartment lock	bagagerumslås	
0512	25	40 61 883		5CS	1	Switch	Strömställare	9
0513						luggage compartment lock	bagagerumslås	
0514	25	40 61 255		5CS, RHD	1	Switch	Strömställare	5
0515						luggage compartment lock	bagagerumslås	
0530	26	94 73 869		B202	3	Clip	Clips	5
0540	26	40 69 977		B234	3	Clip	Clips	5
0545	27	41 09 526		1992-	1	Switch	Strömställare	4
0546						warning flasher	varningsblinklykta	
0547	28	41 14 883			1	▪Bulb	▪Glödlampa	4
0550				See page 3A-215, 2-I24		Headlamp levelling	Ljuslängdsreglering	

90. For mirror, passanger side. För spegel, passagerarsida.
91. Ch L1009657-, L2007343-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E02

Speed control system
Farthållningssystem

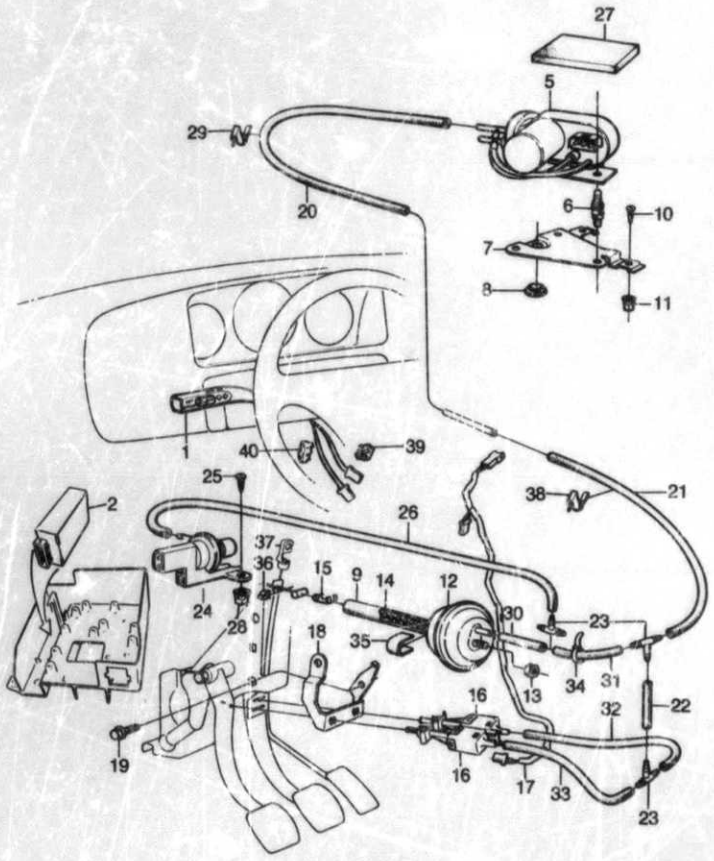

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 3A-093, 2-D22		Switch	Omkopplare	
0020	2	95 26 757		-1991	1	Electronic unit	Elektronikenhet	5
0025	2	41 08 650		1992-	1	Electronic unit	Elektronikenhet	5
0050	5	85 87 024			1	Vacuum pump	Vakuumpump	5
0060	6	95 55 194			3	Bracket	Upphängning	6
0070	7	95 17 798			1	Bracket	Konsol	6
0080	8	82 06 096			1	Plug	Plugg	5
0090	9	*91 24 223*		NLS	1	Hose	Slang	5
0100	10	79 22 891			2	Screw	Skruv	5
0110	11	79 75 261			2	Nut	Mutter	5
0120	12	95 12 302			1	Vacuum regulator	Vakuumregulator	5
0130	13	80 74 268		-1992	1	Nut	Mutter	5
0135	13	91 66 406		1993	1	Nut	Mutter	5
0140	14	40 61 917			1	Chain	Kedja	6
0150	15	*85 87 099*		223) NLS - USE 4433827	1	Clamp	Klammer	6
0155	15	44 33 827		224)	1	Clamp	Klammer	6
0160	16	*41 08 676*		1990, M NLS - USE 4350443	2	Contact	Kontakt	3
0165	16	43 50 443		1991-, M	2	Contact	Kontakt	3
0170	16	*41 08 676*		1990, A NLS - USE 4350443	1	Contact	Kontakt	3
0175	16	43 50 443		1991-, A	1	Contact	Kontakt	3
0177	17	95 19 612		1991-, A, RHD	1	Cable harness	Ledningsnät	6
0180	17	95 19 604		1991-, TURBO, M, TCS,RHD	1	Cable harness	Ledningsnät	6
0190	18	95 29 637			1	Bracket	Konsol	6
0192	18	40 67 468		A	1	Bracket	Konsol	6
0200	19	*79 71 757*		NLS - USE 7528953	1	Screw	Skruv	5
0210	20	41 08 734		L=1000 MM	1	Hose	Slang	5
0220	21	95 66 423		12), L=310 MM	1	Hose	Slang	5
0230	21	41 08 726		L=310 MM	1	Hose	Slang	5
0235	21	41 08 726		12), RHD, L=310 MM	1	Hose	Slang	5
0240	21	41 05 718		RHD, L=210 MM	1	Hose	Slang	5
0250	22	*85 90 689*		L=210 MM NLS - USE 9566423	1	Hose	Slang	5
0260	23	85 09 002			3	Tube	Rör	2
0270	24	91 24 884			1	Vacuum switch	Vakuumkontakt	5
0280	25	79 22 826			2	Screw	Skruv	5
0290	26	*95 16 329*		LHD, L=340 MM NLS - USE 9564162	1	Hose	Slang	5
0300	26	*85 90 689*		RHD, L=210 MM NLS - USE 9566423	1	Hose	Slang	5
0310	27	96 56 901			1	Spacer	Mellanlägg	6
0320	28	79 75 261			2	Nut	Mutter	5
0330	29	71 21 239			1	Clamp	Klammer	5
0340	30	*85 87 354*		L=45 MM NLS - USE 9566381	1	Hose	Slang	5
0350	30	95 66 381		TURBO, L=45 MM	1	Hose	Slang	5
0360	31	*85 87 354*		L=45 MM NLS - USE 9566381	1	Hose	Slang	5
0365	31	95 19 646		RHD, L=650 MM	1	Hose	Slang	5
0370	31	95 66 381		RHD, TURBO M, L=45 MM	1	Hose	Slang	5
0390	31	95 66 464		RHD, M, L=725 MM	1	Hose	Slang	5
0400	32	*85 87 347*		L=75 MM NLS - USE 9566399	1	Hose	Slang	5
0410	32	95 66 399		L=75 M, A	1	Hose	Slang	5
0420	32	95 66 423		A, L=310 MM	1	Hose	Slang	5
0430	32	95 19 638		RHD, L=520 MM	1	Hose	Slang	5
0440	32	95 66 472		RHD, A, L=800 MM	1	Hose	Slang	5
0450	32	95 66 449		RHD, M, L=520 MM	1	Hose	Slang	5

12. Without speed control system. Utan fartkontrollsystem.
223. Ch -P1034114.
224. Ch P1034115-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E04

Speed control system

Farthållningssystem

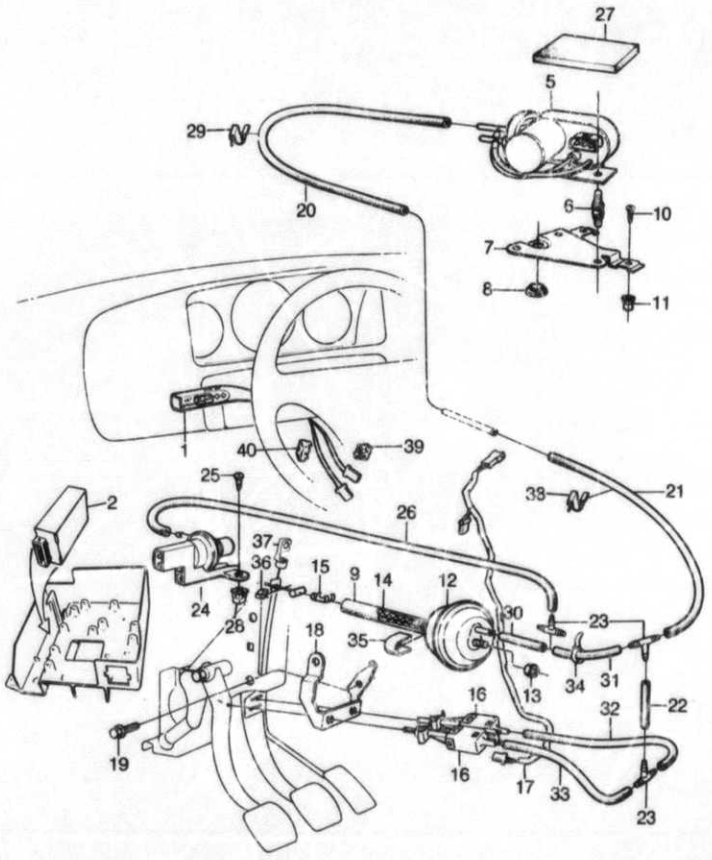

F4737 CAC90

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	
0460	33	*85 87 347*		L=75 MM NLS - USE 9566399	1	Hose	Slang	5
0470	33	95 66 407		I, L=120 MM	1	Hose	Slang	5
0480	33	95 66 407		RHD, TURBO A, L=120 MM	1	Hose	Slang	5
0490	33	95 66 399		M, L=75 MM	1	Hose	Slang	5
0500	33	95 66 423		A, L=310 MM	1	Hose	Slang	5
0510	34	73 98 944			1	Tensioning band	Spännband	5
0520	34	73 98 977		RHD	1	Tensioning band	Spännband	5
0530	35	40 63 384			1	Chain coupling	Kedjelås	9
0540	36	79 22 826			1	Screw	Skruv	5
0550	37	40 61 362			1	Protection	Skydd	6
0560	38	71 08 491			1	Clamp	Klämmer	5
0570	39	95 59 998		A	1	Manifold	Förgrening	3
0580	40	95 60 004		A	1	Manifold	Förgrening	3

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E06

Actuator — *Manöverdon*

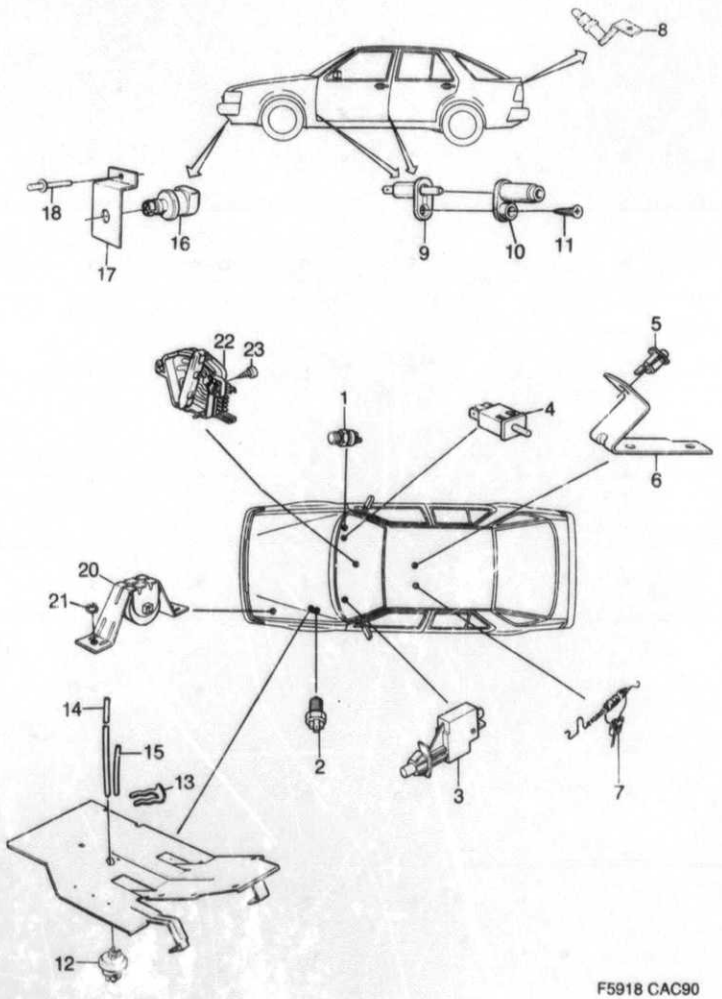

F5918 CAC90

1000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1			See page 2-133, 1-H14		Contact	Kontakt	
0020						cooling fan	kylfläkt	
0030	2	95 29 363			1	Contact	Kontakt	3
0040						reverse lamp	backlampa	
0050	3	95 05 462			1	Brake light switch	Bromsljuskontakt	3
0070	4	95 08 367			1	Contact	Kontakt	3
0080						glove compartment	handskfack	
0090	5	85 22 492			1	Contact	Kontakt	3
0100						handbrake	handbroms	
0110	6	89 54 596			1	Bracket	Konsol	4
0120	7	95 05 652			2	Contact	Kontakt	5
0130						front seat	framstol	
0140	8			5D		Contact	Kontakt	
0150				See page 8A-061, 5-C14		tail gate	bagagerumsdörr	
0160	8			5CS		Contact	Kontakt	
0170				See page 8A-069, 5-C22		tail gate	bagagerumsdörr	
0180	8			4D		Contact	Kontakt	
0190				See page 8A-065, 5-C18		boot lid	bagagerumslucka	
0200	9	95 14 860		209)	2	Contact	Kontakt	3
0210						front door	framdörr	
0215	9	40 86 492		210)	2	Contact	Kontakt	3
0217						front door	framdörr	
0220	9	95 14 886			2	Contact	Kontakt	3
0230						rear door	bakdörr	
0240	10	95 12 229		209)	2	Protection	Skyddshölje	3
0250						front door	framdörr	
0260	10	95 14 878			2	Protection	Skyddshölje	3
0270						rear door	bakdörr	
0280	11	79 22 818		209)	4	Screw	Skruv	5
0285	11	79 22 354		210)	4	Screw	Skruv	5
0290	12	85 94 632		5), 1990, TURBO	1	Pressure monitor	Tryckvakt	2
0300	13	85 65 855		5), 1990	1	Clip	Clips	6
0310	14			See page 2-169, 1-J02		Hose	Slang	
0320	15			See page 2-169, 1-J02		Hose	Slang	
0330	16	91 23 456			1	Sensor	Givare	4
0340						outer temp	yttertemp	
0350	17	95 14 183		1990, 5D	1	Bracket	Hållare	6
0360	17	95 69 781		1990, 4D	1	Bracket	Hållare	6
0370	17	95 69 781		1991-	1	Bracket	Hållare	6
0375	18	82 35 178		1993, 5CS AERO	1	Pop rivet	Popnit	5
0380	20	43 20 545		5CS	1	Resistor	Resistor	5
0390	21	40 87 128		5CS	2	Plastic nut	Plastmutter	5
0400	22	40 62 980		-1992, EDU, LH, A	1	Switch	Strömställare	5
0410						starter inhibitor	startspärr	
0415	22			1993		Switch	Strömställare	
0416				See page 4-071, 3-J24		starter inhibitor	startspärr	
0420	22	40 62 972		-1992, EDU, RH, A	1	Switch	Strömställare	5
0430						gear position indicator	växellägesindikator	
0435	22			1993		Switch	Strömställare	
0436				See page 4-071, 3-J24		starter inhibitor	startspärr	
0440	23	79 22 818		EDU	4	Screw	Skruv	5
0490		85 48 075		97), A	X	Starter inhibitor kit	Startspärrsats	4
0500				See page 3A-219, 2-J04				

5. Without catalytic converter. Utan katalytisk reaktor.
97. Ch J1014463–, J2007677–, J8000885–.
209. Ch –P1003149.
210. Ch P1003150–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E08

Air-bag
Airbag

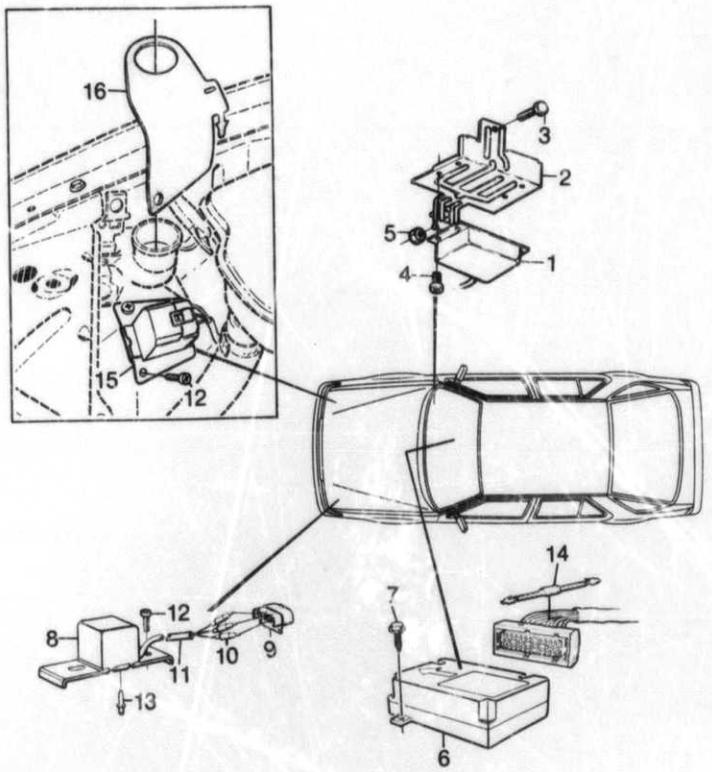

F4308 CAC90

1005	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 26 906		7), -1991	1	Electronic unit	Elektronikenhet	5
0020	2	95 71 589		-1991	1	Bracket	Konsol	5
0030	3	79 67 938		-1991	1	Screw	Skruv	5
0040	4	73 99 587		-1991	4	Screw	Skruv	5
0050	5	79 71 922		-1991	2	Nut	Mutter	3
0060	6	41 76 368		1992-	1	Electronic unit	Elektronikenhet	5
0070	7	79 78 117		1992	2	Screw	Skruv	5
0080	7	79 77 929		1993	2	Nut	Mutter	5
0090	8	96 96 626		143)	2	Sensor	Sensor	5
0100	9	95 03 327			1	▪Contact housing 3-pole, male	▪Kontakthus 3-polig, stift	4
0110								
0120	10	78 74 506			3	▪Connection	▪Skarv	5
0130	11	43 50 476		143)	2	Cable harness	Ledningsnät	5
0140	12	73 99 520			4	Screw	Skruv	5
0160	13	73 99 454			4	Nut	Mutter	5
0170	14	43 54 031		1992-	1	Resistor	Motstånd	6
0180	15	40 32 132		144)-1991	2	Sensor	Sensor	5
0190	15	40 79 935		1992-	2	Sensor	Sensor	5
0200	16	43 14 001		1992-	1	Cap	Skydd	5

7. Also available as exchange unit. Finns även som utbytesenhet.
143. Ch --M1001761, --M2000923.
144. Ch M1001762--, M2000924--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E10

Actuator ACC

Manöverdon ACC

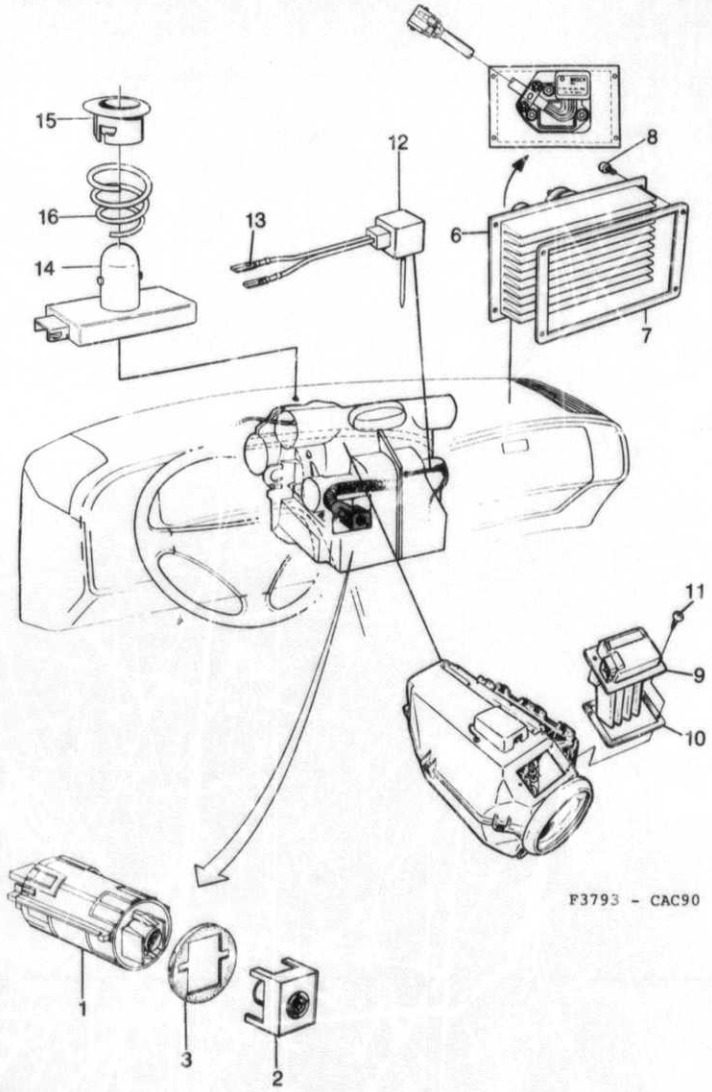

F3793 - CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1	*96 27 811*		175)	1	Sensor	Givare	4
			NLS - USE 9630740		indoor temperature	innerlufttemperatur	
1	96 30 740		176)	1	Sensor	Givare	4
					indoor temperature	innerlufttemperatur	
2	96 27 837		175)	1	.Front cover	.Frontkåpa	5
2	43 18 770		176)	1	.Front cover	.Frontkåpa	5
3	96 27 845		175)	1	.Gasket	.Packning	6
3	43 18 762		176)	1	.Gasket	.Packning	6
6	96 29 106		-1991	1	Control unit	Regleraggregat	5
7	96 29 247		-1991	1	.Seal	.Tätning	6
8	79 22 214		-1991	4	Screw	Skruv	5
9	40 71 775		1992-	1	Control unit	Regleraggregat	5
10	40 72 807		1992-	1	.Seal	.Tätning	6
11	79 22 214		1992-	3	Screw	Skruv	5
12	96 29 395		207)	1	Sensor	Givare	4
					mixed air temperatur	blandlufttemperatur	
12	43 18 788		208)	1	Sensor	Givare	4
					mixed air temperatur	blandlufttemperatur	
13	95 52 100		207)	2	.Cable terminal	.Kabelsko	5
13	41 15 085		208)	2	.Cable terminal	.Kabelsko	5
14	40 70 546		199)	1	Solar sensor	Solsensor	4
					grey	grå	
14	40 70 967		199), AU	1	Solar sensor	Solsensor	4
					grey	grå	
14	40 70 546		200)	1	Solar sensor	Solsensor	4
					grey	grå	
14	40 70 561			1	Solar sensor	Solsensor	4
					yellow	gul	
15	40 70 595			1	.Bracket	.Hållare	6
					grey	grå	
15	40 70 611			1	.Bracket	.Hållare	6
					yellow	gul	
16	96 30 252			1	.Spring	.Fjäder	5
			See page 8C-005, 6-K06		Control panel	Reglagepanel	
			See page 8C-009, 6-K10		Motor unit	Motorenhet	

175. Ch --M1022955, --M2012513.
176. Ch M1022956--.
199. Ch --N1034646.
200. Ch N1034647--.
207. Ch --N1041839.
208. Ch N1041840--.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E12

Radio, electrical aerial
Radio, motorantenn

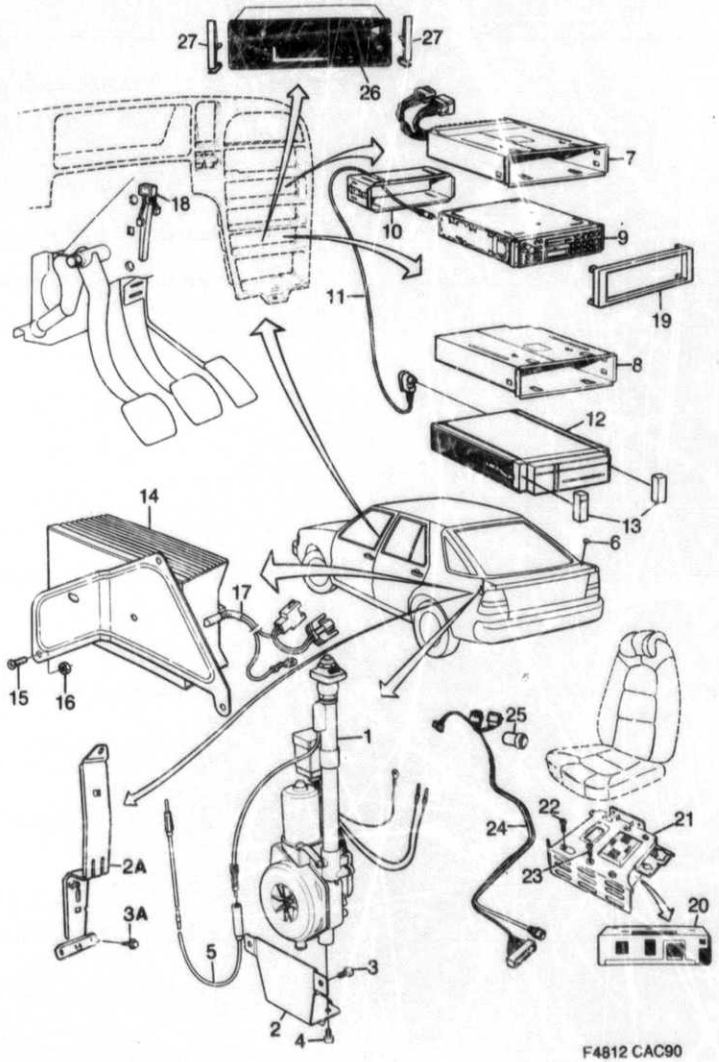

F4812 CAC90

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 26 419		-1992	1	Antenna	Antenn	5
0012	1	40 86 732		1993	1	Antenna	Antenn	5
0015	1	41 08 932		5CS	1	Antenna	Antenn	5
0020	2	95 07 971		5D	1	Bracket	Fäste	5
0030	2	95 18 556		4D	1	Bracket	Fäste	5
0035	2A	*41 11 241*		215), 5CS NLS - USE 4086658	1	Bracket	Fäste	5
0036								
0037	2A	40 86 658		216), 5CS	1	Bracket	Fäste	5
0040	3	79 22 891			2	Screw	Skruv	5
0045	3A	79 78 091		215), 5CS	3	Screw	Skruv	5
0047	3A	79 72 607		216), 5CS	3	Screw	Skruv	5
0050	4	80 19 697			2	Screw	Skruv	5
0060	5	95 64 477			1	Cable harness	Ledningsnät	5
0070	6	95 50 476			1	Plug	Plugg	5
0075	6	40 85 544		5CS	1	Plug	Plugg	5
0080	7	*40 65 397*		135), 5D, US NLS - USE 4111100	1	Cage with amplifier	Korg med förstärkare	5
0090								
0095	7	41 11 100		136)-1991, 5D, US	1	Cage with amplifier	Korg med förstärkare	5
0096								
0100	7	40 65 405		-1991, 4D, US	1	Cage with amplifier	Korg med förstärkare	5
0110								
0115	7	40 83 036		1992-, US, CA	1	Cage with amplifier	Korg med förstärkare	5
0116								
0120	8	95 27 979		-1991, US	1	Cage equalizer	Korg equalizer	5
0125								
0127	8	40 83 044		1992-, US, CA	1	Cage CD-player	Korg CD-spelare	5
0128								
0130	9	91 25 550		17,120)	1	Radio	Radio	5
0135	9	44 27 852		7,17,121)	1	Radio	Radio	5
0140	10	40 63 335		17)	1	Mounting frame radio	Monteringsram radio	5
0145								
0150	11	95 24 786		-1991	1	Cable radio	Ledning radio	5
0155								
0160	12	40 68 961		1990, 5D	1	Amplifier	Förstärkare	5
0165	12	40 85 825		7), 1991, 5D	1	Amplifier	Förstärkare	5
0170	12	*40 68 946*		-1991, 4D NLS - USE 4085262	1	Amplifier	Förstärkare	5
0175	12	40 85 262		7), 1992, 4D	1	Amplifier	Förstärkare	5
0180	13	95 25 494			2	Cover	Täcklock	5
0190	14	95 29 256		7,17), 4D	1	Amplifier bass	Förstärkare bas	5
0195								
0200	15	79 22 834		17), 4D	3	Screw	Skruv	5
0210	16	79 75 261		17), 4D	3	Nut	Mutter	5
0220	17	95 66 563		17), 4D	1	Cable harness loudspeaker	Ledningsnät högtalare	5
0225								
0230	18	*95 65 136*		NLS	1	Interference suppression brake light	Avstörning bromsljus	5
0235								
0240	19	40 63 343		17)	1	Decor frame	Dekorram	5
0250	20	40 84 018		7), 1992-	1	Amplifier	Förstärkare	5
0260	20	40 83 051		1992-, US, CA	1	Amplifier	Förstärkare	5
0270	21	40 83 069		1992-	1	Bracket	Konsol	5
0280	22	*84 41 503*		1992 NLS - USE 7970601	4	Screw	Skruv	5
0285	22	79 22 354		1993	4	Screw	Skruv	5
0290	23	79 78 356		1992-	2	Screw	Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.
7. Audio system. Audio system.
120. Ch --N1033485.
121. Ch N1033486-.
135. Ch --L1018027, --L2012780, --L7020432.
136. Ch L1018028-, L2012781-, L7020433-.
215. Ch --P1009956.
216. Ch P1009957-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E14

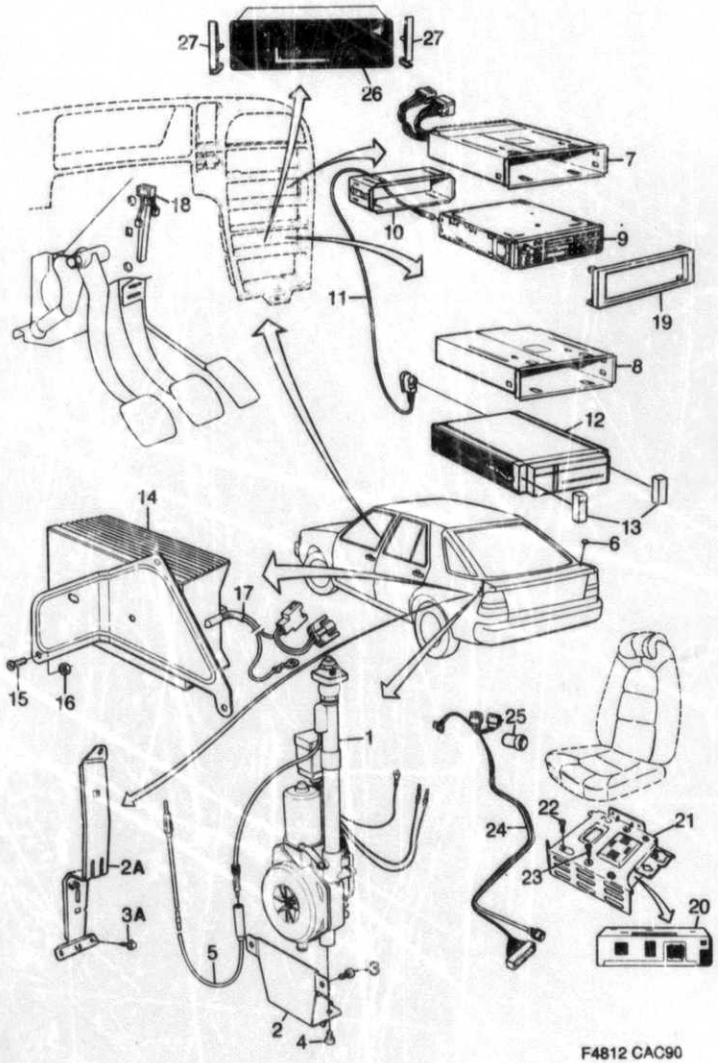

F4812 CAC90

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0300	24	40 84 026		1992-	1	Cable radio	Ledning radio	5
0310								
0320	24	40 84 034		1992-	1	Cable harness amplifier	Ledningsnät förstärkare	5
0330								
0340	25	40 85 197		1992-, US, CA	1	Contact	Kontakt	9
0350								
0360	26	86 71 455		7), 1992-	1	CD-player	CD-spelare	5
0370	27	86 71 562		1992-, LH	1	Cover	Täcklock	5
0380	27	86 71 497		1992-, RH	1	Cover	Täcklock	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E16

Loudspeaker
Högtalare

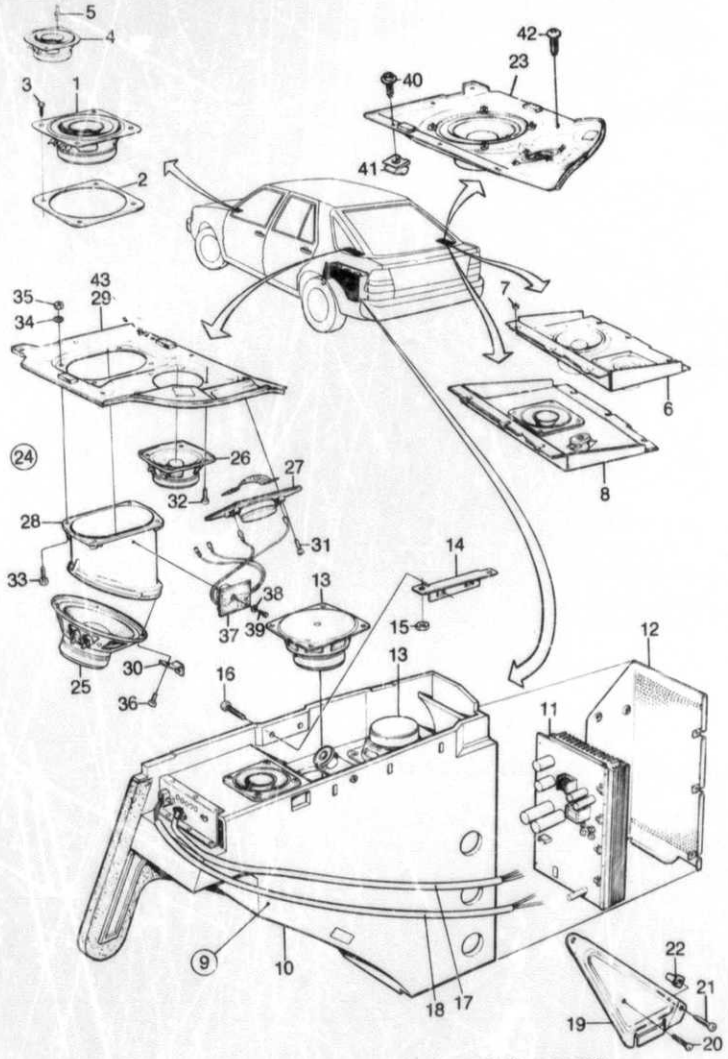

1017	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*95 22 806*		71)	2	Loudspeaker	Högtalare	4
0020				NLS - USE 4439121		bass	bas	
0030	1	*95 22 806*		72)-1992	2	Loudspeaker	Högtalare	4
0040				NLS - USE 4439121		bass	bas	
0045	1	44 39 121		1993	2	Loudspeaker	Högtalare	4
0046						bass	bas	
0050	1	40 67 534		72,211), US, CA	2	Loudspeaker	Högtalare	4
0060						bass	bas	
0090	1	40 85 239		212), US, CA	2	Loudspeaker	Högtalare	4
0100						bass	bas	
0110	2	95 09 076		-1992	2	Spacer	Distans	5
0120	3	79 72 128			8	Screw	Skruv	5
0130	4	95 22 814		71)	2	Loudspeaker	Högtalare	4
0140						treble	diskant	
0150	4	95 22 814		72)-1992	2	Loudspeaker	Högtalare	4
0160						treble	diskant	
0165	4	44 39 113		1993	2	Loudspeaker	Högtalare	4
0166						treble	diskant	
0170	4	40 67 542		72)-1991, US	2	Loudspeaker	Högtalare	4
0180						treble	diskant	
0190	4	40 85 148		1992-, US, CA	2	Loudspeaker	Högtalare	4
0200						treble	diskant	
0210	5	73 99 256			4	Rivet	Nit	3
0220	6	95 22 632		71), LH	1	Loudspeaker	Högtalare	4
0230	6	95 22 624		71), RH	1	Loudspeaker	Högtalare	4
0240	6	95 22 632		72)-1991, LH	1	Loudspeaker	Högtalare	4
0250	6	95 22 624		72)-1991, RH	1	Loudspeaker	Högtalare	4
0260	6	40 84 695		1992-, LH	1	Loudspeaker	Högtalare	4
0270	6	40 84 687		1992-, RH	1	Loudspeaker	Högtalare	4
0280	6	40 67 567		72)-1991, LH, US	1	Loudspeaker	Högtalare	4
0290	6	40 67 575		72)-1991, RH, US	1	Loudspeaker	Högtalare	4
0300	6	40 83 119		1992, LH, US, CA	1	Loudspeaker	Högtalare	4
0310	6	40 83 127		1992, RH, US, CA	1	Loudspeaker	Högtalare	4
0320	7	79 77 671			12	Nut	Mutter	5
0330	8	95 24 042		17), -1991, 5D, RH	1	Loudspeaker	Högtalare	4
0340	9	95 24 315		17), -1991, 5D	1	Loudspeaker casing	Högtalarkåpa	9
0350	10	95 24 307			1	.Loudspeaker casing	.Högtalarkåpa	4
0360	11	95 24 372			1	.Amplifier	.Förstärkare	5
0370	12	95 24 398			1	.Cover plate	.Täckplåt	5
0380	13	95 24 406		LH	2	.Loudspeaker	.Högtalare	4
0390	14	95 64 519		-1991	1	Attaching bracket	Fästvinkel	5
0400	15	80 29 548		-1991	2	Nut	Mutter	5
0410	16	79 78 117		-1991	2	Screw	Skruv	5
0420	17			See page 3A-133, 2-F14		Cable	Ledning	
0430						bass	bas	
0440	18	95 26 096		-1991	1	Cable harness	Ledningsnät	9
0450						amplifier	förstärkare	
0460	19	95 64 741		145)	1	Bracket	Konsol	5
0470	19	40 63 715		146)-1991	1	Bracket	Konsol	5
0480	20	79 22 818		145)	1	Screw	Skruv	5
0490	21	79 22 834		145)	2	Screw	Skruv	5
0500	21	79 78 109		146)	3	Screw	Skruv	5
0510	22	79 75 261		145)	2	Nut	Mutter	5
0520	23	95 28 167		4D, LH	1	Loudspeaker	Högtalare	4
0530	23	95 28 159		4D, RH	1	Loudspeaker	Högtalare	4
0535	23	95 28 167		17), 1993, 4D, LH	1	Loudspeaker	Högtalare	4

17. Audio system. Audio system.
71. Ch --L1001122, --L2000789.
72. Ch L1001123-, L2000790-.
145. Ch --M1004415, --M2003030.
146. Ch M1004416-, M2003031-.
211. Ch --P1005668.
212. Ch P1005669-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E18

Loudspeaker
Högtalare

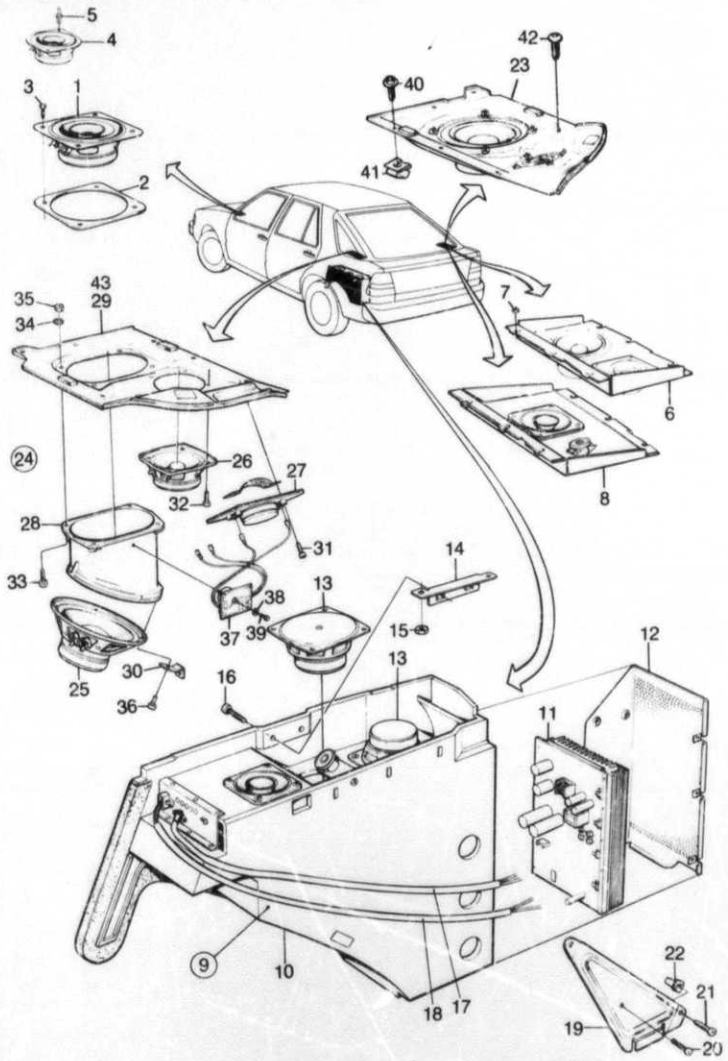

1017	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0537	23	95 28 159		17), 1993, 4D, RH	1	Loudspeaker	Högtalare	4
0540	23	40 83 275		1992-, 4D, LH, US, CA	1	Loudspeaker	Högtalare	4
0550	23	40 83 283		1992-, 4D, RH, US, CA	1	Loudspeaker	Högtalare	4
0560	23	41 09 039		5CS, LH	1	Loudspeaker	Högtalare	4
0570	23	41 09 047		5CS, RH	1	Loudspeaker	Högtalare	4
0575	23	40 85 213		5CS, LH, US, CA	1	Loudspeaker	Högtalare	4
0576	23	40 85 221		5CS, RH, US, CA	1	Loudspeaker	Högtalare	4
0580	24	40 63 418		17), -1991, 4D, LH	1	Loudspeaker	Högtalare	4
0590	24	40 63 400		17), -1991, 4D, RH	1	Loudspeaker	Högtalare	4
0600	24	41 11 233		17), 1992, 4D, LH	1	Loudspeaker	Högtalare	4
0610	24	41 11 225		17), 1992, 4D, RH	1	Loudspeaker	Högtalare	4
0620	25	95 29 181			1	.Loudspeaker bass	.Högtalare bas	4
0630								
0640	26	95 29 199			1	.Loudspeaker midrange	.Högtalare mellanregister	4
0650								
0660	27	95 29 207			1	.Loudspeaker treble	.Högtalare diskant	4
0670								
0680	28	95 29 173		-1991	1	.Tube	.Rör	5
0690	28	41 11 472		1992-	1	.Tube	.Rör	5
0700	29	40 63 434		-1991, LH	1	.Bracket	.Konsol	5
0710	29	40 63 426		-1991, RH	1	.Bracket	.Konsol	5
0720	29	40 84 778		1992-, LH	1	.Bracket	.Konsol	5
0730	29	40 84 760		1992-, RH	1	.Bracket	.Konsol	5
0740	30	95 67 405		-1991	1	.Attaching bracket	.Fästvinkel	5
0750	30	41 74 934		1992-	1	.Attaching bracket	.Fästvinkel	5
0760	31	*79 22 602*		NLS	4	.Screw	.Skruv	5
0770	32	79 22 644			4	.Screw	.Skruv	5
0780	33	80 19 705			4	.Screw	.Skruv	5
0790	34	79 15 556			4	.Star washer	.Taggbricka	5
0800	35	80 29 548			4	.Nut	.Mutter	5
0810	36	80 59 230			4	.Screw	.Skruv	5
0820	37	95 68 866			1	.Filter	.Filter	5
0830	38	79 15 556			1	.Star washer	.Taggbricka	5
0840	39	*79 22 602*		NLS	1	.Screw	.Skruv	5
0850	40	79 72 938		4D	8	Screw	Skruv	5
0860	41	96 92 849		4D	8	Nut	Mutter	5
0870	41	79 77 929		5CS	12	Nut	Mutter	5
0880	42	79 22 420		4D	2	Screw	Skruv	5
0890	43	95 71 621		25), 4D, LH	1	Bracket	Konsol	5
0900	43	95 71 159		25), 4D, RH	1	Bracket	Konsol	5

17. Audio system. Audio system
25. For cars without loudspeaker. För bilar utan högtalare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E20

Anti theft system

Stöldlarm

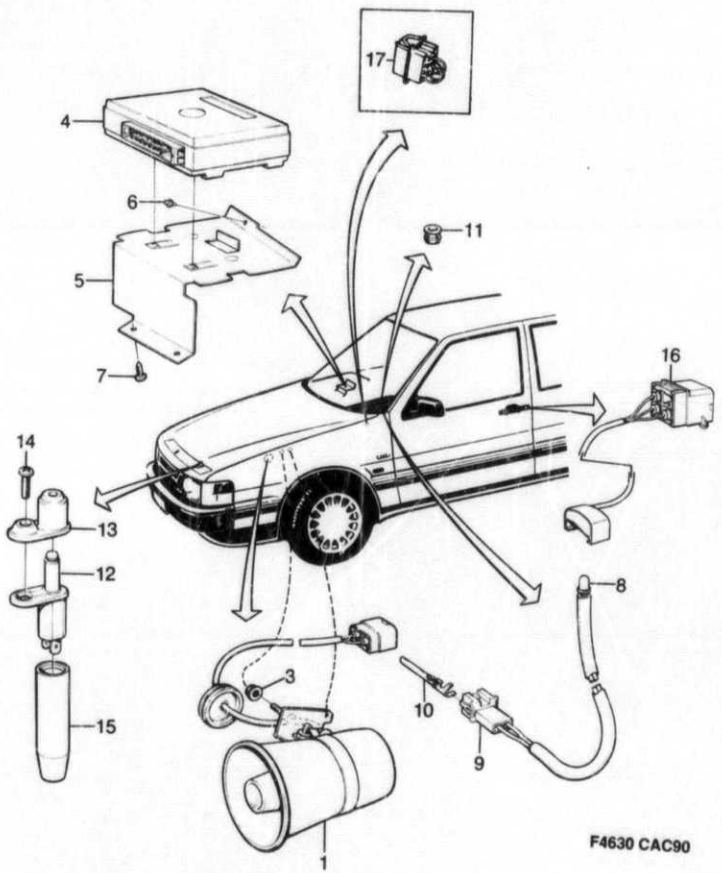

1025	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 65 839			1	Horn	Signalhorn	4
0020	3	79 67 953			1	Nut	Mutter	5
0030	4	40 92 037		1990	1	Electronic unit	Elektronikenhet	5
0035	4	*40 94 306*		1991 NLS - USE 4251831	1	Electronic unit	Elektronikenhet	5
0037	4	42 51 831		1992-	1	Electronic unit	Elektronikenhet	5
0040	5	95 65 995			1	Bracket	Konsol	9
0050	6	79 72 490		-1991	1	Rivet	Nit	5
0055	6	79 61 642		1992-	1	Rivet	Nit	5
0060	7	79 22 818			2	Screw	Skruv	5
0070	8	40 90 981			1	Diode	Diod	9
0080	9	95 18 713		See page 3B-005, 3-A06	1	▪Contact housing 2-pole, male	▪Kontakthus 2-polig, stift	4
0085								
0090	10	95 52 100		AREA 0,75-1,5 MM2	2	▪Cable terminal	▪Kabelsko	5
0100	11	95 93 161			1	Bracket	Hållare	5
0110	12	95 14 860			1	Contact	Kontakt	3
0120	13	95 12 229			1	Protection	Skyddshölje	3
0130	14	79 22 974			1	Screw	Skruv	5
0140	15	95 69 997			1	Protection	Skydd	4
0150	16			See page 8A-071, 5-C24	X	Switch	Brytare	
0170	17	40 66 932		M	1	Cable harness	Ledningsnät	5
0180	17	40 66 940		A	1	Cable harness	Ledningsnät	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E22

Speed warning system
Fartvarningssystem

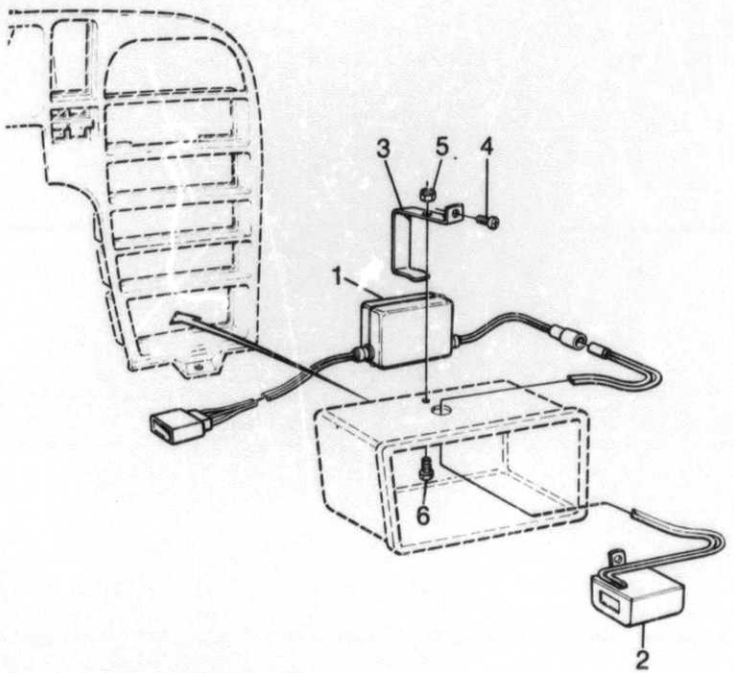

F1128 CAC90

1030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 19 026			1	Electronic unit	Elektronikenhet	5
0020	2	95 19 034			1	Chime	Pingla	5
0030	3	95 19 372			1	Bracket	Hållare	5
0040	4	79 22 263			1	Screw	Skruv	5
0050	5	73 98 423			1	Nut	Mutter	5
0060	6	92 59 524			1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-E24

Electrical system
ABS, TCS, ASR, ETS

Elektriskt system
ABS, TCS, ASR, ETS

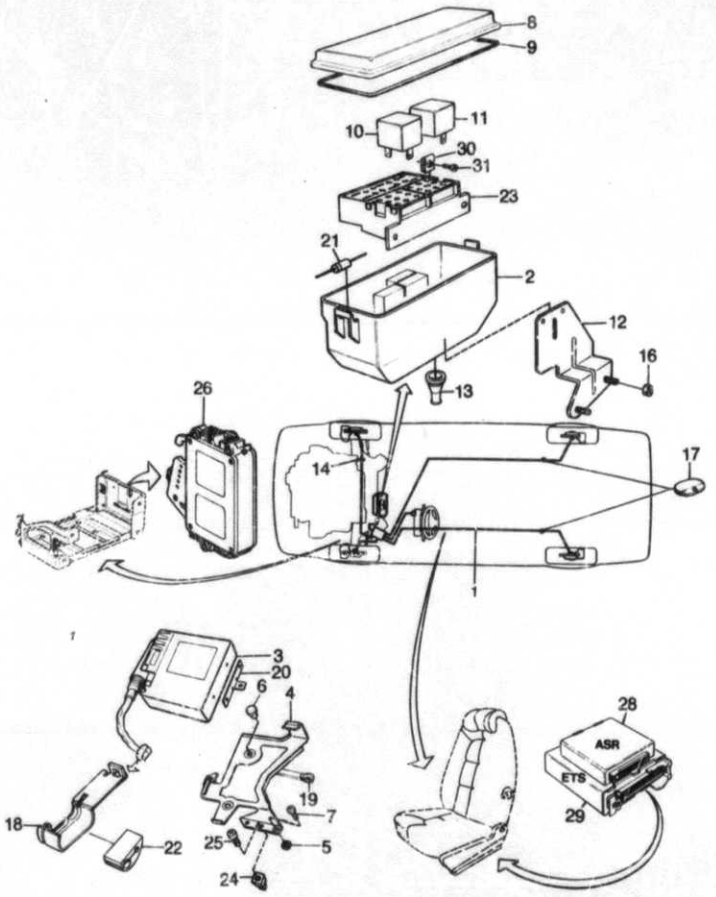

F4813 CAC90

1035	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 69 415		-1991, ABS	1	Cable harness	Ledningsnät	6
0020	1	41 75 444		1992, ABS	1	Cable harness	Ledningsnät	6
0030	1	43 52 357		1993, ABS	1	Cable harness	Ledningsnät	6
0040	1	40 66 908		-1991, TCS	1	Cable harness	Ledningsnät	6
0050	1	41 75 451		1992-, TCS	1	Cable harness	Ledningsnät	6
0060	1	41 75 469		1992, A, ASR	1	Cable harness	Ledningsnät	6
0070	1	43 52 365		1993, A, ASR	1	Cable harness	Ledningsnät	6
0080	2	41 11 118				. Box	. Box	4
0090	3	40 02 176		7), -1991, ABS	1	Electronic unit	Elektronikenhet	4
0100	4	40 04 438			1	Bracket	Konsol	5
0110	5	79 33 682			1	. Spring nut	. Fjädermutter	3
0120	6	92 68 186			2	. Plug	. Plugg	5
0130	7	79 46 734		LH 2.2 BOX	1	Screw	Skruv	5
0140	7	79 78 372		LH 2.4 BOX	2	Screw	Skruv	5
0150	8	95 19 919			1	Cover	Lock	4
0160	9	95 19 927			1	. Seal	. Tätning	5
0170	10	85 33 176			1	Relay main relay	Relä huvudrelä	3
0180								
0190	11	95 22 822			1	Relay pump	Relä pump	5
0200								
0210				See page 3A-197, 2-I06		Relay main relay, ETS	Relä huvudrelä, ETS	
0220								
0230	12	40 60 711		-1991	1	Bracket	Hållare	4
0240	12			1992		Bracket	Hållare	
0250				See page 2-079, 1-F08				
0260	12			1993		Bracket	Hållare	
0270				See page 5-015, 4-A16				
0280	13	95 19 745			1	Protection	Skydd	4
0290	14	73 99 033		-1992	2	Clamp	Klammer	
0300	14	92 28 149		1993	2	Clip	Clips	5
0310	16	79 71 658		-1991	2	Nut	Mutter	5
0320	17	92 79 878			2	Cover	Lock	4
0330	18	96 25 633		-1991	1	Bracket	Hållare	6
0340	19	40 01 830			2	Clamp	Klammer	5
0350	20	89 71 970			1	Bracket	Hållare	5
0360	21	44 24 172			2	Diode	Diod	5
0370	22	40 62 063		-1991	1	Seal	Tätning	5
0380	23	91 25 543			1	Contact housing	Kontakthus	4
0390	24	79 75 261			1	Nut	Mutter	5
0400	25	79 22 354		76)	1	Screw	Skruv	5
0410	25	79 22 438		77)	1	Screw	Skruv	5
0420	26	*41 90 492*		7), -1991, TCS M NLS - USE 4199626	1	Electronic unit	Elektronikenhet	4
0430	26	*41 95 293*		7), 1992, ABS TCS M NLS - USE 4199626	1	Electronic unit	Elektronikenhet	4
0440	26	41 99 626		7), 1993-, ABS TCS M	1	Electronic unit	Elektronikenhet	4
0450	26	41 07 363		7), 1992, ABS M	1	Electronic unit	Elektronikenhet	4
0460	26	41 98 602		7), 1993, ABS	1	Electronic unit	Elektronikenhet	4
0470	26	41 07 353		7), 1992, ABS A	1	Electronic unit	Elektronikenhet	4
0480	26	41 97 927		7), 1993, ABS ASR A	1	Electronic unit	Elektronikenhet	4
0490	27	75 82 176		1992-	2	Screw	Skruv	5
0500	28	41 59 190		7), ASR, A	1	Electronic unit	Elektronikenhet	5
0510	29	*40 22 653*		7), -1991, ETS M NLS - USE 4300539	1	Electronic unit	Elektronikenhet	4
0520	29	*41 59 182*		7), -1991, ETS, A NLS - USE 4300539	1	Electronic unit	Elektronikenhet	4
0530	29	*41 59 182*		7), 1992, ETS NLS - USE 4300539	1	Electronic unit	Elektronikenhet	4

7. Also available as exchange unit. Finns även som utbytesenhet.
76. Ch -L8000221.
77. Ch L8000222-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F02

Electrical system
ABS, TCS, ASR, ETS

Elektriskt system
ABS, TCS, ASR, ETS

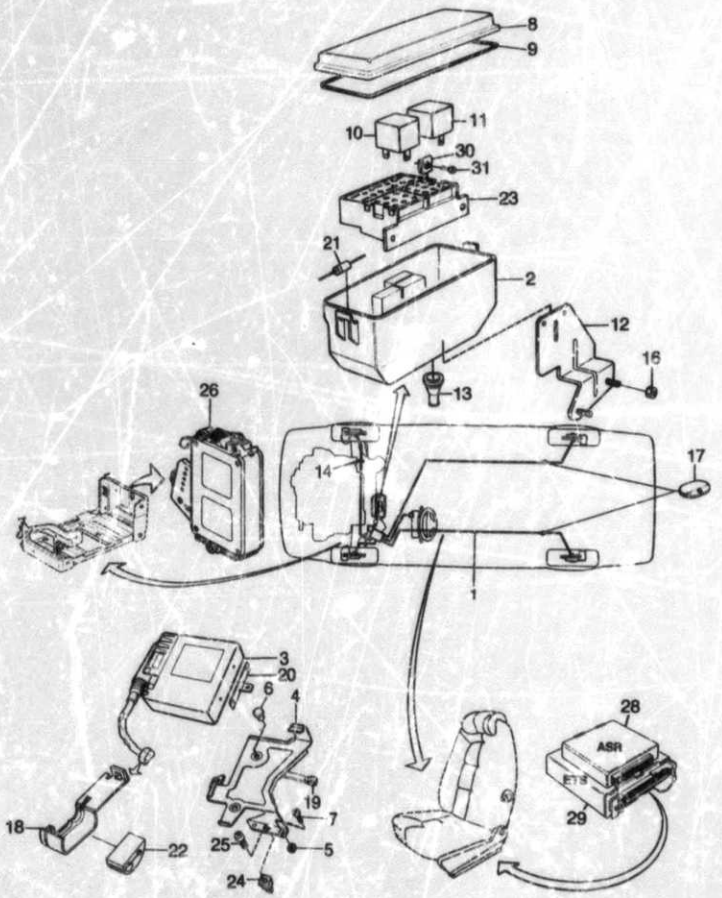

F4813 CAC90

1035	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	29	*43 00 075*		1993-7,219), ETS NLS - USE 4300539	1	Electronic unit	Elektronikenhet	4
0550	29	43 00 539		7,220) 1993, ETS	1	Electronic unit	Elektronikenhet	4
0580	30	79 68 001			2	Clip nut	Clipsmutter	5
0590	31	79 70 601			2	Screw	Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.
199. Ch --N1034646.
219. Ch --P1022752.
220. Ch P1022753--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact nousing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GPOUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F04

Main- and engine comp.
B202, 1990

Huvud- och motorrum
B202, 1990

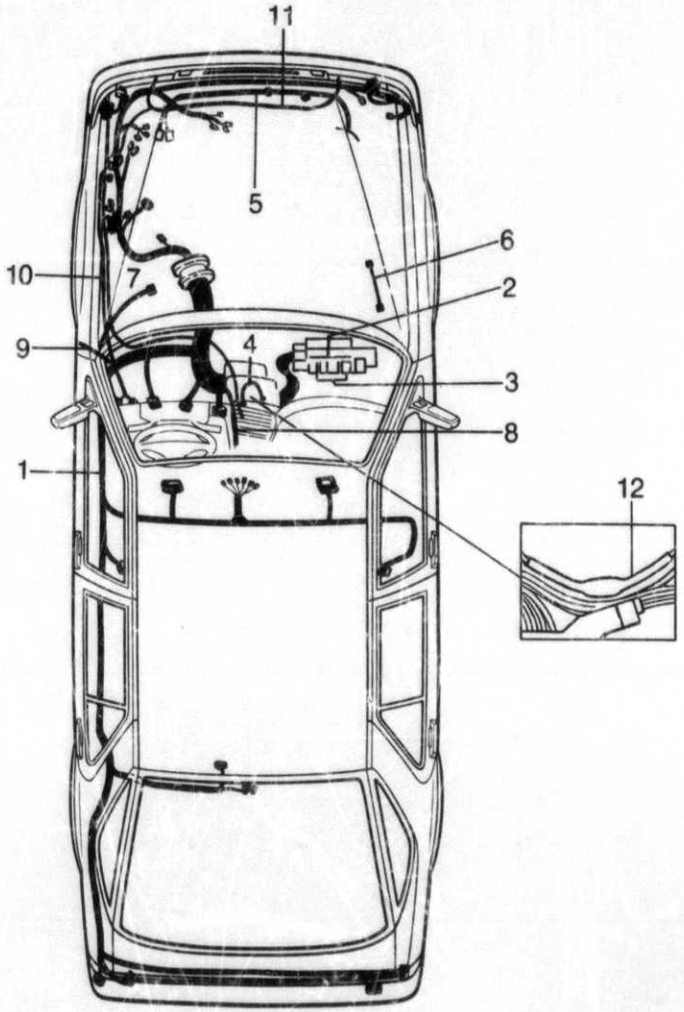

F6145 CAC90

1040	Pos	Part No/Art.nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	40 64 010		I, FI, EU, ME, FE	1	Cable harness	Ledningsnät	5
0020	1	40 64 051		26), I, FI, EU, ME, FE	1	Cable harness	Ledningsnät	5
0030								
0040	1	40 64 713		TURBO, FI, EU, ME, FE	1	Cable harness	Ledningsnät	5
0050	1	40 64 754		26), TURBO, FI, EU, ME, FE	1	Cable harness	Ledningsnät	5
0060								
0070								
0080	1	40 64 093		4), I, SE, FI, EU, JP	1	Cable harness	Ledningsnät	5
0110	1	40 64 135		4,26), I, SE, FI, EU, JP, FE	1	Cable harness	Ledningsnät	5
0120								
0130	1	40 64 796		4), TURBO, SE, FI, EU, JP, FE	1	Cable harness	Ledningsnät	5
0140								
0150	1	40 65 116		4,26), TURBO, SE, FI, EU, JP, FE	1	Cable harness	Ledningsnät	5
0160								
0170	1	40 64 812		4,14), TURBO, SE, EU	1	Cable harness	Ledningsnät	5
0180	1	40 65 132		4,14,26), TURBO, SE, EU	1	Cable harness	Ledningsnät	5
0190								
0200	1	40 64 259		I, RHD, GB, FE	1	Cable harness	Ledningsnät	5
0210	1	40 64 275		26), I, RHD, GB, FE	1	Cable harness	Ledningsnät	5
0220	1	40 64 879		TURBO, GB, FE	1	Cable harness	Ledningsnät	5
0230	1	40 64 895		26), TURBO, GB, FE	1	Cable harness	Ledningsnät	5
0240								
0250	1	40 64 317		4,26), I, RHD, SE, GB, AU, JP	1	Cable harness	Ledningsnät	5
0260								
0270	1	40 64 291		4), I, RHD, SE, GB, AU, JP	1	Cable harness	Ledningsnät	5
0280								
0290	1	40 64 952		4,26), TURBO, RHD, GB, AU, JP	1	Cable harness	Ledningsnät	5
0300								
0310	1	40 64 911		4), TURBO, RHD, GB, AU, JP	1	Cable harness	Ledningsnät	5
0320								
0330								
0340	1	40 64 374		I, US	1	Cable harness	Ledningsnät	5
0350	1	40 65 017		26), TURBO, US	1	Cable harness	Ledningsnät	5
0360								
0370	1	40 64 176		4), I, DI, SE, FI, EU, JP	1	Cable harness	Ledningsnät	5
0380	1	40 64 218		4,26), I, DI, SE, FI, EU, JP	1	Cable harness	Ledningsnät	5
0390								
0400								
0430	1	40 65 074		26), TURBO, CA	1	Cable harness	Ledningsnät	5
0460	2			See page 3A-189, 2-H22		•Relay retainer	•Relähållare	
0470	3			See page 3A-189, 2-H22		•Fuse holder	•Säkringshållare	
0480	4	95 24 786		See page 3A-107, 2-E12		Cable radio	Ledning radio	5
0490								
0500	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0510				See page 8C-033, 6-L10		thermo switch	termobrytare	
0520	6	95 65 144			1	Ground cable	Jordkabel	6
0530						radio interferance suppr	radioavstörning	
0540	7	95 17 400			1	Cable harness	Ledningsnät	6
0550						engine compartment lamp	motorrumslampa	
0560	8	40 67 005			1	Cable harness	Ledningsnät	5
0570						cigarette lighter	cigarettändare	
0580	9	40 66 981			2	Cable harness	Ledningsnät	5
0590						direction indicator	blinklykta	
0600								
0610	10	86 64 252		T16SA	1	Cable harness	Ledningsnät	6
0620						front fog light	dimstrålkastare	
0630	10	86 64 583		T16SA, RHD	1	Cable harness	Ledningsnät	6
0640						front fog light	dimstrålkastare	
0650								

4. With catalytic converter. Med katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F06

Main- and engine comp. B202, 1990

Huvud- och motorrum B202, 1990

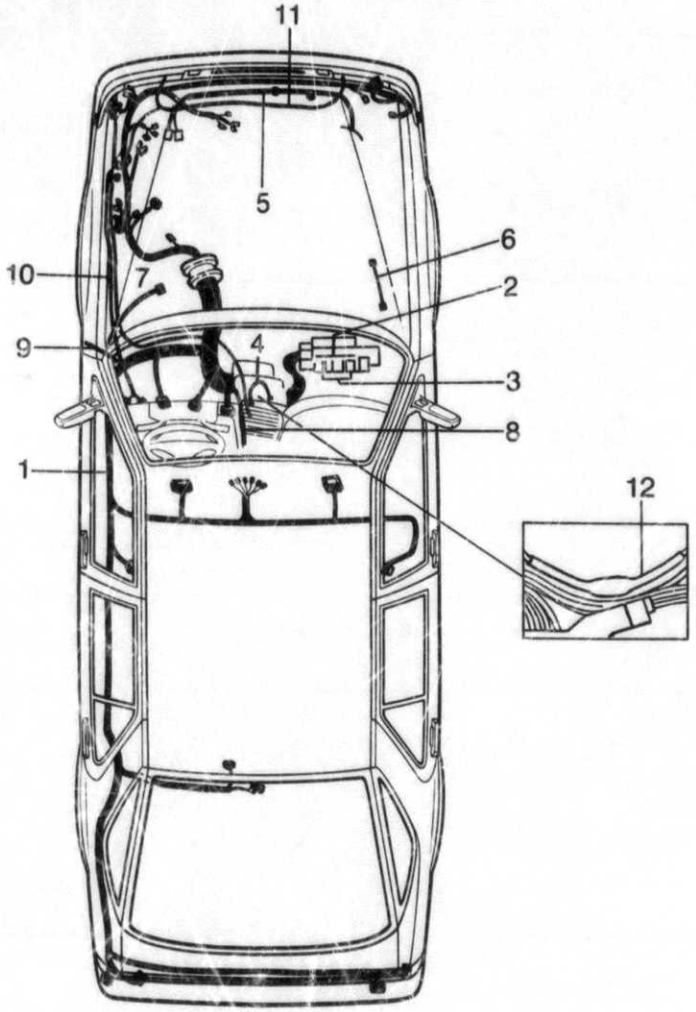

F6145 CAC90

1040 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660 11	86 64 245		T16SA	1	Cable harness front fog light	Ledningsnät dimstrålkastare	6
0670							
0680							
0690 12	85 48 034		26,95,96)	1	Resistor	Motstånd	6
0700							

26. For cars with ACC. För bilar med ACC.
95. Ch L1004800–, L2004500–, L8000781–.
96. Ch –L1008384, –L2006313, –L8000884.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F08

Main- and engine comp.
B234, 1990

Huvud- och motorrum
B234, 1990

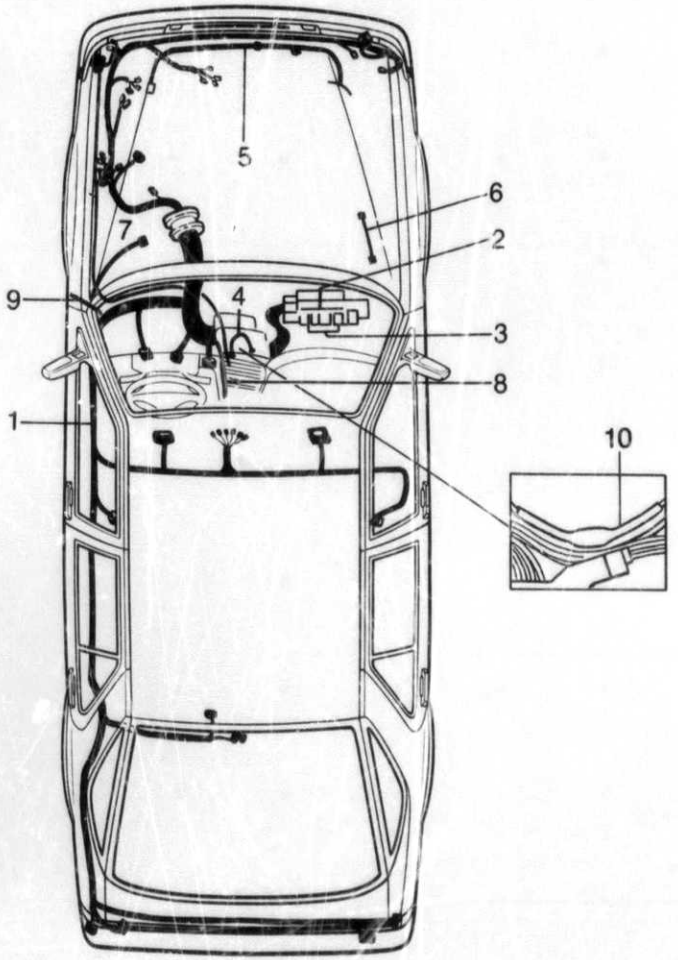

F6146 CAC90

1041 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	40 64 192		4,14), SE, EU	1	Cable harness	Ledningsnät	5
0020 1	40 64 234		4,14,26), SE, EU	1	Cable harness	Ledningsnät	5
0030							
0040 1	40 64 333		4), RHD, DI, SE, GB, AU, JP	1	Cable harness	Ledningsnät	5
0050							
0060 1	40 64 358		4,26,), RHD, DI, SE, GB, AU, JP	1	Cable harness	Ledningsnät	5
0070							
0080							
0090 1	40 64 416		US	1	Cable harness	Ledningsnät	5
0100							
0110 1	40 64 531		CA	1	Cable harness	Ledningsnät	5
0120 1	*40 64 572*		26), CA NLS	1	Cable harness	Ledningsnät	5
0130 2			See page 3A-189, 2-H22		. Relay retainer	. Relähållare	
0140 3			See page 3A-189, 2-H22		. Fuse holder	. Säkringshållare	
0150 4	95 24 786		See page 3A-107, 2-E12		Cable radio	Ledning radio	5
0160							
0170 5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0180			See page 8C-033, 6-L10		thermo switch	termobrytare	
0190 6	95 65 144			1	Ground cable	Jordkabel	6
0200					radio interferance suppr	radioavstörning	
0210 7	95 17 400			1	Cable harness	Ledningsnät	6
0220					engine compartment lamp	motorrumslampa	
0230 8	40 67 005			1	Cable harness	Ledningsnät	5
0240					cigarette lighter	cigarettändare	
0250 9	40 66 981			2	Cable harness	Ledningsnät	5
0260					direction indicator	blinklykta	
0270							
0280 10	85 48 034		26,95,96)	1	Resistor	Motstånd	6
0290							
0300 11	44 33 132		LH	1	Cable harness	Ledningsnät	5
0310					air-bag	airbag	
0320 11	44 33 124		RH	1	Cable harness	Ledningsnät	5
0330					air-bag	airbag	

4. With catalytic converter. Med katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
95. Ch L1004800–, L2004500–, L8000781–.
96. Ch –L1008384, –L2006313, –L8000884.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F10


Engine 1990

Drivaggregat 1990

B202

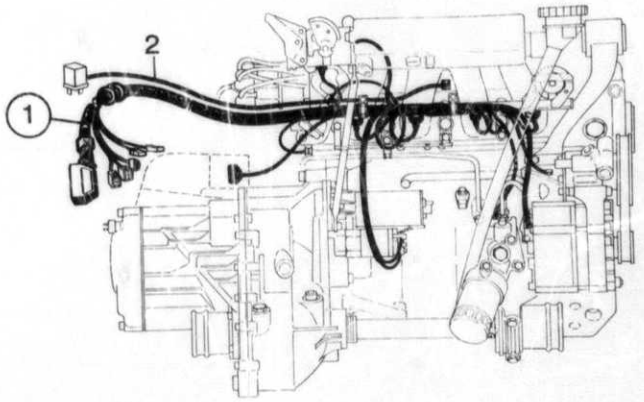

B234

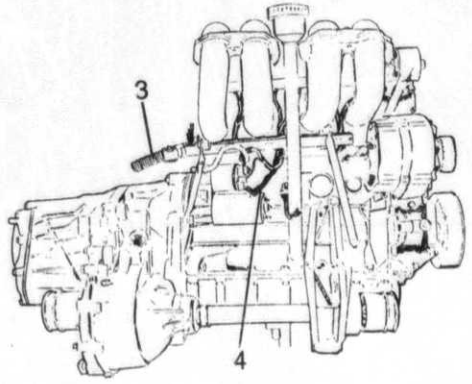

F1131 CAC90

1042	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	40 66 809		5), B202	1	Cable harness	Ledningsnät	3
0045	1	40 66 817		4), B202	1	Cable harness	Ledningsnät	3
0070								
0100	2	74 78 142		5,28), B202, LH2.2	1	Cable harness	Ledningsnät	6
0110				See page 2-175, 1-J08				
0130								
0140	3	40 66 825		B234	1	Cable harness	Ledningsnät	3
0160								
0170	4	88 56 874		B234	1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6
0180								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F12

Doors
1990

Dörrar
1990

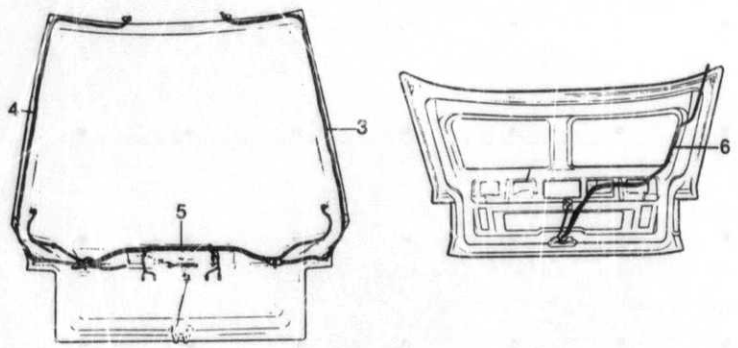

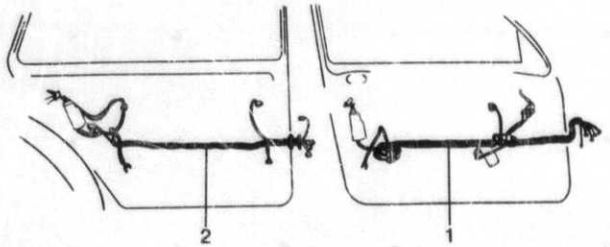

F3320 CAC90

1044	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 104		29)	1	Cable harness front door	Ledningsnät framdörr	6
0015								
0020	1	95 26 872		30)	1	Cable harness front door	Ledningsnät framdörr	5
0025								
0040	1	40 67 146		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0045								
0060	1	41 08 833		30), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0065								
0067								
0080	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0085								
0090								
0100	3	40 67 179		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0105								
0110	3	40 67 195		19), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0115								
0120								
0130	4	40 67 187		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0135								
0140								
0150	5	40 67 203			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0155								
0160	5	40 67 211		19)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0170								
0180								
0220	6	43 53 728		188), 4D, (4110524)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0230								
0240								
0250		85 48 554		4D	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6
0260				See page 3A-219, 2-J04				

19. High mounted stop light. Högt monterat stoppljus.
29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.
188. Use together with screw 84 10 961. Används tillsammans med skruv 84 10 961.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F14

Compartment
1990

Kupe
1990

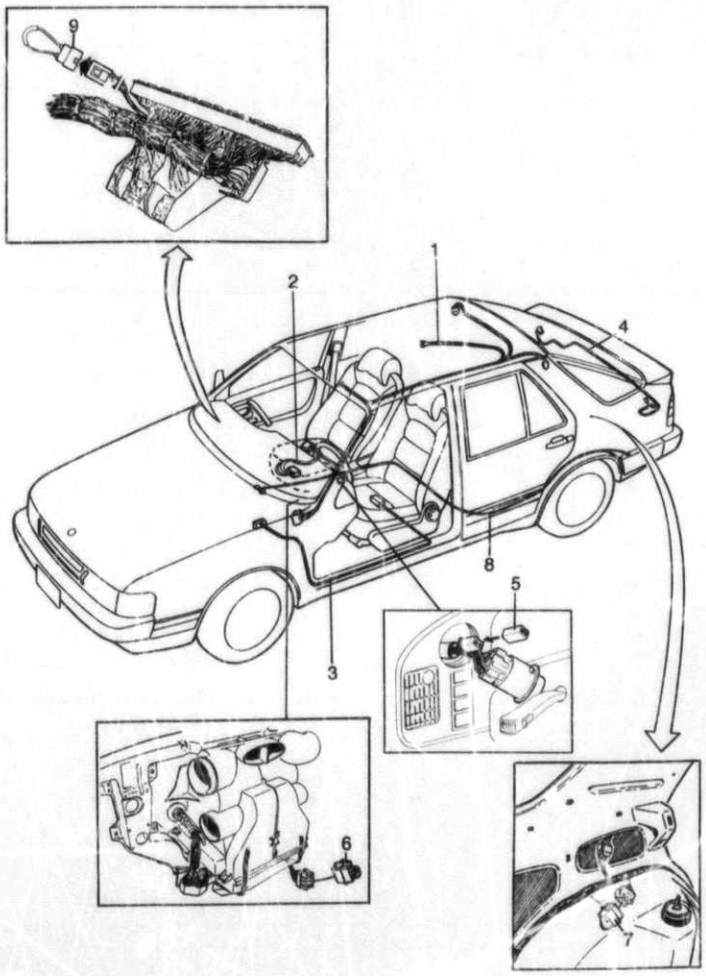

F6147 CAC90

1046	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 013			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0015								
0020								
0030	2	95 67 561		30)	1	Cable harness front seat	Ledningsnät framstol	5
0040								
0050								
0070	3	40 69 951		APC, DI	1	Cable harness	Ledningsnät	5
0080	3	40 66 890		APC, DI, RHD	1	Cable harness	Ledningsnät	5
0085	3	40 66 874		B234, DI	1	Cable harness	Ledningsnät	5
0090	3	40 66 866		I, EZK	1	Cable harness	Ledningsnät	5
0095								
0100	4	95 28 134		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0106								
0107								
0110	5	95 69 740		GB, IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0120								
0130	6	40 66 916		31), M	1	Cable harness	Ledningsnät	5
0140	6	40 66 924		31), A	1	Cable harness	Ledningsnät	5
0150								
0160	7	40 66 957		SE, FI, EU	1	Cable harness fog light	Ledningsnät dimljus	5
0165								
0170	7	40 66 965		GB	1	Cable harness fog light	Ledningsnät dimljus	5
0175								
0180	7	40 66 973		US, CA, JP, ME, FE, AU,	1	Cable harness fog light	Ledningsnät dimljus	5
0190								
0195								
0197	8	95 24 778		17), 5D	1	Cable bass	Ledning bas	5
0198								
0200	8	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0205								
0210								
0220	9	95 69 740		M	1	Cable harness	Ledningsnät	5
0230								
0240	10	44 33 140		RH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0250								

17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2--F16

Main- and engine comp.
B202, 1991

Huvud- och motorrum
B202, 1991

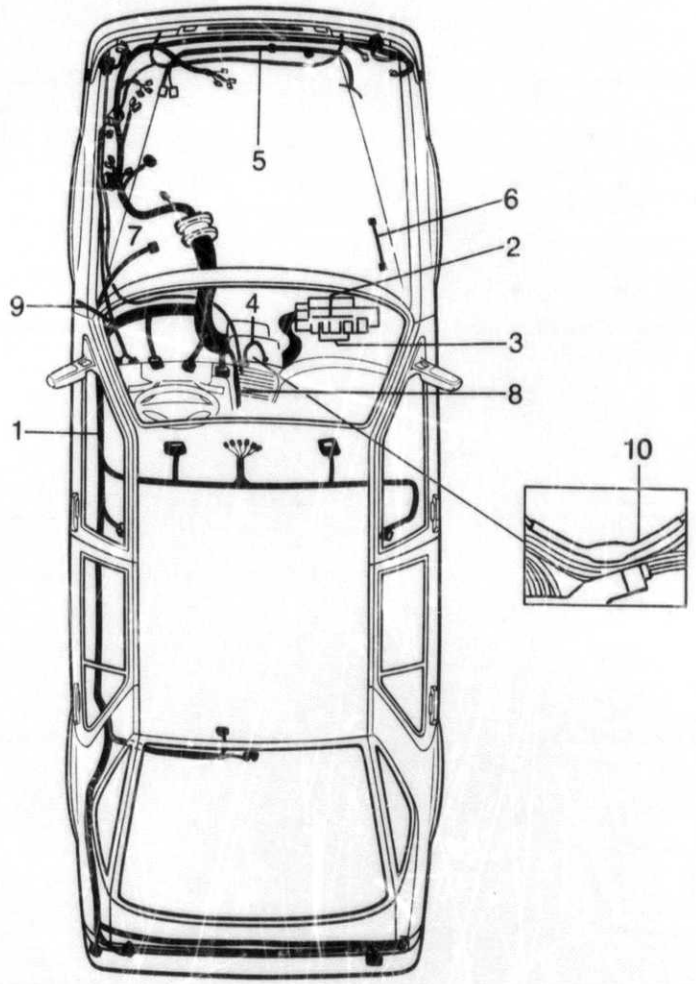

F6148 CAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 11 530		4), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0020	1	41 11 548		4,14), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0030	1	41 11 555		4,26), I, SE, EU	1	Cable harness	Ledningsnät	5
0040	1	41 11 563		4,14,26), I, SE, EU	1	Cable harness	Ledningsnät	5
0050								
0060	1	41 11 597		4), I, RHD, SE, GB, TW	1	Cable harness	Ledningsnät	5
0070	1	41 11 605		4,26), I, RHD, SE, GB,TW	1	Cable harness	Ledningsnät	5
0080								
0090	1	41 11 688		5), I, EU, ME	1	Cable harness	Ledningsnät	5
0100	1	41 11 696		5,14), I, EU	1	Cable harness	Ledningsnät	5
0110	1	41 11 704		5,26), I, EU	1	Cable harness	Ledningsnät	5
0120	1	41 11 712		5,14,26), I, EU	1	Cable harness	Ledningsnät	5
0130								
0135	1	41 11 746		5), I, RHD, FE	1	Cable harness	Ledningsnät	5
0137	1	41 11 753		5,26), I, RHD, FE	1	Cable harness	Ledningsnät	5
0138								
0140	1	41 12 009		4), TURBO, EU	1	Cable harness	Ledningsnät	5
0150	1	41 12 025		4,14), TURBO, EU	1	Cable harness	Ledningsnät	5
0160	1	41 12 041		4,26), TURBO, EU	1	Cable harness	Ledningsnät	5
0170	1	41 12 066		4,14,26), TURBO, EU	1	Cable harness	Ledningsnät	5
0180								
0190	1	41 12 017		TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0200	1	41 12 033		14), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0210	1	41 12 058		26), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0220	1	41 12 074		14,26), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0230								
0240	1	41 12 132		TURBO, RHD, TCS, GB	1	Cable harness	Ledningsnät	5
0250	1	41 12 157		26), TURBO, RHD, TCS, GB	1	Cable harness	Ledningsnät	5
0260	1	41 12 124		4), TURBO, RHD, GB	1	Cable harness	Ledningsnät	5
0265	1	41 12 140		4,26), TURBO, RHD, GB	1	Cable harness	Ledningsnät	5
0270								
0280	1	41 12 298		5), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0290	1	41 12 314		5,14), TURBO, EU	1	Cable harness	Ledningsnät	5
0300	1	41 12 330		5,26), TURBO, EU	1	Cable harness	Ledningsnät	5
0310	1	41 12 355		5,14,26), TURBO, EU	1	Cable harness	Ledningsnät	5
0320								
0330	2			See page 3A-189, 2-H22		•Relay retainer	•Relähållare	
0340	3			See page 3A-189, 2-H22		•Fuse holder	•Säkringshållare	
0350	4	95 24 786		See page 3A-107, 2-E12		Cable radio	Ledning radio	5
0360								
0370	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0380				See page 8C-033, 6-L10				
0390	6	95 65 144			1	Ground cable radio interference suppr	Jordkabel radioavstörning	6
0400								
0410	7	95 17 400			1	Cable harness engine compartment lamp	Ledningsnät motorrumslampa	6
0420								
0430	8	40 67 005			1	Cable harness cigarette lighter	Ledningsnät cigarettändare	5
0440								
0450	9	40 66 981			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0460								
0470								
0560	10	85 48 034		26,95,96)	1	Resistor	Motstånd	6
0570								
0580	11	44 33 132		LH	1	Cable harness air-bag	Ledningsnät airbag	5
0590								
0600	11	44 33 124		RH	1	Cable harness air-bag	Ledningsnät airbag	5
0610								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
95. Ch L1004800–, L2004500–, L8000781–.
96. Ch –L1008384, –L2006313, –L8000884.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical registar	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F18

Main- and engine comp. B234, 1991

Huvud- och motorrum B234, 1991

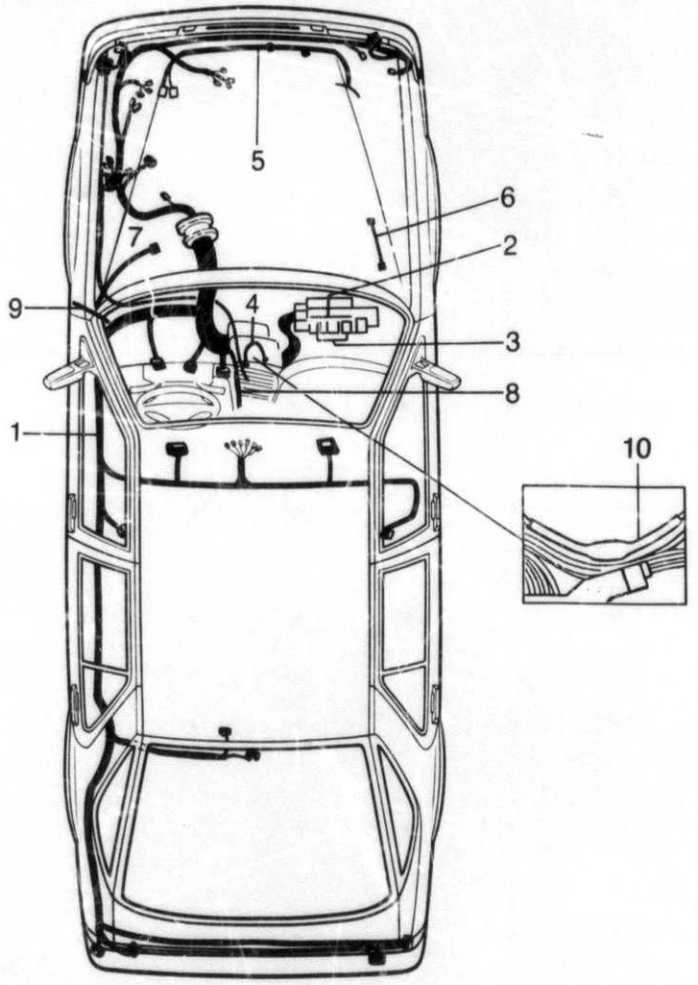

F6149 CAC90

1052	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 11 779		I, SE, Fi, EU, ME, FE, JP	1	Cable harness	Ledningsnät	5
0020								
0030	1	41 11 787		14), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0040	1	41 11 795		26), I, SE, FI, ME, FE, JP	1	Cable harness	Ledningsnät	5
0050								
0060	1	41 11 803		14,26), I, SE, FI, EU	1	Cable harness	Ledningsnät	5
0070								
0080	1	41 11 837		I, RHD, GB, FE, AU, JP	1	Cable harness	Ledningsnät	5
0090	1	41 11 845		26), I, RHD, GB, FE, AU, JP	1	Cable harness	Ledningsnät	5
0100								
0110								
0120	1	41 11 928		I, US	1	Cable harness	Ledningsnät	5
0130								
0140	1	41 11 860		I, CA	1	Cable harness	Ledningsnät	5
0150								
0160	1	41 12 298		TURBO, SE, FI, EU, FE, JP	1	Cable harness	Ledningsnät	5
0170								
0180	1	41 12 314		14), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0190	1	41 12 330		26), TURBO, SE, FI, EU, FE	1	Cable harness	Ledningsnät	5
0200								
0210	1	41 12 355		14,26), TURBO, SE, FI, EU	1	Cable harness	Ledningsnät	5
0220								
0230								
0240	1	41 12 306		TURBO, TCS, SE, FI, EU, FE	1	Cable harness	Ledningsnät	5
0250								
0260	1	41 12 322		14), TURBO, TCS, SE, FI, EU	1	Cable harness	Ledningsnät	5
0270								
0280	1	41 12 348		26), TURBO, TCS, SE, FI, EU, FE	1	Cable harness	Ledningsnät	5
0290								
0300	1	41 12 363		14,26), TURBO, TCS, SE, FI, EU	1	Cable harness	Ledningsnät	5
0310								
0320								
0330	1	41 12 413		TURBO, RHD, GB, AU, JP	1	Cable harness	Ledningsnät	5
0340	1	41 12 439		26), TURBO, RHD, GB, AU, JP	1	Cable harness	Ledningsnät	5
0350								
0360								
0370	1	41 12 421		TURBO, RHD, TCS, GB, AU	1	Cable harness	Ledningsnät	5
0380	1	41 12 447		26), TURBO, RHD, TCS, GB, AU	1	Cable harness	Ledningsnät	5
0390								
0400								
0405	1	43 50 336		14,26), TURBO, BR	1	Cable harness	Ledningsnät	5
0406								
0410	1	41 12 488		TURBO, US	1	Cable harness	Ledningsnät	5
0420								
0430	1	41 12 561		26), TURBO, CA	1	Cable harness	Ledningsnät	5
0450								
0460	2			See page 3A-189, 2-H22		. Relay retainer	. Relähållare	
0470	3			See page 3A-189, 2-H22		. Fuse holder	. Säkringshållare	
0480	4	95 24 786		See page 3A-107, 2-E12		Cable radio	Ledning radio	5
0490								
0500	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0510				See page 8C-033, 6-L10		thermo switch	termobrytare	
0520	6	95 65 144			1	Ground cable	Jordkabel	6
0530						radio interferance suppr	radioavstörning	
0540	7	95 17 400			1	Cable harness	Ledningsnät	6
0550						engine compartment lamp	motorrumslampa	
0560	8	40 67 005			1	Cable harness	Ledningsnät	5
0570						cigarette lighter	cigarettändare	
0580	9	40 66 981			2	Cable harness	Ledningsnät	5
0590						direction indicator	blinklykta	

14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F20

Main- and engine comp. B234, 1991

Huvud- och motorrum B234, 1991

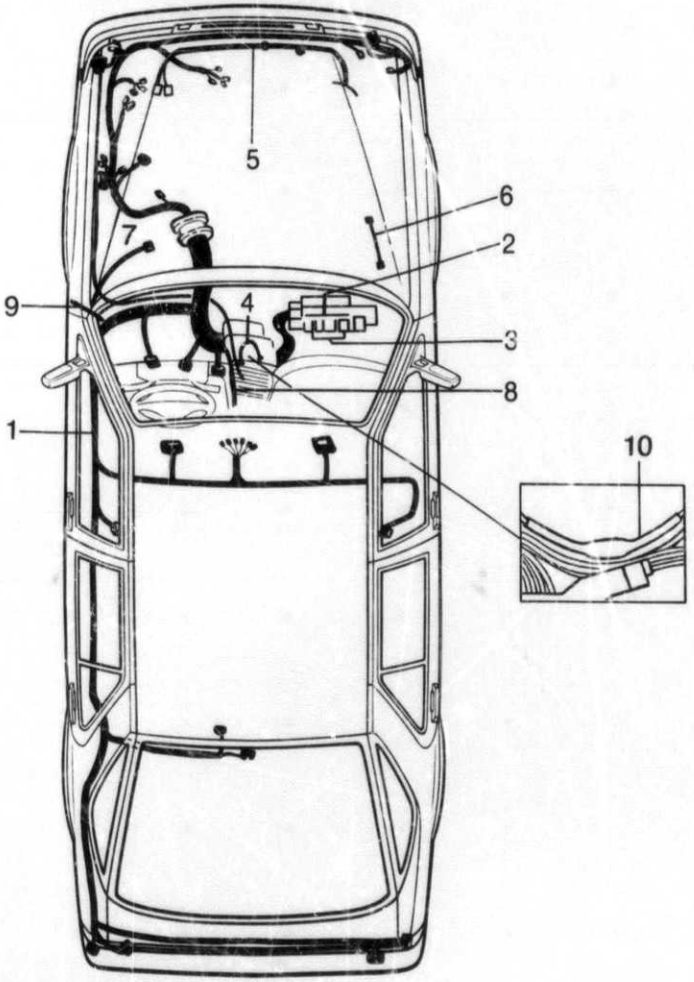

F6149 CAC90

1052	Pos	Part No/Art nr	K S	Notes/Anmärkning/r	Qty/ Antal	Description	Benämning	S L
0600	10	85 48 034		26,95,96)	1	Resistor	Motstånd	6
0610								
0620	11	44 33 132		LH	1	Cable harness air-bag	Ledningsnät airbag	5
0630								
0640	11	44 33 124		RH	1	Cable harness air-bag	Ledningsnät airbag	5
0650								

26. For cars with ACC. För bilar med ACC.
95. Ch L1004800--, L2004500--, L8000781--.
96. Ch --L1008384, --L2006313, --L8000884.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F22

B202

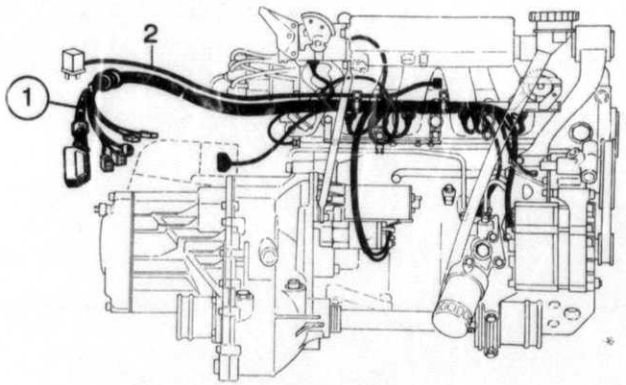

B234

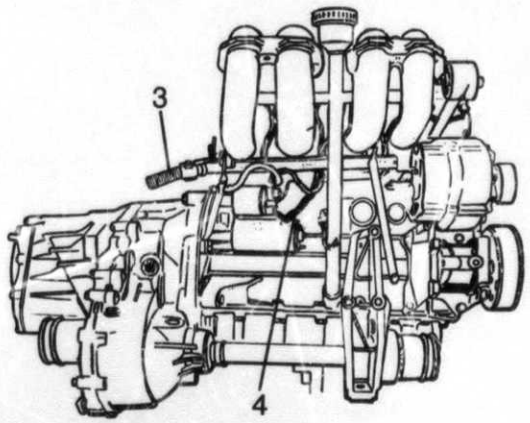

F2918 CAC90

1054	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 12 967		5), B202	1	Cable harness	Ledningsnät	3
0020	1	41 12 975		4), B202	1	Cable harness	Ledningsnät	3
0030	1	41 12 983		4), B202, TCS	1	Cable harness	Ledningsnät	3
0040								
0050	2	74 78 142		5,28), B202, LH2.2	1	Cable harness	Ledningsnät	6
0060				See page 2-175, 1-J08				
0070								
0080	3	41 12 868		4), B234 TURBO	1	Cable harness	Ledningsnät	3
0090	3	41 12 884		4), B234 TURBO, TCS	1	Cable harness	Ledningsnät	3
0110								
0120	3	41 12 843		4), B234 I	1	Cable harness	Ledningsnät	3
0140								
0150	4	88 56 874		B234	1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6
0160								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-902


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-F24

Doors 1991

Dörrar 1991

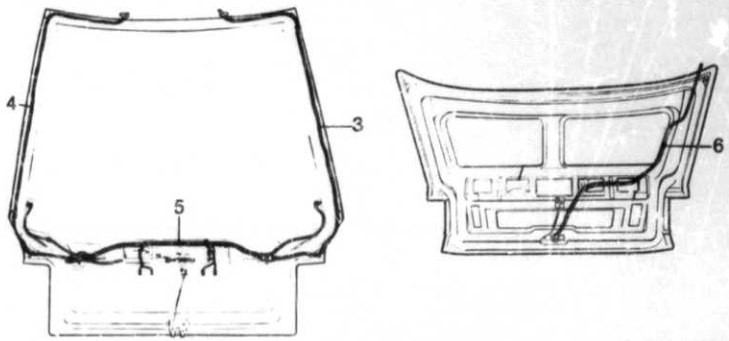

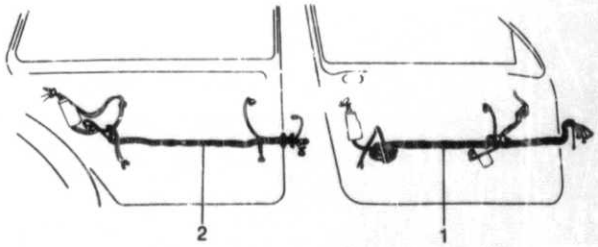

F3321 CAC90

1056	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	40 67 104		29)	1	Cable harness front door	Ledningsnät framdörr	6
0030	1	95 26 872		30)	1	Cable harness front door	Ledningsnät framdörr	5
0050	1	40 67 146		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0070	1	41 08 833		30), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0100	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0130	3	40 67 179		171), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0145	3	41 78 455		172), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150	3	40 67 195		19,171), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0165	3	41 78 471		19,172), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0180	4	40 67 187		171), RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0195	4	41 78 463		172), RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0210	5	40 67 203			1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0230	5	40 67 211		19)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0290	6	43 53 728		171,188), 4D, (4110524)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0310	6	43 53 736		172,188), 4D, (4178489)	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0340		85 48 554		4D See page 3A-219, 2-J04	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6

19. High mounted stop light. Högt monterat stoppljus.
29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.
171. Ch --M1019599, --M2012513.
172. Ch M1019600--.
188. Use together with screw 84 10 961. Används tillsammans med skruv 84 10 961.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G02 Compartment 1991

Kupe 1991

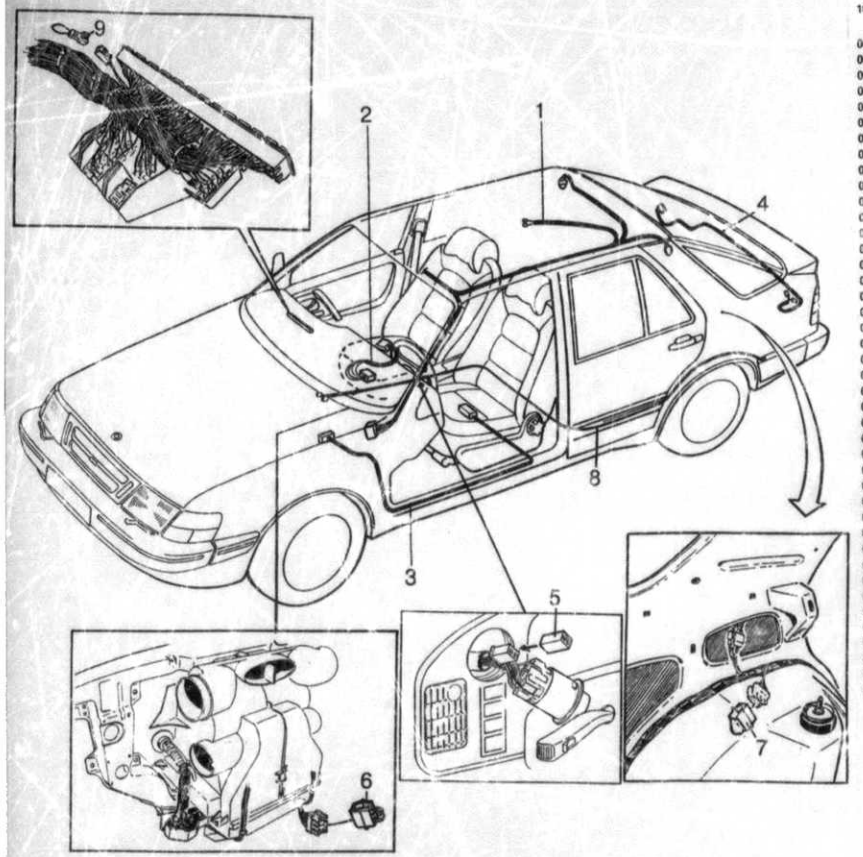

F6150 CAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 013			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0020								
0030								
0040	2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
0050								
0060								
0070	3	41 12 900		4), B202, TURBO, APC, DI	1	Cable harness	Ledningsnät	5
0080	3	41 12 926		5), B202, TURBO, APC, DI	1	Cable harness	Ledningsnät	5
0090	3	40 66 868		B202, I, EZK	1	Cable harness	Ledningsnät	5
0100								
0110	3	41 12 926		4), B234, TURBO, DI	1	Cable harness	Ledningsnät	5
0120	3	41 12 959		B234, I, DI	1	Cable harness	Ledningsnät	5
0130								
0140	4	95 28 134		19,171), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0150								
0155	4	41 70 505		19,172), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0156								
0160								
0170	5	95 69 740		GB, IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0180								
0190	6	40 66 916		31), M	1	Cable harness	Ledningsnät	5
0200	6	40 66 924		31), A	1	Cable harness	Ledningsnät	5
0210								
0220	7	40 66 957		SE, FI, EU	1	Cable harness fog light	Ledningsnät dimljus	5
0230								
0240	7	40 66 965		GB	1	Cable harness fog light	Ledningsnät dimljus	5
0250								
0260	7	40 66 973		US, CA, JP, ME, FE, AU,	1	Cable harness fog light	Ledningsnät dimljus	5
0270								
0280								
0285	8	95 24 770		17), 5D	1	Cable bass	Ledning bas	5
0286								
0290	8	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0300								
0310								
0320	9	95 69 740		4), B202, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0330	9	95 69 740		4), B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0335								
0340	9	95 69 740		5), B202, M, FI, EU	1	Cable harness	Ledningsnät	5
0350								
0360	10	44 33 140		LH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0370								


4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytick reaktor.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.
171. Ch --M1019599, --M2012513.
172. Ch M1019600--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

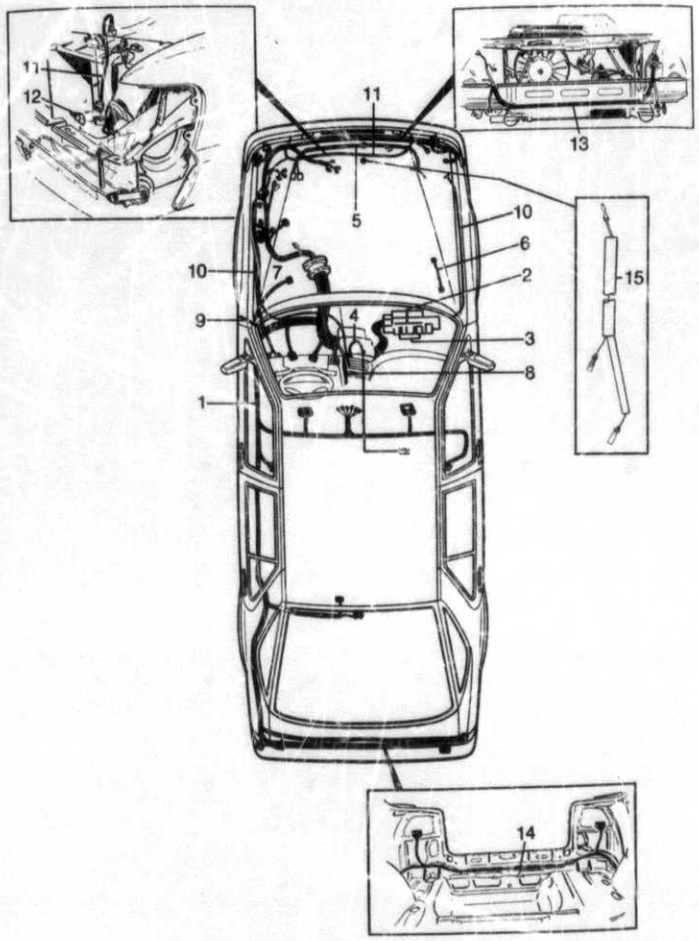

F6151 CAC90

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 77 028		4), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0020	1	41 76 905		4,163), I, SE, EU	1	Cable harness	Ledningsnät	5
0030	1	41 77 010		4,14), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0040	1	41 77 044		4,26), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0050	1	41 77 036		4,14,26), I, SE, EU	1	Cable harness	Ledningsnät	5
0060								
0070	1	41 77 978		4), I, RHD	1	Cable harness	Ledningsnät	5
0090	1	41 77 986		4,26), I, RHD	1	Cable harness	Ledningsnät	5
0100								
0110	1	41 77 085		5), I, EU, ME	1	Cable harness	Ledningsnät	5
0120	1	41 76 962		5,163), I, EU, ME	1	Cable harness	Ledningsnät	5
0130	1	41 77 077		5,14), I, EU, ME	1	Cable harness	Ledningsnät	5
0140	1	41 77 101		5,26), I, EU, ME	1	Cable harness	Ledningsnät	5
0150	1	41 77 093		5,14,26), I, EU, ME	1	Cable harness	Ledningsnät	5
0160								
0165	1	43 54 049		5), I, PA	1	Cable harness	Ledningsnät	5
0166	1	43 54 056		5,26), I, PA	1	Cable harness	Ledningsnät	5
0167								
0170	1	41 77 390		4,26), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0190	1	41 77 374		4,14,26), TURBO,SE,EU,PA	1	Cable harness	Ledningsnät	5
0195	1	41 77 457		4,167), TURBO, EU, PA	1	Cable harness	Ledningsnät	5
0200	1	41 77 424		4,14,167), TURBO, EU, PA	1	Cable harness	Ledningsnät	5
0210								
0220	1	41 77 408		26), TURBO, TCS,SE,EU,PA	1	Cable harness	Ledningsnät	5
0230	1	41 77 485		167), TURBO, TCS, EU, PA	1	Cable harness	Ledningsnät	5
0240	1	41 77 432		14,167), TURBO,TCS,EU,PA	1	Cable harness	Ledningsnät	5
0250								
0260	1	41 77 366		TURBO, A, ASR, SE, EU,PA	1	Cable harness	Ledningsnät	5
0270								
0280	1	41 78 067		4), TURBO, RHD	1	Cable harness	Ledningsnät	5
0290	1	41 78 125		4,167), TURBO, RHD	1	Cable harness	Ledningsnät	5
0310								
0320	1	41 78 075		4), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0330	1	41 78 109		4,26), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0340	1	41 78 133		4,167), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0350								
0360	1	41 78 091		4), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0370								
0380	1	41 77 705		5), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0390	1	41 77 671		5,14), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0400	1	41 77 762		5,26), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0410	1	41 77 739		5,14,26), TURBO, EU	1	Cable harness	Ledningsnät	5
0420	1	41 77 820		5,167), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0430	1	41 77 796		5,14,167), TURBO, EU	1	Cable harness	Ledningsnät	5
0440								
0450	1	41 77 713		5), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0460	1	41 77 689		5,14), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0470	1	41 77 770		5,26), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0480	1	41 77 747		5,14,26), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0490	1	41 77 838		5,167), TURBO, TCS, EU	1	Cable harness	Ledningsnät	5
0500	1	41 77 804		5,14,167), TURBO, TCS,EU	1	Cable harness	Ledningsnät	5
0510								
0520	1	41 77 721		5), TURBO, A, ASR, EU	1	Cable harness	Ledningsnät	5
0530	1	41 77 697		5,14), TURBO, A, ASR, EU	1	Cable harness	Ledningsnät	5
0540	1	41 77 788		5,26), TURBO, A, ASR, EU	1	Cable harness	Ledningsnät	5
0550	1	41 77 754		5,14,26),TURBO, A,ASR,EU	1	Cable harness	Ledningsnät	5
0560	1	41 77 846		5,167), TURBO, A, ASR,EU	1	Cable harness	Ledningsnät	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
163. Without EDU. Utan EDU.
167. For cars with RAC. För bilar med RAC.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G06 Main- and engine comp. B202, 1992

Huvud- och motorrum B202, 1992

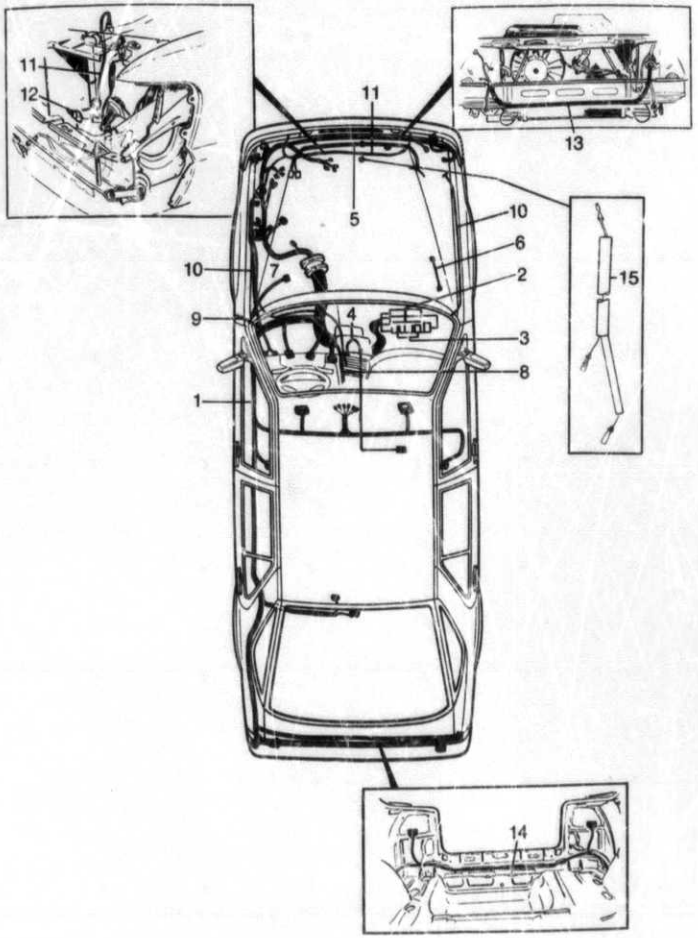

F6151 CAC90

1060	Fus	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	1	41 77 812		5,14,167),TURBO,A,ASR,EU	1	Cable harness	Ledningsnät	5
0580								
0590	1	41 78 158		5), TURBO, RHD	1	Cable harness	Ledningsnät	5
0600	1	41 78 182		5,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0610	1	41 78 216		5,167), TURBO, RHD	1	Cable harness	Ledningsnät	5
0620								
0630	1	41 78 166		5), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0640	1	41 78 190		5,26), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0650	1	41 78 224		5,167), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0660								
0670	1	41 78 174		5), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0680	1	41 78 208		5,26), TURBO, A, ASR,RHD	1	Cable harness	Ledningsnät	5
0690	1	41 78 232		5,167),TURBO, A, ASR,RHD	1	Cable harness	Ledningsnät	5
0700								
0710	2			See page 3A-189, 2-H22		• Relay retainer	• Relähållare	
0720	3			See page 3A-189, 2-H22		• Fuse holder	• Säkringshållare	
0730	4			See page 3A-107, 2-E12		Cable harness radio	Ledningsnät radio	
0740								
0750	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0760				See page 8C-033, 6-L10		thermo switch	termobrytare	
0770	6	95 65 144			1	Ground cable radio interferance suppr	Jordkabel radioavstörning	6
0780								
0790	7	95 17 400			1	Cable harness engine compartment lamp	Ledningsnät motorrumslampa	6
0800								
0810	8	40 67 005			1	Cable harness cigarette lighter	Ledningsnät cigarettändare	5
0820								
0830	9	40 66 981			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0840								
0850	10	43 50 161		14)	1	Cable harness	Ledningsnät	6
0855								
0860	11	41 79 958		167), 4D	1	Cable harness	Ledningsnät	6
0870				26), 5CS, TURBO, A, ME, AU, PA				
0880								
0890								
0900	12	85 98 526		5D	1	Cable harness	Ledningsnät	4
0910				173), 5CS				
0920				5CS, SE, EU, GB				
0930				5CS, I, ME, AU, PA				
0940				5CS, TURBO, M, ME, AU,PA				
0950				5CS, TURBO, A, ME, AU,PA				
0960								
0970	13	41 78 539		2), SE, EU, ME, GB, AU, PA, BR	1	Cable harness	Ledningsnät	5
0975								
0980	13	41 78 513		2), 5CS, SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0985								
1010								
1020	14	41 79 719		3,157), SE, EU, ME, GB, PA, AU, BR	1	Cable harness	Ledningsnät	5
1030								
1040	14	41 78 638		3), SE, EU, ME, PA, BR	1	Cable harness	Ledningsnät	5
1050	14	41 78 646		3), RHD, PA, GB, AU	1	Cable harness	Ledningsnät	5
1055								
1060	14	41 78 612		3), 5CS, SE, EU,ME,GB,AU	1	Cable harness	Ledningsnät	5
1070								
1080	15	45 82 441			1	Cable harness fan control	Ledningsnät fläktstyrning	6
1090								

2. Front. Främre.
3. Rear. Bakre.
5. Without catalytic converter. Utan katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
157. Without rear fog light. Utan dimbaklykta.
167. For cars with RAC. För bilar med RAC.
173. For cars witouth RAC. För bilar utan RAC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G08

Main- and engine comp.
B202, 1992

Huvud- och motorrum
B202, 1992

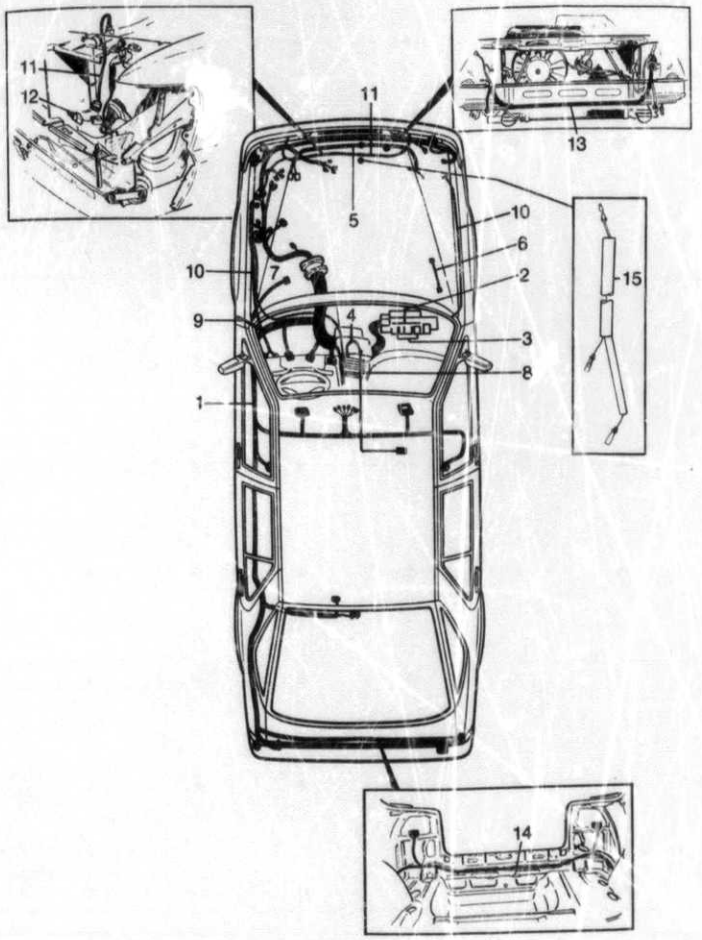

F6151 CAC90


1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1100								
1110	16	44 33 165		LH	1	Cable harness air-bag	Ledningsnät airbag	5
1120								
1130	16	44 33 157		RH	1	Cable harness air-bag	Ledningsnät airbag	5
1140								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-J02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	8-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

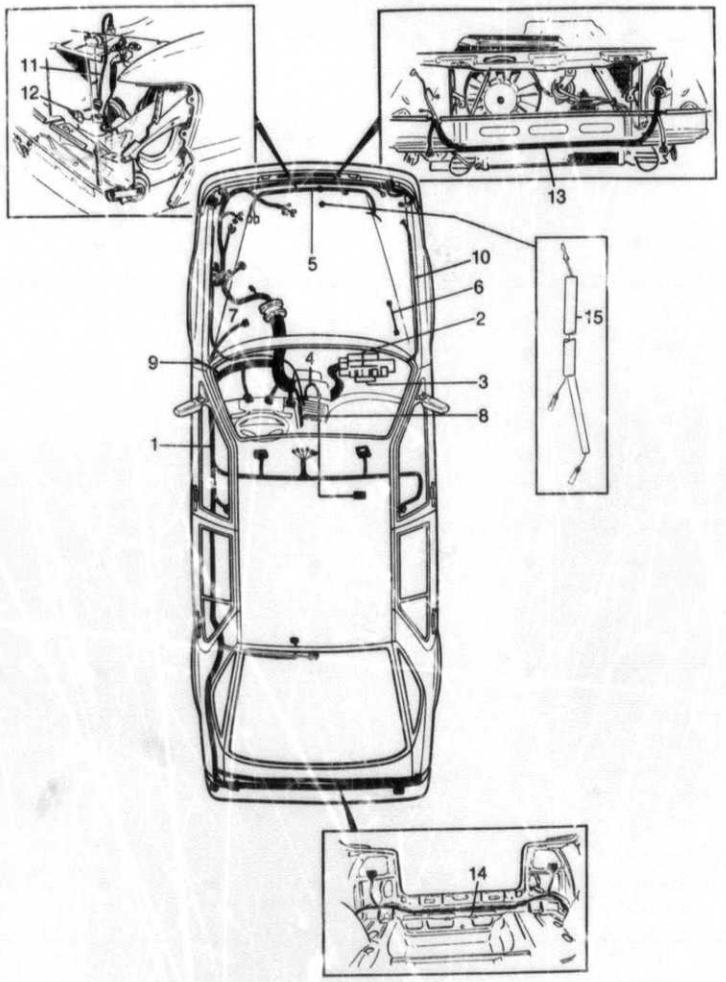

F6152 CAC90

1062	Pos	Part No Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 77 143		I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0020	1	41 77 135		14), I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0030	1	41 77 168		26), I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0040	1	41 77 150		14,26), I, SE, EU, ME,PA	1	Cable harness	Ledningsnät	5
0050								
0060	1	41 78 000		I, RHD	1	Cable harness	Ledningsnät	5
0070	1	41 78 018		26), I, RHD	1	Cable harness	Ledningsnät	5
0080								
0090	1	41 77 259		I, US, CA	1	Cable harness	Ledningsnät	5
0100	1	41 77 267		26), I, US, CA	1	Cable harness	Ledningsnät	5
0110								
0120	1	41 77 705		TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0130	1	41 77 671		14), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0140	1	41 77 762		26), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0150	1	41 77 739		14,26), TURBO, SE, EU,PA	1	Cable harness	Ledningsnät	5
0160	1	41 77 820		167), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0170	1	41 77 796		14,167), TURBO, SE,EU,PA	1	Cable harness	Ledningsnät	5
0180								
0181	1	41 77 671		14), TURBO, ME	1	Cable harness	Ledningsnät	5
0182	1	44 18 331		26), TURBO, ME	1	Cable harness	Ledningsnät	5
0183	1	44 13 349		14,26), TURBO, ME	1	Cable harness	Ledningsnät	5
0184								
0190	1	41 77 713		TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0200	1	41 77 689		14), TURBO, TCS,SE,EU,PA	1	Cable harness	Ledningsnät	5
0210	1	41 77 770		26), TURBO, TCS,SE,EU,PA	1	Cable harness	Ledningsnät	5
0220	1	41 77 747		14,26), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0230								
0240	1	41 77 838		167), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0250								
0260	1	41 77 804		14,167), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0270								
0280								
0290	1	41 77 721		TURBO, A, ASR, SE, EU,PA	1	Cable harness	Ledningsnät	5
0300	1	41 77 697		14), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0310								
0320	1	41 77 788		26), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0330								
0340	1	41 77 754		14,26), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0350								
0360	1	41 77 846		167), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0370								
0380	1	41 77 812		14,167), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0390								
0400								
0410	1	41 78 158		TURBO, RHD	1	Cable harness	Ledningsnät	5
0420	1	41 78 182		26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0430	1	41 78 216		167), TURBO, RHD	1	Cable harness	Ledningsnät	5
0440								
0450	1	41 78 166		TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0460	1	41 78 190		26), TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0470	1	41 78 224		167), TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0480								
0490	1	41 78 174		TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0500	1	41 78 208		26), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0510	1	41 78 232		167), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0520								
0523	1	43 53 765		14,167), TURBO, BR	1	Cable harness	Ledningsnät	5
0530	1	43 50 757		14,167), TURBO, TCS, BR	1	Cable harness	Ledningsnät	5
0540	1	43 50 765		14,167), TURBO, A,ASR,BR	1	Cable harness	Ledningsnät	5
0550								

14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
167. For cars with RAC. För bilar med RAC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G12

Main- and engine comp. B234, 1992

Huvud- och motorrum B234, 1992

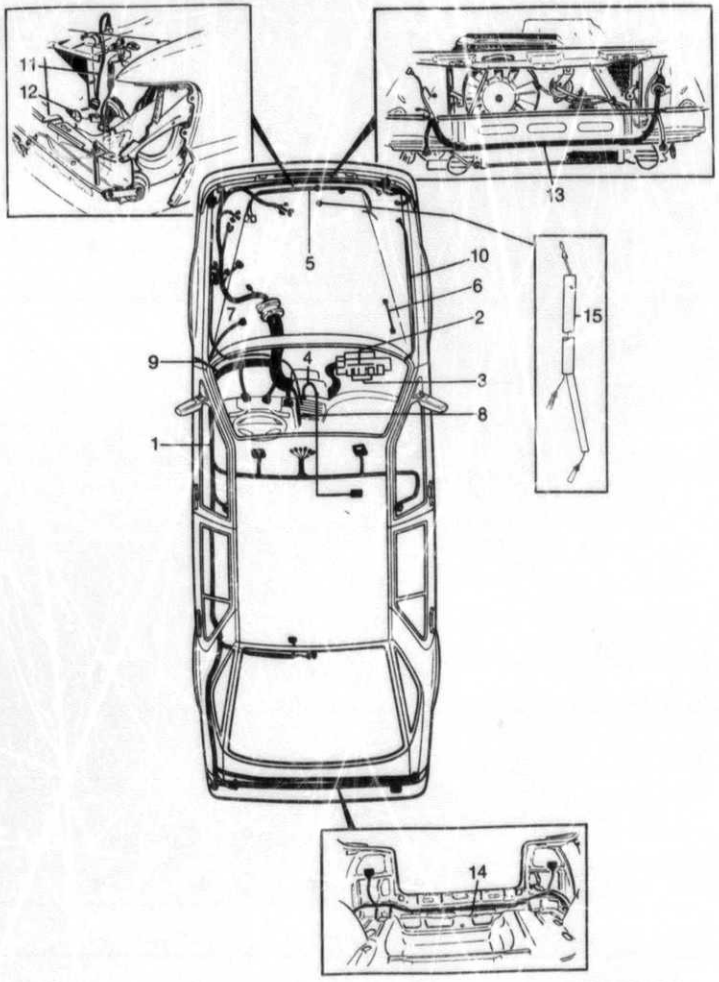

F6152 CAC90

1062	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	1	41 77 861		26), TURBO, TCS, US, CA	1	Cable harness	Ledningsnät	5
0600	1	41 79 495		167), TURBO, TCS, US, CA	1	Cable harness	Ledningsnät	5
0610								
0620	1	41 77 879		26), TURBO, A, ASR,US,CA	1	Cable harness	Ledningsnät	5
0630	1	41 79 503		167), TURBO, A,ASR,US,CA	1	Cable harness	Ledningsnät	5
0640								
0650	2			See page 3A-189, 2-H22		. Relay retainer	. Relähållare	
0660	3			See page 3A-189, 2-H22		. Fuse holder	. Säkringshållare	
0670	4			See page 3A-107, 2-E12		Cable harness radio	Ledningsnät radio	
0680								
0690	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0700				See page 8C-033, 6-L10				
0710	6	95 65 144			1	Ground cable radio interferance suppr	Jordkabel radioavstörning	6
0720								
0730	7	95 17 400			1	Cable harness engine compartment lamp	Ledningsnät motorrumslampa	6
0740								
0750	8	40 67 005			1	Cable harness cigarette lighter	Ledningsnät cigarettändare	5
0760								
0770	9	40 66 981			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0780								
0790	10	43 50 161		14)	1	Cable harness	Ledningsnät	6
0800								
0810	11	41 79 958		167), 4D	1	Cable harness	Ledningsnät	6
0820				26), 5CS, TURBO, A, ME, AU, PA				
0830								
0840								
0850	12	85 96 526		5D	1	Cable harness	Ledningsnät	4
0860				173), 5CS				
0870				5CS, SE, EU, GB				
0880				5CS, I, ME, AU, PA				
0890				5CS, TURBO, M, ME, AU,PA				
0900				5CS, TURBO, A, ME, AU,PA				
0910								
0920	13	41 78 539		2), SE, EU, ME, GB, AU, PA, BR	1	Cable harness	Ledningsnät	5
0930								
0940	13	41 78 513		2), 5CS, SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0950								
0960	13	41 78 521		2), US	1	Cable harness	Ledningsnät	5
0970	13	41 79 446		2), CA	1	Cable harness	Ledningsnät	5
0980								
0990	14	41 79 719		3,157), SE, EU, ME, GB, PA, AU, BR	1	Cable harness	Ledningsnät	5
1000								
1010	14	41 78 638		3), SE, EU, ME, PA, BR	1	Cable harness	Ledningsnät	5
1020	14	41 78 646		3), RHD, PA, GB, AU	1	Cable harness	Ledningsnät	5
1030								
1040	14	41 78 620		3), US, CA	1	Cable harness	Ledningsnät	5
1050								
1060	14	41 78 612		3), 5CS, SE, EU,ME,GB,AU	1	Cable harness	Ledningsnät	5
1070								
1080	15	45 82 441			1	Cable harness fan control	Ledningsnät fläktstyrning	6
1090								
1100								
1110	16	44 33 165		LH	1	Cable harness air-bag	Ledningsnät airbag	5
1120								
1130	16	44 33 157		RH	1	Cable harness air-bag	Ledningsnät airbag	5
1140								

2. Front. Främre.
3. Rear. Bakre.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
157. Without rear fog light. Utan dimbaklykta.
167. For cars with RAC. För bilar med RAC.
173. For cars witouth RAC. För bilar utan RAC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G14


Engine 1992

Drivaggregat 1992

B202

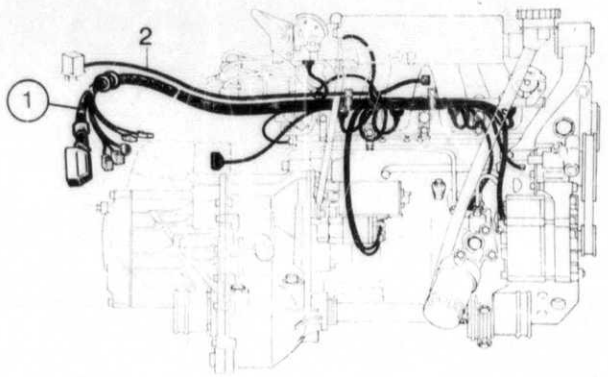

B234

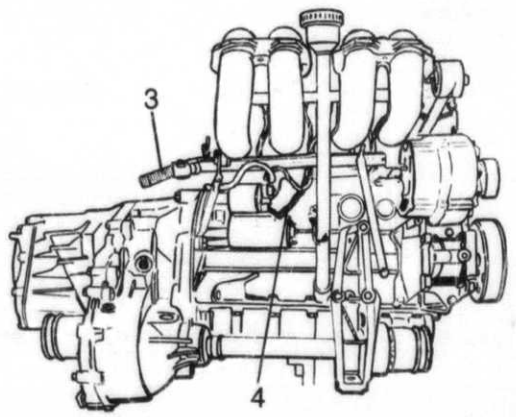

F3802 - CAC90

1064	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 806		B202 I	1	Cable harness	Ledningsnät	3
0020	1	41 76 822		B202 TURBO	1	Cable harness	Ledningsnät	3
0030	1	41 76 830		B202 TURBO, TCS	1	Cable harness	Ledningsnät	3
0031								
0040	1	41 76 814		5), B202 I	1	Cable harness	Ledningsnät	3
0050	1	41 76 848		5), B202 TURBO	1	Cable harness	Ledningsnät	3
0060	1	41 79 644		5), B202 TURBO, TCS	1	Cable harness	Ledningsnät	3
0070								
0080	2	74 78 142		5,28), B202, LH2.2	1	Cable harness	Ledningsnät	6
0090				See page 2-175, 1-J06				
0100								
0110	3	41 76 863		B234 TURBO	1	Cable harness	Ledningsnät	3
0120	3	41 76 871		B234 TURBO, ETS	1	Cable harness	Ledningsnät	3
0130	3	41 76 889		B234 TURBO, A, ETS	1	Cable harness	Ledningsnät	3
0140								
0150	3	41 76 855		B234 I	1	Cable harness	Ledningsnät	3
0160								
0170	4	88 56 874		B234	1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6
0180								

5. Without catalytic converter. Utan katalytisk reaktor.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G16

Doors 1992

Dörrar 1992

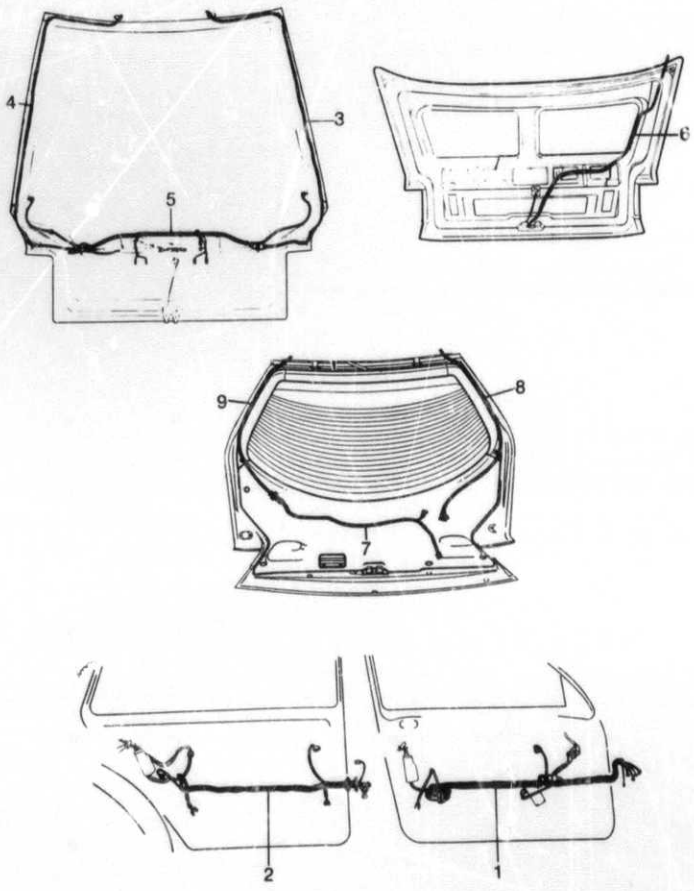

F3803 - CAC90

1066	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 104		29)	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030	1	95 26 872		30)	1	Cable harness front door	Ledningsnät framdörr	5
0040								
0050	1	40 67 146		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0060								
0070	1	41 08 833		30), RHD	1	Cable harness front door	Ledningsnät framdörr	5
0080								
0090								
0100	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0110								
0120								
0130	3	41 78 455		201), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0140								
0150	3	41 78 471		19,201), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0160								
0165	3	41 78 471		202), LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0167								
0170								
0180	4	41 78 463		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0190								
0200								
0210	5	40 67 203		201)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0220								
0230	5	40 67 211		19,201)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0240								
0245	5	40 67 211		202)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0247								
0250								
0290	6	*41 79 461*		185), 4D NLS - USE 4353744	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0300								
0305	6	43 53 744		186), 4D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0306								
0310								
0320	7	41 76 079		5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0330								
0340								
0350	8	*43 52 969*		LH, 5CS NLS - USE 4432472	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0360								
0370								
0380	9	43 52 977		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0390								
0400								
0410		85 48 554		4D See page 3A-219, 2-J04	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6
0420								

19. High mounted stop light. Högt monterat stoppljus.
29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.
185. Ch -N1016870.
186. Ch N1016871-.
201. Ch -N1035355.
202. Ch N1035356-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G18 Compartment 1992

Kupe 1992

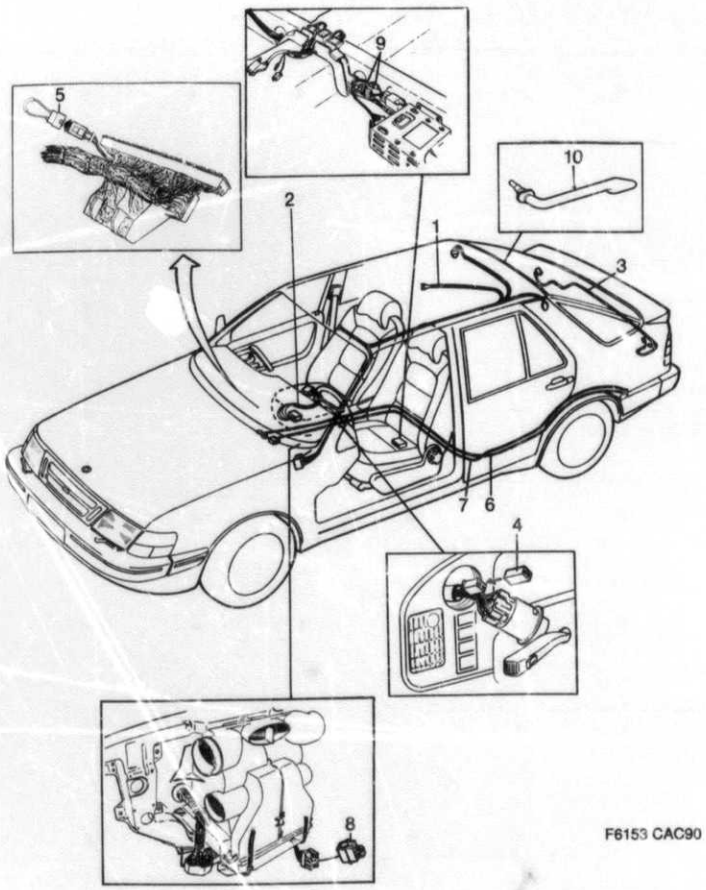

F6153 CAC90

1068	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 013			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0020								
0030								
0040	2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
0050								
0060								
0140	3	41 78 505		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0150								
0160								
0170	4	95 69 740		GB, IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0180								
0190	5	40 66 916		31), M	1	Cable harness	Ledningsnät	5
0200	5	40 66 924		31), A	1	Cable harness	Ledningsnät	5
0210								
0290	6	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0300								
0310								
0315	7	40 83 291			1	Cable CD-changer	Ledning CD-växlare	5
0317								
0318								
0320	8	95 69 740		4), B202, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0330	8	95 69 740		4), B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0335								
0340	8	95 69 740		5), B202, M, FI, EU	1	Cable harness	Ledningsnät	5
0350								
0360	9	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0370								
0380								
0390	10			5CS See page 3A-087, 2-D16 See page 3A-087, 2-D16	X	Grommet high mounted stop light rear window wiper	Genomföring högt monterad stopplykta bakrutetorkare	
0400								
0410								
0420								
0430	11	44 33 181		LH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0440								
0450	11	44 33 173		RH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0460								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G20

Main- and engine comp.
B202, 1993

Huvud- och motorrum
B202, 1993

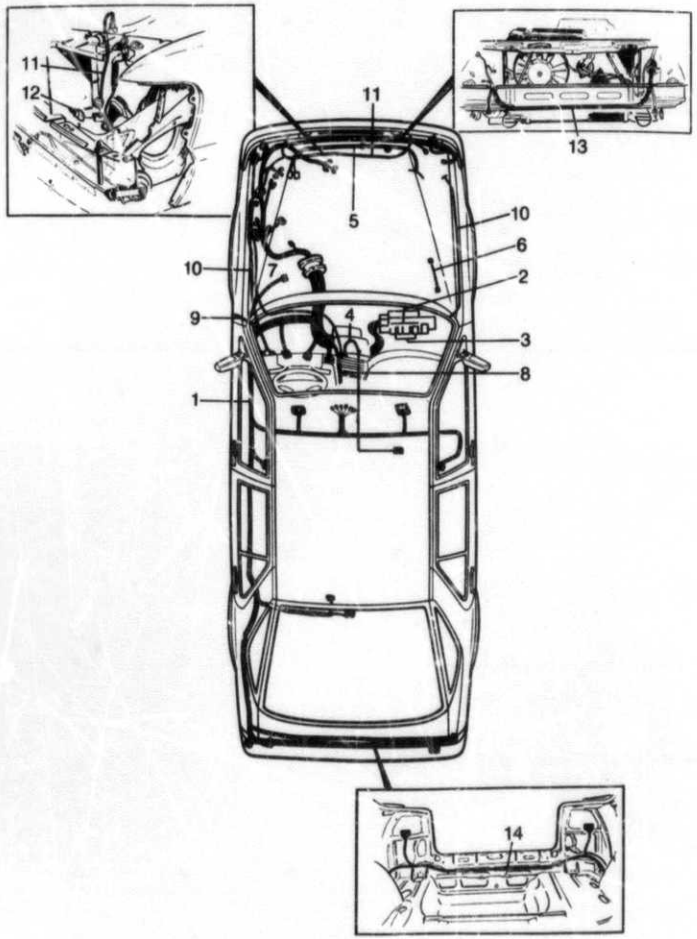

F6154 CAC90

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 50 807		4,163), I, SE, EU	1	Cable harness	Ledningsnät	5
0030								
0040	1	43 50 864		4), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0050	1	43 50 872		4,14), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0060	1	43 50 880		4,26), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0070	1	43 50 898		4,14,26), I, SE, EU, PA	1	Cable harness	Ledningsnät	5
0080								
0090	1	43 50 906		4), I, RHD	1	Cable harness	Ledningsnät	5
0100	1	44 18 513		4,14), I, RHD	1	Cable harness	Ledningsnät	5
0110	1	43 50 914		4,26), I, RHD	1	Cable harness	Ledningsnät	5
0120	1	44 18 521		4,14,26), I, RHD	1	Cable harness	Ledningsnät	5
0130								
0140	1	43 50 922		5), I, EU, ME, PA	1	Cable harness	Ledningsnät	5
0150								
0160	1	43 50 963		5), I, RHD	1	Cable harness	Ledningsnät	5
0170	1	44 18 547		5,14), I, RHD	1	Cable harness	Ledningsnät	5
0180								
0190	1	43 51 060		4), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0200	1	43 51 078		4,14), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0210	1	43 51 128		4,26), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0220	1	43 51 136		4,14,26), TURBO,SE,EU,PA	1	Cable harness	Ledningsnät	5
0230								
0240	1	43 51 144		4,26), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0250								
0260	1	43 51 151		4,14,26), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0270								
0280								
0290	1	43 51 243		4), TURBO, RHD	1	Cable harness	Ledningsnät	5
0300	1	44 18 570		4,14), TURBO, RHD	1	Cable harness	Ledningsnät	5
0310	1	43 51 276		4,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0320	1	44 18 596		4,14,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0330								
0360	1	43 51 284		4,26), TURBO, TCS, RHD	1	Cable harness	Ledningsnät	5
0380								
0390	1	43 51 391		5,26), TURBO, EU, ME	1	Cable harness	Ledningsnät	5
0395	1	*43 51 409*		5,14,26), TURBO, EU, ME NLS	1	Cable harness	Ledningsnät	5
0395								
0410								
0450	1	43 51 585		5,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0460	1	44 18 810		5,14,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0470								
0510	2			See page 3A-189, 2-H22		.Relay retainer	.Relähållare	
0520	3			See page 3A-189, 2-H22		.Fuse holder	.Säkringshållare	
0530	4			See page 3A-107, 2-E12		Cable harness radio	Ledningsnät radio	
0540								
0550	5	96 23 119		AC	1	Cable harness	Ledningsnät	6
0560				See page 8C-033, 6-L10		thermo switch	termobrytare	
0570	6	95 65 144			1	Ground cable	Jordkabel	6
0580						radio interferance suppr	radioavstörning	
0590	7	95 17 400			1	Cable harness	Ledningsnät	6
0600						engine compartment lamp	motorrumslampa	
0610	8	40 67 005			1	Cable harness	Ledningsnät	5
0620						cigarette lighter	cigarettändare	
0630	9	40 66 981			2	Cable harness	Ledningsnät	5
0640						direction indicator	blinklykta	
0650	10	43 50 161		14)	1	Cable harness	Ledningsnät	6
0660								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
163. Without EDU. Utan EDU.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H03
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G22

Main- and engine comp. B202, 1993

Huvud- och motorrum B202, 1993

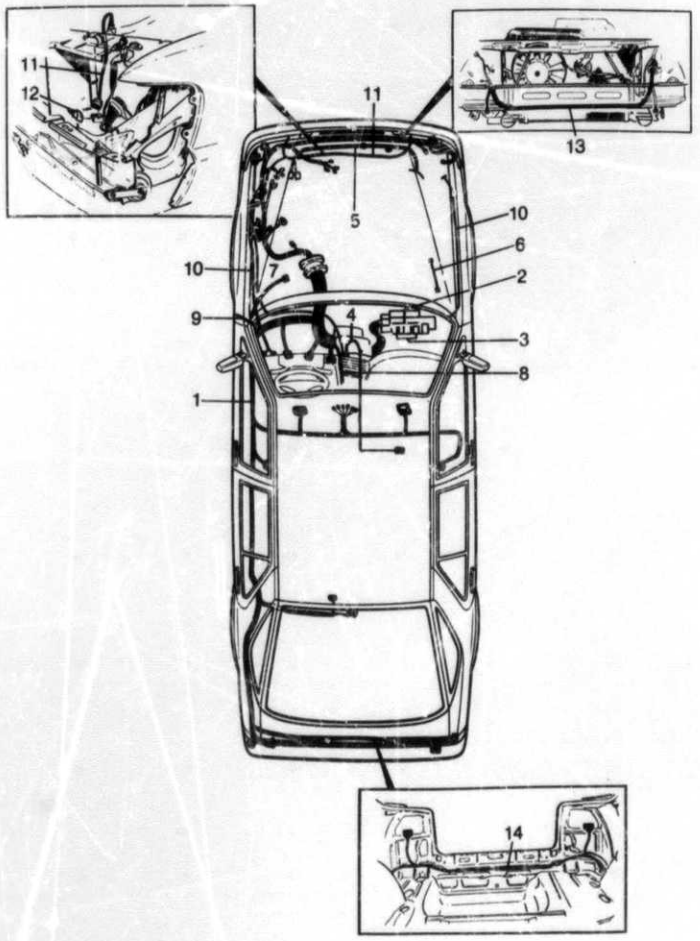

F6154 CAC90

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0670	11	41 79 958		167), 4D	1	Cable harness	Ledningsnät	6
0675				TURBO, A				
0680				26), 5CS, TURBO, A, ME, AU, PA				
0690								
0700								
0710	12	85 98 526		5D	1	Cable harness	Ledningsnät	4
0715				I				
0717				TURBO, M				
0720				173), 5CS				
0730				5CS, SE, EU, GB				
0740				5CS, I, ME, AU, PA				
0750				5CS, TURBO, M, ME, AU,PA				
0760				5CS, TURBO, A, ME, AU,PA				
0770								
0780	13	43 52 407		2), SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0790								
0800	13	43 52 373		2), 5CS, SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0810								
0830	14	43 52 456		3,157), SE, EU, ME, GB, PA, AU	1	Cable harness	Ledningsnät	5
0840								
0850	14	43 52 431		3), SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0860	14	43 52 449		3), RHD, PA, GB, AU	1	Cable harness	Ledningsnät	5
0870								
0880	14	43 52 415		3), 5CS, SE, EU, ME, GB, PA, AU	1	Cable harness	Ledningsnät	5
0890								
0900								
0910	15	44 33 173		LH	1	Cable harness air-bag	Ledningsnät airbag	5
0920								
0930	15	44 33 157		RH	1	Cable harness air-bag	Ledningsnät airbag	5
0940								

2. Front. Främre.
3. Rear. Bakre.
26. For cars with ACC. För bilar med ACC.
157. Without rear fog light. Utan dimbaklykta.
167. For cars with RAC. För bilar med RAC.
173. For cars witouth RAC. För bilar utan RAC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-G24

Main- and engine comp.
B234, 1993

Huvud- och motorrum
B234, 1993

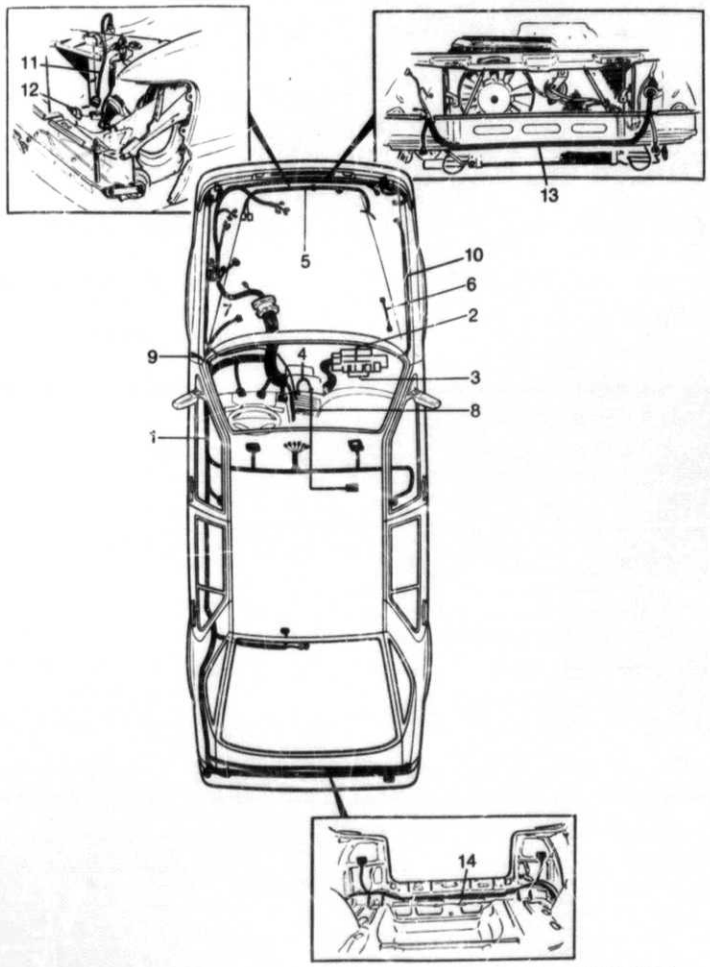

F6155 CAC90

1072	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 50 989		I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0020	1	43 50 997		14), I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0030	1	43 51 003		26), I, SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
0040	1	43 51 011		14,26), I, SE, EU, ME,PA	1	Cable harness	Ledningsnät	5
0050								
0060	1	43 51 029		I, RHD	1	Cable harness	Ledningsnät	5
0065	1	44 18 554		14), I, RHD	1	Cable harness	Ledningsnät	5
0070	1	43 51 037		26), I, RHD	1	Cable harness	Ledningsnät	5
0075	1	44 18 562		14,26), I, RHD	1	Cable harness	Ledningsnät	5
0080								
0090	1	43 51 052		26), I, US, CA	1	Cable harness	Ledningsnät	5
0110								
0120	1	43 51 664		TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0130	1	43 51 672		14), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0140	1	43 51 722		26), TURBO, SE, EU, PA	1	Cable harness	Ledningsnät	5
0150	1	43 51 730		14,26), TURBO, SE, EU,PA	1	Cable harness	Ledningsnät	5
0180								
0200	1	44 18 919		26), TURBO, ME	1	Cable harness	Ledningsnät	5
0210	1	44 18 927		14,26), TURBO, ME	1	Cable harness	Ledningsnät	5
0220								
0230	1	43 51 680		TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0240	1	43 51 698		14), TURBO, TCS,SE,EU,PA	1	Cable harness	Ledningsnät	5
0250	1	43 51 748		26), TURBO, TCS,SE,EU,PA	1	Cable harness	Ledningsnät	5
0260	1	43 51 755		14,26), TURBO, TCS, SE, EU, PA	1	Cable harness	Ledningsnät	5
0270								
0320								
0330	1	43 51 706		TURBO, A, ASR, SE, EU,PA	1	Cable harness	Ledningsnät	5
0340	1	43 51 714		14), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0350								
0360	1	43 51 763		26), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0370								
0380	1	43 51 771		14,26), TURBO, A, ASR, SE, EU, PA	1	Cable harness	Ledningsnät	5
0390								
0440								
0450	1	43 51 847		TURBO, RHD	1	Cable harness	Ledningsnät	5
0453	1	44 19 057		14), TURBO, RHD	1	Cable harness	Ledningsnät	5
0460	1	43 51 870		26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0470	1	44 19 081		14,26), TURBO, RHD	1	Cable harness	Ledningsnät	5
0480								
0490	1	43 51 854		TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0493	1	44 19 065		14), TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0500	1	43 51 888		26), TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0510	1	44 19 099		14,26), TURBO, RHD, TCS	1	Cable harness	Ledningsnät	5
0520								
0530	1	43 51 862		TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0540	1	44 19 073		14), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0545	1	43 51 896		26), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0550	1	44 19 107		14,26), TURBO, A, ASR, RHD	1	Cable harness	Ledningsnät	5
0560								
0565								
0610	1	44 19 149		TURBO, US, CA	1	Cable harness	Ledningsnät	5
0620	1	43 51 953		TURBO, TCS, US, CA	1	Cable harness	Ledningsnät	5
0630								
0650	1	43 51 961		TURBO, A, US, CA	1	Cable harness	Ledningsnät	5
0660								
0670	2			See page 3A-189, 2-H22		. Relay retainer	. Relähållare	
0680	3			See page 3A-189, 2-H22		. Fuse holder	. Säkringshållare	
0690	4			See page 3A-107, 2-E12		Cable harness radio	Ledningsnät radio	
0700								
0710	5	95 23 119		AC See page 8C-033, 6-L10	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0720								

14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H02

Main- and engine comp.
B234, 1993

Huvud- och motorrum
B234, 1993

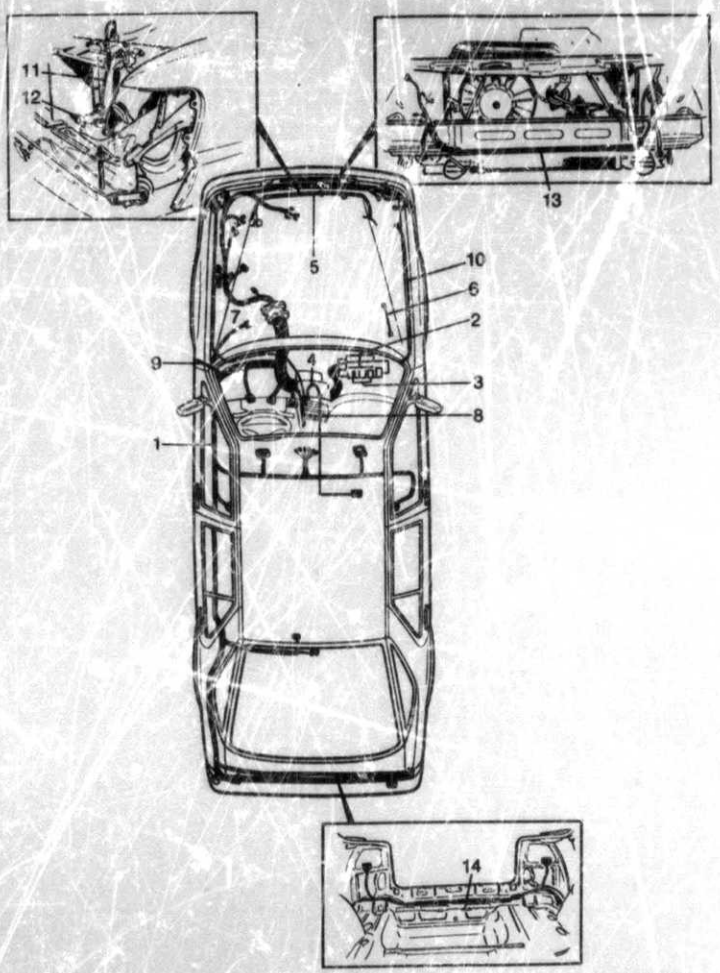

F6155 CAC90

1072	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0730	6	95 65 144			1	Ground cable	Jordkabel	6
0740						radio interferance suppr	radioavstörning	
0750	7	95 17 400			1	Cable harness	Ledningsnät	6
0760						engine compartment lamp	motorrumslampa	
0770	8	40 67 005			1	Cable harness	Ledningsnät	5
0780						cigarette lighter	cigarettändare	
0790	9	40 66 981			2	Cable harness	Ledningsnät	5
0800						direction indicator	blinklykta	
0810	10	43 50 161		14)	1	Cable harness	Ledningsnät	6
0820								
0830	11	41 79 958		167), 4D TURBO, A 26), 5CS, TURBO, A, ME, AU, PA	1	Cable harness	Ledningsnät	6
0835								
0840								
0850								
0860								
0870	12	85 98 526		5D I TURBO, M 173), 5CS 5CS, SE, EU, GB 5CS, I, ME, AU, PA 5CS, TURBO, M, ME, AU,PA 5CS, TURBO, A, ME, AU,PA	1	Cable harness	Ledningsnät	4
0880								
0881								
0882								
0890								
0900								
0910								
0920								
0930								
0940	13	43 52 407		2), SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0950								
0960	13	43 52 373		2), 5CS, SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
0970								
0980								
0990	13	43 52 381		2), US, CA	1	Cable harness	Ledningsnät	5
1000	13	43 52 159		2), 5CS, US, CA	1	Cable harness	Ledningsnät	5
1040								
1050	14	43 52 456		3,157), SE, EU, ME, GB, PA, AU	1	Cable harness	Ledningsnät	5
1060								
1070	14	43 52 431		3), SE, EU, ME, PA	1	Cable harness	Ledningsnät	5
1080	14	43 52 449		3), RHD, PA, GB, AU	1	Cable harness	Ledningsnät	5
1090								
1100	14	43 52 423		3), US, CA	1	Cable harness	Ledningsnät	5
1105	14	43 52 233		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
1110								
1120	14	43 52 415		3), 5CS, SE, EU, ME, GB, AU, PA	1	Cable harness	Ledningsnät	5
1130								
1140								
1150	15	44 33 165		LH	1	Cable harness air-bag	Ledningsnät airbag	5
1160								
1170	15	44 33 157		RH	1	Cable harness air-bag	Ledningsnät airbag	5
1180								

2. Front. Främre.
3. Rear. Bakre.
14. AIR-BAG.
26. For cars with ACC. För bilar med ACC.
157. Without rear fog light. Utan dimbaklykta.
167. For cars with RAC. För bilar med RAC.
173. For cars witouth RAC. För bilar utan RAC.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H04


Engine 1993

Drivaggregat 1993

B202

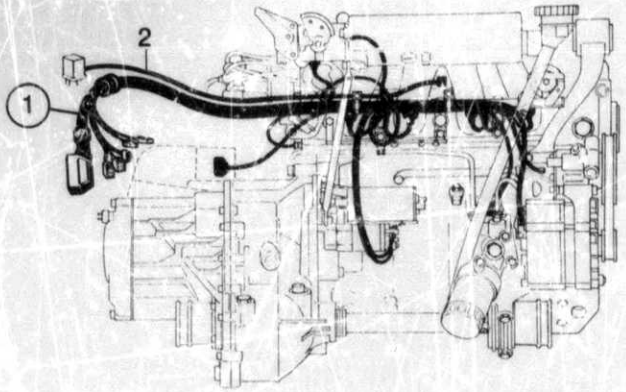

B234

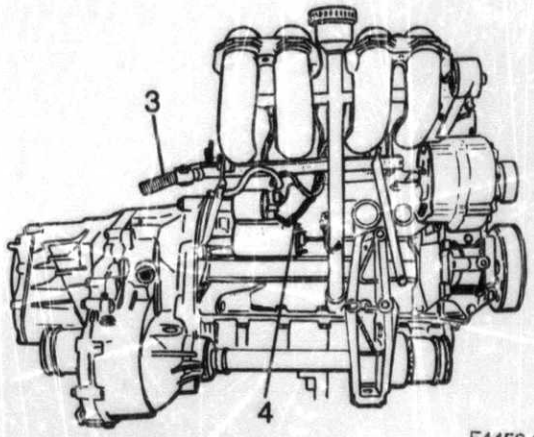

F4459 CAC90

1074	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 52 027		B202 I	1	Cable harness	Ledningsnät	3
0020	1	43 52 050		B202 TURBO	1	Cable harness	Ledningsnät	3
0030	1	43 52 068		B202 TURBO, TCS	1	Cable harness	Ledningsnät	3
0031								
0040	1	43 52 035		5), B202 I	1	Cable harness	Ledningsnät	3
0050	1	43 52 043		5), B202 TURBO	1	Cable harness	Ledningsnät	3
0070								
0080	2	74 78 142		5,28), B202, LH2.2	1	Cable harness	Ledningsnät	6
0090				See page 2-175, 1-J08				
0100								
0110	3	43 52 126		B234 TURBO	1	Cable harness	Ledningsnät	3
0120	3	43 52 134		B234 TURBO, ETS	1	Cable harness	Ledningsnät	3
0130	3	43 52 142		B234 TURBO, A, ETS	1	Cable harness	Ledningsnät	3
0140								
0145	3	43 52 472		B234 TURBO, BR	1	Cable harness	Ledningsnät	3
0146								
0150	3	43 52 043		B234 I	1	Cable harness	Ledningsnät	3
0160								
0170	4	88 56 874		B234	1	Cable harness oil level sensor	Ledningsnät oljenivågivare	6
0180								

5. Without catalytic converter. Utan katalytisk reaktor.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H06 Doors 1993

Dörrar 1993

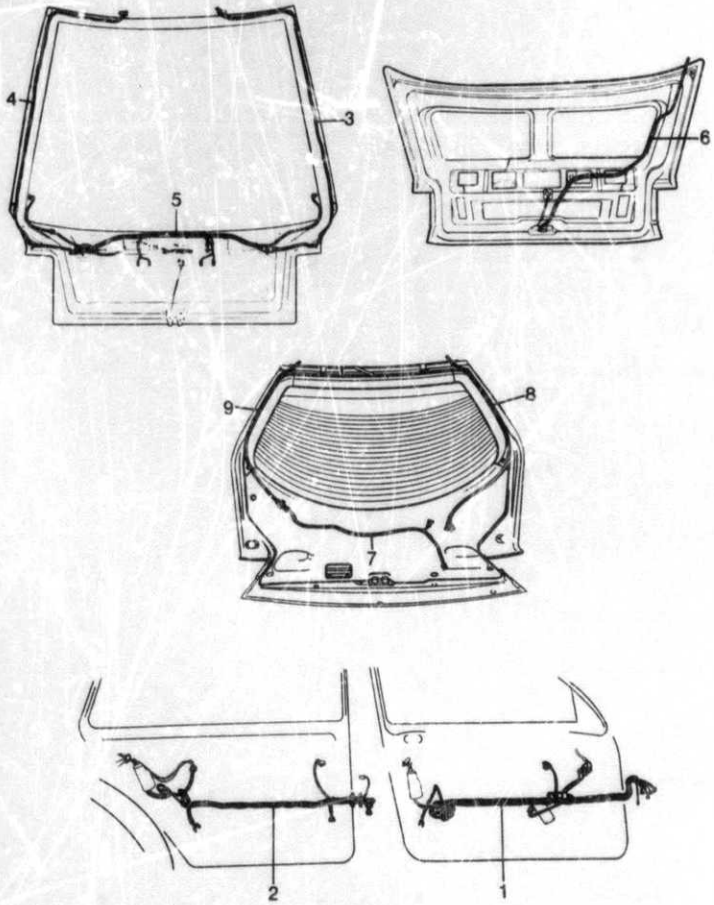

F4460 CAC90

1076	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	43 52 464		29)	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030	1	43 52 266		30)	1	Cable harness front door	Ledningsnät framdörr	6
0040								
0050								
0060	1	43 52 290		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0070								
0080	1	43 52 308		30), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0090								
0100								
0110	2	95 23 598			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0130								
0160	3	41 78 471		LH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0170								
0180								
0190	4	41 78 463		RH	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0200								
0210								
0240	5	40 67 211		19)	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0250								
0260								
0270	6	43 52 316		4D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0280								
0290								
0300	7	43 52 340		5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0310								
0320								
0330	8	44 32 472		LH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0340								
0350								
0360	9	44 32 480		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0370								

19. High mounted stop light. Högt monterat stoppljus.
29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H08 Compartment 1993

Kupe 1993

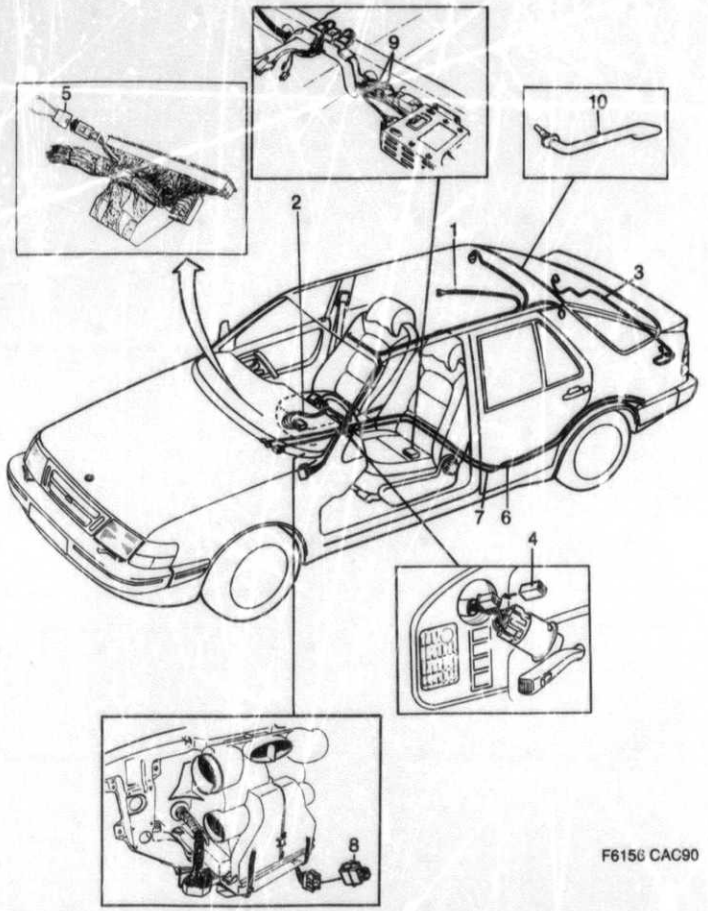

F6156 CAC90

1078	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 013			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0020								
0030								
0040	2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
0050								
0060								
0140	3	41 78 505		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0150								
0160								
0170	4	95 69 740		GB, IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0180								
0190	5	40 66 916		31), M	1	Cable harness	Ledningsnät	5
0200	5	40 66 924		31), A	1	Cable harness	Ledningsnät	5
0205	5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
0210								
0290	6	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0300								
0310								
0315	7	40 83 291			1	Cable CD-changer	Ledning CD-växlare	5
0317								
0318								
0320	8	95 69 740		4), B202, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0330	8	95 69 740		4), B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0335								
0340	8	95 69 740		5), B202, M, FI, EU	1	Cable harness	Ledningsnät	5
0350								
0360	9	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0370								
0380								
0390	10			5C3	X	Grommet high mounted stop light rear window wiper	Genomföring högt monterad stopplykta bakrutetorkare	
0400				See page 3A-087, 2-D16				
0410				See page 3A-087, 2-D16				
0420								
0430	11	44 33 181		LH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0440								
0450	11	44 33 173		RH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0460								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H10

Bushing, clamp

Bussningar, klammer

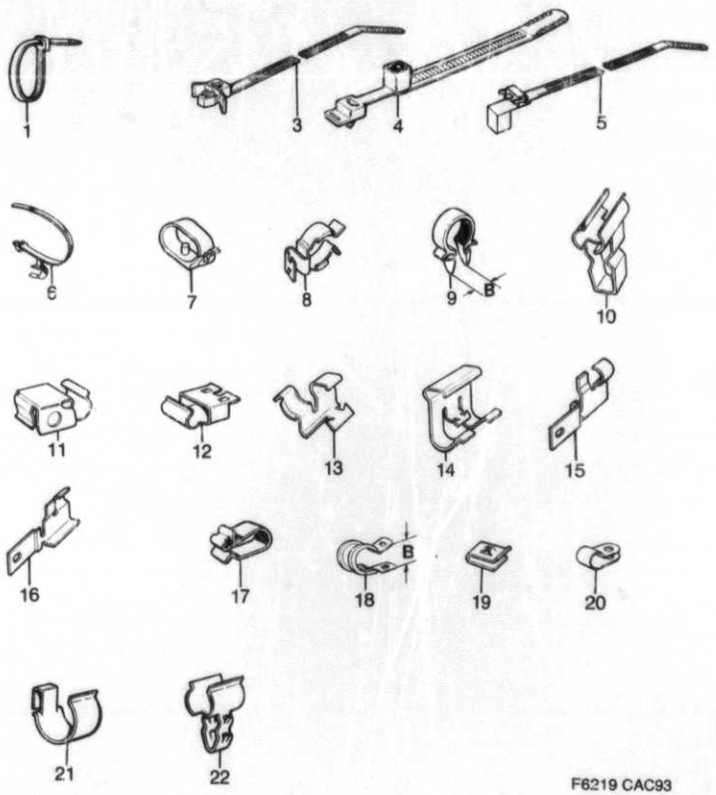

F6219 CAC93

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 71 864		L=118 MM	X	Tensioning band	Spännband	5
0015	1	79 71 872		L=160 MM	X	Tensioning band	Spännband	5
0020	1	79 71 880		L=259 MM	X	Tensioning band	Spännband	4
0030	1	79 71 898		L=304 MM	X	Tensioning band	Spännband	5
0040	3	85 52 663		L=200 MM, Ø 6,5 MM	X	Tensioning band	Spännband	5
0050	3	95 28 019		L=212 MM, Ø 8 MM	X	Tensioning band	Spännband	5
0060	4	95 25 221		L=150 MM	X	Tensioning band	Spännband	5
0070	4	*43 53 660*		L=190 MM NLS - USE 7984750	X	Tensioning band	Spännband	4
0080	5	79 84 750		L=190 MM	X	Tensioning band	Spännband	5
0090	5	91 24 603		L=215 MM	X	Tensioning band	Spännband	5
0100	5	40 63 681		L=220 MM	X	Tensioning band	Spännband	5
0110	6	73 98 944		L=100 MM	X	Tensioning band	Spännband	5
0120	6	75 93 221		L=214 MM	X	Tensioning band	Spännband	5
0130	6	73 98 977		L=273 MM	X	Tensioning band	Spännband	5
0140	7	*79 75 642*		28 MM X 16 MM NLS - USE 7975667	X	Clamp	Klammer	5
0150	7	79 75 659		35 MM X 20 MM	X	Clamp	Klammer	5
0160	7	79 75 667		40 MM X 24 MM	X	Clamp	Klammer	5
0170	8	95 07 914			X	Clip	Clips	5
0180	9	93 65 164		B=12,5 MM	X	Clip	Clips	5
0190	9	85 30 917		B=16 MM	X	Clip	Clips	5
0200	9	85 36 419		B=18,5 MM	X	Clip	Clips	5
0210	10	40 61 354		-1991, B234, AC compressor	X	Clip	Clips kompressor	5
0230	10	41 13 999		1992-, B234, AC compressor	X	Clip	Clips kompressor	5
0250	11	88 56 916		B234 oil level sensor	X	Clip	Clips oljenivågivare	5
0270	13	95 08 037			X	Clamp	Klammer	5
0280	14	95 08 045			X	Clamp	Klammer	5
0290	15	95 08 532			X	Clamp	Klammer	5
0300	16	95 08 524			X	Clamp	Klammer	5
0310	17	71 56 409			X	Clamp	Klammer	5
0320	18	79 69 348		B=6 MM	X	Clamp	Klammer	5
0330	18	79 69 363		B=9 MM	X	Clamp	Klammer	5
0340	18	85 66 135		B=11 MM	X	Clamp	Klammer	5
0350	18	*85 66 143*		B=11 MM NLS	X	Clamp	Klammer	5
0360	18	79 69 421		B=19 MM	X	Clamp	Klammer	5
0370	18	79 69 462		B=25 MM	X	Clamp	Klammer	5
0380	18	79 69 488		B=28 MM	X	Clamp	Klammer	5
0390	19	79 67 995			X	Clip nut	Clipsmutter	3
0400	19	79 72 573			X	Clip nut	Clipsmutter	5
0410						cable harness	ledningsnät	
0420	20	95 17 871			X	Clamp	Klammer	5
0430						tail gate	bagagerumsdörr	
0440	21	79 33 443			X	Clip	Clips	5
0450	21	95 19 786		-1991	X	Clip	Clips	5
0460	22	95 55 913			X	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6 K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H12

Bushing, clamp

Bussningar, klammer

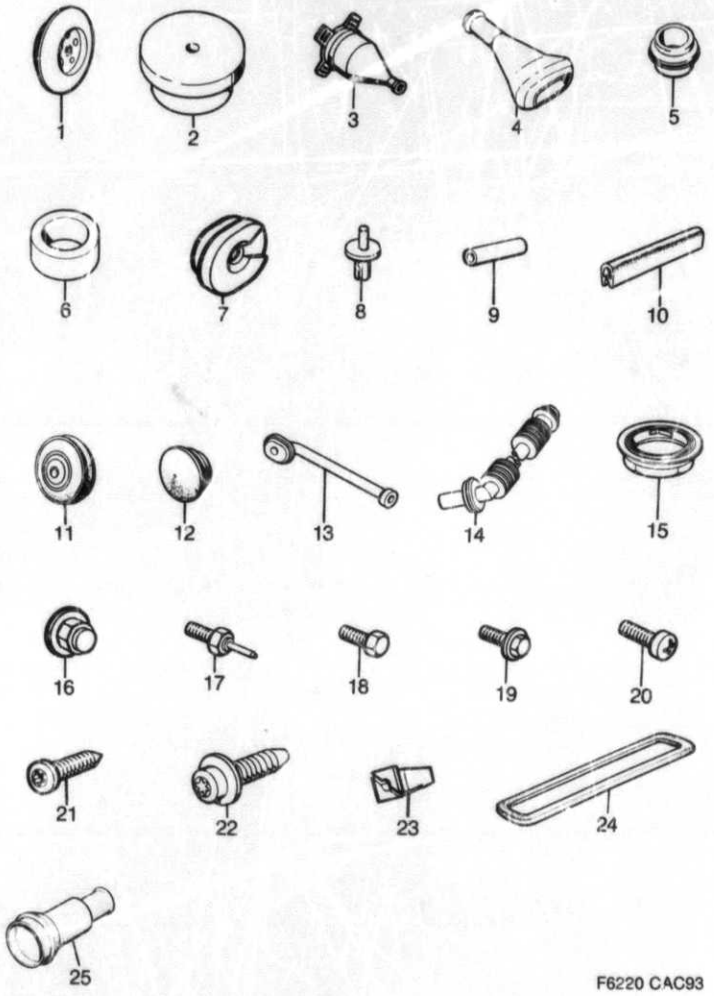

1992	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 07 666			1	Grommet	Genomföring	5
0020	2	95 23 622		Ø 60 MM	2	Bushing	Bussning	6
0030						A-pillar	A-stolpe	
0040	2	95 23 465		Ø 60 MM	2	Bushing	Bussning	6
0050						main cable harness	huvudledningsnät	
0060	3	85 52 721			4	Cable protection	Kabelskydd	4
0070						cable harness	ledningsnät	
0090	4	85 79 955			1	Protection	Skydd	4
0100	5	*95 02 840*		NLS	1	Grommet	Genomföring	6
0110	6	95 19 570			1	Seal	Tätning	5
0120						main cable harness	huvudledningsnät	
0130	7	95 08 482			X	Bushing	Bussning	6
0140	8	*95 17 889*		NLS - USE 7399256	X	Rivet	Nit	3
0150	9	95 29 660			1	Protection	Skydd	4
0160						holder, relay box	hållare, reläbox	
0165	10	75 91 035		L=55 MM	X	Protecting moulding	Skyddslist	5
0180	10	95 19 737		L=140 MM	X	Protecting moulding	Skyddslist	5
0195	10	*84 97 471*		L=150 MM NLS - USE 8564973	X	Protecting moulding	Skyddslist	6
0195								
0200	11	72 26 093			X	Bushing	Bussning	5
0220	12	92 67 881		Ø 6,7 MM	X	Plug	Plugg	5
0225	12	69 42 775		Ø 25 MM	X	Plug	Plugg	5
0230	13	95 03 491			X	Grommet	Genomföring	6
0240	14	95 07 690			X	Bellows	Bälg	6
0250	15	95 29 520		-1991, AIR-BAG	1	Nut	Mutter	5
0260	16	79 75 576		EW	1	Nut	Mutter	5
0270						relay	relä	
0280	17	*79 74 090*		NLS - USE 7399348	X	Screw	Skruv	5
0290	18	*79 71 757*		M8X10	X	Screw	Skruv	5
0300				NLS - USE 7528953		ground	jord	
0310	18	80 82 935		M8X16	X	Screw	Skruv	5
0320	18	79 67 938		M8X16	X	Screw	Skruv	5
0330						ground	jord	
0340	18	80 91 738		M8X18	X	Screw	Skruv	5
0350	19	79 72 607		M6X12	X	Screw	Skruv	5
0360	19	79 72 466		M6X16	X	Screw	Skruv	5
0370	19	79 73 555		M6X22	X	Screw	Skruv	5
0380	19	79 71 823		B8X16	X	Screw	Skruv	5
0390	19	82 86 296			X	Screw	Skruv	5
0400						ground	jord	
0405	19	81 25 007		M6FS6X12	X	Screw	Skruv	5
0406						ground	jord	
0407	19	79 69 223		M6FS6X12	X	Screw	Skruv	5
0410	19	79 74 397			X	Screw	Skruv	5
0420						radio interferance suppr	radiostörning	
0430	20	79 72 354		4,8X13	X	Screw	Skruv	5
0440	20	79 72 826		4,8X16	X	Screw	Skruv	5
0450	20	79 72 362		4,8X16	X	Screw	Skruv	5
0455	20	79 71 465		4,8X19	X	Screw	Skruv	5
0460	20	73 95 520		AIR-BAG	X	Screw	Skruv	5
0470	21	79 22 420		ABS	X	Screw	Skruv	5
0480						ground	jord	
0481	21	79 22 420			X	Screw	Skruv	5
0482						relay	relä	
0485	21	79 22 103			X	Screw	Skruv	5
0486						battery cable	batterikabel	
0490	21	80 59 552		4D	X	Screw	Skruv	5
0500						boot lid	bagagerumslucka	
0510	21	79 72 805			X	Screw	Skruv	5
0513	21	79 71 291			X	Screw	Skruv	5
0514						ground	jord	
0515	21	84 10 961			X	Screw	Skruv	5
0525	21	79 22 420		ME, PA, LA	X	Screw	Skruv	5
0526						relay	relä	
0530	22	79 72 946			X	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H14

Bushing, clamp

Bussningar, klammer

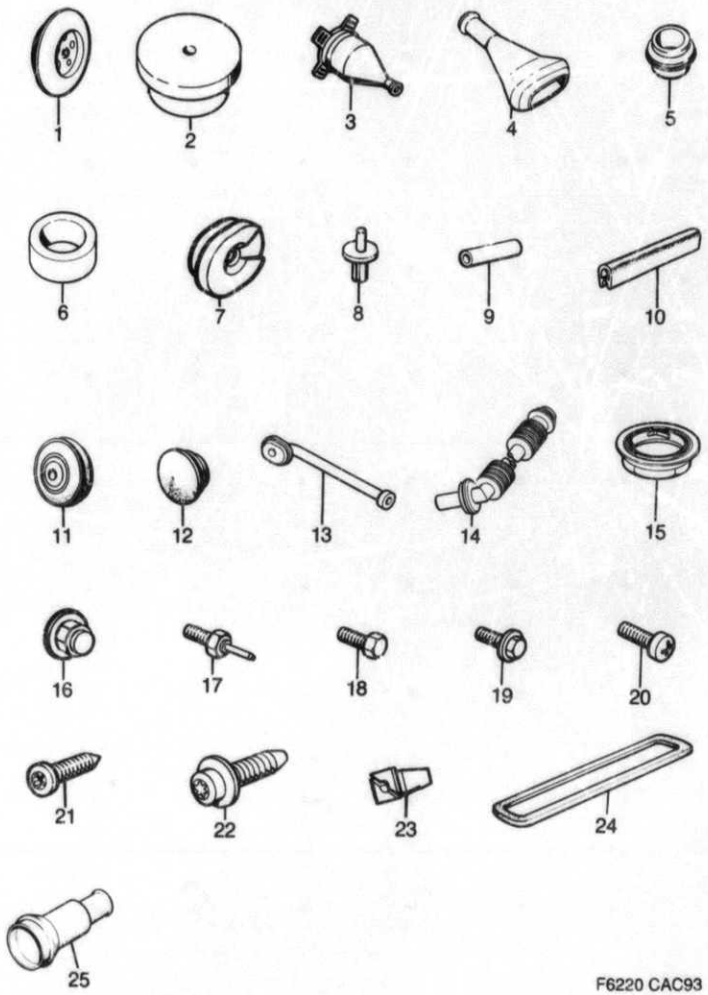

F6220 CAC93

1092	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	22	*79 72 953*		NLS - USE 7922370, 8029944	X	Screw	Skruv	5
0550	23	79 75 261		ABS	X	Nut ground	Mutter jord	5
0565	23	79 77 358		PA	X	Press nut relay	Pressmutter relä	5
0570	24	95 64 204			1	Seal	Tätning	5
0580	25	91 20 106			1	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H16

Mounting details
Body

Monteringsdetaljer
Kaross

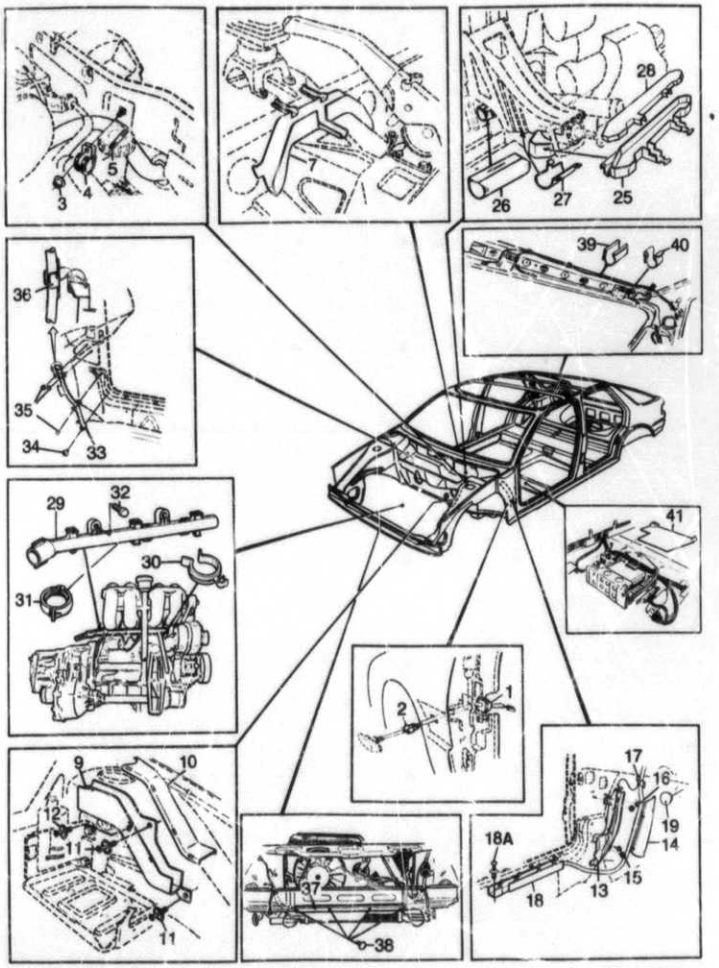

F4310 CAC90

1995	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 66 928		-1991	2	Grommet direction indicator	Genomföring blinkers	6
0020								
0030	2	40 69 811			4	Grommet direction indicator	Genomföring blinkers	6
0040								
0050								
0060	3	40 62 329		-1991	1	Nut	Mutter	5
0070	3	79 77 929		1992-	1	Nut	Mutter	5
0080	4	79 69 462			1	Clamp	Klammer	5
0085	5	94 46 881		1992-	1	Stud	Pinnskruv	5
0090								
0100	7	40 62 337			1	Duct	Kanal	4
0110								
0120	9	*40 61 990*		-1991 NLS - USE 4174116, 4174124	1	Cable protection battery	Kabelskydd batteri	4
0130								
0130								
0135	9	41 74 116		1992-	1	Cable protection battery	Kabelskydd batteri	4
0136								
0140	10	40 62 303		-1991	1	Cover	Lock	4
0145	10	41 74 124		1992-	1	Cover	Lock	4
0150	11	40 63 897			2	Rivet	Nit	3
0160	12	73 99 694			1	Rivet	Nit	3
0170								
0180	13	40 60 844		LH	1	Roof gutter A-pillar	Ränna A-stolpe	4
0190								
0200	14	40 62 311		LH	1	Cover A-pillar	Lock A-stolpe	4
0210								
0220	15	95 65 417		LH	2	Rivet A-pillar	Nit A-stolpe	3
0230								
0240	16	40 62 329		LH	2	Nut A-pillar	Mutter A-stolpe	5
0250								
0260	17	40 62 295		LH	1	Clip A-pillar	Clips A-stolpe	5
0270								
0280	18	95 23 218		LH	1	Cable protection sill	Kabelskydd tröskel	4
0290								
0295	18A	95 65 417			2	Rivet	Nit	3
0300	19	40 62 352		-1991, DI/APC/EZK	1	Bushing	Bussning	6
0305	19	41 75 402		1992-, DI/APC/EZK	1	Bushing	Bussning	6
0310	19	40 62 360		-1991, DI/ABS/APC/EZK	1	Bushing	Bussning	6
0315	19	41 75 394		1992, DI/ABS/APC/EZK	1	Bushing	Bussning	6
0317	19	43 53 769		1993, DI/ABS/APC/EZK	1	Bushing	Bussning	6
0320								
0330	25	95 24 638		86)	1	Cable protection cable harness	Kabelskydd ledningsnät	4
0340								
0341	25	40 69 258		87)	1	Cable channel cable harness	Kabelränna ledningsnät	4
0342								
0350	26	95 26 013		1990	1	Duct steering column	Kanal rattställ	5
0360								
0370	26	95 18 119		RHD	1	Clamp steering column	Klammer rattställ	5
0380								
0390	27	95 26 088		1990	1	Clamp main cable harness	Klämma huvudledningsnät	4
0400								
0405	27	41 11 217		1991-	1	Clamp main cable harness	Klämma huvudledningsnät	4
0406								
0410	28	40 63 756		87)	1	Cover cable harness	Lock ledningsnät	4
0411								
0412								
0420	29	95 68 106		B234 I	1	Cable protection engine	Kabelskydd motor	4
0430								
0435	29	41 13 551		B234 TURBO	1	Protection engine	Skyddshölje motor	4
0436								

86. Ch -L8000153.
87. Ch L8000154-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H18

Mounting details
Body

Monteringsdetaljer
Kaross

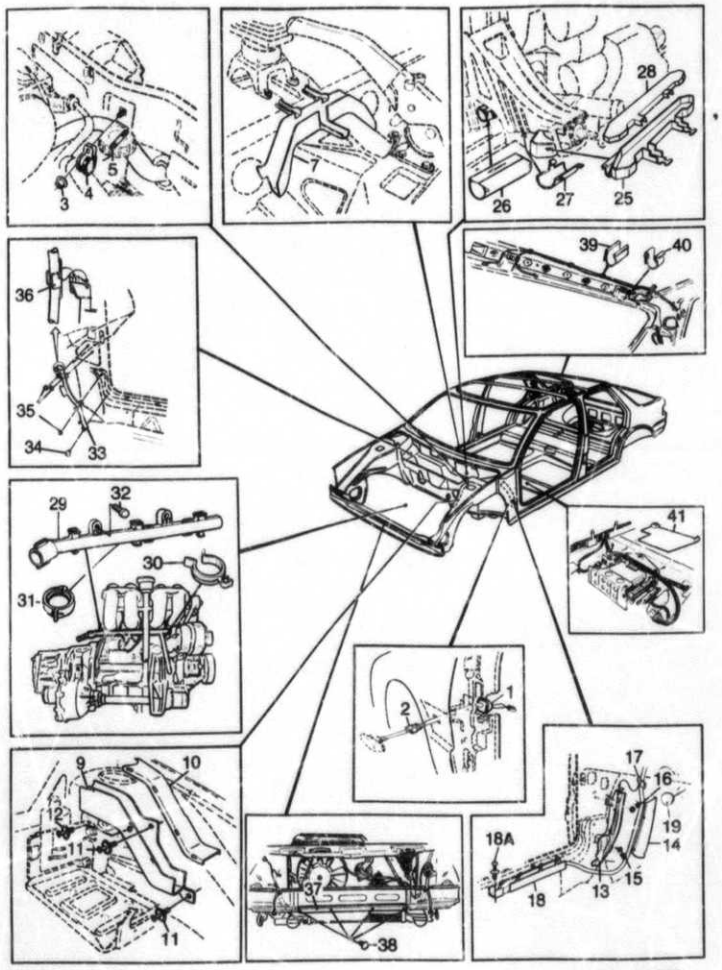

F4310 CAC90

1095	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	30	75 39 984		B234	1	Clamp	Klammer	5
0450						alternator cable	generatorkabel	
0455	31	41 74 058		B234 TURBO	1	Clamp	Klamma	5
0456						cable harness	ledningsnät	
0457	32	81 25 064		B234 I	2	Screw	Skruv	5
0460								
0470	33	40 61 685		RH	1	Roof gutter	Ränna	4
0480						A-pillar	A-stolpe	
0490	34	95 65 417		RH	1	Rivet	Nit	3
0500	35	40 62 329		RH	3	Nut	Mutter	5
0510	36	40 67 716		64)	1	Clip	Clips	5
0520								
0530	37	41 73 696			1	Duct	Kanal	4
0540	38	95 65 417			4	Rivet	Nit	3
0550								
0560	39	71 08 491		5CS	X	Clamp	Klammer	5
0570	40	93 83 043		5CS	X	Clamp	Klammer	5
0580								
0590	41	43 52 993		187)	1	Plastic cover	Plastskydd	4

64. For 40 61 685. För 40 61 685.
187. Ch N1026956-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H20

Mounting details
Doors

Monteringsdetaljer
Dörrar

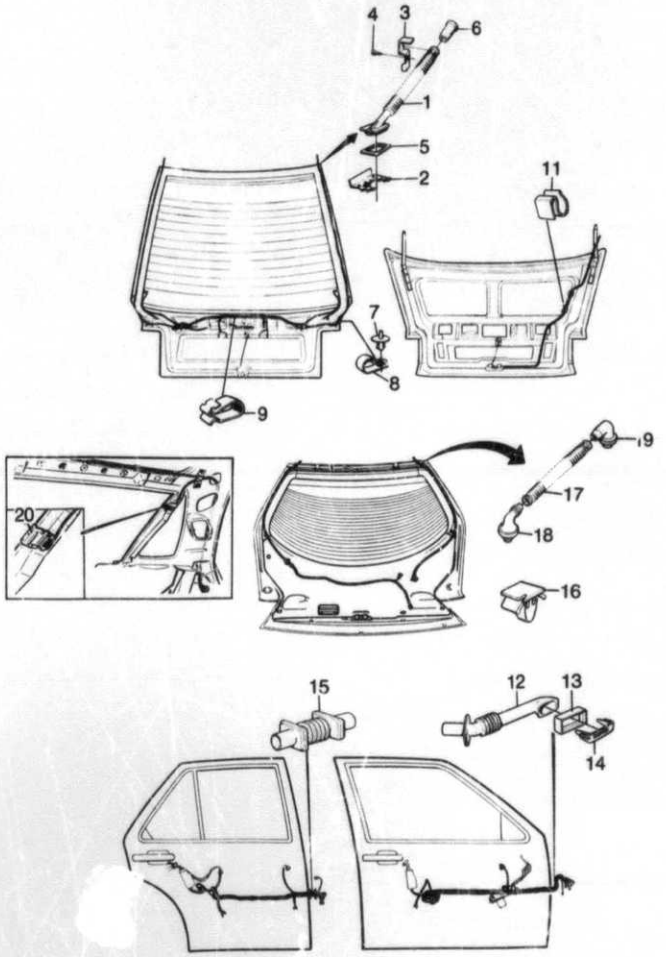

F4311 CAC90

1097	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 61 743		5D	2	Protection	Skydd	4
0020	2	40 61 768		5D	2	Clip	Clips	5
0030	3	40 63 244		5D	2	Clip	Clips	5
0040	4	79 72 425		5D	2	Screw	Skruv	5
0050	5	40 61 750		5D	2	Seal	Tätning	5
0060	6	40 61 982		5D	2	Seal	Tätning	5
0070	7	95 17 871		5D	1	Clamp	Klammer	5
0080	8	*95 17 889*		5D NLS - USE 7399256	1	Rivet	Nit	3
0090	9	71 56 409		5D	3	Clamp	Klammer	5
0100								
0120	11	71 08 491		4D	3	Clamp	Klammer	5
0130								
0140	12	95 26 773		2)	2	Bellows	Bälg	6
0150	13	95 63 560		2,81)	2	Seal	Tätning	5
0160	14	95 25 122		2,81)	2	Key	Kil	4
0170								
0180	15	95 16 212		3)	2	Bellows	Bälg	6
0190								
0200	16	41 76 095		5CS	1	Clip	Clips	5
0210	17	41 74 157		5CS	2	Bellows	Bälg	6
0215	17			5CS		Grommet	Genomföring	
0216				See page 3A-087, 2-D16		high mounted stop light	högt monterad stopplykta	
0217				See page 3A-087, 2-D16		rear window wiper	bakrutetorkare	
0220	18	*43 52 886*		-1992, 5CS NLS - USE 4418364	2	Grommet	Genomföring	5
0225	18	44 18 364		1993, 5CS	2	Grommet	Genomföring	5
0230	19	*41 74 199*		-1992, LH, 5CS NLS - USE 4419529	1	Grommet	Genomföring	5
0235	19	44 19 529		1993, LH, 5CS	1	Grommet	Genomföring	6
0240	19	*41 74 314*		-1992, RH, 5CS NLS - USE 4419545	1	Grommet	Genomföring	5
0245	19	44 19 545		1993, RH, 5CS	1	Grommet	Genomföring	6
0250	20	41 74 181		5CS	2	Clip	Clips	5

2. Front. Främre.
3. Rear. Bakre.
81. For contact housing 95 25 114, 22-pole. För kontakthus 95 25 114, 22-poligt.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H22

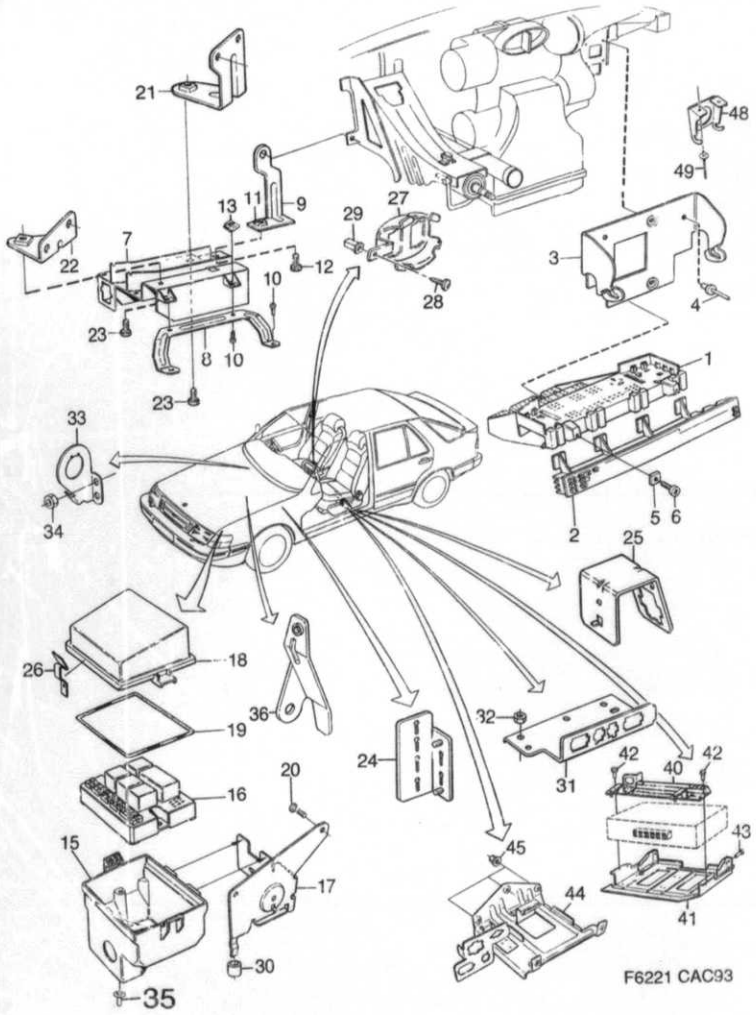

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 22 730		32),	1	Retainer	Hållare	5
0030	2	91 22 748		32), LHD	1	Retainer	Hållare	5
0050	2	91 22 755		32), RHD	1	Retainer	Hållare	5
0070	3	95 05 959			1	Bracket	Konsol	6
0080	3	95 08 441		RHD	1	Bracket	Konsol	6
0090	4	79 61 042			4	Rivet	Nit	5
0100	5	79 68 555			2	Clip nut	Clipsmutter	3
0110	6	79 22 297			2	Screw	Skruv	5
0120	7	40 68 821		84)	1	Bracket	Konsol	6
0125	7	41 09 856		85)	1	Bracket	Konsol	6
0130	7	95 26 799		93), RHD	1	Bracket	Konsol	6
0135	7	41 10 557		94), RHD	1	Bracket	Konsol	6
0140	8	95 26 328			1	Bracket	Hållare	6
0150	9	95 26 336		68)	1	Bracket	Hållare	6
0155	9	41 09 823		69)	1	Bracket	Hållare	6
0156	9	41 09 823		14), SE, FI, EU, JP	1	Bracket	Hållare	6
0160	9	95 27 631		68), RHD	1	Bracket	Hållare	6
0165	9	41 10 532		69), RHD	1	Bracket	Hållare	6
0170	10	79 22 354			4	Screw	Skruv	5
0180	11	79 67 995			2	Clip nut	Clipsmutter	3
0190	12	80 59 578			1	Screw	Skruv	5
0191	12	79 78 372		14), SE, FI, EU, JP	1	Screw	Skruv	5
0192	12	79 78 372		14)	2	Screw	Skruv	5
0195	13	79 67 995		14), SE, FI, EU, JP	2	Clip nut	Clipsmutter	3
0200	15	*91 25 386*		-1991 NLS - USE 4117339	1	Box	Box	4
0205	15	41 17 339		1992-	1	Box	Box	4
0210	16	31 23 407		-1990	1	Bracket	Hållare	4
0215	16	41 11 480		1991-	1	Bracket	Hållare	4
0220	17	40 60 158		-1991	1	Bracket	Hållare	4
0225	17			1992-		Bracket	Hållare	
0226				See page 3A-009, 2-A10				
0230	18	*40 69 597*		-1991 NLS - USE 4179784	1	Cover	Lock	3
0235	18	41 79 784		1992-	1	Cover	Lock	3
0240	19	95 27 789			1	Seal	Tätning	6
0250	20	79 22 362		-1991	2	Screw	Skruv	5
0260	21	95 25 460		14,74)	1	Bracket	Hållare	6
0265	21	41 09 781		14,75)	1	Bracket	Hållare	6
0270	22	95 25 486		14,74)	1	Bracket	Hållare	6
0275	22	41 09 807		14,75)	1	Bracket	Hållare	6
0280	23	79 22 420		14)	4	Screw	Skruv	5
0290	24	95 25 908		139), DI	1	Bracket	Hållare	4
0295						contact housing	kontakthus	
0300	25	95 67 702		-1991	2	Bracket	Hållare	5
0310	26	91 23 316			X	Lock brace	Låsbygel	5
0320	27	91 25 006		-1991	1	Bracket	Konsol	4
0325	27	41 75 360		1992-	1	Bracket	Konsol	4
0326	28	79 22 420		1992-	1	Screw	Skruv	5
0327	29	79 77 358		1992-	1	Press nut	Pressmutter	5
0330	30	40 61 388		-1991	1	Protection	Skydd	4
0340	31	40 68 920		-1991	1	Bracket	Hållare	4
0350	32	80 29 548		-1991	2	Nut	Mutter	5

14. AIR-BAG.
32. Part of main cable harness. Del av huvudledningsnät.
68. Ch -L1000279, -L2000200, -L8000608.
69. Ch L1000280-, L2000201-, L8000609-.
74. Ch -L1000279, -L2000200.
75. Ch L1000280-, L2000201-.
84. Ch -L1006165, -L2004674, -L8000608.
85. Ch L1006166-, L2004675-, L8000609-.
93. Ch -L1005890, -L2004419, -L8000608.
94. Ch L1005891-, L2004420-, L8000609-.
139. Ch -L1018334, -L2015242, -L8001844.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-H24

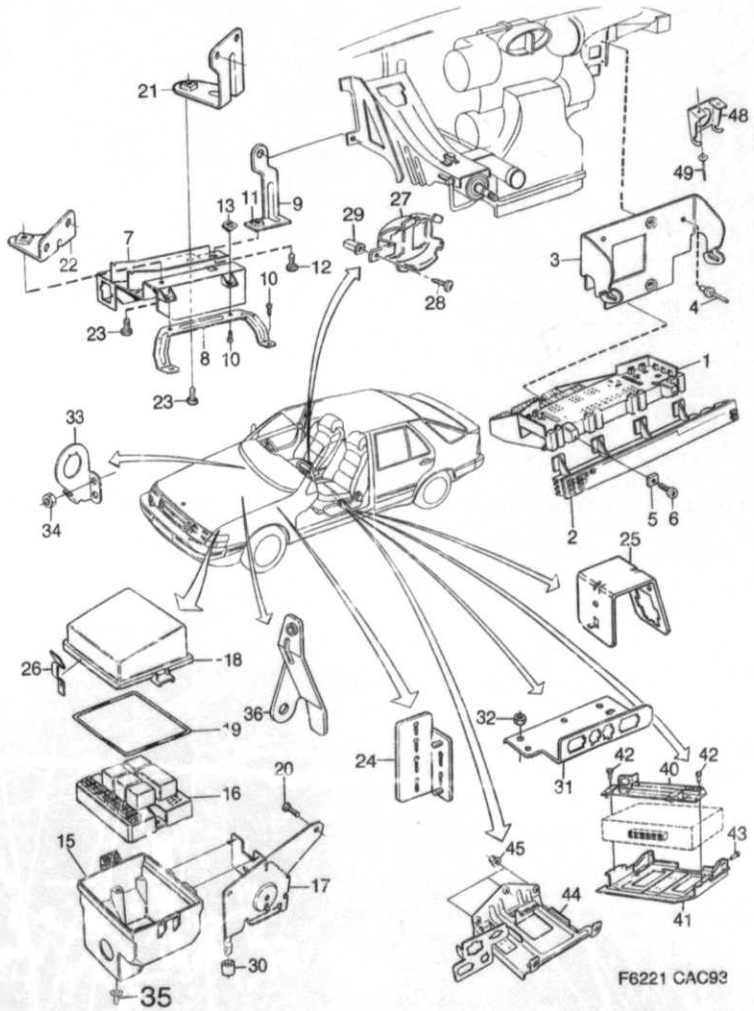

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0360	33	40 60 851		149)	1	Bracket	Hållare	4
0365	33	41 76 137		150)-1991	1	Bracket	Hållare	4
0370	34	*79 75 170*		-1991 NLS - USE 7982366	2	Screw	Skruv	5
0380	35	71 16 452			1	Draining plug	Dräneringspluq	5
0390	36	41 74 090		1991-, B234 TURBO	1	Stay	Stag	5
0400						plus wire	pluskabel	
0405	36	44 32 589		1993, TURBO	1	Stay	Stag	5
0406						plus wire	pluskabel	
0410	37	41 74 835		1992-	1	Bracket	Hållare	5
0420	38	79 77 358		1992-	2	Press nut	Pressmutter	5
0430	39	79 22 420		1992-	2	Screw	Skruv	5
0440	40	40 22 471		-1991	1	Bracket	Fäste	5
0450	41	40 21 523		-1991	1	Plate	Platta	5
0460	42	79 22 347		-1991	2	Screw	Skruv	5
0470	43	79 75 576		-1991	2	Nut	Mutter	5
0480	44	41 80 610		1992-	1	Bracket	Konsol	5
0490	45	40 87 128		1992-	3	Plastic nut	Plastmutter	5

149. Ch --M1006628, --M2004362.
150. Ch M1006629--, M2004363--.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-H24

2-102

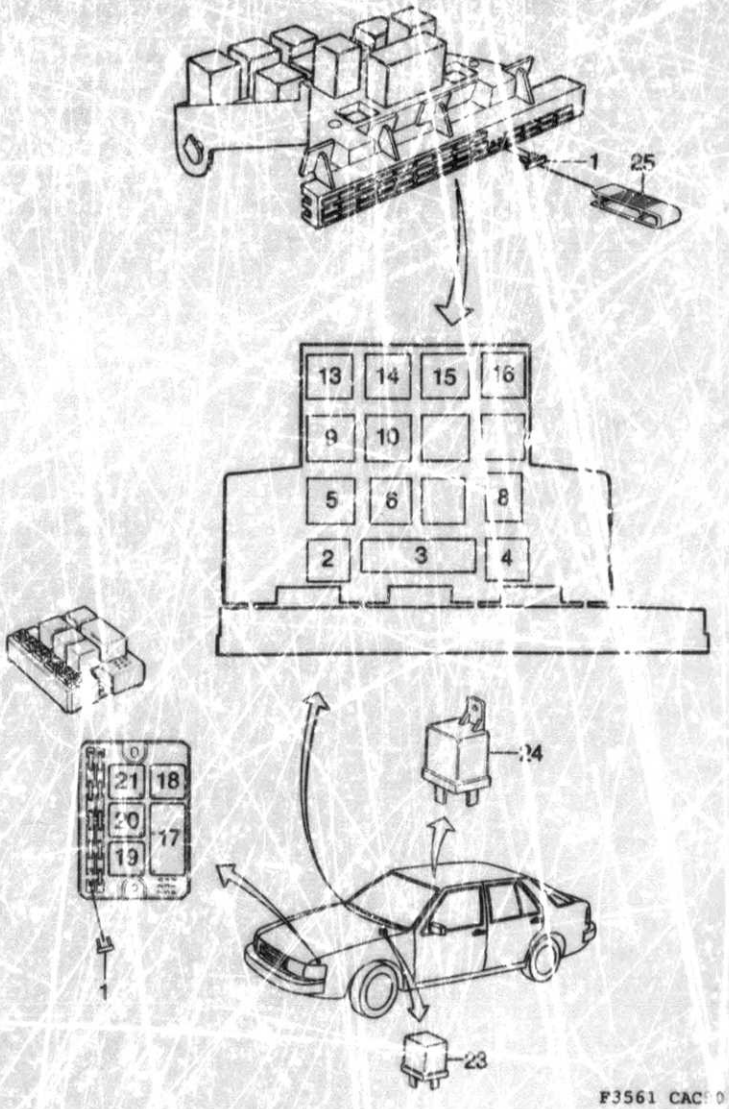

F3561 CAC 0

1240	Pos	Fig. No/Art.nr	K S	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070								
0080	2	95 63 313		US	1	Buzzer seat belt warning	Summer bältesvarning	5
0085								
0090	3	95 64 147		SE, F, ME, FE, JP, GB, AU	1	Relay bulb check	Relä lampkontroll	5
0095								
0100	3	95 64 154		EU	1	Relay bulb check	Relä lampkontroll	5
0115								
0120	3	95 64 139		19)	1	Relay bulb check	Relä lampkontroll	5
0125								
0130	4	85 22 310			1	Relay horn	Relä signalhorn	3
0135								
0140	5	95 19 133			1	Relay rear window	Relä bakruta	4
0145								
0150	5	85 22 310		26)	1	Relay rear window	Relä bakrute	3
0160								
0170	6	95 13 219		5), AC, ACC NLS - USE 4179925	1	Relay	Relä	5
0175								
0180	6	95 63 321		4), AC, ACC NLS - USE 4173933	1	Relay	Relä	3
0185	6	85 36 401		B234, AC, ACC	1	Relay	Relä	3
0190	8	85 22 061			1	Relay starter switch	Relä tändningslås	5
0195								
0200	9	85 36 401			1	Relay LH-system	Relä LH-system	3
0205								
0210	10	85 36 401			1	Relay fuel pump	Relä bränslepump	3
0215								
0240	13	85 53 463			1	Relay intermittent wiper	Relä intervallfortkare	6
0245								
0250	14	95 16 099			1	Relay interior illum.	Relä innerbelysning	4
0255								
0260	15	85 83 627			1	Flasher relay	Blinkrelä	2
0270	16	95 55 390		C4	1	Relay daylight driving lights	Relä varselljus	9
0275								
0280	17	95 53 546			1	Relay light	Relä ljus	2
0285								
0290	17	95 66 647		SE, CA	1	Relay light	Relä ljus	2
0295								
0300	18	95 24 836		NL - USE 4109070	1	Relay bulb check	Relä lampkontroll	5
0305								
0310	19	85 22 310			1	Relay front fog light	Relä dimstrålkastare	3
0315								
0320	21	85 22 310		SE, FI, EU, GB	1	Relay cooling fan	Relä kylfläkt	3
0325								
0330	20	95 63 33[illegible]		65), US, CA, JP, AU, ME, FE	1	Relay cooling fan	Relä kylfläkt	4
0340								
0350	21	85 36 4[illegible]			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	3
0355								
0370	23	85 2[illegible] 310		5,28), LH2.2 See page 2-175, 1-J08	1	Relay	Relä	3
0380								
0390	24			See page 8A-015, 5-A16	X	Relay sun roof	Relä soltak	
0400								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
7. High mounted stop light. Högt monterat stoppljus.
8. For cars with ACC. För bilar med ACC.
28. Part of choke kit 89 82 123. Del av choksats 89 82 423.
65. Timer relay. Tidrelä.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-E04
Complete sets	2-E2[illegible]

2-I04

Relays and fuses
1990

Reläer och säkringar
1990

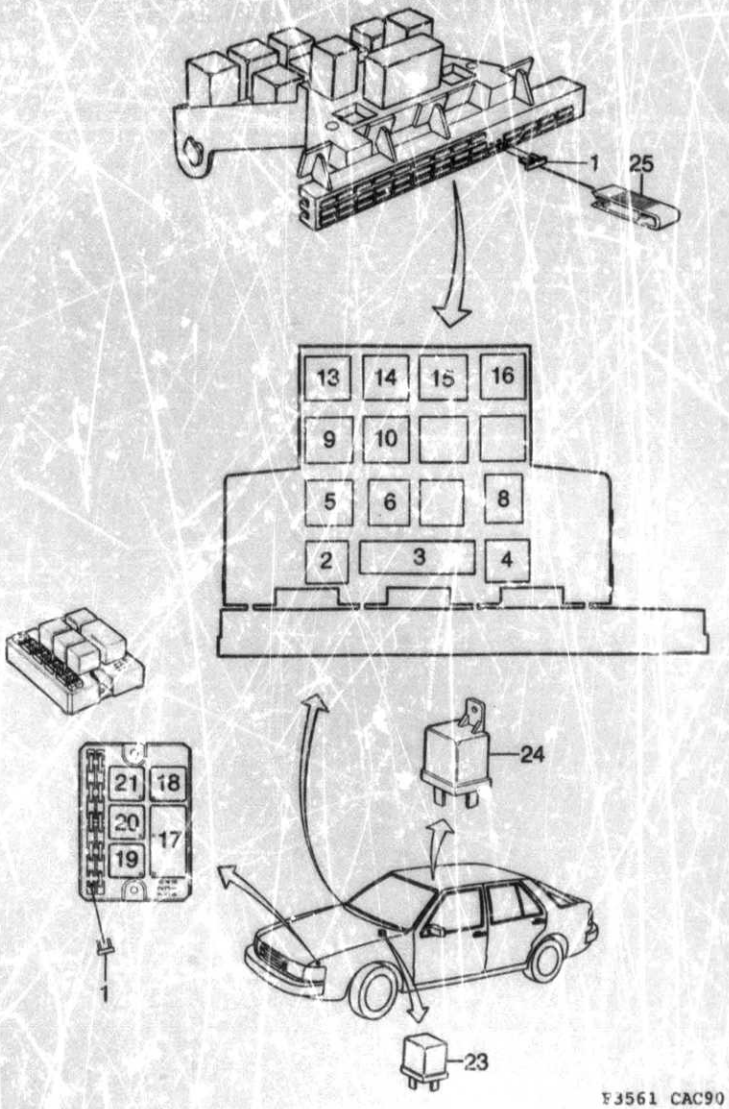

F3561 CAC90

1240	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	25	65 97 636			1	Fuse clip	Säkringsklämma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-106

Relays and fuses 1991

Reläer och säkringar 1991

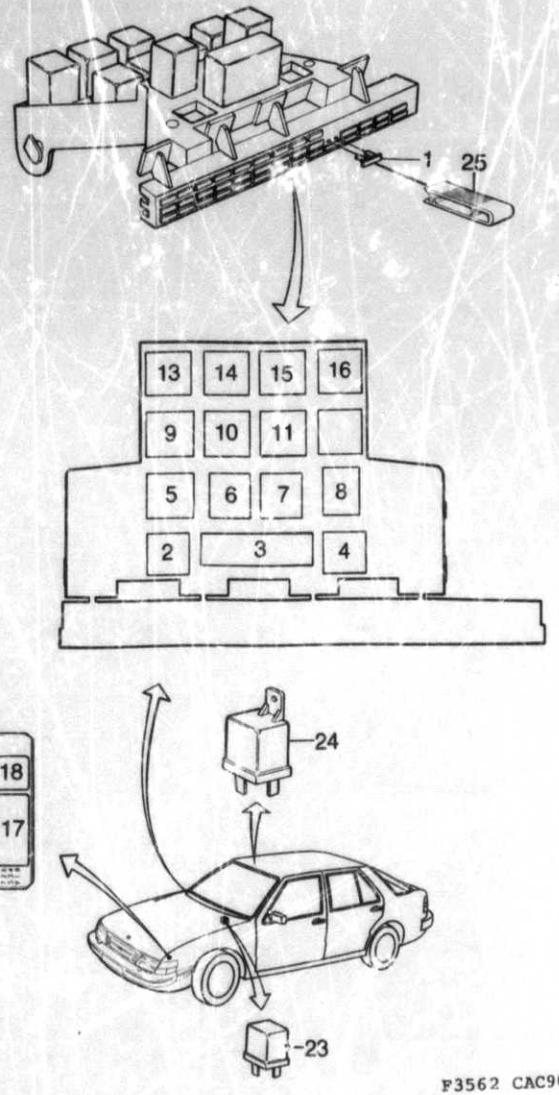

F3562 CAC90

1242	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070								
0080	2	95 63 313		US	1	Buzzer seat belt warning	Summer bältesvarning	5
0085								
0110	3	95 64 154		EU	1	Relay bulb check	Relä lampkontroll	5
0115								
0120	3	95 64 139		19)	1	Relay bulb check	Relä lampkontroll	5
0125								
0130	4	85 22 310			1	Relay horn	Relä signalhorn	3
0135								
0140	5	95 19 133		26)	1	Relay rear window	Relä bakruta	4
0145								
0150	5	85 22 310			1	Relay rear window	Relä bakruta	2
0160								
0170	6	85 36 401		5), AC, ACC	1	Relay	Relä	3
0180	6	95 63 321 4179933		4), AC, ACC NLS - USE	1	Relay	Relä	3
0180								
0181	6	85 36 401		TCS, AC, ACC	1	Relay	Relä	3
0182	6	85 36 401		B234, AC, ACC	1	Relay	Relä	3
0185	7	85 22 310		A	1	Relay reverse lamp	Relä backlampa	3
0196								
0190	8	95 22 061			1	Relay starter switch	Relä tändningslås	5
0195								
0200	9	85 36 401			1	Relay LH-system	Relä LH-system	3
0205								
0210	10	85 36 401			1	Relay fuel pump	Relä bränslepump	3
0215								
0220	11	85 22 310		ETS	1	Relay main relay	Relä huvudrelä	3
0221								
0240	13	85 53 463			1	Relay intermittent wiper	Relä intervalltorkare	6
0245								
0250	14	95 15 099		65)	1	Relay interior illum.	Relä innerbelysning	4
0255								
0260	15	85 83 627			1	Flasher relay	Blinkrelä	2
0270	16	95 56 390		US, CA	1	Relay daylight driving lights	Relä varselljus	9
0275								
0280	17	95 66 647			1	Relay light	Relä ljus	2
0285								
0300	18	*95 24 836*		NLS - USE 4109070	1	Relay bulb check	Relä lampkontroll	5
0305								
0310	19	85 22 310			1	Relay front fog light	Relä dimstrålkastare	3
0315								
0320	20	85 22 310			1	Relay cooling fan	Relä kylfläkt	3
0325								
0350	21	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
0355								
0370	23	85 22 310		5,28), LH2.2 See page 2-175, 1-J08	1	Relay	Relä	3
0380	24			See page 8A-015, 5-A16	X	Relay sun roof	Relä soltak	
0390								
0400								
0410	25	85 87 536			1	Fuse clip	Säkringsklämma	5

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
19. High mounted stop light. Högt monterat stoppljus.
26. For cars with ACC. För bilar med ACC.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
65. Timer relay. Tidrelä.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-108

Relays and fuses
1992

Reläer och säkringar
1992

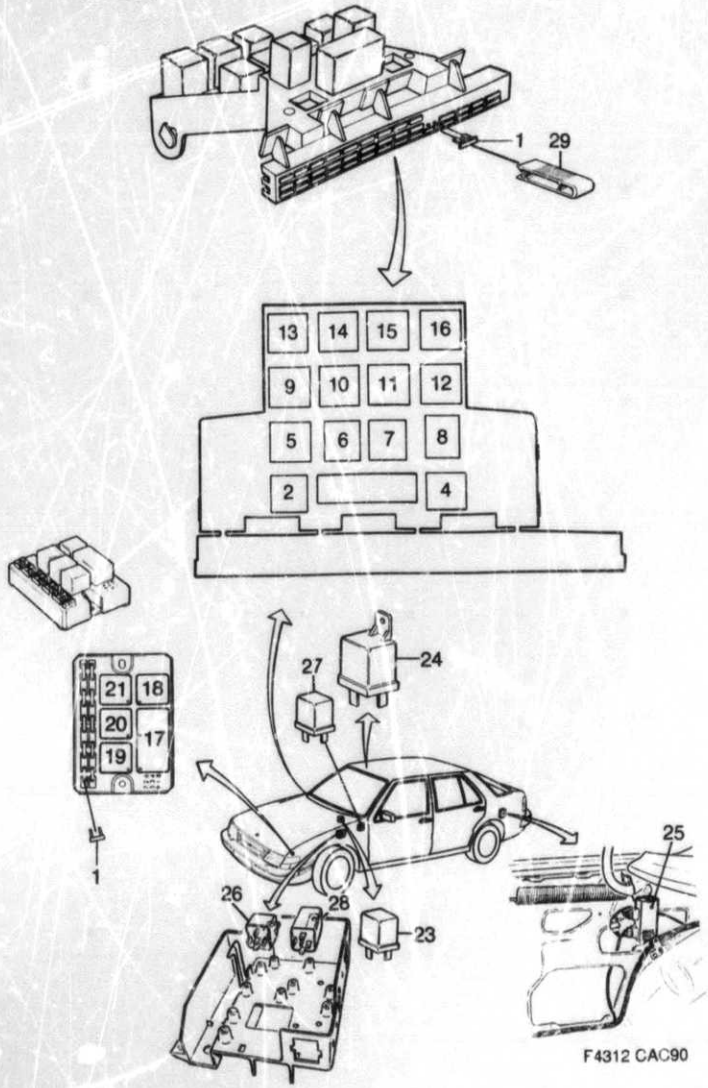

F4312 CAC90

1244	Pos	Part No/Art nr	K 5	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070								
0080	2	95 63 313		US	1	Buzzer	Summer	5
0090						seat belt warning	bältesvarning	
0100	4	85 22 310			1	Relay	Relä	3
0110						horn	signalhorn	
0120	5	95 19 133			1	Relay	Relä	4
0130						rear window	bakruta	
0140	5	85 22 310		26)	1	Relay	Relä	3
0150						rear window	bakruta	
0160	6	85 36 401		5), AC, ACC	1	Relay	Relä	3
0170	6	*95 63 321*		4,196), AC, ACC NLS - USE 4179933	1	Relay	Relä	3
0175	6	41 79 933		4,197), AC, ACC	1	Relay	Relä	3
0180	6	85 36 401		TCS, AC, ACC	1	Relay	Relä	3
0190	6	85 36 401		B234, AC, ACC	1	Relay	Relä	3
0200	7	85 22 310		A	1	Relay	Relä	3
0210						reverse lamp	backlampa	
0220	8	95 22 061			1	Relay	Relä	5
0230						starter switch	tändningslås	
0240	9	85 36 401			1	Relay	Relä	3
0250						LH-system	LH-system	
0260	10	85 36 401			1	Relay	Relä	3
0270						fuel pump	bränslepump	
0280	11	85 22 310		ETS	1	Relay	Relä	3
0290						main relay	huvudrelä	
0300	12	85 22 310			1	Relay	Relä	3
0310						fog light	dimljus	
0320	13	85 53 463			1	Relay	Relä	6
0330						intermittent wiper	intervalltorkare	
0340	14	95 15 099		65)	1	Relay	Relä	4
0350						interior illum.	innerbelysning	
0360	15	41 11 522			1	Flasher relay	Blinkrelä	2
0370	15	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0380	16	95 56 390		US, CA	1	Relay	Relä	9
0390						daylight driving lights	varselljus	
0400	16	85 53 463			1	Relay	Relä	6
0410						rear window wiper	bakrutetorkare	
0420	17	95 66 647			1	Relay	Relä	2
0430						light	ljus	
0440	18	41 09 070			1	Relay	Relä	5
0450						bulb check	lampkontroll	
0460	19	85 22 310		5CS	1	Relay	Relä	3
0470						daylight driving lights	varselljus	
0480	20	85 22 310			1	Relay	Relä	3
0490						cooling fan	kylfläkt	
0500	20	95 63 339		65), BR	1	Relay	Relä	4
0510						cooling fan	kylfläkt	
0520	21	95 22 061			1	Relay	Relä	5
0530						cooling fan, 2-step	kylfläkt, 2-steg	

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
196. Ch -N1033483.
197. Ch N1033484-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-I10

Relays and fuses
1992

Reläer och säkringar
1992

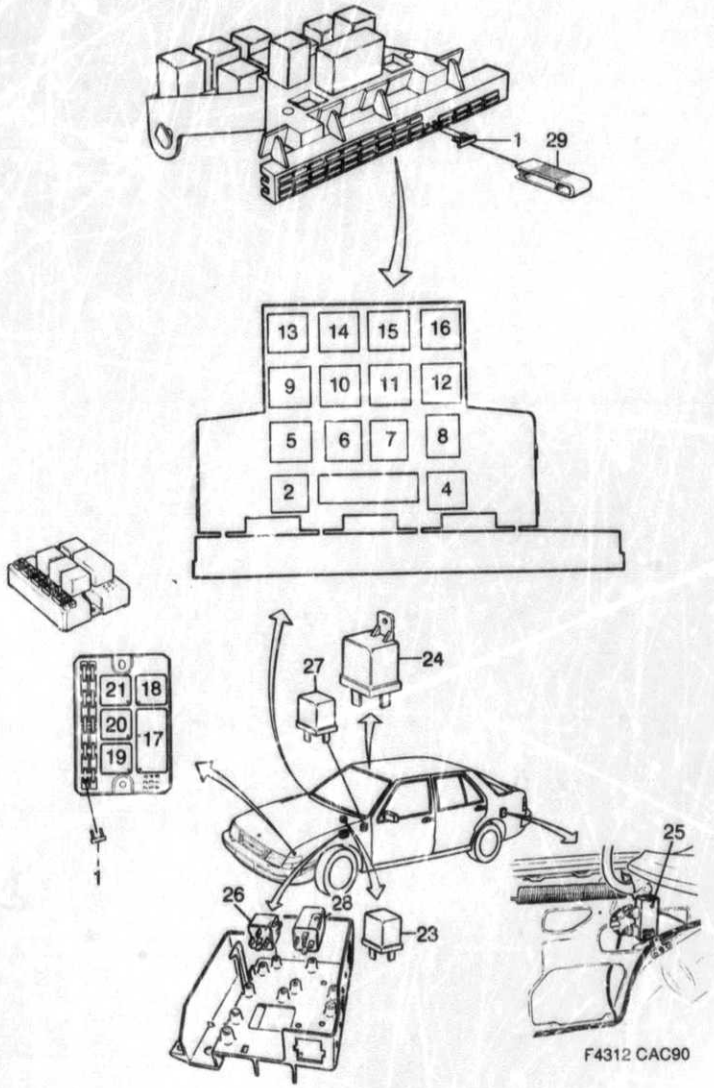

1244 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540 23	85 [illegible] 310		5,28), LH2.2	1	Relay	Relä	3
0550			See page 2-175, 1-J08				
0560 24			See page 8A-015, 5-A16	X	Relay	Relä	
0570					sun roof	soltak	
0580 25	41 09 096		3,168), EU	1	Relay	Relä	5
0590					bulb check	lampkontroll	
0600 25	41 09 088		3,19)	1	Relay	Relä	5
0610					bulb check	lampkontroll	
0620 26	95 63 099			1	Relay	Relä	5
0630					rear window wiper	bakrutetorkare	
0640 27	41 13 163		JP	1	Relay	Relä	3
0650					overheated catalytic conv	överhettad katalysator	
0655 28	43 50 799		B234 TURBO, ME	1	Relay	Relä	5
0656					lambda sonde	lambdasond	
0657 28	43 50 799		198), B234 TURBO, BR, PA	1	Relay	Relä	5
0658					lambda sonde	lambdasond	
0660 29	85 87 636			1	Fuse clip	Säkringsklämma	5

3. Rear. Bakre.
5. Without catalytic converter. Utan katalytisk reaktor.
19. High mounted stop light. Högt monterat stoppljus.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
168. Without high mounted stop light. Utan högt monterat stoppljus.
198. Ch N1034002-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-I12

Relays and fuses
1993

Reläer och säkringar
1993

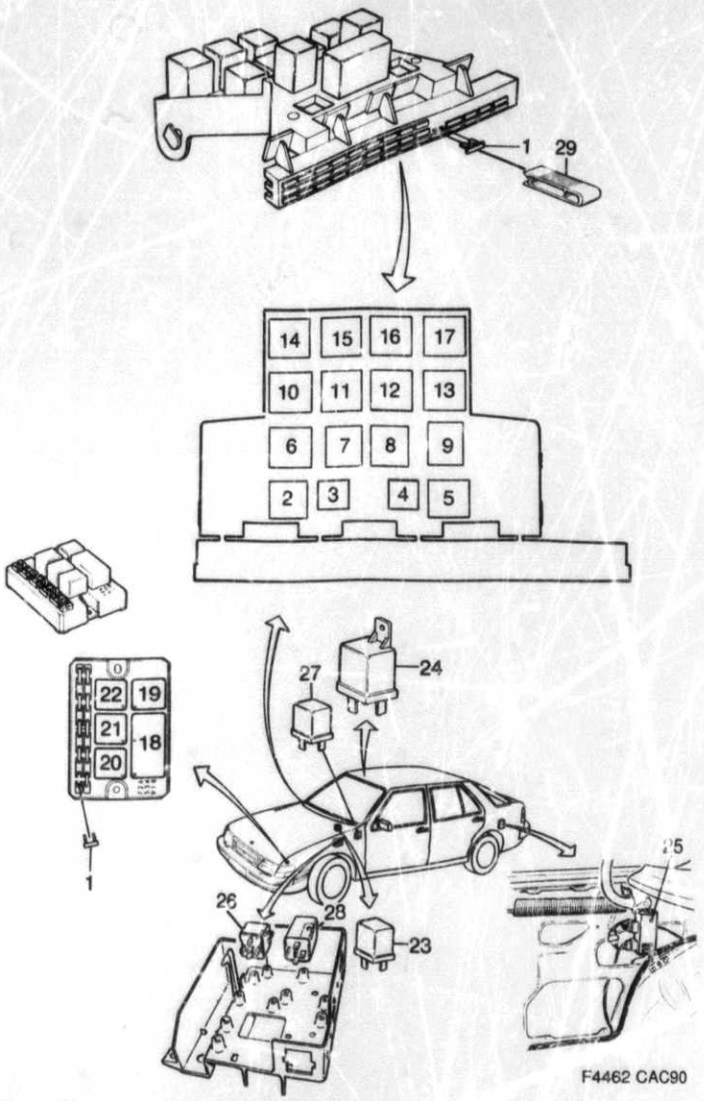

F4462 CAC90

1246	Pos	Part No/Art no	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070								
0080	2	95 63 313		US	1	Buzzer seat belt warning	Summer bältesvarning	5
0090								
0100	3	85 22 310		204), AC, ACC	1	Relay pressure monitor	Relä tryckvakt	3
0110								
0120	4	85 53 463			1	Relay rear window wiper intermittent wiper	Relä bakrutetorkare intervalltorkare	6
0130								
0140								
0150	5	85 22 310			1	Relay horn	Relä signalhorn	3
0160								
0170	6	95 19 133			1	Relay rear window	Relä bakruta	4
0180								
0190	6	85 22 310		26)	1	Relay rear window	Relä bakruta	3
0200								
0210	7	85 36 401		5,204), B202, AC, ACC	1	Relay	Relä	3
0220	7	41 79 933		4,204), B202, AC, ACC	1	Relay	Relä	3
0230	7	85 36 401		204), TCS, AC, ACC	1	Relay	Relä	3
0240	7	85 36 401		204), B234, AC, ACC	1	Relay	Relä	3
0250	8	85 22 310		A	1	Relay reverse lamp	Relä backlampa	3
0260								
0270	9	95 22 061			1	Relay starter switch	Relä tändningslås	5
0280								
0290	10	85 36 401			1	Relay LH-system	Relä LH-system	3
0300								
0310	11	85 36 401			1	Relay fuel pump	Relä bränslepump	3
0320								
0330	12	85 22 310		ETS	1	Relay main relay	Relä huvudrelä	3
0340								
0350	13	85 22 310			1	Relay fog light	Relä dimljus	3
0360								
0370	14	85 53 463			1	Relay intermittent wiper	Relä intervalltorkare	6
0380								
0390	15	95 15 099		65)	1	Relay interior illum.	Relä innerbelysning	4
0400								
0410	16	41 11 522			1	Flasher relay	Blinkrelä	2
0420	16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0430	16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
0440	17	95 66 390		US, CA	1	Relay daylight driving lights	Relä varselljus	9
0450								
0460	18	95 66 647			1	Relay light	Relä ljus	2
0470								
0480	19	41 09 070			1	Relay bulb check	Relä lampkontroll	5
0490								
0500	20	85 22 310		5CS	1	Relay daylight driving lights	Relä varselljus	3
0510								
0520	21	85 22 310			1	Relay cooling fan	Relä kylfläkt	3
0530								
0540	21	95 63 339		65), BR	1	Relay cooling fan	Relä kylfläkt	4
0550								
0560	22	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
0570								

4. With catalytic converter. Med katalytisk reaktor.
5. Without catalytic converter. Utan katalytisk reaktor.
26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-I14

Relays and fuses
1993

Reläer och säkringar
1993

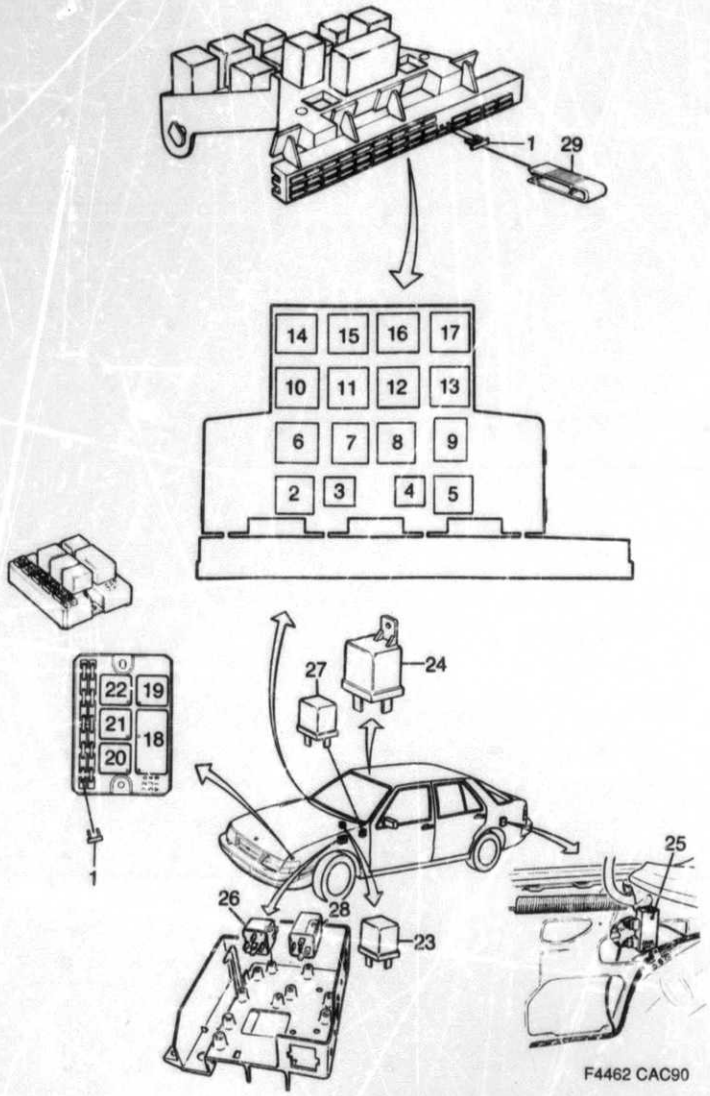

F4462 CAC90

1246	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	23	85 22 310		5,28), UH2.2	1	Relay	Relä	3
0590				See page 2-175, 1-J08				
0600	24			See page 8A-015, 5-A16	X	Relay	Relä	
0610						sun roof	soltak	
0620	25	41 09 096		3,168), EU	1	Relay	Relä	5
0630						bulb check	lampkontroll	
0640	25	41 09 088		3,19)	1	Relay	Relä	5
0650						bulb check	lampkontroll	
0660	26	95 63 099			1	Relay	Relä	5
0670						rear window wiper	bakrutetorkare	
0680	27	41 13 163		JP	1	Relay	Relä	3
0690						overheated catalytic conv	överhettad katalysator	
0700	28	95 63 099		A, US, CA	1	Relay	Relä	5
0710						parking pawl	parkeringsspärr	
0720	28	43 50 799		B234 TURBO, ME	1	Relay	Relä	5
0730						lambda sonde	lambdasond	
0740	28	43 50 799		B234 TURBO, BR, PA	1	Relay	Relä	5
0750						lambda sonde	lambdasond	
0760	29	85 97 636			1	Fuse clip	Säkringskiämma	5


3. Rear. Bakre.
5. Without catalytic converter. Utan katalytisk reaktor.
19. High mounted stop light. Högt monterat stoppljus.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
168. Without high mounted stop light. Utan högt monterat stoppljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

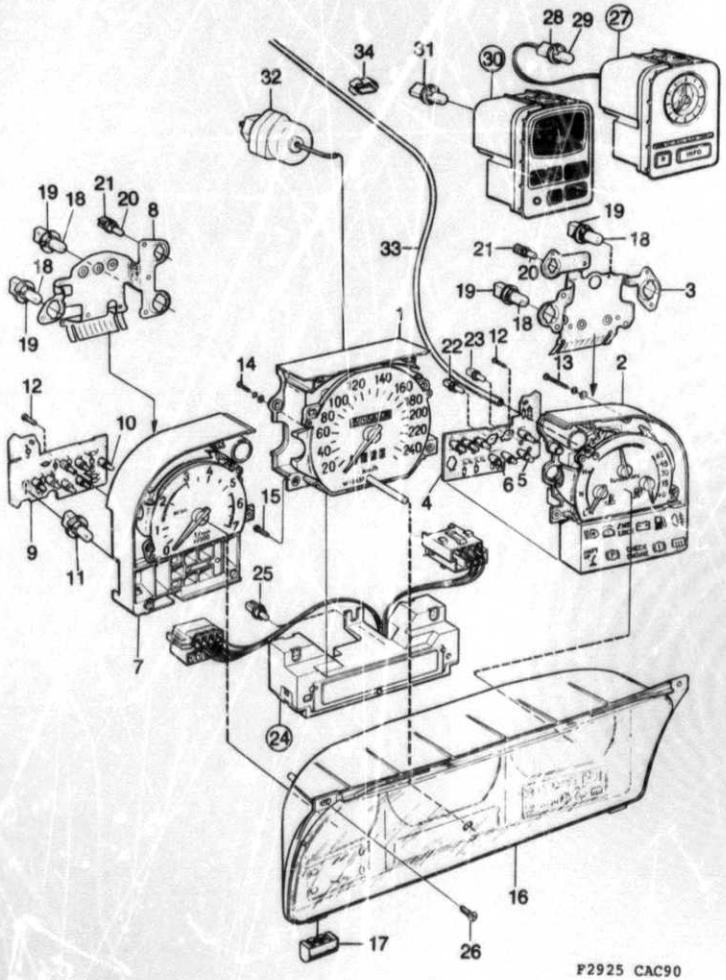

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 62 626		7), TURBO, 240 KM/H, W=0,637, SE, FI, EU, ME FE, JP, CA, AU	1	Speedometer	Hastighetsmätare	4
0040	1	40 62 634		7), I, 200 KM/H, W=0,637 SE, FI, EU, ME, FE, JP, CA, AU	1	Speedometer	Hastighetsmätare	4
0080	1	40 62 667		TURBO, 135 MPH, W=1,026, WH=1,045, US	1	Speedometer	Hastighetsmätare	4
0100	1	40 62 659		I, 135 MPH, W=1,026, US	1	Speedometer	Hastighetsmätare	4
0120	1	40 62 642		140 MPH, W=1,026, GB	1	Speedometer	Hastighetsmätare	4
0140	1	40 62 675		7), 4D, TURBO, 240 KM/H, W=0,637, WH=0,620, SE, FI, EU, ME, FE, JP, CA, AU	1	Speedometer	Hastighetsmätare	4
0170	1	40 62 683		7), 4D, I, 200 KM/H, W=0,637, WH=0,620, SE, FI, EU, ME, FE, JP, CA, AU	1	Speedometer	Hastighetsmätare	4
0210	1	40 62 709		4D, 135 MPH, W=1,026, WH=1,000, US	1	Speedometer	Hastighetsmätare	4
0230	1	40 62 691		4D, 140 MPH, W=1,026, WH=1,000, GB	1	Speedometer	Hastighetsmätare	4
0260	2	40 62 162		7), -1990, TURBO, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0280	2	41 74 371		7), 1991-, TURBO, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0300	2	40 62 196		1990, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0305	2	41 74 405		1991-, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0310	2	40 62 170		-1990, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0320	2	41 74 389		1991-, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0330	2	40 62 188		1990, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0335	2	41 74 397		1991-, TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0337	2	40 84 828		TURBO, LA	1	Combined instrument	Kombinationsinstrument	4
0350	2	40 62 204		7), -1990, I, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0370	2	41 10 672		7), 1991-, I, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
035		40 62 238		I, US	1	Combined instrument	Kombinationsinstrument	4
0		40 62 212		-1990, I, GB	1	Combined instrument	Kombinationsinstrument	4
		41 10 680		1991-, I, GB	1	Combined instrument	Kombinationsinstrument	4
0430		40 62 220		I, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0436		95 05 629			1	.Foil	.Folie	5
043		40 84 844		151)	1	.Foil	.Folie	5
		95 65 326		-1990	1	.Circuit board	.Kretskort	6
0445		95 65 326		137), 1991-	1	.Circuit board	.Kretskort	6
0447	4	95 25 700		138), 1991-	1	.Circuit board	.Kretskort	6
0448	4	95 25 700		151)	1	.Circuit board	.Kretskort	6
0450	5	95 09 175		40/238 298 004	6	.Bulb	.Glödlampa	6
0455	5	95 09 175		151), 40/238 298 004	5	.Bulb	.Glödlampa	6
0460	6	95 14 894		40/238 303 002	3	.Bulb	.Glödlampa	6
0470	7	41 08 049		7), -1990, SE, FI, GB, EU, ME, FE	1	Tachometer	Varvräknare	4
0490	7	41 08 031		-1990, US, CA, AU	1	Tachometer	Varvräknare	4
0500	7	41 08 023		-1990, JP	1	Tachometer	Varvräknare	4

7. Also available as exchange unit. Finns även som utbytesenhet.
137. Part of 4062220, 4062238, 4174397 and 4174405. Del av 4062220, 4062238, 4174397 och 4174405.
136. Part of 4110672, 4110680, 4174371 and 4174389. Del av 4110672, 4110680, 4174371 och 4174389.
151. Part of 40 84 828 and 40 85 387. Del av 40 84 828 och 40 85 387.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-I18 Instrument -1991

Instrument -1991

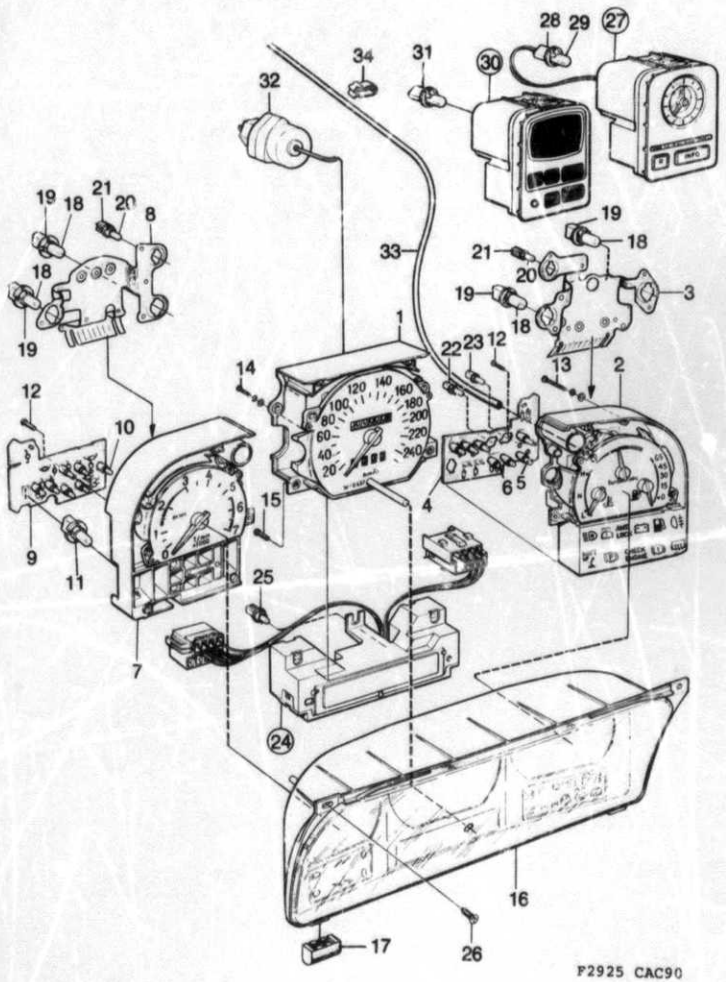

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	7	41 10 631		7), 1991	1	Tachometer	Varvräknare	4
0520	8	95 25 742			1	.Foil	.Folie	5
0530	9	40 69 969		1990	1	.Circuit board	.Kretskort	6
0535	9	41 10 623		1991	1	.Circuit board	.Kretskort	6
0540	10	95 09 175		40/238 298 004	9	.Bulb	.Glödlampa	6
0550	11	95 13 888		40/238 302 004	1	.Bulb	.Glödlampa	3
0560	12	95 06 619			3	Screw	Skruv	5
0570	13	95 05 553			6	Screw	Skruv	5
0580	14	95 05 561			2	Screw	Skruv	5
0590	15	95 08 852			2	Screw	Skruv	5
0600	16	40 68 078			1	Casing	Hus	6
0610	17	95 05 298			2	Support	Stöd	6
0620	18	95 05 116		40/238 288 005	4	Bulb	Glödlampa	4
0630	19	95 05 520			4	Bulb socket	Lamphållare	4
0640	20	95 05 538			2	Bulb	Glödlampa	4
0650	21	95 05 546			2	Bulb socket	Lamphållare	4
0660	22	85 68 693		40/238 286 017	1	Bulb	Glödlampa	4
0670	23	85 66 853			1	Bulb	Glödlampa	4
0680	24	*95 29 645*		7), EDU 3, M NLS - USE 4437208	1	Display	Display	5
0690	24	*95 29 652*		7), EDU 3, A NLS - USE 4437216	1	Display	Display	5
0700	25	85 66 853			3	.Bulb	.Glödlampa	4
0710	26	79 70 536			2	Screw	Skruv	6
0720	27	95 13 334			1	Clock	Klocka	5
0730	28	95 05 520			1	.Bulb socket	.Lamphållare	4
0740	29	95 05 116		40/238 288 005	1	.Bulb	.Glödlampa	4
0750	30	*41 09 591*		7), DCC	1	Driving computer	Färddator	4
0760				See page 3A-215, 2-I24 NLS - USE 4110607				
0770	31	95 09 993		40/238 299 002	2	.Bulb	.Glödlampa	4
0780	32	91 23 324			1	Sensor	Givare	5
0782	33	91 36 243		5), 1991-, TURBO L=240 MM	1	Vaccum hose	Vakuumslang	5
0784	33	91 36 243		5), 1991-, TURBO, RHD, L=1160 MM	1	Vaccum hose	Vakuumslang	5
0786	34	71 08 491		5), 1991-, TURBO, RHD	1	Clamp	Klammer	5
0790				SCC	1	Driving computer kit	Färddator sats	
0795				See page 3A-215, 2-I24				
0800								
0810		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

2-I20 Instrument 1992-

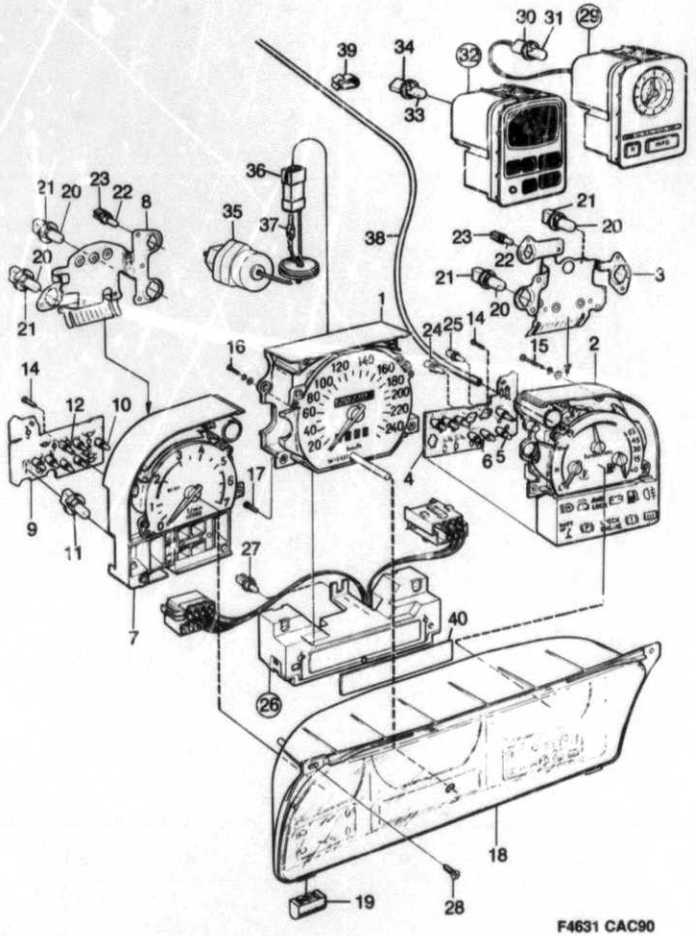

1255	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 84 075		7), TURBO, 240 KM/H, W=0,637, SE, EU, ME, CA, AU	1	Speedometer	Hastighetsmätare	4
0060	1	40 84 125		7), TURBO, 240 KM/H, W=0,637, WH=0,620, SE, EU, PA, ME, CA, AU	1	Speedometer	Hastighetsmätare	4
0140	1	40 84 133		7), I, 200 KM/H, W=0,637 WH=0,620, SE, EU. PA, ME CA, AU	1	Speedometer	Hastighetsmätare	4
0200	1	40 84 1[illegible]3		B202S, 200KM/H, W=0,637, WH=0,620, EU	1	Speedometer	Hastighetsmätare	4
0230	1	40 84 109		TURBO, 135 MPH, W=1,026, WH=1,045, US	1	Speedometer	Hastighetsmätare	4
0250	1	40 84 158		I, 135 MPH, W=1,026, WH=1,000, US	1	Speedometer	Hastighetsmätare	4
0300	1	40 84 091		TURBO, 140 MPH, W=1,026, GB	1	Speedometer	Hastighetsmätare	4
0340	1	40 84 141		I, 140 MPH, W=1,026, WH=1,000, GB	1	Speedometer	Hastighetsmätare	4
0390	2	41 74 371		7), TURBO, SE, FI, EU, ME, FE, JP	1	Combined instrument	Kombinationsinstrument	4
0420	2	41 74 405		TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0440	2	41 74 389		TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0460	2	41 74 397		213), TURBO, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0470	2	41 74 397		214)-1993, TURBO, CA	1	Combined instrument	Kombinationsinstrument	4
0490	2	41 74 371		214)-1993, TURBO, AU	1	Combined instrument	Kombinationsinstrument	4
0500	2	40 84 828		TURBO, LA	1	Combined instrument	Kombinationsinstrument	4
0530	2	41 10 672		7), I, SE, FI, EU, ME, FE, JP B202S, EU	1	Combined instrument	Kombinationsinstrument	4
0570	2	40 84 224		163), I, SE, EU, ME, FE	1	Combined instrument	Kombinationsinstrument	4
0580	2	40 84 232		163), I, GB	1	Combined instrument	Kombinationsinstrument	4
0590	2	41 10 680		I, B202S, GB	1	Combined instrument	Kombinationsinstrument	4
0610	2	40 62 238		I, US	1	Combined instrument	Kombinationsinstrument	4
0630	2	40 62 220		213), I, AU, CA	1	Combined instrument	Kombinationsinstrument	4
0640	2	40 62 220		214), I, CA	1	Combined instrument	Kombinationsinstrument	4
0660	2	41 10 672		214), I, AU	1	Combined instrument	Kombinationsinstrument	4
0670	3	95 05 629			1	.Foil	.Folie	5
0680	3	40 84 240		164,177)	1	.Foil	.Folie	5
0690	3	40 84 844		151)	1	.Foil	.Folie	5
0720	4	95 65 326		137)	1	.Circuit board	.Kretskort	6
0730	4	95 25 700			1	.Circuit board	.Kretskort	6
0760	5	95 09 175		40/238 298 004	6	.Bulb	.Glödlampa	6
0770	5	95 09 175		151), 40/238 298 004	5	.Bulb	.Glödlampa	6
0780	6	95 14 894		40/238 303 002	3	.Bulb	.Glödlampa	6
0790	7	40 84 067		7)	1	Tachometer	Varvräknare	4
0810	7	40 84 380		163)	1	Tachometer	Varvräknare	4
0820	8	95 25 742			1	.Foil	.Folie	5
0830	9	40 84 166			1	.Circuit board	.Kretskort	6


7. Also available as exchange unit. Finns även som utbytesenhet.
137. Part of 4062220, 4062238, 4174397 and 4174405. Del av 4062220, 4062238, 4174397 och 4174405.
151. Part of 40 84 828 and 40 85 387. Del av 40 84 828 och 40 85 387.
163. Without EDU. Utan EDU.
164. Part of 40 84 232. Del av 40 84 232.
177. Part of 40 84 224. Del av 40 84 224.
213. Ch --P1000716.
214. Ch P1000717--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7 B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

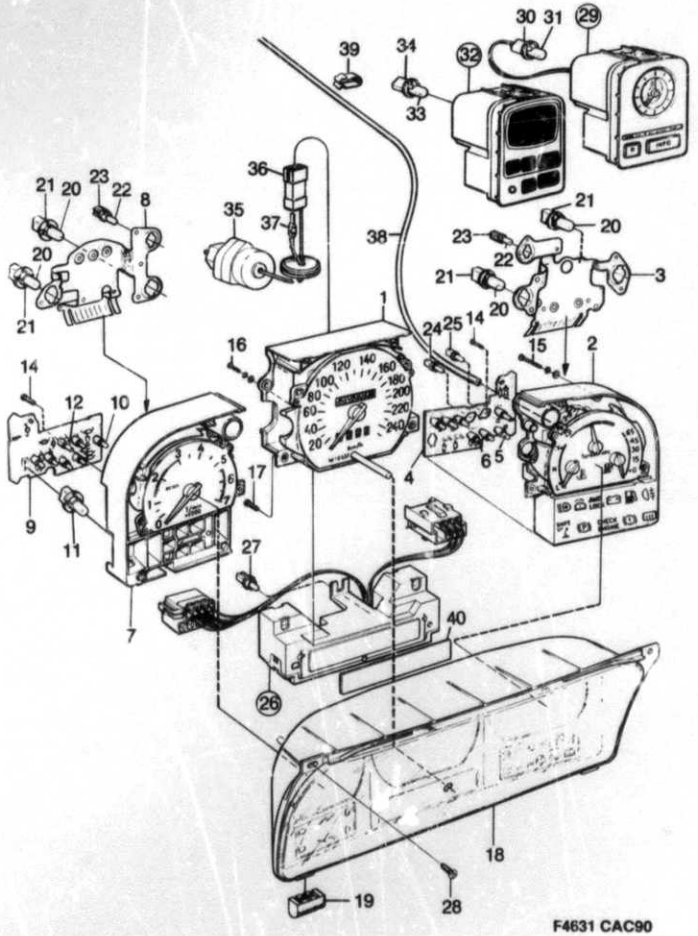

Instrument 1992-

1255	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0840	10	95 09 175		40/238 298 004	9	.Bulb	.Glödlampa	6
0850	11	95 13 888		40/238 302 004	1	.Bulb	.Glödlampa	3
0860	12	95 14 894			1	.Bulb	.Glödlampa	6
0870	14	95 06 619			3	Screw	Skruv	5
0880	15	95 05 553			6	Screw	Skruv	5
0890	16	95 05 561			2	Screw	Skruv	5
0900	17	95 08 862			2	Screw	Skruv	5
0910	18	40 68 078			1	Casing	Hus	6
0920	19	95 05 298			2	Support	Stöd	6
0930	20	95 05 116		40/238 288 005	4	Bulb	Glödlampa	4
0940	21	95 05 520			4	Bulb socket	Lamphållare	4
0950	22	95 05 538			2	Bulb	Glödlampa	4
0960	23	95 05 546			2	Bulb socket	Lamphållare	4
0970	24	85 68 693		40/238 286 017	1	Bulb	Glödlampa	4
0980	25	85 66 853			1	Bulb	Glödlampa	4
0990	26	*40 83 176*		7), -1992, EDU 3, M NLS - USE 4437208	1	Display	Display	5
0990								
1000	26	44 37 208		7), 1993, EDU 3, M	1	Display	Display	5
1010	26	*40 83 184*		7), -1992, EDU 3, A NLS - USE 4437216	1	Display	Display	5
1010								
1020	26	44 37 216		7), 1993, EDU 3, A	1	Display	Display	5
1030	27	85 66 853			3	.Bulb	.Glödlampa	4
1040	28	79 70 536			2	Screw	Skruv	6
1050	29	95 03 334			1	Clock	Klocka	5
1060	29	95 01 321		163)	1	Clock	Klocka	5
1070	30	95 05 520			1	.Bulb socket	.Lamphållare	4
1080	31	95 05 116		40/238 288 005	1	.Bulb	.Glödlampa	4
1090	32	41 10 607		7), -1993, SCC	1	Driving computer	Färddator	4
1100	33	40 84 547			2	.Bulb	.Glödlampa	4
1110	34	40 85 775			2	.Bulb socket	.Lamphållare	4
1120	35	40 83 804			1	Sensor	Givare	5
1130	36	41 13 262			1	.Connector housing 2-pole, male	.Kontakthus 2-polig, stift	4
1140								
1150	37	41 15 192			1	.Cable terminal	.Kabelsko	5
1160	38	91 36 243		5), TURBO, L=240 MM	1	Vaccum hose	Vakuumslang	5
1170	38	91 36 243		5), TURBO, RHD, L=1160MM	1	Vaccum hose	Vakuumslang	5
1180	39	71 08 491		5), TURBO, RHD	1	Clamp	Klammer	5
1190	40	40 84 752		163)	1	Cover washer	Täckbricka	5
1200				SCC	X	Driving computer kit	Färddator sats	
1210				See page 3A-215, 2-I24				
1220								
1230		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
163. Without EDU. Utan EDU.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24


Complete sets


2-124


Electrical system

Satser


Elektriskt system

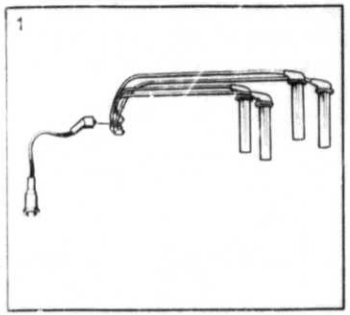


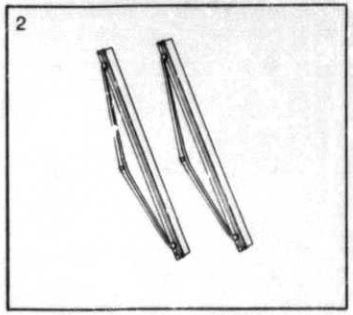

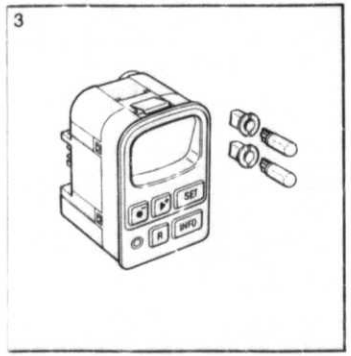



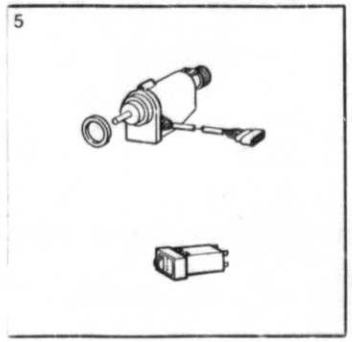

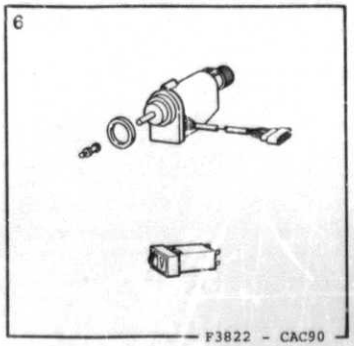

F3822 - CAC90

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 17 520			X	Kit ignition cables	Tändkabelsats	3
0020		93 90 840			1	.Ignition lead ignition coil	.Tändkabel tändspole	3
0030								
0040		75 04 483			1	.Ignition lead cylinder 1	.Tändkabel cylinder 1	3
0050								
0060		75 04 491			1	.Ignition lead cylinder 2	.Tändkabel cylinder 2	3
0070								
0080		75 04 509			1	.Ignition lead cylinder 3	.Tändkabel cylinder 3	3
0090								
0100		75 04 517			1	.Ignition lead cylinder 4	.Tändkabel cylinder 4	3
0110								
0120								
0130	2	*85 47 077*		1990, 5D	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0140				NLS - USE 9548042				
0150		*95 13 268*		1), (9120890) NLS - USE 4095063	2	.Wiper blade	.Torkarblad	2
0160								
0170	2	85 47 408		1990, 4D	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0180								
0190		91 20 882			2	.Wiper blade	.Torkarblad	2
0200								
0210	2	85 48 042		1991-	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0220								
0230		40 95 063			2	.Wiper blade	.Torkarblad	2
0240								
0250	2	85 48 299		5CS	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0260								
0270		90 82 587			2	.Wiper blade	.Torkarblad	2
0280								
0290	2	85 48 281		5CS, US	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0300								
0310		90 88 238			2	.Wiper blade	.Torkarblad	2
0320								
0330	2	85 47 408		US	X	Wiper blade kit headlamp wiper	Torkarbladssats strålkastartorkare	2
0340								
0350		91 20 882			2	.Wiper blade	.Torkarblad	2
0360								
0370	3	41 10 607		SCC	X	Driving computer	Färddator	4
0380		40 84 547			2	.Bulb	.Glödlampa	4
0390		40 85 775			2	.Bulb socket	.Lamphållare	4
0400								
0410	4	85 47 564			X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0420								
0430		95 26 310		1)	2	.Profile	.Profil	2
0440								
0450	4	44 48 064		221), PA	X	Profiled rubber kit windscreen wiper	Gummiprofilsats vindrutetorkare	2
0460								
0470		95 26 310		1)	2	.Profile	.Profil	2
0480								
0490	5	85 47 838		1990, 5D	X	Lamp adjustment kit	Ljusregleringssats	5
0500		95 27 904			1	.Switch	.Strömställare	3
0510		95 29 785			2	.Electric motor	.Elmotor	3
0520		95 03 327			1	..Contact housing 3-pole, female	..Kontakthus 3-polig, hylsa	4
0530								
0540		95 29 793			1	..Sealing ring	..Tätningsring	9
0550								
0560	6	85 47 846		1990, 4D	X	Lamp adjustment kit	Ljusregleringssats	5
0570		95 27 904			1	.Switch	.Strömställare	3
0580		95 66 662			2	.Electric motor	.Elmotor	3
0590		95 03 327			1	..Contact housing 3-pole, female	..Kontakthus 3-polig, hylsa	4
0600								

1. Not as separate spare part. Ej som separat reservdel.
221. Synthetic rubber. Syntetiskt gummi.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24


2-J02

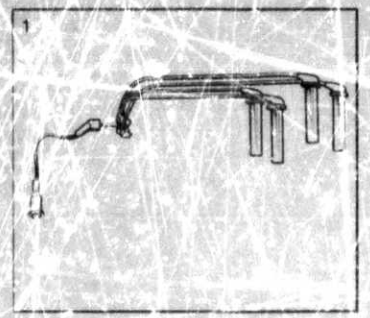

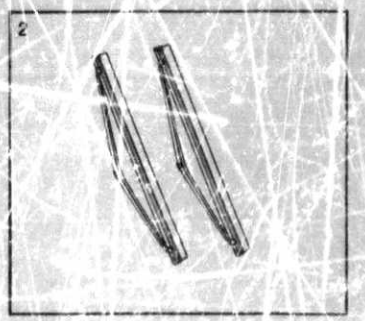

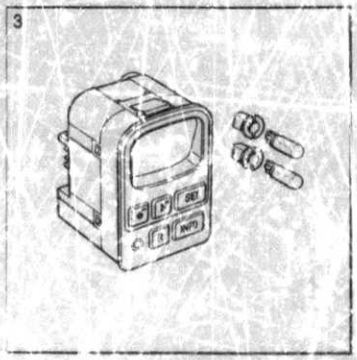

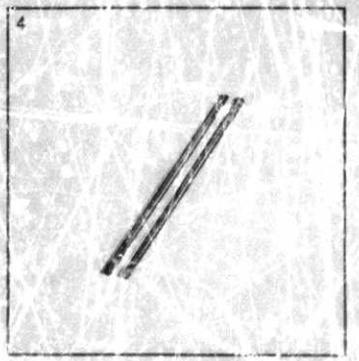

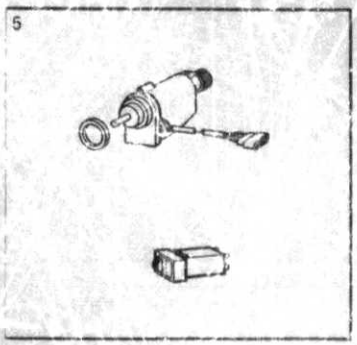



F3822 - 0AC90

Item	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
	95 29 793			1	.. Sealing ring	.. Tätningsring	9
	95 69 963			1	.. Adapter	.. Adapter	5
6	85 47 846		1991-	X	Lamp adjustment kit	Ljusregleringssats	5
	95 27 904			1	. Switch	. Strömställare	3
	95 66 662			2	. Electric motor	. Elmotor	3
	85 93 327			1	. Contact housing 3-pole, female	.. Kontakthus 3-polig, hylsa	4
	95 29 793			1	.. Sealing ring	.. Tätningsring	9
	95 69 963			1	.. Adapter	. Adapter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F14
Complete sets	2-J24

2-J04

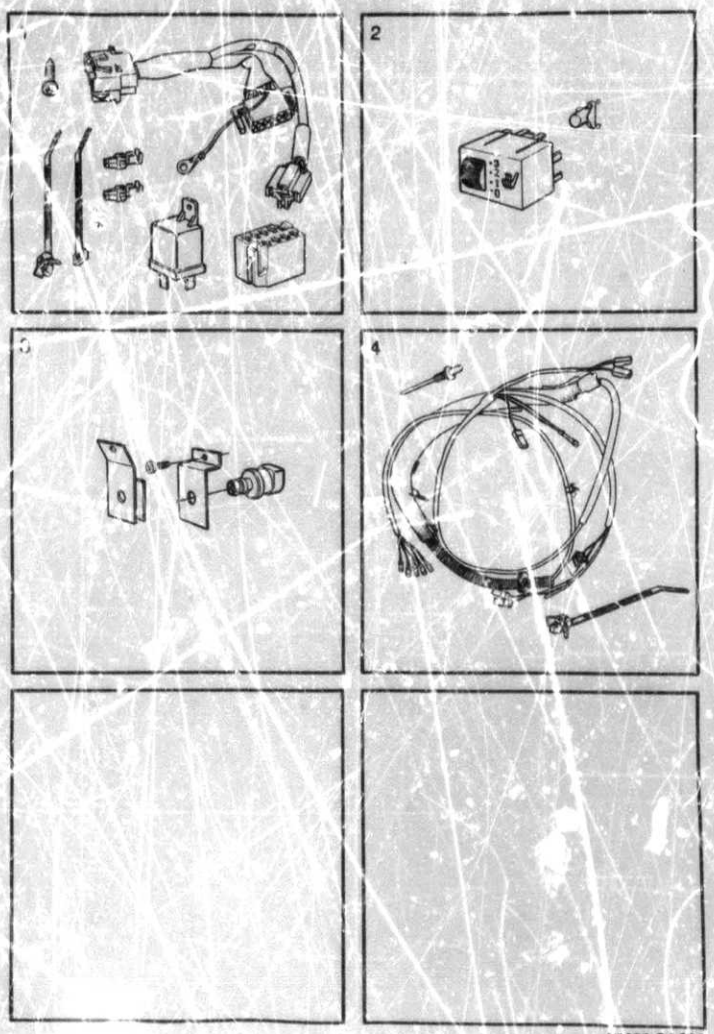

1510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010	1	85 48 075		97), A	X	Starter inhibitor kit	Startspärrsats	4
0020		79 70 601			1	. Screw	. Skruv	5
0030		79 71 864			1	. Tensioning band	. Spännband	5
0040		85 33 697			1	. Contact housing	. Kontakthus	4
0050		85 48 059		1)	1	. Cable harness	. Ledningsnät	5
0060		95 63 059			1	. Relay	. Relä	5
0070								
0080	2	40 84 554		147)	X	Switch button kit	Strömställarknapp sats	5
0090								
0100								
0110	3	85 48 471		27), 1	X	Temperature sensor kit	Temperaturgivarsats	9
0120		79 22 271			1	. Screw	. Skruv	5
0130		91 23 456			1	. Sensor	. Givare	4
0140		95 14 183			1	. Bracket	. Hållare	6
0150		95 69 751			1	. Bracket	. Hållare	6
0160								
0170	4	85 45 554		4D	X	Conversion kit boot lid	Ombyggnadssats bagageruмslucka	6
0180								
0190		43 53 538			1	. Cable cover	. Kabelhölje	4
0200		43 54 817			1	. Hose	. Slang	4
0210		79 78 034		NLS	1	. Blind rivet screw	. Blindnitskruv	5
0220		85 52 663			1	. Tensioning band	. Spännband	5

1. Not as separate spare part. Ej som separat reservdel.
27. For cars without ACC. För bilar utan ACC.
97. Ch J1014463–, J2007677–, J8000885–.
147. Rheostat. Reostat.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-F02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A11
Starter	2-A18
Ignition system	2-A22
Lighting	2-B10
Electrical equipment, other	2-D02
Wiring and fuses	2-F04
Complete sets	2-I24

3-A02

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

TABLE OF CONTENTS

Connectors		
Connectors etc, 1990	3B : 5	3-A06
Connectors etc, 1991	3B : 33	3-B10
Connectors etc, 1992	3B : 57	3-C10
Connectors etc, 1993	3B : 83	3-D12
Cable terminals		
Cable terminals, 1990	3B : 107	3-E12
Cable terminals, 1991	3B : 117	3-E22
Cable terminals, 1992	3B : 127	3-F08
Cable terminals, 1993	3B : 137	3-F18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1990	3B : 5	3-A06
Kontakthus etc, 1991	3B : 33	3-B10
Kontakthus etc, 1992	3B : 57	3-C10
Kontakthus etc, 1993	3B : 83	3-D12

Ledningsskor

Ledningsskor, 1990	3B : 107	3-E12
Ledningsskor, 1991	3B : 117	3-E22
Ledningsskor, 1992	3B : 127	3-F08
Ledningsskor, 1993	3B : 137	3-F18

SUMARIO

Contactores

Contactores etc, 1990	3B : 5	3-A06
Contactores etc, 1991	3B : 33	3-B10
Contactores etc, 1992	3B : 57	3-C10
Contactores etc, 1993	3B : 83	3-D12

Terminal cable


Terminal cable etc, 1990	3B : 107	3-E12
Terminal cable etc, 1991	3B : 117	3-E22
Terminal cable etc, 1992	3B : 127	3-F08
Terminal cable etc, 1993	3B : 137	3-F18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

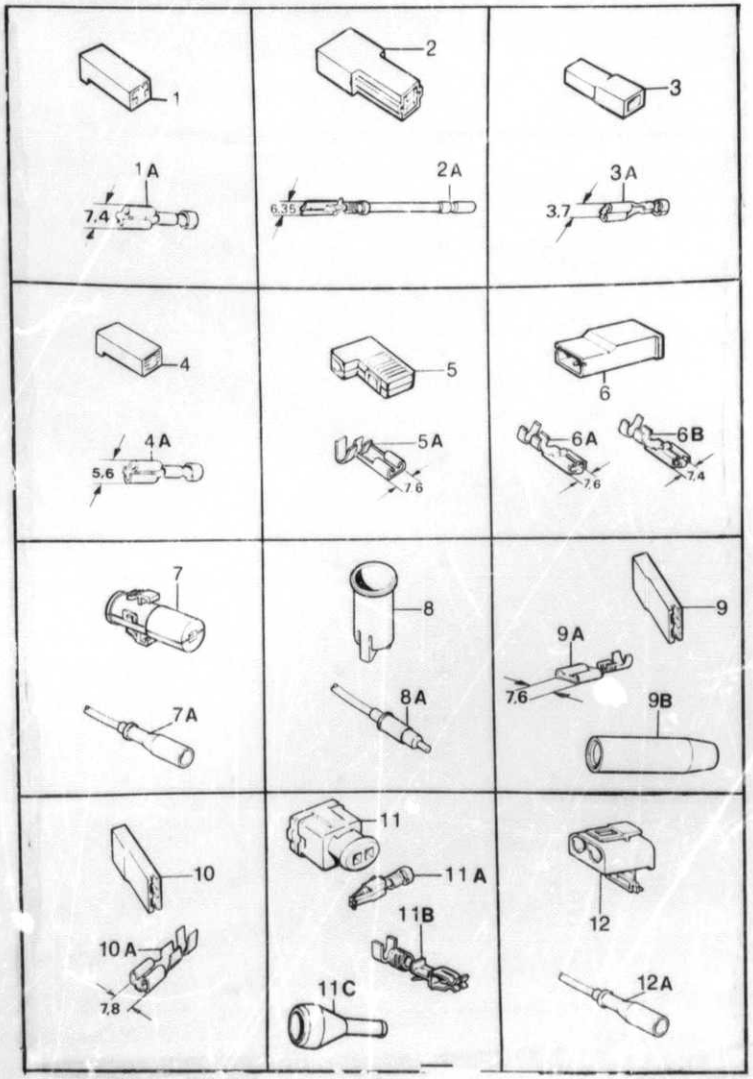

F1141 CAC90

Wiring and fuses

3-A06

Contact housing etc

1990

Ledningar och säkringar

Kontakthus etc

1990

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT	X	Contact housing	Kontakthus	4
0020				GEAR INDICATOR, MAKE-UP MIRROR, HIGH MOUNTED STOP LIGHT		1-pole, female	1-polig, hylsa	
0030								
0040								
0050	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0060	1A	85 22 534		AREA, 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0070								
0080	2	71 55 120		EL-MIRROR, EL-CENTRAL	X	Contact housing	Kontakthus	4
0090						1-pole, male	1-polig, stift	
0100	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0110								
0120	3	85 30 115		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0130						1-pole, male	1-polig, stift	
0140	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0150								
0160	4	85 33 184		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0170						1-pole, male	1-polig, stift	
0180	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	5	85 21 692		IGNITION COIL, SWITCH	X	Contact housing	Kontakthus	4
0210				BRAKE LIGHT, PRESSURE SWITCH, LIGHT ASH TRAY, LIGHT INSTEP, REAR DEMIST		1-pole, female	1-polig, hylsa	
0220								
0230								
0240								
0250	5A	85 22 526		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0260	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0270								
0280	6	85 41 229		SPOTLIGHT, SAFETY BELT WARNING, SWITCH SPOT-LIGHT, LIGHT INSTEP, SPEED CONTROL, LIGHT NUMBER PLATE	X	Sleeve	Isoleringshylsa	5
0290						1-pole, male	1-polig, stift	
0300								
0310								
0320								
0330	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0340	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	7	95 03 418		COMPRESSOR, JOINT PIECE	X	Connector housing	Skarvhus	4
0370						1-pole, female	1-polig, hylsa	
0380	7A	85 47 796			X	Connector	Skarvstycke	5
0390								
0400	8	95 03 426		IGNITION SYSTEM	X	Connector housing	Skarvhus	4
0410						1-pole, male	1-polig, stift	
0420	8A	85 47 770			X	Connector	Skarvstycke	5
0430								
0440	9	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, SWITCH HORN, HORN, LIGHT LUGGAGE COMPARTMENT, THEFT ALARM, SWITCH HAND BRAKE	X	Insulation	Isolering	4
0450						1-pole, female	1-polig, hylsa	
0460								
0470								
0480								
0490	9A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	9B	95 69 997			X	Protection	Skydd	4
0510								
0520	10	83 78 630		PEDAL CONTACT	X	Contact housing	Kontakthus	4
0530						2-pole, female	2-polig, hylsa	
0540	10A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	11	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, FUEL SYSTEM, PREHEATING LAMBDA, MAIN VALVE, VENTILATION, DUMP VALVE, COLD START VALVE, BY-PASS	X	Contact housing	Kontakthus	4
0570						2-pole, female	2-polig, hylsa	
0580								
0590								
0600								
0610								
0620								
0630	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A08

Contact housing etc
1990

Kontakthus etc
1990

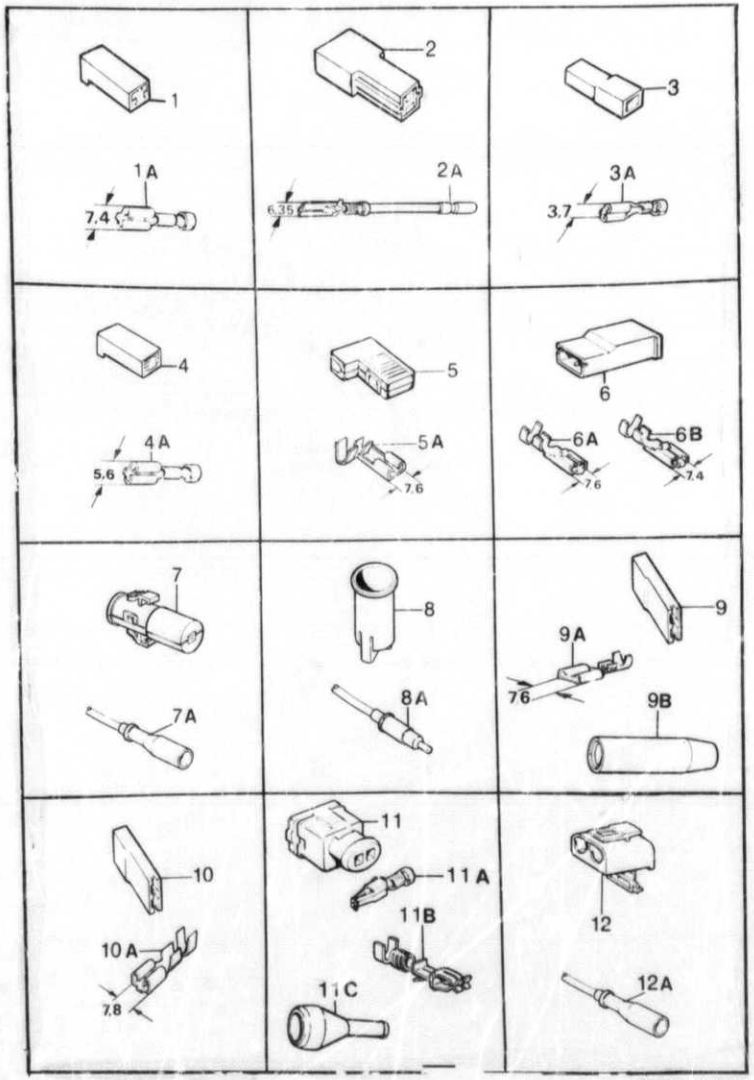

F1141 CAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0640								
0650	11C	85 21 619			X	Protection	Skydd	4
0660								
0670	12	95 03 319		EL. WINDOW REGULATOR, CENTRAL LOCK, STD FAN, WASHER PUMP, LEVEL SWITCH, WASHER MOTOR, FAN MOTOR, FAN AC, JOINT PIECE, OUTER TEMP, LEVEL SWITCH, MICRO SWITCH, FAN, FOG LIGHT EXTRA, ABS, SWITCH, HORN SWITCH BRAKE LIGHT, BY-PASS, APC DISSANGAGEMENT THEFT ALARM, JOINT PIECE TRUNK LID	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0680								
0690								
0700								
0710								
0720								
0730								
0740								
0750								
0760								
0770								
0780								
0790								
0800	12A	85 47 796			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6 A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A10

Contact housing etc
1990

Kontakthus etc
1990

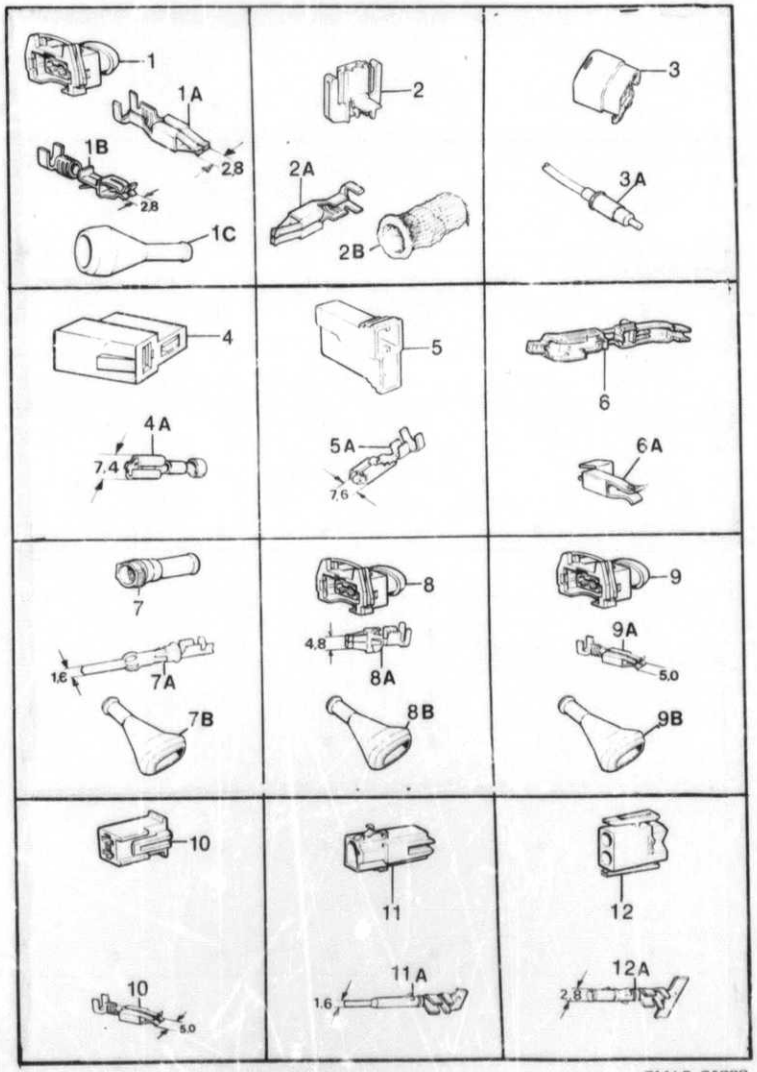

F1142 CAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 93 915		THERMO SWITCH, TEMP SENSOR, TIMING VALVE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0050	1C	85 71 382			X	Protection	Skydd	4
0070	2	91 24 157		LIGHT MIRROR, ACC, MOTOR CENTRAL LOCK COVER FUEL FILLING, FAN AC, SPEED CONTROL, MOTOR ANTENNA, LIGHT CONTROL, BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0130	2A	91 20 775		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0140	2A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0150	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0160	2B	*95 68 775*		NLS	X	Insulation	Isolering	4
0180	3	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0210	3A	85 47 770			X	Connector	Skarvstycke	5
0230	4	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0260	4A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0270	4A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0290	5	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0310	5A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0330	6	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0350	6A	95 52 191			X	Cable terminal	Kabelsko	5
0370	7	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0390	7A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	7B	85 79 955			X	Protection	Skydd	4
0420	8	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0440	8A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0450	8B	85 79 955			X	Protection	Skydd	4
0470	9	85 97 064		IDLE COMPENSATOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0490	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0500	9B	85 71 382			X	Protection	Skydd	4
0520	10	91 23 548		SIGNAL, HIGH MOUNTED STOP LIGHT, CONTROL LAMP LIGHT, THEFT ALARM, JOINT PIECE, TEST CONNECTOR, JOINT PIECE MAIN CABLE HARNESS, BY-PASS, DOOR SWITCH, LIGHT CENTRE CONSOLE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0590	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A12

Contact housing etc
1990

Kontakthus etc
1990

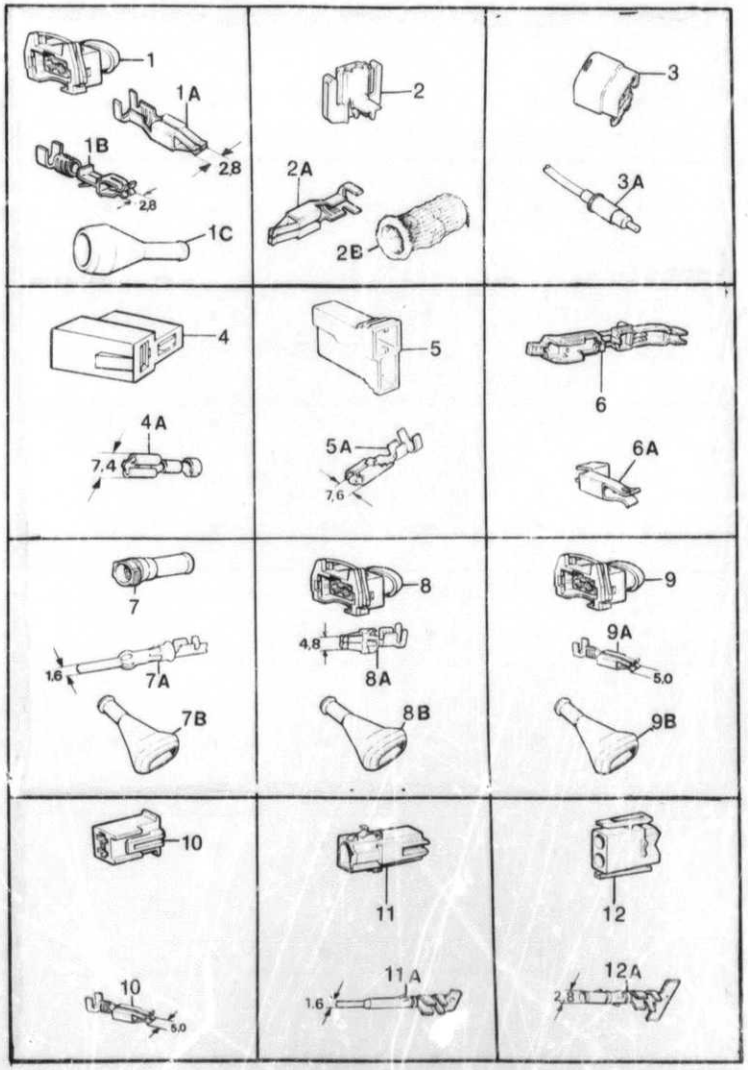

F1142 CAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	11	95 25 080		INFLATOR AIR-BAG	X	Contact housing	Kontakthus	4
0630						2-pole, male	2-polig, stift	
0640	11A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0650								
0660	12	95 25 809		INFLATOR AIR-BAG	X	Contact housing	Kontakthus	4
0670						2-pole, female	2-polig, hylsa	
0680	12A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A14

Contact housing etc 1990

Kontakthus etc 1990

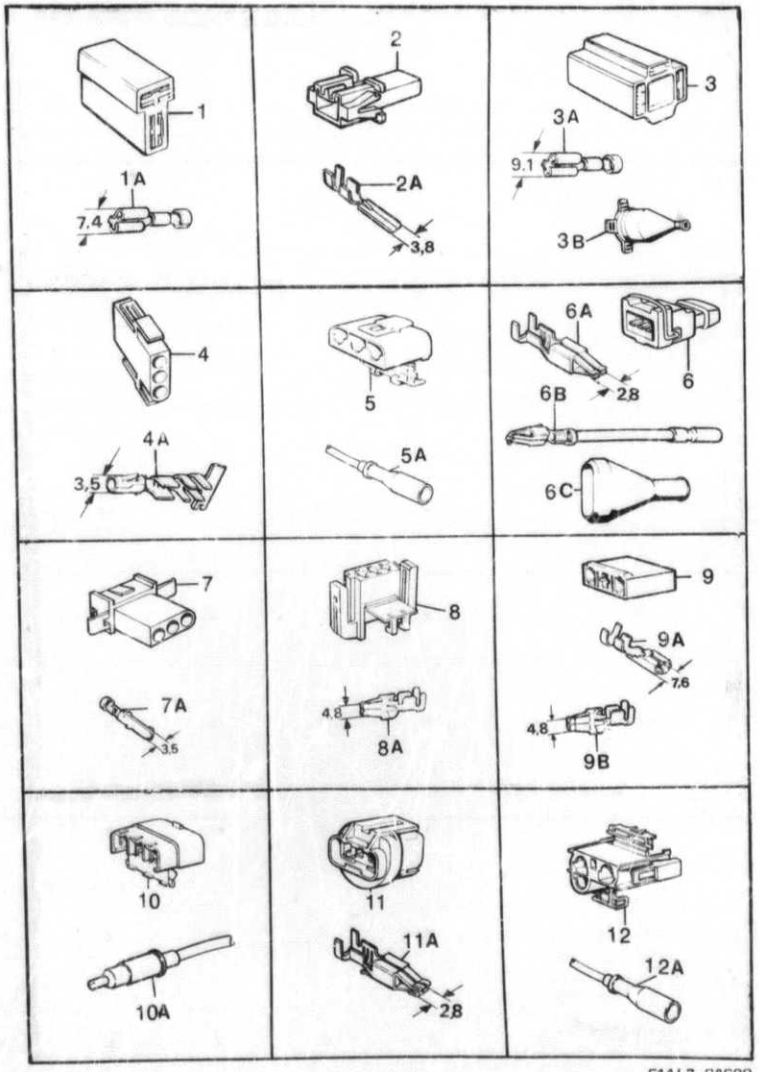

F1143 CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
1	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing, 2-pole, male	Skarvhus, 2-polig, stift	4
1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
2	95 18 713		BY-PASS, SIDE DIRECTION INDICATOR, JOINT PIECE	X	Contact housing, 2-pole, male	Kontakthus, 2-polig, stift	4
2A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
3	71 55 021		HEADLIGHT	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	5
3A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
3B	85 52 721			X	Cable protection	Kabelskydd	4
4	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
4A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
5	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, CENTRAL LOCK, ABS, HEADLIGHT LEVELLING, FAN, BY-PASS, THEFT ALARM DOOR	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
5A	85 47 796			X	Connector	Skarvstycke	5
5A	85 47 812			X	Connector	Skarvstycke	5
6	85 93 907		THROTTLE SWITCH, JOINT PIECE DIAPC, SOLENOID VALVE APC	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
6B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
6C	85 79 955			X	Protection	Skydd	4
7	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing, 3-pole, male	Kontakthus, 3-polig, stift	5
7A	85 82 603		AREA 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
7A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
8	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
8A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
9	95 07 658		SWITCH INNER LIGHT	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
9A	91 20 775		AREA 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
9A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
9B	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
10	95 03 327		JOINT PIECE, JOINT PIECE CABLE MAIN CABLE HARNESS/ABS	X	Contact housing, 3-pole, male	Kontakthus, 3-polig, stift	4
10A	85 47 770			X	Connector	Skarvstycke	5
11	95 14 803		HEADLIGHT US	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A16

Contact housing etc
1990

Kontakthus etc
1990

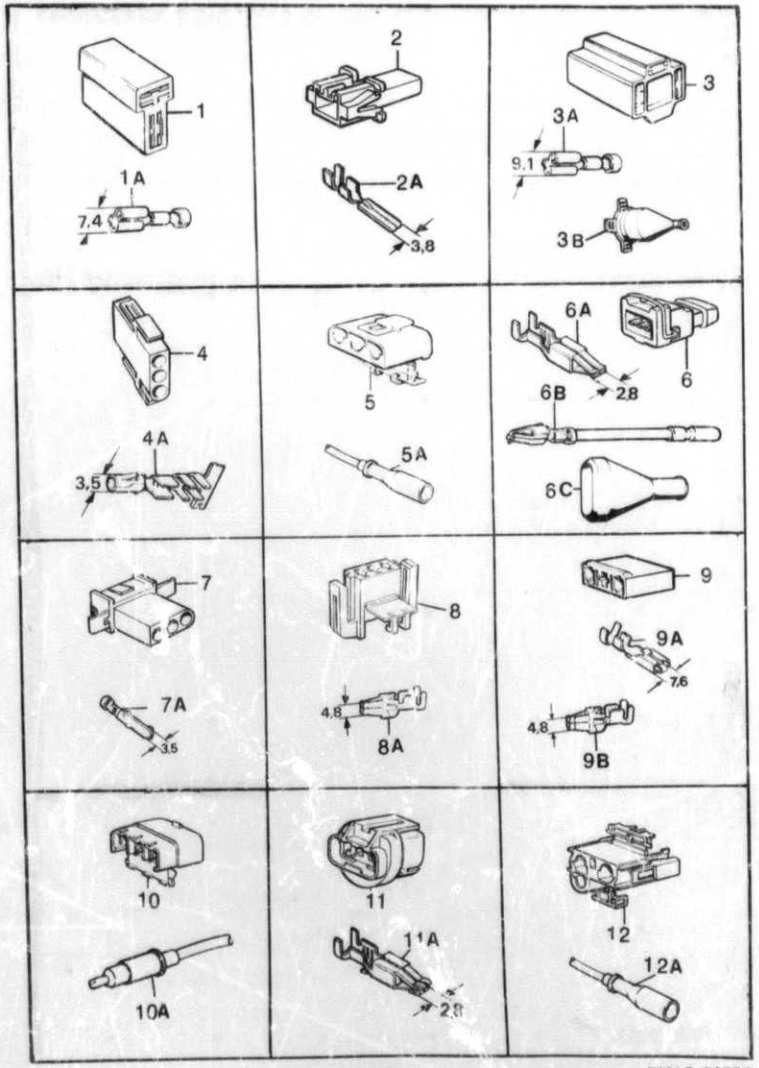

F1143 CAC90

0200	Pos	Part No/Art nr	L SI	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640								
0650	12	95 19 679		DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0660								
0670	12A	85 47 796			X	Connector	Skarvstycke	5
0680	12A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A18

Contact housing etc
1990

Kontakthus etc
1990

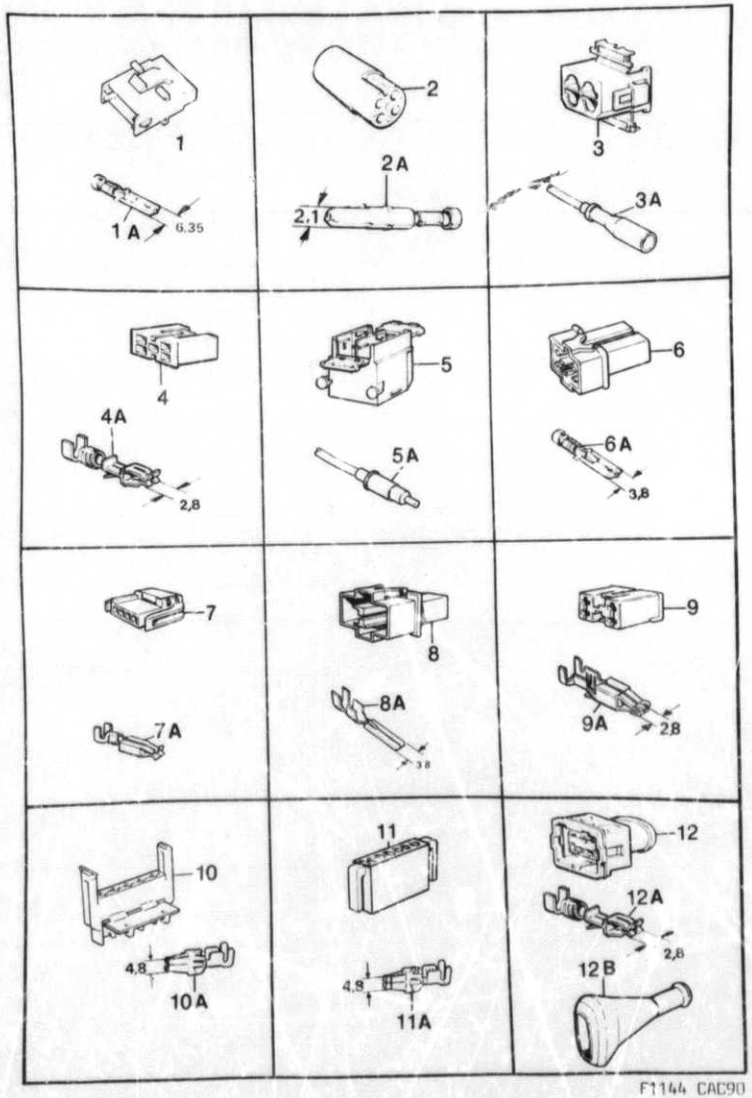

F1144 CAC90


0250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 03 012		EL-ADJUSTED CHAIR	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0020								
0030	1A	85 22 542		AREA, 0,8-2,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0060								
0070	2A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, FUEL PUMP SENSOR, ABS, IGNITION CASETTE, CRANKSHAFT POSITION SENSOR, THERMOSTAT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0100								
0110								
0120								
0130								
0140								
0150	3A	85 47 796			X	Connector	Skarvstycke	5
0160	3A	78 74 498			X	Connection	Skarv	5
0170								
0180	4	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK,PRESSURE SENSOR, PHONE	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0190								
0200								
0210								
0220								
0230	4A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0230								
0240	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0240								
0250								
0260	5	95 03 442		IGNITION CASETTE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0270								
0280	5A	85 47 770			X	Connector	Skarvstycke	5
0290								
0300	6	95 18 739		JOINT PIECE, JOINT PIECE DI/APC	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0310								
0320	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0330								
0340	7	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0350								
0360	7A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0370								
0380	8	40 61 495		JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0390								
0400	8A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0410								
0420	9	40 61 503		JOINT PIECE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0430								
0440	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450								
0460	10	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0470								
0480	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0490								
0500	11	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0510								
0520								
0530	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0540								
0550	12	95 19 414		PRESSURE MONITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0560								
0570	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0573								
0580	12B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilstion	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

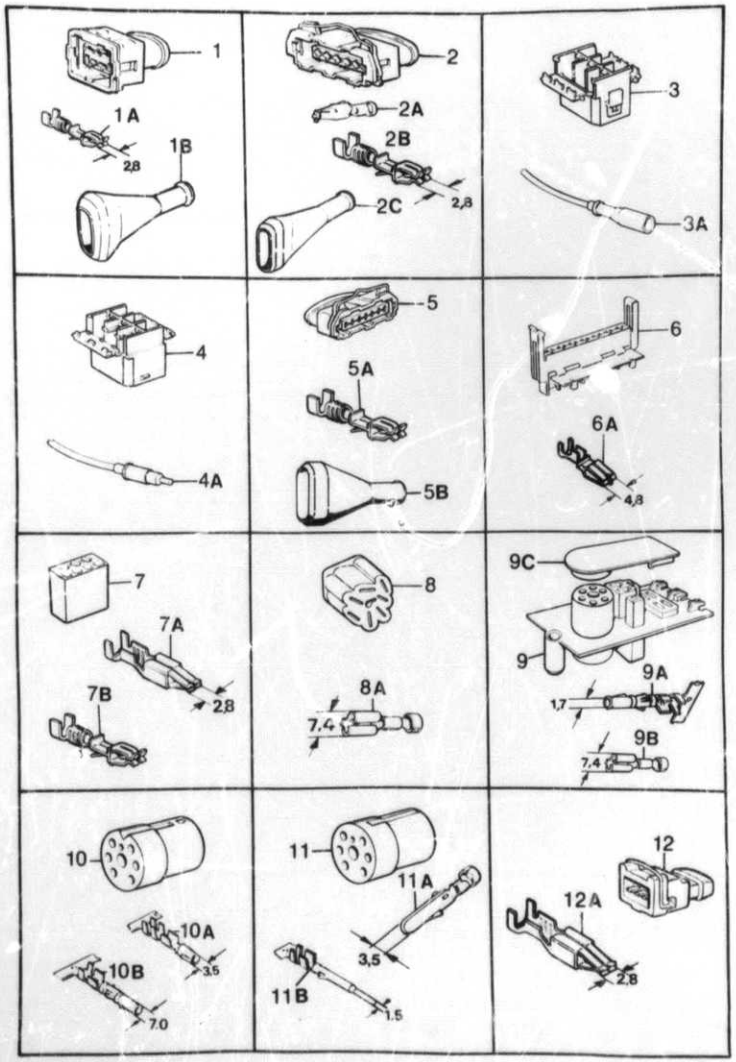

F3997 CAC90


0300	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 19 455		LEVEL ABS, ACCELERATOR PEDEL SENSOR, VALVES, TCS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0040	1A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0050	1B	95 19 430			X	Protection	Skydd	4
0070	2	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0090	2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0100	2B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0110	2C	85 82 082			X	Protection	Skydd	4
0130	3	95 03 475		JOINT PIECE TCS, JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0150	3A	85 47 796			X	Connector	Skarvstycke	5
0160	3A	78 74 498			X	Connection	Skarv	5
0190	4	95 06 668		JOINT PIECE	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0200	4A	85 47 770			X	Connector	Skarvstycke	5
0220	5	85 93 949		POWER STAGE, VALVE, OUTPOT STAGE, SETTING MOTOR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0250	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0260	5B	85 74 048			X	Protection	Skydd	4
0280	6	91 22 797		THEFT / ARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT, SWITCH FLASHER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0330	6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0350	7	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0370	7A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0380	7B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0400	8	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0420	8A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0440	9	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0460	9A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0470	9A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0480	9B	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0490	9C	95 20 974			X	Cover	Lock	9
0510	10	85 21 700		JOINT PIECE, JOINT PIECE REAR DOOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0530	10A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0540	10B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0560	11	85 21 718		JOINT PIECE, JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0580	11A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0590	11B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

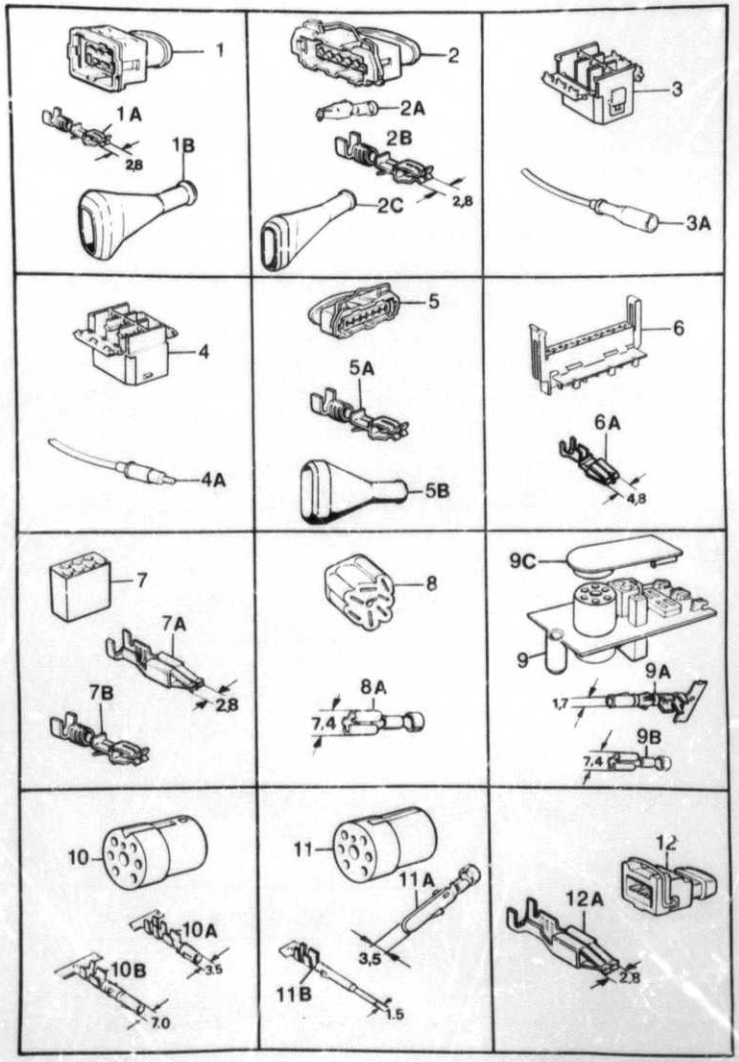

F3997 CAC90

Wiring and fuses

3-A22

Contact housing etc

1990

Ledningar och säkringar

Kontakthus etc

1990

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600								
0610	12	40 61 479		VALVES	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0620								
0630	12A	91 20 957		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-A24

Contact housing etc
1990

Kontakthus etc
1990

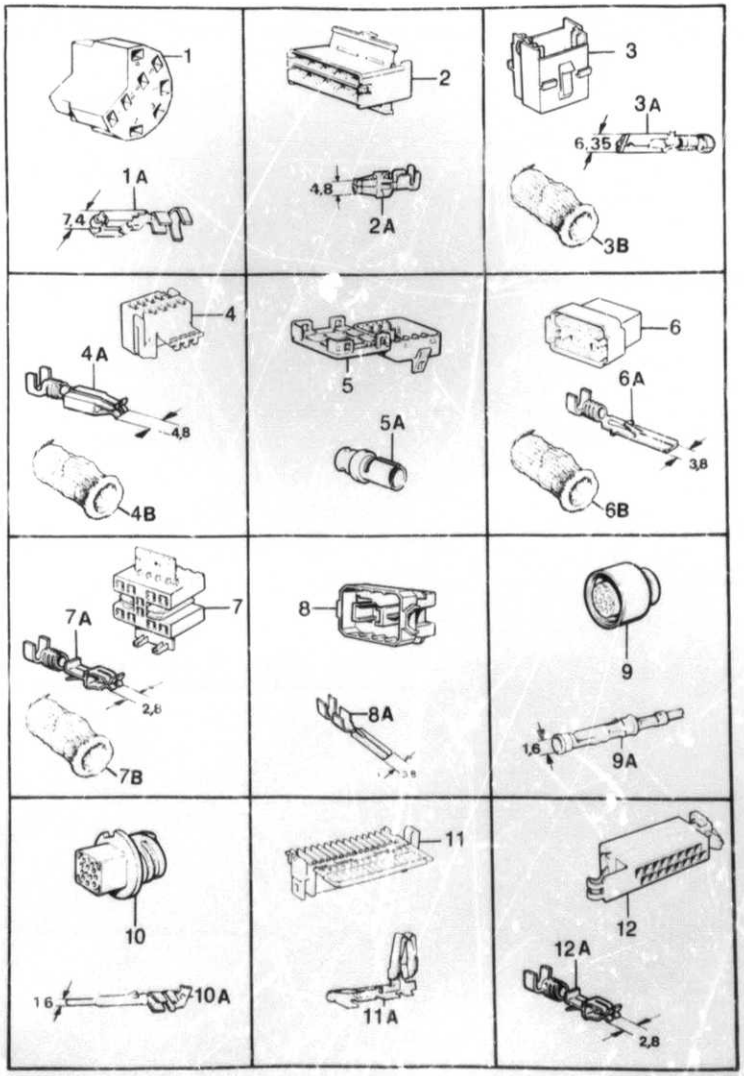

F1146 CAC90


0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0020								
0030	1A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0070								
0080	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	91 24 181		EL-HEATED SEAT	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
0110								
0120	3A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0130	3A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0140	3B	*95 68 775*		NLS	X	Insulation	Isolering	4
0150								
0160	4	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, CENTRAL LOCK, TOW HOOK, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, ALARM, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0170								
0180								
0190								
0200								
0210								
0220								
0230	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0240	4B	*95 68 775*		NLS	X	Insulation	Isolering	4
0250								
0260	5	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0270								
0280	5A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0290								
0300	6	91 22 557		RADIO, BY-PASS, JOINT PIECE CABLE HARNESS ROOF, DIAGNOS UNIT	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0310								
0320								
0330	6A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0340	6B	*95 68 775*		NLS	X	Insulation	Isolering	4
0350								
0360	7	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT LIGHT INSTEP, BY-PASS STOP LIGHT, STARTER INHIBITOR, ACC	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0370								
0380								
0390								
0400								
0410								
0420								
0430								
0440								
0450	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0460	7B	*95 68 775*		NLS	X	Insulation	Isolering	4
0470								
0480	8	40 69 928		DIAGNOS WAGON	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	5
0490								
0500	8A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0510								
0520	9	95 29 538		DIAGNOS AIR-BAG	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	4
0530								
0540	9A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	10	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0570								
0580	10A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0590								
0600	11	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0610								
0620	11A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0630								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

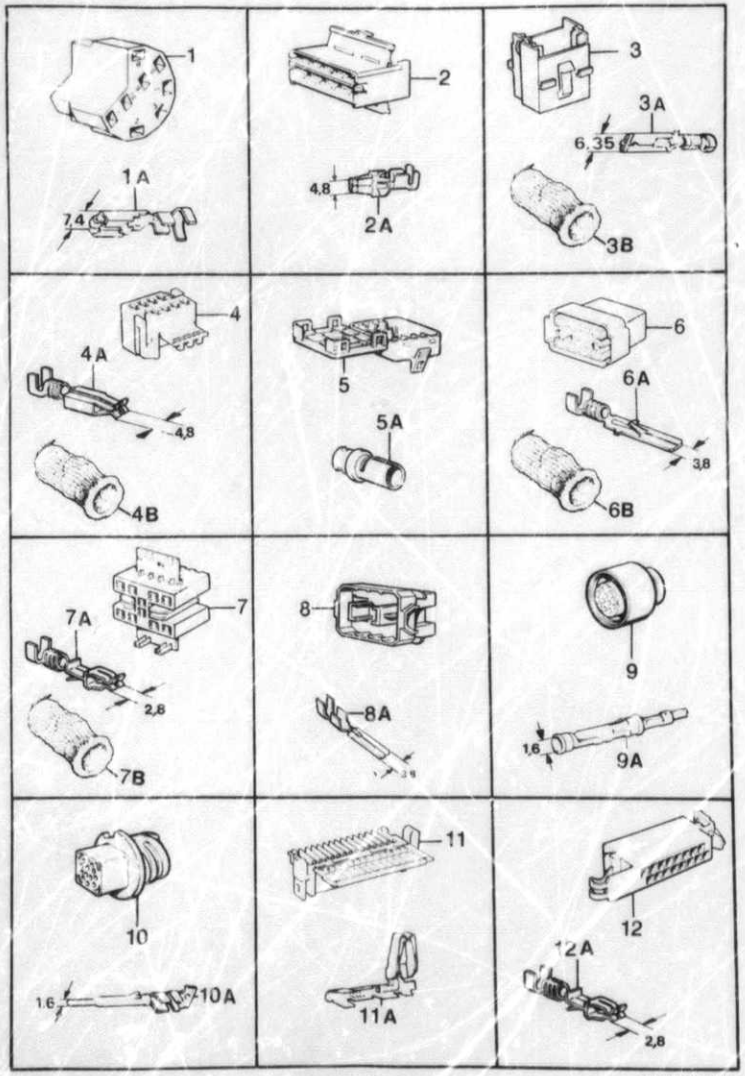

F1146 CAC90

Wiring and fuses

3-B02

Contact housing etc

1990

Ledningar och säkringar

Kontakthus etc

1990

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
12	95 66 282		ELECTRONIC UNIT THEFT ALARM	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B04

Contact housing etc 1990

Kontakthus etc 1990

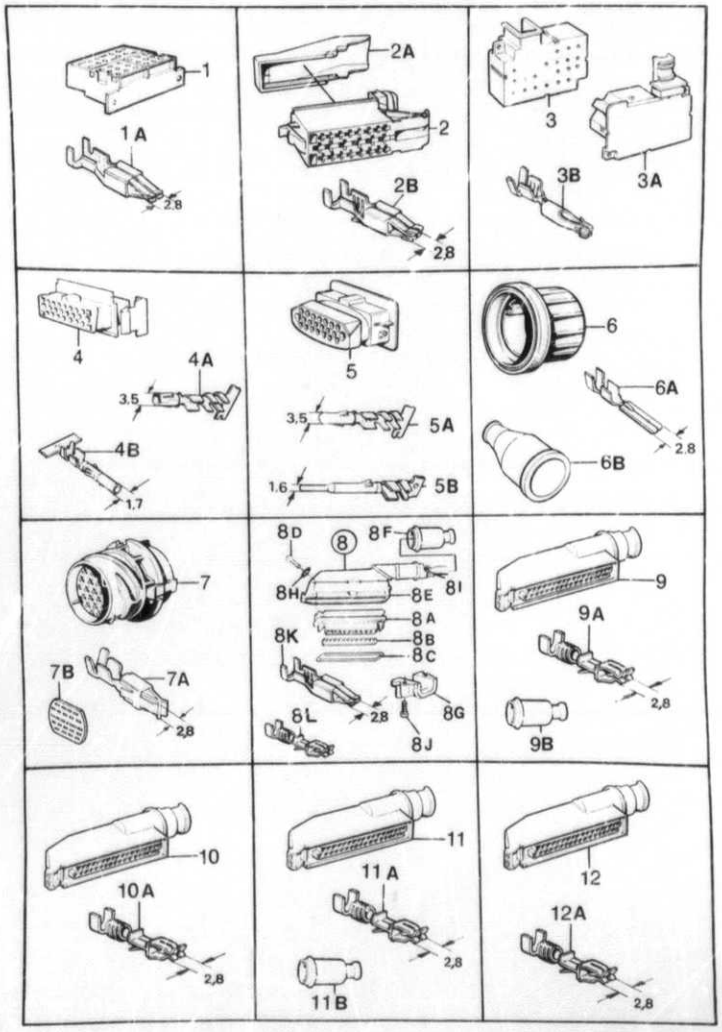

F3811 - CAC90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0020								
0030	1A	91 20 791		AREA, 2,5-4,0	X	Cable terminal	Kabelsko	5
0040								
0050	2	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0060								
0070	2A	40 67 617			X	Cover	Kåpa	4
0080	2B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0110								
0120	3A	95 27 763			X	Contact housing	Kontakthus	4
0130	3B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0140								
0150	4	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0160								
0170	4A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0180	4B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	5	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0210								
0220	5A	85 82 603		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0230	5B	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0240								
0250	6	40 60 877		JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 24-pole, male	Kontakthus 24-polig, stift	5
0260								
0270	6A	40 63 376		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0280	6B	41 11 308			X	Rubber protection	Gummiskydd	4
0285	6C	45 98 349			X	Lock ring	Låsring	
0290								
0300	7	*40 60 885*		JOINT PIECE CABLE HARNESS ENGINE NLS - USE 4176244	X	Contact housing 24-pole, female	Kontakthus 24-polig, hylsa	5
0310								
0320	7A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0330	7B	43 52 936			X	Seal	Tätning	5
0340								
0350	8	85 79 930		ELECTRONIC UNIT LH	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0360								
0370	8A	85 87 420			1	. Contact housing	. Kontakthus	4
0380	8B	85 87 438			1	. Striker plate	. Låsbleck	5
0390	8C	85 87 453			1	. Seal	. Tätning	5
0400	8D	85 87 487			1	. Screw	. Skruv	5
0410	8E	85 87 412			1	. Cover	. Kåpa	4
0420	8F	85 87 446			1	. Bushing	. Bussning	6
0430	8G	85 87 495			1	. Bracket	. Hållare	4
0440	8H	85 87 461			1	. Seal	. Tätning	5
0450	8I	*85 58 256*		NLS - USE 7971872	1	. Tensioning band	. Spännband	4
0460	8J	79 71 351			2	. Screw	. Skruv	5
0470	8K	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0480	8L	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0490								
0500	9	91 25 519		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0510								
0520	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0520								
0530	9B	85 87 511			X	Rubber protection	Gummiskydd	4
0540								
0550	10	40 68 441		ELECTRONIC UNIT ABS	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0560								
0570	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0580								
0590	11	*95 66 266*		ELECTRONIC UNIT APC/DI NLS - USE 4109310	X	Contact housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0600								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B06

Contact housing etc 1990

Kontakthus etc 1990

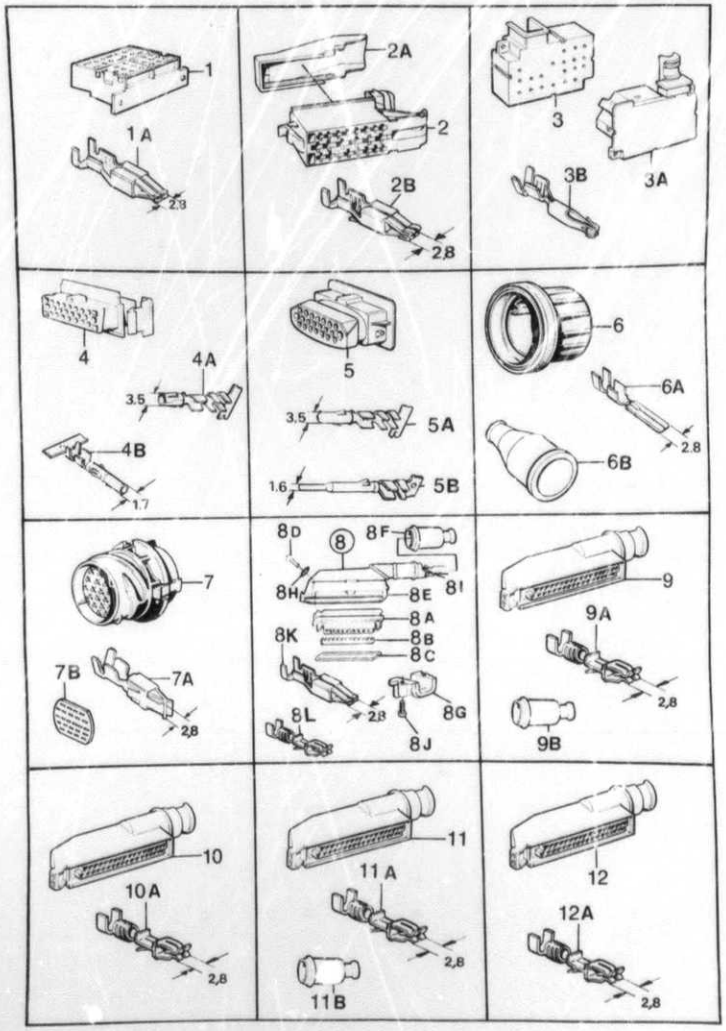

F3811 - CAC90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	11A	*91 20 688*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0620	11B	91 20 106			X	Protection	Skydd	4
0630	12	40 68 888		ELECTRONIC UNIT ETS	X	Contact housing 38-pole, female	Kontakthus 38-polig, hylsa	5
0640	12A	91 20 957		AREA, 1,0-2,5 MM2		Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B08 *Contact housing etc* *1990*

Kontakthus etc *1990*

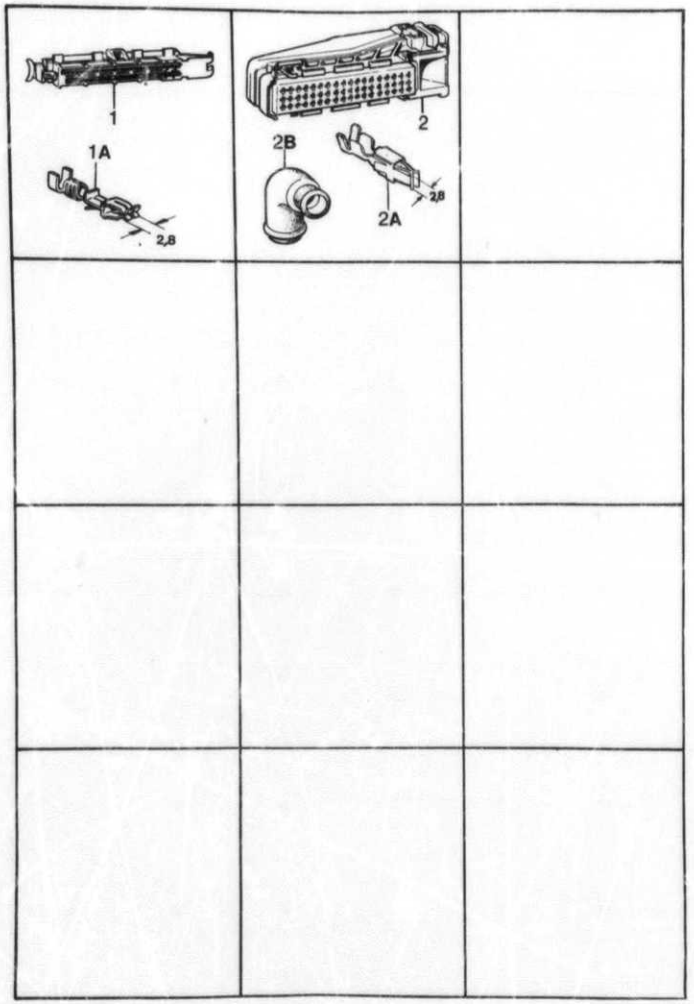

F4164 CAC90

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing 39-pole, female	Kontakthus 39-polig, hylsa	5
0030	1A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0060	2	40 61 446		ELECTRONIC UNIT ABS/TCS	X	Contact housing 55-pole, female	Kontakthus 55-polig, hylsa	5
0080	2A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0090	2B	40 67 492			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B10

Contact housing etc 1991

Kontakthus etc 1991

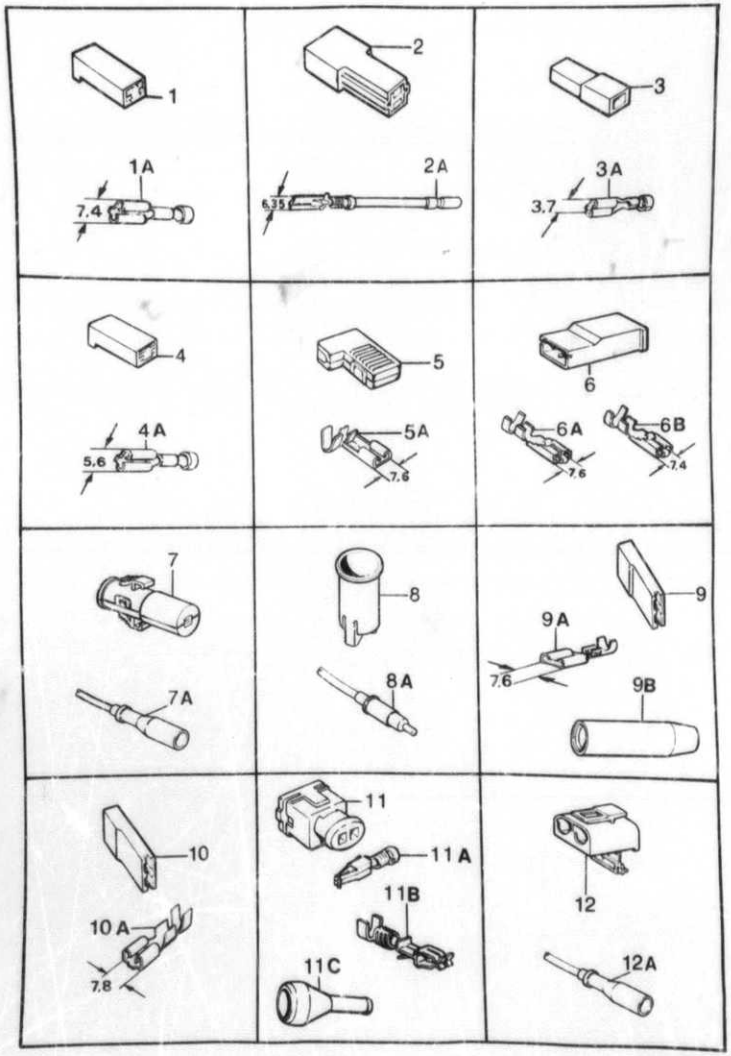

F2927 CAC90

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT	X	Contact housing	Kontakthus	4
0020				GEAR INDICATOR, MAKE-UP MIRROR, HIGH MOUNTED STOP LIGHT		1-pole, female	1-polig, hylsa	
0050	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0070	2	71 55 120		EL-MIRROR, EL-CENTRAL	X	Contact housing	Kontakthus	4
0080						1-pole, male	1-polig, stift	
0090	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0110	3	85 30 116		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0120						1-pole, male	1-polig, stift	
0130	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0150	4	85 33 184		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0160						1-pole, male	1-polig, stift	
0170	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190	5	85 21 692		IGNITION COIL, SWITCH BRAKE LIGHT, LIGHT ASH TRAY, REAR DEMIST, ENGINE COMPARTMENT LIGHT	X	Contact housing	Kontakthus	4
0200						1-pole, female	1-polig, hylsa	
0230	5A	85 22 526		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0240	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0260	6	85 41 229		SPOTLIGHT, SAFETY BELT WARNING, SWITCH SPOT-LIGHT, LIGHT INSTEP, SPEED CONTROL, LIGHT NUMBER PLATE, GLOVE COMPARTMENT LIGHT	X	Sleeve	Isoleringshylsa	5
0270						1-pole, male	1-polig, stift	
0320	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0330	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	7	95 03 418		COMPRESSOR, JOINT PIECE	X	Connector housing	Skarvhus	4
0360						1-pole, female	1-polig, hylsa	
0370	7A	85 47 796			X	Connector	Skarvstycke	5
0390	8	95 03 426		IGNITION SYSTEM	X	Connector housing	Skarvhus	4
0400						1-pole, male	1-polig, stift	
0410	8A	85 47 770			X	Connector	Skarvstycke	5
0430	9	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, SWITCH HORN, HORN, LIGHT LUGGAGE COMPARTMENT, THEFT ALARM, SWITCH HAND BRAKE, JOINT EXTRA LIGHT WARNING, STARTER MOTOR	X	Insulation	Isolering	4
0440						1-pole, female	1-polig, hylsa	
0500	9A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0510	9A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0520	9B	95 69 997			X	Protection	Skydd	4
0540	10	83 78 630		PEDAL CONTACT	X	Contact housing	Kontakthus	4
0550						2-pole, female	2-polig, hylsa	
0560	10A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B12

Contact housing etc
1991

Kontakthus etc
1991

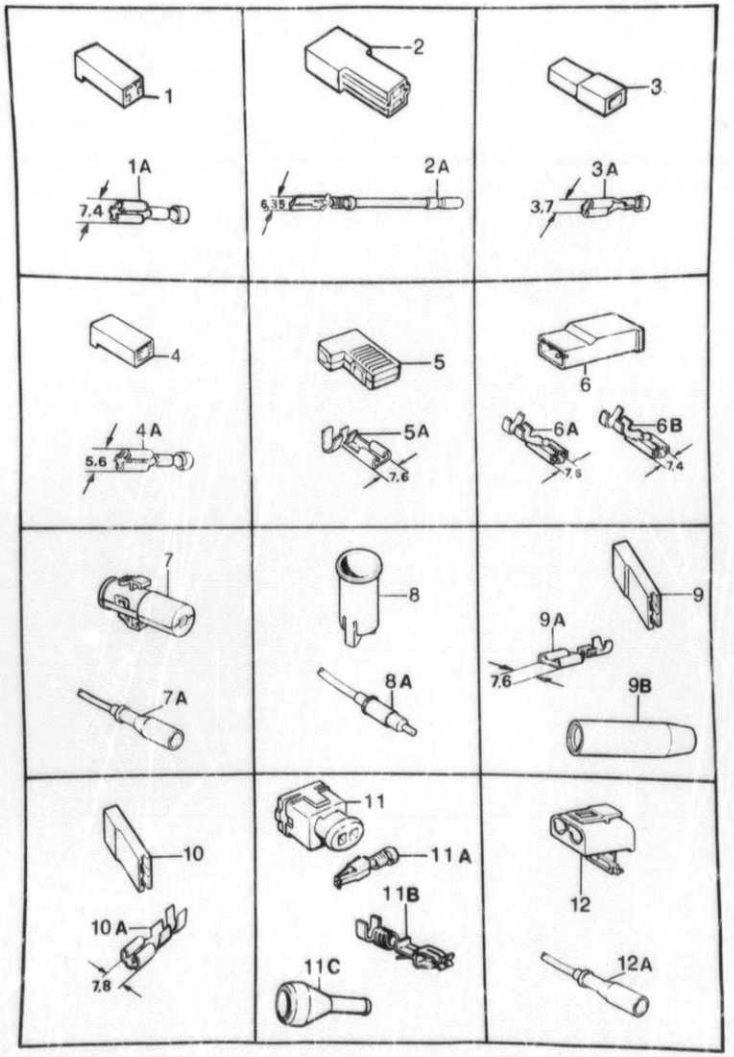

F2927 CAC90

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	11	85 93 899		AUXILIARY AIR VALVE,	X	Contact housing	Kontakthus	4
0590				INJECTION VALVE, KNOCK		2-pole, female	2-polig, hylsa	
0600				SENSOR, FUEL SYSTEM,				
0610				PREHEATING LAMBDA, MAIN				
0620				VALVE, VENTILATION, DUMP				
0630				VALVE, COLD START VALVE,				
0640				BY-PASS, TEMP SENSOR				
0650	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0660	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0660				USE 9120957				
0670	11C	85 21 619			X	Protection	Skydd	4
0680								
0690	12	95 03 319		EL. WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0700				CENTRAL LOCK, STD FAN,		2-pole, female	2-polig, hylsa	
0710				WASHER PUMP, LEVEL				
0720				SWITCH, WASHER MOTOR,				
0730				FAN MOTOR, FAN AC,				
0740				JOINT PIECE, OUTER TEMP,				
0750				LEVEL SWITCH, MICRO				
0760				SWITCH, FAN, FOG LIGHT				
0770				EXTRA, ABS, SWITCH, HORN				
0780				SWITCH BRAKE LIGHT, BY-				
0790				PASS, APC DISSANGAGEMENT				
0800				THEFT ALARM, JOINT PIECE				
0810				TRUNK LID, DOOR FAN				
0820	12A	85 47 796			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B14

Contact housing etc
1991

Kontakthus etc
1991

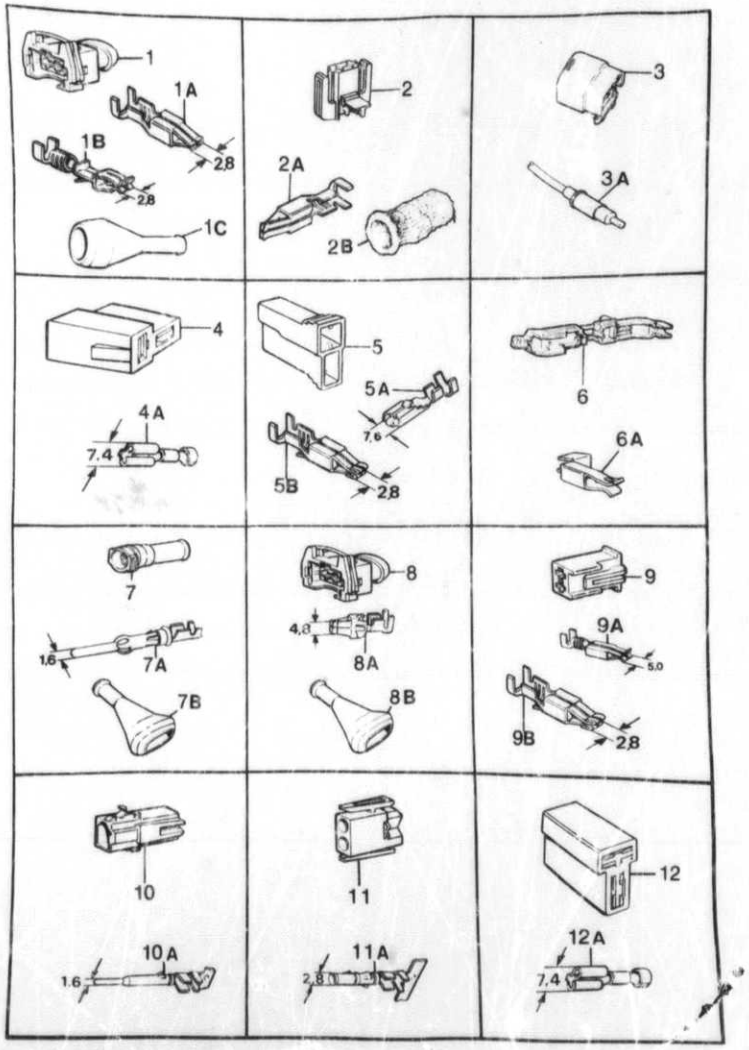

F2928 CAC90

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 93 915		THERMO SWITCH, TEMP	X	Contact housing	Kontakthus	4
0020				SENSOR, TIMING VALVE,EGR		2-pole, female	2-polig, hylsa	
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0050	1C	85 71 382			X	Protection	Skydd	4
0060								
0070	2	91 24 157		LIGHT MIRROR, ACC, MOTOR, CENTRAL LOCK COVER FUEL FILLING, FAN AC, MOTOR ANTENNA, BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0080								
0090								
0100								
0110	2A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0120	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0130	2B	*95 68 775*		NLS	X	Insulation	Isolering	4
0140								
0150	3	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0160								
0170								
0180	3A	85 47 770			X	Connector	Skarvstycke	5
0190								
0200	4	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0210								
0220								
0230	4A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0230								
0240	4A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0250								
0260	5	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0270								
0280	5A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0290	5B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	6	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0320								
0330	6A	95 52 191			X	Cable terminal	Kabelsko	5
0340								
0350	7	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0360								
0370	7A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0380	7B	85 79 955			X	Protection	Skydd	4
0390								
0400	8	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0410								
0420	8A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0430	8B	85 79 955			X	Protection	Skydd	4
0440								
0450	9	91 23 548		SIGNAL, HIGH MOUNTED STOP LIGHT, CONTROL LAMP LIGHT, TEST CONNECTOR, BY-PASS, DOOR SWITCH, LIGHT CENTRE CONSOL, LIGHT SWITCHES	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0460								
0470								
0480								
0490								
0500								
0510	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0510								
0520	9B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0530								
0540	10	95 25 080		INFLATOR AIR-BAG	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0550								
0560	10A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0570								
0580	11	95 25 809		INFLATOR AIR-BAG	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0590								
0600	11A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0610								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3--B16

Contact housing etc
1991

Kontakthus etc
1991

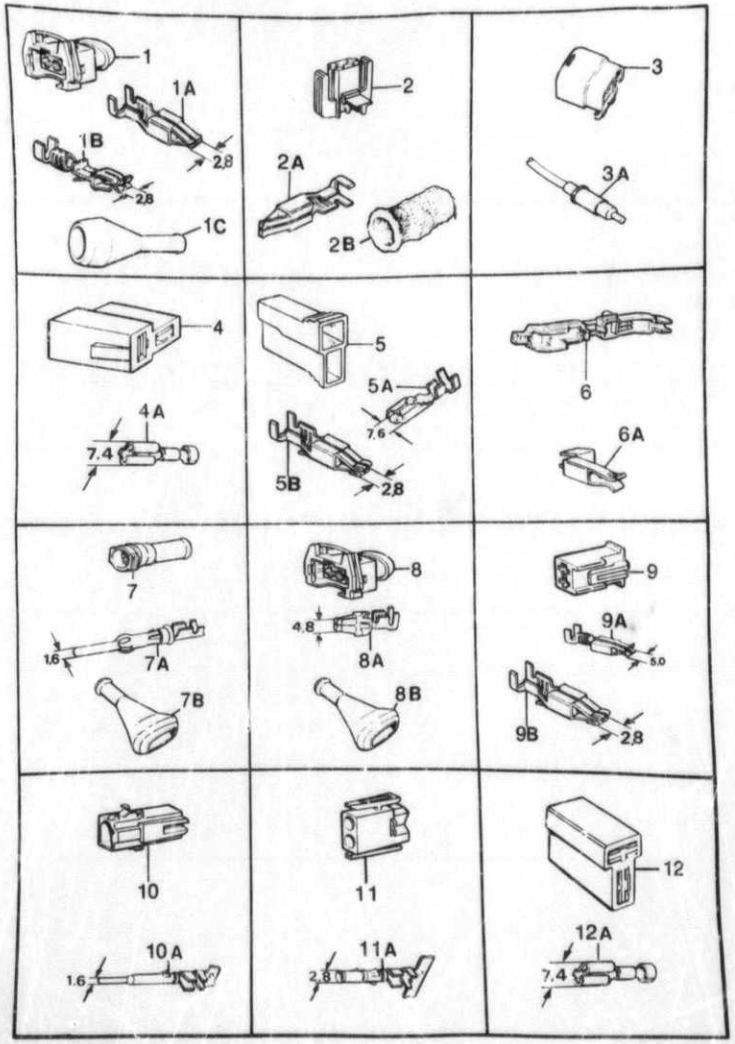

F2928 CAC90

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	12	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0630								
0640	12A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B18

Contact housing etc
1991

Kontakthus etc
1991

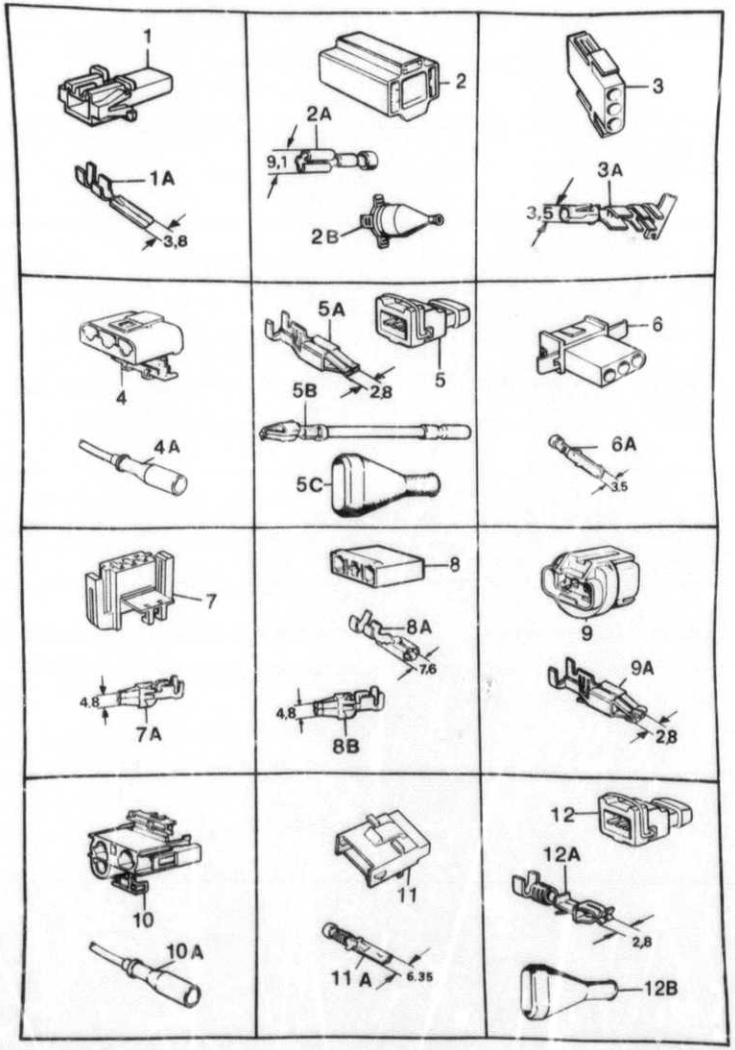

F2929 CAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 18 713		BY-PASS, SIDE DIRECTION INDICATOR, JOINT PIECE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0020								
0030	1A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	71 55 021		HEADLIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	5
0060								
0070	2A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0080	2B	85 52 721			X	Cable protection	Kabelskydd	4
0090								
0100	3	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0110								
0120	3A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0130								
0140	4	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, LEVEL CONTROL, CENTRAL LOCK, ABS, HEADLIGHT LEVELLING, FAN, BY-PASS, THEFT ALARM DOOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0150								
0160								
0170								
0180								
0190								
0200	4A	85 47 796			X	Connector	Skarvstycke	5
0210	4A	85 47 812			X	Connector	Skarvstycke	5
0220								
0230	5	85 93 907		THROTTLE SWITCH, SOLE-NOID VALVE APC	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0240								
0250	5A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0260	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0270	5B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0280	5C	85 79 955			X	Protection	Skydd	4
0290								
0300	6	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0310								
0320								
0330								
0340	6A	85 82 603		AREA 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	6A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0360								
0370	7	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0380								
0390								
0400								
0410								
0420								
0430	7A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0440								
0450	8	95 07 658		SWITCH INNER LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0460								
0470	8A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0480	8B	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0490								
0500	9	95 14 803		HEADLIGHT US	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0510								
0520	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0520								
0530	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0540								
0550	10	95 19 679		DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0560								
0570	10A	85 47 796			X	Connector	Skarvstycke	5
0580	10A	78 74 498			X	Connection	Skarv	5
0590								
0600	11	95 03 012		EL-ADJUSTED CHAIR	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0610								
0620	11A	85 82 645		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0630								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B20

Contact housing etc
1991

Kontakthus etc
1991

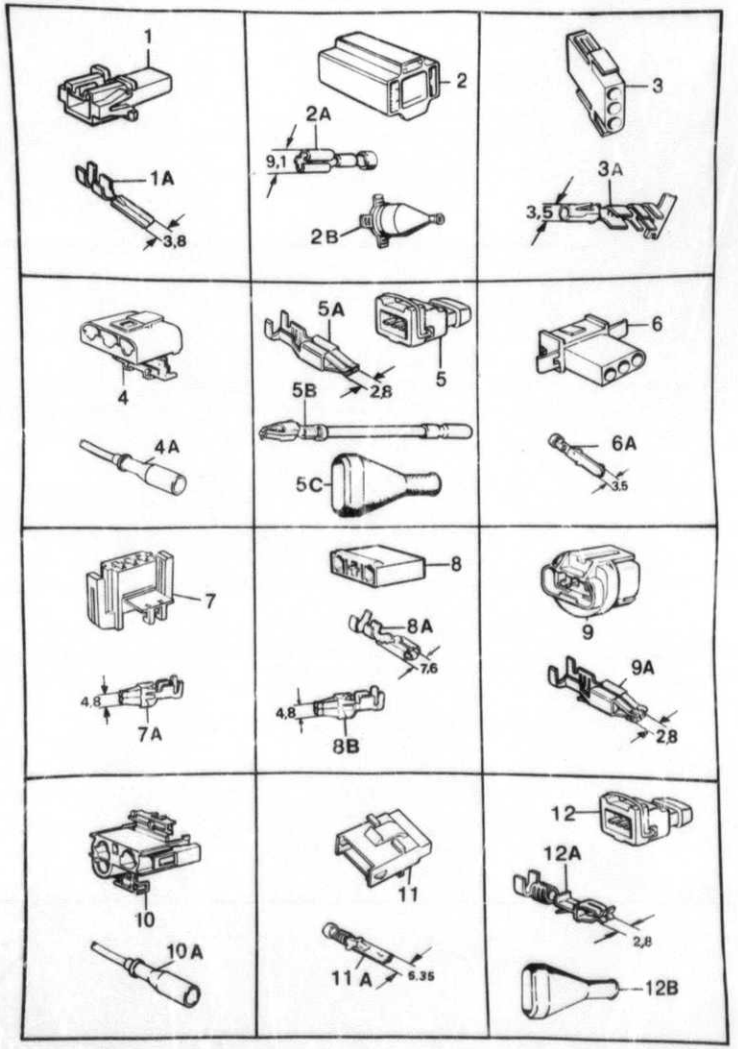

F2929 CAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12	85 93 923		IDLE COMPENSATOR	X	Contact housing	Kontakthus	4
0650						3-pole, female	3-polig, hylsa	
0660	12A	*91 20 668*		AREA 0,75-1,0 [illegible] NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0660								
0570	12A	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0680	12B	85 79 955			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-B22

Contact housing etc
1991

Kontakthus etc
1991

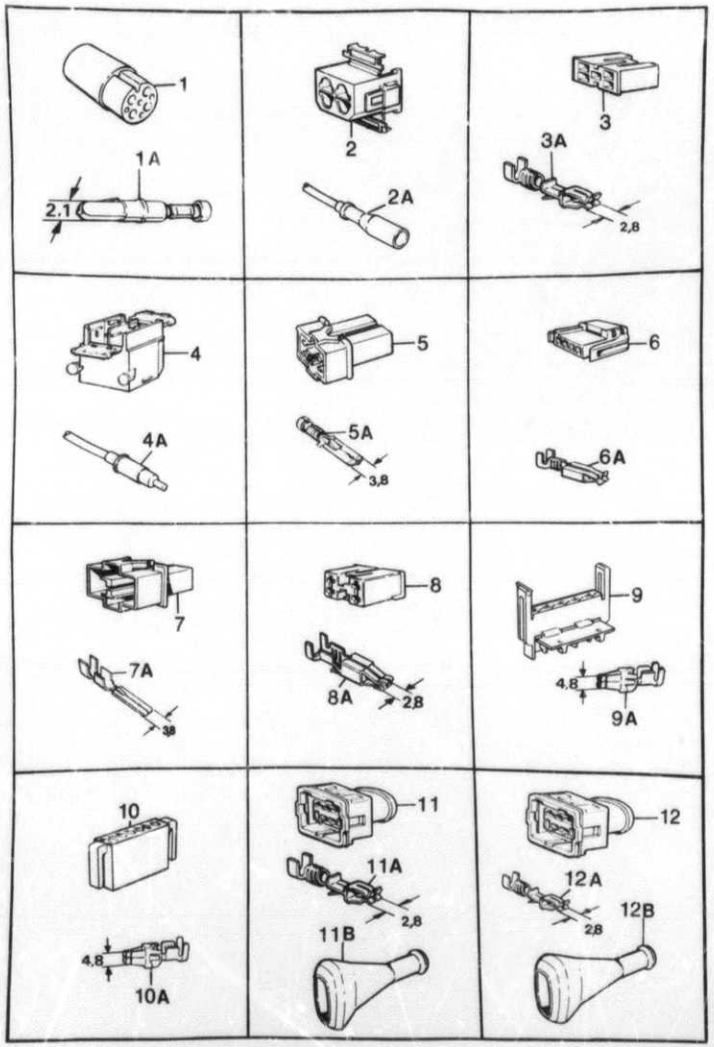

F2930 CAC90


0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0020								
0030	1A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, FUEL PUMP SENSOR, ABS, IGNITION CASETTE, CRANKSHAFT POSITION SENSOR, THERMOSTAT, THEFT ALARM	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0060								
0070								
0080								
0090								
0100								
0110								
0120	2A	85 47 796			X	Connector	Skarvstycke	5
0130	2A	78 74 498			X	Connection	Skarv	5
0140								
0150	3	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0160								
0170								
0180								
0190	3A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190								
0200								
0210	4	95 03 442		IGNITION CASETTE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0220								
0230	4A	85 47 770			X	Connector	Skarvstycke	5
0240								
0250	5	95 18 739		JOINT PIECE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0260								
0270	5A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0280								
0290	6	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0300								
0310	6A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0320	6A	91 21 088		AREA, 0,2-0,5 MM2	X	Cable terminal	Kabelsko	3
0330								
0340	7	40 61 495		JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0350								
0360	7A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0370								
0380	8	40 61 503		JOINT PIECE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0390								
0400	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0410								
0420	9	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0430								
0440	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0450								
0460	10	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0470								
0480								
0490	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0500								
0510	11	95 19 414		PRESSURE MONITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0520								
0530	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0530								
0540	11B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4
0550								
0560	12	95 19 455		LEVEL ABS, ACCELERATOR PEDEL SENSOR, VALVES, ETS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0570								
0580								
0590	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0590								
0600	12B	95 19 430			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

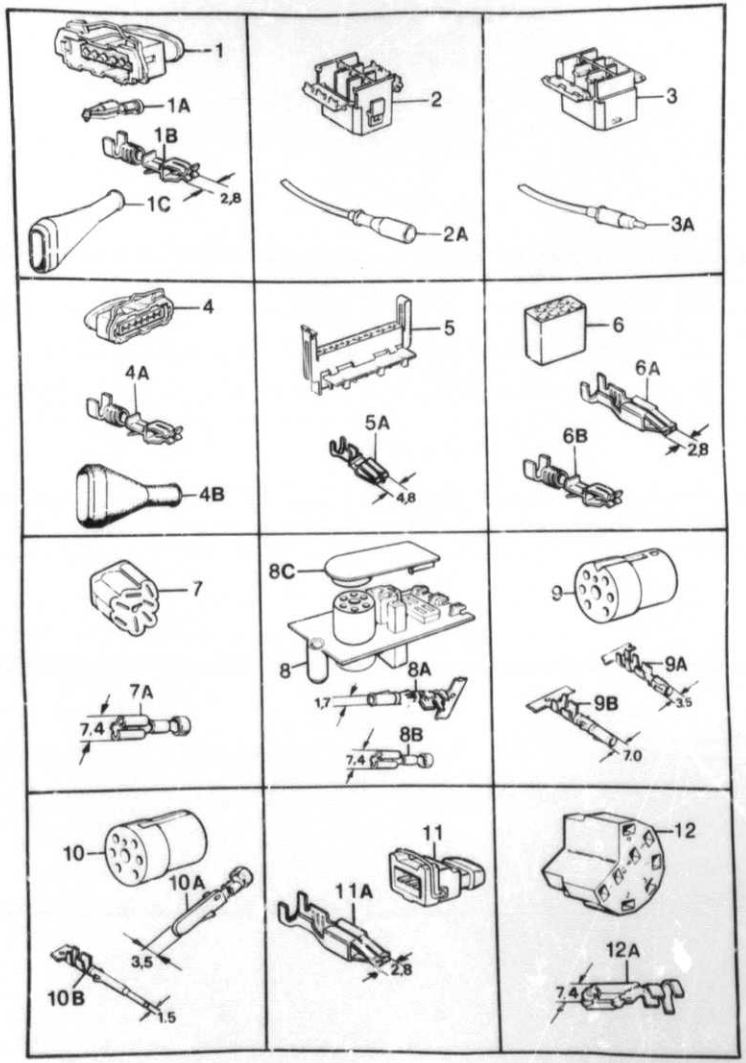

F3998 CAC90

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0020								
0030	1A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0040								
0050	1C	85 82 082			X	Protection	Skydd	4
0060								
0070	2	95 03 475		JOINT PIECE TCS, JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0080								
0090	2A	85 47 796			X	Connector	Skarvstycke	5
0100	2A	78 74 498			X	Connection	Skarv	5
0110								
0120	3	95 06 668		JOINT PIECE	X	Contact housing 6-pole, male	Kontakthus 6-polig, stift	4
0130								
0140	3A	85 47 770			X	Connector	Skarvstycke	5
0150								
0160	4	85 93 949		POWER STAGE, VALVE, OUTPOT STAGE, SETTING MOTOR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0170								
0180								
0190	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190								
0200	4B	85 74 048			X	Protection	Skydd	4
0210								
0220	5	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT, SWITCH FLASHER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0230								
0240								
0250								
0260								
0270	5A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0280								
0290	6	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0300								
0310	6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0320	6B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0370								
0330								
0340	7	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0350								
0360	7A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0370	7A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0380								
0390	8	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0400								
0410	8A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	8A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	8B	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0430								
0440	8C	95 20 974			X	Cover	Lock	9
0450								
0460	9	85 21 700		JOINT PIECE, JOINT PIECE REAR DOOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0470								
0480	9A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0490	9B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500								
0510	10	85 21 718		JOINT PIECE, JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0520								
0530	10A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0540	10B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	11	40 61 479		VALVES	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0570								
0580	11A	91 20 957		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0590								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C02

Contact housing etc — *Kontakthus etc*

1991 — *1991*

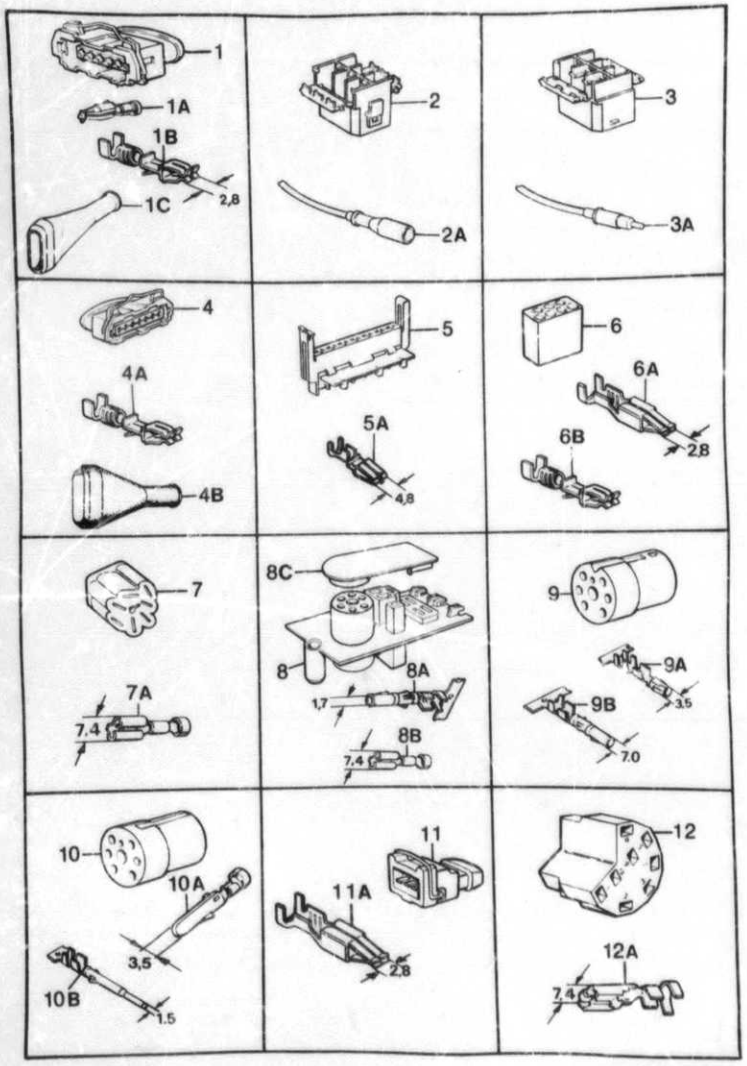

F3998 CAC90


0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	12	85 44 363		SWITCH LIGHT	X	Contact housing	Kontakthus	4
0610						8-pole, female	8-polig, hylsa	
0620	12A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0630	12A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

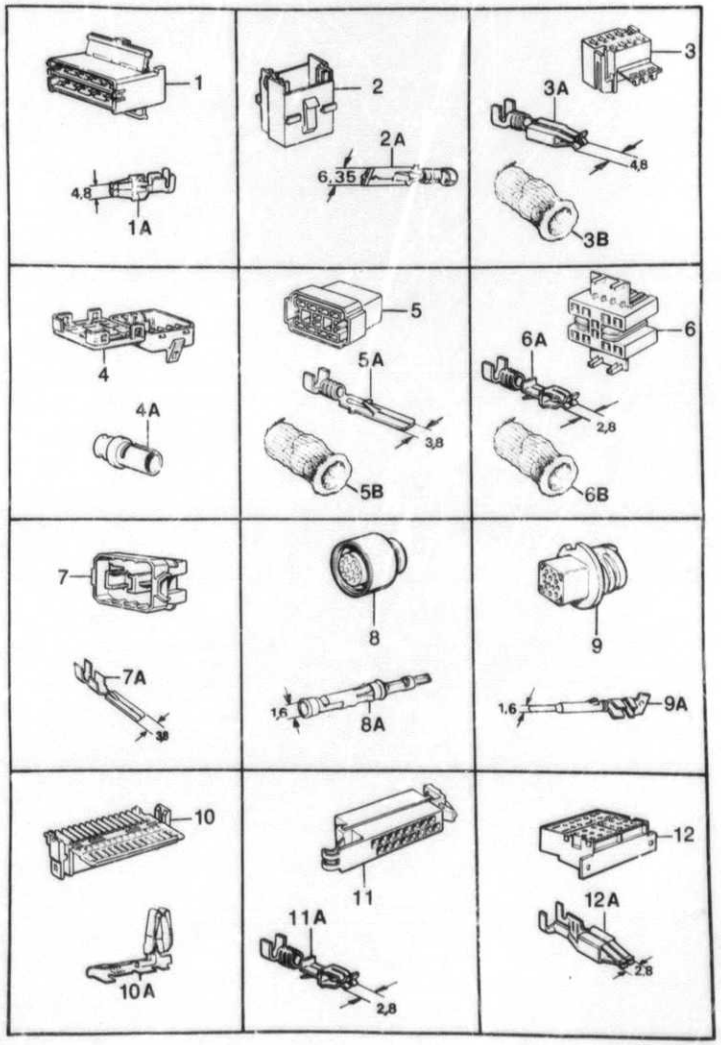

F2932 CAC90

Wiring and fuses

3-C04 Contact housing etc 1991

Ledningar och säkringar

Kontakthus etc 1991

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Anta	Description	Benämning	S L
0010	1	85 33 655		ELECTRONIC UNIT SPEED CONTROL		Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0030	1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0050	2	91 24 181		EL-HEATED SEAT	X	Contact housing 8-pole, male	Kontakthus 8-polig, stift	4
0070	2A	85 93 089		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0080	2A	85 16 957		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	91 24 090		SWITCH REAR DEMIST, DLC, SWITCH SUN ROOF REGULATOR, CENTRAL LOCK, TOW HOOK, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0170	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0180	3B	*95 68 775*		NLS	X	Insulation	Isolering	4
0200	4	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0220	4A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0240	5	91 22 557		RADIO, BY-PASS, JOINT PIECE CABLE HARNESS ROOF, DIAGNOS UNIT	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0270	5A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0280	5B	*95 68 775*		NLS	X	Insulation	Isolering	4
0300	6	91 23 399		REAR FOG LIGHT, SWITCH AC, RECIRCULATION AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT LIGHT INSTEP, BY-PASS STOP LIGHT, STARTER INHIBITOR, ACC	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0390	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0400	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0410	6B	*95 68 775*		NLS	X	Insulation	Isolering	4
0430	7	40 69 928		DIAGNOS WAGON, JOINT PIECE	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	5
0450	7A	95 52 100		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0470	8	95 29 538		DIAGNOS AIR-BAG	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	4
0490	8A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0510	9	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0530	9A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0550	10	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0570	10A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0590	11	95 66 282		ELECTRONIC UNIT THEFT ALARM, EAS WITH MEMORY	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
0610	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0620	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C06

Contact housing etc
1991

Kontakthus etc
1991

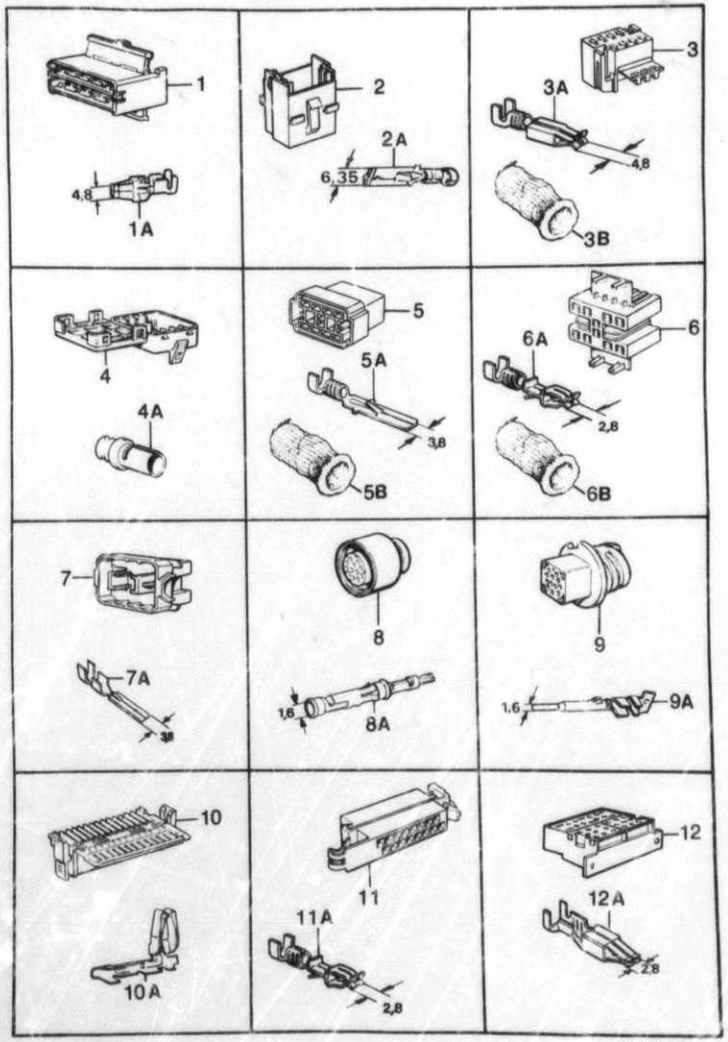

F2932 CAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig. hylsa	4
0650								
0660	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3--C08

Contact housing etc
1991

Kontakthus etc
1991

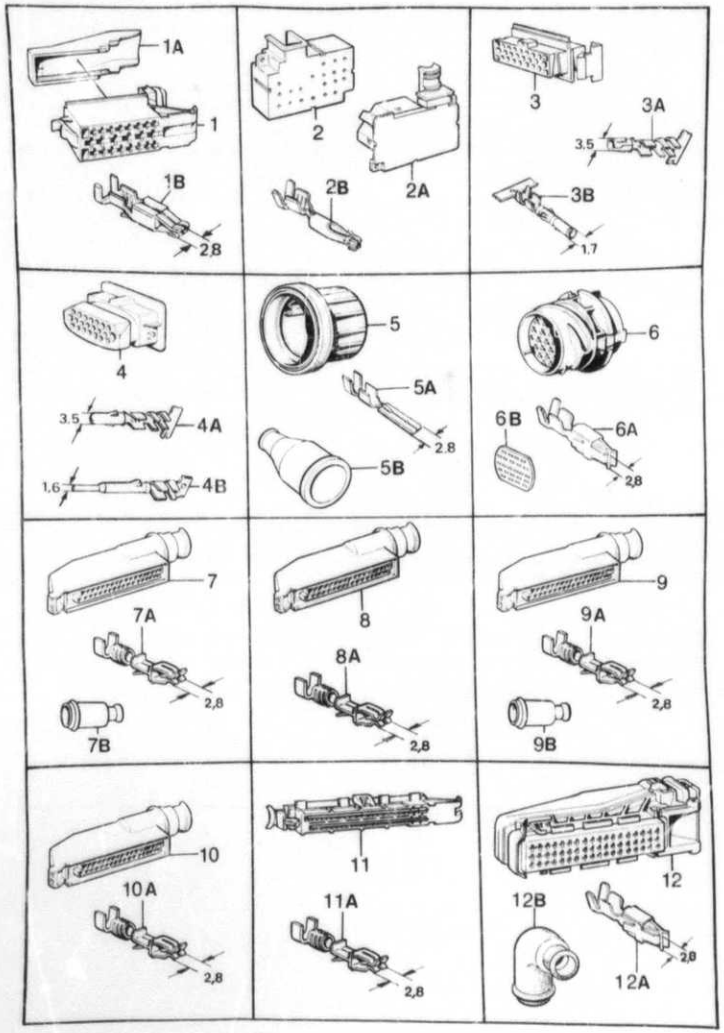

F3812 - CAC90


0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0020								
0030	1A	40 67 617			X	Cover	Kåpa	4
0040	1B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0070								
0080	2A	95 27 763			X	Contact housing	Kontakthus	4
0090	2B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0100								
0110	3	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0120								
0130	3A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0140	3B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0150								
0160	4	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0170								
0180	4A	85 82 603		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0190	4B	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0200								
0210	5	40 60 877		JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 24-pole, male	Kontakthus 24-polig, stift	5
0220								
0230	5A	40 63 376		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0240	5B	41 11 308			X	Rubber protection	Gummiskydd	4
0250	5C	45 88 349			X	Lock ring	Låsring	
0260								
0270	6	*40 60 885*		JOINT PIECE CABLE HARNESS ENGINE NLS - USE 4176244	X	Contact housing 24-pole, female	Kontakthus 24-polig, hylsa	5
0280								
0290	6A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0300	6B	43 52 936			X	Seal	Tätning	5
0310								
0320	7	91 25 519		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0330								
0340	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0350	7B	85 87 511			X	Rubber protection	Gummiskydd	4
0360								
0370	8	40 68 441		ELECTRONIC UNIT ABS	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0380								
0390	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0400								
0410	9	*95 66 266*		ELECTRONIC UNIT APC/DI NLS - USE 4109310	X	Contact housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0420								
0430	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0430								
0440	9B	91 20 106			X	Protection	Skydd	4
0450								
0460	10	41 09 310		ELECTRONIC UNIT ETS	X	Contact housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0470								
0480	10A	91 20 957		AREA, 1,0-2,5 MM2		Cable terminal	Kabelsko	5
0490								
0500	11	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing 39-pole, female	Kontakthus 39-polig, hylsa	5
0510								
0520	11A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0530	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0540								
0550	12	40 61 446		ELECTRONIC UNIT ABS/TCS	X	Contact housing 55-pole, female	Kontakthus 55-polig, hylsa	5
0560								
0570	12A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0580	12B	40 67 492			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

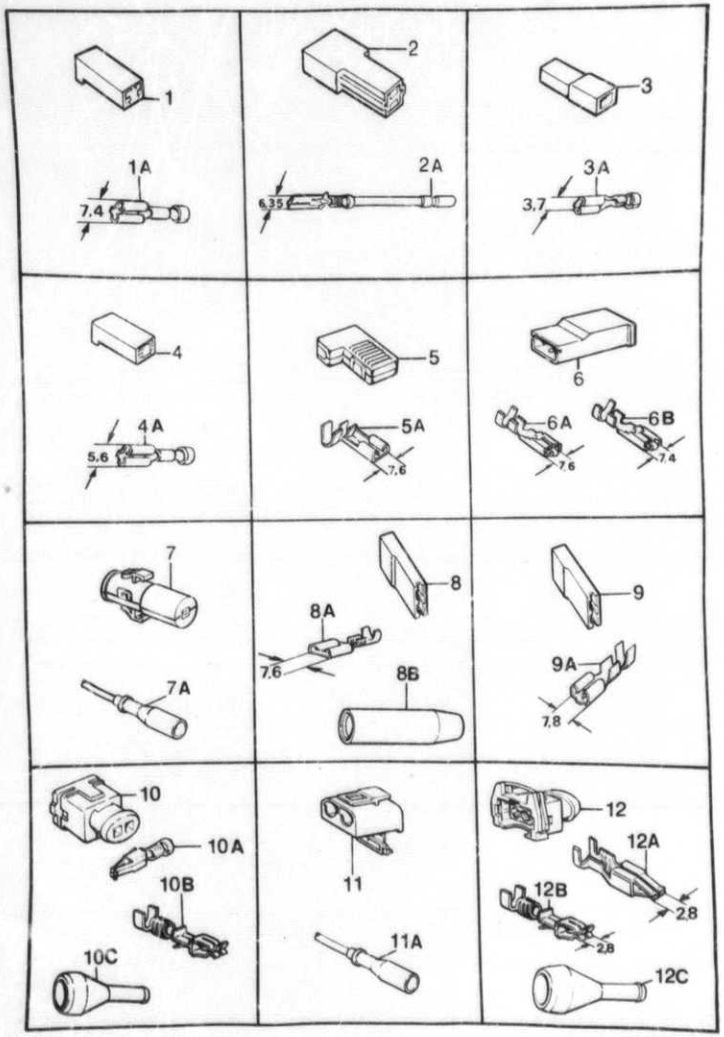

F3813 - CAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, MAKE UP MIRROR, HIGH MOUNTED STOP LIGHT STOP LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0040	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050	1A	85 22 534		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0070	2	71 55 120		EL-MIRROR, EL-CENTRAL, LIGHT GEAR INDICATOR	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0090	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0110	3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0130	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0150	4	85 33 184		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0170	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190	5	85 21 692		IGNITION COIL, REAR DEMIST, LIGHT ASH TRAY, ENGINE COMPARTMENT LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0220	5A	85 22 526		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230	5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
0250	6	85 41 229		SPOTLIGHT, SAFETY BELT WARNING, SWITCH SPOT-LIGHT, LIGHT INSTEP, LIGHT NUMBER PLATE, GLOVE COMPARTMENT LIGHT	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0300	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 3560476	X	Cable terminal	Kabelsko	5
0310	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0330	7	95 03 418		COMPRESSOR	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0350	7A	85 47 796			X	Connector	Skarvstycke	5
0370	8	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, SWITCH HORN, HORN, LIGHT LUGGAGE COM-PARTMENT, FOG LIGHT, SWITCH HAND BRAKE, STARTER MOTOR, JOINT PIECE REAR DOOR	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
0440	8A	71 55 716		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0450	8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0460	8B	95 69 997			X	Protection	Skydd	4
0480	9	83 78 630		PEDAL CONTACT SPEED CONTROL, JOINT PIECE BRAKE,JOINT PIECE CLUTCH	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0510	9A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
0530	10	85 93 899		AUXILIARY AIR VALVE, INJECTION VALVE, KNOCK SENSOR, FUEL SYSTEM, MAIN VALVE, VENTILATION, COLD START VALVE, BY-PASS, TEMP SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0590	10A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0600	10B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0610	10C	85 21 619			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C12

Contact housing etc
1992

Kontakthus etc
1992

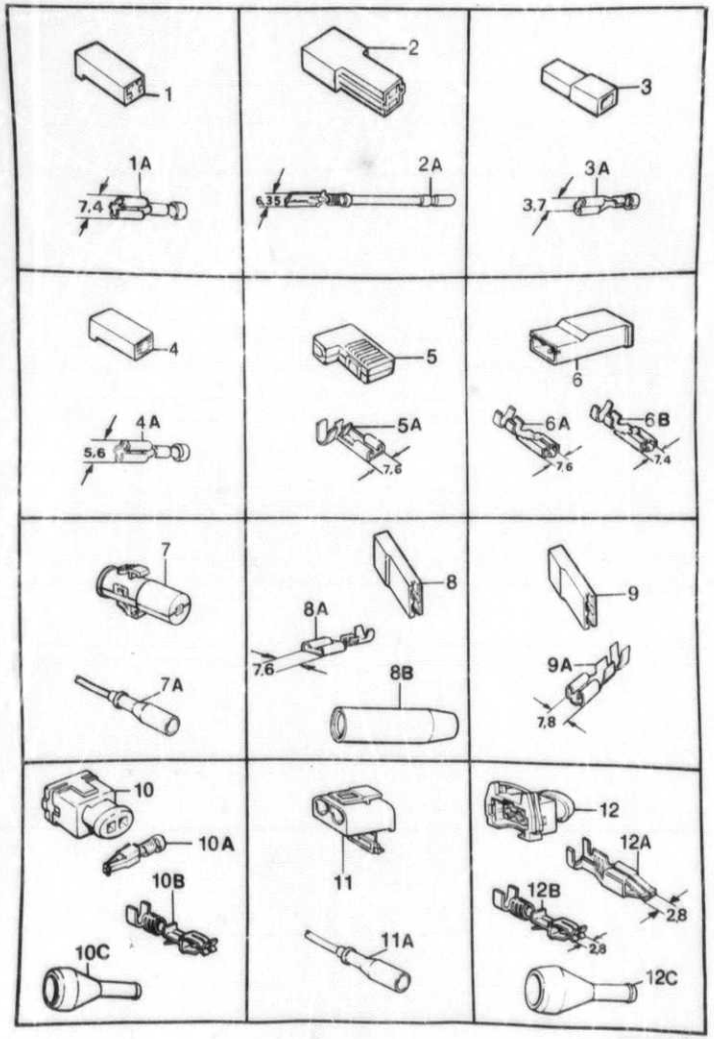

F3813 - CAC90

0850	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	11	95 03 319		EL. WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0640				STD FAN, LEVEL GUARD		2-pole, female	2-polig, hylsa	
0650				RADIATOR, LEVEL SWITCH,				
0660				WASHER MOTOR, FAN AC,				
0670				FOG LIGHT, JOINT PIECE,				
0680				OUTER TEMP, JOINT PIECE				
0690				THERMO CONTACT, MICRO				
0700				SWITCH, FAN, FOG LIGHT				
0710				EXTRA, ABS, SWITCH, HORN				
0720				SWITCH BRAKE LIGHT, BY-				
0730				PASS, APC DISSANGAGEMENT				
0740				THEFT ALARM, JOINT PIECE				
0750				TRUNK LID, DOOR FAN				
0760	11A	85 47 796			X	Connector	Skarvstycke	5
0770								
0780	12	85 93 915		THERMO SWITCH	X	Contact housing	Kontakthus	4
0790						2-pole, female	2-polig, hylsa	
0800	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0810	12B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0810								
0820	12C	85 71 382			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C14

Contact housing etc
1992

Kontakthus etc
1992

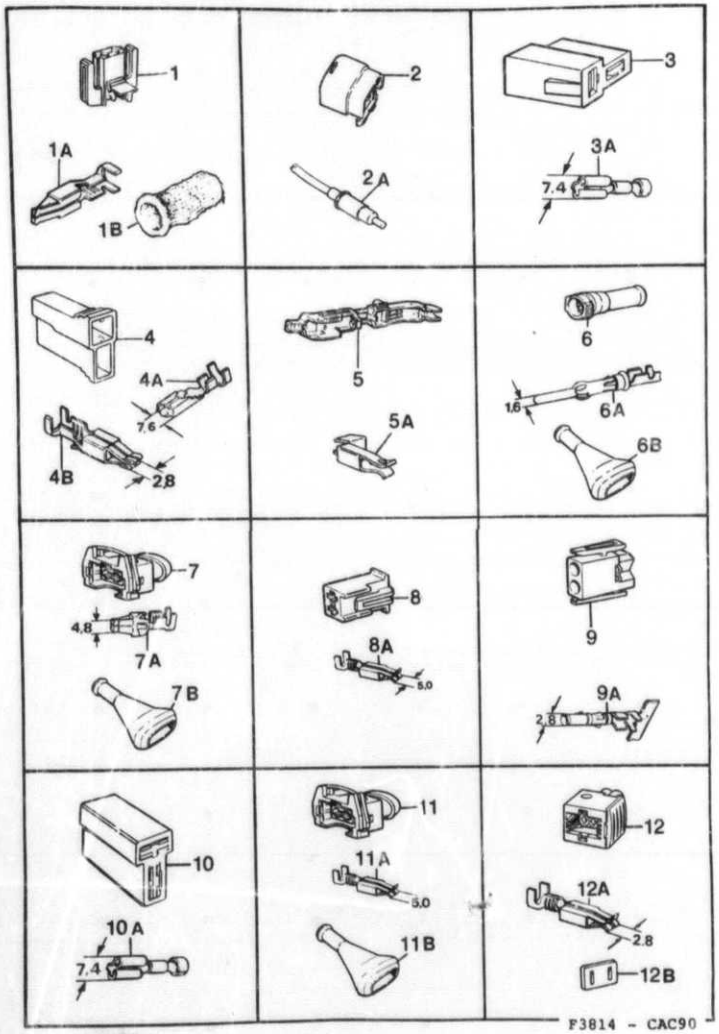

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 157		LIGHT MIRROR, ACC, LIGHT CONTROLS, FAN AC, MOTOR ANTENNA	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0040	1A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0060	1B	*95 68 775*		NLS	X	Insulation	Isolering	4
0080	2	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, JOINT PIECE MAIN CABLEHARNESS, JOINT PIECE CABLEHARNESS FRONT, SWITCH LUGGAGE COMPARTMENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0140	2A	85 47 770			X	Connector	Skarvstycke	5
0160	3	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0190	3A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0200	3A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0220	4	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0240	4A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0250	4B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0270	5	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0290	5A	95 52 191			X	Cable terminal	Kabelsko	5
0310	6	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0330	6A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0340	6B	85 79 955			X	Protection	Skydd	4
0360	7	95 19 422		PUMP ABS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0380	7A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0390	7B	85 79 955			X	Protection	Skydd	4
0410	8	91 23 548		SIGNAL, THEFT ALARM, CONTROL LAMP LIGHT, LOUDSPEAKER, BY-PASS, DOOR SWITCH,LIGHT CENTRE CONSOL, JOINT PIECE MAIN CABLE HARNESS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0470	8A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0490	9	95 25 809		INFLATOR AIR-BAG	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0510	9A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0530	10	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0550	10A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570	11	85 97 064		IDLE COMPENSATOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0590	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0600	11B	85 71 382			X	Protection	Skydd	4
0620	12	41 13 205		RESISTOR DAY DRIVING LIGHT, SPEED SENSOR	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C16

Contact housing etc
1992

Kontakthus etc
1992

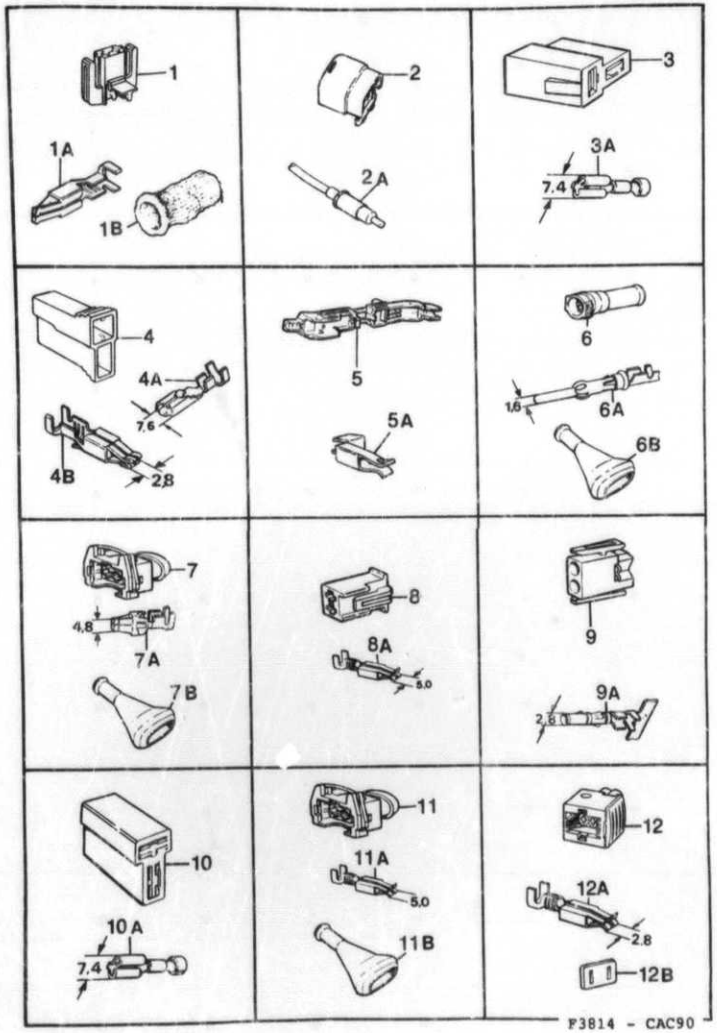

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0650	12B	41 14 310			X	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C18

Contact housing etc
1992

Kontakthus etc
1992

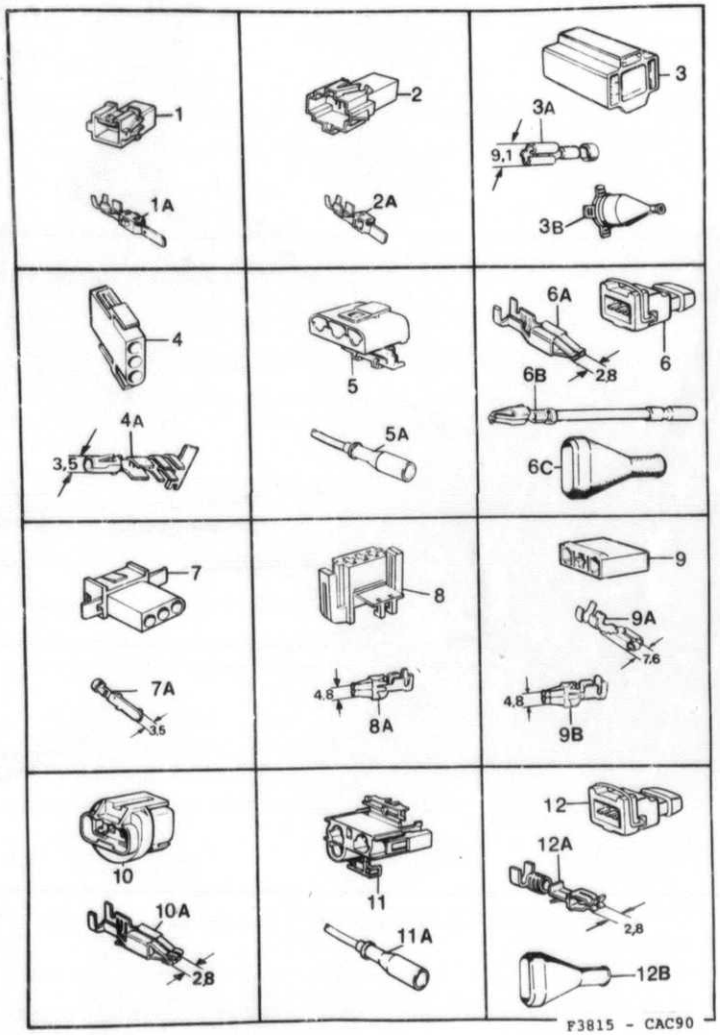

F3815 - CAC90


0950	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	41 17 164		JOINT PIECE TEMP SENSOR,	X	Connector housing	Kontakthus	4
0020				SIDE INDICATOR LAMP		2-pole, male	2-polig, stift	
0030	1A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	41 17 560		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing	Kontakthus	4
0060						2-pole, male	2-polig, stift	
0070	2A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0100						3-pole, female	3-polig, hylsa	
0110	3A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0120	3B	85 52 721			X	Cable protection	Kabelskydd	4
0130								
0140	4	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing	Kontakthus	4
0150						3-pole, female	3-polig, hylsa	
0160	4A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0170								
0180	5	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR, CENTRAL LOCK, ABS, FAN, HEADLIGHT LEVELLING, BY-PASS, THEFT ALARM DOOR,PRESSURE MONITOR AC	X	Contact housing	Kontakthus	4
0190						3-pole, female	3-polig, hylsa	
0200								
0210								
0220								
0230								
0240	5A	85 47 796			X	Connector	Skarvstycke	5
0250	5A	85 47 812			X	Connector	Skarvstycke	5
0260								
0270	6	85 93 907		THROTTLE SWITCH, SOLE-NOID VALVE APC	X	Contact housing	Kontakthus	4
0280						3-pole, female	3-polig, hylsa	
0290	6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0300	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0310	6B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0320	6C	85 79 955			X	Protection	Skydd	4
0330								
0340	7	85 64 924		JOINT PIECE, NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing	Kontakthus	5
0350						3-pole, male	3-polig, stift	
0360								
0370								
0380	7A	85 82 603		AREA 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0390	7A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0400								
0410	8	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, SEAT CONTACT, SPEED SENSOR, ELECTRONIC UNIT SPEED WARNING DEVICE, AMPLIFIER	X	Contact housing	Kontakthus	4
0420						3-pole, female	3-polig, hylsa	
0430								
0440								
0450								
0460								
0470								
0480								
0490								
0500	8A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0510								
0520	9	95 07 658		SWITCH INNER LIGHT	X	Contact housing	Kontakthus	4
0530						3-pole, female	3-polig, hylsa	
0540	9A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0550	9B	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0560								
0570	10	95 14 803		HEADLIGHT US	X	Contact housing	Kontakthus	4
0580						3-pole, female	3-polig, hylsa	
0590	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0600	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0610								
0620	11	95 19 679		DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing	Kontakthus	4
0630						3-pole, female	3-polig, hylsa	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

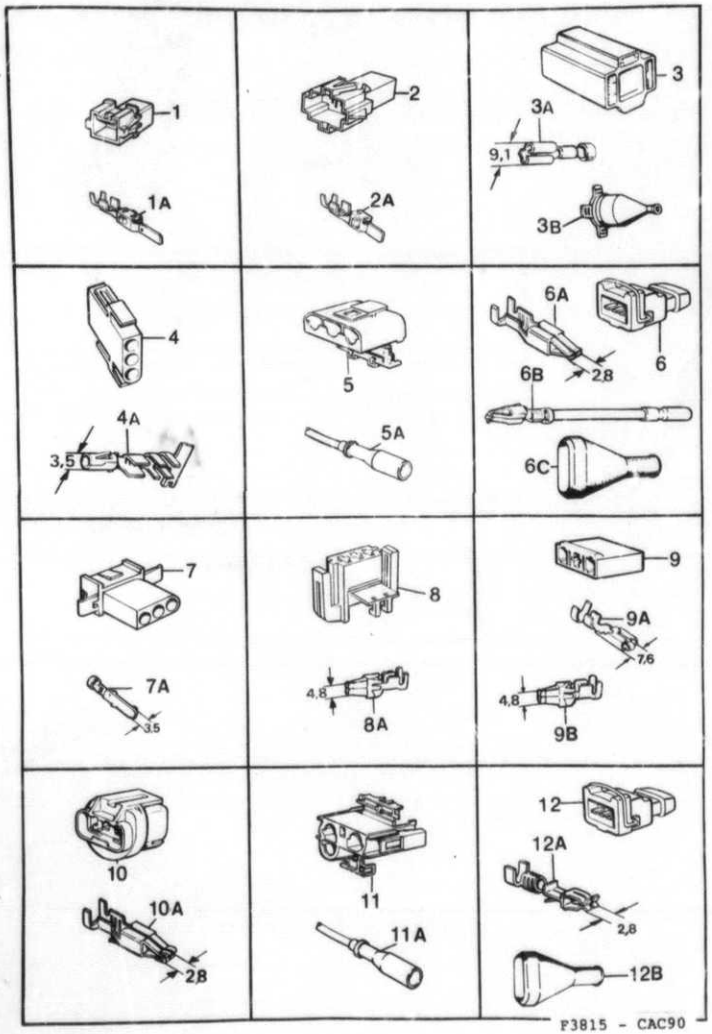

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	11A	85 47 796			X	Connector	Skarvstycke	5
0650	11A	78 74 498			X	Connection	Skarv	5
0660								
0670	12	85 93 923		IDLE COMPENSATOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0680								
0690	12A	*91 20 668*		AREA 0,75-1,0 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0690								
0700	12A	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0710	12B	85 79 955			X	Protection	Skydd	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-C22

Contact housing etc
1992

Kontakthus etc
1992

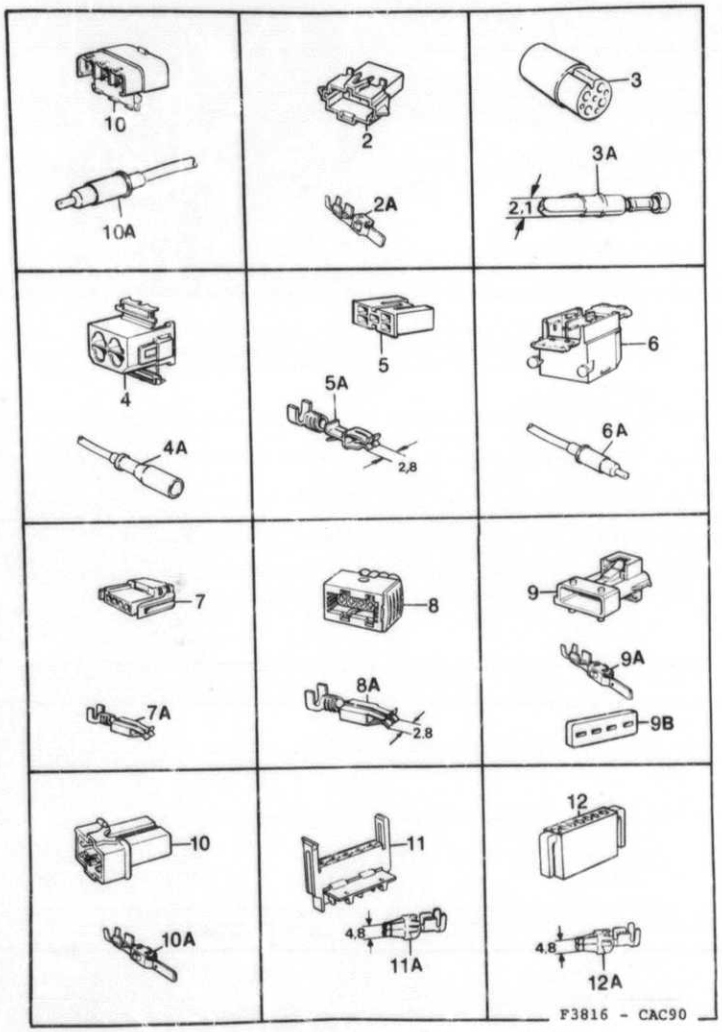


1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 327		PRESSURE MONITOR AC R1.4A	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0030	1A	85 47 770			X	Connector	Skarvstycke	5
0050	2	41 17 669		JOINT PIECE MAIN CABLE HARNESS EL-ADJUSTED SEAT	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0070	2A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0090	3	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0110	3A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0130	4	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, FUEL PUMP SENSOR, THEFT ALARM, IGNITION CASETTE, THERMOSTAT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0180	4A	85 47 796			X	Connector	Skarvstycke	5
0190	4A	78 74 498			X	Connection	Skarv	5
0210	5	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE, SWITCH WARNING FLASHER, REAR WIPER, TAIL LAMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0270	5A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0290	6	95 03 442		IGNITION CASETTE	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0310	6A	85 47 770			X	Connector	Skarvstycke	5
0330	7	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0350	7A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0360	7A	91 21 088		AREA, 0,2-0,5 MM2	X	Cable terminal	Kabelsko	3
0380	8	41 13 601		HEAD LIGHT CS, LAMBDA SONDE, SENSOR AIR-BAG	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0400	8A	43 50 526		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0410	8A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	9	41 13 650		JOINT PIECE MAI CABLE HARNESS, CRANK SHAFT SENSOR	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0460	9A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0470	9B	41 13 759			X	Seal	Tätning	5
0490	10	41 17 263		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0510	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0530	11	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0550	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0570	12	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0600	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

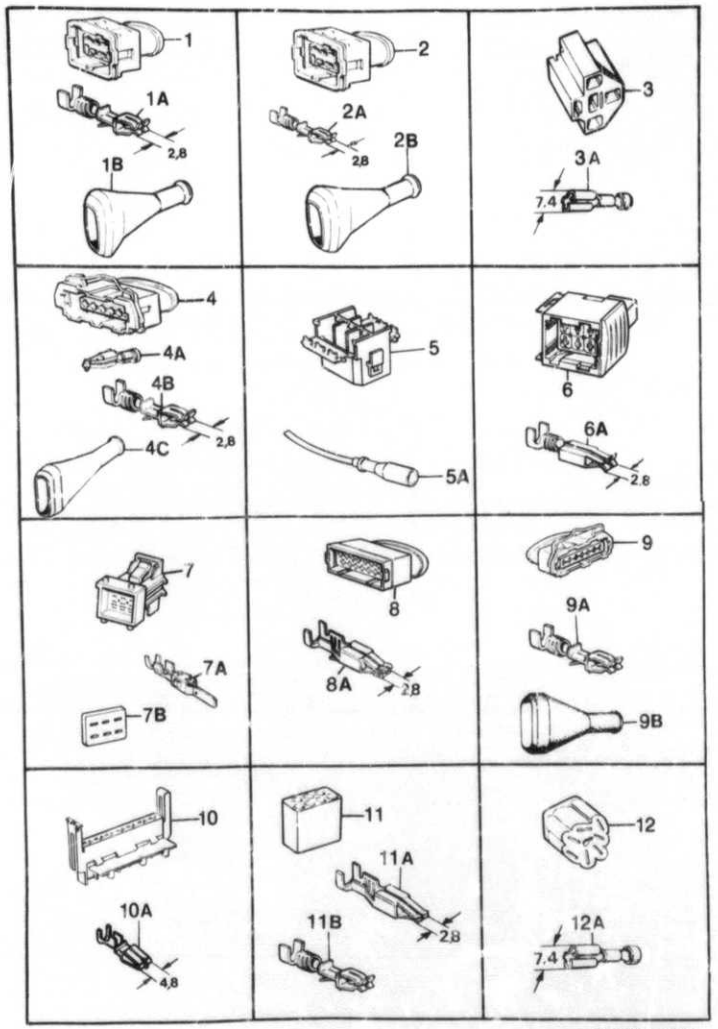

F4315 CAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 19 414		PRESSURE MONITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0020								
0030	1A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0040	1B	85 79 955		AREA, 1,0-2,5 MM2	X	Protection	Skydd	4
0050								
0060	2	95 19 455		LEVEL ABS, VALVES, ETS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0070								
0080	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0090	2B	95 19 430			X	Protection	Skydd	4
0100								
0110	3	85 33 697		RELAY EXHAUST TEMP, WASHER PUMP REAR WIPER	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0120								
0130	3A	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0140								
0150	4	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0160								
0170	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0180	4B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190	4C	85 82 082			X	Protection	Skydd	4
0200								
0210	5	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0220								
0230	5A	85 47 796			X	Connector	Skarvstycke	5
0240	5A	78 74 486			X	Connection	Skarv	5
0250								
0260	6	41 13 809		WASHER MOTOR, CENTRAL LOCK, JOINT PIECE BOOT LID, REAR LOUD SPEAKER, JOINT PIECE ENGINE	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0270								
0280								
0290								
0300	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0310	6A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0320								
0330	7	41 13 858		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 6-pole, male	Kontakthus 6-polig, stift	4
0340								
0350	7A	41 15 132		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	7B	41 14 377			X	Seal	Tätning	5
0370								
0380	8	41 76 012		RADIO	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0390								
0400	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0410	8B	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0420								
0430	9	85 93 949		POWER STAGE, VALVE, OUTPOT STAGE, SETTING MOTOR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0440								
0450								
0460	9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0460								
0470	9B	85 74 048			X	Protection	Skydd	4
0480								
0490	10	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT, SWITCH FLASHER, REAR WIPER	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0500								
0510								
0520								
0530								
0540	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	11	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0570								
0580	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0590	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	5-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D02

Contact housing etc
1992

Kontakthus etc
1992

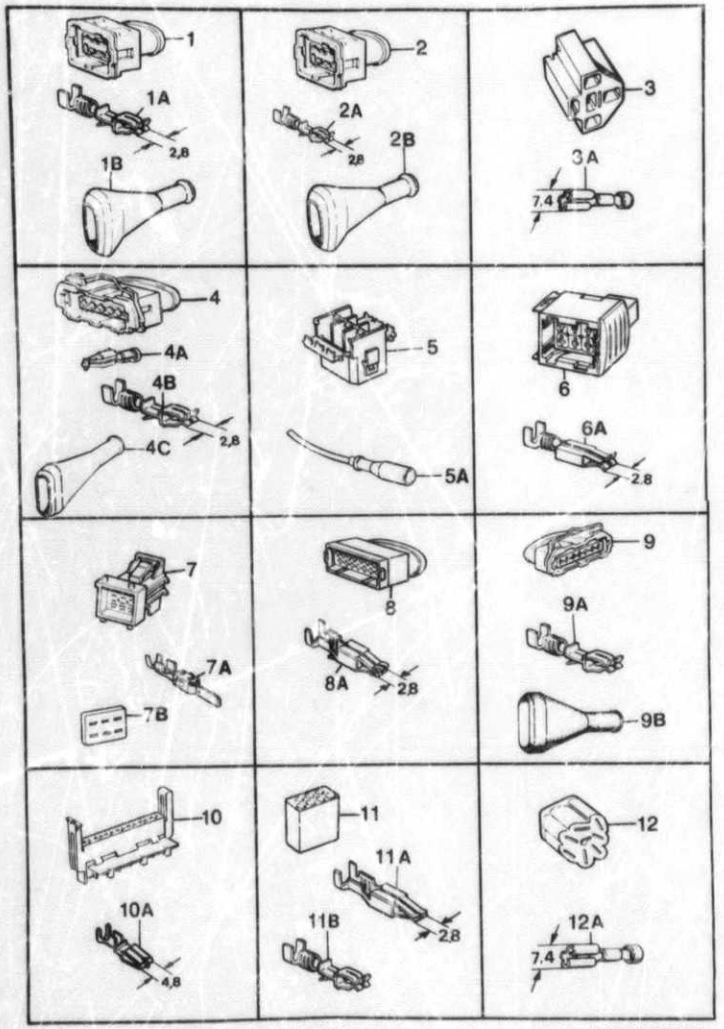

F4315 CAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0600								
0610								
0620	12	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0630								
0640	12A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0640								
0650	12A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D04

Contact housing etc
1992

Kontakthus etc
1992

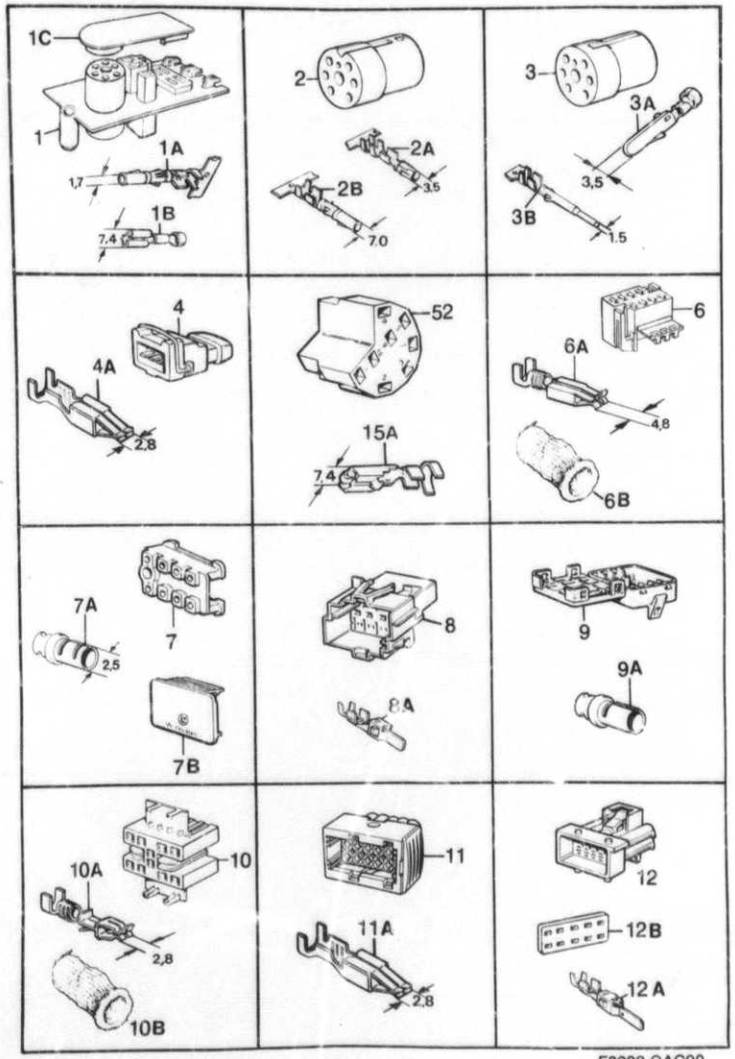

F3999 CAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0030	1A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0040	1A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	1B	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0060	1C	95 20 974			X	Cover	Lock	9
0080	2	85 21 700		JOINT PIECE, JOINT PIECE REAR DOOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0100	2A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0110	2B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0130	3	85 21 718		JOINT PIECE, JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0150	3A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0160	3B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0180	4	40 61 479		VALVES	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0200	4A	91 20 957		AREA, 0,75-1,5 MM2	X	Cable terminal	Kabelsko	5
0220	5	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0240	5A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0250	5A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0270	6	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, CENTRAL LOCK, TOW HOOK, TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0340	6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0350	6B	*95 68 775*		NLS	X	Insulation	Isolering	4
0370	7	95 52 159		ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0390	7A	95 52 175			X	Cable terminal	Kabelsko	5
0400	7B	95 52 167			X	Cover	Lock	4
0420	8	41 17 768		HEATING PAD	X	Connector housing 8-pole, male	Kontakthus 8-polig, stift	4
0440	8A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0460	9	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0480	9A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	10	91 23 399		SWITCH AC, RECIRKULATION AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELLING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT LIGHT INSTEP, LOUD SPEAKER, JOINT PIECE REAR CABLE HARNESS, JOINT PIECE, BOOT LID, COOLING FAN REAR AC	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0610	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0620	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0630	10B	*95 68 775*		NLS	X	Insulation	Isolering	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D06

Contact housing etc
1992

Kontakthus etc
1992

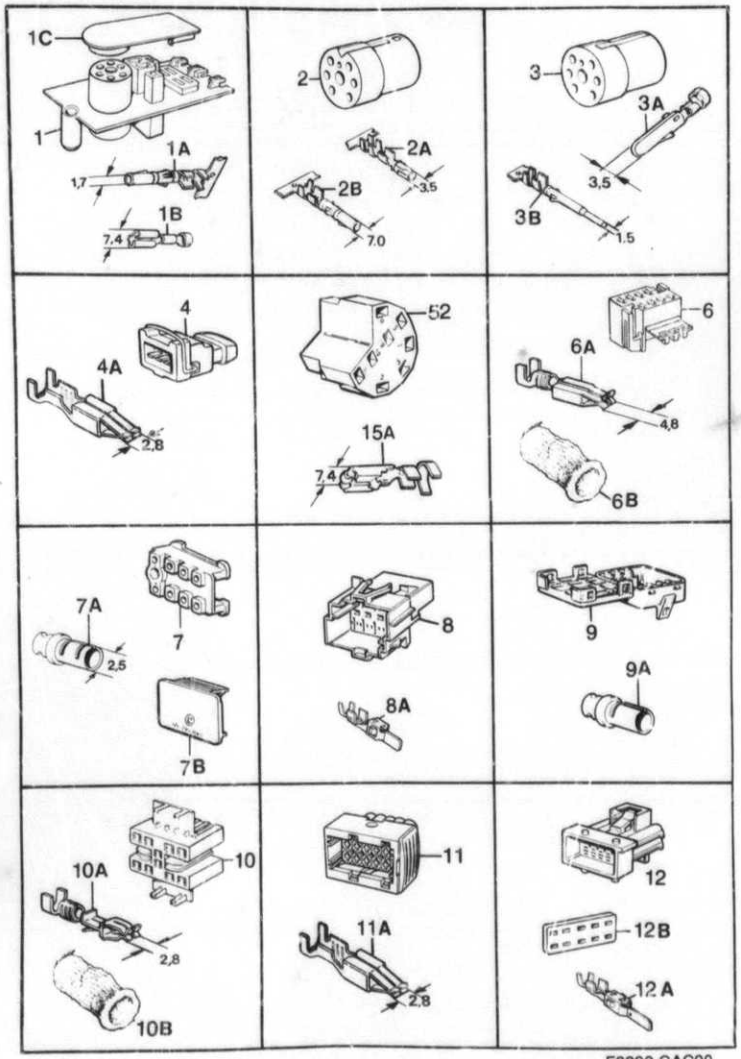

F3999 CAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640								
0650	11	41 14 005		ABS, JOINT PIECE	X	Connector housing	Kontakthus	4
0660				CABLE HARNESS FRONT, JOINT PIECE ENGINE,		10-pole, female	10-polig, hylsa	
0670				BULB CONTROL, JOINT				
0680				PIECE MAIN CABLE HARNESS				
0690								
0700	11A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0710	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0720								
0730	12	41 14 054		JOINT PIECE MAIN CABLE	X	Connector housing	Kontakthus	4
0740				HARNESS, JOINT PIECE		10-pole, male	10-polig, stift	
0750				ENGINE				
0760	12A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0770	12B	41 14 153			X	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3--D08

Contact housing etc 1992

Kontakthus etc 1992

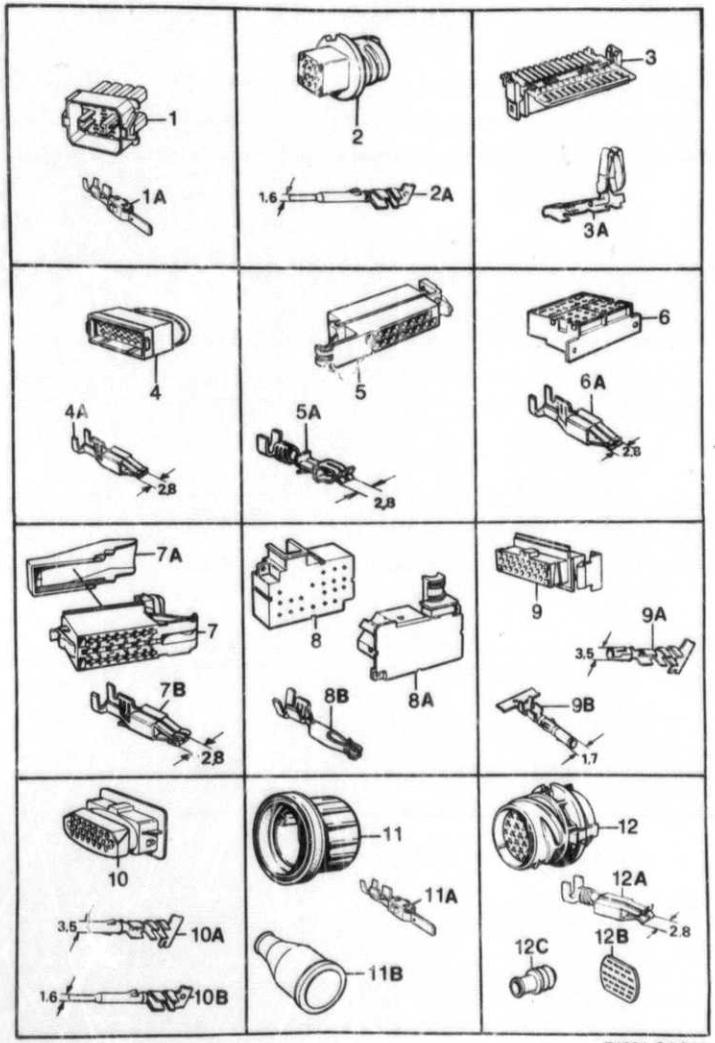

F4821 CAC90

1150	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	41 17 461		DIAGNOS ENGINE, JOINT	X	Connector housing	Skarvhus	4
0020				PIECE CABLE HARNESS		10-pole, male	10-polig, stift	
0030				ROOF, POWER SUPPLY,				
0040				RADIO, DIAGNOS CAR,				
0050				JOINT PIECE, REAR AC				
0060	1A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0070	1A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	2	95 29 512		JOINT PIECE MAIN CABLE	X	Contact housing	Kontakthus	4
0100				HARNESS/AIR-BAG		12-pole, male	12-polig, stift	
0110	2A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	3	95 03 020		INSTRUMENTS	X	Contact housing	Kontakthus	4
0140						14-pole, female	14-polig, hylsa	
0150	3A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0160								
0170	4	41 09 278		SPEED CONTROL	X	Connector housing	Kontakthus	4
0180						15-pole, female	15-polig, hylsa	
0190	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0200								
0210	5	95 66 282		ELECTRONIC UNIT THEFT	X	Contact housing	Kontakthus	4
0220				ALARM, EAS WITH MEMORY,		16-pole, female	16-polig, hylsa	
0230				AMPLIFIER				
0240	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0240				USE 9120957				
0250	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0260								
0270	6	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing	Kontakthus	4
0280						18-pole, female	18-polig, hylsa	
0290	6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	7	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing	Kontakthus	5
0320						19-pole, female	19-polig, hylsa	
0330	7A	40 67 617			X	Cover	Kåpa	4
0340	7B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	8	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing	Kontakthus	4
0370						20-pole, female	20-polig, hylsa	
0380	8A	95 27 763			X	Contact housing	Kontakthus	4
0390	8B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0400								
0410	9	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing	Kontakthus	4
0420						22-pole, female	22-polig, hylsa	
0430	9A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0440	9B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0450								
0460	10	95 25 114		JOINT PIECE DOORS	X	Contact housing	Kontakthus	4
0470						22-pole, male	22-polig, stift	
0480	10A	85 82 603		AREA, 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0490	10B	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0500								
0510	11	41 74 868		JOINT PIECE MAIN CABLE	X	Connector housing	Kontakthus	4
0520				HARNESS, JOINT PIECE		24-pole, male	24-polig, stift	
0530				CABLE HARNESS FRONT				
0540	11A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0550	11B	41 11 308			X	Rubber protection	Gummiskydd	4
0555	11C	45 88 349			X	Lock ring	Låsring	
0560								
0570	12	41 76 244		JOINT PIECE CABLE	X	Connector housing	Kontakthus	4
0580				HARNESS ENGINE		24-pole, female	24-polig, hylsa	
0590	12A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0600	12B	43 52 936			X	Seal	Tätning	5
0610	12C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
0670	12C	40 61 966		1,2-2,0 MM	X	Seal	Tätning	5
0630	12C	40 61 974		2,1-2,0 MM	X	Seal	Tätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3--D10

Contact housing etc
1992

Kontakthus etc
1992

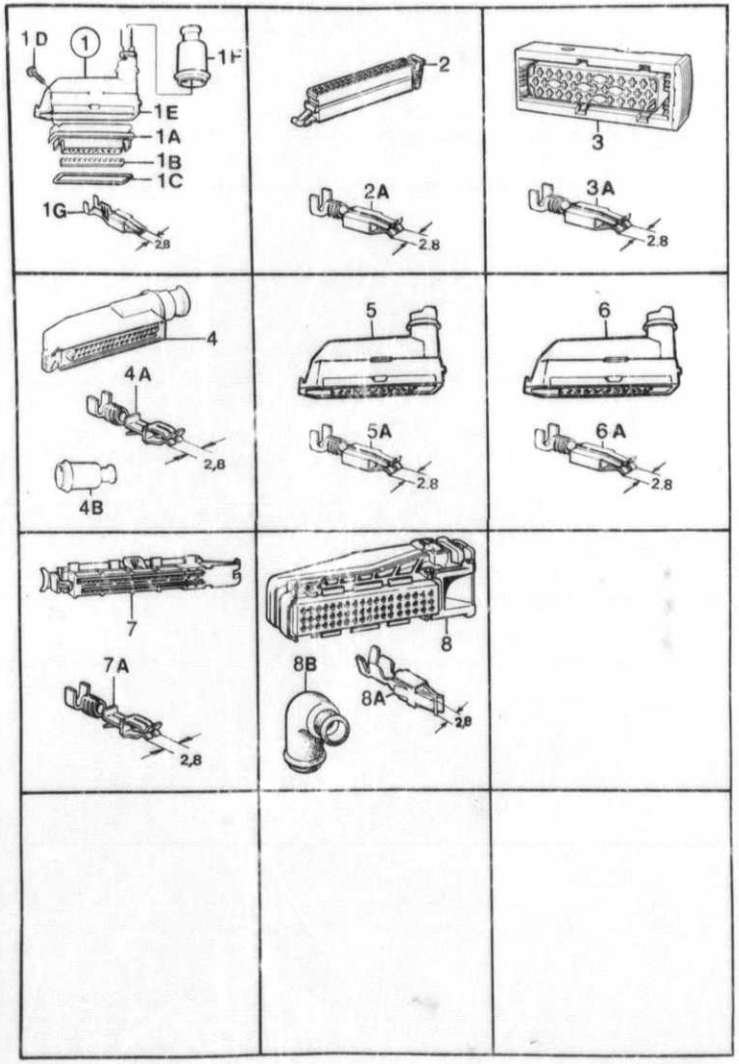

F4000 CAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 86 802		ELECTRONIC UNIT EZK	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0020								
0030	1A	85 87 420			1	. Contact housing	. Kontakthus	4
0040	1B	85 87 438		1)	1	. Striker plate	. Låsbleck	5
0050	1C	85 87 453		1)	1	. Seal	. Tätning	5
0060	1D	85 87 487		1)	1	. Screw	. Skruv	5
0070	1E	85 87 503		1)	1	. Cover	. Kåpa	4
0080	1F	85 87 511		1)	1	. Rubber protection	. Gummiskydd	4
0090	1G	91 20 957		AREA, 1,0-2,5 MM2	1	. Cable terminal	. Kabelsko	5
0100								
0110	2	41 76 186		ELECTRONIC UNIT ASR	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0120								
0130	2A	91 20 957		AREA, 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5
0140								
0150	3	41 14 609		DIAGNOSTIC UNIT AIR-BAG	X	Connector housing 29-pole, female	Kontakthus 29-polig, hylsa	4
0160								
0170	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0180								
0190	4	91 25 519		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0200								
0210	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0210								
0220	4B	85 87 511			X	Rubber protection	Gummiskydd	4
0230								
0240	5	41 75 428		ELECTRONIC UNIT ETS	X	Connector housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0250								
0260	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0270								
0280	6	41 76 269		ELECTRONIC UNIT	X	Connector housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0290								
0300	6A	91 20 957		AREA, 1,0-2,5 MM2		Cable terminal	Kabelsko	5
0310								
0320	7	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing 39-pole, female	Kontakthus 39-polig, hylsa	5
0330								
0340	7A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0350	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360								
0370	8	41 76 210		ELECTRONIC UNIT ETS	X	Contact housing 55-pole, female	Kontakthus 55-polig, hylsa	5
0380								
0390	8A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0400	8B	40 61 461			X	Cover	Kåpa	4

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D12

Contact housing etc
1993

Kontakthus etc
1993

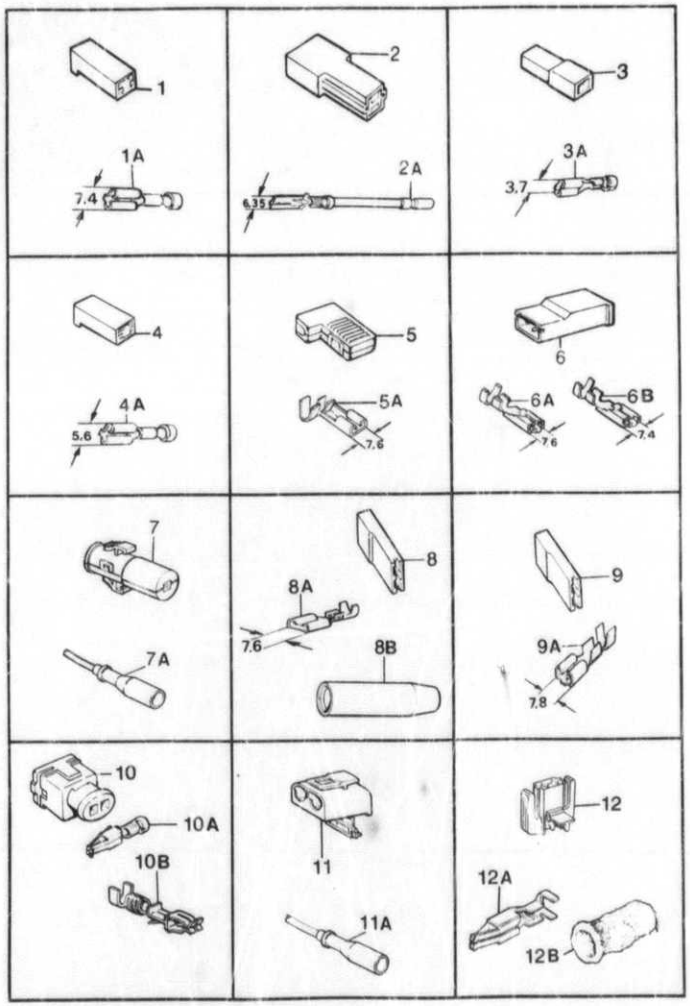

F4465 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 112		IGNITION PULS, LIGHT GEAR INDICATOR, HIGH MOUNTED STOP LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
2	71 55 120		EL-MIRROR, EL-CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4	85 33 184		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 21 692		IGNITION COIL, REAR DEMIST, LIGHT ASH TRAY, ENGINE COMPARTMENT LIGHT	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
5A	85 22 526		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
6	85 41 229		LIGHT INSTEP, LIGHT NUMBER PLATE, GLOVE COMPARTMENT LIGHT	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7	95 03 418		COMPRESSOR	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
7A	85 47 796			X	Connector	Skarvstycke	5
8	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, HORN, LIGHT LUGGAGE COMPARTMENT, SWITCH HAND BRAKE, JOINT, SHIFTING MOTOR PIECE REAR DOOR	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
8B	95 69 997			X	Protection	Skydd	4
9	83 78 630		PEDAL CONTACT SPEED CONTROL, JOINT PIECE BRAKE,JOINT PIECE CLUTCH	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
9A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable terminal	Kabelsko	5
10	85 93 899		AUXILIARY AIR VALVE, FUEL SYSTEM, VENTILATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
10A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
10B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
11	95 03 319		EL. WINDOW REGULATOR, STD FAN, LEVEL GUARD RADIATOR, LEVEL SWITCH, WASHER MOTOR, FAN AC, FOG LIGHT, JOINT PIECE, OUTER TEMP, JOINT PIECE THERMO CONTACT, MICRO SWITCH, FAN, FOG LIGHT EXTRA, ABS, SWITCH, HORN	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D14 Contact housing etc 1993

Kontakthus etc 1993

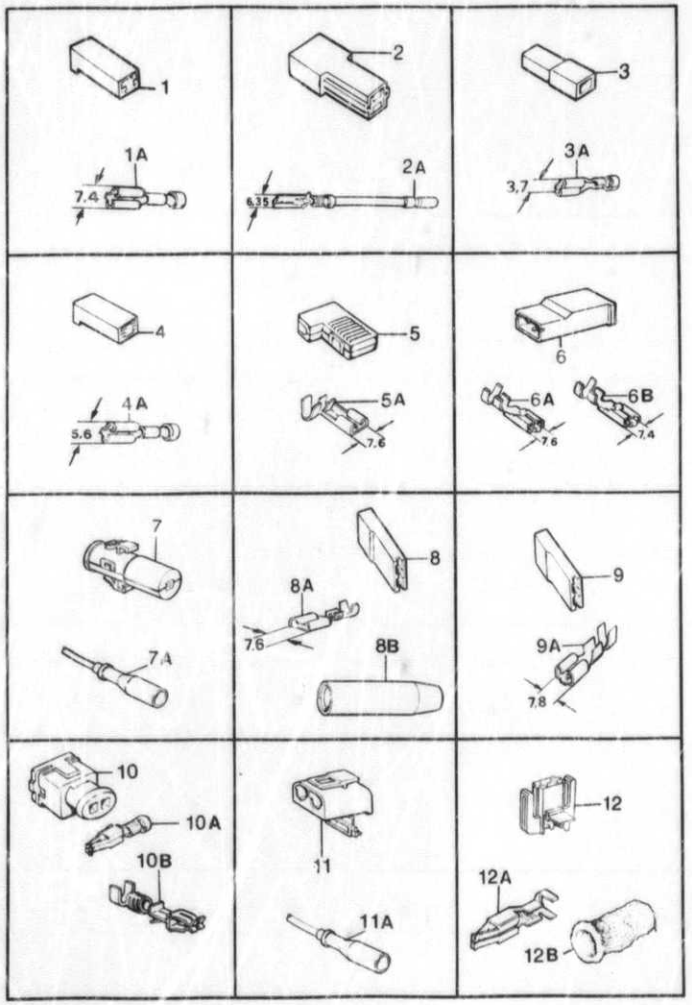

F4465 CAC90

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620				SWITCH BRAKE LIGHT, BY-PASS, APC DISSANGAGEMENT THEFT ALARM, JOINT PIECE TRUNK LID, DOOR FAN, DAY DRIVING LIGHT, CENTRAL LOCK TRUNK LID				
0630								
0640								
0650								
0660								
0670								
0680	11A	85 47 796			X	Connector	Skarvstycke	5
0690								
0700	12	91 24 157		LIGHT MIRROR, ACC, LIGHT CONTROLS, FAN AC, JOINT TRUNK LID, CENTRAL LOCK TANK HATCH	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0710								
0720								
0730								
0746	12A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0750	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0760	12B	*95 68 775*		NLS	X	Insulation	Isolering	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D16

Contact housing etc 1993

Kontakthus etc 1993

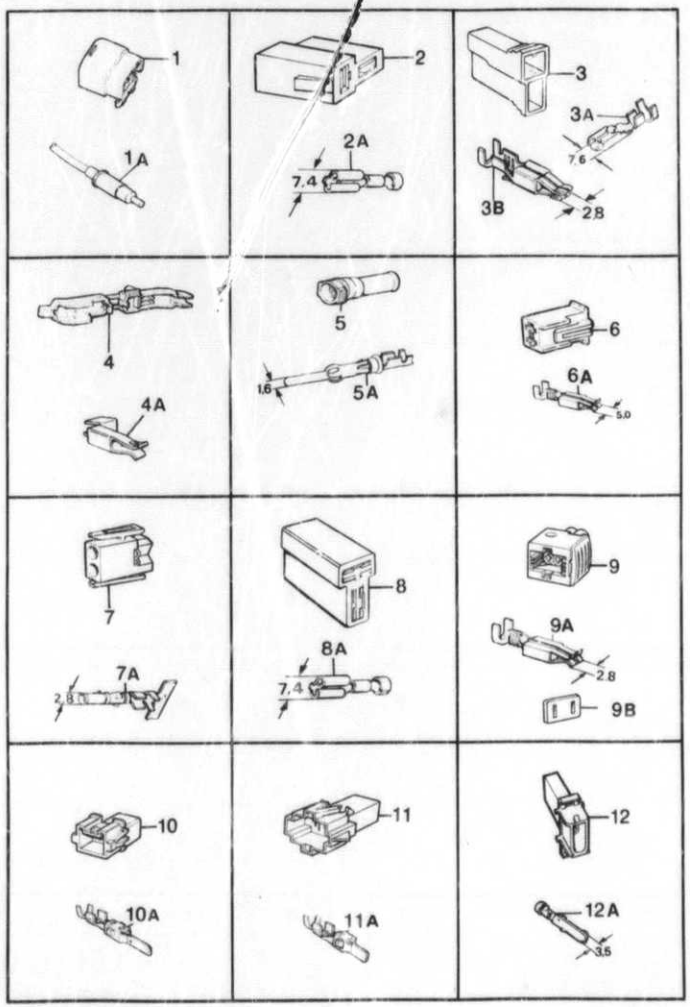

F4466 CAC90


1300	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, SWITCH LUGGAGE COMPARTMENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0050	1A	85 47 770			X	Connector	Skarvstycke	5
0070	2	85 58 538		CIGARETTE LIGHTER, ELECTRONIC UNIT BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0100	2A	*85 82 454*		AREA 0,5-1,5 MM2 NLS - USE 3522534	X	Cable terminal	Kabelsko	5
0110	2A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0130	3	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0150	3A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0160	3B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0180	4	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0200	4A	95 52 191			X	Cable terminal	Kabelsko	5
0220	5	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0240	5A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0260	6	91 23 548		SIGNAL, THEFT ALARM, CONTROL LAMP LIGHT, LOUDSPEAKER, BY-PASS, DOOR SWITCH,LIGHT CENTRE CONSOL, SOLENOID IGNITION LOCK, CODING EXTRA LIGHTS, SHIFT-LOCK	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0330	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0350	7	95 25 809		INFLATOR AIR-BAG	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0370	7A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0390	8	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0410	8A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0430	9	41 13 205		JOINT PIECE ABS UNIT, SPEED SENSOR,	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0450	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0480	9B	41 14 310			X	Seal	Tätning	5
0480	10	41 17 164		JOINT PIECE TEMP SENSOR, SIDE INDICATOR LAMP, SHIFT-LOCK	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0510	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0530	11	41 17 560		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0550	11A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0570	12	85 61 623		JOINT PIECE	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0590	12A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

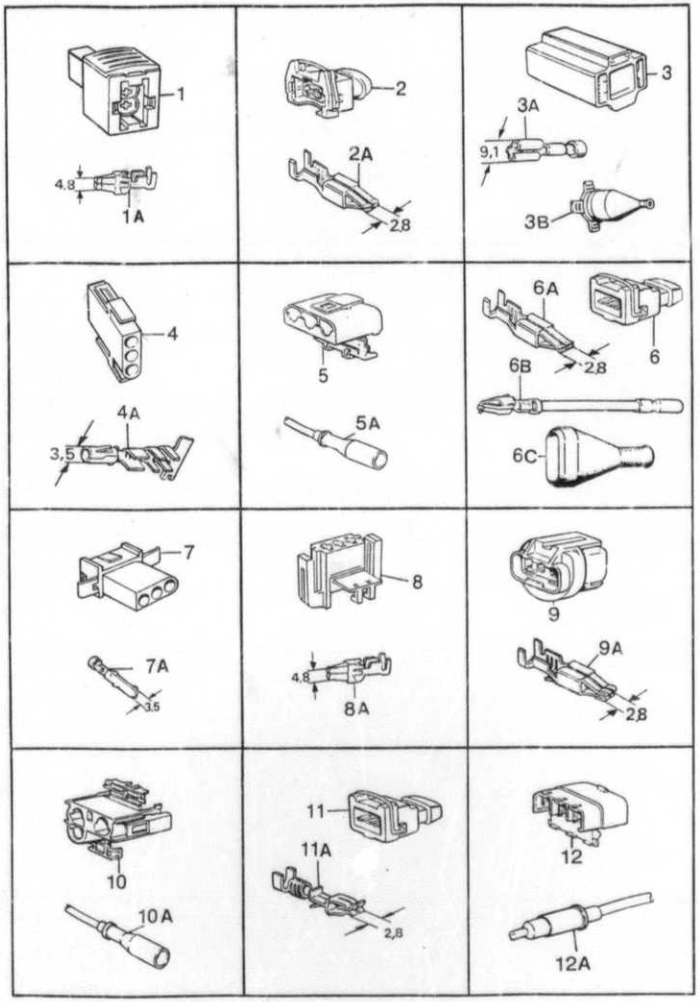

F4467 CAC90

Wiring and fuses

3-D18

Contact housing etc
1993

Ledningar och säkringar

Kontakthus etc
1993

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	41 13 411		JOINT PIECE ABS UNIT	X	Connector housing, 2-pole, female	Kontakthus, 2-polig, hylsa	4
1A	43 54 171		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
2	41 78 414		DUMP VALVE, BY-PASS, INJECTION VALVE, TEMP SENSOR,COLD START VALVE, KNOCK SENSOR, JOINT PIECE PEDAL SENSOR, AUXILIARY AIR VALVE, THERMO SWITCH	X	Connector housing, 2-pole, female	Kontakthus, 2-polig, hylsa	4
2A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
3	71 55 021		HEADLIGHT	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	5
3A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
3B	85 52 721			X	Cable protection	Kabelskydd	4
4	85 64 916		JOINT PIECE, JOINT PIECE B-PILLAR LH AND RH	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
4A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
5	95 03 277		SPEED CONTROL, HEADLIGHT WIPERS, WIPER MOTOR,ABS, FAN, CODING SPEED CONTR-ROL,HEADLIGHT LEVELLING, BY-PASS, THEFT ALARM DOOR,PRESSURE MONITOR AC	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
5A	85 47 796			X	Connector	Skarvstycke	5
6	85 93 907		PRESSURE SENSOR TRIONIC, SOLENOID VALVE APC	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
6A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
6B	85 22 617		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
6C	85 79 955			X	Protection	Skydd	4
7	85 64 924		NUMBER PLATE LIGHT, JOINT PIECE CABLE HAR-NESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing, 3-pole, male	Kontakthus, 3-polig, stift	5
7A	85 82 603		AREA 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
7A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
8	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, SEAT CONTACT, SPEED SENSOR, ELECTRONIC UNIT SPEED WARNING DEVICE	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
8A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
9	95 14 803		HEADLIGHT US	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
9A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
10	95 19 679		DIRECTION LIGHT, SIDE BACK-UP LIGHT	X	Contact housing, 3-pole, female	Kontakthus, 3-polig, hylsa	4
10A	85 47 796			X	Connector	Skarvstycke	5
10A	78 74 498			X	Connection	Skarv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D20 Contact housing etc 1993

Kontakthus etc 1993

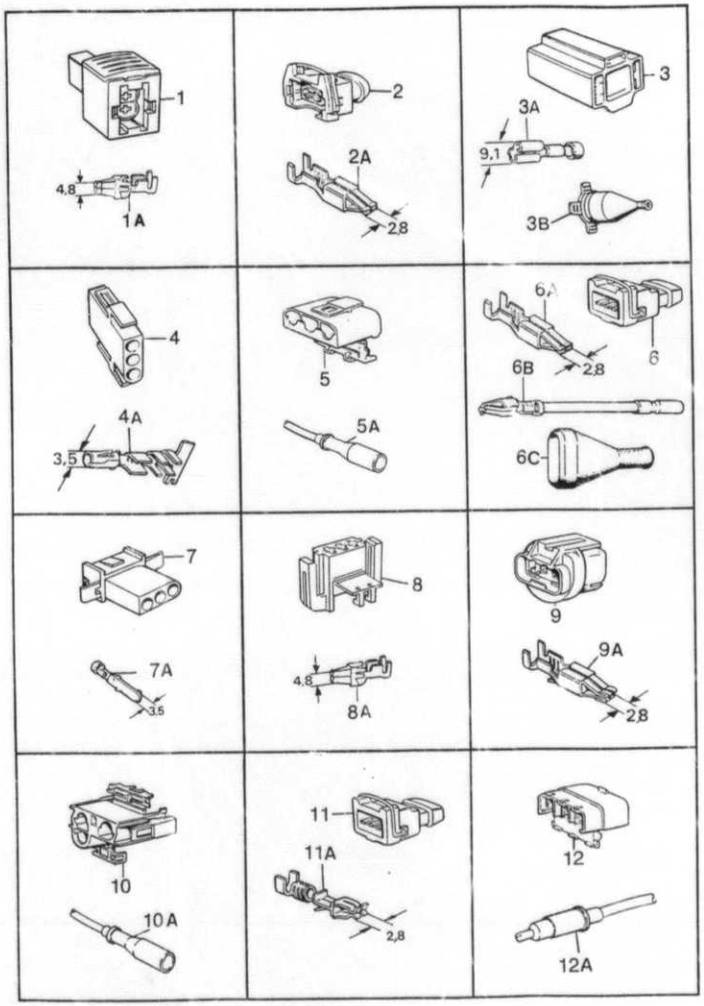

F4467 CAC90


Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
11	85 93 923		IDLE COMPENSATOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
11A	*91 20 668*		AREA 0,75-1,0 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
11A	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
12	95 03 327		PRESSURE MONITOR AC R134A	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
12A	85 47 770			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

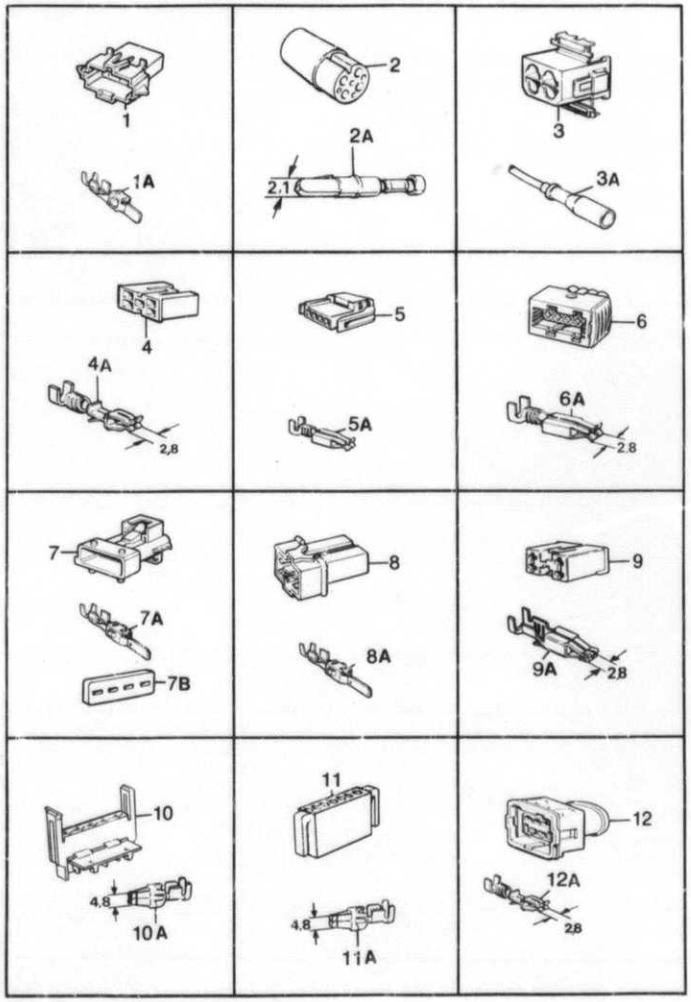

F4468 CAC90

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 669		JOINT PIECE MAIN CABLE HARNESS,EL-ADJUSTED SEAT	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0030	1A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	2	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0070	2A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0090	3	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, FUEL PUMP SENSOR, THEFT ALARM, THERMOSTAT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0130	3A	85 47 796			X	Connector	Skarvstycke	5
0140	3A	78 74 493			X	Connection	Skarv	5
0160	4	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE, SWITCH WARNING FLASHER, REAR WIPER, TAIL LAMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0220	4A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0240	5	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0260	5A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0270	5A	91 21 088		AREA, 0,2-0,5 MM2	X	Cable terminal	Kabelsko	3
0290	6	41 13 601		HEAD LIGHT CS, LAMBDA SONDE, SENSOR AIR-BAG	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0310	6A	43 50 526		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0330	7	41 13 650		CRANK SHAFT SENSOR	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0350	7A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	7B	41 13 759			X	Seal	Tätning	5
0380	8	41 17 263		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0400	8A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0420	9	40 61 503		CONTACT PARKING PAWL	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0440	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0460	10	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0480	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0500	11	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0530	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0550	12	95 19 455		ETS	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0570	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-D24

Contact housing etc
1993

Kontakthus etc
1993

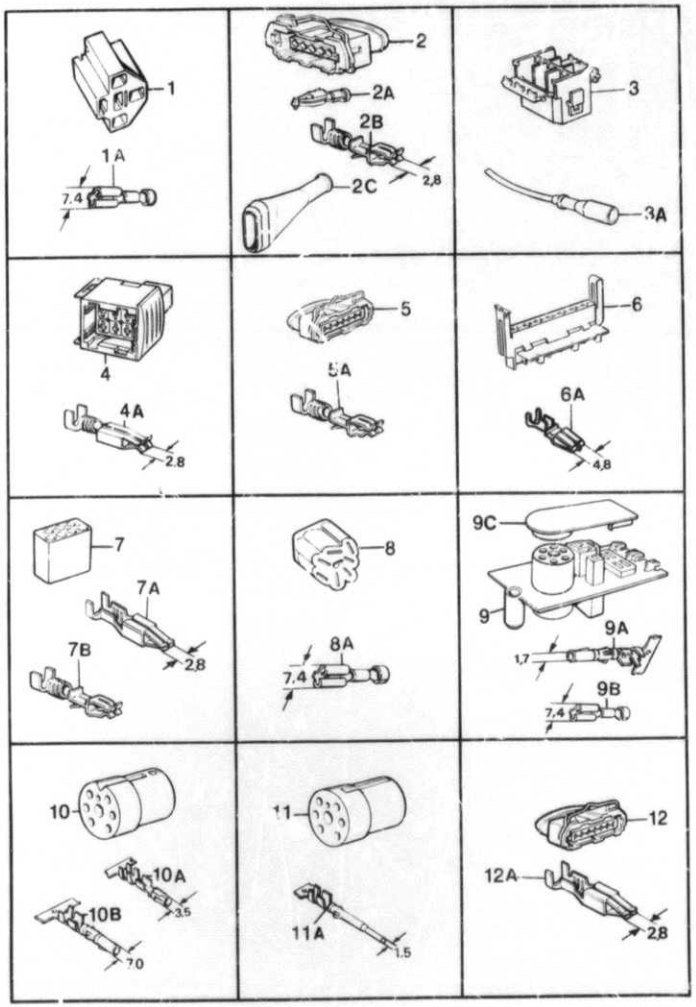

F4469 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	85 33 697		RELAY EXHAUST TEMP, WASHER PUMP REAR WIPER, RELAY LAMBDA, SWITCH PARKING PAWL	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
1A	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
2	85 93 931		AIR MASS METER LH	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
2A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
2B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
2C	85 82 082			X	Protection	Skydd	4
3	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
3A	85 47 796			X	Connector	Skarvstycke	5
3A	78 74 498			X	Connection	Skarv	5
4	41 13 809		WASHER MOTOR, CENTRAL LOCK, JOINT PIECE BOOT LID, REAR LOUD SPEAKER, JOINT PIECE ENGINE, TRIONIC	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
5	85 93 949		VALVE, OUTPOT STAGE	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
6	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT, SWITCH FLASHER, REAR WIPER	X	Contact housing 7 pole, female	Kontakthus 7-polig, hylsa	4
6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
7	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
7A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
7B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
8	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
8A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
8A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
9	95 12 591		TEST CONNECTOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
9A	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
9A	85 87 560		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
9B	*85 82 454*		AREA, 0,5-1,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
9C	95 20 974			X	Cover	Lock	9
10	85 21 700		JOINT PIECE, JOINT PIECE REAR DOOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
10A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
10B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E02

Contact housing etc
1993

Kontakthus etc
1993

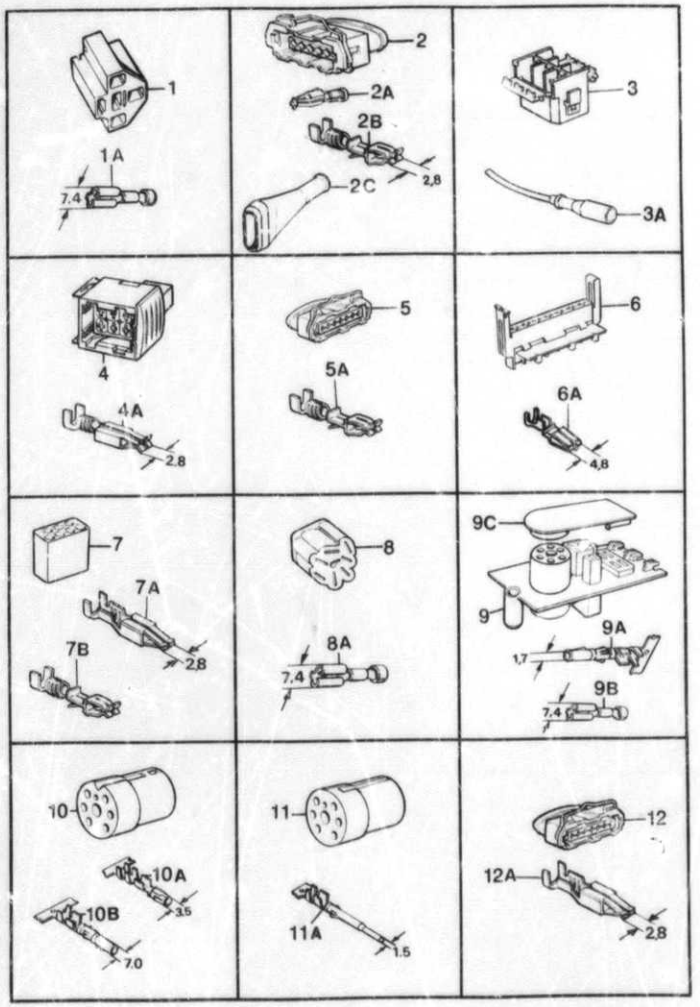

F4469 CAC90

1450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	11	85 21 718		JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0610	11A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0620	11B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0640	12	43 54 833		SETTING MOTOR, SETTING MOTOR ASR, POWER AMPLIFIER	X	Connector housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0670	12A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E04 Contact housing etc 1993

Kontakthus etc 1993

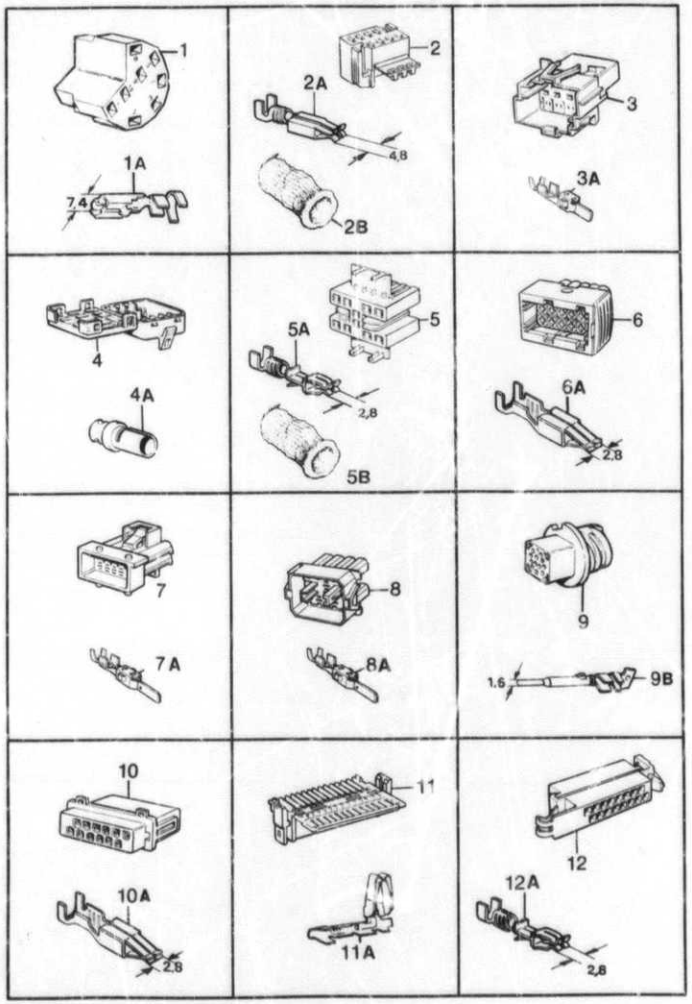

F4470 CAC90

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0020								
0030	1A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0040	1A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, TOW HOOK,TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0070								
0080								
0090								
0100								
0110								
0120	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0130	2B	*95 68 775*		NLS	X	Insulation	Isolering	4
0140								
0150	3	41 17 768		HEATING PAD, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 8-pole, male	Kontakthus 8-polig, stift	4
0160								
0170								
0180	3A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0190								
0200	4	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0210								
0220	4A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0230								
0240	5	91 23 399		SWITCH AC, RECIRKULATION, AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELLING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT, LIGHT INSTEP, BOOT LID, JOINT PIECE REAR CABLE HARNESS, JOINT PIECE, COOLING FAN REAR AC	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0250								
0260								
0270								
0280								
0290								
0300								
0310								
0320								
0330								
0340	5A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0350	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	5B	*95 68 775*		NLS	X	Insulation	Isolering	4
0370								
0380	6	41 14 005		ABS, JOINT PIECE CABLE HARNESS FRONT, JOINT PIECE ENGINE, BULB CONTROL, JOINT PIECE MAIN CABLE HARNESS, DI-CASETTE	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	4
0390								
0400								
0410								
0420								
0430								
0440	6A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0450								
0460	7	41 14 054		JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE ENGINE	X	Connector housing 10-pole, male	Kontakthus 10-polig, stift	4
0470								
0480								
0490	7A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0500								
0510	8	41 17 461		DIAGNOS ENGINE, JOINT PIECE CABLE HARNESS ROOF, RADIO, DIAGNOS CAR, JOINNT PIECE, REAR AC, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0520								
0530								
0540								
0550								
0560								
0570	8A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0580	8A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0590								
0600	9	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0610								
0620	9A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0630								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E06

Contact housing etc 1993

Kontakthus etc 1993

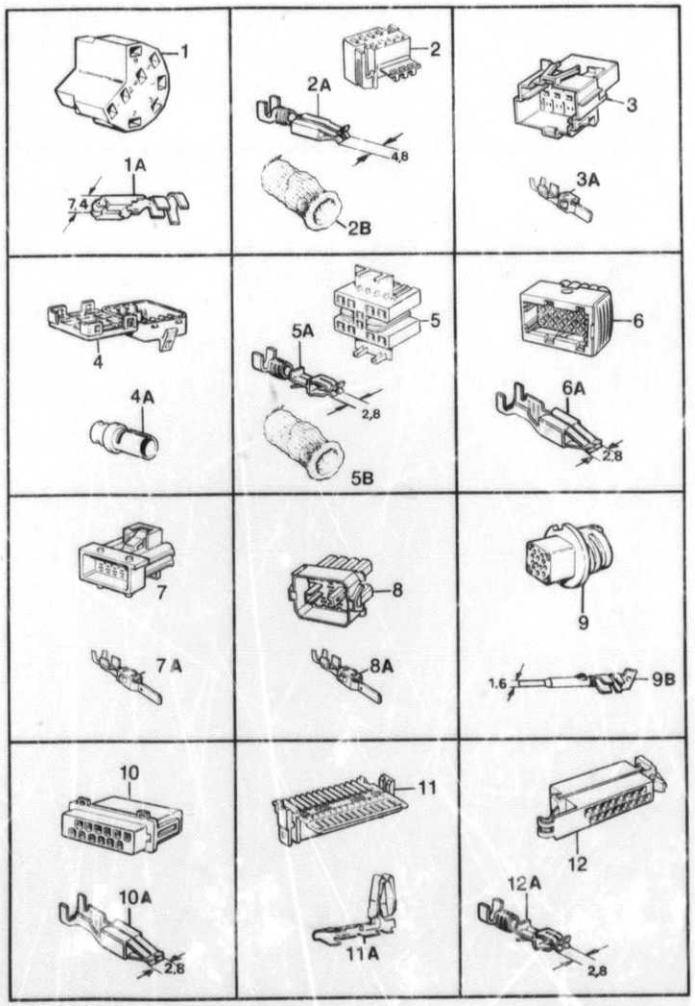

F4470 CAC90


1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	10	95 25 031		CONTROL UNIT ACC, ELECT-	X	Contact housing	Kontakthus	5
0650				RONIC UNIT CENTRAL LOCK		12-pole, female	12-polig, hylsa	
0660	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0670								
0680	11	95 03 020		INSTRUMENTS	X	Contact housing	Kontakthus	4
0690						14-pole, female	14-polig, hylsa	
0700	11A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0710								
0720	12	95 66 282		ELECTRONIC UNIT THEFT	X	Contact housing	Kontakthus	4
0730				ALARM, EAS WITH MEMORY		16-pole, female	16-polig, hylsa	
0740	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0740				USE 9120957				
0750	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

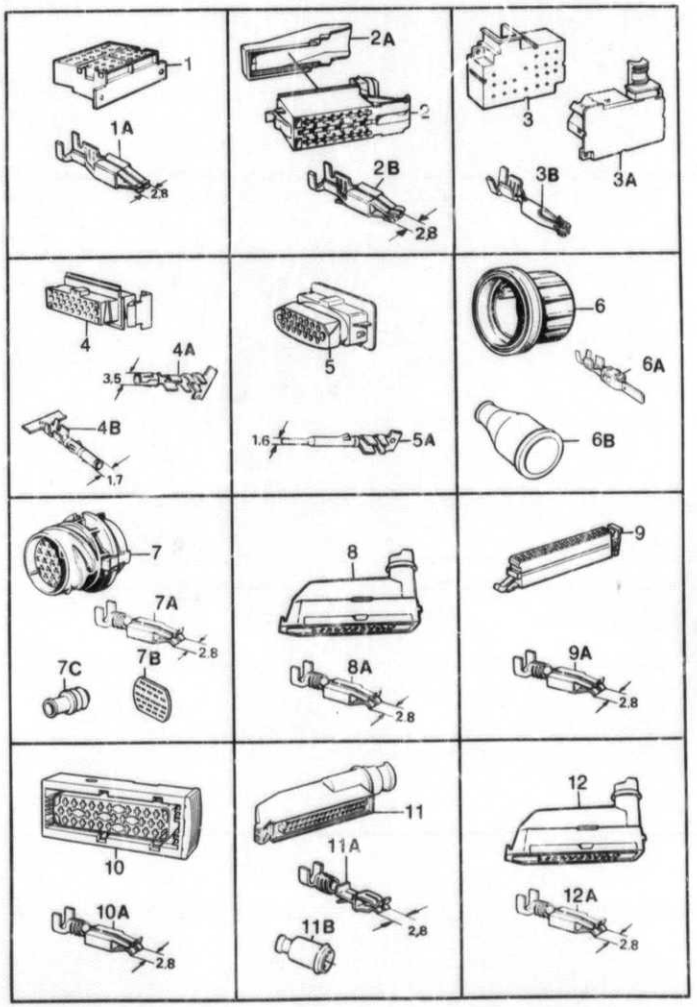

F4471 CAC90

1550 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0020 0030 1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0040 0050 2	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0060 0070 2A	40 67 617			X	Cover	Kåpa	4
0080 2B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0090 0100 3	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0110 0120 3A	95 27 763			X	Contact housing	Kontakthus	4
0130 3B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0140 0150 4	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0160 0170 4A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0180 4B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190 0200 5	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0210 0220 5A	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0230 0240 6	41 74 868		JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE CABLE HARNESS FRONT	X	Connector housing 24-pole, male	Kontakthus 24-polig, stift	4
0260 0270 6A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0280 6B	41 11 308			X	Rubber protection	Gummiskydd	4
0285 6C	45 88 349			X	Lock ring	Låsring	
0290 0300 7	41 76 244		JOINT PIECE CABLE HARNESS ENGINE	X	Connector housing 24-pole, female	Kontakthus 24-polig, hylsa	4
0310 0320 7A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0330 7B	43 52 936			X	Seal	Tätning	5
0340 7C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
0350 7C	40 61 966		1,2-2,0 MM	X	Seal	Tätning	5
0360 7C	40 61 974		2,1-2,0 MM	X	Seal	Tätning	5
0370 0380 8	41 76 582		ELECTRONIC UNIT EZK	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0390 0400 8A	91 20 957		AREA, 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5
0410 0420 9	41 76 186		ELECTRONIC UNIT ASR	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0430 0440 9A	91 20 957		AREA, 1,0-2,5 MM2	1	Cable terminal	Kabelsko	5
0450 0460 10	41 14 609		DIAGNOSTIC UNIT AIR-BAG	X	Connector housing 29-pole, female	Kontakthus 29-polig, hylsa	4
0470 0480 10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0490 0500 11	91 25 519		ELECTRONIC UNIT LH	X	Contact housing 35-pole, female	Kontakthus 35-polig, hylsa	4
0510 0520 11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0520 0530 11B	85 87 511			X	Rubber protection	Gummiskydd	4
0540 0550 12	41 75 428		ELECTRONIC UNIT ETS	X	Connector housing 38-pole, female	Kontakthus 38-polig, hylsa	4
0560 0570 12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E10 Contact housing etc 1993

Kontakthus etc 1993

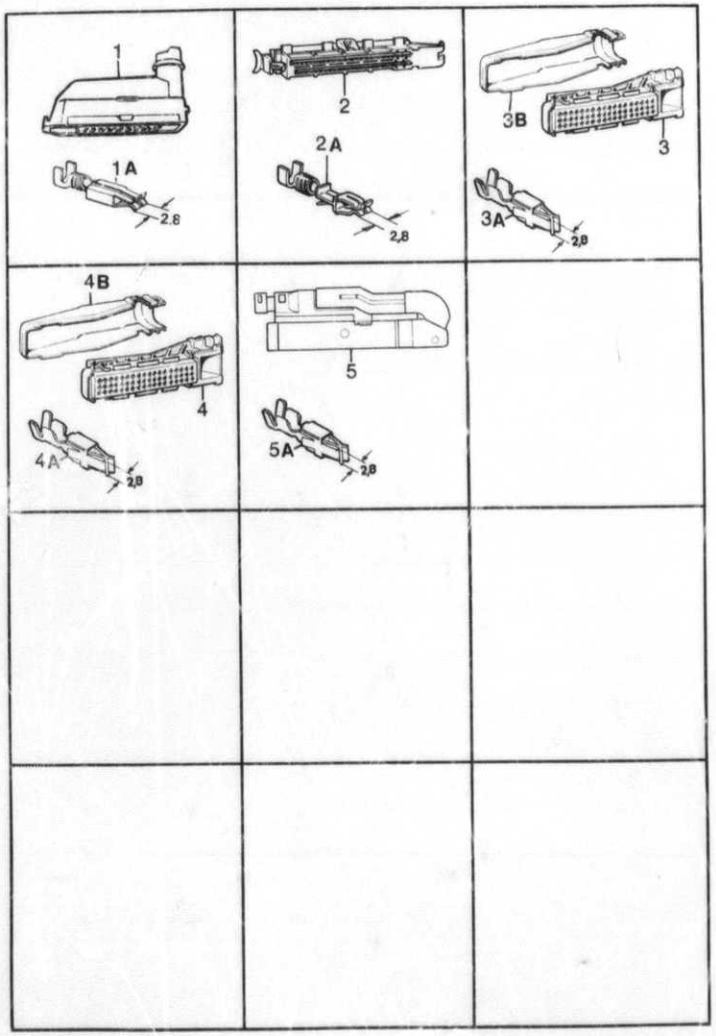

F5935 CAC90

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 76 269		ELECTRONIC UNIT	X	Connector housing	Kontakthus	4
0020						38-pole, female	38-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0-2,5 MM2		Cable terminal	Kabelsko	5
0040								
0050	2	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing	Kontakthus	5
0060						39-pole, female	39-polig, hylsa	
0070	2A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0080	2A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	41 76 210		ELECTRONIC UNIT ABS	X	Contact housing	Kontakthus	5
0110						55-pole, female	55-polig, hylsa	
0120	3A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0130	3B	44 18 380			X	Cover	Kåpa	4
0140								
0150	4	43 53 637		ELECTRONIC UNIT ASR	X	Contact housing	Kontakthus	5
0160						55-pole, female	55-polig, hylsa	
0170	4A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0180	4B	44 18 380			X	Cover	Kåpa	4
0190								
0200	5	41 76 616		ELECTRONIC UNIT TRIONIC	X	Connector housing	Kontakthus	4
0210						70-pole, female	70-polig, hylsa	
0220	5A	43 54 353		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0230	5A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E12 Cable terminal 1990

Ledningssko 1990

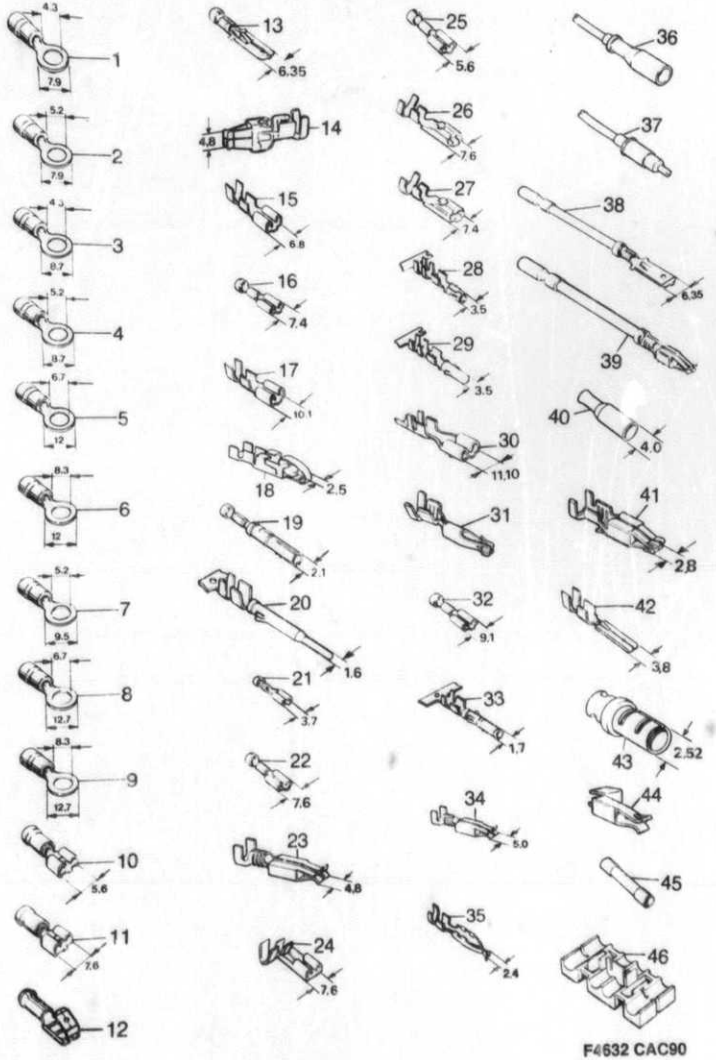

F4632 CAC90

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Manifold	Förgrening	3
0170	13	85 22 542		43), JOINT PIECE, FOR	X	Cable terminal	Kabelsko	5
0180				CONTACT HOUSING, 9503012				
0190	13	85 93 089		44), JOINT PIECE TRUNK	X	Cable terminal	Kabelsko	5
0200				LID, HIGH MOUNTED STOP				
0210				LIGHT, FOR CONTACT				
0220				HOUSING, 9124181				
0230	14	91 20 775		44), RELAY HORN, RELAY	X	Cable terminal	Kabelsko	5
0240				REAR DEMIST, RELAY AC,				
0250				AC DIOD, LIGHT,				
0260				FOR CONTACT HOUSING				
0270				8533697, 9124157,9507658				
0280	15	85 14 036		40), EL-CENTRAL, EARTH	X	Cable terminal	Kabelsko	5
0290	15	71 55 716		45), EL-CENTRAL, DOOR	X	Cable terminal	Kabelsko	5
0300				SWITCH, CIGARETTE				
0310				LIGHTER, DISTRIBUTOR				
0320				TERMINAL, JOINT PIECE				
0330				BRAKE LIGHT, FOR CONTACT				
0340				HOUSING, 8516916				
0350	16	*71 55 153*		103), FOR CONTACT	X	Cable terminal	Kabelsko	5
0360				HOUSING 7155112, 8558538				
0360				NLS - USE 8522534				
0370	16	*79 72 029*		38), FOR CONTACT	X	Cable terminal	Kabelsko	5
0380				HOUSING, 8533697,9503251				
0380				NLS - USE 8522534				
0390	16	79 71 708		47), FOR CONTACT	X	Cable terminal	Kabelsko	5
0400				HOUSING 7155096,7155112				
0410	16	*85 82 454*		47), TEST CONNECTOR,FOR	X	Cable terminal	Kabelsko	5
0420				CONTACT HOUSING, 8558538				
0420				NLS - USE 8522534				
0430	17	79 69 256		48), EL-CENTRAL, RELAY	X	Cable terminal	Kabelsko	5
0440				DISTRIBUTION TERMINAL				
0450	18	81 35 147		49), FOR CONTACT	X	Cable terminal	Kabelsko	5
0460				HOUSING 8135600				


35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
49. Area 0,75-1,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

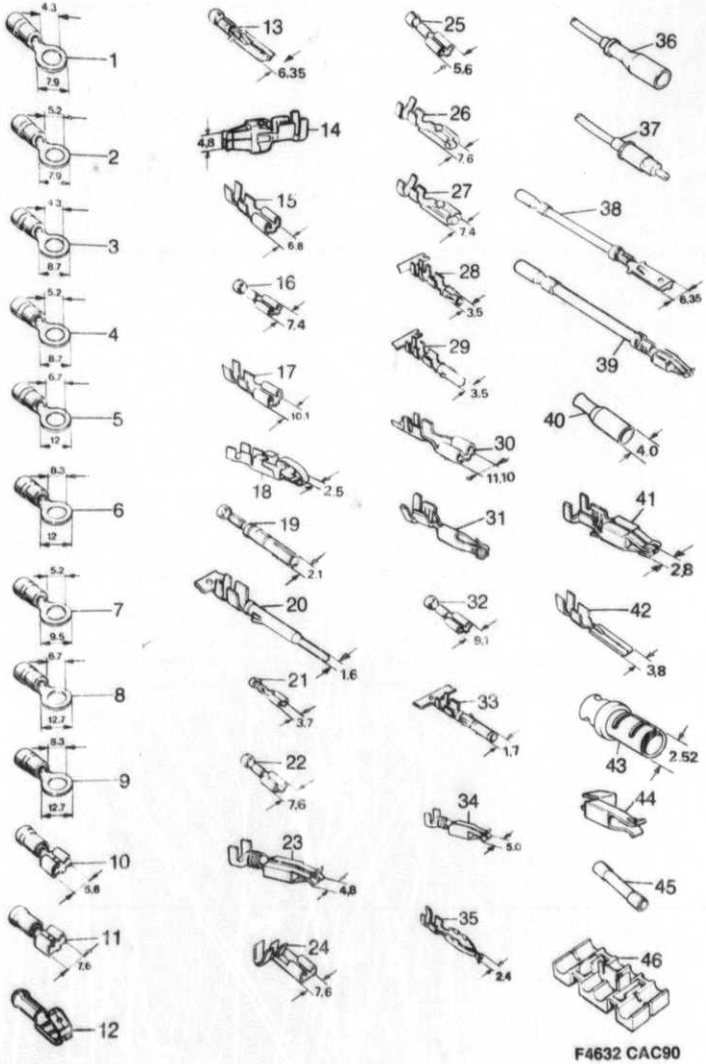

F4632 CAC90

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	19	81 38 679		50), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0490	19	85 22 583		51), FOR CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
0510	20	85 93 964		47), FOR CONTACT HOUSING 8521718, 8593964	X	Cable terminal	Kabelsko	5
0530	20	95 19 398		52), FOR CONTACT HOUSING, 9519406	X	Cable terminal	Kabelsko	5
0550	20	95 26 401		53), FOR CONTACT HOUSING, 9529512	X	Cable terminal	Kabelsko	5
0570	21	*85 09 846*		54), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0590	21	85 30 107		47), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0610	22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0650	22	85 14 036		38), STARTER, GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
0670	23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
0740	23	91 20 783		38), AC DIOD, FOR CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
0770	23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, FOR CONTACT HOUSING, 4069274 8533655, 9122789,9122797 9124090, 9124157,9124165 9124173, 9125543,9519422	X	Cable terminal	Kabelsko	5
0970	23	40 61 586		38), FOR CONTACT HOUSING 4060885, 4061446	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
50. Area 1,0-3,5 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E16

Cable terminal 1990

Ledningssko 1990

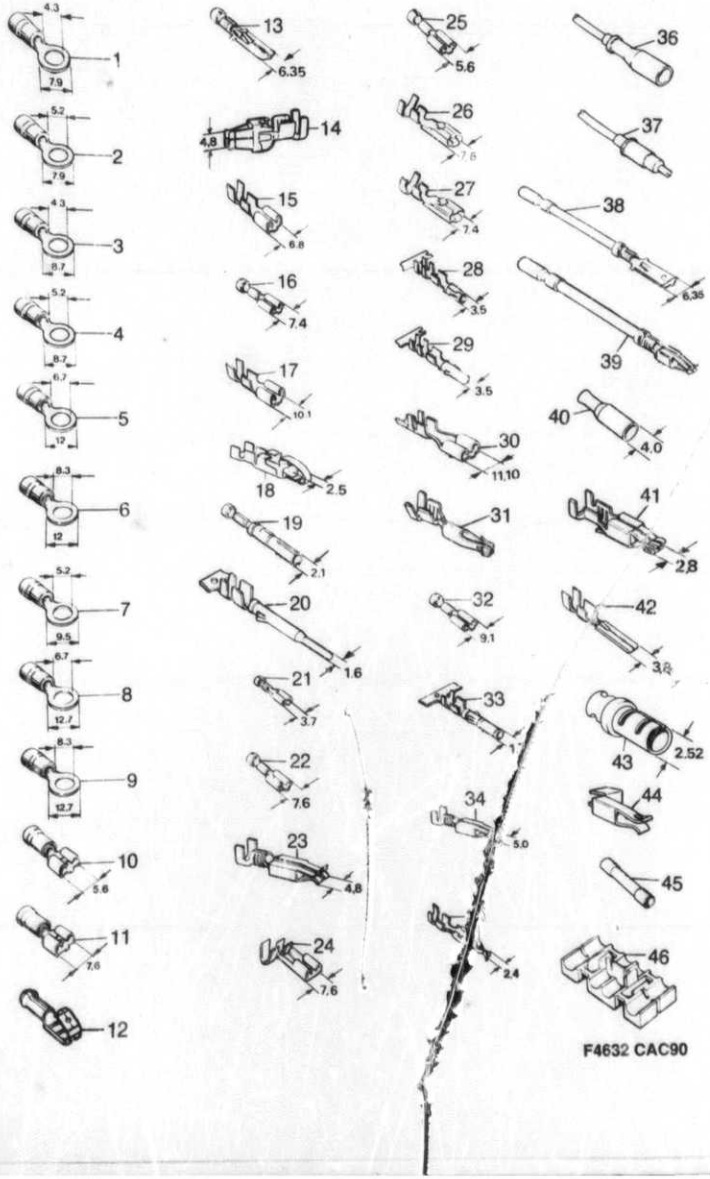

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0990	24	*85 21 676*		47), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1020	24	*85 21 684*		38), FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1040	24	*85 82 421*		47), FOR CONTACT, HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1060	25	*85 33 028*		47), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
1080	26	*85 41 203*		47), SPOTLIGHT, FOR SPOTLIGHT, FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
1120	27	85 60 476		57), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
1140	27	85 41 211		56), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
1160	28	*85 44 298*		58), FOR CONTACT HOUSING 8521700, 8564919,9525106 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
1180	28	85 44 306		59), REAR DEMIST	X	Cable terminal	Kabelsko	5
1190	28	85 82 090		47), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
1210	28	85 82 595		58), LIGHT NUMBER PLATE, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, JOINT PIECE CENTRAL LOCK	X	Cable terminal	Kabelsko	5
1250	29	*85 44 314*		58), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
1280	29	85 44 322		59), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
1300	30	85 69 139		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
1320	30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
1350	31	95 27 771		FOR CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
1370	32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
1390	33	85 87 552		47), FOR CONTACT HOUSING 8521700, 9512591 9525106	X	Cable terminal	Kabelsko	5
1420	33	85 87 560		38), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
1440	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
60. Area 6,0-8,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

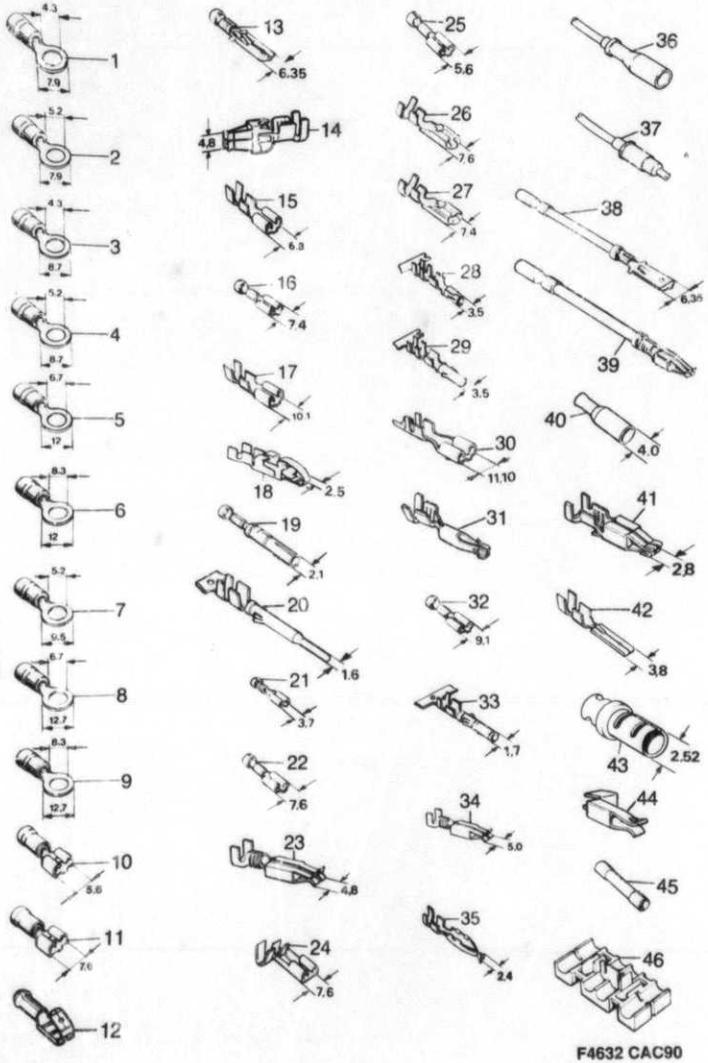

F4632 CAC90

2000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1450	34	*95 21 980*		40), RELAY GROUND SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
1460	35	40 63 970		44), FOR CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	5
1490	36	78 74 498		217),FOR CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1520	36	85 47 796		218)SIDE DIRECTION INDIC FOR CONTACT HOUSING, 9503277, 9503319,9503418 9503475, 9519679	X	Connector	Skarvstycke	5
1560	36	85 47 804		56)	X	Connector	Skarvstycke	5
1570	37	78 74 506		217)FOR CONTACT HOUSING, 9501685, 9503426,9506668	X	Connection	Skarv	5
1590	37	85 47 770		218)FOR CONTACT HOUSING, 9501685, 9503327,9503426 9503442, 9506668	X	Connector	Skarvstycke	5
1620	38	85 22 542		36), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
1640	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1650	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1660	41	*95 08 706*		62) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1670	41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, FOR CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS - USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1770	41	91 20 957		38), FOR CONTACT HOUSING 4061479, 4061503,4068441 4068888, 4069274,9503475 9518713, 9525031,9565045	X	Cable terminal	Kabelsko	5
1810	42	95 52 100		62), FOR CONTACT HOUSING, 4061495,4069928 9122557, 9518739	X	Cable terminal	Kabelsko	5
1840	42	*95 52 126*		44), FOR CONTACT HOUSING, 9122557 NLS - USE 9552100	X	Cable terminal	Kabelsko	5
1960	42	40 63 376		40), FOR CONTACT HOUSING, 4060877	X	Cable terminal	Kabelsko	5
1880	43	95 52 175		FOR CONTACT HOUSING, 9552167	X	Cable terminal	Kabelsko	5
1900	43	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1920	44	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
1940	45	71 55 203		35) 40/253 164 008	X	Connector housing	Skarvhus	5

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E20 Cable terminal 1990

Ledningssko 1990

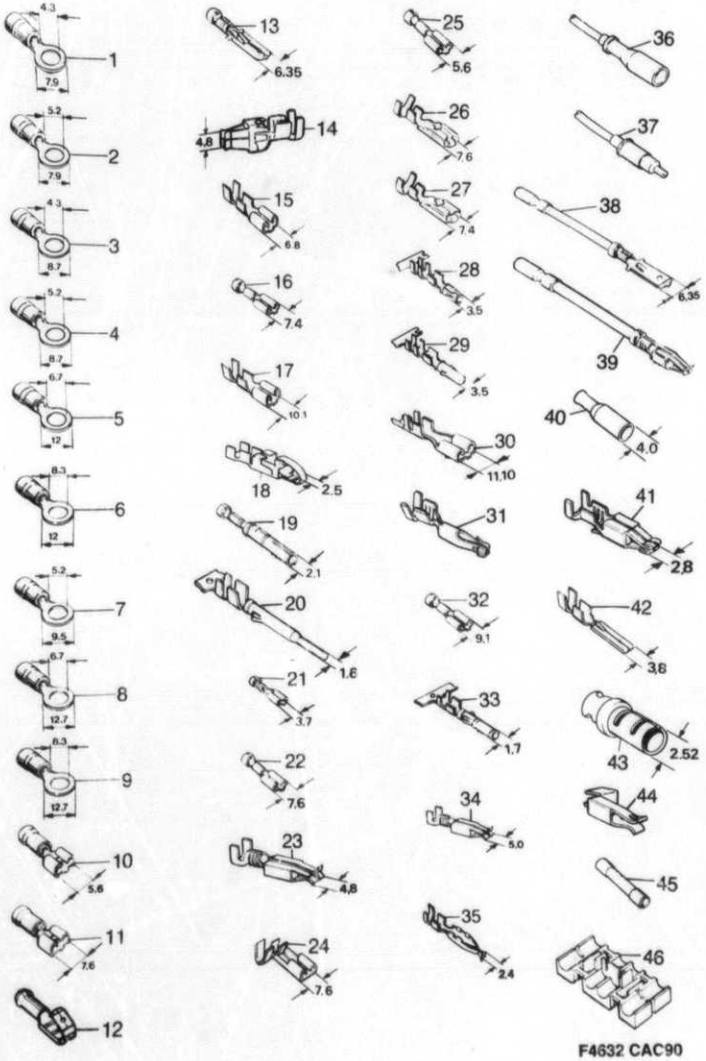

F4632 CAC90

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1950	45	71 55 146		36) 40/253 188 007	X	Connector housing	Skarvhus	5
1960	45	71 55 633		37) 40/253 221 006	X	Connector housing	Skarvhus	5
1970	46	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
1980	46	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E22

Cable terminal
1991

Ledningssko
1991

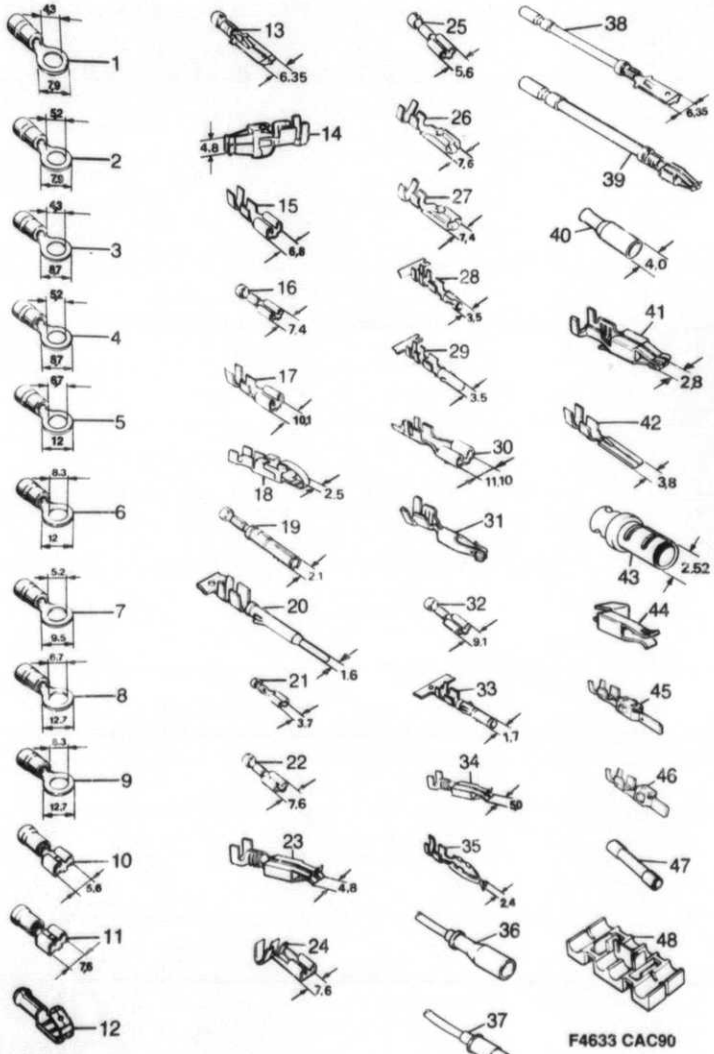

F4633 CAC90

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Manifold	Förgrening	3
0170	13	85 22 542		43), JOINT PIECE	X	Cable terminal	Kabelsko	5
0180	13	85 93 089		44), JOINT PIECE TRUNK LID, HIGH MOUNTED STOP LIGHT, FOR CONTACT HOUSING, 9124181	X	Cable terminal	Kabelsko	5
0220	13	85 82 645		48), FOR CONTACT HOUSING, 9503012	X	Cable terminal	Kabelsko	5
0240	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, FOR CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0290	15	85 14 036		40), EL-CENTRAL, EARTH	X	Cable terminal	Kabelsko	5
0300	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, BRAKE LIGHT, FOR CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0350	16	*71 55 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0370	16	*79 72 029*		38), FOR CONTACT HOUSING, 8533697,9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0390	16	79 71 708		47), FOR CONTACT HOUSING 7155096,7155112	X	Cable terminal	Kabelsko	5
0410	16	*85 82 454*		47), TEST CONNECTOR,FOR CONTACT HOUSING, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0430	16	79 68 068		48), FOR CONTACT HOUSING, 9503251	X	Cable terminal	Kabelsko	5
0450	17	79 69 256		48), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-E24

Cable terminal
1991

Ledningssko
1991

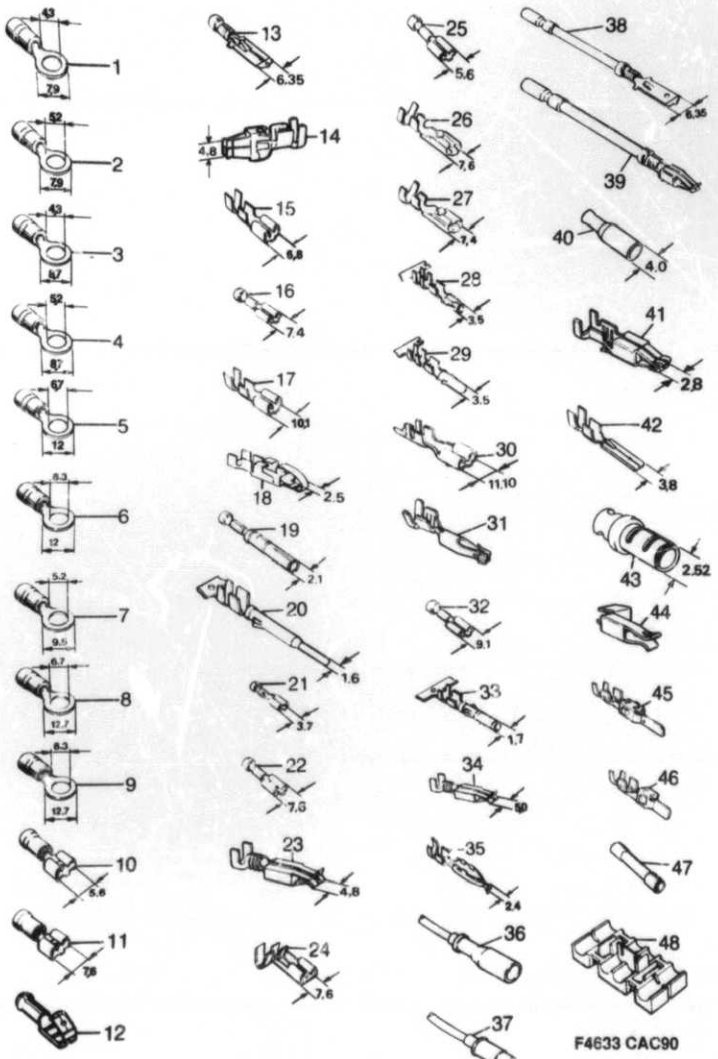

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	18	81 35 147		49), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0490	18	81 38 679		50), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0510	19	85 22 583		51), FOR CONTACT HOUSING 8530098	X	Cable terminal	Kabelsko	5
0530	20	85 93 964		47), FOR CONTACT HOUSING 8521718, 8593964	X	Cable terminal	Kabelsko	5
0550	20	95 19 398		52), FOR CONTACT HOUSING, 9519406	X	Cable terminal	Kabelsko	5
0570	20	95 26 401		53), FOR CONTACT HOUSING, 9529512	X	Cable terminal	Kabelsko	5
0590	21	*85 09 846*		54), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0610	21	85 30 107		47), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0630	22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0670	22	85 14 036		38), GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
0690	23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
0760	23	91 20 783		38), AC DIOD, FOR CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
0790	23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, FOR CONTACT HOUSING, 4069274 8533655, 9122789,9122797	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
49. Area 0,75-1,0 MM2.
50. Area 1,0-3,5 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors 3-A06,
Cable terminals 3-B12

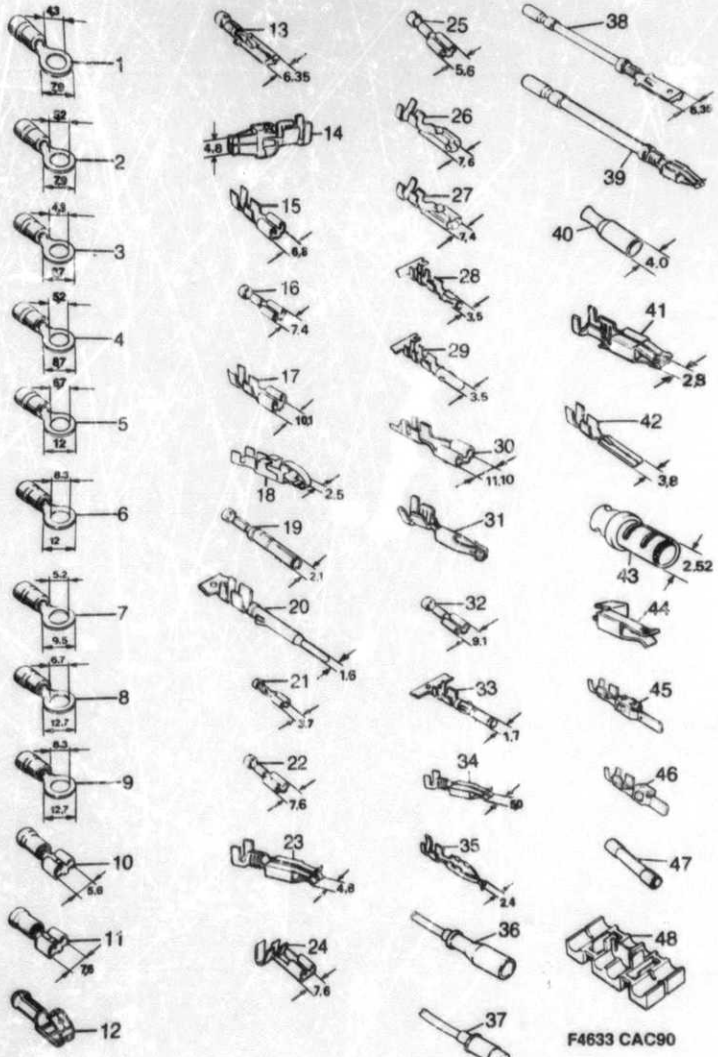

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			9124090, 9124157,9124165 9124173, 9125543,9507658 9519422				
23	40 61 586		38), FOR CONTACT HOUSING 4060885, 4061446	X	Cable terminal	Kabelsko	5
24	*85 21 676*		47), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521632 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		38), FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 82 421*		47), FOR CONTACT, HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	85 22 526		47), LIGHT INSTEP	X	Cable terminal	Kabelsko	5
25	*85 33 028*		47), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
26	*85 41 203*		47), SPOTLIGHT, LIGHT INSTEP, BELT WARNING,FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		57), FOR CONTACT HOUSING 8541229	X	Cable terminal	Kabelsko	5
27	85 41 211		56), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
27	85 22 534		47), LIGHT INSTEP	X	Cable terminal	Kabelsko	5
28	*85 44 298*		58), FOR CONTACT HOUSING 8521700, 8564919,9525106 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		59), REAR DEMIST	X	Cable terminal	Kabelsko	5
28	85 82 090		47), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
28	85 82 595		58), LIGHT NUMBER PLATE, DOOR SWITCH, HIGH MOUNTED STOP LIGHT	X	Cable terminal	Kabelsko	5
29	*85 44 314*		58), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		59), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
31	95 27 771		FOR CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
33	85 87 552		47), FOR CONTACT HOUSING 8521700, 9512591 9525106	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
60. Area 6,0-8,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F04

Cable terminal
1991

Ledningssko
1991

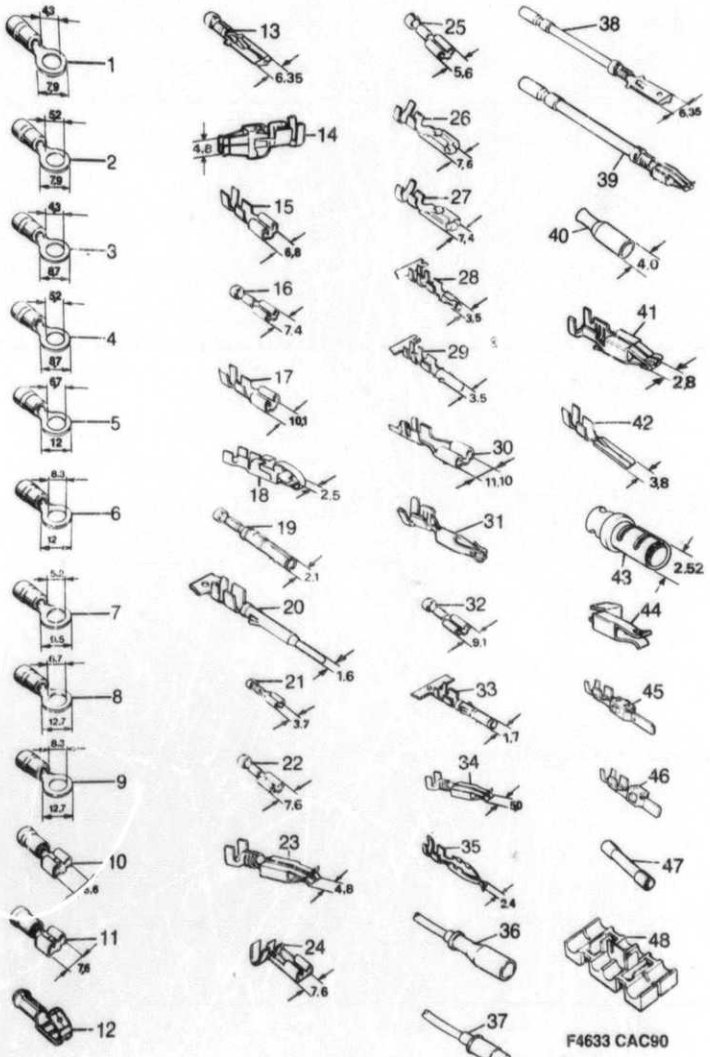

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1460	33	85 87 560		38), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
1480	33	95 25 817		53), FOR CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
1500	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1510	34	*95 21 980*		40), RELAY GROUND SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
1520	35	40 63 970		44), FOR CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	5
1540	36	78 74 498		217),FOR CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1580	36	85 47 796		218)SIDE DIRECTION INDI FOR CONTACT HOUSING, 9503277, 9503319,9503418 9503475, 9519679	X	Connector	Skarvstycke	5
1620	36	85 47 804		56)	X	Connector	Skarvstycke	5
1630	37	78 74 506		217),FOR CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
1650	37	85 47 770		218),FOR CONTACT HOUSING 9503426, 9503442,9506668	X	Connector	Skarvstycke	5
1670	38	85 22 542		36), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
1690	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1700	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1710	41	*95 08 706*		62) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1720	41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, FOR CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS - USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1820	41	91 20 957		38), FOR CONTACT HOUSING 4061479, 4061503,4068441 4069274, 4109310,8574949 8593923, 9123399,9123548 9503475, 9514803,9525031 9565045, 9566282	X	Cable terminal	Kabelsko	5
1880	42	95 52 100		62), FOR CONTACT HOUSING, 4061495,4069928 9122557, 9518713,9518739	X	Cable terminal	Kabelsko	5
1910	42	*95 52 126*		44), FOR CONTACT HOUSING, 9122557 NLS - USE 9552100	X	Cable terminal	Kabelsko	5
1930	42	40 63 376		40), FOR CONTACT HOUSING, 4060877	X	Cable terminal	Kabelsko	5

36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F06

Cable terminal
1991

Ledningssko
1991

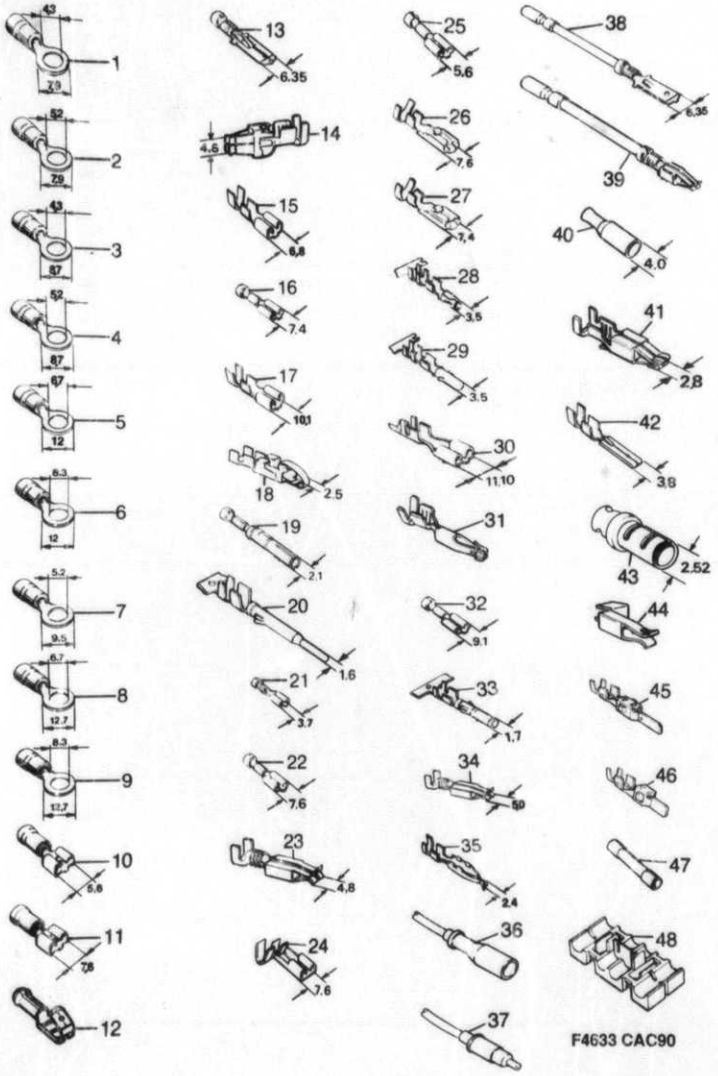

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1950	43	95 52 175		FOR CONTACT HOUSING, 9552167	X	Cable terminal	Kabelsko	5
1960								
1970	43	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1980								
1990	44	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
2000								
2010	45	71 55 203		35) 40/253 164 008	X	Connector housing	Skarvhus	5
2020	45	71 55 146		36) 40/253 188 007	X	Connector housing	Skarvhus	5
2030	45	71 55 633		37) 40/253 221 006	X	Connector housing	Skarvhus	5
2040	46	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2050	46	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F08

Cable terminal 1992

Ledningssko 1992

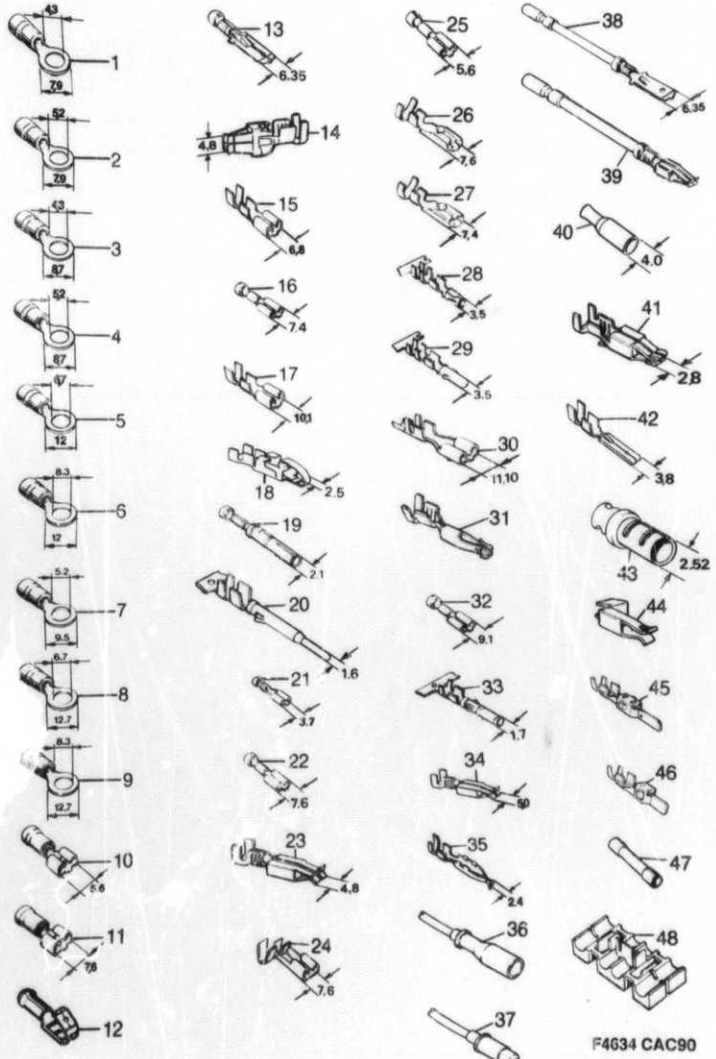

2100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Manifold	Förgrening	3
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, FOR CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0200								
0210								
0220								
0230							Kabelsko	5
0240	15	85 14 036		40), EL-CENTRAL, EARTH	X	Cable terminal	Kabelsko	5
0250	15	*71 55 047*		48), EL-CENTRAL NLS	X	Cable terminal	Kabelsko	5
0260	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, CIGARETTE LIGHTER, DOOR SWITCH, BRAKE LIGHT, ALTERNATOR, FOR CONTACT HOUSING 8516916, 8533184	X	Cable terminal	Kabelsko	5
0270								
0280								
0290								
0300								
0310								
0320								
0330	16	*71 55 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0340								
0350	16	*79 72 029*		38), FOR CONTACT HOUSING, 8533697,9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0370	16	79 71 708		47), FOR CONTACT HOUSING 7155096,7155112	X	Cable terminal	Kabelsko	5
0380								
0390	16	*85 82 454*		47), TEST CONNECTOR,FOR CONTACT HOUSING, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0400								
0410	16	79 68 068		48), FOR CONTACT HOUSING, 9503251	X	Cable terminal	Kabelsko	5
0420								
0430	17	79 69 256		48), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0440								
0450	18	81 35 147		49), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0460								

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
49. Area 0,75-1,0 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F10 Cable terminal 1992

Ledningssko 1992

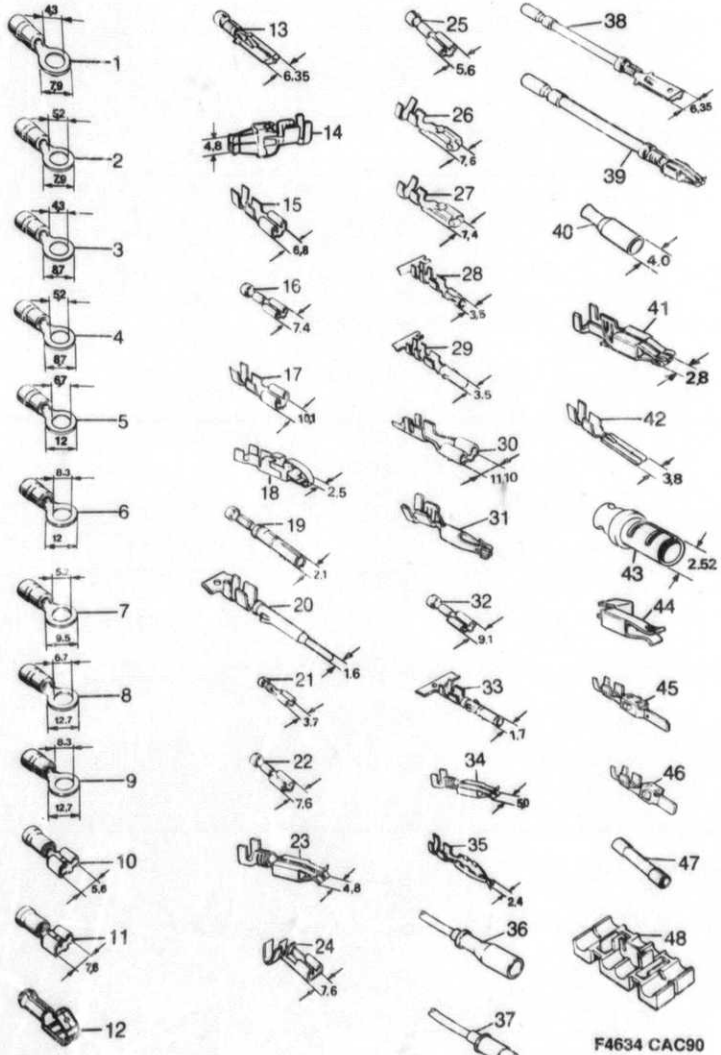

F4634 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
18	81 38 679		50), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
19	95 22 583		51), FOR CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
20	85 93 964		47), FOR CONTACT HOUSING 8521718, 8593964	X	Cable terminal	Kabelsko	5
20	95 19 398		52), FOR CONTACT HOUSING, 9519406	X	Cable terminal	Kabelsko	5
20	95 26 401		53), FOR CONTACT HOUSING, 9529512	X	Cable terminal	Kabelsko	5
21	*85 09 846*		54), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
21	85 30 107		47), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
22	85 14 036		38), GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
23	91 20 783		38), AC DIOD, FOR CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, FOR CONTACT HOUSING, 4176012 9122789, 9122797,9124090 9124157, 9124165,9124173 9125543, 9507658,9519422	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
50. Area 1,0-3,5 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

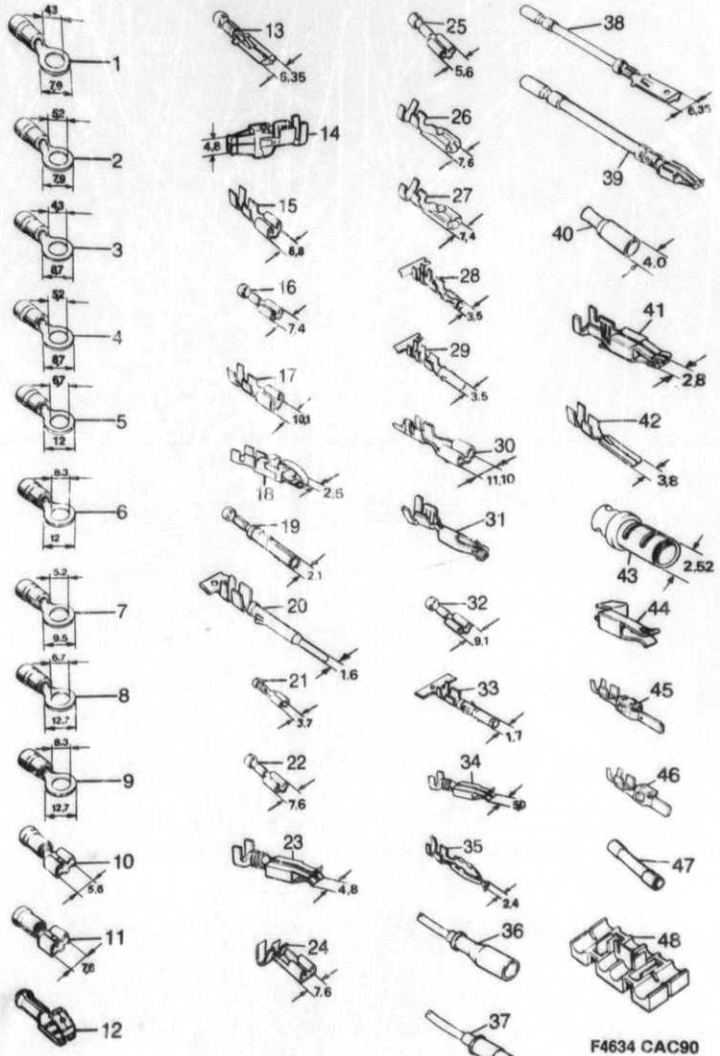

F4634 CAC90

Wiring and fuses

3-F12 Cable terminal 1992

Ledningar och säkringar

Ledningssko 1992

2100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0970	23	40 61 586		38), FOR CONTACT HOUSING 4113205, 4113601,4113609	X	Cable terminal	Kabelsko	5
0980								
0990				4114005, 4176210,417624				
1000	24	*85 21 676*		47), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1010								
1020								
1020	24	*85 21 684*		38), FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1030								
1040								
1040	24	*85 82 421*		47), FOR CONTACT, HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
1050								
1060								
1060	24	85 22 526		47), LIGHT INSTEP, FOG LIGHT	X	Cable terminal	Kabelsko	5
1070								
1080								
1090	25	*85 33 028*		47), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
1100								
1100								
1110	26	*85 41 203*		47), SPOTLIGHT, LIGHT INSTEP, BELT WARNING,FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
1120								
1130								
1140								
1140								
1150	27	85 60 476		57), SWITCH INTERIOR LIGHT, LIGHT GLOVE BOX	X	Cable terminal	Kabelsko	5
1160								
1170	27	85 41 211		56), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
1180								
1190	27	85 22 534		47), LIGHT INSTEP, FOR CONTACT HOUSING 7155112	X	Cable terminal	Kabelsko	5
1200								
1210	28	*85 44 298*		58), FOR CONTACT HOUSING 8521700, 8564919,9525106 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
1220								
1220								
1230	28	85 44 306		59), REAR DEMIST	X	Cable terminal	Kabelsko	5
1240	28	85 82 090		47), FOR CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
1250								
1260	28	85 82 595		58), LIGHT NUMBER PLATE, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, JOINT PIECE CENTRAL LOCK	X	Cable terminal	Kabelsko	5
1270								
1280								
1290								
1300	29	*85 44 314*		58), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
1310								
1320								
1320	29	85 44 322		59), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
1330								
1340								
1350	30	85 69 139		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
1360								
1370	30	85 88 188		180), EL-CENTRAL	X	Cable terminal	Kabelsko	5
1380	30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
1390								
1400								
1410	31	95 27 771		FOR CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
1420								
1430	32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
1440								

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
60. Area 6,0-8,5 MM2.
180. Area 6,0-10,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F14

Cable terminal 1992

Ledningssko 1992

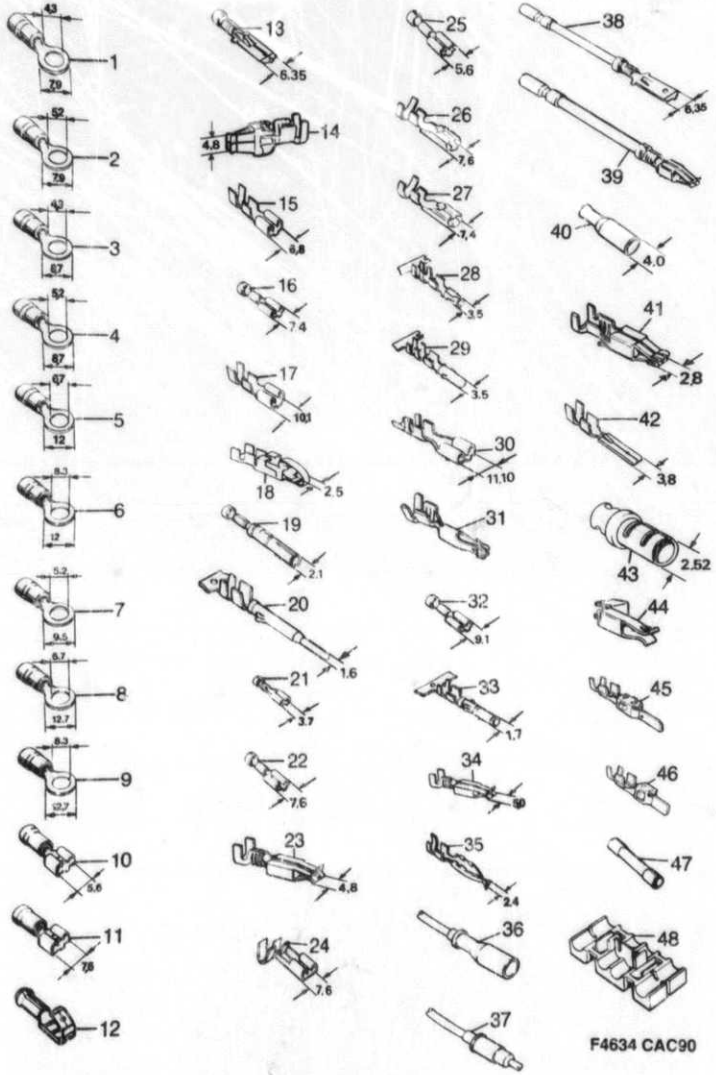

2100	Pos	Part No/Art. nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1450	33	85 87 552		47), FOR CONTACT HOUSING 8521700, 9512591 9525106	X	Cable terminal	Kabelsko	5
1480	33	85 87 560		38), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
1500	33	95 25 817		53), FOR CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
1520	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1530	34	*95 21 980*		40), RELAY GROUND SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
1540	35	40 63 970		44), FOR CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	5
1560	36	78 74 498		217),FOR CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1600	36	85 47 796		218)SIDE DIRECTION INDI FOR CONTACT HOUSING, 9503277, 9503418,9503475 9519679	X	Connector	Skarvstycke	5
1640	36	85 47 804		56)	X	Connector	Skarvstycke	5
1650	37	78 74 506		217),FOR CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
1670	37	85 47 770		218),FOR CONTACT HOUSING 9503442	X	Connector	Skarvstycke	5
1690	38	85 22 542		36), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
1710	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1720	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1730	41	*95 08 706*		62) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
1740	41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, FOR CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS - USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1840	41	91 20 957		38), FOR CONTACT HOUSING 4061479, 4069274,4109278 4109500, 4109518,4113809 4114005, 4114609,4175428 4176012, 4176186,4176269 8586802, 8593923,8597064 9123399, 9503475,9514803 9525031, 9565045	X	Cable terminal	Kabelsko	5
1920	42	*95 52 126*		44), FOR CONTACT HOUSING, 9122557 NLS - USE 9552100	X	Cable terminal	Kabelsko	5

36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F16

Cable terminal
1992

Ledningssko
1992

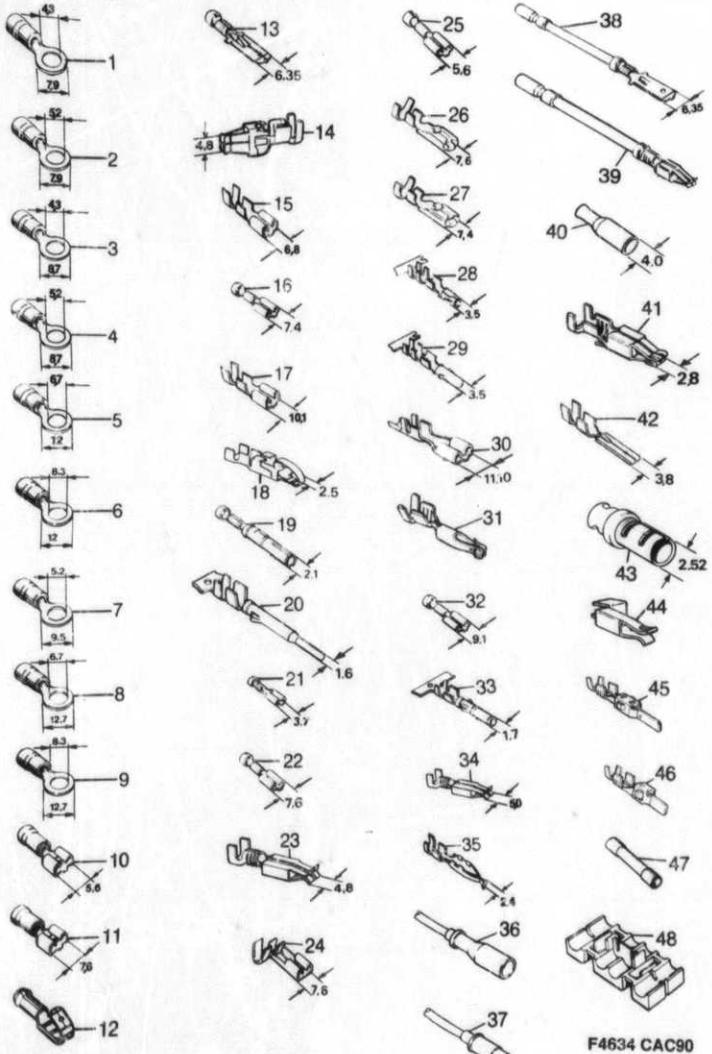

2100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1940	43	95 52 175		FOR CONTACT HOUSING, 9552159, 9552167	X	Cable terminal	Kabelsko	5
1950								
1960	43	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1970								
1980	44	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
1990								
2000	45	41 15 077		38), JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE BOOT LID, FOR CONTACT HOUSING, 4117164 4117263, 4117461	X	Cable terminal	Kabelsko	5
2010								
2020								
2030								
2040								
2050	46	41 15 580		38), JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE BOOT LID, FOR CONTACT HOUSING, 4117560 4117669, 4117768	X	Cable terminal	Kabelsko	5
2060								
2070								
2080								
2090								
2100	47	71 55 203		35) 40/253 164 008	X	Connector housing	Skarvhus	5
2110	47	71 55 146		36) 40/253 188 007	X	Connector housing	Skarvhus	5
2120	47	71 55 633		37) 40/253 221 006	X	Connector housing	Skarvhus	5
2130	48	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2140	48	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F18

Cable terminal
1993

Ledningssko
1993

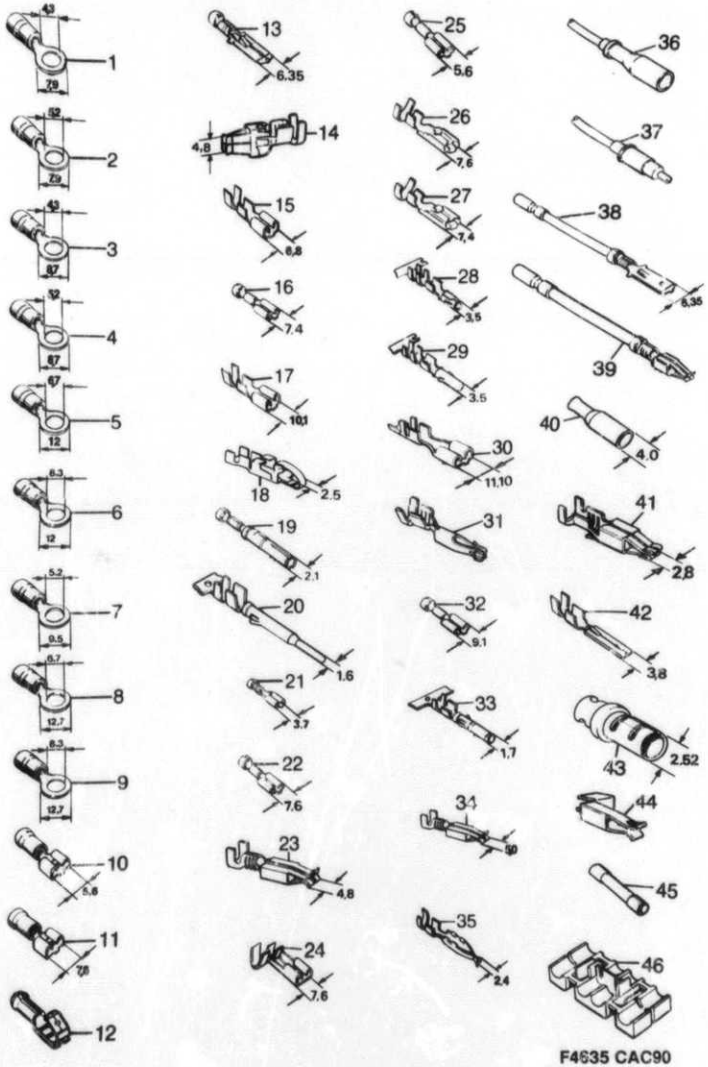

F4635 CAC90

2150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Manifold	Förgrening	3
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, FOR CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0200								
0210								
0220								
0230								
0240	14	43 54 353		44), FOR CONTACT HOUSING 4176616	X	Cable terminal	Kabelsko	5
0250								
0260	15	85 14 036		40), EL-CENTRAL, EARTH	X	Cable terminal	Kabelsko	5
0270	15	*71 55 047*		48), EL-CENTRAL NLS	X	Cable terminal	Kabelsko	5
0280	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, CIGARETTE LIGHTER, STOP LIGHT, HIGH MOUNTED STOP LIGHT, FOR CONTACT HOUSING 8516916, 8533184	X	Cable terminal	Kabelsko	5
0290								
0300								
0310								
0320								
0330								
0340								
0350	16	*7155 153*		103), FOR CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0370	16	*79 72 029*		38), FOR CONTACT HOUSING, 8533697,9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0380								
0390	16	79 71 708		47), FOR CONTACT HOUSING 7155096,7155112	X	Cable terminal	Kabelsko	5
0400								
0410	16	*85 82 454*		47), TEST CONNECTOR,FOR CONTACT HOUSING, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0420								
0430	16	79 68 068		48), FOR CONTACT HOUSING, 9503251	X	Cable terminal	Kabelsko	5
0440								
0450	17	79 69 256		48), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0460								

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,6 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F20 Cable terminal 1993

Ledningssko 1993

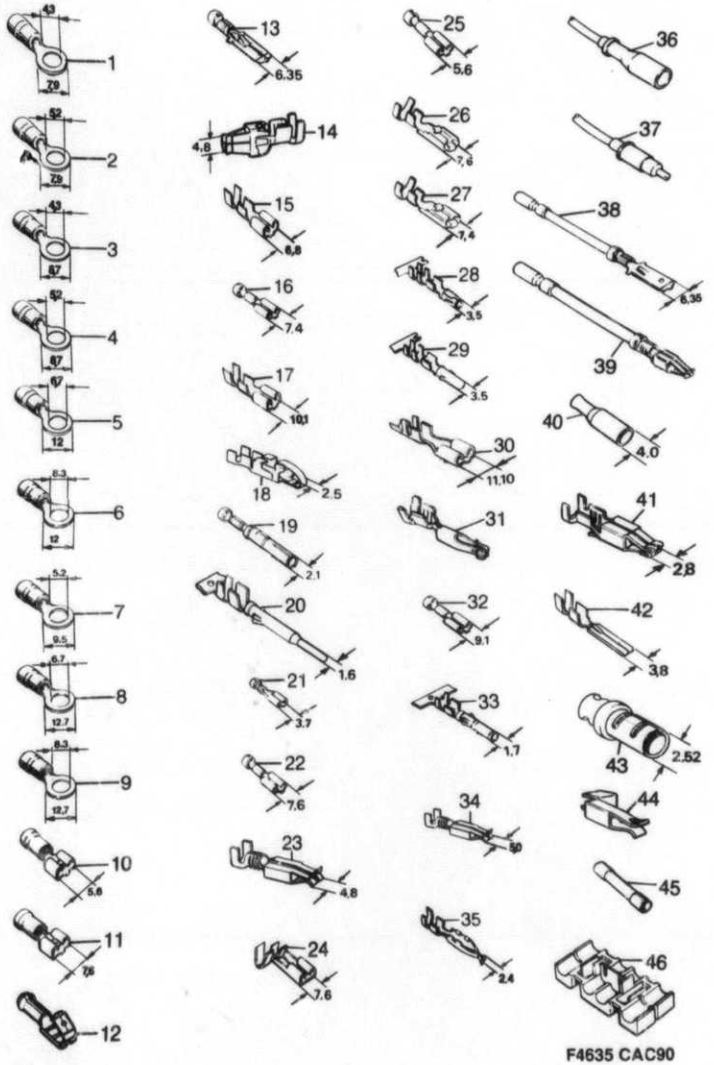

F4635 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
18	81 35 147		49), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
18	81 38 679		50), FOR CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
19	85 22 583		51), FOR CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
20	85 93 964		47), FOR CONTACT HOUSING 8593964	X	Cable terminal	Kabelsko	5
20	95 19 398		52), FOR CONTACT HOUSING, 9519406	X	Cable terminal	Kabelsko	5
20	95 26 401		53), FOR CONTACT HOUSING, 9529512	X	Cable terminal	Kabelsko	5
21	*85 09 846*		54), FOR CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
21	85 30 107		47), FOR CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, FOR CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
22	85 14 036		38), GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, FOR CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
23	91 20 783		38), AC DIOD, FOR CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, JOINT PIECE, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, FOR CONTACT HOUSING, 4069274 4109427, 9122789,9122797	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
49. Area 0,75-1,0 MM2.
50. Area 1,0-3,5 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F22

Cable terminal
1993

Ledningssko
1993

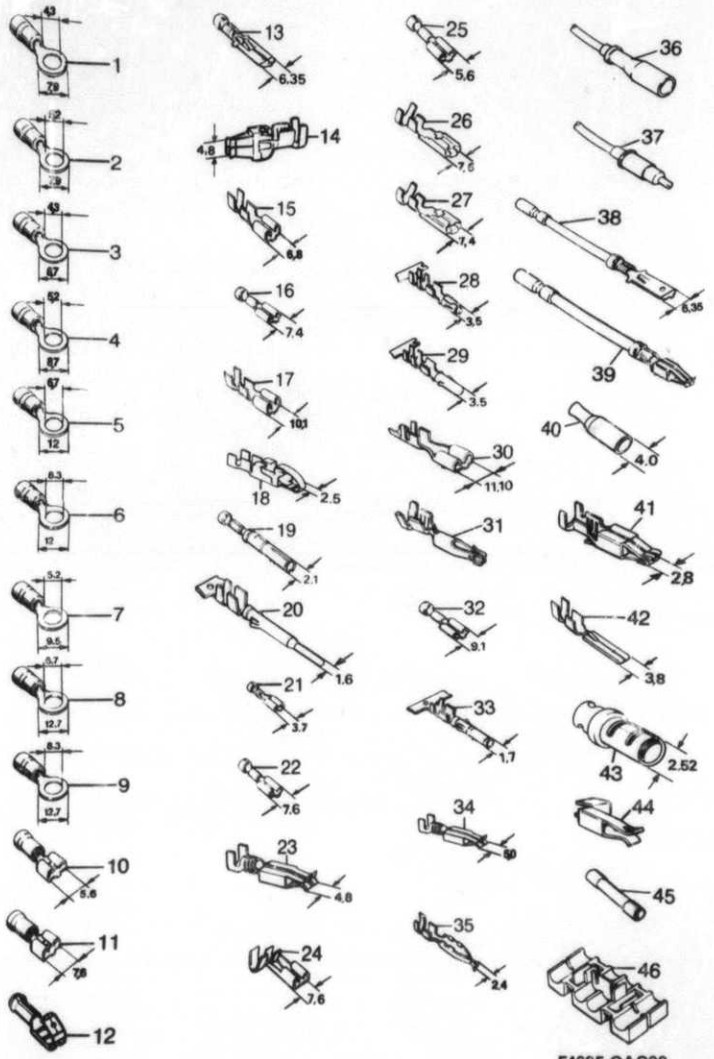

F4635 CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			9124090, 9124157,9124165 9124173, 9125543				
23	40 61 586		38), FOR CONTACT HOUSING 4113205, 4113619,4113809 4114005, 4114021,4114039 4113205, 4176244,4178422 4178430, 4352944,4353637	X	Cable terminal	Kabelsko	5
23	43 50 526		38), FOR CONTACT HOUSING 4113627	X	Cable terminal	Kabelsko	5
24	*85 21 676*		47), SPOTLIGHT, LIGHT ASH TRAY, FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 21 684*		38), FOR CONTACT HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
24	*85 82 421*		47), FOR CONTACT, HOUSING 8521692 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
25	*85 33 028*		47), FOR CONTACT HOUSING 8533184 NLS - USE 8582439	X	Cable terminal	Kabelsko	3
26	*85 41 203*		47), SPOTLIGHT, LIGHT INSTEP, BELT WARNING,FOR CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
27	85 60 476		57), SWITCH INTERIOR LIGHT	X	Cable terminal	Kabelsko	5
27	85 41 211		56), FOR CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
27	85 22 534		47), LIGHT INSTEP, FOR CONTACT HOUSING 7155112	X	Cable terminal	Kabelsko	5
28	*85 44 298*		58), FOR CONTACT HOUSING 8521700, 8564916 NLS - USE 8582595	X	Cable terminal	Kabelsko	5
28	85 44 306		59), REAR DEMIST	X	Cable terminal	Kabelsko	5
28	85 82 595		58), LIGHT NUMBER PLATE, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, JOINT PIECE CENTRAL LOCK	X	Cable terminal	Kabelsko	5
29	*85 44 314*		58), FOR CONTACT HOUSING 8521718, 8564924 9525114 NLS - USE 8582603	X	Cable terminal	Kabelsko	5
29	85 44 322		59), FOR CONTACT HOUSING 8564924	X	Cable terminal	Kabelsko	5
30	85 69 139		105), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
31	95 27 771		FOR CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
32	85 82 413		116), FOR CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
59. Area 2,0-4,0 MM2.
60. Area 6,0-8,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-F24

Cable terminal
1993

Ledningssko
1993

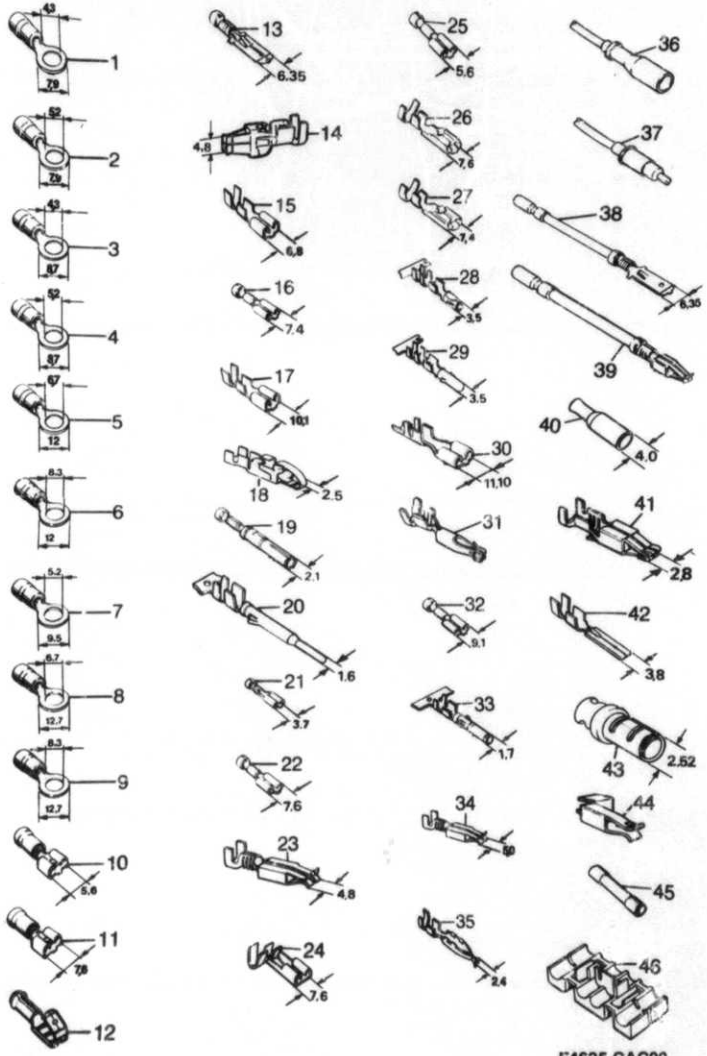

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
33	85 87 552		47), FOR CONTACT HOUSING 8521700, 9512591 9525108	X	Cable terminal	Kabelsko	5
33	85 87 560		38), FOR CONTACT HOUSING 9512591	X	Cable terminal	Kabelsko	5
33	95 25 817		53), FOR CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
34	*95 21 980*		40), RELAY GROUND SHEET NLS - USE 9120783	X	Cable terminal	Kabelsko	5
35	40 63 970		44), FOR CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	5
36	78 74 498		217)FOR CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
36	85 47 796		218)SIDE DIRECTION INDI FOR CONTACT HOUSING, 9503277, 9503418,9503475 9519679	X	Connector	Skarvstycke	5
36	85 47 804		56)	X	Connector	Skarvstycke	5
37	78 74 506		217),FOR CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
38	85 22 542		36), FOR CONTACT HOUSING, 7155120	X	Cable terminal	Kabelsko	5
39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
41	*95 08 706*		62) RELAY GROUND SHEET NLS - USE 9120957	X	Cable terminal	Kabelsko	5
41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, FOR CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS - USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
41	91 20 957		38), FOR CONTACT HOUSING 4061503, 4109278,4109500 4109518, 4113809,4114005 4114021, 4114633,4175428 4176186, 4176269,4176582 8593923, 9123381,9123399 9123548, 9123555,9125519 9503475, 9525031,9565045	X	Cable terminal	Kabelsko	5
42	*95 52 126*		44), FOR CONTACT HOUSING, 9122557 NLS - USE 9552100	X	Cable terminal	Kabelsko	5
43	95 52 175		FOR CONTACT HOUSING, 9552167	X	Cable terminal	Kabelsko	5

36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-G02

Cable terminal
1993

Ledningssko
1993

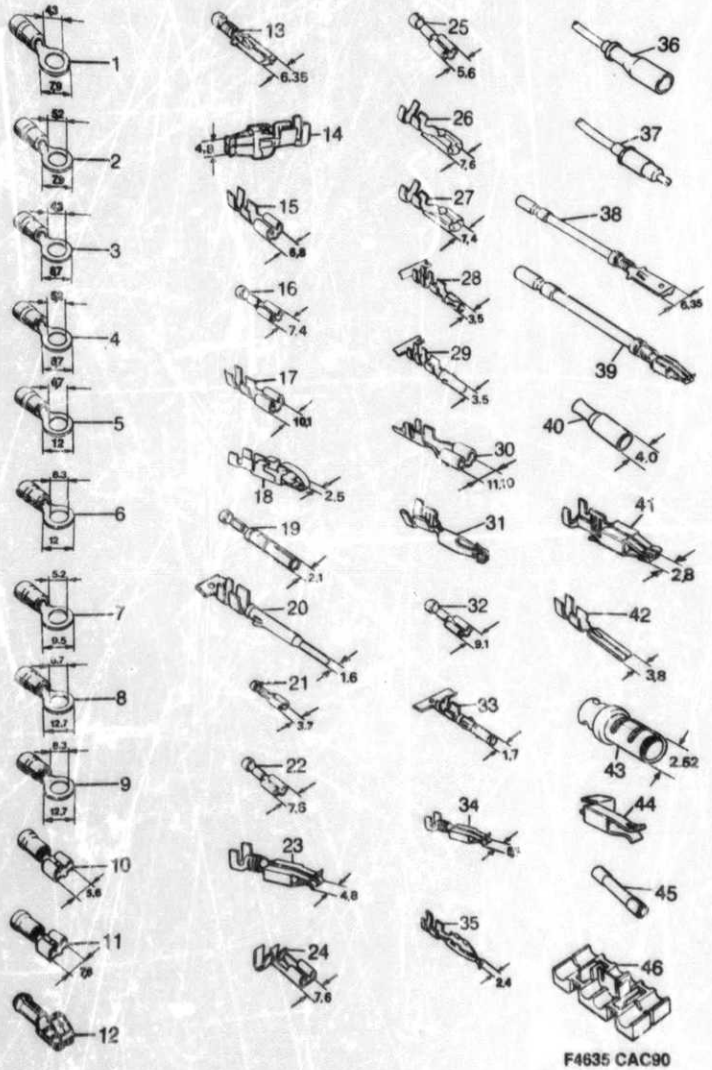

F4635 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
43	95 09 746		FOR CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
44	95 52 191		FOR CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
45	41 15 077		38), FOR CONTACT HOUSING 4117164, 4117263,4117461 4117479	X	Cable terminal	Kabelsko	5
45	41 15 192		38), FOR CONTACT HOUSING 4113668, 4114062,4114070 4114088, 4114153	X	Cable terminal	Kabelsko	5
46	41 15 580		38), JOINT PIECE MAIN CABLE HARNESS, FOR CONTACT HOUSING, 4117560 4117669, 4117768	X	Cable terminal	Kabelsko	5
47	71 55 203		35) 40/253 164 008	X	Connector housing	Skarvhus	5
47	71 55 146		36) 40/253 188 007	X	Connector housing	Skarvhus	5
47	71 55 633		37) 40/253 221 006	X	Connector housing	Skarvhus	5
48	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
48	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E12

3-H02



Transmission
Kraftöverföring
Transmisión

TABLE OF CONTENTS

Clutch		
Clutch, clutch disc	4 : 5	3-H06
Clutch control		
Pedal, master cylinder, LHD	4 : 7	3-H08
Pedal, master cylinder, RHD	4 : 9	3-H10
Gear box, manual		
Gear box assy	4 : 11	3-H12
Gear box case	4 : 13	3-H14
Release bearing, slave cylinder	4 : 15	3-H16
Gear shift forks, gear shift shafts	4 : 17	3-H18
Shafts, gears	4 : 21	3-H22
Differential, inner universal joint, M	4 : 25	3-I02
Differential, inner universal joint, A	4 : 27	3-I04
Gear box control, manual		
Gear shift lever, 113)	4 : 31	3-I08
Gear shift lever, 114)	4 : 33	3-I10
Drive shafts, outer universal joint, M and A	4 : 35	3-I12
Gear box, automatic		
Gear box assy	4 : 39	3-I16
Converter housing, converter	4 : 41	3-I18
Gear box case, cover	4 : 43	3-I20
Gears, pinion, Part 1	4 : 47	3-I24
Gears, pinion, Part 2	4 : 53	3-J06
Gears, pinion, Part 3	4 : 59	3-J12
Control system	4 : 65	3-J18
Controls in gear box	4 : 67	3-J20
Throttle cable, electric motor ASR	4 : 69	3-J22
Differential, inner universal joint	4 : 27	3-I04
Gear box control, automatic		
Gear selector lever	4 : 71	3-J24
Drive shafts, outer universal joint	4 : 35	3-I12
Rear axle, See group 7		
Complete sets		
Transmission	4 : 75	3-K04

113. Ch. --N1004566
114. Ch. N1004567--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-H03

INNEHÅLLSFÖRTECKNING

Koppling		
Koppling, lamell	4 : 5	3-H06
Kopplingsmanövrering		
Pedal, huvudcylinder, LHD	4 : 7	3-H08
Pedal, huvudcylinder, RHD	4 : 9	3-H10
Växellåda, manuell		
Växellåda kpl	4 : 11	3-H12
Växellådshus	4 : 13	3-H14
Urtrampningslager, slavcylinder	4 : 15	3-H16
Växelförargafflar, växelföraraxlar	4 : 17	3-H18
Axlar, kugghjul	4 : 21	3-H22
Differential, inre knut. M	4 : 25	3-I02
Differential, inre knut. A	4 : 27	3-I04
Växellådsmanövrering, manuell		
Växelspak, 113)	4 : 31	3-I08
Växelspak, 114)	4 : 33	3-I10
Drivaxlar, yttre knut. M och A	4 : 35	3-I12
Växellåda, automatisk		
Växellåda kpl	4 : 39	3-I16
Momentomvandlarhus, momentomvandlare	4 : 41	3-I18
Växellådshus, lock	4 : 43	3-I20
Drev, pinjong, Del 1	4 : 47	3-I24
Drev, pinjong, Del 2	4 : 53	3-J06
Drev, pinjong, Del 3	4 : 59	3-J12
Kontrollsystem	4 : 65	3-J18
Reglage i växellådshus	4 : 67	3-J20
Trottelkabel, elmotor ASR	4 : 69	3-J22
Differential, inre knut	4 : 27	3-I04
Växellådsmanövrering, automatisk		
Växelväljarspak	4 : 71	3-J24
Drivaxlar, yttre knut	4 : 35	3-I12
Bakaxel, Se grupp 7		
Satser		
Kraftöverföring	4 : 75	3-K04

113. Ch. --N1004566
114. Ch. N1004567--

3-H04

SUMARIO

Embrague		
Embrague, disco de embrague	4 : 5	3-H06
Mando de embrague		
Pedal, cilindro principal, LHD	4 : 7	3-H08
Pedal, cilindro principal, RHD	4 : 9	3-H10
Caja de cambios, manual		
Caja de cambios, compl.	4 : 11	3-H12
Carter de caja de cambios	4 : 13	3-H14
Cojinete de empuje, cilindro esclavo	4 : 15	3-H16
Horquillas de cambio, ejes de horquilla de cambio	4 : 17	3-H18
Ejes, engranajes	4 : 21	3-H22
Diferencial, junta homocinetica interior. M	4 : 25	3-I02
Diferencial, junta homocinetica interior. A	4 : 27	3-I04
Mandos del cambio, manual		
Palanca, 113)	4 : 31	3-I08
Palanca, 114)	4 : 33	3-I10
Eje de accionamiento, junta homocinetica exterior, M y A	4 : 35	3-I12
Caja de cambios, automatica		
Caja de cambios, compl.	4 : 39	3-I16
Carter de convertidor de par, convertidor	4 : 41	3-I18
Carter de caja de cambios, tapas	4 : 43	3-I20
Engranajes planetarios, pinon de a taque, 1a parte	4 : 47	3-I24
Engranajes planetarios, pinon de a taque, 2a parte	4 : 53	3-J06
Engranajes planetarios, pinon de a taque, 3a parte	4 : 59	3-J12
Sistem de control	4 : 65	3-J18
Mando de caja de cambios	4 : 67	3-J20
Cable del estrangulador, motor electrico ASR	4 : 69	3-J22
Differencial y junta homocinetica interior	4 : 27	3-I04
Mando de caja de cambios, automatica		
Palanca selectora	4 : 71	3-J24
Eje de accionamiento, junta homocinetica exterior	4 : 35	3-I12
Eje trasero, Ver grupo 7		
Juegos completos		
Transmision	4 : 75	3-K04

113. Ch. --N1004566
114. Ch. N1004567--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3--H06

Clutch, clutch disc

Koppling, lamell

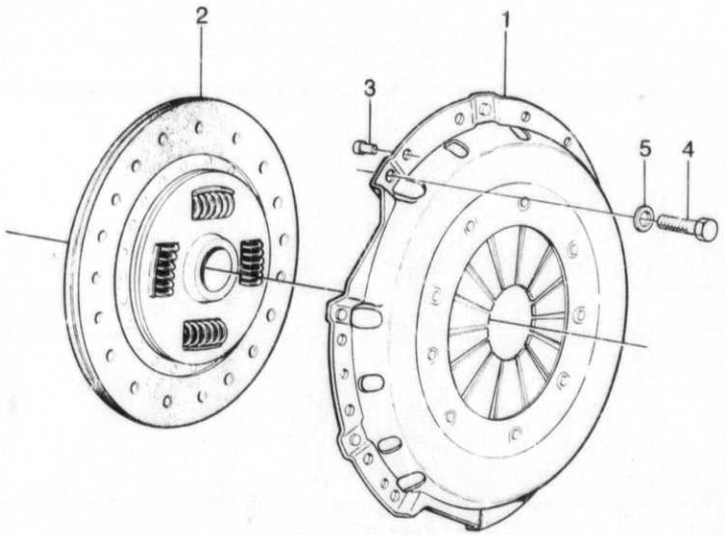

F1009 CAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 27 190	S	B202 TURBO	1	Pressure plate	Tryckskiva	2
0020	1	87 28 289	S	B234 TURBO	1	Pressure plate	Tryckskiva	2
0030	1	87 28 123	S	I	1	Pressure plate	Tryckskiva	2
0040	2	87 27 695	S	B202 TURBO	1	Clutch disc	Lamell	2
0050	2	87 28 297	S	B234 TURBO	1	Clutch disc	Lamell	2
0060	2	87 27 935	S	B202 I	1	Clutch disc	Lamell	2
0070	2	*87 27 943*	S	-1991, B234 I NLS - USE 8730806	1	Clutch disc	Lamell	2
0080	2	87 30 806	S	1992-, B234 I	1	Clutch disc	Lamell	2
0090	3	*79 49 712*		1990, TURBO NLS - USE 8034472	3	Pin	Pinne	5
0100	3	80 34 472		1991-, TURBO	3	Pin	Pinne	5
0110	3	83 07 407		I	3	Pin	Pinne	5
0120	4	79 70 288		-1991	6	Screw	Skruv	5
0130	4	80 82 968		1992	6	Screw	Skruv	5
0140	4	91 66 331		1993-	6	Screw	Skruv	5
0150	5	83 80 982			6	Washer	Bricka	5
0160								
0170		87 81 320		B202 TURBO	X	Clutch kit	Kopplingssats	6
0180				See page 4-075, 3-K04				
0190		87 81 353		B234 TURBO	X	Clutch kit	Kopplingssats	6
0200				See page 4-075, 3-K04				
0210		87 81 312		B202 I	X	Clutch kit	Kopplingssats	6
0220				See page 4-075, 3-K04				
0230		87 81 338		B234 I	X	Clutch kit	Kopplingssats	6
0240				See page 4-075, 3-K04				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

Clutch control

3-H08


Pedal, master cylinder

LHD

Kopplingsmanövrering

Pedal, huvudcylinder

LHD

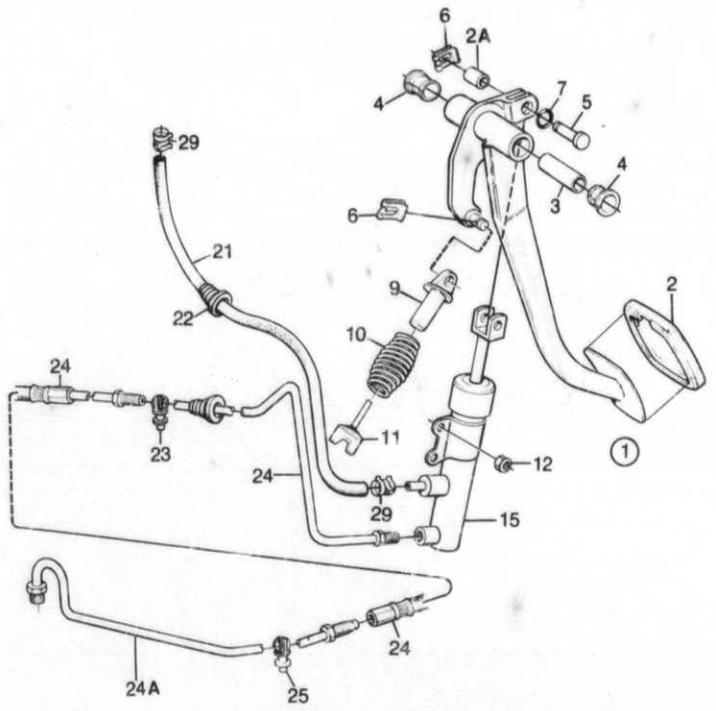

F6233 CAC93

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 73 299			1	Clutch pedal	Kopplingspedal	6
0020	2	89 16 272			1	. Pedal pad	. Pedalgummi	5
0030	2A	91 05 495			1	. Bushing	. Bussning	4
0040	3	89 70 832			1	Spacer tube	Distansrör	6
0050	4	89 62 128			2	Bearing bushing	Lagerbussning	4
0060	5	41 05 821			1	Bolt	Bult	5
0070	6	82 52 553			2	Clip	Clips	5
0080	7	*41 90 807*		NLS - USE 4318028	1	O-ring	O-ring	2
0090	9	40 00 568			1	Guide	Styrning	6
0100	10	89 58 316		I, B202 TURBO	1	Spring	Fjäder	3
0110	10	41 07 975		85), B234 TURBO	1	Spring	Fjäder	3
0120	10	89 58 316		86), B234 TURBO	1	Spring	Fjäder	3
0130	11	89 57 813			1	Guide	Styrning	6
0140	12	80 73 512			1	Lock nut	Låsmutter	3
0150	15	*75 94 039*		140) NLS - USE 4384079	1	Clutch cylinder	Kopplingscylinder	2
0160	15	43 84 079		141)	1	Clutch cylinder	Kopplingscylinder	2
0170	21	*40 27 751*		31) NLS - USE 4385043	1	Hose	Slang	5
0180	21	*41 21 562*		32) NLS - USE 4385043	1	Hose	Slang	5
0190	22	40 27 769			1	Grommet	Genomföring	3
0200	23	40 28 221			1	Tube clamp	Rörklamma	5
0210	24	*75 96 174*		1990 NLS - USE 4385167	1	Clutch hose	Kopplingsslang	2
0220	24	*42 79 543*		1991-1992 NLS - USE 4385167	1	Clutch hose	Kopplingsslang	2
0230	24	43 85 167		1993-	1	Clutch hose	Kopplingsslang	2
0240	24A	40 29 369		133)	1	Tube	Rör	2
0250	24A	*42 81 200*		134), -1992 NLS - USE 4477022	1	Tube	Rör	2
0260	24A	43 85 860		1993-	1	Tube	Rör	2
0270	25	73 52 651			1	Tube clamp	Rörklamma	5
0280	29	79 73 605			2	Hose clamp	Slangklamma	5


31. Ch. --L1009558, --L2004025, --L8001139.
32. Ch. L1009559--, L2004026--, L8001140--.
85. Ch. --M1010190, --M2006777
86. Ch. M1010191--, M2006778--
133. Ch. --N1038309
134. Ch. N1038310--
140. Ch. --N1048793
141. Ch. N1048794--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

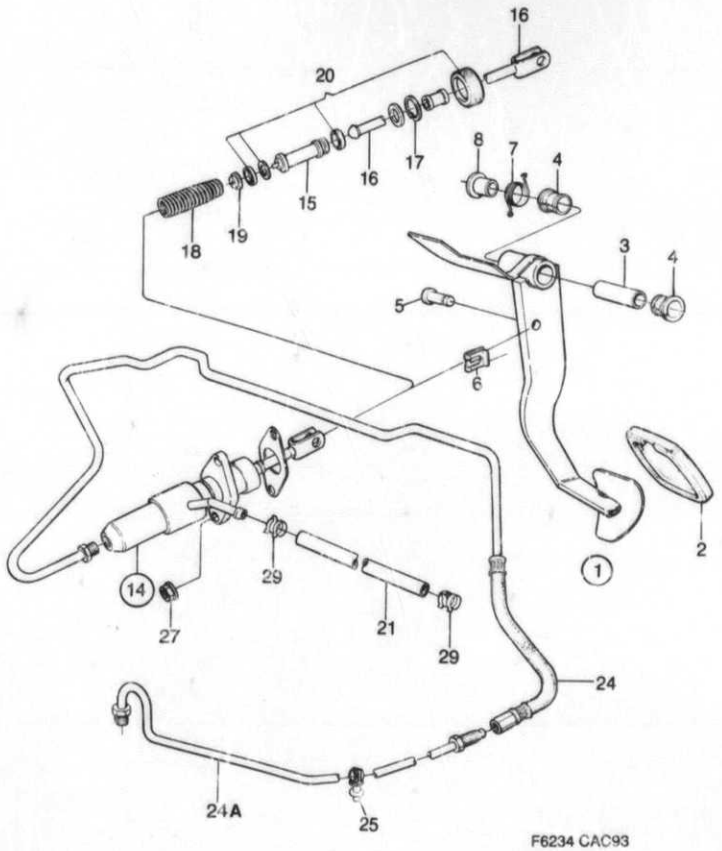

F6234 CAC93

Clutch control

3--H10

Pedal, master cylinder

RHD

Kopplingsmanövrering

Pedal, huvudcylinder

RHD

0160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 65 535			1	Clutch pedal	Kopplingspedal	6
0020	2	89 65 345			1	.Pedal pad	.Pedalgummi	3
0030	3	89 50 297			1	Spacer tube	Distansrör	5
0040	4	89 62 128			2	Bearing bushing	Lagerbussning	4
0050	5	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0060	6	82 52 553			1	Clip	Clips	5
0070	7	89 66 756			1	Return spring	Returfjäder	3
0080	8	89 70 196			1	Spacer sleeve	Distanshylsa	6
0090	14	43 85 019		(8957292)	1	Clutch cylinder	Kopplingscylinder	2
0100	15	43 85 027		126)	1	.Piston	.Kolv	6
0110	16	43 85 035		126)	1	.Push rod	.Stötstång	5
0120	16	89 68 729		125)	1	.Push rod	.Stötstång	5
0130	17	*89 57 193*		NLS - USE 7313232	1	.Lock ring	.Låsring	5
0140	18	89 86 622			1	.Spring	.Fjäder	3
0150	19	89 45 156			1	.Spring support	.Fjäderstöd	5
0160	20	89 93 156		See page 4-075, 3-K04	1	.Repair kit	.Reparationssats	1
0170	21	89 57 326		-1991	1	Hose	Slang	5
0180	21	41 18 949		ABS	1	Hose	Slang	5
0190	23	89 41 478			1	Gasket	Packning	5
0200	24	*40 28 791*		-1991 NLS - USE 4280921	1	Clutch hose	Kopplingsslang	2
0210	24	42 80 921		1992-	1	Clutch hose	Kopplingsslang	2
0220	24A	40 28 742		133)	1	Tube	Rör	2
0230	24A	*43 84 111*		134),-1992 NLS - USE 4477048	1	Tube	Rör	2
0240	24A	*43 85 878*		1993- NLS - USE 4477048	1	Tube	Rör	2
0250	25	73 52 651			1	Tube clamp	Rörklamma	5
0260	27	79 71 922			2	Nut	Mutter	3
0270	29	79 73 605			2	Hose clamp	Slangklamma	5


125. Part of: 8957292 Ingår i: 8957292
126. Part of: 4385019 Ingår i: 4385019
133. Ch. --N1038309
134. Ch. N1038310--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

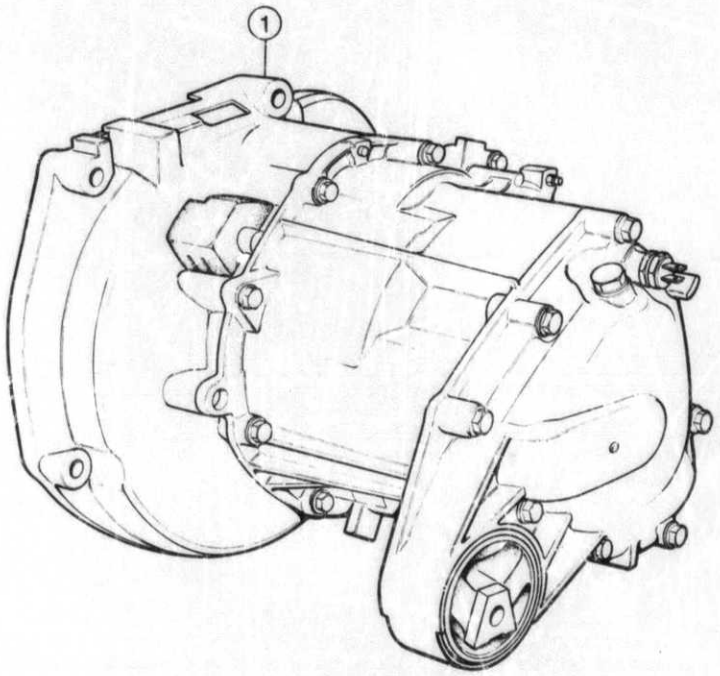

F1011 CAC90

Gear box assy
Manual

Växellåda kpl
Manuell

3-H12

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*87 27 125*		7,17), B202 I MARKED: GM 65102 NLS - USE 8727547	1	Gearbox	Växellåda	5
1	87 27 547		7,18), B202 I MARKED: GM 65103	1	Gearbox	Växellåda	5
1	87 27 547		7), B202 S MARKED: GM 65103	1	Gearbox	Växellåda	5
1	87 27 547		7), B234 I MARKED: GM 65103	1	Gearbox	Växellåda	5
1	87 28 321		7), B202 TURBO MARKED: GM 75402	1	Gearbox	Växellåda	5
1	87 28 784		7), -1992, B234 TURBO MARKED: GM 75403	1	Gearbox	Växellåda	5
1	87 34 501		7), 1993-, B234 TURBO MARKED: GM 75701	1	Gearbox	Växellåda	5

7. Also available as exchange unit. Finns även som utbytesenhet.
17. Ch. --L1002453, --L2001777, --L8000652.
18. Ch. L1002454--, L2001778--, L8000653--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools. Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04


Gear box, manual

3-H14

Gear box case

Växellåda, manuell

Växellådshus

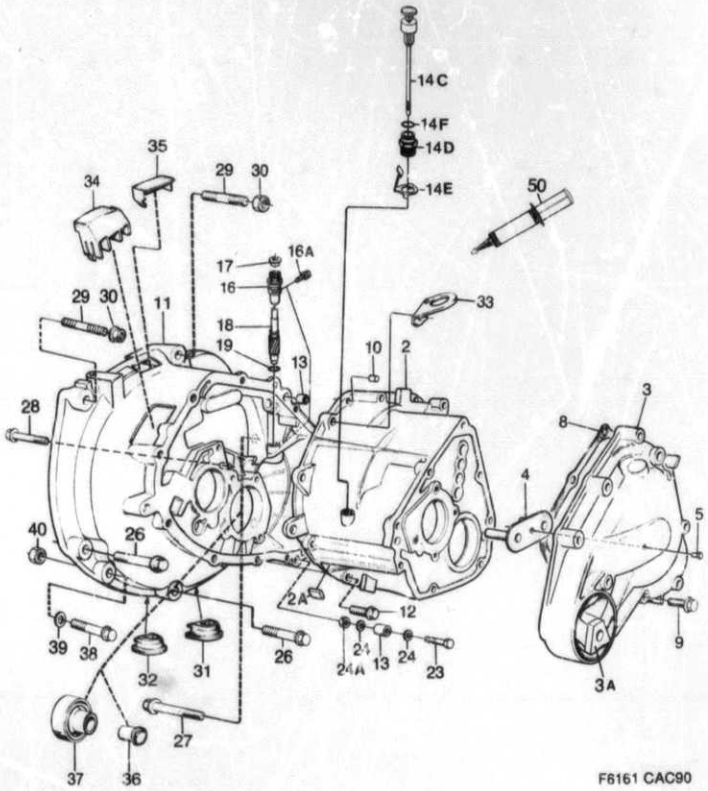

F6161 CAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	2	87 27 760			1	.Gearbox housing	.Växellådshus	6
0030	2A	87 27 745			1	.Magnet	.Magnet	3
0040	3	87 28 107			1	.Cover	.Lock	5
0050	3A			1)	1	..Vibration damper	..Vibrationsdämpare	
0060	4	87 22 183			1	..Oil collector	..Oljesamlare	5
0070	5	80 94 732			1	..Rivet	..Nit	5
0080	8	87 28 685	S		1	.Gasket	.Packning	3
0090	9	81 25 221			8	.Screw	.Skruv	5
0100	10	87 01 658			1	.Sintered compact	.Sinterkropp	3
0110	11	87 27 521		135)	1	.Bell housing	.Kopplingskåpa	5
0120	11	87 29 568		136)	1	.Bell housing	.Kopplingskåpa	5
0130	12	81 25 221			16	.Screw	.Skruv	5
0140	13	87 23 967			2	.Guide pin	.Styrstift	5
0150	14C	87 26 762			1	.Dipstick	.Mätsticka	3
0160	14D	87 26 770			1	.Nipple	.Nippel	3
0170	14E	87 27 737			1	.Spring	.Fjäder	5
0180	14F	81 09 647			1	.O-ring	.O-ring	2
0190	16	87 27 828			1	.Sleeve	.Hylsa	5
0200	16A	87 24 882			1	.Screw	.Skruv	5
0210	17	87 24 874	S		1	.Seal	.Tätning	4
0220	18	87 27 240			1	.Gear	.Kugghjul	5
0230	19	87 11 707			1	.O-ring	.O-ring	5
0240	23	81 25 221			2	Screw	Skruv	5
0250	24	70 61 328			4	Washer	Bricka	5
0260	24A	81 51 235			2	Nut	Mutter	5
0270	26	79 74 819		B202	2	Screw	Skruv	5
0280	27	79 74 801			1	Screw	Skruv	5
0290	28	79 74 793			1	Screw	Skruv	5
0300	29	75 53 688			2	Stud	Pinnskruv	5
0310	30	79 76 962		-1991	2	Nut	Mutter	5
0320	30	81 51 342		1992-	2	Flange nut	Flänsmutter	5
0330	31	*93 86 459*		39) NLS - USE 4119640	2	Plug	Plugg	5
0340	31	41 19 640		40)	2	Plug	Plugg	5
0350	32	*93 86 467*		39) NLS - USE 4119657	2	Plug	Plugg	5
0360	32	41 19 657		40)	2	Plug	Plugg	5
0370	33	87 28 271			1	Lifting eye	Lyftögla	5
0380	34	87 28 545			1	Cover	Lock	6
0390	35	87 23 223			1	Cover	Lock	6
0400	36	87 23 538			1	Tube	Rör	4
0410	37	87 19 825			1	Seal	Tätning	4
0420	38	79 79 594		B234	1	Screw	Skruv	5
0430	39	80 73 116		B234	1	Washer	Bricka	5
0440	40	79 76 962		-1991, B234	1	Nut	Mutter	5
0450	40	81 51 342		1992-, B234	1	Flange nut	Flänsmutter	5
0460	50	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

1. Not as separate spare part. Ej som separat reservdel.
39. Ch. --L1016895, --L2012068, --L8001819.
40. Ch. L1016896--, L2012069--, L8001820--.
135. Gear box --D41692
136. Gear box D41693--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-H16

Release bearing, slave cylinder

Urtrampningslager, slavcylinder

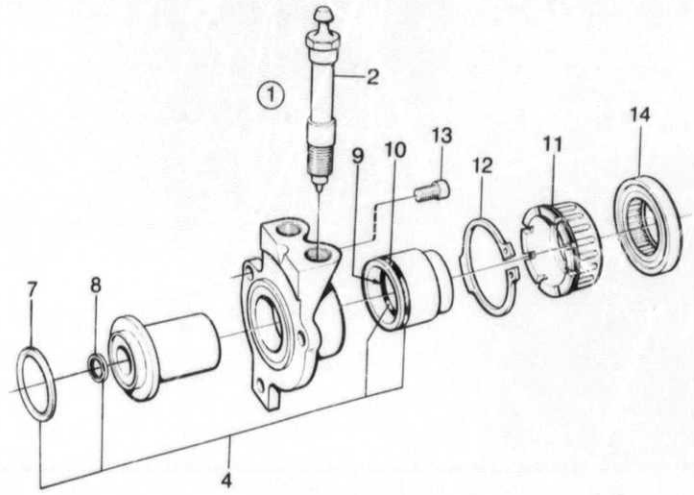

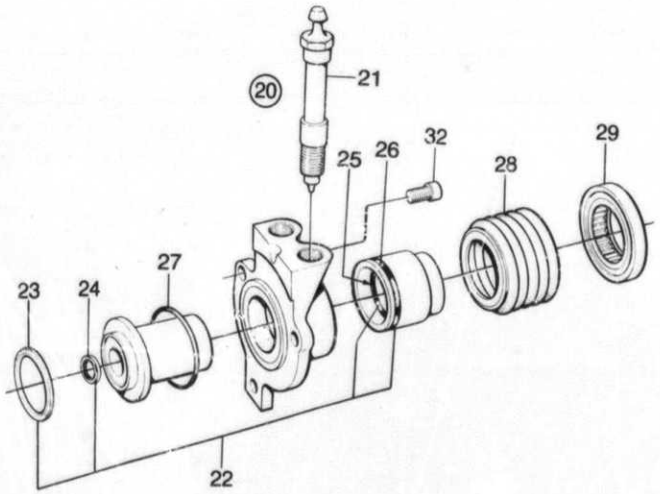

F4567 CAC90

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	87 81 189		135)	1	.Slave cylinder	.Slavcylinder	2
0030				See page 4-075, 3-K04				
0040	2	87 22 746		135)	1	..Nipple	..Nippel	6
0050	4	87 81 122		135)	1	..Sealing kit	..Tätningssats	1
0060				See page 4-075, 3-K04				
0070	7	87 33 198	S	135)	1	...O-ring	...O-ring	3
0080	8	87 22 001	S	1,135)	1	...Seal	...Tätning	2
0090	9	87 22 126	S	1,135)	1	...Seal	...Tätning	3
0100	10	87 22 118	S	1,135)	1	...Seal	...Tätning	3
0110	11	87 22 100		135)	1	..Seal	..Tätning	6
0120	12	87 14 420		135)	1	..Retaining ring	..Spårring	5
0130	13	87 23 322		135)	3	.Screw	.Skruv	5
0140	14	87 21 995	S	135)	1	.Release bearing	.Urtrampningslager	2
0150								
0160	20	87 81 387		136)	1	.Slave cylinder	.Slavcylinder	2
0170				See page 4-075, 3-K04				
0180	21	87 22 746		136)	1	..Nipple	..Nippel	6
0190	22	87 81 395		136)	1	..Sealing kit	..Tätningssats	1
0200				See page 4-075, 3-K04				
0210	23	87 29 600	S	136)	1	...O-ring	...O-ring	3
0220	24	87 22 001	S	1,136)	1	...Seal	...Tätning	2
0230	25	87 22 126	S	1,136)	1	...Seal	...Tätning	3
0240	26	87 22 118	S	1,136)	1	...Seal	...Tätning	3
0250	27	87 29 592	S	136)	1	...Seal	...Tätning	3
0260	28	87 29 618		136)	1	..Dust cover	..Dammskydd	6
0270	29	87 21 995	S	136)	1	..Release bearing	..Urtrampningslager	2
0280	32	87 29 675		136)	3	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
135. Gear box --D41692
136. Gear box D41693--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-H18

Gear shift forks, gear shift shafts

Växelförargafflar, växelföraraxlar

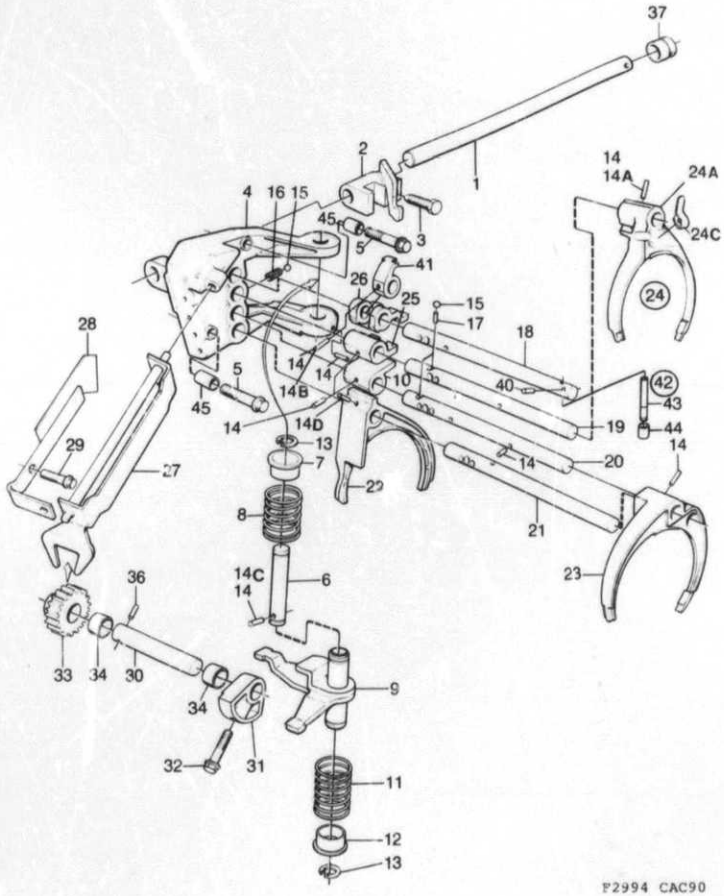

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	*87 19 635*		75) NLS - USE 8730772	1	.Gear rod	.Växelstång	6
0030	1	87 30 772		76)	1	.Gear rod	.Växelstång	6
0040	2	87 19 643			1	.Shifter	.Växlare	5
0050	3	87 19 399			1	.Screw	.Skruv	5
0060	4	87 21 466			1	.Bearing bracket	.Lagerbock	5
0070	5	81 25 221			2	.Screw	.Skruv	5
0080	6	87 21 557			1	.Pivot pin	.Lagertapp	6
0090	7	87 21 565			1	.Guide	.Styrning	4
0100	8	87 21 573			1	.Spring	.Fjäder	5
0110	9	87 21 581			1	.Gear selector	.Växelförare	6
0120	10	87 19 593			1	.Companion flange	.Medbringare	5
0130	11	87 21 615			1	.Spring	.Fjäder	5
0140	12	87 21 623			1	.Spring guide	.Fjäderstyrning	4
0150	13	87 26 754			2	.Retaining ring	.Spärring	5
0160	14	81 17 657			7	.Pin	.Pinne	5
0170	14A	80 34 373			1	.Pin	.Pinne	5
0180	14B	81 17 640			1	.Roll pin	.Spännstift	5
0190	14C	80 49 553			1	.Roll pin	.Spännstift	5
0200	14D	81 17 640			1	.Roll pin	.Spännstift	5
0210	15	87 17 027			7	.Ball	.Kula	5
0220	16	87 23 397			4	.Spring	.Fjäder	5
0230	17	87 19 684			2	.Pin	.Pinne	5
0240	18	87 24 395		35)	1	.Shift rail R	.Växelföraraxel R	6
0250								
0260	18	87 27 984		36)	1	.Shift rail R	.Växelföraraxel R	6
0270								
0280	19	*87 24 387*		43)	1	.Shift rail 5	.Växelföraraxel 5	6
0290				NLS - USE 8727927				
0300	19	87 27 927		44)	1	.Shift rail 5	.Växelföraraxel 5	6
0310								
0320	20	87 19 700		43)	1	.Shift rail 3/4	.Växelföraraxel 3/4	6
0330								
0340	20	87 27 919		44)	1	.Shift rail 3/4	.Växelföraraxel 3/4	6
0350								
0360	21	87 19 692		43)	1	.Shift rail 1/2	.Växelföraraxel 1/2	6
0370								
0380	21	87 27 901		44)	1	.Shift rail 1/2	.Växelföraraxel 1/2	6
0390								
0400	22	87 22 332			1	.Gear selector fork 1/2	.Växelförargaffel 1/2	5
0410								
0420	23	87 27 869			1	.Gear selector fork 3/4	.Växelförargaffel 3/4	5
0430								
0440	24	87 26 689			1	.Gear selector fork 5	.Växelförargaffel 5	5
0450								
0460	24A	87 24 296			1	..Gear selector fork	..Växelförargaffel	5
0470	24C	87 25 368			1	..Spring	..Fjäder	5
0480	25	87 19 601			1	.Companion flange	.Medbringare	5
0490	26	87 24 346			1	.Companion flange	.Medbringare	5
0500	27	87 21 664			1	.Lever R	.Hävarm R	5
0501								
0510	28	87 21 508			1	.Bearing bracket	.Lagerkonsol	5
0520	29	81 25 163			1	.Screw	.Skruv	5
0530	30	87 19 148			1	.Shift rail R	.Växelföraraxel R	6
0531								
0540	31	87 20 880			1	.Support	.Stöd	5
0550	32	81 25 221			1	.Screw	.Skruv	5

35. Gear box --C16810.
36. Gear box C16811--.
43. Gear box --21613.
44. Gear box 21614--.
75. Gear box --42847.
76. Gear box 42848--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

Gear box, manual

3-H20 Gear shift forks, gear shift shafts

Växellåda, manuell

Växelförargafflar, växelföraraxlar

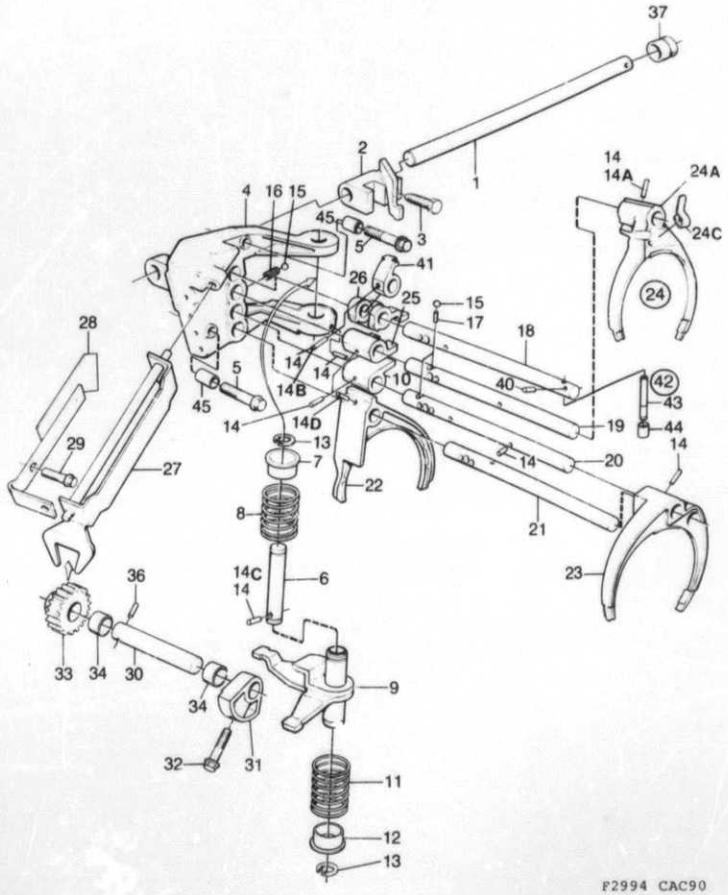

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	33	87 27 885			1	.Gear	.Kugghjul	5
0561						R	R	
0570	34	14 87 222			2	..Bushing	..Bussning	4
0580	36	81 17 640			1	.Roll pin	.Spännstift	5
0590	37	*83 44 335*		75) NLS - USE 8730764	1	.Seal	.Tätning	4
0600	37	87 30 764		76)	1	.Seal	.Tätning	4
0610	40	81 17 616			1	.Pin	.Pinne	5
0620	41	87 24 304			1	.Companion flange	.Medbringare	5
0630	42	87 24 643		35)	1	.Shift rail	.Växelföraraxel	6
0640	42	87 28 420		36)	1	.Shift rail	.Växelföraraxel	6
0650	43	*87 24 353*		1,35) NLS - USE 8724643	1	..Shift rail	..Växelföraraxel	6
0660	43	*87 27 186*		1,36) NLS - USE 8728420	1	..Shift rail	..Växelföraraxel	6
0670	44	87 24 627			1	..Bushing	..Bussning	4
0680	45	87 19 650			2	.Guide sleeve	.Styrhylsa	5

1. Not as separate spare part. Ej som separat reservdel.
35. Gear box --C16810.
36. Gear box C16811-.
75. Gear box --42847.
76. Gear box 42848-.

MASTER INDEX

0	General	1-A02
2	Engine	*-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-H22

Shafts, gears

Axlar, kugghjul

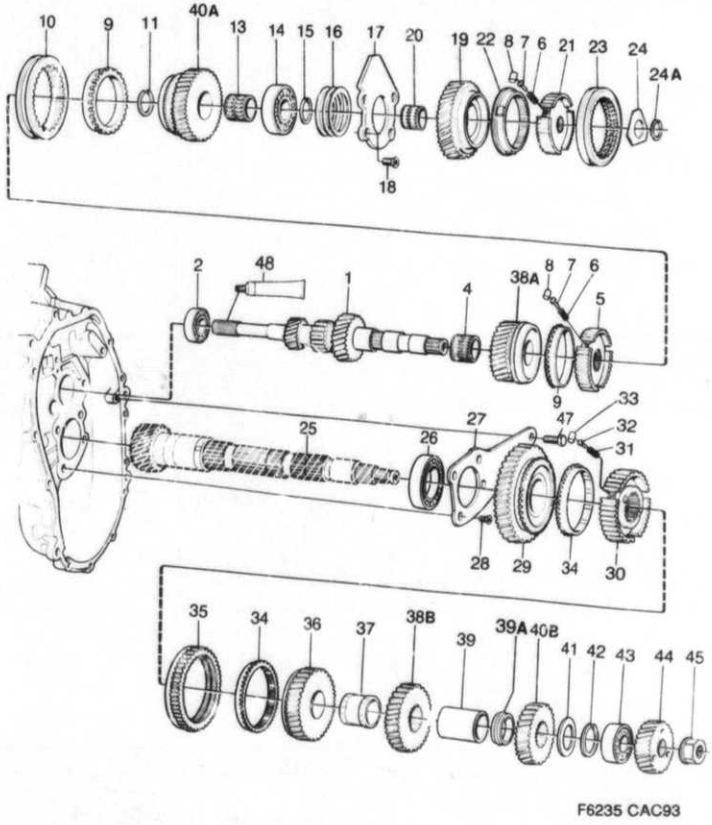

F6235 CAC93

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	87 26 986			1	.Shaft	.Axel	6
0030	2	87 19 163			1	.Roller bearing	.Rullager	3
0040	4	87 20 534			1	.Needle bearing	.Nållager	3
0050	5	87 20 088			1	.Hub	.Nav	5
0060	6	87 23 330			6	.Compression spring	.Tryckfjäder	4
0070	7	87 16 821			6	.Plunger	.Plunge	5
0080	8	87 16 839			6	.Roller	.Rulle	5
0090	9	87 20 112			2	.Synchromesh	.Synkronisering	3
0100	10	*87 20 146*		138) NLS - USE 8736365	1	.Sleeve	.Muff	5
0110	10	87 36 365		139)	1	.Sleeve	.Muff	5
0120	11	87 19 189			1	.Lock ring	.Låsring	5
0130	13	87 20 526			1	.Needle bearing	.Nållager	3
0140	14	87 20 278			1	.Roller bearing	.Rullager	3
0150	15	87 21 946			1	.Retaining ring	.Spårring	4
0160	16	87 16 607		0,10MM	X	.Adjusting washer	.Justerbricka	5
0170	16	87 16 615		0,15MM	X	.Adjusting washer	.Justerbricka	5
0180	16	87 16 623		0,30MM	X	.Adjusting washer	.Justerbricka	5
0190	16	87 16 631		1,00MM	X	.Adjusting washer	.Justerbricka	5
0200	17	87 22 191			1	.Support	.Stöd	5
0210	18	87 10 816			4	.Screw	.Skruv	5
0220	19	*87 25 319*		1990	1	.Gear	.Kuggdrev	4
0230				NLS - USE 8730327		5	5	
0240	19	87 30 327		1991-	1	.Gear	.Kuggdrev	4
0250						5	5	
0260	20	87 21 953			1	.Needle bearing	.Nållager	3
0270	21	87 20 369			1	.Hub	.Nav	5
0280	22	87 20 104			1	.Synchromesh	.Synkronisering	5
0290	23	87 27 794			1	.Sleeve	.Muff	5
0300	24	87 25 723			1	.Support	.Stöd	5
0310	24A	87 19 205			1	.Retaining ring	.Spårring	5
0320	25			See page 4-025, 3-I02	1	.Shaft	.Axel	
0330	26	*87 16 920*		1990 NLS - USE 8729378	1	.Roller bearing	.Rullager	3
0340	26	87 29 378		1991-	1	.Roller bearing	.Rullager	3
0350	27	87 24 023			1	.Support	.Stöd	5
0360	28	87 10 816			4	.Screw	.Skruv	5
0370	29	87 27 158			1	.Gear	.Kugghjul	4
0380						1	1	
0390	30	87 20 088			1	.Hub	.Nav	5
0400	31	87 22 571			3	.Compression spring	.Tryckfjäder	4
0410	32	87 16 821			3	.Plunger	.Plunge	5
0420	33	87 16 839			3	.Roller	.Rulle	5
0430	34	87 20 112			2	.Synchromesh	.Synkronisering	3
0440	35	87 22 340		138)	1	.Sleeve	.Muff	5
0450	35	87 36 357		139)	1	.Sleeve	.Muff	5
0460	36	87 26 994			1	.Gear	.Kugghjul	4
0470						2	2	
0480	37	87 20 310			1	.Bearing bushing	.Lagerbussning	3
0490	38A	*87 24 130*		1990	1	.Gear	.Kuggdrev	4
0500				NLS - USE 8730301		3	3	
0510	38A	87 30 301		1991-	1	.Gear	.Kuggdrev	4
0520						3	3	
0530	38B	*87 24 163*		1990	1	.Gear	.Kugghjul	4
0540				NLS - USE 8730319		3	3	
0550	38B	87 30 319		1991-	1	.Gear	.Kugghjul	4
0560						3	3	
0570	39	*87 20 302*		144,162) NLS	1	.Spacer sleeve	.Distanshylsa	5
0580	39	87 36 589		145)	1	.Spacer sleeve	.Distanshylsa	5

138. Gear box --D47395
139. Gear box D47396--
144. Gear box --D62044
145. Gear box D62045--
162. Superseded by kit 8781502 Ersatt av sats 8781502

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-H24

Shafts, gears
Axlar, kugghjul

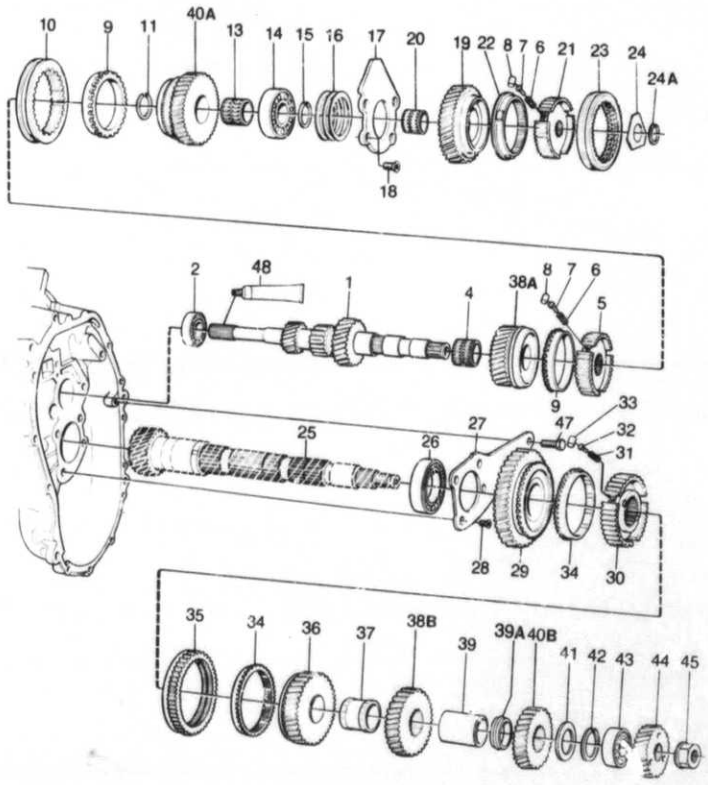

F6235 CAC93

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	39A	87 34 477		145)	1	.Sleeve	.Hylsa	4
0600	40A	87 25 301			1	.Gear	.Kuggdrev	4
0610						4	4	
0620	40B	87 25 327			1	.Gear	.Kugghjul	4
0630						4	4	
0640	41	*87 20 203*		144,162) NLS	1	.Spring disc	.Fjädertallrik	4
0650	42	*87 20 195*		144,162) NLS	1	.Spacer washer	.Distansbricka	4
0660	42	87 35 342		145)	1	.Spacer washer	.Distansbricka	4
0670	43	87 20 278			1	.Roller bearing	.Rullager	3
0680	44	87 25 335		1990	1	.Gear	.Kugghjul	4
0690						5	5	
0700	44	87 29 659		1991-	1	.Gear	.Kugghjul	4
0710						5	5	
0720	45	87 16 490			1	.Nut	.Mutter	5
0730	47	81 25 221			1	.Screw	.Skruv	5
0740	48	87 81 684		50 GR	X	Grease	Fett	

144. Gear box --D62044
145. Gear box D62045--
162. Superseded by kit 8781502 Ersatt av sats 8781502


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I06
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Compiete sets	3-K04

3-I02

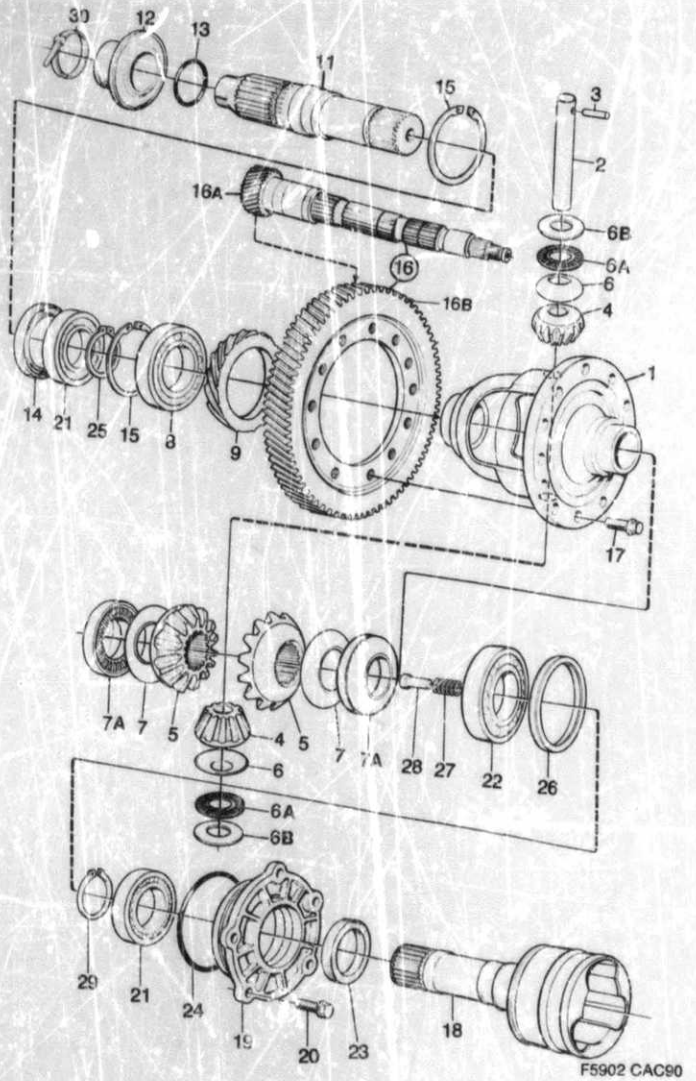

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-H12		Gear box, manual	Växellåda, manuell	
0020	1	87 19 908			1	.Differential housing	.Differentialhus	5
0030	1	87 31 846		1993-, B234 TURBO	1	.Differential housing	.Differentialhus	5
0040	2	87 19 940			1	.Differential shaft	.Differentialaxel	5
0050	3	80 49 736		107)	1	.Cotter pin	.Fjäderpinne	5
0060	3	91 17 863		108)	1	.Roll pin	.Spännstift	5
0070	4	87 29 394			2	.Differential pinion	.Differentialdrev	4
0080	4	87 31 853		1993-, B234 TURBO	2	.Differential pinion	.Differentialdrev	4
0090	5	87 29 386			2	.Differential side gear	.Differentialhjul	4
0100	5	87 29 741		1993-, B234 TURBO	2	.Differential side gear	.Differentialhjul	4
0110	6	*87 19 874*		1990 NLS - USE 8731788	2	.Washer	.Bricka	3
0120	6	87 31 788		1991-	2	.Washer	.Bricka	3
0130	6A	87 30 244		1993-, B234 TURBO	2	.Needle bearing	.Nållager	3
0140	6B	87 30 251		1993-, B234 TURBO	2	.Washer	.Bricka	5
0150	7	87 19 882		1990	2	.Washer	.Bricka	3
0160	7	87 31 796		1991-	2	.Washer	.Bricka	3
0170	7A	87 29 758		1993-, B234 TURBO	2	.Needle bearing	.Nållager	3
0180	8	87 19 254			1	.Roller bearing	.Rullager	3
0190	9	87 27 232			1	.Drive gear	.Drev	5
0200	11	87 23 132			1	.Shaft	.Axel	5
0210	12	87 20 997		B202	1	.Sealing ring	.Tätningsring	2
0220	13	*80 46 625*		-1992 NLS - USE 7970361	1	.O-ring	.O-ring	2
0230	13	79 70 361		1993-	1	.O-ring	.O-ring	2
0240	14	87 21 078			1	.Seal	.Tätning	5
0250	15	80 48 324	S		2	.Ring	.Ring	6
0260	15	*79 15 036*	S	78) NLS - USE 8048324	2	.Lock ring	.Låsring	5
0270	16	*87 81 296*		1990, TURBO NLS - USE 8727802, 8727810	1	.Final drive	.Slutväxel	5
0280	16A	87 27 802		1990, TURBO	1	..Pinion shaft	..Pinjongaxel	5
0290	16A	87 29 642		1991-, TURBO	1	..Pinion shaft	..Pinjongaxel	5
0300	16A	87 29 261		1993-, B234 TURBO	1	..Pinion shaft	..Pinjongaxel	5
0310	16B	87 27 810		TURBO	1	..Gear	..Kugghjul	5
0320	16B	87 29 279		1993-, B234 TURBO	1	..Gear	..Kugghjul	5
0330	16A	*87 24 122*		1990, I NLS - USE 8729659, 8729857	1	.Pinion shaft	.Pinjongaxel	5
0340	16A	87 29 857		1991-, I	1	.Pinion shaft	.Pinjongaxel	5
0350	16B	87 24 114		I	1	.Crown wheel	.Kronhjul	5
0360	17	*87 19 262*		NLS - USE 7571862	12	.Screw	.Skruv	5
0370	18	87 20 948		LH	1	.Companion flange	.Medbringare	3
0380	18	41 03 222		LH, B234 TURBO	1	.Companion flange	.Medbringare	3
0390	19	87 19 098			1	.Bearing seat	.Lagersäte	5
0400	20	81 25 189			5	.Screw	.Skruv	5
0410	20	87 29 485		B234 TURBO	5	.Screw	.Skruv	5
0420	21	87 04 306			2	.Ball bearing	.Kullager	3
0430	22	*87 08 836*		NLS - USE 8704389	1	.Pinion bearing	.Pinjonglager	3
0440	22	87 04 389		B234 TURBO	1	.Roller bearing	.Rullager	3
0450	23	*87 04 298*		1990 NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0460	23	87 31 804		1991-	1	.Sealing collar	.Tätningskrage	5
0470	24	87 16 656			1	.O-ring	.O-ring	2
0480	25	87 28 198			1	.Retaining ring	.Spårring	5
0490	26	87 16 292		0,10MM	X	.Adjusting washer	.Justerbricka	5
0500	26	*87 16 300*		0,15MM NLS - USE 4122123	X	.Adjusting washer	.Justerbricka	5
0510	26	*87 16 318*		0,30MM NLS - USE 4122156	X	.Adjusting washer	.Justerbricka	5
0520	26	87 16 326		0,50MM	X	.Adjusting washer	.Justerbricka	5
0530	27	87 04 314			1	.Spring	.Fjäder	4
0540	28	87 04 322			1	.Plunger	.Plunge	5
0550	29	87 28 198			1	.Retaining ring	.Spårring	5
0560	30	79 71 880			1	Tensioning band	Spännband	4

78. Alternative to 8048324. Alternativ till 8048324.
107. Gear box -D03514. -D10818
108. Gear box D03515-, D10819-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-104

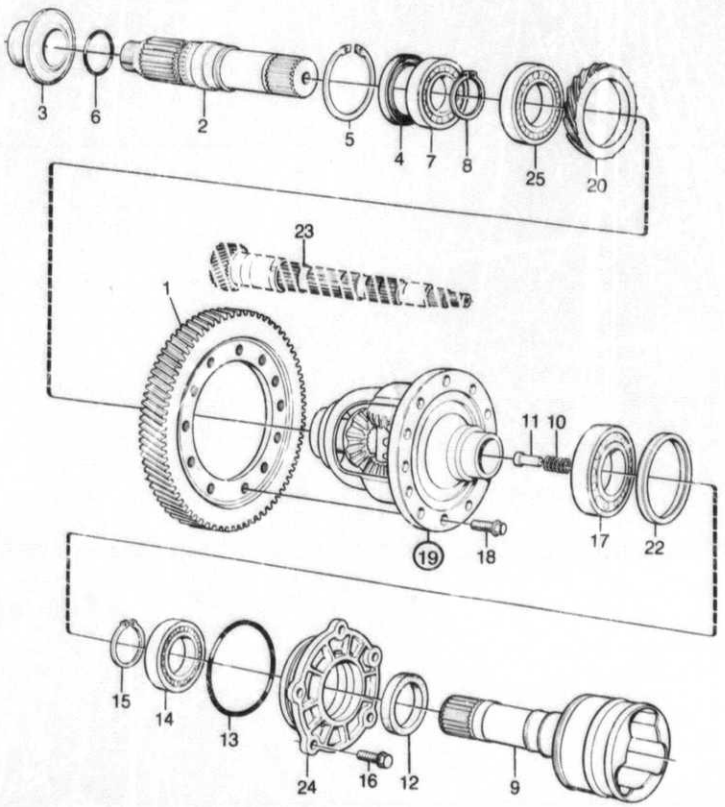

F5903 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
10	75 71 854		1990, B202	1	.Crown wheel	.Kronhjul	5
10	40 26 977		1990, B234	1	.Crown wheel	.Kronhjul	5
10	40 26 977		1991-	1	.Crown wheel	.Kronhjul	5
20	87 23 140	S		1	.Shaft	.Axel	5
30	87 20 997	S	B202	1	.Sealing ring	.Tätningsring	2
40	75 92 223	S		1	.Seal	.Tätning	5
50	80 48 324	S		1	.Ring	.Ring	6
60	*79 15 036*	S	78) NLS - USE 8048324	1	.Lock ring	.Låsring	5
70	75 94 898			1	.O-ring	.O-ring	3
80	75 58 950			1	.Ball bearing	.Kullager	5
90	*80 47 813*		NLS - USE 8728198	1	.Retaining ring	.Spärring	5
100	*79 15 200*		79) NLS - USE 8728198	1	.Lock ring	.Låsring	5
110	87 20 948	S	LH	1	.Companion flange	.Medbringare	3
120	41 03 222		LH, B234 TURBO	1	.Companion flange	.Medbringare	3
125			LH, B204L	1			
130	87 04 314	S		1	.Spring	.Fjäder	4
140	87 04 322	S		1	.Plunger	.Plunge	5
150	*75 92 231*	S	115) NLS - USE 4280376	1	.Seal	.Tätning	5
155	42 80 376	S	116)	1	.Seal	.Tätning	5
160	75 94 120			1	.O-ring	.O-ring	3
170	75 58 950	S		1	.Ball bearing	.Kullager	5
180	*79 15 200*	S	NLS - USE 8728198	1	.Lock ring	.Låsring	5
190	75 58 497			5	.Hexagon screw	.Sexkantsskruv	5
200	75 58 430			1	.Roller bearing	.Rullager	3
210	75 71 862			11	.Screw	.Skruv	5
220	87 27 778			1	.Differential	.Differential	6
225	87 29 766		1993-, B234 TURBO	1	.Differential	.Differential	6
230	87 27 232			1	..Drive gear	..Drev	5
240	*75 97 677*		81), 0,15MM NLS - USE 4122123	X	.Adjusting washer	.Justerbricka	5
250	41 22 123		82), 0,15MM	X	.Adjusting washer	.Justerbricka	5
260	*75 97 685*		81), 0,20MM NLS - USE 4122131	X	.Adjusting washer	.Justerbricka	5
270	41 22 131		82), 0,20MM	X	.Adjusting washer	.Justerbricka	5
280	*75 97 693*		81), 0,25MM NLS - USE 4122149	X	.Adjusting washer	.Justerbricka	5
290	41 22 149		82), 0,25MM	X	.Adjusting washer	.Justerbricka	5
300	*75 97 701*		81), 0,30MM NLS - USE 4122156	X	.Adjusting washer	.Justerbricka	5
310	41 22 156		82), 0,30MM	X	.Adjusting washer	.Justerbricka	5
320	75 97 719		81), 0,35MM	X	.Adjusting washer	.Justerbricka	5
330	41 22 164		82), 0,35MM	X	.Adjusting washer	.Justerbricka	5
340	75 97 727		81), 0,40MM	X	.Adjusting washer	.Justerbricka	5
350	41 22 172		82), 0,40MM	X	.Adjusting washer	.Justerbricka	5
360	75 97 735		81), 0,70MM	X	.Adjusting washer	.Justerbricka	5
370	41 22 180		82), 0,70MM	X	.Adjusting washer	.Justerbricka	5
380	75 97 743		81), 1,00MM	X	.Adjusting washer	.Justerbricka	5
390	41 22 198		82), 1,00MM	X	.Adjusting washer	.Justerbricka	5
400	75 97 750		81), 1,20MM	X	.Adjusting washer	.Justerbricka	5
410	41 22 206		82), 1,20MM	X	.Adjusting washer	.Justerbricka	5
420	75 97 768		81), 1,50MM	X	.Adjusting washer	.Justerbricka	5
430	41 22 214		82), 1,50MM	X	.Adjusting washer	.Justerbricka	5
440	23		See page 4-059, 3-J12		.Pinion	.Pinjong	
450	87 19 098			1	.Bearing seat	.Lagersäte	5
460	75 58 448			1	.Roller bearing	.Rullager	3

78. Alternative to 8048324. Alternativ till 8048324.
79. Alternative to 8047813. Alternativ till 8047813.
81. Gear box --100468.
82. Gear box 100469--.
115. Gear box --137827
116. Gear box 137828--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I10
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I06

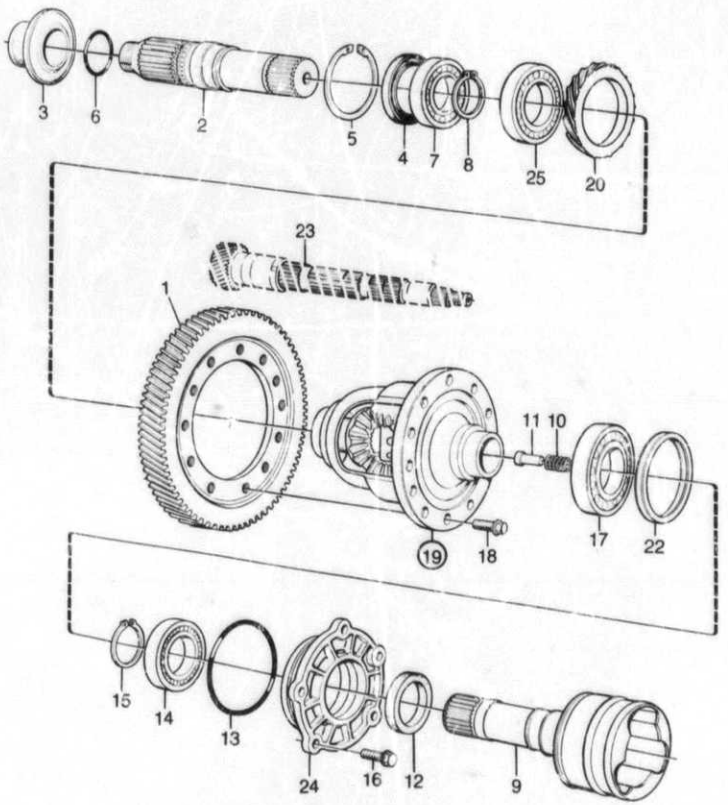

F5903 CAC90

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520								
0530		75 75 509		B202	X	.Sealing kit drive shaft	.Tätningssats drivaxel	3
0535				B234 I				
0540				See page 4-079, 3-K08				
0550		75 75 566		LH, B202	X	.Repair kit drive shaft	.Reparationssats drivaxel	5
0560				B234 I				
0570				See page 4-079, 3-K08				
0580		75 75 574		RH, B202	X	.Repair kit drive shaft	.Reparationssats drivaxel	
0590				B234 I				
0600				See page 4-079, 3-K08				
0610		74 96 094		B202	X	Gasket kit Stage 1-2	Packningsats Steg 1-2	3
0620				See page 4-081, 3-K10				
0630		71 96 102		B202	X	Gasket kit Stage 3	Packningsats Steg 3	3
0640				See page 4-081, 3-K10				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I08

Gear shift lever
113)

Växelspak
113)

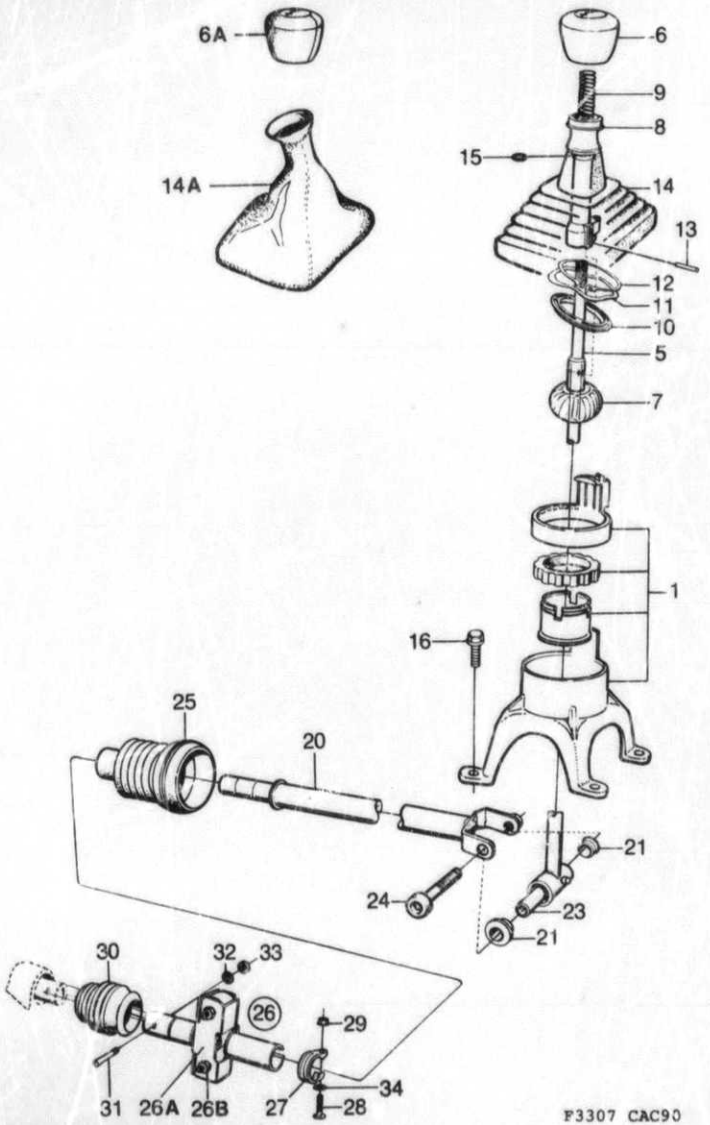

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 843			1	Gear shift housing	Växelspakshus	5
0020	5	75 59 859			1	Gear lever	Växelspak	5
0030	6	93 82 425	S		1	Knob	Knopp	5
0040	6A	75 98 659			1	Knob	Knopp	5
0050						leather	läder	
0060	7	75 99 988			1	Bail	Kula	5
0070	8	75 77 646	S		1	Companion flange	Medbringare	3
0080	9	93 79 637			1	Spring	Fjäder	5
0090	10	93 79 470			1	Bearing shell	Lagerskål	6
0100	11	93 79 488			1	Washer	Bricka	4
0110	12	73 98 308			1	Retaining ring	Spårring	5
0120	13	*79 56 238*		NLS - USE 7399678	1	Pin	Pinne	5
0130	14	75 99 442			1	Gaiter	Damask	6
0140	14	75 99 434		RHD	1	Gaiter	Damask	6
0150	14A	75 98 337			1	Gaiter	Damask	6
0160						leather	läder	
0170	15	79 77 424			1	O-ring	O-ring	2
0180	16	79 65 544			4	Screw	Skruv	5
0190	20	75 76 689		109)	1	Gear rod	Växelstång	5
0195	20	41 18 626		110)	1	Gear rod	Växelstång	5
0200	21	75 59 875			2	Bushing	Bussning	3
0210	23	75 77 729			1	Spacer	Distans	3
0220	24	*75 54 561*		NLS - USE 4118659, 7554553	1	Screw	Skruv	5
0220								
0230	25	75 99 400			1	Gaiter	Damask	5
0240	26	75 99 178			1	Joint	Knut	5
0250	26A	75 76 416			1	▪Joint	▪Knut	5
0260	26B	80 73 512			4	▪Lock nut	▪Låsmutter	3
0270	27	93 48 533			1	Clamp	Klammer	5
0280	28	75 41 907			1	Screw	Skruv	5
0290	29	79 75 501			1	Nut	Mutter	5
0300	30	40 29 575			1	Bellows	Bälg	5
0310	31	83 75 172			1	Pin	Pinne	3
0320	32	80 29 944			1	Washer	Bricka	5
0330	33	83 35 002			1	Nut	Mutter	5
0340	34	80 29 985			1	Washer	Bricka	5

109. Ch. --M1014862, --M2010225
110. Ch. M1014863--, M2010226--
113. Ch. --N1004566

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I10

Gear shift lever / *Växelspak*

114)

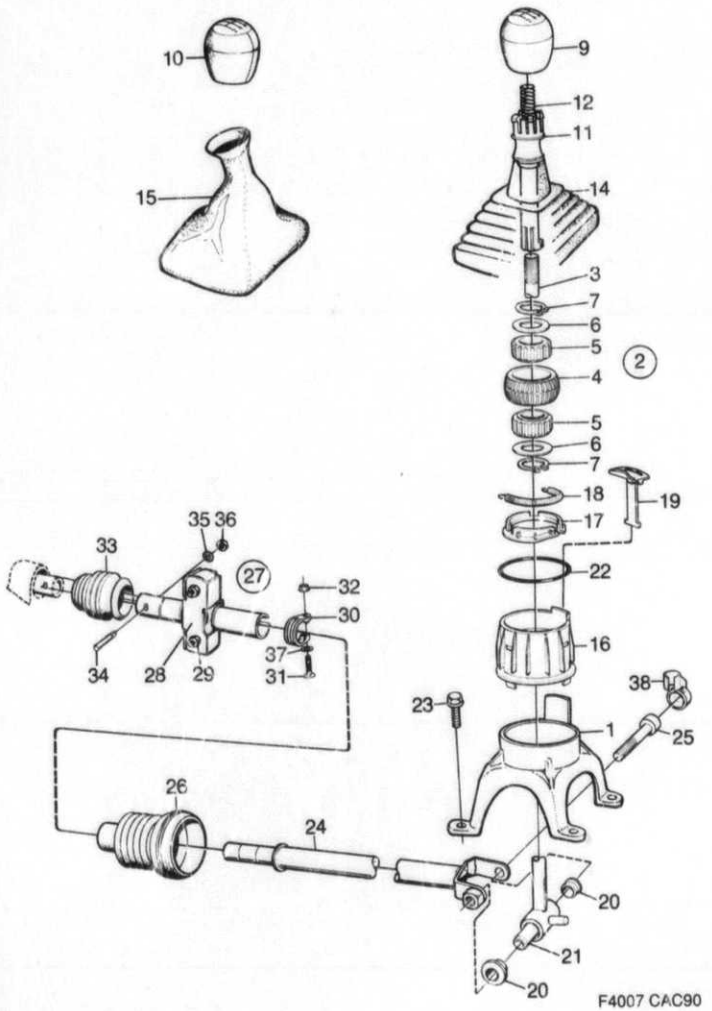

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 79 535			1	Gear shift housing	Växelspakshus	5
0011	2	43 84 434			1	Gear lever	Växelspak	5
0012	2	43 84 442		RHD	1	Gear lever	Växelspak	5
0013	2	43 84 459			1	Gear lever	Växelspak	5
0014						leather	läder	
0020	3	40 27 918			1	.Gear lever	.Växelspak	5
0030	4	40 27 876			1	..Ball	..Kula	5
0040	5	40 27 892			2	..Bushing	..Bussning	3
0050	6	41 21 588			2	..Washer	..Bricka	4
0060	7	80 47 706			2	..Retaining ring	..Spärring	5
0070	9	40 27 934			1	.Knob	.Knopp	9
0080	10	42 79 303			1	.Knob	.Knopp	9
0090						leather	läder	
0100	11	40 27 868			1	.Companion flange	.Medbringare	3
0105	12	40 27 959			1	.Spring	.Fjäder	5
0120	14	75 99 442			1	.Gaiter	.Damask	6
0130	14	75 99 434		RHD	1	.Gaiter	.Damask	6
0140	15	75 98 337			1	.Gaiter	.Damask	6
0150						leather	läder	
0160	16	40 27 835			1	.Ball socket	.Kulskål	6
0190	17	40 27 850			1	.Ball socket	.Kulskål	6
0200	18	40 27 942			1	.Spring	.Fjäder	5
0210	19	40 27 843			1	.Reverse lock	.Backspärr	5
0230	20	75 59 875			2	.Bushing	.Bussning	3
0240	21	75 77 729			1	.Spacer	.Distans	3
0242	22	79 67 912			1	O-ring	O-ring	2
0245	23	79 65 544			4	Screw	Skruv	5
0247	24	41 18 626			1	Gear rod	Växelstång	5
0250	25	75 54 553			1	Screw	Skruv	5
0260	26	75 99 400			1	Gaiter	Damask	5
0270	27	75 99 178			1	Joint	Knut	5
0280	28	75 76 416			1	.Joint	.Knut	5
0290	29	80 73 512			4	.Lock nut	.Låsmutter	3
0300	30	93 48 533			1	Clamp	Klemmer	5
0310	31	75 41 907			1	Screw	Skruv	5
0320	32	79 75 501			1	Nut	Mutter	5
0330	33	40 29 575			1	Bellows	Bälg	5
0340	34	83 75 172			1	Pin	Pinne	3
0350	35	80 29 944			1	Washer	Bricka	5
0360	36	83 35 002			1	Nut	Mutter	5
0370	37	80 29 985		-1992	1	Washer	Bricka	5
0375	37	91 66 372		1993-	1	Washer	Bricka	5
0380	38	41 18 659			1	Cover	Kåpa	3

114. Ch. N1004567--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly. Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I12

Drive shafts, outer universal joint

Drivaxlar, yttre knut

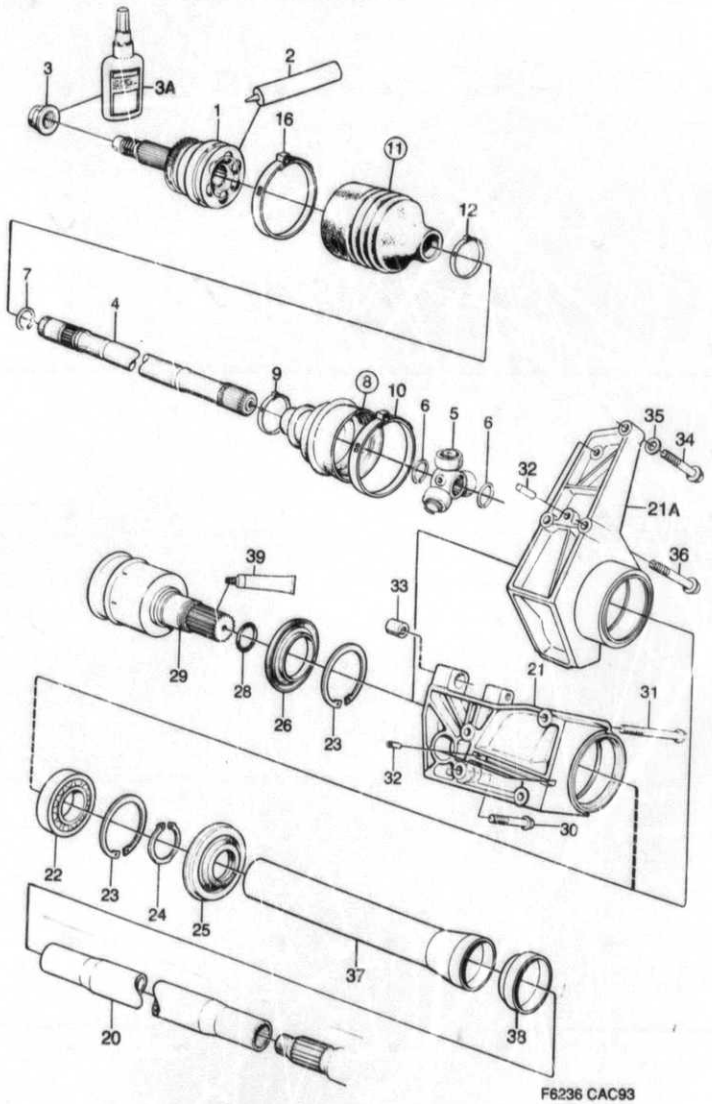

F6236 CAC93

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 52 905		7)	2	Universal joint	Drivknut	4
0020	1	40 00 642		7), ABS	2	Universal joint	Drivknut	4
0030	1	41 03 255		7), B234 TURBO	2	Universal joint	Drivknut	4
0040	1	41 03 263		7), B234 TURBO, ABS	2	Universal joint	Drivknut	4
0045	2	87 81 676		300 GR	X	Grease	Fett	
0050	3	89 65 360			2	Lock nut	Låsmutter	3
0060	3A	74 96 276		50 ML	X	Nut lock	Gängsäkring	5
0070						strong	stark	
0080						green	grön	
0090	4	89 52 970		7,146), B202, M	2	Drive shaft	Drivaxel	5
0100	4	41 06 126		7,147), B202, M	2	Drive shaft	Drivaxel	5
0110								
0120	4	89 58 241		7,146), B202, A, LH	1	Drive shaft	Drivaxel	5
0130	4	41 06 134		7,147), B202, A, LH	1	Drive shaft	Drivaxel	5
0140	4	89 52 970		7,146), B202, A, RH	1	Drive shaft	Drivaxel	5
0150	4	41 06 126		7,147), B202, A, RH	1	Drive shaft	Drivaxel	5
0160								
0170	4	89 52 970		7,146), B234 I, M, LH	1	Drive shaft	Drivaxel	5
0180	4	41 06 126		7,147), B234 I, M, LH	1	Drive shaft	Drivaxel	5
0190	4	89 58 241		7,146), B234 I, M, RH	1	Drive shaft	Drivaxel	5
0200	4	41 06 134		7,147), B234 I, M, RH	1	Drive shaft	Drivaxel	5
0210								
0220	4	89 58 241		7,146), B234 I, A	2	Drive shaft	Drivaxel	5
0230	4	41 06 134		7,147), B234 I, A	2	Drive shaft	Drivaxel	5
0240								
0250	4	41 05 227		7), B234 TURBO, M, LH	1	Drive shaft	Drivaxel	5
0260	4	41 05 235		7), B234 TURBO, M, RH	1	Drive shaft	Drivaxel	5
0270	4	41 05 235		7), B234 TURBO, A	2	Drive shaft	Drivaxel	5
0280	5	89 50 628		7)	2	Companion flange	Medbringare	3
0290	5	41 03 313		7), B234 TURBO	2	Companion flange	Medbringare	3
0300	6	89 50 636			2	Lock ring	Låsring	5
0310	7	89 21 520			2	Lock ring	Låsring	5
0320	8	89 93 636		See page 4-079, 3-K08	2	Bellows kit	Bälgsats	3
0330	8	89 93 701		B234 TURBO	2	Bellows kit	Bälgsats	3
0340				See page 4-079, 3-K08				
0350	9	41 95 822	S		1	.Clamp	.Klämma	3
0360	10	89 72 986	S		1	.Clamp	.Klämma	5
0370	10	41 03 214	S	B234 TURBO	1	.Clamp	.Klämma	3
0380	11	89 93 528		See page 4-075, 3-K04	2	Bellows kit	Bälgsats	2
0390	11	89 93 685		B234 TURBO	2	Bellows kit	Bälgsats	2
0400				See page 4-075, 3-K04				
0410	12	41 95 822	S	-1991	1	.Clamp	.Klämma	3
0420	12	44 25 534	S	1992-	1	.Clamp	.Klämma	3
0430	16	40 00 667	S		1	.Clamp	.Klämma	5
0440	16	41 07 108	S	B234 TURBO	1	.Clamp	.Klämma	3
0450	20	87 23 124		B202 M	1	Countershaft	Mellanaxel	5
0460	20	87 27 000		B234 M	1	Countershaft	Mellanaxel	5
0470	20	87 23 546		B202 A	1	Countershaft	Mellanaxel	5
0480	20	87 27 968		B234 A	1	Countershaft	Mellanaxel	5
0490	21	75 92 959		B202 M	1	Bearing bracket	Lagerbock	5
0500	21	75 92 942		B202 A	1	Bearing bracket	Lagerbock	5
0510	21A	*75 98 840*		152), B234 M NLS - USE 4387536	1	Bearing bracket	Lagerbock	5
0520	21A	43 87 536		153), B234 M	1	Bearing bracket	Lagerbock	5
0530	21A	*75 99 350*		154), B234 A NLS - USE 4387528	1	Bearing bracket	Lagerbock	5
0530								

7. Also available as exchange unit. Finns även som utbytesenhet.
146. Ch. --M1026825, --M2012513
147. Ch. M1026825--
152. Ch. --P1037152
153. Ch. P1037153--
154. Ch. --P1036904

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I14

Drive shafts, outer universal joint

Drivaxlar, yttre knut

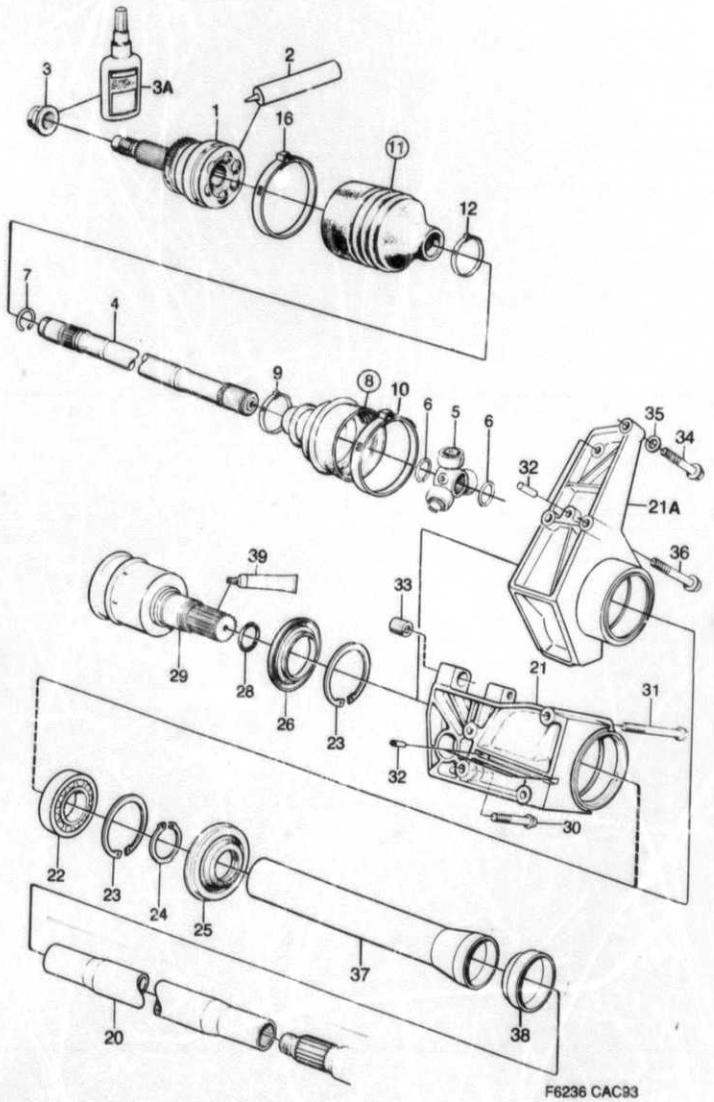

F6236 CAC93

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	21A	43 87 528		155), B234 A	1	Bearing bracket	Lagerbock	5
0550	22	93 81 450			1	Ball bearing	Kullager	3
0560	23	79 73 738			2	Retaining ring	Spårring	5
0570	24	93 78 332			1	Retaining ring	Spårring	5
0580	25	93 85 931		B202 M	1	Ring	Ring	5
0590	25	75 79 964		B202 A	1	Sealing ring	Tätningsring	5
0600	25	*75 96 497*		29), B234 I NLS - USE 4120523	1	Ring	Ring	5
0610	25	41 20 523		30), B234 I	1	Ring	Ring	5
0620	25	41 20 523		1991-, B234 TURBO	1	Ring	Ring	5
0630	26	93 87 044			1	Sealing ring	Tätningsring	5
0640	28	*79 71 997*		NLS - USE 7970361	1	O-ring	O-ring	2
0650	29	87 23 108		RH	1	Companion flange	Medbringare	3
0660	29	41 03 230		RH, B234 TURBO	1	Companion flange	Medbringare	3
0670	30	79 70 015			2	Screw	Skruv	5
0680	31	79 74 785			2	Screw	Skruv	5
0690	32	79 74 074			2	Cotter pin	Fjäderpinne	5
0700	33	75 93 080		B202	1	Bushing	Bussning	6
0710	34	79 82 291		B234	1	Screw	Skruv	5
0720	35	79 82 317		B234	1	Washer	Bricka	5
0730	36	79 82 309		B234	2	Screw	Skruv	5
0740	37	40 27 231		B234	1	Tube	Rör	5
0750	38	40 27 249		B234	1	Ring	Ring	5
0760	39	87 81 684		50 GR	X	Grease	Fett	

29. Ch. --L1004185. --L2003040.
30. Ch. L1004186--, L2003041--.
155. Ch. P1036905--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I16

Gear box assy
Automatic

Växellåda kpl
Automatisk

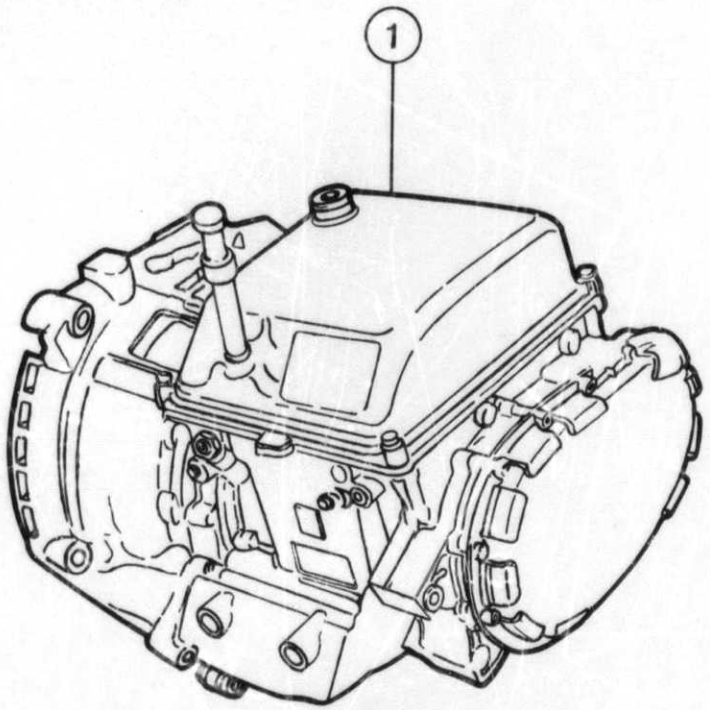

F1020 CAC90

U500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 99 657*		7,87), B202I	1	Gearbox	Växellåda	5
0020				MARKED: GA 64103 NLS - USE 4280343				
0030	1	42 80 343		7,88), B202I	1	Gearbox	Växellåda	5
0040				MARKED: GA 64107				
0070	1	*40 25 672*		7,93), B234I	1	Gearbox	Växellåda	5
0080				MARKED: GA 64104 NLS - USE 4280152				
0090	1	42 80 152		7,94), B234I	1	Gearbox	Växellåda	5
0090				MARKED: GA 64106				
0100	1	*41 20 887*		7,89), B234I, US, CA	1	Gearbox	Växellåda	5
0110				MARKED: GA 64301 NLS - USE 4280194				
0140	1	42 80 194		7,90), B234I,US,CA	1	Gearbox	Växellåda	5
0150				MARKED: GA 64302				
0150	1	*75 99 665*		7,95), B202 TURBO	1	Gearbox	Växellåda	5
0160				MARKED: GA 74303 NLS - USE 4280350				
0170	1	42 80 350		7,96), B202 TURBO	1	Gearbox	Växellåda	5
0200				MARKED: GA 74307				
0210	1	*40 25 680*		7,91), B234 TURBO	1	Gearbox	Växellåda	5
0220				MARKED: GA 74304 NLS - USE 4281929				
0220	1	*42 80 160*		7,92)-1992, B234 TURBO	1	Gearbox	Växellåda	5
0230				MARKED: GA 74306 NLS - USE 4281929				
0240	1	*43 84 426*		7),1992, B234 TURBO, ASR	1	Gearbox	Växellåda	5
0290				MARKED: GA 74308 NLS - USE 4281937				
0300	1	42 81 929		7), 1993-, B234 TURBO	1	Gearbox	Växellåda	5
0310				MARKED: GA 74309				
0310	1	42 81 937		7),1993, B234 TURBO, ASR	1	Gearbox	Växellåda	5
0320				MARKED: GA 74310				

7. Also available as exchange unit. Finns även som utbytesenhet.
87. CH. --M1016173, --M2010771
88. Ch. M1016174--, M2010772--
89. Ch. --M1016009, --M2010644
90. Ch. M1016010--, M2010645--
91. Ch. --M1016246, --M2010810
92. Ch. M1016247--, M2010811--
93. Ch. --M1016380, --M2010901
94. Ch. M1016381--, M2010902--
95. Ch. --M1018935
96. Ch. M1018936--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K06

3-I18

Converter housing, converter

Momentomvandlarhus, momentomvandlare

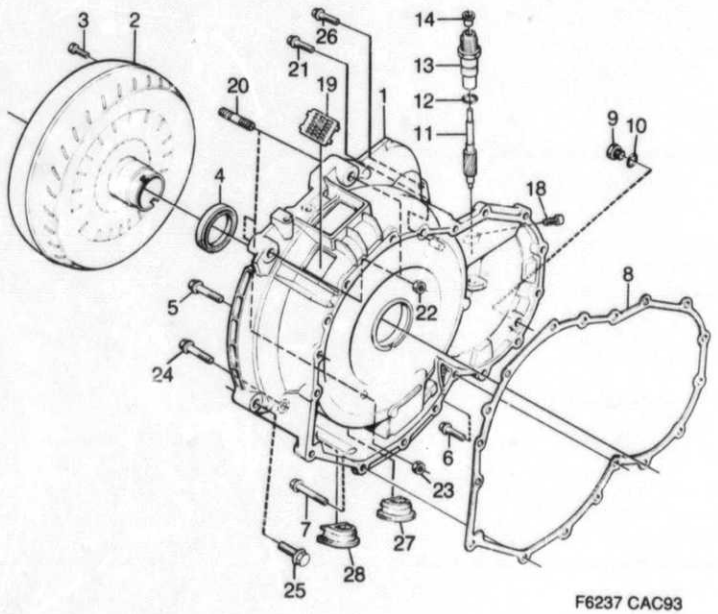

F6237 CAC93

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	41 19 376			1	. Converter shell	. Momentomvandlarhus	5
0040	2	75 92 181			1	. Torque converter	. Momentomvandlare	9
0060	3	*75 53 449*		1990 NLS - USE 4121760	3	. Screw	. Skruv	5
0070	3	41 21 760		1991-	3	. Screw	. Skruv	5
0090	4	*75 58 406*		GA 64103, 64104, 64301, 74303, 74304 NLS - USE 4280582	1	. Shaft seal	. Axeltätning	5
0100								
0110	4	42 80 582		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	. Shaft seal	. Axeltätning	5
0120								
0130								
0150	5	75 58 497			6	. Hexagon screw	. Sexkantsskruv	5
0160	6	80 83 974			1	. Screw	. Skruv	5
0170	7	75 72 159			11	. Hexagon screw	. Sexkantsskruv	5
0180	8	75 70 542			1	. Gasket	. Packning	3
0190	9	75 58 505			1	. Plug	. Plugg	5
0200	10	75 72 175			1	. Sealing ring	. Tätningsring	3
0210	11	87 27 240			1	. Gear	. Kugghjul	5
0220	12	75 95 325	S		1	. O-ring	. O-ring	5
0230	13	87 27 828			1	. Sleeve	. Hylsa	5
0240	14	87 24 874	S		1	. Seal	. Tätning	4
0250	18	87 24 882			1	. Screw	. Skruv	5
0260	19	75 76 911			1	. Protecting casing	. Skyddskåpa	5
0270	20	75 53 688		B202	3	Stud	Pinnskruv	5
0280	20	75 53 688		B234	2	Stud	Pinnskruv	5
0290	21	79 74 801			1	Screw	Skruv	5
0300	22	79 76 962		-1991	2	Nut	Mutter	5
0310	22	81 51 342		1992-	2	Flange nut	Flänsmutter	5
0320	23	79 76 962		-1991, B202	1	Nut	Mutter	5
0330	23	81 51 342		1992-, B202	1	Flange nut	Flänsmutter	5
0340	24	79 74 819		B234	1	Screw	Skruv	5
0350	25	79 74 819		B202	1	Screw	Skruv	5
0370	26	79 74 793			1	Screw	Skruv	5
0380	27	41 19 640			2	Plug	Plugg	5
0390	28	41 19 657			2	Plug	Plugg	5
0420		74 96 094		B202	X	Gasket kit	Packningsats	3
0430				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
0440		74 96 102		B202	X	Gasket kit	Packningsats	3
0450				See page 4-081, 3-K10		Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I20

Gear box case, cover

Växellådshus, lock

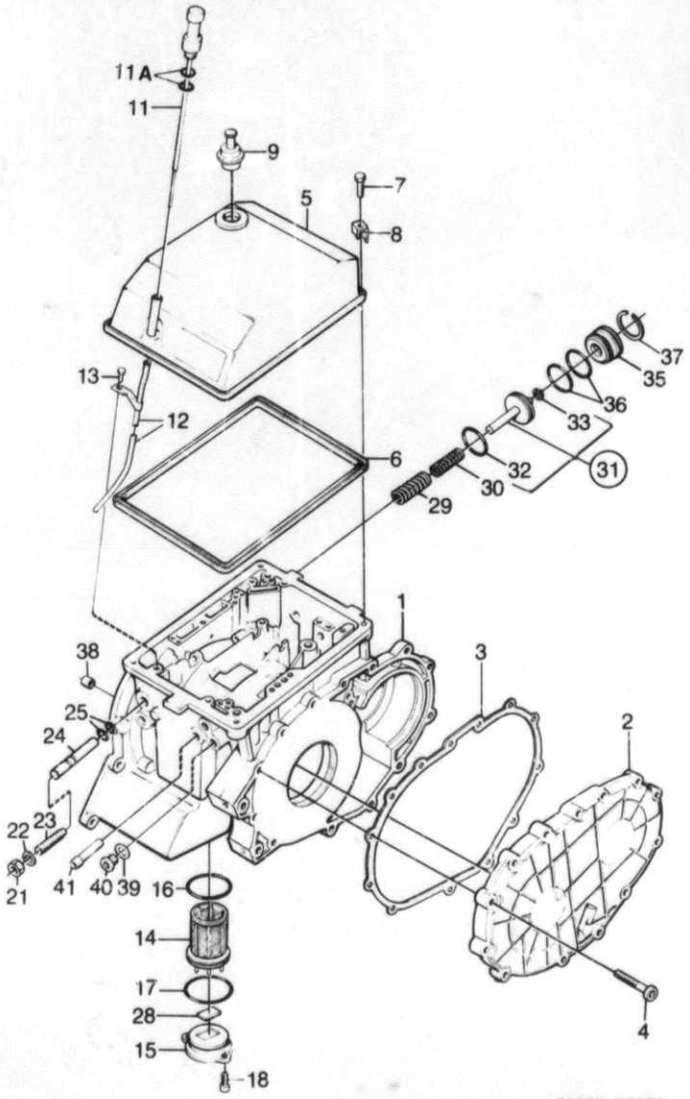

F1022 CAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	*40 25 086*		59), TURBO NLS - USE 4280038	1	.Gearbox housing	.Växellådshus	6
0030	1	*41 22 065*		60,111), TURBO NLS - USE 4280038	1	.Gearbox housing	.Växellådshus	6
0035	1	42 80 038		112), TURBO	1	.Gearbox housing	.Växellådshus	6
0040	1	*75 99 798*		59), I NLS - USE 4280046	1	.Gearbox housing	.Växellådshus	6
0050	1	41 22 057		60,111), I	1	.Gearbox housing	.Växellådshus	6
0055	1	42 80 046		112), I	1	.Gearbox housing	.Växellådshus	6
0060	2	75 97 784			1	.Cover	.Lock	5
0070	3	75 56 228	S	127)	1	.Gasket	.Packning	3
0075	3	42 80 681	S	128)	1	.Gasket	.Packning	3
0080	4	75 57 754			13	.Screw	.Skruv	5
0090	5	75 74 031		123)	1	.Sump	.Oljesump	6
0095	5	41 19 525		124)	1	.Sump	.Oljesump	6
0100	6	75 92 330	S		1	.Gasket	.Packning	2
0110	7	75 57 895		21)	4	.Screw	.Skruv	5
0120	7	75 93 759		22)	4	.Screw	.Skruv	5
0130	8	75 58 828		21)	4	.Lock plate	.Låsplåt	5
0140	8	*75 93 742*		22,37) NLS - USE 4120671	4	.Lock plate	.Låsplåt	5
0150	8	41 20 671		38)	4	.Holder	.Hållare	5
0160	9	75 97 222			1	.Air vent valve	.Avluftningsventil	5
0170	11	40 26 449			1	.Dipstick	.Mätsticka	5
0180	11A	75 94 880			1	..O-ring	..O-ring	3
0190	12	75 71 334		131)	1	.Tube	.Rör	5
0195	12	42 79 931		132)	1	.Tube	.Rör	5
0200	13	75 57 887			1	.Screw	.Skruv	5
0210	14	75 99 525	S		1	.Filter	.Filter	3
0220	15	75 77 562			1	.Cover	.Lock	5
0230	16	75 94 187			1	.O-ring	.O-ring	3
0240	17	75 97 776			1	.O-ring	.O-ring	3
0250	18	75 57 804		15)	3	.Screw	.Skruv	5
0260	18	40 26 902		16)	3	.Screw	.Skruv	5
0270	21	40 26 753	S		1	.Nut	.Mutter	5
0280	22	79 33 872	S		1	.Washer	.Bricka	5
0290	23	75 54 934	S		1	.Adjustment screw	.Justerskruv	5
0300	24	75 54 926	S	47)	1	.Bolt	.Bult	5
0310	24	41 19 061	S	48)	1	.Bolt	.Bult	5
0320	25	75 94 179			2	.O-ring	.O-ring	3
0330	28	75 76 788			1	.Magnet	.Magnet	3
0340	29	75 58 232			1	.Compression spring	.Tryckfjäder	5
0350	30	75 58 240			1	.Compression spring	.Tryckfjäder	5
0360	31	75 76 937			1	.Piston	.Kolv	5
0370	32	75 52 250			1	..O-ring	..O-ring	5
0380	33	75 59 008			1	..Retaining ring	..Spårring	5

15. Gear box --49497.
16. Gear box 49498--.
21. Gear box --54381.
22. Gear box 54382--.
37. Gear box --68319.
38. Gear box 68320--.
47. Gear box --63015.
48. Gear box 63016--.
59. Gear box --88352.
60. Gear box 88353--.
111. Gear box --132551
112. Gear box 132552--
123. Gear box --63348
124. Gear box 63349--
127. Gear box --144832
128. Gear box 144833--
131. Gear box --141857
132. Gear box 141858--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I22

Gear box case, cover

Växellådshus, lock

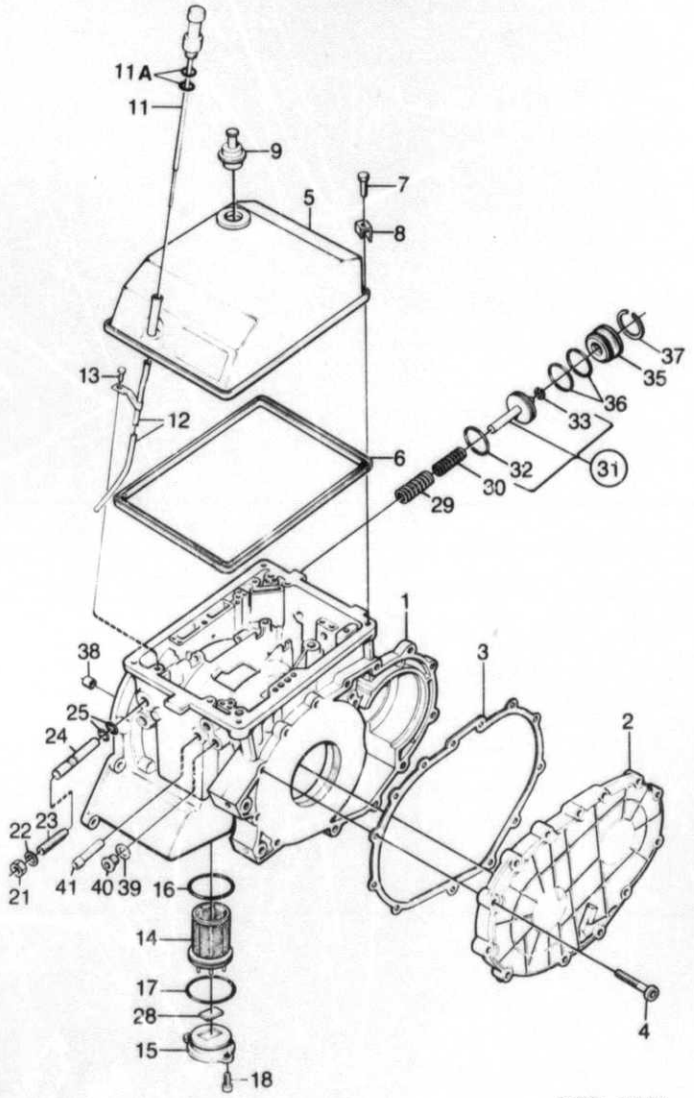

F1022 CAC90

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	35	75 54 967			1	.Cover	.Lock	5
0400	36	75 56 996			2	.O-ring	.O-ring	5
0410	37	75 57 093			1	.Lock ring	.Låsring	5
0420	38	75 73 819			1	.Sleeve	.Hylsa	5
0430	39	75 58 356			2	.Sealing ring	.Tätningsring	3
0440	40	75 58 521			2	.Plug	.Plugg	5
0450	41	75 71 490			1	.Tube	.Rör	5
0460								
0470		75 75 525		80)	X	Repair kit	Reparationssats	4
0480				See page 4-079, 3-K08				
0490		74 96 094		B202	X	Gasket kit	Packningsats	3
0500				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
0510		74 96 102		B202	X	Gasket kit	Packningsats	3
0520				See page 4-081, 3-K10		Stage 3	Steg 3	

80. Filter insert Filterinsats

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-I24

Gears, pinion
Part 1

Drev, pinjong
Del 1

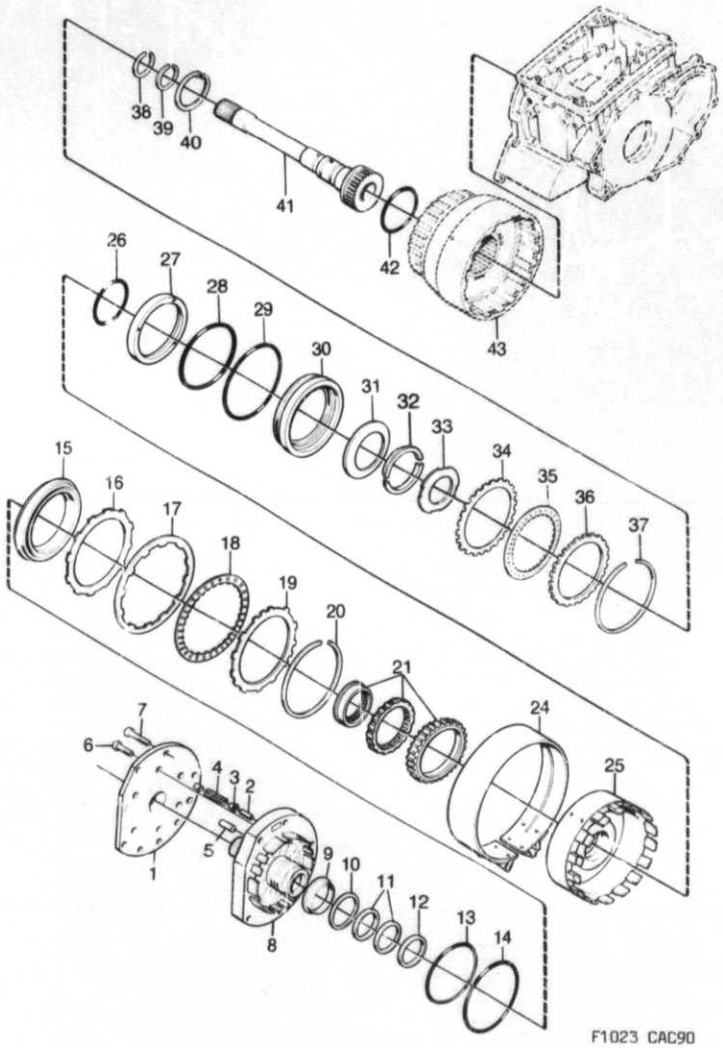

F1023 CAC90

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 96 935			1	.Pump	.Pump	5
0030	2	75 56 319			1	.Valve	.Ventil	9
0040	3	75 56 327		GA 64103, 64104, 64301, 74303, 74304	1	.Spring guide	.Fjäderstyrning	5
0041								
0045	3	42 80 418		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Spring guide	.Fjäderstyrning	5
0046								
0047								
0050	4	75 57 986			1	.Compression spring	.Tryckfjäder	5
0060	5	40 26 639			2	.Guide pin	.Styrstift	5
0070	6	75 57 747			6	.Screw	.Skruv	5
0080	7	75 57 754			8	.Screw	.Skruv	5
0090	8	40 26 407		49),GA 64103,74303,64104	1	.Intermediate section	.Mellanstycke	5
0100	8	*41 19 384*		50),GA 64103,74303,64104 NLS - USE 4280061	1	.Intermediate section	.Mellanstycke	5
0100								
0110	8	*41 19 384*		GA 64301, 74304 NLS - USE 4280061	1	.Intermediate section	.Mellanstycke	5
0115	8	42 80 061		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Intermediate section	.Mellanstycke	5
0116								
0117								
0120	9	75 52 896			1	.Angle washer	.Vinkelbricka	5
0130	10	*75 57 275*		55), 1,00MM, 2.0 NLS - USE 4025979	X	.Washer	.Bricka	5
0130								
0140	10	40 25 979		56), 1,00MM, 2.0	X	.Washer	.Bricka	5
0150	10	40 25 979		1,00MM, 2.3	X	.Washer	.Bricka	5
0160	10	*75 57 267*		55), 1,20MM, 2.0 NLS - USE 4025961	X	.Washer	.Bricka	5
0160								
0170	10	40 25 961		56), 1,20MM, 2.0	X	.Washer	.Bricka	5
0180	10	40 25 961		1,20MM, 2.3	X	.Washer	.Bricka	5
0190	10	*75 57 259*		55), 1,40MM, 2.0 NLS - USE 4025953	X	.Washer	.Bricka	5
0190								
0200	10	40 25 953		56), 1,40MM, 2.0	X	.Washer	.Bricka	5
0210	10	40 25 953		1,40MM, 2.3	X	.Washer	.Bricka	5
0220	10	*75 57 242*		55), 1,60MM, 2.0 NLS - USE 4025946	X	.Washer	.Bricka	5
0220								
0230	10	40 25 946		56), 1,60MM, 2.0	X	.Washer	.Bricka	5
0240	10	40 25 946		1,60MM, 2.3	X	.Washer	.Bricka	5
0250	10	*75 57 234*		55), 1,80MM, 2.0 NLS - USE 4025938	X	.Washer	.Bricka	5
0250								
0260	10	40 25 938		56), 1,80MM, 2.0	X	.Washer	.Bricka	5
0270	10	40 25 938		1,80MM, 2.3	X	.Washer	.Bricka	5
0280	10	*75 57 226*		55), 2,00MM, 2.0 NLS - USE 4025920	X	.Washer	.Bricka	5
0280								
0290	10	40 25 920		56), 2,00MM, 2.0	X	.Washer	.Bricka	5
0300	10	40 25 920		2,00MM, 2.3	X	.Washer	.Bricka	5
0310	10	75 57 218		55), 2,20MM, 2.0	X	.Washer	.Bricka	5
0320	10	40 25 912		56), 2,20MM, 2.0	X	.Washer	.Bricka	5
0330	10	40 25 912		2,20MM, 2.3	X	.Washer	.Bricka	5
0340	10	*75 57 200*		55), 2,40MM, 2.0 NLS - USE 4025904	X	.Washer	.Bricka	5
0340								
0350	10	40 25 904		56), 2,40MM, 2.0	X	.Washer	.Bricka	5
0360	10	40 25 904		2,40MM, 2.3	X	.Washer	.Bricka	5
0370	10	75 57 192		55), 2,60MM, 2.0	X	.Washer	.Bricka	5
0380	10	40 25 896		56), 2,60MM, 2.0	X	.Washer	.Bricka	5
0390	10	40 25 896		2,60MM, 2.3	X	.Washer	.Bricka	5
0400	10	*75 57 184*		55), 2,80MM, 2.0 NLS - USE 4025888	X	.Washer	.Bricka	5
0400								
0410	10	40 25 888		56), 2,80MM, 2.0	X	.Washer	.Bricka	5
0420	10	40 25 888		2,80MM, 2.3	X	.Washer	.Bricka	5


49. Gear box --66490.
50. Gear box 66491--.
55. Gear box --53126.
56. Gear box 53127--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

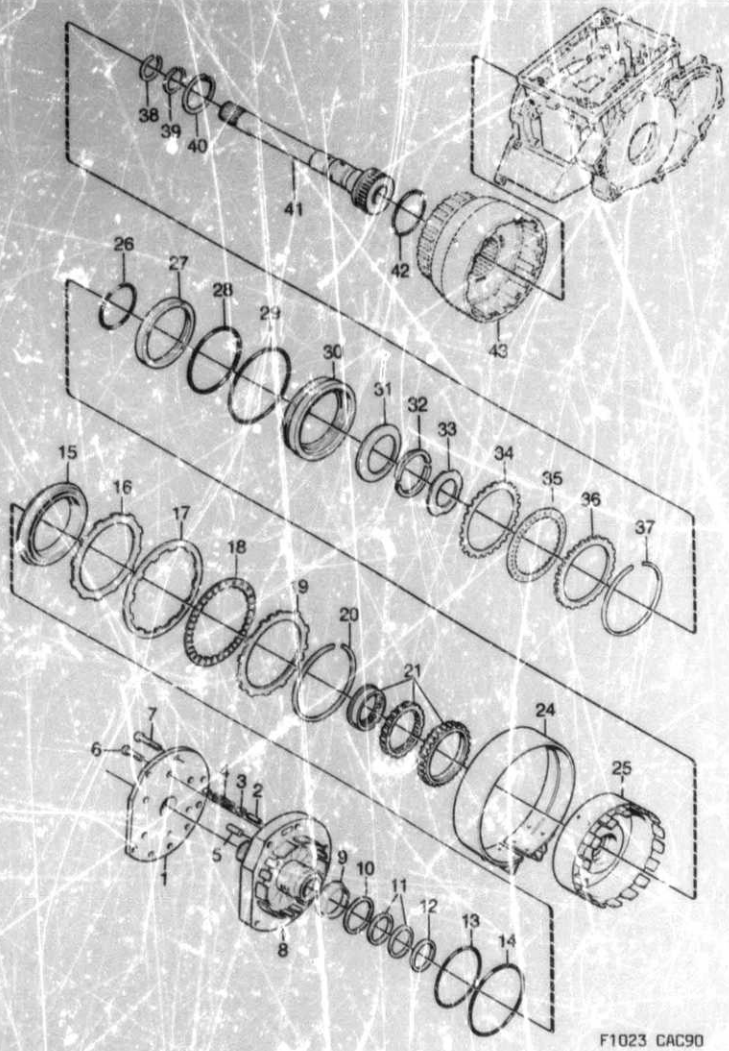

Gear box, automatic

3-J02

Gears, pinion

Part 1

Växellåda, automatisk

Drev, pinjong

Del 1

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	10	*75 57 176*		55), 3,00MM, 2.0 NLS - USE 4025870	X	.Washer	.Bricka	5
0430								
0440	10	40 25 870		56), 3,00MM, 2.0	X	.Washer	.Bricka	5
0450	10	40 25 870		3,00MM, 2.3	X	.Washer	.Bricka	5
0460	10	*75 57 168*		55), 3,20MM, 2.0 NLS - USE 4025862	X	.Washer	.Bricka	5
0460								
0470	10	40 25 862		56), 3,20MM, 2.0	X	.Washer	.Bricka	5
0480	10	40 25 862		3,20MM, 2.3	X	.Washer	.Bricka	5
0490	10	*75 57 150*		55), 3,40MM, 2.0 NLS - USE 4025854	X	.Washer	.Bricka	5
0493								
0500	10	40 25 854		56), 3,40MM, 2.0	X	.Washer	.Bricka	5
0510	10	40 25 854		3,40MM, 2.3	X	.Washer	.Bricka	5
0520	10	*75 57 143*		55), 3,60MM, 2.0 NLS - USE 4025847	X	.Washer	.Bricka	5
0520								
0530	10	40 25 847		56), 3,60MM, 2.0	X	.Washer	.Bricka	5
0540	10	40 25 847		3,60MM, 2.3	X	.Washer	.Bricka	5
0550	11	75 76 077			2	.Piston ring	.Kolvring	5
0560	12	*75 78 271*		1990 NLS - USE 4120945	1	.Piston ring	.Kolvring	5
0570	12	41 20 945		1991-	1	.Piston ring	.Kolvring	5
0580	13	75 74 833			1	.O-ring	.O-ring	5
0590	14	75 52 151			1	.O-ring	.O-ring	5
0600	15	75 74 841			1	.Piston	.Kolv	5
0610	16	75 53 084			3	.Clutch disc	.Lamell	5
0620	17	75 52 961			1	.Spring disc	.Fjädertallrik	5
0630	18	75 70 740			3	.Clutch disc	.Lamell	5
0640	18	41 22 016		B234 TURBO	3	.Clutch disc	.Lamell	5
0650	19	75 92 249			1	.Clutch disc	.Lamell	5
0660	20	75 72 639		0,90MM	X	.Lock ring	.Låsring	5
0670	20	75 72 621		1,10MM	X	.Lock ring	.Låsring	5
0680	20	75 72 613		1,30MM	X	.Lock ring	.Låsring	5
0690	20	75 58 786		1,50MM	X	.Lock ring	.Låsring	5
0700	20	75 72 605		1,70MM	X	.Lock ring	.Låsring	5
0710	20	75 74 890		1,90MM	X	.Lock ring	.Låsring	5
0720	20	75 95 895		2,10MM	X	.Lock ring	.Låsring	5
0730	20	75 95 903		2,30MM	X	.Lock ring	.Låsring	5
0740	20	75 95 887		2,50MM	X	.Lock ring	.Låsring	5
0750	21	75 97 610		1990, GA 64103, 74303	1	.Free wheel	.Frihjul	5
0760	21	40 26 209		1990, GA 64104, 64301, 74304	1	.Free wheel	.Frihjul	5
0770								
0780	21	40 26 209		1991-	1	.Free wheel	.Frihjul	5
0790	24	40 26 860			1	.Brake lining	.Bromsband	5
0810	24	*75 52 979*		49), GA 64104 NLS - USE 4026860	1	.Brake lining	.Bromsband	5
0810								
0820	24	40 26 860		50), GA 64104	1	.Brake lining	.Bromsband	5
0830	25	*75 78 743*		51) NLS - USE 4280426	1	.Cylinder	.Cylinder	5
0840	25	*41 22 024*		52,105) NLS - USE 4280426	1	.Cylinder	.Cylinder	5
0840								
0845	25	42 80 426		106)	1	.Cylinder	.Cylinder	5
0850	26	75 94 161			1	.O-ring	.O-ring	5
0860	27	75 70 351			1	.Spacer	.Mellanlägg	5
0870	28	75 52 268			1	.O-ring	.O-ring	5
0880	29	75 52 151			1	.O-ring	.O-ring	5
0890	30	75 73 280			1	.Piston	.Kolv	5
0900	30	75 54 868		TURBO	1	.Piston	.Kolv	5
0610	31	75 52 912			1	.Spring disc	.Fjädertallrik	5

49. Gear box --66490.
50. Gear box 66491--.
51. Gear box --67509.
52. Gear box 67510--.
55. Gear box --53126.
56. Gear box 53127--.
105. Gear box --105528
106. Gear box 105529--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H05
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J04

Gears, pinion
Part 1

Drev, pinjong
Del 1

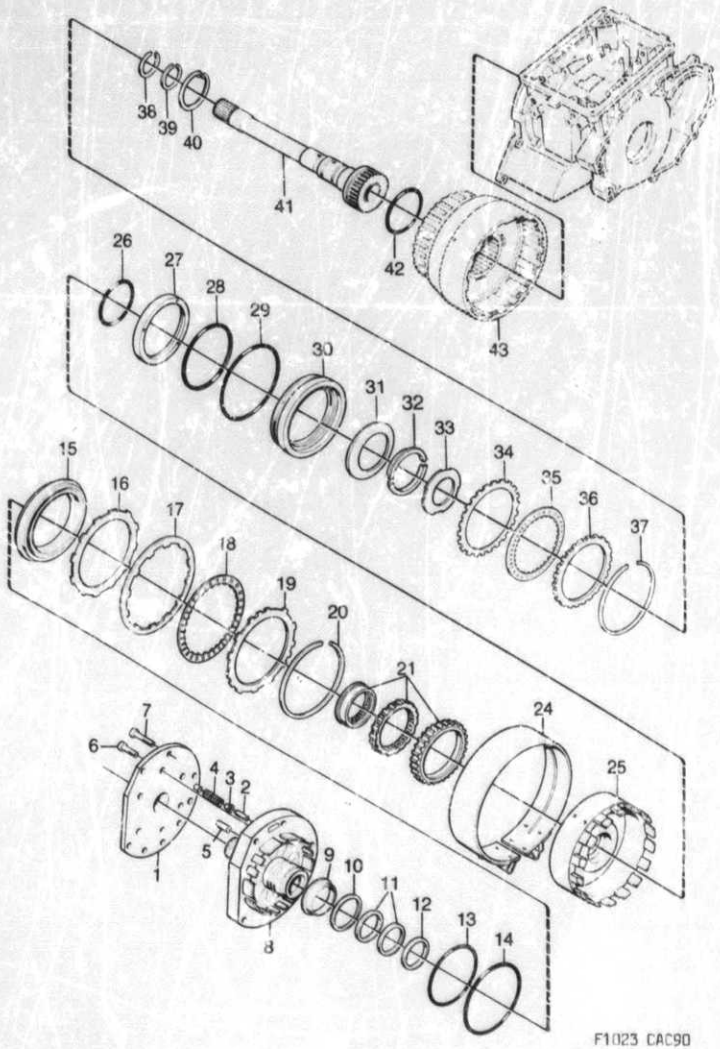


0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920	32	75 54 900			1	.Stop ring	.Stoppring	5
0930	33	75 52 904			1	.Thrust washer	.Tryckbricka	5
0940	34	75 53 068		I	2	.Clutch disc	.Lamell	5
0950	34	75 53 068		TURBO	3	.Clutch disc	.Lamell	5
0960	35	75 72 704		I	2	.Clutch disc	.Lamell	5
0970	35	75 72 704		TURBO	3	.Clutch disc	.Lamell	5
0980	36	75 53 092			1	.Clutch disc	.Lamell	5
0990	37	75 53 217			1	.Lock ring	.Låsring	5
1000	38	75 75 632			1	.Piston ring	.Kolvring	5
1010	39	75 75 624		GA 64103, 64104, 64301, 74303, 74304	1	.Piston ring	.Kolvring	5
1011								
1015	39	42 80 111		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Piston ring	.Kolvring	5
1016								
1017								
1020	40	75 59 024			1	.Stop ring	.Stoppring	5
1030	41	75 70 526		GA 64103, 64104, 64301, 74303, 74304	1	.Turbine shaft	.Turbinaxel	5
1031								
1035	41	42 80 053		GA 64106, 64107, 64302, 74306,74307,74308,74309 74310	1	.Turbine shaft	.Turbinaxel	5
1036								
1037								
1040	42	75 94 153			1	.O-ring	.O-ring	5
1050	43			See page 4-053, 3-J06		.Piston	.Kolv	
1060		74 96 052		B202	X	Disc kit	Lamellsats	2
1070				See page 4-031, 3-K10		Clutch "B"	Koppling "B"	
1080		74 96 060		B202	X	Disc kit	Lamellsats	2
1090				See page 4-081, 3-K10		Clutch "C"	Koppling "C"	
1100		74 96 094		B202	X	Gasket kit	Packningsats	3
1110				See page 4-031, 3-K10		Stage 1-2	Steg 1-2	
1120		74 96 102		B202	X	Gasket kit	Packningsats	3
1130				See page 4-081, 3-K10		Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

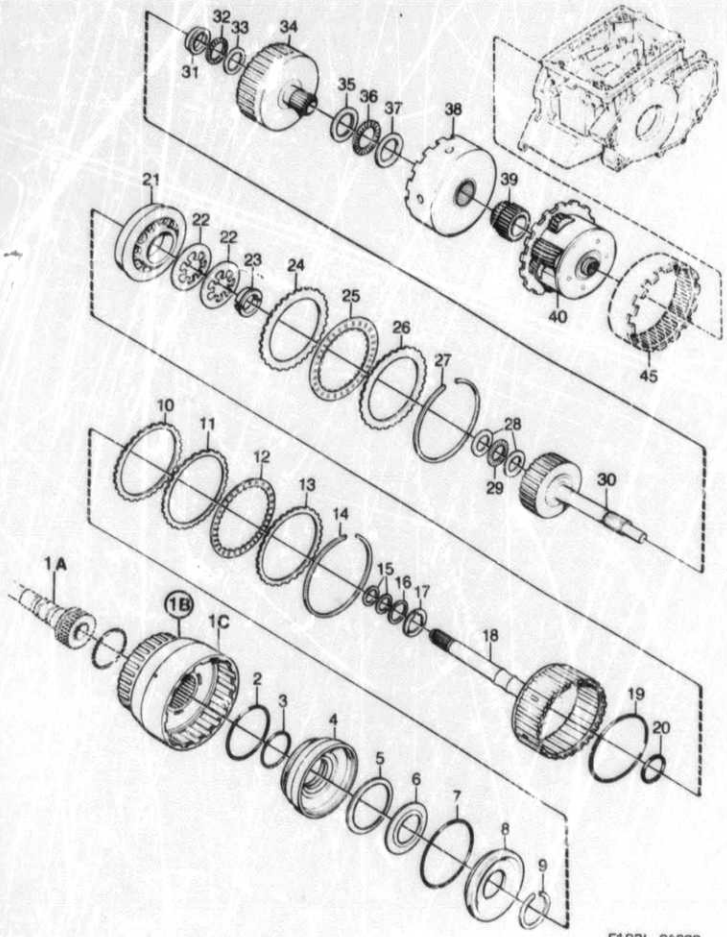

Gear box, automatic

3-J06

Gears, pinion
Part 2

Växellåda, automatisk

Drev, pinjong
Del 2

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1A			See page 4-047, 3-I24		.Cylinder	.Cylinder	
0030	1B	41 19 137		GA 64103, 64104, 64301,	1	.Cylinder	.Cylinder	5
0040				64106,64107,64302,74303				
0050	1B	41 20 861		GA 74304, 74306, 74307	1	.Cylinder	.Cylinder	5
0060				74308, 74309, 74310				
0070	1C	75 77 075			1	..Cylinder	..Cylinder	5
0080	2	*75 52 185*		13) NLS - USE 4280558	1	..O-ring	..O-ring	5
0090	2	40 26 936		14,119)	1	..O-ring	..O-ring	5
0100	2	42 80 558		120)	1	..O-ring	..O-ring	5
0110	3	75 52 243			1	..O-ring	..O-ring	5
0120	4	75 56 061		1990,GA64103,74303,74304	1	..Piston	..Kolv	5
0130	4	41 19 160		1991-, GA 64103, 74303,	1	..Piston	..Kolv	5
0140				74304,74306,74307,74308,				
0150				74309, 74310				
0160	4	41 19 152		GA 64104, 64301, 64106,	1	..Piston	..Kolv	5
0170				64107, 64302				
0180	5	75 77 588		GA 64103, 74303	1	..Spring disc	..Fjädertallrik	5
0190	5	75 96 901		GA 64104, 64301, 74304,	1	..Spring disc	..Fjädertallrik	5
0200				64106,64107,64302,74306,				
0210				74307,74308,74309,74310				
0220	6	75 52 920		GA 64103, 74303	1	..Spring disc	..Fjädertallrik	5
0230	7	75 52 193			1	..O-ring	..O-ring	5
0240	8	75 77 596		GA 64103, 74303	1	..Oil dam	..Balanskolv	5
0250	8	75 56 053		GA 64104, 64301, 74304,	1	..Oil dam	..Balanskolv	5
0260				64106,64107,64302,74306,				
0270				74307,74308,74309,74310				
0280	9	75 57 440			1	..Lock ring	..Låsring	5
0290	10	75 53 050			1	..Clutch disc	..Lamell	5
0300	11	75 53 068			5	..Clutch disc	..Lamell	5
0310	12	75 52 292			5	..Clutch disc	..Lamell	5
0320	13	75 53 092			1	..Clutch disc	..Lamell	5
0330	14	75 53 183		1,00MM	X	..Lock ring	..Låsring	5
0340	14	75 53 191		1,20MM	X	..Lock ring	..Låsring	5
0350	14	75 53 209		1,40MM	X	..Lock ring	..Låsring	5
0360	14	75 53 217		1,60MM	X	..Lock ring	..Låsring	5
0370	14	75 53 225		1,80MM	X	..Lock ring	..Låsring	5
0380	14	75 53 233		2,00MM	X	..Lock ring	..Låsring	5
0390	14	75 53 241		2,20MM	X	..Lock ring	..Låsring	5
0400	14	75 53 258		2,40MM	X	..Lock ring	..Låsring	5
0410	14	75 53 266		2,60MM	X	..Lock ring	..Låsring	5
0420	14	75 53 274		2,80MM	X	..Lock ring	..Låsring	5
0430	15	75 57 457			2	.Piston ring	.Kolvring	5
0440	16	75 74 817		GA 64103, 64104, 64301,	1	.Piston ring	.Kolvring	5
0450				74303, 74304				
0460	16	42 80 095		GA 64106, 64107, 64302,	1	.Piston ring	.Kolvring	5
0470				74306,74307,74308,74309,				
0480				74310				
0490	17	*75 70 146*		45) NLS - USE 4122800	1	.Thrust washer	.Tryckbricka	5
0500	17	*41 20 978*		46,83) NLS - USE 4122800	1	.Thrust washer	.Tryckbricka	5
0510	17	41 22 800		84)	1	.Thrust washer	.Tryckbricka	5
0520	17	42 80 103		GA 64106, 64107, 64302,	1	.Thrust washer	.Tryckbricka	5
0530				74306,74307,74308,74309,				
0540				74310				
0550	18	75 72 530		GA 64103, 74303	1	.Motor shaft	.Motoraxel	5

13. Gear box --54433.
14. Gear box 54434--.
45. Gear box --68319.
46. Gear box 68320--.
83. Gear box --112372
84. Gear box 112373--
119. Gear box --139155
120. Gear box 139156--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H0E
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J08

Gears, pinion
Part 2

Drev, pinjong
Del 2

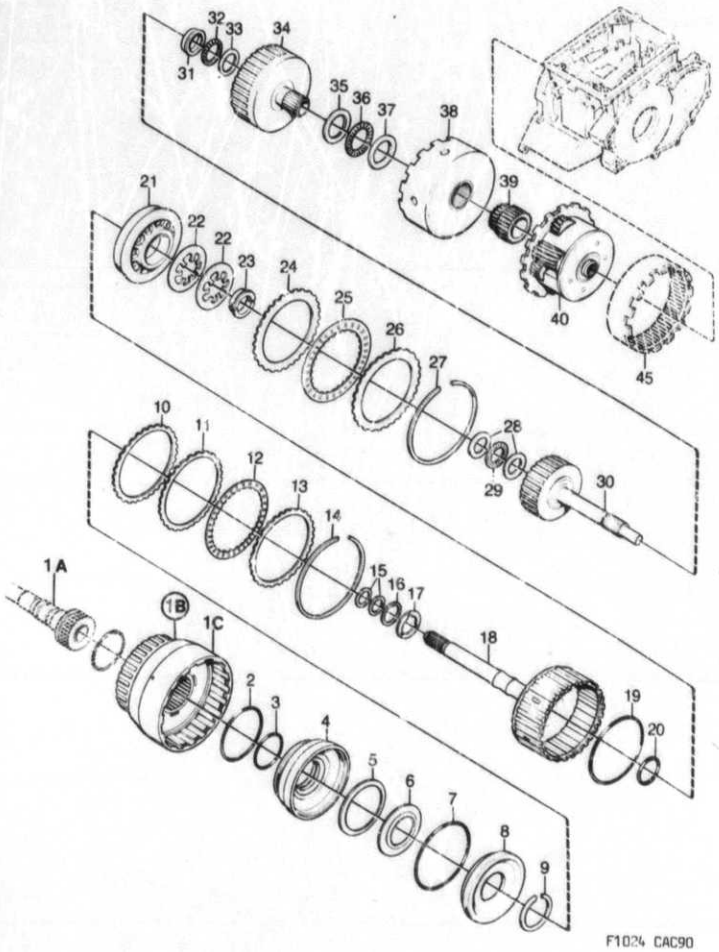

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
18	40 25 383		GA 64104, 64301	1	.Motor shaft	.Motoraxel	5
18	41 22 818		GA 74304	1	.Motor shaft	.Motoraxel	5
18	42 80 020		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Motor shaft	.Motoraxel	5
19	75 52 235			1	.O-ring	.O-ring	5
20	75 52 201			1	.O-ring	.O-ring	5
21	75 79 485		GA 64103	1	.Piston	.Kolv	5
21	40 27 009		GA 64104, 64301	1	.Piston	.Kolv	5
21	75 76 846		GA 74303	1	.Piston	.Kolv	5
21	42 79 923		GA 74304, 74306, 74308, 74309, 74310	1	.Piston	.Kolv	5
21	41 21 877		GA 64107, 74307	1	.Piston	.Kolv	5
21	42 80 335		GA 64106, 64302	1	.Piston	.Kolv	5
22	75 53 605			2	.Spring disc	.Fjädertallrik	5
23	40 25 409		71)	1	.Stop ring	.Stoppring	5
23	41 22 990		72)	1	.Stop ring	.Stoppring	5
24	75 72 571		I, GA 64103,64104,64301	4	.Clutch disc	.Lamell	5
24	41 22 396		I, GA 64106,64107,64302,	4	.Clutch disc	.Lamell	5
24	75 72 571		TURBO, GA74303, 74304	5	.Clutch disc	.Lamell	5
24	41 22 396		TURBO, GA74306, 74307, 74308, 74309, 74310	5	.Clutch disc	.Lamell	5
25	75 97 933		I	4	.Clutch disc	.Lamell	5
25	75 97 933		TURBO	5	.Clutch disc	.Lamell	5
26	75 76 796		I, GA 64103,64104,64301	1	.Clutch disc	.Lamell	5
26	41 22 412		I, GA 64106,64107,64302	1	.Clutch disc	.Lamell	5
26	75 76 853		TURBO, GA 74303, 74304	1	.Clutch disc	.Lamell	5
26	42 80 244		TURBO, GA 74306, 74307, 74308, 74309, 74310	1	.Clutch disc	.Lamell	5
27	75 57 085			1	.Lock ring	.Låsring	5
28	75 52 862			2	.Thrust washer	.Axialbricka	5
29	75 52 870			1	.Angle washer	.Vinkelbricka	5
30	75 54 801		GA 64103, 64104, 64301 74303, 64106, 64107, 64302, 74307	1	.Countershaft	.Mellanaxel	5
30	40 27 058		129)GA 74304,74306,74308	1	.Countershaft	.Mellanaxel	5
30	42 81 861		130), GA 74306, 74308, 74309, 74310	1	.Countershaft	.Mellanaxel	5
31	75 52 839			1	.Angle washer	.Vinkelbricka	5
32	75 52 847			1	.Angle washer	.Vinkelbricka	5
33	75 52 854			1	.Thrust washer	.Axialbricka	5
34	75 56 079			1	.Sun gear	.Solhjul	5
34	75 95 739		GA 74306, 74308, 74309, 74310	1	.Sun gear	.Solhjul	5
35	75 52 805			1	.Angle washer	.Vinkelbricka	5
36	75 52 813			1	.Angle washer	.Vinkelbricka	5
37	75 52 821			1	.Thrust washer	.Axialbricka	5
38	75 95 937			1	.Cylinder	.Cylinder	5
39	*75 53 548*		103) NLS - USE 4279808	1	.Sun gear	.Solhjul	5
39	42 79 808		104)	1	.Sun gear	.Solhjul	5
40	*75 78 768*		11) NLS - USE 4026423	1	.Planetary gear housing	.Planetväxelhus	5
40	40 26 423		12)	1	.Planetary gear housing	.Planetväxelhus	5
45			See page 4-059, 3-J12		.Ring gear	.Ringdrev	
	74 96 045		B202	X	Disc kit	Lamellsats	2
			See page 4-081, 3-K10		Clutch "A"	Koppling "A"	

11. Gear box --52189.
12. Gear box 52190--.
71. Gear box --88333.
72. Gear box 88334--.
103. Gear box --115906
104. Gear box 115907--
129. Gear box --143148
130. Gear box 143149--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J10

Gears, pinion
Part 2

Drev, pinjong
Del 2

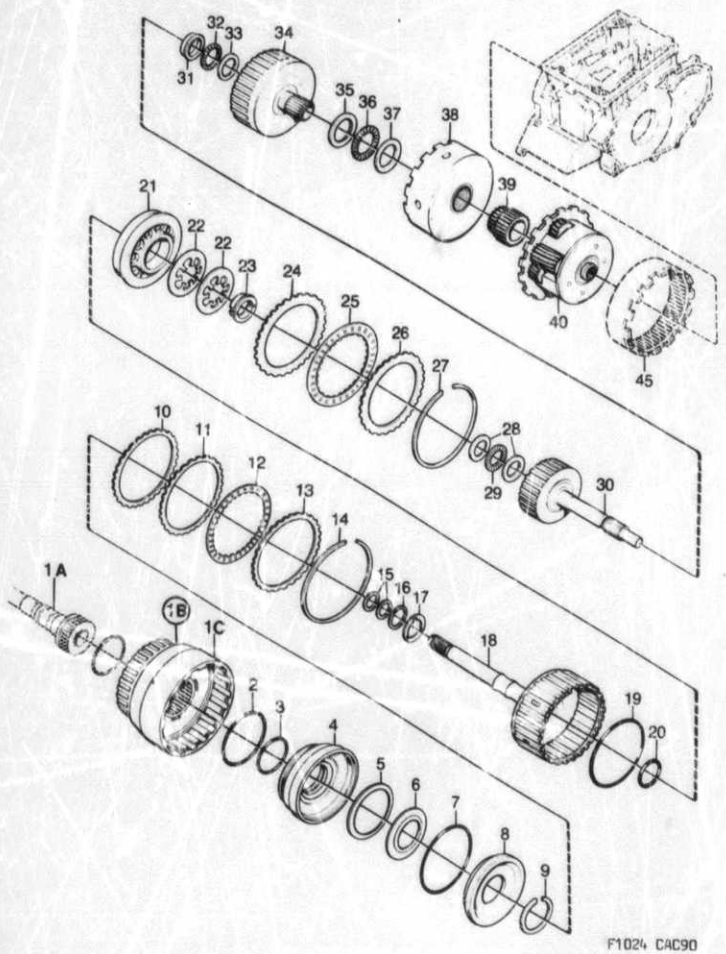


0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1110		74 96 086		B202	X	Disc kit	Lamellsats	2
1120				See page 4-081, 3-K10		Clutch "E"	Koppling "E"	
1130		74 96 094		B202	X	Gasket kit	Packningsats	3
1140				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
1150		74 96 102		B202	X	Gasket kit	Packningsats	3
1160				See page 4-081, 3-K10		Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

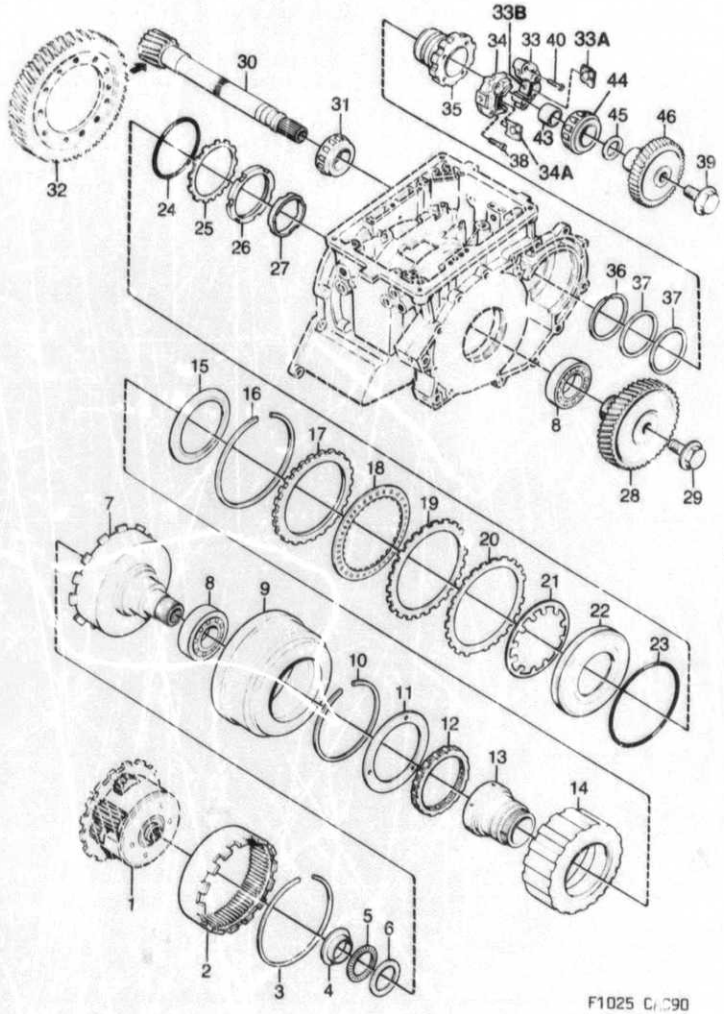

F1025 C/C90

Gear box, automatic

3-J12

Gears, pinion

Part 3

Växellåda, automatisk

Drev, pinjong

Del 3

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1			See page 4-053, 3-J06		.Planetary gear	.Planetväxel	
0030	2	75 97 214			1	.Ring gear	.Ringdrev	5
0040	3	75 57 101			1	.Lock ring	.Låsring	5
0050	4	75 52 797			1	.Angle washer	.Vinkelbricka	5
0060	5	75 71 938			1	.Needle bearing	.Axialnållager	5
0070	6	75 52 771			1	.Thrust washer	.Axialbricka	5
0080	7	*75 56 269*		63) NLS - USE 4122305	1	.Shaft	.Axel	5
0090	7	41 22 305		64,99)	1	.Shaft	.Axel	5
0100	7	41 22 305		100), GA 74304, 74306,74308,74309,74310	1	.Shaft	.Axel	5
0110								
0120	7	42 79 857		100), GA 64103, 64107,64104,64106,64301, 64302, 74303, 74307	1	.Shaft	.Axel	5
0130								
0140								
0160	8	75 58 455			2	.Roller bearing	.Rullager	5
0170	9	*75 54 629*		101) NLS - USE 4122586	1	.Cylinder	.Cylinder	5
0180	9	41 22 586		102)	1	.Cylinder	.Cylinder	5
0190	10	*75 57 069*		1990 NLS - USE 4120937	1	.Lock ring	.Låsring	5
0200	10	41 20 937		1991-	1	.Lock ring	.Låsring	5
0210	11	75 70 666			1	.Stop ring	.Stoppring	5
0220	12	40 25 342			1	.Free wheel	.Frihjul	5
0230	13	75 78 248		57), GA 64103, 74303	1	.Free wheel hub	.Frihjulsnav	5
0240	13	40 25 359		57), GA 64104, 64301, 74304	1	.Free wheel hub	.Frihjulsnav	5
0250								
0260	13	41 22 420		58)	1	.Free wheel hub	.Frihjulsnav	5
0280	14	*75 78 255*		GA 64103, 64104, 64301, 74303, 74304 NLS - USE 4122677	1	.Free wheel hub	.Frihjulsnav	5
0290								
0290								
0300	14	41 22 677		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Free wheel hub	.Frihjulsnav	5
0310								
0320								
0340	15	75 78 925			1	.Washer	.Bricka	5
0350	16	75 53 225		1,80MM	X	.Lock ring	.Låsring	5
0360	16	75 53 233		2,00MM	X	.Lock ring	.Låsring	5
0370	16	75 53 241		2,20MM	X	.Lock ring	.Låsring	5
0380	16	75 53 266		2,60MM	X	.Lock ring	.Låsring	5
0390	16	75 77 273		3,00MM	X	.Lock ring	.Låsring	5
0400	16	75 77 265		3,50MM	X	.Lock ring	.Låsring	5
0410	16	75 77 257		4,00MM	X	.Lock ring	.Låsring	5
0420	17	75 53 092			1	.Clutch disc	.Lamell	5
0430	18	75 52 326			6	.Clutch disc	.Lamell	5
0440	19	75 53 068			6	.Clutch disc	.Lamell	5
0450	20	75 53 050			1	.Clutch disc	.Lamell	5
0460	21	75 77 182			1	.Lock spring	.Låsfjäder	5
0470	22	75 79 105		GA 64103, 64104, 64301, 74303, 74304	1	.Piston	.Kolv	5
0480								
0490	22	42 80 590		GA 64106, 64107, 64302, 74306,74307,74308,74309, 74310	1	.Piston	.Kolv	5
0500								
0510								
0530	23	75 52 151			1	.O-ring	.O-ring	5
0540	24	75 97 354			1	.O-ring	.O-ring	5
0550	25	75 71 961			1	.Lock washer	.Låsbricka	5
0560	26	75 71 979			1	.Castle nut	.Kronmutter	5
0570	27	75 78 388		5,87MM	X	.Shim	.Shim	5
0580	27	75 78 396		5,90MM	X	.Shim	.Shim	5

57. Gear box --80278.
58. Gear box 80279--.
63. Gear box --93116.
64. Gear box 93117--.
99. Gear box --117624
100. Gear box 117625--
101. Gear box --113659
102. Gear box 113660--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J14

Gears, pinion
Part 3

Drev, pinjong
Del 3

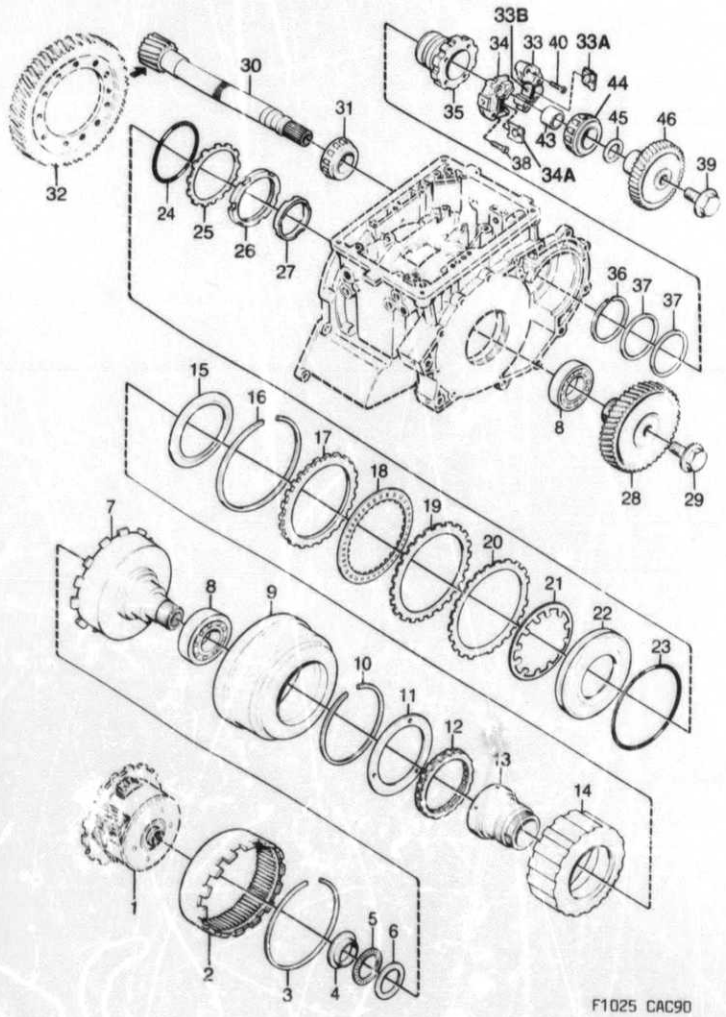

F1025 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
27	75 78 412		5,93MM	X	.Shim	.Shim	5
27	75 78 420		5,96MM	X	.Shim	.Shim	5
27	75 78 438		5,99MM	X	.Shim	.Shim	5
27	75 78 446		6,02MM	X	.Shim	.Shim	5
27	75 78 453		6,05MM	X	.Shim	.Shim	5
27	75 78 461		6,08MM	X	.Shim	.Shim	5
27	75 78 479		6,11MM	X	.Shim	.Shim	5
27	75 78 487		6,14MM	X	.Shim	.Shim	5
27	75 78 495		6,17MM	X	.Shim	.Shim	5
27	75 78 503		6,20MM	X	.Shim	.Shim	5
27	75 78 511		6,23MM	X	.Shim	.Shim	5
27	75 78 529		6,26MM	X	.Shim	.Shim	5
27	75 78 537		6,29MM	X	.Shim	.Shim	5
27	75 78 545		6,32MM	X	.Shim	.Shim	5
27	75 78 552		6,35MM	X	.Shim	.Shim	5
27	75 78 560		6,38MM	X	.Shim	.Shim	5
27	75 78 578		6,41MM	X	.Shim	.Shim	5
27	75 78 586		6,44MM	X	.Shim	.Shim	5
27	75 78 594		6,47MM	X	.Shim	.Shim	5
27	75 78 602		6,50MM	X	.Shim	.Shim	5
27	75 78 610		6,53MM	X	.Shim	.Shim	5
27	75 78 628		6,56MM	X	.Shim	.Shim	5
27	75 78 636		6,59MM	X	.Shim	.Shim	5
28	75 79 444		GA 64103, 64104, 64107, 64106	1	.Gear	.Kugghjul	5
28	75 79 063		GA 74303, 64301, 74304 64302,74306,74307,74308, 74309,74310	1	.Gear	.Kugghjul	5
29	75 97 347			1	.Screw	.Skruv	5
30	75 78 222		53), GA 64103, 64104, 64301, 74303 NLS - USE 4122495	1	.Pinion shaft	.Pinjongaxel	5
30	41 22 495		54), GA 64103, 64104, 64301,74303,64106,64107, 64302, 74307	1	.Pinion shaft	.Pinjongaxel	5
30	41 19 483		121)GA 74304,74306,74308	1	.Pinion shaft	.Pinjongaxel	5
30	42 81 846		122)GA 74304,74306,74308 74309, 74310	1	.Pinion shaft	.Pinjongaxel	5
31	75 58 430			1	.Roller bearing	.Rullager	3
32			See page 4-027, 3-I04		.Crown wheel	.Kronhjul	
33	40 26 761	S	GA 64103, 64104, 64107, 64106	1	.Valve housing	.Ventilhus	5
33	75 99 731	S	GA 74303, 64301, 74304, 64302,74306,74307,74308, 74309, 74310 43001, 43201, 43202	1	.Valve housing	.Ventilhus	5
33A	75 53 001			1	..Fixing plate	..Fixerplatta	5
33B	75 79 188			1	..Fixing plate	..Fixerplatta	5
34	75 97 388	S	GA 64103, 64104, 64106, 64107	1	.Valve housing	.Ventilhus	5
34	75 97 412	S	GA 74303, 64301, 74304, 64302,74306,74307,74308, 74309, 74310	1	.Valve housing	.Ventilhus	5
34A	75 75 038			1	..Fixing plate	..Fixerplatta	5
35	75 97 628		67)	1	.Regulator	.Regulator	5
35	41 22 719		68)	1	.Regulator	.Regulator	5
36	75 92 272			1	.Piston ring	.Kolvring	5


53. Gear box --76774.
54. Gear box 76775--.
67. Gear box --81878.
68. Gear box 81879--.
121. Gear box --138566
122. Gear box 138567--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

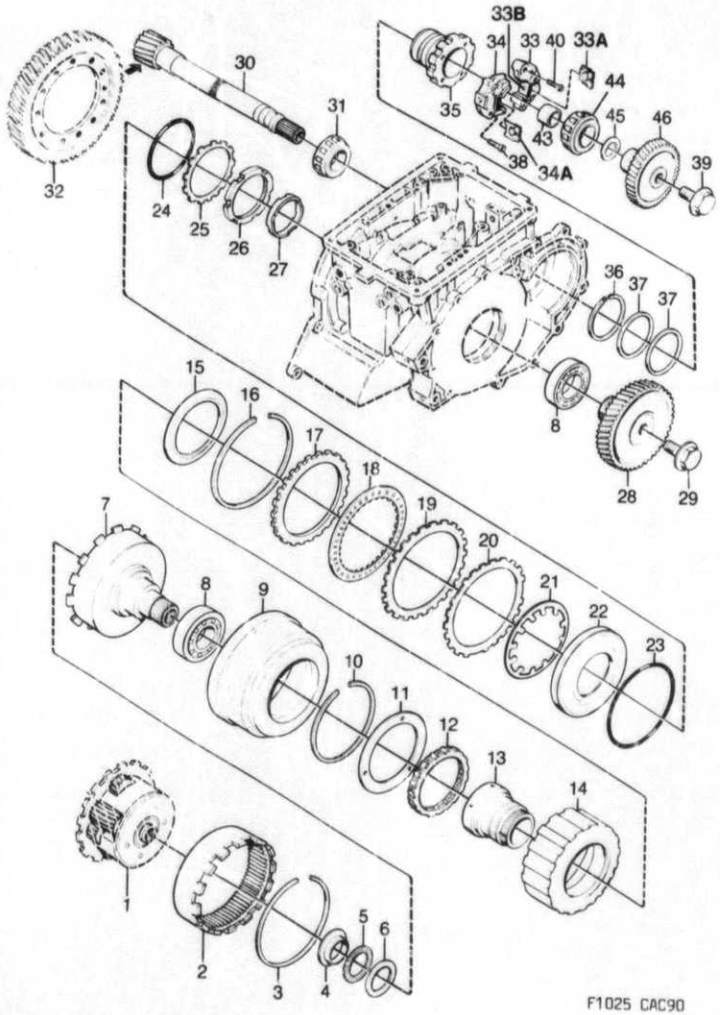

F1025 CAC90

Gear box, automatic

3-J16

Gears, pinion
Part 3

Växellåda, automatisk

Drev, pinjong
Del 3


0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1190	37	75 57 465	S		2	.Seal	.Tätning	5
1200	38	75 57 804	S		2	.Screw	.Skruv	5
1210	39	75 97 347		GA 64103, 64104, 64303, 74303,64106,64107,64302, 74307	1	.Screw	.Skruv	5
1220								
1230								
1250	39	41 19 442		GA 74304, 74306, 74308, 74309, 74310	1	.Screw	.Skruv	5
1260								
1280	40	75 92 645			3	.Screw	.Skruv	5
1290	43	75 74 221			1	.Spacer sleeve	.Distanshylsa	5
1300	44	75 74 205			1	.Roller bearing	.Rullager	3
1310	45	75 78 032		1,00MM	X	.Adjusting washer	.Justerbricka	5
1320	45	75 78 040		1,05MM	X	.Adjusting washer	.Justerbricka	5
1330	45	75 78 057		1,10MM	X	.Adjusting washer	.Justerbricka	5
1340	45	75 78 065		1,15MM	X	.Adjusting washer	.Justerbricka	5
1350	45	75 78 073		1,20MM	X	.Adjusting washer	.Justerbricka	5
1360	45	75 78 081		1,25MM	X	.Adjusting washer	.Justerbricka	5
1370	45	75 78 099		1,30MM	X	.Adjusting washer	.Justerbricka	5
1380	45	75 78 107		1,35MM	X	.Adjusting washer	.Justerbricka	5
1390	45	75 78 115		1,40MM	X	.Adjusting washer	.Justerbricka	5
1400	45	75 78 123		1,45MM	X	.Adjusting washer	.Justerbricka	5
1410	45	75 78 131		1,50MM	X	.Adjusting washer	.Justerbricka	5
1420	45	75 78 149		1,55MM	X	.Adjusting washer	.Justerbricka	5
1430	45	75 78 156		1,60MM	X	.Adjusting washer	.Justerbricka	5
1440	45	75 78 164		1,65MM	X	.Adjusting washer	.Justerbricka	5
1450	45	75 78 172		1,70MM	X	.Adjusting washer	.Justerbricka	5
1460	45	75 78 180		1,75MM	X	.Adjusting washer	.Justerbricka	5
1470	45	75 78 198		1,80MM	X	.Adjusting washer	.Justerbricka	5
1480	45	75 78 206		1,85MM	X	.Adjusting washer	.Justerbricka	5
1490	45	75 78 214		1,90MM	X	.Adjusting washer	.Justerbricka	5
1500	45	40 25 094		1,95MM	X	.Adjusting washer	.Justerbricka	5
1510	46	75 79 451		GA 64103, 64104, 64106, 64107	1	.Gear	.Kugghjul	5
1520								
1530	46	75 79 071		GA 74303, 64301, 74304, 64302,74306,74307,74308, 74309, 74310	1	.Gear	.Kugghjul	5
1540								
1550								
1570		74 96 078		B202	X	Disc kit	Lamellsats	2
1580				See page 4-081, 3-K10		Clutch "D"	Koppling "D"	
1590		74 96 094		B202	X	Gasket kit	Packningsats	3
1600				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
1610		74 96 102		B202	X	Gasket kit	Packningsats	3
1620				See page 4-081, 3-K10		Stage 3	Steg 3	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

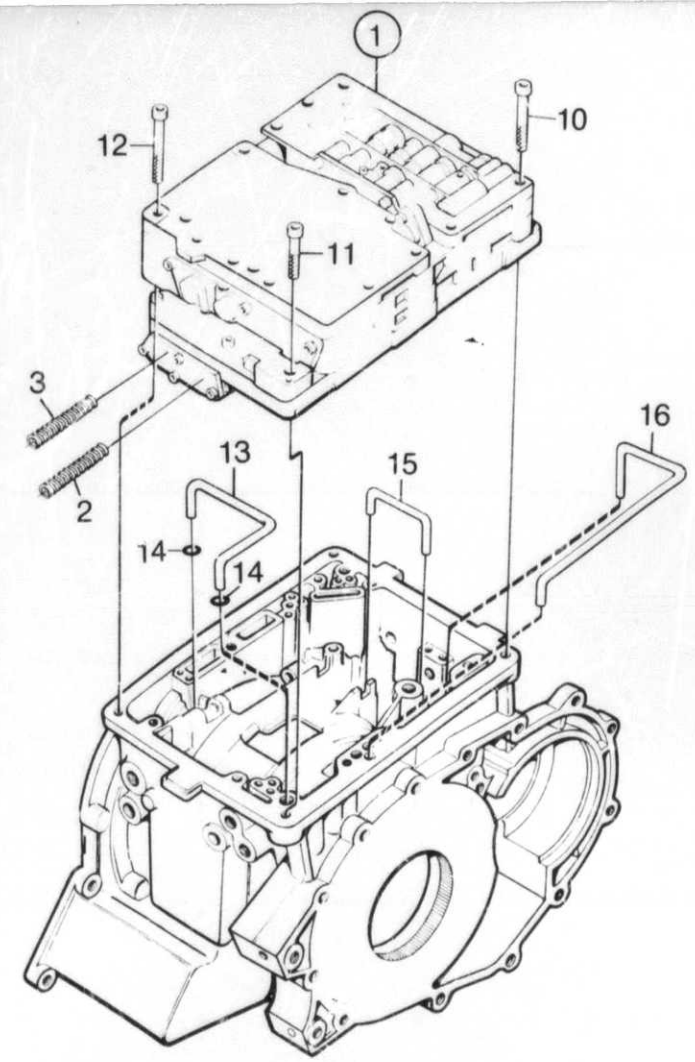

F3665 - CAC90

Gear box, automatic
Växellåda, automatisk

3-J18

Control system
Kontrollsystem

0700	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	40 26 704		148), B202 TURBO	1	.Control unit	.Kontrollenhet	5
0030	1	41 20 796		149), B202 TURBO	1	.Control unit	.Kontrollenhet	5
0040	1	*40 26 688*		148), B234 TURBO NLS - USE 4122503	1	.Control unit	.Kontrollenhet	5
0040								
0041	1	41 22 503		149), B234 TURBO	1	.Control unit	.Kontrollenhet	5
0050	1	40 26 829		148), B202 I	1	.Control unit	.Kontrollenhet	5
0060	1	41 20 754		149), B202 I	1	.Control unit	.Kontrollenhet	5
0070	1	*40 26 696*		73), B234 I NLS - USE 4121992	1	.Control unit	.Kontrollenhet	5
0070								
0080	1	41 21 992		74), B234 I	1	.Control unit	.Kontrollenhet	5
0090	2	75 77 166		B202	1	..Spring reverse	..Fjäder back	6
0100								
0110	2	42 80 657		B234	1	..Spring reverse	..Fjäder back	6
0120								
0130	3	44 78 046		150), B202	1	..Spring front	..Fjäder fram	
0140								
0141	3	42 81 945		151), B202	1	..Spring front	..Fjäder fram	6
0142				151), B234 I				
0150	3	41 19 277		150), B234 I	1	..Spring front	..Fjäder fram	6
0160								
0170	3	42 80 723		150), B234 TURBO	1	..Spring front	..Fjäder fram	6
0180								
0181	3	42 81 804		151), B234 TURBO	1	..Spring front	..Fjäder fram	6
0182								
0190	10	75 93 650			8	.Screw	.Skruv	5
0200	11	75 57 754			1	.Screw	.Skruv	5
0210	12	75 57 846			1	.Screw	.Skruv	5
0220	13	75 95 002		TURBO	1	.Tube	.Rör	4
0230	14	75 94 146	S	TURBO	2	.O-ring	.O-ring	3
0240	15	75 70 294			1	.Tube	.Rör	5
0250	16	75 70 310			1	.Tube	.Rör	5
0260		74 96 094		B202	X	Gasket kit	Packningsats	3
0270				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
0280		74 96 102		B202	X	Gasket kit	Packningsats	3
0290				See page 4-081, 3-K10		Stage 3	Steg 3	

73. Gear box --90866.
74. Gear box 90867--.
148. Gear box --117602
149. Gear box 117603--
150. Gear box --143960
151. Gear box 143961--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J20

Controls in gear box

Reglage i växellådshus

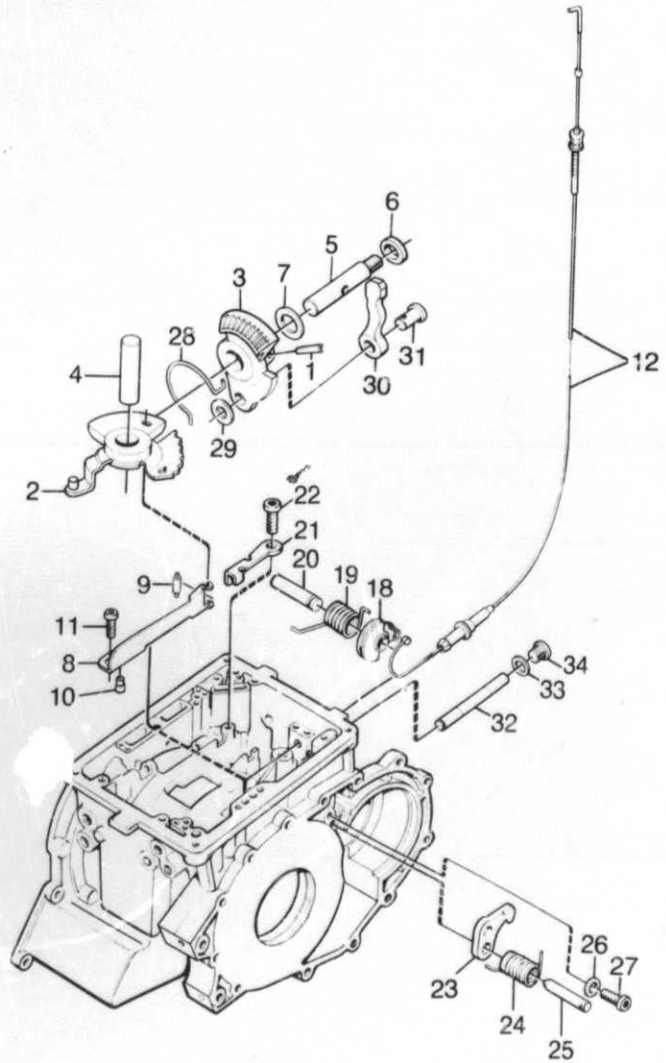

F3666 - CAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0020	1	75 57 952		1990	1	.Pin	.Pinne	5
0030	1	41 22 552		1991-	1	.Pin	.Pinne	5
0040	2	*75 74 130*		69) NLS - USE 4122578	1	.Catch	.Spärrskiva	4
0050	2	41 22 578		70)	1	.Catch	.Spärrskiva	4
0060	3	75 56 103	S		1	.Segment	.Segment	5
0070	4	75 56 913			1	.Bolt	.Bult	4
0080	5	75 56 095	S		1	.Shaft	.Axel	5
0090	6	75 52 276			1	.Shaft seal	.Axeltätning	3
0100	7	75 56 889	S	0,5MM	1	.Washer	.Bricka	4
0110	7	75 56 871	S	0,6MM	X	.Washer	.Bricka	4
0120	7	75 56 863	S	0,7MM	X	.Washer	.Bricka	4
0130	7	75 56 855	S	0,8MM	X	.Washer	.Bricka	4
0140	7	75 56 848	S	0,9MM	X	.Washer	.Bricka	4
0150	7	75 71 599	S	1,0MM	X	.Washer	.Bricka	4
0160	7	75 71 581	S	1,1MM	X	.Washer	.Bricka	4
0170	7	75 71 573	S	1,2MM	X	.Washer	.Bricka	4
0180	7	75 71 565	S	1,3MM	X	.Washer	.Bricka	4
0190	7	75 71 557	S	1,4MM	X	.Washer	.Bricka	4
0200	7	75 71 540	S	1,5MM	X	.Washer	.Bricka	4
0210	7	75 71 532	S	1,6MM	X	.Washer	.Bricka	4
0220	7	75 71 524	S	1,7MM	X	.Washer	.Bricka	4
0230	7	75 71 516	S	1,8MM	X	.Washer	.Bricka	4
0240	7	75 71 508	S	1,9MM	X	.Washer	.Bricka	4
0250	8	75 73 934			1	.Spring	.Fjäder	4
0260	9	75 58 836			1	.Roller	.Rulle	4
0270	10	75 56 905	S		1	.Pin	.Pinne	4
0280	11	75 57 762	S		2	.Screw	.Skruv	5
0290	12			See page 4-069, 3-J22		.Cable	.Kabel	
0400	18	75 56 111	S		1	.Cam disc	.Kamskiva	5
0410	19	75 56 145	S		1	.Spring	.Fjäder	6
0420	20	75 56 137	S		1	.Shaft	.Axel	6
0430	21	75 56 939	S		1	.Fixing plate	.Fixerplatta	5
0440	22	75 57 903	S		1	.Hexagon screw	.Sexkantsskruv	5
0450	23	40 25 136			1	.Stop	.Spärrklack	4
0460	24	75 54 710	S		1	.Spring	.Fjäder	4
0470	25	40 26 431	S		1	.Pin	.Pinne	4
0480	26	75 54 694			1	.Washer	.Bricka	5
0490	27	75 57 762			1	.Screw	.Skruv	5
0500	28	75 54 660	S		1	.Spring clamp	.Fjäderklämma	5
0510	29	75 54 694	S		1	.Washer	.Bricka	5
0520	30	75 54 678	S		1	.Lock lug	.Låsklack	4
0530	31	75 54 686	S		1	.Pin	.Pinne	5
0540	32	75 54 736	S		1	.Shaft	.Axel	6
0550	33	75 52 342	S		1	.Seal	.Tätning	5
0560	34	75 58 513			1	.Hexagon screw	.Sexkantsskruv	5
0580		74 96 094		B202	X	Gasket kit	Packningsats	3
0590				See page 4-081, 3-K10		Stage 1-2	Steg 1-2	
0600		74 96 102		B202	X	Gasket kit	Packningsats	3
0610				See page 4-081, 3-K10		Stage 3	Steg 3	

69. Gear box --94173.
70. Gear box 94174--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-J22

Throttle cable electric motor ASR

Trottelkabel elmotor ASR

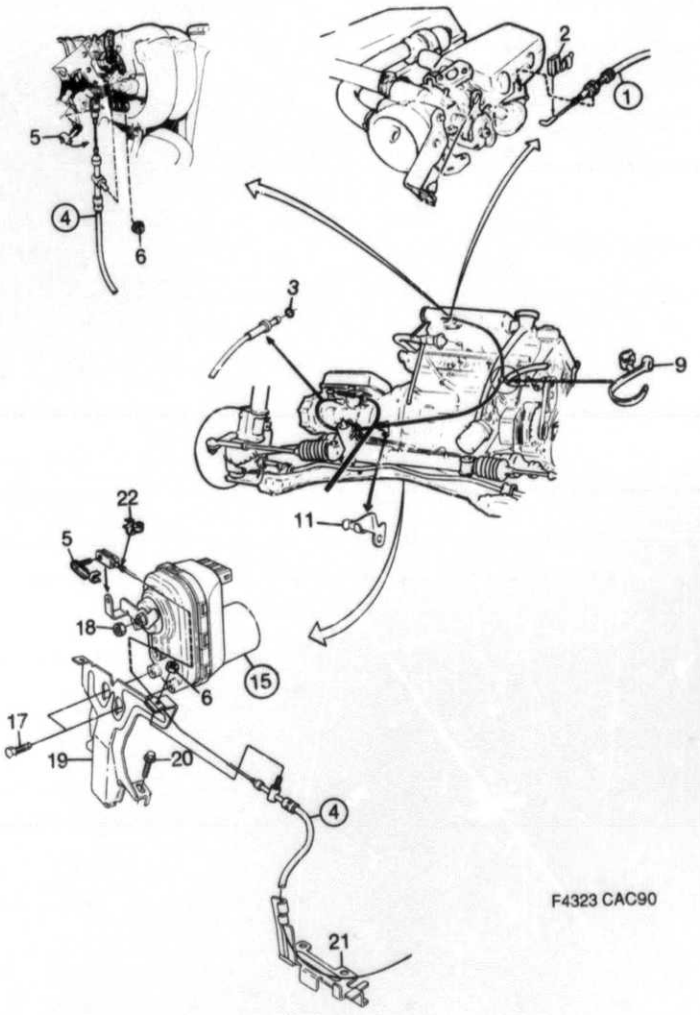

0775	Pos	Part no/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-039, 3-I16		Gear box, automatic	Växellåda, automatisk	
0290	1	40 28 239		B202	1	.Cable	.Kabel	4
0293	2	83 22 331			1	..Clip	..Clips	5
0295	3	*75 75 392*	S	21) NLS - USE 4119244	1	..Sealing ring	..Tätningsring	3
0296	3	41 19 244		22)	1	..Sealing ring	..Tätningsring	3
0300	4	*40 26 365*		61), B234 NLS - USE 4122529	1	.Cable	.Kabel	4
0310	4	41 22 529		62), B234	1	.Cable	.Kabel	4
0320	4	42 81 713		B234, ASR	1	.Cable	.Kabel	4
0330	5	83 08 389			1	..Clip	..Clips	5
0340	3	*75 75 392*	S	21) NLS - USE 4119244	1	..Sealing ring	..Tätningsring	3
0350	3	41 19 244		22)	1	..Sealing ring	..Tätningsring	3
0353	6	79 71 658		65), B234	1	Nut	Mutter	5
0354	6	79 67 953		66)	1	Nut	Mutter	5
0380	9	73 99 652		B202	1	Clamp	Klammer	5
0570	11	41 18 311			1	Bracket	Konsol	5
0590	15	41 61 220		ASR	1	Electric motor	Elmotor	5
0610	17	79 69 223		ASR	3	.Screw	.Skruv	5
0620	18	80 29 555		ASR	1	.Nut	.Mutter	5
0630	19	41 63 317		ASR	1	Bracket	Fäste	5
0640	20	79 72 607		ASR	3	Screw	Skruv	5
0650	21	41 63 333		ASR	1	Retainer	Hållare	5
0660	22	43 84 053		ASR	1	Clamp	Klämma	5

21. Gear box --54381.
22. Gear box 54382--.
61. Gear box --92848.
62. Gear box 92849--.
65. Gear box --92848.
66. Gear box 92849--.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04


Gear box control, autom.

3-J24

Gear selector lever

Växellådsmanövr., automat

Växelväljarspak

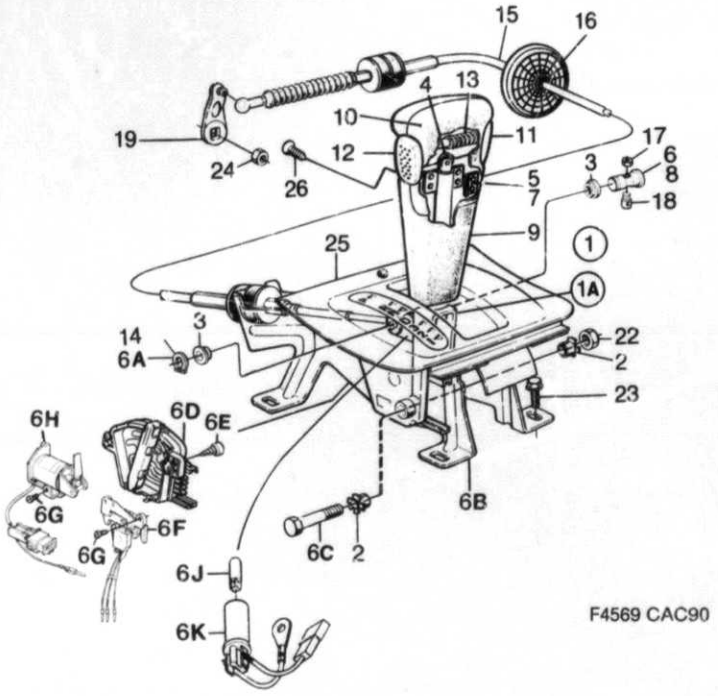

F4569 CAC90

0800	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	42 81 424		1993-, US, CA	1	Bracket	Konsol	6
0020	1A	*75 93 064*		41) NLS - USE 4280830	1	Gear lever	Växelspak	5
0030	1A	*41 18 303*		42),-1992 NLS - USE 4280830	1	Gear lever	Växelspak	5
0040	1A	42 80 830		1993-	1	.Gear lever	.Växelspak	5
0050	2	75 50 841			2	..Bushing	..Bussning	3
0060	3	75 79 253		-1992	2	..Bushing	..Bussning	3
0070	3	42 81 374		1993-	2	..Bushing	..Bussning	3
0080	4	75 53 365			1	..Roller	..Rulle	3
0090	5	75 50 783		42)	1	..Spacer	..Distans	4
0100	6	75 93 148		42), -1992	1	..Bracket	..Fäste	6
0110	6	42 81 218		1993-	1	..Bracket	..Fäste	6
0120	6A	80 47 706		42)	1	..Retaining ring	..Spårring	5
0130	6B	*75 50 650*		-1992 NLS - USE 4281457	1	.Bracket	.Konsol	6
0140	6B	42 81 457		1993-	1	.Bracket	.Konsol	6
0150	6B	75 92 025		-1992, RHD	1	.Bracket	.Konsol	6
0160	6B	42 81 455		1993-, RHD	1	.Bracket	.Konsol	6
0170	6B	*42 80 855*		1), 1993-, US, CA NLS	1	.Bracket	.Konsol	6
0180	6C	75 50 858			1	.Screw	.Skruv	5
0185	6D			-1992		Switch	Strömställare	
0186				See page 3A-101, 2-E06				
0190	6D	40 62 980		1993-,LH,US,CA (9529389)	1	.Switch	.Strömställare	5
0200	6D	40 62 972		1993-,RH,US,CA (9529371)	1	.Switch	.Strömställare	5
0210	6E	79 72 818		1993-, US, CA	4	.Screw	.Skruv	5
0220	6F	*42 81 481*		1), 1993-, US, CA NLS	1	.Microswitch	.Mikrobrytare	3
0230	6G	*84 41 503*		1993-, US, CA NLS - USE 7970601	4	.Screw	.Skruv	5
0240	6H	*42 80 871*		1), 1993-, US, CA NLS	1	.Solenoid	.Solenoid	5
0250	6J	85 00 613		1993-, US, CA	1	.Bulb	.Glödlampa	2
0260	6K	85 78 775		1993-, US, CA	1	.Bulb socket	.Lamphållare	4
0270	7	75 50 783		41)	1	Spacer	Distans	4
0280	8	75 93 148		41)	1	Bracket	Fäste	6
0290	9	*75 77 149*		19) NLS - USE 4118089	1	Outer casing	Hölje	6
0300	9	41 18 089		20,97)	1	Outer casing	Hölje	6
0310	9	41 21 091		98)	1	Outer casing	Hölje	6
0320	10	75 50 742		97)	1	Cover	Lock	5
0330	10	41 21 109		98)	1	Cover	Lock	5
0340	11	75 50 718		97)	1	Button	Knapp	4
0350	11	41 20 606		98)	1	Button	Knapp	4
0360	12	75 50 726		97)	1	Button	Knapp	4
0370	12	41 20 614		98)	1	Button	Knapp	4
0380	13	75 50 734			1	Spring	Fjäder	5
0390	14	79 15 093			2	Retaining ring	Spårring	5
0400	15	75 77 927			1	Gear selector	Växelväljare	3
0410	15	75 77 927		RHD	1	Gear selector	Växelväljare	3
0420	16	75 50 973			1	.Grommet	.Genomföring	3
0430	16	75 50 973		RHD	1	.Grommet	.Genomföring	3
0440	17	79 71 658			1	Nut	Mutter	5
0450	18	75 93 130		25)	1	Bolt	Bult	3
0460	18	41 18 402		26)	1	Bolt	Bult	3
0470	19	75 92 033			1	Ball joint	Kulled	5
0480	22	81 51 235			1	Nut	Mutter	5
0490	23	82 86 296			4	Screw	Skruv	5
0500	24	79 77 630			1	Nut	Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
19. Ch. --L1002426, --L2001828, --L8000538.
20. Ch. L1002426--, L2001829--, L8000539--.
25. Ch. --L1005175, --L2003706
26. Ch. L1005176--, L2003707--
41. Ch. --L1016274, --L2011517, --L8002059
42. Ch. L1016275--, L2011518--.
97. Ch. --M1019830, --M2012513
98. Ch. M1019831--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

3-K02

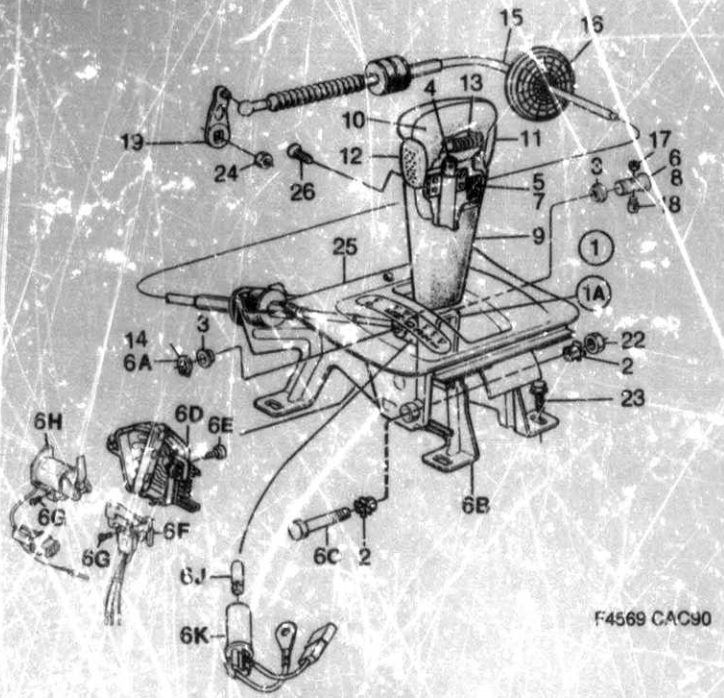

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	25			See page 88-015, 6-A16		Cover	Kåpa	
0520	26	79 70 320			2	Screw	Skruv	C
0530				See page 3A-101, 2-E06		Switch	Strömställare	


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electric, general	2-A02
3B	Electric, control housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04


3-K04

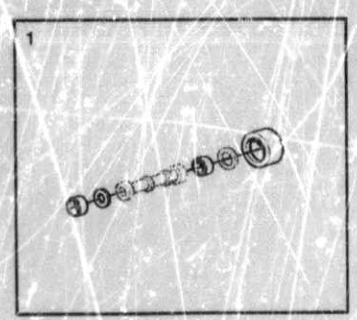


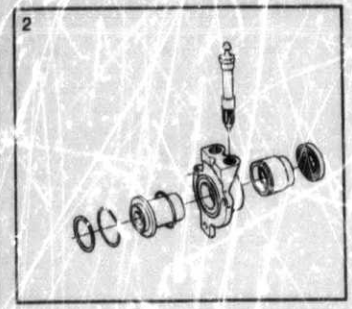

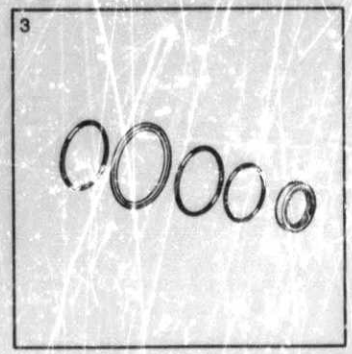

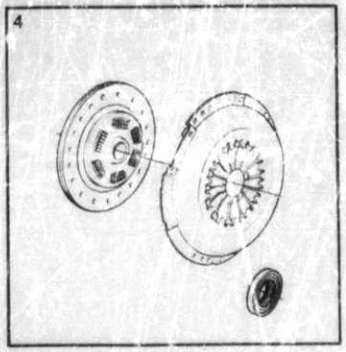

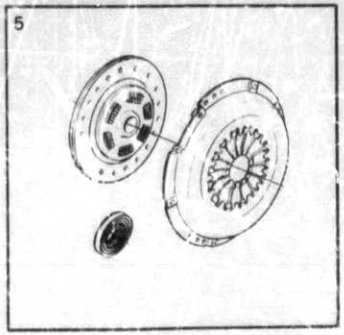

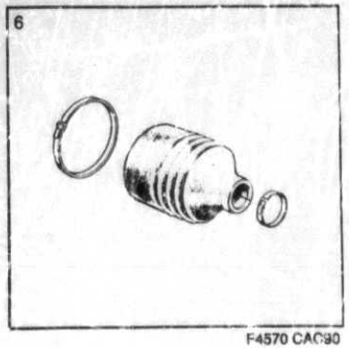

F4570 CAC90

1000	Pos	Part No/Artikelnr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 156		RHD	X	Repair kit master cylinder	Reparationssats huvudcylinder	1
0020								
0030		89 03 304			1	. Gasket	. Packning	
0040		*73 13 182*		NLS	1	. Washer	. Bricka	
0050		89 40 769			1	. Gasket	. Packning	5
0060		73 13 240			1	. Seal	. Tätning	6
0070		89 45 248			1	. Gasket	. Packning	5
0080		89 45 255			1	. Washer	. Bricka	5
0090								
0100	2	87 81 189		135)	X	Slave cylinder	Slavcylinder	2
0110		87 25 504		1)	1	. Slave cylinder	. Slavcylinder	2
0120		87 33 198			1	. O-ring	. O-ring	3
0130								
0140	2	87 81 387		136)	X	Slave cylinder	Slavcylinder	2
0150		87 29 550		1)	1	. Slave cylinder	. Slavcylinder	2
0160		87 29 600			1	. O-ring	. O-ring	3
0170		87 21 995			1	. Release bearing	. Urtrampningslager	2
0180								
0190	3	87 81 122		135)	X	Sealing kit slave cylinder	Tätningssats slavcylinder	1
0200								3
0210		87 22 118		1)	1	. Seal	. Tätning	3
0220		87 22 126		1)	1	. Seal	. Tätning	2
0230		87 22 001		1)	1	. Seal	. Tätning	3
0240		87 33 198			1	. O-ring	. O-ring	
0250								1
0260	3	87 81 395		136)	X	Sealing kit slave cylinder	Tätningssats slavcylinder	3
0270								3
0280		87 22 118		1)	1	. Seal	. Tätning	3
0290		87 22 126		1)	1	. Seal	. Tätning	2
0300		87 22 001		1)	1	. Seal	. Tätning	3
0310		87 29 600			1	. O-ring	. O-ring	3
0320		87 29 592			1	. Seal	. Tätning	
0330								
0430	4	87 81 320		B202 TURBO	X	Clutch kit	Kopplingssats	6
0440		87 27 190			1	. Pressure plate	. Tryckskiva	2
0450		87 27 695			1	. Clutch disc	. Lamell	2
0460		87 21 995			1	. Release bearing	. Urtrampningslager	2
0470								
0480	4	87 81 353		B234 TURBO	X	Clutch kit	Kopplingssats	6
0490		87 28 289			1	. Pressure plate	. Tryckskiva	2
0500		87 28 297			1	. Clutch disc	. Lamell	2
0510		87 21 995			1	. Release bearing	. Urtrampningslager	2
0520								
0620	5	87 81 312		B202 I	X	Clutch kit	Kopplingssats	6
0630		87 28 123			1	. Pressure plate	. Tryckskiva	2
0640		87 27 935			1	. Clutch disc	. Lamell	2
0650		87 21 995			1	. Release bearing	. Urtrampningslager	2
0660								
0670	5	87 81 338		B234 I	X	Clutch kit	Kopplingssats	6
0680		87 28 123			1	. Pressure plate	. Tryckskiva	2
0690		87 30 806			1	. Clutch disc	. Lamell	2
0700		87 21 995			1	. Release bearing	. Urtrampningslager	2
0710								
0770	6	89 93 628			X	Bellows kit universal joint	Bälgsats drivknut	2
0780								
0790		40 02 747		1)	1	. Bellows	. Bälg	2
0800		71 67 117			2	. Band iror	. Bandjärn	3
0810		70 48 473			2	. Clamp	. Klammer	3
0820								

1. Not as separate spare part. Ej som separat reservdel.
135. Gear box --D41692
136. Gear box D41693--


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-AC2
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6 K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04


3-K06

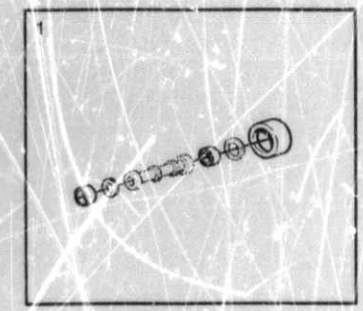


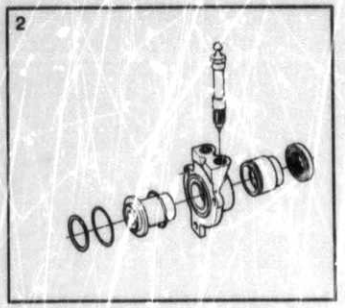

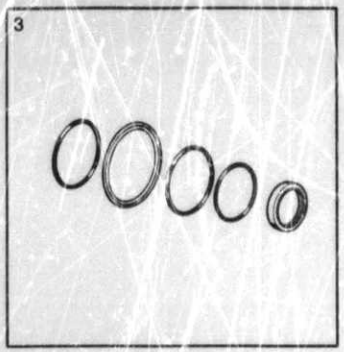

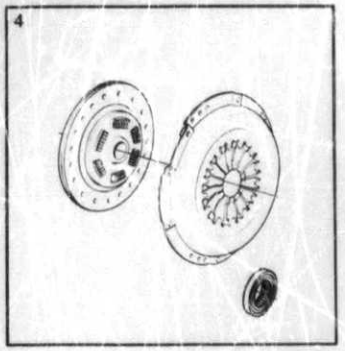

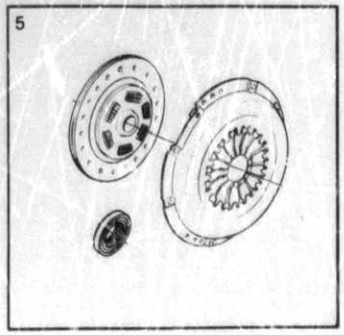

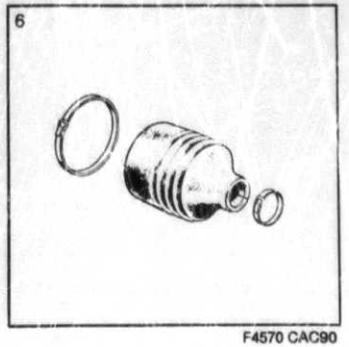

F4570 CAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	6	89 93 685		B234 TURBO	X	Bellows kit, universal joint	Bälgsats drivknut	2
0840								
0850		41 05 797		1)	1	. Bellows	. Bälg	2
0860		71 67 117			2	. Band clip	. Bandjärn	3
0870		70 48 473			2	. Clamp	. Klammer	3
0880								


1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

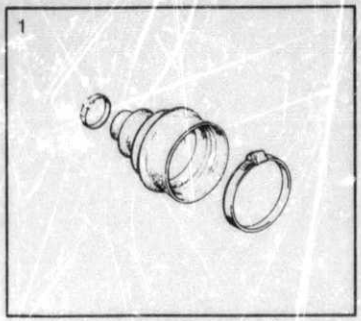


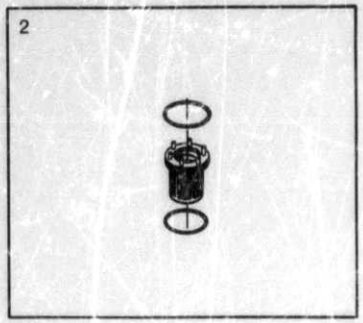

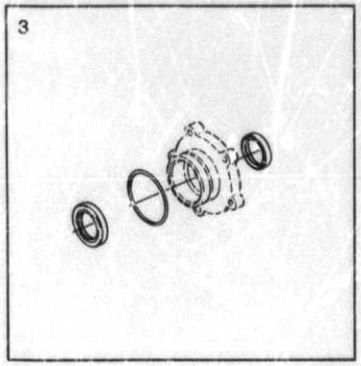

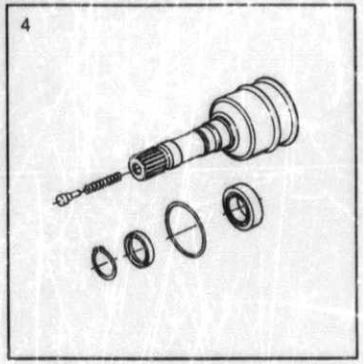

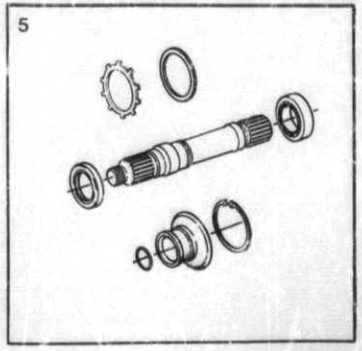

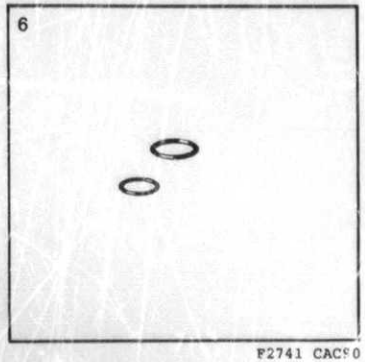

F2741 CAC90

Complete set
3-K08
Transmission

Satser
Kraftöverföring

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 636			X	Bellows kit	Bälgsats	3
0020						drive shaft	drivaxel	
0030		89 55 007		1)	1	.Bellows	.Bälg	3
0040		70 48 465			1	.Band iron	.Bandjärn	5
0050		70 48 473			1	.Clamp	.Klamme	3
0060		89 72 986			1	.Clamp	.Klämma	5
0070								
0080	1	89 93 701		B234 TURBO	X	Bellows kit	Bälgsats	3
0090		41 03 248		1)	1	.Bellows	.Bälg	3
0100		70 48 465			1	.Band iron	.Bandjärn	5
0110		70 48 473			1	.Clamp	.Klammu	3
0120		89 72 986			1	.Clamp	.Klämma	5
0130								
0140	2	75 75 525		80)	X	Repair kit	Reparationssats	4
0150		75 71 391			1	.Sealing ring	.Tätningsring	5
0160		75 94 187			1	.O-ring	.O-ring	3
0170		75 97 776			1	.O-ring	.O-ring	3
0180		75 99 525			1	.Filter	.Filter	3
0190								
0200	3	75 75 509		A	X	Sealing kit	Tätningssats	3
0210						drive shaft	drivaxel	
0220		75 52 128			1	.O-ring	.O-ring	3
0230		*87 04 298*		NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0240		87 21 078			1	.Seal	.Tätning	5
0250								
0260	4	75 75 566		A, LH	X	Repair kit	Reparationssats	5
0270						drive shaft	drivaxel	
0280		*75 52 102*		NLS - USE 7597776	1	.O-ring	.O-ring	3
0290		75 52 128			1	.O-ring	.O-ring	3
0300		75 58 950			1	.Ball bearing	.Kullager	5
0310		*79 15 200*		NLS - USE 8728198	1	.Lock ring	.Låsring	5
0320		*87 04 298*		NLS - USE 8731804	1	.Sealing collar	.Tätningskrage	5
0330		87 04 314			1	.Spring	.Fjäder	4
0340		87 04 322			1	.Plunger	.Plunge	5
0350		87 20 948			1	.Companion flange	.Mellanbringare	3
0360								
0370	5	75 75 574		A, RH	X	Repair kit	Reparationssats	
0380						drive shaft	drivaxel	
0390		*75 52 102*		NLS - USE 7597776	1	.O-ring	.O-ring	3
0400		75 58 950			1	.Ball bearing	.Kullager	5
0410		*75 71 896*		NLS - USE 8723140	1	.Shaft	.Axel	5
0420		*75 71 904*		NLS - USE 7594898	1	.O-ring	.O-ring	3
0430		87 20 997			1	.Sealing ring	.Tätningsring	2
0440		80 48 324			1	.Ring	.Ring	6
0450		*79 15 036*		78) NLS - USE 8048324	1	.Lock ring	.Låsring	5
0460		*79 15 200*		NLS - USE 8728198	1	.Lock ring	.Låsring	5
0470		87 21 078			1	.Seal	.Tätning	5
0480								
0490	6	75 75 442			X	Sealing kit	Tätningssats	3
0500		*75 52 102*		NLS - USE 7597776	1	.O-ring	.O-ring	3
0510		75 71 391			1	.Sealing ring	.Tätningsring	5

1. Not as separate spare part. Ej som separat reservdel.
78. Alternative to 8048324. Alternativ till 8048324.
80. Filter insert Filterinsats


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


4 GROUP INDEX


Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04


3-K10

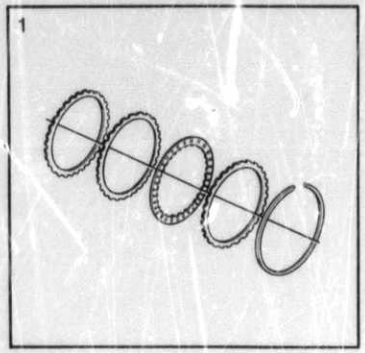


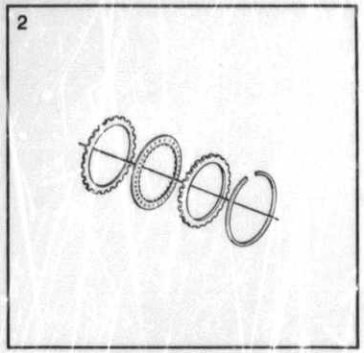

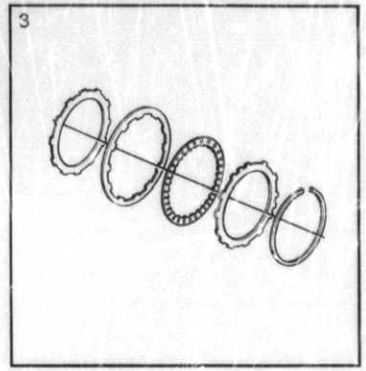

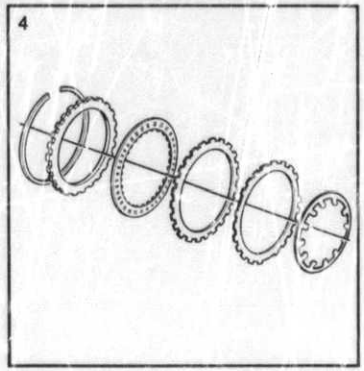

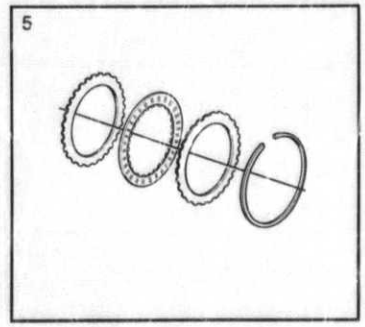

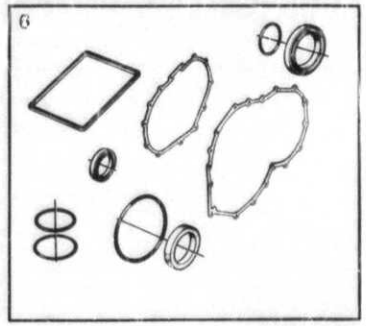

F3539 CAC90


1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 96 045		B202, A	X	Disc kit	Lamellsats	2
0020						Clutch "A"	Koppling "A"	
0030		75 52 292			5	.Clutch disc	.Lamell	5
0040		75 53 050			1	.Clutch disc	.Lamell	5
0050		75 53 068			5	.Clutch disc	.Lamell	5
0060		75 53 092			1	.Clutch disc	.Lamell	5
0070		75 53 183			1	.Lock ring	.Låsring	5
0080		75 53 191			1	.Lock ring	.Låsring	5
0090		75 53 209			1	.Lock ring	.Låsring	5
0100		75 53 217			1	.Lock ring	.Låsring	5
0110		75 53 225			1	.Lock ring	.Låsring	5
0120		75 53 233			1	.Lock ring	.Låsring	5
0130		75 53 241			1	.Lock ring	.Låsring	5
0140		75 53 258			1	.Lock ring	.Låsring	5
0150		75 53 266			1	.Lock ring	.Låsring	5
0160		75 53 274			1	.Lock ring	.Låsring	5
0170								
0180	2	74 96 052		B202, A	X	Disc kit	Lamellsats	2
0190						Clutch "B"	Koppling "B"	
0200		75 53 068			3	.Clutch disc	.Lamell	5
0210		75 53 092			1	.Clutch disc	.Lamell	5
0220		75 53 217			1	.Lock ring	.Låsring	5
0230		75 72 704			3	.Clutch disc	.Lamell	5
0240								
0250	3	74 96 060		B202, A	X	Disc kit	Lamellsats	2
0255						Clutch "C"	Koppling "C"	
0260		75 52 961			1	.Spring disc	.Fjädertallrik	5
0270		75 53 084			3	.Clutch disc	.Lamell	5
0280		75 58 786			1	.Lock ring	.Låsring	5
0290		75 70 740			3	.Clutch disc	.Lamell	5
0300		75 72 605			1	.Lock ring	.Låsring	5
0310		75 72 613			1	.Lock ring	.Låsring	5
0320		75 72 621			1	.Lock ring	.Låsring	5
0330		75 72 639			1	.Lock ring	.Låsring	5
0340		75 74 890			1	.Lock ring	.Låsring	5
0350		75 92 249			1	.Clutch disc	.Lamell	5
0360								
0370	4	74 96 078		B202, A	1	Disc kit	Lamellsats	2
0380						Clutch "D"	Koppling "D"	
0390		75 52 326			6	.Clutch disc	.Lamell	5
0400		75 53 050			1	.Clutch disc	.Lamell	5
0410		75 53 068			6	.Clutch disc	.Lamell	5
0420		75 53 092			1	.Clutch disc	.Lamell	5
0430		75 53 225			1	.Lock ring	.Låsring	5
0440		75 53 233			1	.Lock ring	.Låsring	5
0450		75 53 241			1	.Lock ring	.Låsring	5
0460		75 53 266			1	.Lock ring	.Låsring	5
0470		75 77 182			1	.Lock spring	.Låsfjäder	5
0480		75 77 257			1	.Lock ring	.Låsring	5
0490		75 77 265			1	.Lock ring	.Låsring	5
0500		75 77 273			1	.Lock ring	.Låsring	5
0510								
0520	5	74 96 086		B202, A	X	Disc kit	Lamellsats	2
0530						Clutch "E"	Koppling "E"	
0540		75 57 085			1	.Lock ring	.Låsring	5
0550		75 72 571			5	.Clutch disc	.Lamell	5
0560		75 76 796			1	.Clutch disc	.Lamell	5
0570		75 76 853			1	.Clutch disc	.Lamell	5
0580		75 97 933			5	.Clutch disc	.Lamell	5
0590								
0600	6	74 96 094		B202, A	X	Gasket kit	Packningsats	3
0610						Stage 1-2	Steg 1-2	
0620		41 19 244			1	.Sealing ring	.Tätningsring	3
0630		75 52 250			1	.O-ring	.O-ring	5
0640		75 52 276			1	.Shaft seal	.Axeltätning	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

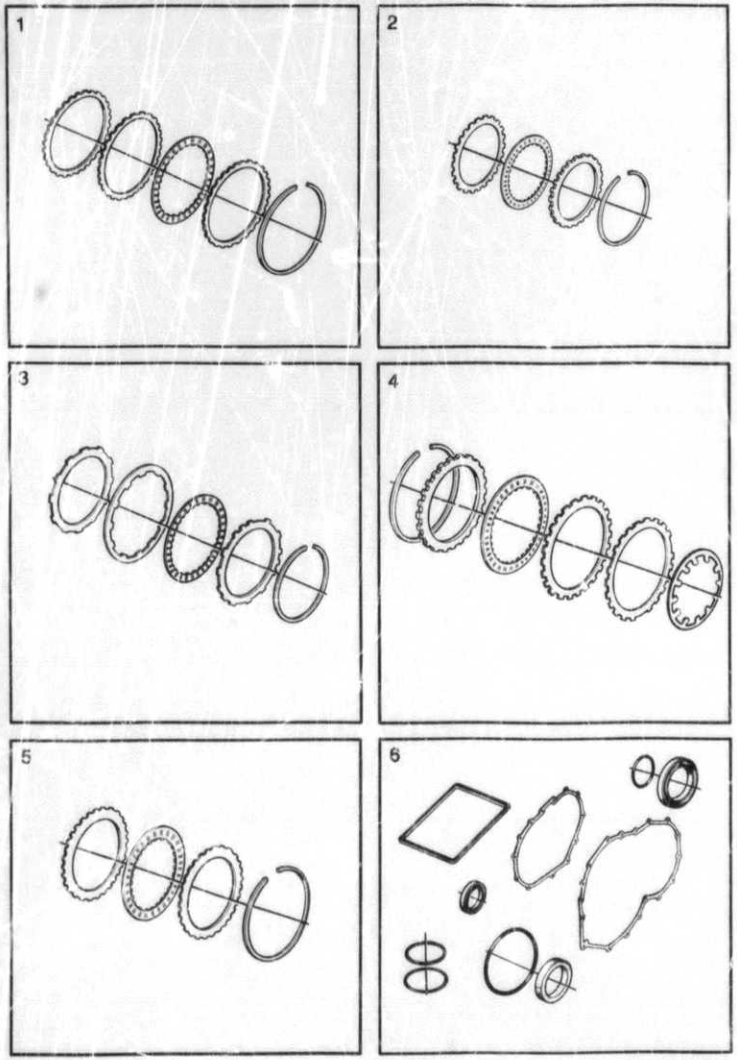

F3539 CAC90

Complete set
3-K12
Transmission

Satser
Kraftöverföring

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650		75 52 342			1	.Seal	.Tätning	5
0660		75 56 228			1	.Gasket	.Packning	3
0670		75 56 996			2	.O-ring	.O-ring	5
0680		75 58 356			2	.Sealing ring	.Tätningsring	3
0690		*75 58 406*		NLS - USE 4280582	1	.Shaft seal	.Axeltätning	5
0700		75 70 542			1	.Gasket	.Packning	3
0710		75 71 391			1	.Sealing ring	.Tätningsring	5
0720		75 72 175			1	.Sealing ring	.Tätningsring	3
0730		75 92 223			1	.Seal	.Tätning	5
0740		*75 92 231*		NLS - USE 4280376	1	.Seal	.Tätning	5
0750		75 92 330			1	.Gasket	.Packning	2
0760		75 94 120			1	.O-ring	.O-ring	3
0770		75 94 146			2	.O-ring	.O-ring	3
0780		75 94 179			2	.O-ring	.O-ring	3
0790		75 94 187			1	.O-ring	.O-ring	3
0800		75 94 898			1	.O-ring	.O-ring	3
0810		75 95 325			1	.O-ring	.O-ring	5
0820		75 97 776			1	.O-ring	.O-ring	3
0830		87 24 874			1	.Seal	.Tätning	4
0840								
0850	6	74 96 102		B202, A	X	Gasket kit Stage 3	Packningsats Steg 3	3
0860								
0870		40 26 936			1	.O-ring	.O-ring	5
0880		41 19 244			1	.Sealing ring	.Tätningsring	3
0890		75 52 151			3	.O-ring	.O-ring	5
0900		75 52 193			1	.O-ring	.O-ring	5
0910		75 52 201			1	.O-ring	.O-ring	5
0920		75 52 235			1	.O-ring	.O-ring	5
0930		75 52 243			1	.O-ring	.O-ring	5
0940		75 52 250			1	.O-ring	.O-ring	5
0950		75 52 268			1	.O-ring	.O-ring	5
0960		75 52 276			1	.Shaft seal	.Axeltätning	3
0970		75 52 342			1	.Seal	.Tätning	5
0980		75 56 228			1	.Gasket	.Packning	3
0990		75 56 996			2	.O-ring	.O-ring	5
1000		75 57 457			2	.Piston ring	.Kolvring	5
1010		75 57 465			2	.Seal	.Tätning	5
1020		75 58 356			2	.Sealing ring	.Tätningsring	3
1030		*75 58 406*		NLS - USE 4280582	1	.Shaft seal	.Axeltätning	5
1040		75 70 542			1	.Gasket	.Packning	3
1050		75 71 391			1	.Sealing ring	.Tätningsring	5
1060		75 72 175			1	.Sealing ring	.Tätningsring	3
1070		75 74 833			1	.O-ring	.O-ring	5
1080		75 92 223			1	.Seal	.Tätning	5
1090		*75 92 231*		NLS - USE 4280376	1	.Seal	.Tätning	5
1100		75 92 330			1	.Gasket	.Packning	2
1110		75 94 120			1	.O-ring	.O-ring	3
1120		75 94 146			2	.O-ring	.O-ring	3
1130		75 94 153			1	.O-ring	.O-ring	5
1140		75 94 161			1	.O-ring	.O-ring	5
1150		75 94 179			2	.O-ring	.O-ring	3
1160		75 94 187			1	.O-ring	.O-ring	3
1170		75 94 880			2	.O-ring	.O-ring	3
1180		75 94 898			1	.O-ring	.O-ring	3
1190		75 95 325			1	.O-ring	.O-ring	5
1200		75 97 354			1	.O-ring	.O-ring	5
1210		75 97 776			1	.O-ring	.O-ring	3
1220		87 24 874			1	.Seal	.Tätning	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

4 GROUP INDEX

Clutch	3-H06
Clutch control	3-H08
Gear box, manual	3-H12
Gear box control, manual	3-I08
Gear box, automatic	3-I16
Gear box control, automatic	3-J24
Complete sets	3-K04

4-A02



Brakes
Bromsar
Frenos

TABLE OF CONTENTS

Front wheel brake		5 : 5	4-A06
Rear wheel brake		5 : 7	4-A08
Footbrake system			
	Master cylinder and power brake unit -1992	5 : 9	4-A10
	Hydraulic unit ABS, Mark II	5 : 11	4-A12
	Hydraulic unit ABS, 1993-, Mark IV	5 : 15	4-A16
	Brake lines -1992	5 : 19	4-A20
	Brake lines ABS, Mark II	5 : 21	4-A22
	Brake lines ABS, 1993-, Mark IV	5 : 23	4-A24
	Brake operation LHD	5 : 25	4-B02
	Brake operation RHD	5 : 27	4-B04
Parking brake system		5 : 29	4-B06
Complete sets			
	Brakes	5 : 31	4-B08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

042
300
320
340
360
380
440
460
480
500
510
515
520
530
535
540
550
560
570
575
580
600
620
1120
1140
1160
1180
1200
1260
1280
1300
1320
1330
1335
1340
1350
1355
1360
1370
1380
1390
1395
1400
1410
1420

INNEHÅLLSFÖRTECKNING

Framhjulsbroms	5 : 5	4-A06
Bakhjulsbroms	5 : 7	4-A08
Fotbromssystem		
Huvudcylinder och vacuumservo -1992	5 : 9	4-A10
Hydralenhet ABS, Mark II	5 : 11	4-A12
Hydralenhet ABS, 1993-, Mark IV	5 : 15	4-A16
Bromsledningar -1992	5 : 19	4-A20
Bromsledningar ABS, Mark II	5 : 21	4-A22
Bromsledningar ABS, 1993-, Mark IV	5 : 23	4-A24
Bromsmanövrering LHD	5 : 25	4-B02
Bromsmanövrering RHD	5 : 27	4-B04
Parkeringsbromssystem	5 : 29	4-B06
Satser		
Bromsar	5 : 31	4-B08

SUMARIO

Freno del	5 : 5	4-A06
Freno tras	5 : 7	4-A08
Sistema de freno de pie		
Cylindro principal y servoasistencia -1992	5 : 9	4-A10
Unidad hydraulico ABS, Mark II	5 : 11	4-A12
Unidad hydraulico ABS, 1993-, Mark IV	5 : 15	4-A16
Conductos de freno -1992	5 : 19	4-A20
Conductos de freno ABS, Mark II	5 : 21	4-A22
Conductos de freno ABS, 1993-, Mark IV	5 : 23	4-A24
Mando de freno de pie D a I	5 : 25	4-B02
Mando de freno de pie D a D	5 : 27	4-B04
Sistema de freno de mano	5 : 29	4-B06
Juegos completos		
Frenos	5 : 31	4-B08

© Saab-Scania AB, Sweden. All rights reserved.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A06 *Front wheel brake* *Framhjulsbroms*

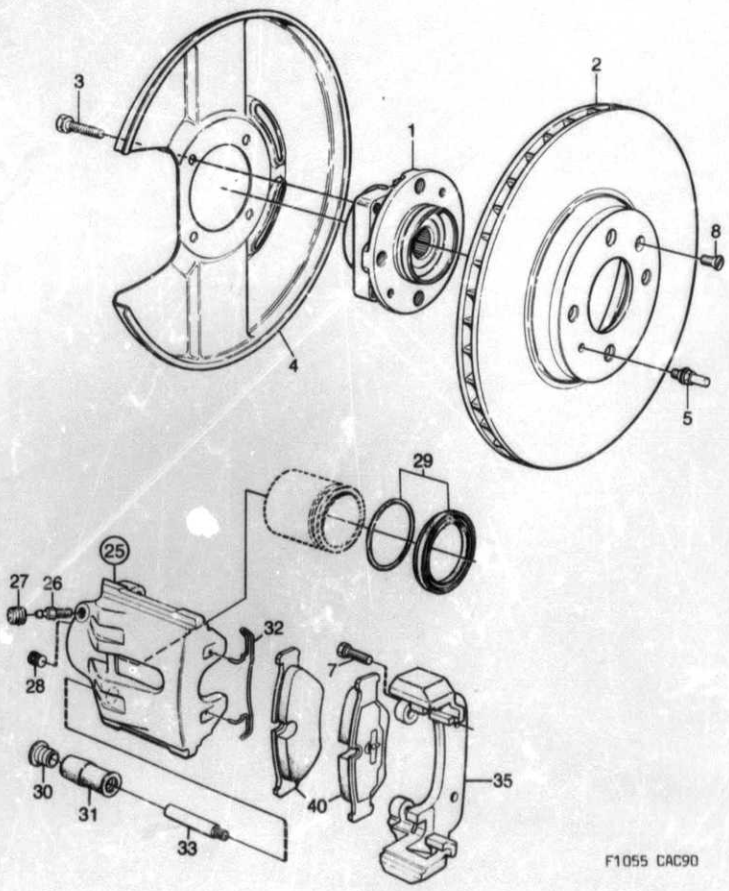

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 71 103*		13)	2	Wheel hub	Hjulnav	5
0020				NLS - USE 4107462		with bearing	med lager	
0030	1	41 07 462		14)	2	Wheel hub	Hjulnav	5
0040						with bearing	med lager	
0050	2	40 02 143			2	Brake disc	Bromsskiva	3
0060	3	80 98 295			8	Screw	Skruv	5
0070	4	40 02 689			2	Protecting plate	Skyddsplåt	6
0080	5	89 68 588			2	Pin	Pinne	4
0090	7	89 53 283			4	Screw	Skruv	5
0100	8	80 56 160			2	Screw	Skruv	5
0110	25	89 68 943		7), LH	1	Brake housing	Bromshus	4
0120	25	89 68 950		7), RH	1	Brake housing	Bromshus	4
0130	26	89 55 411			2	.Bleed screw	.Luftningsskruv	2
0140	27	89 08 576			2	.Protecting casing	.Skyddskåpa	3
0150	28	89 55 973			1	.Plug	.Plugg	6
0160	29	89 68 968		See page 5-031, 4-B08	2	.Gasket kit	.Packningsats	2
0170	30	89 55 478			2	.Cover	.Lock	3
0180	31	89 69 107			2	.Sleeve	.Hylsa	6
0190	32	89 69 123			1	.Spring	.Fjäder	3
0200	33	89 69 651			4	.Slide pin	.Glidpinne	3
0210	35	89 69 115			2	.Retainer	.Hållare	5
0220	40	89 68 976		15), SE, EU	1	Brake pad kit	Bromsklotssats	1
0230				See page 5-031, 4-B08				
0240	40	89 93 768		15), GB, ME, FE, JP, AU, US	1	Brake pad kit	Bromsklotssats	1
0250				See page 5-031, 4-B08				
0260								

7. Also available as exchange unit. Finns även som utbytesenhet.
13. Ch. --L1019065, --L2013668, --L8002058
14. Ch. L1019066--, L2013669--
15. See SI 500-1034 Se SI 500-1034


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A08 Rear wheel brake — Bakhjulsbroms

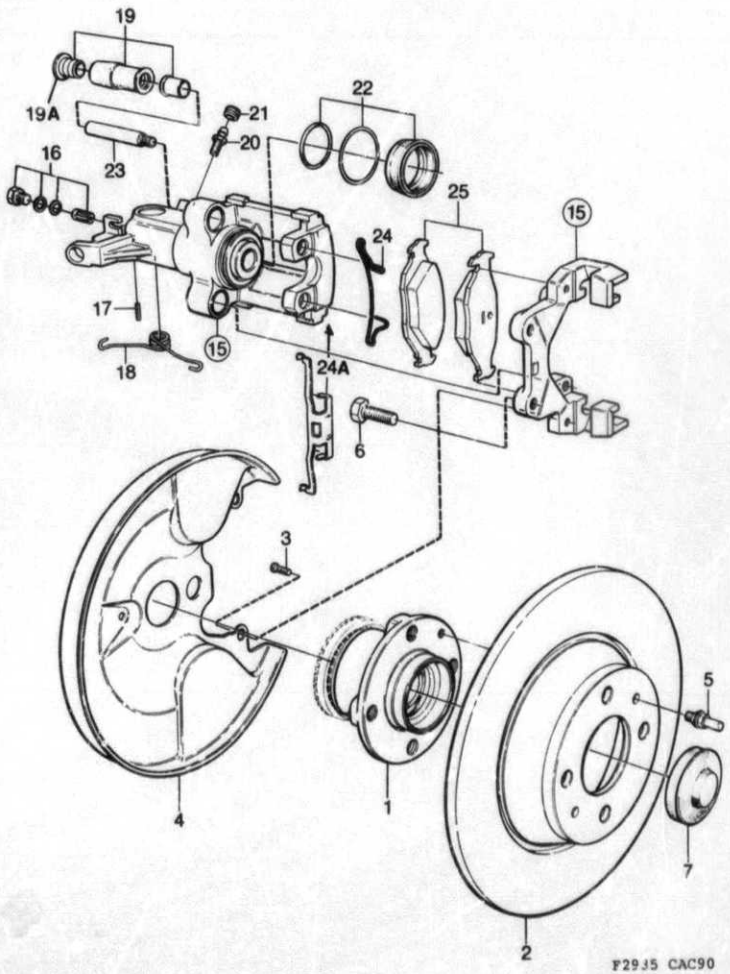

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 71 095		-1992	2	Wheel hub	Hjulnav	5
0020						with bearing	med lager	
0030	1	89 73 406		ABS	2	Wheel hub	Hjulnav	4
0040						with bearing	med lager	
0050	2	89 70 717			2	Brake disc	Bromsskiva	3
0060	3	79 72 441			6	Screw	Skruv	5
0070	4	89 54 547		-1992	2	Protecting plate	Skyddsplåt	6
0080	4	89 63 027		ABS	2	Protecting plate	Skyddsplåt	6
0090	5	89 68 588			2	Pin	Pinne	4
0100	6	89 70 428			4	Screw	Skruv	5
0110	7	89 52 665			2	Cap	Kapsel	2
0120	15	89 70 618		7), LH	1	Brake housing	Bromshus	5
0130	15	89 70 629		7), RH	1	Brake housing	Bromshus	5
0140	16	41 07 703		See page 5-035, 4-B12	1	.Adjuster kit	.Justeringssats	4
0150	17	89 55 437			1	.Pin	.Pinne	3
0160	18	89 55 395		LH	1	.Spring	.Fjäder	3
0170	18	89 55 403		RH	1	.Spring	.Fjäder	3
0180	19	*89 55 445*		NLS - USE 4467064	2	.Guide	.Styrning	6
0190				See page 5-033, 4-B10				
0200	19A	89 55 478			2	..Cover	..Lock	3
0210	20	89 55 411			1	.Bleed screw	.Luftningsskruv	2
0220	21	89 08 576			1	.Protecting casing	.Skyddskåpa	3
0230	22	89 61 849		See page 5-031, 4-B08	1	.Gasket kit	.Packningsats	4
0240	23	89 55 486			2	.Slide pin	.Glidpinne	3
0250	24	89 70 816			1	.Spring	.Fjäder	3
0260	24A	89 55 528			1	.Spring	.Fjäder	3
0270	25	41 96 317		15)	1	Brake pad kit	Bromsklotssats	1
0280				See page 5-031, 4-B08				


7. Also available as exchange unit. Finns även som utbytesenhet.
15. See SI 500-1034 Se SI 500-1034

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

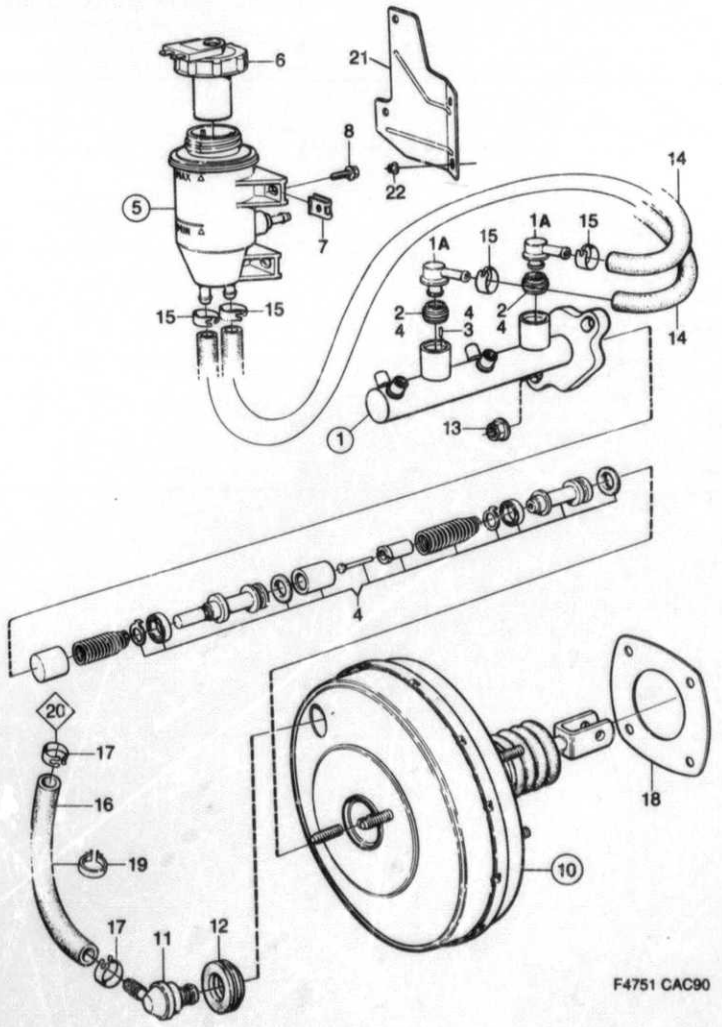

F4751 CAC90


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	89 64 892			1	Master cylinder	Huvudcylinder	4
0030	1A	89 58 175			2	.Nipple	.Nippel	6
0040	2	*89 86 911*	S	-1991 NLS - USE 4425229	2	.Gasket	.Packning	4
0050	2	44 25 229	S	1992	2	.Gasket	.Packning	4
0065	3	89 65 808	S		1	.Pin	.Pinne	4
0085	4	89 65 329		See page 5-031, 4-B08	1	.Sealing kit	.Tätningssats	4
0100	5	89 59 132			1	Reservoir	Behållare	5
0120	6	89 59 157			1	.Level warner	.Nivåvarnare	5
0140	7	94 41 239			2	Clip nut	Clipsmutter	3
0160	8	*79 73 126*		-1991 NLS - USE 7972128	2	Screw	Skruv	5
0170	8	79 78 638		1992	2	Screw	Skruv	5
0180	10	89 58 423			1	Vacuum servo	Vakuumservo	5
0200	11	89 86 705			1	.Non-return valve	.Backventil	4
0220	12	89 86 713			1	.Seal	.Tätning	6
0240	13	79 69 306			2	Lock nut	Låsmutter	5
0265	14	*89 68 034*		-1991 NLS - USE 4425211	2	Hose	Slang	5
0270	14	44 25 211		1992	2	Hose	Slang	5
0280	15	79 73 522			4	Hose clamp	Slangklamma	5
0300	16	89 66 954		B202	1	Vacuum hose	Vakuumslang	5
0310	16	89 66 954		B234, L=660 MM	1	Vacuum hose	Vakuumslang	5
0320	17	89 43 177			2	Hose clamp	Slangklämma	5
0340	18	89 58 357			1	Seal	Tätning	6
0360	19	85 39 587			1	Clip	Clips	5
0370	20			See page 2-085, 1-F14		Intake manifold	Inloppsrör	
0380	21	41 95 285		1992	1	Bracket	Konsol	6
0390	22	79 77 929		1992	2	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

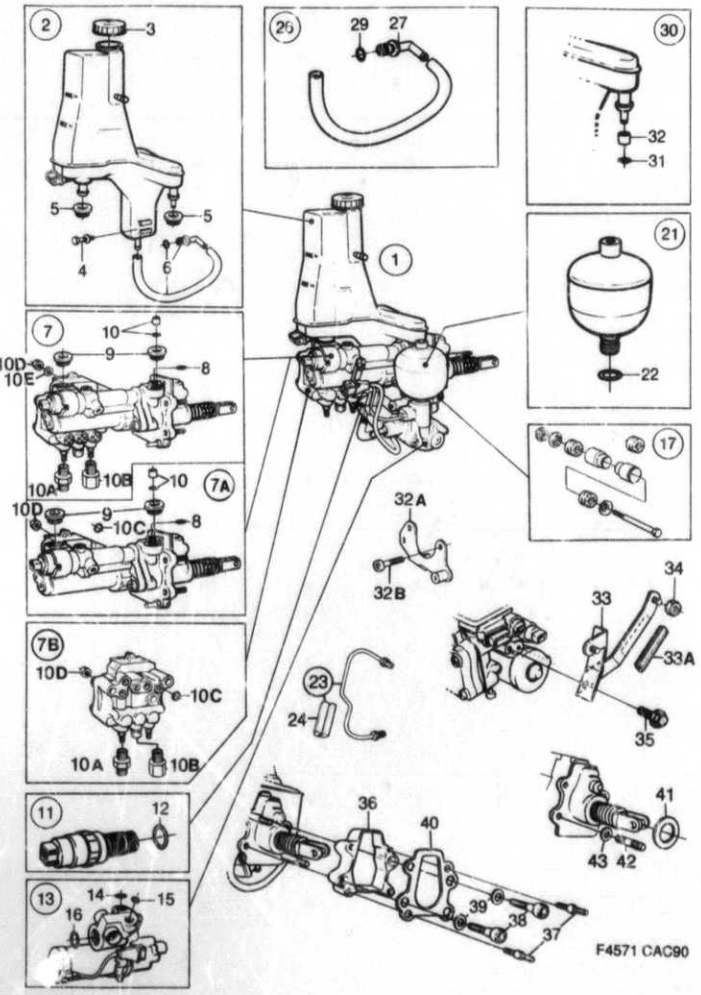

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 00 113		-1991	1	Hydraulic unit	Hydraulenhet	6
0020	1	41 04 261		1992	1	Hydraulic unit	Hydraulenhet	6
0030	1	*40 03 406*		-1992, TCS, M NLS - USE 4425732	1	Hydraulic unit	Hydraulenhet	6
0040	1	44 25 732		1993-, TCS, M	1	Hydraulic unit	Hydraulenhet	6
0050	1	41 04 261		-1992, ASR, A	1	Hydraulic unit	Hydraulenhet	6
0060	2	*40 03 141*		1990	1	.Reservoir	.Behållare	6
0070				See page 5-033, 4-B10				
0070				NLS - USE 4190617				
0080	2	41 90 617		1991-	1	.Reservoir	.Behållare	6
0090				See page 5-033, 4-B10				
0100	2	41 90 617		TCS	1	.Reservoir	.Behållare	6
0110				See page 5-033, 4-B10				
0120	3	89 66 152		1990	1	..Cover	..Lock	4
0130	3	*41 07 819*		1991-1992 NLS - USE 4425690	1	..Cover	..Lock	4
0140	3	*41 07 819*		-1992, TCS NLS - USE 4425690	1	..Cover	..Lock	4
0150	3	44 25 690		1993-, TCS	1	..Cover	..Lock	4
0160	4	89 66 368			1	..Screw	..Skruv	5
0170	5	89 66 335			2	..Rubber bushing	..Gummibussning	6
0180	6	40 02 861		See page 5-033, 4-B10	1	..Hose kit	..Slangsats	5
0190	7	40 03 182		-1991, NOT TCS	1	.Master cylinder kit	.Huvudcylindersats	6
0200				See page 5-031, 4-B08				
0210	7A	41 95 897		See page 5-035, 4-B12	1	..Master cylinder kit	..Huvudcylindersats	6
0220	7A	41 95 889		TCS, M	1	..Master cylinder kit	..Huvudcylindersats	6
0230				See page 5-035, 4-B12				
0240	8	*89 67 267*		NLS - USE 8967408	1	...O-ring	...O-ring	2
0250	9	89 66 335			2	...Rubber bushing	...Gummibussning	6
0260	10	89 67 390		See page 5-035, 4-B12	1	...O-ring kit	...O-ringsats	2
0270	10C	41 95 855			5	...O-ring	...O-ring	2
0280	10D	80 74 106			3	...Nut	...Mutter	5
0290	7B	41 95 863		-1991	1	..Valve body	..Ventilblock	6
0300	7B	41 95 871		TCS, M	1	..Valve body	..Ventilblock	6
0310	7B	41 95 871		1992-	1	..Valve body	..Ventilblock	6
0320	10A	89 66 376			2	...Intermediate section	...Mellanstycke	5
0330	10B	89 66 384			1	...Intermediate section	...Mellanstycke	5
0340	10C	41 95 855			5	...O-ring	...O-ring	2
0350	10D	80 74 106			3	...Nut	...Mutter	5
0360	10E	79 16 497			3	..Washer	..Bricka	5
0370	11	89 67 309		See page 5-033, 4-B10	1	.Pressure monitor	.Tryckvakt	4
0380	12	89 67 325			1	..O-ring	..O-ring	2
0390	13	40 03 158		See page 5-033, 4-B10	1	.Pump kit	.Pumpsats	6
0400	14	89 67 234			1	..O-ring	..O-ring	2
0410	15	*89 67 267*		NLS - USE 8967408	1	..O-ring	..O-ring	2
0420	16	89 67 325			1	..O-ring	..O-ring	2
0430	17	40 02 895		See page 5-033, 4-B10	1	.Suspension kit	.Upphängningssats	5
0440	21	40 02 267		See page 5-033, 4-B10	1	.Accumulator	.Ackumulator	5
0450	22	89 67 234			1	..O-ring	..O-ring	2
0460	23	89 93 644			1	.Delivery pipe	.Tryckrör	5
0470	23	41 95 772		TCS	1	.Delivery pipe	.Tryckrör	5
0480	24	*40 02 093*		NLS - USE 8993644	1	..Absorber	..Dämpare	5
0490	26	40 02 861		See page 5-035, 4-B12	1	.Hose kit	.Slangsats	5
0500	27	*91 04 738*		1) NLS	1	..Nipple	..Nippel	
0510	29	40 03 117			1	..O-ring	..O-ring	5
0520	30	89 67 390		See page 5-035, 4-B12	1	.O-ring kit	.O-ringsats	2
0530	31	*89 66 681*		NLS - USE 8967390	1	..O-ring	..O-ring	4
0540	32	*89 66 939*		NLS - USE 8967390	1	..Sleeve	..Hylsa	6
0550	32A	40 02 069			1	.Holder	.Hållare	5
0560	32A	41 90 773		TCS	1	.Holder	.Hållare	5
0570	32B	89 66 491			2	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A14

Hydraulic unit ABS Mark II

Hydraulenhet ABS Mark II

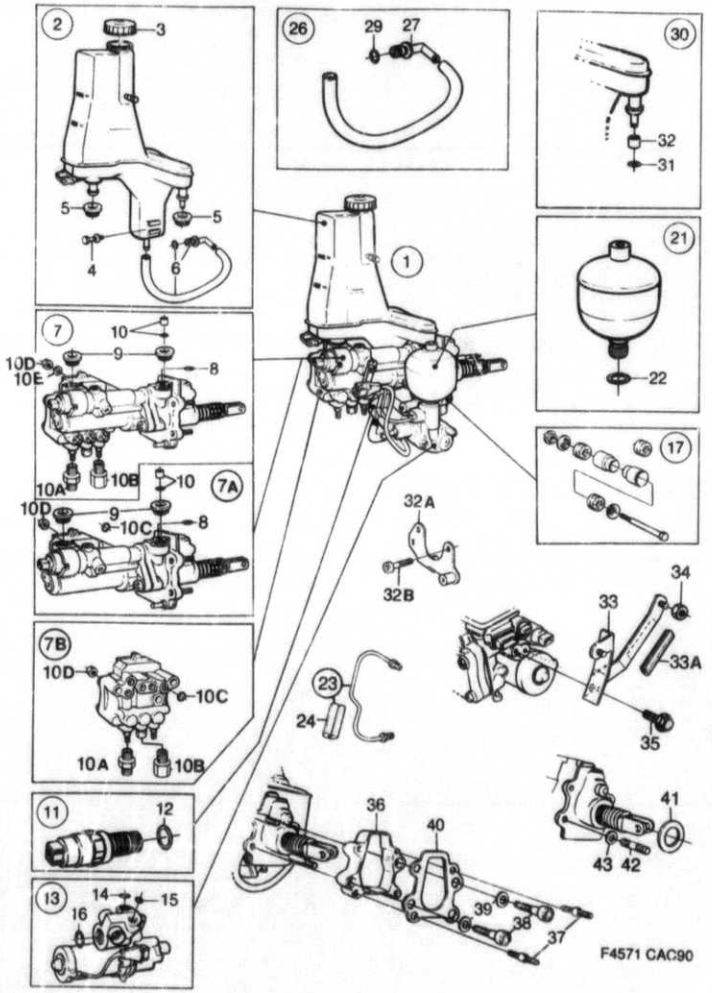

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	33	89 67 028		11) ..	1	Stay	Stag	5
0590	33	40 04 024		12), -1991	1	Stay	Stag	5
^600	33A	85 64 973		12), -1991	1	. Protecting moulding	. Skyddslist	6
0610	34	79 71 658		-1991	2	Nut	Mutter	5
0620	35	79 69 223		-1991	1	Screw	Skruv	5
0630	36	89 66 012			1	Adapter	Adapter	6
0640	37	89 66 038			2	Stud	Pinnskruv	5
0650	38	80 98 311			2	Screw	Skruv	5
0660	39	80 29 993			2	Washer	Bricka	5
0670	40	91 04 456			2	Seal	Tätning	6
0680	41	41 03 420		TCS	1	Seal	Tätning	5
0690	42	91 04 795		TCS	4	Stud	Pinnskruv	5
0700	43	89 29 531		TCS	4	Sealing washer	Tätningsbricka	5

11. Ch. --L1018334, --L2013242, --L8001845
12. Ch. L1018335--, L2013243--, L8001346--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A16

Hydraulic unit ABS 1993-, Mark IV

Hydraulenhet ABS 1993-, Mark IV

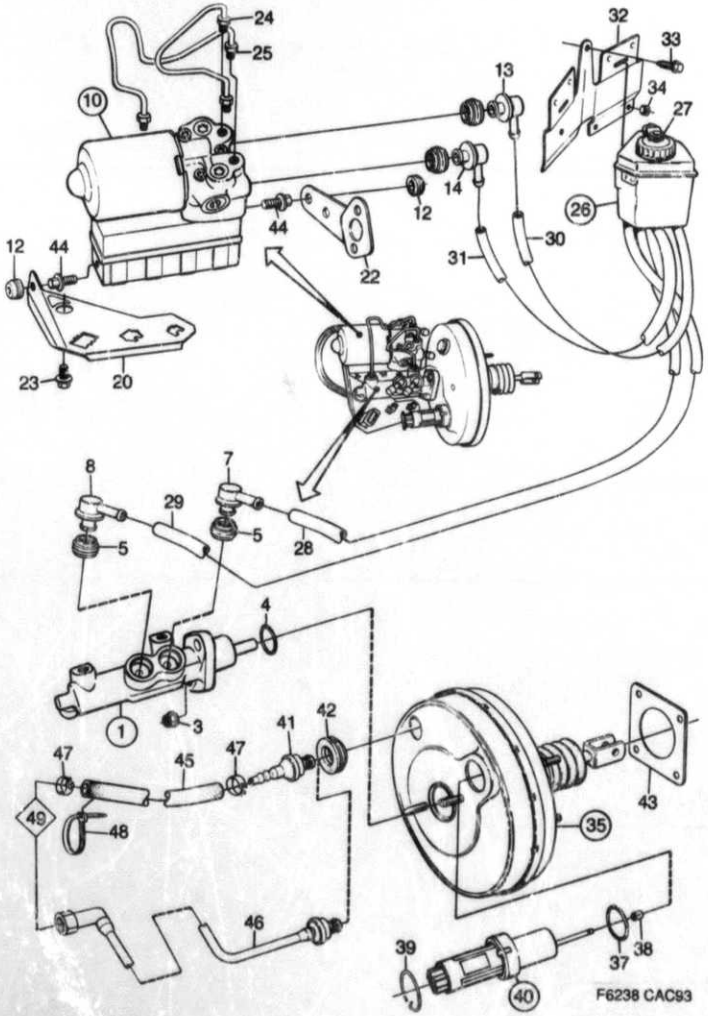

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 98 438			1	Master cylinder	Huvudcylinder	6
0030	3	41 98 396			2	.Nut	.Mutter	5
0040	4	41 98 503			1	.Sealing ring	.Tätningsring	4
0050	5	41 98 297			2	Pipe end	Stos	6
0060	7	41 98 305			1	Connection nipple	Anslutningsnippel	6
0065	8	41 98 313			1	Connection nipple	Anslutningsnippel	6
0100	10	41 98 446			1	Hydraulic unit	Hydraulenhet	6
0120	12	*41 98 107*	S	1) NLS	3	.Rubber bushing	.Gummibussning	6
0130	13	41 98 222			1	.Nipple	.Nippel	6
0140	14	41 98 230			1	.Nipple	.Nippel	6
0200	20	*41 98 065*	S	1) NLS	1	Bracket	Konsol	6
0220	22	41 98 073			1	Bracket	Konsol	6
0230	23	*41 98 511*	S	1) NLS	1	Screw	Skruv	5
0240	24	*41 98 081*	S	1) NLS	1	Brake pipe	Bromsrör	5
0250	25	*41 98 099*	S	1) NLS	1	Brake pipe	Bromsrör	5
0260	26	44 25 724		(4197901)	1	Reservoir	Behållare	5
0270	27	44 25 708		(4198263)	1	.Cover	.Lock	4
0280	28	*41 98 271*	S	1) NLS	1	.Hose	.Slang	5
0290	29	*41 98 289*	S	1) NLS	1	.Hose	.Slang	5
0300	30	*41 98 123*	S	1) NLS	1	Hose	Slang	5
0310	31	*41 98 131*	S	1) NLS	1	Hose	Slang	5
0320	32	41 97 919			1	Bracket	Konsol	
0330	33	79 78 638			1	Screw	Skruv	5
0340	34	79 77 929			2	Nut	Mutter	5
0350	35	41 98 412			1	Brake servo	Bromsservo	6
0370	37	41 98 339			1	.O-ring	.O-ring	2
0380	38	41 98 354		1,2 MM	1	.Spacer white	.Distans vit	6
0390								
0400	38	41 98 362		2,4 MM	1	.Spacer green	.Distans grön	6
0410								
0420	38	41 98 370		3,6 MM	1	.Spacer blue	.Distans blå	6
0430								
0440	38	41 98 388		4,8 MM	1	.Spacer red	.Distans röd	6
0450								
0460	39	41 98 347			1	.Clamping ring	.Spännring	5
0470	3	41 98 396			2	.Nut	.Mutter	5
0480	4	41 98 503			1	.Sealing ring	.Tätningsring	4
0490								
0500	40	41 98 420			1	Pedal sensor	Pedalgivare	6
0510	37	41 98 339			1	.O-ring	.O-ring	2
0520	38	41 98 354		1,2 MM	1	.Spacer white	.Distans vit	6
0530								
0540	38	41 98 362		2,4 MM	1	.Spacer green	.Distans grön	6
0550								
0560	38	41 98 370		3,6 MM	1	.Spacer blue	.Distans blå	6
0570								
0580	38	41 98 388		4,8 MM	1	.Spacer red	.Distans röd	6
0590								
0600	39	41 98 347			1	.Clamping ring	.Spännring	5
0610								
0620	41	89 86 705			1	Non-return valve	Backventil	4
0630	42	41 98 149			1	Pipe end	Stos	6
0640	43	89 58 357			1	Seal	Tätning	6
0650	44	*41 98 529*	S	1) NLS	3	Screw	Skruv	5
0660	45	89 66 954		B202	1	Vacuum hose	Vakuumslang	5
0670	45	89 66 954		B234 I, L=660 MM	1	Vacuum hose	Vakuumslang	5
0675	46	44 25 468		B234 TURBO	1	Vacuum pipe	Vakuumrör	5
0680	47	89 43 177			2	Hose clamp	Slangklämma	5
0690	48	73 98 373		16)	1	Clamp	Klammer	5
0700	48	79 71 880		17)	1	Tensioning band	Spännband	4

1. Not as separate spare part. Ej som separat reservdel.
16. Ch. --P1003331
17. Ch. P1003332--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A18

Hydraulic unit ABS
1993-, Mark IV

Hydraulenhet ABS
1993-, Mark IV

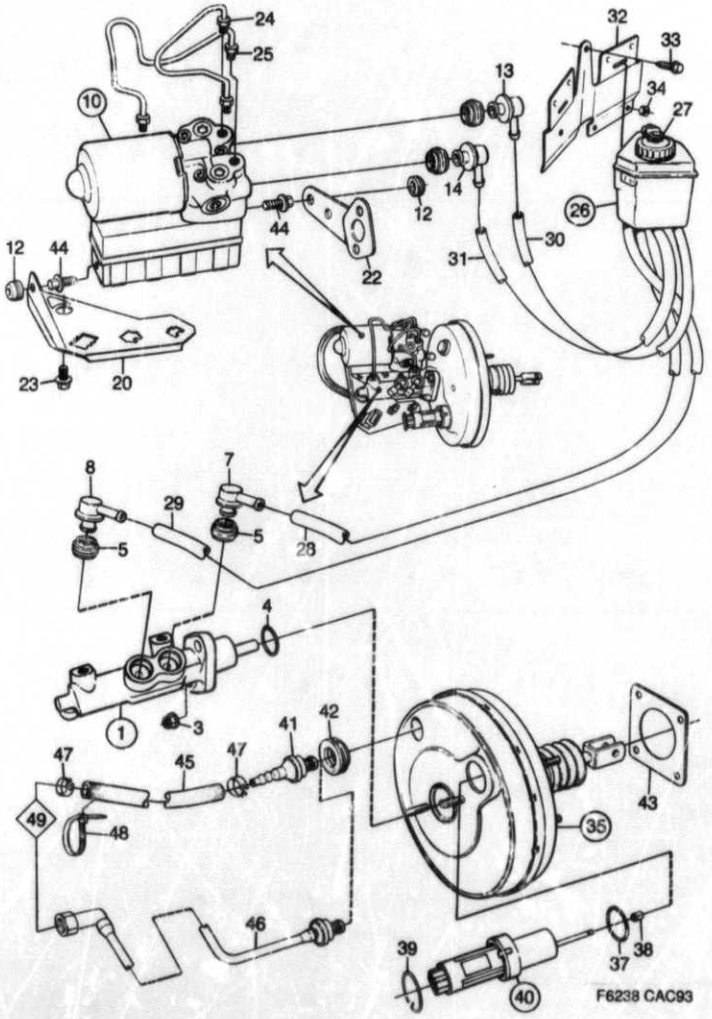

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0800	49			See page 2-085, 1-F14		Intake manifold	Inloppsrör	
0810		41 98 461		See page 5-035, 4-B12	1	Attachment kit	Fästsats	6
0820		41 98 479		See page 5-037, 4-B14	1	Hose kit	Slangsats	5
0830		41 98 487		See page 5-035, 4-B12	1	Brake pipe	Bromsrör	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-A20

Brake lines -1992

Bromsledningar -1992

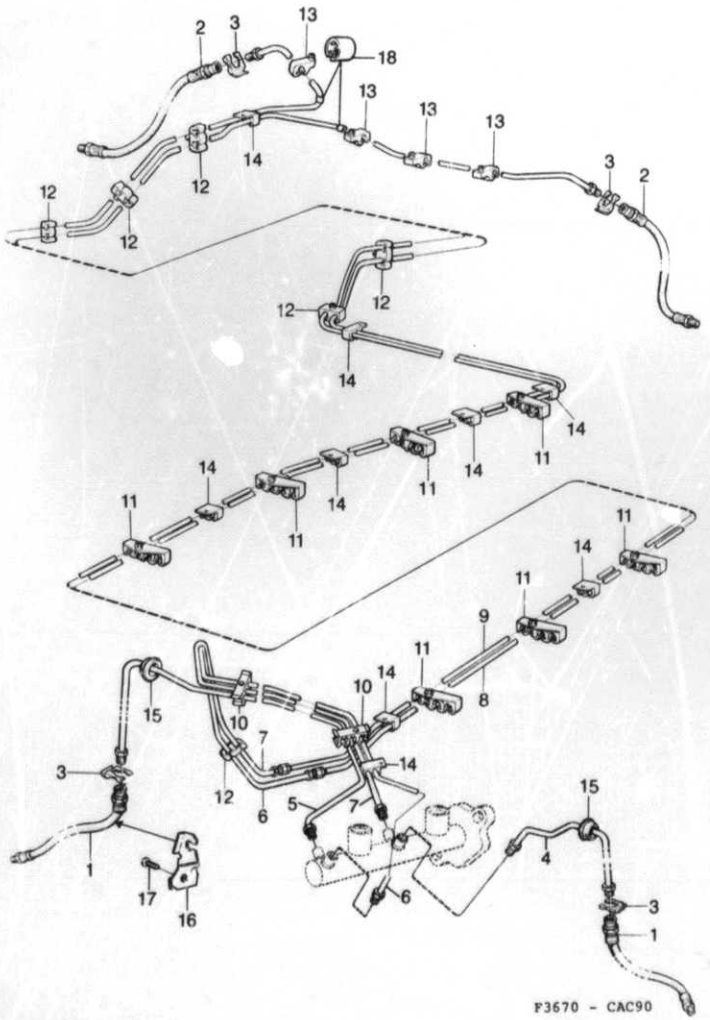

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	40 02 341			2	Brake hose	Bromsslang	4
0040	2	89 69 206			2	Brake hose	Bromsslang	4
0060	3	89 52 699			4	Bracket	Hållare	5
0085	4	89 64 843		LH	1	Brake pipe	Bromsrör	4
0105	5	*40 01 384*		-1991, RH NLS - USE 4195665	1	Brake pipe	Bromsrör	4
0105								
0110	5	41 95 665		1992, RH	1	Brake pipe	Bromsrör	4
0125	6	89 64 769		-1991, LH	1	Brake pipe	Bromsrör	4
0130	6	41 95 657		1992, LH	1	Brake pipe	Bromsrör	4
0145	7	89 64 728		-1991, RH	1	Brake pipe	Bromsrör	4
0150	7	41 95 640		1992, RH	1	Brake pipe	Bromsrör	4
0165	8	41 03 875		-1991, LH	1	Brake pipe	Bromsrör	6
0170	8	41 96 333		1992, LH	1	Brake pipe	Bromsrör	6
0180	9	89 59 306		-1991, RH	1	Brake pipe	Bromsrör	6
0190	9	41 96 325		1992, RH	1	Brake pipe	Bromsrör	6
0200	10	89 61 021		-1991	2	Tube clamp	Rörklamma	5
0210	10	41 94 221		1992	2	Tube clamp	Rörklamma	5
0225	11	89 68 166			7	Tube clamp	Rörklamma	5
0240	12	89 59 520			X	Tube clamp	Rörklamma	5
0260	13	89 59 538		-1991	5	Tube clamp	Rörklamma	5
0280	14	89 58 530			8	Clamp	Klammer	5
0300	15	84 59 497			2	Plug	Plugg	5
0310	16	69 73 861			1	Bracket	Fäste	4
0320	17	79 71 294			1	Screw	Skruv	5
0330	18	89 65 097			4	Tube clamp	Rörklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08


Footbrake system

4-A22

Brake lines ABS Mark II

Fotbromssystem

Bromsledningar ABS Mark II

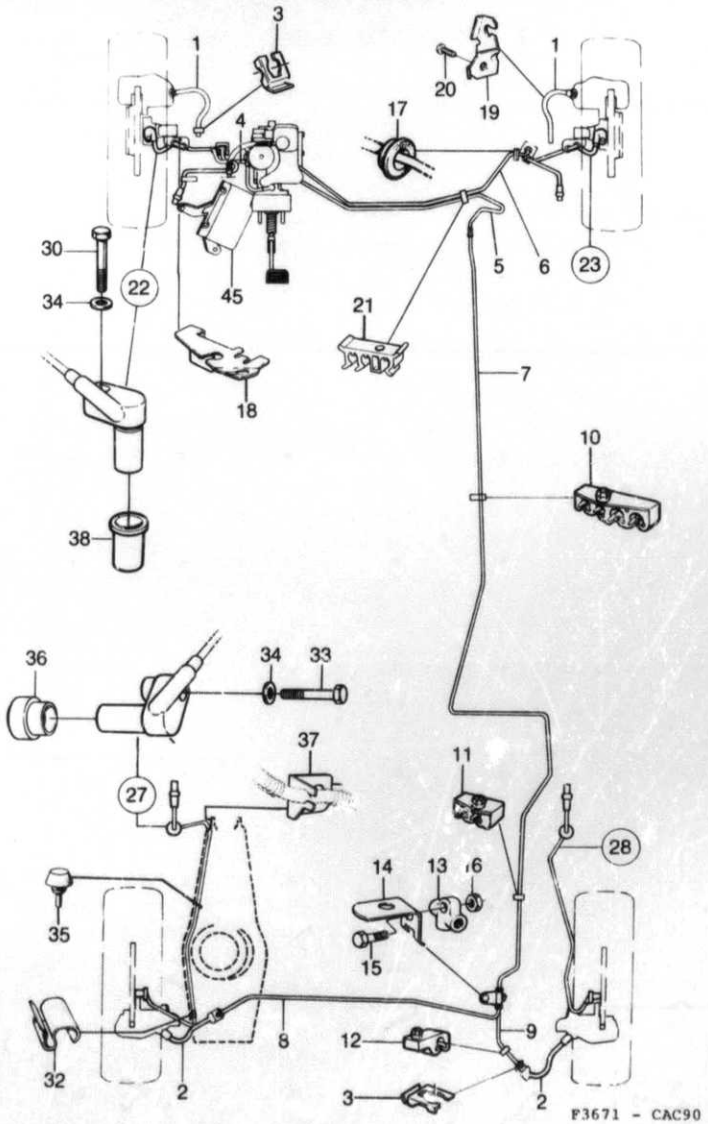


0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	40 02 341			2	Brake hose	Bromsslang	4
0040	2	89 69 206			2	Brake hose	Bromsslang	4
0060	3	89 52 699			4	Bracket	Hållare	5
0090	4	40 01 970			1	Brake pipe	Bromsrör	5
0110	5	40 01 996		-1991	1	Brake pipe	Bromsrör	6
0120	5	41 95 673		1992-	1	Brake pipe	Bromsrör	6
0130	6	40 01 350		-1991	1	Brake pipe	Bromsrör	6
0135	6	41 95 681		1992-	1	Brake pipe	Bromsrör	6
0140	7	41 03 891		-1991	1	Brake pipe	Bromsrör	6
0150	7	41 96 341		1992-	1	Brake pipe	Bromsrör	6
0170	8	41 05 946			1	Brake pipe	Bromsrör	6
0180	9	41 05 920			1	Brake pipe	Bromsrör	6
0200	10	89 58 548			7	Tube clamp	Rörklamma	
0220	11	89 59 520			X	Tube clamp	Rörklamma	5
0240	12	89 59 538		-1991	5	Tube clamp	Rörklamma	5
0260	13	89 64 686			1	T-piece	T-stycke	5
0280	14	41 05 961			1	Bracket	Fäste	5
0300	15	80 82 968		-1992	1	Screw	Skruv	5
0310	15	91 66 331		1993-	1	Screw	Skruv	5
0330	16	81 51 235			1	Nut	Mutter	5
0340	17	84 59 497			2	Plug	Plugg	5
0360	18	40 03 042		LH	1	Bracket	Hållare	5
0380	18	40 03 059		RH	1	Bracket	Hållare	5
0390	19	69 73 861			1	Bracket	Fäste	4
0400	20	79 71 294			1	Screw	Skruv	5
0410	21	41 94 221		1992-	3	Tube clamp	Rörklamma	5
0440	22	40 01 459		LH	1	Sensor	Givare	3
0460	23	40 01 467		RH	1	Sensor	Givare	3
0540	27	40 01 475		LH	1	Sensor	Givare	3
0560	28	40 01 483		RH	1	Sensor	Givare	3
0600	30	80 21 917			4	Screw	Skruv	5
0650	32	89 31 461			4	Clamp	Klammer	5
0660	33	80 21 925			2	Screw	Skruv	5
0680	34	80 29 951		-1992	4	Washer	Bricka	5
0890	34	91 66 364		1993-	4	Washer	Bricka	5
0710	35	89 44 795			2	Rubber plug	Gummiplugg	5
0720	36	89 63 019			2	Sleeve	Hylsa	5
0740	37	40 02 127		LH	1	Bracket	Hållare	5
0745	37	40 02 135		RH	1	Bracket	Hållare	5
0750	38	89 65 634			2	Sleeve	Hylsa	5
0760	45			See page 3A-119, 2-E24	1	Electronic unit	Elektronikenhet	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

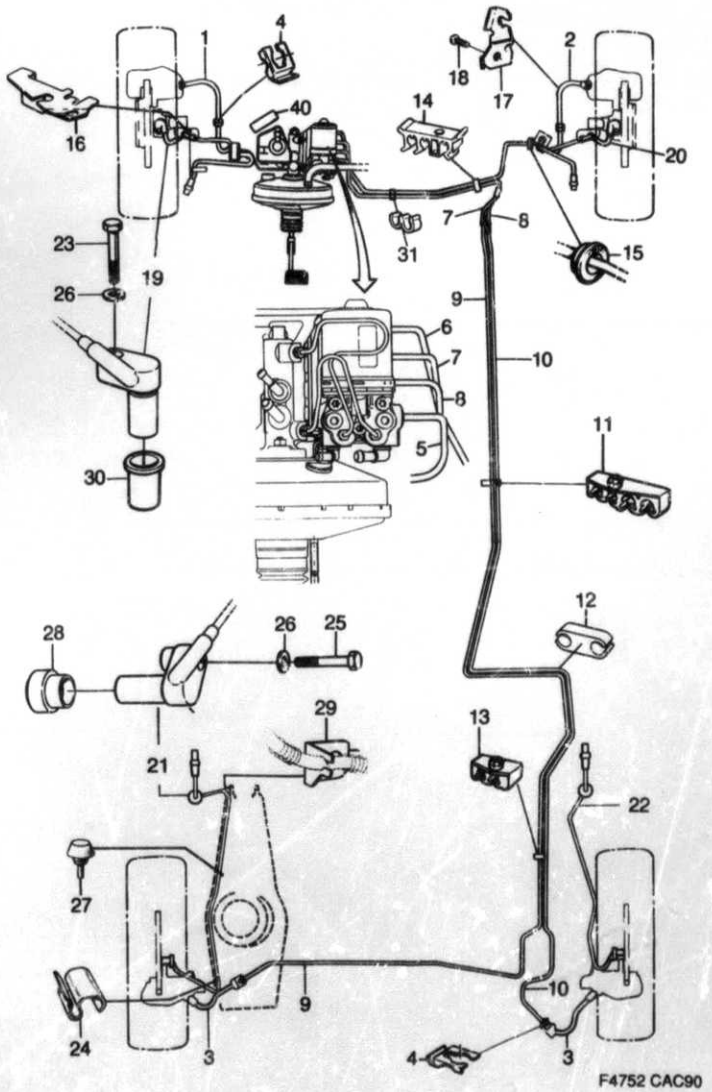

Footbrake system

4-A24

Brake lines ABS
1993-, Mark IV

Fotbromssystem

Bromsledningar ABS
1993-, Mark IV

0280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 02 341		LH	1	Brake hose	Bromsslang	4
0020	2	40 02 341		RH	1	Brake hose	Bromsslang	4
0030	3	89 69 206			2	Brake hose	Bromsslang	4
0040	4	89 52 699			4	Bracket	Hållare	5
0050	5	41 97 935		LH	1	Brake pipe	Bromsrör	4
0060	6	41 97 943		RH	1	Brake pipe	Bromsrör	4
0070	7	41 97 968		LH	1	Brake pipe	Bromsrör	4
0080	8	41 97 950		RH	1	Brake pipe	Bromsrör	4
0090	9	41 96 333		LH	1	Brake pipe	Bromsrör	6
0100	10	41 96 325		RH	1	Brake pipe	Bromsrör	6
0110	11	89 68 166			7	Tube clamp	Rörklamma	5
0120	12	89 58 530			3	Clamp	Klammer	5
0130	13	89 59 520			9	Tube clamp	Rörklamma	5
0140	14	41 94 221			3	Tube clamp	Rörklamma	5
0150	15	84 59 497			2	Plug	Plugg	5
0160	16	40 03 042		LH	1	Bracket	Hållare	5
0170	16	40 03 059		RH	1	Bracket	Hållare	5
0180	17	69 73 861			1	Bracket	Fäste	4
0190	18	79 71 294			1	Screw	Skruv	5
0200	19	40 01 459		LH	1	Sensor	Givare	3
0210	20	40 01 467		RH	1	Sensor	Givare	3
0220	21	40 01 475		LH	1	Sensor	Givare	3
0230	22	40 01 483		RH	1	Sensor	Givare	3
0240	23	80 21 917			2	Screw	Skruv	5
0250	24	89 31 461			4	Clamp	Klammer	5
0260	25	80 21 925			2	Screw	Skruv	5
0270	26	80 29 951		-1992	4	Washer	Bricka	5
0275	26	91 66 364		1993-	4	Washer	Bricka	5
0280	27	89 44 795			2	Rubber plug	Gummipiugg	5
0290	28	89 63 019			2	Sleeve	Hylsa	5
0295	29	40 02 127		LH	1	Bracket	Hållare	5
0300	29	40 02 135		RH	1	Bracket	Hållare	5
0310	30	89 65 634			2	Sleeve	Hylsa	5
0320	31	91 06 139			2	Tube clamp	Rörklamma	5
0400	40			See page 3A-119, 2-E24	1	Electronic unit	Elektronikenhet	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-B02

Brake operation LHD
Bromsmanövrering LHD

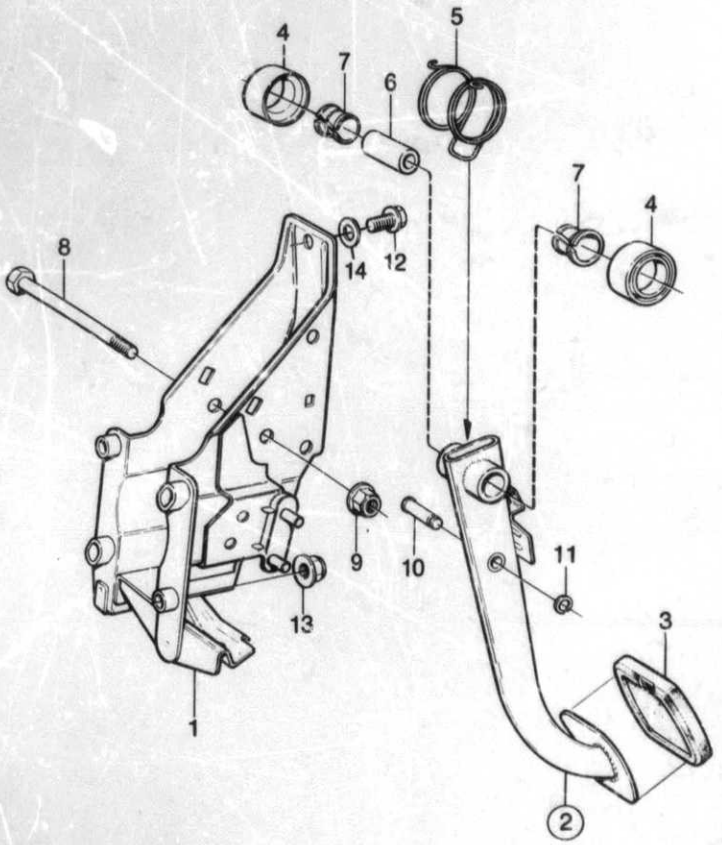

F1061 CAC90

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	89 70 410			1	Bracket	Konsol	6
0035	1	40 00 410		TCS	1	Bracket	Konsol	6
0040	2	40 03 026			1	Brake pedal	Bromspedal	6
0050	2	40 03 034		A	1	Brake pedal	Bromspedal	6
0060	3	89 16 272			1	. Pedal pad	. Pedalgummi²	5
0070	3	89 56 393		A	1	. Pedal pad	. Pedalgummi	5
0090	4	89 70 204			2	Spacer sleeve	Distanshylsa	5
0100	5	89 51 527			1	Spring	Fjäder	6
0120	6	89 50 297			1	Spacer tube	Distansrör	5
0140	7	89 62 128			2	Bearing bushing	Lagerbussning	4
0170	8	79 79 271			1	Screw	Skruv	5
0180	9	73 99 801			1	Lock nut	Låsmutter	5
0200	10	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0220	11	82 52 553			1	Clip	Clips	5
0250	12	79 70 288			1	Screw	Skruv	5
0260	13	79 71 922			4	Nut	Mutter	3
0270	14	89 29 531			1	Sealing washer	Tätningsbricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX


Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

Footbrake system

4-B04 Brake operation RHD

Fotbromssystem

Bromsmanövrering RHD

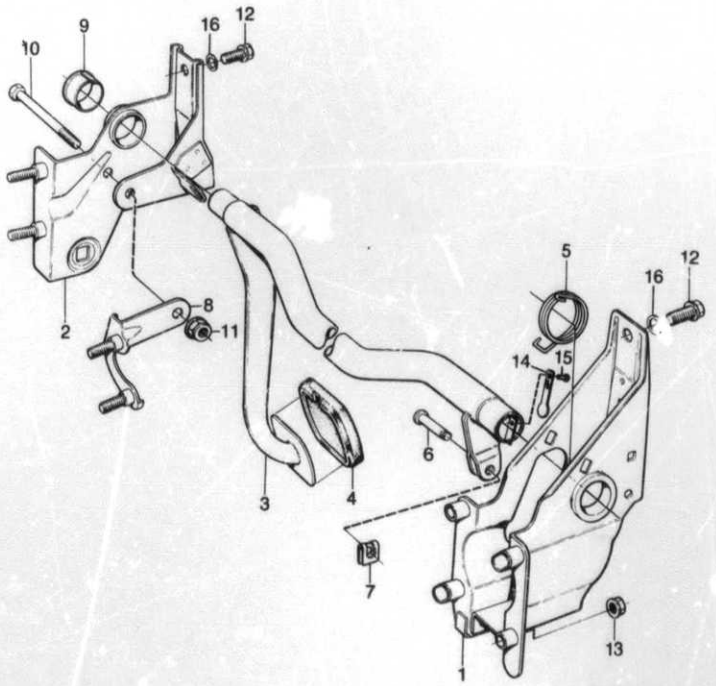

F1062 CAC90

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 65 600		LH	1	Bracket	Konsol	6
0030	1	41 05 268		LH, TCS	1	Bracket	Konsol	6
0050	2	89 70 444			1	Bracket	Konsol	6
0060	3	89 65 618			1	Brake pedal	Bromspedal	6
0070	3	89 65 626		A	1	Brake pedal	Bromspedal	6
0080	4	89 16 272			1	•Pedal pad	•Pedalgummi	5
0090	4	89 56 393		A	1	•Pedal pad	•Pedalgummi	5
0100	5	89 62 300			1	Return spring	Returfjäder	6
0120	6	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0140	7	82 52 553			1	Clip	Clips	5
0160	8	89 57 482			1	Bracket	Konsol	6
0180	9	89 53 390			2	Plastic bushing	Plastbussning	6
0210	10	79 79 248			1	Screw	Skruv	5
0220	11	73 99 801			1	Lock nut	Låsmutter	5
0250	12	79 70 288			2	Screw	Skruv	5
0260	13	79 71 922			8	Nut	Mutter	3
0280	14	89 65 501			1	Stop	Anslag	6
0281						speed control system	farthållningssystem	
0300	15	79 22 800			1	Screw	Skruv	5
0310	16	89 29 531			2	Sealing washer	Tätningsbricka	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

4-B06 *Parking brake system* *Parkeringsbromssystem*

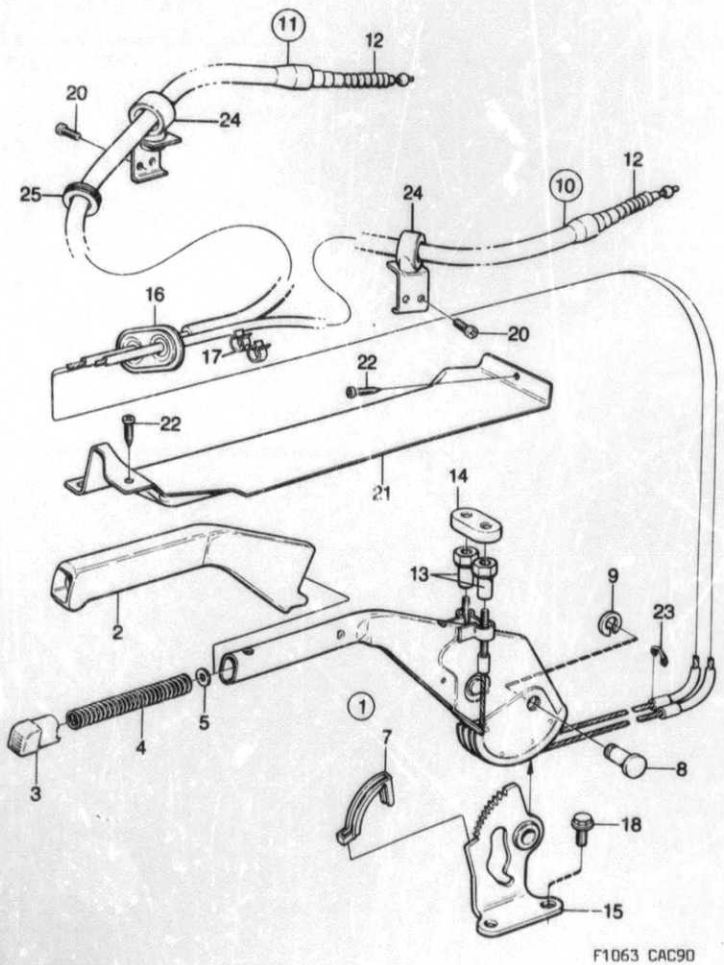


0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 56 179			1	Handbrake lever	Handbromsspak	5
0060	2	89 62 649			1	. Handle	. Handtag	5
0080	3	89 53 788			1	. Push button	. Tryckknapp	5
0100	4	89 53 739			1	. Spring	. Fjäder	5
0120	5	80 29 969			1	. Washer	. Bricka	5
0160	7	89 61 062			1	Slide rail	Glidskena	4
0180	8	89 53 762			1	Bolt	Bult	5
0200	9	*79 15 077*		NLS - USE 7963143	1	E-circlip	Spårryttare	5
0242	10	89 67 481		LH	1	Parking brake cable	Parkeringsbromswire	4
0290	11	89 70 733		RH	1	Parking brake cable	Parkeringsbromswire	4
0300	12	89 54 455			2	. Bellows	. Bälg	2
0320	13	89 53 796			2	Adjusting nut	Justermutter	3
0340	14	89 53 879			1	Turn stop	Vridstopp	6
0360	15	89 53 689			1	Segment	Segment	6
0380	16	89 54 646			1	Grommet	Genomföring	5
0400	17	73 98 464			1	Clamp	Klammer	5
0420	18	79 67 938			2	Screw	Skruv	5
0460	20	79 72 805			2	Screw	Skruv	5
0480	21	97 64 044			1	Protection	Skydd	6
0500	22	79 72 805			3	Screw	Skruv	5
0520	23	89 66 608			1	Clamp	Klammer	5
0540	24	89 67 655			2	Bracket	Hållare	6
0560	25	89 70 725			1	Grommet	Genomföring	5


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX


Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

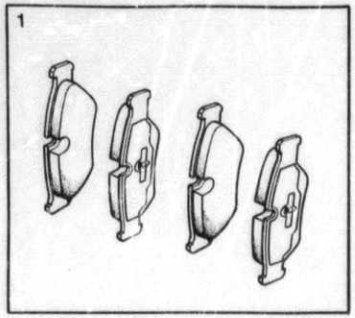


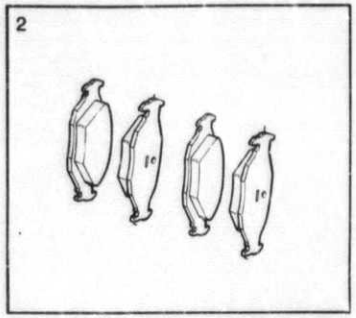

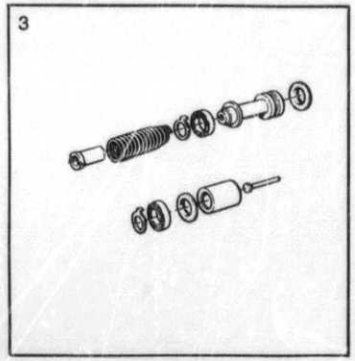

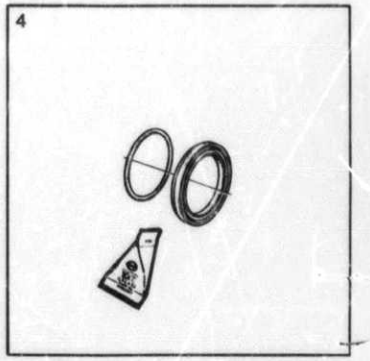

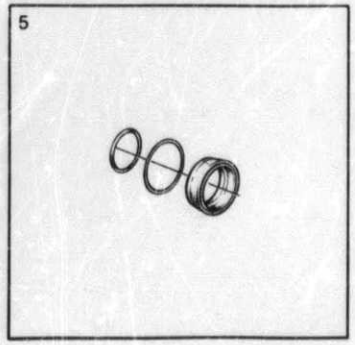

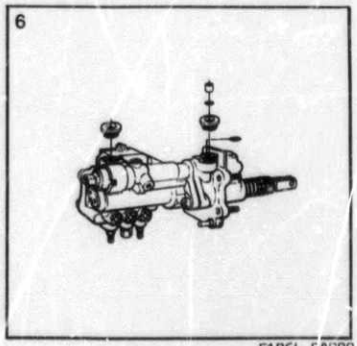

F1064 CAC90

Complete set
Brakes

Satser
Bromsar

4-B08

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 68 976		15), SE, EU	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0020								
0030		89 69 412		1)	2	. Brake pad	. Bromsklots	1
0040		*89 69 446*		1) NLS	2	. Brake pad	. Bromsklots	1
0050								
0061	1	89 93 768		15), GB,ME,FE,JP,AU,US	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0062								
0063		41 98 941		1)	2	. Brake pad	. Bromsklots	1
0064		41 98 958		1)	2	. Brake pad	. Bromsklots	1
0065								
0150	2	41 96 317		15)	X	Brake pad kit rear brake	Bromsklotssats bakbroms	1
0160								
0170		41 96 267		1)	2	. Brake pad	. Bromsklots	1
0180		41 96 275		1)	2	. Brake pad	. Bromsklots	1
0190								
0465	3	89 65 329			X	Sealing kit master cylinder	Tätningssats huvudcylinder	4
0466								
0467		89 65 782		1)	1	. Piston	. Kolv	6
0468		*89 86 911*		NLS - USE 4425229	2	. Gasket	. Packning	4
0469		89 86 986		1)	1	. Seal	. Tätning	6
0470		89 87 018		1)	1	. Sealing ring	. Tätningsring	6
0472		89 86 994		1)	1	. Seal	. Tätning	6
0473		89 65 808			1	. Pin	. Pinne	4
0475								
0610	4	89 68 968			X	Gasket kit front brake	Packningsats frambroms	2
0611								
0612		89 69 081		1)	1	. Gaiter	. Damask	2
0613		89 69 099		1)	1	. Seal	. Tätning	2
0614		89 55 536		1)	1	. Grease	. Fett	6
0615								
0620	5	89 61 849			X	Gasket kit rear brake	Packningsats bakbroms	4
0640								
0660		89 55 288		1)	1	. Seal	. Tätning	6
0680		89 55 296		1)	1	. Gaiter	. Damask	6
0700		89 55 239		1)	1	. Ring	. Ring	6
0720								
0740	6	40 03 182			X	Master cylinder kit	Huvudcylindersats	6
0760		*40 03 174*		1) NLS - USE 4003182	1	. Master cylinder	. Huvudcylinder	6
0761		89 66 376			2	. Intermediate section	. Mellanstycke	5
0762		89 66 384			1	. Intermediate section	. Mellanstycke	5
0763		80 74 106			3	. Nut	. Mutter	5
0764		79 16 497			3	. Washer	. Bricka	5
0800		89 66 335			2	. Rubber bushing	. Gummibussning	6
0820		89 67 390			1	. O-ring kit	. O-ringsats	2


1. Not as separate spare part. Ej som separat reservdel.
15. See SI 500-1034 Se SI 500-1034


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


5 GROUP INDEX


Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

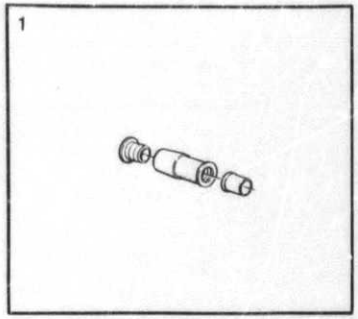


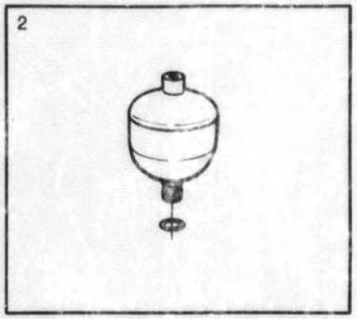

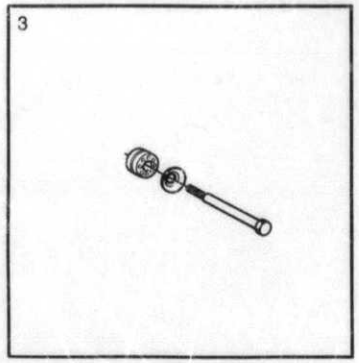

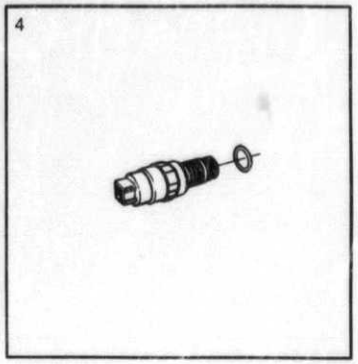

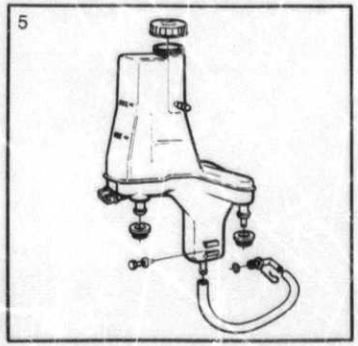

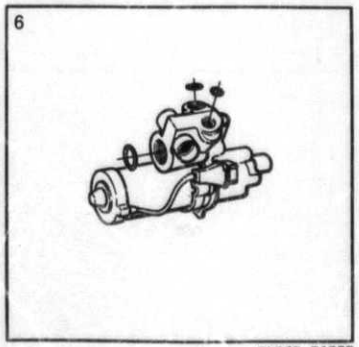

F1065 CAC90

Complete set
Brakes

Satser
Bromsar

4-B10

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 55 445*		NLS - USE 4467064	X	Guide	Styrning	6
0020		89 55 452		1)	2	.Bushing	.Bussning	6
0030		89 55 460		1)	2	.Sleeve	.Hylsa	6
0040		89 55 478			2	.Cover	.Lock	3
0050								
0060	2	40 02 267			X	Accumulator	Ackumulator	5
0070		*40 01 814*		1) NLS	1	.Accumulator	.Ackumulator	5
0080		89 67 234			1	.O-ring	.O-ring	2
0090		89 66 707		1)	1	.Label	.Etikett	6
0100								
0110	3	40 02 895			X	Suspension kit	Upphängningssats	5
0120		*91 04 811*		1) NLS	2	.Bracket	.Upphängning	5
0130		89 66 236		1)	1	.Bracket	.Upphängning	5
0140		*40 03 083*		1) NLS	1	.Spacer	.Distans	5
0150		91 04 829		1)	1	.Screw	.Skruv	5
0160		*91 04 944*		1) NLS	2	.Sleeve	.Hylsa	6
0170		*89 66 251*		1) NLS	1	.Washer	.Bricka	5
0180								
0190	4	89 67 309			X	Pressure monitor	Tryckvakt	4
0200		89 66 160		1)	1	.Pressure monitor	.Tryckvakt	4
0210		89 67 325			1	.O-ring	.O-ring	2
0220								
0230	5	*40 03 141*		NLS - USE 4190617	X	Reservoir	Behållare	6
0240		89 66 137		1)	1	.Reservoir	.Behållare	5
0250		89 66 368			1	.Screw	.Skruv	5
0260		89 66 152			1	.Cover	.Lock	4
0270		*40 02 051*		1) NLS	1	.Bracket	.Hållare	5
0280		41 95 798		1)	1	.Bracket	.Hållare	5
0290		89 66 335			2	.Rubber bushing	.Gummibussning	6
0300		40 02 861			1	.Hose kit	.Slangsats	5
0310		89 67 390			1	.O-ring kit	.O-ringsats	2
0320								
0330	5	41 90 617		TCS	X	Reservoir	Behållare	6
0340		41 95 798		1)	1	.Bracket	.Hållare	5
0345		*40 02 051*		1) NLS	1	.Bracket	.Hållare	5
0350		40 02 861			1	.Hose kit	.Slangsats	5
0360		40 03 117			1	.O-ring	.O-ring	5
0370		*91 04 738*		1) NLS	1	.Nipple	.Nippel	
0380		*91 04 746*		1) NLS	1	.Hose	.Slang	
0390		*44 25 740*		1) NLS	1	.Reservoir	.Behållare	5
0400		44 25 690			1	.Cover	.Lock	4
0410		*89 66 681*		NLS - USE 8967390	1	.O-ring	.O-ring	4
0420		*89 66 939*		NLS - USE 8967390	1	.Sleeve	.Hylsa	6
0430		89 66 335			1	.Rubber bushing	.Gummibussning	6
0440		39 66 368			1	.Screw	.Skruv	5
0450								
0460	6	40 03 158			X	Pump kit	Pumpsats	6
0470		*40 03 166*		1) NLS	1	.Pump motor	.Pumpmotor	6
0480		89 67 234			1	.O-ring	.O-ring	2
0490		89 67 325			1	.O-ring	.O-ring	2
0500								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08


Complete set

4-B12

Brakes

Satser

Bromsar

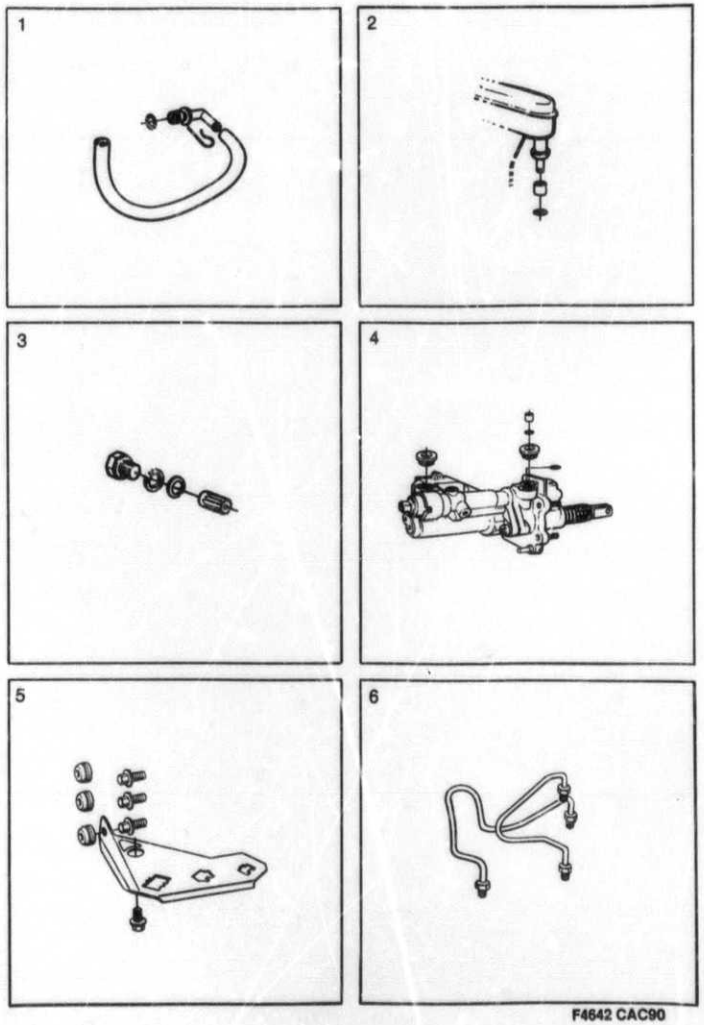

F4642 CAC90

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1322	1	40 02 861			X	Hose kit	Slangsats	5
1324		*91 04 746*		1) NLS	1	.Hose	.Slang	
1325		*91 04 738*		1) NLS	1	.Nipple	.Nippel	
1327		40 03 117			1	.O-ring	.O-ring	5
1329								
1330	2	89 67 390			X	O-ring kit	O-ringsats	2
1340		*89 66 681*		NLS - USE 8967390	1	.O-ring	.O-ring	4
1350		*89 66 939*		NLS - USE 8967390	1	.Sleeve	.Hylsa	6
1351								
1360	3	41 07 793			1	Adjuster kit rear brake	Justeringssats bakbroms	4
1365								
1370		41 07 801		1)	1	.Washer	.Bricka	5
1380		*89 55 304*		1) NLS - USE 4107793	1	.Adjustment screw	.Justerskruv	5
1390		89 55 312		1)	1	.Screw	.Skruv	5
1400		*89 70 147*		1) NLS - USE 4107793	1	.Stop ring	.Stoppring	5
1410								
1420	4	41 95 897			1	Master cylinder kit	Huvudcylindersats	6
1425				1)	1	.Master cylinder	.Huvudcylinder	
1430		*89 67 267*		NLS - USE 8967408	1	.O-ring	.O-ring	2
1440		89 66 335			2	.Rubber bushing	.Gummibussning	6
1441		41 95 855			5	.O-ring	.O-ring	2
1442		80 74 106			3	.Nut	.Mutter	5
1450		89 67 390			1	.O-ring kit	.O-ringsats	2
1460								
1470	4	41 95 889		TCS, M	1	Master cylinder kit	Huvudcylindersats	6
1475				1)	1	.Master cylinder	.Huvudcylinder	
1480		*89 67 267*		NLS - USE 8967408	1	.O-ring	.O-ring	2
1490		89 66 335			2	.Rubber bushing	.Gummibussning	6
1491		41 95 855			5	.O-ring	.O-ring	2
1492		80 74 106			3	.Nut	.Mutter	5
1500		89 67 390			1	.O-ring kit	.O-ringsats	2
1510								
1520	5	41 98 461		1993-, MARK IV	X	Attachment kit	Fästsats	6
1530		*41 98 065*		1) NLS	1	.Bracket	.Konsol	6
1540		*41 98 107*		1) NLS	3	.Rubber bushing	.Gummibussning	6
1550		*41 98 511*		1) NLS	1	.Screw	.Skruv	5
1560		*41 98 529*		1) NLS	3	.Screw	.Skruv	5
1570								
1580	6	41 98 487		1993-, MARK IV	X	Brake pipe	Bromsrör	6
1590		*41 98 081*		1) NLS	1	.Brake pipe	.Bromsrör	5
1600		*41 98 099*		1) NLS	1	.Brake pipe	.Bromsrör	5
1610								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08

Complete set
4-B14
Brakes

Satser
Bromsar

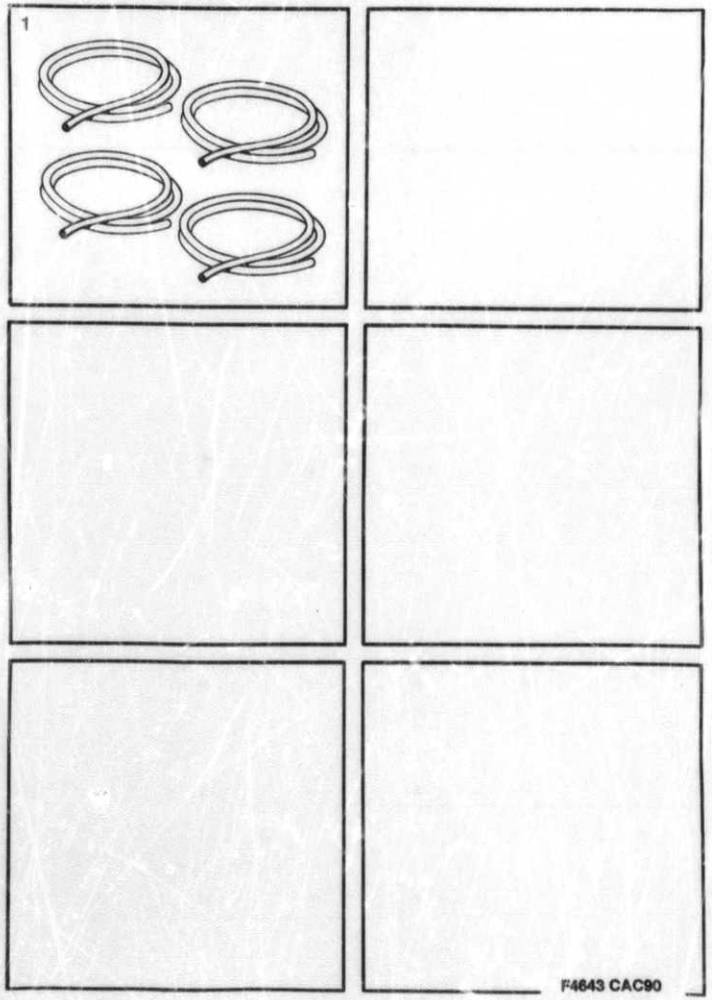

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 98 479		1993-, MARK IV	X	Hose kit	Slangsats	5
0020		*41 98 123*		1) NLS	1	.Hose	.Slang	5
0030		*41 98 131*		1) NLS	1	.Hose	.Slang	5
0040		*41 98 271*		1) NLS	1	.Hose	.Slang	5
0050		*41 98 289*		1) NLS	1	.Hose	.Slang	5
0060								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

5 GROUP INDEX

Front wheel brake	4-A06
Rear wheel brake	4-A08
Footbrake system	4-A10
Parking brake system	4-B06
Complete sets	4-B08



Front assembly, Steering
Framvagn, Styrinrättning
Tren delantero, Dirección

TABLE OF CONTENTS

Front wheel suspension		
Front wheel suspension	6 : 5	4-C06
Steering device		
Steering shaft	6 : 7	4-C08
Steering wheel, horn button	6 : 9	4-C10
Countershaft, bracket	6 : 11	4-C12
Power steering gear	6 : 13	4-C14
Hydraulic pump, hoses	6 : 19	4-C20
Belt tensioner, B202, 80 amp alternator	6 : 23	4-C24
Belt tensioner, B202, 115 amp alternator	6 : 25	4-D02
Belt tensioner, B234,	6 : 27	4-D04
Complete sets		
Front wheel suspension, steering device	6 : 29	4-D06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

INNEHÅLLSFÖRTECKNING

Framvagn		
Framvagn	6 : 5	4-C06
Styrinrättning		
Rattstång	6 : 7	4-C08
Ratt, signalknapp	6 : 9	4-C10
Mellanaxel, konsol	6 : 11	4-C12
Servostyrväxel	6 : 13	4-C14
Hydraulpump, slangar	6 : 19	4-C20
Remspännare, B202, 80 amp generator	6 : 23	4-C24
Remspännare, B202, 115 amp generator	6 : 25	4-D02
Remspännare, B234	6 : 27	4-D04
Satser		
Framvagn, styrinrättning	6 : 29	4-D06

SUMARIO

Tren delantero		
Tren delantero	6 : 5	4-C06
Direccion		
Barra volante	6 : 7	4-C08
Volante, boton bocina	6 : 9	4-C10
Eje intermedio, consola	6 : 11	4-C12
Servomecanismo de direccion	6 : 13	4-C14
Bomba hidraulica, mangueras	6 : 19	4-C20
Tensor de correa, B202, 80 amp alternador	6 : 23	4-C24
Tensor de correa, B202, 115 amp alternador	6 : 25	4-D02
Tensor de correa, B234	6 : 27	4-D04
Juegos completos		
Mecanismos delanteros, direccin, cambio en el volante	6 : 29	4-D06


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-C06 Front wheel suspension Framvagn

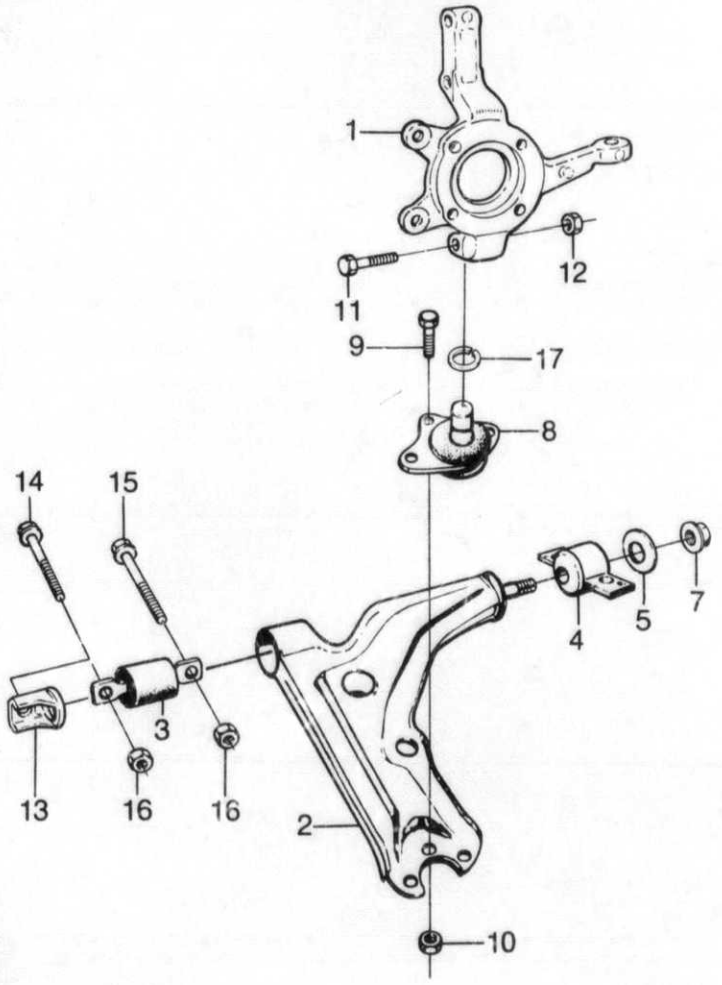

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 73 190		-1992, LH	1	Steering knuckle housing	Styrspindelhus	5
0030	1	89 73 208		-1992, RH	1	Steering knuckle housing	Styrspindelhus	5
0050	1	89 73 216		LH ABS	1	Steering knuckle housing	Styrspindelhus	5
0070	1	89 73 224		RH ABS	1	Steering knuckle housing	Styrspindelhus	5
0090	2	89 58 365		LH	1	Swivel arm	Svängarm	4
0100	2	89 58 373		RH	1	Swivel arm	Svängarm	4
0110	3	89 61 476			2	Bushing	Bussning	5
0120	4	89 65 253			2	Bearing anchorage	Lagerfäste	5
0130	5	89 58 779			2	Washer	Bricka	5
0140	7	79 71 765			2	Nut	Mutter	5
0150	8	89 72 135			2	End piece	Ändstycke	2
0160	9	*79 77 382*		1990 NLS - USE 7982986	6	Screw	Skruv	5
0165	9	79 82 986		1991-	6	Screw	Skruv	5
0170	10	79 75 501			6	Nut	Mutter	5
0180	11	89 65 121			2	Screw	Skruv	5
0190	12	79 77 309			2	Nut	Mutter	3
0200	13	89 69 669		-1992	4	Bearing support	Lagerstöd	6
0205	13	44 26 003		1993-	4	Bearing support	Lagerstöd	6
0210	14	79 79 248		1990	2	Screw	Skruv	5
0215	14	79 82 036		1991-	2	Screw	Skruv	5
0220	15	40 01 111			2	Screw	Skruv	5
0230	16	*79 73 464*		NLS - USE 7978620	4	Nut	Mutter	3
0240	17	79 63 168			2	Lock ring	Låsring	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-C08

Steering shaft
Rattstång

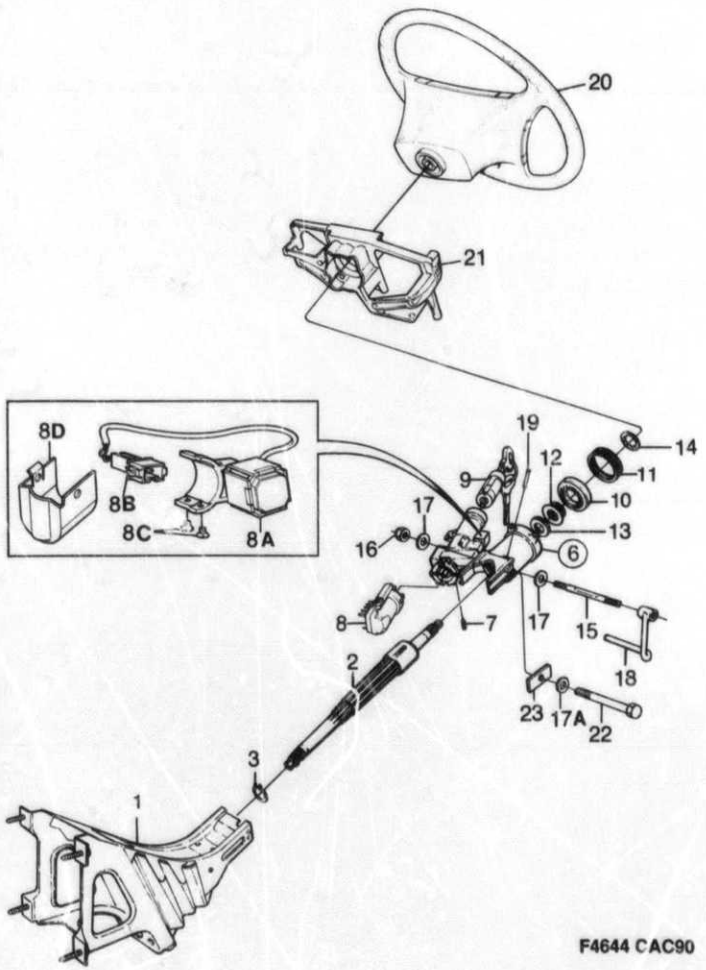

F4644 CAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 6-011, 4-C12		Bracket	Konsol	
0020	2	89 53 549			1	Steering shaft	Rattstång	5
0030	2	89 72 929		AIR-BAG	1	Steering shaft	Rattstång	5
0040	3	79 15 119			1	Retaining ring	Spårring	5
0050	6	40 02 648			1	Lock	Lås	6
0060	6	43 11 270		1993-, US, CA	1	Lock	Lås	6
0070	7	73 98 381			2	.Screw	.Skruv	5
0080	8	*40 62 782*		-1992 NLS - USE 4085783	1	.Contact	.Kontakt	4
0090	8	40 85 783		1993-	1	.Contact	.Kontakt	4
0100	8A	43 14 209		1993-, US, CA	1	.Solenoid	.Solenoid	5
0110	8B	41 17 172		1993-, US, CA	1	..Contact housing	..Kontakthus	4
0120	8C			1993-, US, CA	3	.	.	
0130	8D	44 16 368		1993-, US, CA	1	.Cover	.Täckkåpa	6
0140	9			See page 8A-075, 5-D04		Lock cylinder	Låscylinder	
0150	10	89 50 701			1	Ball bearing	Kullager	6
0160	11	89 50 172			1	Ring	Ring	5
0170	12	89 72 374			1	Bushing	Bussning	3
0180	13	40 00 360			1	Washer	Bricka	5
0190	14	89 54 281			1	Lock ring	Låsring	5
0200	15	41 92 910			1	Screw	Skruv	5
0210	16	73 98 324			1	Nut	Mutter	3
0220	17	80 73 108			X	Washer	Bricka	5
0230	17A	80 73 108		AIR-BAG	1	Washer	Bricka	5
0240	17A	80 73 264		1993-, RHD, AIRBAG	1	Washer	Bricka	5
0250	18	89 67 762			1	Control arm	Manöverarm	5
0260	19	73 98 290			1	Spring pin	Rörpinne	5
0270	20			See page 6-009, 4-C10		Steering wheel	Ratt	
0280	21			See page 3A-093, 2-D22		Holder	Hållare	
0290	22	89 69 032		AIR-BAG	1	Screw	Skruv	5
0300	23	89 69 024		AIR-BAG	1	Spacer	Distans	5
0310	23	44 15 972		1993-, RHD, AIR-BAG	1	Spacer	Distans	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX


Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

Steering device

4-C10 Steering wheel Horn button

Styrinrättning

Ratt Signalknapp

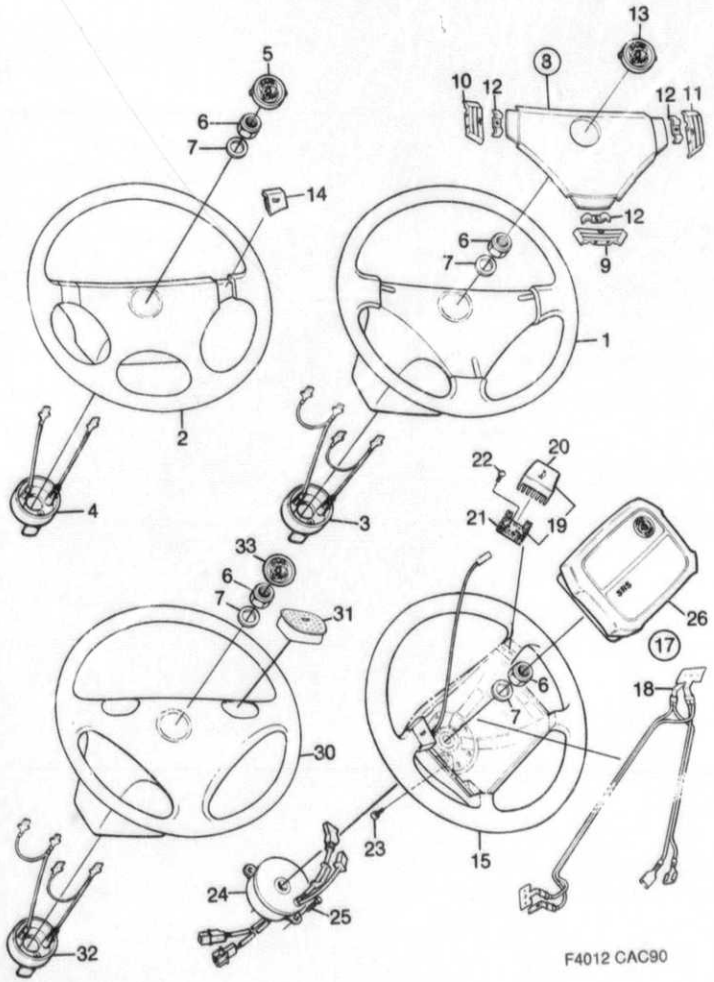

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Ber.ämning	S L
0010	1	*89 73 547*		20), -1991	1	Steering wheel	Ratt	5
0020				NLS		three spoke	treekrad	
0030	1	89 71 715		-1991	1	Steering wheel	Ratt	5
0040						three spoke,leather	treekrad,läder	
0050	2	89 65 477			1	Steering wheel	Ratt	5
0060						four spoke	fyrekrad	
0070	3	89 61 120		-1991	1	Companion flange	Medbringare	5
0080	4	89 58 787			1	Companion flange	Medbringare	6
0090	5	89 89 659			1	Emblem	Emblem	3
0100	6	89 54 315			1	Nut	Mutter	5
0110	7	79 33 872			1	Washer	Bricka	5
0120	8	89 90 376		-1991	1	Steering wheel pad	Rattkudde	3
0130	9	89 90 962		-1991	1	.Horn button	.Signalknapp	6
0140	10	89 90 970		-1991	1	.Horn button	.Signalknapp	6
0150	11	89 90 988		-1991	1	.Horn button	.Signalknapp	6
0160	12	89 87 406		-1991	3	.Contact plate	.Kontaktplatta	6
0170	13	89 90 103		-1991	1	.Emblem	.Emblem	3
0180	14	89 61 096		LH	1	Horn button	Signalknapp	5
0190	14	89 61 104		RH	1	Horn button	Signalknapp	5
0200								
0210	15	40 02 945		16)	1	Steering wheel	Ratt	5
0220	15	40 00 154		16)	1	Steering wheel	Ratt	5
0230						leather	läder	
0270	17	40 03 398		16)	1	.Cable	.Kabel	6
0280	18	*40 00 139*		1,16) NLS	1	..Cable	..Kabel	6
0290	19	43 68 627		16), -1992	1	..Horn button	..Signalknapp	
0300	19	40 03 372		16), 1993-, LH	1	...Horn button	...Signalknapp	6
0310	19	40 03 380		16), 1993-, RH	1	...Horn button	...Signalknapp	6
0320	20	40 02 622		1,16), LH	1	....Horn button	....Signalknapp	6
0330	20	40 02 630		1,16), RH	1	....Horn button	....Signalknapp	6
0340	21	89 68 679		1,16)	1	....Housing	....Hus	6
0350	22	89 68 703		16)	4	.Screw	.Skruv	5
0360	23	89 68 315		16)	2	.Screw	.Skruv	5
0370	24	89 72 200		16), -1991	1	Contact unit	Kontaktenhet	6
0380	24	43 10 926		16), 1992-	1	Contact unit	Kontaktenhet	6
0400	25	79 72 193		16)	2	Screw	Skruv	5
0420	26	*40 02 960*		16,22), -1991 NLS	1	Airbag module	Airbagmodul	5
0430	26	*42 88 007*		16,22), 1992 NLS	1	Airbag module	Airbagmodul	5
0440	26	44 16 061		16), 1993-	1	Airbag module	Airbagmodul	5
0450								
0460	30	41 03 453		1992-	1	Steering wheel	Ratt	5
0470						three spoke, sport design	treekrad, sport design	
0480	30	41 03 461		1992-	1	Steering wheel	Ratt	5
0490						three spoke,leather	treekrad,läder	
0500	31	41 94 007		1992-, LH	1	.Horn button	.Signalknapp	6
0510	31	41 94 015		1992-, RH	1	.Horn button	.Signalknapp	6
0520	32	41 93 991		1992-	1	.Companion flange	.Medbringare	6
0530	33	41 90 823		1992	1	Emblem	Emblem	3
0540	33	44 16 087		1993	1	Emblem	Emblem	3

1. Not as separate spare part. Ej som separat reservdel.
16. AIR-BAG.
20. Superseded by 4103453 and 4416087. Ersatt av 4103453 och 4416087.
22. Superseded by 4416061. Ersatt av 4416061.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Prakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-C12

Steering device
Countershaft
Bracket

Styrinrättning
Mellanaxel
Konsol

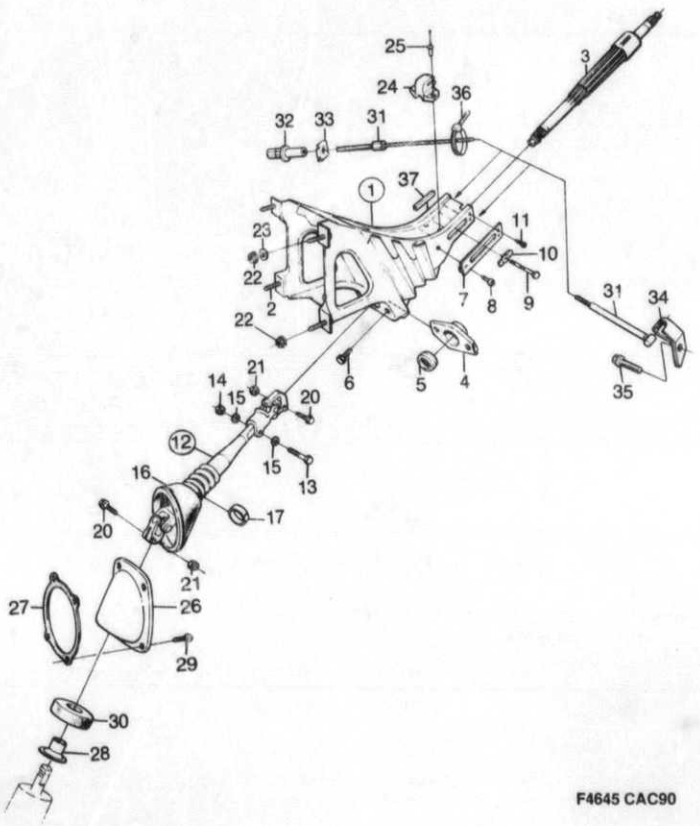

F4645 CAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 73 448			1	Bracket	Konsol	6
0020	1	40 02 994		AIR-BAG US, CA, BR	1	Bracket	Konsol	6
0030	1	41 07 744		AIR-BAG SE, FI, EU, JP	1	Bracket	Konsol	6
0040	1	89 73 455		RHD	1	Bracket	Konsol	6
0045	1	44 74 334		1993-, RHD, AIR-BAG	1	Bracket	Konsol	6
0050	2	*73 98 787*		NLS	4	Screw	Skruv	5
0060	3			See page 6-007, 4-C08		Steering shaft	Rattstång	
0070	4	89 52 194			1	Bearing housing	Lagerhus	6
0080	5	89 56 104			1	Needle bearing	Nållager	5
0090	6	73 99 934			2	Screw	Skruv	5
0100	7	89 71 343			2	Slide rail	Glidskena	5
0110	7	89 71 657		AIR-BAG	2	Slide rail	Glidskena	5
0115	7	89 71 343		1993-, RHD, AIR-BAG	2	Slide rail	Glidskena	5
0120	8	79 74 512			2	Screw	Skruv	5
0130	9			See page 6-007, 4-C08		Screw	Skruv	
0140	10			See page 6-007, 4-C08		Spacer	Distans	
0150	11	79 73 753			4	Screw	Skruv	5
0160	12	40 02 226		-1990, TURBO	1	Countershaft	Mellanaxel	5
0170	12	40 02 259		-1990, I	1	Countershaft	Mellanaxel	5
0175	12	40 02 259		1991-	1	Countershaft	Mellanaxel	5
0180	12	*40 02 242*		-1990, TURBO RHD NLS - USE 4002234	1	Countershaft	Mellanaxel	5
0190	12	40 02 234		-1990, I RHD	1	Countershaft	Mellanaxel	5
0195	12	40 02 234		1991-, RHD	1	Countershaft	Mellanaxel	5
0200	13	79 72 334			1	Hexagon screw	Sexkantsskruv	5
0210	14	79 68 415			1	Lock nut	Låsmutter	3
0220	15	80 29 985		-1992	1	Washer	Bricka	5
0225	15	91 66 372		1993-	1	Washer	Bricka	5
0230	16	89 56 252			1	Bellows	Bälg	5
0240	17	40 01 400			1	Bushing	Bussning	3
0250	20	79 72 334			2	Hexagon screw	Sexkantsskruv	5
0260	21	79 68 415			2	Lock nut	Låsmutter	3
0270	22	79 79 602			4	Nut	Mutter	5
0280	23	73 98 852			1	Washer	Bricka	5
0290	24	89 55 809			1	Bracket	Hållare	6
0300	25	*79 61 675*		NLS - USE 9449752	2	Rivet	Nit	5
0310	26	89 56 211			1	Protecting casing	Skyddskåpa	6
0320	27	89 56 245			2	Seal	Tätning	5
0330	28	89 56 534			1	Bushing	Bussning	3
0340	29	79 71 294			4	Screw	Skruv	5
0350	30	89 67 572			1	Seal	Tätning	5
0360	31	95 86 900		AIR-BAG	1	Cable	Wire	5
0370	32	91 01 221		AIR-BAG	1	Adjusting nut	Justermutter	3
0380	33	95 87 171		AIR-BAG	1	Washer	Bricka	5
0390	34	95 86 918		AIR-BAG	1	Bracket	Fäste	5
0400	35	97 94 132		AIR-BAG	1	Screw	Skruv	5
0410	36	79 71 864		AIR-BAG	1	Tensioning band	Spännband	5
0420	37	95 19 737			1	Protecting moulding	Skyddslist	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-C14

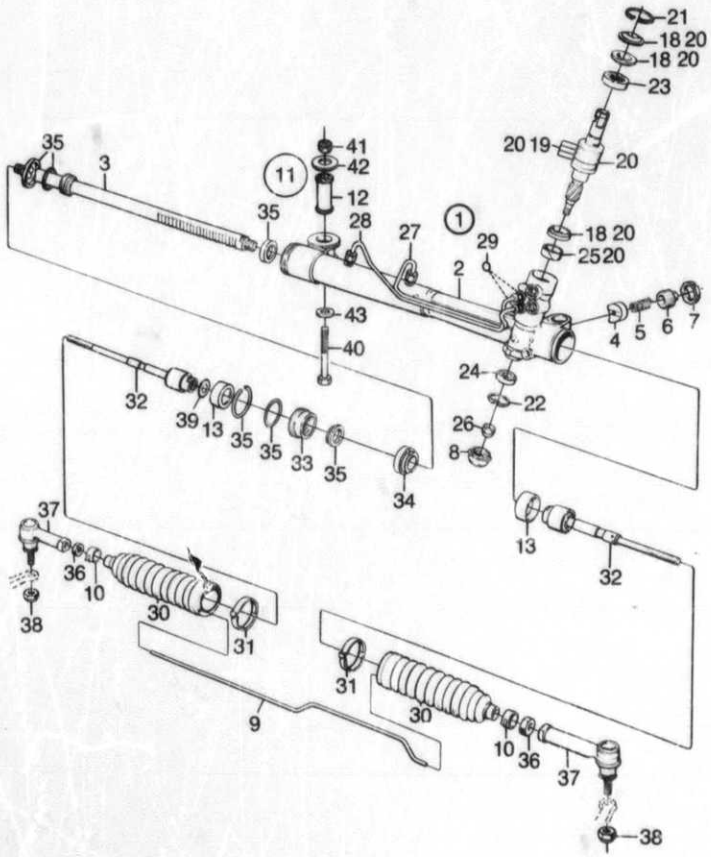

F2937 CAC90

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*89 71 921*		7,12) NLS - USE 4105052	1	Steering gear	Styrväxel	4
0020	1	41 05 052		7,13)	1	Steering gear	Styrväxel	4
0030	1	*89 93 529*		21,12) NLS - USE 8993669	1	Steering gear	Styrväxel	4
0040	1	89 93 669		21,13)	1	Steering gear	Styrväxel	4
0050	1	*89 71 939*		7,12), RHD NLS - USE 4105060	1	Steering gear	Styrväxel	4
0060	1	41 05 060		7,13), RHD	1	Steering gear	Styrväxel	4
0070	2	*89 68 737*		1,12) NLS - USE 4004842	1	.Steering gear	.Styrväxel	4
0080	2	40 04 842		1,13)	1	.Steering gear	.Styrväxel	4
0090	3	89 55 601		12)	1	..Rack	..Kuggstång	6
0100	3	41 05 508		13)	1	..Rack	..Kuggstång	6
0110	3	*89 60 536*		12), RHD NLS - USE 4105516	1	..Rack	..Kuggstång	6
0120	3	41 05 516		13), RHD	1	..Rack	..Kuggstång	6
0130	4	*89 37 005*		-1991 NLS - USE 4199923	1	..Plunger	..Plunge	4
0135	4	41 99 923		1992-	1	..Plunger	..Plunge	4
0140	5	89 63 985			1	..Spring	..Fjäder	6
0150	6	89 37 021			1	..Screw	..Skruv	5
0160	7	89 37 039			1	..Lock nut	..Låsmutter	3
0170	8	89 55 742			1	..Cap	..Kapsel	2
0180	9	89 55 718			1	..Pipe	..Rör	4
0190	10	89 37 161			2	..Clamp	..Klämma	5
0200	11	89 93 511			1	..Rubber bushing kit	..Gummibussningssats	3
0210	12	89 34 119			2	...Rubber bushing	...Gummibussning	3
0220	13	89 36 684			2	..Ring	..Ring	4
0230								
0240	18	41 04 493		12)	X	..Sealing kit pinion	..Tätningssats pinjong	3
0260		41 04 022	S	1)	1	...Seal	...Tätning	3
0270		41 03 990	S	1)	1	...Seal	...Tätning	3
0280		41 04 592	S	1)	1	...Seal	...Tätning	3
0290								
0300	18	41 04 501		13)	X	..Sealing kit pinion	..Tätningssats pinjong	3
0320		41 04 022	S	1)	1	...Seal	...Tätning	3
0330		41 03 990	S	1)	1	...Seal	...Tätning	3
0340		41 04 006	S	1)	1	...Seal	...Tätning	3
0350								
0360	19	41 04 519			X	..Sealing kit pinion	..Tätningssats pinjong	3
0380		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0390								
0400	20	41 04 535		12), LHD	X	..Repair kit pinion	..Reparationssats pinjong	4
0420		89 67 929	S	1)	1	...Pinion	...Pinjong	
0430		41 03 990	S	1)	1	...Seal	...Tätning	3
0440		41 04 592	S	1)	1	...Seal	...Tätning	3
0450		41 04 022	S	1)	1	...Seal	...Tätning	3
0460	25	89 36 619	S		1	...Bushing	...Bussning	3
0470		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0480								
0490	20	41 04 543		13), LHD	X	..Repair kit pinion	..Reparationssats pinjong	4
0510		41 03 933	S	1)	1	...Valve	...Ventil	3
0520		41 03 990	S	1)	1	...Seal	...Tätning	3
0530		41 04 006	S	1)	1	...Seal	...Tätning	3
0540		41 04 022	S	1)	1	...Seal	...Tätning	3
0550	25	41 04 030	S		1	...Bushing	...Bussning	3


1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
12. Ch. --L1007266, --L2005188, --L8000279
13. Ch. L1007267--, L2005489--, L8000280--
21. Only for cars that will be repaired in USA Endast för bilar som reparera i USA

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

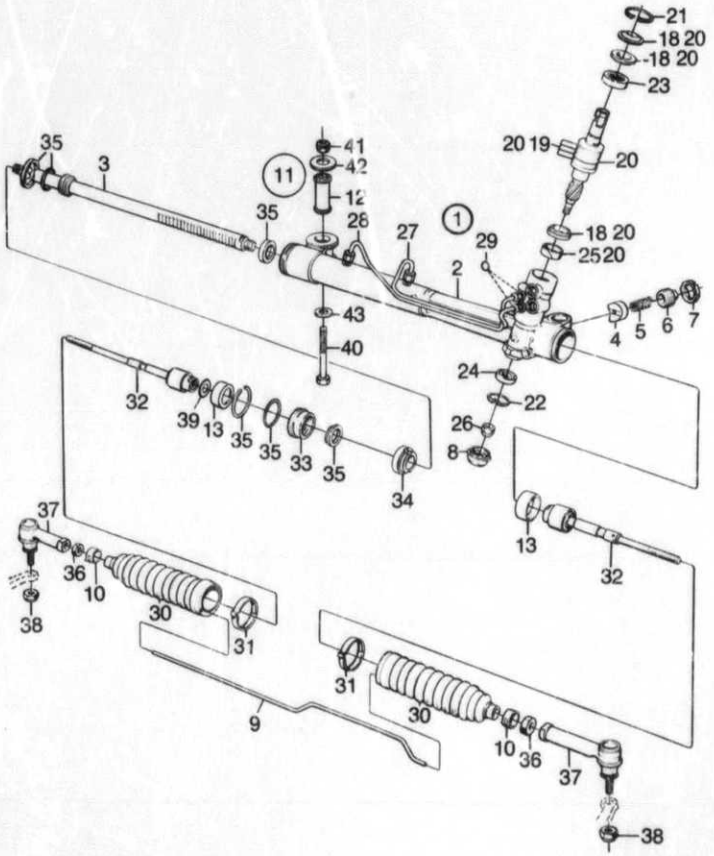

F2937 CAC90

Steering device

4-C16

Power steering gear

Styrinrättning

Servostyrväxel

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0570								
0580	20	41 04 550		12), RHD	X	..Repair kit pinion	..Reparationssats pinjong	4
0590								
0600		89 67 937	S	1)	1	...Pinion	...Pinjong	
0610		41 03 990	S	1)	1	...Seal	...Tätning	3
0620		41 04 592	S	1)	1	...Seal	...Tätning	3
0630		41 04 022	S	1)	1	...Seal	...Tätning	3
0640	25	89 36 619	S		1	...Bushing	...Bussning	3
0650		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0660								
0670	20	41 04 568		13), RHD	X	..Repair kit pinion	..Reparationssats piniong	4
0680								
0690		41 03 941	S	1)	1	...Valve	...Ventil	3
0700		41 03 990	S	1)	1	...Seal	...Tätning	3
0710		41 04 006	S	1)	1	...Seal	...Tätning	3
0720		41 04 022	S	1)	1	...Seal	...Tätning	3
0730	25	41 04 030	S		1	...Bushing	...Bussning	3
0740		89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
0750								
0760	21	89 36 908			1	..Lock ring	..Låsring	5
0770	22	89 36 973			1	..Lock ring	..Låsring	5
0780	23	89 36 932			1	..Needle bearing	..Nållager	6
0790	24	89 36 965			1	..Ball bearing	..Kullager	6
0800	25	89 36 619		12)	1	..Bushing	..Bussning	3
0810	25	41 04 030		13)	1	..Bushing	..Bussning	3
0820	26	41 04 162			1	..Lock nut	..Låsmutter	5
0830								
0840	27	41 05 565		LHD	X	..Pipe set short	..Rörsats kort	4
0850								
0860		89 62 565	S	1)	1	...Pipe	...Rör	
0870	29	41 04 014	S		1	...O-ring	...O-ring	3
0880								
0890	27	41 05 581		RHD	X	..Pipe set short	..Rörsats kort	4
0900								
0910		89 64 090	S	1)	1	...Pipe	...Rör	
0920	29	41 04 014	S		1	...O-ring	...O-ring	3
0930								
0940	28	41 05 573		LHD	X	..Pipe set long	..Rörsats långt	4
0950								
0960		89 62 573		1)	1	...Pipe	...Rör	
0970	29	41 04 014	S		1	...O-ring	...O-ring	3
0980								
0990	28	41 05 599		RHD	X	..Pipe set long	..Rörsats långt	4
1000								
1010		89 64 082	S	1)	1	...Pipe	...Rör	
1020	29	41 04 014	S		1	...O-ring	...O-ring	3
1030								
1040	30	89 62 243		LH	X	..Bellows	..Bälg	3
1050		89 55 692		1)	1	...Bellows	...Bälg	
1060	31	89 61 310			1	...Clamp	...Klammer	5
1070	10	89 37 161			1	...Clamp	...Klämma	5
1080								
1090	30	89 62 516		RH	X	..Bellows	..Bälg	3
1100		89 62 524		1)	1	...Bellows	...Bälg	
1110	31	89 61 310			1	...Clamp	...Klammer	5
1120	10	89 37 161			1	...Clamp	...Klämma	5

1. Not as separate spare part. Ej som separat reservdel.
12. Ch. -L1007266, -L2005488, -L8000279
13. Ch. L1007267-, L2005489-, L8000280-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06


Steering device

4-C18

Power steering gear

Styrinrättning

Servostyrväxel

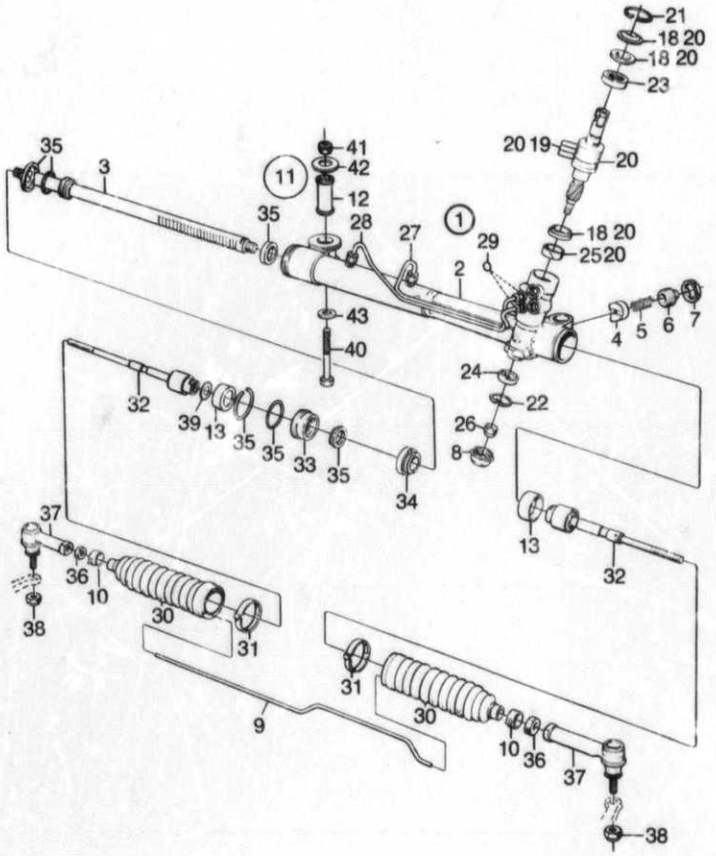

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1130								
1140	32	89 62 250			X	..Steering rod	..Styrstag	4
1150		89 55 650		1)	1	...Steering rod	...Styrstag	4
1160	13	89 36 684			1	...Ring	...Ring	5
1170	31	89 61 310			1	...Clamp	...Klammer	5
1180	10	89 37 161			1	...Clamp	...Klämma	5
1190								
1200	33	89 55 619			1	..End plate	..Gavel	5
1210	34	89 55 635			1	..Bushing	..Bussning	5
1220								
1230	35	41 04 527			X	..Sealing kit rack	..Tätningssats kuggstång	3
1240								
1250		41 03 958		1)	1	...O-ring	...O-ring	3
1260		41 03 966		1)	1	...Seal	...Tätning	3
1270		41 03 974		1)	1	...Seal	...Tätning	3
1280		41 03 982		1)	1	...O-ring	...O-ring	3
1290		89 37 070		1)	1	...Piston ring	...Kolvring	5
1300		89 70 873		1)	1	...Piston ring	...Kolvring	5
1310		89 55 643		1)	1	...Lock ring	...Låsring	5
1320	31	89 61 310			2	...Clamp	...Klammer	5
1330								
1340	36	89 72 309			2	Nut	Mutter	5
1350	37	89 93 453		See page 6-029, 4-D06	2	Drag link end	Styrstagsända	2
1360	38	81 51 482	S		2	.Lock nut	.Låsmutter	5
1370	39	89 46 360		11)	X	Spacer washer	Distansbricka	5
1380	40	89 65 956			2	Screw	Skruv	5
1390	41	81 51 482			2	Lock nut	Låsmutter	5
1400	42	89 34 259			2	Washer	Bricka	5
1410	43	80 73 116		RH	1	Washer	Bricka	5

1. Not as separate spare part. Ej som separat reservdel.
11. See Service Manual, group 6 Se verkstadshandbok, grupp 6

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

Steering device
4-C20 *Hydraulic pump*

Styrinrättning
Hydraulpump

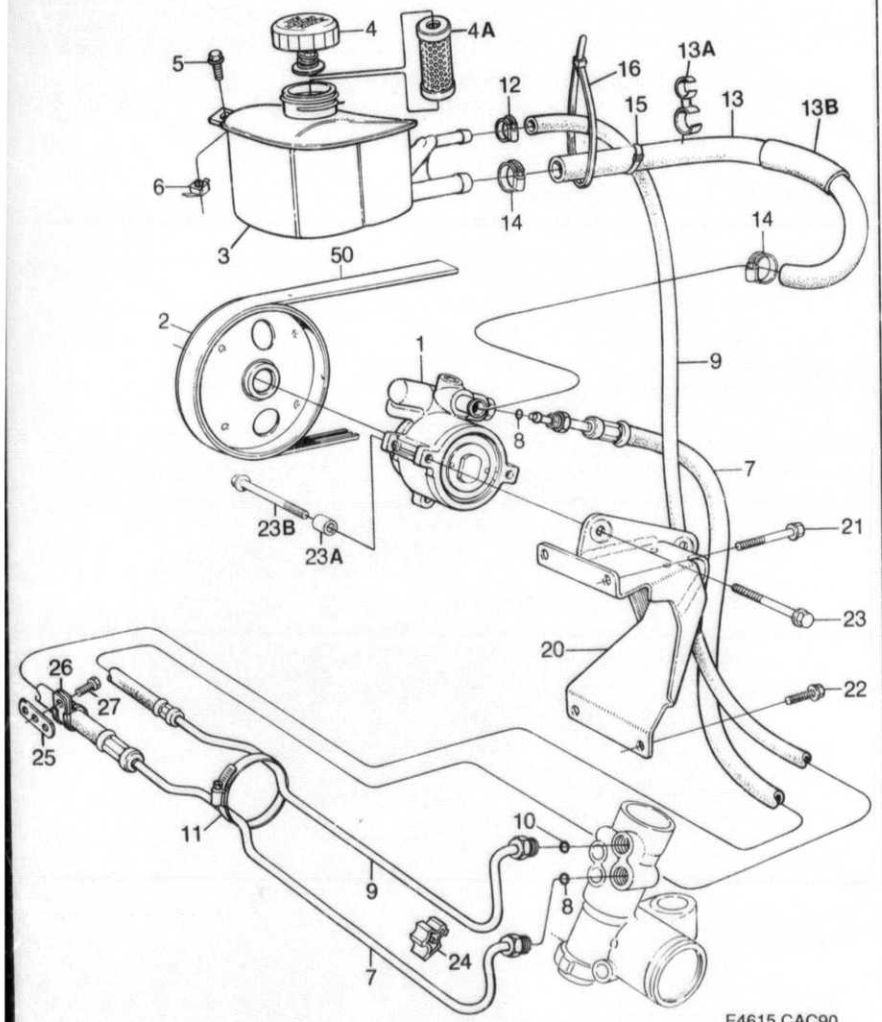

F4615 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*89 72 770*		1990 NLS - USE 4105045	1	Hydraulic pump 80 A alternator	Hydraulpump 80 A generator	3
1	41 05 045		1991-,14)	1	Hydraulic pump 80 A alternator	Hydraulpump 80 A generator	3
1	41 05 045		15), B202	1	Hydraulic pump	Hydraulpump	3
1	*89 72 424*		1990 NLS - USE 4105037	1	Hydraulic pump 115 A alternator	Hydraulpump 115 A generator	3
1	41 05 037		1991-,14)	1	Hydraulic pump 115 A alternator	Hydraulpump 115 A generator	3
1	41 05 037		15), B234	1	Hydraulic pump	Hydraulpump	3
2	75 99 475		B202	1	Pulley	Remskiva	3
2	75 73 694		B234	1	Pulley	Remskiva	3
3	41 97 406		-1991 (8965832)	1	Reservoir	Behållare	4
3	41 92 993		1992-	1	Reservoir	Behållare	4
4	41 97 380		-1991 (8956385)	1	.Cover	.Lock	5
4	41 93 900		1992-	1	.Cover	.Lock	5
4A	41 93 199		1992-	1	.Filter cartridge	.Filterpatron	3
5	*79 77 432*		-1991 NLS - USE 7978133	1	Screw	Skruv	5
6	79 75 006		-1991	1	Nut	Mutter	5
7	89 72 416		B202	1	Hose	Slang	4
7	89 71 426		B234	1	Hose	Slang	4
7	89 72 945		RHD, B202	1	Hose	Slang	4
7	40 01 715		RHD, B234	1	Hose	Slang	4
8	*89 37 500*		12) NLS - USE 4104048	2	.O-ring	.O-ring	3
8	41 04 048		13)	2	.O-ring	.O-ring	3
9	89 59 090		-1991, B202	1	Hose	Slang	4
9	41 90 195		1992-, B202	1	Hose	Slang	4
9	89 71 434		-1991, B234	1	Hose	Slang	4
9	41 90 179		1992-, B234	1	Hose	Slang	4
9	89 63 357		-1991, RHD	1	Hose	Slang	4
9	41 90 187		1992-, RHD	1	Hose	Slang	4
10	*89 37 500*		12) NLS - USE 4104048	1	.O-ring	.O-ring	3
10	79 77 580		13)	1	.O-ring	.O-ring	2
11	79 70 130			1	Hose clamp	Slangklamma	5
11	79 70 122		RHD	1	Hose clamp	Slangklamma	5
12	*79 63 507*		-1991 NLS - USE 7970049	1	Hose clamp	Slangklamma	5
12	79 70 049		1992-	1	Hose clamp	Slangklamma	5
13	89 59 116		-1991, B202	1	Hose	Slang	5
13	41 90 138		1992-, B202	1	Hose	Slang	5
13	40 01 673		-1991, B234	1	Hose	Slang	5
13	41 90 120		1992-, B234	1	Hose	Slang	5
13A	41 94 379		1992-, B202	1	.Clamp	.Klammer	5
13A	41 94 379		1992-, B234	2	.Clamp	.Klammer	5
13B	44 24 602		19)	1	.Wear protection	.Skavskydd	5
14	79 63 531		-1991	2	Hose clamp	Slangklamma	5
14	79 70 072		1992-	2	Hose clamp	Slangklamma	5
15	73 98 373		-1991	1	Clamp	Klammer	5
16	79 71 898		1992-	1	Tensioning band	Spännband	5
20	75 50 361		B202	1	Bracket 80 A alternator	Konsol 80 A generator	6
20	75 93 452		14), B202	1	Bracket 115 A alternator	Konsol 115 A generator	6
21	75 51 641		B202	2	Screw	Skruv	5
22	79 67 938		B202	2	Screw	Skruv	5
23	79 73 787		B202	2	Screw 80 A alternator	Skruv 80 A generator	5
23	79 73 795		14), B202	2	Screw 115 A alternator	Skruv 115 A generator	5

12. Ch. --L1007266, --L2005488, --L8000279
13. Ch. L1007267--, L2005489--, L8000280--
14. Ch. --M1019414
15. Ch. M1019415--
19. Ch. N1048332--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-C22

Hydraulic pump
Hydraulpump

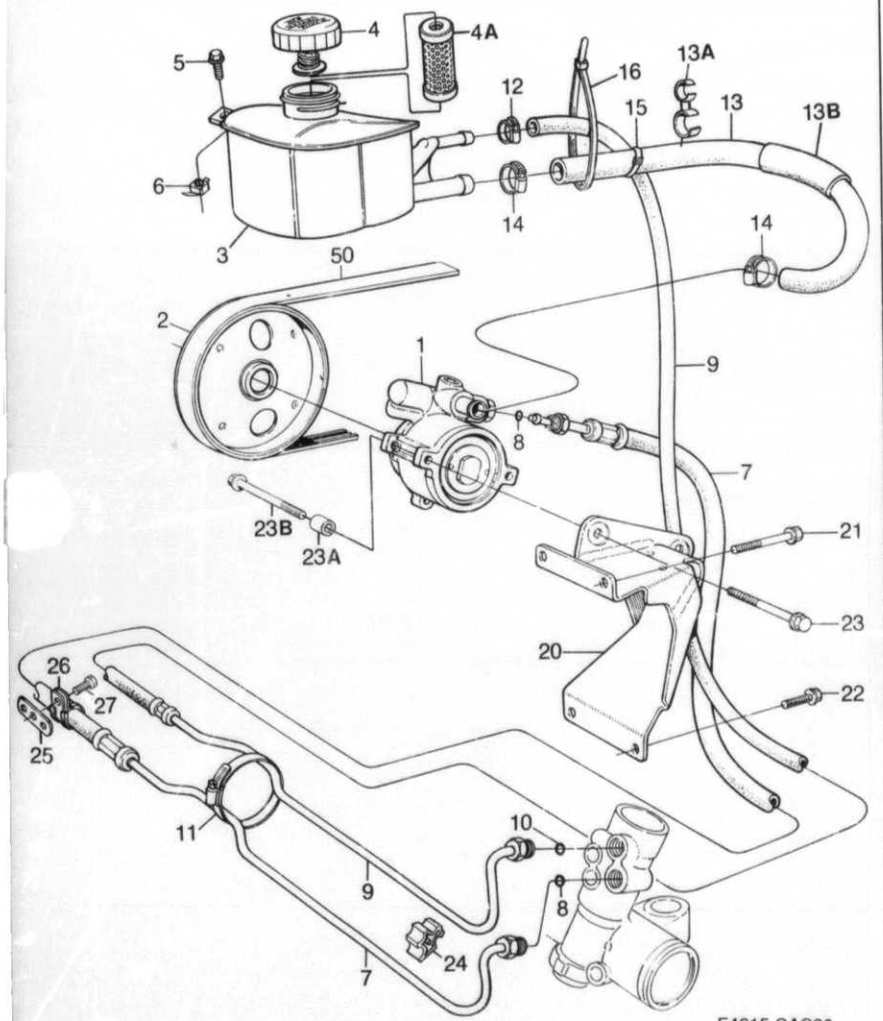

F4615 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
23A			B234		Bushing	Bussning	
			See page 6-027, 4-D04				
23B	79 78 349		B234	2	Screw	Skruv	5
24	40 01 681		B234	1	Spacer bushing	Distansbussning	5
25	40 01 699		B234	1	Washer	Bricka	5
26	79 69 488		B234	1	Clamp	Klammer	5
27	79 22 438		B234	1	Screw	Skruv	5
50			See page 3A-011, 2-A12	1	Belt	Rem	
	89 89 857		1990	X	Gasket kit	Packningsats	4
			See page 6-029, 4-D06		hydraulic pump	hydraulpump	
			NLS - USE 4104766				
	41 04 766		1991-	X	Sealing kit	Tätningssats	3
			See page 6-029, 4-D06		hydraulic pump	hydraulpump	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C03
Complete sets	4-D06

Steering device

Styrinrättning


4-C24

Belt tensioner

B202

Remspännare

B202

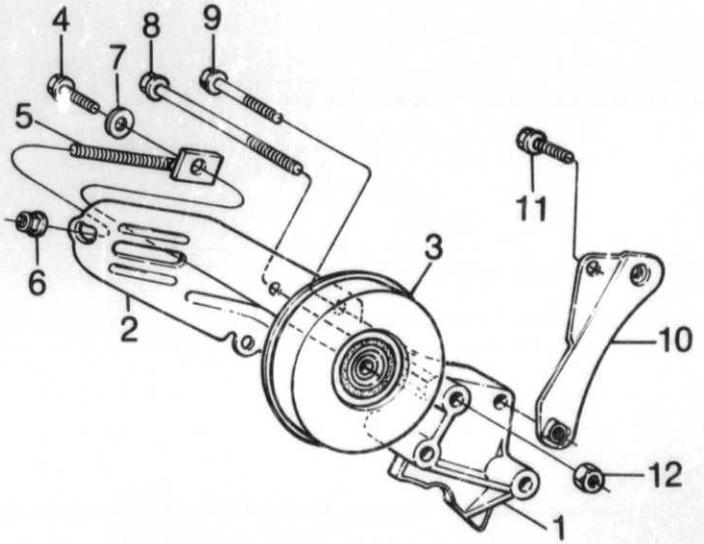

F0969 CAC90

0350	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	75 76 242			1	Base	Fot	6
0020	2	75 75 871			1	Tensioner	Spänndon	5
0030	3	75 98 634			1	Tension pulley	Spännrulle	3
0040	4	*80 83 958*		NLS - USE 8125213	1	Screw	Skruv	5
0050	5	75 75 889			1	Screw	Skruv	5
0060	6	79 71 922			1	Nut	Mutter	3
0070	7	80 29 985		-1992	1	Washer	Bricka	5
0075	7	91 66 372		1993-	1	Washer	Bricka	5
0080	8	93 86 533			3	Screw	Skruv	5
0090	9	79 72 292			1	Screw	Skruv	5
0100	10	93 86 210			1	Stay	Stag	3
0110	11	79 67 938			1	Screw	Skruv	5
0120	12	81 51 235			1	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

Steering device

4-D02


Belt tensioner

B202, 115 A alternator

Styrinrättning

Remspännare

B202, 115 A generator

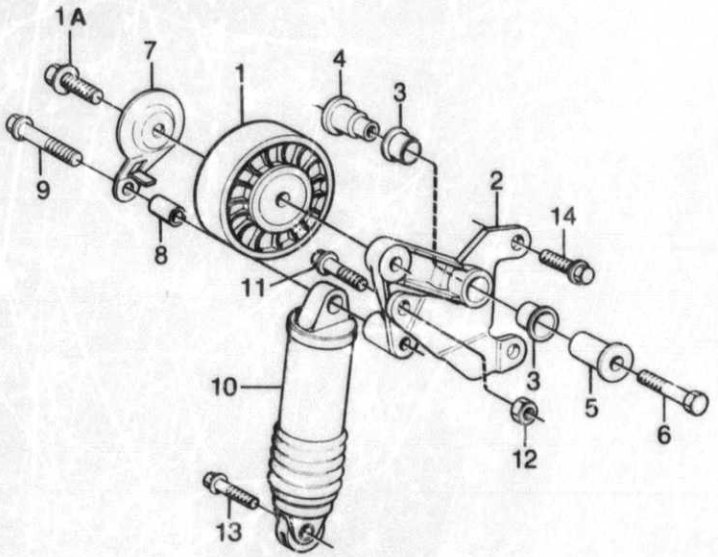

F0970 CAC90

0400	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	75 92 017		14)	1	Tension pulley	Spännrulle	3
0020	1A	79 72 748		14)	1	Screw	Skruv	5
0030	2	75 93 429		14)	1	Tensioner	Spänndon	5
0040	3	75 99 806		14)	2	. Bushing	. Bussning	4
0050	4	75 99 814		14)	1	. Bearing	. Lagring	4
0060	5	75 99 822		14)	1	. Bearing	. Lagring	4
0070	6	93 46 354		14)	1	. Screw	. Skruv	5
0080	7	75 96 612		14)	1	Stay	Stag	5
0090	8	*75 93 387*		1990 NLS - USE 4283032	1	Bushing	Bussning	4
0095	8	*41 65 809*		1991-,14) NLS - USE 4283032	1	Bushing	Bussning	4
0095								
0097	8	42 83 032		14), ALTERNATIVE	1	Bushing	Bussning	4
0100	9	79 75 527		14)	1	Screw	Skruv	5
0110	10	75 93 395		14)	1	Spring unit	Fjäderenhet	5
0120	11	79 72 292		14)	1	Screw	Skruv	5
0130	12	80 74 106		14)	1	Nut	Mutter	5
0140	13	79 78 224		14)	1	Screw	Skruv	5
0150	14			See page 6-019, 4-C20	2	Screw	Skruv	

14. Ch. --M1019414

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX


Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

Steering device

4-D04 Belt tensioner B234

Styrinrättning

Remspännare B234

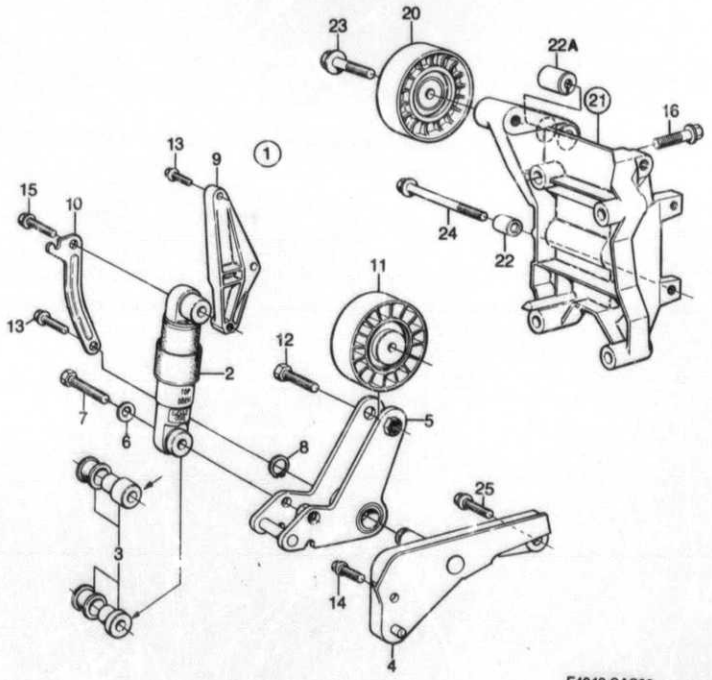

F4842 CAC90

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 29 609			1	Belt tensioner	Remspännare	5
0020	2	40 28 064			1	.Absorber	.Dämpare	5
0030	3	40 29 989		See page 6-029, 4-D06	1	..Bushing kit	..Bussningsats	5
0040	4	*40 28 049*		17) NLS - USE 4358149	1	.Foundation platform	.Grundplattform	5
0045	4	43 58 149		18)	1	.Foundation platform	.Grundplattform	5
0050	5	40 29 799			1	.Tensioning arm	.Spännarm	5
0060	6	80 29 985		-1992	1	.Washer	.Bricka	5
0065	6	91 66 372		1993-	1	.Washer	.Bricka	5
0070	7	80 83 941			1	.Screw	.Skruv	5
0080	8	80 47 748			1	.Retaining ring	.Spårring	5
0090	9	40 27 686			1	Bracket	Fäste	5
0100	10	40 27 694			1	Stay	Stag	5
0110	11	40 29 930			1	Tension pulley	Spännrulle	5
0120	12	40 29 864			1	Screw	Skruv	5
0125	13	79 78 208			3	Screw	Skruv	5
0140	14	79 78 232			2	Screw	Skruv	5
0150	15	79 78 257			1	Screw	Skruv	5
0155	16	79 78 257			4	Screw	Skruv	5
0160	20	75 92 017			1	Tension pulley	Spännrulle	3
0170	21	75 93 049			1	Bracket	Konsol	5
0180	22	75 93 072			2	.Bushing	.Bussning	5
0185	22A	75 93 080			1	.Bushing	.Bussning	6
0190	23	79 78 299			1	Screw	Skruv	5
0200	24			See page 6-019, 4-C20	2	Screw	Skruv	
0210	25	80 56 194			1	Screw	Skruv	5

17. Ch. -N1040436
18. Ch. N1040437--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06


Complete sets

4-D06

Fore carriage
Steering device

Satser

Framvagn
Styrinrättning

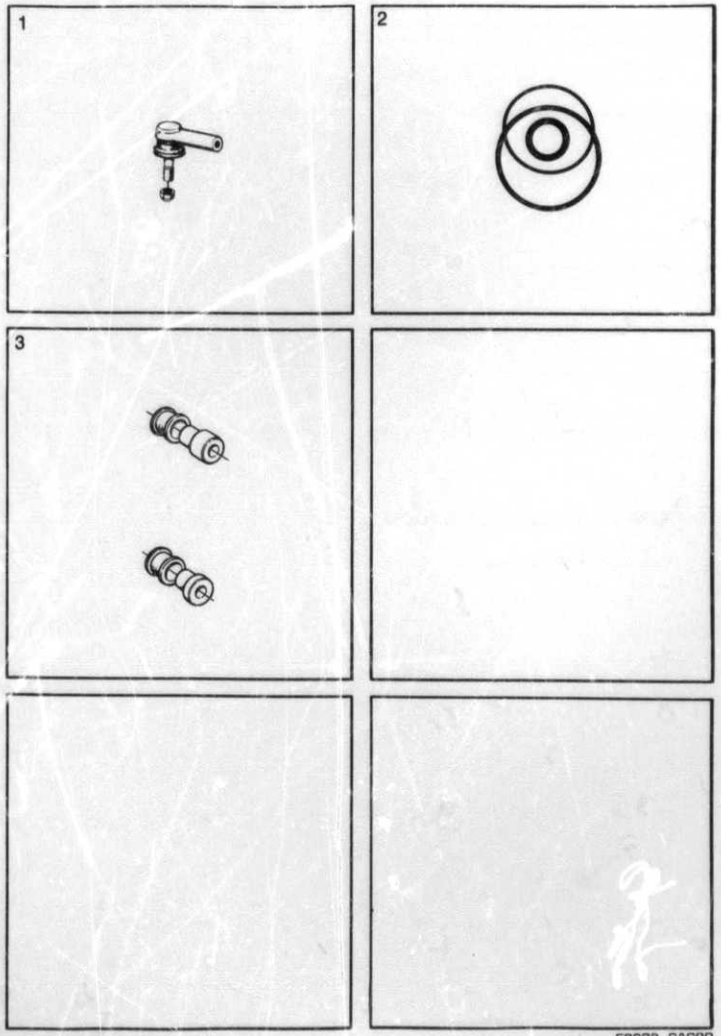

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
						Drag link end	Styrstagsända	2
0010	1	89 93 453			X	. Drag link end	. Styrstagsända	2
0020		89 57 839			1	. Lock nut	. Låsmutter	5
0030		81 51 482			1			
0040								
0050	2	*89 89 857*		1990	X	Gasket kit	Packningsats	4
0060				NLS - USE 4104766		hydraulic pump	hydraulpump	
0070				1)	1	. Gasket	. Packning	
0080				1)	1	. Gasket	. Packning	
0090				1)	1	. Gasket	. Packning	
0100								
0110	2	41 04 766		1991-	X	Sealing kit	Tätningssats	3
0120						hydraulic pump	hydraulpump	
0130		41 04 709		1)	1	. O-ring	. O-ring	2
0140		41 04 717		1)	1	. O-ring	. O-ring	3
0150		41 04 725		1)	1	. O-ring	. O-ring	3
0160		41 04 733		1)	1	. O-ring	. O-ring	3
0170		41 04 741		1)	1	. Seal	. Tätning	3
0180								
0190	3	40 29 989			X	Bushing kit	Bussningsats	5
0200		40 28 197		1)	1	. Bushing	. Bussning	5
0210		40 28 080		1)	2	. Bushing	. Bussning	5
0220		40 28 205		1)	1	. Bushing	. Bussning	5
0230								

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6 GROUP INDEX

Front wheel suspension	4-C06
Steering device	4-C08
Complete sets	4-D06

4-E02



Suspension, Wheels
Fjädringssystem, Hjul
Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0120
0125
0130
0140
0150
0160
0170
0175

TABLE OF CONTENTS

Front suspension, -1991	7 : 5	4-E06
Front suspension, 1992-	7 : 9	4-E10
Wheel	7 : 13	4-E14
Rear suspension, -1991	7 : 15	4-E16
Rear suspension, 1992-	7 : 19	4-E20
Rear axle	7 : 23	4-E24
Complete sets		
Suspension system, wheels	7 : 25	4-F02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E03

042
020
040
060
240
260
280
285
290
300
310
320
330
335
340
360
380
700
720
740
760
765
770
780
790
800
810
820

INNEHÅLLSFÖRTECKNING

Främre fjädring, -1991	7 : 5	4-E06
Främre fjädring, 1992-	7 : 9	4-E10
Hjul	7 : 13	4-E14
Bakre fjädring, -1991	7 : 15	4-E16
Bakre fjädring, 1992-	7 : 19	4-E20
Bakaxel	7 : 23	4-E24
Satser		
Fjädringssystem, hjul	7 : 25	4-F02

SUMARIO

Suspension Del, -1991	7 : 5	4-E06
Suspension Del, 1992-	7 : 9	4-E10
Ruedas	7 : 13	4-E14
Suspension Tras, -1991	7 : 15	4-E16
Suspension Tras, 1992-	7 : 19	4-E20
Eje Tras	7 : 23	4-E24
Juegos completos		
Suspensin ruedas	7 : 25	4-F02

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E06 Front suspension -1991

Främre fjädring -1991

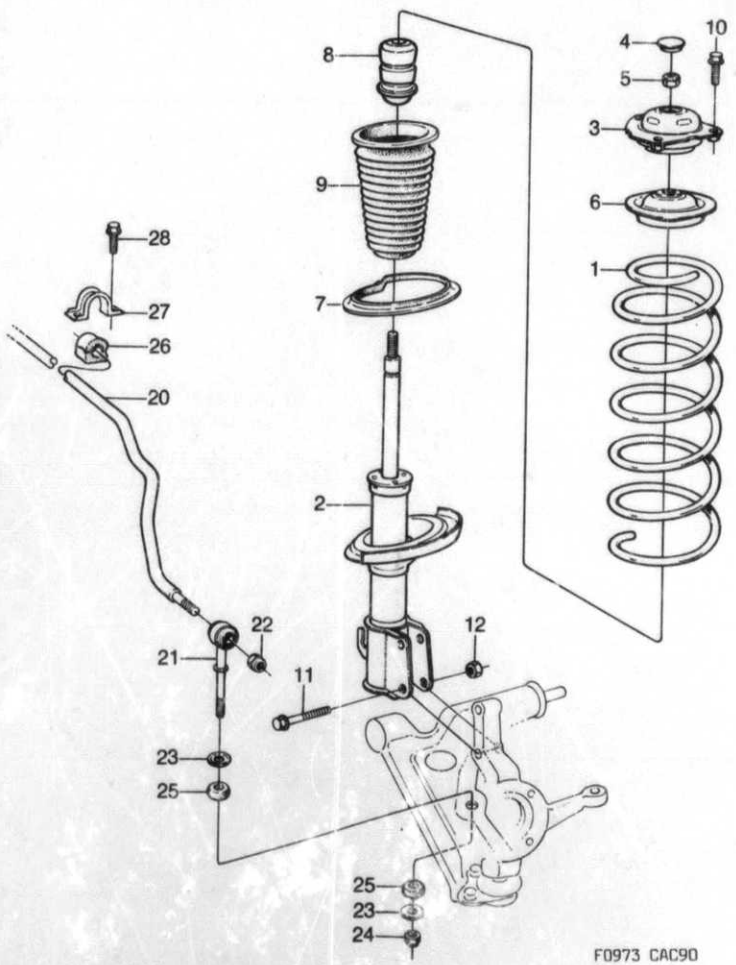

0100	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	89 71 814		14), 1990, I	2	Spring light blue or beige ALT 1 red/red ALT 2	Fjäder ljusblå eller beige ALT 1 röd/röd ALT 2	5
0040	1	89 71 822		24), B202 I, M + AC	2	Spring	Fjäder	5
0050				B202 I, A	2	brown or purple ALT 1	brun eller lila ALT 1	
0060				B202 TURBO, M	2	red/yellow ALT 2	röd/gul ALT 2	
0070				B234 I, M	2			
0090	1	89 71 806		25), B202 I, A + AC	2	Spring	Fjäder	5
0100				B202 TURBO, M + AC	2	orange or pink ALT 1	orange eller rosa ALT 1	
0110				B202 TURBO, A	2	red/blue ALT 2	röd/blå ALT 2	
0120				B234 I, M + AC	2			
0130				B234 I, A	2			
0140				B234 TURBO, M	2			
0160	1	89 71 830		26), B202 TURBO, A + AC	2	Spring	Fjäder	5
0170				B234 I, A + AC	2	dark blue or white ALT 1	mörkblå eller vit ALT 1	
0180				B234 TURBO, M + AC	2	red/white ALT 2	röd/vit ALT 2	
0190				B234 TURBO, A	2			
0210	1	*89 71 848*		B202 TURBO, A + AC, SR, ABS, AIR-BAG, EAS	2	Spring green or grey ALT 1 red/green ALT 2	Fjäder grön eller grå ALT 1 röd/grön ALT 2	5
0230				B234 TURBO, A + AC NLS - USE 4193413	2			
0250	1	89 71 863		T16S, 5D	2	Spring	Fjäder	5
0260				1991-, 5D TURBO US	2			
0280	1	41 07 652		T16S, 4D	2	Spring	Fjäder	5
0300	1	41 93 421		B234 TURBO, M, BR	2	Spring	Fjäder	5
0310	1	41 93 439		B234 TURBO, A, BR	2	Spring	Fjäder	5
0320	2	*89 67 861*		18), 5D TURBO, NOT US NLS - USE 4199881	2	Spring strut	Fjäderben	6
0330	2	*40 04 537*		19), 5D TURBO, NOT US NLS - USE 4199881	2	Spring strut	Fjäderben	6
0340	2	*89 71 780*		18), I	2	Spring strut	Fjäderben	6
0345				18), 4D NLS - USE 4199907	2			
0350	2	*40 04 545*		19), I	2	Spring strut	Fjäderben	6
0355				19), 4D NLS - USE 4199907	2			
0360	2	*89 71 780*		18), 5D TURBO, US NLS - USE 4199907	2	Spring strut	Fjäderben	6
0370	2	*40 04 545*		19)-1990, 5D TURBO, US NLS - USE 4199907	2	Spring strut	Fjäderben	6
0380	2	89 67 846		18), T16S	2	Spring strut	Fjäderben	6
0390	2	*40 04 552*		19), T16S	2	Spring strut	Fjäderben	6
0400				1991-, 5D TURBO US NLS - USE 4199899	2			
0410	2	41 07 603		T16S, 4D	2	Spring strut	Fjäderben	6
0420	3	*89 63 282*		1990 NLS - USE 4106969	2	Support bearing	Stödlager	6

14. Cars without AC and sun roof. Bilar utan AC och soltak.
18. Ch. --L1009076, --L2007140, --L8000969
19. Ch. L1009077--, L2007141--, L8000970--
24. If the car has SR, ABS, air-bag and EAS, chose spring 8971806 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 8971806
25. If the car has SR, ABS, air-bag and EAS, chose spring 8971830 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 8971830
26. If the car has SR, ABS, air-bag and EAS, chose spring 8971848 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 8971848

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E08 Front suspension -1991

Främre fjädring -1991

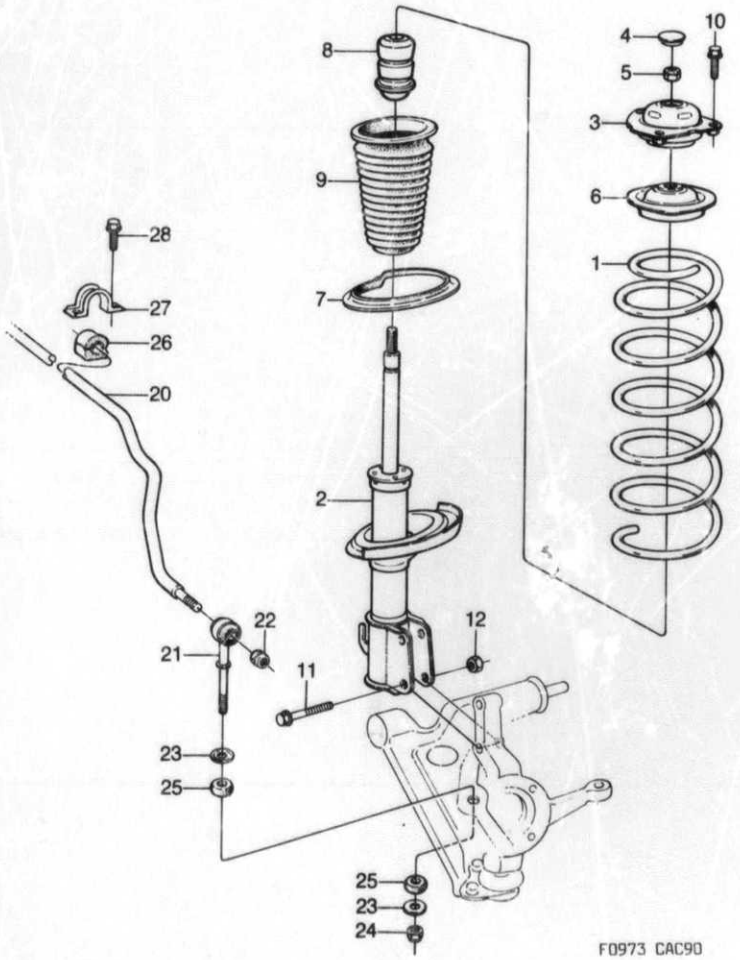

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	3	41 06 969		1991-	2	Support bearing	Stödlager	6
0440	4	89 64 207			2	Protecting casing	Skyddskåpa	5
0450	5	79 79 537			2	Lock nut	Låsmutter	3
0460	6	89 68 067			2	Spring seat	Fjädersäte	6
0470	7	89 57 102			2	Spring seat	Fjädersäte	6
0480	8	89 68 521		1990	2	Buffer	Buffert	5
0490	8	89 68 521		1991-, TURBO, 5D	2	Buffer	Buffert	5
0500	8	89 72 002		1991-	2	Buffer	Buffert	5
0510	9	89 58 084			2	Bellows	Bälg	6
0520	10	79 78 711		1990	6	Screw	Skruv	5
0530	10	79 82 994		1991-	6	Screw	Skruv	5
0540	11	89 66 129			4	Screw	Skruv	5
0550	12	79 71 765			4	Nut	Mutter	5
0560	20	89 62 144			1	Anti-roll bar	Krängningshämmare	6
0570	20	89 68 984		T16S	1	Anti-roll bar	Krängningshämmare	6
0580				1991-, 5D TURBO US	1			
0590	21	89 58 944			2	Link	Länk	6
0600	22	79 79 578			2	Nut	Mutter	3
0610	23	89 60 171			4	Washer	Bricka	5
0620	24	*81 51 474*		NLS - USE 7977812	2	Lock nut	Låsmutter	5
0630	25	89 53 986			4	Block	Block	5
0640	26	89 65 378			2	Bushing	Bussning	
0650	26	89 68 992		T16S	2	Bushing	Bussning	3
0660				1991-, 5D TURBO US	2			
0670	27	89 54 000			2	Cap	Överfall	5
0680	28	73 99 330			4	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E10 Front suspension 1992- / Främre fjädring 1992-

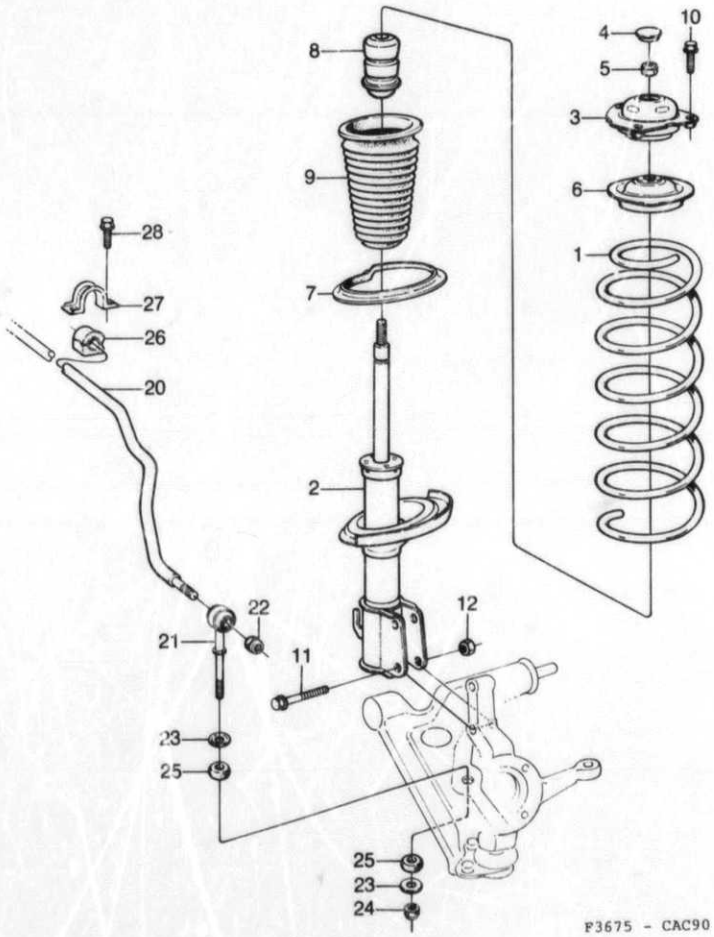

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 93 389		27), B202 I, M + AC	2	Spring	Fjäder	5
0020				B202 I, A	2	yellow/white	gul/vit	
0030				B202 TURBO, M	2			
0040				B234 I, M	2			
0050								
0060	1	41 93 397		28), B202 I, A + AC	2	Spring	Fjäder	5
0070				B202 TURBO, M + AC	2	yellow/green	gul/grön	
0080				B202 TURBO, A	2			
0090				B234 I, M + AC	2			
0100				B234 I, A	2			
0110				B234 TURBO, M	2			
0120								
0130	1	41 93 405		29), B202 TURBO, A + AC	2	Spring	Fjäder	5
0140				B234 I, A + AC	2	yellow/grey	gul/grå	
0150				B234 TURBO, M + AC	2			
0160				B234 TURBO, A	2			
0170								
0180	1	41 93 413		30)B202 TURBO, A + AC,SR, ABS, AIR-BAG, EAS, RAC	2	Spring	Fjäder	5
0190						blue/blue	blå/blå	
0200				B234 TURBO, A + AC	2			
0210								
0220	1	41 93 421		B234 TURBO, A + AC, SR, ABS, AIR-BAG, EAS, RAC	2	Spring	Fjäder	5
0230						blue/white	blå/vit	
0250								
0260	1	41 93 454		31), T16S, M	2	Spring	Fjäder	5
0270						white/white	vit/vit	
0290								
0300	1	41 93 462		T16S, A	2	Spring	Fjäder	5
0310						white/green	vit/grön	
0330								
0340	1	41 93 421		B234 TURBO, M, BR	2	Spring	Fjäder	5
0350	1	41 93 439		B234 TURBO, A, BR	2	Spring	Fjäder	5
0360								
0370	2	40 01 640			2	Spring strut	Fjäderben	6
0380						orange	orange	
0390	2	41 95 061		B234 TURBO + AC, SR, ABS, AIR-BAG, EAS, RAC	2	Spring strut	Fjäderben	6
0400						purple	lila	
0410	2	*40 04 552*		33), T16S, EU, ME NLS - USE 4199899	2	Spring strut	Fjäderben	6
0420						red	röd	
0430	2	41 95 061		33), T16S	2	Spring strut	Fjäderben	6
0440						purple	lila	
0450	2	41 99 402		34), -1993, T16S	2	Spring strut	Fjäderben	6
0460						grey	grå	
0470	2	41 94 338		1993-, TURBO AERO	2	Spring strut	Fjäderben	6
0480						brown	brun	
0490	3	41 06 969			2	Support bearing	Stödlager	6
0500	4	89 64 207		37)	2	Protecting casing	Skyddskåpa	5
0510	5	79 79 537			2	Lock nut	Låsmutter	3
0520	6	89 68 067			2	Spring seat	Fjädersäte	6
0530	7	41 95 327			2	Spacer	Mellanlägg	6

27. If the car has SR, ABS, air-bag and EAS, chose spring 4193397 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193397
28. If the car has SR, ABS, air-bag and EAS, chose spring 4193405 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193405
29. If the car has SR, ABS, air-bag and EAS, chose spring 4193413 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193413
30. If the car has SR, ABS, air-bag and EAS, chose spring 4193421 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193421
31. If the car has SR, ABS, air-bag and EAS, chose spring 4193462 — Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193462
33. Ch. --N1014420
34. Ch. N1014421--
37. Ch. --P1032956


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, --1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, --1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E12 Front suspension 1992- / Främre fjädring 1992-

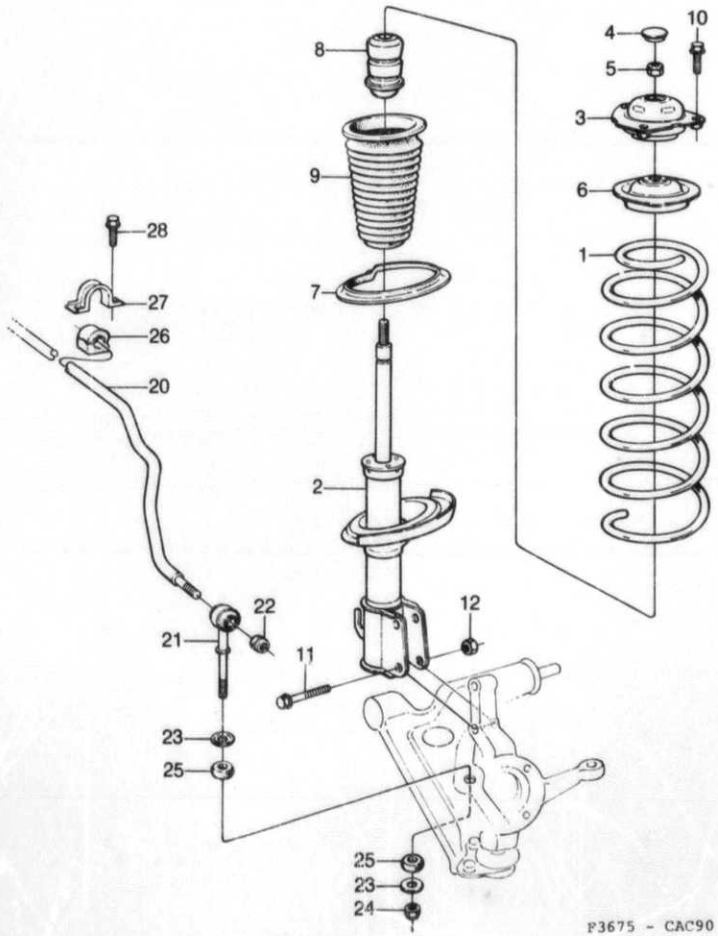

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	8	89 68 521		33), T16S, EU, ME	2	Buffer	Buffert	5
0550	8	89 72 002			2	Buffer	Buffert	5
0560	9	89 58 084			2	Bellows	Bälg	6
0570	10	79 84 511			6	Screw	Skruv	5
0580	11	89 66 129			4	Screw	Skruv	5
0590	12	79 79 552			4	Nut	Mutter	5
0600	20	89 68 984			1	Anti-roll bar	Krängningshämmare	6
0610	21	89 58 944			2	Link	Länk	6
0620	22	79 79 578			2	Nut	Mutter	3
0630	23	89 60 171			4	Washer	Bricka	5
0640	24	*81 51 474*		NLS - USE 7977812	2	Lock nut	Låsmutter	5
0650	25	89 53 986			4	Block	Block	5
0660	26	89 68 992			2	Bushing	Bussning	3
0670	27	83 54 000			2	Cap	Överfall	5
0680	28	73 99 330			4	Screw	Skruv	5

33. Ch. -N1014420


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E14 *Wheel* *Hjul*

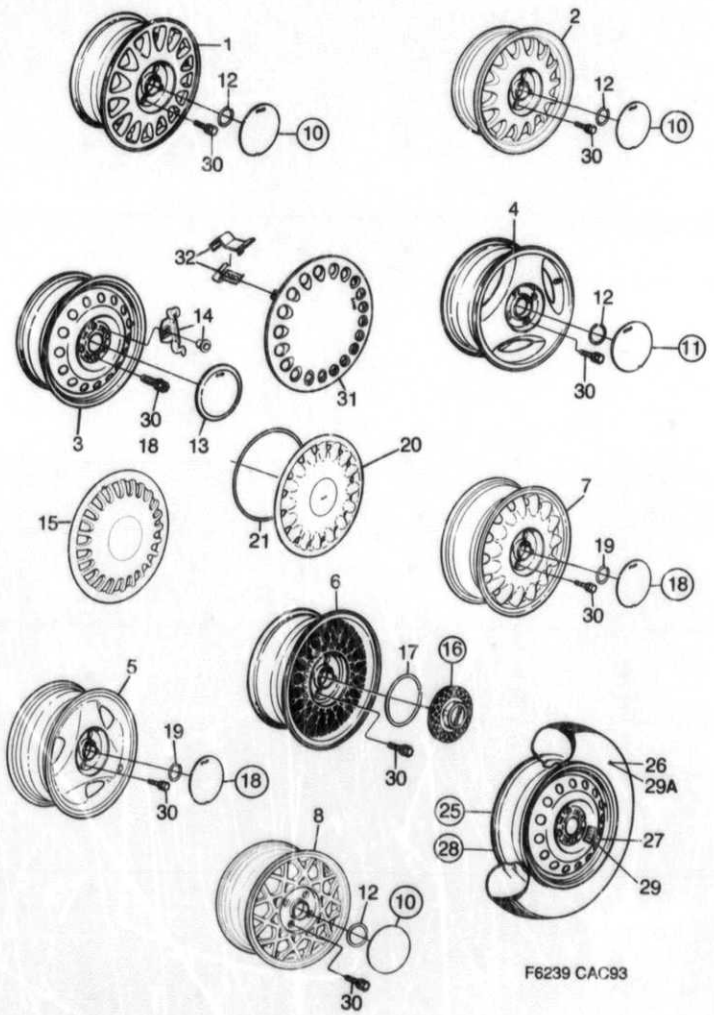

F6239 CAC93

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 58 910		1990, 40/105122907	4	Wheel	Hjul	4
0020	1	89 65 212		1990 ONLY JP40/105122907	4	Wheel	Hjul	4
0030	2	40 02 390		1991-, 40/105124705	4	Wheel	Hjul	4
0040	3	*89 60 254*		11), -1991, 5,5"	4	Wheel	Hjul	4
0050				NLS - USE 8961492		steel-wheel	stålhjul	
0060	3	89 61 492		11), 1992-, 5,5"	4	Wheel	Hjul	4
0070						steel-wheel	stålhjul	
0080	3	*89 60 288*		11), -1991, 6"	4	Wheel	Hjul	4
0090				NLS - USE 8961526		steel-wheel	stålhjul	
0100	3	89 61 526		11), 1992-, 6"	4	Wheel	Hjul	4
0110						steel-wheel	stålhjul	
0120	3	*89 62 383*		-1991, 6"	4	Wheel	Hjul	4
0130				NLS - USE 8962391		steel-wheel,black	stålhjul,svart	
0140	3	89 62 391		1992-, 6"	4	Wheel	Hjul	4
0150						steel-wheel,black	stålhjul,svart	
0160	4	89 67 036		40/105123707	4	Wheel	Hjul	4
0170	5	40 04 735		1992-, LH, 40/105124309	2	Wheel	Hjul	4
0180	5	40 04 727		1992-, RH, 40/105124408	2	Wheel	Hjul	4
0190	6	40 02 408		40/105123616	4	Wheel	Hjul	4
0200	7	40 04 602		1992-, 40/105124200	4	Wheel	Hjul	4
0203	8	89 70 980		1993-, 40/105122402	4	Wheel	Hjul	4
0210	10	89 87 620		40/105123400	4	Wheel cap	Hjulkapsel	2
0220	11	89 73 018		40/105123715	4	Wheel cap	Hjulkapsel	2
0230	12	89 87 802			1	. Spring ring	. Fjäderring	2
0240	13	89 87 596		1990	4	Wheel cap	Hjulkapsel	2
0250	14	91 01 510		1990	8	Clamp kit	Klammersats	2
0260	15	89 72 663			4	Wheel cap	Hjulkapsel	2
0270						plastic	plast	
0280	16	89 69 545		-1991, 40/105122329	4	Wheel cap	Hjulkapsel	2
0285	16	41 99 360		1992-, 40/105122352	4	Wheel cap	Hjulkapsel	2
0290	17	*89 71 699*		-1991 NLS - USE 4199386	1	. Spring ring	. Fjäderring	2
0295	17	41 99 386		1992-	1	. Clamping ring	. Spännring	2
0300	18	41 04 287		1992-, 40/105124119	4	Wheel cap	Hjulkapsel	2
0310	19	89 87 802			1	. Spring ring	. Fjäderring	2
0320	20	41 05 391		1992-	1	Wheel cap	Hjulkapsel	2
0330	21	41 93 587		1992-	1	. Clamping ring	. Spännring	2
0340	25	*40 00 816*		1990 NLS - USE 4194999	1	Wheel	Hjul	5
0350	25	41 94 981		1991	1	Wheel	Hjul	5
0355	25	41 94 999		1992-	1	Wheel	Hjul	5
0360	26	91 05 461		1990	1	. Tyre	. Däck	6
0370	26	40 02 507		1991-	1	. Tyre	. Däck	6
0380	27	40 02 358			1	. Label	. Etikett	5
0390	28	*89 62 367*		1990	1	Wheel	Hjul	4
0400				NLS - USE 8962375		big spare wheel	stort reservhjul	
0410	28	76 85 878		1991-	1	Wheel	Hjul	5
0420						big spare wheel	stort reservhjul	
0430	29	40 02 358		1991-	1	. Label	. Etikett	5
0440	29A			1), 1991-, 175/70 R15	1	. Tyre	. Däck	
0450	30	89 65 907			16	Wheel screw	Hjulskruv	2
0460	31	89 72 812		1990	4	Wheel cap	Hjulkapsel	2
0470						sheet metal	plåt	
0480	32	89 73 422		1990	1	. Clamp kit	. Klammersats	2
0490				See page 7-025, 4-F02				

1. Not as separate spare part. Ej som separat reservdel.
11. Alternative for snow-tire Alternativ för snödäck

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E16 Rear suspension -1991

Bakre fjädring -1991

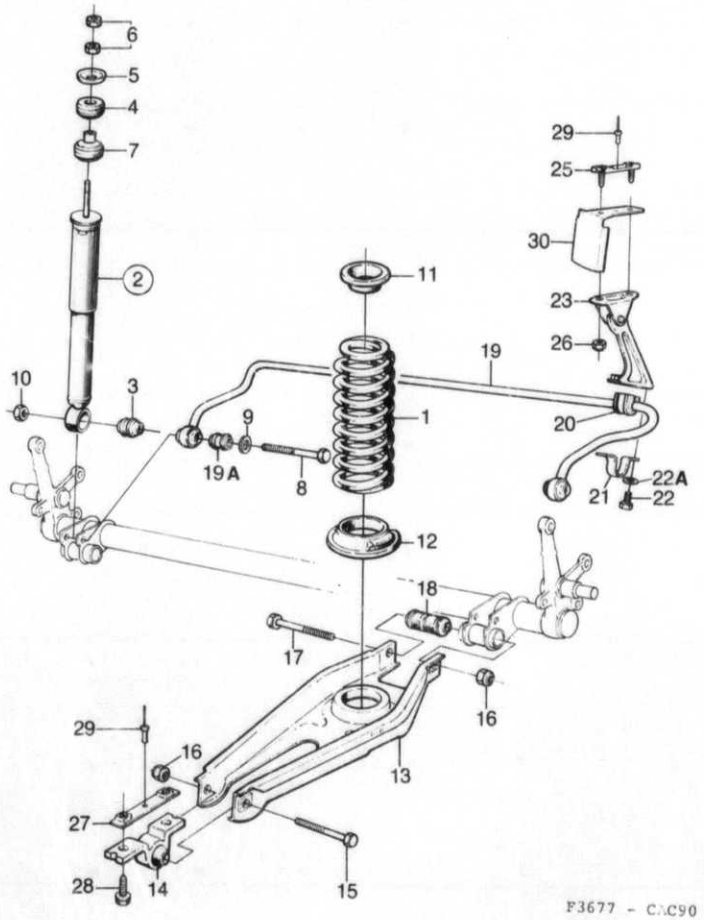

0150	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	89 60 932			2	Spring	Fjäder	5
0020						brown or blue ALT 1	brun eller blå ALT 1	
0025						red/red ALT 2	röd/röd ALT 2	
0030						∅ 13,4 mm	∅ 13,4 mm	
0040								
0050	1	89 60 940		A + AC, SR, ABS, AIR-BAG, EAS	2	Spring	Fjäder	5
0060						orange or white ALT 1	orange eller vit ALT 1	
0065						red/yellow ALT 2	röd/gul ALT 2	
0070						∅ 13,6 mm	∅ 13,6 mm	
0080								
0090	1	89 69 966		12)	2	Spring	Fjäder	5
0100	1	89 69 016		T16S	2	Spring	Fjäder	5
0110				1991-, 5D TURBO US	2			
0120	2	89 68 570		5D TURBO, NOT US	2	Shock absorber kit	Stötdämparsats	1
0130				See page 7-025, 4-F02				
0140	2	89 68 570		T16S	2	Shock absorber kit	Stötdämparsats	1
0150				1991-, 5D TURBO US	2			
0160				See page 7-025, 4-F02				
0170	2	40 01 004		1990, 5D TURBO, US	2	Shock absorber kit	Stötdämparsats	1
0180				See page 7-025, 4-F02				
0190	2	40 01 004		17)	2	Shock absorber kit	Stötdämparsats	1
0200				See page 7-025, 4-F02				
0210	2	*40 01 426*		12)	2	Shock absorber kit	Stötdämparsats	1
0220				See page 7-025, 4-F02				
0220				NLS - USE 8993750				
0230	2	89 93 750		12,32)	2	Shock absorber kit	Stötdämparsats	1
0240				See page 7-025, 4-F02				
0250	3	89 52 749	S		2	. Bearing bushing	. Lagerbussning	1
0260	3	89 63 944	S	12)	2	. Bearing bushing	. Lagerbussning	1
0270	4	89 52 335	S		2	. Rubber bushing	. Gummibussning	1
0280	4	89 52 335	S	12,20)	2	. Rubber bushing	. Gummibussning	1
0290	4	41 06 951	S	12,21)	2	. Rubber bushing	. Gummibussning	1
0300	5	89 59 934	S		2	. Washer	. Bricka	5
0310	6	79 79 511	S		4	. Nut	. Mutter	5
0320	7	89 52 327	S		2	. Rubber bushing	. Gummibussning	1
0330	7	89 52 327	S	12,20)	2	. Rubber bushing	. Gummibussning	1
0340	7	41 06 944	S	12,21)	2	. Rubber bushing	. Gummibussning	1
0350	8	*79 79 396*		1990 NLS - USE 7979594	2	Screw	Skruv	5
0360	8	79 79 594		1991-	2	Screw	Skruv	5
0370	9	80 73 116		1991-	4	Washer	Bricka	5
0380	10	79 71 765		1990	2	Nut	Mutter	5
0390	10	81 51 482		1991-	2	Lock nut	Låsmutter	5
0400	11	89 52 235			2	Spring insulator	Fjäderisolator	4
0410	12	89 50 438			2	Spring insulator	Fjäderisolator	4
0420	13	89 70 782			2	Spring link	Fjäderlänk	4
0430	14	89 57 714			2	Bearing anchorage	Lagerfäste	5
0440	15	79 82 028			2	Screw	Skruv	5
0450	16	*81 51 474*		NLS - USE 7977812	8	Lock nut	Låsmutter	5
0460	17	79 82 036			2	Screw	Skruv	5
0470	18	89 51 063			2	Bushing	Bussning	3
0480	19	89 61 765		5D	1	Anti-roll bar	Krängningshämmare	6
0490	19	89 61 765		T16S	1	Anti-roll bar	Krängningshämmare	6
0500	19	89 71 368		4D	1	Anti-roll bar	Krängningshämmare	6
0510	19A	89 62 011			2	. Bearing bushing	. Lagerbussning	1
0520	20	89 52 129			2	Rubber bushing	Gummibussning	3
0530	21	89 52 137			2	Brace	Bygel	3
0540	22	79 82 101		1990	4	Screw	Skruv	5
0550	22	79 75 212		1991-	4	Screw	Skruv	5

12. Cars with automatic level control Bilar med automatisk nivåkontroll
17. I and 4D I och 4D
20. Ch. --L1018981, --L2013605, --L8002058
21. Ch. L1018982--, L2013606--
32. Alternative, see SI 761-1207 Alternativ, se SI 761-1207

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E18 Rear suspension -1991

Bakre fjädring -1991

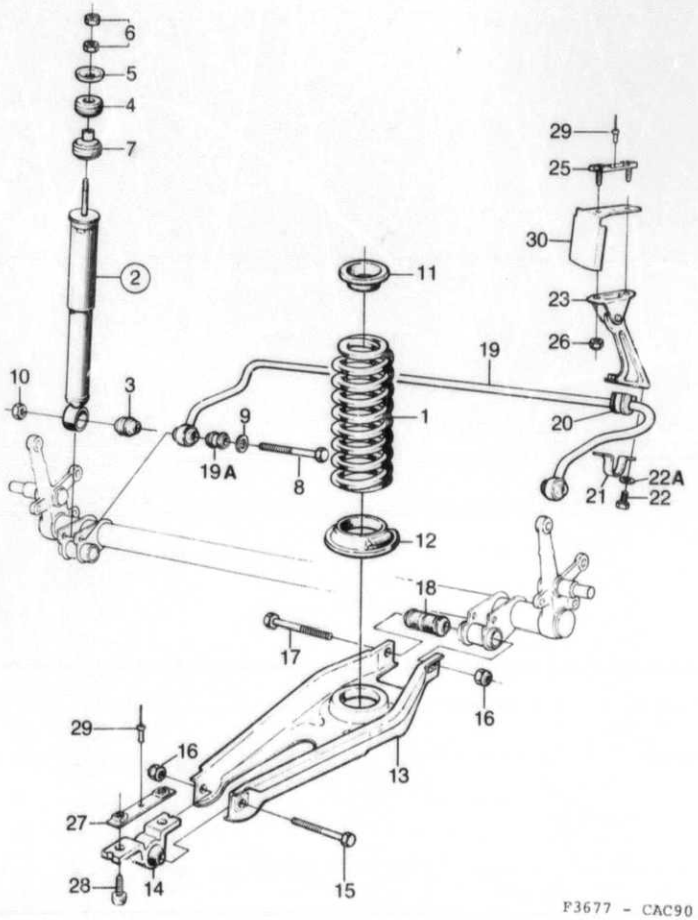

F3677 - CAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	22A	83 80 982		1991-	4	Washer	Bricka	5
0570	23	89 65 105		LH	1	Link	Länk	4
0580	23	89 65 113		RH	1	Link	Länk	4
0590	25	89 61 625			2	Attaching plate	Fästplatta	6
0600	26	79 71 922			4	Nut	Mutter	3
0610	27	89 58 498			2	Nut piece	Mutterstycke	6
0620	28	79 76 905			4	Screw	Skruv	5
0630	29	79 61 642			2	Rivet	Nit	5
0640	30	89 69 214			1	Protecting plate	Skyddsplåt	6


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E20 Rear suspension 1992- / Bakre fjädring 1992-

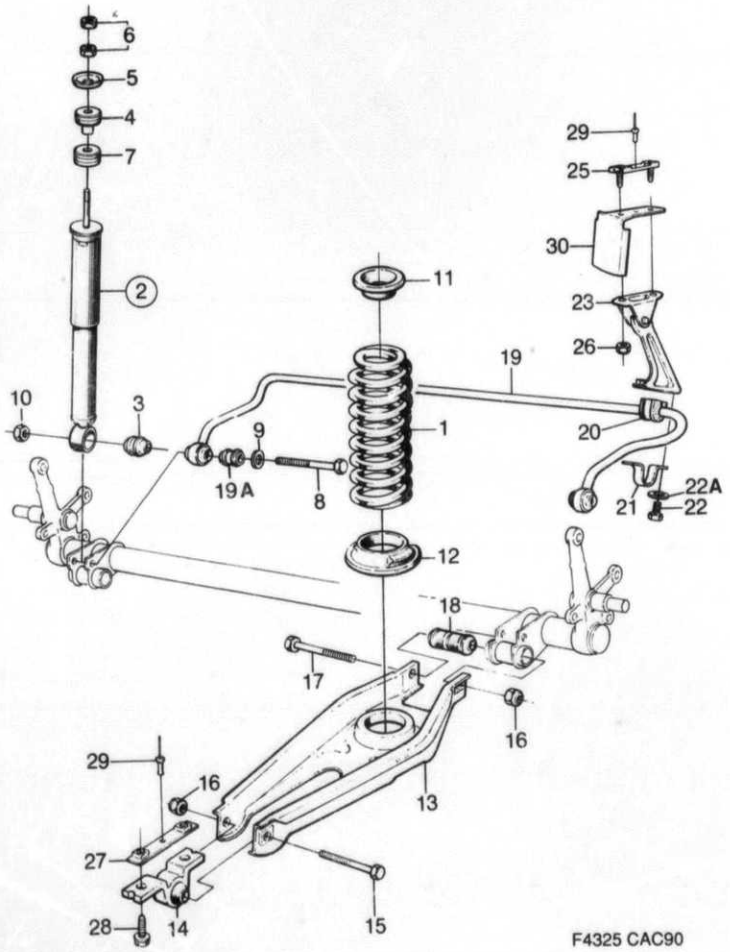

F4325 CAC90

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 93 561			2	Spring	Fjäder	5
0020						red/grey	röd/grå	
0030						Ø 13,3 mm	Ø 13,3 mm	
0040								
0050	1	41 93 603		A + AC, SR, ABS, AIR-BAG, EAS, RAC	2	Spring	Fjäder	5
0060						yellow/yellow	gul/gul	
0070						Ø 13,5 mm	Ø 13,5 mm	
0080								
0090	1	41 93 561		33), T16S, M, EU, ME	2	Spring	Fjäder	5
0100						red/grey	röd/grå	
0110						Ø 13,3 mm	Ø 13,3 mm	
0120								
0130	1	41 93 603		33), T16S, A, EU, ME	2	Spring	Fjäder	5
0140						yellow/yellow	gul/gul	
0150						Ø 13,5 mm	Ø 13,5 mm	
0160								
0170	1	41 93 629		33), T16S, M	2	Spring	Fjäder	5
0180						yellow/white	gul/vit	
0190						Ø 13,5 mm	Ø 13,5 mm	
0200								
0210	1	41 93 637		33), T16S, A	2	Spring	Fjäder	5
0220						yellow/green	gul/grön	
0230						Ø 13,7 mm	Ø 13,7 mm	
0240								
0250	1	41 93 629		34), T16S, M	2	Spring	Fjäder	5
0260						yellow/white	gul/vit	
0270						Ø 13,5 mm	Ø 13,5 mm	
0280								
0290	1	41 93 637		34), T16S, A	2	Spring	Fjäder	5
0300						yellow/green	gul/grön	
0310						Ø 13,7 mm	Ø 13,7 mm	
0320								
0330	1	41 93 645		12)	2	Spring	Fjäder	5
0340								
0350	2	41 95 228		See page 7-025, 4-F02	2	Shock absorber kit	Stötdämparsats	1
0360						orange	orange	
0370								
0380	2	41 95 236		B234 TURBO, + AC, SR, ABS, AIR-BAG, EAS, RAC	2	Shock absorber kit	Stötdämparsats	1
0390				See page 7-025, 4-F02		purple	lila	
0400								
0410	2	41 95 236		33), T16S	2	Shock absorber kit	Stötdämparsats	1
0420				See page 7-025, 4-F02		purple	lila	
0430								
0440								
0450	2	41 99 444		34), T16S	2	Shock absorber kit	Stötdämparsats	1
0460				See page 7-025, 4-F02		grey	grå	
0470								
0480	2	89 93 784		12)	2	Shock absorber kit	Stötdämparsats	1
0490				See page 7-025, 4-F02				
0500	3	89 52 749	S		2	.Bearing bushing	.Lagerbussning	1
0510	3	89 63 944	S	12)	2	.Bearing bushing	.Lagerbussning	1
0520	4	41 97 422	S		2	.Rubber bushing	.Gummibussning	1
0530	5	89 59 934	S		2	.Washer	.Bricka	5
0540	6	79 79 511	S		4	.Nut	.Mutter	5
0550	7	41 06 266	S		2	.Rubber bushing	.Gummibussning	1
0560	8	79 79 594			2	Screw	Skruv	5
0570	9	80 73 116			4	Washer	Bricka	5
0580	10	81 51 482			2	Lock nut	Låsmutter	5
0590	11	89 52 285			2	Spring insulator	Fjäderisolator	4
0600	12	89 50 438			2	Spring insulator	Fjäderisolator	4

12. Cars with automatic level control Bilar med automatisk nivåkontroll
33. Ch. --N1014420
34. Ch. N1014421--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E22 Rear suspension 1992- / Bakre fjädring 1992-

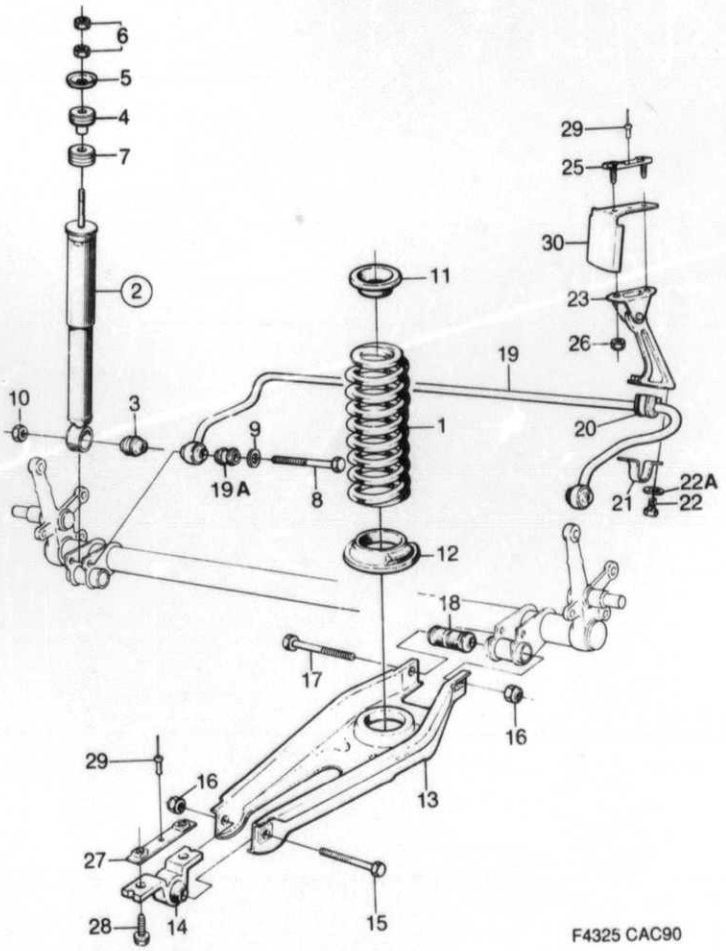

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	13	89 70 782			2	Spring link	Fjäderlänk	4
0620	14	89 57 714			2	Bearing anchorage	Lagerfäste	5
0630	15	73 82 028			2	Screw	Skruv	5
0640	16	*81 51 474*		NLS - USE 7977812	8	Lock nut	Låsmutter	5
0650	17	79 82 036			2	Screw	Skruv	5
0660	18	89 51 063			2	Bushing	Bussning	3
0670	19	41 05 730		5D, 5CS	1	Anti-roll bar	Krängningshämmare	5
0680	19	89 61 765		4D	1	Anti-roll bar	Krängningshämmare	6
0690	19A	89 62 011			2	▲Bearing bushing	▲Lagerbussning	1
0700	20	41 07 090		35), 5D, 5CS	2	Rubber bushing	Gummibussning	3
0710	20	44 25 583		36), 5D, 5CS	2	Rubber bushing	Gummibussning	
0720	20	89 52 129		35), 4D	2	Rubber bushing	Gummibussning	3
0730	20	44 25 575		36), 4D	2	Rubber bushing	Gummibussning	
0740	21	89 52 137			2	Brace	Bygel	3
0750	22	79 76 897			4	Screw	Skruv	5
0760	22A	83 80 982			4	Washer	Bricka	5
0770	23	41 93 132		LH	1	Link	Länk	4
0780	23	41 93 140		RH	1	Link	Länk	4
0790	25	89 61 625			2	Attaching plate	Fästplatta	6
0800	26	79 71 922			4	Nut	Mutter	3
0810	27	89 58 498			2	Nut piece	Mutterstycke	6
0820	28	79 76 905			4	Screw	Skruv	5
0830	29	79 61 642			2	Rivet	Nit	5
0840	30	89 69 214			1	Protecting plate	Skyddsplåt	6

35. Ch. --P1012187
36. Ch. P1012188--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-E24 Rear axle Bakaxel

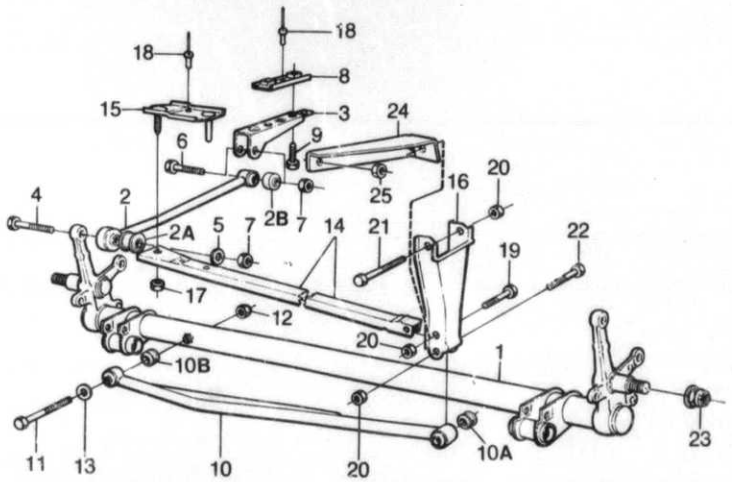

F3327 CAC90

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	*89 63 050*		22) NLS - USE 8957706	1	Rear axle	Bakaxel	4
0035	1	89 57 706		23)	1	Rear axle	Bakaxel	4
0040	2	89 52 046			2	Stay	Stag	3
0050	2A	89 55 759			1	.Bushing	.Bussning	3
0055	2B	89 56 468			1	.Bushing	.Bussning	3
0060	3	89 51 915			2	Bracket	Fäste	6
0090	4	*79 79 487*		NLS - USE 7979586	2	Screw	Skruv	5
0100	5	89 52 277			2	Washer	Bricka	5
0130	6	79 82 002			2	Screw	Skruv	5
0150	7	*81 51 474*		NLS - USE 7977812	4	Lock nut	Låsmutter	5
0160	8	89 58 514			2	Nut piece	Mutterstycke	6
0180	9	79 76 897			4	Screw	Skruv	5
0200	10	*89 73 000*		-1991 NLS - USE 8957722	1	Stay	Stag	5
0210	10	89 57 722		1992-	1	Stay	Stag	5
0215	10A	89 72 648		-1991	1	.Bushing	.Bussning	3
0220	10A	89 52 558		1992-	1	.Bushing	.Bussning	3
0225	10B	89 72 655		-1991	1	.Bushing	.Bussning	3
0227	10B	89 57 532		1992-	1	.Bushing	.Bussning	3
0230	11	79 82 069			1	Screw	Skruv	5
0250	12	81 51 482			1	Lock nut	Låsmutter	5
0260	13	79 16 521			1	Washer	Bricka	5
0290	14	89 68 471			1	Stay	Stag	4
0300	15	89 58 746			1	Washer	Bricka	6
0320	16	89 58 613			1	Bracket	Fäste	6
0350	17	81 51 482			1	Lock nut	Låsmutter	5
0360	18	79 61 642			1	Rivet	Nit	5
0380	19	79 82 085			1	Screw	Skruv	5
0410	20	*81 51 474*		NLS - USE 7977812	3	Lock nut	Låsmutter	5
0430	21	79 82 093			1	Screw	Skruv	5
0450	22	79 82 085			1	Screw	Skruv	5
0460	23	89 65 360			2	Lock nut	Låsmutter	3
0470	24	89 68 505			1	Bracket	Fäste	6
0480	25	79 71 922			1	Nut	Mutter	3


22. Ch. --L1025774, --L2018144, --L8002058
23. Ch. L1025775--, L2018145--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

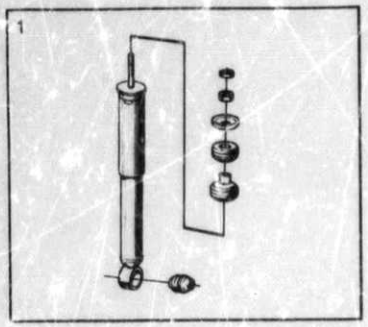

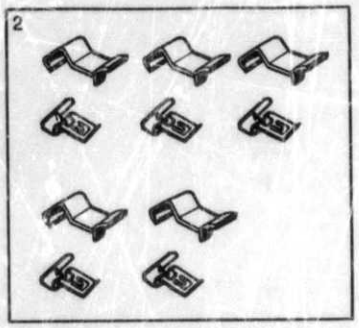

F2941 CAC90

Complete sets
4-F02
Suspension system
Wheel

Satser
Fjädringssystem
Hjul

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 68 570		3),-1991,5D TURBO,NOT US	X	Shock absorber kit	Stötdämparsats	1
0020				1991, 5D TURBO US	X			
0030		*89 88 513*		1) NLS	1	.Shock absorber	.Stötdämpare	6
0040		89 52 327			1	.Rubber bushing	.Gummibussning	1
0050		89 52 335			1	.Rubber bushing	.Gummibussning	1
0060		89 59 934			1	.Washer	.Bricka	5
0070		79 79 511			2	.Nut	.Mutter	5
0080								
0090	1	41 95 228		3),1992-	X	Shock absorber kit orange	Stötdämparsats orange	1
0100								
0110		41 05 656		1)	1	.Shock absorber	.Stötdämpare	6
0120		41 97 422			1	.Rubber bushing	.Gummibussning	1
0130		41 06 266			1	.Rubber bushing	.Gummibussning	1
0140		89 59 934			1	.Washer	.Bricka	5
0150		79 79 511			2	.Nut	.Mutter	5
0160								
0170	1	40 01 004		3,17), -1991	X	Shock absorber kit	Stötdämparsats	1
0180				3), 1990, 5D TURBO US	X			
0190		40 00 998		1)	1	.Shock absorber	.Stötdämpare	6
0200		89 52 327			1	.Rubber bushing	.Gummibussning	1
0210		89 52 335			1	.Rubber bushing	.Gummibussning	1
0220		89 59 934			1	.Washer	.Bricka	5
0230		79 79 511			2	.Nut	.Mutter	5
0240								
0250	1	41 95 236		3), 1992-,B234 TURBO+AC, SR, ABS, AIR-BAG,EAS,RAC	X	Shock absorber kit purple	Stötdämparsats lila	1
0260								
0270		41 95 103		1)	1	.Shock absorber	.Stötdämpare	6
0280		41 97 422			1	.Rubber bushing	.Gummibussning	1
0290		41 06 266			1	.Rubber bushing	.Gummibussning	1
0300		89 59 934			1	.Washer	.Bricka	5
0310		79 79 511			2	.Nut	.Mutter	5
0320								
0330	1	41 99 444		3), 1992-, T16S	X	Shock absorber kit grey	Stötdämparsats grå	1
0340								
0345		41 99 428		1)	1	.Shock absorber	.Stötdämpare	6
0350		41 97 422			1	.Rubber bushing	.Gummibussning	1
0360		41 06 266			1	.Rubber bushing	.Gummibussning	1
0370		89 59 934			1	.Washer	.Bricka	5
0380		89 52 749			1	.Bearing bushing	.Lagerbussning	1
0390		79 79 511			2	.Nut	.Mutter	5
0400								
0410	1	*40 01 426*		3,12),1990 NLS - USE 8993750	X	Shock absorber kit	Stötdämparsats	1
0410								
0420		*89 71 962*		1) NLS - USE 4193249	1	.Shock absorber	.Stötdämpare	6
0430		89 52 327		20)	1	.Rubber bushing	.Gummibussning	1
0440		41 06 944		21)	1	.Rubber bushing	.Gummibussning	1
0450		89 52 335		20)	1	.Rubber bushing	.Gummibussning	1
0460		41 06 951		21)	1	.Rubber bushing	.Gummibussning	1
0470		89 59 934			1	.Washer	.Bricka	5
0480		79 79 511			2	.Nut	.Mutter	5
0490								
0500	1	89 93 750		3,12),1991	X	Shock absorber kit	Stötdämparsats	1
0510		41 93 249		1)	1	.Shock absorber	.Stötdämpare	6
0520		41 06 944			1	.Rubber bushing	.Gummibussning	1
0530		41 06 951			1	.Rubber bushing	.Gummibussning	1
0540		89 59 934			1	.Washer	.Bricka	5
0550		79 79 511			2	.Nut	.Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre
12. Cars with automatic level control Bilar med automatisk nivåkontroll
17. I and 4D I och 4D
20. Ch. -L1018981, -L2013605, -L8002058
21. Ch. L1018982-, L2013606-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


7 GROUP INDEX


Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

4-F04

Suspension system
Wheel

Fjädringssystem
Hjul

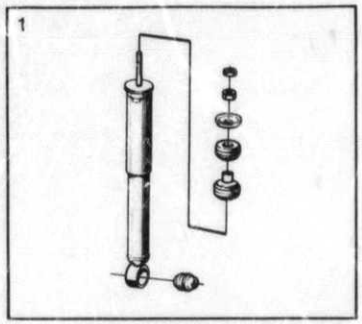

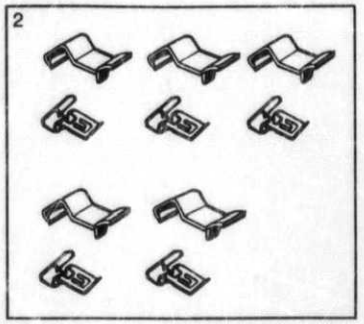

F2941 CAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560								
0570	1	89 93 784		3,12),1992-	X	Shock absorber kit	Stötdämparsats	1
0580		41 94 254		1)	1	.Shock absorber	.Stötdämpare	6
0590		41 97 422			1	.Rubber bushing	.Gummibussning	1
0600		41 06 266			1	.Rubber bushing	.Gummibussning	1
0610		89 59 934			1	.Washer	.Bricka	5
0620		79 79 511			2	.Nut	.Mutter	5
0630		89 63 944			1	.Bearing bushing	.Lagerbussning	1
0640								
0650	2	89 73 422		1990	X	Clamp kit	Klammersats	2
0660		89 72 846			5	.Clip	.Clips	
0670		89 72 853			5	.Plastic cover	.Plastskydd	
0680								

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre
12. Cars with automatic level control Bilar med automatisk nivåkontroll

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7 GROUP INDEX

Front suspension, –1991	4-E06
Front suspension, 1992–	4-E10
Wheel	4-E14
Rear suspension, –1991	4-E16
Rear suspension, 1992–	4-E20
Rear axle	4-E24
Complete sets	4-F02

8A

Body, external
Kaross, utvändig
Carrocería, exterior

5-A02

TABLE OF CONTENTS

Car body		
Front- and centre floor	8A : 5	5-A06
Rear floor	8A : 9	5-A10
Roof	8A : 13	5-A14
Sun roof, electrically operated	8A : 15	5-A16
Cowl plate	8A : 19	5-A20
Wheel housing, front	8A : 23	5-A24
Wheel housing, rear	8A : 25	5-B02
Valances, 5D	8A : 27	5-B04
Valances, 4D	8A : 29	5-B06
Valances, 5CS	8A : 31	5-B08
Door frame	8A : 35	5-B12
Plugs etc	8A : 37	5-B14
Hood, front, fenders		
Hood, hood hinges and hood lock	8A : 39	5-B16
Front member, grille	8A : 43	5-B20
Front fenders, 5D, 4D	8A : 45	5-B22
Front fenders, 5CS	8A : 47	5-B24
Doors, trunk lid		
Front doors, hinges, window regulators	8A : 49	5-C02
Rear doors, hinges, window regulators	8A : 53	5-C06
Door lock, front door	8A : 57	5-C10
Door lock, rear door	8A : 59	5-C12
Trunk door, hinges, lock, 5D	8A : 61	5-C14
Trunk lid, hinges, lock, 4D	8A : 65	5-C18
Trunk door, hinges, lock, 5CS	8A : 69	5-C22
Outside handle	8A : 71	5-C24
Lock- and lock cylinder sets	8A : 75	5-D04
External details, glass, sealings		
Emblem	8A : 79	5-D08
Decor, 5D	8A : 81	5-D10
Decor, 4D	8A : 87	5-D16
Decor, 5CS	8A : 91	5-D20
Spoiler, 4D, 5D	8A : 95	5-D24
Spoiler, 5CS	8A : 99	5-E04
T16SA, 1990	8A : 101	5-E06
T16SA, 1991-1992	8A : 103	5-E08
5CS Aero, 1993-	8A : 105	5-E10
External mirror	8A : 109	5-E14
Windscreen	8A : 115	5-E20
Rear window	8A : 117	5-E22
Doors and side windows	8A : 119	5-E24
Splash guards	8A : 123	5-F04
Other sealings	8A : 127	5-F08
Bumpers and touch-up paint		
Bumper, front, 5D	8A : 131	5-F12
Bumper, front, 4D	8A : 133	5-F14
Bumper, front, 5CS	8A : 135	5-F16
Bumper, rear, 5D	8A : 137	5-F18
Bumper, rear, 4D	8A : 139	5-F20
Bumper, rear, 5CS	8A : 141	5-F22
Touch-up paint, 1-can	8A : 143	5-F24
Touch-up paint, 2-can	8A : 145	5-G02
Touch-up paint, two-coat type	8A : 147	5-G04
Touch-up paint, other paint	8A : 149	5-G06
Complete sets		
Car body, external	8A : 151	5-G08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A03

INNEHÅLLSFÖRTECKNING

Karosseristomme		
Främre och mittre golv	8A : 5	5-A04
Bakre golv	8A : 9	5-A10
Tak	8A : 13	5-A14
Soltak, el-manövrerat	8A : 15	5-A16
Torpedplåt	8A : 19	5-A20
Hjulhus, främre	8A : 23	5-A24
Hjulhus, bakre	8A : 25	5-B02
Sidoplåtar	8A : 27	5-B04
Sidoplåtar, 4D	8A : 29	5-B06
Sidoplåtar, 5CS	8A : 31	5-B08
Dörrram	8A : 35	5-B12
Pluggar etc	8A : 37	5-B14
Motorhuv, front, skärmar		
Motorhuv, huvgångjärn och huvlås	8A : 39	5-B16
Frontbalk, grill	8A : 43	5-B20
Framskärmar	8A : 45	5-B22
Framskärmar, 5CS	8A : 47	5-B24
Dörrar, bagagerumslucka		
Framdörrar, gångjärn, fönsterhissar etc	8A : 49	5-C02
Bakdörrar, gångjärn, fönsterhissar etc	8A : 53	5-C06
Dörrlås, framdörr	8A : 57	5-C10
Dörrlås, bakdörr	8A : 59	5-C12
Bagagerumsdörr, gångjärn, lås, 5D	8A : 61	5-C14
Bagagelucka , gångjärn, lås, 4D	8A : 65	5-C18
Bagagerumsdörr, gångjärn, lås, 5CS	8A : 69	5-C22
Yttre handtag	8A : 71	5-C24
Lås- och låscylindersatser	8A : 75	5-D04
Utvändiga detaljer, glas, tätningslister		
Emblem	8A : 79	5-D08
Dekor, 5D	8A : 81	5-D10
Dekor, 4D	8A : 87	5-D16
Dekor, 5CS	8A : 91	5-D20
Spoiler, 4D, 5D	8A : 95	5-D24
Spoiler, 5CS	8A : 99	5-E04
T16SA, 1990	8A : 101	5-E06
T16SA, 1991-1992	8A : 103	5-E08
5CS Aero, 1993-	8A : 105	5-E10
Utvändiga backspeglar	8A : 109	5-E14
Vindruta	8A : 115	5-E20
Bakruta	8A : 117	5-E22
Dörr- och sidorutor	8A : 119	5-E24
Stänkskydd	8A : 123	5-F04
Övriga tätningslister	8A : 127	5-F08
Stötfångare och bättringsfärg		
Stötfångare, främre	8A : 131	5-F12
Stötfångare, främre, 4D	8A : 133	5-F14
Stötfångare, främre, 5CS	8A : 135	5-F16
Stötfångare, bakre	8A : 137	5-F18
Stötfångare, bakre, 4D	8A : 139	5-F20
Stötfångare, bakre, 5CS	8A : 141	5-F22
Bättringsfärg, 1-komponent	8A : 143	5-F24
Bättringsfärg, 2-komponent	8A : 145	5-G02
Bättringsfärg, tvåskiktstyp	8A : 147	5-G04
Bättringsfärg, övrig färg	8A : 149	5-G06
Satser:		
Kaross, utvändig	8A : 151	5-G08

5-A04

SUMARIO


Cuerpo de la carroceria		
Piso del. y tras.	8A : 5	5-A06
Piso tras.	8A : 9	5-A10
Techo	8A : 13	5-A14
Techo corredizo, maniobra electrica	8A : 15	5-A16
Placa torpedo	8A : 19	5-A20
Paso rueda, Del	8A : 23	5-A24
Huecos de rueda Tras	8A : 25	5-B02
Placas laterales	8A : 27	5-B04
Placas laterales, 4D	8A : 29	5-B06
Placas laterales, 5CS	8A : 31	5-B08
Bastidor de puertas	8A : 35	5-B12
Tapones etc	8A : 37	5-B14
Capot. plancha frontal, guardabarros		
Capot, bisagras de capot y cerradura de capot	8A : 39	5-B16
Viga del, parilla	8A : 43	5-B20
Guardabarros del	8A : 45	5-B22
Guardabarros del, 5CS	8A : 47	5-B24
Puertas, tapa de cofre		
Porta delantera, bisagras, levantcristales, etc	8A : 49	5-C02
Porta trasera, bisagras, levantcristales, etc	8A : 53	5-C06
Cerraduras de puerta, Del	8A : 57	5-C10
Cerraduras de puerta, Tras	8A : 59	5-C12
Puerta trasera, bisagras, cerradura, 5D	8A : 61	5-C14
Tapa del maletero, bisagras, cerradura, 4D	8A : 65	5-C18
Puerta trasera, bisagras, cerradura, 5CS	8A : 69	5-C22
Empunaduras exteriores	8A : 71	5-C24
Cerraduras y cilindros de cerradura	8A : 75	5-D04
Detalles exteriores, vidrios, juntas		
Emblemas	8A : 79	5-D08
Bastidor, 5D	8A : 81	5-D10
Bastidor, 4D	8A : 87	5-D16
Bastidor, 5CS	8A : 91	5-D20
Espoilers, 4D, 5D	8A : 95	5-D24
Espoilers, 5CS	8A : 99	5-E04
T16SA, 1990	8A : 101	5-E06
T16SA, 1991-1992	8A : 103	5-E08
5CS Aero, 1993-	8A : 105	5-E10
Espejos retrovisores exteriores	8A : 109	5-E14
Parabrisas	8A : 115	5-E20
Luna trasera	8A : 117	5-E22
Ventanilla de puerta y lateral	8A : 119	5-E24
Faldones	8A : 123	5-F04
Otras juntas	8A : 127	5-F08
Parachoques y pintura de retoque		
Parachoques, Del	8A : 131	5-F12
Parachoques, Del, 4D	8A : 133	5-F14
Parachoques, Del, 5CS	8A : 135	5-F16
Parachoques, Tras	8A : 137	5-F18
Parachoques, Tras, 4D	8A : 139	5-F20
Parachoques, Tras, 5CS	8A : 141	5-F22
Pintura de retoque, tipo 1-componentes	8A : 143	5-F24
Pintura de retoque, tipo 2-componentes	8A : 145	5-G02
Pintura de retoque, tipo de dos capas	8A : 147	5-G04
Pintura de retoque, otro pintura	8A : 149	5-G06
Juegos completos		
Carcsseria, exterior	8A : 151	5-G08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

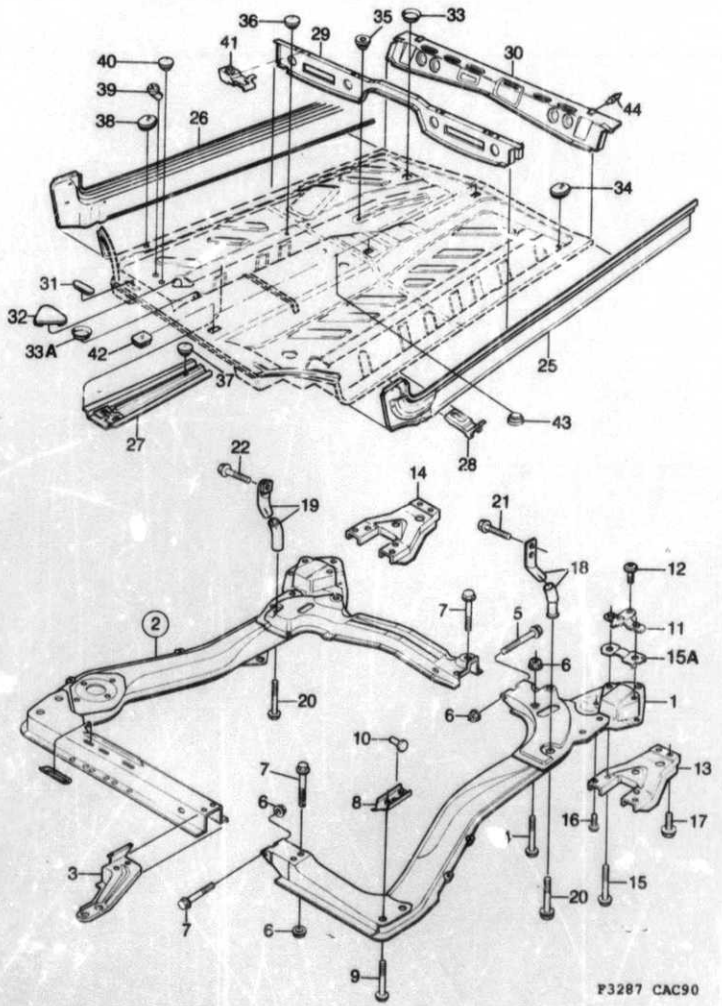

Car body
5-A06
Front and centre floor

Karosskrov
Främre och mittre golv

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		*92 65 745*		279) NLS	1	Body	Kaross	6
0030	1	*89 54 935*		LH NLS - USE 4426227	1	Frame	Ram	5
0040	2	89 73 737		-1992, RH	1	Frame	Ram	5
0050	2	41 97 356		1993, RH	1	Frame	Ram	5
0060	3	89 61 948			1	Bracket	Konsol	5
0070	4	79 73 852		-1990	2	Screw	Skruv	5
0080	4	79 83 141		1991-	2	Screw	Skruv	5
0090	5	*79 72 136*		-1990 NLS - USE 7983158	1	Screw	Skruv	5
0100	5	79 83 158		1991-	1	Screw	Skruv	5
0110	6	79 69 306			5	Lock nut	Låsmutter	5
0120	7	79 73 571		-1990	2	Screw	Skruv	5
0130	7	79 83 133		1991-	2	Screw	Skruv	5
0140	8	89 61 070		2)	2	Bracket	Hållare	5
0150	9	79 76 913			4	Screw	Skruv	5
0160	10	89 61 397		-1990	4	Plug	Plugg	5
0170	10	95 65 417		1991-	4	Rivet	Nit	3
0180	11	89 61 054		3)	2	Bracket	Hållare	5
0190	12	89 66 087			2	Screw	Skruv	5
0200	13	89 60 247		LH	1	Reinforcement	Förstärkning	5
0210	14	89 60 122		RH	1	Reinforcement	Förstärkning	5
0220	15	79 76 921		-1990	4	Screw	Skruv	5
0230	15	79 84 008		1991-	4	Screw	Skruv	5
0240	15A	41 95 277		1991-	2	Spacer	Mellanlägg	3
0250	16	79 23 014			4	Screw	Skruv	5
0260	17	92 92 699			4	Screw	Skruv	5
0270	18	41 03 412		LH	1	Stanchion	Stötta	6
0280	19	89 61 237		RH	1	Stanchion	Stötta	6
0290	20	79 82 564		LH	2	Screw	Skruv	5
0300	20	79 74 777		RH	2	Screw	Skruv	5
0310	21	79 73 779			2	Screw	Skruv	5
0320	22	79 69 298			1	Screw	Skruv	5
0330	25	*92 66 172*		160) -1990, LH NLS - USE 4100418	1	Sill	Tröskel	6
0340	25	41 00 418		160) 1991-, LH	1	Sill	Tröskel	6
0350	26	*92 66 164*		160) -1990, RH NLS - USE 4293767	1	Sill	Tröskel	6
0360	26	*41 00 400*		160) 1991, RH NLS - USE 4293767	1	Sill	Tröskel	6
0370	26	42 93 767		160) 1992-, RH	1	Sill	Tröskel	6
0380	27	92 66 123		2)	1	Beam	Balk	4
0390	28	92 66 156		2) LH	1	Jack support	Domkraftstöd	6
0400	28	92 66 149		2) RH	1	Jack support	Domkraftstöd	6
0410	29	92 66 131		2) -1991	1	Beam	Balk	6
0420	29	41 01 465		2) 1992-	1	Beam	Balk	6
0430	30	92 66 180		3)	1	Beam	Balk	6
0440	31	89 62 292			2	Cover	Täcklock	5
0450	32	92 67 691			2	Cover	Lock	5
0460	33	73 13 752			2	Cover	Lock	5
0470	33A	73 13 752		-1990	2	Cover	Lock	5
0480	33A	41 02 901		1991-	2	Plug	Plugg	5
0490	34	92 67 899			2	Plug	Plugg	5
0500	35	92 67 881			6	Plug	Plugg	5
0510	36	92 67 808		-1990	4	Plug	Plugg	5
0520	36	92 67 808		1991-	2	Plug	Plugg	5
0530	36	70 38 342			2	Plug	Plugg	5
0540	37	92 67 923			3	Plug	Plugg	5
0550	38	92 67 907			2	Plug	Plugg	5
0560	39	92 67 998			3	Plug	Plugg	5

2. Front Främre
3. Rear Bakre
160. Inner section Innerdel
279. Only current production design Endast produktionsaktuellt utförande

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A08

Front and centre floor
Främre och mittre golv

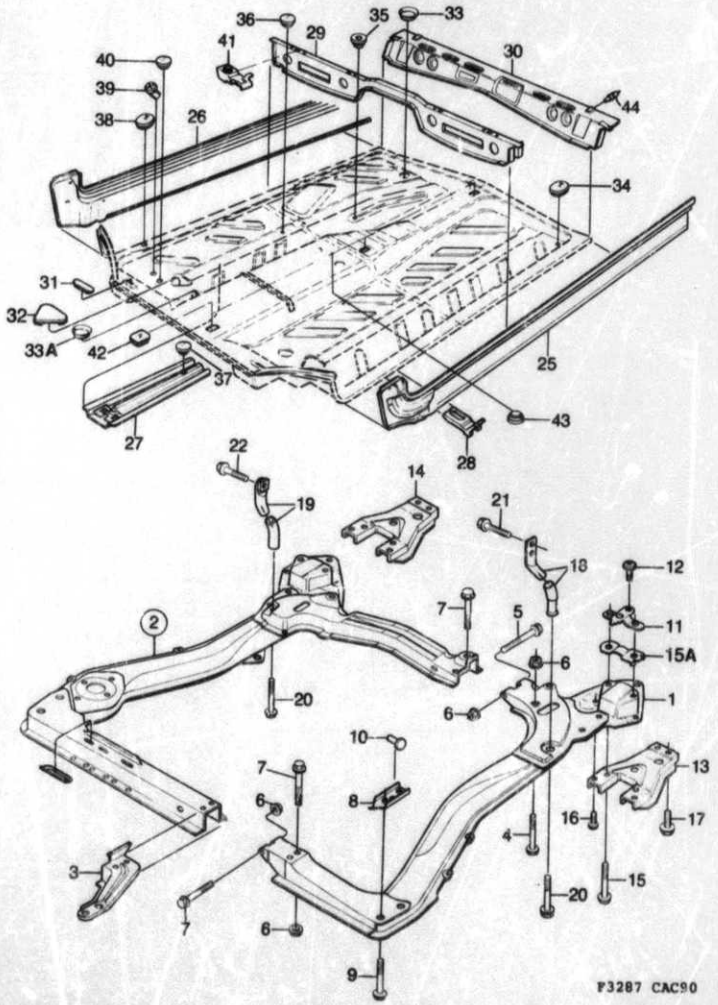

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	40	92 68 178			12	Plug	Plugg	5
0580	41	79 75 766			4	Cage nut	Korgmutter	5
0590	42	93 85 509		50)	6	Plug	Plugg	5
0600	43	92 67 923			1	Plug	Plugg	5
0610	44	73 99 454			1	Nut	Mutter	5


50. Cars without heat shield Bilar utan värmeskydd

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

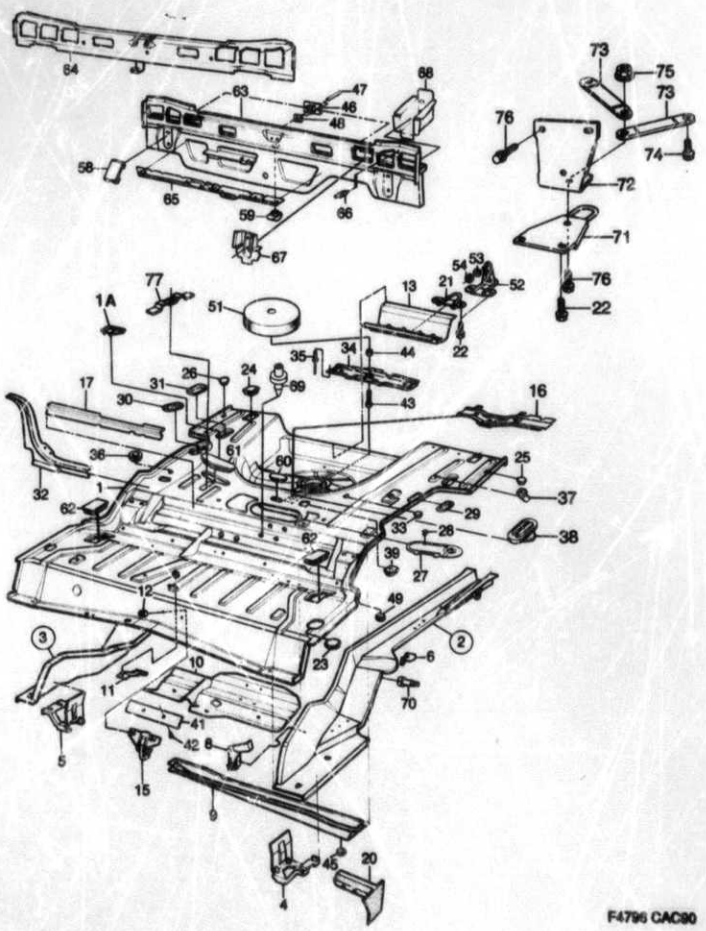

Car body

5-A10

Rear floor

Karosskrov

Bakre golv

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 65 943*		-1991 NLS - USE 4006276, 4319968	1	Floor	Golv	6
0010								
0020	1	40 06 276		1992-	1	Floor	Golv	6
0030	1A	43 19 968		1992- (4070389)	1	Plug	Plugg	5
0040	2	*92 76 932*		3) -1991, LH NLS - USE 4293916	1	Beam	Balk	6
0040								
0050	2	42 93 916		3) 1992-, LH	1	Beam	Balk	6
0060	3	92 76 924		3) RH	1	Beam	Balk	6
0070	4	*69 58 011*		65) LH NLS - USE 4100731	1	Jack support	Domkraftstöd	6
0080	4	41 00 731		66) LH	1	Jack support	Domkraftstöd	6
0090	5	*69 58 003*		65) RH NLS - USE 4100723	1	Jack support	Domkraftstöd	6
0100	5	41 00 723		66) RH	1	Jack support	Domkraftstöd	6
0110	6	*92 66 016*		LH NLS	1	.Bracket	.Fäste	6
0120	6	*92 66 008*		RH NLS	1	.Bracket	.Fäste	6
0130	8	69 76 278		2,94)	1	Bracket	Upphängning	6
0140	9	92 66 024		3)	1	Crossmember	Tvärbalk	6
0150	10	92 66 032			1	Reinforcement	Förstärkning	6
0160	11	92 66 040			1	Bracket	Hållare	6
0170	12	*79 65 767*		NLS - USE 7968415	3	Lock nut	Låsmutter	5
0180	13	92 76 940			1	Support shape	Stödprofil	6
0190	15	92 66 073		-1991	1	Bracket	Upphängning	6
0200	16	*92 66 081*		-1991 NLS - USE 4009528	1	Support shape	Stödprofil	6
0210	16	40 09 528		1992-	1	Support shape	Stödprofil	6
0220	17	92 66 099		-1991	1	Bevel wall	Snedvägg	6
0230	17	40 07 225		1992-	1	Member	Balk	6
0240	20	92 67 717		LH	1	Protection	Skydd	5
0250	20	92 67 709		RH	1	Protection	Skydd	5
0260	21	92 78 912			1	Towing hook	Bogserkrok	5
0270	22	81 30 064			2	Screw	Skruv	5
0280	23	92 67 865			2	Cover	Lock	5
0290	24	92 67 774			2	Cover	Lock	5
0300	25	92 68 814			1	Plug	Plugg	5
0310	26	92 68 822			1	Plug	Plugg	5
0320	27	93 87 994			1	Cover	Lock	6
0330	28	93 87 911			2	Catch	Hake	6
0340	29	89 62 342		LH	1	Cover	Täcklock	6
0350	30	89 62 359		RH	1	Cover	Täcklock	6
0360	31	89 62 334			2	Cover	Täcklock	6
0370	32	92 65 935		-1991, LH	1	Bevel wall	Snedvägg	6
0380	32	92 65 927		-1991, RH	1	Bevel wall	Snedvägg	6
0390				1992-		Support plate	Stödplåt	
0400				See page 8A-025, 5-B02				
0410	33	82 39 170			2	Plug	Plugg	5
0420	34	92 76 106			1	Support member	Stödbalk	6
0430	35	82 35 178			10	Pop rivet	Popnit	5
0440	36	69 19 658		-1992	2	Plug	Plugg	5
0450	36	84 59 489		1993	2	Plug	Plugg	5
0460	37	92 67 998			7	Plug	Plugg	5
0470	38	92 67 980		3) LH	1	Plug	Plugg	5
0480	39	82 39 170		50)	2	Plug	Plugg	5
0490	41	92 71 263			1	Cover plate	Täckplåt	3
0500	42	82 35 178			2	Pop rivet	Popnit	5
0510	43	73 38 688			1	Screw	Skruv	5
0520	44	79 67 953			1	Nut	Mutter	5
0530		92 88 127		LENGTH 770 MM, FOR COVER...	X	Tape	Tape	5
0540	45	82 06 096			1	Plug	Plugg	5
0550	46	96 53 502		AU	3	Nut plate	Mutterplatta	5

2. Front Främre
3. Rear Bakre
50. Cars without heat shield Bilar utan värmeskydd
65. Ch --L1004430, --L2003242, --L8000454
66. Ch. L1004431--, L2003243--, L8000455--
94. Body --9050922

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


Car body

Karosskrov

5-A12

Rear floor

Bakre golv

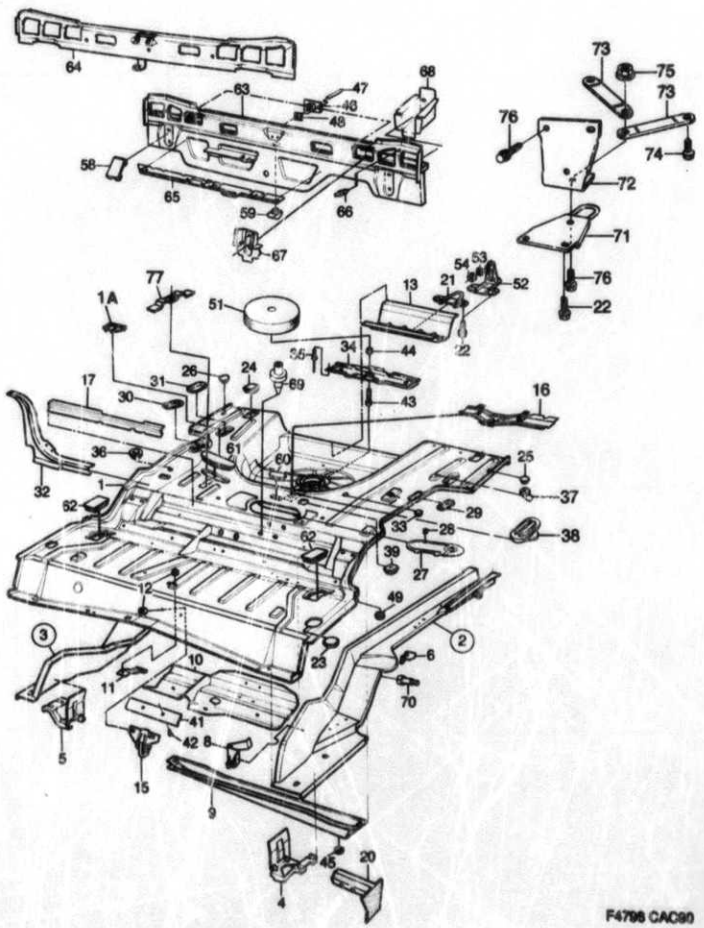

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	47	79 72 490		AU	6	Rivet	Nit	5
0570	48	92 30 293		AU	6	Washer	Bricka	5
0580	49	82 41 325		51)	2	Plug	Plugg	5
0590	51	69 62 542			1	Seal	Tätning	6
0600	52	69 39 805		4D	1	Towing hook	Bogserkrok	5
0610	53	69 39 839		4D	1	Washer	Bricka	5
0620	54	79 67 979		4D	1	Nut	Mutter	5
0630	58	69 58 987		4D	2	Cover	Täcklock	6
0640	59	82 66 876		4D	1	Plug	Plugg	5
0650	60	69 73 812		125)	1	Seal	Tätning	6
0660	60	41 00 541		126)	1	Seal	Tätning	6
0670	61	69 73 820		-1991	1	Seal	Tätning	6
0680	62	69 73 838		125)	2	Seal	Tätning	6
0690	62	41 00 533		126)	2	Seal	Tätning	6
0700	63	92 66 198		5D	1	Rear section	Bakdel	5
0710	63	69 63 912		4D	1	Rear section	Bakdel	5
0720	63	42 93 064		5CS	1	Rear section	Bakdel	5
0730	64	69 62 625		PART OF 9266198	1	.Sill	.Tröskel	6
0740	64	69 63 920		PART OF 6963912	1	.Sill	.Tröskel	6
0750	65	69 63 904			1	.Support shape	.Stödprofil	6
0760	66	73 99 454			2	.Nut	.Mutter	5
0770	67	92 66 065		PART OF 9266198,4293064	2	.Support	.Stöd	6
0780	68	69 73 564		LH, PART OF 6963912	1	.Spacer	.Distansstycke	6
0790	68	69 73 556		RH, PART OF 6963912	1	.Spacer	.Distansstycke	6
0800	69	69 60 975		4D	4	Plug	Plugg	5
0810	70	69 73 440			1	Screw	Skruv	5
0820	71	86 62 140		T16SA	1	Towing hook	Bogserkrok	5
0830	72	86 62 157		T16SA	1	Support shape	Stödprofil	4
0840	72	86 62 157		1993, 5CS AERO	1	Support shape	Stödprofil	4
0850	73	86 62 496		T16SA	2	Stay	Stag	5
0860	74	86 57 777		-1990, T16SA	2	Screw	Skruv	5
0870	74	86 57 975		1991-, T16SA	2	Screw	Skruv	5
0880	75	79 69 306		T16SA	1	Lock nut	Låsmutter	5
0890	76	79 78 273		T16SA	3	Screw	Skruv	5
0900	77	41 00 988		1992-	1	Bracket	Konsol	6

51. Cars without ABS Bilar utan ABS
125. Ch. -L1013853, -L2009873, -L8001575
126. Ch. L1013854-, L2009874-, L8001576-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A14

Roof
Tak

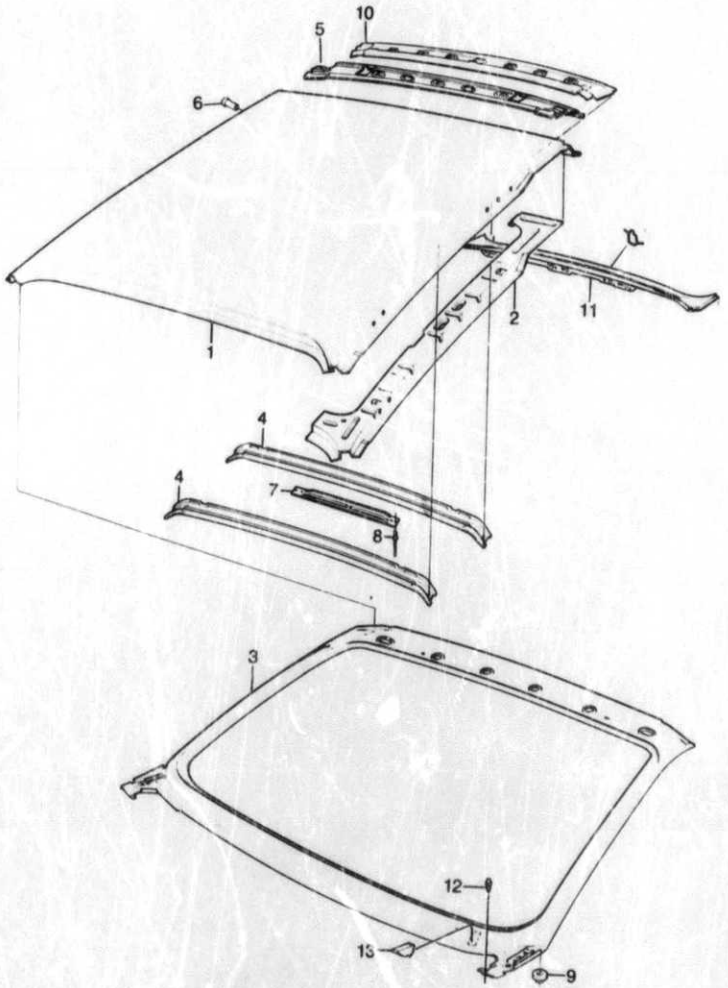

F1382 CAC90

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 74 026*		180) NLS - USE 4009965, 8284374, 8284382	1	Roof	Tak	5
0020	1	40 09 965		181)	1	Roof	Tak	5
0030	1	69 59 282		4D	1	Roof	Tak	5
0040	2	*92 65 893*		180) LH NLS - USE 4098471	1	Beam	Balk	6
0050	2	40 08 471		181) LH	1	Beam	Balk	6
0060	2	69 59 274		LH, 4D	1	Beam	Balk	6
0070	2	92 65 885		180) RH	1	Beam	Balk	6
0080	2	40 98 463		181) RH	1	Beam	Balk	6
0090	2	69 59 266		RH, 4D	1	Beam	Balk	6
0100	3	40 07 738			1	Frame	Ram	6
0110	4	92 65 869		158)	2	Beam	Balk	6
0120	5	69 73 895		5D	1	Beam	Balk	6
0130	5	42 93 080		5CS	1	Beam	Balk	6
0140	6	92 67 485			8	Nut	Mutter	5
0150	7	69 55 322			1	Bracket	Konsol	6
0160	8	82 35 178			4	Pop rivet	Popnit	5
0170	9	92 23 991			2	Bushing	Bussning	5
0180	10	69 59 258		3) 4D	1	Beam	Balk	6
0190	11	69 59 225		154) 4D	1	Beam	Balk	6
0200	12	73 99 454		4D	1	Nut	Mutter	5
0210	13	69 73 515			2	Seal	Tätning	5

3. Rear Bakre
154. Lower Nedre
158. Centre Mittre
180. Body --1991, --1187185
181. Body 1991--, 1187186--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

Car body
Karosskrov

5-A16

Sun roof
Soltak

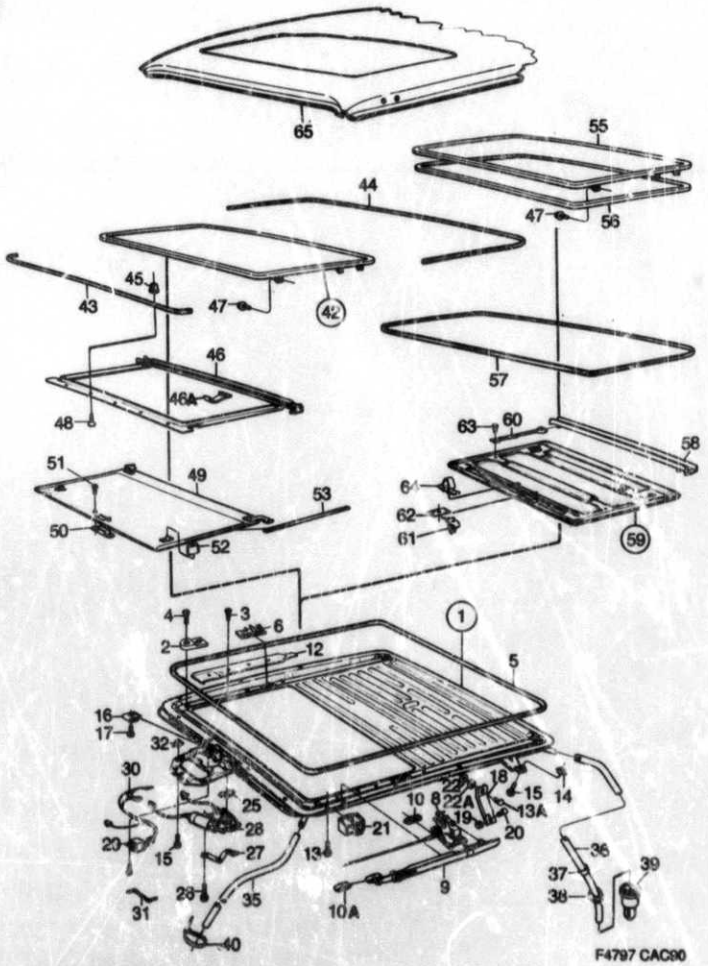

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 54 236			1	Frame	Ram	6
0020	2	69 59 787			2	.Spacer	.Mellanlägg	5
0030	3	69 59 795			6	.Screw	.Skruv	5
0040	4	79 75 162			6	.Screw	.Skruv	5
0050	5	*92 54 566*		-1991 NLS - USE 4303731	1	.Sealing strip	.Tätningslist	5
0060	5	43 03 731		1992-	1	.Sealing strip	.Tätningslist	5
0070	6	92 54 558		LH	1	.Guide	.Styrning	6
0080	6	92 54 541		RH	1	.Guide	.Styrning	6
0090								
0100	8	69 63 854		149,178) LH	1	Cam follower	Lyftare	5
0110	8	69 63 847		149,178) RH	1	Cam follower	Lyftare	5
0120	8	40 05 369		149,179) LH	1	Cam follower	Lyftare	5
0130	8	40 05 351		149,179) RH	1	Cam follower	Lyftare	5
0140								
0150	8	69 63 870		150,178) LH	1	Cam follower	Lyftare	5
0160	8	69 63 862		150,178) RH	1	Cam follower	Lyftare	5
0170	8	40 05 344		150,179) LH	1	Cam follower	Lyftare	5
0180	8	40 05 336		150,179) RH	1	Cam follower	Lyftare	5
0190								
0200	9	69 61 791		178) LH	1	Sliding plane	Glidbana	5
0210	9	69 61 783		178) RH	1	Sliding plane	Glidbana	5
0220	9	69 75 270		179) LH	1	Sliding plane	Glidbana	5
0230	9	69 75 262		179) RH	1	Sliding plane	Glidbana	5
0240								
0250	10	40 05 195		3)	2	Slide dog	Glidklack	5
0260	10A	92 54 848		2)	2	Slide dog	Glidklack	5
0270	12	92 54 533		149), LH	1	Slide rail	Glidskena	5
0280	12	92 54 525		149), RH	1	Slide rail	Glidskena	5
0290	12	92 63 955		150), LH	1	Slide rail	Glidskena	5
0300	12	92 63 948		150), RH	1	Slide rail	Glidskena	5
0310	13	79 82 366		188)	10	Screw	Skruv	5
0320	13	79 82 366		189)	8	Screw	Skruv	5
0330	13A	79 72 607		189)	2	Screw	Skruv	5
0340	14	79 74 231			2	Cage nut	Korgmutter	5
0350	15	92 59 524			4	Screw	Skruv	5
0360	16	79 72 573			1	Clip nut	Clipsmutter	5
0370	17	79 22 800			1	Screw	Skruv	5
0380	18	92 69 234			2	Bracket	Fäste	5
0390	19	79 74 231			2	Cage nut	Korgmutter	5
0400	20	79 74 694			2	Screw	Skruv	5
0410	21	69 57 344			2	Slide dog	Glidklack	5
0420	22	79 16 497			2	Washer	Bricka	5
0430	22A	79 82 317		189)	2	Washer	Bricka	5
0440								
0460	25	*92 54 327*		NLS	1	Guide	Styrning	6
0466	26	92 71 909			3	Screw	Skruv	5
0470	27	92 60 142			1	Bracket	Fäste	5
0480	28	40 36 219		302)	1	Electric motor	Elmotor	4
0490	28	43 05 603		303)	1	Electric motor	Elmotor	4
0500	29	95 05 793		302)	1	Relay	Relä	5
0510	29	43 05 918		303)	1	Relay	Relä	5
0520	30	95 05 801			1	Cable harness	Ledningsnät	6
0530	31	92 54 608			1	Crank	Vev	5

2. Front Främre
3. Rear Bakre
149. For cars with glass lid För bilar med glaslucka
150. For cars with steel lid För bilar med plåtlucka
178. Ch. --M1011622, --M2008084
179. Ch. M1011623-, M2008085--
188. Ch. --M1010783, --M2007149
189. Ch. M1010784-, M2007150-
302. Ch. --P1032028
303. Ch. P1032029--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


Car body

Karosskrov

5-A18

Sun roof

Soltak

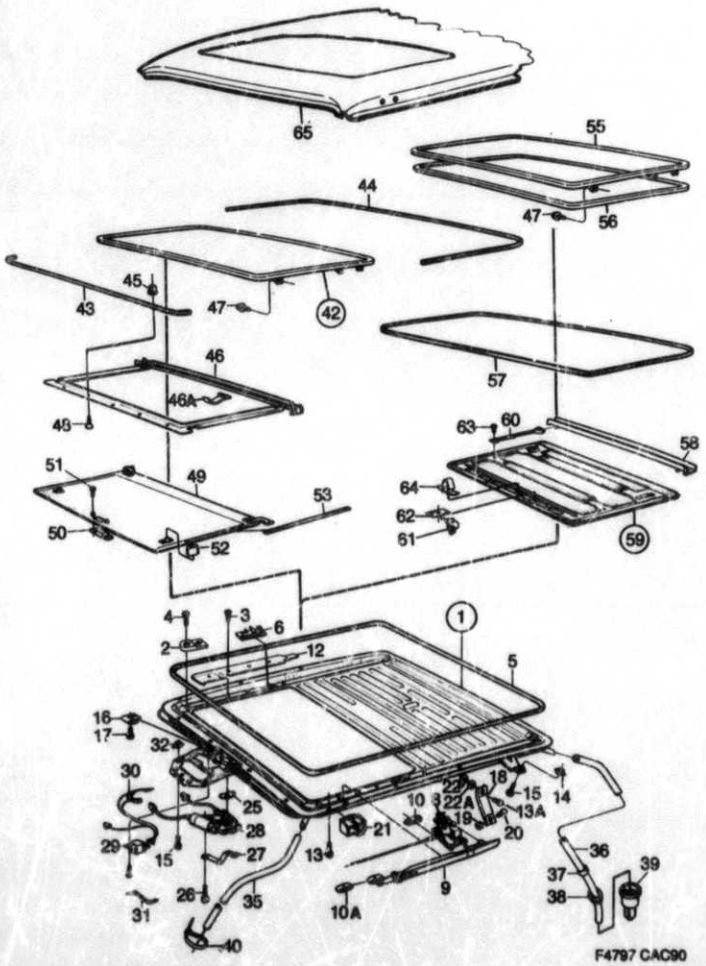

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	32	79 74 231			2	Cage nut	Korgmutter	5
0550								
0560	35	40 05 872		-1991, LH	1	Draining hose	Dräneringsslang	5
0570	35	41 00 350		1992-,284) LH	1	Draining hose	Dräneringsslang	5
0580	35	41 00 384		-1991, RH	1	Draining hose	Dräneringsslang	5
0590	35	41 00 368		1992-,284) RH	1	Draining hose	Dräneringsslang	5
0600	35	41 00 350		285)	2	Draining hose	Dräneringsslang	5
0610								
0620	36	92 54 640		3)	2	Draining hose	Dräneringsslang	5
0630								
0640	37	92 28 149			4	Clip	Clips	5
0650	38	92 54 707			2	Grommet	Genomföring	5
0660	39	69 61 064		284)	2	Non-return valve	Backventil	5
0670	39	69 61 064		285)	4	Non-return valve	Backventil	5
0680	40	95 25 221		LH	1	Tensioning band	Spännband	5
0690	40	85 52 663		RH	1	Tensioning band	Spännband	5
0700								
0710	42	69 55 512		149)	1	Sunroof	Sollucka	5
0720	43	69 61 049		2,149)	1	.Sealing strip	.Tätningslist	5
0730	44	69 55 520		3,149)	1	.Sealing strip	.Tätningslist	5
0740	45	92 54 129		149)	5	.Washer	.Bricka	3
0750	46	92 54 442		149,302)	1	Roof gutter	Ränna	5
0760	46	43 03 913		149,303)	1	Roof gutter	Ränna	5
0770	46A	*43 03 921*		149,303) NLS	4	.Slide dog	.Glidklack	5
0780	47	92 54 103			6	Screw	Skruv	5
0790	48	69 59 795		149)	6	Screw	Skruv	5
0800	49	69 74 679		149)	1	Sun visor	Solskydd	5
0820	50	92 54 459		149)	1	Handle	Handtag	6
0830	51	92 79 712		149)	2	Screw	Skruv	5
0840	52	92 79 654		149)	2	Slide dog	Glidklack	5
0850	53	92 59 342			2	Felt strip	Filtlist	5
0860								
0870	55	92 62 205		150)	1	Hatch	Lucka	5
0880	56	69 63 805		150)	1	Tape	Tape	5
0890	57	40 06 292		150)	1	Sealing strip	Tätningslist	5
0900	58	92 63 930		150)	1	Roof gutter	Ränna	5
0910	59	40 05 666		150)	1	Upholstery	Klädsel	6
0920	60	92 64 698		150), LH	1	.Link rod	.Länkstång	6
0930	60	92 64 680		150), RH	1	.Link rod	.Länkstång	6
0940	61	*40 05 740*		92,150) NLS - USE 4101036	2	.Clip	.Clips	5
0940								
0950	61	41 01 036		93,150)	2	.Clip	.Clips	5
0960	62	41 01 051		93,150)	2	.Felt strip	.Filtlist	5
0980	63	92 59 383		150)	2	.Rivet	.Nit	
0990	64	92 63 922		150)	4	Upholstery clip	Klädselfäste	6
1000								
1010	65	*69 74 018*		180) NLS - USE 4009999, 8284374, 8284382	1	Roof	Tak	5
1010								
1020	65	40 09 999		181)	1	Roof	Tak	5
1030	65	69 59 001		4D	1	Roof	Tak	5

2. Front Främre
3. Rear Bakre
92. Ch. --L1010359, --L2007966, --L8001174
93. Ch. L1010360--, L2007967--, L8001175--
149. For cars with glass lid För bilar med glaslucka
150. For cars with steel lid För bilar med plåtlucka
180. Body --1991, --1187185
181. Body 1991--, 1187186--
199. Ch. M1017620--, M2011731--
284. Ch. --N1041406
285. Ch. N1041407--
302. Ch. --P1032028
303. Ch. P1032029--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A20

Cowl plate
Torpedplåt

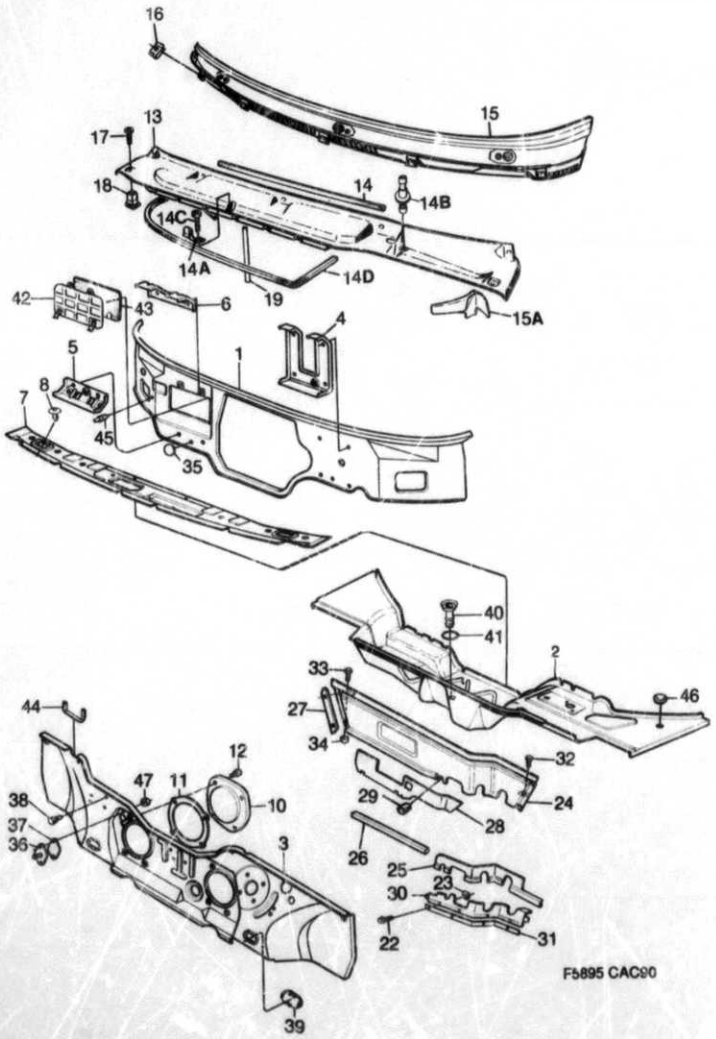

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 65 760		3) -1991	1	Cowl plate	Torpedplåt	6
0020	1	42 93 718		3) 1992-	1	Cowl plate	Torpedplåt	6
0030	2	40 05 088		2) -1991	1	Cowl plate	Torpedplåt	6
0040	2	41 00 301		2) 1992-	1	Cowl plate	Torpedplåt	6
0050	3	*40 05 070*		-1991 NLS - USE 4293700	1	Cowl plate	Torpedplåt	2
0060	3	42 93 700		1992-	1	Cowl plate	Torpedplåt	2
0070	4	*40 08 314*		-1991, LH NLS - USE 4293734	1	Bracket	Konsol	6
0080	4	42 93 734		1992-, LH	1	Bracket	Konsol	6
0090	5	92 65 786		RH	1	Bracket	Konsol	6
0100	6	92 65 794		UPPER RH	1	Bracket	Konsol	6
0110	7	40 05 062			1	Cover plate	Täckplåt	5
0120	8	92 76 353			6	Plug	Plugg	5
0130	10	89 56 294			1	Cover	Täcklock	5
0140	11	89 56 245			1	Seal	Tätning	5
0150	12	79 71 294			4	Screw	Skruv	5
0160								
0170	13	*96 30 047*		-1991 NLS - USE 4318598	1	Cover	Lock	5
0180	13	*96 30 690*		-1991, AC/ACC NLS - USE 4318606	1	Cover	Lock	5
0190	13	43 18 598		1992-	1	Cover	Lock	5
0200	13	43 18 606		1992-, AC/ACC	1	Cover	Lock	5
0210	14	96 30 674		-1991	1	.Seal	.Tätning	4
0220	14	96 30 674		1992-	1	.Seal	.Tätning	4
0230	14	40 73 631		1992-, AC/ACC	1	.Seal	.Tätning	4
0240	14A	40 70 785			1	.Brace	.Bygel	6
0250	14B	40 94 199			1	.Connector	.Skarvstycke	5
0260	14C	79 82 192			1	.Screw	.Skruv	5
0270	14D	40 73 110			1	.Seal	.Tätning	5
0280								
0290	15	96 30 021			1	Screen	Avskärmning	5
0300	15	40 74 332		5CS	1	Screen	Avskärmning	5
0310	15A	40 74 696		5CS, LH	1	Screen	Avskärmning	5
0320	15A	40 74 688		5CS, RH	1	Screen	Avskärmning	5
0330	16	94 27 014			5	Clip nut	Clipsmutter	3
0340	17	79 78 638			7	Screw	Skruv	5
0350	18	79 77 341			3	Press nut	Pressmutter	5
0360	19	43 18 499		1992-, AC	1	Draining hose	Dräneringsslang	5
0370								
0380	22	82 86 296		-1991	4	Screw	Skruv	5
0390	23	79 67 995		-1991	1	Clip nut	Clipsmutter	3
0400	24	*40 08 306*		-1990, REMOVABLE NLS - USE 4008215	1	Cowl plate	Torpedplåt	6
0410	24	40 08 215		1991, REMOVABLE	1	Cowl plate	Torpedplåt	6
0420	24	40 08 538		1992-, REMOVABLE	1	Cowl plate	Torpedplåt	6
0430								
0440	24	92 72 204		-1990, REMOVABLE	1	.Cowl plate	.Torpedplåt	6
0450	24	40 08 223		1991, REMOVABLE	1	.Cowl plate	.Torpedplåt	6
0460	25	92 70 349		-1991	1	.Seal	.Tätning	5
0470	26	92 71 297		-1991	1	.Seal	.Tätning	5
0480	27	92 79 464		-1991, LH	1	.Seal	.Tätning	5
0490	27	92 79 456		-1991, RH	1	.Seal	.Tätning	5
0500	28			1991	1	.Sound absorber	.Ljudabsorbent	
0510				See page 8R-021, 6-A22				
0520	28			1) 1992-	1	.Sound absorber	.Ljudabsorbent	
0530								
0540	29	40 16 192		1991-, I	1	Plug	Plugg	5
0550	30	92 70 380		-1991	1	Guide	Styrning	5
0560	31	92 70 398		-1991	1	.Seal	.Tätning	5
0570	32	79 75 337		-1991	1	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A22

Cowl plate
Torpedplåt

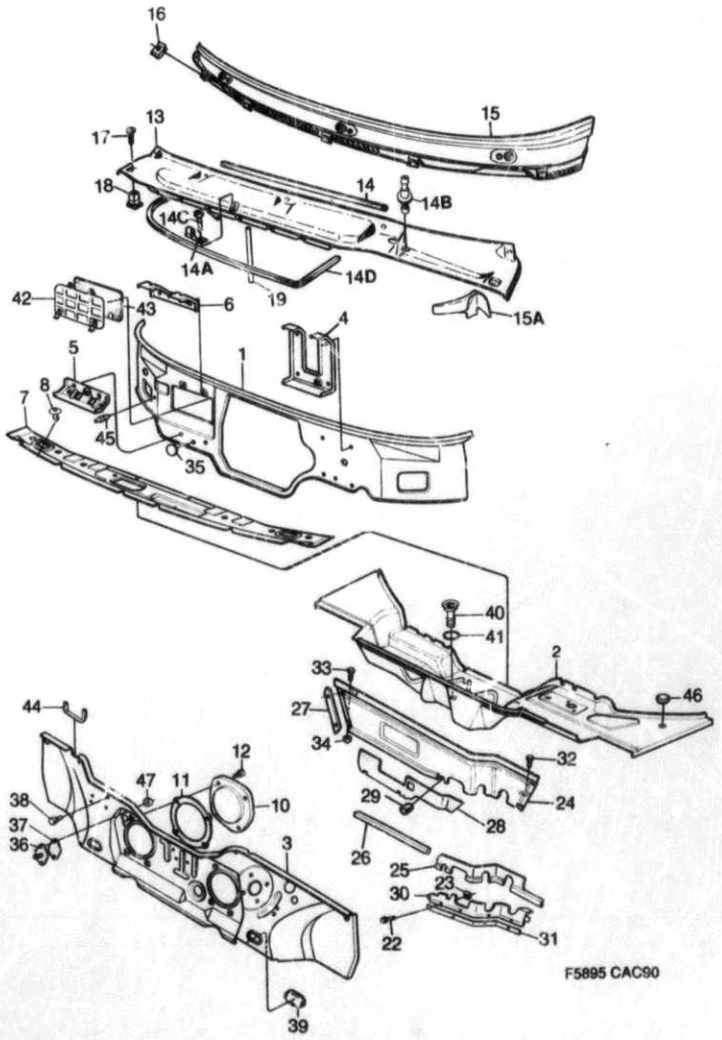

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0580	32	79 77 465		1992-	2	Screw	Skruv	5
0590	33	79 79 610		-1991	1	Screw	Skruv	5
0600	34	79 74 538		-1991	1	Cage nut	Korgmutter	5
0610	35	89 29 531			1	Sealing washer	Tätningsbricka	5
0620	36	89 71 582			1	Plate	Plåt	2
0630	37	89 41 478			1	Gasket	Packning	5
0640	38	82 09 009			2	Buffer	Buffert	5
0650	39	92 67 816			2	Cover	Lock	5
0660	40	69 55 561			2	Draining pipe	Dräneringsrör	5
0670	41	92 88 127			X	Tape	Tape	5
0680	42	96 28 124		206)	1	Hatch	Lucka	6
0690	42	40 74 936		207)	1	Hatch	Lucka	6
0700	43	96 27 746			1	Seal	Tätning	5
0710	44	96 25 641		-1991, CARS WITHOUT AC	1	Seal	Tätning	5
0720	45	73 99 454			1	Nut	Mutter	5
0730	46	71 62 308		ABS	1	Plug	Plugg	5
0740	46	71 62 308		1992-	2	Plug	Plugg	5
0750	47	*79 65 767*		NLS - USE 7968415	2	Lock nut	Låsmutter	5
0760		82 83 715		8283715= 3M	X	Tape	Tape	3

206. Ch. --M1020359
207. Ch. M1020360--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-A24

Wheel housing, front
Hjulhus, främre

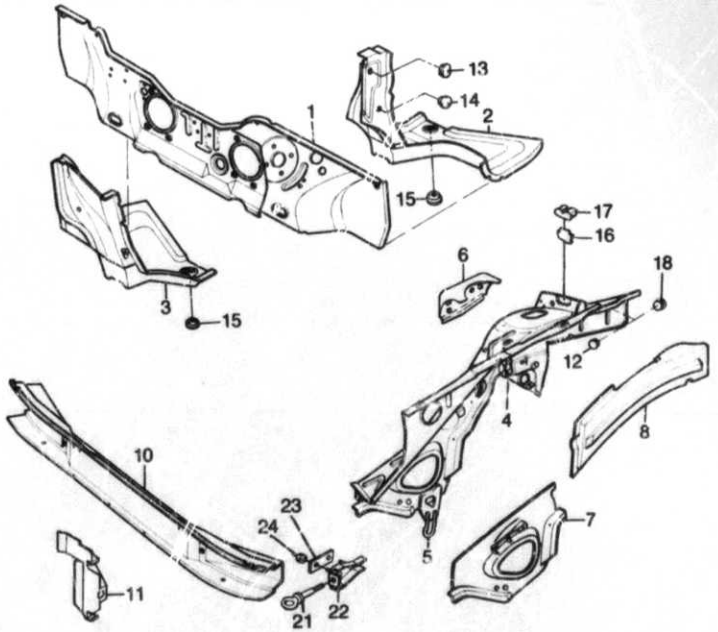

F3697 - CAC90

0250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1			See page 8A-019, 5-A20	1	Cowl plate	Torpedplåt	
0020	2	92 65 844			1	Reinforcement	Förstärkning	6
0030	3	*92 65 836*		-1991 NLS - USE 4293726	1	Reinforcement	Förstärkning	6
0040	3	42 93 726		1992-	1	Reinforcement	Förstärkning	6
0050	4	*92 65 554*		-1991, LH	1	Wheel housing	Hjulhus	5
0060				SEE SI 810-1321 NLS - USE 4100897, 4294363, 7975436				
0070	4	40 98 711		1992-, LH	1	Wheel housing	Hjulhus	5
0080	4	*40 05 542*		-1991, RH	1	Wheel housing	Hjulhus	5
0090				SEE SI 810-1321 NLS - USE 4100897, 4294386, 7975436				
0100	4	40 98 729		1992-, RH	1	Wheel housing	Hjulhus	5
0110	5	69 55 678		RH ONLY	1	•Towing hook	•Bogserkrok	6
0120	6	42 93 882		RH ONLY	1	•Bracket	•Konsol	5
0130	7	*69 62 609*		-1991, LH NLS - USE 4098695	1	Plate	Plåt	3
0140	7	40 98 695		1992-, LH	1	Plate	Plåt	3
0150	7	*69 62 617*		-1991, RH NLS - USE 4098703	1	Plate	Plåt	3
0160	7	40 98 703		1992-, RH	1	Plate	Plåt	3
0170	8	92 75 793		LH	1	Reinforcement	Förstärkning	4
0180	8	92 75 785		RH	1	Reinforcement	Förstärkning	4
0190	10	*69 61 940*		-1991 NLS - USE 4009700	1	Beam	Balk	4
0200	10	40 09 700		1992-	1	Beam	Balk	4
0210	11	90 88 675		5CS	2	Air shield	Luftskärm	5
0220	12	82 06 096			1	Plug	Plugg	5
0230	13	92 67 915			3	Plug	Plugg	5
0240	14	92 68 178			2	Plug	Plugg	5
0250	15	92 68 863			2	Plug	Plugg	5
0260	16	96 25 641		-1991, CARS WITHOUT AC	1	Seal	Tätning	5
0270	17	89 68 133		-1991, ABS WITHOUT AC/ACC, RH ONLY	1	Seal	Tätning	6
0280								
0290								
0300	17	41 17 628		1992-, LH	1	Bracket	Hållare	6
0310	17	41 17 610		1992-, RH	1	Bracket	Hållare	6
0320	17	41 17 602		1992-, AC, ACC, RH	1	Bracket	Hållare	6
0330								
0340	18	70 38 342	S	63) WITH AC/ACC, RH ONLY	1	Plug	Plugg	5
0350	18	70 38 342		64) RH ONLY	1	Plug	Plugg	5
0370								
0380	21	86 68 592		-1990, T16SA	1	Towing eye	Dragögla	6
0390	21	86 70 002		1991-1992, T16SA	1	Towing eye	Dragögla	6
0400	21	86 70 002		5CS AERO	1	Towing eye	Dragögla	6
0410								
0420	22	86 64 021		-1990, T16SA	1	Retaining plate	Hållarplatta	4
0430	22	86 70 010		1991-1992, T16SA	1	Retaining plate	Hållarplatta	4
0440	22	90 90 119		5CS AERO	1	Retaining plate	Hållarplatta	4
0450								
0460	23	86 62 207		-1992, T16SA	1	Locating plate	Styrplåt	4
0470	23	90 90 135		5CS AERO	1	Clamping plate	Klämplatta	4
0480								
0490	24	79 74 371			2	Nut	Mutter	5

63. Ch. -L1000874, -L2000602
64. Ch. L1000875-, L2000603-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, connect housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	8-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F02
Complete sets	5-G06

5-B02

Wheel housing, rear

Hjulhus, bakre

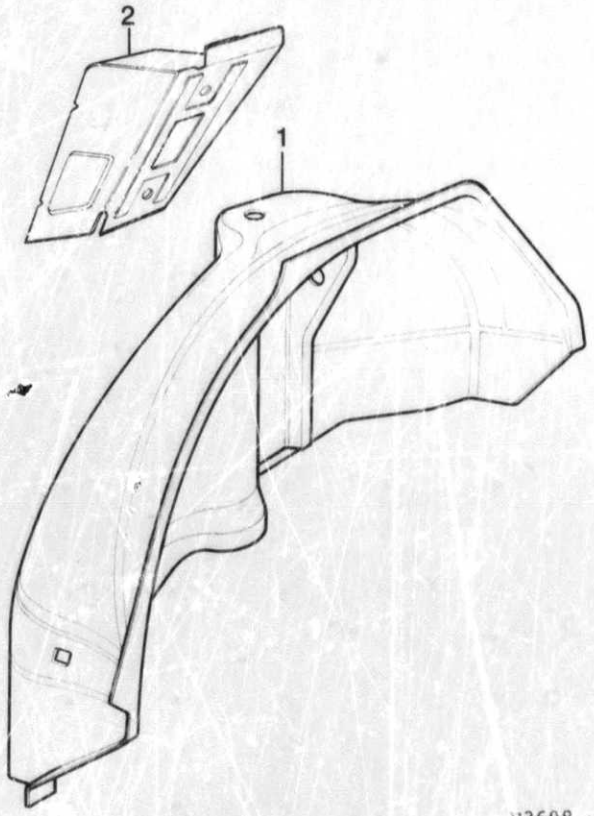

F3698 - CAC90


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 65 214		-1991, LH	1	Wheel housing	Hjulhus	6
0020	1	92 66 206		-1991, RH	1	Wheel housing	Hjulhus	6
0030	1	42 94 583		-1991, RH	1	Wheel housing	Hjulhus	6
0040				ALT. TO 9266206				
0050	1	40 07 217		1992-, LH	1	Wheel housing	Hjulhus	6
0060	1	40 07 209		1992-, RH	1	Wheel housing	Hjulhus	6
0070								
0080	2	40 07 290		1992-, 5D, LH	1	Support plate	Stödplåt	6
0090	2	40 07 282		1992-, 5D, RH	1	Support plate	Stödplåt	6
0100	2	40 07 316		1992-, 4D, LH	1	Support plate	Stödplåt	6
0110	2	40 07 308		1992-, 4D, RH	1	Support plate	Stödplåt	6
0120	2	42 93 932		1992-, 5CS, LH	1	Support plate	Stödplåt	6
0130	2	42 93 940		1992-, 5CS, RH	1	Support plate	Stödplåt	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

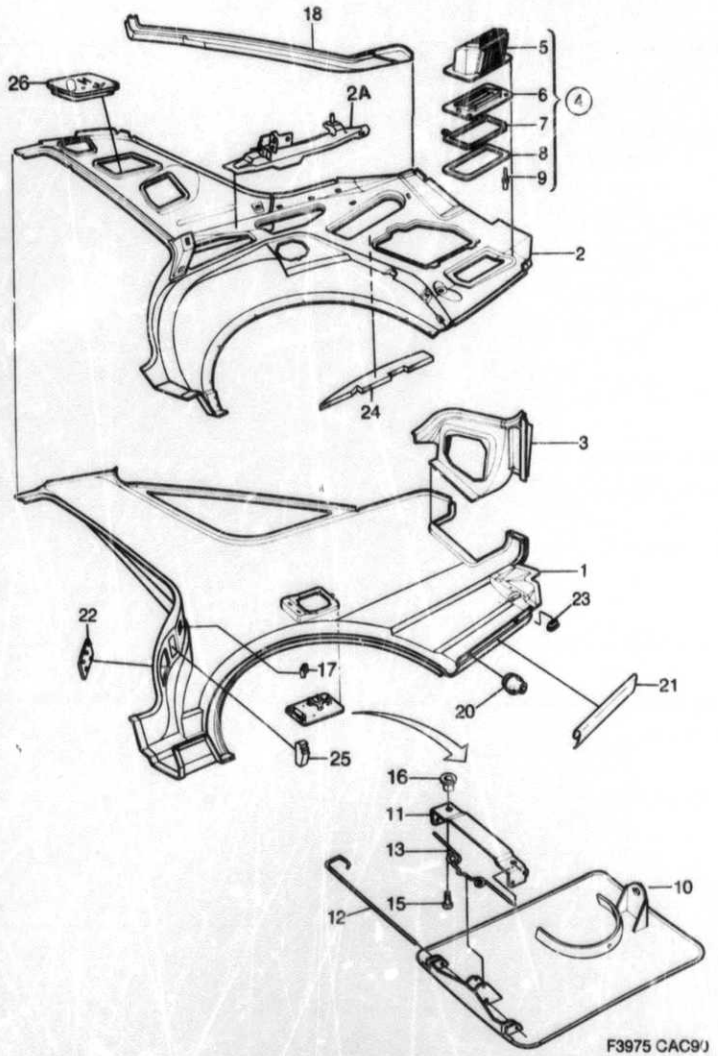

Car body

5-B04

Side plate

5D

Karosskrov

Sidoplåt

5D

0415	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 66 438*		146,153) LH NLS - USE 4101317	1	Side plate	Sidoplåt	4
0020	1	*92 66 420*		146,153) RH NLS - USE 4101309, 4306510	1	Side plate	Sidoplåt	4
0030	1	41 01 317		147,153) -1991, LH	1	Side plate	Sidoplåt	4
0040	1	41 01 309		147,153) -1991, RH	1	Side plate	Sidoplåt	4
0050	1	40 09 254		153) 1992-, LH	1	Side plate	Sidoplåt	4
0060	1	40 09 247		153) 1992-, RH	1	Side plate	Sidoplåt	4
0070	2	*92 66 370*		152) -1991, LH NLS - USE 4293874	1	Side plate	Sidoplåt	6
0080	2	92 66 362		152) -1991, RH	1	Side plate	Sidoplåt	6
0090	2	42 93 874		152) 1992-, LH	1	Side plate	Sidoplåt	6
0100	2	42 93 866		152) 1992-, RH	1	Side plate	Sidoplåt	6
0110	2A	42 94 237		-1991, LH	1	Reinforcement	Förstärkning	6
0120	2A	42 94 229		-1991, RH	1	Reinforcement	Förstärkning	6
0130	2A	42 94 336		1992-, LH	1	Reinforcement	Förstärkning	6
0140	2A	42 94 328		1992-, RH	1	Reinforcement	Förstärkning	6
0150	3	92 66 479		LH	1	Corner	Hörn	5
0160	3	92 66 461		RH	1	Corner	Hörn	5
0170	4	92 65 372			1	Air outlet	Luftutsläpp	5
0180	5	92 64 359			1	▪ Cover	▪ Kåpa	5
0190	6	92 64 367			1	▪ Grille	▪ Galler	5
0200	7	92 64 375			1	▪ Flap	▪ Klaff	5
0210	8	92 64 393			1	▪ Seal	▪ Tätning	5
0220	9	79 75 717			2	Rivet	Nit	5
0230	10	69 57 955		146)	1	Cover	Täcklock	5
0240	10	*43 06 528*		147,259) (9277559) NLS - USE 4306510	1	Cover	Täcklock	5
0250	10	43 06 510		260) (4305421)	1	Cover	Täcklock	5
0260	11	92 55 910			1	Hinge	Gångjärn	5
0270	12	92 76 403			1	Shaft	Axel	5
0280	13	40 05 948			1	Spring	Fjäder	5
0290	15	79 67 730			2	Screw	Skruv	5
0300	16	*92 36 589*		NLS - USE 4013165	2	Clip	Clips	5
0310	17	92 66 495		-1991, LH	1	Bracket	Hållare	5
0320	17	*92 66 487*		-1991, RH NLS - USE 4293189	1	Bracket	Hållare	5
0330	17	42 93 197		1992-, LH	1	Bracket	Hållare	5
0340	17	42 93 189		1992-, RH	1	Bracket	Hållare	5
0350	18	40 07 639		LH	1	Roof gutter	Ränna	5
0360	18	40 07 621		RH	1	Roof gutter	Ränna	5
0370	20	92 68 160		213)	2	Plug	Plugg	5
0380	20	82 06 096		214)	2	Plug	Plugg	5
0390	21	92 72 352		-1991	2	Protecting moulding	Skyddslist	5
0400	22	92 67 527			2	Cover	Lock	5
0410	23	92 77 880			2	Plug	Plugg	5
0420	24	40 06 433			1	Seal	Tätning	5
0430	25	69 73 432			2	Seal	Tätning	5
0440	26	40 98 950		127) LH	1	Seal	Tätning	6
0450	26	40 98 943		127) RH	1	Seal	Tätning	6

127. Ch. L1015232--, L2010825--
146. Ch. --L1021664, --L2015470
147. Ch. L1021665--, L2015471--
152. Inner Inre
153. Outer Yttre
213. Ch. --M1019339
214. Ch. M1019340--
259. Body --2286432
260. Body 2286433--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B06 Side plate 4D / Sidoplåt 4D

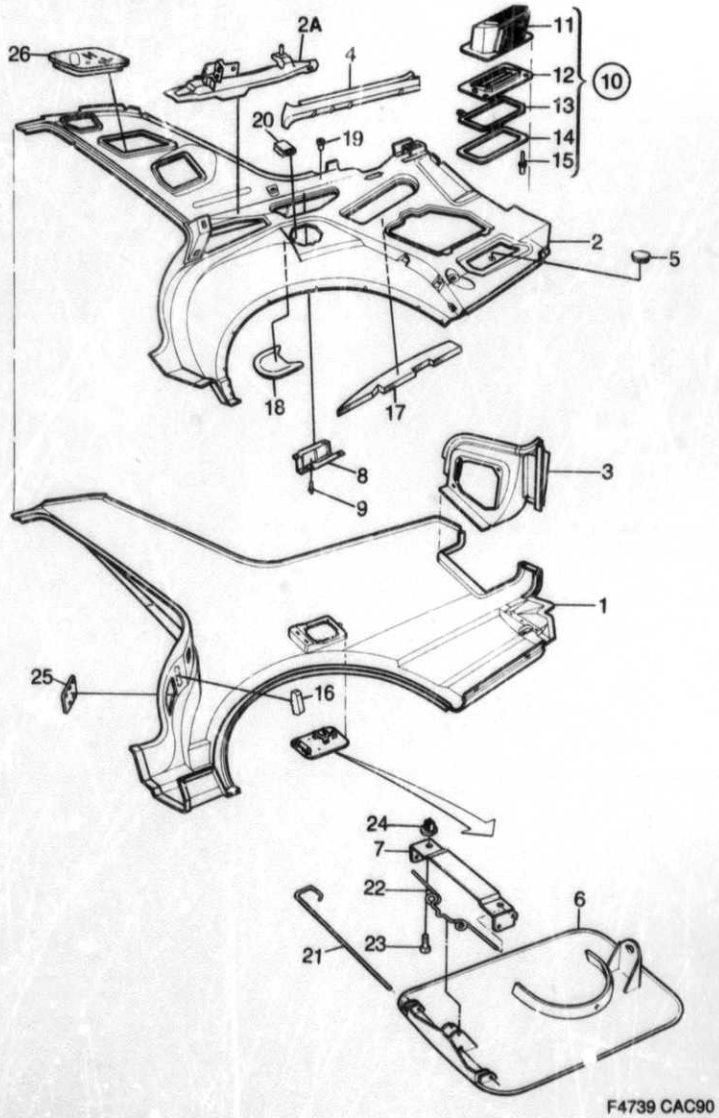

0425	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*69 73 036*		153) -1990, LH NLS - USE 4098570	1	Side plate	Sidoplåt	4
0020	1	*69 73 044*		153) -1990, RH NLS - USE 4101903	1	Side plate	Sidoplåt	4
0030	1	*41 01 911*		153) 1991, LH NLS - USE 4098570, 8284556	1	Side plate	Sidoplåt	4
0040	1	41 01 903		153) 1991, RH	1	Side plate	Sidoplåt	4
0050	1	40 98 570		153) 1992-, LH	1	Side plate	Sidoplåt	4
0060	1	40 98 562		153) 1992-, RH	1	Side plate	Sidoplåt	4
0070								
0080	2	*69 76 237*		152) -1991, LH NLS - USE 4007233	1	Side plate	Sidoplåt	6
0090	2	69 76 229		152) -1991, RH	1	Side plate	Sidoplåt	6
0100	2	40 07 233		152) 1992-, LH	1	Side plate	Sidoplåt	6
0110	2	40 07 241		152) 1992-, RH	1	Side plate	Sidoplåt	6
0120	2A	40 07 332		-1991, LH	1	Reinforcement	Förstärkning	6
0130	2A	40 07 324		-1991, RH	1	Reinforcement	Förstärkning	6
0140	2A	42 94 278		1992-, LH	1	Reinforcement	Förstärkning	6
0150	2A	42 94 260		1992-, RH	1	Reinforcement	Förstärkning	6
0160	3	69 73 002		LH	1	Corner	Hörn	5
0170	3	69 63 961		RH	1	Corner	Hörn	5
0180	4	69 73 028		LH	1	Roof gutter	Ränna	5
0190	4	69 73 010		RH	1	Roof gutter	Ränna	5
0200	5	92 67 899		LH ONLY	1	Plug	Plugg	5
0210	6	*43 06 528*		259) (9277559) NLS - USE 4306510	1	Cover	Täcklock	5
0220	6	43 06 510		260) (4305421)	1	Cover	Täcklock	5
0230	7	92 55 910			1	Hinge	Gångjärn	6
0240	8	69 41 017			1	Spacer	Distansstycke	5
0250	9	69 45 505			4	Rivet	Nit	5
0260	10	96 28 843		4D	1	Air outlet	Luftutsläpp	5
0270	11	96 28 850			1	. Cover	. Kåpa	5
0280	12	96 28 868			1	. Grille	. Galler	5
0290	13	96 28 876			2	. Flap	. Klaff	5
0300	14	96 28 884			1	. Seal	. Tätning	5
0310	15	79 75 717			1	Rivet	Nit	5
0320	16	69 73 549			2	Seal	Tätning	5
0330	17	69 75 460			1	Damper mat	Dämpmatta	5
0340	18	89 82 472			1	Sealing collar	Tätningskrage	5
0350	19	73 99 454			1	Nut	Mutter	5
0360	20	69 75 510			1	Protection	Skydd	5
0370	21	92 76 403			1	Shaft	Axel	5
0380	22	40 05 948			1	Spring	Fjäder	5
0390	23	79 67 730			2	Screw	Skruv	5
0400	24	*92 36 589*		NLS - USE 4013165	2	Clip	Clips	5
0405	25	92 67 527			2	Cover	Lock	5
0410	26	40 98 950		127) LH	1	Seal	Tätning	6
0420	26	40 98 943		127) RH	1	Seal	Tätning	6

.27. Ch. L1015232--, L2010825--
152. Inner Inre
153. Outer Yttre
259. Body --2286432
260. Body 2286433--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B08

Side plate
Sidoplåt
5CS

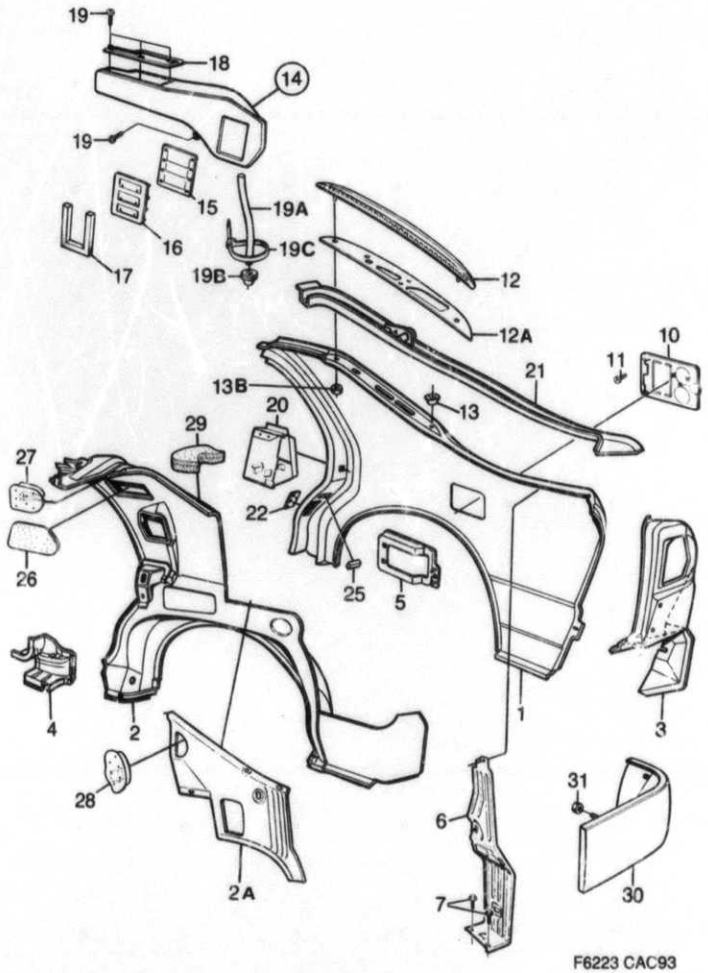

F6223 CAC93

0430	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 130		153) LH	1	Side plate	Sidoplåt	4
0020	1	42 93 122		153) RH	1	Side plate	Sidoplåt	4
0030	2	42 93 114		152) LH	1	Side plate	Sidoplåt	6
0040	2	42 93 106		152) RH	1	Side plate	Sidoplåt	6
0050	2A	42 94 716		LH	1	Support plate	Stödplåt	6
0060	2A	42 94 708		RH	1	Support plate	Stödplåt	6
0070	3	42 93 171		LH	1	Corner	Hörn	5
0080	3	42 93 163		RH	1	Corner	Hörn	5
0090	4	42 93 478		LH	1	Extension	Förlängning	5
0100	4	42 93 460		RH	1	Extension	Förlängning	5
0110	5	42 93 791		RH	1	Attaching plate	Fästplåt	5
0120	6			LH	1	Support plate	Stödplåt	
0130				See page 3A-107, 2-E12				
0140	6	*90 86 562*		319) RH NLS - USE 4269759	1	Support plate	Stödplåt	6
0150	6	42 69 759		320) RH	1	Support plate	Stödplåt	6
0160	7	79 78 091			3	Screw	Skruv	5
0170								
0180	10	42 93 890		-1992	1	Filler cap	Tanklock	5
0190	10	43 06 171		1993	1	Filler cap	Tanklock	5
0200	11	79 78 091			2	Screw	Skruv	5
0210								
0220	12	*96 30 153*		-1992, LH NLS - USE 4383667	1	Exhaust grille	Evakueringsgaller	5
0230	12	96 30 146		-1992, RH	1	Exhaust grille	Evakueringsgaller	5
0240	12	43 83 667		1993, LH	1	Exhaust grille	Evakueringsgaller	5
0250	12	43 83 659		1993, RH	1	Exhaust grille	Evakueringsgaller	5
0260	12A	43 18 853		227) LH	1	Stripe	Dekortejp	5
0270	12A	43 18 846		227) RH	1	Stripe	Dekortejp	5
0280	13	96 30 526			4	Clamp	Klämma	5
0290	13B	79 74 298			2	Nut	Mutter	5
0300	14	40 72 096		LH	1	Box	Låda	5
0310	14	40 72 088		RH	1	Box	Låda	5
0320	15	40 72 062			1	▪ Valve	▪ Ventil	5
0330	16	40 72 070			1	▪ Bracket	▪ Hållare	6
0340	17	40 72 104			1	▪ Seal	▪ Tätning	5
0350	18	40 72 120			1	▪ Seal	▪ Tätning	5
0360	19	79 84 305			8	Hexagon screw	Sexkantsskruv	5
0370	19A	96 30 187			2	Draining hose	Dräneringsslang	5
0390	19B	92 54 707			2	Grommet	Genomföring	5
0400	19C	79 71 864			2	Tensioning band	Spännband	5
0410								
0420	20	42 93 197		LH	1	Bracket	Hållare	5
0430	20	42 93 189		RH	1	Bracket	Hållare	5
0440	21	42 93 155		LH	1	Roof gutter	Ränna	5
0450	21	42 93 148		RH	1	Roof gutter	Ränna	5
0460	22	92 67 527			2	Cover	Lock	5
0470	25	41 01 721			2	Seal	Tätning	5
0480	26	41 01 358		LH	1	Seal	Tätning	4
0490	26	41 01 366		RH	1	Seal	Tätning	4
0500	27	42 93 676		LH	1	Seal	Tätning	4
0510	27	42 93 668		RH	1	Seal	Tätning	4
0520	28	41 01 374		LH	1	Seal	Tätning	4
0530	28	41 01 341		RH	1	Seal	Tätning	4
0540	29	41 01 606			2	Seal	Tätning	4
0550								
0560	30	90 88 998		LH	1	Corner	Hörn	5
0570	30	90 88 980		RH	1	Corner	Hörn	5

152. Inner Inre
153. Outer Yttre
227. Ch. --N1002653
319. Ch. --P1000117
320. Ch. P1000118--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-F02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

Car body

5-B10 *Side plate* *5CS*

Karosskrov

Sidoplåt *5CS*

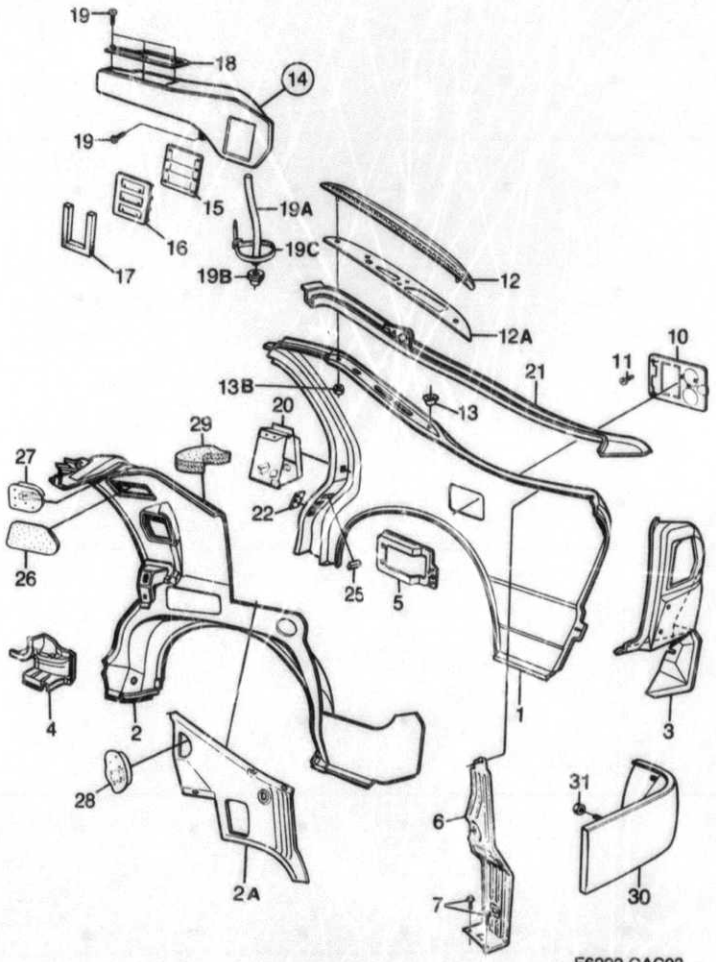

F6223 CAC93

0430 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590 31	79 77 929			8	Nut	Mutter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B12

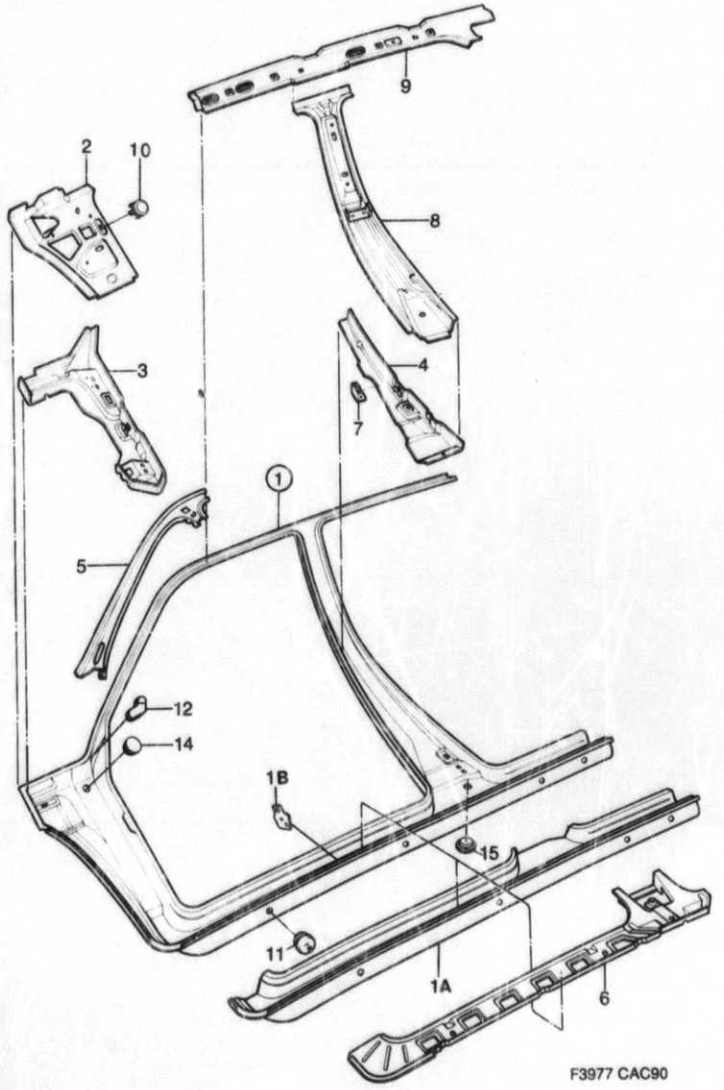

F3977 CAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450								
0010	1	*40 08 017*		38) -1990, LH	1	Door frame	Dörram	6
0020				SEE SI 810-1321 NLS - USE 4101630, 8284366				
0030	1	*40 08 009*		38) -1990, RH	1	Door frame	Dörram	6
0040				SEE SI 810-1321 NLS - USE 4101648, 8284358				
0050	1	*41 00 434*		1991, LH	1	Door frame	Dörram	6
0060				SEE SI 810-1321 NLS - USE 4101630				
0070	1	*41 00 426*		1991, RH	1	Door frame	Dörram	6
0080				SEE SI 810-1321 NLS - USE 4101648				
0090	1	41 01 630		1992-, LH	1	Door frame	Dörram	6
0100	1	41 01 648		1992-, RH	1	Door frame	Dörram	6
0110	1A	40 99 636		LH	1	▲Sill	▲Tröskel	6
0120	1A	40 99 628		RH	1	▲Sill	▲Tröskel	6
0130	1B	42 94 419		1991-, LH	1	▲Bulkhead	▲Skott	5
0140	1B	42 94 401		1991-, RH	1	▲Bulkhead	▲Skott	5
0150	2	*69 76 310*		-1991, LH NLS - USE 4293759	1	Cover plate	Täckplåt	6
0160	2	42 93 759		1992-, LH	1	Cover plate	Täckplåt	6
0170	2	*69 76 302*		-1991, RH NLS - USE 4293908	1	Cover plate	Täckplåt	6
0180	2	42 93 908		1992-, RH	1	Cover plate	Täckplåt	6
0190	3	69 76 161		-1990, LH	1	Reinforcement	Förstärkning	6
0200	3	69 76 146		-1990, RH	1	Reinforcement	Förstärkning	6
0210	4	92 66 297		-1990, LH	1	Reinforcement	Förstärkning	6
0220	4	*92 66 289*		-1990, RH NLS	1	Reinforcement	Förstärkning	6
0230	5	69 76 054		-1990, LH	1	A-pillar	A-stolpe	6
0240	5	69 76 062		-1990, RH	1	A-pillar	A-stolpe	6
0250	6	69 76 112		-1990, LH, REINFORCEMENT	1	Sill	Tröskel	6
0260	6	69 76 104		-1990, RH, REINFORCEMENT	1	Sill	Tröskel	6
0270	7	92 66 347		-1991	2	Bracket	Hållare	5
0280	7	41 01 481		1992-	2	Bracket	Hållare	5
0290	8	69 76 138		LH	1	B-pillar	B-stolpe	6
0300	8	69 76 120		RH	1	B-pillar	B-stolpe	6
0310	9	69 76 096		152) LH	1	Beam	Balk	6
0320	9	69 76 088		152) RH	1	Beam	Balk	6
0330	10	92 68 988			2	Cover	Lock	5
0340	11	92 67 931			8	Plug	Plugg	5
0350	12	41 00 376			2	Seal	Tätning	4
0360	14	82 04 760			1	Plug	Plugg	5
0370	15	40 98 018		-1990, NOT T16S	2	Plug	Plugg	5

38. Use stoneguard LH, 6961999 and RH, 6961981 Använd stenskottskydd V, 6961999, och H, 6961981
152. Inner Inre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B14

Plugs
Pluggar

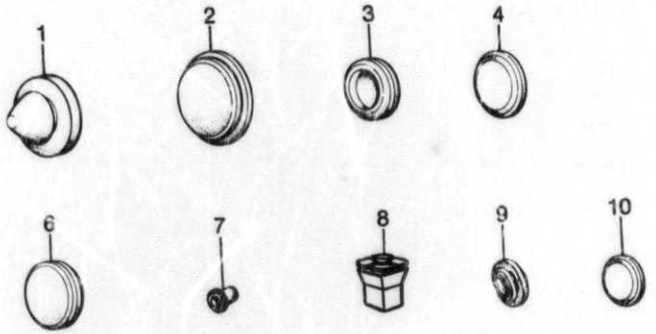

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 30 572		HOLE Ø 5,8MM	X	Plug	Plugg	5
0020	1	82 67 296		HOLE Ø 7,4MM	X	Plug	Plugg	5
0030	2	85 75 599		HOLE Ø 25MM	X	Plug	Plugg	5
0040	3	92 68 178		HOLE Ø 16MM	X	Plug	Plugg	5
0050	4	71 55 708		HOLE Ø 35MM	X	Plug	Plugg	5
0060	4	70 38 342		HOLE Ø 22MM	X	Plug	Plugg	5
0070	6	82 06 096		HOLE Ø 12MM	X	Plug	Plugg	5
0080	7	82 72 635		-1991, HOLE Ø 10MM	X	Plug	Plugg	5
0090	8	79 75 261		SQUARE HOLE, 8MM	X	Nut	Mutter	5
0100	9	92 67 915		OVAL HOLE Ø 12 - 16MM	X	Plug	Plugg	5
0110	9	92 67 899		OVAL HOLE Ø 20 - 25MM	X	Plug	Plugg	5
0120	10	92 68 186		HOLE Ø 11MM	X	Plug	Plugg	5

F4619 CAC90

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B16

Hood, hinges and locks
Huv, gångjärn och lås

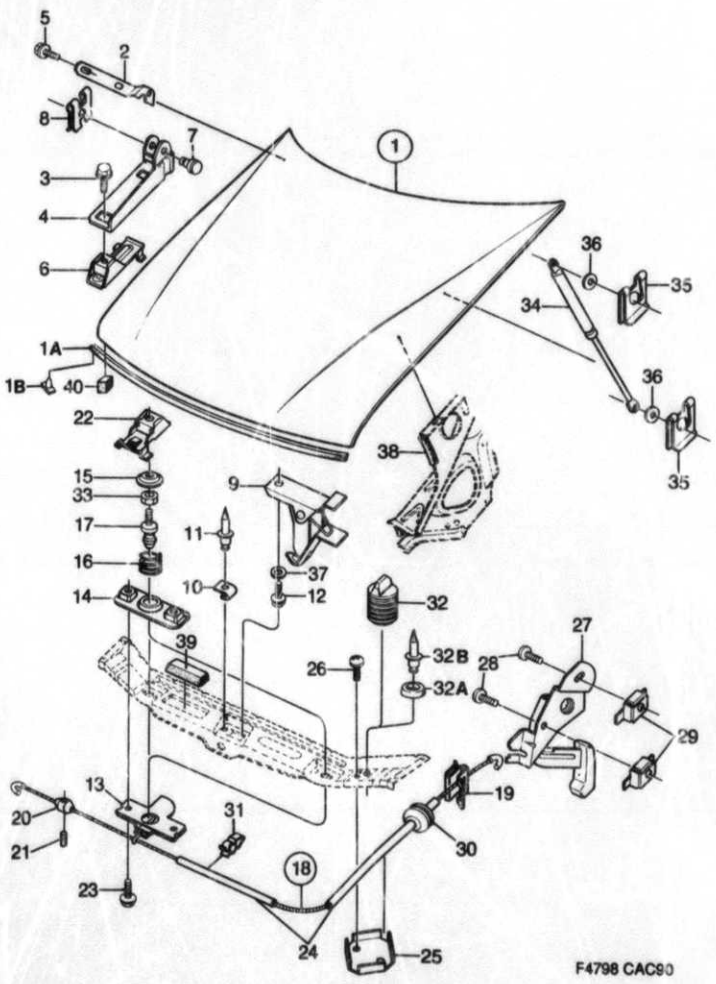

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qt/ Antal	Description	Benämning	S L
0010	1	69 57 393		4D, 5D	1	Bonnet	Motorhuv	3
0020	1	42 93 031		5CS	1	Bonnet	Motorhuv	3
0030	1A	43 03 277		298) 5CS	1	Seal	Tätning	4
0040	1A	*44 92 211*		299)-1993 5CS NLS - USE 4494464	1	Seal	Tätning	4
0040								
0050	1B	90 87 269		299) 5CS	12	₄Clip	₄Clips	5
0060	2	92 55 779		LH, 4D, 5D	1	Hinge	Gångjärn	3
0070	2	92 55 761		RH, 4D, 5D	1	Hinge	Gångjärn	3
0080	2	90 81 159		LH, 5CS	1	Hinge	Gångjärn	3
0090	2	90 81 142		RH, 5CS	1	Hinge	Gångjärn	3
0100	3	82 62 958			4	Screw	Skruv	5
0110	4	92 55 738		LH, 4D, 5D	1	Hinge	Gångjärn	3
0120	4	92 55 720		RH, 4D, 5D	1	Hinge	Gångjärn	3
0130	4	90 81 175		LH, 5CS	1	Hinge	Gångjärn	3
0140	4	90 81 167		RH, 5CS	1	Hinge	Gångjärn	3
0150	5	82 62 958			4	Screw	Skruv	5
0160	6	79 74 470		-1990	4	Cage nut	Korgmutter	5
0170	7	92 55 712			2	Pin	Tapp	5
0180	8	82 52 553			2	Clip	Clips	5
0190	9	69 73 622			1	Catch	Hake	3
0200	9	40 98 273		5CS	1	Catch	Hake	3
0210	10	92 59 912			1	Guard	Skydd	4
0220	11	79 72 474		-1991	1	Pop rivet	Popnit	3
0230	11	79 72 490		1992-	1	Rivet	Nit	5
0240	12	82 86 296			1	Screw	Skruv	5
0250	13	69 73 689			2	Bonnet lock	Huvlås	3
0260	13	69 73 697		RHD	2	Bonnet lock	Huvlås	3
0270	14	69 73 671			2	Guide	Styrning	5
0280	15	69 73 762			2	Washer	Bricka	5
0290	16	69 73 770			2	Return spring	Returfjäder	5
0300	17	69 73 788			2	Lock pin	Låstapp	4
0310	18	69 73 218			1	Hood lock wire	Huvlåswire	2
0320	19	82 64 855			1	₄Clip	₄Clips	5
0330	20	69 73 804			2	Clip	Clips	5
0340	21	79 75 477			2	Set screw	Stoppskruv	5
0350	22	79 75 352			2	Cage nut	Korgmutter	5
0360	23	82 86 296			4	Screw	Skruv	5
0370	24	92 61 652			1	Tube	Rör	5
0380	25	69 59 753			1	Cap	Överfall	5
0390	26	79 73 001			2	Screw	Skruv	5
0400	27	*96 63 089*		75) NLS - USE 4054912	1	Control	Reglage	5
0410	27	40 54 912		76)	1	Control	Reglage	5
0420	27	96 63 097		75), RHD	1	Control	Reglage	5
0430	27	40 54 920		76), RHD	1	Control	Reglage	5
0440	28	80 59 396			2	Screw	Skruv	5
0450	29	79 74 231			2	Cage nut	Korgmutter	5
0460	30	79 61 311			1	Bushing	Bussning	5
0470	31	92 66 552		-1993	1	Tube clamp	Rörklamma	5
0480	32	92 75 744		-1991, 4D, 5D	2	Buffer	Buffert	5
0490	32	43 04 234		1992-, 4D, 5D	2	Rubber buffer	Gummibuffert	4
0500	32	43 04 234		257) 5CS	2	Rubber buffer	Gummibuffert	4
0510	32A	90 85 267		256) 5CS	2	Buffer	Buffert	5
0520	32B	79 72 474		256) 5CS	2	Pop rivet	Popnit	3
0530	33	81 51 235			2	Nut	Mutter	5
0540	34	92 70 240			2	Spring	Fjäder	3
0550	35	82 52 553			4	Clip	Clips	5
0560	36	82 52 363			8	Washer	Bricka	5

75. Ch. --L1006073, --L2004682, --L8000765
76. Ch. L1006074--, L2004683--, L8000766--
256. Body --2270931
257. Body 2270932--
298. Ch. --P1027130
299. Ch. P1027131--

MASTER INDEX


0	General	1-A02
2	Engine	1-C0?
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B18

Hood, hinges and locks
Huv, gångjärn och lås

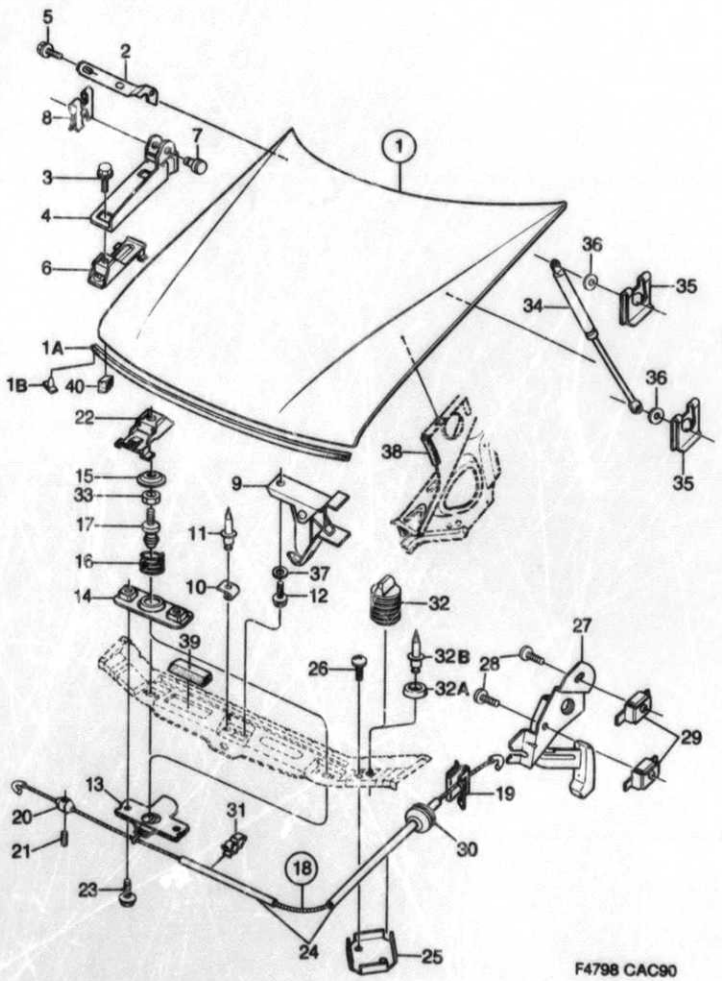

F4798 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
38	82 78 558		232)	1	Protecting moulding	Skyddslist	5
39	92 69 390			2	Support	Stöd	5
40	69 59 027			2	Rubber bushing	Gummibussning	4
	96 98 523		See page 8A-151, 5-G08	2	Bonnet lock kit	Huvlåssats	3
	96 98 515		RHD	2	Bonnet lock kit	Huvlåssats	3
			See page 8A-151, 5-G08				

232. Ch. --N1002000

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B20

Front member
Grille

Frontbalk
Grill

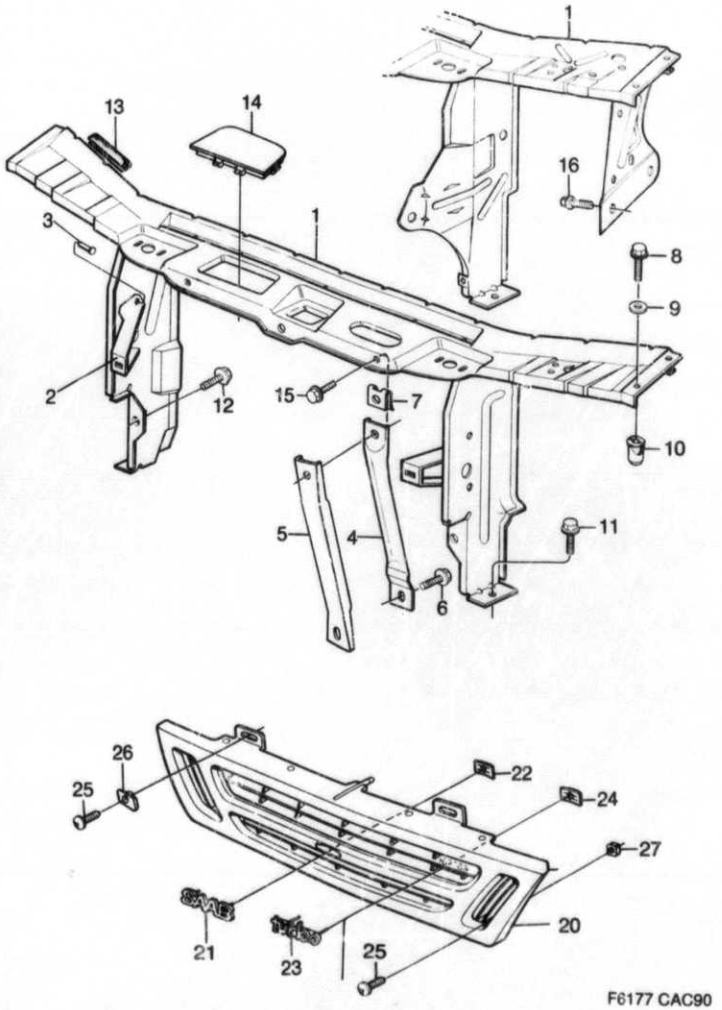


0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 61 858		4D, 5D	1	Beam	Balk	3
0020	1	42 93 072		5CS	1	Beam	Balk	3
0030	2	92 73 970		-1990, 5D	2	Bracket	Fäste	3
0040	2	69 39 755		-1990, 4D	2	Bracket	Fäste	3
0050	2	69 39 755		1991-, 4D, 5D	2	Bracket	Fäste	3
0060	3	79 61 691		-1990	4	Rivet	Nit	5
0070	3	79 72 516		1991-, 4D, 5D	4	Rivet	Nit	5
0080	4	92 60 712		LH, 4D, 5D	1	Stay	Stag	5
0090	4	92 60 704		RH, 4D, 5D	1	Stay	Stag	5
0100	4	90 88 444		5CS	2	Stay	Stag	5
0110	5	90 88 535		5CS	2	Guard	Skydd	5
0120	6	79 73 209		-1990	2	Screw	Skruv	5
0130	6	79 75 782		1991-, 4D, 5D	2	Screw	Skruv	5
0140	6	79 73 050		5CS	2	Screw	S	5
0150	7	73 99 181			2	Clip	Clips	5
0160	8	*73 99 223*		-1990 NLS - USE 7974694	4	Screw	Skruv	5
0170	8	79 74 694		1991-	4	Screw	Skruv	5
0180	9	73 98 829			4	Washer	Bricka	5
0190	10	92 68 913			4	Cage nut	Korgmutter	5
0200	11	79 73 134		4D, 5D	2	Screw	Skruv	5
0210	12	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0220	13	82 78 558			1	Protecting moulding	Skyddslist	5
0230	14	75 77 331		I WITH AC, US, ME, FE, JP, AU, CA	1	Protecting casing	Skyddskåpa	4
0240								
0250	15	79 75 782		4D, 5D	2	Screw	Skruv	5
0260	15	79 73 050		5CS	2	Screw	Skruv	5
0270	16	79 78 109		5CS	4	Screw	Skruv	5
0280								
0290	20	92 53 592		-1990, 5D, CHROMED	1	Grille	Grill	3
0300	20	92 53 584		-1990, 5D, PAINTED	1	Grille	Grill	3
0310	20	92 78 136		-1990, 4D, CHROMED	1	Grille	Grill	3
0320	20	92 78 136		1991-, 4D, 5D, CHROMED	1	Grille	Grill	3
0330	20	44 46 605		5CS (9083296)	1	Grille	Grill	3
0340	21	92 53 022		-1990, 5D, "SAAB"	1	.Emblem	.Emblem	3
0350	21	69 56 593		-1990, 4D, "SAAB"	1	.Emblem	.Emblem	3
0360	21	69 56 593		1991-, "SAAB"	1	.Emblem	.Emblem	3
0370	22	79 19 483		-1992	2	.Clip	.Clips	5
0380								
0390	23	92 63 997		-1990, 5D, "TURBO"	1	Emblem	Emblem	3
0400	23	69 62 823		-1990, 4D, "TURBO"	1	Emblem	Emblem	3
0410	23	69 62 823		1991-, 4D, 5D, "TURBO"	1	Emblem	Emblem	3
0420	23	92 63 997		5CS, "TURBO"	1	Emblem	Emblem	3
0430	24	79 19 483			2	Clip	Clips	5
0440	25	79 77 960		4D, 5D	4	Screw	Skruv	5
0450	25	84 26 199		5CS	2	Screw	Skruv	5
0460	26	40 89 462		4D, 5D	2	Clip	Clips	3
0470	26	40 89 454		5CS	2	Clip	Clips	3
0480	27	79 75 261			2	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

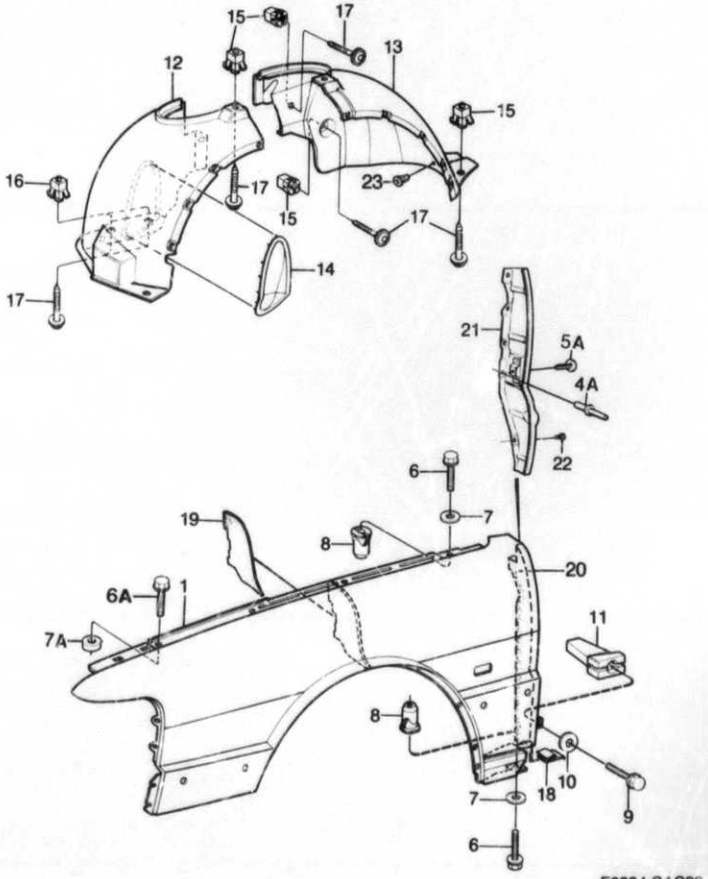

F6224 CAC93

Hood, front, fenders

5-B22 Front fender 5D, 4D

Motorhuv, front, skärmar

Framskärm 5D, 4D

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 73 939		LH	1	Front fender	Framskärm	3
0020	1	92 73 921		RH	1	Front fender	Framskärm	3
0030	4A	79 72 490			10	Rivet	Nit	5
0040	5A	73 98 555		-1991	2	Screw	Skruv	5
0045	5A	79 73 050		1992-	2	Screw	Skruv	5
0050	6	*73 99 223*		-1990 NLS - USE 7974694	10	Screw	Skruv	5
0060	6	79 74 694		1991-	10	Screw	Skruv	5
0070	6A	79 75 436		1992-	2	Screw	Skruv	5
0080	7	73 98 829			10	Washer	Bricka	5
0090	7A	41 00 897		1992-	2	Washer	Bricka	5
0100	8	92 68 913			10	Cage nut	Korgmutter	5
0110	9	*92 52 966*		-1990 NLS - USE 7923014	2	Screw	Skruv	5
0120	9	79 23 014		1991-	2	Screw	Skruv	5
0130	10	80 29 977			2	Washer	Bricka	5
0140	11	92 52 958			2	Clip	Clips	3
0150	12	*69 45 315*		2,248) LH NLS - USE 4294054	1	Wheel housing	Hjulhus	5
0160	12	42 94 054		2,249) LH	1	Wheel housing	Hjulhus	5
0170	12	*69 45 307*		2,248) RH NLS - USE 4294047	1	Wheel housing	Hjulhus	5
0180	12	42 94 047		2,249) RH	1	Wheel housing	Hjulhus	5
0190	13	69 45 356		3) LH	1	Wheel housing	Hjulhus	5
0200	13	69 45 349		3) RH	1	Wheel housing	Hjulhus	5
0210	14	92 62 601		RH	1	Cover	Kåpa	3
0220	15	79 75 261		248)	10	Nut	Mutter	5
0230	15	79 82 655		249)	12	Press nut	Pressmutter	5
0240	16	79 75 279		248)	4	Nut	Mutter	5
0250	17	79 77 465		248)	14	Screw	Skruv	5
0260	17	79 82 325		249)	12	Screw	Skruv	5
0270	18	69 59 811		-1990, LH	1	Protection	Skydd	5
0280	18	69 59 803		-1990, RH	1	Protection	Skydd	5
0290	19	92 79 860			2	Screen	Avskärmning	5
0300	20	69 57 708			2	Screen	Avskärmning	5
0310	21	69 73 333		-1992, LH	1	End plate	Gavel	5
0320	21	*69 73 325*		-1992, RH NLS - USE 4296208, 9240078	1	End plate	Gavel	5
0321	21	42 95 150		1993, LH	1	End plate	Gavel	5
0322	21	42 95 168		1993, RH	1	End plate	Gavel	5
0330	22	79 72 516			5	Rivet	Nit	5
0340	23	92 88 846		1990, T16SB	4	Nut	Mutter	5
0350	23	90 87 040		1991-	4	Nut	Mutter	5

2. Front Främre
3. Rear Bakre
248. Ch. --N1014491
249. Ch. N1014492--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-B24

Front fender
5CS

Framskärm
5CS

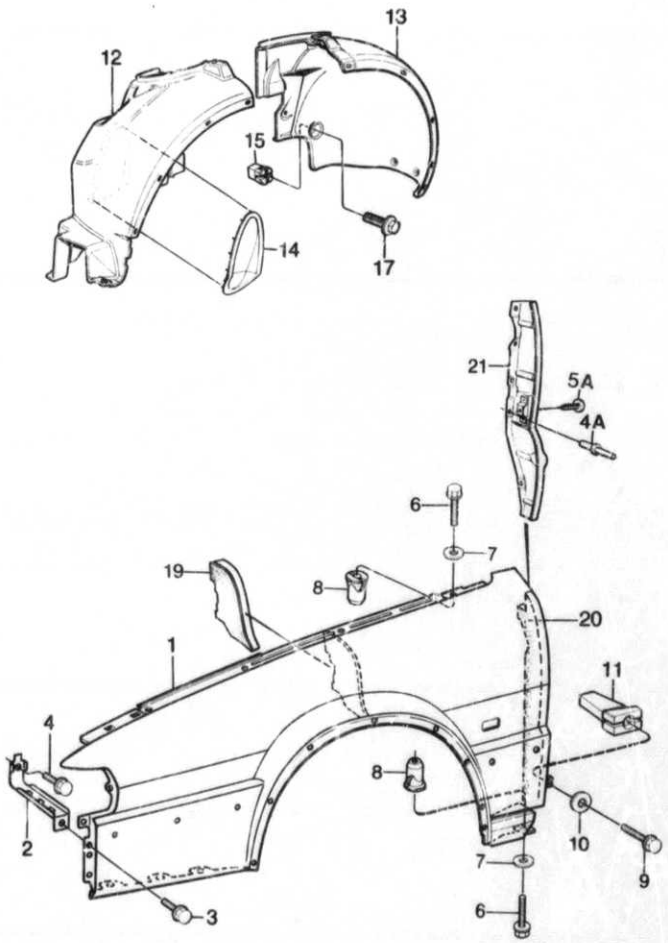

F6225 CAC93

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 015		LH	1	Front fender	Framskärm	3
0020	1	42 93 007		RH	1	Front fender	Framskärm	3
0030	2	43 03 962			2	Bracket	Fäste	4
0040	3	79 78 091			4	Screw	Skruv	5
0050	4	79 78 109			2	Screw	Skruv	5
0060	4A	79 72 516			10	Rivet	Nit	5
0070	5A	79 73 050			2	Screw	Skruv	5
0080	6	79 74 694			8	Screw	Skruv	5
0090	7	73 98 829			8	Washer	Bricka	5
0100	8	92 68 913			8	Cage nut	Korgmutter	5
0110	9	79 23 014			2	Screw	Skruv	5
0120	10	73 98 829			2	Washer	Bricka	5
0130	11	52 52 958			2	Clip	Clips	3
0140	12	90 87 032		2) LH	1	Wheel housing	Hjulhus	5
0150	12	90 87 024		2) RH	1	Wheel housing	Hjulhus	5
0160	13	90 87 016		3) LH	1	Wheel housing	Hjulhus	5
0170	13	90 87 008		3) RH	1	Wheel housing	Hjulhus	5
0175	14	92 62 601		RH	1	Cover	Kåpa	3
0180	15	79 82 655			10	Press nut	Pressmutter	5
0190	17	79 82 325			10	Screw	Skruv	5
0200	19	42 93 346			2	Screen	Avskärmning	5
0210	20	68 57 708			2	Screen	Avskärmning	5
0220	21	69 73 333		-1992, LH	1	End plate	Gavel	5
0230	21	69 73 325		-1992, RH NLS - USE 4296208, 9240078	1	End plate	Gavel	5
0231	21	42 95 150		1993, LH	1	End plate	Gavel	5
0232	21	42 95 168		1993, RH	1	End plate	Gavel	5
0240	23	90 87 040			4	Nut	Mutter	5

2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5--C02

Front doors, hinges, window regulators

Framdörrar, gångjärn, fönsterhissar

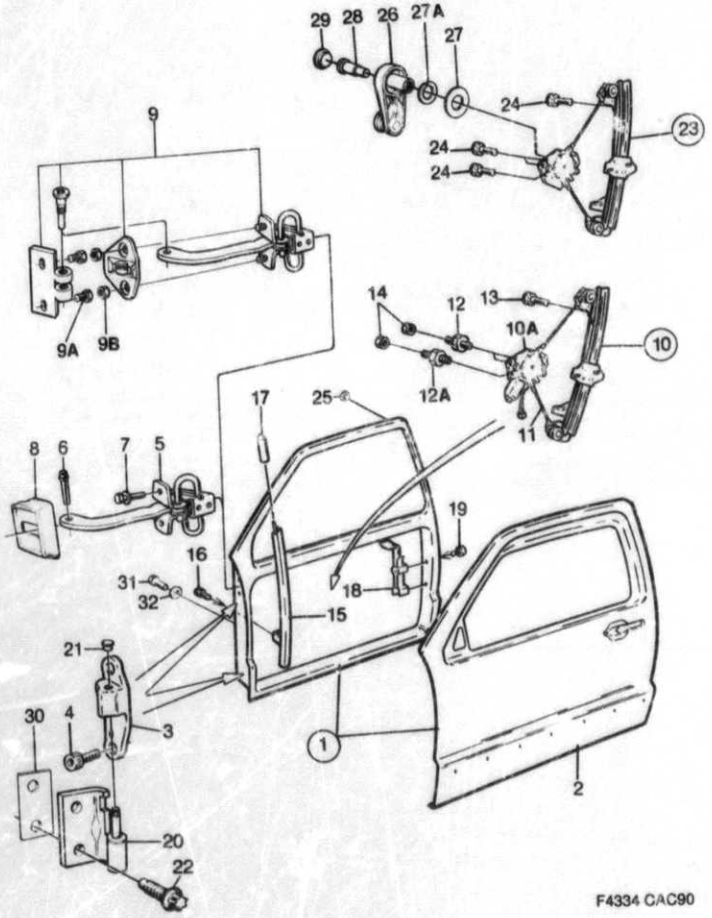

F4334 CAC90

0750	Pos	Part No/Art nr	K b	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 75 791		LH, 4D, 5D	1	Door	Dörr	4
0020	1	69 75 783		RH, 4D, 5D	1	Door	Dörr	4
0030	1	43 06 031		LH, 5CS	1	Door	Dörr	4
0040	1	43 06 049		RH, 5CS	1	Door	Dörr	4
0050	2	92 52 719		LH, 4D, 5D	1	.Outer panel	.Ytterplåt	3
0060	2	92 52 701		RH, 4D, 5D	1	.Outer panel	.Ytterplåt	3
0070	3	*69 61 718*		-1992, LH NLS - USE 4306809	2	Hinge	Gångjärn	5
0080	3	*69 61 700*		-1992, RH NLS - USE 4306791	2	Hinge	Gångjärn	5
0081	3	43 06 809		1993, LH	2	Hinge	Gångjärn	5
0082	3	43 06 791		1993, RH	2	Hinge	Gångjärn	5
0090	4	73 98 761			8	Screw	Skruv	5
0100								
0110	5	92 79 886		-1990	2	Restrainer	Dörrstopp	6
0120	6	92 67 477		-1990	2	Pipe set	Rörsats	5
0130	7	92 70 257		-1990	4	Screw	Skruv	5
0140	8	92 68 194		-1990	2	Protection	Skydd	5
0150								
0160	9	82 84 366		1991-, LH	1	Restrainer kit	Dörrstoppsats	6
0170	9	82 84 358		1991-, RH	1	Restrainer kit	Dörrstoppsats	6
0190	9A	97 78 952		1991-	4	Screw	Skruv	5
0190	9B	79 71 658		1991-,304)	4	Nut	Mutter	5
0191	9B	79 77 929		305)	4	Nut	Mutter	5
0200								
0210	10	92 55 217		42) LH	1	Window lift	Fönsterhiss	5
0220	10	92 55 209		42) RH	1	Window lift	Fönsterhiss	5
0230	10A	43 05 199		294) LH	1	.Motor	.Motor	5
0240	10A	43 05 181		294) RH	1	.Motor	.Motor	5
0250	11	82 86 280			1	.Cable	.Wire	9
0260		43 03 186			3	..Absorber	..Dämpare	5
0270	12	*92 63 823*		-1990,162) NLS - USE 4303186	4	.Absorber	.Dämpare	5
0280	12	43 03 186		1991-,162)	6	.Absorber	.Dämpare	5
0290	12A	*92 68 608*		-1990 162) NLS - USE 4303186	2	.Absorber	.Dämpare	5
0300	13	79 69 223		EW	6	Screw	Skruv	5
0310	14	79 71 658			6	Nut	Mutter	5
0320	15	*92 61 272*		85) LH NLS - USE 4089694	1	Guide moulding	Styrlist	5
0330	15	40 89 694		86) LH	1	Guide moulding	Styrlist	5
0340	15	*92 61 264*		85) RH NLS - USE 4089686	1	Guide moulding	Styrlist	5
0350	15	40 89 686		86) RH	1	Guide moulding	Styrlist	5
0360	16	79 69 223			2	Screw	Skruv	5
0370	17	92 63 658			2	Protecting cap	Skyddshuv	5
0380	18	92 62 353		LH	1	Bracket	Hållare	5
0390	18	92 62 346		RH	1	Bracket	Hållare	5
0400	19	79 79 610			2	Screw	Skruv	5
0410	20	69 60 793		LH	2	Hinge	Gångjärn	4
0420	20	69 60 785		RH	2	Hinge	Gångjärn	4
0430	21	92 59 938			4	Plug	Plugg	5
0440	22	73 98 761			8	Screw	Skruv	5
0450	23	69 93 034		LH	1	Window lift	Fönsterhiss	5
0460	23	69 93 026		RH	1	Window lift	Fönsterhiss	5
0470	24	79 69 223			12	Screw	Skruv	5
0480	25	69 30 572			2	Plug	Plugg	5

42. Electricaily operated Elektriskt manövrerad
85. Ch. --L1007511, --L2005610, --L8000894
86. Ch. L1007512--, L2005611--, L8000895--
162. For electrical window regulator För elektrisk fönsterhiss
199. Ch. M1017620--, M2011731--
294. Ch. N1009135--
304. Ch. --P1032414
305. Ch. P1032415--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C04

Front doors, hinges, window regulators

Framdörrar, gångjärn, fönsterhissar

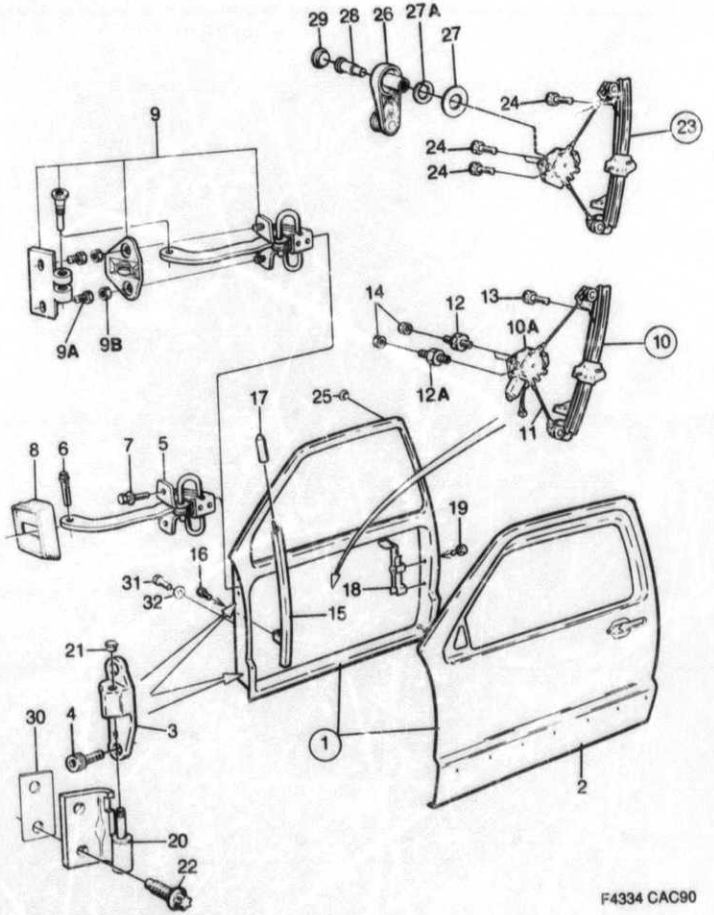

F4334 CAC90

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	26	95 34 322			2	Crank	Vev	4
0500	27	97 59 671			2	Washer	Bricka	5
0510	27A	79 69 967			2	Washer	Bricka	5
0520	28	98 35 737			2	Screw	Skruv	5
0530	29	95 34 355			2	Cover	Lock	4
0540	30	92 79 514			X	Spacer	Mellanlägg	3
0550	31	79 72 466			4	Screw	Skruv	5
0560	32	80 29 969			4	Washer	Bricka	5
0570		82 84 085		LH	1	Hinge kit	Gångjärnssats	5
0580				See page 8A-159, 5-G16				
0590		82 84 077		RH	1	Hinge kit	Gångjärnssats	5
0600				See page 8A-159, 5-G16				
0610		85 47 861		42) -1992, I	1	Window lift	Fönsterhiss	5
0620				See page 8A-155, 5-G12				
0630		85 47 879		42) -1992, I, SR	1	Window lift	Fönsterhiss	5
0640				See page 8A-155, 5-G12				
0650		85 48 778		42) 1993, I	1	Window lift	Fönsterhiss	5
0660				See page 8A-155, 5-G12				
0670		85 48 786		42) 1993, I, SR	1	Window lift	Fönsterhiss	5
0680				See page 8A-155, 5-G12				
0690		85 48 109		4,42) -1992, i, WINDOWS, MIRRORS	1	Cable harness kit	Ledningsnätssats	5
0700				See page 8A-155, 5-G12				
0710		85 48 760		4,42) 1993, I, WINDOWS, MIRRORS	1	Cable harness kit	Ledningsnätssats	5
0720				See page 8A-155, 5-G12				
0730								
0740								

4. With catalytic converter. Med katalytisk reaktor.
42. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C06

Rear doors, hinges, window regulators

Bakdörrar, gångjärn, fönsterhissar

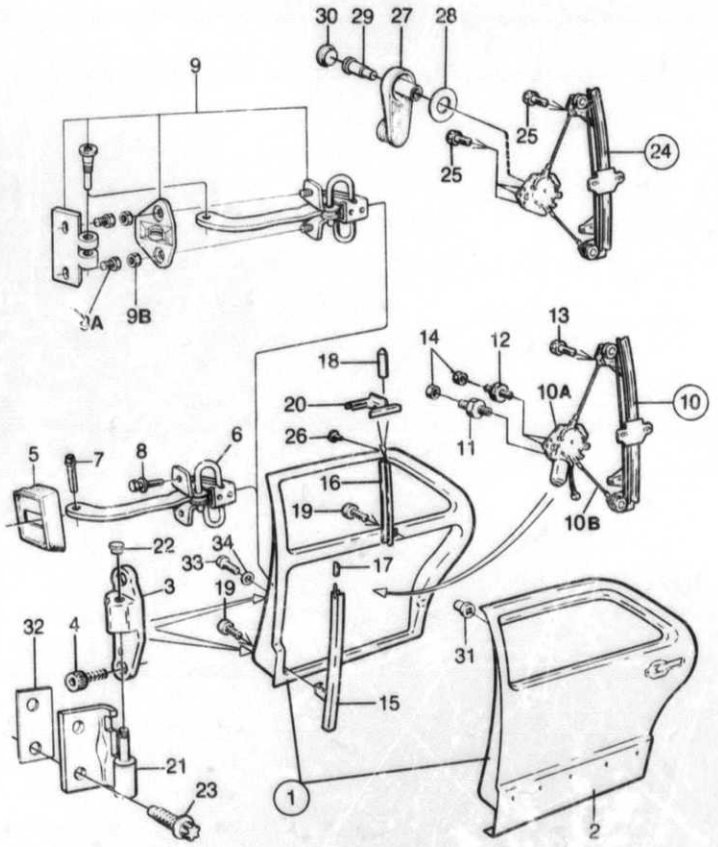

F4335 CAC90

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 75 916*		-1991, LH, 4D, 5D NLS - USE 4101812	1	Door	Dörr	5
0020	1	*69 75 908*		-1991, RH, 4D, 5D NLS - USE 4101804	1	Door	Dörr	5
0030	1	41 01 812		1992-, LH, 4D, 5D	1	Door	Dörr	5
0040	1	41 01 804		1992-, RH, 4D, 5D	1	Door	Dörr	5
0050	1	43 06 056		LH, 5CS	1	Door	Dörr	5
0060	1	43 06 064		RH, 5CS	1	Door	Dörr	5
0070	2	92 52 776		LH, 4D, 5D	1	.Outer panel	.Ytterplåt	5
0080	2	92 52 766		RH, 4D, 5D	1	.Outer panel	.Ytterplåt	5
0090		82 47 181			2	Plug	Plugg	4
0100	3	*69 61 718*		-1992, LH NLS - USE 4306809	2	Hinge	Gångjärn	5
0110	3	*69 61 700*		-1992, RH NLS - USE 4306791	2	Hinge	Gångjärn	5
0111	3	43 06 809		1993, LH	2	Hinge	Gångjärn	5
0112	3	43 06 791		1993, RH	2	Hinge	Gångjärn	5
0120	4	73 98 761			8	Screw	Skruv	5
0130								
0140	5	92 62 627		-1990	2	Protection	Skydd	5
0150	6	92 79 886		-1990	2	Restrainer	Dörrstopp	6
0160	7	92 67 477		-1990	2	Pipe set	Rörsats	5
0170	8	92 70 257		-1990	4	Screw	Skruv	5
0180								
0190	9	82 84 366		1991-, LH	1	Restrainer kit	Dörrstoppsats	6
0200	9	82 84 358		1991-, RH	1	Restrainer kit	Dörrstoppsats	6
0210	9A	97 78 952		1991-	4	Screw	Skruv	5
0220	9B	79 71 658		1991-,304)	4	Nut	Mutter	5
0221	9B	79 77 929		305)	4	Nut	Mutter	5
0230								
0240	10	92 55 233		42) LH	1	Window lift	Fönsterhiss	5
0250	10	92 55 225		42) RH	1	Window lift	Fönsterhiss	5
0260	10A	43 05 199		294) LH	1	.Motor	.Motor	5
0270	10A	43 05 181		294) RH	1	.Motor	.Motor	5
0280	10B	82 85 298			1	.Cable	.Wire	9
0300		43 03 186			3	..Absorber	..Dämpare	5
0310	11	*92 63 823*		-1990,162) NLS - USE 4303186	4	.Absorber	.Dämpare	5
0320	11	43 03 186		1991-,162)	6	.Absorber	.Dämpare	5
0330	12	*92 68 608*		-1990,162) NLS - USE 4303186	2	.Absorber	.Dämpare	5
0340	13	79 69 223			6	Screw	Skruv	5
0350	14	79 71 658			6	Nut	Mutter	5
0360	15	92 61 256		LOWER, LH	1	Guide moulding	Styrlist	5
0370	15	92 61 249		LOWER, RH	1	Guide moulding	Styrlist	5
0380	16	*92 61 231*		72) LH NLS - USE 4094132	1	Guide moulding	Styrlist	5
0390	16	40 94 132		73) LH	1	Guide moulding	Styrlist	5
0400	16	*92 61 223*		67) RH NLS - USE 4094124	1	Guide moulding	Styrlist	5
0410	16	40 94 124		68) RH	1	Guide moulding	Styrlist	5
0420	17	92 48 006			2	Protecting cap	Skyddshuv	5
0430	18	92 63 658			2	Protecting cap	Skyddshuv	5
0440	19	79 69 223			4	Screw	Skruv	5
0450	20	92 63 641			2	Spacer	Mellanlägg	5

42. Electrically operated Elektriskt manövrerad
67. Ch. --L1001923, --L2001430, --L8000552
68. Ch. L1001924--, L2001431--, L8000553--
72. Ch. --L1001834, --L2001351
73. Ch. L1001835--, L2001352--
162. For electrical window regulator För elektrisk fönsterhiss
199. Ch. M1017620--, M2011731--
294. Ch. N1009135--
304. Ch. --P1032414
305. Ch. P1032415--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C08

Rear doors, hinges, window regulators

Bakdörrar, gångjärn, fönsterhissar

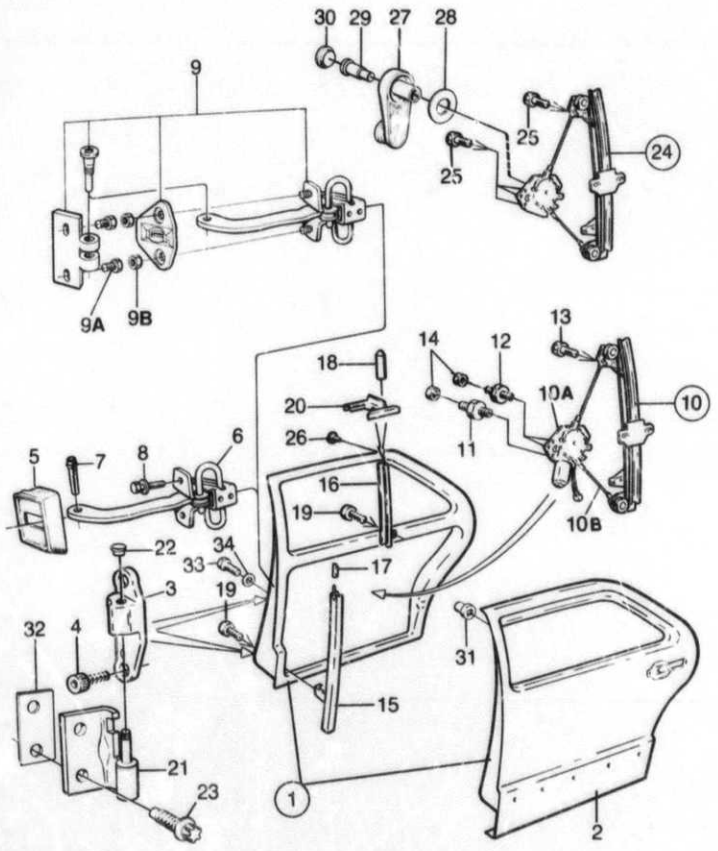

F4335 CAC90

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460	21	69 60 793		LH	2	Hinge	Gångjärn	4
0470	21	69 60 785		RH	2	Hinge	Gångjärn	4
0480	22	92 59 938			4	Plug	Plugg	5
0490	23	73 98 761			8	Screw	Skruv	5
0500	24	69 93 059		LH	1	Window lift	Fönsterhiss	5
0510	24	69 93 042		RH	1	Window lift	Fönsterhiss	5
0520	25	79 69 223			12	Screw	Skruv	5
0530	26	69 30 572			2	Plug	Plugg	5
0540	27	95 34 322			2	Crank	Vev	4
0550	28	97 59 671			2	Washer	Bricka	5
0560	28A	79 69 967			2	Washer	Bricka	5
0570	29	98 35 737			2	Screw	Skruv	5
0580	30	95 34 355			2	Cover	Lock	4
0590	31	92 58 807			20	Bolt	Bult	5
0600	32	92 79 514			X	Spacer	Mellanlägg	3
0610	33	79 72 466			4	Screw	Skruv	5
0620	34	80 29 969			4	Washer	Bricka	5
0630		82 84 085		LH	1	Hinge kit	Gångjärnssats	5
0640				See page 8A-159, 5-G16				
0650		82 84 077		RH	1	Hinge kit	Gångjärnssats	5
0660				See page 8A-159, 5-G16				
0670		85 47 895		42) I	1	Window lift	Fönsterhiss	5
0680				See page 8A-155, 5-G12				
0690		85 47 390		3,42) I	1	Cable harness	Ledningsnät	5
0700				See page 8A-159, 5-G16				

3. Rear Bakre
42. Electrically operated Elektriskt manövrerad

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C10

Door lock
Front door

Dörrlås
Framdörr

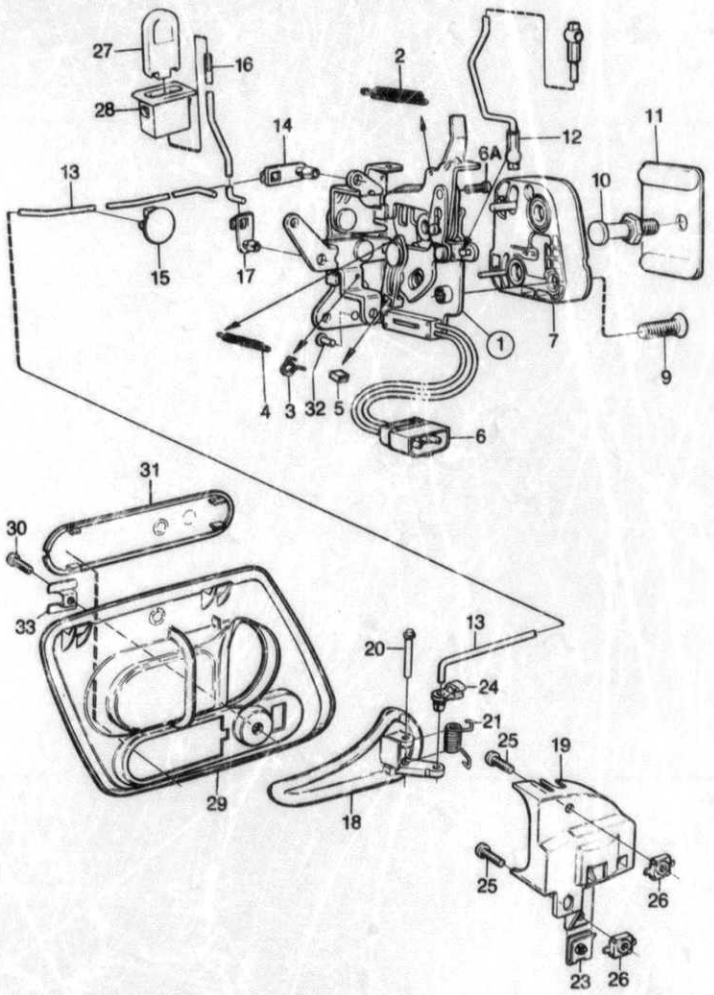

F2710 CAC90

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 53 519*		54,152) LH NLS - USE 4093050	1	Door lock	Dörrlås	4
0020	1	40 93 050		55,152) LH	1	Door lock	Dörrlås	4
0030	1	*92 53 527*		54,152) RH NLS - USE 4093308	1	Door lock	Dörrlås	4
0040	1	40 93 308		55,152) RH	1	Door lock	Dörrlås	4
0050	1	*92 53 535*		54,152) LH FOR RHD, NLS - USE 4093316	1	Door lock	Dörrlås	4
0060	1	40 93 316		55,152) LH FOR RHD,	1	Door lock	Dörrlås	4
0070	1	*92 53 501*		54,152) RH FOR RHD, NLS - USE 4093043	1	Door lock	Dörrlås	4
0080	1	40 93 043		55,152) RH FOR RHD,	1	Door lock	Dörrlås	4
0090	2	92 57 060			2	.Spring	.Fjäder	5
0100	3	92 57 171		LH	1	.Spring	.Fjäder	5
0110	3	92 57 163		RH	1	.Spring	.Fjäder	5
0120	4	92 63 401			2	.Spring	.Fjäder	5
0130	5	95 08 011			2	.Magnet	.Magnet	4
0140	6	95 05 454			2	.Contact	.Kontakt	3
0150	6A	80 59 214			2	Screw	Skruv	5
0160	7	69 48 970		153) LH	1	Door lock	Dörrlås	4
0170	7	69 48 962		153) RH	1	Door lock	Dörrlås	4
0180	9	79 82 184			6	Screw	Skruv	5
0200	10	69 47 824			2	Pin	Tapp	5
0210	11	69 91 012		-1990	2	Spacer	Distans	6
0220	11	42 51 518		1991-	2	Spacer	Distans	6
0230	12	92 79 340		LH	1	Rod	Stång	5
0240	12	92 79 332		RH	1	Rod	Stång	5
0250	13	92 62 031		LH	1	Rod	Stång	5
0260	13	92 62 023		RH	1	Rod	Stång	5
0270	14	84 53 755			2	Clip	Clips	5
0280	15	92 63 583		-1991	2	Clip	Clips	5
0290	15	43 04 663		1992-	2	Clip	Clips	5
0300	16	40 89 975		LH	1	Rod	Stång	5
0310	16	40 89 967		RH	1	Rod	Stång	5
0320	17	84 53 755			2	Clip	Clips	5
0330	18	97 54 763		LH	1	Handle	Handtag	5
0340	18	97 54 755		RH	1	Handle	Handtag	5
0350	19	97 69 118		LH	1	Bracket	Konsol	6
0360	19	97 69 100		RH	1	Bracket	Konsol	6
0370	20	97 76 139			2	Rivet	Nit	5
0380	21	97 76 188		LH	1	Return spring	Returfjäder	5
0390	21	97 76 105		RH	1	Return spring	Returfjäder	5
0400	23	97 76 121			2	Nut	Mutter	3
0410	24	97 82 566			2	Clamp	Klämma	5
0420	25	80 59 396			4	Screw	Skruv	5
0430	26	79 74 231			4	Cage nut	Korgmutter	5
0440	27	40 37 735			2	Lock button	Låsknapp	5
0450	28	97 62 048		-1991	2	Bushing	Bussning	4
0460	28	42 69 957		1992-	2	Bushing	Bussning	4
0470	29	95 78 808		LH	1	Attaching plate	Fästplatta	6
0480	29	95 78 790		RH	1	Attaching plate	Fästplatta	6
0490	30	79 65 684			2	Screw	Skruv	6
0500	31	97 58 186		EM	1	Cover washer	Täckbricka	5
0510	31	97 58 186			2	Cover washer	Täckbricka	5
0520	32	95 08 094			4	Rivet	Nit	5
0530	33	95 78 386			2	Washer	Bricka	6

54. Ch. --L1000077, --L2000045, --L8000010
55. Ch. L1000078--, L2000046--, L8000011--
152. Inner Inre
153. Outer Yttre

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02


8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-B16
Doors, trunk lid 5-C02
External details, glass, sealings 5-D08
Bumpers and touch-up paint 5-F12
Complete sets 5-G08

5-C12

Door lock
Rear door

Dörrlås
Bakdörr

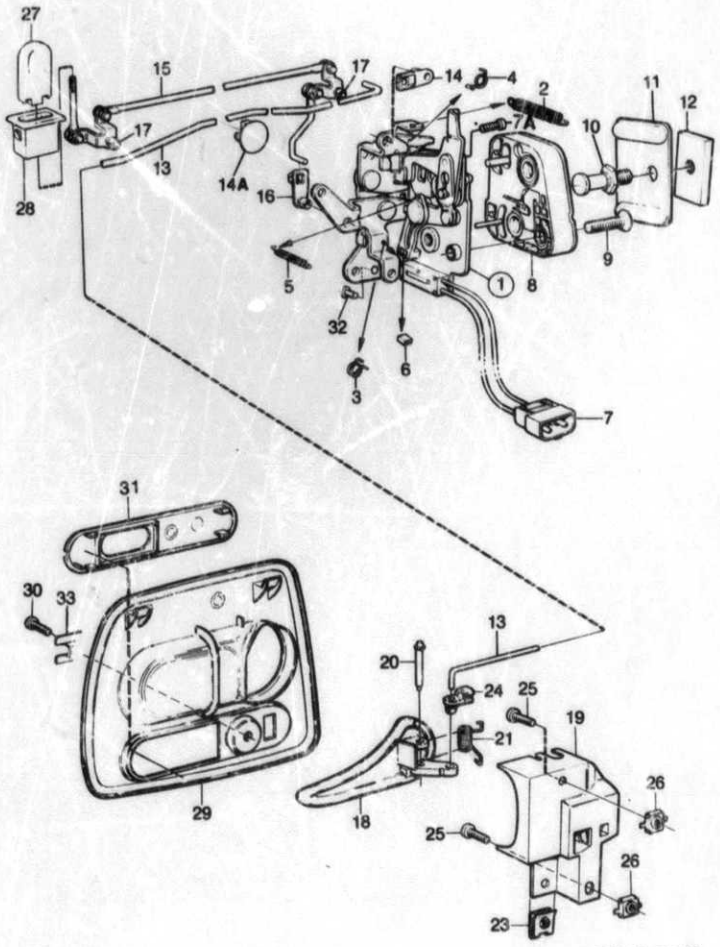

F2711 CAC90

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 56 429		54,152) LH	1	Door lock	Dörrlås	4
0020	1	69 43 476		55,152) LH	1	Door lock	Dörrlås	4
0030	1	69 56 411		54,152) RH	1	Door lock	Dörrlås	4
0040	1	69 43 468		55,152) RH	1	Door lock	Dörrlås	4
0050	2	92 57 080			2	.Spring	.Fjäder	5
0060	3	92 57 171		LH	1	.Spring	.Fjäder	5
0070	3	92 57 163		RH	1	.Spring	.Fjäder	5
0080	4	92 59 433		LH	1	.Spring	.Fjäder	5
0090	4	92 59 425		RH	1	.Spring	.Fjäder	5
0100	5	92 63 401			2	.Spring	.Fjäder	5
0110	6	95 08 011			2	.Magnet	.Magnet	4
0120	7	95 05 454			2	.Contact	.Kontakt	3
0130	7A	80 59 214			2	Screw	Skruv	5
0140	8	69 48 970		153) LH	1	Door lock	Dörrlås	4
0150	8	69 48 962		153) RH	1	Door lock	Dörrlås	4
0160	9	79 82 184			6	Screw	Skruv	5
0180	10	69 47 824			2	Pin	Tapp	5
0190	11	69 91 012		-1990	2	Spacer	Distans	6
0200	11	42 51 518		1991-	2	Spacer	Distans	6
0210	12	*92 60 183*		-1991 NLS - USE 9085077	2	Plate	Platta	6
0220	12	90 85 077		1992-	2	Plate	Platta	6
0230	13	69 56 676		LH	1	Rod	Stång	5
0240	13	69 56 668		RH	1	Rod	Stång	5
0250	14	84 53 755			2	Clip	Clips	5
0260	14A	92 63 583		-1991	2	Clip	Clips	5
0270	14A	43 04 663		1992-	2	Clip	Clips	5
0280	15	40 89 652		LH	1	Latch	Regel	5
0290	15	40 89 645		RH	1	Latch	Regel	5
0300	16	84 53 755			2	Clip	Clips	5
0310	17	92 66 644			2	Clip	Clips	5
0320	18	97 54 763		LH	1	Handle	Handtag	5
0330	18	97 54 755		RH	1	Handle	Handtag	5
0340	19	97 69 134		LH	1	Bracket	Konsol	6
0350	19	97 69 126		RH	1	Bracket	Konsol	6
0360	20	97 76 139			2	Rivet	Nit	5
0370	21	97 76 188		LH	1	Return spring	Returfjäder	5
0380	21	97 76 105		RH	1	Return spring	Returfjäder	5
0390	23	97 76 121			2	Nut	Mutter	3
0400	24	97 82 566			2	Clamp	Klämma	5
0410	25	80 59 396			4	Screw	Skruv	5
0420	26	79 74 231			4	Cage nut	Korgmutter	5
0430	27	40 37 735			2	Lock button	Låsknapp	5
0440	28	97 62 048		-1991	2	Bushing	Bussning	4
0450	28	42 69 957		1992-	2	Bushing	Bussning	4
0460	29	95 78 824		LH	1	Attaching plate	Fästplatta	6
0470	29	95 78 816		RH	1	Attaching plate	Fästplatta	6
0480	30	79 65 684			2	Screw	Skruv	6
0490	31	97 58 186			2	Cover washer	Täckbricka	5
0500	31	97 67 559		EW	2	Cover	Täcklock	5
0510	32	95 08 094			4	Rivet	Nit	5
0520	33	95 78 386			2	Washer	Bricka	6


54. Ch. --L1000077, --L2000045, --L8000010
55. Ch. L1000078--, L2000046--, L8000011--
152. Inner Inre
153. Outer Yttre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Compiete sets	5-G08

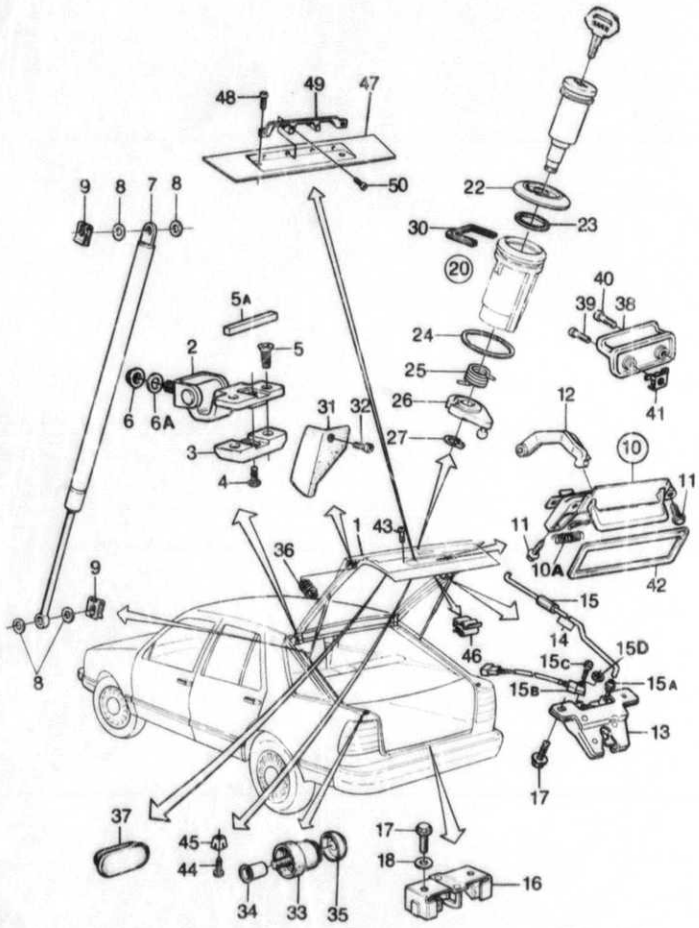

F3704 - CAC90

Doors, trunk lid

5-C14

Trunk door, hinges lock 5D

Dörrar, bagagerumslucka

Bagagerumsdörr, gångjärn lås 5D

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 44 573			1	Trunk lid	Bagagelucka	4
0020	2	69 44 490		LH	1	Hinge	Gångjärn	5
0030	2	69 44 482		RH	1	Hinge	Gångjärn	5
0040	3	69 44 565			1	Plate	Platta	5
0050	4	90 59 545			2	Screw	Skruv	5
0060	5	69 73 119			4	Screw	Skruv	5
0070	5A	69 92 028			2	Spacer	Distans	3
0080	6	73 99 736		-1990	2	Nut	Mutter	5
0090	6	40 87 045		1991	2	Nut	Mutter	5
0100	6	79 67 953		1992-	2	Nut	Mutter	5
0110	6A	41 01 705		1992-	2	Washer	Bricka	5
0120	7	69 56 288			2	Gas spring	Gasfjäder	5
0130	7	69 56 270		52)	2	Gas spring	Gasfjäder	3
0140	8	82 52 363			8	Washer	Bricka	5
0150	9	82 52 553			4	Clip	Clips	5
0160	10	40 91 765			1	Handle	Handtag	5
0170	10A	69 91 855			1	.Tension spring	.Dragfjäder	5
0180	11	*79 73 423*		NLS - USE 7977283	4	Screw	Skruv	5
0190	12	92 60 068			1	Control link	Manöverlänk	5
0200	13	*40 91 682*		202) NLS - USE 4102034	1	Lock	Lås	4
0210	13	41 02 034		203)	1	Lock	Lås	4
0220	14	40 91 690			1	.Control rod	.Manöverstång	5
0230	15	40 91 724			1	..Adjustment screw	..Justerskruv	5
0240	15A	92 56 306			1	.Clip	.Clips	4
0250	15B	40 91 955		202)	1	.Switch	.Brytare	5
0260	15B	41 02 059		203)	1	.Switch	.Brytare	5
0270	15C	*80 59 206*		202) NLS - USE 8059214	1	.Screw	.Skruv	6
0280	15D	42 51 930		203)	2	.Spring nut	.Fjädermutter	5
0290	16	92 52 206			1	End plate	Slutbleck	5
0300	17	79 69 223			4	Screw	Skruv	5
0310	18	79 81 954			2	Washer	Bricka	5
0320	20			See page 8A-075, 5-004	1	Lock	Lås	
0340	22	92 61 579			1	.Cover	.Täcklock	3
0350	23	92 62 163			1	.Seal	.Tätning	4
0360	24	*92 61 595*		103) NLS - USE 4092409	1	.Spacer	.Mellanlägg	4
0370	24	40 92 409		104)	1	.Seal	.Tätning	4
0380	25	92 61 561			1	.Spring	.Fjäder	5
0390	26	92 61 538			1	.Companion flange	.Medbringare	3
0400	27	79 35 992			1	.E-circlip	.Spårryttare	5
0410	30	92 62 486			1	Clip	Clips	5
0420	31	92 64 433		123) LH	1	Protection	Skydd	5
0430	31	41 01 119		124) LH	1	Protection	Skydd	5
0440	31	*92 64 425*		123) RH NLS - USE 4101127	1	Protection	Skydd	5
0450	31	41 01 127		124) RH	1	Protection	Skydd	5
0460	32	80 59 578			2	Screw	Skruv	5
0470	33	92 68 947			2	Support	Stöd	5
0480	34	73 99 710			2	Nut	Mutter	5
0490	35	92 68 921			2	Protecting cap	Skyddshuv	5
0500	36	92 75 744		-1991	2	Buffer	Buffert	5
0510	36	43 04 234		1992-	2	Rubber buffer	Gummibuffert	4
0520	37	73 98 896			2	Plug	Plugg	5
0530	38	93 70 548			1	Handle	Handtag	6
0540	39	84 26 199		-1992	1	Screw	Skruv	5
0545	39	79 70 262		1993	1	Screw	Skruv	5
0560	40	79 70 023			1	Screw	Skruv	5

52. Without spoiler Utan spoiler
103. Ch. --L1009761, --L2007429
104. Ch. L1009762--, L2007430--
123. Ch. --L1016290, --L2011702, --L8001478
124. Ch. L1016291--, L2011703--, L8001479--
202. Ch. --M1016808, --M2011155
203. Ch. M1016809--, M2011156--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C16

Trunk door, hinges lock 5D

Bagagerumsdörr, gångjärn lås 5D

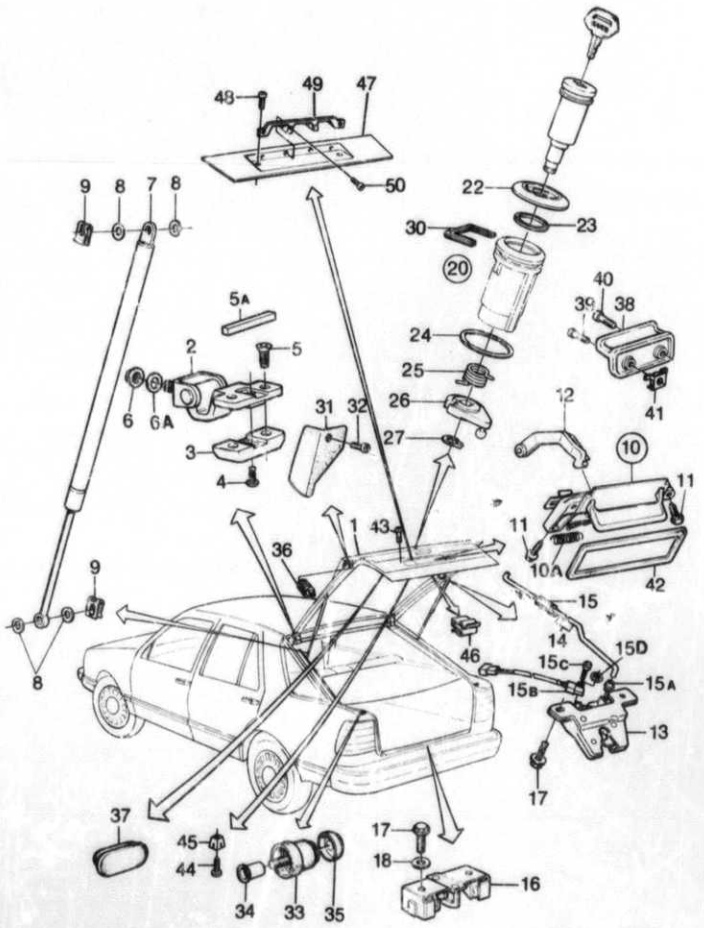

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	41	79 74 231			1	Cage nut	Korgmutter	5
0590	42	69 56 189			1	Seal	Tätning	4
0600	43	92 21 987		US, CA, JP	2	Plug	Plugg	5
0610	44	79 70 536			1	Screw	Skruv	6
0620	45	79 75 261			1	Nut	Mutter	5
0630	46	40 11 698		-1990	3	Clamp	Klämma	4
0640	47	86 59 328		T16SA	1	Decor panel	Dekorpanel	3
0650	47	86 59 310		T16SA, US, JP	1	Decor panel	Dekorpanel	3
0660	48	80 59 578		T16SA	2	Screw	Skruv	5
0670	49	86 62 058		135) T16SA	1	Protection	Skydd	5
0680	49	86 69 244		136) T16SA	1	Protection	Skydd	5
0690	50	*79 78 380*		T16SA NLS - USE 8029944, 8059420	2	Screw	Skruv	5
0890								

135. Ch. -L1017863
136. Ch. L1017864-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G03

5-C18

Trunk lid, hinges, lock
4D

Baklucka, gångjärn, lås
4D

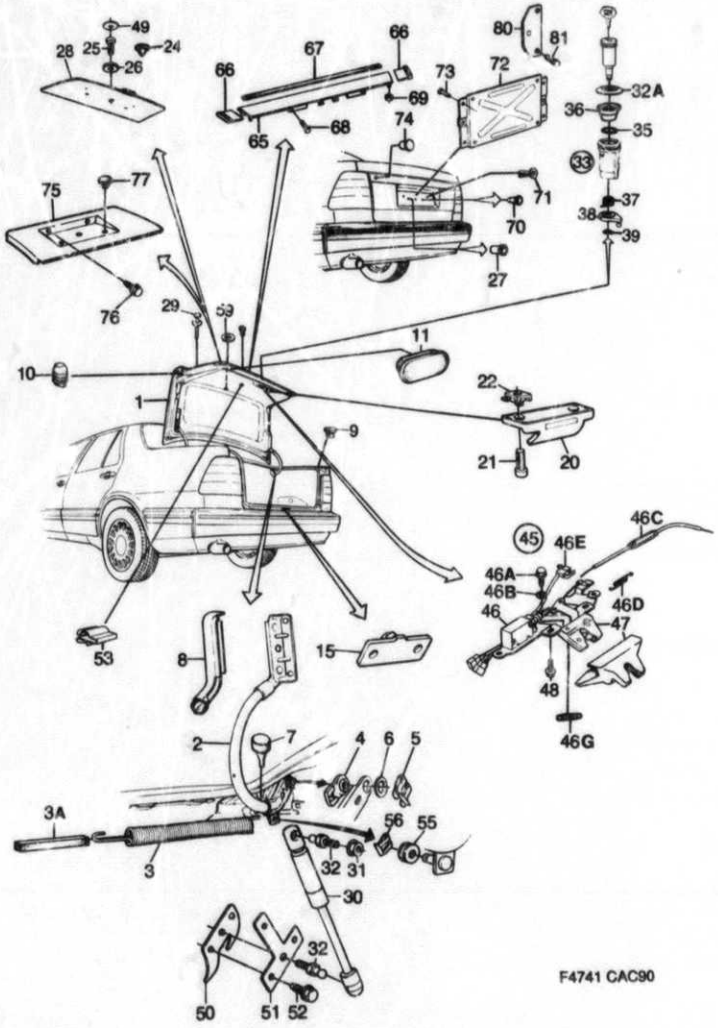

0825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 06 094		-1990	1	Trunk lid	Bagagelucka	4
0020	1	41 00 582		1991-	1	Trunk lid	Bagagelucka	4
0030	2	69 63 995		LH	1	Hinge	Gångjärn	5
0040	2	69 63 953		RH	1	Hinge	Gångjärn	5
0050	3	69 61 866			2	Spring	Fjäder	5
0060	3A	43 05 330			2	Absorber	Dämpare	5
0070	4	92 25 475			2	Bushing	Bussning	3
0080	5	82 57 750			2	Locking	Låsning	5
0090	6	69 73 317			2	Washer	Bricka	5
0100	7	69 45 497			2	Buffer	Buffert	5
0110	8	69 62 534		LH	1	Cover	Avtäckning	5
0120	8	69 62 526		RH	1	Cover	Avtäckning	5
0130	9	69 74 000			1	Protecting moulding	Skyddslist	5
0140	10	69 61 874		-1991	2	Buffer	Buffert	5
0150	10	43 04 234		1992-	2	Rubber buffer	Gummibuffert	4
0155	11	73 98 886			2	Plug	Plugg	5
0160	15	69 91 533			1	End plate	Slutbleck	5
0170	20	95 74 302			1	Handle	Handtag	5
0180	21	84 26 199		-1992	2	Screw	Skruv	5
0185	21	79 70 262		1993	2	Screw	Skruv	5
0190	22	97 74 456			2	Nut	Mutter	5
0200	24	73 99 447		-1990	4	Plastic plug	Plastplugg	5
0210	24	73 99 447		-1990, US	3	Plastic plug	Plastplugg	5
0220	25	79 77 010		-1990, NOT US	1	Screw	Skruv	5
0230	25	79 77 010		1991-, T16S	1	Screw	Skruv	5
0240	26	69 62 567		-1990, NOT US	1	Washer kit	Bricksats	5
0250	26	69 62 567		1991-, T16S	1	Washer kit	Bricksats	5
0260	27	75 53 308			3	Nut	Mutter	5
0270	27	75 53 308		US	4	Nut	Mutter	5
0280	28	40 05 609		-1990	1	Cover	Avtäckning	3
0290	28	40 05 617		-1990, US	1	Cover	Avtäckning	3
0300	29	92 79 621		-1990	10	Rivet	Nit	5
0310	29	92 79 621		1991-, T16S	6	Rivet	Nit	5
0320	30	69 76 369			1	Spring	Fjäder	3
0330	31	79 67 953			1	Nut	Mutter	5
0340	32	69 51 974			2	Ballpin	Kultapp	5
0350	32A	40 94 462		-1990	1	Sealing collar	Tätningskrage	4
0360	32A	40 94 405		1991-	1	Sealing collar	Tätningskrage	4
0370	33			See page 8A-075, 5-D04		Lock	Lås	
0390	35	92 62 163			1	.Seal	.Tätning	4
0400	36	40 10 682		-1990	1	.Seal	.Tätning	4
0410	37	40 10 617			1	.Spring	.Fjäder	5
0420	38	69 92 929			1	.Companion flange	.Medbringare	3
0430	39	*79 36 016*		NLS - USE 8123473	1	.E-circlip	.Spärryttare	5
0440	45	*40 10 666*		194) NLS - USE 4251922	1	Lock	Lås	4
0450	45	42 51 922		195) -1991	1	Lock	Lås	4
0460	45	42 51 799		1992	1	Lock	Lås	4
0465	45	43 04 564		1993	1	Lock	Lås	4
0470	46	40 10 872		194)	1	.Electric motor	.Elmotor	4
0480	46	42 51 914		195) -1991	1	.Electric motor	.Elmotor	4
0490	46	42 51 658		1992	1	.Electric motor	.Elmotor	4
0495	46	43 04 242		1993	1	.Electric motor	.Elmotor	4
0500	46A	*80 59 206*		194) NLS - USE 8059214	2	.Screw	.Skruv	6
0510	46B	42 51 930		195)	4	.Spring nut	.Fjädermutter	5
0520	46C	40 10 674		194)	1	.Cable	.Wire	5
0530	46C	42 93 213		195)	1	.Cable	.Wire	5
0540	46D	40 10 963			1	.Spring	.Fjäder	5
0550	46E	40 13 140		194)	1	.Switch	.Strömställare	3
0560	46E	*42 51 906*		195) -1991 NLS - USE 8285215	1	.Switch	.Strömställare	3
0570	46E	42 51 666		1992-	1	.Switch	.Strömställare	3

194. Ch. --M1017203, --M2011661
195. Ch. M1017204--, M2011662--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-C20

Trunk lid, hinges, lock
4D

Baklucka, gångjärn, lås
4D

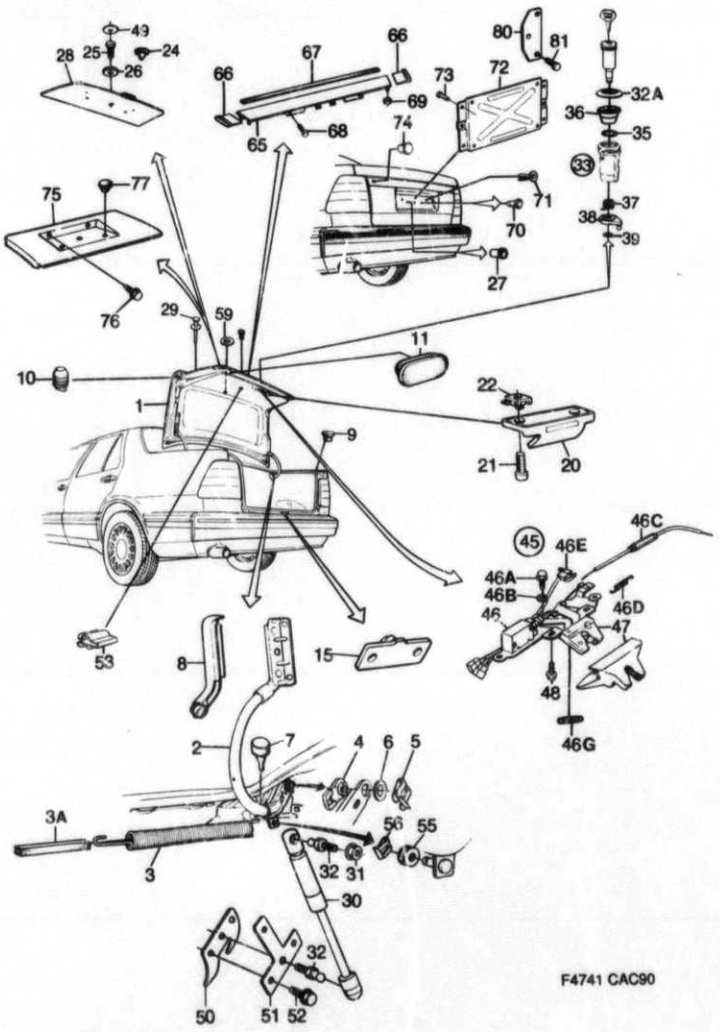

0825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	46G	40 88 209			1	Spring	Fjäder	5
0600	47	40 10 260			1	Protection	Skydd	6
0610	48	79 78 109			4	Screw	Skruv	5
0620	49	69 75 403		-1990, NOT CA, JP	1	Absorber	Dämpare	3
0630	49	69 75 403		1991-, T16S	1	Absorber	Dämpare	3
0640	50	69 45 711			1	Attaching plate	Fästplåt	5
0650	51	69 45 760			1	Washer	Bricka	3
0660	52	79 75 451			2	Screw	Skruv	5
0670	53	71 08 491		-1991	2	Clamp	Klammer	5
0680	55	40 06 557			2	Bushing	Bussning	5
0690	56	82 52 553			2	Clip	Clips	5
0700	59	40 05 153		-1990	2	Washer	Bricka	5
0710	61	*79 73 423*		-1990, NOT US NLS - USE 7977283	2	Screw	Skruv	5
0720								
0730	65	40 08 454		1991-	1	Shield plate	Avskärmningsplåt	5
0740	66	40 09 577		1991-, LH	1	End piece	Ändstycke	3
0750	66	40 09 569		1991-, RH	1	End piece	Ändstycke	3
0760	67	92 52 057		1991-	1	Sealing strip	Tätningslist	4
0770	68	79 78 109		1991-	4	Screw	Skruv	5
0780	69	79 71 658		1991-	2	Nut	Mutter	5
0790	70	82 79 044		1991-	5	Plastic plug	Plastplugg	5
0800	71	92 21 987		1991-	2	Plug	Plugg	5
0810	72	92 72 139		1991-, US, CA, JP	1	Bracket	Hållare	5
0820	73	80 59 578		1991-, US, CA, JP	2	Screw	Skruv	5
0830	74	41 00 905		1991-	5	Protecting plug	Skyddsplugg	5
0840								
0850	75	86 69 319		1991-, T16S	1	Decor panel	Dekorpanel	3
0860	75	43 80 283		1991-, US	1	Decor panel	Dekorpanel	3
0870	76	80 59 578		1991-, T16S	2	Screw	Skruv	5
0880	77	92 67 881		1991-, T16S	2	Plug	Plugg	5
0890								
0900	80	86 69 913		1992-, US, CA	2	Bracket	Fäste	5
0910	81	79 77 010		1992-, US, CA	2	Screw	Skruv	5
0920								
0930		92 40 086		See page 8A-163, 5-G20 US, CA, JP	X	Mounting kit registration plate	Monteringssats registreringsskylt	5
0940								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

Doors, trunk lid

5-C22 Trunk door, hinges lock 5CS

Dörrar, bagagerumslucka

Bagagerumsdörr, gångjärn lås 5CS

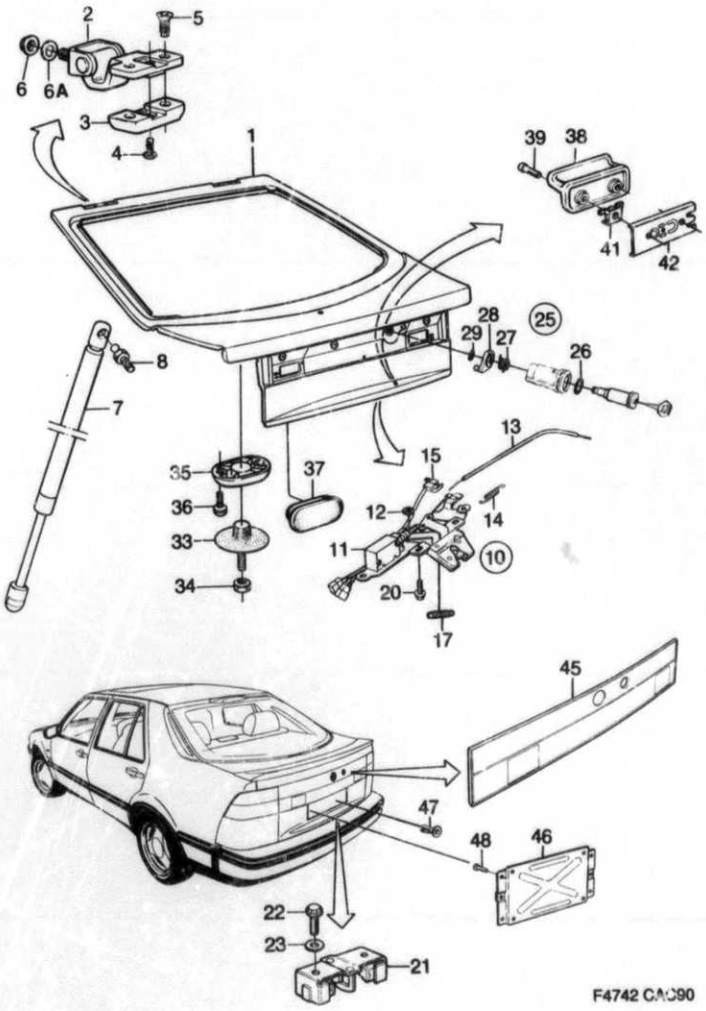

0830	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 049			1	Trunk lid	Bagagelucka	4
0020	2	69 44 490		LH	1	Hinge	Gångjärn	5
0030	2	69 44 482		RH	1	Hinge	Gångjärn	5
0040	3	69 44 565			1	Plate	Platta	5
0050	4	80 59 545			2	Screw	Skruv	5
0060	5	90 88 592			4	Screw	Skruv	5
0070	6	79 67 953			2	Nut	Mutter	5
0080	6A	41 01 705			2	Washer	Bricka	5
0090								
0100	7	40 06 060		269) US, CA, SE, EU, GB	2	Spring	Fjäder	3
0110	7	43 06 411		193) US, CA, SE, EU, GB	2	Gas spring	Gasfjäder	3
0120	7	40 06 078		269) LA, ME, PA, AU	2	Spring	Fjäder	3
0130	7	40 06 060		193) LA, ME, PA, AU	2	Spring	Fjäder	3
0140	8	69 51 974			4	Ballpin	Kultapp	5
0160								
0170	10	90 85 879		1992	1	Lock	Lås	4
0180	10	43 04 846		1993	1	Lock	Lås	4
0190	11	42 51 658		1992	1	.Electric motor	.Elmotor	4
0200	11	43 04 242		1993	1	.Electric motor	.Elmotor	4
0210	12	42 51 930			4	.Spring nut	.Fjädermutter	5
0220	13	90 85 861			1	.Cable	.Wire	5
0230	14	40 10 963			1	.Spring	.Fjäder	5
0240	15	42 51 674			1	.Switch	.Strömställare	3
0250	17	40 88 209			1	.Spring	.Fjäder	5
0260								
0270	20	79 78 109		-1992	4	Screw	Skruv	5
0280	20	79 78 109		1993	3	Screw	Skruv	5
0290	21	92 52 206			1	End plate	Slutbleck	5
0300	22	79 69 223			2	Screw	Skruv	5
0310	23	79 81 954			2	Washer	Bricka	5
0320								
0330	25			See page 8A-075, 5-D04		Lock	Lås	
0340	26	92 62 163			1	.Seal	.Tätning	4
0350	27	40 10 617			1	.Spring	.Fjäder	5
0360	28	90 86 141			1	.Companion flange	.Medbringare	3
0370	29	*79 36 016*		NLS - USE 8123473	1	.E-circlip	.Spårryttare	5
0380								
0390	33	41 00 871			2	Support	Stöd	5
0400	34	40 87 045			2	Nut	Mutter	5
0410	35	40 99 099			2	Support	Stöd	5
0420	36	79 78 422			4	Screw	Skruv	5
0430	37	73 98 886			2	Plug	Plugg	5
0440								
0450	38	96 70 548			1	Handle	Handtag	6
0460	39	84 26 199		-1992	2	Screw	Skruv	5
0470	39	79 70 262		1993	2	Screw	Skruv	5
0480	41	97 74 456		-1992	2	Nut	Mutter	5
0490	42	42 70 948		1993	1	Bracket	Fäste	5
0500								
0510	45			See page 3A-065, 2-C18	1	Decor panel	Dekorpanel	
0520	46	90 87 297		CA	1	Bracket	Hållare	5
0530	47	92 21 987		CA	2	Plug	Plugg	5
0540	48	80 59 578		CA	2	Screw	Skruv	5

193. For cars with rear window wiper. För bilar med bakrutetorkare.
269. For cars without rear window wiper. För bilar utan bakrutetorkare.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, interna!	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G09

5-C24

Outside handle
Ytterhandtag

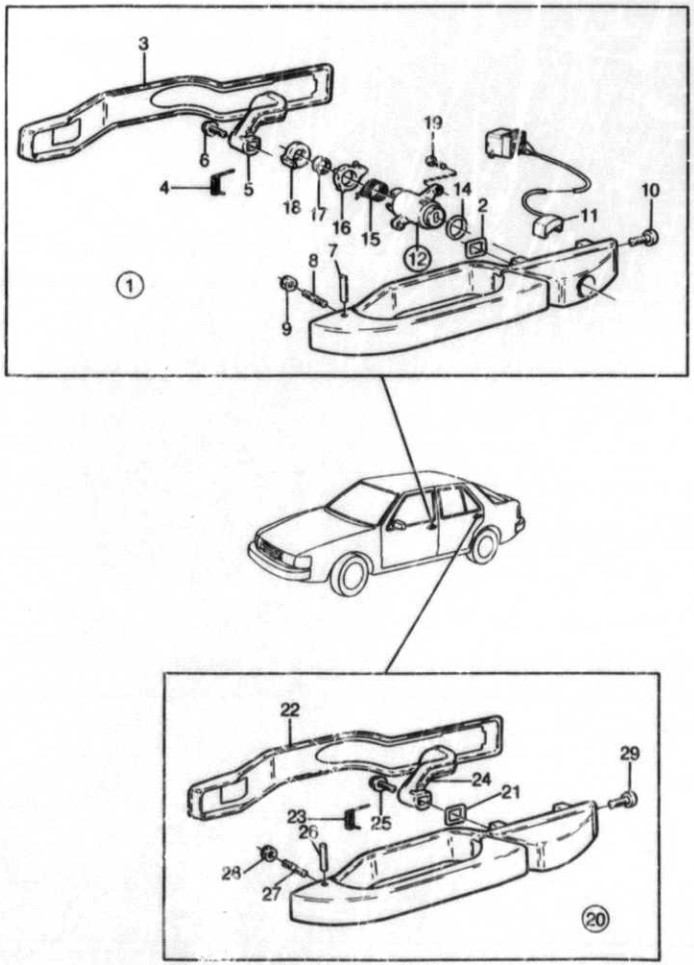

F4620 CAC90

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 54 119*		2,54,110) LH NLS - USE 4092490	1	Handle	Handtag	5
0020	1	40 92 490		2,55,110) LH	1	Handle	Handtag	5
0030	1	*69 54 135*		2,54) LH, CHROME NLS - USE 4092516	1	Handle	Handtag	5
0040	1	40 92 516		2,55) LH, CHROME	1	Handle	Handtag	5
0050	1	*69 54 101*		2,54,110) RH NLS - USE 4092482	1	Handle	Handtag	5
0060	1	40 92 482		2,55,110) RH	1	Handle	Handtag	5
0070	1	*69 54 127*		2,54) RH, CHROME NLS - USE 4092508	1	Handle	Handtag	5
0080	1	40 92 508		2,55) RH, CHROME	1	Handle	Handtag	5
0090	2	92 60 266			2	.Absorber	.Dämpare	4
0100	3	69 92 614			2	.Seal	.Tätning	4
0110	4	92 60 290		-1990, LH	1	.Spring	.Fjäder	5
0120	4	92 60 282		-1990, RH	1	.Spring	.Fjäder	5
0130	5	*92 60 233*		54) LH NLS - USE 4096061	1	.Arm	.Arm	5
0140	5	40 96 061		55) LH	1	.Arm	.Arm	5
0150	5	*92 60 225*		54) RH NLS - USE 4096053	1	.Arm	.Arm	5
0160	5	40 96 053		55) RH	1	.Arm	.Arm	5
0170	6	92 60 530		54)	1	.Screw	.Skruv	5
0180	6	69 93 547		55)	1	.Screw	.Skruv	5
0190	7	92 60 514		-1990	2	.Pin	.Pinne	4
0200	8	92 60 506		-1990	2	.Stud	.Pinnskruv	5
0210	9	79 71 658			2	Nut	Mutter	5
0220	10	79 75 196			2	Screw	Skruv	5
0230	11	95 66 159		LH	1	Switch	Brytare	9
0235	11	40 88 852		1993, RH	1	Switch	Brytare	9
0240	12			See page 8A-075, 5-D04		Lock	Lås	
0260	14	92 62 163			2	.Seal	.Tätning	4
0270	15	92 62 387			2	.Spring	.Fjäder	5
0280	16	92 62 403			2	.Companion flange	.Medbringare	3
0290	17	92 62 361			2	.Lock ring	.Säkringsring	5
0300	18	92 62 395			2	.Link stay	.Länkstag	5
0310	19	92 62 973			4	Screw	Skruv	5
0320								
0330								
0340	20	*69 54 077*		3,54,110) LH NLS - USE 6943450	1	Handle	Handtag	5
0350	20	69 43 450		3,55,110) LH	1	Handle	Handtag	5
0360	20	69 54 093		3,54) LH, CHROME	1	Handle	Handtag	5
0370	20	69 43 435		3,55) LH, CHROME	1	Handle	Handtag	5
0380	20	*69 54 069*		3,54,110) RH NLS - USE 6943443	1	Handle	Handtag	5
0390	20	69 43 443		3,55,110) RH	1	Handle	Handtag	5
0400	20	69 54 085		3,54) RH, CHROME	1	Handle	Handtag	5
0410	20	69 43 427		3,55) RH, CHROME	1	Handle	Handtag	5
0420	21	92 60 266			2	.Absorber	.Dämpare	4
0430	22	69 92 614			2	.Seal	.Tätning	4
0440	23	92 60 290		-1990, LH	1	.Spring	.Fjäder	5
0450	23	92 60 282		-1990, RH	1	.Spring	.Fjäder	5
0460	24	92 60 373		54) LH	1	.Arm	.Arm	5
0470	24	40 96 087		55) LH	1	.Arm	.Arm	5
0480	24	92 60 365		54) RH	1	.Arm	.Arm	5
0490	24	40 96 079		55) RH	1	.Arm	.Arm	5
0500	25	92 60 530		54)	1	.Screw	.Skruv	5
0510	25	69 93 547		55)	1	.Screw	.Skruv	5
0520	26	92 60 514		-1990	2	.Pin	.Pinne	4

2. Front Främre
3. Rear Bakre
54. Ch. -L1000077, -L2000045, -L8000010
55. Ch. L1000078-, L2000046-, L8K0011-
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-S02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G04

5-D02

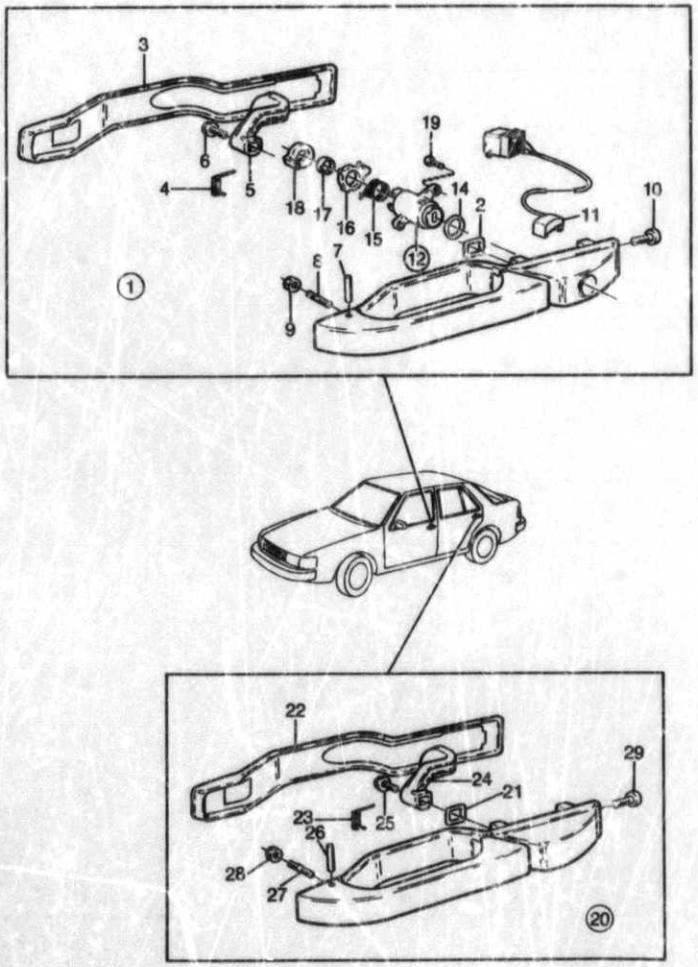

F4620 CAC90


0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	27	92 60 506		-1990	2	Stud	Pinnskruv	5
0540	28	79 71 658			2	Nut	Mutter	5
0550	29	79 75 196			2	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

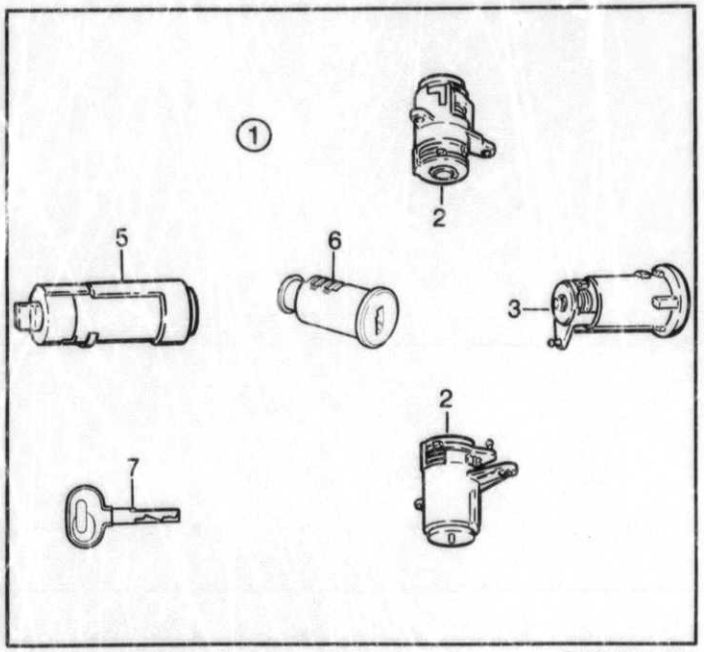

F5896 CAC90

Doors, trunk lid

5-D04 Lock / Lock cylinder set

Dörrar, bagagerumslucka

Lås / Låscylindersats

0900	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	97 46 389		5D, DOOR LH AND RH, IGNITION AND TRUNK DOOR	1	Lock kit	Låssats	5
0040	1	82 84 416		-1990, 4D, DOOR LH AND RH, IGNITION AND TRUNK LID	1	Lock kit	Låssats	5
0070	1	82 84 424		1991-, 4D, DOOR LH AND RH, IGNITION AND TRUNK LID	1	Lock kit	Låssats	5
0100	1	82 85 306		1991-, 5CS, DOOR LH AND RH, IGNITION AND TRUNK DOOR	1	Lock kit	Låssats	5
0130	1	82 84 242		53) 5D, DOOR LH AND RH, IGNITION AND TRUNK DOOR	1	Lock kit	Låssats	5
0170		97 46 397		DOOR, LH, WITH 2 KEYS	1	.Door mechanism	.Dörrmekanism	5
0180		97 46 405		DOOR, RH, WITH 2 KEYS	1	.Door mechanism	.Dörrmekanism	5
0200		97 46 439		5D, TRUNKDOOR, WITH 2 KEYS	1	.Lock	.Lås	4
0220		82 84 259		53) 5D, TRUNKDOOR, WITH 2 KEYS	1	.Lock	.Lås	4
0260		82 84 234		-1990, 4D, TRUNKLID, WITH 2 KEYS	1	.Lock	.Lås	4
0290		82 84 432		1991-, 4D, TRUNKLID, WITH 2 KEYS	1	.Lock	.Lås	4
0320		82 84 911		5CS, TRUNKDOOR, WITH 2 KEYS	1	.Lock	.Lås	4
0350		97 46 454		IGNITION, WITH 2 KEYS	1	.Lock cylinder	.Låscylinder	5
0360		92 61 108		GLOVE COMPARTMENT WITH 2 KEYS	1	.Glove compartment lock	.Handskfackslås	3
0410				41)		Lock	Lås	
0450	2	69 63 300		DOOR, LH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0470	2	69 63 318		DOOR, RH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0490	3	92 61 090		5D, TRUNKDOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0502	3	92 61 092		53) 5D, TRUNKDOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0510	3	69 92 960		-1990, 4D, TRUNK LID, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0530	3	40 94 256		1991-, 4D, TRUNK LID, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0550	3	90 86 133		1991-, 5CS, TRUNK DOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0570	5	89 60 221		IGNITION, STATE KEY CODE	X	Lock cylinder	Låscylinder	5

41. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nyckel till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.
53. Without central lock Utan centrallås

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-D06

Lock
Lock cylinder set

Lås
Låscylindersats

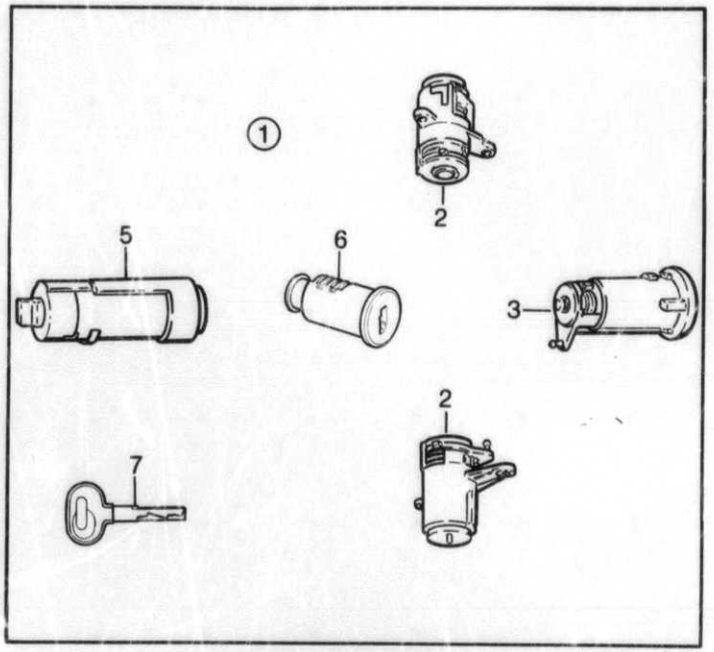

F5896 CAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0900								
0580								
0590	6	82 84 192		GLOVE COMPARTMENT	X	Glove compartment lock	Handskfackslås	3
0600				STATE KEY CODE				
0630								
0640	7	97 46 603		STATE KEY CODE	X	Key	Nyckel	5
0650	7	96 98 077		BLANK	X	Key	Nyckel	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, seelings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G00

5-D08

External details, glass, sealings
Emblem

Utvändiga detaljer, glas, tätningslister
Emblem

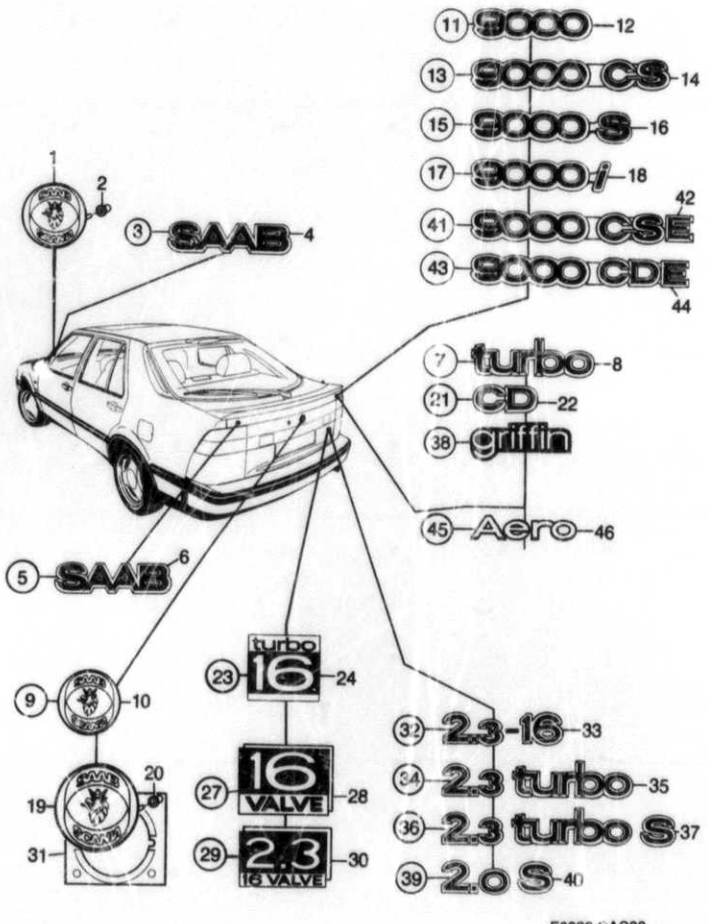

F6226 CAC93


0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 11 895		"SAAB-SCANIA"	1	Emblem	Emblem	3
0020	2	69 15 706			2	Bushing	Bussning	3
0030	3	92 65 158		-1992, "SAAB"	2	Emblem	Emblem	3
0040	4	92 65 174			2	.Decal tape	.Emblemtejp	3
0050								
0060	5	92 65 018		"SAAB", 5D, 5CS	1	Emblem	Emblem	3
0070	5	69 63 375		"SAAB", 4D	1	Emblem	Emblem	3
0100	6	92 65 034			1	.Decal tape	.Emblemtejp	3
0130								
0140	7	92 65 059		"TURBO"	1	Emblem	Emblem	3
0150	7	92 65 059		-1992, "TURBO", 4D, US	1	Emblem	Emblem	3
0160	8	92 65 075			1	.Decal tape	.Emblemtejp	3
0170	9	69 63 367		"SAAB-SCANIA"	1	Emblem	Emblem	3
0180	10	69 18 031			1	.Decal tape	.Emblemtejp	3
0190								
0200	11	92 64 987		"9000", 5D	1	Emblem	Emblem	3
0210	11	69 63 243		"9000", 4D	1	Emblem	Emblem	3
0220	11	92 64 987		"9000",5CS AERO	1	Emblem	Emblem	3
0250	12	92 65 000			1	.Decal tape	.Emblemtejp	3
0280								
0290	13	42 50 676		1992-,"9000CS",5CS	1	Emblem	Emblem	3
0300	14	42 50 692		1992-	1	.Decal tape	.Emblemtejp	3
0310	15	92 75 017		"9000S", US, CA	1	Emblem	Emblem	4
0320	15	40 88 415		-1990, "9000S", US, 4D	1	Emblem	Emblem	3
0330	16	92 75 033		US, CA	1	.Decal tape	.Emblemtejp	3
0340	17	92 64 805		-1990, "9000i",	1	Emblem	Emblem	3
0350	18	92 64 821		-1990	1	.Decal tape	.Emblemtejp	3
0360	19	40 94 777		"SAAB-SCANIA"4D	1	Emblem	Emblem	3
0370	20	69 15 706		4D	2	Bushing	Bussning	3
0380								
0390	21	69 91 673		"CD"4D	1	Emblem	Emblem	3
0410	22	69 48 081		4D	1	.Decal tape	.Emblemtejp	3
0430								
0440	23	69 43 583		-1990, "TURBO 16"4D	1	Emblem	Emblem	3
0450	24	69 43 575		-1990, 4D	1	.Decal tape	.Emblemtejp	3
0460	27	69 92 903		-1990, "16 VALVE"	1	Emblem	Emblem	3
0470	28	69 92 895		-1990	1	.Decal tape	.Emblemtejp	3
0480	29	40 88 936		"2,3 - 16 VALVE"	1	Emblem	Emblem	3
0490	30	40 88 910			1	.Decal tape	.Emblemtejp	3
0500	31	40 96 397		4D	1	Decal tape	Emblemtejp	3
0510	32	42 54 025		1991-1992, "2,3-16"	1	Emblem	Emblem	9
0520	33	42 54 041			1	.Decal tape	.Emblemtejp	3
0530	34	42 54 058		1991-1992, "2,3 TURBO"	1	Emblem	Emblem	9
0540	34	43 44 917		-1992,"2,3 TURBO", 5CS	1	Emblem	Emblem	3
0550	35	42 54 074			1	.Decal tape	.Emblemtejp	3
0560	36	42 54 082		1991-92, "2.3 TURBO S"	1	Emblem	Emblem	9
0570	37	42 54 108			1	.Decal tape	.Emblemtejp	3
0580	38	43 80 770		-1992, "GRIFFIN" ,US	1	Emblem	Emblem	3
0590	38	43 80 788		-1993, "GRIFFIN" ,EU	1	Emblem	Emblem	3
0620	39	43 80 549		-1992, "2,0 S"	1	Emblem	Emblem	3
0630	40	43 80 531			1	.Tape	.Tejp	3
0640	41	44 35 392		1993, "9000CSE", 5CS	1	Emblem	Emblem	3
0650	42	44 35 418			1	.Tape	.Tejp	3
0660	43	44 35 368		1993, "9000CDE", 4D	1	Emblem	Emblem	3
0670	44	44 35 384			1	.Tape	.Tejp	3
0680	45	44 35 467		"AERO"	1	Emblem	Emblem	3
0700	46	44 35 731			1	.Tape	.Tejp	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

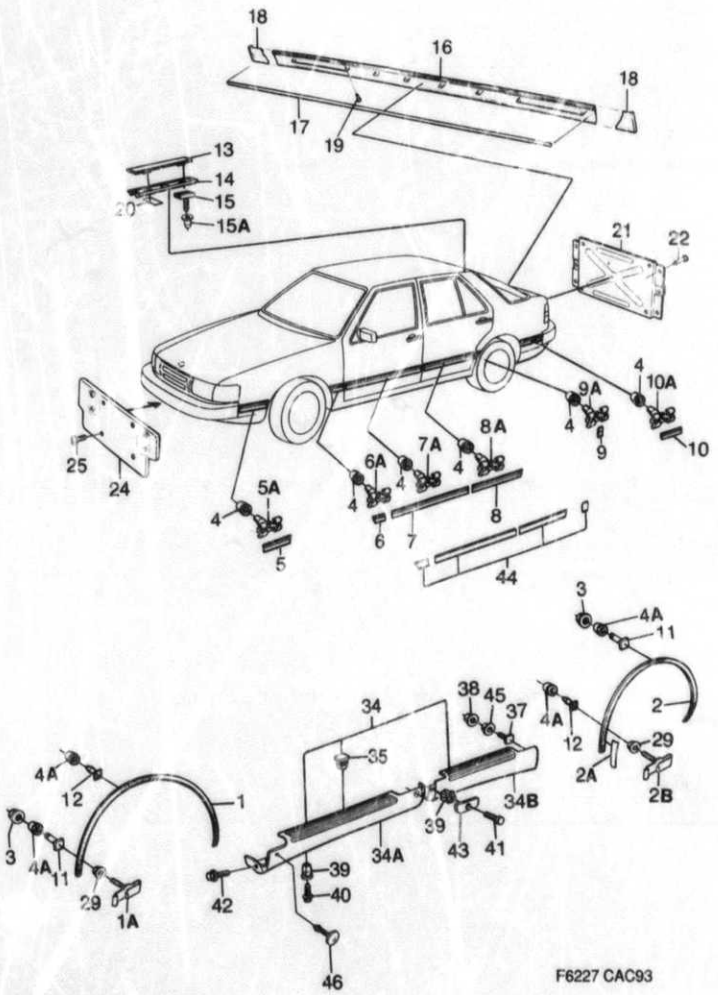

5-D10

External details, glass, sealings

Decor, 5D

Utvändiga detaljer, glas, tätningslister

Dekor, 5D

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 57 965		-1990, LH	1	Wheel house moulding	Hjulhusdekor	2
0020	1	92 57 957		-1990, RH	1	Wheel house moulding	Hjulhusdekor	2
0030	1	*69 93 299*		1991, LH NLS - USE 4251294	1	Wheel house moulding	Hjulhusdekor	2
0040	1	*69 93 307*		1991, RH NLS - USE 4251302	1	Wheel house moulding	Hjulhusdekor	2
0050	1	42 51 039		1992-, LH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0070	1	42 51 047		1992-, RH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0090	1	42 51 294		1992-, LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0100	1	42 51 302		1992-, RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0120	1	86 67 545		-1990, LH, T16SA	1	Mudguard widener	Skärmbreddare	2
0130	1	86 67 537		-1990, RH, T16SA	1	Mudguard widener	Skärmbreddare	2
0140	1	86 70 861		1991-1992, LH, T16SA	1	Mudguard widener	Skärmbreddare	2
0150	1	86 70 853		1991-1992, RH, T16SA	1	Mudguard widener	Skärmbreddare	2
0160	1	69 93 174		-1991, LH, T16SB	1	Mudguard widener	Skärmbreddare	2
0170	1	69 93 182		-1991, RH, T16SB	1	Mudguard widener	Skärmbreddare	2
0180	1A	40 90 197			5	.Clip	.Clips	5
0200	2	92 58 237		-1991, LH	1	Wheel house moulding	Hjulhusdekor	2
0210	2	92 58 229		-1991, RH	1	Wheel house moulding	Hjulhusdekor	2
0220	2	42 51 054		1992-, LH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0230	2	42 51 062		1992-, RH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0240	2	42 51 336		1992-, LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0250	2	42 51 344		1992-, RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0270	2	82 84 648		-1990, LH, T16SA See page 8A-167, 5-G24	1	Mudguard widener	Skärmbreddare	2
0290	2	82 84 630		-1990, RH, T16SA See page 8A-167, 5-G24	1	Mudguard widener	Skärmbreddare	2
0310	2	82 84 820		1991-1992, LH, T16SA See page 8A-167, 5-G24	1	Mudguard widener	Skärmbreddare	2
0330	2	82 84 812		1991-1992, RH, T16SA See page 8A-167, 5-G24	1	Mudguard widener	Skärmbreddare	2
0350	2	69 93 190		-1991, LH, T16SB	1	Mudguard widener	Skärmbreddare	2
0360	2	69 93 208		-1991, RH, T16SB	1	Mudguard widener	Skärmbreddare	2
0370	2A	86 63 270		LH, -1990, T16SA	1	.Protective foil	.Skyddsfolie	9
0380	2A	86 63 262		RH, -1990, T16SA	1	.Protective foil	.Skyddsfolie	9
0390	2A	86 67 198		LH, 1991-1992, T16SA	1	.Protective foil	.Skyddsfolie	9
0400	2A	86 67 180		RH, 1991-1992, T16SA	1	.Protective foil	.Skyddsfolie	9
0410	2B	40 90 197		-1992, T16SA	X	.Clip	.Clips	5
0420	2B	40 90 197		-1991, T16SB	4	.Clip	.Clips	5
0440	3	73 99 488			22	Nut	Mutter	5
0450	4	73 73 269			40	Bushing	Bussning	5
0460	4A	92 78 151			12	Bushing	Bussning	5
0470	5	92 55 266		LH	1	Decor strip	Dekorlist	2
0480	5	92 55 274		RH	1	Decor strip	Dekorlist	2
0490	5	69 92 663		1991-1992, LH, T16SB	1	Decor strip	Dekorlist	2
0500	5	69 92 671		1991-1992, RH, T16SB	1	Decor strip	Dekorlist	2
0510	5A	92 66 651			2	.Clip	.Clips	5
0520	6	92 55 282		LH	1	Decor strip	Dekorlist	2
0530	6	92 55 290		RH	1	Decor strip	Dekorlist	2
0540	6	69 92 689		1991-1992, LH, T16S	1	Decor strip	Dekorlist	2
0550	6	69 92 697		1991-1992, RH, T16S	1	Decor strip	Dekorlist	2
0560	6A	92 66 651			2	.Clip	.Clips	5
0570	7	92 55 308		LH	1	Decor strip	Dekorlist	2
0580	7	92 55 316		RH	1	Decor strip	Dekorlist	2
0590	7	69 92 705		1991-1992, LH, T16S	1	Decor strip	Dekorlist	2
0600	7	69 92 713		1991-1992, RH, T16S	1	Decor strip	Dekorlist	2
0610	7A	92 66 651			7	.Clip	.Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B18
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-D12

External details, glass, sealings
Decor, 5D

Utvändiga detaljer, glas, tätningslister
Dekor, 5D

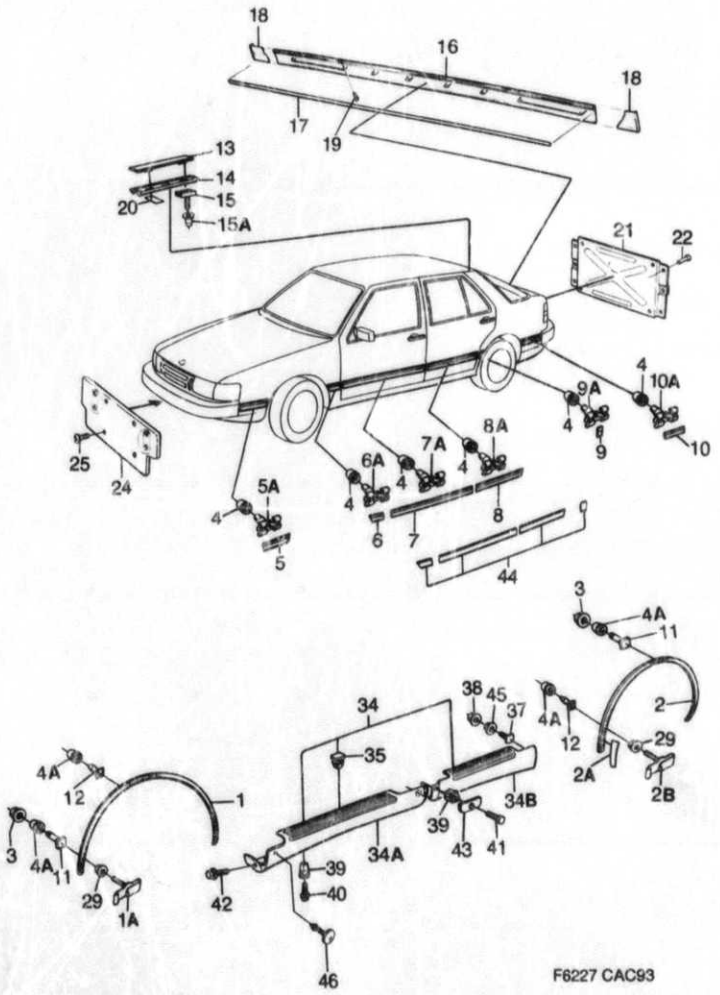

F6227 CAC93

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	8	92 55 324		LH	1	Decor strip	Dekorlist	2
0630	8	92 55 332		RH	1	Decor strip	Dekorlist	2
0640	8	69 92 721		1991-1992, LH, T16S	1	Decor strip	Dekorlist	2
0650	8	69 92 739		1991-1992, RH, T16S	1	Decor strip	Dekorlist	2
0660	8A	92 66 651			5	.Clip	.Clips	5
0670	9	92 55 340		LH	1	Decor strip	Dekorlist	2
0680	9	92 55 357		RH	1	Decor strip	Dekorlist	2
0690	9	69 92 747		1991-1992, LH, T16S	1	Decor strip	Dekorlist	2
0700	9	69 92 754		1991-1992, RH, T16S	1	Decor strip	Dekorlist	2
0710	9A	92 66 651			1	.Clip	.Clips	5
0720	10	*92 55 365*		117) LH NLS - USE 4254207	1	Decor strip	Dekorlist	2
0730	10	*92 55 373*		117) RH NLS - USE 4254215	1	Decor strip	Dekorlist	2
0740	10	42 54 207		118) LH	1	Decor strip	Dekorlist	2
0750	10	42 54 215		118) RH	1	Decor strip	Dekorlist	2
0760	10	69 92 762		1991-1992, LH, T16SB	1	Decor strip	Dekorlist	2
0770	10	69 92 770		1991-1992, RH, T16SB	1	Decor strip	Dekorlist	2
0780	10A	92 66 651			3	.Clip	.Clips	5
0790	11	73 99 470			22	Screw	Skruv	5
0800	11	40 87 151		1993	8	Screw	Skruv	5
0810	12	92 53 329			16	Clip	Clips	5
0820	13	92 68 202		180) LH	1	Decor	Dekor	5
0830	13	92 67 394		180) RH	1	Decor	Dekor	5
0840	13	40 97 457		181) LH	1	Decor	Dekor	5
0850	13	40 97 440		181) RH	1	Decor	Dekor	5
0860								
0870	14	92 69 713		180) LH	1	Decor strip	Dekorlist	5
0880	14	92 69 705		180) RH	1	Decor strip	Dekorlist	5
0890	14	69 93 513		181) LH	1	Decor strip	Dekorlist	5
0900	14	69 93 505		181) RH	1	Decor strip	Dekorlist	5
0910								
0920	15	92 69 697		180)	4	Clip	Clips	5
0930	15	90 87 560		181)	6	Clip	Clips	5
0940	15A	40 96 616		181)	6	Bushing	Bussning	5
0950								
0960	16	92 51 471			1	Shield plate	Avskärmningsplåt	5
0970	17	92 52 057			1	Sealing strip	Tätningslist	4
0980	18	92 52 131		LH	1	End piece	Ändstycke	3
0990	18	92 52 123		RH	1	End piece	Ändstycke	3
1000	19	79 65 544			4	Screw	Skruv	5
1010	20	92 88 127		180)	2	Tape	Tape	5
1020	21	92 72 139		US,CA,JP	1	Bracket	Hållare	5
1030	22	80 59 578		US,CA,JP	4	Screw	Skruv	5
1040	24			See page 8A-131, 5-F12	1	Bracket	Hållare	
1050	25			See page 8A-131, 5-F12	4	Screw	Skruv	
1060								
1070	29	40 89 934		-1991, T16SA	X	Bushing	Bussning	5
1080	29	92 78 151		-1991, T16SB	X	Bushing	Bussning	5
1090	29	92 78 151		1992-	X	Bushing	Bussning	5
1100								
1110	34	*82 84 689*		1990, LH, T16SB NLS - USE 8284705	1	Kit	Sats	5
1120	34A	*40 07 175*		1) NLS	1	.Sill protection	.Tröskelskydd	5
1130	34B	*40 07 191*		1) NLS	1	.Sill protection	.Tröskelskydd	5
1140	35	40 08 025			7	.Clamp	.Klämma	5
1150								

1. Not as separate spare part. Ej som separat reservdel.
117. Ch. -L1012226, -L2008762, -L8001529
118. Ch. L1012227-, L2008763-, L8001530-
180. Body -1991, -1187185
181. Body 1991-, 1187186-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-D14

External details, glass, sealings

Decor, 5D

Utvändiga detaljer, glas, tätningslister

Dekor, 5D

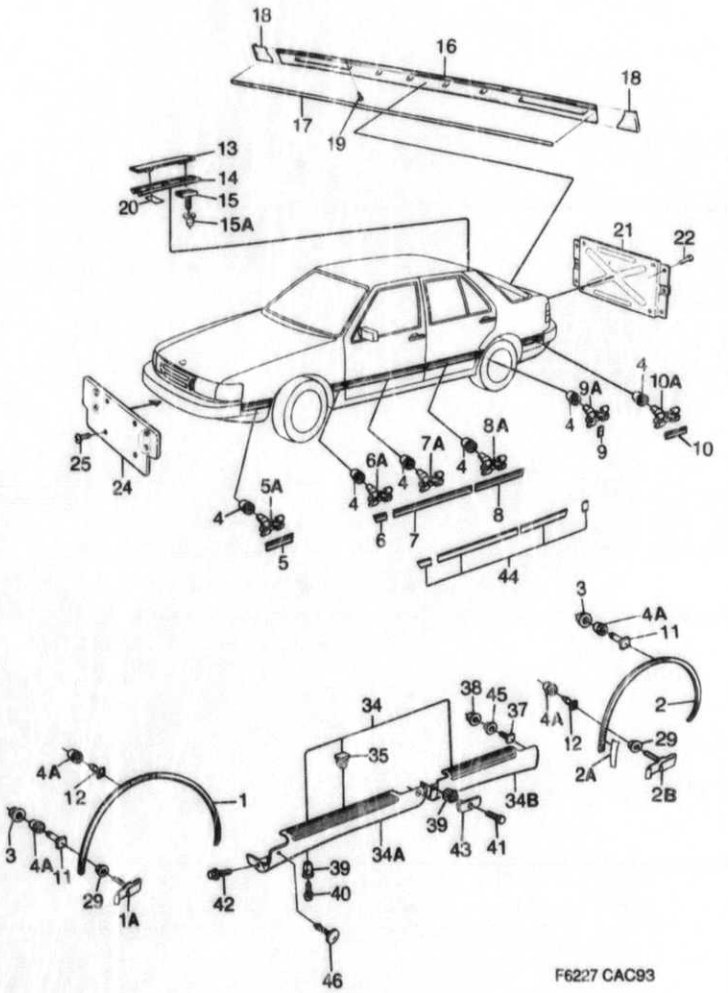

F6227 CAC93

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1160	34	*82 84 697*		1990, RH, T16SB NLS - USE 8284713	1	Kit	Sats	5
1170	34A	*40 07 167*		1) NLS	1	.Sill protection	.Tröskelskydd	5
1180	34B	*40 07 183*		1) NLS	1	.Sill protection	.Tröskelskydd	5
1190	35	40 08 025			7	.Clamp	.Klämma	5
1210	34	82 84 705		1991-, LH	1	Kit	Sats	5
1220	34A	69 62 138			1	.Sill protection	.Tröskelskydd	5
1230	34B	69 62 153			1	.Sill protection	.Tröskelskydd	5
1240	35	41 02 000			7	.Clamp	.Klämma	5
1260	34	82 84 713		1991-, RH	1	Kit	Sats	5
1270	34A	69 62 120			1	.Sill protection	.Tröskelskydd	5
1280	34B	69 62 146			1	.Sill protection	.Tröskelskydd	5
1290	35	41 02 000			7	.Clamp	.Klämma	5
1310	37	69 59 464		1990, T16SB	4	Screw	Skruv	5
1320	38	73 99 488		1990, T16SB	4	Nut	Mutter	5
1330	39	*40 05 237*		1990, T16SB NLS - USE 4008504, 7992325	12	Nut	Mutter	5
1340	40	79 77 465		1990, T16SB	10	Screw	Skruv	5
1350	41	79 70 536		1990, T16SB	2	Screw	Skruv	6
1360	42	*79 81 947*		1990, T16SB NLS - USE 7335540, 8019598	4	Screw	Skruv	5
1370	43	*40 98 786*		1990, T16SB NLS - USE 4293486	2	Cover washer	Täckbricka	5
1380	44	86 64 807		1990, T16SA	1	Stripes kit	Dekortejpsats	5
1390	45	40 89 934		1990, T16SB	4	Bushing	Bussning	5
1410	37	69 59 464		1991-	4	Screw	Skruv	5
1420	38	73 99 488		1991-	4	Nut	Mutter	5
1430	39	*40 05 237*		1991-,246) NLS - USE 4008504, 7982325	12	Nut	Mutter	5
1440	39	40 08 504		247)	12	Nut	Mutter	5
1450	40	79 77 465		1991-,246)	10	Screw	Skruv	5
1460	40	79 82 325		247)	10	Screw	Skruv	5
1470	41	97 78 952		1991-	2	Screw	Skruv	5
1480	42	79 82 325		1991-	4	Screw	Skruv	5
1490	43	42 93 486		1991-,246)	2	Cover washer	Täckbricka	5
1500	43	42 94 062		247)	2	Cover washer	Täckbricka	5
1510	45	92 78 151		1991-	4	Bushing	Bussning	5
1520	46	96 68 153		1991-	2	Clip	Clips	5
1540		92 40 086		US, CA, JP See page 8A-163, 5-G20	1	Mounting kit registration plate	Monteringssats registreringsskylt	5
1560		74 96 029		See page 8A-163, 5-G20	1	Mounting kit wheel house moulding	Monteringssats hjulhusdekor	4
1580		74 96 037		See page 8A-163, 5-G20	1	Mounting kit wheel house moulding	Monteringssats hjulhusdekor	4
1600		82 84 374		LH See page 8A-167, 5-G24	X	Moulding kit	Dekorlistsats	4
1620		82 84 382		RH See page 8A-167, 5-G24	X	Moulding kit	Dekorlistsats	4

1. Not as separate spare part. Ej som separat reservdel.
199. Ch. M1017620-, M2011731-
246. Ch. -N1018481
247. Ch. N1018482-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-D16

External details, glass, sealings

Decor, 4D

Utvändiga detaljer, glas, tätningslister

Dekor, 4D

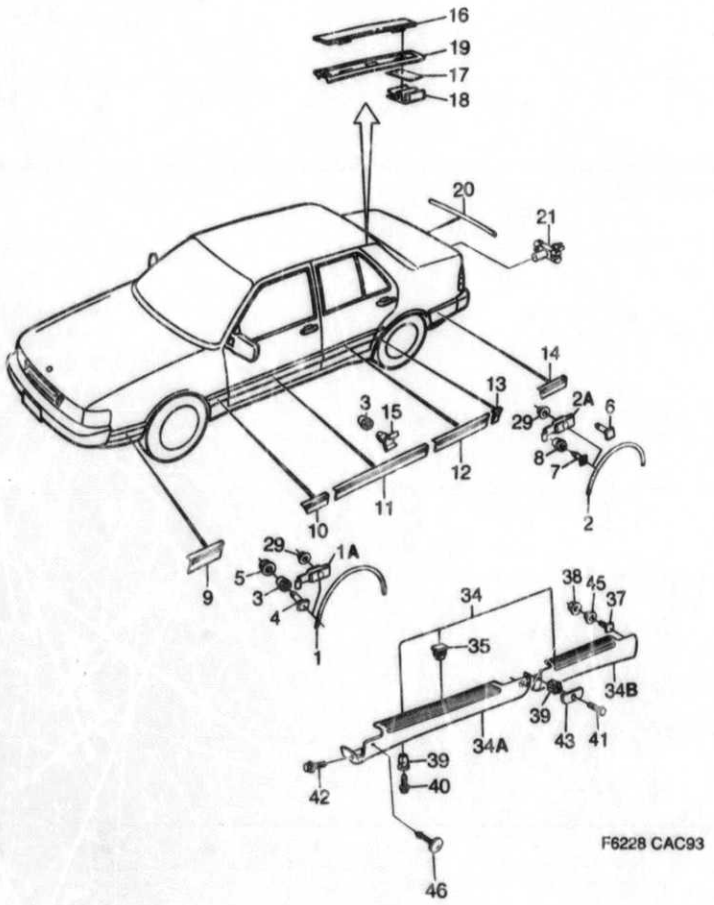

F6228 CAC93

0960	Pos	Part No/Artikelnr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 57 665		-1990, LH	1	Wheel house moulding	Hjulhusdekor	2
0020	1	92 57 957		-1990, RH	1	Wheel house moulding	Hjulhusdekor	2
0030	1	*69 93 299*		1991, LH NLS - USE 4251294	1	Wheel house moulding	Hjulhusdekor	2
0040	1	*69 93 307*		1991, RH NLS - USE 4251302	1	Wheel house moulding	Hjulhusdekor	2
0050	1	42 51 039		1992-, LH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0070	1	42 51 047		1992-, RH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0090	1	42 51 294		1992-, LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0100	1	42 51 302		1992-, RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0120	1	69 93 174		1991, LH, T16S 1991, LH, JP	1	Mudguard widener	Skärmbreddare	2
0140	1	69 93 182		1991, RH, T16S 1991, RH, JP	1	Mudguard widener	Skärmbreddare	2
0160	1A	40 90 197		1991, T16S 1991, JP	5	▪Clip	▪Clips	5
0190	2	92 58 237		-1991, LH	1	Wheel house moulding	Hjulhusdekor	2
0200	2	92 58 229		-1991, RH	1	Wheel house moulding	Hjulhusdekor	2
0210	2	42 51 054		1992-, LH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0220	2	42 51 062		1992-, RH	1	Wheel house moulding Mudguard widener	Hjulhusdekor Skärmbreddare	2
0230	2	42 51 336		1992-, LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0240	2	42 51 344		1992-, RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0260	2	69 93 190		1991, LH, T16S 1991, LH, JP	1	Mudguard widener	Skärmbreddare	2
0280	2	69 93 208		1991, RH, T16S 1991, RH, JP	1	Mudguard widener	Skärmbreddare	2
0310	2A	40 90 197		1991, T16S 1991, JP	4	▪Clip	▪Clips	5
0340	3	73 73 269			42	Bushing	Bussning	5
0350	4	73 99 470		-1992	16	Screw	Skruv	5
0360	4	40 87 151		1993	4	Screw	Skruv	5
0370	5	73 99 488			22	Nut	Mutter	5
0380	6	73 99 470		-1992	6	Screw	Skruv	5
0390	6	40 87 151		1993	4	Screw	Skruv	5
0400	7	92 53 329			8	Clip	Clips	5
0410	8	92 78 151			6	Bushing	Bussning	5
0420	9	92 78 177		LH	1	Decor strip	Dekorlist	2
0430	9	92 78 185		RH	1	Decor strip	Dekorlist	2
0440	10	92 78 193		LH	1	Decor strip	Dekorlist	2
0450	10	92 78 201		RH	1	Decor strip	Dekorlist	2
0460	11	92 78 219		LH	1	Decor strip	Dekorlist	2
0470	11	92 78 227		RH	1	Decor strip	Dekorlist	2
0480	12	92 78 235		LH	1	Decor strip	Dekorlist	2
0490	12	92 78 243		RH	1	Decor strip	Dekorlist	2
0500	13	92 78 250		LH	1	Decor strip	Dekorlist	2
0510	13	92 78 268		RH	1	Decor strip	Dekorlist	2
0520	14	69 54 176		LH	1	Decor strip	Dekorlist	2
0530	14	69 54 184		RH	1	Decor strip	Dekorlist	2
0540	15	69 91 079			X	▪Clip	▪Clips	5
0550	16	92 77 393		LH	1	Decor strip	Dekorlist	5
0560	16	92 78 003		RH	1	Decor strip	Dekorlist	5
0570	17	92 88 127			2	Tape	Tape	5
0580	18	92 69 697			4	Clip	Clips	5
0590	19	92 77 336		LH	1	Decor strip	Dekorlist	5
0600	19	92 77 344		RH	1	Decor strip	Dekorlist	5
0610	20	69 59 100			1	Decor strip	Dekorlist	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5--D18

External details, glass, sealings
Decor, 4D

Utvändiga detaljer, glas, tätningslister
Dekor, 4D

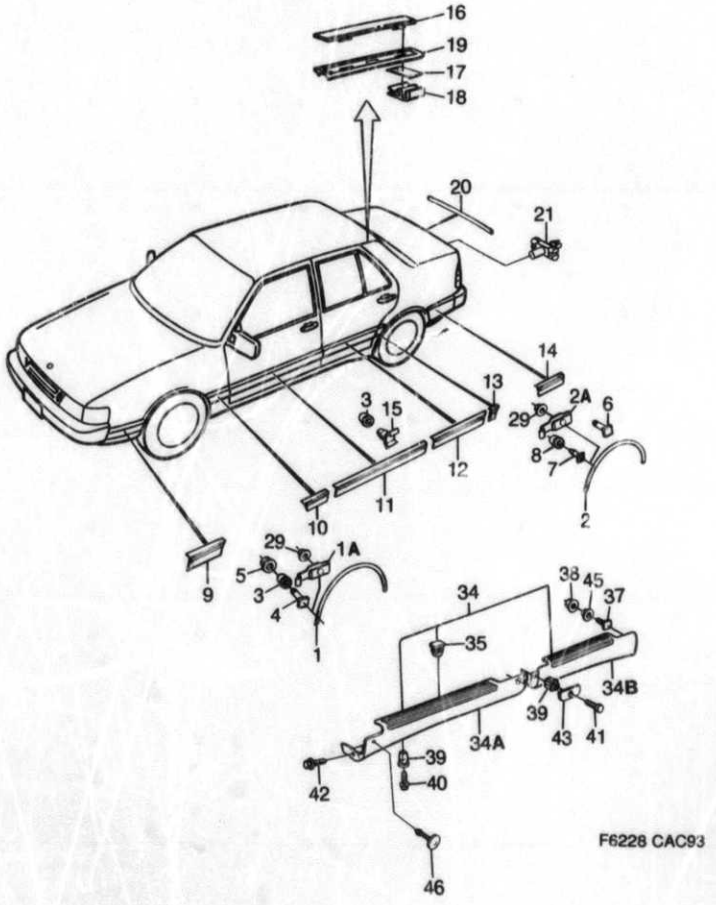

F6228 CAC93

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	21	69 59 175			7	Clip	Clips	5
0630								
0640	29	40 89 934		1991, T16S	X	Bushing	Bussning	5
0650				1991, JP				
0660								
0670	29	92 78 151		1992-, T16S	X	Bushing	Bussning	5
0680				1992-, JP				
0690								
0700	34	82 84 705		1991-, LH	1	Kit	Sats	5
0710	34A	69 62 138			1	. Sill protection	. Tröskelskydd	5
0720	34B	69 62 153			1	. Sill protection	. Tröskelskydd	5
0730	35	41 02 000			7	. Clamp	. Klämma	5
0740								
0750	34	82 84 713		1991-, RH	1	Kit	Sats	5
0760	34A	69 62 120			1	. Sill protection	. Tröskelskydd	5
0770	34B	69 62 146			1	. Sill protection	. Tröskelskydd	5
0780	35	41 02 000			7	. Clamp	. Klämma	5
0790								
0800	37	69 59 464		1991-	4	Screw	Skruv	5
0810	38	73 99 488		1991-	4	Nut	Mutter	5
0820	39	*40 05 237*		1991-,246) NLS - USE 4008504, 7982325	12	Nut	Mutter	5
0830	39	40 08 504		247)	12	Nut	Mutter	5
0840	40	79 77 465		1991-,246)	10	Screw	Skruv	5
0850	40	79 82 325		247)	10	Screw	Skruv	5
0860	41	79 70 536		1991-,246)	2	Screw	Skruv	6
0870	41	97 78 952		247)	2	Screw	Skruv	5
0880	42	79 82 325		1991-	4	Screw	Skruv	5
0890	43	42 93 486		1991-,246)	2	Cover washer	Täckbricka	5
0900	43	42 94 062		247)	2	Cover washer	Täckbricka	5
0910	45	40 89 934		1991-	4	Bushing	Bussning	5
0920	46	96 68 153		1991-	2	Clip	Clips	5
0930								
0940		74 96 029			1	Mounting kit wheel house moulding	Monteringssats hjulhusdekor	4
0950				See page 8A-163, 5-G20				
0960		74 96 037			1	Mounting kit wheel house moulding	Monteringssats hjulhusdekor	4
0970				See page 8A-163, 5-G20				


199. Ch. M1017620-, M2011731--
246. Ch. --N1018481
247. Ch. N1018482--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

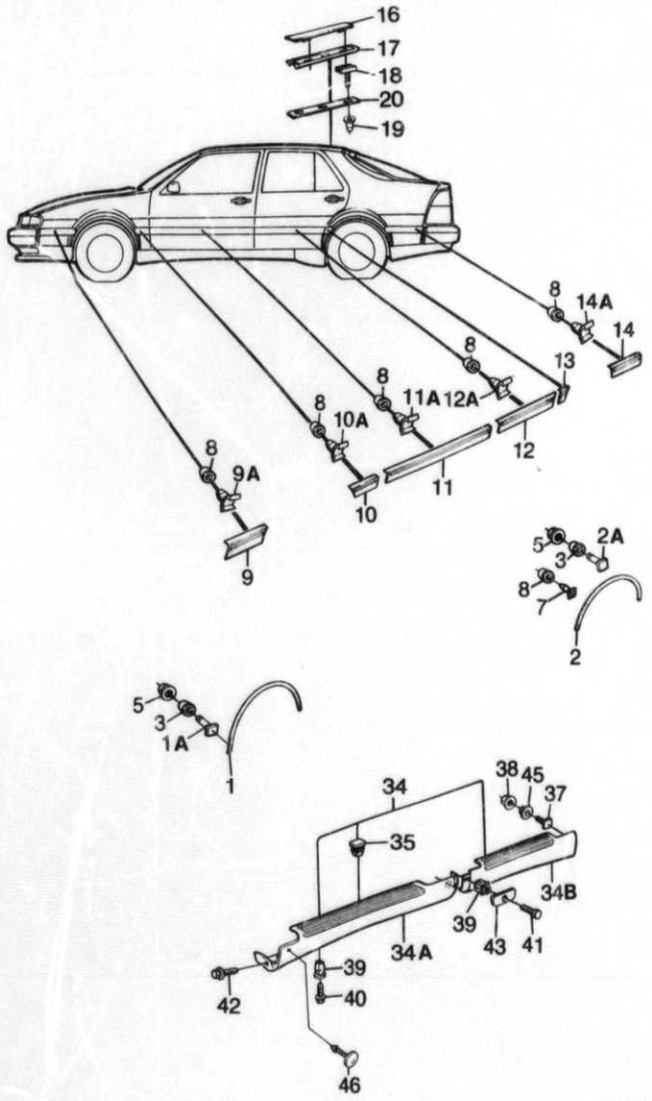

F6229 CAC93

5-D20

External details, glass, sealings

Decor, 5CS

Utvändiga detaljer, glas, tätningslister

Dekor, 5CS

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1			1993, 5CS AERO		Mudguard widener	Skärmbreddare	
			See page 8A-105, 5-E10				
1	90 89 632		LH	1	Wheel house moulding	Hjulhusdekor	2
1	90 89 624		RH	1	Wheel house moulding	Hjulhusdekor	2
1A	73 99 470			7	▪Screw	▪Skruv	5
2			1993, 5CS AERO		Mudguard widener	Skärmbreddare	
			See page 8A-105, 5-E10				
2	90 89 657		LH	1	Wheel house moulding	Hjulhusdekor	2
2	90 89 640		RH	1	Wheel house moulding	Hjulhusdekor	2
2A	73 99 470			2	▪Screw	▪Skruv	5
3	92 78 151			14	Bushing	Bussning	5
5	73 99 488			22	Nut	Mutter	5
7	92 53 329			8	Clip	Clips	5
8	73 73 269			X	Bushing	Bussning	5
9	90 88 550		LH	1	Decor strip	Dekorlist	2
9	90 88 543		RH	1	Decor strip	Dekorlist	2
9A	90 83 312			3	▪Clip	▪Clips	5
10	90 83 254		LH	1	Decor strip	Dekorlist	2
10	90 83 247		RH	1	Decor strip	Dekorlist	2
10	43 41 830		LH, AERO	1	Decor strip	Dekorlist	2
10	43 41 848		RH, AERO	1	Decor strip	Dekorlist	2
10A	90 83 312			2	▪Clip	▪Clips	5
11	90 83 098		LH	1	Decor strip	Dekorlist	2
11	90 83 080		RH	1	Decor strip	Dekorlist	2
11	43 41 855		LH, AERO	1	Decor strip	Dekorlist	2
11	43 41 863		RH, AERO	1	Decor strip	Dekorlist	2
11A	90 83 312			7	▪Clip	▪Clips	5
12	90 83 130		LH	1	Decor strip	Dekorlist	2
12	90 83 122		RH	1	Decor strip	Dekorlist	2
12	43 41 871		LH, AERO	1	Decor strip	Dekorlist	2
12	43 41 889		RH, AERO	1	Decor strip	Dekorlist	2
12A	90 83 312			5	▪Clip	▪Clips	5
13	90 83 213		LH	1	Decor strip	Dekorlist	2
13	90 83 205		RH	1	Decor strip	Dekorlist	2
13	43 41 897		LH, AERO	1	Decor strip	Dekorlist	2
13	43 41 905		RH, AERO	1	Decor strip	Dekorlist	2
14	90 83 171		LH	1	Decor strip	Dekorlist	2
14	90 83 163		RH	1	Decor strip	Dekorlist	2
14A	90 83 312			5	▪Clip	▪Clips	5
15	73 73 269			44	Bushing	Bussning	5
16	42 53 274		LH	1	Decor	Dekor	5
16	42 53 266		RH	1	Decor	Dekor	5
17	90 89 194		263) LH	1	Decor strip	Dekorlist	5
17	90 89 186		263) RH	1	Decor strip	Dekorlist	5
17	43 80 416		264) LH	1	Decor strip	Dekorlist	5
17	43 80 424		264) RH	1	Decor strip	Dekorlist	5
18	90 87 560			6	Clip	Clips	5
19	40 96 616			6	Bushing	Bussning	5
20	43 44 925		263)	2	Seal	Tätning	3

263. Ch. --N1033182
264. Ch. N1033183--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-D22

Decor, 5CS
Dekor, 5CS

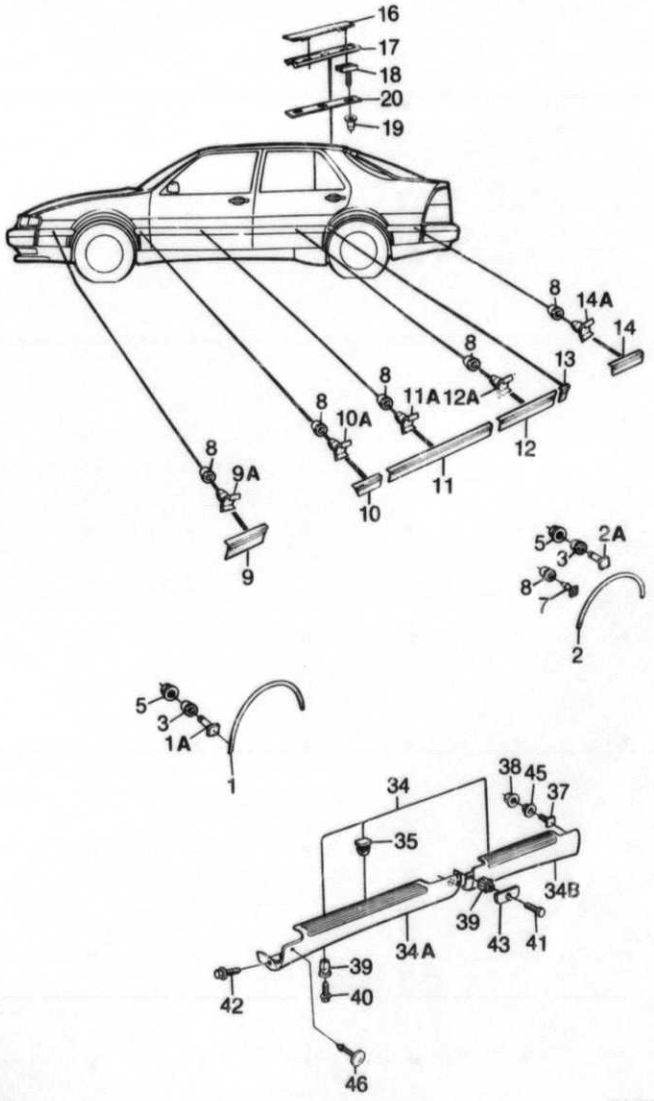

F6229 CAC93

0965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	34	82 84 705		LH	1	Kit	Sats	5
0620	34A	69 62 138			1	. Sill protection	. Tröskelskydd	5
0630	34B	69 62 153			1	. Sill protection	. Tröskelskydd	5
0640	35	41 02 000			7	. Clamp	. Klämma	5
0650								
0660	34	82 84 713		RH	1	Kit	Sats	5
0670	34A	69 62 120			1	. Sill protection	. Tröskelskydd	5
0680	34B	69 62 146			1	. Sill protection	. Tröskelskydd	5
0690	35	41 02 000			7	. Clamp	. Klämma	5
0700								
0710	37	69 59 464			4	Screw	Skruv	5
0720	38	73 99 458			4	Nut	Mutter	5
0730	39	*40 05 237*		246) NLS - USE 4008504, 7982325	12	Nut	Mutter	5
0750								
0740	39	40 08 504		247)	12	Nut	Mutter	5
0750	40	79 77 465		246)	10	Screw	Skruv	5
0760	40	79 82 325		247)	10	Screw	Skruv	5
0770	41	79 70 536		246)	2	Screw	Skruv	6
0780	41	97 78 952		247)	2	Screw	Skruv	5
0790	42	79 82 325			4	Screw	Skruv	5
0800	43	42 93 486		246)	2	Cover washer	Täckbricka	5
0810	43	42 94 062		247)	2	Cover washer	Täckbricka	5
0820	45	40 89 934			4	Bushing	Bussning	5
0830	46	96 68 153			2	Clip	Clips	5
0840								
0850		74 96 029		See page 8A-163, 5-G20	1	Mounting kit	Monteringssats	4
0860		74 96 037		See page 8A-163, 5-G20	1	Mounting kit	Monteringssats	4

246. Ch. --N1018481
247. Ch. N1018482--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-D24

Spoiler, 4D, 5D

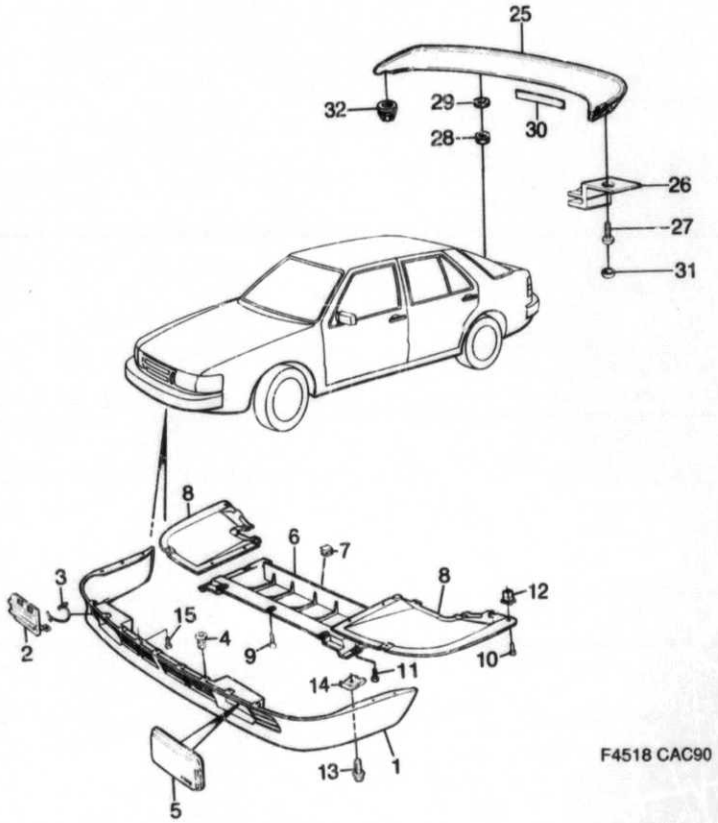

F4518 CAC90

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	32 62 759		70) -1990, 5D	1	Spoiler	Spoiler	3
0020	1	40 92 011		110) 1990, 5D, T16SB	1	Spoiler	Spoiler	3
0030	1	86 61 415		1990, 5D, T16SA	1	Spoiler	Spoiler	3
0040								
0050	1	*69 91 608*		1991-,248,70) 5D NLS - USE 4343117, 7982325	1	Spoiler	Spoiler	3
0060	1	43 43 117		249,70) 5D	1	Spoiler	Spoiler	3
0070	1	*69 54 929*		69,70) 4D NLS - USE 4343117, 7982325	1	Spoiler	Spoiler	3
0080	1	*69 91 608*		71,248,70) 4D NLS - USE 4343117, 7982325	1	Spoiler	Spoiler	3
0090	1	43 43 117		249,70) 4D	1	Spoiler	Spoiler	3
0100	1	*40 93 183*		1991-,248,110) NLS - USE 4344214, 7982325	1	Spoiler	Spoiler	3
0110	1	43 44 214		249,110)	1	Spoiler	Spoiler	3
0120								
0130	2	69 42 429		70) 1991-, 5D	1	.Cover	.Lock	4
0140	2	69 42 429		70) 4D	1	.Cover	.Lock	4
0150	2	69 58 904		110) 1991-, 4D, 5D	1	.Cover	.Lock	4
0160	3	69 60 926			1	.Bracket	.Hållare	5
0170	4	92 88 846		248) 4D, 5D	3	.Nut	.Mutter	5
0180	4	90 87 040		249) 4D, 5D	3	.Nut	.Mutter	5
0190								
0200	5	69 91 624		70) 1991-, LH, 5D	1	Cover	Lock	4
0210	5	69 91 616		70) 1991-, RH, 5D	1	Cover	Lock	4
0220								
0230	5	*69 56 254*		69) LH, 4D NLS - USE 6991624	1	Cover	Lock	4
0240	5	*69 56 247*		69) RH, 4D NLS - USE 6991616	1	Cover	Lock	4
0250	5	69 91 624		70,71) LH, 4D	1	Cover	Lock	4
0260	5	69 91 616		70,71) RH, 4D	1	Cover	Lock	4
0270								
0280	5	69 91 558		110) 1991-, LH, 4D, 5D	1	Cover	Lock	4
0290	5	69 91 541		110) 1991-, RH, 4D, 5D	1	Cover	Lock	4
0300								
0320	6	92 68 079		-1990, 5D	1	Air shield	Luftskärm	5
0330	6	92 76 064		-1990, 5D A, FOR CARS WITH AIR OIL COOLED TRANSMISSION	1	Air shield	Luftskärm	5
0360	6	*92 79 589*		-1990, 4D NLS - USE 4006884	1	Air shield	Luftskärm	5
0370	6	*92 79 589*		1991-,248) 4D, 5D NLS - USE 4008884	1	Air shield	Luftskärm	5
0380	6	40 08 884		249) 4D, 5D	1	Air shield	Luftskärm	5
0390	7	92 65 331			4	.Clamp	.Klammer	5
0400								
0410	8	92 67 972		-1990, LH, 5D	1	Shield	Sköld	5
0420	8	92 67 964		-1990, RH, 5D	1	Shield	Sköld	5
0430								
0440	8	*69 54 879*		-1990, LH, 4D NLS - USE 4008256	1	Shield	Sköld	5
0440	8	*69 54 861*		-1990, RH, 4D NLS - USE 4008249	1	Shield	Sköld	5
0450								
0460								

69. Ch. -L1003404, -L2002443
70. Grey Grå
71. Ch. L1003405-, L2002444-
110. Black Svart
199. Ch. M1017620-, M2011731-
248. Ch. -N1014491
249. Ch. N1014492-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-E02

External details, glass, sealings

Spoiler, 4D, 5D

Utvändiga detaljer, glas, tätningslister

Spoiler, 4D, 5D

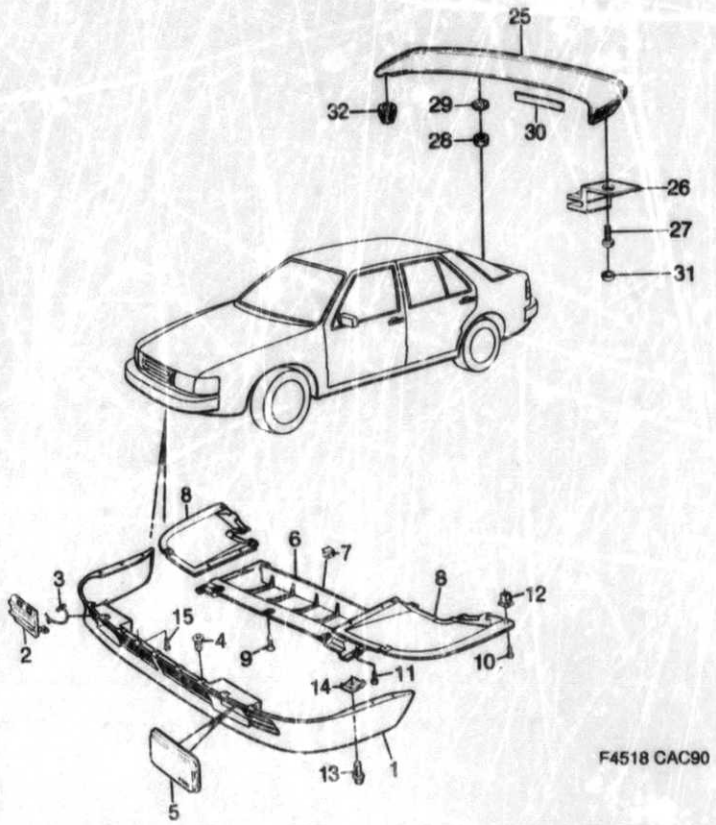

F4518 CAC90

0970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	8	*69 54 879*		1991-,248) LH, 4D, 5D	1	Shield	Sköld	5
0479				NLS - USE 4008256				
0480	8	40 08 256		249) LH, 4D, 5D	1	Shield	Sköld	5
0490	8	*69 54 861*		1991-,249) RH, 4D, 5D	1	Shield	Sköld	5
0499				NLS - USE 4008249				
0500	8	40 08 249		249) RH, 4D, 5D	1	Shield	Sköld	5
0520								
0530	9	79 76 986		248) 4D, 5D	3	Screw	Skruv	5
0540	9	79 82 325		249) 4D, 5D	2	Screw	Skruv	5
0550	10	79 76 938		248) 4D, 5D	9	Screw	Skruv	5
0560	10	79 82 325		249) 4D, 5D	8	Screw	Skruv	5
0570	11	79 77 465		248) 4D, 5D	4	Screw	Skruv	5
0580	11	79 82 325		249) 4D, 5D	4	Screw	Skruv	5
0590	12	79 75 279	S	248) 4D, 5D	4	Nut	Mutter	5
0600	12	79 82 655	S	249) 4D, 5D	4	Press nut	Pressmutter	5
0610								
0620	13	79 73 134	S	4D, 5D	8	Screw	Skruv	5
0630	14	79 77 523	S	4D, 5D	6	Clip	Clips	5
0640	15	79 76 996	S	4D, 5D	11	Screw	Skruv	5
0650								
0660	25	82 84 283		5D	1	Spoiler	Spoiler	5
0670				See page 8A-155, 5-G12				
0680	25	69 92 838	S	5D	1	Spoiler	Spoiler	3
0690	25	40 90 924		186) 5D T16S	1	Spoiler	Spoiler	3
0700	25	69 92 838		187) 5D T16S	1	Spoiler	Spoiler	3
0710								
0720	26	92 77 664		5D	2	Attaching bracket	Fästvinkel	5
0730	27	80 59 537		5D	2	Screw	Skruv	5
0740								
0750	28	73 98 423		5D	5	Nut	Mutter	5
0760								
0770	29	40 89 389	S	5D	7	Washer	Bricka	5
0780	30	78 74 662		5D	X	Tape	Tape	5
0790	31	92 78 847		5D	2	Protecting cap	Skyddshuv	5
0800	32	40 13 454	S	5D	2	Clip	Clips	5
0810	33	42 50 114		T16S	2	Washer	Bricka	5
0820	34	79 77 671		T16S	2	Nut	Mutter	5
0830								
0840		69 62 708		248)	1	Mounting kit air shield	Monteringssats luftskärm	3
0850				See page 8A-159, 5-G16				
0860		40 09 502		249)	1	Mounting kit air shield	Monteringssats luftskärm	3
0870				See page 8A-159, 5-G16				
0880		92 67 956		2)	1	Mounting kit spoiler	Monteringssats spoiler	3
0890				See page 8A-151, 5-G08				
0900		82 84 275		3)	1	Spoiler	Spoiler	5
0910				See page 8A-155, 5-G12				
0920		82 84 267		3)	1	Mounting kit spoiler	Monteringssats spoiler	5
0930				See page 8A-151, 5-G08				
0940		82 84 523		3) T16S	1	Mounting kit spoiler	Monteringssats spoiler	5
0950				See page 8A-151, 5-G08				


2. Front Främre
3. Rear Bakre
186. Ch. --M1006987, --M2004730
187. Ch. M1006968--, M2004731--
199. Ch. M1017620--, M2011731--
248. Ch. --N1014491
249. Ch. N1014492--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

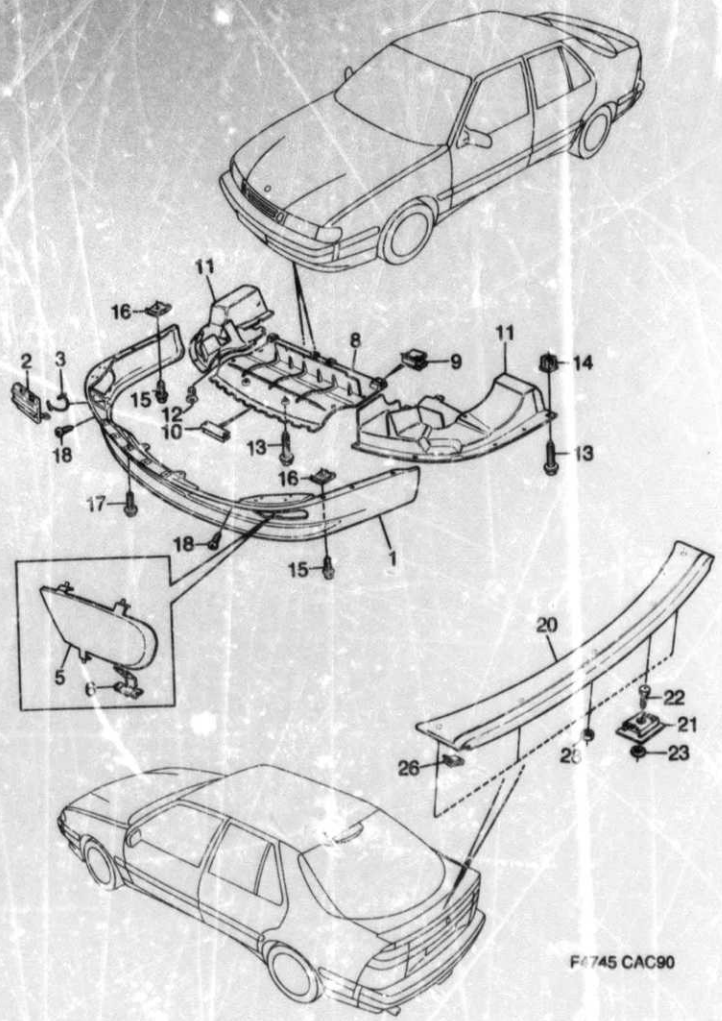

External details, glass, sealings

5-E04

Spoiler, 5CS

Utvändiga detaljer, glas, tätningslister

Spoiler, 5CS

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 843		70) -1992	1	Spoiler	Spoiler	3
0020	1	40 91 062		110)	1	Spoiler	Spoiler	3
0030								
0040	2	90 85 986		70)	1	.Cover	.Lock	4
0050	2	40 90 858		110)	1	.Cover	.Lock	4
0060	3	69 60 926			1	.Bracket	.Hållare	5
0070								
0080	5	40 90 056		70) LH	1	Cover	Lock	4
0090	5	40 90 049		70) RH	1	Cover	Lock	4
0100	5	40 90 890		110) LH	1	Cover	Lock	4
0110	5	40 90 882		110) RH	1	Cover	Lock	4
0120	6	43 40 964			2	Clip	Clips	5
0130								
0140	8	90 84 211			1	Air shield	Luftskärm	5
0150	9	92 65 331			4	.Clamp	.Klammer	5
0160	10	42 94 369			3	.Clip	.Clips	5
0170								
0180	11	*90 86 174*		LH NLS - USE 4294617	1	Air shield	Luftskärm	5
0200	11	90 86 166		RH	1	Air shield	Luftskärm	5
0210	12	90 87 040			6	.Nut	.Mutter	5
0220								
0230	13	79 82 325			14	Screw	Skruv	5
0240	14	79 82 655			4	Press nut	Pressmutter	5
0250								
0260	15	79 73 134			6	Screw	Skruv	5
0270	16	79 77 523			6	Clip	Clips	5
0280	17	79 76 988			5	Screw	Skruv	5
0290	18	79 70 601			2	Screw	Skruv	5
0300								
0310	20	*40 93 704*		1,243) NLS - USE 4344826	1	Spoiler	Spoiler	3
0320	20	43 44 826		1,244)	1	Spoiler	Spoiler	3
0330								
0340	20	82 85 314		See page 8A-155, 5-G12	1	Spoiler kit	Spoiler sats	5
0350								
0360	20	82 85 322		See page 8A-155, 5-G12	1	Spoiler kit	Spoiler sats	5
0370								
0380								
0390	21	43 20 016		244)	2	.Retainer	.Hållare	5
0400	22	*82 67 205*		244) NLS - USE 7972466	2	.Screw	.Skruv	5
0410	23	44 35 442		244)	2	.Sealing washer	.Tätningsbricka	5
0420								
0430	26	43 43 174		243)	2	Clip	Clips	5
0440	28	79 77 929			5	Nut	Mutter	5
0450								
0460		40 09 502		See page 8A-159, 5-G16	1	Mounting kit air shield	Monteringssats luftskärm	3
0470								

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
110. Black Svart
243. Ch. --N1015355
244. Ch. N1015356--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E06

External details, glass, sealings
T16SA, 1990

Utvändiga detaljer, glas, tätningslister
T16SA, 1990

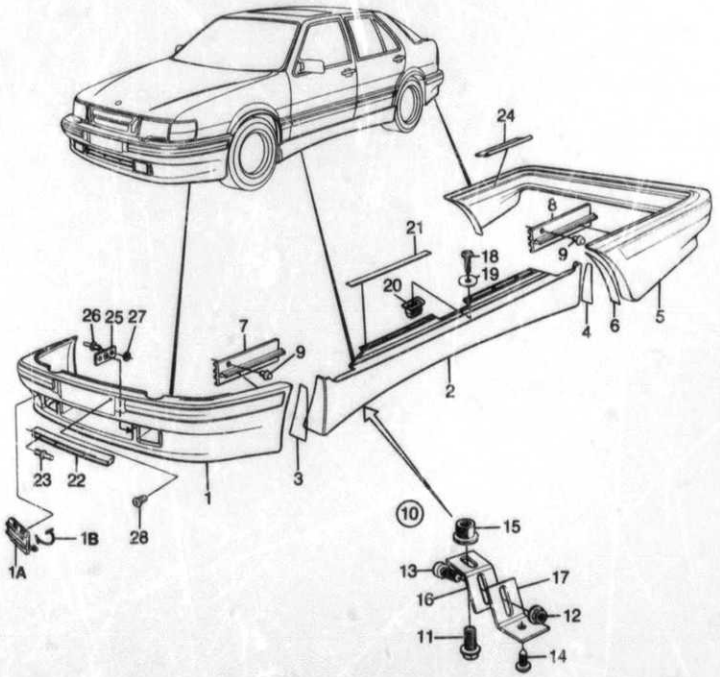

0990	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	86 67 578			1	Spoiler	Spoiler	5
0020	1A	86 67 602			1	.Cover	.Lock	4
0030	1B	69 60 926			1	.Bracket	.Hållare	5
0040	2	82 84 614		LH	1	Side shield	Sidoskköld	2
0050				See page 8A-163, 5-G20				
0060	2	82 84 606		RH	1	Side shield	Sidosköld	2
0070				See page 8A-163, 5-G20				
0080	3	86 62 827	S	LH	1	.Protective foil	.Skyddsfolie	9
0090	3	86 62 819	S	RH	1	.Protective foil	.Skyddsfolie	9
0100	4	86 62 843	S	LH	1	.Protective foil	.Skyddsfolie	9
0110	4	86 62 835	S	RH	1	.Protective foil	.Skyddsfolie	9
0120	5	82 84 622			1	Outer casing	Hölje	3
0130				See page 8A-163, 5-G20				
0140	6	86 62 967	S	LH	1	.Protective foil	.Skyddsfolie	9
0150	6	86 62 959	S	RH	1	.Protective foil	.Skyddsfolie	9
0160	7	86 63 296		2)	2	Rail	Skena	6
0170	8	86 62 595		3)	2	Rail	Skena	6
0180	9	86 67 479			12	Rivet	Nit	3
0190	10	82 84 333			6	Mounting kit	Monteringssats	5
0200	11	79 73 779			1	.Screw	.Skruv	5
0210	12	79 74 298			1	.Nut	.Mutter	5
0220	13	79 75 196			1	.Screw	.Skruv	5
0230	14	86 57 777			1	.Screw	.Skruv	5
0240	15	86 60 607		1)	1	.Plug	.Plugg	5
0250	16	86 60 615		1)	1	.Bracket	.Konsol	5
0260	17	86 60 623		1)	1	.Bracket	.Konsol	5
0270	18	86 57 975			18	Screw	Skruv	5
0280	19	86 63 494			14	Washer	Bricka	5
0290	20	92 68 616			14	Clip	Clips	5
0300	21	86 62 470			4	Cover moulding	Täcklist	3
0310	22	86 62 538			1	Grille	Grill	5
0320	23	86 67 495			6	Clip	Clips	5
0330	24	86 62 603			4	Seal	Tätning	5
0340	25	86 66 618			1	Bracket	Fäste	5
0350	26	86 67 479			2	Rivet	Nit	3
0360	27	70 60 999			2	Washer	Bricka	5
0370	28	90 87 040			4	Nut	Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-E08

External details, glass, sealings

T16SA, 1991-1992

Utvändiga detaljer, glas, tätningslister

T16SA, 1991-1992

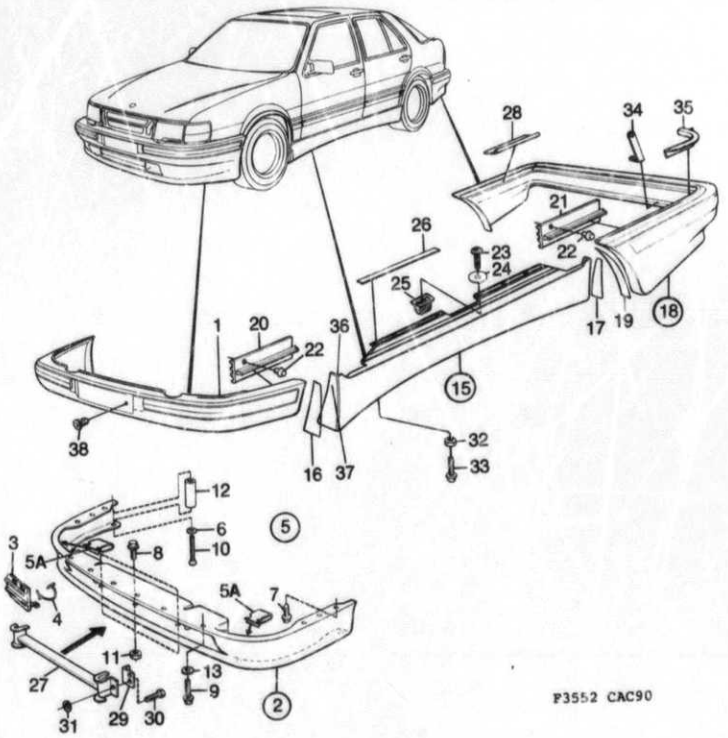

F3552 CAC90

0995	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	86 70 903			1	Outer casing	Hölje	3
0020								
0030	2	86 70 895			1	Spoiler	Spoiler	3
0040	3	86 70 507			1	.Cover	.Lock	4
0050	4	69 60 926			1	..Bracket	..Hållare	5
0060								
0070	5	86 67 370			1	.Mounting kit	.Monteringssats	4
0080	5A	40 48 401			2	..Clamp	..Klämma	5
0090	6	73 35 540			2	..Washer	..Bricka	5
0100	7	*79 73 142*		NLS - USE 7975774	6	..Screw	..Skruv	5
0110	8	79 76 988			3	..Screw	..Skruv	5
0120	9	80 19 564			6	..Screw	..Skruv	5
0130	10	80 19 648			2	..Screw	..Skruv	5
0140	11	80 74 098			3	..Nut	..Mutter	5
0150	12	86 70 242			2	..Spacer tube	..Distansrör	5
0160	13	86 70 259			6	..Washer	..Bricka	5
0170								
0180	15	82 84 804		LH	1	Side shield	Sidoskköld	2
0190				See page 8A-163, 5-G20				
0200	15	82 84 796		RH	1	Side shield	Sidoskköld	2
0210				See page 8A-163, 5-G20				
0220	16	86 66 679	S	LH	1	.Protective foil	.Skyddsfolie	9
0230	16	86 66 653	S	RH	1	.Protective foil	.Skyddsfolie	9
0240	17	86 66 687	S	LH	1	.Protective foil	.Skyddsfolie	9
0250	17	86 66 661	S	RH	1	.Protective foil	.Skyddsfolie	9
0260								
0270	18	82 84 788		See page 8A-163, 5-G20	1	Outer casing	Hölje	3
0280	19	86 67 214	S	LH	1	.Protective foil	.Skyddsfolie	9
0290	19	86 67 206	S	RH	1	.Protective foil	.Skyddsfolie	9
0300	20	86 71 976			2	Rail	Skena	6
0310	21	86 70 226			2	Rail	Skena	6
0320	22	86 67 479			12	Rivet	Nit	3
0330	23	86 57 975			18	Screw	Skruv	5
0340	24	86 63 494			14	Washer	Bricka	5
0350	25	92 68 616			14	Clip	Clips	5
0360	26	86 70 218			4	Cover moulding	Täcklist	3
0370	27	86 70 309			1	Cover	Täckning	3
0380	28	86 62 603			4	Seal	Tätning	5
0390	29	86 68 618			1	Bracket	Fäste	5
0400	30	86 67 479			2	Rivet	Nit	3
0410	31	70 80 999			2	Washer	Bricka	5
0420	32	*40 05 237*		NLS - USE 4008504, 7982325	10	Nut	Mutter	5
0430	33	79 77 485			10	Screw	Skruv	5
0440	34	86 70 515			1	Stay	Stag	5
0450	35	86 70 275		LH	1	Bracket	Konsol	5
0460	35	86 70 267		RH	1	Bracket	Konsol	5
0470	36	86 70 531		LH	1	Protection	Skydd	5
0480	36	86 70 523		RH	1	Protection	Skydd	5
0490	37	70 80 999			4	Washer	Bricka	5
0500	38	90 87 040			4	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-E10

External details, glass, sealings

5CS Aero 1993-

Utvändiga detaljer, glas, tätningslister

5CS Aero 1993-

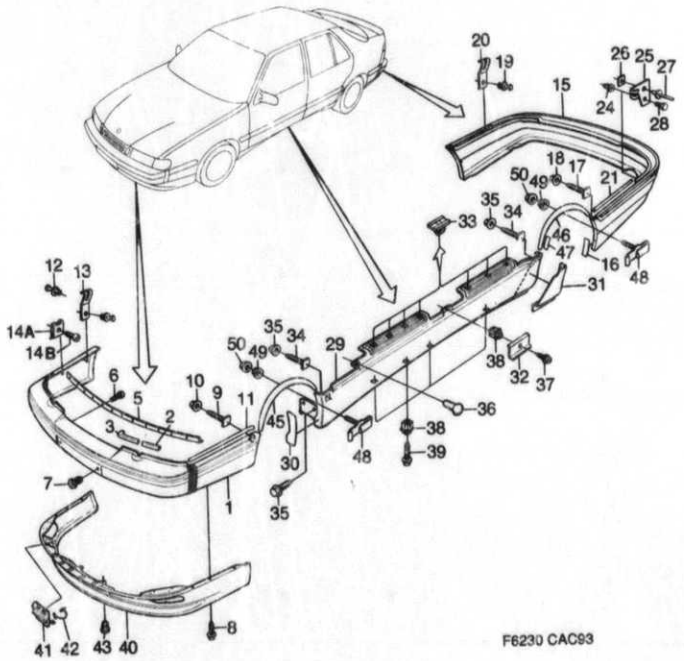

0997	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	44 35 178			1	Outer casing	Hölje	3
0020	2	43 80 036			2	Seal	Tätning	5
0030	3	40 96 756		LH	1	Seal	Tätning	5
0040	3	40 96 749		RH	1	Seal	Tätning	5
0060	5	90 81 282			2	Attaching rail	Fästskena	6
0070	6	44 46 290			24	Screw	Skruv	5
0080	7	90 87 040			4	Nut	Mutter	5
0090	8	92 88 846			7	Nut	Mutter	5
0100	9	69 59 464			2	Screw	Skruv	5
0110	10	73 99 488			2	Nut	Mutter	5
0120	11	44 47 611		LH (4380572)	1	Sealing strip	Tätningslist	5
0130	11	44 47 603		RH (4380564)	1	Sealing strip	Tätningslist	5
0140	12	86 67 479			6	Rivet	Nit	3
0150	13	43 42 275			6	Attaching spring	Fästfjäder	5
0160	14A	79 77 523			2	Clip	Clips	5
0170	14B	79 77 465			2	Screw	Skruv	5
0180								
0190	15	82 85 413		See page 8A-163, 5-G20	1	Outer casing	Hölje	3
0200	16	86 67 214		LH	1	.Protective foil	.Skyddsfolie	9
0210	16	86 67 206		RH	1	.Protective foil	.Skyddsfolie	9
0220	17	40 87 151			4	Screw	Skruv	5
0230	18	73 99 488			4	Nut	Mutter	5
0240	19	86 67 479			6	Rivet	Nit	3
0250	20	43 42 275			6	Attaching spring	Fästfjäder	5
0260	21	44 47 637		LH (4380598)	1	Sealing strip	Tätningslist	5
0270	21	44 47 629		RH (4380580)	1	Sealing strip	Tätningslist	5
0280	24	69 11 804			6	Bushing	Bussning	4
0290	25	44 48 874		LH	1	Attaching bracket	Fästvinkel	5
0300	25	44 48 866		RH	1	Attaching bracket	Fästvinkel	5
0310	26	92 30 293			2	Washer	Bricka	5
0320	27	93 49 514			2	Rivet	Nit	5
0330	28	79 77 465			2	Screw	Skruv	5
0340								
0350	29	82 85 439		LH	1	Sill cover	Tröskelbreddare	2
0360				See page 8A-163, 5-G20				
0370	29	82 85 421		RH	1	Sill cover	Tröskelbreddare	2
0380				See page 8A-163, 5-G20				
0390	30	44 47 124		LH	1	.Protective foil	.Skyddsfolie	9
0400	30	44 47 116		RH	1	.Protective foil	.Skyddsfolie	9
0410	31	86 62 843		LH	1	.Protective foil	.Skyddsfolie	9
0420	31	86 62 835		RH	1	.Protective foil	.Skyddsfolie	9
0430	32	42 94 062			2	Cover washer	Täckbricka	5
0440	33	41 02 000			14	Clamp	Klämma	5
0450	34	69 59 464			4	Screw	Skruv	5
0460	35	73 99 488			4	Nut	Mutter	5
0470	36	96 68 153			2	Clip	Clips	5
0480	37	97 78 952			2	Screw	Skruv	5
0490	38	40 08 594			12	Nut	Mutter	5
0500	39	79 82 325			14	Screw	Skruv	5
0510								
0520	40	44 35 186			1	Spoiler	Spoiler	3
0530	41	43 42 283			1	Cover	Täcklock	4
0540	42	69 60 926			1	Bracket	Hållare	5
0550	43	90 87 040			2	Nut	Mutter	5
0560								
0570	45	44 35 137		LH	1	Mudguard widener	Skärmbreddare	2
0580	45	44 35 129		RH	1	Mudguard widener	Skärmbreddare	2
0590								
0600	46	82 85 447		LH	1	Mudguard widener	Skärmbreddare	2
0610				See page 8A-167, 5-G24				
0620	46	82 85 454		RH	1	Mudguard widener	Skärmbreddare	2
0630				See page 8A-167, 5-G24				
0640	47	86 63 270		LH	1	.Protective foil	.Skyddsfolie	9
0650	47	86 63 262		RH	1	.Protective foil	.Skyddsfolie	9
0660	48	40 90 197			14	Clip	Clips	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E12

External details, glass, sealings
5CS Aero 1993-

Utvändiga detaljer, glas, tätningslister
5CS Aero 1993-

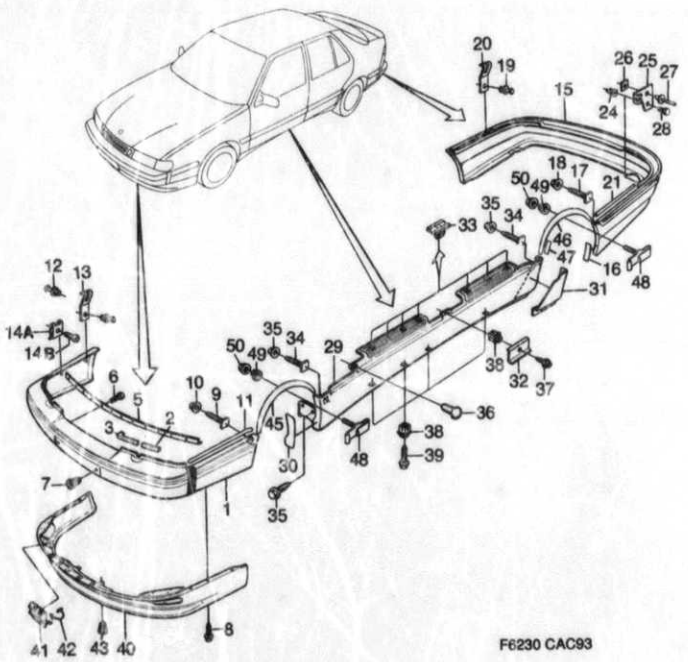

F6230 CAC93

0997	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0670	49	92 78 151			14	Bushing	Bussning	5
0680	50	73 99 488			14	Nut	Mutter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E14 External mirror / Utvändiga backspeglar

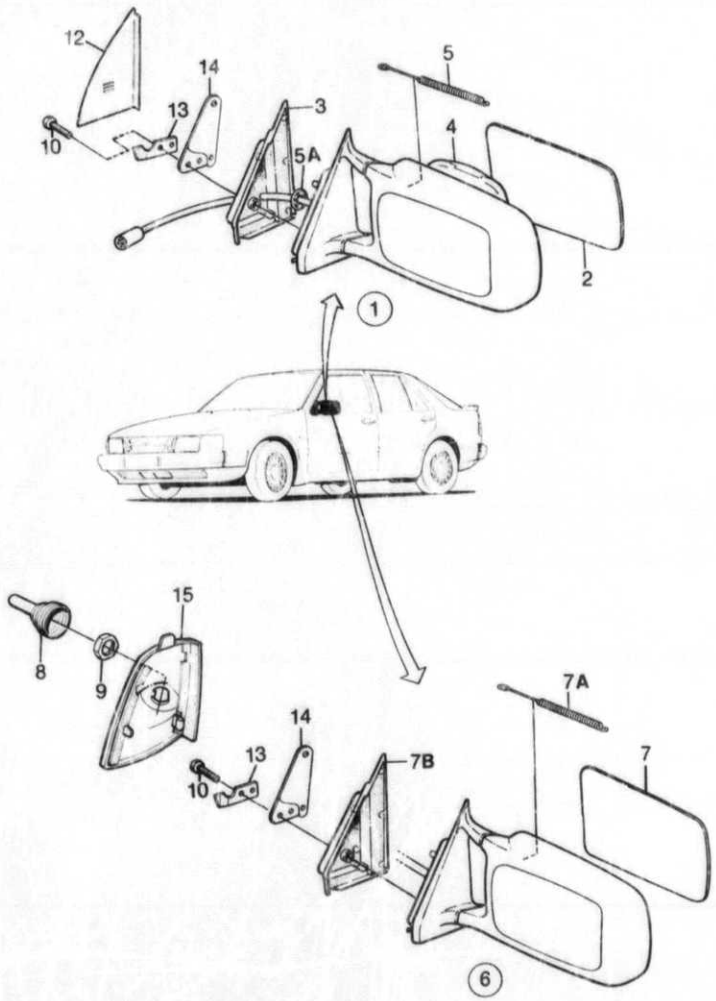

F3710 - CAC90

1000	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	96 61 307		37) LH, WIDE ANGLE, SE, FI, EU, ME, FE, BR	1	Rear view mirror	Backspegel	4
0030	1	96 61 364		37) RH, CONVEX GLASS SE, FI, EU, ME, FE,JP,BR	1	Rear view mirror	Backspegel	4
0050	1	96 61 323		37) LH, FLAT GLASS, US, CA	1	Rear view mirror	Backspegel	4
0070	1	96 61 380		37) RH, CONVEX GLASS, US, CA	1	Rear view mirror	Backspegel	4
0090	1	96 61 331		37) LH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0100	1	96 61 364		37) RH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0110	1	96 61 208		37) LH, FOR RHD, CONVEX GLASS, GB, ME, FE	1	Rear view mirror	Backspegel	4
0130	1	96 61 240		37) RH FOR RHD, WIDE ANGLE, GB	1	Rear view mirror	Backspegel	4
0150	1	96 61 216		37) -1991, LH FOR RHD FLAT GLASS, AU	1	Rear view mirror	Backspegel	4
0170	1	96 61 208		37) 1992-, LH FOR RHD CONVEX GLASS, AU	1	Rear view mirror	Backspegel	4
0190	1	96 61 257		37) RH FOR RHD, FLAT GLASS, AU	1	Rear view mirror	Backspegel	4
0210	1	96 61 265		37) RH FOR RHD CONVEX GLASS, ME, FE	1	Rear view mirror	Backspegel	4
0230	1	96 61 208		37) LH FOR RHD, JP, SE,	1	Rear view mirror	Backspegel	4
0240	1	96 61 265		37) RH FOR RHD, JP, SE	1	Rear view mirror	Backspegel	4
0250	1	85 47 317		37,267) I See page 8A-155, 5-G12	1	Rear view mirror kit	Backspegelsats	4
0270	1	85 47 325		37,267) I, RHD See page 8A-155, 5-G12	1	Rear view mirror kit	Backspegelsats	4
0290	1	43 68 593		37,268) I See page 8A-155, 5-G12	1	Rear view mirror kit	Backspegelsats	4
0310	1	43 68 601		37,268) I, RHD See page 8A-155, 5-G12	1	Rear view mirror kit	Backspegelsats	4
0330		85 48 109		2) -1992, I, MIRRORS, WINDOWS, ELECTRIC See page 8A-155, 5-G12	1	Cable harness kit	Ledningsnätssats	5
0350		85 48 760		2) 1993-, I, MIRRORS, WINDOWS, ELECTRIC See page 8A-155, 5-G12	1	Cable harness kit	Ledningsnätssats	5
0390	2	97 97 044		LH, WIDE ANGLE, SE, FI, EU, ME, BR	1	.Mirror glass	.Spegelglas	3
0410	2	97 97 069		RH, CONVEX, SE, FI, EU, ME, BR	1	.Mirror glass	.Spegelglas	3
0430	2	97 97 093		-1990, LH, FLAT, US,CA	1	.Mirror glass	.Spegelglas	3
0440	2	97 97 101		-1990, RH, CONVEX, US,CA	1	.Mirror glass	.Spegelglas	3
0450	2	95 91 868		1991-, LH, FLAT, US, CA	1	.Mirror glass	.Spegelglas	3
0460	2	*95 91 660*		1991-, RH, CONVEX, US,CA NLS - USE 9797101	1	.Mirror glass	.Spegelglas	3
0470	2	97 97 051		LH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0480	2	97 97 069		RH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0490	2	97 97 051		LH FOR RHD, CONVEX, GB	1	.Mirror glass	.Spegelglas	3
0510	2	97 97 077		RH FOR RHD, WIDE ANGLE, GB	1	.Mirror glass	.Spegelglas	3
0530	2	97 97 051		LH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0550	2	97 97 069		RH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0570	2	97 97 093		-1991, LH FOR RHD, FLAT, AU	1	.Mirror glass	.Spegelglas	3

2. Front Främre
37. Electrically adjustable Elmanövrerad
267. Ch. --N1037677
268. Ch. N1037678--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E16 External mirror / Utvändiga backspeglar

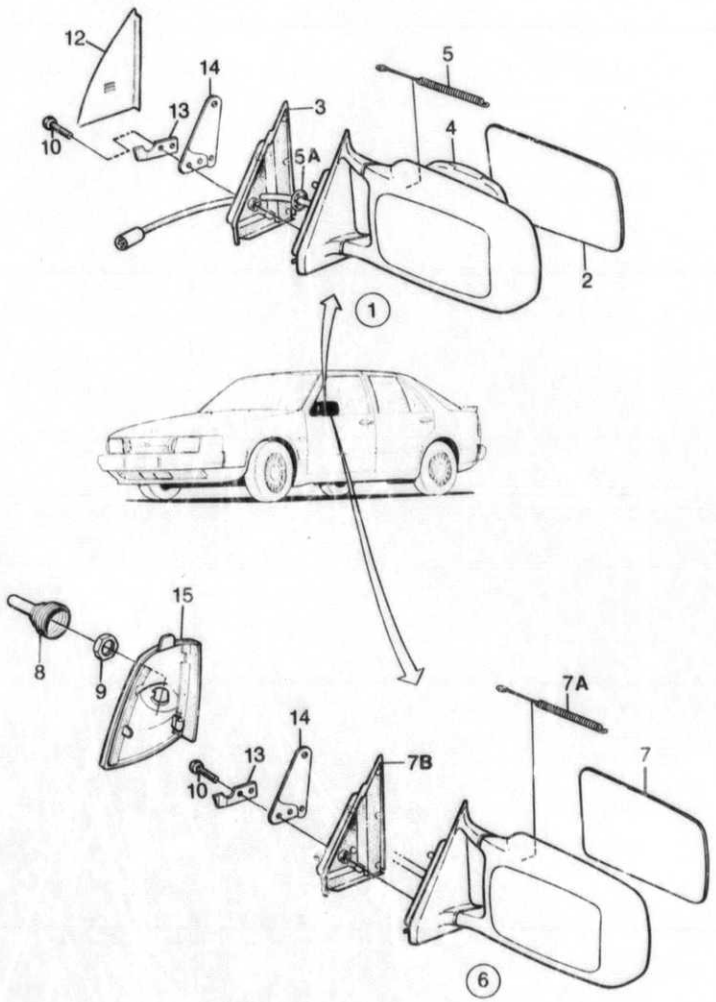

F3710 - CAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	2	97 97 051		1992-, LH FOR RHD,CONVEX AU	1	.Mirror glass	.Spegelglas	3
0600								
0610	2	97 97 119		RH FOR RHD, FLAT, AU	1	.Mirror glass	.Spegelglas	3
0620								
0630	3	96 61 448		LH	1	.Gasket	.Packning	5
0640	3	96 61 455		RH	1	.Gasket	.Packning	5
0650	4	97 76 584			1	.Drive unit	.Drivenhet	5
0660	5	94 72 580			2	.Spring	.Fjäder	5
0670	5A	42 60 568		1991-	1	.Lock washer	.Spärrbricka	5
0680								
0690	6	96 78 749		LH FOR RHD, GB, SE, ME, FE	1	Mirror	Spegel	3
0700								
0710	6	96 78 764		-1992, RH FOR RHD, GB	1	Mirror	Spegel	3
0720	6	95 91 108		RH FOR RHD, GB, HEATED	1	Mirror	Spegel	3
0730	6	96 78 798		LH FOR LHD, SE, FI, EU	1	Mirror	Spegel	3
0740								
0750	6	96 78 798		LH FOR LHD, FE	1	Mirror	Spegel	3
0760	6	96 78 822		RH FOR LHD, SE, FI, EU, JP	1	Mirror	Spegel	3
0770								
0780	6	96 78 822		RH FOR LHD, FE	1	Mirror	Spegel	3
0790	6	*96 78 756*		-1991, LH FOR RHD, AU NLS	1	Mirror	Spegel	3
0800								
0810	6	96 78 749		1992-, LH FOR RHD, AU	1	Mirror	Spegel	3
0820	6	*96 78 772*		RH FOR RHD, AU NLS	1	Mirror	Spegel	3
0830	6	96 78 780		-1992, RH FOR RHD, ME, FE, SE	1	Mirror	Spegel	3
0840	6	*96 78 814*		-1992, LH, JP NLS	1	Mirror	Spegel	3
0850	6	96 78 749		LH FOR RHD, JP	1	Mirror	Spegel	3
0860	6	96 78 780		RH FOR RHD, JP	1	Mirror	Spegel	3
0870								
0880	7	98 33 559		LH, WIDE ANGLE, LHD SE, FI, EU, ME, FE	1	.Mirror glass	.Spegelglas	3
0890								
0900	7	98 33 575		RH, CONVEX, LHD SE, FI, EU, ME, FE -1992,RHD SE, ME, FE, JP	1	.Mirror glass	.Spegelglas	3
0910								
0920								
0930	7	98 33 591		LH, CONVEX RHD GB, ME, FE, JP, SE -1992, LHD JP	1	.Mirror glass	.Spegelglas	3
0940								
0950								
0960	7	98 37 246		RH, WIDE ANGEL -1992, RHD GB	1	.Mirror glass	.Spegelglas	3
0970								
0980	7	97 97 077		RH, WIDE ANGEL, HEATED RHD GB	1	.Mirror glass	.Spegelglas	3
0990								
1000	7	98 33 518		-1991, LH, FLAT RHD AU	1	.Mirror glass	.Spegelglas	3
1010								
1020	7	98 33 591		1992-, LH, CONVEX RHD AU	1	.Mirror glass	.Spegelglas	3
1030								
1040	7	98 33 617		RH, FLAT RHD AU	1	.Mirror glass	.Spegelglas	3
1050								
1060								
1070	7A	94 72 580			4	.Spring	.Fjäder	5
1080	7B	96 61 448		-1990, LH	1	.Gasket	.Packning	5
1090	7B	96 61 455		-1990, RH	1	.Gasket	.Packning	5
1100	7B	95 90 423		1991-, LH	1	.Gasket	.Packning	5
1110	7B	95 90 449		1991-, RH	1	.Gasket	.Packning	5
1120	8	96 78 608			2	Rubber bellows kit	Gummibälgsats	5
1130	9	96 78 616			2	Nut	Mutter	5
1140	10	79 77 689			6	Screw	Skruv	5
1150	12	*96 94 704*		267) LH NLS - USE 4268389	1	Cover	Täcklock	5
1150								
1160	12	96 94 696		267) RH	1	Cover	Täcklock	5
1170	12	42 68 389		268) LH	1	Cover	Täcklock	5

267. Ch. -N1037677
268. Ch. N1037678-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E18 *External mirror* *Utvändiga backspeglar*

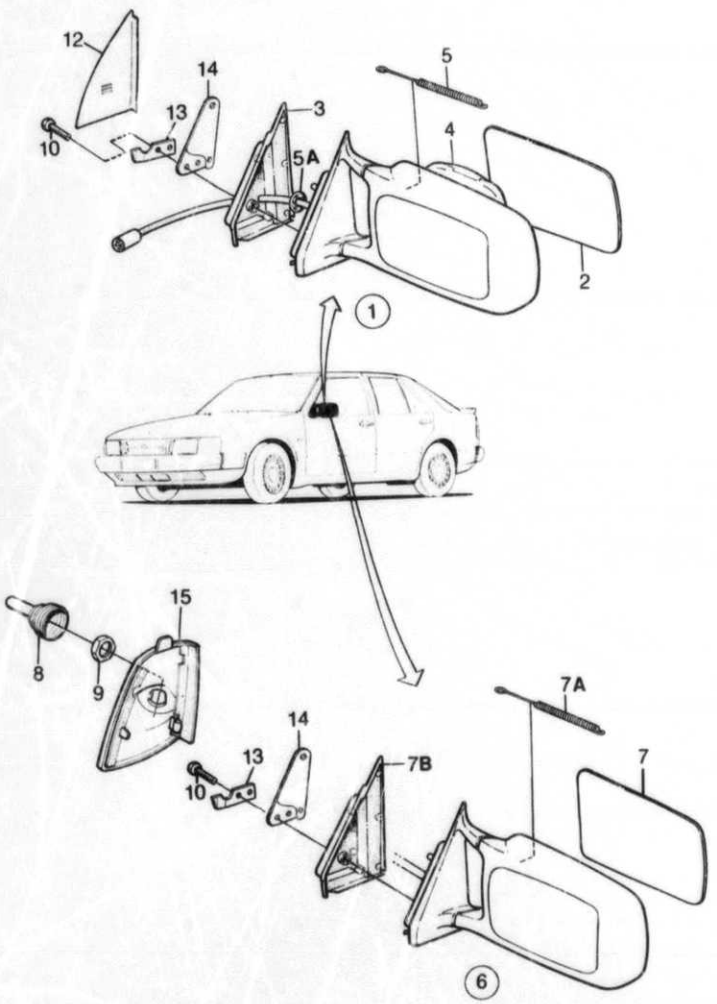

F3710 - CAC90

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1180	12	42 68 397		268) RH	1	Cover	Täcklock	5
1190	13	96 58 972		LH	1	Reinforcement	Förstärkning	3
1200	13	96 58 980		RH	1	Reinforcement	Förstärkning	3
1210	14	96 71 926		LH	1	Gasket	Packning	5
1220	14	96 71 934		LH	1	Gasket	Packning	5
1230	15	*96 94 720*		267) LH NLS - USE 4268421	1	Cover	Täcklock	4
1240	15	*96 94 712*		267) RH NLS - USE 4268439	1	Cover	Täcklock	4
1250	15	42 68 421		268) LH	1	Cover	Täcklock	4
1260	15	42 68 439		268) RH	1	Cover	Täcklock	4

267. Ch. --N1037677
268. Ch. N1037678--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E20

External details, glass, sealings
Windscreen

Utvändiga detaljer, glas, tätningslister
Vindruta

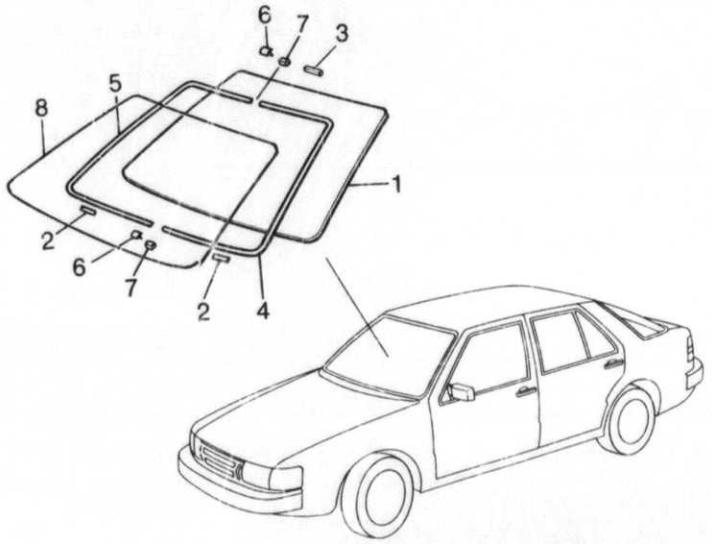

F3711 - CAC90

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 050		COLOURED	1	Windscreen	Vindruta	3
0020				See page 8A-151, 5-G08				
0030								
0040	1	74 97 043		COLOURED	1	Windscreen	Vindruta	3
0050				WITH CUT FOR CH.NUMBER				
0060				See page 8A-151, 5-G08				
0110								
0120								
0130	1	*82 84 028*		-1991, AU	1	Windscreen	Vindruta	3
0140				See page 8A-151, 5-G08				
0140				NLS - USE 8284531,				
0140				8285272				
0150								
0160	1	82 85 272		1992-,261), AU	1	Windscreen	Vindruta	3
0170				See page 8A-151, 5-G08				
0180								
0190	1	*82 84 903*		262)-1992, COLOURED, AU	1	Windscreen	Vindruta	3
0200				See page 8A-151, 5-G08				
0200				NLS - USE 7497050				
0210								
0220	1	74 97 050		1993-,290) COLOURED, AU	1	Windscreen	Vindruta	3
0230				See page 8A-151, 5-G08				
0240								
0250	1	74 97 043		291)-1993, COLOURED, AU	1	Windscreen	Vindruta	3
0260				WITH CUT FOR CH.NUMBER				
0270				See page 8A-151, 5-G08				
0280								
0330		82 84 531		See page 8A-163, 5-G20	1	Mounting kit windscreen	Monteringssats vindruta	3
0340								
0350	2	69 91 244		-1990	2	Spacer	Distans	3
0360	2	69 91 244		1993	2	Spacer	Distans	3
0370	3	40 13 603		-1990	2	Spacer	Distans	3
0380	3	40 13 603		1991-	4	Spacer	Distans	3
0390	4	92 78 318		LH	1	Strip holder	Hållarlist	3
0400	5	92 78 300		RH	1	Strip holder	Hållarlist	3
0410	6	92 78 334			2	Connector	Skarvstycke	3
0420	7	92 62 916			2	Clip	Clips	5
0430	8	*92 78 326*		164) NLS - USE 4250320	1	Decor strip	Dekorlist	3
0440	8	42 50 320		165)	1	Decor strip	Dekorlist	3

164. Ch. --M1005771, --M2003946
165. Ch. M1005772--, M2003947--
199. Ch. M1017620--, M2011731--
261. Ch. --N1034646
262. Ch. N1034647--
290. Ch. --P1021697
291. Ch. P1021698--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E22 *Rear window* *Bakruta*

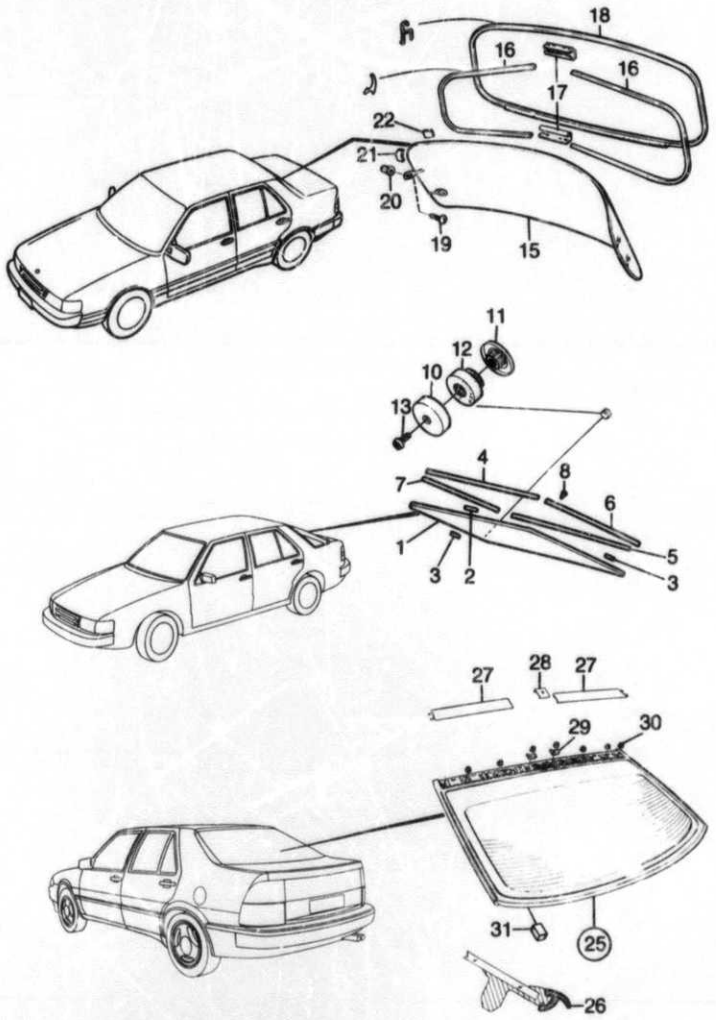

F4338 CAC90

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 580		5D COLOURED	1	Rear window	Bakruta	4
0020				See page 8A-163, 5-G20				
0030	1	82 84 598		5D COLOURED	1	Rear window	Bakruta	4
0040				GB, WITH WIPER HOLE				
0050				See page 8A-163, 5-G20				
0060	2	41 71 229		-1991, 5D UPPER	2	.Spacer	.Distans	3
0070	2	40 13 603		1992-, 5D UPPER	2	.Spacer	.Distans	3
0080	3	69 56 734		5D LH, RH	3	.Spacer	.Distans	3
0090	4	*40 96 657*		211) 5D UPPER NLS - USE 4254348	1	Decor strip	Dekorlist	3
0090								
0100	4	42 54 348		212) 5D UPPER	1	Decor strip	Dekorlist	3
0110	5	40 14 163		5D LOWER	1	Decor strip	Dekorlist	3
0120	6	40 14 601		5D LH	1	Decor strip	Dekorlist	3
0130	7	40 14 593		5D RH	1	Decor strip	Dekorlist	3
0140	8	79 72 425		5D	8	Screw	Skruv	5
0150	10	69 48 574		5D	1	Cover	Lock	5
0160	11	69 37 951		5D	1	Cover	Lock	5
0170	12	69 48 566		5D	1	Grommet	Genomföring	5
0180	13	79 65 833		5D	1	Screw	Skruv	5
0190								
0200	15	82 84 069		4D	1	Rear window	Bakruta	4
0210				See page 8A-159, 5-G16				
0240	16	69 62 815		4D LH	1	.Strip holder	.Hållarlist	3
0250	16	69 62 807		4D RH	1	.Strip holder	.Hållarlist	3
0260	17	92 78 334		4D	2	.Connector	.Skarvstycke	3
0270	18	69 48 871		4D	1	.Cover moulding	.Täcklist	3
0280	19	*79 67 771*		-1992, 4D NLS - USE 7970601	4	Screw	Skruv	5
0290	19	79 70 601		1993, 4D	4	Screw	Skruv	5
0300	20	79 75 261		4D	4	Nut	Mutter	5
0310	21	69 91 244		4D	4	Spacer	Distans	3
0320				PART OF 8284069, 7497118				
0330	22	69 92 028		4D	3	Spacer	Distans	3
0340				PART OF 8284069, 7497118				
0350								
0360	25	90 88 527		5CS	1	Rear window	Bakruta	4
0380	26	43 04 341		5CS	1	.Seal	.Tätning	5
0390	27	90 84 773		192) 5CS LH	1	Decor strip	Dekorlist	3
0400	27	90 84 765		192) 5CS RH	1	Decor strip	Dekorlist	3
0410	27	90 83 858		27) 5CS LH	1	Decor strip	Dekorlist	3
0420	27	90 83 841		27) 5CS RH	1	Decor strip	Dekorlist	3
0430	28	90 83 866		192) 5CS	1	Connection	Skarv	4
0440	28	90 83 874		192,193) 5CS	1	Connection	Skarv	4
0450	29	90 89 517		5CS	2	Washer	Bricka	5
0460	30	79 77 911		317) 5CS	12	Nut	Mutter	5
0470	30	73 96 423		318) 5CS	8	Nut	Mutter	5
0480	31	40 96 343		258) 5CS	2	Seal	Tätning	5

27. For cars with high mounted stop light — För bilar med högt monterat bromsljus
192. For cars without high mounted stop light — För bilar utan högt monterat bromsljus
193. For cars with rear window wiper. — För bilar med bakrutetorkare.
211. Ch. --M1019336
212. Ch. M1019337--
258. Ch. N1019796--
317. Body --4115218
318. Body 4115219--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-E24 Doors and side windows — Dörr- och sidorutor

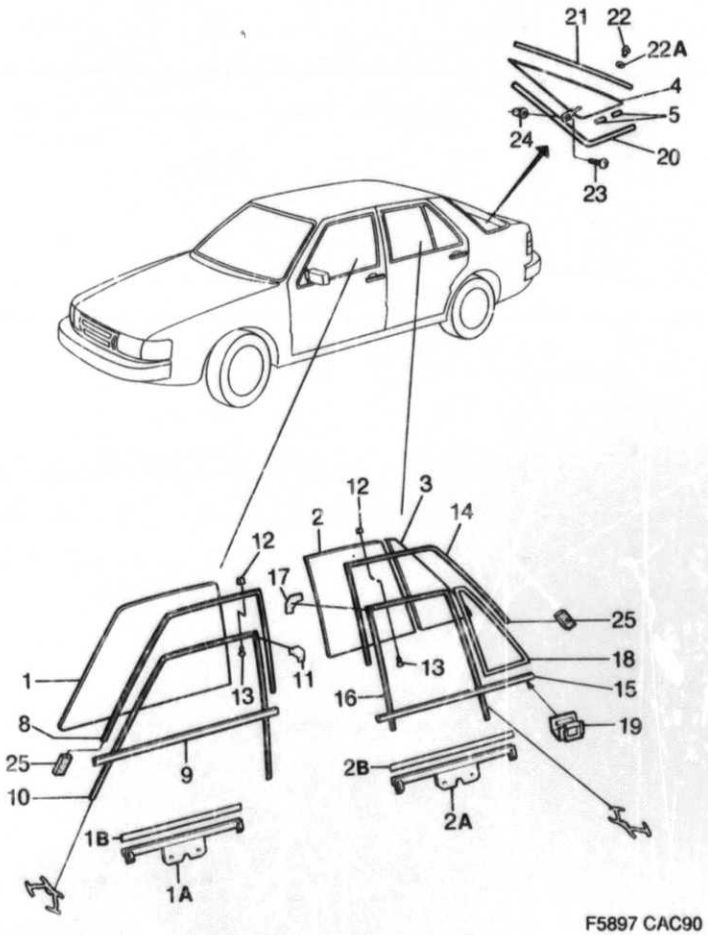

F5897 CAC90

1075	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*92 66 990*		-1990, LH NLS - USE 4304176	1	Door window	Dörruta	4
0020	1	*92 66 982*		-1990, RH NLS - USE 4304168	1	Door window	Dörruta	4
0040	1	43 04 176		1991-, LH	1	Door window	Dörruta	4
0050	1	43 04 168		1991-, RH	1	Door window	Dörruta	4
0130	1A	69 56 700			1	.Window bracket	.Rutfäste	5
0150	1B	92 63 708			1	.Spacer	.Mellanlägg	5
0170	2	*92 67 014*		-1990, LH NLS - USE 4304192	1	Door window	Dörruta	5
0180	2	*92 67 006*		-1990, RH NLS - USE 4304184	1	Door window	Dörruta	5
0200	2	43 04 192		1991-, LH	1	Door window	Dörruta	4
0210	2	43 04 184		1991-, RH	1	Door window	Dörruta	4
0260	2A	69 56 700			1	.Window bracket	.Rutfäste	5
0270	2B	92 63 708			1	.Spacer	.Mellanlägg	5
0290	3	92 67 055		87) LH	1	Door window	Dörruta	5
0300	3	*40 94 751*		88) -1991, LH NLS - USE 4303251	1	Door window	Dörruta	5
0310	3	*43 04 218*		1991, LH, LA NLS - USE 4303251	1	Door window	Dörruta	5
0320	3	*92 67 048*		89) RH NLS - USE 4303244	1	Door window	Dörruta	5
0330	3	*40 94 744*		91)-1991, RH NLS - USE 4303244	1	Door window	Dörruta	5
0340	3	*43 04 200*		1991, RH, LA NLS - USE 4303244	1	Door window	Dörruta	5
0360	3	43 03 251		1992-, LH	1	Door window	Dörruta	5
0370	3	43 03 244		1992-, RH	1	Door window	Dörruta	5
0400				1992-		.Seal	.Tätning	
0410				1992-		.Clip	.Clips	
0430	4	82 83 897		5D, LH	1	Side window	Sidoruta	5
0440				See page 8A-151, 5-G08				
0450	4	82 83 905		5D, RH	1	Side window	Sidoruta	5
0460				See page 8A-151, 5-G08				
0480	5	92 59 557	S		2	.Spacer	.Distans	3
0500	8	92 61 132		2) LH, BLACK/CHROME	1	Decor frame	Dekorram	3
0510	8	92 61 124		2) RH, BLACK/CHROME	1	Decor frame	Dekorram	3
0520	8	69 92 630		2) LH, BLACK	1	Decor frame	Dekorram	3
0530	8	69 92 622		2) RH, BLACK	1	Decor frame	Dekorram	3
0540	9	40 14 171		2) LH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0550	9	40 14 189		2) RH, BLACK/CHROME	1	Decor strip	Dekorlist	4
0560	9	40 13 777		2) LH, BLACK	1	Decor strip	Dekorlist	4
0570	9	40 13 785		2) RH, BLACK	1	Decor strip	Dekorlist	4
0580	10	*69 91 095*		2)-1991, LH, DOOR FRAME NLS - USE 4171914	1	Seal	Tätning	5
0590	10	*69 91 087*		2)-1991, RH, DOOR FRAME NLS - USE 4171906	1	Seal	Tätning	5
0600	10	41 71 914		2)1992-, LH, DOOR FRAME	1	Seal	Tätning	5


2. Front Främre
87. Ch. --L1007641, --L2005700, --L8001174
88. Ch. L1007642--, L2005701 -, L8001175--
89. Ch. --L1007322, --L2005486, --L8001070
91. Ch. L1007323--, L2005487--, L8001071--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

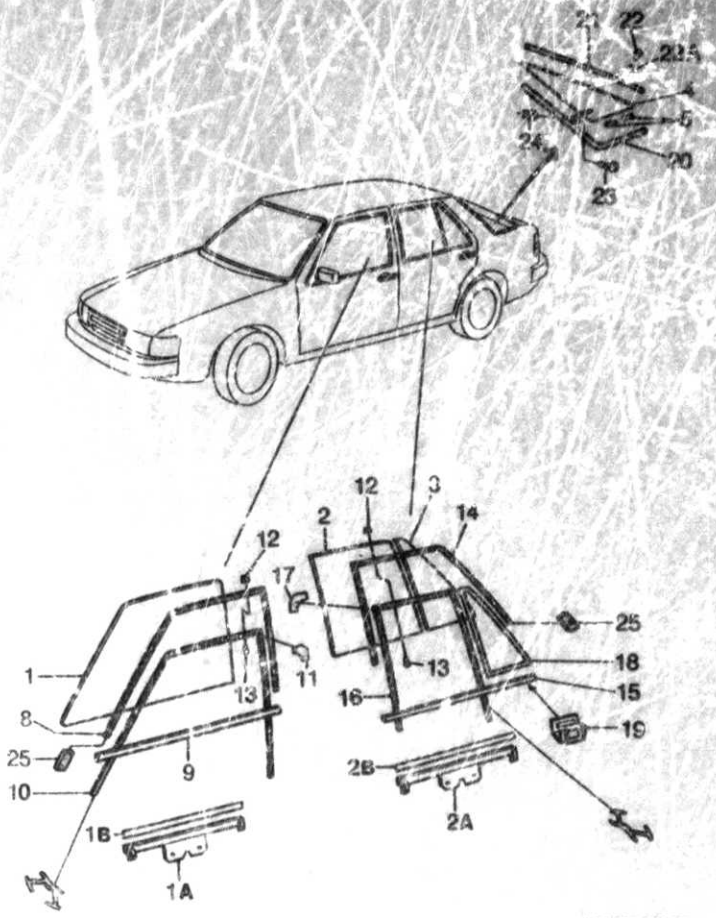


F5897 CAC90

5 - 02. Door and side windows

Dörr- och sidofönster

Ref	Part number	Q	Description	Anm	Benämning
10	40 11 984	1	3)1992-, RH, DOOR FRAME	1	Bussl
11	40 11 976	1	3)1992-, LH, DOOR FRAME	1	Bussl
12	47 08 611	4	Clip	4	Clips
13	32 79 394	4	-1992, NLS - USE 8601	4	Skruv
13	90 56 891	4	1993-	4	Skruv
14	92 61 957	1	3) LH, BLACK/CHROME	1	Dekorlist
14	92 61 949	1	3) RH, BLACK/CHROME	1	Dekorlist
14	90 92 670	1	3) LH, BLACK	1	Dekorlist
14	90 92 689	1	3) RH, BLACK	1	Dekorlist
15	40 14 269	1	3)-1991 LH, BLACK/CHROME	1	Dekorlist
15	40 14 250	1	3)-1991 RH, BLACK/CHROME	1	Dekorlist
15	40 14 932	1	3)1992-, LH, BLACK/CHROME	1	Dekorlist
15	40 09 604	1	3)1992-, RH, BLACK/CHROME	1	Dekorlist
15	40 14 262	1	3)-1991, LH, BLACK	1	Dekorlist
15	40 14 270	1	3)-1991, RH, BLACK	1	Dekorlist
15	40 09 612	1	3)1992-, LH, BLACK	1	Dekorlist
15	40 09 596	1	3)1992-, RH, BLACK	1	Dekorlist
16	90 91 147	1	3)-1991, LH, DOOR FRAME	1	Bussl
16	90 91 163	1	3)-1991, RH, DOOR FRAME	1	Bussl
16	91 71 930	1	3)1992-, LH, DOOR FRAME	1	Bussl
16	91 71 922	1	3)1992-, RH, DOOR FRAME	1	Bussl
17	92 27 269	1	Seal	1	Tätning
18	92 90 001	1	-1992, LH	1	Sats
18	92 90 019	1	-1992, RH	1	Sats
19	92 83 591	2	-1992	2	Clips
20	92 74 895	1	5D, LH	1	Dekorlist
20	92 74 913	1	5D, RH	1	Dekorlist
21	92 77 294	1	5D, LH	1	Dekorlist
21	92 77 302	1	5D, RH	1	Dekorlist
22	79 70 901	8	5D	8	Skruv
22A	92 30 282	8	5D	8	Vinkel
23	79 87 771	2	5D, -1992, NLS - USE 79 70 901	2	Skruv
23	79 70 901	2	5D, 1993-	2	Skruv
24	73 75 201	2	5D	2	Mutter
25	40 10 336	8		8	Tätning

2. Front Främre
3. Rear Bakre
144. Ch. -L1015069, -L2012976
145. Ch. L1015070-, L2012977-

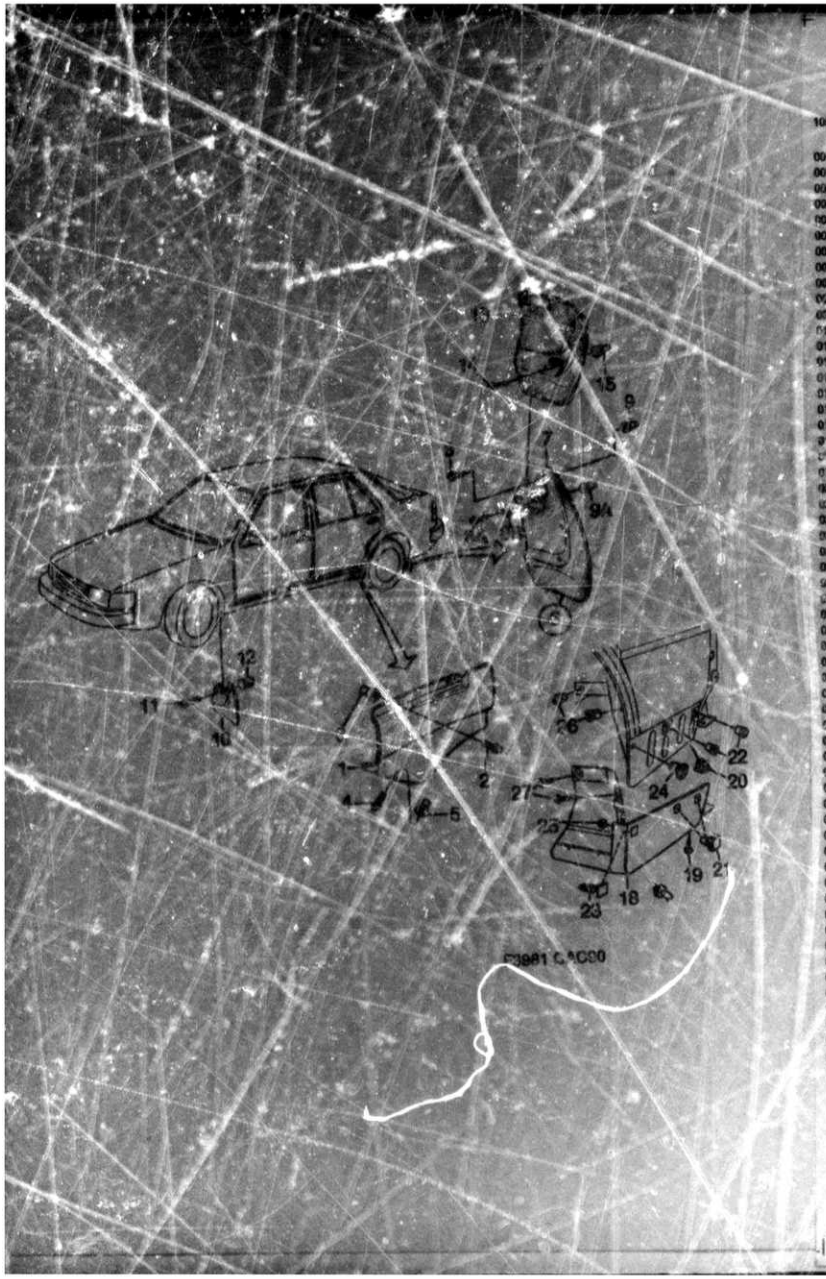

5-F04

External details, glass, sealings

Splash guard

Utvändiga detaljer, glas, tätningslister

Stänkskydd

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	*42 93 635*		-1990, LH NLS - USE 6961999	1	Protection	Skydd	5
1	*42 93 643*		-1990, RH NLS - USE 6961981	1	Protection	Skydd	5
2	95 71 118		-1990	6	Screw	Skruv	5
3	79 75 261		-1990	6	Nut	Mutter	5
4	79 73 175		-1990	4	Screw	Skruv	5
5	79 77 358		-1990	4	Press nut	Pressmutter	5
6	78 74 431		3) -1991	1	Baffle	Stänkskydd	3
6	96 98 440		See page 8A-151, 5-G08 3) -1991, LH	1	Baffle	Stänkskydd	3
6	96 98 457		See page 8A-159, 5-G16 3) -1991, RH	1	Baffle	Stänkskydd	3
6	82 84 341		See page 8A-159, 5-G16 3) 1992-	1	Baffle	Stänkskydd	3
6	82 84 663		See page 8A-151, 5-G08 3) 1992-, LH	1	Baffle	Stänkskydd	3
6	82 84 655		See page 8A-159, 5-G16 3) 1992-, RH	1	Baffle	Stänkskydd	3
7	92 69 036		See page 8A-159, 5-G16 3) -1991, LH	1	Baffle	Stänkskydd	3
7	92 68 020		3) -1991, RH	1	Baffle	Stänkskydd	3
7	40 99 776		3) 1992-, LH	1	Baffle	Stänkskydd	3
7	40 99 768		3) 1992-, RH	1	Baffle	Stänkskydd	3
8	*79 78 646*		-1991 NLS - USE 7972672, 6029944	10	Screw	Skruv	5
8	79 73 191		1992-,246)	4	Screw	Skruv	5
8	79 32 325		247)	4	Screw	Skruv	5
8A	79 82 325		1992-	4	Screw	Skruv	5
8B	82 73 468		1992-	2	Washer	Bricka	5
9	79 75 261		-1991	10	Nut	Mutter	5
9	79 75 261		1992-,246)	4	Nut	Mutter	5
9	79 82 655		247)	4	Press nut	Pressmutter	5
9A	90 87 040		1992-	4	Nut	Mutter	5
10	*96 98 416*		2) -1990, LH AND RH See page 8A-159, 5-G16 NLS - USE 8284721	1	Baffle	Stänkskydd	3
10	*96 98 424*		2) -1990, LH See page 8A-159, 5-G16 NLS - USE 8284747	1	Baffle	Stänkskydd	3
10	*96 98 432*		2) -1990, RH See page 8A-159, 5-G16 NLS - USE 8284739	1	Baffle	Stänkskydd	3
10	82 84 721		2) 1991-, LH AND RH See page 8A-159, 5-G16	1	Baffle	Stänkskydd	3
10	82 84 747		2) 1991-, LH See page 8A-159, 5-G16	1	Baffle	Stänkskydd	3
10	82 84 739		2) 1991-, RH See page 8A-159, 5-G16	1	Baffle	Stänkskydd	3
10	*92 79 415*		2) -1990, LH, FI NLS - USE 4008959	1	Baffle	Stänkskydd	4
10	92 79 407		2) -1990, RH, FI	1	Baffle	Stänkskydd	4
10	40 08 959		2) 1991-, LH, FI	1	Baffle	Stänkskydd	4
10	40 08 942		2) 1991-, RH, FI	1	Baffle	Stänkskydd	4
11	*79 81 947*		-1990, FI NLS - USE 7335540, 8019598	4	Screw	Skruv	5


2. Front Främre
3. Rear Bakre
199. Ch. M1017620-, M2011731--
246. Ch. -N1018481
247. Ch. N1018482--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

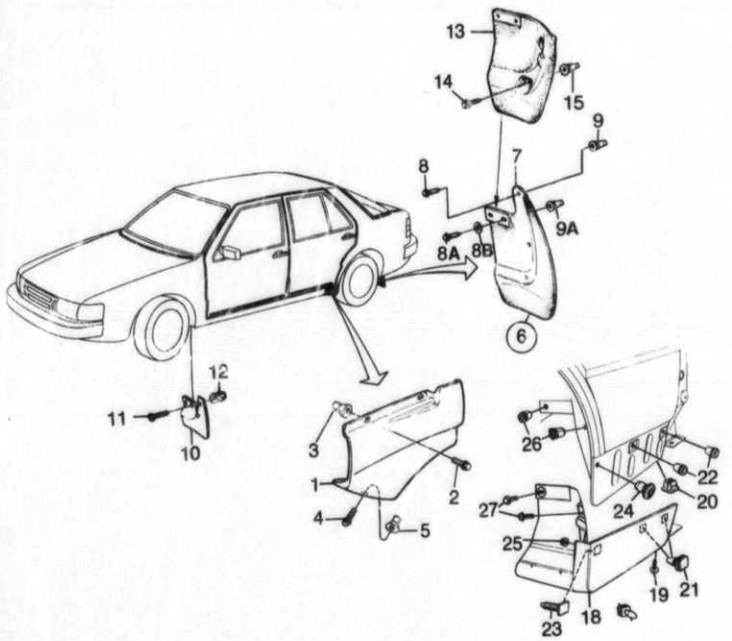

F3981 CAC90

External details, glass, sealings

5-F06 *Splash guard*

Utvändiga detaljer, glas, tätningslister

Stänkskydd

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510	11	79 82 325		1991-, FI	4	Screw	Skruv	5
0520	12	92 88 846		-1990, FI	4	Nut	Mutter	5
0530	12	90 87 040		1991-, FI	4	Nut	Mutter	5
0540								
0550	13	69 38 914		3,40) -1991, LH	1	Baffle	Stänkskydd	3
0560	13	69 38 906		3,40) -1991, RH	1	Baffle	Stänkskydd	3
0570	13	69 38 914		1993, 5CS AERO, LH	1	Baffle	Stänkskydd	3
0580	13	69 38 906		1993, 5CS AERO, RH	1	Baffle	Stänkskydd	3
0590	14	79 73 191		40) -1991	8	Screw	Skruv	5
0600	14	79 82 325		1993, 5CS AERO	4	Screw	Skruv	5
0610	15	79 75 261		40) -1991	8	Nut	Mutter	5
0620	15	40 08 504		1993, 5CS AERO	4	Nut	Mutter	5
0630								
0640	18	40 06 110		1992-, LH, 5D	1	Stone guard	Stenskottsskydd	5
0650	18	40 06 102		1992-, RH, 5D	1	Stone guard	Stenskottsskydd	5
0660	18	40 06 136		1992-, LH, 4D	1	Stone guard	Stenskottsskydd	5
0670	18	40 06 128		1992-, RH, 4D	1	Stone guard	Stenskottsskydd	5
0680	18	90 82 678		LH, 5CS	1	Stone guard	Stenskottsskydd	5
0690	18	90 82 660		RH, 5CS	1	Stone guard	Stenskottsskydd	5
0700	19	*79 72 953*		1992- NLS - USE 7922370, 8029944	2	Screw	Skruv	5
0710	20	*40 05 237*		1992- NLS - USE 4008504, 7982325	2	Nut	Mutter	5
0720	21	73 73 251		1992-	4	Clip	Clips	5
0730	22	73 73 269		1992-	4	Bushing	Bussning	5
0740	23	89 59 464		1992-	4	Screw	Skruv	5
0750	24	92 78 151		1992-	2	Bushing	Bussning	5
0760	25	73 99 488		1992-	2	Nut	Mutter	5
0770	26	79 75 261		1992-[illegible] 4D, 5D	4	Nut	Mutter	5
0780	26	79 82 655		247) 4D, 5D	4	Press nut	Pressmutter	5
0790	26	79 82 655		5CS	4	Press nut	Pressmutter	5
0800	27	79 77 465		1992-,246) 4D, 5D	4	Screw	Skruv	5
0810	27	79 82 325		247) 4D, 5D	4	Screw	Skruv	5
0820	27	79 82 325		5CS	4	Screw	Skruv	5
0830								
0840		82 84 572		1992-, LH, 5D	X	Stone guard kit	Stenskottsskyddsats	5
0850				See page 8A-167, 5-G24				
0860		82 84 564		1992-, RH, 5D	X	Stone guard kit	Stenskottsskyddsats	5
0870				See page 8A-167, 5-G24				
0880		82 84 556		1992-, LH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0890				See page 8A-167, 5-G24				
0900		82 84 549		1992-, RH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0910				See page 8A-167, 5-G24				


3. Rear Bakre
40. Not FI, CA, AU Ej FI, CA, AU
199. Ch. M1017620--, M2011731--
246. Ch. --N1018481
247. Ch. N1018482--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

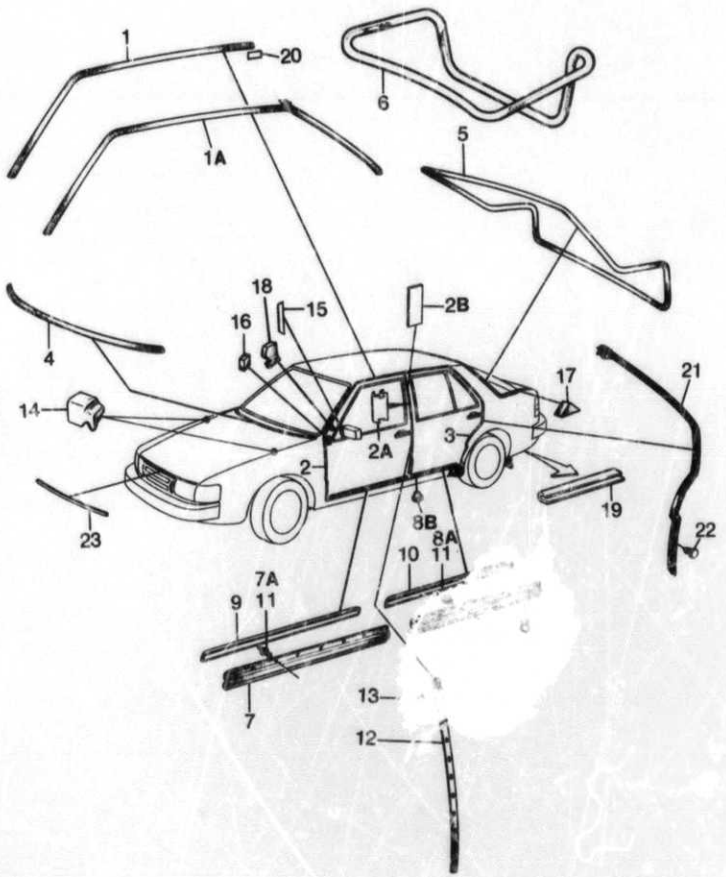

F4747 CAC90

5-F08

External details, glass, sealings

Other sealings

Utvändiga detaljer, glas, tätningslister

Övriga tätningslister

1100	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*40 88 969*		-1990, LH NLS - USE 4306114	1	Seal	Tätning	5
0020	1	*40 88 951*		-1990, RH NLS - USE 4306106	1	Seal	Tätning	5
0040	1	*43 03 210*		1991-,176) LH NLS - USE 4306114	1	Seal	Tätning	5
0050	1	43 03 202		1991-,176) RH	1	Seal	Tätning	5
0070	1	*43 03 848*		177)-1991 LH NLS - USE 4306114	1	Seal	Tätning	5
0080	1	*43 03 830*		177)-1991 RH NLS - USE 4306106	1	Seal	Tätning	5
0100	1	43 03 152		1992, 5D, 5CS LH	1	Seal	Tätning	5
0110	1	43 03 145		1992, 5D, 5CS RH	1	Seal	Tätning	5
0130	1	43 06 114		1993, 5D, 5CS LH	1	Seal	Tätning	5
0140	1	43 06 106		1993, 5D, 5CS RH	1	Seal	Tätning	5
0160	1A	*40 93 464*		1992, 4D LH NLS - USE 4306130	1	Seal	Tätning	5
0170	1A	40 93 456		1992, 4D RH	1	Seal	Tätning	5
0190	1A	43 06 130		1993, 4D LH	1	Seal	Tätning	5
0200	1A	43 06 122		1993, 4D RH	1	Seal	Tätning	5
0220	2	40 10 526		2,60) -1990 LH	1	Seal	Tätning	5
0230	2	40 10 518		2,60) -1990 RH	1	Seal	Tätning	5
0250	2	40 10 567		2,90) -1990 LH	1	Seal	Tätning	5
0260	2	40 10 559		2,90) -1990 RH	1	Seal	Tätning	5
0280	2	40 10 443		2,80) -1990 LH	1	Seal	Tätning	5
0290	2	40 10 435		2,80) -1990 RH	1	Seal	Tätning	5
0310	2	40 10 401		2,110) LH	1	Seal	Tätning	5
0320	2	40 10 393		2,110) RH	1	Seal	Tätning	5
0340	2A	84 12 215		-1992	28	Clip	Clips	5
0350	2B	43 05 777		1993	24	Tape	Tejp	5
0370	3	40 10 542		3,60) -1990 LH	1	Seal	Tätning	3
0380	3	40 10 534		3,60) -1990 RH	1	Seal	Tätning	3
0400	3	40 10 583		3,90) -1990 LH	1	Seal	Tätning	3
0410	3	40 10 575		3,90) -1990 RH	1	Seal	Tätning	3
0430	3	40 10 468		3,80) -1990 LH	1	Seal	Tätning	3
0440	3	40 10 450		3,80) -1990 RH	1	Seal	Tätning	3
0460	3	40 10 427		3,110) LH	1	Seal	Tätning	5
0470	3	40 10 419		3,110) RH	1	Seal	Tätning	5


2. Front Främre
3. Rear Bakre
60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart
176. Ch. --M1010650, --M2007048
177. Ch. M1010651--, M2007049--
199. Ch. M1017620--, M2011731--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

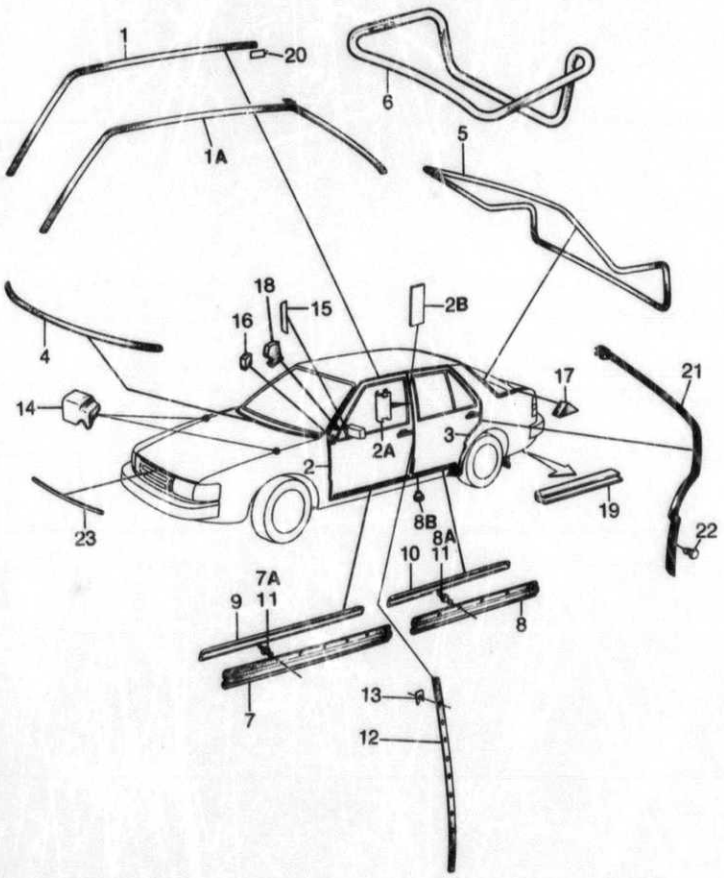

F4747 CAC90

5-F10

External details, glass, sealings

Other sealings

Utvändiga detaljer, glas, tätningslister

Övriga tätningslister

1100	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0490	4	40 14 577			1	Seal	Tätning	3
0500								
0510	5	69 63 045		5D	1	Seal	Tätning	4
0520	5	90 85 903		5CS	1	Seal	Tätning	4
0530	6	69 60 066		4D	1	Seal	Tätning	4
0540								
0550	7	*92 66 792*		2,128) NLS - USE 4092995	2	Seal	Tätning	3
0560	7	40 92 995		2,129) -1991	2	Seal	Tätning	3
0570	7	41 02 075		2) 1992-, LH	1	Seal	Tätning	3
0580	7	41 02 067		2) 1992-, RH	1	Seal	Tätning	3
0590	7	43 03 699		2,222) T16SA	2	Decor strip	Dekorlist	3
0600	7A	90 87 289		1992-	8	.Clip	.Clips	5
0610								
0620	8	69 62 054		3,130) LH	1	Seal	Tätning	3
0630	8	*69 62 047*		3,130) RH NLS - USE 4096889	1	Seal	Tätning	3
0640	8	40 93 944		3,131) -1991, LH	1	Seal	Tätning	3
0650	8	40 93 936		3,131) -1991, RH	1	Seal	Tätning	3
0660	8	40 96 871		3)1992-, LH	1	Seal	Tätning	3
0670	8	40 96 889		3)1992-, RH	1	Seal	Tätning	3
0680	8	43 03 707		3,222) T16SA	2	Decor strip	Dekorlist	3
0690	8A	90 87 289		1992-	8	.Clip	.Clips	5
0700	8B	69 30 572		1992-, T16S	2	Plug	Plugg	5
0710								
0720	9	69 48 897		2) -1991	2	Decor strip	Dekorlist	3
0730	10	69 48 905		3) -1991	2	Decor strip	Dekorlist	3
0740	11	92 63 674		-1991	28	Pop rivet	Popnit	5
0750								
0760	12	92 62 965		LH	1	Seal	Tätning	5
0770	12	92 62 957		RH	1	Seal	Tätning	5
0780	13	92 62 940			20	Clip	Clips	
0790	14	69 56 783			2	Seal	Tätning	5
0800	15	92 77 237			2	Spacer	Mellanlägg	5
0810	16	92 77 690			2	Sealing strip	Tätningslist	4
0820	17	92 79 548			2	Sealing strip	Tätningslist	4
0830	18	40 10 732		LH	1	Seal	Tätning	5
0840	18	40 10 724		RH	1	Seal	Tätning	5
0850	19	69 61 270		-1991, 4D	2	Protecting moulding	Skyddslist	5
0860	20	92 88 127		LENGTH 770MM	X	Tape	Tape	5
0870								
0880	21	90 89 434		5CS, LH	1	Seal	Tätning	5
0890	21	90 89 426		5CS, RH	1	Seal	Tätning	5
0900	22	90 87 289		5CS	14	.Clip	.Clips	5
0910								
0920	23			See page 8A-039, 5-B16	1	Seal	Tätning	

2. Front Främre
3. Rear Bakre
128. Ch. --L1015018, --L2010684, --L8001386
129. Ch. L1015019--, L2010685--, L8001387--
130. Ch. --L1015491, --L2011033
131. Ch. L1015492--, L2011034--
222. Ch. N1000146--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-F12 Bumper, front, 5D

Stötfångare, främre, 5D

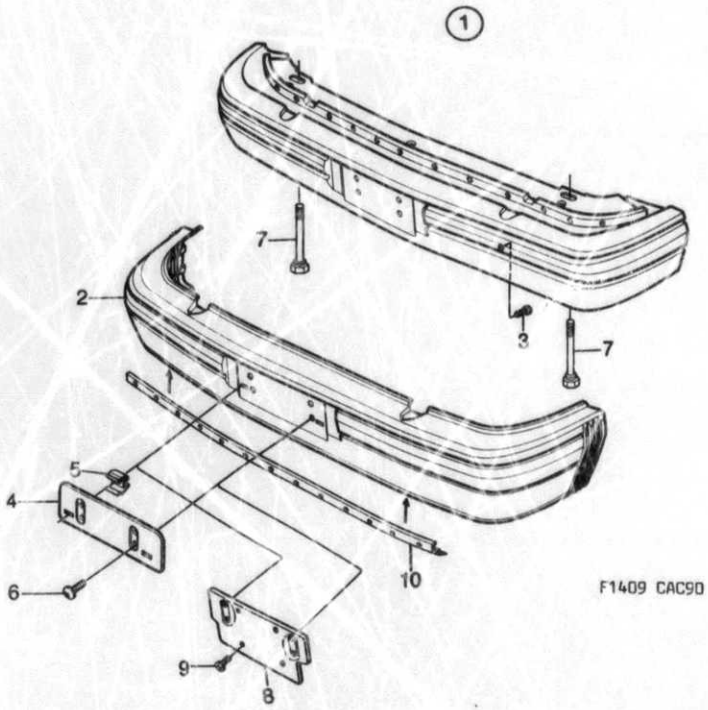

F1409 CAC90

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 78 714		-1990	1	Bumper	Stötfångare	3
0020	1	40 90 825		-1990, US	1	Bumper	Stötfångare	3
0030	1	40 91 245		110) 1991-	1	Bumper	Stötfångare	3
0040	1	69 91 574		70) 1991-1992	1	Bumper	Stötfångare	3
0050	1	40 91 302		109,110) 1991-	1	Bumper	Stötfångare	3
0060								
0070	2	92 78 698		-1990	1	.Outer casing	.Hölje	3
0080	2	41 71 195		109,110) -1990, T16SB	1	.Outer casing	.Hölje	3
0090	2	*69 44 649*		-1990, US NLS - USE 6944623	1	.Outer casing	.Hölje	3
0100	2	69 44 623		-1990, US ALT TO 69 44 649	1	.Outer casing	.Hölje	3
0110								
0120	2	69 73 887		110) 1991-	1	.Outer casing	.Hölje	3
0130	2	69 93 216		70) 1991-1992	1	.Outer casing	.Hölje	3
0140	2	40 91 328		109,110) 1991-	1	.Outer casing	.Hölje	3
0150								
0160	3	*40 88 068*		-1990 NLS - USE 4446290	24	Screw	Skruv	5
0170	3	42 51 955		1991-1992	24	Screw	Skruv	5
0180	3	44 46 290		1993	24	Screw	Skruv	5
0190	4	82 58 428			1	Bracket	Hållare	3
0200	5	79 70 403			2	.Cage nut	.Korgmutter	5
0210	6	80 59 578			4	Screw	Skruv	5
0220	7	73 99 884			2	Screw	Skruv	5
0230	8	69 21 142		US, JP	1	Bracket	Hållare	3
0240	9	79 77 390		US	1	Screw	Skruv	5
0250	10	92 49 566		-1990	1	Attaching rail	Fästskena	6
0260	10	69 55 009		1991-	1	Attaching rail	Fästskena	6

70. Grey Grå
109. Paintable design Lackeringsbart utförande
110. Black Svart

MASTER INDEX


0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-B16
Doors, trunk lid 5-C02
External details, glass, sealings 5-D08
Bumpers and touch-up paint 5-F12
Complete sets 5-G08

5-F14

Bumper, front, 4D
Stötfångare, främre, 4D

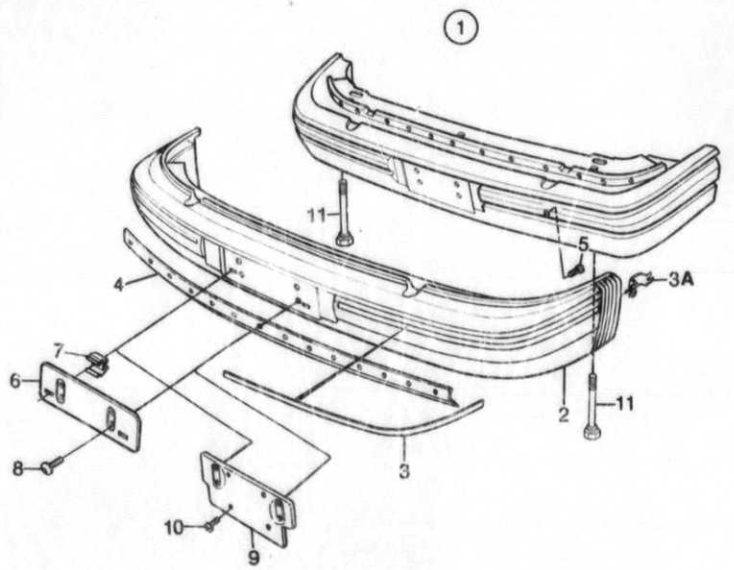

F3982 CAC90

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 54 952			1	Bumper	Stötfångare	3
0020	2	92 77 484			1	. Outer casing	. Hölje	3
0030	3	69 55 033			2	. Decor strip	. Dekorlist	3
0040	3A	69 59 142			2	. Spring	. Fjäder	4
0050	4	69 55 009			1	. Attaching rail	. Fästskena	6
0060	5	*40 88 068*		-1990 NLS - USE 4446290	24	. Screw	. Skruv	5
0070	5	42 51 955		1991-1992	24	. Screw	. Skruv	5
0080	5	44 46 290		1993	24	. Screw	. Skruv	5
0090	6	82 58 428			1	Bracket	Hållare	3
0100	7	79 70 403			1	. Cage nut	. Korgmutter	5
0110	8	80 59 578			4	Screw	Skruv	5
0120	9	69 21 142		US, JP	1	Bracket	Hållare	3
0130	10	79 77 390		US, JP	4	Screw	Skruv	5
0140	11	73 99 884			2	Screw	Skruv	5


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-B16
Doors, trunk lid 5-C02
External details, glass, sealings 5-D08
Bumpers and touch-up paint 5-F12
Complete sets 5-G08

5-F16 Bumper, front, 5CS / Stötfångare, främre, 5CS

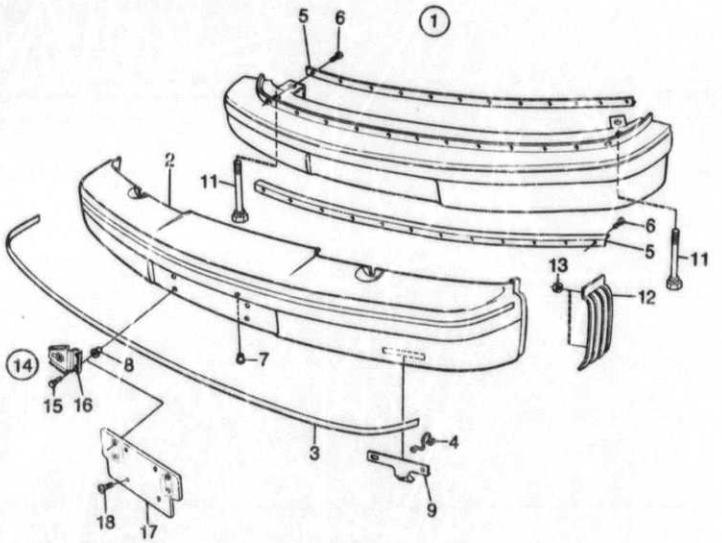

F4748 CAC90

1260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 81 217		70)	1	Bumper	Stötfångare	3
0020	1	43 20 461		109,110)	1	Bumper	Stötfångare	3
0030	2	44 46 266		70) (9081241)	1	.Outer casing	.Hölje	3
0040	2	44 35 327		109,110) (4320511)	1	.Outer casing	.Hölje	3
0050	3	40 89 736			1	.Decor strip	.Dekorlist	3
0060	4	69 91 954		LH	1	.Beam spring	.Böjfjäder	9
0070	4	69 91 871		RH	1	.Beam spring	.Böjfjäder	9
0080	5	90 81 282			2	.Attaching rail	.Fästskena	6
0090	6	42 51 955		-1992	24	.Screw	.Skruv	5
0100	6	44 46 290		1993	24	.Screw	.Skruv	5
0110	7	92 88 846			5	.Nut	.Mutter	5
0120	8	40 93 480		-1992	4	.Nut	.Mutter	5
0130	8	90 87 040		1993	4	.Nut	.Mutter	5
0140	9	40 88 118		LH	1	.Bracket	.Konsol	5
0150	9	40 88 100		RH	1	.Bracket	.Konsol	5
0160								
0170	11	73 99 884			2	Screw	Skruv	5
0180	12	40 93 522		LH	1	Retainer	Hållare	2
0190	12	40 93 514		RH	1	Retainer	Hållare	2
0200	13	79 77 929			6	Nut	Mutter	5
0210	14	82 84 846			1	Retainer kit	Hållarsats	3
0220	15	80 59 578			4	.Screw	.Skruv	5
0230	16	90 81 316		1)	2	.Retainer	.Hållare	3
0240	17	69 21 142		US, JP	1	Bracket	Hållare	3
0250	18	79 77 390		US, JP	4	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
109. Paintable design Lackeringsbart utförande
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-F18 Bumper, rear, 5D / Stötfångare, bakre, 5D

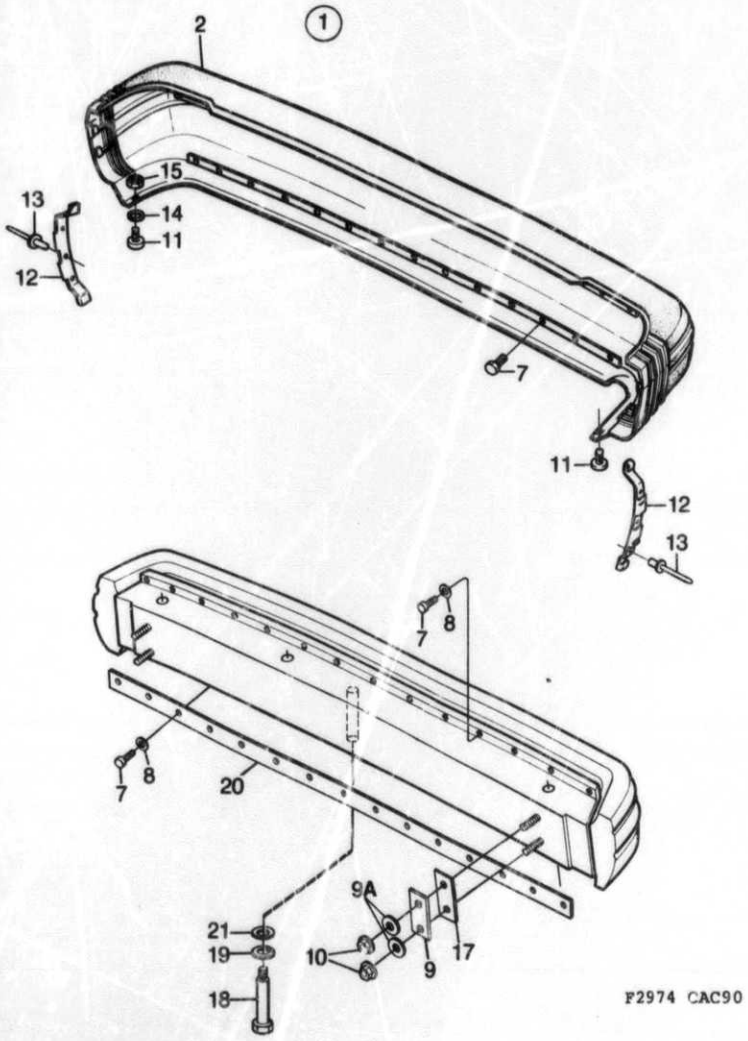

1300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*69 73 242*		-1990 NLS - USE 6944854, 6944953, 6944961	1	Bumper	Stötfångare	4
0020	1	*69 43 773*		-1990, ALT TO 69 73 242 NLS - USE 6944854, 6944953, 6944961	1	Bumper	Stötfångare	4
0030	1	69 44 912		110) 1991-	1	Bumper	Stötfångare	4
0040	1	69 44 854		70) 1991-1992(69 44 886)	1	Bumper	Stötfångare	4
0050	1	42 51 708		109,110) 1991-	1	Bumper	Stötfångare	4
0060								
0070	2	69 62 302		-1990	1	.Outer casing	.Hölje	3
0080	2	*69 42 742*		-1990, ALT TO 69 62 302 NLS - USE 6944870, 6944953, 6944961	1	.Outer casing	.Hölje	3
0090	2	69 44 888		110) 1991-	1	.Outer casing	.Hölje	3
0100	2	69 44 870		70) 1991-1992 (4091187)	1	.Outer casing	.Hölje	3
0110	2	42 51 716		109,110) 1991-	1	.Outer casing	.Hölje	3
0120								
0130	7	*40 88 068*		-1990 NLS - USE 4446290	22	.Screw	.Skruv	5
0140	7	42 51 955		1991-1992	22	.Screw	.Skruv	5
0150	7	44 46 290		1993	22	.Screw	.Skruv	5
0160	8	*80 73 223*		-1990 NLS - USE 9165380	11	.Washer	.Bricka	5
0170	9	69 92 325		-1990	2	.Seal	.Tätning	5
0180	9A	92 34 055		1991-	4	.Washer	.Bricka	5
0190	10	79 67 979			4	Nut	Mutter	5
0200	11	79 70 304		-1991	2	Screw	Skruv	5
0210	11	79 77 465		1992-	2	Screw	Skruv	5
0220	12	40 13 694		-1990, LH	1	Bracket	Hållare	5
0230	12	40 13 686		-1990, RH	1	Bracket	Hållare	5
0240	12	69 44 961		1991, LH	1	Bracket	Hållare	5
0250	12	69 44 953		1991, RH	1	Bracket	Hållare	5
0260	12	43 40 634		1992-, LH	1	Bracket	Hållare	5
0270	12	43 40 626		1992-, RH	1	Bracket	Hållare	5
0280	13	79 72 516		-1991	6	Rivet	Nit	5
0290	13	79 72 516		1992-	4	Rivet	Nit	5
0300	14	70 88 073		-1991	2	Washer	Bricka	5
0310	15	79 35 682		-1991	2	Spring nut	Fjädermutter	3
0320	15	*40 05 237*		1992- NLS - USE 4008504, 7962325	2	Nut	Mutter	5
0330	17	*92 49 681*		-1990 NLS - USE 6991863	2	Spacer	Mellanlägg	5
0340	17	69 91 863		1991-	2	Spacer	Mellanlägg	5
0350	18	80 84 105		-1992, T16SA	1	Screw	Skruv	5
0360	19	79 10 557		-1992, T16SA	1	Washer	Bricka	5
0370	20	86 61 993		-1992, T16SA	1	Splash guard	Stänkskydd	5
0380	21	80 73 108		-1992, T16SA	1	Washer	Bricka	5

70. Grey Grå
109. Paintable design Lackeringsbart utförande
110. Black Svart

MASTER INDEX


0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-B16
Doors, trunk lid 5-C02
External details, glass, sealings 5-D08
Bumpers and touch-up paint 5-F12
Complete sets 5-G08

5-F20

Bumper, rear, 4D
Stötfångare, bakre, 4D

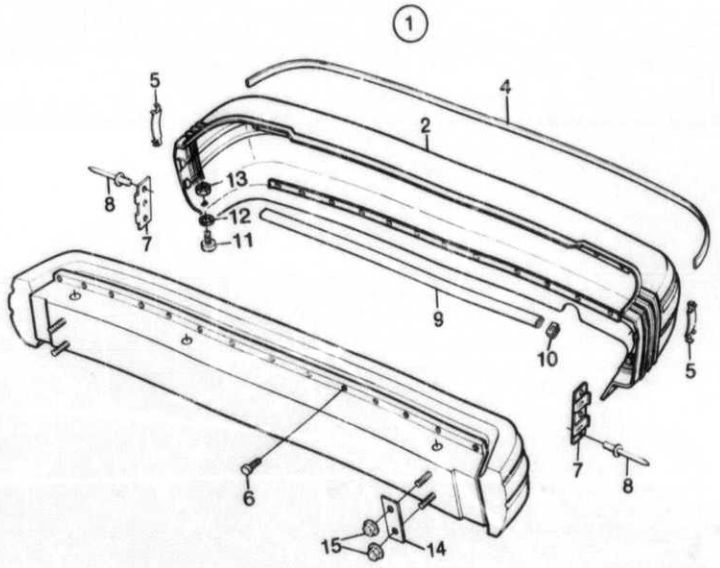

F5950 CAC90

1350	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*69 59 712*		-1991 NLS - USE 4093969	1	Bumper	Stötfångare	4
0020	1	*69 55 173*		-1991, ALT TO 69 59 712 NLS - USE 4093969	1	Bumper	Stötfångare	4
0030	1	40 93 969		1992-	1	Bumper	Stötfångare	4
0050	2	*69 59 720*		-1991 NLS - USE 4093977	1	.Outer casing	.Hölje	3
0060	2	*92 76 320*		-1991, ALT TO 69 59 720 NLS - USE 4093977	1	.Outer casing	.Hölje	3
0070	2	40 93 977		1992-	1	.Outer casing	.Hölje	3
0090	4	69 73 945			1	.Decor strip	.Dekorlist	3
0100	5	69 59 142			2	.Spring	.Fjädor	4
0110	6	*40 88 068*		-1990 NLS - USE 4446290	22	.Screw	.Skruv	5
0120	6	42 51 955		1991-1992	22	.Screw	.Skruv	5
0130	6	44 46 290		1993	22	.Screw	.Skruv	5
0140	7	92 75 843		-1991, LH	1	Bracket	Hållare	5
0150	7	92 75 835		-1991, RH	1	Bracket	Hållare	5
0160	7	43 40 634		1992-, LH	1	Bracket	Hållare	5
0170	7	43 40 626		1992-, RH	1	Bracket	Hållare	5
0180	8	79 72 516		-1991	6	Rivet	Nit	5
0190	8	79 72 516		1992-	4	Rivet	Nit	5
0200	9	40 10 625			1	Strip	List	5
0210	10	40 13 256			7	Clip	Clips	5
0220	11	79 70 304		-1991	2	Screw	Skruv	5
0230	11	79 77 465		1992-	2	Screw	Skruv	5
0240	12	70 88 073		-1991	2	Washer	Bricka	5
0250	13	79 33 682		-1991	2	Spring nut	Fjädermutter	3
0260	13	*40 05 237*		1992- NLS - USE 4008504, 7982325	2	Nut	Mutter	5
0270	14	69 92 325			4	Seal	Tätning	5
0280	15	79 67 979			4	Nut	Mutter	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-F22 Bumper, rear, 5CS / Stötfångare, bakre, 5CS

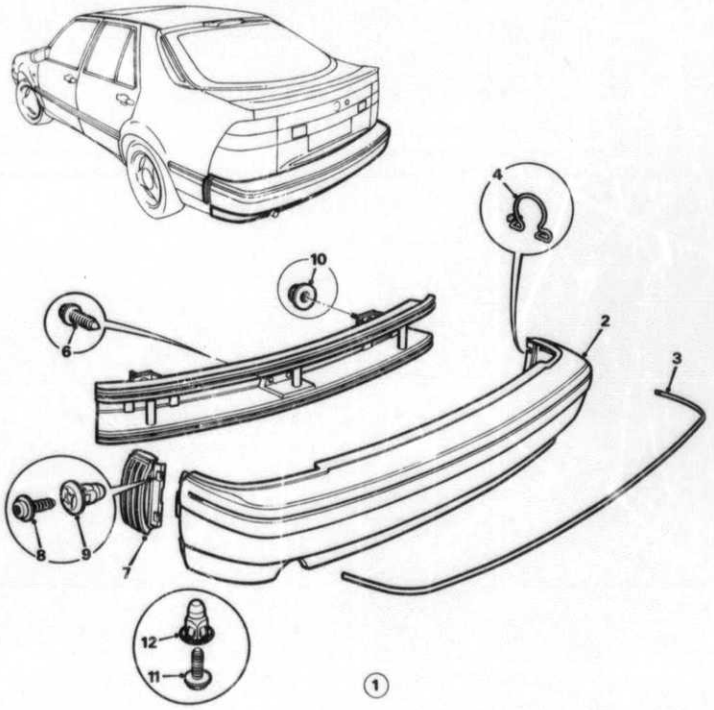

F3716 - CAC90

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 231		70)	1	Bumper	Stötfångare	4
0020	1	43 20 479		109,110)	1	Bumper	Stötfångare	4
0030								
0040	2	90 82 272		70)	1	.Outer casing	.Hölje	3
0050	2	43 20 529		109,110)	1	.Outer casing	.Hölje	3
0060	3	40 89 744			1	.Decor strip	.Dekorlist	3
0070	4	69 91 954		LH	1	.Beam spring	.Böjfjäder	9
0080	4	69 91 871		RH	1	.Beam spring	.Böjfjäder	9
0090	6	42 51 955		-1992	22	.Screw	.Skruv	5
0100	6	44 46 290		1993 -	22	.Screw	.Skruv	5
0110								
0120	7	40 93 373		LH	1	Retainer	Hållare	2
0130	7	40 93 365		RH	1	Retainer	Hållare	2
0140	8	*79 72 953*		NLS - USE 7922370, 8029944	4	Screw	Skruv	5
0140								
0150	9	69 11 804			4	Bushing	Bussning	4
0160	10	79 67 979			4	Nut	Mutter	5
0170	11	*79 72 953*		NLS - USE 7922370, 8029944	2	Screw	Skruv	5
0170								
0180	12	69 11 804			2	Bushing	Bussning	4

70. Grey Grå
109. Paintable design Lackeringsbart utförande
110. Black Svart

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8A GROUP INDEX

Car body 5-A06
Hood, front, fenders 5-B16
Doors, trunk lid 5-C02
External details, glass, sealings 5-D08
Bumpers and touch-up paint 5-F12
Complete sets 5-G09

Bumpers and touch-up paint
1-can

Stötfångare och bättringsfärg
1-komponent

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 168		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0030					X	Embassy blue	Ambassadblå	
0040	1/4L	96 98 176		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0050					X	Embassy blue	Ambassadblå	
0060	1L	82 84 127		-1991, BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0070					X	Ultramarine	Ultramarin	
0080	1/4L	82 84 135		-1991, BODY COLOUR 215	X	Touch-up paint	Bättringsfärg	3
0090					X	Ultramarine	Ultramarin	
0100	1L	96 98 853		-1992, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0110					X	Cherry red	Cherryröd	
0120	1/4L	96 98 861		-1992, BODY COLOUR 214	X	Touch-up paint	Bättringsfärg	3
0130					X	Cherry red	Cherryröd	
0140	1L	96 98 481		-1991, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0150					X	Rodonite red	Rodonitröd	
0160	1/4L	96 98 499		-1991, BODY COLOUR 213	X	Touch-up paint	Bättringsfärg	3
0170					X	Rodonite red	Rodonitröd	
0180	1L	82 84 291		-1992, BODY COLOUR 219	X	Touch-up paint	Bättringsfärg	3
0190					X	Talladega	Talladega	
0200	1/4L	82 84 317		-1992, BODY COLOUR 219	X	Touch-up paint	Bättringsfärg	3
0210					X	Talladega	Talladega	
0220	1L	82 85 371		1993, BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0230					X	Imola red	Imolaröd	
0240	1/4L	82 85 389		1993, BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0250					X	Imola red	Imolaröd	
0260	1L	82 84 168		-1990, BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0270					X	Ascot grey	Ascotgrå	
0280	1/4L	82 84 176		-1990, BODY COLOUR 217	X	Touch-up paint	Bättringsfärg	3
0290					X	Ascot grey	Ascotgrå	
0300	1L	84 87 266		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0310					X	Cirrus white	Cirrusvit	
0320	1/4L	84 87 274		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0330					X	Cirrus white	Cirrusvit	
0340	1L	82 84 952		1992-93, BODY COLOUR 233	X	Touch-up paint	Bättringsfärg	3
0350					X	Carrara white	Carraravit	
0360	1/4L	82 84 960		1992-93, BODY COLOUR 233	X	Touch-up paint	Bättringsfärg	3
0370					X	Carrara white	Carraravit	
0380	1L	78 20 228		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0390					X	Black	Svart	
0400	1/4L	78 20 244		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0410					X	Black	Svart	
0420	1L	96 98 341			X	Touch-up paint	Bättringsfärg	3
0430					X	Charcoal grey 119	Antracitgrå 119	
0440					X	for sill	för tröskel	
0450	1/4L	96 98 358			X	Touch-up paint	Bättringsfärg	3
0460					X	Charcoal grey 119	Antracitgrå 119	
0470					X	for sill	för tröskel	
0480	1L	84 87 753			X	Thinner	Förtunning	5
0490	5L	84 87 761			X	Thinner	Förtunning	5
0500	1L	89 15 415		169), 20-80°	X	Hardener	Härdare	5
0510				NLS				
0520					X	PRIMER	GRUNDFÄRG	6
0530	1L	74 97 019			X	Primer	Grundfärg	
0540					X	1K-Füllprimer	1K-Füllprimer	5
0550	1L	82 85 231			X	Thinner	Förtunning	
0560					X	2K-Expressverdünnung	2K-Expressverdünnung	
0570								
0580						FILLER	SPACKEL	6
0590	2KG	82 85 488			X	Polyester filler	Polyesterspackel	5
0600		82 85 496			X	Hardener	Härdare	6
0610	1L	84 87 621			X	Spray filler	Sprutspackel	


169. For quick through-drying För snabb genomtorkning

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

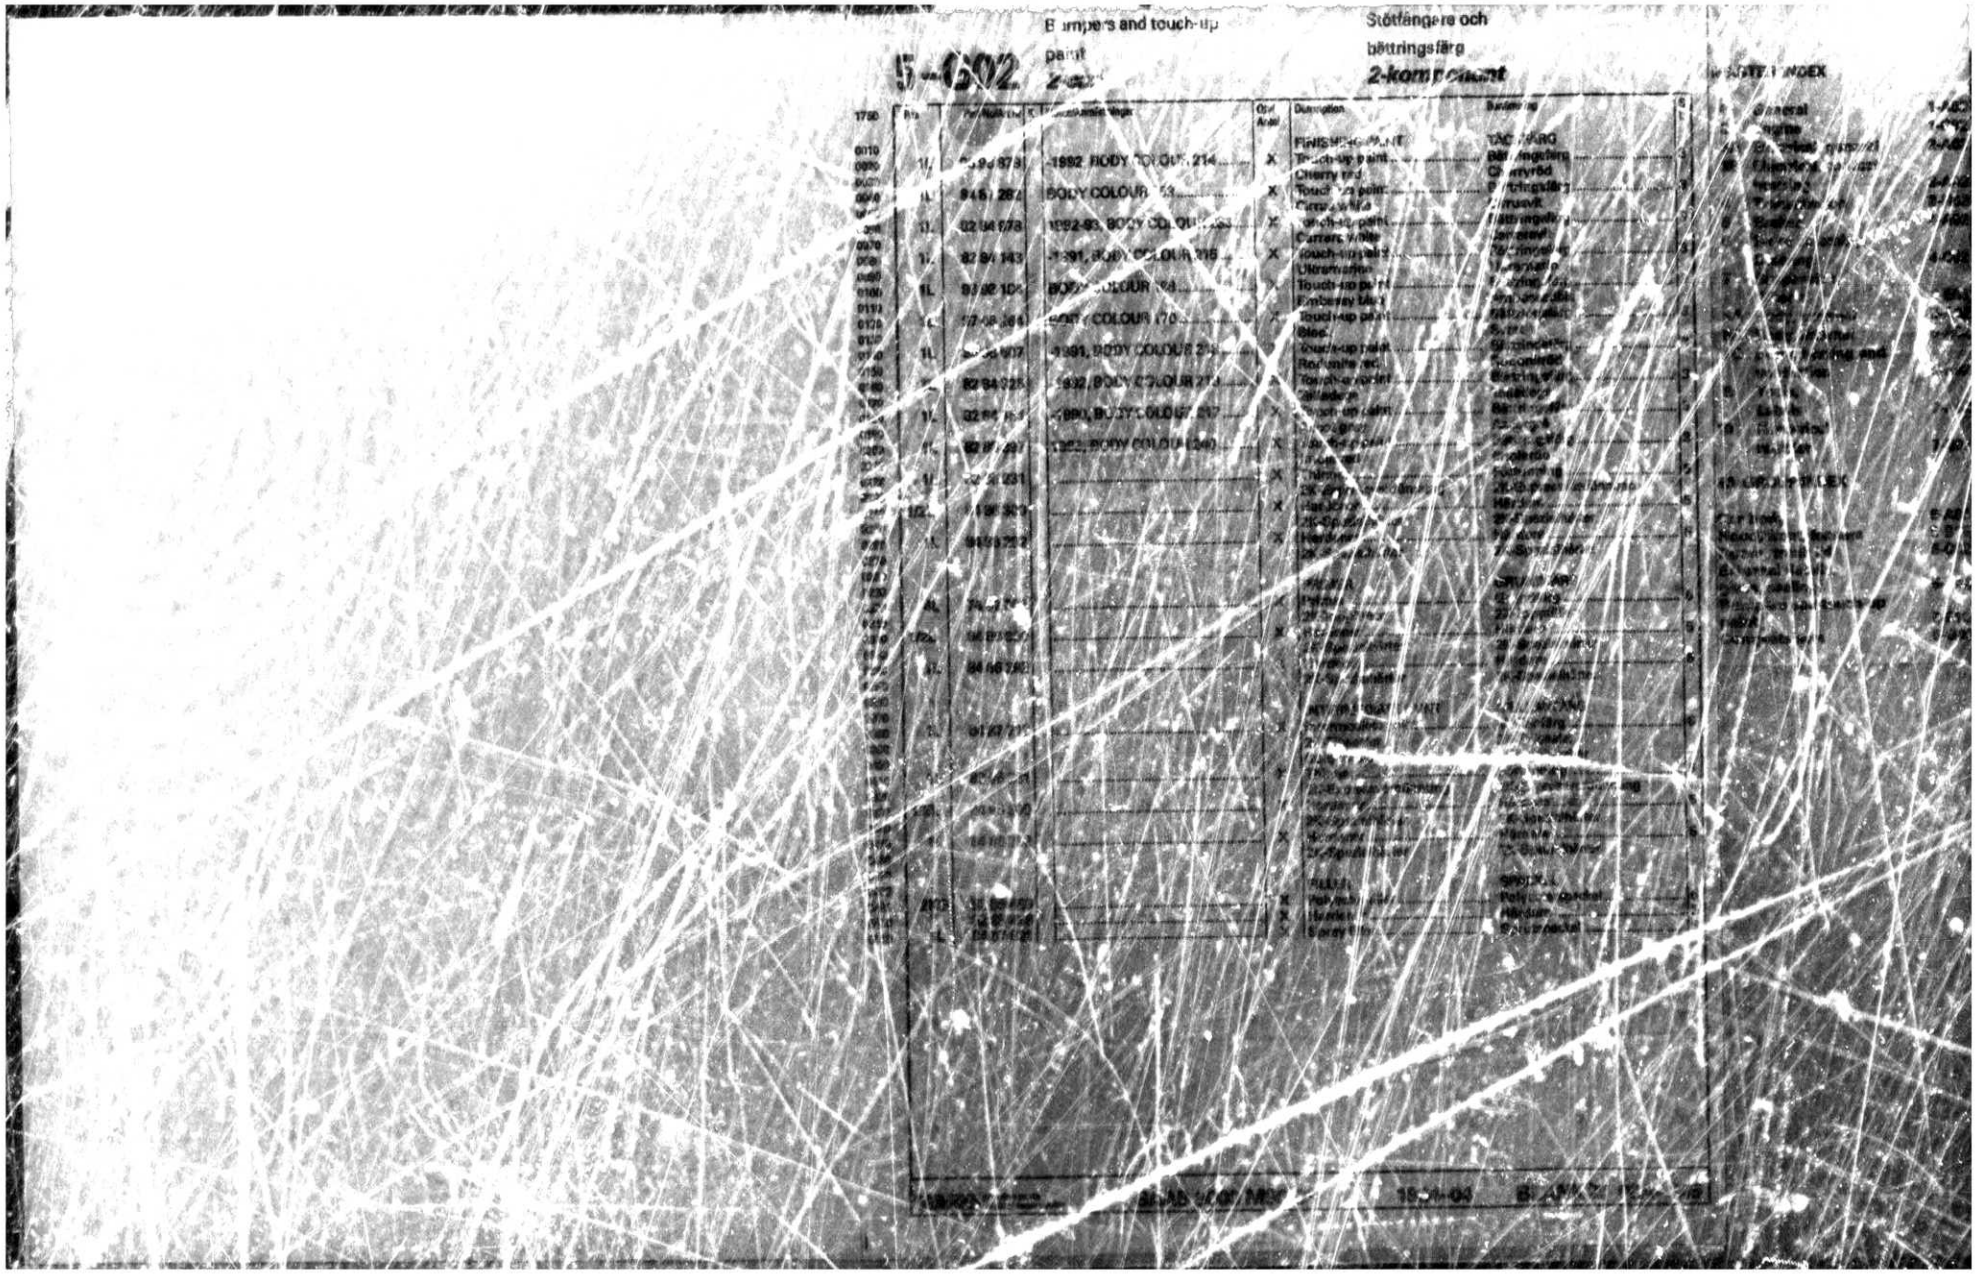
Bumpers and touch-up paint
Stötfångare och bättringsfärg
2-komponent

5-G04

Bumpers and touch-up paint

Two-coat type

Stötfångare och bättringsfärg

Tvåskiktstyp

1775	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						BASE METALLIC COAT	BASMETALLICFÄRG	
0020	1L	96 98 044		-1990, BODY COLOUR 200	X	Touch-up paint Silver	Bättringsfärg Silver	3
0030								
0040	1L	96 98 069		-1990, BODY COLOUR 202	X	Touch-up paint Rose quartz	Bättringsfärg Rosenkvarts	3
0050								
0060	1L	96 98 093		-1990, BODY COLOUR 204	X	Touch-up paint Odoardo grey	Bättringsfärg Odoardogrå	3
0070								
0080	1L	82 84 754		1991-93, BODY COLOUR 223	X	Touch-up paint Odoardo grey	Bättringsfärg Odoardogrå	3
0090								
0100	1L	96 98 051		-1990, BODY COLOUR 201	X	Touch-up paint Bronze	Bättringsfärg Bronze	3
0110								
0120	1L	96 98 465		-1990, BODY COLOUR 212	X	Touch-up paint Magenta brown	Bättringsfärg Magentabrun	3
0130								
0140	1L	96 98 101		-1990, BODY COLOUR 205	X	Touch-up paint Malachite green	Bättringsfärg Malakitgrön	3
0150								
0160	1L	82 84 150		-1990, BODY COLOUR 216	X	Touch-up paint Beryl green	Bättringsfärg Berylgrön	3
0170								
0180	1L	82 84 762		1991, BODY COLOUR 226	X	Touch-up paint Beryl green	Bättringsfärg Berylgrön	3
0190								
0200	1L	82 84 499		1991-, BODY COLOUR 230	X	Touch-up paint Scarabé green	Bättringsfärg Scarabégrön	3
0210								
0220	1L	82 84 887		1992-, BODY COLOUR 235	X	Touch-up paint Green	Bättringsfärg Eucalyptusgrön	3
0230								
0240	1L	82 84 309		-1992, BODY COLOUR 220	X	Touch-up paint Iridium blue	Bättringsfärg Iridiumblå	3
0250								
0260	1L	82 84 507		1991-, BODY COLOUR 229	X	Touch-up paint Le Mans blue	Bättringsfärg Le Mans-blå	3
0270								
0280	1L	82 84 879		1992-93, BODY COLOUR 234	X	Touch-up paint Nocturne blue	Bättringsfärg Nocturneblå	3
0290								
0300	1L	82 84 473		1991-, BODY COLOUR 227	X	Touch-up paint Citrin beige	Bättringsfärg Citrinebeige	3
0310								
0320	1L	82 84 481		1991-, BODY COLOUR 228	X	Touch-up paint Platana grey	Bättringsfärg Platanagrå	3
0330								
0340	1L	82 85 405		1993, BODY COLOUR 242	X	Touch-up paint Ruby red	Bättringsfärg Rubinröd	3
0350								
0360	1L	97 46 975			X	Thinner	Förtunning	5
0390								
0400						PRIMER	GRUNDFÄRG	
0410	1L	74 97 019			X	Primer 1K-Füllprimer	Grundfärg 1K-Fyllprimer	6
0420								
0430	1L	82 85 231			X	Thinner 2K-Expressverdünnung	Förtunning 2K-Expressverdünnung	5
0440								
0450						CLEAR ENAMEL	KLARLACK	
0460								
0470	1L	84 87 225			X	Clear enamel	Klarlack	3
0480	1L	82 85 231			X	Thinner 2K-Expressverdünnung	Förtunning 2K-Expressverdünnung	5
0490								
0500	1/2L	84 86 300			X	Hardener 2K-Spezialhärter	Härdare 2K-Spezialhärter	5
0510								
0520	1L	84 86 292			X	Hardener 2K-Spezialhärter	Härdare 2K-Spezialhärter	5
0530								
0540								
0550						FILLER	SPACKEL	
0560	2KG	82 85 [illegible]8			X	Polyester filler	Polyesterspackel	6
0570		82 85 496			X	Hardener	Härdare	5
0580	1L	84 87 521			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

5-G06

Bumpers and touch-up paint
Other paint

Stötfångare och bättringsfärg
Övrig färg

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1800								
0010	1/4L	97 46 835		170)	X	Touch-up paint	Bättringsfärg	3
0020						Charcoal grey 176	Antracitgrå 176	
0030	1L	97 46 875			X	Thinner	Förtunning	5
0040								
0050	1/4L	97 46 850		170)	X	Touch-up paint	Bättringsfärg	3
0060						Black 175	Svart 175	
0070	1L	82 85 231			X	Thinner	Förtunning	5
0080						2K-Expressverdünnung	2K-Expressverdünnung	
0090								
0100						PRIMER	GRUNDFÄRG	
0110	1L	82 85 249		170)	X	Primer	Grundfärg	6
0120						1K-Plastic primer ready to spray	1K-Plastic primer sprutfärdig	
0130								
0140	1L	82 85 256		170)	X	Primer	Grundfärg	6
0150						1K-Plastic füller	1K-Plastic füller	
0160	1L	97 46 967			X	Thinner	Förtunning	5
0170								
0180						PLASTICIZER	MJUKGÖRARE	
0190	1L	97 46 314		170)	X	Plasticizer	Mjukgörare	6
0200						2K-Elastic adetiv	2K-Elastic adetiv	
0210								
0220	5L	97 46 884		171)	X	Cleaning agent	Rengöringsmedel	6
0230	1KG	82 85 264		171)	X	Filler	Spackel	6
0240	2L	97 46 892		171)	X	Primer	Grundfärg	6
0250	1L	97 46 900		171)	X	Hardener	Härdare	6
0260	1L	97 46 926		171)	X	Intermediate paint	Mellanfärg	6
0270	1L	97 46 934		171)	X	Hardener	Härdare	5
0280	1L	97 46 959		171)	X	Plasticizer	Mjukgörare	6
0290	1L	97 46 652		171)	X	Thinner	Förtunning	5
0300								
0310	5L	84 87 779			X	Cleaning agent silicon remover	Rengöringsmedel silikonborttagare	6
0320								
0330	1KG	*79 94 510*		NLS	X	Underseal	Underredsmassa	6
0340	1KG	79 94 882		172)	X	Stone chip interpaint	Stenskottsmellanfärg	6
0350		*79 94 890*		172) NLS	X	Hardener	Härdare	5
0360	5L	*84 87 787*		173) NLS	X	Thinner	Förtunning	6

170. For plastic För plast
171. For rear spoiler (soft, rubber) För bakre spoiler (mjuk, gummi)
172. 2K, IR-lamp with minimum 100°C 2K, IR-lampa med minst 100°C
173. For cleaning airguns För rengöring av sprutpistoler

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete set	5-G08


Complete sets
5--G08
Car body, external


Satser
Kaross, utvändig

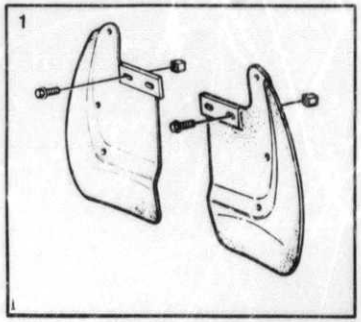


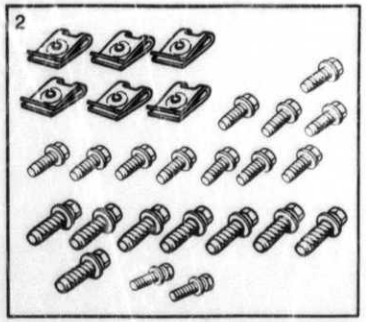

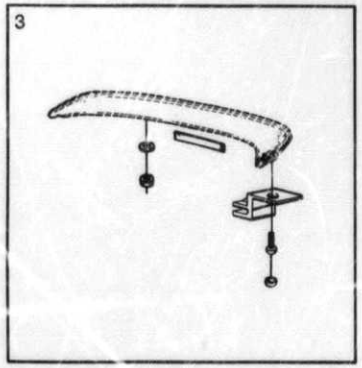

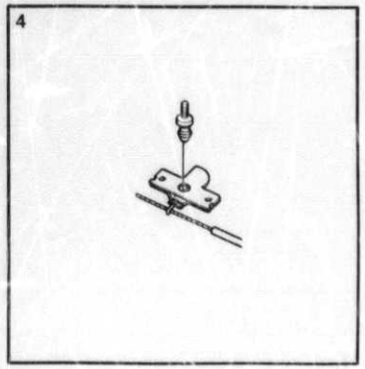

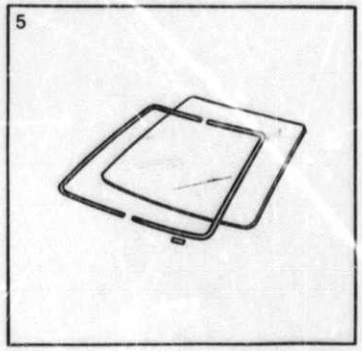

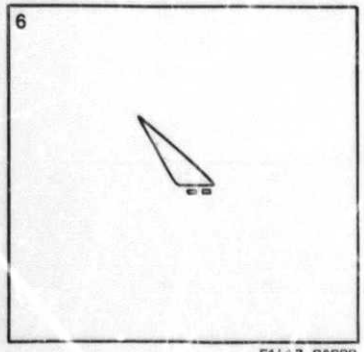

F1413 CAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	78 74 431		3) -1991	X	Baffle	Stänkskydd	3
0020		92 68 038		LH	1	.Baffle	.Stänkskydd	3
0030		92 68 020		RH	1	.Baffle	.Stänkskydd	3
0040		79 73 175			10	.Screw	.Skruv	5
0050		79 75 261			10	.Nut	.Mutter	5
0060								
0070	1	82 84 341		3) 1992-	X	Baffle	Stänkskydd	3
0080		40 99 776		LH	1	.Baffle	.Stänkskydd	3
0090		40 99 768		RH	1	.Baffle	.Stänkskydd	3
0100		79 82 325			6	.Screw	.Skruv	5
0110		79 82 655			2	.Press nut	.Pressmutter	5
0120		82 73 468			2	.Washer	.Bricka	5
0130		90 87 040			4	.Nut	.Mutter	5
0140								
0150	2	92 67 956		2)	X	Mounting kit spoiler	Monteringssats spoiler	3
0160								
0170		79 73 134			8	.Screw	.Skruv	5
0180		79 77 523			6	.Clip	.Clips	5
0190		79 76 988			2	.Screw	.Skruv	5
0200		79 76 996			11	.Screw	.Skruv	5
0210								
0220	3	82 84 267		3)	X	Mounting kit spoiler	Monteringssats spoiler	5
0230								
0240		73 98 423			5	.Nut	.Mutter	5
0250		80 59 537			2	.Screw	.Skruv	5
0260		40 13 454			2	.Clip	.Clips	5
0270		40 89 389			7	.Washer	.Bricka	5
0280		92 77 864			2	.Attaching bracket	.Fästvinkel	5
0290		92 78 847			2	.Protecting cap	.Skyddshuv	5
0300								
0310	3	82 84 523		3) T16S	X	Mounting kit spoiler	Monteringssats spoiler	5
0320								
0330		40 13 454			2	.Clip	.Clips	5
0340		40 89 389			7	.Washer	.Bricka	5
0350		42 50 114			2	.Washer	.Bricka	5
0360		73 98 423			5	.Nut	.Mutter	5
0370		79 77 671			2	.Nut	.Mutter	5
0380		92 77 864			2	.Attaching bracket	.Fästvinkel	5
0390								
0400	4	96 98 523			X	Bonnet lock kit	Huvlåssats	3
0410		69 73 689			1	.Bonnet lock	.Huvlås	3
0420		69 73 788			1	.Lock pin	.Låstapp	4
0430								
0440	4	96 98 515		RHD	X	Bonnet lock kit	Huvlåssats	3
0450		69 73 697		RHD	1	.Bonnet lock	.Huvlås	3
0460		69 73 788			1	.Lock pin	.Låstapp	4
0470								
0480	5	*82 84 028*		-1991, AU NLS - USE 8284531, 8285272	X	Windscreen	Vindruta	3
0490		*69 56 924*		1) NLS	1	.Windscreen	.Vindruta	3
0500		82 84 531			1	.Mounting kit	.Monteringssats	3
0510		*79 67 771*		NLS - USE 7970601	4	..Screw	..Skruv	5
0520		79 75 261			4	..Nut	..Mutter	5
0530		42 50 320		(9278326)	1	..Decor strip	..Dekorlist	3
0540		92 78 334			2	..Connector	..Skarvstycke	3
0550		92 78 318		LH	1	.Strip holder	.Hållerlist	3
0560		92 78 300		RH	1	.Strip holder	.Hållerlist	3
0570								

1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


Complete sets
5-G10
Car body, external


Satser
Kaross, utvändig

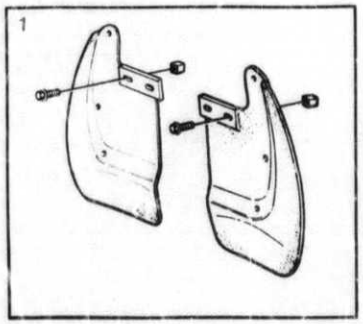


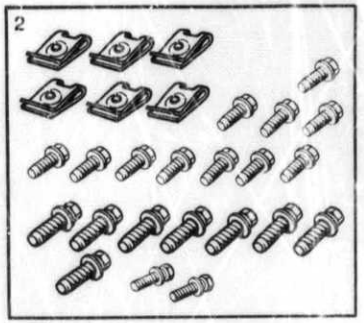

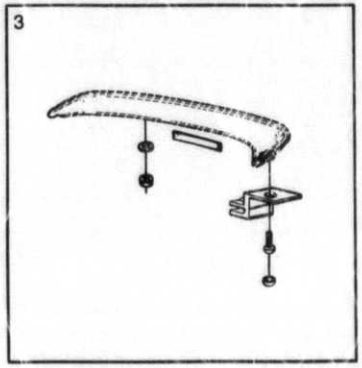

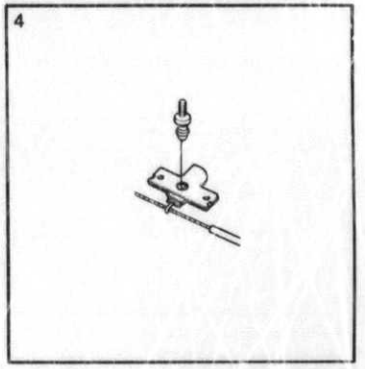

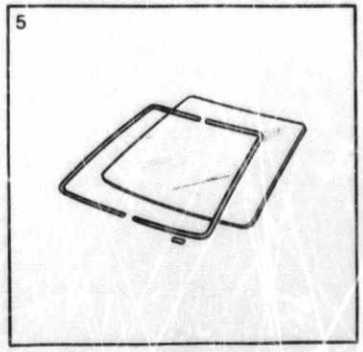

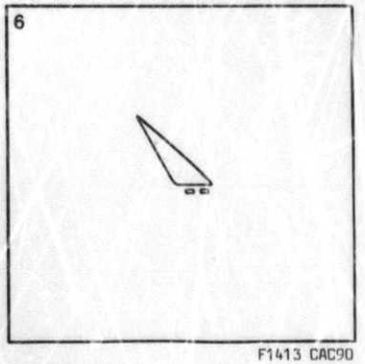

F1413 CAC90

2500	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0500	5	*82 84 903*		COLOURED NLS - USE 7497050	X	Windscreen	Vindruta	3
0520		*43 04 648*		1) NLS	1	.Windscreen	.Vindruta	3
0530		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0540		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0620								
0630	5	82 85 272		1992-,261), AU	X	Windscreen	Vindruta	3
0640		*42 50 262*		1) NLS	1	.Windscreen	.Vindruta	3
0650		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0660		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0670								
0680	5	74 97 050		COLOURED	X	Windscreen	Vindruta	3
0690		*43 05 884*		1) NLS	1	.Windscreen	.Vindruta	3
0700		74 97 084			1	.Spacer	.Distans	5
0710		40 13 603			1	..Spacer	..Distans	3
0720		69 91 244			1	..Spacer	..Distans	3
0730		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0740		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0750								
0760	5	74 97 043		WITH CUT FOR CH. NUMBER COLOURED	X	Windscreen	Vindruta	3
0780		*42 50 460*		1) NLS	1	.Windscreen	.Vindruta	3
0790		74 97 084			1	.Spacer	.Distans	5
0800		40 13 603			1	..Spacer	..Distans	3
0810		69 91 244			1	..Spacer	..Distans	3
0820		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0830		92 78 300		RH	1	.Strip holder	.Hållarlist	3
0840								
0950	6	82 83 897		5D, LH, SIDE WINDOW WITH SPACER, COLOURED	X	Side window	Sidoruta	5
0960								
0970		69 91 509		1)	1	.Side window	.Sidoruta	5
0980		92 59 557			2	.Spacer	.Distans	3
0990								
1000	6	82 83 905		5D, RH, SIDE WINDOW WITH SPACER, COLOURED	X	Side window	Sidoruta	5
1010								
1020		69 91 491		1)	1	.Side window	.Sidoruta	5
1030		92 59 557			2	.Spacer	.Distans	3

1. Not as separate spare part. Ej som separat reservdel.
199. Ch. M1017620-, M2011731-
261. Ch. -N1034646


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-G12

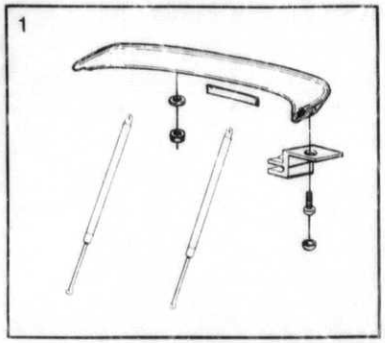

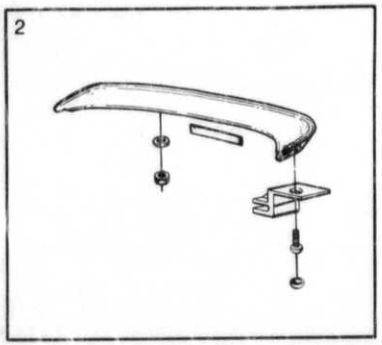

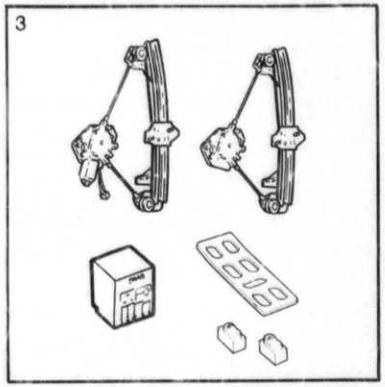

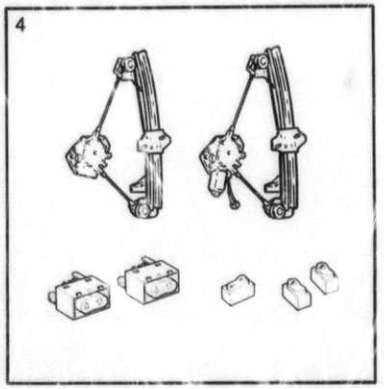

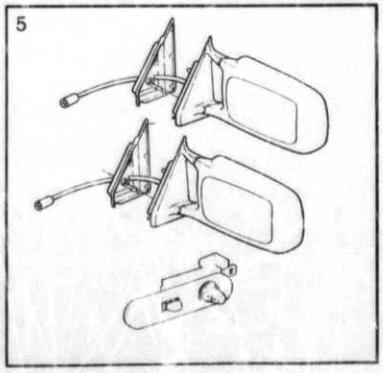



F1414 CAC90

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 283		3) 5D	X	Spoiler	Spoiler	5
0020		69 56 288			2	.Gas spring	.Gasfjäder	5
0030		69 92 838		3)	1	.Spoiler	.Spoiler	3
0040		82 84 267			1	.Mounting kit	.Monteringssats	5
0050								
0060	1	82 85 322		3) 5CS	X	Spoiler	Spoiler	5
0070		40 06 060			2	.Spring	.Fjäder	3
0080		40 89 389			5	.Washer	.Bricka	5
0090		43 44 826		1)	1	.Spoiler	.Spoiler	3
0100		79 77 929			5	.Nut	.Mutter	5
0110								
0120	2	82 84 275		3) 5D	X	Spoiler	Spoiler	5
0130		69 92 838			1	.Spoiler	.Spoiler	3
0140		82 84 267			1	.Mounting kit	.Monteringssats	5
0150								
0160	2	82 85 314		3) 5CS	X	Spoiler	Spoiler	5
0170		40 89 389			5	.Washer	.Bricka	5
0180		43 44 826		1)	1	.Spoiler	.Spoiler	3
0190		79 77 929			5	.Nut	.Mutter	5
0200								
0210	3	85 47 861		2,37) -1992, I, WITHOUT ELECTRICAL SUNROOF	X	Window lift	Fönsterhiss	5
0220								
0230		79 71 658			6	.Nut	.Mutter	5
0240		88 17 884			2	.Cover washer	.Täckbricka	6
0250		92 55 217		LH	1	.Window lift	.Fönsterhiss	5
0260		92 55 209		RH	1	.Window lift	.Fönsterhiss	
0270		91 24 660			1	.Switch	.Strömställare	3
0280		40 69 373			1	..Bulb	..Glödlampa	4
0290		88 17 892			2	.Clip	.Clips	
0300								
0310	3	85 48 778		2,37) 1993-, I, WITHOUT ELECTRICAL SUNROOF	X	Window lift	Fönsterhiss	5
0320								
0330		40 85 510			1	.Switch	.Strömställare	3
0340		79 71 658			6	.Nut	.Mutter	5
0350		85 48 794			1	.Assembly instruction	.Monteringsanvisning	9
0360		88 17 884			2	.Cover washer	.Täckbricka	6
0370		88 17 892			2	.Clip	.Clips	
0380		92 55 217		LH	1	.Window lift	.Fönsterhiss	5
0390		92 55 209		RH	1	.Window lift	.Fönsterhiss	
0400								
0410	3	85 47 879		2,37) -1993, I, WITH ELECTRICAL SUNROOF	X	Window lift	Fönsterhiss	5
0420								
0430		79 71 658			6	.Nut	.Mutter	5
0440		88 17 884			2	.Cover washer	.Täckbricka	6
0450		92 55 217		LH	1	.Window lift	.Fönsterhiss	5
0460		92 55 209		RH	1	.Window lift	.Fönsterhiss	
0470		91 24 652			1	.Switch	.Strömställare	3
0480		40 69 373			1	..Bulb	..Glödlampa	4
0490		88 17 892			2	.Clip	.Clips	
0500								
0510	3	85 48 786		2,37) 1993-, I, WITH ELECTRICAL SUNROOF	X	Window lift	Fönsterhiss	5
0520								
0530		40 85 502			1	.Switch	.Strömställare	3
0540		79 71 658			6	.Nut	.Mutter	5
0550		85 48 794			1	.Assembly instruction	.Monteringsanvisning	9
0560		88 17 884			2	.Cover washer	.Täckbricka	6
0570		88 17 892			2	.Clip	.Clips	
0580		92 55 217		LH	1	.Window lift	.Fönsterhiss	5
0590		92 55 209		RH	1	.Window lift	.Fönsterhiss	


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre
37. Electrically adjustable Elmanövrerad


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

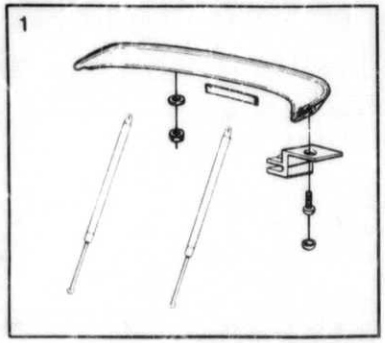


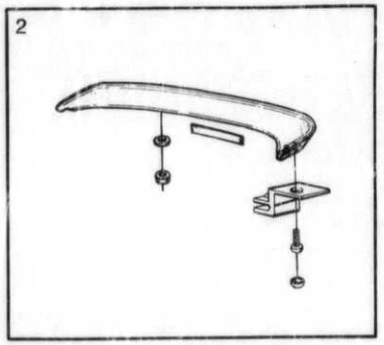

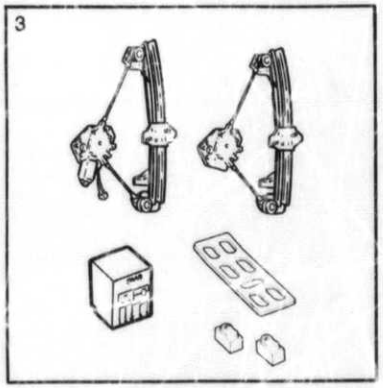

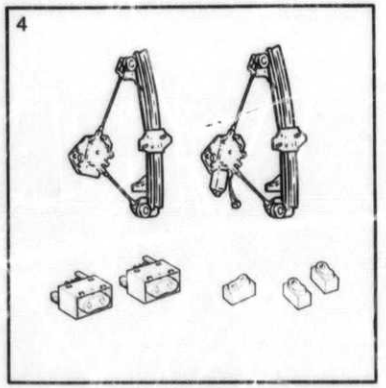

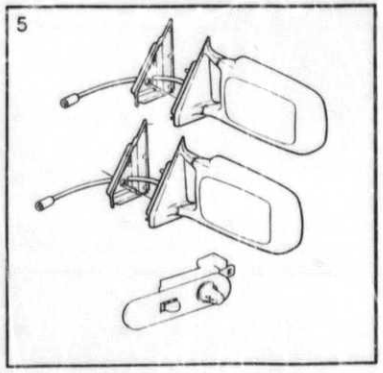

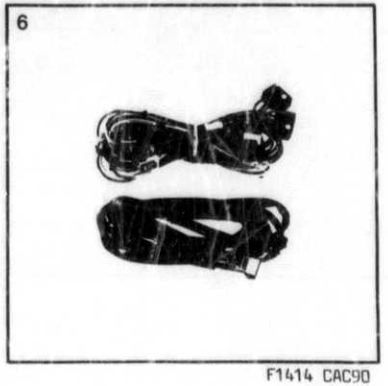

F1414 CAC90

Complete sets
5-G14
Car body, external

Satser
Kaross, utvändig

2600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600								
0610	4	85 47 895		3,37) I	X	Window lift	Fönsterhiss	5
0620		79 71 658			6	.Nut	.Mutter	5
0630		88 17 884			2	.Cover washer	.Täckbricka	6
0640		92 55 233		LH	1	.Window lift	.Fönsterhiss	5
0650		92 55 225		RH	1	.Window lift	.Fönsterhiss	5
0660		95 03 772			2	.Switch	.Strömställare	3
0670		97 67 559			1	.Cover	.Täcklock	5
0680		88 17 892			2	.Clip	.Clips	
0690								
0700	5	85 47 317		37,267) I, LHD	X	Rear view mirror kit	Backspegelsats	4
0710		95 05 488		MIRROR	1	.Switch	.Strömställare	3
0720		*96 94 704*		LH NLS - USE 4268389	1	.Cover	.Täcklock	5
0730		*96 60 051*		RH NLS - USE 9694696	1	.Cover	.Täcklock	5
0740		96 61 307		LH	1	.Rear view mirror	.Backspegel	4
0750		96 61 364		RH	1	.Rear view mirror	.Backspegel	4
0760								
0770	5	85 47 325		37,267) I, RHD	X	Rear view mirror kit	Backspegelsats	4
0780		95 05 488		MIRROR	1	.Switch	.Strömställare	3
0790		*96 94 704*		LH NLS - USE 4268389	1	.Cover	.Täcklock	5
0800		*96 60 051*		RH NLS - USE 9694696	1	.Cover	.Täcklock	5
0810		96 61 208		LH	1	.Rear view mirror	.Backspegel	4
0820		96 61 240		RH	1	.Rear view mirror	.Backspegel	4
0830								
0840	5	43 68 593		37,268) I, LHD	X	Rear view mirror kit	Backspegelsats	4
0850		95 05 488		MIRROR	1	.Switch	.Strömställare	3
0860		42 68 369		LH	1	.Cover	.Täcklock	5
0870		42 68 397		RH	1	.Cover	.Täcklock	5
0880		96 61 307		LH	1	.Rear view mirror	.Backspegel	4
0890		96 61 364		RH	1	.Rear view mirror	.Backspegel	4
0900								
0910	5	43 68 601		37,268) I, RHD	X	Rear view mirror kit	Backspegelsats	4
0920		95 05 488		MIRROR	1	.Switch	.Strömställare	3
0930		42 68 389		LH	1	.Cover	.Täcklock	5
0940		42 68 397		RH	1	.Cover	.Täcklock	5
0950		96 61 208		LH	1	.Rear view mirror	.Backspegel	4
0960		96 61 240		RH	1	.Rear view mirror	.Backspegel	4
0970								
0980	6	85 48 109		37,2) -1992, I, WINDOWS, MIRRORS	X	Cable harness kit	Ledningsnätssats	5
0990								
1000		40 67 104			1	.Cable harness	.Ledningsnät	6
1010		95 26 872			1	.Cable harness	.Ledningsnät	5
1020		79 71 880			6	.Tensioning band	.Spännband	4
1030								
1040	6	85 48 760		37,2) 1993-, I, WINDOWS, MIRRORS	X	Cable harness kit	Ledningsnätssats	5
1050								
1060		43 52 266			1	.Cable harness	.Ledningsnät	6
1070		43 52 [illegible]64			1	.Cable harness	.Ledningsnät	6
1080		79 71 [illegible]			6	.Tensioning band	.Spännband	4


2. Front Främre
3. Rear Bakre
37. Electrically adjustable Elmanövrerad
267. Ch. -N1037677
268. Ch. N1037678-


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

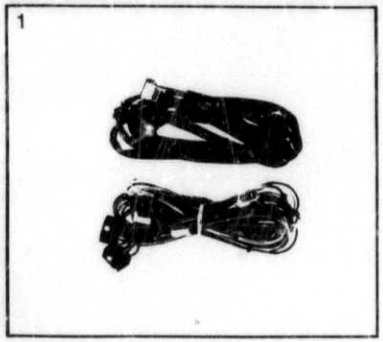


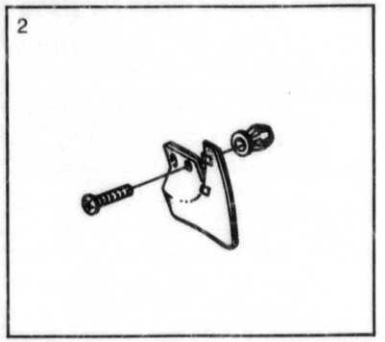

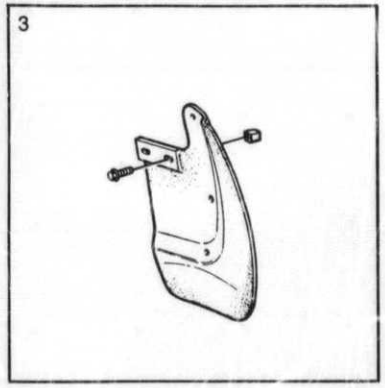

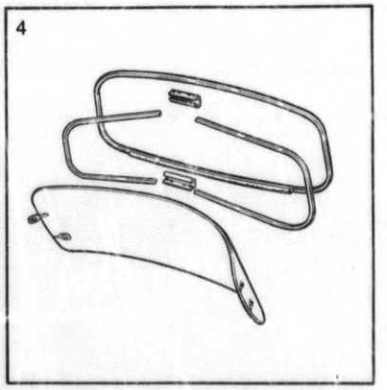

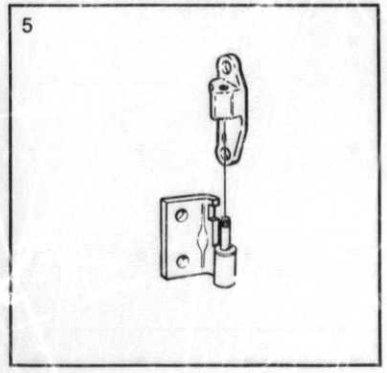

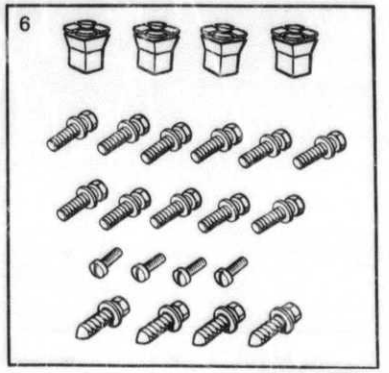

F1415 CAC90

Complete sets
5-G16
Car body, external

Satser
Kaross, utvändig

2650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 47 390		37,3) I, WINDOWS	X	Cable harness	Ledningsnät	5
0020		95 23 598			2	.Cable harness	.Ledningsnät	5
0030		79 71 880			2	.Tensioning band	.Spännband	4
0040								
0050	2	*96 98 416*		2) -1990, LH AND RH NLS - USE 8284721	X	Baffle	Stänkskydd	3
0060		80 59 271		FOR MOUNTING	1	.Screw	.Skruv	5
0070		*79 81 947*		NLS - USE 7335540, 8019598	4	.Screw	.Skruv	5
0080		40 08 959		LH	1	.Baffle	.Stänkskydd	4
0090		92 79 407		RH	1	.Baffle	.Stänkskydd	4
0100		92 68 846			4	.Nut	.Mutter	5
0110								
0120	2	*96 98 424*		2) -1990, LH NLS - USE 8284747	X	Baffle	Stänkskydd	3
0130		*79 81 947*		NLS - USE 7335540, 8019598	2	.Screw	.Skruv	5
0140		*92 79 415*		NLS - USE 4008959	1	.Baffle	.Stänkskydd	4
0150								
0160	2	*96 98 432*		2) -1990, RH NLS - USE 8284739	X	Baffle	Stänkskydd	3
0170		*79 81 947*		NLS - USE 7335540, 8019598	2	.Screw	.Skruv	5
0180		92 79 407			1	.Baffle	.Stänkskydd	4
0190								
0200	2	82 84 721		2) 1991-, LH AND RH	X	Baffle	Stänkskydd	3
0210		79 82 325			4	.Screw	.Skruv	5
0220		40 08 959		LH	1	.Baffle	.Stänkskydd	4
0230		40 08 942		RH	1	.Baffle	.Stänkskydd	4
0240		90 87 040			4	.Nut	.Mutter	5
0250								
0260	2	82 84 747		2) 1991-, LH	X	Baffle	Stänkskydd	3
0270		79 82 325			2	.Screw	.Skruv	5
0280		90 87 040			2	.Nut	.Mutter	5
0290		40 08 959			1	.Baffle	.Stänkskydd	4
0300								
0310	2	82 84 739		2) 1991-, RH	X	Baffle	Stänkskydd	3
0320		79 82 325			2	.Screw	.Skruv	5
0330		90 87 040			2	.Nut	.Mutter	5
0340		40 08 942			1	.Baffle	.Stänkskydd	4
0350								
0360	3	96 98 440		3)-1991, LH	X	Baffle	Stänkskydd	3
0370		79 73 191			5	.Screw	.Skruv	5
0380		92 68 038			1	.Baffle	.Stänkskydd	3
0390								
0400	3	96 98 457		3)-1991, RH	X	Baffle	Stänkskydd	3
0410		79 73 191			5	.Screw	.Skruv	5
0420		92 68 020			1	.Baffle	.Stänkskydd	3
0430								
0440	3	82 84 663		3)1992-, LH	X	Baffle	Stänkskydd	3
0450		40 99 776			1	.Baffle	.Stänkskydd	3
0460		79 82 325			4	.Screw	.Skruv	5
0470								
0480	3	82 84 655		3)1992-, RH	X	Baffle	Stänkskydd	3
0490		40 99 768			1	.Baffle	.Stänkskydd	3
0500		79 82 325			4	.Screw	.Skruv	5
0510								
0520	4	82 84 069		-1993, 4D	X	Rear window	Bakruta	4
0530		*69 43 559*		1) NLS - USE 4304150	1	.Rear window	.Bakruta	4


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre
37. Electrically adjustable Elmanövrerad


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

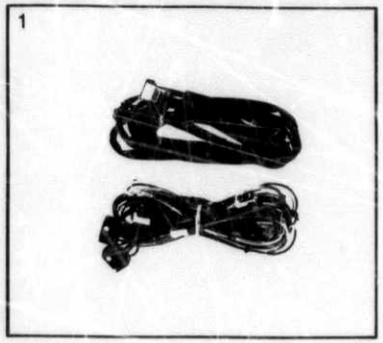


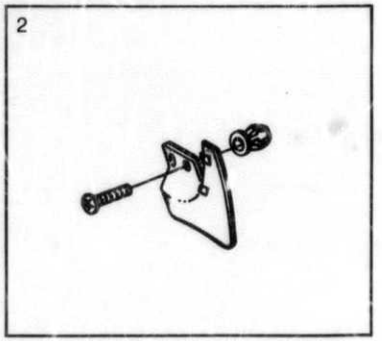

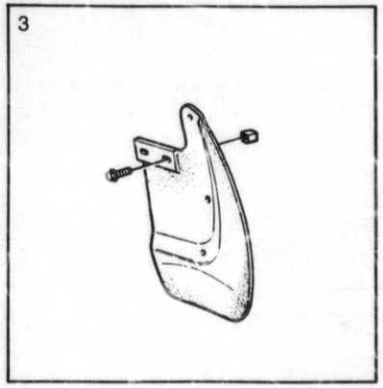

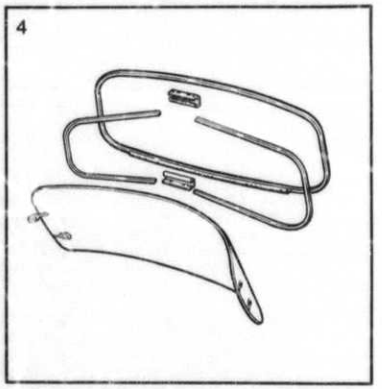

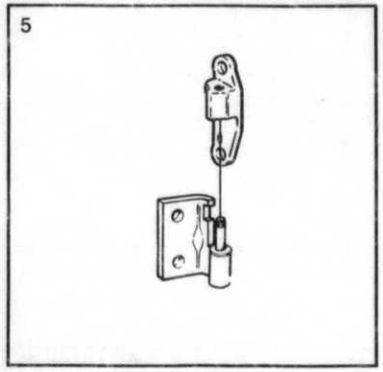

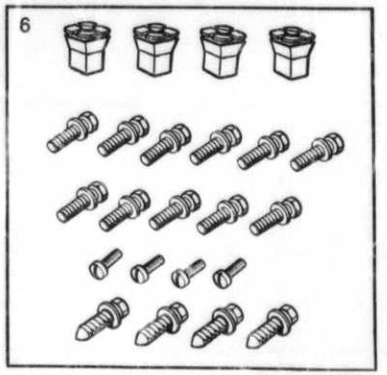

F1415 CAC90

Complete sets
5-G18
Car body, external

Satser
Kaross, utvändig

2650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540		69 48 871			1	.Cover moulding	.Täcklist	3
0550		69 62 807		RH	1	.Strip holder	.Hållarlist	3
0560		69 62 815		LH	1	.Strip holder	.Hållarlist	3
0570		92 78 334			2	.Connector	.Skarvstycke	3
0580		69 91 244			4	.Spacer	.Distans	3
0590		69 92 028			3	.Spacer	.Distans	3
0600								
0619	5	82 84 085		LH	X	Hinge kit	Gångjärnssats	5
0620		69 60 793		FIXED, LH	1	.Hinge	.Gångjärn	4
0630		*69 61 718*		LH NLS - USE 4306809	1	.Hinge	.Gångjärn	5
0640								
0650	5	82 84 077		RH	X	Hinge kit	Gångjärnssats	5
0660		69 60 785		FIXED, RH	1	.Hinge	.Gångjärn	4
0670		*69 61 700*		RH NLS - USE 4306791	1	.Hinge	.Gångjärn	5
0680								
0690	6	69 62 708		248)	X	Mounting kit air shield	Monteringssats luftskärm	3
0700								
0710		79 75 279			4	.Nut	.Mutter	5
0720		79 76 988			11	.Screw	.Skruv	5
0730		79 77 465			4	.Screw	.Skruv	5
0740								
0750	6	40 09 502		249)	X	Mounting kit air shield	Monteringssats luftskärm	3
0760								
0770		79 82 325			14	.Screw	.Skruv	5
0780		79 82 655			4	.Press nut	.Pressmutter	5

248. Ch. --N1014491
249. Ch. N1014492--


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX


Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


5-G20

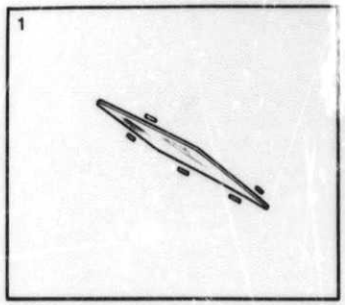

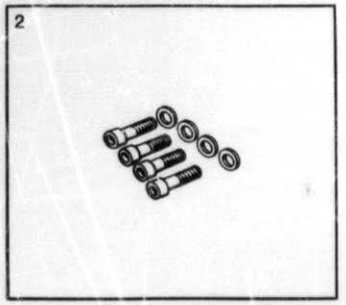

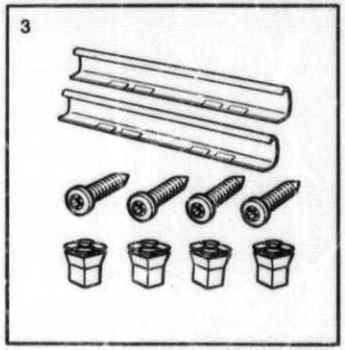

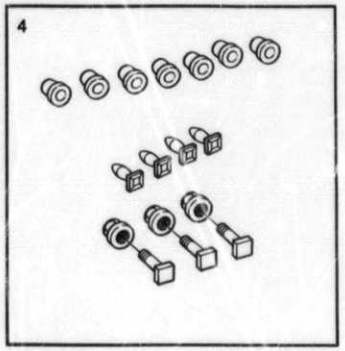

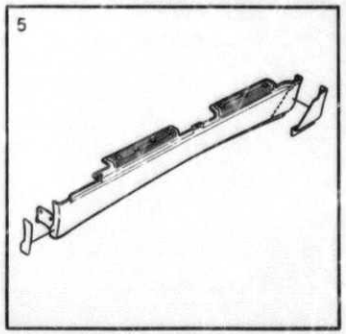



F4624 CAC90

2700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 580		5D	X	Rear window	Bakruta	4
0020		40 14 163			1	.Decor strip	.Dekorlist	3
0030		40 13 603		(4171229)	2	.Spacer	.Distans	3
0040		69 56 734			3	.Spacer	.Distans	3
0050		92 59 565			1	.Spacer	.Distans	3
0060		92 77 229		1)	1	.Rear window	.Bakruta	4
0070								
0080	1	82 84 598		5D, GB	X	Rear window	Bakruta	4
0090		40 14 163			1	.Decor strip	.Dekorlist	3
0100		40 13 603		(4171229)	2	.Spacer	.Distans	3
0110		69 48 590		1) WITH WIPER HOLE	1	.Rear window	.Bakruta	4
0120		69 37 981			1	..Cover	..Lock	5
0130		69 48 566			1	..Grommet	..Genomföring	5
0140		69 48 574			1	..Cover	..Lock	5
0150		79 65 833			1	..Screw	..Skruv	5
0160		69 56 734			3	.Spacer	.Distans	3
0170		92 59 565	S		1	.Spacer	.Distans	3
0180								
0190	2	92 40 086			X	Mounting kit registration plate	Monteringssats registreringsskylt	5
0200								
0210		73 98 506		1)	4	.Washer	.Bricka	5
0220		79 77 390		1)	4	.Screw	.Skruv	5
0230								
0240	3	82 84 531			X	Mounting kit windscreen	Monteringssats vindruta	3
0250								
0260		42 50 320			1	.Decor strip	.Dekorlist	3
0270		79 70 601			4	.Screw	.Skruv	5
0280		79 75 261			4	.Nut	.Mutter	5
0290		92 78 334			2	.Connector	.Skarvstycke	3
0300								
0310	4	74 96 029		2)	X	Mounting kit Wheel house moulding	Monteringssats Hjulhusdekor	4
0320								
0330		73 73 269			8	.Bushing	.Bussning	5
0340		73 99 470			8	.Screw	.Skruv	5
0350		73 99 488			8	.Nut	.Mutter	5
0360								
0370	4	74 96 037		3)	X	Mounting kit Wheel house moulding	Monteringssats Hjulhusdekor	4
0380								
0390		73 73 269			7	.Bushing	.Bussning	5
0400		73 99 470			3	.Screw	.Skruv	5
0410		73 99 488			3	.Nut	.Mutter	5
0420		92 53 329			4	.Clip	.Clips	5
0430								
0440	5	82 84 614		-1990, T16SA, LH	X	Side shield	Sidoskköld	2
0450		86 62 827			1	.Protective foil	.Skyddsfolie	9
0460		86 62 843			1	.Protective foil	.Skyddsfolie	9
0470		86 67 529		1)	1	.Side shield	.Sidoskköld	2
0480								
0490	5	82 84 606		-1990, T16SA, RH	X	Side shield	Sidoskköld	2
0500		86 62 819			1	.Protective foil	.Skyddsfolie	9
0510		86 62 835			1	.Protective foil	.Skyddsfolie	9
0520		86 67 511		1)	1	.Side shield	.Sidoskköld	2
0530								
0540	5	82 84 804		1991-1992, T16SA, LH	X	Side shield	Sidoskköld	2
0550		86 66 679			1	.Protective foil	.Skyddsfolie	9
0560		86 66 687			1	.Protective foil	.Skyddsfolie	9
0570		86 70 432		1)	1	.Side shield	.Sidoskköld	2
0580								
0590	5	82 84 796		1991-1992, T16SA, RH	X	Side shield	Sidoskköld	2
0600		86 66 653			1	.Protective foil	.Skyddsfolie	9


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

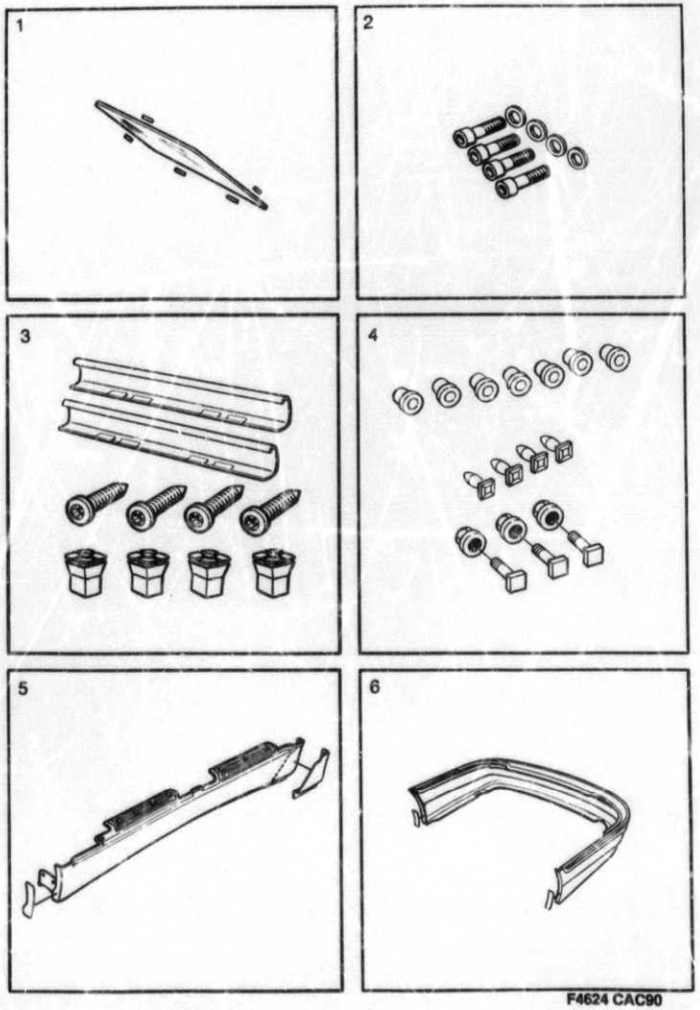

F4624 CAC90

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2700								
0610		86 66 661			1	.Protective foil	.Skyddsfolie	9
0620		86 70 424		1)	1	.Side shield	.Sidoskköld	2
0630								
0640	5	82 85 439		1993-, 5CS AERO, LH	X	Sill cover	Tröskelbreddare	2
0650		44 47 124			1	.Protective foil	.Skyddsfolie	9
0660		86 62 843			1	.Protective foil	.Skyddsfolie	9
0670		69 59 464			2	.Screw	.Skruv	5
0680		44 35 210		1)	1	.Sill cover	.Tröskelbreddare	2
0690								
0700	5	82 85 421		1993-, 5CS AERO, RH	X	Sill cover	Tröskelbreddare	2
0710		44 47 116			1	.Protective foil	.Skyddsfolie	9
0720		86 62 835			1	.Protective foil	.Skyddsfolie	9
0730		69 59 464			2	.Screw	.Skruv	5
0740		44 35 202		1)	1	.Sill cover	.Tröskelbreddare	2
0750								
0760	6	82 84 622		-1990, T16SA	X	Outer casing	Hölje	3
0770		86 62 967		LH	1	.Protective foil	.Skyddsfolie	9
0780		86 62 959		RH	1	.Protective foil	.Skyddsfolie	9
0790		86 67 511		1)	1	.Side shield	.Sidoskköld	2
0800								
0810	6	82 84 788		1991-1992, T16SA	X	Outer casing	Hölje	3
0820		86 67 214		LH	1	.Protective foil	.Skyddsfolie	9
0830		86 67 206		RH	1	.Protective foil	.Skyddsfolie	9
0840		86 70 846		1)	1	.Outer casing	.Hölje	3
0850								
0860	6	82 85 413		1993-, 5CS AERO	X	Outer casing	Hölje	3
0870		86 67 214		LH	1	.Protective foil	.Skyddsfolie	9
0880		86 67 206		RH	1	.Protective foil	.Skyddsfolie	9
0890		44 35 194		1)	1	.Outer casing	.Hölje	3

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

Complete sets
5-G24
Car body, external

Satser
Kaross, utvändig

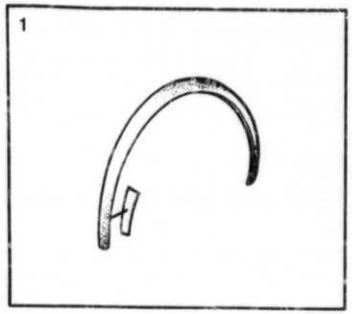

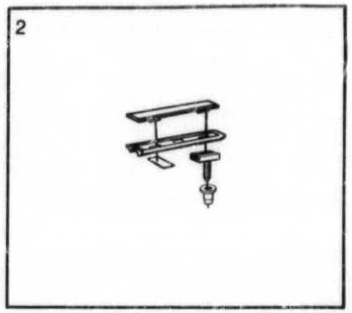



F3717 - CAC90

2750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 648		3) -1990, LH, T16SA	X	Mudguard widener	Skärmbreddare	2
0020		86 63 270			1	.Protective foil	.Skyddsfolie	9
0030		86 67 560		1)	1	.Mudguard widener	.Skärmbreddare	2
0040								
0050	1	82 84 630		3) -1990, RH, T16SA	X	Mudguard widener	Skärmbreddare	2
0060		86 63 262			1	.Protective foil	.Skyddsfolie	9
0070		86 67 552		1)	1	.Mudguard widener	.Skärmbreddare	2
0080								
0090	1	82 84 820		3) 1991-1992, LH, T16SA	X	Mudguard widener	Skärmbreddare	2
0100		86 67 198			1	.Protective foil	.Skyddsfolie	9
0110		86 70 587		1)	1	.Mudguard widener	.Skärmbreddare	2
0120		40 90 197			3	.Clip	.Clips	5
0130								
0140	1	82 84 812		3) 1991-1992, RH, T16SA	X	Mudguard widener	Skärmbreddare	2
0150		86 67 180			1	.Protective foil	.Skyddsfolie	9
0160		86 70 879		1)	1	.Mudguard widener	.Skärmbreddare	2
0170		40 90 197			3	.Clip	.Clips	5
0180								
0190	1	82 85 447		3) 1993-, 5CS AERO, LH	X	Mudguard widener	Skärmbreddare	2
0200		86 63 270			1	.Protective foil	.Skyddsfolie	9
0210		44 35 152		1)	1	.Mudguard widener	.Skärmbreddare	2
0220								
0230	1	82 85 454		3) 1993-, 5CS AERO, RH	X	Mudguard widener	Skärmbreddare	2
0240		86 63 262			1	.Protective foil	.Skyddsfolie	9
0250		44 35 145		1)	1	.Mudguard widener	.Skärmbreddare	2
0260								
0270	2	82 84 374		181) LH	X	Moulding kit	Dekorlistsats	4
0280		69 93 513		LH	1	.Decor strip	.Dekorlist	5
0290		40 96 616			3	.Bushing	.Bussning	5
0300		40 97 457		LH	1	.Decor	.Dekor	5
0310		90 87 560			3	.Clip	.Clips	5
0320								
0330	2	82 84 382		181) RH	X	Moulding kit	Dekorlistsats	4
0340		69 93 505		RH	1	.Decor strip	.Dekorlist	5
0350		40 96 616			3	.Bushing	.Bussning	5
0360		40 97 440		RH	1	.Decor	.Dekor	5
0370		90 87 560			3	.Clip	.Clips	5
0380								
0390	3	82 84 572		1992-, LH, 5D	X	Stone guard kit	Stenskottsskyddsats	5
0400		40 05 229			4	.Clip	.Clips	5
0410		*40 05 237*		NLS - USE 4008504, 7982325	2	.Nut	.Mutter	5
0410								
0420		40 06 110			1	.Stone guard	.Stenskottsskydd	5
0430		69 59 464			2	.Screw	.Skruv	5
0440		73 73 269			4	.Bushing	.Bussning	5
0450		73 99 488			2	.Nut	.Mutter	5
0460		*79 72 953*		NLS - USE 7922370, 8029944	2	.Screw	.Skruv	5
0460								
0470		79 77 465			4	.Screw	.Skruv	5
0480		92 78 151			2	.Bushing	.Bussning	5
0490								
0500	3	82 84 564		1992-, RH, 5D	X	Stone guard kit	Stenskottsskyddsats	5
0510		40 05 229			4	.Clip	.Clips	5
0520		*40 05 237*		NLS - USE 4008504, 7982325	2	.Nut	.Mutter	5
0520								
0530		40 06 102			1	.Stone guard	.Stenskottsskydd	5
0540		69 59 484			2	.Screw	.Skruv	5
0550		73 73 269			4	.Bushing	.Bussning	5
0560		73 99 488			2	.Nut	.Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre
181. Body 1991--, 1187186--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D06
Bumpers and touch-up paint	5-F12
Complete sets	5-G08


Complete sets

5-H02

Car body, external

Satser

Kaross, utvändig

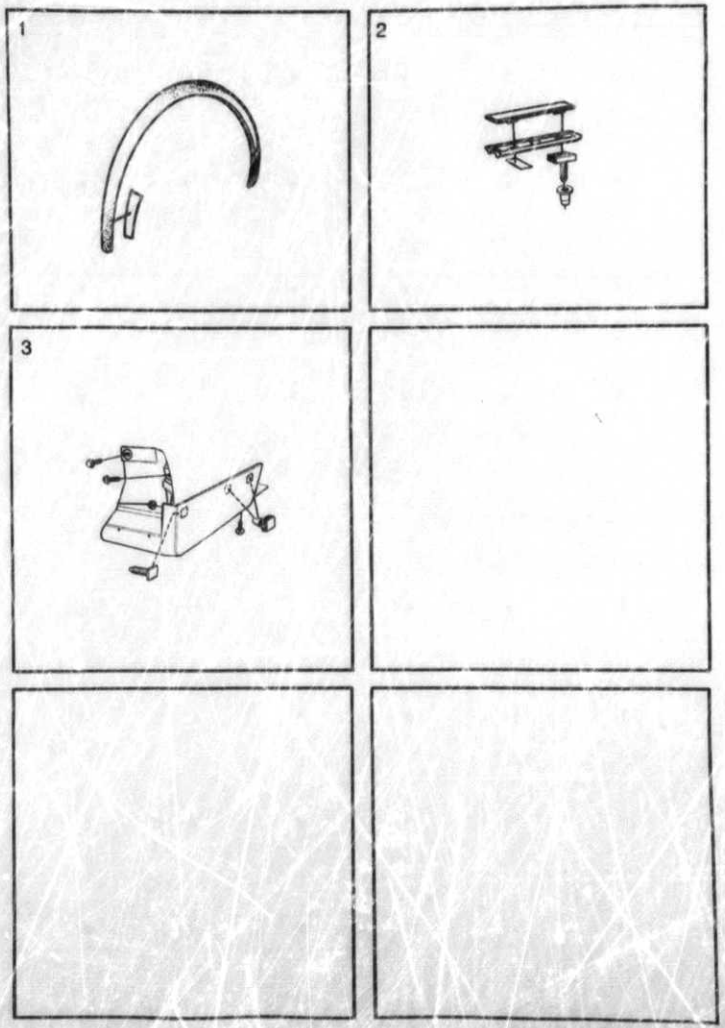

F3717 - CAC90

2750	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570		*79 72 953*		NLS - USE 7922370, 8029944	2	.Screw	.Skruv	5
0570		79 77 465			4	.Screw	.Skruv	5
0580		92 78 151			2	.Bushing	.Bussning	5
0590								
0600								
0610	3	82 84 556		1992-, LH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0620		40 05 229			4	.Clip	.Clips	5
0630		*40 05 237*		NLS - USE 4008504, 7982325	2	.Nut	.Mutter	5
0630								
0640		40 06 136			1	.Stone guard	.Stenskottsskydd	5
0650		69 59 464			2	.Screw	.Skruv	5
0660		73 73 269			4	.Bushing	.Bussning	5
0670		73 99 488			2	.Nut	.Mutter	5
0680		*79 72 953*		NLS - USE 7922370, 8029944	2	.Screw	.Skruv	5
0680								
0690		79 77 465			4	.Screw	.Skruv	5
0700		92 78 151			2	.Bushing	.Bussning	5
0710								
0720	3	82 84 549		1992-, RH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0730		40 05 229			4	.Clip	.Clips	5
0740		*40 05 237*		NLS - USE 4008504, 7982325	2	.Nut	.Mutter	5
0740								
0750		40 06 128			1	.Stone guard	.Stenskottsskydd	5
0760		69 59 464			2	.Screw	.Skruv	5
0770		73 73 269			4	.Bushing	.Bussning	5
0780		73 99 488			2	.Nut	.Mutter	5
0790		*79 72 953*		NLS - USE 7922370, 8029944	2	.Screw	.Skruv	5
0790								
0800		79 77 465			4	.Screw	.Skruv	5
0810		92 78 151			2	.Bushing	.Bussning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8A GROUP INDEX

Car body	5-A06
Hood, front, fenders	5-B16
Doors, trunk lid	5-C02
External details, glass, sealings	5-D08
Bumpers and touch-up paint	5-F12
Complete sets	5-G08

8B

Body, internal
Kaross, invändig
Carrocería, inferior

6-A02

0041
0020
0030
0040
0050
0060
0160
0170
0175
0180
0190
0200
0400
0410
0420
0482
0484
0486
0488
0489
0490
0495
0496
0497
0510
0511
0512
0513
0517
0540
0547
0548
0549
0556
0559
0582
0584
0586
0587
0588
0589
0590
0592
0594
0596
0600
0610
0620
0625
0630
0640
0780
0790

TABLE OF CONTENTS

Instrument panel		
Instrument panel, upper section	8B : 5	6-A06
Instrument panel, panel	8B : 9	6-A10
Instrument panel, instrument frame	8B : 11	6-A12
Instrument panel, glove compartment	8B : 13	6-A14
Instrument panel, centre console	8B : 15	6-A16
Upholstery		
Insulation	8B : 19	6-A20
Sound insulation	8B : 21	6-A22
Covers "Horizon pattern" 1990	8B : 27	6-B04
Covers "Contour design" 1990	8B : 31	6-B08
Covers "Horizon pattern" 1991	8B : 35	6-B12
Covers "Contour design" 1991	8B : 43	6-B20
Covers "Horizon pattern" 1992	8B : 49	6-C02
Covers "Contour design" 1992	8B : 59	6-C12
Covers "Horizon pattern" 1993	8B : 63	6-C16
Covers "Contour design" 1993	8B : 71	6-C24
Covers "Sports design" 1993	8B : 77	6-D06
Door trim 1990	8B : 79	6-D08
Door trim 1991	8B : 91	6-D20
Door trim 1992	8B : 103	6-E08
Door trim 1993	8B : 115	6-E20
Upholstery luggage compartment	8B : 131	6-F12
Carpets 1990	8B : 135	6-F16
Carpets 1991	8B : 139	6-F20
Carpets 1992	8B : 143	6-F24
Carpets 1993	8B : 147	6-G04
Headlining, pillar lining	8B : 151	6-G08
Other interior equipment		
Front seats Part 1	8B : 155	6-G12
Front seats Part 2	8B : 159	6-G16
Front seats Part 3	8B : 163	6-G20
Front seats Part 1, electrically adjustable	8B : 167	6-G24
Front seats Part 2, electrically adjustable	8B : 173	6-H06
Front seats Part 3, electrically adjustable	8B : 177	6-H10
Rear seat, seat cushion	8B : 179	6-H12
Rear seat, back cushion	8B : 183	6-H16
Rear seat, fixed, seat cushion	8B : 187	6-H20
Rear seat, fixed, back cushion	8B : 189	6-H22
Equipment luggage compartment	8B : 191	6-H24
Scuff plate protector	8B : 195	6-I04
Other interior equipment	8B : 199	6-I08
Shelf	8B : 201	6-I10
Safety belt, front seat	8B : 209	6-I18
Safety belt, rear seat	8B : 213	6-I22
Complete sets		
Car body, internal	8B : 215	6-I24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

INNEHÅLLSFÖRTECKNING

Instrumentpanel		
Instrumentpanel, övero [illegible]	8B : 5	6-A06
Instrumentpanel, pane[illegible]	8B : 9	6-A10
Instrumentpanel, instrumen[illegible]m	8B : 11	6-A12
Instrumentpanel, handskfac[illegible]	8B : 13	6-A14
Instrumentpanel, mittkonso[illegible]	8B : 15	6-A16
Klädsel		
Isolering	8B : 19	6-A20
Ljudisolering	8B : 21	6-A22
Klädselpåsar "Horisont mönster" 1990	8B : 27	6-B04
Klädselpåsar "Contour design" 1990	8B : 31	6-B08
Klädselpåsar "Horisont mönster" 1991	8B : 35	6-B12
Klädselpåsar "Contour design" 1991	8B : 43	6-B20
Klädselpåsar "Horisont mönster" 1992	8B : 49	6-C02
Klädselpåsar "Contour design" 1992	8B : 59	6-C12
Klädselpåsar "Horisont mönster" 1993	8B : 63	6-C16
Klädselpåsar "Contour design" 1993	8B : 71	6-C24
Klädselpåsar "Sports design" 1993	8B : 77	6-D06
Dörrklädsel etc. 1990	8B : 79	6-D08
Dörrklädsel etc. 1991	8B : 91	6-D20
Dörrklädsel etc. 1992	8B : 103	6-E08
Dörrklädsel etc. 1993	8B : 115	6-E20
Klädsel bagagerum	8B : 131	6-F12
Mattor etc. 1990	8B : 135	6-F16
Mattor etc. 1991	8B : 139	6-F20
Mattor etc. 1992	8B : 143	6-F24
Mattor etc. 1993	8B : 147	6-G04
Takklädsel, stolpklädsel, etc	8B : 151	6-G08
Övrig invändig utrustning		
Stolar Del 1	8B : 155	6-G12
Stolar Del 2	8B : 159	6-G16
Stolar Del 3	8B : 163	6-G20
Stolar Del 1, elmanövrerade	8B : 167	6-G24
Stolar Del 2, elmanövrerade	8B : 173	6-H06
Stolar Del 3, elmanövrerade	8B : 177	6-H10
Baksäte, sittdyna	8B : 179	6-H12
Baksäte, ryggdyna	8B : 183	6-H16
Baksäte, fast, sittdyna	8B : 187	6-H20
Baksäte, fast, ryggdyna	8B : 189	6-H22
Utrustning bagagerum	8B : 191	6-H24
Tröskelskydd	8B : 195	6-I04
Övrig invändig utrustning	8B : 199	6-I08
Hatthylla	8B : 201	6-I10
Bilbälte, framsäte	8B : 209	6-I18
Bilbälte, baksäte	8B : 213	6-I22
Satser:		
Kaross, invändig	8B : 215	6-I24

SUMARIO

Tablero de instrumentos		
Tablero de instrumentos, seccion superior	8B : 5	6-A06
Tablero de instrumentos, panel	8B : 9	6-A10
Tablero de instrumentos, bastidor instrumentos	8B : 11	6-A12
Tablero de instrumentos, guantera	8B : 13	6-A14
Tablero de instrumentos, soporte central	8B : 15	6-A16
Tapiceria		
Aislamiento	8B : 19	6-A20
Aislation de sonido	8B : 21	6-A22
Fundas de asiento, muestra en Horizon" 1990	8B : 27	6-B04
Fundas de asiento, diseno "Contour" 1990	8B : 31	6-B08
Fundas de asiento, muestra en Horizon" 1991	8B : 35	6-B12
Fundas de asiento, diseno "Contour" 1991	8B : 43	6-B20
Fundas de asiento, muestra en Horizon" 1992	8B : 49	6-C02
Fundas de asiento, diseno "Contour" 1992	8B : 59	6-C12
Fundas de asiento, muestra en Horizon" 1993	8B : 63	6-C16
Fundas de asiento, diseno "Contour" 1993	8B : 71	6-C24
Fundas de asiento, diseno "Sports" 1993	8B : 77	6-D06
Tapiceria de puerta, etc. 1990	8B : 79	6-D08
Tapiceria de puerta, etc. 1991	8B : 91	6-D20
Tapiceria de puerta, etc. 1992	8B : 103	6-E08
Tapiceria de puerta, etc. 1993	8B : 115	6-E20
Tapiceria compartimento de equipaj es	8B : 131	6-F12
Moquetas etc. 1990	8B : 135	6-F16
Moquetas etc. 1991	8B : 139	6-F20
Moquetas etc. 1992	8B : 143	6-F24
Moquetas etc. 1993	8B : 147	6-G04
Tapiceria del techo, de los montan tes, etc	8B : 151	6-G08
Otro equipo interior		
Asientos Del 1a parte	8B : 155	6-G12
Asientos Del 2a parte	8B : 159	6-G16
Asientos Del 3a parte	8B : 163	6-G20
Asientos Del 1a parte, maniobra electrica	8B : 167	6-G24
Asientos Del 2a parte, maniobra electrica	8B : 173	6-H06
Asientos Del 3a parte, maniobra electrica	8B : 177	6-H10
Asientos Tras, almohadillo del cojin	8B : 179	6-H12
Asientos Tras, cojin de respaldo	8B : 183	6-H16
Asientos Tras, fijo, almohadillo del cojin	8B : 187	6-H20
Asientos Tras, fijo,cojin de respaldo	8B : 189	6-H22
Compartimento para equipo	8B : 191	6-H24
Proteccion de umbral	8B : 195	6-I04
Otro equipo interior	8B : 199	6-I08
Tablilla trassera	8B : 201	6-I10
Cinturon de seguridad, Del	8B : 209	6-I18
Cinturon de seguridad, Tras	8B : 213	6-I22
Juegos completos		
Carosseria, interior	8B : 215	6-I24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Instrument panel

6-A06

Upper section

Instrumentpanel

Överdel

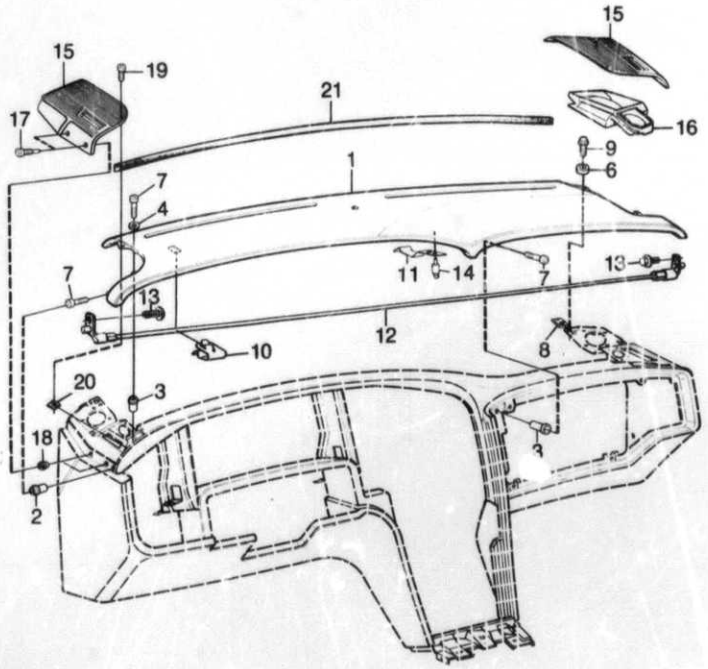

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 82 756		210)	1	Cover	Lock	6
0020	1	40 82 749		210), ACC	1	Cover	Lock	6
0030								
0040	1	40 37 222		60), 1990	1	Cover	Lock	6
0050	1	*40 51 736*		60), 1990, ACC NLS - USE 4080156	1	Cover	Lock	6
0050								
0060	1	40 80 206		60), 1991	1	Cover	Lock	6
0070	1	40 80 156		60), 1991, ACC	1	Cover	Lock	6
0080								
0090	1	*40 37 248*		80), 1990 NLS - USE 4080222	1	Cover	Lock	6
0090								
0100	1	*40 51 751*		80), 1990, ACC NLS - USE 4080172	1	Cover	Lock	6
0100								
0110	1	40 80 222		80), 1991-	1	Cover	Lock	6
0120	1	40 80 172		80), 1991-, ACC	1	Cover	Lock	6
0130								
0140	1	*40 37 255*		90), 1990 NLS - USE 4080230	1	Cover	Lock	6
0140								
0150	1	*40 51 769*		90), 1990, ACC NLS - USE 4080180	1	Cover	Lock	6
0150								
0160	1	40 80 230		90), 1991-	1	Cover	Lock	6
0170	1	40 80 180		90), 1991-, ACC	1	Cover	Lock	6
0180								
0190	1	*40 37 263*		70), 1990 NLS - USE 4080214	1	Cover	Lock	6
0190								
0200	1	*40 51 744*		70), 1990, ACC NLS - USE 4080164	1	Cover	Lock	6
0200								
0210	1	40 80 214		70), 1991-	1	Cover	Lock	6
0220	1	40 80 164		70), 1991-, ACC	1	Cover	Lock	6
0230								
0240	1	44 36 366		210), 1993-, RHD	1	Cover	Lock	6
0250	1	44 36 390		210), 1993-, RHD, ACC	1	Cover	Lock	6
0260								
0270	1	44 36 341		80), 1993, RHD	1	Cover	Lock	6
0280	1	44 36 374		80), 1993, RHD, ACC	1	Cover	Lock	6
0290								
0300	1	44 36 358		90), 1993-, RHD	1	Cover	Lock	6
0310	1	44 36 382		90), 1993-, RHD, ACC	1	Cover	Lock	6
0320								
0330	1	*40 37 313*		70), 1990, RHD NLS - USE 4080248	1	Cover	Lock	6
0340	1	*40 51 793*		70), 1990, RHD, ACC NLS - USE 4080198	1	Cover	Lock	6
0350	1	40 80 248		70), 1991-, RHD	1	Cover	Lock	6
0360	1	40 80 198		70), 1991-, RHD, ACC	1	Cover	Lock	6
0370								
0380	2	73 99 579			2	Blind rivet nut	Blindnitmutter	5
0390	3	97 59 846			3	Blind rivet nut	Blindnitmutter	5
0400	4	70 45 776			2	Washer	Bricka	5
0405	6	75 54 215		RHD	1	Spacer	Distans	5
0410	7	79 72 193			5	Screw	Skruv	5
0420	8	79 72 573			2	Clip nut	Clipsmutter	5
0430	9	*79 73 126*		NLS - USE 7972128	2	Screw	Skruv	5
0434	9	*79 73 126*		RHD, LH NLS - USE 7972128	1	Screw	Skruv	5
0434								
0435	9	79 77 465		RHD, RH	1	Screw	Skruv	5
0440	10	*40 32 017*		254) NLS - USE 4086419	3	Clamp	Klämma	5


60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige
254. Ch. -N1025107

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

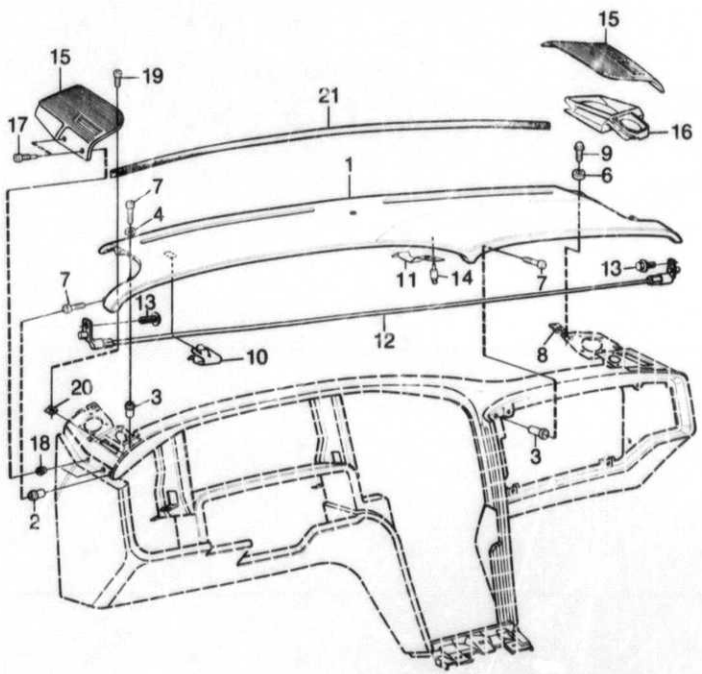

F5905 CAC90

Instrument panel
6-A08
Upper section

Instrumentpanel
Överdel

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	10	40 86 419		255)	3	Clamp	Klämma	5
0460	11	40 35 093			1	Spring	Fjäder	5
0470	12	40 30 003			1	Cable	Wire	5
0480	13	79 75 212			2	Screw	Skruv	5
0490	14	79 77 804			1	Rivet	Nit	5
0500	15	40 83 432		210), LH	1	Loudspeaker grille	Högtalargaller	5
0510	15	40 83 457		210,44), LH	1	Loudspeaker grille	Högtalargaller	5
0520	15	40 41 133		60), LH, -1991	1	Loudspeaker grille	Högtalargaller	5
0530	15	40 41 323		60,44), LH, -1991	1	Loudspeaker grille	Högtalargaller	5
0540	15	40 41 174		80), LH	1	Loudspeaker grille	Högtalargaller	5
0550	15	40 41 349		80,44), LH	1	Loudspeaker grille	Högtalargaller	5
0560	15	40 41 190		90), LH	1	Loudspeaker grille	Högtalargaller	5
0570	15	40 41 356		90,44), LH	1	Loudspeaker grille	Högtalargaller	5
0580	15	40 41 158		70), LH	1	Loudspeaker grille	Högtalargaller	5
0590	15	40 41 331		70,44), LH	1	Loudspeaker grille	Högtalargaller	5
0595								
0600	15	40 41 257		70), LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0601	15	44 36 507		210), 1993-, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0602	15	44 36 481		90), 1993-, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0603	15	44 36 465		80), 1993, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0610								
0620	15	40 83 440		210), RH	1	Loudspeaker grille	Högtalargaller	5
0630	15	40 41 141		60), RH, -1991	1	Loudspeaker grille	Högtalargaller	5
0640	15	40 41 182		80), RH	1	Loudspeaker grille	Högtalargaller	5
0650	15	40 41 208		90), RH	1	Loudspeaker grille	Högtalargaller	5
0660	15	40 41 166		70), RH	1	Loudspeaker grille	Högtalargaller	5
0665								
0670	15	40 41 265		70), RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0671	15	44 36 515		210), 1993-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0672	15	44 36 499		90), 1993-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0673	15	44 36 473		80), 1993, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0680								
0690	16	40 32 058		LH	1	Sealing collar	Tätningskrage	5
0700	16	40 32 074		LH, RHD	1	Sealing collar	Tätningskrage	5
0710	16	40 32 041		RH	1	Sealing collar	Tätningskrage	5
0720	16	40 32 066		RH, RHD	1	Sealing collar	Tätningskrage	5
0730	17	79 77 648			4	Screw	Skruv	5
0740	18	79 35 703			4	Clip nut	Klämmutter	5
0750	19	79 75 535			2	Screw	Skruv	5
0760	20	79 72 771			2	Clip nut	Clipsmutter	5
0770	21	95 45 534			1	Felt strip	Filtlist	5

44. With theft alarm Med stöldlarm
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige
255. Ch. N1025108--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-A10

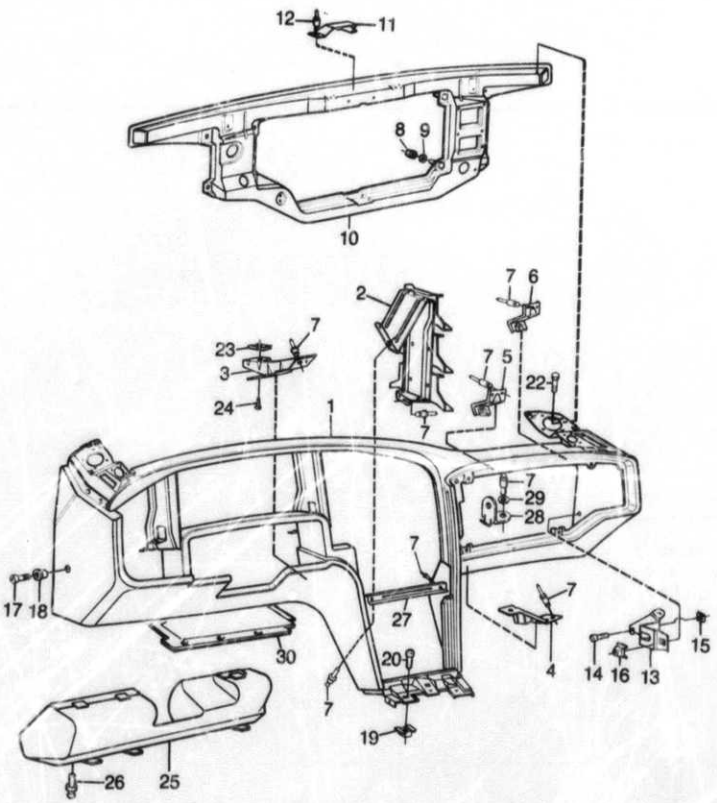

F6240 CAC93

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 81 329		210)	1	Panel	Panel	6
0030	1	95 47 599		60), -1991	1	Panel	Panel	6
0040	1	95 47 605		80)	1	Panel	Panel	6
0050	1	95 47 613		90)	1	Panel	Panel	6
0070	1	95 47 639		70)	1	Panel	Panel	6
0090	1	44 36 333		210), 1993-, RHD	1	Panel	Panel	6
0100	1	44 36 317		80), 1993-, RHD	1	Panel	Panel	6
0110	1	44 36 325		90), 1993-, RHD	1	Panel	Panel	6
0120	1	40 79 604		70), RHD	1	Panel	Panel	6
0130	2	96 91 189			1	Guide rail	Styrskena	6
0140	2	96 91 197		RHD	1	Guide rail	Styrskena	6
0150	3	97 55 117		LH	1	Bracket	Konsol	6
0160	3	97 67 302		LH, RHD	1	Bracket	Konsol	6
0170	4	97 55 125		RH	1	Bracket	Konsol	6
0180	4	97 67 294		RH, RHD	1	Bracket	Konsol	6
0190	5	97 67 526		LH	1	Bracket	Konsol	6
0200	5	96 71 355		LH, RHD	1	Bracket	Konsol	6
0210	6	97 67 534		RH	1	Bracket	Konsol	6
0220	6	96 71 363		RH, RHD	1	Bracket	Konsol	6
0230	7	79 77 804			X	Rivet	Nit	5
0240	8	79 79 602			4	Nut	Mutter	5
0250	9	89 29 531			8	Sealing washer	Tätningsbricka	5
0260	10	40 77 079		LHD	1	Carrier	Bärare	6
0280	10	40 77 087		RHD	1	Carrier	Bärare	6
0290	11	97 61 941			1	Bracket	Konsol	5
0300	12	79 68 845			2	Rivet	Nit	5
0310	13	96 63 022		RH	1	Bracket	Fäste	6
0320	13	96 63 030		LH, RHD	1	Bracket	Fäste	6
0330	14	80 59 396			2	Screw	Skruv	5
0340	15	79 74 231			2	Cage nut	Korgmutter	5
0350	16	79 75 071			2	Clip nut	Klämmutter	5
0360	17	79 72 128			2	Screw	Skruv	5
0370	18	40 82 731		210)	2	Cover	Täcklock	5
0380	18	96 76 263		60), -1991	2	Cover	Täcklock	5
0390	18	96 76 354		80)	2	Cover	Täcklock	5
0400	18	95 82 651		90)	2	Cover	Täcklock	5
0410	18	96 76 305		70)	2	Cover	Täcklock	5
0420	19	73 99 215		-1992	2	Clip nut	Klämmutter	5
0430	20	79 22 974		-1992	2	Screw	Skruv	5
0440	20	79 22 503		1993-	2	Screw	Skruv	5
0460	22	79 72 466			2	Screw	Skruv	5
0470	23	79 75 071			2	Clip nut	Klämmutter	5
0480	24	79 22 818			2	Screw	Skruv	5
0490	25	*40 32 181*		-1990, AIRBAG NLS - USE 4312906	1	Knee protection	Knäskydd	5
0500	25	43 12 906		1991-, AIRBAG	1	Knee protection	Knäskydd	5
0510	26	92 20 880		AIRBAG	3	Rivet	Nit	5
0520	27	96 78 533		LHD	1	Reinforcement	Förstärkning	6
0530	27	96 79 937		RHD	1	Reinforcement	Förstärkning	6
0540	28	96 78 442		RHD	2	Attaching bracket	Fästvinkel	5
0550	29	*80 29 936*		-1992, RHD NLS - USE 9166356	2	Washer	Bricka	5
0560	29	91 66 356		1993-, RHD	2	Washer	Bricka	5
0570	30			See page 8B-021, 6-A22		Sound insulation	Ljudisolering	

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-A12

Instrument frame
Instrumentram

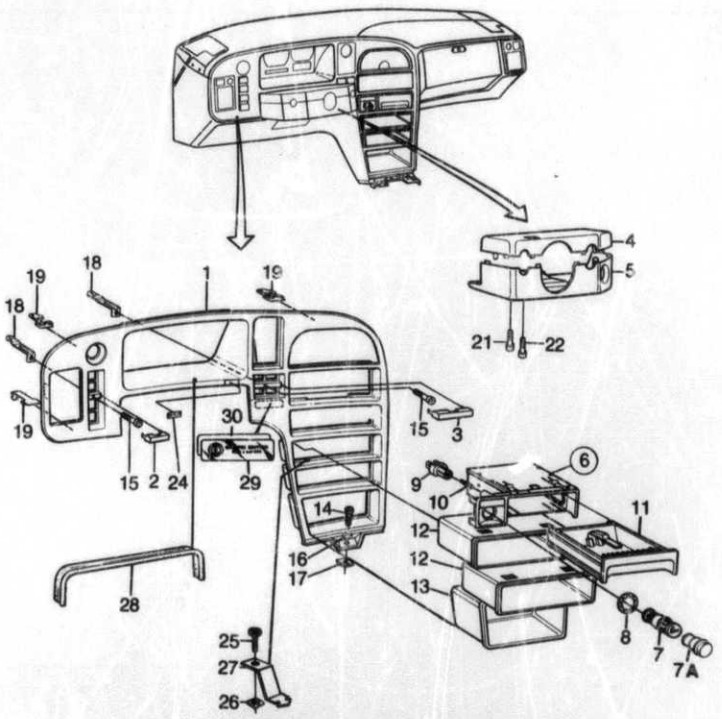

F4845 CAC90

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 48 157		-1991	1	Instrument frame	Instrumentram	6
0015	1	40 82 699		1992-	1	Instrument frame	Instrumentram	6
0018	1	86 73 428		1992-, 40/136 103 306	1	Instrument frame wood	Instrumentram trä	6
0019								
0020	1	95 48 173		-1991, RHD	1	Instrument frame	Instrumentram	6
0025	1	40 82 707		1992-, RHD	1	Instrument frame	Instrumentram	6
0028	1	86 73 436		1992-,RHD 40/136 103 405	1	Instrument frame wood	Instrumentram trä	6
0029								
0030	2	97 60 372		LH	1	Cover washer	Täckbricka	5
0040	3	97 60 380		RH	1	Cover washer	Täckbricka	5
0050	4	95 45 260		-1991	1	Cover	Kåpa	6
0055	4	40 82 715		1992-	1	Cover	Kåpa	6
0060	5	95 45 245			1	Cover	Kåpa	6
0070	5	95 45 229		AIRBAG	1	Cover	Kåpa	6
0080	6	97 78 218			1	Ashtray housing	Askkoppshus	6
0090	7	85 74 469			1	.Cigarette lighter	.Cigarettändare	4
0095	7A	85 59 221			1	..Lighter unit	..Tändarenhet	4
0100	8	85 32 426			1	.Clip	.Clips	5
0110	9	85 09 697			1	.Bulb socket	.Lamphållare	5
0120	10	85 00 613			1	.Bulb	.Glödlampa	2
0130	11	95 74 724			1	Ashtray	Askkopp	5
0140	12	97 14 817			2	Storage tray	Förvaringsfack	6
0150	13	97 55 216			1	Storage tray	Förvaringsfack	5
0160	13	97 64 762		RHD	1	Storage tray	Förvaringsfack	5
0170	14	79 65 338			1	Screw	Skruv	6
0180	15	*79 22 313*		1990	2	Screw	Skruv	5
0190	15	79 70 536		1991-	2	Screw	Skruv	6
0200	17	79 77 317			1	Clip nut	Klämmutter	5
0210	18	97 67 179			2	Clip nut	Klämmutter	5
0220	19	97 61 552			3	Clamp	Klämma	5
0230	21	79 74 512			2	Screw	Skruv	5
0240	22	79 71 443			2	Screw	Skruv	5
0250	24	96 59 764		"UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0260	24	96 77 048		1990, "ENDAST BLYFRI BENSIN"	1	Text plate	Textskylt	5
0265								
0270	25	*84 41 503*		NLS - USE 7970601	2	Screw	Skruv	5
0280	26	79 77 317			2	Clip nut	Klämmutter	5
0290	27	96 78 541			2	Clamp	Klämma	5
0300	28	95 48 165		-1991	1	Piping	Kederlist	5
0310	28	40 84 398		1992-	1	Piping	Kederlist	5
0320	29	40 86 369		245),-1992 "GRIFFIN EDITION"	1	Emblem	Emblem	9
0325								
0330	30	*40 86 468*		-1992 NLS	1	Tape	Tape	5

245. When ordering please state the emblems serial number and attach the damage emblem. Vid beställning uppge emblemets serienummer och bifoga det skadade emblemet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-A14

Glove compartment
Handskfack

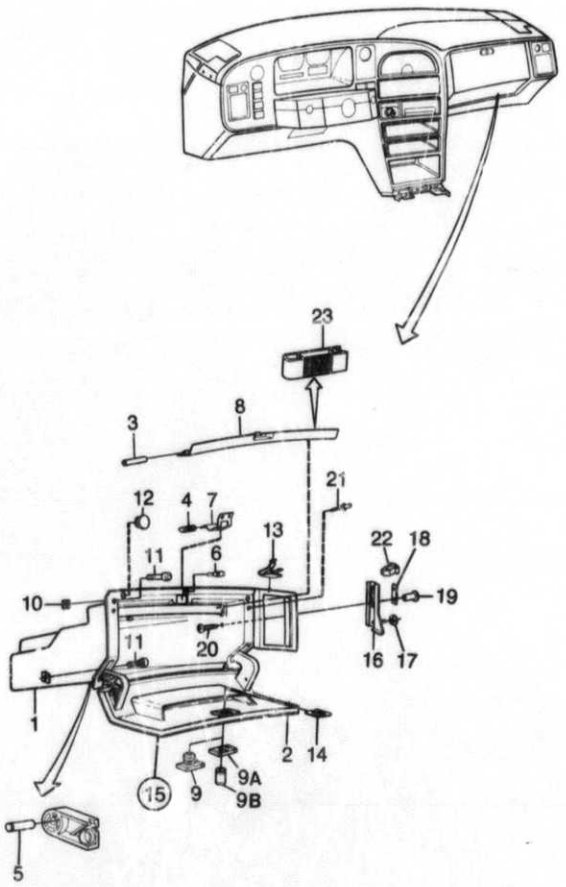

F6241 CAC93

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 41 083*		142) NLS - USE 9571191	1	Glove compartment	Handskfack	6
0020	1	95 71 191		143)	1	Glove compartment	Handskfack	6
0040	1	40 85 882		1992-	1	Glove compartment	Handskfack	6
0050						wood	trä	
0080	1	95 72 256		56), RHD	1	Glove compartment	Handskfack	6
0090	1	*95 46 722*		57,83), RHD NLS - USE 9571209, 9592098	1	Glove compartment	Handskfack	6
0100	1	*40 79 901*		84,142), RHD NLS - USE 9571209	1	Glove compartment	Handskfack	6
0110	1	95 71 209		143), RHD	1	Glove compartment	Handskfack	6
0120	1	40 85 890		1992-, RHD	1	Glove compartment	Handskfack	6
0130						wood	trä	
0140	2	40 84 349		210)	1	Glove compartment lid	Handskfacklucka	5
0150	2	95 46 730		60), -1991	1	Glove compartment lid	Handskfacklucka	5
0160	2	95 46 763		90)	1	Glove compartment lid	Handskfacklucka	5
0170	2	95 46 755		80)	1	Glove compartment lid	Handskfacklucka	5
0180	2	95 46 789		70)	1	Glove compartment lid	Handskfacklucka	5
0190	2	95 72 132		70,56), RHD	1	Glove compartment lid	Handskfacklucka	5
0200	2	95 46 847		70,57), RHD	1	Glove compartment lid	Handskfacklucka	5
0210	2	44 36 663		210), 1993-, RHD	1	Glove compartment lid	Handskfacklucka	5
0220	2	44 36 655		90), 1993-, RHD	1	Glove compartment lid	Handskfacklucka	5
0230	2	44 36 648		80), 1993, RHD	1	Glove compartment lid	Handskfacklucka	5
0240	3	97 82 343			2	Pin	Pinne	5
0250	4	98 96 994			1	Rubber bushing	Gummibussning	5
0260	5	79 10 755			2	Pin	Pinne	5
0270	6	97 59 861		1990	3	Absorber	Dämpare	3
0280	7	97 55 257			1	End plate	Slutbleck	5
0290	7	97 69 183		RHD	1	End plate	Slutbleck	5
0300	8	97 67 567			1	Cover	Lock	5
0310	8	97 67 575		RHD	1	Cover	Lock	5
0320	9			See page 8A-075, 5-D04		Glove compartment lock	Handskfackslås	
0330	9A	43 06 437		AIRBAG	1	Lock housing	Låshus	3
0340						without lock cylinder	utan låscylinder	
0350	9B			See page 8A-075, 5-D04		Lock cylinder	Låscylinder	
0360	10	79 77 317			6	Clip nut	Klämmutter	5
0380	11	79 70 536			6	Screw	Skruv	6
0390	12	97 82 251		79)	1	Plug	Plugg	5
0400	13	73 98 332			2	Clip	Clips	5
0410	14	82 62 610			1	Clip	Clips	5
0420	15	96 98 309		See page 8B-221, 6-J06	1	Adjusting kit	Justersats	4
0430	16	40 30 201		1) LH	1	▪Hinge	▪Gångjärn	4
0440	16	40 30 219		1) RH	1	▪Hinge	▪Gångjärn	4
0450	17	79 65 209			2	▪Clip	▪Clips	5
0460	18	95 85 985		1)	2	▪Nut washer	▪Mutterbricka	5
0470	19	95 85 522		1)	2	▪Protection	▪Skydd	5
0480	20	95 85 829		1)	4	▪Screw	▪Skruv	5
0490	21	95 94 508			2	Rivet	Nit	5
0500	22	*95 85 514*		NLS	2	Clamp	Klammer	5
0510	23			See page 3A-193, 2-I02	1	Fuse clip	Säkringsklämma	

1. Not as separate spare part. Ej som separat reservdel.
56. Ch. --L1003851
57. Ch. L1003852--
60. Red Röd
70. Grey Grå
79. Ch. --L1009711, --L2007386, --L8001263
80. Blue Blå
83. Ch. --L1010856
84. Ch. L1010857--
90. Yellow Gul
142. Ch. --L1018772, --L2013450, --L8001825
143. Ch. L1018773--, L2013451--, L8001826--
210. Light beige Ljus beige


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-A16

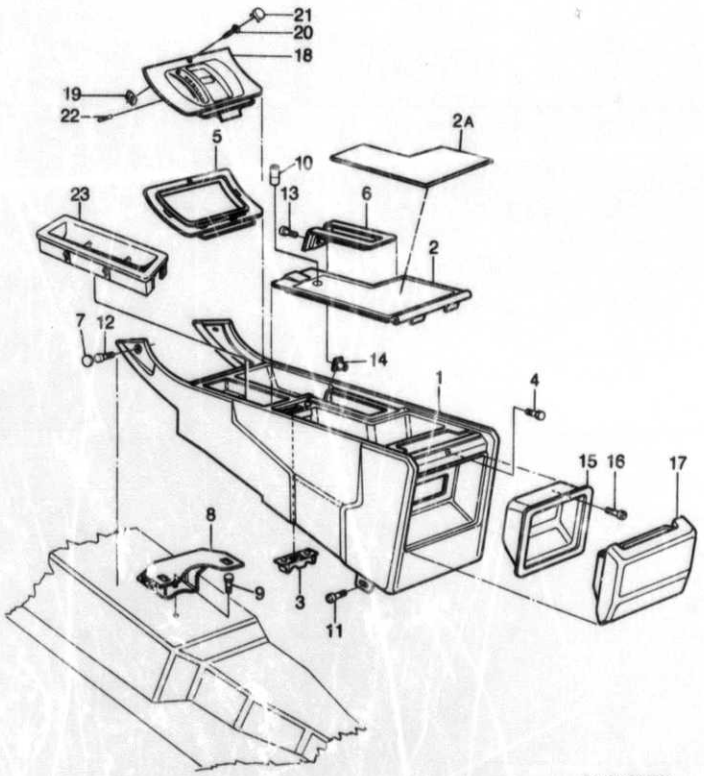

F6164 CAC90

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 83 325		210)	1	Centre console	Mittkonsol	6
0030	1	44 37 034		210), 1993, RHD	1	Centre console	Mittkonsol	6
0050	1	40 78 416		60), -1991	1	Centre console	Mittkonsol	6
0060	1	40 78 424		90)	1	Centre console	Mittkonsol	6
0080	1	44 37 026		90), 1993, RHD	1	Centre console	Mittkonsol	6
0100	1	40 78 432		80)	1	Centre console	Mittkonsol	6
0110	1	44 37 018		80), 1993-, RHD	1	Centre console	Mittkonsol	6
0120	1	40 78 440		70)	1	Centre console	Mittkonsol	6
0140	1	40 78 481		70), RHD	1	Centre console	Mittkonsol	6
0160								
0170	2	40 83 374		210)	1	Cover	Lock	6
0190	2	40 77 004		60), -1991	1	Cover	Lock	6
0200	2	40 77 012		90)	1	Cover	Lock	6
0220	2	40 77 020		80)	1	Cover	Lock	6
0230	2	40 77 038		70)	1	Cover	Lock	6
0250	2A	86 69 186		1992-, 40/136103082	1	Wooden insert	Träinlägg	6
0290	3	97 63 228			1	Magnet	Magnet	6
0300	4	92 20 880			2	Rivet	Nit	5
0310	5	97 60 596			1	Collar	Krage	6
0320	5	86 69 160		1992-, 40/136 103 066	1	Collar wood	Krage trä	6
0330								
0340	5	97 64 200		RHD	1	Collar	Krage	6
0350	5	86 73 451		1992-,RHD 40/136 103 074	1	Collar wood	Krage trä	6
0360								
0370	6	40 83 358		210)	1	Frame	Ram	6
0380	6	97 89 991		60), -1991	1	Frame	Ram	6
0390	6	95 81 001		90)	1	Frame	Ram	6
0400	6	96 79 994		80)	1	Frame	Ram	6
0410	6	97 90 007		70)	1	Frame	Ram	6
0420	7	40 83 341		210)	2	Cover	Täcklock	6
0430	7	97 78 929		60), -1991	2	Cover	Täcklock	6
0440	7	95 81 893		90)	2	Cover	Täcklock	6
0450	7	96 79 986		80)	2	Cover	Täcklock	6
0460	7	97 78 911		70)	2	Cover	Täcklock	6
0470	8	96 63 048			1	Bracket	Fäste	6
0480	8	96 63 055		RHD	1	Bracket	Fäste	6
0490	9	79 69 223			2	Screw	Skruv	5
0500	10			See page 8A-075, 5-D04		Lock cylinder	Låscylinder	
0510	11	79 72 607			2	Screw	Skruv	5
0520	12	79 65 338			2	Screw	Skruv	6
0530	13	79 70 304		-1991	1	Screw	Skruv	5
0540	13	79 70 536		1992-	1	Screw	Skruv	6
0550	14	96 63 006		-1991	1	Clip nut	Klämmutter	5
0560	14	79 72 573		1992-	1	Clip nut	Clipsmutter	5
0570	15	97 60 695			1	Ashtray housing	Askkoppshus	6
0590	16	97 81 501			4	Screw	Skruv	5
0600	17	97 51 074			1	Ashtray	Askkopp	5
0610	17	40 85 908		1992-	1	Ashtray wood	Askkopp trä	6
0620								
0630	18	95 92 908		A	1	Gear lever gaiter	Växelspakskåpa	6
0640	18	86 69 178		1992-, A, 40/136 103 041	1	Gear lever gaiter wood	Växelspakskåpa trä	6
0650								
0660	18	40 85 320		1993-, A, US, CA	1	Gear lever gaiter	Växelspakskåpa	6
0670	18	44 28 215		1993-, A, US, CA 40/400 100 822	1	Gear lever gaiter wood	Växelspakskåpa trä	6
0680								
0690	18	95 92 916		A, RHD	1	Gear lever gaiter	Växelspakskåpa	6

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Instrument panel

6-A18

Centre console

Instrumentpanel

Mittkonsol

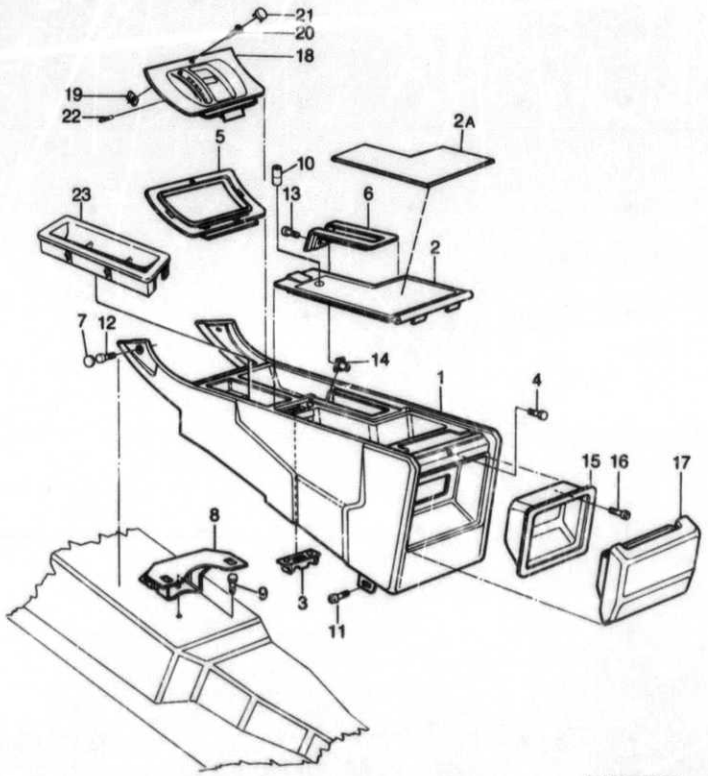

F6164 CAC90

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0700	18	86 73 444		1992-, A, RHD	1	Gear lever gaiter	Växelspakskåpa	6
0710				40/136 103 058		wood	trä	
0720	19	79 72 771		A	1	Clip nut	Clipsmutter	5
0730	20	84 27 841		A	1	Screw	Skruv	5
0740	21	92 85 404		A	1	Cover	Täcklock	3
0750	22			See page 3A-069, 2-C22		Bulb	Glödlampa	
0760	23			See page 3A-093, 2-D22		Coin box	Myntfack	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-A20

Insulation
Isolering

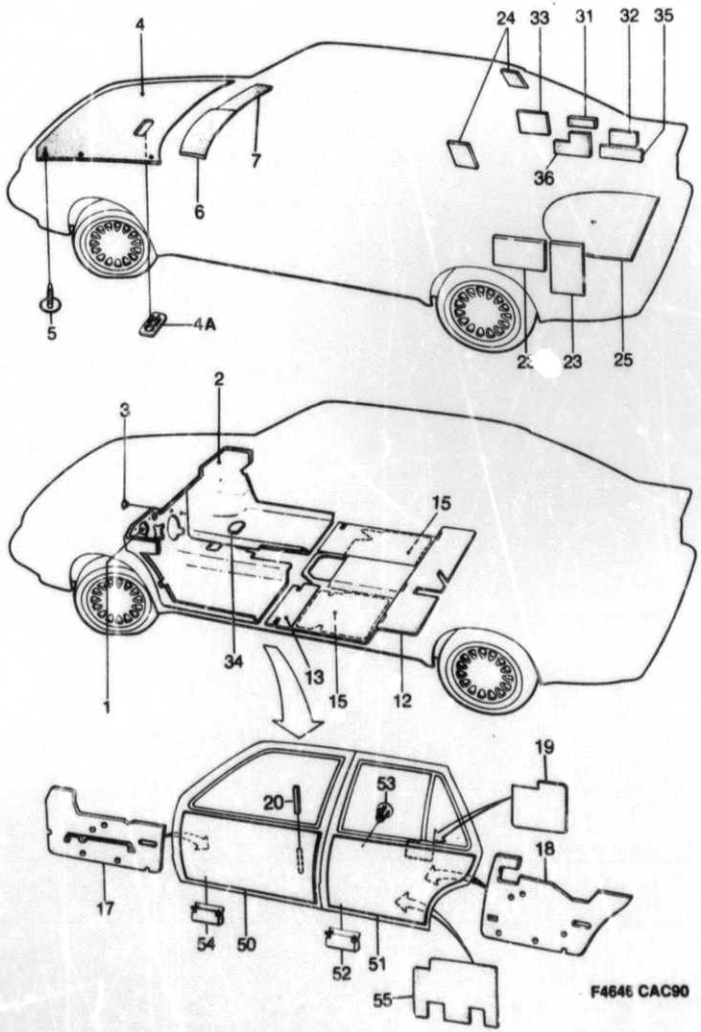

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 36 786		-1991, LH	1	Insulation	Isolering	6
0020	1	*42 71 383*		1992, LH NLS - USE 4272035	1	Insulation	Isolering	6
0030	1	42 72 035		1993-, LH	1	Insulation	Isolering	6
0040	1	40 46 405		-1991, LH, RHD	1	Insulation	Isolering	6
0050	1	*42 71 375*		1992, LH, RHD NLS - USE 4272050	1	Insulation	Isolering	6
0060	1	42 72 050		1993-, LH, RHD	1	Insulation	Isolering	6
0070	2	40 36 794		174), RH	1	Insulation	Isolering	6
0080	2	42 59 958		175),-1992, RH	1	Insulation	Isolering	6
0090	2	42 72 027		1993-, RH	1	Insulation	Isolering	6
0100	2	40 46 413		174), RH, RHD	1	Insulation	Isolering	6
0110	2	42 59 966		175),-1991, RH, RHD	1	Insulation	Isolering	6
0120	2	*42 71 367*		1992, RH, RHD NLS - USE 4272043	1	Insulation	Isolering	6
0130	2	42 72 043		1993-, RH, RHD	1	Insulation	Isolering	6
0140	3	40 87 029			6	Push nut	Tryckmutter	6
0150	4	*95 72 728*		-1991 NLS - USE 4267738	1	Insulation	Isolering	3
0160	4	42 67 738		1992-	1	Insulation	Isolering	3
0180	4	42 68 199		5CS	1	Insulation	Isolering	3
0200	4A	98 96 234			1	Attaching plate	Fästplåt	3
0210	5	97 60 497		-1991	X	Clamp	Klämma	6
0220	5	42 66 185		1992-	X	Clamp	Klämma	6
0240	6	40 41 935			1	Sound absorber	Ljudabsorbent	6
0250	7	40 41 943			1	Sound absorber	Ljudabsorbent	6
0260	12	*96 76 149*		1990-, 5D NLS - USE 4265328	1	Insulation	Isolering	6
0270	12	42 61 012		1991, 5D	1	Insulation	Isolering	6
0280	12	42 65 328		1992-, 5D, 5CS	1	Insulation	Isolering	6
0290	12	*40 36 810*		-1991, 4D NLS - USE 4265328	1	Insulation	Isolering	6
0300	12	42 65 336		1992-, 4D	1	Insulation	Isolering	6
0310	13	40 50 886		1990, 5D	1	Insulation	Isolering	6
0320	15	96 78 285		1990, LH	1	Base	Underlägg	6
0330	15	42 57 515		1991-, LH	1	Base	Underlägg	6
0340	15	97 64 002		RH	1	Base	Underlägg	6
0350	17	97 95 857			2	Insulation	Isolering	6
0360	18	96 78 731			2	Insulation	Isolering	6
0370	19	42 66 193		197)	2	Water drainage	Vattenavledare	5
0380	20	42 74 916		1993-	2	Sealing strip	Tätningslist	
0390	23	97 76 956			2	Insulation	Isolering	6
0400	24	97 76 964			2	Insulation	Isolering	6
0410	25	97 75 941			1	Insulation	Isolering	6
0420	31	97 88 563		5D, RH	1	Insulation	Isolering	6
0430	32	97 86 146		5D, RH	1	Insulation	Isolering	6
0440	32	96 77 154		RH, 4D	1	Insulation	Isolering	6
0450	33	97 88 571		RH	1	Insulation	Isolering	6
0460	34	97 98 281			2	Cover	Lock	5
0470	35	96 77 162		RH, 4D	1	Insulation	Isolering	6
0480	36	42 64 503		LH, 5CS	1	Sound absorber	Ljudabsorbent	6
0490	36	42 64 404		RH, 5CS	1	Sound absorber	Ljudabsorbent	6
0500	50	95 71 019			2	Water drainage	Vattenavledare	5
0510	51	96 71 918			2	Water drainage	Vattenavledare	5
0520	52	96 72 908			10	Clamp	Klammer	5
0530	53	96 76 057			2	Clamp	Klammer	5
0540	54	96 72 908			8	Clamp	Klammer	5
0550	55	96 94 472			2	Water drainage	Vattenavledare	5

174. Ch. --M1008650, --M2005803
175. Ch. M1008651--, M2005804--
197. Ch. M1015688--, M2010445--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery
6-A22
Sound insulation

Klädsel
Ljudisolering

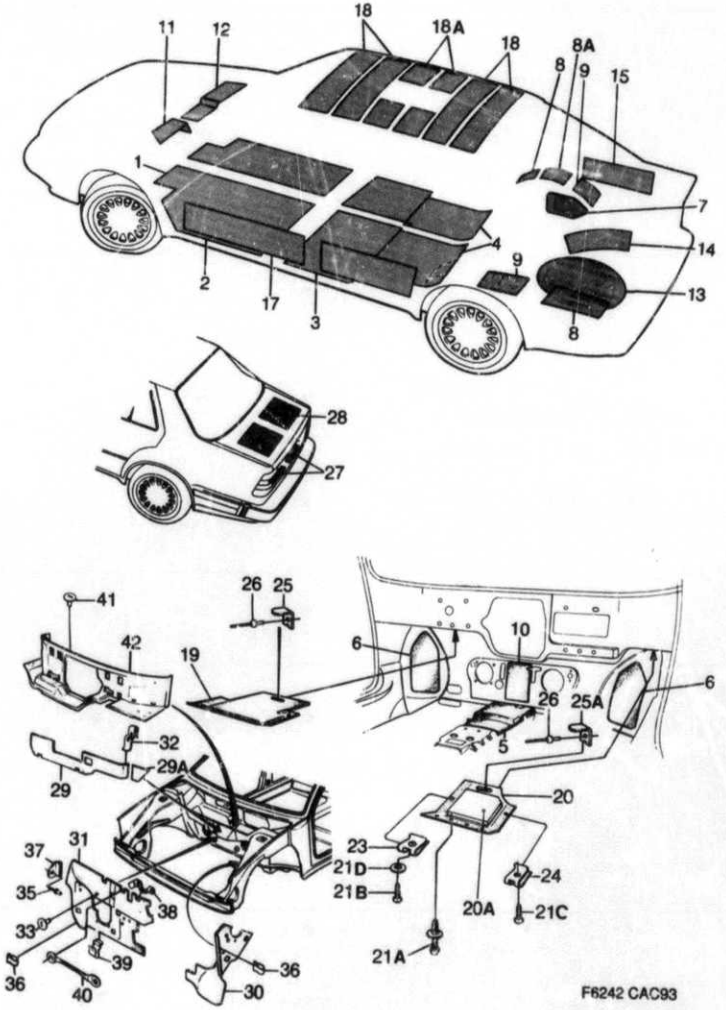

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 57 709		-1991, LH	1	Damper mat	Dämpmatta	6
0020	1	*42 65 815*		1992, LH NLS - USE 4479002	1	Damper mat	Dämpmatta	6
0030	1	*40 36 893*		-1992, RH NLS	1	Damper mat	Dämpmatta	6
0040	2	*97 72 476*		-1991, LH	1	Damper mat	Dämpmatta	6
0050	2	42 65 823		1992, LH	1	Damper mat	Dämpmatta	6
0060	2	44 79 002		1993-, LH	1	Damper mat	Dämpmatta	6
0070	2	97 72 468		-1992, RH	1	Damper mat	Dämpmatta	6
0080	2	44 79 010		1993-, RH	1	Damper mat	Dämpmatta	6
0090	3	97 57 741		1990, LH	1	Damper mat	Dämpmatta	6
0100	3	42 56 921		1991, LH	1	Damper mat	Dämpmatta	6
0110	3	*97 57 733*		-1991, RH NLS - USE 4265468	1	Damper mat	Dämpmatta	6
0120	3	42 65 468		1992-	2	Damper mat	Dämpmatta	6
0130	4	97 72 484		1990, LH	1	Damper mat	Dämpmatta	6
0140	4	40 53 716		1990, RH	1	Damper mat	Dämpmatta	6
0150	4	41 42 964		1991-	2	Damper mat	Dämpmatta	6
0160	5	95 91 280		-1991	1	Damper mat	Dämpmatta	6
0170	5	42 71 417		1992-	1	Damper mat	Dämpmatta	6
0180	6	40 36 919		1990, LH	1	Damper mat	Dämpmatta	6
0190	6	40 36 901		1990, RH	1	Damper mat	Dämpmatta	6
0200	6	42 59 081		1991-	2	Damper mat	Dämpmatta	6
0220	7	97 75 784		-1991, LH	1	Damper mat	Dämpmatta	6
0230	7	97 75 818		-1991, RH	1	Damper mat	Dämpmatta	6
0240	7	42 59 081		1992-	2	Damper mat	Dämpmatta	6
0260	8	97 75 792		-1991	3	Damper mat	Dämpmatta	6
0270	8	42 71 425		1992-	3	Damper mat	Dämpmatta	6
0280	8A	97 75 792		-1991	2	Damper mat	Dämpmatta	6
0290	8A	42 71 425		1992-	2	Damper mat	Dämpmatta	6
0300	9	97 75 800		-1991	3	Damper mat	Dämpmatta	6
0310	9	42 71 433		1992-	3	Damper mat	Dämpmatta	6
0320	10	97 57 675		-1991	1	Damper mat	Dämpmatta	6
0330	10	42 71 409		1992-	1	Damper mat	Dämpmatta	6
0340	11	40 53 732		-1991, LH	1	Damper mat	Dämpmatta	6
0350	11	42 71 698		1992-, LH	1	Damper mat	Dämpmatta	6
0360	12	97 75 883		-1991, RH	1	Damper mat	Dämpmatta	6
0370	12	42 71 680		1992-, RH	1	Damper mat	Dämpmatta	6
0380	13	96 59 467			1	Damper mat spare wheel	Dämpmatta reservhjul	6
0400	14	97 75 842		121), LH	1	Damper mat spare wheel	Dämpmatta reservhjul	6
0420	14	97 94 611		122), -1991, LH	1	Damper mat spare wheel	Dämpmatta reservhjul	6
0440	14	97 94 611		-1991, RH	1	Damper mat spare wheel	Dämpmatta reservhjul	6
0460	14	97 75 792		1992-	2	Damper mat spare wheel	Dämpmatta reservhjul	6
0480	15	40 53 773		LH	1	Damper mat	Dämpmatta	5
0490	15	40 51 504		RH	1	Damper mat	Dämpmatta	6
0500	17	95 44 834			4	Damper mat	Dämpmatta	5
0510	18	97 57 691			4	Damper mat	Dämpmatta	5
0520	18	97 57 691		SR	3	Damper mat	Dämpmatta	5
0530	18A	84 90 708			4	Cardboard	Pappskiva	5
0540	19	40 30 292		90), -1991, LH	1	Sound insulation	Ljudisolering	6
0550	19	95 80 655		90), -1991, LH, RHD	1	Sound insulation	Ljudisolering	6
0560	19	95 46 110		70), -1992, LH	1	Sound insulation	Ljudisolering	6
0570	19	42 74 585		70), 1993-, LH	1	Sound insulation	Ljudisolering	6
0580	19	96 64 137		70), LH, RHD	1	Sound insulation	Ljudisolering	6
0590								

70. Grey Grå
90. Yellow Gul
121. Body --9272294
122. Body 9272295--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

Klädsel

6-A24

Sound insulation

Ljudisolering

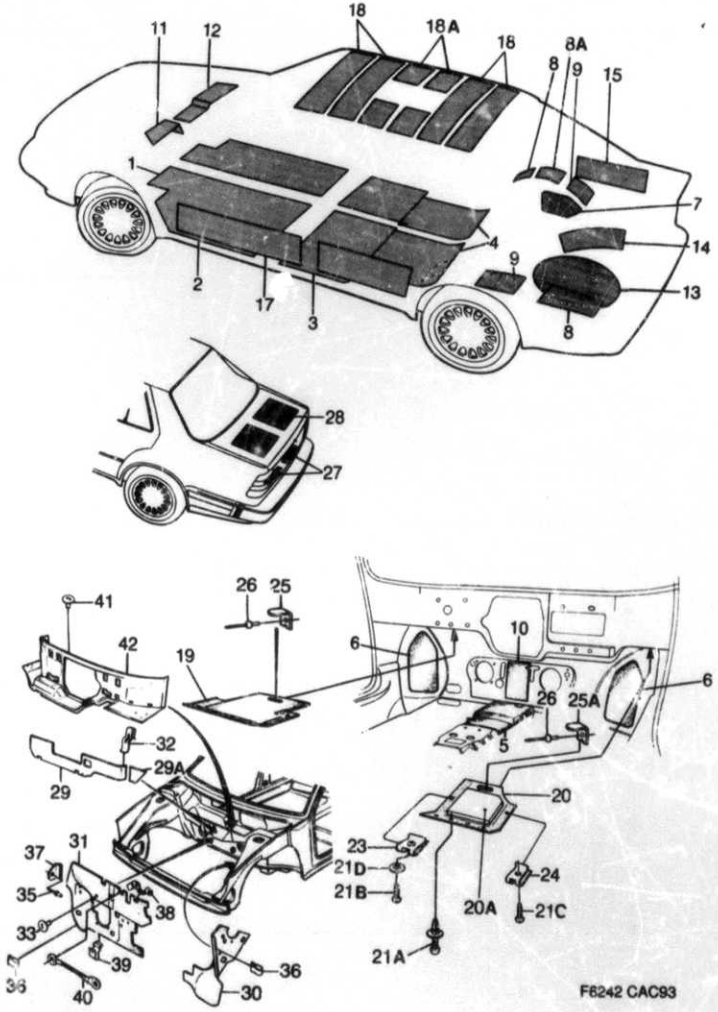

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	20	95 80 697		90), -1991, RH	1	Sound insulation	Ljudisolering	6
0610	20	95 80 705		13,90), -1991, RH	1	Sound insulation	Ljudisolering	6
0620	20	95 80 663		90), -1991, RH, RHD	1	Sound insulation	Ljudisolering	6
0630	20	96 64 129		70), -1991, RH	1	Sound insulation	Ljudisolering	6
0640	20	96 64 129		70), 1992-, B202, RH	1	Sound insulation	Ljudisolering	6
0650	20	95 72 744		13,70), -1991, RH	1	Sound insulation	Ljudisolering	6
0660	20	40 43 444		70), 1992-, B234, RH	1	Sound insulation	Ljudisolering	6
0670	20	96 64 145		70), RH, RHD	1	Sound insulation	Ljudisolering	6
0680	20A	40 43 436		B234, RH	1	Sound absorber	Ljudabsorbent	6
0690								
0700	21A	95 80 671		90), -1991	X	Screw rivet	Skruvnit	6
0710	21A	96 72 254		70), -1991	X	Screw rivet	Skruvnit	6
0720	21A	42 59 248		70), 1992-	X	Expanding rivet	Expandernit	6
0730	21B	79 72 946		1990	2	Screw	Skruv	5
0740	21C	97 76 006		1990	2	Screw	Skruv	5
0750	21D	70 88 073		1990	2	Washer	Bricka	5
0760	23	79 68 001		1990	2	Clip nut	Clipsmutter	5
0770	24	79 68 001		1990	2	Clip nut	Clipsmutter	5
0780	25	95 75 846		LH	1	Bracket	Fäste	6
0790	25	97 63 442		LH, RHD	1	Bracket	Fäste	6
0800	25A	97 63 442		RH	1	Bracket	Fäste	6
0810	26	79 75 402		-1991	2	Rivet	Nit	5
0820	26	79 72 516		1992-	2	Rivet	Nit	5
0830	27	95 94 938		-1991, 4D	2	Damper mat	Dämpmatta	6
0840	27	42 71 441		1992-, 4D	2	Damper mat	Dämpmatta	6
0860	28	40 53 773		4D	2	Damper mat	Dämpmatta	5
0870	29	*40 45 407*		1990 NLS - USE 4256913	1	Sound absorber	Ljudabsorbent	6
0880	29	42 56 913		1991	1	Sound absorber	Ljudabsorbent	6
0890	29			1), 1992-		Sound absorber	Ljudabsorbent	
0900				See page 8A-019, 5-A20				
0910	29A			1), 1992		Sound absorber	Ljudabsorbent	
0920				See page 2-079, 1-F08				
0930	30	40 41 729		-1991, LH	1	Insulation	Isolering	6
0940	30	*42 59 800*		1992, LH NLS - USE 4274676	1	Insulation	Isolering	6
0950	30	42 71 656		1993-,292), LH	1	Insulation	Isolering	6
0960	30	42 74 676		293), LH	1	Insulation	Isolering	6
0970	31	95 75 929		58), RH	1	Sound absorber	Ljudabsorbent	6
0980	31	40 41 703		59) -1991, RH	1	Insulation	Isolering	6
0990	31	42 60 675		1992, RH	1	Insulation	Isolering	6
1000	31	42 71 649		1993-, RH	1	Insulation	Isolering	6
1010	31	95 75 937		58), RH, RHD	1	Sound absorber	Ljudabsorbent	6
1020	31	40 41 711		59), -1991, RH, RHD	1	Insulation	Isolering	6
1030	31	42 60 675		1992, RH, RHD	1	Insulation	Isolering	6
1040	31	42 71 649		1993-, RH, RHD	1	Insulation	Isolering	6
1050	32	95 77 677		-1991	5	Clamp	Klammer	5
1060	33	73 99 686		58)	1	Push nut	Tryckmutter	3
1070	33	73 99 686		59,77)	X	Push nut	Tryckmutter	3
1080	33	40 87 029		78)	X	Push nut	Tryckmutter	6
1090	35	93 93 968		-1991	1	Rivet	Nit	5
1100	36	95 78 964			X	Clamp	Klammer	5
1110	37	95 79 251		-1991	1	Attaching bracket	Fästvinkel	6

1. Not as separate spare part. Ej som separat reservdel.
13. AIR-BAG
52. Ch. --L1003433, --L2002610, --L8000634
59. Ch. L1003434--, L2002611--, L8000635
70. Grey Grå
77. Ch. --L1006773, --L2005020, --L8000634
78. Ch. L1006774--, L2005021--, L8000635--
90. Yellow Gul
199. Ch. M1017620--, M2011731--
292. Ch. --P1023091
293. Ch. P1023092--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery
Klädsel

6-B02

Sound insulation
Ljudisolering

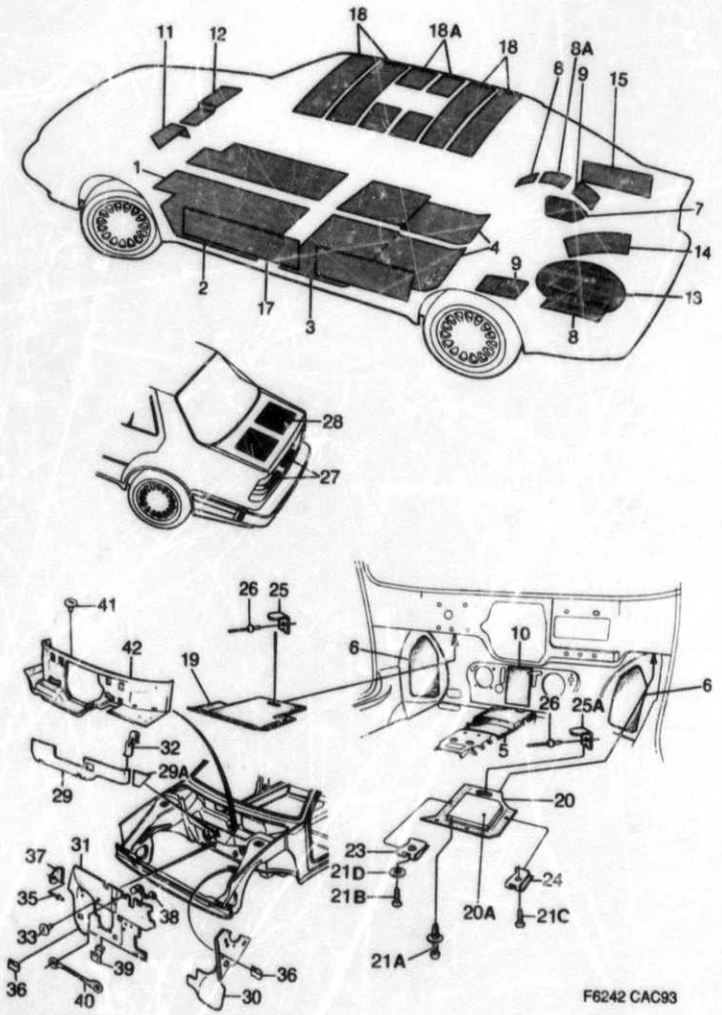

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1120	38	95 47 340		58)	1	Clamp	Klammer	5
1130	39	95 84 814		58)	4	Clamp	Klammer	5
1140	40	95 45 211		-1991	1	Clamp	Klammer	5
1150	41	40 87 029			4	Push nut	Tryckmutter	6
1160	42	40 36 760		-1991, B234	1	Insulation	Isolering	6
1170	42	*42 59 970*		1992-,265) NLS - USE 4271276	1	Insulation	Isolering	6
1180	42	42 71 276		266)	1	Insulation	Isolering	6
1190	44	40 43 436		B234 without airbag	1	Sound absorber	Ljudabsorbent utan airbag	6
1200								


58. Ch. --L1003433, --L2002610, --L8000634
199. Ch. M1017620-, M2011731--
265. Ch. --N1034641
266. Ch. N1034642--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

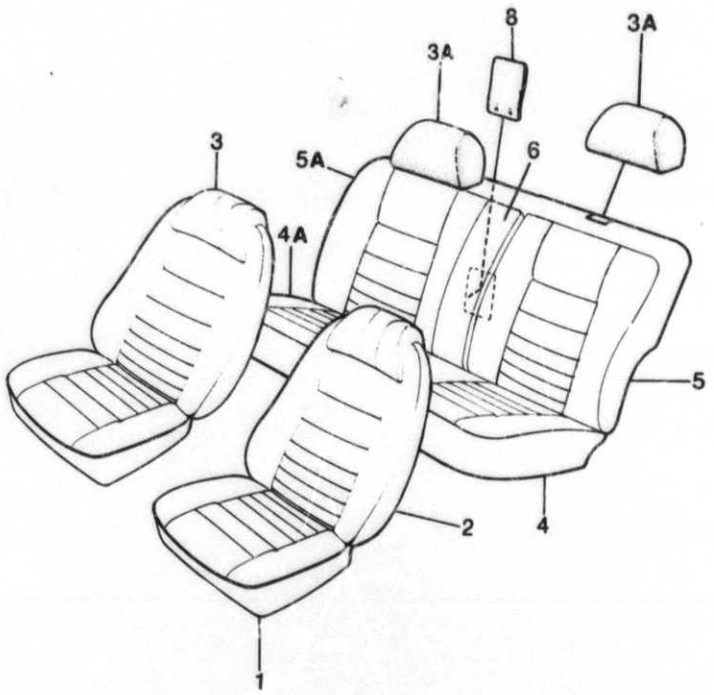

F1072 CAC90

Upholstery

6--B04

Covers 1990
Horizon pattern

Klädsel

Klädselpåsar 1990
Horisontmönster

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C24				
0020	1	40 38 253		60)	2	Seat cover	Sitspåse	6
0030	2	96 88 011		60)	2	Back cover	Ryggpåse	6
0050	3	97 75 453		60)	2	Head restraint cover	Nackstödspåse	6
0080	3A	40 50 456		60)	2	Head restraint cover	Nackstödspåse	6
0140	4	96 97 269		60), LH	1	Seat cover	Sitspåse	6
0160	4	95 75 135		60), 4D	1	Seat cover	Sitspåse	6
0180	4A	96 97 319		60), RH	1	Seat cover	Sitspåse	6
0200	5	96 97 368		60), LH	1	Back cover	Ryggpåse	6
0220	5	95 75 184		60), 4D	1	Back cover	Ryggpåse	6
0240	5A	96 97 418		60), RH	1	Back cover	Ryggpåse	6
0260	6	97 75 180		60)	1	Arm rest cover	Armstödspåse	6
0300	8	40 51 355		60), 4D	1	Hatch	Lucka	6
0329				TRIM COLOUR C44				
0330	1	95 92 270		60)	2	Seat cover	Sitspåse	6
0350	2	95 88 799		60)	2	Back cover	Ryggpåse	6
0370	3	95 88 849		60)	2	Head restraint cover	Nackstödspåse	6
0400	3A	40 50 399		60)	2	Head restraint cover	Nackstödspåse	6
0460	4	95 87 361		60), LH	1	Seat cover	Sitspåse	6
0480	4	95 92 791		60), 4D	1	Seat cover	Sitspåse	6
0500	4A	95 87 437		60), RH	1	Seat cover	Sitspåse	6
0520	5	95 87 502		60), LH	1	Back cover	Ryggpåse	6
0540	5	95 92 841		60), 4D	1	Back cover	Ryggpåse	6
0560	5A	95 87 569		60), RH	1	Back cover	Ryggpåse	6
0580	6	95 87 627		60)	1	Arm rest cover	Armstödspåse	6
0620	8	40 51 355		60), 4D	1	Hatch	Lucka	6
0640				TRIM COLOUR E24				
0650	1	40 38 261		70)	2	Seat cover	Sitspåse	6
0670	2	96 88 045		70)	2	Back cover	Ryggpåse	6
0690	3	98 95 137		70)	2	Head restraint cover	Nackstödspåse	6
0720	3A	40 50 464		70)	2	Head restraint cover	Nackstödspåse	6
0780	4	96 97 293		70), LH	1	Seat cover	Sitspåse	6
0800	4	95 75 168		70), 4D	1	Seat cover	Sitspåse	6
0820	4A	96 97 343		70), RH	1	Seat cover	Sitspåse	6
0840	5	96 97 392		70), LH	1	Back cover	Ryggpåse	6
0860	5	95 75 218		70), 4D	1	Back cover	Ryggpåse	6
0880	5A	96 97 442		70), RH	1	Back cover	Ryggpåse	6
0900	6	96 53 718		70)	1	Arm rest cover	Armstödspåse	6
0940	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0960				TRIM COLOUR E44				
0970	1	95 92 304		70)	2	Seat cover	Sitspåse	6
0990	2	95 88 823		70)	2	Back cover	Ryggpåse	6
1010	3	95 88 872		70)	2	Head restraint cover	Nackstödspåse	6
1040	3A	40 50 407		70)	2	Head restraint cover	Nackstödspåse	6
1100	4	95 87 395		70), LH	1	Seat cover	Sitspåse	6
1120	4	95 92 825		70), 4D	1	Seat cover	Sitspåse	6
1140	4A	95 87 460		70), RH	1	Seat cover	Sitspåse	6
1160	5	95 87 536		70), LH	1	Back cover	Ryggpåse	6
1180	5	95 92 874		70), 4D	1	Back cover	Ryggpåse	6
1200	5A	95 87 593		70), RH	1	Back cover	Ryggpåse	6
1220	6	95 87 650		70)	1	Arm rest cover	Armstödspåse	6
1260	8	40 51 363		70), 4D	1	Hatch	Lucka	6
1270								


60. Red Röd
70. Grey Grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

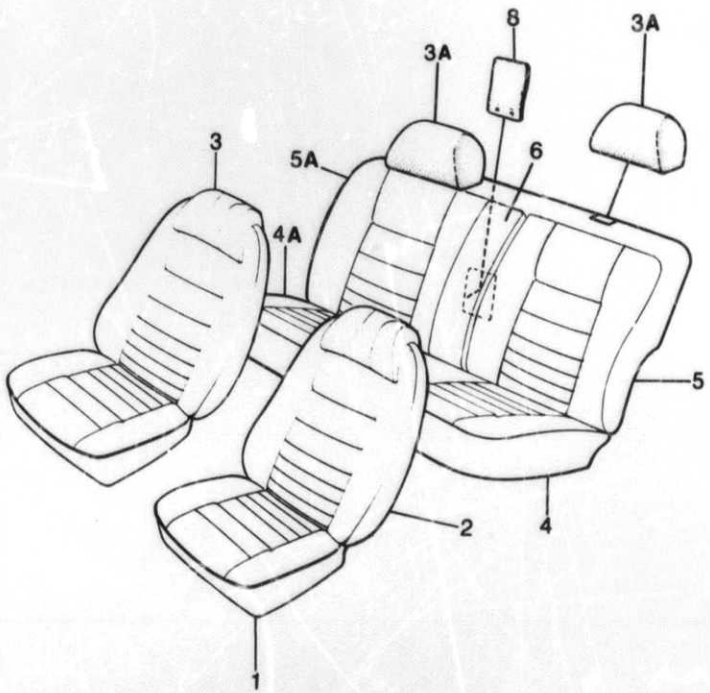

F1072 CAC90

Upholstery

6-B06

Covers 1990
Horizon pattern

Klädsel

Klädselpåsar 1990
Horisontmönster

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR F24				
1	40 38 279		80)	2	Seat cover	Sitspåse	6
2	96 88 037		80)	2	Back cover	Ryggpåse	6
3	96 95 214		80)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 472		80)	2	Head restraint cover	Nackstödspåse	6
4	96 97 285		80), LH	1	Seat cover	Sitspåse	6
4	95 75 150		80), 4D	1	Seat cover	Sitspåse	6
4A	96 97 335		80), RH	1	Seat cover	Sitspåse	6
5	96 97 384		80), LH	1	Back cover	Ryggpåse	6
5	95 75 200		80), 4D	1	Back cover	Ryggpåse	6
5A	96 97 434		80), RH	1	Back cover	Ryggpåse	6
6	96 97 244		80)	1	Arm rest cover	Armstödspåse	6
8	40 51 371		80), 4D	1	Hatch	Lucka	6
			TRIM COLOUR F44				
1	95 92 296		80)	2	Seat cover	Sitspåse	6
2	95 88 815		80)	2	Back cover	Ryggpåse	6
3	95 88 864		80)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 415		80)	2	Head restraint cover	Nackstödspåse	6
4	95 87 387		80), LH	1	Seat cover	Sitspåse	6
4	95 92 817		80), 4D	1	Seat cover	Sitspåse	6
4A	95 87 452		80), RH	1	Seat cover	Sitspåse	6
5	95 87 528		80), LH	1	Back cover	Ryggpåse	6
5	95 92 866		80), 4D	1	Back cover	Ryggpåse	6
5A	95 87 586		80), RH	1	Back cover	Ryggpåse	6
6	95 87 643		80)	1	Arm rest cover	Armstödspåse	6
8	40 51 371		80), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G24				
1	40 38 287		90)	2	Seat cover	Sitspåse	6
2	95 91 777		90)	2	Back cover	Ryggpåse	6
3	95 91 785		90)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 480		90)	2	Head restraint cover	Nackstödspåse	6
4	95 87 346		90), LH	1	Seat cover	Sitspåse	6
4	95 87 403		90), 4D	1	Seat cover	Sitspåse	6
4A	95 87 411		90), RH	1	Seat cover	Sitspåse	6
5	95 87 486		90), LH	1	Back cover	Ryggpåse	6
5	95 87 478		90), 4D	1	Back cover	Ryggpåse	6
5A	95 87 544		90), RH	1	Back cover	Ryggpåse	6
6	95 87 601		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G44				
1	95 92 288		90)	2	Seat cover	Sitspåse	6
2	95 88 807		90)	2	Back cover	Ryggpåse	6
3	95 88 856		90)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 423		90)	2	Head restraint cover	Nackstödspåse	6
4	95 87 379		90), LH	1	Seat cover	Sitspåse	6
4	95 92 809		90), 4D	1	Seat cover	Sitspåse	6
4A	95 87 445		90), RH	1	Seat cover	Sitspåse	6
5	95 87 510		90), LH	1	Back cover	Ryggpåse	6
5	95 92 858		90), 4D	1	Back cover	Ryggpåse	6
5A	95 87 577		90), RH	1	Back cover	Ryggpåse	6
6	95 87 635		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6


80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

35 GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

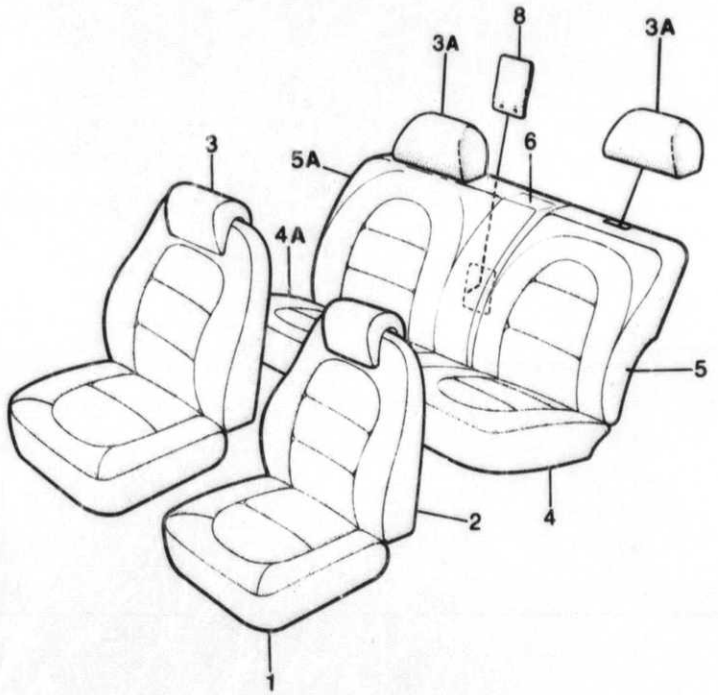

F1073 CAC90

Upholstery

6-B08

Covers 1990
Contour design

Klädsel

Klädselpåsar 1990
Contour design

1303

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S t
0010			TRIM COLOUR C33				
0020	1	40 38 204	60)	2	Seat cover	Sitspåse	6
0030	2	95 94 953	60)	2	Back cover	Ryggpåse	6
0040	3	95 72 975	60)	2	Head restraint cover	Nackstödspåse	6
0050	3A	40 50 506	60)	2	Head restraint cover	Nackstödspåse	6
0060	4	95 73 304	60), LH	1	Seat cover	Sitspåse	6
0070	4	95 76 083	60), 4D	1	Seat cover	Sitspåse	6
0080	4A	95 73 296	60), RH	1	Seat cover	Sitspåse	6
0090	5	95 73 320	60), LH	1	Back cover	Ryggpåse	6
0100	5	95 76 141	60), 4D	1	Back cover	Ryggpåse	6
0110	5A	95 73 312	60), RH	1	Back cover	Ryggpåse	6
0120	6	95 73 338	60)	1	Arm rest cover	Armstödspåse	6
0130	8	40 51 355	60), 4D	1	Hatch	Lucka	6
0140			TRIM COLOUR E33				
0150	1	40 38 212	70)	2	Seat cover	Sitspåse	6
0160	2	95 94 961	70)	2	Back cover	Ryggpåse	6
0170	3	95 78 519	70)	2	Head restraint cover	Nackstödspåse	6
0180	3A	40 50 514	70)	2	Head restraint cover	Nackstödspåse	6
0190	4	98 90 690	70), LH	1	Seat cover	Sitspåse	6
0200	4	95 76 091	70), 4D	1	Seat cover	Sitspåse	6
0210	4A	98 90 682	70), RH	1	Seat cover	Sitspåse	6
0220	5	98 90 716	70), LH	1	Back cover	Ryggpåse	6
0230	5	95 76 158	70), 4D	1	Back cover	Ryggpåse	6
0240	5A	98 90 708	70), RH	1	Back cover	Ryggpåse	6
0250	6	98 90 724	70)	1	Arm rest cover	Armstödspåse	6
0260	8	40 51 363	70), 4D	1	Hatch	Lucka	6
0270			TRIM COLOUR E53				
0280	1	40 49 425	70)	2	Seat cover	Sitspåse	6
0290	2	40 49 433	70)	2	Back cover	Ryggpåse	6
0300	3	95 78 519	70)	2	Head restraint cover	Nackstödspåse	6
0310	3A	40 50 514	70)	2	Head restraint cover	Nackstödspåse	6
0320	4	40 49 524	70), LH	1	Seat cover	Sitspåse	6
0330	4A	40 49 516	70), RH	1	Seat cover	Sitspåse	6
0340	5	40 49 540	70), LH	1	Back cover	Ryggpåse	6
0350	5A	40 49 532	70), RH	1	Back cover	Ryggpåse	6
0360	6	98 90 724	70	1	Arm rest cover	Armstödspåse	6
0370			TRIM COLOUR F33				
0380	1	40 38 303	80)	2	Seat cover	Sitspåse	6
0390	2	40 38 311	80)	2	Back cover	Ryggpåse	6
0400	3	40 38 329	80)	2	Head restraint cover	Nackstödspåse	6
0410	3A	40 50 548	80)	2	Head restraint cover	Nackstödspåse	6
0420	4	40 38 857	80), LH	1	Seat cover	Sitspåse	6
0430	4	40 39 368	80), 4D	1	Seat cover	Sitspåse	6
0440	4A	40 38 840	80), RH	1	Seat cover	Sitspåse	6
0450	5	40 38 873	80), LH	1	Back cover	Ryggpåse	6
0460	5	40 39 376	80), 4D	1	Back cover	Ryggpåse	6
0470	5A	40 38 865	80), RH	1	Back cover	Ryggpåse	6
0480	6	40 38 881	80)	1	Arm rest cover	Armstödspåse	6
0490	8	40 51 371	80), 4D	1	Hatch	Lucka	6
0500							

60. Red Röd
70. Grey Grå
80. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-B10

Covers 1990
Contour design

Klädselpåsar 1990
Contour design

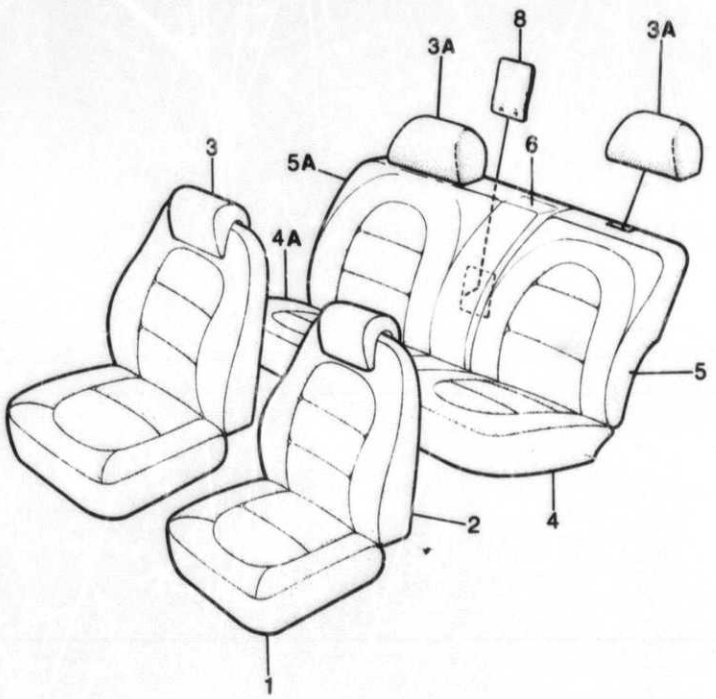

F1073 CAC90

1303	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510				TRIM COLOUR G33				
0520	1	40 38 238		90)	2	Seat cover	Sitspåse	6
0530	2	95 89 193		90)	2	Back cover	Ryggpåse	6
0540	3	95 89 201		90)	2	Head restraint cover	Nackstödspåse	6
0550	3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
0560	4	95 90 050		90), LH	1	Seat cover	Sitspåse	6
0570	4	95 89 864		90), 4D	1	Seat cover	Sitspåse	6
0580	4A	95 90 043		90), RH	1	Seat cover	Sitspåse	6
0590	5	95 90 076		90), LH	1	Back cover	Ryggpåse	6
0600	5	95 89 672		90), 4D	1	Back cover	Ryggpåse	6
0610	5A	95 90 068		90), RH	1	Back cover	Ryggpåse	6
0620	6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
0630	8	40 51 389		90), 4D	1	Hatch	Lucka	6
0640				TRIM COLOUR H33				
0650	1	40 47 387		100)	2	Seat cover	Sitspåse	6
0660	2	40 47 395		100)	2	Back cover	Ryggpåse	6
0670	3	40 46 256		100)	2	Head restraint cover	Nackstödspåse	6
0680	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0690	4	40 47 429		100), LH	1	Seat cover	Sitspåse	6
0700	4	40 47 916		100), 4D	1	Seat cover	Sitspåse	6
0710	4A	40 47 411		100), RH	1	Seat cover	Sitspåse	6
0720	5	40 47 445		100), LH	1	Back cover	Ryggpåse	6
0730	5	40 47 924		100), 4D	1	Back cover	Ryggpåse	6
0740	5A	40 47 437		100), RH	1	Back cover	Ryggpåse	6
0750	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
0760	8	40 47 932		100), 4D	1	Hatch	Lucka	6

90. Yellow Gul
100. Light grey Ljus grå


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-B12

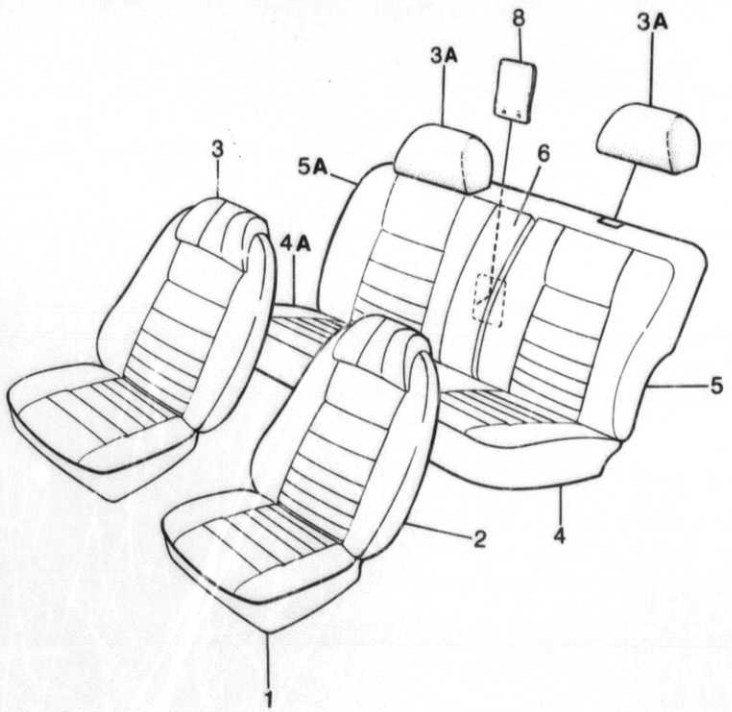

F2944 CAC90

1305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C24				
0015	1	41 27 841		60), LH	1	Seat cover	Sitspåse	6
0020	1	41 27 858		60), RH	1	Seat cover	Sitspåse	6
0030	2	41 27 866		60)	2	Back cover	Ryggpåse	6
0040	3	42 57 218		60)	2	Head restraint cover	Nackstödspåse	6
0050	3A	40 50 456		60)	2	Head restraint cover	Nackstödspåse	6
0060	4	96 97 269		60), LH	1	Seat cover	Sitspåse	6
0070	4	95 75 135		60), 4D	1	Seat cover	Sitspåse	6
0080	4A	96 97 319		60), RH	1	Seat cover	Sitspåse	6
0090	5	96 97 368		60), LH	1	Back cover	Ryggpåse	6
0100	5	95 75 184		60), 4D	1	Back cover	Ryggpåse	6
0110	5A	96 97 418		60), RH	1	Back cover	Ryggpåse	6
0120	6	97 75 180		60)	1	Arm rest cover	Armstödspåse	6
0130	8	40 51 355		60), 4D	1	Hatch	Lucka	6
0145				TRIM COLOUR C44	1			
0150	1	41 27 783		60,228), LH	1	Seat cover	Sitspåse	6
0160	1	41 27 791		60,228), RH	1	Seat cover	Sitspåse	6
0170	1	41 27 718		60,229), LH	1	Seat cover	Sitspåse	6
0180	1	41 27 726		60,229), RH	1	Seat cover	Sitspåse	6
0190	2	41 27 809		60,228)	2	Back cover	Ryggpåse	6
0200	2	41 27 734		60,229)	2	Back cover	Ryggpåse	6
0210	3	42 56 640		60)	2	Head restraint cover	Nackstödspåse	6
0220	3A	40 50 399		60)	2	Head restraint cover	Nackstödspåse	6
0230	4	95 87 361		60), LH	1	Seat cover	Sitspåse	6
0240	4	95 92 791		60), 4D	1	Seat cover	Sitspåse	6
0250	4A	95 87 437		60), RH	1	Seat cover	Sitspåse	6
0260	5	95 87 502		60), LH	1	Back cover	Ryggpåse	6
0270	5	95 92 841		60), 4D	1	Back cover	Ryggpåse	6
0280	5A	95 87 569		60), RH	1	Back cover	Ryggpåse	6
0290	6	95 87 627		60)	1	Arm rest cover	Armstödspåse	6
0300	8	40 51 355		60), 4D	1	Hatch	Lucka	6
0315				TRIM COLOUR E24				
0320	1	41 34 151		70), LH	1	Seat cover	Sitspåse	6
0330	1	41 34 169		70), RH	1	Seat cover	Sitspåse	6
0340	2	41 34 102		70)	2	Back cover	Ryggpåse	6
0350	3	42 57 226		70)	2	Head restraint cover	Nackstödspåse	6
0360	3A	40 50 464		70)	2	Head restraint cover	Nackstödspåse	6
0370	4	96 97 293		70), LH	1	Seat cover	Sitspåse	6
0380	4	95 75 168		70), 4D	1	Seat cover	Sitspåse	6
0390	4A	96 97 343		70), RH	1	Seat cover	Sitspåse	6
0400	5	96 97 392		70), LH	1	Back cover	Ryggpåse	6
0410	5	95 75 218		70), 4D	1	Back cover	Ryggpåse	6
0420	5A	96 97 442		70), RH	1	Back cover	Ryggpåse	6
0430	6	96 53 718		70)	1	Arm rest cover	Armstödspåse	6
0440	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0450								

60. Red Röd
70. Grey Grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-B14

Upholstery
Covers 1991
Horizon pattern

Klädsel
Klädselpåsar 1991
Horisontmönster

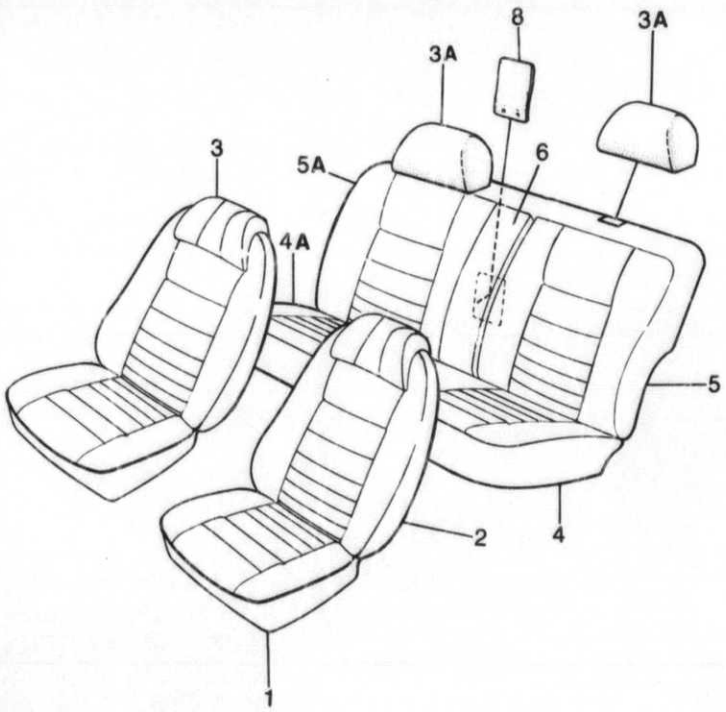

F2944 CAC90

1995	Pos	Part No/Art no	X S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0455				TRIM COLOUR E44				
0460	1	41 33 740		70,228), LH	1	Seat cover	Sitspåse	6
0470	1	41 33 757		70,228), RH	1	Seat cover	Sitspåse	6
0480	1	41 30 373		70,229), LH	1	Seat cover	Sitspåse	6
0490	1	41 30 381		70,229), RH	1	Seat cover	Sitspåse	6
0500	2	41 33 815		70,228)	2	Back cover	Ryggpåse	6
0510	2	41 31 264		70,229)	2	Back cover	Ryggpåse	6
0520	3	42 56 657		70)	2	Head restraint cover	Nackstödspåse	6
0530	3A	40 50 407		70)	2	Head restraint cover	Nackstödspåse	6
0540	4	95 87 395		70), LH	1	Seat cover	Sitspåse	6
0550	4	95 92 825		70), 4D	1	Seat cover	Sitspåse	6
0560	4A	95 87 460		70), RH	1	Seat cover	Sitspåse	6
0570	5	95 87 536		70), LH	1	Back cover	Ryggpåse	6
0580	5	95 92 874		70), 4D	1	Back cover	Ryggpåse	6
0590	5A	95 87 593		70), RH	1	Back cover	Ryggpåse	6
0600	6	95 87 650		70)	1	Arm rest cover	Armstödspåse	6
0610	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0625				TRIM COLOUR F24				
0630	1	41 34 177		80), LH	1	Seat cover	Sitspåse	6
0640	1	41 34 185		80), RH	1	Seat cover	Sitspåse	6
0650	2	41 34 110		80)	2	Back cover	Ryggpåse	6
0660	3	42 57 234		80)	2	Head restraint cover	Nackstödspåse	6
0670	3A	40 50 472		80)	2	Head restraint cover	Nackstödspåse	6
0680	4	96 97 285		80), LH	1	Seat cover	Sitspåse	6
0690	4	95 75 150		80), 4D	1	Seat cover	Sitspåse	6
0700	4A	96 97 335		80), RH	1	Seat cover	Sitspåse	6
0710	5	96 97 384		80), LH	1	Back cover	Ryggpåse	6
0720	5	95 75 200		80), 4D	1	Back cover	Ryggpåse	6
0730	5A	96 97 434		80), RH	1	Back cover	Ryggpåse	6
0740	6	96 97 244		80)	1	Arm rest cover	Armstödspåse	6
0750	8	40 51 371		80), 4D	1	Hatch	Lucka	6
0765				TRIM COLOUR F44				
0770	1	41 33 765		80,228), LH	1	Seat cover	Sitspåse	6
0780	1	41 33 773		80,228), RH	1	Seat cover	Sitspåse	6
0790	1	41 30 399		80,229), LH	1	Seat cover	Sitspåse	6
0800	1	41 31 207		80,229), RH	1	Seat cover	Sitspåse	6
0810	2	41 33 823		80,228)	2	Back cover	Ryggpåse	6
0820	2	41 31 272		80,229)	2	Back cover	Ryggpåse	6
0830	3	42 56 665		80)	2	Head restraint cover	Nackstödspåse	6
0840	3A	40 50 415		80)	2	Head restraint cover	Nackstödspåse	6
0850	4	95 87 387		80), LH	1	Seat cover	Sitspåse	6
0860	4	95 92 817		80), 4D	1	Seat cover	Sitspåse	6
0870	4A	95 87 452		80), RH	1	Seat cover	Sitspåse	6
0880	5	95 87 528		80), LH	1	Back cover	Ryggpåse	6
0890	5	95 92 866		80), 4D	1	Back cover	Ryggpåse	6
0900	5A	95 87 585		80), RH	1	Back cover	Ryggpåse	6
0910	6	95 87 643		80)	1	Arm rest cover	Armstödspåse	6
0920	8	40 51 371		80), 4D	1	Hatch	Lucka	6
0930								


70. Grey Grå
80. Blue Blå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, generai	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

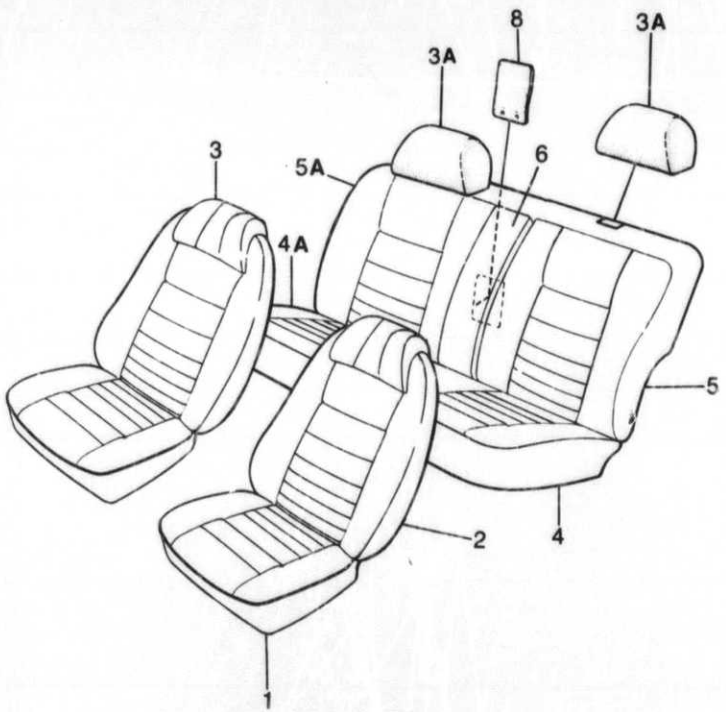

F2944 CAC90

Upholstery

6-B16

Covers 1991
Horizon pattern

Klädsel

Klädselpåsar 1991
Horisontmönster

1305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0940				TRIM COLOUR G24				
0945	1	41 34 193		90), LH	1	Seat cover	Sitspåse	6
0950	1	41 34 201		90), RH	1	Seat cover	Sitspåse	6
0960	2	41 34 128		90)	2	Back cover	Ryggpåse	6
0970	3	42 57 242		90)	2	Head restraint cover	Nackstödspåse	6
0980	3A	40 50 480		90)	2	Head restraint cover	Nackstödspåse	6
0990	4	95 87 346		90), LH	1	Seat cover	Sitspåse	6
1000	4	95 87 403		90), 4D	1	Seat cover	Sitspåse	6
1010	4A	95 87 411		90), RH	1	Seat cover	Sitspåse	6
1020	5	95 87 486		90), LH	1	Back cover	Ryggpåse	6
1030	5	95 87 478		90), 4D	1	Back cover	Ryggpåse	6
1040	5A	95 87 544		90), RH	1	Back cover	Ryggpåse	6
1050	6	95 87 601		90)	1	Arm rest cover	Armstödspåse	6
1060	8	40 51 389		90), 4D	1	Hatch	Lucka	6
1075				TRIM COLOUR G44				
1080	1	41 33 781		90,228), LH	1	Seat cover	Sitspåse	6
1090	1	41 33 799		90,228), RH	1	Seat cover	Sitspåse	6
1100	1	41 31 215		90,229), LH	1	Seat cover	Sitspåse	6
1110	1	41 31 223		90,229), RH	2	Seat cover	Sitspåse	6
1120	2	41 33 831		90,228)	2	Back cover	Ryggpåse	6
1130	2	41 31 280		90,229)	2	Back cover	Ryggpåse	6
1140	3	42 56 673		90)	2	Head restraint cover	Nackstödspåse	6
1150	3A	40 50 423		90)	2	Head restraint cover	Nackstödspåse	6
1160	4	95 87 379		90), LH	1	Seat cover	Sitspåse	6
1170	4	95 92 809		90), 4D	1	Seat cover	Sitspåse	6
1180	4A	95 87 445		90), RH	1	Seat cover	Sitspåse	6
1190	5	95 87 510		90), LH	1	Back cover	Ryggpåse	6
1200	5	95 92 858		90), 4D	1	Back cover	Ryggpåse	6
1210	5A	95 87 577		90), RH	1	Back cover	Ryggpåse	6
1220	6	95 87 635		90)	1	Arm rest cover	Armstödspåse	6
1230	8	40 51 389		90), 4D	1	Hatch	Lucka	6
1245				TRIM COLOUR H24				
1250	1	41 27 874		100), LH	1	Seat cover	Sitspåse	6
1260	1	41 27 882		100), RH	1	Seat cover	Sitspåse	6
1270	2	41 27 890		100)	2	Back cover	Ryggpåse	6
1280	3	42 57 259		100)	2	Head restraint cover	Nackstödspåse	6
1290	3A	41 28 179		100)	2	Head restraint cover	Nackstödspåse	6
1300	4	41 28 096		100), LH	1	Seat cover	Sitspåse	6
1310	4	41 28 146		100), 4D	1	Seat cover	Sitspåse	6
1320	4A	41 28 104		100), RH	1	Seat cover	Sitspåse	6
1330	5	41 28 112		100), LH	1	Back cover	Ryggpåse	6
1340	5	41 28 153		100), 4D	1	Back cover	Ryggpåse	6
1350	5A	41 28 120		100), RH	1	Back cover	Ryggpåse	6
1360	6	41 28 138		100)	1	Arm rest cover	Armstödspåse	6
1370	8	40 47 932		100), 4D	1	Hatch	Lucka	6
1375								

90. Yellow Gul
100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Toois, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-B18

Covers 1991
Horizon pattern

Klädselpåsar 1991
Horisontmönster

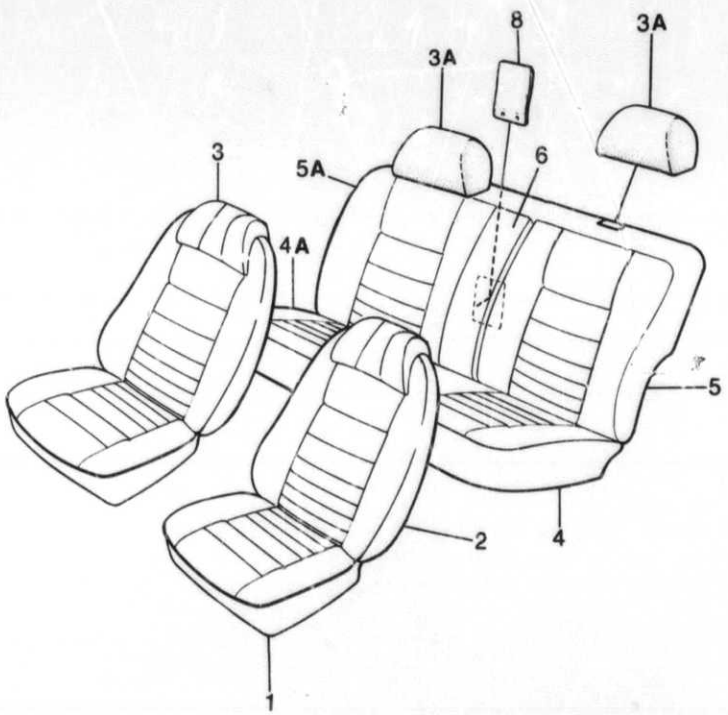

F2944 CAC90

1305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1377				TRIM COLOUR H44				
1380	1	41 27 817		100,228), LH	1	Seat cover	Sitspåse	6
1390	1	41 27 825		100,228), RH	1	Seat cover	Sitspåse	6
1400	1	41 27 742		100,229), LH	1	Seat cover	Sitspåse	6
1410	1	41 27 759		100,229), RH	1	Seat cover	Sitspåse	6
1420	2	41 27 833		100,228)	2	Back cover	Ryggpåse	6
1430	2	41 27 767		100,229)	2	Back cover	Ryggpåse	6
1440	3	41 27 700		100)	2	Head restraint cover	Nackstödspåse	6
1450	3A	41 28 161		100)	2	Head restraint cover	Nackstödspåse	6
1460	4	41 28 021		100) LH	1	Seat cover	Sitspåse	6
1470	4	41 28 070		100), 4D	1	Seat cover	Sitspåse	6
1480	4A	41 28 039		100), RH	1	Seat cover	Sitspåse	6
1490	5	41 28 047		100), LH	1	Back cover	Ryggpåse	6
1500	5	41 28 088		100), 4D	1	Back cover	Ryggpåse	6
1510	5A	41 28 054		100), RH	1	Back cover	Ryggpåse	6
1520	6	41 28 062		100)	1	Arm rest cover	Armstödspåse	6
1530	8	40 47 932		100), 4D	1	Hatch	Lucka	6

100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

6B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6-B20

Covers 1991
Contour design

Klädsel

Klädselpåsar 1991
Contour design

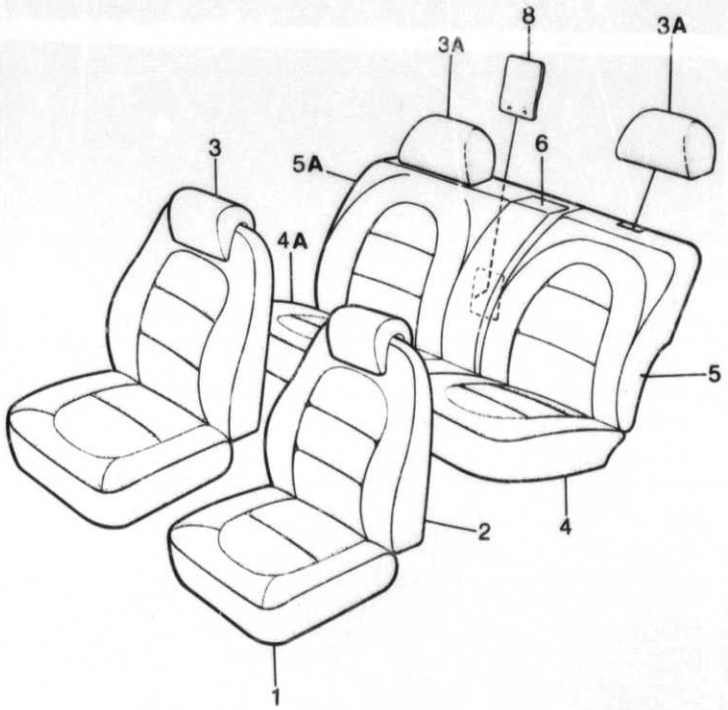

F2945 CAC90

1307	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C33				
0015	1	41 35 836		60), LH	1	Seat cover	Sitspåse	6
0020	1	41 35 844		60), RH	1	Seat cover	Sitspåse	6
0030	2	41 35 786		60)	2	Back cover	Ryggpåse	6
0040	3	*41 67 193*		60,200) NLS - USE 4313706	2	Head restraint cover	Nackstödspåse	6
0045	3	43 13 706		60,201)	2	Head restraint cover	Nackstödspåse	6
0050	3A	40 50 506		60)	2	Head restraint cover	Nackstödspåse	6
0060	4	95 73 304		60), LH	1	Seat cover	Sitspåse	6
0070	4	95 76 083		60), 4D	1	Seat cover	Sitspåse	6
0080	4A	95 73 296		60), RH	1	Seat cover	Sitspåse	6
0090	5	95 73 320		60), LH	1	Back cover	Ryggpåse	6
0100	5	95 76 141		60), 4D	1	Back cover	Ryggpåse	6
0110	5A	95 73 312		60), RH	1	Back cover	Ryggpåse	6
0120	6	95 73 338		60)	1	Arm rest cover	Armstödspåse	6
0130	8	40 51 355		60), 4D	1	Hatch	Lucka	6
0145				TRIM COLOUR E33				
0150	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0160	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0170	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0180	3	41 67 409		70,200)	2	Head restraint cover	Nackstödspåse	6
0185	3	43 13 474		70,201)	2	Head restraint cover	Nackstödspåse	6
0190	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0200	4	98 90 690		70), LH	1	Seat cover	Sitspåse	6
0210	4	95 76 091		70), 4D	1	Seat cover	Sitspåse	6
0220	4A	98 90 682		70), RH	1	Seat cover	Sitspåse	6
0230	5	98 90 716		70), LH	1	Back cover	Ryggpåse	6
0240	5	95 76 158		70), 4D	1	Back cover	Ryggpåse	6
0250	5A	98 90 708		70), RH	1	Back cover	Ryggpåse	6
0260	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0270	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0285				TRIM COLOUR E53				
0290	1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
0295	1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
0300	2	41 35 935		70)	2	Back cover	Ryggpåse	6
0310	3	41 67 409		70,200)	2	Head restraint cover	Nackstödspåse	6
0315	3	43 13 474		70,201)	2	Head restraint cover	Nackstödspåse	6
0320	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0330	4	40 49 524		70), LH	1	Seat cover	Sitspåse	6
0340	4	41 40 802		70), 4D	1	Seat cover	Sitspåse	6
0350	4A	40 49 516		70), RH	1	Seat cover	Sitspåse	6
0360	5	40 49 540		70), LH	1	Back cover	Ryggpåse	6
0370	5	41 40 810		70), 4D	1	Back cover	Ryggpåse	6
0380	5A	40 49 532		70), RH	1	Back cover	Ryggpåse	6
0390	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0395	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0400								


60. Red Röd
70. Grey Grå
200. Ch. --M1002623, --M2001579
201. Ch. M1002624--, M2001580--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

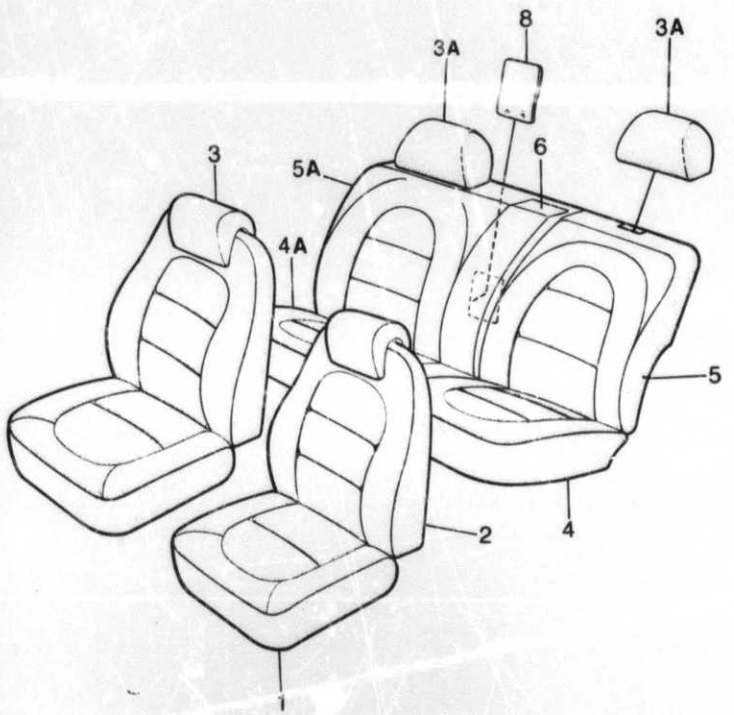

F2945 CAC90

Upholstery

6-B22

Covers 1991
Contour design

Klädsel

Klädselpåsar 1991
Contour design

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			TRIM COLOUR F33				
1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
2	41 35 810		80)	2	Back cover	Ryggpåse	6
3	42 56 616		80,200)	2	Head restraint cover	Nackstödspåse	6
3	43 13 102		80,201)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 548		80)	2	Head restraint cover	Nackstödspåse	6
4	40 38 857		80), LH	1	Seat cover	Sitspåse	6
4	40 39 368		80), 4D	1	Seat cover	Sitspåse	6
4A	40 38 840		80), RH	1	Seat cover	Sitspåse	6
5	40 38 873		80), LH	1	Back cover	Ryggpåse	6
5	40 39 376		80), 4D	1	Back cover	Ryggpåse	6
5A	40 38 865		80), RH	1	Back cover	Ryggpåse	6
6	40 38 881		80)	1	Arm rest cover	Armstödspåse	6
8	40 51 371		80), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G33				
1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
2	41 35 802		90)	2	Back cover	Ryggpåse	6
3	*41 67 417*		90,200) NLS - USE 4313482	2	Head restraint cover	Nackstödspåse	6
3	43 13 482		90,201)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
4	95 90 050		90), LH	1	Seat cover	Sitspåse	6
4	95 89 664		90), 4D	1	Seat cover	Sitspåse	6
4A	95 90 043		90), RH	1	Seat cover	Sitspåse	6
5	95 90 076		90), LH	1	Back cover	Ryggpåse	6
5	95 89 672		90), 4D	1	Back cover	Ryggpåse	6
5A	95 90 068		90), RH	1	Back cover	Ryggpåse	6
6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H33				
1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	*41 67 425*		100,200) NLS - USE 4313490	2	Head restraint cover	Nackstödspåse	6
3	43 13 490		100,201)	2	Head restraint cover	Nackstödspåse	6
3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
4	40 47 429		100), LH	1	Seat cover	Sitspåse	6
4	40 47 916		100), 4D	1	Seat cover	Sitspåse	6
4A	40 47 411		100), RH	1	Seat cover	Sitspåse	6
5	40 47 445		100), LH	1	Back cover	Ryggpåse	6
5	40 47 924		100), 4D	1	Back cover	Ryggpåse	6
5A	40 47 437		100), RH	1	Back cover	Ryggpåse	6
6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100), 4D	1	Hatch	Lucka	6


80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
200. Ch. --M1002623, --M2001579
201. Ch. M1002624--, M2001580--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

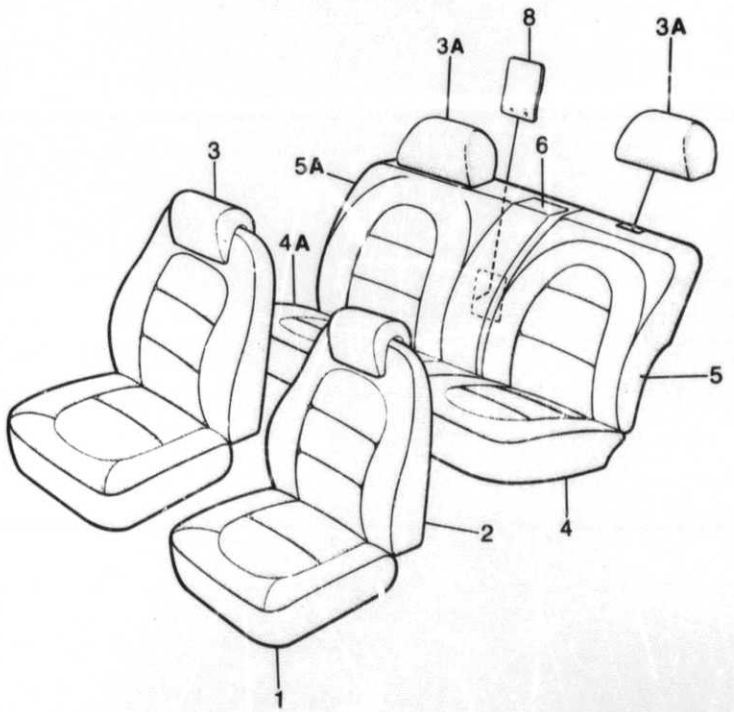

F2945 CAC90

Upholstery
6-B24
Covers 1991
Contour design

Klädsel
Klädselpåsar 1991
Contour design

1307	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0795				TRIM COLOUR H53				
0800	1	42 59 131		100), LH	1	Seat cover	Sitspåse	6
0810	1	42 59 149		100), RH	1	Seat cover	Sitspåse	6
0820	2	42 59 156		100)	2	Back cover	Ryggpåse	6
0830	3	*41 67 425*		100,200) NLS - USE 4313490	2	Head restraint cover	Nackstödspåse	6
0835	3	43 13 490		100,201)	2	Head restraint cover	Nackstödspåse	6
0840	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0850	4	42 58 299		100), LH	1	Seat cover	Sitspåse	6
0860	4	42 58 216		100), 4D	1	Seat cover	Sitspåse	6
0870	4A	42 58 281		100), RH	1	Seat cover	Sitspåse	6
0880	5	42 58 612		100), LH	1	Back cover	Ryggpåse	6
0890	5	42 58 240		100), 4D	1	Back cover	Ryggpåse	6
0900	5A	42 58 570		100), RH	1	Back cover	Ryggpåse	6
0910	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
0920	8	40 47 932		100), 4D	1	Hatch	Lucka	6

100. Light grey Ljus grå
200. Ch. --M1002623, --M2001579
201. Ch. M1002624--, M2001580--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6-C02

Covers 1992
Horizon pattern

Klädsel

Klädselpåsar 1992
Horisontmönster

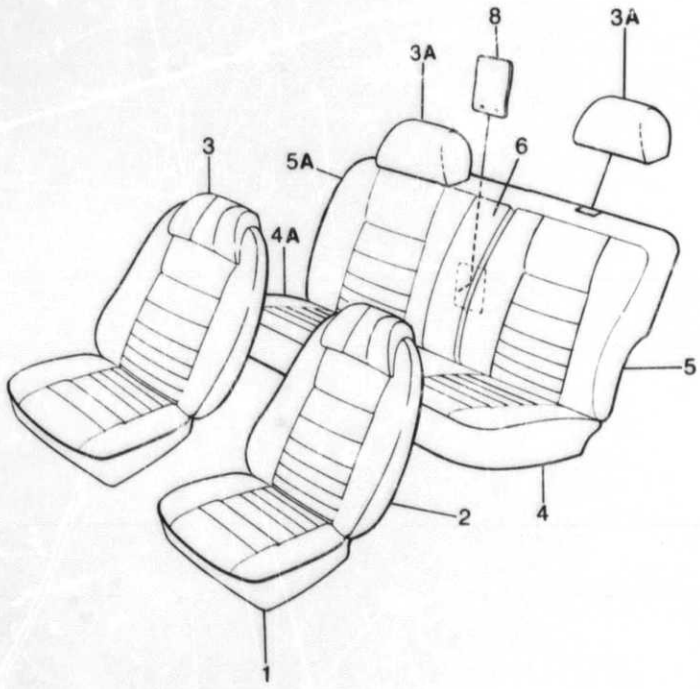

F3681 - CAC90

1309	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J24				
0020	1	42 88 833		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 825		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 841		210)	2	Back cover	Ryggpåse	6
0050	3	42 88 866		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	42 92 488		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	42 92 371		210), LH	1	Seat cover	Sitspåse	6
0080	4	42 92 801		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	42 92 363		210), RH	1	Seat cover	Sitspåse	6
0100	5	42 92 439		210), LH	1	Back cover	Ryggpåse	6
0110	5	42 92 835		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	42 92 421		210), RH	1	Back cover	Ryggpåse	6
0130	6	42 92 504		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR J44	1			
0160	1	42 89 096		210,228,235), LH	1	Seat cover	Sitspåse	6
0170	1	42 89 088		210,228,235), RH	1	Seat cover	Sitspåse	6
0180	1	42 88 999		210,229,235), LH	1	Seat cover	Sitspåse	6
0190	1	42 88 981		210,229,235), RH	1	Seat cover	Sitspåse	6
0200	2	42 89 120		210,228,235)	2	Back cover	Ryggpåse	6
0210	2	42 89 005		210,229,235)	2	Back cover	Ryggpåse	6
0220	3	42 89 021		210,235)	2	Head restraint cover	Nackstödspåse	6
0230	3A	42 92 553		210,235)	2	Head restraint cover	Nackstödspåse	6
0240	4	42 92 579		210,235), LH	1	Seat cover	Sitspåse	6
0250	4	42 92 884		210,235), 4D	1	Seat cover	Sitspåse	6
0260	4A	42 92 561		210,235), RH	1	Seat cover	Sitspåse	6
0270	5	42 92 637		210,235), LH	1	Back cover	Ryggpåse	6
0280	5	42 92 918		210,235), 4D	1	Back cover	Ryggpåse	6
0290	5A	42 92 629		210,235), RH	1	Back cover	Ryggpåse	6
0300	6	42 92 678		210,235)	1	Arm rest cover	Armstödspåse	6
0310	8	42 92 777		210,235), 4D	1	Hatch	Lucka	6
0320				TRIM COLOUR J44	1			
0330	1	43 16 550		210,228,236), LH	1	Seat cover	Sitspåse	6
0340	1	43 16 584		210,228,236), RH	1	Seat cover	Sitspåse	6
0350	1	43 16 592		210,229,236), LH	1	Seat cover	Sitspåse	6
0360	1	43 16 626		210,229,236), RH	1	Seat cover	Sitspåse	6
0370	2	43 16 568		210,228,236)	2	Back cover	Ryggpåse	6
0380	2	43 16 600		210,229,236)	2	Back cover	Ryggpåse	6
0390	3	43 16 576		210,236)	2	Head restraint cover	Nackstödspåse	6
0400	3A	43 17 061		210,236)	2	Head restraint cover	Nackstödspåse	6
0410	4	43 17 012		210,236), LH	1	Seat cover	Sitspåse	6
0420	4	43 17 137		210,236), 4D	1	Seat cover	Sitspåse	6
0430	4A	43 17 020		210,236), RH	1	Seat cover	Sitspåse	6
0440	5	43 17 038		210,236), LH	1	Back cover	Ryggpåse	6
0450	5	43 17 145		210,236), 4D	1	Back cover	Ryggpåse	6
0460	5A	43 17 046		210,236), RH	1	Back cover	Ryggpåse	6
0470	6	43 17 053		210,236)	1	Arm rest cover	Armstödspåse	6
0480	8	42 92 777		210,236), 4D	1	Hatch	Lucka	6
0490								

210. Light beige Ljus beige
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
235. Ch. --N1035491
236. Ch. N1035492--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX


Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery

6-C04 Covers 1992 Horizon pattern

Klädsel

Klädselpåsar 1992 Horisontmönster

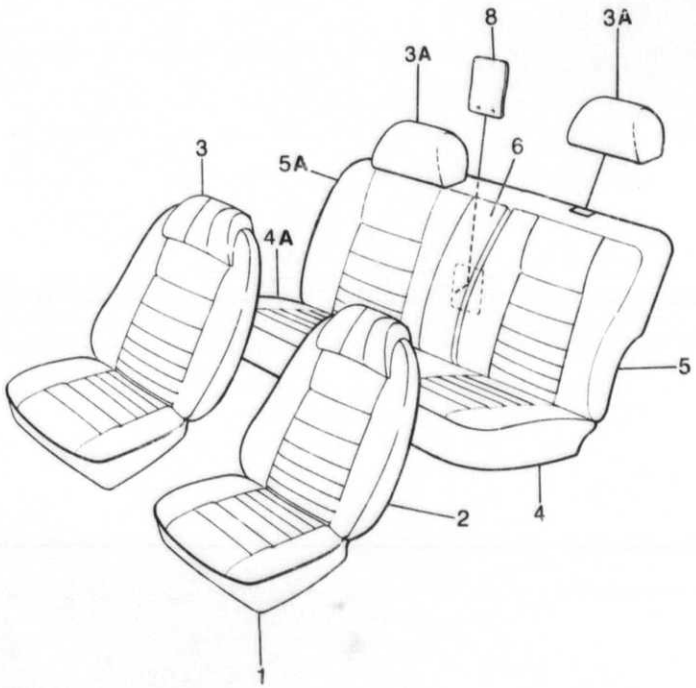

F3681 - CAC90

1309	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0495				TRIM COLOUR E24				
0500	1	41 34 151		70), LH	1	Seat cover	Sitspåse	6
0510	1	41 34 169		70), RH	1	Seat cover	Sitspåse	6
0520	2	41 34 102		70)	2	Back cover	Ryggpåse	6
0530	3	42 57 226		70)	2	Head restraint cover	Nackstödspåse	6
0540	3A	40 50 464		70)	2	Head restraint cover	Nackstödspåse	6
0550	4	96 97 293		70), LH	1	Seat cover	Sitspåse	6
0560	4	95 75 168		70), 4D	1	Seat cover	Sitspåse	6
0570	4A	96 97 343		70), RH	1	Seat cover	Sitspåse	6
0580	5	41 39 960		70), LH	1	Back cover	Ryggpåse	6
0590	5	95 75 218		70), 4D	1	Back cover	Ryggpåse	6
0600	5A	41 39 978		70), RH	1	Back cover	Ryggpåse	6
0610	6	96 53 718		70)	1	Arm rest cover	Armstödspåse	6
0620	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0630				TRIM COLOUR E44				
0640	1	41 33 740		70,228,233), LH	1	Seat cover	Sitspåse	6
0650	1	41 33 757		70,228,233), RH	1	Seat cover	Sitspåse	6
0660	1	41 30 373		70,229,233), LH	1	Seat cover	Sitspåse	6
0670	1	41 30 381		70,229,233), RH	1	Seat cover	Sitspåse	6
0680	2	41 33 815		70,228,233)	2	Back cover	Ryggpåse	6
0690	2	41 31 264		70,229,233)	2	Back cover	Ryggpåse	6
0700	3	42 56 657		70,233)	2	Head restraint cover	Nackstödspåse	6
0710	3A	40 50 407		70,233)	2	Head restraint cover	Nackstödspåse	6
0720	4	95 87 395		70,233), LH	1	Seat cover	Sitspåse	6
0730	4	95 92 825		70,233), 4D	1	Seat cover	Sitspåse	6
0740	4A	95 87 460		70,233), RH	1	Seat cover	Sitspåse	6
0750	5	41 39 986		70,233), LH	1	Back cover	Ryggpåse	6
0760	5	95 92 874		70,233), 4D	1	Back cover	Ryggpåse	6
0770	5A	41 39 994		70,233), RH	1	Back cover	Ryggpåse	6
0780	6	95 87 650		70,233)	1	Arm rest cover	Armstödspåse	6
0790	8	40 51 363		70,233), 4D	1	Hatch	Lucka	6
0800				TRIM COLOUR E44				
0810	1	43 16 477		70,228,234), LH	1	Seat cover	Sitspåse	6
0820	1	43 16 501		70,228,234), RH	1	Seat cover	Sitspåse	6
0830	1	43 17 160		70,229,234), LH	1	Seat cover	Sitspåse	6
0840	1	43 17 186		70,229,234), RH	1	Seat cover	Sitspåse	6
0850	2	43 16 485		70,228,234)	2	Back cover	Ryggpåse	6
0860	2	43 17 178		70,229,234)	2	Back cover	Ryggpåse	6
0870	3	43 16 493		70,234)	2	Head restraint cover	Nackstödspåse	6
0880	3A	43 16 758		70,234)	2	Head restraint cover	Nackstödspåse	6
0890	4	43 16 717		70,234), LH	1	Seat cover	Sitspåse	6
0900	4	43 16 832		70,234), 4D	1	Seat cover	Sitspåse	6
0910	4A	43 16 725		70,234), RH	1	Seat cover	Sitspåse	6
0920	5	43 16 733		70,234), LH	1	Back cover	Ryggpåse	6
0930	5	43 16 840		70,234), 4D	1	Back cover	Ryggpåse	6
0940	5A	43 16 741		70,234), RH	1	Back cover	Ryggpåse	6
0950	6	43 16 766		70,234)	1	Arm rest cover	Armstödspåse	6
0960	8	40 51 363		70,234), 4D	1	Hatch	Lucka	6
0965								


70. Grey Grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
233. Ch. --N1013996
234. Ch. N1013997--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

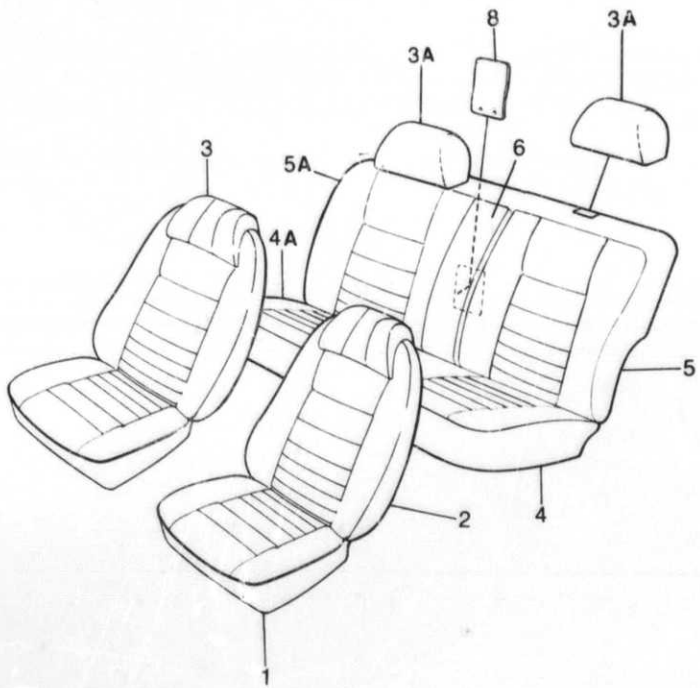

F3681 - CAC90

1309	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0970				TRIM COLOUR F24				
0980	1	41 34 177		80), LH	1	Seat cover	Sitspåse	6
0990	1	41 34 185		80), RH	1	Seat cover	Sitspåse	6
1000	2	41 34 110		80)	2	Back cover	Ryggpåse	6
1010	3	42 57 234		80)	2	Head restraint cover	Nackstödspåse	6
1020	3A	40 50 472		80)	2	Head restraint cover	Nackstödspåse	6
1030	4	96 97 285		80), LH	1	Seat cover	Sitspåse	6
1040	4	95 75 150		80), 4D	1	Seat cover	Sitspåse	6
1050	4A	96 97 335		80), RH	1	Seat cover	Sitspåse	6
1060	5	42 91 530		80), LH	1	Back cover	Ryggpåse	6
1070	5	95 75 200		80), 4D	1	Back cover	Ryggpåse	6
1080	5A	42 91 522		80), RH	1	Back cover	Ryggpåse	6
1090	6	96 97 244		80)	1	Arm rest cover	Armstödspåse	6
1100	8	40 51 371		80), 4D	1	Hatch	Lucka	6
1110				TRIM COLOUR F44				
1120	1	41 33 765		80,228,237), LH	1	Seat cover	Sitspåse	6
1130	1	41 33 773		80,228,237), RH	1	Seat cover	Sitspåse	6
1140	1	41 30 399		80,229,237), LH	1	Seat cover	Sitspåse	6
1150	1	41 31 207		80,229,237), RH	1	Seat cover	Sitspåse	6
1160	2	41 33 823		80,228,237)	2	Back cover	Ryggpåse	6
1170	2	41 31 272		80,229,237)	2	Back cover	Ryggpåse	6
1180	3	42 56 665		80,237)	2	Head restraint cover	Nackstödspåse	6
1190	3A	40 50 415		80,237)	2	Head restraint cover	Nackstödspåse	6
1200	4	95 87 387		80,237), LH	1	Seat cover	Sitspåse	6
1210	4	95 92 817		80,237), 4D	1	Seat cover	Sitspåse	6
1220	4A	95 87 452		80,237), RH	1	Seat cover	Sitspåse	6
1230	5	42 91 472		80,237), LH	1	Back cover	Ryggpåse	6
1240	5	95 92 866		80,237), 4D	1	Back cover	Ryggpåse	6
1250	5A	42 91 464		80,237), RH	1	Back cover	Ryggpåse	6
1260	6	95 87 643		80,237)	1	Arm rest cover	Armstödspåse	6
1270	8	40 51 371		80,237), 4D	1	Hatch	Lucka	6
1280				TRIM COLOUR F44				
1290	1	43 16 634		80,228,238), LH	1	Seat cover	Sitspåse	6
1300	1	43 16 667		80,228,238), RH	1	Seat cover	Sitspåse	6
1310	1	43 16 352		80,229,238), LH	1	Seat cover	Sitspåse	6
1320	1	43 16 386		80,229,238), RH	1	Seat cover	Sitspåse	6
1330	2	43 16 642		80,228,238)	2	Back cover	Ryggpåse	6
1340	2	43 16 360		80,229,238)	2	Back cover	Ryggpåse	6
1350	3	43 16 378		80,238)	2	Head restraint cover	Nackstödspåse	6
1360	3A	43 16 964		80,238)	2	Head restraint cover	Nackstödspåse	6
1370	4	43 16 915		80,238), LH	1	Seat cover	Sitspåse	6
1380	4	43 17 079		80,238), 4D	1	Seat cover	Sitspåse	6
1390	4A	43 16 923		80,238), RH	1	Seat cover	Sitspåse	6
1400	5	43 16 931		80,238), LH	1	Back cover	Ryggpåse	6
1410	5	43 17 087		80,238), 4D	1	Back cover	Ryggpåse	6
1420	5A	43 16 949		80,238), RH	1	Back cover	Ryggpåse	6
1430	6	43 16 956		80,238)	1	Arm rest cover	Armstödspåse	6
1440	8	40 51 371		80,238), 4D	1	Hatch	Lucka	6
1445								

80. Blue Blå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
237. Ch. --N1026401
238. Ch. N1026402--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-C08

Upholstery
Covers 1992
Horizon pattern

Klädsel
Klädselpåsar 1992
Horisontmönster

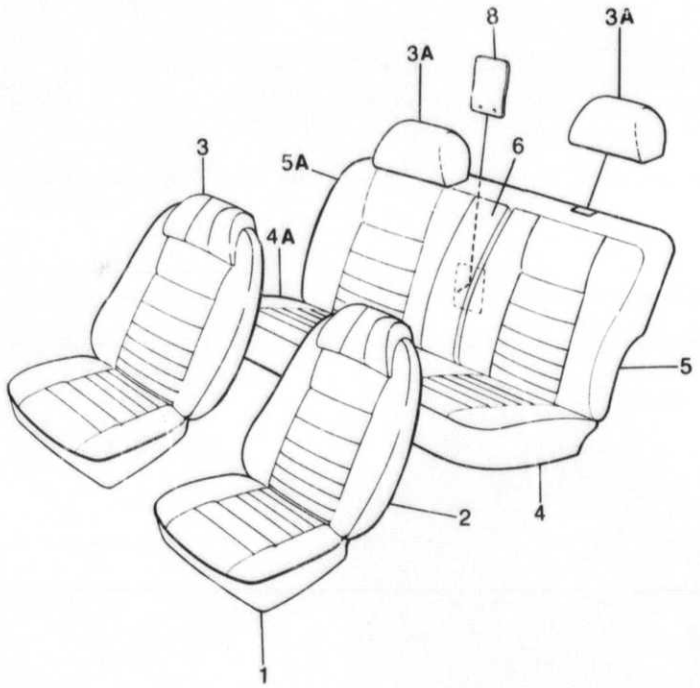

F3681 - CAC90

1309	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1450				TRIM COLOUR G24				
1460	1	41 34 193		90), LH	1	Seat cover	Sitspåse	6
1470	1	41 34 201		90), RH	1	Seat cover	Sitspåse	6
1480	2	41 34 128		90)	2	Back cover	Ryggpåse	6
1490	3	42 57 242		90)	2	Head restraint cover	Nackstödspåse	6
1500	3A	40 50 480		90)	2	Head restraint cover	Nackstödspåse	6
1510	4	95 87 346		90), LH	1	Seat cover	Sitspåse	6
1520	4	95 87 403		90), 4D	1	Seat cover	Sitspåse	6
1530	4A	95 87 411		90), RH	1	Seat cover	Sitspåse	6
1540	5	42 91 555		90), LH	1	Back cover	Ryggpåse	6
1550	5	95 87 478		90), 4D	1	Back cover	Ryggpåse	6
1560	5A	42 91 548		90), RH	1	Back cover	Ryggpåse	6
1570	6	95 87 601		90)	1	Arm rest cover	Armstödspåse	6
1580	8	40 51 389		90), 4D	1	Hatch	Lucka	6
1590				TRIM COLOUR G44				
1600	1	41 33 781		90,228,239), LH	1	Seat cover	Sitspåse	6
1610	1	41 33 799		90,228,239), RH	1	Seat cover	Sitspåse	6
1620	1	41 31 215		90,229,239), LH	1	Seat cover	Sitspåse	6
1630	1	41 31 223		90,229,239), RH	2	Seat cover	Sitspåse	6
1640	2	41 33 831		90,228,239)	2	Back cover	Ryggpåse	6
1650	2	41 31 280		90,229,239)	2	Back cover	Ryggpåse	6
1660	3	42 56 673		90,239)	2	Head restraint cover	Nackstödspåse	6
1670	3A	40 50 423		90,239)	2	Head restraint cover	Nackstödspåse	6
1680	4	95 87 379		90,239), LH	1	Seat cover	Sitspåse	6
1690	4	95 92 809		90,239), 4D	1	Seat cover	Sitspåse	6
1700	4A	95 87 445		90,239), RH	1	Seat cover	Sitspåse	6
1710	5	42 91 496		90,239), LH	1	Back cover	Ryggpåse	6
1720	5	95 92 858		90,239), 4D	1	Back cover	Ryggpåse	6
1730	5A	42 91 480		90,239), RH	1	Back cover	Ryggpåse	6
1740	6	95 87 635		90,239)	1	Arm rest cover	Armstödspåse	6
1750	8	40 51 389		90,239), 4D	1	Hatch	Lucka	6
1760				TRIM COLOUR G44				
1770	1	43 16 675		90,228,240), LH	1	Seat cover	Sitspåse	6
1780	1	43 16 709		90,228,240), RH	1	Seat cover	Sitspåse	6
1790	1	43 16 394		90,229,240), LH	1	Seat cover	Sitspåse	6
1800	1	43 16 428		90,229,240), RH	2	Seat cover	Sitspåse	6
1810	2	43 16 683		90,228,240)	2	Back cover	Ryggpåse	6
1820	2	43 16 402		90,229,240)	2	Back cover	Ryggpåse	6
1830	3	43 16 410		90,240)	2	Head restraint cover	Nackstödspåse	6
1840	3A	43 16 816		90,240)	2	Head restraint cover	Nackstödspåse	6
1850	4	43 16 774		90,240), LH	1	Seat cover	Sitspåse	6
1860	4	43 17 103		90,240), 4D	1	Seat cover	Sitspåse	6
1870	4A	43 16 782		90,240), RH	1	Seat cover	Sitspåse	6
1880	5	43 16 790		90,240), LH	1	Back cover	Ryggpåse	6
1890	5	43 17 111		90,240), 4D	1	Back cover	Ryggpåse	6
1900	5A	43 16 808		90,240), RH	1	Back cover	Ryggpåse	6
1910	6	43 16 824		90,240)	1	Arm rest cover	Armstödspåse	6
1920	8	40 51 389		90,240), 4D	1	Hatch	Lucka	6
1925								

90. Yellow Gul
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
239 Ch. --N1027620
240. Ch. N1027621--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX


Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery

6-C10 Covers 1992 Horizon pattern

Klädsel

Klädselpåsar 1992 Horisontmönster

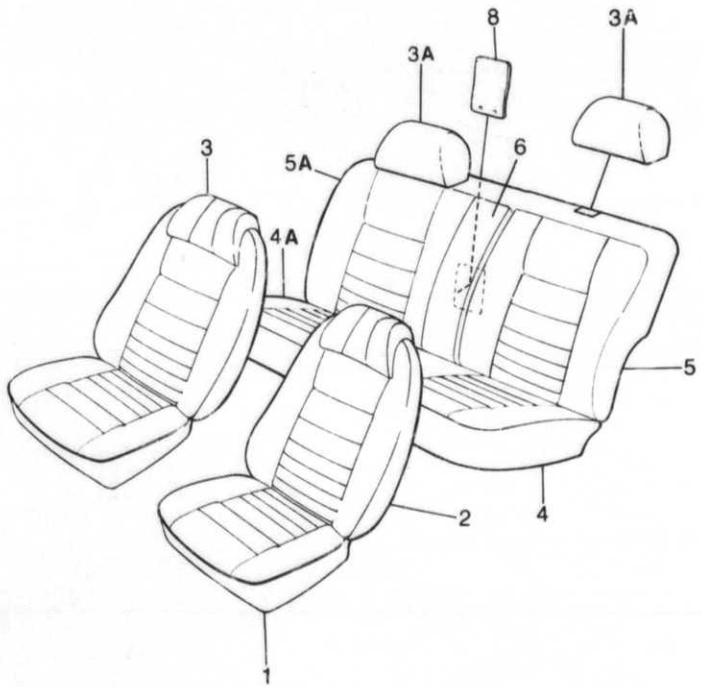

F3681 - CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			TRIM COLOUR H24				
1	41 27 874		100), LH	1	Seat cover	Sitspåse	6
1	41 27 882		100), RH	1	Seat cover	Sitspåse	6
2	41 27 890		100)	2	Back cover	Ryggpåse	6
3	42 57 259		100)	2	Head restraint cover	Nackstödspåse	6
3A	41 28 179		100)	2	Head restraint cover	Nackstödspåse	6
4	41 28 096		100), LH	1	Seat cover	Sitspåse	6
4	41 28 146		100), 4D	1	Seat cover	Sitspåse	6
4A	41 28 104		100), RH	1	Seat cover	Sitspåse	6
5	42 91 571		100), LH	1	Back cover	Ryggpåse	6
5	41 28 153		100), 4D	1	Back cover	Ryggpåse	6
5A	42 91 563		100), RH	1	Back cover	Ryggpåse	6
6	41 28 138		100)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H44				
1	41 27 817		100,228,241), LH	1	Seat cover	Sitspåse	6
1	41 27 825		100,228,241), RH	1	Seat cover	Sitspåse	6
1	41 27 742		100,229,241), LH	1	Seat cover	Sitspåse	6
1	41 27 759		100,229,241), RH	1	Seat cover	Sitspåse	6
2	41 27 833		100,228,241)	2	Back cover	Ryggpåse	6
2	41 27 767		100,229,241)	2	Back cover	Ryggpåse	6
3	41 27 700		100,241)	2	Head restraint cover	Nackstödspåse	6
3A	41 28 161		100,241)	2	Head restraint cover	Nackstödspåse	6
4	41 28 021		100,241), LH	1	Seat cover	Sitspåse	6
4	41 28 070		100,241), 4D	1	Seat cover	Sitspåse	6
4A	41 28 039		100,241), RH	1	Seat cover	Sitspåse	6
5	42 91 514		100,241), LH	1	Back cover	Ryggpåse	6
5	41 28 088		100,241), 4D	1	Back cover	Ryggpåse	6
5A	42 91 506		100,241), RH	1	Back cover	Ryggpåse	6
6	41 28 062		100,241)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100,241), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H44				
1	43 16 519		100,228,242), LH	1	Seat cover	Sitspåse	6
1	43 16 543		100,228,242), RH	1	Seat cover	Sitspåse	6
1	43 16 436		100,229,242), LH	1	Seat cover	Sitspåse	6
1	43 16 469		100,229,242), RH	1	Seat cover	Sitspåse	6
2	43 16 527		100,228,242)	2	Back cover	Ryggpåse	6
2	43 16 444		100,229,242)	2	Back cover	Ryggpåse	6
3	43 16 451		100,242)	2	Head restraint cover	Nackstödspåse	6
3A	43 16 907		100,242)	2	Head restraint cover	Nackstödspåse	6
4	43 16 972		100,242), LH	1	Seat cover	Sitspåse	6
4	43 16 865		100,242), 4D	1	Seat cover	Sitspåse	6
4A	43 16 980		100,242), RH	1	Seat cover	Sitspåse	6
5	43 16 998		100,242), LH	1	Back cover	Ryggpåse	6
5	43 16 873		100,242), 4D	1	Back cover	Ryggpåse	6
5A	43 17 004		100,242), RH	1	Back cover	Ryggpåse	6
6	43 16 881		100,242)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100,242), 4D	1	Hatch	Lucka	6


100. Light grey Ljus grå
228. For seats with upholstery made by cloth/coated fabric För stolar med klädsel av tyg/vävplast
229. For seats with backrest pocket För stolar med ryggficka
241. Ch. -N1024079
242. Ch. N1024080--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

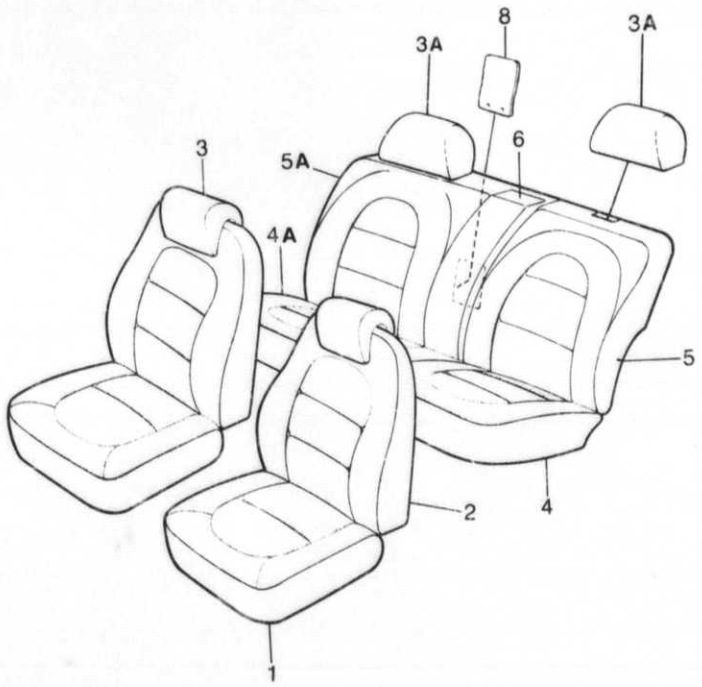

F3682 - CAC90

1311	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J33				
0020	1	42 88 692		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 684		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 718		210)	2	Back cover	Ryggpåse	6
0050	3	*41 69 884*		210) NLS - USE 4313508	2	Head restraint cover	Nackstödspåse	6
0060	3A	42 92 157		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	42 92 215		210), LH	1	Seat cover	Sitspåse	6
0080	4	42 92 710		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	42 92 207		210), RH	1	Seat cover	Sitspåse	6
0100	5	42 92 298		210), LH	1	Back cover	Ryggpåse	6
0110	5	42 92 744		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	42 92 280		210), RH	1	Back cover	Ryggpåse	6
0130	6	42 92 173		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR J53				
0160	1	43 15 925		210), LH	1	Seat cover	Sitspåse	6
0170	1	43 15 958		210), RH	1	Seat cover	Sitspåse	6
0180	2	43 15 933		210)	2	Back cover	Ryggpåse	6
0190	3	43 15 941		210)	2	Head restraint cover	Nackstödspåse	1
0200	3A	*43 16 006*		210) NLS - USE 4292157	2	Head restraint cover	Nackstödspåse	6
0210	4	43 16 022		210), 4D	1	Seat cover	Sitspåse	6
0220	5	43 16 030		210), 4D	1	Back cover	Ryggpåse	6
0230	6	43 16 014		210)	1	Arm rest cover	Armstödspåse	6
0240	8	43 16 048		210), 4D	1	Hatch	Lucka	6
0250				TRIM COLOUR E33				
0260	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0270	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0280	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0290	3	43 13 474		70)	2	Head restraint cover	Nackstödspåse	6
0300	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0310	4	98 90 690		70), LH	1	Seat cover	Sitspåse	6
0320	4	95 76 091		70), 4D	1	Seat cover	Sitspåse	6
0330	4A	98 90 682		70), RH	1	Seat cover	Sitspåse	6
0340	5	41 39 937		70), LH	1	Back cover	Ryggpåse	6
0350	5	95 76 158		70), 4D	1	Back cover	Ryggpåse	6
0360	5A	41 39 929		70), RH	1	Back cover	Ryggpåse	6
0370	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0380	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0390				TRIM COLOUR E53				
0400	1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
0410	1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
0420	2	41 35 935		70)	2	Back cover	Ryggpåse	6
0430	3	43 13 474		70)	2	Head restraint cover	Nackstödspåse	6
0440	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0450	4	40 49 524		70), LH	1	Seat cover	Sitspåse	6
0460	4	41 40 802		70), 4D	1	Seat cover	Sitspåse	6
0470	4A	40 49 516		70), RH	1	Seat cover	Sitspåse	6
0480	5	41 39 952		70), LH	1	Back cover	Ryggpåse	6
0490	5	41 40 810		70), 4D	1	Back cover	Ryggpåse	6
0500	5A	41 39 945		70), RH	1	Back cover	Ryggpåse	6
0510	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0520	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0530								


70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

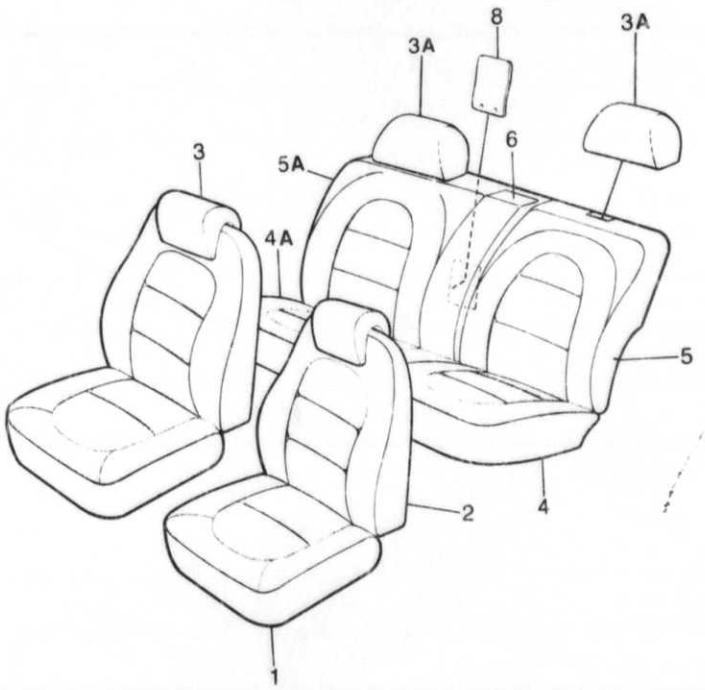

F3682 - CAC90

1311	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540				TRIM COLOUR F33				
0550	1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
0560	1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
0570	2	41 35 810		80)	2	Back cover	Ryggpåse	6
0580	3	43 13 102		80)	2	Head restraint cover	Nackstödspåse	6
0590	3A	40 50 548		80)	2	Head restraint cover	Nackstödspåse	6
0600	4	40 38 857		80), LH	1	Seat cover	Sitspåse	6
0610	4	40 39 368		80), 4D	1	Seat cover	Sitspåse	6
0620	4A	40 38 870		80), RH	1	Seat cover	Sitspåse	6
0630	5	42 91 274		80), LH	1	Back cover	Ryggpåse	6
0640	5	40 39 376		80), 4D	1	Back cover	Ryggpåse	6
0650	5A	42 91 266		80), RH	1	Back cover	Ryggpåse	6
0660	6	40 38 881		80)	1	Arm rest cover	Armstödspåse	6
0670	8	40 51 371		80), 4D	1	Hatch	Lucka	6
0680				TRIM COLOUR G33				
0690	1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
0700	1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
0710	2	41 35 802		90)	2	Back cover	Ryggpåse	6
0720	3	43 13 482		90)	2	Head restraint cover	Nackstödspåse	6
0730	3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
0740	4	95 90 050		90), LH	1	Seat cover	Sitspåse	6
0750	4	95 89 664		90), 4D	1	Seat cover	Sitspåse	6
0760	4A	95 90 043		90), RH	1	Seat cover	Sitspåse	6
0770	5	42 91 258		90), LH	1	Back cover	Ryggpåse	6
0780	5	95 89 672		90), 4D	1	Back cover	Ryggpåse	6
0790	5A	42 91 241		90), RH	1	Back cover	Ryggpåse	6
0800	6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
0810	8	40 51 389		90), 4D	1	Hatch	Lucka	6
0820				TRIM COLOUR H33				
0830	1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
0840	1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
0850	2	41 35 828		100)	2	Back cover	Ryggpåse	6
0860	3	43 13 490		100)	2	Head restraint cover	Nackstödspåse	6
0870	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0880	4	40 47 429		100), LH	1	Seat cover	Sitspåse	6
0890	4	40 47 916		100), 4D	1	Seat cover	Sitspåse	6
0900	4A	40 47 411		100), RH	1	Seat cover	Sitspåse	6
0910	5	42 91 290		100), LH	1	Back cover	Ryggpåse	6
0920	5	40 47 924		100), 4D	1	Back cover	Ryggpåse	6
0930	5A	42 91 282		100), RH	1	Back cover	Ryggpåse	6
0940	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
0950	8	40 47 932		100), 4D	1	Hatch	Lucka	6
0960				TRIM COLOUR H53				
0970	1	42 59 131		100), LH	1	Seat cover	Sitspåse	6
0980	1	42 59 149		100), RH	1	Seat cover	Sitspåse	6
0990	2	42 59 156		100)	2	Back cover	Ryggpåse	6
1000	3	43 13 490		100)	2	Head restraint cover	Nackstödspåse	6
1010	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
1020	4	42 58 299		100), LH	1	Seat cover	Sitspåse	6
1030	4	42 58 216		100), 4D	1	Seat cover	Sitspåse	6
1040	4A	42 58 281		100), RH	1	Seat cover	Sitspåse	6
1050	5	42 91 415		100), LH	1	Back cover	Ryggpåse	6
1060	5	42 58 240		100), 4D	1	Back cover	Ryggpåse	6
1070	5A	42 91 407		100), RH	1	Back cover	Ryggpåse	6
1080	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
1090	8	40 47 932		100), 4D	1	Hatch	Lucka	6


80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

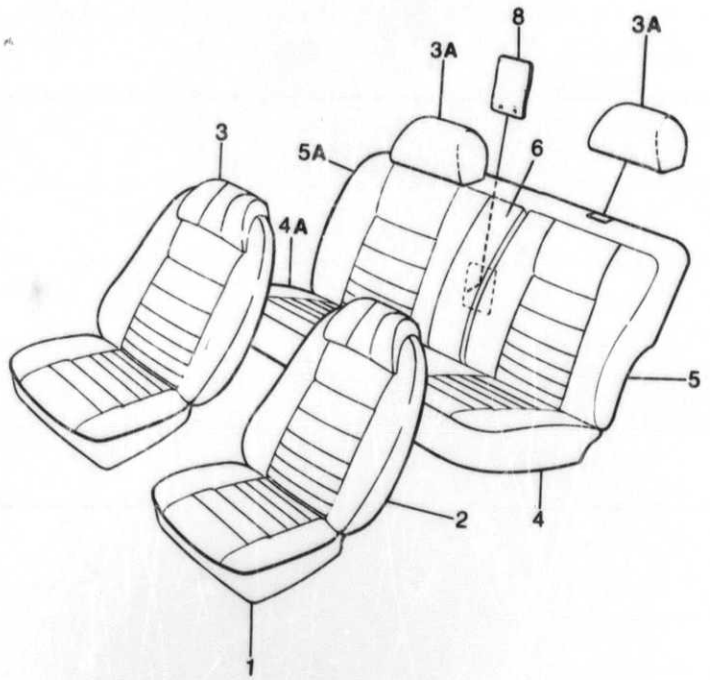

F4577 CAC90

Upholstery

6-C16

Covers 1993
Horizon pattern

Klädsel

Klädselpåsar 1993
Horisontmönster

1313	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J24				
0020	1	42 88 833		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 825		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 841		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 078		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	42 92 488		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	42 92 371		210), LH	1	Seat cover	Sitspåse	6
0080	4	42 92 801		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	42 92 363		210), RH	1	Seat cover	Sitspåse	6
0100	5	42 92 439		210), LH	1	Back cover	Ryggpåse	6
0110	5	42 92 835		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	42 92 421		210), RH	1	Back cover	Ryggpåse	6
0130	6	42 92 504		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR J44				
0160	1	43 16 592		210), LH	1	Seat cover	Sitspåse	6
0170	1	43 16 626		210), RH	1	Seat cover	Sitspåse	6
0180	2	43 16 600		210)	2	Back cover	Ryggpåse	6
0190	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	
0200	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0210	4	43 17 012		210), LH	1	Seat cover	Sitspåse	6
0220	4	43 17 137		210), 4D	1	Seat cover	Sitspåse	6
0230	4A	43 17 020		210), RH	1	Seat cover	Sitspåse	6
0240	5	43 17 038		210), LH	1	Back cover	Ryggpåse	6
0250	5	43 17 145		210), 4D	1	Back cover	Ryggpåse	6
0260	5A	43 17 046		210), RH	1	Back cover	Ryggpåse	6
0270	6	43 17 053		210)	1	Arm rest cover	Armstödspåse	6
0280	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0320				TRIM COLOUR J74				
0330	1	43 16 550		210), LH	1	Seat cover	Sitspåse	6
0340	1	43 16 584		210), RH	1	Seat cover	Sitspåse	6
0370	2	43 16 568		210)	2	Back cover	Ryggpåse	6
0390	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	
0400	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0410	4	43 17 012		210), LH	1	Seat cover	Sitspåse	6
0420	4	43 17 137		210), 4D	1	Seat cover	Sitspåse	6
0430	4A	43 17 020		210), RH	1	Seat cover	Sitspåse	6
0440	5	43 17 038		210), LH	1	Back cover	Ryggpåse	6
0450	5	43 17 145		210), 4D	1	Back cover	Ryggpåse	6
0460	5A	43 17 046		210), RH	1	Back cover	Ryggpåse	6
0470	6	43 17 053		210)	1	Arm rest cover	Armstödspåse	6
0480	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0490				TRIM COLOUR E24				
0500	1	41 34 151		70), LH	1	Seat cover	Sitspåse	6
0510	1	41 34 169		70), RH	1	Seat cover	Sitspåse	6
0520	2	41 34 102		70)	2	Back cover	Ryggpåse	6
0530	3	44 74 110		70)	2	Head restraint cover	Nackstödspåse	6
0540	3A	40 50 464		70)	2	Head restraint cover	Nackstödspåse	6
0550	4	96 97 293		70), LH	1	Seat cover	Sitspåse	6
0560	4	95 75 168		70), 4D	1	Seat cover	Sitspåse	6
0570	4A	96 97 343		70), RH	1	Seat cover	Sitspåse	6
0580	5	41 39 960		70), LH	1	Back cover	Ryggpåse	6
0590	5	95 75 218		70), 4D	1	Back cover	Ryggpåse	6
0600	5A	41 39 978		70), RH	1	Back cover	Ryggpåse	6
0610	6	96 53 718		70)	1	Arm rest cover	Armstödspåse	6
0620	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0625								


70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

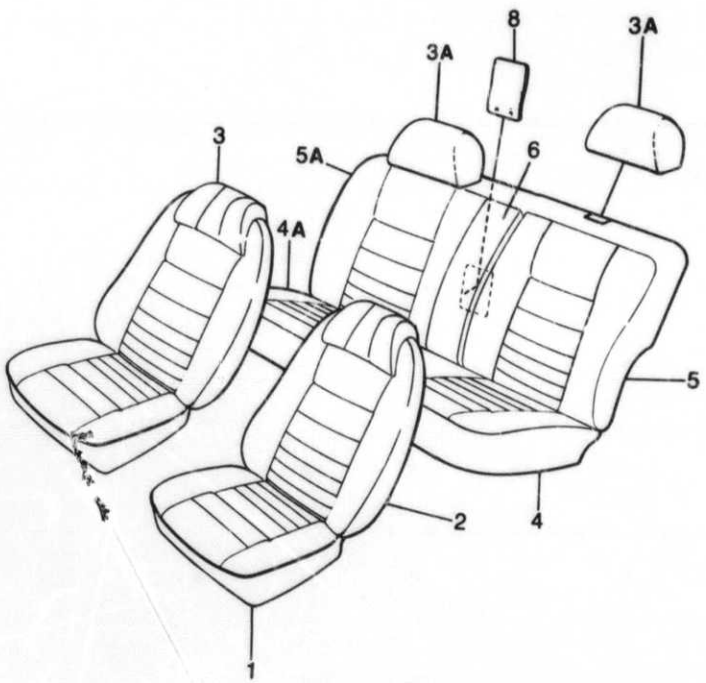

F4577 CAC90

1313	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0630				TRIM COLOUR E44				
0640	1	43 17 160		70), LH	1	Seat cover	Sitspåse	6
0650	1	43 17 186		70), RH	1	Seat cover	Sitspåse	6
0660	2	43 17 178		70)	2	Back cover	Ryggpåse	6
0670	3	44 74 060		70)	2	Head restraint cover	Nackstödspåse	6
0680	3A	43 16 758		70)	2	Head restraint cover	Nackstödspåse	6
0690	4	43 16 717		70), LH	1	Seat cover	Sitspåse	6
0700	4	43 16 832		70), 4D	1	Seat cover	Sitspåse	6
0710	4A	43 16 725		70), RH	1	Seat cover	Sitspåse	6
0720	5	43 16 733		70), LH	1	Back cover	Ryggpåse	6
0730	5	43 16 840		70), 4D	1	Back cover	Ryggpåse	6
0740	5A	43 16 741		70), RH	1	Back cover	Ryggpåse	6
0750	6	43 16 766		70)	1	Arm rest cover	Armstödspåse	6
0760	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0800				TRIM COLOUR E74				
0810	1	43 16 477		70), LH	1	Seat cover	Sitspåse	6
0820	1	43 16 501		70), RH	1	Seat cover	Sitspåse	6
0850	2	43 16 485		70)	2	Back cover	Ryggpåse	6
0870	3	44 74 060		70)	2	Head restraint cover	Nackstödspåse	6
0880	3A	43 16 758		70)	2	Head restraint cover	Nackstödspåse	6
0890	4	43 16 717		70), LH	1	Seat cover	Sitspåse	6
0900	4	43 16 832		70), 4D	1	Seat cover	Sitspåse	6
0910	4A	43 16 725		70), RH	1	Seat cover	Sitspåse	6
0920	5	43 16 733		70), LH	1	Back cover	Ryggpåse	6
0930	5	43 16 840		70), 4D	1	Back cover	Ryggpåse	6
0940	5A	43 16 741		70), RH	1	Back cover	Ryggpåse	6
0950	6	43 16 766		70)	1	Arm rest cover	Armstödspåse	6
0960	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0970				TRIM COLOUR F24				
0980	1	41 34 177		80), LH	1	Seat cover	Sitspåse	6
0990	1	41 34 185		80), RH	1	Seat cover	Sitspåse	6
1000	2	41 34 110		80)	2	Back cover	Ryggpåse	6
1010	3	44 74 102		80)	2	Head restraint cover	Nackstödspåse	6
1020	3A	40 50 472		80)	2	Head restraint cover	Nackstödspåse	6
1030	4	96 97 285		80), LH	1	Seat cover	Sitspåse	6
1040	4	95 75 150		80), 4D	1	Seat cover	Sitspåse	6
1050	4A	96 97 335		80), RH	1	Seat cover	Sitspåse	6
1060	5	42 91 530		80), LH	1	Back cover	Ryggpåse	6
1070	5	95 75 200		80), 4D	1	Back cover	Ryggpåse	6
1080	5A	42 91 522		80), RH	1	Back cover	Ryggpåse	6
1090	6	96 97 244		80)	1	Arm rest cover	Armstödspåse	6
1100	8	40 51 371		80), 4D	1	Hatch	Lucka	6
1110				TRIM COLOUR F44				
1120	1	43 16 352		80), LH	1	Seat cover	Sitspåse	6
1130	1	43 16 386		80), RH	1	Seat cover	Sitspåse	6
1140	2	43 16 360		80)	2	Back cover	Ryggpåse	6
1150	3	44 74 052		80)	2	Head restraint cover	Nackstödspåse	6
1160	3A	43 16 964		80)	2	Head restraint cover	Nackstödspåse	6
1170	4	43 16 915		80), LH	1	Seat cover	Sitspåse	6
1180	4	43 17 079		80), 4D	1	Seat cover	Sitspåse	6
1190	4A	43 16 923		80), RH	1	Seat cover	Sitspåse	6
1200	5	43 16 931		80), LH	1	Back cover	Ryggpåse	6
1210	5	43 17 087		80), 4D	1	Back cover	Ryggpåse	6
1220	5A	43 16 949		80), RH	1	Back cover	Ryggpåse	6
1230	6	43 16 956		80)	1	Arm rest cover	Armstödspåse	6
1240	8	40 51 371		80), 4D	1	Hatch	Lucka	6
1260								


70. Grey Grå
80. Blue Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

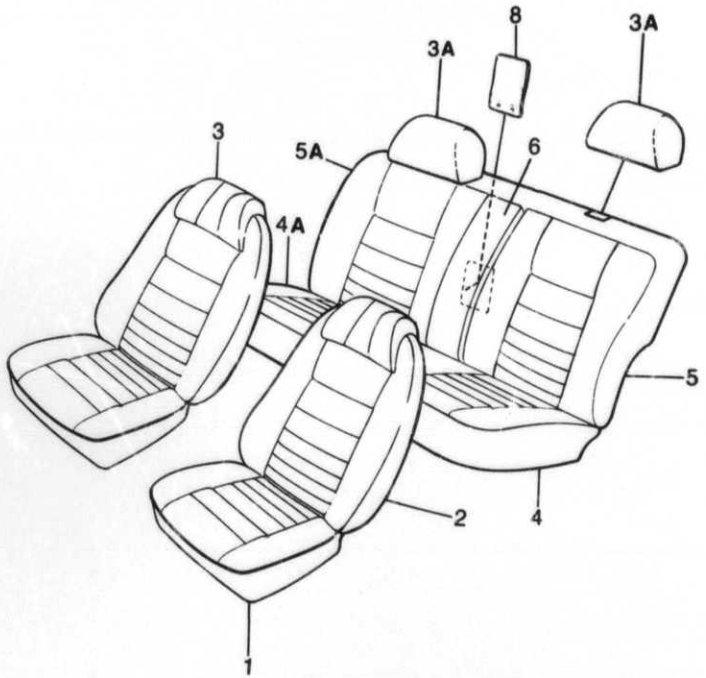

F4577 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR F74				
1	43 16 634		80), LH	1	Seat cover	Sitspåse	6
1	43 16 667		80), RH	1	Seat cover	Sitspåse	6
2	43 16 642		80)	2	Back cover	Ryggpåse	6
3	44 74 052		80)	2	Head restraint cover	Nackstödspåse	6
3A	43 16 964		80)	2	Head restraint cover	Nackstödspåse	6
4	43 16 915		80), LH	1	Seat cover	Sitspåse	6
4	43 17 079		80), 4D	1	Seat cover	Sitspåse	6
4A	43 16 923		80), RH	1	Seat cover	Sitspåse	6
5	43 16 931		80), LH	1	Back cover	Ryggpåse	6
5	43 17 087		80), 4D	1	Back cover	Ryggpåse	6
5A	43 16 949		80), RH	1	Back cover	Ryggpåse	6
6	43 16 956		80)	1	Arm rest cover	Armstödspåse	6
8	40 51 371		80), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G24				
1	41 34 193		90), LH	1	Seat cover	Sitspåse	6
1	41 34 201		90), RH	1	Seat cover	Sitspåse	6
2	41 34 128		90)	2	Back cover	Ryggpåse	6
3	44 74 086		90)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 480		90)	2	Head restraint cover	Nackstödspåse	6
4	95 87 346		90), LH	1	Seat cover	Sitspåse	6
4	95 87 403		90), 4D	1	Seat cover	Sitspåse	6
4A	95 87 411		90), RH	1	Seat cover	Sitspåse	6
5	42 91 555		90), LH	1	Back cover	Ryggpåse	6
5	95 87 478		90), 4D	1	Back cover	Ryggpåse	6
5A	42 91 548		90), RH	1	Back cover	Ryggpåse	6
6	95 87 601		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G44				
1	43 16 394		90), LH	1	Seat cover	Sitspåse	6
1	43 16 428		90), RH	2	Seat cover	Sitspåse	6
2	43 16 402		90)	2	Back cover	Ryggpåse	6
3	44 74 045		90)	2	Head restraint cover	Nackstödspåse	6
3A	43 16 816		90)	2	Head restraint cover	Nackstödspåse	6
4	43 16 774		90), LH	1	Seat cover	Sitspåse	6
4	43 17 103		90), 4D	1	Seat cover	Sitspåse	6
4A	43 16 782		90), RH	1	Seat cover	Sitspåse	6
5	43 16 790		90), LH	1	Back cover	Ryggpåse	6
5	43 17 111		90), 4D	1	Back cover	Ryggpåse	6
5A	43 16 808		90), RH	1	Back cover	Ryggpåse	6
6	43 16 824		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G74				
1	43 16 675		90), LH	1	Seat cover	Sitspåse	6
1	43 16 709		90), RH	1	Seat cover	Sitspåse	6
2	43 16 683		90)	2	Back cover	Ryggpåse	6
3	44 74 045		90)	2	Head restraint cover	Nackstödspåse	6
3A	43 16 816		90)	2	Head restraint cover	Nackstödspåse	6
4	43 16 774		90), LH	1	Seat cover	Sitspåse	6
4	43 17 103		90), 4D	1	Seat cover	Sitspåse	6
4A	43 16 782		90), RH	1	Seat cover	Sitspåse	6
5	43 16 790		90), LH	1	Back cover	Ryggpåse	6
5	43 17 111		90), 4D	1	Back cover	Ryggpåse	6
5A	43 16 808		90), RH	1	Back cover	Ryggpåse	6
6	43 16 824		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6

80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6-C22

Covers 1993
Horizon pattern

Klädsel

Klädselpåsar 1993
Horisontmönster

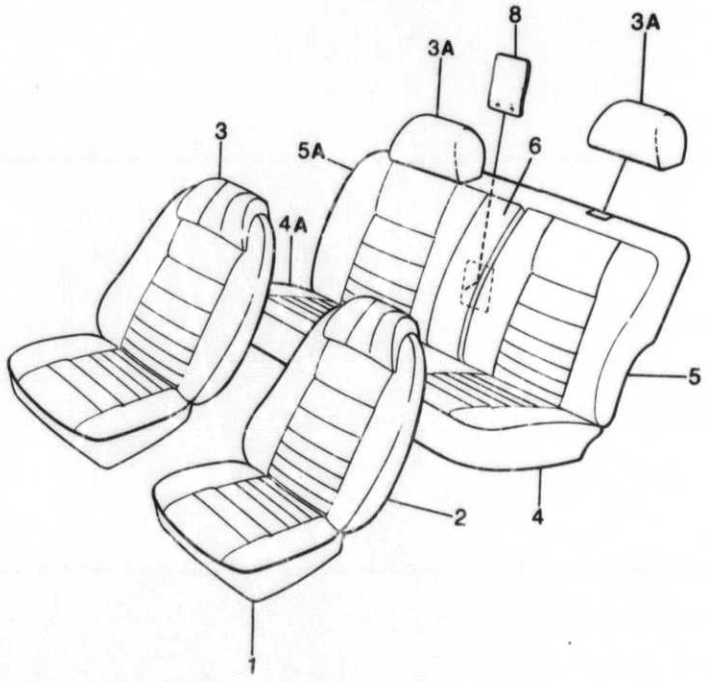

F4577 CAC90

1313	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1930				TRIM COLOUR H24				
1940	1	41 27 874		100), LH	1	Seat cover	Sitspåse	6
1950	1	41 27 882		100), RH	1	Seat cover	Sitspåse	6
1960	2	41 27 890		100)	2	Back cover	Ryggpåse	6
1970	3	44 74 094		100)	2	Head restraint cover	Nackstödspåse	6
1980	3A	41 28 179		100)	2	Head restraint cover	Nackstödspåse	6
1990	4	41 28 096		100), LH	1	Seat cover	Sitspåse	6
2000	4	41 28 146		100), 4D	1	Seat cover	Sitspåse	6
2010	4A	41 28 104		100), RH	1	Seat cover	Sitspåse	6
2020	5	42 91 571		100), LH	1	Back cover	Ryggpåse	6
2030	5	41 28 153		100), 4D	1	Back cover	Ryggpåse	6
2040	5A	42 91 563		100), RH	1	Back cover	Ryggpåse	6
2050	6	41 28 138		100)	1	Arm rest cover	Armstödspåse	6
2060	8	40 47 932		100), 4D	1	Hatch	Lucka	6
2070				TRIM COLOUR H44				
2080	1	43 16 436		100), LH	1	Seat cover	Sitspåse	6
2090	1	43 16 469		100), RH	1	Seat cover	Sitspåse	6
2100	2	43 16 444		100)	2	Back cover	Ryggpåse	6
2110	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	
2120	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
2130	4	43 16 972		100), LH	1	Seat cover	Sitspåse	6
2140	4	43 16 865		100), 4D	1	Seat cover	Sitspåse	6
2150	4A	43 16 980		100), RH	1	Seat cover	Sitspåse	6
2160	5	43 16 998		100), LH	1	Back cover	Ryggpåse	6
2170	5	43 16 873		100), 4D	1	Back cover	Ryggpåse	6
2180	5A	43 17 004		100), RH	1	Back cover	Ryggpåse	6
2190	6	43 16 881		100)	1	Arm rest cover	Armstödspåse	6
2200	8	40 47 932		100), 4D	1	Hatch	Lucka	6
2210				TRIM COLOUR H74				
2220	1	43 16 519		100), LH	1	Seat cover	Sitspåse	6
2230	1	43 16 543		100), RH	1	Seat cover	Sitspåse	6
2290	2	43 16 527		100)	2	Back cover	Ryggpåse	6
2310	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	
2320	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
2330	4	43 16 972		100), LH	1	Seat cover	Sitspåse	6
2340	4	43 16 865		100), 4D	1	Seat cover	Sitspåse	6
2350	4A	43 16 980		100), RH	1	Seat cover	Sitspåse	6
2360	5	43 16 998		100), LH	1	Back cover	Ryggpåse	6
2370	5	43 16 873		100), 4D	1	Back cover	Ryggpåse	6
2380	5A	43 17 004		100), RH	1	Back cover	Ryggpåse	6
2390	6	43 16 881		100)	1	Arm rest cover	Armstödspåse	6
2400	8	40 47 932		100), 4D	1	Hatch	Lucka	6
2401				TRIM COLOUR K64				
2402	1	43 09 555		110), LH	1	Seat cover	Sitspåse	6
2403	1	43 09 563		110), RH	1	Seat cover	Sitspåse	6
2404	2	43 09 571		110)	2	Back cover	Ryggpåse	6
2405	3	44 74 185		110)	2	Head restraint cover	Nackstödspåse	
2406	3A	43 10 264		110)	2	Head restraint cover	Nackstödspåse	6
2407	4	43 10 157		110), LH	1	Seat cover	Sitspåse	6
2408	4	43 14 829		110), 4D	1	Seat cover	Sitspåse	6
2409	4A	43 10 165		110), RH	1	Seat cover	Sitspåse	6
2410	5	43 10 249		110), LH	1	Back cover	Ryggpåse	6
2411	5	43 14 837		110), 4D	1	Back cover	Ryggpåse	6
2412	5A	43 10 256		110), RH	1	Back cover	Ryggpåse	6
2413	6	43 10 272		110)	1	Arm rest cover	Armstödspåse	6
2414	8	43 14 845		110), 4D	1	Hatch	Lucka	6

100. Light grey Ljus grå
110. Black Svart


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-C24

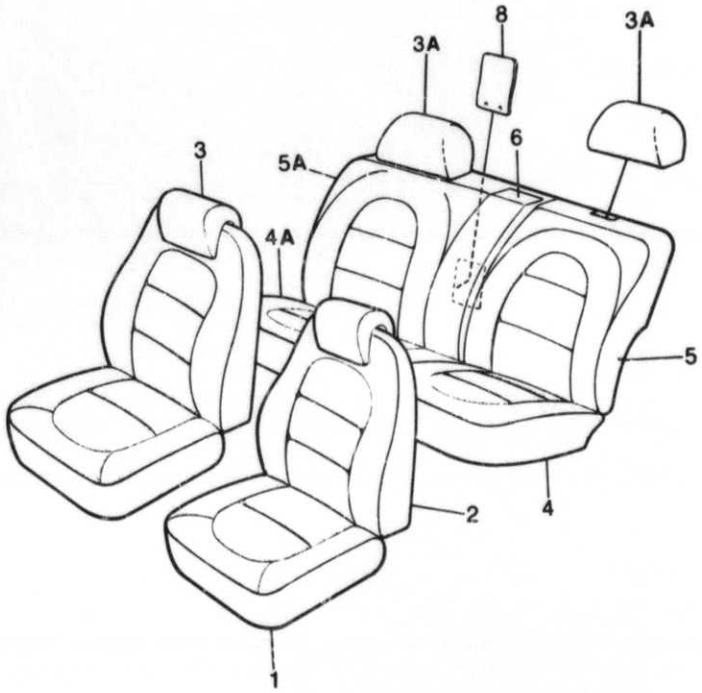

F4578 CAC90

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J33				
0020	1	42 88 692		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 684		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 718		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 136		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	42 92 157		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	42 92 215		210), LH	1	Seat cover	Sitspåse	6
0080	4	42 92 710		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	42 92 207		210), RH	1	Seat cover	Sitspåse	6
0100	5	42 92 298		210), LH	1	Back cover	Ryggpåse	6
0110	5	42 92 744		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	42 92 280		210), RH	1	Back cover	Ryggpåse	6
0130	6	42 92 173		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR J93 (J53)				
0160	1	43 15 925		210), LH	1	Seat cover	Sitspåse	6
0170	1	43 15 958		210), RH	1	Seat cover	Sitspåse	6
0180	2	43 15 933		210)	2	Back cover	Ryggpåse	6
0190	3	44 74 011		210)	2	Head restraint cover	Nackstödspåse	1
0200	3A	*43 16 006*		210) NLS - USE 4292157	2	Head restraint cover	Nackstödspåse	6
0210	4	43 16 022		210), 4D	1	Seat cover	Sitspåse	6
0220	5	43 16 030		210), 4D	1	Back cover	Ryggpåse	6
0230	6	43 16 014		210)	1	Arm rest cover	Armstödspåse	6
0240	8	43 16 048		210), 4D	1	Hatch	Lucka	6
0250				TRIM COLOUR E33				
0260	1	41 35 851		70), LH	1	Seat cover	Sitspåse	6
0270	1	41 35 869		70), RH	1	Seat cover	Sitspåse	6
0280	2	41 35 794		70)	2	Back cover	Ryggpåse	6
0290	3	44 74 144		70)	2	Head restraint cover	Nackstödspåse	6
0300	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0310	4	98 90 690		70), LH	1	Seat cover	Sitspåse	6
0320	4	95 76 091		70), 4D	1	Seat cover	Sitspåse	6
0330	4A	98 90 682		70), RH	1	Seat cover	Sitspåse	6
0340	5	41 39 937		70), LH	1	Back cover	Ryggpåse	6
0350	5	95 76 158		70), 4D	1	Back cover	Ryggpåse	6
0360	5A	41 39 929		70), RH	1	Back cover	Ryggpåse	6
0370	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0380	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0390				TRIM COLOUR E53				
0400	1	41 35 943		70), LH	1	Seat cover	Sitspåse	6
0410	1	41 35 950		70), RH	1	Seat cover	Sitspåse	6
0420	2	41 35 935		70)	2	Back cover	Ryggpåse	6
0430	3	44 74 144		70)	2	Head restraint cover	Nackstödspåse	6
0440	3A	40 50 514		70)	2	Head restraint cover	Nackstödspåse	6
0450	4	40 49 524		70), LH	1	Seat cover	Sitspåse	6
0460	4	41 40 802		70), 4D	1	Seat cover	Sitspåse	6
0470	4A	40 49 516		70), RH	1	Seat cover	Sitspåse	6
0480	5	41 39 952		70), LH	1	Back cover	Ryggpåse	6
0490	5	41 40 810		70), 4D	1	Back cover	Ryggpåse	6
0500	5A	41 39 945		70), RH	1	Back cover	Ryggpåse	6
0510	6	98 90 724		70)	1	Arm rest cover	Armstödspåse	6
0520	8	40 51 363		70), 4D	1	Hatch	Lucka	6
0525								


70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

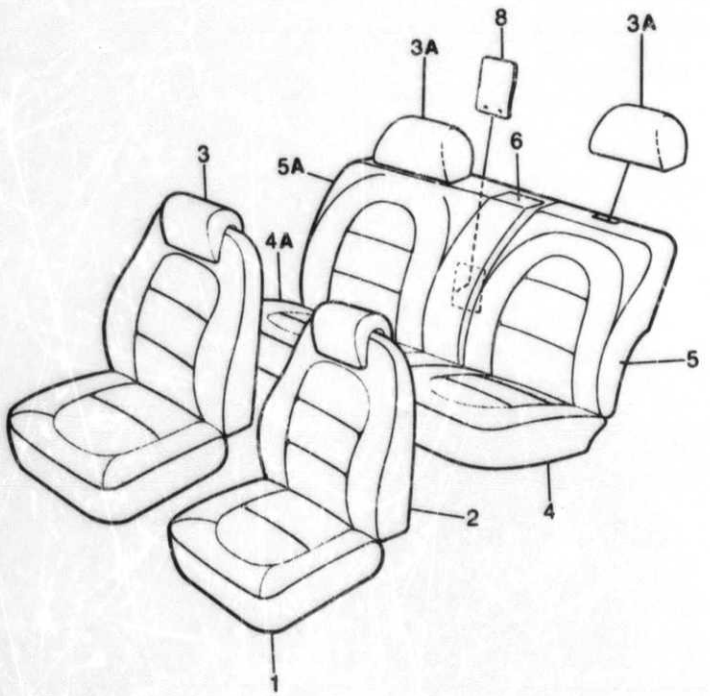

F4578 CAC90

Upholstery

6-D02

Covers 1993
Contour design

Klädsel

Klädselpåsar 1993
Contour design

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530				TRIM COLOUR E93				
0540	1	44 16 228		70), LH	1	Seat cover	Sitspåse	6
0550	1	44 16 251		70), RH	1	Seat cover	Sitspåse	6
0560	2	44 16 236		70)	2	Back cover	Ryggpåse	6
0570	3	*44 74 003*		70)	2	Head restraint cover	Nackstödspåse	
0580	3A	*44 16 319*		70) NLS - USE 4050514	2	Head restraint cover	Nackstödspåse	6
0590	4	44 16 277		70), 4D	1	Seat cover	Sitspåse	6
0600	5	44 16 285		70), 4D	1	Back cover	Ryggpåse	6
0610	6	44 16 293		70)	1	Arm rest cover	Armstödspåse	6
0620	8	44 16 301		70), 4D	1	Hatch	Lucka	6
0630				TRIM COLOUR F33				
0640	1	41 35 893		80), LH	1	Seat cover	Sitspåse	6
0650	1	41 35 901		80), RH	1	Seat cover	Sitspåse	6
0660	2	41 35 810		80)	2	Back cover	Ryggpåse	6
0670	3	44 74 169		80)	2	Head restraint cover	Nackstödspåse	6
0680	3A	40 50 548		80)	2	Head restraint cover	Nackstödspåse	6
0690	4	40 38 857		80), LH	1	Seat cover	Sitspåse	6
0700	4	40 39 368		80), 4D	1	Seat cover	Sitspåse	6
0710	4A	40 38 840		80), RH	1	Seat cover	Sitspåse	6
0720	5	42 91 274		80), LH	1	Back cover	Ryggpåse	6
0730	5	40 39 376		80), 4D	1	Back cover	Ryggpåse	6
0740	5A	42 91 266		80), RH	1	Back cover	Ryggpåse	6
0750	6	40 38 861		80)	1	Arm rest cover	Armstödspåse	6
0760	8	40 51 371		80), 4D	1	Hatch	Lucka	6
0770				TRIM COLOUR G33				
0780	1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
0790	1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
0800	2	41 35 802		90)	2	Back cover	Ryggpåse	6
0810	3	44 74 177		90)	2	Head restraint cover	Nackstödspåse	6
0820	3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
0830	4	95 90 050		90), LH	1	Seat cover	Sitspåse	6
0840	4	95 89 664		90), 4D	1	Seat cover	Sitspåse	6
0850	4A	95 90 043		90), RH	1	Seat cover	Sitspåse	6
0860	5	42 91 258		90), LH	1	Back cover	Ryggpåse	6
0870	5	95 89 672		90), 4D	1	Back cover	Ryggpåse	6
0880	5A	42 91 241		90), RH	1	Back cover	Ryggpåse	6
0890	6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
0900	8	40 51 389		90), 4D	1	Hatch	Lucka	6
0910				TRIM COLOUR H33				
0920	1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
0930	1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
0940	2	41 35 828		100)	2	Back cover	Ryggpåse	6
0950	3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
0960	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0970	4	40 47 429		100), LH	1	Seat cover	Sitspåse	6
0980	4	40 47 916		100), 4D	1	Seat cover	Sitspåse	6
0990	4A	40 47 411		100), RH	1	Seat cover	Sitspåse	6
1000	5	42 91 290		100), LH	1	Back cover	Ryggpåse	6
1010	5	40 47 924		100), 4D	1	Back cover	Ryggpåse	6
1020	5A	42 91 282		100), RH	1	Back cover	Ryggpåse	6
1030	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
1040	8	40 47 932		100), 4D	1	Hatch	Lucka	6
1050								

70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6--D04

Covers 1993
Contour design

Klädsel

Klädselpåsar 1993
Contour design

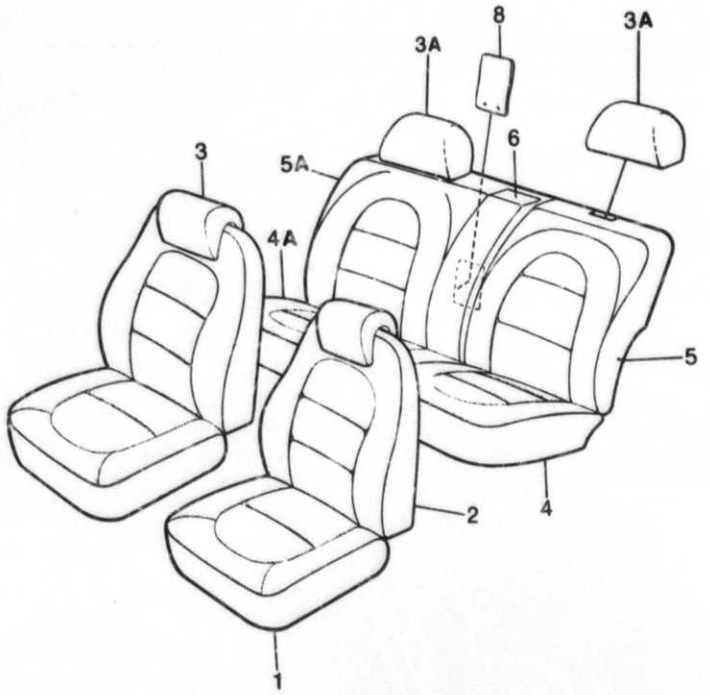

F4578 CAC90

1315	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1055				TRIM COLOUR H53				
1060	1	42 59 131		100), LH	1	Seat cover	Sitspåse	6
1070	1	42 59 149		100), RH	1	Seat cover	Sitspåse	6
1080	2	42 59 156		100)	2	Back cover	Ryggpåse	6
1090	3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
1100	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
1110	4	42 58 299		100), LH	1	Seat cover	Sitspåse	6
1120	4	42 58 216		100), 4D	1	Seat cover	Sitspåse	6
1130	4A	42 58 281		100), RH	1	Seat cover	Sitspåse	6
1140	5	42 91 415		100), LH	1	Back cover	Ryggpåse	6
1150	5	42 58 240		100), 4D	1	Back cover	Ryggpåse	6
1160	5A	42 91 407		100), RH	1	Back cover	Ryggpåse	6
1170	6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
1180	8	40 47 932		100), 4D	1	Hatch	Lucka	6


100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-F02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

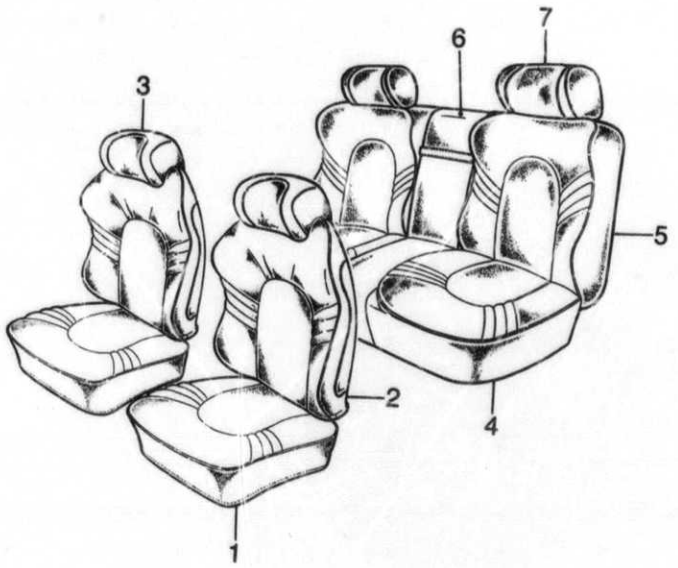

F4647 CAC90

Upholstery

6-D06

Covers 1993
Sports design

Klädsel

Klädselpåsar 1993
Sports design

1316	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR K35				
0020	1	43 14 555		110), LH	1	Seat cover	Sitspåse	6
0030	1	43 14 589		110), RH	1	Seat cover	Sitspåse	6
0040	2	43 14 563		110)	2	Back cover	Ryggpåse	6
0050	3	43 14 571		110)	2	Head restraint cover	Nackstödspåse	6
0060	4	43 15 529		110), LH	1	Seat cover	Sitspåse	6
0070	4	43 15 511		110), RH	1	Seat cover	Sitspåse	6
0080	5	43 15 628		110), LH	1	Back cover	Ryggpåse	6
0090	5	43 15 594		110), RH	1	Back cover	Ryggpåse	6
0100	6	43 15 610		110)	1	Arm rest cover	Armstödspåse	6
0110	7	43 15 602		110)	2	Head restraint cover	Nackstödspåse	6

110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-D08

Door trim 1990
Front door

Dörrklädsel 1990
Framdörr

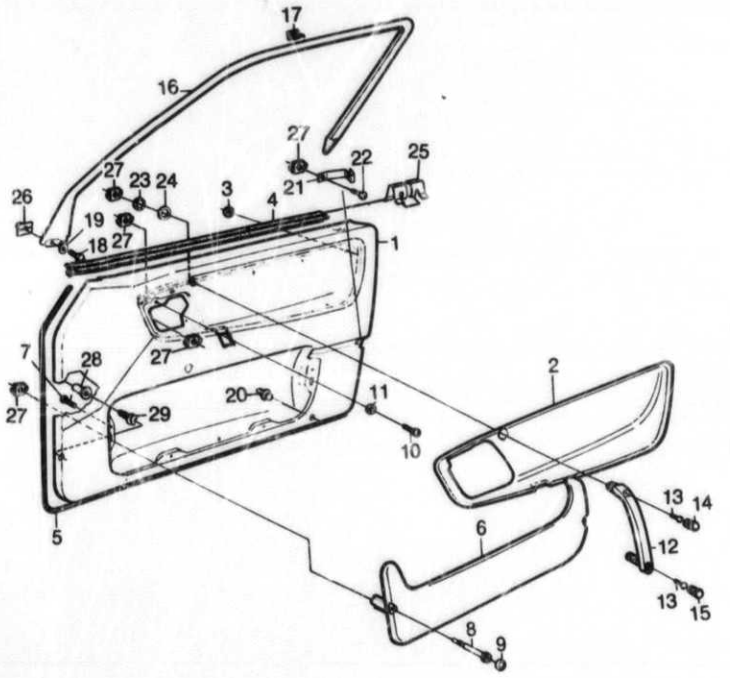

F2946 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR C24,C44,C33				
1	40 58 798		60), LH	1	Door trim	Dörrklädsel	6
1	40 59 127		60), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	40 58 806		60), RH	1	Door trim	Dörrklädsel	6
1	40 59 200		60), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
1	40 58 822		60,17), LH	1	Door trim	Dörrklädsel	6
1	40 59 275		60,17), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	*40 58 814*		60,17), RH NLS - USE 4058806	1	Door trim	Dörrklädsel	6
1	40 59 317		60,17), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
2	40 58 954		60), LH	1	. Arm rest	. Armstöd	6
2	40 58 962		60), RH	1	. Arm rest	. Armstöd	5
3	96 95 081			7	. Washer	. Bricka	5
4	96 60 986		LH	1	. Sealing strip	. Tätningslist	6
4	96 60 838		RH	1	. Sealing strip	. Tätningslist	6
5	95 72 363		60)	2	. Strip	. List	6
6	96 77 501		60), LH	1	Pocket	Ficka	6
6	96 77 493		60), RH	1	Pocket	Ficka	6
			TRIM COLOUR E24, E44, E33, E53, H33				
1	40 58 830		70), LH	1	Door trim	Dörrklädsel	6
1	40 59 143		70), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	40 58 848		70), RH	1	Door trim	Dörrklädsel	6
1	40 59 226		70), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
1	*40 58 863*		70,17), LH NLS - USE 4058830	1	Door trim	Dörrklädsel	6
1	40 59 283		70,17), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	*40 58 855*		70,17), RH NLS - USE 4058848	1	Door trim	Dörrklädsel	6
1	40 59 325		70,17), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
2	40 58 970		70), LH	1	. Arm rest	. Armstöd	6
2	40 58 988		70), RH	1	. Arm rest	. Armstöd	6
3	96 95 081			7	. Washer	. Bricka	5
4	96 60 986		LH	1	. Sealing strip	. Tätningslist	6
4	96 60 838		RH	1	. Sealing strip	. Tätningslist	6
5	98 95 699		70)	2	. Strip	. List	6
6	96 58 139		70), LH	1	Pocket	Ficka	6
6	96 58 147		70), RH	1	Pocket	Ficka	6
			TRIM COLOUR F24,F44,F33				
1	40 58 871		80), LH	1	Door trim	Dörrklädsel	6
1	40 59 168		80), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	40 58 889		80), RH	1	Door trim	Dörrklädsel	6
1	40 59 242		80), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
1	*40 58 905*		80,17), LH NLS - USE 4058871	1	Door trim	Dörrklädsel	6
1	40 59 291		80,17), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
1	*40 58 897*		80,17), RH NLS - USE 4058889	1	Door trim	Dörrklädsel	6
1	40 59 333		80,17), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
2	40 58 996		80), LH	1	. Arm rest	. Armstöd	6
2	40 59 002		80), RH	1	. Arm rest	. Armstöd	6
3	96 95 081			7	. Washer	. Bricka	5
4	96 60 986		LH	1	. Sealing strip	. Tätningslist	6
4	96 60 838		RH	1	. Sealing strip	. Tätningslist	6
5	96 77 766		80)	2	. Strip	. List	6
6	96 77 865		80), LH	1	Pocket	Ficka	6
6	96 77 857		80), RH	1	Pocket	Ficka	6

17. For cars with manual window regulators — För bilar med manuella fönsterhissar
60. Red — Röd
70. Grey — Grå
80. Blue — Blå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-D10

Door trim 1990
Front door

Dörrklädsel 1990
Framdörr

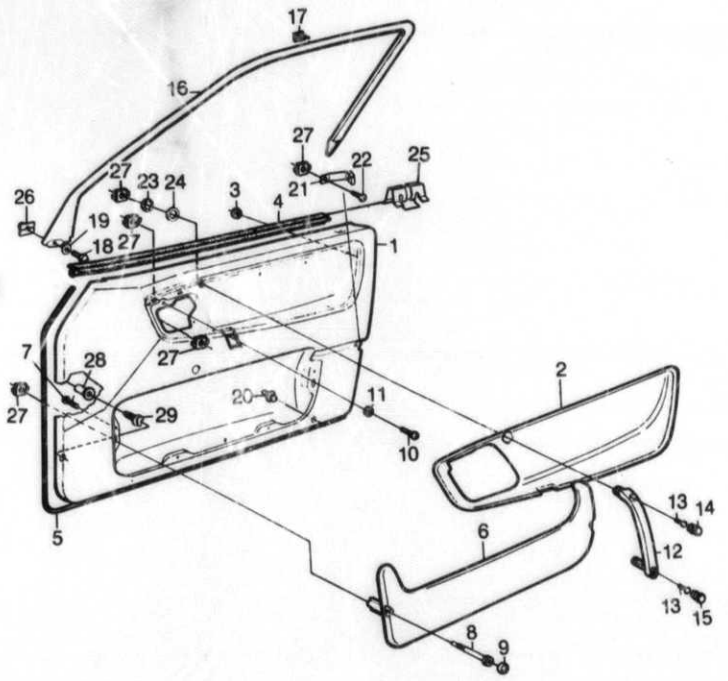

F2946 CAC90

1329	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560				TRIM COLOUR G24,G44,G33				
0565	1	40 58 913		90), LH	1	Door trim	Dörrklädsel	6
0570	1	40 59 184		90), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0580	1	40 58 921		90), RH	1	Door trim	Dörrklädsel	6
0590	1	40 59 267		90), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0600	1	40 58 947		90,17), LH	1	Door trim	Dörrklädsel	6
0610	1	40 59 309		90,17), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0620	1	*40 58 939*		90,17), RH NLS - USE 4058921	1	Door trim	Dörrklädsel	6
0630	1	40 59 341		90,17), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0640	2	40 59 010		90), LH	1	.Arm rest	.Armstöd	6
0650	2	40 59 028		90), RH	1	.Arm rest	.Armstöd	6
0660	3	96 95 081			7	.Washer	.Bricka	5
0670	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0680	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0690	5	95 82 099		90)	2	.Strip	.List	6
0700	6	95 82 065		90), LH	1	Pocket	Ficka	6
0710	6	95 82 164		90), RH	1	Pocket	Ficka	6
0720								
0730	7	79 71 393			8	Screw	Skruv	5
0740	8	97 80 156			4	Screw	Skruv	5
0750	9	97 77 160		60)	4	Cover	Täcklock	5
0760	9	97 99 875		70)	4	Cover	Täcklock	5
0770	9	96 75 612		80)	4	Cover	Täcklock	5
0780	9	95 82 313		90)	4	Cover	Täcklock	5
0790	10	73 99 264			2	Screw	Skruv	5
0800	11	96 56 398			2	Washer	Bricka	5
0810								
0820	12	97 76 410		60), LH	1	Handle	Handtag	5
0830	12	97 76 402		60), RH	1	Handle	Handtag	5
0840	12	98 90 112		70), LH	1	Handle	Handtag	5
0850	12	98 90 104		70), RH	1	Handle	Handtag	5
0860	12	96 75 588		80), LH	1	Handle	Handtag	5
0870	12	96 75 570		80), RH	1	Handle	Handtag	5
0880	12	95 82 057		90), LH	1	Handle	Handtag	5
0890	12	95 82 156		90), RH	1	Handle	Handtag	5
0900								
0910	13	73 99 264			4	Screw	Skruv	5
0920	14	97 76 477		60)	2	Cover washer	Täckbricka	5
0930	14	98 90 146		70)	2	Cover washer	Täckbricka	5
0940	14	96 75 596		80)	2	Cover washer	Täckbricka	5
0950	14	95 82 297		90)	2	Cover washer	Täckbricka	5
0960								
0970	15	97 76 519		60)	2	Cover washer	Täckbricka	5
0980	15	98 90 153		70)	2	Cover washer	Täckbricka	5
0990	15	96 75 604		80)	2	Cover washer	Täckbricka	5
1000	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1010								
1020	16	*96 94 688*		LH NLS - USE 4268223	1	Upholstery	Klädsel	6
1030	16	*96 94 670*		RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1040	17	96 60 143			24	Clamp	Klammer	5
1050	18	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
1060	19	96 60 077			2	Washer	Bricka	5
1070	20	97 96 939			2	Clamp	Klämma	6
1080	21	97 96 616			2	Clamp	Klämma	6
1090	22	73 99 264			4	Screw	Skruv	5
1100	23	97 97 200			2	Washer	Bricka	5

17. For cars with manual window regulators För bilar med manuella fönsterhissar
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6-D12

Door trim 1990
Front door

Klädsel

Dörrklädsel 1990
Framdörr

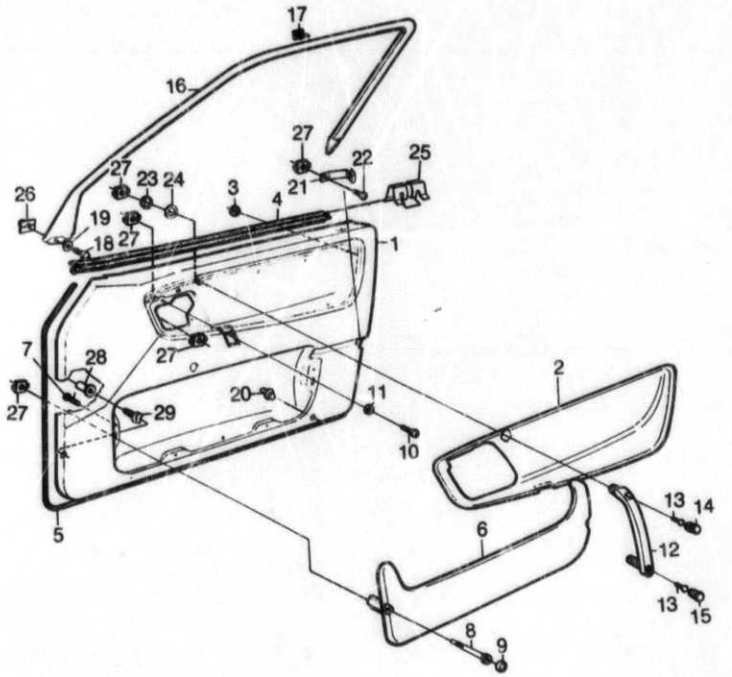

F2946 CAC90


1323	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1110	24	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1120	25	*40 50 811*		NLS - USE 4270047	6	Clamp	Klämma	3
1130	26	96 71 033			2	Clamp	Klämma	6
1140	27	79 74 231			X	Cage nut	Korgmutter	5
1150	28	95 45 906			2	Sleeve	Hylsa	5
1160	29	95 45 898			2	Upholstery clip	Klädselfäste	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

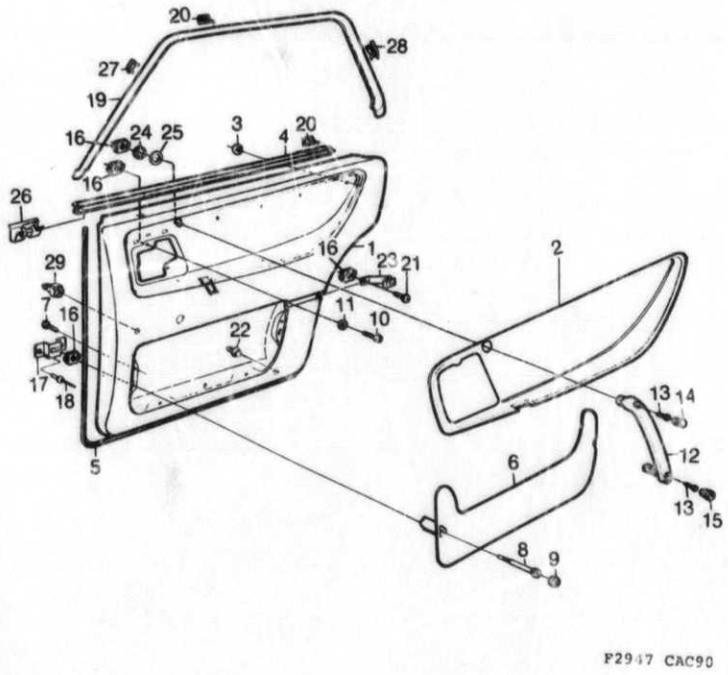

F2947 CAC90

Upholstery
6-D14
Door trim 1990
Rear door

Klädsel
Dörrklädsel 1990
Bakdörr

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR C24,C44,C33				
0025	1	40 59 432		60), LH	1	Door trim	Dörrklädsel	6
0030	1	40 59 440		60), RH	1	Door trim	Dörrklädsel	6
0040	1	*40 59 465*		60,17), LH NLS - USE 4059432	1	Door trim	Dörrklädsel	6
0050	1	*40 59 457*		60,17), RH NLS - USE 4059440	1	Door trim	Dörrklädsel	6
0060	1	41 25 480		60,18), LH	1	Door trim	Dörrklädsel	6
0070	1	41 25 498		60,18), RH	1	Door trim	Dörrklädsel	6
0080	2	40 59 598		60), LH	1	.Arm rest	.Armstöd	6
0090	2	40 59 606		60), RH	1	.Arm rest	.Armstöd	6
0100	3	96 95 081			8	.Washer	.Bricka	5
0110	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0120	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0130	5	95 72 389		60)	2	.Strip	.List	6
0140	6	96 77 642		60), LH	1	Pocket	Ficka	6
0150	6	96 77 634		60), RH	1	Pocket	Ficka	6
0170				TRIM COLOUR E24, E44, E33, E53, H33				
0180								
0185	1	40 59 473		70), LH	1	Door trim	Dörrklädsel	6
0190	1	40 59 481		70), RH	1	Door trim	Dörrklädsel	6
0200	1	*40 59 507*		70,17), LH NLS - USE 4059473	1	Door trim	Dörrklädsel	6
0210	1	*40 59 499*		70,17), RH NLS - USE 4059481	1	Door trim	Dörrklädsel	6
0220	1	41 25 506		70,18), LH	1	Door trim	Dörrklädsel	6
0230	1	41 25 514		70,18), RH	1	Door trim	Dörrklädsel	6
0240	2	40 59 614		70), LH	1	.Arm rest	.Armstöd	6
0250	2	40 59 622		70), RH	1	.Arm rest	.Armstöd	6
0260	3	96 95 081			8	.Washer	.Bricka	5
0270	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0280	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0290	5	98 95 970		70)	2	.Strip	.List	6
0300	6	96 58 378		70), LH	1	Pocket	Ficka	6
0310	6	96 58 360		70), RH	1	Pocket	Ficka	6
0340				TRIM COLOUR F24,F44,F33				
0345	1	40 59 515		80), LH	1	Door trim	Dörrklädsel	6
0350	1	40 59 523		80), RH	1	Door trim	Dörrklädsel	6
0360	1	*40 59 549*		80,17), LH NLS - USE 4059515	1	Door trim	Dörrklädsel	6
0370	1	40 59 531		80,17), RH	1	Door trim	Dörrklädsel	6
0380	1	41 25 522		80,18), LH	1	Door trim	Dörrklädsel	6
0390	1	41 25 530		80,18), RH	1	Door trim	Dörrklädsel	6
0400	2	40 59 630		80), LH	1	.Arm rest	.Armstöd	6
0410	2	40 59 648		80), RH	1	.Arm rest	.Armstöd	6
0420	3	96 95 081			8	.Washer	.Bricka	5
0430	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0440	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0450	5	96 78 020		80)	2	.Strip	.List	3
0460	6	96 78 087		80), LH	1	Pocket	Ficka	6
0470	6	96 78 079		80), RH	1	Pocket	Ficka	6
0480								

17. For cars with manual window regulators För bilar med manuella fönsterhissar
18. For cars with door fan För bilar med dörrfläkt
60. Red Röd
70. Grey Grå
80. Blue Blå


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-D16

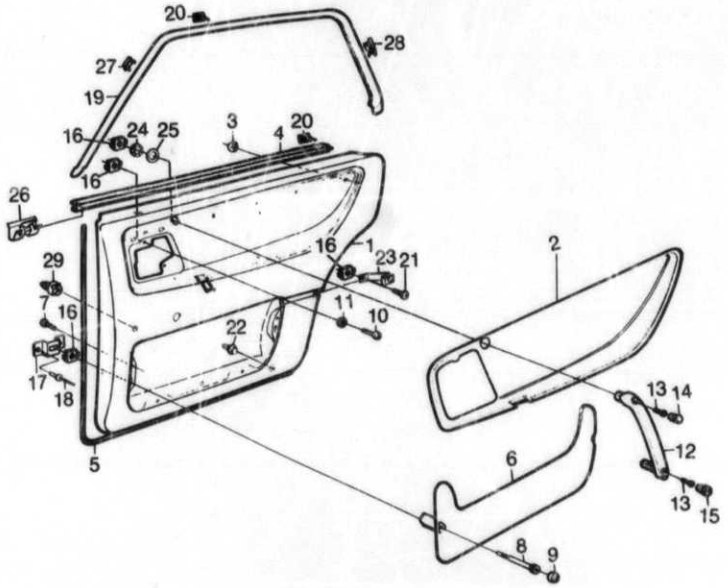

F2947 CAC90

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500				TRIM COLOUR G24,G44,G33				
0505	1	40 59 556		90), LH	1	Door trim	Dörrklädsel	6
0510	1	40 59 564		90), RH	1	Door trim	Dörrklädsel	6
0520	1	*40 59 580*		90,17), LH NLS - USE 4059556	1	Door trim	Dörrklädsel	6
0530	1	40 59 572		90,17), RH	1	Door trim	Dörrklädsel	6
0540	1	41 25 548		90,18), LH	1	Door trim	Dörrklädsel	6
0550	1	41 25 555		90,18), RH	1	Door trim	Dörrklädsel	6
0560	2	40 59 655		90), LH	1	.Arm rest	.Armstöd	6
0570	2	40 59 663		90), RH	1	.Arm rest	.Armstöd	6
0580	3	96 95 081			8	.Washer	.Bricka	5
0590	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0600	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0610	5	95 82 396		90)	2	.Strip	.List	3
0620	6	95 82 362		90), LH	1	Pocket	Ficka	6
0630	6	95 82 461		90), RH	1	Pocket	Ficka	6
0640								
0650	7	79 71 393			8	Screw	Skruv	5
0660	8	97 80 156			4	Screw	Skruv	5
0670	9	97 77 160		60)	4	Cover	Täcklock	5
0680	9	97 99 875		70)	4	Cover	Täcklock	5
0690	9	96 75 612		80)	4	Cover	Täcklock	5
0700	9	95 82 313		90)	4	Cover	Täcklock	5
0710	10	73 99 264			2	Screw	Skruv	5
0720	11	96 56 398			2	Washer	Bricka	5
0730								
0740	12	97 79 174		60), LH	1	Handle	Handtag	5
0750	12	97 79 166		60), RH	1	Handle	Handtag	5
0760	12	98 95 871		70), LH	1	Handle	Handtag	5
0770	12	98 95 863		70), RH	1	Handle	Handtag	5
0780	12	96 75 638		80), LH	1	Handle	Handtag	5
0790	12	96 75 620		80), RH	1	Handle	Handtag	5
0800	12	95 82 354		90), LH	1	Handle	Handtag	5
0810	12	95 82 453		90), RH	1	Handle	Handtag	5
0820								
0830	13	73 99 264			4	Screw	Skruv	5
0840	14	97 76 477		60)	2	Cover washer	Täckbricka	5
0850	14	98 90 146		70)	2	Cover washer	Täckbricka	5
0860	14	96 75 596		80)	2	Cover washer	Täckbricka	5
0870	14	95 82 297		90)	2	Cover washer	Täckbricka	5
0880								
0890	15	97 76 519		60)	2	Cover washer	Täckbricka	5
0900	15	98 90 153		70)	2	Cover washer	Täckbricka	5
0910	15	96 75 604		80)	2	Cover washer	Täckbricka	5
0920	15	95 82 305		90)	2	Cover washer	Täckbricka	5
0930								
0940	16	79 74 231			20	Cage nut	Korgmutter	5
0950	17	97 79 844			2	Bracket	Hållare	6
0960	18	79 61 642			4	Rivet	Nit	5
0970	19	*96 94 746*		LH NLS - USE 4268249	1	Upholstery	Klädsel	6
0980	19	96 94 738		RH	1	Upholstery	Klädsel	6
0990	20	96 60 143			5	Clamp	Klammer	5
1000	21	80 59 396			2	Screw	Skruv	5
1010	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1020	23	96 60 820			4	Clamp	Klämma	6
1030	24	97 97 200			2	Washer	Bricka	5
1040	25	*96 71 389*		NLS - USE 9891291	2	Washer	Bricka	5

17. For cars with manual window regulators För bilar med manuella fönsterhissar
18. For cars with door fan För bilar med dörrfläkt
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX


Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery
Klädsel

6-D18

Door trim 1990
Rear door

Dörrklädsel 1990
Bakdörr

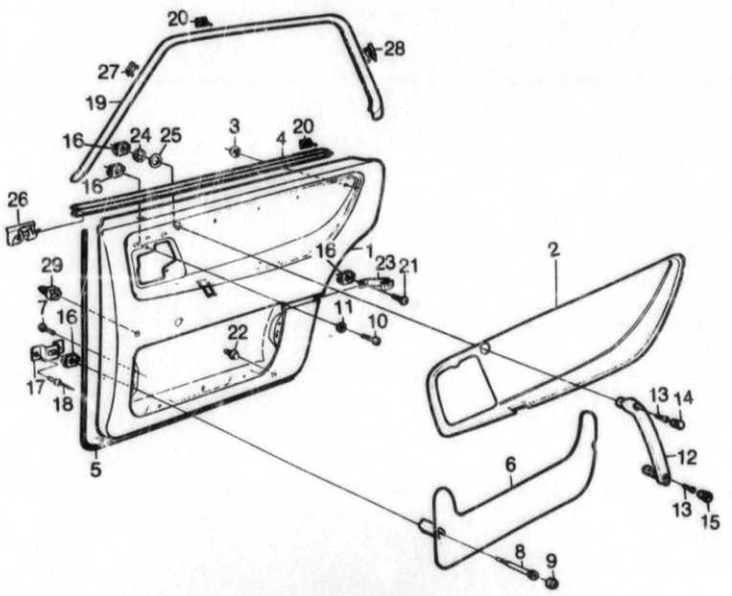

F2947 CAC90

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1050	26	*40 50 811*		NLS - USE 4270047	6	Clamp	Klämma	3
1060	27	96 60 150			6	Clamp	Klammer	5
1070	28	96 60 168			6	Clamp	Klammer	5
1080	29	96 78 996		18)	2	Clamp	Klämma	5

18. For cars with door fan För bilar med dörrfläkt

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-D20

Upholstery
Door trim 1991
Front door

Klädsel
Dörrklädsel 1991
Framdörr

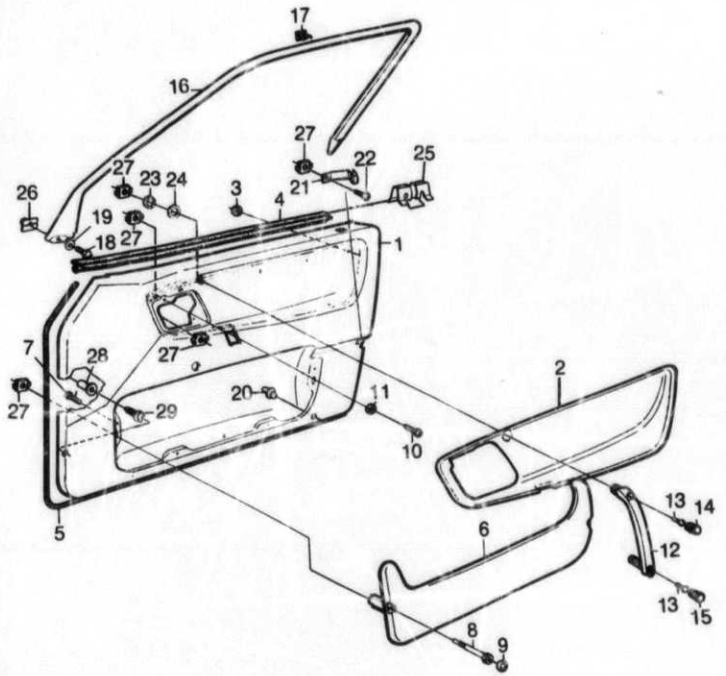

F2948 CAC90

1332	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0020				TRIM COLOUR C24,C44,C33				
0025	1	40 58 798		60), LH	1	Door trim	Dörrklädsel	6
0030	1	40 59 127		60), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0040	1	40 58 806		60), RH	1	Door trim	Dörrklädsel	6
0050	1	40 59 200		60), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0100	2	40 58 954		60), LH	1	.Arm rest	.Armstöd	6
0110	2	40 58 962		60), RH	1	.Arm rest	.Armstöd	6
0120	3	96 95 081			7	.Washer	.Bricka	5
0130	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0140	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0150	5	95 72 363		60)	2	.Strip	.List	6
0160	6	96 77 501		60), LH	1	Pocket	Ficka	6
0170	6	96 77 493		60), RH	1	Pocket	Ficka	6
0190				TRIM COLOUR E24, E44, E33, E53				
0200								
0205	1	40 58 830		70), LH	1	Door trim	Dörrklädsel	6
0210	1	40 59 143		70), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0220	1	40 58 848		70), RH	1	Door trim	Dörrklädsel	6
0230	1	40 59 226		70), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0280	2	40 58 970		70), LH	1	.Arm rest	.Armstöd	6
0290	2	40 58 988		70), RH	1	.Arm rest	.Armstöd	6
0300	3	96 95 081			7	.Washer	.Bricka	5
0310	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0320	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0330	5	98 95 699		70)	2	.Strip	.List	6
0340	6	96 58 139		70), LH	1	Pocket	Ficka	6
0350	6	96 58 147		70), RH	1	Pocket	Ficka	6
0380				TRIM COLOUR F24,F44,F33				
0385	1	40 58 871		80), LH	1	Door trim	Dörrklädsel	6
0390	1	40 59 168		80), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0400	1	40 58 889		80), RH	1	Door trim	Dörrklädsel	6
0410	1	40 59 242		80), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0460	2	40 58 996		80), LH	1	.Arm rest	.Armstöd	6
0470	2	40 59 002		80), RH	1	.Arm rest	.Armstöd	6
0480	3	96 95 081			7	.Washer	.Bricka	5
0490	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0500	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0510	5	96 77 766		80)	2	.Strip	.List	6
0520	6	96 77 865		80), LH	1	Pocket	Ficka	6
0530	6	96 77 857		80), RH	1	Pocket	Ficka	6
0560				TRIM COLOUR G24,G44,G33				
0565	1	40 58 913		90), LH	1	Door trim	Dörrklädsel	6
0570	1	40 59 184		90), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0580	1	40 58 921		90), RH	1	Door trim	Dörrklädsel	6
0590	1	40 59 267		90), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0640	2	40 59 010		90), LH	1	.Arm rest	.Armstöd	6
0650	2	40 59 028		90), RH	1	.Arm rest	.Armstöd	6
0660	3	96 95 081			7	.Washer	.Bricka	5
0670	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0680	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0690	5	95 82 099		90)	2	.Strip	.List	6
0700	6	95 82 065		90), LH	1	Pocket	Ficka	6
0710	6	95 82 164		90), RH	1	Pocket	Ficka	6
0720								

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-D22

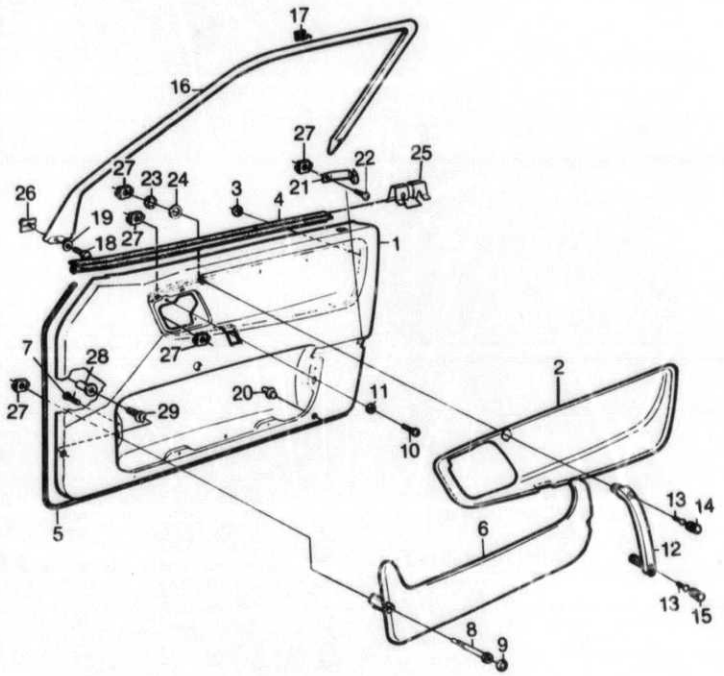

F2948 CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			TRIM COLOUR H24, H44, H33, H53				
0745 1	41 39 499		100), LH	1	Door trim	Dörrklädsel	6
0750 1	41 39 358		100), 4D, LH, LHD	1	Door trim	Dörrklädsel	6
0760 1	41 39 481		100), RH	1	Door trim	Dörrklädsel	6
0770 1	41 39 341		100), 4D, RH, RHD	1	Door trim	Dörrklädsel	6
0820 2	41 39 416		100), LH	1	•Arm rest	•Armstöd	6
0830 2	41 39 408		100), RH	1	•Arm rest	•Armstöd	6
0840 3	96 95 081			7	•Washer	•Bricka	5
0850 4	96 60 985		LH	1	•Sealing strip	•Tätningslist	6
0860 4	96 60 838		RH	1	•Sealing strip	•Tätningslist	6
0870 5	98 95 699		100)	2	•Strip	•List	6
0880 6	41 35 489		100), LH	1	Pocket	Ficka	6
0890 6	41 35 471		100), RH	1	Pocket	Ficka	6
0910 7	79 71 393			8	Screw	Skruv	5
0920 8	97 80 156			4	Screw	Skruv	5
0930 9	97 77 160		60)	4	Cover	Täcklock	5
0940 9	97 99 875		70)	4	Cover	Täcklock	5
0950 9	96 75 612		80)	4	Cover	Täcklock	5
0960 9	95 82 313		90)	4	Cover	Täcklock	5
0970 9	41 33 427		100)	4	Cover	Täcklock	5
0980 10	73 99 264			2	Screw	Skruv	5
0990 11	96 56 398			2	Washer	Bricka	5
1010 12	97 76 410		60), LH	1	Handle	Handtag	5
1020 12	97 76 402		60), RH	1	Handle	Handtag	5
1030 12	98 90 112		70), LH	1	Handle	Handtag	5
1040 12	98 90 104		70), RH	1	Handle	Handtag	5
1050 12	96 75 588		80), LH	1	Handle	Handtag	5
1060 12	96 75 570		80), RH	1	Handle	Handtag	5
1070 12	95 82 057		90), LH	1	Handle	Handtag	5
1080 12	95 82 156		90), RH	1	Handle	Handtag	5
1090 12	41 29 250		100), LH	1	Handle	Handtag	5
1100 12	41 29 268		100), RH	1	Handle	Handtag	5
1120 13	73 99 264			4	Screw	Skruv	5
1130 14	97 76 477		60)	2	Cover washer	Täckbricka	5
1140 14	98 90 146		70)	2	Cover washer	Täckbricka	5
1150 14	96 75 596		80)	2	Cover washer	Täckbricka	5
1160 14	95 82 297		90)	2	Cover washer	Täckbricka	5
1170 14	41 29 276		100)	2	Cover washer	Täckbricka	5
1190 15	97 76 519		60)	2	Cover washer	Täckbricka	5
1200 15	98 90 153		70)	2	Cover washer	Täckbricka	5
1210 15	96 75 604		80)	2	Cover washer	Täckbricka	5
1220 15	95 82 305		90)	2	Cover washer	Täckbricka	5
1230 15	41 29 284		100)	2	Cover washer	Täckbricka	5
1250 16	*96 94 688*		LH NLS - USE 4268223	1	Upholstery	Klädsel	6
1260 16	*96 94 670*		RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1270 17	96 60 143			24	Clamp	Klammer	5
1280 18	*79 72 896*		NLS - USE 7985684, 8073090	2	Screw	Skruv	5
1290 19	96 60 077			2	Washer	Bricka	5
1300 20	97 96 939			2	Clamp	Klämma	6
1310 21	97 96 616			2	Clamp	Klämma	6
1320 22	73 99 264			4	Screw	Skruv	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Upholstery

6-D24

Door trim 1991
Front door

Klädsel

Dörrklädsel 1991
Framdörr

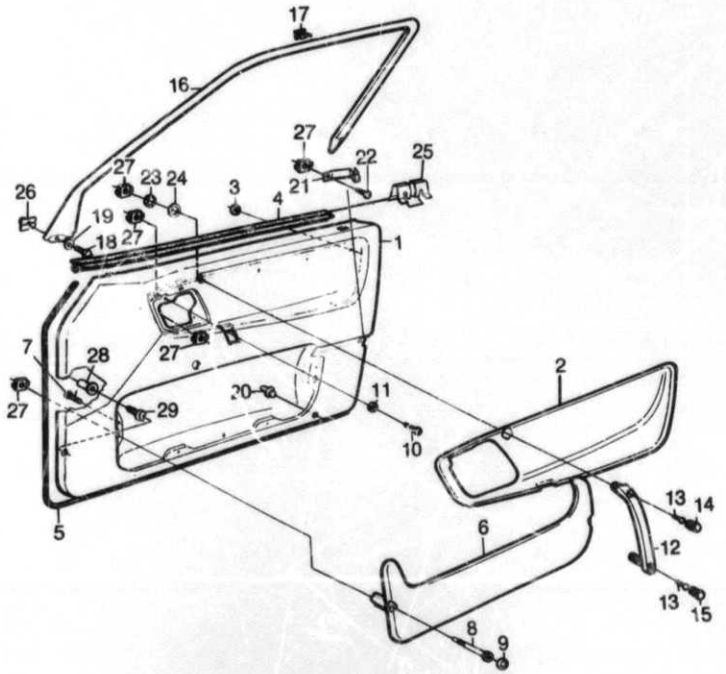

F2948 CAC90

1332	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1330	23	97 97 200			2	Washer	Bricka	5
1340	24	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1350	25	*40 50 811*		NLS - USE 4270047	8	Clamp	Klämma	3
1360	26	96 71 033			2	Clamp	Klämma	6
1370	27	79 74 231			X	Cage nut	Korgmutter	5
1380	28	95 45 906			2	Sleeve	Hylsa	5
1390	29	95 45 898			2	Upholstery clip	Klädselfäste	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E02

Upholstery
Door trim 1991
Rear door

Klädsel
Dörrklädsel 1991
Bakdörr

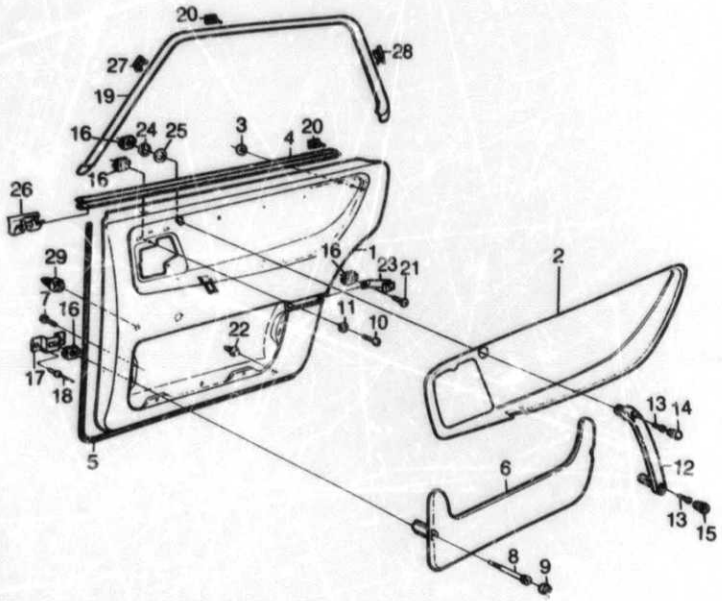

F2949 CAC90

1333	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C24,C44,C33				
0025	1	40 59 432		60), LH	1	Door trim	Dörrklädsel	6
0030	1	40 59 440		60), RH	1	Door trim	Dörrklädsel	6
0060	1	41 25 480		60,18), LH	1	Door trim	Dörrklädsel	6
0070	1	41 25 498		60,18), RH	1	Door trim	Dörrklädsel	6
0080	2	40 59 598		60), LH	1	.Arm rest	.Armstöd	6
0090	2	40 59 606		60), RH	1	.Arm rest	.Armstöd	6
0100	3	96 95 081			8	.Washer	.Bricka	5
0110	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0120	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0130	5	95 72 389		60)	2	.Strip	.List	6
0140	6	96 77 642		60), LH	1	Pocket	Ficka	6
0150	6	96 77 634		60), RH	1	Pocket	Ficka	6
0170				TRIM COLOUR E24, E44, E33, E53				
0180								
0185	1	40 59 473		70), LH	1	Door trim	Dörrklädsel	6
0190	1	40 59 481		70), RH	1	Door trim	Dörrklädsel	6
0220	1	41 25 506		70,18), LH	1	Door trim	Dörrklädsel	6
0230	1	41 25 514		70,18), RH	1	Door trim	Dörrklädsel	6
0240	2	40 59 614		70), LH	1	.Arm rest	.Armstöd	6
0250	2	40 59 622		70), RH	1	.Arm rest	.Armstöd	6
0260	3	96 95 081			8	.Washer	.Bricka	5
0270	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0280	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0290	5	98 95 970		70)	2	.Strip	.List	6
0300	6	96 58 378		70), LH	1	Pocket	Ficka	6
0310	6	96 58 360		70), RH	1	Pocket	Ficka	6
0340				TRIM COLOUR F24,F44,F33				
0345	1	40 59 515		80), LH	1	Door trim	Dörrklädsel	6
0350	1	40 59 523		80), RH	1	Door trim	Dörrklädsel	6
0380	1	41 25 522		80,18), LH	1	Door trim	Dörrklädsel	6
0390	1	41 25 530		80,18), RH	1	Door trim	Dörrklädsel	6
0400	2	40 59 630		80), LH	1	.Arm rest	.Armstöd	6
0410	2	40 59 648		80), RH	1	.Arm rest	.Armstöd	6
0420	3	96 95 081			8	.Washer	.Bricka	5
0430	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0440	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0450	5	96 78 020		80)	2	.Strip	.List	3
0460	6	96 78 087		80), LH	1	Pocket	Ficka	6
0470	6	96 78 079		80), RH	1	Pocket	Ficka	6
0500				TRIM COLOUR G24,G44,G33				
0505	1	40 59 556		90), LH	1	Door trim	Dörrklädsel	6
0510	1	40 59 564		90), RH	1	Door trim	Dörrklädsel	6
0540	1	41 25 548		90,18), LH	1	Door trim	Dörrklädsel	6
0550	1	41 25 555		90,18), RH	1	Door trim	Dörrklädsel	6
0560	2	40 59 655		90), LH	1	.Arm rest	.Armstöd	6
0570	2	40 59 663		90), RH	1	.Arm rest	.Armstöd	6
0580	3	96 95 081			8	.Washer	.Bricka	5
0590	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0600	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0610	5	95 82 396		90)	2	.Strip	.List	3
0620	6	95 82 362		90), LH	1	Pocket	Ficka	6
0630	6	95 82 461		90), RH	1	Pocket	Ficka	5
0640								

18. For cars with door fan — För bilar med dörrfläkt
60. Red — Röd
70. Grey — Grå
80. Blue — Blå
90. Yellow — Gul

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E04

Upholstery
Door trim 1991
Rear door

Klädsel
Dörrklädsel 1991
Bakdörr

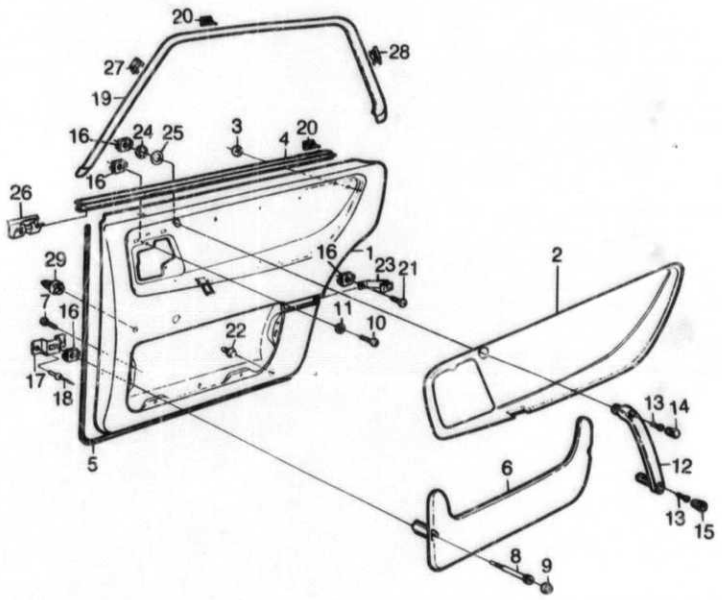

F2949 CAC90

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
			TRIM COLOUR H24, H44, H33, H53				
1	41 39 598		100), LH	1	Door trim	Dörrklädsel	6
1	41 39 580		100), RH	1	Door trim	Dörrklädsel	6
1	41 39 853		100,18), LH	1	Door trim	Dörrklädsel	6
1	41 39 846		100,18), RH	1	Door trim	Dörrklädsel	6
2	41 39 655		100), LH	1	.Arm rest	.Armstöd	6
2	41 39 648		100), RH	1	.Arm rest	.Armstöd	6
3	96 95 081			8	.Washer	.Bricka	5
4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
5	98 95 970		100)	2	.Strip	.List	6
6	41 35 224		100), LH	1	Pocket	Ficka	6
6	41 35 331		100), RH	1	Pocket	Ficka	6
7	79 71 393			8	Screw	Skruv	5
8	97 80 156			4	Screw	Skruv	5
9	97 77 160		60)	4	Cover	Täcklock	5
9	97 99 875		70)	4	Cover	Täcklock	5
9	96 75 612		80)	4	Cover	Täcklock	5
9	95 82 313		90)	4	Cover	Täcklock	5
9	41 33 427		100)	4	Cover	Täcklock	5
10	73 99 264			2	Screw	Skruv	5
11	96 56 398			2	Washer	Bricka	5
12	97 79 174		60), LH	1	Handle	Handtag	5
12	97 79 166		60), RH	1	Handle	Handtag	5
12	98 95 871		70), LH	1	Handle	Handtag	5
12	98 95 863		70), RH	1	Handle	Handtag	5
12	96 75 638		80), LH	1	Handle	Handtag	5
12	96 75 620		80), RH	1	Handle	Handtag	5
12	95 82 354		90), LH	1	Handle	Handtag	5
12	95 82 453		90), RH	1	Handle	Handtag	5
12	41 29 292		100), LH	1	Handle	Handtag	5
12	41 29 300		100), RH	1	Handle	Handtag	5
13	73 99 264			4	Screw	Skruv	5
14	97 76 477		60)	2	Cover washer	Täckbricka	5
14	98 90 146		70)	2	Cover washer	Täckbricka	5
14	96 75 596		80)	2	Cover washer	Täckbricka	5
14	95 82 297		90)	2	Cover washer	Täckbricka	5
14	41 29 276		100)	2	Cover washer	Täckbricka	5
15	97 76 519		60)	2	Cover washer	Täckbricka	5
15	98 90 153		70)	2	Cover washer	Täckbricka	5
15	96 75 604		80)	2	Cover washer	Täckbricka	5
15	95 82 305		90)	2	Cover washer	Täckbricka	5
15	41 29 284		100)	2	Cover washer	Täckbricka	5
16	79 74 231			20	Cage nut	Korgmutter	5
17	97 79 844			2	Bracket	Hållare	6
18	79 61 642			4	Rivet	Nit	5
19	*96 94 746*		LH NLS - USE 4268249	1	Upholstery	Klädsel	5
19	96 94 738		RH	1	Upholstery	Klädsel	6
20	96 60 143			5	Clamp	Klammer	6
21	80 59 396			2	Screw	Skruv	5
22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	5

18. For cars with door fan För bilar med dörrfläkt
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E06

Door trim 1991
Rear door

Dörrklädsel 1991
Bakdörr

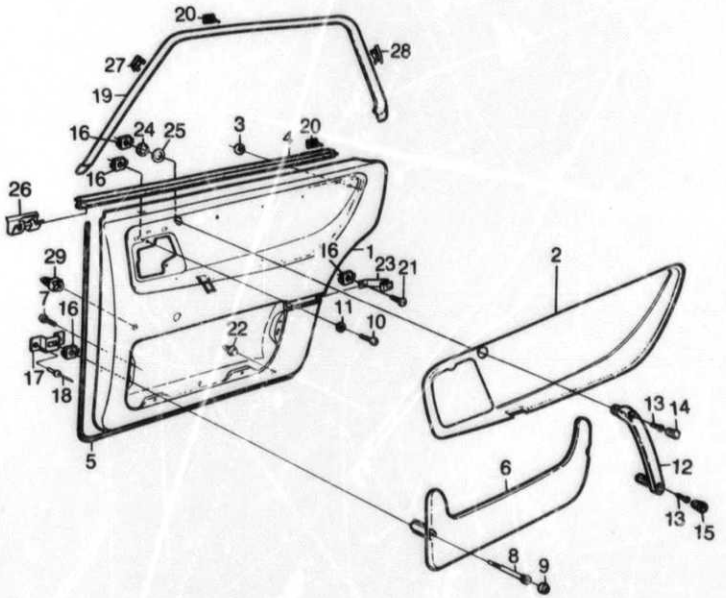

F2949 CAC90

1333	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1230	23	96 60 820			4	Clamp	Klämma	6
1240	24	97 97 200			2	Washer	Bricka	5
1250	25	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1260	26	*40 50 811*		NLS - USE 4270047	8	Clamp	Klämma	3
1270	27	96 60 150			6	Clamp	Klammer	5
1280	28	96 60 168			6	Clamp	Klammer	5
1290	29	96 78 996		18)	2	Clamp	Klämma	5

18. For cars with door fan For bilar med dörrfläkt

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E08

Door trim 1992
Front door

Dörrklädsel 1992
Framdörr

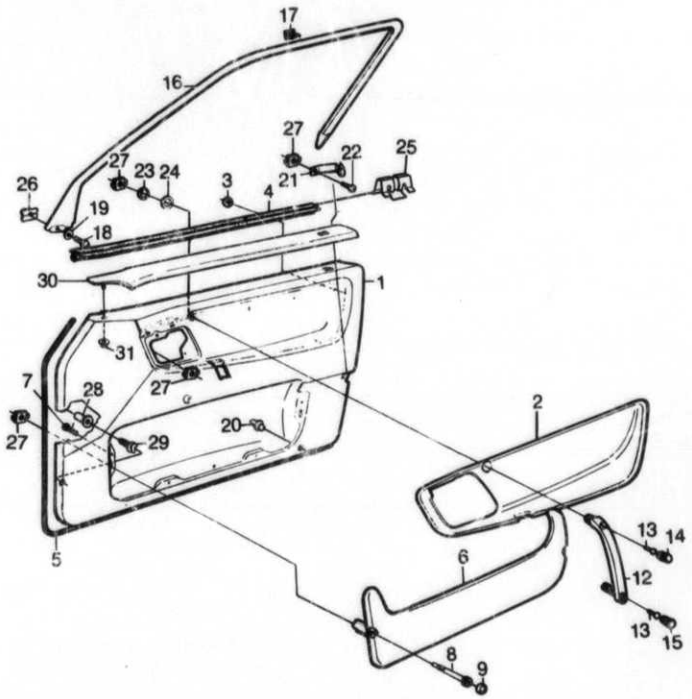

F4579 CAC90

1334	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR J24,J44,J33				
0025	1	42 63 570		210), LH	1	Door trim	Dörrklädsel	6
0030	1	42 63 596		210), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0040	1	42 63 562		210), RH	1	Door trim	Dörrklädsel	6
0050	1	*42 63 588*		210), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0050				NLS - USE 4487989				
0100	2	42 63 695		210), LH	1	.Arm rest	.Armstöd	6
0110	2	42 63 687		210), RH	1	.Arm rest	.Armstöd	6
0120	3	96 95 081			X	.Washer	.Bricka	5
0130	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0140	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0150	5	98 95 699			2	.Strip	.List	6
0160	6	42 63 638		210), LH	1	Pocket	Ficka	6
0170	6	42 63 620		210), RH	1	Pocket	Ficka	6
0171				TRIM COLOUR J53				
0172	1	42 69 619		210), LH	1	Door trim	Dörrklädsel	6
0173	1	42 69 064		210), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0174	1	42 69 072		210), RH	1	Door trim	Dörrklädsel	6
0175	1	42 69 627		210), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0176	2	42 69 106		210), LH	1	.Arm rest	.Armstöd	6
0177	2	42 69 114		210), RH	1	.Arm rest	.Armstöd	6
0178	3	96 95 081			X	.Washer	.Bricka	5
0179	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0180	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0181	5	98 95 699			2	.Strip	.List	6
0182	6	42 63 638		210), LH	1	Pocket	Ficka	6
0183	6	42 63 620		210), RH	1	Pocket	Ficka	6
0190				TRIM COLOUR E24, E44, E33, E63				
0200								
0205	1	40 56 446		70), LH	1	Door trim	Dörrklädsel	6
0210	1	40 56 438		70), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0220	1	40 56 453		70), RH	1	Door trim	Dörrklädsel	6
0230	1	40 56 420		70), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0280	2	40 56 099		70), LH	1	.Arm rest	.Armstöd	6
0290	2	40 56 107		70), RH	1	.Arm rest	.Armstöd	6
0300	3	96 95 081			X	.Washer	.Bricka	5
0310	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0320	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0330	5	98 95 699			2	.Strip	.List	6
0340	6	96 58 139		70), LH	1	Pocket	Ficka	6
0350	6	96 58 147		70), RH	1	Pocket	Ficka	6
0380				TRIM COLOUR F24,F44,F33				
0385	1	40 56 560		80), LH	1	Door trim	Dörrklädsel	6
0390	1	40 56 537		80), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0400	1	40 56 552		80), RH	1	Door trim	Dörrklädsel	6
0410	1	40 56 651		80), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0460	2	40 56 123		80), LH	1	.Arm rest	.Armstöd	6
0470	2	40 56 115		80), RH	1	.Arm rest	.Armstöd	6
0480	3	96 95 081			X	.Washer	.Bricka	5
0490	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0500	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0510	5	98 95 699			2	.Strip	.List	6
0520	6	96 77 865		80), LH	1	Pocket	Ficka	6
0530	6	96 77 857		80), RH	1	Pocket	Ficka	6
0550								

70. Grey Grå
80. Blue Blå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E10

Door trim 1992
Front door

Dörrklädsel 1992
Framdörr

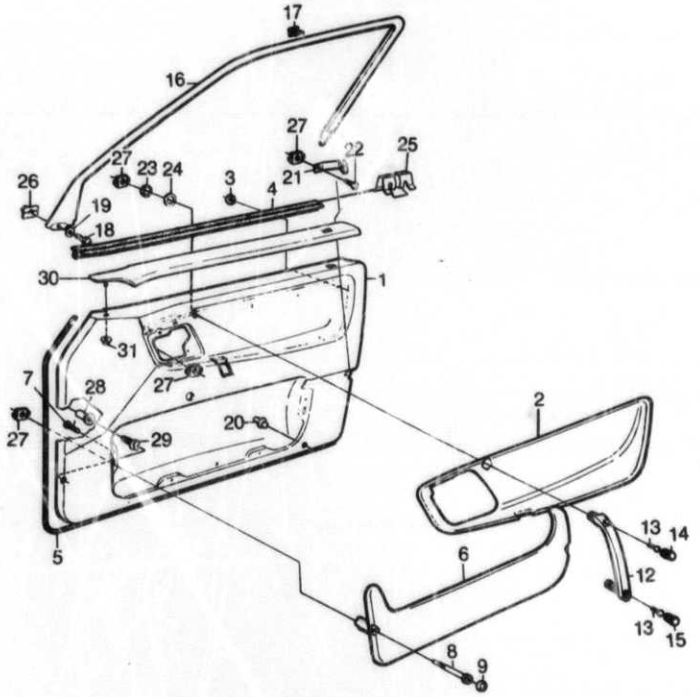

F4579 CAC90

1334	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	St
0560				TRIM COLOUR G24,G44,G33				
0565	1	40 56 834		90), LH	1	Door trim	Dörrklädsel	6
0570	1	40 56 800		90), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0580	1	40 56 826		90), RH	1	Door trim	Dörrklädsel	6
0590	1	40 56 818		90), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0640	2	40 56 131		90), LH	1	.Arm rest	.Armstöd	6
0650	2	40 56 149		90), RH	1	.Arm rest	.Armstöd	6
0660	3	96 95 081			X	.Washer	.Bricka	5
0670	4	96 60 996		LH	1	.Sealing strip	.Tätningslist	6
0680	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0690	5	98 95 699			2	.Strip	.List	6
0700	6	95 82 065		90), LH	1	Pocket	Ficka	6
0710	6	95 82 164		90), RH	1	Pocket	Ficka	6
0730				TRIM COLOUR H24, H44, H33, H53				
0740								
0745	1	41 35 414		100), LH	1	Door trim	Dörrklädsel	6
0750	1	41 35 422		100), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0760	1	41 35 430		100), RH	1	Door trim	Dörrklädsel	6
0770	1	41 35 448		100), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0820	2	41 35 505		100), LH	1	.Arm rest	.Armstöd	6
0830	2	41 35 497		100), RH	1	.Arm rest	.Armstöd	6
0840	3	96 95 081			X	.Washer	.Bricka	5
0850	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0860	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0870	5	98 95 699			2	.Strip	.List	6
0880	6	41 35 489		100), LH	1	Pocket	Ficka	6
0890	6	41 35 471		100), RH	1	Pocket	Ficka	6
0900								
0910	7	79 71 393			8	Screw	Skruv	5
0920	8	97 80 156			4	Screw	Skruv	5
0930	9	42 63 471		210)	4	Cover	Täcklock	5
0940	9	97 99 875		70)	4	Cover	Täcklock	5
0950	9	96 75 612		80)	4	Cover	Täcklock	5
0960	9	95 82 313		90)	4	Cover	Täcklock	5
0970	9	41 33 427		100)	4	Cover	Täcklock	5
1010	12	42 63 612		210), LH	1	Handle	Handtag	5
1020	12	42 63 604		210), RH	1	Handle	Handtag	5
1030	12	98 90 112		70), LH	1	Handle	Handtag	5
1040	12	98 90 104		70), RH	1	Handle	Handtag	5
1050	12	96 75 588		80), LH	1	Handle	Handtag	5
1060	12	96 75 570		80), RH	1	Handle	Handtag	5
1070	12	95 82 057		90), LH	1	Handle	Handtag	5
1080	12	95 82 156		90), RH	1	Handle	Handtag	5
1090	12	41 29 250		100), LH	1	Handle	Handtag	5
1100	12	41 29 268		100), RH	1	Handle	Handtag	5
1110								
1120	13	73 99 264			4	Screw	Skruv	5
1130	14	42 63 455		210)	2	Cover washer	Täckbricka	5
1140	14	98 90 146		70)	2	Cover washer	Täckbricka	5
1150	14	96 75 596		80)	2	Cover washer	Täckbricka	5
1160	14	95 82 297		90)	2	Cover washer	Täckbricka	5
1170	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1180								
1190	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1200	15	98 90 153		70)	2	Cover washer	Täckbricka	5
1210	15	96 75 604		80)	2	Cover washer	Täckbricka	5
1220	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1230	15	41 29 284		100)	2	Cover washer	Täckbricka	5

70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E12

Door trim 1992
Front door

Dörrklädsel 1992
Framdörr

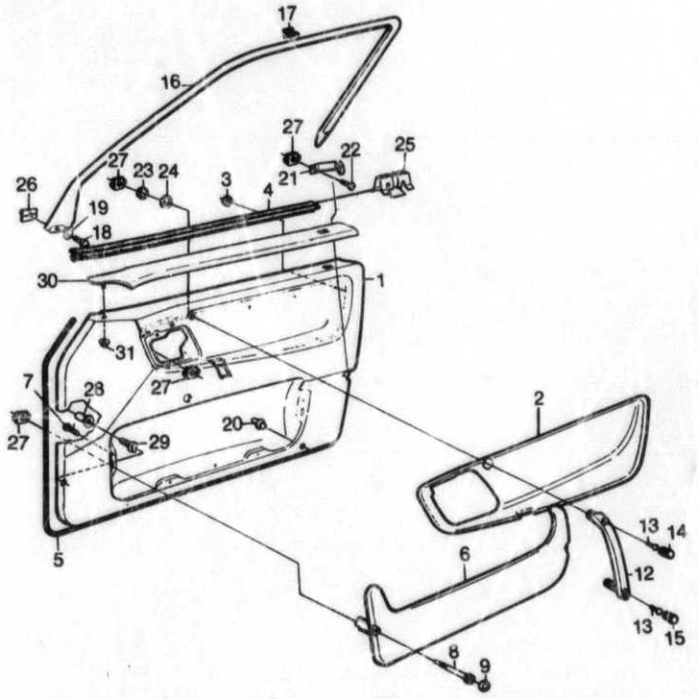

F4579 CAC90

1334	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1240								
1250	16	*96 94 688*		267), LH NLS - USE 4268223	1	Upholstery	Klädsel	6
1260	16	*96 94 670*		267), RH NLS - USE 4268215	1	Upholstery	Klädsel	6
1262	16	42 68 223		268), LH	1	Upholstery	Klädsel	6
1264	16	42 68 215		268), RH	1	Upholstery	Klädsel	6
1270	17	96 60 143			22	Clamp	Klammer	5
1280	18	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
1290	19	96 60 077			2	Washer	Bricka	5
1300	20	97 96 939			2	Clamp	Klämma	6
1310	21	97 96 616			2	Clamp	Klämma	6
1320	22	73 99 264			4	Screw	Skruv	5
1330	23	97 97 200			2	Washer	Bricka	5
1340	24	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1350	25	42 70 047			8	Clamp	Klämma	3
1360	26	96 71 033			2	Clamp	Klämma	6
1370	27	79 74 231			X	Cage nut	Korgmutter	5
1380	28	95 45 906			2	Sleeve	Hylsa	5
1390	29	95 45 898			2	Upholstery clip	Klädselfäste	5
1400	30	86 89 210		LH	1	Wooden insert	Träinlägg	6
1420	30	86 89 202		RH	1	Wooden insert	Träinlägg	6
1440	31	73 98 423			8	Nut	Mutter	5

267. Ch. --N1037677
268. Ch. N1037678--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E14

Door trim 1992
Rear door

Dörrklädsel 1992
Bakdörr

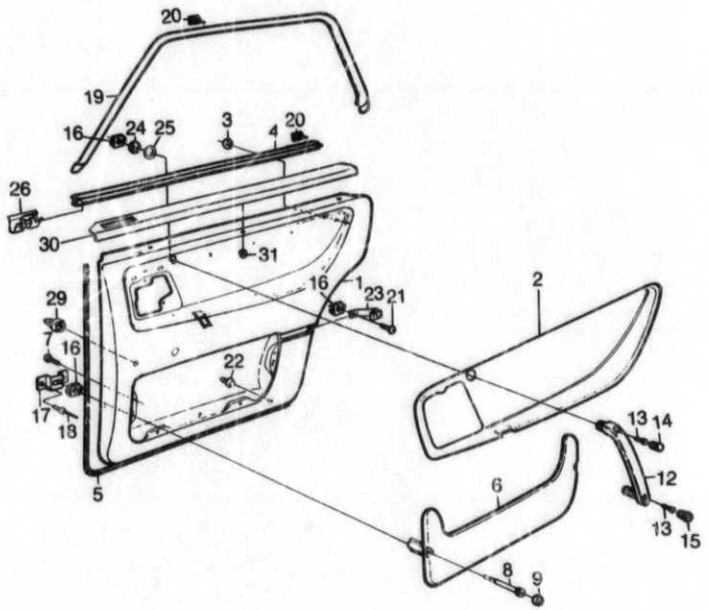

F4580 CAC90

1335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR J24,J44,J33				
0025	1	42 63 893		210), LH	1	Door trim	Dörrklädsel	6
0030	1	42 63 885		210), RH	1	Door trim	Dörrklädsel	6
0060	1	42 63 919		210,18), LH	1	Door trim	Dörrklädsel	6
0070	1	42 63 901		210,18), RH	1	Door trim	Dörrklädsel	6
0080	2	42 64 016		210), LH	1	.Arm rest	.Armstöd	6
0090	2	42 64 008		210), RH	1	.Arm rest	.Armstöd	6
0100	3	96 95 081			X	.Washer	.Bricka	5
0110	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0120	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0130	5	98 95 970			2	.Strip	.List	6
0140	6	42 63 943		210), LH	1	Pocket	Ficka	6
0150	6	42 63 950		210), RH	1	Pocket	Ficka	6
0151				TRIM COLOUR J53				
0152	1	42 69 262		210,18), LH	1	Door trim	Dörrklädsel	6
0153	1	42 69 270		210,18), RH	1	Door trim	Dörrklädsel	6
0154	2	42 69 304		210), LH	1	.Arm rest	.Armstöd	6
0155	2	42 69 312		210), RH	1	.Arm rest	.Armstöd	6
0156	3	96 95 081			X	.Washer	.Bricka	5
0157	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0158	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0159	5	98 95 970			2	.Strip	.List	6
0160	6	42 63 943		210), LH	1	Pocket	Ficka	6
0161	6	42 63 950		210), RH	1	Pocket	Ficka	6
0170				TRIM COLOUR E24, E44, E35, E53				
0180								
0185	1	40 57 204		70), LH	1	Door trim	Dörrklädsel	6
0190	1	40 57 188		70), RH	1	Door trim	Dörrklädsel	6
0220	1	40 57 212		70,18), LH	1	Door trim	Dörrklädsel	6
0230	1	40 57 196		70,18), RH	1	Door trim	Dörrklädsel	6
0240	2	40 56 016		70), LH	1	.Arm rest	.Armstöd	6
0250	2	40 56 024		70), RH	1	.Arm rest	.Armstöd	6
0260	3	96 95 081			X	.Washer	.Bricka	5
0270	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0280	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0290	5	98 95 970			2	.Strip	.List	6
0300	6	96 58 378		70), LH	1	Pocket	Ficka	6
0310	6	96 58 360		70), RH	1	Pocket	Ficka	6
0340				TRIM COLOUR F24,F44,F33				
0345	1	40 57 410		80), LH	1	Door trim	Dörrklädsel	6
0350	1	40 57 402		80), RH	1	Door trim	Dörrklädsel	6
0380	1	40 57 394		80,18), LH	1	Door trim	Dörrklädsel	6
0390	1	40 57 386		80,18), RH	1	Door trim	Dörrklädsel	6
0400	2	40 56 032		80), LH	1	.Arm rest	.Armstöd	6
0410	2	40 56 040		80), RH	1	.Arm rest	.Armstöd	6
0420	3	96 95 081			X	.Washer	.Bricka	5
0430	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0440	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0450	5	98 95 970			2	.Strip	.List	6
0460	6	96 78 087		80), LH	1	Pocket	Ficka	6
0470	6	96 78 079		80), RH	1	Pocket	Ficka	6
0480								


18. For cars with door fan — För bilar med dörrfläkt
70. Grey — Grå
80. Blue — Blå
210. Light beige — Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

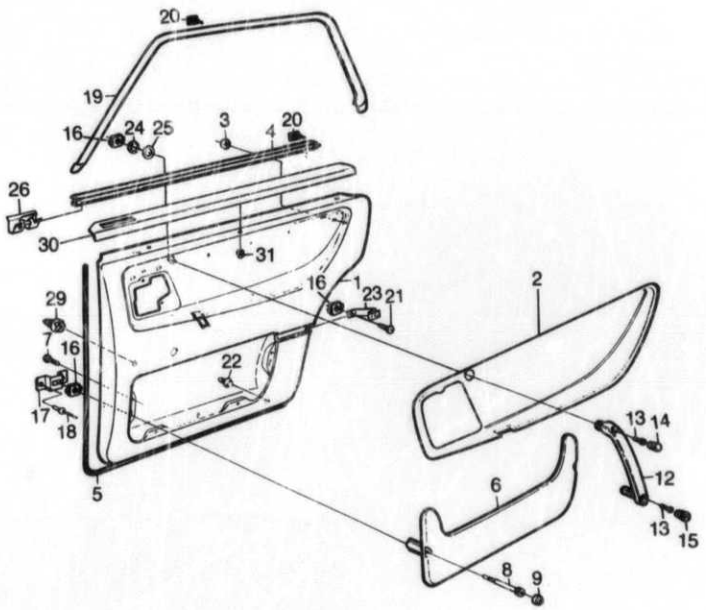

F4580 CAC90

1335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0500				TRIM COLOUR G24,G44,G33				
0505	1	40 57 535		90), LH	1	Door trim	Dörrklädsel	6
0510	1	40 57 527		90), RH	1	Door trim	Dörrklädsel	6
0540	1	40 57 519		90,18), LH	1	Door trim	Dörrklädsel	6
0550	1	40 57 501		90,18), RH	1	Door trim	Dörrklädsel	6
0560	2	40 56 057		90), LH	1	.Arm rest	.Armstöd	6
0570	2	40 56 065		90), RH	1	.Arm rest	.Armstöd	6
0580	3	96 95 081			X	.Washer	.Bricka	5
0590	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0600	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0610	5	98 95 970			2	.Strip	.List	6
0620	6	95 82 362		90), LH	1	Pocket	Ficka	6
0630	6	95 82 461		90), RH	1	Pocket	Ficka	6
0650				TRIM COLOUR H24, H44, H33, H53				
0660								
0665	1	41 35 190		100), LH	1	Door trim	Dörrklädsel	6
0670	1	41 35 307		100), RH	1	Door trim	Dörrklädsel	6
0700	1	41 35 208		100,18), LH	1	Door trim	Dörrklädsel	6
0710	1	41 35 315		100,18), RH	1	Door trim	Dörrklädsel	6
0720	2	41 35 257		100), LH	1	.Arm rest	.Armstöd	6
0730	2	41 35 364		100), RH	1	.Arm rest	.Armstöd	6
0740	3	96 95 081			X	.Washer	.Bricka	5
0750	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0760	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0770	5	98 95 970			2	.Strip	.List	6
0780	6	41 35 224		100), LH	1	Pocket	Ficka	6
0790	6	41 35 331		100), RH	1	Pocket	Ficka	6
0800								
0810	7	79 71 393			8	Screw	Skruv	5
0820	8	97 80 156			4	Screw	Skruv	5
0830	9	42 63 471		210)	4	Cover	Täcklock	5
0840	9	97 99 875		70)	4	Cover	Täcklock	5
0850	9	96 75 612		80)	4	Cover	Täcklock	5
0860	9	95 82 313		90)	4	Cover	Täcklock	5
0870	9	41 33 427		100)	4	Cover	Täcklock	5
0910	12	42 63 935		210), LH	1	Handle	Handtag	5
0920	12	42 63 927		210), RH	1	Handle	Handtag	5
0930	12	98 95 871		70), LH	1	Handle	Handtag	5
0940	12	98 95 863		70), RH	1	Handle	Handtag	5
0950	12	96 75 638		80), LH	1	Handle	Handtag	5
0960	12	96 75 620		80), RH	1	Handle	Handtag	5
0970	12	95 82 354		90), LH	1	Handle	Handtag	5
0980	12	95 82 453		90), RH	1	Handle	Handtag	5
0990	12	41 29 292		100), LH	1	Handle	Handtag	5
1000	12	41 29 300		100), RH	1	Handle	Handtag	5
1010								
1020	13	73 99 264			4	Screw	Skruv	5
1030	14	42 63 455		210)	2	Cover washer	Täckbricka	5
1040	14	98 90 146		70)	2	Cover washer	Täckbricka	5
1050	14	96 75 596		80)	2	Cover washer	Täckbricka	5
1060	14	95 82 297		90)	2	Cover washer	Täckbricka	5
1070	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1080								
1090	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1100	15	98 90 153		70)	2	Cover washer	Täckbricka	5
1110	15	96 75 604		80)	2	Cover washer	Täckbricka	5
1120	15	95 82 305		90)	2	Cover washer	Täckbricka	5

18. For cars with door fan För bilar med dörrfläkt
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX


Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery

6-E18 Door trim 1992 Rear door

Klädsel

Dörrklädsel 1992 Bakdörr

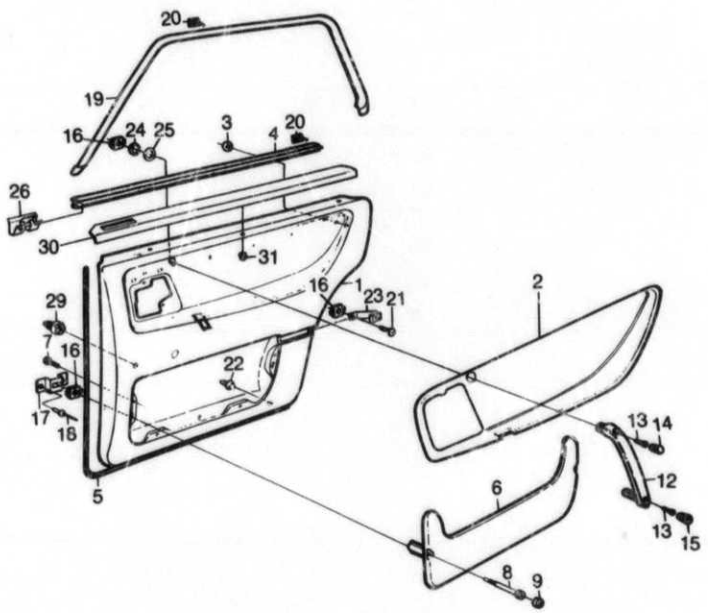

F4580 CAC90

1335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1130	15	41 29 284		100)	2	Cover washer	Täckbricka	5
1140								
1150	16	79 74 231			20	Cage nut	Korgmutter	5
1160	17	97 79 844			2	Bracket	Hållare	6
1170	18	79 72 490			4	Rivet	Nit	5
1180	19	*96 94 746*		267), LH NLS - USE 4268249	1	Upholstery	Klädsel	6
1180								
1190	19	96 94 738		267), RH	1	Upholstery	Klädsel	6
1192	19	42 68 249		268), LH	1	Upholstery	Klädsel	6
1194	19	42 68 231		268), RH	1	Upholstery	Klädsel	6
1200	20	96 60 143			22	Clamp	Klammer	5
1210	21	80 59 396			2	Screw	Skruv	5
1220	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1230	23	96 60 820			4	Clamp	Klämma	6
1240	24	97 97 200			2	Washer	Bricka	5
1250	25	*96 71 389*		NLS - USE 9[illegible]391	2	Washer	Bricka	5
1260	26	42 70 047			8	Clamp	Klämma	3
1290	29	96 78 996		18)	2	Clamp	Klämma	5
1300	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
1320	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
1340	31	73 98 423			6	Nut	Mutter	5

18. For cars with door fan — För bilar med dörrfläkt
100. Light grey — Ljus grå
267. Ch. --N1037677
268. Ch. N1037678--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E20

Door trim 1993
Front door

Dörrklädsel 1993
Framdörr

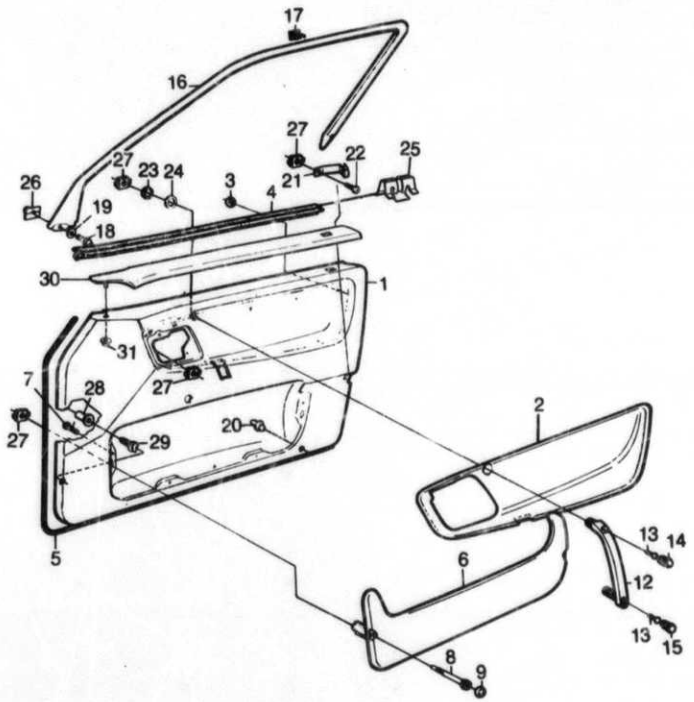

F4581 CAC90

1336	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J24,J44,J74, J33				
0020								
0030	1	42 63 570		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 63 596		210), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0050	1	42 63 562		210), RH	1	Door trim	Dörrklädsel	6
0060	1	*42 63 588*		210), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0060				NLS - USE 4487989				
0070	2	42 63 695		210), LH	1	.Arm rest	.Armstöd	6
0080	2	42 63 687		210), RH	1	.Arm rest	.Armstöd	6
0090	3	96 95 081			X	.Washer	.Bricka	5
0100	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0110	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0120	5	98 95 699			2	.Strip	.List	6
0130	6	42 63 638		210), LH	1	Pocket	Ficka	6
0140	6	42 63 620		210), RH	1	Pocket	Ficka	6
0150				TRIM COLOUR J93 (J53)				
0160	1	42 69 619		210), LH	1	Door trim	Dörrklädsel	6
0170	1	42 69 064		210), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0180	1	42 69 072		210), RH	1	Door trim	Dörrklädsel	6
0190	1	42 69 627		210), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0200	2	42 69 106		210), LH	1	.Arm rest	.Armstöd	6
0210	2	42 69 114		210), RH	1	.Arm rest	.Armstöd	6
0220	3	96 95 081			X	.Washer	.Bricka	5
0230	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0240	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0250	5	98 95 699			2	.Strip	.List	6
0260	6	42 63 638		210), LH	1	Pocket	Ficka	6
0270	6	42 63 620		210), RH	1	Pocket	Ficka	6
0280				TRIM COLOUR E24,E44,E74, E33, E53				
0290								
0300	1	40 56 446		70), LH	1	Door trim	Dörrklädsel	6
0310	1	40 56 438		70), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0320	1	40 56 453		70), RH	1	Door trim	Dörrklädsel	6
0330	1	40 56 420		70), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0340	2	40 56 099		70), LH	1	.Arm rest	.Armstöd	6
0350	2	40 56 107		70), RH	1	.Arm rest	.Armstöd	6
0360	3	96 95 081			X	.Washer	.Bricka	5
0370	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0380	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0390	5	98 95 699			2	.Strip	.List	6
0400	6	96 58 139		70), LH	1	Pocket	Ficka	6
0410	6	96 58 147		70), RH	1	Pocket	Ficka	6
0420				TRIM COLOUR E93				
0430	1	42 72 811		70), LH	1	Door trim	Dörrklädsel	
0440	1	42 72 795		70), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	
0450	1	42 72 829		70), RH	1	Door trim	Dörrklädsel	
0460	1	42 72 803		70), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	
0470	2	42 72 837		70), LH	1	.Arm rest	.Armstöd	
0480	2	42 72 845		70), RH	1	.Arm rest	.Armstöd	
0490	3	96 95 081			X	.Washer	.Bricka	5
0500	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0510	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0520	5	98 95 699			2	.Strip	.List	6
0530	6	96 58 139		70), LH	1	Pocket	Ficka	6
0540	6	96 58 147		70), RH	1	Pocket	Ficka	6
0545								


70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

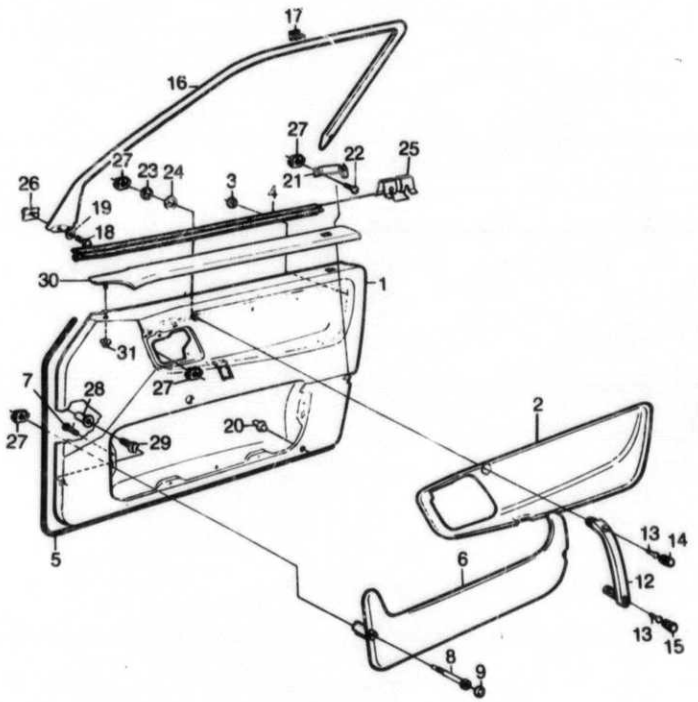

F4581 CAC90

Upholstery

6-E22

Door trim 1993
Front door

Klädsel

Dörrklädsel 1993
Framdörr

1336	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550				TRIM COLOUR F24,F44,F74, F33				
0560								
0570	1	40 56 560		80), LH	1	Door trim	Dörrklädsel	6
0580	1	40 56 537		80), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0590	1	40 56 552		80), RH	1	Door trim	Dörrklädsel	6
0600	1	40 56 651		80), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0610	2	40 56 123		80), LH	1	.Arm rest	.Armstöd	6
0620	2	40 56 115		80), RH	1	.Arm rest	.Armstöd	6
0630	3	96 95 081			X	.Washer	.Bricka	5
0640	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0650	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0660	5	98 95 699			2	.Strip	.List	6
0670	6	96 77 865		80), LH	1	Pocket	Ficka	6
0680	6	96 77 857		80), RH	1	Pocket	Ficka	6
0690				TRIM COLOUR G24,G44,G74, G33				
0700								
0710	1	40 56 834		90), LH	1	Door trim	Dörrklädsel	6
0720	1	40 56 800		90), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0730	1	40 56 826		90), RH	1	Door trim	Dörrklädsel	6
0740	1	40 56 818		90), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0750	2	40 56 131		90), LH	1	.Arm rest	.Armstöd	6
0760	2	40 56 149		90), RH	1	.Arm rest	.Armstöd	6
0770	3	96 95 081			X	.Washer	.Bricka	5
0780	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0790	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0800	5	98 95 699			2	.Strip	.List	6
0810	6	95 82 065		90), LH	1	Pocket	Ficka	6
0820	6	95 82 164		90), RH	1	Pocket	Ficka	6
0830				TRIM COLOUR H24,H44,H74 H33, H53				
0840								
0850	1	41 35 414		100), LH	1	Door trim	Dörrklädsel	6
0860	1	41 35 422		100), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
0870	1	41 35 430		100), RH	1	Door trim	Dörrklädsel	6
0880	1	41 35 448		100), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
0890	2	41 35 505		100), LH	1	.Arm rest	.Armstöd	6
0900	2	41 35 497		100), RH	1	.Arm rest	.Armstöd	6
0910	3	96 95 081			X	.Washer	.Bricka	5
0920	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0930	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0940	5	98 95 699			2	.Strip	.List	6
0950	6	41 35 489		100), LH	1	Pocket	Ficka	6
0960	6	41 35 471		100), RH	1	Pocket	Ficka	6
0970				TRIM COLOUR K64				
0980	1	42 67 035		110), LH	1	Door trim	Dörrklädsel	5
0990	1	42 67 050		110), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	5
1000	1	42 67 043		110), RH	1	Door trim	Dörrklädsel	5
1010	1	42 67 068		110), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	5
1020	2	42 66 722		110), LH	1	.Arm rest	.Armstöd	6
1030	2	42 66 714		110), RH	1	.Arm rest	.Armstöd	6
1040	3	96 95 081			X	.Washer	.Bricka	5
1050	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
1060	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
1070	5	98 95 699			2	.Strip	.List	6
1080	6	96 58 139		70), LH	1	Pocket	Ficka	6
1090	6	96 58 147		70), RH	1	Pocket	Ficka	6
1095								

70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-E24

Door trim 1993
Front door

Dörrklädsel 1993
Framdörr

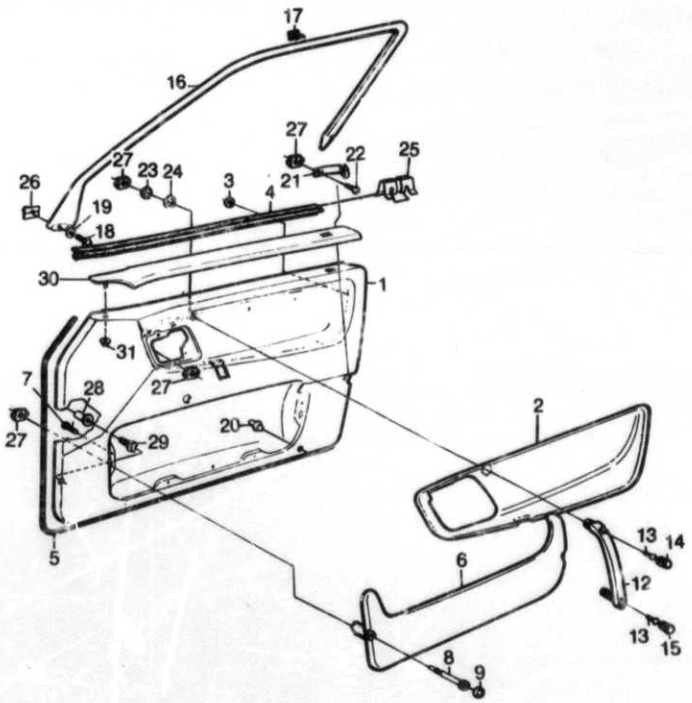

F4581 CAC90

1336	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1100				TRIM COLOUR K35				
1110	1	42 73 892		70), LH	1	Door trim	Dörrklädsel	6
1120	1	42 73 876		70), 4D, 5CS, LH, LHD	1	Door trim	Dörrklädsel	6
1130	1	42 73 884		70), RH	1	Door trim	Dörrklädsel	6
1140	1	42 73 900		70), 4D, 5CS, RH, RHD	1	Door trim	Dörrklädsel	6
1150	2	42 73 934		110), LH	1	.Arm rest	.Armstöd	6
1160	2	42 73 942		110), RH	1	.Arm rest	.Armstöd	6
1170	3	96 95 081			X	.Washer	.Bricka	5
1180	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
1190	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
1200	5	98 95 699			2	.Strip	.List	6
1210	6	96 58 139		70), LH	1	Pocket	Ficka	6
1220	6	96 58 147		70), RH	1	Pocket	Ficka	6
1230								
1240	7	79 71 393			8	Screw	Skruv	5
1250	8	97 80 156			4	Screw	Skruv	5
1260	9	42 63 471		210)	4	Cover	Täcklock	5
1270	9	97 99 875		70)	4	Cover	Täcklock	5
1280	9	96 75 612		80)	4	Cover	Täcklock	5
1290	9	95 82 313		90)	4	Cover	Täcklock	5
1300	9	41 33 427		100)	4	Cover	Täcklock	5
1310	12	42 63 612		210), LH	1	Handle	Handtag	5
1320	12	42 63 604		210), RH	1	Handle	Handtag	5
1330	12	98 90 112		70), LH	1	Handle	Handtag	5
1340	12	98 90 104		70), RH	1	Handle	Handtag	5
1350	12	96 75 588		80), LH	1	Handle	Handtag	5
1360	12	96 75 570		80), RH	1	Handle	Handtag	5
1370	12	95 82 057		90), LH	1	Handle	Handtag	5
1380	12	95 82 156		90), RH	1	Handle	Handtag	5
1390	12	41 29 250		100), LH	1	Handle	Handtag	5
1400	12	41 29 268		100), RH	1	Handle	Handtag	5
1410								
1420	13	73 99 264			4	Screw	Skruv	5
1430	14	42 63 455		210)	2	Cover washer	Täckbricka	5
1440	14	98 90 146		70)	2	Cover washer	Täckbricka	5
1450	14	96 75 596		80)	2	Cover washer	Täckbricka	5
1460	14	95 82 297		90)	2	Cover washer	Täckbricka	5
1470	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1480								
1490	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1500	15	98 90 153		70)	2	Cover washer	Täckbricka	5
1510	15	96 75 604		80)	2	Cover washer	Täckbricka	5
1520	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1530	15	41 29 284		100)	2	Cover washer	Täckbricka	5
1540								
1550	16	42 68 223		LH	1	Upholstery	Klädsel	6
1560	16	42 68 215		RH	1	Upholstery	Klädsel	6
1570	17	96 60 143			22	Clamp	Klammer	5
1580	18	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
1590	19	96 60 077			2	Washer	Bricka	5
1600	20	97 96 939			2	Clamp	Klämma	6
1610	21	97 96 616			2	Clamp	Klämma	6
1620	22	73 99 264			4	Screw	Skruv	5
1630	23	97 97 200			2	Washer	Bricka	5
1640	24	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1650	25	42 70 047			8	Clamp	Klämma	3

70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02


8B GROUP INDEX

Instrument panel 6-A06
Upholstery 6-A20
Other interior equipment 6-G12
Complete sets 6-I24

6-F02

Upholstery
Door trim 1993
Front door

Klädsel
Dörrklädsel 1993
Framdörr

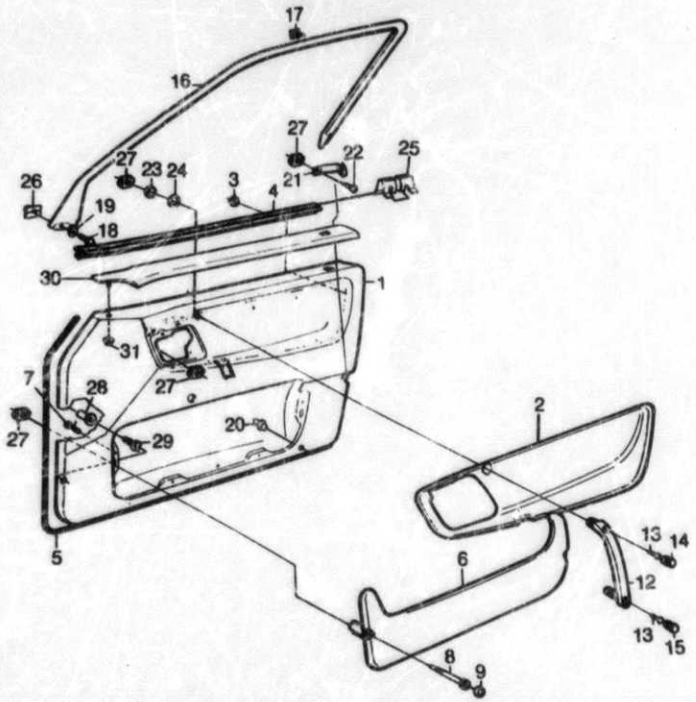

F4581 CAC90

1336	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1660	26	96 71 033			2	Clamp	Klämma	6
1670	27	79 74 231			X	Cage nut	Korgmutter	5
1680	28	95 45 906			2	Sleeve	Hylsa	5
1690	29	95 45 898			2	Upholstery clip	Klädselfäste	5
1700	30	86 69 210		LH	1	Wooden insert	Träinlägg	6
1720	30	86 69 202		RH	1	Wooden insert	Träinlägg	6
1740	31	73 98 423			8	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F04

Door trim 1993
Rear door

Dörrklädsel 1993
Bakdörr

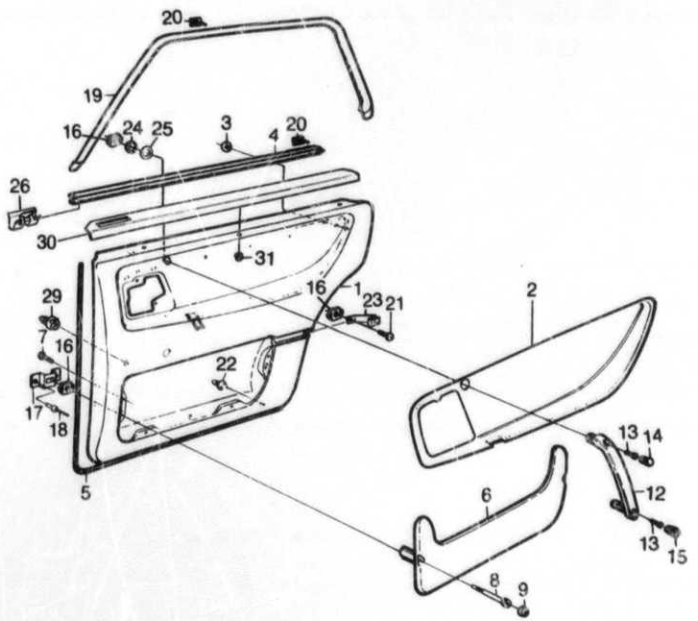

F4582 CAC90

1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J24,J44,J74, J33				
0020								
0030	1	42 63 893		210), LH	1	Door trim	Dörrklädsel	6
0040	1	42 63 885		210), RH	1	Door trim	Dörrklädsel	6
0050	1	42 63 919		210,18), LH	1	Door trim	Dörrklädsel	6
0060	1	42 63 901		210,18), RH	1	Door trim	Dörrklädsel	6
0070	2	42 64 016		210), LH	1	.Arm rest	.Armstöd	6
0080	2	42 64 008		210), RH	1	.Arm rest	.Armstöd	6
0090	3	96 95 081			X	.Washer	.Bricka	5
0100	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0110	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0120	5	98 95 970			2	.Strip	.List	6
0130	6	42 63 943		210), LH	1	Pocket	Ficka	6
0140	6	42 63 950		210), RH	1	Pocket	Ficka	6
0150				TRIM COLOUR J93 (J53)				
0160	1	42 69 262		210,18), LH	1	Door trim	Dörrklädsel	6
0170	1	42 69 270		210,18), RH	1	Door trim	Dörrklädsel	6
0180	2	42 69 304		210), LH	1	.Arm rest	.Armstöd	6
0190	2	42 69 312		210), RH	1	.Arm rest	.Armstöd	6
0200	3	96 95 081			X	.Washer	.Bricka	5
0210	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0220	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0230	5	98 95 970			2	.Strip	.List	6
0240	6	42 63 943		210), LH	1	Pocket	Ficka	6
0250	6	42 63 950		210), RH	1	Pocket	Ficka	6
0260				TRIM COLOUR E24,E44,E74, E33				
0270								
0280	1	40 57 204		70), LH	1	Door trim	Dörrklädsel	6
0290	1	40 57 188		70), RH	1	Door trim	Dörrklädsel	6
0300	1	40 57 212		70,18), LH	1	Door trim	Dörrklädsel	6
0310	1	40 57 196		70,18), RH	1	Door trim	Dörrklädsel	6
0320	2	40 56 016		70), LH	1	.Arm rest	.Armstöd	6
0330	2	40 56 024		70), RH	1	.Arm rest	.Armstöd	6
0340	3	96 95 081			X	.Washer	.Bricka	5
0350	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0360	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0370	5	98 95 970			2	.Strip	.List	6
0380	6	96 58 378		70), LH	1	Pocket	Ficka	6
0390	6	96 58 360		70), RH	1	Pocket	Ficka	6
0400				TRIM COLOUR E53, E93				
0410	1	42 72 894		70,18), LH	1	Door trim	Dörrklädsel	
0420	1	42 72 902		70,18), RH	1	Door trim	Dörrklädsel	
0430	2	42 72 910		70), LH	1	.Arm rest	.Armstöd	
0440	2	42 72 928		70), RH	1	.Arm rest	.Armstöd	
0450	3	96 95 081			X	.Washer	.Bricka	5
0460	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0470	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0480	5	98 95 970			2	.Strip	.List	6
0490	6	96 58 378		70), LH	1	Pocket	Ficka	6
0500	6	96 58 360		70), RH	1	Pocket	Ficka	6
0505								

18. For cars with door fan För bilar med dörrfläkt
70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F06

Door trim 1993
Rear door

Dörrklädsel 1993
Bakdörr

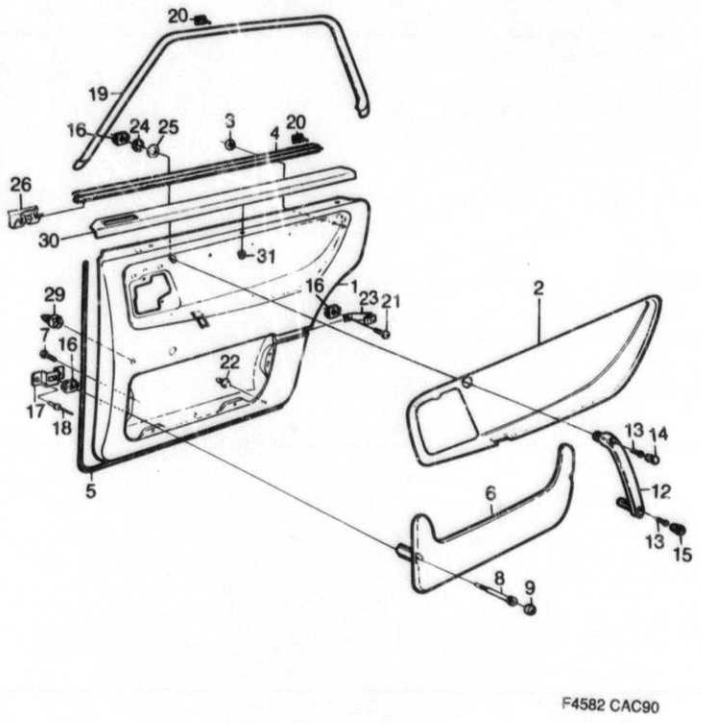

F4582 CAC90

1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0510				TRIM COLOUR F24,F44,F74, F33				
0520								
0530	1	40 57 410		80), LH	1	Door trim	Dörrklädsel	6
0540	1	40 57 402		80), RH	1	Door trim	Dörrklädsel	6
0550	1	40 57 394		80,18), LH	1	Door trim	Dörrklädsel	6
0560	1	40 57 386		80,18), RH	1	Door trim	Dörrklädsel	6
0570	2	40 56 032		80), LH	1	.Arm rest	.Armstöd	6
0580	2	40 56 040		80), RH	1	.Arm rest	.Armstöd	6
0590	3	96 95 081			X	.Washer	.Bricka	5
0600	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0610	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0620	5	98 95 970			2	.Strip	.List	6
0630	6	96 78 087		80), LH	1	Pocket	Ficka	6
0640	6	96 78 079		80), RH	1	Pocket	Ficka	6
0650				TRIM COLOUR G24,G44,G74, G33				
0660								
0670	1	40 57 535		90), LH	1	Door trim	Dörrklädsel	6
0680	1	40 57 527		90), RH	1	Door trim	Dörrklädsel	6
0690	1	40 57 519		90,18), LH	1	Door trim	Dörrklädsel	6
0700	1	40 57 501		90,18), RH	1	Door trim	Dörrklädsel	6
0710	2	40 56 057		90), LH	1	.Arm rest	.Armstöd	6
0720	2	40 56 065		90), RH	1	.Arm rest	.Armstöd	6
0730	3	96 95 081			X	.Washer	.Bricka	5
0740	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0750	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0760	5	98 95 970			2	.Strip	.List	6
0770	6	95 82 362		90), LH	1	Pocket	Ficka	6
0780	6	95 82 461		90), RH	1	Pocket	Ficka	6
0790				TRIM COLOUR H24,H44,H74, H33, H53				
0800								
0810	1	41 35 190		100), LH	1	Door trim	Dörrklädsel	6
0820	1	41 35 307		100), RH	1	Door trim	Dörrklädsel	6
0830	1	41 35 208		100,18), LH	1	Door trim	Dörrklädsel	6
0840	1	41 35 315		100,18), RH	1	Door trim	Dörrklädsel	6
0850	2	41 35 257		100), LH	1	.Arm rest	.Armstöd	6
0860	2	41 35 364		100), RH	1	.Arm rest	.Armstöd	6
0870	3	96 95 081			X	.Washer	.Bricka	5
0880	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0890	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0900	5	98 95 970			2	.Strip	.List	6
0910	6	41 35 224		100), LH	1	Pocket	Ficka	6
0920	6	41 35 331		100), RH	1	Pocket	Ficka	6
0930				TRIM COLOUR K64				
0940	1	42 67 233		110), LH	1	Door trim	Dörrklädsel	5
0950	1	42 67 241		110), RH	1	Door trim	Dörrklädsel	5
0960	1	42 67 258		110,18), LH	1	Door trim	Dörrklädsel	5
0970	1	42 67 266		110,18), RH	1	Door trim	Dörrklädsel	5
0980	2	42 66 748		110), LH	1	.Arm rest	.Armstöd	6
0990	2	42 66 730		110), RH	1	.Arm rest	.Armstöd	6
1000	3	96 95 081			X	.Washer	.Bricka	5
1010	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
1020	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
1030	5	98 95 970			2	.Strip	.List	6
1040	6	96 58 378		70), LH	1	Pocket	Ficka	6
1050	6	96 58 360		70), RH	1	Pocket	Ficka	6
1055								

18. For cars with door fan För bilar med dörrfläkt
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F08

Door trim 1993
Rear door

Dörrklädsel 1993
Bakdörr

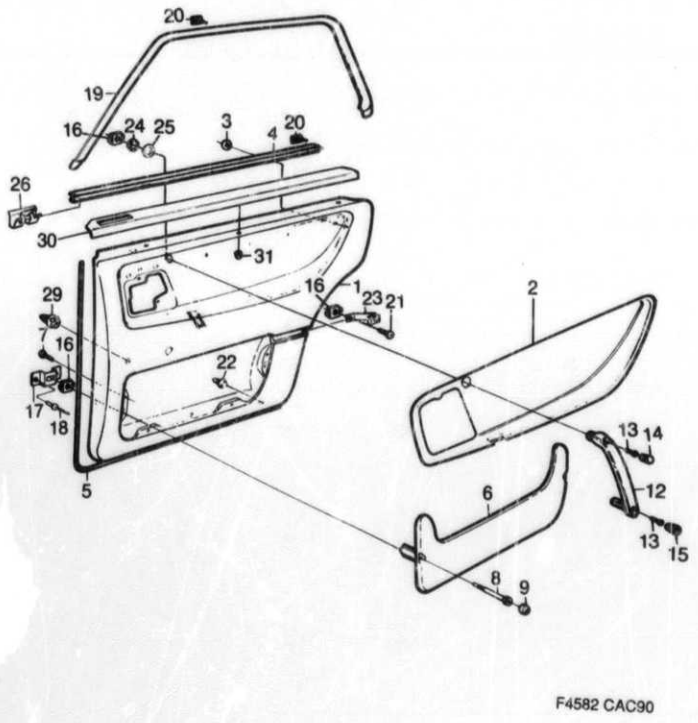

F4582 CAC90

1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1060				TRIM COLOUR K35				
1070	1	42 74 098		70,18), LH	1	Door trim	Dörrklädsel	6
1080	1	42 74 106		70,18), RH	1	Door trim	Dörrklädsel	6
1090	2	42 74 130		110), LH	1	. Arm rest	. Armstöd	6
1100	2	42 74 148		110), RH	1	. Arm rest	. Armstöd	6
1110	3	96 95 081			X	. Washer	. Bricka	5
1120	4	96 60 994		LH	1	. Sealing strip	. Tätningslist	3
1130	4	96 60 846		RH	1	. Sealing strip	. Tätningslist	3
1140	5	98 95 970			2	. Strip	. List	6
1150	6	96 58 378		70), LH	1	Pocket	Ficka	6
1160	6	96 58 360		70), RH	1	Pocket	Ficka	6
1170								
1180	7	79 71 393			8	Screw	Skruv	5
1190	8	97 80 156			4	Screw	Skruv	5
1200	9	42 63 471		210)	4	Cover	Täcklock	5
1210	9	97 99 875		70)	4	Cover	Täcklock	5
1220	9	96 75 612		80)	4	Cover	Täcklock	5
1230	9	95 82 313		90)	4	Cover	Täcklock	5
1240	9	41 30 427		100)	4	Cover	Täcklock	5
1250	12	42 63 935		210), LH	1	Handle	Handtag	5
1260	12	42 63 927		210), RH	1	Handle	Handtag	5
1270	12	98 95 871		70), LH	1	Handle	Handtag	5
1280	12	98 95 863		70), RH	1	Handle	Handtag	5
1290	12	96 75 638		80), LH	1	Handle	Handtag	5
1300	12	96 75 620		80), RH	1	Handle	Handtag	5
1310	12	95 82 354		90), LH	1	Handle	Handtag	5
1320	12	95 82 453		90), RH	1	Handle	Handtag	5
1330	12	41 29 292		100), LH	1	Handle	Handtag	5
1340	12	41 29 300		100), RH	1	Handle	Handtag	5
1350								
1360	13	73 99 264			4	Screw	Skruv	5
1370	14	42 63 455		210)	2	Cover washer	Täckbricka	5
1380	14	98 90 146		70)	2	Cover washer	Täckbricka	5
1390	14	96 75 596		80)	2	Cover washer	Täckbricka	5
1400	14	95 82 297		90)	2	Cover washer	Täckbricka	5
1410	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1420								
1430	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1440	15	98 90 153		70)	2	Cover washer	Täckbricka	5
1450	15	96 75 604		80)	2	Cover washer	Täckbricka	5
1460	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1470	15	41 29 284		100)	2	Cover washer	Täckbricka	5
1480								
1490	16	79 74 231			20	Cage nut	Korgmutter	5
1500	17	97 79 844			2	Bracket	Hållare	6
1510	18	79 72 490			4	Rivet	Nit	5
1520	19	42 68 249		LH	1	Upholstery	Klädsel	6
1530	19	42 68 231		RH	1	Upholstery	Klädsel	6
1540	20	96 60 143			22	Clamp	Klammer	5
1550	21	80 59 396			2	Screw	Skruv	5
1560	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
1570	23	96 60 820			4	Clamp	Klämma	6
1580	24	97 97 200			2	Washer	Bricka	5
1590	25	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1600	26	42 70 047			8	Clamp	Klämma	3
1610	29	96 78 996		18)	2	Clamp	Klämma	5

18. For cars with door fan För bilar med dörrfläkt
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F10

Door trim 1993
Rear door

Dörrklädsel 1993
Bakdörr

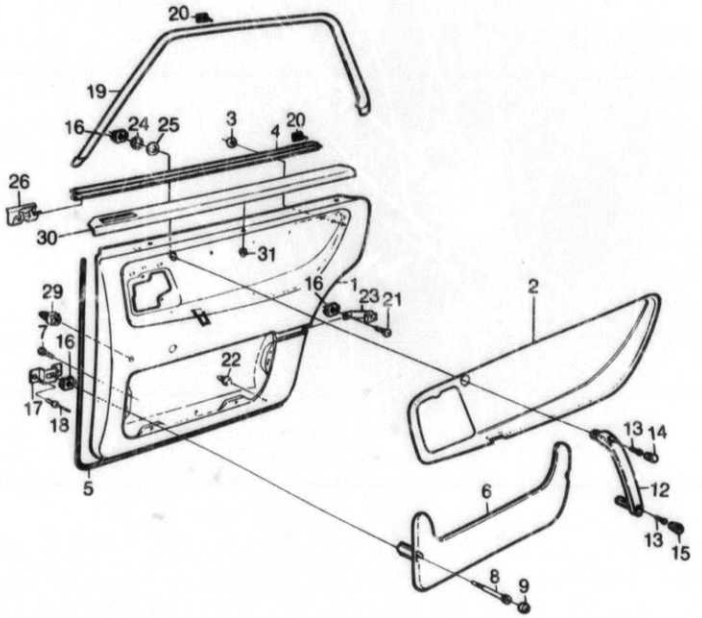

F4582 CAC90

1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1620	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
1640	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
1660	31	73 98 423			6	Nut	Mutter	5

18. For cars with door fan För bilar med dörrfläkt

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F12

Luggage compartment
Bagagerum

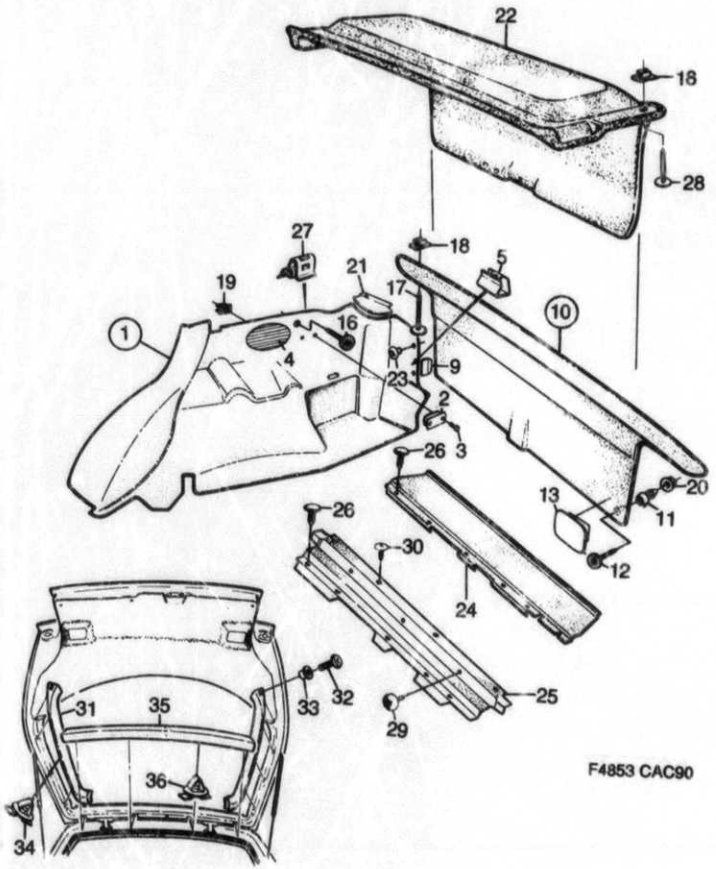

1340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 51 660		-1991, 5D, LH	1	Upholstery	Klädsel	6
0020	1	40 51 652		-1991, 5D, LH	1	Upholstery	Klädsel	6
0030						without electrical antenn	utan elantenn	
0040	1	40 51 678		-1991, 5D, RH	1	Upholstery	Klädsel	6
0050	1	40 34 013		1992-, 5D, LH	1	Upholstery	Klädsel	5
0060	1	40 34 039		1992-, 5D, RH	1	Upholstery	Klädsel	5
0070								
0080	1	90 84 575		5CS, LH	1	Upholstery	Klädsel	5
0090	1	90 84 567		5CS, RH	1	Upholstery	Klädsel	5
0100								
0110	1	95 45 468		-1991, 4D, LH	1	Upholstery	Klädsel	6
0120	1	95 45 476		-1991, 4D, LH	1	Upholstery	Klädsel	6
0130						without electrical antenn	utan elantenn	
0140	1	*95 45 484*		1990, 4D, RH NLS - USE 4141776	1	Upholstery	Klädsel	6
0150	1	41 41 776		1991, 4D, RH	1	Upholstery	Klädsel	6
0160	1	41 35 976		1992-, 4D, LH	1	Upholstery	Klädsel	6
0170	1	41 35 984		1992-, 4D, RH	1	Upholstery	Klädsel	6
0180	2			RH, 4D, 5CS	1	.Lamp	.Lampa	
0190				1992-, RH, 5D	1			
0200				See page 3A-069, 2-C22				
0210	3			RH	2	.Screw	.Skruv	
0220				See page 3A-069, 2-C22				
0230	4			RH, 4D, 5CS	1	.Grille	.Galler	
0240				1992-, RH, 5D	1			
0250				See page 8B-191, 6-H24				
0260	5	41 40 315		5CS	1	.Clamp	.Klämma	6
0270	9	42 69 874		5CS	1	Plate	Plåt	
0280	10	*97 54 839*		5D NLS - USE 9658998	1	Upholstery	Klädsel	6
0290	10	96 58 998		5D	1	Upholstery	Klädsel	6
0300						high mounted stop light	högt monterad stopplyckta	
0310	10	90 83 395		5CS	1	Upholstery	Klädsel	6
0320	11	97 86 997		5D	6	.Clamp	.Klämma	6
0330	12	94 91 689		5CS	2	.Special screw	.Snabbskruv	5
0340	13	90 84 633		5CS	2	.Cover	.Kåpa	5
0350	16	94 64 926		184), 5D	1	Special screw	Snabbskruv	5
0360	16	94 91 689		185)-1991, 5D	1	Special screw	Snabbskruv	5
0370	16	96 68 153		-1991, 4D	4	Clip	Clips	5
0380	17	94 23 658		184)	X	Special screw	Snabbskruv	5
0390	17	94 91 689		185)	X	Special screw	Snabbskruv	5
0400	18	84 52 898			X	Quick nut	Snabbmutter	3
0410	19	84 52 898		-1991, 5D	X	Quick nut	Snabbmutter	3
0420	19	94 73 877		-1991, 4D	2	Sleeve	Hylsa	5
0430	20	94 73 877			6	Sleeve	Hylsa	5
0440	21	97 95 808		-1991, 5D	2	Bracket	Hållare	5
0450	21	42 69 791		1992-, 5D	2	Bracket	Hållare	5
0460	22	*40 54 979*		280), 4D NLS - USE 4268348	1	Upholstery	Klädsel	6
0470	22	42 68 355		281), 4D	1	Upholstery	Klädsel	6
0480	23	40 87 029		5CS	4	Push nut	Tryckmutter	6
0490	24	*96 58 899*		-1991, 4D NLS - USE 4141644	1	Upholstery	Klädsel	6
0500	24	41 41 644		1992-, 4D	1	Upholstery	Klädsel	6
0510	25	90 88 659		5CS	1	Sill protection	Tröskelskydd	5
0520	26	96 68 153		-1991, 4D	5	Clip	Clips	5
0530	26	96 68 153		1992-, 4D, 5CS	3	Clip	Clips	5
0540	27	96 90 264		4D	6	Clamp	Klämma	5
0550	28	94 91 689		4D	6	Special screw	Snabbskruv	5
0560	29	95 91 637		5CS	3	Cover	Täcklock	5

184. Ch. --M1011372, --M2007558
185. Ch. M1011373--, M2007559--
280. Ch. --N1036359
281. Ch. N1036360--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX


Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Upholstery

6-F14 Luggage compartment

Klädsel

Bagagerum

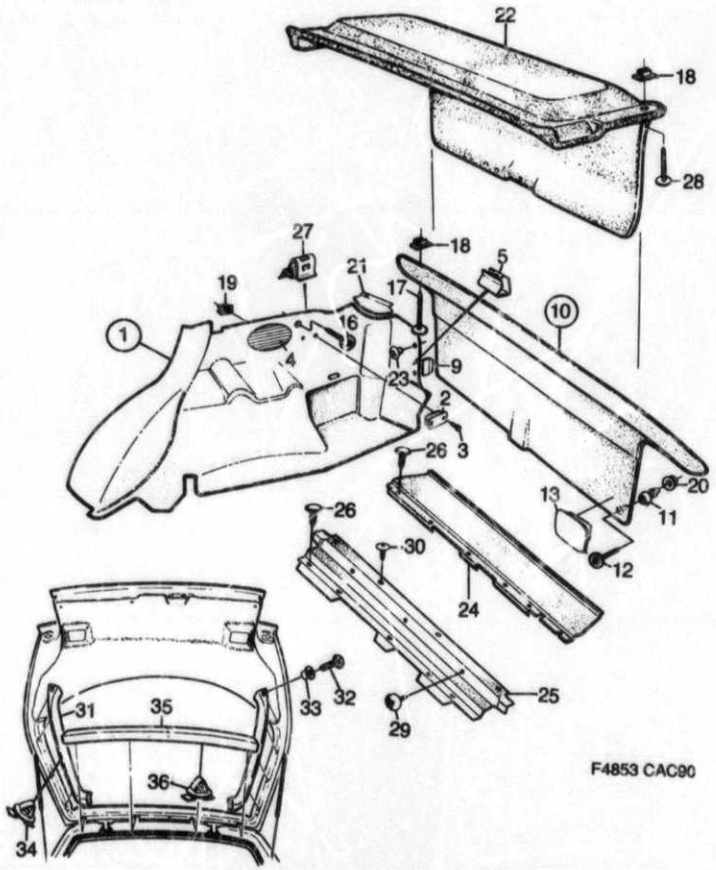

F4853 CAC90

1340	Pos	Part No/Art. nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
							Skruv	5
0570	30	97 71 320		5CS	4	Screw	Stötskydd	6
0580	31	90 87 412		5CS, LH	1	Crash pad	Stötskydd	6
0590	31	90 87 404		5CS, RH	1	Crash pad	.Skruv	5
0600	32	97 71 320		5CS	1	.Screw	.Hylsa	5
0610	33	42 62 242		5CS	1	.Sleeve	.Clips	5
0620	34	90 87 438		5CS	3	.Clip	Stötskydd	6
0630	35	90 87 420		5CS	1	Crash pad	.Clips	5
0640	36	90 87 438		5CS	4	.Clip		


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F16

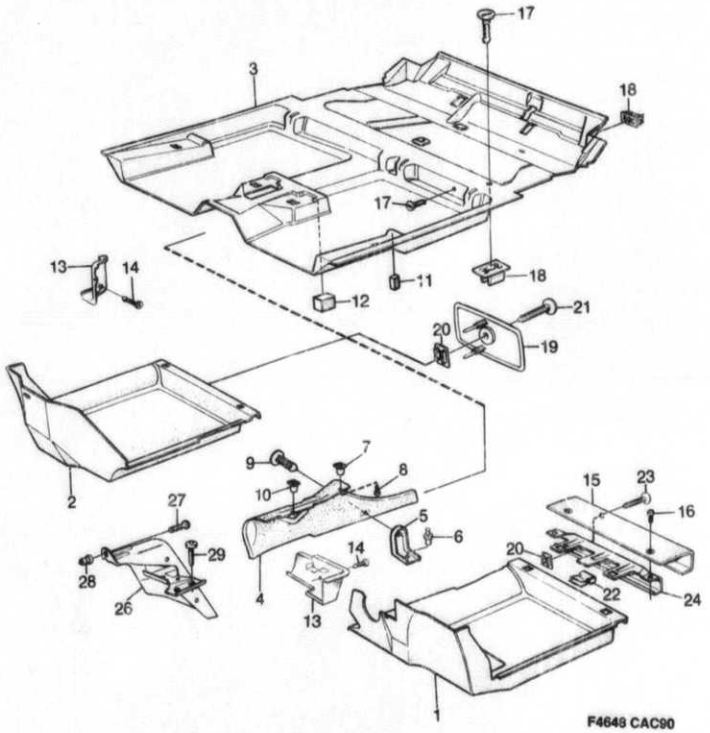

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020				TRIM COLOUR C24,C44,C33				
0025	1	40 52 338		60), LH	1	Carpet	Matta	6
0030	2	40 52 353		60), RH	1	Carpet	Matta	6
0040	1	40 52 387		60), LH, RHD	1	Carpet	Matta	6
0050	2	40 52 361		60), RH, RHD	1	Carpet	Matta	6
0060	3	*40 51 843*		60) NLS - USE 4129706	1	Carpet	Matta	6
0070	3	*40 51 959*		60), 4D NLS - USE 4129789	1	Carpet	Matta	6
0080	4	96 90 603		60), LH	1	Carpet	Matta	6
0090	4	96 90 652		60), RH	1	Carpet	Matta	6
0100	4	96 90 702		60), LH, RHD	1	Carpet	Matta	6
0110	4	96 90 751		60), RH, RHD	1	Carpet	Matta	6
0130				TRIM COLOUR E24, E44, E33, E53, H33				
0140								
0145	1	*40 52 452*		70), LH NLS - USE 4264644	1	Carpet	Matta	6
0150	2	*40 52 478*		70), RH NLS - USE 4499794	1	Carpet	Matta	6
0160	1	*40 52 502*		70), LH, RHD NLS - USE 4510285	1	Carpet	Matta	6
0170	2	*40 52 486*		70), RH, RHD NLS - USE 4264651	1	Carpet	Matta	6
0180	3	*40 51 876*		70) NLS - USE 4264941	1	Carpet	Matta	6
0190	3	40 51 967		70), 4D	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	6
0210	4	96 90 678		70), RH	1	Carpet	Matta	6
0220	4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0260				TRIM COLOUR F24,F44,F33				
0265	1	*40 52 395*		80), LH NLS - USE 4264669	1	Carpet	Matta	6
0270	2	*40 52 411*		80), RH NLS - USE 4264784	1	Carpet	Matta	6
0280	1	40 52 445		80), LH, RHD	1	Carpet	Matta	6
0290	2	40 52 429		80), RH, RHD	1	Carpet	Matta	6
0300	3	*40 51 850*		80) NLS - USE 4264958	1	Carpet	Matta	6
0310	3	*40 51 975*		80), 4D NLS - USE 4265054	1	Carpet	Matta	6
0320	4	96 90 637		80), LH	1	Carpet	Matta	6
0330	4	96 90 686		80), RH	1	Carpet	Matta	6
0340	4	96 90 736		80), LH, RHD	1	Carpet	Matta	6
0350	4	96 90 785		80), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR G24,G44,G33				
0385	1	*40 52 510*		90), LH NLS - USE 4264685	1	Carpet	Matta	6
0390	2	*40 52 536*		90), RH NLS - USE 4499810	1	Carpet	Matta	6
0400	1	40 52 569		90), LH, RHD	1	Carpet	Matta	6
0410	2	40 52 544		90), RH, RHD	1	Carpet	Matta	6
0420	3	*40 51 884*		90) NLS - USE 4264966	1	Carpet	Matta	6
0430	3	40 51 983		90), 4D	1	Carpet	Matta	6
0440	4	95 80 911		90), LH	1	Carpet	Matta	6
0450	4	95 80 929		90), RH	1	Carpet	Matta	6
0460	4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0470	4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0480								
0490	5	96 63 345		LH	1	Bracket	Fäste	5
0500	5	96 63 352		RH	1	Bracket	Fäste	5
0510	6	98 49 514			2	Rivet	Nit	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F18

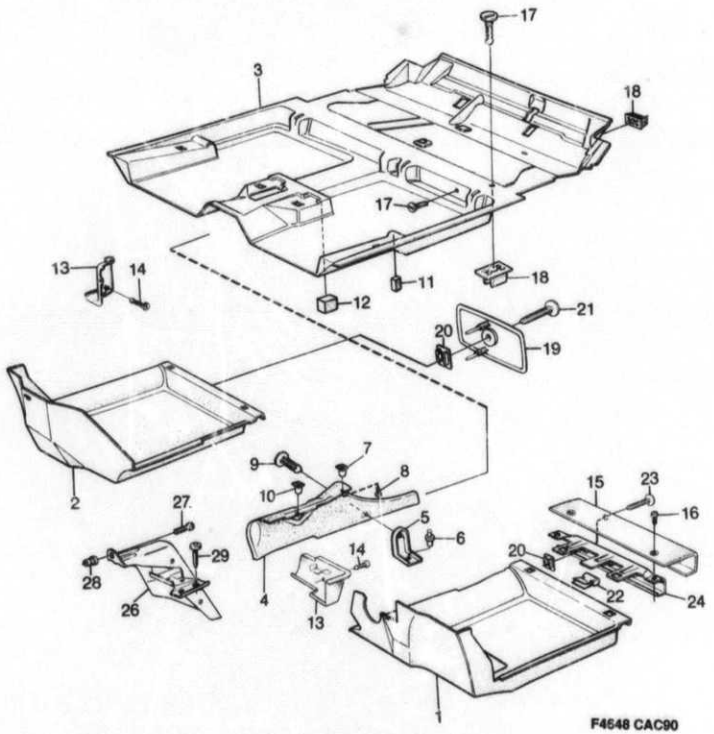

F4648 CAC90

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	7	79 77 358			2	Press nut	Pressmutter	5
0530	8	97 71 320			2	Screw	Skruv	5
0540	9	96 68 120		60)	4	Clip	Clips	5
0550	9	96 68 153		70)	4	Clip	Clips	5
0560	9	96 75 646		80)	4	Clip	Clips	5
0570	9	95 80 846		90)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5
0600	12	98 97 901			2	Spacer	Mellanlägg	5
0610								
0620	13	96 92 781		60), RHD	1	Cover	Kåpa	6
0630	13	96 92 807		70), RHD	1	Cover	Kåpa	6
0640	13	96 90 926		80), RHD	1	Cover	Kåpa	6
0650	13	95 80 853		90), RHD	1	Cover	Kåpa	6
0660								
0670	14	96 59 434		60)	1	Special screw	Snabbskruv	5
0680	14	94 91 689		70)	1	Special screw	Snabbskruv	5
0690	14	96 75 653		80)	1	Special screw	Snabbskruv	5
0700	14	95 80 861		90)	1	Special screw	Snabbskruv	5
0710								
0720	15	40 42 933		60)	1	Cover	Kåpa	6
0730	15	40 42 941		70)	1	Cover	Kåpa	6
0740	15	40 42 958		80)	1	Cover	Kåpa	6
0750	15	40 42 966		90)	1	Cover	Kåpa	6
0760								
0770	16	79 77 283			1	Screw	Skruv	5
0780	17	96 59 434		60), 4D	4	Special screw	Snabbskruv	5
0790	17	94 91 689		70), 4D	4	Special screw	Snabbskruv	5
0800	17	96 75 653		80), 4D	4	Special screw	Snabbskruv	5
0810	17	95 80 861		90), 4D	4	Special screw	Snabbskruv	5
0820	18	84 52 898		4D	4	Quick nut	Snabbmutter	3
0830	19	95 47 993			1	Cover test connector	Kåpa diagnostikuttag	6
0840								
0850	20	84 52 898			2	Quick nut	Snabbmutter	3
0860	21	98 67 821			1	Special screw	Snabbskruv	5
0870	22	40 48 401			2	Clamp	Klämma	5
0880	23	94 91 689			1	Special screw	Snabbskruv	5
0890	24	41 38 590			1	Cover	Kåpa	6
0900	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
0910	27	79 77 283		RHD	1	Screw	Skruv	5
0920	28	73 98 936		RHD	1	Nut	Mutter	5
0930	29	79 77 366		RHD	2	Screw	Skruv	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F20

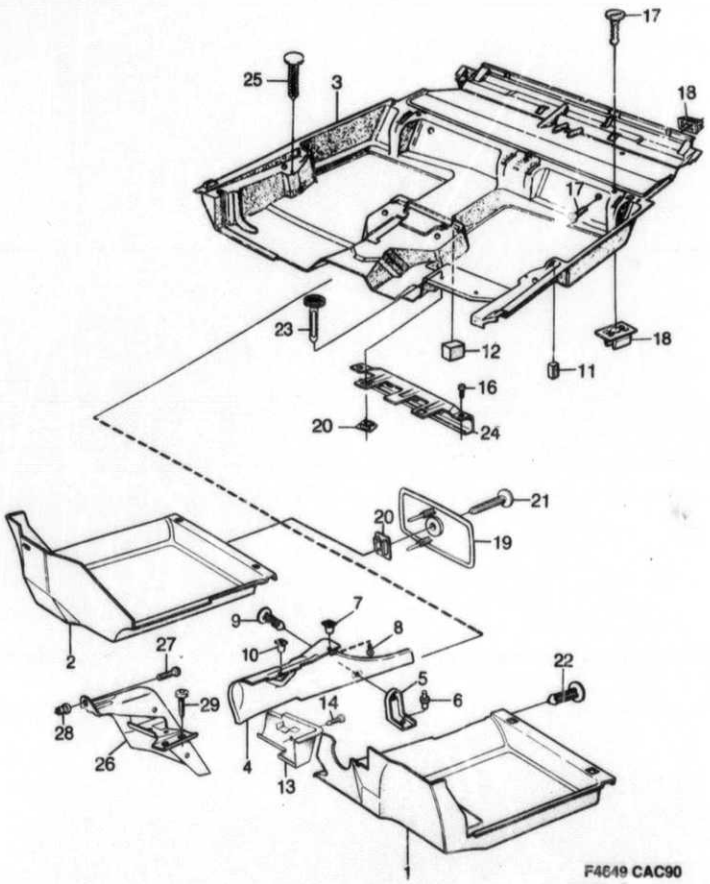

F4649 CAC90

1375 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020			TRIM COLOUR C24,C44,C33				
0025 1	41 29 456		60), LH	1	Carpet	Matta	6
0030 2	41 29 540		60), RH	1	Carpet	Matta	6
0040 1	41 29 565		60), LH, RHD	1	Carpet	Matta	6
0050 2	41 29 474		60), RH, RHD	1	Carpet	Matta	6
0060 3	41 29 706		60)	1	Carpet	Matta	6
0070 3	41 29 789		60), 4D	1	Carpet	Matta	6
0080 4	96 90 603		60), LH	1	Carpet	Matta	6
0090 4	96 90 652		60), RH	1	Carpet	Matta	6
0100 4	96 90 702		60), LH, RHD	1	Carpet	Matta	6
0110 4	96 90 751		60), RH, RHD	1	Carpet	Matta	6
0130			TRIM COLOUR E24,E44,E33, E53, H24,H44,H33,H53				
0140							
0145 1	*41 29 482*		70), LH NLS - USE 4264644	1	Carpet	Matta	6
0145							
0150 2	*41 29 581*		70), RH NLS - USE 4499794	1	Carpet	Matta	6
0150							
0160 1	*41 29 607*		70), LH, RHD NLS - USE 4510285	1	Carpet	Matta	6
0160							
0170 2	*41 29 490*		70), RH, RHD NLS - USE 4264651	1	Carpet	Matta	6
0170							
0180 3	*41 29 714*		70) NLS - USE 4264941	1	Carpet	Matta	6
0190 3	41 29 797		70), 4D	1	Carpet	Matta	6
0200 4	96 90 629		70), LH	1	Carpet	Matta	6
0210 4	96 90 678		70), RH	1	Carpet	Matta	6
0220 4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230 4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0260			TRIM COLOUR F24,F44,F33				
0265 1	41 29 508		80), LH	1	Carpet	Matta	6
0270 2	41 29 623		80), RH	1	Carpet	Matta	6
0280 1	41 29 649		80), LH, RHD	1	Carpet	Matta	6
0290 2	41 29 516		80), RH, RHD	1	Carpet	Matta	6
0300 3	41 29 722		80)	1	Carpet	Matta	6
0310 3	*41 29 805*		80), 4D NLS - USE 4265054	1	Carpet	Matta	6
0310							
0320 4	96 90 637		80), LH	1	Carpet	Matta	6
0330 4	96 90 686		80), RH	1	Carpet	Matta	6
0340 4	96 90 736		80), LH, RHD	1	Carpet	Matta	6
0350 4	96 90 785		80), RH, RHD	1	Carpet	Matta	6
0380			TRIM COLOUR G24,G44,G33				
0385 1	*41 29 524*		90), LH NLS - USE 4264685	1	Carpet	Matta	6
0385							
0390 2	41 29 664		90), RH	1	Carpet	Matta	6
0400 1	41 29 680		90), LH, RHD	1	Carpet	Matta	6
0410 2	41 29 532		90), RH, RHD	1	Carpet	Matta	6
0420 3	41 29 730		90)	1	Carpet	Matta	6
0430 3	*41 29 813*		90), 4D NLS - USE 4265062	1	Carpet	Matta	6
0430							
0440 4	95 80 911		90), LH	1	Carpet	Matta	6
0450 4	95 80 929		90), RH	1	Carpet	Matta	6
0460 4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0470 4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0480							
0490 5	96 63 345		LH	1	Bracket	Fäste	5
0500 5	96 63 352		RH	1	Bracket	Fäste	5
0510 6	98 49 514			2	Rivet	Nit	5
0520 7	79 77 358			2	Press nut	Pressmutter	5
0530 8	97 71 320			2	Screw	Skruv	5
0540 9	96 68 120		60)	4	Clip	Clips	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F22

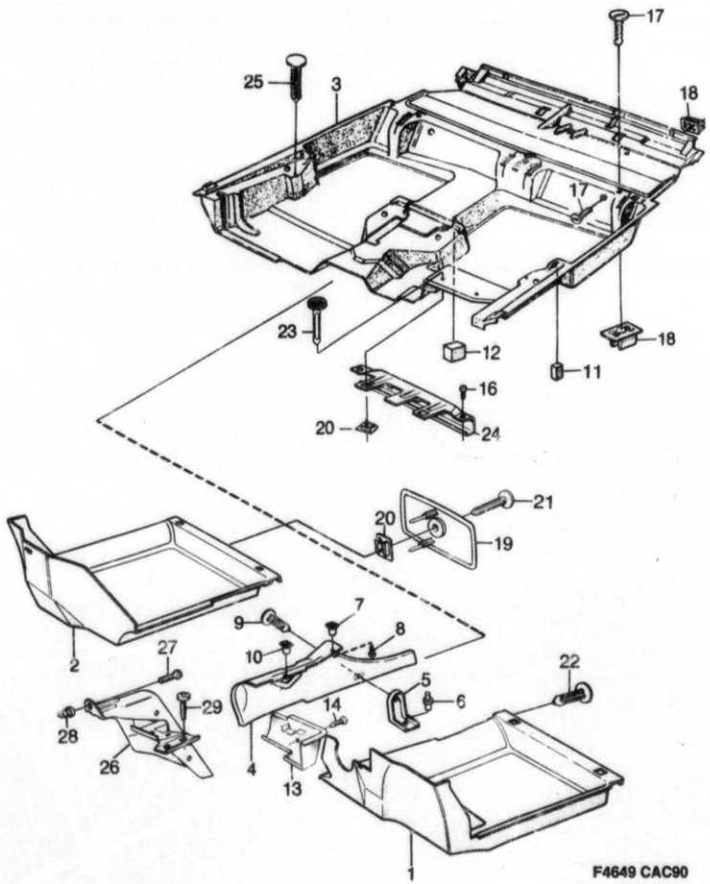

F4649 CAC90

1375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	9	96 68 153		70)	4	Clip	Clips	5
0560	9	96 75 646		80)	4	Clip	Clips	5
0570	9	95 80 846		90)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5
0600	12	98 97 901			2	Spacer	Mellanlägg	5
0610								
0625	13	41 36 412		60), RHD	1	Cover	Kåpa	6
0635	13	41 36 438		70), RHD	1	Cover	Kåpa	6
0645	13	41 36 420		80), RHD	1	Cover	Kåpa	6
0655	13	41 36 446		90), RHD	1	Cover	Kåpa	6
0660								
0670	14	96 59 434		60)	1	Special screw	Snabbskruv	5
0680	14	94 91 689		70)	1	Special screw	Snabbskruv	5
0690	14	96 75 653		80)	1	Special screw	Snabbskruv	5
0700	14	95 80 861		90)	1	Special screw	Snabbskruv	5
0710								
0770	16	79 77 283			1	Screw	Skruv	5
0780	17	96 59 434		60), 4D	4	Special screw	Snabbskruv	5
0790	17	94 91 689		70), 4D	4	Special screw	Snabbskruv	5
0800	17	96 75 653		80), 4D	4	Special screw	Snabbskruv	5
0810	17	95 80 861		90), 4D	4	Special screw	Snabbskruv	5
0820	18	84 52 898		4D	4	Quick nut	Snabbmutter	3
0830	19	95 47 993			1	Cover	Kåpa	6
0840						test connector	diagnostikuttag	
0850	20	84 52 898			3	Quick nut	Snabbmutter	3
0860	21	96 67 821			1	Special screw	Snabbskruv	5
0870	22	96 68 153			6	Clip	Clips	5
0880	23	94 91 689			2	Special screw	Snabbskruv	5
0890	24	41 38 590			1	Cover	Kåpa	6
0900	25	96 68 120		60)	2	Clip	Clips	5
0910	25	96 68 153		70)	2	Clip	Clips	5
0920	25	96 75 646		80)	2	Clip	Clips	5
0930	25	95 80 846		90)	2	Clip	Clips	5
0940	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
0950	27	79 77 283		RHD	1	Screw	Skruv	5
0960	28	73 98 936		RHD	1	Nut	Mutter	5
0970	29	79 77 366		RHD	2	Screw	Skruv	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-F24

Carpets 1992
Mattor 1992

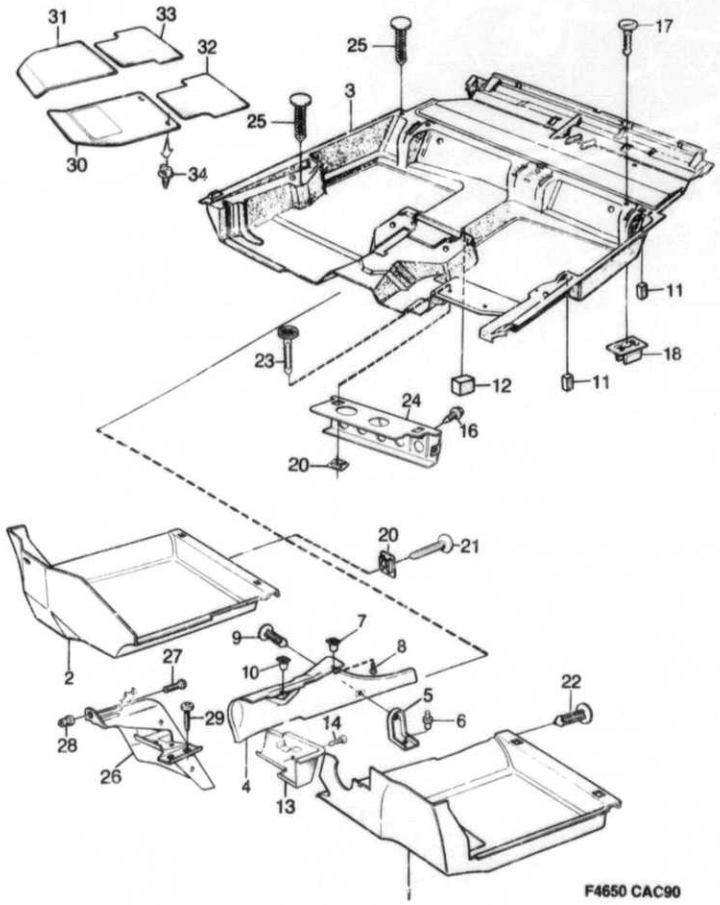

1380	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J24,J44,J33,				
0020				J53				
0025	1	42 61 244		210), LH	1	Carpet	Matta	6
0030	2	42 61 251		210), RH	1	Carpet	Matta	6
0040	1	42 61 293		210), LH, RHD	1	Carpet	Matta	6
0050	2	42 61 285		210), RH, RHD	1	Carpet	Matta	6
0060	3	42 61 376		210)	1	Carpet	Matta	6
0070	3	42 61 392		210), 4D	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	42 61 269		210), RH	1	Carpet	Matta	6
0100	4	42 61 319		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0130				TRIM COLOUR E24,E44,E33,				
0140				E53, H24,H44,H33,H53				
0145	1	42 64 644		70), LH	1	Carpet	Matta	6
0150	2	42 64 743		70), RH	1	Carpet	Matta	6
0160	1	42 64 768		70), LH, RHD	1	Carpet	Matta	6
0170	2	42 64 651		70), RH, RHD	1	Carpet	Matta	6
0180	3	42 64 941		70)	1	Carpet	Matta	6
0190	3	42 65 047		70), 4D	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	6
0210	4	96 90 678		70), RH	1	Carpet	Matta	6
0220	4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0260				TRIM COLOUR F24,F44,F33				
0265	1	42 64 669		80), LH	1	Carpet	Matta	6
0270	2	42 64 784		80), RH	1	Carpet	Matta	6
0280	1	42 64 800		80), LH, RHD	1	Carpet	Matta	6
0290	2	42 64 677		80), RH, RHD	1	Carpet	Matta	6
0300	3	42 64 958		80)	1	Carpet	Matta	6
0310	3	42 65 054		80), 4D	1	Carpet	Matta	6
0320	4	96 90 637		80), LH	1	Carpet	Matta	6
0330	4	96 90 686		80), RH	1	Carpet	Matta	6
0340	4	96 90 736		80), LH, RHD	1	Carpet	Matta	6
0350	4	96 90 785		80), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR G24,G44,G33				
0385	1	42 64 685		90), LH	1	Carpet	Matta	6
0390	2	*42 64 826*		90), RH NLS - USE	1	Carpet	Matta	6
0390.				4499810				
0400	1	42 64 842		90), LH, RHD	1	Carpet	Matta	6
0410	2	42 64 693		90), RH, RHD	1	Carpet	Matta	6
0420	3	42 64 966		90)	1	Carpet	Matta	6
0430	3	42 65 062		90), 4D	1	Carpet	Matta	6
0440	4	95 80 911		90), LH	1	Carpet	Matta	6
0450	4	95 80 929		90), RH	1	Carpet	Matta	6
0460	4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0470	4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0480								
0490	5	96 63 345		LH	1	Bracket	Fäste	5
0500	5	96 63 352		RH	1	Bracket	Fäste	5
0510	6	98 49 514			2	Rivet	Nit	5
0520	7	79 77 358			2	Press nut	Pressmutter	5
0530	8	97 71 320			2	Screw	Skruv	5
0540	9	42 60 824		210)	4	Clip	Clips	5
0550	9	96 68 153		70)	4	Clip	Clips	5
0560	9	96 75 646		80)	4	Clip	Clips	5
0570	9	95 80 846		90)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5

70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G02

Carpets 1992
Mattor 1932

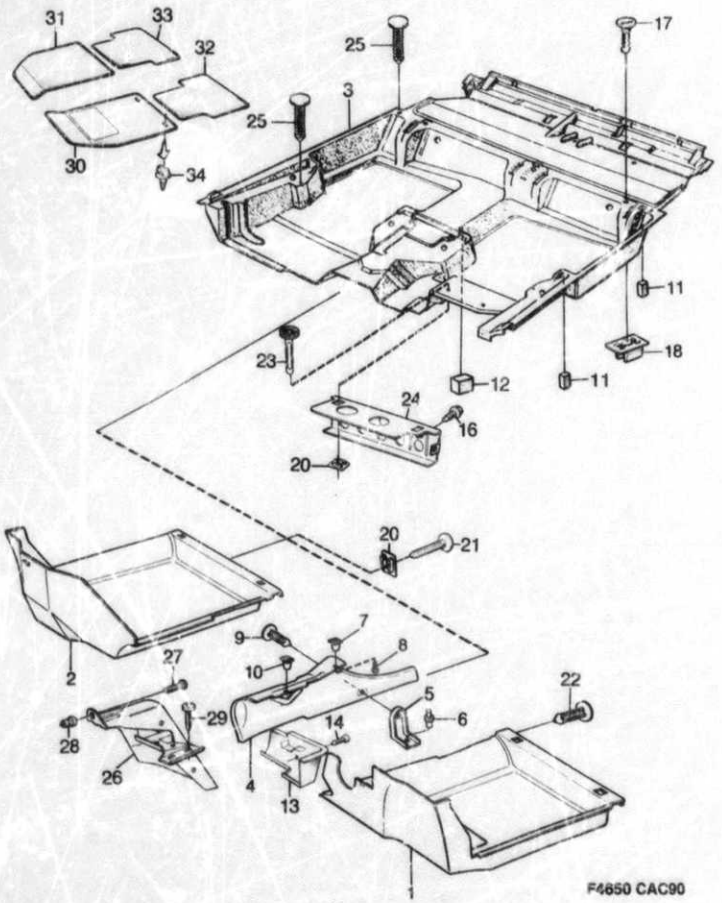

F4650 CAC90

1380	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	12	98 97 901			2	Spacer	Mellanlägg	5
0610								
0625	13	42 61 327		210), RHD	1	Cover	Kåpa	6
0635	13	41 36 438		70), RHD	1	Cover	Kåpa	6
0645	13	41 36 420		80), RHD	1	Cover	Kåpa	6
0655	13	41 36 446		90), RHD	1	Cover	Kåpa	6
0660								
0670	14	42 61 335		210)	1	Special screw	Snabbskruv	5
0680	14	94 91 689		70)	1	Special screw	Snabbskruv	5
0690	14	96 75 653		80)	1	Special screw	Snabbskruv	5
0700	14	95 80 861		90)	1	Special screw	Snabbskruv	5
0710								
0720	16	79 78 091			2	Screw	Skruv	5
0780	17	42 61 335		210), 4D	2	Special screw	Snabbskruv	5
0790	17	94 91 689		70), 4D	2	Special screw	Snabbskruv	5
0800	17	96 75 653		80), 4D	2	Special screw	Snabbskruv	5
0810	17	95 80 861		90), 4D	2	Special screw	Snabbskruv	5
0820	18	84 52 898		4D	2	Quick nut	Snabbmutter	3
0850	20	84 52 898			2	Quick nut	Snabbmutter	3
0870	22	96 68 153			7	Clip	Clips	5
0880	23	94 91 689			2	Special screw	Snabbskruv	5
0890	24	41 60 628			1	Carpet retainer	Matthållare	9
0900	25	42 60 824		210)	2	Clip	Clips	5
0910	25	96 68 153		70)	2	Clip	Clips	5
0920	25	96 75 646		80)	2	Clip	Clips	5
0930	25	95 80 846		90)	2	Clip	Clips	5
0940	26	96 58 600		RHD	1	Foot rest	Fotstöd	5
0950	27	79 77 283		RHD	1	Screw	Skruv	5
0960	28	73 98 936		RHD	1	Nut	Mutter	5
0970	29	79 77 366		RHD	2	Screw	Skruv	5
0980	30	42 69 890		210), LH, J53	1	Carpet	Matta	6
0990	30	42 69 965		210), LH, RHD, J53	1	Carpet	Matta	6
1000	31	42 69 908		210), RH, J53	1	Carpet	Matta	6
1010	31	42 69 973		210), RH, RHD, J53	1	Carpet	Matta	6
1020	32	42 69 916		210), LH, J53	1	Carpet	Matta	6
1030	33	42 69 924		210), RH, J53	1	Carpet	Matta	6
1040	34	42 69 932			2	Bracket	Fäste	6

70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G04

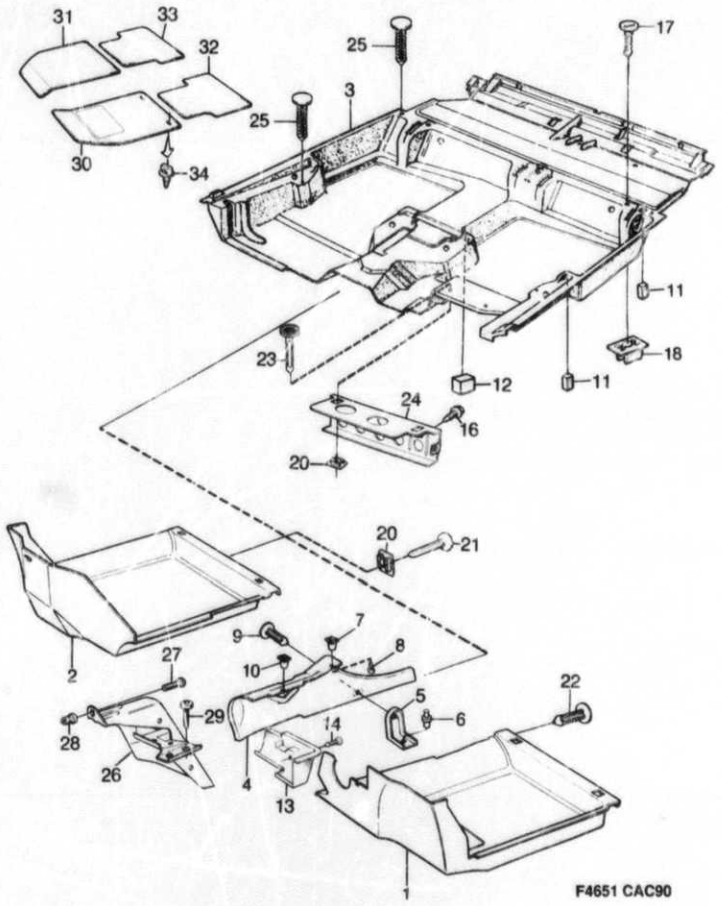

F4651 CAC90

1385	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				TRIM COLOUR J24,J44,J74, J33, J93 (J53)				
0020								
0025	1	42 61 244		210), LH	1	Carpet	Matta	6
0030	2	42 61 251		210), RH	1	Carpet	Matta	6
0040	1	42 61 293		210), LH, RHD	1	Carpet	Matta	6
0050	2	42 61 285		210), RH, RHD	1	Carpet	Matta	6
0060	3	42 61 376		210)	1	Carpet	Matta	6
0070	3	42 61 392		210), 4D	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	42 61 269		210), RH	1	Carpet	Matta	6
0100	4	42 61 319		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0130				TRIM COLOUR E24,E44,E74, E33,E53,E93, H24,H44,H74 H33,H53, K64,K35				
0140								
0141								
0145	1	42 64 644		70), LH	1	Carpet	Matta	6
0150	2	42 64 743		70), RH	1	Carpet	Matta	6
0160	1	42 64 768		70), LH, RHD	1	Carpet	Matta	6
0170	2	42 64 651		70), RH, RHD	1	Carpet	Matta	6
0180	3	42 64 941		70)	1	Carpet	Matta	6
0190	3	42 65 047		70), 4D	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	6
0210	4	96 90 678		70), RH	1	Carpet	Matta	6
0220	4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0260				TRIM COLOUR F24,F44,F74, F33				
0261								
0265	1	42 64 669		80), LH	1	Carpet	Matta	6
0270	2	42 64 784		80), RH	1	Carpet	Matta	6
0280	1	42 64 800		80), LH, RHD	1	Carpet	Matta	6
0290	2	42 64 677		80), RH, RHD	1	Carpet	Matta	6
0300	3	42 64 958		80)	1	Carpet	Matta	6
0310	3	42 65 054		80), 4D	1	Carpet	Matta	6
0320	4	96 90 637		80), LH	1	Carpet	Matta	6
0330	4	96 90 686		80), RH	1	Carpet	Matta	6
0340	4	96 90 736		80), LH, RHD	1	Carpet	Matta	6
0350	4	96 90 785		80), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR G24,G44,G74, G33				
0381								
0385	1	42 64 685		90), LH	1	Carpet	Matta	6
0390	2	*42 64 826*		90), RH NLS - USE 4499810	1	Carpet	Matta	6
0390								
0400	1	42 64 842		90), LH, RHD	1	Carpet	Matta	6
0410	2	42 64 693		90), RH, RHD	1	Carpet	Matta	6
0420	3	42 64 966		90)	1	Carpet	Matta	6
0430	3	42 65 062		90), 4D	1	Carpet	Matta	6
0440	4	95 80 911		90), LH	1	Carpet	Matta	6
0450	4	95 80 929		90), RH	1	Carpet	Matta	6
0460	4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0470	4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0480								
0490	5	96 63 345		LH	1	Bracket	Fäste	5
0500	5	96 63 352		RH	1	Bracket	Fäste	5
0510	6	98 49 514			2	Rivet	Nit	5
0520	7	79 77 358			2	Press nut	Pressmutter	5
0530	8	97 71 320			2	Screw	Skruv	5
0540	9	42 60 824		210)	4	Clip	Clips	5
0550	9	96 68 153		70)	4	Clip	Clips	5
0560	9	96 75 646		80)	4	Clip	Clips	5

70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G06

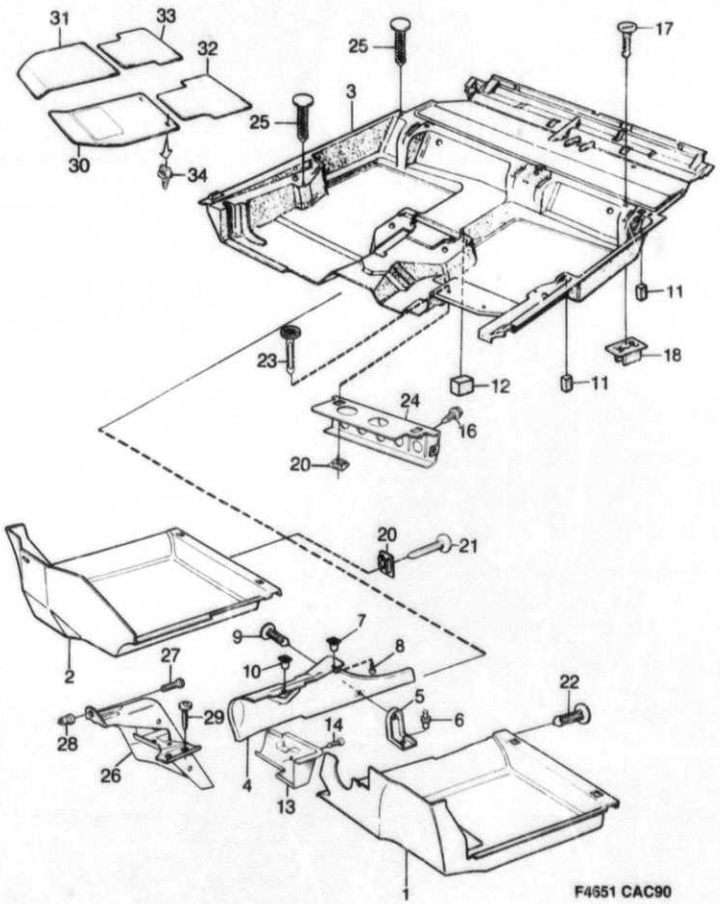

F4651 CAC90

1385	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	9	95 80 846		90)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5
0600	12	98 97 901			2	Spacer	Mellanlägg	5
0610								
0625	13	42 61 327		210), RHD	1	Cover	Kåpa	6
0635	13	41 36 438		70), RHD	1	Cover	Kåpa	6
0645	13	41 36 420		80), RHD	1	Cover	Kåpa	6
0655	13	41 36 446		90), RHD	1	Cover	Kåpa	6
0660								
0670	14	42 61 335		210)	1	Special screw	Snabbskruv	5
0680	14	94 91 689		70)	1	Special screw	Snabbskruv	5
0690	14	96 75 653		80)	1	Special screw	Snabbskruv	5
0700	14	95 80 861		90)	1	Special screw	Snabbskruv	5
0710								
0720	16	79 78 091			2	Screw	Skruv	5
0780	17	42 61 335		210), 4D	2	Special screw	Snabbskruv	5
0790	17	94 91 689		70), 4D	2	Special screw	Snabbskruv	5
0800	17	96 75 653		80), 4D	2	Special screw	Snabbskruv	5
0810	17	95 80 861		90), 4D	2	Special screw	Snabbskruv	5
0820	18	84 52 898		4D	2	Quick nut	Snabbmutter	3
0850	20	84 52 898			2	Quick nut	Snabbmutter	3
0870	22	96 68 153			7	Clip	Clips	5
0880	23	94 91 689			2	Special screw	Snabbskruv	5
0890	24	41 60 628			1	Carpet retainer	Matthållare	9
0900	25	42 60 824		210)	2	Clip	Clips	5
0910	25	96 68 153		70)	2	Clip	Clips	5
0920	25	96 75 646		80)	2	Clip	Clips	5
0930	25	95 80 846		90)	2	Clip	Clips	5
0940	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0950	27	79 77 283		RHD	1	Screw	Skruv	5
0960	28	73 98 936		RHD	1	Nut	Mutter	5
0970	29	79 77 366		RHD	2	Screw	Skruv	5
0980	30	42 74 965		LH, J93	1	Carpet	Matta	6
0990	30	44 85 082		LH, RHD, J53	1	Carpet	Matta	6
0993	30	44 85 009		LH, E93	1	Carpet	Matta	6
0994	30	44 85 116		LH, RHD, E93	1	Carpet	Matta	6
1000	31	42 74 973		RH, J93	1	Carpet	Matta	6
1010	31	44 85 090		RH, RHD, J93	1	Carpet	Matta	6
1013	31	44 85 017		RH, E93	1	Carpet	Matta	6
1014	31	44 85 124		RH, RHD, E93	1	Carpet	Matta	6
1020	32	42 74 981		LH, J93	1	Carpet	Matta	6
1025	32	44 85 025		LH, E93	1	Carpet	Matta	6
1030	33	42 74 999		RH, J93	1	Carpet	Matta	6
1035	33	44 85 033		RH, E93	1	Carpet	Matta	6
1040	34	42 69 932			2	Bracket	Fäste	6

70. Grey Grå
80. Blue Blå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G08

Head- and pillar lining
Takklädsel,stolpklädsel

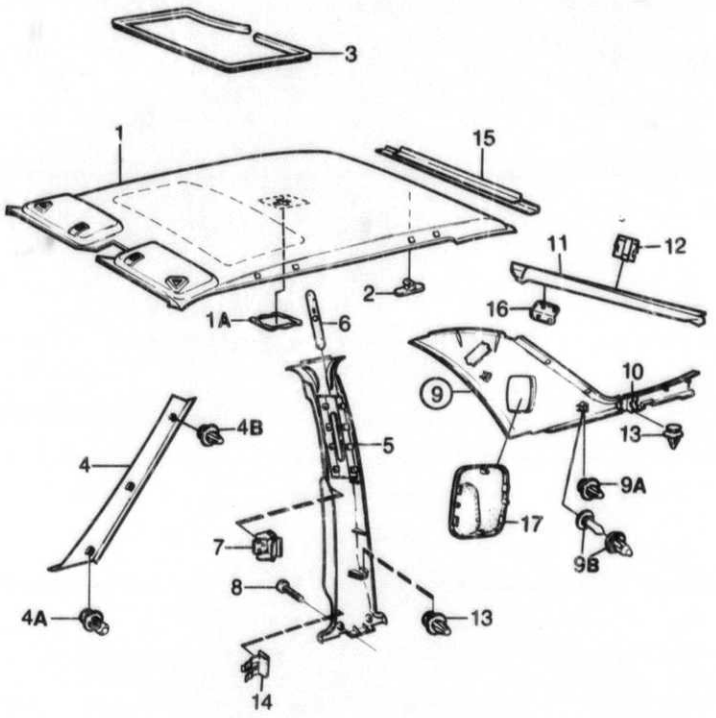

F4855 CAC90

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 93 294		5D	1	Head lining	Takklädsel	6
0020	1	42 60 188		5CS	1	Head lining	Takklädsel	6
0040	1	*95 83 980*		4D NLS - USE 4273652	1	Head lining	Takklädsel	6
0060	1	95 92 361		5D, SR	1	Head lining	Takklädsel	6
0070	1	42 60 196		5CS, SR	1	Head lining	Takklädsel	6
0090	1	95 84 004		4D, SR	1	Head lining	Takklädsel	6
0110	1A	97 56 974			1	.Protection	.Skydd	6
0120	2	97 85 031			1	Upholstery clip	Klädselfäste	5
0130	3	96 63 907		SR	1	Strip	List	6
0140								
0150	4	42 61 434		210,275), LH	1	Crash pad	Stötskydd	6
0160	4	42 61 426		210,275), RH	1	Crash pad	Stötskydd	6
0170								
0180	4	96 90 330		60,101), LH	1	Crash pad	Stötskydd	6
0190	4	41 40 661		60,102), -1991, LH	1	Crash pad	Stötskydd	6
0200	4	96 90 348		60,101), RH	1	Crash pad	Stötskydd	6
0210	4	41 40 679		60,102), -1991, RH	1	Crash pad	Stötskydd	6
0220								
0230	4	95 80 515		90,101), LH	1	Crash pad	Stötskydd	6
0240	4	41 40 745		90,102,275), LH	1	Crash pad	Stötskydd	6
0250	4	95 80 531		90,101), RH	1	Crash pad	Stötskydd	6
0260	4	41 40 752		90,102,275), RH	1	Crash pad	Stötskydd	6
0270								
0280	4	95 71 308		80,101), LH	1	Crash pad	Stötskydd	6
0290	4	41 40 729		80,102,275), LH	1	Crash pad	Stötskydd	6
0300	4	*95 71 316*		80,101), RH NLS - USE 4140737	1	Crash pad	Stötskydd	6
0310	4	41 40 737		80,102,275), RH	1	Crash pad	Stötskydd	6
0320								
0330	4	*96 90 397*		70,101), LH NLS - USE 4140703	1	Crash pad	Stötskydd	6
0340	4	41 40 703		70,102,276), LH	1	Crash pad	Stötskydd	6
0350	4	*96 90 405*		70,101), RH NLS - USE 4140711	1	Crash pad	Stötskydd	6
0360	4	41 40 711		70,102,276), RH	1	Crash pad	Stötskydd	6
0370								
0380	4	42 71 193		272), LH	1	Crash pad	Stötskydd	6
0390	4	42 71 201		272), RH	1	Crash pad	Stötskydd	6
0420	4A	94 73 869		101)	6	Clip	Clips	5
0430	4A	41 26 686		102,190)	3	.Clip	.Clips	5
0440	4A	95 48 389		191)	2	.Clip	.Clips	5
0450	4B	97 50 753		191)	1	.Clip	.Clips	5
0460								
0470	5	42 61 475		210), LH	1	Crash pad	Stötskydd	6
0480	5	42 61 467		210), RH	1	Crash pad	Stötskydd	6
0510	5	95 93 609		60), -1991, LH	1	Crash pad	Stötskydd	6
0520	5	95 93 617		60), -1991, RH	1	Crash pad	Stötskydd	6
0530	5	95 93 765		90), LH	1	Crash pad	Stötskydd	6
0540	5	95 93 773		90), RH	1	Crash pad	Stötskydd	6
0570	5	95 93 682		80), LH	1	Crash pad	Stötskydd	6
0580	5	95 93 690		80), RH	1	Crash pad	Stötskydd	6

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
101. Ch. --L1013305, --L2009552, --L8001491
102. Ch. L1013306--, L2009553--, L8001492--
190. Ch. --M1010340, --M2006867
191. Ch. M1010341--, M2006868--
210. Light beige Ljus beige
272. Head lining coloured Takklädselfärgad
275. Ch. --N1044532
276. Ch. --N1042975

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G10

Head- and pillar lining
Takklädsel,stolpklädsel

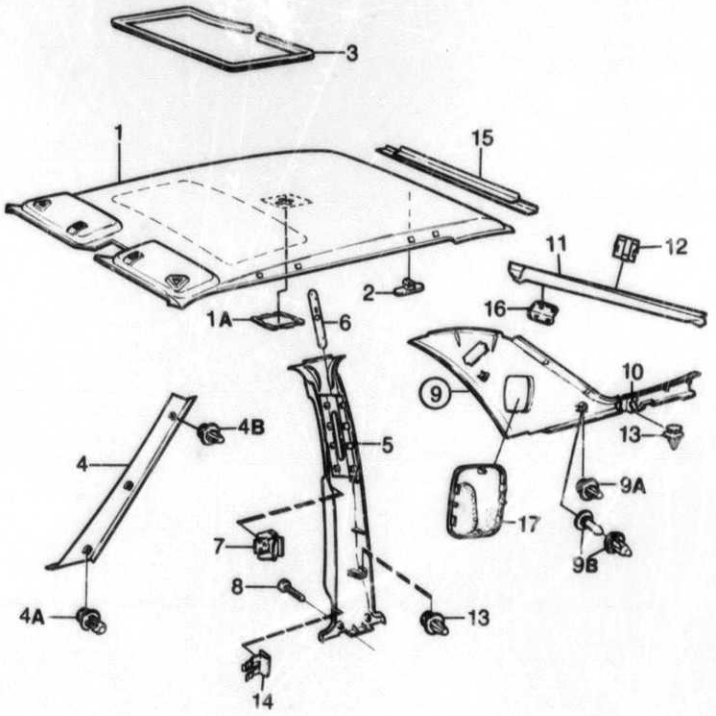

F4855 CAC90

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	5	95 93 724		70), LH	1	Crash pad	Stötskydd	6
0600	5	95 93 732		70), RH	1	Crash pad	Stötskydd	6
0610	5	*42 58 992*		100), LH NLS - USE 4486627	1	Crash pad	Stötskydd	6
0620	5	42 58 984		100), RH	1	Crash pad	Stötskydd	6
0680	6	95 86 371			2	Rail	Skena	5
0690	7	97 71 189			2	Clamp	Klämma	5
0700	8	79 75 337			4	Screw	Skruv	5
0710	9	*40 35 614*		-1991, 5D, LH NLS - USE 4267480	1	Crash pad	Stötskydd	6
0720	9	*40 35 622*		-1991, 5D, RH NLS - USE 4267498	1	Crash pad	Stötskydd	6
0730	9	42 67 480		1992-, 5D, LH	1	Crash pad	Stötskydd	6
0740	9	42 67 498		1992-, 5D, RH	1	Crash pad	Stötskydd	6
0760	9	41 29 383		-1991, 5D, LH	1	Crash pad without spotlight	Stötskydd utan spotlight	6
0780	9	41 29 391		-1991, 5D, RH	1	Crash pad without spotlight	Stötskydd utan spotlight	6
0800	9	42 67 522		1992-, 5D, LH	1	Crash pad without spotlight	Stötskydd utan spotlight	6
0820	9	42 67 530		1992-, 5D, RH	1	Crash pad without spotlight	Stötskydd utan spotlight	6
0850	9	42 60 246		5CS, LH	1	Crash pad	Stötskydd	6
0860	9	42 60 238		5CS, RH	1	Crash pad	Stötskydd	6
0900	9	95 84 087		1990, LH, 4D	1	Crash pad	Stötskydd	6
0910	9	95 84 103		1990, RH, 4D	1	Crash pad	Stötskydd	6
0920	9	*42 59 925*		1991, LH, 4D NLS - USE 4273595	1	Crash pad	Stötskydd	6
0930	9	*42 59 933*		1991, RH, 4D NLS - USE 4273603	1	Crash pad	Stötskydd	6
0940	9	42 67 563		1992-, LH, 4D	1	Crash pad	Stötskydd	6
0950	9	42 67 571		1992-, RH, 4D	1	Crash pad	Stötskydd	6
0980	9A	94 73 869		-1991	X	Clip	Clips	5
0990	9B	42 66 540		1992-	X	Clip	Clips	5
1000	10	97 71 965		LH	1	Strip	List	5
1010	10	97 71 973		RH	1	Strip	List	5
1030	11	40 49 268		230), LH	1	Crash pad	Stötskydd	6
1040	11	40 49 250		230), RH	1	Crash pad	Stötskydd	6
1050	11	42 60 154		231), LH	1	Crash pad	Stötskydd	6
1060	11	42 60 147		231), RH	1	Crash pad	Stötskydd	6
1070	12	97 65 611			6	Clamp	Klämma	5
1080	13	94 73 869			4	Clip	Clips	5
1090	14	97 95 709			2	Clamp	Klämma	5
1100	15	95 41 319			1	Strip	List	6
1110	16	97 56 776		230), LH	1	Cover	Täcklock	5
1120	16	97 56 784		230), RH	1	Cover	Täcklock	5
1130	17	96 91 262		LH	1	Grommet	Genomföring	5
1140	17	96 91 254		RH	1	Grommet	Genomföring	5

70. Grey Grå
100. Light grey Ljus grå
230. Ch. -N1010027
231. Ch. N1010028-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G12

Front seats Part 1
Stolar Del 1

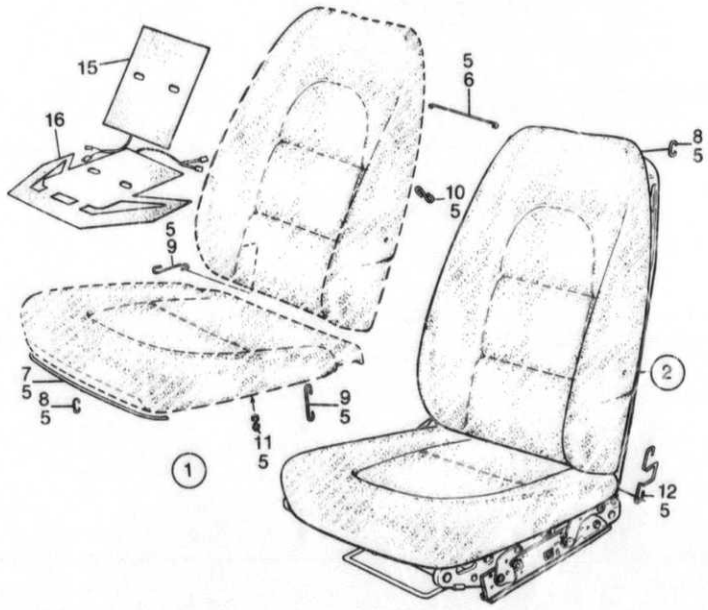

F5908 CAC90

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 98 929		21,24) 1990, LH	1	Seat	Stol	6
0020	1	96 98 937		21,24) 1990, RH	1	Seat	Stol	6
0030	1	96 98 945		21,24) 1990, RH, RHD	1	Seat	Stol	6
0040	1	96 98 952		21,24) 1990, LH, RHD	1	Seat	Stol	6
0050								
0060	1	96 98 960		22,24) 1990, LH	1	Seat	Stol	6
0070	1	96 98 978		22,24) 1990, RH	1	Seat	Stol	6
0080	1	96 98 986		22,24) 1990, RH, RHD	1	Seat	Stol	6
0090	1	96 98 994		22,24) 1990, LH, RHD	1	Seat	Stol	6
0100								
0110	1	96 98 887		23,24) 1990, LH	1	Seat	Stol	6
0120	1	96 98 895		23,24) 1990, RH	1	Seat	Stol	6
0130	1	96 98 903		23,24) 1990, RH, RHD	1	Seat	Stol	6
0140	1	96 98 911		23,24) 1990, LH, RHD	1	Seat	Stol	6
0150								
0160	1	43 68 007		19,215) 1991-, LH	1	Seat	Stol	6
0170	1	43 68 015		19,215) 1991-, RH	1	Seat	Stol	6
0180	1	43 68 031		19,215) 1991-, LH, RHD	1	Seat	Stol	6
0190	1	43 68 023		19,215) 1991-, RH, RHD	1	Seat	Stol	6
0200								
0210	1	43 68 049		25,24) 1991-, LH	1	Seat	Stol	6
0220	1	43 68 056		25,24) 1991-, RH	1	Seat	Stol	6
0230	1	43 68 072		25,24) 1991-, LH, RHD	1	Seat	Stol	6
0240	1	43 68 064		25,24) 1991-, RH, RHD	1	Seat	Stol	6
0250								
0260	2	*95 47 068*		21,22,151), 1990, LH NLS - USE 4257572, 8073108	1	.Seat frame	.Stolram	6
0270	2	40 48 740		21,22,151), 1990, RH	1	.Seat frame	.Stolram	6
0280	2	40 48 757		20,22,151), 1990, RH	1	.Seat frame	.Stolram	6
0290	2	42 57 572		21,22,151), 1991-, LH	1	.Seat frame	.Stolram	6
0300	2	41 34 797		21,22,148,151),1991, LH	1	.Seat frame	.Stolram	6
0310	2	42 57 622		21,22,151),1991-, RH	1	.Seat frame	.Stolram	6
0320	2	42 57 663		20,22,151),1991-1992, RH	1	.Seat frame	.Stolram	6
0330	2	43 09 589		20,22,151), 1993-, RH	1	.Seat frame	.Stolram	6
0350								
0360	2	*95 46 995*		21,22,151),1990, RH, RHD NLS - USE 4257580, 8073108	1	.Seat frame	.Stolram	6
0370	2	*95 47 894*		21,22,151),1990, LH, RHD NLS - USE 4257614, 8073108	1	.Seat frame	.Stolram	6
0380	2	95 47 977		20,22,151),1990, LH, RHD	1	.Seat frame	.Stolram	6
0390	2	42 57 580		21,22,151),1991-, RH, RHD	1	.Seat frame	.Stolram	6
0400	2	41 34 805		21,22,148,151), 1991, RH, RHD	1	.Seat frame	.Stolram	6
0420	2	42 57 614		21,22,151),1991-, LH,RHD	1	.Seat frame	.Stolram	6
0440	2	42 57 655		20,22,151),1991-,LH, RHD	1	.Seat frame	.Stolram	6
0450								
0460	2	*95 47 050*		23,151), 1990, LH NLS - USE 4257556, 8073108	1	.Seat frame	.Stolram	6
0470	2	*40 48 773*		23,151), 1990, RH NLS - USE 4257606, 8073108	1	.Seat frame	.Stolram	6

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
20. For seat with top edge height adjustment (high support) För stol med framkantsjustering
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K24
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
148. Without lumbar support Utan svankstöd
151. See following sections for contents Se följande avsnitt för ingående artiklar
215. State upholstery colour, ch No and if the chair is with or without pocket. Uppge klädselfärg, ch nr och om stolen är med eller utan ficka.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G14

Front seats Part 1
Stolar Del 1

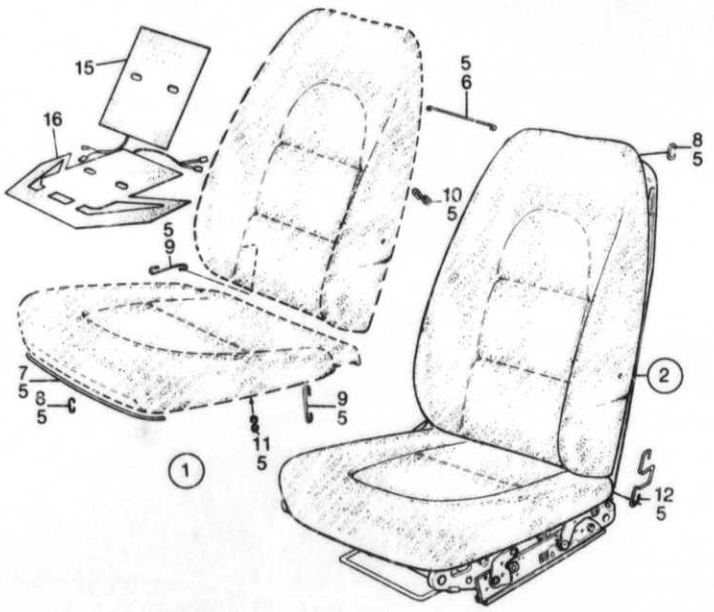

F5908 CAC90

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	2	40 48 765		20,23,151), 1990, RH	1	.Seat frame	.Stolram	6
0490	2	42 57 556		23,151), 1991-, LH	1	.Seat frame	.Stolram	6
0500	2	42 57 606		23,151), 1991-, RH	1	.Seat frame	.Stolram	6
0510	2	42 57 648		20,23,151), 1991-, RH	1	.Seat frame	.Stolram	6
0530								
0540	2	*95 47 043*		23,151), 1990, RH, RHD NLS - USE 4257564, 8073108	1	.Seat frame	.Stolram	6
0540								
0540								
0550	2	95 47 951		23,151), 1990, LH, RHD	1	.Seat frame	.Stolram	6
0560	2	95 47 837		20,23,151),1990, LH, RHD	1	.Seat frame	.Stolram	6
0570	2	42 57 564		23,151), 1991-, RH, RHD	1	.Seat frame	.Stolram	6
0580	2	42 57 598		23,151),1991-, LH, RHD	1	.Seat frame	.Stolram	6
0590	2	42 57 630		20,23,151),1991-,LH, RHD	1	.Seat frame	.Stolram	6
0600								
0610	5	96 97 939		21,22)	1	.Mounting kit	.Monteringssats	6
0620				See page 8B-215, 6-I24				
0630	5	96 71 751		23)	1	.Mounting kit	.Monteringssats	6
0640				See page 8B-215, 6-I24				
0650	6	97 81 592			2	..Cover rod	..Klädselbåge	5
0660	7	97 82 558		21,22)	1	..Cover rod	..Klädselbåge	5
0670	8	94 50 685			X	..Clamp	..Klammer	5
0680	9	97 69 209		40 MM	X	..Hook	..Krok	5
0690	10	97 69 217		21,22) 30 MM	14	..Hook	..Krok	5
0700	11	97 69 225		21,22) 20 MM	2	..Hook	..Krok	5
0710	12	95 93 245		21,22)	2	..Attaching brace	..Fästbygel	5
0720	15	95 19 877		19,251)	1	.Heating pad	.Värmedyna	4
0730	15	40 83 028		19,252)	1	.Heating pad	.Värmedyna	4
0740	15	95 69 955		25)	1	.Heating pad	.Värmedyna	4
0750	16	*95 28 704*		19,61) NLS - USE 4063871	1	.Heating pad	.Värmedyna	4
0760	16	40 63 871		19,62)	1	.Heating pad	.Värmedyna	4
0770	16	*95 27 706*		25,61) NLS - USE 4063855	1	.Heating pad	.Värmedyna	4
0780	16	40 63 855		25,62)	1	.Heating pad	.Värmedyna	4
0790		95 88 542		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6
0800		95 88 534		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6
0810						drivers seat	förarstol	
0820		95 88 559		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6
0830						passenger seat	passagerarstol	
0840		96 18 752		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
20. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K64
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
61. Ch. --L1002485, --L2001804, --L8000227
62. Ch. L1002486--, L2001805--, L8000228--
151. See following sections for contents Se följande avsnitt för ingående artiklar
251. Ch. --N1014392
252. Ch. N1014393--

MASTER INDEX


0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8B GROUP INDEX

Instrument panel 6-A06
Upholstery 6-A20
Other interior equipment 6-G12
Complete sets 6-I24

6-G16

Front seats Part 2
Stolar Del 2

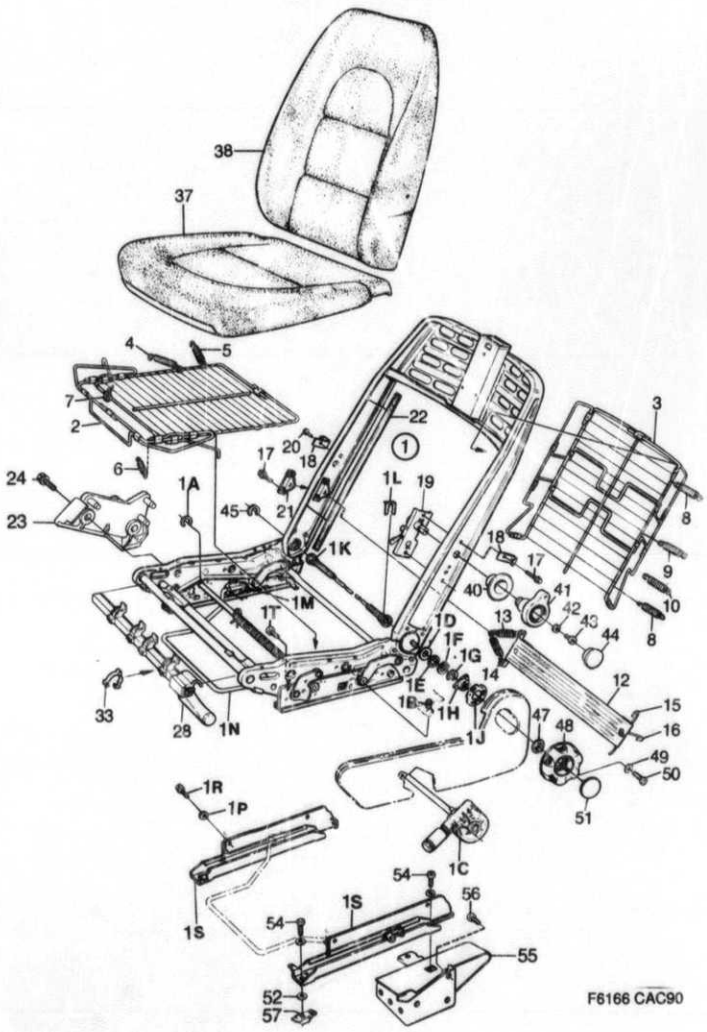

1475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-155, 6-G12		Seat	Stol	
0020				See page 8B-155, 6-G12		.Seat frame	.Stolram	
0030	1	*41 24 798*		1990, LH NLS - USE 4257671, 8073108	1	..Seat frame	..Stolram	6
0040	1	*41 25 209*		1990, RH NLS - USE 4123105, 8073108	1	..Seat frame	..Stolram	6
0050	1	42 57 671		1991-, LH	1	..Seat frame	..Stolram	6
0060	1	41 23 105		1991-, RH	1	..Seat frame	..Stolram	6
0080								
0090	1	*41 24 806*		1990, RH RHD NLS - USE 4257689, 8073108	1	..Seat frame	..Stolram	6
0100	1	*41 25 225*		1990, LH RHD NLS - USE 4257697, 8073108	1	..Seat frame	..Stolram	6
0110	1	42 57 689		1991-, RH RHD	1	..Seat frame	..Stolram	6
0120	1	42 57 697		1991-, LH RHD	1	..Seat frame	..Stolram	6
0130								
0140	1A	79 63 143		34)	1	...E-circlip	...Spårryttare	5
0150	1B	96 78 434		34)	4	...Stop ring	...Stoppring	5
0160	1C	96 58 584		34)	1	...Control	...Reglage	6
0170	1C	96 58 592		34), RHD	1	...Control	...Reglage	6
0180	1D	95 86 967			1	...Washer	...Bricka	5
0190	1E	95 86 975			1	...Ring	...Ring	5
0200	1F	95 86 983			1	...Washer	...Bricka	5
0210	1G	*79 36 016*		NLS - USE 8123473	1	...E-circlip	...Spårryttare	5
0220	1H	95 85 613			1	...Brake	...Broms	6
0230	1J	40 43 394			1	...Spring clamp	...Fjäderklämma	6
0240	1K	95 86 249			1	...Shaft	...Axel	6
0250	1L	97 77 327			2	...E-circlip	...Spårryttare	5
0260	1M	73 98 282			2	...Washer	...Bricka	5
0270	1N	96 59 012		34)	1	...Shaft	...Axel	6
0280	1N	96 59 020	S	35)	1	...Shaft	...Axel	6
0290	1P	79 16 497		35)	4	...Washer	...Bricka	5
0300	1R	79 72 623		35)	4	...Screw	...Skruv	5
0310	1S			34,166)	1	...Seat rail	...Stolskena	
0320	1S	40 48 286		35), 1990, LH	1	...Seat rail	...Stolskena	6
0330	1S	40 48 294		35), 1990, RH	1	...Seat rail	...Stolskena	6
0340	1S	41 34 672		35), 1991-, LH	1	...Seat rail	...Stolskena	6
0350	1S	41 34 680		35), 1991-, RH	1	...Seat rail	...Stolskena	6
0380	1S	95 47 852		35), 1990, LH, RHD	1	...Seat rail	...Stolskena	6
0390	1S	95 47 860		35), 1990, RH, RHD	1	...Seat rail	...Stolskena	6
0400	1S	42 55 832		35), 1991-, LH, RHD	1	...Seat rail	...Stolskena	6
0410	1S	42 55 840		35), 1991-, RH, RHD	1	...Seat rail	...Stolskena	6
0420	1T	80 19 713		34)	2	...Screw	...Skruv	5
0430	2	96 73 179		34)	1	..Wire matting	..Resårmatta	6
0440	2	96 73 450		35,198)	1	..Wire matting	..Resårmatta	6
0450	2	40 32 934		35,199)	1	..Wire matting	..Resårmatta	6
0460	2	96 73 179		20,35)	1	..Wire matting	..Resårmatta	6
0470	3	96 97 525			1	..Wire matting	..Resårmatta	6
0480	4	96 73 146			6	..Spring	..Fjäder	6
0490	5	96 73 435			2	..Spring	..Fjäder	6
0500	6	97 58 947		34)	2	..Spring	..Fjäder	6
0510	6	97 58 947		20,35)	2	..Spring	..Fjäder	6
0520	7	79 71 872		35)	2	..Tensioning band	..Spännband	5
0530	8	97 59 069			4	..Spring	..Fjäder	6
0540	9	97 59 077			2	..Spring	..Fjäder	6
0550	10	97 71 205		148)	2	..Spring	..Fjäder	6

20. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
34. Driver seat Förarstol
35. Passanger seat Passagerarstol
148. Without lumbar support Utan svankstöd
166. Part of pos 1 seat frame Ingår i pos 1 stolram
198. Ch. --M1017619, --M2011730
199. Ch. M1017620--, M2011731--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G18

Front seats Part 2
Stolar Del 2

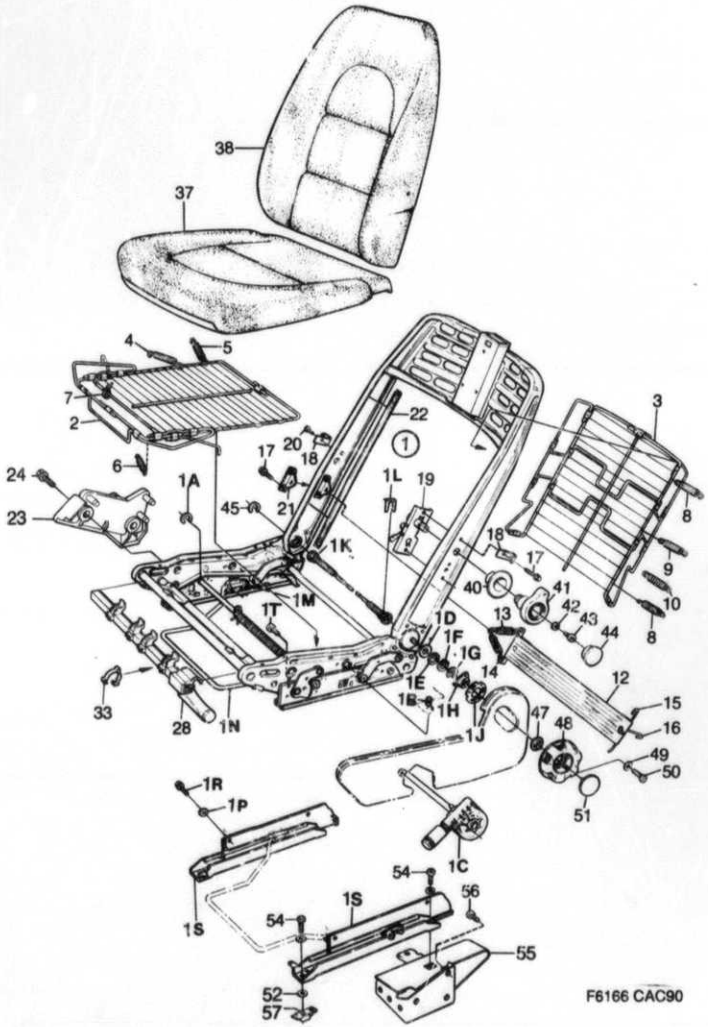

F6166 CAC90

1475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	12	97 70 918		34)	1	..Strip	..Band	6
0570	13	95 79 293		34)	2	..Spring	..Fjäder	6
0580	14	97 70 942		34)	1	..Brace	..Bygel	5
0590	15	97 70 926		34)	1	..Brace	..Bygel	5
0600	16	97 70 934		34)	1	..Hook	..Krok	5
0610	17	79 74 330		34)	4	..Screw	..Skruv	5
0620	18	97 78 895			2	..Brace	..Bygel	5
0630	19	96 17 325		34)	1	..Control	..Reglage	6
0640	19	96 17 333		34), RHD	1	..Control	..Reglage	6
0650	20	79 75 402		34), 1990	1	..Rivet	..Nit	5
0660	20	79 72 516		34), 1991-	1	..Rivet	..Nit	5
0670	20	79 75 402		35), 1990	2	..Rivet	..Nit	5
0680	20	79 72 516		35), 1991-	2	..Rivet	..Nit	5
0690	21	98 64 349		34)	1	..Bracket	..Konsol	5
0700	22	96 71 835			2	..Protecting moulding	..Skyddslist	6
0710	23	41 42 832		1991-,182), LH	1	..Support	..Stöd	6
0720	23	41 42 824		1991-,182), RH	1	..Support	..Stöd	6
0730	24	79 22 354		1991-,182)	2	..Screw	..Skruv	5
0740	28	96 60 853		34)	1	..Camshaft	..Kamaxel	6
0750	28	96 60 861		20,35)	1	..Camshaft	..Kamaxel	6
0760	28	96 60 861		34), RHD	1	..Camshaft	..Kamaxel	6
0770	28	96 60 853		20,35), RHD	1	..Camshaft	..Kamaxel	6
0780	33	97 67 518		34)	2	..Clamp	..Klämma	5
0790	33	97 67 518		20,35)	2	..Clamp	..Klämma	5
0800	37	*96 96 618*		19), -1992 NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
0810	37	44 16 525		19), 1993-	1	..Seat cushion	..Sittdyna	6
0820	37	96 77 014		25)	1	..Seat cushion	..Sittdyna	6
0830	38	*96 96 600*		19), -1992 NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
0840	38	42 92 934		19), 1993-	1	..Backrest cushion	..Ryggdyna	6
0850	38	97 58 715		25)	1	..Backrest cushion	..Ryggdyna	6
0860	40	97 85 015		34)	1	.Cover washer	.Täckbricka	6
0870	41	97 63 632		34)	1	.Steering wheel	.Ratt	5
0880	42	80 29 944		34)	1	.Washer	.Bricka	5
0890	43	80 59 396		34)	1	.Screw	.Skruv	5
0900	44	97 63 624		34)	1	.Cover	.Täcklock	6
0910	45	*79 15 077*		NLS - USE 7963143	1	.E-circlip	.Spårryttare	5
0920	47	95 89 045			1	.Reinforcement	.Förstärkning	5
0930	48	95 46 946			1	.Hand wheel	.Ratt	5
0940	49	80 29 951		-1992	1	.Washer	.Bricka	5
0950	49	91 66 364		1993-	1	.Washer	.Bricka	5
0960	50	80 59 560			1	.Screw	.Skruv	5
0970	51	98 51 619			1	.Cover	.Täcklock	6
0980	52	80 73 108		139)	4	.Washer	.Bricka	5
0990	54	97 81 204		1990	4	.Screw	.Skruv	5
1000	54	41 34 003		1991-	4	.Screw	.Skruv	5
1010	55	*97 81 162*		1990, LH NLS	1	.Bracket	.Konsol	5
1020	55	42 56 756		1991-, LH	1	.Bracket	.Konsol	5
1030	55	*97 82 210*		1990, RH NLS	1	.Bracket	.Konsol	5
1040	55	42 56 749		1991-, RH	1	.Bracket	.Konsol	5
1050	56	79 74 884			3	.Screw	.Skruv	5
1060	57	79 75 766			4	Cage nut	Korgmutter	5

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
20. For seat with top edge height adjustment (thigh support) För stol med framkantsjustering
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
34. Driver seat Förarstol
35. Passanger seat Passagerarstol
139. Use together with M91 rail for older cars Används tillsammans med M91 skena för äldre bilar
182. Ch. --M1010992, --M2007289
199. Ch. M1017620--, M2011731--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G20

Front seats Part 3
Stolar Del 3

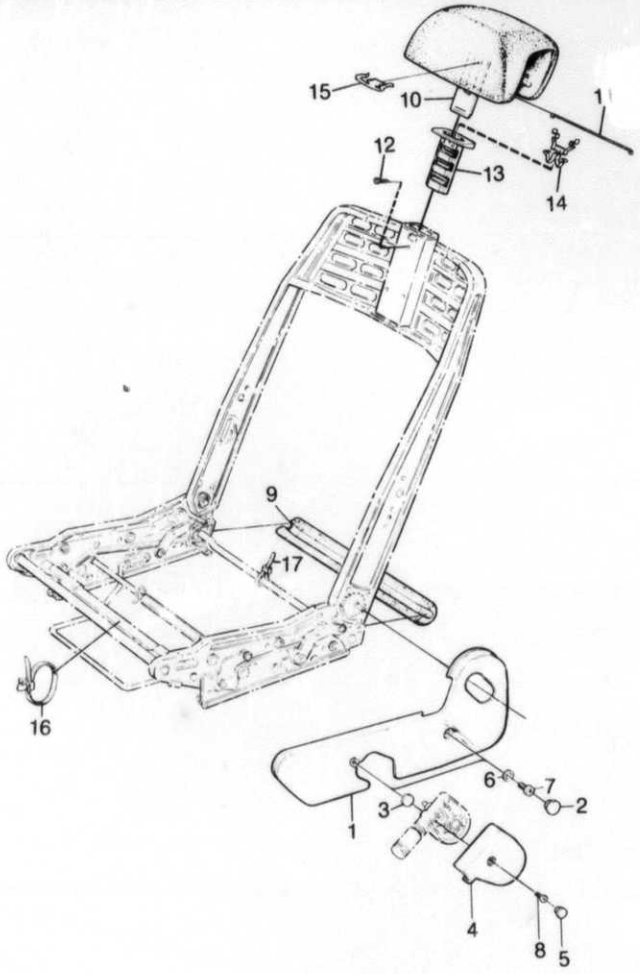

F3046 CAC90

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-155, 6-G12		Seat	Stol	
0035	1	40 33 817		90), 1990, LH	1	.Cover	.Kåpa	6
0045	1	40 33 916		90), 1990, RH	1	.Cover	.Kåpa	6
0075	1	40 33 783		60), 1990, LH	1	.Cover	.Kåpa	6
0085	1	40 33 882		60), 1990, RH	1	.Cover	.Kåpa	6
0095	1	40 33 809		80), 1990, LH	1	.Cover	.Kåpa	6
0105	1	40 33 908		80), 1990, RH	1	.Cover	.Kåpa	6
0115	1	40 33 791		110), LH	1	.Cover	.Kåpa	6
0125	1	40 33 890		110), RH	1	.Cover	.Kåpa	6
0130								
0145	1	40 33 585		90), 1990, LH, RHD	1	.Cover	.Kåpa	6
0150	1	40 33 866		90), 1990, RH, RHD	1	.Cover	.Kåpa	6
0185	1	40 33 932		60), 1990, LH, RHD	1	.Cover	.Kåpa	6
0195	1	40 33 833		60), 1990, RH, RHD	1	.Cover	.Kåpa	6
0205	1	40 33 957		80), 1990, LH, RHD	1	.Cover	.Kåpa	6
0215	1	40 33 858		80), 1990, RH, RHD	1	.Cover	.Kåpa	6
0225	1	40 33 940		110), LH, RHD	1	.Cover	.Kåpa	6
0235	1	40 33 841		110), RH, RHD	1	.Cover	.Kåpa	6
0240								
0255	2	95 80 432		34,90), 1990	1	.Cover	.Täcklock	6
0265	2	95 80 507		35,90), 1990	2	.Cover	.Täcklock	6
0290	2	97 75 552		34,60), 1990	1	.Cover	.Täcklock	6
0300	2	97 80 909		35,60), 1990	2	.Cover	.Täcklock	6
0310	2	96 76 941		34,80), 1990	1	.Cover	.Täcklock	6
0320	2	96 76 990		35,80), 1990	2	.Cover	.Täcklock	6
0330	2	98 92 720		34,110)	1	.Cover	.Täcklock	6
0340	2	98 94 973		35,110)	2	.Cover	.Täcklock	6
0350								
0365	2	95 80 440		34,90), 1990, RHD	1	.Cover	.Täcklock	6
0380	2	97 82 632		34,60), 1990, RHD	1	.Cover	.Täcklock	6
0390	2	96 76 958		34,80), 1990, RHD	1	.Cover	.Täcklock	6
0400	2	98 92 738		34,110), RHD	1	.Cover	.Täcklock	6
0410								
0425	3	95 80 408		34,90), 1990	1	.Cover	.Täcklock	3
0440	3	97 95 006		34,60), 1990	1	.Cover	.Täcklock	3
0450	3	*96 76 891*		34,80), 1990 NLS - USE 9892654	1	.Cover	.Täcklock	3
0460	3	98 92 654		34,110)	1	.Cover	.Täcklock	3
0470								
0575	4	98 93 009		34,110)	1	.Cover	.Kåpa	6
0578	4	98 93 017		34,110), RHD	1	.Cover	.Kåpa	6
0580								
0635	5	98 93 033		34,110)	1	.Cover	.Täcklock	6
0640								
0650	6	80 29 951		-1992	2	.Washer	.Bricka	5
0655	6	91 66 364		1993-	2	.Washer	.Bricka	5
0660	7	80 59 537		34)	2	.Screw	.Skruv	5
0670	7	79 71 294		35)	2	.Screw	.Skruv	5
0680	8	79 22 271		34)	1	.Screw	.Skruv	5
0690	9	97 92 391			1	.Crash pad	.Stötskydd	6
1050	10	95 47 688		1990	1	.Head restraint	.Nackstöd	6
1065	10	41 23 386		1991-	1	.Head restraint	.Nackstöd	6
1070	11	94 59 868			2	.Wire rod	.Trådten	6
1080	12	79 22 396			1	.Screw	.Skruv	5
1095	13	40 31 563			1	.Sleeve	.Hylsa	5
1110	14	97 96 848			1	.Locking spring	.Spärrfjäder	5
1120	15	95 45 104			1	.Clamp	.Klämma	5

34. Driver seat Förarstol
35. Passanger seat Passagerarstol
60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G22

Front seats Part 3
Stolar Del 3

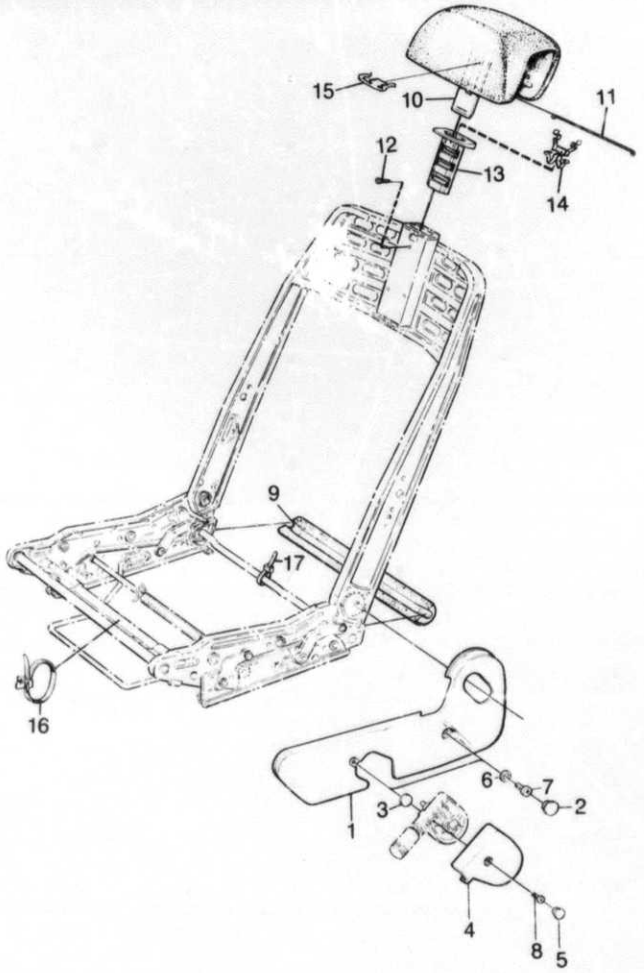

F3046 CAC90

1480	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1130	16	85 52 663			X	. Tensioning band	. Spännband	5
1140	17	79 71 872			X	. Tensioning band	. Spännband	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-G24

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

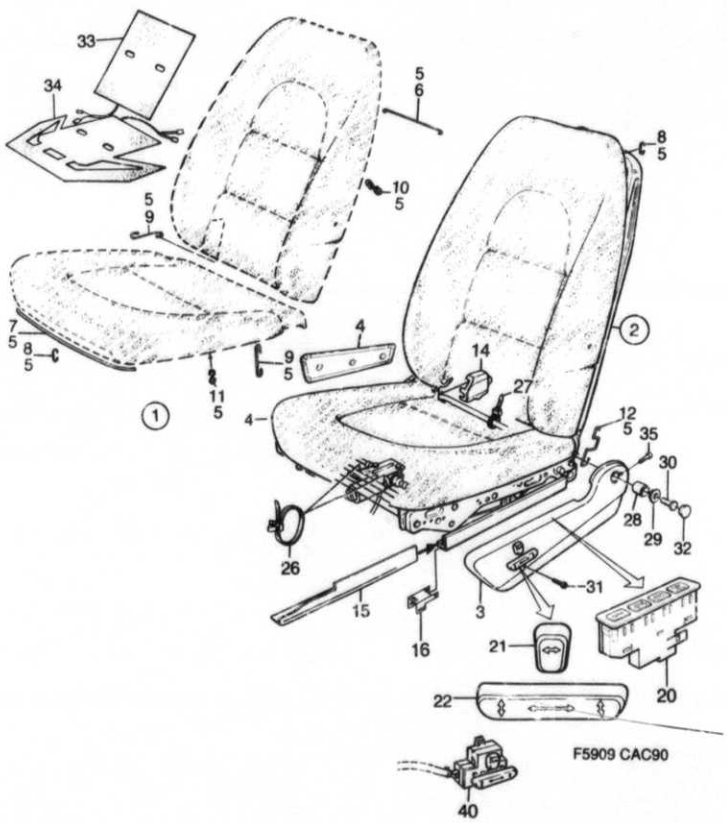

1485	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 281		19,24) 1990, LH	1	Seat	Stol	6
0020	1	96 99 299		19,24) 1990, RH	1	Seat	Stol	6
0030	1	96 99 307		25,24) 1990, LH	1	Seat	Stol	6
0040	1	96 99 315		25,24) 1990, RH	1	Seat	Stol	6
0050								
0060	1	43 68 080		19,215) 1991-, LH	1	Seat	Stol	6
0070	1	43 68 098		19,215) 1991-, RH	1	Seat	Stol	6
0080	1	43 68 122		19,215,137) 1991-, LH	1	Seat	Stol	6
0090	1	43 68 130		19,215,137) 1991-, RH	1	Seat	Stol	6
0100								
0110	1	43 68 106		25,278,24) 1991-, LH	1	Seat	Stol	6
0120	1	43 68 114		25,278,24) 1991-, RH	1	Seat	Stol	6
0130	1	43 68 148		25,278,24,137) 1991-, LH	1	Seat	Stol	6
0140	1	43 68 155		25,278,24,137) 1991-, RH	1	Seat	Stol	6
0150								
0160	2	95 86 082		19,151) 1990, LH	1	.Seat frame	.Stolram	6
0170	2	95 86 090		19,151) 1990, RH	1	.Seat frame	.Stolram	6
0180	2	42 58 844		19,151) 1991-1992, LH	1	.Seat frame	.Stolram	6
0190	2	42 58 877		19,151) 1991-1992, RH	1	.Seat frame	.Stolram	6
0200	2	43 09 779		19,151) 1993, LH	1	.Seat frame	.Stolram	6
0210	2	43 09 803		19,151) 1993, RH	1	.Seat frame	.Stolram	6
0240	2	41 28 401		19,137,151) -1992, LH	1	.Seat frame	.Stolram	6
0250	2	41 28 393		19,137,151) -1992, RH	1	.Seat frame	.Stolram	6
0260	2	43 09 712		19,137,151) 1993, LH	1	.Seat frame	.Stolram	6
0270	2	43 09 746		19,137,151) 1993, RH	1	.Seat frame	.Stolram	6
0300								
0310	2	*95 72 876*		25,151) 1990, LH NLS - USE 4258901, 8073108	1	.Seat frame	.Stolram	6
0320	2	*95 72 884*		25,151) 1990, RH NLS - USE 4258935, 8073108	1	.Seat frame	.Stolram	6
0330	2	42 58 901		25,151) 1991-, LH	1	.Seat frame	.Stolram	6
0340	2	42 58 935		25,151) 1991-, RH	1	.Seat frame	.Stolram	6
0370	2	41 28 435		25,137,151), LH	1	.Seat frame	.Stolram	6
0380	2	41 28 419		25,137,151), RH	1	.Seat frame	.Stolram	6
0410								
0420	2	43 08 227		278,151), 1993, LH	1	.Seat frame	.Stolram	6
0430	2	43 08 284		278,151), 1993, RH	1	.Seat frame	.Stolram	6
0436	2	43 08 268		278,137,151), 1993, LH	1	.Seat frame	.Stolram	6
0438	2	43 08 276		278,137,151), 1993, RH	1	.Seat frame	.Stolram	6
0460								
0470	3	95 92 395		60), 1990, LH	1	.Cover	.Kåpa	6
0480	3	95 92 403		110), LH	1	.Cover	.Kåpa	6
0490	3	41 29 201		137,110), LH	1	.Cover	.Kåpa	6
0500	3	95 92 411		80), 1990, LH	1	.Cover	.Kåpa	6
0510	3	95 92 429		90), 1990, LH	1	.Cover	.Kåpa	6
0520	3	95 92 445		60), 1990, RH	1	.Cover	.Kåpa	6
0530	3	95 92 452		110), RH	1	.Cover	.Kåpa	6
0540	3	41 29 110		137,110), RH	1	.Cover	.Kåpa	6
0550	3	95 92 460		80), 1990, RH	1	.Cover	.Kåpa	6
0560	3	95 92 478		90), 1990, RH	1	.Cover	.Kåpa	6

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart
137. With memory function. Med minnesfunktion.
151. See following sections for contents Se följande avsnitt för ingående artiklar
215. State upholstery colour, ch No and if the chair is with or without pocket. Uppge klädselfärg, ch nr och om stolen är med eller utan ficka.
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H02

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

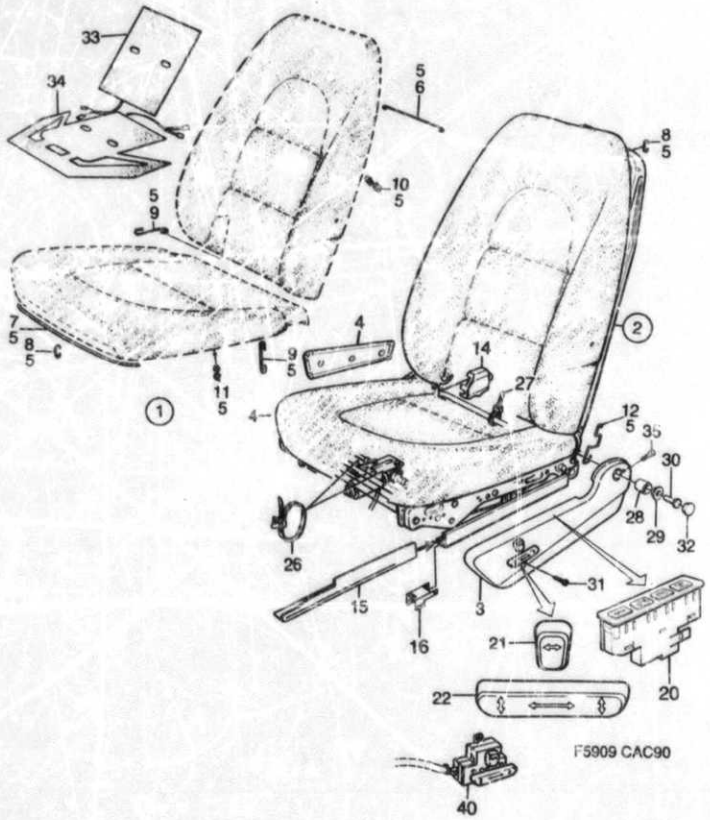

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570								
0580	4	41 23 923		60), 1990, LH	1	.Cover	.Kåpa	6
0590	4	41 23 931		70), 1990, LH	1	.Cover	.Kåpa	6
0600	4	41 23 949		80), 1990, LH	1	.Cover	.Kåpa	6
0610	4	41 23 956		90), 1990, LH	1	.Cover	.Kåpa	6
0620	4	41 23 964		60), 1990, RH	1	.Cover	.Kåpa	6
0630	4	41 23 972		70), 1990, RH	1	.Cover	.Kåpa	6
0640	4	41 23 980		80), 1990, RH	1	.Cover	.Kåpa	6
0650	4	41 23 998		90), 1990, RH	1	.Cover	.Kåpa	6
0660	5	96 97 939		19)	1	.Mounting kit	.Monteringssats	6
0670				See page 8B-215, 6-I24				
0680	5	96 71 751		25)	1	.Mounting kit	.Monteringssats	6
0690				See page 8B-215, 6-I24				
0700	5	44 75 513		278)	1	.Mounting kit	.Monteringssats	
0710				See page 8B-215, 6-I24				
0720	6	97 81 592			2	..Cover rod	..Klädselbåge	5
0730	7	95 47 332		19)	1	..Cover rod	..Klädselbåge	5
0740	8	94 50 685			X	..Clamp	..Klammer	5
0750	9	97 69 209		40 MM	X	..Hook	..Krok	5
0760	10	97 69 217		19,278) 30 MM	X	..Hook	..Krok	5
0770	11	97 69 225		19,278) 20 MM	X	..Hook	..Krok	5
0780	12	95 93 245		19)	2	..Attaching brace	..Fästbygel	5
0790	14	40 34 054		LH	1	.Cover	.Kåpa	5
0800	14	40 34 047		RH	1	.Cover	.Kåpa	5
0810	15	96 95 909		LH	1	.Cover	.Kåpa	6
0820	15	96 95 917		RH	1	.Cover	.Kåpa	6
0830	16	40 59 671		LHD	1	.Stop bracket passenger seat	.Stoppkonsol passagerarstol	5
0840								
0850	20	40 69 704		137,308)	1	.Switch	.Strömställare	5
0860	21	95 65 003			1	.Button	.Knapp	5
0870	22	95 65 011			1	.Button	.Knapp	5
0880	26	85 52 663			3	.Tensioning band	.Spännband	5
0890	27	79 71 872			3	.Tensioning band	.Spännband	5
0900	28	84 58 598			2	.Sleeve	.Hylsa	5
0910	29	96 18 232			1	.Spacer	.Distans	5
0920	30	80 59 412			1	.Screw	.Skruv	5
0930	31	79 71 401			1	.Screw	.Skruv	5
0940	32	95 92 692		60), 1990	1	.Cover	.Täcklock	6
0950	32	95 92 700		110)	1	.Cover	.Täcklock	6
0960	32	95 92 718		80), 1990	1	.Cover	.Täcklock	6
0970	32	95 92 726		90), 1990	1	.Cover	.Täcklock	6
0980	33	95 19 877		19,251)	1	.Heating pad	.Värmedyna	4
0990	33	40 83 028		19,252)	1	.Heating pad	.Värmedyna	4
1000	33	95 69 955		25)	1	.Heating pad	.Värmedyna	4
1010	33	44 14 553		278)	1	.Heating pad	.Värmedyna	4
1020	34	*95 28 704*		19,61) NLS - USE 4063871	1	.Heating pad	.Värmedyna	4
1030	34	40 63 871		19,62)	1	.Heating pad	.Värmedyna	4
1040	34	*95 27 706*		25,61) NLS - USE 4063855	1	.Heating pad	.Värmedyna	4
1050	34	40 63 855		25,62)	1	.Heating pad	.Värmedyna	4

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
60. Red Röd
61. Ch. --L1002485, --L2001804, --L8000227
62. Ch. L1002486--, L2001805--, L8000228--
70. Grey Grå
80. Blue Blå
90. Yellow Gul
110. Black Svart
137. With memory function. Med minnesfunktion.
251. Ch. --N1014192
252. Ch. N1014193--
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
308. Part of pos 2, section Front seats Part 1, 1994-. Ingår i pos 2, avsnitt Stolar Del 1, 1994-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H04

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

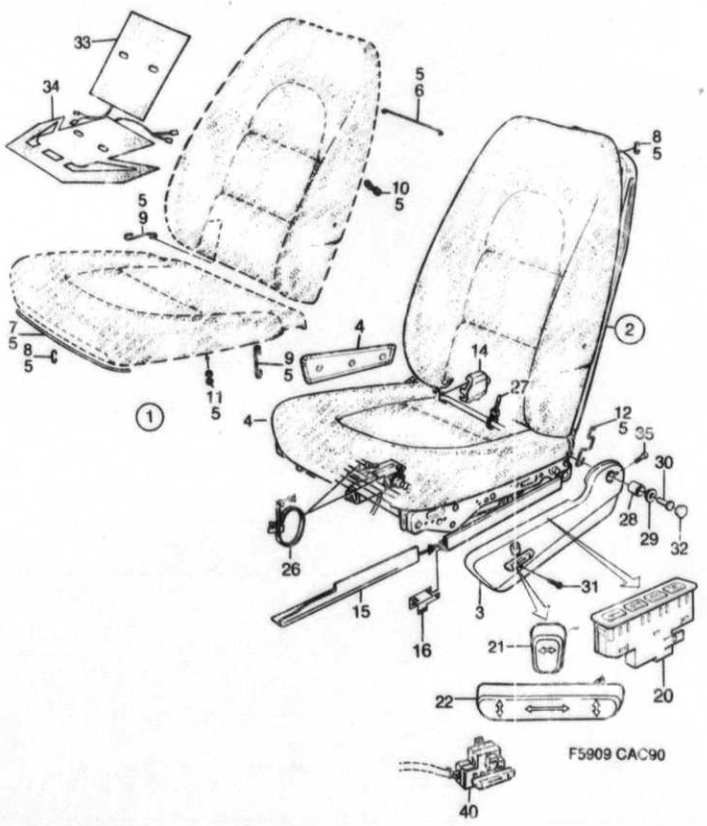

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1060	34	44 14 546		278)	1	.Heating pad	.Värmedyna	4
1070	35	79 72 821			1	.Screw	.Skruv	5
1080	40			See page 8B-173, 6-H06	1	.Switch	.Strömställare	
1090		95 88 542		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6
1100		95 86 108		See page 8B-215, 6-I24	1	.Mounting kit	.Monteringssats	6

278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H06

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

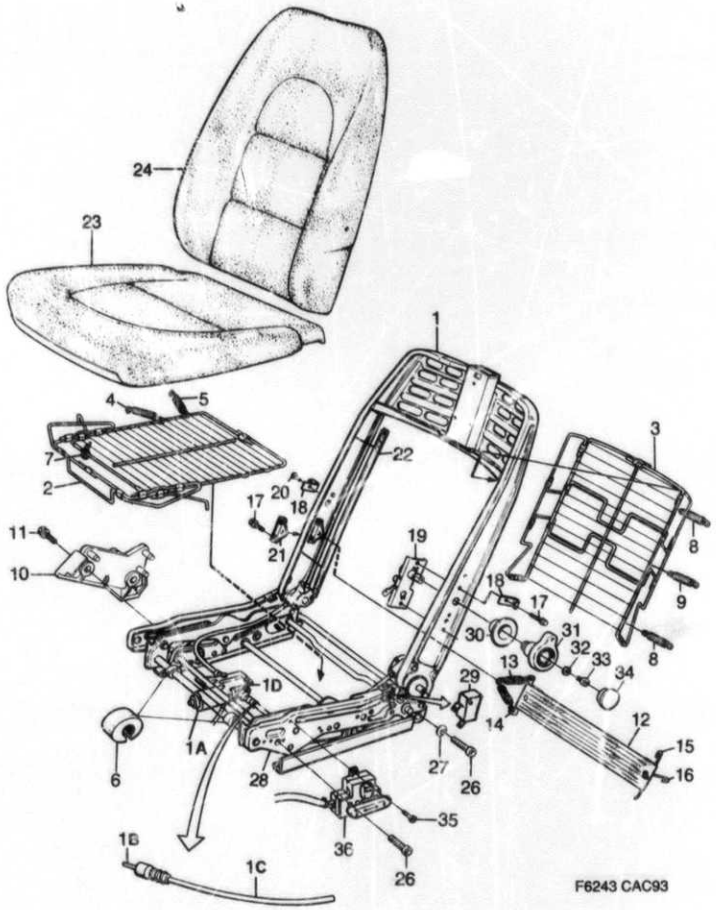

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-167, 6-G24		Seat	Stol	
0020				See page 8B-167, 6-G24		.Seat frame	.Stolram	
0030	1	*95 92 155*		1990 NLS - USE 4131751	1	..Seat frame	..Stolram	6
0040	1	41 31 751		1991-	1	..Seat frame	..Stolram	6
0050	1	40 45 704		137)	1	..Seat frame	..Stolram	6
0054	1	43 13 748		278)	1	..Seat frame	..Stolram	6
0056	1	43 13 987		278,137)	1	..Seat frame	..Stolram	6
0060	1A	*96 95 768*			1	...Electric motor	...Elmotor	
0070	1B	95 79 715		LH	1	...Drive shaft	...Drivaxel	6
0080	1B	41 26 330		137), LH	1	...Drive shaft	...Drivaxel	6
0090	1B	95 42 317		RH	1	...Drive shaft	...Drivaxel	6
0100	1C	95 42 309			2	...Outer casing	...Hölje	6
0110	1C	41 26 355		137), LH	1	...Outer casing	...Hölje	6
0120	1C	41 26 348		137), RH	1	...Outer casing	...Hölje	6
0125	1D	41 10 995		137)	1	...Potentiometer	...Potentiometer	5
0130	2	40 32 934			1	..Wire matting	..Resårmatta	6
0140	3	96 97 525			1	..Wire matting	..Resårmatta	6
0150	4	96 73 146			6	..Spring	..Fjäder	6
0160	5	96 73 435			2	..Spring	..Fjäder	6
0170	6	40 33 486			2	..Rubber spacer	..Gummidistans	5
0180	7	79 71 872			2	..Tensioning band	..Spännband	5
0190	8	97 59 069			4	..Spring	..Fjäder	6
0200	9	97 59 077			2	..Spring	..Fjäder	6
0210	10	41 42 832		1991-, LH	1	..Support	..Stöd	6
0220	10	41 42 824		1991-, RH	1	..Support	..Stöd	6
0230	11	79 22 354		1991-	2	..Screw	..Skruv	5
0240	12	97 70 918			1	..Strip	..Band	6
0250	13	95 79 293			2	..Spring	..Fjäder	6
0260	14	97 70 942			1	..Brace	..Bygel	5
0270	15	97 70 926			1	..Brace	..Bygel	5
0280	16	97 70 934			1	..Hook	..Krok	5
0290	17	79 74 330			4	..Screw	..Skruv	5
0300	18	97 78 895			2	..Brace	..Bygel	5
0310	19	96 17 325		LH	1	..Control	..Reglage	6
0320	19	96 17 333		RH	1	..Control	..Reglage	6
0330	20	79 75 402		1990	1	..Rivet	..Nit	5
0340	20	79 72 516		1991-	1	..Rivet	..Nit	5
0350	21	98 64 349			1	..Bracket	..Konsol	5
0360	22	96 71 835			2	..Protecting moulding	..Skyddslist	6
0370	23	*96 96 618*		19), -1992 NLS - USE 4416525	1	..Seat cushion	..Sittdyna	6
0375	23	44 16 525		19), 1993-	1	..Seat cushion	..Sittdyna	6
0380	23	96 77 014		25)	1	..Seat cushion	..Sittdyna	6
0385	23	43 13 797		278)	1	..Seat cushion	..Sittdyna	6
0390	24	*96 96 600*		19), -1992 NLS - USE 4292934	1	..Backrest cushion	..Ryggdyna	6
0400	24	42 92 934		19), 1993-	1	..Backrest cushion	..Ryggdyna	6
0410	24	97 58 715		25)	1	..Backrest cushion	..Ryggdyna	6
0415	24	43 13 805		278)	1	..Backrest cushion	..Ryggdyna	6
0420	26	75 76 580		1990	4	..Screw	..Skruv	5
0430	26	80 59 826		1991-	4	..Screw	..Skruv	5
0440	27	95 47 381		1990	2	..Washer	..Bricka	5
0450	28			See page 8B-177, 6-H10		..Seat frame	..Stolschassi	
0460	29	40 36 299			1	.Switch	.Brytare	5
0470	30	97 85 015			1	.Cover washer	.Täckbricka	6
0480	31	97 63 632			1	.Steering wheel	.Ratt	5
0490	32	80 29 944			1	.Washer	.Bricka	5
0500	33	80 59 396			1	.Screw	.Skruv	5
0510	34	97 63 624			1	.Cover	.Täcklock	6

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
137. With memory function. Med minnesfunktion.
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H08

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

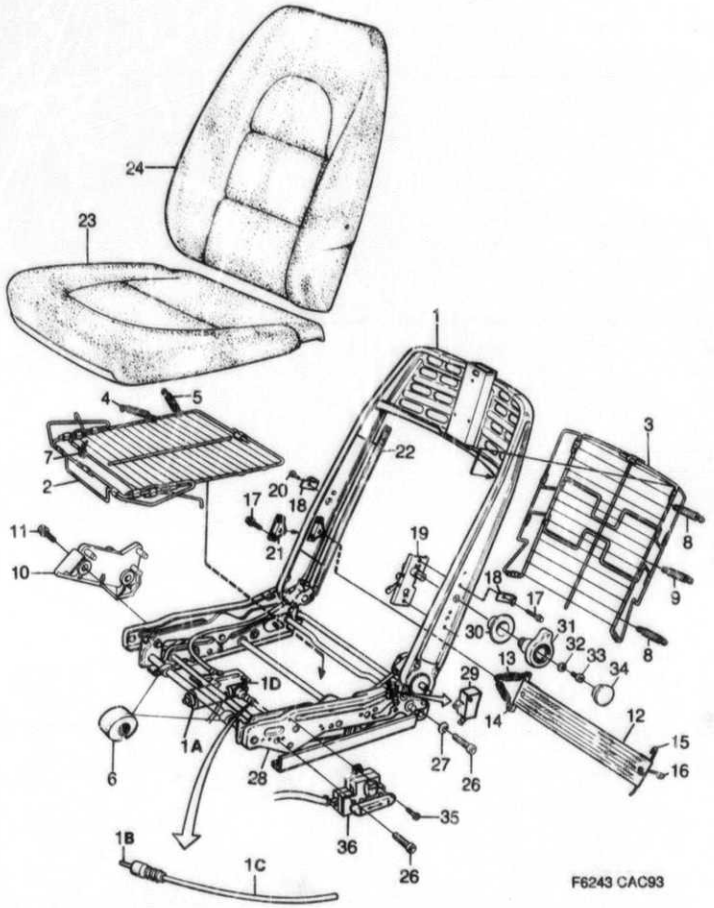

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0520	35	79 22 354			3	.Screw	.Skruv	5
0530	36	*95 64 980*		1990, LH NLS - USE 4117081	1	.Switch	.Strömställare	5
0540	36	*95 66 993*		1990, RH NLS - USE 4117073	1	.Switch	.Strömställare	5
0550	36	41 17 081		1991-, LH	1	.Switch	.Strömställare	5
0560	36	41 17 073		1991-, RH	1	.Switch	.Strömställare	5
0570	36	41 08 015		137), LH	1	.Switch	.Strömställare	5
0580	36	41 08 007		137), RH	1	.Switch	.Strömställare	5

137. With memory function. Med minnesfunktion.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H10

Front seats Part 3
Electrically adjustable

Stolar Del 3
Elmanövrerade

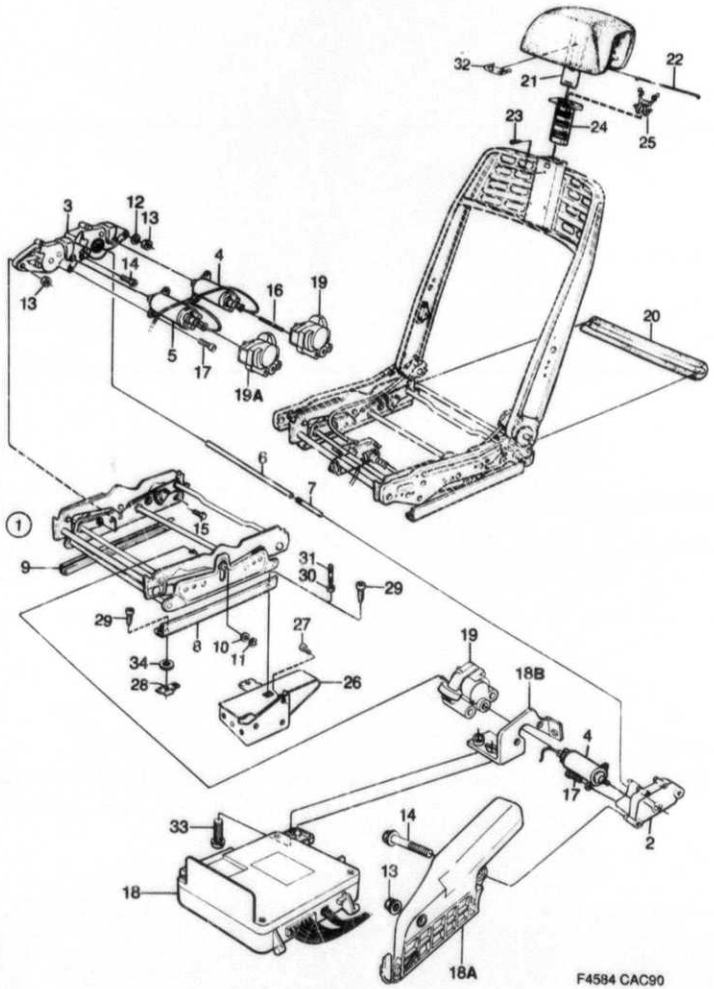

1495	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-167, 6-G24		Seat	Stol	
0020				See page 8B-167, 6-G24		.Seat frame	.Stolram	
0030	1	*96 95 248*		1990 NLS - USE 4312625, 8073108	1	..Seat frame	..Stolschassi	5
0040	1	*41 33 146*		1991 NLS - USE 4312625	1	..Seat frame	..Stolschassi	5
0050	1	43 12 625		1992-	1	..Seat frame	..Stolschassi	5
0060	1	40 45 696		137)	1	..Seat frame	..Stolschassi	5
0080	2	96 95 321			1	...Gear	...Växel	6
0090	3	96 95 354			1	...Gear	...Växel	6
0100	4	40 54 078			2	...Electric motor	...Elmotor	6
0110	5	40 54 086			1	...Electric motor	...Elmotor	6
0120	6	95 79 772			1	...Shaft	...Axel	6
0130	7	95 79 780			1	...Shaft	...Axel	6
0140	8	96 95 305		1990, LH	1	...Rail	...Skena	6
0150	8	41 33 153		1991-, LH	1	...Rail	...Skena	6
0160	9	96 95 313		1990, RH	1	...Rail	...Skena	6
0170	9	41 33 161		1991-, RH	1	...Rail	...Skena	6
0180	10	95 86 165			2	...Washer	...Bricka	5
0190	11	95 86 173			2	...E-circlip	...Spårryttare	5
0200	12	95 79 764			2	...Spacer washer	...Distansbricka	5
0210	13	95 86 132			4	...Nut	...Mutter	5
0220	14	95 86 157			3	...Screw	...Skruv	5
0230	15	95 86 181			4	...Screw	...Skruv	5
0240	16	44 16 350		137)	3	...Shaft	...Axel	5
0250	17	95 86 207			6	...Screw	...Skruv	5
0260	18	41 10 987		137)	1	...Electronic unit	...Elektronikenhet	4
0270				1)	1	....Cable harness	....Ledningsnät	
0280	18A	41 32 866		137)	1	...Anchorage	...Fäste	5
0290	18B	41 32 874		137)	1	...Quick attachment	...Snabbfäste	5
0300	19	41 11 001		137)	2	...Potentiometer	...Potentiometer	5
0310	19A	41 11 506		137)	1	...Potentiometer	...Potentiometer	5
0320	20	97 92 391			1	.Crash pad	.Stötskydd	6
0330	21	95 47 688		1990	1	.Head restraint	.Nackstöd	6
0340	21	41 23 386		1991-	1	.Head restraint	.Nackstöd	6
0350	21	43 15 305		278)	1	.Head restraint	.Nackstöd	6
0360	22	94 59 868			2	.Wire rod	.Trådten	6
0370	23	79 22 396			1	.Screw	.Skruv	5
0380	24	40 31 563			1	.Sleeve	.Hylsa	5
0390	25	97 96 848			1	.Locking spring	.Spärrfjäder	5
0400	26	*97 81 162*		1990, LH NLS	1	.Bracket	.Konsol	5
0410	26	42 56 756		1991-, LH	1	.Bracket	.Konsol	5
0420	26	*97 82 210*		1990, RH NLS	1	.Bracket	.Konsol	5
0430	26	42 56 749		1991-, RH	1	.Bracket	.Konsol	5
0440	27	79 74 884			3	.Screw	.Skruv	5
0450	28	79 75 766			2	.Cage nut	.Korgmutter	5
0460	29	95 85 423		1990	2	.Screw	.Skruv	5
0470	29	41 34 003		1991-	4	.Screw	.Skruv	5
0480	30	*79 79 479*		1990 NLS - USE 4134003	2	.Nut	.Mutter	5
0490	31	95 85 431		1990	2	.Stud	.Pinnskruv	5
0500	32	95 45 104			1	.Clamp	.Klämma	5
0510	33	98 35 737		137)	1	.Screw	.Skruv	5
0520	34	80 73 108		139)	4	.Washer	.Bricka	5

1. Not as separate spare part. Ej som separat reservdel.
137. With memory function. Med minnesfunktion.
139. Use together with M91 rail for older cars Används tillsammans med M91 skena för äldre bilar
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H12

Rear seat
Seat cushion

Baksäte
Sittdyna

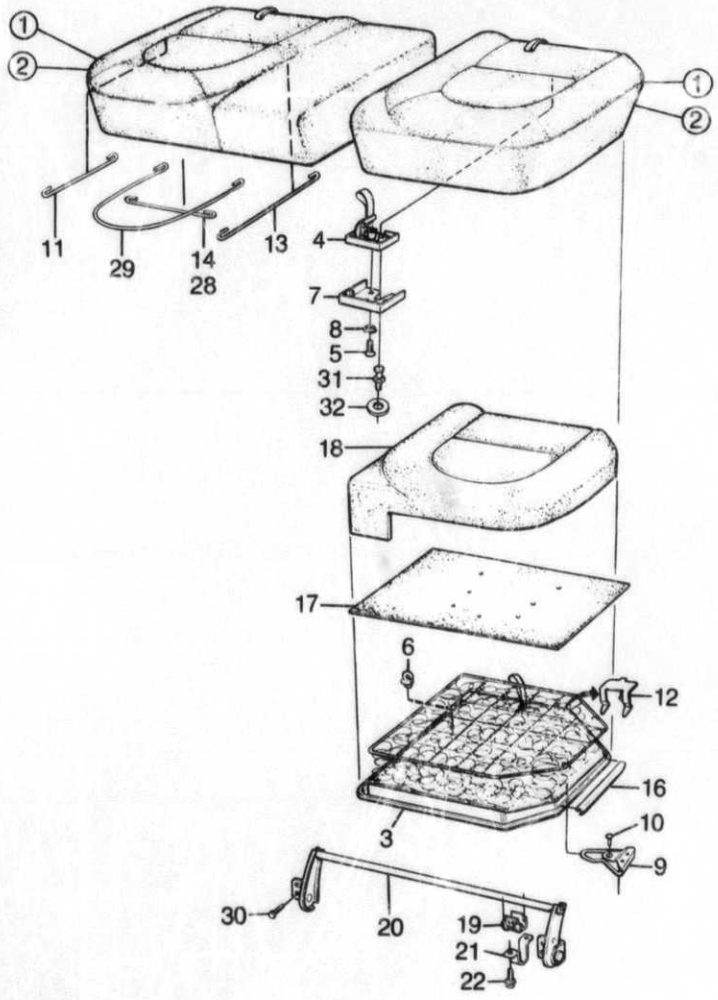

F1085 CAC90

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	96 99 158		23,278,24), LH	1	Seat cushion	Sittdyna	6
0040	1	96 99 166		21,24), LH	1	Seat cushion	Sittdyna	6
0050	1	96 99 174		22,24), LH	1	Seat cushion	Sittdyna	6
0080	1	96 99 125		23,278,24), RH	1	Seat cushion	Sittdyna	6
0090	1	96 99 133		21,24), RH	1	Seat cushion	Sittdyna	6
0100	1	96 99 141		22,24), RH	1	Seat cushion	Sittdyna	6
0108								
0110	2	96 72 619		23,36), -1991, LH	1	.Seat cushion	.Sittdyna	6
0130	2	96 96 675		21,22,36), -1991, LH	1	.Seat cushion	.Sittdyna	6
0150	2	96 72 627		23,36), -1991, RH	1	.Seat cushion	.Sittdyna	6
0170	2	96 96 667		21,22,36), -1991, RH	1	.Seat cushion	.Sittdyna	6
0180	2	43 15 339		278,36), 1993-, LH	1	.Seat cushion	.Sittdyna	6
0185	2	43 15 347		278,36), 1993-, RH	1	.Seat cushion	.Sittdyna	6
0190	3	97 52 239		25), -1991, LH	1	..Spring housing	..Resårhus	6
0200	3	42 88 445		25), 1992-, LH	1	..Spring housing	..Resårhus	6
0210	3	96 96 030		19), -1991, LH	1	..Spring housing	..Resårhus	6
0215	3	42 88 429		19), 1992-, LH	1	..Spring housing	..Resårhus	6
0217	3	43 15 370		278), LH	1	..Spring housing	..Resårhus	6
0220	3	97 52 007		25), -1991, RH	1	..Spring housing	..Resårhus	6
0225	3	42 88 437		25), 1992-, RH	1	..Spring housing	..Resårhus	6
0240	3	96 96 758		19), -1991, RH	1	..Spring housing	..Resårhus	6
0245	3	42 88 411		19), 1992-, RH	1	..Spring housing	..Resårhus	6
0247	3	43 15 396		278), RH	1	..Spring housing	..Resårhus	6
0250	4	97 74 175		LH	1	...Lock	...Lås	5
0260	4	97 74 183		RH	1	...Lock	...Lås	5
0270	5	79 77 028			2	...Screw	...Skruv	5
0280	6	97 81 469			X	...Hook	...Krok	5
0290	7	97 81 576		LH	1	...Protecting casing	...Skyddskåpa	6
0300	7	97 84 604		RH	1	...Protecting casing	...Skyddskåpa	6
0310	8	97 87 516			2	...Washer	...Bricka	5
0320	9	*97 71 296*		-1991, LH NLS - USE 4140059	1	...Bracket	...Hållare	6
0340	9	*97 89 751*		-1991, RH NLS - USE 4140042	1	...Bracket	...Hållare	6
0345	9	41 40 059		1992-, LH	1	...Bracket	...Hållare	6
0350	9	41 40 042		1992-, RH	1	...Bracket	...Hållare	6
0360	10	79 72 516			X	...Rivet	...Nit	5
0370	11	95 84 749		19)	2	..Wire rod	..Trådten	5
0380	12	96 73 831		19)	3	..Clamp	..Klammer	5
0390	13	96 93 094		19)	1	..Wire rod	..Trådten	5
0400	14	97 21 499		19)	1	..Wire rod	..Trådten	5
0410	16	96 97 459			1	..Strip	..List	6
0435	17	96 96 048		LH	1	..Padding	..Vadd	5
0436	17	96 96 766		RH	1	..Padding	..Vadd	5
0460	18	97 95 220		25) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0490	18	95 84 640		19) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0495	18	43 13 888		278) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0500	18	97 95 212		25) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0530	18	95 84 665		19) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0535	18	43 13 870		278) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0540	19	40 48 260			2	..Bushing	..Bussning	6
0570	20	96 63 410		LH	1	..Link arm	..Länkarm	5
0580	20	96 63 402		RH	1	..Link arm	..Länkarm	5
0590	21	40 48 278			2	..Cap	..Överfall	6
0600	22	79 74 397			4	..Screw	..Skruv	5

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K64
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H14

Rear seat
Seat cushion

Baksäte
Sittdyna

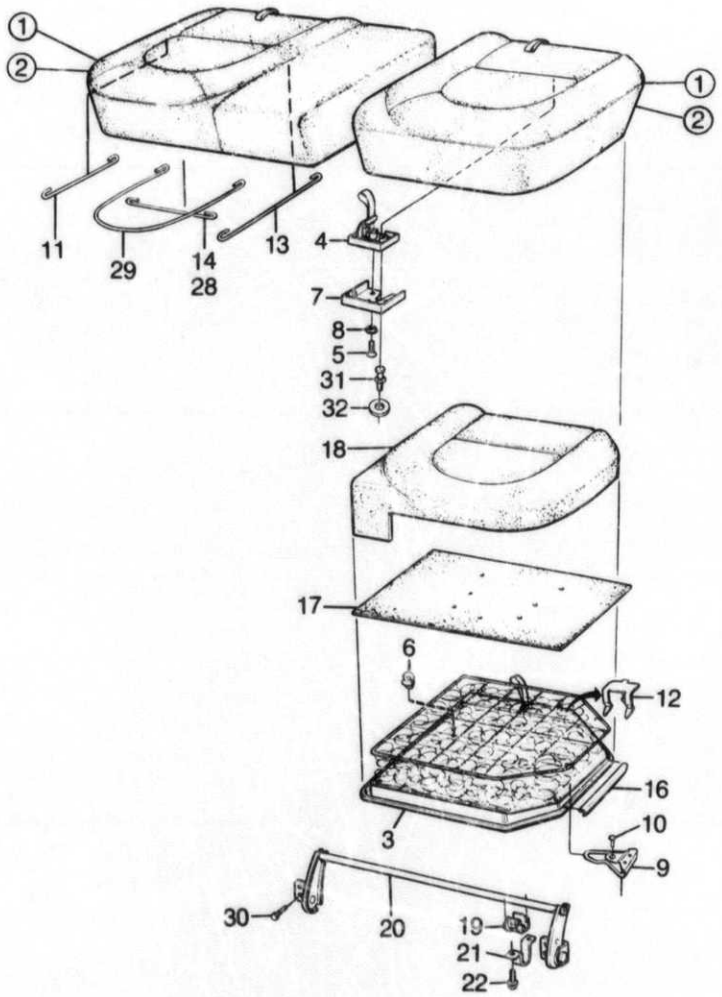

F1085 CAC90

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	28	98 28 658		25)	1	•Wire rod	•Trådten	5
0620	29	97 87 532		25)	1	•Wire rod	•Trådten	5
0630	30	97 78 952			8	Screw	Skruv	5
0640	31	96 71 025		-1991	2	Lock pin	Låspinne	5
0650	31	43 12 948		1992-	2	Lock pin	Låspinne	5
0655	32	83 11 904			2	Washer	Bricka	5
0660		*97 46 736*		See page 8B-221, 6-J06 NLS	1	Clamp kit	Klammersats	
0660		96 72 668		See page 8B-215, 6-I24	1	Mounting kit	Monteringssats	6
0670		44 75 539		278)	1	Mounting kit	Monteringssats	
0680				See page 8B-215, 6-I24				
0690								

25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H16

Rear seat
Back cushion

Baksäte
Ryggdyna

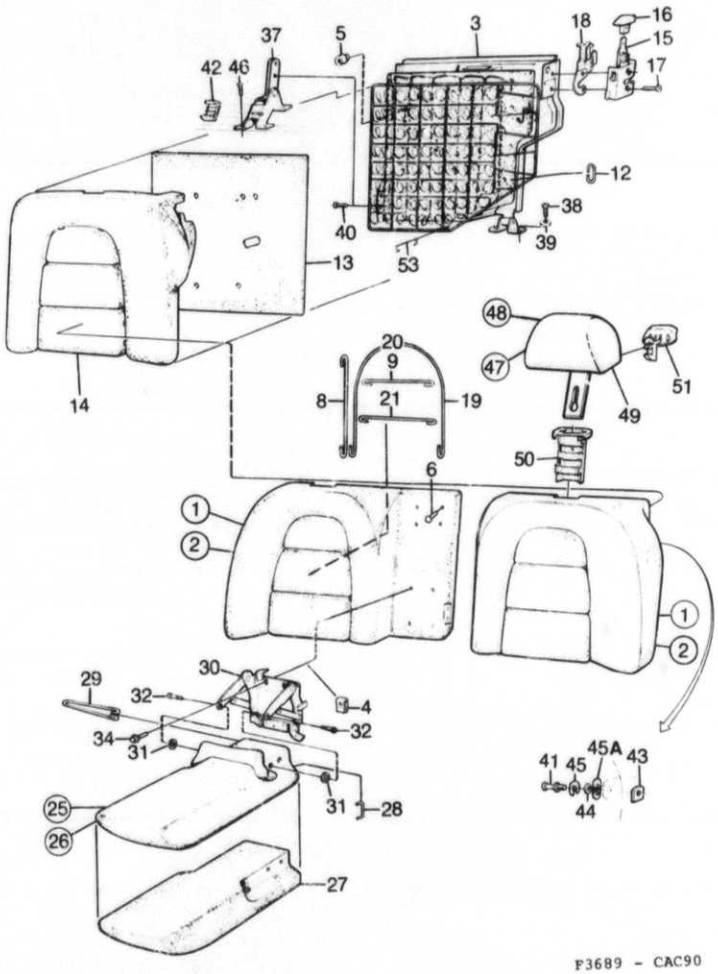

F3689 - CAC90

1525	Fos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	96 99 067		23,278,24), LH	1	Backrest cushion	Ryggdyna	6
0040	1	96 99 075		21,24), LH	1	Backrest cushion	Ryggdyna	6
0050	1	96 99 083		22,24), LH	1	Backrest cushion	Ryggdyna	6
0080	1	96 99 034		23,278,24), RH	1	Backrest cushion	Ryggdyna	6
0090	1	96 99 042		21,24), RH	1	Backrest cushion	Ryggdyna	6
0100	1	96 99 059		22,24), RH	1	Backrest cushion	Ryggdyna	6
0108								
0110	2	96 72 635		23,36), -1991, LH	1	.Backrest cushion	.Ryggdyna	6
0130	2	96 96 659		21,22,36), -1991, LH	1	.Backrest cushion	.Ryggdyna	6
0150	2	96 72 643		23,36), -1991, RH	1	.Backrest cushion	.Ryggdyna	6
0170	2	96 96 642		21,22,36), -1991, RH	1	.Backrest cushion	.Ryggdyna	6
0180	2	43 15 354		278,36), 1993-, LH	1	.Backrest cushion	.Ryggdyna	6
0190	2	43 15 362		278,36), 1993-, RH	1	.Backrest cushion	.Ryggdyna	6
0200	3	95 72 892		25), -1991, LH	1	..Spring housing	..Resårhus	6
0210	3	42 88 304		25), 1992-, LH	1	..Spring housing	..Resårhus	6
0220	3	95 72 926		19) -1991, LH	1	..Spring housing	..Resårhus	6
0230	3	42 88 288		19), 1992-, LH	1	..Spring housing	..Resårhus	6
0235	3	43 13 839		278), LH	1	..Spring housing	..Resårhus	6
0240	3	95 72 900		25), -1991, RH	1	..Spring housing	..Resårhus	6
0250	3	42 88 296		25), 1992-, RH	1	..Spring housing	..Resårhus	6
0260	3	95 72 918		19), -1991, RH	1	..Spring housing	..Resårhus	6
0265	3	42 88 270		19), 1992-, RH	1	..Spring housing	..Resårhus	6
0267	3	43 13 821		278), RH	1	..Spring housing	..Resårhus	6
0270	4	79 72 573			4	...Clip nut	...Clipsmutter	5
0280	5	97 81 469			X	...Hook	...Krok	5
0290	6	79 72 516			X	...Rivet	...Nit	5
0300	8	95 79 244		19)	2	..Wire rod	..Trådten	5
0310	9	97 21 499		19)	2	..Wire rod	..Trådten	5
0320	12	94 50 685			3	..Clamp	..Klammer	5
0335	13	96 96 691			1	..Padding	..Vadd	5
0350	14	97 88 928		25) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0370	14	95 84 772		19) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0375	14	43 13 854		278) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0380	14	97 88 910		25) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0400	14	95 84 764		19) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0405	14	43 13 862		278) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0410	15	97 51 579		-1991, LH	1	..Lock	..Lås	5
0415	15	42 55 261		1992-, LH	1	..Lock	..Lås	5
0420	15	97 51 587		-1991, RH	1	..Lock	..Lås	5
0425	15	42 55 253		1992-, RH	1	..Lock	..Lås	5
0430	16	97 55 935			1	..Handle	..Handtag	5
0440	17	79 77 028			2	..Screw	..Skruv	5
0470	18	97 96 723		-1991, LH	1	..Bracket	..Hållare	5
0480	18	97 95 816		-1991, RH	1	..Bracket	..Hållare	5
0483	18	41 40 075		1992-,296), LH	1	..Spring spacer	..Fjädermellanlägg	6
0485	18	41 40 067		1992-,296), RH	1	..Spring spacer	..Fjädermellanlägg	6
0486	18	97 96 723		297), LH	1	..Bracket	..Hållare	5
0487	18	97 95 816		297), RH	1	..Bracket	..Hållare	5
0490	19	97 21 598		25)	1	.Wire rod	.Trådten	5
0500	20	98 28 641		25)	1	.Wire rod	.Trådten	5
0510	21	98 28 658		25)	1	.Wire rod	.Trådten	5
0520	25	97 51 314		24)	1	.Arm rest	.Armstöd	6

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K64
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
199. Ch. M1017620-, M2011731--
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
296. Ch. --P1023756
297. Ch. P1023757--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H18

Rear seat
Back cushion

Baksäte
Ryggdyna

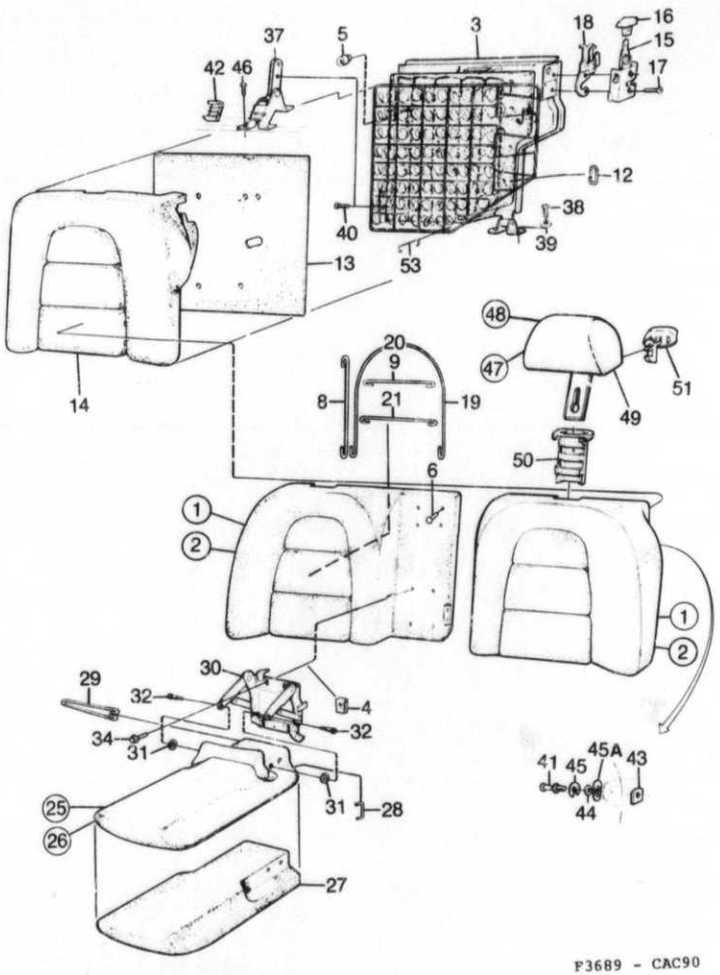

F3689 - CAC90

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	25	97 82 129		24)	1	.Arm rest leather	.Armstöd läder	6
0531								
0540	26	96 72 650		36)	1	..Arm rest	..Armstöd	6
0550				See page 8B-221, 6-J06				
0560	27	97 81 337			1	...Cushion	...Kudde	6
0570	28	84 38 467			2	...Staple	...Häftklammer	5
0580	29	94 45 909			1	...Clamp	...Trådbygel	6
0605	30	95 93 948			1	...Bracket	...Konsol	6
0610	31	84 57 541			4	...Washer	...Bricka	5
0620	32	40 55 133			4	...Shoulder screw	...Ansatsskruv	5
0645	34	79 71 294			4	...Screw	...Skruv	5
0650	37	97 61 974			1	Joint	Led	5
0675	38	79 76 897			2	Screw	Skruv	5
0680	39	79 16 497			2	Washer	Bricka	5
0695	40	79 81 921			4	Screw	Skruv	5
0700	41	96 71 025		-1991	2	Lock pin	Låspinne	5
0710	41	43 12 948		1992-	2	Lock pin	Låspinne	5
0720	42	97 89 769			1	Plastic buffer	Plastbuffert	5
0730	43	97 65 272			2	Nut plate	Mutterplatta	5
0740	44	97 91 971		-1991	2	Washer	Bricka	5
0750	45	*97 89 090*		-1991 NLS - USE 4288189	2	Washer	Bricka	6
0760	45A	42 88 189		1992-	2	Washer	Bricka	6
0770	46	80 59 552			4	Screw	Skruv	5
0790	47	96 99 182		25,278,24)	2	Head restraint	Nackstöd	6
0800	47	96 99 190		19,24)	2	Head restraint	Nackstöd	6
0810	48	40 48 948		25,19,36)	1	.Head restraint	.Nackstöd	6
0820	48	43 15 412		278,36)	1	.Head restraint	.Nackstöd	6
0850	49	40 36 133		25,19)	1	..Head restraint	..Nackstöd	6
0885	50	40 31 563			1	..Sleeve	..Hylsa	5
0900	51	41 36 610		(4031555)	1	..Catch	..Hake	6
0920	53	*97 46 736*		See page 8B-221, 6-J06 NLS	1	Clamp kit	Klammersats	
0920								
0930		96 72 668		See page 8B-215, 6-I24	1	Mounting kit	Monteringssats	6
0940		44 75 547		278)	1	Mounting kit	Monteringssats	
0950				See page 8B-215, 6-I24				

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6--H20

Rear seat, fixed
Seat cushion

Baksäte, fast
Sittdyna

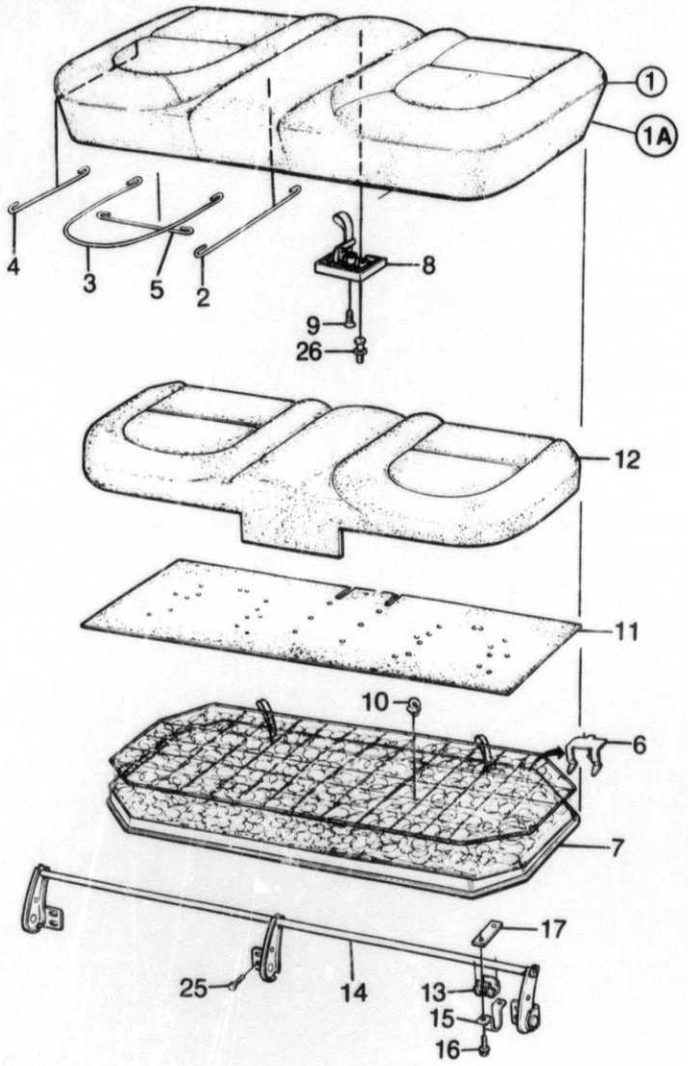

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 091		25,24)	1	Seat cushion	Sittdyna	6
0020	1	96 99 117		19,24)	1	Seat cushion	Sittdyna	6
0028								
0030	1A	97 51 231		25,36), -1991	1	.Seat cushion	.Sittdyna	6
0050	1A	96 75 216		19,36), -1991	1	.Seat cushion	.Sittdyna	6
0070	2	96 93 094			2	..Wire rod	..Trådten	5
0080	3	97 87 532		25)	2	..Wire rod	..Trådten	5
0090	4	95 84 749		19)	4	..Wire rod	..Trådten	5
0100	5	98 28 658		25)	2	..Wire rod	..Trådten	5
0110	5	97 21 499		19)	2	..Wire rod	..Trådten	5
0120	6	96 73 831		19)	2	..Clamp	..Klammer	5
0130	7	97 52 379		25)	1	..Spring housing	..Resårhus	6
0140	7	96 75 174		19)	1	..Spring housing	..Resårhus	6
0150	8	95 72 454			1	...Lock	...Lås	5
0160	9	79 77 028			2	...Screw	...Skruv	5
0170	10	97 81 469			X	...Hook	...Krok	5
0180	11	97 61 867			1	..Padding	..Vadd	5
0190	12	97 52 395		25)	1	..Foam plastic cushion	..Skumplastdyna	6
0205	12	95 91 793		19)	1	..Foam plastic cushion	..Skumplastdyna	6
0210	13	40 48 260			4	..Bushing	..Bussning	6
0220	14	95 72 470			1	..Link arm	..Länkarm	5
0230	15	40 48 278			4	..Cap	..Överfall	6
0245	16	79 75 436			8	..Screw	..Skruv	5
0250	17	95 72 447			12	..Spacer	..Distans	5
0260	25	97 78 952			6	Screw	Skruv	5
0270	26	96 71 025		-1991	1	Lock pin	Låspinne	5
0275	26	43 12 948		1992-	1	Lock pin	Låspinne	5
0280		*97 46 736*		See page 8B-221, 6-J06 NLS	1	Clamp kit	Klammersats	
0280								

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H22

Rear seat, fixed
Back cushion

Baksäte, fast
Ryggdyna

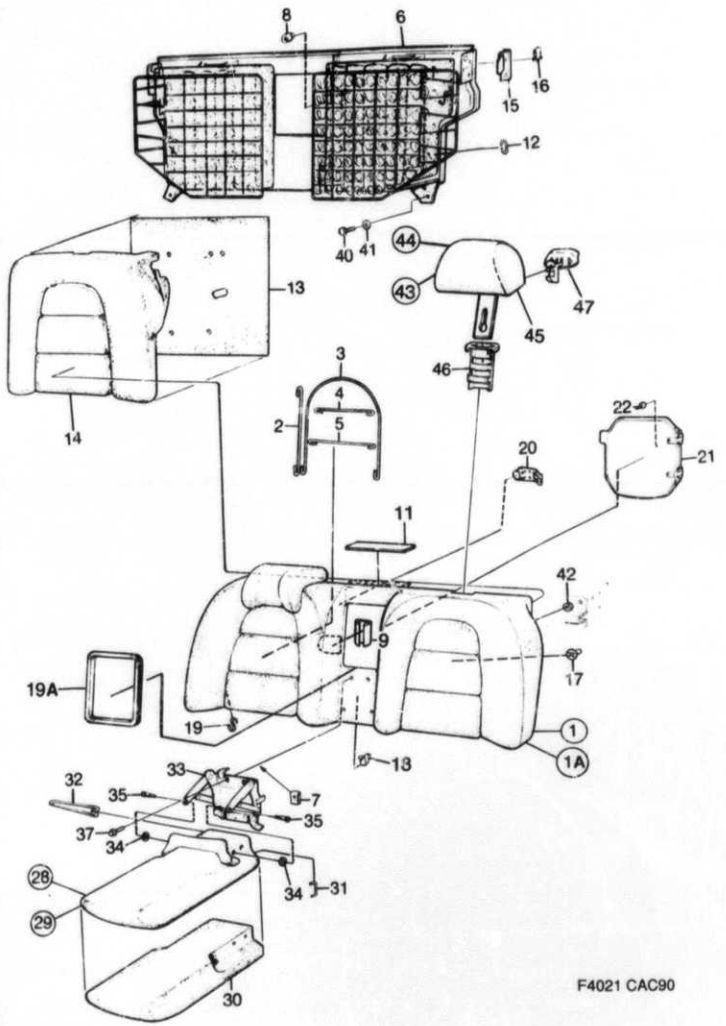

F4021 CAC90

1575	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 000		25,24)	1	Backrest cushion	Ryggdyna	6
0020	1	96 99 026		19,24)	1	Backrest cushion	Ryggdyna	6
0028								
0030	1A	97 51 298		25,36), -1991	1	.Backrest cushion	.Ryggdyna	6
0050	1A	96 75 208		19,36), -1991	1	.Backrest cushion	.Ryggdyna	6
0070	2	95 79 244		19)	4	..Wire rod	..Trådten	5
0080	3	97 21 598		25)	2	..Wire rod	..Trådten	5
0090	4	97 21 499		19)	4	..Wire rod	..Trådten	5
0100	4	98 28 641		25)	2	..Wire rod	..Trådten	5
0110	5	98 28 658		25)	2	..Wire rod	..Trådten	5
0120	6	97 51 322		25)	1	..Spring housing	..Resårhus	6
0130	6	96 93 177		19)	1	..Spring housing	..Resårhus	6
0140	7	79 72 573			4	...Clip nut	...Clipsmutter	5
0150	8	97 81 469			X	...Hook	...Krok	5
0155	9	95 72 835			1	...Plastic lining	...Plastskoning	6
0158	11	40 35 747			1	..Strip	..List	6
0160	12	*98 49 498*		25) NLS - USE 9450685	2	..Clamp	..Klammer	5
0170	12	*98 49 498*		19) NLS - USE 9450685	6	..Clamp	..Klammer	5
0180	13	96 96 691			2	..Padding	..Vadd	5
0190	14	97 88 928		25), LH	1	..Foam plastic cushion	..Skumplastdyna	6
0200	14	97 88 910		25), RH	1	..Foam plastic cushion	..Skumplastdyna	6
0210	14	95 84 772		19), LH	1	..Foam plastic cushion	..Skumplastdyna	6
0220	14	95 84 764		19), RH	1	..Foam plastic cushion	..Skumplastdyna	6
0230	15	95 73 817		LH	1	..Upholstery clip	..Klädselfäste	5
0240	15	95 73 809		RH	1	..Upholstery clip	..Klädselfäste	5
0250	16	73 99 496			2	..Clamp	..Klammer	5
0260	17	96 91 320			1	..Solenoid housing	..Magnethus	5
0270	18	97 71 288			8	..Clamp	..Klammer	5
0280	19	97 69 217		19)	8	..Hook	..Krok	5
0285	19A	95 80 358			1	..Strip	..List	6
0295	20	40 37 529			1	..Cover washer	..Täckbricka	6
0305	21	40 37 537			1	.Hatch	.Lucka	6
0310	22	79 70 577			2	.Screw	.Skruv	5
0320	28	97 51 314		24)	1	.Arm rest	.Armstöd	6
0330	28	97 82 129		24)	1	.Arm rest	.Armstöd	6
0331						leather	läder	
0340	29	96 72 650		36)	1	..Arm rest	..Armstöd	6
0350				See page 8B-221, 6-J06				
0360	30	97 81 337			1	...Cushion	...Kudde	6
0370	31	84 38 467			2	...Staple	...Häftklammer	5
0380	32	94 45 909			1	...Clamp	...Trådbygel	6
0395	33	95 93 948			1	...Bracket	...Konsol	6
0400	34	84 57 541			4	...Washer	...Bricka	5
0410	35	40 55 133			4	...Shoulder screw	...Ansatsskruv	5
0435	37	79 71 294			4	...Screw	...Skruv	5
0440	40	79 76 897			2	Screw	Skruv	5
0450	41	73 11 772			2	Washer	Bricka	5
0460	42	79 67 953			2	Nut	Mutter	5
0470	43	96 99 208		19,24)	2	Head restraint	Nackstöd	6
0480	43	96 99 216		25,24)	2	Head restraint	Nackstöd	6
0490	44	40 48 948		36)	2	.Head restraint	.Nackstöd	6
0530	45	40 36 133			1	..Head restraint	..Nackstöd	6
0555	46	40 31 563			1	..Sleeve	..Hylsa	5
0560	47	41 36 610		(4031555)	1	..Catch	..Hake	6
0580		*97 46 736*		See page 8B-221, 6-J06 NLS	1	Clamp kit	Klammersats	
0580								

19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-H24 Equipment luggage compartment
Utrustning bagagerum

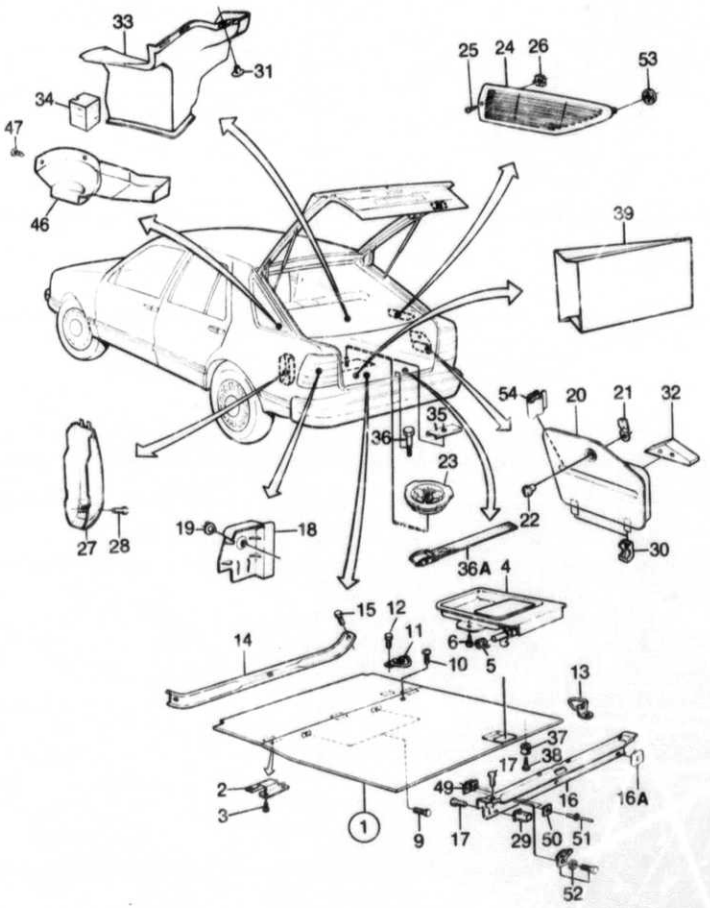

F4331 CAC90

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 75 630		-1991	1	Floor	Golv	5
0020	1	*90 89 285*		1992-,223) NLS - USE 4267654	1	Load floor	Lastgolv	5
0025	1	42 67 654		224)	1	Load floor	Lastgolv	5
0030	1	*41 36 180*		1992-,223), 4D, RAC NLS - USE 4267662	1	Load floor	Lastgolv	5
0035	1	42 67 662		224), 4D, RAC	1	Load floor	Lastgolv	5
0040	2	97 64 853		LH	1	.Hinge	.Gångjärn	5
0050	2	97 90 981		CENTRE AND RH	2	.Hinge	.Gångjärn	5
0060	3	97 75 230			24	.Screw	.Skruv	5
0070	4	96 57 123			1	.Lock	.Lås	6
0080	5	97 74 282			1	.Spring	.Fjäder	6
0090	6	80 59 248			2	.Screw	.Skruv	5
0100	9	79 72 938		-1991	2	Screw	Skruv	5
0110	10	79 72 938		1992-,223)	2	Screw	Skruv	5
0115	10	97 71 320		224)	2	Screw	Skruv	5
0120	11	97 74 217			2	Eye	Ögla	6
0130	12	79 22 420			4	Screw	Skruv	5
0140	13	97 77 749			2	Eye	Ögla	6
0150	14	95 74 468		-1991	1	Cover	Kåpa	5
0160	14	40 31 696		1992-	1	Cover	Kåpa	5
0170	15	*84 41 503*		NLS - USE 7970601	3	Screw	Skruv	5
0180	16	97 54 847		1990, 5D	1	Sill protection	Tröskelskydd	5
0190	16	95 45 450		1990, 4D	1	Sill protection	Tröskelskydd	6
0200	16	*96 56 968*		1990, 5D, AU, CA NLS - USE 4258596	1	Sill protection	Tröskelskydd	5
0210	16	42 58 596		1991-, 5D	1	Sill protection	Tröskelskydd	5
0220	16	*41 41 636*		70), 1991-1992, 4D NLS - USE 4271235	1	Sill protection	Tröskelskydd	6
0222	16	42 71 235		110), 1993-, 4D	1	Sill protection	Tröskelskydd	6
0230	16			5CS	1	Sill protection	Tröskelskydd	
0240				See page 8B-131, 6-F12				
0250	16A	96 58 618		5D	3	.Plug	.Plugg	5
0260	17	97 71 320			7	Screw	Skruv	5
0270	17	97 71 320		4D	9	Screw	Skruv	5
0280	18			See page 3A-059, 2-C12	1	Cover	Kåpa	
0290	19			See page 3A-059, 2-C12	2	.Knob	.Vred	
0300	20	*95 48 108*		-1991 NLS - USE 4499778	1	Tool box	Verktygslåda	6
0305	20	42 70 005		1992-	1	Tool box	Verktygslåda	6
0306	20	44 99 778		1993-	1	Tool box	Verktygslåda	
0310	21	97 67 799			1	.Catch	.Hake	5
0320	22	97 67 781			1	.Knob	.Vred	5
0330	23	97 74 290			1	Knob	Vred	5
0340	24	95 71 043		-1991, 5D	1	Grille	Galler	5
0350	24	41 41 958		1992-, 5D	1	Grille	Galler	5
0360	24	95 45 443		1990, 4D	1	Grille	Galler	5
0370	24	41 41 628		1991, 4D	1	Grille	Galler	5
0380	25	79 77 960		5D	1	Screw	Skruv	5
0400	26	82 38 305		5D	1	Clip	Clips	3
0420	27	97 67 971		-1991, 5D	1	Cover	Kåpa	5
0430	27	95 45 351		-1991, 4D	1	Cover	Kåpa	5
0440	28	84 26 199		-1991	1	Screw	Skruv	5
0450								
0460	29	79 77 358			3	Press nut	Pressmutter	5
0470	29	79 77 358		4D	1	Press nut	Pressmutter	5
0480	30	97 95 717			2	Cover	Kåpa	5
0490	31	40 87 029		RAC	1	Push nut	Tryckmutter	6
0500	32	96 61 877		-1991	1	Holder	Hållare	6

70. Grey Grå
110. Black Svart
199. Ch. M1017620--, M2011731--
223. Ch. --N1000798
224. Ch. N1000799--


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I02 Equipment luggage compartment / Utrustning bagagerum

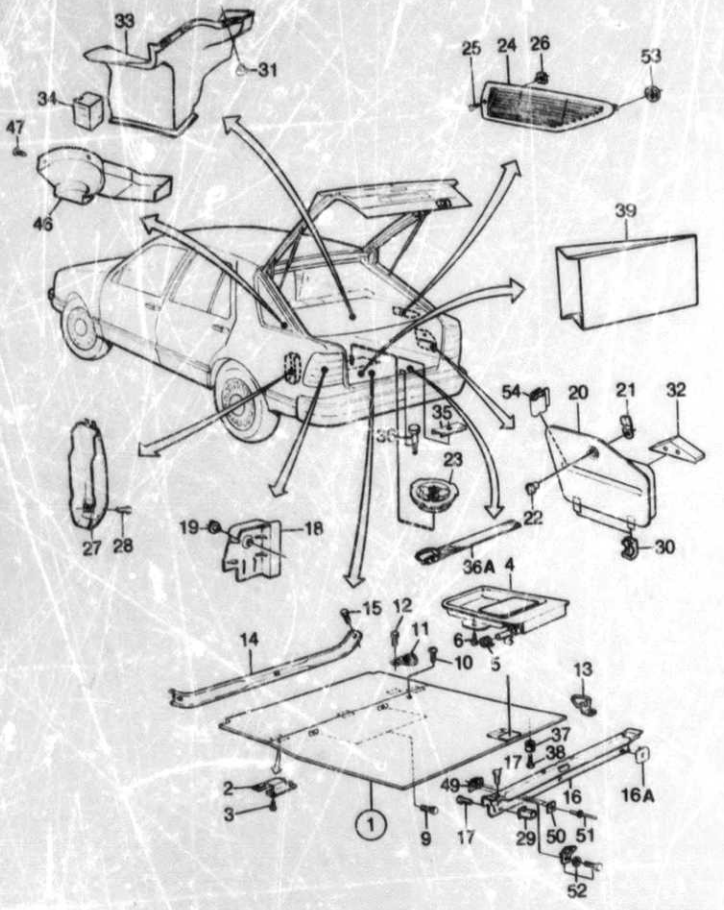

F4331 CAC90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
33	42 67 761		RAC	1	Cover	Kåpa	6
34	42 67 704		RAC	1	Support	Stöd	5
35	97 33 338		1990	1	Washer	Bricka	5
					big spare wheel	stort reservhjul	
36	*96 61 018*		1990	1	Screw	Skruv	5
			NLS - USE 4141784		big spare wheel	stort reservhjul	
36A	41 41 784		1991-	1	Strap	Låsband	5
					big spare wheel	stort reservhjul	
37	97 94 264			1	Knob	Knopp	6
38	97 75 230			1	Screw	Skruv	5
39	94 59 728			1	Bag	Påse	6
46	95 76 513		-1991, 4D, LH	1	Protection	Skydd	4
46	95 76 505		-1991, 4D, RH	1	Protection	Skydd	4
46	*40 32 090*		1992-,280), 4D, LH NLS - USE 4268447	1	Protection	Skydd	4
46	42 68 447		281),-1992, 4D, LH	1	Protection	Skydd	4
46	40 32 108		1992, 4D, RH	1	Protection	Skydd	4
47	96 68 153		-1992, 4D	X	Clip	Clips	5
49	96 53 502		AU	3	Nut plate	Mutterplatta	5
49	95 83 790		-1992, CA	3	Nut plate	Mutterplatta	5
50	92 30 293		AU	3	Washer	Bricka	5
50	92 30 293		-1992, CA	3	Washer	Bricka	5
51	79 72 490		AU	3	Rivet	Nit	5
51	79 72 490		-1992, CA	3	Rivet	Nit	5
52	95 93 542		14),-1991, CA	1	Attaching washer	Fästbricka	6
52	95 93 534		14),-1991, 4D, CA	1	Attaching washer	Fästbricka	6
52	95 93 534		14),1992, CA	1	Attaching washer	Fästbricka	6
53	41 28 195		-1991, 4D	7	Lock washer	Spärrbricka	5
54	95 48 355		26)	1	Clamp	Klämma	3

14. Prepared for child restraint anchorages — Förbered för barnstolsinfästning
26. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
199. Ch. M1017620-, M2011731-
280. Ch. -N1036359
281. Ch. N1036360-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-104

Scuff plate protector
Tröskelskydd

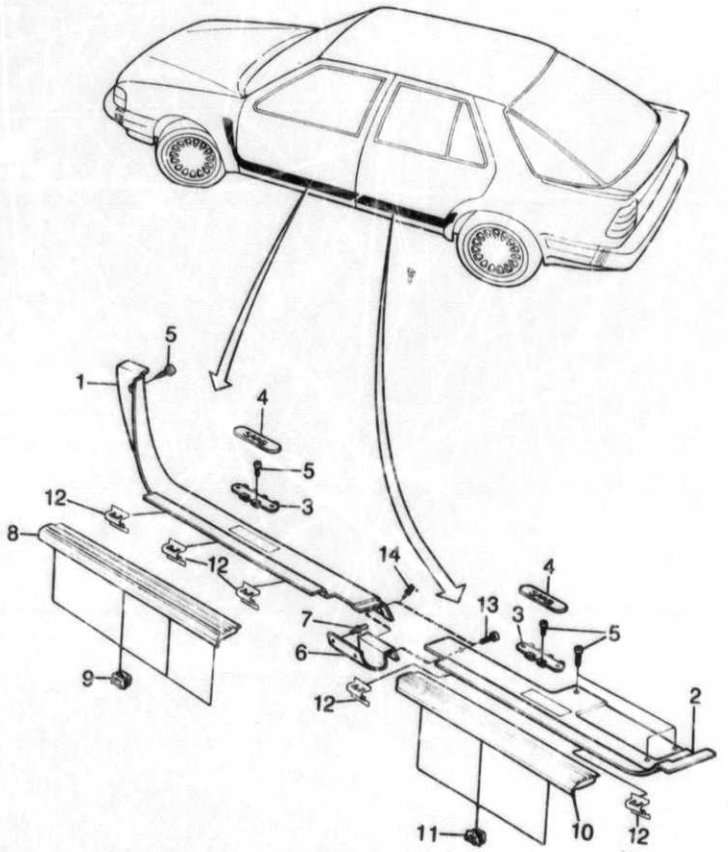

F1090 CAC90

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 75 695		75,60), LH	1	Sill protection	Tröskelskydd	5
0020	1	96 75 703		76,60), -1990, LH	1	Sill protection	Tröskelskydd	5
0030	1	95 85 712		75,13,60), LH	1	Sill protection	Tröskelskydd	5
0040	1	40 54 698		76,13,60), -1990, LH	1	Sill protection	Tröskelskydd	5
0050	1	96 97 574		60), -1990, RH	1	Sill protection	Tröskelskydd	5
0060	1	96 75 703		60), -1990, LH, RHD	1	Sill protection	Tröskelskydd	5
0070	1	96 97 582		75,60), RH, RHD	1	Sill protection	Tröskelskydd	5
0080	1	96 97 574		76,60), -1990, RH, RHD	1	Sill protection	Tröskelskydd	5
0090								
0100	1	*95 80 960*		75,90), LH NLS - USE 9580986	1	Sill protection	Tröskelskydd	5
0110	1	95 80 986		76,90), -1990, LH	1	Sill protection	Tröskelskydd	5
0120	1	95 87 700		75,13,90), LH	1	Sill protection	Tröskelskydd	5
0130	1	40 54 722		76,13,90), -1990, LH	1	Sill protection	Tröskelskydd	5
0140	1	95 80 978		90), -1990, RH	1	Sill protection	Tröskelskydd	5
0150	1	95 80 986		90), -1990, LH, RHD	1	Sill protection	Tröskelskydd	5
0160	1	95 80 994		75,90), RH, RHD	1	Sill protection	Tröskelskydd	5
0170	1	95 80 978		76,90), -1990, RH, RHD	1	Sill protection	Tröskelskydd	5
0180								
0190	1	*96 75 752*		75,80), LH NLS - USE 9675760	1	Sill protection	Tröskelskydd	5
0200	1	96 75 760		76,80), -1990, LH	1	Sill protection	Tröskelskydd	5
0210	1	95 85 746		75,13,80), LH	1	Sill protection	Tröskelskydd	5
0220	1	40 54 714		76,13,80), -1990, LH	1	Sill protection	Tröskelskydd	5
0230	1	95 72 397		80), -1990, RH	1	Sill protection	Tröskelskydd	5
0240	1	96 75 760		80), -1990, LH, RHD	1	Sill protection	Tröskelskydd	5
0250	1	95 72 405		75,80), RH, RHD	1	Sill protection	Tröskelskydd	5
0260	1	95 72 397		76,80), -1990, RH, RHD	1	Sill protection	Tröskelskydd	5
0270								
0280	1	*96 75 737*		75,110), LH NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0290	1	*96 75 745*		76,219,110), LH NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0300	1	42 65 476		220,110), LH	1	Sill protection	Tröskelskydd	5
0310	1	95 85 738		75,13,110), LH	1	Sill protection	Tröskelskydd	5
0320	1	*40 54 706*		76,219,13,110), LH NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0330	1	42 65 484		220,13,110), LH	1	Sill protection	Tröskelskydd	5
0340	1	96 97 616		110), RH	1	Sill protection	Tröskelskydd	5
0350	1	*96 75 745*		110), LH, RHD NLS - USE 4265484	1	Sill protection	Tröskelskydd	5
0360	1	*96 97 624*		75,110), RH, RHD NLS - USE 9697616	1	Sill protection	Tröskelskydd	5
0370	1	96 97 616		76,110), RH, RHD	1	Sill protection	Tröskelskydd	5
0380								
0390	2	96 56 653		60), -1990, LH	1	Sill protection	Tröskelskydd	5
0400	2	96 56 661		60), -1990, RH	1	Sill protection	Tröskelskydd	5
0410								
0420	2	95 81 174		90), -1990, LH	1	Sill protection	Tröskelskydd	5
0430	2	95 81 182		90), -1990, RH	1	Sill protection	Tröskelskydd	5
0440								
0450	2	96 75 919		80), -1990, LH	1	Sill protection	Tröskelskydd	5
0460	2	96 75 927		80), -1990, RH	1	Sill protection	Tröskelskydd	5
0470								

13. AIR-BAG
60. Red Röd
75. Ch. --L1006073, --L2004682, --L8000765
76. Ch. L1006074--, L2004683--, L8000766--
80. Blue Blå
90. Yellow Gul
110. Black Svart
219. Ch. --M1028470, --M2012513
220. Ch. M1028471--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-106

Scuff plate protector
Tröskelskydd

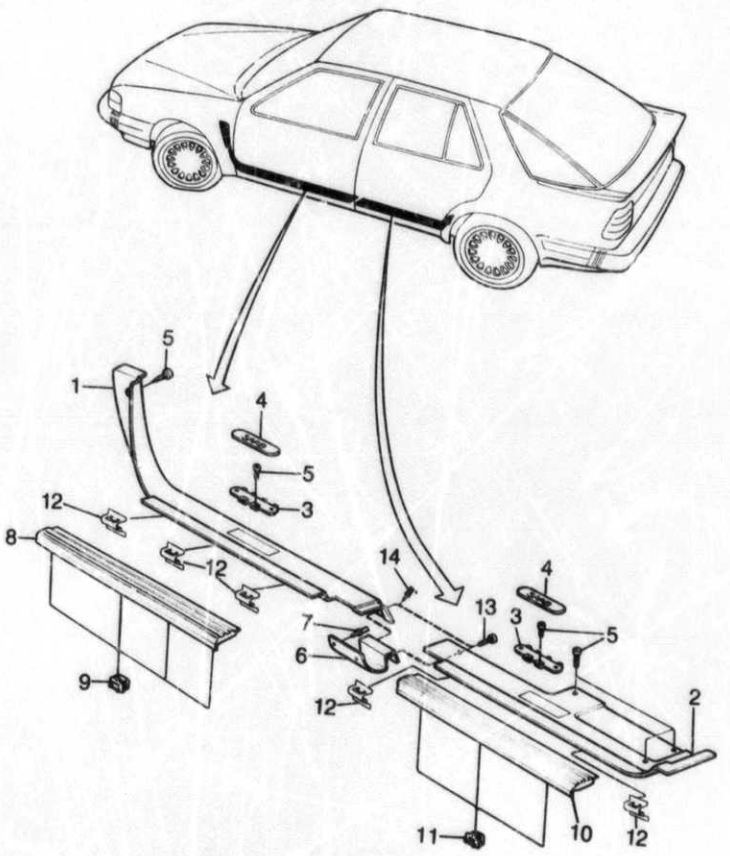

F1090 CAC90

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	2	97 98 208		110), LH	1	Sill protection	Tröskelskydd	5
0490	2	97 98 216		110), RH	1	Sill protection	Tröskelskydd	5
0500								
0510	3	96 72 262		LH	1	Plate	Plåt	6
0520						front	fram	
0530	3	97 67 641		RH	1	Plate	Plåt	6
0540						front	fram	
0550	3	97 67 641			2	Plate	Plåt	6
0560						rear	bak	
0570	4	95 71 548		60), -1990	4	Cover	Täcklock	6
0580	4	95 81 000		90), -1990	4	Cover	Täcklock	6
0590	4	95 72 439		80), -1990	4	Cover	Täcklock	6
0600	4	95 71 563		110)	4	Cover	Täcklock	6
0610	5	79 77 366			12	Screw	Skruv	5
0620	6	97 65 181			2	Bracket	Fäste	5
0630	7	79 61 634		-1990 NLS - USE 7977804	4	Rivet	Nit	5
0640	7	79 72 490		1991-	4	Rivet	Nit	5
0650	8	40 48 955		1990	2	Sill protection	Tröskelskydd	5
0660	8			1991-, 5D		Sill protection	Tröskelskydd	
0661				See page 8A-081, 5-D10				
0670	8			1991-, 4D		Sill protection	Tröskelskydd	
0671				See page 8A-087, 5-D16				
0680	8			1992-, 5CS		Sill protection	Tröskelskydd	
0681				See page 8A-091, 5-D20				
0690	9	97 83 531		1990	4	.Clamp	.Klämma	5
0700	10	40 48 989		1990, LH	1	Sill protection	Tröskelskydd	5
0710	10	40 48 971		1990, RH	1	Sill protection	Tröskelskydd	5
0720	10			1991-, 5D		Sill protection	Tröskelskydd	
0721				See page 8A-081, 5-D10				
0730	10			1991-, 4D		Sill protection	Tröskelskydd	
0731				See page 8A-087, 5-D16				
0740	10			1992-, 5CS		Sill protection	Tröskelskydd	
0741				See page 8A-091, 5-D20				
0750	11	97 83 531		1990	3	.Clamp	.Klämma	5
0760	12	97 94 504		1990	X	Clamp	Klämma	5
0770	12	42 56 939		1991-	X	Clamp	Klämma	5
0780	13	79 77 366			4	Screw	Skruv	5
0790	14	92 55 845			4	Rivet	Nit	5


60. Red Röd
80. Blue Blå
90. Yellow Gul
110. Black Svart

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

8B GROUP INDEX

Instrument panel 6-A06
Upholstery 6-A20
Other interior equipment 6-G12
Complete sets 6-I24

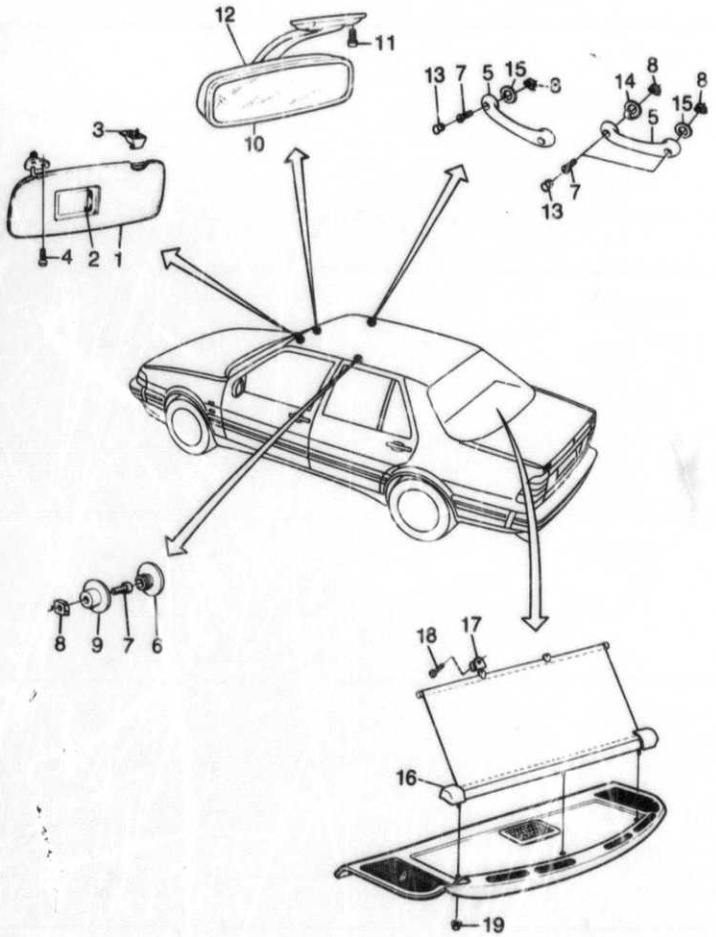

F4022 CAC90

1620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	97 70 611		LH	1	Sun visor	Solskydd	5
0020	1	97 70 629		RH	1	Sun visor	Solskydd	5
0030	1	97 70 637		282), LH	1	Sun visor	Solskydd	5
0040						with mirror	med spegel	
0045	1	42 68 272		283), LH	1	Sun visor	Solskydd	5
0046						with mirror	med spegel	
0050	1	*97 70 645*		282), RH	1	Sun visor	Solskydd	5
0060				NLS - USE 4268280		with mirror	med spegel	
0065	1	42 68 280		283), RH	1	Sun visor	Solskydd	5
0066						with mirror	med spegel	
0070	1	95 78 428		LH	1	Sun visor	Solskydd	5
0080						mirror with light	spegel med belysning	
0090	1	95 78 436		RH	1	Sun visor	Solskydd	5
0100						mirror with light	spegel med belysning	
0110	2			See page 3A-069, 2-C22		Bulb	Glödlampa	
0120	3	97 70 603			2	Support	Stöd	5
0130	3	95 78 444			2	Support	Stöd	5
0140						mirror with light	spegel med belysning	
0150	4	79 73 951			6	Screw	Skruv	5
0160	5	95 91 405			3	Curve handle	Kurvhandtag	5
0170	6	97 70 561		-1993	2	Cover washer	Täckbricka	5
0180	7	80 59 420		1990	8	Screw	Skruv	5
0185	7	*79 78 380*		1991- NLS - USE 8029944, 8059420	8	Screw	Skruv	5
0190	8	79 74 983			8	Cage nut	Korgmutter	5
0200	9	*95 91 421*		1990 NLS - USE 4141610	2	Bracket	Fäste	5
0205	9	41 41 610		1991-	2	Bracket	Fäste	5
0210	10	95 91 314			1	Rear view mirror	Backspegel	4
0220	11	79 75 329			3	▲Screw	▲Skruv	5
0230	12			See page 3A-069, 2-C22	1	▲Bulb	▲Glödlampa	
0240	13	97 70 595			6	Cover	Täcklock	5
0250	14	97 53 724			2	Hook	Krok	5
0260	15	97 82 293			4	Spacer washer	Distansbricka	5
0270	16	42 69 809		4D	1	Blind	Rullgardin	5
0280	17	42 69 817		4D	2	Bracket	Fäste	6
0290	18	79 65 361		4D	2	Screw	Skruv	5
0300	19	79 75 576		4D	3	Nut	Mutter	5

282. Ch. --P1012091
283. Ch. P1012092--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I10

Shelf
Hatthylla

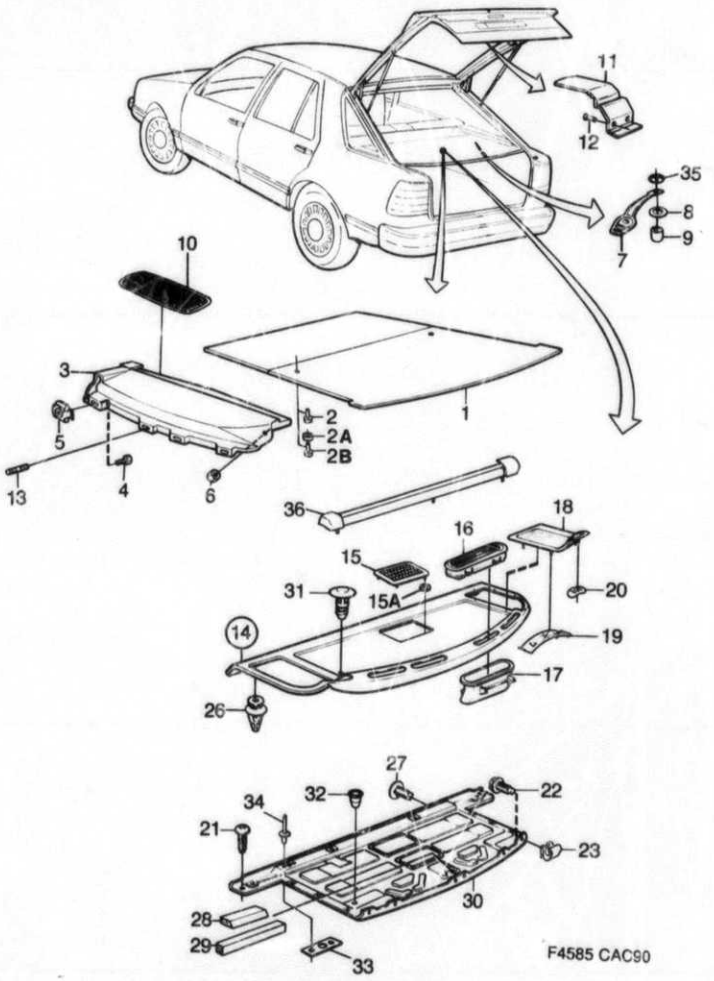

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 64 214		210), 5D	1	Rear shelf	Hatthylla	5
0020	1	*42 67 647*		210,225), 5CS NLS - USE 4368528	1	Rear shelf	Hatthylla	5
0030	1	42 68 496		210,226), 5CS	1	Rear shelf	Hatthylla	5
0050	1	96 90 959		113,60), 5D	1	Rear shelf	Hatthylla	5
0060	1	40 43 459		114,60), -1991,5D	1	Rear shelf	Hatthylla	5
0080	1	95 81 201		105,90), 5D	1	Rear shelf	Hatthylla	5
0090	1	*40 44 129*		106,90), -1991, 5D NLS - USE 4265112	1	Rear shelf	Hatthylla	5
0100	1	42 65 112		90), 1992-, 5D	1	Rear shelf	Hatthylla	5
0110	1	*42 67 621*		90,225), 5CS NLS - USE 4368536	1	Rear shelf	Hatthylla	5
0120	1	42 68 470		90,226), 5CS	1	Rear shelf	Hatthylla	5
0140	1	96 90 967		107,80), 5D	1	Rear shelf	Hatthylla	5
0150	1	40 43 642		108,80), -1991, 5D	1	Rear shelf	Hatthylla	5
0160	1	42 65 096		80), 1992-, 5D	1	Rear shelf	Hatthylla	5
0170	1	*42 67 605*		80,225), 5CS NLS - USE 4368544	1	Rear shelf	Hatthylla	5
0180	1	42 68 454		80,226), 5CS	1	Rear shelf	Hatthylla	5
0200	1	41 33 344		100), -1991, 5D	1	Rear shelf	Hatthylla	5
0210	1	42 65 120		100), 1992-, 5D	1	Rear shelf	Hatthylla	5
0220	1	*42 67 639*		100,225), 5CS NLS - USE 4368551	1	Rear shelf	Hatthylla	5
0230	1	42 68 488		100,226), 5CS	1	Rear shelf	Hatthylla	5
0250	1	96 73 765		111,70), 5D	1	Rear shelf	Hatthylla	5
0260	1	40 43 949		112,70), -1991, 5D	1	Rear shelf	Hatthylla	5
0270	1	42 65 104		70), 1992-, 5D	1	Rear shelf	Hatthylla	5
0280	1	*42 67 613*		70,225), 5CS NLS - USE 4368569	1	Rear shelf	Hatthylla	5
0285	1	42 68 462		70,226), 5CS	1	Rear shelf	Hatthylla	5
0300	2	96 73 773		-1991	2	.Set screw	.Stoppskruv	5
0301	2A	42 66 532		1992-	2	.Stop	.Stopp	6
0302	2B	42 67 787		1992-	2	.Screw	.Skruv	6
0320	3	42 64 230		210), LH, 5D	1	Support	Stöd	5
0330	3	42 64 222		210), RH, 5D	1	Support	Stöd	5
0350	3	95 76 570		113,60), LH, 5D	1	Support	Stöd	5
0360	3	40 43 477		114,60), LH, -1991, 5D	1	Support	Stöd	5
0370	3	96 90 983		113,60), RH, 5D	1	Support	Stöd	5
0380	3	40 43 485		114,60), RH, -1991, 5D	1	Support	Stöd	5

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
105. Ch. --L1015777, --L2011295, --L8001822
106. Ch. L1015778--, L2011296--, L8001823--
107. Ch. --L1015026, --L2010718, --L8001696
108. Ch. L1015027--, L2010719--, L8001697--
111. Ch. --L1015067, --L2010741, --L8001722
112. Ch. L1015068--, L2010742--, L8001723--
113. Ch. --L1015027, --L2010734, --L8001688
114. Ch. L1015028--, L2010735--, L8001689--
210. Light beige Ljus beige
225. Ch. --N1001199
226. Ch. N1001200--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I12

Shelf
Hatthylla

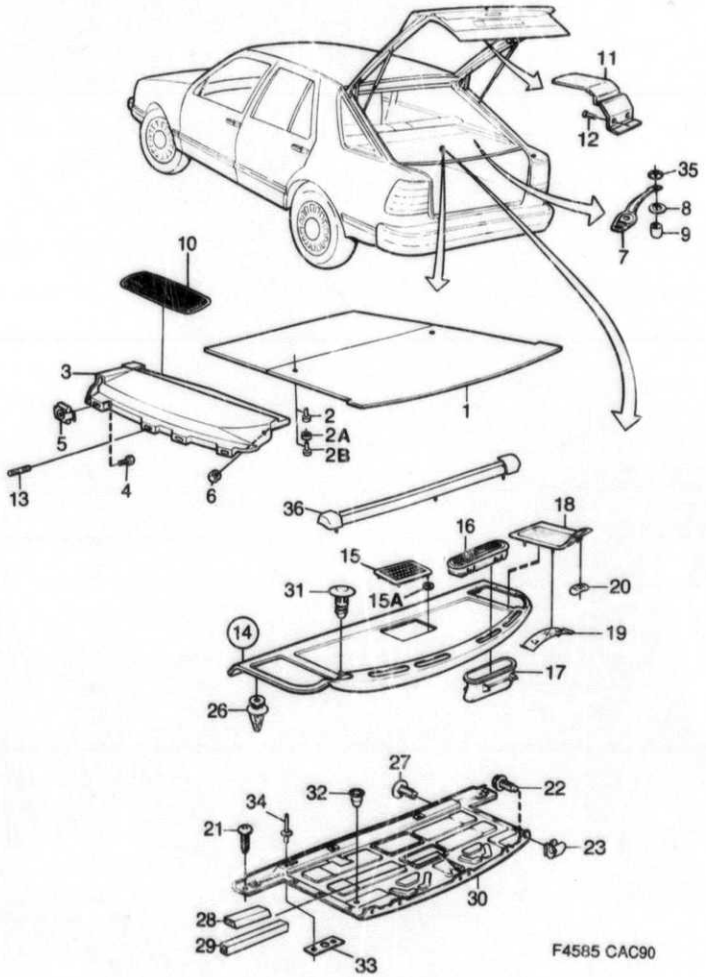

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0400	3	95 81 265		105,90), LH, 5D	1	Support	Stöd	5
0410	3	40 44 152		106,90), -1991, LH, 5D	1	Support	Stöd	5
0420	3	42 65 195		90), 1992-, LH, 5D	1	Support	Stöd	5
0430	3	95 81 273		105,90), RH, 5D	1	Support	Stöd	5
0440	3	40 44 160		106,90), -1991, RH, 5D	1	Support	Stöd	5
0450	3	42 65 187		90), 1992-, RH, 5D	1	Support	Stöd	5
0460								
0470	3	95 76 604		107,80), LH, 5D	1	Support	Stöd	5
0480	3	40 43 659		108,80), -1991, LH, 5D	1	Support	Stöd	5
0490	3	42 65 146		80), 1992-, LH, 5D	1	Support	Stöd	5
0500	3	96 91 007		107,80), RH, 5D	1	Support	Stöd	5
0510	3	40 43 667		108,80), -1991, RH, 5D	1	Support	Stöd	5
0520	3	42 65 153		80), 1992-, RH, 5D	1	Support	Stöd	5
0530								
0540	3	41 33 369		100), -1991, LH, 5D	1	Support	Stöd	5
0550	3	42 65 211		100), 1992-, LH, 5D	1	Support	Stöd	5
0560	3	41 33 385		100), -1991, RH, 5D	1	Support	Stöd	5
0570	3	42 65 203		100), 1992-, RH, 5D	1	Support	Stöd	5
0580								
0590	3	95 76 596		111,70), LH, 5D	1	Support	Stöd	5
0600	3	40 44 020		112,70), -1991, LH, 5D	1	Support	Stöd	5
0610	3	42 65 179		70), 1992-, LH, 5D	1	Support	Stöd	5
0620	3	97 99 776		111,70), RH, 5D	1	Support	Stöd	5
0630	3	40 44 038		112,70), -1991, RH, 5D	1	Support	Stöd	5
0640	3	42 65 161		70), 1992-, RH, 5D	1	Support	Stöd	5
0647								
0650	3	*42 60 410*		70,225), 5CS, LH NLS - USE 4486817	1	Support	Stöd	5
0650								
0660	3	*42 60 402*		70,225), 5CS, RH NLS - USE 4486825	1	Support	Stöd	5
0660								
0680	3	42 68 512		70,226), 5CS, LH	1	Support	Stöd	5
0690	3	42 68 520		70,226), 5CS, RH	1	Support	Stöd	5
0697								
0700	4	*79 75 170*		NLS - USE 7982366	X	Screw	Skruv	5
0710	5	79 74 728		5D	10	Cage nut	Korgmutter	5
0720	6	79 71 658		5D	6	Nut	Mutter	5
0730	7	84 67 409			1	Strap	Stropp	5
0740	8	97 94 520			1	Spring nut	Fjädermutter	5
0750	9	97 96 327			3	Cap	Hatt	6
0760						only cars without loudspeaker grille	endast bilar utan högtalargaller	
0770								
0780	10	97 83 00?		60), LH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0790	10	97 83 01(		60), RH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0800	10	95 81 331		90), LH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0810	10	95 81 372		90), RH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0820	10	96 91 114		80), LH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0830	10	96 91 122		80), RH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0840	10	97 99 628		70,100), LH, -1991, 5D	1	Loudspeaker grille	Högtalargaller	5
0850	10	*97 99 636*		70,100), RH, -1991, 5D NLS - USE 4264461	1	Loudspeaker grille	Högtalargaller	5
0850								

60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
100. Light grey Ljus grå
105. Ch. --L1015777, --L2011295, --L8001822
106. Ch. L1015778--, L2011296--, L8001823--
107. Ch. --L1015026, --L2010718, --L8001696
108. Ch. L1015027--, L2010719--, L8001697--
111. Ch. --L1015067, --L2010741, --L8001722
112. Ch. L1015068--, L2010742--, L8001723--
225. Ch. --N1001199
226. Ch. N1001200--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I14

Shelf
Hatthylla

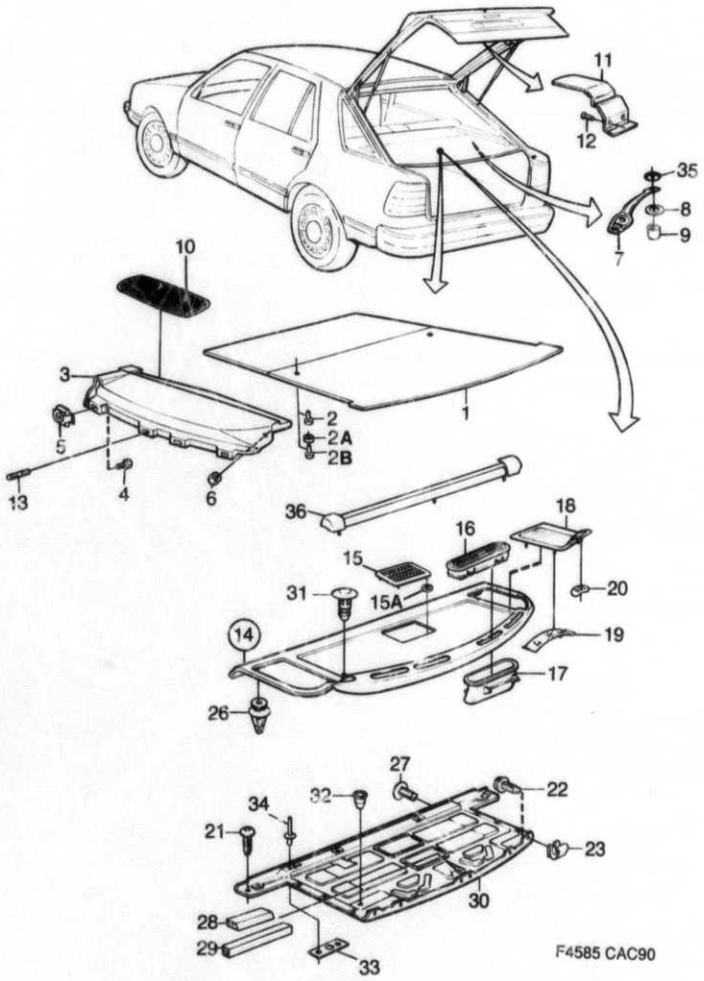

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0860	10	42 64 479		70), LH, 1992-, 5D	1	Loudspeaker grille	Högtalargaller	5
0870	10	42 64 461		70), RH, 1992-, 5D	1	Loudspeaker grille	Högtalargaller	5
0875	10			1), 5CS		Loudspeaker grille	Högtalargaller	
0880	11	97 97 085		5D	2	Profile	Profil	6
0890	12	98 49 514		5D	4	Rivet	Nit	5
0900	13	94 46 881		5D	4	Stud	Pinnskruv	5
0910								
0920	14	42 64 289		210), 4D	1	Rear shelf	Hatthylla	5
0930	14	42 64 305		210), 4D, RAC	1	Rear shelf	Hatthylla	5
0940	14	*95 45 070*		90,81), 4D NLS - USE 4044079	1	Rear shelf	Hatthylla	5
0940								
0950	14	40 44 079		90,82), 4D	1	Rear shelf	Hatthylla	5
0960	14	42 56 046		90), 4D, RAC	1	Rear shelf	Hatthylla	5
0970	14	95 45 021		60,81), 4D	1	Rear shelf	Hatthylla	5
0980	14	40 43 576		60,82), 4D, -1991	1	Rear shelf	Hatthylla	5
0990	14	41 33 278		100), 1991-, 4D	1	Rear shelf	Hatthylla	5
1000	14	42 56 053		100), 4D, RAC	1	Rear shelf	Hatthylla	5
1010	14	*95 45 047*		70,81), 4D NLS - USE 4043899	1	Rear shelf	Hatthylla	5
1010								
1020	14	40 43 899		70,82), 4D	1	Rear shelf	Hatthylla	5
1030	14	42 56 020		70), 4D, RAC	1	Rear shelf	Hatthylla	5
1040	14	*95 45 054*		80,81), 4D NLS - USE 4043626	1	Rear shelf	Hatthylla	5
1040								
1050	14	40 43 626		80,82), 4D	1	Rear shelf	Hatthylla	5
1060	14	42 56 038		80), 4D, RAC	1	Rear shelf	Hatthylla	5
1070								
1080	15	96 29 676		RAC	1	.Air outlet	.Luftutsläpp	5
1090	15A	96 95 081		RAC	4	.Washer	.Bricka	5
1100	16	95 81 422		90), -1991, 4D	4	.Air outlet	.Luftutsläpp	5
1110	16	96 94 308		60), -1991, 4D	4	.Air outlet	.Luftutsläpp	5
1120	16	96 94 324		70,100), -1991, 4D	4	.Air outlet	.Luftutsläpp	5
1130	16	96 94 332		80), -1991, 4D	4	.Air outlet	.Luftutsläpp	5
1140	16	42 64 446		70), 1992-, 4D	4	.Air outlet	.Luftutsläpp	5
1150	17	96 74 896		4D	4	.Air outlet	.Luftutsläpp	5
1160								
1170	18	95 81 448		90), -1991, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1180	18	95 81 430		90), -1991, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1190	18	96 93 961		60), -1191, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1200	18	96 93 979		60), -1991, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1210	18	96 94 001		70,100), -1991, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1220	18	96 94 019		70,100), -1991, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1230	18	96 94 027		80), -1991, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1240	18	96 94 035		80), -1991, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1250	18	96 94 001		70), 1992-, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
1260	18	96 94 019		70), 1992-, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
1270	19	95 78 246		4D	10	.Clamp	.Klämma	5
1280	20	96 92 724		4D	2	.Clamp	.Klämma	5
1290								
1300	21	79 71 294		95), 4D	2	Screw	Skruv	5
1310	21	79 72 607		96), 4D	2	Screw	Skruv	5
1320	22	82 86 296		4D	6	Screw	Skruv	5
1330	23	79 77 895		4D	6	Cage nut	Korgmutter	5

1. Not as separate spare part. Ej som separat reservdel.
60. Red Röd
70. Grey Grå
80. Blue Blå
81. Ch. --L1010837, --L2008237
82. Ch. L1010838--, L2008238--
90. Yellow Gul
95. Ch. --L1012686, --L2009065
96. Ch. L1012687--, L2009066--
100. Light grey Ljus grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventiletion	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I16

Shelf

Hatthylla

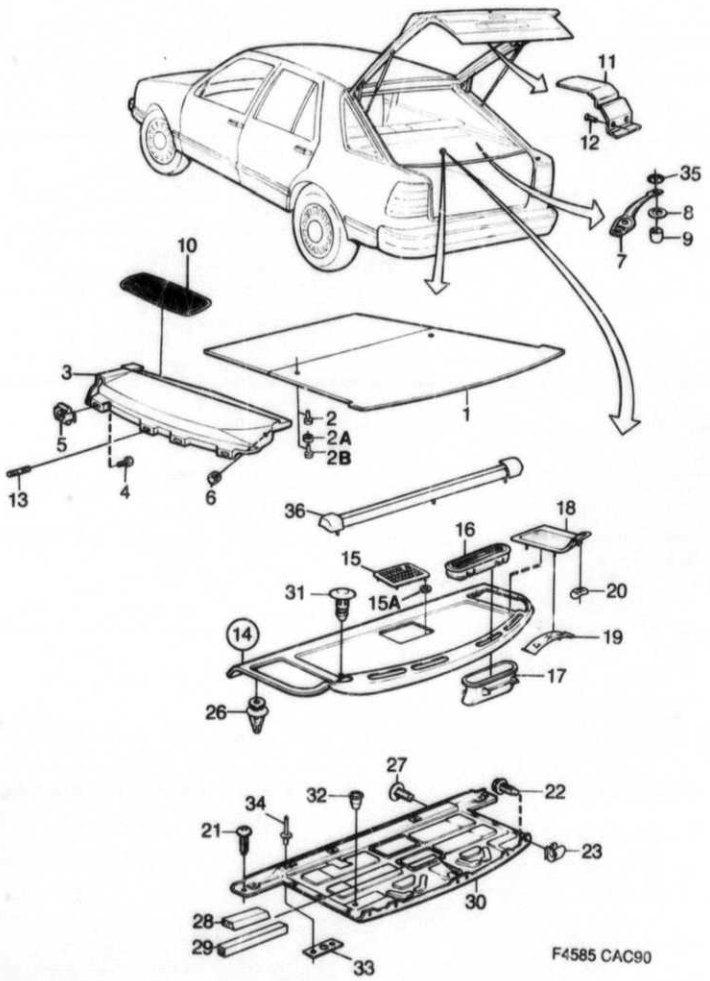

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1340	26	95 78 238		4D	4	Clamp	Klämma	5
1350	27	42 64 388		210), 4D	3	Cover	Täcklock	5
1360	27	95 91 892		90), 4D	3	Cover	Täcklock	5
1370	27	95 91 611		60), 4D, -1991	3	Cover	Täcklock	5
1380	27	95 91 637		70), 4D	3	Cover	Täcklock	5
1390	27	95 91 645		80), 4D	3	Cover	Täcklock	5
1400	28	40 30 342		27), 4D	1	Seal	Tätning	5
1410	29	40 34 369		27), 4D	1	Seal	Tätning	5
1420	30	96 73 666		140), 4D	1	Support	Stöd	5
1430	30	95 84 871		141), 4D	1	Support	Stöd	5
1440	30	95 48 124		4D, RAC	1	Support	Stöd	5
1450	31	42 64 370		210), 4D	2	Plug	Plugg	5
1460	31	95 83 576		90), 4D	2	Plug	Plugg	5
1470	31	95 83 170		60), 4D, -1991	2	Plug	Plugg	5
1480	31	95 83 196		70), 4D	2	Plug	Plugg	5
1490	31	95 83 204		80), 4D	2	Plug	Plugg	5
1500	32	95 80 275		4D	2	Sleeve	Hylsa	5
1510	33	95 83 790		CA	3	Nut plate	Mutterplatta	5
1520	33	96 53 502		AU	3	Nut plate	Mutterplatta	5
1530	34	79 72 490		CA, AU	6	Rivet	Nit	5
1540	35	79 71 518		5CS	1	Lock washer	Spärrbricka	5
1550	36			See page 8B-199, 6-I08		Blind	Rullgardin	

27. For cars with high mounted stop light För bilar med högt monterat bromsljus
60. Red Röd
70. Grey Grå
80. Blue Blå
90. Yellow Gul
140. Ch. --L1018764, --L2013499
141. Ch. L1018765--, L2013500--
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I18

Safety belt, front seat
Bilbälte framsäte

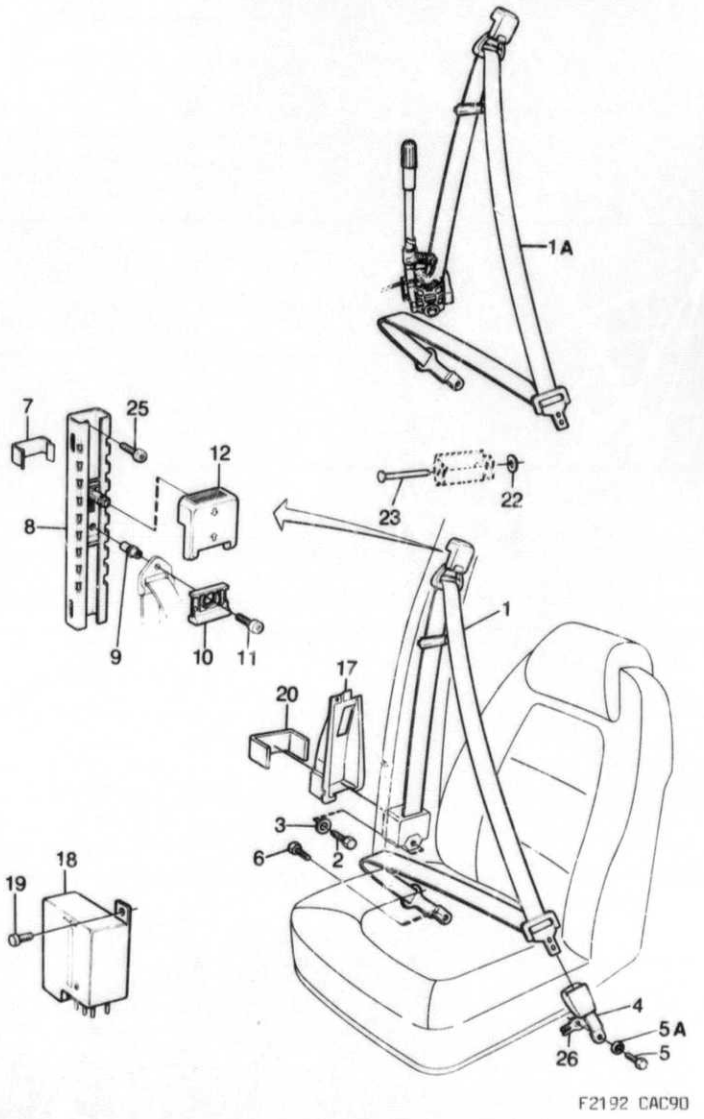

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 32 470*		1990, LH NLS - USE 4080859	1	Seat belt	Säkerhetsbälte	5
0020	1	*40 32 470*		1990, LH, AIR-BAG NLS - USE 4080859	1	Seat belt	Säkerhetsbälte	5
0030	1	40 80 859		1991-1992, LH	1	Seat belt	Säkerhetsbälte	5
0040	1	40 80 859		1991, LH, AIR-BAG	1	Seat belt	Säkerhetsbälte	5
0050	1	*40 32 488*		1990, RH NLS - USE 4080867	1	Seat belt	Säkerhetsbälte	5
0060	1	40 80 867		1991-1992, RH	1	Seat belt	Säkerhetsbälte	5
0080	1	*40 32 546*		26) 1990, LH NLS - USE 4080875	1	Seat belt	Säkerhetsbälte	5
0090	1	*40 32 546*		26) 1990, LH, AIR-BAG NLS - USE 4080875	1	Seat belt	Säkerhetsbälte	5
0100	1	40 80 875		26) 1991-1992, LH	1	Seat belt	Säkerhetsbälte	5
0110	1	40 80 875		26) 1991, LH, AIR-BAG	1	Seat belt	Säkerhetsbälte	5
0120	1	40 32 553		26) 1990, RH, NOT US	1	Seat belt	Säkerhetsbälte	5
0130	1	40 80 883		26) 1991-1992,RH, NOT US	1	Seat belt	Säkerhetsbälte	5
0150	1A	*40 32 496*		45), 1990, LH NLS - USE 4080891	1	Seat belt	Säkerhetsbälte	5
0160	1A	40 80 891		45), 1991, LH	1	Seat belt	Säkerhetsbälte	5
0165	1A	43 11 023		45), 1992-, LH	1	Seat belt	Säkerhetsbälte	5
0170	1A	*40 32 504*		45), 1990, RH NLS - USE 4080909	1	Seat belt	Säkerhetsbälte	5
0180	1A	40 80 909		45), 1991, RH	1	Seat belt	Säkerhetsbälte	5
0182	1A	43 11 031		45), 1992-, RH	1	Seat belt	Säkerhetsbälte	5
0200	1A	*40 32 538*		45,163), 1990, RH NLS - USE 4288221	1	Seat belt	Säkerhetsbälte	5
0210	1A	42 88 221		45,163), 1991, RH	1	Seat belt	Säkerhetsbälte	5
0230	1A	*40 32 561*		26,45), 1990, LH NLS - USE 4080917	1	Seat belt	Säkerhetsbälte	5
0240	1A	40 80 917		26,45), 1991, LH	1	Seat belt	Säkerhetsbälte	5
0245	1A	43 11 049		26,45), 1992-, LH	1	Seat belt	Säkerhetsbälte	5
0250	1A	*40 32 579*		26,45), 1990, RH NLS - USE 4080925	1	Seat belt	Säkerhetsbälte	5
0260	1A	40 80 925		26,45), 1991, RH	1	Seat belt	Säkerhetsbälte	5
0265	1A	43 11 056		26,45), 1992-, RH	1	Seat belt	Säkerhetsbälte	5
0280	1A	*40 32 603*		26,45,163), 1990, RH NLS - USE 4288205	1	Seat belt	Säkerhetsbälte	5
0290	1A	42 88 205		26,45,163), 1991, RH	1	Seat belt	Säkerhetsbälte	5
0360	2	84 99 204			1	.Screw	.Skruv	5
0365	2	84 99 238		45), 1992-	1	.Screw	.Skruv	6
0370	3	98 92 399		-1991	1	.Lock washer	.Låsbricka	5
0375	3	44 13 860		45), 1992-	1	.Washer	.Bricka	
0380	4	40 32 439		286)	2	Belt catch	Bältlås	5
0385	4	44 16 590		287)	2	Belt catch	Bältlås	5
0390	4	40 32 454		26,286)	2	Belt catch	Bältlås	5
0395	4	44 13 852		26,287)	2	Belt catch	Bältlås	5
0400	5	96 72 791			2	.Screw	.Skruv	5
0410	5	95 86 827		26)	2	.Screw	.Skruv	5
0420	5A	95 48 058		26)	2	.Spacer sleeve	.Distanshylsa	5
0430	6	84 99 204			2	Screw	Skruv	5
0440	6	95 44 818		26)	2	Screw	Skruv	5
0450	7	40 77 111			4	Clamp	Klämma	5
0460	8	95 47 696			2	Height adjustment	Höjdjustering	6

26. For cars with electricaiiy adjustable seats — För bilar med elmanövrerade stolar
45. With tensioner — Med sträckare
163. Only for cars that will be repaired in USA — Endast för bilar som repareras i USA
286. Ch. --P1016111
287. Ch. P1016112--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6-I20

Safety belt, front seat
Bilbälte framsäte

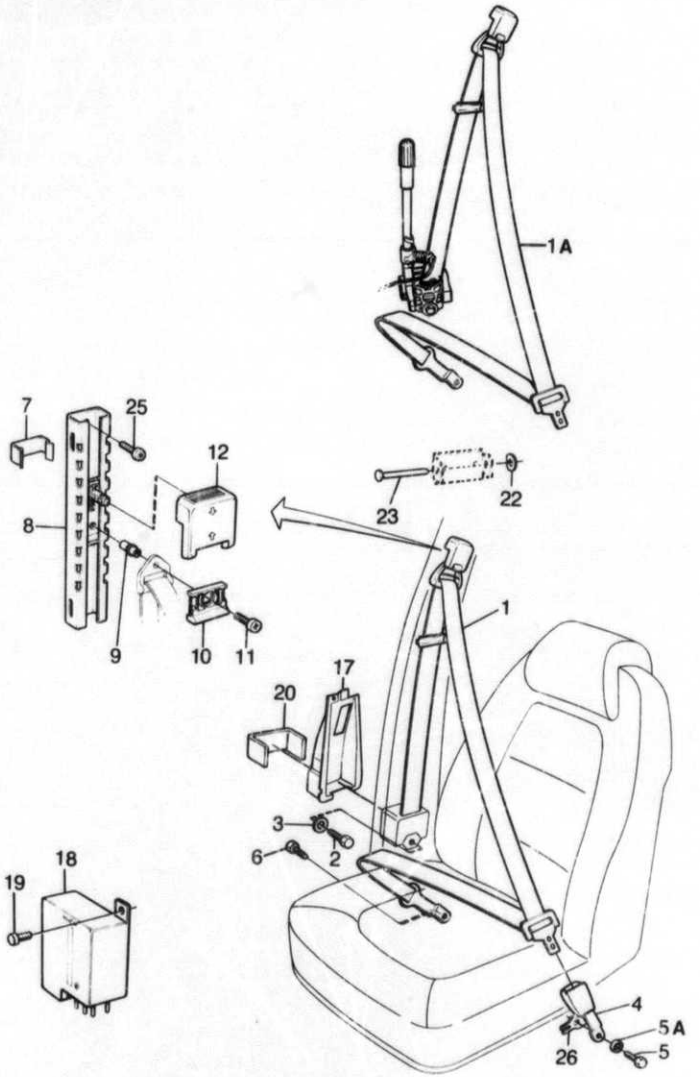

F2192 CAC90

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	9	96 72 569			2	Spacer sleeve	Distanshylsa	5
0480	10	96 94 951			2	Push button	Tryckknapp	6
0490	11	96 73 385			2	Screw	Skruv	5
0500	12	97 64 457			2	Cover	Kåpa	6
0510	17	40 77 871		LH	1	Protecting casing	Skyddskåpa	4
0520	17	40 77 889		RH	1	Protecting casing	Skyddskåpa	4
0530	18	*98 90 674*		45), -1991 NLS - USE 4313722	1	Sensor	Givare	5
0535	18	43 13 722		45), 1992-	1	Sensor	Givare	5
0540	19	*79 67 771*		45), -1991 NLS - USE 7970601	2	Screw	Skruv	5
0550	19	79 78 117		45), 1992-	2	Screw	Skruv	5
0560	20	97 91 070			2	Seal	Tätning	5
0570	22	79 79 651			2	Washer	Bricka	5
0580	23	96 92 815			2	Pin	Pinne	5
0590	25	97 94 132			4	Screw	Skruv	5
0600	26	40 42 974		26)	2	Reinforcement	Förstärkning	6

26. For cars with electrically adjustable seats För bilar med elmanövrerade stolar
45. With tensioner Med sträckare

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

6--I22

Safety belt, rear seat

Bilbälte, baksäte

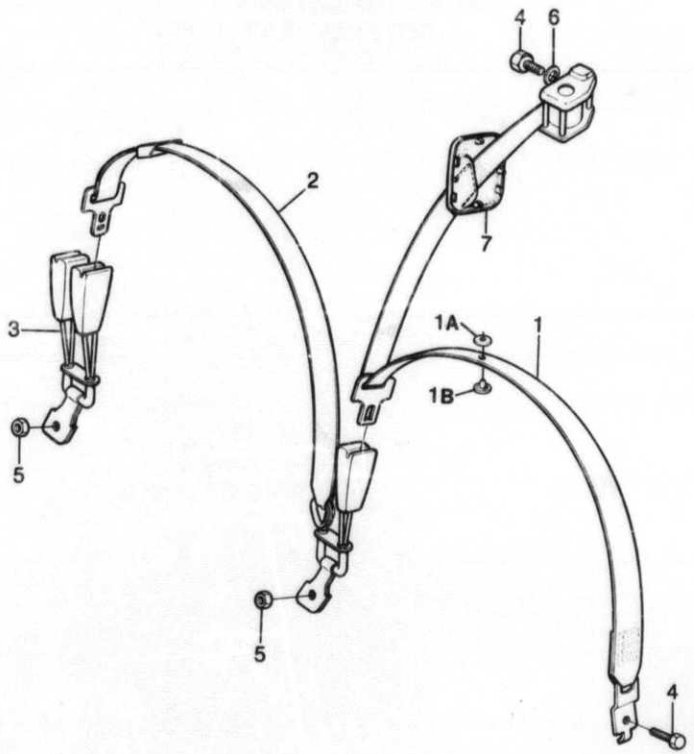

F4652 CAC90

1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	*40 32 637*		1990, LH, 5D NLS - USE 4079679	1	Seat belt	Säkerhetsbälte	5
0030	1	40 79 679		1991-, LH, 5D	1	Seat belt	Säkerhetsbälte	5
0040	1	*40 32 645*		1990, RH, 5D NLS - USE 4079687	1	Seat belt	Säkerhetsbälte	5
0050	1	40 79 687		1991-, RH, 5D	1	Seat belt	Säkerhetsbälte	5
0053	1	40 79 695		LH, 5CS	1	Seat belt	Säkerhetsbälte	5
0056	1	40 79 703		RH, 5CS	1	Seat belt	Säkerhetsbälte	5
0060	1	*40 32 652*		1990, LH, 4D NLS - USE 4079695	1	Seat belt	Säkerhetsbälte	5
0070	1	40 79 695		1991-, LH, 4D	1	Seat belt	Säkerhetsbälte	5
0080	1	*40 32 660*		1990, RH, 4D NLS - USE 4079703	1	Seat belt	Säkerhetsbälte	5
0090	1	40 79 703		1991-, RH, 4D	1	Seat belt	Säkerhetsbälte	5
0100	1A	96 17 846			1	▪Button	▪Knapp	5
0110	1B	96 17 853			1	▪Button	▪Knapp	5
0162	2	40 32 629		LH	1	Seat belt	Säkerhetsbälte	5
0202	3	40 32 611			1	Belt catch	Bältlås	5
0210	4	84 99 204			4	Screw	Skruv	5
0222	5	73 99 793			2	Lock nut	Låsmutter	5
0230	6	79 77 507			4	Washer	Bricka	5
0240	7			LH AND RH		Grommet	Genomföring	
0250				See page 8B-151, 6-G08				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Complete set


6-I24


Car body, internal


Satser


Kaross, invändig

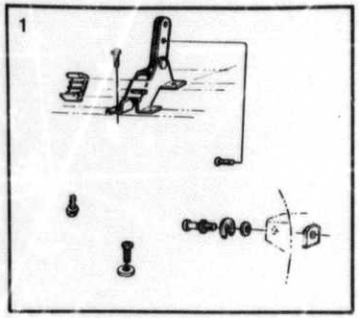


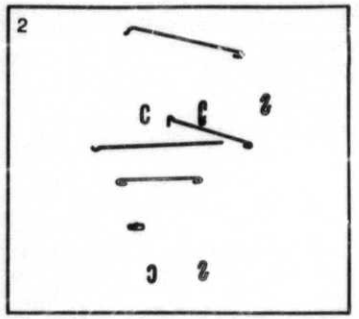

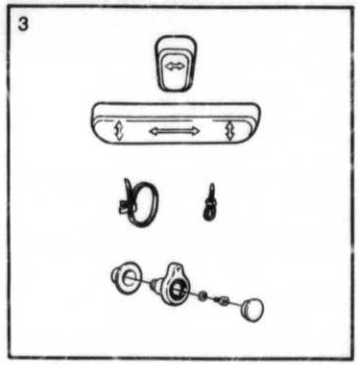

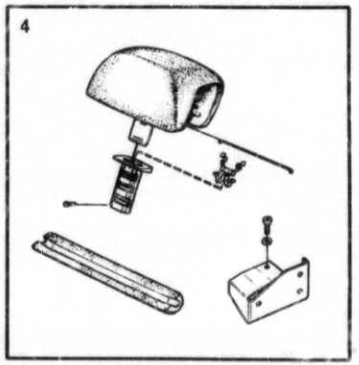

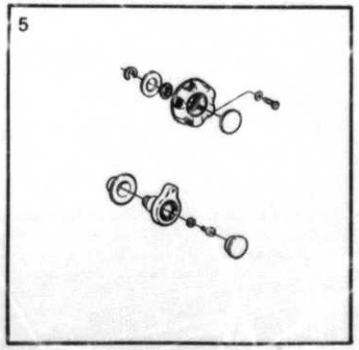

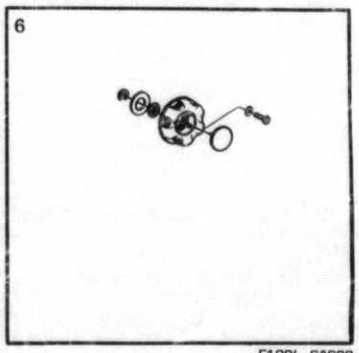

F1094 CAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 72 668			1	Mounting kit rear seat	Monteringssats baksäte	6
0020								
0030		79 16 497			2	.Washer	.Bricka	5
0040		79 75 212			2	.Screw	.Skruv	5
0050		79 81 921			4	.Screw	.Skruv	5
0060		80 59 552			4	.Screw	.Skruv	5
0070		83 11 904			2	.Washer	.Bricka	5
0080		96 71 025			4	.Lock pin	.Låspinne	5
0090		97 61 974			1	.Joint	.Led	5
0100		97 65 272			2	.Nut plate	.Mutterplatta	5
0110		97 78 952			8	.Screw	.Skruv	5
0120		*97 89 090*		NLS - USE 4268189	2	.Washer	.Bricka	6
0130		97 89 769			1	.Plastic buffer	.Plastbuffert	5
0140		97 91 971			2	.Washer	.Bricka	5
0150								
0160	2	96 71 751		25)	2	Mounting kit front seat	Monteringssats framstol	6
0170								
0180		97 81 592			2	.Cover rod	.Klädselbåge	5
0190		94 50 685			6	.Clamp	.Klammer	5
0200		97 69 209			2	.Hook	.Krok	5
0210								
0220	2	96 97 939		19)	2	Mounting kit front seat	Monteringssats framstol	6
0230								
0240		95 47 332			1	.Cover rod	.Klädselbåge	5
0250		96 94 969		1)	2	.Wire rod	.Tråden	5
0260		94 50 685			6	.Clamp	.Klammer	5
0270		95 84 715		1)	2	.Wire rod	.Tråden	5
0280		97 69 217			6	.Hook	.Krok	5
0290		97 81 592			2	.Cover rod	.Klädselbåge	5
0300		95 84 723		1)	2	.Wire rod	.Tråden	5
0310		95 93 245			2	.Attaching brace	.Fästbygel	5
0320		97 69 209			6	.Hook	.Krok	5
0330								
0340	2	44 75 513		278)	2	Mounting kit front seat	Monteringssats framstol	
0350								
0351		96 92 906			1	Wire rod	Tråden	5
0352				1)	1	Wire rod	Tråden	
0353		97 69 225			6	Hook	Krok	5
0354		97 69 217			6	Hook	Krok	5
0355		97 69 209			2	Hook	Krok	5
0360								
0370	2	44 75 539		278)	2	Mounting kit rear seat	Monteringssats baksäte	
0379						seat cushion	sittdyna	
0380								
0381		96 92 906			1	Wire rod	Tråden	5
0382		97 95 832		1)	5	String	Snöre	6
0383		96 93 094			1	Wire rod	Tråden	5
0384		97 95 832		1)	2	String	Snöre	6
0390								
0400	2	44 75 547		278)	2	Mounting kit rear seat	Monteringssats baksäte	
0409						backrest cushion	ryggdyna	
0410								
0411		97 87 532			1	Wire rod	Tråden	5
0412		97 69 217			1	Hook	Krok	6
0413		97 69 209			1	Hook	Krok	5
0414		97 21 572		1)	1	String	Snöre	6
0415		94 89 493		1)	4	String	Snöre	6
0416		97 61 495		1)	1	Wire rod	Tråden	6
0420								


1. Not as separate spare part. Ej som separat reservdel.
19. For cars with upholstery "HORIZON" För bilar med klädsel "HORISONT"
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

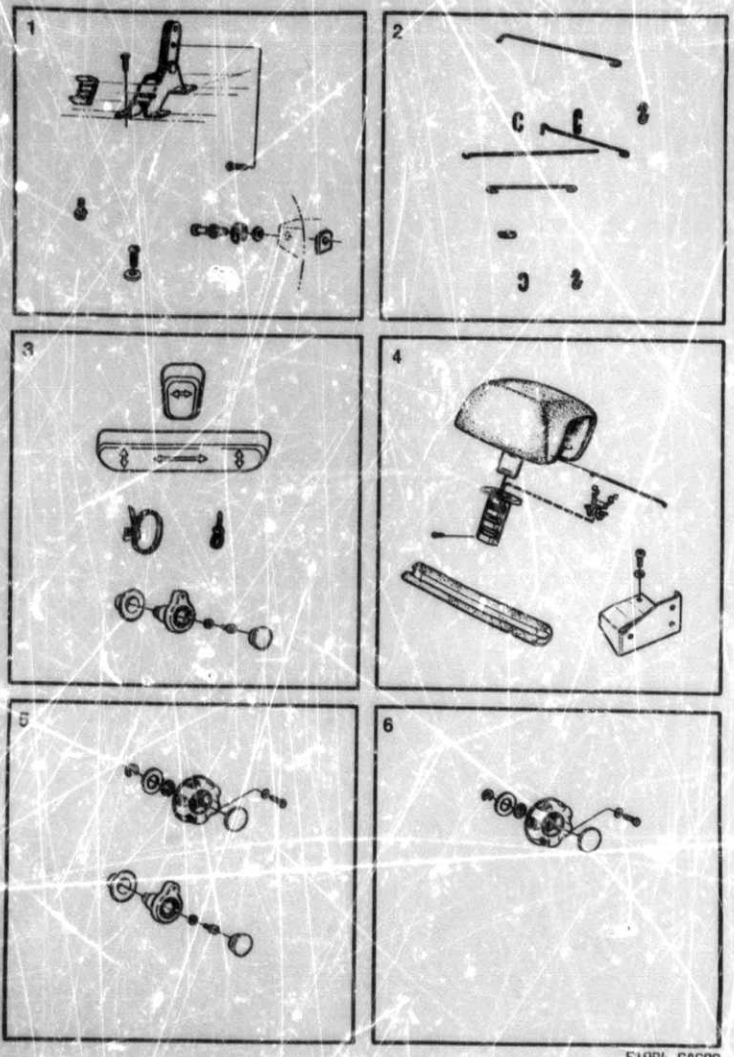

Complete set
6-J02
Car body, internal

Satser
Kaross, invändig

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430	3	95 86 108		26)	X	Mounting kit	Monteringssats	6
0440		80 59 396			1	.Screw	.Skruv	5
0450		95 44 819			1	.Screw	.Skruv	5
0460		95 85 423			2	.Screw	.Skruv	5
0470		79 22 354			3	.Screw	.Skruv	5
0480		*79 79 479*		NLS - USE 4134003	2	.Nut	.Mutter	5
0490		80 29 944			1	.Washer	.Bricka	5
0500		97 85 015			1	.Cover washer	.Täckbricka	6
0510		97 63 632			1	.Steering wheel	.Ratt	5
0520		97 63 624			1	.Cover	.Täcklock	6
0530		85 52 663			3	.Tensioning band	.Spännband	5
0540		79 71 872			4	.Tensioning band	.Spännband	5
0550		95 65 003			1	.Button	.Knapp	5
0560		95 65 011			1	.Button	.Knapp	5
0570		95 85 431			2	.Stud	.Pinnskruv	5
0580		40 34 054		LH	1	.Cover	.Kåpa	5
0590		40 34 047		RH	1	.Cover	.Kåpa	5
0600		40 59 671			1	.Stop bracket	.Stoppkonsol	5
0610		40 42 974			1	.Reinforcement	.Förstärkning	6
0620								
0630	4	95 88 542			2	Mounting kit front seat	Monteringssats framstol	6
0640								
0650		79 22 386			1	.Screw	.Skruv	5
0660		79 75 766			2	.Cage nut	.Korgmutter	5
0670		95 47 688			1	.Head restraint	.Nackstöd	6
0680		97 40 663		1)	2	.Elastic	.Resårband	6
0690		94 59 868			2	.Wire rod	.Trådten	6
0700		40 31 563			1	.Sleeve	.Hylsa	5
0710		*97 81 162*		LH NLS	1	.Bracket	.Konsol	5
0720		*97 82 210*		RH NLS	1	.Bracket	.Konsol	5
0730		79 74 884			3	.Screw	.Skruv	5
0740		97 96 848			1	.Locking spring	.Spärrfjäder	5
0750		98 64 000		1)	1	.Cloth	.Tyg	6
0760		97 92 391			1	.Crash pad	.Stötskydd	6
0770								
0780	5	95 88 559			X	Mounting kit passenger seat	Monteringssats passagerarstol	6
0790								
0800		97 81 204			4	.Screw	.Skruv	5
0810		79 71 294			2	.Screw	.Skruv	5
0820		91 66 364			3	.Washer	.Bricka	5
0830		95 46 946			1	.Hand wheel	.Ratt	5
0840		95 89 045			1	.Reinforcement	.Förstärkning	5
0850		98 51 619			1	.Cover	.Täcklock	6
0860		80 59 560			1	.Screw	.Skruv	5
0870		84 99 204			1	.Screw	.Skruv	5
0880								
0890	5	95 88 534			X	Mounting kit drivers seat	Monteringssats förarstol	6
0900								
0910		97 81 204			4	.Screw	.Skruv	5
0920		79 22 354			1	.Screw	.Skruv	5
0930		91 66 364			3	.Washer	.Bricka	5
0940		80 29 944			1	.Washer	.Bricka	5
0950		95 46 946			1	.Hand wheel	.Ratt	5
0960		97 63 632			1	.Steering wheel	.Ratt	5
0970		95 89 045			1	.Reinforcement	.Förstärkning	5
0980		98 51 619			1	.Cover	.Täcklock	6
0990		80 59 560			1	.Screw	.Skruv	5
1000		84 99 204			1	.Screw	.Skruv	5
1010		80 59 396			1	.Screw	.Skruv	5
1020		80 59 537			2	.Screw	.Skruv	5
1030		97 63 624			1	.Cover	.Täcklock	6

1. Not as separate spare part. Ej som separat reservdel.
26. For cars with electrically adjustable seats För bilar med elmanövrerade stolar

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24


Complete set

6-J04

Car body, internal

Satser

Kaross, invändig

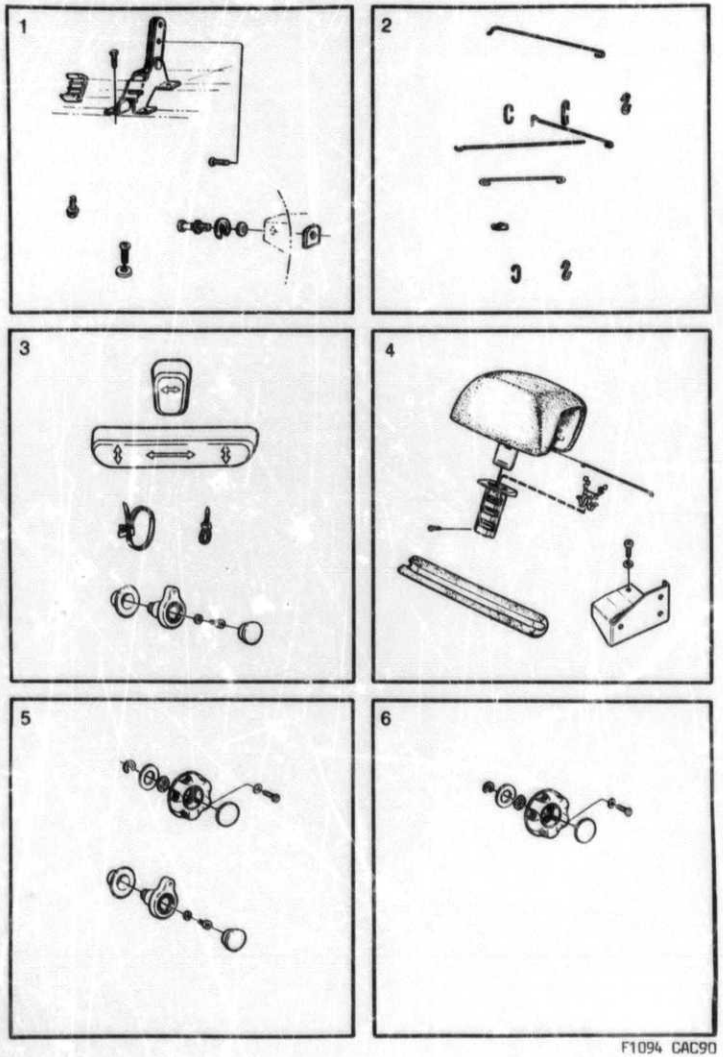

F1094 CAC90

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1040		97 85 015			1	.Cover washer	.Täckbricka	6
1050								
1060	6	96 18 752			X	Mounting kit	Monteringssats	6
1070		91 66 364			1	.Washer	.Bricka	5
1080		95 46 946			1	.Hand wheel	.Ratt	5
1090		95 89 045			1	.Reinforcement	.Förstärkning	5
1100		98 51 619			1	.Cover	.Täcklock	6
1110		80 59 560			1	.Screw	.Skruv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

Complete set
6-J06
Car body, internal

Satser
Kaross, invändig

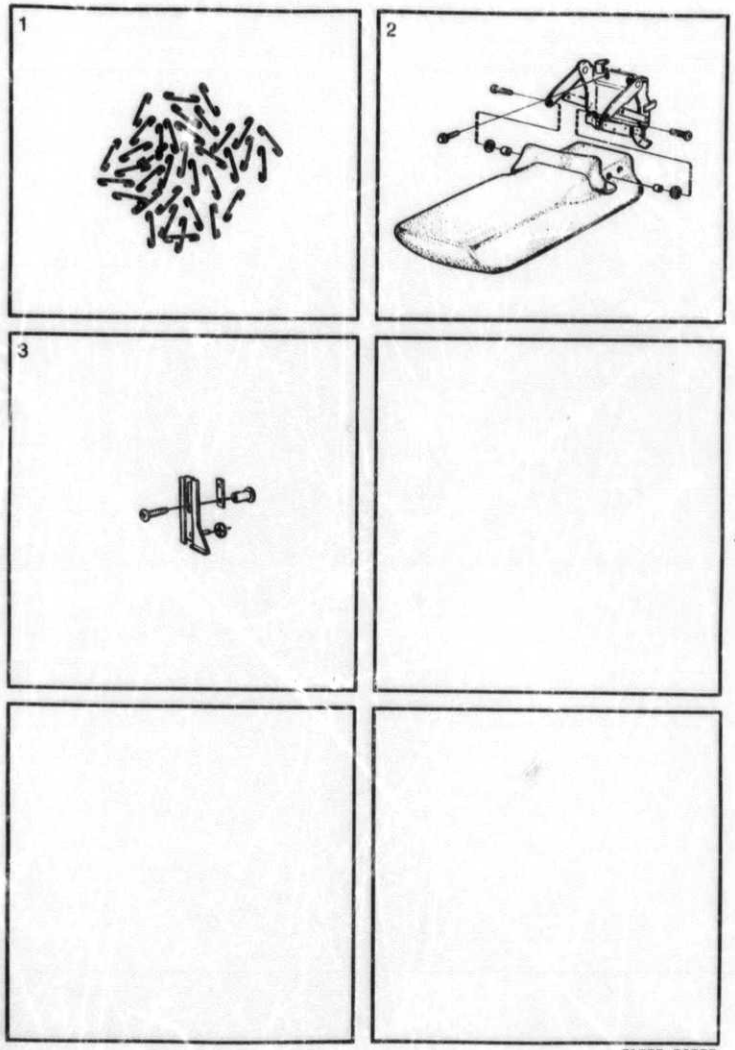

F1095 CAC90

2550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0070	1	*97 46 736*		NLS	X	Clamp kit	Klammersats	
0080		*98 49 498*		1) NLS - USE 9450685	100	.Clamp	.Klammer	5
0090								
0100	2	96 72 650			1	Arm rest	Armstöd	6
0120		79 72 607			4	.Screw	.Skruv	5
0130		84 57 541			4	.Washer	.Bricka	5
0140		84 58 598			4	.Sleeve	.Hylsa	5
0150		94 45 909			1	.Clamp	.Trådbygel	6
0160		*94 91 325*		NLS - USE 4055133	4	.Screw	.Skruv	5
0170		97 81 337			1	.Cushion	.Kudde	6
0180		95 93 948			1	.Bracket	.Konsol	6
0190								
0200	3	96 98 309			X	Adjusting kit glove compartment lid	Justersats handsfacklucka	4
0220		*95 71 027*		LH NLS - USE 4030201	1	.Hinge	.Gångjärn	4
0230		*95 71 035*		RH NLS - USE 4030219	1	.Hinge	.Gångjärn	4
0240		79 65 809			2	.Clip	.Clips	5
0250		95 71 084			2	.Nut washer	.Mutterbricka	5
0260		85 73 677			2	.Hose	.Slang	5
0270		97 76 006			4	.Screw	.Skruv	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8B GROUP INDEX

Instrument panel	6-A06
Upholstery	6-A20
Other interior equipment	6-G12
Complete sets	6-I24

8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041
0020
0030
0040
0050
0060
0630
0660
0700
0710
0720
0725
0730
0735
0740
0743
0746
0750
0760
0780
0790

TABLE OF CONTENTS

Heating and ventilation system		
Control panel	8C : 5	6-K06
Heater core, fan unit	8C : 7	6-K08
Heater core, fan unit, servo unit ACC	8C : 9	6-K10
Draft channels	8C : 11	6-K12
Doorfan	8C : 13	6-K14
Air conditioning, compressor part (Cycling clutch), R12	8C : 15	6-K16
Air conditioning, compressor part (Cycling clutch), R134a	8C : 19	6-K20
Air conditioning, evaporator part, -1991	8C : 21	6-K22
Air conditioning, evaporator part, 1992-	8C : 23	6-K24
Air conditioning, hose RAC	8C : 27	6-L04
Air conditioning, evaporator part RAC	8C : 29	6-L06
Air conditioning, kits	8C : 31	6-L08
Complete sets		
Car body, heating and ventilation	8C : 33	6-L10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

INNEHÅLLSFÖRTECKNING

Värme- och ventilationssystem		
Reglagepanel	8C : 5	6-K06
Värmeväxlare, fläktenhet	8C : 7	6-K08
Värmeväxlare, fläktenhet, servoenhet ACC	8C : 9	6-K10
Fördelningskanaler	8C : 11	6-K12
Dörrfläkt	8C : 13	6-K14
Luftkonditionering, kompressordel (cycling clutch) R12	8C : 15	6-K16
Luftkonditionering, kompressordel (cycling clutch) R134a	8C : 19	6-K20
Luftkonditionering, förångardel -1991	8C : 21	6-K22
Luftkonditionering, förångardel 1992-	8C : 23	6-K24
Luftkonditionering, slang RAC	8C : 27	6-L04
Luftkonditionering, förångardel RAC	8C : 29	6-L06
Luftkonditionering, satser	8C : 31	6-L08
Satser:		
Kaross, värme och ventilation	8C : 33	6-L10

SUMARIO

Sistema de calefaccion y ventilacion		
Tablero de mandos	8C : 5	6-K06
Cambiador de calor, ventilador de la calefaccion	8C : 7	6-K08
Cambiador de calor, ventilador de la calefaccion, servomecanismo ACC	8C : 9	6-K10
Conales de distribucion	8C : 11	6-K12
Ventilador de la puerta	8C : 13	6-K14
Aire acondicionado, unidad de compresor (cycling clutch) R12	8C : 15	6-K16
Aire acondicionado, unidad de compresor (cycling clutch) R134a	8C : 19	6-K20
Aire acondicionado, unidad de evaporador -1991	8C : 21	6-K22
Aire acondicionado, unidad de evaporador 1992-	8C : 23	6-K24
Aire acondicionado, manguera RAC	8C : 27	6-L04
Aire acondicionado, unidad de evaporador RAC	8C : 29	6-L06
Aire acondicionado, juegos	8C : 31	6-L08
Juegos completos		
Carosseria, calefaccion y ventilat ion	8C : 33	6-L10

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-K06

Control panel
Reglagepanel

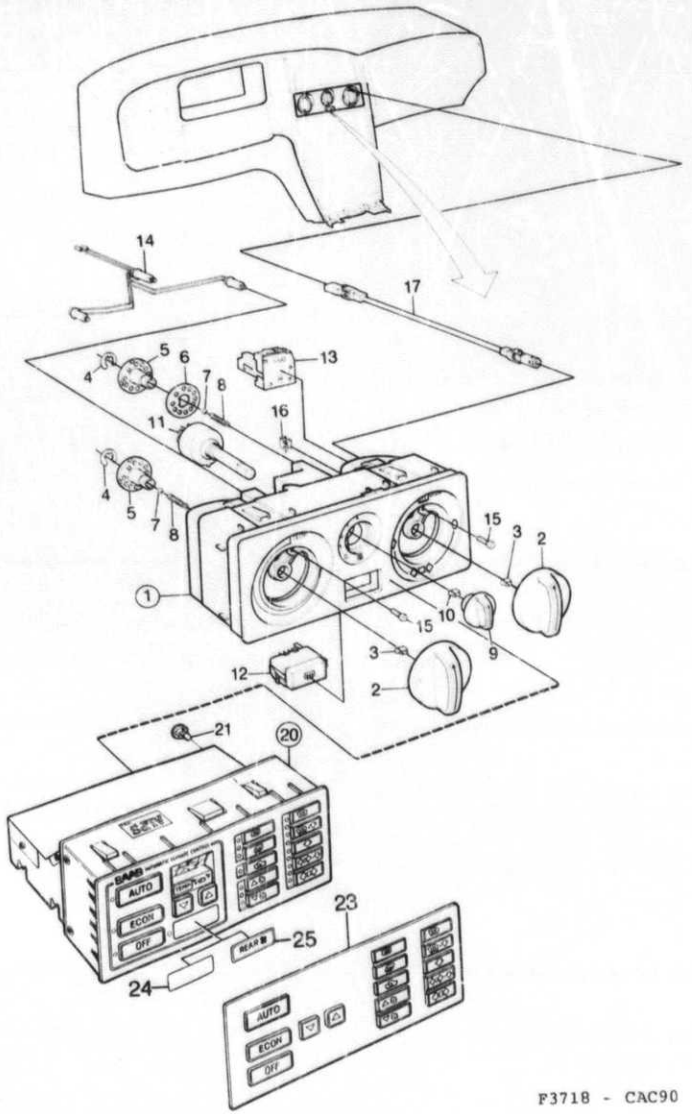

F3718 - CAC90

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 31 235			1	Panel	Panel	5
0020	2	96 23 737			2	.Steering wheel	.Ratt	3
0030	3	96 21 897			2	..Bracket	..Hållare	5
0040	4	79 36 008			2	.E-circlip	.Spårryttare	5
0050	5	96 25 245			2	.Disc	.Skiva	5
0060	6	96 25 252			1	.Spring latch bolt	.Snäppregel	5
0070	7	94 20 043			2	.Ball	.Kula	5
0080	8	94 20 035			2	.Spring	.Fjäder	5
0090	9	96 23 745			1	.Steering wheel	.Ratt	3
0100	10	96 21 897			1	..Bracket	..Hållare	5
0110	11	95 00 927		FAN	1	.Switch	.Strömställare	3
0120	12	95 05 744		HEATED REAR WINDOW	1	.Switch	.Strömställare	3
0130	13	95 05 421		FAN SHUT OFF	1	.Contact	.Kontakt	3
0140	14	95 14 787			1	.Cable harness	.Ledningsnät	5
0150		85 00 613			3	..Bulb	..Glödlampa	2
0160	15	79 71 393			2	.Screw	.Skruv	5
0170	16	96 25 351			1	.Clamp	.Klämma	5
0180								
0190	17	96 22 390			1	Control arm	Reglagearm	5
0200	17	96 26 383		RHD	1	Control arm	Reglagearm	5
0210								
0220	20	96 30 195		7)-1990, ACC	1	Control panel	Reglagepanel	5
0230								
0240	20	86 05 396		1991-1992,7) ACC	1	Control panel	Reglagepanel	5
0250		*40 71 742*		1) NLS	1	.Control panel	.Reglagepanel	5
0260		96 31 599			1	.Cover	.Täcklock	6
0270		96 30 591			1	.Push button	.Tryckknapp	4
0280								
0281	20	74 96 326		1993,7) ACC	1	Control panel	Reglagepanel	5
0282		43 82 933			1	.Control panel	.Reglagepanel	5
0283		74 95 302			1	.Assembly instruction	.Monteringsanvisning	
0284		96 30 591			1	.Push button	.Tryckknapp	4
0285								
0310	21	96 25 575			3	.Bulb	.Glödlampa	4
0320	23	40 74 316			1	Symbol strip	Symbolskiva	5
0330	24	96 31 599		217)	1	Cover	Täcklock	6
0340	25	96 30 591		RAC	1	Push button	Tryckknapp	4

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
199. Ch. M1017620-, M2011731-
217. Ch. M1025755-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

Heating and ventilation

6-K08


Heat exchanger

Fan unit

Värme och ventilation

Värmeväxlare

Fläktenhet

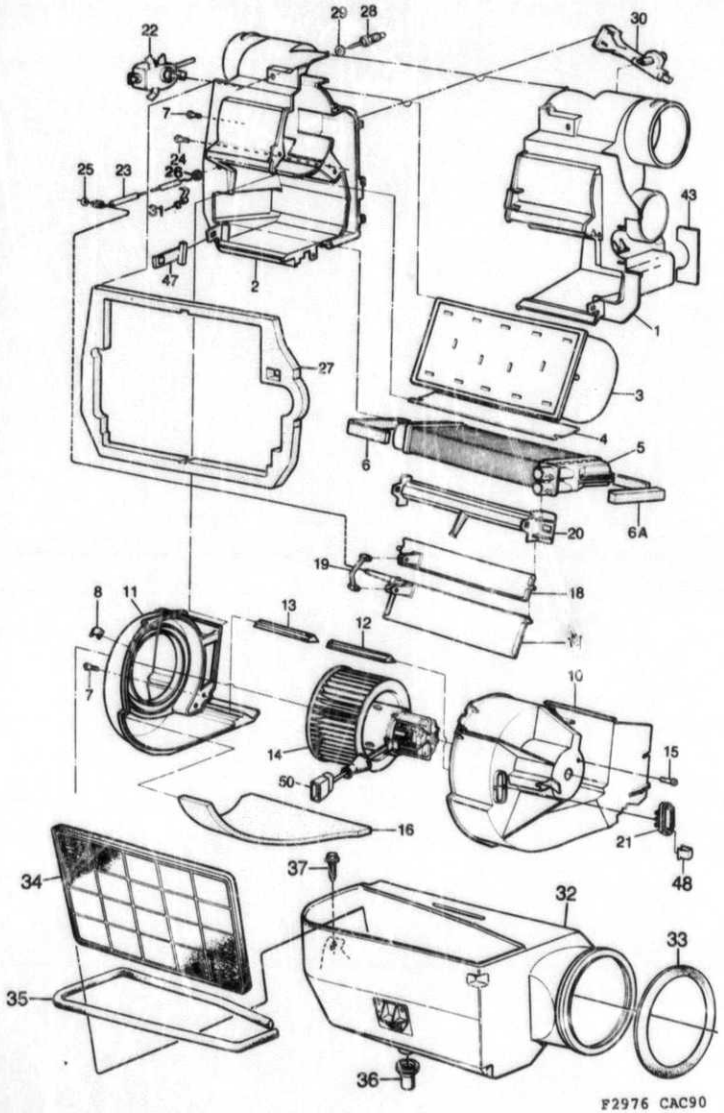

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 22 663		-1992, LH	1	Heater housing	Värmehus	6
0020	1	43 83 063		1993, LH	1	Heater housing	Värmehus	6
0030	2	96 30 799		-1992, RH	1	Heater housing	Värmehus	6
0040	2	43 83 071		1993, RH	1	Heater housing	Värmehus	6
0050	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0060	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0070	5	96 20 238		-1991	1	Heat exchanger	Värmeväxlare	4
0080	5	40 70 728		1992-	1	Heat exchanger	Värmeväxlare	4
0090	6	96 26 300			1	Seal	Tätning	5
0100	6A	96 26 318			1	Seal	Tätning	5
0110	7	79 71 443			2	Screw	Skruv	5
0120	8	96 25 989			10	Clamp	Klämma	5
0130	10	96 28 272		LH	1	Fan housing	Fläkthus	5
0140	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0150	12	96 25 138		LH	1	Air deflector	Luftledare	5
0160	13	96 25 120		RH	1	Air deflector	Luftledare	5
0170	14	96 28 587			1	Fan unit	Fläktenhet	4
0180	15	80 59 230			1	Screw	Skruv	5
0190	16	96 25 955			1	Insulation	Isolering	6
0200	17	96 24 321			1	Shutter	Spjäll	5
0210	18	96 24 305			1	Shutter	Spjäll	5
0220	19	96 24 347			1	Link	Länk	5
0230	20	96 22 655			1	Intermediate section	Mellanstycke	5
0240	21	*96 29 429*		-1992 NLS - USE 4382420	1	Resistor	Motstånd	5
0250	21	43 82 420		1993	1	Resistor	Motstånd	5
0260	22	96 23 570			1	Angle gear	Vinkelväxel	5
0270	23	96 23 455			1	Control cable	Reglagewire	5
0280	24	79 71 393			1	Screw	Skruv	5
0290	25	79 75 485			1	Washer	Bricka	5
0300	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0310	27	96 31 490			1	Seal	Tätning	5
0320	28	*79 74 090*		-1992 NLS - USE 7399348	2	Screw	Skruv	5
0330	28	73 99 348		1993	2	Rivet	Nit	5
0340	29	80 29 969		-1992	2	Washer	Bricka	5
0350	30	96 25 146			1	Gear rod	Växelstång	5
0360	31	96 22 432			2	Clamp	Klammer	5
0370								
0380	32	*96 30 070*		1990 NLS - USE 4072203	1	Filter housing	Filterhus	5
0390	33	96 30 039			1	•Seal	•Tätning	9
0400	34	*96 30 096*		1990 NLS - USE 4072211	1	•Air filter	•Luftfilter	2
0410	35	40 73 110			1	•Seal	•Tätning	5
0420	36	96 30 112		1990	1	•Non-return valve	•Backventil	9
0430								
0440	32	40 72 203		1991-	1	Filter housing	Filterhus	5
0450	33	96 30 039			1	•Seal	•Tätning	9
0460	34	40 72 211		1991-	1	•Air filter	•Luftfilter	2
0470								
0480	37	79 78 638			2	Screw	Skruv	5
0490	43	96 22 697			1	Bracket	Hållare	5
0500	47	96 27 415		LH	1	Attaching plate	Fästplåt	6
0510	47	96 27 407		RH	1	Attaching plate	Fästplåt	6
0520	48	73 99 207			2	Clip	Clips	6
0530	50			See page 3B-005, 3-A06		Contact housing	Kontakthus	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-K10

Heat exchanger, servo
Fan unit, ACC

Värmeväxlare, servo
Fläktenhet, ACC

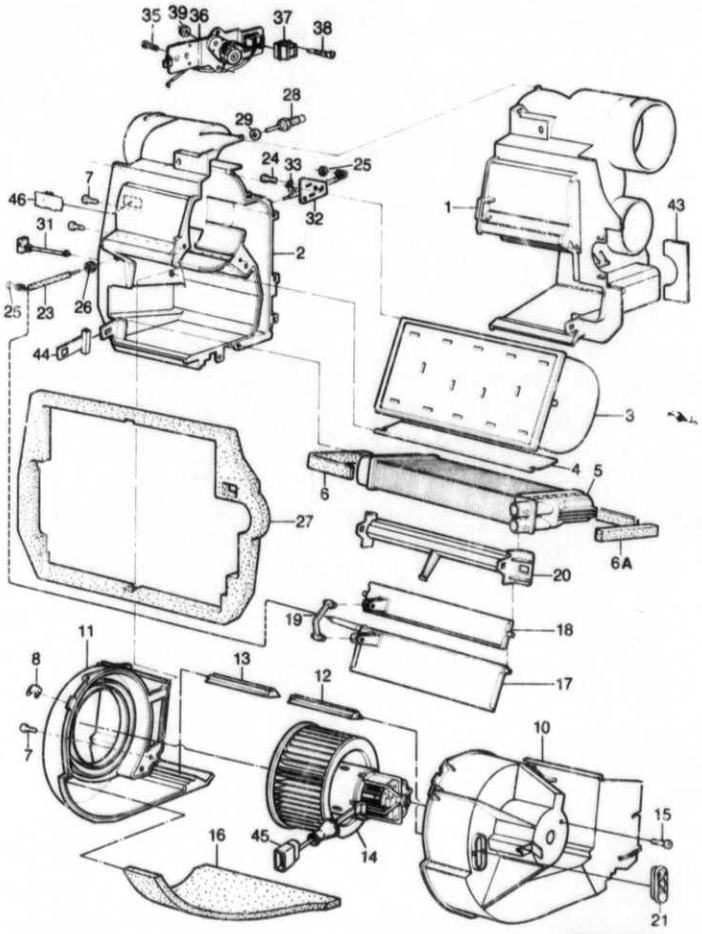

F4521 CAC90

1875	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 22 663		-1992, LH	1	Heater housing	Värmehus	6
0020	1	43 83 063		1993, LH	1	Heater housing	Värmehus	6
0030	2	96 30 799		-1992, RH	1	Heater housing	Värmehus	6
0040	2	43 83 071		1993, RH	1	Heater housing	Värmehus	6
0050	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0060	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0070	5	96 20 238		-1991	1	Heat exchanger	Värmeväxlare	4
0080	5	40 70 728		1992-	1	Heat exchanger	Värmeväxlare	4
0090	6	96 26 300			1	Seal	Tätning	5
0100	6A	96 26 318			1	Seal	Tätning	5
0110	7	79 71 443			2	Screw	Skruv	5
0120	8	95 25 989			10	Clamp	Klämma	5
0130	10	96 28 272		LH	1	Fan housing	Fläkthus	5
0140	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0150	12	96 25 138		LH	1	Air deflector	Luftledare	5
0160	13	96 25 120		RH	1	Air deflector	Luftledare	5
0170	14	96 28 587			1	Fan unit	Fläktenhet	4
0180	15	80 59 230			1	Screw	Skruv	5
0190	16	96 25 955			1	Insulation	Isolering	6
0200	17	96 24 321		LOWER	1	Shutter	Spjäll	5
0210	18	96 24 305		UPPER	1	Shutter	Spjäll	5
0220	19	96 24 347			1	Link	Länk	5
0230	20	96 22 655			1	Intermediate section	Mellanstycke	5
0240	21	96 22 812			1	Cover	Täcklock	6
0250	23	96 23 935			1	Control cable	Reglagewire	5
0260	24	79 71 393			1	Screw	Skruv	5
0270	25	79 75 485			2	Washer	Bricka	5
0280	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0290	27	96 31 490			1	Seal	Tätning	5
0300	28	*79 74 090*		WITH NUT NLS - USE 7399348	2	Screw	Skruv	5
0300								
0310	29	80 29 969			2	Washer	Bricka	5
0320	31			See page 3A-105, 2-E10	1	Sensor	Givare	
0330				MIXED AIR TEMP.				
0340	32	96 23 315			1	Attaching plate	Fästplåt	6
0350	33	96 22 432			1	Clamp	Klammer	5
0360	35	79 71 443			2	Screw	Skruv	5
0370	36	96 30 567		270)	1	Motor unit	Motorenhet	4
0380	36	43 19 190		271)	1	Motor unit	Motorenhet	4
0390	37	91 22 557		270)	1	.Connector housing	.Skarvhus	4
0400	37	41 17 461		271)	1	.Connector housing	.Skarvhus	4
0410	38	95 52 100		270)	10	.Cable terminal	.Kabelsko	5
0420	38	41 15 085		271)	10	.Cable terminal	.Kabelsko	5
0430	39	43 82 826			1	Rubber bushing	Gummibussning	6
0440	43	96 22 697		GROMMET	1	Bracket	Hållare	5
0450	44	96 27 415		LH	1	Attaching plate	Fästplåt	6
0460	44	96 27 407		RH	1	Attaching plate	Fästplåt	6
0470	45			See page 3B-005, 3-A06		Contact housing	Kontakthus	
0480	46	96 29 411			1	Clamp	Klamma	5

270. Ch. --N1041839
271. Ch. N1041840--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-K12

Duct
Kanal

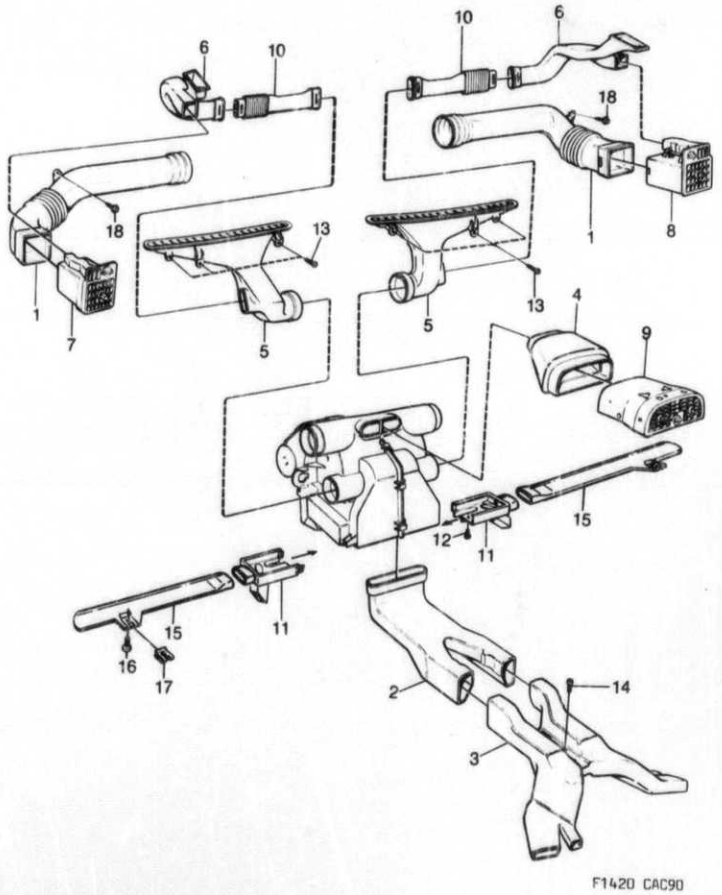

F1420 CAC90

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*96 30 732*		LH NLS - USE 4382487	1	Duct	Kanal	5
0020	1	96 30 724		RH	1	Duct	Kanal	5
0030	2	96 30 138		2)	1	Air duct	Luftkanal	5
0040	3	40 71 791		3)	1	Air duct	Luftkanal	5
0050	4	96 20 105		CENTRE	1	Duct	Kanal	5
0060	4	96 22 325		CENTRE, RHD	1	Duct	Kanal	5
0070	5	40 73 615		LH, DEFROSTER	1	Duct	Kanal	5
0080	5	40 73 623		RH, DEFROSTER	1	Duct	Kanal	5
0090	6	96 27 506		LH, SIDE DEFROSTER	1	Duct	Kanal	6
0100	6	96 27 498		RH, SIDE DEFROSTER	1	Duct	Kanal	6
0110	6	96 27 522		LH, RHD, SIDE DEFROSTER	1	Duct	Kanal	6
0120	6	96 27 514		RH, RHD, SIDE DEFROSTER	1	Duct	Kanal	6
0130	7	40 70 215		LH	1	Air outlet	Luftutsläpp	6
0140	8	40 70 223		RH	1	Air outlet	Luftutsläpp	6
0150	9	*96 26 953*		-1991, CENTRE NLS - USE 4382545	1	Air outlet	Luftutsläpp	6
0160	9	43 82 545		1992-, CENTRE	1	Air outlet	Luftutsläpp	6
0170	10	96 28 967			2	Duct	Kanal	6
0180	11	40 71 189		LH	1	Air outlet	Luftutsläpp	6
0190	11	40 71 171		RH	1	Air outlet	Luftutsläpp	6
0200	12	96 72 254			1	Screw rivet	Skruvnit	6
0210	13	79 22 420			6	Screw	Skruv	5
0220	14	97 71 320			1	Screw	Skruv	5
0230	15	96 30 336		FRONT FLOOR, LH	1	Duct	Kanal	6
0240	15	96 27 365		FRONT FLOOR, RH	1	Duct	Kanal	6
0245	15	40 70 272		FRONT FLOOR, RH, AIRBAG 2	1	Duct	Kanal	6
0250	15	96 29 122		LH, RHD, FRONT FLOOR	1	Duct	Kanal	6
0260	15	96 29 114		RH, RHD, FRONT FLOOR	1	Duct	Kanal	6
0270	16	79 22 826			2	Screw	Skruv	5
0280	17	79 68 001			2	Clip nut	Clipsmutter	5
0290	18	79 22 420			2	Screw	Skruv	5

2. Front Främre
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-K14

Door fan
Dörrfläkt

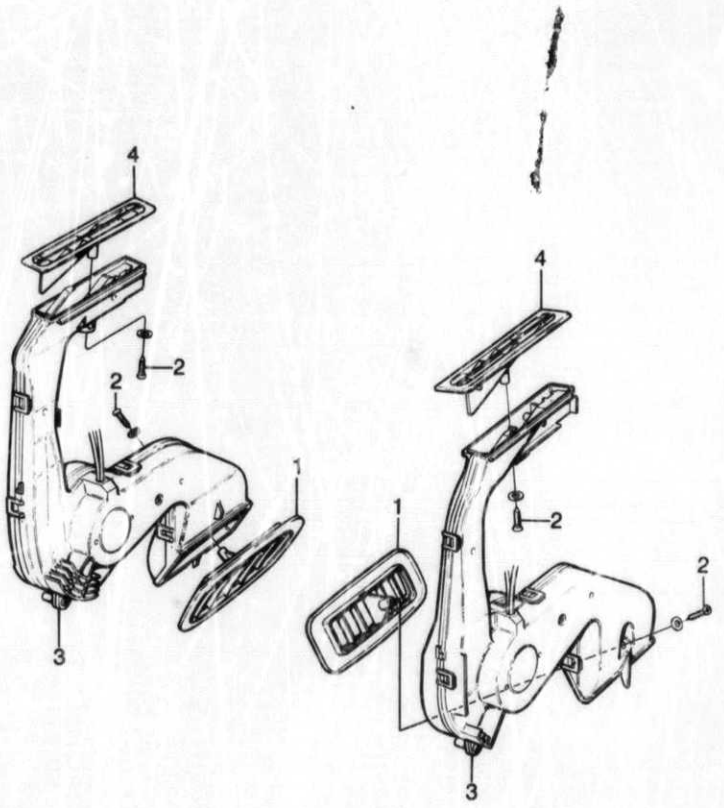

F1421 CAC9D


1910	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0020	1	96 28 413			2	Air inlet	Luftintag	9
0040	2	79 71 393			6	Screw	Skruv	5
0060	3	96 28 454		LH	1	Fan unit	Fläktenhet	4
0080	3	96 28 462		RH	1	Fan unit	Fläktenhet	4
0100	4	96 28 447		LH	1	Air outlet	Luftutsläpp	9
0120	4	96 28 512		RH	1	Air outlet	Luftutsläpp	9

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

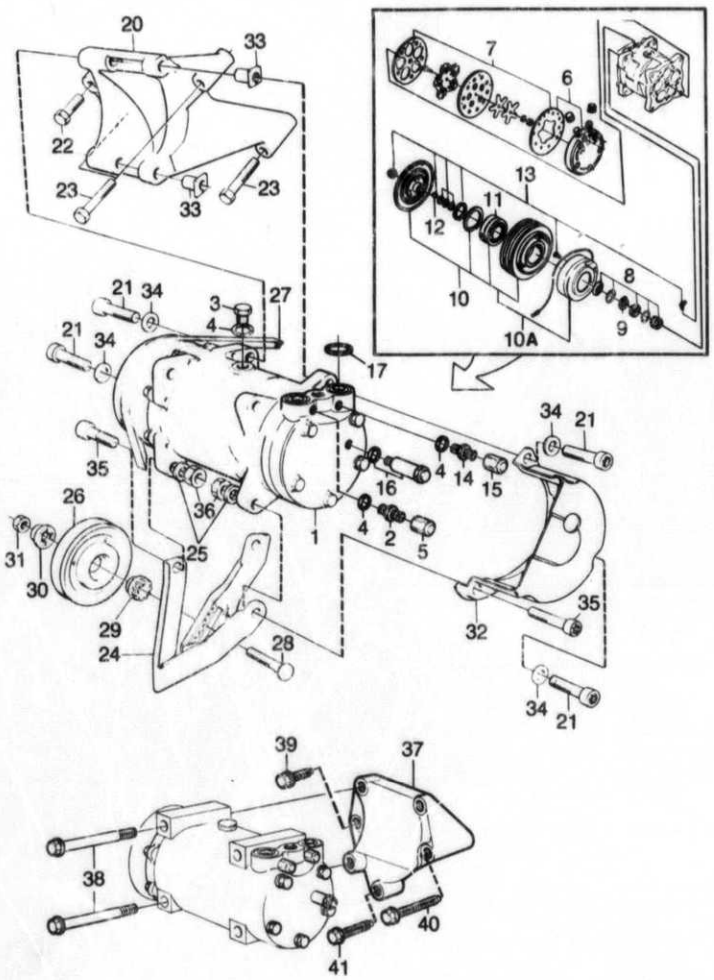

F4339 CAC90

1960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 70 801*		B202, SD709 NLS - USE 4319810	1	Compressor	Kompressor	5
0020	1	96 29 593		B234, SD709	1	Compressor	Kompressor	5
0030	1	43 19 810		1992, B202, SD709A	1	Compressor	Kompressor	5
0040	1	43 19 828		1992, B234, SD709A	1	Compressor	Kompressor	5
0050	1	43 82 370		1992, B202 RAC	1	Compressor	Kompressor	5
0060	1	43 82 388		1992, B234 RAC	1	Compressor	Kompressor	5
0070	2	94 79 452			2	.Valve	.Ventil	6
0080	3	40 72 450			1	.Plug	.Plugg	5
0090	4	94 79 486			3	.O-ring	.O-ring	2
0100	5	96 26 896			1	.Plug	.Plugg	5
0110	6	40 72 435		WITH GASKET	1	.Cylinder head	.Cylinderlock	6
0120	7	40 72 443		SD709	1	.Gasket kit	.Packningsats	4
0130	7	43 83 287		SD709A, RAC	1	.Gasket kit	.Packningsats	4
0140	8	96 29 478		SD709	1	.Sealing kit	.Tätningssats	4
0150	8	43 83 261		SD709A, RAC	1	.Sealing kit	.Tätningssats	4
0160	9	96 29 486		SD709	1	.Lock ring	.Låsring	5
0170	9	43 83 279		SD709A, RAC	1	.Lock ring	.Låsring	5
0180	10	*96 29 445*		SD709, B202 NLS - USE 4382263	1	.Clutch	.Koppling	6
0190	10	40 72 484		SD709, B234	1	.Clutch	.Koppling	6
0200	10A	43 82 263		SD709, B202	1	.Clutch	.Koppling	6
0210	10A	43 82 271		SD709, B234	1	.Clutch	.Koppling	6
0220	10A	43 83 337		SD709A, B202	1	.Clutch	.Koppling	6
0230	10A	43 83 329		SD709A, B234	1	.Clutch	.Koppling	6
0240	10A	43 83 311		RAC	1	.Clutch	.Koppling	6
0250	11	96 29 452		SD709	1	.Ball bearing	.Kullager	6
0260	11	43 83 303		SD709A, RAC	1	.Ball bearing	.Kullager	6
0270	12	40 72 468			1	.Key	.Kil	5
0280	13	40 72 476		SD709	1	.Accessories kit	.Tillbehörsats	4
0290	13	43 83 360		SD709A, B202	1	.Accessories kit	.Tillbehörsats	4
0300	13	43 83 352		SD709A, B234	1	.Accessories kit	.Tillbehörsats	4
0310	13	43 83 345		RAC	1	.Accessories kit	.Tillbehörsats	4
0320	14	40 71 429			1	.Valve	.Ventil	6
0330	15	40 71 577			1	.Plug	.Plugg	5
0340	16	40 70 819		-1991, SD709	1	.Valve	.Ventil	6
0350	16	43 19 174		1992, SD709	1	.Valve	.Ventil	6
0360	16	43 83 295		SD709A, RAC	1	.Valve	.Ventil	6
0370	17	40 71 999			2	.O-ring	.O-ring	2
0380								
0390	20	75 96 000			1	Bracket	Konsol	6
0400	21	75 76 580			4	Screw	Skruv	5
0410	22	79 70 015			1	Screw	Skruv	5
0420	23	79 77 606			3	Screw	Skruv	5
0430	24	93 82 359			1	Arm	Arm	6
0440	25	75 54 215			3	Spacer	Distans	5
0450	26	*93 25 663*		115) NLS - USE 4118964	1	Pulley	Remskiva	5
0460	26	41 18 964		116)	1	Pulley	Remskiva	5
0470	27	93 82 383			1	V-belt	Kilrem	1
0480	28	93 82 466			1	Screw	Skruv	5
0490	29	93 86 343			1	Pin	Axeltapp	5
0500	30	93 86 350			1	Sleeve	Hylsa	5
0510	31	79 68 415			1	Lock nut	Låsmutter	3
0520	32	40 70 926		-1990	1	Shield	Sköld	6
0530	33	75 53 324			2	Sleeve	Hylsa	3
0540	34	70 61 328			4	Washer	Bricka	5
0550	35	79 75 030			2	Screw	Skruv	5
0560	36	81 51 243			2	Nut	Mutter	5
0570	37	40 26 142		B234	1	Bracket	Konsol	6
0580	38	73 98 266		B234	3	Screw	Skruv	5
0590	39	79 78 208		B234	1	Screw	Skruv	5


115. Ch. --L1013287, --L2009510, --L8000867
116. Ch. L1013288--, L2009511--, L8000868--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

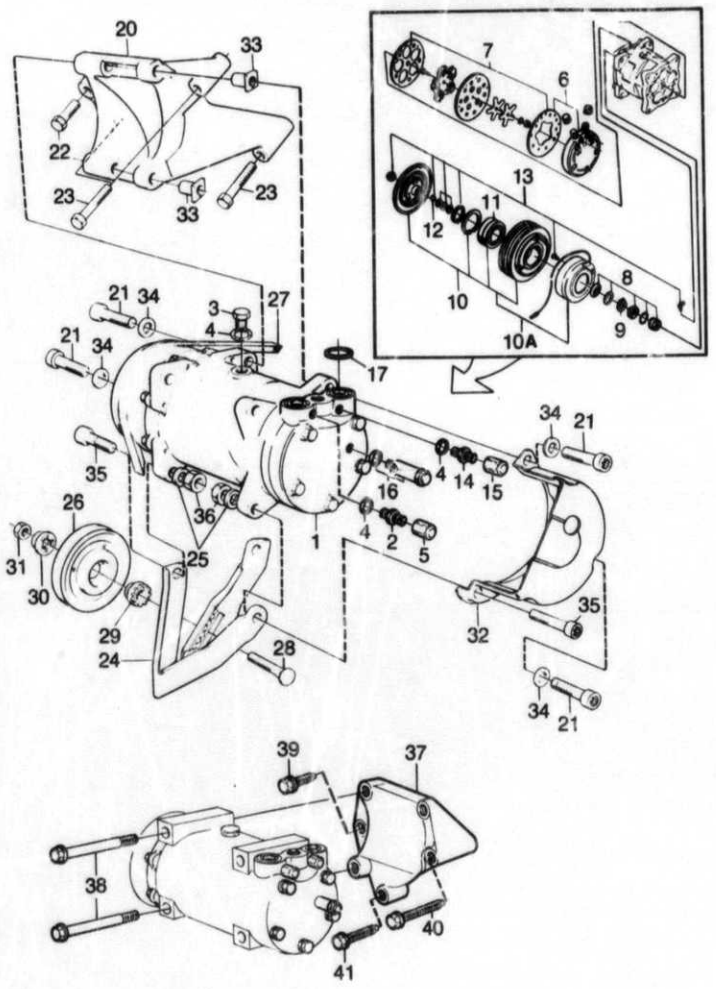

F4339 CAC90


1960 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600 40	79 82 119		B234	1	Screw	Skruv	5
0610 41	79 78 224		B234	1	Screw	Skruv	5
0620							
0630			See page 8C-031, 6-L08	X	Air conditioning kit	Luftkonditioneringssats	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

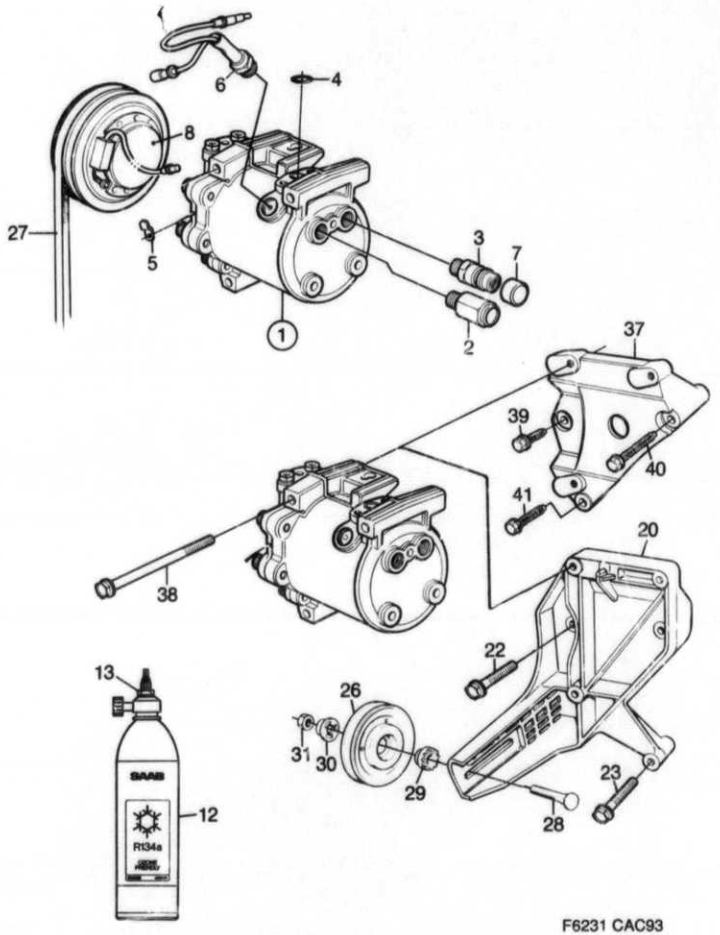

F6231 CAC93

1965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 71 882		-1992, B202	1	Compressor	Kompressor	5
0020	1	*40 71 890*		-1992, B234 NLS - USE 4383600	1	Compressor	Kompressor	5
0030	1	43 82 735		1993, B202	1	Compressor	Kompressor	5
0040	1	43 82 743		1993, B234	1	Compressor	Kompressor	5
0070	2	43 18 093			1	.Relief valve	.Avlastningsventil	6
0080	3	43 18 135			1	.Valve	.Ventil	6
0100	4	43 18 143			2	.O-ring	.O-ring	2
0110	5	43 18 168			1	.Cable clamp	.Kabelklämma	5
0120	6	43 18 192			1	.Thermo switch	.Termobrytare	5
0130	7	43 18 150			1	.Plug	.Plugg	6
0140	8	43 [illegible]184		B202	1	.Clutch	.Koppling	6
0150	8	43 [illegible]176		B234	1	.Clutch	.Koppling	6
0170	12	40 71 973		1KG	1	Refrigerant	Köldmedium	9
0180	13			253)	1	Valve	Ventil	
0190	20	43 57 067		B202	1	Bracket	Konsol	6
0200	22	79 82 119		B202	1	Screw	Skruv	5
0210	23	79 78 208		B202	3	Screw	Skruv	5
0220	26	41 18 964		B202	1	Pulley	Remskiva	5
0230	27	43 56 291		B202	1	V-belt	Kilrem	1
0240	28	93 82 466		B202	1	Screw	Skruv	5
0250	29	93 86 343		B202	1	Pin	Axeltapp	5
0260	30	93 86 350		B202	1	Sleeve	Hylsa	5
0270	31	79 68 415		B202	1	Lock nut	Låsmutter	3
0280								
0290	37	42 79 410		B234	1	Bracket	Konsol	6
0310	38	73 98 266		B202, B204, B234	3	Screw	Skruv	5
0320	39	79 78 208		B234	1	Screw	Skruv	5
0340	40	79 82 119		B234	1	Screw	Skruv	5
0360	41	79 78 224		B234	1	Screw	Skruv	5
0380		40 74 787		20 ML	X	Oil	Olja	9
0390								
0400				See page 8C-031, 6-L08	X	Air conditioning kit	Luftkonditioneringssats	


208. For cars with refrigerant medium R134a. För bilar med köldmedia R134a.
253. See Special tools Se Specialverktyg

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

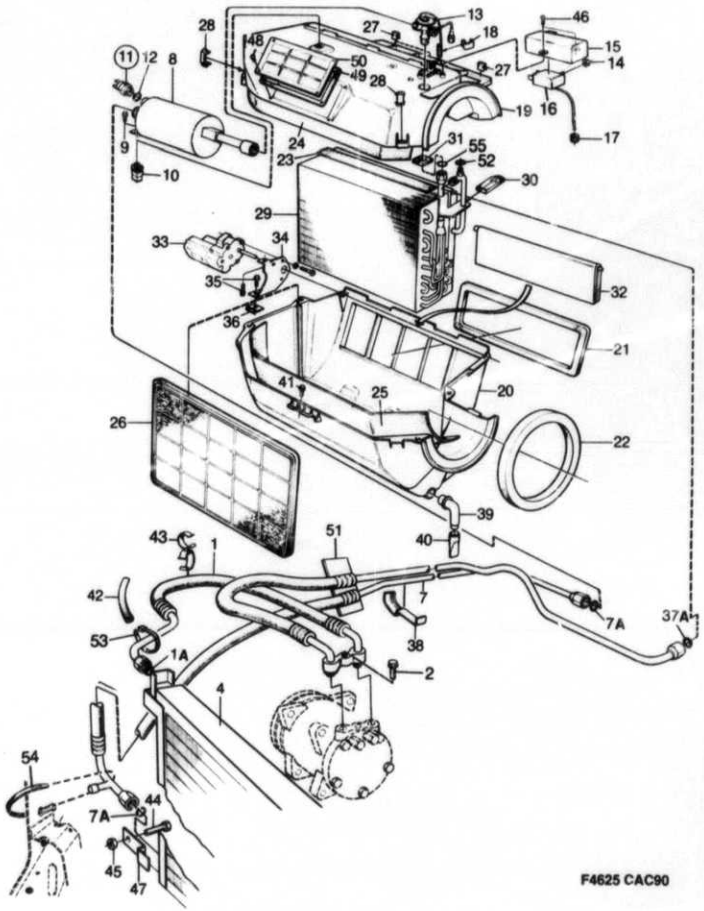

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 29 577		COMPRESSOR-CONDENSER, EVAPORATOR, TURBO	1	Hose	Slang	6
0030	1	96 29 585		COMPRESSOR-CONDENSER, EVAPORATOR, I	1	Hose	Slang	6
0050	1A	*79 72 094*		NLS - USE 4318036	1	O-ring	O-ring	2
0060	2	79 78 307			1	Screw	Skruv	5
0070	4	96 29 403		-1990	1	Condenser	Kondensor	5
0079	4	*96 29 510*		1991- NLS - USE 4382404	1	Condenser	Kondensor	5
0090	7	96 29 528		CONDENSERDRIER-RESERVOIR	1	Hose	Slang	6
0100	7A	*79 72 086*		NLS - USE 4318028	2	O-ring	O-ring	2
0110	8	40 71 007			1	Reservoir	Behållare	4
0120	9	*79 73 126*		NLS - USE 7972128	1	Screw	Skruv	5
0130	10	96 25 583			1	Nut	Mutter	5
0140	11	96 27 159			1	Pressure monitor	Tryckvakt	4
0150	12	*94 73 851*		NLS - USE 4073979	1	O-ring	O-ring	2
0160	13	94 80 914			1	Valve	Ventil	5
0170	14	85 66 598			1	Nut	Mutter	5
0200	15	96 25 096			1	Protecting casing	Skyddskåpa	6
0210	16	95 07 849			1	Thermo contact	Termokontakt	4
0220	17	94 60 742			1	Bushing	Bussning	5
0230	18	96 29 197			1	Clamp	Klamma	5
0240	19	96 25 419		UPPER	1	Casing	Hus	5
0250	20	96 29 262		LOWER	1	Casing	Hus	5
0260	21	40 72 237			1	Seal	Tätning	4
0270	22	96 30 286			1	Seal	Tätning	4
0280	23	96 22 572			1	Seal	Tätning	4
0290	24	96 24 032			1	Insulation	Isolering	4
0300	25	96 24 107			1	Insulation	Isolering	4
0310	26	96 25 674			1	Air filter	Luftfilter	2
0320	27	96 26 037			3	Clamp	Klämma	5
0330	28	96 25 989			6	Clamp	Klämma	5
0340	29	96 24 925			1	Evaporator	Förångare	
0350	30	96 25 328			1	Seal	Tätning	4
0360	31	96 25 336			1	Seal	Tätning	4
0370	32	96 23 398			1	Shutter	Spjäll	5
0380	33	96 24 867			1	Electric motor	Elmotor	5
0390	34	96 25 112			1	Attaching plate	Fästplatta	6
0400	35	*79 73 126*		NLS - USE 7972128	2	Screw	Skruv	5
0410	36	79 67 995			1	Clip nut	Clipsmutter	3
0420	37A	*79 72 482*		NLS - USE 4318044	1	O-ring	O-ring	2
0430	38	96 25 633		-1990	1	Bracket	Hållare	6
0440	38	40 74 431		1991-	1	Pipe bracket	Rörhållare	6
0450	39	96 25 054			1	Draining hose	Dräneringsslang	6
0460	40	96 23 307			1	Non-return valve	Backventil	5
0470	41	79 73 001			1	Screw	Skruv	5
0480	42	96 31 367			1	Protection	Skydd	5
0490	43	96 27 266			1	Clamp	Klammer	5
0500	44	79 74 280		B202I	2	Screw	Skruv	5
0510	44	*80 19 911*		B234I NLS - USE 7399603	2	Screw	Skruv	5
0520	44	79 74 272		B234 TURBO	2	Screw	Skruv	5
0530	44	79 74 298			2	Nut	Mutter	5
0540	45	79 71 351			2	Screw	Skruv	5
0550	47	75 76 218		I	1	Bracket	Fäste	6
0560	48	79 22 214		WITHOUT ACC	4	Screw	Skruv	5
0570	49	96 25 823		WITHOUT ACC	1	Seal	Tätning	6
0580	50	96 28 090		WITHOUT ACC	1	Cover	Lock	5
0590	51	96 30 310			1	Base	Underlägg	6
0600	52	*79 72 094*		NLS - USE 4318036	1	O-ring	O-ring	2
0610	53	79 71 898			1	Tensioning band	Spännband	5
0620	54	79 71 872		-1990	1	Tensioning band	Spännband	5
0630	55	79 72 078			1	O-ring	O-ring	2

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Eiectrical, contact housing	2-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6--K24

AC evaporator 1992-

AC förångare 1992-

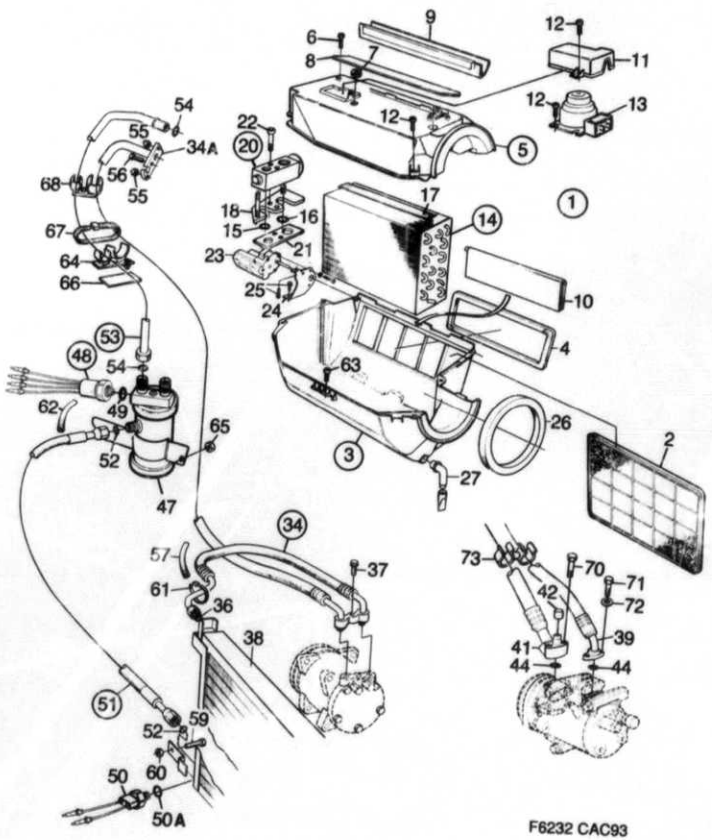

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 71 684		-1992	1	Evaporator housing	Förångarhus	6
0020	1	40 71 940		208)	1	Evaporator housing	Förångarhus	6
0030	2	40 72 393			1	.Air filter	.Luftfilter	2
0040	3	43 19 125			1	.Casing	.Hus	5
0050	4	40 72 369			1	..Seal	..Tätning	4
0060	5	43 19 133			1	.Casing	.Hus	5
0070	6	79 72 946			1	..Screw	..Skruv	5
0080	7	43 19 646			1	..Bushing	..Bussning	5
0090	8	43 18 218			1	.Filter cover	.Filterlock	5
0100	9	40 73 359			1	.Water drainage	.Vattenavledare	5
0110	10	40 73 375			1	.Shutter	.Spjäll	5
0120	11	43 18 234			1	.Protecting casing	.Skyddskåpa	5
0130	12	79 22 214			12	.Screw	.Skruv	5
0140	13	43 18 317			1	.Thermo contact	.Termokontakt	4
0150	14	43 19 117			1	.Evaporator	.Förångare	5
0160	15	43 18 036		Ø 10,8 MM	1	..O-ring	..O-ring	2
0170	16	43 18 044		Ø 14 MM	1	..O-ring	..O-ring	2
0180	17	96 22 572			1	..Seal	..Tätning	4
0190	18	40 73 417			1	.Plate	.Platta	6
0200	20	43 19 141		-1992	1	.Valve	.Ventil	5
0210	20	43 19 158		208)	1	.Valve	.Ventil	5
0220	21	40 73 391			1	.Seal	.Tätning	4
0230	22	80 97 800			2	.Screw	.Skruv	5
0240	23	96 24 867			1	.Electric motor	.Elmotor	5
0250	24	40 73 383			1	.Attaching plate	.Fästplatta	6
0260	25	*79 73 126*		NLS - USE 7972128	2	.Screw	.Skruv	5
0270	26	43 18 242			1	.Seal	.Tätning	4
0280	27	40 73 532			1	.Draining valve	.Dräneringsventil	6
0290	34	40 74 472		-1992, COMPR.-CONDENSER, EVAPORATOR, TURBO	1	Hose	Slang	5
0300								
0310	34	40 74 480		-1992, COMPR.-CONDENSER, EVAPORATOR, I	1	Hose	Slang	5
0320								
0330	34A			1)	1	.Connector	.Anslutning	
0340	35	43 18 051			1	.O-ring	.O-ring	2
0350	36	43 18 036			1	.O-ring	.O-ring	2
0360	37	79 78 307			1	Screw	Skruv	5
0370	38	*40 71 957*		-1992 NLS - USE 4382404	1	Condenser	Kondensor	5
0380	38	43 82 404		1993	1	Condenser	Kondensor	5
0390	39	*40 71 916*		208) -1992, I	1	Hose	Slang	6
0400				TO CONDENSER NLS - USE 4362628, 7978141				
0410	39	43 82 628		208) 1993, I	1	Hose	Slang	6
0420				TO CONDENSER				
0430	39	*40 71 908*		208) -1992, TURBO,	1	Hose	Slang	6
0440				TO CONDENSER NLS - USE 4382610, 7978141				
0450	39	43 82 610		208) 1993, TURBO,	1	Hose	Slang	6
0460				TO CONDENSER				
0470	41	*43 19 216*		208) -1992, B234,	1	Hose	Slang	6
0480				TO EVAPORATOR NLS - USE 4382644				
0490	41	43 82 644		208) 1993, B234,	1	Hose	Slang	6
0500				TO EVAPORATOR				
0510	41	*40 71 932*		208) -1992, B202,	1	Hose	Slang	6
0520				TO EVAPORATOR NLS - USE 4382636				
0530	41	43 82 636		208) 1993, B202,	1	Hose	Slang	6
0540				TO EVAPORATOR				
0570	42	43 18 705		208)	1	.Plug	.Plugg	5
0580	44			See page 8C-019, 6-K20	1	O-ring	O-ring	

1. Not as separate spare part. Ej som separat reservdel.
208. For cars with refrigerant medium R134a. För bilar med köldmedia R134a.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-L02

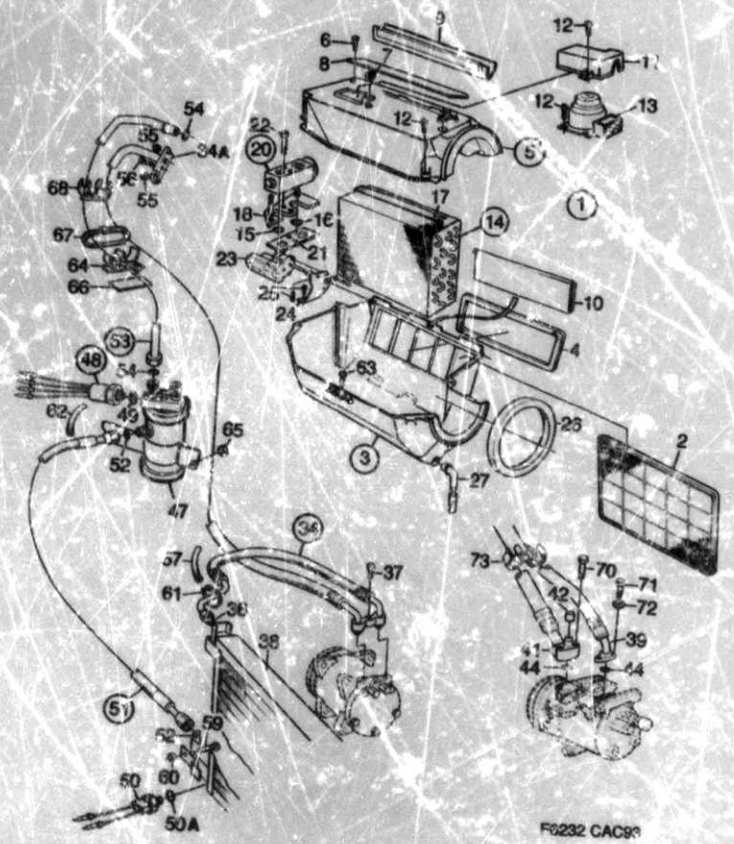

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	47	40 74 340		300)	1	Reservoir	Behållare	4
0600	47	43 83 584		301)	1	Reservoir	Behållare	4
0610	48	43 19 984		(4071965)	1	Pressure monitor	Tryckvakt	2
0630	49	40 73 979			1	O-ring	O-ring	2
0640	50	40 71 981		US,PA,ME,LA,AU	1	Pressure monitor	Tryckvakt	4
0670	50A	40 73 979			1	O-ring	O-ring	2
0680	51	43 19 588			1	Hose	Slang	6
0690	52	43 18 028			2	O-ring	O-ring	2
0700	53	43 19 570			1	Tube	Rör	5
0720	54	43 18 028			2	O-ring	O-ring	2
0730	55	79 77 929			2	Nut	Mutter	5
0740	56	79 78 117			1	Screw	Skruv	5
0750	57	96 31 387			1	Protection	Skydd	5
0760	59	79 74 280		B202I	2	Screw	Skruv	5
0770	59	60 19 911		B234I NLS - USE 7399603	2	Screw	Skruv	5
0780	59	79 74 272		B234 TURBO	2	Screw	Skruv	5
0790	60	79 74 298			2	Nut	Mutter	5
0800	61	79 71 880			1	Tensioning band	Spännband	4
0810	62	85 64 973			1	Protecting moulding	Skyddslist	6
0820	63	79 73 001			2	Screw	Skruv	5
0830	64	43 18 531			1	Pipe bracket	Rörhållare	6
0860	65	79 77 929			2	Nut	Mutter	5
0870	66	96 30 310			2	Base	Underlägg	6
0880	67	79 71 880			1	Tensioning band	Spännband	4
0890	68	43 18 382			2	Pipe bracket	Rörhållare	6
0900	70	79 78 174			2	Screw	Skruv	5
0910	71	80 59 579		-1992	2	Screw	Skruv	5
0920	71	79 78 141		1993	2	Hexagon screw	Sexkantsskruv	5
0930	72	91 66 364		-1992 (8029951)	2	Washer	Bricka	5
0940	73	96 27 269		1993	1	Clamp	Klammer	5

300. Ch. -P1028557
301. Ch. P1028558-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-L04

Hose
RAC

Slang
RAC

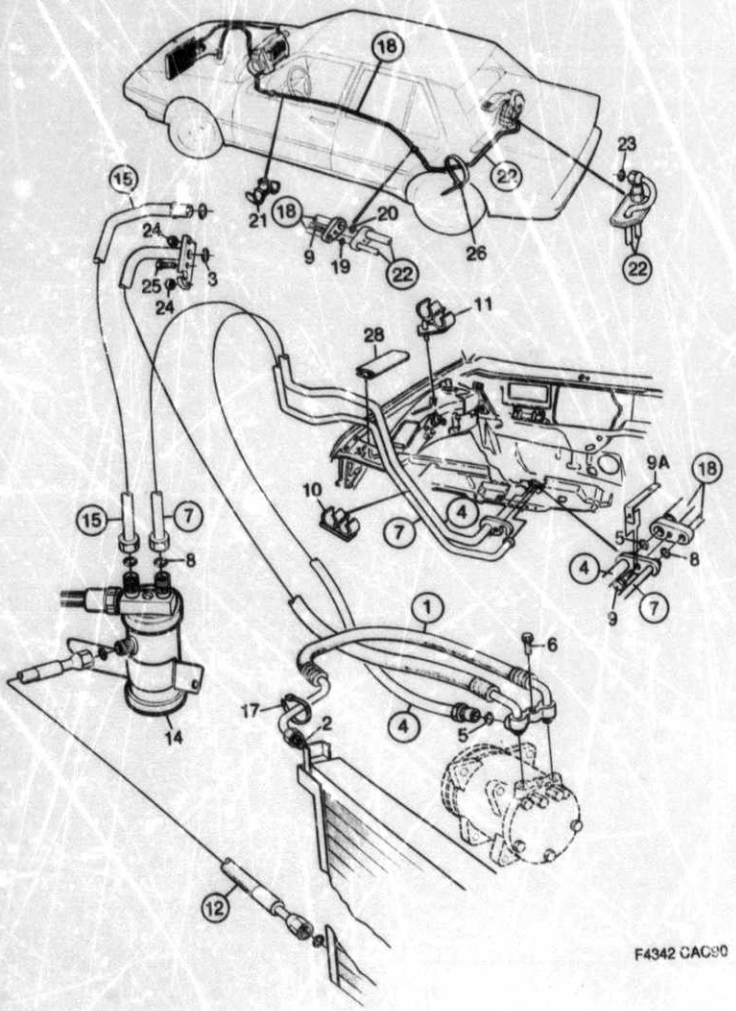

2025	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 71 387		TURBO	1	Hose	Slang	5
0020	2	43 18 036			1	.O-ring	.O-ring	2
0030	3	43 18 051			1	.O-ring	.O-ring	2
0040	4	40 71 262			1	Hose	Slang	5
0050	5	43 18 044			1	.O-ring	.O-ring	2
0060	6	79 82 564			1	Screw	Skruv	5
0070	7	40 71 296			1	Hose	Slang	5
0080	8	43 18 028			2	.O-ring	.O-ring	2
0090	9	79 78 232			2	Screw	Skruv	5
0100	9A	43 19 802			1	Bracket	Konsol	6
0110	10	43 18 473			2	Pipe bracket	Rörhållare	6
0120	11	43 18 325			1	Pipe bracket	Rörhållare	6
0130	12			See page 8C-023, 5-K24		Hose	Slang	
0140	14			See page 8C-023, 6-K24		Reservoir	Behållare	
0150	15			See page 8C-023, 6-K24		Tube	Rör	
0160	17	79 71 880			1	Tensioning band	Spännband	4
0170	18	40 72 518			1	Tube	Rör	5
0180	19	43 18 028			1	.O-ring	.O-ring	2
0190	20	43 18 044			1	.O-ring	.O-ring	2
0200	21	40 74 027			2	Pipe bracket	Rörhållare	6
0210	22	40 72 500			1	Tube	Rör	5
0220	23	43 18 028			1	.O-ring	.O-ring	2
0230	24	79 77 929			2	Nut	Mutter	5
0240	25	79 78 117			1	Screw	Skruv	5
0250	26	79 71 898		-1992	1	Tensioning band	Spännband	5
0260	28	41 75 287			1	Wear protection	Slitskydd	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-L06

AC evaporator
RAC

AC förångare
RAC

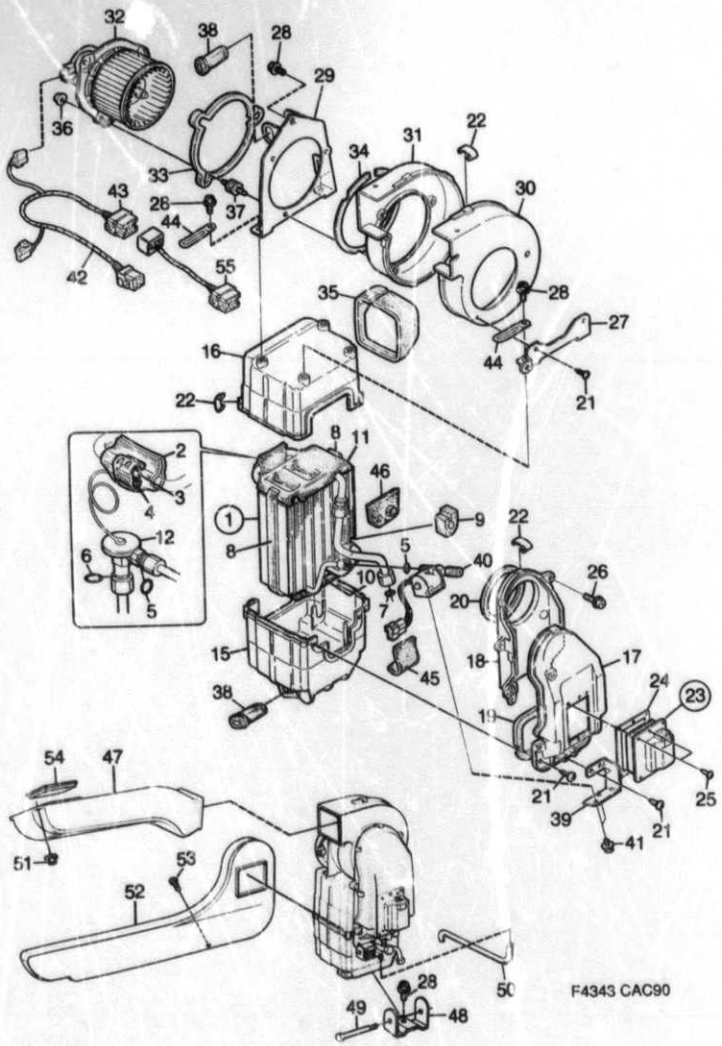

2050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 29 734			1	Evaporator	Förångare	5
0020	2	40 70 710			1	.Insulation	.Isolering	4
0030	3	40 72 252			1	.Holder	.Hållare	6
0040	4	40 72 773			1	.Clamp	.Klamma	5
0050	5	43 18 028			2	.O-ring	.O-ring	2
0060	6	43 18 036			1	.O-ring	.O-ring	2
0070	7	43 18 051			1	.O-ring	.O-ring	2
0080	8	96 31 029			2	.Seal	.Tätning	4
0090	9	96 31 037			1	.Seal	.Tätning	4
0100	10	96 31 045			1	.Seal	.Tätning	4
0110	11	96 31 052			1	.Seal	.Tätning	4
0120	12	96 31 060			1	.Expansion valve	.Expansionsventil	5
0130	15	96 29 718			1	Evaporator housing	Förångarhus	5
0140	16	96 29 726			1	Evaporator housing	Förångarhus	5
0150	17	96 31 516			1	Duct	Kanal	6
0160	18	96 31 524			1	Duct	Kanal	6
0170	19	40 71 064			1	Seal	Tätning	5
0180	20	96 29 825			1	Seal	Tätning	5
0190	21	79 22 347			8	Screw	Skruv	5
0200	22	40 70 736			14	Clamp	Klamma	5
0210	23	96 30 005			1	Control unit	Reglerdon	5
0220	24	40 70 082			1	.Seal	.Tätning	6
0230	25	79 22 149			4	Screw	Skruv	5
0240	26	79 65 544			2	Screw	Skruv	5
0250	27	96 29 767			1	Bracket	Konsol	6
0260	28	79 72 441			5	Screw	Skruv	5
0270	29	40 70 033			1	Attaching plate	Fästplatta	6
0280	30	96 30 971			1	Fan housing	Fläkthus	5
0290	31	96 29 866			1	Fan housing	Fläkthus	5
0300	32	40 70 017			1	Fan unit	Fläktenhet	4
0310	33	96 29 817			1	Seal	Tätning	5
0320	34	40 72 765			1	Gasket	Packning	5
0330	35	96 29 833			1	Seal	Tätning	5
0340	36	79 77 929			3	Nut	Mutter	5
0350	37	40 70 686			3	Rubber damper	Gummidämpare	6
0360	38	40 70 066			2	Bracket	Upphängning	6
0370	39	40 72 757			1	Bracket	Konsol	6
0380	40	40 70 074			1	Solenoid valve	Magnetventil	4
0390	41	80 59 362			2	Screw	Skruv	5
0400	42	40 73 649			1	Cable harness	Ledningsnät	6
0410	43			See page 8B-045, 3-B22		Contact housing	Kontaktdhus	
0420	44	40 74 506			3	Clamp	Klamma	5
0430	45	40 74 498			1	Insulation	Isolering	4
0440	46	96 31 532			1	Grommet	Genomföring	6
0450	47	96 29 692			1	Duct	Kanal	5
0460	48	96 29 783			1	Bracket	Konsol	6
0470	49	96 31 557			2	Screw	Skruv	5
0480	50	96 29 940			1	Draining hose	Dräneringsslang	5
0490	51	40 62 329			2	Nut	Mutter	5
0500	52	96 29 999			1	Duct	Kanal	6
0510	53	79 72 938			2	Screw	Skruv	5
0520	54			See page 8B-201, 6-I10		Air outlet	Luftutsläpp	
0530	55	44 18 372			1	Cable harness	Ledningsnät	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

6-L08

2100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		86 05 412		-1993, B202, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0020				See page 8C-033, 6-L10				
0030		86 05 420		-1993, B234, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0040				See page 8C-033, 6-L10				
0050		86 05 438		-1993, TURBO, R134A	X	Additional kit hoses	Tilläggssats slangar	4
0060				See page 8C-033, 6-L10				
0070		86 05 446		-1993, I, R134A	X	Additional kit hoses	Tilläggssats slangar	4
0080				See page 8C-033, 6-L10				
0090		86 05 297		1990-1991, R134A	X	Additional kit brackets	Tilläggssats konsoler	4
0100				See page 8C-033, 6-L10				
0110		75 77 042		-1990, TURBO, R134A	X	Ac-accesory kit AC switch off	Ac-tillbehör AC-bortkoppling	4
0120				See page 8C-033, 6-L10				
0130		96 27 373		-1990, TURBO A, R134A	X	Fan	Fläkt	4
0140				See page 8C-033, 6-L10				
0150		86 05 099		74)-1993, B202 I, M, SE, FI, EU, GB	X	Additional kit cooling system	Tilläggssats kylsystem	6
0160				See page 8C-033, 6-L10				
0170								
0180		86 05 222		1991-1992, TURBO A	X	Fan motor kit	Fläktmotorsats	5


74. Ch. L1002728–, L2001991–, L8000284–


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX


Heating and ventilation system	6-K06
Complete sets	6-L10

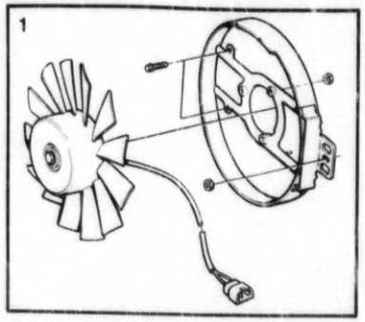


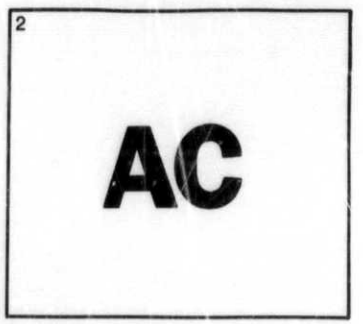

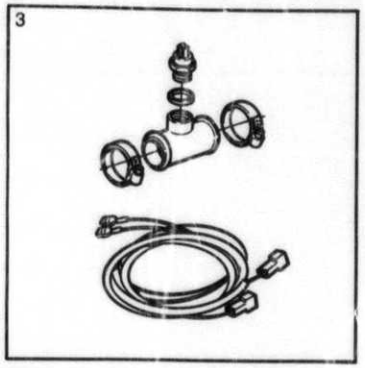

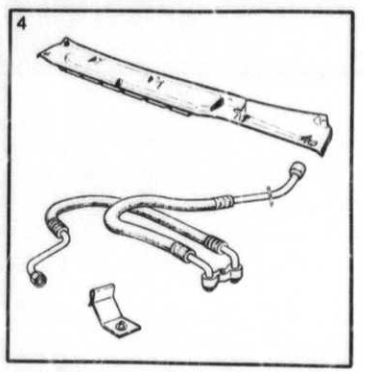

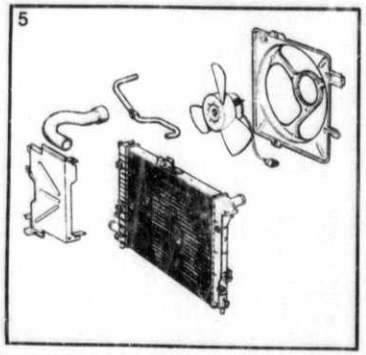

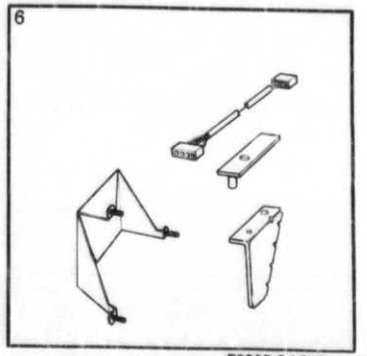

F3985 CAC90

Complete sets
6-L10
Body
Heating and ventilation

Satser
Kaross
Värme och ventilation


2500	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	96 27 373		1990, TURBO A ,R134A	X	Fan	Fläkt	4
0020		75 77 885			1	.Fan shroud	.Fläktkåpa	4
0030		75 98 980			1	.Fan unit	.Fläktenhet	4
0040		79 75 576			3	.Nut	.Mutter	5
0050		79 71 658			1	.Nut	.Mutter	5
0060		79 72 607			3	.Screw	.Skruv	5
0070								
0080	1	86 05 222		1991-1992, TURBO A	X	Fan motor kit	Fläktmotorsats	5
0090		*75 92 819*		NLS - USE 4360962	1	.Fan unit	.Fläktenhet	4
0100		79 61 659			2	.Rivet	.Nit	5
0110		79 74 298			3	.Nut	.Mutter	5
0120		79 74 611			1	.Fuse	.Säkring	1
0130		79 74 678			1	.Fuse	.Säkring	1
0140		85 22 310			1	.Relay	.Relä	3
0150		93 86 285			1	.Seal	.Tätning	5
0160		95 22 061			1	.Relay	.Relä	5
0170		40 86 682			1	.Thermo contact	.Termokontakt	2
0180				75/670448	1	.Assembly instruction	.Monteringsanvisning	
0190								
0200	2	86 05 412		-1993, B202, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0210		40 71 940			1	.Evaporator housing	.Förångarhus	6
0220		40 74 340			1	.Reservoir	.Behållare	4
0230		41 13 999			1	.Clip	.Clips	5
0240		41 17 602			1	.Bracket	.Hållare	6
0250		41 18 964			1	.Pulley	.Remskiva	5
0260		41 79 933			1	.Relay	.Relä	3
0270		42 83 164			1	.Hose	.Slang	3
0280		43 18 291			1	.Label	.Etikett	5
0290		43 18 382			2	.Pipe bracket	.Rörhållare	6
0300		43 18 531			1	.Pipe bracket	.Rörhållare	6
0310		43 19 570			1	.Tube	.Rör	5
0320		43 19 588			1	.Hose	.Slang	6
0330		43 19 984			1	.Pressure monitor	.Tryckvakt	4
0340		43 56 291			1	.V-belt	.Kilrem	1
0350		43 57 067			1	.Bracket	.Konsol	6
0360		43 82 404			1	.Condenser	.Kondensor	5
0370		43 82 636			1	.Hose	.Slang	6
0380		43 82 735			1	.Compressor	.Kompressor	5
0390		43 82 750			1	.Label	.Etikett	5
0400		73 98 266			3	.Screw	.Skruv	5
0410		73 98 852			2	.Washer	.Bricka	5
0420		75 50 346			1	.Bracket	.Fäste	5
0430		75 50 353			1	.Rubber bushing	.Gummibussning	5
0440		79 68 415			1	.Lock nut	.Låsmutter	3
0450		79 71 864			1	.Tensioning band	.Spännband	5
0460		79 71 880			2	.Tensioning band	.Spännband	4
0470		79 72 441			1	.Screw	.Skruv	5
0480		79 73 001			2	.Screw	.Skruv	5
0490		79 74 280			2	.Screw	.Skruv	5
0500		79 74 298			2	.Nut	.Mutter	5
0510		79 74 637			1	.Fuse	.Säkring	1
0520		79 74 678			1	.Fuse	.Säkring	1
0530		79 77 929			2	.Nut	.Mutter	5
0540		79 78 117			1	.Screw	.Skruv	5
0550		79 78 174			2	.Screw	.Skruv	5
0560		79 78 208			1	.Screw	.Skruv	5
0570		79 79 602			2	.Nut	.Mutter	5
0580		79 82 119			3	.Screw	.Skruv	5
0590		85 06 941			1	.Label	.Etikett	5
0600		85 22 310			1	.Relay	.Relä	3
0610		85 36 401			1	.Relay	.Relä	3
0620		85 64 973			2	.Protecting moulding	.Skyddslist	6
0630		85 98 526			1	.Cable harness	.Ledningsnät	4
0640		86 05 230			1	.Bracket	.Fäste	6
0650		93 82 466			1	.Screw	.Skruv	5


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX


Heating and ventilation system	6-K06
Complete sets	6-L10

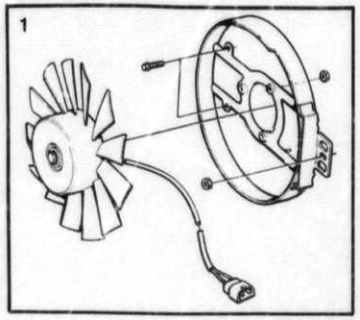


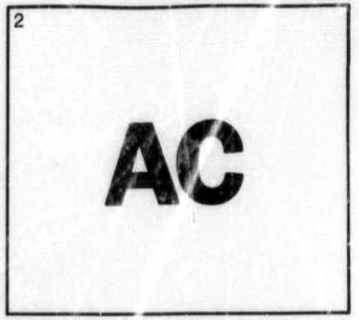

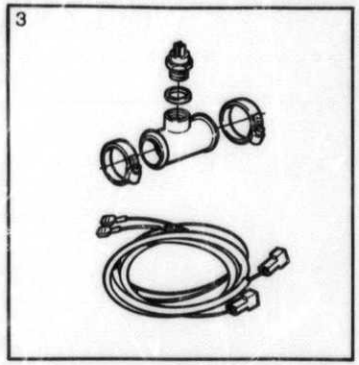

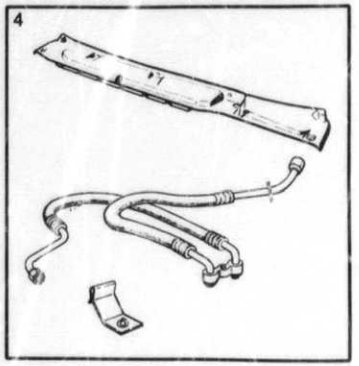

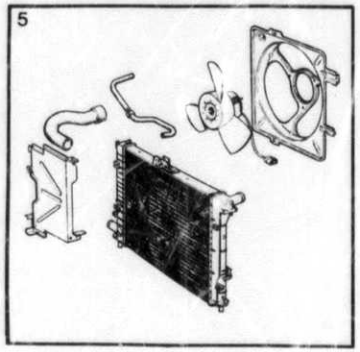

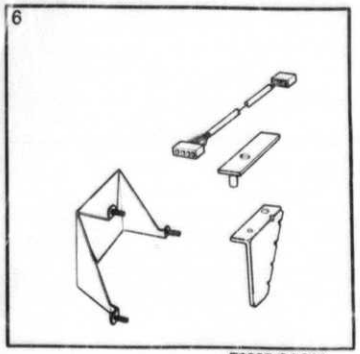

F3985 CAC90


2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660		93 86 343			1	.Pin	.Axeltapp	5
0670		93 86 350			1	.Sleeve	.Hylsa	5
0680		93 90 964			1	.Label	.Etikett	4
0690		95 03 426			1	.Connector housing	.Skarvhus	4
0700		95 03 442			1	.Contact housing	.Kontakthus	4
0710		95 12 690			1	.Switch	.Strömställare	3
0720		95 23 788			1	.Switch	.Strömställare	3
0730		96 27 266			1	.Clamp	.Klammer	5
0740		96 30 310			2	.Base	.Underlägg	6
0750		96 31 367			1	.Protection	.Skydd	5
0760								
0770	2	86 05 420		-1993, B234, R134A	X	Air conditioning kit	Luftkonditioneringssats	6
0780		40 29 203			1	.Belt	.Rem	1
0790		40 71 940			1	.Evaporator housing	.Förångarhus	6
0800		40 74 340			1	.Reservoir	.Behållare	4
0810		41 13 999			1	.Clip	.Clips	5
0820		41 17 602			1	.Bracket	.Hållare	6
0830		42 79 410			1	.Bracket	.Konsol	6
0840		43 18 291			1	.Label	.Etikett	5
0850		43 18 382			2	.Pipe bracket	.Rörhållare	6
0860		43 18 531			1	.Pipe bracket	.Rörhållare	6
0870		43 19 570			1	.Tube	.Rör	5
0880		43 19 588			1	.Hose	.Slang	6
0890		43 19 984			1	.Pressure monitor	.Tryckvakt	4
0900		43 82 404			1	.Condenser	.Kondensor	5
0910		43 82 644			1	.Hose	.Slang	6
0920		43 82 743			1	.Compressor	.Kompressor	5
0930		43 82 750			1	.Label	.Etikett	5
0940		73 98 266			3	.Screw	.Skruv	5
0950		73 98 852			2	.Washer	.Bricka	5
0960		75 50 346			1	.Bracket	.Fäste	5
0970		75 50 353			1	.Rubber bushing	.Gummibussning	5
0980		79 71 864			1	.Tensioning band	.Spännband	5
0990		79 71 880			1	.Tensioning band	.Spännband	4
1000		79 72 441			1	.Screw	.Skruv	5
1010		79 73 001			2	.Screw	.Skruv	5
1020		79 74 290			2	.Screw	.Skruv	5
1030		79 74 298			2	.Nut	.Mutter	5
1040		79 74 637			1	.Fuse	.Säkring	1
1050		79 74 678			1	.Fuse	.Säkring	1
1060		79 77 929			2	.Nut	.Mutter	5
1070		79 78 117			1	.Screw	.Skruv	5
1080		79 78 174			2	.Screw	.Skruv	5
1090		79 78 208			1	.Screw	.Skruv	5
1100		79 78 224			1	.Screw	.Skruv	5
1110		79 79 602			2	.Nut	.Mutter	5
1120		79 82 119			1	.Screw	.Skruv	5
1130		85 22 310			1	.Relay	.Relä	3
1140		85 36 401			1	.Relay	.Relä	3
1150		85 64 973			2	.Protecting moulding	.Skyddslist	6
1160		85 98 526			1	.Cable harness	.Ledningsnät	4
1170		93 90 964			1	.Label	.Etikett	4
1180		95 03 426			1	.Connector housing	.Skarvhus	4
1190		95 03 442			1	.Contact housing	.Kontakthus	4
1200		95 12 690			1	.Switch	.Strömställare	3
1210		95 23 788			1	.Switch	.Strömställare	3
1220		96 27 266			1	.Clamp	.Klammer	5
1230		96 30 310			2	.Base	.Underlägg	6
1240		96 31 367			1	.Protection	.Skydd	5
1250								
1260	3	75 77 042		-1990, AC-DISENGAGEMENT	X	Ac-accesory kit hoses	Ac-tillbehör slangar	4
1270								
1280		75 76 960			1	.Tube	.Rör	5
1290		79 70 114			2	.Hose clamp	.Slangklamma	5
1300		79 71 880			7	.Tensioning band	.Spännband	4


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02


8C GROUP INDEX


Heating and ventilation system	6-K06
Complete sets	6-L10

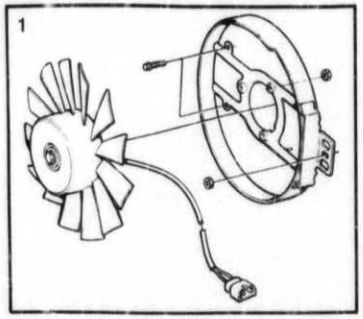


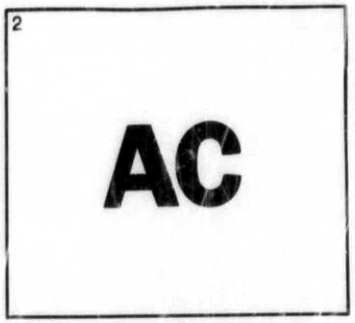

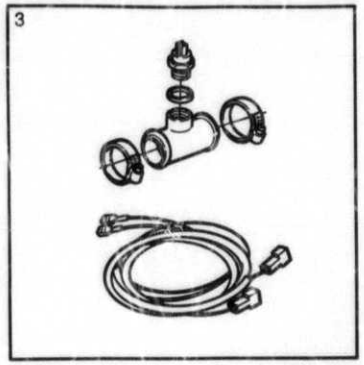

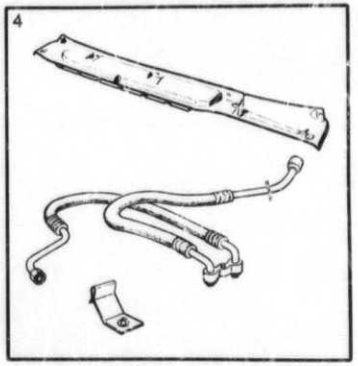

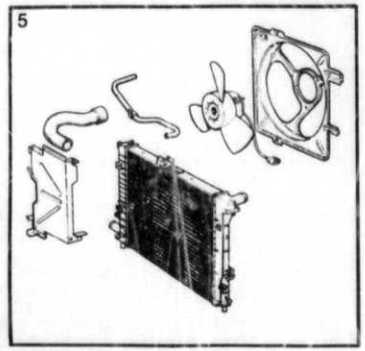

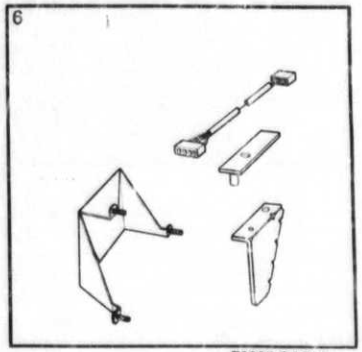

F3985 CAC90

2500 Pos	Part No. Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1310	83 30 [illegible]68			1	.Seal	.Tätning	5
1320	95 23 [illegible]9			1	.Cable harness	.Ledningsnät	6
1330	*95 26 [illegible]6*		NLS - USE 4086724	1	.Thermo contact	.Termokontakt	2
1340							
1350	4 86 05 44[illegible]		-1993, I, R134A	X	Additional kit hoses	Tilläggssats slangar	4
1360							
1370	43 18 606			1	.Cover	.Lock	5
1380	43 82 628			1	.Hose	.Slang	6
1390	79 78 141			2	.Hexagon screw	.Sexkantsskruv	5
1400							
1410	4 86 05 438		-1993, TURBO, R134A	X	Additional kit hoses	Tilläggssats slangar	4
1420							
1430	40 28 767			1	.Cover plate	.Täckplåt	5
1440	43 18 606			1	.Cover	.Lock	5
1450	43 82 610			1	.Hose	.Slang	6
1460	79 72 607			1	.Screw	.Skruv	5
1470	79 78 141			2	.Hexagon screw	.Sexkantsskruv	5
1480							
1490	5 86 05 099		74-[illegible]993, AC, B202,I,M, SE, [illegible] EU, GB		Additional kit	Tilläggssats	6
1500							
1510	75 50 015			1	.Cover plate	.Täckplåt	5
1520	75 50 130			1	.Hose	.Slang	2
1530	75 92 918			1	.Fan shroud	.Fläktkåpa	4
1540	79 22 800			2	.Screw	.Skruv	5
1550	79 71 823			4	.Screw	.Skruv	5
1560	79 74 298			3	.Nut	.Mutter	5
1570	93 82 144			1	.Fan unit	.Fläktenhet	4
1580	93 83 670			1	.Hose	.Slang	3
1590	93 86 285			1	.Seal	.Tätning	5
1600	94 27 014			2	.Clip nut	.Clipsmutter	3
1610	75 99 285			1	.Radiator	.Kylare	4
1620							
1630	6 86 05 297		-1991, R134A	X	Additional kit	Tilläggssats	4
1640	40 74 431			1	.Pipe bracket	.Rörhållare	6
1650	79 71 864			1	.Tensioning band	.Spännband	5
1660	79 72 938			1	.Screw	.Skruv	5
1670	91 66 364		(8029951)	1	.Washer	.Bricka	5
1680	*80 73 223*		NLS - USE 9166380	3	.Washer	.Bricka	5
1690	80 73 512			3	.Lock nut	.Låsmutter	3
1700	91 66 406		(8074288)	1	.Nut	.Mutter	5
1710	82 35 178			5	.Pop rivet	.Popnit	5
1720	85 48 315			1	.Cable harness	.Ledningsnät	6
1730	86 05 347			1	.Bracket	.Konsol	6
1740	86 05 362			1	.Bracket	.Fäste	6
1750	86 05 370			1	.Bracket	.Fäste	6
1760	*95 12 219*		NLS - USE 4179925	1	.Relay	.Relä	5

74. Ch. L1002728--, L2001991--, L8000284--

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

8C GROUP INDEX

Heating and ventilation system	6-K06
Complete sets	6-L10

7-A02



Tool, Labels
Verktyg, Etiketter
Herramient, Etiquetas

CONTENTS.

Tool kit	9 : 5	7-A06
Labels		
Labels, part 1	9 : 7	7-A08
Labels, part 2	9 : 11	7-A12
Labels, part 3	9 : 13	7-A14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A03

INNEHÅLLSFÖRTECKNING.

Verktygssats	9 : 5	7-A06
Etiketter		
Etiketter, del 1	9 : 7	7-A08
Etiketter, del 2	9 : 11	7-A12
Etiketter, del 3	9 : 13	7-A14

SUMARIO.

Bolsa de herramientas	9 : 5	7-A06
Etiquetas		
Etiquetas, 1a parte	9 : 7	7-A08
Etiquetas, 2a parte	9 : 11	7-A12
Etiquetas, 3a parte	9 : 13	7-A14


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A06 *Tool kit* *Verktygsats*

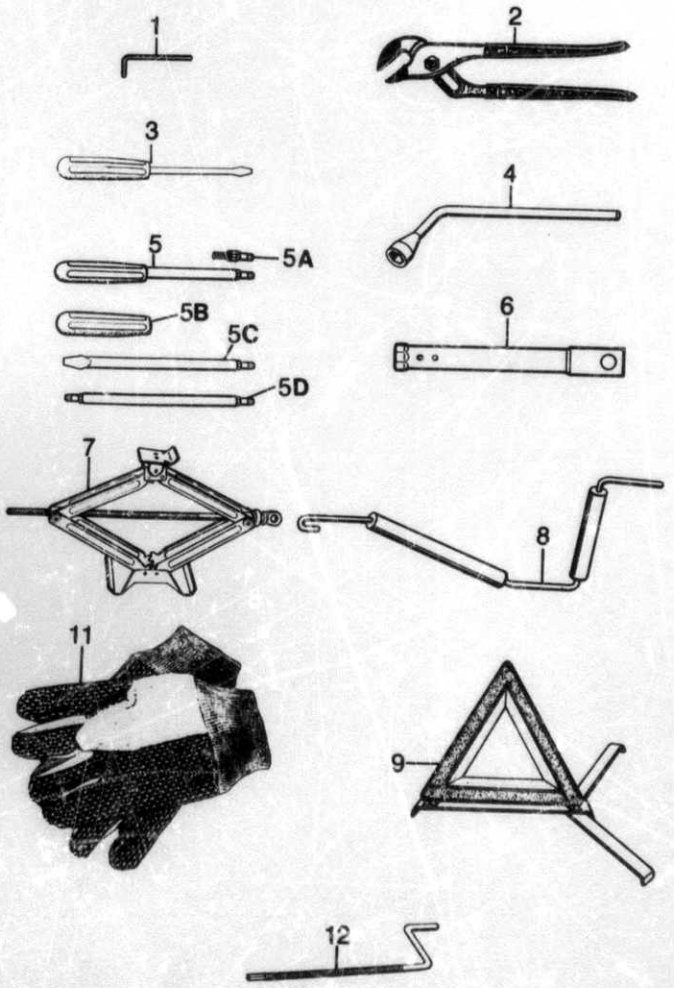

F4857 CAC90

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 46 097			1	Key	Nyckel	5
0030						front seat	framstol	
0060	2	*89 61 732*		1990 NLS - USE 4195954	1	Pliers	Tång	5
0070	2	41 95 954		1991-	1	Pliers	Tång	5
0080	3	70 37 492		22)	1	Screwdriver	Skruvmejsel	5
0100	4	73 48 287		WHEEL NUT	1	Socket wrench	Hylsnyckel	4
0140	5	89 91 549		22), TORX	1	Screwdriver	Skruvmejsel	5
0150	5A	89 91 564		22), TORX 25/30	1	. Screwdriver insert	. Skruvmejselinsats	5
0155	5A	89 71 087		22), TORX 10/20	1	Screwdriver insert	Skruvmejselinsats	5
0156	5B	41 98 883		23)	1	Handle	Skaft	5
0157	5C	41 98 891		23), TORX 25	1	Screw driver bit	Mejselspets	5
0158	5D	41 98 909		23), TORX 10/20	1	Screw driver bit	Mejselspets	5
0180	6	41 93 157			1	Spark plug spanner	Tändstiftnyckel	4
0200	7	89 61 740			1	Jack	Domkraft	4
0215	8	89 64 991		-1992	1	Crank	Vev	4
0220	8	89 35 959		1993-	1	Crank	Vev	4
0243	9	95 26 963		1990	1	Warning triangle	Varningstriangel	6
0246	9	42 66 003		1991-	1	Warning triangle	Varningstriangel	6
0260	11			45/3012952	1	Work gloves	Skyddshandskar	
0270	12	95 48 363			1	Crank	Vev	6
0280						front seat	framstol	

22. Ch. --N1033544
23. Ch. N1033545--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A08 Labels Part 1

Etiketter Del 1

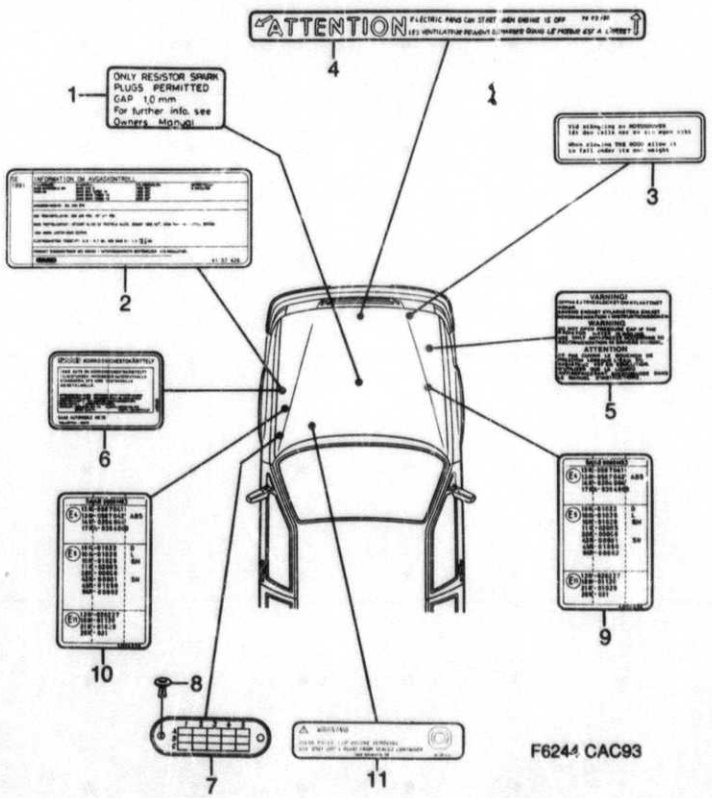

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	74 87 937		SPARK PLUGS, DI	1	Label	Etikett	4
2	40 23 305		11,18) SE,FI,DK, TURBO	1	Label	Etikett	4
2	41 60 958		11,19) -1990 SE,FI,DK, TURBO	1	Label	Etikett	4
2	41 57 426		11,17) 1991 SE,FI,DK, TURBO	1	Label	Etikett	4
2	40 19 162		11,17,18) SE,FI,DK, I	1	Label	Etikett	4
2	41 60 941		11,17,19) -1990 SE,FI,DK, I	1	Label	Etikett	4
2	41 57 418		11,17) 1991, SE,FI,DK, I	1	Label	Etikett	4
2	41 61 576		11,17) 1992, SE, FI, DK	1	Label	Etikett	4
2	43 74 393		11) 1993 ,B202 SE,FI,DK	1	Label	Etikett	4
2	43 93 211		11)1993 ,B234 I SE,FI,DK	1	Label	Etikett	4
2	43 93 229		11) 1993, B234 TURBO, SE, FI, DK	1	Label	Etikett	4
2	43 93 237		11) 1993, B234 TURBO,TCS SE, FI, DK	1	Label	Etikett	4
2	43 74 393		11) 1993, B234 TURBO, B234R, SE, FI, DK	1	Label	Etikett	4
2	40 23 313		11,18) CA TURBO	1	Label	Etikett	4
2	41 61 063		11,19) -1990 CA TURBO	1	Label	Etikett	4
2	41 57 566		11) 1991, CA TURBO	1	Label	Etikett	4
2	41 61 600		11) 1992, CA TURBO	1	Label	Etikett	4
2	43 74 427		11) 1993, CA TURBO	1	Label	Etikett	4
2	40 18 750		11,18) CA I	1	Label	Etikett	4
2	41 61 055		11,19) -1990, CA I	1	Label	Etikett	4
2	41 56 402		11,18) B234 I, CA	1	Label	Etikett	4
2	41 61 071		11,19) -1990, B234 I, CA	1	Label	Etikett	4
2	41 57 558		11) 1991, CA I	1	Label	Etikett	4
2	41 61 592		11) 1992, CA I	1	Label	Etikett	4
2	43 74 419		11) 1993, CA I	1	Label	Etikett	4
2	40 23 339		11,18) UF, JP, TURBO	1	Label	Etikett	4
2	41 61 121		11,19) -1990 UF,JP,TURBO	1	Label	Etikett	4
2	41 61 824		11) 1991 US, JP, TURBO	1	Label	Etikett	4
2	41 61 717		11) 1992 US, JP, TURBO	1	Label	Etikett	4
2	44 40 988		11) 1993 US, JP, TURBO	1	Label	Etikett	4
2	44 41 135		11) 1993 US, JP, TURBO TCS	1	Label	Etikett	4
2	40 18 693		11,18) UF,JP,I	1	Label	Etikett	4
2	*41 61 113*		11,19) -1990, UF,JP,I	1	Label	Etikett	4
2	41 56 394		11,18) B234 I, UF	1	Label	Etikett	4
2	41 61 154		11,19) -1990, B234 I, UF	1	Label	Etikett	4
2	41 61 956		11) 1991, US, JP, I	1	Label	Etikett	4
2	41 61 691		11) 1992, US, JP, I	1	Label	Etikett	4
2	43 93 658		11) 1993, US, JP, I	1	Label	Etikett	4
2	41 57 764		11,18) UC, TURBO	1	Label	Etikett	4
2	*41 61 147*		11,19) -1990, UC, TURBO	1	Label	Etikett	4
2	41 57 756		11,18) UC, I	1	Label	Etikett	4
2	*41 61 139*		11,19) -1990, UC, I	1	Label	Etikett	4
2	40 23 321		11,18) AU TURBO	1	Label	Etikett	4
2	41 61 097		11,19) -1990, AU TURBO	1	Label	Etikett	4
2	41 57 483		11) 1991, AU TURBO	1	Label	Etikett	4

11. Exhaust emission control device Avgasrening
17. Also valid for B234 Gäller även för B234
18. Ch. --L1018300, --L2013108, --L8001777
19. Ch. L1018301--, L2013109--, L8001778--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A10 Labels Part 1

Etiketter Del 1

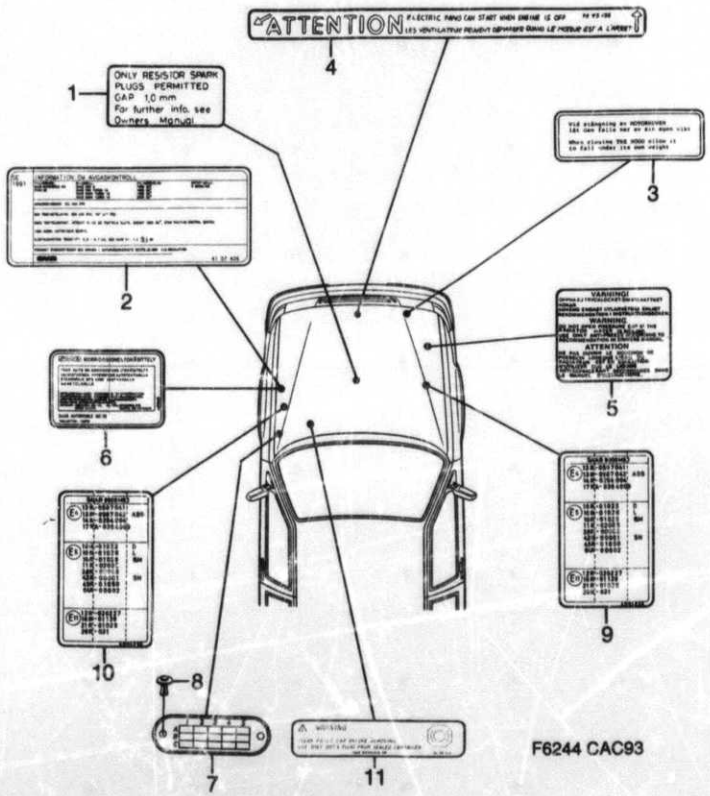

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	2	41 61 659		11) 1992, AU TURBO	1	Label	Etikett	4
0585	2	43 74 492		11) 1993, AU TURBO	1	Label	Etikett	4
0600	2	40 18 792		11,18) AU I	1	Label	Etikett	4
0610	2	41 61 089		11,19) -1990, AU I	1	Label	Etikett	4
0620	2	41 58 598		11,18) B234 I, AU	1	Label	Etikett	4
0630	2	41 61 105		11,19) -1990, B234 I, AU	1	Label	Etikett	4
0640	2	41 57 475		11) 1991, AU I	1	Label	Etikett	4
0650	2	41 61 642		11) 1992, AU I	1	Label	Etikett	4
0660	2	43 74 484		11) 1993, AU I	1	Label	Etikett	4
0670								
0680	3	92 70 547		ENGINE HOOD	1	Label	Etikett	3
0690								
0699	4	75 73 132		ELECTRIC FANS, ATTENTION	1	Label	Etikett	3
0700								
0710	4	41 62 749		ELECTRIC FANS, ATENCAO, BR	1	Label	Etikett	4
0711								
0720								
0727								
0730	5	93 41 439		COOLING WATER, FI	1	Label	Etikett	5
0740	5	40 17 596		COOLING WATER	1	Label	Etikett	5
0750								
0760	6	40 13 132		15), CORR-PROTECTION, FI	1	Label	Etikett	5
0770	6	41 53 813		16,20)CORR-PROTECTION,FI	1	Label	Etikett	6
0780	6	42 52 425		21), CORR-PROTEC,FI	1	Label	Etikett	5
0790								
0800	7	92 83 722		CAMPAIGN	1	Sign	Skylt	5
0810	8	79 73 258			2	Rivet	Nit	5
0820								
0830	9	40 89 082		1990, ECE-APPROVALS	1	Label	Etikett	6
0840	9	40 94 850		1991, ECE-APPROVALS	1	Label	Etikett	6
0850								
0860	10	43 20 586		1992, ECE-APPROVALS	1	Label	Etikett	6
0870	10	43 44 339		1993, ECE-APPROVALS	1	Label	Etikett	6
0890								
0900	11	44 25 674		1993-, CLEAN FILLER CAP	1	Label	Etikett	5

11. Exhaust emission control device Avgasrening
15. Ch. --L8001494
16. Ch. L8001495--
18. Ch. --L1018300, --L2013108, --L8001777
19. Ch. L1018301--, L2013109--, L8001778--
20. Ch. --L1018300, --L2013108, --L8002058
21. Ch. L1018301--, L2013109--

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A12 Labels Part 2

Etiketter Del 2

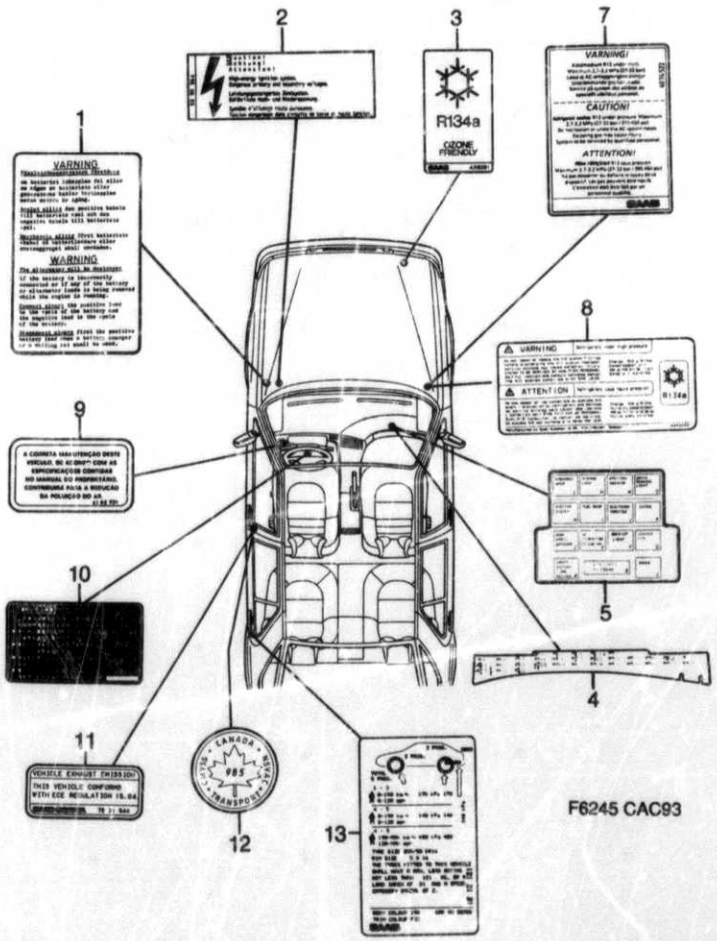

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 06 941		1990, ALTERNATOR BOSCH SWEDISH-ENGLISH	1	Label	Etikett	5
0030	1	85 06 925		1990,ALTERNATOR,BOSCH,FI	1	Label	Etikett	6
0050	2	93 90 964		IGNITION SYSTEM	1	Label	Etikett	4
0070	3	45 42 270		208) -1992, RETROFIT	1	Label	Etikett	5
0090	3	43 18 291		208)-1992,OZONE FRIENDLY	1	Label	Etikett	5
0110	4	40 69 480		1990, FUSE BOX, SE, FI, EU, ME, JP	1	Label	Etikett	5
0130	4	41 74 033		1991, FUSE BOX, SE, FI, EU, ME, JP, TW	1	Label	Etikett	5
0150	4	43 50 088		1992, FUSE BOX, LHD	1	Label	Etikett	5
0160	4	43 54 106		1993, FUSE BOX, LHD	1	Label	Etikett	5
0180	4	43 50 088		FUSE BOX, BR	1	Label	Etikett	5
0190	4	41 08 955		1990, FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0200	4	41 74 041		1991, FUSE BOX, GB,FE,AU	1	Label	Etikett	5
0210	4	43 50 104		1992, FUSE BOX, RHD	1	Label	Etikett	5
0220	4	44 32 746		1993, FUSE BOX, RHD	1	Label	Etikett	5
0240	4	41 08 957		1990, FUSE BOX, US, CA	1	Label	Etikett	5
0250	4	41 74 025		1991, FUSE BOX, US, CA	1	Label	Etikett	5
0260	4	43 50 096		1992, FUSE BOX, US, CA	1	Label	Etikett	5
0270	4	43 54 114		1993, FUSE BOX, US, CA	1	Label	Etikett	5
0290	5	40 69 464		1990, RELAY	1	Label	Etikett	5
0300	5	41 73 993		1991, RELAY	1	Label	Etikett	5
0310	5	43 50 112		1992, RELAY	1	Label	Etikett	5
0320	5	43 54 130		1993, RELAY	1	Label	Etikett	5
0380	7	40 74 522		1990, FREONGAS	1	Label	Etikett	5
0400	8	40 74 548		1990, FREON,RECOMMENDED CHARGE	1	Label	Etikett	5
0420	8	*43 18 713*		1991, FREON RECOMMENDED CHARGE NLS - USE 4319182	1	Label	Etikett	5
0440	8	43 19 182		1992, FREON,RECOMMENDED CHARGE	1	Label	Etikett	5
0460	8	43 18 721		1992-,FREON,RECOMMENDED CHARGE, RAC	1	Label	Etikett	5
0480	8	45 42 262		208),-1992, FREON, RECOMMENDED CHARGE,RETROFIT	1	Label	Etikett	5
0500	8	43 18 309		208), 1992, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0520	8	43 83 220		208), 1993, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0570	9	41 62 731		BR	1	Label	Etikett	4
0590	10	41 56 618		1991-, JP, WARNING OVER-HEATED CATALYTIC CONVERT	1	Label	Etikett	5
0620	11	75 31 544		5),-1992, ECE REGULATION PA	1	Label	Etikett	4
0640	11	75 31 544		5), 1993-,ECE REGULATION PA	1	Label	Etikett	4
0670	12	44 81 339		CA	1	Label	Etikett	6

5. Without catalytic converter. Utan katalytisk reaktor.
208. For cars with refrigerant medium R134a. För bilar med köldmedia R134a.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	2-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08

7-A14 Labels Part 3

Etiketter Del 3

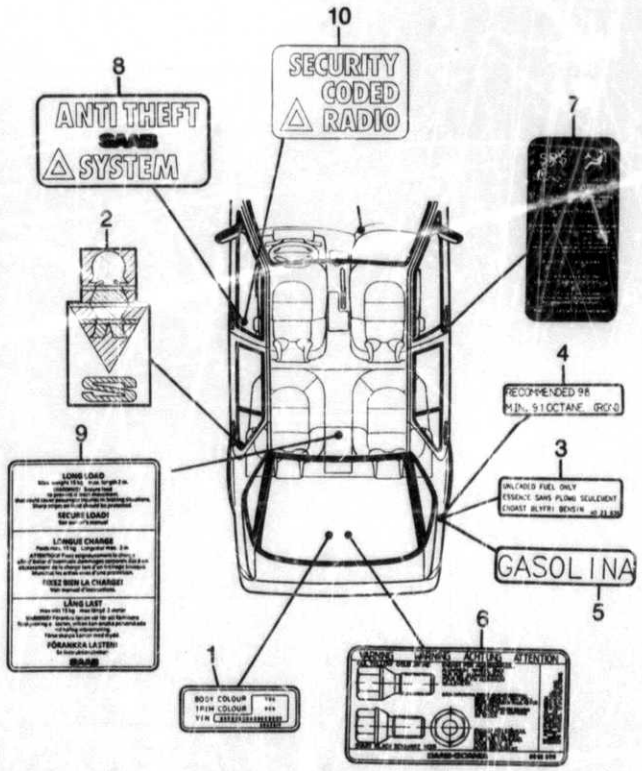

F6245 CAC93

0250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0490	1	69 42 619		13,14), 1990, BLANK, REPLACEMENT LABEL	1	Label	Etikett	6
0500								
0510								
0540	2	69 56 684		CHILD LOCK	1	Label	Etikett	5
0550								
0560	3	40 22 141		12) DK	1	Label	Etikett	4
0570	3	40 23 636		12) SE, FI, EU, GB, FE, US, CA, JP	1	Label	Etikett	4
0580								
0590	3	40 23 644		12) AU	1	Label	Etikett	4
0595	3	40 23 651		12) 1992, PREMIUM UNLEADED FUEL ONLY	1	Label	Etikett	4
0600								
0601	3	43 92 312		12) 1993-, PREMIUM UNLEADED FUEL ONLY RON98	1	Label	Etikett	4
0602								
0606	3	44 40 269		12) 1993-, PREMIUM UNLEADED FUEL ONLY RON95	1	Label	Etikett	4
0607								
0611	3	44 41 671		12) 1993-, PREMIUM UNLEADED FUEL ONLY MIN 92	1	Label	Etikett	4
0612								
0613								
0630	4	93 91 111		98/91	1	Label	Etikett	4
0631								
0635	5	41 62 715		GASOLINA, BR	1	Label	Etikett	4
0640								
0645	6	89 66 699		WHEEL BOLT	1	Label	Etikett	5
0650								
0710	7	40 78 697		SEAT BELT PRETENSION	1	Label	Etikett	5
0720								
0730	7	40 78 689		SEAT BELT PRETENSION, SE, FI	1	Label	Etikett	5
0740								
0750								
0780	8	95 88 049		ANTI-THEFT SYSTEM, US	2	Label	Etikett	5
0790								
0820	9	95 46 561		LONG LOAD	1	Label	Etikett	5
0830								
0840	10	95 67 579		SECURITY CODED RADIO	2	Label	Etikett	5

12. Unleaded fuel only Endast blyfri bensin
13. Body colour Body colour
14. Trim colour Trim colour

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

9 GROUP INDEX

Tool kit	7-A06
Labels	7-A08



Numerical register
Nummerregister
Indice numérico

7-B02 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
14 87 222	04	019	3-H20
17 54 506	02	045	1-D22
21 96 772	02	043	1-D20
29 61 357	02	039	1-D16
29 61 357	02	041	1-D18
34 83 419	02	021	1-C22
40 00 113	05	011	4-A12
40 00 139	06	009	4-C10
40 00 154	06	009	4-C10
40 00 360	06	007	4-C08
40 00 386	02	161	1-I18
40 00 410	05	025	4-B02
40 00 568	04	007	3-H08
40 00 642	04	035	3-I12
40 00 667	04	035	3-I12
40 00 816	07	013	4-E14
40 00 998	07	025	4-F02
40 01 004	07	015	4-E16
40 01 004	07	025	4-F02
40 01 111	06	005	4-C06
40 01 350	05	021	4-A22
40 01 384	05	019	4-A20
40 01 400	06	011	4-C12
40 01 426	07	015	4-E16
40 01 426	07	025	4-F02
40 01 459	05	021	4-A22
40 01 459	05	023	4-A24
40 01 467	05	021	4-A22
40 01 467	05	023	4-A24
40 01 475	05	021	4-A22
40 01 475	05	023	4-A24
40 01 483	05	021	4-A22
40 01 483	05	023	4-A24
40 01 640	07	009	4-E10
40 01 673	06	019	4-C20
40 01 681	06	021	4-C22
40 01 699	06	021	4-C22
40 01 715	06	019	4-C20
40 01 814	05	033	4-B10
40 01 830	03A	119	2-E24
40 01 970	05	021	4-A22
40 01 996	05	021	4-A22
40 02 051	05	033	4-B10
40 02 069	05	011	4-A12
40 02 093	05	011	4-A12
40 02 127	05	021	4-A22
40 02 127	05	023	4-A24
40 02 135	05	021	4-A22
40 02 135	05	023	4-A24
40 02 143	05	005	4-A06
40 02 176	03A	119	2-E24
40 02 226	06	011	4-C12
40 02 234	06	011	4-C12
40 02 242	06	011	4-C12
40 02 259	06	011	4-C12
40 02 267	05	011	4-A12
40 02 267	05	033	4-B10
40 02 341	05	019	4-A20
40 02 341	05	021	4-A22
40 02 341	05	023	4-A24
40 02 358	07	013	4-E14
40 02 390	07	013	4-E14
40 02 408	07	013	4-E14
40 02 507	07	013	4-E14
40 02 622	06	009	4-C10
40 02 630	06	009	4-C10
40 02 648	06	007	4-C08
40 02 689	05	005	4-A06
40 02 747	04	075	3-K04
40 02 861	05	011	4-A12
40 02 861	05	033	4-B10
40 02 861	05	035	4-B12
40 02 895	05	011	4-A12
40 02 895	05	033	4-B10
40 02 945	06	009	4-C10
40 02 960	06	009	4-C10
40 02 994	06	011	4-C12
40 03 026	05	025	4-B02
40 03 034	05	025	4-B02
40 03 042	05	021	4-A22
40 03 042	05	023	4-A24
40 03 059	05	021	4-A22
40 03 059	05	023	4-A24
40 03 083	05	033	4-B10
40 03 117	05	011	4-A12
40 03 117	05	033	4-B10
40 03 117	05	035	4-B12
40 03 141	05	011	4-A12
40 03 141	05	033	4-B10
40 03 158	05	011	4-A12
40 03 158	05	033	4-B10
40 03 166	05	033	4-B10
40 03 174	05	031	4-B08
40 03 182	05	011	4-A12
40 03 182	05	031	4-B08
40 03 372	06	009	4-C10
40 03 380	06	009	4-C10
40 03 398	06	009	4-C10
40 03 406	05	011	4-A12
40 04 024	05	013	4-A14
40 04 438	03A	119	2-E24
40 04 537	07	005	4-E06
40 04 545	07	005	4-E06
40 04 552	07	005	4-E06
40 04 552	07	009	4-E10
40 04 602	07	013	4-E14
40 04 727	07	013	4-E14
40 04 735	07	013	4-E14
40 04 842	06	013	4-C14
40 05 062	08A	019	5-A20
40 05 070	08A	019	5-A20
40 05 088	08A	019	5-A20
40 05 153	08A	067	5-C20
40 05 195	08A	015	5-A16
40 05 229	08A	167	5-G24
40 05 229	08A	169	5-H02
40 05 237	08A	085	5-D14
40 05 237	08A	089	5-D18
40 05 237	08A	103	5-E08
40 05 237	08A	125	5-F06
40 05 237	08A	137	5-F18
40 05 237	08A	139	5-F20
40 05 237	08A	167	5-G24
40 05 237	08A	169	5-H02
40 05 336	08A	015	5-A16
40 05 344	08A	015	5-A16
40 05 351	08A	015	5-A16
40 05 369	08A	015	5-A16
40 05 542	08A	023	5-A24
40 05 609	08A	065	5-C18
40 05 617	08A	065	5-C18
40 05 666	08A	017	5-A18
40 05 740	08A	017	5-A18
40 05 872	08A	017	5-A18
40 05 948	08A	027	5-B04
40 05 943	08A	029	5-B06
40 06 060	08A	069	5-C22
40 06 060	08A	155	5-G12
40 06 078	08A	069	5-C22
40 06 094	08A	065	5-C18
40 06 102	08A	125	5-F06
40 06 102	08A	167	5-G24
40 06 110	08A	125	5-F06
40 06 110	08A	167	5-G24
40 06 128	08A	125	5-F06
40 06 128	08A	169	5-H02
40 06 136	08A	125	5-F06
40 06 136	08A	169	5-H02
40 06 219	08A	015	5-A16
40 06 276	08A	009	5-A10
40 06 292	08A	017	5-A18
40 06 433	08A	027	5-B04
40 06 557	08A	067	5-C20
40 07 167	08A	085	5-D14
40 07 175	08A	083	5-D12
40 07 183	08A	085	5-D14
40 07 191	08A	083	5-D12
40 07 209	08A	025	5-B02
40 07 217	08A	025	5-B02
40 07 225	08A	009	5-A10
40 07 233	08A	029	5-B06
40 07 241	08A	029	5-B06
40 07 282	08A	025	5-B02
40 07 290	08A	025	5-B02
40 07 308	08A	025	5-B02
40 07 316	08A	025	5-B02
40 07 324	08A	029	5-B06
40 07 332	08A	029	5-B06
40 07 621	08A	027	5-B04
40 07 639	08A	027	5-B04
40 07 738	08A	013	5-A14
40 08 009	08A	035	5-B12
40 08 017	08A	035	5-B12
40 08 025	08A	083	5-D12
40 08 025	08A	085	5-D14
40 08 215	08A	019	5-A20
40 08 223	08A	019	5-A20
40 08 249	08A	097	5-E02
40 08 256	08A	097	5-E02
40 08 306	08A	019	5-A20
40 08 314	08A	019	5-A20
40 08 454	08A	067	5-C20
40 08 504	08A	085	5-D14
40 08 504	08A	089	5-D18
40 08 504	08A	093	5-D22
40 08 504	08A	105	5-E10
40 08 504	08A	125	5-F06
40 08 538	08A	019	5-A20
40 08 579	02	079	1-F08
40 08 884	08A	095	5-D24
40 08 942	08A	123	5-F04
40 08 942	08A	159	5-G16
40 08 959	08A	123	5-F04
40 08 959	08A	159	5-G16
40 09 247	08A	027	5-B04
40 09 254	08A	027	5-B04
40 09 429	03A	009	2-A10
40 09 502	08A	097	5-E02
40 09 502	08A	099	5-E04
40 09 502	08A	161	5-G18
40 09 528	08A	009	5-A10
40 09 569	08A	067	5-C20
40 09 577	08A	067	5-C20
40 09 700	08A	023	5-A24
40 09 965	08A	013	5-A14
40 09 999	08A	017	5-A18
40 10 260	08A	067	5-C20
40 10 336	08A	121	5-F02
40 10 393	08A	127	5-F08
40 10 401	08A	127	5-F08
40 10 419	08A	127	5-F08
40 10 427	08A	127	5-F08
40 10 435	08A	127	5-F08
40 10 443	08A	127	5-F08
40 10 450	08A	127	5-F08
40 10 468	08A	127	5-F08
40 10 518	08A	127	5-F08
40 10 526	08A	127	5-F08
40 10 534	08A	127	5-F08
40 10 542	08A	127	5-F08
40 10 559	08A	127	5-F08
40 10 567	08A	127	5-F08
40 10 575	08A	127	5-F08
40 10 583	08A	127	5-F08
40 10 617	08A	065	5-C18
40 10 617	08A	069	5-C22
40 10 625	08A	139	5-F20
40 10 666	08A	065	5-C18
40 10 674	08A	065	5-C18
40 10 682	08A	065	5-C18
40 10 724	08A	129	5-F10
40 10 732	08A	129	5-F10
40 10 872	08A	065	5-C18
40 10 963	08A	065	5-C18
40 10 963	08A	069	5-C22
40 11 698	08A	063	5-C16
40 12 639	03A	091	2-D20
40 12 951	03A	033	2-B10
40 13 017	03A	033	2-B10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-B03 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 13 017	03A	041	2-B18
40 13 025	03A	033	2-B10
40 13 025	03A	041	2-B18
40 13 132	09	009	7-A10
40 13 140	08A	065	5-C18
40 13 165	03A	063	2-C16
40 13 256	08A	139	5-F20
40 13 371	03A	073	2-D02
40 13 454	08A	097	5-E02
40 13 454	03A	151	5-G08
40 13 579	03A	073	2-D02
40 13 603	08A	115	5-E20
40 13 603	08A	117	5-E22
40 13 603	08A	153	5-G10
40 13 603	08A	163	5-G20
40 13 686	08A	137	5-F18
40 13 694	08A	137	5-F18
40 13 777	08A	119	5-E24
40 13 785	08A	119	5-E24
40 14 163	08A	117	5-E22
40 14 163	08A	163	5-G20
40 14 171	08A	119	5-E24
40 14 189	08A	119	5-E24
40 14 262	08A	121	5-F02
40 14 270	08A	121	5-F02
40 14 288	08A	121	5-F02
40 14 296	08A	121	5-F02
40 14 312	03A	057	2-C10
40 14 320	03A	057	2-C10
40 14 429	03A	067	2-C20
40 14 452	03A	067	2-C20
40 14 460	03A	067	2-C20
40 14 478	03A	067	2-C20
40 14 577	08A	129	5-F10
40 14 593	08A	117	5-E22
40 14 601	08A	117	5-E22
40 14 783	03A	079	2-D08
40 15 194	02	161	1-I18
40 15 202	02	109	1-G14
40 15 426	02	061	1-E14
40 15 475	02	057	1-E10
40 15 574	02	161	1-I18
40 15 590	02	057	1-E10
40 15 681	02	061	1-E14
40 15 707	02	063	1-E16
40 15 764	02	057	1-E10
40 15 814	02	123	1-H04
40 15 814	02	125	1-H06
40 15 863	02	143	1-H24
40 15 871	02	143	1-H24
40 15 889	02	169	1-J02
40 15 897	02	169	1-J02
40 15 947	02	053	1-E06
40 15 947	02	055	1-E08
40 15 962	02	055	1-E08
40 15 988	02	059	1-E12
40 16 028	02	119	1-G24
40 16 036	02	119	1-G24
40 16 101	02	119	1-G24
40 16 192	08A	019	5-A20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 16 820	02	063	1-E16
40 16 861	02	049	1-E02
40 16 861	02	053	1-E06
40 16 861	02	055	1-E08
40 17 299	03A	017	2-A18
40 17 455	02	061	1-E14
40 17 596	09	009	7-A10
40 17 646	02	061	1-E14
40 17 786	02	081	1-F10
40 17 786	02	083	1-F12
40 17 844	02	059	1-E12
40 18 172	02	161	1-I18
40 18 263	02	161	1-I18
40 18 271	02	161	1-I18
40 18 289	02	161	1-I18
40 18 297	02	161	1-I18
40 18 313	02	161	1-I18
40 18 412	02	061	1-E14
40 18 586	02	081	1-F10
40 18 693	09	007	7-A08
40 18 750	09	007	7-A08
40 18 792	09	009	7-A10
40 18 867	02	121	1-H02
40 18 867	02	123	1-H04
40 18 867	02	125	1-H06
40 18 875	02	127	1-H08
40 18 875	02	129	1-H10
40 18 875	02	131	1-H12
40 19 162	09	007	7-A08
40 19 253	02	109	1-G14
40 19 501	02	057	1-E10
40 19 519	02	057	1-E10
40 19 535	02	127	1-H08
40 19 535	02	129	1-H10
40 19 998	02	175	1-J08
40 20 509	02	061	1-E14
40 20 566	02	063	1-E16
40 20 673	02	063	1-E16
40 20 749	02	123	1-H04
40 20 798	02	121	1-H02
40 20 798	02	123	1-H04
40 20 806	02	049	1-E02
40 20 822	02	165	1-I22
40 20 848	02	175	1-J08
40 20 996	02	059	1-E12
40 21 002	02	059	1-E12
40 21 010	02	059	1-E12
40 21 473	02	165	1-I22
40 21 523	03A	191	2-H24
40 22 141	09	013	7-A14
40 22 224	02	169	1-J02
40 22 398	02	143	1-H24
40 22 406	02	143	1-H24
40 22 471	03A	191	2-H24
40 22 505	02	121	1-H02
40 22 505	02	123	1-H04
40 22 505	02	125	1-H06
40 22 505	02	127	1-H08
40 22 505	02	129	1-H10
40 22 505	02	131	1-H12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 22 588	02	123	1-H04
40 22 588	02	129	1-H10
40 22 596	02	123	1-H04
40 22 596	02	125	1-H06
40 22 596	02	129	1-H10
40 22 596	02	131	1-H12
40 22 604	02	121	1-H02
40 22 604	02	123	1-H04
40 22 604	02	127	1-H08
40 22 604	02	129	1-H10
40 22 653	03A	119	2-E24
40 22 737	02	161	1-I18
40 22 927	02	059	1-E12
40 22 950	02	059	1-E12
40 23 115	02	079	1-F08
40 23 149	03A	021	2-A22
40 23 222	02	065	1-E18
40 23 230	02	065	1-E18
40 23 297	02	119	1-G24
40 23 305	09	007	7-A08
40 23 313	09	007	7-A08
40 23 321	09	007	7-A08
40 23 339	09	007	7-A08
40 23 362	02	059	1-E12
40 23 636	09	013	7-A14
40 23 644	09	013	7-A14
40 23 651	09	013	7-A14
40 23 701	02	119	1-G24
40 23 834	02	049	1-E02
40 23 875	02	16[illegible]	1-I22
40 24 253	02	123	1-H04
40 24 253	02	129	1-H10
40 24 279	02	123	1-H04
40 24 279	02	129	1-H10
40 24 295	02	123	1-H04
40 24 295	02	129	1-H10
40 24 303	02	123	1-H04
40 24 303	02	129	1-H10
40 24 485	02	081	1-F10
40 24 485	02	083	1-F12
40 24 600	02	143	1-H24
40 25 086	04	043	3-I20
40 25 094	04	063	3-J16
40 25 136	04	067	3-J20
40 25 342	04	059	3-J1[illegible]
40 25 359	04	059	3-J12
40 25 383	04	055	3-J08
40 25 409	04	055	3-J08
40 25 672	04	039	3-I16
40 25 680	04	039	3-I16
40 25 847	04	049	3-J02
40 25 854	04	049	3-J02
40 25 862	04	049	3-J02
40 25 870	04	049	3-J02
40 25 888	04	047	3-I24
40 25 896	04	047	3-I24
40 25 904	04	047	3-I24
40 25 912	04	047	3-I24
40 25 920	04	047	3-I24
40 25 938	04	047	3-I24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 25 946	04	047	3-I24
40 25 953	04	047	3-I24
40 25 961	04	047	3-I24
40 25 979	04	047	3-I24
40 26 142	08C	015	6-K16
40 26 209	04	049	3-J02
40 26 365	04	069	3-J22
40 26 407	04	047	3-I24
40 26 423	04	055	3-J08
40 26 431	04	067	3-J20
40 26 449	04	043	3-I20
40 26 639	04	047	3-I24
40 26 688	04	065	3-J18
40 26 696	04	065	3-J18
40 26 704	04	065	3-J18
40 26 753	04	043	3-I20
40 26 761	04	061	3-J14
40 26 829	04	065	3-J18
40 26 860	04	049	3-J02
40 26 902	04	043	3-I20
40 26 936	04	053	3-J06
40 26 936	04	083	3-K12
40 26 977	04	027	3-I04
40 27 009	04	055	3-J08
40 27 058	04	055	3-J08
40 27 231	04	037	3-I14
40 27 249	04	037	3-I14
40 27 488	02	133	1-H14
40 27 488	02	143	1-H24
40 27 520	02	009	1-C10
40 27 686	06	027	4-D04
40 27 694	06	027	4-D04
40 27 751	04	007	3-H08
40 27 769	04	007	3-H08
40 27 785	02	135	1-H16
40 27 835	04	033	3-I10
40 27 843	04	033	3-I10
40 27 850	04	033	3-I10
40 27 868	04	033	3-I10
40 27 876	04	033	3-I10
40 27 892	04	033	3-I10
40 27 918	04	033	3-I10
40 27 934	04	033	3-I10
40 27 942	04	033	3-I10
40 27 959	04	033	3-I10
40 28 049	06	027	4-D04
40 28 064	06	027	4-D04
40 28 080	06	029	4-D06
40 28 197	06	029	4-D06
40 28 205	06	029	4-D06
40 28 221	04	007	3-H08
40 28 239	04	069	3-J22
40 28 569	02	147	1-I04
40 28 593	02	135	1-H16
40 28 619	02	137	1-H18
40 28 635	02	137	1-H18
40 28 643	02	135	1-H16
40 28 650	02	137	1-H18
40 28 742	04	009	3-H10
40 28 767	02	143	1-H24

7-B04 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 28 767	08C	037	6-L14
40 28 775	02	009	1-C10
40 28 791	04	009	3-H10
40 28 858	02	151	1-I08
40 28 858	02	175	1-J08
40 28 866	02	151	1-I08
40 28 866	02	177	1-J10
40 28 874	02	151	1-I08
40 28 874	02	175	1-J08
40 28 882	02	151	1-I08
40 28 882	02	177	1-J10
40 28 890	02	151	1-I08
40 28 890	02	175	1-J08
40 28 890	02	177	1-J10
40 29 195	03A	011	2-A12
40 29 195	03A	013	2-A14
40 29 195	03A	015	2-A16
40 29 203	03A	011	2-A12
40 29 203	03A	015	2-A16
40 29 203	08C	035	6-L12
40 29 286	02	149	1-I06
40 29 294	02	149	1-I06
40 29 302	02	149	1-I06
40 29 310	02	149	1-I06
40 29 310	02	151	1-I08
40 29 328	02	149	1-I06
40 29 328	02	151	1-I08
40 29 336	02	149	1-I06
40 29 336	02	151	1-I08
40 29 344	02	149	1-I06
40 29 344	02	151	1-I08
40 29 369	04	007	3-H08
40 29 575	04	031	3-I08
40 29 575	04	033	3-I10
40 29 609	06	027	4-D04
40 29 625	02	145	1-I02
40 29 625	02	147	1-I04
40 29 799	06	027	4-D04
40 29 864	06	027	4-D04
40 29 930	06	027	4-D04
40 29 989	06	027	4-D04
40 29 989	06	029	4-D06
40 30 003	08B	007	6-A08
40 30 201	08B	013	6-A14
40 30 219	08B	013	6-A14
40 30 292	08B	021	6-A22
40 30 342	08B	207	6-I16
40 31 563	08B	163	6-G20
40 31 563	08B	177	6-H10
40 31 563	08B	185	6-H18
40 31 563	08B	189	6-H22
40 31 563	08B	217	6-J02
40 31 696	08B	191	6-H24
40 32 017	08B	005	6-A06
40 32 041	08B	007	6-A08
40 32 058	08B	007	6-A08
40 32 066	08B	007	6-A08
40 32 074	08B	007	6-A08
40 32 090	08B	193	6-I02
40 32 108	08B	193	6-I02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 32 132	03A	103	2-E08
40 32 181	08B	009	6-A10
40 32 439	08B	209	6-I18
40 32 454	08B	209	6-I18
40 32 470	08B	209	6-I18
40 32 488	08B	209	6-I18
40 32 496	08B	209	6-I18
40 32 504	08B	209	6-I18
40 32 538	08B	209	6-I18
40 32 546	08B	209	6-I18
40 32 553	08B	209	6-I18
40 32 561	08B	209	6-I18
40 32 579	08B	209	6-I18
40 32 603	08B	209	6-I18
40 32 611	08B	213	6-I22
40 32 629	08B	213	6-I22
40 32 637	08B	213	6-I22
40 32 645	08B	213	6-I22
40 32 652	08B	213	6-I22
40 32 660	08B	213	6-I22
40 32 934	08B	159	6-G16
40 32 934	08B	173	6-H06
40 33 486	08B	173	6-H06
40 33 783	08B	163	6-G20
40 33 791	08B	163	6-G20
40 33 809	08B	163	6-G20
40 33 817	08B	163	6-G20
40 33 833	08B	163	6-G20
40 33 841	08B	163	6-G20
40 33 858	08B	163	6-G20
40 33 866	08B	163	6-G20
40 33 882	08B	163	6-G20
40 33 890	08B	163	6-G20
40 33 908	08B	163	6-G20
40 33 916	08B	163	6-G20
40 33 932	08B	163	6-G20
40 33 940	08B	163	6-G20
40 33 957	08B	163	6-G20
40 33 965	08B	163	6-G20
40 34 013	08B	131	6-F12
40 34 039	08B	131	6-F12
40 34 047	08B	169	6-H02
40 34 047	08B	217	6-J02
40 34 05[illegible]	08B	169	6-H02
40 34 054	08B	217	6-J02
40 34 369	08B	207	6-I16
40 35 093	08B	007	6-A08
40 35 614	08B	153	6-G10
40 35 622	08B	153	6-G10
40 35 747	08B	189	6-H22
40 36 133	08B	185	6-H18
40 36 133	08B	189	6-H22
40 36 299	08B	173	6-H06
40 36 760	08B	025	6-B02
40 36 786	08B	019	6-A20
40 36 794	08B	019	6-A20
40 36 810	08B	019	6-A20
40 36 893	08B	021	6-A22
40 36 901	08B	021	6-A22
40 36 919	08B	021	6-A22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 37 222	08B	005	6-A06
40 37 248	08B	005	6-A06
40 37 255	08B	005	6-A06
40 37 263	08B	005	6-A06
40 37 313	08B	005	6-A06
40 37 529	08B	189	6-H22
40 37 537	08B	189	6-H22
40 37 701	03A	069	2-C22
40 37 735	08A	057	5-C10
40 37 735	08A	059	5-C12
40 38 204	08B	031	6-B08
40 38 212	08B	031	6-B08
40 38 238	08B	033	6-B10
40 38 253	08B	027	6-B04
40 38 261	08B	027	6-B04
40 38 279	08B	029	6-B06
40 38 287	08B	029	6-B06
40 38 303	08B	031	6-B08
40 38 311	08B	031	6-B08
40 38 329	08B	031	6-B08
40 38 840	08B	031	6-B08
40 38 840	08B	045	6-B22
40 38 840	08B	061	6-C14
40 38 840	08B	073	6-D02
40 38 857	08B	031	6-B08
40 38 857	08B	045	6-B22
40 38 857	08B	061	6-C14
40 38 857	08B	073	6-D02
40 38 865	08B	031	6-B08
40 38 865	08B	045	6-B22
40 38 873	08B	031	6-B08
40 38 873	08B	045	6-B22
40 38 881	08B	031	6-B08
40 38 881	08B	045	6-B22
40 38 881	08B	061	6-C14
40 38 881	08B	073	6-D02
40 39 368	08B	031	6-B08
40 39 368	08B	045	6-B22
40 39 368	08B	061	6-C14
40 39 368	08B	073	6-D02
40 39 376	08B	031	6-B08
40 39 376	08B	045	6-B22
40 39 376	08B	061	6-C14
40 39 376	08B	073	6-D02
40 41 083	08B	013	6-A14
40 41 133	08B	007	6-A08
40 41 141	08B	007	6-A08
40 41 158	08B	007	6-A08
40 41 166	08B	007	6-A08
40 41 174	08B	007	6-A08
40 41 182	08B	007	6-A08
40 41 190	08B	007	6-A08
40 41 208	08B	007	6-A08
40 41 257	08B	007	6-A08
40 41 265	08B	007	6-A08
40 41 323	08B	007	6-A08
40 41 331	08B	007	6-A08
40 41 349	08B	007	6-A08
40 41 356	08B	007	6-A08
40 41 703	08B	023	6-A24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 41 711	08B	023	6-A24
40 41 729	08B	023	6-A24
40 41 935	08B	019	6-A20
40 41 943	08B	019	6-A20
40 42 933	08B	137	6-F18
40 42 941	08B	137	6-F18
40 42 958	08B	137	6-F18
40 42 966	08B	137	6-F18
40 42 974	08B	211	6-I20
40 42 974	08B	217	6-J02
40 43 394	08B	159	6-G16
40 43 436	08B	023	6-A24
40 43 436	08B	025	6-B02
40 43 444	08B	023	6-A24
40 43 469	08B	201	6-I10
40 43 477	08B	201	6-I10
40 43 485	08B	201	6-I10
40 43 576	08B	205	6-I14
40 43 626	08B	205	6-I14
40 43 642	08B	201	6-I10
40 43 659	08B	203	6-I12
40 43 667	08B	203	6-I12
40 43 899	08B	205	6-I14
40 43 949	08B	201	6-I10
40 44 020	08B	203	6-I12
40 44 038	08B	203	6-I12
40 44 079	08B	205	6-I14
40 44 129	08B	201	6-I10
40 44 152	08B	203	6-I12
40 44 160	08B	203	6-I12
40 45 407	08B	023	6-A24
40 45 696	08B	177	6-H10
40 45 704	08B	173	6-H06
40 46 256	08B	033	6-B10
40 46 405	08B	019	6-A20
40 46 413	08B	019	6-A20
40 47 387	08B	033	6-B10
40 47 395	08B	033	6-B10
40 47 411	08B	033	6-B10
40 47 411	08B	045	6-B22
40 47 411	08B	061	6-C14
40 47 411	08B	073	6-D02
40 47 429	08B	033	6-B10
40 47 429	08B	045	6-B22
40 47 429	08B	061	6-C14
40 47 429	08B	073	6-D02
40 47 437	08B	033	6-B10
40 47 437	08B	045	6-B22
40 47 445	08B	033	6-B10
40 47 445	08B	045	6-B22
40 47 452	08B	033	6-B10
40 47 452	08B	045	6-B22
40 47 452	08B	047	6-B24
40 47 452	08B	061	6-C14
40 47 452	08B	073	6-D02
40 47 452	08B	075	6-D04
40 47 916	08B	033	6-B10
40 47 916	08B	045	6-[illegible]
40 47 916	08B	061	6-C14
40 47 916	08B	073	6-D02

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 47 924	08B	033	6-B10
40 47 924	08B	045	6-B22
40 47 924	08B	061	6-C14
40 47 924	08B	073	6-D02
40 47 932	08B	033	6-B10
40 47 932	08B	039	6-B16
40 47 932	08B	041	6-B18
40 47 932	08B	045	6-B22
40 47 932	08B	047	6-B24
40 47 932	08B	057	6-C10
40 47 932	08B	061	6-C14
40 47 932	08B	069	6-C22
40 47 932	08B	073	6-D02
40 47 932	08B	075	6-D04
40 48 260	08B	179	6-H12
40 48 260	08B	187	6-H20
40 48 278	08B	179	6-H12
40 48 278	08B	187	6-H20
40 48 286	08B	159	6-G16
40 48 294	08B	159	6-G16
40 48 401	08A	103	5-E08
40 48 401	08B	137	6-F18
40 48 740	08B	155	6-G12
40 48 757	08B	155	6-G12
40 48 765	08B	157	6-G14
40 48 773	08B	155	6-G12
40 48 948	08B	185	6-H18
40 48 948	08B	189	6-H22
40 48 955	08B	197	6-I06
40 48 971	08B	197	6-I06
40 48 989	08B	197	6-I06
40 49 250	08B	153	6-G10
40 49 268	08B	153	6-G10
40 49 425	08B	031	6-B08
40 49 433	08B	031	6-B08
40 49 516	08B	031	6-B08
40 49 516	08B	043	6-B20
40 49 516	08B	059	6-C12
40 49 516	08B	071	6-C24
40 49 524	08B	031	6-B08
40 49 524	08B	043	6-B20
40 49 524	08B	059	6-C12
40 49 524	08B	071	6-C24
40 49 532	08B	031	6-B08
40 49 532	08B	043	6-B20
40 49 540	08B	031	6-B08
40 49 540	08B	043	6-B20
40 50 399	08B	027	6-B04
40 50 399	08B	035	6-B12
40 50 407	08B	027	6-B04
40 50 407	08B	037	6-B14
40 50 407	08B	051	6-C04
40 50 415	08B	029	6-B06
40 50 415	08B	037	6-B14
40 50 415	08B	053	6-C06
40 50 423	08B	029	6-B06
40 50 423	08B	039	6-B16
40 50 423	08B	055	6-C08
40 50 456	08B	027	6-B04
40 50 456	08B	035	6-B12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 50 464	08B	027	6-B04
40 50 464	08B	035	6-B12
40 50 464	08B	051	6-C04
40 50 464	08B	063	6-C16
40 50 472	08B	029	6-B06
40 50 472	08B	037	6-B14
40 50 472	08B	053	6-C06
40 50 472	08B	065	6-C18
40 50 480	08B	029	6-B06
40 50 480	08B	039	6-B16
40 50 480	08B	055	6-C08
40 50 480	08B	067	6-C20
40 50 506	08B	031	6-B08
40 50 506	08B	043	6-B20
40 50 514	08B	031	6-B08
40 50 514	08B	043	6-B20
40 50 514	08B	059	6-C12
40 50 514	08B	071	6-C24
40 50 530	08B	033	6-B10
40 50 530	08B	045	6-B22
40 50 530	08B	061	6-C14
40 50 530	08B	073	6-D02
40 50 548	08B	031	6-B08
40 50 548	08B	045	6-B22
40 50 548	08B	061	6-C14
40 50 548	08B	073	6-D02
40 50 811	08B	083	6-D12
40 50 811	08B	089	6-D18
40 50 811	08B	095	6-D24
40 50 811	08B	101	6-E06
40 50 886	08B	019	6-A20
40 51 355	08B	027	6-B04
40 51 355	08B	031	6-B08
40 51 355	08B	035	6-B12
40 51 355	08B	043	6-B20
40 51 363	08B	027	6-B04
40 51 363	08B	031	6-B08
40 51 363	08B	035	6-B12
40 51 363	08B	037	6-B14
40 51 363	08B	043	6-B20
40 51 363	08B	051	6-C04
40 51 363	08B	059	6-C12
40 51 363	08B	063	6-C16
40 51 363	08B	065	6-C18
40 51 363	08B	071	6-C24
40 51 371	08B	029	6-B06
40 51 371	08B	031	6-B08
40 51 371	08B	037	6-B14
40 51 371	08B	045	6-B22
40 51 371	08B	053	6-C06
40 51 371	08B	061	6-C14
40 51 371	08B	065	6-C18
40 51 371	08B	067	6-C20
40 51 371	08B	073	6-D02
40 51 389	08B	029	6-B06
40 51 389	08B	033	6-B10
40 51 389	08B	039	6-B16
40 51 389	08B	045	6-B22
40 51 389	08B	055	6-C08
40 51 389	08B	061	6-C14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 51 389	08B	067	6-C20
40 51 389	08B	073	6-D02
40 51 504	08B	021	6-A22
40 51 652	08B	131	6-F12
40 51 660	08B	131	6-F12
40 51 678	08B	131	6-F12
40 51 736	08B	005	6-A06
40 51 744	08B	005	6-A06
40 51 751	08B	005	6-A06
40 51 769	08B	005	6-A06
40 51 793	08B	005	6-A06
40 51 843	08B	135	6-F16
40 51 850	08B	135	6-F16
40 51 876	08B	135	6-F16
40 51 884	08B	135	6-F16
40 51 959	08B	135	6-F16
40 51 967	08B	135	6-F16
40 51 975	08B	135	6-F16
40 51 983	08B	135	6-F16
40 52 338	08B	135	6-F16
40 52 353	08B	135	6-F16
40 52 361	08B	135	6-F16
40 52 387	08B	135	6-F16
40 52 395	08B	135	6-F16
40 52 411	08B	135	6-F16
40 52 429	08B	135	6-F16
40 52 445	08B	135	6-F16
40 52 452	08B	135	6-F16
40 52 478	08B	135	6-F16
40 52 486	08B	135	6-F16
40 52 502	08B	135	6-F16
40 52 510	08B	135	6-F16
40 52 536	08B	135	6-F16
40 52 544	08B	135	6-F16
40 52 569	08B	135	6-F16
40 53 492	08B	033	6-B10
40 53 492	08B	045	6-B22
40 53 492	08B	047	6-B24
40 53 492	08B	061	6-C14
40 53 492	08B	073	6-D02
40 53 492	08B	075	6-D04
40 53 716	08B	021	6-A22
40 53 732	08B	021	6-A22
40 53 773	08B	021	6-A22
40 53 773	08B	023	6-A24
40 54 078	08B	177	6-H10
40 54 086	08B	177	6-H10
40 54 698	08B	195	6-I04
40 54 706	08B	195	6-I04
40 54 714	08B	195	6-I04
40 54 722	08B	195	6-I04
40 54 912	08A	039	5-B16
40 54 920	08A	039	5-B16
40 54 979	08B	131	6-F12
40 55 133	08B	185	6-H18
40 55 133	08B	189	6-H22
40 56 016	08B	109	6-E14
40 56 016	08B	123	6-F04
40 56 024	08B	109	6-E14
40 56 024	08B	123	6-F04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 56 032	08B	109	6-E14
40 56 032	08B	125	6-F06
40 56 040	08B	109	6-E14
40 56 040	08B	125	6-F06
40 56 057	08B	111	6-E16
40 56 057	08B	125	6-F06
40 56 065	08B	111	6-E16
40 56 065	08B	125	6-F06
40 56 099	08B	103	6-E08
40 56 099	08B	115	6-E20
40 56 107	08B	103	6-E08
40 56 107	08B	115	6-E20
40 56 115	08B	103	6-E08
40 56 115	08B	117	6-E22
40 56 123	08B	103	6-E08
40 56 123	08B	117	6-E22
40 56 131	08B	105	6-E10
40 56 131	08B	117	6-E22
40 56 149	08B	105	6-E10
40 56 149	08B	117	6-E22
40 56 420	08B	103	6-E08
40 56 420	08B	115	6-E20
40 56 438	08B	103	6-E08
40 56 438	08B	115	6-E20
40 56 446	08B	103	6-E08
40 56 446	08B	115	6-E20
40 56 453	08B	103	6-E08
40 56 453	08B	115	6-E20
40 56 537	08B	103	6-E08
40 56 537	08B	117	6-E22
40 56 552	08B	103	6-E08
40 56 552	08B	117	6-E22
40 56 560	08B	103	6-E08
40 56 560	08B	117	6-E22
40 56 651	08B	103	6-E08
40 56 651	08B	117	6-E22
40 56 800	08B	105	6-E10
40 56 800	08B	117	6-E22
40 56 818	08B	105	6-E10
40 56 818	08B	117	6-E22
40 56 826	08B	105	6-E10
40 56 826	08B	117	6-E22
40 56 834	08B	105	6-E10
40 56 834	08B	117	6-E22
40 57 188	08B	109	6-E14
40 57 188	08B	123	6-F04
40 57 196	08B	109	6-E14
40 57 196	08B	123	6-F04
40 57 204	08B	109	6-E14
40 57 204	08B	123	6-F04
40 57 212	08B	109	6-E14
40 57 212	08B	123	6-F04
40 57 386	08B	109	6-E14
40 57 386	08B	125	6-F06
40 57 394	08B	109	6-E14
40 57 394	08B	125	6-F06
40 57 402	08B	109	6-E14
40 57 402	08B	125	6-F06
40 57 410	08B	109	6-E14
40 57 410	08B	125	6-F06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 57 501	08B	111	6-E16
40 57 501	08B	125	6-F06
40 57 519	08B	111	6-E16
40 57 519	08B	125	6-F06
40 57 527	08B	111	6-E16
40 57 527	08B	125	6-F06
40 57 535	08B	111	6-E16
40 57 535	08B	125	6-F06
40 58 798	08B	079	6-D08
40 58 798	08B	091	6-D20
40 58 806	08B	079	6-D08
40 58 806	08B	091	6-D20
40 58 814	08B	079	6-D08
40 58 822	08B	079	6-D08
40 58 830	08B	079	6-D08
40 58 830	08B	091	6-D20
40 58 848	08B	079	6-D08
40 58 848	08B	091	6-D20
40 58 855	08B	079	6-D08
40 58 863	08B	079	6-D08
40 58 871	08B	079	6-D08
40 58 871	08B	091	6-D20
40 58 889	08B	079	6-D08
40 58 889	08B	091	6-D20
40 58 897	08B	079	6-D08
40 58 905	08B	079	6-D08
40 58 913	08B	081	6-D10
40 58 913	08B	091	6-D20
40 58 921	08B	081	6-D10
40 58 921	08B	091	6-D20
40 58 939	08B	081	6-D10
40 58 947	08B	081	6-D10
40 58 954	08B	079	6-D08
40 58 954	08B	091	6-D20
40 58 962	08B	079	6-D08
40 58 962	08B	091	6-D20
40 58 970	08B	079	6-D08
40 58 970	08B	091	6-D20
40 58 988	08B	079	6-D08
40 58 988	08B	091	6-D20
40 58 996	08B	079	6-D08
40 58 996	08B	091	6-D20
40 59 002	08B	079	6-D08
40 59 002	08B	091	6-D20
40 59 010	08B	081	6-D10
40 59 010	08B	091	6-D20
40 59 028	08B	081	6-D10
40 59 028	08B	091	6-D20
40 59 127	08B	079	6-D08
40 59 127	08B	091	6-D20
40 59 143	08B	079	6-D08
40 59 143	08B	091	6-D20
40 59 168	08B	079	6-D08
40 59 168	08B	091	6-D20
40 59 184	08B	081	6-D10
40 59 184	08B	091	6-D20
40 59 200	08B	079	6-D08
40 59 200	08B	091	6-D20
40 59 226	08B	079	6-D08
40 59 226	08B	091	6-D20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 59 242	08B	079	6-D08
40 59 242	08B	091	6-D20
40 59 267	08B	081	6-D10
40 59 267	08B	091	6-D20
40 59 275	08B	079	6-D08
40 59 283	08B	079	6-D08
40 59 291	08B	079	6-D08
40 59 309	08B	081	6-D10
40 59 317	08B	079	6-D08
40 59 325	08B	079	6-D08
40 59 333	08B	079	6-D08
40 59 341	08B	081	6-D10
40 59 432	08B	085	6-D14
40 59 432	08B	097	6-E02
40 59 440	08B	085	6-D14
40 59 440	08B	097	6-E02
40 59 457	08B	085	6-D14
40 59 465	08B	085	6-D14
40 59 473	08B	085	6-D14
40 59 473	08B	097	6-E02
40 59 481	08B	085	6-D14
40 59 481	08B	097	6-E02
40 59 499	08B	085	6-D14
40 59 507	08B	085	6-D14
40 59 515	08B	085	6-D14
40 59 515	08B	097	6-E02
40 59 523	08B	085	6-D14
40 59 523	08B	097	6-E02
40 59 531	08B	085	6-D14
40 59 549	08B	085	6-D14
40 59 556	08B	087	6-D16
40 59 556	08B	097	6-E02
40 59 564	08B	087	6-D16
40 59 564	08B	097	6-E02
40 59 572	08B	087	6-D16
40 59 580	08B	087	6-D16
40 59 598	08B	085	6-D14
40 59 598	08B	097	6-E02
40 59 606	08B	085	6-D14
40 59 606	08B	097	6-E02
40 59 614	08B	085	6-D14
40 59 614	08B	097	6-E02
40 59 622	08B	085	6-D14
40 59 622	08B	097	6-E02
40 59 630	08B	085	6-D14
40 59 630	08B	097	6-E02
40 59 648	08B	085	6-D14
40 59 648	08B	097	6-E02
40 59 655	08B	087	6-D16
40 59 655	08B	097	6-E02
40 59 663	08B	087	6-D16
40 59 663	08B	097	6-E02
40 59 671	08B	169	6-H02
40 59 671	08B	217	6-J02
40 60 083	02	137	1-H18
40 60 1[illegible]8	03A	189	2-H22
40 60 364	03A	039	2-B16
40 60 398	03A	069	2-C22
40 60 406	03A	069	2-C22
40 60 489	03A	075	2-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 60 497	03A	075	2-D04
40 60 505	03A	075	2-D04
40 60 513	03A	075	2-D04
40 60 711	03A	119	2-E24
40 60 844	03A	183	2-H16
40 60 851	03A	191	2-H24
40 60 869	03B	017	3-A18
40 60 869	03B	045	3-B22
40 60 869	03B	069	3-C22
40 60 869	03B	093	3-D22
40 60 877	03B	027	3-B04
40 60 877	03B	055	3-C08
40 60 885	03B	027	3-B04
40 60 885	03B	055	3-C08
40 60 893	03B	027	3-B04
40 60 893	03B	055	3-C08
40 60 893	03B	079	3-D08
40 60 893	03B	103	3-E08
40 61 255	03A	095	2-D24
40 61 354	03A	177	2-H10
40 61 362	03A	099	2-E04
40 61 388	03A	189	2-H22
40 61 446	03B	031	3-B08
40 61 446	03B	055	3-C08
40 61 461	03B	081	3-D10
40 61 479	03B	021	3-A22
40 61 479	03B	047	3-B24
40 61 479	03B	075	3-D04
40 61 495	03B	017	3-A18
40 61 495	03B	045	3-B22
40 61 503	03B	017	3-A18
40 61 503	03B	045	3-B22
40 61 503	03B	093	3-D22
40 61 578	03A	021	2-A22
40 61 578	03A	027	2-B04
40 61 578	03A	031	2-B08
40 61 586	03B	027	3-B04
40 61 586	03B	031	3-B08
40 61 586	03B	055	3-C08
40 61 586	03B	063	3-C16
40 61 586	03B	069	3-C22
40 61 586	03B	071	3-C24
40 61 586	03B	077	3-D06
40 61 586	03B	079	3-D08
40 61 586	03B	081	3-D10
40 61 586	03B	087	3-D16
40 61 586	03B	089	3-D18
40 61 586	03B	095	3-D24
40 61 586	03B	097	3-E02
40 61 586	03B	099	3-E04
40 61 586	03B	103	3-E08
40 61 586	03B	105	3-E10
40 61 586	03B	109	3-E14
40 61 586	03B	121	3-F02
40 61 586	03B	131	3-F12
40 61 586	03B	141	3-F22
40 61 685	03A	185	2-H18
40 61 743	03A	187	2-H20
40 61 750	03A	187	2-H20
40 61 768	03A	187	2-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 61 883	03A	095	2-D24
40 61 891	03A	009	2-A10
40 61 917	03A	097	2-E02
40 61 958	03B	079	3-D08
40 61 958	03B	103	3-E08
40 61 966	03A	021	2-A22
40 61 966	03A	027	2-B04
40 61 966	03A	031	2-B08
40 61 966	03B	079	3-D08
40 61 966	03B	103	3-E08
40 61 974	03B	079	3-D08
40 61 974	03B	103	3-E08
40 61 982	03A	187	2-H20
40 61 990	03A	183	2-H16
40 62 063	03A	119	2-E24
40 62 162	03A	207	2-I16
40 62 170	03A	207	2-I16
40 62 188	03A	207	2-I16
40 62 196	03A	207	2-I16
40 62 204	03A	207	2-I16
40 62 212	03A	207	2-I16
40 62 220	03A	207	2-I16
40 62 220	03A	211	2-I20
40 62 238	03A	207	2-I16
40 62 238	03A	211	2-I20
40 62 295	03A	183	2-H16
40 62 303	03A	183	2-H16
40 62 311	03A	183	2-H16
40 62 329	02	123	1-H04
40 62 329	02	129	1-H10
40 62 329	03A	183	2-H16
40 62 329	03A	185	2-H18
40 62 329	08C	029	6-L06
40 62 337	03A	183	2-H16
40 62 352	03A	183	2-H16
40 62 360	03A	183	2-H16
40 62 626	03A	207	2-I16
40 62 634	03A	207	2-I16
40 62 642	03A	207	2-I16
40 62 659	03A	207	2-I16
40 62 667	03A	207	2-I16
40 62 675	03A	207	2-I16
40 62 683	03A	207	2-I16
40 62 691	03A	207	2-I16
40 62 709	03A	207	2-I16
40 62 782	06	007	4-C08
40 62 972	03A	101	2-E06
40 62 972	04	071	3-J24
40 62 980	03A	101	2-E06
40 62 980	04	071	3-J24
40 63 244	03A	187	2-H20
40 63 335	03A	107	2-E12
40 63 343	03A	107	2-E12
40 63 376	03B	027	3-B04
40 63 376	03B	055	3-C08
40 63 376	03B	113	3-E16
40 63 376	03B	123	3-F04
40 63 384	03A	099	2-E04
40 63 400	03A	113	2-E18
40 63 418	03A	113	2-E18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 63 426	03A	113	2-E18
40 63 434	03A	113	2-E18
40 63 459	02	137	1-H18
40 63 475	03A	011	2-A12
40 63 475	03A	015	2-A16
40 63 574	03A	075	2-D04
40 63 681	03A	177	2-H10
40 63 715	03A	111	2-E16
40 63 756	03A	183	2-H16
40 63 798	03A	075	2-D04
40 63 806	03A	075	2-D04
40 63 814	03A	075	2-D04
40 63 855	08B	157	6-G14
40 63 855	08B	169	6-H02
40 63 871	08B	157	6-G14
40 63 871	08B	169	6-H02
40 63 897	03A	183	2-H16
40 63 970	03B	017	3-A18
40 63 970	03B	031	3-B08
40 63 970	03B	045	3-B22
40 63 970	03B	055	3-C08
40 63 970	03B	069	3-C22
40 63 970	03B	081	3-D10
40 63 970	03B	093	3-D22
40 63 970	03B	105	3-E10
40 63 970	03B	113	3-E18
40 63 970	03B	123	3-F04
40 63 970	03B	133	3-F14
40 63 970	03B	143	3-F24
40 64 010	03A	123	2-F04
40 64 051	03A	123	2-F04
40 64 093	03A	123	2-F04
40 64 135	03A	123	2-F04
40 64 176	03A	123	2-F04
40 64 192	03A	127	2-F08
40 64 218	03A	123	2-F04
40 64 234	03A	127	2-F08
40 64 259	03A	123	2-F04
40 64 275	03A	123	2-F04
40 64 291	03A	123	2-F04
40 64 317	03A	123	2-F04
40 64 333	03A	127	2-F08
40 64 358	03A	127	2-F08
40 64 374	03A	123	2-F04
40 64 416	03A	127	2-F08
40 64 531	03A	127	2-F08
40 64 572	03A	127	2-F08
40 64 713	03A	123	2-F04
40 64 754	03A	123	2-F04
40 64 796	03A	123	2-F04
40 64 812	03A	123	2-F04
40 64 879	03A	123	2-F04
40 64 895	03A	123	2-F04
40 64 911	03A	123	2-F04
40 64 952	03A	123	2-F04
40 65 017	03A	123	2-F04
40 65 074	03A	123	2-F04
40 65 116	03A	123	2-F04
40 65 132	03A	123	2-F04
40 65 397	03A	107	2-E12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 65 405	03A	107	2-E12
40 66 809	03A	129	2-F10
40 66 817	03A	129	2-F10
40 66 825	03A	129	2-F10
40 66 866	03A	133	2-F14
40 66 866	03A	145	2-G02
40 66 874	03A	133	2-F14
40 66 890	03A	133	2-F14
40 66 908	03A	119	2-E24
40 66 916	03A	133	2-F14
40 66 916	03A	145	2-G02
40 66 916	03A	161	2-G18
40 66 916	03A	175	2-H08
40 66 924	03A	133	2-F14
40 66 924	03A	145	2-G02
40 66 924	03A	161	2-G18
40 66 924	03A	175	2-H08
40 66 932	03A	115	2-E20
40 66 940	03A	115	2-E20
40 66 957	03A	133	2-F14
40 66 957	03A	145	2-G02
40 66 965	03A	133	2-F14
40 66 965	03A	145	2-G02
40 66 973	03A	133	2-F14
40 66 973	03A	145	2-G02
40 66 981	03A	123	2-F04
40 66 981	03A	127	2-F08
40 66 981	03A	135	2-F16
40 66 981	03A	137	2-F18
40 66 981	03A	149	2-G06
40 66 981	03A	155	2-G12
40 66 981	03A	163	2-G20
40 66 981	03A	169	2-H02
40 67 005	03A	123	2-F04
40 67 005	03A	127	2-F08
40 67 005	03A	135	2-F16
40 67 005	03A	137	2-F18
40 67 005	03A	149	2-G06
40 67 005	03A	155	2-G12
40 67 005	03A	163	2-G20
40 67 005	03A	169	2-H02
40 67 013	03A	133	2-F14
40 67 013	03A	145	2-G02
40 67 013	03A	161	2-G18
40 67 013	03A	175	2-H08
40 67 104	03A	131	2-F12
40 67 104	03A	143	2-F24
40 67 104	03A	159	2-G16
40 67 104	08A	157	5-G14
40 67 146	03A	131	2-F12
40 67 146	03A	143	2-F24
40 67 146	03A	159	2-G16
40 67 179	03A	131	2-F12
40 67 179	03A	143	2-F24
40 67 187	03A	131	2-F12
40 67 187	03A	143	2-F24
40 67 195	03A	131	2-F12
40 67 195	03A	143	2-F24
40 67 203	03A	131	2-F12
40 67 203	03A	143	2-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 67 203	03A	159	2-G16
40 67 211	03A	131	2-F12
40 67 211	03A	143	2-F24
40 67 211	03A	159	2-G16
40 67 211	03A	173	2-H06
40 67 468	03A	097	2-E02
40 67 492	03B	031	3-B08
40 67 492	03B	055	3-C08
40 67 534	03A	111	2-E16
40 67 542	03A	111	2-E16
40 67 567	03A	111	2-E16
40 67 575	03A	111	2-E16
40 67 617	03B	027	3-B04
40 67 617	03B	055	3-C08
40 67 617	03B	079	3-D08
40 67 617	03B	103	3-E08
40 67 716	03A	185	2-H18
40 68 078	03A	209	2-I18
40 68 078	03A	213	2-I22
40 68 441	03B	027	3-B04
40 68 4[illegible]	03B	055	3-C08
40 68 82[illegible]	03A	189	2-H22
40 68 862	03A	093	2-D22
40 68 870	03A	093	2-D22
40 68 888	03B	029	3-B06
40 68 920	03A	189	2-H22
40 68 946	03A	107	2-E12
40 68 961	03A	107	2-E12
40 69 258	03A	183	2-H16
40 69 373	03A	093	2-D22
40 69 373	08A	155	5-G12
40 69 415	03A	119	2-E24
40 69 464	09	011	7-A12
40 69 480	09	011	7-A12
40 69 530	03A	009	2-A10
40 69 597	03A	189	2-H22
40 69 704	08B	169	6-H02
40 69 811	03A	183	2-H16
40 69 928	03B	023	3-A24
40 69 928	03B	051	3-C04
40 69 951	03A	133	2-F14
40 69 969	03A	209	2-I18
40 69 977	03A	095	2-D24
40 69 985	03A	199	2-I08
40 69 985	03A	203	2-I12
40 70 017	08C	029	6-L06
40 70 033	08C	029	6-L06
40 70 066	08C	029	6-L06
40 70 074	08C	029	6-L06
40 70 082	08C	029	6-L06
40 70 215	08C	011	6-K12
40 70 223	08C	011	6-K12
40 70 272	08C	011	6-K12
40 70 546	03A	105	2-E10
40 70 561	03A	105	2-E10
40 70 595	03A	105	2-E10
40 70 611	03A	105	2-E10
40 70 686	08C	029	6-L06
40 70 710	08C	029	6-L06
40 70 728	08C	007	6-K08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 70 728	08C	009	6-K10
40 70 736	08C	029	6-L06
40 70 785	08A	019	5-A20
40 70 801	08C	015	6-K16
40 70 819	08C	015	6-K16
40 70 926	08C	015	6-K16
40 70 967	03A	105	2-E10
40 71 007	08C	021	6-K22
40 71 064	08C	029	6-L06
40 71 171	08C	011	6-K12
40 71 189	08C	011	6-K12
40 71 262	08C	027	6-L04
40 71 296	08C	027	6-L04
40 71 387	08C	027	6-L04
40 71 429	08C	015	6-K16
40 71 577	08C	015	6-K16
40 71 684	08C	023	6-K24
40 71 742	08C	005	6-K06
40 71 775	03A	105	2-E10
40 71 791	08C	011	6-K12
40 71 882	08C	019	6-K20
40 71 890	08C	019	6-K20
40 71 908	08C	023	6-K24
40 71 916	08C	023	6-K24
40 71 932	08C	023	6-K24
40 71 940	08C	023	6-K24
40 71 940	08C	033	6-L10
40 71 940	08C	035	6-L12
40 71 957	08C	023	6-K24
40 71 973	08C	019	6-K20
40 71 981	08C	025	6-L02
40 71 999	08C	015	6-K16
40 72 062	08A	031	5-B08
40 72 070	08A	031	5-B08
40 72 088	08A	031	5-B08
40 72 096	08A	031	5-B08
40 72 104	08A	031	5-B08
40 72 120	08A	031	5-B08
40 72 203	08C	007	6-K08
40 72 211	08C	007	6-K08
40 72 237	08C	021	6-K22
40 72 252	08C	029	6-L06
40 72 369	08C	023	6-K24
40 72 393	08C	023	6-K24
40 72 435	08C	015	6-K16
40 72 443	08C	015	6-K16
40 72 450	08C	015	6-K16
40 72 468	08C	015	6-K16
40 72 476	08C	015	6-K16
40 72 484	08C	015	6-K16
40 72 500	08C	027	6-L04
40 72 518	08C	027	6-L04
40 72 757	08C	029	6-L06
40 72 765	08C	029	6-L06
40 72 773	08C	029	6-L06
40 72 807	03A	105	2-E10
40 73 110	08A	019	5-A20
40 73 110	08C	007	6-K08
40 73 35[illegible]	08C	023	6-K24
40 73 37[illegible]	08C	023	6-K24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 73 383	08C	023	6-K24
40 73 391	08C	023	6-K24
40 73 417	08C	023	6-K24
40 73 532	08C	023	6-K24
40 73 615	08C	011	6-K12
40 73 623	08C	011	6-K12
40 73 631	08A	019	5-A20
40 73 649	08C	029	6-L06
40 73 979	08C	025	6-L02
40 74 027	08C	027	6-L04
40 74 316	08C	005	6-K06
40 74 332	08A	019	5-A20
40 74 340	08C	025	6-L02
40 74 340	08C	033	6-L10
40 74 340	08C	035	6-L12
40 74 431	08C	021	6-K22
40 74 431	08C	037	6-L14
40 74 472	08C	023	6-K24
40 74 480	08C	023	6-K24
40 74 498	08C	029	6-L06
40 74 506	08C	029	6-L06
40 74 522	09	011	7-A12
40 74 548	09	011	7-A12
40 74 688	08A	019	5-A20
40 74 696	08A	019	5-A20
40 74 787	08C	019	6-K20
40 74 936	08A	021	5-A22
40 77 004	08B	015	6-A16
40 77 012	08B	015	6-A16
40 77 020	08B	015	6-A16
40 77 038	08B	015	6-A16
40 77 079	08B	009	6-A10
40 77 087	08B	009	6-A10
40 77 111	08B	209	6-I18
40 77 871	08B	211	6-I20
40 77 889	08B	211	6-I20
40 78 416	08B	015	6-A16
40 78 424	08B	015	6-A16
40 78 432	08B	015	6-A16
40 78 440	08B	015	6-A16
40 78 481	08B	015	6-A16
40 78 689	09	013	7-A14
40 78 697	09	013	7-A14
40 79 604	08B	009	6-A10
40 79 679	08B	213	6-I22
40 79 687	08B	213	6-I22
40 79 695	08B	213	6-I22
40 79 703	08B	213	6-I22
40 79 901	08B	013	6-A14
40 79 935	03A	103	2-E08
40 80 156	08B	005	6-A06
40 80 164	08B	005	6-A06
40 80 172	08B	005	6-A06
40 80 180	08B	005	6-A06
40 80 198	08B	005	6-A06
40 80 206	08B	005	6-A06
40 80 214	08B	005	6-A06
40 80 222	08B	005	6-A06
40 80 230	08B	005	6-A06
40 80 248	08B	005	6-A06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 80 859	08B	209	6-I18
40 80 867	08B	209	6-I18
40 80 875	08B	209	6-I18
40 80 883	08B	209	6-I18
40 80 891	08B	209	6-I18
40 80 909	08B	209	6-I18
40 80 917	08B	209	6-I18
40 80 925	08B	209	6-I18
40 81 329	08B	009	6-A10
40 82 699	08B	011	6-A12
40 82 707	08B	011	6-A12
40 82 715	08B	011	6-A12
40 82 731	08B	009	6-A10
40 82 749	08B	005	6-A06
40 82 756	08B	005	6-A06
40 83 028	08B	157	6-G14
40 83 028	08B	169	6-H02
40 83 036	03A	107	2-E12
40 83 044	03A	107	2-E12
40 83 051	03A	107	2-E12
40 83 069	03A	107	2-E12
40 83 119	03A	111	2-E16
40 83 127	03A	111	2-E16
40 83 176	03A	213	2-I22
40 83 184	03A	213	2-I22
40 83 275	03A	113	2-E18
40 83 283	03A	113	2-E18
40 83 291	03A	161	2-G18
40 83 291	03A	175	2-H08
40 83 325	08B	015	6-A16
40 83 341	08B	015	6-A16
40 83 358	08B	015	6-A16
40 83 374	08B	015	6-A16
40 83 432	08B	007	6-A08
40 83 440	08B	007	6-A08
40 83 457	08B	007	6-A08
40 83 804	03A	213	2-I22
40 83 879	03A	095	2-D24
40 84 018	03A	107	2-E12
40 84 026	03A	109	2-E14
40 84 034	03A	109	2-E14
40 84 067	03A	211	2-I20
40 84 075	03A	211	2-I20
40 84 091	03A	211	2-I20
40 84 109	03A	211	2-I20
40 84 125	03A	211	2-I20
40 84 133	03A	211	2-I20
40 84 141	03A	211	2-I20
40 84 158	03A	211	2-I20
40 84 166	03A	211	2-I20
40 84 224	03A	211	2-I20
40 84 232	03A	211	2-I20
40 84 240	03A	211	2-I20
40 84 349	08B	013	6-A14
40 84 380	03A	211	2-I20
40 84 398	08B	011	6-A12
40 84 547	03A	213	2-I22
40 84 547	03A	215	2-I24
40 84 554	03A	093	2-D22
40 84 554	03A	219	2-J04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 84 687	03A	111	2-E16
40 84 695	03A	111	2-E16
40 84 752	03A	213	2-I22
40 84 760	03A	113	2-E18
40 84 778	03A	113	2-E18
40 84 828	03A	207	2-I16
40 84 828	03A	211	2-I20
40 84 844	03A	207	2-I16
40 84 844	03A	211	2-I20
40 85 148	03A	11[illegible]	2-E16
40 85 197	03A	109	2-E14
40 85 213	03A	113	2-E18
40 85 221	03A	113	2-E18
40 85 239	03A	111	2-E16
40 85 262	03A	107	2-E12
40 85 320	08B	015	6-A16
40 85 502	03A	093	2-D22
40 85 502	08A	155	5-G12
40 85 510	03A	093	2-D22
40 85 510	08A	155	5-G12
40 85 528	03A	093	2-D22
40 85 536	03A	093	2-D22
40 85 544	03A	107	2-E12
40 85 577	03A	093	2-D22
40 85 775	03A	213	2-I22
40 85 775	03A	215	2-I24
40 85 783	06	007	4-C08
40 85 825	03A	107	2-E12
40 85 882	08B	013	6-A14
40 85 890	08B	013	6-A14
40 85 908	08B	015	6-A16
40 86 369	03B	011	6-A12
40 86 419	08B	007	6-A08
40 86 468	08B	011	6-A12
40 86 492	03A	101	2-E06
40 86 658	03A	107	2-E12
40 86 682	02	137	1-H18
40 86 682	08C	033	6-L10
40 86 690	02	137	1-H18
40 86 716	02	177	1-J10
40 86 724	02	137	1-H18
40 86 732	03A	107	2-E12
40 87 003	03A	009	2-A10
40 87 029	08B	019	6-A20
40 87 029	08B	023	6-A24
40 87 029	08B	025	6-B02
40 87 029	08B	131	6-F12
40 87 029	08B	191	6-H24
40 87 045	08A	061	5-C14
40 87 045	08A	069	5-C22
40 87 078	02	123	1-H04
40 87 078	02	125	1-H06
40 87 128	02	083	1-F12
40 87 128	03A	101	2-E06
40 87 128	03A	191	2-H24
40 87 151	08A	083	5-D12
40 87 151	08A	087	5-D16
40 87 151	08A	105	5-E10
40 87 649	02	157	1-I14
40 88 001	03A	085	2-D14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 88 068	08A	131	5-F12
40 88 068	08A	133	5-F14
40 88 068	08A	137	5-F18
40 88 068	08A	139	5-F20
40 88 100	08A	135	5-F16
40 88 118	08A	135	5-F16
40 88 209	08A	067	5-C20
40 88 209	08A	069	5-C22
40 88 415	08A	079	5-D08
40 88 852	08A	071	5-C24
40 88 910	08A	079	5-D08
40 88 936	08A	079	5-D08
40 88 951	08A	127	5-F08
40 88 969	08A	127	5-F08
40 89 082	09	009	7-A10
40 89 256	03A	039	2-B16
40 89 264	03A	047	2-B24
40 89 272	03A	047	2-B24
40 89 389	08A	097	5-E02
40 89 389	08A	151	5-G08
40 89 389	08A	155	5-G12
40 89 454	08A	043	5-B20
40 89 462	08A	043	5-B20
40 89 645	08A	059	5-C12
40 89 652	08A	059	5-C12
40 89 686	08A	049	5-C02
40 89 694	08A	049	5-C02
40 89 736	08A	135	5-F16
40 89 744	08A	141	5-F22
40 89 934	08A	083	5-D12
40 89 934	08A	085	5-D14
40 89 934	08A	089	5-D18
40 89 934	08A	093	5-D22
40 89 967	08A	057	5-C10
40 89 975	08A	057	5-C10
40 90 007	03A	067	2-C20
40 90 015	03A	067	2-C20
40 90 049	08A	099	5-E04
40 90 056	08A	099	5-E04
40 90 114	03A	065	2-C18
40 90 197	08A	081	5-D10
40 90 197	08A	087	5-D16
40 90 197	08A	105	5-E10
40 90 197	08A	167	5-G24
40 90 239	03A	069	2-C22
40 90 825	08A	131	5-F12
40 90 858	08A	099	5-E04
40 90 882	08A	099	5-E04
40 90 890	08A	099	5-E04
40 90 924	08A	097	5-E02
40 90 981	03A	115	2-E20
40 91 062	08A	099	5-E04
40 91 245	08A	131	5-F12
40 91 302	08A	131	5-F12
40 91 328	08A	131	5-F12
40 91 682	08A	061	5-C14
40 91 690	08A	061	5-C14
40 91 724	08A	061	5-C14
40 91 765	08A	061	5-C14
40 91 955	08A	061	5-C14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 92 011	08A	095	5-D24
40 92 037	03A	115	2-E20
40 92 144	03A	087	2-D16
40 92 342	03A	087	2-D16
40 92 359	03A	087	2-D16
40 92 409	08A	061	5-C14
40 92 482	08A	071	5-C24
40 92 490	08A	071	5-C24
40 92 508	08A	071	5-C24
40 92 516	08A	071	5-C24
40 92 748	03A	075	2-D04
40 92 755	03A	075	2-D04
40 92 763	03A	075	2-D04
40 92 995	08A	129	5-F10
40 93 035	03A	075	2-D04
40 93 043	08A	057	5-C10
40 93 050	08A	057	5-C10
40 93 183	08A	095	5-D24
40 93 308	08A	057	5-C10
40 93 316	08A	057	5-C10
40 93 365	08A	141	5-F22
40 93 373	08A	141	5-F22
40 93 456	08A	127	5-F08
40 93 464	08A	127	5-F08
40 93 480	08A	135	5-F16
40 93 514	08A	135	5-F16
40 93 522	08A	135	5-F16
40 93 704	08A	099	5-E04
40 93 936	08A	129	5-F10
40 93 944	08A	129	5-F10
40 93 969	08A	139	5-F20
40 93 977	08A	139	5-F20
40 94 124	08A	053	5-C06
40 94 132	08A	053	5-C06
40 94 199	08A	019	5-A20
40 94 256	08A	075	5-D04
40 94 306	03A	115	2-E20
40 94 405	08A	065	5-C18
40 94 462	08A	065	5-C18
40 94 744	08A	119	5-E24
40 94 751	08A	119	5-E24
40 94 777	08A	079	5-D08
40 94 850	09	009	7-A10
40 94 926	03A	079	2-D08
40 94 942	03A	079	2-D08
40 94 967	03A	039	2-B16
40 95 063	03A	079	2-D08
40 95 063	03A	215	2-I24
40 95 626	03A	075	2-D04
40 95 634	03A	075	2-D04
40 95 642	03A	075	2-D04
40 95 659	03A	075	2-D04
40 96 012	03A	087	2-D16
40 96 020	03A	087	2-D16
40 96 038	03A	087	2-D16
40 96 053	08A	071	5-C24
40 96 061	08A	071	5-C24
40 96 079	08A	071	5-C24
40 96 087	08A	071	5-C24
40 96 343	08A	117	5-E22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 96 616	08A	083	5-D12
40 96 616	08A	091	5-D20
40 96 616	08A	167	5-G24
40 96 657	08A	117	5-E22
40 96 749	08A	105	5-E10
40 96 756	08A	105	5-E10
40 96 871	08A	129	5-F10
40 96 889	08A	129	5-F10
40 96 897	08A	079	5-D08
40 97 440	08A	083	5-D12
40 97 440	08A	167	5-G24
40 97 457	08A	083	5-D12
40 97 457	08A	167	5-G24
40 98 018	08A	035	5-B12
40 98 273	08A	039	5-B16
40 98 463	08A	013	5-A14
40 98 471	08A	013	5-A14
40 98 562	08A	029	5-B06
40 98 570	08A	029	5-B06
40 98 695	08A	023	5-A24
40 98 703	08A	023	5-A24
40 98 711	08A	023	5-A24
40 98 729	08A	023	5-A24
40 98 786	08A	085	5-D14
40 98 943	08A	027	5-B04
40 98 943	08A	029	5-B06
40 98 950	08A	027	5-B04
40 98 950	08A	029	5-B06
40 99 099	08A	069	5-C22
40 99 628	08A	035	5-B12
40 99 636	08A	035	5-B12
40 99 768	08A	123	5-F04
40 99 768	08A	151	5-G08
40 99 768	08A	159	5-G16
40 99 776	08A	123	5-F04
40 99 776	08A	151	5-G08
40 99 776	08A	159	5-G16
41 00 301	08A	019	5-A20
41 00 350	08A	017	5-A18
41 00 368	08A	017	5-A18
41 00 376	08A	035	5-B12
41 00 384	08A	017	5-A18
41 00 400	08A	005	5-A06
41 00 418	08A	005	5-A06
41 00 426	08A	035	5-B12
41 00 434	08A	035	5-B12
41 00 533	08A	011	5-A12
41 00 541	08A	011	5-A12
41 00 582	08A	065	5-C18
41 00 723	08A	009	5-A10
41 00 731	08A	009	5-A10
41 00 871	08A	069	5-C22
41 00 897	08A	045	5-B22
41 00 905	08A	067	5-C20
41 00 988	08A	011	5-A12
41 01 036	08A	017	5-A18
41 01 051	08A	017	5-A18
41 01 119	08A	061	5-C14
41 01 127	08A	061	5-C14
41 01 309	08A	027	5-B04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 01 317	08A	027	5-B04
41 01 341	08A	031	5-B08
41 01 358	08A	031	5-B08
41 01 366	08A	031	5-B08
41 01 374	08A	031	5-B08
41 01 465	08A	005	5-A06
41 01 481	08A	035	5-B12
41 01 606	08A	031	5-B08
41 01 630	08A	035	5-B12
41 01 648	08A	035	5-B12
41 01 705	08A	061	5-C14
41 01 705	08A	069	5-C22
41 01 721	08A	031	5-B08
41 01 804	08A	053	5-C06
41 01 812	08A	053	5-C06
41 01 903	08A	029	5-B06
41 01 911	08A	029	5-B06
41 02 000	08A	085	5-D14
41 02 000	08A	089	5-D18
41 02 000	08A	093	5-D22
41 02 000	08A	105	5-E10
41 02 034	08A	061	5-C14
41 02 059	08A	061	5-C14
41 02 067	08A	129	5-F10
41 02 075	08A	129	5-F10
41 02 851	03A	091	2-D20
41 02 901	08A	005	5-A06
41 03 214	04	035	3-I12
41 03 222	04	025	3-I02
41 03 222	04	027	3-I04
41 03 230	04	037	3-I14
41 03 248	04	079	3-K08
41 03 255	04	035	3-I12
41 03 263	04	035	3-I12
41 03 313	04	035	3-I12
41 03 412	08A	005	5-A06
41 03 420	05	013	4-A14
41 03 453	06	009	4-C10
41 03 461	06	009	4-C10
41 03 875	05	019	4-A20
41 03 891	05	021	4-A22
41 03 933	06	013	4-C14
41 03 941	06	015	4-C16
41 03 958	06	017	4-C18
41 03 966	06	017	4-C18
41 03 974	06	017	4-C18
41 03 982	06	017	4-C18
41 03 990	06	013	4-C14
41 03 990	06	015	4-C16
41 04 006	06	013	4-C14
41 04 006	06	015	4-C16
41 04 014	06	015	4-C16
41 04 022	06	013	4-C14
41 04 022	06	015	4-C16
41 04 030	06	013	4-C14
41 04 030	06	015	4-C16
41 04 048	06	019	4-C20
41 04 162	06	015	4-C16
41 04 261	05	011	4-A12
41 04 287	07	013	4-E14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 04 493	06	013	4-C14
41 04 501	06	013	4-C14
41 04 519	06	013	4-C14
41 04 527	06	017	4-C18
41 04 535	06	013	4-C14
41 04 543	06	013	4-C14
41 04 550	06	015	4-C16
41 04 568	06	015	4-C16
41 04 592	06	013	4-C14
41 04 592	06	015	4-C16
41 04 709	06	029	4-D06
41 04 717	06	029	4-D06
41 04 725	06	029	4-D06
41 04 733	06	029	4-D06
41 04 741	06	029	4-D06
41 04 766	06	021	4-C22
41 04 766	06	029	4-D06
41 05 037	06	019	4-C20
41 05 045	06	019	4-C20
41 05 052	06	013	4-C14
41 05 060	06	013	4-C14
41 05 227	04	035	3-I12
41 05 235	04	035	3-I12
41 05 268	05	027	4-B04
41 05 276	02	161	1-I18
41 05 391	07	013	4-E14
41 05 508	06	013	4-C14
41 05 516	06	013	4-C14
41 05 565	06	015	4-C16
41 05 573	06	015	4-C16
41 05 581	06	015	4-C16
41 05 599	06	015	4-C16
41 05 656	07	025	4-F02
41 05 730	07	021	4-E22
41 05 797	04	077	3-K06
41 05 821	04	007	3-H08
41 05 920	05	021	4-A22
41 05 946	05	021	4-A22
41 05 961	05	021	4-A22
41 06 126	04	035	3-I12
41 06 134	04	035	3-I12
41 06 266	07	019	4-E20
41 06 266	07	025	4-F02
41 06 266	07	027	4-F04
41 06 944	07	015	4-E16
41 06 944	07	025	4-F02
41 06 951	07	015	4-E16
41 06 951	07	025	4-F02
41 06 969	07	007	4-E08
41 06 969	07	009	4-E10
41 07 090	07	021	4-E22
41 07 108	04	035	3-I12
41 07 363	03A	119	2-E24
41 07 462	05	005	4-A06
41 07 603	07	005	4-E06
41 07 652	07	005	4-E06
41 07 744	06	011	4-C12
41 07 793	05	007	4-A08
41 07 793	05	035	4-B12
41 07 801	05	035	4-B12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 07 819	05	011	4-A12
41 07 975	04	007	3-H08
41 08 007	08B	175	6-H08
41 08 015	08B	175	6-H08
41 08 023	03A	207	2-I16
41 08 031	03A	207	2-I16
41 08 049	03A	207	2-I16
41 08 650	03A	097	2-E02
41 08 676	03A	097	2-E02
41 08 718	03A	097	2-E02
41 08 726	03A	097	2-E02
41 08 734	03A	097	2-E02
41 08 825	03A	095	2-D24
41 08 833	03A	131	2-F12
41 08 833	03A	143	2-F24
41 08 833	03A	159	2-G16
41 08 932	03A	107	2-E12
41 08 957	09	011	7-A12
41 08 965	09	011	7-A12
41 09 039	03A	113	2-E18
41 09 047	03A	113	2-E18
41 09 070	03A	199	2-I08
41 09 070	03A	203	2-I12
41 09 088	03A	201	2-I10
41 09 088	03A	205	2-I14
41 09 096	03A	201	2-I10
41 09 096	03A	205	2-I14
41 09 278	03B	079	3-D08
41 09 310	03B	055	3-C08
41 09 526	03A	095	2-D24
41 09 591	03A	209	2-I18
41 09 781	03A	189	2-H22
41 09 807	03A	189	2-H22
41 09 823	03A	189	2-H22
41 09 856	03A	189	2-H22
41 10 508	02	137	1-H18
41 10 532	03A	189	2-H22
41 10 557	03A	189	2-H22
41 10 607	03A	213	2-I22
41 10 607	03A	215	2-I24
41 10 623	03A	209	2-I18
41 10 631	03A	209	2-I18
41 10 672	03A	207	2-I16
41 10 672	03A	211	2-I20
41 10 680	03A	207	2-I16
41 10 680	03A	211	2-I20
41 10 987	08B	177	6-H10
41 10 995	08B	173	6-H06
41 11 001	08B	177	6-H10
41 11 100	03A	107	2-E12
41 11 118	03A	119	2-E24
41 11 217	03A	183	2-H16
41 11 225	03A	113	2-E18
41 11 233	03A	113	2-E18
41 11 241	03A	107	2-E12
41 11 308	03B	027	3-B04
41 11 308	03B	055	3-C08
41 11 308	03B	079	3-D08
41 11 308	03B	103	3-E08
41 11 472	03A	113	2-E18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 11 480	03A	189	2-H22
41 11 506	08B	177	6-H10
41 11 522	03A	199	2-I08
41 11 522	03A	203	2-I12
41 11 530	03A	135	2-F16
41 11 548	03A	135	2-F16
41 11 555	03A	135	2-F16
41 11 563	03A	135	2-F16
41 11 597	03A	135	2-F16
41 11 605	03A	135	2-F16
41 11 688	03A	135	2-F16
41 11 696	03A	135	2-F16
41 11 704	03A	135	2-F16
41 11 712	03A	135	2-F16
41 11 746	03A	135	2-F16
41 11 753	03A	135	2-F16
41 11 779	03A	137	2-F18
41 11 787	03A	137	2-F18
41 11 795	03A	137	2-F18
41 11 803	03A	137	2-F18
41 11 837	03A	137	2-F18
41 11 845	03A	137	2-F18
41 11 860	03A	137	2-F18
41 11 928	03A	137	2-F18
41 12 009	03A	135	2-F16
41 12 017	03A	135	2-F16
41 12 025	03A	135	2-F16
41 12 033	03A	135	2-F16
41 12 041	03A	135	2-F16
41 12 058	03A	135	2-F16
41 12 066	03A	135	2-F16
41 12 074	03A	135	2-F16
41 12 124	03A	135	2-F16
41 12 132	03A	135	2-F16
41 12 140	03A	135	2-F16
41 12 157	03A	135	2-F16
41 12 298	03A	135	2-F16
41 12 298	03A	137	2-F18
41 12 306	03A	137	2-F18
41 12 314	03A	135	2-F16
41 12 314	03A	137	2-F18
41 12 322	03A	137	2-F18
41 12 330	03A	135	2-F16
41 12 330	03A	137	2-F18
41 12 348	03A	137	2-F18
41 12 355	03A	135	2-F16
41 12 355	03A	137	2-F18
41 12 363	03A	137	2-F18
41 12 413	03A	137	2-F18
41 12 421	03A	137	2-F18
41 12 439	03A	137	2-F18
41 12 447	03A	137	2-F18
41 12 488	03A	137	2-F18
41 12 561	03A	137	2-F18
41 12 843	03A	141	2-F22
41 12 868	03A	141	2-F22
41 12 884	03A	141	2-F22
41 12 900	03A	145	2-G02
41 12 926	03A	145	2-G02
41 12 959	03A	145	2-G02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 12 967	03A	141	2-F22
41 12 975	03A	141	2-F22
41 12 983	03A	141	2-F22
41 13 163	03A	201	2-I10
41 13 163	03A	205	2-I14
41 13 205	03B	061	3-C14
41 13 205	03B	087	3-D16
41 13 262	03A	213	2-I22
41 13 411	03B	089	3-D18
41 13 551	03A	183	2-H16
41 13 601	03A	021	2-A22
41 13 601	03A	031	2-B08
41 13 601	03B	069	3-C22
41 13 601	03B	093	3-D22
41 13 619	03A	021	2-A22
41 13 619	03A	027	2-B04
41 13 650	03B	069	3-C22
41 13 650	03B	093	3-D22
41 13 759	03B	069	3-C22
41 13 759	03B	093	3-D22
41 13 809	03B	071	3-C24
41 13 809	03B	095	3-D24
41 13 858	03B	071	3-C24
41 13 999	03A	177	2-H10
41 13 999	08C	033	6-L10
41 13 999	08C	035	6-L12
41 14 005	03B	077	3-D06
41 14 005	03B	099	3-E04
41 14 054	03B	077	3-D06
41 14 054	03B	099	3-E04
41 14 153	03B	077	3-D06
41 14 310	03B	063	3-C16
41 14 310	03B	087	3-D16
41 14 377	03B	071	3-C24
41 14 609	03B	081	3-D10
41 14 609	03B	103	3-E08
41 14 898	03A	095	2-D24
41 14 971	03A	203	2-I12
41 15 077	03B	065	3-C18
41 15 077	03B	069	3-C22
41 15 077	03B	079	3-D08
41 15 077	03B	087	3-D16
41 15 077	03B	093	3-D22
41 15 077	03B	099	3-E04
41 15 077	03B	135	3-F16
41 15 077	03B	145	3-G02
41 15 085	03A	105	2-E10
41 15 085	03B	079	3-D08
41 15 085	03B	099	3-E04
41 15 085	08C	009	6-K10
41 15 192	03A	213	2-I22
41 15 192	03B	069	3-C22
41 15 192	03B	071	3-C24
41 15 192	03B	077	3-D06
41 15 192	03B	079	3-D08
41 15 192	03B	093	3-D22
41 15 192	03B	099	3-E04
41 15 192	03B	103	3-E08
41 15 192	03B	145	3-G02
41 15 580	03B	065	3-C18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 15 580	03B	069	3-C22
41 15 580	03B	075	3-D04
41 15 580	03B	087	3-D16
41 15 580	03B	093	3-D22
41 15 580	03B	099	3-E04
41 15 580	03B	135	3-F16
41 15 580	03B	145	3-G02
41 17 073	08B	175	6-H08
41 17 081	08B	175	6-H08
41 17 164	03B	065	3-C18
41 17 164	03B	087	3-D16
41 17 172	06	007	4-C08
41 17 263	03B	069	3-C22
41 17 263	03B	093	3-D22
41 17 339	03A	189	2-H22
41 17 461	03B	079	3-D08
41 17 461	03B	099	3-E04
41 17 461	08C	009	6-K10
41 17 560	03A	091	2-D20
41 17 560	03B	065	3-C18
41 17 560	03B	087	3-D16
41 17 602	08A	023	5-A24
41 17 602	08C	033	6-L10
41 17 602	08C	035	6-L12
41 17 610	08A	023	5-A24
41 17 628	08A	023	5-A24
41 17 669	03B	069	3-C22
41 17 669	03B	093	3-D22
41 17 768	03B	075	3-D04
41 17 768	03B	099	3-E04
41 18 030	02	135	1-H16
41 18 048	02	135	1-H16
41 18 089	04	071	3-J24
41 18 188	02	133	1-H14
41 18 303	04	071	3-J24
41 18 311	04	069	3-J22
41 18 360	02	135	1-H16
41 18 378	02	137	1-H18
41 18 402	04	071	3-J24
41 18 626	04	031	3-I08
41 18 626	04	033	3-I10
41 18 659	04	033	3-I10
41 18 949	04	009	3-H10
41 18 956	02	135	1-H16
41 18 964	08C	015	6-K16
41 18 964	08C	019	6-K20
41 18 964	08C	033	6-L10
41 19 061	04	043	3-I20
41 19 137	04	053	3-J06
41 19 152	04	053	3-J06
41 19 160	04	053	3-J06
41 19 244	04	069	3-J22
41 19 244	04	081	3-K10
41 19 244	04	083	3-K12
41 19 277	04	065	3-J18
41 19 376	04	041	3-I18
41 19 384	04	047	3-I24
41 19 442	04	063	3-J16
41 19 483	04	061	3-J14
41 19 525	04	043	3-I20

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

7-B11 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 19 640	04	013	3-H14
41 19 640	04	041	3-I18
41 19 657	04	013	3-H14
41 19 657	04	041	3-I18
41 20 366	02	135	1-H16
41 20 465	02	135	1-H16
41 20 523	04	037	3-I14
41 20 606	04	071	3-J24
41 20 614	04	071	3-J24
41 20 671	04	043	3-I20
41 20 754	04	065	3-J18
41 20 796	04	065	3-J18
41 20 861	04	053	3-J06
41 20 887	04	039	3-I16
41 20 937	04	059	3-J12
41 20 945	04	049	3-J02
41 20 978	04	053	3-J06
41 21 067	02	135	1-H16
41 21 091	04	071	3-J24
41 21 109	04	071	3-J24
41 21 562	04	007	3-H08
41 21 588	04	033	3-I10
41 21 760	04	041	3-I18
41 21 828	02	135	1-H16
41 21 877	04	055	3-J08
41 21 992	04	065	3-J18
41 22 016	04	049	3-J02
41 22 024	04	049	3-J02
41 22 057	04	043	3-I20
41 22 065	04	043	3-I20
41 22 123	04	027	3-I04
41 22 131	04	027	3-I04
41 22 149	04	027	3-I04
41 22 156	04	027	3-I04
41 22 164	04	027	3-I04
41 22 172	04	027	3-I04
41 22 180	04	027	3-I04
41 22 198	04	027	3-I04
41 22 206	04	027	3-I04
41 22 214	04	027	3-I04
41 22 305	04	059	3-J12
41 22 396	04	055	3-J08
41 22 412	04	055	3-J08
41 22 420	04	059	3-J12
41 22 495	04	061	3-J14
41 22 503	04	065	3-J18
41 22 529	04	069	3-J22
41 22 552	04	067	3-J20
41 22 578	04	067	3-J20
41 22 586	04	059	3-J12
41 22 677	04	059	3-J12
41 22 719	04	061	3-J14
41 22 800	04	053	3-J06
41 22 818	04	055	3-J08
41 22 990	04	055	3-J08
41 23 105	08B	159	6-G16
41 23 386	08B	163	6-G20
41 23 386	08B	177	6-H10
41 23 923	08B	169	6-H02
41 23 931	08B	169	6-H02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 23 949	08B	169	6-H02
41 23 956	08B	169	6-H02
41 23 964	08B	169	6-H02
41 23 972	08B	169	6-H02
41 23 980	08B	169	6-H02
41 23 998	08B	169	6-H02
41 24 798	08B	159	6-G16
41 24 806	08B	159	6-G16
41 25 209	08B	159	6-G16
41 25 225	08B	159	6-G16
41 25 480	08B	085	6-D14
41 25 480	08B	097	6-E02
41 25 498	08B	085	6-D14
41 25 498	08B	097	6-E02
41 25 506	08B	085	6-D14
41 25 506	08B	097	6-E02
41 25 514	08B	085	6-D14
41 25 514	08B	097	6-E02
41 25 522	08B	085	6-D14
41 25 522	08B	097	6-E02
41 25 530	08B	085	6-D14
41 25 530	08B	097	6-E02
41 25 548	08B	087	6-D16
41 25 548	08B	097	6-E02
41 25 555	08B	087	6-D16
41 25 555	08B	097	6-E02
41 26 330	08B	173	6-H06
41 26 348	08B	173	6-H06
41 26 355	08B	173	6-H06
41 26 686	08B	151	6-G08
41 27 700	08B	041	6-B18
41 27 700	08B	057	6-C10
41 27 718	08B	035	6-B12
41 27 726	08B	035	6-B12
41 27 734	08B	035	6-B12
41 27 742	08B	041	6-B18
41 27 742	08B	057	6-C10
41 27 759	08B	041	6-B18
41 27 759	08B	057	6-C10
41 27 767	08B	041	6-B18
41 27 767	08B	057	6-C10
41 27 783	08B	035	6-B12
41 27 791	08B	035	6-B12
41 27 809	08B	035	6-B12
41 27 817	08B	041	6-B18
41 27 817	08B	057	6-C10
41 27 825	08B	041	6-B18
41 27 825	08B	057	6-C10
41 27 833	08B	041	6-B18
41 27 833	08B	057	6-C10
41 27 841	08B	035	6-B12
41 27 858	08B	035	6-B12
41 27 866	08B	035	6-B12
41 27 874	08B	039	6-B16
41 27 874	08B	057	6-C10
41 27 874	08B	069	6-C22
41 27 882	08B	039	6-B16
41 27 882	08B	057	6-C10
41 27 882	08B	069	6-C22
41 27 890	08B	039	6-B16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 27 890	08B	057	6-C10
41 27 890	08B	069	6-C22
41 28 021	08B	041	6-B18
41 28 021	08B	057	6-C10
41 28 039	08B	041	6-B18
41 28 039	08B	057	6-C10
41 28 047	08B	041	6-B18
41 28 054	08B	041	6-B18
41 28 062	08B	041	6-B18
41 28 062	08B	057	6-C10
41 28 070	08B	041	6-B18
41 28 070	08B	057	6-C10
41 28 088	08B	041	6-B18
41 28 088	08B	057	6-C10
41 28 096	08B	039	6-B16
41 28 096	08B	057	6-C10
41 28 096	08B	069	6-C22
41 28 104	08B	039	6-B16
41 28 104	08B	057	6-C10
41 28 104	08B	069	6-C22
41 28 112	08B	039	6-B16
41 28 120	08B	039	6-B16
41 28 138	08B	039	6-B16
41 28 138	08B	057	6-C10
41 28 138	08B	069	6-C22
41 28 146	08B	039	6-B16
41 28 146	08B	057	6-C10
41 28 146	08B	069	6-C22
41 28 153	08B	039	6-B16
41 28 153	08B	057	6-C10
41 28 153	08B	069	6-C22
41 28 161	08B	041	6-B18
41 28 161	08B	057	6-C10
41 28 179	08B	039	6-B16
41 28 179	08B	057	6-C10
41 28 179	08B	069	6-C22
41 28 195	08B	193	6-I02
41 28 393	08B	167	6-G24
41 28 401	08B	167	6-G24
41 28 419	08B	167	6-G24
41 28 435	08B	167	6-G24
41 29 110	08B	167	6-G24
41 29 201	08B	167	6-G24
41 29 250	08B	093	6-D22
41 29 250	08B	105	6-E10
41 29 250	08B	119	6-E24
41 29 268	08B	093	6-D22
41 29 268	08B	105	6-E10
41 29 268	08B	119	6-E24
41 29 276	08B	093	6-D22
41 29 276	08B	099	6-E04
41 29 276	08B	105	6-E10
41 29 276	08B	111	6-E16
41 29 276	08B	119	6-E24
41 29 276	08B	127	6-F08
41 29 284	08B	093	6-D22
41 29 284	08B	099	6-E04
41 29 284	08B	105	6-E10
41 29 284	08B	113	6-E18
41 29 284	08B	119	6-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 29 284	08B	127	6-F08
41 29 292	08B	099	6-E04
41 29 292	08B	111	6-E16
41 29 292	08B	127	6-F08
41 29 300	08B	099	6-E04
41 29 300	08B	111	6-E16
41 29 300	08B	127	6-F08
41 29 383	08B	153	6-G10
41 29 391	08B	153	6-G10
41 29 466	08B	139	6-F20
41 29 474	08B	139	6-F20
41 29 482	08B	139	6-F20
41 29 490	08B	139	6-F20
41 29 508	08B	139	6-F20
41 29 516	08B	139	6-F20
41 29 524	08B	139	6-F20
41 29 532	08B	139	6-F20
41 29 540	08B	139	6-F20
41 29 565	08B	139	6-F20
41 29 581	08B	139	6-F20
41 29 607	08B	139	6-F20
41 29 623	08B	139	6-F20
41 29 649	08B	139	6-F20
41 29 664	08B	139	6-F20
41 29 680	08B	139	6-F20
41 29 706	08B	139	6-F20
41 29 714	08B	139	6-F20
41 29 722	08B	139	6-F20
41 29 730	08B	139	6-F20
41 29 789	08B	139	6-F20
41 29 797	08B	139	6-F20
41 29 805	08B	139	6-F20
41 29 813	08B	139	6-F20
41 30 373	08B	037	6-B14
41 30 373	08B	051	6-C04
41 30 381	08B	037	6-B14
41 30 381	08B	051	6-C04
41 30 399	08B	037	6-B14
41 30 399	08B	053	6-C06
41 31 207	08B	037	6-B14
41 31 207	08B	053	6-C06
41 31 215	08B	039	6-B16
41 31 215	08B	055	6-C08
41 31 223	08B	039	6-B16
41 31 223	08B	055	6-C08
41 31 264	08B	037	6-B14
41 31 264	08B	051	6-C04
41 31 272	08B	037	6-B14
41 31 272	08B	053	6-C06
41 31 280	08B	039	6-B16
41 31 280	08B	055	6-C08
41 31 751	08B	173	6-H06
41 32 866	08B	177	6-H10
41 32 874	08B	177	6-H10
41 33 146	08B	177	6-H10
41 33 153	08B	177	6-H10
41 33 161	08B	177	6-H10
41 33 278	08B	205	6-I14
41 33 344	08B	201	6-I10
41 33 369	08B	203	6-I12

7-B12 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 33 385	08B	203	6-I12
41 33 427	08B	093	6-D22
41 33 427	08B	099	6-E04
41 33 427	08B	105	6-E10
41 33 427	08B	111	6-E16
41 33 427	08B	119	6-E24
41 33 427	08B	127	6-F08
41 33 740	08B	037	6-B14
41 33 740	08B	051	6-C04
41 33 757	08B	037	6-B14
41 33 757	08B	051	6-C04
41 33 765	08B	037	6-B14
41 33 765	08B	053	6-C06
41 33 773	08B	037	6-B14
41 33 773	08B	053	6-C06
41 33 781	08B	039	6-B16
41 33 781	08B	055	6-C08
41 33 799	08B	039	6-B16
41 33 799	08B	055	6-C08
41 33 815	08B	037	6-B14
41 33 815	08B	051	6-C04
41 33 823	08B	037	6-B14
41 33 823	08B	053	6-C06
41 33 831	08B	039	6-B16
41 33 831	08B	055	6-C08
41 34 003	08B	161	6-G18
41 34 003	08B	177	6-H10
41 34 102	08B	035	6-B12
41 34 102	08B	051	6-C04
41 34 102	08B	063	6-C16
41 34 110	08B	037	6-B14
41 34 110	08B	053	6-C06
41 34 110	08B	065	6-C18
41 34 128	08B	039	6-B16
41 34 128	08B	055	6-C08
41 34 128	08B	067	6-C20
41 34 151	08B	035	6-B12
41 34 151	08B	051	6-C04
41 34 151	08B	063	6-C16
41 34 169	08B	035	6-B12
41 34 169	08B	051	6-C04
41 34 169	08B	063	6-C16
41 34 177	08B	037	6-B14
41 34 177	08B	053	6-C06
41 34 177	08B	065	6-C18
41 34 185	08B	037	6-B14
41 34 185	08B	053	6-C06
41 34 185	08B	065	6-C18
41 34 193	08B	039	6-B16
41 34 193	08B	055	6-C08
41 34 193	08B	067	6-C20
41 34 201	08B	039	6-B16
41 34 201	08B	055	6-C08
41 34 201	08B	067	6-C20
41 34 672	08B	159	6-G16
41 34 680	08B	159	6-G16
41 34 797	08B	155	6-G12
41 34 805	08B	155	6-G12
41 35 190	08B	111	6-E16
41 35 190	08B	125	6-F06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 35 208	08B	111	6-E16
41 35 208	08B	125	6-F06
41 35 224	08B	099	6-E04
41 35 224	08B	111	6-E16
41 35 224	08B	125	6-F06
41 35 257	08B	111	6-E16
41 35 257	08B	125	6-F06
41 35 307	08B	111	6-E16
41 35 307	08B	125	6-F06
41 35 315	08B	111	6-E16
41 35 315	08B	125	6-F06
41 35 331	08B	099	6-E04
41 35 331	08B	111	6-E16
41 35 331	08B	125	6-F06
41 35 364	08B	111	6-E16
41 35 364	08B	125	6-F06
41 35 414	08B	105	6-E10
41 35 414	08B	117	6-E22
41 35 422	08B	105	6-E10
41 35 422	08B	117	6-E22
41 35 430	08B	105	6-E10
41 35 430	08B	117	6-E22
41 35 448	08B	105	6-E10
41 35 448	08B	117	6-E22
41 35 471	08B	093	6-D22
41 35 471	08B	105	6-E10
41 35 471	08B	117	6-E22
41 35 489	08B	093	6-D22
41 35 489	08B	105	6-E10
41 35 489	08B	117	6-E22
41 35 497	08B	105	6-E10
41 35 497	08B	117	6-E22
41 35 505	08B	105	6-E10
41 35 505	08B	117	6-E22
41 35 786	08B	043	6-B20
41 35 794	08B	043	6-B20
41 35 794	08B	059	6-C12
41 35 794	08B	071	6-C24
41 35 802	08B	045	6-B22
41 35 802	08B	061	6-C14
41 35 802	08B	073	6-D02
41 35 810	08B	045	6-B22
41 35 810	08B	061	6-C14
41 35 810	08B	073	6-D02
41 35 828	08B	045	6-B22
41 35 828	08B	061	6-C14
41 35 828	08B	073	6-D02
41 35 836	08B	043	6-B20
41 35 844	08B	043	6-B20
41 35 851	08B	043	6-B20
41 35 851	08B	059	6-C12
41 35 851	08B	071	6-C24
41 35 869	08B	043	6-B20
41 35 869	08B	059	6-C12
41 35 869	08B	071	6-C24
41 35 877	08B	045	6-B22
41 35 877	08B	061	6-C14
41 35 877	08B	073	6-D02
41 35 885	08B	045	6-B22
41 35 885	08B	061	6-C14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 35 885	08B	073	6-D02
41 35 893	08B	045	6-B22
41 35 893	08B	061	6-C14
41 35 893	08B	073	6-D02
41 35 901	08B	045	6-B22
41 35 901	08B	061	6-C14
41 35 901	08B	073	6-D02
41 35 919	08B	045	6-B22
41 35 919	08B	061	6-C14
41 35 919	08B	073	6-D02
41 35 927	08B	045	6-B22
41 35 927	08B	061	6-C14
41 35 927	08B	073	6-D02
41 35 935	08B	043	6-B20
41 35 935	08B	059	6-C12
41 35 935	08B	071	6-C24
41 35 943	08B	043	6-B20
41 35 943	08B	059	6-C12
41 35 943	08B	071	6-C24
41 35 950	08B	043	6-B20
41 35 950	08B	059	6-C12
41 35 950	08B	071	6-C24
41 35 976	08B	131	6-F12
41 35 984	08B	131	6-F12
41 36 180	08B	191	6-H24
41 36 412	08B	141	6-F22
41 36 420	08B	141	6-F22
41 36 420	08B	145	6-G02
41 36 420	08B	149	6-G06
41 36 438	08B	141	6-F22
41 36 438	08B	145	6-G02
41 36 438	08B	149	6-G06
41 36 446	08B	141	6-F22
41 36 446	08B	145	6-G02
41 36 446	08B	149	6-G06
41 36 610	08B	185	6-H18
41 36 610	08B	189	6-H22
41 38 590	08B	137	6-F18
41 38 590	08B	141	6-F22
41 39 341	08B	093	6-D22
41 39 358	08B	093	6-D22
41 39 408	08B	093	6-D22
41 39 416	08B	093	6-D22
41 39 481	08B	093	6-D22
41 39 499	08B	093	6-D22
41 39 580	08B	099	6-E04
41 39 598	08B	099	6-E04
41 39 648	08B	099	6-E04
41 39 655	08B	099	6-E04
41 39 846	08B	099	6-E04
41 39 853	08B	099	6-E04
41 39 929	08B	059	6-C12
41 39 929	08B	071	6-C24
41 39 937	08B	059	6-C12
41 39 937	08B	071	6-C24
41 39 945	08B	059	6-C12
41 39 945	08B	071	6-C24
41 39 952	08B	059	6-C12
41 39 952	08B	071	6-C24
41 39 960	08B	051	6-C04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 39 960	08B	063	6-C16
41 39 978	08B	051	6-C04
41 39 978	08B	063	6-C16
41 39 986	08B	051	6-C04
41 39 994	08B	051	6-C04
41 40 042	08B	179	6-H12
41 40 059	08B	179	6-H12
41 40 067	08B	183	6-H16
41 40 075	08B	183	6-H16
41 40 315	08B	131	6-F12
41 40 661	08B	151	6-G08
41 40 679	08B	151	6-G08
41 40 703	08B	151	6-G08
41 40 711	08B	151	6-G08
41 40 729	08B	151	6-G08
41 40 737	08B	151	6-G08
41 40 745	08B	151	6-G08
41 40 752	08B	151	6-G08
41 40 802	08B	043	6-B20
41 40 802	08B	059	6-C12
41 40 802	08B	071	6-C24
41 40 810	08B	043	6-B20
41 40 810	08B	059	6-C12
41 40 810	08B	071	6-C24
41 41 610	08B	199	6-I08
41 41 628	08B	191	6-H24
41 41 636	08B	191	6-H24
41 41 644	08B	131	6-F12
41 41 776	08B	131	6-F12
41 41 784	08B	193	6-I02
41 41 958	08B	191	6-H24
41 42 824	08B	161	6-G18
41 42 824	08B	173	6-H06
41 42 832	08B	161	6-G18
41 42 832	08B	173	6-H06
41 42 964	08B	021	6-A22
41 53 813	09	009	7-A10
41 56 014	02	127	1-H08
41 56 030	02	127	1-H08
41 56 055	02	121	1-H02
41 56 071	02	121	1-H02
41 56 345	02	143	1-H24
41 56 394	09	007	7-A08
41 56 402	09	007	7-A08
41 56 444	02	143	1-H24
41 56 451	02	143	1-H24
41 56 469	02	065	1-E18
41 56 550	02	065	1-E18
41 56 550	02	067	1-E20
41 56 618	09	011	7-A12
41 56 642	02	143	1-H24
41 56 766	02	165	1-I22
41 56 774	02	165	1-I22
41 57 020	02	143	1-H24
41 57 038	02	143	1-H24
41 57 046	02	143	1-H24
41 57 418	09	007	7-A08
41 57 426	09	007	7-A08
41 57 475	09	009	7-A10
41 57 483	09	007	7-A08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 57 558	09	007	7-A08
41 57 566	09	007	7-A08
41 57 723	02	063	1-E16
41 57 756	09	007	7-A08
41 57 764	09	007	7-A08
41 58 168	02	053	1-E06
41 58 168	02	055	1-E08
41 58 234	02	053	1-E06
41 58 234	02	055	1-E08
41 58 598	09	009	7-A10
41 58 671	03A	027	2-B04
41 58 671	03A	031	2-B08
41 58 762	02	123	1-H04
41 58 762	02	125	1-H06
41 58 846	02	071	1-E24
41 59 182	03A	119	2-E24
41 59 190	03A	119	2-E24
41 59 265	02	063	1-E16
41 59 356	02	059	1-E12
41 59 489	02	119	1-G24
41 59 745	02	061	1-E14
41 59 869	02	079	1-F08
41 59 976	02	121	1-H02
41 59 976	02	123	1-H04
41 59 976	02	125	1-H06
41 60 065	02	123	1-H04
41 60 065	02	129	1-H10
41 60 099	03A	017	2-A18
41 60 099	03A	019	2-A20
41 60 115	03A	019	2-A20
41 60 123	03A	017	2-A18
41 60 123	03A	019	2-A20
41 60 149	03A	017	2-A18
41 60 248	02	161	1-I18
41 60 263	02	169	1-J02
41 60 305	02	063	1-E16
41 60 511	02	065	1-E18
41 60 511	02	067	1-E20
41 60 537	02	059	1-E12
41 60 610	03A	191	2-H24
41 60 628	08B	145	6-G02
41 60 628	08B	149	6-G06
41 60 735	02	061	1-E14
41 60 743	02	061	1-E14
41 60 941	09	007	7-A08
41 60 958	09	007	7-A08
41 61 055	09	007	7-A08
41 61 063	09	007	7-A08
41 61 071	09	007	7-A08
41 61 089	09	009	7-A10
41 61 097	09	007	7-A08
41 61 105	09	009	7-A10
41 61 113	09	007	7-A08
41 61 121	09	007	7-A08
41 61 139	09	007	7-A08
41 61 147	09	007	7-A08
41 61 154	09	007	7-A08
41 61 162	02	063	1-E16
41 61 162	02	151	1-I08
41 61 220	04	069	3-J22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 61 238	02	161	1-I18
41 61 261	02	143	1-H24
41 61 378	02	083	1-F12
41 61 451	02	083	1-F12
41 61 576	09	007	7-A08
41 61 592	09	007	7-A08
41 61 600	09	007	7-A08
41 61 642	09	009	7-A10
41 61 659	09	009	7-A10
41 61 691	09	007	7-A08
41 61 717	09	007	7-A08
41 61 758	02	061	1-E14
41 61 766	02	065	1-E18
41 61 766	02	067	1-E20
41 61 824	09	007	7-A08
41 61 881	02	109	1-G14
41 61 899	02	071	1-E24
41 61 907	02	161	1-I18
41 61 915	02	161	1-I18
41 61 956	09	007	7-A08
41 62 038	02	063	1-E16
41 62 046	02	083	1-F12
41 62 061	02	127	1-H08
41 62 061	02	129	1-H10
41 62 061	02	131	1-H12
41 62 152	02	083	1-F12
41 62 319	02	083	1-F12
41 62 343	02	083	1-F12
41 62 632	02	125	1-H06
41 62 632	02	131	1-H12
41 62 665	02	061	1-E14
41 62 715	09	013	7-A14
41 62 731	09	011	7-A12
41 62 749	09	009	7-A10
41 62 970	02	065	1-E18
41 63 119	02	063	1-E16
41 63 135	02	063	1-E16
41 63 150	02	063	1-E16
41 63 168	02	063	1-E16
41 63 176	02	061	1-E14
41 63 184	02	061	1-E14
41 63 192	02	061	1-E14
41 63 200	02	061	1-E14
41 63 218	02	061	1-E14
41 63 226	02	057	1-E10
41 63 226	02	059	1-E12
41 63 234	02	063	1-E16
41 63 317	04	069	3-J22
41 63 333	04	069	3-J22
41 63 432	02	165	1-I22
41 63 432	02	167	1-I24
41 63 564	02	067	1-E20
41 63 853	02	063	1-E16
41 63 895	02	059	1-E12
41 63 911	02	127	1-H08
41 63 911	02	129	1-H10
41 63 929	02	121	1-H02
41 63 929	02	123	1-H04
41 63 937	02	127	1-H08
41 63 937	02	129	1-H10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 63 945	02	123	1-H04
41 64 141	02	071	1-E24
41 64 224	02	061	1-E14
41 64 232	02	063	1-E16
41 64 323	02	123	1-H04
41 64 372	02	059	1-E12
41 64 398	02	061	1-E14
41 64 687	02	143	1-H24
41 64 695	02	143	1-H24
41 64 745	02	143	1-H24
41 64 802	02	079	1-F08
41 64 828	02	169	1-J02
41 65 809	06	025	4-D02
41 67 193	08B	043	6-B20
41 67 409	08B	043	6-B20
41 67 417	08B	045	6-B22
41 67 425	08B	045	6-B22
41 67 425	08B	047	6-B24
41 69 884	08B	059	6-C12
41 71 112	03A	087	2-D16
41 71 146	03A	087	2-D16
41 71 153	03A	087	2-D16
41 71 161	03A	087	2-D16
41 71 179	03A	087	2-D16
41 71 195	08A	131	5-F12
41 71 203	03A	087	2-D16
41 71 229	08A	117	5-E22
41 71 245	03A	087	2-D16
41 71 252	03A	087	2-D16
41 71 260	03A	087	2-D16
41 71 278	03A	087	2-D16
41 71 856	03A	065	2-C18
41 71 906	08A	121	5-F02
41 71 914	08A	119	5-E24
41 71 922	08A	121	5-F02
41 71 930	08A	121	5-F02
41 72 441	03A	087	2-D16
41 73 688	03A	145	2-G02
41 73 688	03A	161	2-G18
41 73 688	03A	175	2-H08
41 73 696	03A	185	2-H18
41 73 993	09	011	7-A12
41 74 025	09	011	7-A12
41 74 033	09	011	7-A12
41 74 041	09	011	7-A12
41 74 058	03A	185	2-H18
41 74 090	03A	191	2-H24
41 74 116	03A	183	2-H16
41 74 124	03A	183	2-H16
41 74 157	03A	187	2-H20
41 74 181	03A	187	2-H20
41 74 199	03A	187	2-H20
41 74 314	03A	187	2-H20
41 74 371	03A	207	2-I16
41 74 371	03A	211	2-I20
41 74 389	03A	207	2-I16
41 74 389	03A	211	2-I20
41 74 397	03A	207	2-I16
41 74 397	03A	211	2-I20
41 74 405	03A	207	2-I16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 74 405	03A	211	2-I20
41 74 835	03A	191	2-H24
41 74 868	03B	079	3-D08
41 74 868	03B	103	3-E08
41 74 934	03A	113	2-E18
41 74 959	03A	161	2-G18
41 74 959	03A	175	2-H08
41 75 287	08C	027	6-L04
41 75 360	03A	189	2-H22
41 75 386	02	079	1-F08
41 75 394	03A	183	2-H16
41 75 402	03A	183	2-H16
41 75 428	03B	081	3-D10
41 75 428	03B	103	3-E08
41 75 444	03A	119	2-E24
41 75 451	03A	119	2-E24
41 75 469	03A	119	2-E24
41 76 012	03B	071	3-C24
41 76 079	03A	159	2-G16
41 76 095	03A	187	2-H20
41 76 137	03A	191	2-H24
41 76 186	03B	081	3-D10
41 76 186	03B	103	3-E08
41 76 210	03B	081	3-D10
41 76 210	03B	105	3-E10
41 76 244	03B	079	3-D08
41 76 244	03B	103	3-E08
41 76 269	03B	081	3-D10
41 76 269	03B	105	3-E10
41 76 368	03A	103	2-E08
41 76 582	03B	103	3-E08
41 76 616	03B	105	3-E10
41 76 806	03A	157	2-G14
41 76 814	03A	157	2-G14
41 76 822	03A	157	2-G14
41 76 830	03A	157	2-G14
41 76 848	03A	157	2-G14
41 76 855	03A	157	2-G14
41 76 863	03A	157	2-G14
41 76 871	03A	157	2-G14
41 76 889	03A	157	2-G14
41 76 905	03A	147	2-G04
41 76 962	03A	147	2-G04
41 77 010	03A	147	2-G04
41 77 028	03A	147	2-G04
41 77 036	03A	147	2-G04
41 77 044	03A	147	2-G04
41 77 077	03A	147	2-G04
41 77 085	03A	147	2-G04
41 77 093	03A	147	2-G04
41 77 101	03A	147	2-G04
41 77 135	03A	153	2-G10
41 77 143	03A	153	2-G10
41 77 150	03A	153	2-G10
41 77 168	03A	153	2-G10
41 77 259	03A	153	2-G10
41 77 267	03A	153	2-G10
41 77 366	03A	147	2-G04
41 77 374	03A	147	2-G04
41 77 390	03A	147	2-G04

Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 77 408	03A	147	2-G04
41 77 424	03A	147	2-G04
41 77 432	03A	147	2-G04
41 77 457	03A	147	2-G04
41 77 465	03A	147	2-G04
41 77 671	03A	147	2-G04
41 77 671	03A	153	2-G10
41 77 689	03A	147	2-G04
41 77 689	03A	153	2-G10
41 77 697	03A	147	2-G04
41 77 697	03A	153	2-G10
41 77 705	03A	147	2-G04
41 77 705	03A	153	2-G10
41 77 713	03A	147	2-G04
41 77 713	03A	153	2-G10
41 77 721	03A	147	2-G04
41 77 721	03A	153	2-G10
41 77 739	03A	147	2-G04
41 77 739	03A	153	2-G10
41 77 747	03A	147	2-G04
41 77 747	03A	153	2-G10
41 77 754	03A	147	2-G04
41 77 754	03A	153	2-G10
41 77 762	03A	147	2-G04
41 77 762	03A	153	2-G10
41 77 770	03A	147	2-G04
41 77 770	03A	153	2-G10
41 77 788	03A	147	2-G04
41 77 788	03A	153	2-G10
41 77 796	03A	147	2-G04
41 77 796	03A	153	2-G10
41 77 804	03A	147	2-G04
41 77 804	03A	153	2-G10
41 77 812	03A	149	2-G06
41 77 812	03A	153	2-G10
41 77 820	03A	147	2-G04
41 77 820	03A	153	2-G10
41 77 838	03A	147	2-G04
41 77 838	03A	153	2-G10
41 77 846	03A	147	2-G04
41 77 846	03A	153	2-G10
41 77 861	03A	155	2-G12
41 77 879	03A	155	2-G12
41 77 978	03A	147	2-G04
41 77 986	03A	147	2-G04
41 78 000	03A	153	2-G10
41 78 018	03A	153	2-G10
41 78 067	03A	147	2-G04
41 78 075	03A	147	2-G04
41 78 091	03A	147	2-G04
41 78 109	03A	147	2-G04
41 78 125	03A	147	2-G04
41 78 133	03A	147	2-G04
41 78 158	03A	149	2-G06
41 78 158	03A	153	2-G10
41 78 166	03A	149	2-G06
41 78 166	03A	153	2-G10
41 78 174	03A	149	2-G06
41 78 174	03A	153	2-G10
41 78 182	03A	149	2-G06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 78 182	03A	153	2-G10
41 78 190	03A	149	2-G06
41 78 190	03A	153	2-G10
41 78 208	03A	149	2-G06
41 78 208	03A	153	2-G10
41 78 216	03A	149	2-G06
41 78 216	03A	153	2-G10
41 78 224	03A	149	2-G06
41 78 224	03A	153	2-G10
41 78 232	03A	149	2-G06
41 78 232	03A	153	2-G10
41 78 414	03B	089	3-D18
41 78 455	03A	143	2-F24
41 78 455	03A	159	2-G16
41 78 463	03A	143	2-F24
41 78 463	03A	159	2-G16
41 78 463	03A	173	2-H06
41 78 471	03A	143	2-F24
41 78 471	03A	159	2-G16
41 78 471	03A	173	2-H06
41 78 505	03A	145	2-G02
41 78 505	03A	161	2-G18
41 78 505	03A	175	2-H08
41 78 513	03A	149	2-G06
41 78 513	03A	155	2-G12
41 78 521	03A	155	2-G12
41 78 539	03A	149	2-G06
41 78 539	03A	155	2-G12
41 78 612	03A	149	2-G06
41 78 612	03A	155	2-G12
41 78 620	03A	155	2-G12
41 78 638	03A	149	2-G06
41 78 638	03A	155	2-G12
41 78 646	03A	149	2-G06
41 78 646	03A	155	2-G12
41 79 446	03A	155	2-G12
41 79 461	03A	159	2-G16
41 79 495	03A	155	2-G12
41 79 503	03A	155	2-G12
41 79 644	03A	157	2-G14
41 79 719	03A	149	2-G06
41 79 719	03A	155	2-G12
41 79 784	03A	189	2-H22
41 79 933	03A	199	2-I08
41 79 933	03A	203	2-I12
41 79 933	08C	033	6-L10
41 79 958	03A	149	2-G06
41 79 958	03A	155	2-G12
41 79 958	03A	165	2-G22
41 79 958	03A	169	2-H02
41 90 021	02	161	1-I18
41 90 120	06	019	4-C20
41 90 138	06	019	4-C20
41 90 179	06	019	4-C20
41 90 187	06	019	4-C20
41 90 195	06	019	4-C20
41 90 492	03A	119	2-E24
41 90 617	05	011	4-A12
41 90 617	05	033	4-B10
41 90 773	05	011	4-A12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 90 807	04	007	3-H08
41 90 823	06	009	4-C10
41 92 910	06	007	4-C08
41 92 993	06	019	4-C20
41 93 132	07	021	4-E22
41 93 140	07	021	4-E22
41 93 157	09	005	7-A06
41 93 199	06	019	4-C20
41 93 249	07	025	4-F02
41 93 389	07	009	4-E10
41 93 397	07	009	4-E10
41 93 405	07	009	4-E10
41 93 413	07	009	4-E10
41 93 421	07	005	4-E06
41 93 421	07	009	4-E10
41 93 439	07	005	4-E06
41 93 439	07	009	4-E10
41 93 454	07	009	4-E10
41 93 462	07	009	4-E10
41 93 561	07	019	4-E20
41 93 587	07	013	4-E14
41 93 603	07	019	4-E20
41 93 629	07	019	4-E20
41 93 637	07	019	4-E20
41 93 645	07	019	4-E20
41 93 900	06	019	4-C20
41 93 991	06	009	4-C10
41 94 007	06	009	4-C10
41 94 015	06	009	4-C10
41 94 221	05	019	4-A20
41 94 221	05	021	4-A22
41 94 221	05	023	4-A24
41 94 254	07	027	4-F04
41 94 338	07	009	4-E10
41 94 379	06	019	4-C20
41 94 981	07	013	4-E14
41 94 999	07	013	4-E14
41 95 061	07	009	4 E10
41 95 103	07	025	4 F02
41 95 228	07	019	4-E20
41 95 228	07	025	4-F02
41 95 236	07	019	4-E20
41 95 236	07	025	4-F02
41 95 277	08A	005	5-A06
41 95 285	05	009	4-A10
41 95 293	03A	119	2-E24
41 95 327	07	009	4-E10
41 95 640	05	019	4-A20
41 95 657	05	019	4-A20
41 95 665	05	019	4-A20
41 95 673	05	021	4-A22
41 95 681	05	021	4-A22
41 95 772	05	011	4-A12
41 95 798	05	033	4-B10
41 95 822	04	035	3-I12
41 95 855	05	011	4-A12
41 95 855	05	035	4-B12
41 95 863	05	011	4-A12
41 95 871	05	011	4-A12
41 95 889	05	011	4-A12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 95 889	05	035	4-B12
41 95 897	05	011	4-A12
41 95 897	05	035	4-B12
41 95 954	09	005	7-A06
41 96 267	05	031	4-B08
41 96 275	05	031	4-B08
41 96 317	05	007	4-A08
41 96 317	05	031	4-B08
41 96 325	05	019	4-A20
41 96 325	05	023	4-A24
41 96 333	05	019	4-A20
41 96 333	05	023	4-A24
41 96 341	05	021	4-A22
41 97 356	08A	005	5-A06
41 97 380	06	019	4-C20
41 97 406	06	019	4-C20
41 97 422	07	019	4-E20
41 97 422	07	025	4-F02
41 97 422	07	027	4-F04
41 97 919	05	015	4-A16
41 97 927	03A	119	2-E24
41 97 935	05	023	4-A24
41 97 943	05	023	4-A24
41 97 950	05	023	4-A24
41 97 968	05	023	4-A24
41 98 065	05	015	4-A16
41 98 065	05	035	4-B12
41 98 073	05	015	4-A16
41 98 081	05	015	4-A16
41 98 081	05	035	4-B12
41 98 099	05	015	4-A16
41 98 099	05	035	4-B12
41 98 107	05	015	4-A16
41 98 107	05	035	4-B12
41 98 123	05	015	4-A16
41 98 123	05	037	4-B14
41 98 131	05	015	4-A16
41 98 131	05	037	4-B14
41 98 149	05	015	4-A16
41 98 222	05	015	4-A16
41 98 230	05	015	4-A16
41 98 271	05	015	4-A16
41 98 271	05	037	4-B14
41 98 289	05	015	4-A16
41 98 289	05	037	4-B14
41 98 297	05	015	4-A16
41 98 305	05	015	4-A16
41 98 313	05	015	4-A16
41 98 339	05	015	4-A16
41 98 347	05	015	4-A16
41 98 354	05	015	4-A16
41 98 362	05	015	4-A16
41 98 370	05	015	4-A16
41 98 388	05	015	4-A16
41 98 396	05	015	4-A16
41 98 412	05	015	4-A16
41 98 420	05	015	4-A16
41 98 438	05	015	4-A16
41 98 446	05	015	4-A16
41 98 461	05	017	4-A18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-B15 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 98 461	05	035	4-B12
41 98 479	05	017	4-A18
41 98 479	05	037	4-B14
41 98 487	05	017	4-A18
41 98 487	05	035	4-B12
41 98 503	05	015	4-A16
41 98 511	05	015	4-A16
41 98 511	05	035	4-B12
41 98 529	05	015	4-A16
41 98 529	05	035	4-B12
41 98 602	03A	119	2-E24
41 98 883	09	005	7-A06
41 98 891	09	005	7-A06
41 98 909	09	005	7-A06
41 98 941	05	031	4-B08
41 98 958	05	031	4-B08
41 99 360	07	013	4-E14
41 99 386	07	013	4-E14
41 99 402	07	009	4-E10
41 99 428	07	025	4-F02
41 99 444	07	019	4-E20
41 99 444	07	025	4-F02
41 99 626	03A	119	2-E24
41 99 923	06	013	4-C14
42 37 061	02	141	1-H22
42 50 114	08A	097	5-B02
42 50 114	08A	151	5-G08
42 50 197	03A	079	2-D08
42 50 205	03A	079	2-D08
42 50 262	08A	153	5-G10
42 50 320	08A	115	5-E20
42 50 320	08A	151	5-G08
42 50 320	08A	163	5-G20
42 50 460	08A	153	5-G10
42 50 676	08A	079	5-D08
42 50 692	08A	079	5-D08
42 51 021	03A	083	2-D12
42 51 039	08A	081	5-D10
42 51 039	08A	087	5-D16
42 51 047	08A	081	5-D10
42 51 047	08A	087	5-D16
42 51 054	08A	081	5-D10
42 51 054	08A	087	5-D16
42 51 062	08A	081	5-D10
42 51 062	08A	087	5-D16
42 51 294	08A	081	5-D10
42 51 294	08A	087	5-D16
42 51 302	08A	081	5-D10
42 51 302	08A	087	5-D16
42 51 336	08A	081	5-D10
42 51 336	08A	087	5-D16
42 51 344	08A	081	5-D10
42 51 344	08A	087	5-D16
42 51 476	03A	079	2-D08
42 51 484	03A	079	2-D08
42 51 518	08A	057	5-C10
42 51 518	08A	059	5-C12
42 51 658	08A	065	5-C18
42 51 658	08A	069	5-C22
42 51 666	08A	065	5-C18
42 51 674	08A	069	5-C22
42 51 708	08A	137	5-F18
42 51 716	08A	137	5-F18
42 51 799	08A	065	5-C16
42 51 831	03A	115	2-E20
42 51 856	03A	033	2-B10
42 51 864	03A	033	2-B10
42 51 906	08A	065	5-C18
42 51 914	08A	065	5-C18
42 51 922	08A	065	5-C18
42 51 930	08A	061	5-C14
42 51 930	08A	065	5-C18
42 51 930	08A	069	5-C22
42 51 955	08A	131	5-F12
42 51 955	08A	133	5-F14
42 51 955	08A	135	5-F16
42 51 955	08A	137	5-F18
42 51 955	08A	139	5-F20
42 51 955	08A	141	5-F22
42 51 997	03A	087	2-D16
42 52 250	03A	051	2-C04
42 52 250	03A	053	2-C06
42 52 268	03A	051	2-C04
42 52 268	03A	053	2-C06
42 52 276	03A	051	2-C04
42 52 276	03A	053	2-C06
42 52 284	03A	051	2-C04
42 52 284	03A	053	2-C06
42 52 292	03A	051	2-C04
42 52 292	03A	053	2-C06
42 52 300	03A	051	2-C04
42 52 300	03A	053	2-C06
42 52 425	09	009	7-A10
42 52 458	03A	087	2-D16
42 52 474	03A	073	2-D02
42 52 482	03A	073	2-D02
42 52 581	03A	047	2-B24
42 53 266	08A	091	5-D20
42 53 274	08A	091	5-D20
42 53 407	03A	039	2-B16
42 53 597	03A	059	2-C12
42 53 605	03A	059	2-C12
42 53 613	03A	059	2-C12
42 53 621	03A	059	2-C12
42 53 639	03A	061	2-C14
42 53 647	03A	063	2-C16
42 53 654	03A	063	2-C16
42 53 662	03A	063	2-C16
42 54 025	08A	079	5-D08
42 54 041	08A	079	5-D08
42 54 058	08A	079	5-D08
42 54 074	08A	079	5-D08
42 54 082	08A	079	5-D08
42 54 108	08A	079	5-D08
42 54 207	08A	083	5-D12
42 54 215	08A	083	5-D12
42 54 249	03A	065	2-C18
42 54 348	08A	117	5-E22
42 54 603	03A	079	2-D08
42 54 611	03A	087	2-D16
42 54 645	03A	087	2-D16
42 55 253	08B	183	6-H16
42 55 261	08B	183	6-H16
42 55 832	08B	159	6-G16
42 55 840	08B	159	6-G16
42 56 020	08B	205	6-I14
42 56 038	08B	205	6-I14
42 56 046	08B	205	6-I14
42 56 053	08B	205	6-I14
42 56 616	08B	045	6-B22
42 56 640	08B	035	6-B12
42 56 657	08B	037	6-B14
42 56 657	08B	051	6-C04
42 56 665	08B	037	6-B14
42 56 665	08B	053	6-C06
42 56 673	08B	039	6-B16
42 56 673	08B	055	6-C08
42 56 749	08B	161	6-G18
42 56 749	08B	177	6-H10
42 56 756	08B	161	6-G18
42 56 756	08B	177	6-H10
42 56 913	08B	023	6-A24
42 56 921	08B	021	6-A22
42 56 939	08B	197	6-I08
42 57 218	08B	035	6-B12
42 57 226	08B	035	6-B12
42 57 226	08B	051	6-C04
42 57 234	08B	037	6-B14
42 57 234	08B	053	6-C06
42 57 242	08B	039	6-B16
42 57 242	08B	055	6-C08
42 57 259	08B	039	6-B16
42 57 259	08B	057	6-C10
42 57 515	08B	019	6-A20
42 57 556	08B	157	6-G14
42 57 564	08B	157	6-G14
42 57 572	08B	155	6-G12
42 57 580	08B	155	6-G12
42 57 598	08B	157	6-G14
42 57 606	08B	157	6-G14
42 57 614	08B	155	6-G12
42 57 622	08B	155	6-G12
42 57 630	08B	157	6-G14
42 57 648	08B	157	6-G14
42 57 655	08B	155	6-G12
42 57 663	08B	155	6-G12
42 57 671	08B	159	6-G16
42 57 689	08B	159	6-G16
42 57 697	08B	159	6-G16
42 58 216	08B	047	6-B24
42 58 216	08B	061	6-C14
42 58 216	08B	075	6-D04
42 58 240	08B	047	6-B24
42 58 240	08B	061	6-C14
42 58 240	08B	075	6-D04
42 58 281	08B	047	6-B24
42 58 281	08B	061	6-C14
42 58 281	08B	075	6-D04
42 58 299	08B	047	6-B24
42 58 299	08B	061	6-C14
42 58 299	08B	075	6-D04
42 58 570	08B	047	6-B24
42 58 595	08B	191	6-H24
42 58 612	08B	047	6-B24
42 58 844	08B	167	6-G24
42 58 877	08B	167	6-G24
42 58 901	08B	167	6-G24
42 58 935	08B	167	6-G24
42 58 984	08B	153	6-G10
42 58 992	08B	153	6-G10
42 59 081	08B	021	6-A22
42 59 131	08B	047	6-B24
42 59 131	08B	061	6-C14
42 59 131	08B	075	6-D04
42 59 149	08B	047	6-B24
42 59 149	08B	061	6-C14
42 59 149	08B	075	6-D04
42 59 156	08B	047	6-B24
42 59 156	08B	061	6-C14
42 59 156	08B	075	6-D04
42 59 248	08B	023	6-A24
42 59 800	08B	023	6-A24
42 59 825	08B	153	6-G10
42 59 933	08B	153	6-G10
42 59 958	08B	019	6-A20
42 59 966	08B	019	6-A20
42 59 974	08B	025	6-B02
42 60 147	08B	153	6-G10
42 60 154	08B	153	6-G10
42 60 188	08B	151	6-G08
42 60 196	08B	151	6-G08
42 60 238	08B	153	6-G10
42 60 246	08B	153	6-G10
42 60 402	08B	203	6-I12
42 60 410	08B	203	6-I12
42 60 568	08A	111	5-E16
42 60 675	08B	023	6-A24
42 60 824	08B	143	6-F24
42 60 824	08B	145	6-G02
42 60 824	08B	147	6-G04
42 60 824	08B	149	6-G06
42 61 012	08B	019	6-A20
42 61 244	08B	143	6-F24
42 61 244	08B	147	6-G04
42 61 251	08B	143	6-F24
42 61 251	08B	147	6-G04
42 61 269	08B	143	6-F24
42 61 269	08B	147	6-G04
42 61 277	08B	143	6-F24
42 61 277	08B	147	6-G04
42 61 285	08B	143	6-F24
42 61 285	08B	147	6-G04
42 61 293	08B	143	6-F24
42 61 293	08B	147	6-G04
42 61 301	08B	143	6-F24
42 61 301	08B	147	6-G04
42 61 319	08B	143	6-F24
42 61 319	08B	147	6-G04
42 61 327	08B	145	6-G02
42 61 327	08B	149	6-G06

7-B16 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 61 335	08B	145	6-G02
42 61 335	08B	149	6-G06
42 61 376	08B	143	6-F24
42 61 376	08B	147	6-G04
42 61 392	08B	143	6-F24
42 61 392	08B	147	6-G04
42 61 426	08B	151	6-G08
42 61 434	08B	151	6-G08
42 61 467	08B	151	6-G08
42 61 475	08B	151	6-G08
42 62 242	08B	133	6-F14
42 63 455	08B	105	6-E10
42 63 455	08B	111	6-E16
42 63 455	08B	119	6-E24
42 63 455	08B	127	6-F08
42 63 463	08B	105	6-E10
42 63 463	08B	111	6-E16
42 63 463	08B	119	6-E24
42 63 463	08B	127	6-F08
42 63 471	08B	105	6-E10
42 63 471	08B	111	6-E16
42 63 471	08B	119	6-E24
42 63 471	08B	127	6-F08
42 63 562	08B	103	6-E08
42 63 562	08B	115	6-E20
42 63 570	08B	103	6-E08
42 63 570	08B	115	6-E20
42 63 588	08B	103	6-E08
42 63 588	08B	115	6-E20
42 63 596	08B	103	6-E08
42 63 596	08B	115	6-E20
42 63 604	08B	105	6-E10
42 63 604	08B	119	6-E24
42 63 612	08B	105	6-E10
42 63 612	08B	119	6-E24
42 63 620	08B	103	6-E08
42 63 620	08B	115	6-E20
42 63 638	08B	103	6-E08
42 63 638	08B	115	6-E20
42 63 687	08B	103	6-E08
42 63 687	08B	115	6-E20
42 63 695	08B	103	6-E08
42 63 695	08B	115	6-E20
42 63 885	08B	109	6-E14
42 63 885	08B	123	6-F04
42 63 893	08B	109	6-E14
42 63 893	08B	123	6-F04
42 63 901	08B	109	6-E14
42 63 901	08B	123	6-F04
42 63 919	08B	109	6-E14
42 63 919	08B	123	6-F04
42 63 927	08B	111	6-E16
42 63 927	08B	127	6-F08
42 63 935	08B	111	6-E16
42 63 935	08B	127	6-F08
42 63 943	08B	109	6-E14
42 63 943	08B	123	6-F04
42 63 950	08B	109	6-E14
42 63 950	08B	123	6-F04
42 64 008	08B	109	6-E14
42 64 008	08B	123	6-F04
42 64 016	08B	109	6-E14
42 64 016	08B	123	6-F04
42 64 214	08B	201	6-I10
42 64 222	08B	201	6-I10
42 64 230	08B	201	6-I10
42 64 289	08B	205	6-I14
42 64 305	08B	205	6-I14
42 64 370	08B	207	6-I16
42 64 388	08B	207	6-I16
42 64 404	08B	019	6-A20
42 64 446	08B	205	6-I14
42 64 461	08B	205	6-I14
42 64 479	08B	205	6-I14
42 64 503	09B	019	6-A20
42 64 644	08B	143	6-F24
42 64 644	08B	147	6-G04
42 64 651	08B	143	6-F24
42 64 651	08B	147	6-G04
42 64 669	08B	143	6-F24
42 64 669	08B	147	6-G04
42 64 677	08B	143	6-F24
42 64 677	08B	147	6-G04
42 64 685	08B	143	6-F24
42 64 685	08B	147	6-G04
42 64 693	08B	143	6-F24
42 64 693	08B	147	6-G04
42 64 743	08B	143	6-F24
42 64 743	08B	147	6-G04
42 64 768	08B	143	6-F24
42 64 768	08B	147	6-G04
42 64 784	08B	143	6-F24
42 64 784	08B	147	6-G04
42 64 800	08B	143	6-F24
42 64 800	08B	147	6-G04
42 64 826	08B	143	6-F24
42 64 826	08B	147	6-G04
42 64 842	08B	143	6-F24
42 64 842	08B	147	6-G04
42 64 941	08B	143	6-F24
42 64 941	08B	147	6-G04
42 64 958	08B	143	6-F24
42 64 958	08B	147	6-G04
42 64 966	08B	143	6-F24
42 64 966	08B	147	6-G04
42 65 047	08B	143	6-F24
42 65 047	08B	147	6-G04
42 65 054	08B	143	6-F24
42 65 054	08B	147	6-G04
42 65 062	08B	143	6-F24
42 65 062	08B	147	6-G04
42 65 096	08B	201	6-I10
42 65 104	08B	201	6-I10
42 65 112	08B	201	6-I10
42 65 120	08B	201	6-I10
42 65 146	08B	203	6-I12
42 65 153	08B	203	6-I12
42 65 161	08B	203	6-I12
42 65 179	08B	203	6-I12
42 65 187	08B	203	6-I12
42 65 195	08B	203	6-I12
42 65 203	08B	203	6-I12
42 65 211	08B	203	6-I12
42 65 328	08B	019	6-A20
42 65 336	08B	019	6-A20
42 65 468	08B	021	6-A22
42 65 476	08B	195	6-I04
42 65 484	08B	195	6-I04
42 65 815	08B	021	6-A22
42 65 823	08B	021	6-A22
42 66 003	09	005	7-A06
42 66 185	08B	019	6-A20
42 66 193	08B	019	6-A20
42 66 532	08B	201	6-I10
42 66 540	08B	153	6-G10
42 66 714	08B	117	6-E22
42 66 722	08B	117	6-E22
42 66 730	08B	125	6-F06
42 66 748	08B	125	6-F06
42 67 035	08B	117	6-E22
42 67 043	08B	117	6-E22
42 67 050	08B	117	6-E22
42 67 068	08B	117	6-E22
42 67 233	08B	125	6-F06
42 67 241	08B	125	6-F06
42 67 258	08B	125	6-F06
42 67 266	08B	125	6-F06
42 67 480	08B	153	6-G10
42 67 498	08B	153	6-G10
42 67 522	08B	153	6-G10
42 67 530	08B	153	6-G10
42 67 563	08B	153	6-G10
42 67 571	08B	153	6-G10
42 67 605	08B	201	6-I10
42 67 613	08B	201	6-I10
42 67 621	08B	201	6-I10
42 67 639	08B	201	6-I10
42 67 647	08B	201	6-I10
42 67 654	08B	191	6-H24
42 67 662	08B	191	6-H24
42 67 704	08B	193	6-I02
42 67 738	08B	019	6-A20
42 67 761	08B	193	6-I02
42 67 787	08B	201	6-I10
42 68 199	08B	019	6-A20
42 68 215	08B	107	6-E12
42 68 215	08B	119	6-E24
42 68 223	08B	107	6-E12
42 68 223	08B	119	6-E24
42 68 231	08B	113	6-E18
42 68 231	08B	127	6-F08
42 68 249	08B	113	6-E18
42 68 249	08B	127	6-F08
42 68 272	08B	199	6-I08
42 68 280	08B	199	6-I08
42 68 355	08B	131	6-F12
42 68 389	08A	111	5-E16
42 68 389	08A	157	5-G14
42 68 397	08A	113	5-E18
42 68 397	08A	157	5-G14
42 68 421	08A	113	5-E18
42 68 439	08A	113	5-E18
42 68 447	08B	193	6-I02
42 68 454	08B	201	6-I10
42 68 462	08B	201	6-I10
42 68 470	08B	201	6-I10
42 68 488	08B	201	6-I10
42 68 496	08B	201	6-I10
42 68 512	08B	203	6-I12
42 68 520	08B	203	6-I12
42 69 064	08B	103	6-E08
42 69 064	08B	115	6-E20
42 69 072	08B	103	6-E08
42 69 072	08B	115	6-E20
42 69 106	08B	103	6-E08
42 69 106	08B	115	6-E20
42 69 114	08B	103	6-E08
42 69 114	08B	115	6-E20
42 69 262	08B	109	6-E14
42 69 262	08B	123	6-F04
42 69 270	08B	109	6-E14
42 69 270	08B	123	6-F04
42 69 304	08B	109	6-E14
42 69 304	08B	123	6-F04
42 69 312	08B	109	6-E14
42 69 312	08B	123	6-F04
42 69 619	08B	103	6-E08
42 69 619	08B	115	6-E20
42 69 627	08B	103	6-E08
42 69 627	08B	115	6-E20
42 69 759	08A	031	5-B08
42 69 791	08B	131	6-F12
42 69 809	08B	199	6-I08
42 69 817	08B	199	6-I08
42 69 874	08B	131	6-F12
42 69 890	08B	145	6-G02
42 69 908	08B	145	6-G02
42 69 916	08B	145	6-G02
42 69 924	08B	145	6-G02
42 69 932	08B	145	6-G02
42 69 932	08B	149	6-G06
42 69 957	08A	057	5-C10
42 69 957	08A	059	5-C12
42 69 965	08B	145	6-G02
42 69 973	08B	145	6-G02
42 70 005	08B	191	6-H24
42 70 047	08B	107	6-E12
42 70 047	08B	113	6-E18
42 70 047	08B	119	6-E24
42 70 047	08B	127	6-F08
42 70 948	08A	069	5-C22
42 71 193	08B	151	6-G08
42 71 201	08B	151	6-G08
42 71 235	08B	191	6-H24
42 71 276	08B	025	6-B02
42 71 367	08B	019	6-A20
42 71 375	08B	019	6-A20
42 71 383	08B	019	6-A20
42 71 409	08B	021	6-A22
42 71 417	08B	021	6-A22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-B17 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 71 425	08B	021	6-A22
42 71 433	08B	021	6-A22
42 71 441	08B	023	6-A24
42 71 649	08B	023	6-A24
42 71 656	08B	023	6-A24
42 71 680	08B	021	6-A22
42 71 698	08B	021	6-A22
42 72 027	08B	019	6-A20
42 72 035	08B	019	6-A20
42 72 043	08B	019	6-A20
42 72 050	08B	019	6-A20
42 72 217	08B	149	6-G06
42 72 795	08B	115	6-E20
42 72 803	08B	115	6-E20
42 72 811	08B	115	6-E20
42 72 829	08B	115	6-E20
42 72 837	08B	115	6-E20
42 72 845	08B	115	6-E20
42 72 894	08B	123	6-F04
42 72 902	08B	123	6-F04
42 72 910	08B	123	6-F04
42 72 928	08B	123	6-F04
42 73 876	08B	119	6-E24
42 73 884	08B	119	6-E24
42 73 892	08B	119	6-E24
42 73 900	08B	119	6-E24
42 73 934	08B	119	6-E24
42 73 942	08B	119	6-E24
42 74 098	08B	127	6-F08
42 74 106	08B	127	6-F08
42 74 130	08B	127	6-F08
42 74 148	08B	127	6-F08
42 74 585	08B	021	6-A22
42 74 676	08B	023	6-A24
42 74 916	08B	019	6-A20
42 74 965	08B	149	6-G06
42 74 973	08B	149	6-G06
42 74 981	08B	149	6-G06
42 74 999	08B	149	6-G06
42 79 303	04	033	3-I10
42 79 410	08C	019	6-K20
42 79 410	08C	035	6-L12
42 79 535	04	033	3-I10
42 79 543	04	007	3-H08
42 79 808	04	055	3-J08
42 79 857	04	059	3-J12
42 79 923	04	055	3-J08
42 79 931	04	043	3-I20
42 80 020	04	055	3-J08
42 80 038	04	043	3-I20
42 80 046	04	043	3-I20
42 80 053	04	051	3-J04
42 80 061	04	047	3-I24
42 80 095	04	053	3-J06
42 80 103	04	053	3-J06
42 80 111	04	051	3-J04
42 80 152	04	039	3-I16
42 80 160	04	039	3-I16
42 80 194	04	039	3-I16
42 80 244	04	055	3-J08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 80 335	04	055	3-J08
42 80 343	04	039	3-I16
42 80 350	04	039	3-I16
42 80 376	04	027	3-I04
42 80 418	04	047	3-I24
42 80 426	04	049	3-J02
42 80 558	04	053	3-J06
42 80 582	04	041	3-I18
42 80 590	04	059	3-J12
42 80 657	04	065	3-J18
42 80 681	04	043	3-I20
42 80 723	04	065	3-J18
42 80 830	04	071	3-J24
42 80 855	04	071	3-J24
42 80 871	04	071	3-J24
42 80 921	04	009	3-H10
42 81 200	04	007	3-H08
42 81 218	04	071	3-J24
42 81 317	02	169	1-J02
42 81 374	04	071	3-J24
42 81 424	04	071	3-J24
42 81 457	04	071	3-J24
42 81 465	04	071	3-J24
42 81 481	04	071	3-J24
42 81 713	04	069	3-J22
42 81 804	04	065	3-J18
42 81 846	04	061	3-J14
42 81 861	04	055	3-J08
42 81 929	04	039	3-I16
42 81 937	04	039	3-I16
42 81 945	04	065	3-J18
42 83 032	06	025	4-D02
42 83 164	02	135	1-H16
42 83 164	08C	033	6-L10
42 83 222	02	147	1-I04
42 83 230	02	147	1-I04
42 84 188	02	135	1-H16
42 84 196	02	135	1-H16
42 84 204	02	147	1-I04
42 84 212	02	145	1-I02
42 84 279	02	151	1-I08
42 88 007	06	009	4-C10
42 88 189	08B	185	6-H18
42 88 205	08B	209	6-I18
42 88 221	08B	209	6-I18
42 88 270	08B	183	6-H16
42 88 288	08B	183	6-H16
42 88 296	08B	183	6-H16
42 88 304	08B	183	6-H16
42 88 411	08B	179	6-H12
42 88 429	08B	179	6-H12
42 88 437	08B	179	6-H12
42 88 445	08B	179	6-H12
42 88 684	08B	059	6-C12
42 88 684	08B	071	6-C24
42 88 692	08B	059	6-C12
42 88 692	08B	071	6-C24
42 88 718	08B	059	6-C12
42 88 718	08B	071	6-C24
42 88 825	08B	049	6-C02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 88 825	08B	063	6-C16
42 88 833	08B	049	6-C02
42 88 833	08B	063	6-C16
42 88 841	08B	049	6-C02
42 88 841	08B	063	6-C16
42 88 866	08B	049	6-C02
42 88 981	08B	049	6-C02
42 88 999	08B	049	6-C02
42 89 005	08B	049	6-C02
42 89 021	08B	049	6-C02
42 89 088	08B	049	6-C02
42 89 096	08B	049	6-C02
42 89 120	08B	049	6-C02
42 91 241	08B	061	6-C14
42 91 241	08B	073	6-D02
42 91 258	08B	061	6-C14
42 91 258	08B	073	6-D02
42 91 266	08B	061	6-C14
42 91 266	08B	073	6-D02
42 91 274	08B	061	6-C14
42 91 274	08B	073	6-D02
42 91 282	08B	061	6-C14
42 91 282	08B	073	6-D02
42 91 290	08B	061	6-C14
42 91 290	08B	073	6-D02
42 91 407	08B	061	6-C14
42 91 407	08B	075	6-D04
42 91 415	08B	061	6-C14
42 91 415	08B	075	6-D04
42 91 464	08B	053	6-C06
42 91 472	08B	053	6-C06
42 91 480	08B	055	6-C08
42 91 498	08B	055	6-C08
42 91 506	08B	057	6-C10
42 91 514	08B	057	6-C10
42 91 522	08B	053	6-C06
42 91 522	08B	065	6-C18
42 91 530	08B	053	6-C06
42 91 530	08B	065	6-C18
42 91 548	08B	055	6-C08
42 91 548	08B	067	6-C20
42 91 555	08B	055	6-C08
42 91 555	08B	067	6-C20
42 91 563	08B	057	6-C10
42 91 563	08B	069	6-C22
42 91 571	08B	057	6-C10
42 91 571	08B	069	6-C22
42 92 157	08B	059	6-C12
42 92 157	08B	071	6-C24
42 92 173	08B	059	6-C12
42 92 173	08B	071	6-C24
42 92 207	08B	059	6-C12
42 92 207	08B	071	6-C24
42 92 215	08B	059	6-C12
42 92 215	08B	071	6-C24
42 92 280	08B	059	6-C12
42 92 280	08B	071	6-C24
42 92 298	08B	059	6-C12
42 92 298	08B	071	6-C24
42 92 363	08B	049	6-C02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 92 363	08B	063	6-C16
42 92 371	08B	049	6-C02
42 92 371	08B	063	6-C16
42 92 421	08B	049	6-C02
42 92 421	08B	063	6-C16
42 92 439	08B	049	6-C02
42 92 439	08B	063	6-C16
42 92 488	08B	049	6-C02
42 92 488	08B	063	6-C16
42 92 504	08B	049	6-C02
42 92 504	08B	063	6-C16
42 92 553	08B	049	6-C02
42 92 561	08B	049	6-C02
42 92 579	08B	049	6-C02
42 92 629	08B	049	6-C02
42 92 637	08B	049	6-C02
42 92 678	08B	049	6-C02
42 92 710	08B	059	6-C12
42 92 710	08B	071	6-C24
42 92 744	08B	059	6-C12
42 92 744	08B	071	6-C24
42 92 777	08B	049	6-C02
42 92 777	08B	059	6-C12
42 92 777	08B	063	6-C16
42 92 777	08B	071	6-C24
42 92 801	08B	049	6-C02
42 92 801	08B	063	6-C16
42 92 835	08B	049	6-C02
42 92 835	08B	063	6-C16
42 92 884	08B	049	6-C02
42 92 918	08B	049	6-C02
42 92 934	08B	161	6-G18
42 92 934	08B	173	6-H06
42 93 007	08A	047	5-B24
42 93 015	08A	047	5-B24
42 93 031	08A	039	5-B16
42 93 049	08A	069	5-C22
42 93 064	08A	011	5-A12
42 93 072	08A	043	5-B20
42 93 080	08A	013	5-A14
42 93 106	08A	031	5-B08
42 93 114	08A	031	5-B08
42 93 122	08A	031	5-B08
42 93 130	08A	031	5-B08
42 93 148	08A	031	5-B08
42 93 155	08A	031	5-B08
42 93 163	08A	031	5-B08
42 93 171	08A	031	5-B08
42 93 189	08A	027	5-B04
42 93 189	08A	031	5-B08
42 93 197	08A	027	5-B04
42 93 197	08A	031	5-B08
42 93 213	08A	065	5-C18
42 93 346	08A	047	5-B24
42 93 460	08A	031	5-B08
42 93 478	08A	031	5-B08
42 93 486	08A	085	5-D14
42 93 486	08A	089	5-D18
42 93 486	08A	093	5-D22
42 93 619	03A	009	2-A10

7-B18 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
42 93 635	08A	123	5-F04
42 93 643	08A	123	5-F04
42 93 668	08A	031	5-B08
42 93 676	08A	031	5-B08
42 93 700	08A	019	5-A20
42 93 718	08A	019	5-A20
42 93 726	08A	023	5-A24
42 93 734	08A	019	5-A20
42 93 759	08A	035	5-B12
42 93 767	08A	005	5-A06
42 93 791	08A	031	5-B08
42 93 866	08A	027	5-B04
42 93 874	08A	027	5-B04
42 93 882	08A	023	5-A24
42 93 890	08A	031	5-B08
42 93 908	08A	035	5-B12
42 93 916	08A	009	5-A10
42 93 932	08A	025	5-B02
42 93 940	08A	025	5-B02
42 94 047	08A	045	5-B22
42 94 054	08A	045	5-B22
42 94 062	08A	085	5-D14
42 94 062	08A	089	5-D18
42 94 062	08A	093	5-D22
42 94 062	08A	105	5-E10
42 94 229	08A	027	5-B04
42 94 237	08A	027	5-B04
42 94 260	08A	029	5-B06
42 94 278	08A	029	5-B06
42 94 328	08A	027	5-B04
42 94 336	08A	027	5-B04
42 94 369	08A	099	5-E04
42 94 401	08A	035	5-B12
42 94 419	08A	035	5-B12
42 94 583	08A	025	5-B02
42 94 708	08A	031	5-B08
42 94 716	08A	031	5-B08
42 95 150	08A	045	5-B22
42 95 150	08A	047	5-B24
42 95 168	08A	045	5-B22
42 95 168	08A	047	5-B24
43 00 059	02	075	1-F04
43 00 075	03A	121	2-F02
43 00 109	03A	027	2-B04
43 00 109	03A	031	2-B08
43 00 125	03A	027	2-B04
43 00 125	03A	029	2-B06
43 00 125	03A	031	2-B08
43 00 224	02	075	1-F04
43 00 448	03A	029	2-B06
43 00 448	03A	031	2-B08
43 00 455	03A	029	2-B06
43 00 455	03A	031	2-B08
43 00 539	03A	121	2-F02
43 00 810	02	077	1-F06
43 01 669	02	109	1-G14
43 01 677	02	077	1-F06
43 03 145	08A	127	5-F08
43 03 152	08A	127	5-F08
43 03 186	08A	049	5-C0

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 03 186	08A	053	5-C06
43 03 202	08A	127	5-F08
43 03 210	08A	127	5-F08
43 03 244	08A	119	5-E24
43 03 251	08A	119	5-E24
43 03 277	08A	039	5-B16
43 03 608	08A	121	5-F02
43 03 616	08A	121	5-F02
43 03 624	08A	121	5-F02
43 03 632	08A	121	5-F02
43 03 699	08A	129	5-F10
43 03 707	08A	129	5-F10
43 03 731	08A	015	5-A16
43 03 830	08A	127	5-F08
43 03 848	08A	127	5-F08
43 03 913	08A	017	5-A18
43 03 921	08A	017	5-A18
43 03 962	08A	047	5-B24
43 04 168	08A	119	5-E24
43 04 176	08A	119	5-E24
43 04 184	08A	119	5-E24
43 04 192	08A	119	5-E24
43 04 200	08A	119	5-E24
43 04 218	08A	119	5-E24
43 04 234	08A	039	5-B16
43 04 234	08A	061	5-C14
43 04 234	08A	065	5-C18
43 04 242	08A	065	5-C18
43 04 242	08A	069	5-C22
43 04 341	08A	117	5-E22
43 04 564	08A	065	5-C18
43 04 648	08A	153	5-G10
43 04 663	08A	057	5-C10
43 04 663	08A	059	5-C12
43 04 846	08A	069	5-C22
43 04 911	03A	091	2-D20
43 04 929	03A	091	2-D20
43 05 181	08A	049	5-C02
43 05 181	08A	053	5-C06
43 05 199	08A	049	5-C02
43 05 199	08A	053	5-C06
43 05 330	08A	065	5-C18
43 05 603	08A	015	5-A16
43 05 777	08A	127	5-F08
43 05 884	08A	153	5-G10
43 05 918	08A	015	5-A16
43 06 031	08A	049	5-C02
43 06 049	08A	049	5-C02
43 06 056	08A	053	5-C06
43 06 064	08A	053	5-C06
43 06 106	08A	127	5-F08
43 06 114	08A	127	5-F08
43 06 122	08A	127	5-F08
43 06 130	08A	127	5-F08
43 06 171	08A	031	5-B08
43 06 411	08A	069	5-C22
43 06 437	08B	013	6-A14
43 06 510	08A	027	5-B04
43 06 510	08A	029	5-B06
43 06 528	08A	027	5-B04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 06 528	08A	029	5-B06
43 06 791	08A	049	5-C02
43 06 791	08A	053	5-C06
43 06 809	08A	049	5-C02
43 06 809	08A	053	5-C06
43 08 227	08B	167	6-G24
43 08 268	08B	167	6-G24
43 08 276	08B	167	6-G24
43 08 284	08B	167	6-G24
43 09 555	08B	069	6-C22
43 09 563	08B	069	6-C22
43 09 571	08B	069	6-C22
43 09 589	08B	155	6-G12
43 09 712	08B	167	6-G24
43 09 746	08B	167	6-G24
43 09 779	08B	167	6-G24
43 09 803	08B	167	6-G24
43 10 157	08B	069	6-C22
43 10 165	08B	069	6-C22
43 10 249	08B	069	6-C22
43 10 256	08B	069	6-C22
43 10 264	08B	069	6-C22
43 10 272	08B	069	6-C22
43 10 926	06	009	4-C10
43 11 023	08B	209	6-I18
43 11 031	08B	209	6-I18
43 11 049	08B	209	6-I18
43 11 056	08B	209	6-I18
43 11 270	06	007	4-C08
43 12 625	08B	177	6-H10
43 12 906	08B	009	6-A10
43 12 948	08B	181	6-H14
43 12 948	08B	185	6-H18
43 12 948	08B	187	6-H20
43 13 102	08B	045	6-B22
43 13 102	08B	061	6-C14
43 13 474	08B	043	6-B20
43 13 474	08B	059	6-C12
43 13 482	08B	045	6-B22
43 13 482	08B	061	6-C14
43 13 490	08B	045	6-B22
43 13 490	08B	047	6-B24
43 13 490	08B	061	6-C14
43 13 706	08B	043	6-B20
43 13 722	08B	211	6-I20
43 13 748	08B	173	6-H06
43 13 797	08B	173	6-H06
43 13 805	08B	173	6-H06
43 13 821	08B	183	6-H16
43 13 839	08B	183	6-H16
43 13 854	08B	183	6-H16
43 13 862	08B	183	6-H16
43 13 870	08B	179	6-H12
43 13 888	08B	179	6-H12
43 13 987	08B	173	6-H06
43 14 001	03A	103	2-E08
43 14 209	06	007	4-C08
43 14 555	08B	077	6-D06
43 14 563	08B	077	6-D06
43 14 571	08B	077	6-D06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 14 589	08B	077	6-D06
43 14 829	08B	069	6-C22
43 14 837	08B	069	6-C22
43 14 845	08B	069	6-C22
43 15 305	08B	177	6-H10
43 15 339	08B	179	6-H12
43 15 347	08B	179	6-H12
43 15 354	08B	183	6-H16
43 15 362	08B	183	6-H16
43 15 370	08B	179	6-H12
43 15 396	08B	179	6-H12
43 15 412	08B	185	6-H18
43 15 511	08B	077	6-D06
43 15 529	08B	077	6-D06
43 15 594	08B	077	6-D06
43 15 602	08B	077	6-D06
43 15 610	08B	077	6-D06
43 15 628	08B	077	6-D06
43 15 925	08B	059	6-C12
43 15 925	08B	071	6-C24
43 15 933	08B	059	6-C12
43 15 933	08B	071	6-C24
43 15 941	08B	059	6-C12
43 15 958	08B	059	6-C12
43 15 958	08B	071	6-C24
43 16 006	08B	059	6-C12
43 16 006	08B	071	6-C24
43 16 014	08B	059	6-C12
43 16 014	08B	071	6-C24
43 16 022	08B	059	6-C12
43 16 022	08B	071	6-C24
43 16 030	08B	059	6-C12
43 16 030	08B	071	6-C24
43 16 048	08B	059	6-C12
43 16 048	08B	071	6-C24
43 16 352	08B	053	6-C06
43 16 352	08B	065	6-C18
43 16 360	08B	053	6-C06
43 16 360	08B	065	6-C18
43 16 378	08B	053	6-C06
43 16 386	08B	053	6-C06
43 16 386	08B	065	6-C18
43 16 394	08B	055	6-C08
43 16 394	08B	067	6-C20
43 16 402	08B	055	6-C08
43 16 402	08B	067	6-C20
43 16 410	08B	055	6-C08
43 16 428	08B	055	6-C08
43 16 428	08B	067	6-C20
43 16 436	08B	057	6-C10
43 16 436	08B	069	6-C22
43 16 444	08B	057	6-C10
43 16 444	08B	069	6-C22
43 16 451	08B	057	6-C10
43 16 469	08B	057	6-C10
43 16 469	08B	069	6-C22
43 16 477	08B	051	6-C04
43 16 477	08B	065	6-C18
43 16 485	08B	051	6-C04
43 16 485	08B	065	6-C18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-B19 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 16 493	08B	051	6-C04
43 16 501	08B	051	6-C04
43 16 501	08B	065	6-C18
43 16 519	08B	057	6-C10
43 16 519	08B	069	6-C22
43 16 527	08B	057	6-C10
43 16 527	08B	069	6-C22
43 16 543	08B	057	6-C10
43 16 543	08B	069	6-C22
43 16 550	08B	049	6-C02
43 16 550	08B	063	6-C16
43 16 568	08B	049	6-C02
43 16 568	08B	063	6-C16
43 16 576	08B	049	6-C02
43 16 584	08B	049	6-C02
43 16 584	08B	063	6-C16
43 16 592	08B	049	6-C02
43 16 592	08B	063	6-C16
43 16 600	08B	049	6-C02
43 16 600	08B	063	6-C16
43 16 626	08B	049	6-C02
43 16 626	08B	063	6-C16
43 16 634	08B	053	6-C06
43 16 634	08B	067	6-C20
43 16 642	08B	053	6-C06
43 16 642	08B	067	6-C20
43 16 667	08B	053	6-C06
43 16 667	08B	067	6-C20
43 16 675	08B	055	6-C08
43 16 675	08B	067	6-C20
43 16 683	08B	055	6-C08
43 16 683	08B	067	6-C20
43 16 709	08B	055	6-C08
43 16 709	08B	067	6-C20
43 16 717	08B	051	6-C04
43 16 717	08B	065	6-C18
43 16 725	08B	051	6-C04
43 16 725	08B	065	6-C18
43 16 733	08B	051	6-C04
43 16 733	08B	065	6-C18
43 16 741	08B	051	6-C04
43 16 741	08B	065	6-C18
43 16 758	08B	051	6-C04
43 16 758	08B	065	6-C18
43 16 766	08B	051	6-C04
43 16 766	08B	065	6-C18
43 16 774	08B	055	6-C08
43 16 774	08B	067	6-C20
43 16 782	08B	055	6-C08
43 16 782	08B	067	6-C20
43 16 790	08B	055	6-C08
43 16 790	08B	067	6-C20
43 16 808	08B	055	6-C08
43 16 808	08B	067	6-C20
43 16 816	08B	055	6-C08
43 16 816	08B	067	6-C20
43 16 824	08B	055	6-C08
43 16 824	08B	067	6-C20
43 16 832	08B	051	6-C04
43 16 832	08B	065	6-C18
43 16 840	08B	051	6-C04
43 16 840	08B	065	6-C18
43 16 865	08B	057	6-C10
43 16 865	08B	069	6-C22
43 16 873	08B	057	6-C10
43 16 873	08B	069	6-C22
43 16 881	08B	057	6-C10
43 16 881	08B	069	6-C22
43 16 907	08B	057	6-C10
43 16 907	08B	069	6-C22
43 16 915	08B	053	6-C06
43 16 915	08B	065	6-C18
43 16 915	08B	067	6-C20
43 16 923	08B	053	6-C06
43 16 923	08B	065	6-C18
43 16 931	08B	053	6-C06
43 16 931	08B	065	6-C18
43 16 931	08B	067	6-C20
43 16 949	08B	053	6-C06
43 16 949	08B	065	6-C18
43 16 949	08B	067	6-C20
43 16 956	08B	053	6-C06
43 16 956	08B	065	6-C18
43 16 956	08B	067	6-C20
43 16 964	08B	053	6-C06
43 16 964	08B	065	6-C18
43 16 964	08B	067	6-C20
43 16 972	08B	057	6-C10
43 16 972	08B	069	6-C22
43 16 980	08B	057	6-C10
43 16 980	08B	069	6-C22
43 16 998	08B	057	6-C10
43 16 998	08B	069	6-C22
43 17 004	08B	057	6-C10
43 17 004	08B	069	6-C22
43 17 012	08B	049	6-C02
43 17 012	08B	063	6-C16
43 17 020	08B	049	6-C02
43 17 020	08B	063	6-C16
43 17 038	08B	049	6-C02
43 17 038	08B	063	6-C16
43 17 046	08B	049	6-C02
43 17 046	08B	063	6-C16
43 17 053	08B	049	6-C02
43 17 053	08B	063	6-C16
43 17 061	08B	049	6-C02
43 17 061	08B	063	6-C16
43 17 079	08B	053	6-C06
43 17 079	08B	065	6-C18
43 17 079	08B	067	6-C20
43 17 087	08B	053	6-C06
43 17 087	08B	065	6-C18
43 17 087	08B	067	6-C20
43 17 103	08B	055	6-C08
43 17 103	08B	067	6-C20
43 17 111	08B	055	6-C08
43 17 111	08B	067	6-C20
43 17 137	08B	049	6-C02
43 17 137	08B	063	6-C16
43 17 145	08B	049	6-C02
43 17 145	08B	063	6-C16
43 17 160	08B	051	6-C04
43 17 160	08B	065	6-C18
43 17 178	08B	051	6-C04
43 17 178	08B	065	6-C18
43 17 186	08B	051	6-C04
43 17 186	08B	065	6-C18
43 18 028	08C	025	6-L02
43 18 028	08C	027	6-L04
43 18 028	08C	029	6-L06
43 18 036	08C	023	6-K24
43 18 036	08C	027	6-L04
43 18 036	08C	029	6-L06
43 18 044	08C	023	6-K24
43 18 044	08C	027	6-L04
43 18 051	08C	023	6-K24
43 18 051	08C	027	6-L04
43 18 051	08C	029	6-L06
43 18 093	08C	019	6-K20
43 18 135	08C	019	6-K20
43 18 143	08C	019	6-K20
43 18 150	08C	019	6-K20
43 18 168	08C	019	6-K20
43 18 176	08C	019	6-K20
43 18 184	08C	019	6-K20
43 18 192	08C	019	6-K20
43 18 218	08C	023	6-K24
43 18 234	08C	023	6-K24
43 18 242	08C	023	6-K24
43 18 291	08C	033	6-L10
43 18 291	08C	035	6-L12
43 18 291	09	011	7-A12
43 18 309	09	011	7-A12
43 18 317	08C	023	6-K24
43 18 325	08C	027	6-L04
43 18 382	08C	025	6-L02
43 18 382	08C	033	6-L10
43 18 382	08C	035	6-L12
43 18 473	08C	027	6-L04
43 18 489	08A	019	5-A20
43 18 531	08C	025	6-L02
43 18 531	08C	033	6-L10
43 18 531	08C	035	6-L12
43 18 598	08A	019	5-A20
43 18 606	08A	019	5-A20
43 18 606	08C	037	6-L14
43 18 705	08C	023	6-K24
43 18 713	09	011	7-A12
43 18 721	09	011	7-A12
43 18 762	03A	105	2-E10
43 18 770	03A	105	2-E10
43 18 788	03A	105	2-E10
43 18 846	08A	031	5-B08
43 18 853	08A	031	5-B08
43 19 117	08C	023	6-K24
43 19 125	08C	023	6-K24
43 19 133	08C	023	6-K24
43 19 141	08C	023	6-K24
43 19 158	08C	023	6-K24
43 19 174	08C	015	6-K16
43 19 182	09	011	7-A12
43 19 190	08C	009	6-K10
43 19 216	08C	023	6-K24
43 19 570	08C	025	6-L02
43 19 570	08C	033	6-L10
43 19 570	08C	035	6-L12
43 19 588	08C	025	6-L02
43 19 588	08C	033	6-L10
43 19 588	08C	035	6-L12
43 19 646	08C	023	6-K24
43 19 802	08C	027	6-L04
43 19 810	08C	015	6-K16
43 19 828	08C	015	6-K16
43 19 968	08A	009	5-A10
43 19 984	08C	025	6-L02
43 19 984	08C	033	6-L10
43 19 984	08C	035	6-L12
43 20 016	08A	099	5-E04
43 20 123	03A	087	2-D16
43 20 255	03A	087	2-D16
43 20 339	03A	071	2-C24
43 20 453	03A	077	2-D06
43 20 461	08A	135	5-F16
43 20 479	08A	141	5-F22
43 20 529	08A	141	5-F22
43 20 545	03A	101	2-E06
43 20 586	09	009	7-A10
43 40 626	08A	137	5-F18
43 40 626	08A	139	5-F20
43 40 634	08A	137	5-F18
43 40 634	08A	139	5-F20
43 40 964	08A	099	5-E04
43 40 998	03A	055	2-C08
43 41 095	03A	057	2-C10
43 41 111	03A	087	2-D16
43 41 145	03A	087	2-D16
43 41 194	03A	067	2-C20
43 41 830	08A	091	5-D20
43 41 848	08A	091	5-D20
43 41 855	08A	091	5-D20
43 41 863	08A	091	5-D20
43 41 871	08A	091	5-D20
43 41 889	08A	091	5-D20
43 41 897	08A	091	5-D20
43 41 905	08A	091	5-D20
43 42 275	08A	105	5-E10
43 42 283	08A	105	5-E10
43 42 937	03A	055	2-C08
43 42 945	03A	055	2-C08
43 43 117	08A	095	5-D24
43 43 125	03A	039	2-B16
43 43 174	08A	099	5-E04
43 44 016	03A	055	2-C08
43 44 024	03A	055	2-C08
43 44 032	03A	055	2-C08
43 44 040	03A	055	2-C08
43 44 057	03A	055	2-C08
43 44 065	03A	055	2-C08
43 44 198	03A	057	2-C10

7-B20 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 44 206	03A	057	2-C10
43 44 214	08A	095	5-D24
43 44 222	03A	065	2-C18
43 44 339	09	009	7-A10
43 44 826	08A	099	5-E04
43 44 826	08A	155	5-G12
43 44 834	03A	067	2-C20
43 44 917	08A	079	5-D08
43 44 925	08A	091	5-D20
43 46 508	02	097	1-G02
43 50 088	09	011	7-A12
43 50 096	09	011	7-A12
43 50 104	09	011	7-A12
43 50 112	09	011	7-A12
43 50 161	03A	149	2-G06
43 50 161	03A	155	2-G12
43 50 161	03A	163	2-G20
43 50 161	03A	169	2-H02
43 50 328	03A	057	2-C10
43 50 336	03A	137	2-F18
43 50 443	03A	097	2-E02
43 50 476	03A	103	2-E08
43 50 526	03B	069	3-C22
43 50 526	03B	093	3-D22
43 50 526	03B	141	3-F22
43 50 757	03A	153	2-G10
43 50 765	03A	153	2-G10
43 50 799	03A	201	2-H10
43 50 799	03A	205	2-H14
43 50 807	03A	163	2-G20
43 50 864	03A	163	2-G20
43 50 872	03A	163	2-G20
43 50 880	03A	163	2-G20
43 50 898	03A	163	2-G20
43 50 906	03A	163	2-G20
43 50 914	03A	163	2-G20
43 50 922	03A	163	2-G20
43 50 963	03A	163	2-G20
43 50 989	03A	167	2-G24
43 50 997	03A	167	2-G24
43 51 003	03A	167	2-G24
43 51 011	03A	167	2-G24
43 51 029	03A	167	2-G24
43 51 037	03A	167	2-G24
43 51 052	03A	167	2-G24
43 51 060	03A	163	2-G20
43 51 078	03A	163	2-G20
43 51 128	03A	163	2-G20
43 51 136	03A	163	2-G20
43 51 144	03A	163	2-G20
43 51 151	03A	163	2-G20
43 51 243	03A	163	2-G20
43 51 276	03A	163	2-G20
43 51 284	03A	163	2-G20
43 51 391	03A	163	2-G20
43 51 409	03A	163	2-G20
43 51 565	03A	163	2-G20
43 51 664	03A	167	2-G24
43 51 672	03A	167	2-G24
43 51 680	03A	167	2-G24
43 51 698	03A	167	2-G24
43 51 706	03A	167	2-G24
43 51 714	03A	167	2-G24
43 51 722	03A	167	2-G24
43 51 730	03A	167	2-G24
43 51 748	03A	167	2-G24
43 51 755	03A	167	2-G24
43 51 763	03A	167	2-G24
43 51 771	03A	167	2-G24
43 51 847	03A	167	2-G24
43 51 854	03A	167	2-G24
43 51 862	03A	167	2-G24
43 51 870	03A	167	2-G24
43 51 888	03A	167	2-G24
43 51 896	03A	167	2-G24
43 51 953	03A	167	2-G24
43 51 961	03A	167	2-G24
43 52 027	03A	171	2-H04
43 52 035	03A	171	2-H04
43 52 043	03A	171	2-H04
43 52 050	03A	171	2-H04
43 52 068	03A	171	2-H04
43 52 076	03A	171	2-H04
43 52 126	03A	171	2-H04
43 52 134	03A	171	2-H04
43 52 142	03A	171	2-H04
43 52 159	03A	169	2-H02
43 52 233	03A	169	2-H02
43 52 266	03A	173	2-H06
43 52 266	08A	157	5-G14
43 52 290	03A	173	2-H06
43 52 308	03A	173	2-H06
43 52 316	03A	173	2-H06
43 52 340	03A	173	2-H06
43 52 357	03A	119	2-E24
43 52 365	03A	119	2-E24
43 52 373	03A	165	2-G22
43 52 373	03A	169	2-H02
43 52 381	03A	169	2-H02
43 52 407	03A	165	2-G22
43 52 407	03A	169	2-H02
43 52 415	03A	165	2-G22
43 52 415	03A	169	2-H02
43 52 423	03A	169	2-H02
43 52 431	03A	165	2-G22
43 52 431	03A	169	2-H02
43 52 449	03A	165	2-G22
43 52 449	03A	169	2-H02
43 52 456	03A	165	2-G22
43 52 456	03A	169	2-H02
43 52 464	03A	173	2-H06
43 52 464	08A	157	5-G14
43 52 472	03A	171	2-H04
43 52 886	03A	187	2-H20
43 52 936	03B	027	3-B04
43 52 936	03B	055	3-C08
43 52 936	03B	079	3-D08
43 52 936	03B	103	3-E08
43 52 969	03A	159	2-G16
43 52 977	03A	159	2-G16
43 52 993	03A	185	2-H18
43 53 538	03A	219	2-J04
43 53 637	03B	105	3-E10
43 53 660	03A	177	2-H10
43 53 728	03A	131	2-F12
43 53 728	03A	143	2-F24
43 53 736	03A	143	2-F24
43 53 744	03A	159	2-G16
43 53 769	03A	183	2-H16
43 53 785	03A	153	2-G10
43 54 031	03A	103	2-E08
43 54 049	03A	147	2-G04
43 54 056	03A	147	2-G04
43 54 106	09	011	7-A12
43 54 114	09	011	7-A12
43 54 130	09	011	7-A12
43 54 171	03B	089	3-D18
43 54 353	03B	105	3-E10
43 54 353	03B	137	3-F18
43 54 817	03A	219	2-J04
43 54 833	03B	097	3-E02
43 56 291	08C	019	6-K20
43 56 291	08C	033	6-L10
43 56 598	02	133	1-H14
43 56 606	02	135	1-H16
43 56 887	03A	011	2-A12
43 56 887	03A	015	2-A16
43 56 895	03A	011	2-A12
43 56 895	03A	013	2-A14
43 56 895	03A	015	2-A16
43 56 903	03A	011	2-A12
43 56 903	03A	013	2-A14
43 56 903	03A	015	2-A16
43 56 986	02	141	1-H22
43 56 994	02	139	1-H20
43 56 994	02	141	1-H22
43 57 067	08C	019	6-K20
43 57 067	08C	033	6-L10
43 57 604	02	151	1-J08
43 58 149	06	027	4-D04
43 59 006	02	133	1-H14
43 59 022	02	135	1-H16
43 68 007	08B	155	6-G12
43 68 015	08B	155	6-G12
43 68 023	08B	155	6-G12
43 68 031	08B	155	6-G12
43 68 049	08B	155	6-G12
43 68 056	08B	155	6-G12
43 68 064	08B	155	6-G12
43 68 072	08B	155	6-G12
43 68 080	08B	167	6-G24
43 68 098	08B	167	6-G24
43 68 106	08B	167	6-G24
43 68 114	08B	167	6-G24
43 68 122	08B	167	6-G24
43 68 130	08B	167	6-G24
43 68 148	08B	167	6-G24
43 68 155	08B	167	6-G24
43 68 593	08A	109	5-E14
43 68 593	08A	157	5-G14
43 68 601	08A	109	5-E14
43 68 601	08A	157	5-G14
43 68 527	06	009	4-C10
43 74 203	02	063	1-E16
43 74 211	02	063	1-E16
43 74 336	03A	023	2-A24
43 74 393	09	007	7-A08
43 74 419	09	007	7-A08
43 74 427	09	007	7-A08
43 74 484	09	009	7-A10
43 74 492	09	009	7-A10
43 80 036	08A	105	5-E10
43 80 283	08A	067	5-C20
43 80 291	03A	065	2-C18
43 80 309	03A	065	2-C18
43 80 317	03A	065	2-C18
43 80 325	03A	065	2-C18
43 80 382	03A	065	2-C18
43 80 390	03A	087	2-D16
43 80 416	08A	091	5-D20
43 80 424	08A	091	5-D20
43 80 515	03A	087	2-D16
43 80 531	08A	079	5-D08
43 80 549	08A	079	5-D08
43 80 770	08A	079	5-D08
43 80 788	08A	079	5-D08
43 81 448	03A	039	2-B16
43 81 455	03A	039	2-B16
43 81 463	03A	033	2-B10
43 81 471	03A	033	2-B10
43 81 489	03A	033	2-B10
43 81 778	03A	063	2-C16
43 81 786	03A	063	2-C16
43 81 844	03A	075	2-D04
43 81 851	03A	075	2-D04
43 82 263	08C	015	6-K16
43 82 271	08C	015	6-K16
43 82 370	08C	015	6-K16
43 82 388	08C	015	6-K16
43 82 404	08C	023	6-K24
43 82 404	08C	033	6-L10
43 82 404	08C	035	6-L12
43 82 420	08C	007	6-K08
43 82 545	08C	011	6-K12
43 82 610	08C	023	6-K24
43 82 610	08C	037	6-L14
43 82 628	08C	023	6-K24
43 82 628	08C	037	6-L14
43 82 636	08C	023	6-K24
43 82 636	08C	033	6-L10
43 82 644	08C	023	6-K24
43 82 644	08C	035	6-L12
43 82 735	08C	019	6-K20
43 82 735	08C	033	6-L10
43 82 743	08C	019	6-K20
43 82 743	08C	035	6-L12
43 82 750	08C	033	6-L10
43 82 750	08C	035	6-L12
43 82 826	08C	009	6-K10
43 82 933	08C	005	6-K06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-B21 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 83 063	08C	007	6-K08
43 83 063	08C	009	6-K10
43 83 071	08C	007	6-K08
43 83 071	08C	009	6-K10
43 83 220	09	011	7-A12
43 83 261	08C	015	6-K16
43 83 279	08C	015	6-K16
43 83 287	08C	015	6-K16
43 83 295	08C	015	6-K16
43 83 303	08C	015	6-K16
43 83 311	08C	015	6-K16
43 83 329	08C	015	6-K16
43 83 337	08C	015	6-K16
43 83 345	08C	015	6-K16
43 83 352	08C	015	6-K16
43 83 360	08C	015	6-K16
43 83 584	08C	025	6-L02
43 83 659	08A	031	5-B08
43 83 667	08A	031	5-B08
43 84 053	04	069	3-J22
43 84 079	04	007	3-H08
43 84 111	04	009	3-H10
43 84 426	04	039	3-I16
43 84 434	04	033	3-I10
43 84 442	04	033	3-I10
43 84 459	04	033	3-I10
43 85 019	04	009	3-H10
43 85 027	04	009	3-H10
43 85 035	04	009	3-H10
43 85 167	04	007	3-H08
43 85 860	04	007	3-H08
43 85 878	04	009	3-H10
43 87 528	04	037	3-I14
43 87 536	04	035	3-I12
43 90 266	02	131	1-H12
43 90 423	02	059	1-E12
43 90 431	02	059	1-E12
43 90 589	02	143	1-H24
43 91 058	02	059	1-E12
43 91 157	02	167	1-I24
43 91 553	02	161	1-I18
43 91 561	02	161	1-I18
43 91 595	02	061	1-E14
43 91 686	02	053	1-E06
43 91 959	02	039	1-D16
43 91 959	02	041	1-D18
43 92 312	09	013	7-A14
43 92 957	02	067	1-E20
43 93 195	02	067	1-E20
43 93 211	09	007	7-A08
43 93 229	09	007	7-A08
43 93 237	09	007	7-A08
43 93 328	02	083	1-F12
43 93 484	02	065	1-E18
43 93 484	02	067	1-E20
43 93 567	02	131	1-H12
43 93 575	02	125	1-H06
43 93 583	02	125	1-H06
43 93 583	02	131	1-H12
43 93 658	09	007	7-A08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
43 93 807	02	121	1-H02
43 93 807	02	127	1-H08
43 93 898	02	121	1-H02
43 93 898	02	123	1-H04
43 93 898	02	129	1-H10
43 95 034	02	139	1-H20
43 95 034	02	141	1-H22
43 95 448	03A	013	2-A14
44 09 983	03A	013	2-A14
44 09 991	03A	013	2-A14
44 10 007	03A	013	2-A14
44 13 852	08B	209	6-I18
44 13 860	08B	209	6-I18
44 14 546	08B	171	6-H04
44 14 553	08B	169	6-H02
44 15 972	06	007	4-C08
44 16 061	06	009	4-C10
44 16 087	06	009	4-C10
44 16 228	08B	073	6-D02
44 16 236	08B	073	6-D02
44 16 251	08B	073	6-D02
44 16 277	08B	073	6-D02
44 16 285	08B	073	6-D02
44 16 293	08B	073	6-D02
44 16 301	08B	073	6-D02
44 16 319	08B	073	6-D02
44 16 350	08B	177	6-H10
44 16 368	06	007	4-C08
44 16 525	08B	161	6-G18
44 16 525	08B	173	6-H06
44 16 590	08B	209	6-I18
44 18 331	03A	153	2-G10
44 18 349	03A	153	2-G10
44 18 364	03A	187	2-H20
44 18 372	08C	029	6-L06
44 18 380	03B	105	3-E10
44 18 513	03A	163	2-G20
44 18 521	03A	163	2-G20
44 18 547	03A	163	2-G20
44 18 554	03A	167	2-G24
44 18 562	03A	167	2-G24
44 18 570	03A	163	2-G20
44 18 596	03A	163	2-G20
44 18 810	03A	163	2-G20
44 18 919	03A	167	2-G24
44 18 927	03A	167	2-G24
44 19 057	03A	167	2-G24
44 19 065	03A	167	2-G24
44 19 073	03A	167	2-G24
44 19 081	03A	167	2-G24
44 19 099	03A	167	2-G24
44 19 107	03A	167	2-G24
44 19 149	03A	167	2-G24
44 19 529	03A	187	2-H20
44 19 545	03A	187	2-H20
44 24 172	03A	119	2-E24
44 24 602	06	019	4-C20
44 25 211	05	009	4-A10
44 25 229	05	009	4-A10
44 25 468	05	015	4-A16

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
44 25 534	04	035	3-I12
44 25 575	07	021	4-E22
44 25 583	07	021	4-E22
44 25 674	09	009	7-A10
44 25 690	05	011	4-A12
44 25 690	05	033	4-B10
44 25 708	05	015	4-A16
44 25 724	05	015	4-A16
44 25 732	05	011	4-A12
44 25 740	05	033	4-B10
44 26 003	06	005	4-C06
44 26 532	02	161	1-I18
44 27 852	03A	107	2-E12
44 28 215	08B	015	6-A16
44 32 472	03A	173	2-H06
44 32 480	03A	173	2-H06
44 32 589	03A	191	2-H24
44 32 746	09	011	7-A12
44 32 969	02	177	1-J10
44 33 124	03A	127	2-F08
44 33 124	03A	135	2-F16
44 33 124	03A	139	2-F20
44 33 132	03A	127	2-F08
44 33 132	03A	135	2-F16
44 33 132	03A	139	2-F20
44 33 140	03A	133	2-F14
44 33 140	03A	145	2-G02
44 33 157	03A	151	2-G08
44 33 157	03A	155	2-G12
44 33 157	03A	165	2-G22
44 33 157	03A	169	2-H02
44 33 165	03A	151	2-G08
44 33 165	03A	155	2-G12
44 33 165	03A	169	2-H02
44 33 173	03A	161	2-G18
44 33 173	03A	165	2-G22
44 33 173	03A	175	2-H08
44 33 181	03A	161	2-G18
44 33 181	03A	175	2-H08
44 33 306	02	177	1-J10
44 33 827	03A	097	2-E02
44 34 056	03A	013	2-A14
44 35 129	08A	105	5-E10
44 35 137	08A	105	5-E10
44 35 145	08A	167	5-G24
44 35 152	08A	167	5-G24
44 35 178	08A	105	5-E10
44 35 186	08A	105	5-E10
44 35 194	08A	165	5-G22
44 35 202	08A	165	5-G22
44 35 210	08A	165	5-G22
44 35 327	08A	135	5-F16
44 35 368	08A	079	5-D08
44 35 384	08A	079	5-D08
44 35 392	08A	079	5-D08
44 35 418	08A	079	5-D08
44 35 442	08A	099	5-E04
44 35 467	08A	079	5-D08
44 35 731	08A	079	5-D08
44 36 317	08B	009	6-A10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
44 36 325	08B	009	6-A10
44 36 333	08B	009	6-A10
44 36 341	08B	005	6-A06
44 36 358	08B	005	6-A06
44 36 366	08B	005	6-A06
44 36 374	08B	005	6-A06
44 36 382	08B	005	6-A06
44 36 390	08B	005	6-A06
44 36 465	08B	007	6-A08
44 36 473	08B	007	6-A08
44 36 481	08B	007	6-A08
44 36 499	08B	007	6-A08
44 36 507	08B	007	6-A08
44 36 515	08B	007	6-A08
44 36 648	08B	013	6-A14
44 36 655	08B	013	6-A14
44 36 663	08B	013	6-A14
44 37 018	08B	015	6-A16
44 37 026	08B	015	6-A16
44 37 034	08B	015	6-A16
44 37 208	03A	213	2-I22
44 37 216	03A	213	2-I22
44 39 014	03A	093	2-D22
44 39 113	03A	111	2-E16
44 39 121	03A	111	2-E16
44 40 020	02	123	1-H04
44 40 020	02	129	1-H10
44 40 079	02	061	1-E14
44 40 087	02	061	1-E14
44 40 103	02	061	1-E14
44 40 111	02	061	1-E14
44 40 137	02	061	1-E14
44 40 269	09	013	7-A14
44 40 988	09	007	7-A08
44 41 135	09	007	7-A08
44 41 184	02	061	1-E14
44 41 671	09	013	7-A14
44 41 689	02	059	1-E12
44 41 697	02	059	1-E12
44 46 266	08A	135	5-F16
44 46 290	08A	105	5-E10
44 46 290	08A	131	5-F12
44 46 290	08A	133	5-F14
44 46 290	08A	135	5-F16
44 46 290	08A	137	5-F18
44 46 290	08A	139	5-F20
44 46 290	08A	141	5-F22
44 46 605	08A	043	5-B20
44 47 116	08A	105	5-E10
44 47 116	08A	165	5-G22
44 47 124	08A	105	5-E10
44 47 124	08A	165	5-G22
44 47 603	08A	105	5-E10
44 47 611	08A	105	5-E10
44 47 629	08A	105	5-E10
44 47 637	08A	105	5-E10
44 47 736	03A	039	2-B16
44 47 744	03A	039	2-B16
44 47 751	03A	039	2-B16
44 48 049	03A	075	2-D04

7-B22 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
44 48 056	03A	075	2-D04
44 48 064	03A	075	2-D04
44 48 064	03A	215	2-I24
44 48 866	08A	105	5-E10
44 48 874	08A	105	5-E10
44 48 999	03A	067	2-C20
44 74 003	08B	073	6-D02
44 74 011	08B	071	6-C24
44 74 029	08B	063	6-C16
44 74 037	08B	069	6-C22
44 74 045	08B	067	6-C20
44 74 052	08B	065	6-C18
44 74 052	08B	067	6-C20
44 74 060	08B	065	6-C18
44 74 078	08B	063	6-C16
44 74 086	08B	067	6-C20
44 74 094	08B	069	6-C22
44 74 102	08B	065	6-C18
44 74 110	08B	063	6-C16
44 74 136	08B	071	6-C24
44 74 144	08B	071	6-C24
44 74 151	08B	073	6-D02
44 74 151	08B	075	6-D04
44 74 169	08B	073	6-D02
44 74 177	08B	073	6-D02
44 74 185	08B	069	6-C22
44 74 334	06	011	4-C12
44 75 513	08B	169	6-H02
44 75 513	08B	215	6-I24
44 75 539	08B	181	6-H14
44 75 539	08B	215	6-I24
44 75 547	08B	185	6-H18
44 75 547	08B	215	6-I24
44 78 046	04	065	3-J18
44 79 002	08B	021	6-A22
44 79 010	08B	021	6-A22
44 81 339	09	011	7-A12
44 85 009	08B	149	6-G06
44 85 017	08B	149	6-G06
44 85 025	08B	149	6-G06
44 85 033	08B	149	6-G06
44 85 082	08B	149	6-G06
44 85 090	08B	149	6-G06
44 85 116	08B	149	6-G06
44 85 124	08B	149	6-G06
44 89 308	03A	013	2-A14
44 89 316	03A	013	2-A14
44 92 211	08A	039	5-B16
44 99 778	08B	191	6-H24
45 25 028	02	055	1-E08
45 42 262	09	011	7-A12
45 42 270	09	011	7-A12
45 82 441	03A	149	2-G06
45 82 441	03A	155	2-G12
45 88 349	03B	027	3-B04
45 88 349	03B	055	3-C08
45 88 349	03B	079	3-D08
45 88 349	03B	103	3-E08
69 11 804	08A	105	5-E10
69 11 804	08A	141	5-F22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
69 11 895	08A	079	5-D08
69 15 706	08A	079	5-D08
69 18 031	08A	079	5-D08
69 19 658	08A	009	5-A10
69 21 142	08A	131	5-F12
69 21 142	08A	133	5-F14
69 21 142	08A	135	5-F16
69 30 572	08A	037	5-B14
69 30 572	08A	049	5-C02
69 30 572	08A	055	5-C08
69 30 572	08A	129	5-F10
69 37 981	08A	117	5-E22
69 37 981	08A	163	5-G20
69 38 906	08A	125	5-F06
69 38 914	08A	125	5-F06
69 39 755	08A	043	5-B20
69 39 805	08A	011	5-A12
69 39 839	08A	011	5-A12
69 41 017	08A	029	5-B06
69 42 429	08A	095	5-D24
69 42 619	09	013	7-A14
69 42 742	08A	137	5-F18
69 42 775	03A	179	2-H12
69 43 427	08A	071	5-C24
69 43 435	08A	071	5-C24
69 43 443	08A	071	5-C24
69 43 450	08A	071	5-C24
69 43 468	08A	059	5-C12
69 43 476	08A	059	5-C12
69 43 559	08A	159	5-G16
69 43 575	08A	079	5-D08
69 43 583	08A	079	5-D08
69 43 773	08A	137	5-F18
69 44 482	08A	061	5-C14
69 44 482	08A	069	5-C22
69 44 490	08A	061	5-C14
69 44 490	08A	069	5-C22
69 44 565	08A	061	5-C14
69 44 565	08A	069	5-C22
69 44 573	08A	061	5-C14
69 44 623	08A	131	5-F12
69 44 649	08A	131	5-F12
69 44 854	08A	137	5-F18
69 44 870	08A	137	5-F18
69 44 888	08A	137	5-F18
69 44 912	08A	137	5-F18
69 44 953	08A	137	5-F18
69 44 961	08A	137	5-F18
69 45 307	08A	045	5-B22
69 45 315	08A	045	5-B22
69 45 349	08A	045	5-B22
69 45 356	08A	045	5-B22
69 45 497	08A	065	5-C18
69 45 505	08A	029	5-B06
69 45 711	08A	067	5-C20
69 45 760	08A	067	5-C20
69 47 824	08A	057	5-C10
69 47 824	08A	059	5-C12
69 48 566	08A	117	5-E22
69 48 566	08A	163	5-G20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
69 48 574	08A	117	5-E22
69 48 574	08A	163	5-G20
69 48 590	08A	163	5-G20
69 48 681	08A	079	5-D08
69 48 871	08A	117	5-E22
69 48 871	08A	161	5-C18
69 48 897	08A	129	5-F10
69 48 905	08A	129	5-F10
69 48 962	08A	057	5-C10
69 48 962	08A	059	5-C12
69 48 970	08A	057	5-C10
69 48 970	08A	059	5-C12
69 51 974	08A	065	5-C18
69 51 974	08A	069	5-C22
69 54 069	08A	071	5-C24
69 54 077	08A	071	5-C24
69 54 085	08A	071	5-C24
69 54 093	08A	071	5-C24
69 54 101	08A	071	5-C24
69 54 119	08A	071	5-C24
69 54 127	08A	071	5-C24
69 54 135	08A	071	5-C24
69 54 176	08A	087	5-D16
69 54 184	08A	087	5-D16
69 54 861	08A	095	5-D24
69 54 861	08A	097	5-E02
69 54 879	08A	095	5-D24
69 54 879	08A	097	5-E02
69 54 929	08A	095	5-D24
69 54 952	08A	133	5-F14
69 55 009	08A	131	5-F12
69 55 009	08A	133	5-F14
69 55 033	08A	133	5-F14
69 55 173	08A	139	5-F20
69 55 322	08A	013	5-A14
69 55 512	08A	017	5-A18
69 55 520	08A	017	5-A18
69 55 561	08A	021	5-A22
69 55 678	08A	023	5-A24
69 56 189	08A	063	5-C16
69 56 247	08A	095	5-D24
69 56 254	08A	095	5-D24
69 56 270	08A	061	5-C14
69 56 288	08A	061	5-C14
69 56 288	08A	155	5-G12
69 56 411	08A	059	5-C12
69 56 429	08A	059	5-C12
69 56 593	08A	043	5-B20
69 56 601	08A	121	5-F02
69 56 668	08A	059	5-C12
69 56 676	08A	059	5-C12
69 56 684	09	013	7-A14
69 56 700	08A	119	5-E24
69 56 734	08A	117	5-E22
69 56 734	08A	163	5-G20
69 56 783	08A	129	5-F10
69 56 924	08A	151	5-G08
69 57 344	08A	015	5-A16
69 57 393	08A	039	5-B16
69 57 708	08A	045	5-B22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
69 57 708	08A	047	5-B24
69 57 955	08A	027	5-B04
69 58 003	08A	009	5-A10
69 58 011	08A	009	5-A10
69 58 904	08A	095	5-D24
69 58 987	08A	011	5-A12
69 59 001	08A	017	5-A18
69 59 027	08A	041	5-B18
69 59 100	08A	087	5-D16
69 59 142	08A	133	5-F14
69 59 142	08A	139	5-F20
69 59 175	08A	089	5-D18
69 59 225	08A	013	5-A14
69 59 258	08A	013	5-A14
69 59 266	08A	013	5-A14
69 59 274	08A	013	5-A14
69 59 282	08A	013	5-A14
69 59 464	08A	085	5-D14
69 59 464	08A	089	5-D18
69 59 464	08A	093	5-D22
69 59 464	08A	105	5-E10
69 59 464	08A	125	5-F06
69 59 464	08A	165	5-G22
69 59 464	08A	167	5-G24
69 59 464	08A	169	5-H02
69 59 712	08A	139	5-F20
69 59 720	08A	139	5-F20
69 59 753	08A	039	5-B16
69 59 787	08A	015	5-A16
69 59 795	08A	015	5-A16
69 59 795	08A	017	5-A18
69 59 803	08A	045	5-B22
69 59 811	08A	045	5-B22
69 60 066	08A	129	5-F10
69 60 785	08A	049	5-C02
69 60 785	08A	055	5-C08
69 60 785	08A	161	5-G18
69 60 793	08A	049	5-C02
69 60 793	08A	055	5-C08
69 60 793	08A	161	5-G18
69 60 926	08A	095	5-D24
69 60 926	08A	099	5-E04
69 60 926	08A	101	5-E06
69 60 926	08A	103	5-E08
69 60 926	08A	105	5-E10
69 60 975	08A	011	5-A12
69 61 049	08A	017	5-A18
69 61 064	08A	017	5-A18
69 61 270	08A	129	5-F10
69 61 288	03A	009	2-A10
69 61 700	08A	049	5-C02
69 61 700	08A	053	5-C06
69 61 700	08A	161	5-G18
69 61 718	08A	049	5-C02
69 61 718	08A	053	5-C06
69 61 718	08A	161	5-G18
69 61 783	08A	015	5-A16
69 61 791	08A	015	5-A16
69 61 858	08A	043	5-B20
69 61 866	08A	065	5-C18

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-H02
5 Brakes 4-A02
6 Front assembly, Steering 4-C02
7 Suspension, Wheels 4-E02
8A Body, external 5-A02
8B Body, internal 6-A02
8C Body, heating and ventilation 6-K02
9 Tools, Labels 7-A02
10 Numerical register 7-B02

7-B23 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 61 874	08A	065	5-C18
69 61 940	08A	023	5-A24
69 62 047	08A	129	5-F10
69 62 054	08A	129	5-F10
69 62 120	08A	085	5-D14
69 62 120	08A	089	5-D18
69 62 120	08A	093	5-D22
69 62 138	08A	085	5-D14
69 62 138	08A	089	5-D18
69 62 138	08A	093	5-D22
69 62 146	08A	085	5-D14
69 62 146	08A	089	5-D18
69 62 146	08A	093	5-D22
69 62 153	08A	085	5-D14
69 62 153	08A	089	5-D18
69 62 153	08A	093	5-D22
69 62 302	08A	137	5-F18
69 62 526	08A	065	5-C18
69 62 534	08A	065	5-C18
69 62 542	08A	011	5-A12
69 62 567	08A	065	5-C18
69 62 609	08A	023	5-A24
69 62 617	08A	023	5-A24
69 62 625	08A	011	5-A12
69 62 708	08A	097	5-E02
69 62 708	08A	161	5-G18
69 62 807	08A	117	5-E22
69 62 807	08A	161	5-G18
69 62 815	08A	117	5-E22
69 62 815	08A	161	5-G18
69 62 823	08A	043	5-B20
69 63 045	08A	129	5-F10
69 63 243	08A	079	5-D08
69 63 300	08A	075	5-D04
69 63 318	08A	075	5-D04
69 63 367	08A	079	5-D08
69 63 375	08A	079	5-D08
69 63 805	08A	017	5-A18
69 63 847	08A	015	5-A16
69 63 854	08A	015	5-A16
69 63 862	08A	015	5-A16
69 63 870	08A	015	5-A16
69 63 904	08A	011	5-A12
69 63 912	08A	011	5-A12
69 63 920	08A	011	5-A12
69 63 953	08A	065	5-C18
69 63 961	08A	029	5-B06
69 63 995	08A	065	5-C18
69 73 002	08A	029	5-B06
69 73 010	08A	029	5-B06
69 73 028	08A	029	5-B06
69 73 036	08A	029	5-B06
69 73 044	08A	029	5-B06
69 73 119	08A	061	5-C14
69 73 218	08A	039	5-B16
69 73 242	08A	137	5-F18
69 73 317	08A	065	5-C18
69 73 325	08A	045	5-B22
69 73 325	08A	047	5-B24
69 73 333	08A	045	5-B22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 73 333	08A	047	5-B24
69 73 432	08A	027	5-B04
69 73 440	08A	011	5-A12
69 73 515	08A	013	5-A14
69 73 549	08A	029	5-B06
69 73 556	08A	011	5-A12
69 73 564	08A	011	5-A12
69 73 622	08A	039	5-B16
69 73 671	08A	039	5-B16
69 73 689	08A	039	5-B16
69 73 689	08A	151	5-G08
69 73 697	08A	039	5-B16
69 73 697	08A	151	5-G08
69 73 762	08A	039	5-B16
69 73 770	08A	039	5-B16
69 73 788	08A	039	5-B16
69 73 788	08A	151	5-G08
69 73 804	08A	039	5-B16
69 73 812	08A	011	5-A12
69 73 820	08A	011	5-A12
69 73 838	08A	011	5-A12
69 73 861	05	019	4-A20
69 73 861	05	021	4-A22
69 73 861	05	023	4-A24
69 73 887	08A	131	5-F12
69 73 895	08A	013	5-A14
69 73 945	08A	139	5-F20
69 74 000	08A	065	5-C18
69 74 018	08A	017	5-A18
69 74 026	08A	013	5-A14
69 74 679	08A	017	5-A18
69 75 262	08A	015	5-A16
69 75 270	08A	015	5-A16
69 75 403	08A	067	5-C20
69 75 460	08A	029	5-B06
69 75 510	08A	029	5-B06
69 75 783	08A	049	5-C02
69 75 791	08A	049	5-C02
69 75 908	08A	053	5-C06
69 75 916	08A	053	5-C06
69 76 054	08A	035	5-B12
69 76 062	08A	035	5-B12
69 76 088	08A	035	5-B12
69 76 096	08A	035	5-B12
69 76 104	08A	035	5-B12
69 76 112	08A	035	5-B12
69 76 120	08A	035	5-B12
69 76 138	08A	035	5-B12
69 76 146	08A	035	5-B12
69 76 161	08A	035	5-B12
69 76 229	08A	029	5-B06
69 76 237	08A	029	5-B06
69 76 278	08A	009	5-A10
69 76 302	08A	035	5-B12
69 76 310	08A	035	5-B12
69 76 369	08A	065	5-C18
69 91 012	08A	057	5-C10
69 91 012	08A	059	5-C12
69 91 079	08A	087	5-D16
69 91 087	08A	119	5-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 91 095	08A	119	5-E24
69 91 103	08A	121	5-F02
69 91 111	08A	121	5-F02
69 91 244	08A	115	5-E20
69 91 244	08A	117	5-E22
69 91 244	08A	153	5-G10
69 91 244	08A	161	5-G18
69 91 491	08A	153	5-G10
69 91 509	08A	153	5-G10
69 91 533	08A	065	5-C18
69 91 541	08A	095	5-D24
69 91 558	08A	095	5-D24
69 91 574	08A	131	5-F12
69 91 608	08A	095	5-D24
69 91 616	08A	095	5-D24
69 91 624	08A	095	5-D24
69 91 673	08A	079	5-D08
69 91 855	08A	061	5-C14
69 91 863	08A	137	5-F18
69 91 871	08A	135	5-F16
69 91 871	08A	141	5-F22
69 91 954	08A	135	5-F16
69 91 954	08A	141	5-F22
69 92 028	08A	061	5-C14
69 92 028	08A	117	5-E22
69 92 028	08A	161	5-G18
69 92 325	08A	137	5-F18
69 92 325	08A	139	5-F20
69 92 614	08A	071	5-C24
69 92 622	08A	119	5-E24
69 92 630	08A	119	5-E24
69 92 648	08A	121	5-F02
69 92 655	08A	121	5-F02
69 92 663	08A	081	5-D10
69 92 671	08A	081	5-D10
69 92 689	08A	081	5-D10
69 92 697	08A	081	5-D10
69 92 705	08A	081	5-D10
69 92 713	08A	081	5-D10
69 92 721	08A	083	5-D12
69 92 739	08A	083	5-D12
69 92 747	08A	083	5-D12
69 92 754	08A	083	5-D12
69 92 762	08A	083	5-D12
69 92 770	08A	083	5-D12
69 92 838	08A	097	5-E02
69 92 838	08A	155	5-G12
69 92 895	08A	079	5-D08
69 92 903	08A	079	5-D08
69 92 929	08A	065	5-C18
69 92 960	08A	075	5-D04
69 93 026	08A	049	5-C02
69 93 034	08A	049	5-C02
69 93 042	08A	055	5-C08
69 93 059	08A	055	5-C08
69 93 174	08A	081	5-D10
69 93 174	08A	087	5-D16
69 93 182	08A	081	5-D10
69 93 182	08A	087	5-D16
69 93 190	08A	081	5-D10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
69 93 190	08A	087	5-D16
69 93 208	08A	081	5-D10
69 93 208	08A	087	5-D16
69 93 216	08A	131	5-F12
69 93 299	08A	081	5-D10
69 93 299	08A	087	5-D16
69 93 307	08A	081	5-D10
69 93 307	08A	087	5-D16
69 93 505	08A	083	5-D12
69 93 505	08A	167	5-G24
69 93 513	08A	083	5-D12
69 93 513	08A	167	5-G24
69 93 547	08A	071	5-C24
70 37 492	09	005	7-A06
70 38 342	02	057	1-E10
70 38 342	08A	005	5-A06
70 38 342	08A	023	5-A24
70 38 342	08A	037	5-B14
70 45 776	08B	005	6-A06
70 48 465	04	079	3-K08
70 48 473	04	075	3-K04
70 48 473	04	077	3-K06
70 48 473	04	079	3-K08
70 60 999	08A	101	5-E06
70 60 999	08A	103	5-E08
70 61 328	04	013	3-H14
70 61 328	08C	015	6-K16
70 84 197	03A	059	2-C12
70 84 197	03A	063	2-C16
70 84 197	03A	065	2-C18
70 84 197	03A	069	2-C22
70 84 197	03A	071	2-C24
70 88 073	08A	137	5-F18
70 88 073	08A	139	5-F20
70 88 073	08B	023	6-A24
71 08 491	03A	087	2-D16
71 08 491	03A	099	2-E04
71 08 491	03A	185	2-H18
71 08 491	03A	187	2-H20
71 08 491	03A	209	2-I18
71 08 491	03A	213	2-I22
71 08 491	08A	067	5-C20
71 16 452	03A	191	2-H24
71 17 880	03B	107	3-E12
71 17 880	03B	117	3-E22
71 17 880	03B	127	3-F08
71 17 880	03B	137	3-F18
71 21 239	03A	097	2-E02
71 54 719	03A	051	2-C04
71 54 719	03A	053	2-C06
71 54 719	03A	055	2-C08
71 54 719	03A	059	2-C12
71 54 719	03A	063	2-C16
71 54 719	03A	065	2-C18
71 54 727	03A	051	2-C04
71 54 727	03A	053	2-C06
71 54 727	03A	059	2-C12
71 54 727	03A	063	2-C16
71 54 727	03A	065	2-C18
71 55 021	03B	013	3-A14

7-B24 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
71 55 021	03B	041	3-B18
71 55 021	03B	065	3-C18
71 55 021	03B	089	3-D18
71 55 047	03B	127	3-F08
71 55 047	03B	137	3-F18
71 55 096	03B	013	3-A14
71 55 096	03B	039	3-B16
71 55 096	03B	061	3-C14
71 55 096	03B	087	3-D16
71 55 112	03B	005	3-A06
71 55 112	03B	033	3-B10
71 55 112	03B	057	3-C10
71 55 112	03B	083	3-D12
71 55 120	03B	005	3-A06
71 55 120	03B	033	3-B10
71 55 120	03B	057	3-C10
71 55 120	03B	083	3-D12
71 55 146	03B	115	3-E20
71 55 146	03B	125	3-F06
71 55 146	03B	135	3-F16
71 55 146	03B	145	3-G02
71 55 153	03B	107	3-E12
71 55 153	03B	117	3-E22
71 55 153	03B	127	3-F08
71 55 153	03B	137	3-F18
71 55 203	03B	113	3-E18
71 55 203	03B	125	3-F06
71 55 203	03B	135	3-F16
71 55 203	03B	145	3-G02
71 55 211	03B	107	3-E12
71 55 211	03B	117	3-E22
71 55 211	03B	127	3-F08
71 55 211	03B	137	3-F18
71 55 229	03B	107	3-E12
71 55 229	03B	117	3-E22
71 55 229	03B	127	3-F08
71 55 229	03B	137	3-F18
71 55 237	03B	107	3-E12
71 55 237	03B	117	3-E22
71 55 237	03B	127	3-F08
71 55 237	03B	137	3-F18
71 55 633	03B	115	3-E20
71 55 633	03B	125	3-F06
71 55 633	03B	135	3-F16
71 55 633	03B	145	3-G02
71 55 658	03B	107	3-E12
71 55 658	03B	117	3-E22
71 55 658	03B	127	3-F08
71 55 658	03B	137	3-F18
71 55 708	02	057	1-E10
71 55 708	08A	037	5-B14
71 55 716	03B	005	3-A06
71 55 716	03B	033	3-B10
71 55 716	03B	057	3-C10
71 55 716	03B	107	3-E12
71 55 716	03B	117	3-E22
71 55 716	03B	127	3-F08
71 55 716	03B	137	3-F18
71 56 409	03A	177	2-H10
71 56 409	03A	187	2-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
71 57 308	03A	039	2-B16
71 57 308	03A	047	2-B24
71 62 308	02	109	1-G14
71 62 308	08A	021	5-A22
71 63 066	02	057	1-E10
71 67 117	04	075	3-K04
71 67 117	04	077	3-K06
71 83 965	02	161	1-I18
71 83 973	02	161	1-I18
73 11 764	03A	015	2-A16
73 11 772	08B	189	6-H22
73 13 182	04	075	3-K04
73 13 240	04	075	3-K04
73 13 752	08A	005	5-A06
73 26 093	03A	179	2-H12
73 35 540	08A	103	5-E08
73 48 287	09	005	7-A06
73 52 651	04	007	3-H08
73 52 651	04	009	3-H10
73 73 251	08A	125	5-F06
73 73 269	08A	081	5-D10
73 73 269	08A	087	5-D18
73 73 269	08A	091	5-D20
73 73 269	08A	125	5-F06
73 73 269	08A	163	5-G20
73 73 269	08A	167	5-G24
73 73 269	08A	169	5-H02
73 98 266	08C	015	6-K15
73 98 266	08C	019	6-K20
73 98 266	08C	033	6-L10
73 98 266	08C	035	6-L12
73 98 282	08B	159	6-G16
73 98 290	06	007	4-C08
73 98 308	04	031	3-I08
73 98 324	06	007	4-C08
73 98 332	08B	013	6-A14
73 98 373	05	015	4-A16
73 98 373	06	019	4-C20
73 98 381	06	007	4-C08
73 98 407	02	163	1-I20
73 98 407	02	167	1-I24
73 98 415	02	131	1-H12
73 98 415	02	163	1-I20
73 98 415	02	167	1-I24
73 98 415	02	169	1-J02
73 98 423	03A	059	2-C12
73 98 423	03A	063	2-C16
73 98 423	03A	065	2-C18
73 98 423	03A	067	2-C20
73 98 423	03A	117	2-E22
73 98 423	08A	097	5-E02
73 98 423	08A	117	5-E22
73 98 423	08A	151	5-G08
73 98 423	08B	107	6-E12
73 98 423	08B	113	6-E18
73 98 423	08B	121	6-F02
73 98 423	08B	129	6-F10
73 98 456	03A	021	2-A22
73 98 464	02	063	1-E16
73 98 464	02	149	1-I06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
73 98 464	02	151	1-I08
73 98 464	02	175	1-J08
73 98 464	02	177	1-J10
73 98 464	05	029	4-B06
73 98 506	08A	163	5-G20
73 98 555	08A	045	5-B22
73 98 621	02	119	1-G24
73 98 688	08A	009	5-A10
73 98 746	02	131	1-H12
73 98 761	08A	049	5-C02
73 98 761	08A	053	5-C06
73 98 761	08A	055	5-C[illegible]
73 98 787	06	011	4-C1[illegible]
73 98 803	02	123	1-H04
73 98 829	08A	043	5-B20
73 98 829	08A	045	5-B22
73 98 829	08A	047	5-B24
73 98 852	06	011	4-C12
73 98 852	08C	033	6-L10
73 98 852	08C	035	6-L12
73 98 886	08A	061	5-C14
73 98 886	08A	065	5-C18
73 98 886	08A	069	5-C22
73 98 894	02	145	1-I02
73 98 894	02	147	1-I04
73 98 936	08B	137	6-F18
73 98 936	08B	141	6-F22
73 98 936	08B	145	6-G02
73 98 936	08B	149	6-G06
73 98 944	03A	099	2-E04
73 98 944	03A	177	2-H10
73 98 977	03A	099	2-E04
73 98 977	03A	177	2-H10
73 99 033	03A	119	2-E24
73 99 181	08A	043	5-B20
73 99 207	08C	007	6-K08
73 99 215	08B	009	6-A10
73 99 223	08A	043	5-B20
73 99 223	08A	045	5-B22
73 99 256	03A	111	2-E16
73 99 264	08B	081	6-D10
73 99 264	08B	087	6-D16
73 99 264	08B	093	6-D22
73 99 264	08B	099	6-E04
73 99 264	08B	105	6-E10
73 99 264	08B	107	6-E12
73 99 264	08B	111	6-E16
73 99 264	08B	119	6-E24
73 99 264	08B	127	6-F08
73 99 272	02	129	1-H10
73 99 330	07	007	4-E08
73 99 330	07	011	4-E12
73 99 348	08C	007	6-K08
73 99 355	02	079	1-F08
73 99 447	08A	065	5-C18
73 99 454	03A	083	2-D12
73 99 454	03A	103	2-E08
73 99 454	08A	007	5-A08
73 99 454	08A	011	5-A12
73 99 454	08A	013	5-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
73 99 454	08A	021	5-A22
73 99 454	08A	029	5-B06
73 99 470	08A	083	5-D12
73 99 470	08A	087	5-D16
73 99 470	08A	091	5-D20
73 99 470	08A	163	5-G20
73 99 488	08A	081	5-D10
73 99 488	08A	085	5-D14
73 99 488	08A	087	5-D16
73 99 488	08A	089	5-D18
73 99 488	08A	091	5-D20
73 99 488	08A	093	5-D22
73 99 488	08A	105	5-E10
73 99 438	08A	107	5-E12
73 99 488	08A	125	5-F06
73 99 488	08A	163	5-G20
73 99 488	08A	167	5-G24
73 99 488	08A	169	5-H02
73 99 496	08B	189	6-H22
73 99 520	03A	103	2-E08
73 99 520	03A	179	2-H12
73 99 579	08B	005	6-A06
73 99 587	03A	103	2-E08
73 99 603	02	149	1-I06
73 99 603	02	151	1-I08
73 99 603	02	175	1-J08
73 99 603	02	177	1-J10
73 99 611	02	149	1-I06
73 99 611	02	151	1-I08
73 99 611	02	175	1-I08
73 99 611	02	177	1-J10
73 99 652	04	069	3-J22
73 99 686	08B	023	6-A24
73 99 694	03A	183	2-H16
73 99 710	08A	061	5-C14
73 99 736	08A	061	5-C14
73 99 793	08B	213	6-I22
73 99 801	05	025	4-B02
73 99 801	05	027	4-B04
73 99 884	08A	131	5-F12
73 99 884	08A	133	5-F14
73 99 884	08A	135	5-F16
73 99 900	03A	075	2-D04
73 99 900	03A	087	2-D16
73 99 934	06	011	4-C12
74 78 142	03A	129	2-F10
74 78 142	03A	141	2-F22
74 78 142	03A	157	2-G14
74 78 142	03A	171	2-H04
74 80 056	03A	027	2-B04
74 80 569	02	015	1-C16
74 80 577	02	015	1-C16
74 80 643	02	035	1-D12
74 80 684	02	035	1-D12
74 80 841	02	035	1-D12
74 80 932	02	045	1-D22
74 81 062	02	045	1-D22
74 81 088	02	045	1-D22
74 81 336	02	069	1-E22
74 81 617	02	043	1-D20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C01 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
74 81 682	02	103	1-G08
74 81 690	02	103	1-G08
74 81 708	02	103	1-G08
74 81 757	02	015	1-C16
74 82 300	02	161	1-I18
74 82 490	02	099	1-G04
74 82 490	03A	021	2-A22
74 82 540	03A	021	2-A22
74 82 540	03A	027	2-B04
74 83 068	02	021	1-C22
74 83 183	02	099	1-G04
74 83 761	02	027	1-D04
74 84 363	02	087	1-F16
74 84 405	02	011	1-C12
74 84 405	02	015	1-C16
74 84 439	03A	025	2-B02
74 84 454	02	013	1-C14
74 84 504	03A	021	2-A22
74 84 512	03A	021	2-A22
74 84 520	03A	021	2-A22
74 84 801	02	011	1-C12
74 84 801	02	015	1-C16
74 84 850	02	163	1-I20
74 84 934	02	039	1-D16
74 84 934	02	041	1-D18
74 85 105	02	029	1-D06
74 85 576	02	169	1-J02
74 85 808	03A	027	2-B04
74 86 095	02	163	1-I20
74 86 129	02	069	1-E22
74 86 624	02	103	1-G08
74 86 806	02	011	1-C12
74 86 806	02	015	1-C16
74 86 806	02	085	1-F14
74 86 806	02	087	1-F16
74 86 806	02	089	1-F18
74 86 905	02	069	1-E22
74 86 913	02	069	1-E22
74 86 921	02	069	1-E22
74 86 921	02	071	1-E24
74 86 954	02	069	1-E22
74 86 954	02	071	1-E24
74 87 127	02	075	1-F04
74 87 937	09	007	7-A08
74 87 952	03A	021	2-A22
74 95 302	08C	005	6-K06
74 96 011	02	043	1-D20
74 96 011	02	171	1-J04
74 96 029	08A	085	5-D14
74 96 029	08A	089	5-D18
74 96 029	08A	093	5-D22
74 96 029	08A	163	5-G20
74 96 037	08A	085	5-D14
74 96 037	08A	089	5-D18
74 96 037	08A	093	5-D22
74 96 037	08A	163	5-G20
74 96 045	04	055	3-J08
74 96 045	04	081	3-K10
74 96 052	04	051	3-J04
74 96 052	04	081	3-K10
74 96 060	04	051	3-J04
74 96 060	04	081	3-K10
74 96 078	04	063	3-J16
74 96 078	04	081	3-K10
74 96 086	04	057	3-J10
74 96 086	04	081	3-K10
74 96 094	04	029	3-I06
74 96 094	04	041	3-I18
74 96 094	04	045	3-I22
74 96 094	04	051	3-J04
74 96 094	04	057	3-J10
74 96 094	04	063	3-J16
74 96 094	04	065	3-J18
74 96 094	04	067	3-J20
74 96 094	04	081	3-K10
74 96 102	04	029	3-I06
74 96 102	04	041	3-I18
74 96 102	04	045	3-I22
74 96 102	04	051	3-J04
74 96 102	04	057	3-J10
74 96 102	04	063	3-J16
74 96 102	04	065	3-J18
74 96 102	04	067	3-J20
74 96 102	04	083	3-K12
74 96 276	04	035	3-I12
74 96 292	02	033	1-D10
74 96 292	02	037	1-D14
74 96 326	08C	005	6-K06
74 97 001	08A	145	5-G02
74 97 019	08A	143	5-F24
74 97 019	08A	147	5-G04
74 97 043	08A	115	5-E20
74 97 043	08A	153	5-G10
74 97 050	08A	115	5-E20
74 97 050	08A	153	5-G10
74 97 064	08A	153	5-G10
75 00 069	02	013	1-C14
75 00 069	02	017	1-C18
75 00 069	02	171	1-J04
75 00 085	02	011	1-C12
75 00 085	02	015	1-C16
75 00 127	02	025	1-D02
75 00 697	02	025	1-D02
75 00 713	02	011	1-C12
75 00 713	02	015	1-C16
75 01 216	03A	025	2-B02
75 01 349	02	011	1-C12
75 01 349	02	015	1-C16
75 01 398	02	039	1-D16
75 01 398	02	041	1-D18
75 01 430	02	041	1-D18
75 01 612	02	101	1-G06
75 02 263	02	047	1-D24
75 03 600	03A	021	2-A22
75 04 483	03A	023	2-A24
75 04 483	03A	215	2-I24
75 04 491	03A	023	2-A24
75 04 491	03A	215	2-I24
75 04 509	03A	023	2-A24
75 04 509	03A	215	2-I24
75 04 517	03A	023	2-A24
75 04 517	03A	215	2-I24
75 04 525	03A	023	2-A24
75 04 673	02	099	1-G04
75 04 749	02	011	1-C12
75 04 749	02	015	1-C16
75 04 897	02	117	1-G22
75 05 134	02	011	1-C12
75 05 134	02	015	1-C16
75 05 241	02	173	1-J06
75 05 423	02	099	1-G04
75 06 264	02	099	1-G04
75 06 652	02	117	1-G22
75 06 793	03A	023	2-A24
75 07 072	02	069	1-E22
75 07 080	02	099	1-G04
75 07 247	02	153	1-I10
75 07 700	02	045	1-D22
75 07 973	02	085	1-F14
75 07 973	02	089	1-F18
75 07 973	02	091	1-F20
75 07 973	02	093	1-F22
75 07 973	02	095	1-F24
75 07 973	02	097	1-G02
75 07 973	02	117	1-G22
75 07 973	02	119	1-G24
75 08 690	02	025	1-D02
75 08 690	02	027	1-D04
75 08 708	02	039	1-D16
75 08 708	02	041	1-D18
75 08 955	02	039	1-D16
75 08 955	02	041	1-D18
75 08 955	02	043	1-D20
75 09 102	02	033	1-D10
75 09 102	02	037	1-D14
75 11 751	02	057	1-E10
75 11 751	02	059	1-E12
75 15 190	02	011	1-C12
75 15 190	02	017	1-C18
75 15 208	02	085	1-F14
75 15 208	02	087	1-F16
75 15 208	02	089	1-F18
75 15 208	02	091	1-F20
75 15 208	02	093	1-F22
75 15 208	02	095	1-F24
75 15 208	02	097	1-G02
75 15 547	02	011	1-C12
75 15 547	02	015	1-C16
75 15 588	02	171	1-J04
75 15 596	02	171	1-J04
75 16 248	02	019	1-C20
75 16 792	02	103	1-G08
75 16 859	02	019	1-C20
75 16 974	02	099	1-G04
75 17 048	02	011	1-C12
75 17 048	02	017	1-C18
75 17 113	02	025	1-D02
75 17 345	02	173	1-J06
75 17 642	02	117	1-G22
75 18 335	02	011	1-C12
75 18 335	02	015	1-C16
75 18 640	02	025	1-D02
75 18 970	02	045	1-D22
75 18 996	02	111	1-G16
75 18 996	02	113	1-G18
75 18 996	02	115	1-G20
75 18 996	02	171	1-J04
75 19 010	02	111	1-G16
75 19 010	02	113	1-G18
75 19 010	02	115	1-G20
75 19 085	03A	025	2-B02
75 19 101	03A	025	2-B02
75 19 135	03A	025	2-B02
75 19 143	02	013	1-C14
75 19 143	02	017	1-C18
75 19 143	03A	025	2-B02
75 19 432	02	121	1-H02
75 19 432	02	123	1-H04
75 19 432	02	125	1-H06
75 19 432	02	163	1-I20
75 19 432	02	165	1-I22
75 19 531	02	157	1-I14
75 19 697	02	013	1-C14
75 19 697	02	017	1-C18
75 19 697	02	157	1-I14
75 19 786	02	157	1-I14
75 20 018	02	157	1-I14
75 20 026	02	157	1-I14
75 20 034	02	157	1-I14
75 20 042	02	117	1-G22
75 20 042	02	119	1-G24
75 20 190	02	165	1-I22
75 20 224	02	163	1-I20
75 20 372	02	039	1-D16
75 20 372	02	043	1-D20
75 20 513	02	031	1-D08
75 20 521	02	031	1-D08
75 20 539	02	031	1-D08
75 20 927	02	031	1-D08
75 20 935	02	031	1-D08
75 20 943	02	031	1-D08
75 20 950	02	031	1-D08
75 20 968	02	031	1-D08
75 21 073	02	111	1-G16
75 21 222	02	011	1-C12
75 21 230	02	085	1-F14
75 21 230	02	087	1-F16
75 21 255	02	031	1-D08
75 21 313	02	011	1-C12
75 21 313	02	017	1-C18
75 21 321	02	163	1-I20
75 21 610	02	033	1-D10
75 21 875	02	101	1-G06
75 22 477	02	085	1-F14
75 22 477	02	087	1-F16
75 22 519	02	117	1-G22
75 22 519	02	119	1-G24
75 22 709	02	039	1-D16
75 22 709	02	041	1-D18
75 22 709	02	043	1-D20

7-C02 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 22 709	02	155	1-I12
75 23 822	02	041	1-D18
75 23 897	02	153	1-I10
75 23 962	02	011	1-C12
75 23 962	02	017	1-C18
75 23 962	02	171	1-J04
75 24 895	02	031	1-D08
75 24 903	02	031	1-D08
75 24 911	02	031	1-D08
75 24 929	02	031	1-D08
75 24 937	02	031	1-D08
75 25 710	02	069	1-E22
75 27 732	03A	017	2-A18
75 27 732	03A	019	2-A20
75 27 757	03A	017	2-A18
75 27 757	03A	019	2-A20
75 27 765	03A	017	2-A18
75 27 765	03A	019	2-A20
75 27 807	03A	017	2-A18
75 27 807	03A	019	2-A20
75 27 849	03A	017	2-A18
75 27 849	03A	019	2-A20
75 27 856	03A	017	2-A18
75 27 856	03A	019	2-A20
75 27 864	03A	017	2-A18
75 27 864	03A	019	2-A20
75 27 872	03A	017	2-A18
75 27 872	03A	019	2-A20
75 27 880	03A	017	2-A18
75 27 880	03A	019	2-A20
75 31 544	09	011	7-A12
75 33 136	02	161	1-I18
75 35 255	03A	017	2-A18
75 35 255	03A	019	2-A20
75 35 271	03A	017	2-A18
75 35 271	03A	019	2-A20
75 35 297	03A	017	2-A18
75 35 297	03A	019	2-A20
75 35 305	03A	017	2-A18
75 35 305	03A	019	2-A20
75 35 313	03A	017	2-A18
75 35 313	03A	019	2-A20
75 35 321	03A	017	2-A18
75 35 321	03A	019	2-A20
75 35 339	03A	017	2-A18
75 35 339	03A	019	2-A20
75 35 404	03A	085	2-D14
75 35 487	02	079	1-F08
75 36 444	02	161	1-I18
75 36 451	02	161	1-I18
75 36 501	02	161	1-I18
75 36 840	02	057	1-E10
75 36 857	02	009	1-C10
75 38 655	02	069	1-E22
75 38 663	02	069	1-E22
75 38 697	03A	029	2-B06
75 39 216	02	081	1-F10
75 39 240	02	083	1-F12
75 39 257	02	081	1-F10
75 39 257	02	083	1-F12
75 39 927	02	121	1-H02
75 39 950	02	069	1-E22
75 39 984	03A	185	2-H18
75 41 725	02	141	1-H22
75 41 733	02	141	1-H22
75 41 907	04	031	3-I08
75 41 907	04	033	3-I10
75 50 007	02	135	1-H16
75 50 015	02	135	1-H16
75 50 015	08C	037	6-L14
75 50 080	02	133	1-H14
75 50 098	02	133	1-H14
75 50 122	02	135	1-H16
75 50 130	08C	037	6-L14
75 50 346	02	137	1-H18
75 50 346	02	143	1-H24
75 50 346	08C	033	6-L10
75 50 346	08C	035	6-L12
75 50 353	02	137	1-H18
75 50 353	02	143	1-H24
75 50 353	08C	033	6-L10
75 50 353	08C	035	6-L12
75 50 361	06	019	4-C20
75 50 528	02	009	1-C10
75 50 650	04	071	3-J24
75 50 718	04	071	3-J24
75 50 726	04	071	3-J24
75 50 734	04	071	3-J24
75 50 742	04	071	3-J24
75 50 783	04	071	3-J24
75 50 841	04	071	3-J24
75 50 858	04	071	3-J24
75 50 973	04	071	3-J24
75 51 187	02	133	1-H14
75 51 328	02	009	1-C10
75 51 385	02	009	1-C10
75 51 641	06	019	4-C20
75 51 831	02	009	1-C10
75 51 963	02	009	1-C10
75 51 971	02	009	1-C10
75 52 102	04	079	3-K08
75 52 128	04	079	3-K08
75 52 151	04	049	3-J02
75 52 151	04	059	3-J12
75 52 151	04	083	3-K12
75 52 185	04	053	3-J06
75 52 193	04	053	3-J06
75 52 193	04	083	3-K12
75 52 201	04	055	3-J08
75 52 201	04	083	3-K12
75 52 235	04	055	3-J08
75 52 235	04	083	3-K12
75 52 243	04	053	3-J06
75 52 243	04	083	3-K12
75 52 250	04	043	3-I20
75 52 250	04	081	3-K10
75 52 250	04	083	3-K12
75 52 268	04	049	3-J02
75 52 268	04	083	3-K12
75 52 276	04	067	3-J20
75 52 276	04	081	3-K10
75 52 276	04	083	3-K12
75 52 292	04	053	3-J06
75 52 292	04	081	3-K10
75 52 326	04	059	3-J12
75 52 326	04	081	3-K10
75 52 342	04	067	3-J20
75 52 342	04	083	3-K12
75 52 771	04	059	3-J12
75 52 797	04	059	3-J12
75 52 805	04	055	3-J08
75 52 813	04	055	3-J08
75 52 821	04	055	3-J08
75 52 839	04	055	3-J08
75 52 847	04	055	3-J08
75 52 854	04	055	3-J08
75 52 862	04	055	3-J08
75 52 870	04	055	3-J08
75 52 896	04	047	3-I24
75 52 904	04	051	3-J04
75 52 912	04	049	3-J02
75 52 920	04	053	3-J06
75 52 961	04	049	3-J02
75 52 961	04	081	3-K10
75 52 979	04	049	3-J02
75 53 001	04	061	3-J14
75 53 050	04	053	3-J06
75 53 050	04	059	3-J12
75 53 050	04	081	3-K10
75 53 068	04	051	3-J04
75 53 068	04	053	3-J06
75 53 068	04	059	3-J12
75 53 068	04	081	3-K10
75 53 084	04	049	3-J02
75 53 084	04	081	3-K10
75 53 092	04	051	3-J04
75 53 092	04	053	3-J06
75 53 092	04	059	3-J12
75 53 092	04	081	3-K10
75 53 183	04	053	3-J06
75 53 183	04	081	3-K10
75 53 191	04	053	3-J06
75 53 191	04	081	3-K10
75 53 209	04	053	3-J06
75 53 209	04	081	3-K10
75 53 217	04	051	3-J04
75 53 217	04	053	3-J06
75 53 217	04	081	3-K10
75 53 225	04	053	3-J06
75 53 225	04	059	3-J12
75 53 225	04	081	3-K10
75 53 233	04	053	3-J06
75 53 233	04	059	3-J12
75 53 233	04	081	3-K10
75 53 241	04	053	3-J06
75 53 241	04	059	3-J12
75 53 241	04	081	3-K10
75 53 258	04	053	3-J06
75 53 258	04	081	3-K10
75 53 266	04	053	3-J06
75 53 266	04	059	3-J12
75 53 266	04	081	3-K10
75 53 274	04	053	3-J06
75 53 274	04	081	3-K10
75 53 308	08A	065	5-C18
75 53 324	08C	015	6-K16
75 53 365	04	071	3-J24
75 53 415	02	133	1-H14
75 53 449	04	041	3-I18
75 53 548	04	055	3-J08
75 53 605	04	055	3-J08
75 53 688	04	013	3-H14
75 53 688	04	041	3-I18
75 54 009	02	135	1-H16
75 54 017	02	135	1-H16
75 54 025	02	135	1-H16
75 54 033	02	135	1-H16
75 54 215	08B	005	6-A06
75 54 215	08C	015	6-K16
75 54 348	02	135	1-H16
75 54 538	02	149	1-I06
75 54 538	02	175	1-J08
75 54 546	02	149	1-I06
75 54 546	02	175	1-J08
75 54 553	04	033	3-I10
75 54 561	04	031	3-I08
75 54 629	04	059	3-J12
75 54 660	04	067	3-J20
75 54 678	04	067	3-J20
75 54 686	04	067	3-J20
75 54 694	04	067	3-J20
75 54 710	04	067	3-J20
75 54 736	04	067	3-J20
75 54 801	04	055	3-J08
75 54 868	04	049	3-J02
75 54 900	04	051	3-J04
75 54 926	04	043	3-I20
75 54 934	04	043	3-I20
75 54 967	04	045	3-I22
75 56 053	04	053	3-J06
75 56 061	04	053	3-J06
75 56 079	04	055	3-J08
75 56 095	04	067	3-J20
75 56 103	04	067	3-J20
75 56 111	04	067	3-J20
75 56 137	04	067	3-J20
75 56 145	04	067	3-J20
75 56 228	04	043	3-I20
75 56 228	04	083	3-K12
75 56 269	04	059	3-J12
75 56 319	04	047	3-I24
75 56 327	04	047	3-I24
75 56 848	04	067	3-J20
75 56 855	04	067	3-J20
75 56 863	04	067	3-J20
75 56 871	04	067	3-J20
75 56 889	04	067	3-J20
75 56 905	04	067	3-J20
75 56 913	04	067	3-J20
75 56 939	04	067	3-J20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C03 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
75 56 996	04	045	3-I22
75 56 996	04	083	3-K12
75 57 069	04	059	3-J12
75 57 085	04	055	3-J08
75 57 035	04	081	3-K10
75 57 093	04	045	3-I22
75 57 101	04	059	3-J12
75 57 143	04	049	3-J02
75 57 150	04	049	3-J02
75 57 168	04	049	3-J02
75 57 176	04	049	3-J02
75 57 184	04	047	3-I24
75 57 192	04	047	3-I24
75 57 200	04	047	3-I24
75 57 218	04	047	3-I24
75 57 226	04	047	3-I24
75 57 234	04	047	3-I24
75 57 242	04	047	3-I24
75 57 259	04	047	3-I24
75 57 267	04	047	3-I24
75 57 275	04	047	3-I24
75 57 440	04	053	3-J06
75 57 457	04	053	3-J06
75 57 457	04	083	3-K12
75 57 465	04	063	3-J16
75 57 465	04	083	3-K12
75 57 747	04	047	3-I24
75 57 754	04	043	3-I20
75 57 754	04	047	3-I24
75 57 754	04	065	3-J18
75 57 762	04	067	3-J20
75 57 804	04	043	3-I20
75 57 804	04	063	3-J16
75 57 846	04	065	3-J18
75 57 887	04	043	3-I20
75 57 895	04	043	3-I20
75 57 903	04	067	3-J20
75 57 952	04	067	3-J20
75 57 986	04	047	3-I24
75 58 232	04	043	3-I20
75 58 240	04	043	3-I20
75 58 356	04	045	3-I22
75 58 356	04	083	3-K12
75 58 406	04	041	3-I18
75 58 406	04	083	3-K12
75 58 430	04	027	3-I04
75 58 430	04	061	3-J14
75 58 448	04	027	3-I04
75 58 455	04	059	3-J12
75 58 497	04	027	3-I04
75 58 497	04	041	3-I18
75 58 505	04	041	3-I18
75 58 513	04	067	3-J20
75 58 521	04	045	3-I22
75 58 786	04	049	3-J02
75 58 786	04	081	3-K10
75 58 828	04	043	3-I20
75 58 836	04	067	3-J20
75 58 950	04	027	3-I04
75 58 950	04	079	3-K08
75 59 008	04	043	3-I20
75 59 024	04	051	3-J04
75 59 537	02	149	1-I06
75 59 537	02	151	1-I08
75 59 537	02	175	1-J08
75 59 768	02	149	1-I06
75 59 768	02	151	1-I08
75 59 776	02	143	1-H24
75 59 859	04	031	3-I08
75 59 875	04	031	3-I08
75 59 875	04	033	3-I10
75 60 105	02	041	1-D18
75 60 139	02	039	1-D16
75 60 154	02	011	1-C12
75 60 162	02	069	1-E22
75 60 170	02	069	1-E22
75 60 931	02	011	1-C12
75 60 931	02	017	1-C18
75 60 964	02	011	1-C12
75 61 210	02	069	1-E22
75 61 210	02	071	1-E24
75 61 301	02	171	1-J04
75 61 467	02	011	1-C12
75 61 756	02	157	1-I14
75 62 259	02	031	1-D08
75 62 275	02	031	1-D08
75 62 515	02	113	1-G18
75 63 042	02	039	1-D16
75 63 042	02	041	1-D18
75 63 042	02	043	1-D20
75 63 075	02	013	1-C14
75 63 075	02	017	1-C18
75 63 679	02	019	1-C20
75 64 065	02	099	1-G04
75 64 321	02	121	1-H02
75 64 321	02	123	1-H04
75 64 321	02	127	1-H08
75 64 321	02	129	1-H10
75 64 420	03A	025	2-B02
75 64 834	02	099	1-G04
75 65 104	02	155	1-I12
75 65 583	02	163	1-I20
75 65 583	02	165	1-I22
75 65 591	02	165	1-I22
75 65 716	02	163	1-I20
75 65 716	02	165	1-I22
75 66 276	02	099	1-G04
75 66 284	02	101	1-G06
75 66 292	02	161	1-I18
75 66 300	02	099	1-G04
75 66 433	02	039	1-D16
75 66 433	02	041	1-D18
75 66 474	02	041	1-D18
75 66 474	02	045	1-D22
75 66 581	02	153	1-I10
75 66 581	02	173	1-J06
75 66 730	02	069	1-E22
75 66 748	02	067	1-F16
75 67 514	02	157	1-I14
75 68 801	02	169	1-J02
75 68 934	02	037	1-D14
75 68 942	02	031	1-D08
75 68 942	02	037	1-D14
75 69 304	02	011	1-C12
75 69 304	02	017	1-C18
75 69 304	02	171	1-J04
75 69 734	02	011	1-C12
75 69 809	02	033	1-D10
75 69 809	02	037	1-D14
75 69 916	02	117	1-G22
75 69 916	02	119	1-G24
75 70 146	04	053	3-J06
75 70 294	04	065	3-J18
75 70 310	04	065	3-J18
75 70 351	04	049	3-J02
75 70 526	04	051	3-J04
75 70 542	04	041	3-I18
75 70 542	04	083	3-K12
75 70 666	04	059	3-J12
75 70 740	04	049	3-J02
75 70 740	04	081	3-K10
75 70 757	02	149	1-I06
75 70 757	02	151	1-I08
75 70 757	02	175	1-J08
75 70 757	02	177	1-J10
75 70 823	02	149	1-I06
75 70 823	02	151	1-I08
75 70 823	02	175	1-J08
75 70 823	02	177	1-J10
75 71 334	04	043	3-I20
75 71 391	04	079	3-K08
75 71 391	04	083	3-K12
75 71 490	04	045	3-I22
75 71 508	04	067	3-J20
75 71 516	04	067	3-J20
75 71 524	04	067	3-J20
75 71 532	04	067	3-J20
75 71 540	04	067	3-J20
75 71 557	04	067	3-J20
75 71 565	04	067	3-J20
75 71 573	04	067	3-J20
75 71 581	04	067	3-J20
75 71 599	04	067	3-J20
75 71 854	04	027	3-I04
75 71 862	04	027	3-I04
75 71 896	04	079	3-K08
75 71 904	04	079	3-K08
75 71 938	04	059	3-J12
75 71 961	04	059	3-J12
75 71 979	04	059	3-J12
75 72 159	04	041	3-I18
75 72 175	04	041	3-I18
75 72 175	04	083	3-K12
75 72 530	04	053	3-J06
75 72 571	04	055	3-J08
75 72 571	04	081	3-K10
75 72 605	04	049	3-J02
75 72 605	04	081	3-K10
75 72 613	04	049	3-J02
75 72 613	04	081	3-K10
75 72 621	04	049	3-J02
75 72 621	04	081	3-K10
75 72 639	04	049	3-J02
75 72 639	04	081	3-K10
75 72 704	04	051	3-J04
75 72 704	04	081	3-K10
75 72 886	02	145	1-I02
75 72 894	02	145	1-I02
75 72 944	02	145	1-I02
75 72 985	02	145	1-I02
75 73 132	09	009	7-A10
75 73 280	04	049	3-J02
75 73 413	02	009	1-C10
75 73 694	06	019	4-C20
75 73 744	02	175	1-J08
75 73 751	02	175	1-J08
75 73 769	02	175	1-J08
75 73 777	02	149	1-I06
75 73 777	02	175	1-J08
75 73 819	04	045	3-I22
75 73 934	04	067	3-J20
75 74 031	04	043	3-I20
75 74 130	04	067	3-J20
75 74 205	04	063	3-J16
75 74 221	04	063	3-J16
75 74 817	04	053	3-J06
75 74 833	04	049	3-J02
75 74 833	04	083	3-K12
75 74 841	04	049	3-J02
75 74 890	04	049	3-J02
75 74 890	04	081	3-K10
75 75 038	04	061	3-J14
75 75 392	04	069	3-J22
75 75 442	04	079	3-K08
75 75 509	04	029	3-I06
75 75 509	04	079	3-K08
75 75 525	04	045	3-I22
75 75 525	04	079	3-K08
75 75 566	04	029	3-I06
75 75 566	04	079	3-K08
75 75 574	04	029	3-I06
75 75 574	04	079	3-K08
75 75 624	04	051	3-J04
75 75 632	04	051	3-J04
75 75 871	06	023	4-C24
75 75 889	06	023	4-C24
75 76 077	04	049	3-J02
75 76 200	02	133	1-H14
75 76 218	08C	021	6-K22
75 76 242	06	023	4-C24
75 76 382	02	133	1-H14
75 76 390	02	135	1-H16
75 76 416	04	031	3-I08
75 76 416	04	033	3-I10
75 76 580	08B	173	6-H06
75 76 580	08C	015	6-K16
75 76 663	02	135	1-H16
75 76 671	02	135	1-H16
75 76 689	04	031	3-I08
75 76 788	04	043	3-I20

7-C04 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
75 76 796	04	055	3-J08
75 76 796	04	081	3-K10
75 76 846	04	055	3-J08
75 76 853	04	055	3-J08
75 76 853	04	081	3-K10
75 76 911	04	041	3-I18
75 76 937	04	043	3-I20
75 76 960	02	137	1-H18
75 76 960	02	177	1-J10
75 76 960	08C	035	6-L12
75 77 042	08C	031	6-L08
75 77 042	08C	035	6-L12
75 77 075	04	053	3-J06
75 77 166	04	065	3-J18
75 77 182	04	059	3-J12
75 77 182	04	081	3-K10
75 77 257	04	059	3-J12
75 77 257	04	081	3-K10
75 77 265	04	059	3-J12
75 77 265	04	081	3-K10
75 77 273	04	059	3-J12
75 77 273	04	081	3-K10
75 77 323	02	135	1-H16
75 77 331	08A	043	5-B20
75 77 349	04	071	3-J24
75 77 356	02	149	1-I06
75 77 356	02	175	1-J08
75 77 364	02	149	1-I06
75 77 364	02	175	1-J08
75 77 554	02	009	1-C10
75 77 562	04	043	3-I20
75 77 588	04	053	3-J06
75 77 596	04	053	3-J06
75 77 646	04	031	3-I08
75 77 695	02	009	1-C10
75 77 729	04	031	3-I08
75 77 729	04	033	3-I10
75 77 885	02	139	1-H20
75 77 885	08C	033	6-L10
75 77 893	02	009	1-C10
75 77 927	04	071	3-J24
75 78 032	04	063	3-J16
75 78 040	04	063	3-J16
75 78 057	04	063	3-J16
75 78 065	04	063	3-J16
75 78 073	04	063	3-J16
75 78 081	04	063	3-J16
75 78 099	04	063	3-J16
75 78 107	04	063	3-J16
75 78 115	04	063	3-J16
75 78 123	04	063	3-J16
75 78 131	04	063	3-J16
75 78 149	04	063	3-J16
75 78 156	04	063	3-J16
75 78 164	04	063	3-J16
75 78 172	04	063	3-J16
75 78 180	04	063	3-J16
75 78 198	04	063	3-J16
75 78 206	04	063	3-J16
75 78 214	04	063	3-J16
75 78 222	04	061	3-J14
75 78 248	04	059	3-J12
75 78 255	04	059	3-J12
75 78 271	04	049	3-J02
75 78 388	04	059	3-J12
75 78 396	04	059	3-J12
75 78 412	04	061	3-J14
75 78 420	04	061	3-J14
75 78 438	04	061	3-J14
75 78 446	04	061	3-J14
75 78 453	04	061	3-J14
75 78 461	04	061	3-J14
75 78 479	04	061	3-J14
75 78 487	04	061	3-J14
75 78 495	04	061	3-J14
75 78 503	04	061	3-J14
75 78 511	04	061	3-J14
75 78 529	04	061	3-J14
75 78 537	04	061	3-J14
75 78 545	04	061	3-J14
75 78 552	04	061	3-J14
75 78 560	04	061	3-J14
75 78 578	04	061	3-J14
75 78 586	04	061	3-J14
75 78 594	04	061	3-J14
75 78 602	04	061	3-J14
75 78 610	04	061	3-J14
75 78 628	04	061	3-J14
75 78 636	04	061	3-J14
75 78 743	04	049	3-J02
75 78 768	04	055	3-J08
75 78 925	04	059	3-J12
75 79 063	04	061	3-J14
75 79 071	04	063	3-J16
75 79 105	04	059	3-J12
75 79 188	04	061	3-J14
75 79 253	04	071	3-J24
75 79 444	04	061	3-J14
75 79 451	04	063	3-J16
75 79 485	04	055	3-J08
75 79 984	04	037	3-I14
75 82 299	02	153	1-I10
75 83 461	02	157	1-I14
75 83 628	02	157	1-I14
75 83 784	02	113	1-G18
75 83 933	02	117	1-G22
75 84 394	02	029	1-D06
75 84 436	02	085	1-F14
75 84 436	02	087	1-F16
75 84 436	02	171	1-J04
75 84 451	02	089	1-F18
75 84 451	02	093	1-F22
75 84 790	02	153	1-I10
75 85 011	02	045	1-D22
75 85 045	02	171	1-J04
75 85 052	02	021	1-C22
75 85 086	02	025	1-D02
75 85 086	02	027	1-D04
75 85 532	02	011	1-C12
75 85 540	03A	023	2-A24
75 85 565	02	153	1-I10
75 85 755	02	169	1-J02
75 85 847	02	011	1-C12
75 85 847	02	015	1-C16
75 86 019	02	103	1-G08
75 86 019	02	105	1-G10
75 86 050	02	045	1-D22
75 86 050	02	047	1-D24
75 86 811	03A	027	2-B04
75 86 837	02	011	1-C12
75 86 860	02	085	1-F14
75 86 860	02	087	1-F16
75 86 860	02	089	1-F18
75 86 860	02	093	1-F22
75 86 860	02	095	1-F24
75 86 878	02	085	1-F14
75 86 878	02	087	1-F16
75 86 878	02	089	1-F18
75 86 878	02	093	1-F22
75 86 878	02	095	1-F24
75 86 993	02	025	1-D02
75 87 470	02	021	1-C22
75 87 785	02	153	1-I10
75 88 056	02	011	1-C12
75 88 056	02	017	1-C18
75 88 056	02	171	1-J04
75 88 270	02	099	1-G04
75 88 320	02	011	1-C12
75 88 320	02	015	1-C16
75 88 320	02	019	1-C20
75 88 403	02	103	1-G08
75 88 445	02	103	1-G08
75 88 551	02	157	1-I14
75 88 684	02	021	1-C22
75 88 783	02	037	1-D14
75 89 815	03A	027	2-B04
75 89 823	03A	027	2-B04
75 89 831	03A	027	2-B04
75 89 856	03A	027	2-B04
75 89 864	03A	027	2-B04
75 90 680	02	109	1-G14
75 90 805	02	143	1-H24
75 91 035	02	079	1-F08
75 91 035	03A	179	2-H12
75 91 183	02	069	1-E22
75 91 274	02	061	1-E14
75 91 480	02	121	1-H02
75 91 480	02	123	1-H04
75 91 480	02	125	1-H06
75 91 480	02	127	1-H08
75 91 480	02	129	1-H10
75 91 480	02	131	1-H12
75 91 837	02	081	1-F10
75 91 837	02	083	1-F12
75 91 902	02	065	1-E18
75 91 928	02	163	1-I20
75 91 936	02	163	1-I20
75 91 936	02	165	1-I22
75 91 944	02	163	1-I20
75 91 951	02	163	1-I20
75 92 017	06	025	4-D02
75 92 017	06	027	4-D04
75 92 025	04	071	3-J24
75 92 033	04	071	3-J24
75 92 181	04	041	3-I18
75 92 223	04	027	3-I04
75 92 223	04	083	3-K12
75 92 231	04	027	3-I04
75 92 231	04	083	3-K12
75 92 249	04	049	3-J02
75 92 249	04	081	3-K10
75 92 272	04	061	3-J14
75 92 330	04	043	3-I20
75 92 330	04	083	3-K12
75 92 645	04	063	3-J16
75 92 819	02	139	1-H20
75 92 819	02	141	1-H22
75 92 819	08C	033	6-L10
75 92 843	04	031	3-I08
75 92 884	02	145	1-I02
75 92 918	02	139	1-H20
75 92 918	02	141	1-H22
75 92 918	08C	037	6-L14
75 92 942	04	035	3-I12
75 92 959	04	035	3-I12
75 92 975	02	009	1-C10
75 93 049	06	027	4-D04
75 93 064	04	071	3-J24
75 93 072	06	027	4-D04
75 93 080	04	037	3-I14
75 93 080	06	027	4-D04
75 93 130	04	071	3-J24
75 93 148	04	071	3-J24
75 93 221	02	149	1-I06
75 93 221	02	151	1-I08
75 93 221	02	175	1-J08
75 93 221	02	177	1-J10
75 93 221	03A	177	2-H10
75 93 387	06	025	4-D02
75 93 395	06	025	4-D02
75 93 429	06	025	4-D02
75 93 452	06	019	4-C20
75 93 650	04	065	3-J18
75 93 742	04	043	3-I20
75 93 759	04	043	3-I20
75 94 039	04	007	3-H08
75 94 120	04	027	3-I04
75 94 120	04	083	3-K12
75 94 146	04	065	3-J18
75 94 146	04	083	3-K12
75 94 153	04	051	3-J04
75 94 153	04	083	3-K12
75 94 161	04	049	3-J02
75 94 161	04	083	3-K12
75 94 179	04	043	3-I20
75 94 179	04	083	3-K12
75 94 187	04	043	3-I20
75 94 187	04	079	3-K08
75 94 187	04	083	3-K12
75 94 880	04	043	3-I20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C05 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 94 880	04	083	3-K12
75 94 898	04	027	3-I04
75 94 898	04	083	3-K12
75 95 002	04	065	3-J18
75 95 325	04	041	3-I18
75 95 325	04	083	3-K12
75 95 739	04	055	3-J08
75 95 887	04	049	3-J02
75 95 895	04	049	3-J02
75 95 903	04	049	3-J02
75 95 937	04	055	3-J08
75 96 000	08C	015	6-K16
75 96 018	02	145	1-I02
75 96 018	02	147	1-I04
75 96 174	04	007	3-H08
75 96 257	02	143	1-H24
75 96 497	04	037	3-I14
75 96 521	02	009	1-C10
75 96 604	02	145	1-I02
75 96 604	02	147	1-I04
75 96 612	06	025	4-D02
75 96 679	03A	011	2-A12
75 96 679	03A	015	2-A16
75 96 901	04	053	3-J06
75 96 935	04	047	3-I24
75 97 214	04	059	3-J12
75 97 222	04	043	3-I20
75 97 347	04	061	3-J14
75 97 347	04	063	3-J16
75 97 354	04	059	3-J12
75 97 354	04	083	3-K12
75 97 388	04	061	3-J14
75 97 412	04	061	3-J14
75 97 610	04	049	3-J02
75 97 628	04	061	3-J14
75 97 677	04	027	3-I04
75 97 685	04	027	3-I04
75 97 693	04	027	3-I04
75 97 701	04	027	3-I04
75 97 719	04	027	3-I04
75 97 727	04	027	3-I04
75 97 735	04	027	3-I04
75 97 743	04	027	3-I04
75 97 750	04	027	3-I04
75 97 768	04	027	3-I04
75 97 776	04	043	3-I20
75 97 776	04	079	3-K08
75 97 776	04	083	3-K12
75 97 784	04	043	3-I20
75 97 933	04	055	3-J08
75 97 933	04	081	3-K10
75 98 212	02	135	1-H16
75 98 311	02	149	1-I06
75 98 311	02	151	1-I08
75 98 311	02	175	1-J08
75 98 311	02	177	1-J10
75 98 337	04	031	3-I08
75 98 337	04	033	3-I10
75 98 634	06	023	4-C24
75 98 659	04	031	3-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 98 840	04	035	3-I12
75 98 980	02	139	1-H20
75 98 980	08C	033	6-L10
75 99 178	04	031	3-I08
75 99 178	04	033	3-I10
75 99 194	02	133	1-H14
75 99 285	02	133	1-H14
75 99 285	08C	037	6-L14
75 99 350	04	035	3-I12
75 99 400	04	031	3-I08
75 99 400	04	033	3-I10
75 99 434	04	031	3-I08
75 99 434	04	033	3-I10
75 99 442	04	031	3-I08
75 99 442	04	033	3-I10
75 99 475	06	019	4-C20
75 99 525	04	043	3-I20
75 99 525	04	079	3-K08
75 99 657	04	039	3-I16
75 99 665	04	039	3-I16
75 99 731	04	061	3-J14
75 99 798	04	043	3-I20
75 99 806	06	025	4-D02
75 99 814	06	025	4-D02
75 99 822	06	025	4-D02
75 99 848	02	009	1-C10
75 99 855	02	009	1-C10
75 99 913	02	009	1-C10
75 99 988	04	031	3-I08
76 85 878	07	013	4-E14
78 20 228	08A	143	5-F24
78 20 244	08A	143	5-F24
78 29 609	03B	107	3-E12
78 29 609	03B	117	3-E22
78 29 609	03B	127	3-F08
78 29 609	03B	137	3-F18
78 29 617	03B	107	3-E12
78 29 617	03B	117	3-E22
78 29 617	03B	127	3-F08
78 29 617	03B	137	3-F18
78 29 625	03B	107	3-E12
78 29 625	03B	117	3-E22
78 29 625	03B	127	3-F08
78 29 625	03B	137	3-F18
78 29 633	03B	107	3-E12
78 29 633	03B	117	3-E22
78 29 633	03B	127	3-F08
78 29 633	03B	137	3-F18
78 29 641	03B	107	3-E12
78 29 641	03B	117	3-E22
78 29 641	03B	127	3-F08
78 29 641	03B	137	3-F18
78 29 666	03B	107	3-E12
78 29 666	03B	117	3-E22
78 29 666	03B	127	3-F08
78 29 666	03B	137	3-F18
78 29 674	03B	107	3-E12
78 29 674	03B	117	3-E22
78 29 674	03B	127	3-F08
78 29 674	03B	137	3-F18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
78 29 682	03B	107	3-E12
78 29 682	03B	117	3-E22
78 29 682	03B	127	3-F08
78 29 682	03B	137	3-F18
78 55 828	02	035	1-D12
78 55 836	02	035	1-D12
78 55 844	02	035	1-D12
78 55 851	02	035	1-D12
78 55 869	02	035	1-D12
78 55 950	02	021	1-C22
78 55 992	02	101	1-G06
78 56 008	02	101	1-G06
78 56 172	02	025	1-D02
78 56 172	02	031	1-D08
78 56 446	02	099	1-G04
78 56 479	02	099	1-G04
78 56 933	02	105	1-G10
78 56 933	02	107	1-G12
78 57 964	02	105	1-G10
78 57 972	02	105	1-G10
78 58 756	02	011	1-C12
78 58 921	02	155	1-I12
78 59 689	03A	029	2-B06
78 59 689	03A	031	2-B08
78 59 697	03A	029	2-B06
78 59 697	03A	031	2-B08
78 59 705	03A	027	2-B04
78 59 705	03A	031	2-B08
78 59 713	03A	029	2-B06
78 59 721	03A	027	2-B04
78 59 721	03A	031	2-B08
78 59 747	03A	027	2-B04
78 59 747	03A	029	2-B06
78 59 747	03A	031	2-B08
78 71 387	02	099	1-G04
78 71 395	02	099	1-G04
78 71 437	02	099	1-G04
78 71 965	02	021	1-C22
78 72 070	02	015	1-C16
78 72 088	02	165	1-I22
78 72 096	02	165	1-I22
78 72 203	02	075	1-F04
78 72 211	02	075	1-F04
78 72 229	02	075	1-F04
78 72 237	02	075	1-F04
78 72 260	02	075	1-F04
78 72 286	03A	021	2-A22
78 72 294	03A	021	2-A22
78 72 385	02	069	1-E22
78 72 385	02	071	1-E24
78 72 393	02	069	1-E22
78 72 690	02	023	1-C24
78 72 898	02	117	1-G22
78 72 922	02	069	1-E22
78 73 045	02	157	1-I14
78 73 284	02	117	1-G22
78 74 431	08A	123	5-F04
78 74 431	08A	151	5-G08
78 74 498	03B	015	3-A16
78 74 498	03B	017	3-A18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
78 74 498	03B	019	3-A20
78 74 498	03B	041	3-B18
78 74 498	03B	045	3-B22
78 74 498	03B	047	3-B24
78 74 498	03B	067	3-C20
78 74 498	03B	069	3-C22
78 74 498	03B	071	3-C24
78 74 498	03B	089	3-D18
78 74 498	03B	093	3-D22
78 74 498	03B	095	3-D24
78 74 498	03B	113	3-E18
78 74 498	03B	123	3-F04
78 74 498	03B	133	3-F14
78 74 498	03B	143	3-F24
78 74 506	03A	103	2-E08
78 74 506	03B	113	3-E18
78 74 506	03B	123	3-F04
78 74 506	03B	133	3-F14
78 74 506	03B	143	3-F24
78 74 662	08A	097	5-E02
79 10 557	08A	137	5-F18
79 10 755	08B	013	6-A14
79 15 036	04	025	3-I02
79 15 036	04	027	3-I04
79 15 036	04	079	3-K08
79 15 077	05	029	4-B06
79 15 077	08B	161	6-G18
79 15 093	04	071	3-J24
79 15 119	06	007	4-C08
79 15 200	04	027	3-I04
79 15 200	04	079	3-K08
79 15 556	03A	113	2-E18
79 15 572	02	165	1-I22
79 16 497	05	011	4-A12
79 16 497	05	031	4-B08
79 16 497	08A	015	5-A16
79 16 497	08B	159	6-G16
79 16 497	08B	185	6-H18
79 16 497	08B	215	6-I24
79 16 521	07	023	4-E24
79 18 337	02	155	1-I12
79 19 483	08A	043	5-B20
79 22 149	08C	029	6-L06
79 22 214	03A	105	2-E10
79 22 214	08C	021	6-K22
79 22 214	08C	023	6-K24
79 22 230	03A	059	2-C12
79 22 230	03A	063	2-C16
79 22 263	03A	117	2-E22
79 22 271	03A	065	2-C18
79 22 271	03A	219	2-J04
79 22 271	08B	163	6-G20
79 22 297	03A	189	2-H22
79 22 313	08B	011	6-A12
79 22 347	03A	021	2-A22
79 22 347	03A	069	2-C22
79 22 347	03A	191	2-H24
79 22 347	08C	029	6-L06
79 22 354	02	063	1-E16
79 22 354	02	077	1-F06

7-C06 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 22 354	03A	101	2-E06
79 22 354	03A	107	2-E12
79 22 354	03A	119	2-E24
79 22 354	03A	179	2-H12
79 22 354	03A	189	2-H22
79 22 354	08B	161	6-G18
79 22 354	08B	173	6-H06
79 22 354	08B	175	6-H08
79 22 354	08B	217	6-J02
79 22 362	03A	179	2-H12
79 22 362	03A	189	2-H22
79 22 388	03A	069	2-C22
79 22 396	02	071	1-E24
79 22 396	08B	163	6-G20
79 22 396	08B	177	6-H10
79 22 396	08B	217	6-J02
79 22 420	03A	079	2-D08
79 22 420	03A	091	2-D20
79 22 420	03A	113	2-E18
79 22 420	03A	179	2-H12
79 22 420	03A	189	2-H22
79 22 420	03A	191	2-H24
79 22 420	08B	191	6-H24
79 22 420	08C	011	6-K12
79 22 438	03A	041	2-B18
79 22 438	03A	043	2-B20
79 22 438	03A	045	2-B22
79 22 438	03A	049	2-C02
79 22 438	03A	051	2-C04
79 22 438	03A	053	2-C06
79 22 438	03A	119	2-E24
79 22 438	06	021	4-C22
79 22 446	03A	029	2-B06
79 22 503	03A	179	2-H12
79 22 503	08B	009	6-A10
79 22 602	03A	113	2-E18
79 22 644	03A	113	2-E18
79 22 800	02	139	1-H20
79 22 800	02	141	1-H22
79 22 800	03A	071	2-C24
79 22 800	05	027	4-B04
79 22 800	08A	015	5-A16
79 22 800	08C	037	6-L14
79 22 818	03A	101	2-E06
79 22 818	03A	111	2-E16
79 22 818	03A	115	2-E20
79 22 818	04	071	3-J24
79 22 818	08B	009	6-A10
79 22 826	03A	097	2-E02
79 22 826	03A	099	2-E04
79 22 826	03A	179	2-H12
79 22 826	08C	011	6-K12
79 22 834	03A	107	2-E12
79 22 834	03A	111	2-E16
79 22 891	03A	039	2-B16
79 22 891	03A	079	2-D08
79 22 891	03A	097	2-E02
79 22 891	03A	107	2-E12
79 22 974	03A	115	2-E20
79 22 974	08B	009	6-A10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 23 014	08A	005	5-A06
79 23 014	08A	045	5-B22
79 23 014	08A	047	5-B24
79 33 443	03A	177	2-H10
79 33 500	02	053	1-E06
79 33 500	02	055	1-E08
79 33 682	03A	119	2-E24
79 33 682	08A	137	5-F18
79 33 682	08A	139	5-F20
79 33 849	03A	015	2-A16
79 33 872	04	043	3-I20
79 33 872	06	009	4-C10
79 35 703	08B	007	6-A08
79 35 992	08A	061	5-C14
79 36 008	08C	005	6-K06
79 36 016	08A	065	5-C18
79 36 016	08A	069	5-C22
79 36 016	08B	159	6-G16
79 46 734	03A	119	2-E24
79 49 696	02	025	1-D02
79 49 696	02	029	1-D06
79 49 712	04	005	3-H06
79 56 238	04	031	3-I08
79 58 770	02	161	1-I18
79 59 349	03B	107	3-E12
79 59 349	03B	117	3-E22
79 59 349	03B	127	3-F08
79 59 349	03B	137	3-F18
79 61 311	08A	039	5-B16
79 61 337	02	057	1-E10
79 61 337	03A	085	2-D14
79 61 345	03A	085	2-D14
79 61 634	03A	091	2-D20
79 61 634	08B	197	6-I06
79 61 642	03A	115	2-E20
79 61 642	03A	189	2-H22
79 61 642	07	017	4-E18
79 61 642	07	021	4-E22
79 61 642	07	023	4-E24
79 61 642	08B	087	6-D16
79 61 642	08B	099	6-E04
79 61 659	08C	033	6-L10
79 61 675	06	011	4-C12
79 61 691	08A	043	5-B20
79 63 143	08B	159	6-G16
79 63 168	06	005	4-C06
79 63 507	06	019	4-C20
79 63 515	02	157	1-I14
79 63 523	02	107	1-G12
79 63 523	02	157	1-I14
79 63 531	06	019	4-C20
79 63 549	02	103	1-G08
79 63 549	02	107	1-G12
79 63 895	02	081	1-F10
79 63 937	03A	069	2-C22
79 65 338	08B	011	6-A12
79 65 338	08B	015	6-A16
79 65 361	08B	199	6-I08
79 65 544	02	149	1-I06
79 65 544	02	151	1-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 65 544	02	175	1-J08
79 65 544	02	177	1-J10
79 65 544	03A	079	2-D08
79 65 544	04	031	3-I08
79 65 544	04	033	3-I10
79 65 544	08A	083	5-D12
79 65 544	08C	029	6-L06
79 65 684	08A	057	5-C10
79 65 684	08A	059	5-C12
79 65 767	02	123	1-H04
79 65 767	02	129	1-H10
79 65 767	08A	009	5-A10
79 65 767	08A	021	5-A22
79 65 809	08B	013	6-A14
79 65 809	08B	221	6-J06
79 65 833	08A	117	5-E22
79 65 833	08A	163	5-G20
79 67 730	08A	027	5-B04
79 67 730	08A	029	5-B06
79 67 771	08A	117	5-E22
79 67 771	08A	121	5-F02
79 67 771	08A	151	5-G08
79 67 771	08B	211	6-I20
79 67 870	02	127	1-H08
79 67 870	02	129	1-H10
79 67 870	02	131	1-H12
79 67 912	04	033	3-I10
79 67 938	02	039	1-D16
79 67 938	02	041	1-D18
79 67 938	03A	103	2-E08
79 67 938	03A	179	2-H12
79 67 938	05	029	4-B06
79 67 938	06	019	4-C20
79 67 938	06	023	4-C24
79 67 953	02	121	1-H02
79 67 953	02	123	1-H04
79 67 953	02	125	1-H06
79 67 953	02	127	1-H08
79 67 953	02	129	1-H10
79 67 953	02	131	1-H12
79 67 953	03A	115	2-E20
79 67 953	04	069	3-J22
79 67 953	08A	009	5-A10
79 67 953	08A	061	5-C14
79 67 953	08A	065	5-C18
79 67 953	08A	069	5-C22
79 67 953	08B	189	6-H22
79 67 979	02	009	1-C10
79 67 979	02	063	1-E16
79 67 979	03A	019	2-A20
79 67 979	08A	011	5-A12
79 67 979	08A	137	5-F18
79 67 979	08A	139	5-F20
79 67 979	08A	141	5-F22
79 67 995	03A	069	2-C22
79 67 995	03A	177	2-H10
79 67 995	03A	189	2-H22
79 67 995	08A	019	5-A20
79 67 995	08C	021	6-K22
79 68 001	03A	121	2-F02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 68 001	08B	023	6-A24
79 68 001	08C	011	6-K12
79 68 068	03B	047	3-B24
79 68 068	03B	073	3-D02
79 68 068	03B	095	3-D24
79 68 068	03B	117	3-E22
79 68 068	03B	127	3-F08
79 68 068	03B	137	3-F18
79 68 308	02	157	1-I14
79 68 308	02	175	1-J08
79 68 316	03A	027	2-B04
79 68 316	03A	031	2-B08
79 68 415	06	011	4-C12
79 68 415	08C	015	6-K16
79 68 415	08C	019	6-K20
79 68 415	08C	033	6-L10
79 68 555	03A	189	2-H22
79 68 845	08B	009	6-A10
79 69 223	02	149	1-I06
79 69 223	02	151	1-I08
79 69 223	03A	035	2-B12
79 69 223	03A	037	2-B14
79 69 223	03A	057	2-C10
79 69 223	03A	075	2-D04
79 69 223	03A	091	2-D20
79 69 223	03A	179	2-H12
79 69 223	04	069	3-J22
79 69 223	05	013	4-A14
79 69 223	08A	049	5-C02
79 69 223	08A	053	5-C06
79 69 223	08A	055	5-C08
79 69 223	08A	061	5-C14
79 69 223	08A	069	5-C22
79 69 223	08B	015	6-A16
79 69 231	03B	107	3-E12
79 69 231	03B	117	3-E22
79 69 231	03B	127	3-F08
79 69 231	03B	137	3-F18
79 69 256	03B	107	3-E12
79 69 256	03B	117	3-E22
79 69 256	03B	127	3-F08
79 69 256	03B	137	3-F18
79 69 298	08A	005	5-A06
79 69 306	02	009	1-C10
79 69 306	05	009	4-A10
79 69 306	08A	005	5-A06
79 69 306	08A	011	5-A12
79 69 348	02	123	1-H04
79 69 348	02	129	1-H10
79 69 348	03A	177	2-H10
79 69 363	03A	177	2-H10
79 69 389	03A	021	2-A22
79 69 421	03A	177	2-H10
79 69 462	03A	177	2-H10
79 69 462	03A	183	2-H16
79 69 488	03A	177	2-H10
79 69 488	06	021	4-C22
79 69 967	08A	051	5-C04
79 69 967	08A	055	5-C08
79 70 015	04	037	3-I14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C07 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
79 70 015	08C	015	6-K16
79 70 023	08A	061	5-C14
79 70 031	02	135	1-H16
79 70 049	02	135	1-H16
79 70 049	06	019	4-C20
79 70 056	02	169	1-J02
79 70 072	02	057	1-E10
79 70 072	02	135	1-H16
79 70 072	06	019	4-C20
79 70 080	02	057	1-E10
79 70 080	02	059	1-E12
79 70 098	02	135	1-H16
79 70 098	02	167	1-I24
79 70 114	02	135	1-H16
79 70 114	02	137	1-H18
79 70 114	02	177	1-J10
79 70 114	08C	035	6-L12
79 70 122	02	087	1-F16
79 70 122	02	135	1-H16
79 70 122	06	019	4-C20
79 70 130	02	057	1-E10
79 70 130	02	093	1-F22
79 70 130	02	095	1-F24
79 70 130	02	143	1-H24
79 70 130	06	019	4-C20
79 70 148	02	051	1-E04
79 70 148	02	057	1-E10
79 70 148	02	143	1-H24
79 70 148	02	163	1-I20
79 70 148	02	167	1-I24
79 70 155	02	051	1-E04
79 70 155	02	053	1-E06
79 70 155	02	055	1-E08
79 70 155	02	143	1-H24
79 70 155	02	163	1-I20
79 70 155	02	167	1-I24
79 70 262	08A	061	5-C14
79 70 262	08A	065	5-C18
79 70 262	08A	069	5-C22
79 70 288	02	009	1-C10
79 70 288	02	045	1-D22
79 70 288	04	005	3-H06
79 70 288	05	025	4-B02
79 70 288	05	027	4-B04
79 70 304	08A	137	5-F18
79 70 304	08A	139	5-F20
79 70 304	08B	015	6-A16
79 70 320	04	073	3-K02
79 70 346	03A	069	2-C22
79 70 361	02	039	1-D16
79 70 361	02	041	1-D18
79 70 361	02	043	1-D20
79 70 361	04	025	3-I02
79 70 403	08A	131	5-F12
79 70 403	08A	133	5-F14
79 70 536	02	057	1-E10
79 70 536	03A	209	2-I18
79 70 536	03A	213	2-I22
79 70 536	08A	063	5-C16
79 70 536	08A	085	5-D14
79 70 536	08A	089	5-D18
79 70 536	08A	093	5-D22
79 70 536	08B	011	6-A12
79 70 536	08B	013	6-A14
79 70 536	08B	015	6-A16
79 70 577	08B	189	6-H22
79 70 601	03A	121	2-F02
79 70 601	03A	219	2-J04
79 70 601	08A	099	5-E04
79 70 601	08A	117	5-E22
79 70 601	08A	121	5-F02
79 70 601	08A	163	5-G20
79 71 112	03A	019	2-A20
79 71 294	02	097	1-G02
79 71 294	02	161	1-I18
79 71 294	03A	179	2-H12
79 71 294	05	019	4-A20
79 71 294	05	021	4-A22
79 71 294	05	023	4-A24
79 71 294	06	011	4-C12
79 71 294	08A	019	5-A20
79 71 294	08B	163	6-G20
79 71 294	08B	185	6-H18
79 71 294	08B	189	6-H22
79 71 294	08B	205	6-I14
79 71 294	08B	217	6-J02
79 71 344	02	065	1-E18
79 71 344	02	067	1-E20
79 71 351	03A	071	2-C24
79 71 351	03B	027	3-B04
79 71 351	08C	021	6-K22
79 71 393	03A	069	2-C22
79 71 393	08B	081	6-D10
79 71 393	08B	087	6-D16
79 71 393	08B	093	6-D22
79 71 393	08B	099	6-E04
79 71 393	08B	105	6-E10
79 71 393	08B	111	6-E16
79 71 393	08B	119	6-E24
79 71 393	08B	127	6-F08
79 71 393	08C	005	6-K06
79 71 393	08C	007	6-K08
79 71 393	08C	009	6-K10
79 71 393	08C	013	6-K14
79 71 401	08B	169	6-H02
79 71 443	08B	011	6-A12
79 71 443	08C	007	6-K08
79 71 443	08C	009	6-K10
79 71 518	08B	207	6-I16
79 71 658	02	009	1-C10
79 71 658	02	139	1-H20
79 71 658	02	175	1-J08
79 71 658	03A	009	2-A10
79 71 658	03A	119	2-E24
79 71 658	04	069	3-J22
79 71 658	04	071	3-J24
79 71 658	05	013	4-A14
79 71 658	08A	049	5-C02
79 71 658	08A	053	5-C06
79 71 658	08A	067	5-C20
79 71 658	08A	071	5-C24
79 71 658	08A	073	5-D02
79 71 658	08A	155	5-G12
79 71 658	08A	157	5-G14
79 71 658	08B	203	6-I12
79 71 658	08C	033	6-L10
79 71 708	03B	005	3-A06
79 71 708	03B	013	3-A14
79 71 708	03B	033	3-B10
79 71 708	03B	039	3-B16
79 71 708	03B	057	3-C10
79 71 708	03B	061	3-C14
79 71 708	03B	083	3-D12
79 71 708	03B	087	3-D16
79 71 708	03B	107	3-E12
79 71 708	03B	117	3-E22
79 71 708	03B	127	3-F08
79 71 708	03B	137	3-F18
79 71 757	02	045	1-D22
79 71 757	02	123	1-H04
79 71 757	03A	097	2-E02
79 71 757	03A	179	2-H12
79 71 765	02	009	1-C10
79 71 765	06	005	4-C06
79 71 765	07	007	4-E08
79 71 765	07	015	4-E16
79 71 823	02	137	1-H18
79 71 823	02	139	1-H20
79 71 823	02	141	1-H22
79 71 823	02	145	1-I02
79 71 823	02	147	1-I04
79 71 823	03A	091	2-D20
79 71 823	03A	179	2-H12
79 71 823	08C	037	6-L14
79 71 864	02	063	1-E16
79 71 864	02	109	1-G14
79 71 864	02	169	1-J02
79 71 864	03A	177	2-H10
79 71 864	03A	219	2-J04
79 71 864	06	011	4-C12
79 71 864	08A	031	5-B08
79 71 864	08C	033	6-L10
79 71 864	08C	035	6-L12
79 71 864	08C	037	6-L14
79 71 872	03A	177	2-H10
79 71 872	08B	159	6-G16
79 71 872	08B	165	6-G22
79 71 872	08B	169	6-H02
79 71 872	08B	173	6-H06
79 71 872	08B	217	6-J02
79 71 872	08C	021	6-K22
79 71 880	02	057	1-E10
79 71 880	02	059	1-E12
79 71 880	02	135	1-H16
79 71 880	03A	177	2-H10
79 71 880	04	025	3-I02
79 71 880	05	015	4-A16
79 71 880	08A	157	5-G14
79 71 880	08A	159	5-G16
79 71 880	08C	025	6-L02
79 71 880	08C	027	6-L04
79 71 880	08C	033	6-L10
79 71 880	08C	035	6-L12
79 71 880	08C	037	6-L14
79 71 898	03A	177	2-H10
79 71 896	06	019	4-C20
79 71 898	08C	021	6-K22
79 71 898	08C	027	6-L04
79 71 922	02	061	1-E14
79 71 922	03A	103	2-E08
79 71 922	04	009	3-H10
79 71 922	05	025	4-B02
79 71 922	05	027	4-B04
79 71 922	06	023	4-C24
79 71 922	07	017	4-E18
79 71 922	07	021	4-E22
79 71 922	07	023	4-E24
79 71 997	02	041	1-D18
79 71 997	04	037	3-I14
79 72 029	03B	019	3-A20
79 72 029	03B	047	3-B24
79 72 02	03B	073	3-D02
79 72 029	03B	095	3-D24
79 72 029	03B	107	3-E12
79 72 029	03B	117	3-E22
79 72 029	03B	127	3-F08
79 72 029	03B	137	3-F18
79 72 045	02	139	1-H20
79 72 045	02	141	1-H22
79 72 045	02	169	1-J02
79 72 078	08C	021	6-K22
79 72 094	08C	021	6-K22
79 72 128	03A	111	2-E16
79 72 128	08B	009	6-A10
79 72 136	08A	005	5-A06
79 72 193	06	009	4-C10
79 72 193	08B	005	6-A06
79 72 284	03A	079	2-D08
79 72 284	03A	083	2-D12
79 72 292	02	009	1-C10
79 72 292	06	023	4-C24
79 72 292	06	025	4-D02
79 72 334	06	011	4-C12
79 72 425	03A	187	2-H20
79 72 425	08A	117	5-E22
79 72 441	02	137	1-H18
79 72 441	02	143	1-H24
79 72 441	05	007	4-A08
79 72 441	08C	029	6-L06
79 72 441	08C	033	6-L10
79 72 441	08C	035	6-L12
79 72 466	03A	179	2-H12
79 72 466	08A	051	5-C04
79 72 466	08A	055	5-C08
79 72 466	08B	009	6-A10
79 72 474	08A	039	5-B16
79 72 482	08C	021	6-K22
79 72 490	03A	115	2-E20
79 72 490	08A	013	5-A12
79 72 490	08A	039	5-B16

7-C08 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
79 72 490	08A	045	5-B22
79 72 490	08B	113	6-E18
79 72 490	08B	127	6-F08
79 72 490	08B	193	6-I02
79 72 490	08B	197	6-I06
79 72 490	08B	207	6-I16
79 72 516	08A	043	5-B20
79 72 516	08A	045	5-B22
79 72 516	08A	047	5-B24
79 72 516	08A	137	5-F18
79 72 516	08A	139	5-F20
79 72 516	08B	023	6-A24
79 72 516	08B	161	6-G18
79 72 516	08B	173	6-H06
79 72 516	08B	179	6-H12
79 72 516	08B	183	6-H16
79 72 573	03A	177	2-H10
79 72 573	08A	015	5-A16
79 72 573	08B	005	6-A06
79 72 573	08B	015	6-A16
79 72 573	08B	183	6-H16
79 72 573	08B	189	6-H22
79 72 607	02	139	1-H20
79 72 607	02	143	1-H24
79 72 607	02	161	1-I18
79 72 607	03A	107	2-E12
79 72 607	03A	179	2-H12
79 72 607	04	069	3-J22
79 72 607	08A	015	5-A16
79 72 607	08B	015	6-A16
79 72 607	08B	205	6-I14
79 72 607	08B	221	6-J06
79 72 607	08C	033	6-L10
79 72 607	08C	037	6-L14
79 72 623	08B	159	6-G16
79 72 672	02	079	1-F08
79 72 698	02	039	1-D16
79 72 698	02	041	1-D18
79 72 698	02	153	1-I10
79 72 698	02	155	1-I12
79 72 698	02	173	1-J06
79 72 748	06	025	4-D02
79 72 771	03A	069	2-C22
79 72 771	08B	007	6-A08
79 72 771	08B	017	6-A18
79 72 805	03A	179	2-H12
79 72 805	05	029	4-B06
79 72 821	08B	171	6-H04
79 72 888	02	049	1-E02
79 72 888	02	051	1-E04
79 72 888	02	055	1-E08
79 72 888	02	119	1-G24
79 72 896	08B	081	6-D10
79 72 896	08B	093	6-D22
79 72 896	08B	107	6-E12
79 72 896	08B	119	6-E24
79 72 938	02	049	1-E02
79 72 938	02	051	1-E04
79 72 938	02	053	1-E06
79 72 938	02	055	1-E08
79 72 938	03A	113	2-E18
79 72 938	08B	191	6-H24
79 72 938	08C	029	6-L06
79 72 938	08C	037	6-L14
79 72 946	03A	179	2-H12
79 72 946	08B	023	6-A24
79 72 946	08C	023	6-K24
79 72 953	03A	181	2-H14
79 72 953	08A	125	5-F06
79 72 953	08A	141	5-F22
79 72 953	08A	167	5-G24
79 72 953	08A	169	5-H02
79 73 001	03A	039	2-B16
79 73 001	08A	039	5-B16
79 73 001	08C	021	6-K22
79 73 001	08C	025	6-L02
79 73 001	08C	033	6-L10
79 73 001	08C	035	6-L12
79 73 050	08A	043	5-B20
79 73 050	08A	045	5-B22
79 73 050	08A	047	5-B24
79 73 126	05	009	4-A10
79 73 126	08B	005	6-A06
79 73 126	08C	021	6-K22
79 73 126	08C	023	6-K24
79 73 134	08A	043	5-B20
79 73 134	08A	097	5-E02
79 73 134	08A	099	5-E04
79 73 134	08A	151	5-G08
79 73 142	08A	103	5-E08
79 73 159	03A	033	2-B10
79 73 159	03A	035	2-B12
79 73 159	03A	037	2-B14
79 73 159	03A	043	2-B20
79 73 159	03A	045	2-B22
79 73 175	08A	123	5-F04
79 73 175	08A	151	5-G08
79 73 191	02	109	1-G14
79 73 191	03A	021	2-A22
79 73 191	08A	123	5-F04
79 73 191	08A	125	5-F06
79 73 191	08A	159	5-G16
79 73 209	08A	043	5-B20
79 73 258	09	009	7-A10
79 73 423	08A	061	5-C14
79 73 423	08A	067	5-C20
79 73 456	02	109	1-G14
79 73 456	02	119	1-G24
79 73 456	02	169	1-J02
79 73 464	06	005	4-C06
79 73 522	02	059	1-E12
79 73 522	02	143	1-H24
79 73 522	02	169	1-J02
79 73 522	05	009	4-A10
79 73 555	03A	179	2-H12
79 73 571	02	009	1-C10
79 73 571	08A	005	5-A06
79 73 597	02	141	1-H22
79 73 605	04	007	3-H08
79 73 605	04	009	3-H10
79 73 738	04	037	3-I14
79 73 753	06	011	4-C12
79 73 779	02	009	1-C10
79 73 779	08A	005	5-A06
79 73 779	08A	101	5-E06
79 73 787	06	019	4-C20
79 73 795	06	019	4-C20
79 73 803	02	009	1-C10
79 73 852	08A	005	5-A06
79 73 951	08B	199	6-I08
79 74 009	02	169	1-J02
79 74 025	03A	067	2-C20
79 74 074	04	037	3-I14
79 74 090	03A	179	2-H12
79 74 090	08C	007	6-K08
79 74 090	08C	009	6-K10
79 74 231	08A	015	5-A16
79 74 231	08A	017	5-A18
79 74 231	08A	039	5-B16
79 74 231	08A	057	5-C10
79 74 231	08A	059	5-C12
79 74 231	08A	063	5-C16
79 74 231	08B	009	6-A10
79 74 231	08B	083	6-D12
79 74 231	08B	087	6-D16
79 74 231	08B	095	6-D24
79 74 231	08B	099	6-E04
79 74 231	08B	107	6-E12
79 74 231	08B	113	6-E18
79 74 231	08B	121	6-F02
79 74 231	08B	127	6-F08
79 74 272	08C	021	6-K22
79 74 272	08C	025	6-L02
79 74 280	08C	021	6-K22
79 74 280	08C	025	6-L02
79 74 280	08C	033	6-L10
79 74 280	08C	035	6-L12
79 74 298	02	139	1-H20
79 74 298	02	141	1-H22
79 74 298	02	149	1-I06
79 74 298	02	151	1-I08
79 74 298	02	177	1-J10
79 74 298	08A	031	5-B08
79 74 298	08A	101	5-E06
79 74 298	08C	021	6-K22
79 74 298	08C	025	6-L02
79 74 298	08C	033	6-L10
79 74 298	08C	035	6-L12
79 74 298	08C	037	6-L14
79 74 306	02	069	1-E22
79 74 306	02	071	1-E24
79 74 330	08B	161	6-G18
79 74 330	08B	173	6-H06
79 74 371	08A	023	5-A24
79 74 397	03A	179	2-H12
79 74 397	08B	179	6-H12
79 74 470	08A	039	5-B16
79 74 512	03A	027	2-B04
79 74 512	06	011	4-C12
79 74 512	08B	011	6-A12
79 74 538	08A	021	5-A22
79 74 546	02	061	1-E14
79 74 546	02	063	1-E16
79 74 546	02	065	1-E18
79 74 546	02	067	1-E20
79 74 611	03A	193	2-I02
79 74 611	03A	197	2-I06
79 74 611	03A	199	2-I08
79 74 611	03A	203	2-I12
79 74 611	08C	033	6-L10
79 74 637	03A	193	2-I02
79 74 637	03A	197	2-I06
79 74 637	03A	199	2-I08
79 74 637	03A	203	2-I12
79 74 637	08C	033	6-L10
79 74 637	08C	035	6-L12
79 74 645	03A	193	2-I02
79 74 645	03A	197	2-I06
79 74 645	03A	199	2-I08
79 74 645	03A	203	2-I12
79 74 652	03A	193	2-I02
79 74 652	03A	197	2-I06
79 74 652	03A	199	2-I08
79 74 652	03A	203	2-I12
79 74 660	03A	193	2-I02
79 74 660	03A	197	2-I06
79 74 660	03A	199	2-I08
79 74 660	03A	203	2-I12
79 74 678	03A	193	2-I02
79 74 678	03A	197	2-I06
79 74 678	03A	199	2-I08
79 74 678	03A	203	2-I12
79 74 678	08C	033	6-L10
79 74 678	08C	035	6-L12
79 74 694	02	041	1-D18
79 74 694	08A	015	5-A16
79 74 694	08A	043	5-B20
79 74 694	08A	045	5-B22
79 74 694	08A	047	5-B24
79 74 728	08B	203	6-I12
79 74 769	03A	009	2-A10
79 74 777	02	009	1-C10
79 74 777	03A	011	2-A12
79 74 777	03A	015	2-A16
79 74 777	08A	005	5-A06
79 74 785	04	037	3-I14
79 74 793	04	013	3-H14
79 74 793	04	041	3-I18
79 74 801	04	013	3-H14
79 74 801	04	041	3-I18
79 74 819	04	013	3-H14
79 74 819	04	041	3-I18
79 74 884	08B	161	6-G18
79 74 884	08B	177	6-H10
79 74 884	08B	217	6-J02
79 74 975	02	135	1-H16
79 74 983	03A	069	2-C22
79 74 983	08B	199	6-I08
79 75 006	03A	085	2-D14
79 75 006	06	019	4-C20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 75 030	08C	015	6-K16
79 75 071	08B	009	6-A10
79 75 162	08A	015	5-A16
79 75 170	03A	033	2-B10
79 75 170	03A	041	2-B18
79 75 170	03A	043	2-B20
79 75 170	03A	045	2-B22
79 75 170	03A	191	2-H24
79 75 170	08A	043	5-B20
79 75 170	08B	203	6-I12
79 75 196	08A	071	5-C24
79 75 196	08A	073	5-D02
79 75 196	08A	101	5-E06
79 75 212	07	015	4-E16
79 75 212	08B	007	6-A08
79 75 212	08B	215	6-I24
79 75 261	02	079	1-F08
79 75 261	03A	039	2-B16
79 75 261	03A	097	2-E02
79 75 261	03A	107	2-E12
79 75 261	03A	111	2-E16
79 75 261	03A	119	2-E24
79 75 261	03A	181	2-H14
79 75 261	08A	037	5-B14
79 75 261	08A	043	5-B20
79 75 261	08A	045	5-B22
79 75 261	08A	063	5-C16
79 75 261	08A	117	5-E22
79 75 261	08A	121	5-F02
79 75 261	08A	123	5-F04
79 75 261	08A	125	5-F06
79 75 261	08A	151	5-G08
79 75 261	08A	163	5-G20
79 75 279	02	109	1-G14
79 75 279	03A	021	2-A22
79 75 279	08A	045	5-B22
79 75 279	08A	097	5-E02
79 75 279	08A	161	5-G18
79 75 329	08B	199	6-I08
79 75 337	08A	019	5-A20
79 75 337	08B	153	6-G10
79 75 352	08A	039	5-B16
79 75 402	08B	023	6-A24
79 75 402	08B	161	6-G18
79 75 402	08B	173	6-H06
79 75 436	08A	045	5-B22
79 75 436	08B	187	6-H20
79 75 451	02	047	1-D24
79 75 451	02	125	1-H06
79 75 451	03A	009	2-A10
79 75 451	08A	067	5-C20
79 75 469	02	133	1-H14
79 75 469	03A	085	2-D14
79 75 477	08A	039	5-B16
79 75 485	08C	007	6-K08
79 75 485	08C	009	6-K10
79 75 501	04	031	3-I08
79 75 501	04	033	3-I10
79 75 501	06	005	4-C06
79 75 519	03A	021	2-A22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 75 527	06	025	4-D02
79 75 535	08B	007	6-A08
79 75 576	02	139	1-H20
79 75 576	03A	021	2-A22
79 75 576	03A	179	2-H12
79 75 576	03A	191	2-H24
79 75 576	08B	199	6-I08
79 75 576	08C	033	6-L10
79 75 642	03A	177	2-H10
79 75 659	03A	177	2-H10
79 75 667	03A	177	2-H10
79 75 717	08A	027	5-B04
79 75 717	08A	029	5-B06
79 75 725	02	133	1-H14
79 75 766	08A	007	5-A08
79 75 766	08B	161	6-G18
79 75 766	08B	177	6-H10
79 75 766	08B	217	6-J02
79 75 782	08A	043	5-B20
79 76 897	07	021	4-E22
79 76 897	07	023	4-E24
79 76 897	08B	185	6-H18
79 76 897	08B	189	6-H22
79 76 905	07	017	4-E18
79 76 905	07	021	4-E22
79 76 913	08A	005	5-A06
79 76 921	08A	005	5-A06
79 76 939	03A	017	2-A18
79 76 962	04	013	3-H14
79 76 962	04	041	3-I18
79 76 988	08A	097	5-E02
79 76 988	08A	099	5-E04
79 76 988	08A	103	5-E08
79 76 988	08A	151	5-G08
79 76 988	08A	161	5-G18
79 76 996	08A	097	5-E02
79 76 996	08A	151	5-G08
79 77 010	08A	065	5-C18
79 77 010	08A	067	5-C20
79 77 028	08B	179	6-H12
79 77 028	08B	183	6-H16
79 77 028	08B	187	6-H20
79 77 234	02	163	1-I20
79 77 234	02	167	1-I24
79 77 267	02	009	1-C10
79 77 283	08B	137	6-F18
79 77 283	08B	141	6-F22
79 77 283	08B	145	6-G02
79 77 283	08B	149	6-G06
79 77 309	06	005	4-C06
79 77 317	08B	011	6-A12
79 77 317	08B	013	6-A14
79 77 333	03A	069	2-C22
79 77 341	08A	019	5-A20
79 77 341	08B	137	6-F18
79 77 341	08B	141	6-F22
79 77 341	08B	143	6-F24
79 77 341	08B	149	6-G06
79 77 358	03A	181	2-H14
79 77 358	03A	189	2-H22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 77 358	03A	191	2-H24
79 77 358	08A	123	5-F04
79 77 358	08B	137	6-F18
79 77 358	08B	139	6-F20
79 77 358	08B	143	6-F24
79 77 358	08B	147	6-G04
79 77 358	08B	191	6-H24
79 77 366	08B	137	6-F18
79 77 366	08B	141	6-F22
79 77 366	08B	145	6-G02
79 77 366	08B	149	6-G06
79 77 366	08B	197	6-I06
79 77 382	06	005	4-C06
79 77 390	08A	131	5-F12
79 77 390	08A	133	5-F14
79 77 390	08A	135	5-F16
79 77 390	08A	163	5-G20
79 77 424	04	031	3-I08
79 77 432	06	019	4-C20
79 77 457	03A	021	2-A22
79 77 465	02	063	1-E16
79 77 465	03A	179	2-H12
79 77 465	08A	021	5-A22
79 77 465	08A	045	5-B22
79 77 465	08A	085	5-D14
79 77 465	08A	089	5-D18
79 77 465	08A	093	5-D22
79 77 465	08A	097	5-E02
79 77 465	08A	103	5-E08
79 77 465	08A	105	5-E10
79 77 465	08A	125	5-F06
79 77 465	08A	137	5-F18
79 77 465	08A	139	5-F20
79 77 465	08A	161	5-G18
79 77 465	08A	167	5-G24
79 77 465	08A	169	5-H02
79 77 465	08B	005	6-A06
79 77 499	03A	009	2-A10
79 77 507	08B	213	6-I22
79 77 523	08A	097	5-E02
79 77 523	08A	099	5-E04
79 77 523	08A	105	5-E10
79 77 523	08A	151	5-G08
79 77 556	03B	107	3-E12
79 77 556	03B	117	3-E22
79 77 556	03B	127	3-F08
79 77 556	03B	137	3-F18
79 77 580	02	149	1-I06
79 77 580	02	175	1-J08
79 77 580	06	019	4-C20
79 77 598	02	145	1-I02
79 77 598	02	147	1-I04
79 77 606	08C	015	6-K16
79 77 630	04	071	3-J24
79 77 648	08B	007	6-A08
79 77 671	03A	111	2-E16
79 77 671	08A	097	5-E02
79 77 671	08A	151	5-G08
79 77 689	08A	111	5-E16
79 77 788	02	051	1-E04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 77 788	02	053	1-E06
79 77 788	02	055	1-E08
79 77 804	08B	007	6-A08
79 77 804	08B	009	6-A10
79 77 879	02	057	1-E10
79 77 879	02	059	1-E12
79 77 895	08B	205	6-I14
79 77 911	03A	079	2-D08
79 77 911	08A	117	5-E22
79 77 929	02	079	1-F08
79 77 929	03A	017	2-A18
79 77 929	03A	019	2-A20
79 77 929	03A	075	2-D04
79 77 929	03A	077	2-D06
79 77 929	03A	087	2-D16
79 77 929	03A	103	2-E08
79 77 929	03A	113	2-E18
79 77 929	03A	183	2-H16
79 77 929	05	009	4-A10
79 77 929	05	015	4-A16
79 77 929	08A	033	5-B10
79 77 929	08A	049	5-C02
79 77 929	08A	053	5-C06
79 77 929	08A	099	5-E04
79 77 929	08A	135	5-F16
79 77 929	08A	155	5-G12
79 77 929	08C	025	6-L02
79 77 929	08C	027	6-L04
79 77 929	08C	029	6-L06
79 77 929	08C	033	6-L10
79 77 929	08C	035	6-L12
79 77 960	08A	043	5-B20
79 77 960	08B	191	6-H24
79 78 034	03A	219	2-J04
79 78 091	02	049	1-E02
79 78 091	03A	087	2-D16
79 78 091	03A	107	2-E12
79 78 091	08A	031	5-B08
79 78 091	08A	047	5-B24
79 78 091	08B	145	6-G02
79 78 091	08B	149	6-G06
79 78 109	03A	039	2-B16
79 78 109	03A	111	2-E16
79 78 109	08A	043	5-B20
79 78 109	08A	047	5-B24
79 78 109	08A	067	5-C20
79 78 109	08A	069	5-C22
79 78 117	03A	083	2-D12
79 78 117	03A	103	2-E08
79 78 117	03A	111	2-E16
79 78 117	08B	211	6-I20
79 78 117	08C	025	6-L02
79 78 117	08C	027	6-L04
79 78 117	08C	033	6-L10
79 78 117	08C	035	6-L12
79 78 133	02	133	1-H14
79 78 141	08C	025	6-L02
79 78 141	08C	037	6-L14
79 78 174	08C	025	6-L02
79 78 174	08C	033	6-L10

7-C10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 78 174	08C	035	6-L12
79 78 208	02	089	1-F18
79 78 208	02	091	1-F20
79 78 208	02	093	1-F22
79 78 208	02	095	1-F24
79 78 208	06	027	4-D04
79 78 208	08C	015	6-K16
79 78 208	08C	019	6-K20
79 78 208	08C	033	6-L10
79 78 208	08C	035	6-L12
79 78 224	06	025	4-D02
79 78 224	08C	017	6-K18
79 78 224	08C	019	6-K20
79 78 224	08C	035	6-L12
79 78 232	06	027	4-D04
79 78 232	08C	027	6-L04
79 78 257	02	009	1-C10
79 78 257	06	027	4-D04
79 78 273	08A	011	5-A12
79 78 299	06	027	4-D04
79 78 307	08C	021	6-K22
79 78 307	08C	023	6-K24
79 78 349	06	021	4-C22
79 78 356	03A	107	2-E12
79 78 372	03A	119	2-E24
79 78 372	03A	189	2-H22
79 78 380	08A	063	5-C16
79 78 380	08B	199	6-I08
79 78 422	08A	069	5-C22
79 78 638	05	009	4-A10
79 78 638	05	015	4-A16
79 78 638	08A	019	5-A20
79 78 638	08C	007	6-K08
79 78 646	08A	123	5-F04
79 78 711	07	007	4-E08
79 78 745	03A	015	2-A16
79 79 248	05	027	4-B04
79 79 248	06	005	4-C06
79 79 271	05	025	4-B02
79 79 396	07	015	4-E16
79 79 479	08B	177	6-H10
79 79 479	08B	217	6-J02
79 79 487	07	023	4-E24
79 79 511	07	015	4-E16
79 79 511	07	019	4-E20
79 79 511	07	025	4-F02
79 79 511	07	027	4-F04
79 79 537	07	007	4-E08
79 79 537	07	009	4-E10
79 79 552	02	009	1-C10
79 79 552	07	011	4-E12
79 79 578	07	007	4-E08
79 79 578	07	011	4-E12
79 79 594	04	013	3-H14
79 79 594	07	015	4-E16
79 79 594	07	019	4-E20
79 79 602	06	011	4-C12
79 79 602	08B	009	6-A10
79 79 602	08C	033	6-L10
79 79 602	08C	035	6-L12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 79 610	08A	021	5-A22
79 79 610	08A	049	5-C02
79 79 651	08B	211	6-I20
79 81 921	08B	185	6-H18
79 81 921	08B	215	6-I24
79 81 947	08A	085	5-D14
79 81 947	08A	123	5-F04
79 81 947	08A	159	5-G16
79 81 954	08A	061	5-C14
79 81 954	08A	069	5-C22
79 82 002	07	023	4-E24
79 82 028	07	015	4-E16
79 82 028	07	021	4-E22
79 82 036	06	005	4-C06
79 82 036	07	015	4-E16
79 82 036	07	021	4-E22
79 82 069	07	023	4-E24
79 82 085	07	023	4-E24
79 82 093	07	023	4-E24
79 82 101	07	015	4-E16
79 82 119	08C	017	6-K18
79 82 119	08C	019	6-K20
79 82 119	08C	033	6-L10
79 82 119	08C	035	6-L12
79 82 127	02	009	1-C10
79 82 143	02	009	1-C10
79 82 176	03A	119	2-E24
79 82 184	08A	057	5-C10
79 82 184	08A	059	5-C12
79 82 192	08A	019	5-A20
79 82 291	04	037	3-I14
79 82 309	04	037	3-I14
79 82 317	04	037	3-I14
79 82 317	08A	015	5-A16
79 82 325	08A	045	5-B22
79 82 325	08A	047	5-B24
79 82 325	08A	085	5-D14
79 82 325	08A	089	5-D18
79 82 325	08A	093	5-D22
79 82 325	08A	097	5-E02
79 82 325	08A	099	5-E04
79 82 325	08A	105	5-E10
79 82 325	08A	123	5-F04
79 82 325	08A	125	5-F06
79 82 325	08A	151	5-G08
79 82 325	08A	159	5-G16
79 82 325	08A	161	5-G18
79 82 333	03A	093	2-D22
79 82 366	08A	015	5-A16
79 82 564	08A	005	5-A06
79 82 564	08C	027	6-L04
79 82 655	08A	045	5-B22
79 82 655	08A	047	5-B24
79 82 655	08A	097	5-E02
79 82 655	08A	099	5-E04
79 82 655	08A	123	5-F04
79 82 655	08A	125	5-F06
79 82 655	08A	151	5-G08
79 82 655	08A	161	5-G18
79 82 721	02	009	1-C10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 82 937	02	167	1-I24
79 82 986	06	005	4-C06
79 82 994	07	007	4-E08
79 83 133	08A	005	5-A06
79 83 141	08A	005	5-A06
79 83 158	08A	005	5-A06
79 84 008	08A	005	5-A06
79 84 305	08A	031	5-B08
79 84 511	02	125	1-H06
79 84 511	02	131	1-H12
79 84 511	07	011	4-E12
79 84 750	03A	177	2-H10
79 84 768	03A	087	2-D16
79 85 112	02	045	1-D22
79 85 112	02	047	1-D24
79 85 120	02	021	1-C22
79 85 146	02	111	1-G16
79 85 146	02	113	1-G18
79 85 146	02	115	1-G20
79 85 161	02	111	1-G16
79 85 161	02	113	1-G18
79 85 161	02	115	1-G20
79 85 187	02	099	1-G04
79 94 510	08A	149	5-G06
79 94 882	08A	149	5-G06
79 94 890	08A	149	5-G06
80 05 910	02	085	1-F14
80 05 910	02	087	1-F16
80 05 910	02	089	1-F18
80 05 910	02	091	1-F20
80 05 910	02	093	1-F22
80 05 910	02	095	1-F24
80 05 910	02	097	1-G02
80 05 928	02	085	1-F14
80 05 928	02	087	1-F16
80 05 928	02	097	1-G02
80 05 936	02	085	1-F14
80 05 936	02	087	1-F16
80 05 936	02	089	1-F18
80 07 486	02	099	1-G04
80 19 564	08A	103	5-E08
80 19 648	08A	103	5-E08
80 19 697	03A	107	2-E12
80 19 705	03A	113	2-E18
80 19 713	08B	159	6-G16
80 19 747	03A	021	2-A22
80 19 895	02	085	1-F14
80 19 895	02	087	1-F16
80 19 895	02	089	1-F18
80 19 895	02	093	1-F22
80 19 895	02	135	1-H16
80 19 903	02	085	1-F14
80 19 903	02	153	1-I10
80 19 903	02	155	1-I12
80 19 911	03A	085	2-D14
80 19 911	08C	021	6-K22
80 19 911	08C	025	6-L02
80 19 929	02	117	1-G22
80 19 929	02	119	1-G24
80 21 743	02	079	1-F08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 21 917	05	021	4-A22
80 21 917	05	023	4-A24
80 21 925	05	021	4-A22
80 21 925	05	023	4-A24
80 29 548	03A	079	2-D08
80 29 548	03A	083	2-D12
80 29 548	03A	111	2-E16
80 29 548	03A	113	2-E18
80 29 548	03A	189	2-H22
80 29 555	04	069	3-J22
80 29 936	02	101	1-G06
80 29 936	08B	009	6-A10
80 29 944	04	031	3-I08
80 29 944	04	033	3-I10
80 29 944	08B	161	6-G18
80 29 944	08B	173	6-H06
80 29 944	08B	217	6-J02
80 29 951	02	069	1-E22
80 29 951	02	071	1-E24
80 29 951	03A	041	2-B18
80 29 951	05	021	4-A22
80 29 951	05	023	4-A24
80 29 951	08B	161	6-G18
80 29 951	08B	163	6-G20
80 29 969	05	029	4-B06
80 29 969	08A	051	5-C04
80 29 969	08A	055	5-C08
80 29 969	08C	007	6-K08
80 29 969	08C	009	6-K10
80 29 977	08A	045	5-B22
80 29 985	02	015	1-C16
80 29 985	02	123	1-H04
80 29 985	02	129	1-H10
80 29 985	02	165	1-I22
80 29 985	04	031	3-I08
80 29 985	04	033	3-I10
80 29 985	06	011	4-C12
80 29 985	06	023	4-C24
80 29 985	06	027	4-D04
80 29 993	05	013	4-A14
80 30 009	02	163	1-I20
80 34 373	04	017	3-H18
80 34 456	02	025	1-D02
80 34 456	02	029	1-D06
80 34 472	04	005	3-H06
80 34 761	02	019	1-C20
80 34 928	02	031	1-D08
80 34 928	02	035	1-D12
80 35 040	02	021	1-C22
80 46 542	02	069	1-E22
80 46 625	02	039	1-D16
80 46 625	04	025	3-I02
80 46 674	02	155	1-I12
80 46 674	02	173	1-J06
80 46 682	02	155	1-I12
80 46 682	02	173	1-J06
80 47 128	02	043	1-D20
80 47 706	04	033	3-I10
80 47 706	04	071	3-J24
80 47 748	06	027	4-D04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C11 Numerical register Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 47 813	04	027	3-I04
80 48 324	04	025	3-I02
80 48 324	04	027	3-I04
80 48 324	04	079	3-K08
80 48 670	02	025	1-D02
80 48 670	02	027	1-D04
80 49 405	02	155	1-I12
80 49 553	04	017	3-H18
80 49 736	04	025	3-I02
80 49 827	02	097	1-G02
80 50 601	02	101	1-G06
80 56 004	02	175	1-J08
80 56 160	05	005	4-A06
80 56 194	06	027	4-D04
80 57 259	02	099	1-G04
80 59 073	02	099	1-G04
80 59 206	08A	061	5-C14
80 59 206	08A	065	5-C18
80 59 214	08A	057	5-C10
80 59 214	08A	059	5-C12
80 59 230	03A	113	2-E18
80 59 230	08C	007	6-K08
80 59 230	08C	009	6-K10
80 59 248	08B	191	6-H24
80 59 271	08A	159	5-G16
80 59 362	08C	029	6-L06
80 59 396	02	109	1-G14
80 59 396	02	119	1-G24
80 59 396	08A	039	5-B16
80 59 396	08A	057	5-C10
80 59 396	08A	059	5-C12
80 59 396	08B	009	6-A10
80 59 396	08B	087	6-D16
80 59 396	08B	099	6-E04
80 59 396	08B	113	6-E18
80 59 396	08B	127	6-F08
80 59 396	08B	161	6-G18
80 59 396	08B	173	6-H06
80 59 396	08B	217	6-J02
80 59 412	08B	169	6-H02
80 59 420	02	169	1-J02
80 59 420	03A	021	2-A22
80 59 420	08B	199	6-I08
80 59 537	08A	097	5-E02
80 59 537	08A	151	5-G08
80 59 537	08B	163	6-G20
80 59 537	08B	217	6-J02
80 59 545	08A	061	5-C14
80 59 545	08A	069	5-C22
80 59 552	03A	179	2-H12
80 59 552	08B	185	6-H18
80 59 552	08B	215	6-I24
80 59 560	08B	161	6-G18
80 59 560	08B	217	6-J02
80 59 560	08B	219	6-J04
80 59 578	03A	189	2-H22
80 59 578	08A	061	5-C14
80 59 578	08A	063	5-C16
80 59 578	08A	067	5-C20
80 59 578	08A	069	5-C22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
80 59 578	08A	083	5-D12
80 59 578	08A	131	5-F12
80 59 578	08A	133	5-F14
80 59 578	08A	135	5-F16
80 59 578	08C	025	6-L02
80 59 743	03A	073	2-D02
80 59 826	08B	173	6-H06
80 69 015	02	101	1-G06
80 73 108	03A	011	2-A12
80 73 108	03A	015	2-A16
80 73 108	06	007	4-C08
80 73 108	08A	137	5-F18
80 73 108	08B	161	6-G18
80 73 108	08B	177	6-H10
80 73 116	04	013	3-H14
80 73 116	06	017	4-C18
80 73 116	07	015	4-E16
80 73 116	07	019	4-E20
80 73 223	02	153	1-I10
80 73 223	08A	137	5-F18
80 73 223	08C	037	6-L14
80 73 249	02	111	1-G16
80 73 249	02	113	1-G18
80 73 249	02	115	1-G20
80 73 264	06	007	4-C08
80 73 512	04	007	3-H08
80 73 512	04	031	3-I08
80 73 512	04	033	3-I10
80 73 512	08C	037	6-L14
80 74 098	08A	103	5-E08
80 74 106	03A	015	2-A16
80 74 106	05	011	4-A12
80 74 106	05	031	4-B08
80 74 106	05	035	4-B12
80 74 106	06	025	4-D02
80 74 288	02	099	1-G04
80 74 288	03A	097	2-E02
80 82 935	02	165	1-I22
80 82 935	03A	179	2-H12
80 82 943	02	009	1-C10
80 82 950	02	013	1-C14
80 82 950	02	017	1-C18
80 82 950	03A	025	2-B02
80 82 968	04	005	3-H06
80 82 968	05	021	4-A22
80 83 024	02	029	1-D06
80 83 941	06	027	4-D04
80 83 958	06	023	4-C24
80 83 974	04	041	3-I18
80 84 063	02	135	1-H16
80 84 105	08A	137	5-F18
80 91 738	03A	179	2-H12
80 94 732	04	013	3-H14
80 96 364	02	099	1-G04
80 97 800	08C	023	6-K24
80 98 097	02	015	1-C16
80 98 295	05	005	4-A06
80 98 311	05	013	4-A14
80 98 378	03A	011	2-A12
80 98 378	03A	015	2-A16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 09 647	04	013	3-H14
81 09 688	02	043	1-D20
81 17 616	04	019	3-H20
81 17 640	04	017	3-H18
81 17 640	04	019	3-H20
81 17 657	04	017	3-H18
81 17 863	04	025	3-I02
81 23 143	02	011	1-C12
81 23 143	02	015	1-C16
81 23 176	02	025	1-D02
81 23 218	02	021	1-C22
81 23 259	02	021	1-C22
81 23 721	02	013	1-C14
81 23 721	02	015	1-C16
81 23 721	02	019	1-C20
81 23 721	02	021	1-C22
81 23 721	02	085	1-F14
81 23 721	02	087	1-F16
81 23 721	02	089	1-F18
81 23 721	02	091	1-F20
81 23 721	02	153	1-I10
81 23 721	02	155	1-I12
81 23 739	02	111	1-G16
81 23 739	02	113	1-G18
81 23 739	02	115	1-G20
81 23 747	02	121	1-H02
81 23 747	02	127	1-H08
81 23 788	02	153	1-I10
81 23 903	02	045	1-D22
81 23 903	02	047	1-D24
81 23 903	02	153	1-I10
81 23 903	02	155	1-I12
81 23 903	02	157	1-I14
81 24 125	02	091	1-F20
81 24 125	02	093	1-F22
81 24 125	02	095	1-F24
81 24 125	02	097	1-G02
81 24 133	02	045	1-D22
81 24 133	02	047	1-D24
81 24 133	02	155	1-I12
81 24 141	02	019	1-C20
81 24 141	02	021	1-C22
81 24 141	02	045	1-D22
81 24 141	02	047	1-D24
81 24 141	02	117	1-G22
81 24 141	02	153	1-I10
81 24 141	02	155	1-I12
81 24 141	02	157	1-I14
81 24 141	02	171	1-J04
81 24 158	02	153	1-I10
81 24 158	02	157	1-I14
81 24 208	02	153	1-I10
81 24 216	02	039	1-D16
81 25 007	02	071	1-E24
81 25 007	02	097	1-G02
81 25 007	02	101	1-G06
81 25 007	02	103	1-G08
81 25 007	02	155	1-I12
81 25 007	03A	179	2-H12
81 25 015	02	027	1-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 25 015	02	043	1-D20
81 25 015	02	047	1-D24
81 25 015	02	091	1-F20
81 25 015	02	093	1-F22
81 25 015	02	095	1-F24
81 25 02[illegible]	02	039	1-D16
81 25 02[illegible]	02	041	1-D18
81 25 0[illegible]3	03A	027	2-B04
81 25 0[illegible]3	03A	031	2-B08
81 25 031	02	021	1-C22
81 25 031	02	029	1-D06
81 25 031	02	039	1-D16
81 25 031	02	041	1-D18
81 25 031	02	043	1-D20
81 25 049	02	025	1-D02
81 25 049	02	029	1-D06
81 25 064	03A	185	2-H18
81 25 072	02	027	1-D04
81 25 072	02	029	1-D06
81 25 130	02	121	1-H02
81 25 130	02	123	1-H04
81 25 130	02	127	1-H08
81 25 130	02	129	1-H10
81 25 148	02	069	1-E22
81 25 148	02	071	1-E24
81 25 148	02	095	1-F24
81 25 148	02	105	1-G10
81 25 148	02	153	1-I10
81 25 148	02	163	1-I20
81 25 148	02	165	1-I22
81 25 148	02	167	1-I24
81 25 155	02	087	1-F16
81 25 155	02	089	1-F18
81 25 155	02	091	1-F20
81 25 155	02	093	1-F22
81 25 163	02	019	1-C20
81 25 163	02	041	1-D18
81 25 163	02	045	1-D22
81 25 163	02	047	1-D24
81 25 163	02	087	1-F16
81 25 163	02	089	1-F18
81 25 163	02	091	1-F20
81 25 163	02	093	1-F22
81 25 163	02	095	1-F24
81 25 163	04	017	3-H18
81 25 189	02	011	1-C12
81 25 189	02	019	1-C20
81 25 189	02	039	1-D16
81 25 189	02	041	1-D18
81 25 189	02	043	1-D20
81 25 189	02	155	1-I12
81 25 189	02	157	1-I14
81 25 189	04	025	3-I02
81 25 197	02	085	1-F14
81 25 197	02	087	1-F16
81 25 197	02	089	1-F18
81 25 197	02	091	1-F20
81 25 197	02	093	1-F22
81 25 197	02	095	1-F24
81 25 197	02	097	1-G02

7-C12 Numerical register Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 25 197	02	153	1-I10
81 25 197	02	155	1-I12
81 25 205	02	011	1-C12
81 25 205	02	019	1-C20
81 25 205	02	039	1-D16
81 25 205	02	041	1-D18
81 25 205	02	085	1-F14
81 25 205	02	087	1-F16
81 25 213	02	011	1-C12
81 25 213	02	015	1-C16
81 25 213	02	025	1-D02
81 25 221	02	041	1-D18
81 25 221	04	013	3-H14
81 25 221	04	017	3-H18
81 25 221	04	023	3-H24
81 25 239	02	025	1-D02
81 25 239	02	153	1-I10
81 25 247	02	025	1-D02
81 25 247	02	029	1-D06
81 25 247	02	155	1-I12
81 25 254	02	029	1-D06
81 25 254	02	039	1-D16
81 25 254	02	041	1-D18
81 25 262	02	019	1-C20
81 25 262	02	025	1-D02
81 25 262	02	039	1-D16
81 25 262	02	041	1-D18
81 25 270	02	155	1-I12
81 25 296	02	029	1-D06
81 25 304	02	039	1-D16
81 25 304	02	041	1-D18
81 25 452	02	021	1-C22
81 25 494	02	021	1-C22
81 29 868	03A	021	2-A22
81 29 876	02	021	1-C22
81 29 892	02	155	1-I12
81 30 064	08A	009	5-A10
81 31 963	02	045	1-D22
81 31 963	02	047	1-D24
81 31 989	02	117	1-G22
81 31 989	02	119	1-G24
81 32 045	02	097	1-G02
81 32 219	02	045	1-D22
81 32 219	02	047	1-D24
81 32 227	02	153	1-I10
81 32 235	02	117	1-G22
81 32 235	02	119	1-G24
81 35 147	03B	107	3-E12
81 35 147	03B	119	3-E24
81 35 147	03B	127	3-F08
81 35 147	03B	139	3-F20
81 38 679	03B	109	3-E14
81 38 679	03B	119	3-E24
81 38 679	03B	129	3-F10
81 38 679	03B	139	3-F20
81 39 339	03A	021	2-A22
81 39 339	03A	027	2-B04
81 39 339	03A	031	2-B08
81 39 362	03A	021	2-A22
81 45 534	02	045	1-D22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
81 45 534	02	047	1-D24
81 45 542	02	153	1-I10
81 45 559	02	117	1-G22
81 45 559	02	119	1-G24
81 51 045	02	099	1-G04
81 51 177	02	071	1-E24
81 51 219	03A	079	2-D08
81 51 227	03A	067	2-C20
81 51 227	03A	079	2-D08
81 51 235	03A	073	2-D02
81 51 235	04	013	3-H14
81 51 235	04	071	3-J24
81 51 235	05	021	4-A22
81 51 235	06	023	4-C24
81 51 235	08A	039	5-B16
81 51 243	08C	015	6-K16
81 51 326	02	089	1-F18
81 51 326	02	099	1-G04
81 51 342	04	013	3-H14
81 51 342	04	041	3-I18
81 51 474	07	007	4-E08
81 51 474	07	011	4-E12
81 51 474	07	015	4-E16
81 51 474	07	021	4-E22
81 51 474	07	023	4-E24
81 51 482	06	017	4-C18
81 51 482	06	029	4-D06
81 51 482	07	015	4-E16
81 51 482	07	019	4-E20
81 51 482	07	023	4-E24
81 52 381	02	039	1-D16
81 52 381	02	041	1-D18
82 04 760	08A	035	5-B12
82 06 096	03A	097	2-E02
82 06 096	08A	009	5-A10
82 06 096	08A	023	5-A24
82 06 096	08A	027	5-B04
82 06 096	08A	037	5-B14
82 09 009	08A	021	5-A22
82 35 178	03A	101	2-E06
82 35 178	08A	009	5-A10
82 35 178	08A	013	5-A14
82 35 178	08C	037	6-L14
82 38 305	08B	191	6-H24
82 39 170	08A	009	5-A10
82 41 325	08A	011	5-A12
82 47 181	08A	053	5-C06
82 52 363	08A	039	5-B16
82 52 363	08A	061	5-C14
82 52 553	04	007	3-H08
82 52 553	04	009	3-H10
82 52 553	05	025	4-B02
82 52 553	05	027	4-B04
82 52 553	08A	039	5-B16
82 52 553	08A	061	5-C14
82 52 553	08A	067	5-C20
82 57 750	08A	065	5-C18
82 58 428	08A	131	5-F12
82 58 428	08A	133	5-F14
82 62 610	08B	013	6-A14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 62 958	08A	039	5-B16
82 64 855	08A	039	5-B16
82 66 876	08A	011	5-A12
82 67 205	08A	099	5-E04
82 67 296	03A	029	2-B06
82 67 296	08A	037	5-B14
82 72 494	03A	087	2-D16
82 72 635	08A	037	5-B14
82 73 468	08A	123	5-F04
82 73 468	08A	151	5-G08
82 78 558	02	147	1-I04
82 78 558	08A	041	5-B18
82 78 558	08A	043	5-B20
82 79 044	08A	067	5-C20
82 83 715	08A	021	5-A22
82 83 897	08A	119	5-E24
82 83 897	08A	153	5-G10
82 83 905	08A	119	5-E24
82 83 905	08A	153	5-G10
82 84 028	08A	115	5-E20
82 84 028	08A	151	5-G08
82 84 069	08A	117	5-E22
82 84 069	08A	159	5-G16
82 84 077	08A	051	5-C04
82 84 077	08A	055	5-C08
82 84 077	08A	161	5-G18
82 84 085	08A	051	5-C04
82 84 085	08A	055	5-C08
82 84 085	08A	161	5-G18
82 84 127	08A	143	5-F24
82 84 135	08A	143	5-F24
82 84 143	08A	145	5-G02
82 84 150	08A	147	5-G04
82 84 168	08A	143	5-F24
82 84 176	08A	143	5-F24
82 84 184	08A	145	5-G02
82 84 192	08A	077	5-D06
82 84 234	08A	075	5-D04
82 84 242	08A	075	5-D04
82 84 259	08A	075	5-D04
82 84 267	08A	097	5-E02
82 84 267	08A	151	5-G08
82 84 267	08A	155	5-G12
82 84 275	08A	097	5-E02
82 84 275	08A	155	5-G12
82 84 283	08A	097	5-E02
82 84 283	08A	155	5-G12
82 84 291	08A	143	5-F24
82 84 309	08A	147	5-G04
82 84 317	08A	143	5-F24
82 84 325	08A	145	5-G02
82 84 333	08A	101	5-E06
82 84 341	08A	123	5-F04
82 84 341	08A	151	5-G08
82 84 358	08A	049	5-C02
82 84 358	08A	053	5-C06
82 84 366	08A	049	5-C02
82 84 366	08A	053	5-C06
82 84 374	08A	085	5-D14
82 84 374	08A	167	5-G24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 84 382	08A	085	5-D14
82 84 382	08A	167	5-G24
82 84 416	08A	075	5-D04
82 84 424	08A	075	5-D04
82 84 432	08A	075	5-D04
82 84 473	08A	147	5-G04
82 84 481	08A	147	5-G04
82 84 499	08A	147	5-G04
82 84 507	08A	147	5-G04
82 84 523	08A	097	5-E02
82 84 523	08A	151	5-G08
82 84 531	08A	115	5-E20
82 84 531	08A	151	5-G08
82 84 531	08A	163	5-G20
82 84 549	08A	125	5-F06
82 84 549	08A	169	5-H02
82 84 556	08A	125	5-F06
82 84 556	08A	169	5-H02
82 84 564	08A	125	5-F06
82 84 564	08A	167	5-G24
82 84 572	08A	125	5-F06
82 84 572	08A	167	5-G24
82 84 580	08A	117	5-E22
82 84 580	08A	163	5-G20
82 84 598	08A	117	5-E22
82 84 598	08A	163	5-G20
82 84 606	08A	101	5-E06
82 84 606	08A	163	5-G20
82 84 614	08A	101	5-E06
82 84 614	08A	163	5-G20
82 84 622	08A	101	5-E06
82 84 622	08A	165	5-G22
82 84 630	08A	081	5-D10
82 84 630	08A	167	5-G24
82 84 648	08A	081	5-D10
82 84 648	08A	167	5-G24
82 84 655	08A	123	5-F04
82 84 655	08A	159	5-G16
82 84 663	08A	123	5-F04
82 84 663	08A	159	5-G16
82 84 689	08A	083	5-D12
82 84 697	08A	085	5-D14
82 84 705	08A	085	5-D14
82 84 705	08A	089	5-D18
82 84 705	08A	093	5-D22
82 84 713	08A	085	5-D14
82 84 713	08A	089	5-D18
82 84 713	08A	093	5-D22
82 84 721	08A	123	5-F04
82 84 721	08A	159	5-G16
82 84 739	08A	123	5-F04
82 84 739	08A	159	5-G16
82 84 747	08A	123	5-F04
82 84 747	08A	159	5-G16
82 84 [illegible]54	08A	147	5-G04
82 84 7[illegible]2	08A	147	5-G04
82 84 78[illegible]	08A	103	5-E08
82 84 78[illegible]	08A	165	5-G22
82 84 796	08A	103	5-E08
82 84 796	08A	163	5-G20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
82 84 804	08A	103	5-E08
82 84 804	08A	163	5-G20
82 84 812	08A	081	5-D10
82 84 812	08A	167	5-G24
82 84 820	08A	081	5-D10
82 84 820	08A	167	5-G24
82 84 846	08A	135	5-F16
82 84 879	08A	147	5-G04
82 84 887	08A	147	5-G04
82 84 903	08A	115	5-E20
82 84 903	08A	153	5-G10
82 84 911	08A	075	5-D04
82 84 952	08A	143	5-F24
82 84 960	08A	143	5-F24
82 84 978	08A	145	5-G02
82 85 231	08A	143	5-F24
82 85 231	08A	145	5-G02
82 85 231	08A	147	5-G04
82 85 231	08A	149	5-G06
82 85 249	08A	149	5-G06
82 85 256	08A	149	5-G06
82 85 264	08A	149	5-G06
82 85 272	08A	115	5-E20
82 85 272	08A	153	5-G10
82 85 280	08A	049	5-C02
82 85 298	08A	053	5-C06
82 85 306	08A	075	5-D04
82 85 314	08A	099	5-E04
82 85 314	08A	155	5-G12
82 85 322	08A	099	5-E04
82 85 322	08A	155	5-G12
82 85 371	08A	143	5-F24
82 85 389	08A	143	5-F24
82 85 397	08A	145	5-G02
82 85 405	08A	147	5-G04
82 85 413	08A	105	5-E10
82 85 413	08A	165	5-G22
82 85 421	08A	105	5-E10
82 85 421	08A	165	5-G22
82 85 439	08A	105	5-E10
82 85 439	08A	165	5-G22
82 85 447	08A	105	5-E10
82 85 447	08A	167	5-G24
82 85 454	08A	105	5-E10
82 85 454	08A	167	5-G24
82 85 488	08A	143	5-F24
82 85 488	08A	145	5-G02
82 85 488	08A	147	5-G04
82 85 496	08A	143	5-F24
82 85 496	08A	145	5-G02
82 85 496	08A	147	5-G04
82 86 296	02	079	1-F08
82 86 296	03A	179	2-H12
82 86 296	04	071	3-J24
82 86 296	08A	019	5-A20
82 86 296	08A	039	5-B16
82 86 296	08B	205	6-I14
83 07 407	04	005	3-H06
83 08 389	04	069	3-J22
83 11 904	08B	181	6-H14
83 11 904	08B	215	6-I24
83 19 915	02	063	1-E16
83 20 319	02	069	1-E22
83 22 331	04	069	3-J22
83 22 927	02	063	1-E16
83 22 927	02	151	1-I08
83 22 927	02	175	1-J08
83 22 927	02	177	1-J10
83 26 704	02	069	1-E22
83 26 704	02	071	1-E24
83 26 712	02	011	1-C12
83 26 712	02	013	1-C14
83 26 712	02	015	1-C16
83 26 712	02	047	1-D24
83 26 712	02	085	1-F14
83 26 712	02	087	1-F16
83 26 712	02	089	1-F18
83 26 712	02	091	1-F20
83 26 712	02	117	1-G22
83 26 712	02	155	1-I12
83 26 712	02	159	1-I16
83 30 268	02	137	1-H18
83 30 268	02	177	1-J10
83 30 268	08C	037	6-L14
83 32 587	02	063	1-E16
83 35 002	04	031	3-I08
83 35 002	04	033	3-I10
83 35 614	02	099	1-G04
83 35 614	02	119	1-G24
83 44 335	04	019	3-H20
83 46 470	02	019	1-C20
83 46 470	02	021	1-C22
83 46 470	02	043	1-D20
83 46 983	02	031	1-D08
83 47 122	02	025	1-D02
83 47 270	02	033	1-D10
83 47 577	02	031	1-D08
83 47 650	02	031	1-D08
83 47 650	02	035	1-D12
83 47 676	02	031	1-D08
83 47 676	02	035	1-D12
83 48 047	02	019	1-C20
83 48 047	02	021	1-C22
83 48 534	02	025	1-D02
83 48 609	02	039	1-D16
83 48 609	02	041	1-D18
83 48 609	02	043	1-D20
83 49 938	02	031	1-D08
83 49 938	02	035	1-D12
83 49 946	02	031	1-D08
83 49 946	02	035	1-D12
83 49 953	02	035	1-D12
83 49 961	02	035	1-D12
83 50 936	02	031	1-D08
83 50 977	02	033	1-D10
83 50 985	02	033	1-D10
83 52 502	02	019	1-C20
83 52 502	02	021	1-C22
83 52 692	02	157	1-I14
83 52 692	02	173	1-J06
83 53 484	02	099	1-G04
83 55 315	02	033	1-D10
83 55 323	02	033	1-D10
83 55 331	02	033	1-D10
83 55 349	02	031	1-D08
83 55 349	02	035	1-D12
83 55 356	02	031	1-D08
83 55 356	02	035	1-D12
83 55 364	02	031	1-D08
83 55 364	02	035	1-D12
83 57 345	02	099	1-G04
83 57 378	02	101	1-G06
83 57 543	02	085	1-F14
83 57 543	02	087	1-F16
83 57 543	02	089	1-F18
83 57 543	02	091	1-F20
83 57 543	02	093	1-F22
83 57 543	02	095	1-F24
83 59 275	02	157	1-I14
83 59 937	02	085	1-F14
83 59 937	02	087	1-F16
83 59 937	02	089	1-F18
83 59 937	02	091	1-F20
83 59 937	02	093	1-F22
83 59 937	02	095	1-F24
83 59 937	02	097	1-G02
83 60 463	02	097	1-G02
83 60 463	02	099	1-G04
83 60 943	02	113	1-G18
83 60 943	02	115	1-G20
83 62 287	02	013	1-C14
83 62 287	02	017	1-C18
83 62 287	03A	025	2-B02
83 66 007	02	019	1-C20
83 66 262	02	163	1-I20
83 69 829	02	025	1-D02
83 71 650	02	135	1-H16
83 75 172	04	031	3-I08
83 75 172	04	033	3-I10
83 78 630	03B	005	3-A06
83 78 630	03B	033	3-B10
83 78 630	03B	057	3-C10
83 78 630	03B	083	3-D12
83 80 982	04	005	3-H06
83 80 982	07	017	4-E18
83 80 982	07	021	4-E22
84 10 961	03A	179	2-H12
84 12 215	08A	127	5-F08
84 26 199	08A	043	5-B20
84 26 199	08A	061	5-C14
84 26 199	08A	065	5-C18
84 26 199	08A	069	5-C22
84 26 199	08B	191	6-H24
84 27 841	08B	017	6-A18
84 28 997	03A	069	2-C22
84 38 467	08B	185	6-H18
84 38 467	08B	189	6-H22
84 41 503	03A	107	2-E12
84 41 503	04	071	3-J24
84 41 503	08B	011	6-A12
84 41 503	08B	191	6-H24
84 52 898	08B	131	6-F12
84 52 898	08B	137	6-F18
84 52 898	08B	141	6-F22
84 52 898	08B	145	6-G02
84 52 898	08B	149	6-G06
84 53 755	08A	057	5-C10
84 53 755	08A	059	5-C12
84 57 541	08B	185	6-H18
84 57 541	08B	189	6-H22
84 57 541	08B	221	6-J06
84 58 598	08B	169	6-H02
84 58 598	08B	221	6-J06
84 59 489	08A	009	5-A10
84 59 497	05	019	4-A20
84 59 497	05	021	4-A22
84 59 497	05	023	4-A24
84 67 409	08B	203	6-I12
84 86 292	08A	145	5-G02
84 86 292	08A	147	5-G04
84 86 300	08A	145	5-G02
84 86 300	08A	147	5-G04
84 87 225	08A	147	5-G04
84 87 286	08A	143	5-F24
84 87 274	08A	143	5-F24
84 87 282	08A	145	5-G02
84 87 621	08A	143	5-F24
84 87 621	08A	145	5-G02
84 87 621	08A	147	5-G04
84 87 712	08A	145	5-G02
84 87 753	08A	143	5-F24
84 87 761	08A	143	5-F24
84 87 779	08A	149	5-G06
84 87 787	08A	149	5-G06
84 90 708	08B	021	6-A22
84 97 471	03A	009	2-A10
84 97 471	03A	179	2-H12
84 99 204	08B	209	6-I18
84 99 204	08B	213	6-I22
84 99 204	08B	217	6-J02
84 99 238	08B	209	6-I18
85 00 613	03A	071	2-C24
85 00 613	03A	093	2-D22
85 00 613	04	071	3-J24
85 00 613	08B	011	6-A12
85 00 613	08C	005	6-K06
85 01 264	03A	069	2-C22
85 04 144	03A	085	2-D14
85 06 925	09	011	7-A12
85 06 941	08C	033	6-L10
85 06 941	09	011	7-A12
85 08 848	02	169	1-J02
85 09 002	02	119	1-G24
85 09 002	02	169	1-J02
85 09 002	03A	085	2-D14
85 09 002	03A	087	2-D16
85 09 002	03A	097	2-E02
85 09 697	08B	011	6-A12
85 09 846	03B	109	3-E14
85 09 846	03B	119	3-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 09 846	03B	129	3-F10
85 09 846	03B	139	3-F20
85 10 851	03A	033	2-B10
85 10 851	03A	035	2-B12
85 10 851	03A	037	2-B14
85 13 574	03A	085	2-D14
85 14 028	03B	109	3-E14
85 14 028	03B	119	3-E24
85 14 028	03B	129	3-F10
85 14 028	03B	139	3-F20
85 14 036	03B	033	3-B10
85 14 036	03B	057	3-C10
85 14 036	03B	083	3-D12
85 14 036	03B	107	3-E12
85 14 036	03B	109	3-E14
85 14 036	03B	117	3-E22
85 14 036	03B	119	3-E24
85 14 036	03B	127	3-F08
85 14 036	03B	129	3-F10
85 14 036	03B	137	3-F18
85 14 036	03B	139	3-F20
85 16 916	03B	005	3-A06
85 16 916	03B	033	3-B10
85 16 916	03B	057	3-C10
85 16 916	03B	083	3-D12
85 16 957	03B	023	3-A24
85 16 957	03B	051	3-C04
85 18 557	03A	085	2-D14
85 21 593	03B	005	3-A06
85 21 593	03B	009	3-A10
85 21 593	03B	013	3-A14
85 21 593	03B	019	3-A20
85 21 593	03B	027	3-B04
85 21 593	03B	035	3-B12
85 21 593	03B	037	3-B14
85 21 593	03B	041	3-B18
85 21 593	03B	047	3-B24
85 21 593	03B	057	3-C10
85 21 593	03B	059	3-C12
85 21 593	03B	065	3-C18
85 21 593	03B	071	3-C24
85 21 593	03B	083	3-D12
85 21 593	03B	089	3-D18
85 21 593	03B	095	3-D24
85 21 593	03B	109	3-E14
85 21 593	03B	119	3-E24
85 21 593	03B	129	3-F10
85 21 593	03B	139	3-F20
85 21 619	03B	007	3-A08
85 21 619	03B	035	3-B12
85 21 619	03B	057	3-C10
85 21 668	03B	115	3-E20
85 21 668	03B	125	3-F06
85 21 668	03B	135	3-F16
85 21 668	03B	145	3-G02
85 21 676	03B	111	3-E16
85 21 676	03B	121	3-F02
85 21 676	03B	131	3-F12
85 21 676	03B	141	3-F22
85 21 684	03B	005	3-A06
85 21 684	03B	033	3-B10
85 21 684	03B	057	3-C10
85 21 684	03B	083	3-D12
85 21 684	03B	111	3-E16
85 21 684	03B	121	3-F02
85 21 684	03B	131	3-F12
85 21 684	03B	141	3-F22
85 21 692	03B	005	3-A06
85 21 692	03B	033	3-B10
85 21 692	03B	057	3-C10
85 21 692	03B	083	3-D12
85 21 700	03B	019	3-A20
85 21 700	03B	047	3-B24
85 21 700	03B	075	3-D04
85 21 700	03B	095	3-D24
85 21 718	03B	019	3-A20
85 21 718	03B	047	3-B24
85 21 718	03B	075	3-D04
85 21 718	03B	097	3-E02
85 22 310	03A	193	2-I02
85 22 310	03A	197	2-I06
85 22 310	03A	199	2-I08
85 22 310	03A	201	2-I10
85 22 310	03A	203	2-I12
85 22 310	03A	205	2-I14
85 22 310	08C	033	6-L10
85 22 310	08C	035	6-L12
85 22 492	03A	101	2-E06
85 22 526	03B	005	3-A06
85 22 526	03B	033	3-B10
85 22 526	03B	057	3-C10
85 22 526	03B	083	3-D12
85 22 526	03B	121	3-F02
85 22 526	03B	131	3-F12
85 22 534	03B	005	3-A06
85 22 534	03B	009	3-A10
85 22 534	03B	037	3-B14
85 22 534	03B	057	3-C10
85 22 534	03B	061	3-C14
85 22 534	03B	087	3-D16
85 22 534	03B	121	3-F02
85 22 534	03B	131	3-F12
85 22 534	03B	141	3-F22
85 22 542	03B	005	3-A06
85 22 542	03B	017	3-A18
85 22 542	03B	033	3-B10
85 22 542	03B	057	3-C10
85 22 542	03B	083	3-D12
85 22 542	03B	107	3-E12
85 22 542	03B	113	3-E18
85 22 542	03B	117	3-E22
85 22 542	03B	123	3-F04
85 22 542	03B	133	3-F14
85 22 542	03B	143	3-F24
85 22 575	03B	005	3-A06
85 22 575	03B	033	3-B10
85 22 575	03B	057	3-C10
85 22 575	03B	083	3-D12
85 22 583	03B	017	3-A18
85 22 583	03B	045	3-B22
85 22 583	03B	069	3-C22
85 22 583	03B	093	3-D22
85 22 583	03B	109	3-E14
85 22 583	03B	119	3-E24
85 22 583	03B	129	3-F10
85 22 583	03B	139	3-F20
85 22 617	03B	013	3-A14
85 22 617	03B	041	3-B18
85 22 617	03B	065	3-C18
85 22 617	03B	069	3-D18
85 22 617	03B	113	3-E18
85 22 617	03B	123	3-F04
85 22 617	03B	133	3-F14
85 22 617	03B	143	3-F24
85 30 099	03B	017	3-A18
85 30 099	03B	045	3-B22
85 30 099	03B	069	3-C22
85 30 099	03B	093	3-D22
85 30 107	03B	005	3-A06
85 30 107	03B	033	3-B10
85 30 107	03B	057	3-C10
85 30 107	03B	083	3-D12
85 30 107	03B	109	3-E14
85 30 107	03B	119	3-E24
85 30 107	03B	129	3-F10
85 30 107	03B	139	3-F20
85 30 115	03B	005	3-A06
85 30 115	03B	033	3-B10
85 30 115	03B	057	3-C10
85 30 115	03B	083	3-D12
85 30 917	03A	177	2-H10
85 32 426	08B	011	6-A12
85 32 756	03A	049	2-C02
85 32 756	03A	051	2-C04
85 32 756	03A	053	2-C06
85 32 756	03A	055	2-C08
85 32 756	03A	059	2-C12
85 32 756	03A	063	2-C16
85 32 756	03A	065	2-C18
85 33 028	03B	111	3-E16
85 33 028	03B	121	3-F02
85 33 028	03B	131	3-F12
85 33 028	03B	141	3-F22
85 33 176	03A	119	2-E24
85 33 184	03B	005	3-A06
85 33 184	03B	033	3-B10
85 33 184	03B	057	3-C10
85 33 184	03B	083	3-D12
85 33 358	03A	085	2-D14
85 33 366	03A	085	2-D14
85 33 655	03B	023	3-A24
85 33 655	03B	051	3-C04
85 33 697	03A	219	2-J04
85 33 697	03B	071	3-C24
85 33 697	03B	095	3-D24
85 35 692	03A	051	2-C04
85 35 692	03A	053	2-C06
85 35 692	03A	055	2-C08
85 35 692	03A	059	2-C12
85 35 692	03A	063	2-C16
85 35 692	03A	065	2-C18
85 35 692	03A	067	2-C20
85 36 401	03A	193	2-I02
85 36 401	03A	197	2-I06
85 36 401	03A	199	2-I08
85 36 401	03A	203	2-I12
85 36 401	08C	033	6-L10
85 36 401	08C	035	6-L12
85 36 419	02	135	1-H16
85 36 419	03A	177	2-H10
85 37 672	03A	049	2-C02
85 37 672	03A	063	2-C16
85 37 672	03A	065	2-C18
85 39 587	05	009	4-A10
85 39 710	03A	039	2-B16
85 41 203	03B	005	3-A06
85 41 203	03B	033	3-B10
85 41 203	03B	057	3-C10
85 41 203	03B	083	3-D12
85 41 203	03B	111	3-E16
85 41 203	03B	121	3-F02
85 41 203	03B	131	3-F12
85 41 203	03B	141	3-F22
85 41 211	03B	023	3-A24
85 41 211	03B	049	3-C02
85 41 211	03B	075	3-D04
85 41 211	03B	099	3-E04
85 41 211	03B	111	3-E16
85 41 211	03B	121	3-F02
85 41 211	03B	131	3-F12
85 41 211	03B	141	3-F22
85 41 229	03B	005	3-A06
85 41 229	03B	033	3-B10
85 41 229	03B	057	3-C10
85 41 229	03B	083	3-D12
85 44 298	03B	111	3-E16
85 44 298	03B	121	3-F02
85 44 298	03B	131	3-F12
85 44 298	03B	141	3-F22
85 44 306	03B	111	3-E16
85 44 306	03B	121	3-F02
85 44 306	03B	131	3-F12
85 44 306	03B	141	3-F22
85 44 314	03B	111	3-E16
85 44 314	03B	121	3-F02
85 44 314	03B	131	3-F12
85 44 314	03B	141	3-F22
85 44 322	03B	013	3-A14
85 44 322	03B	041	3-B18
85 44 322	03B	065	3-C18
85 44 322	03B	089	3-D18
85 44 322	03B	111	3-E16
85 44 322	03B	121	3-F02
85 44 322	03B	131	3-F12
85 44 322	03B	141	3-F22
85 44 363	03B	023	3-A24
85 44 363	03B	049	3-C02
85 44 363	03B	075	3-D04
85 44 363	03B	099	3-E04
85 44 660	03A	085	2-D14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C15 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 44 801	03A	049	2-C02
85 44 801	03A	051	2-C04
85 44 801	03A	053	2-C06
85 47 077	03A	081	2-D10
85 47 077	03A	215	2-I24
85 47 317	08A	109	5-E14
85 47 317	08A	157	5-G14
85 47 325	08A	109	5-E14
85 47 325	08A	157	5-G14
85 47 390	08A	055	5-C08
85 47 390	08A	159	5-G16
85 47 408	03A	081	2-D10
85 47 408	03A	215	2-I24
85 47 564	03A	075	2-D04
85 47 564	03A	215	2-I24
85 47 770	03A	075	2-D04
85 47 770	03B	005	3-A06
85 47 770	03B	009	3-A10
85 47 770	03B	013	3-A14
85 47 770	03B	017	3-A18
85 47 770	03B	019	3-A20
85 47 770	03B	033	3-B10
85 47 770	03B	037	3-B14
85 47 770	03B	045	3-B22
85 47 770	03B	047	3-B24
85 47 770	03B	061	3-C14
85 47 770	03B	069	3-C22
85 47 770	03B	087	3-D16
85 47 770	03B	091	3-D20
85 47 770	03B	113	3-E18
85 47 770	03B	123	3-F04
85 47 770	03B	133	3-F14
85 47 796	03B	005	3-A06
85 47 796	03B	007	3-A08
85 47 796	03B	013	3-A14
85 47 796	03B	015	3-A16
85 47 796	03B	017	3-A18
85 47 796	03B	019	3-A20
85 47 796	03B	033	3-B10
85 47 796	03B	035	3-B12
85 47 796	03B	041	3-B18
85 47 796	03B	045	3-B22
85 47 796	03B	047	3-B24
85 47 796	03B	057	3-C10
85 47 796	03B	059	3-C12
85 47 796	03B	065	3-C18
85 47 796	03B	067	3-C20
85 47 796	03B	069	3-C22
85 47 796	03B	071	3-C24
85 47 796	03B	083	3-D12
85 47 796	03B	085	3-D14
85 47 796	03B	089	3-D18
85 47 796	03B	093	3-D22
85 47 796	03B	095	3-D24
85 47 796	03B	113	3-E18
85 47 796	03B	123	3-F04
85 47 796	03B	133	3-F14
85 47 796	03B	143	3-F24
85 47 804	03B	113	3-E18
85 47 804	03B	123	3-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 47 804	03B	133	3-F14
85 47 804	03B	143	3-F24
85 47 812	03B	013	3-A14
85 47 812	03B	041	3-B18
85 47 812	03B	065	3-C18
85 47 838	03A	033	2-B10
85 47 838	03A	215	2-I24
85 47 846	03A	035	2-B12
85 47 846	03A	037	2-B14
85 47 846	03A	215	2-I24
85 47 846	03A	217	2-J02
85 47 853	02	177	1-J10
85 47 861	08A	051	5-C04
85 47 861	08A	155	5-G12
85 47 879	08A	051	5-C04
85 47 879	08A	155	5-G12
85 47 895	08A	055	5-C08
85 47 895	08A	157	5-G14
85 48 034	03A	125	2-F06
85 48 034	03A	127	2-F08
85 48 034	03A	135	2-F16
85 48 034	03A	139	2-F20
85 48 042	03A	081	2-D10
85 48 042	03A	215	2-I24
85 48 059	03A	219	2-J04
85 48 075	03A	101	2-E06
85 48 075	03A	219	2-J04
85 48 109	08A	051	5-C04
85 48 109	08A	109	5-E14
85 48 109	08A	157	5-G14
85 48 273	03A	087	2-D16
85 48 273	03A	089	2-D18
85 48 281	03A	083	2-D12
85 48 281	03A	215	2-I24
85 48 299	03A	083	2-D12
85 48 299	03A	215	2-I24
85 48 315	08C	037	6-L14
85 48 471	03A	219	2-J04
85 48 554	03A	131	2-F12
85 48 554	03A	143	2-F24
85 48 554	03A	159	2-G16
85 48 554	03A	219	2-J04
85 48 760	08A	051	5-C04
85 48 760	08A	109	5-E14
85 48 760	08A	157	5-G14
85 48 778	08A	051	5-C04
85 48 778	08A	155	5-G12
85 48 786	08A	051	5-C04
85 48 786	08A	155	5-G12
85 48 794	08A	155	5-G12
85 50 824	03A	033	2-B10
85 50 824	03A	035	2-B12
85 50 824	03A	037	2-B14
85 50 824	03A	041	2-B18
85 52 044	03A	085	2-D14
85 52 325	03A	065	2-C18
85 52 663	03A	177	2-H10
85 52 663	03A	219	2-J04
85 52 663	08A	017	5-A18
85 52 663	08B	165	6-G22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 52 663	08B	169	6-H02
85 52 663	08B	217	6-J02
85 52 721	03A	179	2-H12
85 52 721	03B	013	3-A14
85 52 721	03B	041	3-B18
85 52 721	03B	065	3-C18
85 52 721	03B	089	3-D18
85 53 356	03A	093	2-D22
85 53 463	03A	193	2-I02
85 53 463	03A	197	2-I06
85 53 463	03A	199	2-I08
85 53 463	03A	203	2-I12
85 58 256	03B	027	3-B04
85 58 538	03B	009	3-A10
85 58 538	03B	037	3-B14
85 58 538	03B	061	3-C14
85 58 538	03B	087	3-D16
85 59 221	08B	011	6-A12
85 60 476	03B	005	3-A06
85 60 476	03B	009	3-A10
85 60 476	03B	013	3-A14
85 60 476	03B	023	3-A24
85 60 476	03B	033	3-B10
85 60 476	03B	037	3-B14
85 60 476	03B	041	3-B18
85 60 476	03B	049	3-C02
85 60 476	03B	057	3-C10
85 60 476	03B	061	3-C14
85 60 476	03B	065	3-C18
85 60 476	03B	075	3-D04
85 60 476	03B	083	3-D12
85 60 476	03B	087	3-D16
85 60 476	03B	099	3-E04
85 60 476	03B	111	3-E16
85 60 476	03B	121	3-F02
85 60 476	03B	131	3-F12
85 60 476	03B	141	3-F22
85 61 623	03B	087	3-D16
85 64 916	03B	013	3-A14
85 64 916	03B	041	3-B18
85 64 916	03B	065	3-C18
85 64 916	03B	089	3-D18
85 64 924	03B	013	3-A14
85 64 924	03B	041	3-B18
85 64 924	03B	065	3-C18
85 64 924	03B	089	3-D18
85 64 973	05	013	4-A14
85 64 973	08C	025	6-L02
85 64 973	08C	033	6-L10
85 64 973	08C	035	6-L12
85 65 855	03A	091	2-D20
85 65 855	03A	101	2-E06
85 66 135	03A	177	2-H10
85 66 143	03A	177	2-H10
85 66 374	03A	021	2-A22
85 66 598	08C	021	6-K22
85 66 853	03A	209	2-I18
85 66 853	03A	213	2-I22
85 68 693	03A	209	2-I18
85 68 693	03A	213	2-I22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 69 139	03B	111	3-E16
85 69 139	03B	121	3-F02
85 69 139	03B	131	3-F12
85 69 139	03B	141	3-F22
85 71 382	03B	009	3-A10
85 71 382	03B	037	3-B14
85 71 382	03B	059	3-C12
85 71 382	03B	061	3-C14
85 71 986	03A	011	2-A12
85 71 986	03A	015	2-A16
85 73 651	03A	085	2-D14
85 73 651	03A	087	2-D16
85 73 669	03A	085	2-D14
85 73 669	03A	087	2-D16
85 73 677	03A	085	2-D14
85 73 677	08B	221	6-J06
85 73 834	03A	021	2-A22
85 74 048	03B	019	3-A20
85 74 048	03B	047	3-B24
85 74 048	03B	071	3-C24
85 74 469	08B	011	6-A12
85 74 816	03A	021	2-A22
85 74 949	03B	009	3-A10
85 74 949	03B	037	3-B14
85 74 949	03B	061	3-C14
85 74 949	03B	087	3-D16
85 75 599	08A	037	5-B14
85 77 801	03A	069	2-C22
85 78 775	03A	071	2-C24
85 78 775	04	071	3-J24
85 79 930	03B	027	3-B04
85 79 955	03A	179	2-H12
85 79 955	03B	009	3-A10
85 79 955	03B	013	3-A14
85 79 955	03B	017	3-A18
85 79 955	03B	037	3-B14
85 79 955	03B	041	3-B18
85 79 955	03B	043	3-B20
85 79 955	03B	045	3-B22
85 79 955	03B	061	3-C14
85 79 955	03B	065	3-C18
85 79 955	03B	067	3-C20
85 79 955	03B	071	3-C24
85 79 955	03B	089	3-D18
85 82 082	03B	019	3-A20
85 82 082	03B	047	3-B24
85 82 082	03B	071	3-C24
85 82 082	03B	095	3-D24
85 82 090	03B	111	3-E16
85 82 090	03B	121	3-F02
85 82 090	03B	131	3-F12
85 82 413	03B	013	3-A14
85 82 413	03B	041	3-B18
85 82 413	03B	065	3-C18
85 82 413	03B	089	3-D18
85 82 413	03B	111	3-E16
85 82 413	03B	121	3-F02
85 82 413	03B	131	3-F12
85 82 413	03B	141	3-F22
85 82 421	03B	111	3-E16

7-C16 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 82 421	03B	121	3-F02
85 82 421	03B	131	3-F12
85 82 421	03B	141	3-F22
85 82 439	03B	005	3-A06
85 82 439	03B	033	3-B10
85 82 439	03B	057	3-C10
85 82 439	03B	083	3-D12
85 82 454	03B	009	3-A10
85 82 454	03B	019	3-A20
85 82 454	03B	037	3-B14
85 82 454	03B	047	3-B24
85 82 454	03B	061	3-C14
85 82 454	03B	071	3-C24
85 82 454	03B	075	3-D04
85 82 454	03B	087	3-D16
85 82 454	03B	095	3-D24
85 82 454	03B	107	3-E12
85 82 454	03B	117	3-E22
85 82 454	03B	127	3-F08
85 82 454	03B	137	3-F18
85 82 579	03B	113	3-E18
85 82 579	03B	123	3-F04
85 82 579	03B	133	3-F14
85 82 579	03B	143	3-F24
85 82 595	03B	013	3-A14
85 82 595	03B	019	3-A20
85 82 595	03B	027	3-B04
85 82 595	03B	041	3-B18
85 82 595	03B	047	3-B24
85 82 595	03B	055	3-C08
85 82 595	03B	065	3-C18
85 82 595	03B	075	3-D04
85 82 595	03B	079	3-D08
85 82 595	03B	089	3-D18
85 82 595	03B	095	3-D24
85 82 595	03B	103	3-E08
85 82 595	03B	111	3-E16
85 82 595	03B	121	3-F02
85 82 595	03B	131	3-F12
85 82 595	03B	141	3-F22
85 82 603	03B	013	3-A14
85 82 603	03B	019	3-A20
85 82 603	03B	027	3-B04
85 82 603	03B	041	3-B18
85 82 603	03B	047	3-B24
85 82 603	03B	055	3-C08
85 82 603	03B	065	3-C18
85 82 603	03B	075	3-D04
85 82 603	03B	079	3-D08
85 82 603	03B	089	3-D18
85 82 603	03B	097	3-E02
85 82 645	03B	041	3-B18
85 82 645	03B	117	3-E22
85 83 627	03A	193	2-I02
85 83 627	03A	197	2-I06
85 86 802	03B	081	3-D10
85 87 024	03A	097	2-E02
85 87 099	03A	097	2-E02
85 87 198	03B	115	3-E20
85 87 198	03B	125	3-F06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 87 198	03B	135	3-F16
85 87 198	03B	145	3-G02
85 87 248	03A	011	2-A12
85 87 248	03A	015	2-A16
85 87 347	03A	097	2-E02
85 87 347	03A	099	2-E04
85 87 354	03A	097	2-E02
85 87 412	03B	027	3-B04
85 87 420	03B	027	3-B04
85 87 420	03B	081	3-D10
85 87 438	03B	027	3-B04
85 87 438	03B	081	3-D10
85 87 446	03B	027	3-B04
85 87 453	03B	027	3-B04
85 87 453	03B	081	3-D10
85 87 461	03B	027	3-B04
85 87 487	03B	027	3-B04
85 87 487	03B	081	3-D10
85 87 495	03B	027	3-B04
85 87 503	03B	081	3-D10
85 87 511	03B	027	3-B04
85 87 511	03B	055	3-C08
85 87 511	03B	081	3-D10
85 87 511	03B	103	3-E08
85 87 552	03B	019	3-A20
85 87 552	03B	027	3-B04
85 87 552	03B	047	3-B24
85 87 552	03B	055	3-C08
85 87 552	03B	075	3-D04
85 87 552	03B	079	3-D08
85 87 552	03B	095	3-D24
85 87 552	03B	103	3-E08
85 87 552	03B	111	3-E16
85 87 552	03B	121	3-F02
85 87 552	03B	133	3-F14
85 87 552	03B	143	3-F24
85 87 560	03B	019	3-A20
85 87 560	03B	047	3-B24
85 87 560	03B	075	3-D04
85 87 560	03B	095	3-D24
85 87 560	03B	111	3-E16
85 87 560	03B	123	3-F04
85 87 560	03B	133	3-F14
85 87 560	03B	143	3-F24
85 87 636	03A	195	2-I04
85 87 636	03A	197	2-I06
85 87 636	03A	201	2-I10
85 87 636	03A	205	2-I14
85 88 188	03B	131	3-F12
85 90 549	03A	011	2-A12
85 90 549	03A	015	2-A16
85 90 689	03A	097	2-E02
85 90 838	03A	093	2-D22
85 90 994	03A	011	2-A12
85 90 994	03A	015	2-A16
85 91 216	03A	091	2-D20
85 91 224	03A	091	2-D20
85 93 089	03B	023	3-A24
85 93 089	03B	051	3-C04
85 93 089	03B	107	3-E12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
85 93 089	03B	117	3-E22
85 93 089	03B	127	3-F08
85 93 089	03B	137	3-F18
85 93 329	03A	011	2-A12
85 93 899	03B	005	3-A06
85 93 899	03B	035	3-B12
85 93 899	03B	057	3-C10
85 93 899	03B	083	3-D12
85 93 907	03B	013	3-A14
85 93 907	03B	041	3-B18
85 93 907	03B	065	3-C18
85 93 907	03B	089	3-D18
85 93 915	03B	009	3-A10
85 93 915	03B	037	3-B14
85 93 915	03B	059	3-C12
85 93 923	03B	043	3-B20
85 93 923	03B	067	3-C20
85 93 923	03B	091	3-D20
85 93 931	03B	019	3-A20
85 93 931	03B	047	3-B24
85 93 931	03B	071	3-C24
85 93 931	03B	095	3-D24
85 93 949	03B	019	3-A20
85 93 949	03B	047	3-B24
85 93 949	03B	071	3-C24
85 93 949	03B	095	3-D24
85 93 964	03B	019	3-A20
85 93 964	03B	027	3-B04
85 93 964	03B	047	3-B24
85 93 964	03B	055	3-C08
85 93 964	03B	075	3-D04
85 93 964	03B	079	3-D08
85 93 964	03B	097	3-E02
85 93 964	03B	103	3-E08
85 93 964	03B	109	3-E14
85 93 964	03B	119	3-E24
85 93 964	03B	129	3-F10
85 93 964	03B	139	3-F20
85 94 632	03A	101	2-E06
85 97 064	03B	009	3-A10
85 97 064	03B	061	3-C14
85 98 286	03A	067	2-C20
85 98 526	03A	149	2-G06
85 98 526	03A	155	2-G12
85 98 526	03A	165	2-G22
85 98 526	03A	169	2-H02
85 98 526	08C	033	6-L10
85 98 526	08C	035	6-L12
86 05 099	08C	031	6-L08
86 05 099	08C	037	6-L14
86 05 222	08C	031	6-L08
86 05 222	08C	033	6-L10
86 05 230	08C	033	6-L10
86 05 297	08C	031	6-L08
86 05 297	08C	037	6-L14
86 05 347	08C	037	6-L14
86 05 362	08C	037	6-L14
86 05 370	08C	037	6-L14
86 05 396	08C	005	6-K06
86 05 412	08C	031	6-L08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
86 05 412	08C	033	6-L10
86 05 420	08C	031	6-L08
86 05 420	08C	035	6-L12
86 05 438	08C	031	6-L08
86 05 438	08C	037	6-L14
86 05 446	08C	031	6-L08
86 05 446	08C	037	6-L14
86 57 777	08A	011	5-A12
86 57 777	08A	101	5-E06
86 57 975	08A	011	5-A12
86 57 975	08A	101	5-E06
86 57 975	08A	103	5-E08
86 59 310	08A	063	5-C16
86 59 328	08A	063	5-C16
86 60 607	08A	101	5-E06
86 60 615	08A	101	5-E06
86 60 623	08A	101	5-E06
86 61 415	08A	095	5-D24
86 61 993	08A	137	5-F18
86 62 058	08A	063	5-C16
86 62 140	08A	011	5-A12
86 62 157	08A	011	5-A12
86 62 207	08A	023	5-A24
86 62 470	08A	101	5-E06
86 62 496	08A	011	5-A12
86 62 538	08A	101	5-E06
86 62 595	08A	101	5-E06
86 62 603	08A	101	5-E06
86 62 603	08A	103	5-E08
86 62 819	08A	101	5-E06
86 62 819	08A	163	5-G20
86 62 827	08A	101	5-E06
86 62 827	08A	163	5-G20
86 62 835	08A	101	5-E06
86 62 835	08A	105	5-E10
86 62 835	08A	163	5-G20
86 62 835	08A	165	5-G22
86 62 843	08A	101	5-E06
86 62 843	08A	105	5-E10
86 62 843	08A	163	5-G20
86 62 843	08A	165	5-G22
86 62 959	08A	101	5-E06
86 62 959	08A	165	5-G22
86 62 967	08A	101	5-E06
86 62 967	08A	165	5-G22
86 63 262	08A	081	5-D10
86 63 262	08A	105	5-E10
86 63 262	08A	167	5-G24
86 63 270	08A	081	5-D10
86 63 270	08A	105	5-E10
86 63 270	08A	167	5-G24
86 63 296	08A	101	5-E06
86 63 494	08A	101	5-E06
86 63 494	08A	103	5-E08
86 64 021	08A	023	5-A24
86 64 245	03A	125	2-F06
86 64 252	03A	123	2-F04
86 64 583	03A	123	2-F04
86 64 807	08A	085	5-D14
86 66 653	08A	103	5-E08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical. contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C17 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
86 66 653	08A	163	5-G20
86 66 661	08A	103	5-E08
86 66 661	08A	165	5-G22
86 66 679	08A	103	5-E08
86 66 679	08A	163	5-G20
86 66 687	08A	103	5-E08
86 66 687	08A	163	5-G20
86 67 180	08A	081	5-D10
86 67 180	08A	167	5-G24
86 67 198	08A	081	5-D10
86 67 198	08A	167	5-G24
86 67 206	08A	103	5-E08
86 67 206	08A	105	5-E10
86 67 206	08A	165	5-G22
86 67 214	08A	103	5-E08
86 67 214	08A	105	5-E10
86 67 214	08A	165	5-G22
86 67 370	08A	103	5-E08
86 67 479	08A	101	5-E06
86 67 479	08A	103	5-E08
86 67 479	08A	105	5-E10
86 67 495	08A	101	5-E06
86 67 511	08A	163	5-G20
86 67 511	08A	165	5-G22
86 67 529	08A	163	5-G20
86 67 537	08A	081	5-D10
86 67 545	08A	081	5-D10
86 67 552	08A	167	5-G24
86 67 560	08A	167	5-G24
86 67 578	08A	101	5-E06
86 67 602	08A	101	5-E06
86 68 592	08A	023	5-A24
86 68 618	08A	101	5-E06
86 68 618	08A	103	5-E08
86 69 160	08B	015	6-A16
86 69 178	08B	015	6-A16
86 69 186	08B	015	6-A16
86 69 202	08B	107	6-E12
86 69 202	08B	121	6-F02
86 69 210	08B	107	6-E12
86 69 210	08B	121	6-F02
86 69 228	08B	113	6-E18
86 69 228	08B	129	6-F10
86 69 236	08B	113	6-E18
86 69 236	08B	129	6-F10
86 69 244	08A	063	5-C16
86 69 319	08A	067	5-C20
86 69 913	08A	067	5-C20
86 70 002	08A	023	5-A24
86 70 010	08A	023	5-A24
86 70 218	08A	103	5-E08
86 70 226	08A	103	5-E08
86 70 242	08A	103	5-E08
86 70 259	08A	103	5-E08
86 70 267	08A	103	5-E08
86 70 275	08A	103	5-E08
86 70 309	08A	103	5-E08
86 70 424	08A	165	5-G22
86 70 432	08A	163	5-G20
86 70 507	08A	103	5-E08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
86 70 515	08A	103	5-E08
86 70 523	08A	103	5-E08
86 70 531	08A	103	5-E08
86 70 846	08A	165	5-G22
86 70 853	08A	081	5-D10
86 70 861	08A	081	5-D10
86 70 879	08A	167	5-G24
86 70 887	08A	167	5-G24
86 70 895	08A	103	5-E08
86 70 903	08A	103	5-E08
86 71 455	03A	109	2-E14
86 71 497	03A	109	2-E14
86 71 562	03A	109	2-E14
86 71 976	08A	103	5-E08
86 73 428	08B	011	6-A12
86 73 436	08B	011	6-A12
86 73 444	08B	017	6-A18
86 73 451	08B	015	6-A16
87 01 658	04	013	3-H14
87 04 298	04	025	3-I02
87 04 298	04	079	3-K08
87 04 306	04	025	3-I02
87 04 314	04	025	3-I02
87 04 314	04	027	3-I04
87 04 314	04	079	3-K08
87 04 322	04	025	3-I02
87 04 322	04	027	3-I04
87 04 322	04	079	3-K08
87 04 389	04	025	3-I02
87 08 836	04	025	3-I02
87 10 816	04	021	3-H22
87 11 707	04	013	3-H14
87 14 420	04	015	3-H16
87 16 292	04	025	3-I02
87 16 300	04	025	3-I02
87 16 318	04	025	3-I02
87 16 326	04	025	3-I02
87 16 490	04	023	3-H24
87 16 607	04	021	3-H22
87 16 615	04	021	3-H22
87 16 623	04	021	3-H22
87 16 631	04	021	3-H22
87 16 656	04	025	3-I02
87 16 821	04	021	3-H22
87 16 839	04	021	3-H22
87 16 920	04	021	3-H22
87 17 027	04	017	3-H18
87 18 439	02	171	1-J04
87 19 098	04	025	3-I02
87 19 098	04	027	3-I04
87 19 148	04	017	3-H18
87 19 163	04	021	3-H22
87 19 189	04	021	3-H22
87 19 205	04	021	3-H22
87 19 254	04	025	3-I02
87 19 262	04	025	3-I02
87 19 593	04	017	3-H18
87 19 601	04	017	3-H18
87 19 635	04	017	3-H18
87 19 643	04	017	3-H18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 19 650	04	019	3-H20
87 19 684	04	017	3-H18
87 19 692	04	017	3-H18
87 19 700	04	017	3-H18
87 19 825	04	013	3-H14
87 19 874	04	025	3-I02
87 19 882	04	025	3-I02
87 19 908	04	025	3-I02
87 19 940	04	025	3-I02
87 19 999	04	017	3-H18
87 20 088	04	021	3-H22
87 20 104	04	021	3-H22
87 20 112	04	021	3-H22
87 20 146	04	021	3-H22
87 20 195	04	023	3-H24
87 20 203	04	023	3-H24
87 20 278	04	021	3-H22
87 20 278	04	023	3-H24
87 20 302	04	021	3-H22
87 20 310	04	021	3-H22
87 20 369	04	021	3-H22
87 20 526	04	021	3-H22
87 20 534	04	021	3-H22
87 20 880	04	017	3-H18
87 20 9[illegible]	04	025	3-I02
87 20 948	04	027	3-I04
87 20 948	04	079	3-K08
87 20 997	04	025	3-I02
87 20 997	04	027	3-I04
87 20 997	04	079	3-K08
87 21 078	04	025	3-I02
87 21 078	04	079	3-K08
87 21 466	04	017	3-H18
87 21 508	04	017	3-H18
87 21 557	04	017	3-H18
87 21 565	04	017	3-H18
87 21 573	04	017	3-H18
87 21 581	04	017	3-H18
87 21 615	04	017	3-H18
87 21 623	04	017	3-H18
87 21 664	04	017	3-H18
87 21 946	04	021	3-H22
87 21 953	04	021	3-H22
87 21 995	04	015	3-H16
87 21 995	04	075	3-K04
87 22 001	04	015	3-H16
87 22 001	04	075	3-K04
87 22 100	04	015	3-H16
87 22 118	04	015	3-H16
87 22 118	04	075	3-K04
87 22 126	04	015	3-H16
87 22 126	04	075	3-K04
87 22 183	04	013	3-H14
87 22 191	04	021	3-H22
87 22 332	04	017	3-H18
87 22 340	04	021	3-H22
87 22 571	04	021	3-H22
87 22 746	04	015	3-H16
87 23 108	04	037	3-I14
87 23 124	04	035	3-I12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 23 132	04	025	3-I02
87 23 140	04	027	3-I04
87 23 223	04	013	3-H14
87 23 322	04	015	3-H16
87 23 330	04	021	3-H22
87 23 397	04	017	3-H18
87 23 504	04	075	3-K04
87 23 538	04	013	3-H14
87 23 546	04	035	3-I12
87 23 967	04	013	3-H14
87 24 023	04	021	3-H22
87 24 114	04	025	3-I02
87 24 122	04	025	3-I02
87 24 130	04	021	3-H22
87 24 163	04	021	3-H22
87 24 296	04	017	3-H18
87 24 304	04	019	3-H20
87 24 346	04	017	3-H18
87 24 353	04	019	3-H20
87 24 387	04	017	3-H18
87 24 395	04	017	3-H18
87 24 627	04	019	3-H20
87 24 643	04	019	3-H20
87 24 874	04	013	3-H14
87 24 874	04	041	3-I18
87 24 874	04	083	3-K12
87 24 882	04	013	3-H14
87 24 882	04	041	3-I18
87 25 301	04	023	3-H24
87 25 319	04	021	3-H22
87 25 327	04	023	3-H24
87 25 335	04	023	3-H24
87 25 368	04	017	3-H18
87 25 723	04	021	3-H22
87 26 689	04	017	3-H18
87 26 754	04	017	3-H18
87 26 762	04	013	3-H14
87 26 770	04	013	3-H14
87 26 986	04	021	3-H22
87 26 994	04	021	3-H22
87 27 000	04	035	3-I12
87 27 125	04	011	3-H12
87 27 158	04	021	3-H22
87 27 166	04	019	3-H20
87 27 190	04	005	3-H06
87 27 190	04	075	3-K04
87 27 232	04	025	3-I02
87 27 232	04	027	3-I04
87 27 240	04	013	3-H14
87 27 240	04	041	3-I18
87 27 521	04	013	3-H14
87 27 547	04	011	3-H12
87 27 695	04	005	3-H06
87 27 695	04	075	3-K04
87 27 737	04	013	3-H14
87 27 745	04	013	3-H14
87 27 760	04	013	3-H14
87 27 778	04	027	3-I04
87 27 794	04	021	3-H22
87 27 802	04	025	3-I02

7-C18 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 27 810	04	025	3-I02
87 27 828	04	013	3-H14
87 27 828	04	041	3-I18
87 27 869	04	017	3-H18
87 27 885	04	019	3-H20
87 27 901	04	017	3-H18
87 27 919	04	017	3-H18
87 27 927	04	017	3-H18
87 27 935	04	005	3-H06
87 27 935	04	075	3-K04
87 27 943	04	005	3-H06
87 27 968	04	035	3-I12
87 27 984	04	017	3-H18
87 28 057	02	171	1-J04
87 28 107	04	013	3-H14
87 28 123	04	005	3-H06
87 28 123	04	075	3-K04
87 28 198	04	025	3-I02
87 28 271	04	013	3-H14
87 28 289	04	005	3-H06
87 28 289	04	075	3-K04
87 28 297	04	005	3-H06
87 28 297	04	075	3-K04
87 28 321	04	011	3-H12
87 28 420	04	019	3-H20
87 28 545	04	013	3-H14
87 28 685	04	013	3-H14
87 28 784	04	011	3-H12
87 29 261	04	025	3-I02
87 29 279	04	025	3-I02
87 29 378	04	021	3-H22
87 29 386	04	025	3-I02
87 29 394	04	025	3-I02
87 29 485	04	025	3-I02
87 29 550	04	075	3-K04
87 29 568	04	013	3-H14
87 29 592	04	015	3-H16
87 29 592	04	075	3-K04
87 29 600	04	015	3-H16
87 29 600	04	075	3-K04
87 29 618	04	015	3-H16
87 29 642	04	025	3-I02
87 29 659	04	023	3-H24
87 29 675	04	015	3-H16
87 29 741	04	025	3-I02
87 29 758	04	025	3-I02
87 29 766	04	027	3-I04
87 29 857	04	025	3-I02
87 30 244	04	025	3-I02
87 30 251	04	025	3-I02
87 30 301	04	021	3-H22
87 30 319	04	021	3-H22
87 30 327	04	021	3-H22
87 30 764	04	019	3-H20
87 30 772	04	017	3-H18
87 30 806	04	005	3-H06
87 30 806	04	075	3-K04
87 31 788	04	025	3-I02
87 31 796	04	025	3-I02
87 31 804	04	025	3-I02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 31 846	04	025	3-I02
87 31 853	04	025	3-I02
87 33 198	04	015	3-H16
87 33 198	04	075	3-K04
87 34 477	04	023	3-H24
87 34 501	04	011	3-H12
87 35 342	04	023	3-H24
87 36 357	04	021	3-H22
87 36 365	04	021	3-H22
87 36 589	04	021	3-H22
87 81 122	04	015	3-H16
87 81 122	04	075	3-K04
87 81 189	04	015	3-H16
87 81 189	04	075	3-K04
87 81 296	04	025	3-I02
87 81 312	04	005	3-H06
87 81 312	04	075	3-K04
87 81 320	04	005	3-H06
87 81 320	04	075	3-K04
87 81 338	04	005	3-H06
87 81 338	04	075	3-K04
87 81 353	04	005	3-H06
87 81 353	04	075	3-K04
87 81 387	04	015	3-H16
87 81 387	04	075	3-K04
87 81 395	04	015	3-H16
87 81 395	04	075	3-K04
87 81 676	04	035	3-I12
87 81 684	04	023	3-H24
87 81 684	04	037	3-I14
87 86 006	02	009	1-C10
87 86 055	02	135	1-H16
87 86 071	02	009	1-C10
87 86 246	03A	027	2-B04
87 86 436	02	013	1-C14
87 86 444	02	013	1-C14
87 86 444	02	017	1-C18
87 86 477	02	085	1-F14
87 86 568	02	157	1-I14
87 86 576	02	023	1-C24
87 86 584	02	087	1-F16
87 87 061	02	045	1-D22
87 87 079	02	075	1-F04
87 87 226	02	031	1-D08
87 87 269	02	163	1-I20
87 87 277	02	163	1-I20
87 87 285	02	163	1-I20
87 87 319	02	163	1-I20
87 87 319	02	165	1-I22
87 87 335	02	163	1-I20
87 87 335	02	165	1-I22
87 87 657	02	069	1-E22
87 87 665	02	069	1-E22
87 87 707	02	043	1-D20
87 87 723	02	043	1-D20
87 87 731	02	043	1-D20
87 87 764	02	019	1-C20
87 87 764	02	021	1-C22
87 87 905	02	107	1-G12
87 87 913	02	107	1-G12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 87 988	02	105	1-G10
87 87 988	02	107	1-G12
87 87 996	02	107	1-G12
87 88 135	02	017	1-C18
87 88 150	02	025	1-D02
87 88 200	02	071	1-E24
87 88 267	02	023	1-C24
87 88 275	02	023	1-C24
87 88 317	02	089	1-F18
87 88 333	02	089	1-F18
87 88 473	02	071	1-E24
87 88 499	02	017	1-C18
87 88 572	02	085	1-F14
87 88 572	02	087	1-F16
87 88 580	02	087	1-F16
87 88 614	03A	029	2-B06
87 88 721	02	119	1-G24
87 88 754	02	163	1-I20
87 88 796	02	163	1-I20
87 88 796	02	165	1-I22
87 89 307	02	025	1-D02
87 89 323	02	091	1-F20
87 89 323	02	093	1-F22
87 89 323	02	095	1-F24
87 89 323	02	097	1-G02
87 89 489	02	091	1-F20
87 89 489	02	093	1-F22
87 89 489	02	095	1-F24
87 89 513	02	093	1-F22
87 89 562	02	091	1-F20
87 89 562	02	093	1-F22
87 89 562	02	095	1-F24
87 89 570	02	091	1-F20
87 89 570	02	093	1-F22
87 89 570	02	095	1-F24
87 89 588	02	093	1-F22
87 89 596	02	091	1-F20
87 89 596	02	093	1-F22
87 89 612	02	105	1-G10
87 89 638	02	043	1-D20
87 89 695	02	089	1-F18
87 89 695	02	091	1-F20
87 89 695	02	093	1-F22
87 89 695	02	095	1-F24
87 89 786	02	029	1-D06
88 00 914	02	013	1-C14
88 00 914	02	017	1-C18
88 16 415	08A	143	5-F24
88 17 298	02	157	1-I14
88 17 298	02	173	1-J06
88 17 520	03A	023	2-A24
88 17 520	03A	215	2-I24
88 17 538	02	157	1-I14
88 17 538	02	173	1-J06
88 17 561	02	039	1-D16
88 17 561	02	041	1-D18
88 17 561	02	043	1-D20
88 17 561	02	171	1-J04
88 17 686	02	039	1-D16
88 17 884	08A	155	5-G12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
88 17 884	08A	157	5-G14
88 17 892	08A	155	5-G12
88 17 892	08A	157	5-G14
88 17 918	02	153	1-I10
88 17 918	02	171	1-J04
88 18 254	02	013	1-C14
88 18 254	02	017	1-C18
88 18 254	02	171	1-J04
88 18 569	02	163	1-I20
88 18 569	02	167	1-I24
88 18 569	02	175	1-J08
88 19 138	02	039	1-D16
88 19 138	02	043	1-D20
88 19 138	02	171	1-J04
88 19 831	02	013	1-C14
88 19 831	02	171	1-J04
88 19 864	02	041	1-D18
88 19 864	02	171	1-J04
88 19 948	02	155	1-I12
88 19 948	02	173	1-J06
88 22 132	02	059	1-E12
88 22 140	02	059	1-E12
88 56 833	02	039	1-D16
88 56 833	02	041	1-D18
88 56 858	03A	027	2-B04
88 56 874	03A	129	2-F10
88 56 874	03A	141	2-F22
88 56 874	03A	157	2-G14
88 56 874	03A	171	2-H04
88 56 890	03A	027	2-B04
88 56 890	03A	031	2-B08
88 56 908	03A	027	2-B04
88 56 908	03A	031	2-B08
88 56 916	03A	177	2-H10
88 56 965	02	033	1-D10
88 56 965	02	037	1-D14
88 56 981	02	071	1-E24
88 57 070	02	165	1-I22
88 57 153	02	071	1-E24
88 57 179	02	103	1-G08
88 57 179	02	105	1-G10
88 57 187	02	075	1-F04
88 57 195	02	101	1-G06
88 57 575	02	029	1-D06
88 57 765	02	015	1-C16
88 57 872	02	011	1-C12
88 57 872	03A	027	2-B04
88 58 086	02	165	1-I22
88 58 094	02	163	1-I20
88 58 094	02	165	1-I22
88 58 102	02	165	1-I22
88 58 110	02	165	1-I22
88 58 128	02	165	1-I22
88 58 144	02	165	1-I22
88 58 151	02	165	1-I22
88 58 276	02	025	1-D02
88 58 300	02	085	1-F14
88 58 359	02	071	1-E24
88 59 092	02	025	1-D02
88 59 118	02	027	1-D04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7--C19 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
88 59 134	02	035	1-D12
88 59 142	02	035	1-D12
88 59 159	02	035	1-D12
88 59 191	02	033	1-D10
88 59 191	02	037	1-D14
88 59 233	02	013	1-C14
88 59 233	02	017	1-C18
88 59 324	02	025	1-D02
88 59 324	02	027	1-D04
88 59 357	02	035	1-D12
88 59 365	02	035	1-D12
88 59 373	02	035	1-D12
88 59 381	02	035	1-D12
88 59 399	02	035	1-D12
88 59 514	02	037	1-D14
88 59 605	02	029	1-D06
88 59 878	02	111	1-G16
88 59 878	02	113	1-G18
88 59 878	02	115	1-G20
88 59 886	02	143	1-H24
88 59 969	02	117	1-G22
88 59 977	02	117	1-G22
89 03 304	04	075	3-K04
89 08 576	05	005	4-A06
89 08 576	05	007	4-A08
89 16 272	04	007	3-H08
89 16 272	05	025	4-B02
89 16 272	05	027	4-B04
89 21 520	04	035	3-I12
89 25 067	02	163	1-I20
89 29 531	05	013	4-A14
89 29 531	05	025	4-B02
89 29 531	05	027	4-B04
89 29 531	08A	021	5-A22
89 29 531	08B	009	6-A10
89 31 461	05	021	4-A22
89 31 461	05	023	4-A24
89 33 392	02	161	1-I18
89 34 119	06	013	4-C14
89 34 259	06	017	4-C18
89 35 959	09	005	7-A06
89 36 619	06	013	4-C14
89 36 619	06	015	4-C16
89 36 684	06	013	4-C14
89 36 684	06	017	4-C18
89 36 882	06	013	4-C14
89 36 882	06	015	4-C16
89 36 908	06	015	4-C16
89 36 932	06	015	4-C16
89 36 965	06	015	4-C16
89 36 973	06	015	4-C16
89 37 005	06	013	4-C14
89 37 021	06	013	4-C14
89 37 039	06	013	4-C14
89 37 070	06	017	4-C18
89 37 161	06	013	4-C14
89 37 161	06	015	4-C16
89 37 161	06	017	4-C18
89 37 500	06	019	4-C20
89 40 769	04	075	3-K04
89 41 478	04	009	3-H10
89 41 478	08A	021	5-A22
89 43 177	05	009	4-A10
89 43 177	05	015	4-A16
89 44 795	05	021	4-A22
89 44 795	05	023	4-A24
89 45 156	04	009	3-H10
89 45 248	04	075	3-K04
89 45 255	04	075	3-K04
89 46 097	09	005	7-A06
89 46 360	06	017	4-C18
89 50 172	06	007	4-C08
89 50 297	04	009	3-H10
89 50 297	05	025	4-B02
89 50 396	02	161	1-I18
89 50 438	07	015	4-E16
89 50 438	07	019	4-E20
89 50 628	04	035	3-I12
89 50 636	04	035	3-I12
89 50 701	06	007	4-C08
89 51 063	07	015	4-E16
89 51 063	07	021	4-E22
89 51 527	05	025	4-B02
89 51 915	07	023	4-E24
89 52 046	07	023	4-E24
89 52 129	07	015	4-E16
89 52 129	07	021	4-E22
89 52 137	07	015	4-E16
89 52 137	07	021	4-E22
89 52 194	06	011	4-C12
89 52 277	07	023	4-E24
89 52 285	07	015	4-E16
89 52 285	07	019	4-E20
89 52 327	07	015	4-E16
89 52 327	07	025	4-F02
89 52 335	07	015	4-E16
89 52 335	07	025	4-F02
89 52 558	07	023	4-E24
89 52 665	05	007	4-A08
89 52 699	05	019	4-A20
89 52 699	05	021	4-A22
89 52 699	05	023	4-A24
89 52 749	07	015	4-E16
89 52 749	07	019	4-E20
89 52 749	07	025	4-F02
89 52 905	04	035	3-I12
89 52 970	04	035	3-I12
89 53 283	05	005	4-A06
89 53 390	05	027	4-B04
89 53 549	06	007	4-C08
89 53 689	05	029	4-B06
89 53 739	05	029	4-B06
89 53 762	05	029	4-B06
89 53 788	05	029	4-B06
89 53 796	05	029	4-B06
89 53 879	05	029	4-B06
89 53 986	07	007	4-E08
89 53 986	07	011	4-E12
89 54 000	07	007	4-E08
89 54 000	07	011	4-E12
89 54 281	06	007	4-C08
89 54 315	06	009	4-C10
89 54 455	05	029	4-B06
89 54 547	05	007	4-A08
89 54 596	03A	101	2-E06
89 54 646	05	029	4-B06
89 54 935	08A	005	5-A06
89 55 007	04	079	3-K08
89 55 239	05	031	4-B08
89 55 288	05	031	4-B08
89 55 296	05	031	4-B08
89 55 304	05	035	4-B12
89 55 312	05	035	4-B12
89 55 395	05	007	4-A08
89 55 403	05	007	4-A08
89 55 411	05	005	4-A06
89 55 411	05	007	4-A08
89 55 437	05	007	4-A08
89 55 445	05	007	4-A08
89 55 445	05	033	4-B10
89 55 452	05	033	4-B10
89 55 460	05	033	4-B10
89 55 478	05	005	4-A06
89 55 478	05	007	4-A08
89 55 478	05	033	4-B10
89 55 486	05	007	4-A08
89 55 528	05	007	4-A08
89 55 536	05	031	4-B08
89 55 601	06	013	4-C14
89 55 619	06	017	4-C18
89 55 635	06	017	4-C18
89 55 643	06	017	4-C18
89 55 650	06	017	4-C18
89 55 692	06	015	4-C16
89 55 718	06	013	4-C14
89 55 742	06	013	4-C14
89 55 759	07	023	4-E24
89 55 809	06	011	4-C12
89 55 973	05	005	4-A06
89 56 104	06	011	4-C12
89 56 179	05	029	4-B06
89 56 211	06	011	4-C12
89 56 245	06	011	4-C12
89 56 245	08A	019	5-A20
89 56 252	06	011	4-C12
89 56 294	08A	019	5-A20
89 56 393	05	025	4-B02
89 56 393	05	027	4-B04
89 56 443	04	009	3-H10
89 56 443	05	025	4-B02
89 56 443	05	027	4-B04
89 56 468	07	023	4-E24
89 56 534	06	011	4-C12
89 57 112	07	007	4-E08
89 57 193	04	009	3-H10
89 57 326	04	009	3-H10
89 57 482	05	027	4-B04
89 57 532	07	023	4-E24
89 57 565	02	161	1-I18
89 57 706	07	023	4-E24
89 57 714	07	015	4-E16
89 57 714	07	021	4-E22
89 57 722	07	023	4-E24
89 57 813	04	007	3-H08
89 57 839	06	029	4
89 58 084	07	007	4-E08
89 58 084	07	011	4-E12
89 58 175	05	009	4-A10
89 58 241	04	035	3-I12
89 58 316	04	007	3-H08
89 58 357	05	009	4-A10
89 58 357	05	015	4-A16
89 58 365	06	005	4-C06
89 58 373	06	005	4-C06
89 58 423	05	009	4-A10
89 58 498	07	017	4-E18
89 58 498	07	021	4-E22
89 58 514	07	023	4-E24
89 58 530	05	019	4-A20
89 58 530	05	023	4-A24
89 58 548	05	021	4-A22
89 58 613	07	023	4-E24
89 58 746	07	023	4-E24
89 58 779	06	005	4-C06
89 58 787	06	009	4-C10
89 58 910	07	013	4-E14
89 58 944	07	007	4-E08
89 58 944	07	011	4-E12
89 59 090	06	019	4-C20
89 59 116	06	019	4-C20
89 59 132	05	009	4-A10
89 59 157	05	009	4-A10
89 59 306	05	019	4-A20
89 59 520	05	019	4-A20
89 59 520	05	021	4-A22
89 59 520	05	023	4-A24
89 59 538	05	019	4-A20
89 59 538	05	021	4-A22
89 59 934	07	015	4-E16
89 59 934	07	019	4-E20
89 59 934	07	025	4-F02
89 59 934	07	027	4-F04
89 60 080	02	161	1-I18
89 60 122	08A	005	5-A06
89 60 171	07	007	4-E08
89 60 171	07	011	4-E12
89 60 221	08A	075	5-D04
89 60 247	08A	005	5-A06
89 60 254	07	013	4-E14
89 60 288	07	013	4-E14
89 60 536	06	013	4-C14
89 60 924	02	161	1-I18
89 60 932	07	015	4-E16
89 60 940	07	015	4-E16
89 61 021	05	019	4-A20
89 61 054	08A	005	5-A06
89 61 062	05	029	4-B06
89 61 070	08A	005	5-A06
89 61 096	06	009	4-C10
89 61 104	06	009	4-C10

7-C20 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 61 120	06	009	4-C10
89 61 195	02	161	1-I18
89 61 237	08A	005	5-A06
89 61 310	06	015	4-C16
89 61 310	06	017	4-C18
89 61 476	06	005	4-C06
89 61 492	07	013	4-E14
89 61 526	07	013	4-E14
89 61 625	07	017	4-E18
89 61 625	07	021	4-E22
89 61 732	09	005	7-A06
89 61 740	09	005	7-A06
89 61 765	07	015	4-E16
89 61 765	07	021	4-E22
89 61 849	05	007	4-A08
89 61 849	05	031	4-B08
89 61 948	08A	005	5-A06
89 61 997	08A	005	5-A06
89 62 011	07	015	4-E16
89 62 011	07	021	4-E22
89 62 128	04	007	3-H08
89 62 128	04	009	3-H10
89 62 128	05	025	4-B02
89 62 144	07	007	4-E08
89 62 243	06	015	4-C16
89 62 250	06	017	4-C18
89 62 292	08A	005	5-A06
89 62 300	05	027	4-B04
89 62 334	08A	009	5-A10
89 62 342	08A	009	5-A10
89 62 359	08A	009	5-A10
89 62 367	07	013	4-E14
89 62 383	07	013	4-E14
89 62 391	07	013	4-E14
89 62 516	06	015	4-C16
89 62 524	06	015	4-C16
89 62 565	06	015	4-C16
89 62 573	06	015	4-C16
89 62 649	05	029	4-B06
89 63 019	05	021	4-A22
89 63 019	05	023	4-A24
89 63 027	05	007	4-A08
89 63 050	07	023	4-E24
89 63 282	07	005	4-E06
89 63 357	06	019	4-C20
89 63 944	07	015	4-E16
89 63 944	07	019	4-E20
89 63 944	07	027	4-F04
89 63 985	06	013	4-C14
89 64 082	06	015	4-C16
89 64 090	06	015	4-C16
89 64 207	07	007	4-E08
89 64 207	07	009	4-E10
89 64 686	05	021	4-A22
89 64 728	05	019	4-A20
89 64 769	05	019	4-A20
89 64 843	05	019	4-A20
89 64 892	05	009	4-A10
89 64 991	09	005	7-A06
89 65 097	05	019	4-A20
89 65 105	07	017	4-E18
89 65 113	07	017	4-E18
89 65 121	06	005	4-C06
89 65 212	07	013	4-E14
89 65 253	06	005	4-C06
89 65 329	05	009	4-A10
89 65 329	05	031	4-B08
89 65 345	04	009	3-H10
89 65 360	04	035	3-I12
89 65 360	07	023	4-E24
89 65 378	07	007	4-E08
89 65 477	06	009	4-C10
89 65 501	05	027	4-B04
89 65 535	04	009	3-H10
89 65 600	05	027	4-B04
89 65 618	05	027	4-B04
89 65 626	05	027	4-B04
89 65 634	05	021	4-A22
89 65 634	05	023	4-A24
89 65 782	05	031	4-B08
89 65 808	05	009	4-A10
89 65 808	05	031	4-B08
89 65 907	07	013	4-E14
89 65 949	02	161	1-I18
89 65 956	06	017	4-C18
89 66 012	05	013	4-A14
89 66 038	05	013	4-A14
89 66 087	08A	005	5-A06
89 66 129	07	007	4-E08
89 66 129	07	011	4-E12
89 66 137	05	033	4-B10
89 66 152	05	011	4-A12
89 66 152	05	033	4-B10
89 66 160	05	033	4-B10
89 66 236	05	033	4-B10
89 66 251	05	033	4-B10
89 66 345	05	011	4-A12
89 66 335	05	031	4-B08
89 66 335	05	033	4-B10
89 66 335	05	035	4-B12
89 66 368	05	011	4-A12
89 66 368	05	033	4-B10
89 66 375	05	011	4-A12
89 66 376	05	031	4-B08
89 66 384	05	011	4-A12
89 66 384	05	031	4-B08
89 66 491	05	011	4-A12
89 66 608	05	029	4-B06
89 66 681	05	011	4-A12
89 66 681	05	033	4-B10
89 66 681	05	035	4-B12
89 66 699	09	013	7-A14
89 66 707	05	033	4-B10
89 66 756	04	009	3-H10
89 66 939	05	011	4-A12
89 66 939	05	033	4-B10
89 66 939	05	035	4-B12
89 66 954	05	009	4-A10
89 66 954	05	015	4-A16
89 67 028	05	013	4-A14
89 67 036	07	013	4-E14
89 67 224	05	011	4-A12
89 67 234	05	033	4-B10
89 67 267	05	011	4-A12
89 67 267	05	035	4-B12
89 67 309	05	011	4-A12
89 67 309	05	033	4-B10
89 67 325	05	011	4-A12
89 67 325	05	033	4-B10
89 67 390	05	011	4-A12
89 67 390	05	031	4-B08
89 67 390	05	033	4-B10
89 67 390	05	035	4-B12
89 67 481	05	029	4-B06
89 67 572	06	011	4-C12
89 67 655	05	029	4-B06
89 67 762	06	007	4-C08
89 67 846	07	005	4-E06
89 67 861	07	005	4-E06
89 67 903	02	161	1-I18
89 67 929	06	013	4-C14
89 67 937	06	015	4-C16
89 68 034	05	009	4-A10
89 68 067	07	007	4-E08
89 68 067	07	009	4-E10
89 68 133	08A	023	5-A24
89 68 166	05	019	4-A20
89 68 166	05	023	4-A24
89 68 315	06	009	4-C10
89 68 471	07	023	4-E24
89 68 505	07	023	4-E24
89 68 513	07	025	4-F02
89 68 521	07	007	4-E08
89 68 521	07	011	4-E12
89 68 570	07	015	4-E16
89 68 570	07	025	4-F02
89 68 588	05	005	4-A06
89 68 588	05	007	4-A08
89 68 679	06	009	4-C10
89 68 703	06	009	4-C10
89 68 729	04	009	3-H10
89 68 737	06	013	4-C14
89 68 943	05	005	4-A06
89 68 950	05	005	4-A06
89 68 968	05	005	4-A06
89 68 968	05	031	4-B08
89 68 976	05	005	4-A06
89 68 976	05	031	4-B08
89 68 984	07	007	4-E08
89 68 984	07	011	4-E12
89 68 992	07	007	4-E08
89 68 992	07	011	4-E12
89 69 016	07	015	4-E16
89 69 024	06	007	4-C08
89 69 032	06	007	4-C08
89 69 081	05	031	4-B08
89 69 099	05	031	4-B08
89 69 107	05	005	4-A06
89 69 115	05	005	4-A06
89 69 123	05	005	4-A06
89 69 206	05	019	4-A20
89 69 206	05	021	4-A22
89 69 206	05	023	4-A24
89 69 214	07	017	4-E18
89 69 214	07	021	4-E22
89 69 412	05	031	4-B08
89 69 446	05	031	4-B08
89 69 545	07	013	4-E14
89 69 651	05	005	4-A06
89 69 669	06	005	4-C06
89 69 966	07	015	4-E16
89 70 147	05	035	4-B12
89 70 196	04	009	3-H10
89 70 204	05	025	4-B02
89 70 410	05	025	4-B02
89 70 428	05	007	4-A08
89 70 444	05	027	4-B04
89 70 618	05	007	4-A08
89 70 626	05	007	4-A08
89 70 717	05	007	4-A08
89 70 725	05	029	4-B06
89 70 733	05	029	4-B06
89 70 782	07	015	4-E16
89 70 782	07	021	4-E22
89 70 816	05	007	4-A08
89 70 832	04	007	3-H08
89 70 873	06	017	4-C18
89 70 980	07	013	4-E14
89 71 087	09	005	7-A06
89 71 095	05	007	4-A08
89 71 103	05	005	4-A06
89 71 343	06	011	4-C12
89 71 368	07	015	4-E16
89 71 426	06	019	4-C20
89 71 434	06	019	4-C20
89 71 582	08A	021	5-A22
89 71 657	06	011	4-C12
89 71 699	07	013	4-E14
89 71 715	06	009	4-C10
89 71 780	07	005	4-E06
89 71 806	07	005	4-E06
89 71 814	07	005	4-E06
89 71 822	07	005	4-E06
89 71 830	07	005	4-E06
89 71 848	07	005	4-E06
89 71 863	07	005	4-E06
89 71 921	06	013	4-C14
89 71 939	06	013	4-C14
89 71 962	07	025	4-F02
89 71 970	03A	119	2-E24
89 72 002	07	007	4-E08
89 72 002	07	011	4-E12
89 72 135	06	005	4-C06
89 72 176	02	161	1-I18
89 72 200	06	009	4-C10
89 72 309	06	017	4-C18
89 72 374	06	007	4-C08
89 72 416	06	019	4-C20
89 72 424	06	019	4-C20
89 72 648	07	023	4-E24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-C21 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 72 655	07	023	4-E24
89 72 663	07	013	4-E14
89 72 770	06	019	4-C20
89 72 812	07	013	4-E14
89 72 846	07	027	4-F04
89 72 853	07	027	4-F04
89 72 929	06	007	4-C08
89 72 945	06	019	4-C20
89 72 986	04	035	3-I12
89 72 986	04	079	3-K08
89 73 000	07	023	4-E24
89 73 018	07	013	4-E14
89 73 190	06	005	4-C06
89 73 208	06	005	4-C06
89 73 216	06	005	4-C06
89 73 224	06	005	4-C06
89 73 299	04	007	3-H08
89 73 406	05	007	4-A08
89 73 422	07	013	4-E14
89 73 422	07	027	4-F04
89 73 448	06	011	4-C12
89 73 455	06	011	4-C12
89 73 547	06	009	4-C10
89 73 737	08A	005	5-A06
89 75 153	02	061	1-E14
89 76 060	02	055	1-E08
89 76 516	02	041	1-D18
89 76 607	02	051	1-E04
89 76 706	02	051	1-E04
89 76 813	02	049	1-E02
89 76 912	02	143	1-H24
89 77 498	03A	019	2-A20
89 77 761	02	061	1-E14
89 77 779	02	061	1-E14
89 77 928	02	121	1-H02
89 77 928	02	123	1-H04
89 77 928	02	125	1-H06
89 77 936	02	121	1-H02
89 77 936	02	123	1-H04
89 77 936	02	125	1-H06
89 77 936	02	127	1-H08
89 77 936	02	129	1-H10
89 77 936	02	131	1-H12
89 78 280	02	069	1-E22
89 78 371	02	057	1-E10
89 78 488	02	055	1-E08
89 78 637	02	169	1-J02
89 78 652	02	143	1-H24
89 78 678	02	169	1-J02
89 78 827	02	063	1-E16
89 78 835	02	169	1-J02
89 78 934	02	063	1-E16
89 79 130	02	127	1-H08
89 79 130	02	129	1-H10
89 79 130	02	131	1-H12
89 79 155	02	127	1-H08
89 79 155	02	129	1-H10
89 79 155	02	131	1-H12
89 79 163	02	121	1-H02
89 79 163	02	123	1-H04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 79 163	02	125	1-H06
89 79 650	02	127	1-H08
89 79 650	02	129	1-H10
89 79 700	02	121	1-H02
89 79 700	02	123	1-H04
89 80 021	02	065	1-E18
89 80 047	02	065	1-E18
89 80 328	02	127	1-H08
89 80 328	02	129	1-H10
89 80 328	02	131	1-H12
89 80 542	02	121	1-H02
89 80 542	02	123	1-H04
89 80 542	02	125	1-H06
89 80 922	02	161	1-I18
89 81 417	02	069	1-E22
89 81 581	02	069	1-E22
89 81 904	02	163	1-I20
89 81 961	02	015	1-C16
89 81 961	02	063	1-E16
89 81 961	02	089	1-F18
89 81 961	02	149	1-I06
89 81 961	02	151	1-I08
89 81 961	02	175	1-J08
89 81 961	02	177	1-J10
89 81 979	02	017	1-C18
89 81 979	02	063	1-E16
89 81 987	02	069	1-E22
89 82 001	02	099	1-G04
89 82 167	02	061	1-E14
89 82 191	02	057	1-E10
89 82 209	02	057	1-E10
89 82 225	02	057	1-E10
89 82 472	08A	029	5-B06
89 82 688	02	121	1-H02
89 82 688	02	123	1-H04
89 86 622	04	009	3-H10
89 86 705	05	009	4-A10
89 86 705	05	015	4-A16
89 86 713	05	009	4-A10
89 86 911	05	009	4-A10
89 86 911	05	031	4-B08
89 86 986	05	031	4-B08
89 86 994	05	031	4-B08
89 87 018	05	031	4-B08
89 87 406	06	009	4-C10
89 87 596	07	013	4-E14
89 87 620	07	013	4-E14
89 87 802	07	013	4-E14
89 89 659	06	009	4-C10
89 89 857	06	021	4-C22
89 89 857	06	029	4-D06
89 90 103	06	009	4-C10
89 90 376	06	009	4-C10
89 90 962	06	009	4-C10
89 90 970	06	009	4-C10
89 90 988	06	009	4-C10
89 91 549	09	005	7-A06
89 91 564	09	005	7-A06
89 93 156	04	009	3-H10
89 93 156	04	075	3-K04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 93 453	06	017	4-C18
89 93 453	06	029	4-D06
89 93 511	06	013	4-C14
89 93 529	06	013	4-C14
89 93 628	04	035	3-I12
89 93 628	04	075	3-K04
89 93 636	04	035	3-I12
89 93 636	04	079	3-K08
89 93 644	05	011	4-A12
89 93 669	06	013	4-C14
89 93 685	04	035	3-I12
89 93 685	04	077	3-K06
89 93 701	04	035	3-I12
83 93 701	04	079	3-K08
89 93 750	07	015	4-E16
89 93 750	07	025	4-F02
89 93 768	05	005	4-A06
89 93 768	05	031	4-B08
89 93 784	07	019	4-E20
89 93 784	07	027	4-F04
90 81 142	08A	039	5-B16
90 81 159	08A	039	5-B16
90 81 167	08A	039	5-B16
90 81 175	08A	039	5-B16
90 81 217	08A	135	5-F16
90 81 282	08A	105	5-E10
90 81 282	08A	135	5-F16
90 81 316	08A	135	5-F16
90 81 373	03A	039	2-B16
90 81 381	03A	039	2-B16
90 81 431	03A	039	2-B16
90 81 449	03A	039	2-B16
90 82 231	08A	141	5-F22
90 82 272	08A	141	5-F22
90 82 439	03A	039	2-B16
90 82 470	03A	083	2-D12
90 82 488	03A	083	2-D12
90 82 553	03A	083	2-D12
90 82 561	03A	083	2-D12
90 82 579	03A	039	2-B16
90 82 587	03A	083	2-D12
90 82 587	03A	215	2-I24
90 82 660	08A	125	5-F06
90 82 678	08A	125	5-F06
90 82 843	08A	099	5-E04
90 82 892	03A	047	2-B24
90 82 900	03A	047	2-B24
90 82 918	03A	039	2-B16
90 82 926	03A	039	2-B16
90 83 080	08A	091	5-D20
90 83 098	08A	091	5-D20
90 83 122	08A	091	5-D20
90 83 130	08A	091	5-D20
90 83 163	08A	091	5-D20
90 83 171	08A	091	5-D20
90 83 205	08A	091	5-D20
90 83 213	08A	091	5-D20
90 83 247	08A	091	5-D20
90 83 254	08A	091	5-D20
90 83 312	08A	091	5-D20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
90 83 395	08B	131	6-F12
90 83 551	03A	065	2-C18
90 83 684	03A	077	2-D06
90 83 734	03A	065	2-C18
90 83 742	03A	065	2-C18
90 83 841	08A	117	5-E22
90 83 858	08A	117	5-E22
90 83 866	08A	117	5-E22
90 83 874	08A	117	5-E22
90 84 013	03A	039	2-B16
90 84 021	03A	039	2-B16
90 84 039	03A	065	2-C18
90 84 047	03A	065	2-C18
90 84 070	03A	065	2-C18
90 84 088	03A	065	2-C18
90 84 112	03A	047	2-B24
90 84 120	03A	047	2-B24
90 84 179	03A	047	2-B24
90 84 187	03A	047	2-B24
90 84 211	08A	099	5-E04
90 84 567	08B	131	6-F12
90 84 575	08B	131	6-F12
90 84 633	08B	131	6-F12
90 84 765	08A	117	5-E22
90 84 773	08A	117	5-E22
90 85 077	08A	059	5-C12
90 85 267	08A	039	5-B16
90 85 358	03A	065	2-C18
90 85 366	03A	065	2-C18
90 85 416	03A	039	2-B16
90 85 671	03A	039	2-B16
90 85 689	03A	039	2-B16
90 85 861	08A	069	5-C22
90 85 879	08A	069	5-C22
90 85 903	08A	129	5-F10
90 85 986	08A	099	5-E04
90 86 133	08A	075	5-D04
90 86 141	08A	069	5-C22
90 86 166	08A	099	5-E04
90 86 174	08A	099	5-E04
90 86 224	03A	065	2-C18
90 86 232	03A	065	2-C18
90 86 240	03A	065	2-C18
90 86 265	03A	065	2-C18
90 86 273	03A	065	2-C18
90 86 281	03A	065	2-C18
90 86 562	08A	031	5-B08
90 86 869	03A	077	2-D06
90 86 877	03A	077	2-D06
90 86 885	03A	077	2-D06
90 86 901	03A	077	2-D06
90 86 935	03A	077	2-D06
90 86 943	03A	077	2-D06
90 86 950	03A	077	2-D06
90 87 008	08A	047	5-B24
90 87 016	08A	047	5-B24
90 87 024	08A	047	5-B24
90 87 032	08A	047	5-B24
90 87 040	08A	045	5-B22
90 87 040	08A	047	5-B24

7-C22 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
90 87 040	08A	095	5-D24
90 87 040	08A	099	5-E04
90 87 040	08A	101	5-E06
90 87 040	08A	103	5-E08
90 87 040	08A	105	5-E10
90 87 040	08A	123	5-F04
90 87 040	08A	125	5-F06
90 87 040	08A	135	5-F16
90 87 040	08A	151	5-G08
90 87 040	08A	159	5-G16
90 87 289	08A	039	5-B16
90 87 289	08A	129	5-F10
90 87 297	08A	069	5-C22
90 87 404	08B	133	6-F14
90 87 412	08B	133	6-F14
90 87 420	08B	133	6-F14
90 87 438	08B	133	6-F14
90 87 552	03A	091	2-D20
90 87 560	08A	083	5-D12
90 87 560	08A	091	5-D20
90 87 560	08A	167	5-G24
90 88 238	03A	083	2-D12
90 88 238	03A	215	2-I24
90 88 444	08A	043	5-B20
90 88 527	08A	117	5-E22
90 88 535	08A	043	5-B20
90 88 543	08A	091	5-D20
90 88 550	08A	091	5-D20
90 88 592	08A	069	5-C22
90 88 659	08B	131	6-F12
90 88 675	08A	023	5-A24
90 88 980	08A	031	5-B08
90 88 998	08A	031	5-B08
90 83 111	03A	083	2-D12
90 89 129	03A	083	2-D12
90 89 186	08A	091	5-D20
90 89 194	08A	091	5-D20
90 89 285	08B	191	6-H24
90 89 426	08A	129	5-F10
90 89 434	08A	129	5-F10
90 89 517	08A	117	5-E22
90 89 624	08A	091	5-D20
90 89 632	08A	091	5-D20
90 89 640	08A	091	5-D20
90 89 657	08A	091	5-D20
90 89 772	03A	039	2-B16
90 89 780	03A	039	2-B16
90 90 119	08A	023	5-A24
90 90 135	08A	023	5-A24
91 01 221	06	011	4-C12
91 01 510	07	013	4-E14
91 04 456	05	013	4-A14
91 04 738	05	011	4-A12
91 04 738	05	033	4-B10
91 04 738	05	035	4-B12
91 04 7[illegible]	05	033	4-B10
91 04 746	05	035	4-B12
91 04 795	05	013	4-A14
91 04 811	05	033	4-B10
91 04 829	05	033	4-B10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 04 944	05	033	4-B10
91 05 461	07	013	4-E14
91 05 495	04	007	3-H08
91 06 139	05	023	4-A24
91 06 949	02	029	1-D06
91 06 998	02	157	1-I14
91 07 053	02	011	1-C12
91 07 376	02	011	1-C12
91 07 541	02	025	1-D02
91 07 541	02	027	1-D04
91 07 541	02	029	1-D06
91 07 566	02	047	1-D24
91 07 582	02	047	1-D24
91 07 608	02	099	1-G04
91 07 616	02	099	1-G04
91 07 624	02	099	1-G04
91 07 632	02	157	1-I14
91 07 640	02	157	1-I14
91 07 699	02	097	1-G02
91 07 996	02	165	1-I22
91 08 226	02	071	1-E24
91 08 242	02	071	1-E24
91 08 291	02	013	1-C14
91 08 291	02	017	1-C18
91 08 531	03A	029	2-B06
91 08 531	03A	031	2-B08
91 09 067	02	043	1-D20
91 09 075	02	099	1-G04
91 09 182	02	039	1-D16
91 09 182	02	043	1-D20
91 09 539	02	071	1-E24
91 09 869	02	097	1-G02
91 09 901	02	043	1-D20
91 09 919	02	021	1-C22
91 12 293	02	027	1-D04
91 12 459	02	039	1-D16
91 12 459	02	041	1-D18
91 12 459	02	043	1-D20
91 12 491	02	103	1-G08
91 12 541	02	171	1-J04
91 12 541	03A	023	2-A24
91 12 657	02	037	1-D14
91 12 665	02	037	1-D14
91 12 673	02	037	1-D14
91 12 681	02	037	1-D14
91 12 780	02	123	1-H04
91 12 780	02	129	1-H10
91 12 855	02	029	1-D06
91 13 119	02	029	1-D06
91 13 267	02	043	1-D20
91 13 275	02	043	1-D20
91 13 325	02	155	1-I12
91 13 325	02	173	1-J06
91 13 341	02	155	1-I12
91 13 358	02	155	1-I12
91 13 424	02	029	1-D06
91 13 531	02	089	1-F18
91 13 531	02	091	1-F20
91 13 531	02	093	1-F22
91 13 531	02	095	1-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 13 556	02	089	1-F18
91 13 572	02	105	1-G10
91 13 721	02	071	1-E24
91 13 804	02	075	1-F04
91 13 838	02	071	1-E24
91 13 846	02	071	1-E24
91 13 879	03A	029	2-B06
91 13 903	02	165	1-I22
91 13 929	02	165	1-I22
91 13 937	02	165	1-I22
91 14 000	02	089	1-F18
91 14 000	02	091	1-F20
91 14 000	02	093	1-F22
91 14 000	02	095	1-F24
91 14 018	02	047	1-D24
91 14 042	02	047	1-D24
91 14 059	02	047	1-D24
91 14 075	02	047	1-D24
91 14 083	02	155	1-I12
91 14 109	02	157	1-I14
91 14 240	02	173	1-J06
91 14 265	02	155	1-I12
91 14 273	02	027	1-D04
91 14 299	02	027	1-D04
91 14 315	02	029	1-D06
91 14 331	02	029	1-D06
91 14 356	02	029	1-D06
91 14 372	02	021	1-C22
91 14 406	02	045	1-D22
91 14 414	02	045	1-D22
91 14 455	03A	021	2-A22
91 14 455	03A	027	2-B04
91 14 455	03A	031	2-B08
91 14 463	02	153	1-I10
91 14 489	02	157	1-I14
91 14 505	02	045	1-D22
91 14 521	02	045	1-D22
91 14 547	02	165	1-I22
91 14 711	02	075	1-F04
91 14 885	02	013	1-C14
91 14 885	02	017	1-C18
91 14 893	02	037	1-D14
91 14 901	02	037	1-D14
91 14 976	03A	027	2-B04
91 15 015	02	043	1-D20
91 15 049	02	021	1-C22
91 15 122	02	029	1-D06
91 15 197	02	027	1-D04
91 15 205	02	027	1-D04
91 15 247	02	029	1-D06
91 15 288	02	029	1-D06
91 15 296	02	043	1-D20
91 15 346	02	015	1-C16
91 15 353	02	015	1-C16
91 15 445	02	097	1-G02
91 15 460	02	089	1-F18
91 15 478	02	105	1-G10
91 15 841	02	031	1-D08
91 15 858	02	031	1-D08
91 15 866	02	031	1-D08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 15 874	02	031	1-D08
91 15 882	02	031	1-D08
91 16 047	02	029	1-D06
91 16 062	02	011	1-C12
91 16 088	02	091	1-F20
91 16 088	02	097	1-G02
91 16 310	02	035	1-D12
91 16 369	02	157	1-I14
91 16 385	02	171	1-J04
91 16 385	03A	023	2-A24
91 16 393	02	029	1-D06
91 16 419	02	029	1-D06
91 16 443	02	025	1-D02
91 16 443	02	029	1-D06
91 16 443	02	031	1-D08
91 16 674	02	165	1-I22
91 16 690	02	015	1-C16
91 16 708	02	015	1-C16
91 16 716	02	099	1-G04
91 16 724	02	099	1-G04
91 16 757	02	019	1-C20
91 16 765	02	157	1-I14
91 16 864	02	025	1-D02
91 16 864	02	027	1-D04
91 16 864	02	031	1-D08
91 16 898	02	029	1-D06
91 16 963	02	099	1-G04
91 17 029	02	039	1-D16
91 17 029	02	041	1-D18
91 17 177	03A	027	2-B04
91 17 177	03A	031	2-B08
91 17 201	03A	021	2-A22
91 17 284	02	021	1-C22
91 17 409	02	105	1-G10
91 17 417	02	017	1-C18
91 17 466	02	043	1-D20
91 17 508	02	157	1-I14
91 17 557	02	021	1-C22
91 17 565	02	171	1-J04
91 17 565	03A	023	2-A24
91 17 599	02	045	1-D22
91 17 607	02	157	1-I14
91 17 615	02	037	1-D14
91 17 656	02	099	1-G04
91 17 714	02	105	1-G10
91 17 805	02	025	1-D02
91 17 821	02	021	1-C22
91 17 839	02	025	1-D02
91 17 847	02	025	1-D02
91 17 979	03A	021	2-A22
91 18 001	03A	027	2-B04
91 18 019	02	113	1-G18
91 18 019	02	115	1-G20
91 18 027	02	113	1-G18
91 18 027	02	115	1-G20
91 18 365	02	089	1-F18
91 18 480	02	043	1-D20
91 18 506	02	045	1-D22
91 19 181	02	099	1-G04
91 19 199	02	099	1-G04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 19 207	02	099	1-G04
91 19 215	02	099	1-G04
91 19 223	02	099	1-G04
91 19 231	02	099	1-G04
91 19 249	02	099	1-G04
91 19 322	02	165	1-I22
91 19 363	03A	029	2-B06
91 19 371	03A	029	2-B06
91 19 397	03A	027	2-B04
91 19 405	03A	027	2-B04
91 19 470	02	075	1-F04
91 19 488	02	075	1-F04
91 19 496	02	075	1-F04
91 19 504	02	119	1-G24
91 19 512	02	119	1-G24
91 19 520	02	075	1-F04
91 19 538	02	075	1-F04
91 19 645	02	111	1-G16
91 19 678	02	115	1-G20
91 19 728	02	119	1-G24
91 19 942	02	015	1-C16
91 19 967	02	017	1-C18
91 20 106	03A	181	2-H14
91 20 106	03B	029	3-B06
91 20 106	03B	055	3-C08
91 20 668	03B	007	3-A08
91 20 668	03B	009	3-A10
91 20 668	03B	013	3-A14
91 20 668	03B	017	3-A18
91 20 668	03B	019	3-A20
91 20 668	03B	023	3-A24
91 20 668	03B	025	3-B02
91 20 668	03B	027	3-B04
91 20 668	03B	029	3-B06
91 20 668	03B	036	3-B12
91 20 668	03B	037	3-D14
91 20 668	03B	041	3-E18
91 20 668	03B	043	3-B20
91 20 668	03B	045	3-B22
91 20 668	03B	047	3-B24
91 20 668	03B	051	3-C04
91 20 668	03B	055	3-C08
91 20 668	03B	057	3-C10
91 20 668	03B	059	3-C12
91 20 668	03B	061	3-C14
91 20 668	03B	065	3-C18
91 20 668	03B	067	3-C20
91 20 668	03B	071	3-C24
91 20 668	03B	073	3-D02
91 20 668	03B	075	3-D04
91 20 668	03B	079	3-D08
91 20 668	03B	081	3-D10
91 20 668	03B	083	3-D12
91 20 668	03B	087	3-D16
91 20 668	03B	089	3-D18
91 20 668	03B	091	3-D20
91 20 668	03B	093	3-D22
91 20 668	03B	095	3-D24
91 20 668	03B	099	3-E04
91 20 668	03B	101	3-E06
91 20 668	03B	103	3-E08
91 20 668	03B	113	3-E18
91 20 668	03B	123	3-F04
91 20 668	03B	133	3-F14
91 20 668	03B	143	3-F24
91 20 775	03B	009	3-A10
91 20 775	03B	013	3-A14
91 20 775	03B	107	3-E12
91 20 775	03B	117	3-E22
91 20 775	03B	127	3-F08
91 20 775	03B	137	3-F18
91 20 783	03B	009	3-A10
91 20 783	03B	037	3-B14
91 20 783	03B	061	3-C14
91 20 783	03B	085	3-D14
91 20 783	03B	109	3-E14
91 20 783	03B	119	3-E24
91 20 783	03B	129	3-F10
91 20 783	03B	139	3-F20
91 20 791	03B	009	3-A10
91 20 791	03B	013	3-A14
91 20 791	03B	017	3-A18
91 20 791	03B	019	3-A20
91 20 791	03B	023	3-A24
91 20 791	03B	027	3-B04
91 20 791	03B	037	3-B14
91 20 791	03B	041	3-B18
91 20 791	03B	045	3-B22
91 20 791	03B	047	3-B24
91 20 791	03B	051	3-C04
91 20 791	03B	053	3-C06
91 20 791	03B	061	3-C14
91 20 791	03B	065	3-C18
91 20 791	03B	069	3-C22
91 20 791	03B	071	3-C24
91 20 791	03B	075	3-D04
91 20 791	03B	079	3-D08
91 20 791	03B	085	3-D14
91 20 791	03B	089	3-D18
91 20 791	03B	093	3-D22
91 20 791	03B	095	3-D24
91 20 791	03B	099	3-E04
91 20 791	03B	103	3-E08
91 20 791	03B	109	3-E14
91 20 791	03B	119	3-E24
91 20 791	03B	129	3-F10
91 20 791	03B	139	3-F20
91 20 882	03A	079	2-D08
91 20 882	03A	215	2-I24
91 20 957	03B	017	3-A18
91 20 957	03B	021	3-A22
91 20 957	03B	027	3-B04
91 20 957	03B	029	3-B06
91 20 957	03B	031	3-B08
91 20 957	03B	037	3-B14
91 20 957	03B	041	3-B18
91 20 957	03B	043	3-B20
91 20 957	03B	045	3-B22
91 20 957	03B	047	3-B24
91 20 957	03B	051	3-C04
91 20 957	03B	055	3-C08
91 20 957	03B	061	3-C14
91 20 957	03B	065	3-C18
91 20 957	03B	067	3-C20
91 20 957	03B	069	3-C22
91 20 957	03B	071	3-C24
91 20 957	03B	073	3-D02
91 20 957	03B	075	3-D04
91 20 957	03B	077	3-D06
91 20 957	03B	079	3-D08
91 20 957	03B	081	3-D10
91 20 957	03B	087	3-D16
91 20 957	03B	091	3-D20
91 20 957	03B	093	3-D22
91 20 957	03B	095	3-D24
91 20 957	03B	099	3-E04
91 20 957	03B	101	3-E06
91 20 957	03B	105	3-E10
91 20 957	03B	113	3-E18
91 20 957	03B	123	3-F04
91 20 957	03B	133	3-F14
91 20 957	03B	143	3-F24
91 20 957	03B	055	3-C08
91 20 957	03B	061	3-C14
91 20 957	03B	065	3-C18
91 20 957	03B	067	3-C20
91 20 957	03B	069	3-C22
91 20 957	03B	071	3-C24
91 20 957	03B	073	3-D02
91 20 957	03B	075	3-D04
91 20 957	03B	077	3-D06
91 20 957	03B	079	3-D08
91 20 957	03B	081	3-D10
91 20 957	03B	087	3-D16
91 20 957	03B	091	3-D20
91 20 957	03B	093	3-D22
91 20 957	03B	095	3-D24
91 20 957	03B	099	3-E04
91 20 957	03B	101	3-E06
91 20 957	03B	105	3-E10
91 20 957	03B	113	3-E18
91 20 957	03B	123	3-F04
91 20 957	03B	133	3-F14
91 20 957	03B	143	3-F24
91 20 981	03A	015	2-A16
91 21 088	03B	045	3-B22
91 21 088	03B	069	3-C22
91 21 088	03B	093	3-D22
91 21 815	03A	049	2-C02
91 21 823	03A	049	2-C02
91 22 102	03A	063	2-C16
91 22 110	03A	063	2-C16
91 22 128	03A	063	2-C16
91 22 227	03A	051	2-C04
91 22 277	03A	053	2-C06
91 22 227	03A	055	2-C08
91 22 250	03A	053	2-C06
91 22 268	03A	053	2-C06
91 22 557	03B	023	3-A24
91 22 557	03B	051	3-C04
91 22 557	08C	009	6-K10
91 22 672	03A	041	2-B18
91 22 680	03A	041	2-B18
91 22 696	03A	041	2-B18
91 22 706	03A	041	2-B18
91 22 730	03A	189	2-H22
91 22 748	03A	189	2-H22
91 22 755	03A	189	2-H22
91 22 789	03B	017	3-A18
91 22 789	03B	045	3-B22
91 22 789	03B	069	3-C22
91 22 789	03B	093	3-D22
91 22 797	03B	019	3-A20
91 22 797	03B	047	3-B24
91 22 797	03B	071	3-C24
91 22 797	03B	095	3-D24
91 23 076	03A	061	2-C14
91 23 084	03A	061	2-C14
91 23 118	03A	061	2-C14
91 23 126	03A	061	2-C14
91 23 159	03A	061	2-C14
91 23 167	03A	061	2-C14
91 23 175	03A	049	2-C02
91 23 193	03A	049	2-C02
91 23 217	03A	079	2-D08
91 23 225	03A	079	2-D08
91 23 233	03A	079	2-D08
91 23 241	03A	079	2-D08
91 23 316	03A	189	2-H22
91 23 324	03A	209	2-I18
91 23 381	03B	019	3-A20
91 23 381	03B	047	3-B24
91 23 381	03B	071	3-C24
91 23 381	03B	095	3-D24
91 23 399	03B	023	3-A24
91 23 399	03B	051	3-C04
91 23 399	03B	075	3-D04
91 23 399	03B	099	3-E04
91 23 407	03A	189	2-H22
91 23 456	03A	101	2-E06
91 23 456	03A	219	2-J04
91 23 464	03A	093	2-D22
91 23 548	03B	009	3-A10
91 23 548	03B	037	3-B14
91 23 548	03B	061	3-C14
91 23 548	03B	085	3-D14
91 23 555	03B	017	3-A18
91 23 555	03B	045	3-B22
91 23 555	03B	069	3-C22
91 23 555	03B	093	3-D22
91 23 589	03A	075	2-D04
91 23 597	03A	075	2-D04
91 23 605	03A	075	2-D04
91 23 613	03A	075	2-D04
91 23 639	03A	075	2-D04
91 23 662	03A	075	2-D04
91 23 688	03A	075	2-D04
91 23 696	03A	075	2-D04
91 23 704	03A	075	2-D04
91 23 753	03A	075	2-D04
91 23 761	03A	075	2-D04
91 23 837	03A	075	2-D04
91 23 845	03A	075	2-D04
91 23 852	03A	075	2-D04
91 23 894	03A	075	2-D04
91 23 977	03A	075	2-D04
91 23 985	03A	075	2-D04
91 24 090	03B	023	3-A24
91 24 090	03B	051	3-C04
91 24 090	03B	075	3-D04
91 24 090	03B	099	3-E04
91 24 124	03A	079	2-D08
91 24 132	03A	069	2-C22
91 24 140	03A	071	2-C24
91 24 157	03B	009	3-A10
91 24 157	03B	037	3-B14
91 24 157	03B	061	3-C14
91 24 157	03B	085	3-D14
91 24 165	03B	013	3-A14
91 24 165	03B	041	3-B18
91 24 165	03B	065	3-C18
91 24 165	03B	089	3-D18
91 24 173	03B	017	3-A18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 24 173	03B	045	3-B22
91 24 173	03B	069	3-C22
91 24 173	03B	093	3-D22
91 24 181	03B	023	3-A24
91 24 181	03B	051	3-C04
91 24 223	03A	097	2-E02
91 24 264	03A	015	2-A16
91 24 272	03A	015	2-A16
91 24 280	03A	015	2-A16
91 24 314	03A	015	2-A16
91 24 348	03A	015	2-A16
91 24 355	03A	015	2-A16
91 24 363	03A	015	2-A16
91 24 371	03A	015	2-A16
91 24 397	03A	015	2-A16
91 24 454	03A	091	2-D20
91 24 603	03A	177	2-H10
91 24 645	03A	015	2-A16
91 24 652	03A	093	2-D22
91 24 652	08A	155	5-G12
91 24 660	03A	093	2-D22
91 24 960	08A	155	5-G12
91 24 678	03A	093	2-D22
91 24 686	03A	093	2-D22
91 24 751	03A	075	2-D04
91 24 884	03A	097	2-E02
91 25 006	03A	189	2-H22
91 25 014	03A	053	2-C06
91 25 022	03A	053	2-C06
91 25 030	03A	053	2-C06
91 25 048	03A	053	2-C06
91 25 279	03A	035	2-B12
91 25 279	03A	037	2-B14
91 25 287	03A	035	2-B12
91 25 287	03A	037	2-B14
91 25 295	03A	035	2-B12
91 25 295	03A	037	2-B14
91 25 303	03A	035	2-B12
91 25 303	03A	037	2-B14
91 25 386	03A	189	2-H22
91 25 519	03B	027	3-B04
91 25 519	03B	055	3-C08
91 25 519	03B	081	3-D10
91 25 519	03B	103	3-E08
91 25 543	03A	119	2-E24
91 25 543	03B	027	3-B04
91 25 543	03B	053	3-C06
91 25 543	03B	079	3-D08
91 25 543	03B	103	3-E08
91 25 550	03A	107	2-E12
91 25 642	02	047	1-D24
91 25 717	02	165	1-I22
91 25 816	02	029	1-D06
91 25 824	02	025	1-D02
91 25 832	02	157	1-I14
91 25 873	02	091	1-F20
91 26 194	02	075	1-F04
91 26 202	02	075	1-F04
91 26 277	02	091	1-F20
91 26 277	02	095	1-F24
91 26 277	02	097	1-G02
91 26 277	02	171	1-J04
91 26 343	02	165	1-I22
91 26 566	02	011	1-C12
91 26 731	02	043	1-D20
91 26 913	02	165	1-I22
91 26 921	02	165	1-I22
91 26 939	02	161	1-I18
91 27 069	02	039	1-D16
91 27 069	02	041	1-D18
91 27 168	02	101	1-G06
91 27 176	02	101	1-G06
91 27 200	02	107	1-G12
91 27 234	02	171	1-J04
91 27 366	02	171	1-J04
91 27 440	03A	021	2-A22
91 27 440	03A	027	2-B04
91 27 440	03A	031	2-B08
91 28 018	02	153	1-H10
91 28 224	02	099	1-G04
91 28 448	02	173	1-J06
91 28 471	02	173	1-J06
91 28 695	02	107	1-G12
91 28 703	02	107	1-G12
91 28 802	02	029	1-D06
91 28 836	02	071	1-E24
91 28 851	02	071	1-E24
91 29 636	02	015	1-C16
91 29 651	02	011	1-C12
91 29 651	02	015	1-C16
91 29 669	02	015	1-C16
91 29 743	02	123	1-H04
91 29 909	02	011	1-C12
91 29 909	02	015	1-C16
91 30 493	03A	027	2-B04
91 30 493	03A	031	2-B08
91 31 004	02	013	1-C14
91 31 004	02	017	1-C18
91 31 061	02	071	1-E24
91 31 145	02	027	1-D04
91 32 374	02	071	1-E24
91 32 564	02	123	1-H04
91 32 564	02	125	1-H06
91 32 564	02	129	1-H10
91 32 812	02	029	1-D06
91 32 929	02	039	1-D16
91 32 929	02	041	1-D18
91 32 929	02	043	1-D20
91 32 937	02	039	1-D16
91 32 937	02	041	1-D18
91 32 937	02	043	1-D20
91 33 067	03A	021	2-A22
91 33 067	03A	027	2-B04
91 33 067	03A	031	2-B08
91 33 158	02	039	1-D16
91 33 158	02	041	1-D18
91 33 489	02	047	1-D24
91 33 505	02	025	1-D02
91 33 513	02	025	1-D02
91 33 539	02	063	1-E16
91 33 885	02	095	1-F24
91 34 230	02	027	1-D04
91 34 248	02	027	1-D04
91 34 404	03A	031	2-B08
91 34 420	02	011	1-C12
91 34 420	02	015	1-C16
91 34 438	02	097	1-G02
91 34 487	02	157	1-I14
91 34 727	02	095	1-F24
91 34 735	02	095	1-F24
91 34 818	02	021	1-C22
91 35 120	02	071	1-E24
91 36 243	02	011	1-C12
91 36 243	02	013	1-C14
91 36 243	02	017	1-C18
91 36 243	02	069	1-E22
91 36 243	02	071	1-E24
91 36 243	02	073	1-F02
91 36 243	02	109	1-G14
91 36 243	02	117	1-G22
91 36 243	02	119	1-G24
91 36 243	02	163	1-I20
91 36 243	02	167	1-I24
91 36 243	02	169	1-J02
91 36 243	03A	209	2-I18
91 36 243	03A	213	2-I22
91 36 250	02	011	1-C12
91 36 250	02	015	1-C16
91 36 276	02	171	1-J04
91 36 276	03A	023	2-A24
91 36 300	02	071	1-E24
91 36 318	02	071	1-E24
91 36 474	02	077	1-F06
91 36 490	02	077	1-F06
91 36 516	02	077	1-F06
91 36 524	02	155	1-I12
91 36 946	02	035	1-D12
91 37 928	02	155	1-I12
91 38 009	02	043	1-D20
91 38 017	02	043	1-D20
91 38 231	02	071	1-E24
91 38 728	02	047	1-D24
91 38 744	02	157	1-I14
91 38 769	02	047	1-D24
91 38 785	02	157	1-I14
91 39 551	02	165	1-I22
91 39 866	02	043	1-D20
91 40 658	02	029	1-D06
91 40 674	02	029	1-D06
91 40 690	02	029	1-D06
91 40 716	02	029	1-D06
91 41 730	02	165	1-I22
91 42 506	02	035	1-D12
91 42 514	02	035	1-D12
91 42 530	02	035	1-D12
91 42 555	02	035	1-D12
91 42 571	02	035	1-D12
91 43 181	02	029	1-D06
91 43 199	02	029	1-D06
91 43 686	02	025	1-D02
91 45 764	03A	031	2-B08
91 46 689	02	097	1-G02
91 48 255	02	173	1-J06
91 48 289	02	173	1-J06
91 48 305	02	015	1-C16
91 48 313	02	015	1-C16
91 49 105	02	035	1-D12
91 49 113	02	035	1-D12
91 49 121	02	037	1-D14
91 66 299	02	025	1-D02
91 66 299	02	117	1-G22
91 66 299	02	119	1-G24
91 56 307	02	025	1-D02
91 66 323	02	013	1-C14
91 66 323	02	017	1-C18
91 66 323	03A	025	2-B02
91 66 331	04	005	3-H06
91 66 331	05	021	4-A22
91 66 349	02	029	1-D06
91 66 356	08B	009	6-A10
91 66 364	02	025	1-D02
91 66 364	02	069	1-E22
91 66 364	02	071	1-E24
91 56 364	05	021	4-A22
91 66 364	05	023	4-A24
91 66 364	08B	161	6-G18
91 66 364	08B	163	6-G20
91 66 364	08B	217	6-J02
91 66 364	08B	219	6-J04
91 66 364	08C	025	6-L02
91 66 364	08C	037	6-L14
91 66 372	02	015	1-C16
91 66 372	02	123	1-H04
91 66 372	02	129	1-H10
91 66 372	02	165	1-I22
91 66 372	04	033	3-H10
91 66 372	06	011	4-C12
91 66 372	06	023	4-C24
91 66 372	06	027	4-D04
91 65 380	02	153	1-H10
91 66 406	02	099	1-G04
91 66 406	03A	097	2-E02
91 66 406	08C	037	6-L14
91 66 414	02	039	1-D16
91 66 414	02	041	1-D18
91 67 016	03A	031	2-B08
91 67 032	03A	031	2-B08
91 67 727	02	165	1-I22
91 68 204	02	047	1-D24
91 68 352	02	175	1-J08
91 69 079	02	011	1-C12
91 69 079	02	015	1-C16
92 20 880	08B	009	6-A10
92 20 880	08B	015	6-A16
92 21 987	08A	063	5-C16
92 21 987	08A	067	5-C20
92 21 987	08A	069	5-C22
92 23 062	03A	079	2-D08
92 23 991	08A	013	5-A14
92 25 475	08A	065	5-C18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D01 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 28 149	03A	119	2-E24
92 28 149	08A	017	5-A18
92 28 156	02	143	1-H24
92 30 293	08A	011	5-A12
92 30 293	08A	105	5-E10
92 30 293	08A	121	5-F02
92 30 293	08B	193	6-I02
92 34 055	08A	137	5-F18
92 36 589	03A	059	2-C12
92 36 589	08A	027	5-B04
92 36 589	08A	029	5-B06
92 40 086	08A	067	5-C20
92 40 086	08A	085	5-D14
92 40 086	08A	163	5-G20
92 48 006	08A	053	5-C06
92 49 586	08A	131	5-F12
92 49 681	08A	137	5-F18
92 51 471	08A	083	5-D12
92 52 057	08A	067	5-C20
92 52 057	08A	083	5-D12
92 52 123	08A	083	5-D12
92 52 131	08A	083	5-D12
92 52 206	08A	061	5-C14
92 52 206	08A	069	5-C22
92 52 701	08A	049	5-C02
92 52 719	08A	049	5-C02
92 52 768	08A	053	5-C06
92 52 776	08A	053	5-C06
92 52 958	08A	045	5-B22
92 52 958	08A	047	5-B24
92 52 966	08A	045	5-B22
92 53 022	08A	043	5-B20
92 53 329	08A	083	5-D12
92 53 329	08A	087	5-D16
92 53 329	08A	091	5-D20
92 53 329	08A	163	5-G20
92 53 501	08A	057	5-C10
92 53 519	08A	057	5-C10
92 53 527	08A	057	5-C10
92 53 535	08A	057	5-C10
92 53 584	08A	043	5-B20
92 53 592	08A	043	5-B20
92 54 103	08A	017	5-A18
92 54 129	08A	017	5-A18
92 54 236	08A	015	5-A16
92 54 327	08A	015	5-A16
92 54 442	08A	017	5-A18
92 54 459	08A	017	5-A18
92 54 525	08A	015	5-A16
92 54 533	08A	015	5-A16
92 54 541	08A	015	5-A16
92 54 558	08A	015	5-A16
92 54 566	08A	015	5-A16
92 54 608	08A	015	5-A16
92 54 640	08A	017	5-A18
92 54 707	08A	017	5-A18
92 54 707	08A	031	5-B08
92 54 848	08A	015	5-A16
92 55 209	08A	049	5-C02
92 55 209	08A	155	5-G12
92 55 217	08A	049	5-C02
92 55 217	08A	155	5-G12
92 55 225	08A	053	5-C06
92 55 225	08A	157	5-G14
92 55 233	08A	053	5-C06
92 55 233	08A	157	5-G14
92 55 266	08A	081	5-D10
92 55 274	08A	081	5-D10
92 55 282	08A	081	5-D10
92 55 290	08A	081	5-D10
92 55 308	08A	081	5-D10
92 55 316	08A	081	5-D10
92 55 324	08A	083	5-D12
92 55 332	08A	083	5-D12
92 55 340	08A	083	5-D12
92 55 357	08A	083	5-D12
92 55 365	08A	083	5-D12
92 55 373	08A	083	5-D12
92 55 712	08A	039	5-B16
92 55 720	08A	039	5-B16
92 55 738	08A	039	5-B16
92 55 761	08A	039	5-B16
92 55 779	08A	039	5-B16
92 55 845	03A	091	2-D20
92 55 845	08B	197	6-I05
92 55 910	08A	027	5-B04
92 55 910	08A	029	5-B06
92 56 306	08A	061	5-C14
92 57 080	08A	057	5-C10
92 57 080	08A	059	5-C12
92 57 163	08A	057	5-C10
92 57 163	08A	059	5-C12
92 57 171	08A	057	5-C10
92 57 171	08A	059	5-C12
92 57 957	08A	081	5-D10
92 57 957	08A	087	5-D16
92 57 965	08A	081	5-D10
92 57 965	08A	087	5-D16
92 58 229	08A	061	5-C14
92 58 229	08A	087	5-D16
92 58 237	08A	081	5-D10
92 58 237	08A	087	5-D16
92 58 807	08A	055	5-C08
92 59 342	08A	017	5-A18
92 59 383	08A	017	5-A18
92 59 425	08A	059	5-C12
92 59 433	08A	059	5-C12
92 59 524	03A	069	2-C22
92 59 524	03A	117	2-E22
92 59 524	08A	015	5-A16
92 59 557	08A	119	5-E24
92 59 557	08A	153	5-G10
92 59 565	08A	163	5-G20
92 59 912	08A	039	5-B16
92 59 938	08A	049	5-C02
92 59 938	08A	055	5-C08
92 60 001	08A	121	5-F02
92 60 019	08A	121	5-F02
92 60 068	08A	061	5-C14
92 60 142	08A	015	5-A16
92 60 183	08A	059	5-C12
92 60 225	08A	071	5-C24
92 60 233	08A	071	5-C24
92 60 266	08A	071	5-C24
92 60 282	08A	071	5-C24
92 60 290	08A	071	5-C24
92 60 365	08A	071	5-C24
92 60 373	08A	071	5-C24
92 60 506	08A	071	5-C24
92 60 506	08A	073	5-D02
92 60 514	08A	071	5-C24
92 60 530	08A	071	5-C24
92 60 704	08A	043	5-B20
92 60 712	08A	043	5-B20
92 61 082	08A	075	5-D04
92 61 090	08A	075	5-D04
92 61 108	08A	075	5-D04
92 61 124	08A	119	5-E24
92 61 132	08A	119	5-E24
92 61 140	08A	121	5-F02
92 61 157	08A	121	5-F02
92 61 223	08A	053	5-C06
92 61 231	08A	053	5-C06
92 61 249	08A	053	5-C06
92 61 256	08A	053	5-C06
92 61 264	08A	049	5-C02
92 61 272	08A	049	5-C02
92 61 538	08A	061	5-C14
92 61 561	08A	061	5-C14
92 61 579	08A	061	5-C14
92 61 595	08A	061	5-C14
92 61 652	08A	039	5-B16
92 62 023	08A	057	5-C10
92 62 031	08A	057	5-C10
92 62 163	08A	061	5-C14
92 62 163	08A	065	5-C18
92 62 163	08A	069	5-C22
92 62 163	08A	071	5-C24
92 62 205	08A	017	5-A18
92 62 346	08A	049	5-C02
92 62 353	08A	049	5-C02
92 62 361	08A	071	5-C24
92 62 387	08A	071	5-C24
92 62 395	08A	071	5-C24
92 62 403	08A	071	5-C24
92 62 486	08A	061	5-C14
92 62 601	08A	045	5-B22
92 62 601	08A	047	5-B24
92 62 627	08A	053	5-C06
92 62 759	08A	095	5-D24
92 62 916	08A	115	5-E20
92 62 940	08A	129	5-F10
92 62 957	08A	129	5-F10
92 62 965	08A	129	5-F10
92 62 973	08A	071	5-C24
92 63 401	08A	057	5-C10
92 63 401	08A	059	5-C12
92 63 583	08A	057	5-C10
92 63 583	08A	059	5-C12
92 63 591	08A	121	5-F02
92 63 641	08A	053	5-C06
92 63 658	08A	049	5-C02
92 63 658	08A	053	5-C06
92 63 674	08A	129	5-F10
92 63 708	08A	119	5-E24
92 63 823	08A	049	5-C02
92 63 823	08A	053	5-C06
92 63 922	08A	017	5-A18
92 63 930	08A	017	5-A18
92 63 948	08A	015	5-A16
92 63 955	08A	015	5-A16
92 63 997	08A	043	5-B20
92 64 359	08A	027	5-B04
92 64 367	08A	027	5-B04
92 64 375	08A	027	5-B04
92 64 383	08A	027	5-B04
92 64 425	08A	061	5-C14
92 64 433	08A	061	5-C14
92 64 680	08A	017	5-A18
92 64 698	08A	017	5-A18
92 64 805	08A	079	5-D08
92 64 821	08A	079	5-D08
92 64 987	08A	079	5-D08
92 65 000	08A	079	5-D08
92 65 018	08A	079	5-D08
92 65 034	08A	079	5-D08
92 65 059	08A	079	5-D08
92 65 075	08A	079	5-D08
92 65 158	08A	079	5-D08
92 65 174	08A	079	5-D08
92 65 331	08A	095	5-D24
92 65 331	08A	099	5-E04
92 65 372	08A	027	5-B04
92 65 554	08A	023	5-A24
92 65 745	08A	005	5-A06
92 65 760	08A	019	5-A20
92 65 786	08A	019	5-A20
92 65 794	08A	019	5-A20
92 65 836	08A	023	5-A24
92 65 844	08A	023	5-A24
92 65 869	08A	013	5-A14
92 65 885	08A	013	5-A14
92 65 893	08A	013	5-A14
92 65 927	08A	009	5-A10
92 65 935	08A	009	5-A10
92 65 943	08A	009	5-A10
92 66 008	08A	009	5-A10
92 66 016	08A	009	5-A10
92 66 024	08A	009	5-A10
92 66 032	08A	009	5-A10
92 66 040	08A	009	5-A10
92 66 065	08A	011	5-A12
92 66 073	08A	009	5-A10
92 66 081	08A	009	5-A10
92 66 099	08A	009	5-A10
92 66 123	08A	005	5-A06
92 66 131	08A	005	5-A06
92 66 149	08A	005	5-A06
92 66 156	08A	005	5-A06
92 66 164	08A	005	5-A06

7-D02 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 66 172	08A	005	5-A06
92 66 180	08A	005	5-A06
92 66 198	08A	011	5-A12
92 66 206	08A	025	5-B02
92 66 214	08A	025	5-B02
92 66 289	08A	035	5-B12
92 66 297	08A	035	5-B12
92 66 347	08A	035	5-B12
92 66 362	08A	027	5-B04
92 66 370	08A	027	5-B04
92 66 420	08A	027	5-B04
92 66 438	08A	027	5-B04
92 66 461	08A	027	5-B04
92 66 479	08A	027	5-B04
92 66 487	08A	027	5-B04
92 66 495	08A	027	5-B04
92 66 552	08A	039	5-B16
92 66 644	08A	059	5-C12
92 66 651	08A	081	5-D10
92 66 651	08A	083	5-D12
92 66 792	08A	129	5-F10
92 66 982	08A	119	5-E24
92 66 990	08A	119	5-E24
92 67 006	08A	119	5-E24
92 67 014	08A	119	5-E24
92 67 048	08A	119	5-E24
92 67 055	08A	119	5-E24
92 67 394	08A	083	5-D12
92 67 477	08A	049	5-C02
92 67 477	08A	053	5-C06
92 67 485	08A	013	5-A14
92 67 527	08A	027	5-B04
92 67 527	08A	029	5-B06
92 67 527	08A	031	5-B08
92 67 691	08A	005	5-A06
92 67 709	08A	009	5-A10
92 67 717	08A	009	5-A10
92 67 774	08A	009	5-A10
92 67 808	08A	005	5-A06
92 67 816	08A	021	5-A22
92 67 865	08A	009	5-A10
92 67 881	03A	179	2-H12
92 67 881	08A	005	5-A06
92 67 881	08A	067	5-C20
92 67 899	08A	005	5-A06
92 67 899	08A	029	5-B06
92 67 899	08A	037	5-B14
92 67 907	08A	005	5-A06
92 67 915	08A	023	5-A24
92 67 915	08A	037	5-B14
92 67 923	08A	005	5-A06
92 67 923	08A	007	5-A08
92 67 931	08A	035	5-B12
92 67 956	08A	097	5-E02
92 67 956	08A	151	5-G08
92 67 964	08A	095	5-D24
92 67 972	08A	095	5-D24
92 67 980	08A	009	5-A10
92 67 998	08A	005	5-A06
92 67 998	08A	009	5-A10
92 68 020	08A	123	5-F04
92 68 020	08A	151	5-G08
92 68 020	08A	159	5-G16
92 68 038	08A	123	5-F04
92 68 038	08A	151	5-G08
92 68 038	08A	159	5-G16
92 68 079	08A	095	5-D24
92 68 160	08A	027	5-B04
92 68 178	08A	007	5-A08
92 68 178	08A	023	5-A24
92 68 178	08A	037	5-B14
92 68 186	03A	119	2-E24
92 68 186	08A	037	5-B14
92 68 194	08A	049	5-C02
92 68 202	08A	083	5-D12
92 68 608	08A	049	5-C02
92 68 608	08A	053	5-C06
92 68 616	08A	101	5-E06
92 68 616	08A	103	5-E08
92 68 616	08A	121	5-F02
92 68 814	08A	009	5-A10
92 68 822	08A	009	5-A10
92 68 863	08A	023	5-A24
92 68 913	08A	043	5-B20
92 68 913	08A	045	5-B22
92 68 913	08A	047	5-B24
92 68 921	08A	061	5-C14
92 68 947	08A	061	5-C14
92 68 988	08A	035	5-B12
92 69 234	08A	015	5-A16
92 69 390	08A	041	5-B18
92 69 697	08A	083	5-D12
92 69 697	08A	087	5-D16
92 69 705	08A	083	5-D12
92 69 713	08A	083	5-D12
92 70 240	08A	039	5-B16
92 70 257	08A	049	5-C02
92 70 257	08A	053	5-C06
92 70 349	08A	019	5-A20
92 70 380	08A	019	5-A20
92 70 398	08A	019	5-A20
92 70 547	09	009	7-A10
92 71 263	08A	009	5-A10
92 71 297	08A	019	5-A20
92 71 909	08A	015	5-A16
92 72 139	08A	067	5-C20
92 72 139	08A	083	5-D12
92 72 204	08A	019	5-A20
92 72 352	08A	027	5-B04
92 73 921	08A	045	5-B22
92 73 939	08A	045	5-B22
92 73 970	08A	043	5-B20
92 74 895	08A	121	5-F02
92 74 903	08A	121	5-F02
92 75 017	08A	079	5-D08
92 75 033	08A	079	5-D08
92 75 744	08A	039	5-B16
92 75 744	08A	061	5-C14
92 75 785	08A	023	5-A24
92 75 793	08A	023	5-A24
92 75 835	08A	139	5-F20
92 75 843	08A	139	5-F20
92 76 064	08A	095	5-D24
92 76 106	08A	009	5-A10
92 76 320	08A	139	5-F20
92 76 353	08A	019	5-A20
92 76 403	08A	027	5-B04
92 76 403	08A	029	5-B06
92 76 924	08A	009	5-A10
92 76 932	08A	009	5-A10
92 76 940	08A	009	5-A10
92 77 229	08A	163	5-G20
92 77 237	08A	129	5-F10
92 77 278	08A	121	5-F02
92 77 286	08A	121	5-F02
92 77 294	08A	121	5-F02
92 77 302	08A	121	5-F02
92 77 336	08A	067	5-D16
92 77 344	08A	087	5-D16
92 77 393	08A	087	5-D16
92 77 484	08A	133	5-F14
92 77 690	08A	129	5-F10
92 77 864	08A	097	5-E02
92 77 864	08A	151	5-G08
92 77 880	08A	027	5-B04
92 78 003	08A	087	5-D16
92 78 136	08A	043	5-B20
92 78 151	08A	081	5-D10
92 78 151	08A	083	5-D12
92 78 151	08A	085	5-D14
92 78 151	08A	087	5-D16
92 78 151	08A	089	5-D18
92 78 151	08A	091	5-D20
92 78 151	08A	107	5-E12
92 78 151	08A	125	5-F06
92 78 151	08A	167	5-G24
92 78 151	08A	169	5-H02
92 78 177	08A	087	5-D16
92 78 185	08A	087	5-D16
92 78 193	08A	087	5-D16
92 78 201	08A	087	5-D16
92 78 219	08A	087	5-D16
92 78 227	08A	087	5-D16
92 78 235	08A	087	5-D16
92 78 243	08A	087	5-D16
92 78 250	08A	087	5-D16
92 78 268	08A	087	5-D16
92 78 300	08A	115	5-E20
92 78 300	08A	151	5-G08
92 78 300	08A	153	5-G10
92 78 318	08A	115	5-E20
92 78 318	08A	151	5-G08
92 78 318	08A	153	5-G10
92 78 326	08A	115	5-E20
92 78 334	08A	115	5-E20
92 78 334	08A	117	5-E22
92 78 334	08A	151	5-G08
92 78 334	08A	161	5-G18
92 78 334	08A	163	5-G20
92 78 698	08A	131	5-F12
92 78 714	08A	131	5-F12
92 78 847	08A	097	5-E02
92 78 847	08A	151	5-G08
92 78 912	08A	009	5-A10
92 79 332	08A	057	5-C10
92 79 340	08A	057	5-C10
92 79 399	08A	121	5-F02
92 79 407	08A	123	5-F04
92 79 407	08A	159	5-G16
92 79 415	08A	123	5-F04
92 79 415	08A	159	5-G16
92 79 456	08A	019	5-A20
92 79 464	08A	019	5-A20
92 79 514	08A	051	5-C04
92 79 514	08A	055	5-C08
92 79 548	08A	129	5-F10
92 79 589	08A	095	5-D24
92 79 621	08A	065	5-C18
92 79 654	08A	017	5-A18
92 79 712	08A	017	5-A18
92 79 860	08A	045	5-B22
92 79 878	03A	119	2-E24
92 79 886	08A	049	5-C02
92 79 886	08A	053	5-C06
92 83 722	09	009	7-A10
92 85 404	08B	017	6-A18
92 88 127	08A	009	5-A10
92 88 127	08A	021	5-A22
92 88 127	08A	083	5-D12
92 88 127	08A	087	5-D16
92 88 127	08A	129	5-F10
92 88 846	08A	045	5-B22
92 88 846	08A	095	5-D24
92 88 846	08A	105	5-E10
92 88 846	08A	125	5-F06
92 88 846	08A	135	5-F16
92 88 846	08A	159	5-G16
92 92 699	08A	005	5-A06
93 00 591	02	039	1-D16
93 00 591	02	043	1-D20
93 01 532	02	149	1-I06
93 01 532	02	151	1-I08
93 01 532	02	175	1-J08
93 01 532	02	177	1-J10
93 01 540	02	039	1-D16
93 01 540	02	043	1-D20
93 06 812	02	111	1-G16
93 06 812	02	113	1-G18
93 06 812	02	115	1-G20
93 08 537	02	019	1-C20
93 09 204	02	025	1-D02
93 09 204	02	029	1-D06
93 09 576	02	039	1-D16
93 09 576	02	041	1-D18
93 09 576	02	043	1-D20
93 09 998	02	039	1-D16
93 09 998	02	041	1-D18
93 09 998	02	043	1-D20
93 12 802	02	085	1-F14
93 12 802	02	087	1-F16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D03 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
93 14 501	02	101	1-G06
93 19 294	02	009	1-C10
93 20 383	02	171	1-J04
93 21 464	02	013	1-C14
93 21 464	02	017	1-C18
93 21 464	02	171	1-J04
93 21 506	02	035	1-D12
93 21 514	02	035	1-D12
93 21 522	02	035	1-D12
93 21 530	02	025	1-D02
93 21 548	02	025	1-D02
93 21 589	02	031	1-D08
93 21 605	02	017	1-C18
93 21 605	02	171	1-J04
93 21 621	02	065	1-E18
93 21 670	02	153	1-I10
93 21 670	02	173	1-J06
93 21 688	02	155	1-I12
93 21 688	02	173	1-J06
93 21 712	02	067	1-E20
93 21 746	02	041	1-D18
93 21 746	02	171	1-J04
93 21 779	02	039	1-D16
93 21 779	02	041	1-D18
93 21 779	02	043	1-D20
93 21 787	03A	029	2-B06
93 21 795	02	019	1-C20
93 21 795	02	021	1-C22
93 21 795	02	025	1-D02
93 21 795	02	029	1-D06
93 21 795	02	039	1-D16
93 21 795	02	041	1-D18
93 21 795	02	043	1-D20
93 21 795	02	177	1-J10
93 21 795	04	013	3-H14
93 21 837	02	025	1-D02
93 21 845	02	027	1-D04
93 21 878	02	067	1-E20
93 25 663	08C	015	6-K16
93 28 105	02	121	1-H02
93 28 105	02	123	1-H04
93 28 105	02	127	1-H08
93 28 105	02	129	1-H10
93 33 790	02	063	1-E16
93 41 439	09	009	7-A10
93 42 270	02	169	1-J02
93 42 627	02	143	1-H24
93 46 354	06	025	4-D02
93 46 560	02	169	1-J02
93 48 533	04	031	3-I08
93 48 533	04	033	3-I10
93 50 158	02	019	1-C20
93 50 158	02	021	1-C22
93 50 216	02	117	1-G22
93 50 224	02	117	1-G22
93 50 505	02	165	1-I22
93 50 513	02	163	1-I20
93 50 588	02	111	1-G16
93 50 588	02	113	1-G18
93 50 588	02	115	1-G20
93 50 653	02	069	1-E22
93 50 653	02	071	1-E24
93 55 389	02	039	1-D16
93 55 389	02	041	1-D18
93 55 389	02	043	1-D20
93 56 486	02	069	1-E22
93 56 486	02	071	1-E24
93 57 021	02	069	1-E22
93 57 021	02	071	1-E24
93 57 138	02	165	1-I22
93 57 203	02	019	1-C20
93 57 716	02	011	1-C12
93 57 716	02	015	1-C16
93 58 177	02	085	1-F14
93 58 177	02	089	1-F18
93 58 177	02	091	1-F20
93 58 177	02	093	1-F22
93 58 177	02	095	1-F24
93 58 177	02	097	1-G02
93 58 391	02	011	1-C12
93 58 391	02	015	1-C16
93 59 050	02	099	1-G04
93 59 084	02	111	1-G16
93 59 985	02	153	1-I10
93 61 544	02	039	1-D16
93 61 544	02	041	1-D18
93 61 544	02	043	1-D20
93 65 164	02	057	[illegible]
93 65 164	03A	177	[illegible]
93 68 234	02	063	[illegible]
93 77 334	02	133	1-H14
93 78 332	04	037	3-I14
93 79 470	04	031	3-I08
93 79 488	04	031	3-I08
93 79 637	04	031	3-I08
93 81 120	02	143	1-H24
93 81 252	02	127	1-H08
93 81 450	04	037	3-I14
93 81 724	02	143	1-H24
93 82 102	02	141	1-H22
93 82 110	02	141	1-H22
93 82 144	02	139	1-H20
93 82 144	02	141	1-H22
93 82 144	08C	037	6-L14
93 82 359	08C	015	6-K16
93 82 383	08C	015	6-K16
93 82 425	04	031	3-I08
93 82 466	08C	015	6-K16
93 82 466	08C	019	6-K20
93 82 466	08C	033	6-L10
93 82 631	02	133	1-H14
93 82 649	02	133	1-H14
93 82 656	02	133	1-H14
93 82 870	02	063	1-E16
93 83 043	02	057	1-E10
93 83 043	03A	185	2-H18
93 83 076	02	069	1-E22
93 83 076	02	071	1-E24
93 83 662	02	133	1-H14
93 83 662	02	135	1-H16
93 83 670	02	133	1-H14
93 83 670	02	135	1-H16
93 83 670	08C	037	6-L14
93 83 688	02	133	1-H14
93 84 298	02	063	1-E16
93 85 121	02	081	1-F10
93 85 709	02	135	1-H16
93 85 824	02	133	1-H14
93 85 832	02	137	1-H18
93 85 931	04	037	3-I14
93 86 210	06	023	4-C24
93 86 285	02	133	1-H14
93 86 285	08C	033	6-L10
93 86 285	08C	037	6-L14
93 86 343	08C	015	6-K16
93 86 343	08C	019	6-K20
93 86 343	08C	035	6-L12
93 86 350	08C	015	6-K16
93 86 350	08C	019	6-K20
93 86 350	08C	035	6-L12
93 86 459	04	013	3-H14
93 86 467	04	013	3-H14
93 86 509	08A	007	5-A08
93 86 533	06	023	4-C24
93 87 002	02	057	1-E10
93 87 044	04	037	3-I14
93 87 341	02	057	1-E10
93 87 671	02	143	1-H24
93 87 689	02	143	1-H24
93 87 895	02	079	1-F08
93 87 903	02	057	1-E10
93 87 911	08A	009	5-A10
93 87 994	08A	009	5-A10
93 88 034	02	061	1-E14
93 88 232	02	039	1-D16
93 88 398	03A	021	2-A22
93 88 554	03A	021	2-A22
93 88 588	02	127	1-H08
93 88 588	02	129	1-H10
93 88 653	02	019	1-C20
93 88 661	02	019	1-C20
93 88 794	02	039	1-D16
93 88 794	02	041	1-D18
93 88 968	02	051	1-E04
93 88 968	02	053	1-E06
93 89 198	02	079	1-F08
93 89 560	02	121	1-H02
93 89 784	02	121	1-H02
93 89 990	02	019	1-C20
93 90 022	02	167	1-I24
93 90 121	02	045	1-D22
93 90 154	02	039	1-D16
93 90 154	02	041	1-D18
93 90 154	02	043	1-D20
93 90 170	02	049	1-E02
93 90 170	02	051	1-E04
93 90 170	02	053	1-E06
93 90 170	02	055	1-E08
93 90 840	03A	023	2-A24
93 90 840	03A	215	2-I24
93 90 907	02	049	1-E02
93 90 907	02	051	1-E04
93 90 907	02	053	1-E06
93 90 907	02	055	1-E08
93 90 915	02	049	1-E02
93 90 915	02	051	1-E04
93 90 915	02	053	1-E06
93 90 923	02	143	1-H24
93 90 956	02	143	1-H24
93 90 964	08C	035	6-L12
93 90 964	09	011	7-A12
93 91 111	09	013	7-A14
93 91 467	02	039	1-D16
93 91 467	02	041	1-D18
93 91 509	02	143	1-H24
93 91 608	02	049	1-E02
93 91 616	02	049	1-E02
93 91 616	02	051	1-E04
93 91 616	02	053	1-E06
93 91 616	02	055	1-E08
93 91 764	02	081	1-F10
93 92 457	02	123	1-H04
93 92 457	02	129	1-H10
93 92 465	02	121	1-H02
93 92 465	02	123	1-H04
93 92 465	02	125	1-H06
93 92 465	02	127	1-H08
93 92 465	02	129	1-H10
93 92 465	02	131	1-H12
93 92 606	02	057	1-E10
93 92 606	02	059	1-E12
93 92 762	02	123	1-H04
93 92 762	02	129	1-H10
93 93 299	02	057	1-E10
93 93 455	02	127	1-H08
93 93 455	02	129	1-H10
93 93 968	02	063	1-E16
93 93 968	02	081	1-F10
93 93 968	02	121	1-H02
93 93 968	02	123	1-H04
93 93 968	02	125	1-H06
93 93 968	02	127	1-H08
93 93 968	02	129	1-H10
93 93 968	02	131	1-H12
93 93 968	08B	023	6-A24
93 94 602	02	065	1-E18
93 94 628	02	065	1-E18
93 94 628	02	067	1-E20
93 94 867	02	057	1-E10
93 94 875	02	057	1-E10
93 94 875	02	059	1-E12
94 20 035	08C	005	6-K06
94 20 043	08C	005	6-K06
94 23 658	08B	131	6-F12
94 27 014	02	139	1-H20
94 27 014	02	141	1-H22
94 27 014	08A	019	5-A20
94 27 014	08C	037	6-L14
94 41 239	05	009	4-A10
94 45 909	08B	185	6-H18

7-D04 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
94 45 909	08B	189	6-H22
94 45 909	08B	221	6-J06
94 46 881	03A	009	2-A10
94 46 881	03A	183	2-H16
94 46 881	08B	205	6-I14
94 50 685	08B	157	6-G14
94 50 685	08B	169	6-H02
94 50 685	08B	183	6-H16
94 50 685	08B	215	6-I24
94 59 728	08B	193	6-I02
94 59 868	08B	163	6-G20
94 59 868	08B	177	6-H10
94 59 868	08B	217	6-J02
94 60 742	08C	021	6-K22
94 64 926	08B	131	6-F12
94 72 580	08A	111	5-E16
94 73 851	08C	021	6-K22
94 73 869	03A	095	2-D24
94 73 869	08B	151	6-G08
94 73 869	08B	153	6-G10
94 73 877	08B	131	6-F12
94 79 452	08C	015	6-K16
94 79 486	08C	015	6-K16
94 80 914	08C	021	6-K22
94 89 493	08B	215	6-I24
94 91 325	08B	221	6-J06
94 91 689	08B	131	6-F12
94 91 689	08B	137	6-F18
94 91 689	08B	141	6-F22
94 91 689	08B	145	6-G02
94 91 689	08B	149	6-G06
95 00 273	03A	069	2-C22
95 00 513	03A	093	2-D22
95 00 927	08C	005	6-K06
95 01 172	03A	033	2-B10
95 01 180	03A	033	2-B10
95 01 230	03A	033	2-B10
95 01 255	03A	033	2-B10
95 01 321	03A	213	2-I22
95 01 495	03A	079	2-D08
95 01 628	03A	059	2-C12
95 01 685	03A	075	2-D04
95 01 685	03B	009	3-A10
95 01 685	03B	037	3-B14
95 01 685	03B	061	3-C14
95 01 685	03B	087	3-D16
95 01 693	03A	059	2-C12
95 01 941	03A	069	2-C22
95 02 055	03A	069	2-C22
95 02 584	03A	079	2-D08
95 02 592	03A	079	2-D08
95 02 618	03A	079	2-D08
95 02 691	03A	091	2-D20
95 02 709	03A	091	2-D20
95 02 717	03A	091	2-D20
95 02 741	03A	091	2-D20
95 02 766	03A	081	2-D10
95 02 840	03A	179	2-H12
95 03 012	03B	017	3-A18
95 03 012	03B	041	3-B18
95 03 020	03B	023	3-A24
95 03 020	03B	051	3-C04
95 03 020	03B	079	3-D08
95 03 020	03B	101	3-E06
95 03 053	03A	009	2-A10
95 03 061	03A	091	2-D20
95 03 079	03A	091	2-D20
95 03 251	03B	019	3-A20
95 03 251	03B	047	3-B24
95 03 251	03B	073	3-D02
95 03 251	03B	095	3-D24
95 03 277	03B	013	3-A14
95 03 277	03B	041	3-B18
95 03 277	03B	065	3-C18
95 03 277	03B	089	3-D18
95 03 319	03B	007	3-A08
95 03 319	03B	035	3-B12
95 03 319	03B	059	3-C12
95 03 319	03B	083	3-D12
95 03 327	03A	033	2-B10
95 03 327	03A	035	2-B12
95 03 327	03A	037	2-B14
95 03 327	03A	075	2-D04
95 03 327	03A	079	2-D08
95 03 327	03A	083	2-D12
95 03 327	03A	103	2-E08
95 03 327	03A	215	2-I24
95 03 327	03A	217	2-J02
95 03 327	03B	013	3-A14
95 03 327	03B	069	3-C22
95 03 327	03B	091	3-D20
95 03 418	03B	005	3-A06
95 03 418	03B	033	3-B10
95 03 418	03B	057	3-C10
95 03 418	03B	083	3-D12
95 03 426	03B	005	3-A06
95 03 426	03B	033	3-B10
95 03 426	08C	035	6-L12
95 03 434	03B	017	3-A18
95 03 434	03B	045	3-B22
95 03 434	03B	069	3-C22
95 03 434	03B	093	3-D22
95 03 442	03B	017	3-A18
95 03 442	03B	045	3-B22
95 03 442	03B	069	3-C22
95 03 442	08C	035	6-L12
95 03 475	03B	019	3-A20
95 03 475	03B	047	3-B24
95 03 475	03B	071	3-C24
95 03 475	03B	095	3-D24
95 03 491	03A	179	2-H12
95 03 715	03A	011	2-A12
95 03 715	03A	015	2-A16
95 03 723	03A	091	2-D20
95 03 772	03A	093	2-D22
95 03 772	08A	157	5-G14
95 04 648	03A	033	2-B10
95 04 648	03A	035	2-B12
95 04 648	03A	037	2-B14
95 04 648	03A	041	2-B18
95 04 648	03A	043	2-B20
95 04 648	03A	045	2-B22
95 05 058	03A	091	2-D20
95 05 116	03A	067	2-C20
95 05 116	03A	209	2-I18
95 05 116	03A	213	2-I22
95 05 157	03A	033	2-B10
95 05 165	03A	033	2-B10
95 05 298	03A	209	2-I18
95 05 298	03A	213	2-I22
95 05 397	03B	023	3-A24
95 05 397	03B	051	3-C04
95 05 397	03B	079	3-D08
95 05 397	03B	101	3-E06
95 05 421	08C	005	6-K06
95 05 439	03A	069	2-C22
95 05 447	03A	069	2-C22
95 05 454	08A	057	5-C10
95 05 454	08A	059	5-C12
95 05 [illegible]62	03A	101	2-E06
95 05 4[illegible]8	03A	093	2-D22
95 05 488	08A	157	5-G14
95 05 520	03A	209	2-I18
95 05 520	03A	213	2-I22
95 05 538	03A	209	2-I18
95 05 538	03A	213	2-I22
95 05 546	03A	209	2-I18
95 05 546	03A	213	2-I22
95 05 553	03A	209	2-I18
95 05 553	03A	213	2-I22
95 05 561	03A	209	2-I18
95 05 561	03A	213	2-I22
95 05 629	03A	207	2-I16
95 05 629	03A	211	2-I20
95 05 652	03A	101	2-E06
95 05 744	08C	005	6-K06
95 05 793	08A	015	5-A16
95 05 801	08A	015	5-A16
95 05 959	03A	189	2-H22
95 06 080	03A	069	2-C22
95 06 379	03A	085	2-D14
95 06 387	03A	085	2-D14
95 06 403	03A	085	2-D14
95 06 411	03A	085	2-D14
95 06 619	03A	209	2-I18
95 06 619	03A	213	2-I22
95 06 668	03B	019	3-A20
95 06 668	03B	047	3-B24
95 07 617	03A	085	2-D14
95 07 617	03A	087	2-D16
95 07 633	03A	085	2-D14
95 07 658	03B	013	3-A14
95 07 658	03B	041	3-B18
95 07 658	03B	065	3-C18
95 07 666	03A	179	2-H12
95 07 690	03A	179	2-H12
95 07 708	03A	049	2-C02
95 07 708	03A	051	2-C04
95 07 708	03A	053	2-C06
95 07 849	08C	021	6-K22
95 07 914	03A	177	2-H10
95 07 971	03A	107	2-E12
95 08 011	08A	057	5-C10
95 08 011	08A	059	5-C12
95 08 037	03A	177	2-H10
95 08 045	03A	177	2-H10
95 08 094	03A	091	2-D20
95 08 094	08A	057	5-C10
95 08 094	08A	059	5-C12
95 08 367	03A	101	2-E06
95 08 441	03A	189	2-H22
95 08 482	03A	179	2-H12
95 08 524	03A	177	2-H10
95 08 532	03A	177	2-H10
95 08 706	03B	113	3-E18
95 08 706	03B	123	3-F04
95 08 706	03B	133	3-F14
95 08 706	03B	143	3-F24
95 08 714	03B	017	3-A18
95 08 714	03B	045	3-B22
95 08 714	03B	069	3-C22
95 08 714	03B	093	3-D22
95 08 862	03A	209	2-I18
95 08 862	03A	213	2-I22
95 08 904	03A	059	2-C12
95 08 904	03A	063	2-C16
95 09 076	03A	111	2-E16
95 09 100	03A	079	2-D08
95 09 118	03A	079	2-D08
95 09 126	03A	079	2-D08
95 09 175	03A	207	2-I16
95 09 175	03A	209	2-I18
95 09 175	03A	211	2-I20
95 09 175	03A	213	2-I22
95 09 688	03A	079	2-D08
95 09 696	03A	079	2-D08
95 09 746	03B	023	3-A24
95 09 746	03B	051	3-C04
95 09 746	03B	075	3-D04
95 09 746	03B	099	3-E04
95 09 746	03B	113	3-E18
95 09 746	03B	125	3-F06
95 09 746	03B	135	3-F16
95 09 746	03B	145	3-G02
95 09 993	03A	209	2-I18
95 12 229	03A	101	2-E06
95 12 229	03A	115	2-E20
95 12 302	03A	097	2-E02
95 12 328	03A	041	2-B18
95 12 393	03A	041	2-B18
95 12 401	03A	041	2-B18
95 12 401	03A	043	2-B20
95 12 401	03A	045	2-B22
95 12 591	03B	019	3-A20
95 12 591	03B	047	3-B24
95 12 591	03B	075	3-D04
95 12 591	03B	095	3-D24
95 12 690	03A	093	2-D22
95 12 690	08C	035	6-L12
95 12 880	03A	067	2-C20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D05 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 12 880	03A	071	2-C24
95 12 898	03A	071	2-C24
95 12 930	03B	023	3-A24
95 12 930	03B	051	3-C04
95 12 930	03B	075	3-D04
95 12 930	03B	099	3-E04
95 13 037	03A	041	2-B18
95 13 078	03A	041	2-B18
95 13 086	03A	041	2-B18
95 13 128	03A	011	2-A12
95 13 128	03A	015	2-A16
95 13 144	03A	011	2-A12
95 13 169	03A	011	2-A12
95 13 177	03A	011	2-A12
95 13 185	03A	011	2-A12
95 13 193	03A	011	2-A12
95 13 219	03A	193	2-I02
95 13 219	08C	037	6-L14
95 13 268	03A	079	2-D08
95 13 268	03A	215	2-I24
95 13 334	03A	209	2-I18
95 13 334	03A	213	2-I22
95 13 581	03A	033	2-B10
95 13 599	03A	011	2-A12
95 13 599	03A	015	2-A16
95 13 763	03A	011	2-A12
95 13 888	03A	209	2-I18
95 13 888	03A	213	2-I22
95 14 183	03A	101	2-E06
95 14 183	03A	219	2-J04
95 14 233	03A	067	2-C20
95 14 258	03A	071	2-C24
95 14 324	03A	071	2-C24
95 14 787	08C	005	6-K06
95 14 803	03B	013	3-A14
95 14 803	03B	041	3-B18
95 14 803	03B	065	3-C18
95 14 803	03B	089	3-D18
95 14 811	03A	041	2-B18
95 14 860	03A	101	2-E06
95 14 860	03A	115	2-E20
95 14 878	03A	101	2-E06
95 14 886	03A	101	2-E06
95 14 894	03A	207	2-I16
95 14 894	03A	211	2-I20
95 14 894	03A	213	2-I22
95 14 951	03A	067	2-C20
95 14 969	03A	067	2-C20
95 15 024	03B	111	3-E16
95 15 024	03B	121	3-F02
95 15 024	03B	131	3-F12
95 15 024	03B	141	3-F22
95 15 099	03A	193	2-I02
95 15 099	03A	197	2-I06
95 15 099	03A	199	2-I08
95 15 099	03A	203	2-I12
95 15 180	03A	011	2-A12
95 15 180	03A	015	2-A16
95 15 222	03A	009	2-A10
95 16 212	03A	187	2-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 16 329	03A	097	2-E02
95 17 392	03A	009	2-A10
95 17 400	03A	123	2-F04
95 17 400	03A	127	2-F08
95 17 400	03A	135	2-F16
95 17 400	03A	137	2-F18
95 17 400	03A	149	2-G06
95 17 400	03A	155	2-G12
95 17 400	03A	163	2-G20
95 17 400	03A	169	2-H02
95 17 798	03A	097	2-E02
95 17 806	03A	093	2-D22
95 17 871	03A	177	2-H10
95 17 871	03A	187	2-H20
95 17 889	03A	179	2-H12
95 17 889	03A	187	2-H20
95 18 119	03A	183	2-H16
95 18 226	03A	093	2-D22
95 18 267	03A	067	2-C20
95 18 291	03A	093	2-D22
95 18 309	03A	093	2-D22
95 18 424	03A	009	2-A10
95 18 507	03A	057	2-C10
95 18 556	03A	107	2-E12
95 18 713	03A	115	2-E20
95 18 713	03B	013	3-A14
95 18 713	03B	041	3-B18
95 18 739	03A	077	2-D06
95 18 739	03B	017	3-A18
95 18 739	03B	045	3-B22
95 18 820	03A	093	2-D22
95 18 879	03A	059	2-C12
95 18 887	03A	059	2-C12
95 18 895	03A	059	2-C12
95 18 903	03A	059	2-C12
95 18 952	03A	059	2-C12
95 18 960	03A	059	2-C12
95 18 978	03A	059	2-C12
95 18 986	03A	059	2-C12
95 19 026	03A	117	2-E22
95 19 034	03A	117	2-E22
95 19 075	03A	059	2-C12
95 19 083	03A	059	2-C12
95 19 133	03A	193	2-I02
95 19 133	03A	197	2-I06
95 19 133	03A	199	2-I08
95 19 133	03A	203	2-I12
95 19 372	03A	117	2-E22
95 19 398	03B	009	3-A10
95 19 398	03B	037	3-B14
95 19 398	03B	061	3-C14
95 19 398	03B	087	3-D16
95 19 398	03B	109	3-E14
95 19 398	03B	119	3-E24
95 19 398	03B	129	3-F10
95 19 398	03B	139	3-F20
95 19 406	03B	009	3-A10
95 19 406	03B	037	3-B14
95 19 406	03B	061	3-C14
95 19 406	03B	087	3-D16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 19 414	03B	017	3-A18
95 19 414	03B	045	3-B22
95 19 414	03B	071	3-C24
95 19 422	03B	009	3-A10
95 19 422	03B	037	3-B14
95 19 422	03B	061	3-C14
95 19 430	03B	019	3-A20
95 19 430	03B	045	3-B22
95 19 430	03B	071	3-C24
95 19 455	03B	019	3-A20
95 19 455	03B	045	3-B22
95 19 455	03B	071	3-C24
95 19 455	03B	093	3-D22
95 19 570	03A	179	2-H12
95 19 604	03A	097	2-E02
95 19 612	03A	097	2-E02
95 19 638	03A	097	2-E02
95 19 646	03A	097	2-E02
95 19 679	03B	015	3-A16
95 19 679	03B	041	3-B18
95 19 679	03B	065	3-C18
95 19 679	03B	089	3-D18
95 19 737	03A	179	2-H12
95 19 737	06	011	4-C12
95 19 745	03A	119	2-E24
95 19 786	03A	177	2-H10
95 19 877	08B	157	6-G14
95 19 877	08B	169	6-H02
95 19 919	03A	119	2-E24
95 19 927	03A	119	2-E24
95 20 974	03B	019	3-A20
95 20 974	03B	047	3-B24
95 20 974	03B	075	3-D04
95 20 974	03B	095	3-D24
95 21 352	03A	043	2-B20
95 21 352	03A	045	2-B22
95 21 360	03A	043	2-B20
95 21 360	03A	045	2-B22
95 21 774	03A	043	2-B20
95 21 774	03A	045	2-B22
95 21 782	03A	043	2-B20
95 21 782	03A	045	2-B22
95 21 816	03A	043	2-B20
95 21 816	03A	045	2-B22
95 21 824	03A	043	2-B20
95 21 824	03A	045	2-B22
95 21 857	03A	069	2-C22
95 21 881	03A	035	2-B12
95 21 881	03A	037	2-B14
95 21 956	03A	035	2-B12
95 21 956	03A	037	2-B14
95 21 964	03A	035	2-B12
95 21 964	03A	037	2-B14
95 21 972	03B	111	3-E16
95 21 972	03B	123	3-F04
95 21 972	03B	133	3-F14
95 21 972	03B	143	3-F24
95 21 980	03B	113	3-E18
95 21 980	03B	123	3-F04
95 21 980	03B	133	3-F14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 21 980	03B	143	3-F24
95 22 061	03A	193	2-I02
95 22 061	03A	197	2-I06
95 22 061	03A	199	2-I08
95 22 061	03A	203	2-I12
95 22 061	08C	033	6-L10
95 22 079	03A	093	2-D22
95 22 434	03A	061	2-C14
95 22 442	03A	061	2-C14
95 22 459	03A	061	2-C14
95 22 467	03A	061	2-C14
95 22 590	03A	063	2-C16
95 22 608	03A	063	2-C16
95 22 616	03A	061	2-C14
95 22 624	03A	111	2-E16
95 22 632	03A	111	2-E16
95 22 806	03A	111	2-E16
95 22 814	03A	111	2-E16
95 22 822	03A	119	2-E24
95 23 119	03A	123	2-F04
95 23 119	03A	127	2-F08
95 23 119	03A	135	2-F16
95 23 119	03A	137	2-F18
95 23 119	03A	149	2-G06
95 23 119	03A	155	2-G12
95 23 119	03A	163	2-G20
95 23 119	03A	167	2-G24
95 23 119	08C	037	6-L14
95 23 184	03A	011	2-A12
95 23 184	03A	015	2-A16
95 23 218	03A	183	2-H16
95 23 465	03A	179	2-H12
95 23 598	03A	131	2-F12
95 23 598	03A	143	2-F24
95 23 598	03A	159	2-G16
95 23 598	03A	173	2-H06
95 23 598	08A	159	5-G16
95 23 622	03A	179	2-H12
95 23 747	03A	093	2-D22
95 23 754	03A	075	2-D04
95 23 762	03A	093	2-D22
95 23 788	03A	093	2-D22
95 23 788	08C	035	6-L12
95 23 804	03A	095	2-D24
95 23 812	03A	093	2-D22
95 24 042	03A	111	2-E16
95 24 208	03A	009	2-A10
95 24 224	03A	079	2-D08
95 24 232	03A	079	2-D08
95 24 307	03A	111	2-E16
95 24 315	03A	111	2-E16
95 24 372	03A	111	2-E16
95 24 398	03A	111	2-E16
95 24 406	03A	111	2-E16
95 24 455	03A	061	2-C14
95 24 463	03A	061	2-C14
95 24 513	03A	061	2-C14
95 24 521	03A	061	2-C14
95 24 570	03A	063	2-C16
95 24 596	03A	079	2-D08

7-D06 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 24 638	03A	183	2-H16
95 24 778	03A	133	2-F14
95 24 778	03A	145	2-G02
95 24 786	03A	107	2-E12
95 24 786	03A	123	2-F04
95 24 786	03A	127	2-F08
95 24 786	03A	135	2-F16
95 24 786	03A	137	2-F18
95 24 836	03A	193	2-I02
95 24 836	03A	197	2-I06
95 24 844	03A	085	2-D14
95 24 992	03A	085	2-D14
95 25 015	03A	035	2-B12
95 25 015	03A	037	2-B14
95 25 031	03B	101	3-E06
95 25 080	03B	011	3-A12
95 25 080	03B	037	3-B14
95 25 106	03B	027	3-B04
95 25 106	03B	055	3-C08
95 25 106	03B	079	3-D08
95 25 106	03B	103	3-E08
95 25 114	03B	027	3-B04
95 25 114	03B	055	3-C08
95 25 114	03B	079	3-D08
95 25 114	03B	103	3-E08
95 25 122	03A	187	2-H20
95 25 221	03A	177	2-H10
95 25 221	08A	017	5-A18
95 25 254	03A	035	2-B12
95 25 254	03A	037	2-B14
95 25 254	03A	043	2-B20
95 25 254	03A	045	2-B22
95 25 262	03A	035	2-B12
95 25 262	03A	037	2-B14
95 25 262	03A	043	2-B20
95 25 262	03A	045	2-B22
95 25 312	03A	035	2-B12
95 25 312	03A	037	2-B14
95 25 320	03A	035	2-B12
95 25 320	03A	037	2-B14
95 25 460	03A	189	2-H22
95 25 486	03A	189	2-H22
95 25 494	03A	107	2-E12
95 25 700	03A	207	2-I16
95 25 700	03A	211	2-I20
95 25 742	03A	209	2-I18
95 25 742	03A	211	2-I20
95 25 809	03B	011	3-A12
95 25 809	03B	037	3-B14
95 25 809	03B	061	3-C14
95 25 809	03B	087	3-D16
95 25 817	03B	011	3-A12
95 25 817	03B	023	3-A24
95 25 817	03B	037	3-B14
95 25 817	03B	051	3-C04
95 25 817	03B	061	3-C14
95 25 817	03B	087	3-D16
95 25 817	03B	123	3-F04
95 25 817	03B	133	3-F14
95 25 817	03B	143	3-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 25 908	03A	189	2-H22
95 26 013	03A	183	2-H16
95 26 039	03A	093	2-D22
95 26 054	03A	093	2-D22
95 26 088	03A	183	2-H16
95 26 096	03A	111	2-E16
95 26 260	03A	043	2-B20
95 26 260	03A	045	2-B22
95 26 310	03A	215	2-I24
95 26 328	03A	189	2-H22
95 26 336	03A	189	2-H22
95 26 344	03A	035	2-B12
95 26 344	03A	037	2-B14
95 26 351	03A	035	2-B12
95 26 351	03A	037	2-B14
95 26 401	03B	011	3-A12
95 26 401	03B	023	3-A24
95 26 401	03B	037	3-B14
95 26 401	03B	051	3-C04
95 26 401	03B	079	3-D08
95 26 401	03B	099	3-E04
95 26 401	03B	109	3-E14
95 26 401	03B	119	3-E24
95 26 401	03B	129	3-F10
95 26 401	03B	139	3-F20
95 26 419	03A	107	2-E12
95 26 484	03A	043	2-B20
95 26 484	03A	045	2-B22
95 26 526	02	137	1-H18
95 26 526	08C	037	6-L14
95 26 567	03A	063	2-C16
95 26 757	03A	097	2-E02
95 26 773	03A	187	2-H20
95 26 799	03A	189	2-H22
95 26 872	03A	131	2-F12
95 26 872	03A	143	2-F24
95 26 872	03A	159	2-G16
95 26 872	08A	157	5-G14
95 26 906	03A	103	2-E08
95 26 963	09	005	7-A06
95 27 631	03A	189	2-H22
95 27 706	08B	157	6-G14
95 27 706	08B	169	6-H02
95 27 755	03B	027	3-B04
95 27 755	03B	055	3-C08
95 27 755	03B	079	3-D08
95 27 755	03B	103	3-E08
95 27 763	03B	027	3-B04
95 27 763	03B	055	3-C08
95 27 763	03B	079	3-D08
95 27 763	03B	103	3-E08
95 27 771	03B	027	3-B04
95 27 771	03B	055	3-C08
95 27 771	03B	079	3-D08
95 27 771	03B	103	3-E08
95 27 771	03B	111	3-E16
95 27 771	03B	121	3-F02
95 27 771	03B	131	3-F12
95 27 771	03B	141	3-F22
95 27 789	03A	189	2-H22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 27 904	03A	095	2-D24
95 27 904	03A	215	2-I24
95 27 904	03A	217	2-J02
95 27 979	03A	107	2-E12
95 28 019	02	081	1-F10
95 28 019	03A	177	2-H10
95 28 134	03A	133	2-F14
95 28 134	03A	145	2-G02
95 28 159	03A	111	2-E16
95 28 159	03A	113	2-E18
95 28 167	03A	111	2-E16
95 28 704	08B	157	6-G14
95 28 704	08B	169	6-H02
95 28 720	03A	057	2-C10
95 28 795	03A	085	2-D14
95 28 910	02	053	1-E06
95 28 910	02	055	1-E08
95 29 033	03A	011	2-A12
95 29 173	03A	113	2-E18
95 29 181	03A	113	2-E18
95 29 199	03A	113	2-E18
95 29 207	03A	113	2-E18
95 29 256	03A	107	2-E12
95 29 363	03A	101	2-E06
95 29 405	03A	057	2-C10
95 29 413	03A	073	2-D02
95 29 421	03A	073	2-D02
95 29 488	03A	075	2-D04
95 29 488	03A	077	2-D06
95 29 512	03B	023	3-A24
95 29 512	03B	051	3-C04
95 29 512	03B	079	3-D08
95 29 512	03B	099	3-E04
95 29 520	03A	179	2-H12
95 29 538	03B	023	3-A24
95 29 538	03B	051	3-C04
95 29 637	03A	097	2-E02
95 29 645	03A	209	2-I18
95 29 652	03A	209	2-I18
95 29 660	03A	179	2-H12
95 29 785	03A	033	2-B10
95 29 785	03A	215	2-I24
95 29 793	03A	033	2-B10
95 29 793	03A	035	2-B12
95 29 793	03A	037	2-B14
95 29 793	03A	215	2-I24
95 29 793	03A	217	2-J02
95 29 827	03A	057	2-C10
95 29 835	03A	057	2-C10
95 29 843	03A	057	2-C10
95 29 868	03A	057	2-C10
95 29 876	03A	057	2-C10
95 29 884	03A	057	2-C10
95 29 900	03A	057	2-C10
95 29 975	03A	091	2-D20
95 34 322	08A	051	5-C04
95 34 322	08A	055	5-C08
95 34 355	08A	051	5-C04
95 34 355	08A	055	5-C08
95 41 319	08B	153	6-G10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
95 42 309	08B	173	6-H06
95 42 317	08B	173	6-H06
95 44 818	08B	209	6-I18
95 44 818	08B	217	6-J02
95 44 834	08B	021	6-A22
95 45 021	08B	205	6-I14
95 45 047	08B	205	6-I14
95 45 054	08B	205	6-I14
95 45 070	08B	205	6-I14
95 45 104	08B	163	6-G20
95 45 104	08B	177	6-H10
95 45 211	08B	025	6-B02
95 45 229	08B	011	6-A12
95 45 245	08B	011	6-A12
95 45 260	08B	011	6-A12
95 45 351	08B	191	6-H24
95 45 435	03A	069	2-C22
95 45 443	08B	191	6-H24
95 45 450	08B	191	6-H24
95 45 468	08B	131	6-F12
95 45 476	08B	131	6-F12
95 45 484	08B	131	6-F12
95 45 534	08B	007	6-A08
95 45 898	08B	083	6-D12
95 45 898	08B	095	6-D24
95 45 898	08B	107	6-E12
95 45 898	08B	121	6-F02
95 45 906	08B	083	6-D12
95 45 906	08B	095	6-D24
95 45 906	08B	107	6-E12
95 45 906	08B	121	6-F02
95 46 110	08B	021	6-A22
95 46 722	08B	013	6-A14
95 46 730	08B	013	6-A14
95 46 755	08B	013	6-A14
95 46 763	08B	013	6-A14
95 46 789	08B	013	6-A14
95 46 847	08B	013	6-A14
95 46 946	08B	161	6-G18
95 46 946	08B	217	6-J02
95 46 946	08B	219	6-J04
95 46 961	09	013	7-A14
95 46 995	08B	155	6-G12
95 47 043	08B	157	6-G14
95 47 050	08B	155	6-G12
95 47 068	08B	155	6-G12
95 47 332	08B	169	6-H02
95 47 332	08B	215	6-I24
95 47 340	08B	025	6-B02
95 47 381	08B	173	6-H06
95 47 589	08B	009	6-A10
95 47 605	08B	009	6-A10
95 47 613	08B	009	6-A10
95 47 639	08B	009	6-A10
95 47 688	08B	163	6-G20
95 47 688	08B	177	6-H10
95 47 688	08B	217	6-J02
95 47 696	08B	209	6-I18
95 47 837	08B	157	6-G14
95 47 852	08B	159	6-G16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D07 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
95 47 860	08B	159	6-G16
95 47 894	08B	155	6-G12
95 47 951	08B	157	6-G14
95 47 977	08B	155	6-G12
95 47 993	08B	137	6-F18
95 47 993	08B	141	6-F22
95 48 058	08B	209	6-I18
95 48 108	08B	191	6-H24
95 48 124	08B	207	6-I16
95 48 157	08B	011	6-A12
95 48 165	08B	011	6-A12
95 48 173	08B	011	6-A12
95 48 355	08B	193	6-I02
95 48 363	09	005	7-A06
95 48 389	08B	151	6-G08
95 50 476	03A	107	2-E12
95 51 953	03A	067	2-C20
95 52 100	03A	077	2-D06
95 52 100	03A	105	2-E10
95 52 100	03A	115	2-E20
95 52 100	03B	013	3-A14
95 52 100	03B	017	3-A18
95 52 100	03B	023	3-A24
95 52 100	03B	041	3-B18
95 52 100	03B	045	3-B22
95 52 100	03B	051	3-C04
95 52 100	03B	113	3-E18
95 52 100	03B	123	3-F04
95 52 100	08C	009	6-K10
95 52 126	03B	113	3-E18
95 52 126	03B	123	3-F04
95 52 126	03B	133	3-F14
95 52 126	03B	143	3-F24
95 52 159	03B	075	3-D04
95 52 167	03B	075	3-D04
95 52 175	03B	075	3-D04
95 52 175	03B	113	3-E18
95 52 175	03B	125	3-F06
95 52 175	03B	135	3-F16
95 52 175	03B	143	3-F24
95 52 183	03B	009	3-A10
95 52 183	03B	037	3-B14
95 52 183	03B	061	3-C14
95 52 183	03B	087	3-D16
95 52 191	03B	009	3-A10
95 52 191	03B	037	3-B14
95 52 191	03B	061	3-C14
95 52 191	03B	087	3-D16
95 52 191	03B	113	3-E18
95 52 191	03B	125	3-F06
95 52 191	03B	135	3-F16
95 52 191	03B	145	3-G02
95 53 512	03A	067	2-C20
95 53 546	03A	193	2-I02
95 55 194	03A	097	2-E02
95 55 913	03A	177	2-H10
95 56 390	03A	193	2-I02
95 56 390	03A	197	2-I06
95 56 390	03A	199	2-I08
95 56 390	03A	203	2-I12
95 56 705	03A	035	2-B12
95 56 705	03A	037	2-B14
95 56 705	03A	039	2-B16
95 56 986	03A	051	2-C04
95 56 986	03A	053	2-C06
95 56 994	03A	049	2-C02
95 56 994	03A	051	2-C04
95 56 994	03A	053	2-C06
95 56 994	03A	055	2-C08
95 58 149	03A	079	2-D08
95 58 149	03A	083	2-D12
95 59 998	03A	099	2-E04
95 60 004	03A	099	2-E04
95 62 752	03A	011	2-A12
95 63 099	03A	201	2-I10
95 63 099	03A	205	2-I14
95 63 099	03A	219	2-J04
95 63 313	03A	193	2-I02
95 63 313	03A	197	2-I06
95 63 313	03A	199	2-I08
95 63 313	03A	203	2-I12
95 63 321	03A	193	2-I02
95 63 321	03A	197	2-I06
95 63 321	03A	199	2-I08
95 63 321	03A	203	2-I12
95 63 339	03A	193	2-I02
95 63 339	03A	199	2-I08
95 63 339	03A	203	2-I12
95 63 560	03A	187	2-H20
95 63 677	03A	069	2-C22
95 63 685	03A	069	2-C22
95 64 139	03A	193	2-I02
95 64 139	03A	197	2-I06
95 64 147	03A	193	2-I02
95 64 154	03A	193	2-I02
95 64 154	03A	197	2-I06
95 64 204	03A	181	2-H14
95 64 238	03A	033	2-B10
95 64 253	03A	069	2-C22
95 64 261	03A	069	2-C22
95 64 295	03A	079	2-D08
95 64 303	03A	079	2-D08
95 64 352	03A	035	2-B12
95 64 352	03A	037	2-B14
95 64 394	03A	093	2-D22
95 64 477	03A	107	2-E12
95 64 519	03A	111	2-E16
95 64 741	03A	111	2-E16
95 64 881	03A	091	2-D20
95 64 980	08B	175	6-H08
95 65 003	08B	169	6-H02
95 65 003	08B	217	6-J02
95 65 011	08B	169	6-H02
95 65 011	08B	217	6-J02
95 65 045	03B	031	3-B08
95 65 045	03B	055	3-C08
95 65 045	03B	081	3-D10
95 65 045	03B	105	3-E10
95 65 136	03A	107	2-E12
95 65 144	03A	123	2-F04
95 65 144	03A	127	2-F08
95 65 144	03A	135	2-F16
95 65 144	03A	137	2-F18
95 65 144	03A	149	2-G06
95 65 144	03A	155	2-G12
95 65 144	03A	163	2-G20
95 65 144	03A	169	2-H02
95 65 326	03A	207	2-I16
95 65 326	03A	211	2-I20
95 65 417	02	049	1-E02
95 65 417	02	051	1-E04
95 65 417	02	053	1-E06
95 65 417	02	055	1-E08
95 65 417	03A	183	2-H16
95 65 417	03A	185	2-H18
95 65 417	08A	005	5-A06
95 65 607	03A	015	2-A16
95 65 839	03A	115	2-E20
95 65 912	03A	075	2-D04
95 65 938	03A	033	2-B10
95 65 946	03A	033	2-B10
95 66 266	03B	055	3-C08
95 66 282	03B	025	3-B02
95 66 282	03B	051	3-C04
95 66 282	03B	079	3-D08
95 66 282	03B	101	3-E06
95 66 332	03A	085	2-D14
95 66 381	03A	097	2-E02
95 66 399	03A	097	2-E02
95 66 399	03A	099	2-E04
95 66 407	03A	099	2-E04
95 66 423	03A	087	2-E02
95 66 423	03A	099	2-E04
95 66 449	03A	097	2-E02
95 66 464	03A	097	2-E02
95 66 472	03A	097	2-E02
95 66 563	03A	107	2-E12
95 66 647	03A	193	2-I02
95 66 647	03A	197	2-I06
95 66 647	03A	199	2-I08
95 66 647	03A	203	2-I12
95 66 662	03A	035	2-B12
95 66 662	03A	037	2-B14
95 66 662	03A	215	2-I24
95 66 662	03A	217	2-J02
95 66 696	03A	073	2-D02
95 66 928	03A	183	2-H16
95 66 993	08B	175	6-H08
95 67 223	03A	067	2-C20
95 67 272	03A	133	2-F14
95 67 272	03A	145	2-G02
95 67 272	03A	161	2-G18
95 67 272	03A	175	2-H08
95 67 405	03A	113	2-E18
95 67 561	03A	133	2-F14
95 67 579	09	013	7-A14

7-D08 Numerical register — Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
95 72 405	08B	195	6-I04
95 72 439	08B	197	6-I06
95 72 447	08B	187	6-H20
95 72 454	08B	187	6-H20
95 72 470	08B	187	6-H20
95 72 728	08B	019	6-A20
95 72 744	08B	023	6-A24
95 72 835	08B	189	6-H22
95 72 876	08B	167	6-G24
95 72 884	08B	167	6-G24
95 72 892	08B	183	6-H16
95 72 900	08B	183	6-H16
95 72 918	08B	183	6-H16
95 72 926	08B	183	6-H16
95 72 975	09	031	6-B08
95 73 296	08B	031	6-B08
95 73 296	08B	043	6-B20
95 73 304	08B	031	6-B08
95 73 304	08B	043	6-B20
95 73 312	08B	031	6-B08
95 73 312	08B	043	6-B20
95 73 320	08B	031	6-B08
95 73 320	08B	043	6-B20
95 73 338	08B	031	6-B08
95 73 338	08B	043	6-B20
95 73 609	08B	189	6-H22
95 73 817	08B	189	6-H22
95 74 302	08A	065	5-C18
95 74 468	08B	191	6-H24
95 74 724	08B	011	6-A12
95 75 135	08B	027	6-B04
95 75 135	08B	035	6-B12
95 75 150	08B	029	6-B06
95 75 150	08B	037	6-B14
95 75 150	08B	053	6-C06
95 75 150	08B	065	6-C18
95 75 168	08B	027	6-B04
95 75 168	08B	035	6-B12
95 75 168	08B	051	6-C04
95 75 168	08B	063	6-C16
95 75 184	08B	027	6-B04
95 75 184	08B	035	6-B12
95 75 200	08B	029	6-B06
95 75 200	08B	037	6-B14
95 75 200	08B	053	6-C06
95 75 200	08B	065	6-C18
95 75 218	08B	027	6-B04
95 75 218	08B	035	6-B12
95 75 218	08B	051	6-C04
95 75 218	08B	063	6-C16
95 75 630	08B	191	6-H24
95 75 846	08B	023	6-A24
95 75 903	03A	069	2-C22
95 75 929	08B	023	6-A24
95 75 937	08B	023	6-A24
95 76 083	08B	031	6-B08
95 76 083	08B	043	6-B20
95 76 091	08B	031	6-B08
95 76 091	08B	043	6-B20
95 76 091	08B	059	6-C12
95 76 091	08B	071	6-C24
95 76 141	08B	031	6-B08
95 76 141	08B	043	6-B20
95 76 158	08B	031	6-B08
95 76 158	08B	043	6-B20
95 76 158	08B	059	6-C12
95 76 158	08B	071	6-C24
95 76 505	08B	193	6-I02
95 76 513	08B	193	6-I02
95 76 570	08B	201	6-I10
95 76 596	08B	203	6-I12
95 76 604	08B	203	6-I12
95 77 677	08B	023	6-A24
95 78 238	08B	207	6-I16
95 78 246	08B	205	6-I14
95 78 386	08A	057	5-C10
95 78 386	08A	059	5-C12
95 78 428	08B	199	6-I08
95 78 436	08B	199	6-I08
95 78 444	08B	199	6-I08
95 78 519	08B	031	6-B08
95 78 618	03A	071	2-C24
95 78 790	08A	057	5-C10
95 78 808	08A	057	5-C10
95 78 816	08A	059	5-C12
95 78 824	08A	059	5-C12
95 78 964	08B	023	6-A24
95 79 244	08B	183	6-H16
95 79 244	08B	189	6-H22
95 79 251	08B	023	6-A24
95 79 293	08B	161	6-G18
95 79 293	08B	173	6-H06
95 79 715	08B	173	6-H06
95 79 764	08B	177	6-H10
95 79 772	08B	177	6-H10
95 79 780	08B	177	6-H10
95 80 275	08B	207	6-I16
95 80 358	08B	189	6-H22
95 80 408	08B	163	6-G20
95 80 432	08B	163	6-G20
95 80 440	08B	163	6-G20
95 80 507	08B	163	6-G20
95 80 515	08B	151	6-G08
95 80 531	08B	151	6-G08
95 80 655	08B	021	6-A22
95 80 663	08B	023	6-A24
95 80 671	08B	023	6-A24
95 80 697	08B	023	6-A24
95 80 705	08B	023	6-A24
95 80 820	08B	135	6-F16
95 80 820	08B	139	6-F20
95 80 820	08B	143	6-F24
95 80 820	08B	147	6-G04
95 80 838	08B	135	6-F16
95 80 838	08B	139	6-F20
95 80 838	08B	143	6-F24
95 80 838	08B	147	6-G04
95 80 846	08B	137	6-F18
95 80 846	08B	141	6-F22
95 80 846	08B	143	6-F24
95 80 846	08B	145	6-G02
95 80 846	08B	149	6-G06
95 80 853	08B	137	6-F18
95 80 861	08B	137	6-F18
95 80 861	08B	141	6-F22
95 80 861	08B	145	6-G02
95 80 861	08B	149	6-G06
95 80 911	08B	135	6-F16
95 80 911	08B	139	6-F20
95 80 911	08B	143	6-F24
95 80 911	08B	147	6-G04
95 80 929	08B	135	6-F16
95 80 929	08B	139	6-F20
95 80 929	08B	143	6-F24
95 80 929	08B	147	6-G04
95 80 960	08B	195	6-I04
95 80 978	08B	195	6-I04
95 80 986	08B	195	6-I04
95 80 994	08B	195	6-I04
95 81 000	08B	197	6-I06
95 81 174	08B	195	6-I04
95 81 182	08B	195	6-I04
95 81 265	08B	203	6-I12
95 81 273	08B	203	6-I12
95 81 281	08B	201	6-I10
95 81 331	08B	203	6-I12
95 81 372	08B	203	6-I12
95 81 422	08B	205	6-I14
95 81 430	08B	205	6-I14
95 81 448	08B	205	6-I14
95 81 893	08B	015	6-A16
95 81 901	08B	015	6-A16
95 82 057	08B	081	6-D10
95 82 057	08B	093	6-D22
95 82 057	08B	105	6-E10
95 82 057	08B	117	6-E22
95 82 099	08B	081	6-D10
95 82 099	08B	091	6-D20
95 82 156	08B	081	6-D10
95 82 156	08B	093	6-D22
95 82 156	08B	105	6-E10
95 82 156	08B	119	6-E24
95 82 164	08B	081	6-D10
95 82 164	08B	091	6-D20
95 82 164	08B	105	6-E10
95 82 164	08B	117	6-E22
95 82 297	08B	081	6-D10
95 82 297	08B	087	6-D16
95 82 297	08B	093	6-D22
95 82 297	08B	099	6-E04
95 82 297	08B	105	6-E10
95 82 297	08B	111	6-E16
95 82 297	08B	119	6-E24
95 82 297	08B	127	6-F08
95 82 305	08B	087	6-D16
95 82 305	08B	093	6-D22
95 82 305	08B	099	6-E04
95 82 305	08B	105	6-E10
95 82 305	08B	111	6-E16
95 82 305	08B	119	6-E24
95 82 313	08B	081	6-D10
95 82 313	08B	087	6-D16
95 82 313	08B	093	6-D22
95 82 313	08B	099	6-E04
95 82 313	08B	105	6-E10
95 82 313	08B	111	6-E16
95 82 313	08B	119	6-E24
95 82 313	08B	127	6-F08
95 82 354	08B	087	6-D16
95 82 354	08B	099	6-E04
95 82 354	08B	111	6-E16
95 82 354	08B	127	6-F08
95 82 362	08B	087	6-D16
95 82 362	08B	097	6-E02
95 82 362	08B	111	6-E16
95 82 362	08B	125	6-F06
95 82 396	08B	087	6-D16
95 82 396	08B	097	6-E02
95 82 453	08B	087	6-D16
95 82 453	08B	099	6-E04
95 82 453	08B	111	6-E16
95 82 453	08B	127	6-F08
95 82 461	08B	087	6-D16
95 82 461	08B	097	6-E02
95 82 461	08B	111	6-E16
95 82 461	08B	125	6-F06
95 82 651	08B	009	6-A10
95 83 170	08B	207	6-I16
95 83 196	08B	207	6-I16
95 83 204	08B	207	6-I16
95 83 576	08B	207	6-I16
95 83 790	08B	193	6-I02
95 83 790	08B	207	6-I16
95 83 960	08B	151	6-G08
95 84 004	08B	151	6-G08
95 84 087	08B	153	6-G10
95 84 103	08B	153	6-G10
95 84 640	08B	179	6-H12
95 84 665	08B	179	6-H12
95 84 715	08B	215	6-I24
95 84 723	08B	215	6-I24
95 84 749	08B	179	6-H12
95 84 749	08B	187	6-H20
95 84 764	08B	183	6-H16
95 84 764	08B	189	6-H22
95 84 772	08B	183	6-H16
95 84 772	08B	189	6-H22
95 84 814	08B	025	6-B02
95 84 871	08B	207	6-I16
95 85 423	08B	177	6-H10
95 85 423	08B	217	6-J02
95 85 431	08B	177	6-H10
95 85 431	08B	217	6-J02
95 85 514	08B	013	6-A14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D09 Numerical register Nummerregister

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 85 522	08B	013	6-A14
95 85 613	08B	159	6-G16
95 85 712	08B	195	6-I04
95 85 738	08B	195	6-I04
95 85 746	08B	195	6-I04
95 85 829	08B	013	6-A14
95 85 985	08B	013	6-A14
95 86 082	08B	167	6-G24
95 86 090	08B	167	6-G24
95 86 108	08B	171	6-H04
95 86 108	08B	217	6-J02
95 86 132	08B	177	6-H10
95 86 157	08B	177	6-H10
95 86 165	08B	177	6-H10
95 86 173	08B	177	6-H10
95 86 181	08B	177	6-H10
95 86 207	08B	177	6-H10
95 86 249	08B	159	6-G16
95 86 371	08B	153	6-G10
95 86 827	08B	209	6-I18
95 86 900	06	011	4-C12
95 86 918	06	011	4-C12
95 86 967	08B	159	6-G16
95 86 975	08B	159	6-G16
95 86 983	08B	159	6-G16
95 87 171	06	011	4-C12
95 87 346	08B	029	6-B06
95 87 346	08B	039	6-B16
95 87 346	08B	055	6-C08
95 87 346	08B	067	6-C20
95 87 361	08B	027	6-B04
95 87 361	08B	035	6-B12
95 87 379	08B	029	6-B06
95 87 379	08B	039	6-B16
95 87 379	08B	055	6-C08
95 87 387	08B	029	6-B06
95 87 387	08B	037	6-B14
95 87 387	08B	053	6-C06
95 87 395	08B	027	6-B04
95 87 395	08B	037	6-B14
95 87 395	08B	051	6-C04
95 87 403	08B	029	6-B06
95 87 403	08B	039	6-B16
95 87 403	08B	055	6-C08
95 87 403	08B	067	6-C20
95 87 411	08B	029	6-B06
95 87 411	08B	039	6-B16
95 87 411	08B	055	6-C08
95 87 411	08B	067	6-C20
95 87 437	08B	027	6-B04
95 87 437	08B	035	6-B12
95 87 445	08B	029	6-B06
95 87 445	08B	039	6-B16
95 87 445	08B	055	6-C08
95 87 452	08B	029	6-B06
95 87 452	08B	037	6-B14
95 87 452	08B	053	6-C06
95 87 460	08B	027	6-B04
95 87 460	08B	037	6-B14
95 87 460	08B	051	6-C04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 87 478	08B	029	6-B06
95 87 478	08B	039	6-B16
95 87 478	08B	055	6-C08
95 87 478	08B	067	6-C20
95 87 486	08B	029	6-B06
95 87 486	08B	039	6-B16
95 87 502	08B	027	6-B04
95 87 502	08B	035	6-B12
95 87 510	08B	029	6-B06
95 87 510	08B	039	6-B16
95 87 528	08B	029	6-B06
95 87 528	08B	037	6-B14
95 87 536	08B	027	6-B04
95 87 536	08B	037	6-B14
95 87 544	08B	029	6-B06
95 87 544	08B	039	6-B16
95 87 569	08B	027	6-B04
95 87 569	08B	035	6-B12
95 87 577	08B	029	6-B06
95 87 577	08B	039	6-B16
95 87 585	08B	029	6-B06
95 87 585	08B	037	6-B14
95 87 593	08B	027	6-B04
95 87 593	08B	037	6-B14
95 87 601	08B	029	6-B06
95 87 601	08B	039	6-B16
95 87 601	08B	055	6-C08
95 87 601	08B	067	6-C20
95 87 627	08B	027	6-B04
95 87 627	08B	035	6-B12
95 87 635	08B	029	6-B06
95 87 635	08B	039	6-B16
95 87 635	08B	055	6-C08
95 87 643	08B	029	6-B06
95 87 643	08B	037	6-B14
95 87 643	08B	053	6-C06
95 87 650	08B	027	6-B04
95 87 650	08B	037	6-B14
95 87 650	08B	051	6-C04
95 87 700	08B	195	6-I04
95 88 534	08B	157	6-G14
95 88 534	08B	217	6-J02
95 88 542	08B	157	6-G14
95 88 542	08B	171	6-H04
95 88 542	08B	217	6-J02
95 88 559	08B	157	6-G14
95 88 559	08B	217	6-J02
95 88 799	08B	027	6-B04
95 88 807	08B	029	6-B06
95 88 815	08B	029	6-B06
95 88 823	08B	027	6-B04
95 88 849	08B	027	6-B04
95 88 856	08B	029	6-B06
95 88 864	08B	029	6-B06
95 88 872	08B	027	6-B04
95 89 045	08B	161	6-G18
95 89 045	08B	217	6-J02
95 89 045	08B	219	6-J04
95 89 193	08B	033	6-B10
95 89 201	08B	033	6-B10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 89 664	08B	033	6-B10
95 89 664	08B	045	6-B22
95 89 664	08B	061	6-C14
95 89 664	08B	073	6-D02
95 89 672	08B	033	6-B10
95 89 672	08B	045	6-B22
95 89 672	08B	061	6-C14
95 89 672	08B	073	6-D02
95 89 680	08B	033	6-B10
95 89 680	08B	045	6-B22
95 89 680	08B	061	6-C14
95 89 680	08B	073	6-D02
95 90 043	08B	033	6-B10
95 90 043	08B	045	6-B22
95 90 043	08B	061	6-C14
95 90 043	08B	073	6-D02
95 90 050	08B	033	6-B10
95 90 050	08B	045	6-B22
95 90 050	08B	061	6-C14
95 90 050	08B	073	6-D02
95 90 068	08B	033	6-B10
95 90 068	08B	045	6-B22
95 90 076	08B	033	6-B10
95 90 076	08B	045	6-B22
95 90 423	08A	111	5-E16
95 90 449	08A	111	5-E16
95 91 108	08A	111	5-E16
95 91 280	08B	021	6-A22
95 91 314	08B	199	6-I08
95 91 405	08B	199	6-I08
95 91 421	08B	199	6-I08
95 91 611	08B	207	6-I16
95 91 637	08B	131	6-F12
95 91 637	08B	207	6-I16
95 91 645	08B	207	6-I16
95 91 660	08A	109	5-E14
95 91 777	08B	029	6-B06
95 91 785	08B	029	6-B06
95 91 793	08B	187	6-H20
95 91 868	08A	109	5-E14
95 91 892	08B	207	6-I16
95 92 098	03A	069	2-C22
95 92 155	08B	173	6-H06
95 92 270	08B	027	6-B04
95 92 288	08B	029	6-B06
95 92 296	08B	029	6-B06
95 92 304	08B	027	6-B04
95 92 361	08B	151	6-G08
95 92 395	08B	167	6-G24
95 92 403	08B	167	6-G24
95 92 411	08B	167	6-G24
95 92 429	08B	167	6-G24
95 92 445	08B	167	6-G24
95 92 452	08B	167	6-G24
95 92 460	08B	167	6-G24
95 92 478	08B	167	6-G24
95 92 692	08B	169	6-H02
95 92 700	08B	169	6-H02
95 92 718	08B	169	6-H02
95 92 726	08B	169	6-H02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 92 791	08B	027	6-B04
95 92 791	08B	035	6-B12
95 92 809	08B	029	6-B06
95 92 809	08B	039	6-B16
95 92 809	08B	055	6-C08
95 92 817	08B	029	6-B06
95 92 817	08B	037	6-B14
95 92 817	08B	053	6-C06
95 92 825	08B	027	6-B04
95 92 825	08B	037	6-B14
95 92 825	08B	051	6-C04
95 92 841	08B	027	6-B04
95 92 841	08B	035	6-B12
95 92 858	08B	029	6-B06
95 92 858	08B	039	6-B16
95 92 858	08B	055	6-C08
95 92 866	08B	029	6-B06
95 92 866	08B	037	6-B14
95 92 866	08B	053	6-C06
95 92 874	08B	027	6-B04
95 92 874	08B	037	6-B14
95 92 874	08B	051	6-C04
95 92 908	08B	015	6-A16
95 92 916	08B	015	6-A16
95 93 161	03A	115	2-E20
95 93 245	08B	157	6-G14
95 93 245	08B	169	6-H02
95 93 245	08B	215	6-I24
95 93 294	08B	151	6-G08
95 93 534	08B	193	6-I02
95 93 542	08B	193	6-I02
95 93 609	08B	151	6-G08
95 93 617	08B	151	6-G08
95 93 682	08B	151	6-G08
95 93 690	08B	151	6-G08
95 93 724	08B	153	6-G10
95 93 732	08B	153	6-G10
95 93 765	08B	151	6-G08
95 93 773	08B	151	6-G08
95 93 948	08B	185	6-H18
95 93 948	08B	189	6-H22
95 93 948	08B	221	6-J06
95 94 508	08B	013	6-A14
95 94 938	08B	023	6-A24
95 94 953	08B	031	6-B08
95 94 961	08B	031	6-B08
96 17 325	08B	161	6-G18
96 17 325	08B	173	6-H06
96 17 333	08B	161	6-G18
96 17 333	08B	173	6-H06
96 17 846	08B	213	6-I22
96 17 853	08B	213	6-I22
96 18 232	08B	169	6-H02
96 18 752	08B	157	6-G14
96 18 752	08B	219	6-J04
96 20 105	08C	011	6-K12
96 20 238	08C	007	6-K08
96 20 238	08C	009	6-K10
96 21 897	08C	005	6-K06
96 22 325	08C	011	6-K12

7-D10 Numerical register Nummerregister

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 22 390	08C	005	6-K06
96 22 432	08C	007	6-K08
96 22 432	08C	009	6-K10
96 22 572	08C	021	6-K22
96 22 572	08C	023	6-K24
96 22 614	08C	007	6-K08
96 22 614	08C	009	6-K10
96 22 655	08C	007	6-K08
96 22 655	08C	009	6-K10
96 22 663	08C	007	6-K08
96 22 663	08C	009	6-K10
96 22 697	08C	007	6-K08
96 22 697	08C	009	6-K10
96 22 812	08C	009	6-K10
96 23 307	08C	021	6-K22
96 23 315	08C	009	6-K10
96 23 398	08C	021	6-K22
96 23 455	08C	007	6-K08
96 23 570	08C	007	6-K08
96 23 737	08C	005	6-K06
96 23 745	08C	005	6-K06
96 23 935	08C	009	6-K10
96 24 032	08C	021	6-K22
96 24 107	08C	021	6-K22
96 24 305	08C	007	6-K08
96 24 305	08C	009	6-K10
96 24 321	08C	007	6-K08
96 24 321	08C	009	6-K10
96 24 347	08C	007	6-K08
96 24 347	08C	009	6-K10
96 24 578	08C	007	6-K08
96 24 578	08C	009	6-K10
96 24 867	08C	021	6-K22
96 24 867	08C	023	6-K24
96 24 925	08C	021	6-K22
96 25 054	08C	021	6-K22
96 25 096	08C	021	6-K22
96 25 112	08C	021	6-K22
96 25 120	08C	007	6-K08
96 25 120	08C	009	6-K10
96 25 138	08C	007	6-K08
96 25 138	08C	009	6-K10
96 25 146	08C	007	6-K08
96 25 245	08C	005	6-K06
96 25 252	08C	005	6-K06
96 25 328	08C	021	6-K22
96 25 336	08C	021	6-K22
96 25 351	08C	005	6-K06
96 25 419	08C	021	6-K22
96 25 468	08C	007	6-K08
96 25 468	08C	009	6-K10
96 25 575	08C	005	6-K06
96 25 583	08C	021	6-K22
96 25 633	03A	119	2-E24
96 25 633	08C	021	6-K22
96 25 641	08A	021	5-A22
96 25 641	08A	023	5-A24
96 25 674	08C	021	6-K22
96 25 823	08C	021	6-K22
96 25 831	08C	007	6-K08

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 25 831	08C	009	6-K10
96 25 955	08C	007	6-K08
96 25 955	08C	009	6-K10
96 25 989	08C	007	6-K08
96 25 989	08C	009	6-K10
96 25 989	08C	021	6-K22
96 26 037	08C	021	6-K22
96 26 300	08C	007	6-K08
96 26 300	08C	009	6-K10
96 26 318	08C	007	6-K08
96 26 318	08C	009	6-K10
96 26 383	08C	005	6-K06
96 26 896	08C	015	6-K16
96 26 953	08C	011	6-K12
96 27 159	08C	021	6-K22
96 27 266	02	137	1-H18
96 27 266	08C	021	6-K22
96 27 266	08C	025	6-L02
96 27 266	08C	035	6-L12
96 27 365	08C	011	6-K12
96 27 373	02	139	1-H20
96 27 373	08C	031	6-L08
96 27 373	08C	033	6-L10
96 27 407	08C	007	6-K08
96 27 407	08C	009	6-K10
96 27 415	08C	007	6-K08
96 27 415	08C	009	6-K10
96 27 498	08C	011	6-K12
96 27 506	08C	011	6-K12
96 27 514	08C	011	6-K12
96 27 522	08C	011	6-K12
96 27 746	08A	021	5-A22
96 27 811	03A	105	2-E10
96 27 837	03A	105	2-E10
96 27 845	03A	105	2-E10
96 28 090	08C	021	6-K22
96 28 124	08A	021	5-A22
96 28 272	08C	007	6-K08
96 28 272	08C	009	6-K10
96 28 413	08C	013	6-K14
96 28 447	08C	013	6-K14
96 28 454	08C	013	6-K14
96 28 462	08C	013	6-K14
96 28 512	08C	013	6-K14
96 28 587	08C	007	6-K08
96 28 587	08C	009	6-K10
96 28 843	08A	029	5-B06
96 28 850	08A	029	5-B06
96 28 868	08A	029	5-B06
96 28 876	08A	029	5-B06
96 28 884	08A	029	5-B06
96 28 967	08C	011	6-K12
96 29 106	03A	105	2-E10
96 29 114	08C	011	6-K12
96 29 122	08C	011	6-K12
96 29 197	08C	021	6-K22
96 29 247	03A	105	2-E10
96 29 262	08C	021	6-K22
96 29 395	03A	105	2-E10
96 29 403	08C	021	6-K22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 29 411	08C	009	6-K10
96 29 429	08C	007	6-K08
96 29 445	08C	015	6-K16
96 29 452	08C	015	6-K16
96 29 478	08C	015	6-K16
96 29 486	08C	015	6-K16
96 29 510	08C	021	6-K22
96 29 528	08C	021	6-K22
96 29 577	08C	021	6-K22
96 29 585	08C	021	6-K22
96 29 593	08C	015	6-K16
96 29 676	08B	205	6-I14
96 29 692	08C	029	6-L06
96 29 718	08C	029	6-L06
96 29 726	08C	029	6-L06
96 29 734	08C	029	6-L06
96 29 767	08C	029	6-L06
96 29 783	08C	029	6-L06
96 29 817	08C	029	6-L06
96 29 825	08C	029	6-L06
96 29 833	08C	029	6-L06
96 29 866	08C	029	6-L06
96 29 940	08C	029	6-L06
96 29 999	08C	029	6-L06
96 30 005	08C	029	6-L06
96 30 021	08A	019	5-A20
96 30 039	08C	007	6-K08
96 30 047	08A	019	5-A20
96 30 070	08C	007	6-K08
96 30 096	08C	007	6-K08
96 30 112	08C	007	6-K08
96 30 138	08C	011	6-K12
96 30 146	08A	031	5-B08
96 30 153	08A	031	5-B08
96 30 187	08A	031	5-B08
96 30 195	08C	005	6-K06
96 30 252	03A	105	2-E10
96 30 286	08C	021	6-K22
96 30 310	08C	021	6-K22
96 30 310	08C	025	6-L02
96 30 310	08C	035	6-L12
96 30 336	08C	011	6-K12
96 30 526	08A	031	5-B08
96 30 567	08C	009	6-K10
96 30 591	08C	005	6-K06
96 30 674	08A	019	5-A20
96 30 690	08A	019	5-A20
96 30 724	08C	011	6-K12
96 30 732	08C	011	6-K12
96 30 740	03A	105	2-E10
96 30 799	08C	007	6-K08
96 30 799	08C	009	6-K10
96 30 971	08C	029	6-L06
96 31 029	08C	029	6-L06
96 31 037	08C	029	6-L06
96 31 045	08C	029	6-L06
96 31 052	08C	029	6-L06
96 31 060	08C	029	6-L06
96 31 235	08C	005	6-K06
96 31 367	08C	021	6-K22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
96 31 367	08C	025	6-L02
96 31 367	08C	035	6-L12
96 31 490	08C	007	6-K08
96 31 490	08C	009	6-K10
96 31 516	08C	029	6-L06
96 31 524	08C	029	6-L06
96 31 532	08C	029	6-L06
96 31 557	08C	029	6-L06
96 31 599	08C	005	6-K06
96 53 502	08A	009	5-A10
96 53 502	08B	193	6-I02
96 53 502	08B	207	6-I16
96 53 718	08B	027	6-B04
96 53 718	08B	035	6-B12
96 53 718	08B	051	6-C04
96 53 718	08B	063	6-C16
96 56 398	08B	081	6-D10
96 56 398	08B	087	6-D16
96 56 398	08B	093	6-D22
96 56 398	08B	099	6-E04
96 56 653	08B	195	6-I04
96 56 661	08B	195	6-I04
96 56 901	03A	097	2-E02
96 56 968	08B	191	6-H24
96 57 123	08B	191	6-H24
96 58 139	08B	079	6-D08
96 58 139	08B	091	6-D20
96 58 139	08B	103	6-E08
96 58 139	08B	115	6-E20
96 58 139	08B	117	6-E22
96 58 139	08B	119	6-E24
96 58 147	08B	079	6-D08
96 58 147	08B	091	6-D20
96 58 147	08B	103	6-E08
96 58 147	08B	115	6-E20
96 58 147	08B	117	6-E22
96 58 147	08B	119	6-E24
96 58 360	08B	085	6-D14
96 58 360	08B	097	6-E02
96 58 360	08B	109	6-E14
96 58 360	08B	123	6-F04
96 58 360	08B	125	6-F06
96 58 360	08B	127	6-F08
96 58 378	08B	085	6-D14
96 58 378	08B	097	6-E02
96 58 378	08B	109	6-E14
96 58 378	08B	123	6-F04
96 58 378	08B	125	6-F06
96 58 378	08B	127	6-F08
96 58 584	08B	159	6-G16
96 58 592	08B	159	6-G16
96 58 600	08B	137	6-F18
96 58 600	08B	141	6-F22
96 58 600	08B	145	6-G02
96 58 618	08B	191	6-H24
96 58 899	08B	131	6-F12
96 58 972	08A	113	5-E18
96 58 980	08A	113	5-E18
96 58 998	08B	131	6-F12
96 59 012	08B	159	6-G16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D11 Numerical register / Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 59 020	08B	159	6-G16
96 59 301	03A	067	2-C20
96 59 434	08B	137	6-F18
96 59 434	08B	141	6-F22
96 59 467	08B	021	6-A22
96 59 764	08B	011	6-A12
96 60 051	08A	157	5-G14
96 60 077	08B	081	6-D10
96 60 077	08B	093	6-D22
96 60 077	08B	107	6-E12
96 60 077	08B	119	6-E24
96 60 143	08B	081	6-D10
96 60 143	08B	087	6-D16
96 60 143	08B	093	6-D22
96 60 143	08B	099	6-E04
96 60 143	08B	107	6-E12
96 60 143	08B	113	6-E18
96 60 143	08B	119	6-E24
96 60 143	08B	127	6-F08
96 60 150	08B	089	6-D18
96 60 150	08B	101	6-E06
96 60 168	08B	089	6-D18
96 60 168	08B	101	6-E06
96 60 176	03A	069	2-C22
96 60 820	08B	087	6-D16
96 60 820	08B	101	6-E06
96 60 820	08B	113	6-E18
96 60 820	08B	127	6-F08
96 60 838	08B	079	6-D08
96 60 838	08B	081	6-D10
96 60 838	08B	091	6-D20
96 60 838	08B	093	6-D22
96 60 838	08B	103	6-E08
96 60 838	08B	105	6-E10
96 60 838	08B	115	6-E20
96 60 838	08B	117	6-E22
96 60 838	08B	119	6-E24
96 60 846	08B	085	6-D14
96 60 846	08B	087	6-D16
96 60 846	08B	097	6-E02
96 60 846	08B	099	6-E04
96 60 846	08B	109	6-E14
96 60 846	08B	111	6-E16
96 60 846	08B	123	6-F04
96 60 846	08B	125	6-F06
96 60 846	08B	127	6-F08
96 60 853	08B	161	6-G18
96 60 861	08B	161	6-G18
96 60 986	08B	079	6-D08
96 60 986	08B	081	6-D10
96 60 986	08B	091	6-D20
96 60 986	08B	093	6-D22
96 60 986	08B	103	6-E08
96 60 986	08B	105	6-E10
96 60 986	08B	115	6-E20
96 60 986	08B	117	6-E22
96 60 986	08B	119	6-E24
96 60 994	08B	085	6-D14
96 60 994	08B	087	6-D16
96 60 994	08B	097	6-E02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 60 994	08B	099	6-E04
96 60 994	08B	109	6-E14
96 60 994	08B	111	6-E16
96 60 994	08B	123	6-F04
96 60 994	08B	125	6-F06
96 60 994	08B	127	6-F08
96 61 018	08B	193	6-I02
96 61 208	08A	109	5-E14
96 61 208	08A	157	5-G14
96 61 216	08A	109	5-E14
96 61 240	08A	109	5-E14
96 61 240	08A	157	5-G14
96 61 257	08A	109	5-E14
96 61 265	08A	109	5-E14
96 61 307	08A	109	5-E14
96 61 307	08A	157	5-G14
96 61 323	08A	109	5-E14
96 61 331	08A	109	5-E14
96 61 364	08A	109	5-E14
96 61 364	08A	157	5-G14
96 61 380	08A	109	5-E14
96 61 448	08A	111	5-E16
96 61 455	08A	111	5-E16
96 61 877	08B	191	6-H24
96 63 006	08B	015	6-A16
96 63 022	08B	009	6-A10
96 63 030	08B	009	6-A10
96 63 048	08B	015	6-A16
96 63 055	08B	015	6-A16
96 63 089	08A	039	5-B16
96 63 097	08A	039	5-B16
96 63 345	08B	135	6-F16
96 63 345	08B	139	6-F20
96 63 345	08B	143	6-F24
96 63 345	08B	147	6-G04
96 63 352	08B	135	6-F16
96 63 352	08B	139	6-F20
96 63 352	08B	143	6-F24
96 63 352	08B	147	6-G04
96 63 402	08B	179	6-H12
96 63 410	08B	179	6-H12
96 63 907	08B	151	6-G08
96 64 129	08B	023	6-A24
96 64 137	08B	021	6-A22
96 64 145	08B	023	6-A24
96 68 120	08B	137	6-F18
96 68 120	08B	139	6-F20
96 68 120	08B	141	6-F22
96 68 153	08A	085	5-D14
96 68 153	08A	089	5-D18
96 68 153	08A	093	5-D22
96 68 153	08A	105	5-E10
96 68 153	08B	131	6-F12
96 68 153	08B	137	6-F18
96 68 153	08B	141	6-F22
96 68 153	08B	143	6-F24
96 68 153	08B	145	6-G02
96 68 153	08B	147	6-G04
96 68 153	08B	149	6-G06
96 68 153	08B	193	6-I02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 70 548	08A	061	5-C14
96 70 548	08A	069	5-C22
96 71 025	08B	181	6-H14
96 71 025	08B	185	6-H18
96 71 025	08B	187	6-H20
96 71 025	08B	215	6-I24
96 71 033	08B	083	6-D12
96 71 033	08B	095	6-D24
96 71 033	08B	107	6-E12
96 71 033	08B	121	6-F02
96 71 355	08B	009	6-A10
96 71 363	08B	009	6-A10
96 71 389	08B	083	6-D12
96 71 389	08B	087	6-D16
96 71 389	08B	095	6-D24
96 71 389	08B	101	6-E06
96 71 389	08B	107	6-E12
96 71 389	08B	113	6-E18
96 71 389	08B	119	6-E24
96 71 389	08B	127	6-F08
96 71 751	08B	157	6-G14
96 71 751	08B	169	6-H02
96 71 751	08B	215	6-I24
96 71 835	08B	161	6-G18
96 71 835	08B	173	6-H06
96 71 918	08B	019	6-A20
96 71 926	08A	113	5-E18
96 71 934	08A	113	5-E18
96 72 254	08B	023	6-A24
96 72 254	08C	011	6-K12
96 72 262	08B	197	6-I06
96 72 569	08B	211	6-I20
96 72 619	08B	179	6-H12
96 72 627	08B	179	6-H12
96 72 635	08B	183	6-H16
96 72 643	08B	183	6-H16
96 72 650	08B	185	6-H18
96 72 650	08B	189	6-H22
96 72 650	08B	221	6-J06
96 72 668	08B	181	6-H14
96 72 668	08B	185	6-H18
96 72 668	08B	215	6-I24
96 72 791	08B	209	6-I18
96 72 908	08B	019	6-A20
96 73 146	08B	159	6-G16
96 73 146	08B	173	6-H06
96 73 179	08B	159	6-G16
96 73 385	08B	211	6-I20
96 73 435	08B	159	6-G16
96 73 435	08B	173	6-H06
96 73 450	08B	159	6-G16
96 73 666	08B	207	[illegible]16
96 73 765	08B	201	6-I10
96 73 773	08B	201	6-I10
96 73 831	08B	179	6-H12
96 73 831	08B	187	6-H20
96 74 896	08B	205	6-I14
96 75 174	08B	187	6-H20
96 75 208	08B	189	6-H22
96 75 216	08B	187	6-H20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 75 570	08B	081	6-D10
96 75 570	08B	093	6-D22
96 75 570	08B	105	6-E10
96 75 570	08B	119	6-E24
96 75 588	08B	081	6-D10
96 75 588	08B	093	6-D22
96 75 588	08B	105	6-E10
96 75 588	08B	119	6-E24
96 75 596	08B	081	6-D10
96 75 596	08B	087	6-D16
96 75 596	08B	093	6-D22
96 75 596	08B	099	6-E04
96 75 596	08B	105	6-E10
96 75 596	08B	111	6-E16
96 75 596	08B	119	6-E24
96 75 596	08B	127	6-F08
96 75 604	08B	081	6-D10
96 75 604	08B	087	6-D16
96 75 604	08B	093	6-D22
96 75 604	08B	099	6-E04
96 75 604	08B	105	6-E10
96 75 604	08B	111	6-E16
96 75 604	08B	119	6-E24
96 75 604	08B	127	6-F08
96 75 612	08B	081	6-D10
96 75 612	08B	087	6-D16
96 75 612	08B	093	6-D22
96 75 612	08B	099	6-E04
96 75 612	08B	105	6-E10
96 75 612	08B	111	6-E16
96 75 612	08B	119	6-E24
96 75 612	08B	127	6-F08
96 75 620	08B	087	6-D16
96 75 620	08B	099	6-E04
96 75 620	08B	111	6-E16
96 75 620	08B	127	6-F08
96 75 638	08B	087	6-D16
96 75 638	08B	099	6-E04
96 75 638	08B	111	6-E16
96 75 638	08B	127	6-F08
96 75 646	08B	137	6-F18
96 75 646	08B	141	6-F22
96 75 646	08B	143	6-F24
96 75 646	08B	145	6-G02
96 75 646	08B	147	6-G04
96 75 646	08B	149	6-G06
96 75 653	08B	137	6-F18
96 75 653	08B	141	6-F22
96 75 653	08B	145	6-G02
96 75 653	08B	149	6-G06
96 75 695	08B	195	6-I04
96 75 703	08B	195	6-I04
96 75 737	08B	195	6-I04
96 75 745	08B	195	6-I04
96 75 752	08B	195	6-I04
96 75 760	08B	195	6-I04
96 75 919	08B	195	6-I04
96 75 927	08B	195	6-I04
96 76 057	08B	019	6-A20
96 76 149	08B	019	6-A20

7-D12 Numerical register / Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 76 263	08B	009	6-A10
96 76 305	08B	009	6-A10
96 76 354	08B	009	6-A10
96 76 891	08B	163	6-G20
96 76 941	08B	163	6-G20
96 76 958	08B	163	6-G20
96 76 990	08B	163	6-G20
96 77 014	08B	161	6-G18
96 77 014	08B	173	6-H06
96 77 048	08B	011	6-A12
96 77 154	08B	019	6-A20
96 77 162	08B	019	6-A20
96 77 493	08B	079	6-D08
96 77 493	08B	091	6-D20
96 77 501	08B	079	6-D08
96 77 501	08B	091	6-D20
96 77 634	08B	085	6-D14
96 77 634	08B	097	6-E02
96 77 642	08B	085	6-D14
96 77 642	08B	097	6-E02
96 77 766	08B	079	6-D08
96 77 766	08B	091	6-D20
96 77 857	08B	079	6-D08
96 77 857	08B	091	6-D20
96 77 857	08B	103	6-E08
96 77 857	08B	117	6-E22
96 77 865	08B	079	6-D08
96 77 865	08B	091	6-D20
96 77 865	08B	103	6-E08
96 77 865	08B	117	6-E22
96 78 020	08B	085	6-D14
96 78 020	08B	097	6-E02
96 78 079	08B	085	6-D14
96 78 079	08B	097	6-E02
96 78 079	08B	109	6-E14
96 78 079	08B	125	6-F06
96 78 087	08B	085	6-D14
96 78 087	08B	097	6-E02
96 78 087	08B	109	6-E14
96 78 087	08B	125	6-F06
96 78 285	08B	019	6-A20
96 78 434	08B	159	6-G16
96 78 442	08B	009	6-A10
96 78 533	08B	009	6-A10
96 78 541	08B	011	6-A12
96 78 608	08A	111	5-E16
96 78 616	08A	111	5-E16
96 78 731	08B	019	6-A20
96 78 749	08A	111	5-E16
96 78 756	08A	111	5-E16
96 78 764	08A	111	5-E16
96 78 772	08A	111	5-E16
96 78 780	08A	111	5-E16
96 78 798	08A	111	5-E16
96 78 814	08A	111	5-E16
96 78 822	08A	111	5-E16
96 78 996	08B	089	6-D18
96 78 996	08B	101	6-E06
96 78 996	08B	113	6-E18
96 78 996	08B	127	6-F08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 79 937	08B	009	6-A10
96 79 986	08B	015	6-A16
96 79 994	08B	015	6-A16
96 88 011	08B	027	6-B04
96 88 037	08B	029	6-B06
96 88 045	08B	027	6-B04
96 90 264	08B	131	6-F12
96 90 330	08B	151	6-G08
96 90 348	08B	151	6-G08
96 90 397	08B	151	6-G08
96 90 405	08B	151	6-G08
96 90 603	08B	135	6-F16
96 90 603	08B	139	6-F20
96 90 629	08B	135	6-F16
96 90 629	08B	139	6-F20
96 90 629	08B	143	6-F24
96 90 629	08B	147	6-G04
96 90 637	08B	135	6-F16
96 90 637	08B	139	6-F20
96 90 637	08B	143	6-F24
96 90 637	08B	147	6-G04
96 90 652	08B	135	6-F16
96 90 652	08B	139	6-F20
96 90 678	08B	135	6-F16
96 90 678	08B	139	6-F20
96 90 678	08B	143	6-F24
96 90 678	08B	147	6-G04
96 90 686	08B	135	6-F16
96 90 686	08B	139	6-F20
96 90 686	08B	143	6-F24
96 90 686	08B	147	6-G04
96 90 702	08B	135	6-F16
96 90 702	08B	139	6-F20
96 90 728	08B	135	6-F16
96 90 728	08B	139	6-F20
96 90 728	08B	143	6-F24
96 90 728	08B	147	6-G04
96 90 736	08B	135	6-F16
96 90 736	08B	139	6-F20
96 90 736	08B	143	6-F24
96 90 736	08B	147	6-G04
96 90 751	08B	135	6-F16
96 90 751	08B	139	6-F20
96 90 777	08B	135	6-F16
96 90 777	08B	139	6-F20
96 90 777	08B	143	6-F24
96 90 777	08B	147	6-G04
96 90 785	08B	135	6-F16
96 90 785	08B	139	6-F20
96 90 785	08B	143	6-F24
96 90 785	08B	147	6-G04
96 90 926	08B	137	6-F18
96 90 959	08B	201	6-I10
96 90 967	08B	201	6-I10
96 90 983	08B	201	6-I10
96 91 007	08B	203	6-I12
96 91 114	08B	203	6-I12
96 91 122	08B	203	6-I12
96 91 189	08B	009	6-A10
96 91 197	08B	009	6-A10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 91 254	08B	153	6-G10
96 91 262	08B	153	6-G10
96 91 320	08B	189	6-H22
96 92 724	08B	205	6-I14
96 92 781	08B	137	6-F18
96 92 807	08B	137	6-F18
96 92 815	08B	211	6-I20
96 92 849	03A	113	2-E18
96 92 906	08B	215	6-I24
96 93 094	08B	179	6-H12
96 93 094	08B	187	6-H20
96 93 094	08B	215	6-I24
96 93 177	08B	189	6-H22
96 93 961	08B	205	6-I14
96 93 979	08B	205	6-I14
96 94 001	08B	205	6-I14
96 94 019	08B	205	6-I14
96 94 027	08B	205	6-I14
96 94 035	08B	205	6-I14
96 94 308	08B	205	6-I14
96 94 324	08B	205	6-I14
96 94 332	08B	205	6-I14
96 94 472	08B	019	6-A20
96 94 670	08B	081	6-D10
96 94 670	08B	093	6-D22
96 94 670	08B	107	6-E12
96 94 688	08B	081	6-D10
96 94 688	08B	093	6-D22
96 94 688	08B	107	6-E12
96 94 696	08A	111	5-E16
96 94 704	08A	111	5-E16
96 94 704	08A	157	5-G14
96 94 712	08A	113	5-E18
96 94 720	08A	113	5-E18
96 94 738	08B	087	6-D16
96 94 738	08B	099	6-E04
96 94 738	08B	113	6-E18
96 94 746	08B	087	6-D16
96 94 746	08B	099	6-E04
96 94 746	08B	113	6-E18
96 94 951	08B	211	6-I20
96 94 969	08B	215	6-I24
96 95 081	08B	079	6-D08
96 95 081	08B	081	6-D10
96 95 081	08B	085	6-D14
96 95 081	08B	087	6-D16
96 95 081	08B	091	6-D20
96 95 081	08B	093	6-D22
96 95 081	08B	097	6-E02
96 95 081	08B	099	6-E04
96 95 081	08B	103	6-E08
96 95 081	08B	105	6-E10
96 95 081	08B	109	6-E14
96 95 081	08B	111	6-E16
96 95 081	08B	115	6-E20
96 95 081	08B	117	6-E22
96 95 081	08B	119	6-E24
96 95 081	08B	123	6-F04
96 95 081	08B	125	6-F06
96 95 081	08B	127	6-F08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 95 081	08B	205	6-I14
96 95 214	08B	029	6-B06
96 95 248	08B	177	6-H10
96 95 305	08B	177	6-H10
96 95 313	08B	177	6-H10
96 95 321	08B	177	6-H10
96 95 354	08B	177	6-H10
96 95 768	08B	173	6-H06
96 95 909	08B	169	6-H02
96 95 917	08B	169	6-H02
96 96 030	08B	179	6-H12
96 96 048	08B	179	6-H12
96 96 600	08B	161	6-G18
96 96 600	08B	173	6-H06
96 96 618	08B	161	6-G18
96 96 618	08B	173	6-H06
96 96 626	03A	103	2-E08
96 96 642	08B	183	6-H16
96 96 659	08B	183	6-H16
96 96 667	08B	179	6-H12
96 96 675	08B	179	6-H12
96 96 691	08B	183	6-H16
96 96 691	08B	189	6-H22
96 96 758	08B	179	6-H12
96 96 766	08B	179	6-H12
96 97 244	08B	029	6-B06
96 97 244	08B	037	6-B14
96 97 244	08B	053	6-C06
96 97 244	08B	065	6-C18
96 97 269	08B	027	6-B04
96 97 269	08B	035	6-B12
96 97 285	08B	029	6-B06
96 97 285	08B	037	6-B14
96 97 285	08B	053	6-C06
96 97 285	08B	065	6-C18
96 97 293	08B	027	6-B04
96 97 293	08B	035	6-B12
96 97 293	08B	051	6-C04
96 97 293	08B	063	6-C16
96 97 319	08B	027	6-B04
96 97 319	08B	035	6-B12
96 97 335	08B	029	6-B06
96 97 335	08B	037	6-B14
96 97 335	08B	053	6-C06
96 97 335	08B	065	6-C18
96 97 343	08B	027	6-B04
96 97 343	08B	035	6-B12
96 97 343	08B	051	6-C04
96 97 343	08B	063	6-C16
96 97 368	08B	027	6-B04
96 97 368	08B	035	6-B12
96 97 384	08B	029	6-B06
96 97 384	08B	037	6-B14
96 97 392	08B	027	6-B04
96 97 392	08B	035	6-B12
96 97 418	08B	027	6-B04
96 97 418	08B	035	6-B12
96 97 434	08B	029	6-B06
96 97 434	08B	037	6-B14
96 97 442	08B	027	6-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

7-D13 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 97 442	08B	035	6-B12
96 97 459	08B	179	6-H12
96 97 525	08B	159	6-G16
96 97 525	08B	173	6-H06
96 97 574	08B	195	6-I04
96 97 582	08B	195	6-I04
96 97 616	08B	195	6-I04
96 97 624	08B	195	6-I04
96 97 939	08B	157	6-G14
96 97 939	08B	169	6-H02
96 97 939	08B	215	6-I24
96 98 044	08A	147	5-G04
96 98 051	08A	147	5-G04
96 98 069	08A	147	5-G04
96 98 077	08A	077	5-D06
96 98 093	08A	147	5-G04
96 98 101	08A	147	5-G04
96 98 168	08A	143	5-F24
96 98 176	08A	143	5-F24
96 98 184	08A	145	5-G02
96 98 309	08B	013	6-A14
96 98 309	08B	221	6-J06
96 98 341	08A	143	5-F24
96 98 358	08A	143	5-F24
96 98 416	08A	123	5-F04
96 98 416	08A	159	5-G16
96 98 424	08A	123	5-F04
96 98 424	08A	159	5-G16
96 98 432	08A	123	5-F04
96 98 432	08A	159	5-G16
96 98 440	08A	123	5-F04
96 98 440	08A	159	5-G16
96 98 457	08A	123	5-F04
96 98 457	08A	159	5-G16
96 98 465	08A	147	5-G04
96 98 481	08A	143	5-F24
96 98 499	08A	143	5-F24
96 98 507	08A	145	5-G02
96 98 515	08A	041	5-B18
96 98 515	08A	151	5-G08
96 98 523	08A	041	5-B18
96 98 523	08A	151	5-G08
96 98 853	08A	143	5-F24
96 98 861	08A	143	5-F24
96 98 879	08A	145	5-G02
96 98 887	08B	155	6-G12
96 98 895	08B	155	6-G12
96 98 903	08B	155	6-G12
96 98 911	08B	155	6-G12
96 98 929	08B	155	6-G12
96 98 937	08B	155	6-G12
96 98 945	08B	155	6-G12
96 98 952	08B	155	6-G12
96 98 960	08B	155	6-G12
96 98 978	08B	155	6-G12
96 98 986	08B	155	6-G12
96 98 994	08B	155	6-G12
96 99 000	08B	189	6-H22
96 99 026	08B	189	6-H22
96 99 034	08B	183	6-H16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 99 042	08B	183	6-H16
96 99 059	08B	183	6-H16
96 99 067	08B	183	6-H16
96 99 075	08B	183	6-H16
96 99 083	08B	183	6-H16
96 99 091	08B	187	6-H20
96 99 117	08B	187	6-H20
96 99 125	08B	179	6-H12
96 99 133	08B	179	6-H12
96 99 141	08B	179	6-H12
96 99 158	08B	179	6-H12
96 99 166	08B	179	6-H12
96 99 174	08B	179	6-H12
96 99 182	08B	185	6-H18
96 99 190	08B	185	6-H18
96 99 208	08B	189	6-H22
96 99 216	08B	189	6-H22
96 99 281	08B	167	6-G24
96 99 299	08B	167	6-G24
96 99 307	08B	167	6-G24
96 99 315	08B	167	6-G24
97 14 817	08B	011	6-A12
97 21 499	08B	179	6-H12
97 21 499	08B	183	6-H16
97 21 499	08B	187	6-H20
97 21 499	08B	189	6-H22
97 21 572	08B	215	6-I24
97 21 598	08B	183	6-H16
97 21 598	08B	189	6-H22
97 33 338	08B	193	6-I02
97 40 663	08B	217	6-J02
97 46 264	08A	145	5-G02
97 46 314	08A	149	5-G06
97 46 389	08A	075	5-D04
97 46 397	08A	075	5-D04
97 46 405	08A	075	5-D04
97 46 439	08A	075	5-D04
97 46 454	08A	075	5-D04
97 46 603	08A	077	5-D06
97 46 652	08A	149	5-G06
97 46 736	08B	181	6-H14
97 46 736	08B	185	6-H18
97 46 736	08B	187	6-H20
97 46 736	08B	189	6-H22
97 46 736	08B	221	6-J06
97 46 835	08A	149	5-G06
97 46 850	08A	149	5-G06
97 46 884	08A	149	5-G06
97 46 892	08A	149	5-G06
97 46 900	08A	149	5-G06
97 46 926	08A	149	5-G06
97 46 934	08A	149	5-G06
97 46 959	08A	149	5-G06
97 46 967	08A	149	5-G06
97 46 975	08A	147	5-G04
97 46 975	08A	149	5-G06
97 50 753	08B	151	6-G08
97 51 074	08B	015	6-A16
97 51 231	08B	187	6-H20
97 51 298	08B	189	6-H22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 51 314	08B	183	6-H16
97 51 314	08B	189	6-H22
97 51 322	08B	189	6-H22
97 51 579	08B	183	6-H16
97 51 587	08B	183	6-H16
97 52 007	08B	179	6-H12
97 52 239	08B	179	6-H12
97 52 379	08B	187	6-H20
97 52 395	08B	187	6-H20
97 53 724	08B	199	6-I08
97 54 755	08A	057	5-C10
97 54 755	08A	059	5-C12
97 54 763	08A	057	5-C10
97 54 763	08A	059	5-C12
97 54 839	08B	131	6-F12
97 54 847	08B	191	6-H24
97 55 117	08B	009	6-A10
97 55 125	08B	009	6-A10
97 55 216	08B	011	6-A12
97 55 257	08B	013	6-A14
97 55 935	08B	183	6-H16
97 56 776	08B	153	6-G10
97 56 784	08B	153	6-G10
97 56 974	08B	151	6-G08
97 57 675	08B	021	6-A22
97 57 691	08B	021	6-A22
97 57 709	08B	021	6-A22
97 57 733	08B	021	6-A22
97 57 741	08B	021	6-A22
97 58 186	08A	057	5-C10
97 58 186	08A	059	5-C12
97 58 715	08B	161	6-G18
97 58 715	08B	173	6-H06
97 58 947	08B	159	6-G16
97 59 069	08B	159	6-G16
97 59 069	08B	173	6-H06
97 59 077	08B	159	6-G16
97 59 077	08B	173	6-H06
97 59 671	08A	051	5-C04
97 59 671	08A	055	5-C08
97 59 846	08B	005	6-A06
97 59 861	08B	013	6-A14
97 60 372	08B	011	6-A12
97 60 380	08B	011	6-A12
97 60 497	08B	019	6-A20
97 60 596	08B	015	6-A16
97 60 695	08B	015	6-A16
97 61 495	08B	215	6-I24
97 61 552	08B	011	6-A12
97 61 867	08B	187	6-H20
97 61 941	08B	009	6-A10
97 61 974	08B	185	6-H18
97 61 974	08B	215	6-I24
97 62 048	08A	057	5-C10
97 62 048	08A	059	5-C12
97 63 228	08B	015	6-A16
97 63 442	08B	023	6-A24
97 63 624	08B	161	6-G18
97 63 624	08B	173	6-H06
97 63 624	08B	217	6-J02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 63 632	08B	161	6-G18
97 63 632	08B	173	6-H06
97 63 632	08B	217	6-J02
97 64 002	08B	019	6-A20
97 64 044	05	029	4-B06
97 64 200	08B	015	6-A16
97 64 457	08B	211	6-I20
97 64 762	08B	011	6-A12
97 64 853	08B	191	6-H24
97 65 181	08B	197	6-I06
97 65 272	08B	185	6-H18
97 65 272	08B	215	6-I24
97 65 553	03A	069	2-C22
97 65 595	03A	069	2-C22
97 65 611	08B	153	6-G10
97 66 114	03A	069	2-C22
97 67 179	08B	011	6-A12
97 67 294	08B	009	6-A10
97 67 302	08B	009	6-A10
97 67 518	08B	161	6-G18
97 67 526	08B	009	6-A10
97 67 534	08B	009	6-A10
97 67 559	08A	059	5-C12
97 67 559	08A	157	5-G14
97 67 567	08B	013	6-A14
97 67 575	08B	013	6-A14
97 67 641	08B	197	6-I06
97 67 781	08B	191	6-H24
97 67 799	08B	191	6-H24
97 67 955	03A	059	2-C12
97 67 963	03A	059	2-C12
97 67 971	08B	191	6-H24
97 69 100	08A	057	5-C10
97 69 118	08A	057	5-C10
97 69 126	08A	059	5-C12
97 69 134	08A	059	5-C12
97 69 183	08B	013	6-A14
97 69 209	08B	157	6-G14
97 69 209	08B	169	6-H02
97 69 209	08B	215	6-I24
97 69 217	08B	157	6-G14
97 69 217	08B	169	6-H02
97 69 217	08B	189	6-H22
97 69 217	08B	215	6-I24
97 69 225	08B	157	6-G14
97 69 225	08B	169	6-H02
97 69 225	08B	215	6-I24
97 70 561	08B	199	6-I08
97 70 595	08B	199	6-I08
97 70 603	08B	199	6-I08
97 70 611	08B	199	6-I08
97 70 629	08B	199	6-I08
97 70 637	08B	199	6-I08
97 70 645	08B	199	6-I08
97 70 918	08B	161	6-G18
97 70 918	08B	173	6-H06
97 70 926	08B	161	6-G18
97 70 926	08B	173	6-H06
97 70 934	08B	161	6-G18
97 70 934	08B	173	6-H06

7-D14 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 70 942	08B	161	6-G18
97 70 942	08B	173	6-H06
97 71 189	08B	153	6-G10
97 71 205	08B	159	6-G16
97 71 288	08B	189	6-H22
97 71 296	08B	179	6-H12
97 71 320	08B	133	6-F14
97 71 320	08B	137	6-F18
97 71 320	08B	139	6-F20
97 71 320	08B	143	6-F24
97 71 320	08B	147	6-G04
97 71 320	08B	191	6-H24
97 71 320	08C	011	6-K12
97 71 965	08B	153	6-G10
97 71 973	08B	153	6-G10
97 72 468	08B	021	6-A22
97 72 476	08B	021	6-A22
97 72 484	08B	021	6-A22
97 74 175	08B	179	6-H12
97 74 183	08B	179	6-H12
97 74 217	08B	191	6-H24
97 74 282	08B	191	6-H24
97 74 290	08B	191	6-H24
97 74 456	08A	065	5-C18
97 74 456	08A	069	5-C22
97 75 180	08B	027	6-B04
97 75 180	08B	035	6-B12
97 75 230	08B	191	6-H24
97 75 230	08B	193	6-I02
97 75 453	08B	027	6-B04
97 75 552	08B	163	6-G20
97 75 784	08B	021	6-A22
97 75 792	08B	021	6-A22
97 75 800	08B	021	6-A22
97 75 818	08B	021	6-A22
97 75 842	08B	021	6-A22
97 75 883	08B	021	6-A22
97 75 941	08B	019	6-A20
97 76 006	08B	023	6-A24
97 76 006	08B	221	6-J06
97 76 105	08A	057	5-C10
97 76 105	08A	059	5-C12
97 76 121	08A	057	5-C10
97 76 121	08A	059	5-C12
97 76 139	08A	057	5-C10
97 76 139	08A	059	5-C12
97 76 188	08A	057	5-C10
97 76 188	08A	059	5-C12
97 76 402	08B	081	6-D10
97 76 402	08B	093	6-D22
97 76 410	08B	081	6-D10
97 76 410	08B	093	6-D22
97 76 477	08B	081	6-D10
97 76 477	08B	087	6-D16
97 76 477	08B	093	6-D22
97 76 477	08B	099	6-E04
97 76 519	08B	081	6-D10
97 76 519	08B	087	6-D16
97 76 519	08B	093	6-D22
97 76 519	08B	099	6-E04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 76 584	08A	111	5-E16
97 76 956	08B	019	6-A20
97 76 964	08B	019	6-A20
97 77 160	08B	081	6-D10
97 77 160	08B	087	6-D16
97 77 160	08B	093	6-D22
97 77 160	08B	099	6-E04
97 77 327	08B	159	6-G16
97 77 681	03A	059	2-C12
97 77 749	08B	191	6-H24
97 78 218	08B	011	6-A12
97 78 895	08B	161	6-G18
97 78 895	08B	173	6-H06
97 78 911	08B	015	6-A16
97 78 929	08B	015	6-A16
97 78 952	08A	049	5-C02
97 78 952	08A	053	5-C06
97 78 952	08A	085	5-D14
97 78 952	08A	089	5-D18
97 78 952	08A	093	5-D22
97 78 952	08A	105	5-E10
97 78 952	08B	181	6-H14
97 78 952	08B	187	6-H20
97 78 952	08B	215	6-I24
97 79 166	08B	087	6-D16
97 79 166	08B	099	6-E04
97 79 174	08B	087	6-D16
97 79 174	08B	099	6-E04
97 79 844	08B	087	6-D16
97 79 844	08B	099	6-E04
97 79 844	08B	113	6-E18
97 79 844	08B	127	6-F08
97 80 156	08B	081	6-D10
97 80 156	08B	087	6-D16
97 80 156	08B	093	6-D22
97 80 156	08B	099	6-E04
97 80 156	08B	105	6-E10
97 80 156	08B	111	6-E16
97 80 156	08B	119	6-E24
97 80 156	08B	127	6-F08
97 80 909	08B	163	6-G20
97 81 162	08B	161	6-G18
97 81 162	08B	177	6-H10
97 81 162	08B	217	6-J02
97 81 204	08B	161	6-G18
97 81 204	08B	217	6-J02
97 81 337	08B	185	6-H18
97 81 337	08B	189	6-H22
97 81 337	08B	221	6-J06
97 81 469	08B	179	6-H12
97 81 469	08B	183	6-H16
97 81 469	08B	187	6-H20
97 81 469	08B	189	6-H22
97 81 501	08B	015	6-A16
97 81 576	08B	179	6-H12
97 81 592	08B	157	6-G14
97 81 592	08B	169	6-H02
97 81 592	08B	215	6-I24
97 82 129	08B	185	6-H18
97 82 129	08B	189	6-H22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 82 210	08B	161	6-G18
97 82 210	08B	177	6-H10
97 82 210	08B	217	6-J02
97 82 251	08B	013	6-A14
97 82 293	08B	199	6-I08
97 82 343	08B	013	6-A14
97 82 558	08B	157	6-G14
97 82 566	08A	057	5-C10
97 82 566	08A	059	5-C12
97 82 632	08B	163	6-G20
97 83 002	08B	203	6-I12
97 83 010	08B	203	6-I12
97 83 531	08B	197	6-I06
97 84 604	08B	179	6-H12
97 85 015	08B	161	6-G18
97 85 015	08B	173	6-H06
97 85 015	08B	217	6-J02
97 85 015	08B	219	6-J04
97 85 031	08B	151	6-G08
97 86 146	08B	019	6-A20
97 86 997	08B	131	6-F12
97 87 516	08B	179	6-H12
97 87 532	08B	181	6-H14
97 87 532	08B	187	6-H20
97 87 532	08B	215	6-I24
97 88 563	08B	019	6-A20
97 88 571	08B	019	6-A20
97 88 910	08B	183	6-H16
97 88 910	08B	189	6-H22
97 88 928	08B	183	6-H16
97 88 928	08B	189	6-H22
97 89 090	08B	185	6-H18
97 89 090	08B	215	6-I24
97 89 751	08B	179	6-H12
97 89 769	08B	185	6-H18
97 89 769	08B	215	6-I24
97 89 991	08B	015	6-A16
97 90 007	08B	015	6-A16
97 90 981	08B	191	6-H24
97 91 070	08B	211	6-I20
97 91 971	08B	185	6-H18
97 91 971	08B	215	6-I24
97 92 391	08B	163	6-G20
97 92 391	08B	177	6-H10
97 92 391	08B	217	6-J02
97 94 132	06	011	4-C12
97 94 132	08B	211	6-I20
97 94 264	08B	193	6-I02
97 94 504	08B	197	6-I06
97 94 520	08B	203	6-I12
97 94 611	08B	021	6-A22
97 94 686	08B	087	6-D16
97 94 686	08B	099	6-E04
97 94 686	08B	113	6-E18
97 94 686	08B	127	6-F08
97 95 006	08B	163	6-G20
97 95 212	08B	179	6-H12
97 95 220	08B	179	6-H12
97 95 709	08B	153	6-G10
97 95 717	08B	191	6-H24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 95 808	08B	131	6-F12
97 95 816	08B	183	6-H16
97 95 832	08B	215	6-I24
97 95 857	08B	019	6-A20
97 96 327	08B	203	6-I12
97 96 616	08B	081	6-D10
97 96 616	08B	093	6-D22
97 96 616	08B	107	6-E12
97 96 616	08B	119	6-E24
97 96 723	08B	183	6-H16
97 96 848	08B	163	6-G20
97 96 848	08B	177	6-H10
97 96 848	08B	217	6-J02
97 96 939	08B	081	6-D10
97 96 939	08B	093	6-D22
97 96 939	08B	107	6-E12
97 96 939	08B	119	6-E24
97 97 044	08A	109	5-E14
97 97 051	08A	109	5-E14
97 97 051	08A	111	5-E16
97 97 069	08A	109	5-E14
97 97 077	08A	109	5-E14
97 97 077	08A	111	5-E16
97 97 085	08B	205	6-I14
97 97 093	08A	109	5-E14
97 97 101	08A	109	5-E14
97 97 119	08A	111	5-E16
97 97 200	08B	081	6-D10
97 97 200	08B	087	6-D16
97 97 200	08B	095	6-D24
97 97 200	08B	101	6-E06
97 97 200	08B	107	6-E12
97 97 200	08B	113	6-E18
97 97 200	08B	119	6-E24
97 97 200	08B	127	6-F08
97 98 208	08B	197	6-I06
97 98 216	08B	197	6-I06
97 98 281	08B	019	6-A20
97 99 354	03A	071	2-C24
97 99 628	08B	203	6-I12
97 99 636	08B	203	6-I12
97 99 776	08B	203	6-I12
97 99 875	08B	081	6-D10
97 99 875	08B	087	6-D16
97 99 875	08B	093	6-D22
97 99 875	08B	099	6-E04
97 99 875	08B	105	6-E10
97 99 875	08B	111	6-E16
97 99 875	08B	119	6-E24
97 99 875	08B	127	6-F08
98 28 641	08B	183	6-H16
98 28 641	08B	189	6-H22
98 28 658	08B	181	6-H14
98 28 658	08B	183	6-H16
98 28 658	08B	187	6-H20
98 28 658	08B	189	6-H22
98 33 518	08A	111	5-E16
98 33 559	08A	111	5-E16
98 33 575	08A	111	5-E16
98 33 591	08A	111	5-E16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
98 33 617	08A	111	5-E16
98 35 737	08A	051	5-C04
98 35 737	08A	055	5-C06
98 35 737	08B	177	6-H10
98 37 246	08A	111	5-E16
98 49 498	08B	189	6-H22
98 49 498	08B	221	6-J06
98 49 514	02	139	1-H20
98 49 514	02	141	1-H22
98 49 514	08A	105	5-E10
98 49 514	08B	135	6-F16
98 49 514	08B	139	6-F20
98 49 514	08B	143	6-F24
98 49 514	08B	147	6-G04
98 49 514	08B	205	6-I14
98 51 619	08B	161	6-G18
98 51 619	08B	217	6-J02
98 51 619	08B	219	6-J04
98 64 000	08B	217	6-J02
98 64 349	08B	161	6-G18
98 64 349	08B	173	6-H06
98 67 821	08B	137	6-F18
98 67 821	08B	141	6-F22
98 90 104	08B	081	6-D10
98 90 104	08B	093	6-D22
98 90 104	08B	105	6-E10
98 90 104	08B	119	6-E24
98 90 112	08B	081	6-D10
98 90 112	08B	093	6-D22
98 90 112	08B	105	6-E10
98 90 112	08B	119	6-E24
98 90 146	08B	081	6-D10
98 90 146	08B	087	6-D16
98 90 146	08B	093	6-D22
98 90 146	08B	099	6-E04
98 90 146	08B	105	6-E10
98 90 146	08B	111	6-E16
98 90 146	08B	119	6-E24
98 90 146	08B	127	6-F08
98 90 153	08B	081	6-D10
98 90 153	08B	087	6-D16
98 90 153	08B	093	6-D22
98 90 153	08B	099	6-E04
98 90 153	08B	105	6-E10
98 90 153	08B	111	6-E16
98 90 153	08B	119	6-E24
98 90 153	08B	127	6-F08
98 90 674	08B	211	6-I20
98 90 682	08B	031	6-B08
98 90 682	08B	043	6-B20
98 90 682	08B	059	6-C12
98 90 682	08B	071	6-C24
98 90 690	08B	031	6-B08
98 90 690	08B	043	6-B20
98 90 690	08B	059	6-C12
98 90 690	08B	071	6-C24
98 90 708	08B	031	6-B08
98 90 708	08B	043	6-B20
98 90 716	08B	031	6-B08
98 90 716	08B	043	6-B20
98 90 724	08B	031	6-B08
98 90 724	08B	043	6-B20
98 90 724	08B	059	6-C12
98 90 724	08B	071	6-C24
98 92 399	08B	209	6-I18
98 92 654	08B	163	6-G20
98 92 720	08B	163	6-G20
98 92 738	08B	163	6-G20
98 93 009	08B	163	6-G20
98 93 017	08B	163	6-G20
98 93 033	08B	163	6-G20
98 94 973	08B	163	6-G20
98 95 137	08B	027	6-B04
98 95 699	08B	079	6-D08
98 95 699	08B	091	6-D20
98 95 699	08B	093	6-D22
98 95 699	08B	103	6-E08
98 95 699	08B	105	6-E10
98 95 699	08B	115	6-E20
98 95 699	08B	117	6-E22
98 95 699	08B	119	6-E24
98 95 863	08B	087	6-D16
98 95 863	08B	099	6-E04
98 95 863	08B	111	6-E16
98 95 863	08B	127	6-F08
98 95 871	08B	087	6-D16
98 95 871	08B	099	6-E04
98 95 871	08B	111	6-E16
98 95 871	08B	127	6-F08
98 95 970	08B	085	6-D14
98 95 970	08B	097	6-E02
98 95 970	08B	099	6-E04
98 95 970	08B	109	6-E14
98 95 970	08B	111	6-E16
98 95 970	08B	123	6-F04
98 95 970	08B	125	6-F06
98 95 970	08B	127	6-F08
98 96 234	08B	019	6-A20
98 96 994	08B	013	6-A14
98 97 901	08B	137	6-F18
98 97 901	08B	141	6-F22
98 97 901	08B	145	6-G02
98 97 901	08B	149	6-G06
98 97 919	08B	137	6-F18
98 97 919	08B	141	6-F22
98 97 919	08B	143	6-F24
98 97 919	08B	149	6-G06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-H02
5	Brakes	4-A02
6	Front assembly, Steering	4-C02
7	Suspension, Wheels	4-E02
8A	Body, external	5-A02
8B	Body, internal	6-A02
8C	Body, heating and ventilation	6-K02
9	Tools, Labels	7-A02
10	Numerical register	7-B02