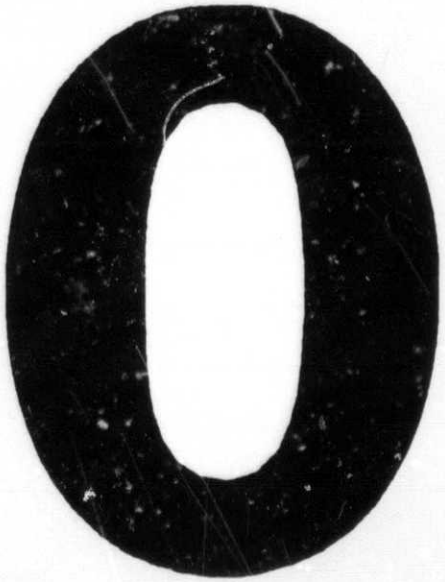


General
Allmänt
Generalidades

SAAB 9000

M 1994-

Parts catalogue
Reservdelskatalog
Catalogo de piezas de recambio

Art. No. 170381

© Saab Automobile AB 1994

CAC94 GB/SE
Jan. 96

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

0	General Allmänt Generalidades
2	Engine Motor Motor
3 A B	Electrical system, instruments Elektriskt system, instrument Sistema elétrico, instrumentos
4	Transmission Kraftöverföring Transmisión
5	Brakes Bromsar Frenos
6	Front assembly, steering Framvagn, styrinrättning Tren delantero, dirección
7	Suspension, wheels Fjädringssystem, hjul Suspensión, ruedas
8 A B C D	Body, external, internal, heat. and ventil., tools, labels Kaross, utv., inv., värme- och vent., verktyg, etiketter Carocceria, ext., inf., calefa. y vent.,herramient, etiquetas
10	Numerical register Nummerregister Indice numérico

GENERAL

INTRODUCTION	1-A05
ABBREVIATIONS	1-A06
MODEL IDENTIFICATION	1-A11
CHASSIS NUMBER	1-A13
ENGINE AND GEARBOX NUMBER	1-A15
STOCK-KEEPING LEVEL	1-A16
INSTRUCTIONS	1-A19
COLOUR MARKING SPRING, -STRUT	1-B03
CODE MARKING VIN PLATE	1-B04

ALLMÄNT

INLEDNING	1-A05
FÖRKORTNINGAR	1-A06
MODELLIDENTIFIKATION	1-A11
CHASSINUMMER	1-A13
MOTOR- OCH VÄXELLÅDSNUMMER	1-A15
LAGERHÅLLNINGSNIVÅ	1-A17
ANVISNINGAR	1-A19
FÄRGMÄRKNING FJÄDER, -BEN	1-B03
KODMÄRKNING CHASSINUMMERSKYLT	1-B04

GENERALIDADES

INTRODUCCION	1-A05
ABREVIACIONES	1-A08
IDENTIFICACION DEL MODELO	1-A11
NUM. DE CHASIS	1-A13
NUM. DE MOTOR Y CAJA DE CAMBIOS	1-A15
NIVEL DE ALMACENAJE	1-A18
INSTRUCCIONES	1-A20
MARCACIÓN DE COLOR RESORTE, BRAZO-	1-B03
MARCACION DE CODIGO DE NUMERO DE C. . .IS	1-B04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	1-A02
4	Transmission	[illegible]
5	Brakes	[illegible]
6	Front assembly, Steering	[illegible]
7	Suspension, Wheels	[illegible]
8A	Body, external	[illegible]
8B	Body, internal	[illegible]
8C	Body, heating and ventilation	[illegible]
8D	Tools, Labels	[illegible]
10	Numerical register	6-A02

This Parts Catalogue is applicable to the 1994- models of the Saab 9000.
It will be updated by new microfiches.
When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted. The car model and colour/upholstery code should be quoted when ordering uphlstery.
Parts may be listed in this catalogue that are no longer available from SAAB warehouses, but of which importers or dealers may have stock. These articles are indicated by the term "No Longer Serviced" or **NLS** being included in the notes column. If there is a replacing part no. it is shown after NLS (NLS - use 7519132).

Denna reservdelskatalog för Saab 9000 omfattar årsmodellerna 1994-.
Den kommer att hållas aktuell genom att nya fiche ges ut.
Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och klädselkod anges.
I denna katalog kan finnas artiklar som inte längre finns tillgängliga från SAAB's lager men som kan finnas tillgängliga hos importör eller återförsäljare. Dessa artiklar är märkta i anmärkningskolumnen med **NLS** (No Longer Serviced). Finns ersättande artikel skrivs art.nr. efter NLS (NLS - use 7519132)

Este catálogo de piezas de recambio del Saab 9000 comprende los modelos de los anos 1994-, y será mantenido al corriente por la publicación de nuevas fichas.
Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de la caja de cambios. Para encargar tapicería, hay , además, que indicar el tipo del coche clave color de la tapicería.
En este catálogo pueden existir artículos no existentes ya en la actualidad en el almacén de SAAB, pero disponibles todavía en algunos casos en las dependencias del importador o concesionario. Estos artículos han sido marcados con **NLS** (No Longer Serviced) en la columna dedicada a las observaciones. En caso de existir un artículo sustitutorio, el número del mismo se escribe inmediatamente después de NLS (NL - use 7519132).

4-CYL	4 cylinder engine	4-cylindrig motor
6-CYL	6 cylinder engine	6-cylindrig motor
A	Automatic transmission	Automatisk växellåda
ABS	Anti block system	Låsningsfria bromsar
AC	Air Conditioning	Luftkonditionering
ACC	Automatic Climate Control	Automatisk klimatkontroll
AIRBAG 1	Airbag drivers side	Airbag förarsida
AIRBAG 2	Airbag drivers side and passenger side	Airbag förarsida och passagerarsida
AS	Audio system	Audio system
ASR	Traction control system for A	Anti spinn system för A
B202	2,0 l engine with twin cam	2,0 l motor med två kamaxlar
B202S	2,0 l turbo engine with twin cam **without** charge cooler	2,0 l turbomotor med två kamaxlar, **utan** laddluftkyl
B204	2,0 l engine with twin cam and two balancer shafts	2,0 l motor med två kamaxlar och två balansaxlar
B204S	2,0 l turbo engine with twin cam and two balancer shafts, **without** charge cooler	2,0 l turbo motor med två kamaxlar och två balansaxlar, **utan** laddluftkyl
B204E	2,0 l turbo engine with twin cam and two balancer shafts, with charge cooler, **low** power out-put	2,0 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **låg** effekt
B204L	2,0 l turbo engine with twin cam and two balancer shafts, with charge cooler, **normal** power out-put	2,0 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **normal** effekt
B234	2,3 l engine with twin cam and two balancer shafts	2,3 l motor med två kamaxlar och två balansaxlar
B234E	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **low** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **låg** effekt
B234L	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **normal** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **normal** effekt
B234R	2,3 l turbo engine with twin cam and two balancer shafts, with charge cooler, **high** power out-put	2,3 l turbo motor med två kamaxlar och två balansaxlar, med laddluftkyl, **hög** effekt
B308I	3,0 l 6-cylinder engine	3,0 l 6-cylindrig motor
CL	Central locking	Centrallås
CS	Combi-Sedan	Kombi-Sedan
D	Door	Dörr
DI	Direct ignition	Direkt tändning

MASTER INDEX

0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-G02**
5	**Brakes**	**3-K02**
6	**Front assembly, Steering**	**4-A02**
7	**Suspension, Wheels**	**4-B02**
8A	**Body, external**	**4-C02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
8D	**Tools, Labels**	**5-K02**
10	**Numerical register**	**6-A02**

EAS	Electrically adjustable seat	Elmanövrerad stol
EGR	Exhaust Gas Recirculation	Avgasrecirkulation
ELCD	Evaporative Loss Control Device	Slutet bränslesytem
EM	Electrical mirrors	Elmanövrerade backspeglar
ETS	Electronic Throttle System	Elektroniskt styrd trottel
EW	Electrical window regulators	Elmanövrerade fönsterhissar
I	Fuel injection	Motor med bränsleinsprutning
IAC	Idle speed control	Tomgångsreglering
KW	Kilo Watt	Kilo Watt
L	Length	Längd
LH	Left hand	Vänster
LHD	Left hand drive	Vänsterstyrd
LU	Leather upholstery	Läderklädsel
M	Manual transmission	Manuell växellåda
MM	Millimetre	Millimeter
R	Reverse	Backväxel
RAC	Rear AC	Bakre AC
RH	Right hand	Höger
RHD	Right hand drive	Högerstyrd
RWW	Rear window wiper	Bakrutetorkare
SAI	Secondary air injection	Sekundärluft
SR	Sun roof	Sollucka
T16S	9000 Sport -1992	9000 Sport -1992
T16SA	9000 Sport, with Aero-kit -1992	9000 Sport, med Aero-kit -1992
T16SB	9000 Sport, basic version -1992	9000 Sport, basversion -1992
TCS	Traction Control System for M	Anti spinn system för M
X	Quantity as required	Antal efter behov

4-CYL	4 cilindros motor
6-CYL	6 cilindros motor
A	Caja de cambios automatico
ABS	Frenos antibloqueo
AC	Acondiciona miento de aire
ACC	Contol automatico de clima
AIRBAG 1	Airbag lado del conductor
AIRBAG 2	Airbag lado del conductor, lado del pasajero
AS	Audio system
ASR	Sistema de control de tracción para A
B202	Motor de 2,0 litros con dos ejes de levas
B202S	Motor de 2,0 litros con turbo y dos ejes de levas **sin** entriamiento de aire de admision
B204	Motor de 2,0 litros con dos ejes de levas y dos ejes equilibradores
B204S	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, **sin** entriamiento de aire de admision
B204E	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, sin entriamiento de aire de admision, **potencia baja**
B204L	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamiento de aire de admision, **potencia normal**
B234	Motor de 2,3 litros con dos ejes de levas y dos ejes equilibradores
B234E	Motor de 2,3 litros con turbo con dos ejes de levas y dos ejes equilibradores, sin entriamiento de aire de admision, **potencia baja**
B234L	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamiento de aire de admision, **potencia normal**
B234R	Motor de 2,0 litros con turbo con dos ejes de levas y dos ejes equilibradores, con entriamiento de aire de admision, **potencia alta**
B308I	3,0 I 6 cilindros motor
CL	Cerradura
CS	Combi-sédan
D	Puerta
DI	Encendido directo

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-G02**
5	**Brakes**	**3-K02**
6	**Front assembly, Steering**	**4-A02**
7	**Suspension, Wheels**	**4-B02**
8A	**Body, external**	**4-C02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
8D	**Tools, Labels**	**5-K02**
10	**Numerical register**	**6-A02**

EAS	Asientos maniobra eléctrica
EGR	Recirculation de los gase de escape
ELCD	Sistema de combustible cerrado
EM	Espejos retrovisores elétricos
ETS	Sistema electrónico de aceleración
EW	Levantacristales eléctricos
I	Motor de inyeccion
IAC	Regulacion de ralenti
KW	Kilowattio
L	Longitud
LH	Lado izquierdo
LHD	Tracción a la izquierda
LU	Guarnicion de cuero
M	Caja de cambios manual
MM	Millimetros
R	Marcha atras
RAC	AC trasero
RH	Lado derecho
RHD	Volante a la derecha
RWW	Limpiaparabrisas post
SAI	Aire secundario
SR	Techo corredizo
TCS	Sistema de control de tracción para M
T16S	9000 Sport -1992
T16SB	9000 Sport, ejecución básica -1992
T16SA	9000 Sport, con Kit Aero -1992 (parachoques y spoiler integrados)
X	Cantidad segun necesidad


AR	Argentina	Argentina	Argentina
AU	Australia	Australien	Australia
BE	Belgium	Belgien	Bélgica
BR	Brazil	Brasilien	Brasil
CA	Canada	Canada	Canadá
CH	Switzerland	Schweiz	Suiza
CN	China	Kina	China
CY	Cyprus	Cypern	Chipre
DK	Denmark	Danmark	Dinamarca
DE	Germany	Tyskland	Alemania
EU	Europe	Europa	Europa
FE	Far East	Fjärran Östern	Extremo Oriente
FI	Finland	Finland	Finlandia
FR	France	Frankrike	Francia
GB	Great Britain	England	Gran Bretana
GR	Greece	Grekland	Grecia
IL	Israel	Israel	Israel
IT	Italy	Italien	Italia
JP	Japan	Japan	Japón
KR	Korea	Korea	Corea
LA	Latin America	Latinamerika	Latincamérica
LB	Lebanon	Libanon	Libano
ME	Middle East	Mellersta Östern	Próximo Oriente
MT	Malta	Malta	Malta
NO	Norway	Norge	Noruega
PA	Pacific	Stilla-havsområdet	Zona del Pacífico
PR	Puerto Rico	Puerto Rico	Puerto Rico
SE	Sweden	Sverige	Suecia
SG	Singapore	Singapore	Singapur
TR	Turkey	Turkiet	Turquia
TW	Taiwan	Taiwan	Taiwan
UC	USA-California	USA-Kalifornien	EE.UU. Californi.
UF	USA-Federal	USA-Federalt	EE.UU., Federal
US	USA	USA	EE.UU
ZN	New Zeeland	Nya Zeeland	Nueva Zelanda

MASTER INDEX


0	**General**	**1-A02**
2	**Engine**	**1-C02**
3A	**Electrical, general**	**2-A02**
3B	**Electrical, contact housing**	**3-A02**
4	**Transmission**	**3-G02**
5	**Brakes**	**3-K02**
6	**Front assembly, Steering**	**4-A02**
7	**Suspension, Wheels**	**4-B02**
8A	**Body, external**	**4-C02**
8B	**Body, internal**	**5-A02**
8C	**Body, heating and ventilation**	**5-J02**
8D	**Tools, Labels**	**5-K02**
10	**Numerical register**	**6-A02**

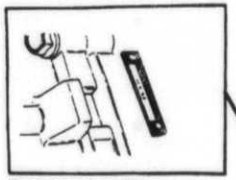


Gear box number
Växellådsnummer
Núm. de cajas de cambios

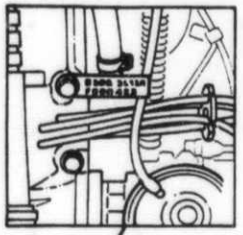



Engine number
Motornummer
Núm. de motor

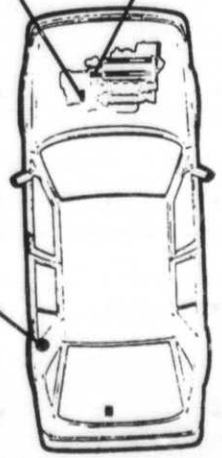

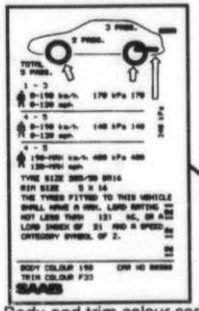


Body and trim colour code
Färgkod och klädselkod
Clave color coche y trapicería

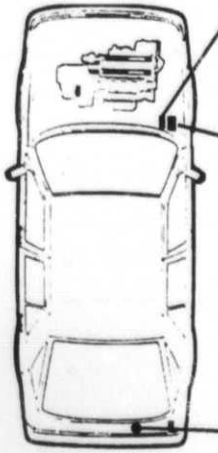




Body number
Karossnummer
Número de carroceria



Chassis number
Chassinummer
Núm. de chasis

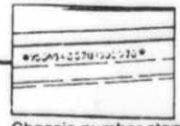


Chassis number stamped
on the body.
Chassinumret är instansat
i karossen.
Núm. de chasis estampado
en la carroceria.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

CAC94 GB/SE
Jan. 96

Vehicle identification Number, VIN (chassis number)

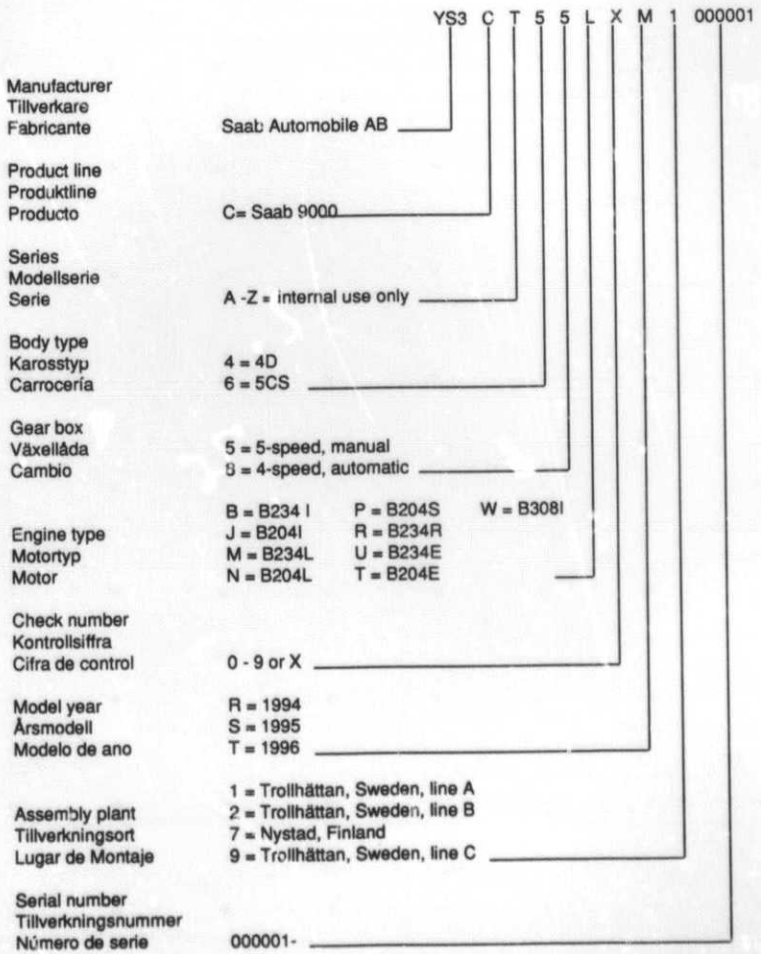

1994

YS3CC68J5R1000001 - YS3CD65P7R1032468

1995


YS3CF65W9S1000001 - YS3CF65U5S1038095

1996

YS3CF68W2T1000001 - YS3CM48M8T1033402

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

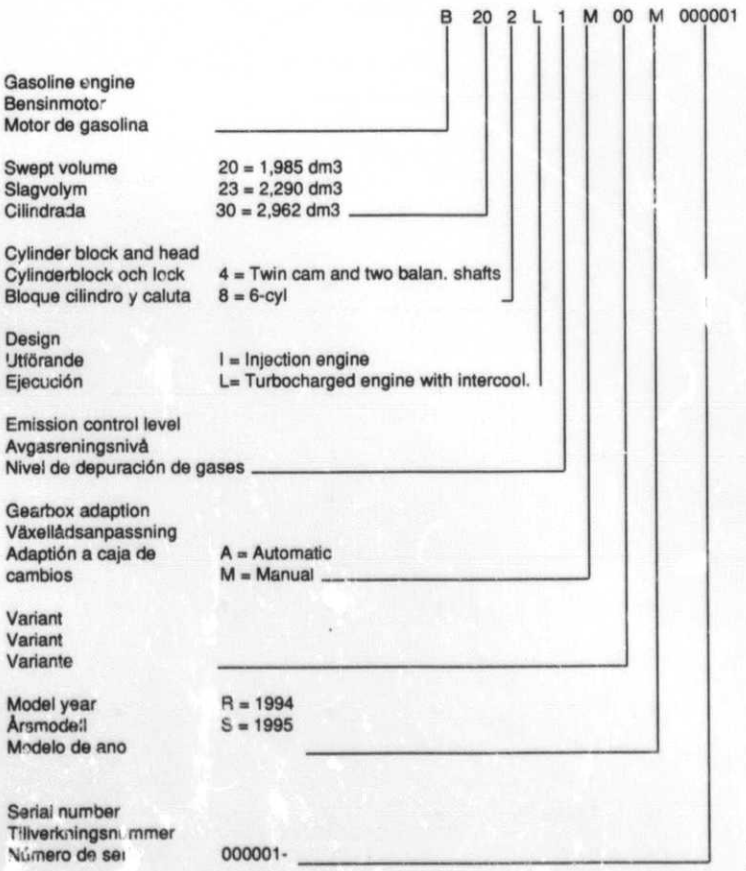

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column bellow.

Stock-keeping level 1	Parts for sevice and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts fromrecommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Oulet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Oulet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Automobile central stores in Nyköping, Sweden

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enklare servicarbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar ur lagerhållningsnivå 1-2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder artiklar ur lagerhållningsnivå 1-3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1-4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1-5.
Återförsäljarnivå 6	Saab Automobiles centrallager i Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los concepros siguientes.

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc
Nivel 6	Artículos de poco movimiento en grado extremo

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente


Nivel 1	Tallares y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precesente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén pricipalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y alguns concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Saab Automobile almacén central en Nyköping, Suecia.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Microfiche layouts

Each mircofiche card has a heading which provides information on:



1. Car modell
2. Model years included on the microfiche. Edition and date.
3. Catalogue groups included on the microfiche.
4. Microfiche part number and language variant.
5. Microfiche card number.

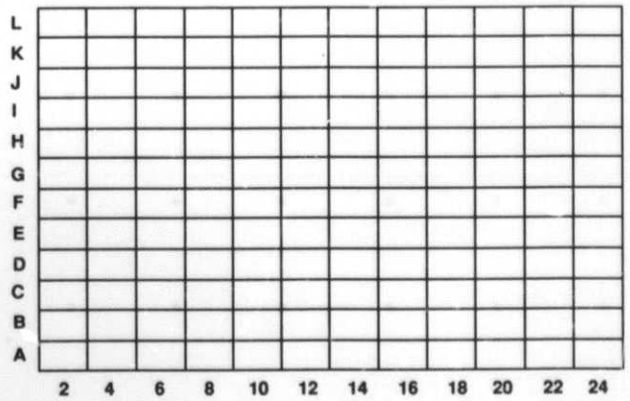

The microfiche card contains 12x12 boxes with illustration and text pages.
Each horizontal line has a letter combination and each vertical column has a digit combination.
Each box is thus given an alpha-numeric coordinate.

Microfichens uppläggning


Varje microfichekort har ett rubrikfält som ger information om:

1. Bilmodell
2. Årsmodeller som microfichen innehåller. Utgåva och datum.
3. Kataloggrupper som finns på kortet.
4. Microfichens artikelnummer och språkvariant.
5. Microfichekortets nummer.


Microfichekortet innehåller 12x12 rutor med bild och textsidor.
Varje horisontell rad har en bokstavsbeteckning och varje vertikal rad en sifferbeteckning.
Varje ruta får på dette sätt en koordinatbeteckning bokstav-siffra.

Disposición de la microficha

Cada tarjeta de microficha cuenta con un encabezamiento que proporciona la siguiente información:



1. Modelo del automóvil.
2. Años de modelos contenidos en la microficha. Edición y fecha.
3. Grupos de catálogo incluídos en la microficha.
4. Número de artículo y variante de idioma de la microficha.
5. Número de tarjeta de la microficha.

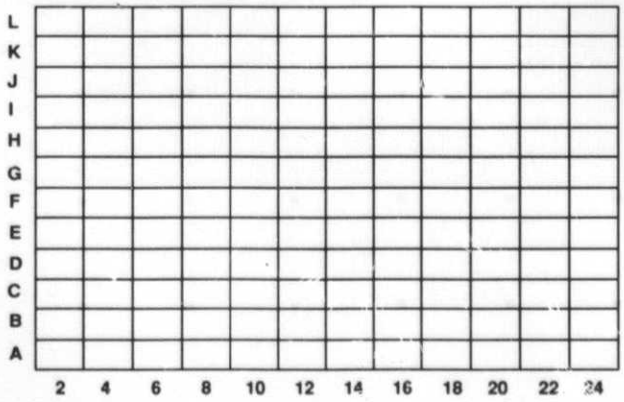

Cada tarjeta contiene 12x12 casillas con páginas de figuras y de texto.
Cada línea horizontal cuenta con una denominación alfabética y cada columna verticale con una numérica.
Cada casilla obtiene de esta manera una coordenada alfa-numérica.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Illustration page
Each text section has an illustration page. The illustration page is repeated as long as the text section in question is continued.

A complete unit is marked with a ring around the item number.

A kit can be indicated through the item number poiting to several parts.

A kit can also be indicated through the item number being repeated several times.

Bildsida
Varje textsida har en bildsida. Bildsidan uppredas så länge resp. textavsnitt varar.

Komplett enhet markeras med en ring runt positionsnumret.

En sats kan visas genom att positionsnumret pekar på flera delar.


En sats kan också visas genom att positionsnumret upprepas flera gånger.


Las páginas con figuras
A cada sección de texto le corresponde una página con una figura. Esta página se repite hasta que el texto en cuestión haya finalizado.

Cada unidad completa se marca con un círculo alrededor del número de posición.

Un juego puede ser indicado con el número de posición señalando hacia las distintas piezas.

Un juego puede también ser indicado repitiendo varias veces el número de posición.

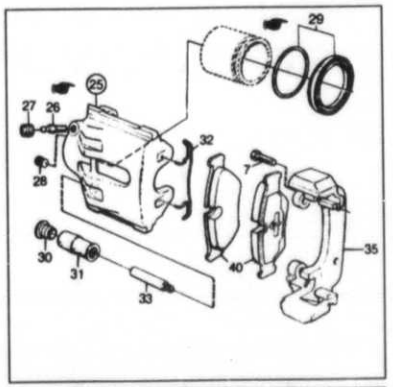


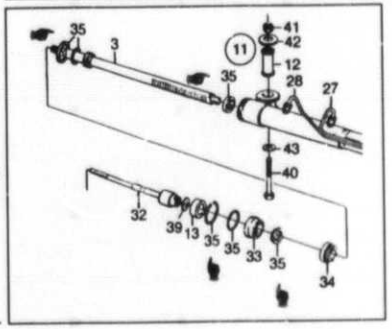

Deviations for certain markets or alternative designs are sometimes indicated in a box.

Avvikelser för vissa marknader eller alternativa utföranden visas ibland i ruta.


Las posibles distintas ejecuciones para algunos mercados, o diseños alternativos, son mostrados a veces en recuadros en una casilla.

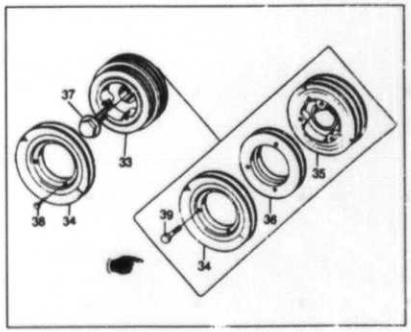

Adjecent parts are indicated on certain illustrations by means of dotted lines or with a rhomb and a note on the text page indicates where you can find the part.

På vissa bilder tecknas *närliggande artiklar* in med prickad lin[illegible]eller med en romb och en not på textsidan visar var du kan finna artikeln.

Las piezas adyacentes han sido dibujadas en algunas ilustraciones con líneas punteadas o con un rombo, indicando una nota en la página de texto donde puede encontrarse la pieza.

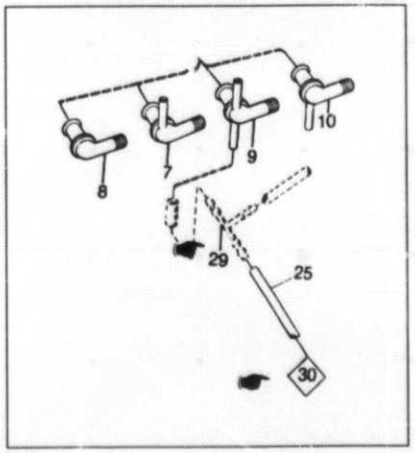


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

1-A23

Text page
Las páginas con texto

Text sida

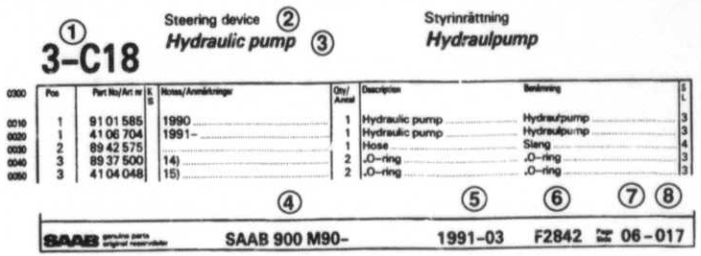


1. Microfiche coordinate for the retrievel system, 3-C18 where 3 is the serial number of the microfiche card, C is the microfiche line and 18 is the microfiche column.
2. Subgroup titel in English and Swedish.
3. Section title in English and Swedish.
4. Car model and model years included in the microfiche card.
5. Date (for internal use).
6. Illustration number (for internal use).
7. Main group.
8. Page number within main group.

1. Fichakoordinat för söksystemet, 3-C18 där 3 är fichekortets löpnummer, C är horisontell ficherad och 18 vertikal ficherad.
2. Undergruppstitel på engelska och svenska.
3. Avsnittstitel på engelska och svenska.
4. Bilmodell och årsmodeller som fichekortet täcker.
5. Datum (för internt bruk).
6. Illustrations nummer (för internt bruk).
7. Huvudgrupp.
8. Sidnummer inom huvudgruppen.

1. Coordenada de la microficha para el sistema de búsqueda, 3-C18 en la que 3 es el número de serie de la tarjeta, C es la línea de la microficha y 18 la columna de la misma.
2. Titulo del subgrupo en inglés y sueco.
3. Titulo de la sección en inglés y sueco.
4. Modelos y años de automóviles incluidos en la tarjeta.
5. Fecha (para uso interno).
6. Número de la figura (para uso interno).
7. Groupo principal.
8. Número de página dentro del grupo principal.

1-A24

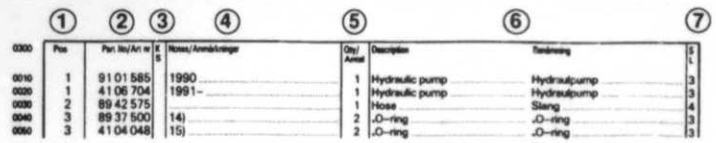

1. Item numbers for the part illustrated on the illustration page. Note that the item can be repeated.
   The item is specified in most cases with digits but digit + letter combinations can also occur.
2. Part numbers. A dot to the left of the part number indicates that the number has been added since the preceding edition.
3. An "S" in this column indicates that the part is included in a kit.
4. Comments column. Limitations and restrictions of various kinds are indicated here.
   To permit part numbers which have expired to be identified, the old numbers is written in parentheses.
5. Quantity column.
6. Names in English and Swedish. A dot in front of the name indicates that the part is included in the immediately superior article. For example: item 3 is included in item 2 and accompanies item 2 when item 2 is purchased.
7. Stock keeping level.

1. Positionsnummer på den illustrerade artikeln på bildsidan. Observera att position kan upprepas.
   Positionen anges i de flesta fall med siffror men även siffra + bokstav kan förekomma.
2. Artikelnummer. En punkt till vänster om artikelnumret visar att numret tillkommit sedan föregående utgåva.
3. Ett "S" i kolumnen markerar att artikeln ingår i en sats.
4. Anmärkningskolumn, här anges begränsningar och restriktioner av olika slag.
   För att kunna identifiera utgångna artikelnummer skrivs det gamla numret ut inom parentes.
5. Antalskolumn.
6. Benämning på engelska och svenska. Punktmarkering framför benämningen anger att artikeln ingår i närmast överordnad artikel. Ex: pos 3 ingår i pos 2 och medföljer vid köp av pos 2.
7. Lagerhållningsnivå.

1. Números de posición de la pieza presentada en la página con figura. Observar que esta pieza puede aparecer varias veces.
   La posición se indica en la mayoría de los casos con cifras aunque también pueden aparecer combinaciones alfanuméricas.
2. Números de artículo. Un punto a la izquierda del número de artículo indica que este número ha sido añadido después de la edición precedente.
3. Una "S" en la columna indica que el artículo forma parte de un juego.

4. Columna para observaciones. En esta se indican las distintas limitaciones y restricciones.
   Para poder identificar un número de artículo suprimido, los números antiguos aparecen entre paréntesis.
5. Columna de cantidad.
6. Denominaciones en inglés y sueco. La marcación punteada delante de la denominación indica que el artículo forma parte del artículo inmediatamente superior. Por ejemplo: el art. 3 forma parte del art. 2 y es incluido al comprar el art. 2.
7. Nivel de almacenamiento.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Master and group indexes

The catalogue is divided into 12 main groups. The master index which is located on the top righthand corner on each microfiche box, indicates the coordinate at which each main group begins.

Master- och gruppindex

Katalogen är indelad i 12 huvudgrupper. Masterindex, som finns i övre höger hörn på varje ficheruta, anger på vilken koordinat varje huvudgrupp börjar.

Indices principal y de groupo

El catálogo se divide en 12 grupos principales. El índice principal, situado en la esquina superior derecha de cada recuadro de la microficha, indica la coordenada de comienzo de cada grupo principal.

MASTER INDEX

0	General	1-A02
2	Engine	1-B02
3	Electrical system, Instruments	2-A02
4	Transmission	2-J02
5	Brakes	3-A02
6	Front assembly, Steering	3-C02
7	Suspension, Wheels	3-E02
8A	Body, external	3-F02
8B	Body, internal	4-A02
8C	Body, heating and ventilation	4-G02
9	Tools, Labels	4-I02
10	Numerical register	4-J02

The main groups are subdivided into subgroups. The group index indicates the coordinate at which the subgroups begin.

Huvudgrupperna är indelade i undergrupper. Gruppindex anger på vilken koordinat undergrupperna börjar.

Los grupos principales están divididos en subgrupos. El índice de grupo indica la coordenada de comienzo de los distintos subgrupos.

2 GROUP INDEX

Engine body	1-B10
Lubrication system	1-C16
Fuel system	1-D02
Inlet and exhaust system	1-D24
Cooling system	1-F18
Engine control	1-G18
Supercharging system	1-G20
Kits	1-H02

Numerical register
Registro numérico

4-K23 *Numerical register*

Nummerregister

Nummerregister

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
98 33 365	08A	089	3–H18	98 41 958	03	055	2–C08	98 67 896	08B	071	4–C24	98 81 665	08B	077	4–D08
98 33 476	08B	093	4–D22	98 43 608	08B	113	4–E18	98 67 896	08B	075	4–D04	98 81 806	08B	117	4–E22
98 33 484	08B	093	4–D22	98 47 377	08A	089	3–H18	98 67 377	08B	069	4–C12	98 81 913	08A	111	3–H16
98 33 482	08B	093	4–D22	98 47 385	08A	089	3–H18	98 67 977	08B	073	4–D02	98 81 921	08A	111	3–H16
98 33 500	08B	093	4–D22	98 48 169	08B	127	4–H08	98 68 585	08B	069	4–C12	98 82 051	08B	079	4–D08

On the last microfiche card there is a numerical register with coordinate reference to the page where the part number is located.
En la última tarjeta de la microficha exista un registro numérico que mediante coorde-

På sista fichekortet i katalogen finns ett nummerregister med koordinathänvisning till den sida som artikelnumret finns på.

nadas indica la página donde aparece el número de artículo.

New parts
Artículos nuevos

4-K24 *New parts*

Nya artiklar

Nya artiklar

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
40 69 829	03	117	2–E22	41 75 923	03	053	2–C06								
40 69 829	03	145	2–G02	41 75 949	03	085	2–D14								
40 84 935	08B	013	4–A14	41 95 954	09	005	4–A06								
40 84 943	08B	011	4–A12	42 83 198	06	017	3–C18								
40 84 950	08B	011	4–A12	43 50 427	08C	009	4–G10								

In the end of the numerical register there is a register for additional parts since the preceding edition.
Al final del registro numérico existe un registro sobre los artículos aparecidos desde

I slutet av nummerregistret finns ett register på nytillkomna artiklar sedan föregående utgåva.
la edición precedente.

Deleted parts
Artículos suprimidos

4-L02 *Deleted parts*

Utgångna artiklar

Utgångna artiklar

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord	Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
69 52 717															
75 87 298															
82 43 990															
82 44 006															
84 86 318															


Last in the numerical register there is a register for parts that has been deleted since the preceding edition.
Al final del registro numérico existe en registro de los artículos suprimidos desde la edición precedente.


Sist i nummerregistret finns ett register på artiklar som utgått sedan föregående utgåva.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Colour marking spring and spring strut
Färgmärkning fjäder och fjäderben
Marcación de color resorte y brazo amuelle

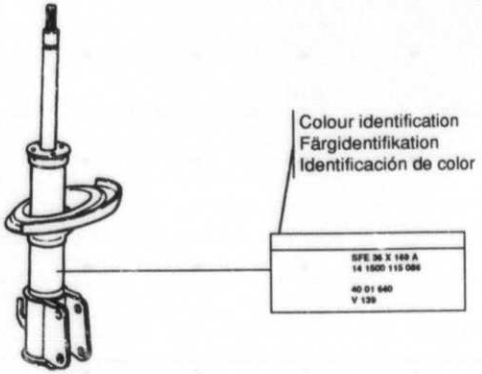


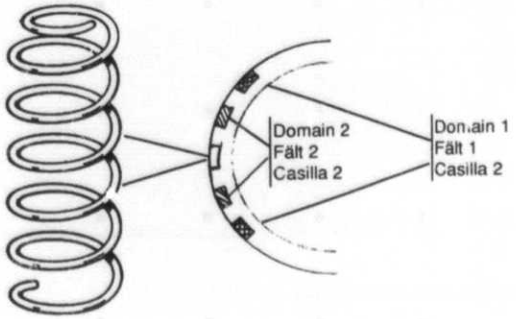

Codes marked on the VIN plate
Kodmärkning på chassinummerskylt
Marcacion de codigo en el letrero de numero de chasis

With effect from M97 the codes for certain spare parts have been marked on the VIN plate.
Från M97 har vissa reservdelar kodmärkts på chassinummerskylten.
Algunas piezas de recambio seran marcadas a partir de M97 con un codigo en el letrero de numero de chasis.

Previous appearance
Tidigare utseende
Apariencia anterior

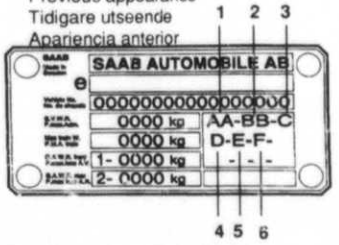

Later appearance
Senare utseende
Apariencia actual



For EU-cars that doesn't have codes marked, see group 7 section "-1996"

För EU-bilar som saknar kodmärkning, se grupp 7 avsnitt "-1996"

Pos 1	Spring front	Fjäder fram
Pos 2	Spring rear	Fjäder bak
Pos 3	Anti-roll bar front	Krängningshämmare fram
Pos 4	Anti-roll bar rear	Krängningshämmare bak
Pos 5	Spring strut/insert front	Fjäderben/insats fram
Pos 6	Shock absorber rear	Stötdämpare bak

Pos 1	Resorte delantera
Pos 2	Resorte posteriore
Pos 3	Estabilizador delantera
Pos 4	Estabilizador posteriore
Pos 5	Brazo armotiguador/juego delantera
Pos 6	Armotiguador posteriore

In regard to such parts, the remarks area will show **CODE=A**, for instance

För artiklar som är kodmärkta står det i anmärkningsfältet **CODE=A** t.ex.

En el campo destinado a las observaciones de los articulos con marcacion de codigo aparecera, p. ej., **CODE=A**

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

1-C02



Engine
Motor
Motor

TABLE OF CONTENTS

Engine suspension		
Engine suspension	2 : 9	1-C10
Engine body 4-cyl		
Cylinder head, 4-cyl	2 : 11	1-C12
Valve cover, 4-cyl	2 : 13	1-C14
Cylinder block, 4-cyl	2 : 15	1-C16
Short engine	2 : 17	1-C18
Transmission, 4-cyl	2 : 21	1-C22
Transmission balancer shafts, 4-cyl	2 : 23	1-C24
Crankshaft, connecting rod, piston, flywheel, B204	2 : 25	1-D02
Crankshaft, connecting rod, piston, flywheel, B234	2 : 27	1-D04
Engine body 6-cyl		
Cylinder head, 6-cyl	2 : 29	1-D06
Valve cover, 6-cyl	2 : 31	1-D08
Cylinder block, 6-cyl	2 : 33	1-D10
Short engine	2 : 17	1-C18
Belt tensioner, 6-cyl	2 : 35	1-D12
Transmission, 6-cyl	2 : 37	1-D14
Crankshaft, connecting rod, piston, 6-cyl	2 : 39	1-D16
Flywheel, companion flange, 6-cyl	2 : 43	1-D20
Lubrication system		
Oil pump, oil filter, 4-cyl	2 : 45	1-D22
Sump, oil filter, 6-cyl	2 : 47	1-D24
Oil pump, 6-cyl	2 : 49	1-E02
Crank case ventilation, 6-cyl	2 : 51	1-E04
Oil pipes, Turbo	2 : 53	1-E06
Fuel system		
Air cleaner, 4-cyl Turbo	2 : 55	1-E08
Air cleaner, 4-cyl I	2 : 57	1-E10
Air cleaner, 6-cyl	2 : 59	1-E12
Filler device	2 : 61	1-E14
Fuel tank	2 : 63	1-E16
Fuel pump	2 : 65	1-E18
Distribution pipe, 4-cyl	2 : 67	1-E20
Distribution pipe, 6-cyl	2 : 69	1-E22
Engine control module, MOTRONIC	2 : 71	1-E24
Engine control module, TRIONIC	2 : 73	1-F02
Bracket engine control module, MOTRONIC, TRIONIC	2 : 77	1-F06
Evaporative loss control device, (ELCD)	2 : 79	1-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C03

TABLE OF CONTENTS

Inlet and exhaust system		
Inlet manifold, 4-cyl I	2 : 81	1-F10
Inlet manifold, 235) Turbo	2 : 83	1-F12
Inlet manifold, 236) Turbo	2 : 85	1-F14
Inlet manifold, 6-cyl	2 : 87	1-F16
Throttle valve housing, 4-cyl	2 : 89	1-F18
Throttle valve housing, 6-cyl	2 : 91	1-F20
IAC, 4-cyl I	2 : 93	1-F22
IAC, 4-cyl Turbo	2 : 95	1-F24
IAC, 6-cyl	2 : 97	1-G02
Electronic Throttle System (ETS)	2 : 99	1-G04
Exhaust manifold, 4-cyl, -1995	2 : 101	1-G06
Exhaust manifold, 4-cyl. 1996-	2 : 103	1-G08
Exhaust manifold, 6-cyl	2 : 105	1-G10
SAI, Air pump	2 : 107	1-G12
SAI, Non-return valve, 4-cyl	2 : 109	1-G14
SAI, Non-return valve, 6-cyl	2 : 111	1-G16
Exhaust system, Turbo -1997	2 : 113	1-G18
Exhaust system, Turbo, front placed converter	2 : 117	1-G22
Exhaust system, I	2 : 119	1-G24
Exhaust system, I, front placed converter	2 : 121	1-H02
Exhaust system, B308	2 : 123	1-H04
Cooling system		
Cooling system, 4-cyl	2 : 125	1-H06
Cooling system, 6-cyl	2 : 129	1-H10
Circulation pump, 6-cyl	2 : 131	1-H12
Fan	2 : 133	1-H14
Charge cooler	2 : 135	1-H16
Oil cooler, engine, 6-cyl	2 : 137	1-H18
Air oil cooler, engine, 4-cyl	2 : 139	1-H20
Air oil cooler, automatic transmission	2 : 141	1-H22
Coolant pump, 4-cyl	2 : 143	1-H24
Coolant pump, 6-cyl	2 : 145	1-I02
Thermostat, 4-cyl	2 : 147	1-I04
Thermostat, 6-cyl	2 : 149	1-I06
Pre-heating throttle body, 4-cyl turbo	2 : 151	1-I08
Pre-heating throttle body, 4-cyl I	2 : 153	1-I10
Engine control		
Accelerator arm	2 : 155	1-I12
Accelerator control, 4-cyl	2 : 157	1-I14
Accelerator control, 6-cyl	2 : 159	1-I16
Supercharging system		
Turbocharger	2 : 161	1-I18
APC-system	2 : 163	1-I20
Engine bay cover		
Engine bay cover, 6-cyl	2 : 165	1-I22
Kits		
Engine	2 : 167	1-I24

235. Engine -T007131.
236. Engine T007132-.

1-C04

INNEHÅLLSFÖRTECKNING

Motorupphängning		
Motorupphängning	2 : 9	1-C10
Motorkropp 4-cyl		
Cylinderhuvud, 4-cyl	2 : 11	1-C12
Ventilkåpa, 4-cyl	2 : 13	1-C14
Cylinderblock, 4-cyl	2 : 15	1-C16
Grundmotor	2 : 17	1-C18
Transmission, 4-cyl	2 : 21	1-C22
Transmission balansaxlar, 4-cyl	2 : 23	1-C24
Vevaxel, vevstake, kolv, svänghjul, B204	2 : 25	1-D02
Vevaxel, vevstake, kolv, svänghjul, B234	2 : 27	1-D04
Motorkropp 6-cyl		
Cylinderhuvud, 6-cyl	2 : 29	1-D06
Ventilkåpa, 6-cyl	2 : 31	1-D08
Cylinderblock, 6-cyl	2 : 33	1-D10
Grundmotor	2 : 17	1-C18
Remspännare, 6-cyl	2 : 35	1-D12
Transmission, 6-cyl	2 : 37	1-D14
Vevaxel, vevstake, kolv, 6-cyl	2 : 39	1-D16
Svänghjul, medbringare, 6-cyl	2 : 43	1-D20
Smörjsystem		
Oljepump, oljefilter,4-cyl	2 : 45	1-D22
Oljesump, oljefilter, 6-cyl	2 : 47	1-D24
Oljepump, 6-cyl	2 : 49	1-E02
Vevhusventilation, 6-cyl	2 : 51	1-E04
Oljerör, Turbo	2 : 53	1-E06
Bränslesystem		
Luftrenare, 4-cyl Turbo	2 : 55	1-E08
Luftrenare, 4-cyl I	2 : 57	1-E10
Luftrenare, 6-cyl I	2 : 59	1-E12
Påfyllningsdon	2 : 61	1-E14
Bränsletank	2 : 63	1-E16
Bränslepump	2 : 65	1-E18
Fördelningsrör, 4-cyl	2 : 67	1-E20
Fördelningsrör, 6-cyl	2 : 69	1-E22
Styrdon, MOTRONIC	2 : 71	1-E24
Styrdon, TRIONIC	2 : 73	1-F02
Fäste styrdon, MOTRONIC, TRIONIC	2 : 77	1-F06
Slutet bränslesystem (ELCD)	2 : 79	1-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C05

INNEHÅLLSFÖRTECKNING

Inlopps- och avgassystem		
Inloppsrör, 4-cyl I	2 : 81	1-F10
Inloppsrör, 235) Turbo	2 : 83	1-F12
Inloppsrör, 236) Turbo	2 : 85	1-F14
Inloppsrör, 6-cyl	2 : 87	1-F16
Spjällhus, 4-cyl	2 : 89	1-F18
Spjällhus, 6-cyl	2 : 91	1-F20
IAC, 4-cyl I	2 : 93	1-F22
IAC, 4-cyl Turbo	2 : 95	1-F24
IAC, 6-cyl	2 : 97	1-G02
Electronic Throttle System (ETS)	2 : 99	1-G04
Avgassamlare, 4-cyl. -1995	2 : 101	1-G06
Avgassamlare, 4-cyl. 1996-	2 : 103	1-G08
Avgassamlare, 6-cyl	2 : 105	1-G10
SAI, Luftpump	2 : 107	1-G12
SAI, Backventil, 4-cyl	2 : 109	1-G14
SAI, Backventil, 6-cyl	2 : 111	1-G16
Avgassystem, Turbo -1997	2 : 113	1-G18
Avgassystem, Turbo, framflyttad katalysator	2 : 117	1-G22
Avgassystem, I	2 : 119	1-G24
Avgassystem, I, framflyttad kata lysator	2 : 121	1-H02
Avgassystem, B308	2 : 123	1-H04
Kylsystem		
Kylsystem, 4-cyl	2 : 125	1-H06
Kylsystem, 6-cyl	2 : 129	1-H10
Cirkulationspump, 6-cyl	2 : 131	1-H12
Fläkt	2 : 133	1-H14
Laddluftkylare	2 : 135	1-H16
Oljekylare, motor, 6-cyl	2 : 137	1-H18
Luftoljekylare, motor, 4-cyl	2 : 139	1-H20
Luftoljekylare, automatväxellåda	2 : 141	1-H22
Kylvätskepump, 4-cyl	2 : 143	1-H24
Kylvätskepump, 6-cyl	2 : 145	1-I02
Termostat, 4-cyl	2 : 147	1-I04
Termostat, 6-cyl	2 : 149	1-I06
Förvärmning spjällhus, 4-cyl Turbo	2 : 151	1-I08
Förvärmning spjällhus, 4-cyl I	2 : 153	1-I10
Motorreglage		
Gaspedalarm	2 : 155	1-I12
Gasreglage, 4-cyl	2 : 157	1-I14
Gasreglage, 6-cyl	2 : 159	1-I16
Överladdningssystem		
Turbokompressor	2 : 161	1-I18
APC-system	2 : 163	1-I20
Motorrumsavtäckning 6-cyl		
Motorrumsavtäckning 6-cyl	2 : 165	1-I22
Satser		
Motor	2 : 167	1-I24

235. Motor –T007131.
235. Motor T007132–.

1-C06

SUMARIO

Soportes del motor		
Soportes del motor	2 : 9	1-C10
Cuerpo del motor 4 sil		
Culata, 4 sil	2 : 11	1-C12
Cubierta valvula, 4 sil	2 : 13	1-C14
Bloque de cilindros, 4 sil	2 : 15	1-C16
Motor de base	2 : 17	1-C18
Distribucion, 4 sil	2 : 21	1-C22
Distribucion, ejes equilibradores, 4 sil	2 : 23	1-C24
Ciguenal, bielas, pistones, volante, B204	2 : 25	1-D02
Ciguenal, bielas, pistones, volante, B234	2 : 27	1-D04
Cuerpo del motor 6 sil		
Culata, 6 sil	2 : 29	1-D06
Cubierta valvula, 6 sil	2 : 31	1-D08
Bloque de cilindros, 6 sil	2 : 33	1-D10
Motor de base	2 : 17	1-C18
Tensor correa, 6 sil	2 : 35	1-D12
Distribucion, 6 sil	2 : 37	1-D14
Ciguenal, bielas, pistones, 6 sil	2 : 39	1-D16
Volante, brida, 6 sil	2 : 43	1-D20
Sistema de engrase		
Carter aciete, filter, bomba aceite, 4 sil	2 : 45	1-D22
Carter aciete, filter, 6 sil	2 : 47	1-D24
Bomba aciete, 6 sil	2 : 49	1-E02
Vent.carter del ciguenal, 6 sil	2 : 51	1-E04
Tubo de aceite, Turbo	2 : 53	1-E06
Sistema de combustible		
Depurador de aire, Turbo	2 : 55	1-E08
Depurador de aire, 4 sil I	2 : 57	1-E10
Depurador de aire, 6 sil	2 : 59	1-E12
Combustible dispositivo de illenado	2 : 61	1-E14
Desposito de combustible	2 : 63	1-E16
Bomba de combustible	2 : 65	1-E18
Medidor de flujo de aire, 4 sil	2 : 67	1-E20
Medidor de flujo de aire, 6 sil	2 : 69	1-E22
Disp. mando, MOTRONIC	2 : 71	1-E24
Disp. mando, TRIONIC	2 : 73	1-F02
Fijacion disp. mando, MOTRONIC, TRIONIC	2 : 77	1-F06
Sistema cerrado de combustible, (ELCD)	2 : 79	1-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C07

SUMARIO

Sistema de admision y de escape

Colector de admision, 4 sil, I	2 : 81	1-F10
Colector de admision, Turbo -1995	2 : 83	1-F12
Colector de admision, Turbo 1996-	2 : 85	1-F14
Colector de admision, 6 sil	2 : 87	1-F16
Caja de maripoa, 4 sil	2 : 89	1-F18
Caja de maripoa, 6 sil	2 : 91	1-F20
Regulacion automatica de ralenti, 4 sil , I	2 : 93	1-F22
Regulacion automatica de ralenti, 4 sil, Turbo	2 : 95	1-F24
Regulacion automatica de ralenti, 6 sil	2 : 97	1-G02
Electronic Throttle System (ETS)	2 : 99	1-G04
Colector de escape, 4 sil. -1995	2 : 101	1-G06
Colector de escape, 4 sil. 1996-	2 : 103	1-G08
Colector de escape, 6 sil	2 : 105	1-G10
SAI, Bomba aire	2 : 107	1-G12
SAI, Valvula retancion, 4 sil	2 : 109	1-G14
SAI, Valvula retancion, 6 sil	2 : 111	1-G16
Sistema de escape, Turbo -1997	2 : 113	1-G18
Sistema de escape, Turbo, catalizador desplazado adelante	2 : 117	1-G22
Sistema de escape, I	2 : 119	1-G24
Sistema de escape, I, catalizado r desplazado adelante	2 : 121	1-H02
Sistema de escape, B308	2 : 123	1-H04

Sistema de refrigeracion

Radiador, 4 sil	2 : 125	1-H06
Radiador, 6 sil	2 : 129	1-H10
Bomba circulacion, 6 sil	2 : 131	1-H12
Ventilador	2 : 133	1-H14
Radiador de air de alimentacion	2 : 135	1-H16
Radiador de aceite, motor, 6 sil	2 : 137	1-H18
Radiador de aceite a aire, motor, 4 sil	2 : 139	1-H20
Radiador de aceite, caja de cambios automatica	2 : 141	1-H22
Bomba de liquido de refrigeracion, 4 sil	2 : 143	1-H24
Bomba de liquido de refrigeracion, 6 sil	2 : 145	1-I02
Termostato, 4 sil	2 : 147	1-I04
Termostato, 6 sil	2 : 149	1-I06
Precalentamiento caja de maripoa, 4 sil Turbo	2 : 151	1-I08
Precalentamiento caja de maripoa, 4 sil I	2 : 153	1-I10

Mandos del motor

Mando de acelerador	2 : 155	1-I12
Mandos del motor, 4 sil	2 : 157	1-I14
Mandos del motor, 6 sil	2 : 159	1-I16

Sistema de sobrealimentacion

Turbocompresor	2 : 161	1-I18
Sistema APC	2 : 163	1-I20

Recubrim. compart. motor

Recubrim. compart. motor, 6 sil	2 : 165	1-I22

Juegos completos

Motor	2 : 167	1-I24

235. Motor –T007131.
236. Motor T007132–.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical ragister	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C10

Engine suspension
Motorupphängning

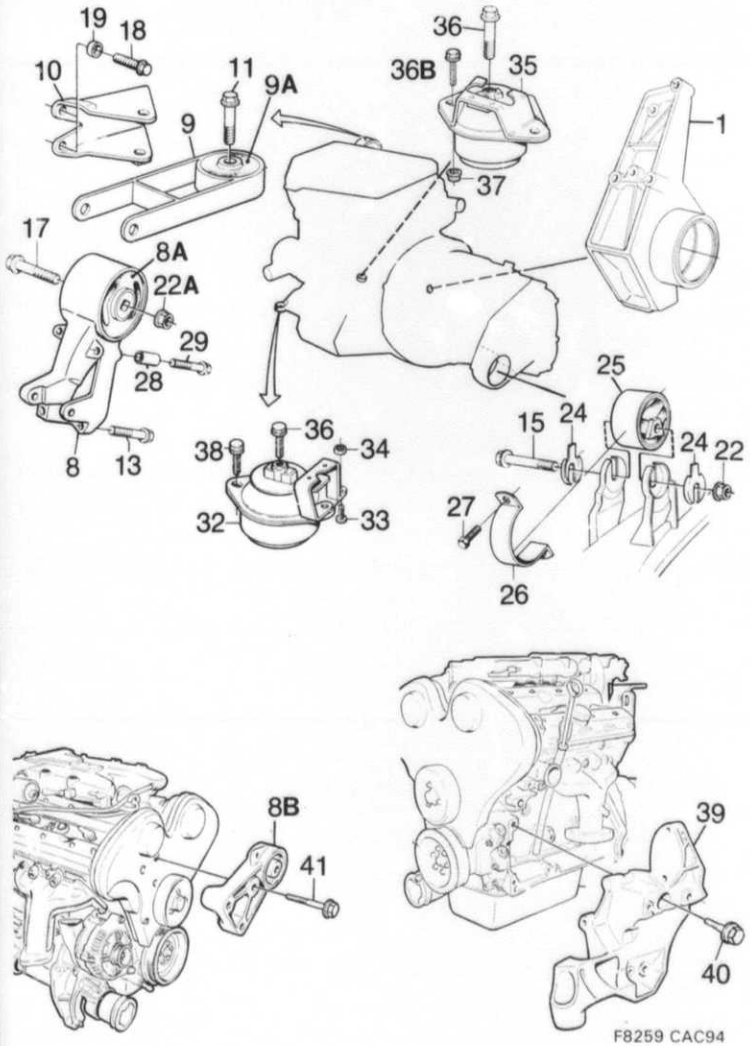

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 4-039, 3-H16		Bearing bracket	Lagerbock	
0020	8	43 58 818		4-CYL	1	Engine anchorage	Motorfäste	4
0030	8A	75 76 333		4-CYL	1	.Rubber cushion	.Gummikudde	4
0040	8B	43 58 313		6-CYL	1	Engine anchorage	Motorfäste	4
0050	9	75 99 913		4-CYL	1	Torque rod	Momentstag	5
0060	9	41 65 478		6-CYL	1	Torque rod	Momentstag	5
0070	9A	75 76 333		4-CYL	1	.Rubber cushion	.Gummikudde	4
0080	10	75 73 413		4-CYL	1	Bracket	Fäste	5
0090	10	41 65 411		6-CYL	1	Body bracket	Karossfäste	5
0100	11	79 82 572			1	Screw	Skruv	5
0110	13	79 78 216			4	Hexagon screw	Sexkantsskruv	5
0120	15	79 73 571			1	Screw	Skruv	5
0130	17	79 74 777			1	Screw	Skruv	5
0140	18	80 82 943			3	Screw	Skruv	5
0150	19	75 77 893			3	Spacer	Distans	3
0160	22	79 67 979			2	Nut	Mutter	5
0170	22A	79 84 776			1	Nut	Mutter	5
0180	24	93 19 294			2	Washer	Bricka	5
0190	25	75 50 569		1994, M	1	Vibration damper	Vibrationsdämpare	5
0200	25	*75 51 831*		1994, A NLS – USE 4165312	1	Vibration damper	Vibrationsdämpare	5
0200								
0210	25	41 65 312		1995-, M	1	Vibration damper	Vibrationsdämpare	3
0220	26	75 51 328			1	Cap	Överfall	6
0230	27	79 70 288		197)	2	Screw	Skruv	5
0240	27	79 78 208		198)	2	Screw	Skruv	5
0250	28	75 36 857		18)	1	Spacer	Distans	6
0260	29	79 78 257			1	Screw	Skruv	5
0270	32	*75 99 848*		1994 NLS – USE 4165494	1	Vibration damper	Vibrationsdämpare	3
0280	32	41 65 494		1995-	1	Vibration damper	Vibrationsdämpare	3
0290	33	75 51 385			1	.Screw	.Skruv	5
0300	34	79 71 658			1	.Nut	.Mutter	5
0310	35	*75 99 855*		1994 NLS – USE 4165510	1	Vibration damper	Vibrationsdämpare	3
0320	35	41 65 510		1995-	1	Vibration damper	Vibrationsdämpare	3
0330	36	79 82 127			2	Screw	Skruv	5
0340	36B	79 82 721			3	Screw	Skruv	5
0350	37	79 69 306			3	Lock nut	Låsmutter	5
0360	38	79 82 721			2	Screw	Skruv	5
0370	39	41 65 254		6-CYL	1	Engine bracket	Motorkonsol	4
0380	40	79 82 549		6-CYL	3	Screw	Skruv	5
0390	41	79 82 598		6-CYL	3	Hexagon screw	Sexkantsskruv	5


18. For cars with parted inlet manifold. För bilar med delat inloppsrör.
197. Ch. -R1026705.
198. Ch. R1026706-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

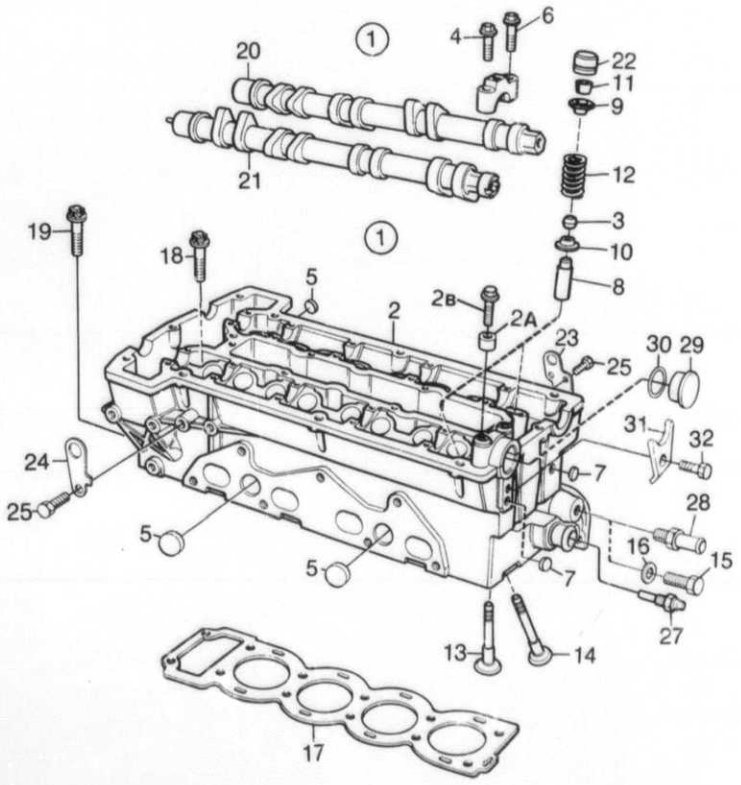

F8560 CAC94

Engine body

1-C12 Cylinder head 4-cylinder

Motorkropp

Cylinderhuvud 4-cylindrig

0190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	49 00 189		1994-	1	Cylinder head	Cylinderhuvud	5
0020	1	91 48 693		7,250),1995-	1	Cylinder head	Cylinderhuvud	5
0030	1	91 82 304		7,251)	1	Cylinder head	Cylinderhuvud	5
0040	2	91 47 927		250)	1	.Cylinder head	.Cylinderhuvud	5
0050	2	91 85 208		251)	1	.Cylinder head	.Cylinderhuvud	5
0060	2A	75 04 566			2	..Guide sleeve	..Styrhylsa	
0070	2B	75 04 178			2	..Screw	..Skruv	5
0080	3	75 00 713			16	..Seal	..Tätning	3
0090	4	75 85 847			8	..Screw	..Skruv	5
0100	5	75 88 320			2	..Sealing washer	..Tätningsbricka	3
0110	6	79 75 527		1994-	12	..Screw	..Skruv	5
0120	6	40 87 805		1995-	12	..Screw	..Skruv	5
0130	7	81 23 143			3	..Plug	..Plugg	3
0140	8	91 66 240		-1996	16	..Valve guide	..Ventilstyrning	4
0150	8	• 91 85 612		1997-	16	..Valve guide	..Ventilstyrning	4
0160	8	91 66 265		36),-1996	X	Valve guide	Ventilstyrning	4
0170	9	75 01 349			16	.Washer	.Bricka	4
0180	10	75 05 134			16	.Washer	.Bricka	4
0190	11	75 15 547			32	.Valve cone	.Knaster	2
0200	12	91 29 651			16	.Spring	.Fjäder	3
0210	13	91 65 598		39)	8	.Exhaust valve	.Avgasventil	2
0220	14	91 65 580		38)	8	.Inlet valve	.Inloppsventil	3
0230	15	*81 23 721*		NLS - USE 7563042	1	.Plug	.Propp	5
0240	16	*83 26 712*		NLS - USE 4161162	1	.Seal	.Tätning	5
0250	17	91 44 528		229)	1	Gasket	Packning	2
0260	17	91 79 235		230)	1	Gasket	Packning	2
0270	18	91 29 909		-1996	10	Screw	Skruv	5
0280	18	91 85 307		1997-	10	Screw	Skruv	5
0290	19	79 70 015			2	Screw	Skruv	5
0300	20	91 45 632		38)	1	Camshaft	Kamaxel	5
0310	20	91 45 657		38), B234I	1	Camshaft	Kamaxel	5
0320	21	91 45 640		39)	1	Camshaft	Kamaxel	5
0330	21	91 45 665		39), B234I	1	Camshaft	Kamaxel	5
0340	22	91 34 420		-1996	16	Tappet	Ventillyftare	3
0350	22	91 69 566		1997-	16	Valve lifter	Ventiltryckare	3
0360	23	74 81 757			1	Lifting eye	Lyftögla	6
0370	24	91 37 472			1	Lifting eye	Lyftögla	6
0380	25	80 59 776		-1995	3	Screw	Skruv	5
0390	25	79 78 190		1996-	3	Screw	Skruv	5
0400	27	91 08 291		-1994, 1/8"	1	EC temperature sensor	Temperaturgivare	2
0410	27	91 85 687		266), -1994, M12	1	EC temperature sensor	Temperaturgivare	2
0420	27	42 29 084		1995, 1/8"	1	EC temperature sensor	Temperaturgivare	2
0430	27	91 82 270		1996-,250), 1/8"	1	EC temperature sensor	Temperaturgivare	2
0440	27	91 82 205		251), M12	1	EC temperature sensor	Temperaturgivare	2
0450	28	74 86 806			1	Nipple	Nippel	5
0460	29	91 31 004		-1995	1	Plug	Plugg	2
0470	29	91 35 211		1996-	1	Sealing plug	Tätningsplugg	5
0480	30	75 19 143		1994-	1	O-ring	O-ring	6
0490	30	91 76 470		1995-	1	Sealing ring	Tätningsring	6
0500	31	83 62 287			1	Bracket	Hållare	5
0510	32	91 66 323			1	Screw	Skruv	5
0520								
0530		88 22 033		See page 2-167, 1-I24	X	Gasket kit	Sotningssats	2
0540		88 22 587		See page 2-169, 1-J02	X	Sealing kit	Tätningssats	2


7. Also available as exchange unit. Finns även som utbytesenhet.
36. Oversize. Överdimension.
38. Intake. Inlopp.
39. Exhaust. Avgas.
229. Engine -T007433
230. Engine T007434-
250. Engine -V002172
251. Engine V002173-
266. Part of: 4900189 Ingår i: 4900189

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

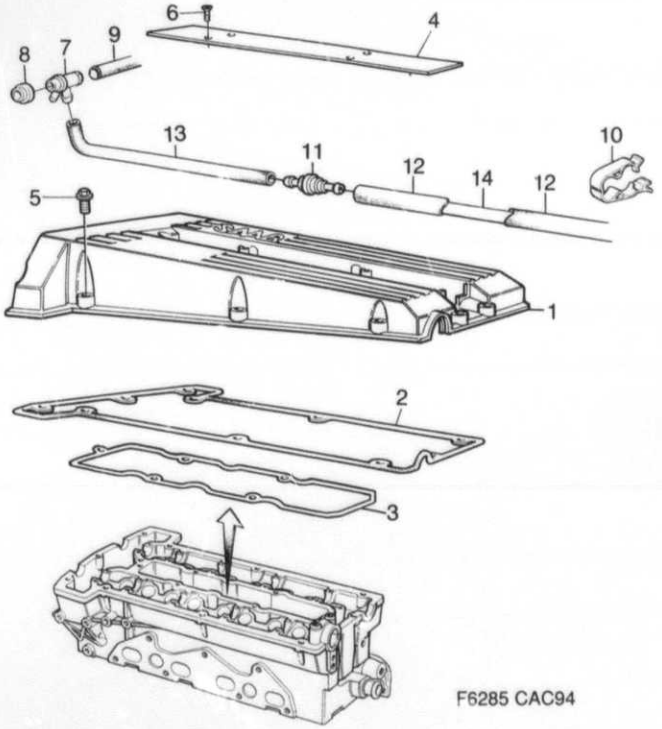

F6285 CAC94

Engine body

1-C14 *Valve cover 4-cylinder*

Motorkropp

Ventilkåpa 4-cylindrig


0195	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 48 024		-1996, B204	1	Valve cover	Ventilkåpa	5
0015	1	91 82 759		1997-, B204	1	Valve cover	Ventilkåpa	5
0020	1	91 43 157		-1996, B234	1	Valve cover	Ventilkåpa	5
0025	1	91 82 742		1997-, B234	1	Valve cover	Ventilkåpa	5
0030	2	91 33 026			1	Gasket	Packning	1
0040	3	91 33 034			1	Gasket	Packning	1
0050	4	91 48 586			1	Cover	Lock	3
0060	5	91 45 756			16	Screw	Skruv	5
0070	6	91 45 764			4	Screw	Skruv	5
0080	7	91 26 566			1	Nipple	Nippel	
0090	8	75 15 190			1	Bushing	Bussning	5
0100	9			TURBO	1	Hose	Slang	
0110				See page 2-151, 1-I08				
0120	9			I	1	Hose	Slang	
0125				See page 2-153, 1-I10				
0130	10	91 17 417		TURBO	1	Tensioning band	Spännband	5
0140	11	75 21 313			1	Pos. crankc. vent. valve	Ventil	
0150	12	*75 14 367*		TURBO NLS	1	Hose	Slang	4
0160	13	91 36 243		L=130MM	X	Vaccum hose	Vakuumslang	5
0170	13	91 36 243		TURBO, L=90MM	X	Vaccum hose	Vakuumslang	5
0180	14	91 36 243		TURBO, L=260MM	X	Vaccum hose	Vakuumslang	5
0190								
0200		91 36 243		L=5000MM	X	Vaccum hose	Vakuumslang	5
0210		88 22 041		See page 2-167, 1-I24	X	Gasket kit	Packningsats	1

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

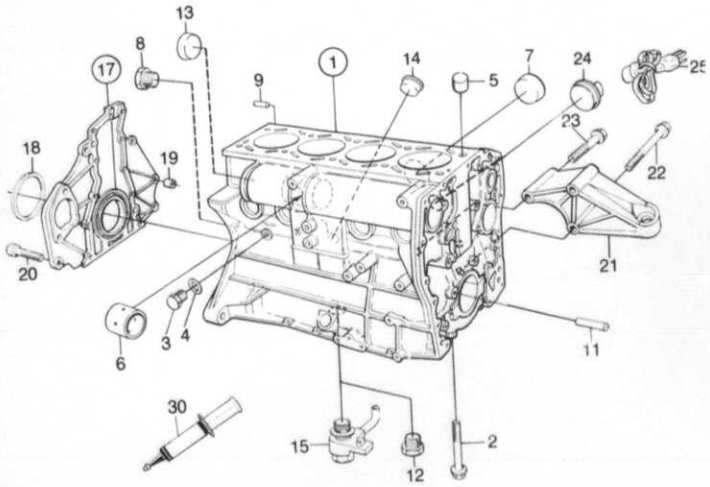

CAC94 F7574

Engine body

1-C16

Cylinder block 4-cylinder

Motorkropp

Cylinderblock 4-cylindrig

0210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 39 320		I	1	Cylinder block	Cylinderblock	6
0020	1	91 39 338		TURBO	1	Cylinder block	Cylinderblock	6
0030	2	91 28 687			10	.Screw	.Skruv	5
0040	3	75 63 042			2	.Plug	.Propp	1
0050	4	81 24 141			2	.Seal	.Tätning	5
0060	5	83 46 470			8	.Guide	.Styrning	
0070	6	75 88 684			2	.Bushing	.Bussning	5
0080	7	79 85 120			7	.Sealing washer	.Tätningsbricka	3
0090	8	83 48 047			1	.Plug	.Propp	5
0100	9	75 85 052			4	.Guide	.Styrning	5
0110	11	79 50 066			1	.Pin	.Pinne	5
0120	12	91 15 049			4	.Plug	.Propp	5
0130	13	81 23 259			2	.Sealing washer	.Tätningsbricka	3
0140	14	81 23 218			1	.Sealing washer	.Tätningsbricka	3
0150	15	91 67 677		TURBO, B234I	4	.Piston cooling jet	.Kolvkylningsmunstycke	5
0160	17	91 38 470		-1996	1	Plate	Platta	6
0165	17	91 74 194		1997-	1	Plate	Platta	6
0170	18	*87 87 764*		211) NLS – USE 9175902	1	.Seal	.Tätning	2
0180	18	91 75 902		212), -1996	1	.Seal	.Tätning	2
0185	18	91 74 202		1997-	1	.Seal	.Tätning	2
0190	19	91 29 800			2	.Guide sleeve	.Styrhylsa	
0200	20	40 87 235		-1996	12	Screw	Skruv	5
0205	20	79 78 109		1997-	12	Screw	Skruv	5
0210	21	91 17 557			1	Bracket	Konsol	5
0220	22	79 82 564			2	Screw	Skruv	5
0230	23	79 82 598			1	Hexagon screw	Sexkantsskruv	5
0233	24	47 25 883		CA	1	Engine heater	Motorvärmare	
0236	25	43 97 311		CA	1	Extension cable	Anslutningskabel	
0240	30	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

211. Engine -S026893.
212. Engine S026894-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C18

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		91 69 376		7), B204I	1	Engine	Motor	5
0020		91 69 384		7), B204S	1	Engine	Motor	5
0030		91 69 392		7), B204L, B204E	1	Engine	Motor	5
0040		91 69 400		7), B234I	1	Engine	Motor	5
0050		91 69 418		7), B234E, B234L, B234R	1	Engine	Motor	5
0060		47 70 244		7), B308, (8822397)	1	Engine	Motor	5
0070								
0080				4-CYL, 6-CYL		.Cylinder block	.Cylinderblock	
0090				4-CYL, 6-CYL		.Crankshaft	.Vevaxel	
0100				4-CYL, 6-CYL		.Connecting rod	.Vevstake	
0110				4-CYL, 6-CYL		.Piston	.Kolv	
0120				4-CYL		.Timing gear casing	.Transmissionskåpa	
0130				4-CYL		.Transmission	.Transmission	
0140				4-CYL		.End plate	.Gavelplatta	
0150				4-CYL		.Oil pump	.Oljepump	
0160				4-CYL		.Coolant pump	.Kylvätskepump	
0170								
0180								
0190								
0200		*91 69 905*		1995, B204I, M NLS	X	Engine	Motor	
0210		91 77 593		1996, B204I, M	X	Engine	Motor	
0220		91 80 852		1997, B204I, M	X	Engine	Motor	
0230		• 91 83 252		1998-, B204I, M	X	Engine	Motor	
0240								
0250		*91 69 913*		1995, B204S, M NLS	X	Engine	Motor	
0260		91 77 601		1996, B204E, M	X	Engine	Motor	
0270		91 80 860		1997, B204E, M	X	Engine	Motor	
0280		• 91 83 260		1998-, B204E, M	X	Engine	Motor	
0290		91 69 921		1995, B204S, A	X	Engine	Motor	
0300		91 77 619		1996, B204E, A	X	Engine	Motor	
0310		91 80 878		1997, B204E, A	X	Engine	Motor	
0320		• 91 83 278		1998-, B204E, A	X	Engine	Motor	
0330		*91 69 939*		1995, B204L, M NLS	X	Engine	Motor	
0340		91 77 627		1996, B204L, M	X	Engine	Motor	
0350								
0360		*91 69 947*		1995, B234I, M NLS	X	Engine	Motor	
0370		*91 69 954*		1995, B234I, A NLS	X	Engine	Motor	
0380		*91 69 962*		1995,8), B234I, M NLS	X	Engine	Motor	
0390		*91 69 970*		1995,8), B234I, A NLS	X	Engine	Motor	
0400		*91 69 988*		1995, B234I, SAI, M NLS	X	Engine	Motor	
0410		*91 69 996*		1995, B234I, SAI, A NLS	X	Engine	Motor	
0420								
0430		*91 70 002*		1995, B234E, M NLS	X	Engine	Motor	
0440		91 77 635		1996, B234E, M	X	Engine	Motor	
0450		91 77 650		1996, B234E, M, US, CA	X	Engine	Motor	
0460		91 80 886		1997, B234E, M	X	Engine	Motor	
0470		• 91 87 469		1998-, B234E, M	X	Engine	Motor	
0480		91 80 902		1997, B234E, M, US, CA	X	Engine	Motor	
0490		91 70 010		1995, B234E, A	X	Engine	Motor	
0500		91 77 643		1996, B234E, A	X	Engine	Motor	
0510		91 77 668		1996, B234E, A, US, CA	X	Engine	Motor	
0520		91 80 894		1997, B234E, A	X	Engine	Motor	
0530		• 91 87 477		1998-, B234E, A	X	Engine	Motor	
0540		91 80 910		1997, B234E, A, US, CA	X	Engine	Motor	
0550		*91 70 408*		1995, B234L, M NLS	X	Engine	Motor	
0560		91 77 676		1996, B234L, M	X	Engine	Motor	
0570		91 77 692		1996, B234L, M, US, CA	X	Engine	Motor	
0580		91 80 928		1997, B234L, M	X	Engine	Motor	
0590		91 80 944		1997, B234L, M, US, CA	X	Engine	Motor	
0600		*91 70 416*		1995, B234L, A NLS	X	Engine	Motor	
0610		91 77 684		1996, B234L, A	X	Engine	Motor	

7. Also available as exchange unit. Finns även som utbytesenhet.
8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C20


0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620		91 77 700		1996, B234L, A, US, CA	X	Engine	Motor	
0630		91 80 936		1997, B234L, A	X	Engine	Motor	
0640		• 91 83 294		1998-, B234L, A	X	Engine	Motor	
0650		91 80 951		1997, B234L, A, US, CA	X	Engine	Motor	
0660		• 91 87 550		1998-, B234L, A, US, CA	X	Engine	Motor	
0670		*91 74 400*		1995, B234R, M NLS	X	Engine	Motor	
0680		*91 70 028*		1995, B234R, M, TCS NLS	X	Engine	Motor	
0690		91 77 718		1996, B234R, M	X	Engine	Motor	
0700		91 77 726		1996, B234R, M, US, CA	X	Engine	Motor	
0710		91 80 969		1997, B234R, M	X	Engine	Motor	
0720		• 91 87 451		1998-, B234R, M	X	Engine	Motor	
0730		91 80 977		1997, B234R, M, US, CA	X	Engine	Motor	
0740		• 91 87 568		1998-, B234R, M, US, CA	X	Engine	Motor	
0750								
0760		41 64 448		1995, B308I, M	X	Engine	Motor	
0770		46 21 546		1996, B308I, M	X	Engine	Motor	
0780		*41 64 455*		1995, B308I, A NLS – USE 4164448	X	Engine	Motor	
0780								
0790		46 21 553		1996-, B308I, A	X	Engine	Motor	
0800		46 21 561		1996, B308I, A, US, CA	X	Engine	Motor	8
0810		47 50 170		1997, B308I, A	X	Engine	Motor	8
0820		47 50 188		1997, B308I, A, US, CA	X	Engine	Motor	8
0830								
0840						.Cylinder block	.Cylinderblock	
0850						.Crankshaft	.Vevaxel	
0860						.Connecting rod	.Vevstake	
0870						.Piston	.Kolv	
0880						.Timing gear casing	.Transmissionskåpa	
0890						.Transmission	.Transmission	
0900						.Coolant pump	.Kylvätskepump	
0910						.Flywheel housing	.Svänghjulskåpa	
0920						.Cylinder head	.Cylinderhuvud	
0930						.Valve cover	.Ventilkåpa	
0940						.Sump	.Oljesump	
0950						.Flywheel	.Svänghjul	
0960						.Vibration damper	.Svängningsdämpare	
0970						.Camshaft	.Kamaxel	
0980						.Intake manifold	.Inloppsrör	
0990						.Exhaust manifold	.Avgassamlare	
1000						.Oil filter	.Oljefilter	
1010						.Oil filler pipe	.Oljepåfyllningsrör	
1020						.Crank case ventilation	.Vevhusventilation	
1030						.Thermostat housing	.Termostathus	
1040						.Multiport fuel injection	.Bränsleinsprutning	
1050						.Ignition system	.Tändsystem	
1060						.Clutch	.Koppling	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

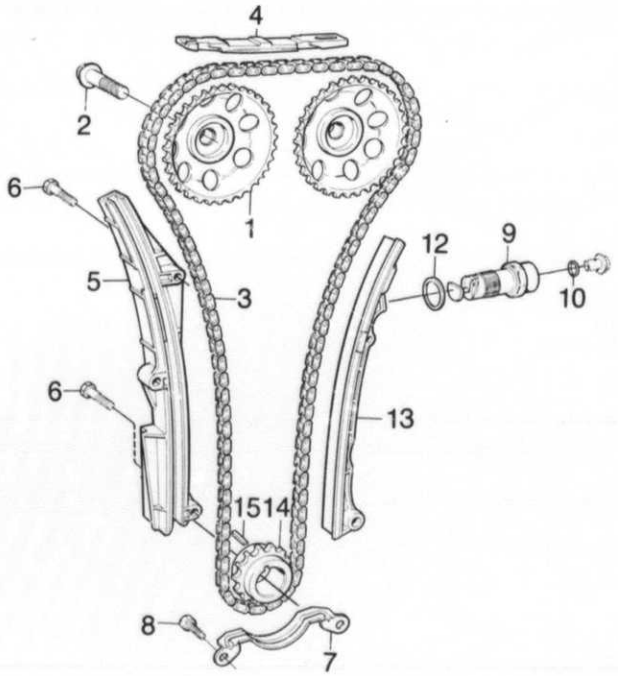

F6287 CAC94

0305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 15 205			2	Chain gear	Kedjehjul	5
0020	2	91 07 541			2	Screw	Skruv	5
0030	3	91 31 145			1	Chain	Kedja	3
0040	3	93 21 845		ALTERNATIVE	1	Chain	Kedja	3
0050						Open, with chain link	Öppen, med kedjelänk	
0060								
0070	4	88 59 324			1	Chain control	Kedjestyrning	3
0080	5	91 45 350			1	Chain control	Kedjestyrning	3
0090	6	80 59 628		-1996	3	Screw	Skruv	5
0095	6	79 78 141		1997-	3	Hexagon screw	Sexkantsskruv	5
0100	7	91 36 532			1	Chain protection	Kedjeskydd	5
0110	8	79 71 294		-1996	2	Screw	Skruv	5
0115	8	79 76 091		1997-	2	Screw	Skruv	5
0120	9	75 85 086			1	Chain tensioner	Kedjesträckare	3
0130	10	80 48 670			1	„O-ring	„O-ring	2
0140	12	75 08 690			1	Seal	Tätning	5
0150	13	91 45 376			1	Chain control	Kedjestyrning	3
0160	14	91 15 197			1	Chain gear	Kedjehjul	4
0170	15	91 16 864			1	Key	Kil	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-C24

Transmission
Balance shaft, 4-cyl

Transmission
Balansaxel, 4-cyl

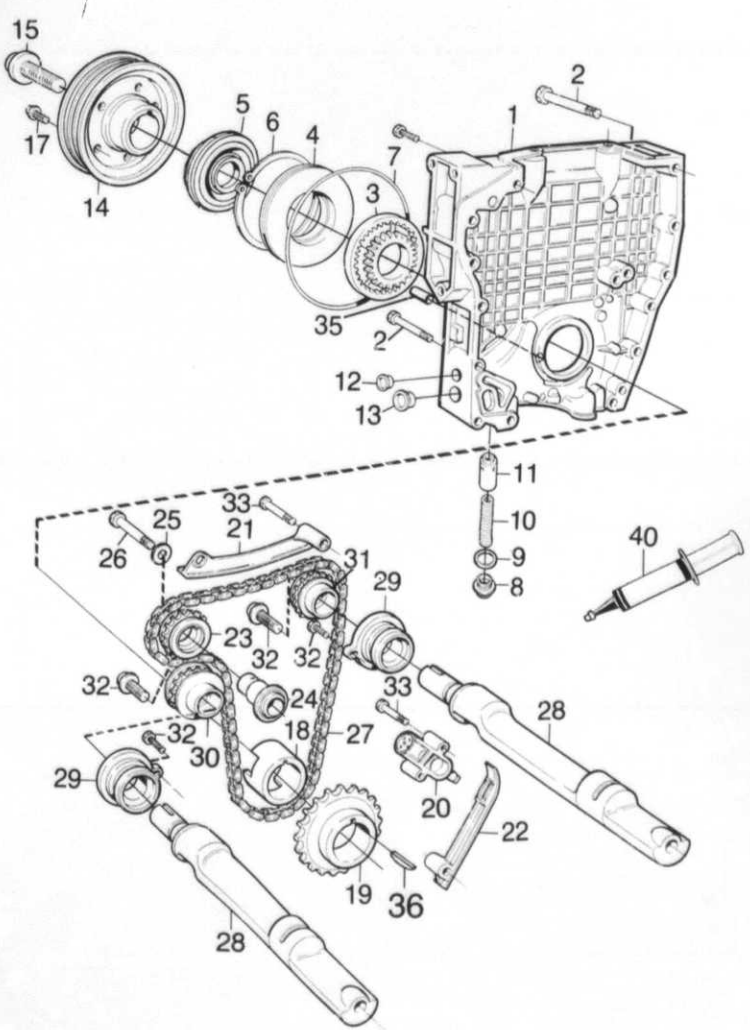

F8313 CAC94

0320	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 43 652			1	Cover	Kåpa	5
0020	2	79 84 891			15	Screw	Skruv	5
0030	3			See page 2-045, 1-D22	1	Pump kit	Pumpsats	
0040	3			See page 2-167, 1-I24	1	Pump kit	Pumpsats	
0050	4	91 38 934			1	Oil pump housing	Oljepumphus	6
0060	5	91 49 964		248)	1	.Seal	.Tätning	2
0070	5	91 73 576		249)	1	.Seal	.Tätning	2
0080	6	91 29 719			1	Lock ring	Låsring	5
0090	7	91 30 600			1	Seal	Tätning	2
0100	8	75 08 955			1	Plug	Propp	5
0110	9	93 55 389			1	Gasket	Packning	4
0120	10	93 09 998			1	Spring	Fjäder	6
0130	11	91 67 784			1	Piston	Kolv	6
0140	12	81 23 168			1	Plug	Plugg	4
0150	13	81 23 192			1	Plug	Plugg	4
0160	14	91 44 841			1	Pulley	Remskiva	4
0170	15	91 16 443			1	Screw	Skruv	5
0180	18	91 29 727			1	Companion flange	Medbringare	5
0190	19	91 38 264			1	Chain gear	Kedjehjul	4
0200	20	91 39 130			1	Chain tensioner	Kedjespännare	3
0210	21	91 45 368			1	Chain control	Kedjestyrning	3
0220	22	91 45 384			1	Chain control	Kedjestyrning	3
0230	23	91 40 658			1	Chain gear	Kedjehjul	4
0240	24	91 45 392			1	Shaft	Axel	5
0250	25	91 30 535			1	Thrust washer	Axialbricka	5
0260	26	79 84 735			1	Screw	Skruv	5
0270	27	74 85 105			1	Chain	Kedja	4
0280	28	*91 32 838*		227) NLS – USE 9174533	2	Balance shaft	Balansaxel	5
0290	28	91 74 533		228)	2	Balance shaft	Balansaxel	5
0300	29	91 15 288			2	Bearing housing	Lagerhus	5
0310	30	91 42 068			1	Chain gear	Kedjehjul	4
0320						outlet	utlopp	
0330	31	91 42 035			1	Chain gear	Kedjehjul	4
0340						inlet	inlopp	
0350	32	80 59 982			2	Screw	Skruv	5
0360	33	80 59 628		-1996	4	Screw	Skruv	5
0370	33	79 78 141		1997-	4	Hexagon screw	Sexkantsskruv	5
0380	34	40 87 235		-1996	2	Screw	Skruv	5
0390	34	79 78 109		1997-	2	Screw	Skruv	5
0400	35	81 17 608			1	Roll p[illegible]	Spännstift	5
0410	36			See page 2-021, 1-C22		Key	Kil	
0420	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5

227. Engine –S082506
228. Engine S082507–
248. Engine –T082719
249. Engine T082720–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Engine body

1-D02 Crankshaft, connecting rod, piston, B204

Motorkropp

Vevaxel, vevstake, kolv, B204

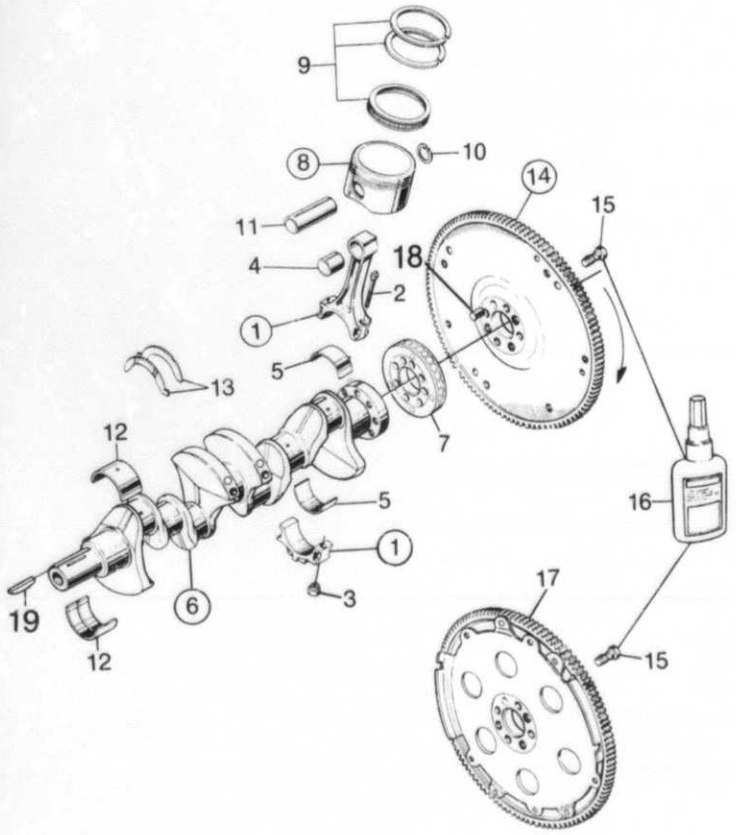

F8314 CAC94

0352	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 81 740			4	Connecting rod	Vevstake	5
0020	2	74 80 643			8	.Screw	.Skruv	5
0030	3	74 80 684			8	.Nut	.Mutter	5
0040	4	91 36 946			4	.Bushing	.Bussning	5
0050	5	91 45 459		STD	8	Con.bearing	Vevstakslager	
0060	5	91 45 467		37), 0,25 MM,	8	Con.bearing	Vevstakslager	
0070	5	91 45 475		37), 0,50 MM,	8	Con.bearing	Vevstakslager	
0080	6	91 39 403			1	Crankshaft	Vevaxel	
0090	7			See page 3A-031, 2-B08	1	Aperture disc	Bländarskiva	
0100								
0110	8	91 49 154		B204I, CLASS AB	4	Piston	Kolv	5
0120	8	91 49 162		B204I, CLASS B	4	Piston	Kolv	5
0130	8	91 49 170		B204I, CLASS C	4	Piston	Kolv	5
0140	8	91 49 188		36), B204I, 0,50 MM	4	Piston	Kolv	5
0150	8	91 49 196		36), B204I, 1,0 MM	4	Piston	Kolv	5
0160								
0170	8	91 49 220		B204S, CLASS AB	4	Piston	Kolv	5
0180	8	91 49 238		B204S, CLASS B	4	Piston	Kolv	5
0190	8	91 49 246		B204S, CLASS C	4	Piston	Kolv	5
0200	8	91 49 253		36),B204S, 0,50 MM	4	Piston	Kolv	5
0210								
0220	8	91 49 295		B204L, CLASS AB	4	Piston	Kolv	5
0230	8	91 49 303		B204L, CLASS B	4	Piston	Kolv	5
0240	8	91 49 311		B204L, CLASS C	4	Piston	Kolv	5
0250	8	91 49 329		36), B204L, 0,50 MM	4	Piston	Kolv	5
0260								
0270	9	91 49 105		STD, I	4	.Piston ring kit	.Kolvringsats	3
0280	9	91 49 113		36), 0,5MM, I	4	.Piston ring kit	.Kolvringsats	3
0290	9	91 49 121		36), 1,0 MM, I	4	.Piston ring kit	.Kolvringsats	3
0300								
0310	9	*91 67 776*		201), STD, TURBO NLS –	4	.Piston ring kit	.Kolvringsats	3
0310				USE 9149105				
0320	9	91 67 891		36,201), 0,5MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0330								
0340	9	91 49 105		202), STD, TURBO	4	.Piston ring kit	.Kolvringsats	3
0350	9	91 49 113		36,202), 0,5MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0360	9	91 49 121		36,202), 1,0 MM, TURBO	4	.Piston ring kit	.Kolvringsats	3
0370								
0380	10	88 59 514			8	Lock ring	Låsring	5
0390	11	75 68 934		I, L=60MM	4	Gudgeon pin	Kolvtapp	5
0400	11	75 68 942		TURBO, L=68MM	4	Gudgeon pin	Kolvtapp	5
0410	12	91 45 418		STD	10	Main bearing	Ramlager	5
0420	12	91 45 426		37), 0,25 MM	10	Main bearing	Ramlager	5
0430	12	91 45 434		37), 0,50 MM	10	Main bearing	Ramlager	5
0440	13	75 68 783			2	Thrust washer	Tryckbricka	4
0460	14	91 43 454		242),B204I, B204S, B204E	1	Flywheel	Svänghjul	5
0465	14	91 79 136		243),B204I, B204S, B204E	1	Flywheel	Svänghjul	5
0470	14	91 43 918		242), B204L	1	Flywheel	Svänghjul	5
0475	14	91 77 007		243), B204L	1	Flywheel	Svänghjul	5
0480	15	91 31 160			8	Screw	Skruv	5
0490	16	74 96 292		50ML	X	Nut lock	Gängsäkring	5
0500						strong	stark	
0510						red	röd	
0520	17	91 46 788		A	1	Companion flange	Medbringare	4
0530	18	91 45 590		241)	1	Pin	Pinne	5
0540	19			See page 2-021, 1-C22		Key	Kil	


36. Oversize. Överdimension.
37. Undersize. Underdimension.
201. Engine -R164231.
202. Engine R164232-.
241. Engine -T039060
242. Engine -T074802
243. Engine T074803-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

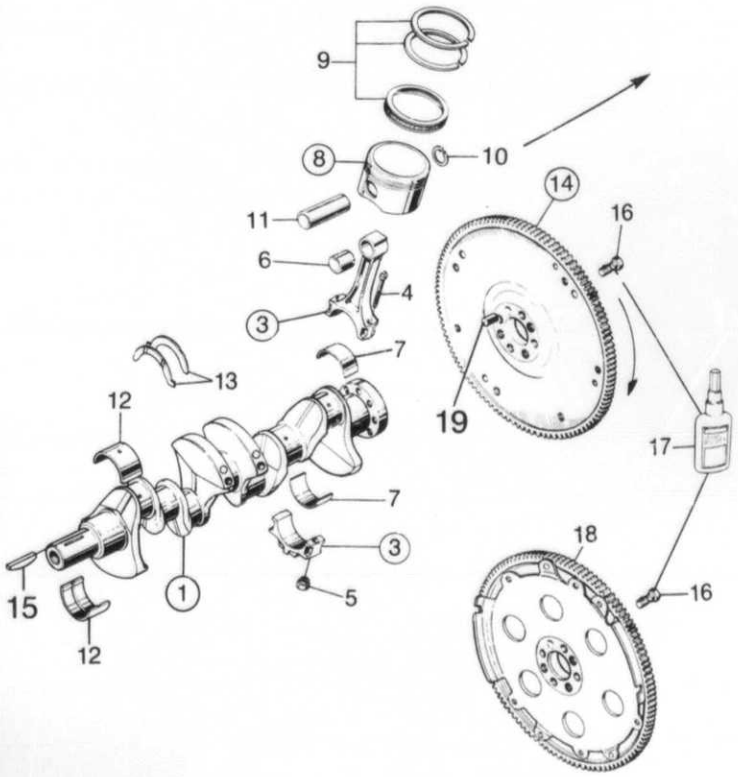

F8315 CAC94

0355	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 39 460			1	Crankshaft	Vevaxel	
0020	3	74 81 740		I	4	Connecting rod	Vevstake	5
0030	3	74 80 841		TURBO	4	Connecting rod	Vevstake	5
0040	4	74 80 643			8	.Screw	.Skruv	5
0050	5	74 80 684			8	.Nut	.Mutter	5
0060	6	91 36 946			4	.Bushing	.Bussning	5
0070								
0080	7	91 45 459		STD,	8	Con.bearing	Vevstakslager	
0090	7	91 45 467		37), 0,25MM	8	Con.bearing	Vevstakslager	
0100	7	91 45 475		37), 0,50MM	8	Con.bearing	Vevstakslager	
0110								
0120	8	91 49 360		I, CLASS AB	4	Piston	Kolv	5
0130	8	91 49 378		I, CLASS B	4	Piston	Kolv	5
0140	8	91 49 386		I, CLASS C	4	Piston	Kolv	5
0150	8	91 49 394		36), I, 0,50 MM	4	Piston	Kolv	5
0160	8	91 49 402		36), I, 1,0 MM	4	Piston	Kolv	5
0170								
0180	8	91 49 436		TURBO, CLASS AB	4	Piston	Kolv	5
0190	8	91 49 444		TURBO, CLASS B	4	Piston	Kolv	5
0200	8	91 49 451		TURBO, CLASS C	4	Piston	Kolv	5
0210	8	91 49 469		36), TURBO, 0,50 MM	4	Piston	Kolv	5
0230								
0240	9	91 49 105		I, STD	4	.Piston ring kit	.Kolvringsats	3
0250	9	91 49 113		36), I, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0260	9	91 49 121		36), I, 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0270								
0280	9	*91 67 776*		201), TURBO, STD NLS - USE 9149105	4	.Piston ring kit	.Kolvringsats	3
0290	9	91 67 891		36,201),TURBO, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0310								
0320	9	91 49 105		202), TURBO, STD	4	.Piston ring kit	.Kolvringsats	3
0330	9	91 49 113		36,202),TURBO, 0,50 MM	4	.Piston ring kit	.Kolvringsats	3
0340	9	91 49 121		36,202),TURBO, 1,0 MM	4	.Piston ring kit	.Kolvringsats	3
0350								
0360	10	88 59 514			8	Lock ring	Låsring	5
0370	11	75 68 934		I, L=60MM	4	Gudgeon pin	Kolvtapp	5
0380	11	75 68 942		TURBO, L=68MM	4	Gudgeon pin	Kolvtapp	5
0390								
0400	12	91 45 418		STD	10	Main bearing	Ramlager	5
0410	12	91 45 426		37), 0,25MM	10	Main bearing	Ramlager	5
0420	12	91 45 434		37), 0,50MM	10	Main bearing	Ramlager	5
0430								
0440	13	75 88 783			2	Thrust washer	Tryckbricka	4
0450	14	91 43 454		242), I	1	Flywheel	Svänghjul	5
0455	14	91 79 136		243), I	1	Flywheel	Svänghjul	5
0460	14	91 43 918		242), TURBO	1	Flywheel	Svänghjul	5
0465	14	91 77 007		243), TURBO	1	Flywheel	Svänghjul	5
0470	15			See page 2-021, 1-C22		Key	Kil	
0475	16	91 31 160			8	Screw	Skruv	5
0480	17	74 96 292		50ML	X	Nut lock	Gängsäkring	5
0490						strong	stark	
0500						red	röd	
0510	18	91 46 788		A	1	Companion flange	Medbringare	4
0520	19	91 45 590		241)	1	Pin	Pinne	5

36. Oversize. Överdimension.
37. Undersize. Underdimension.
201. Engine -R164231.
202. Engine R164232-.
241. Engine -T039060
242. Engine -T074802
243. Engine T074803-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Engine body

1-D06 Cylinder head 6-cylinder

Motorkropp

Cylinderhuvud 6-cylindrig

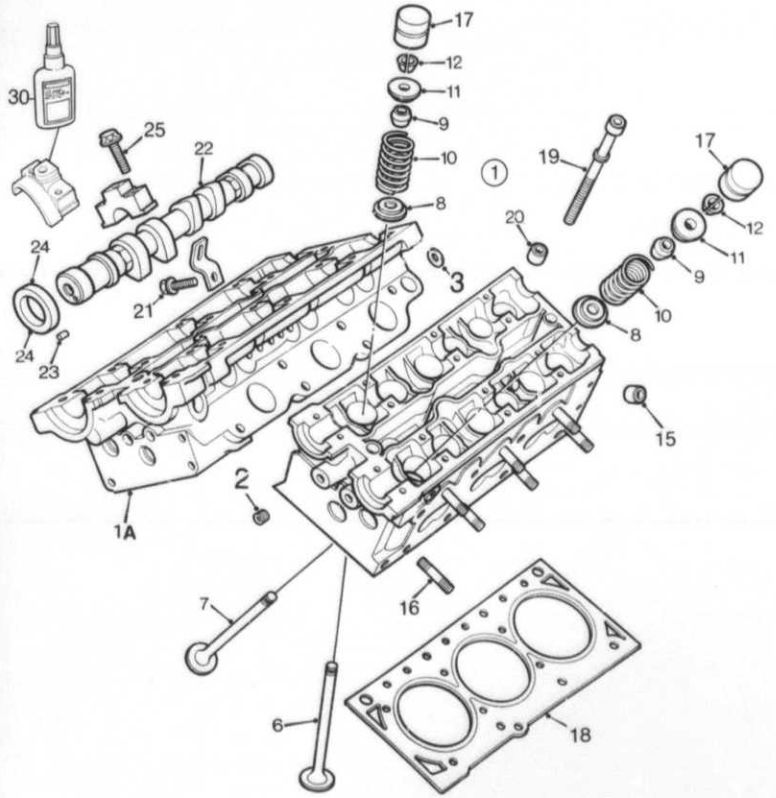

F8008 CAC94

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 660		7), REAR, (CYL.1,3,5)	1	Cylinder head	Cylinderhuvud	5
0020	1	88 22 678		7), FRONT, (CYL.2,4,6)	1	Cylinder head	Cylinderhuvud	5
0023	1A	46 20 621		7), REAR, (CYL.1,3,5)	1	.Cylinder head	.Cylinderhuvud	5
0026	1A	46 20 639		7), FRONT, (CYL.2,4,6)	1	.Cylinder head	.Cylinderhuvud	5
0030	2	45 00 195			8	..Screw plug	..Skruvplugg	3
0040	3	47 70 004		(4500765)	8	..Sealing washer	..Tätningsbricka	3
0050		45 00 781		25MM	1	..Sealing washer	..Tätningsbricka	3
0060		45 02 290		24MM	1	..Screw plug	..Skruvplugg	5
0070	6	45 00 849		INLET	6	.Inlet valve	.Inloppsventil	3
0080	7	46 20 670		EXHAUST	6	.Exhaust valve	.Avgasventil	2
0090	8	45 00 880			12	.Spring washer	.Fjäderbricka	5
0100	9	45 00 898			12	.Seal	.Tätning	3
0110	10	45 00 906			12	.Valve spring	.Ventilfjäder	3
0120	11	45 00 914			12	.Valve spring washer	.Ventilfjäderbricka	4
0130	12	45 00 922			24	.Valve cone	.Knaster	2
0160	15	45 00 823		223)	2	.Sleeve	.Hylsa	5
0165	15	88 22 629		224)	2	.Sleeve	.Hylsa	5
0170	16	45 00 831			7	.Stud	.Pinnskruv	5
0180	17	47 70 301		(4621298)	24	Tappet	Ventillyftare	3
0190	18	47 70 285		(4620704)	2	Gasket	Packning	3
0200	19	45 01 060			16	Screw	Skruv	5
0210	20	43 46 854			1	Screw	Skruv	5
0220	21	45 01 110			1	Screw	Skruv	5
0230	22	47 70 327		39), 1995, (4621322)	2	Camshaft	Kamaxel	5
0235	22	47 70 343		39), 1996-	2	Camshaft	Kamaxel	5
0240	22	47 70 335		38), 1995, (4500963)	2	Camshaft	Kamaxel	5
0245	22	47 70 350		38), 1996-	2	Camshaft	Kamaxel	5
0250	23	46 21 314			1	.Sleeve	.Hylsa	6
0260	24	• 45 03 983		(4770251)	4	Sealing ring	Tätningsring	5
0270	25	45 00 732			16	Screw	Skruv	5
0300	30	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0310						normal	normal	
0320						blue	blå	


7. Also available as exchange unit. Finns även som utbytesenhet.
38. Intake. Inlopp.
39. Exhaust. Avgas.
223. Engine -8165
224. Engine 8166-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

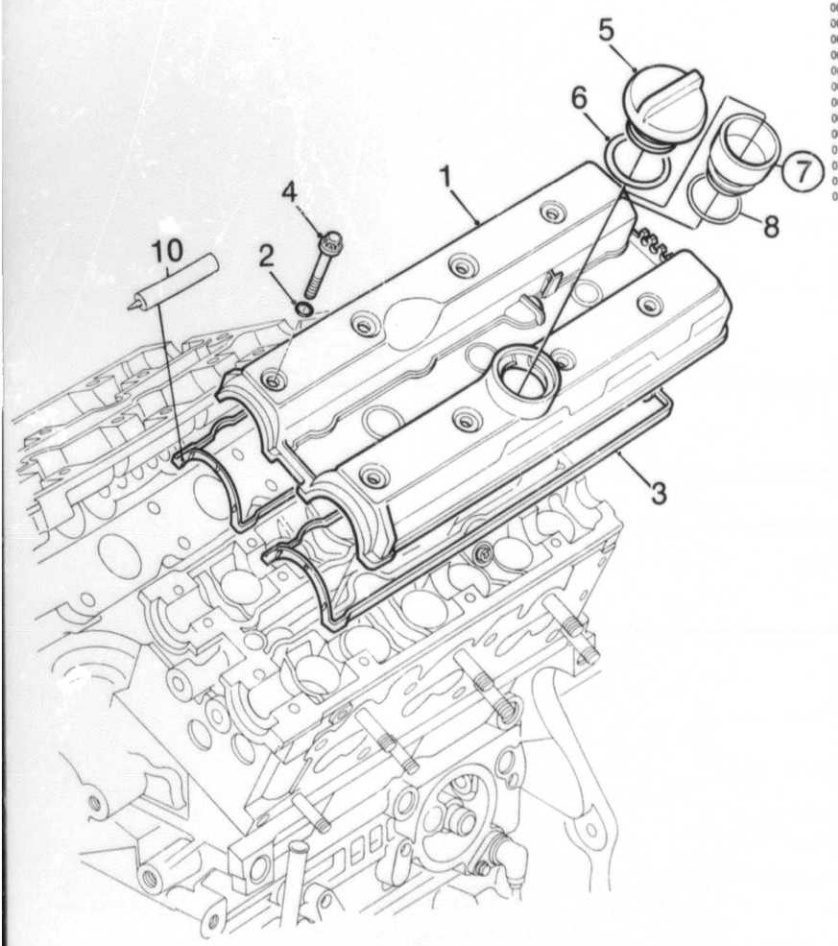

F8260 CAC94

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0380								
0010	1	46 23 732		REAR, (CYL.1,3,5)	1	Valve cover	Ventilkåpa	5
0020	1	46 23 740		FRONT, (CYL.2,4,6)	1	Valve cover	Ventilkåpa	5
0030								
0040	2	45 04 247			8	.O-ring	.O-ring	2
0050	3	47 70 319		(9321969)	1	.Gasket kit	.Packningsats	1
0060				See page 2-167, 1-I24				
0070	4	45 02 274		1995	16	Screw	Skruv	5
0080	4	47 70 376		1996-	16	Screw	Skruv	5
0090	5	45 02 357			1	Oil filler cap	Oljepåfyllningslock	5
0100	6	45 02 373			1	.Seal	.Tätning	5
0110	7	47 28 309		1997-	1	Oil trap	Oljefälla	5
0120	8	45 02 373			1	.Seal	.Tätning	5
0130	10	87 81 841		280 ML	X	Flange sealant	Flänstätning	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24


Engine body

1-D10

Cylinder block
6-cylinder

Motorkropp

Cylinderblock
6-cylindrig

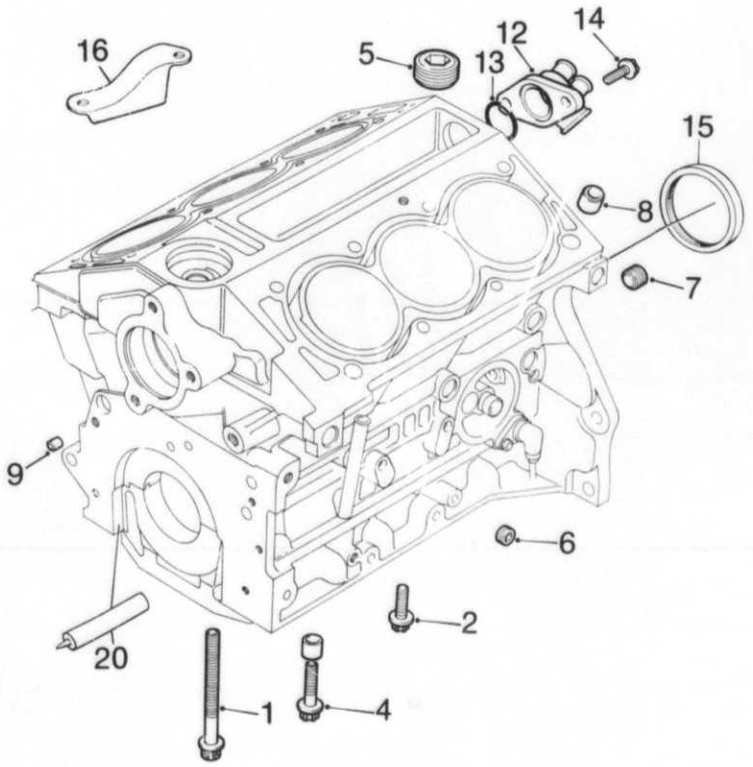

F8010 CAC94


0385	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 00 302			8	Screw	Skruv	5
0020	2	45 00 351			2	Screw	Skruv	5
0030	4	45 00 401			4	Screw	Skruv	5
0040	5	45 00 229		M30X12MM	3	Screw plug	Skruvplugg	3
0050	6	45 00 195		M14X8MM	3	Screw plug	Skruvplugg	3
0060	7	45 00 179		M10X10MM	3	Screw plug	Skruvplugg	3
0070	8	45 00 245		16X12MM	4	Sleeve	Hylsa	5
0080	9	45 00 328		10X6,5MM	2	Sleeve	Hylsa	5
0090	11	45 00 393		15X15MM	4	Sleeve	Hylsa	5
0100	12	44 41 499			1	Pipe end	Stos	5
0110	13	43 46 839			1	O-ring	O-ring	2
0120	14	43 46 854			2	Screw	Skruv	5
0130	15	47 70 095		(4501201)	1	Sealing ring	Tätningsring	3
0140	16	45 00 344			1	Shield plate	Avskärmningsplåt	6
0200	20	87 81 841		280 ML	X	Flange sealant	Flänstätning	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

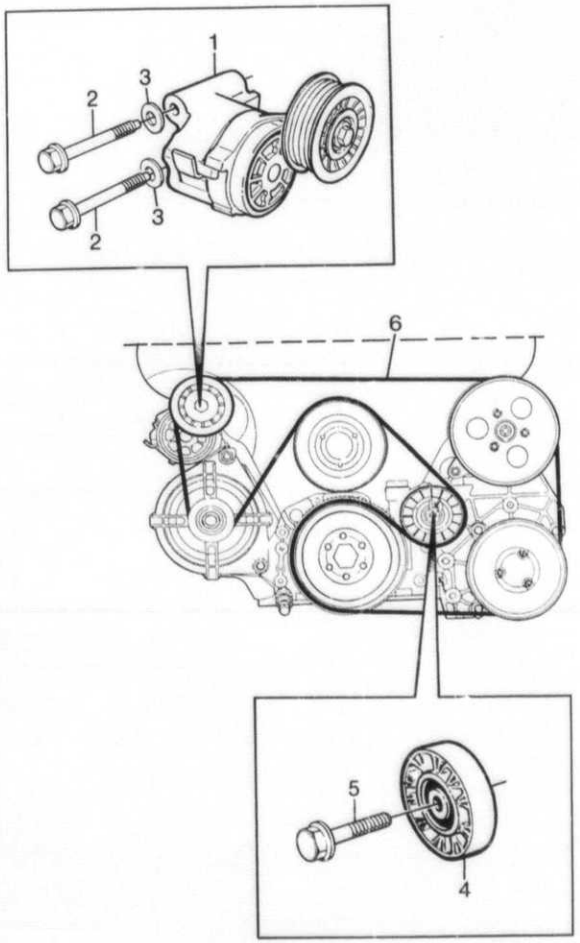

F6294 CAC94

0390	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 37 020			1	Belt tensioner	Remspännare	5
0020	2	79 79 214			2	Screw	Skruv	5
0030	3	80 73 108			2	Washer	Bricka	5
0040	4	42 37 038			1	Tension pulley	Spännrulle	3
0050	5	79 78 190			1	Screw	Skruv	5
0080	6	43 95 430		-1995	1	Belt	Rem	1
0082	6	43 95 463		AC, ACC	1	Belt	Rem	1
0090	6	43 60 541		8), AC, ACC	1	Belt	Rem	1


8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

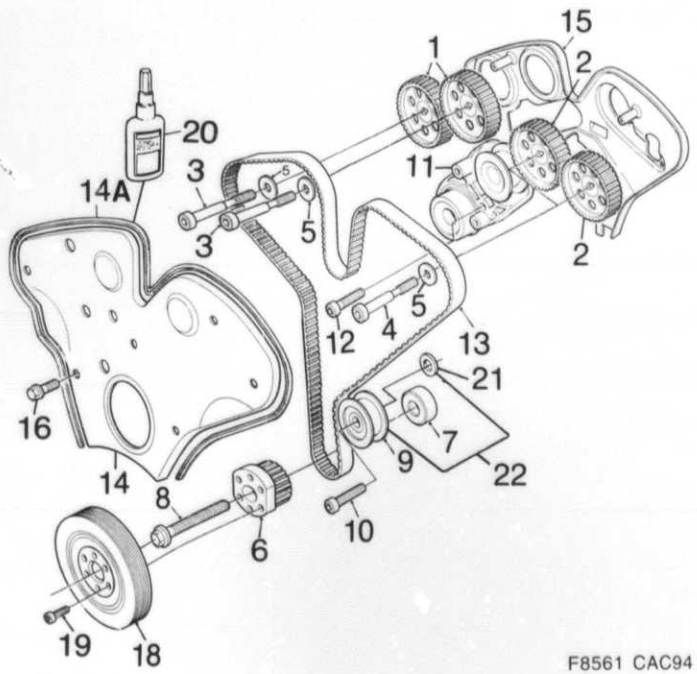

F8561 CAC94

Engine body
1-D14
Transmission
6-cylinder

Motorkropp
Transmission
6-cylindrig

0395	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 991		(CYL.1,3,5)	2	Chain gear	Kedjehjul	5
0030	2	46 23 898		(CYL.2,4,6)	2	Chain gear	Kedjehjul	5
0040	3	45 04 023			2	Screw	Skruv	5
0050	4	45 04 031			2	Screw	Skruv	5
0060	5	45 04 049			4	Thrust washer	Tryckbricka	5
0070	6	45 04 056			1	Crankshaft gear	Vevaxeldrev	5
0080	7	45 04 064			1	Thrust ring	Tryckring	6
0090	8	45 04 072			1	Screw	Skruv	5
0100	9	45 04 080		1995	1	Guide roller	Styrrulle	5
0105	9	47 70 459		1996-	1	Guide roller	Styrrulle	5
0110	10	45 04 106			1	Screw	Skruv	5
0130	11	46 23 906		252)	1	Bracket	Konsol	6
0135	11	47 70 509		253)	1	Bracket	Konsol	6
0140	12	45 04 130			3	Screw	Skruv	5
0150	13	46 21 348		252)	1	Tooth belt	Kuggrem	
0155	13	47 70 491		253)	1	Tooth belt	Kuggrem	
0160	14	46 21 082		252), FRONT	1	Timing gear casing	Transmissionskåpa	5
0165	14	47 70 533		253), FRONT	1	Timing gear casing	Transmissionskåpa	5
0170	14A	45 02 845			1	Seal	Tätning	4
0180	15	45 02 803		1995, REAR	1	Timing gear casing	Transmissionskåpa	5
0185	15	47 70 467		1996-,252), REAR	1	Timing gear casing	Transmissionskåpa	5
0187	15	47 70 525		253), REAR	1	Timing gear casing	Transmissionskåpa	5
0190	16	*45 02 076*		207) NLS – USE 7978091	9	Screw	Skruv	5
0200	16	46 23 724		208)	9	Screw	Skruv	5
0210	17	45 02 829			1	Screw	Skruv	5
0220	18	44 43 214			1	Pulley	Remskiva	4
0230	19	43 46 854			6	Screw	Skruv	5
0240								
0250	20	46 20 084			X	Glue	Lim	
0260	21	47 70 475		1995	1	Thrust ring	Tryckring	6
0270	21	47 70 483		1996-	1	Thrust ring	Tryckring	6
0280	22	47 70 558		1996-	1	Guide roller	Styrrulle	5


207. Engine –54773.
208. Engine 54774–.
252. Engine –146659
253. Engine 146660–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

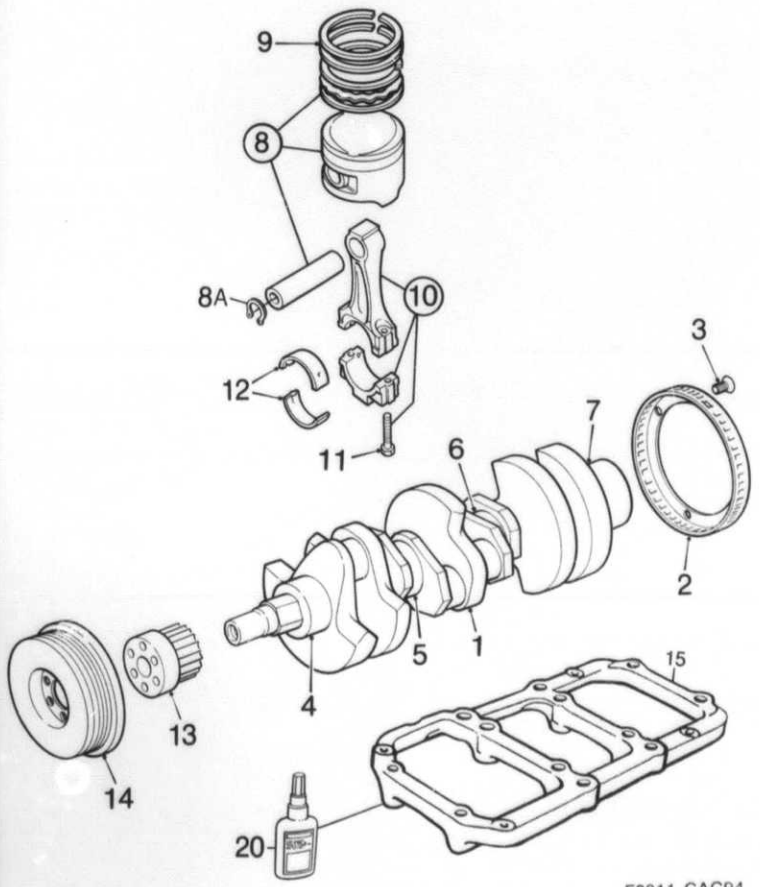

F8011 CAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	• 47 70 236		(4620738)	1	Crankshaft	Vevaxel	
2			See page 3A-031, 2-B08	1	.Aperture disc	.Bländarskiva	
3			See page 3A-031, 2-B08	4	.Screw	.Skruv	
4	93 21 977		STD, (NO. 1)	1	Main bearing	Ramlager	4
4	93 21 985		37), 0,25MM, (NO. 1)	1	Main bearing	Ramlager	4
4	93 21 993		37), 0,50MM, (NO. 1)	1	Main bearing	Ramlager	4
5	88 21 779		17), STD, (NO. 2, 3)	2	Main bearing	Ramlager	4
5	88 21 787		37,17) 0,25MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
5	88 21 795		37,17) 0,50MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
6	88 21 829		16), STD, (NO. 2, 3)	2	Main bearing	Ramlager	4
6	88 21 837		37,16) 0,25MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
6	88 21 845		37,16) 0,50MM,(NO. 2, 3)	2	Main bearing	Ramlager	4
7	88 21 720		STD, (NO. 4)	1	Main bearing	Ramlager	4
7	88 21 738		37), 0,25MM, (NO. 4)	1	Main bearing	Ramlager	4
7	88 21 746		37), 0,50MM, (NO. 4)	1	Main bearing	Ramlager	4
8	46 20 829		CLASS 8 CYL. Ø 85,976–85,985MM	6	Piston	Kolv	5
8	46 20 837		CLASS 99 CYL. Ø 85,986–85,995MM	6	Piston	Kolv	5
8	46 20 845		CLASS 00 CYL. Ø 85,996–86,005MM	6	Piston	Kolv	5
8	46 20 852		CLASS 01 CYL. Ø 86,006–86,015MM	6	Piston	Kolv	5
8	46 20 860		CLASS 02 CYL. Ø 86,016–86,025MM	6	Piston	Kolv	5
8	88 22 447		36)	6	Piston	Kolv	5
8			1)	1	.Gudgeon pin	.Kolvtapp	
8A	• 91 79 292			2	.Lock ring	.Låsring	5
9	88 22 413		STD	1	.Piston ring kit	.Kolvringsats	3
	46 20 951			1	..Compression ring	..Kompressionsring	6
	46 20 977			1	..Compression ring	..Kompressionsring	6
			1)	2	..Oil scraper ring	..Oljeskrapring	
			1)	1	..Spacer ring	..Distansring	
9	88 22 421		36)	1	.Piston ring kit	.Kolvringsats	3
	88 22 454			1	..Compression ring	..Kompressionsring	6
	88 22 462			1	..Compression ring	..Kompressionsring	6
			1)	2	..Oil scraper ring	..Oljeskrapring	
			1)	1	..Spacer ring	..Distansring	
10	88 22 496			1	Connecting rod kit	Vevstaksats	5
			1)	6	.Connecting rod	.Vevstake	
11	45 01 789			12	.Screw	.Skruv	5
12	88 22 504		STD	6	Big end bearing kit	Vevstakslagersats	5
12	88 22 512		37), 0,25MM	6	Big end bearing kit	Vevstakslagersats	5
12	88 22 520		37), 0,50MM	6	Big end bearing kit	Vevstakslagersats	5
13			See page 2-037, 1-D14		Crankshaft gear	Vevaxeldrev	
14			See page 2-037, 1-D14		Pulley	Remskiva	
15	46 20 019			1	Bearing carrier	Lagerhållare	4

1. Not as separate spare part. Ej som separat reservdel.
16. For I without catalytic converter. För I utan katalytisk reaktor.
17. For I with catalytic converter. För I med katalytisk reaktor.
36. Oversize. Överdimension.
37. Undersize. Underdimension.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-D18 Crankshaft, connecting rod, piston, 6-cyl.

Vevaxel, vevstake, kolv, 6-cyl.

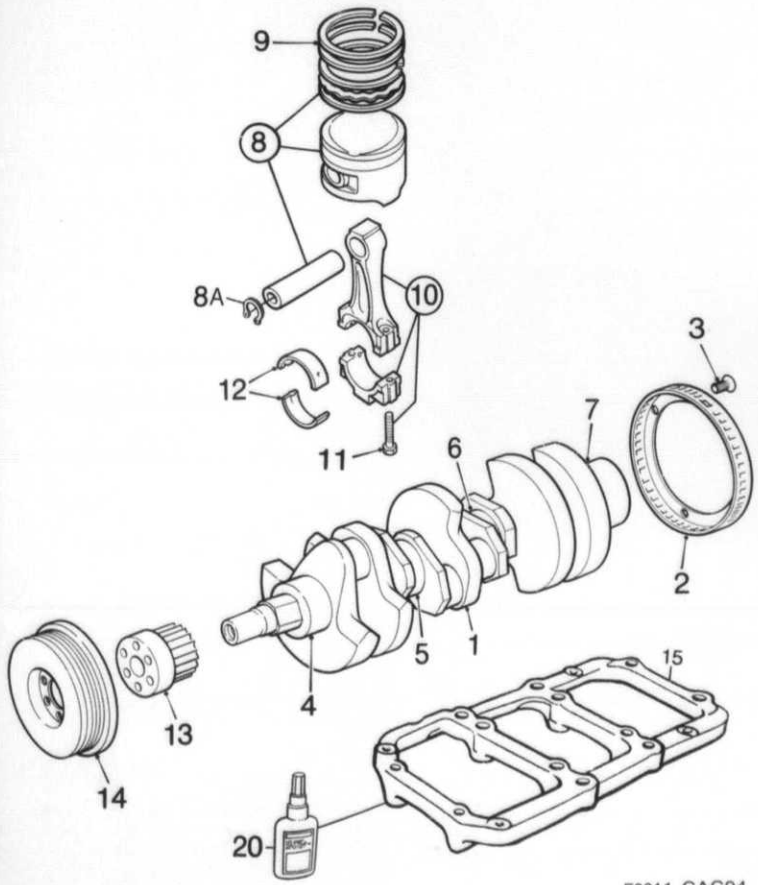

F8011 CAC94


0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	20	• 74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0610						normal	normal	
0620						blue	blå	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

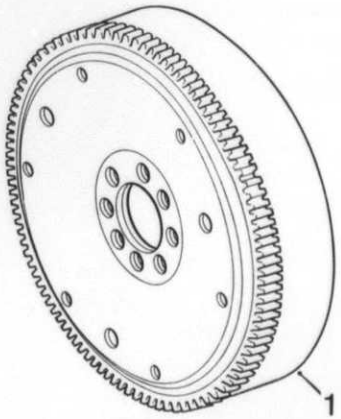

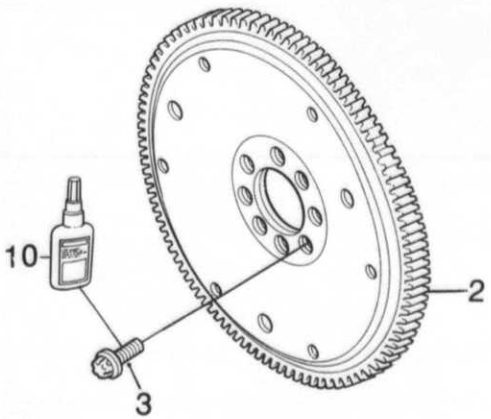

F8012 CAC94

0410	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 40 210		M	1	Flywheel	Svänghjul	5
0020	2	43 84 244		A	1	Companion flange	Medbringare	4
0030	3	44 40 251			8	Screw	Skruv	5
0100	10	74 96 292		50 ML	X	Nut lock	Gängsäkring	5
0110						strong	stark	
0120						red	röd	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Lubrication system

1-D22 Oil pump, oil filter, 4-cylinder

Smörjsystem

Oljepump, oljefilter, 4-cylindrig

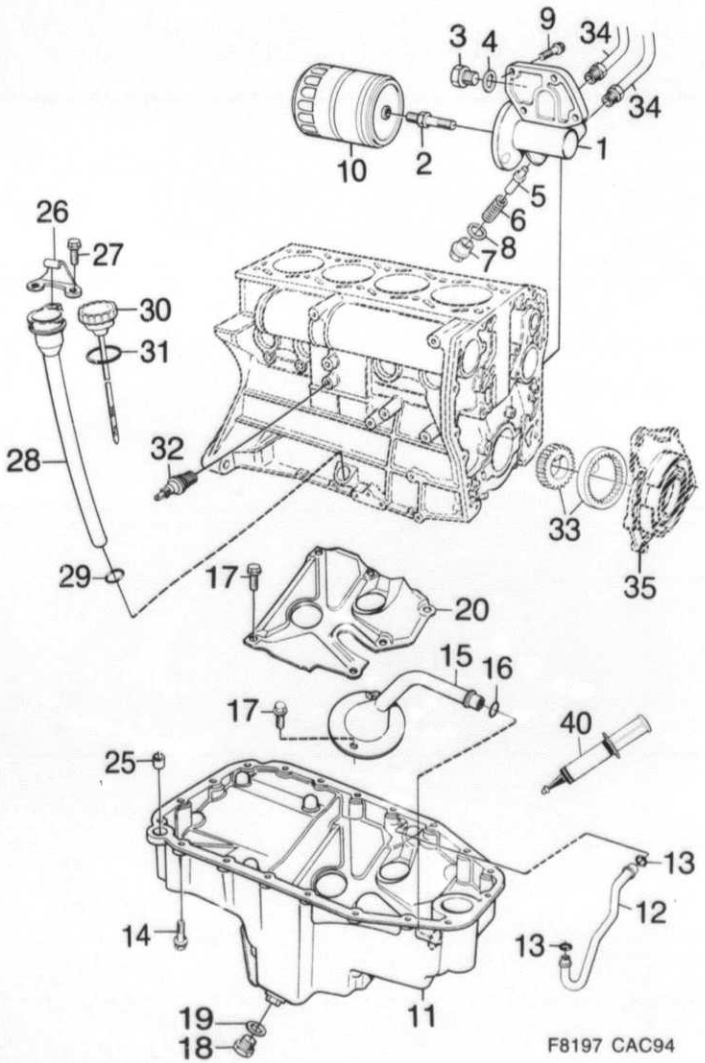

0440	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 38 645			1	Intermediate section	Mellanstycke	6
0020	1	91 46 622		22)	1	Intermediate section	Mellanstycke	6
0030	2	83 48 609			1	Junction pipe	Skarvrör	6
0040	3	*81 23 721*		I NLS – USE 7563042	1	Plug	Propp	5
0050	4	81 24 141		I	1	Seal	Tätning	5
0060	5	91 48 370		22)	1	Thermostat	Termostat	2
0070	6	91 48 388		22)	1	Spring	Fjäder	5
0080	7	91 48 396		22)	1	Plug	Propp	5
0090	8	91 48 404		22)	1	Seal	Tätning	5
0100	9	80 59 800		-1995	4	Screw	Skruv	5
0105	9	79 78 216		1996-	4	Hexagon screw	Sexkantsskruv	5
0110	10	91 44 445			1	Filter	Filter	1
0120	11	91 44 023			1	Sump	Oljesump	6
0130	12	91 30 618		231)	1	Tube	Rör	4
0135	12	91 75 696		232)	1	Tube	Rör	4
0140	13	91 37 993			2	O-ring	O-ring	2
0150	14	40 87 243		-1996	18	Screw	Skruv	5
0155	14	79 78 208		1997-	18	Screw	Skruv	5
0160	15	91 65 564			1	Oil pipe	Oljesugrör	6
0170	16	91 38 009			1	O-ring	O-ring	2
0180	17	79 71 294			7	Screw	Skruv	5
0190	18	91 32 929			1	Plug	Propp	1
0200	19	91 32 937			1	Gasket	Packning	1
0210	20	91 44 049			1	Protection	Skydd	6
0220	25	83 46 470			1	Guide	Styrning	
0230	26	87 89 638		I	1	Bracket	Fäste	6
0240	26	*87 87 723*		TURBO NLS – USE 9125899	1	Bracket	Fäste	6
0250	27	79 71 294		-1995	2	Screw	Skruv	5
0255	27	79 78 091		1996-	2	Screw	Skruv	5
0260	28	74 81 617		I	1	Tube	Rör	6
0270	28	87 87 707		TURBO	1	Tube	Rör	6
0280	29	91 38 108			1	‚O-ring	‚O-ring	2
0290	30	91 17 466		1994, I	1	Dipstick	Oljesticka	3
0300	30	87 87 731		1994, TURBO	1	Dipstick	Oljesticka	3
0310	30	91 70 630		1995-, I	1	Dipstick	Oljesticka	3
0320	30	91 70 655		1995-, TURBO	1	Dipstick	Oljesticka	3
0330	31	93 61 544			1	‚Ring-gland	‚Packningsring	4
0340	32	91 12 459			1	Eng. oil pressure sensor	Oljetrycksgivare	3
0350	33	93 21 936		See page 2-167, 1-I24	1	Pump kit	Pumpsats	5
0360	34			See page 2-139, 1-H20		Hose	Slang	
0365	35			See page 2-023, 1-C24		Oil pump housing	Oljepumphus	
0370	40	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0380								
0390		88 19 138		TURBO	X	Service kit	Servicesats	1
0400		74 96 011		I	X	Service kit	Servicesats	1
0410				See page 2-167, 1-I24				

22. For cars equipped with an air-cooled oil cooler. För bilar med luftoljekylare motor.
231. Engine -T010437
232. Engine T010438-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-C05
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-D24

Sump, oil filter
6-cylinder

Oljesump, oljefilter
6-cylindrig

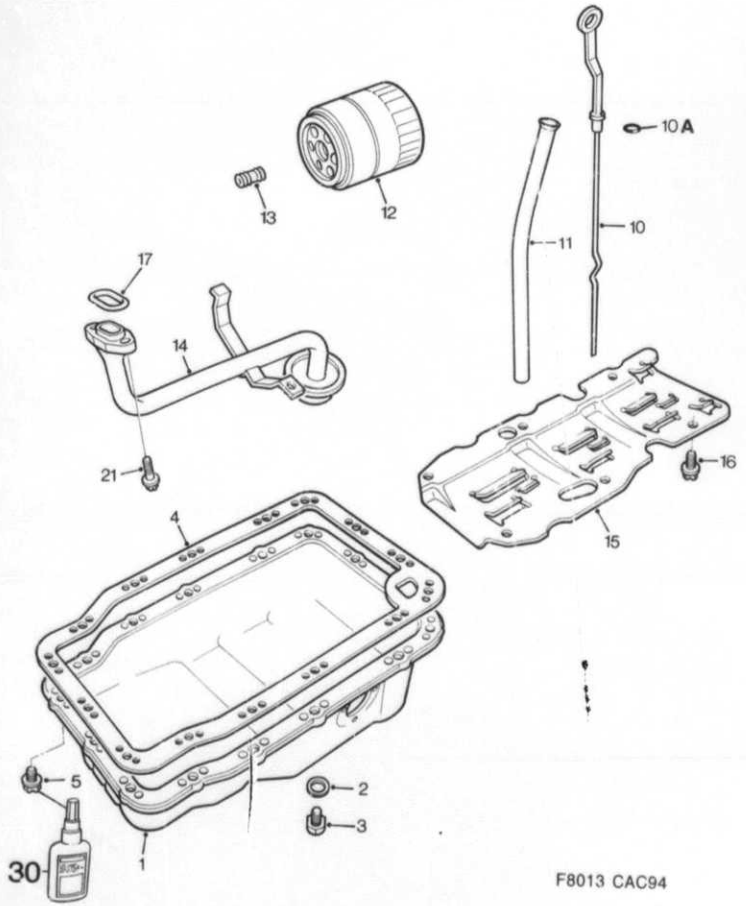

F8013 CAC94

0445	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S i
0010	1	46 20 027			1	Sump	Oljesump	6
0020	2	43 45 716		(4502134)	1	.Sealing ring	.Tätningsring	1
0030	3	45 02 142			1	.Screw plug	.Skruvplugg	1
0040	4	45 02 167			1	Gasket	Packning	3
0050	5	90 01 110			17	Screw	Skruv	5
0060	10	46 20 142			1	Dipstick	Oljesticka	3
0070	10A	46 20 225			2	.O-ring	.O-ring	2
0080	11	45 27 008			1	Oil-level tube	Oljenivårör	6
0090	12	45 02 696			1	Filter	Filter	1
0100	13	45 02 712			1	Junction pipe	Skarvrör	6
0110	14	45 02 308			1	Oil pipe	Oljesugrör	6
0120	15	46 21 074			1	Baffle plate	Skvallplåt	
0130	16	47 70 038			6	Screw	Skruv	5
0140	17	45 02 332			1	Sealing ring	Tätningsring	4
0150	21	45 02 274		1995	2	Screw	Skruv	5
0155	21	47 70 376		1996-	2	Screw	Skruv	5
0160	30	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0161						normal	normal	
0162						blue	blå	
0163								
0170		74 96 250		See page 2-167, 1-I24	X	Service kit	Servicesats	1

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	1-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Lubrication system

1-E02 *Oil pump 6-cylinder*

Smörjsystem

Oljepump 6-cylindrig

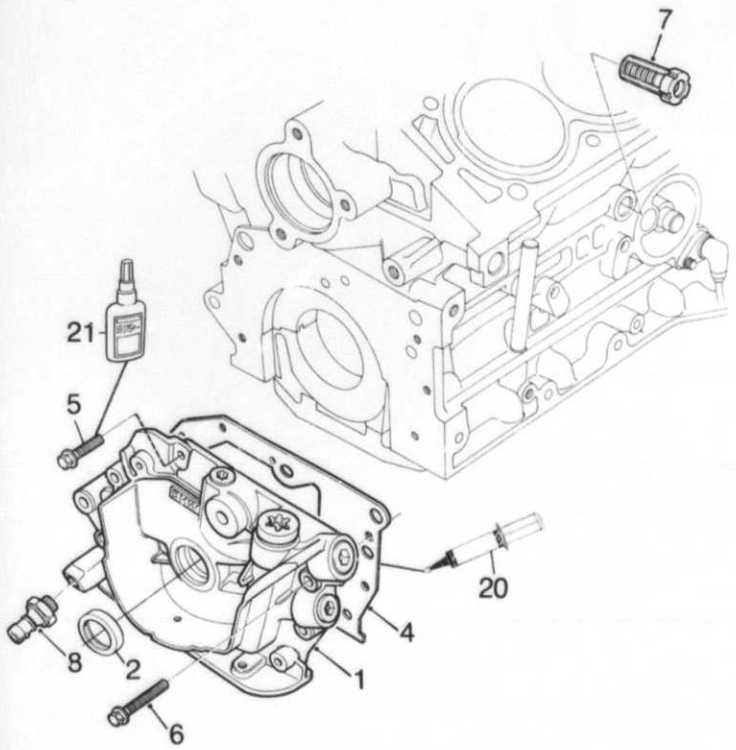

F8014 CAC94


0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 02 241			1	Oil pump	Oljepump	4
0015	2	46 22 296			1	.Seal	.Tätning	2
0016	3	45 02 290		M22X10MM	1	.Screw plug	.Skruvplugg	5
0020	4	45 02 258			1	Gasket	Packning	4
0030	5	45 02 274		1995	1	Screw	Skruv	5
0035	5	47 70 376		1996-	1	Screw	Skruv	5
0040	6	45 00 732			5	Screw	Skruv	5
0050	7	45 00 419			1	By-pass valve	By-passventil	6
0060	8	45 04 585		1995	1	Eng. oil pressure sensor	Oljetrycksgivare	3
0070	8	47 70 186		1996-	1	Eng. oil pressure sensor	Oljetrycksgivare	3
0100	20	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0110	21	74 96 268		50 ML	X	Nut lock	Gängsäkring	5
0120						normal	normal	
0130						blue	blå	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

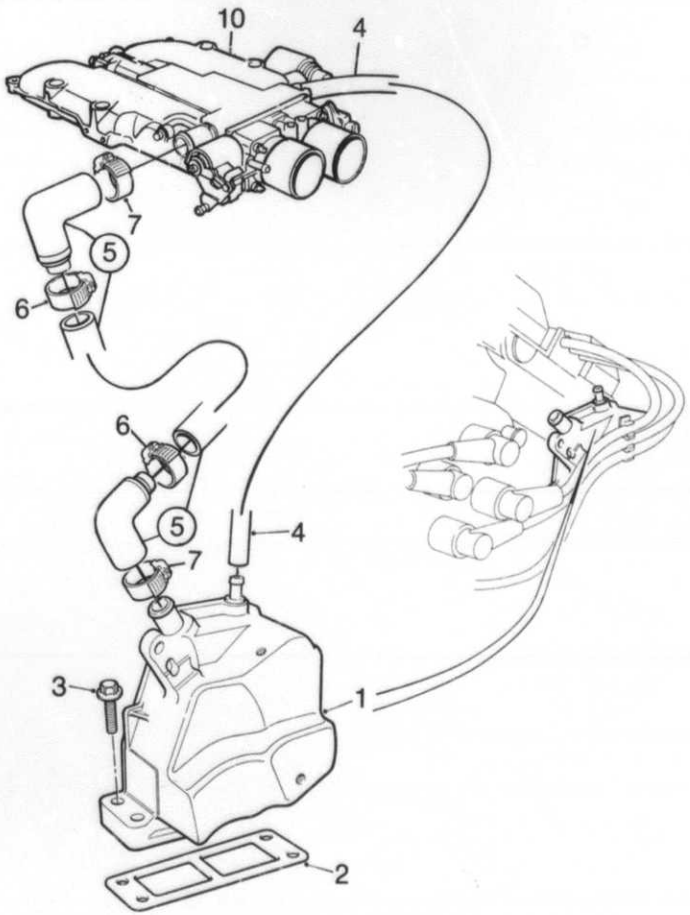

F8198 CAC94

Lubrication system

1-E04

Crank case ventilation 6-cylinder

Smörjsystem

Vevhusventilation 6-cylindrig

0455	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 70 160		(4504882)	1	Pos. crankc. vent. valve	Ventil	
0020	2	45 02 738			1	Gasket	Packning	2
0030	3	45 02 753			4	Screw	Skruv	5
0040	4	43 91 975			1	Hose	Slang	
0050	5	45 27 230			1	Hose	Slang	
0060	6	• 45 76 583			2	•Hose clamp	•Slangklamma	
0070	7	• 45 76 583			2	Hose clamp	Slangklamma	
0100	10			See page 2-087, 1-F16		Intake manifold	Inloppsrör	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Lubrication system

1-E06 Oil pipe TURBO

Smörjsystem

Oljerör TURBO

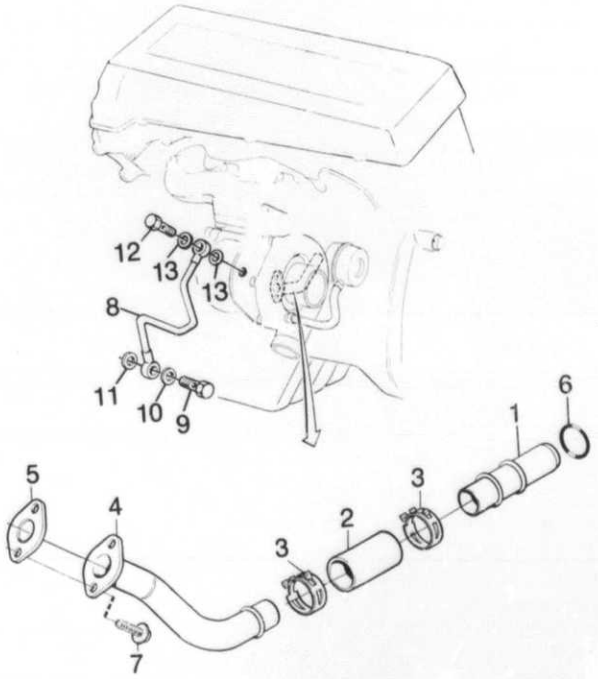

F6302 CAC94

0470	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 29 396			1	Tube	Rör	5
0020	2	91 46 192			1	Hose	Slang	5
0030	3	75 86 050			2	Clamp	Klamma	5
0040	4	91 46 176		T25	1	Tube	Rör	5
0050	4	91 68 220		213), TD04	1	Tube	Rör	5
0055	4	91 76 140		214), TD04	1	Tube	Rör	5
0060	5	91 14 075			1	Gasket	Packning	5
0070	6	75 02 263			1	O-ring	O-ring	2
0080	7	80 59 768		-1995	2	Screw	Skruv	5
0085	7	81 25 015		1996-	2	Screw	Skruv	5
0090	8	91 46 168		T25	1	Tube	Rör	5
0100	8	91 70 473		TD04	1	Tube	Rör	5
0110	9	91 43 967			1	Banjo screw	Banjoskruv	5
0120	10	81 24 141			1	Seal	Tätning	5
0130	11	*83 26 712*		NLS – USE 4161162	1	Seal	Tätning	5
0140	12	91 36 524			1	Banjo screw	Banjoskruv	5
0150	13	81 24 133			2	Gasket	Packning	5

213. Engine -S54880
214. Engine S54881-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-E08 Air cleaner / Luftrenare
4-cylinder Turbo / 4-cylindrig Turbo

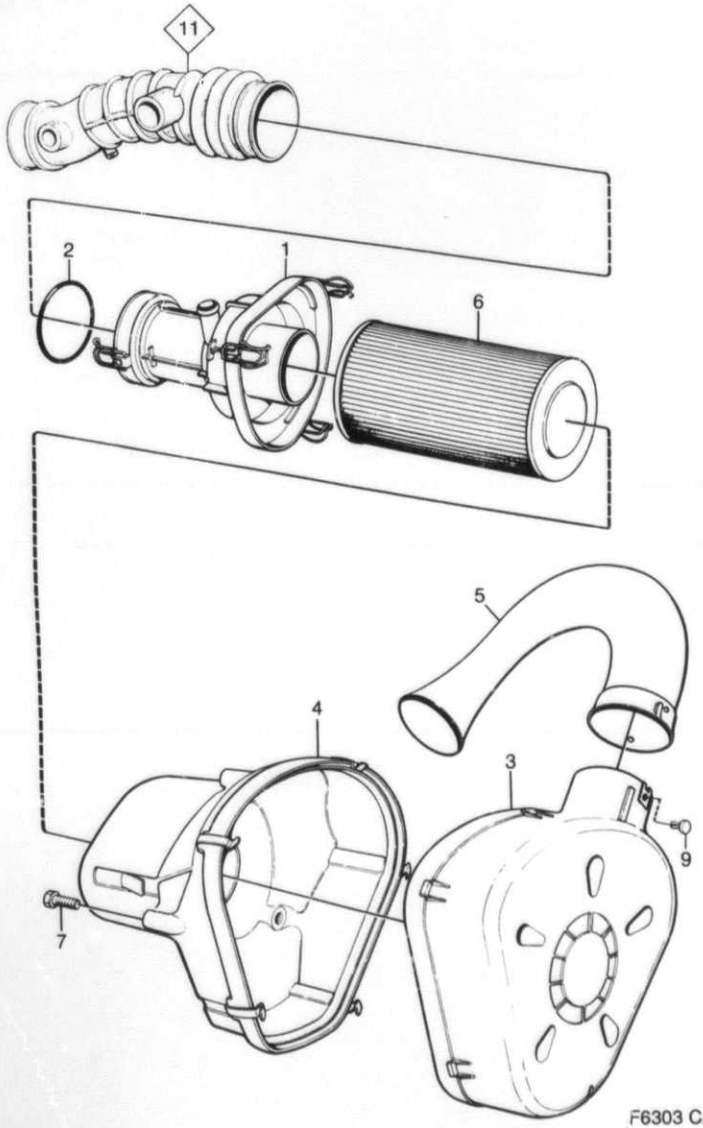

F6303 CAC94


0651	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 16 861			1	Cover	Lock	6
0020	2	40 23 834			1	▪O-ring	▪O-ring	3
0030	3	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0040	4	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0050	5	93 90 915			1	Pipe	Rör	6
0060	6	93 90 907			1	Air filter	Luftfilter	1
0070	7	79 78 091			3	Screw	Skruv	5
0080	9	95 65 417			1	Rivet	Nit	3
0100	11			See page 2-161, 1-I18		Hose	Slang	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

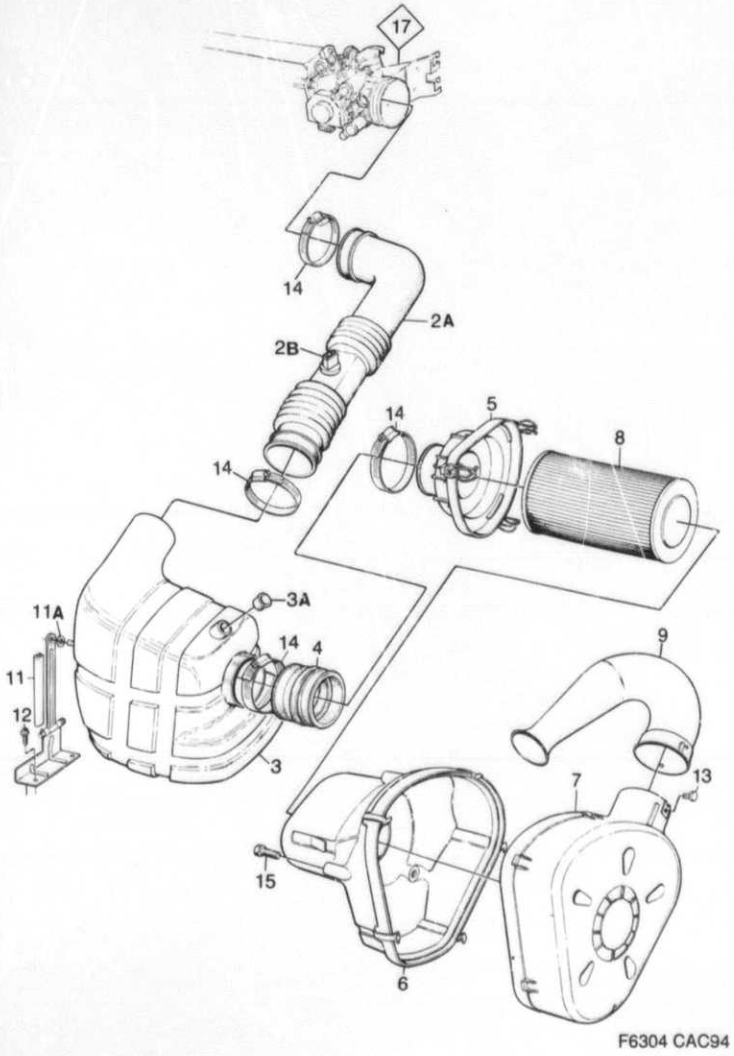

F6304 CAC94

0680	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2A	43 90 308			1	Hose	Slang	4
0020	2B			See page 2-135, 1-H16	1	Temperature sensor	Temperaturgivare	
0030	3	41 58 234			1	Silencer	Ljuddämpare	5
0040	3A	45 25 028			1	▪Plug	▪Plugg	4
0050	4	40 15 947			1	Hose	Slang	4
0060	5	40 16 861			1	Cover	Lock	6
0070	6	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0080	7	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0090	8	93 90 907			1	Air filter	Luftfilter	1
0100	9	89 78 488			1	Pipe	Rör	6
0110	10	41 58 168			1	Bracket	Fäste	5
0120	11	95 28 910		195)	1	▪Protection	▪Skydd	5
0130	11A	79 33 500			1	▪Bushing	▪Bussning	5
0140	13	95 65 417			1	Rivet	Nit	3
0150	14	79 70 155			6	Hose clamp	Slangklamma	5
0160	15	79 77 788			3	Screw	Skruv	5
0180	17			See page 2-089, 1-F18		Throttle body	Spjällhus	

195. Ch. -R1021574.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-E12 Air cleaner 6-cylinder / Luftrenare 6-cylindrig

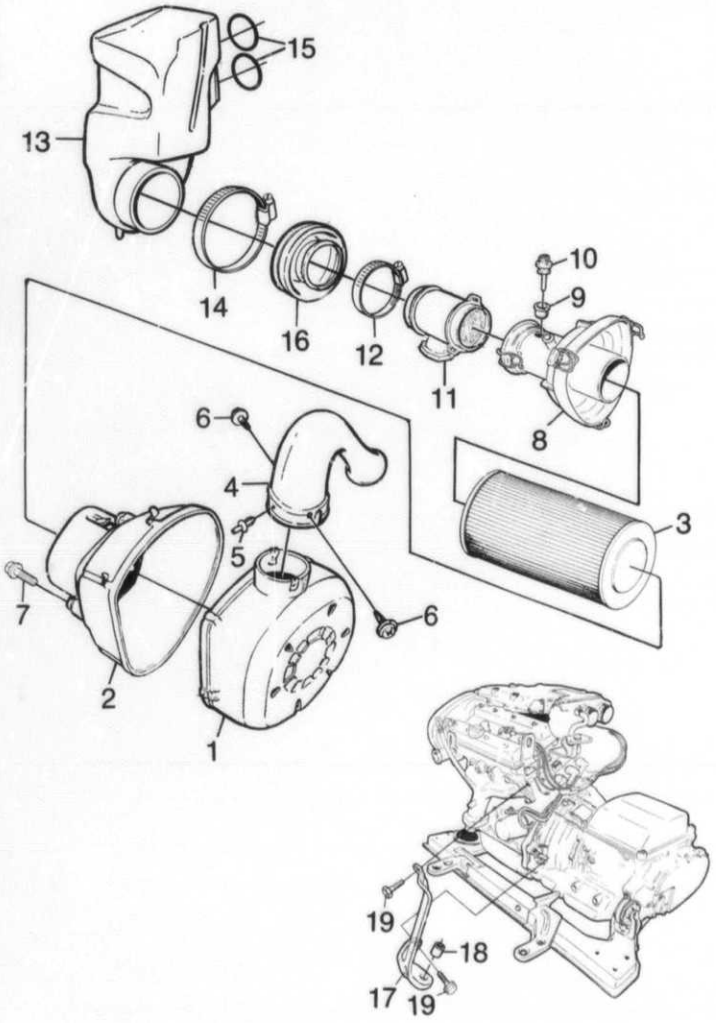

F6305 CAC94

0690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 91 616			1	Air cleaner housing	Luftrenarhus	6
0020	2	93 90 170			1	Air cleaner housing	Luftrenarhus	6
0030	3	93 90 907			1	Air filter	Luftfilter	1
0040	4	89 76 813			1	Air tube	Luftrör	6
0050	5	95 65 417			1	Rivet	Nit	3
0060	6	79 72 938			2	Screw	Skruv	5
0070	7	79 78 091			3	Screw	Skruv	5
0080	8	41 64 877			1	Cover	Lock	6
0090	9	44 40 574			1	Rubber bushing	Gummibussning	5
0100	10	42 39 067		-1995	1	Intake air temp. sensor	Temperaturgivare	
0110	10	42 39 067		1996-	1	Intake air temp. sensor	Temperaturgivare	
0120	10	46 60 593		200), 1996-	1	Intake air temp. sensor	Temperaturgivare	8
0130	10	46 60 593		1996-, US, CA	1	Intake air temp. sensor	Temperaturgivare	8
0140	11	43 00 562		-1995	1	Mass air flow sensor	Luftmassamätare	4
0150	11	43 00 562		1996-	1	Mass air flow sensor	Luftmassamätare	4
0160	11	46 61 070		200), 1996-	1	Mass air flow sensor	Luftmassamätare	8
0170	11	46 61 070		1996, US, CA	1	Mass air flow sensor	Luftmassamätare	8
0175	11	47 80 193		1997-	1	Mass air flow sensor	Luftmassamätare	8
0180	12	79 70 155			1	Hose clamp	Slangklamma	5
0190	13	41 64 919			1	Silencer	Ljuddämpare	5
0200	14	41 64 885			1	▲Bellows	▲Bälg	6
0210	15	44 42 307			1	▲O-ring	▲O-ring	8
0220	16	79 70 189			1	▲Clamp	▲Klammer	5
0230	17	44 41 887			1	Bracket	Fäste	5
0240	18	75 12 593			1	▲Rubber bushing	▲Gummibussning	5
0250	19	79 78 265			1	Hexagon screw	Sexkantsskruv	5

200. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-E14

Filler pipe
Påfyllningsrör

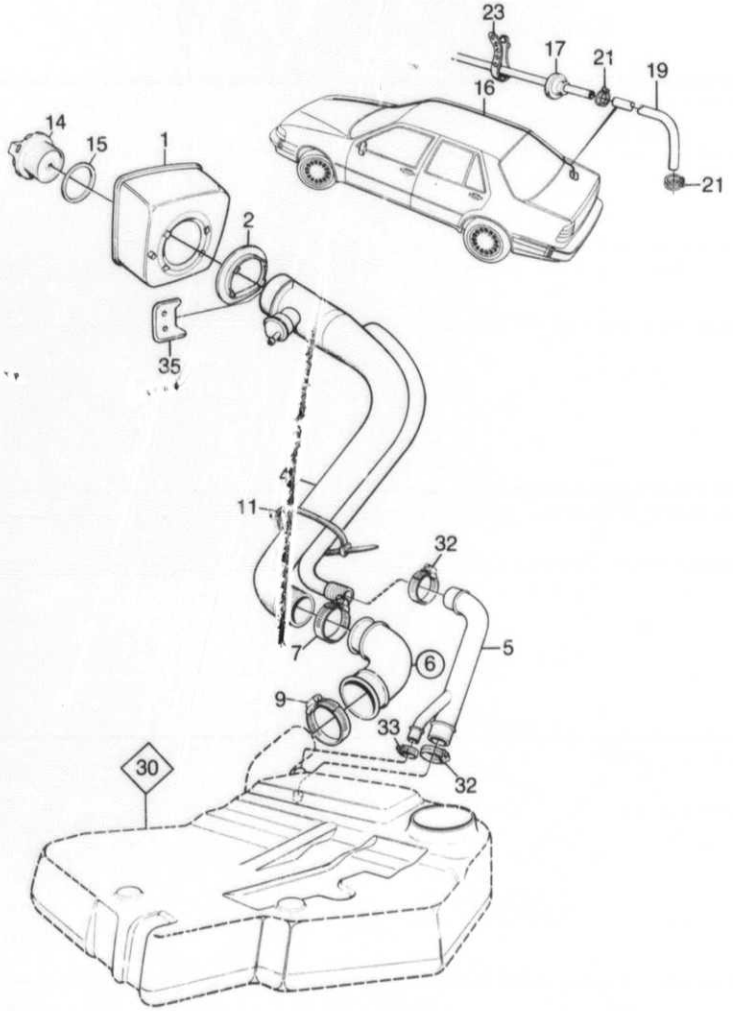

F6306 CAC94

0812	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 90 423		-1997, 4D	1	Filler pipe	Påfyllningsrör	5
0020	1	43 90 431		5CS	1	Filler pipe	Påfyllningsrör	5
0030	2	40 23 362			1	.Washer	.Bricka	5
0040	4	40 20 996			1	Filler pipe	Påfyllningsrör	8
0050	5	88 22 140			1	Hose	Slang	8
0060		45 27 255		1)	1	.Hose	.Slang	5
0070	(32)	79 70 080			2	.Hose clamp	.Slangklamma	5
0080	(33)	79 77 879			1	.Hose clamp	.Slangklamma	5
0090	6	88 22 132			1	Hose	Slang	8
0100		45 27 248		1)	1	.Hose	.Slang	5
0110	7	44 41 697			1	.Hose clamp	.Slangklamma	5
0120	9	44 41 689			1	.Hose clamp	.Slangklamma	5
0130	11	79 71 880			1	Tensioning band	Spännband	4
0140	14	43 91 058		1994	1	Filler cap	Tanklock	2
0150	14	43 97 048		1995-	1	Filler cap	Tanklock	8
0160	15	75 11 751			1	.Gasket	.Packning	8
0170	16	40 21 002			1	Tube	Rör	
0180	16				1			
0190	17	40 21 010			1	.Grommet	.Genomföring	5
0200	19	40 17 844			1	.Hose	.Slang	5
0210	21	79 73 522			2	.Hose clamp	.Slangklamma	5
0220	23	93 92 606			3	Tensioning band	Spännband	5
0230	30			See page 2-063, 1-E16		Tank	Tank	
0240	32	45 26 836			1	Hose clamp	Slangklamma	5
0250	33	79 77 879			1	Hose clamp	Slangklamma	5
0260	35			See page 8A-023, 4-C24		Sealing collar	Tätningskrage	


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

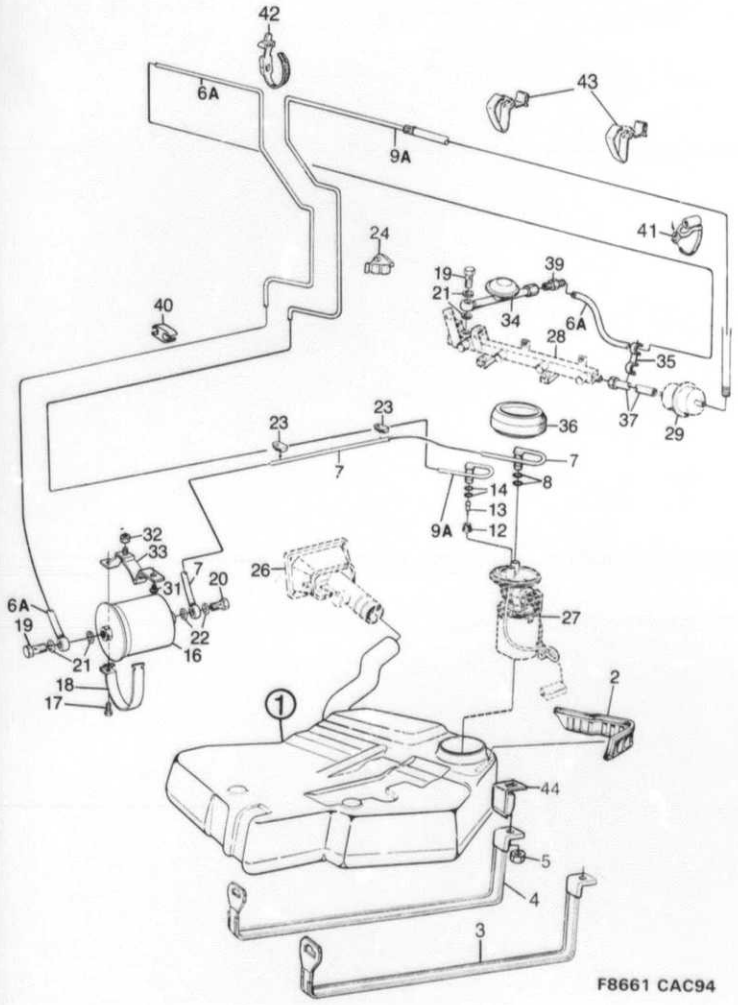

Fuel system

1-E16

Fuel tank

Bränslesystem

Bränsletank

0820	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S
0010	1	41 62 665			1	Tank	Tank	
0020	2	93 88 034			1	Support	Stöd	6
0030	3	89 75 153		LH	1	Tensioning band	Spännband	6
0040	4	40 15 426		-1995, RH	1	Tensioning band	Spännband	6
0050	4	40 15 426		1996-, RH	1	Tensioning band	Spännband	6
0060	4	47 50 162		1996-, RH, ME, PA	1	Tensioning band	Spännband	6
0070	5	79 71 922			2	Nut	Mutter	3
0080								
0090	6A	44 40 129		23), 4-CYL, I	1	Fuel pipe	Bränsleledning	8
0100	6A	44 40 079		23), 4-CYL, TURBO	1	Fuel pipe	Bränsleledning	8
0110	6A	44 41 184		23), 4-CYL, B234TURBO ME	1	Fuel pipe	Bränsleledning	5
0120	6A	45 25 234		23), 6-CYL	1	Fuel pipe	Bränsleledning	8
0130								
0140	7	41 61 758			1	Fuel pipe	Bränsleledning	8
0150	8	79 74 546			2	.O-ring	.O-ring	8
0160								
0170	9A	44 40 137		24), 4-CYL, I	1	Fuel pipe	Bränsleledning	8
0180	9A	44 40 087		24), 4-CYL, TURBO	1	Fuel pipe	Bränsleledning	8
0190	9A	45 25 242		24), 6-CYL	1	Fuel pipe	Bränsleledning	8
0200	12	89 77 779			1	.Non-return valve	.Backventil	6
0210	13	89 77 761			1	.Valve peg	.Ventilkägla	6
0220	14	79 74 546			2	.O-ring	.O-ring	8
0230								
0240	16	41 63 853			1	Fuel filter	Bränslefilter	8
0250	17	79 77 465			1	Screw	Skruv	5
0260	18	40 16 820			1	Tensioning band	Spännband	6
0270	19	43 74 203			2	Banjo bolt	Hålbult	5
0280	20	43 74 211			1	Banjo bolt	Hålbult	5
0290	21	44 43 883			4	Seal	Tätning	5
0300	22	41 61 162			2	Seal	Tätning	5
0310	23	*93 82 870*		NLS - USE 8978827	4	Clamp	Klammer	5
0320	24	89 78 827			3	Clamp	Klammer	5
0330						Cowl	Torped	
0340	26			See page 2-061, 1-E14		Filler pipe	Påfyllningsrör	
0350	27			See page 2-065, 1-E18		Fuel pump	Bränslepump	
0360	28			See page 2-067, 1-E20		Tube	Rör	
0370	29			See page 2-067, 1-E20		Regulator	Regulator	
0380	31	93 93 968			1	Rivet	Nit	5
0390	32	79 67 979			1	Nut	Mutter	5
0400	33	41 57 723			1	Bracket	Fäste	6
0410	34	41 64 232			1	Absorber	Dämpare	8
0420	35	73 98 464		TURBO	1	Clamp	Klammer	5
0430	35	79 71 864		I	1	Tensioning band	Spännband	5
0440	36	41 60 305			1	Seal	Tätning	3
0450	37			See page 2-067, 1-E20		Fuel pipe	Bränsleledning	
0460	39	93 68 234			1	Nipple	Nippel	5
0470	40	93 84 298			6	Clamp	Klammer	5
0480	41	41 64 364		6-CYL	1	Tensioning band	Spännband	5
0490	42	79 84 750		6-CYL	2	Tensioning band	Spännband	5
0500	43	43 91 538		6-CYL	2	Clamp	Klamma	5
0510								
0520	44	47 29 349		1996-, RH	1	Tank stop	Tankstopp	

23. Pressure Tryck
24. Return Retur

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-E18

Fuel pump
Bränslepump

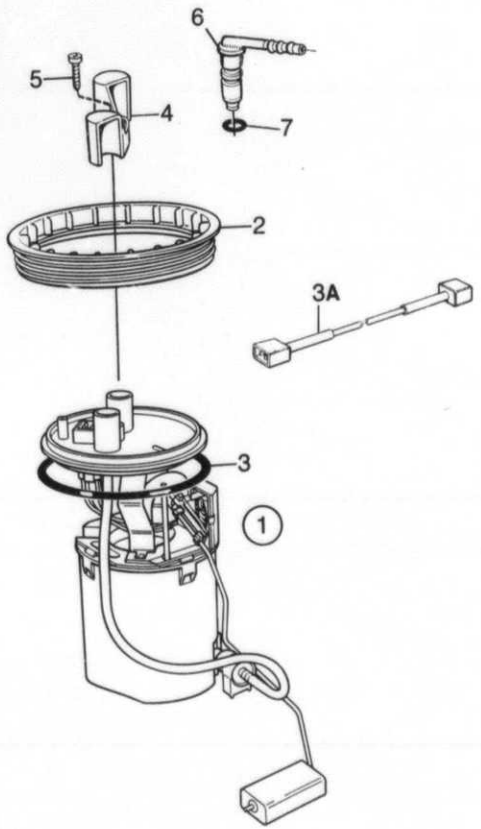

F6308 CAC94

0865	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 21 878			1	Fuel pump	Bränslepump	8
0020	2	41 56 550			1	.Cover	.Lock	8
0030	3	41 60 511			1	.Seal	.Tätning	8
0040	3A	43 93 195			1	.Connection	.Skarv	5
0050	4	43 92 957			1	Lock brace	Låsbygel	5
0060	5	79 71 344			1	Screw	Skruv	5
0070	6	41 61 766			1	Non-return valve	Backventil	8
0080	7	79 74 546			1	O-ring	O-ring	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Fuel system

1-E20 Distribution pipe 4-cylinder

Bränslesystem

Fördelningsrör 4-cylindrig

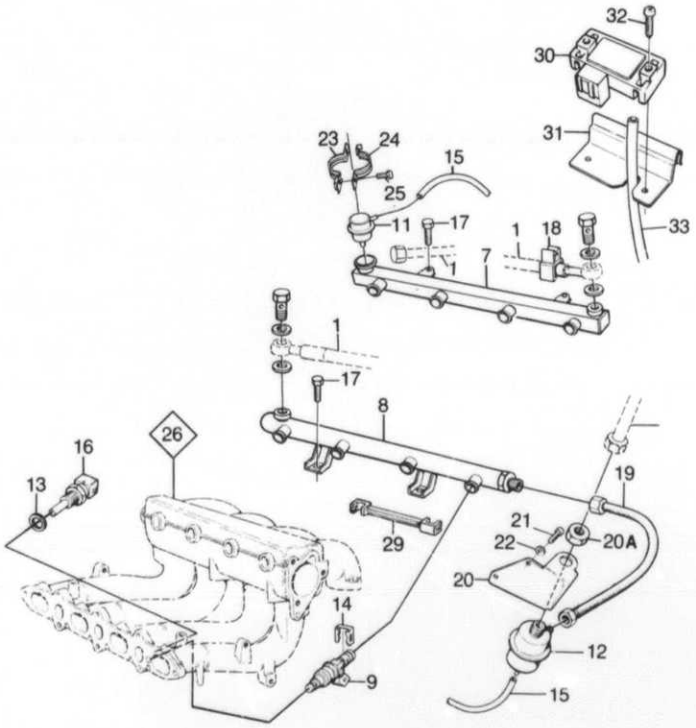

F6309 CAC94

0905	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-063, 1-E16	1	Fuel pipe	Bränsleledning	
0020	7	91 37 035		258), TURBO	1	Fuel rail	Bränslefördelningsrör	8
0030	7	91 71 596		259), TURBO	1	Tube	Rör	8
0040	8	87 88 473		I	1	Tube	Rör	8
0050	9	91 42 449		7), TURBO	4	Injector	Insprutningsventil	8
0060	9	91 42 423		7), I	4	Injector	Insprutningsventil	8
0070	11	91 31 061		258), TURBO	1	Fuel pressure regulator	Bränsletryckregulator	8
0080	11	47 70 400		259), TURBO	1	Fuel pressure regulator	Bränsletryckregulator	8
0090	12	74 86 921		I	1	Regulator	Regulator	8
0100	13	*41 59 265*		NLS – USE 4443883	1	Seal	Tätning	5
0110	14	93 56 486		-1997	4	Clamp	Klammer	5
0120	14	• 91 75 464		1998-	4	Clamp	Klammer	5
0130	15	91 36 243		TURBO, L=130 MM	1	Vaccum hose	Vakuumslang	5
0140	15	91 36 243		I, L=290 MM	1	Vaccum hose	Vakuumslang	5
0150	16	91 37 803		-1995	1	Intake air temp. sensor	Temperaturgivare	4
0160	16	91 77 213		1996-	1	Intake air temp. sensor	Temperaturgivare	8
0170	16	87 88 200		-1995, TCS	1	Intake air temp. sensor	Temperaturgivare	2
0180	17	80 59 768		-1995, I	2	Screw	Skruv	5
0190	17	79 71 294		-1995, TURBO	2	Screw	Skruv	5
0200	17	79 78 091		1996-	2	Screw	Skruv	5
0210	18	41 58 846		TURBO	1	Clamp	Klammer	5
0220	19	74 86 954		I	1	Fuel pipe	Bränsleledning	8
0230	20	88 58 359		I	1	Bracket	Fäste	5
0240	20A	81 51 177		I	1	Nut	Mutter	5
0250	21	79 72 466		I	2	Screw	Skruv	5
0260	23	91 28 836		258), TURBO	1	Bracket	Fäste	5
0270	23	45 03 819		259), TURBO	1	Clamp	Klämma	5
0280	24	91 28 851		258), TURBO	1	Bracket	Fäste	5
0290	25	79 71 294		-1995, TURBO	1	Screw	Skruv	5
0300	25	79 78 091		1996-,258), TURBO	3	Screw	Skruv	5
0310	25	*79 78 380*		259), TURBO NLS – USE 8029944, 8059420	1	Screw	Skruv	5
0320	26			See page 2-081, 1-F10		Intake manifold	Inloppsrör	
0330	26			See page 2-083, 1-F12		Intake manifold	Inloppsrör	
0340	29	91 38 231			2	Retainer	Hållare	3
0350	30	91 32 374			1	Pressure sensor	Tryckgivare	8
0360	31	41 61 899			1	Bracket	Konsol	
0370	32	79 22 396			2	Screw	Skruv	5
0380	33	44 41 945		TURBO	1	Vaccum hose	Vakuumslang	8
0390	33	43 91 942		I	1	Vaccum hose	Vakuumslang	3
0400								
0410		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

7. Also available as exchange unit. Finns även som utbytesenhet.
258. Engine –V018876.
259. Engine V018877–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

Fuel system

1-E22 Fuel rail 6-cylinder

Bränslesystem

Bränslefördelningsrör 6-cylindrig

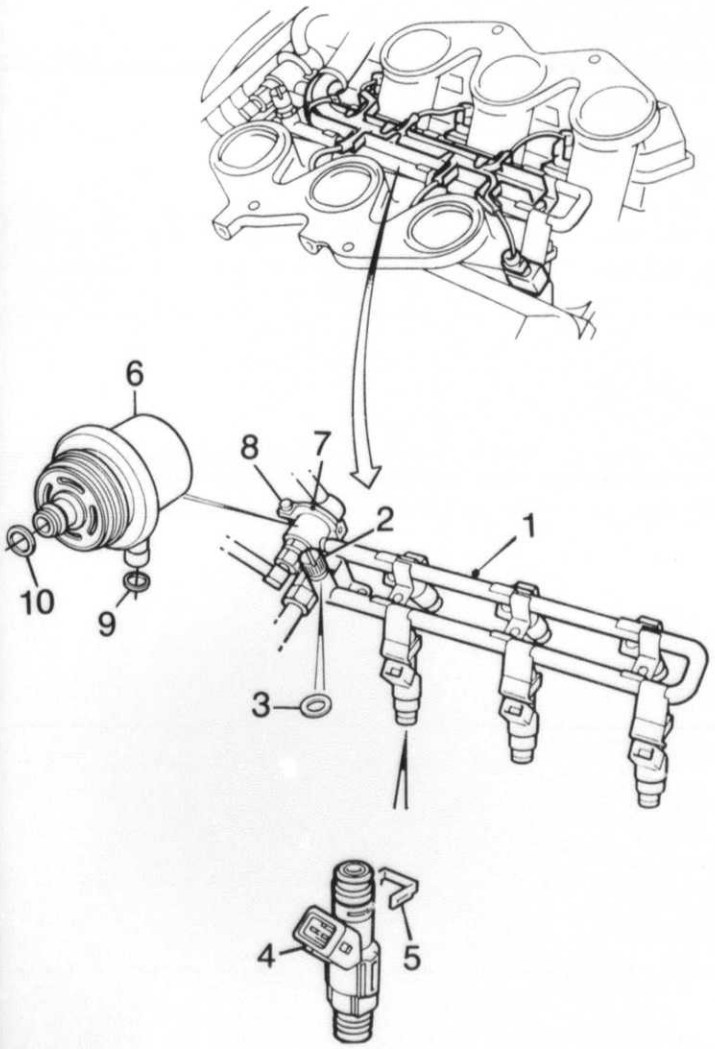

F7995 CAC94

0906	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 21 108			1	Fuel rail	Bränslefördelningsrör	8
0020	2	45 03 744			1	.Valve	.Ventil	8
0030	3	45 03 751			1	.Washer	.Bricka	5
0040	4	47 70 384		1995	6	Injector	Insprutningsventil	8
0050	4	47 70 392		1996-	6	Injector	Insprutningsventil	8
0060	5	45 03 785			6	Spring clamp	Fjäderklämma	5
0070	6	45 03 793		1995	1	Fuel pressure regulator	Bränsletryckregulator	8
0080	6	47 70 400		1996-	1	Fuel pressure regulator	Bränsletryckregulator	8
0090	7	45 03 819			1	Clamp	Klämma	5
0100	8	45 03 835			1	Screw	Skruv	5
0110	9	47 70 434			1	Washer	Bricka	5
0120	10	47 70 442			1	Washer	Bricka	5

MASTER INDEX

0	General	-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24


Fuel system

1-E24 Engine control module MOTRONIC

Bränslesystem

Styrdon MOTRONIC

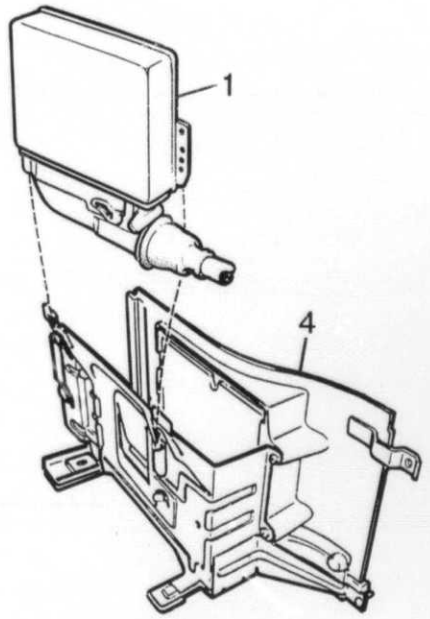

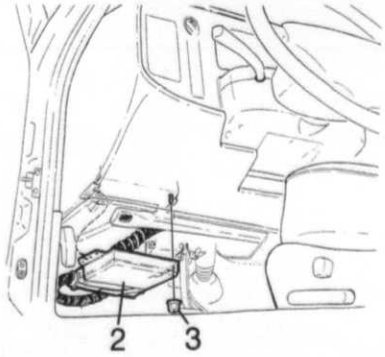

F8375 CAC94

0907	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 64 554		7), B308	1	Engine control module	Styrdon	8
0020	1	43 02 691		7,200), B308	1	Engine control module	Styrdon	3
0030								
0040	2	43 02 527		7), 1996, B308 A, US,CA	1	Engine control module	Styrdon	8
0050	2	* 47 80 235		7),1997-, B308 A, US,CA	1	Electronic unit	Elektronikenhet	8
0060	3	40 87 128		1996-, B308, US, CA	1	Plastic nut	Plastmutter	5
0070								
0080	4			See page 2-077, 1-F06		Bracket	Fäste	


7. Also available as exchange unit. Finns även som utbytesenhet.
200. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

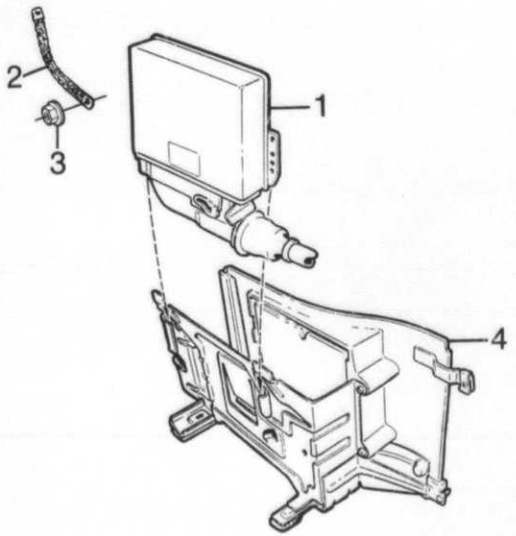

F8376 CAC94

Fuel system

1-F02 Engine control module TRIONIC

Bränslesystem

Styrdon TRIONIC

0908	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010								
0020				B204		B204	B204	
0030								
0040	1	43 00 349		7), 1994, B204I	1	Engine control module	Styrdon	3
0050	1	43 00 331		7), 1994, B204S	1	Engine control module	Styrdon	3
0060	1	43 00 844		7), 1994, B204L	1	Engine control module	Styrdon	3
0070								
0080	1	43 01 925		7), 1995, B204I	1	Engine control module	Styrdon	3
0090	1	43 02 642		7,200), 1995, B204I, DE	1	Engine control module	Styrdon	3
0100	1	43 01 933		7), 1995, B204S	1	Engine control module	Styrdon	3
0110	1	46 61 146		7), 1995, B204S, A	1	Engine control module	Styrdon	3
0120	1	43 01 941		7), 1995, B204L	1	Engine control module	Styrdon	3
0130								
0140	1	43 01 925		7), 1996-, B204I	1	Engine control module	Styrdon	3
0150	1	43 02 642		7,200), 1996-, B204I	1	Engine control module	Styrdon	3
0160	1	46 60 833		7), 1996-, B204E	1	Engine control module	Styrdon	3
0170	1	46 60 841		7,200), 1996-, B204E	1	Engine control module	Styrdon	3
0180	1	43 01 941		7), 1996-, B204L	1	Engine control module	Styrdon	3
0190	1	46 61 260		7,200), 1996-, B204L	1	Engine control module	Styrdon	3
0200								
0210				B234		B234	B234	
0220								
0230	1	43 00 356		7), 1994, B234I	1	Engine control module	Styrdon	3
0240	1	43 01 313		7), 1994, B234I, SAI	1	Engine control module	Styrdon	3
0250	1	43 00 877		7), 1994, B234E	1	Engine control module	Styrdon	3
0260	1	43 00 828		7), 1994, B234L	1	Engine control module	Styrdon	3
0270	1	43 00 851		7), 1994, B234R	1	Engine control module	Styrdon	3
0280	1	43 00 414		7), 1994, B234R, TCS	1	Engine control module	Styrdon	3
0290								
0300	1	43 01 891		7), 1995, B234I	1	Engine control module	Styrdon	3
0310	1	*43 02 659*		7,200), 1995, B234I, DE NLS	1	Engine control module	Styrdon	3
0310								
0320	1	43 01 966		7), 1995, B234I, SAI	1	Engine control module	Styrdon	3
0330								
0340	1	43 01 909		7), 1995, B234E	1	Engine control module	Styrdon	3
0350	1	*43 02 667*		7,200), 1995, B234E, DE NLS	1	Engine control module	Styrdon	3
0350								
0360								
0370	1	43 01 917		7), 1995, B234L	1	Engine control module	Styrdon	3
0380	1	*43 02 675*		7,200), 1995, B234L, DE NLS	1	Engine control module	Styrdon	3
0380								
0390								
0400	1	46 60 338		7), 1995, B234R	1	Engine control module	Styrdon	3
0410	1	*43 02 683*		7,200), 1995, B234R, DE NLS	1	Engine control module	Styrdon	3
0410								
0420	1	43 01 974		7), 1995, B234R, TCS	1	Engine control module	Styrdon	3
0430	1	*46 60 353*		7,200), 1995, B234R, DE NLS	1	Engine control module	Styrdon	3
0430								
0440	1	*43 02 683*		7,200), 1995, B234R,TCS, DE NLS	1	Engine control module	Styrdon	3
0450								
0460								
0470	1	43 02 303		7), 1996, B234E	1	Engine control module	Styrdon	3
0480	1	43 02 972		7,200), 1996, B234E	1	Engine control module	Styrdon	3
0490	1	43 02 329		7,270), 1996-, B234L	1	Engine control module	Styrdon	3
0500	1	• 47 81 878		7,271), B234L	1	Engine control module	Styrdon	3
0510	1	43 02 980		7,200,270), 1996-, B234L	1	Engine control module	Styrdon	8
0520	1	• 47 81 860		7,200,271), B234L	1	Engine control module	Styrdon	3
0530	1	43 01 206		7,270), 1996-, B234R	1	Engine control module	Styrdon	3
0540	1	• 47 81 894		7,271), B234R	1	Engine control module	Styrdon	3


7. Also available as exchange unit. Finns även som utbytesenhet.
200. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
270. Ch -V1020066
271. Ch V1020067-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

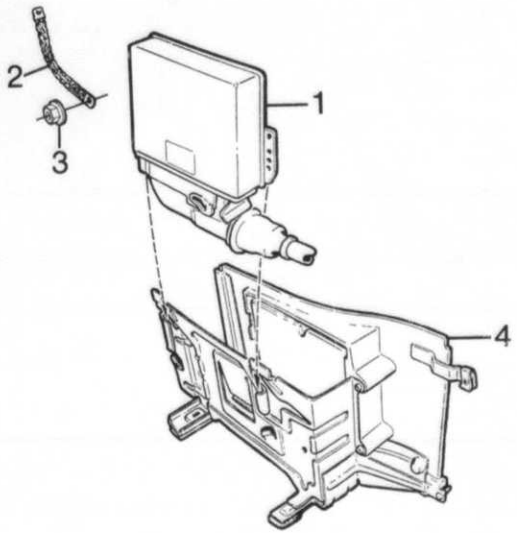

F8376 CAC94

Fuel system

1-F04 Engine control module TRIONIC

Bränslesystem

Styrdon TRIONIC

0908	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	1	43 02 998		7,200,270), 1996-, B234R	1	Engine control module	Styrdon	8
0560	1	• 47 81 886		7,200,271), B234R	1	Engine control module	Styrdon	3
0570								
0580								
0590	1	43 00 364		7), 1996, B234E, US, CA	1	Engine control module	Styrdon	8
0600	1	43 00 836		7), 1996, B234L, US, CA	1	Engine control module	Styrdon	8
0610	1	43 00 422		7), 1996, B234R, US, CA	1	Engine control module	Styrdon	8
0620								
0630	1	47 81 456		7,270), 1997-, B234E	1	Engine control module	Styrdon	3
0640	1	• 47 81 852		7,271), B234E	1	Engine control module	Styrdon	3
0650	1	47 81 464		7,200,270), 1997-, B234E	1	Engine control module	Styrdon	3
0660	1	• 47 81 845		7,200,271), B234E	1	Engine control module	Styrdon	3
0670	1	47 80 243		7), 1997-, B234E, US, CA	1	Electronic unit	Elektronikenhet	8
0680	1	47 80 250		7), 1997-, B234L, US, CA	1	Electronic unit	Elektronikenhet	8
0690	1	47 80 268		7), 1997-, B234R, US, CA	1	Electronic unit	Elektronikenhet	8
0700								
0710	2	43 01 677			1	.Ground cable	.Jordkabel	6
0720	3	79 22 354			1	.Screw	.Skruv	5
0730								
0740	4			See page 2-077, 1-F06		Bracket	Fäste	

7. Also available as exchange unit. Finns även som utbytesenhet.
200. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
270. Ch -V1020066
271. Ch V1020067-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F06 *Bracket Engine control module* *Fäste Styrdon*

0910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-071, 1-E24	1	Engine control module	Styrdon	
0020				See page 2-073, 1-F02				
0030	11			TRIONIC	1	Ground cable	Jordkabel	
0040				See page 2-073, 1-F02				
0050	13	41 64 802		1994	1	Bracket	Fäste	5
0060				1)	1	*Sound absorber	*Ljudabsorbent	
0070	13	45 45 281		1995-	1	Bracket	Fäste	5
0080				1)	1	*Sound absorber	*Ljudabsorbent	
0090	14	40 08 579			1	Cage screw	Korgskruv	5
0100	15	79 77 929			2	Nut	Mutter	5
0110	16			See page 3A-031, 2-B08	1	Engine control module	Styrdon	

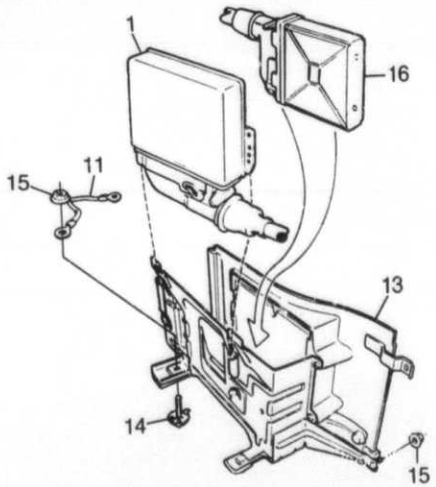

F6313 CAC94

1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F08

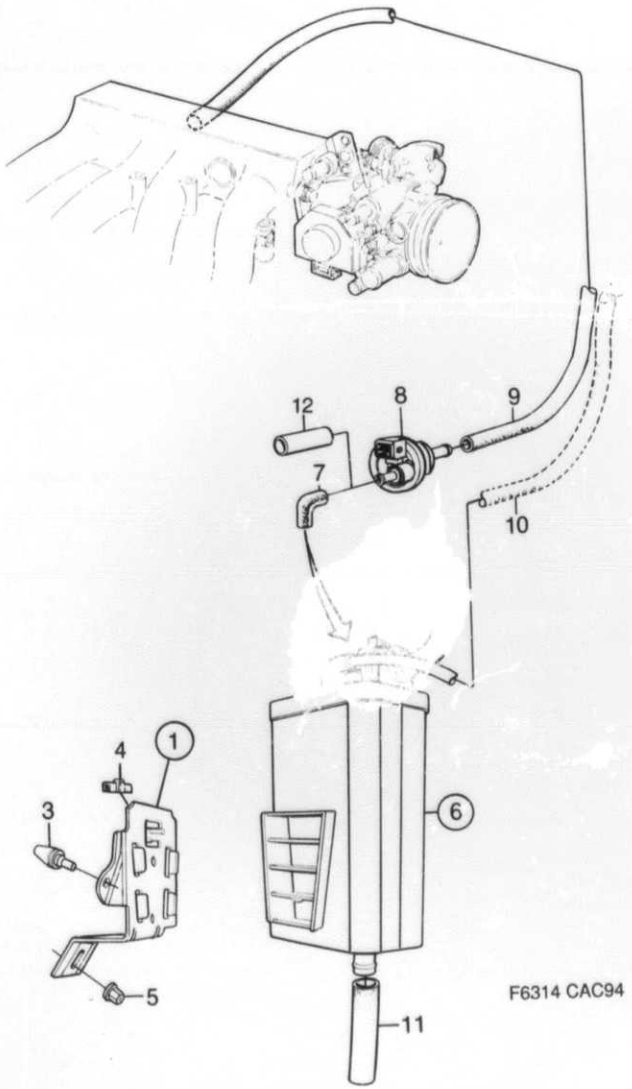

0955	Pos.	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	41 62 319			1	Bracket	Fäste	6
0020	2	*41 61 378*		1) NLS – USE 4162319	1	.Bracket	.Fäste	6
0030	3	41 62 046			2	.Rubber damper	.Gummidämpare	5
0040	4	41 62 152			1	.Wear protection	.Skavskydd	5
0050	5	40 87 128			1	Plastic nut	Plastmutter	5
0060	6	41 61 451		-1995, 4-CYL.	1	Carbon filter	Kolfilter	
0070	6	41 61 451		1996-, 4-CYL.	1	Carbon filter	Kolfilter	
0080	6	43 93 500		1996-, 4-CYL., US, CA	1	EVAP canister	Kolfilter	8
0090	6	43 93 500		6-CYL.	1	EVAP canister	Kolfilter	8
0100	7	75 39 240		-1995	1	Hose	Slang	5
0110	7	75 39 240		1996-	1	Hose	Slang	5
0120	7	*43 93 542*		1996-, US, CA NLS	1	Hose	Slang	5
0130	8	75 39 257		-1995, 4-CYL.	1	EVAP canister purge valve	Urluftningsventil	
0140	8	75 39 257		1996-, 4-CYL.	1	EVAP canister purge valve	Urluftningsventil	
0150	8	44 42 471		1996-, 4-CYL., US, CA	1	EVAP canister purge valve	Urluftningsventil	8
0160	8	44 42 489		6-CYL.	1	EVAP canister purge valve	Urluftningsventil	8
0170	9	44 41 853		4-CYL., I	1	Hose	Slang	8
0180	9	43 93 328		4-CYL., TURBO	1	Hose	Slang	8
0190	9	43 91 512		6-CYL.	1	Hose	Slang	
0200	10			See page 2-061, 1-E14		Hose	Slang	
0210	11	41 62 343			1	Draining hose	Dräneringsslang	5
0220	12	45 26 992		6-CYL.	1	Hose	Slang	8

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F10

Inlet manifold
4-cylinder I

Inloppsrör
4-cylindrig I

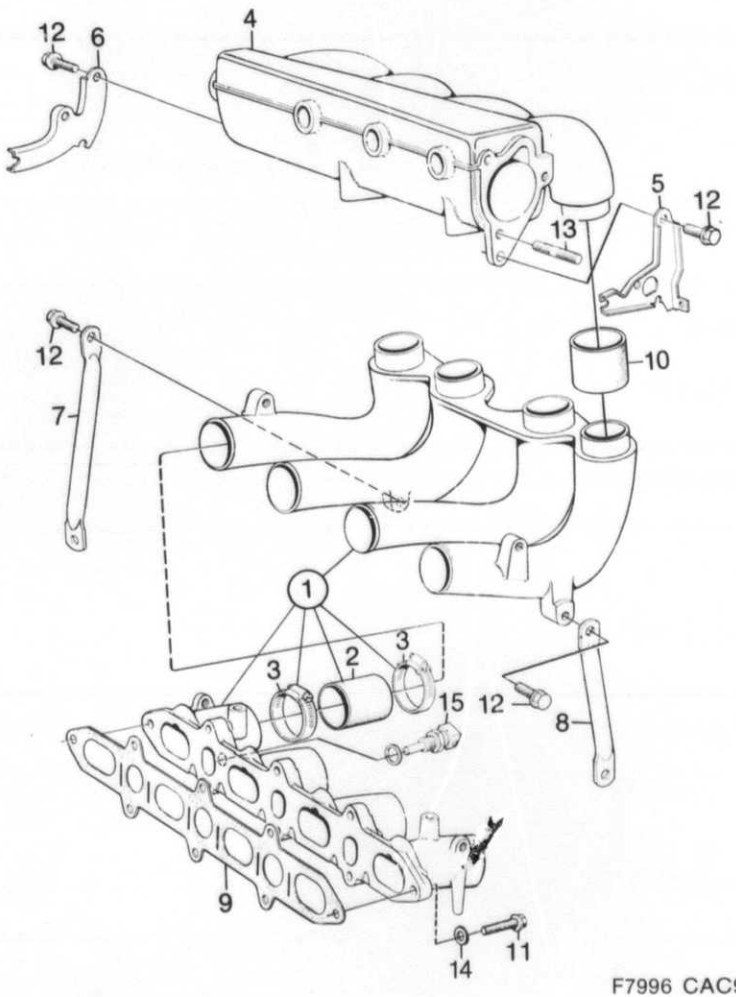

F7996 CAC94

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 44 171			1	Intake manifold	Inloppsrör	8
0020	2	91 34 727			4	▪Hose	▪Slang	4
0030	3	79 70 130			8	▪Hose clamp	▪Slangklamma	5
0040	4	91 67 560			1	Intake manifold	Inloppsrör	6
0050	5	87 89 570		1994	1	Anchorage	Fäste	6
0060	5	91 68 907		1995-261)	1	Bracket	Fäste	6
0070	5	• 91 81 918		262)	1	Bracket	Fäste	6
0080	6	87 89 562			1	Anchorage	Fäste	6
0090	7	91 48 784			1	Stay	Stag	6
0100	8	91 48 792			1	Stay	Stag	6
0110	9	91 38 884			1	Gasket	Packning	
0120	10	91 34 735			4	Hose	Slang	4
0130	11	79 70 015		1994	8	Screw	Skruv	5
0140	11	40 87 805		1995-,254)	8	Screw	Skruv	5
0150	11	79 78 224		255)	8	Screw	Skruv	5
0160	12	80 59 776			8	Screw	Skruv	5
0170	13	80 05 910			3	Stud	Pinnskruv	5
0180	14	80 29 985		1995-,254)	8	Washer	Bricka	5
0190	15			See page 2-067, 1-E20	1	Sensor	Givare	

254. Engine -V002000.
255. Engine V002001-.
262. Engine V006100-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F12

Inlet manifold 235), Turbo

Inloppsrör 235), Turbo

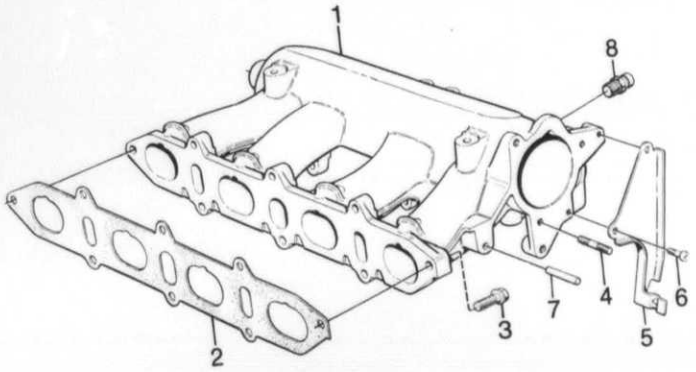

F6316 CAC94

1010	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 47 802			1	Intake manifold	Inloppsrör	6
0020	2	91 38 884			1	Gasket	Packning	
0030	3	79 70 015			8	Screw	Skruv	5
0040	4	80 05 910			3	Stud	Pinnskruv	5
0050	5	91 15 445		1994	1	Bracket	Fäste	6
0060	5	91 68 915		1995	1	Bracket	Fäste	6
0070	6	79 71 294			2	Screw	Skruv	5
0080	7	80 49 827		B204	1	Spring pin	Rörpinne	4
0090	8	43 46 508			1	Nipple	Nippel	5

235. Engine -T007131.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F14 *Inlet manifold 236), Turbo* / *Inloppsrör 236), Turbo*

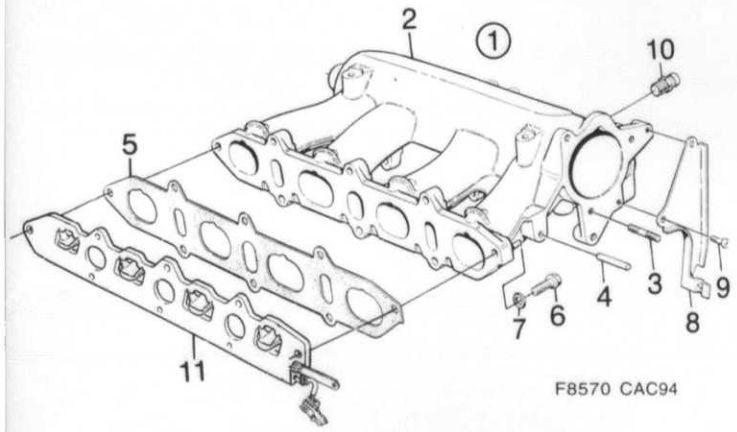

F8570 CAC94

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 77 148			1	Intake manifold	Inloppsrör	6
0020	2	91 77 924			1	.Intake manifold	.Inloppsrör	8
0030	3	80 05 910			3	.Stud	.Pinnskruv	5
0040	4	80 49 827			1	.Spring pin	.Rörpinne	4
0050	5	91 38 884			1	Gasket	Packning	
0070	6	40 87 805		263)	8	Screw	Skruv	5
0080	6	79 78 224		264)	8	Screw	Skruv	5
0090	7	80 29 985		263)	8	Washer	Bricka	5
0100	8	91 68 915		261)	1	Bracket	Fäste	6
0110	8	91 81 926		262)	1	Bracket	Fäste	6
0120	9	79 78 091			2	Screw	Skruv	5
0130	10	43 46 508			1	Nipple	Nippel	5
0140	11	91 66 000		265,269)	1	Intake air heat plate	Värmeplatta	

236. Engine T007132-.
261. Engine -V006099.
262. Engine V006100-.
263. Engine -V002000
264. Engine V002001-
265. For cars with intake air heat plate. För bilar med värmeplatta.
269. Engine -V058528

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F16

Inlet manifold
6-cylinder

Inloppsrör
6-cylindrig

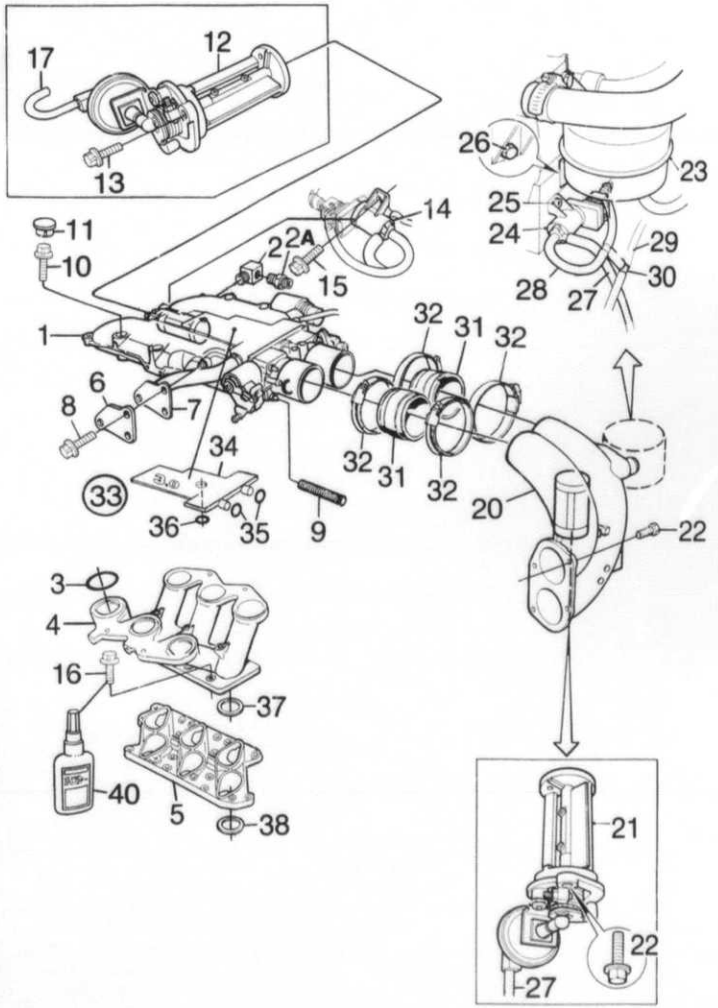

F8562 CAC94

1020	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 42 190			1	Intake manifold	Inloppsrör	8
0020	2	43 46 508			1	.Nipple	.Nippel	5
0030	2A	46 21 181			1	.Nipple	.Nippel	5
0040	3	46 21 256			6	O-ring	O-ring	8
0050	4	46 21 124			1	Intake manifold	Inloppsrör	8
0060	5	46 21 272			1	Flange	Fläns	8
0070	6	45 25 580			1	Cover plate	Täckplatta	5
0080	7	46 21 231			1	Gasket	Packning	8
0090	8	79 78 091			3	Screw	Skruv	5
0100	9	41 64 893			4	Stud	Pinnskruv	5
0110	10	43 47 340			4	Screw	Skruv	5
0120	11	46 21 264			4	Cover	Täcklock	
0130	12	46 20 530			1	Flap	Klaff	
0140	13	45 02 274			2	Screw	Skruv	5
0150	14	43 94 078			1	AIR control valve	Reglerventil	
0160	15	45 03 405			2	Screw	Skruv	5
0170	16	43 47 282			12	Screw	Skruv	5
0180	17	46 21 223			1	Hose	Slang	4
0190	18	45 03 439			2	Hose clamp	Slangklamma	5
0200	20	41 64 935			1	Pipe	Rör	4
0210	21	44 40 939			1	Shutter	Spjäll	
0220	22	79 78 109			6	Screw	Skruv	5
0230	23	43 74 245			1	Vaccum box	Vakuumdosa	
0240	24	43 94 078			1	AIR control valve	Reglerventil	
0250	25	79 78 372			2	Screw	Skruv	5
0260	26	79 79 610			2	Screw	Skruv	5
0270	27	91 36 243		L=175MM		Vaccum hose	Vakuumslang	5
0280	28	91 36 243		L=90MM		Vaccum hose	Vakuumslang	5
0290	29	91 36 243		L=30MM		Vaccum hose	Vakuumslang	5
0300	30	83 66 791			2	Pipe	Rör	4
0310	31	43 91 314			2	Hose	Slang	4
0320	32	43 47 019			4	Hose clamp	Slangklamma	5
0330	33	45 25 952			1	Adapter	Adapter	
0340	34	*44 42 240*		NLS - USE 4525952	1	.Adapter	.Adapter	
0350	35	46 21 215			2	.O-ring	.O-ring	
0360	36	46 21 199			1	.Seal	.Tätning	
0370	37	47 70 426			6	Gasket	Packning	8
0380	38	47 70 418			6	Gasket	Packning	8
0390	40	74 96 268		50 Nm	X	Nut lock	Gängsäkring	5
0400						normal	normal	
0410						blue	blå	
0420		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F18 Throttle valve housing 4-cylinder / Spjällhus 4-cylindrig

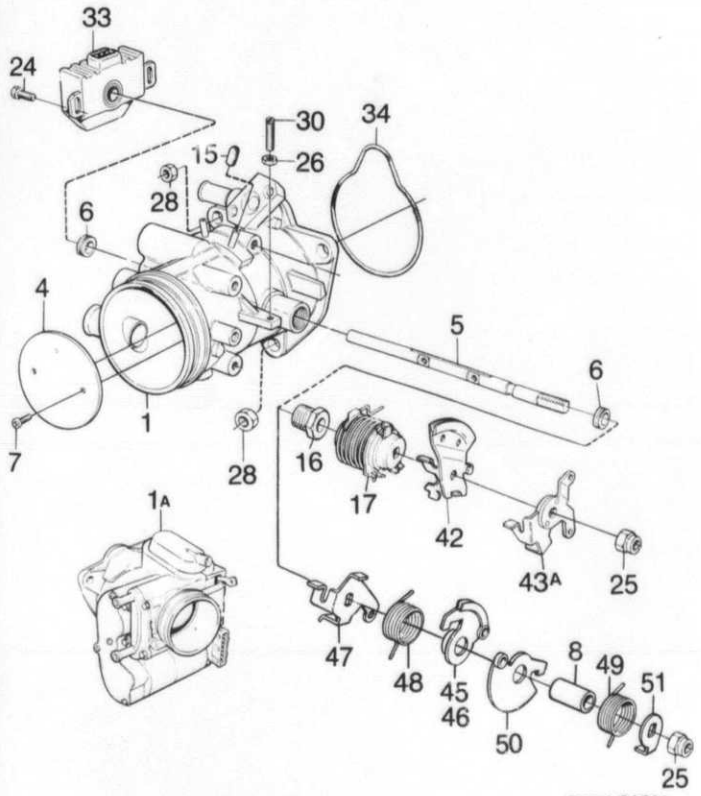

F6318 CAC94

1110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	78 71 437		4), TURBO	1	Throttle body	Spjällhus	6
0020	1	91 07 616		4), I	1	Throttle body	Spjällhus	6
0030								
0040	1A	88 22 348		177), TCS	1	Throttle body	Spjällhus	6
0050		91 70 705			1	.Throttle body	.Spjällhus	6
0060		40 63 087			5	.Cable terminal	.Kabelsko	5
0070	1A	91 70 705		178), TCS	1	Throttle body	Spjällhus	6
0080								
0090	4	83 53 484			1	Shutter	Spjäll	6
0100	5	91 28 224		1994	1	Shutter shaft	Spjällaxel	6
0110	5	91 70 424		1995-	1	Shutter shaft	Spjällaxel	6
0120	6	83 57 345			2	Seal	Tätning	5
0130	7	80 57 259			2	Screw	Skruv	5
0140	8	91 70 432		1995-	1	Bearing sleeve	Lagerhylsa	5
0150	15	83 35 614			1	Plug	Propp	4
0160	16	93 59 050			1	Plug	Plugg	5
0170	17	75 16 974			1	Return spring	Returfjäder	5
0180	24	79 85 187		1994	2	Screw	Skruv	5
0190	24	80 59 230		1995-	2	Screw	Skruv	5
0200	25	*91 66 406*		NLS – USE 8074288	1	Nut	Mutter	5
0210	26	81 51 045			1	Nut	Mutter	5
0220	28	79 67 953			3	Nut	Mutter	5
0230	30	40 87 706			1	Set screw	Stoppskruv	5
0240	33	88 57 195		-1995	1	Throttle position sensor	Lägesgivare	8
0250	33	46 61 062		1996	1	Throttle position sensor	Lägesgivare	6
0260	33	91 81 538		1997-	1	Potentiometer	Potentiometer	6
0270	34	75 21 875			1	O-ring	O-ring	4
0280	42	91 27 168		1994, M	1	Cam disc	Kamskiva	6
0290	43A	91 27 176		1994, A	1	Lever	Hävarm	6
0300	45	91 70 044		1995-, M	1	Cam disc	Kamskiva	6
0310	46	91 70 051		1995-, A	1	Cam disc	Kamskiva	6
0320	47	91 70 457		1995-	1	Lever	Hävarm	6
0330	48	91 69 251		1995-	1	Torsion spring	Vridfjäder	5
0340	49	91 69 269		1995-	1	Torsion spring	Vridfjäder	5
0350	50	91 70 069		1995-	1	Cam disc	Kamskiva	6
0360	51	91 69 194		1995-	1	Companion flange	Medbringare	6

4. With catalytic converter. Med katalytisk reaktor.
177. Engine -R107415.
178. Engine R107416-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F20

Throttle body
6-cylinder

Spjällhus
6-cylindrig

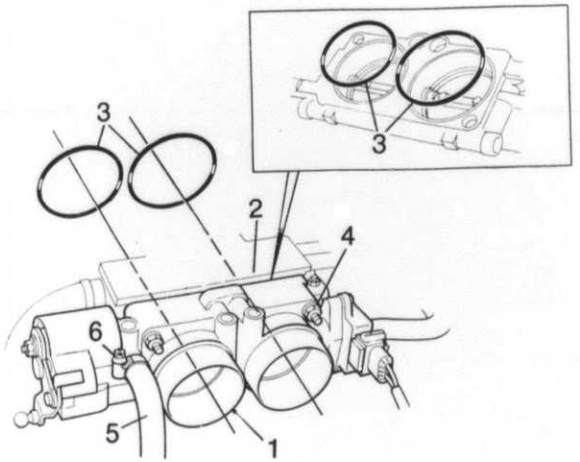

F6319 CAC94

1120 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	46 21 249			1	Electr. throttle actuator	Spjällhus	8
0020 2	43 92 403			1	Electr. throttle actuator	Spjällhus	8
0030 3	44 42 307			4	O-ring	O-ring	8
0040 4	43 47 654		1995	4	Nut	Mutter	5
0050 4	47 70 368		1996-	4	Nut	Mutter	5
0060 5	41 65 668			1	Hose	Slang	4
0070 6	46 20 365			2	Hose clamp	Slangklamma	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F22

IAC
4-cylinder I

IAC
4-cylindrig I

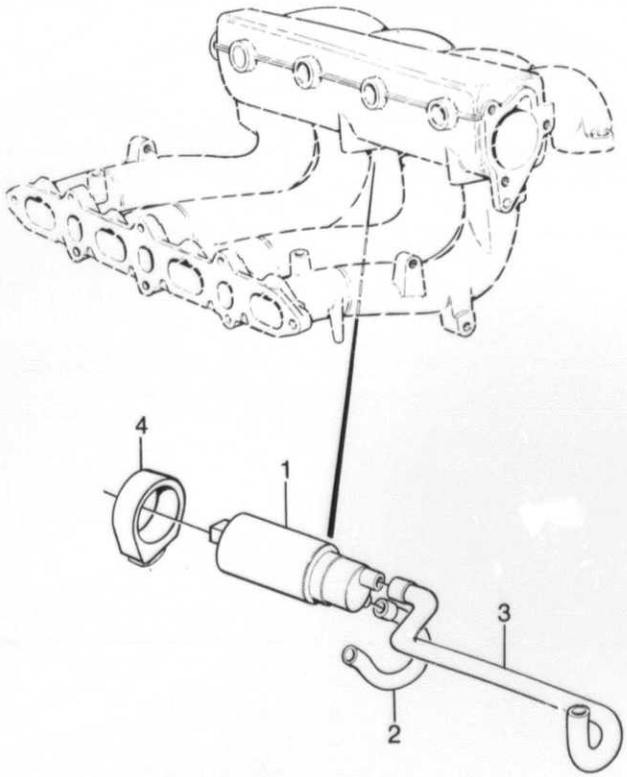

F6320 CAC94

1160	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 86 019			1	Idle air control valve	Reglerventil	4
0020	2	87 89 612			1	Hose	Slang	4
0030	3	91 17 714			1	Hose	Slang	4
0040	4	78 56 933			1	Retainer	Hållare	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A??
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-F24

IAC
4-cylinder Turbo

IAC
4-cylindrig Turbo

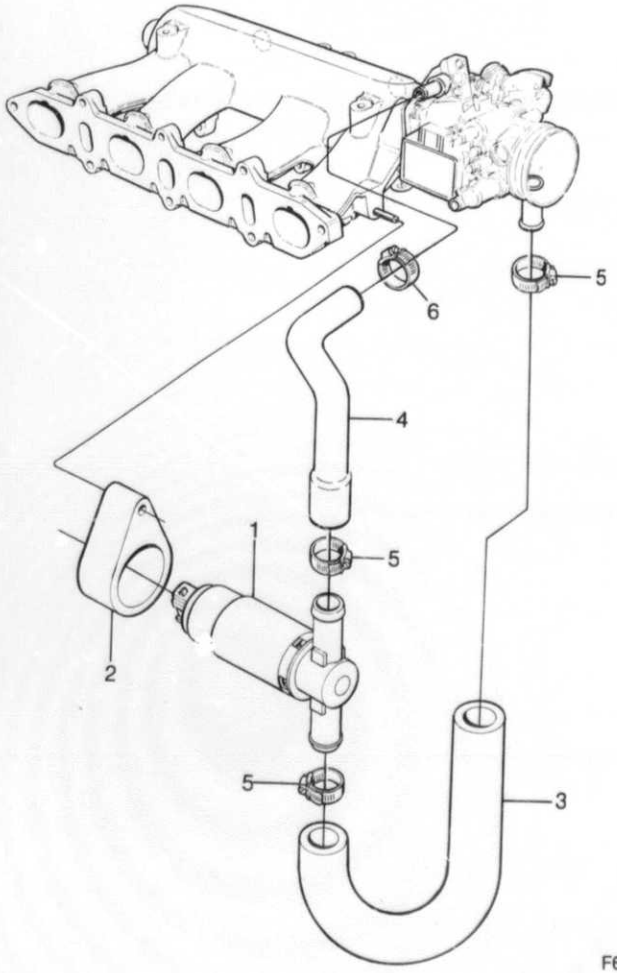

F6321 CAC94

1165	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 27 200			1	Idle air control valve	Reglerventil	4
0020	2	78 56 933			1	Retainer	Hållare	5
0030	3	91 28 703			1	Hose	Slang	4
0040	4	91 28 695			1	Hose	Slang	4
0050	5	*79 63 549*		NLS – USE 7970080	3	Hose clamp	Slangklamma	5
0060	6	79 63 523			1	Hose clamp	Slangklamma	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G02 IAC 6-cylinder / IAC 6-cylindrig

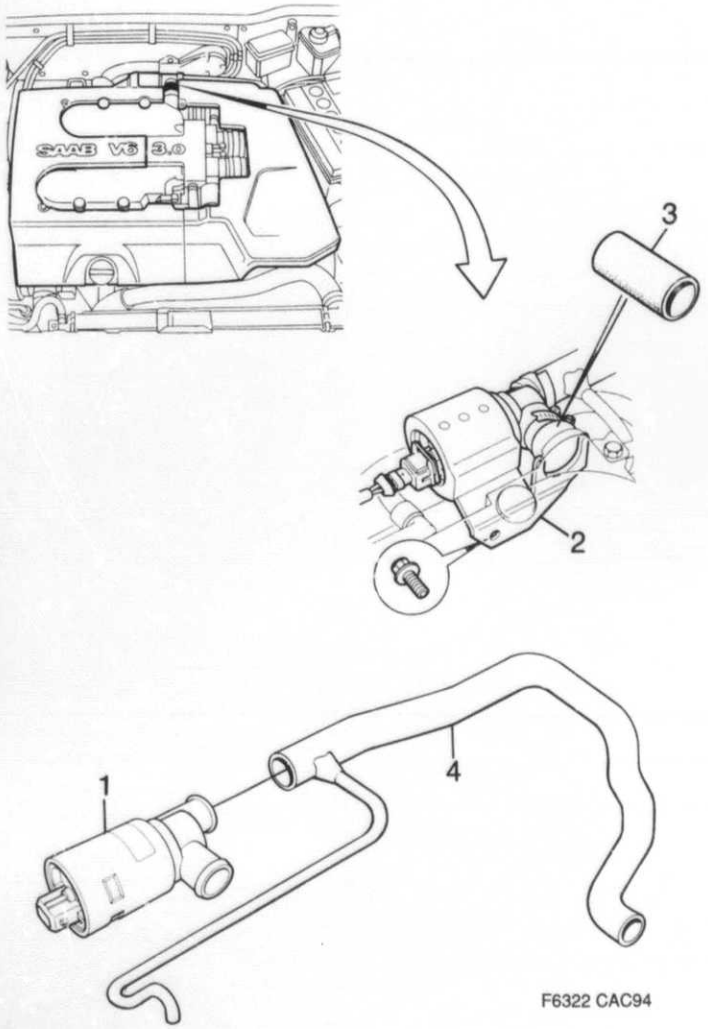

1170	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 363		1995	1	Idle air control valve	Reglerventil	4
0020	1	75 86 019		1996-	1	Idle air control valve	Reglerventil	4
0030	2	43 91 272		1995	1	Bracket	Konsol	
0040	2	46 61 294		1996-	1	Bracket	Konsol	
0050	3	43 90 670		1995	1	Sleeve	Muff	
0060	3	46 60 510		1996-	1	Sleeve	Muff	
0070	4	41 04 950		1995	1	Hose	Slang	4
0080	4	46 60 460		1996-	1	Hose	Slang	4


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G04

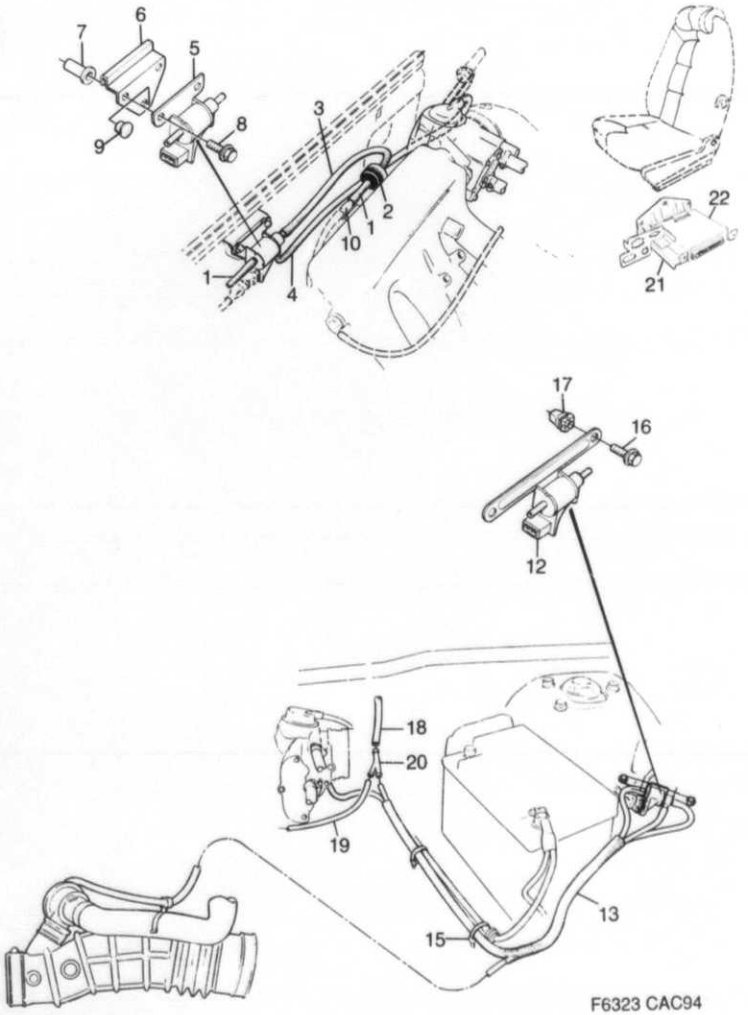

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 36 243		L=40 MM	2	Vaccum hose	Vakuumslang	5
0020	2	43 01 669			1	Non-return valve	Backventil	
0030	3	91 36 243		L=240 MM	1	Vaccum hose	Vakuumslang	5
0040	4	91 36 243		L=700 MM	1	Vaccum hose	Vakuumslang	5
0050	5	40 15 202			1	Bleeder valve	Urluftningsventil	5
0060	6	41 61 881			1	Bracket	Konsol	5
0070	7	79 73 456			2	Expanding nut	Expandermutter	5
0080	8	80 59 396			2	Screw	Skruv	5
0090	9	71 62 308			1	Plug	Plugg	5
0100	10			See page 2-081, 1-F10	1	Nipple	Nippel	
0110	12	40 19 253			1	Control valve	Manöverventil	5
0120	13	91 36 243		L=1460 MM	1	Vaccum hose	Vakuumslang	5
0130	13	91 36 243		B234 TURBO TRIONIC, L=2675 MM	1	Vaccum hose	Vakuumslang	5
0140								
0150	15	79 71 864			2	Tensioning band	Spännband	5
0160	16	79 73 191			2	Screw	Skruv	5
0170	17	79 75 279			2	Nut	Mutter	5
0180	18			See page 2-163, 1-I20	1	Hose	Slang	
0190	19			See page 2-163, 1-I20	1	Hose	Slang	
0200	20			See page 2-163, 1-I20	1	Tube	Rör	
0210	21			See page 3A-167, 2-G24	1	Bracket	Fäste	
0220	22			See page 3A-105, 2-E10	1	Electronic unit	Elektronikenhet	
0230								
0240		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G06

Exhaust manifold
4-cyl., -1995

Avgassamlare
4-cyl., -1995

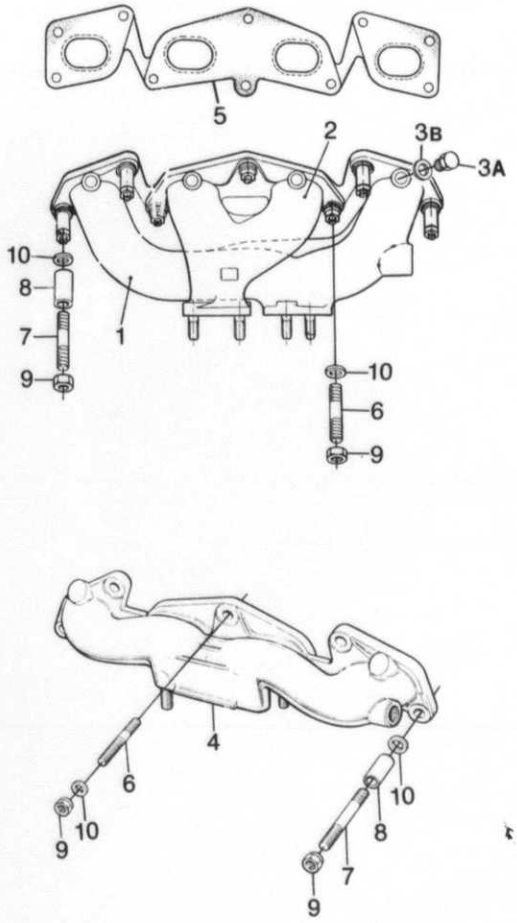

F7296 CAC94

1270	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 074		I	1	Exhaust manifold	Avgassamlare	8
0020	2	88 22 066		I	1	Exhaust manifold	Avgassamlare	8
0030	3	83 60 943			2	.Stud screw	.Pinnbult	5
0040	3A	81 23 713			2	.Screw	.Skruv	5
0050	3B	81 24 133			2	.Gasket	.Packning	5
0060								
0070	4	91 19 645		TURBO	1	Exhaust manifold	Avgassamlare	8
0080								
0090	5	91 66 497			1	Gasket	Packning	8
0100	6	79 85 146			3	Stud screw	Pinnbult	5
0110	7	79 85 161			4	Stud screw	Pinnbult	5
0120	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0130	9	91 69 277			7	Nut	Mutter	3
0140	10	91 66 398			7	Washer	Bricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G08

Exhaust manifold
4-cyl., 1996-

Avgassamlare
4-cyl., 1996-

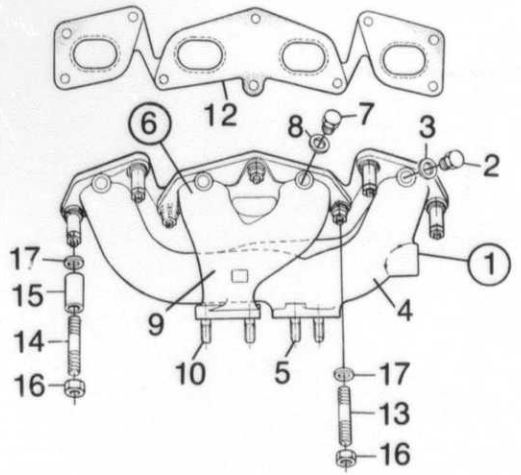

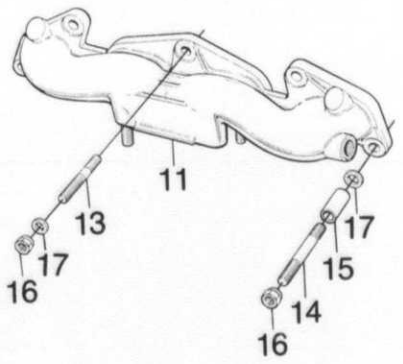

F8206 CAC94

1275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 91 77 106		I	1	Exhaust manifold	Avgassamlare	8
0020	2	81 23 713			2	.Screw	.Skruv	5
0030	3	81 24 133			2	.Gasket	.Packning	5
0040	4	• 91 68 709			1	.Exhaust manifold	.Avgassamlare	8
0050	5	83 60 943			2	..Stud screw	..Pinnbult	5
0060								
0061	6	• 91 77 098		I	1	Exhaust manifold	Avgassamlare	8
0062	7	81 23 713			2	.Screw	.Skruv	5
0063	8	81 24 133			2	.Gasket	.Packning	5
0064	9	• 91 68 568			1	.Exhaus' manifold	.Avgassamlare	8
0065	10	83 60 943			2	..Stud screw	..Pinnbult	5
0066								
0070	11	91 19 645		TURBO	1	Exhaust manifold	Avgassamlare	8
0080								
0090	12	91 66 497			1	Gasket	Packning	8
0100	13	79 85 146			3	Stud screw	Pinnbult	5
0110	14	79 85 161			4	Stud screw	Pinnbult	5
0120	15	93 06 812			4	Spacer sleeve	Distanshylsa	3
0130	16	91 69 277			7	Nut	Mutter	3
0140	17	91 66 398			7	Washer	Bricka	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G10

Exhaust manifold
6-cylinder

Avgassamlare
6-cylindrig

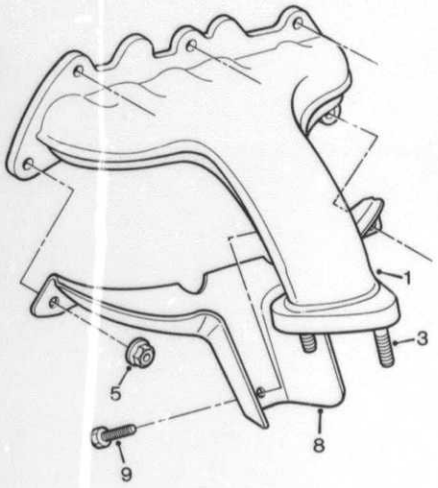

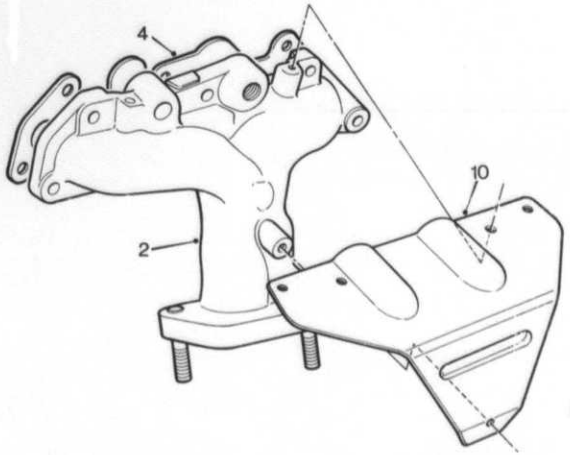

F6325 CAC94

1280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 03 579		SAI, CYL 2,4,6	1	Exhaust manifold	Avgassamlare	8
0020	2	45 04 742		SAI, CYL 1,3,5	1	Exhaust manifold	Avgassamlare	8
0030	3	45 03 629			2	▲Stud screw	▲Pinnbult	5
0040	4	45 03 652			2	Gasket	Packning	8
0050	5	45 03 538			14	Nut	Mutter	3
0060	8	44 43 313			1	Heat shield	Värmesköld	3
0070	9	79 78 182			1	Screw	Skruv	5
0080	10			See page 2-165, 1-I22	1	Cover	Avtäckning	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G12 SAI Air pump / SAI Luftpump

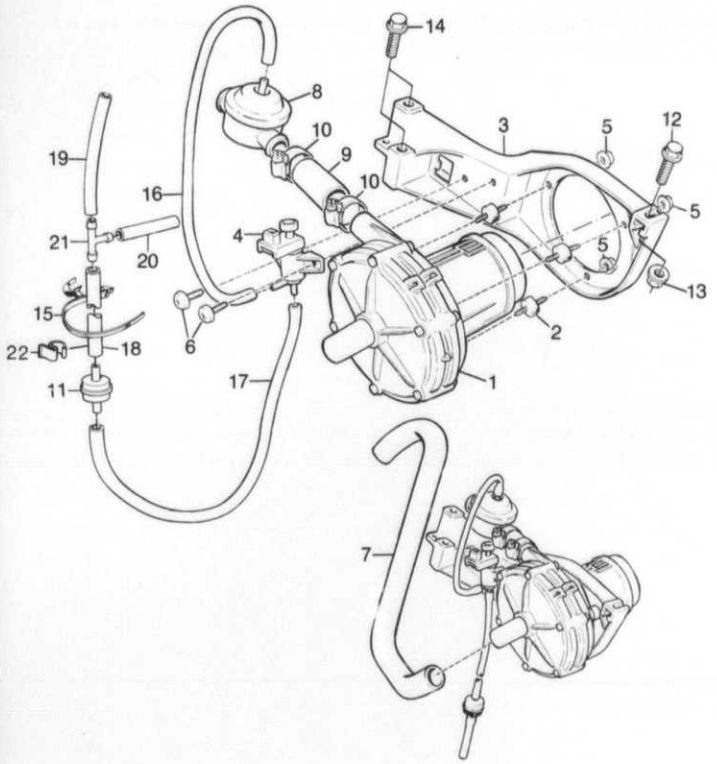

F6326 CAC94

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 39 083			1	Sec. air inj. pump	Insprutningspump	8
0020	2	42 35 768			1	Rubber spacer	Gummidistans	4
0030	3	43 01 420			1	Bracket	Konsol	6
0040	4	43 94 078			1	AIR control valve	Reglerventil	
0050	5	79 77 929			3	Nut	Mutter	5
0060	6	79 71 294			2	Screw	Skruv	5
0070	7	43 60 707		4-CYL	1	Hose	Slang	5
0080	7	43 90 837		6-CYL	1	Hose	Slang	5
0090	8	42 28 011			1	AIR switching valve	Fördelningsventil	8
0100	9	43 90 852			1	Hose	Slang	5
0110	10	79 70 072			2	Hose clamp	Slangklamma	5
0120	11	*40 23 297*		NLS – USE 4301669	1	Non-return valve	Backventil	5
0130	12	73 99 900			1	Hexagon screw	Sexkantsskruv	5
0140	13	*80 29 555*		NLS – USE 8151227	1	Nut	Mutter	5
0150	14	79 76 921		1994	2	Screw	Skruv	5
0160	14	79 76 913		1995-	2	Screw	Skruv	5
0170	15	73 98 944			1	Tensioning band	Spännband	5
0180	16	91 36 243		L=290MM	X	Vaccum hose	Vakuumslang	5
0190	17	91 36 243		1994, L=760MM	X	Vaccum hose	Vakuumslang	5
0200	17	91 36 243		1995-, 4-CYL, L=1000MM	X	Vaccum hose	Vakuumslang	5
0210	17	91 36 243		1995-, 6-CYL, L=1250MM	X	Vaccum hose	Vakuumslang	5
0220	18	91 36 243		L=360MM	X	Vaccum hose	Vakuumslang	5
0230	19	91 36 243		L=60MM	X	Vaccum hose	Vakuumslang	5
0240	20	91 36 243		L=240MM	X	Vaccum hose	Vakuumslang	5
0250	21	83 66 791			1	Pipe	Rör	4
0260	22	93 83 043			2	Clamp	Klammer	5
0270								
0280		91 36 243		L=5000MM	X	Vaccum hose	Vakuumslang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G14

SAI
Non-return valve 4-cyl

SAI
Backventil 4-cyl

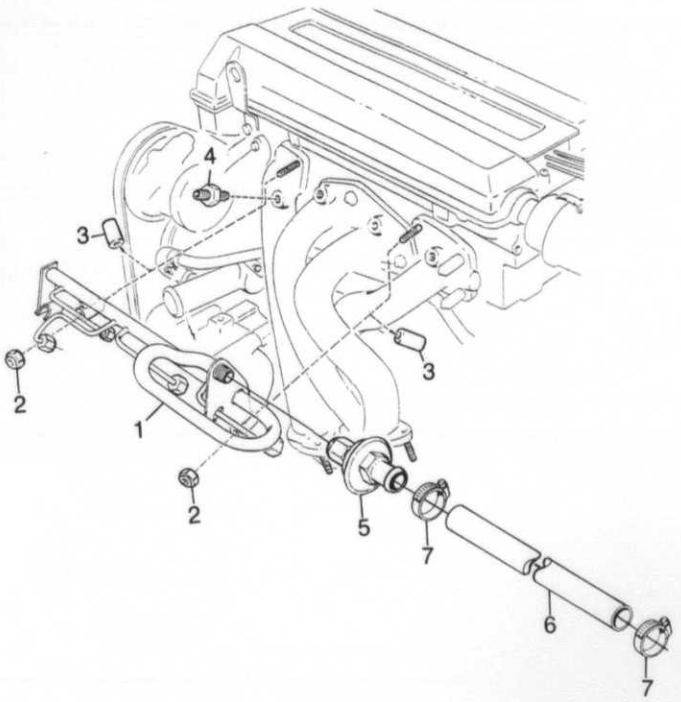

F6327 CAC94

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 60 681			1	Tube	Rör	5
0020	2			See page 2-101, 1-G06	2	Nut	Mutter	
0030	3			See page 2-101, 1-G06	2	Spacer sleeve	Distanshylsa	
0040	4	81 31 963			4	Nipple	Nippel	5
0050	5	43 60 343			1	AIR air flow check valve	Backventil	
0060	6	43 60 699			1	Hose	Slang	5
0070	7	79 70 072			2	Hose clamp	Slangklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G16

SAI
Non-return valve 6-cyl

SAI
Backventil 6-cyl

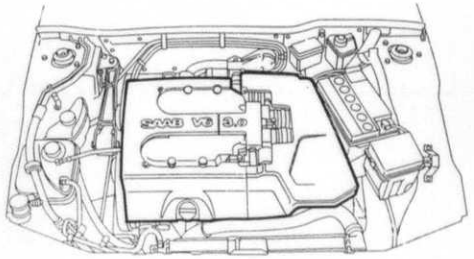

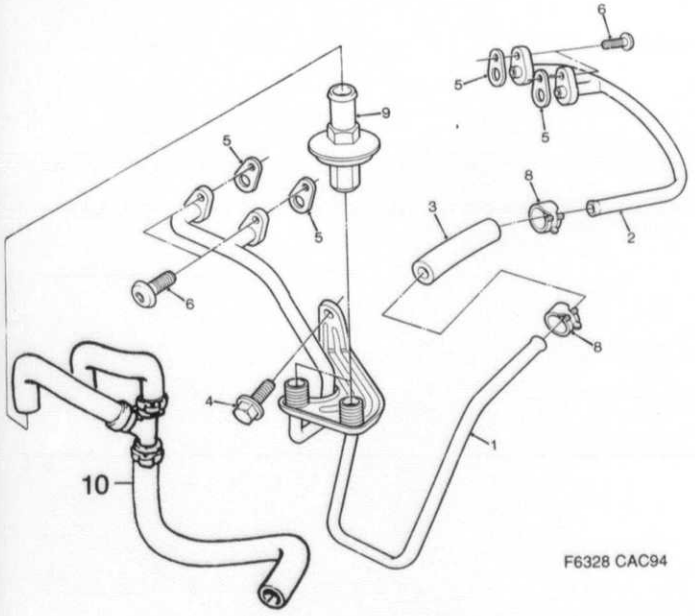

F6328 CAC94


1365	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 60 277			1	Tube	Rör	
0020	2	43 60 269		-1995	1	Tube	Rör	
0030	2	42 39 976		1996-	1	Tube	Rör	8
0040	3	43 94 060		-1995	1	Hose	Slang	
0045	3	46 62 896		1996-	1	Hose	Slang	
0050	4	79 67 938			1	Screw	Skruv	5
0060	5	44 43 230			4	Gasket	Packning	
0070	6	80 59 776			4	Screw	Skruv	5
0080	8	89 43 177			2	Hose clamp	Slangklämma	5
0090	9	43 60 343			2	AIR air flow check valve	Backventil	
0100	10	43 95 190			1	Hose	Slang	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8E	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

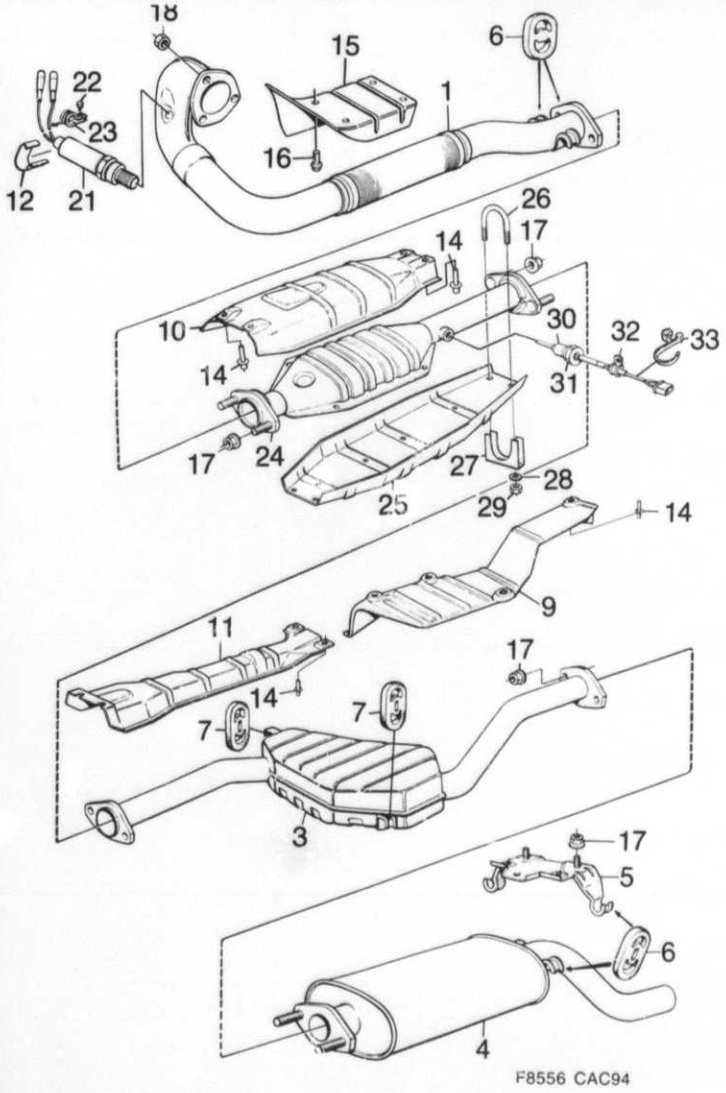

F8556 CAC94

1-G18

Exhaust system
Turbo
-1997

Avgassystem
Turbo
-1997

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				B234, SE, US		Exhaust system	Avgassystem	
0020				See page 2-117, 1-G22				
0030	1	41 63 945			1	Exhaust pipe	Avgasrör	3
0040	1	45 27 545		ME	1	Exhaust pipe	Avgasrör	2
0050	3	40 18 867			1	Silencer	Ljuddämpare	1
0060	3	43 93 898		ME	1	Silencer	Ljuddämpare	1
0070	4	89 79 163		1994, 4D	1	Silencer	Ljuddämpare	1
0080	4	45 25 366		1995-1996, 4D	1	Silencer	Ljuddämpare	1
0090	4	45 25 366		1997, 4D	1	Silencer	Ljuddämpare	1
0100	4	45 28 600		1997, 4D, EU, GB	1	Silencer	Ljuddämpare	1
0110	4	41 59 976		-1996, 5CS	1	Silencer	Ljuddämpare	1
0120	4	41 59 976		1997, 5CS	1	Silencer	Ljuddämpare	1
0130	4	45 28 618		1997, 5CS, EU, GB	1	Silencer	Ljuddämpare	1
0140	4	40 15 814		-1996, 5CS AERO	1	Silencer	Ljuddämpare	1
0150	4	40 15 814		1997, 5CS AERO	1	Silencer	Ljuddämpare	1
0160	4	45 28 626		1997, 5CS AERO, EU, GB	1	Silencer	Ljuddämpare	1
0170	5	89 77 936			1	Suspension hook	Upphängningskrok	5
0180	6	93 92 465			4	Rubber mounting	Gummiupphängning	1
0190	7	93 92 465			2	Rubber mounting	Gummiupphängning	1
0200	9	40 22 505			1	Heat shield	Värmesköld	3
0210	10	40 22 588			1	Heat shield	Värmesköld	3
0220	11	40 22 596			1	Heat shield	Värmesköld	3
0230	12	41 58 762		B234	1	Clip	Clips	
0240	12	79 33 443		1996-, B234	2	Clip	Clips	5
0250	14	93 93 968			12	Rivet	Nit	5
0260	14	75 91 480		85)	12	Rivet	Nit	5
0270	15	75 64 321		B204	1	Heat shield	Värmesköld	3
0280	15	91 12 780		B234	1	Heat shield	Värmesköld	5
0290	16	81 25 130			4	Screw	Skruv	5
0300	17	79 67 953			8	Nut	Mutter	5
0310	18	75 19 432			3	Nut	Mutter	5
0320	21	91 46 937		-1995	1	F Heated Oxygen sensor	Syresensor	4
0330	21	91 46 937		1996-, B204E	1	F Heated Oxygen sensor	Syresensor	4
0340	21	46 60 494		1996-, B234	1	F Heated Oxygen sensor	Syresensor	8
0350	21	41 64 323		LA, ME	1	Lambda sonde	Lambdasond	4
0360	21	41 64 323		176), 1994, B234	1	Lambda sonde	Lambdasond	4
0370	21	42 39 588		176), 1995, B234	1	F Heated Oxygen sensor	Syresensor	4
0380	21	46 60 445		176), 1996-, B234	1	Lambda sonde	Lambdasond	4
0390	21	42 39 588		176), 1996-, B204E	1	F Heated Oxygen sensor	Syresensor	4
0400	22	*79 71 757*		NLS – USE 7528953	2	Screw	Skruv	5
0410	23	73 98 803		50)	1	Clamp	Klammer	
0420	23	40 87 078		51)-1995	1	Clamp	Klammer	5
0430	23	73 98 803		1996-	1	Clamp	Klammer	
0440	24	93 92 457		-1995	1	TW catalytic converter	Katalysator	4
0450	24	47 50 030		1996-	1	TW catalytic converter	Katalysator	4
0460	24	40 24 253		222), -1995, JP	1	TW catalytic converter	Katalysator	4
0470	24	47 50 048		222), 1996-, JP	1	TW catalytic converter	Katalysator	4
0480	25	40 24 279		260), JP	1	Heat shield	Värmesköld	
0490	26	40 24 295		260), JP	2	Brace	Bygel	
0500	27	40 24 303		260), JP	2	Yoke bracket	Bygelfäste	6
0510	28	91 66 372		260), JP	4	Washer	Bricka	5
0520	29	79 65 767		260), JP	4	Lock nut	Låsmutter	3
0530	30	41 60 065		-1995, JP	1	Sensor	Givare	4
0540	30	41 60 271		1996-,233), JP	1	Sensor	Givare	
0550	30	44 33 488		234)-1996, JP	1	Sensor	Givare	4


50. Ch. -L1011390, -L2008507, -L8001402.
51. Ch. L1011391-, L2008508-, L8001403-.
85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
176. Lead resistant Blytålig.
222. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.
233. Ch -T1002505.
234. Ch T1002506-.
260. 1996- part of 47 50 048. 1996- del av 47 50 048.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

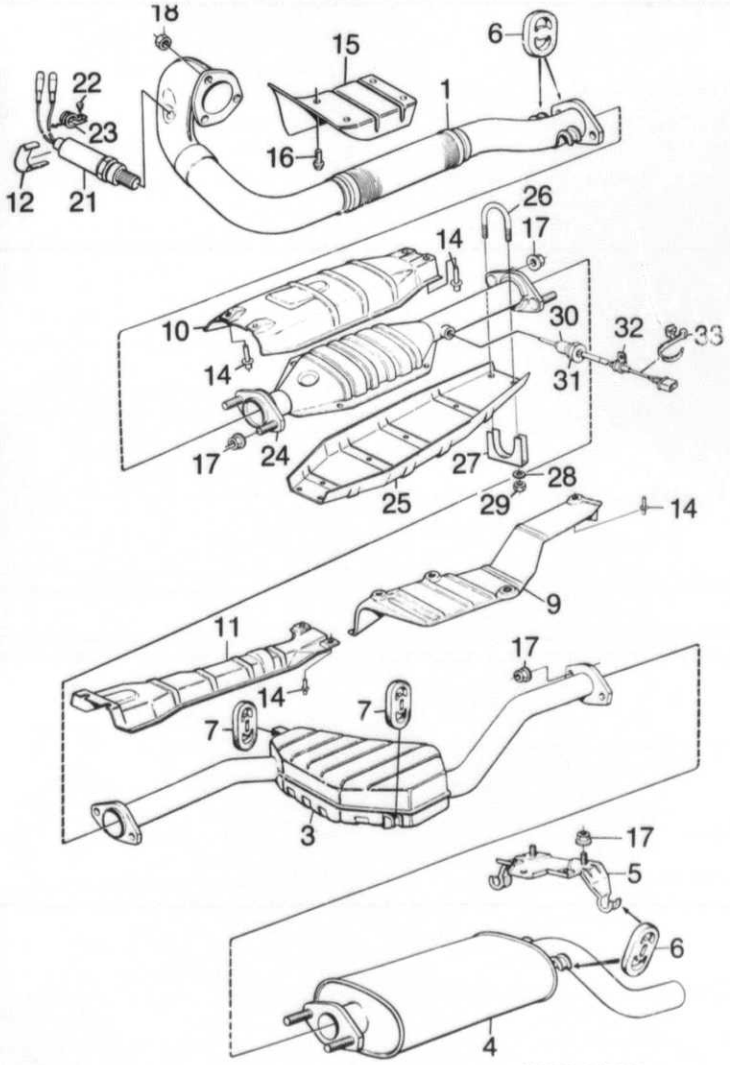

F8556 CAC94

Exhaust system

1-G20 *Turbo -1997*

Avgassystem

Turbo -1997

1520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	30	48 12 871		1997, JP	1	Sensor	Givare	4
0570	31	40 62 329		JP	1	Nut	Mutter	5
0580	32	79 69 348		JP	1	Clamp	Klammer	5
0590	33	73 99 652		1996-,267), JP	1	Clamp	Klammer	5
0600	33	73 98 977		268), JP	1	Tensioning band	Spännband	5


267. Ch -V2009467.
268. Ch V2009468-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

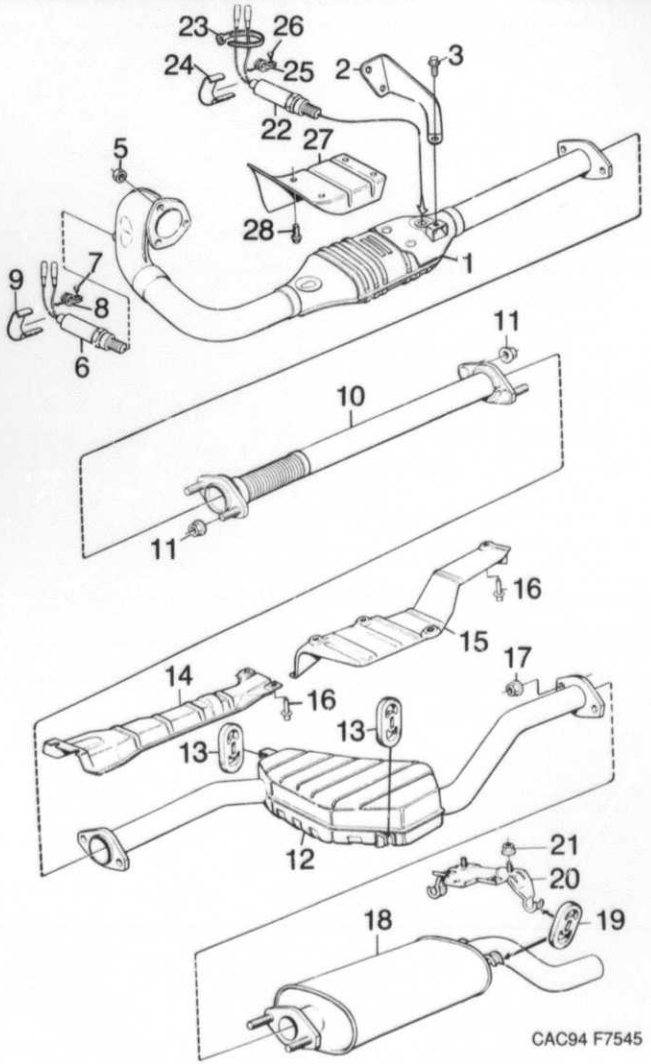

Exhaust system

1-G22 Turbo Front placed converter

Avgassystem

Turbo
Framflyttad katalysator

1525	Pos	Part No/Art nr	K S	Notes/Anmärkning/nr	Qty/ Antal	Description	Benämning	S L
0010	1	45 26 372		-1995, B234	1	TW catalytic converter	Katalysator	8
0020	1	45 26 372		1996-	1	TW catalytic converter	Katalysator	8
0030	1	45 28 238		196), 1996-1997	1	TW catalytic converter	Katalysator	4
0040	1	45 26 869		1996-, US, CA	1	TW catalytic converter	Katalysator	8
0050	2	43 93 450			1	Stay	Stag	5
0060	3	79 78 265			1	Hexagon screw	Sexkantsskruv	5
0070	4	79 78 182			2	Screw	Skruv	5
0080	5	75 19 432			3	Nut	Mutter	5
0090	6	91 46 937		-1995	1	F Heated Oxygen sensor	Syresensor	4
0100	6	46 60 494		1996-	1	F Heated Oxygen sensor	Syresensor	8
0110	7	79 75 451			2	Screw	Skruv	5
0120	8	40 87 078			1	Clamp	Klammer	5
0130	9	41 58 762			1	Clip	Clips	
0140	10	43 93 583			1	Intermediate pipe	Mellanrör	1
0150	11	79 67 953			4	Nut	Mutter	5
0160	12	40 18 867			1	Silencer	Ljuddämpare	1
0170	13	93 92 465			2	Rubber mounting	Gummiupphängning	1
0180	14	40 22 596		-1996	1	Heat shield	Värmesköld	3
0190	15	40 22 505		-1996	1	Heat shield	Värmesköld	3
0200	16	93 93 968			12	Rivet	Nit	5
0210	16	75 91 480		85)	12	Rivet	Nit	5
0220	17	79 67 953			2	Nut	Mutter	5
0230	18	89 79 163		1994, 4D	1	Silencer	Ljuddämpare	1
0240	18	45 25 366		1995-1996, 4D	1	Silencer	Ljuddämpare	1
0250	18	45 25 366		1997, 4D	1	Silencer	Ljuddämpare	1
0260	18	45 28 600		1997, 4D, EU, GB	1	Silencer	Ljuddämpare	1
0270	18	41 59 976		-1996, 5CS	1	Silencer	Ljuddämpare	1
0280	18	41 59 976		1997-, 5CS	1	Silencer	Ljuddämpare	1
0290	18	45 28 616		1997-, 5CS, EU, GB	1	Silencer	Ljuddämpare	1
0300	18	40 15 814		-1996, 5CS, AERO	1	Silencer	Ljuddämpare	1
0310	18	40 15 814		1997-, 5CS, AERO	1	Silencer	Ljuddämpare	1
0320	18	45 28 626		1997-, 5CS, AERO, EU, GB	1	Silencer	Ljuddämpare	1
0330	19	93 92 465			2	Rubber mounting	Gummiupphängning	1
0340	20	39 77 936			1	Suspension hook	Upphängningskrok	5
0350	21	79 67 953			2	Nut	Mutter	5
0360	22	91 47 224		3), 1996-, US, CA	1	Rear heated oxygen sensor	Syresensor	8
0370	23	79 71 880		1996-, US, CA	1	Tensioning band	Spännband	4
0380	24	41 58 762		1996-, US, CA	2	Clip	Clips	
0390	25	73 98 803		1996-, US, CA	1	Clamp	Klammer	
0400	26	79 75 451		1996-, US, CA	1	Screw	Skruv	5
0410	27	91 12 780		B234	1	Heat shield	Värmesköld	5
0420	28	81 25 130		B234	4	Screw	Skruv	5

3. Rear. Bakre.
85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
196. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-G24

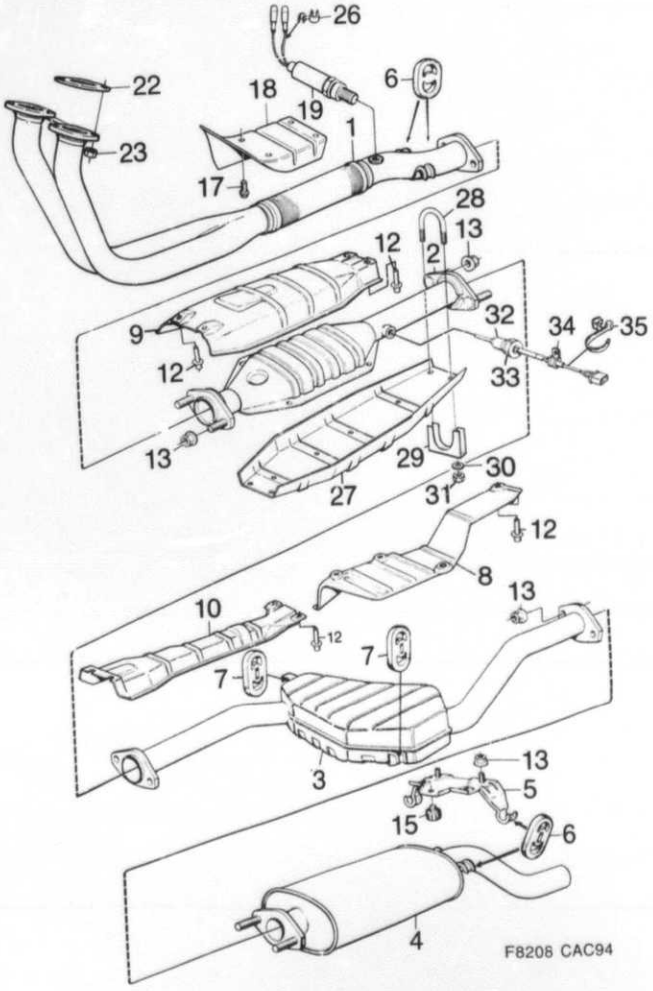

1540	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 42 166			1	Exhaust pipe	Avgasrör	2
0020	1	45 27 669		ME	1	Exhaust pipe	Avgasrör	2
0030	2	93 92 457		-1995	1	TW catalytic converter	Katalysator	4
0040	2	47 50 030		1996-	1	TW catalytic converter	Katalysator	4
0050	2	40 24 253		222)	1	TW catalytic converter	Katalysator	4
0060	3	40 18 875		237)	1	Silencer	Ljuddämpare	1
0070	3	40 18 875		238)	1	Silencer	Ljuddämpare	1
0080	3	43 91 421		238), EU, GB, AU, LA, PA, US, CA	1	Silencer	Ljuddämpare	1
0090								
0100	3	43 93 898		ME	1	Silencer	Ljuddämpare	1
0110	4	89 79 155		1994, 4D	1	Silencer	Ljuddämpare	1
0120	4	45 25 382		1995-1997, 4D	1	Silencer	Ljuddämpare	1
0130	4	41 62 061		5CS	1	Silencer	Ljuddämpare	1
0140	5	89 77 936			1	Suspension hook	Upphängningskrok	5
0150	6	93 92 465			4	Rubber mounting	Gummiupphängning	1
0160	7	93 92 465			2	Rubber mounting	Gummiupphängning	1
0170	8	40 22 505			1	Heat shield	Värmesköld	3
0180	9	40 22 588			1	Heat shield	Värmesköld	3
0190	10	40 22 596			1	Heat shield	Värmesköld	3
0200	12	93 93 968			8	Rivet	Nit	5
0210	12	75 91 480		85)	8	Rivet	Nit	5
0220	13	79 67 953			8	Nut	Mutter	5
0230	15	93 88 588			1	Plug	Plugg	1
0240	17	81 25 130			4	Screw	Skruv	5
0250	18	75 64 321		B204	1	Heat shield	Värmesköld	3
0260	18	91 12 780		B234	1	Heat shield	Värmesköld	5
0270	19	91 46 945		-1995	1	Lambda sonde	Lambdasond	4
0280	19	91 46 945		1996-, B204	1	Lambda sonde	Lambdasond	4
0290	19	43 01 305		176), 1994, B234	1	Lambda sonde	Lambdasond	4
0300	19	42 39 661		176), 1995, B234	1	Lambda sonde	Lambdasond	4
0310	22	89 80 328		1994	2	Gasket	Packning	1
0320	22	46 24 383		1995-	2	Gasket	Packning	8
0330	23	*79 67 870*		NLS - USE 7979503	4	Nut	Mutter	5
0340	26	73 99 272			1	Clamp	Klammer	5
0350	27	40 24 279		JP	1	Heat shield	Värmesköld	
0360	28	40 24 295		JP	2	Brace	Bygel	
0370	29	40 24 303		JP	2	Yoke bracket	Bygelfäste	6
0380	30	91 66 372		JP	4	Washer	Bricka	5
0390	31	79 65 767		JP	4	Lock nut	Låsmutter	3
0400	32	41 60 065		246), JP	1	Sensor	Givare	4
0410	32	44 33 488		247), JP	1	Sensor	Givare	4
0420	33	40 62 329		JP	1	Nut	Mutter	5
0430	34	79 69 348		JP	1	Clamp	Klammer	5
0440	35	73 99 652		1996-,293), JP	1	Clamp	Klammer	5
0450	35	73 98 977		294), JP	1	Tensioning band	Spännband	5


85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
176. Lead resistant Blytålig.
222. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.
237. Ch -T1018084.
238. Ch T1018085-.
246. Ch -T1029654.
247. Ch T1029655-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

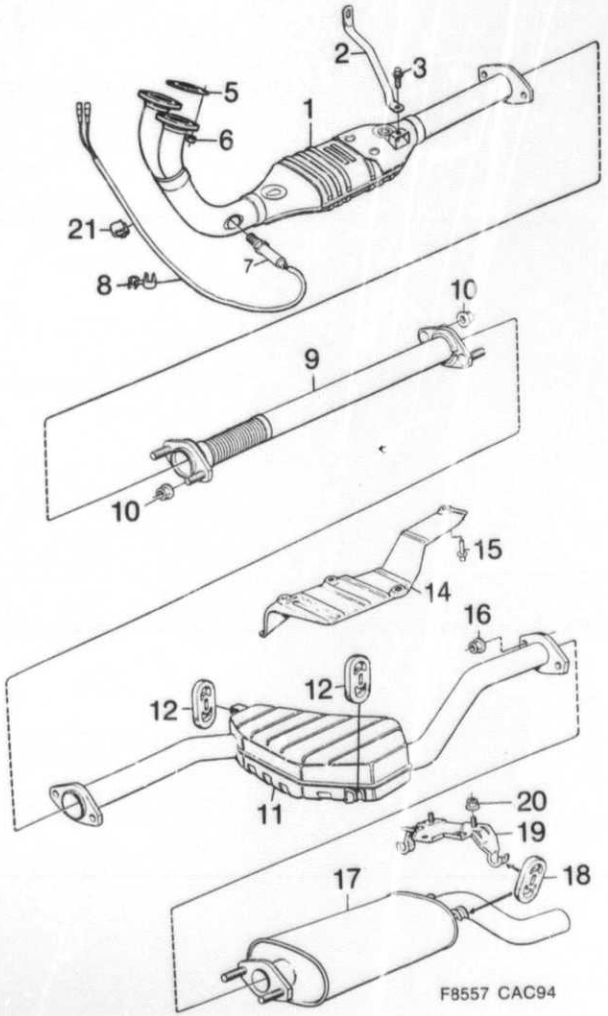

Exhaust system / Avgassystem

1-H02 *Front placed converter* *Framflyttad katalysator*

1543	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 50 600			1	TW catalytic converter	Katalysator	4
0020	1	47 50 402		-1997, JP	1	TW catalytic converter	Katalysator	4
0030	2	41 62 632			1	Stay	Stag	5
0040	3	79 84 511			1	Screw	Skruv	5
0050	5	89 80 328			2	Gasket	Packning	1
0060	6	79 79 503			4	Nut	Mutter	5
0070	7	91 46 937			1	F Heated Oxygen sensor	Syresensor	4
0080	8	73 98 415			1	Clamp	Klämma	5
0090	9	43 93 583			1	Intermediate pipe	Mellanrör	1
0100	10	79 67 953			4	Nut	Mutter	5
0110	11	40 18 875			1	Silencer	Ljuddämpare	1
0120	12	93 92 465			2	Rubber mounting	Gummiupphängning	1
0130	14	40 22 505			1	Heat shield	Värmesköld	3
0140	15	93 93 968			8	Rivet	Nit	5
0150	15	75 91 480		85)	8	Rivet	Nit	5
0160	16	79 67 953			2	Nut	Mutter	5
0170	17	88 22 231		5D	1	Silencer	Ljuddämpare	1
0180	17	89 79 155		-1997, 4D	1	Silencer	Ljuddämpare	1
0190	17	41 62 061		5C	1	Silencer	Ljuddämpare	1
0200	18	93 92 465			2	Rubber mounting	Gummiupphängning	1
0210	19	89 77 936			1	Suspension hook	Upphängningskrok	5
0220	20	79 67 953			2	Nut	Mutter	5
0230	21	73 98 746			3	Clamp	Klammer	5
0240	22	91 12 780			1	Heat shield	Värmesköld	5
0250	23	81 25 130			4	Screw	Skruv	5

85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H04

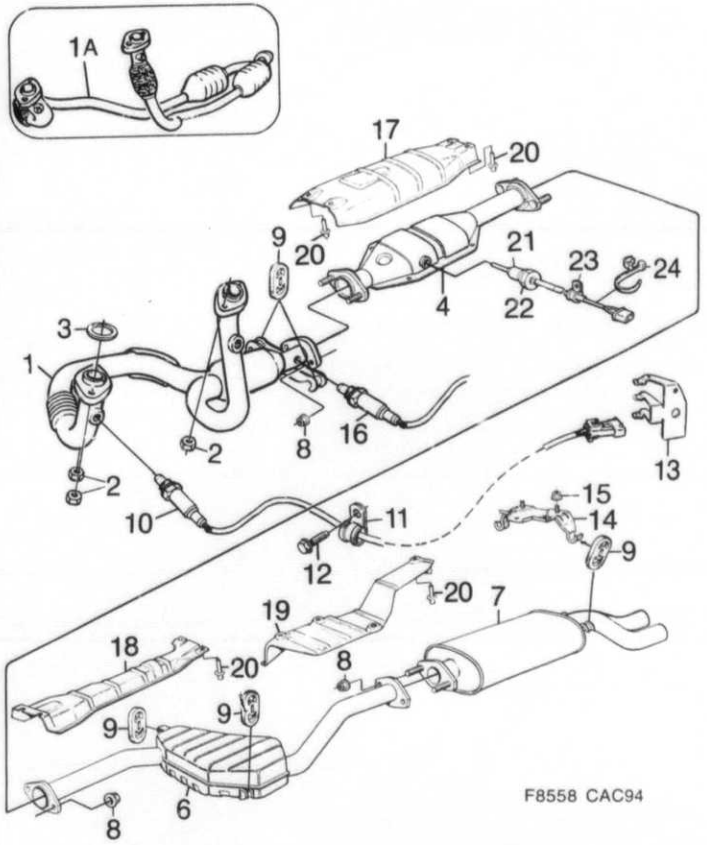

1545	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 74 914		1995	1	Exhaust pipe	Avgasrör	8
0020	1	43 74 914		1996-	1	Exhaust pipe	Avgasrör	8
0030	1A	45 26 877		1996-, US, CA	1	TW catalytic converter	Katalysator	8
0040	2	40 87 896		-1995	4	Lock nut	Låsmutter	5
0050	2	43 47 902		1996-	4	Nut	Mutter	5
0060	3	44 43 958			2	Exhaust gasket	Avgaspackning	8
0070	4	44 42 505		-1995	1	TW catalytic converter	Katalysator	8
0080	4	47 50 055		1996-	1	TW catalytic converter	Katalysator	4
0090	4	45 26 364		196), -1995, JP	1	TW catalytic converter	Katalysator	4
0100	4	47 50 063		196), 1996-, JP	1	TW catalytic converter	Katalysator	4
0110	6	43 91 421			1	Silencer	Ljuddämpare	1
0120	7	44 40 145		-1997, 4D	1	Silencer	Ljuddämpare	1
0130	7	41 64 315		5CS	1	Silencer	Ljuddämpare	1
0140	8	79 67 953			2	Nut	Mutter	5
0150	9	93 92 465			6	Rubber mounting	Gummiupphängning	1
0160	10	42 39 042		2), 1995	2	F Heated Oxygen sensor	Syresensor	4
0170	10	42 39 042		2), 1996-	2	F Heated Oxygen sensor	Syresensor	4
0180	10	43 01 545		2), 1996-, US, CA	2	F Heated Oxygen sensor	Syresensor	8
0190	10	42 39 596		2,176)	2	F Heated Oxygen sensor	Syresensor	4
0200	11	40 87 714		1995	1	Clamp	Klammer	5
0210	12	79 78 265		1995	1	Hexagon screw	Sexkantsskruv	5
0220	13	43 54 668		1995	1	Bracket	Konsol	5
0230	14	89 77 936			1	Suspension hook	Upphängningskrok	5
0240	15	79 67 953			2	Nut	Mutter	5
0250	16	46 60 163		3), 1996-, US, CA	1	Rear heated oxygen sensor, grey	Syresensor grå	8
0260								
0270	16	46 60 171		3), 1996-, US, CA	1	Rear heated oxygen sensor, brown	Syresensor brun	8
0280								
0290								
0300	17	40 22 588		1995	1	Heat shield	Värmesköld	3
0310	17	45 27 958		1996-	1	Shield	Sköld	3
0320	18	40 22 596			1	Heat shield	Värmesköld	3
0330	19	40 22 505			1	Heat shield	Värmesköld	3
0340	20	93 93 968			8	Rivet	Nit	5
0350	20	46 85 251		85)	8	Rivet	Nit	5
0360								
0370	21	41 60 065		246), JP	1	Sensor	Givare	4
0380	21	44 33 488		247)-1996, JP	1	Sensor	Givare	4
0390	21	48 12 889		-1997, JP	1	Sensor	Givare	4
0400	22	40 62 329		-1997, JP	1	Nut	Mutter	5
0410	23	79 69 348		-1997, JP	1	Clamp	Klammer	5
0420	24	73 99 652		1996-1997, JP	1	Clamp	Klammer	5

2. Front. Främre.
3. Rear. Bakre.
85. Alternative to 93 93 968 for larger holes. Alternativ till 93 93 968 för större hål.
176. Lead resistant Blytålig.
196. With heat shield mounted on the catalytic converter. Med värmesköld monterad på katalysatorn.
246. Ch -T1029654.
247. Ch T1029655-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1 -H06

Cooling system 4-cyl. / Kylsystem 4-cyl

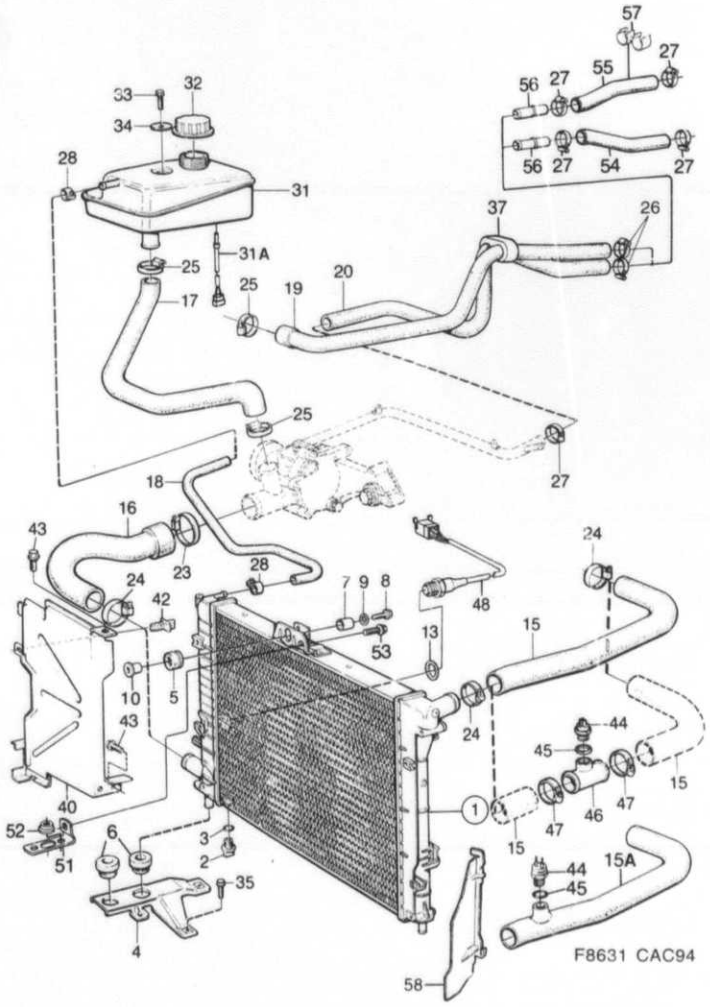

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*75 99 285*		191), M NLS – USE 7599194	1	Radiator	Kylare	4
0020	1	*43 58 057*		192)-1994, M NLS – USE 4358040	1	Radiator	Kylare	4
0030								
0040	1	75 99 194		191), A	1	Radiator	Kylare	4
0050	1	43 58 040		192)-1994, A	1	Radiator	Kylare	4
0060								
0070	1	43 60 293		1995, I	1	Radiator	Kylare	4
0080	1	43 60 327		1995,8), I	1	Radiator	Kylare	4
0090	1	43 60 327		1995, TURBO	1	Radiator	Kylare	4
0100	1	43 60 327		1996-	1	Radiator	Kylare	4
0110								
0120	2	93 85 824			1	▪Drain valve	▪Avtappningsventil	3
0130	3	79 75 725			1	▪O-ring	▪O-ring	2
0140	4			LH	1	Bracket	Fäste	
0150				See page 8A-005, 4-C06				
0160	4	75 76 390		RH	1	Bracket	Fäste	6
0170	4	75 76 382		RH, TURBO	1	Bracket	Fäste	6
0180	5	93 77 334			1	Rubber bushing	Gummibussning	4
0190	6	40 27 488			2	Rubber bushing	Gummibussning	4
0200	7	75 53 415			1	Rubber bushing	Gummibussning	4
0210	8	79 78 133			1	Screw	Skruv	5
0220	9	79 75 469			1	Washer	Bricka	5
0230	10	73 99 454			1	Nut	Mutter	5
0240	13	93 86 285			1	Seal	Tätning	5
0250	15	*75 51 187*		1994 NLS – USE 4359691	1	Hose	Slang	2
0260	15	48 76 363		1994,145,150)	1	Hose	Slang	2
0270	15	48 76 363		1995-	1	Hose	Slang	2
0280	15A	*41 18 188*		-1994 NLS – USE 4359709	1	Hose	Slang	2
0290	15A	43 59 709		145,147),-1994	1	Hose	Slang	2
0300	16	75 76 663		B204, B234,-1996	1	Hose	Slang	3
0310	16	• 48 76 645		B204, B234, 1997-	1	Hose	Slang	3
0320	16	43 59 030		84), B204I	1	Hose	Slang	3
0330	17	75 76 671		B204, B234, -1996	1	Hose	Slang	3
0340	17	• 48 76 611		B204, B234, 1997-	1	Hose	Slang	3
0350	18	42 84 196		84), B204I	1	Hose	Slang	2
0360	18	42 84 188		-1996	1	Hose	Slang	2
0370	18	• 48 76 637		1997-	1	Hose	Slang	2
0380	19	*40 28 593*		1994 NLS – USE 4359725	1	Hose	Slang	3
0390	19	48 76 371		1994,145,146)	1	Hose	Slang	3
0400	19	48 76 371		1995-	1	Hose	Slang	3
0410	20	41 20 465		-1996	1	Hose	Slang	3
0420	20	• 48 76 652		1997-	1	Hose	Slang	3
0430	23	79 70 122			1	Hose clamp	Slangklamma	5
0440	24	79 70 114			3	Hose clamp	Slangklamma	5
0450	25	79 70 098			3	Hose clamp	Slangklamma	5
0460	26	79 84 727		-1996	2	Hose clamp	Slangklämma	5
0470	26	46 85 947		1997-	2	Hose clamp	Slangklamma	5
0480	27	46 85 947			5	Hose clamp	Slangklamma	5
0490	28	79 70 049			2	Hose clamp	Slangklamma	5
0500	31	41 21 067			1	Expansion tank	Expansionstank	3
0510	31A	75 54 348			1	Engine cool. level sensor	Nivågivare	3
0520	32	75 77 323		1994	1	Cover	Lock	3

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
84. For cars without air conditioning. För bilar utan luftkonditionering.
145. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
146. Alternative for 40 28 593. Alternativ för 40 28 593.
147. Alternative for 41 18 188. Alternativ för 41 18 188.
150. Alternative for 75 51 187. Alternativ för 75 51 187.
191. Ch. -R1018609.
192. Ch R1018610-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K32
10	Numerical register	6-A01

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H08

Cooling system 4-cyl.
Kylsystem 4-cyl

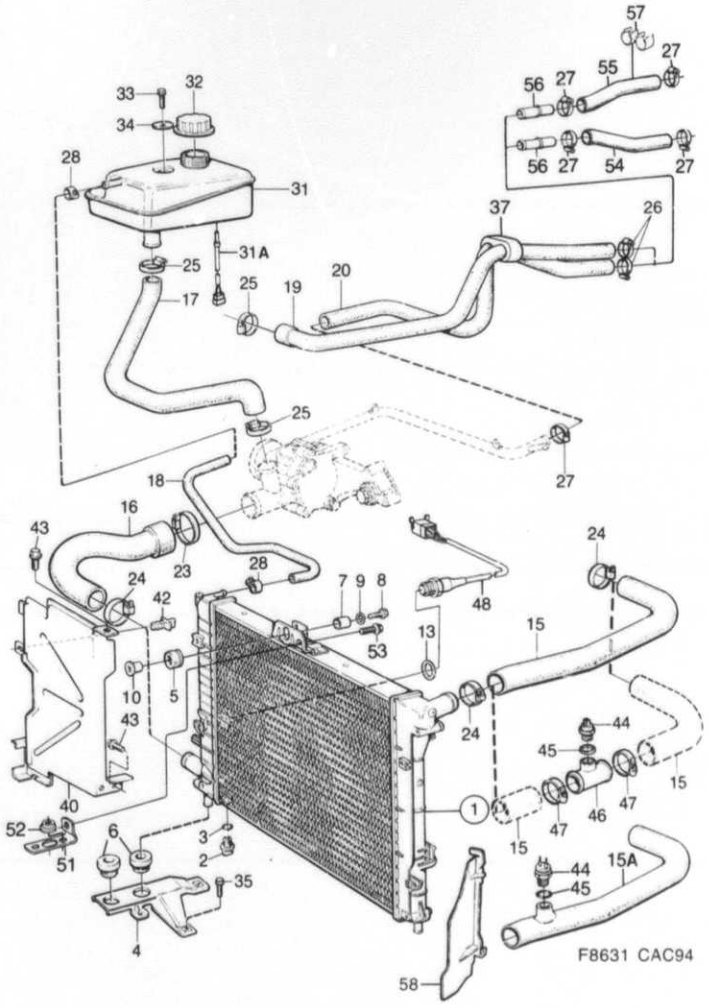

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	32	43 95 570		1995-	1	Cover	Lock	3
0540	33	80 84 063			1	Screw	Skruv	5
0550	34	83 71 650			1	Washer	Bricka	5
0560	35	80 19 895		-1996	3	Screw	Skruv	5
0570	35	79 78 091		1997-	3	Screw	Skruv	5
0580	37	43 95 554			1	Grommet	Genomföring	4
0590	40	41 18 290			1	Cover plate	Täckplåt	5
0600	42	93 85 832			1	Rubber strap	Gummistropp	4
0610	43	79 71 823			3	Screw	Skruv	5
0620	44	40 86 724		1994	1	Thermo contact	Termokontakt	2
0630	45	83 30 268		1994,19)	1	Seal	Tätning	5
0640	46	75 76 960		1994,19)	1	Tube	Rör	5
0650	47	79 70 114		1994,19)	2	Hose clamp	Slangklamma	5
0660	48	40 86 690		1994	1	Thermo contact	Termokontakt	2
0670	48	40 86 682		86)1994	1	Thermo contact	Termokontakt	2
0680	51	75 50 346			1	Bracket	Fäste	5
0690	52	75 50 353			1	Rubber bushing	Gummibussning	5
0700	53	79 72 441			1	Screw	Skruv	5
0710	54	40 28 619			1	Hose	Slang	3
0720	55	40 28 635			1	Hose	Slang	3
0730	56	40 28 650			1	Junction pipe	Skarvrör	5
0740	57	96 27 266		TURBO	1	Clamp	Klammer	5
0750	58	43 58 479		217) I	1	Air shield	Luftskärm	5
0760								
0770				145)	X	Temperature gauge kit	Temperaturmätare sats	
0780				See page 2-167, 1-I24				


19. Part of AC-disengagement kit 75 77 042. Ingår i sats, AC-frånkoppling 75 77 042.
86. For twostep cooling fan. För tvåstegs kylfläkt.
145. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY
217. Ch. S1024409-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

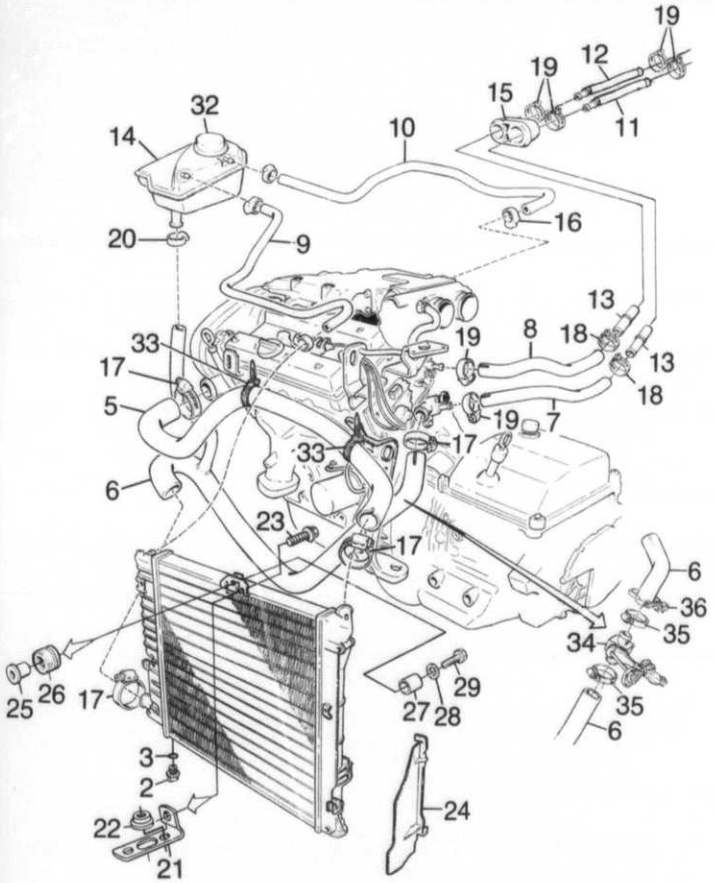

F8394 CAC94

1555 Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010 1	43 60 327			1	Radiator	Kylare	4
0020 2	93 85 824			1	.Drain valve	.Avtappningsventil	3
0030 3	79 75 725			1	.O-ring	.O-ring	2
0040 5	42 84 824		1994	1	Hose	Slang	2
0050 5	48 76 389		1994,145)	1	Hose	Slang	2
0060 5	48 76 389		1995-	1	Hose	Slang	2
0070 6	42 84 832			1	Hose	Slang	2
0080 7	*43 56 549*		1994 NLS – USE 4395364	1	Hose	Slang	5
0090 7	48 76 405		1994,145)	1	Hose	Slang	5
0100 7	48 76 405		1995-	1	Hose	Slang	5
0110 8	*43 56 531*		1994 NLS – USE 4395356	1	Hose	Slang	5
0120 8	48 76 397		1994,145)	1	Hose	Slang	5
0130 8	48 76 397		1995-	1	Hose	Slang	5
0140 9	42 84 873			1	Hose	Slang	3
0150 10	41 65 676			1	Hose	Slang	3
0160 11	40 28 619			1	Hose	Slang	3
0170 12	40 28 635			1	Hose	Slang	3
0180 13	40 28 650			2	Junction pipe	Skarvrör	5
0190 14	43 57 299			1	Expansion tank	Expansionstank	3
0200 15	43 95 554			1	Grommet	Genomföring	4
0210 16	79 70 049			1	Hose clamp	Slangklamma	5
0220 17	79 70 114			1	Hose clamp	Slangklamma	5
0230 18	79 84 727		-1996	2	Hose clamp	Slangklämma	5
0240 18	46 85 947		1997-	2	Hose clamp	Slangklamma	5
0250 19	79 70 072			6	Hose clamp	Slangklamma	5
0260 20	79 70 098			1	Hose clamp	Slangklamma	5
0270 21	75 50 346			1	Bracket	Fäste	5
0280 22	75 50 353			1	Rubber bushing	Gummibussning	5
0290 23	79 72 441			1	Screw	Skruv	5
0300 24	43 58 479			1	Air shield	Luftskärm	5
0310 25	73 99 454			1	Nut	Mutter	5
0320 26	93 77 334			1	Rubber bushing	Gummibussning	4
0330 27	75 53 415			1	Rubber bushing	Gummibussning	4
0340 28	79 75 469			1	Washer	Bricka	5
0350 29	79 78 133			1	Screw	Skruv	5
0360 30	75 76 390			1	Bracket	Fäste	6
0370 31	40 27 488			2	Rubber bushing	Gummibussning	4
0380 32	43 95 570			1	Cover	Lock	3
0390 33	85 52 663			2	Tensioning band	Spännband	5
0400 34	43 97 295		CA	1	Engine heater	Motorvärmare	
0410 35	79 70 106		CA	2	Hose clamp	Slangklamma	5
0420 36	40 87 086		CA	1	Holder	Hållare	


145. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

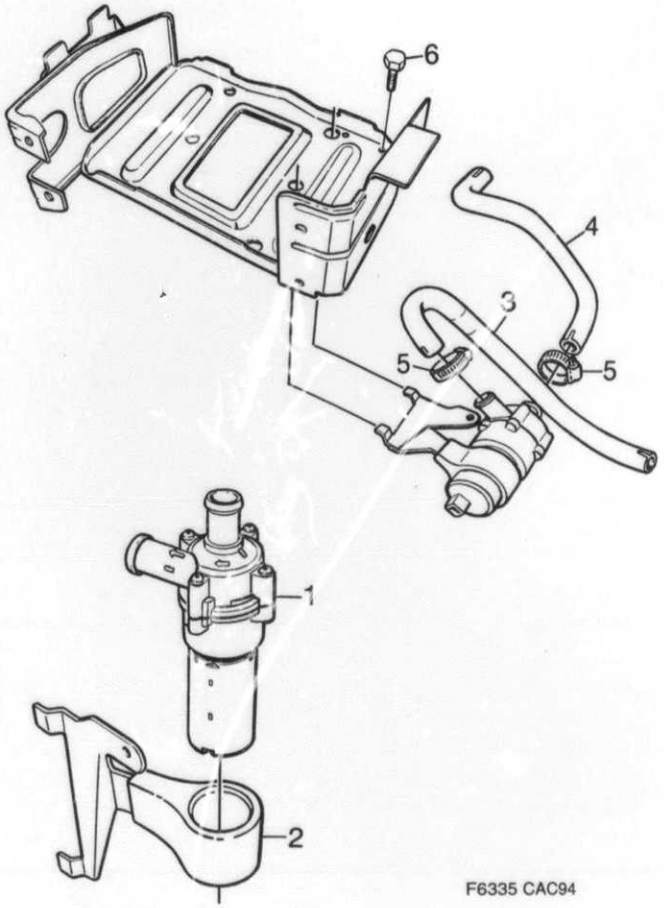

F6335 CAC94

1557

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	43 95 612		1995-, SE,US,CA 1996-, EU NOT GB	1	Coolant pump	Kylvätskepump	2
0020							
0030 2	43 95 620			1	Bracket	Konsol	6
0040 3	43 95 638			1	Hose	Slang	5
0050 4	43 95 646			1	Hose	Slang	5
0060 5	79 70 080			2	Hose clamp	Slangklamma	5
0070 6	79 77 689			1	Screw	Skruv	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H14

Fan, etc
Fläkt, etc

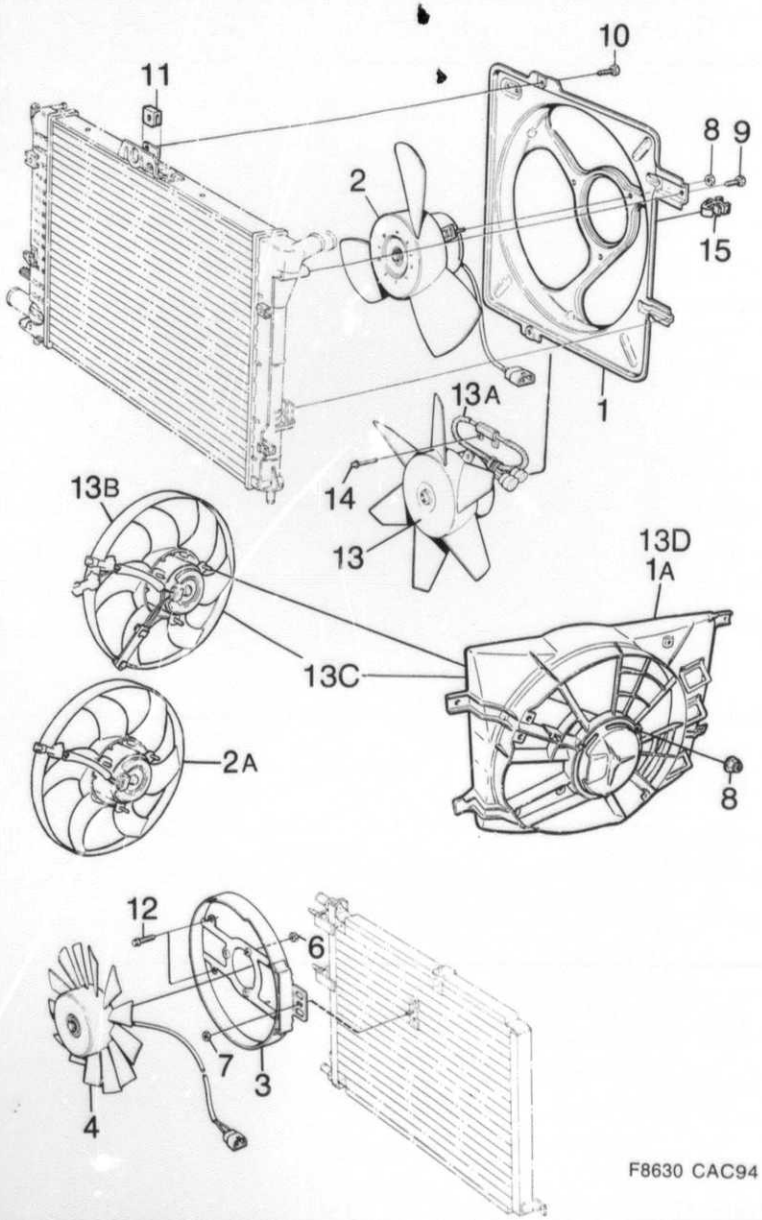

F8630 CAC94

1560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 92 918		191)	1	Fan shroud	Fläktkåpa	4
0020	1	43 58 115		192,225)	1	Fan shroud	Fläktkåpa	4
0030	1A	43 59 899		226)	1	Fan shroud	Fläktkåpa	4
0040								
0050	2	93 82 144		1994,130)	1	Fan unit	Fläktenhet	4
0060	2	43 60 954		1995-,225,130)	1	Fan unit	Fläktenhet	4
0070	2A	43 57 133		226,239,130)	1	Fan unit	Fläktenhet	4
0080	2A	43 96 248		240,130)	1	Fan unit	Fläktenhet	4
0090								
0100	3	75 77 885			1	Fan shroud	Fläktkåpa	4
0110	4	75 98 980	S	AC	1	Fan unit	Fläktenhet	4
0120	6	79 75 576	S		3	Nut	Mutter	5
0130	7	79 71 658		-1995	1	Nut	Mutter	5
0140	7	79 74 298		1996-	1	Nut	Mutter	5
0150	8	79 74 298	S		3	Nut	Mutter	5
0160	9	79 71 823			1	Screw	Skruv	5
0170	10	79 22 800			2	Screw	Skruv	5
0180	11	94 27 014		-1994	2	Clip nut	Clipsmutter	3
0190	11	79 75 071		1995-	2	Clip nut	Klämmutter	5
0200	12	79 72 607	S		2	Screw	Skruv	5
0210								
0220	13	43 56 994		1994,87)	1	Fan unit	Fläktenhet	4
0230	13	43 60 962		1995-,225,87)	1	Fan unit	Fläktenhet	4
0240	13A	43 95 034			1	.Cable harness	.Kabelhärva	
0250	13B	43 57 141		226,239,87,130)	1	Fan unit	Fläktenhet	4
0260	13B	43 96 255		240,256,87,130)	1	Fan unit	Fläktenhet	4
0261								
0270	13C	88 22 777		240,256,87,130) ALT.TO 4396255	1	Fan kit	Fläktsats	6
0275								
0280	13B	48 77 015			1	.Fan unit	.Fläktenhet	4
0290	13D	43 59 899			1	.Fan shroud	.Fläktkåpa	4
0291								
0294	13B	48 77 015		257,87,130)	1	Fan unit	Fläktenhet	4
0300								
0310	14	98 49 514		1994	2	Rivet	Nit	5
0320	14	*79 72 896*		1995- NLS – USE 7965684, 8073090	2	Screw	Skruv	5
0320								
0330	15	41 76 095			1	Clip	Clips	5


87. Twostep. Tvåstegs.
130. Fan motor and blade are available only as factory balanced assembly. Fläktmotor och fläktblad finns endast tillgängliga som fabriksbalanserad kompiettenhet.
191. Ch. -R1018609.
192. Ch R1018610-.
225. Ch. -S1023556.
226. Ch. S1023557-.
239. Ch. - T1004771
240. Ch. T1004772-
256. Ch. -V1005729
257. Ch. V1005730-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

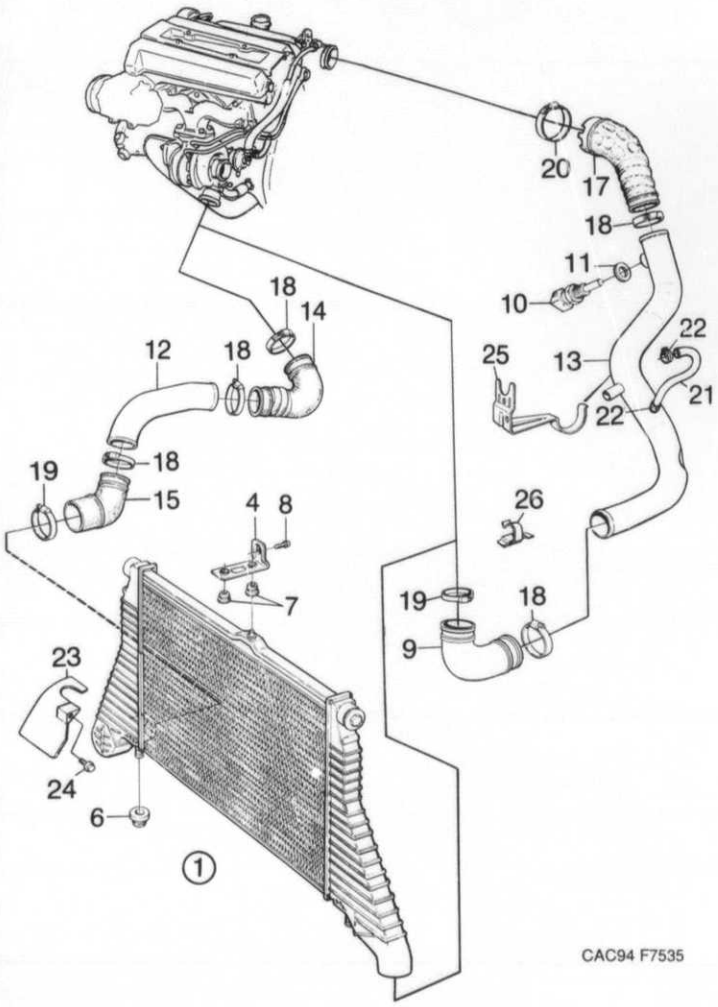

CAC94 F7535

Cooling system

1-H16 Charge cooler

Kylsystem

Laddluftkylare

1570	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*75 96 257*		1994 NLS – USE 4396818	1	Charge air cooler	Laddluftkylare	4
0020	1	43 96 818		1995-	1	Charge air cooler	Laddluftkylare	4
0030	4	75 50 346			1	Bracket	Fäste	5
0040	6	40 27 488			2	Rubber bushing	Gummibussning	4
0050	7	75 50 353			1	Rubber bushing	Gummibussning	5
0060	8	79 72 441			1	Screw	Skruv	5
0070	9	89 76 912			1	Hose	Slang	4
0080	9	41 64 745		219) -1995, B204S	1	Hose	Slang	6
0090	10	88 59 886		-1995	1	Intake air temp. sensor	Temperaturgivare	3
0100	10	91 74 442		1996-	1	Intake air temp. sensor	Temperaturgivare	8
0110	11	41 61 261			1	Washer	Bricka	2
0120	12	41 57 038			1	Tube	Rör	5
0140								
0150	13	43 90 159		219) -1995, B204S, M	1	Pipe	Rör	6
0160	13	43 90 167		219) -1995, B204S, A	1	Pipe	Rör	6
0170								
0180	13	41 56 642		-1995, B204L, M	1	Pipe	Rör	6
0190	13	41 56 451		-1995, B204L, A	1	Pipe	Rör	6
0200								
0210	13	41 56 642		-1995, B234, M	1	Pipe	Rör	6
0220	13	41 56 451		-1995, B234, A	1	Pipe	Rör	6
0230								
0240	13	41 56 642		1996-, TURBO, M	1	Pipe	Rör	6
0250	13	41 56 451		1996-, TURBO, A	1	Pipe	Rör	6
0260								
0270	14	41 57 020			1	Hose	Slang	5
0280	15	41 57 046			1	Hose	Slang	5
0290	17	41 56 444			1	Hose	Slang	6
0300	17	43 92 577		219) -1995, B204S	1	Hose	Slang	6
0310	18	79 70 130			5	Hose clamp	Slangklamma	5
0320	19	79 70 148			2	Hose clamp	Slangklamma	5
0330	20	79 70 155			1	Hose clamp	Slangklamma	5
0340	21	41 56 345		A, L=180 MM	1	Hose	Slang	3
0350	21	89 78 652		219) -1995, B204S, A, L=305 MM	1	Hose	Slang	3
0360								
0370	22	79 73 522		A	2	Hose clamp	Slangklamma	5
0380	23	40 28 767		AC	1	Cover plate	Täckplåt	5
0390	24	79 72 607		AC	2	Screw	Skruv	5
0400	25	43 90 589		219) B204S	1	Holder	Hållare	6
0410	26	92 28 156		219) -1995, B204S, A	2	Clip	Clips	5

219. For cars without charge cooler. För bilar utan laddluftkyl.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H18

Oil cooler
6-cylinder

Oljekylare
6-cylindrig

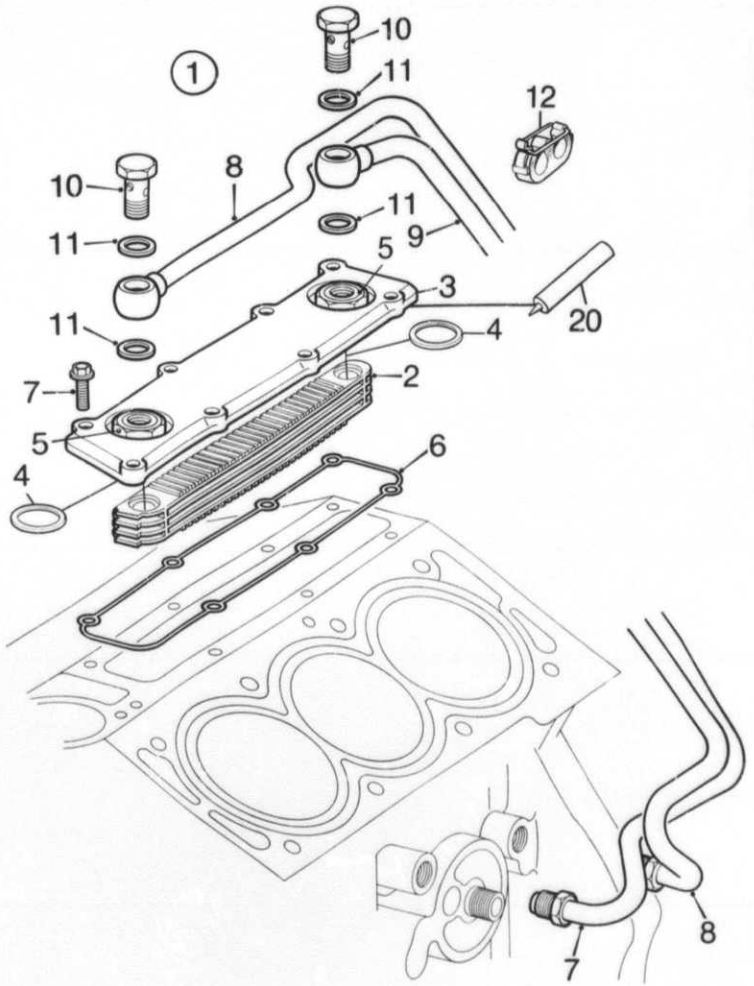

F7990 CAC94

1580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 02 431			1	Oil cooler	Oljekylare	4
0020	2	45 02 449		-1996	1	.Oil cooler	.Oljekylare	4
0030	2	• 47 70 988		1997-	1	.Oil cooler	.Oljekylare	4
0040	3	47 70 152		(4502456)	1	.Cover	.Lock	4
0050	4	45 02 472			2	.Seal	.Tätning	4
0060	5	45 02 480			2	.Nut	.Mutter	5
0070	6	46 20 001		50ML	1	Flange sealant	Flänstätning	5
0080	7	43 45 854			8	Screw	Skruv	5
0090	8	45 02 506		-1995	1	Oil pipe	Oljerör	4
0100	8	46 20 274		1996-	1	Oil pipe	Oljerör	4
0110	9	45 02 514		-1995	1	Oil pipe	Oljerör	4
0120	9	46 20 282		1996-	1	Oil pipe	Oljerör	4
0130	10	46 21 397			2	Hollow screw	Hålskruv	5
0140	11	46 21 413			4	Sealing ring	Tätningsring	4
0150	12	46 21 421			1	Bracket	Fäste	
0160	20	87 81 841		280 ML	X	Flange sealant	Flänstätning	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1 -H20

Air oil cooler
Engine, B204, B234

Luftoljekylare
Motor, B204, B234

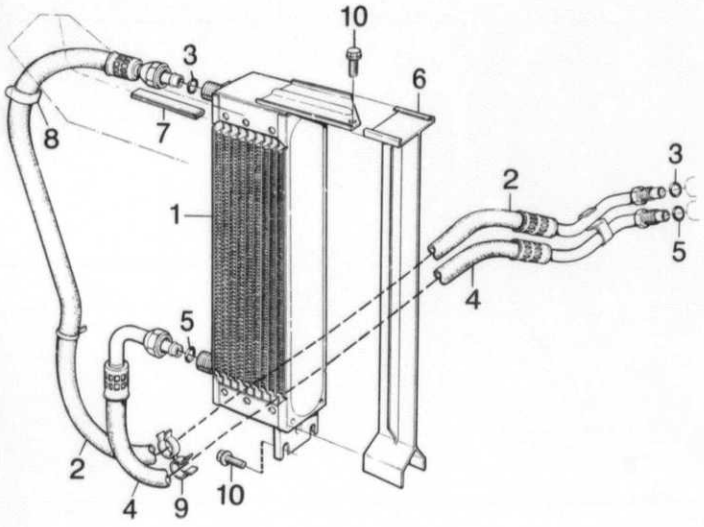

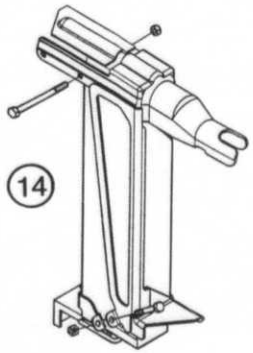

CAC94 F7536

1590	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 29 625		I	1	Oil cooler	Oljekylare	4
0020	1	75 96 018		1995-,8), I	1	Oil cooler	Oljekylare	4
0030	1	75 96 018		TURBO	1	Oil cooler	Oljekylare	4
0040	2	43 95 877			1	Hose	Slang	3
0050	3	79 77 598			2	.O-ring	.O-ring	2
0060	4	43 58 453			1	Hose	Slang	3
0070	5	79 77 598			2	.O-ring	.O-ring	2
0080	6	75 96 604			1	Cover plate	Täckplåt	5
0090	7	82 78 558		-1996	1	Protecting moulding	Skyddslist	5
0100	7	• 48 67 016		1997-	1	Edge protection moulding	Kantskyddslist	5
0110	8	73 98 894			1	Clamp	Klämmer	5
0120	9	40 28 569			1	Clamp	Klämmer	5
0130	10	79 71 823			3	Screw	Skruv	5
0140								
0150	14	43 96 347		SEE SI 261-1547	1	Protecting casing kit	Skyddskåpa sats	5
0160								

8. For tropical market; ME, LA, AU, HK, SG, TH, CY För tropisk marknad; ME, LA, AU, HK, SG, TH, CY

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H22

Air oil cooler
Automatic gearbox

Luftoljekylare
Automatväxellåda

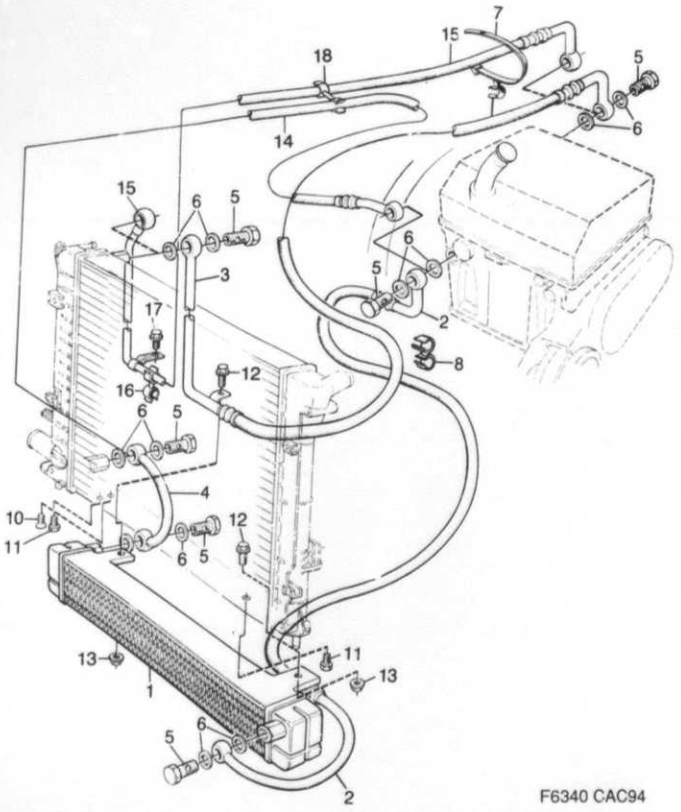

F6340 CAC94

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 98 311			1	Oil cooler	Oljekylare	4
0020	2	43 57 604			1	Hydraulic hose	Hydraulslang	3
0030	3	*40 28 882*		1994 NLS – USE 4356267	1	Hydraulic hose	Hydraulslang	3
0040	3	43 56 267		1995-	1	Hydraulic hose	Hydraulslang	3
0050	4	75 70 823			1	Hydraulic hose	Hydraulslang	4
0060	5	*83 22 927*		1994 NLS – USE 4374211	6	Banjo bolt	Hålbult	5
0065	5	43 74 211		1995-	6	Banjo bolt	Hålbult	5
0070	6	41 61 162			12	Seal	Tätning	5
0080	7	75 93 221			1	Tensioning band	Spännband	5
0090	8	73 98 464			1	Clamp	Klammer	5
0100	8	*42 49 108*		B308 NLS – USE 4424883	1	Tube clamp	Rörklamma	5
0110	12	79 65 544			2	Screw	Skruv	5
0120	13	79 74 298			1	Nut	Mutter	5
0130	14	40 29 344		20)	1	Hydraulic hose	Hydraulslang	3
0140	15	*40 28 882*		20) NLS – USE 4356267	1	Hydraulic hose	Hydraulslang	3
0150	16	75 59 768		20)	2	Clip	Clips	5
0160	17	79 65 544		20)	1	Screw	Skruv	5
0170	18	73 98 464		20)	1	Clamp	Klammer	5
0180								
0190		40 28 866		TURBO WITHOUT AC, I See page 2-169, 1-J02	1	Oil cooler kit	Oljekylarsats	4
0200								

20. For cars without air oil cooler. För bilar utan luftoljekylare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-H24

Coolant pump
4-cylinder

Kylvätskepump
4-cylindrig

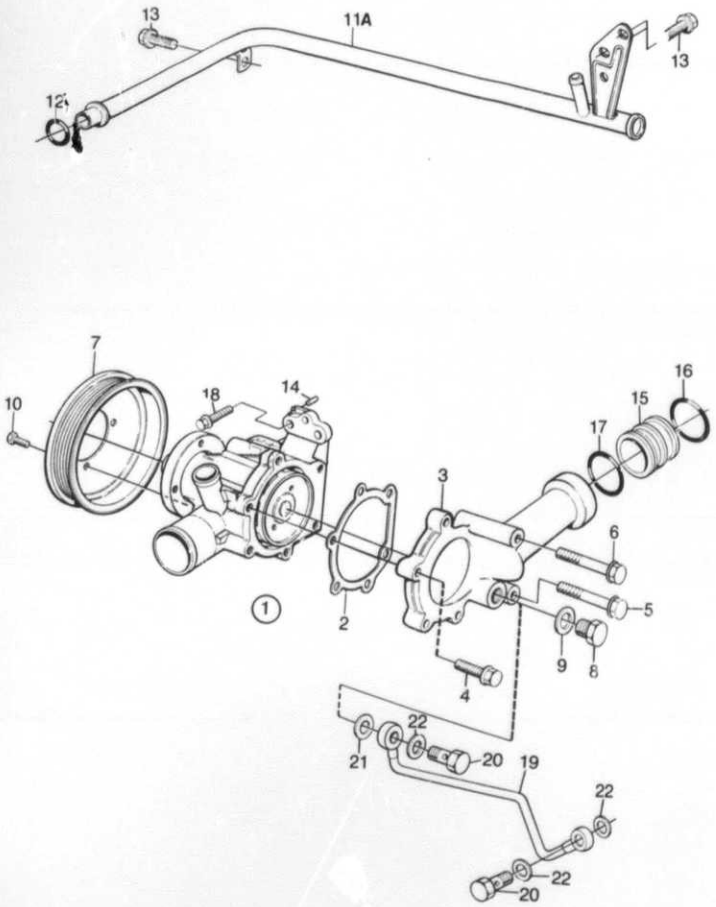

1710	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	93 21 688		7)	1	Coolant pump	Kylvätskepump	2
0020				See page 2-167, 1-I24				
0030	2	91 13 325			1	.Gasket	.Packning	2
0040	3	91 14 265			1	Bracket	Konsol	6
0050	4	81 25 189		-1995	4	Screw	Skruv	5
0051	4	79 70 288		1996-	4	Screw	Skruv	5
0060	5	81 25 247		-1995	1	Screw	Skruv	5
0061	5	79 75 238		1996-	1	Screw	Skruv	5
0070	6	81 25 270		-1995	1	Screw	Skruv	5
0071	6	79 85 062		1996-	1	Screw	Skruv	5
0080	7	75 65 104			1	Pulley	Remskiva	6
0090	8	*81 23 721*		NLS – USE 7563042	1	Plug	Propp	5
0100	9	75 22 709			1	Gasket	Packning	1
0110	10	91 66 281		-1995	4	Screw	Skruv	5
0115	10	81 25 015		1996-	4	Screw	Skruv	5
0120	11A	91 49 766			1	Tube	Rör	5
0130	12	91 46 598			1	.O-ring	.O-ring	2
0140	13	79 71 294			3	Screw	Skruv	5
0150	14	79 18 337		1994	1	Tube	Rör	5
0160	15	91 13 341		B234	1	Tube	Rör	5
0170	15	91 37 514		B204	1	Tube	Rör	5
0180	16	91 46 606			1	O-ring	O-ring	2
0190	17	91 46 614			1	O-ring	O-ring	2
0200	18	80 59 800		-1995	3	Screw	Skruv	5
0205	18	79 78 216		1996-	3	Hexagon screw	Sexkantsskruv	5
0210	19	91 46 184		TURBO T25	1	Tube	Rör	5
0220	19	91 45 897		TURBO TD04	1	Tube	Rör	5
0230	20	91 36 524		TURBO	2	Banjo screw	Banjoskruv	5
0240	21	*83 26 712*		TURBO NLS – USE 4161162	1	Seal	Tätning	5
0250	22	81 24 133		TURBO	3	Gasket	Packning	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I02

Coolant pump
6-cylinder

Kylvätskepump
6-cylindrig

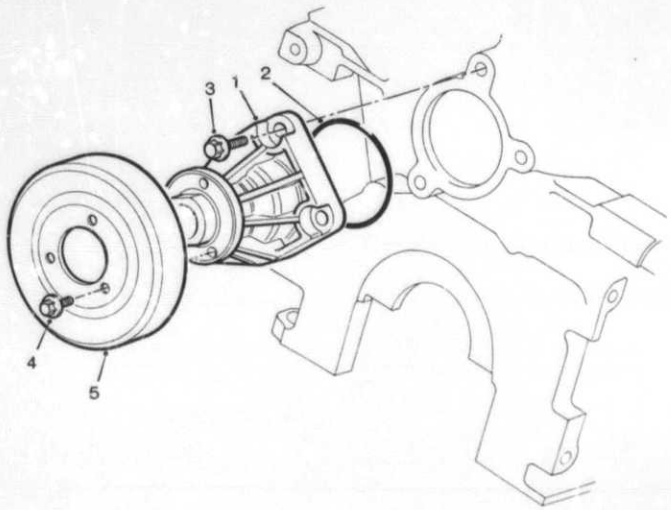

F6342 CAC94

1725	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 21 944			1	Coolant pump	Kylvätskepump	2
0020	2	45 02 985			1	.O-ring	.O-ring	2
0030				1)	1	.Coolant pump	.Kylvätskepump	
0040	3	45 03 009			3	Screw	Skruv	5
0050	4	79 78 091		-1995	3	Screw	Skruv	5
0060	4	43 47 738		1996-	3	Screw	Skruv	5
0070	5	44 43 206		-1995	1	Pulley	Remskiva	6
0080	5	46 21 470		1996-	1	Pulley	Remskiva	6


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

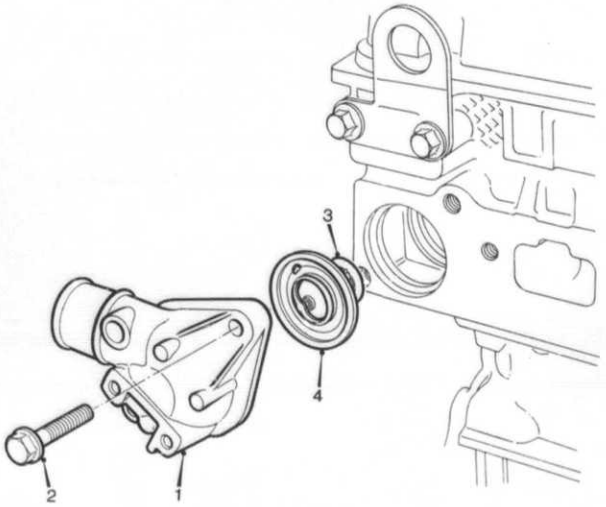

F6343 CAC94

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 43 934			1	Cover	Lock	5
0020	2	79 70 015			2	Screw	Skruv	5
0030	3	88 22 025		88° C	1	Thermostat kit	Termostatsats	8
0040				See page 2-167, 1-I24				
0050	3	88 17 538		82° C	1	Thermostat kit	Termostatsats	1
0060				See page 2-167, 1-I24				
0070	4	83 52 692			1	•Gasket	•Packning	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I06

Thermostat 6-cylinder

Termostat 6-cylindrig

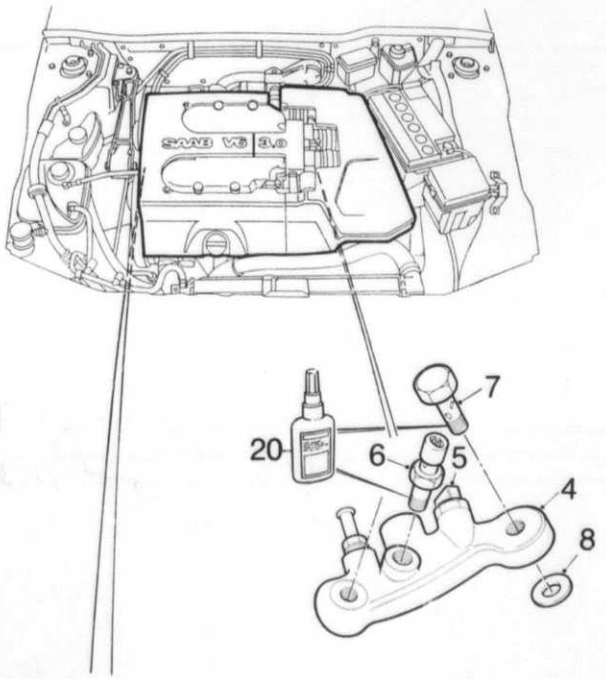

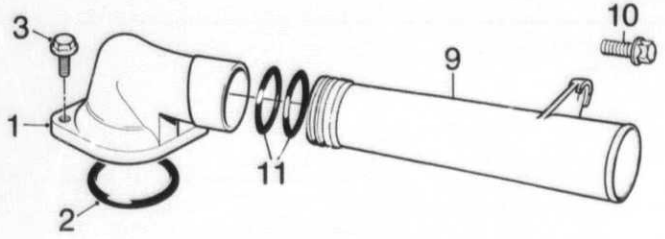

F7991 CAC94

1755 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	45 03 017		-1995	1	Thermostat	Termostat	1
0020 1	46 23 815		1996-	1	Thermostat	Termostat	8
0030 2	45 03 058			1	O-ring	O-ring	2
0040 3	45 01 110			2	Screw	Skruv	5
0050 4	47 70 145		(4503082)	1	Adapter	Adapter	5
0060 5	47 70 228		-1995 (4503132)	1	.EC temperature sensor	.Temperaturgivare	2
0070 5	46 60 585		1996-	1	.EC temperature sensor	.Temperaturgivare	2
0080 6	42 29 084			1	.EC temperature sensor	.Temperaturgivare	2
0090 7	46 21 397			2	Hollow screw	Hålskruv	5
0100 8	46 21 413			2	Sealing ring	Tätningsring	4
0110 9	45 03 066			1	Outlet pipe	Utloppsrör	5
0120 10	43 46 854			1	Screw	Skruv	5
0130 11	45 03 074			2	O-ring	O-ring	2
0140 12	46 20 324			4	Sealing ring	Tätningsring	5
0150 20	74 96 284		50 ML	X	Hydraulic sealant	Gängtätning	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-108

Pre-heating
Throttle body, Turbo

Förvärmning
Spjällhus, Turbo

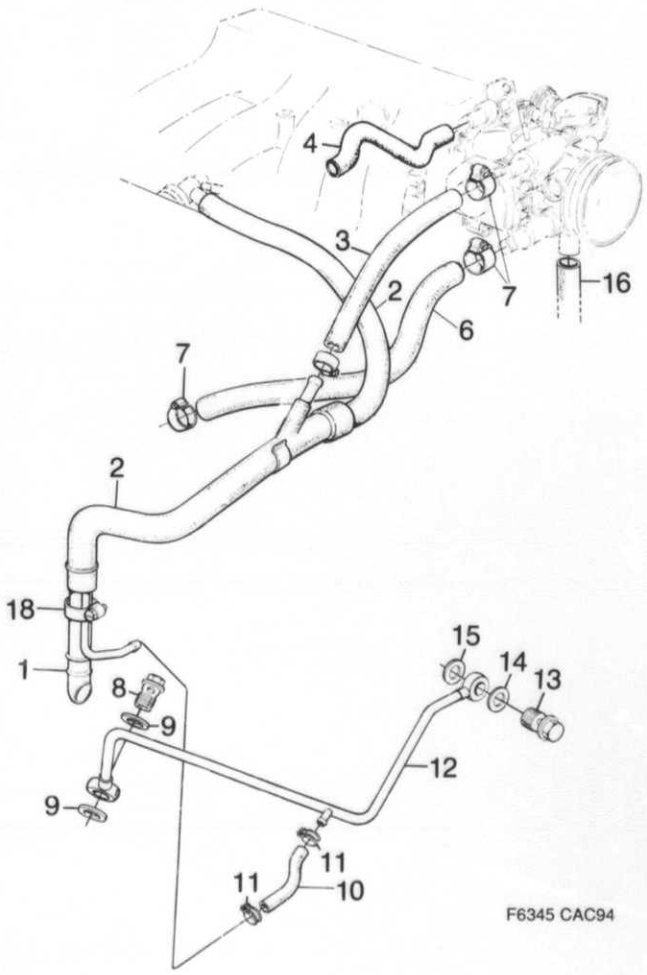

1760	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	91 34 487			1	Tube	Rör	5
0020	2	75 19 697			1	Hose	Slang	4
0030	3	75 19 531			1	Hose	Slang	4
0040	4			See page 2-095, 1-F24	1	Hose	Slang	
0050	5	83 59 275			1	Hose clamp	Slangklamma	5
0060	6	91 06 998			1	Hose	Slang	4
0070	7	79 63 515			3	Hose clamp	Slangklamma	5
0080	8	75 83 628			1	Screw	Skruv	5
0090	9	81 24 158			2	Gasket	Packning	2
0100	10	91 16 765			1	Hose	Slang	4
0110	11	79 68 308			2	Hose clamp	Slangklamma	5
0120	12	91 37 860		TURBO T25	1	Tube	Rör	5
0130	12	91 37 944		TURBO TD04	1	Tube	Rör	5
0140	13	91 43 967			1	Banjo screw	Banjoskruv	5
0150	14	81 24 141			1	Seal	Tätning	5
0160	15	*83 26 712*		NLS - USE 4161162	1	Seal	Tätning	5
0170	16			See page 2-095, 1-F24	1	Hose	Slang	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I10

Pre-heating
Throttle body, I

Förvärmning
Spjällhus, I

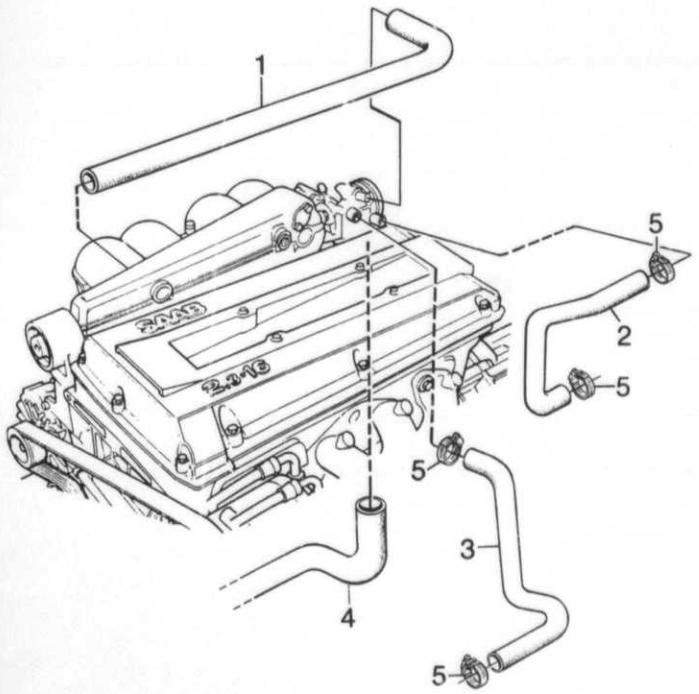

F6346 CAC94

1770 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	87 88 499			1	Hose	Slang	5
0020 2	91 07 632			1	Hose	Slang	4
0030 3	91 07 640			1	Hose	Slang	4
0040 4			See page 2-093, 1 F22	1	Hose	Slang	
0050 5	40 87 649			4	Hose clamp	Slangklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I12

Accelerator arm

Gaspedalarm

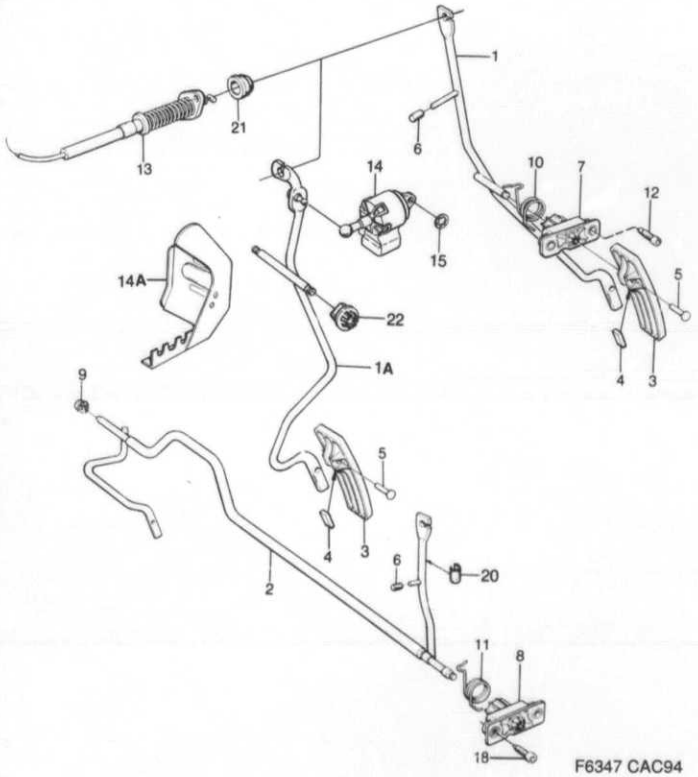

F6347 CAC94

1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 67 903			1	Accelerator arm	Gaspedalarm	6
0020	1A	40 00 386		TCS	1	Accelerator arm	Gaspedalarm	6
0030	2	89 72 176		RHD	1	Accelerator arm	Gaspedalarm	6
0040	2	41 05 276		RHD, TCS	1	Accelerator arm	Gaspedalarm	6
0050	3	71 83 965		205)	1	Pedal plate	Pedalplatta	
0060	3	46 45 586		206)	1	Pedal plate	Pedalplatta	
0070	4	71 83 973			1	Spacer	Mellanlägg	
0080	5	79 58 770			1	Rivet	Nit	
0090	6	89 50 396			1	Absorber	Dämpare	5
0100	7	89 60 924			1	Bearing centre	Lagercentrum	6
0110	8	89 60 924		RHD	1	Bearing centre	Lagercentrum	6
0120	9	89 57 565		RHD	1	Plastic bushing	Plastbussning	6
0130	10	89 60 080		M	1	Spring	Fjäder	5
0140	10	89 65 949		A	1	Spring	Fjäder	5
0150	11	89 60 080		RHD WITHOUT TCS	1	Spring	Fjäder	5
0160	12	89 61 195			2	Screw	Skruv	5
0170	13			4-CYL	1	Throttle control cable	Gasreglagewire	
0180				See page 2-157, 1-I14				
0190	13			6-CYL	1	Throttle control cable	Gasreglagewire	
0200				See page 2-159, 1-I16				
0210	14	43 01 585		-1995, TCS, M	1	Pedal sensor	Pedalgivare	5
0220	14A	44 26 532		RHD, TCS	1	Protection	Skydd	6
0230	15	40 15 574		-1995, TCS	1	Lock ring	Låsring	5
0240	18	89 61 195		RHD	2	Screw	Skruv	5
0250	20	41 90 021		RHD, TCS	1	Absorber	Dämpare	5
0260	21	75 36 501			1	Bushing	Bussning	5
0270	22	89 33 392		TCS	2	Plastic bushing	Plastbussning	5


205. Ch. -R1030178.
206. Ch. R1030179-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

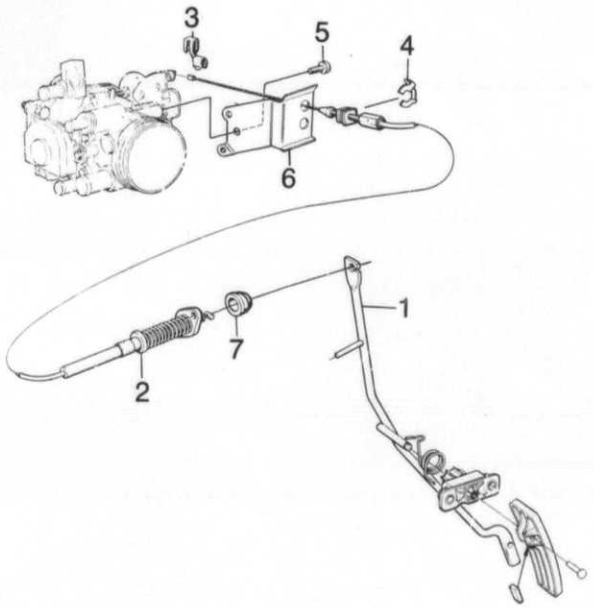

F6348 CAC94

1805	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-155, 1-I12	1	Accelerator arm	Gaspedalarm	
0020	2	41 61 907		1994, M	1	Throttle control cable	Gasreglagewire	3
0030	2	41 61 915		1994, A	1	Throttle control cable	Gasreglagewire	3
0040	2	45 25 515		1995-	1	Throttle control cable	Gasreglagewire	3
0050	2	40 22 737		203),M, TCS	1	Throttle control cable	Gasreglagewire	3
0060	2	45 26 687		204),M, TCS	1	Throttle control cable	Gasreglagewire	3
0070	2	40 18 313		203),M, TCS, RHD	1	Throttle control cable	Gasreglagewire	3
0080	2	45 26 711		204),M, TCS, RHD	1	Throttle control cable	Gasreglagewire	3
0090	3	40 18 172			1	Clamp	Klämma	5
0100	4	75 33 136		TCS	1	Lock ring	Säkringsring	5
0110	5	79 72 607			3	Screw	Skruv	5
0120	6	43 91 561		TCS	1	Bracket	Konsol	5
0130	6	91 26 939		1994	1	Bracket	Konsol	5
0140	6	91 70 440		1995-	1	Bracket	Konsol	5
0150	7			See page 2-155, 1-I12	1	Bushing	Bussning	


203. Engine -R166910.
204. Engine R166911-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

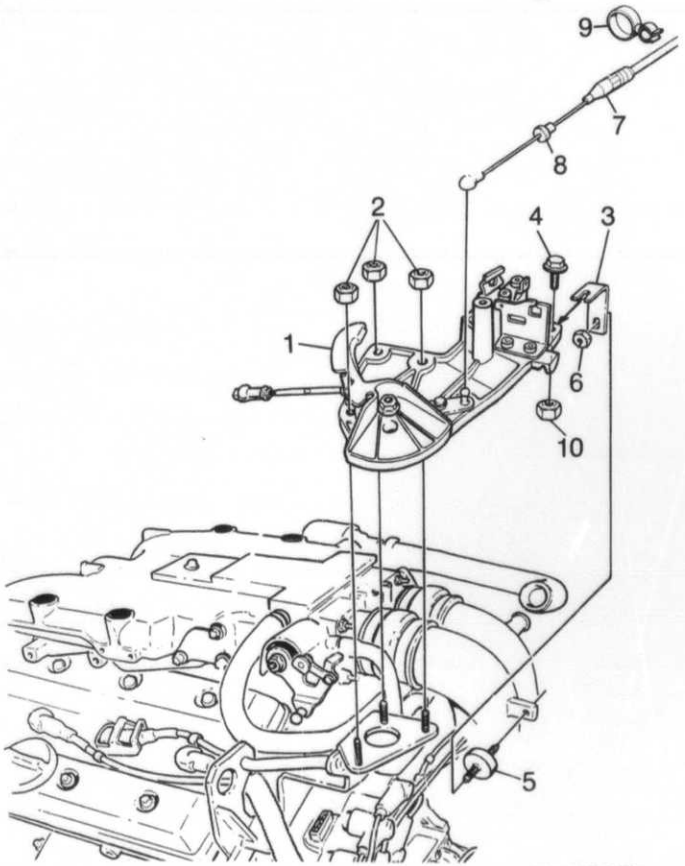

F7298 CAC94

Engine control

1-I16

Accelerator control 6-cylinder

Motorreglage

Gasreglage 6-cylindrig

1810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*44 42 422*		215) NLS – USE 4528147	1	Bracket	Konsol	5
0020	1	45 28 147		216)	1	Bracket	Konsol	5
0030	2	80 74 288			3	Nut	Mutter	5
0040	3	45 26 471			1	Stay	Stag	6
0050	4	*79 78 398*		NLS – USE 8029944, 8059420	1	Screw	Skruv	5
0050								
0060	5	43 03 186			1	Absorber	Dämpare	5
0070	6	79 74 298			1	Nut	Mutter	5
0080	7	44 42 521			1	Throttle control cable	Gasreglagewire	3
0090	8	42 27 823			1	Lock ring	Säkringsring	5
0100	9	73 98 407			1	Clamp	Klammer	5
0110	10	79 75 576			1	Nut	Mutter	5

215. Ch. -S1022770.
216. Ch. S1022771-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I18

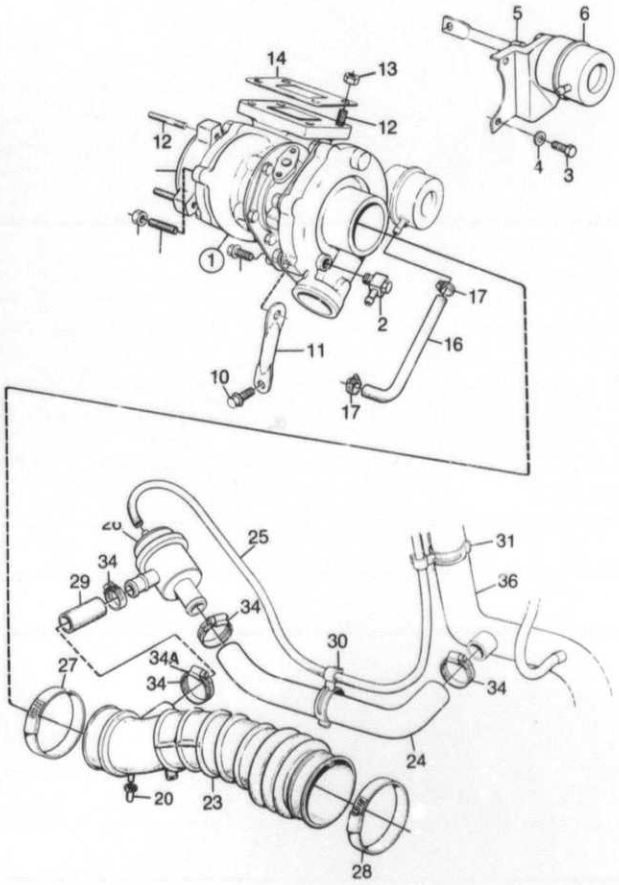

F8195 CAC94

1860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 46 051		T25	1	Turbocharger	Turbokompressor	4
0020	1	91 49 634		TD04, B234R	1	Turbocharger	Turbokompressor	4
0030	2	91 69 517		T25	1	.Nipple	.Nippel	3
0040	2	87 87 319		TD04, B234R	1	.Nipple	.Nippel	3
0050	3	80 82 935		TD04, B234R	2	.Screw	.Skruv	5
0060	4	79 15 572		TD04, B234R	2	.Washer	.Bricka	
0070	5	91 69 426		T25	1	.Nut	.Mutter	
0080	6	91 69 491		T25	1	.Wastegate	.Tryckregulator	4
0090	6	91 69 483		TD04, B234R	1	.Wastegate	.Tryckregulator	4
0100	10	80 59 768			2	Screw	Skruv	5
0110	11	91 46 812			1	Stay	Stag	5
0120	12	91 07 996		T25	7	Stud	Pinnskruv	5
0130	12	91 41 730		TD04, B234R	7	Screw	Skruv	5
0140	13	91 16 674			4	Nut	Mutter	5
0150	14	91 13 937			1	Gasket	Packning	2
0160	15	80 59 768			2	Screw	Skruv	5
0170	16	44 41 994		B204S	1	Hose	Slang	4
0180	16	91 68 899		213) B234E	1	Hose	Slang	5
0190	16	91 69 467		214) B234E	1	Hose	Slang	5
0200	17	79 73 522		213) B234E	2	Hose clamp	Slangklamma	5
0210	17	79 73 605		214) B234E	2	Hose clamp	Slangklamma	5
0220	20	92 53 329		-1995, B234E	1	Clip	Clips	5
0230	20	45 09 626		1996-, B234E	1	Sleeve	Hylsa	
0240	23	41 63 416			1	Hose	Slang	5
0250	24	75 91 936			1	Hose	Slang	4
0260	25	91 36 243		L=650MM	1	Vaccum hose	Vakuumslang	5
0270	25	91 36 243		B204S, L=1250MM	1	Vaccum hose	Vakuumslang	5
0280	26	43 91 157			1	Charge air bypass valve	By-passventil	2
0290	27	79 70 148			1	Hose clamp	Slangklamma	5
0300	28	79 70 155			1	Hose clamp	Slangklamma	5
0310	29	41 63 432			1	Hose	Slang	4
0320	30	73 98 407			1	Clamp	Klammer	5
0330	31	73 98 415			1	Clamp	Klämma	5
0340	34	79 70 098			3	Hose clamp	Slangklamma	5
0350	34A	79 82 937		B204S	1	Hose clamp	Slangklamma	5
0360	36			See page 2-135, 1-H16	1	Pipe	Rör	
0370								
0380		88 18 569		-1996	X	Sealing kit	Plomberingssats	2
0390				See page 2-169, 1-J02				
0400		• 91 85 489		1997-	X	Sealing kit	Plomberingssats	2
0410				See page 2-169, 1-J02				
0420		91 36 243		L=5000MM	X	Vaccum hose	Vakuumslang	5

213. Engine -S54880
214. Engine S54881-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I20

APC system

APC-system

1900	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	75 85 755			1	Knock sensor	Knacksensor	3
0020	3	74 85 576			1	Boost press control valve	Magnetventil	8
0030	6	89 78 678			1	Bracket	Konsol	5
0040	7	98 49 514		-1996	2	Rivet	Nit	5
0050	7	*79 72 896*		1997- NLS – USE 7965684, 8073090	2	Screw	Skruv	5
0050								
0060	8	80 59 420			2	Screw	Skruv	5
0070	12	79 73 456			2	Expanding nut	Expandermutter	5
0080	16	44 40 608		B234R	1	Hose	Slang	3
0090	16	40 22 224			1	Hose	Slang	3
0100	19	79 73 522			3	Hose clamp	Slangklamma	5
0110	21	79 71 864			1	Tensioning band	Spännband	5
0120								
0130		91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5

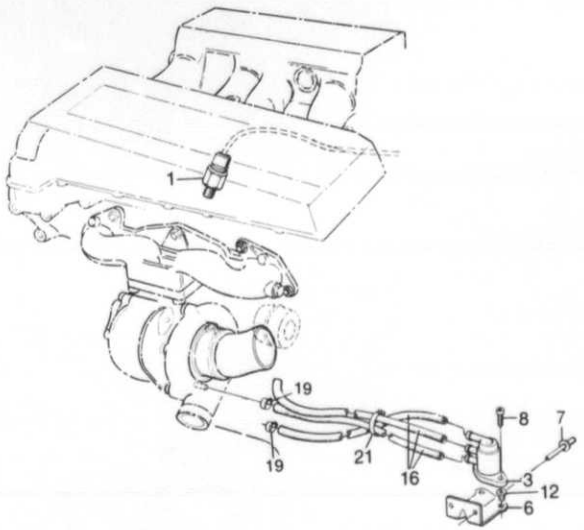

F6351 CAC94

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

1-I22

Engine bay cover
6-cylinder

Motorrumsavtäckning
6-cylindrig

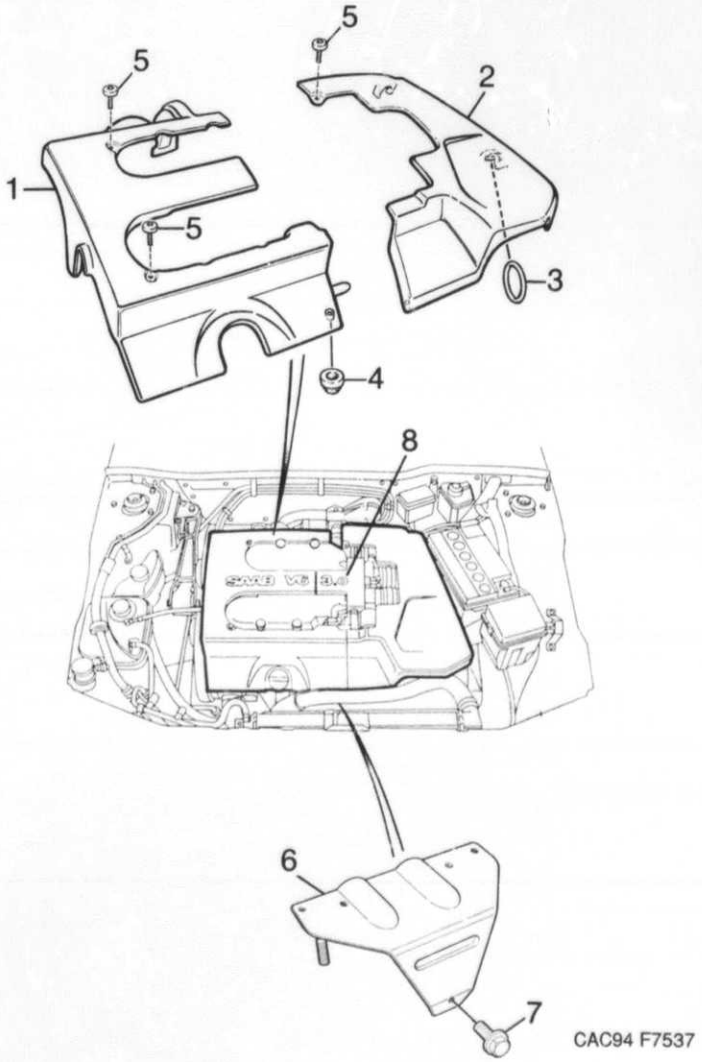

CAC94 F7537


2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 90 654		-1995	1	Cover	Avtäckning	
0020	1	46 71 772		1996-	1	Cover	Avtäckning	8
0030	2	45 27 420		-1995	1	Cover	Avtäckning	
0040	2	45 28 154		1996-	1	Cover	Avtäckning	8
0050	3	45 26 653			1	,O-ring	,O-ring	
0060	4	40 27 488			1	Rubber bushing	Gummibussning	4
0070	5	40 87 920		-1995	3	Screw	Skruv	5
0080	5	46 85 020		1996-	3	Screw	Skruv	5
0090	6	• 47 26 659			1	Cover	Avtäckning	4
0100	7	79 78 091			3	Screw	Skruv	5
0110	8			See page 2-087, 1-F16		Adapter	Adapter	


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

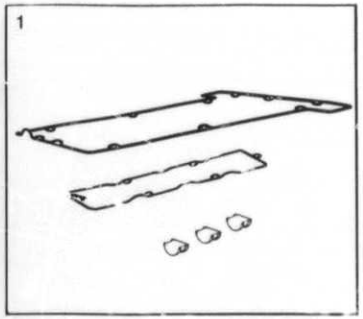


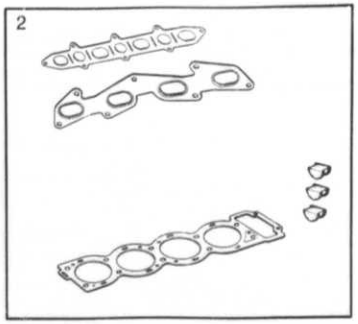

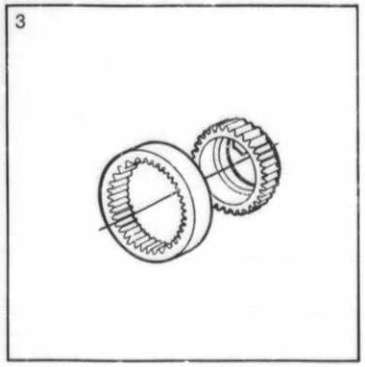



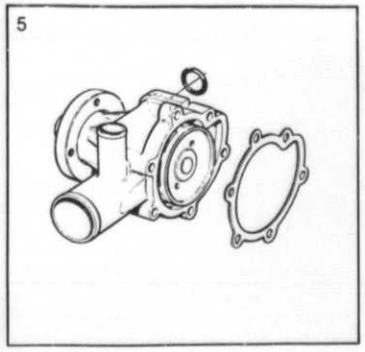

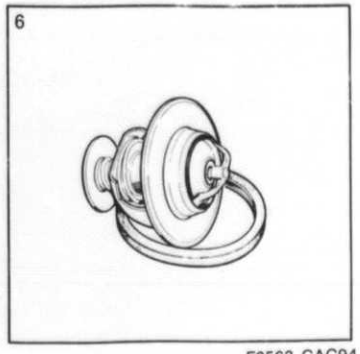

F8563 CAC94

1-I24

Engine — Motor

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	88 22 041		4-CYL	X	Gasket kit	Packningsats	1
0020						Valve cover	Ventilkåpa	
0030		91 33 026			1	.Gasket	.Packning	1
0040		91 33 034			1	.Gasket	.Packning	1
0050								
0060	1	47 70 319		6-CYL (9321969)	X	Gasket kit	Packningsats	1
0070						Valve cover	Ventilkåpa	
0080				1)	1	.Gasket	.Packning	
0090				1)	1	.Gasket	.Packning	
0100								
0110	2	88 22 033		4-CYL	X	.Gasket kit	.Sotningssats	2
0120		91 38 884			2	.Gasket	.Packning	
0130		91 44 528			1	.Gasket	.Packning	2
0140		91 66 497			1	.Gasket	.Packning	8
0150								
0160	3	93 21 936		4-CYL	X	Pump kit	Pumpsats	5
0170		75 15 588		1)	1	.Pump rotor	.Pumphjul	5
0180		91 29 701		1)	1	.Pump rotor	.Pumphjul	5
0190								
0200	4	88 19 138		4-CYL, TURBO	X	Service kit	Servicesats	1
0210		91 32 937			1	.Gasket	.Packning	1
0220		91 12 541			4	.Spark plug	.Tändstift	8
0230		*93 20 383*		1) NLS – USE 7496144	1	.Oil filter	.Oljefilter	1
0240								
0250	4	74 96 011		4-CYL, I	X	Service kit	Servicesats	1
0260		91 32 937			1	.Gasket	.Packning	1
0270		91 17 565			4	.Spark plug	.Tändstift	1
0280		*93 20 383*		1) NLS – USE 7496144	1	.Oil filter	.Oljefilter	1
0290								
0300	4	74 96 250		6-CYL, I	X	Service kit	Servicesats	1
0310		45 02 134			1	.Sealing ring	.Tätningsring	1
0320		45 01 029			6	.Spark plug	.Tändstift	8
0330		45 02 696			1	.Filter	.Filter	1
0340								
0350	5	93 21 688		7), 4-CYL	X	Coolant pump	Kylvätskepump	2
0360		91 48 289		1)	1	.Coolant pump	.Kylvätskepump	2
0370		91 13 325			1	.Gasket	.Packning	2
0380		79 72 698			1	.O-ring	.O-ring	2
0390		*80 46 674*		NLS – USE 9146606	1	.O-ring	.O-ring	2
0400		80 46 682			1	.O-ring	.O-ring	2
0410								
0420	6	88 22 025		89° C, 4-CYL	X	Thermostat kit	Termostatsats	8
0430		91 66 687		1)	1	.Thermostat	.Termostat	1
0440		83 52 692			1	.Gasket	.Packning	
0450								
0460	6	88 17 538		82° C, 4-CYL	X	Thermostat kit	Termostatsats	1
0470		75 17 345		1)	1	.Thermostat	.Termostat	1
0480		83 52 692			1	.Gasket	.Packning	


1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


2 GROUP INDEX


Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

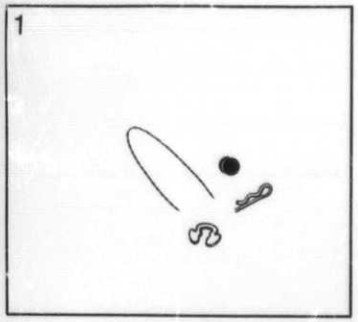


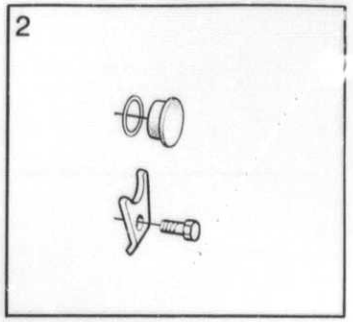

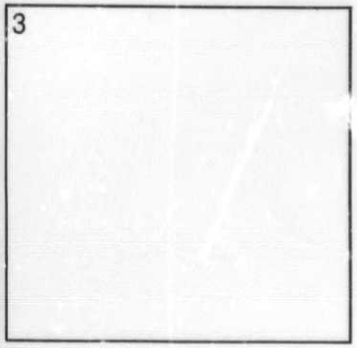

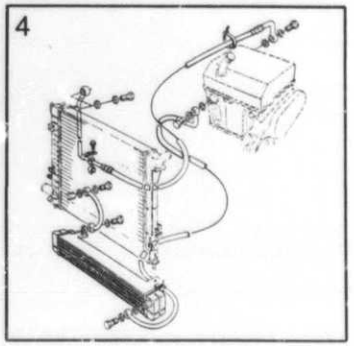

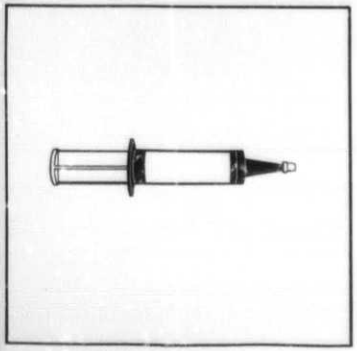

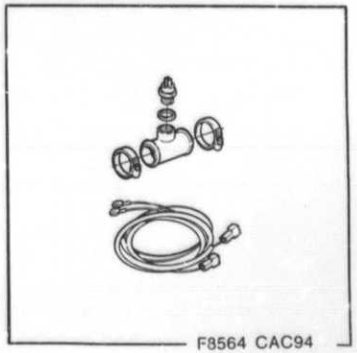

F8564 CAC94

Kits
1-J02 Engine 4-cylinder

Satser
Motor 4-cylindrig

2550 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	88 18 569		-1996 TURBO	X	Sealing kit	Plomberingssats	2
0020	91 68 352		1)	1	.Seal	.Plomb	2
0030	81 17 020		1)	1	.Sealing wire	.Plomberingstråd	2
0040	89 25 067			1	.Lock needle	.Låsnål	5
0050	93 50 505			1	.E-circlip	.Spårryttare	2
0060							
0070 1	91 85 489		1997-TURBO	X	Sealing kit	Plomberingssats	2
0080	89 25 067			1	Lock needle	Låsnål	5
0090	91 85 497			1	E-circlip	Spårryttare	2
0100							
0110 2	88 22 587		4-CYL	X	Sealing kit	Tätningssats	2
0120	75 19 143			1	.O-ring	.O-ring	6
0130	83 62 287			1	.Bracket	.Hållare	5
0140	91 31 004			1	.Plug	.Plugg	2
0150	91 66 323			1	.Screw	.Skruv	5
0160							
0170 4	40 28 858		TURBO A WITH AC	X	Oil cooler kit	Oljekylarsats	4
0180	40 28 874			1	.Hydraulic hose	.Hydraulslang	3
0190	*40 28 890*		NLS – USE 4284279	1	.Hydraulic hose	.Hydraulslang	3
0200	73 98 464			1	.Clamp	.Klammer	5
0210	73 99 603			2	.Screw	.Skruv	5
0220	73 99 611			2	.Screw	.Skruv	5
0230	75 59 537			1	.Hydraulic hose	.Hydraulslang	4
0240	75 70 757			2	.Bracket	.Konsol	5
0250	75 93 221			1	.Tensioning band	.Spännband	5
0260	75 98 311			1	.Oil cooler	.Oljekylare	4
0270	79 65 544			2	.Screw	.Skruv	5
0280	79 74 298			2	.Nut	.Mutter	5
0290	*89 81 961*		NLS – USE 4161162	12	.Seal	.Tätning	5
0300	*93 01 532*		115) NLS – USE 4374211	6	.Banjo screw	.Banjoskruv	5
0310	*83 22 927*		116) NLS – USE 4374211	6	.Banjo bolt	.Hålbult	5
0320							
0330 4	40 28 866		TURBO A WITHOUT AC, IA	X	Oil cooler kit	Oljekylarsats	4
0340							
0350	*40 28 882*		NLS – USE 4356267	1	.Hydraulic hose	.Hydraulslang	3
0360	*40 28 890*		NLS – USE 4284279	1	.Hydraulic hose	.Hydraulslang	3
0370	73 98 464			1	.Clamp	.Klammer	5
0380	73 99 603			2	.Screw	.Skruv	5
0390	73 99 611			2	.Screw	.Skruv	5
0400	75 70 757			2	.Bracket	.Konsol	5
0410	75 70 823			1	.Hydraulic hose	.Hydraulslang	4
0420	75 93 221			1	.Tensioning band	.Spännband	5
0430	75 98 311			1	.Oil cooler	.Oljekylare	4
0440	79 65 544			2	.Screw	.Skruv	5
0450	79 74 298			2	.Nut	.Mutter	5
0460	*89 81 961*		NLS – USE 4161162	12	.Seal	.Tätning	5
0470	*93 01 532*		115) NLS – USE 4374211	6	.Banjo screw	.Banjoskruv	5
0480	*83 22 927*		116) NLS – USE 4374211	6	.Banjo bolt	.Hålbult	5
0490							
0500 5	93 21 795		25ML	X	Flange sealant	Flänstätning	5
0510							
0520 6	85 47 853		-1994	X	Temperature gauge	Temperaturmätare	5
0530	75 76 960			1	.Tube	.Rör	5
0540	79 70 114			2	.Hose clamp	.Slangklamma	5
0550	83 30 268			1	.Seal	.Tätning	5
0560	44 33 306			1	.Cable harness	.Ledningsnät	5
0570	40 86 716		(9526534)	1	.Thermo contact	.Termokontakt	2
0580	44 32 969			1	.Diode	.Diod	5

1. Not as separate spare part. Ej som separat reservdel.
115. Ch -N1014970.
116. Ch N1014971-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
	Transmission	3-G02
	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

2 GROUP INDEX

Engine suspension	1-C10
Engine body 4-cyl	1-C12
Engine body 6-cyl	1-D06
Lubrication system	1-D22
Fuel system	1-E08
Inlet and exhaust system	1-F10
Cooling system	1-H06
Engine control	1-I12
Supercharging system	1-I18
Engine bay cover	1-I22
Kits	1-I24

2-A02

3A

Electrical, general
Elektriskt, allmänt
Electrico, generalidades

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370
0380
0390
0400
0410
0420
0430
0440
0450
0460
0470
0480
0490
0500
0510

TABLE OF CONTENTS

Battery		
Battery	3A : 9	2-A10
Alternator		
Alternator, Bosch 80A	3A : 11	2-A12
Alternator, Bosch 90A	3A : 13	2-A14
Alternator, Bosch 110A	3A : 15	2-A16
Alternator, Bosch 115A	3A : 17	2-A18
Alternator, Bosch 120A	3A : 19	2-A20
Starter		
Starter, 4-cyl.	3A : 21	2-A22
Starter, 6-cyl.	3A : 23	2-A24
Ignition system		
Ignition leads, spark plugs etc, 4-cyl.	3A : 25	2-B02
Ignition leads, spark plugs etc, 6-cyl.	3A : 27	2-B04
MOTRONIC	3A : 29	2-B06
TRIONIC	3A : 31	2-B08
Lighting		
Headlamps, 4D 1994	3A : 33	2-B10
Headlamps, 5CS; 4D 1995-1997	3A : 35	2-B12
Headlamps, sealed beam, 4D 1994	3A : 37	2-B14
Headlamps, sealed beam, 5CS; 4D 1995-1997	3A : 39	2-B16
Lamp cluster, 4D 1994	3A : 41	2-B18
Lamp cluster, 5CS; 4D 1995-1997	3A : 43	2-B20
Fog light 1994	3A : 45	2-B22
Fog light 1995-	3A : 47	2-B24
Tail lamp, 4D 1994	3A : 49	2-C02
Tail lamp, 4D 1995-1997	3A : 51	2-C04
Tail lamp, 5CS	3A : 53	2-C06
Stop light, high mounted	3A : 55	2-C08
Other lights	3A : 57	2-C10
Electrical equipment, other		
Signal horn	3A : 61	2-C14
Windshield wipers	3A : 63	2-C16
Rear window wiper, 5CS	3A : 65	2-C18
Headlight wipers, 4D 1994	3A : 67	2-C20
Headlight wipers, 5CS; 4D 1995-1997	3A : 69	2-C22
Windshield- and headlight washer	3A : 71	2-C24
Central lock	3A : 75	2-D04
Switches	3A : 77	2-D06
Speed control system 1994	3A : 81	2-D10
Speed control system 1995-	3A : 85	2-D14
Operating device	3A : 87	2-D16
AIR-BAG	3A : 89	2-D18
Operating device ACC	3A : 91	2-D20
Radio, electrical aerial	3A : 93	2-D22
Loudspeaker	3A : 97	2-E02
Anti theft system	3A : 101	2-E06
Speed warning system	3A : 103	2-E08
Electrical system, ABS, TCS, ETS	3A : 105	2-E10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Eiectrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

Wiring and fuses

Wiring, 1994	3A : 107	2-E12
Wiring, 1995	3A : 117	2-E22
Wiring, 1996	3A : 127	2-F08
Wiring, 1997	3A : 137	2-F18
Wiring, 1998	3A : 147	2-G04
Bushing, clamps	3A : 155	2-G12
Mounting details, body	3A : 161	2-G18
Mounting details, doors	3A : 165	2-G22
Holders and brackets	3A : 167	2-G24
Relays and fuses, 1994	3A : 171	2-H04
Relays and fuses, 1995	3A : 175	2-H08
Relays and fuses, 1996	3A : 179	2-H12
Relays and fuses, 1997	3A : 183	2-H16
Relays and fuses, 1998	3A : 187	2-H20
Instruments	3A : 191	2-H24

Complete sets

Electrical system	3A : 195	2-I04

INNEHÅLLSFÖRTECKNING

Batteri

Batteri	3A : 9	2-A10

Generator

Generator, Bosch 80A	3A : 11	2-A12
Generator, Bosch 90A	3A : 13	2-A14
Generator, Bosch 110A	3A : 15	2-A16
Generator, Bosch 115A	3A : 17	2-A18
Generator, Bosch 120A	3A : 19	2-A20

Startmotor

Startmotor, 4-cyl.	3A : 21	2-A22
Startmotor, 6-cyl.	3A : 23	2-A24

Tändsystem

Tändkablar, tändstift etc, 4-cyl.	3A : 25	2-B02
Tändkablar, tändstift etc, 6-cyl.	3A : 27	2-B04
MOTRONIC	3A : 29	2-B06
TRIONIC	3A : 31	2-B08

Belysning

Strålkastare, 4D 1994	3A : 33	2-B10
Strålkastare, 5CS; 4D 1995-1997	3A : 35	2-B12
Strålkastare, seald beam, 4D 1994	3A : 37	2-B14
Strålkastare, seald beam, 5CS; 4D 1995-1997	3A : 39	2-B16
Kombinationslykta, 4D 1994	3A : 41	2-B18
Kombinationslykta, 5CS; 4D 1995-1997	3A : 43	2-B20
Dimljus 1994	3A : 45	2-B22
Dimljus 1995-	3A : 47	2-B24
Baklykta, 4D 1994	3A : 49	2-C02
Baklykta, 4D 1995-1997	3A : 51	2-C04
Baklykta, 5CS	3A : 53	2-C06
Stopplykta, högt monterad	3A : 55	2-C08
Övrig belysning	3A : 57	2-C10

Övrig elektrisk utrustning

Signalhorn	3A : 61	2-C14
Vindrutetorkare	3A : 63	2-C16
Bakrutetorkare, 5CS	3A : 65	2-C18
Strålkastartorkare, 4D 1994	3A : 67	2-C20
Strålkastartorkare, 5CS; 4D 1995-1997	3A : 69	2-C22
Vindrute- och strålkastarspolare	3A : 71	2-C24
Centrallås	3A : 75	2-D04
Strömställare	3A : 77	2-D06
Farthållningssystem 1994	3A : 81	2-D10
Farthållningssystem 1995-	3A : 85	2-D14
Manöverdon	3A : 87	2-D16
AIR-BAG	3A : 89	2-D18
Manöverdon ACC	3A : 91	2-D20
Radio, motorantenn	3A : 93	2-D22
Högtalare	3A : 97	2-E02
Stöldlarm	3A : 101	2-E06
Fartvarningssystem	3A : 103	2-E08
Elektriskt system, ABS, TCS, ETS	3A : 105	2-E10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A05

Ledningar och säkringar

Ledningar, 1994	3A : 107	2-E12
Ledningar, 1995	3A : 117	2-E22
Ledningar, 1996	3A : 127	2-F08
Ledningar, 1997	3A : 137	2-F18
Ledningar, 1998	3A : 147	2-G04
Bussningar, klammer	3A : 155	2-G12
Monteringsdetaljer, kaross	3A : 161	2-G18
Monteringsdetaljer, dörrar	3A : 165	2-G22
Hållare och konsoler	3A : 167	2-G24
Reläer och säkringar, 1994	3A : 171	2-H04
Reläer och säkringar, 1995	3A : 175	2-H08
Reläer och säkringar, 1996	3A : 179	2-H12
Reläer och säkringar, 1997	3A : 183	2-H16
Reläer och säkringar, 1998	3A : 187	2-H20
Instrument	3A : 191	2-H24
Satser		
Elektriskt system	3A : 195	2-I04

2-A06

SUMARIO

Bateria		
Bateria	3A : 9	2-A10
Alternador		
Alternador, Bosch 80A	3A : 11	2-A12
Alternador, Bosch 90A	3A : 13	2-A14
Alternador, Bosch 110A	3A : 15	2-A16
Alternador, Bosch 115A	3A : 17	2-A18
Alternador, Bosch 120A	3A : 19	2-A20
Motor de arranque		
Motor de arranque, 4-sil.	3A : 21	2-A22
Motor de arranqu, 6-sil.	3A : 23	2-A24
Sistema de encendido		
Cable encendido, bujias etc, 4-sil.	3A : 25	2-B02
Cable encendido, bujias etc, 6-sil.	3A : 27	2-B04
MOTRONIC	3A : 29	2-B06
TRIONIC	3A : 31	2-B08
Alumbrado		
Faros, 4D 1994	3A : 33	2-B10
Faros, 5CS; 4D 1995-1997	3A : 35	2-B12
Faros, seald beam, 4D 1994	3A : 37	2-B14
Faros, seald beam, 5CS; 4D 1995-1997	3A : 39	2-B16
Faro combinado, 4D 1994	3A : 41	2-B18
Faro combinado, 5CS; 4D 1995-1997	3A : 43	2-B20
Faros antiniebla 1994	3A : 45	2-B22
Faros antiniebla 1995-	3A : 47	2-B24
Piloto trasera, 4D 1994	3A : 49	2-C02
Piloto trasera, 4D 1995-1997	3A : 51	2-C04
Piloto trasera, 5CS	3A : 53	2-C06
Lampara de paro montada	3A : 55	2-C08
Otro alumbrado	3A : 57	2-C10
Otro equipo electrico		
Senal acustica	3A : 61	2-C14
Limpiaparabrisas	3A : 63	2-C16
Limpiaparabrisas post, 5CS	3A : 65	2-C18
Limpiacristales de faro, 4D 1994	3A : 67	2-C20
Limpiacristales de faro, 5CS; 4D 1995-1997	3A : 69	2-C22
Lavaparabrisas y lavacristales de faro	3A : 71	2-C24
Cerradura central	3A : 75	2-D04
Contactos	3A : 77	2-D06
Control de velocidad de crucero 1994	3A : 81	2-D10
Control de velocidad de crucero 1995-	3A : 85	2-D14
Dispositivos de mando	3A : 87	2-D16
AIR-BAG	3A : 89	2-D18
Dispositivos de mando ACC	3A : 91	2-D20
Radio, motor de antena	3A : 93	2-D22
Altavoz	3A : 97	2-E02
Alarma antirobo	3A : 101	2-E06
Sistema de advertencia de velocidad	3A : 103	2-E08
Sistema electrico, ABS, TCS, ETS	3A : 105	2-E10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A07

042
210
220
230
240
250
260
270
280
290
300
310
320
330
340
350
360
370
380

Conductos y fusibles

Conductos, 1994	3A : 107	2-E12
Conductos, 1995	3A : 117	2-E22
Conductos, 1996	3A : 127	2-F08
Conductos, 1997	3A : 137	2-F18
Conductos, 1998	3A : 147	2-G04
Manguitos, abrazaderas	3A : 155	2-G12
Equipo de montaje, carroceria	3A : 161	2-G18
Equipo de montaje, puertas	3A : 165	2-G22
Portafusibles y consolas	3A : 167	2-G24
Reles, fusibles, 1994	3A : 171	2-H04
Reles, fusibles, 1995	3A : 175	2-H08
Reles, fusibles, 1996	3A : 179	2-H12
Reles, fusibles, 1997	3A : 183	2-H16
Reles, fusibles, 1998	3A : 187	2-H20
Instrumentos	3A : 191	2-H24
Juegos completos		
Sistema electrico	3A : 195	2-I04


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A10 Battery Batteri

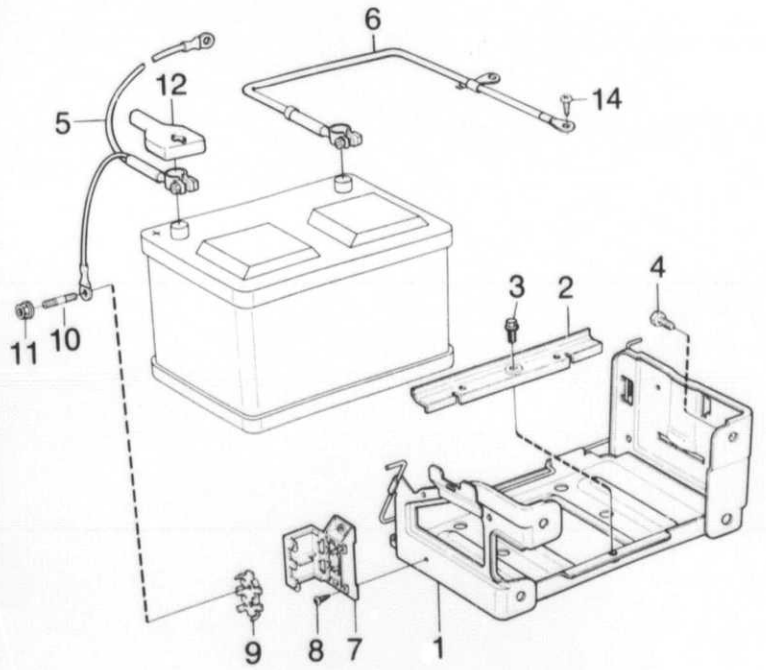

F6355 CAC94

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						Battery	Batteri	
0020						SEE ACCESSORIES CATALOGUE	SE TILLBEHÖRSKATALOG	
0030	1	42 93 619		1994	1	Battery shelf	Batterihylla	6
0040	1	42 95 077		1995-	1	Battery shelf	Batterihylla	6
0050	2	95 15 222			1	Brace	Bygel	5
0060	3	79 77 499			1	Screw	Skruv	5
0070	4	79 75 451			4	Screw	Skruv	5
0080	5	95 24 208		1994, +	1	Cable	Kabel	5
0090	5	45 36 686		311),1995-, +	1	Cable	Kabel	5
0100	5	* 49 42 504		312), +	1	Cable	Kabel	5
0110	6	40 69 530		1994, –	1	Cable	Kabel	4
0120	6	45 36 694		270), 1995-, –	1	Cable	Kabel	4
0130	6	47 37 631		271,311), –	1	Cable	Kabel	4
0140	6	* 49 42 421		312), –	1	Cable	Kabel	4
0150	7	40 61 891			1	Bracket	Hållare	5
0160	8	*79 74 769*		NLS – USE 7922891	2	Screw	Skruv	5
0170	9	95 03 053			1	Casing	Förgreningshus	3
0180	10	94 46 881			2	Stud	Pinnskruv	5
0190	11	79 71 658			2	Nut	Mutter	5
0200	12	45 82 425			1	Cover	Kåpa	6
0210	14	40 87 003			1	Screw	Skruv	5
0220						gearbox	växellåda	

270. Ch -T1004883.
271. Ch T1004884-.
311. Ch -V1020756.
312. Ch V1020757-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A12

Generator
Bosch 80A
228)

Generator
Bosch 80A
228)

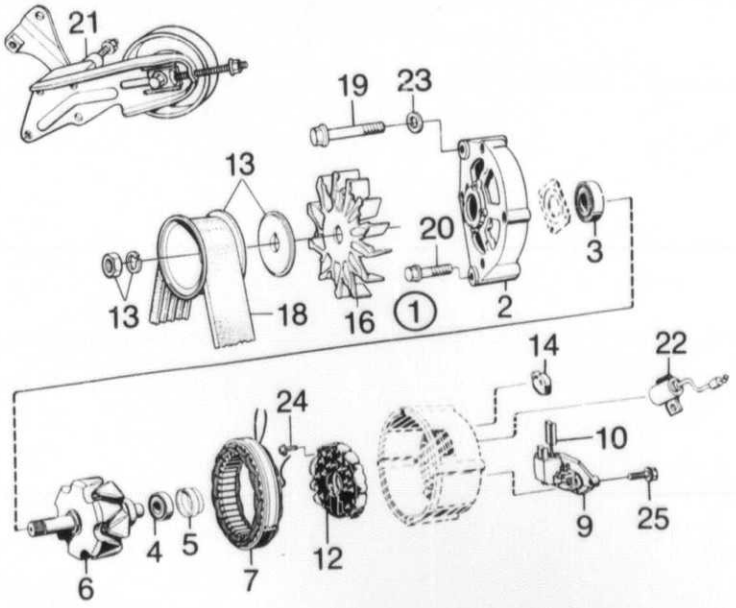

F6356 CAC94

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 62 752		7), B204	1	Generator	Generator	5
0020	1	95 62 752		7), B234	1	Generator	Generator	5
0030	2	95 13 763			1	.Bearing	.Drivlager	6
0040	3	95 13 128		2), -1995	1	.Ball bearing	.Kullager	3
0045	3	* 85 49 545		2), 1996-	1	.Bearing	.Drivlager	
0050	4	*95 13 185*		3) NLS - USE 9124348	1	.Ball bearing	.Kullager	6
0060	5	*95 13 193*		NLS - USE 9124355	1	.O-ring	.O-ring	4
0070	6	95 13 144			1	.Rotor	.Rotor	6
0080	7	95 13 169			1	.Stator	.Stator	6
0090	9	85 90 549			1	.Voltage regulator	.Spänningsregulator	2
0100	10	95 15 180			1	..Brush set	..Borstsats	3
0110	12	95 13 177			1	.Rectifier	.Likriktare	6
0120	13	85 90 994			1	.Part kit	.Delsats	6
0130	14	85 93 329		B+	1	.Protection	.Skydd	6
0140	15	40 63 475		B204	1	Pulley	Remskiva	5
0150	15	40 63 475		B234	1	Pulley	Remskiva	5
0160	16	85 87 248			1	Fan disc	Fläktskiva	6
0170	18	*40 29 195*		NLS - USE 4395448	1	Belt	Rem	1
0180	18	43 95 448		SE, EU, US, CA, JP, KR, TW	1	Belt	Rem	1
0190								
0200	18	43 56 895		ME, ALT.TO 4029195	1	Belt	Rem	1
0210	18	43 56 903		AC/ACC	1	Belt	Rem	1
0220	18	43 95 455		AC/ACC, SE, EU, US, CA, JP, KR, TW	1	Belt	Rem	1
0230								
0240	19	80 98 378		B234	1	Screw	Skruv	5
0250	20	80 98 378			1	Screw	Skruv	5
0260	21			See page 6-019, 4-A20		Tension pulley	Spännrulle	
0270	22	95 23 184			1	Capacitor	Kondensator	4
0280	23	80 73 108			1	Washer	Bricka	5
0290	24	95 13 599			3	Screw	Skruv	5
0300	25	85 71 986			2	Screw	Skruv	5


2. Front. Främre.
3. Rear. Bakre.
7. Also available as exchange unit. Finns även som utbytesenhet.
228. Ch -R1006711.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

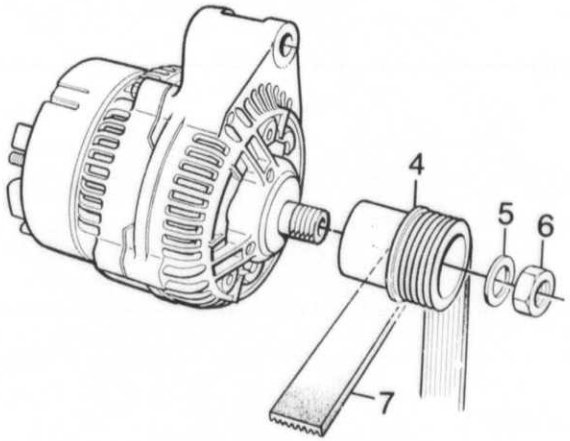

①

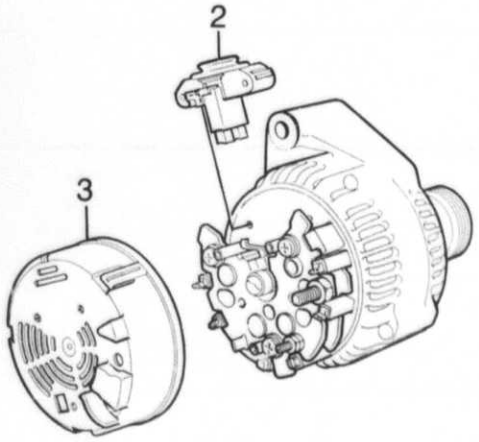

F6357 CAC94

2-A14

Generator
Bosch 90A
229)

Generator
Bosch 90A
229)

0180	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 34 056		7), -1995	1	Generator	Generator	5
0020	1	47 39 058		7), 1996-	1	Generator	Generator	5
0030	2	44 09 983		-1995	1	.Voltage regulator	.Spänningsregulator	2
0040	2	47 37 151		1996-	1	.Voltage regulator	.Spänningsregulator	2
0050	3	44 09 991			1	.Protection	.Skydd	6
0060	4	44 10 007		-1995	1	.Pulley	.Remskiva	5
0070	4	44 89 761		1996-	1	.Pulley	.Remskiva	5
0080	5	44 89 316			1	.Washer	.Bricka	5
0090	6	44 89 308			1	.Nut	.Mutter	5
0100	7	*40 29 195*		NLS - USE 4395448	1	Belt	Rem	1
0110	7	43 95 448		SE, EU, US, CA, JP,KR,TW	1	Belt	Rem	1
0120	7	43 56 895		ME, ALT. TO 4029195	1	Belt	Rem	1
0130	7	43 56 903		AC/ACC	1	Belt	Rem	1

7. Also available as exchange unit. Finns även som utbytesenhet.
229. Ch R1006712-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A16

Generator
Bosch 110A
1995-

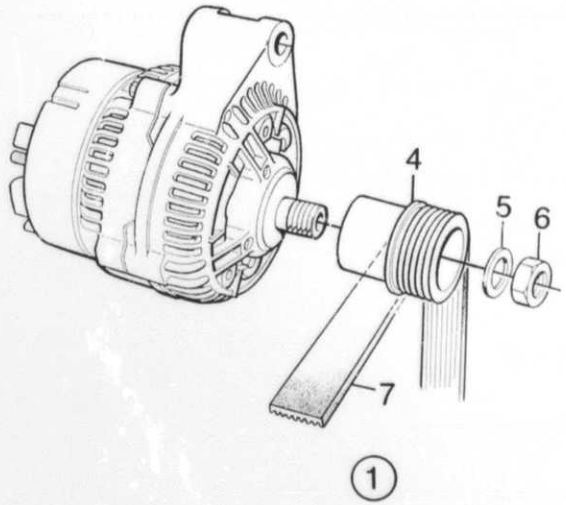

①

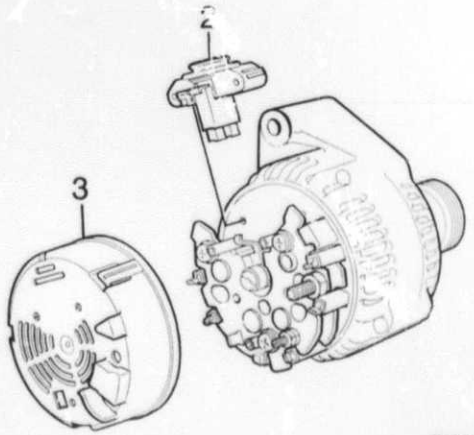

F6358 CAC94

0185	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 34 072		268), AC/ACC	1	Generator	Generator	5
0011	1	47 34 026		269), AC/ACC	1	Generator	Generator	5
0020	2	44 66 918		268)	1	.Voltage regulator	.Spänningsregulator	2
0021	2	47 37 151		269)	1	.Voltage regulator	.Spänningsregulator	2
0030	3	45 86 343			1	.Protection	.Skydd	6
0040	4	44 89 761			1	.Pulley	.Remskiva	5
0050	5	44 89 316			1	.Washer	.Bricka	5
0060	6	44 89 308			1	.Nut	.Mutter	5
0070	7	*40 29 195*		NLS – USE 4395448	1	Belt	Rem	1
0080	7	43 95 448		SE, EU, US, CA, JP,KR,TW	1	Belt	Rem	1
0090	7	43 56 895		ME, ALT. TO 4029195	1	Belt	Rem	1
0100	7	43 56 903		AC/ACC	1	Belt	Rem	1

268. Ch -S1036359.
269. Ch S1036360-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A18

Generator
Bosch 115A
1994

Generator
Bosch 115A
1994

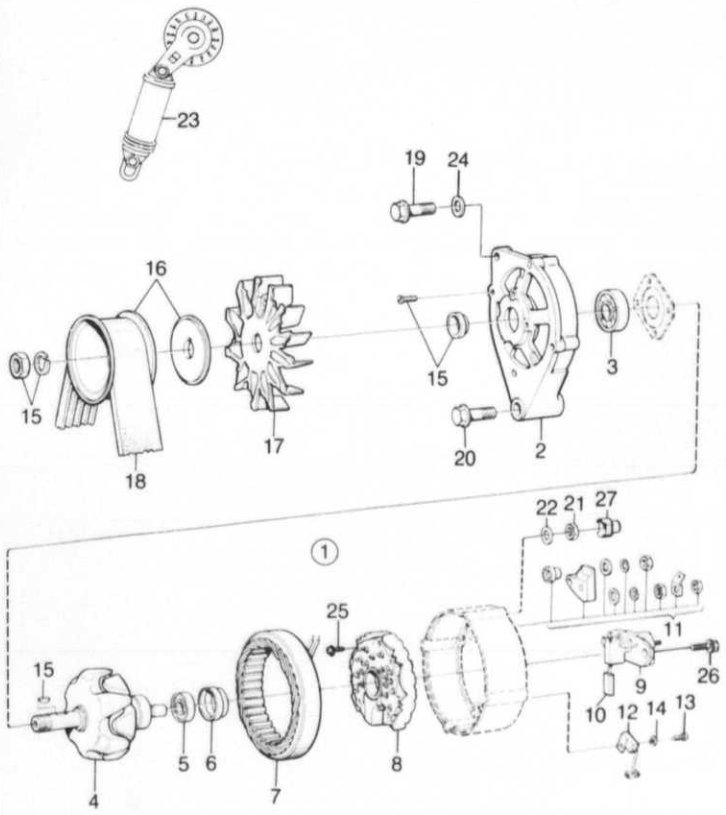

F6359 CAC94

0190	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 20 981		7)	1	Generator	Generator	5
0020	2	91 24 280			1	.Bearing	.Drivlager	6
0030	3	95 13 128		2), -1995	1	.Ball bearing	.Kullager	3
0040	3	• 85 49 545		2), 1996-	1	.Bearing	.Drivlager	
0050	4	91 24 314			1	.Rotor	.Rotor	6
0060	5	91 24 348		3)	1	.Ball bearing	.Kullager	6
0070	6	91 24 355			1	.O-ring	.O-ring	4
0080	7	91 24 363			1	.Stator	.Stator	6
0090	8	91 24 371			1	.Rectifier	.Likriktare	6
0100	9	85 90 549			1	.Voltage regulator	.Spänningsregulator	2
0110	10	95 15 180			1	..Brush set	..Borstsats	3
0120	11	91 24 397		B+, D+	1	.Part kit	.Delsats	6
0130	12	95 23 184			1	Capacitor	Kondensator	4
0140	13	91 24 264			1	Screw	Skruv	5
0150	14	91 24 272			1	Washer	Bricka	5
0160	15	85 90 994			1	Part kit	Delsats	6
0170						rotor	rotor	
0180	16	40 63 475		B204	1	Pulley	Remskiva	5
0190	16	40 63 475		B234	1	Pulley	Remskiva	5
0200	17	85 87 248			1	Fan disc	Fläktskiva	6
0210	18	*40 29 195*		NLS - USE 4395448	1	Belt	Rem	1
0220	18	43 95 448		SE, EU, US, CA, JP, KR, TW	1	Belt	Rem	1
0230								
0240	18	43 56 895		ME, ALT.TO 4029195	1	Belt	Rem	1
0250	18	43 56 903		AC/ACC	1	Belt	Rem	1
0260	18	43 95 455		AC/ACC, SE, EU, US, CA, JP, KR, TW	1	Belt	Rem	1
0270								
0280	19	80 98 378			1	Screw	Skruv	5
0290	20	80 98 378			1	Screw	Skruv	5
0300	21	80 74 106		B+	1	Nut	Mutter	5
0310	22	73 11 764		B+	1	Washer	Bricka	5
0320	23			See page 6-019, 4-A20	1	Tension pulley	Spännrulle	
0330	24	80 73 108		B234	1	Washer	Bricka	5
0340	25	95 13 599			6	Screw	Skruv	5
0350	26	85 71 986			2	Screw	Skruv	5
0360	27	91 24 645		B+	1	Plastic cover	Plastskydd	6


2. Front. Främre.
3. Rear. Bakre.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

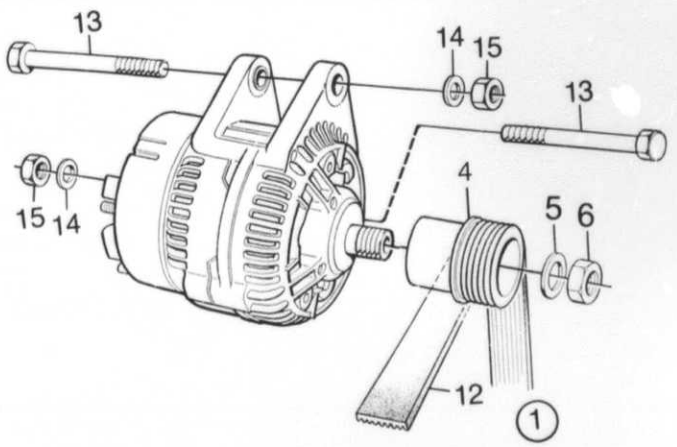

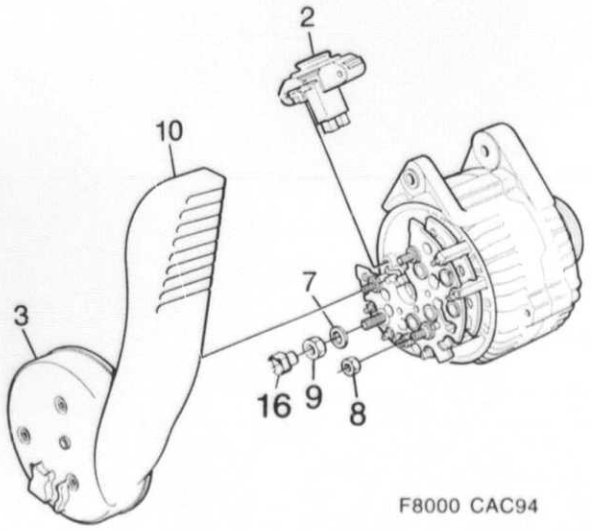

F8000 CAC94

Generator
2-A20
Bosch 120A
1995-

Generator
Bosch 120A
1995-

0195	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 12 805		7), 1995	1	Generator	Generator	5
0020	1	47 39 066		7), 1996-	1	Generator	Generator	5
0030	2	44 66 918		1995	1	,Voltage regulator	,Spänningsregulator	2
0040	2	47 37 151		1996-	1	,Voltage regulator	,Spänningsregulator	2
0050	3	44 12 821			1	,Protection	,Skydd	6
0060	4	44 66 900			1	,Pulley	,Remskiva	5
0070	5	44 89 316			1	,Washer	,Bricka	5
0080	6	44 89 308			1	,Nut	,Mutter	5
0090	7	73 11 764			1	Washer	Bricka	5
0100	8	79 77 911			1	Nut	Mutter	5
0110	9	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0120	10	44 12 813			1	Cover	Kåpa	6
0130	11	79 78 091			1	Screw	Skruv	5
0140	12			See page 2-035, 1-D12		Belt	Rem	
0150	13	79 79 263			2	Screw	Skruv	5
0160	14	80 73 108			2	Washer	Bricka	5
0170	15	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5
0180	16	91 24 645			1	Plastic cover	Plastskydd	6

7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A22 Starter motor 4-cylinder — Startmotor 4-cylindrig

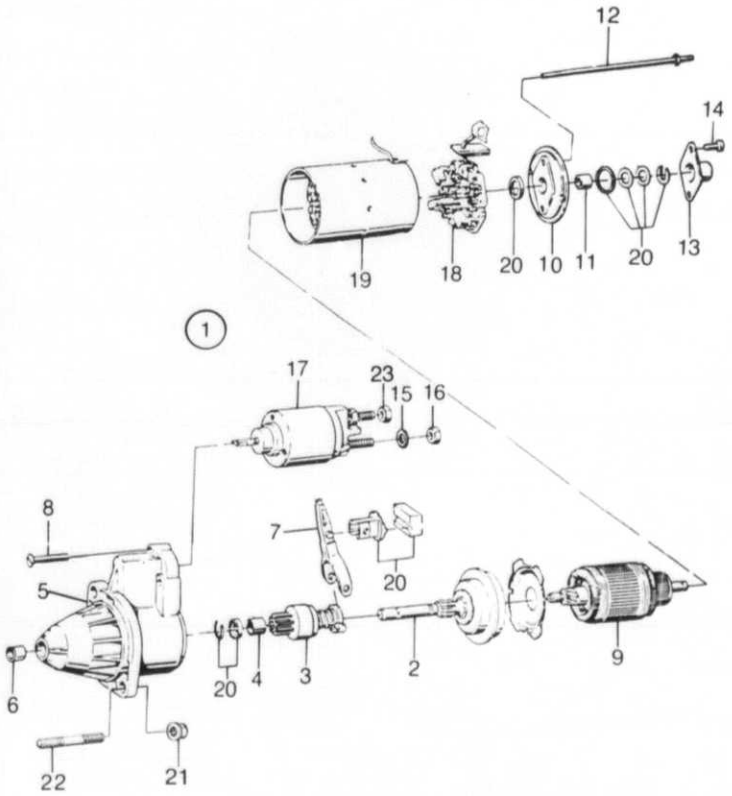

F6361 CAC94

0280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 35 610		7)	1	Starter motor	Startmotor	5
0020	2	75 35 255			1	.Planetary gear	.Planetväxel	5
0030	3	41 60 099			1	.Drive gear	.Drev	3
0040	4	75 27 732			2	.Bearing bushing	.Lagerbussning	5
0050	5	44 43 750			1	.Gear house	.Drevhus	6
0060	6	75 27 757			1	.Bearing bushing	.Lagerbussning	6
0070	7	75 27 765		1)	1	.Engagement lever	.Kopplingsarm	6
0080	8	75 35 271			3	.Screw	.Skruv	5
0090	9	*44 43 768*		1) NLS	1	.Rotor	.Rotor	5
0100	10	75 35 297		1)	1	.Ball bearing	.Kullager	6
0110	11	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0120	12	75 35 305		1)	2	.Screw	.Skruv	5
0130	13	75 35 313		1)	1	.Cap	.Kapsel	6
0140	14	75 35 321		1)	2	.Screw	.Skruv	5
0150	15	*75 27 849*		NLS	1	.Washer	.Bricka	5
0160	16	75 35 339		1)	1	.Nut	.Mutter	5
0170	17	44 43 776			1	.Actuator solenoid	.Manövermagnet	3
0180	18	44 43 784			1	.Plate	.Platta	6
0190	19	*75 27 872*		1) NLS	1	.Casing	.Hus	6
0200	20	75 27 880			1	.Kit	.Sats	6
0210	21	79 67 979			2	Nut	Mutter	5
0220	22	79 71 112			2	Stud	Pinnskruv	5
0230	23	79 77 929			1	Nut	Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-A24 Starter motor 6-cylinder — Startmotor 6-cylindrig

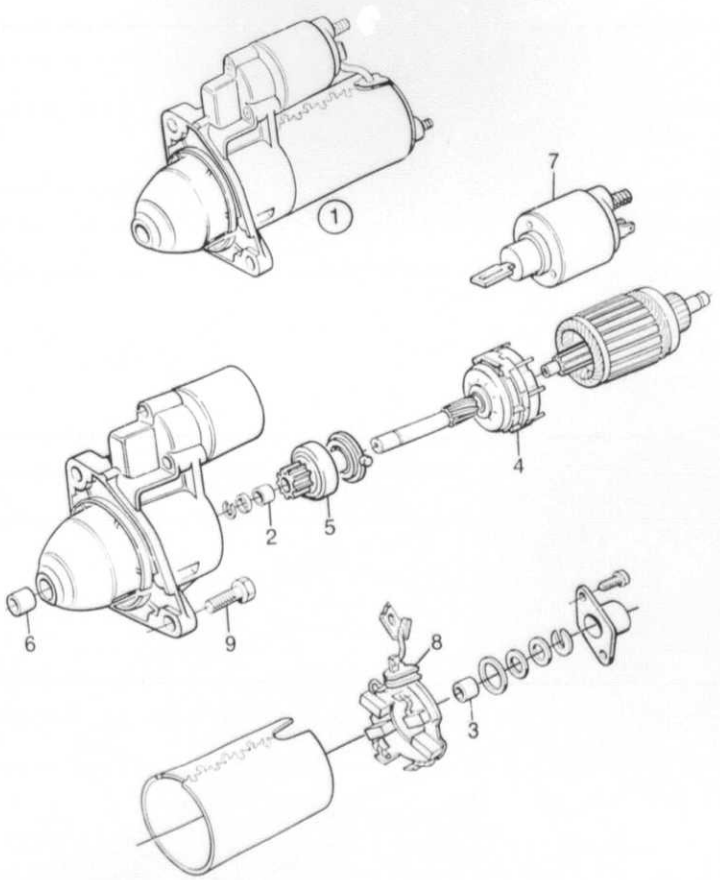

F6362 CAC94

0290	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 70 012		7,307), (4504254)	1	Starter motor	Startmotor	5
0020	1	• 47 70 996		7,308)	1	Starter motor	Startmotor	5
0030	2	75 27 732			1	.Bearing bushing	.Lagerbussning	5
0040	3	75 27 807			1	.Bearing bushing	.Lagerbussning	3
0050	4	88 21 969			1	.Planetary gear	.Planetväxel	3
0060	5	*88 21 977*		NLS - USE 7527724	1	.Drive gear	.Drev	5
0070	6	88 21 985			1	.Sleeve	.Hylsa	6
0080	7	88 21 993			1	.Actuator solenoid	.Manövermagnet	3
0090	8	88 22 009			1	.Plate	Platta	3
0100	9	45 03 009			2	Screw	Skruv	5

7. Also available as exchange unit. Finns även som utbytesenhet.
307. Engine -180176.
308. Engine 180177-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B02 Ignition leads, spark plugs etc, 4-cyl

Tändkablar, tändstift etc. 4-cyl

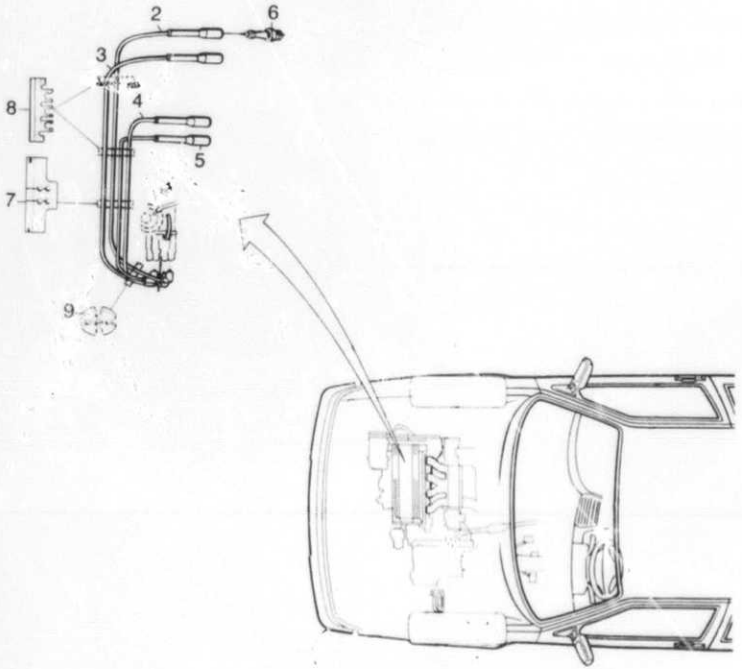

F6363 CAC94

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	75 04 483	S		1	Ignition lead cylinder 1	Tändkabel cylinder 1	3
0020								
0030	3	75 04 491	S		1	Ignition lead cylinder 2	Tändkabel cylinder 2	3
0040								
0050	4	75 04 509	S		1	Ignition lead cylinder 3	Tändkabel cylinder 3	3
0060								
0070	5	75 04 517	S		1	Ignition lead cylinder 4	Tändkabel cylinder 4	3
0080								
0090								
0100	6	91 17 565		!, NGK BCPR6ES 1,1	4	Spark plug	Tändstift	1
0110	6	91 12 541		TURBO, NGK BCPR7ES 1,1	4	Spark plug	Tändstift	8
0120								
0130	7	75 04 525			1	Retainer	Hållare	2
0140	8	75 85 540			2	Retainer	Hållare	2
0150	9	75 06 793			1	Retainer	Hållare	2
0160								
0170		88 17 520		See page 3A-195, 2-I04	X	Kit ignition cables	Tändkabelsats	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

Ignition system

2-B04 Ignition leads, spark plugs etc, 6-cyl

Tändsystem

Tändkablar, tändstift etc, 6-cyl

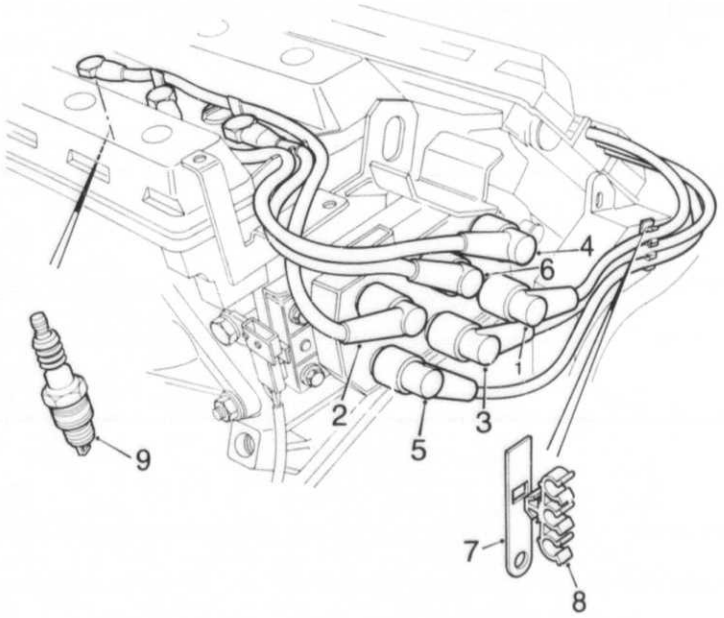

F6364 CAC94

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1	45 04 353	S		1	Ignition lead cylinder 1	Tändkabel cylinder 1	8
2	45 04 361	S		1	Ignition lead cylinder 2	Tändkabel cylinder 2	8
3	45 04 379	S		1	Ignition lead cylinder 3	Tändkabel cylinder 3	8
4	45 04 395	S		1	Ignition lead cylinder 4	Tändkabel cylinder 4	8
5	45 04 403	S		1	Ignition lead cylinder 5	Tändkabel cylinder 5	8
6	45 04 411	S		1	Ignition lead cylinder 6	Tändkabel cylinder 6	8
7	45 04 437			1	Bracket	Konsol	6
8	45 04 460			1	Clip	Clips	6
9	45 01 029		FR7LDC	6	Spark plug	Tändstift	8
9	44 44 741		FR8LDC, ALT. TO 4501029	6	Spark plug	Tändstift	8
	88 21 951			X	Kit ignition cables cyl. 1, 2, 3, 4, 5, 6	Tändkabelsats cyl. 1, 2, 3, 4, 5, 6	8
	47 70 194		See page 3A-195, 2-I04	X	Kit ignition cables cyl. 1, 3, 5	Tändkabelsats cyl. 1, 3, 5	8
	47 70 178		See page 3A-195, 2-I04	X	Kit ignition cables cyl. 2, 4, 6	Tändkabelsats cyl. 2, 4, 6	8


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B06

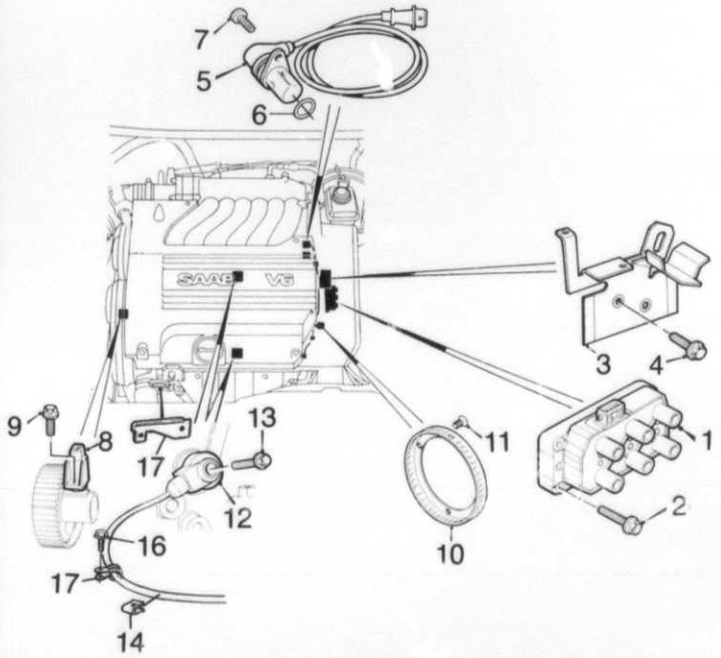

CAC94 F7547

0440	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 70 046		1995, (4504536)	1	Ignition coil module	Tändspolsmodul	8
0020	1	47 70 210		1996-	1	Ignition coil module	Tändspolsmodul	8
0030	2	47 70 020		(4502753)	4	Screw	Skruv	5
0040	3	45 04 478			1	Bracket	Konsol	6
0050	4	45 04 528			2	Screw	Skruv	5
0060								
0070	5	43 00 737		(4504288)	1	Cranks. position sensor crankshaft	Lägesgivare vevaxel	8
0080								
0090	6	91 71 117			1	.O-ring	.O-ring	4
0100	7	45 00 351			1	Screw	Skruv	5
0110								
0120	8	47 70 079		1995, (4621389)	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0130								
0140	8	46 60 452		1996-	1	Camshaft position sensor camshaft	Lägesgivare kamaxel	4
0150								
0160	9	45 00 351			1	Screw	Skruv	5
0170								
0180						Crankshaft	Vevaxel	
0190	10	45 01 185			1	.Aperture disc	.Bländarskiva	4
0200	11	45 01 193			4	.Screw	.Skruv	5
0210								
0220	12	88 22 595		-1995	2	Knock sensor	Knacksensor	3
0230	12	• 43 00 729		1996-	2	Knock sensor	Knacksensor	8
0240	13	45 01 110			2	Screw	Skruv	5
0250	14	43 88 757		1996-	1	Clamp	Klämma	6
0260	15	79 69 348		1996-	1	Clamp	Klammer	5
0270	16	79 78 091		1996-	1	Screw	Skruv	5
0280								
0290	17	42 29 944		1996-	1	Connector holder	Kontakthållare	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B08

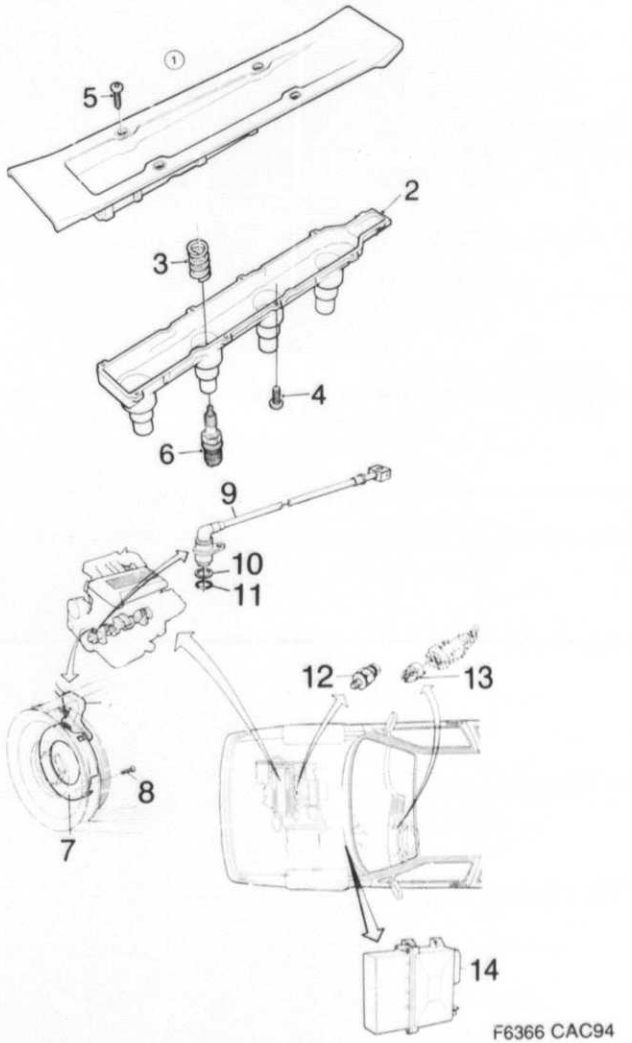

F6366 CAC94

0449	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	*91 34 404*		264) NLS – USE 9178955	1	Ignition cassette	Tändkassett	8
0020	1	91 78 955		265)	1	Ignition discharge module	Tändkassett	8
0030	2	91 67 016			1	.Lower section	.Underdel	8
0040	3	91 67 032			4	.Spring	.Fjäder	4
0050	4	79 68 316			8	.Screw	.Skruv	5
0060	5	91 45 764			4	Screw	Skruv	5
0070	6			See page 3A-025, 2-B02		Spark plug	Tändstift	
0080								
0090	7	91 67 024			1	Aperture disc	Bländarskiva	4
0100	8	*91 14 455*		NLS – USE 9127440	3	Screw	Skruv	5
0110								
0120	9	42 27 203			1	Cranks. position sensor	Lägesgivare	8
0130	10	91 71 125			1	.Support ring	.Stödring	4
0140	11	91 71 117			1	.O-ring	.O-ring	4
0150								
0160	12			See page 2-163, 1-I20		Knock sensor	Knacksensor	
0170	13			See page 6-007, 4-A08		Starter switch	Startkontakt	
0180								
0190	14			See page 2-073, 1-F02		Electronic unit	Elektronikenhet	


264. Engine -S075975.
265. Engine S075976-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

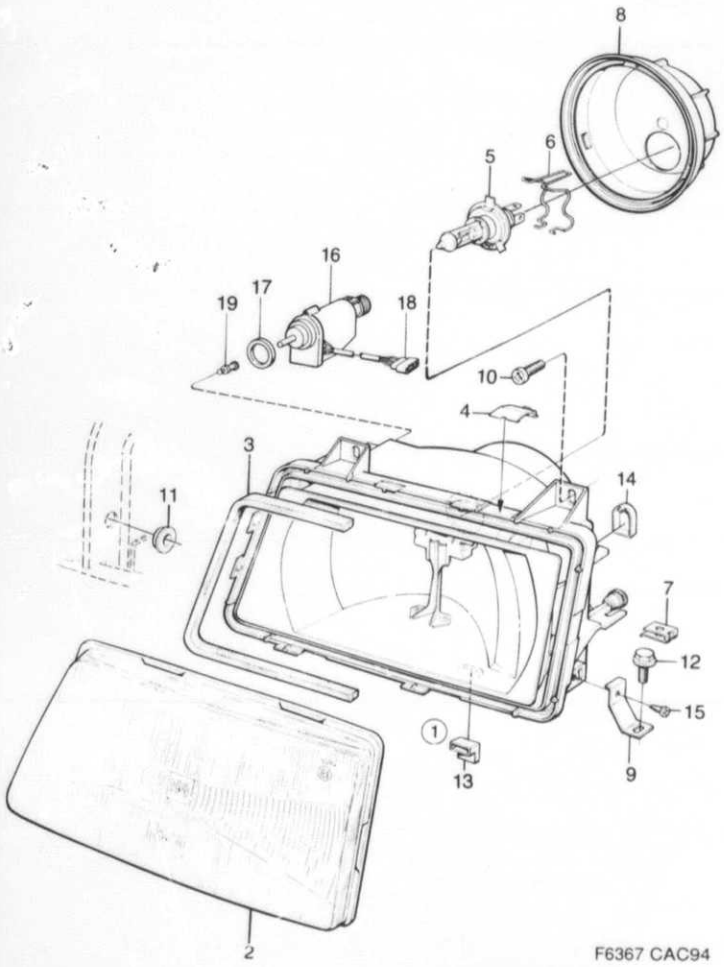

F6367 CAC94

Lighting

2-B10 Headlamp 4D, 1994

Belysning

Strålkastare 4D, 1994

0460	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 25 279		LH	1	Headlamp	Strålkastare	4
0020	1	91 25 287		RH	1	Headlamp	Strålkastare	4
0030	1	91 25 295		20), LH	1	Headlamp	Strålkastare	4
0040	1	91 25 303		20), RH	1	Headlamp	Strålkastare	4
0050	2	95 21 956		LH	1	.Headlamp lens	.Strålkastarglas	2
0060	2	95 21 964		RH	1	.Headlamp lens	.Strålkastarglas	2
0070	2	95 25 312		20), LH	1	.Headlamp lens	.Strålkastarglas	2
0080	2	95 25 320		20), RH	1	.Headlamp lens	.Strålkastarglas	2
0090	3	95 21 881			1	.Seal	.Tätning	4
0100	4	95 56 705			9	.Clip	.Clips	5
0110	5	85 10 851		40/238 210 009	1	.Bulb	.Glödlampa	
0120	6	95 64 352			1	.Spring	.Fjäder	4
0130	7	85 50 824			1	.Clip	.Clips	3
0140	8	95 25 015			2	Cover	Kåpa	5
0150	9	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0160	9	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0170	10	79 73 159			4	Screw	Skruv	5
0180	11	95 04 648			2	Bushing	Bussning	3
0190	12	79 69 223			2	Screw	Skruv	5
0200	13	95 26 351			2	Vent pipe	Urluftningsrör	
0210	14	95 26 344			2	Bleeder cover	Urluftningslock	
0220	15	79 73 159			2	Screw	Skruv	5
0230								
0240	16	95 66 662	S		2	Electric motor headlamp levelling	Elmotor ljuslängdsreglering	3
0250								
0260	17	95 29 793	S		1	.Sealing ring	.Tätningsring	
0270	18	95 03 327	S		1	.Contact housing 3-pole, female	.Kontakthus 3-polig, hylsa	4
0280								
0290	19	95 69 963	S		1	.Adapter	.Adapter	5
0300		85 47 846		See page 3A-195, 2-I04	X	Lamp adjustment kit headlamp levelling	Ljusregleringssats ljuslängdsreglering	5
0310								

20. For left hand traffic. För vänstertrafik.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B12

Headlamp
5CS; 4D 1995-1997

Strålkastare
5CS; 4D 1995-1997

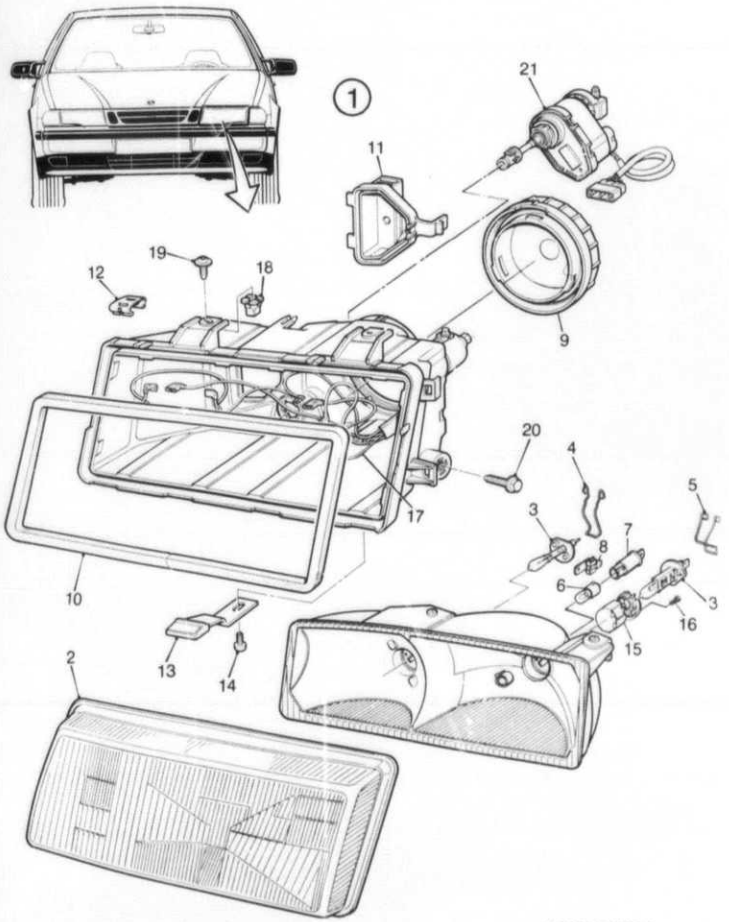

F6368 CAC94

0470	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	90 81 373		LH	1	Headlamp	Strålkastare	4
0020	1	90 81 381		RH	1	Headlamp	Strålkastare	4
0030	1	90 85 671		152), LH, FR	1	Headlamp	Strålkastare	4
0040	1	90 85 689		152), RH, FR	1	Headlamp	Strålkastare	4
0050	1	90 82 918		20), LH	1	Headlamp	Strålkastare	4
0060	1	90 82 926		20), RH	1	Headlamp	Strålkastare	4
0070	2	90 81 431		LH	1	.Headlamp lens	.Strålkastarglas	2
0080	2	90 81 449		RH	1	.Headlamp lens	.Strålkastarglas	2
0090	2	90 89 772		153), LH	1	.Headlamp lens	.Strålkastarglas	2
0100	2	90 89 780		154), RH	1	.Headlamp lens	.Strålkastarglas	2
0110	2	90 84 013		155), LH	1	.Headlamp lens	.Strålkastarglas	2
0120	2	90 84 021		156), RH	1	.Headlamp lens	.Strålkastarglas	2
0130	3	46 85 301		1995-	2	.Bulb	.Glödlampa	3
0140	4	40 89 256			1	.Spring	.Fjäder	4
0150	5	44 47 744		(4380085)	1	.Spring	.Fjäder	4
0160	6	71 57 308		40/238 274 005	1	.Bulb	.Glödlampa	3
0170	7	43 81 448			1	.Bulb socket	.Lamphållare	6
0180	8	43 81 455			1	.Clip	.Jordningstunga	5
0190	9	85 39 710			1	.Sealing cover	.Tätningslock	4
0200	10	90 82 439			1	.Seal	.Tätning	4
0210	11	90 85 416			1	.Cover	.Lock	4
0220	12	95 56 705			10	.Clip	.Clips	5
0230	13	90 82 579			1	.Stop	.Stopp	3
0240	14	79 22 891			1	.Screw	.Skruv	5
0250	15	44 47 736			1	.Bulb socket	.Lamphållare	3
0260	16	44 47 751			3	.Screw	.Skruv	5
0270	17	42 53 407			1	.Cable harness	.Ledningsnät	5
0280	18	79 75 261			4	Nut	Mutter	5
0290	19	79 73 001		255)	4	Screw	Skruv	5
0300	19	79 85 690		256)	4	Screw	Skruv	5
0310	20	79 78 109		1994	4	Screw	Skruv	5
0320	20	79 84 305		1995-	4	Hexagon screw	Sexkantsskruv	5
0330	21	40 94 967		LH	1	Electric motor	Elmotor	3
0340	21	43 43 125		RH	1	Electric motor	Elmotor	3

20. For left hand traffic. För vänstertrafik.
152. Yellow. Gul.
153. Part of 90 85 671. Del av 90 85 671.
154. Part of 90 85 689. Del av 90 85 689.
155. Part of 90 82 918. Del av 90 82 918.
156. Part of 90 82 926. Del av 90 82 926.
255. Ch -S1019412.
256. Ch S1019413-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B14

Headlamp, sealed beam
4D, 1994

Strålkastare, sealed beam
4D, 1994

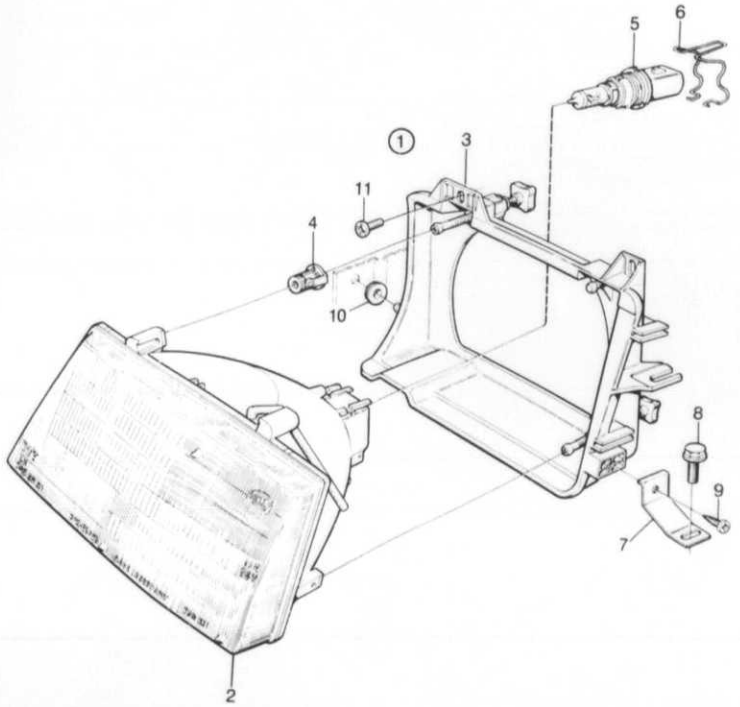

F6369 CAC94


0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 21 352		LH	1	Headlamp	Strålkastare	4
0020	1	95 21 360		RH	1	Headlamp	Strålkastare	4
0030	2	95 21 774		LH	1	.Headlamp insert	.Strålkastarinsats	1
0040	2	95 21 782		RH	1	.Headlamp insert	.Strålkastarinsats	1
0050	3	95 21 816		LH	1	.Attaching frame	.Fästram	3
0060	3	95 21 824		RH	1	.Attaching frame	.Fästram	3
0070	4	95 26 434			3	..Bearing sleeve	..Lagerhylsa	3
0080	5	95 12 401		40/238 301 006	1	.Bulb	.Glödlampa	1
0090	6	95 26 260			1	.Spring	.Fjäder	4
0100	7	95 25 254		LH	1	Attaching bracket	Fästvinkel	6
0110	7	95 25 262		RH	1	Attaching bracket	Fästvinkel	6
0120	8	*79 75 170*		NLS – USE 7982366	2	Screw	Skruv	5
0130	9	79 22 438			2	Screw	Skruv	5
0140	10	95 04 648			2	Bushing	Bussning	3
0150	11	79 73 159			4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

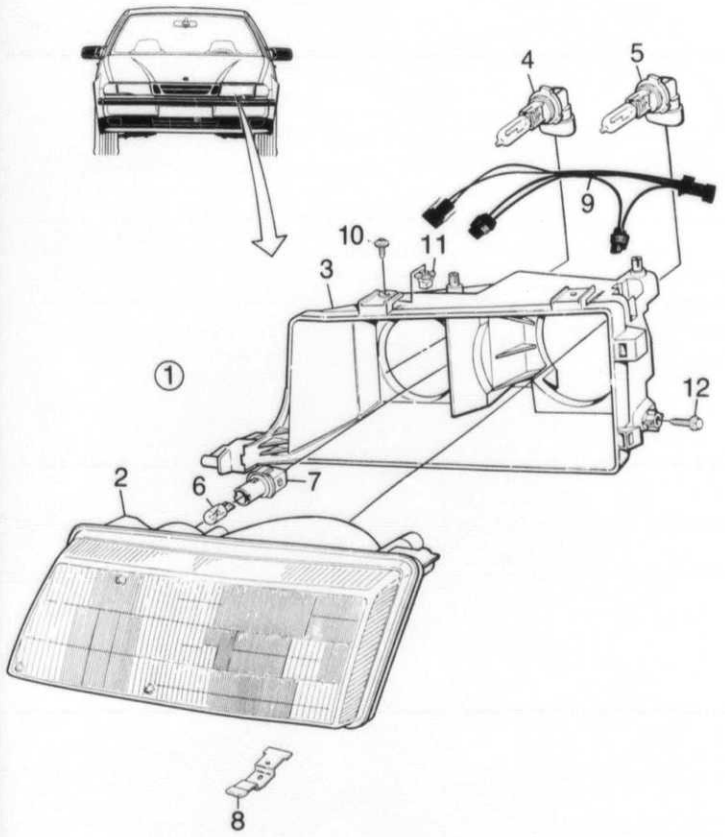

F8377 CAC94

Lighting

2-B16 Headlamp, sealed beam

5CS; 4D 1995-1997

Belysning

Strålkastare, sealed beam

5CS; 4D 1995-1997

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 892		LH	1	Headlamp	Strålkastare	4
0020	1	90 82 900		RH	1	Headlamp	Strålkastare	4
0030	2	90 84 112		LH	1	.Headlamp insert	.Strålkastarinsats	1
0040	2	90 84 120		RH	1	.Headlamp insert	.Strålkastarinsats	1
0050	3	90 84 179		LH	1	.Attaching frame	.Fästram	3
0060	3	90 84 187		RH	1	.Attaching frame	.Fästram	3
0070	4	40 89 264			1	.Bulb	.Glödlampa	3
0080	5	40 89 272			1	.Bulb	.Glödlampa	3
0090	6	95 12 880			1	.Bulb	.Glödlampa	1
0100	7	42 52 581			1	.Bulb socket	.Lamphållare	3
0110	8	46 73 372		LH	1	.Stop	.Stopp	3
0120	8	46 73 380		RH	1	.Stop	.Stopp	3
0125	9	42 52 599			1	.Cable harness	.Ledningsnät	5
0130	10	79 73 001		255)	4	Screw	Skruv	5
0140	10	79 85 690		256)	4	Screw	Skruv	5
0150	11	79 75 261			4	Nut	Mutter	5
0160	12	79 78 109		1994	4	Screw	Skruv	5
0170	12	79 84 305		1995-	4	Hexagon screw	Sexkantsskruv	5

255. Ch -S1019412.
256. Ch S1019413-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-B18

Lamp cluster
4D, 1994

Kombinationslykta
4D, 1994

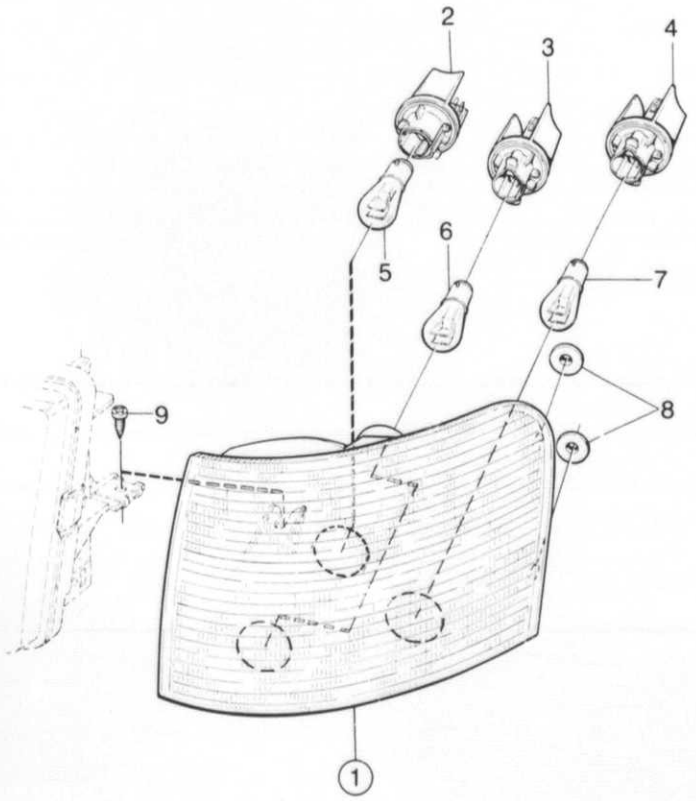

F6371 CAC94


0560	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 52 276		LH, SE	1	Direction indicator	Blinklykta	2
0020	1	42 52 284		RH, SE	1	Direction indicator	Blinklykta	2
0030								
0040	1	42 52 276		LH, FI, GB, EU, ME, FE, AU, JP	1	Direction indicator	Blinklykta	2
0050								
0060	1	42 52 284		RH, FI, GB, EU, ME, FE, AU, JP	1	Direction indicator	Blinklykta	2
0070								
0080								
0090	1	42 52 292		LH, US, CA	1	Direction indicator	Blinklykta	2
0100	1	42 52 300		RH, US, CA	1	Direction indicator	Blinklykta	2
0110	2	91 22 227		SE, FI, GB, EU, ME, FE, AU, JP	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0120								
0130	2	95 56 994		US, CA	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0140								
0150								
0160	3	95 56 986		SE, FI, GB, EU, ME, FE, AU, JP	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0170								
0180	3	95 56 994		US, CA	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0190								
0200								
0210	4	95 56 986		SE	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0220								
0230	4	91 22 227		US, CA	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0240								
0250	5	71 54 719		SE, FI, GB, EU, ME, FE, AU, JP, 40/238 290 001	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0260								
0270	5	85 32 756		US, CA, 40/238 291 009	1	.Bulb direction indicator	.Glödlampa blinklykta	1
0280								
0290	6	71 54 727		SE, FI, GB, EU, ME, FE, AU, JP, 40/238 254 007	1	.Bulb position lamp	.Glödlampa positionslykta	1
0300								
0310	6	85 32 756		US, CA, 40/238 291 009	1	.Bulb position lamp	.Glödlampa positionslykta	1
0320								
0330	7	85 35 692		US, CA, 40/238 304 000	1	.Bulb reverse lamp	.Glödlampa backlampa	1
0340								
0350								
0360	8	95 07 708			4	Bushing	Bussning	3
0370	9	79 73 001			2	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

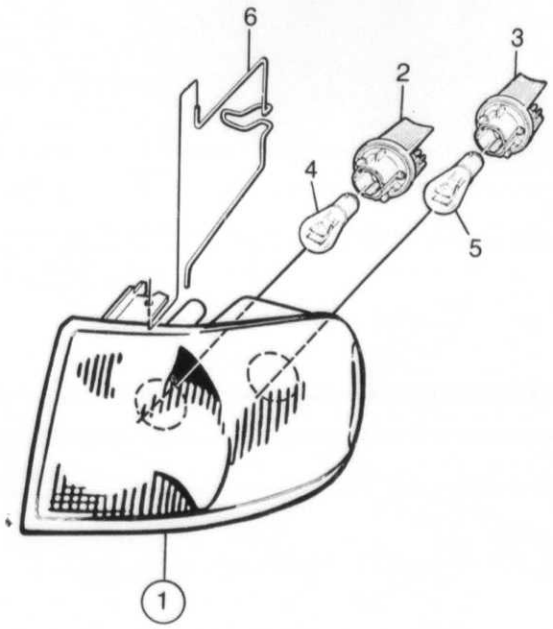

F6372 CAC94

Lighting

2-B20

Lamp cluster

5CS; 4D 1995-1997

Belysning

Kombinationslykta

5CS; 4D 1995-1997


0565	Pos	Part No/Art nr	K S	Note/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 44 032		1994, 5CS, LH	1	Direction indicator	Blinklykta	2
0020	1	43 44 040		1994, 5CS, RH	1	Direction indicator	Blinklykta	2
0030								
0040	1	45 21 290		1995-, LH	1	Direction indicator	Blinklykta	2
0050	1	45 21 308		1995-, RH	1	Direction indicator	Blinklykta	2
0060								
0070	1	43 44 057		LH, US	1	Direction indicator	Blinklykta	2
0080	1	43 44 065		RH, US	1	Direction indicator	Blinklykta	2
0090	2	91 22 227		1994	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0100								
0110	2	45 21 613		1995-	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0120								
0130	2	95 56 994		US	1	.Bulb socket 3-pole	.Lamphållare 3-polig	6
0140								
0150	3	43 40 998		US	1	.Bulb socket 2-pole	.Lamphållare 2-polig	6
0160								
0170	4	71 54 719		1994, 40/238 290 001	1	.Bulb	.Glödlampa	1
0180	4	44 68 930		1995-	1	.Bulb	.Glödlampa	1
0190								
0200	4	85 32 756		US, 40/238 291 009	1	.Bulb	.Glödlampa	1
0210								
0220	5	85 35 692		US, 40/238 304 000	1	.Bulb	.Glödlampa	1
0230								
0240	5	43 42 937		LH	1	Brace	Bygel	6
0250	6	43 42 945		RH	1	Brace	Bygel	6


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

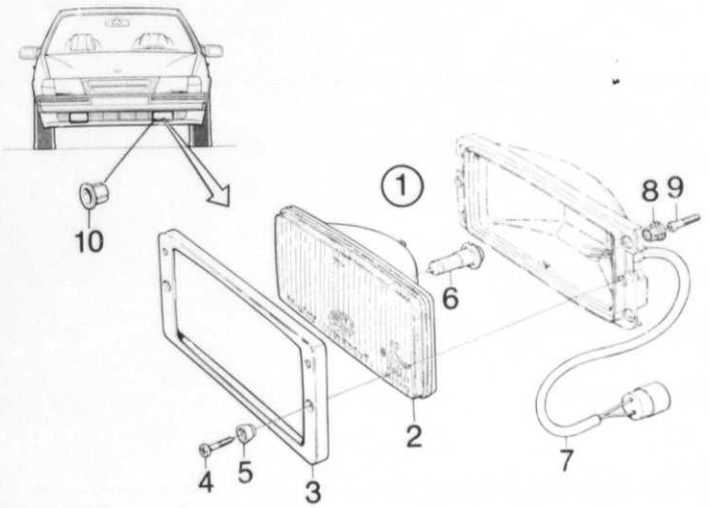

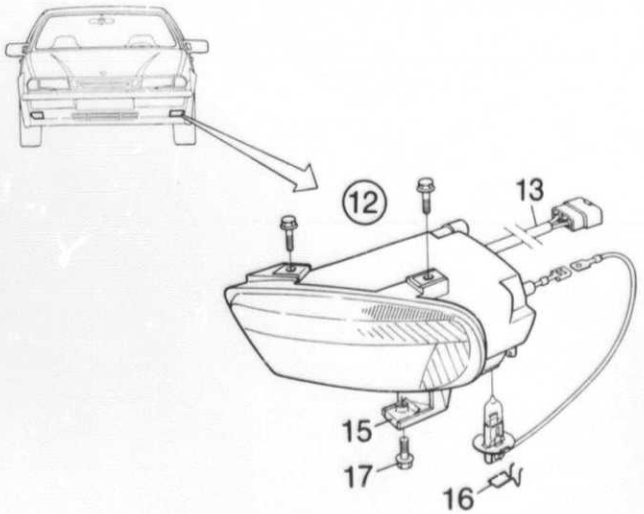

F8001 CAC94

0570	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 29 900		4D	2	Fog light	Dimljus	
0020	2	95 29 884			1	.Insert	.Insats	
0030	3	95 29 868			1	.Frame	.Ram	
0040	4	95 29 405			2	.Screw	.Skruv	5
0050	5	95 28 720			2	.Sleeve	.Hylsa	3
0060	6	*95 29 876*		40/238 216 006 NLS – USE 8529109	1	.Bulb	.Glödlampa	1
0060								
0070	7	95 18 507			1	.Cable harness	.Ledningsnät	6
0080	8	95 29 827			3	.Bushing	.Bussning	3
0090	9	95 29 843			3	.Screw	.Skruv	2
0100	10	95 29 835			3	.Nut	.Mutter	3
0110								
0120				4D, B234 I, SAI	X	Mounting kit	Monteringssats	
0130				See page 3A-199, 2-I08				
0140								
0150	12	40 14 312		5CS, LH	1	Fog light	Dimljus	4
0160	12	40 14 320		5CS, RH	1	Fog light	Dimljus	4
0170	12	43 44 198		152), 5CS, LH, FR	1	Fog light	Dimljus	4
0180	12	43 44 206		152), 5CS, RH, FR	1	Fog light	Dimljus	4
0190	13	43 50 328			1	.Cable harness	.Ledningsnät	6
0200	14	*95 29 876*		NLS – USE 8529109	1	.Bulb	.Glödlampa	1
0220	15	43 41 095			3	.Clip nut	.Klämmutter	5
0225	16	47 85 713			1	.Spring	.Fjäder	4
0230	17	79 69 223		5CS	6	Screw	Skruv	5

152. Yellow. Gul.

MASTER INDEX

0	General	1-A02
1	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04


Lighting

2-B24 *Fog light* *1995-*

Belysning

Dimljus *1995-*

0575	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 14 312		LH	1	Fog light	Dimljus	4
0020	1	40 14 320		RH	1	Fog light	Dimljus	4
0030	1	43 44 198		152), LH, FR	1	Fog light	Dimljus	4
0040	1	43 44 206		152), RH, FR	1	Fog light	Dimljus	4
0050	2	43 50 328			1	.Cable harness	.Ledningsnät	6
0060	3	*95 29 876*		-1995 NLS – USE 8529109	1	.Bulb	.Glödlampa	1
0070	3	46 85 319		1996-	1	.Bulb	.Glödlampa	
0090	4	43 41 095			3	.Clip nut	.Klämmutter	5
0095	5	47 85 713			1	.Spring	.Fjäder	4
0100	6	79 69 223			6	Screw	Skruv	5

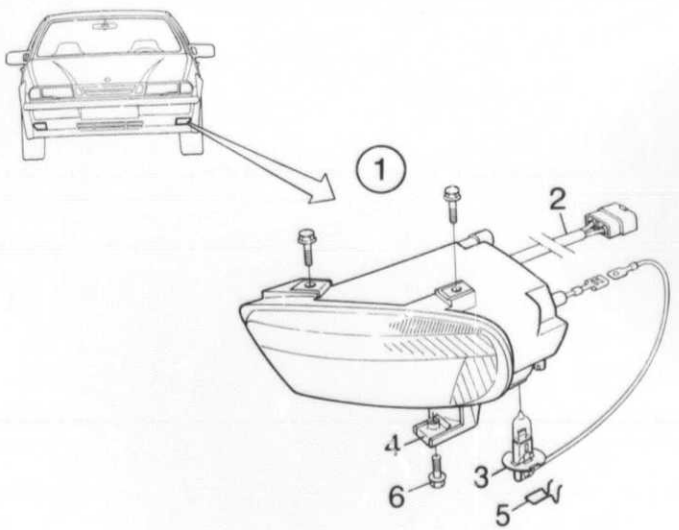

F8002 CAC94


152. Yellow. Gul.

MASTER INDEX

0	General	1-A0
2	Engine	1-C0
3A	Electrical, general	2-A0
3B	Electrical, contact housing	3-A0
4	Transmission	3-G0
5	Brakes	3-K0
6	Front assembly, Steering	4-A0
7	Suspension, Wheels	4-B0
8A	Body, external	4-C0
8B	Body, internal	5-A0
8C	Body, heating and ventilation	5-J0
8D	Tools, Labels	5-K0
10	Numerical register	6-A0

3A GROUP INDEX

Battery	2-A1
Alternator	2-A1
Starter	2-A2
Ignition system	2-B0
Lighting	2-B1
Electrical equipment, other	2-C1
Wiring and fuses	2-E1
Complete sets	2-I0

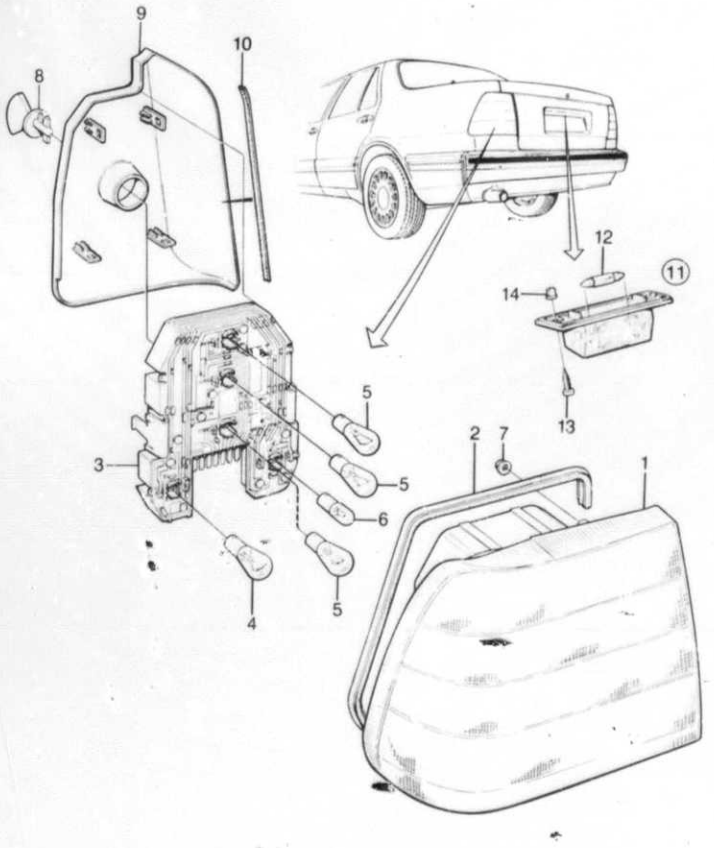

F6375 CAC94

Lighting

2-C02 Tail lamp

4D, 1994

Belysning

Baklykta

4D, 1994

0610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 076		LH, SE, FI, EU, GB,ME,PA	1	Tail lamp	Baklykta	3
0020	1	91 23 084		RH, SE, FI, EU, GB,ME,PA	1	Tail lamp	Baklykta	3
0030								
0040	1	91 23 159		LH, US, CA	1	Tail lamp	Baklykta	3
0050	1	91 23 167		RH, US, CA	1	Tail lamp	Baklykta	3
0060								
0070	2	95 22 816			1	.Seal	.Tätning	5
0080	3	42 53 639		LH, SE, EU, GB, AU,ME,PA	1	Bulb socket	Lamphållare	5
0090	3	42 53 647		RH, SE, EU, GB, AU,ME,PA	1	Bulb socket	Lamphållare	5
0100								
0110	3	42 53 654		LH, US, CA	1	Bulb socket	Lamphållare	5
0120	3	42 53 662		RH, US, CA	1	Bulb socket	Lamphållare	5
0130								
0140	4	95 08 904		SE, FI, EU, GB, PA 40/238 297 006	2	Bulb	Glödlampa	1
0150								
0160	4	85 32 756		US, CA, 40/238 291 009	2	Bulb	Glödlampa	1
0170								
0180	4	*85 37 672*		AU,ME,FE, 40/238 292 007 NLS - USE 4320594	2	Bulb	Glödlampa	1
0180								
0190								
0200	5	71 54 719		SE, FI, EU, GB, AU, ME, FE, PA, 40/238 290 001	6	Bulb	Glödlampa	1
0210								
0220								
0230	5	85 35 692		US,CA,JP, 40/238 304 000	6	Bulb	Glödlampa	1
0240	6	71 54 727		40/238 254 007	2	Bulb	Glödlampa	1
0250	7	73 98 423			2	Nut	Mutter	5
0260	8	95 24 570			2	Knob	Vred	3
0270	9	43 81 778		LH	1	Cover	Kåpa	5
0280	9	43 81 786		RH	1	Cover	Kåpa	5
0290	10	91 22 102			1	.Felt strip	.Filtlist	6
0300								
0310	11	95 26 567			2	Lighting	Belysning	5
0320	12	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0330	13	79 22 230			4	Screw	Skruv	5
0340	14	40 13 165			4	Clip	Clips	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C04 Tail lamp / Baklykta

4D, 1995-1997

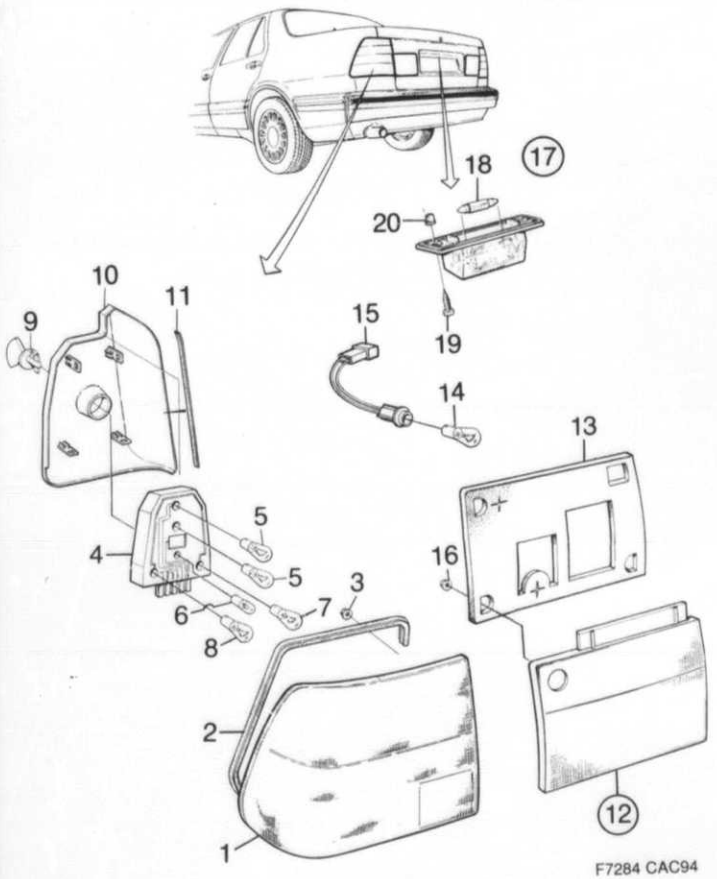

F7284 CAC94

0615	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 21 712		LH	1	Tail lamp	Baklykta	3
0020	1	45 21 720		RH	1	Tail lamp	Baklykta	3
0030								
0040	1	45 21 696		LH, US, CA	1	Tail lamp	Baklykta	3
0050	1	45 21 704		RH, US, CA	1	Tail lamp	Baklykta	3
0060								
0070	2	45 21 753			2	Seal	Tätning	5
0080	3	73 98 423			8	Nut	Mutter	5
0090	4	45 22 835		LH	1	Bulb socket	Lamphållare	5
0100	4	45 22 843		RH	1	Bulb socket	Lamphållare	5
0110								
0120	5	44 68 930			4	Bulb	Glödlampa	1
0130	6	85 35 700			2	Bulb	Glödlampa	1
0140	6	85 52 325		US, CA	2	Bulb	Glödlampa	1
0150	7	71 54 719			2	Bulb	Glödlampa	1
0160	7	85 35 692		US, CA	2	Bulb	Glödlampa	1
0170	8	43 20 594			2	Bulb	Glödlampa	1
0180	8	85 32 756		US, CA	2	Bulb	Glödlampa	1
0190								
0200	9	45 21 761			2	Knob	Vred	3
0210	10	43 81 778		LH	1	Cover	Kåpa	5
0220	10	43 81 786		RH	1	Cover	Kåpa	5
0230	11	91 22 102			1	.Felt strip	.Filtlist	6
0240								
0250	12	43 43 935		LH	1	Lamp	Lykta	3
0260	12	43 43 927		RH	1	Lamp	Lykta	3
0270	12	43 43 919		189), LH	1	Lamp	Lykta	3
0280	12	43 43 943		189), RH, GB, AU, PA	1	Lamp	Lykta	3
0290	13	45 21 837		LH	1	.Seal	.Tätning	5
0300	13	45 21 845		RH	1	.Seal	.Tätning	5
0310	14	71 54 719		189)	1	.Bulb	.Glödlampa	1
0320	15	45 21 811		189)	1	.Bulb socket	.Lamphållare	5
0330	16	79 77 929			8	Nut	Mutter	5
0340								
0350	17	95 26 567			2	Lighting	Belysning	5
0360	18	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0370	19	79 22 230		1994	4	Screw	Skruv	5
0375	19	79 22 214		1995-	4	Screw	Skruv	5
0380	20	40 13 165			4	Clip	Clips	5

189. With rear fog light. Med dimbaklykta.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C06 *Tail lamp* / *Baklykta*

5CS *5CS*



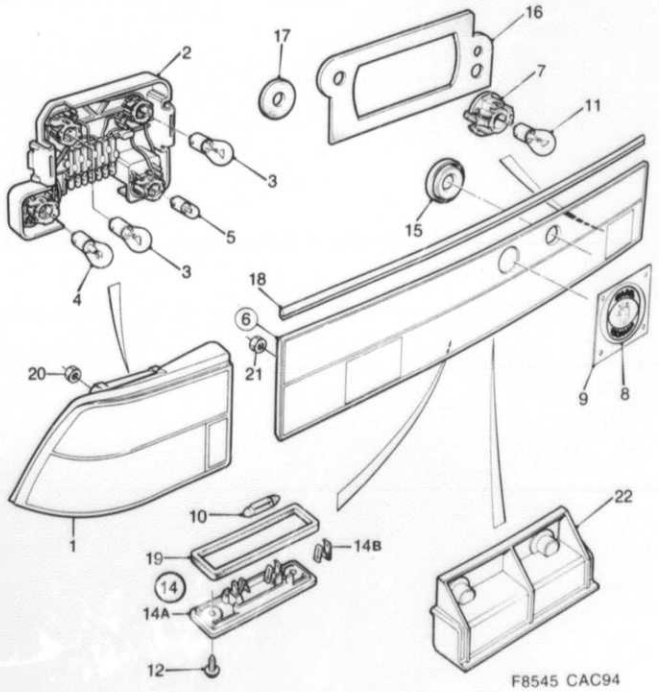

F8545 CAC94

0620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 84 039		LH	1	Tail lamp	Baklykta	3
0020	1	90 84 047		RH	1	Tail lamp	Baklykta	3
0030	1	90 85 358		LH, US, CA, PA	1	Tail lamp	Baklykta	3
0040	1	90 85 366		RH, US, CA, PA	1	Tail lamp	Baklykta	3
0050	2	90 84 070		LH	1	Bulb socket	Lamphållare	5
0060	2	90 84 088		RH	1	Bulb socket	Lamphållare	5
0070	3	71 54 719		40/238 290 001	4	Bulb	Glödlampa	1
0080	3	85 35 692		US,CA,PA, 40/238 304 000	4	Bulb	Glödlampa	1
0090	4	43 20 594			2	Bulb	Glödlampa	1
0100	4	85 32 756		US,CA,PA, 40/238 291 009	2	Bulb	Glödlampa	1
0110	5	85 35 700			2	Bulb	Glödlampa	1
0120	5	85 52 325		US, CA, PA	2	Bulb	Glödlampa	1
0130								
0140	6	45 21 175		309)	1	Decor panel	Dekorpanel	3
0150	6	• 48 30 840		310)	1	Decor panel	Dekorpanel	3
0160	6	43 80 317		309), RHD	1	Decor panel	Dekorpanel	3
0170	6	• 48 30 857		310), RHD	1	Decor panel	Dekorpanel	3
0180	6	45 21 282		309), US, CA	1	Decor panel	Dekorpanel	3
0190	6	• 48 30 865		310), US, CA	1	Decor panel	Dekorpanel	3
0200	7	40 90 114			2	.Bulb socket	.Lamphållare	5
0210	8	41 71 856			1	.Emblem	.Emblem	3
0220	9	42 54 249			1	..Decal tape	..Emblemtejp	3
0230	10	70 84 197		40/238 261 002	2	.Bulb	.Glödlampa	1
0240	11	71 54 719		40/238 290 001	2	.Bulb	.Glödlampa	1
0250	12	79 22 271			4	.Screw	.Skruv	5
0260	14	85 49 537			1	.Lens	.Glas	3
0270	14A	46 73 224		1)	1	..Lens	..Glas	3
0280	14B	48 30 824			2	..Switch actuator	..Kontaktbleck	
0290	15	43 80 325			1	.Sealing collar	.Tätningskrage	4
0300	16	90 86 240			2	.Seal	.Tätning	5
0310	17	90 86 265			4	.Seal	.Tätning	6
0320	18	43 80 382			1	.Seal	.Tätning	6
0330	19	90 86 281			2	.Seal	.Tätning	5
0340	20	73 98 423			4	Nut	Mutter	5
0350	21	73 98 423			8	Nut	Mutter	5
0360	22	43 44 222			1	Handle	Handtag	5

1. Not as separate spare part. Ej som separat reservdel.
309. Ch -V1015870.
310. Ch V1015871-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04


Lighting

2-C08 Stop light High mounted

Belysning

Stopplykta Högt monterad

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650								
0010	10	43 41 194		266), 4D	1	Stop light	Stopplykta	3
0020	10	46 73 299		267), -1997, 4D	1	Stop light	Stopplykta	3
0030	11	85 35 692		40/238 304 000	1	.Bulb	.Glödlampa	1
0040	12	95 51 953			1	.Seal	.Tätning	3
0050	13	40 90 007		-1997, 4D	1	Bracket	Konsol	6
0060	14	95 53 512		1997, 4D	1	.Spring	.Fjäder	6
0070								
0080	16	40 14 429		266), 5CS	1	Stop light	Stopplykta	3
0090	16	40 14 429		267), 5CS	1	Stop light	Stopplykta	3
0100	16	43 44 834		266), 5CS, GB	1	Stop light	Stopplykta	3
0110	17	40 14 452			1	.Bulb socket	.Lamphållare	3
0120	18	40 14 478			1	.Sealing strip	.Tätningslist	3
0130	19	95 12 880			2	.Bulb	.Glödlampa	1
0140	19	95 05 116		266), GB, 40/238 288 005	2	.Bulb	.Glödlampa	4
0150	19A	95 12 880			2	.Bulb	.Glödlampa	1
0160	19B	44 48 999			4	.Bulb socket	.Lamphållare	3
0170	20	43 20 255		266), 5CS	1	Lens	Glas	5
0180	20	46 73 273		277), 5CS	1	Lens	Glas	5
0190	20	40 14 460		159,266), 5CS	1	Lens	Glas	5
0200	20	46 73 281		159,267), 5CS	1	Lens	Glas	5
0210	21	79 74 025		5CS	2	Screw	Skruv	5
0220	22	73 98 423		5CS	4	Nut	Mutter	5
0230	23			5CS		Grommet	Genomföring	
0240				See page 3A-071, 2-C24		high mounted stop light	högt monterad stopplykta	
0250	24			5CS		Nozzle	Munstycke	
0260				See page 3A-071, 2-C24				

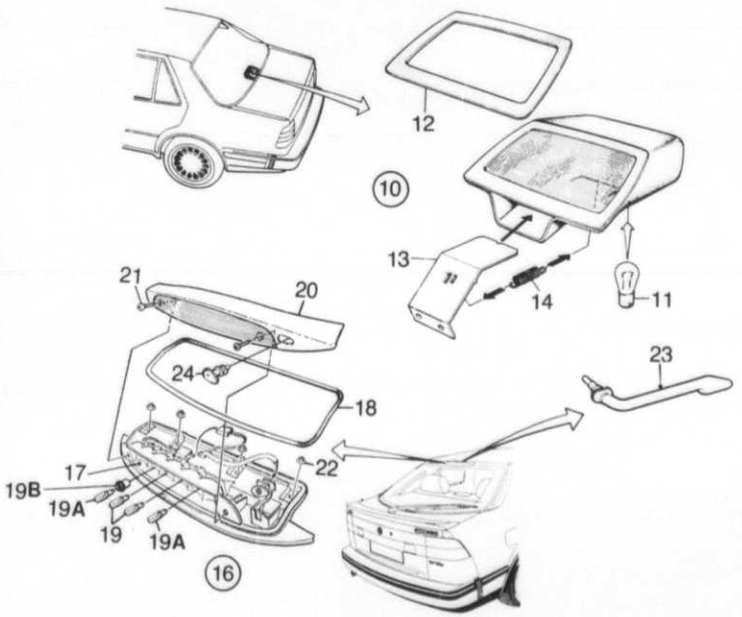

F6378 CAC94

159. With rear window wiper. Med bakrutetorkare.
266. Ch -S1031661.
267. Ch S1031662-.
277. CH -T1017372.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C10

Other lights
Övrig belysning

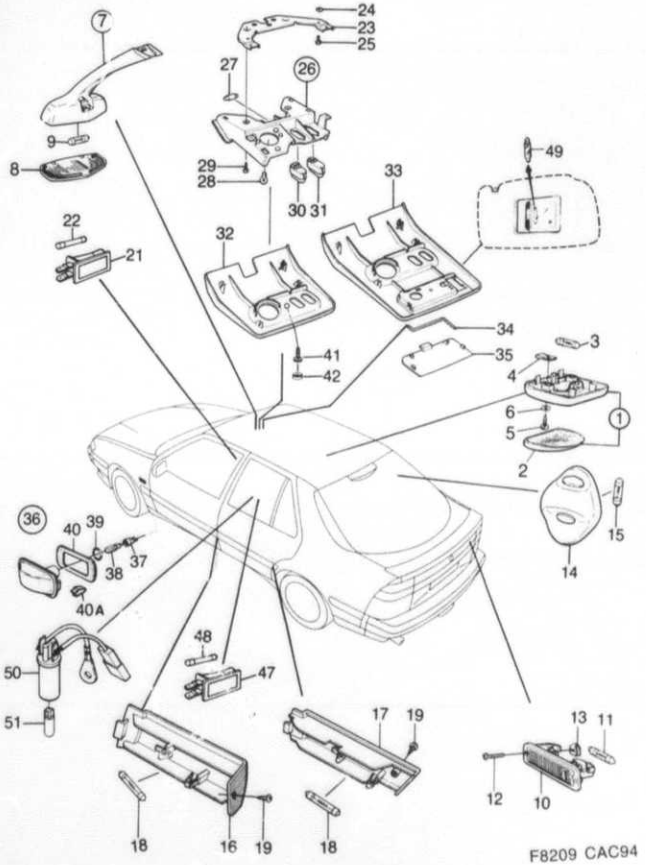

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 90 239		1994	1	Dome lamp	Taklampa	4
0020	1	46 06 729		31), 1995-	1	Dome lamp	Taklampa	4
0030	1	43 07 054		1995-	1	Dome lamp	Taklampa	4
0040	2	40 60 406		1994	1	.Lamp lens	.Lampglas	6
0050	2	45 55 272		240), 1995-	1	.Lamp lens	.Lampglas	6
0060	3	85 01 264		1994, 40/238 265 003	1	.Bulb	.Glödlampa	2
0070	3	95 12 880		1995-	2	.Bulb	.Glödlampa	1
0080	4	79 67 995			2	Clip nut	Clipsmutter	3
0090	5	79 22 388			2	Screw	Skruv	5
0100	7	95 01 941			1	Lamp	Lampa	5
0110						rear view mirror	backspegel	
0120	8	95 02 055			1	.Lamp lens	.Lampglas	6
0130	9	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0140	10	85 77 801			1	Lamp	Lampa	3
0150						boot	bagagerum	
0160	11	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
0170	12	79 70 346		5CS	2	Screw	Skruv	5
0180	12	79 70 346		-1997, 4D	2	Screw	Skruv	5
0190	13	95 45 435		1997-, 4D	2	Clamp	Klämma	5
0200	14	95 00 273			2	Lamp	Lampa	4
0210	15	95 06 080			1	.Bulb	.Glödlampa	2
0220	16	95 64 253		LH	1	Lamp	Lampa	4
0230						front door	framdörr	
0240	16	95 64 261		RH	1	Lamp	Lampa	4
0250						front door	framdörr	
0260								
0270	17	95 63 677		LH	1	Lamp	Lampa	4
0280						rear door	bakdörr	
0290	17	95 63 685		RH	1	Lamp	Lampa	4
0300						rear door	bakdörr	
0310	18	70 84 197		40/238 261 002	4	Bulb	Glödlampa	1
0320	19	79 63 937			4	Screw	Skruv	5
0330	21	95 92 098			1	Lamp	Lampa	
0340						glove compartment	handskfack	
0350	22	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0360	23	97 65 595			1	Bracket	Konsol	6
0370	24	79 74 983			2	Cage nut	Korgmutter	5
0380	25	92 59 524			2	Screw	Skruv	5
0390	26	40 37 701			1	Base plate	Bottenplatta	6
0400	27	70 84 197		40/238 261 002	1	.Bulb	.Glödlampa	1
0410	28	95 06 080			1	.Bulb	.Glödlampa	2
0420	29	79 22 347		1994	4	Screw	Skruv	5
0430	29	79 72 805		1995-	4	Screw	Skruv	5
0440	30	95 05 447			1	Switch	Strömställare	3
0450						reading lamp	läslampa	
0460	31	95 05 439			1	Switch	Strömställare	3
0470						interior illum.	innerbelysning	
0480	32	96 60 176		22)	1	Cover	Lock	
0490	33	97 65 553		21)	1	Cover	Lock	6
0500	34			See page 8A-013, 4-C14		Crank	Vev	
0510	35	97 66 114		21)	1	Cover	Lock	6
0520	36	91 24 132			2	Side light	Sidolampa	3
0530	37	95 21 857			1	.Bulb socket	.Lamphållare	6
0540	38	95 12 880		40/238 300 008	1	.Bulb	.Glödlampa	1
0550	39	95 12 898		246)	1	.Gasket	.Packning	6
0560	39	44 84 259		247)	1	.Gasket	.Packning	6
0570	40	91 24 140			1	.Seal	.Tätning	6

21. For cars with el. sun roof. För bilar med el. soltak.
22. For cars without el. sun roof. För bilar utan el. soltak.
31. Without theft alarm. Utan tjuvlarm.
240. Part of 43 07 054. Del av 43 07 054.
246. Ch -S2006307.
247. Ch S2006308-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C12

Other lights

Övrig belysning

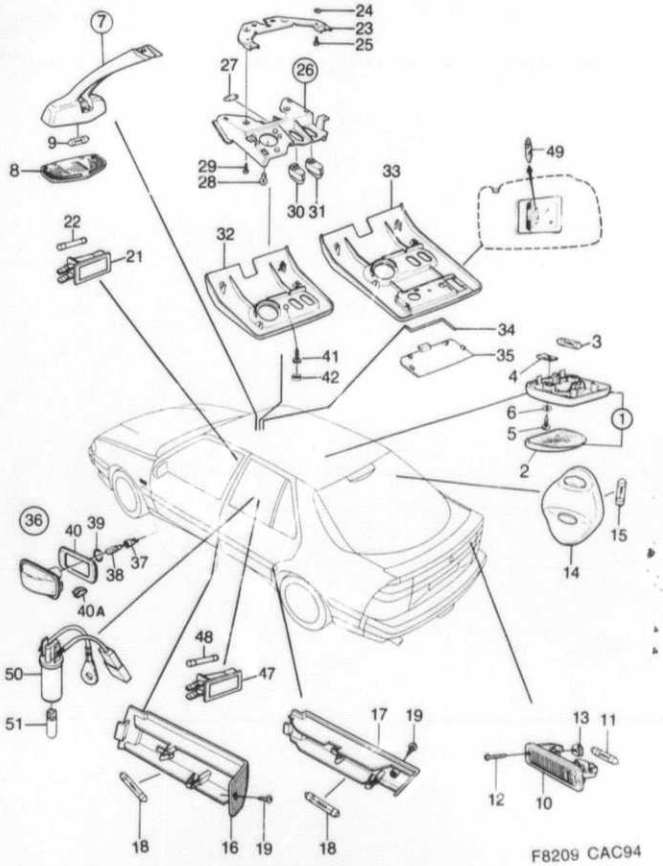

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	40A	48 30 113			1	‚Clip	‚Clips	
0590	41	79 71 351			1	Screw	Skruv	5
0600	42	97 99 354			1	Cover	Täcklock	5
0610	45	79 22 800			1	Screw	Skruv	5
0620	46			See page 8B-023, 5-A24		Attaching plate	Fästplåt	
0630	47	95 69 948			1	Lighting	Belysning	4
0640						centre console	mittkonsol	
0650	48	70 84 197		40/238 261 002	1	‚Bulb	‚Glödlampa	1
0660	49	95 78 618		250)	2	Lamp	Lampa	3
0670						sun visor	solskydd	
0680	49	44 86 684		251)	2	Bulb	Glödlampa	3
0690						sun visor	solskydd	
0700	50	85 78 775		A	1	Bulb socket	Lamphållare	4
0710						gear position indicator	växellägesindikator	
0720	51	85 00 613		A	1	Bulb	Glödlampa	2
0730						gear position indicator	växellägesindikator	

250. Ch –R1005971.
251. Ch R10059712-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C14

Horn

Signalhorn

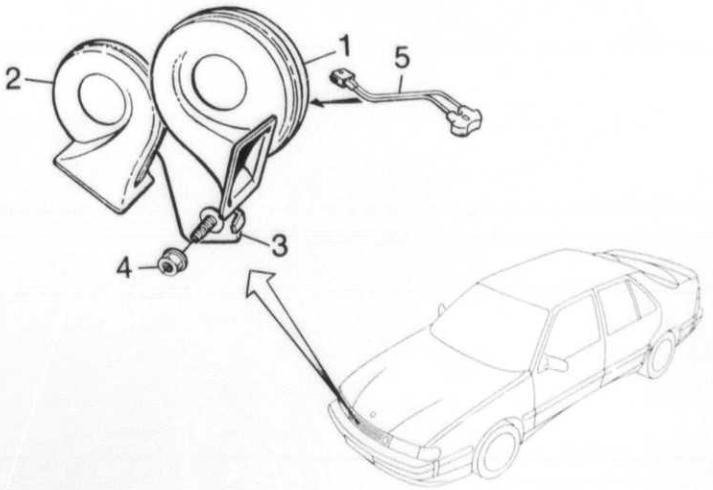

F6380 CAC94


0750	Pos	Part No/Art.nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 48 825			1	Horn	Signalhorn	4
0020						high tone	hög ton	
0030	2	44 48 817			1	Horn	Signalhorn	4
0040						low tone	låg ton	
0050	3	44 48 841			1	Bracket	Fäste	6
0060	4	79 77 952			1	Hexagon nut	Sexkantsmutter	5
0070	5	44 48 833			1	Cable network	Kabelnät	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

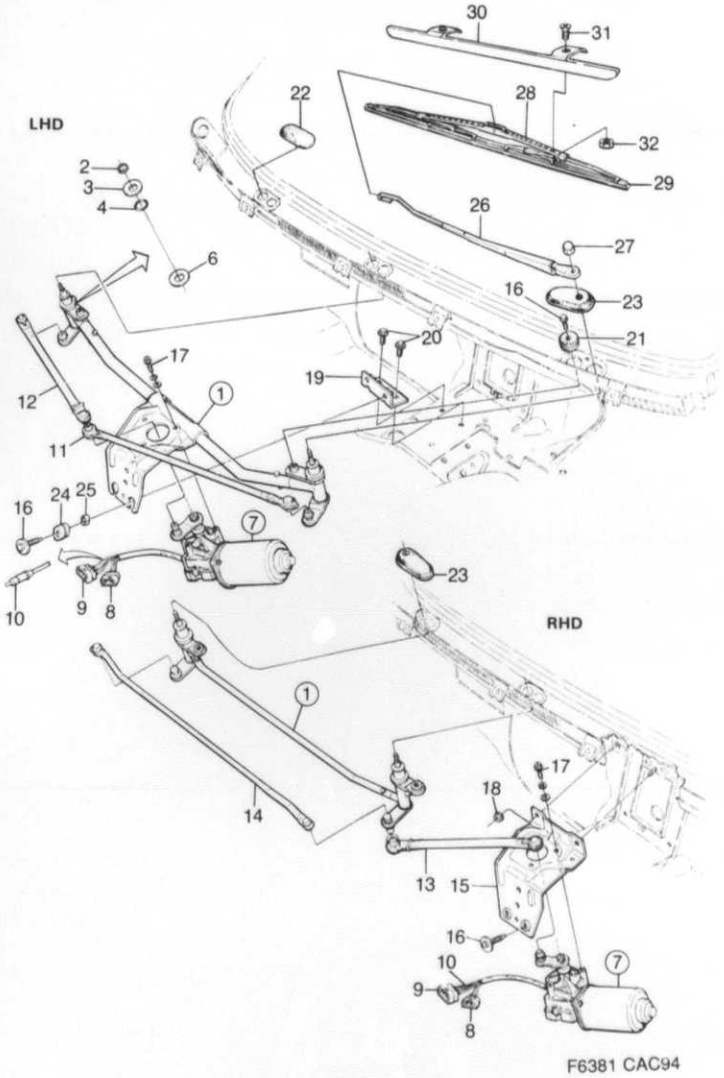

Electric equipment, other

2-C16

Windscreen wiper

Övr. elektrisk utrustning

Vindrutetorkare

0810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 23 688			1	Spindle frame	Spindelram	6
0020	1	40 60 497		RHD	1	Spindle frame	Spindelram	6
0030	2	91 23 837			2	.Retaining ring	.Spårring	5
0040	3	91 23 845			2	.Washer	.Bricka	5
0050	4	91 23 852			2	.O-ring	.O-ring	2
0060	6	91 23 894			2	.Washer	.Bricka	5
0070	7	91 23 662			1	Electric motor	Elmotor	4
0080	7	40 60 489		RHD	1	Electric motor	Elmotor	4
0090	8	95 01 685			1	.Contact housing 2-pole	.Kontakthus 2-polig	4
0100								
0110	9	95 03 327			1	.Contact housing 3-pole	.Kontakthus 3-polig	4
0120								
0130	10	85 47 770			5	.Connector	.Skarvstycke	5
0140	11	91 23 696		LH, LHD	1	Crank arm	Vevarm	5
0150	12	91 23 704		RH, LHD	1	Crank arm	Vevarm	5
0160	13	40 60 513		LH, RHD	1	Crank arm	Vevarm	5
0170	14	40 60 505		RH, RHD	1	Crank arm	Vevarm	5
0180	15	40 63 574		RHD	1	Bracket	Konsol	5
0190	16	73 99 900			4	Hexagon screw	Sexkantsskruv	5
0200	17	40 63 814			3	Screw	Skruv	5
0210	18	79 77 929		RHD	2	Nut	Mutter	5
0220	19	91 24 751			1	Bracket	Konsol	5
0230	20	79 69 223			2	Screw	Skruv	5
0240	21	91 23 589		LHD	2	Rubber bushing	Gummibussning	3
0250	22	91 23 639			1	Plug	Plugg	4
0260	23	91 23 597		LH, LHD	1	Cover	Kåpa	3
0270	23	91 23 605		RH, LHD	1	Cover	Kåpa	3
0280	23	91 23 613		RHD	2	Cover	Kåpa	3
0290	24	91 23 753		LHD	2	Bushing	Bussning	3
0300	25	91 23 761		LHD	2	Sleeve	Hylsa	5
0310	26	40 95 626		LH, LHD	1	Wiper arm	Torkararm	3
0320	26	40 95 634		RH, LHD	1	Wiper arm	Torkararm	3
0330								
0340	26	40 95 659		LH, RHD	1	Wiper arm	Torkararm	3
0350	26	40 95 642		RH, RHD	1	Wiper arm	Torkararm	3
0360	27	95 65 912			2	Cap nut	Kupolmutter	5
0370	28	43 81 844	S	LHD	2	Wiper blade	Torkarblad	3
0380	28	43 81 851		RHD	2	Wiper blade	Torkarblad	3
0390	28	44 48 049		221), PA	2	Wiper blade	Torkarblad	3
0400	28	44 48 056		221), RHD, PA	2	Wiper blade	Torkarblad	3
0410	29		S	1)	2	.Profile	.Profil	
0420	30	40 92 748		LHD	1	Spoiler	Spoiler	3
0430	30	40 93 035		RHD	1	Spoiler	Spoiler	3
0440	31	40 92 755			2	Screw	Skruv	5
0450	32	40 92 763			2	Nut	Mutter	5
0460				See page 3A-195, 2-I04	X	Profiled rubber kit	Gummiprofilsats	
0470				221), PA	X	Profiled rubber kit	Gummiprofilsats	
0480				See page 3A-195, 2-I04				
0490				LHD	X	Wiper blade kit	Torkarbladssats	
0500				See page 3A-195, 2-I04				
0510				RHD	X	Wiper blade kit	Torkarbladssats	
0520				See page 3A-195, 2-I04				


1. Not as separate spare part. Ej som separat reservdel.
221. Synthetic rubber. Syntetiskt gummi.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

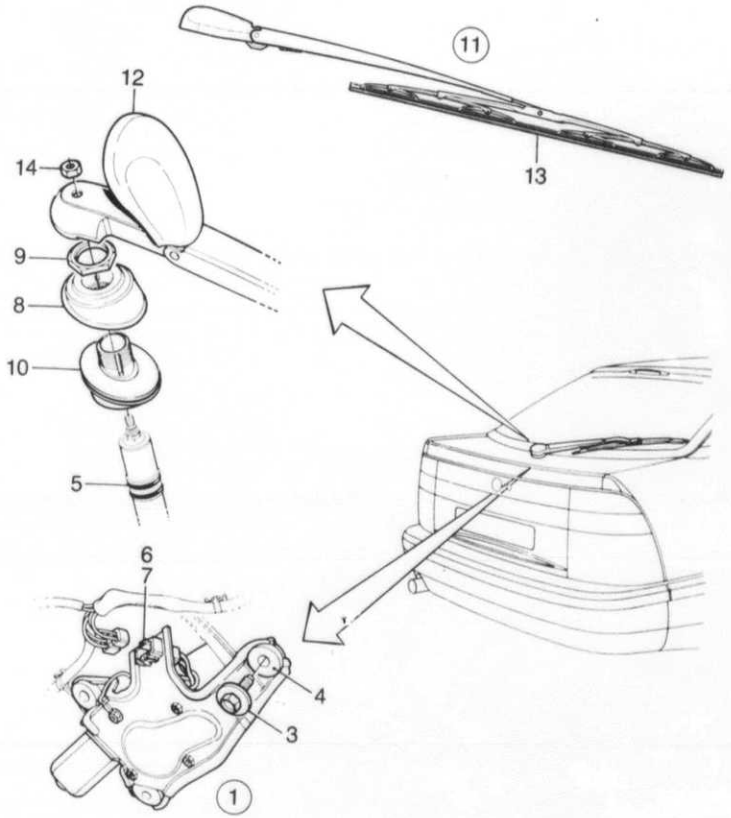

F6382 CAC94

0820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 86 869			1	Wiper motor	Torkarmotor	4
0020	3	90 86 935			3	.Screw	.Skruv	5
0030	4	90 86 943			3	.Rubber bushing	.Gummibussning	3
0040	5	90 86 950			2	.O-ring	.O-ring	2
0050	6	95 18 739			1	.Contact housing 4-pole, male	.Kontakthus 4-polig, stift	4
0060								
0070	7	95 52 100		AREA, 0,75-1,5 MM2	4	.Cable terminal	.Kabelsko	5
0080	8	90 86 885			1	Steering knuckle retainer	Spindelhållare	
0090	9	90 86 901			1	Nut	Mutter	5
0100	10	90 86 877			1	Steering knuckle retainer	Spindelhållare	5
0110								
0120	11	*90 83 684*		242) NLS – USE 4522611	1	Wiper arm	Torkararm	3
0125	11	45 22 611		243)	1	Wiper arm	Torkararm	3
0130	12	43 20 453			1	.Cover	.Kåpa	3
0140	13	43 81 844			1	Wiper blade	Torkarblad	3
0150	14	79 77 929			1	Nut	Mutter	5

242. Ch -R1027993.
243. Ch R1027994-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C20

Headlamp wiper
4D, 1994

Strålkastartorkare
4D, 1994

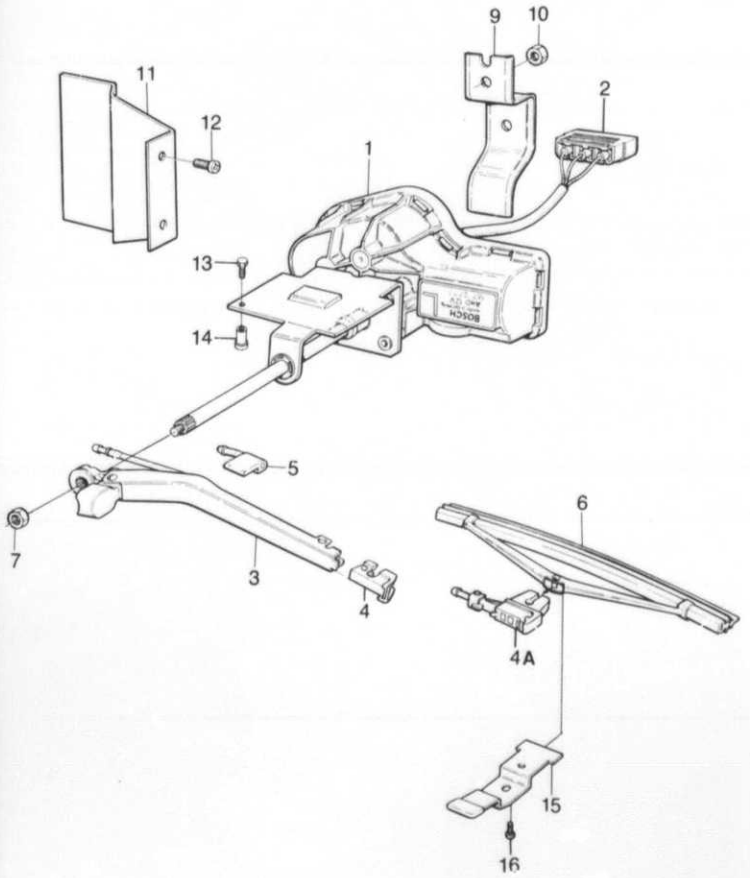

F6383 CAC94

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 94 942		LH	1	Electric motor	Elmotor	3
0020	1	40 94 926		RH	1	Electric motor	Elmotor	3
0030	1	91 23 233		LH, US	1	Electric motor	Elmotor	3
0040	1	91 23 241		RH, US	1	Electric motor	Elmotor	3
0050	2	95 03 327		See page 3B-011, 3-A12	1	,Contact housing 3-pole, male	,Kontakthus 3-polig, stift	4
0060								
0070	3	42 50 197		LH	1	Wiper arm	Torkararm	4
0080	3	42 50 205		RH	1	Wiper arm	Torkararm	4
0090	3	42 51 476		LH, US	1	Wiper arm	Torkararm	4
0100	3	42 51 484		RH, US	1	Wiper arm	Torkararm	4
0110	4	95 58 149			1	,Adapter	,Adapter	5
0120	4A	91 23 217		LH, US	1	,Adapter	,Adapter	5
0130	4A	91 23 225		RH, US	1	,Adapter	,Adapter	5
0140	5	95 68 999		LH	1	,Nozzle	,Munstycke	2
0150	5	95 69 005		RH	1	,Nozzle	,Munstycke	2
0160	6	40 95 063	S		2	Wiper blade	Torkarblad	2
0170	6	91 20 882	S	US	2	Wiper blade	Torkarblad	2
0180	7	79 77 511			2	Nut	Mutter	5
0190	9	95 01 495			2	Bracket	Fäste	5
0200	10	81 51 227			2	Nut	Mutter	5
0210	11	91 24 124		15)	1	Shield	Sköld	5
0220	12	79 22 420			2	Screw	Skruv	5
0230	13	79 65 544			4	Screw	Skruv	5
0240	14	92 23 082			4	Nut	Mutter	5
0250	15	95 24 596			2	Stop	Stopp	3
0260	16	79 22 891			2	Screw	Skruv	5
0270		85 48 042			X	Wiper blade kit	Torkarbladssats	2
0280				See page 3A-195, 2-I04				
0290		85 47 408		US	X	Wiper blade kit	Torkarbladssats	2
0300				See page 3A-195, 2-I04				

15. For cars with oil cooler. För bilar med oljekylare.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

Electric equipment, other

2-C22 Headlamp wiper 5CS; 4D 1995-1997

Övr. elektrisk utrustning

Strålkastartorkare 5CS; 4D 1995-1997

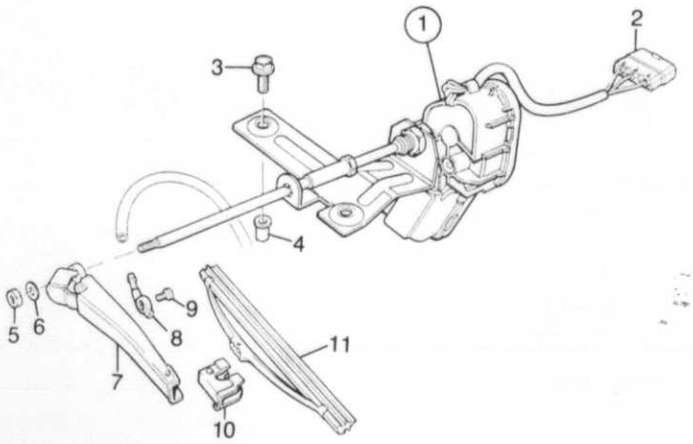

F6384 CAC94

0860	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 470		LH	1	Electric motor	Elmotor	3
0020	1	90 82 488		RH	1	Electric motor	Elmotor	3
0030	2	95 03 327			1	.Contact housing 3-pole, male	.Kontakthus 3-polig, stift	4
0040								
0050	3	79 78 117			4	Screw	Skruv	5
0060	4	73 99 454			4	Nut	Mutter	5
0070	5	80 29 548			2	Nut	Mutter	5
0080	6	79 72 284			2	Washer	Bricka	5
0090								
0100	7	90 82 553		LH	1	Wiper arm	Torkararm	4
0110	7	90 82 561		RH	1	Wiper arm	Torkararm	4
0120	8	90 89 129		LH	1	.Nozzle	.Munstycke	2
0130	8	90 89 111		RH	1	.Nozzle	.Munstycke	2
0140	9	42 51 021			1	.Screw	.Skruv	5
0150	10	95 58 149			1	.Adapter	.Adapter	5
0160	11	85 49 172	S		2	Wiper blade	Torkarblad	2
0170	11	85 49 180	S	US	2	Wiper blade	Torkarblad	2
0180		85 48 299		See page 3A-195, 2-I04	X	Wiper blade kit	Torkarbladssats	2
0190		85 48 281		US	X	Wiper blade kit	Torkarbladssats	2
0200				See page 3A-195, 2-I04				

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-C24

Washer unit — Spolaranläggning

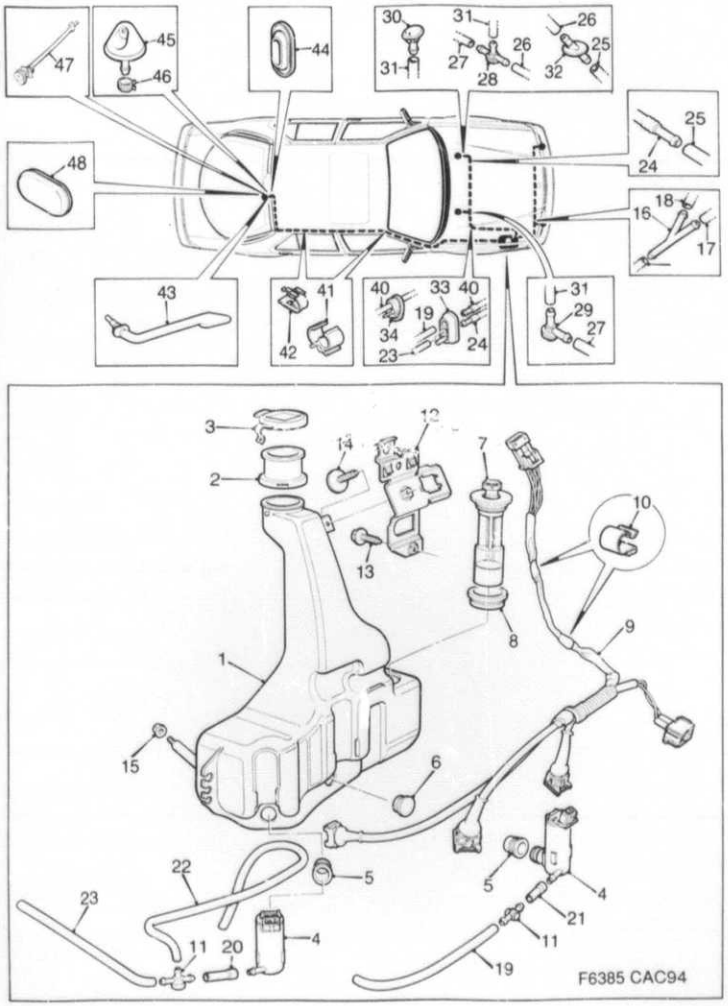

0910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 92 342			1	Washer fluid reservoir	Spolarburk	3
0020	2	43 41 145			1	Filler pipe	Påfyllningsrör	4
0030	3	40 92 359			1	Cover	Lock	2
0040	4	43 20 123			1	Washer pump	Spolarpump	2
0050	4	43 20 123		159), 5CS	2	Washer pump	Spolarpump	2
0060	5	95 07 617			1	Bushing	Bussning	3
0070	6	43 41 111		174), 5CS	1	Bushing	Bussning	3
0080	7	41 71 146			1	Level guard	Nivåvakt	5
0090	8	41 71 153			1	Bushing	Bussning	3
0100	9	41 71 161			1	Cable harness	Ledningsnät	6
0110	9	41 71 179		159), 5CS	1	Cable harness	Ledningsnät	6
0120	10	71 08 481			X	Clamp	Klammer	5
0130	11	*85 73 651*		NLS - USE 9569013	1	Valve	Ventil	3
0140	11	41 71 112		159), 5CS	1	Valve	Ventil	3
0150	12	41 71 203			1	Bracket	Konsol	6
0160	13	79 78 091			1	Screw	Skruv	5
0170	14	73 99 900			1	Hexagon screw	Sexkantsskruv	5
0180	15	79 77 929			2	Nut	Mutter	5
0190	16	85 09 002			1	Tube	Rör	2
0200	17	85 48 273		L=1150 MM	1	Hose	Slang	5
0210	18	85 48 273		L=60 MM	1	Hose	Slang	5
0220	19	85 48 273		L=150 MM	1	Hose	Slang	5
0230	20	85 48 273		L=30 MM	1	Hose	Slang	5
0240	21	85 48 273		L=30 MM	1	Hose	Slang	5
0250	22	85 48 273		L=500 MM	1	Hose	Slang	5
0260	23	85 48 273		L=220 MM	1	Hose	Slang	5
0270	24	42 52 458			1	Hose	Slang	5
0280	25	85 48 273		L=245 MM	1	Hose	Slang	5
0290	26	85 48 273		L=200 MM	1	Hose	Slang	5
0300	27	85 48 273		L=600 MM	1	Hose	Slang	5
0310	28	95 69 013		LH	1	Valve	Ventil	3
0320	29	85 73 669		RH	1	Valve	Ventil	
0330	30	85 04 144			2	Nozzle	Munstycke	2
0340	31	85 48 273		L=30 MM	2	Hose	Slang	5
0350	32			See page 8A-017, 4-C18		Connector	Skarvstycke	
0360	33	40 96 012			1	Grommet	Genomföring	3
0370	34	42 54 611			1	Grommet	Genomföring	3
0380								
0390	40	40 96 020		5CS	1	Hose	Slang	5
0400						rear window wiper	bakrutetorkare	
0410	41	40 96 038		5CS	X	Clamp	Klammer	5
0420	42	42 51 997		5CS	X	Clamp	Klammer	5
0430	43	41 71 245		19,159,244), 5CS	1	Grommet	Genomföring	3
0440	43	45 21 456		19,159,245), -1994, 5CS	1	Grommet	Genomföring	3
0450				1)	1	,Cable harness	,Ledningsnät	
0460	43	45 21 456		19), 1995-, 5CS	1	Grommet	Genomföring	3
0470				1)	1	,Cable harness	,Ledningsnät	
0480	43	43 80 515		159,168,266), 5CS	1	Grommet	Genomföring	3
0490	43	41 71 260		19,174), -1994, 5CS	1	Grommet	Genomföring	3
0500				1)	1	,Cable harness	,Ledningsnät	
0510	44	41 71 278		266), 5CS	1	Sealing plug	Tätningsplugg	3
0520	45	40 92 144		159,168,266), 5CS	1	Nozzle	Munstycke	2
0530	45	41 72 441		19,159,244), 5CS	1	Nozzle	Munstycke	2
0540	46	79 84 768		19,159,244), 5CS	X	Clamp	Klamma	5
0550	47	45 21 449		19,159,245), 5CS	1	Nozzle	Munstycke	2

1. Not as separate spare part. Ej som separat reservdel.
19. High mounted stop light. Högt monterat stoppljus.
159. With rear window wiper. Med bakrutetorkare.
168. Without high mounted stop light. Utan högt monterat stoppljus.
174. Without rear window wiper. Utan bakrutetorkare.
244. Ch -R1026910.
245. Ch R1026911-.
266. Ch -S1031661.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D02

Washer unit

Spolaranläggning

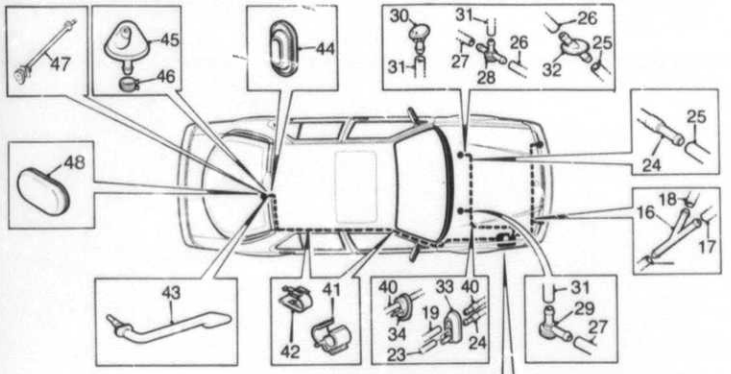

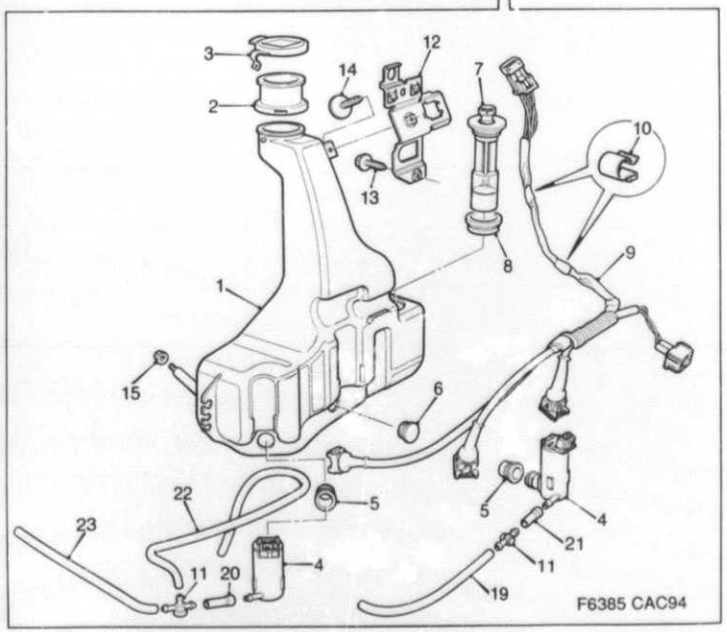

0910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	48	82 72 494		168,174,266), 5CS	1	Plug	Plugg	5
0570								
0580		85 48 273		L=5000 MM	X	Hose	Slang	5

168. Without high mounted stop light. Utan högt monterat stoppljus.
174. Without rear window wiper. Utan bakrutetorkare.
266. Ch -S1031661.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D04

Central lock

Centrallås

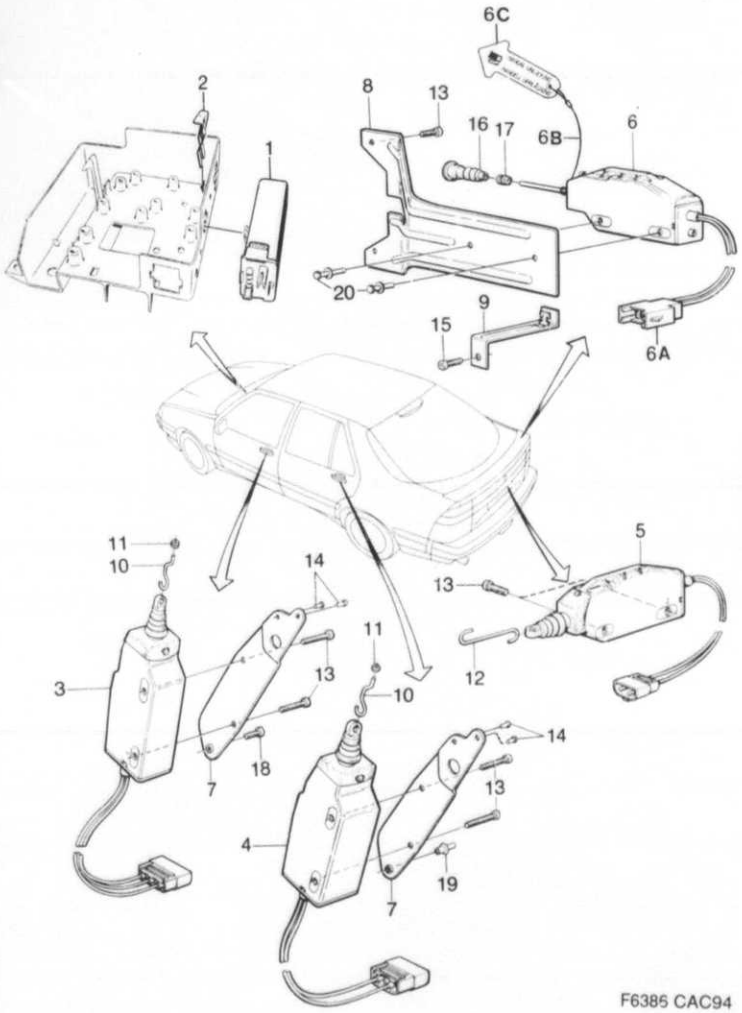

F6385 CAC94

0925	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0010	1	41 02 851			1	Electronic unit	Elektronikenhet	3
0020				See page 8A-045, 4-D22		Door lock	Dörrlås	
0030	2	85 65 855			1	Clip	Clips	6
0040	3	85 91 224			1	Electric motor	Elmotor	3
0050	4	85 91 224			3	Electric motor	Elmotor	3
0060	5			-1997, 4D		Lock	Lås	
0070				See page 8A-049, 4-E02				
0080	5			5CS		Lock	Lås	
0090				See page 8A-053, 4-E06				
0100	6	43 04 911			1	Electric motor	Elmotor	3
0110	6A	41 17 560			1	.Connector housing	.Kontakthus	4
0120	6B			1)	1	.Cable	.Lina	
0130	6C			1)	1	.Handle	.Handtag	
0140	7	95 03 079		LH	2	Bracket	Konsol	6
0150	7	95 03 061		RH	2	Bracket	Konsol	6
0160	8	43 04 929		-1997, 4D	1	Bracket	Konsol	6
0170	8	90 87 552		5CS	1	Bracket	Konsol	6
0180	9	91 24 454			1	Clamp	Klammer	6
0190	10	95 64 881			4	Pull rod	Dragstång	5
0200	11	95 05 058			4	Bushing	Bussning	4
0210	12	95 02 741			1	Pull rod	Dragstång	5
0220	13	79 71 823			10	Screw	Skruv	5
0230	14	95 08 09			8	Rivet	Nit	5
0240	15	79 22 4			1	Screw	Skruv	5
0250	16	95 02 7			1	Bellows	Bälg	4
0260	17	95 02 71			1	Bushing	Bussning	4
0270	18	79 69 223			2	Screw	Skruv	5
0280	19	92 55 845			2	Rivet	Nit	5
0290	20	*79 61 634*		1994 NLS – USE 7977804	2	Rivet	Nit	5
0295	20	79 72 490		1995-	2	Rivet	Nit	5
0300								
0310				See page 3A-101, 2-E06		Switch door	Brytare dörr	
0320								


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

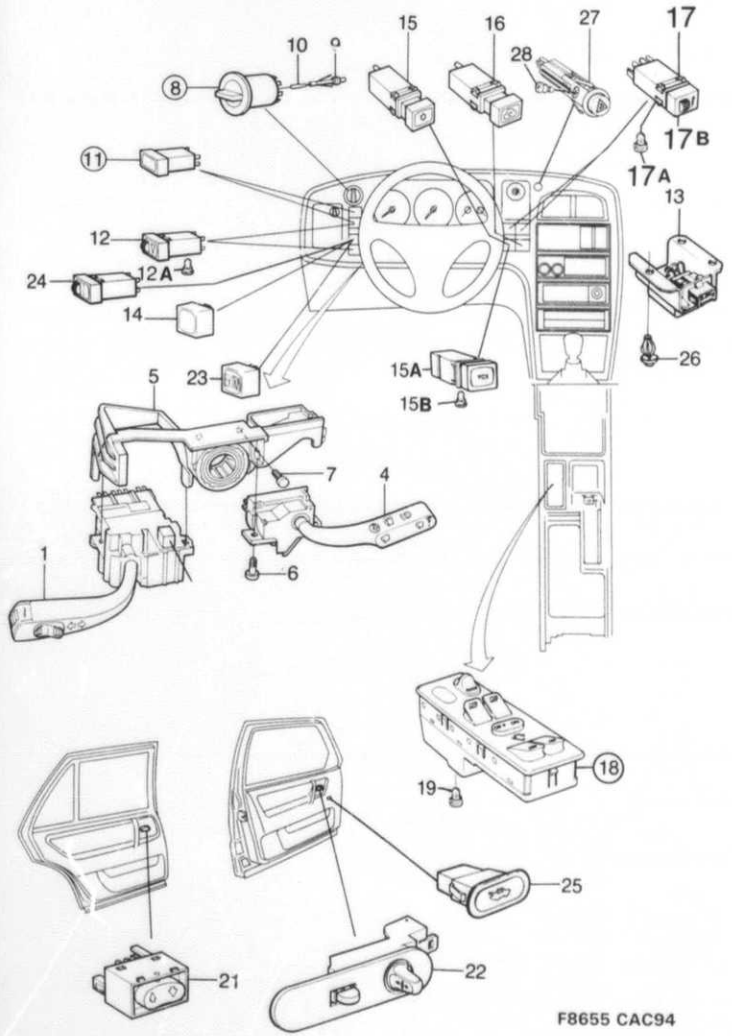

Electric equipment, other

2-D06

Switch

Övr. elektrisk utrustning

Strömställare

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 68 870		11), -1995	1	Switch	Strömställare	2
0020						direction indicator	blinkers	
0030	1	46 92 745		11), 1996-	1	Switch	Strömställare	2
0040						direction indicator	blinkers	
0050	1	40 68 862		12)	1	Switch	Strömställare	2
0060						direction indicator	blinkers	
0070	4	95 18 226		-1995	1	Switch	Strömställare	2
0080						windscreen wiper	vindrutetorkare	
0090	4	46 92 752		1996-	1	Switch	Strömställare	2
0100						windscreen wiper	vindrutetorkare	
0110	4	95 64 394		159), -1995, 5CS	1	Switch	Strömställare	2
0120						windscreen wiper	vindrutetorkare	
0130	4	46 92 760		159), 1996-, 5CS	1	Switch	Strömställare	2
0140						windscreen wiper	vindrutetorkare	
0150	5	45 18 288		1994	1	Bracket	Hållare	6
0160	5	46 17 379		1995-	1	Bracket	Hållare	6
0170	6	79 82 333			4	Screw	Skruv	5
0180	7	79 82 333			3	Screw	Skruv	5
0190	8	85 90 838			1	Switch	Strömställare	3
0200						light switch	ljusomkopplare	
0210	9	85 53 356			1	.Bracket	.Hållare	4
0220	10	85 00 613			1	.Bulb	.Glödlampa	2
0230	11	95 23 747		-1996	1	Switch	Strömställare	3
0240						rear fog light	dimbaklykta	
0250	11	47 33 960		1997-	1	Switch	Strömställare	3
0260						rear fog light	dimbaklykta	
0270	11	95 23 762		US, CA	1	Switch	Strömställare	3
0280						front fog light	dimstrålkastare	
0290	11	40 85 577			1	Switch	Strömställare	3
0300						front fog light	dimstrålkastare	
0310	12	95 17 806		1994	1	Rheostat	Reostat	3
0320						instrument lighting	instrumentbelysning	
0330	12	44 38 255		1995-	1	Rheostat	Reostat	3
0340						instrument lighting	instrumentbelysning	
0350	12A	44 66 967		1995-	1	.Bulb	.Glödlampa	4
0360	13	95 22 079		1994	1	Rheostat	Reostat	3
0370						cooling bo[illegible]	kylkropp	
0380	14	95 68 122			X	Button	Knapp	5
0390	15	95 23 788		-1997, AC	1	Switch	Strömställare	3
0400	15A	44 39 477		-1997, TCS	1	Switch	Strömställare	3
0410	15B	44 66 439			1	.Bulb	.Glödlampa	4
0420	16	95 12 690		-1997	1	Switch	Strömställare	3
0430						recirculation	recirkulation	
0440	17	44 39 014		-1995	2	Switch	Strömställare	3
0450						heating pad	värmedyna	
0460	17	47 33 275		1996-	2	Switch	Strömställare	3
0470						heating pad	värmedyna	
0475	17A	• 49 29 311		1996-	1	.Bulb	.Glödlampa	4
0480	17B	40 84 554		See page 3A-199, 2-I08	X	Switch button	Strömställarknapp	5
0490						kit	satt	
0500	18	40 85 502		1994, EW, SR	1	Switch	Strömställare	2
0510	18	40 85 510		1994, EW	1	Switch	Strömställare	3
0520	18	45 19 120		1995-, EW, SR	1	Switch	Strömställare	3
0530	18	45 19 146		1995-, EW	1	Switch	Strömställare	3
0540	19	40 69 373			1	.Bulb	.Glödlampa	4
0550	21	95 03 772		226), EW	2	Switch	Strömställare	3
0560	21	45 19 740		227,230), EW	2	Switch	Strömställare	3

11. With speed control system. Med fartkontrollsystem.
12. Without speed control system. Utan fartkontrollsystem.
159. With rear window wiper. Med bakrutetorkare.
226. Ch -R1003818.
227. Ch R1003819-.
230. Ch -R1015029.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D08

Switch
Strömställare

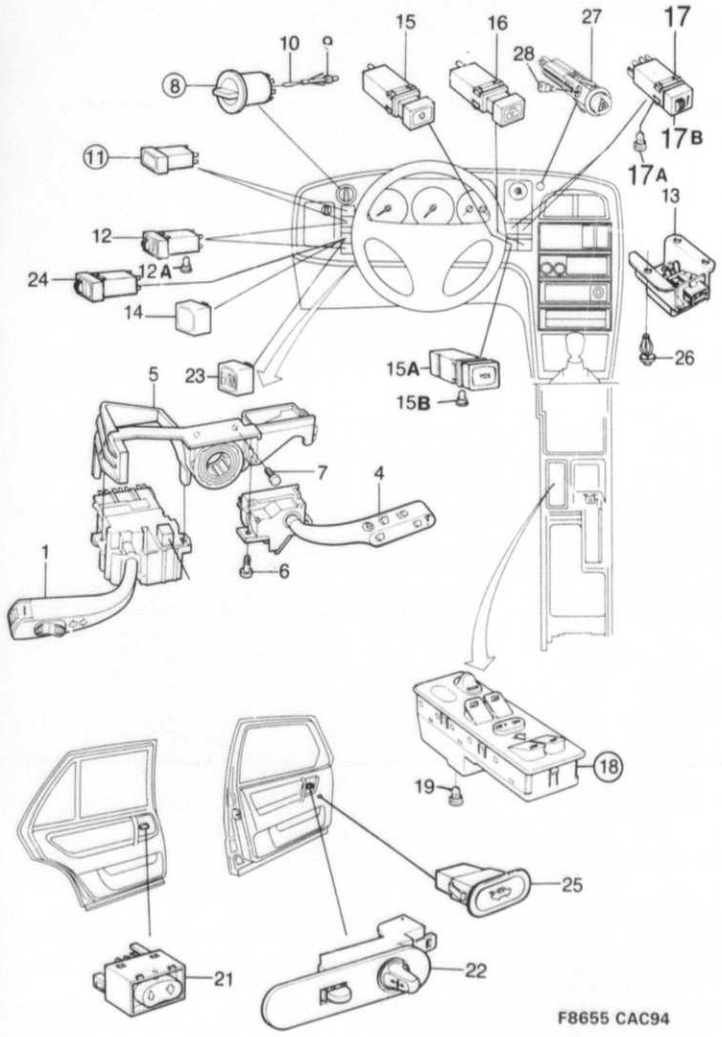

0950	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0570	21	45 19 138		231), EW	2	Switch	Strömställare	3
0580	22	95 05 488		EM	1	Switch	Strömställare	3
0590	23	95 23 804			1	Switch	Strömställare	3
0600						extra	extra	
0610	24	95 27 904		1994, 4D	1	Switch	Strömställare	3
0620						headlamp levelling	ljuslängdsreglering	
0630	24	40 83 879		1994, 5CS	1	Switch	Strömställare	3
0640						headlamp levelling	ljuslängdsreglering	
0650	24	40 83 879		1995-	1	Switch	Strömställare	3
0660						headlamp levelling	ljuslängdsreglering	
0670	25	40 61 883		-1996, 4D	1	Switch	Strömställare	
0680						luggage compartment lock	bagagerumslås	
0690	25	40 61 255		-1996, 4D, RHD	1	Switch	Strömställare	5
0700						luggage compartment lock	bagagerumslås	
0710	25	40 61 883		-1996, 5CS	1	Switch	Strömställare	
0720						luggage compartment lock	bagagerumslås	
0730	25	40 61 255		-1996, 5CS, RHD	1	Switch	Strömställare	5
0740						luggage compartment lock	bagagerumslås	
0750	25	47 33 440		1997-,	1	Switch	Strömställare	
0760						luggage compartment lock	bagagerumslås	
0770	25	47 33 457		1997- RHD	1	Switch	Strömställare	
0780						luggage compartment lock	bagagerumslås	
0790	26	94 73 869		1994, B204	3	Clip	Clips	5
0800	26	40 69 977		1994, B234	3	Clip	Clips	5
0810	27	41 09 526			1	Switch	Strömställare	4
0820						warning flasher	varningsblinklykta	
0830	28	41 14 898			1	.Bulb	.Glödlampa	4
0840				See page 3A-195, 2-I04		Headlamp levelling	Ljuslängdsreglering	


231. Ch R1015030-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

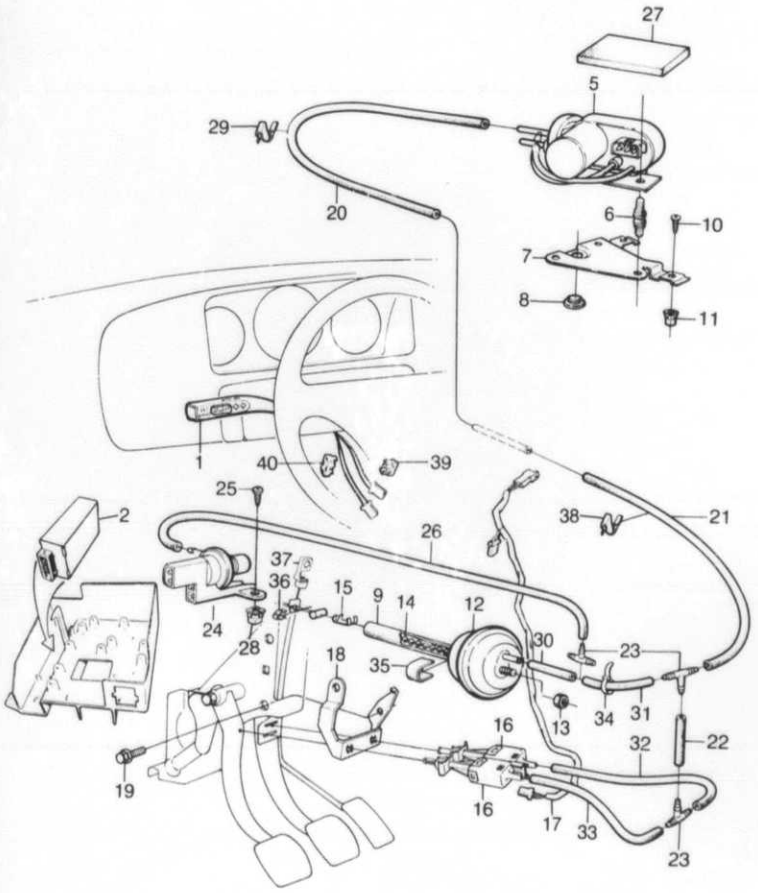

F6388 CAC94

Electric equipment, other

2-D10 Speed control system 1994

Övr. elektrisk utrustning

Farthållningssystem 1994

0975	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1			See page 3A-077, 2-D06		Switch	Omkopplare	
0020	2	41 08 650			1	Electronic unit	Elektronikenhet	5
0030	5	85 87 024			1	Vacuum pump	Vakuumpump	5
0040	6	95 55 194			3	,Bracket	,Upphängning	6
0050	7	95 17 798			1	Bracket	Konsol	6
0060	8	82 06 096			1	Plug	Plugg	5
0070	9	*91 24 223*		NLS	1	Hose	Slang	5
0080	10	79 22 891			2	Screw	Skruv	5
0090	11	79 75 261			2	Nut	Mutter	5
0100	12	95 12 302			1	Vacuum regulator	Vakuumregulator	5
0110	13	*91 66 406*		NLS – USE 8074288	1	Nut	Mutter	5
0120	14	40 61 917			1	Chain	Kedja	6
0130	15	44 33 827			1	Clamp	Klammer	6
0140	16	43 50 443		M	2	Contact	Kontakt	3
0150	16	43 50 443		A	1	Contact	Kontakt	3
0160	17	95 19 612		A, RHD	1	Cable harness	Ledningsnät	6
0170	17	95 19 604		TURBO, M, TCS, RHD	1	Cable harness	Ledningsnät	6
0180	18	95 29 637			1	Bracket	Konsol	6
0190	18	40 67 468		A	1	Bracket	Konsol	6
0200	19	*79 71 757*		NLS – USE 7528953	1	Screw	Skruv	5
0210	20	41 08 734		L=1000 MM	1	Hose	Slang	5
0220	21	95 66 423		12), L=310 MM	1	Hose	Slang	5
0230	21	41 08 726		L=310 MM	1	Hose	Slang	5
0240	21	41 08 726		12), RHD, L=310 MM	1	Hose	Slang	5
0250	21	41 08 718		RHD, L=210 MM	1	Hose	Slang	5
0260	22	*85 90 689*		L=210 MM NLS – USE 9566423	1	Hose	Slang	5
0270	23	85 09 002			3	Tube	Rör	2
0280	24	91 24 884			1	Vacuum switch	Vakuumkontakt	5
0290	25	79 22 826			2	Screw	Skruv	5
0300	26	*95 16 329*		LHD, L=340 MM NLS – USE 9564162	1	Hose	Slang	5
0310	26	*85 90 689*		RHD, L=210 MM NLS – USE 9566423	1	Hose	Slang	5
0320	27	96 56 901			1	Spacer	Mellanlägg	6
0330	28	79 75 261			2	Nut	Mutter	5
0340	29	71 21 239			1	Clamp	Klammer	5
0350	30	*85 87 354*		L=45 MM NLS – USE 9566381	1	Hose	Slang	5
0360	30	95 66 381		TURBO, L=45 MM	1	Hose	Slang	5
0370	31	*85 87 354*		L=45 MM NLS – USE 9566381	1	Hose	Slang	5
0380	31	*95 19 646*		RHD, L=650 MM NLS – USE 9566456	1	Hose	Slang	5
0390	31	95 66 381		RHD, TURBO M, L=45 MM	1	Hose	Slang	5
0400	31	95 66 464		RHD, I M, L=725 MM	1	Hose	Slang	5
0410	32	*85 87 347*		L=75 MM NLS – USE 9566399	1	Hose	Slang	5
0420	32	95 66 399		M=75 MM	1	Hose	Slang	5
0430	32	95 66 423		A, L=310 MM	1	Hose	Slang	5
0440	32	*95 19 638*		RHD, L=520 MM NLS – USE 9566449	1	Hose	Slang	5
0450	32	95 66 472		RHD, I A, L=800 MM	1	Hose	Slang	5
0460	32	95 66 449		RHD, M, L=520 MM	1	Hose	Slang	5
0470	33	*85 87 347*		L=75 MM NLS – USE 9566399	1	Hose	Slang	5
0480	33	95 66 407		I, L=120 MM	1	Hose	Slang	5
0490	33	95 66 407		RHD, TURBO A, L=120 MM	1	Hose	Slang	5
0500	33	95 66 399		M, L=75 MM	1	Hose	Slang	5
0510	33	95 66 423		A, L=310 MM	1	Hose	Slang	5
0520	34	73 98 944			1	Tensioning band	Spännband	5
0530	34	73 98 977		RHD	1	Tensioning band	Spännband	5

12. Without speed control system. Utan fartkontrollsystem.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D12

Speed control system 1994

Farthållningssystem 1994

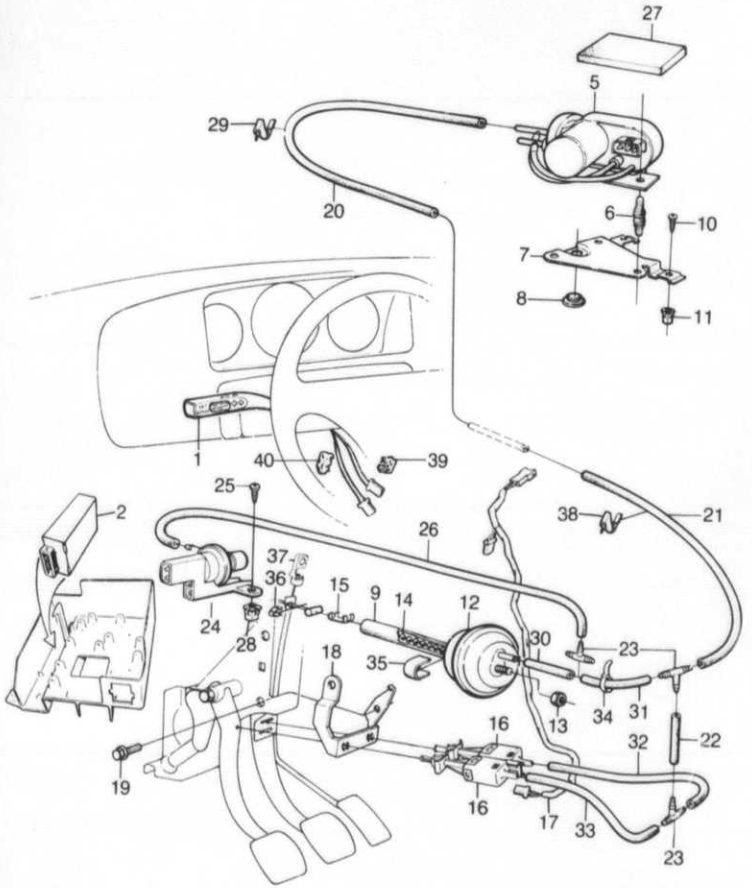

F6388 CAC94


0975	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0540	35	40 63 384			1	Chain coupling	Kedjelås	
0550	36	79 22 826			1	Screw	Skruv	5
0560	37	40 61 362			1	Protection	Skydd	6
0570	38	71 08 491			1	Clamp	Klammer	5
0580	39	*95 59 998*		A NLS – USE 9560012	1	Manifold	Förgrening	3
0590	40	*95 60 004*		A NLS – USE 9560012	1	Manifold	Förgrening	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

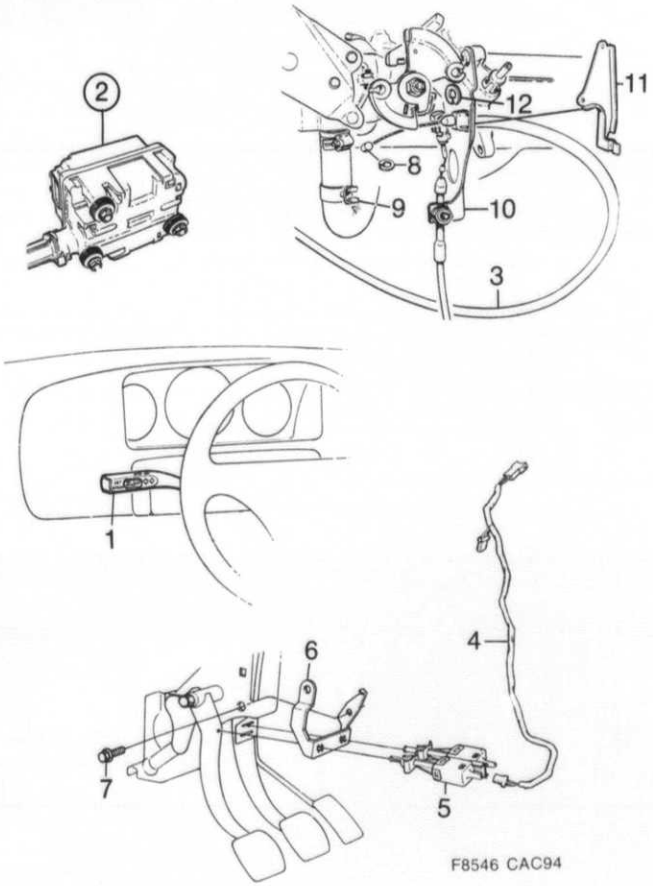

F8546 CAC94

Electric equipment, other

2-D14 *Speed control system* *1995-*

Övr. elektrisk utrustning

Farthållningssystem *1995-*

0980	Pcs	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 3A-077, 2-D06		Switch	Omkopplare	
0020	2	44 33 108		285), 4-CYL.	1	Electronic unit	Elektronikenhet	5
0030	2	46 63 514		286), 4-CYL.	1	Electronic unit	Elektronikenhet	
0040	2	44 33 116		285), 6-CYL.	1	Electronic unit	Elektronikenhet	5
0050	2	46 63 522		286)-1997, 6-CYL.	1	Electronic unit	Elektronikenhet	
0060	3	45 83 043		285), 4-CYL.	1	.Cable	.Wire	6
0070	3	47 11 420		286), 4-CYL.	1	.Cable	.Wire	
0080	3	45 83 050		285), 6-CYL.	1	.Cable	.Wire	6
0090	3	47 11 412		286)-1997, 6-CYL.	1	.Cable	.Wire	
0100	4	45 37 775		RHD, M	1	Cable harness	Ledningsnät	5
0110	4	45 37 783		RHD, A	1	Cable harness	Ledningsnät	5
0120	5	43 50 443		M	2	Contact	Kontakt	3
0130	5	43 50 443		A	1	Contact	Kontakt	3
0140	6	95 29 637			1	Bracket	Konsol	6
0150	7	75 28 953			1	Screw	Skruv	5
0160	8	81 23 473		6-CYL.	1	E-circlip	Spårryttare	5
0170	9	73 98 415			1	Clamp	Klämma	5
0180	10	44 32 589		TURBO	1	Stay	Stag	5
0190	11	91 81 918		286), 4-CYL. I	1	Bracket	Fäste	6
0200	11	91 81 926		286), 4-CYL. TURBO	1	Bracket	Fäste	6
0210	12	42 27 823		286)	1	Lock ring	Säkringsring	5

285. CH -V1004227.
286. CH V1004228-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D16

Actuator — Manöverdon

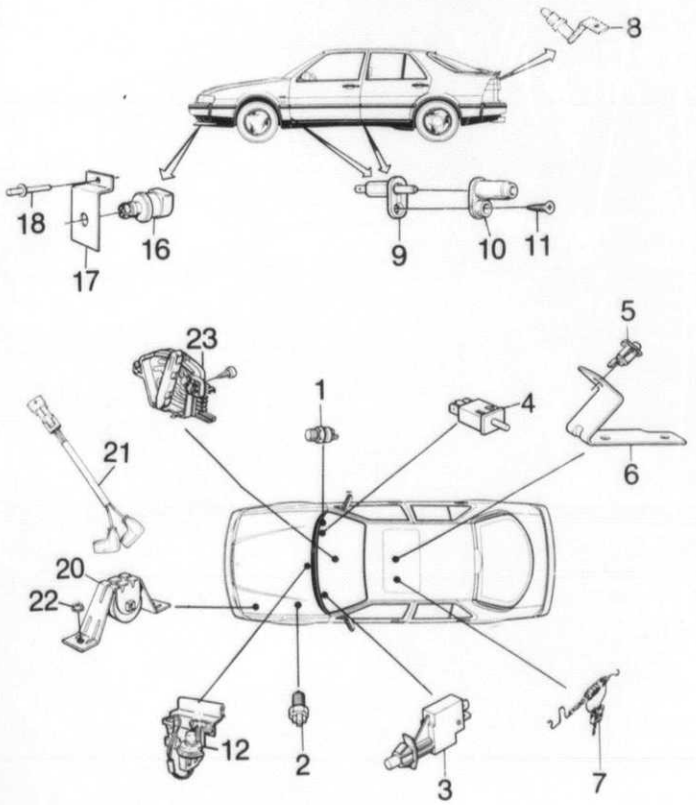

CAC94 F7548

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 2-125, 1-H06		Contact	Kontakt	
0020						cooling fan	kylfläkt	
0030	2			See page 4-013, 3-G14		Contact	Kontakt	
0040						reverse lamp	backlampa	
0050	3	95 05 462			1	Brake light switch	Bromsljuskontakt	3
0060	4	95 08 367			1	Contact	Kontakt	3
0070						glove compartment	handskfack	
0080	5	85 22 492			1	Contact	Kontakt	3
0090						handbrake	handbroms	
0100	6	89 54 596			1	Bracket	Konsol	4
0110	7	47 16 908			2	Contact	Kontakt	5
0120						front seat	framstol	
0130	7	47 16 916		276)	2	Contact	Kontakt	5
0140						front seat	framstol	
0150	8			5CS		Contact	Kontakt	
0160				See page 8A-053, 4-E06		tail gate	bagagerumsdörr	
0170	8			-1997, 4D		Contact	Kontakt	
0180				See page 8A-049, 4-E02		boot lid	bagagerumslucka	
0190	9	40 86 492			2	Contact	Kontakt	3
0200						front door	framdörr	
0210	9	95 14 886			2	Contact	Kontakt	3
0220						rear door	bakdörr	
0230	10	95 14 878			2	Protection	Skyddshölje	3
0240						rear door	bakdörr	
0250	11	79 22 354		-1996	4	Screw	Skruv	5
0260	11	79 85 955		1997-	4	Screw	Skruv	
0270	12	46 92 802		297), B204 TURBO, A	1	Pressure monitor	Tryckvakt	
0280	12	46 92 802		298), B204 TURBO, A, RHD	1	Pressure monitor	Tryckvakt	
0290	16	91 23 456			1	Sensor	Givare	4
0300						outer temp	yttertemp	
0310	17	95 69 781			1	Bracket	Hållare	6
0320	18	82 35 178		5CS AERO	1	Pop rivet	Popnit	5
0330	20	43 20 545		1994, 5CS	1	Resistor	Resistor	5
0340	20	43 20 545		1995-,249)	1	Resistor	Resistor	5
0350	21	41 79 255		249)	1	,Cable harness	,Ledningsnät	6
0360	22	40 87 128		1994, 5CS	2	Plastic nut	Plastmutter	5
0370	22	40 87 128		1995-,249)	2	Plastic nut	Plastmutter	5
0380	23					Switch	Strömställare	
0390				See page 4-069, 3-L2		starter inhibitor	startspärr	
0400		85 48 075		97), A	X	Starter inhibitor kit	Startspärrsats	4
0410				See page 3A-199, 2-I08				

97. Ch -J1014463-, J2007677-, J8000885-.
199. Ch -N1034646.
249. Ch -S1010397.
276. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
297. Ch -V10113467.
298. Ch V10113468-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D18

Air-bag

Airbag

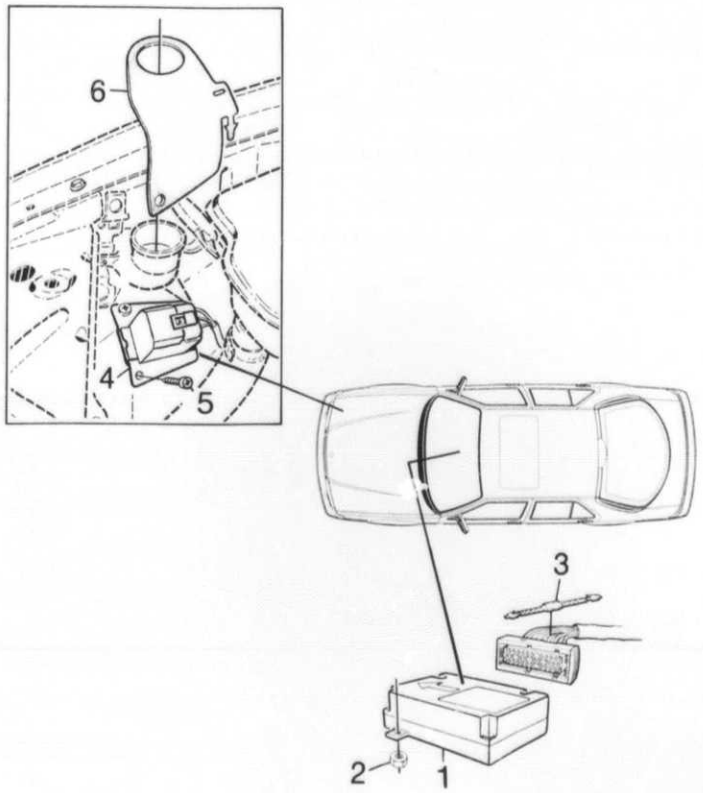

F6391 CAC94

1005	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 33 298		1994	1	Electronic unit	Elektronikenhet	5
0020	1	*46 64 595*		1995-,252) NLS - USE 4619672	1	Electronic unit	Elektronikenhet	5
0030	1	46 19 672		253)	1	Electronic unit	Elektronikenhet	5
0040	2	79 77 929		1994	2	Nut	Mutter	5
0050	2	79 65 775		1995-	3	Nut	Mutter	5
0060	3	43 54 031			1	Resistor	Motstånd	6
0070	4	40 79 935		1994	2	Sensor	Sensor	5
0080	5	79 78 117		1994	4	Screw	Skruv	5
0090	6	43 14 001		1994	1	Cap	Skydd	5

199. Ch -N1034646.
252. Ch -S1015326.
253. Ch S1015327-.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D20 Actuator ACC / Manöverdon ACC

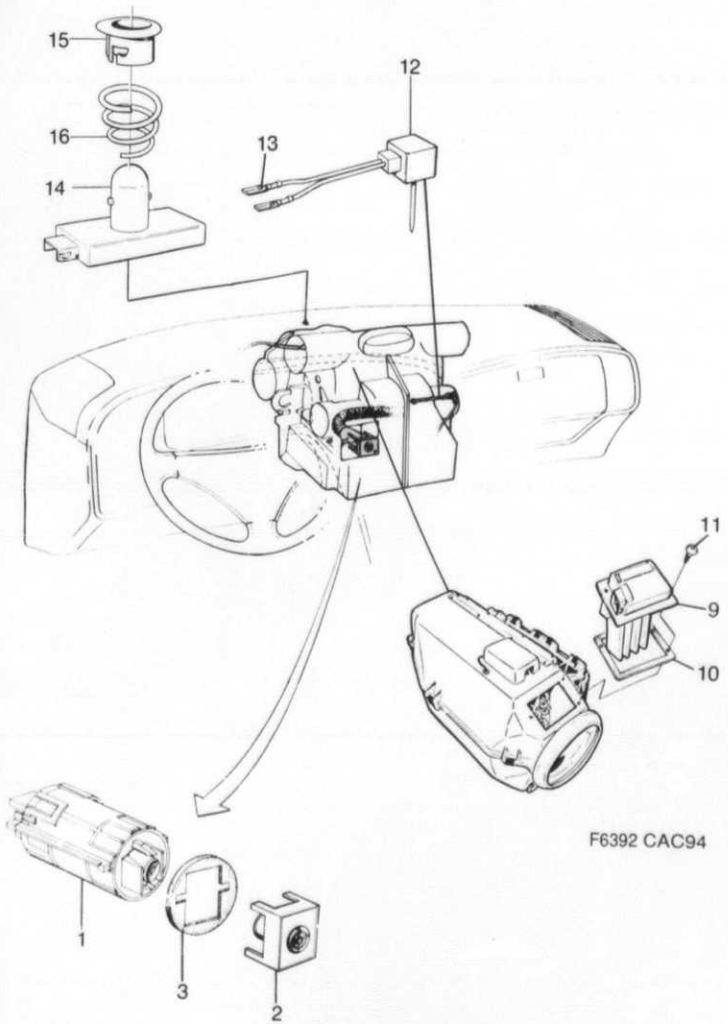


1010	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	96 30 740			1	Sensor	Givare	4
0020						indoor temperature	innerlufttemperatur	
0030	2	43 18 770			1	.Front cover	.Frontkåpa	5
0040	3	43 18 762			1	.Gasket	.Packning	6
0050	9	*40 71 775*		1994 NLS - USE 4632477	1	Control unit	Regleraggregat	5
0055	9	46 32 477		1995-	1	Control unit	Regleraggregat	5
0060	10	40 72 807			1	.Seal	.Tätning	6
0070	11	79 22 214			3	Screw	Skruv	5
0080	12	43 18 788			1	Sensor	Givare	4
0090						mixed air temperatur	blandlufttemperatur	
0100	13	41 15 085			2	.Cable terminal	.Kabelsko	5
0110	14	43 83 030		1994	1	Solar sensor	Solsensor	4
0120						grey	grå	
0125	14	45 41 140		1995-	1	Solar sensor	Solsensor	4
0127						grey	grå	
0130	15	40 70 595			1	.Bracket	.Hållare	6
0140						grey	grå	
0150	16	96 30 252			1	.Spring	.Fjäder	5
0160				See page 8C-005, 5-J06		Control panel	Reglagepanel	
0170				See page 8C-009, 5-J10		Motor unit	Motorenhet	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

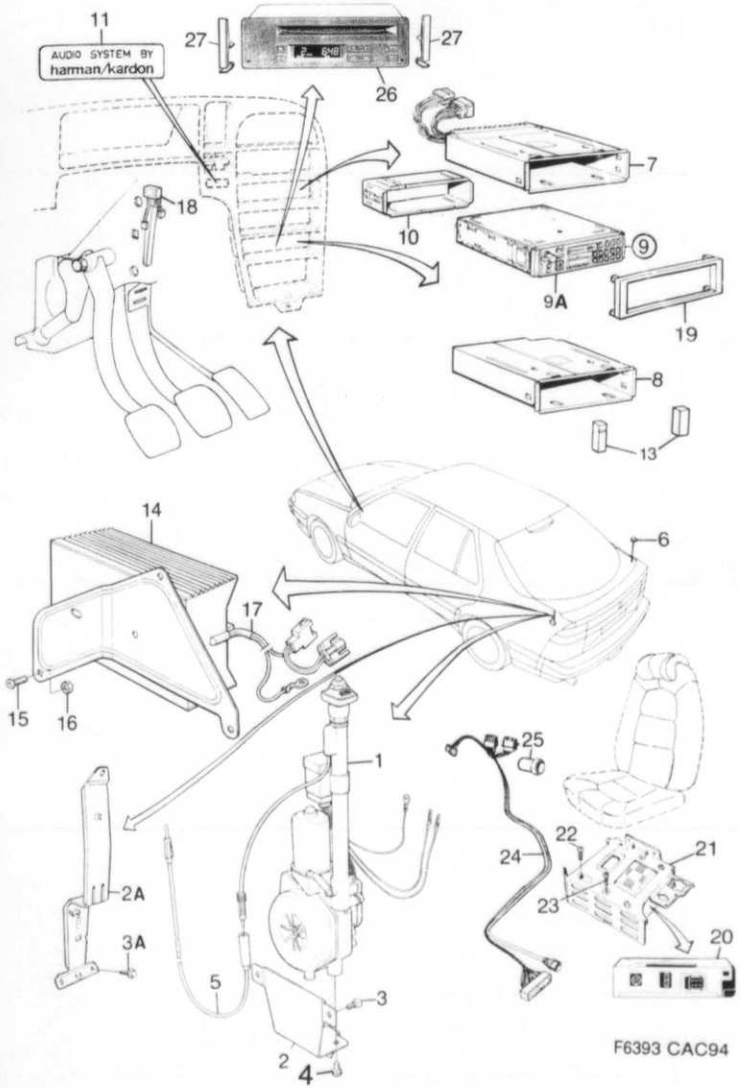

F6393 CAC94

2-D22

Radio, electrical aerial

Radio, motorantenn

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 86 732			1	Antenna	Antenn	5
0020	1	41 08 932		5CS	1	Antenna	Antenn	5
0030	2	95 18 556		-1997, 4D	1	Bracket	Fäste	5
0040	2A	40 86 658		5CS	1	Bracket	Fäste	5
0050	3	79 22 891			2	Screw	Skruv	5
0060	3A	79 72 607		5CS	3	Screw	Skruv	5
0070	4	80 19 697			2	Screw	Skruv	5
0080	5	95 64 477		295)	1	Cable harness	Ledningsnät	5
0090	5	42 02 982		296)	1	Cable harness	Ledningsnät	5
0100	6	95 50 476			1	Plug	Plugg	5
0110	6	40 85 544		5CS	1	Plug	Plugg	5
0120	7	40 83 036		1994, US, CA	1	Cage	Korg	5
0130						with amplifier	med förstärkare	
0140	8	40 83 044		1994, US, CA	1	Cage	Korg	5
0150						CD-player	CD-spelare	
0160	8	45 36 660		1995-	1	Mounting frame	Monteringsram	5
0170						CD-player	CD-spelare	
0180	9	*44 27 852*		7,17), 1994 NLS – USE 8548588	1	Radio	Radio	5
0190	9	45 18 924		17), 1995-	1	Radio	Radio	5
0200	9	45 18 932		17,241), 1995-, US,CA,LA	1	Radio	Radio	5
0210	9A	46 17 676		1995-	1	,Button kit	,Knappsats	
0220	9A	46 17 684		1995-, US, CA	1	,Button kit	,Knappsats	
0230	10	40 63 335		17), 1994	1	Mounting frame	Monteringsram	5
0240						radio	radio	
0250	10	45 36 660		17), 1995-	1	Mounting frame	Monteringsram	5
0260						radio	radio	
0270	10	45 36 660		17,241), 1995-, US, CA	1	Mounting frame	Monteringsram	5
0280						radio	radio	
0290	11	45 36 678		241), 1995-, US, CA	1	Sign	Skylt	5
0300	13	95 25 494			2	Cover	Täcklock	5
0310	14	95 29 256		7,17), -1997, 4D	1	Amplifier	Förstärkare	5
0320						bass	bas	
0330	15	79 22 834		17), -1997, 4D	3	Screw	Skruv	5
0340	16	79 75 261		17), -1997, 4D	3	Nut	Mutter	5
0350	17	95 66 563		17), -1997, 4D	1	Cable harness	Ledningsnät	5
0360						loudspeaker	högtalare	
0370	18	*95 65 136*		NLS	1	Interference suppression	Avstörning	5
0380						brake light	bromsljus	
0390	19	40 63 343		17), 1994	1	Decor frame	Dekorram	5
0400	20	40 84 018		7), 1994	1	Amplifier	Förstärkare	5
0410	20	45 18 916		1995-	1	Amplifier	Förstärkare	5
0420	20	40 83 051		1994, US, CA	1	Amplifier	Förstärkare	5
0430	20	45 18 908		17,241), 1995-, US, CA	1	Amplifier	Förstärkare	5
0440	21	45 37 262			1	Bracket	Konsol	5
0450	22	79 22 354			4	Screw	Skruv	5
0460	23	79 78 356			2	Screw	Skruv	5
0470	24	40 84 026		1994	1	Cable	Ledning	5
0480						radio	radio	
0490	24	40 84 034		1994	1	Cable harness	Ledningsnät	5
0500						amplifier	förstärkare	
0510	24	40 83 085		1994, US, CA	1	Cable	Ledning	5
0520						amplifier	förstärkare	
0530	24	45 19 211		1995-	1	Cable harness	Ledningsnät	5
0540						amplifier	förstärkare	
0550	25	40 85 197		1994, US, CA	1	Contact	Kontakt	
0560								
0570	26	86 71 455		7), 1994	1	CD-player	CD-spelare	5

7. Also available as exchange unit. Finns även som utbytesenhet.
17. Audio system. Audio system.
241. harman/kardon. harman/kardon.
295. Ch –V1008125.
296. Ch V1008126–.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-D24

Radio, electrical aerial

Radio, motorantenn

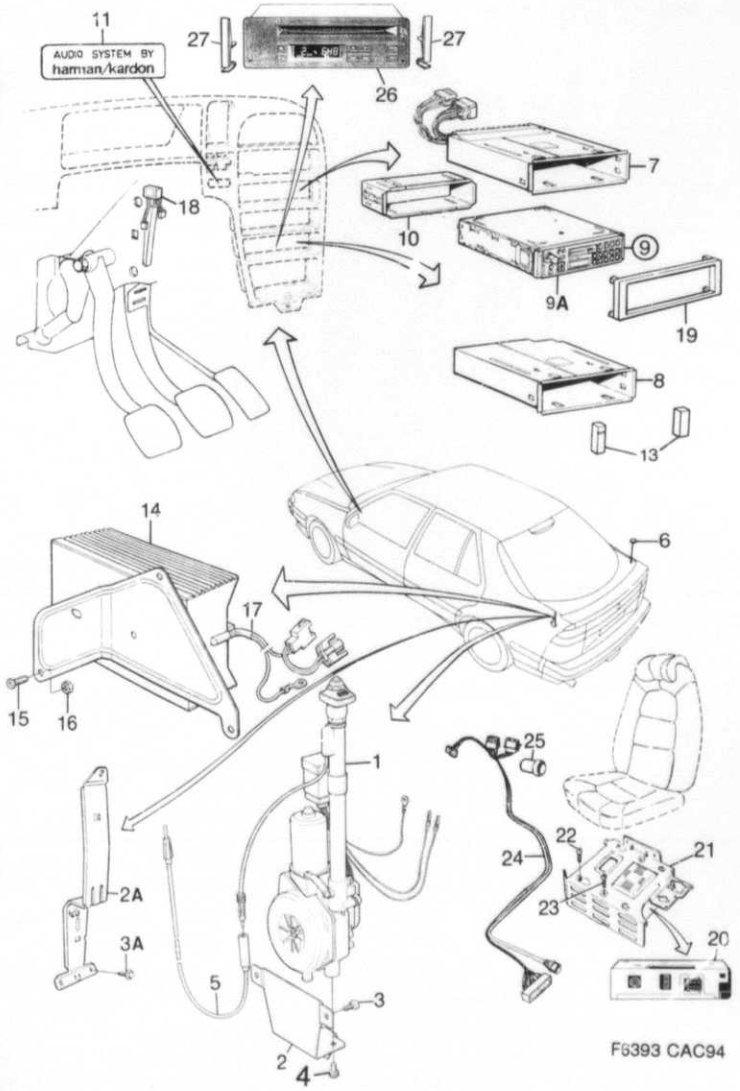

1015	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	26	45 18 940		1995-	1	CD player	CD-spelare	5
0590	27	86 71 562		1994, LH	1	Cover	Täcklock	5
0600	27	86 71 497		1994, RH	1	Cover	Täcklock	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E02

Loudspeaker — Högtalare

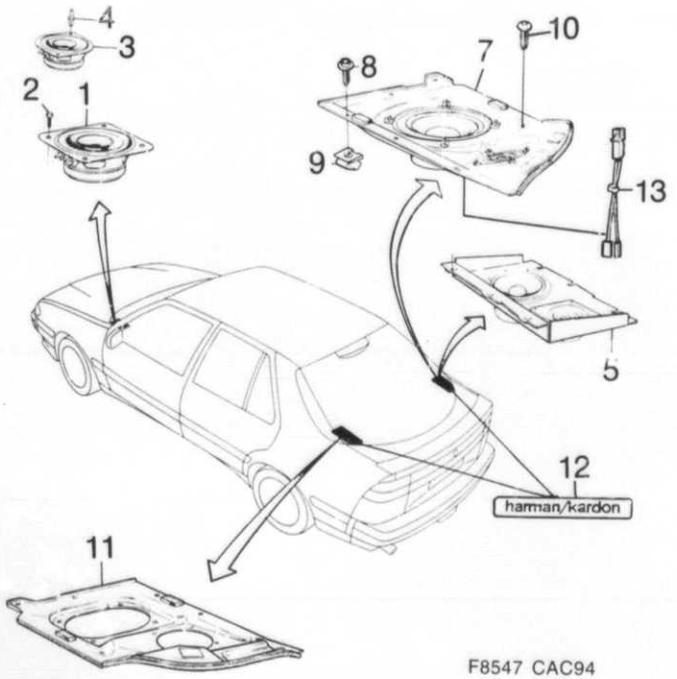

F8547 CAC94

1017	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	44 39 121			2	Loudspeaker bass	Högtalare bas	4
0030	1	40 85 239		289), US, CA	2	Loudspeaker bass	Högtalare bas	4
0050	1	44 39 121		290), US, CA	2	Loudspeaker bass	Högtalare bas	4
0070	1	45 19 229		17,241), 1995-, US, CA	2	Loudspeaker bass	Högtalare bas	4
0090	2	79 72 128			8	Screw	Skruv	5
0100	3	44 39 113			2	Loudspeaker treble	Högtalare diskant	4
0120	3	40 85 148		289), US, CA	2	Loudspeaker treble	Högtalare diskant	4
0140	3	44 39 113		290), US, CA	2	Loudspeaker treble	Högtalare diskant	4
0160	3	45 19 237		17,241), 1995-, US, CA	2	Loudspeaker treble	Högtalare diskant	4
0180	4	73 99 256			4	Rivet	Nit	3
0190	5	40 84 695		LH	1	Loudspeaker	Högtalare	4
0200	5	40 84 687		RH	1	Loudspeaker	Högtalare	4
0210	6	79 77 671			12	Nut	Mutter	5
0220	7	*95 28 167*		1994, 4D, LH NLS – USE 4619219	1	Loudspeaker	Högtalare	4
0230	7	*95 28 159*		1994, 4D, RH NLS – USE 4619227	1	Loudspeaker	Högtalare	4
0240	7	46 19 219		1995-1997, 4D, LH	1	Loudspeaker	Högtalare	4
0250	7	46 19 227		1995-1997, 4D, RH	1	Loudspeaker	Högtalare	4
0270	7	40 83 275		1994, 4D, LH, US, CA	1	Loudspeaker	Högtalare	4
0280	7	40 83 283		1994, 4D, RH, US, CA	1	Loudspeaker	Högtalare	4
0290	7	45 18 957		1995-1997, 4D, LH, US,CA	1	Loudspeaker	Högtalare	4
0300	7	45 18 965		1995-1997, 4D, RH, US,CA	1	Loudspeaker	Högtalare	4
0320	7	45 18 882		17,241), 1995-1997, 4D, LH, US, CA	1	Loudspeaker	Högtalare	4
0340	7	45 18 890		17,241), 1995-1997, 4D, RH, US, CA	1	Loudspeaker	Högtalare	4
0370	7	41 09 039		291), 5CS, LH	1	Loudspeaker	Högtalare	4
0380	7	47 14 655		292), 5CS, LH	1	Loudspeaker	Högtalare	4
0390	7	41 09 047		291), 5CS, RH	1	Loudspeaker	Högtalare	4
0400	7	47 14 648		292), 5CS, RH	1	Loudspeaker	Högtalare	4
0420	7	40 85 213		289), 5CS, LH, US, CA	1	Loudspeaker	Högtalare	4
0430	7	41 09 039		290,291), 5CS, LH, US,CA	1	Loudspeaker	Högtalare	4
0440	7	47 14 655		292), 5CS, LH, US, CA	1	Loudspeaker	Högtalare	4
0450	7	40 85 221		289), 5CS, RH, US, CA	1	Loudspeaker	Högtalare	4
0460	7	41 09 047		290,291), 5CS, RH, US,CA	1	Loudspeaker	Högtalare	4
0470	7	47 14 648		292), 5CS, RH, US, CA	1	Loudspeaker	Högtalare	4
0490	7	45 18 866		17,241), 1995-, 5CS, LH, US, CA	1	Loudspeaker	Högtalare	4
0510	7	45 18 874		17,241), 1995-, 5CS, RH, US, CA	1	Loudspeaker	Högtalare	4
0540	8	79 72 938		-1997, 4D	8	Screw	Skruv	5
0550	9	96 92 849		-1997, 4D	8	Nut	Mutter	5

17. Audio system. Audio system.
241. harman/kardon. harman/kardon.
289. Ch -T1016218.
290. Ch T1016219-.
291. Ch -V1005512.
292. Ch V1005513-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E04

Loudspeaker
Högtalare

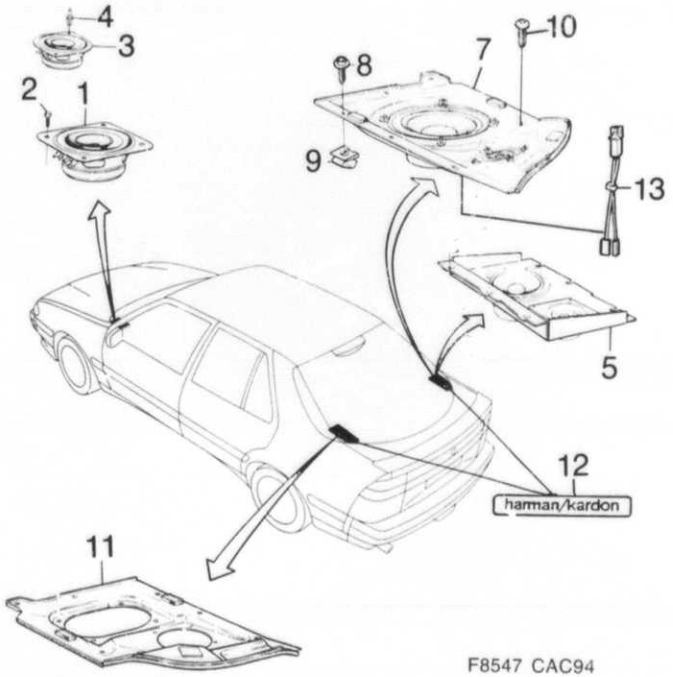

F8547 CAC94

1017	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	9	79 77 929		5CS	12	Nut	Mutter	5
0570	10	79 22 420		-1997, 4D	2	Screw	Skruv	5
0580	11	95 71 621		25), -1997, 4D, LH	1	Bracket	Konsol	5
0590	11	95 71 159		25), -1997, 4D, RH	1	Bracket	Konsol	5
0600	12	46 17 270		17,241), 1995-, US, CA	2	Sign	Skylt	5
0610	13	47 39 454		290), US, CA	2	Cable harness	Ledningsnät	6

17. Audio system. Audio system.
25. For cars without loudspeaker. För bilar utan högtalare.
241. harman/kardon. harman/kardon.
290. Ch T1016219-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E06

Anti theft system
Stöldlarm

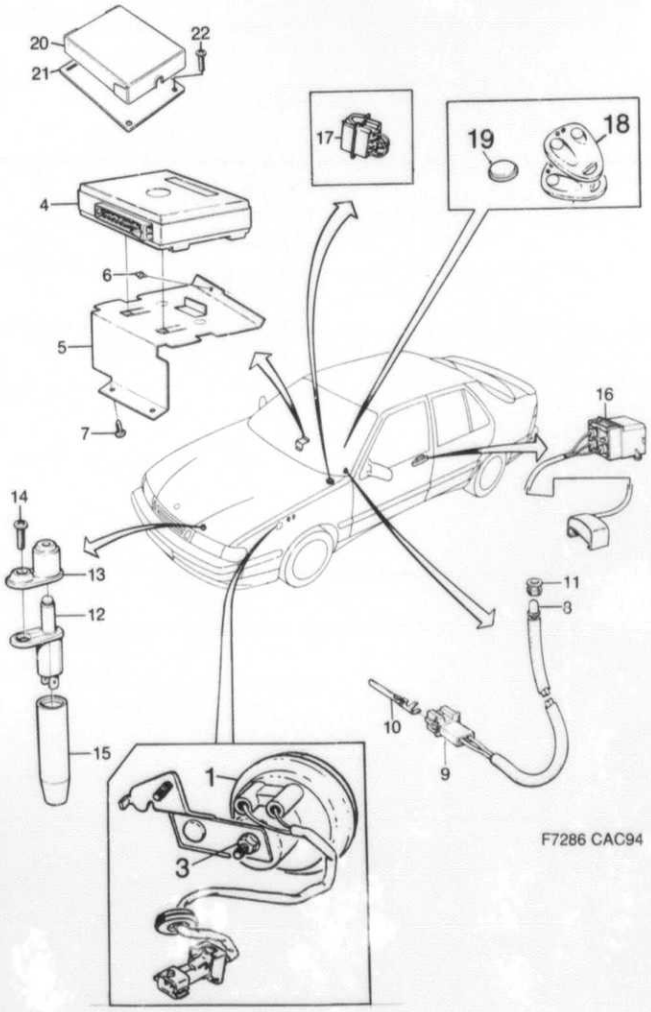

1025	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 65 839		1994	1	Horn	Signalhorn	4
0020	1	44 93 276		1995-	1	Horn	Signalhorn	4
0030	3	79 67 953		1994	1	Nut	Mutter	5
0040	3	79 77 952		1995-	1	Hexagon nut	Sexkantsmutter	5
0050	4	42 51 831		1994	1	Electronic unit	Elektronikenhet	5
0060	4	45 50 133		238), 1995, SE, EU, ME, AU, LA, PA	1	Electronic unit	Elektronikenhet	5
0070								
0080	4	45 50 133		238), 1996-, ME, AU, LA, PA	1	Electronic unit	Elektronikenhet	5
0090								
0100	4	45 88 869		238,259), 1996-, EU	1	Electronic unit	Elektronikenhet	5
0110	4	45 50 166		238), 1995, RHD, SE, EU, ME, AU, LA, PA, GB	1	Electronic unit	Elektronikenhet	5
0120								
0130	4	45 50 166		238), 1996-, RHD, ME, AU, LA, PA, GB	1	Electronic unit	Elektronikenhet	5
0140								
0150	4	46 19 441		238,259), 1996-, RHD, SE, GB	1	Electronic unit	Elektronikenhet	5
0160								
0170								
0180	4	45 55 298		238,239), 1995-, PA	1	Electronic unit	Elektronikenhet	5
0190	4	45 50 125		238,239), 1995-, RHD, PA	1	Electronic unit	Elektronikenhet	5
0200								
0210	4	45 50 117		238), 1995-, US, CA	1	Electronic unit	Elektronikenhet	5
0220								
0230	5	95 65 995			1	Bracket	Konsol	
0240	6	79 61 642			1	Rivet	Nit	5
0250	7	79 22 818			2	Screw	Skruv	5
0260	8	40 90 981			1	Diode	Diod	
0270	9	95 18 713			1	.Contact housing 2-pole, male	.Kontakthus 2-polig, stift	4
0280								
0290	10	95 52 100		AREA 0,75-1,5 MM2	2	.Cable terminal	.Kabelsko	5
0300	11	95 93 161			1	Bracket	Hållare	5
0310	12	95 14 860			1	Contact	Kontakt	3
0320	13	95 12 229			1	Protection	Skyddshölje	3
0330	14	79 22 974		281)	1	Screw	Skruv	5
0340	14	79 22 891		282)	1	Screw	Skruv	5
0350	15	95 69 997			1	Protection	Skydd	4
0360	16			See page 8A-055, 4-E08	X	Switch	Brytare	
0370	17	40 66 932		-1994, M	1	Cable harness	Ledningsnät	5
0380	17	45 86 822		1995-,257) M	1	Cable harness	Ledningsnät	5
0390	17	46 65 055		258), M	1	Cable harness	Ledningsnät	
0400	17	40 66 940		-1994, A	1	Cable harness	Ledningsnät	5
0410								
0420	18	45 50 091		238), 1995-, SE, EU, ME, AU, LA, GB, PA	1	Transmitter	Sändare	
0430								
0440	18	45 50 083		238,239), 1995-, PA	1	Transmitter	Sändare	
0450	18	45 50 075		238), 1995-, US, CA	1	Transmitter	Sändare	
0460	19	45 55 462			2	.Battery	.Batteri	
0470								
0480	20	46 18 716		1995, EU, GB	1	Protection	Skydd	
0490	21	46 18 724		1995, EU, GB	1	Protection	Skydd	
0500	22	73 99 520		1995, EU, GB	2	Screw	Skruv	5

238. Programmed using an ISAT Scan Tool. Programmeras med ISAT.
239. With catalytic converter shield. Med katalysatorskydd.
257. Ch -S1010691.
258. Ch S1010692-.
259. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
281. CH -V1003879.
282. CH V1003880-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E08

Speed warning system
Fartvarningssystem

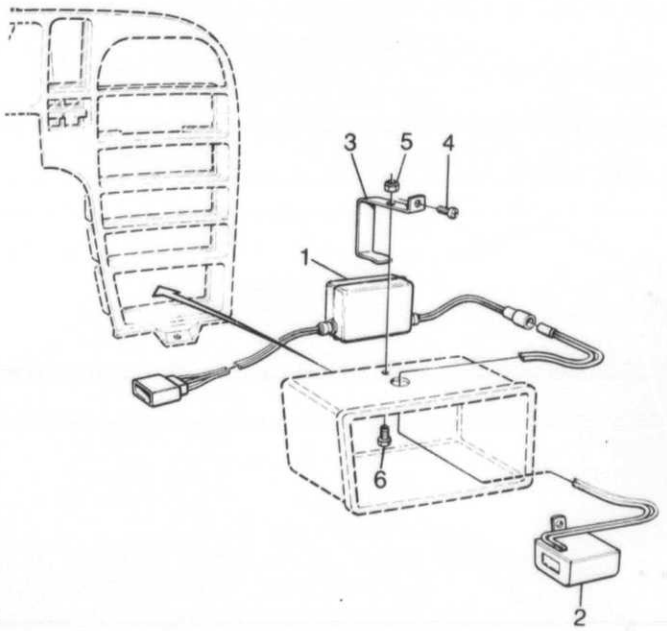

F6396 CAC94

1030	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 19 026			1	Electronic unit	Elektronikenhet	5
0020	2	95 19 034			1	Chime	Pingla	5
0030	3	95 19 372			1	Bracket	Hållare	5
0040	4	79 22 263			1	Screw	Skruv	5
0050	5	73 98 423			1	Nut	Mutter	5
0060	6	92 59 524			1	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E10 Electrical system ABS, TCS, ETS — Elektriskt system ABS, TCS, ETS

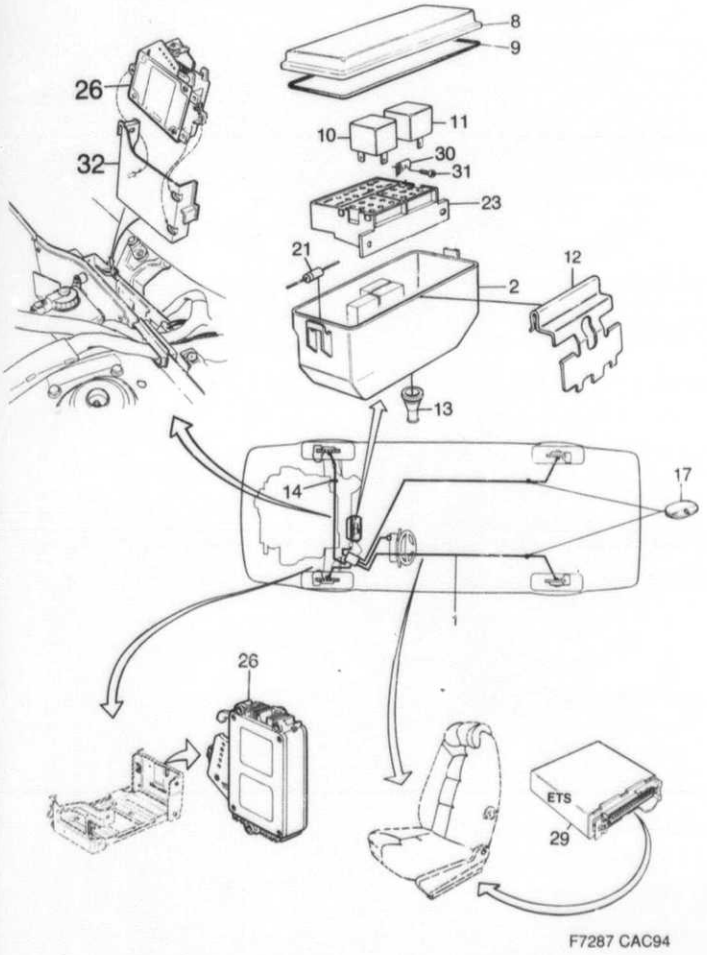

F7287 CAC94

1035	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 52 357		1994, ABS	1	Cable harness	Ledningsnät	6
0020	1	41 75 451		1994, TCS	1	Cable harness	Ledningsnät	6
0030	1			1995-	1	Cable harness	Ledningsnät	
0040				See page 3A-117, 2-E22				
0050	2	41 11 118				,Box	,Box	4
0060	8	95 19 919			1	Cover	Lock	
0070	9	95 19 927			1	,Seal	,Tätning	5
0080	10	85 33 176			1	Relay	Relä	3
0090						main relay	huvudrelä	
0100	11	95 22 822			1	Relay	Relä	5
0110						pump	pump	
0120				See page 3A-171, 2-H04		Relay	Relä	
0130						main ralay, ETS	huvudrelä, ETS	
0140	12			See page 5-011, 3-K12		Bracket	Hållare	
0150	12	43 60 780		1994, SAI	1	Bracket	Konsol	4
0160	13	95 19 745			1	Protection	Skydd	4
0170	14	92 28 149		-1995	2	Clip	Clips	5
0180	17	92 79 878			2	Cover	Lock	4
0190	21	44 24 172			2	Diode	Diod	5
0200	23	91 25 543			1	Contact housing	Kontakthus	4
0210	26	41 99 626		7), -1995, ABS TCS M	1	Electronic unit	Elektronikenhet	4
0220	26	41 98 602		7), ABS	1	Electronic unit	Elektronikenhet	8
0230	26	41 97 927		7), B308, ABS	1	Electronic unit	Elektronikenhet	4
0240								
0250	27	79 82 176			2	Screw	Skruv	5
0260	29	43 92 601		7), 1994, ETS	1	Electronic unit	Elektronikenhet	4
0270	29	43 02 378		7), 1995, ETS	1	Electronic unit	Elektronikenhet	4
0280	29	42 39 190		7), B308, TCS	1	Throttle control module	Styrdon	4
0290								
0300	30	79 68 001			2	Clip nut	Clipsmutter	5
0310	31	79 70 601			2	Screw	Skruv	5
0320	32	44 24 917		1995-	1	Bracket	Konsol	5

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E12

Main- and engine comp. 1994

Huvud- och motorrum 1994

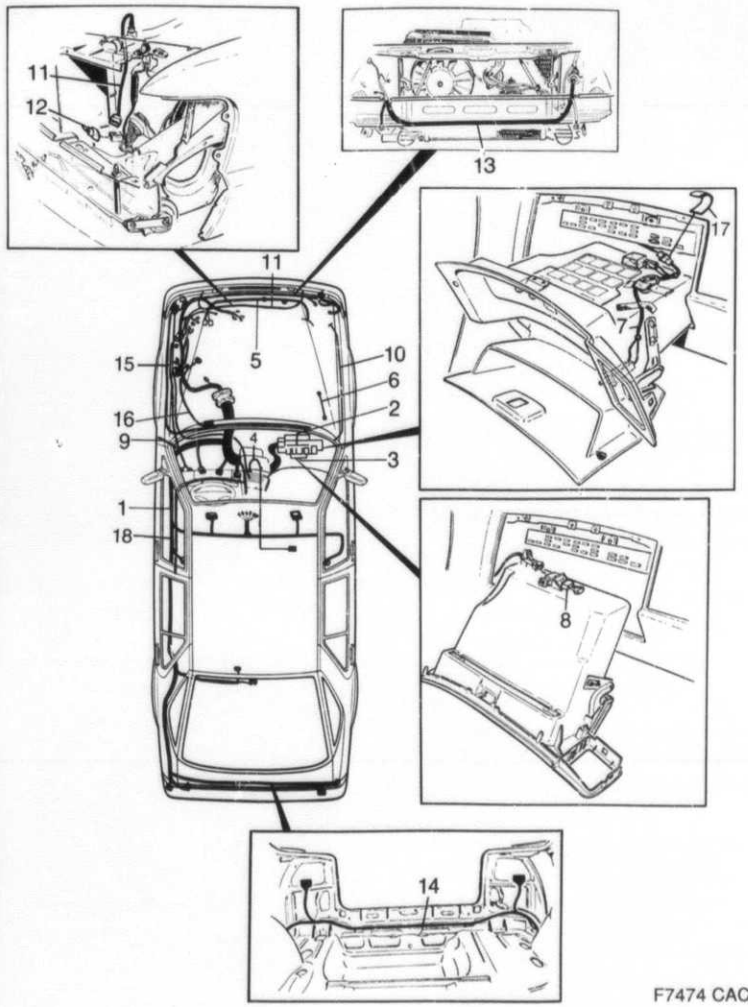

F7474 CAC94

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 30 542		SE, EU, PA, LA, ME	1	Cable harness	Ledningsnät	5
0020	1	44 30 609		26), SE, EU, PA, LA	1	Cable harness	Ledningsnät	5
0030								
0040	1	44 30 625		26), TCS, SE,EU,PA,LA,ME	1	Cable harness	Ledningsnät	5
0050								
0060	1	44 30 393		RHD,	1	Cable harness	Ledningsnät	5
0070	1	44 30 401		26), RHD	1	Cable harness	Ledningsnät	5
0080								
0090	1	44 30 757		26), RHD, TCS	1	Cable harness	Ledningsnät	5
0100								
0110	1	44 30 500		26), US, CA	1	Cable harness	Ledningsnät	5
0120								
0130	1	44 31 086		26), TCS, US, CA	1	Cable harness	Ledningsnät	5
0140								
0150	2			See page 3A-167, 2-G24		,Relay retainer	,Relähållare	
0160	3			See page 3A-167, 2-G24		,Fuse holder	,Säkringshållare	
0170	4			See page 3A-093, 2-D22		Cable harness	Ledningsnät	
0180						radio	radio	
0190	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0200						thermo switch	termobrytare	
0210	6	95 65 144			1	Ground cable	Jordkabel	6
0220						radio interferance suppr	radioavstörning	
0230	7	44 32 662		LHD	1	Cable harness	Ledningsnät	6
0240						glove compartment	handskfack	
0250	8	44 30 153		AIR-BAG 1	1	Resistor	Motstånd	6
0260	9	40 66 981			2	Cable harness	Ledningsnät	5
0270						direction indicator	blinklykta	
0280	10	46 63 035		RH	1	Cable harness	Ledningsnät	6
0290						air-bag	airbag	
0300								
0310	11	41 79 958		225),5CS,TURBO A, AC,ACC	1	Cable harness	Ledningsnät	6
0320								
0330	12	85 98 526		4D, AC, ACC	1	Cable harness	Ledningsnät	4
0340				5CS, M, AC, ACC				
0350				5CS, B204S, A, AC, ACC				
0360				5CS, B204L, A, AC, ACC				
0370				5CS, I, A, AC, ACC				
0380				5CS, TURBO, AC, ACC				
0390								
0400	13	44 33 082		2), 4D	1	Cable harness	Ledningsnät	5
0410	13	44 33 058		2), 5CS	1	Cable harness	Ledningsnät	5
0420								
0430	13	44 33 066		2), 4D, US, CA	1	Cable harness	Ledningsnät	5
0440	13	44 33 033		2), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0450								
0460	14	43 52 456		3,157), 4D, SE, EU, ME, GB, PA, AU, LA	1	Cable harness	Ledningsnät	5
0470								
0480	14	43 52 431		3), 4D, SE, EU, ME, PA, LA	1	Cable harness	Ledningsnät	5
0490								
0500								
0510	14	43 52 449		3), RHD, 4D, GB, PA, AU	1	Cable harness	Ledningsnät	5
0520								
0530	14	43 52 415		3), 5CS, SE, EU, ME, GB, PA, AU, LA	1	Cable harness	Ledningsnät	5
0540								
0550								
0560	14	43 52 423		3), 4D, US, CA	1	Cable harness	Ledningsnät	5
0570	14	43 52 233		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0580								


2. Front. Främre.
3. Rear. Bakre.
26. For cars with ACC. För bilar med ACC.
157. Without rear fog light. Utan dimbaklykta.
225. For markets with mean temperature over 10° Celsius. För marknader med medeltemperatur över 10° Celsius.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

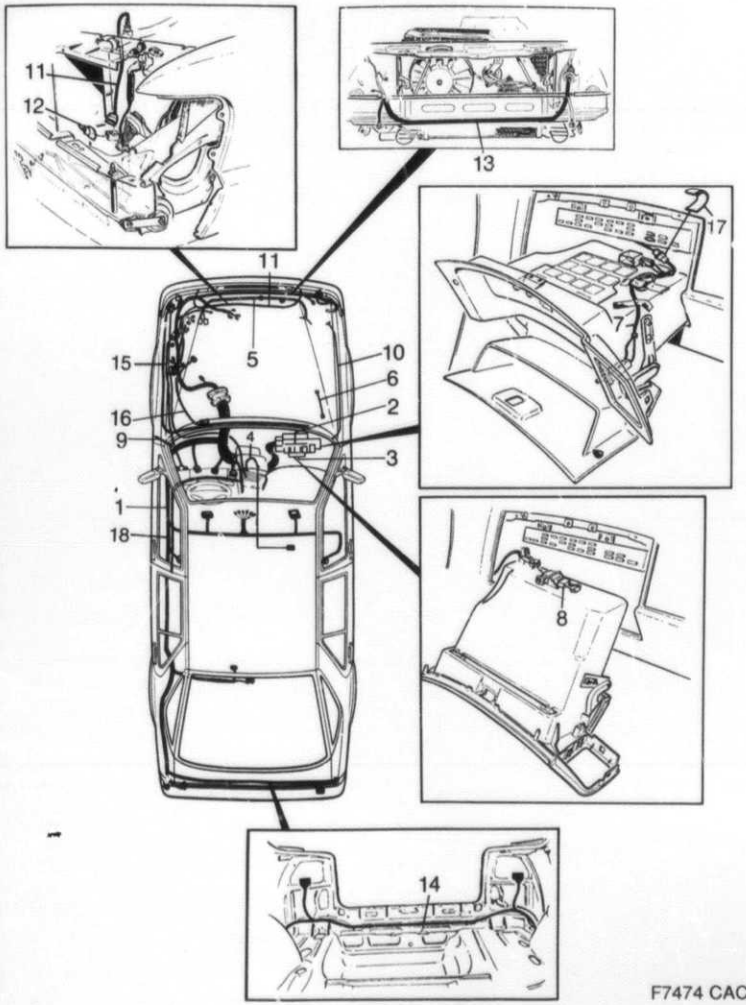

F7474 CAC94

1040	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	15	44 33 165			1	Cable harness	Ledningsnät	5
0600						air-bag	airbag	
0610								
0620	16	45 16 506		B234I, SAI, SE, US, CA	1	Cable harness	Ledningsnät	6
0630								
0640	17	44 32 449			1	Tape	Tejp	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E16 *Engine 1994*

Drivaggregat 1994

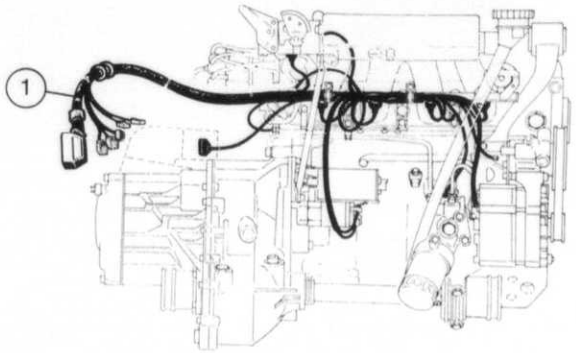

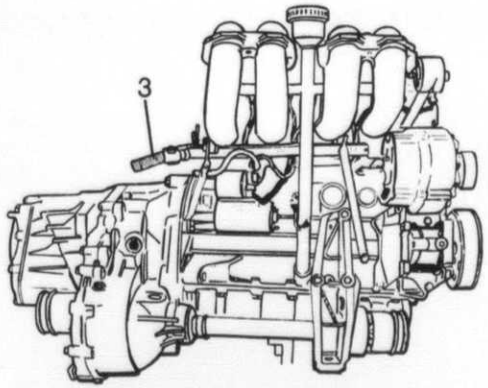

B234

F6399 CAC94

1042

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1 45 35 613		I, (4354486)	1	Cable harness	Ledningsnät	3
0020	1 45 35 654		B204L, (4354494)	1	Cable harness	Ledningsnät	3
0030							
0040	3 45 35 654		B234L, B234R, (4354494)	1	Cable harness	Ledningsnät	3
0050	3 45 35 662		B234R, TCS, (4354502)	1	Cable harness	Ledningsnät	3
0060							
0070	3 45 35 613		B234I, (4354486)	1	Cable harness	Ledningsnät	3
0080	3 45 35 639		B234I, SAI, SE, US, CA, (4434767)	1	Cable harness	Ledningsnät	3
0090							

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E18 Doors 1994

Dörrar 1994

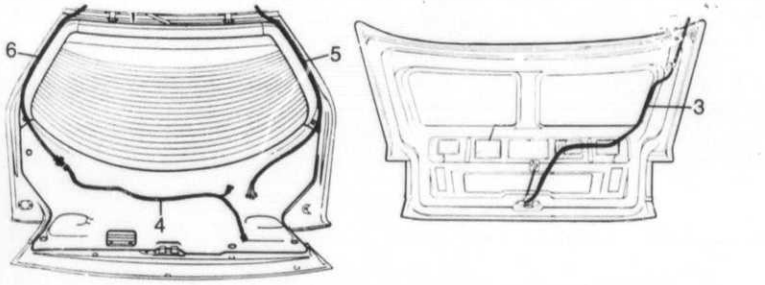

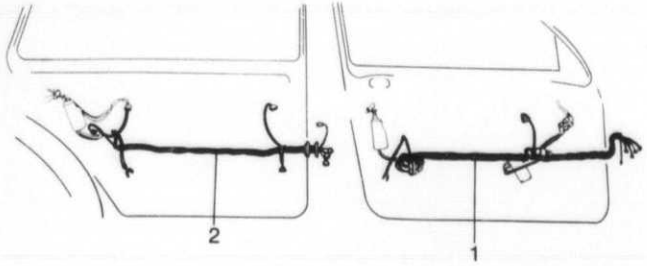

F6400 CAC94

1044	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 52 464		29,232)	1	Cable harness front door	Ledningsnät framdörr	6
0020								
0030	1	45 35 928		29,233)	1	Cable harness front door	Ledningsnät framdörr	
0040								
0050	1	43 52 266		30,232)	1	Cable harness front door	Ledningsnät framdörr	6
0060								
0070	1	45 35 910		30,233)	1	Cable harness front door	Ledningsnät framdörr	
0080								
0090								
0100	1	43 52 290		29,232), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0110								
0120	1	45 35 936		29,233), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0130								
0140	1	43 52 308		30,232), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0150								
0160	1	45 35 944		30,233), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0170								
0180								
0190	2	44 33 918		232)	2	Cable harness rear door	Ledningsnät bakdörr	5
0200								
0210	2	45 35 977		233)	2	Cable harness rear door	Ledningsnät bakdörr	5
0220								
0230								
0240	3	45 35 514		4D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0250								
0260								
0270	4	43 52 340		234), 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0280								
0285	4	45 86 673		235), 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0287								
0290								
0300	5	44 32 472		LH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0310								
0320								
0330	6	44 32 480		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0340								

29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.
232. Ch -R10118597.
233. Ch R10118598-.
234. Ch -R1024821.
235. Ch R1024822-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E20

Compartment
1994

Kupe
1994

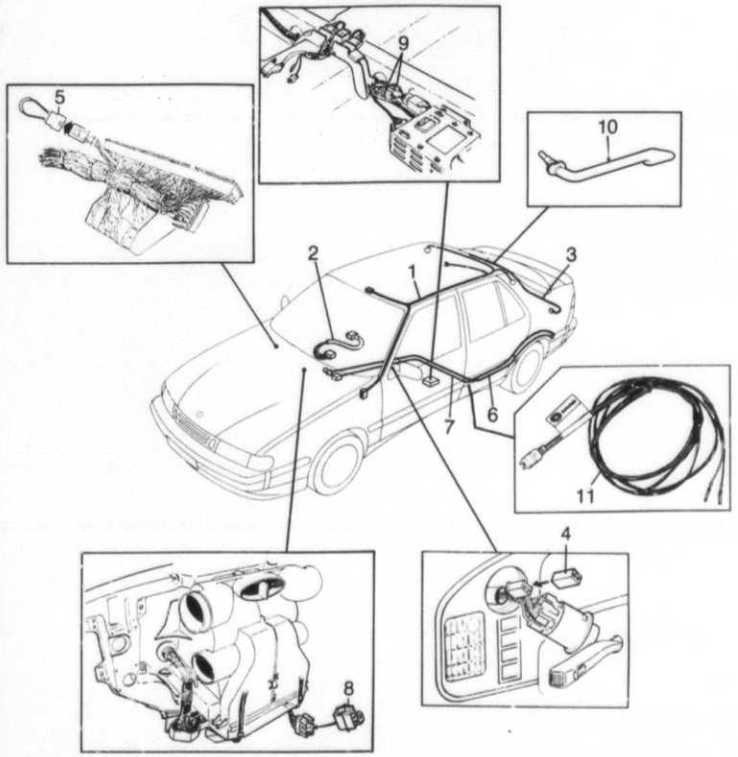

F7475 CAC94

1046	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 67 013			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0020								
0030								
0040	2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
0050								
0060								
0070	3	41 78 505		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0080								
0090								
0100	4	95 69 740		IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0110								
0120	5	40 66 916		31), M	1	Cable harness	Ledningsnät	5
0130	5	40 66 924		31), A	1	Cable harness	Ledningsnät	5
0140	5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
0150								
0160	6	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0170								
0180								
0190	7	40 83 291			1	Cable CD-changer	Ledning CD-växlare	5
0200								
0210								
0220	8	95 69 740		B204, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0230	8	95 69 740		B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0240								
0250	9	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0260								
0270								
0280	10			5CS	X	Grommet	Genomföring	
0290				See page 3A-071, 2-C24		high mounted stop light	högt monterad stopplykta	
0300				See page 3A-071, 2-C24		rear window wiper	bakrutetorkare	
0310								
0320	11	44 33 181		LH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0330								
0340	11	44 33 173		RH	1	Cable harness belt tensioner	Ledningsnät bältessträckare	5
0350								

17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-E22

Main- and engine comp. 1995

Huvud- och motorrum 1995

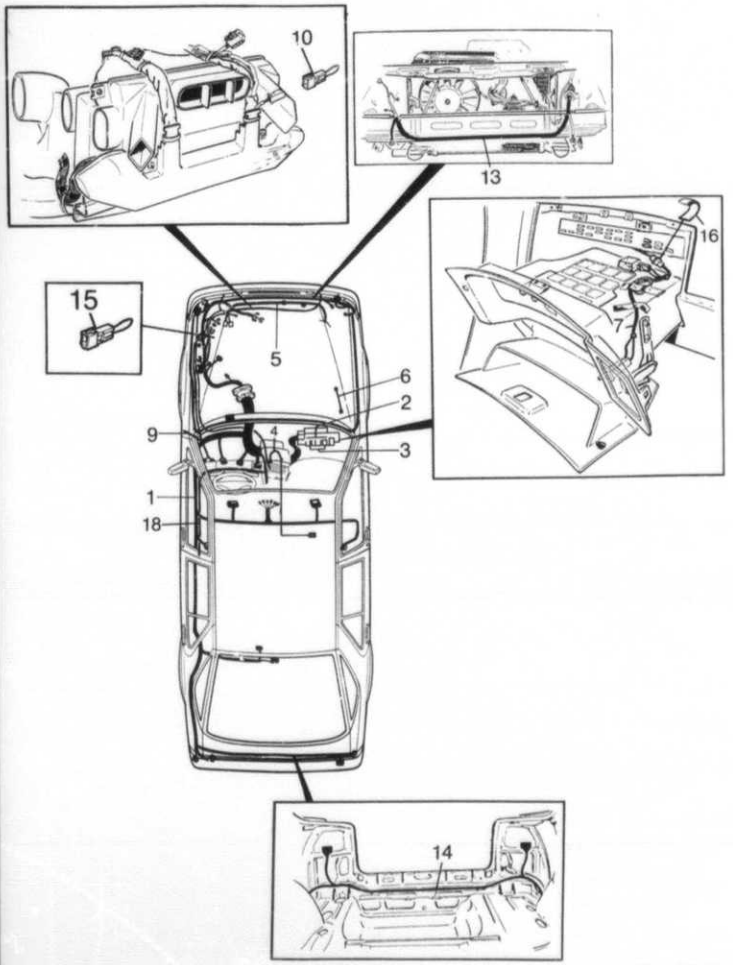

CAC94 F7549

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 17 025		B204, B234	1	Cable harness	Ledningsnät	5
0020	1	45 17 074		26), B204, B234	1	Cable harness	Ledningsnät	5
0030								
0040	1	45 17 108		B234 TURBO TCS	1	Cable harness	Ledningsnät	5
0050								
0060	1	45 17 124		B308	1	Cable harness	Ledningsnät	5
0070	1	45 17 157		26), B308	1	Cable harness	Ledningsnät	5
0080								
0090	1	45 17 355		B204, B234, RHD	1	Cable harness	Ledningsnät	5
0100	1	45 17 405		26), B204, B234, RHD	1	Cable harness	Ledningsnät	5
0110								
0120	1	45 17 439		TURBO TCS, RHD	1	Cable harness	Ledningsnät	5
0130								
0140	1	45 17 454		B308, RHD	1	Cable harness	Ledningsnät	5
0150	1	45 17 488		26), B308, RHD	1	Cable harness	Ledningsnät	5
0160								
0170	1	45 17 504		B234, US, CA	1	Cable harness	Ledningsnät	5
0180								
0190	1	45 17 538		B234 TURBO TCS, US, CA	1	Cable harness	Ledningsnät	5
0200								
0210	1	45 17 553		B308, US, CA	1	Cable harness	Ledningsnät	5
0220								
0230	2			See page 3A-167, 2-G24		.Relay retainer	.Relähållare	
0240	3			See page 3A-167, 2-G24		.Fuse holder	.Säkringshållare	
0250	4					.Cable harness	.Ledningsnät	
0260						radio	radio	
0270	5	95 23 119		AC	1	Cable harness	Ledningsnät	6
0280						thermo switch	termobrytare	
0290	6	95 65 144			1	Ground cable	Jordkabel	6
0300						radio interferance suppr	radioavstörning	
0310	7	44 32 662		LHD	1	Cable harness	Ledningsnät	6
0320						glove compartment	handskfack	
0330	9	40 66 981			2	Cable harness	Ledningsnät	5
0340						direction indicator	blinklykta	
0350								
0360	10	95 69 740		LHD, A	1	Cable harness	Ledningsnät	5
0370								
0380	13	45 16 829		2)	1	Cable harness	Ledningsnät	5
0390								
0400	13	45 16 837		2), I, SAI	1	Cable harness	Ledningsnät	5
0410								
0420	13	45 16 894		2), B234I, US, CA	1	Cable harness	Ledningsnät	5
0430	13	45 16 936		2), US, CA	1	Cable harness	Ledningsnät	5
0440								
0450	14	45 37 387		3), 4D	1	Cable harness	Ledningsnät	5
0460	14	45 37 338		3), 5CS	1	Cable harness	Ledningsnät	5
0470								
0480	14	45 37 353		3), 4D, US, CA	1	Cable harness	Ledningsnät	5
0490	14	45 37 320		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0500								
0510	15	46 92 596		260,261)	1	Cable harness	Ledningsnät	
0520						daylight driving lights	varselljus	
0530								
0540	16	46 65 840			1	Tape	Tejp	


2. Front. Främre.
3. Rear. Bakre.
26. For cars with ACC. För bilar med ACC.
260. Ch S1010397-.
261. Ch -S1012717.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

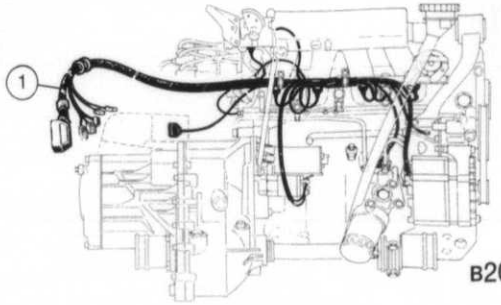

B204

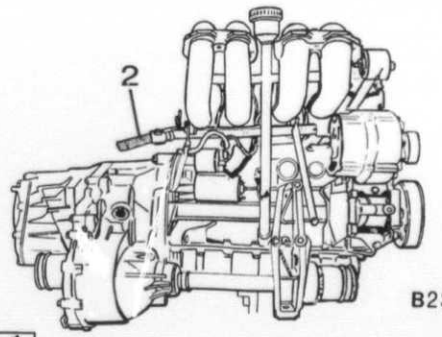

B234

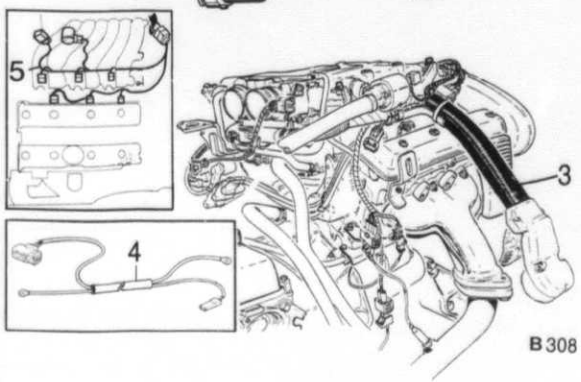

B308

CA94 F7550

1052

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	45 16 712		B204	1	Cable harness	Ledningsnät	3
0020							
0030 2	45 16 712		B234	1	Cable harness	Ledningsnät	3
0040 2	45 16 720		B234I, SAI	1	Cable harness	Ledningsnät	3
0050 2	45 16 746		B234R	1	Cable harness	Ledningsnät	3
0060							
0070 3	43 54 619		B308	1	Cable harness	Ledningsnät	3
0080 4	44 33 [illegible]3		B308	1	Cable harness	Ledningsnät	3
0090					starter motor-alternator	startmotor-generator	
0100 5	44 33 884		B308	1	Cable harness	Ledningsnät	3
0110					injection valves	insprutningsventiler	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F02

Doors
1995

Dörrar
1995

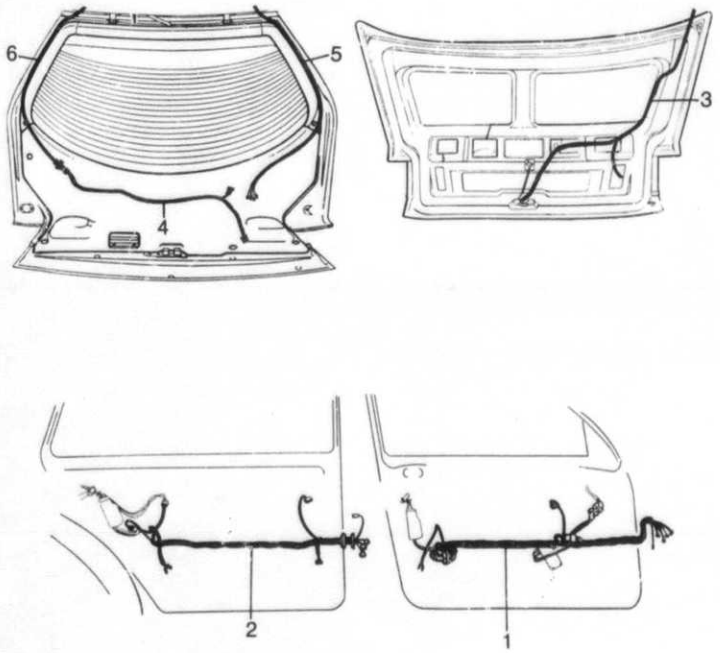

F6404 CAC94

1054	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	45 35 928		29)	1	Cable harness	Ledningsnät	
0020						front door	framdörr	
0030	1	45 35 910		30)	1	Cable harness	Ledningsnät	
0040						front door	framdörr	
0050								
0060	1	45 35 936		29), RHD	1	Cable harness	Ledningsnät	6
0070						front door	framdörr	
0080	1	45 35 944		30), RHD	1	Cable harness	Ledningsnät	6
0090						front door	framdörr	
0100								
0110	2	45 35 977			2	Cable harness	Ledningsnät	5
0120						rear door	bakdörr	
0130								
0140	3	45 38 401		4D	1	Cable harness	Ledningsnät	6
0150						boot lid	bagagerumslucka	
0160								
0170	4	45 86 673		5CS	1	Cable harness	Ledningsnät	6
0180						tail gate	bagagerumsdörr	
0190								
0200	5	44 32 472		LH, 5CS	1	Cable harness	Ledningsnät	6
0210						tail gate	bagagerumsdörr	
0220								
0230	6	44 32 480		RH, 5CS	1	Cable harness	Ledningsnät	6
0240						tail gate	bagagerumsdörr	

29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, generai	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F04 Compartment 1995

Kupe 1995

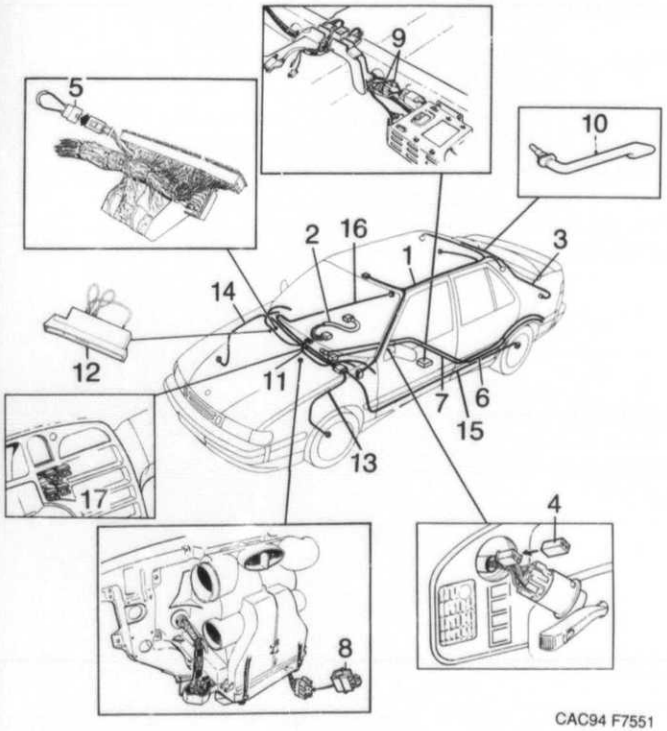

CAC94 F7551

1056	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	44 33 959		262)	1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0030	1	46 65 022		263)	1	Cable harness interior illum.	Ledningsnät innerbelysning	5
0060	2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
0090	3	41 78 505		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
0120	4	95 69 740		IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
0140	5	45 86 830		31,257), M	1	Cable harness	Ledningsnät	5
0150	5	46 65 063		31,258), M	1	Cable harness	Ledningsnät	
0160	5	45 86 814		31,257), A	1	Cable harness	Ledningsnät	5
0170	5	46 65 048		31,258), A	1	Cable harness	Ledningsnät	5
0180	5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
0200	6	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
0230	7	40 83 291			1	Cable CD-changer	Ledning CD-växlare	5
0260	8	95 69 740		B204, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0270	8	95 69 740		B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0290	9	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
0320	10			5CS See page 3A-071, 2-C24 See page 3A-071, 2-C24	X	Grommet high mounted stop light rear window wiper	Genomföring högt monterad stopplykta bakrutetorkare	
0360	11	45 88 174			1	Cable harness air-bag	Ledningsnät airbag	5
0390	12	46 65 733		31,248)	1	Cable harness	Ledningsnät	5
0410	13	45 88 133		2), LH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
0440	14	45 88 141		2), RH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
0470	15	45 88 158		3), LH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
0500	16	45 88 166		3), RH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6

2. Front. Främre.
3. Rear. Bakre.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.
248. Ch S1002068-.
257. Ch -S1010691.
258. Ch S1010692-.
262. Ch -S1029271.
263. Ch S1029272-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F06

Compartment 1995

Kupe 1995

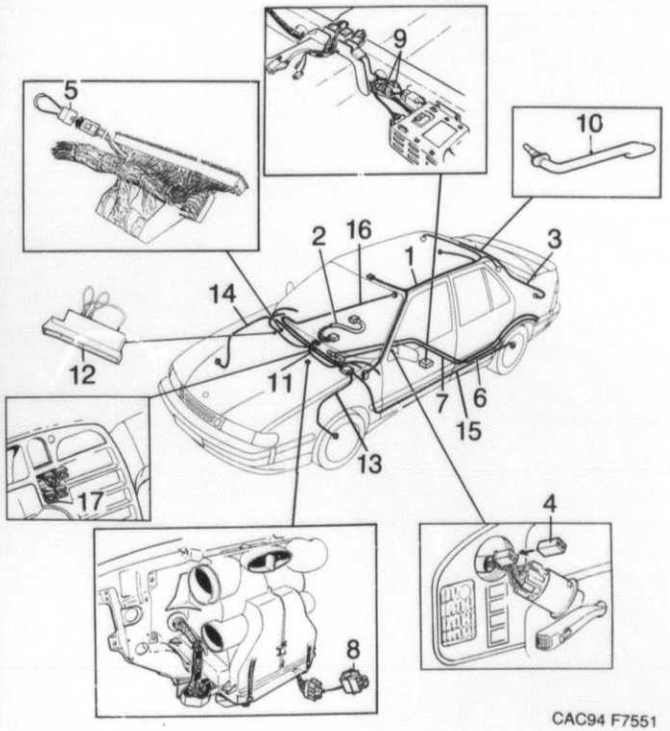

CAC94 F7551


1056	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	17	46 93 172		TCS, M	1	Cable harness	Ledningsnät	
0540						ON/OFF	ON/OFF	
0550								
0560	17	46 93 180		TCS, A	1	Cable harness	Ledningsnät	
0570						ON/OFF	ON/OFF	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

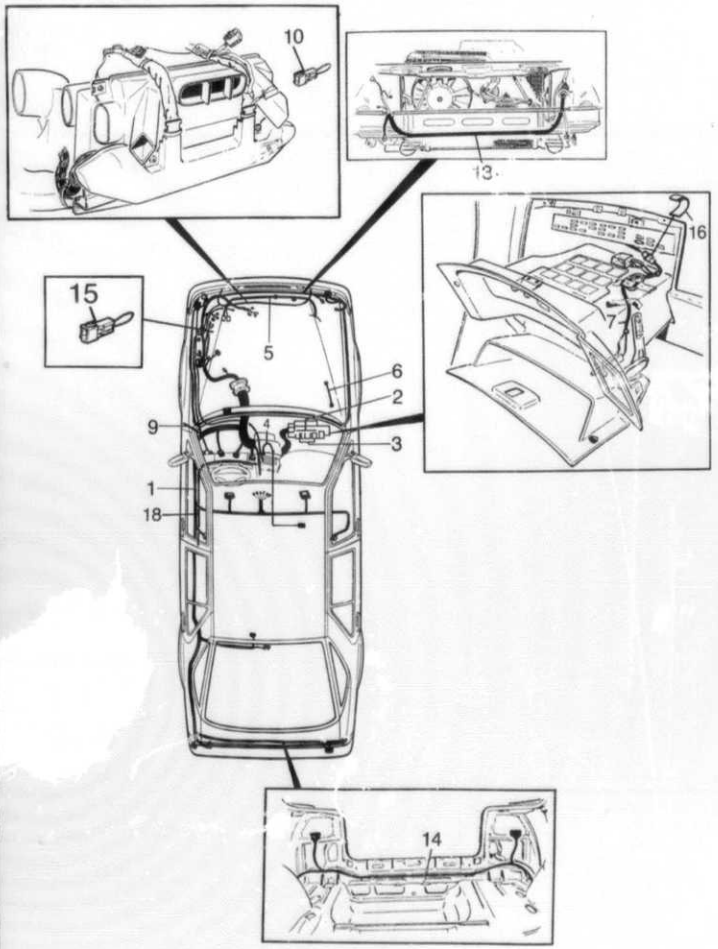

CAC94 F7552

Wiring and fuses

2-F08

Main- and engine comp.

1996

Ledningar och säkringar

Huvud- och motorrum

1996

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 87 119		4-CYL., EU, ME, PA, LA	1	Cable harness	Ledningsnät	5
0020	1	45 87 143		26), 4-CYL., EU, ME, PA, LA	1	Cable harness	Ledningsnät	5
0030								
0040								
0050	1	46 66 756		259), 4-CYL., EU	1	Cable harness	Ledningsnät	5
0060	1	46 66 764		26,259), 4-CYL., EU	1	Cable harness	Ledningsnät	5
0070								
0080	1	45 87 200		26), 4-CYL., US, CA	1	Cable harness	Ledningsnät	8
0090								
0100	1	45 87 267		277),4-CYL.,RHD,GB,PA,AU	1	Cable harness	Ledningsnät	5
0110	1	45 87 267		278),4-CYL., RHD, GB, PA	1	Cable harness	Ledningsnät	5
0120	1	48 08 341		278), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	6
0130	1	45 87 283		26,277), 4-CYL., RHD, GB, PA, AU	1	Cable harness	Ledningsnät	5
0140								
0150	1	45 87 283		26,278), 4-CYL., RHD,GB, PA	1	Cable harness	Ledningsnät	5
0160								
0170	1	48 08 358		26,278), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	6
0180								
0190	1	46 67 002		259), 4-CYL., RHD, EU	1	Cable harness	Ledningsnät	5
0200	1	46 67 010		26,259), 4-CYL., RHD, EU	1	Cable harness	Ledningsnät	5
0210								
0220	1	45 87 192		6-CYL., EU, ME, PA, LA	1	Cable harness	Ledningsnät	5
0230								
0240	1	46 66 798		259), 6-CYL., EU	1	Cable harness	Ledningsnät	5
0250								
0260	1	45 87 242		6-CYL., US, CA	1	Cable harness	Ledningsnät	8
0270								
0280	1	45 87 333		277), 6-CYL., RHD, GB, PA, AU	1	Cable harness	Ledningsnät	5
0290								
0300	1	45 87 333		278), 6-CYL., RHD, GB,PA	1	Cable harness	Ledningsnät	5
0310	1	48 08 366		278), 6-CYL., RHD, AU	1	Cable harness	Ledningsnät	6
0320								
0330	1	46 67 044		259), 6-CYL., EU	1	Cable harness	Ledningsnät	5
0340								
0350	2			See page 3A-167, 2-G24		.Relay retainer	.Relähållare	
0360	3			See page 3A-167, 2-G24		.Fuse holder	.Säkringshållare	
0370	4					.Cable harness radio	.Ledningsnät radio	
0380								
0390	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0400								
0410	6	95 65 144			1	Ground cable radio interferance suppr	Jordkabel radioavstörning	6
0420								
0430	7	44 32 662		LHD	1	Cable harness glove compartment	Ledningsnät handskfack	5
0440								
0450	9	40 66 981			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0460								
0470								
0480	10	95 69 740		LHD, A	1	Cable harness	Ledningsnät	5
0490								
0500	13	45 86 954		2), B204	1	Cable harness	Ledningsnät	5
0510								
0520	13	45 86 962		2), B234	1	Cable harness	Ledningsnät	5
0530								
0540	13	45 86 988		2), B234, US, CA	1	Cable harness	Ledningsnät	8
0550								
0560	13	45 86 939		2), 6-CYL.	1	Cable harness	Ledningsnät	5
0570								
0580	13	45 86 996		2), 6-CYL., US, CA	1	Cable harness	Ledningsnät	8


2. Front. Främre.
26. For cars with ACC. För bilar med ACC.
259. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
277. CH -T1017372.
278. CH T1017373-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

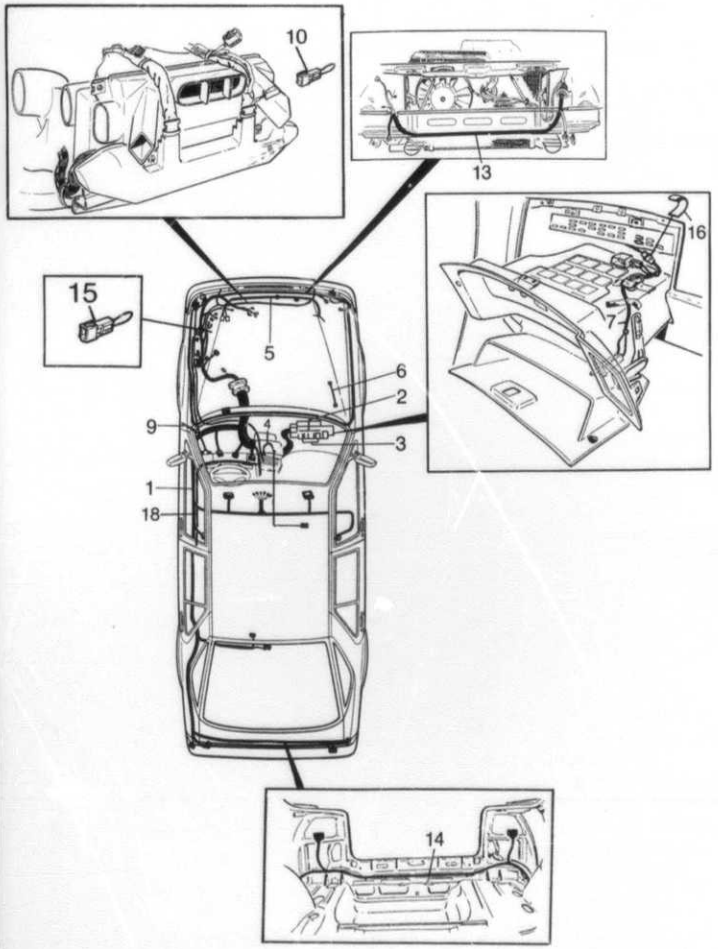

CAC94 F7552

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590								
0600	14	45 37 387		3), 4D	1	Cable harness	Ledningsnät	5
0610	14	45 37 338		3), 5CS	1	Cable harness	Ledningsnät	5
0620								
0630	14	45 37 320		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0640								
0650	16	46 65 840			1	Tape	Tejp	

3. Rear. Bakre.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04


2-F12

Engine
1996

Drivaggregat
1996

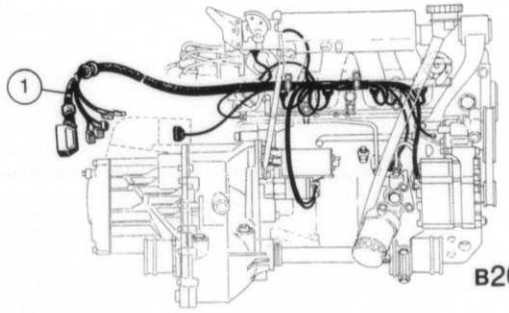

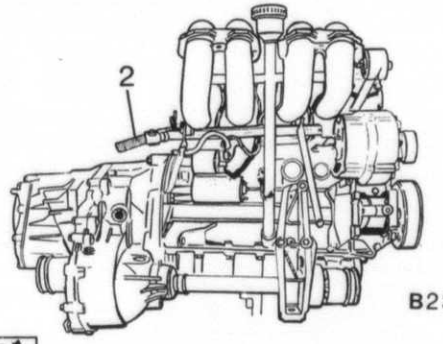

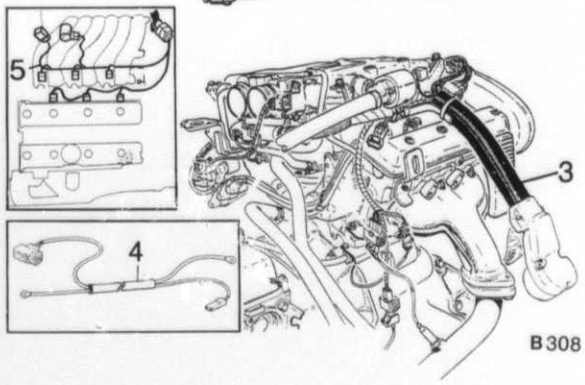

CAC94 F7553

1062	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 87 010		B204	1	Cable harness	Ledningsnät	3
0020								
0030	2	45 87 044		B234	1	Cable harness	Ledningsnät	3
0040								
0050	2	45 87 036		B234, US, CA	1	Cable harness	Ledningsnät	8
0060								
0070	3	45 87 523		B308	1	Cable harness	Ledningsnät	3
0080	3	45 87 424		B308, US, CA	1	Cable harness	Ledningsnät	8
0090								
0100	4	44 33 793		B308	1	Cable harness starter motor-alternator	Ledningsnät startmotor-generator	3
0110								
0120	5	46 68 778		B308	1	Cable harness injection valves	Ledningsnät insprutningsventiler	3
0130								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F14

Doors
1996

Dörrar
1996

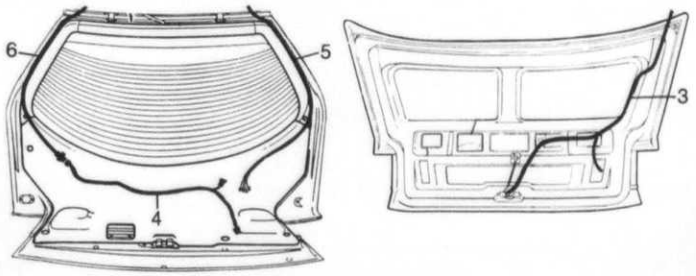

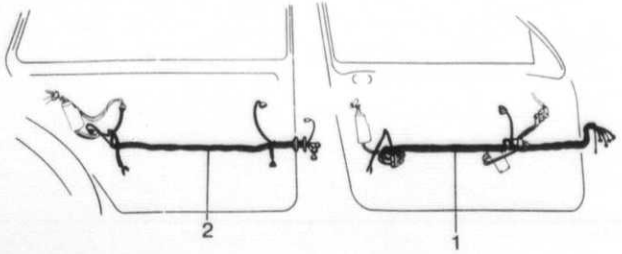

CAC94 F7554

1064	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 35 928		29)	1	Cable harness front door	Ledningsnät framdörr	
0020								
0030	1	45 35 910		30)	1	Cable harness front door	Ledningsnät framdörr	
0040								
0050								
0060	1	45 35 936		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0070								
0080	1	45 35 944		30), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0090								
0100								
0110	2	45 35 977			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0130								
0140	3	45 38 401		4D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0150								
0160								
0170	4	45 86 673		5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0180								
0190								
0200	5	44 32 472		LH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0210								
0220								
0230	6	44 32 480		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0240								


29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

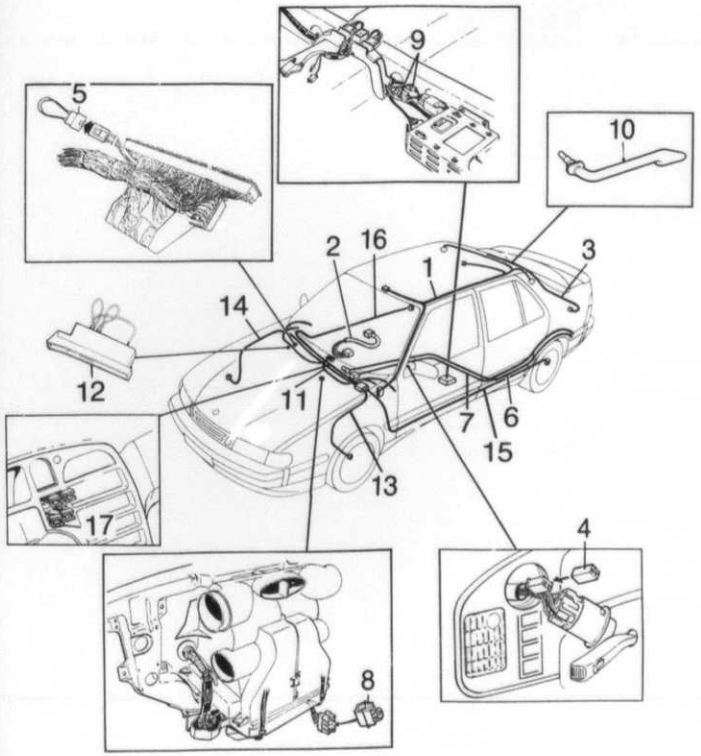

CAC94 F7555

1066 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	46 65 022			1	Cable harness interior illum.	Ledningsnät innerbelysning	5
2	41 73 688		30)	1	Cable harness front seat	Ledningsnät framstol	6
3	41 78 505		19), 4D	1	Cable harness brake light	Ledningsnät bromsljus	6
4	95 69 740		IT, FR	1	Cable harness control lamp	Ledningsnät kontrollampa	5
5	46 65 063		31), M	1	Cable harness	Ledningsnät	
5	46 65 048		31), A	1	Cable harness	Ledningsnät	5
5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
6	95 67 272		17), 4D	1	Cable bass	Kabel bas	5
7	40 83 291			1	Cable CD-changer	Ledning CD-växlare	5
8	95 69 740		B204, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
8	95 69 740		B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
9	41 74 959		JP	1	Cable harness catalytic converter temp	Ledningsnät katalysatortemp	5
10			5CS See page 3A-071, 2-C24 See page 3A-071, 2-C24	X	Grommet high mounted stop light rear window wiper	Genomföring högt monterad stopplykta bakrutetorkare	
11	45 88 174			1	Cable harness air-bag	Ledningsnät airbag	5
12	46 65 733		31)	1	Cable harness	Ledningsnät	5
13	47 35 023		2), LH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
14	47 35 031		2), RH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
15	47 35 049		3), LH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
16	47 35 056		3), RH	1	Cable harness sensor, ABS	Ledningsnät sensor, ABS	6
17	46 93 172		TCS, M	1	Cable harness ON/OFF	Ledningsnät ON/OFF	
17	46 93 180		TCS, A	1	Cable harness ON/OFF	Ledningsnät ON/OFF	


2. Front. Främre.
3. Rear. Bakre.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

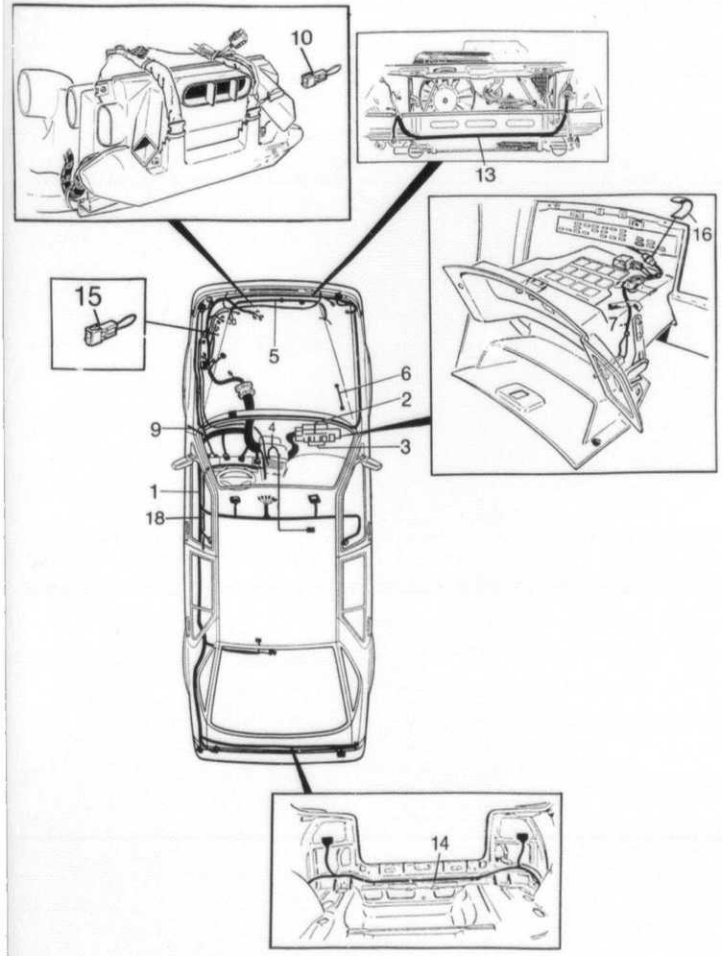

F8378 CAC94

Wiring and fuses

2-F18 Main- and engine comp. 1997

Ledningar och säkringar

Huvud- och motorrum 1997

1068	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 94 824		299), 4-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0020	1	49 28 008		300), 4-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0030	1	46 94 832		26,299), 4-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0040								
0050	1	49 28 016		26,300), 4-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0060								
0070								
0080	1	48 12 640		299), 4-CYL., ME	1	Cable harness	Ledningsnät	
0090	1	49 28 073		300), 4-CYL., ME	1	Cable harness	Ledningsnät	
0100	1	48 12 657		26,299), 4-CYL., ME	1	Cable harness	Ledningsnät	
0110	1	49 28 081		26,300), 4-CYL., ME	1	Cable harness	Ledningsnät	
0120								
0130	1	46 94 857		259,299), 4-CYL.	1	Cable harness	Ledningsnät	5
0140	1	49 28 032		259,300), 4-CYL.	1	Cable harness	Ledningsnät	5
0150	1	46 94 865		26,259,299), 4-CYL.	1	Cable harness	Ledningsnät	5
0160	1	49 28 040		26,259,300), 4-CYL.	1	Cable harness	Ledningsnät	5
0170								
0180	1	46 94 881		26,299), 4-CYL., US, CA	1	Cable harness	Ledningsnät	8
0190	1	49 28 057		26,300), 4-CYL., US, CA	1	Cable harness	Ledningsnät	8
0200								
0210	1	46 94 923		315), 4-CYL., RHD	1	Cable harness	Ledningsnät	5
0220	1	• 49 42 678		316), 4-CYL., RHD	1	Cable harness	Ledningsnät	5
0230	1	46 94 931		26,315), 4-CYL., RHD	1	Cable harness	Ledningsnät	5
0240	1	• 49 42 696		26,316), 4-CYL., RHD	1	Cable harness	Ledningsnät	5
0250								
0260	1	46 94 956		259,315), 4-CYL., RHD,GB	1	Cable harness	Ledningsnät	5
0270	1	• 49 42 702		259,316), 4-CYL., RHD,GB	1	Cable harness	Ledningsnät	5
0280	1	46 94 964		26,259,315), 4-CYL.,RHD, GB	1	Cable harness	Ledningsnät	5
0290								
0300	1	• 49 42 710		26,259,316), 4-CYL.,RHD, GB	1	Cable harness	Ledningsnät	5
0310								
0320								
0330	1	48 08 408		315), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0340	1	• 49 42 728		316), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0350	1	48 08 416		26,315), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0360	1	• 49 42 736		26,316), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0370								
0380	1	46 94 840		299), 6-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0390	1	49 28 024		300), 6-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0400								
0410	1	48 12 665		299), 6-CYL., ME	1	Cable harness	Ledningsnät	
0420	1	49 28 099		300), 6-CYL., ME	1	Cable harness	Ledningsnät	
0430								
0440	1	46 94 899		299), 6-CYL., US, CA	1	Cable harness	Ledningsnät	8
0450	1	49 28 065		300), 6-CYL., US, CA	1	Cable harness	Ledningsnät	8
0460								
0470	1	46 94 949		315), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0480	1	• 49 42 694		316), 6-CYL., RHD	1	Cable harness	Ledningsnät	5
0490	1	48 08 424		6-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0500								
0510	2			See page 3A-167, 2-G24		.Relay retainer	.Relähållare	
0520	3			See page 3A-167, 2-G24		.Fuse holder	.Säkringshållare	
0530	4					.Cable harness radio	.Ledningsnät radio	
0540								
0550	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0560								

26. For cars with ACC. För bilar med ACC.
259. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
299. Ch -V1013464.
300. Ch V1013465-.
315. Ch -V1020455.
316. Ch V1020456-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F20

Main- and engine comp. 1997

Huvud- och motorrum 1997

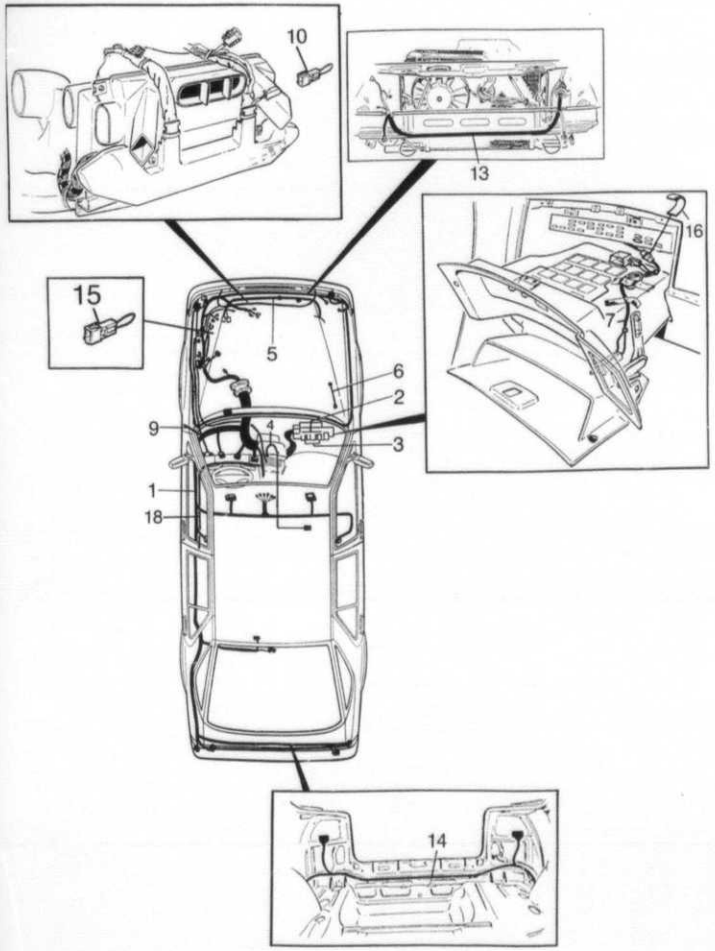

F8378 CAC94

1068	Pos	Part No/Art nr	K S	Notes·Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570	6	95 65 144			1	Ground cable	Jordkabel	6
0580						radio interferance suppr	radioavstörning	
0590	7	44 32 662		LHD	1	Cable harness	Ledningsnät	6
0600						glove compartment	handskfack	
0610	9	40 66 981			2	Cable harness	Ledningsnät	5
0620						direction indicator	blinklykta	
0630								
0640	10	95 69 740		LHD, A	1	Cable harness	Ledningsnät	5
0650								
0660	13	47 33 036		2), B204	1	Cable harness	Ledningsnät	5
0670								
0680	13	47 33 044		2,305), B234	1	Cable harness	Ledningsnät	
0690	13	• 48 14 117		2,306), B234	1	Cable harness	Ledningsnät	
0700								
0710	13	47 33 051		2), B234, US, CA	1	Cable harness	Ledningsnät	
0720								
0730	13	47 33 028		2), 6-CYL.	1	Cable harness	Ledningsnät	
0740								
0750	13	47 33 069		2), 6-CYL., US, CA	1	Cable harness	Ledningsnät	
0760								
0770	14	45 37 387		3), 4D	1	Cable harness	Ledningsnät	5
0780	14	45 37 338		3), 5CS	1	Cable harness	Ledningsnät	5
0790								
0800	14	45 37 353		3), 4D, US, CA	1	Cable harness	Ledningsnät	5
0810	14	45 37 320		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0820								
0830	16	46 65 840			1	Tape	Tejp	

2. Front. Främre.
3. Rear. Bakre.
305. Ch -V1020066.
306. Ch V1020067-.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F22 Engine 1997 / Drivaggregat 1997

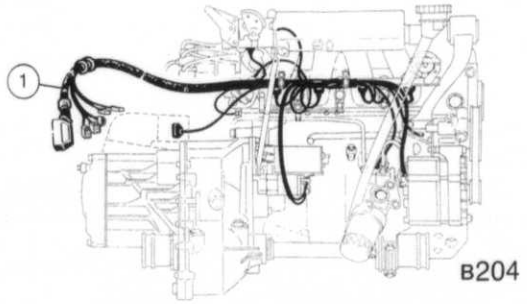

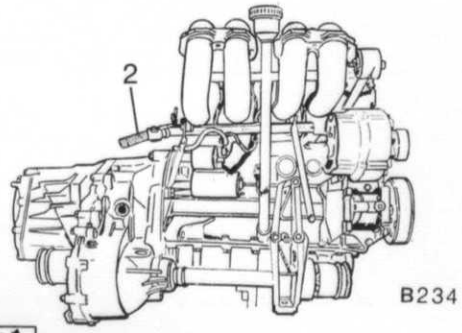

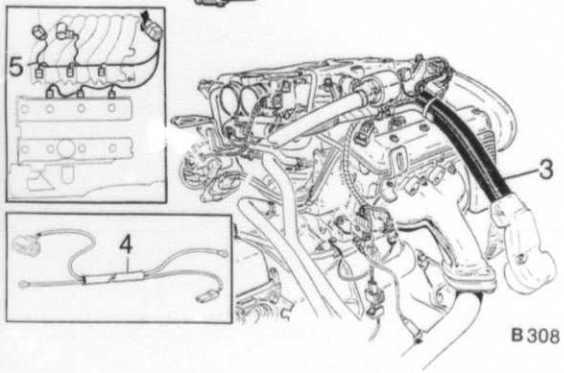

F8379 CAC94

1070	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 94 766		301,302), B204	1	Cable harness	Ledningsnät	3
0020	1	49 41 811		303,304), B204	1	Cable harness	Ledningsnät	3
0030								
0040	2	46 94 782		313), B234	1	Cable harness	Ledningsnät	3
0050	2	• 48 14 125		314), B234	1	Cable harness	Ledningsnät	3
0060								
0070	2	46 94 774		B234, US, CA	1	Cable harness	Ledningsnät	8
0080								
0090	3	46 94 980		B308	1	Cable harness	Ledningsnät	3
0100	3	46 94 998		B308, US, CA	1	Cable harness	Ledningsnät	8
0110								
0120	4	44 33 793		311), B308	1	Cable harness	Ledningsnät	3
0130						starter motor-alternator	startmotor-generator	
0140	4	• 49 42 413		312), B308	1	Cable harness	Ledningsnät	3
0150						starter motor-alternator	startmotor-generator	
0160	5	46 68 778		B308	1	Cable harness	Ledningsnät	3
0170						injection valves	insprutningsventiler	

301. Ch -V1014170.
302. Ch V1014171-.
303. Engine -V040213.
304. Engine V040214-.
311. Ch -V1020756.
312. Ch V1020757-.
313. Engine -V060059.
314. Engine V060060-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-F24

Doors 1997

Dörrar 1997

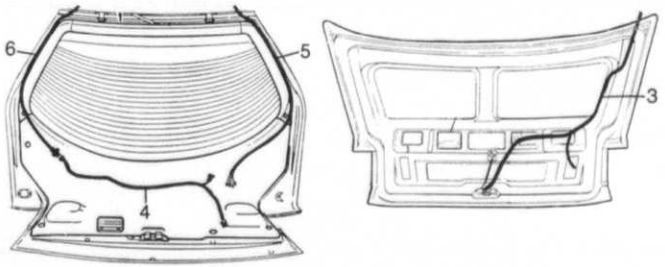

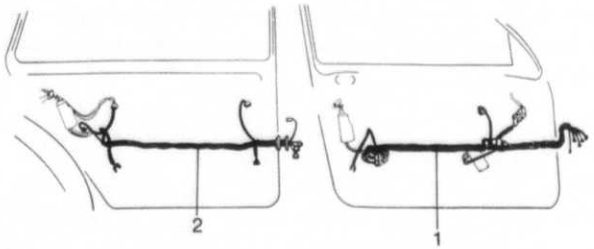

F8380 CAC94

1072	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 35 928		29)	1	Cable harness front door	Ledningsnät framdörr	
0020								
0030	1	45 35 910		30)	1	Cable harn.. ss front door	Ledningsnät framdörr	
0040								
0050								
0060	1	45 35 936		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0070								
0080	1	45 35 944		30), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0090								
0100								
0110	2	45 35 977			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0130								
0140	3	45 38 401		4D	1	Cable harness boot lid	Ledningsnät bagagerumslucka	6
0150								
0160								
0170	4	45 86 673		5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0180								
0190								
0200	5	44 32 472		LH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0210								
0220								
0230	6	44 32 480		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0240								


29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

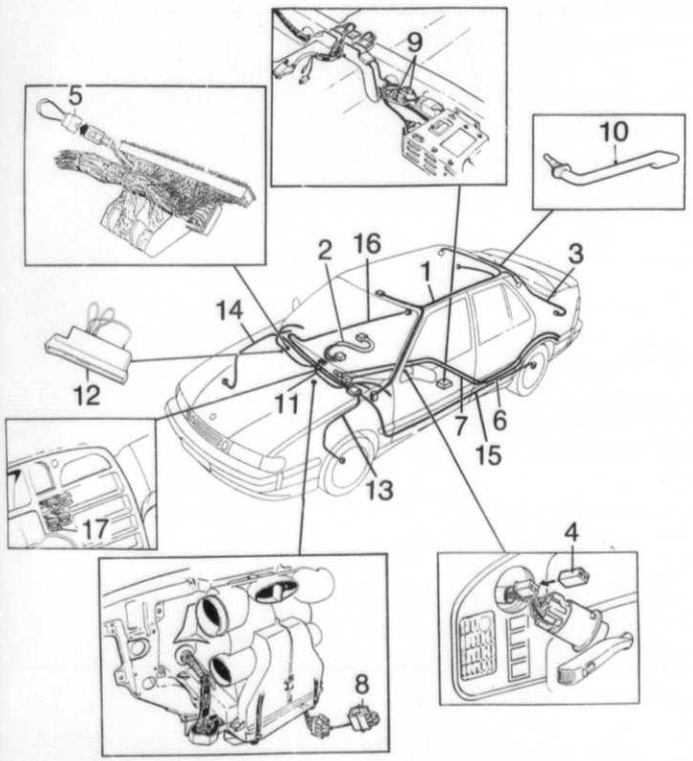

F8381 CAC94

Wiring and fuses

2-G02 Compartment 1997

Ledningar och säkringar

Kupe 1997

1074	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	46 65 022			1	Cable harness	Ledningsnät	5
0020						interior illum.	innerbelysning	
0030								
0040	2	41 73 688		30)	1	Cable harness	Ledningsnät	6
0050						front seat	framstol	
0060								
0070	3	41 78 505		19), 4D	1	Cable harness	Ledningsnät	6
0080						brake light	bromsljus	
0090								
0100	4	95 69 740		IT, FR	1	Cable harness	Ledningsnät	5
0110						control lamp	kontrollampa	
0120	5	46 65 063		31), M	1	Cable harness	Ledningsnät	
0130	5	46 65 048		31), A	1	Cable harness	Ledningsnät	5
0140	5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
0150								
0160	6	95 67 272		17), 4D	1	Cable	Kabel	5
0170						bass	bas	
0180								
0190	7	40 83 291			1	Cable	Ledning	5
0200						CD-changer	CD-växlare	
0210								
0220	8	95 69 740		B204, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0230	8	95 69 740		B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0240								
0250	10			5CS	X	Grommet	Genomföring	
0260				See page 3A-071, 2-C24		high mounted stop light	högt monterad stopplykta	
0270				See page 3A-071, 2-C24		rear window wiper	bakrutetorkare	
0280								
0290	11	45 88 174			1	Cable harness	Ledningsnät	5
0300						air-bag	airbag	
0310								
0320	12	46 65 733		31)	1	Cable harness	Ledningsnät	5
0330								
0340	13	47 35 023		2), LH	1	Cable harness	Ledningsnät	6
0350						sensor, ABS	sensor, ABS	
0360								
0370	14	47 35 031		2), RH	1	Cable harness	Ledningsnät	6
0380						sensor, ABS	sensor, ABS	
0390								
0400	15	47 35 049		3), LH	1	Cable harness	Ledningsnät	6
0410						sensor, ABS	sensor, ABS	
0420								
0430	16	47 35 056		3), RH	1	Cable harness	Ledningsnät	6
0440						sensor, ABS	sensor, ABS	
0450								
0460	17	46 93 172		TCS, M	1	Cable harness	Ledningsnät	
0470						ON/OFF	ON/OFF	
0480								
0490	17	46 93 180		TCS, A	1	Cable harness	Ledningsnät	
0500						ON/OFF	ON/OFF	


2. Front. Främre.
3. Rear. Bakre.
17. Audio system. Audio system.
19. High mounted stop light. Högt monterat stoppljus.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

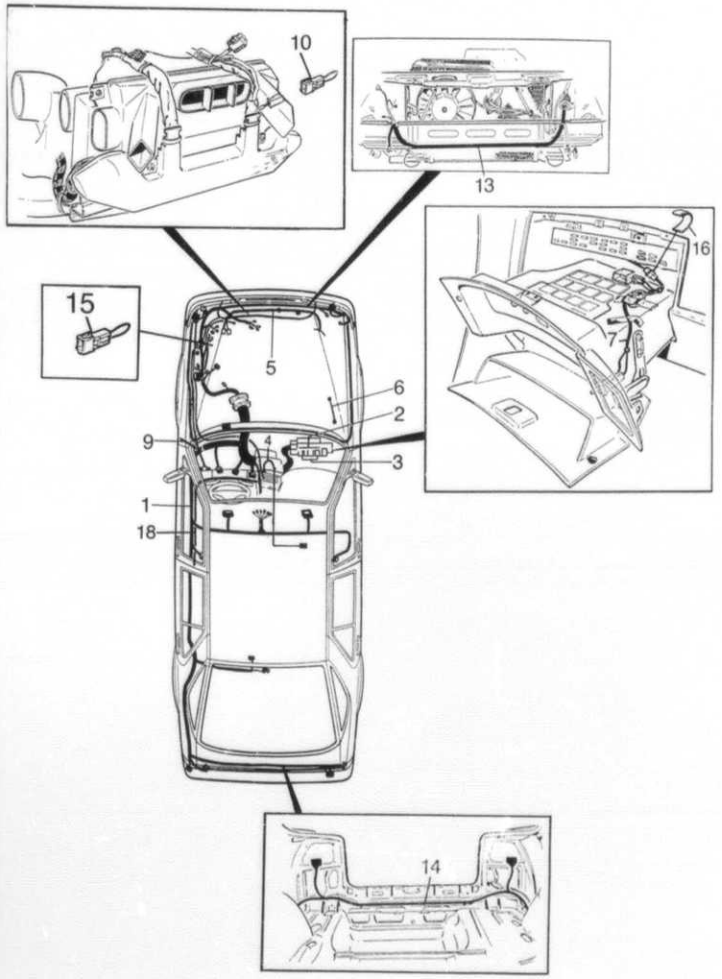

F8656 CAC94

Wiring and fuses

2-G04 Main- and engine comp. 1998

Ledningar och säkringar

Huvud- och motorrum 1998

1076	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	49 28 016		26), 4-CYL., EU, PA, LA	1	Cable harness	Ledningsnät	5
0020								
0030	1	49 28 081		26), 4-CYL., ME	1	Cable harness	Ledningsnät	
0040								
0050	1	49 28 040		26,259), 4-CYL.	1	Cable harness	Ledningsnät	5
0060								
0070	1	49 28 057		26), 4-CYL., US, CA	1	Cable harness	Ledningsnät	8
0080								
0090	1	* 49 42 686		26), 4-CYL., RHD	1	Cable harness	Ledningsnät	5
0100								
0110	1	* 49 42 710		26,259), 4-CYL., RHD, GB	1	Cable harness	Ledningsnät	5
0120								
0130	1	* 49 42 736		26), 4-CYL., RHD, AU	1	Cable harness	Ledningsnät	5
0140								
0150	2			See page 3A-167, 2-G24		.Relay retainer	.Relähållare	
0160	3			See page 3A-167, 2-G24		.Fuse holder	.Säkringshållare	
0170	4					.Cable harness radio	.Ledningsnät radio	
0180								
0190	5	95 23 119		AC	1	Cable harness thermo switch	Ledningsnät termobrytare	6
0200								
0210	6	95 65 144			1	Ground cable radio interferance suppr	Jordkabel radioavstörning	6
0220								
0230	7	44 32 662		LHD	1	Cable harness glove compartment	Ledningsnät handskfack	6
0240								
0250	9	40 66 981			2	Cable harness direction indicator	Ledningsnät blinklykta	5
0260								
0270								
0280	10	95 69 740		LHD, A	1	Cable harness	Ledningsnät	5
0290								
0300	13	47 33 036		2), B204	1	Cable harness	Ledningsnät	5
0310								
0320	13	47 33 044		2,305), B234	1	Cable harness	Ledningsnät	
0330	13	* 48 14 117		2,306), B234	1	Cable harness	Ledningsnät	
0340								
0350	13	47 33 051		2), B234, US, CA	1	Cable harness	Ledningsnät	
0360								
0370	14	45 37 338		3), 5CS	1	Cable harness	Ledningsnät	5
0380								
0390	14	45 37 320		3), 5CS, US, CA	1	Cable harness	Ledningsnät	5
0400								
0410	16	46 65 840			1	Tape	Tejp	

2. Front. Främre.
3. Rear. Bakre.
26. For cars with ACC. För bilar med ACC.
259. Anti theft alarm with "Vehicle Security System" VSS. Stöldlarm med "Vehicle Security System" VSS.
305. Ch -V1020066.
306. Ch V1020067-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G06 Engine 1998

Drivaggregat 1998

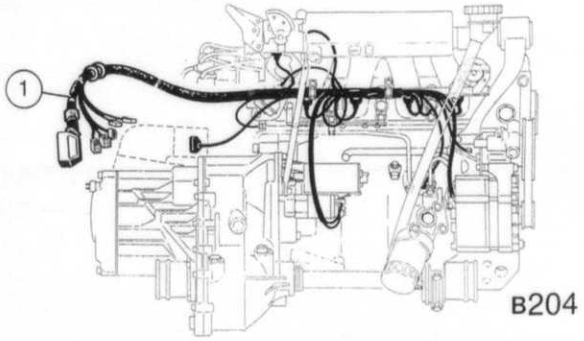

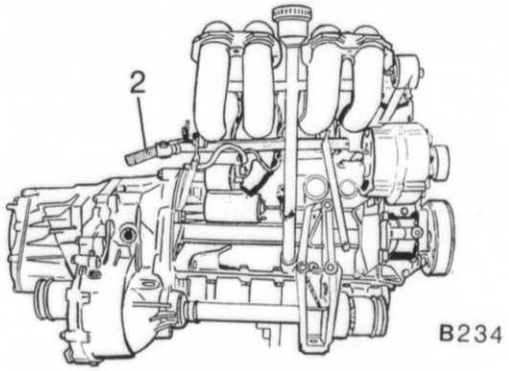

F8657 CAC94

1078	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	49 41 811		B204	1	Cable harness	Ledningsnät	3
0020								
0030	2	• 48 14 125		B234	1	Cable harness	Ledningsnät	3
0040								
0050	2	46 94 774		B234, US, CA	1	Cable harness	Ledningsnät	8

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G08 Doors 1998

Dörrar 1998

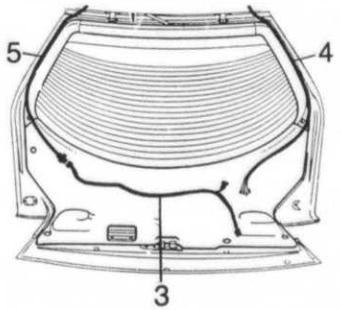

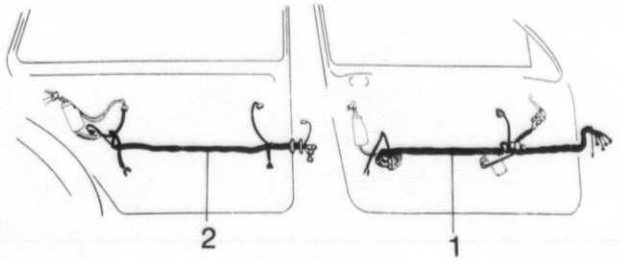

F8658 CAC94

1080	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 35 928		29)	1	Cable harness front door	Ledningsnät framdörr	
0020								
0030	1	45 35 910		30)	1	Cable harness front door	Ledningsnät framdörr	
0040								
0050								
0060	1	45 35 936		29), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0070								
0080	1	45 35 944		30), RHD	1	Cable harness front door	Ledningsnät framdörr	6
0090								
0100								
0110	2	45 35 977			2	Cable harness rear door	Ledningsnät bakdörr	5
0120								
0130								
0140	3	45 86 673		5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0150								
0160								
0170	4	44 32 472		LH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0180								
0190								
0200	5	44 32 480		RH, 5CS	1	Cable harness tail gate	Ledningsnät bagagerumsdörr	6
0210								

29. Drivers side. Förarsida.
30. Passenger side. Passagerarsida.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G10 Compartment 1998

Kupe 1998

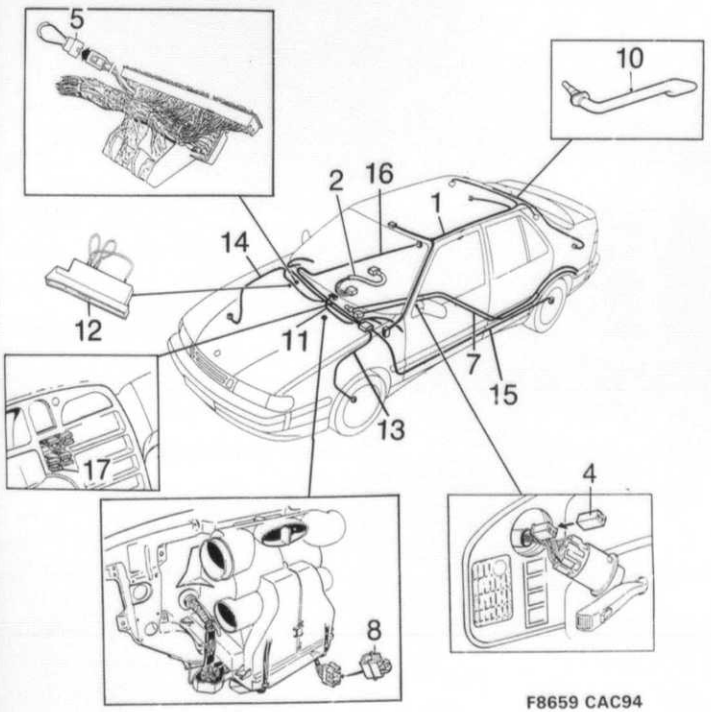

F8659 CAC94

1082	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 65 022			1	Cable harness	Ledningsnät	5
0020						interior illum.	innerbelysning	
0030								
0040	2	41 73 688		30)	1	Cable harness	Ledningsnät	6
0050						front seat	framstol	
0060								
0070	4	95 69 740		IT, FR	1	Cable harness	Ledningsnät	5
0080						control lamp	kontrollampa	
0090	5	46 65 063		31), M	1	Cable harness	Ledningsnät	
0100	5	46 65 048		31), A	1	Cable harness	Ledningsnät	5
0110	5	95 69 740		B234 I, LHD	1	Cable harness	Ledningsnät	5
0120								
0130	7	40 83 291			1	Cable	Ledning	5
0140						CD-changer	CD-växlare	
0150								
0160	8	95 69 740		B204, M, SE, FI, EU	1	Cable harness	Ledningsnät	5
0170	8	95 69 740		B234, M, LHD, JP	1	Cable harness	Ledningsnät	5
0180								
0190	9	48 12 863		JP	1	Cable harness	Ledningsnät	5
0200						catalytic converter temp	katalysatortemp	
0210								
0220	10			5CS	X	Grommet	Genomföring	
0230				See page 3A-071, 2-C24		high mounted stop light	högt monterad stopplykta	
0240				See page 3A-071, 2-C24		rear window wiper	bakrutetorkare	
0250								
0260	11	45 88 174			1	Cable harness	Ledningsnät	5
0270						air-bag	airbag	
0280								
0290	12	46 65 733		31)	1	Cable harness	Ledningsnät	5
0300								
0310	13	47 35 023		2), LH	1	Cable harness	Ledningsnät	6
0320						sensor, ABS	sensor, ABS	
0330								
0340	14	47 35 031		2), RH	1	Cable harness	Ledningsnät	6
0350						sensor, ABS	sensor, ABS	
0360								
0370	15	47 35 049		3), LH	1	Cable harness	Ledningsnät	6
0380						sensor, ABS	sensor, ABS	
0390								
0400	16	47 35 056		3), RH	1	Cable harness	Ledningsnät	6
0410						sensor, ABS	sensor, ABS	
0420								
0430	17	46 93 172		TCS, M	1	Cable harness	Ledningsnät	
0440						ON/OFF	ON/OFF	
0450								
0460	17	46 93 180		TCS, A	1	Cable harness	Ledningsnät	
0470						ON/OFF	ON/OFF	

2. Front. Främre.
3. Rear. Bakre.
30. Passenger side. Passagerarsida.
31. Without theft alarm. Utan tjuvlarm.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G12

Bushing, clamp

Bussningar, klammer

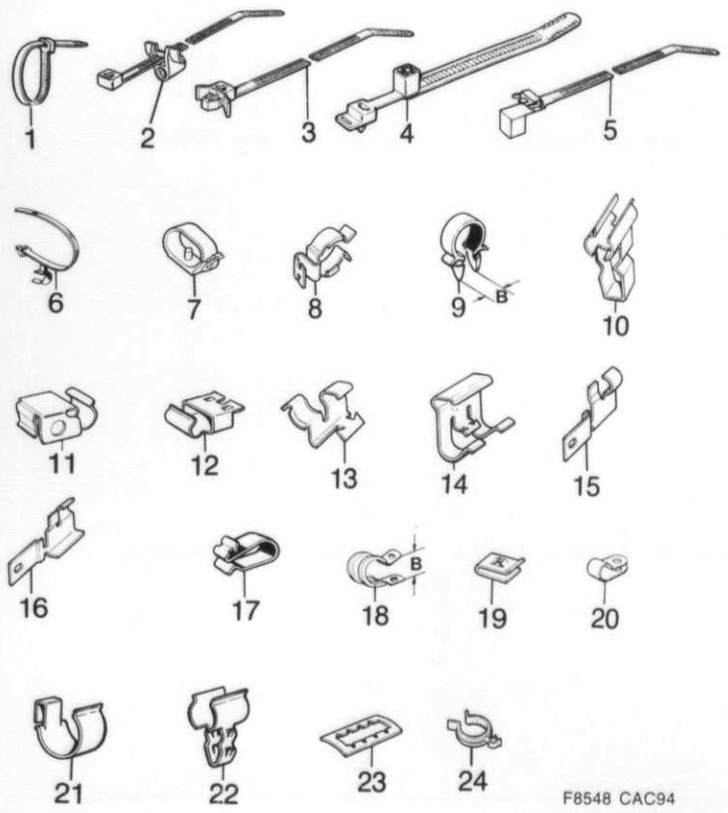

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 71 864		L=118 MM	X	Tensioning band	Spännband	5
0020	1	79 71 872		L=160 MM	X	Tensioning band	Spännband	5
0030	1	79 71 880		L=259 MM	X	Tensioning band	Spännband	4
0040	1	79 71 898		L=304 MM	X	Tensioning band	Spännband	5
0050	2	48 07 939		L=259 MM	X	Tensioning band	Spännband	4
0060	3	85 52 663		L=200 MM, Ø 6,5 MM	X	Tensioning band	Spännband	5
0070	3	95 28 019		L=212 MM, Ø 8 MM	X	Tensioning band	Spännband	5
0080	4	95 25 221		L=150 MM	X	Tensioning band	Spännband	5
0090	4	*43 53 660*		L=190 MM NLS – USE 7984750	X	Tensioning band	Spännband	4
0100	5	79 84 750		L=190 MM	X	Tensioning band	Spännband	5
0110	5	91 24 603		L=215 MM	X	Tensioning band	Spännband	5
0120	5	40 63 681		L=220 MM	X	Tensioning band	Spännband	5
0130	6	73 98 944		L=100 MM	X	Tensioning band	Spännband	5
0140	6	75 93 221		L=214 MM	X	Tensioning band	Spännband	5
0150	6	73 98 977		L=273 MM	X	Tensioning band	Spännband	5
0160	7	*79 75 642*		28 MM X 16 MM NLS	X	Clamp	Klammer	5
0170	7	79 75 659		35 MM X 20 MM	X	Clamp	Klammer	5
0180	7	79 75 667		40 MM X 24 MM	X	Clamp	Klammer	5
0190	8	95 07 914			X	Clip	Clips	5
0200	9	93 65 164		B=12,5 MM	X	Clip	Clips	5
0210	9	85 30 917		B=16 MM	X	Clip	Clips	5
0220	9	85 36 419		B=18,5 MM	X	Clip	Clips	5
0230	10	41 13 999		B234, AC	X	Clip	Clips	5
0240						compressor	kompressor	
0250	11	88 56 916		B234	X	Clip	Clips	5
0260						oil level sensor	oljenivågivare	
0270	13	95 08 037			X	Clamp	Klammer	5
0280	14	95 08 045			X	Clamp	Klammer	5
0290	15	95 08 532			X	Clamp	Klammer	5
0300	16	95 08 524			X	Clamp	Klammer	5
0310	17	71 56 409			X	Clamp	Klammer	5
0320	18	79 69 348		B=6 MM	X	Clamp	Klammer	5
0330	18	79 69 363		B=9 MM	X	Clamp	Klammer	5
0340	18	85 66 135		B=11 MM	X	Clamp	Klammer	5
0350	18	*85 66 143*		B=11 MM NLS	X	Clamp	Klammer	5
0360	18	79 69 421		B=19 MM	X	Clamp	Klammer	5
0370	18	79 69 462		B=25 MM	X	Clamp	Klammer	5
0380	18	79 69 488		B=28 MM	X	Clamp	Klammer	5
0390	19	79 67 995			X	Clip nut	Clipsmutter	3
0400	19	79 72 573			X	Clip nut	Clipsmutter	5
0410						cable harness	ledningsnät	
0420	20	95 17 871			X	Clamp	Klammer	5
0430						tail gate	bagagerumsdörr	
0440	21	79 33 443			X	Clip	Clips	5
0450	21	71 21 239			X	Clamp	Klammer	5
0460	22	95 55 913			X	Clip	Clips	5
0470	23	45 19 088		1994	X	Clip	Clips	5
0480						glove compartment	handskfack	
0490	24	44 02 095			X	Double clamp	Dubbelklamma	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G14

Bushing, clamp

Bussningar, klammer



1092	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	95 07 666			1	Grommet	Genomföring	5
0020	2	95 23 622		Ø 60 MM	2	Bushing	Bussning	6
0030						A-pillar	A-stolpe	
0040	2	95 23 465		Ø 60 MM	2	Bushing	Bussning	6
0050						main cable harness	huvudledningsnät	
0060	3	85 52 721			4	Cable protection	Kabelskydd	4
0070						cable harness	ledningsnät	
0080	4	85 79 955			1	Protection	Skydd	4
0090	5	*95 02 840*		NLS	1	Grommet	Genomföring	6
0100	6	95 19 570			1	Seal	Tätning	5
0110						main cable harness	huvudledningsnät	
0120	7	95 08 482			X	Bushing	Bussning	6
0130	8	*95 17 889*		NLS – USE 7399256	X	Rivet	Nit	3
0140	9	95 29 660			1	Protection	Skydd	4
0150						holder, relay box	hållare, reläbox	
0160	10	75 91 035		L= 55 MM	X	Protecting moulding	Skyddslist	5
0170	10	95 19 737		L=140 MM	X	Protecting moulding	Skyddslist	5
0180	10	*84 97 471*		L=150 MM NLS – USE 8564973	X	Protecting moulding	Skyddslist	6
0190	11	73 26 093			X	Bushing	Bussning	5
0200	12	92 67 881		Ø 6,7 MM	X	Plug	Plugg	5
0210	12	69 42 775		Ø 25 MM	X	Plug	Plugg	5
0220	13	95 03 491			X	Grommet	Genomföring	5
0230	14	95 07 690			X	Bellows	Bälg	6
0240	15	40 62 329		1994-	X	Nut	Mutter	5
0250	15	40 87 128		1995-	X	Plastic nut	Plastmutter	5
0260	16	79 75 576		EW	1	Nut	Mutter	5
0270						relay	relä	
0280	17	*79 74 090*		NLS – USE 7399348	X	Screw	Skruv	5
0290	18	*79 71 757*		M8X10 NLS – USE 7528953	X	Screw	Skruv	5
0300						ground	jord	
0310	18	80 82 935		M8X16	X	Screw	Skruv	5
0320	18	79 67 938		M8X16	X	Screw	Skruv	5
0330						ground	jord	
0340	18	80 91 738		M8X18	X	Screw	Skruv	5
0350	19	79 72 607		M6X12	X	Screw	Skruv	5
0360	19	79 78 091		M6X12	X	Screw	Skruv	5
0370	19	79 72 466		M6X16	X	Screw	Skruv	5
0380	19	79 78 109		M6X16	X	Screw	Skruv	5
0390	19	79 73 555		M6X22	X	Screw	Skruv	5
0400	19	79 72 623		M6X16	X	Screw	Skruv	5
0410	19	79 71 823		B8X16	X	Screw	Skruv	5
0420	19	82 86 296			X	Screw	Skruv	5
0430						ground	jord	
0440	19	81 25 007		M6FS6X12	X	Screw	Skruv	5
0450						ground	jord	
0460	19	79 69 223		M6FS6X12	X	Screw	Skruv	5
0470	19	79 74 397			X	Screw	Skruv	5
0480						radio interferance suppr	radioavstörning	
0490	20	79 22 354		4,8X13	X	Screw	Skruv	5
0500	20	79 22 826		4,8X16	X	Screw	Skruv	5
0510	20	79 70 536		4,8X16	X	Screw	Skruv	6
0520	20	79 22 362		4,8X16	X	Screw	Skruv	5
0530	20	79 77 465		4,8X19	X	Screw	Skruv	5
0540	20	73 99 520		AIR-BAG	X	Screw	Skruv	5
0550	21	79 22 420		ABS	X	Screw	Skruv	5
0560						ground	jord	
0570	21	79 22 420			X	Screw	Skruv	5
0580						relay	relä	
0590	21	79 22 503			X	Screw	Skruv	5
0600						battery cable	batterikabel	
0610	21	80 59 552		-1997, 4D	X	Screw	Skruv	5
0620						boot lid	bagagerumslucka	
0630	21	79 72 805			X	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	3-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G16

Bushing, clamp

Bussningar, klammer



F7291 CAC94


1092	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	21	79 71 294			X	Screw	Skruv	5
0650						ground	jord	
0660	21	84 10 961			X	Screw	Skruv	5
0670	21	79 22 420		ME, PA, LA	X	Screw	Skruv	5
0680						relay	relä	
0690	22	79 72 946			X	Screw	Skruv	5
0700	22	*79 72 953*		NLS - USE 7922370, 8029944	X	Screw	Skruv	5
0700								
0710	23	79 75 261		ABS	X	Nut	Mutter	5
0720						ground	jord	
0730	23	79 77 358		PA	X	Press nut	Pressmutter	5
0740						relay	relä	
0750	24	95 64 204			1	Seal	Tätning	5
0760	25	91 20 106			1	Protection	Skydd	4
0770	26	42 18 277		-1995	1	Push nut	Tryckmutter	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

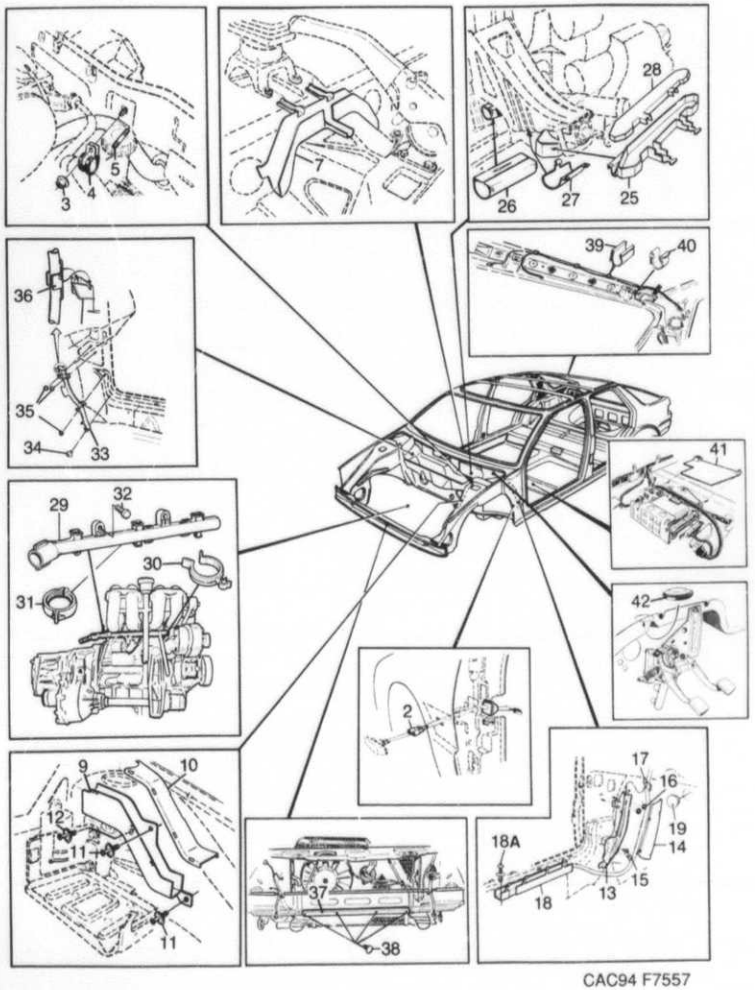

CAC94 F7557

Wiring and fuses

2-G18

Mounting details
Body

Ledningar och säkringar

Monteringsdetaljer
Kaross

1095	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	40 69 811			4	Grommet	Genomföring	6
0020						direction indicator	blinkers	
0030								
0040	3	79 77 929		1994	1	Nut	Mutter	5
0050	4	79 69 462		1994	1	Clamp	Klammer	5
0060	5	94 46 881		1994	1	Stud	Pinnskruv	5
0070								
0080	7	40 62 337			1	Duct	Kanal	4
0090								
0100	9	41 74 116			1	Cable protection	Kabelskydd	4
0110						battery	batteri	
0120	10	41 74 124			1	Cover	Lock	4
0130	11	40 63 897			2	Rivet	Nit	3
0140	12	73 99 694			1	Rivet	Nit	3
0150								
0160	13	40 60 844		LH	1	Roof gutter	Ränna	4
0170						A-pillar	A-stolpe	
0180	14	40 62 311		LH	1	Cover	Lock	4
0190						A-pillar	A-stolpe	
0200	15	95 65 417		LH	2	Rivet	Nit	3
0210						A-pillar	A-stolpe	
0220	16	40 62 329		1994, LH	2	Nut	Mutter	5
0230						A-pillar	A-stolpe	
0235	16	40 87 128		1995-, LH	5	Plastic nut	Plastmutter	5
0237						A-pillar	A-stolpe	
0240	17	40 62 295		LH	1	Clip	Clips	5
0250						A-pillar	A-stolpe	
0260	18	95 23 218		LH	1	Cable protection	Kabelskydd	4
0270						sill	tröskel	
0280	18A	95 65 417			2	Rivet	Nit	3
0290	19	41 75 402		DI/APC/EZK	1	Bushing	Bussning	6
0300	19	43 53 769		DI/ABS/APC/EZK	1	Bushing	Bussning	6
0310								
0320	25	40 69 258			1	Cable channel	Kabelränna	4
0330						cable harness	ledningsnät	
0340	26	95 18 119		RHD	1	Clamp	Klammer	5
0350						steering column	rattställ	
0360	27	41 11 217			1	Clamp	Klämma	4
0370						main cable harness	huvudledningsnät	
0380	28	40 63 756			1	Cover	Lock	4
0390						cable harness	ledningsnät	
0400								
0410	29	95 68 106		B234 I	1	Cable protection	Kabelskydd	4
0420						engine	motor	
0430	29	41 13 551		B234 TURBO	1	Protection	Skyddshölje	4
0440						engine	motor	
0450	30	75 39 984		B234	1	Clamp	Klammer	5
0460						alternator cable	generatorkabel	
0470	31	41 74 058		B234 TURBO	1	Clamp	Klamma	5
0480						cable harness	ledningsnät	
0490	32	80 59 610		B234 I	2	Screw	Skruv	5
0500								
0510	33	40 61 685		RH	1	Roof gutter	Ränna	4
0520						A-pillar	A-stolpe	
0530	34	95 65 417		RH	1	Rivet	Nit	3
0540	35	40 62 329		RH	3	Nut	Mutter	5
0550	36	40 67 716		64)	1	Clip	Clips	5
0560								
0570	37	41 73 696			1	Duct	Kanal	4
0580	38	95 65 417			4	Rivet	Nit	3
0590								
0600	39	71 08 491		5CS	X	Clamp	Klammer	5

64. For 40 61 685. För 40 61 685.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G20

Mounting details
Body

Monteringsdetaljer
Kaross

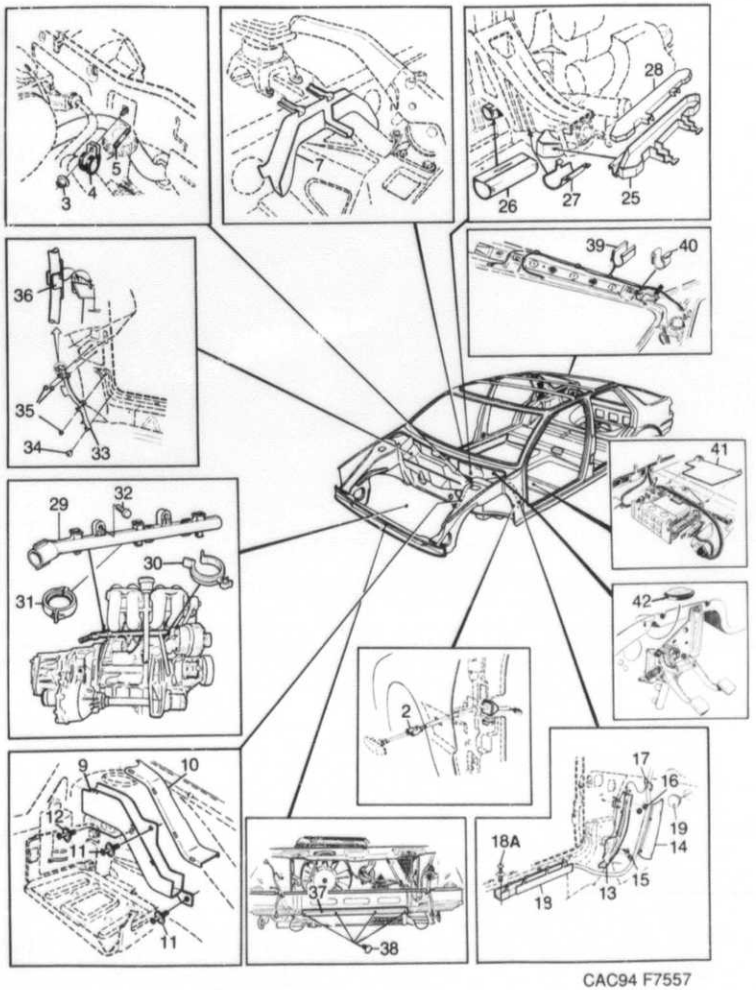

CAC94 F7557

1095	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	40	93 83 043		5CS	X	Clamp	Klammer	5
0620								
0630	41	43 52 993			1	Plastic cover	Plastskydd	4
0640								
0650	42	46 63 001		1996-	1	Plug	Plugg	5
0660						cowl	torped	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G22

Mounting details
Doors

Monteringsdetaljer
Dörrar

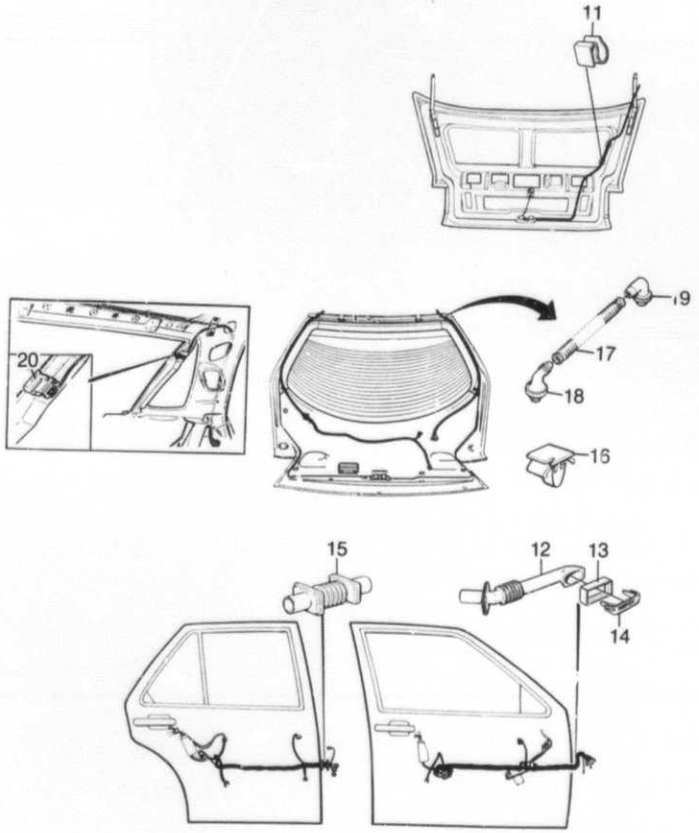

F6409 CAC94

1097	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	11	71 08 491		-1997, 4D	3	Clamp	Klammer	5
0020								
0030	12	95 26 773		2)	2	Bellows	Bälg	6
0040	13	95 63 560		2,81)	2	Seal	Tätning	5
0050	14	95 25 122		2,81)	2	Key	Kil	4
0060								
0070	15	95 16 212		3)	2	Bellows	Bälg	6
0080								
0090	16	41 76 095		5CS	1	Clip	Clips	5
0100	17	41 74 157		5CS	2	Bellows	Bälg	6
0110	17			5CS		Grommet	Genomföring	
0120				See page 3A-071, 2-C24		high mounted stop light	Högt monterad stopplykta	
0130				See page 3A-071, 2-C24		rear window wiper	bakrutetorkare	
0140	18	44 18 364		5CS	2	Grommet	Genomföring	5
0150	19	44 19 529		LH, 5CS	1	Grommet	Genomföring	6
0160	19	44 19 545		RH, 5CS	1	Grommet	Genomföring	6
0170	20	41 74 181		5CS	2	Clip	Clips	5

2. Front. Främre.
3. Rear. Bakre.
81. For contact housing 95 25 114, 22-pole. För kontakthus 95 25 114, 22-poligt.

MASTER INDEX

0	Generai	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-G24

Holders and brackets

Hållare och konsoler

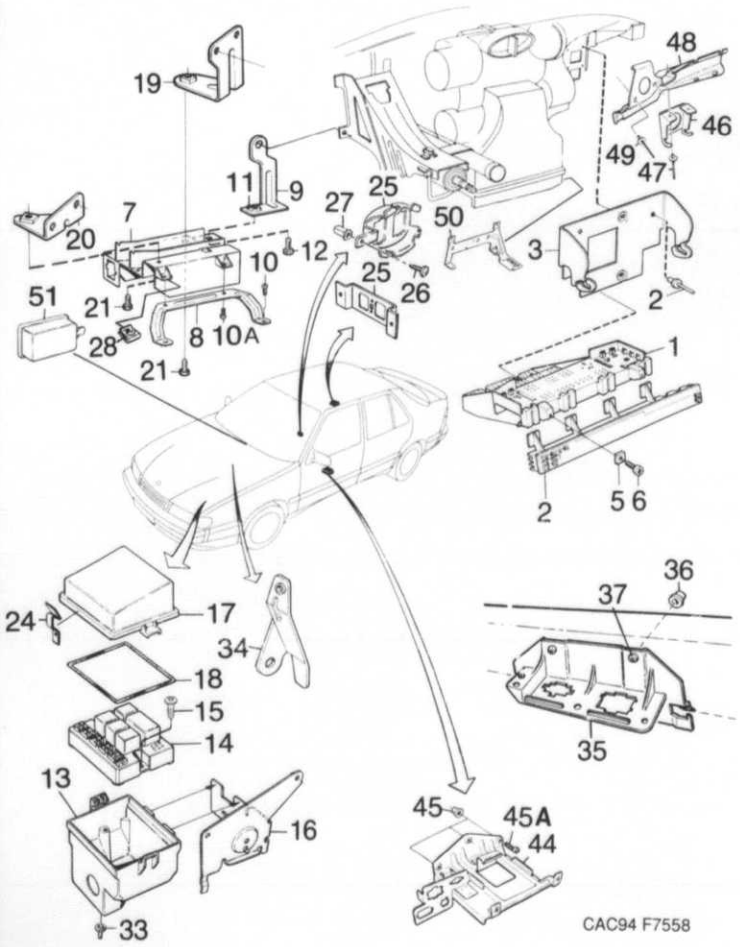

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 74 967		32)	1	Retainer	Hållare	5
0020	2	91 22 748		32), LHD	1	Retainer	Hållare	5
0030	2	91 22 755		32), RHD	1	Retainer	Hållare	5
0040	3	95 05 959			1	Bracket	Konsol	6
0050	3	95 08 441		RHD	1	Bracket	Konsol	6
0060	4	79 61 642			4	Rivet	Nit	5
0070	5	79 68 555			2	Clip nut	Clipsmutter	3
0080	6	79 22 297			2	Screw	Skruv	5
0090	7	41 09 856		-1995	1	Bracket	Konsol	6
0100	7	46 61 492		1996-	1	Bracket	Konsol	
0110	7	41 10 557		RHD	1	Bracket	Konsol	6
0120	8	95 26 328			1	Bracket	Hållare	6
0130	9	41 09 823			1	Bracket	Hållare	6
0140	9	41 09 823		14), SE, FI, EU, JP	1	Bracket	Hållare	6
0150	9	41 10 532		RHD	1	Bracket	Hållare	6
0160	10	79 22 354		-1995	4	Screw	Skruv	5
0170	10	79 22 354		1996-	2	Screw	Skruv	5
0180	10A	79 72 946		1996-	2	Screw	Skruv	5
0190	11	79 67 995			2	Clip nut	Clipsmutter	3
0200	12	80 59 578			1	Screw	Skruv	5
0210	12	79 78 372		14), SE, FI, EU, JP	1	Screw	Skruv	5
0220	12	79 78 372		14)	2	Screw	Skruv	5
0230	13	41 17 339		1994	1	Box	Box	4
0240	13	44 33 967		1995-	1	Box	Box	4
0250	14	41 11 480		1994	1	Bracket	Hållare	4
0260	14	44 34 023		1995-	1	Bracket	Hållare	4
0270	15	79 77 861			2	Screw	Skruv	5
0280	16			See page 3A-009, 2-A10		Bracket	Hållare	
0290	17	44 32 605		1994	1	Cover	Lock	3
0300	17	45 35 464		1995	1	Cover	Lock	3
0310	17	46 66 665		317), 1996-	1	Cover	Lock	3
0320	17	• 49 27 943		318)	1	Cover	Lock	3
0330	18	95 27 789			1	•Seal	•Tätning	6
0340	19	41 09 781		14)	1	Bracket	Hållare	6
0350	20	41 09 807		14)	1	Bracket	Hållare	6
0360	21	79 22 420		14)	4	Screw	Skruv	5
0370	24	91 23 316			X	Lock brace	Låsbygel	5
0380	25	41 75 360		-1995	1	Bracket	Konsol	4
0390	26	79 22 420		-1995	1	Screw	Skruv	5
0400	27	79 77 358			1	Press nut	Pressmutter	5
0410	28	94 61 070			2	Clip	Clips	5
0420	33	71 16 452			1	Draining plug	Dräneringsplugg	5
0430	34	44 32 589		TURBO	1	Stay	Stag	5
0440						plus wire	pluskabel	
0450	35	41 74 835			1	Bracket	Hållare	5
0460	36	79 77 358			2	Press nut	Pressmutter	5
0470	37	79 22 420			2	Screw	Skruv	5
0480								
0490	44	41 60 610			1	Bracket	Konsol	5
0500	44	43 92 494		9308	1	Bracket	Konsol	5
0510	45	40 87 128			3	Plastic nut	Plastmutter	5
0520	45A	79 78 091			3	Screw	Skruv	5
0530								
0540	46	44 32 761		14), 1994, LHD	1	Bracket	Konsol	6
0550	46	44 32 761		14), 1995-	1	Bracket	Konsol	6
0560	47	98 49 514			X	Rivet	Nit	5
0570								
0580	48	44 32 753		14), LHD	1	Bracket	Konsol	6
0590	48	44 32 779		1995-, RHD	1	Bracket	Konsol	6

14. AIR-BAG.
32. Part of main cable harness. Del av huvudledningsnät.
317. Ch -V1020066.
318. Ch V1020067-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H02

Holders and brackets

Hållare och konsoler

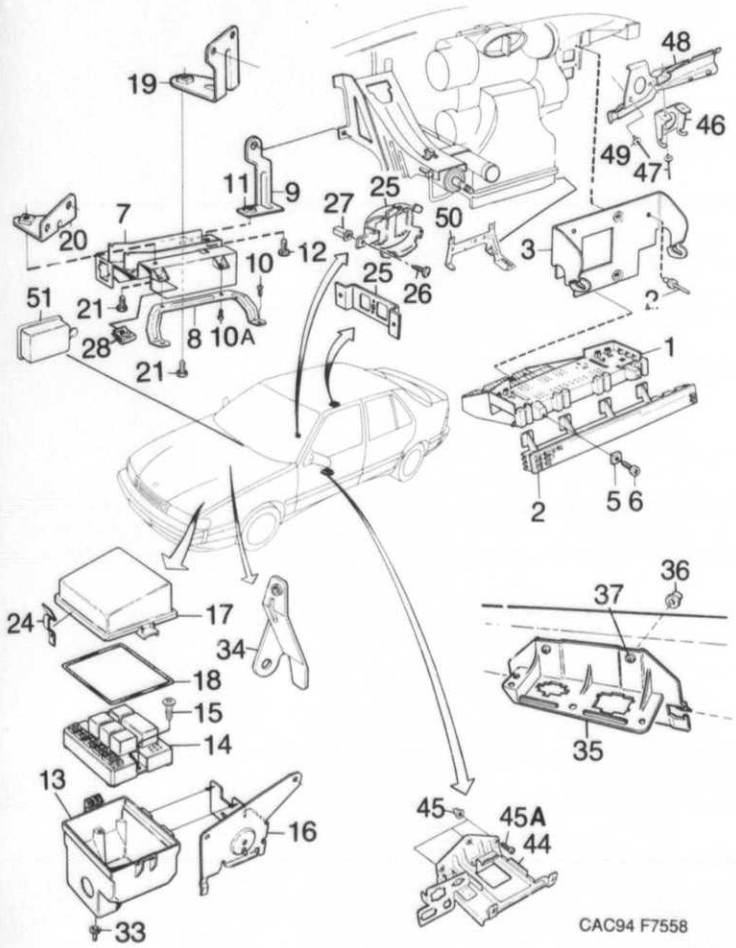

1210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	49	98 49 514			X	Rivet	Nit	5
0610								
0620	50	44 27 928		14), LHD	1	Bracket	Konsol	
0630	50	44 27 993		14), 1995-, RHD	1	Bracket	Konsol	
0640								
0650	51	45 16 548		SAI, SE, US, CA	1	Cover relay box	Lock reläbox	3
0660								

14. AIR-BAG.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H04

Relays and fuses 1994

Reläer och säkringar 1994

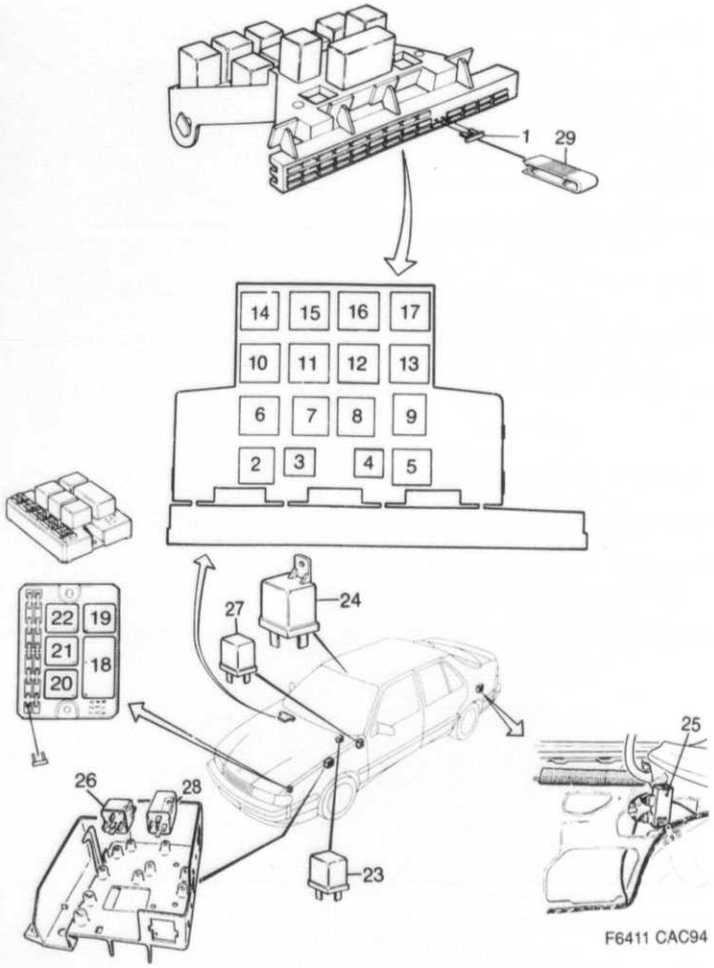

1247	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070	1	40 87 698		40A	X	Fuse	Säkring	1
0080								
0090	2	95 63 313		US	1	Buzzer	Summer	5
0100						seat belt warning	bältesvarning	
0110	3	85 22 310		204,236), AC, ACC	1	Relay	Relä	3
0120						pressure monitor	tryckvakt	
0130	3	85 33 176		204,237), AC, ACC	1	Relay	Relä	3
0140						pressure monitor	tryckvakt	
0150	4	85 53 463			1	Relay	Relä	6
0160						rear window wiper	bakrutetorkare	
0170						intermittent wiper	intervalltorkare	
0180	5	85 22 310		236)	1	Relay	Relä	3
0190						horn	signalhorn	
0200	5	85 33 176		237)	1	Relay	Relä	3
0210						horn	signalhorn	
0220	6	85 22 310		236)	1	Relay	Relä	3
0230						fuel pump	bränslepump	
0240	6	85 33 176		237)	1	Relay	Relä	3
0250						fuel pump	bränslepump	
0260	7	85 36 401		204), AC, ACC	1	Relay	Relä	3
0270	8	85 22 310		236)	1	Relay	Relä	3
0280						reverse lamp	backlampa	
0290	8	85 33 176		237)	1	Relay	Relä	3
0300						reverse lamp	backlampa	
0310	9	95 22 061			1	Relay	Relä	5
0320						starter switch	tändningslås	
0330	10	85 22 310		236)	1	Relay	Relä	3
0340						LH-system	LH-system	
0350	10	85 33 176		237)	1	Relay	Relä	3
0360						LH-system	LH-system	
0370	11	95 19 133		65)	1	Relay	Relä	4
0380						rear window	bakruta	
0390	11	85 22 310		26,236)	1	Relay	Relä	3
0400						rear window	bakruta	
0410	11	85 33 176		26,237)	1	Relay	Relä	3
0420						rear window	bakruta	
0430	12	85 33 176		ETS	1	Relay	Relä	3
0440						main relay	huvudrelä	
0450	13	85 22 310		236)	1	Relay	Relä	3
0460						fog light	dimljus	
0470	13	85 33 176		237)	1	Relay	Relä	3
0480						fog light	dimljus	
0490	14	85 53 463			1	Relay	Relä	6
0500						intermittent wiper	intervalltorkare	
0510	15	95 15 099		65)	1	Relay	Relä	4
0520						interior illum.	innerbelysning	
0530	16	41 11 522			1	Flasher relay	Blinkrelä	2
0540	16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0550	16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
0560	17	85 33 176		CA	1	Relay	Relä	3
0570						daylight driving lights	varselljus	

26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.
236. Ch -R1025003.
237. Ch R1025004-.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-H04

2-H06 Relays and fuses 1994

Reläer och säkringar 1994

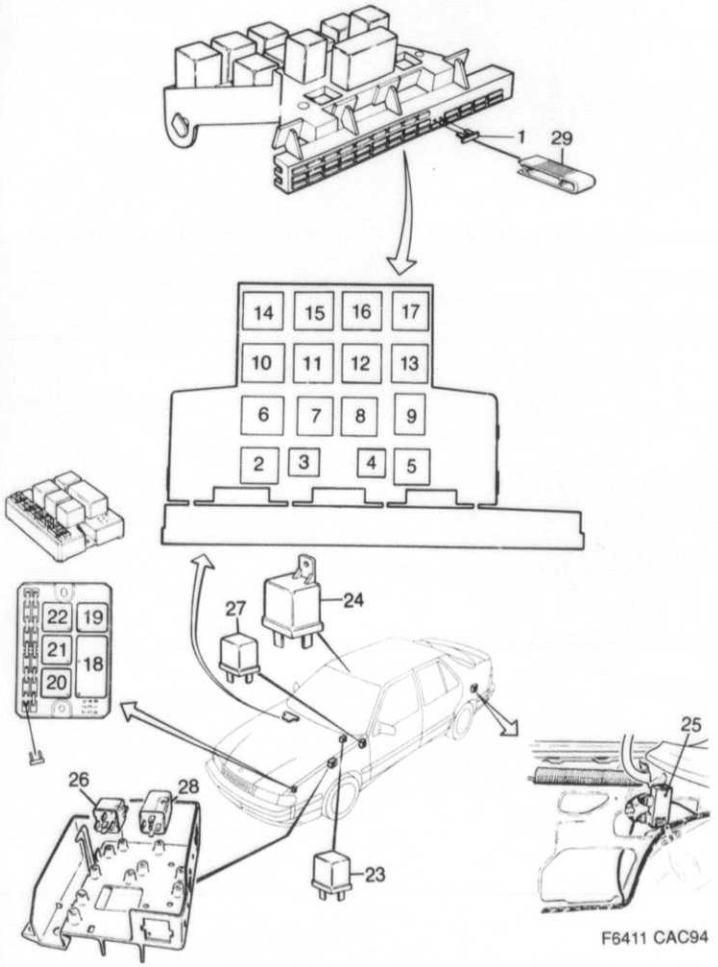

F6411 CAC94

1247	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	18	95 66 647			1	Relay	Relä	2
0590						light	ljus	
0600	19	41 09 070			1	Relay	Relä	5
0610						bulb check	lampkontroll	
0620	20	85 22 310		236), 5CS	1	Relay	Relä	3
0630						daylight driving lights	varselljus	
0640	20	85 33 176		237), 5CS	1	Relay	Relä	3
0650						daylight driving lights	varselljus	
0660	21	85 22 310		236)	1	Relay	Relä	3
0670						cooling fan	kylfläkt	
0680	21	85 33 176		237)	1	Relay	Relä	3
0690						cooling fan	kylfläkt	
0700	22	95 22 061			1	Relay	Relä	5
0710						cooling fan, 2-step	kylfläkt, 2-steg	
0720	23	85 22 310		5,28), LH2.2	1	Relay	Relä	3
0730				See page 2-169, 1-J02				
0740	24			See page 8A-013, 4-C14	X	Relay	Relä	
0750						sun roof	soltak	
0760	25	41 09 096		3,168)	1	Relay	Relä	5
0770						bulb check	lampkontroll	
0780	25	41 09 088		3,19)	1	Relay	Relä	5
0790						bulb check	lampkontroll	
0800	26	95 63 099			1	Relay	Relä	5
0810						rear window wiper	bakrutetorkare	
0820	27	41 13 163		JP	1	Relay	Relä	3
0830						overheated catalytic conv	överhettad katalysator	
0840	28	95 63 099		A, US, CA	1	Relay	Relä	5
0850						parking pawl	parkeringsspärr	
0860	28	43 50 799		B234 TURBO, PA	1	Relay	Relä	5
0870						lambda sonde	lambdasond	
0880	29	85 87 636			1	Fuse clip	Säkringsklämma	5

3. Rear. Bakre.
5. Without catalytic converter. Utan katalytisk reaktor.
19. High mounted stop light. Högt monterat stoppljus.
28. Part of choke kit 89 82 423. Del av choke sats 89 82 423.
168. Without high mounted stop light. Utan högt monterat stoppljus.
236. Ch -R1025003.
237. Ch R1025004-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H08

Relays and fuses 1995

Reläer och säkringar 1995

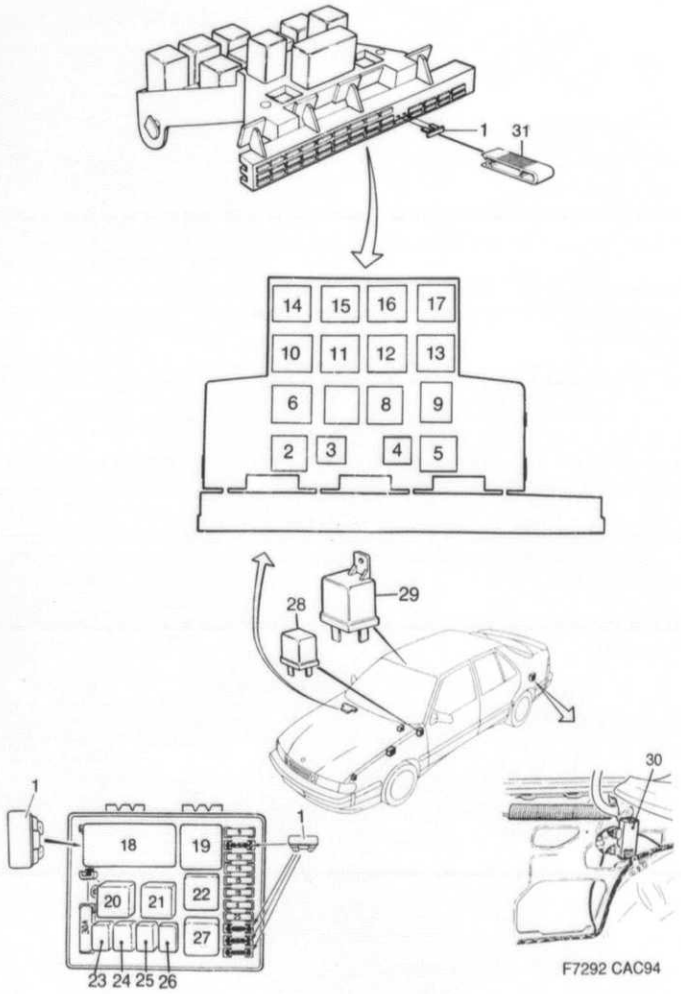

F7292 CAC94

1248	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070	1	79 83 034		30A MAXI	X	Fuse	Säkring	1
0080	1	40 87 698		40A	X	Fuse	Säkring	1
0090								
0100	2	95 63 313		US	1	Buzzer	Summer	5
0110						seat belt warning	bältesvarning	
0120	3	85 33 176		A, US, CA	1	Relay	Relä	3
0130						parking pawl	parkeringsspärr	
0140	4	85 53 463			1	Relay	Relä	6
0150						rear window wiper	bakrutetorkare	
0160						intermittent wiper	intervalltorkare	
0170	5	85 33 176			1	Relay	Relä	3
0180						washer pump	spolarpump	
0190						rear window wiper	bakrutetorkare	
0200	6	85 33 176			1	Relay	Relä	3
0210						fuel pump	bränslepump	
0220	8	85 33 176			1	Relay	Relä	3
0230						reverse lamp	backlampa	
0240	9	95 22 061			1	Relay	Relä	5
0250						starter switch	tändningslås	
0260	10	85 33 176			1	Relay	Relä	3
0270						engine management system	motorstyrsystem	
0280	11	95 19 133		65)	1	Relay	Relä	4
0290						rear window	bakruta	
0300	11	85 33 176		26)	1	Relay	Relä	3
0310						rear window	bakruta	
0320	12	85 33 176		ETS TURBO	1	Relay	Relä	3
0330						main relay	huvudrelä	
0340	13	85 33 176			1	Relay	Relä	3
0350						starter inhibitor	startspärr	
0360						theft alarm	stöldlarm	
0370	14	85 53 463			1	Relay	Relä	6
0380						intermittent wiper	intervalltorkare	
0390	15	95 15 099		65)	1	Relay	Relä	4
0400						interior illum.	innerbelysning	
0410	16	41 11 522			1	Flasher relay	Blinkrelä	2
0420	16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0430	16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
0440	17	85 33 176		CA	1	Relay	Relä	3
0450						daylight driving lights	varselljus	
0460	18	44 33 801			1	Relay	Relä	2
0470						light	ljus	
0480	19	41 09 070			1	Relay	Relä	5
0490						bulb check	lampkontroll	
0500	20	95 22 061		SAI	1	Relay	Relä	5
0510						air pump	luftpump	
0520	21	95 22 061			1	Relay	Relä	5
0530						cooling fan, 2-step	kylfläkt, 2-steg	
0540	22	85 36 401		204), AC, ACC	1	Relay	Relä	3
0550	23	42 24 192			1	Relay	Relä	6
0560						fog light	dimljus	
0570	24	42 24 192		AC, ACC	1	Relay	Relä	6
0580						pressure monitor	tryckvakt	
0590	25	42 24 192			1	Relay	Relä	6
0600						daylight driving lights	varselljus	

26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H10

Relays and fuses 1995

Reläer och säkringar 1995

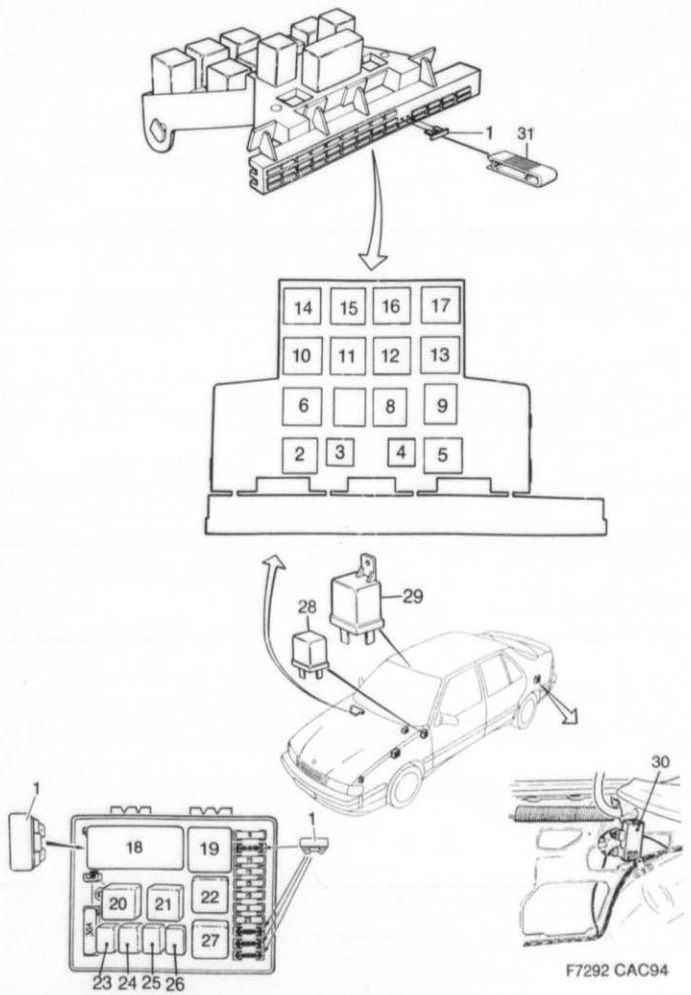

F7292 CAC94

1248	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	26	42 24 192			1	Relay	Relä	6
0620						horn	signalhorn	
0630	27	85 22 310			1	Relay	Relä	3
0640						cooling fan	kylfläkt	
0650	28	41 13 163		JP	1	Relay	Relä	3
0660						overheated catalytic conv	överhettad katalysator	
0670	29			See page 8A-013, 4-C14	X	Relay	Relä	
0680						sun roof	soltak	
0690	30	41 09 096		3,168,266)	1	Relay	Relä	5
0700						bulb check	lampkontroll	
0710	30	41 09 088		3,19,266)	1	Relay	Relä	5
0720						bulb check	lampkontroll	
0730	30	46 69 065		3,19,267)	1	Relay	Relä	5
0740						bulb check	lampkontroll	
0750	31	85 87 636			1	Fuse clip	Säkringsklämma	5


3. Rear. Bakre.
19. High mounted stop light. Högt monterat stoppljus.
168. Without high mounted stop light. Utan högt monterat stoppljus.
266. Ch -S1031661.
267. Ch S1031662-.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

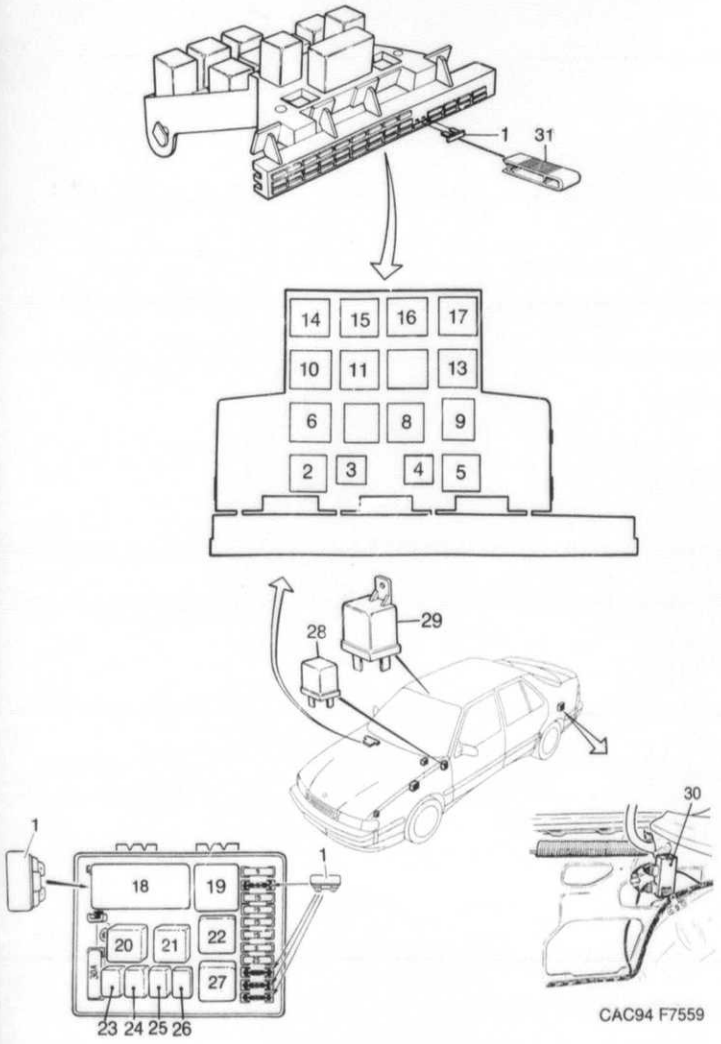

Wiring and fuses

2-H12 Relays and fuses 1996

Ledningar och säkringar

Reläer och säkringar 1996

1249	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070	1	79 83 034		30A MAXI	X	Fuse	Säkring	1
0080	1	40 87 698		40A	X	Fuse	Säkring	1
0090	1	79 83 067		60A MAXI	X	Fuse	Säkring	1
0100								
0110	2	95 63 313		US	1	Buzzer	Summer	5
0120						seat belt warning	bältesvarning	
0130	3	85 33 176		A, US, CA	1	Relay	Relä	3
0140						parking pawl	parkeringsspärr	
0150	4	85 53 463			1	Relay	Relä	6
0160						rear window wiper	bakrutetorkare	
0170						intermittent wiper	intervalltorkare	
0180	5	85 33 176			1	Relay	Relä	3
0190						washer pump	spolarpump	
0200						rear window wiper	bakrutetorkare	
0210	6	85 33 176			1	Relay	Relä	3
0220						fuel pump	bränslepump	
0230	8	85 33 176			1	Relay	Relä	3
0240						reverse lamp	backlampa	
0250	9	95 22 061			1	Relay	Relä	5
0260						starter switch	tändningslås	
0270	10	85 33 176			1	Relay	Relä	3
0280						engine management system	motorstyrsystem	
0290	11	95 19 133		65)	1	Relay	Relä	4
0300						rear window	bakruta	
0310	11	85 33 176		26)	1	Relay	Relä	3
0320						rear window	bakruta	
0330	13	85 33 176			1	Relay	Relä	3
0340						starter inhibitor	startspärr	
0350						theft alarm	stöldlarm	
0360	14	85 53 463			1	Relay	Relä	6
0370						intermittent wiper	intervalltorkare	
0380	15	95 15 099		65)	1	Relay	Relä	4
0390						interior illum.	innerbelysning	
0400	16	41 11 522			1	Flasher relay	Blinkrelä	2
0410	16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0420	16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
0430	17	85 33 176		US, CA	1	Relay	Relä	3
0440						daylight driving lights	varselljus	
0450	18	44 33 801			1	Relay	Relä	2
0460						light	ljus	
0470	19	41 09 070			1	Relay	Relä	5
0480						bulb check	lampkontroll	
0490	20	95 22 061		SAI	1	Relay	Relä	5
0500						air pump	luftpump	
0510	21	95 22 061			1	Relay	Relä	5
0520						cooling fan, 2-step	kylfläkt, 2-steg	
0530	22	85 36 401		204), AC, ACC	1	Relay	Relä	3
0540	23	42 24 192			1	Relay	Relä	6
0550						fog light	dimljus	
0560	24	42 24 192		AC, ACC	1	Relay	Relä	6
0570						pressure monitor	tryckvakt	
0580	25	42 24 192			1	Relay	Relä	6
0590						daylight driving lights	varselljus	

26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H14

Relays and fuses
1996

Reläer och säkringar
1996

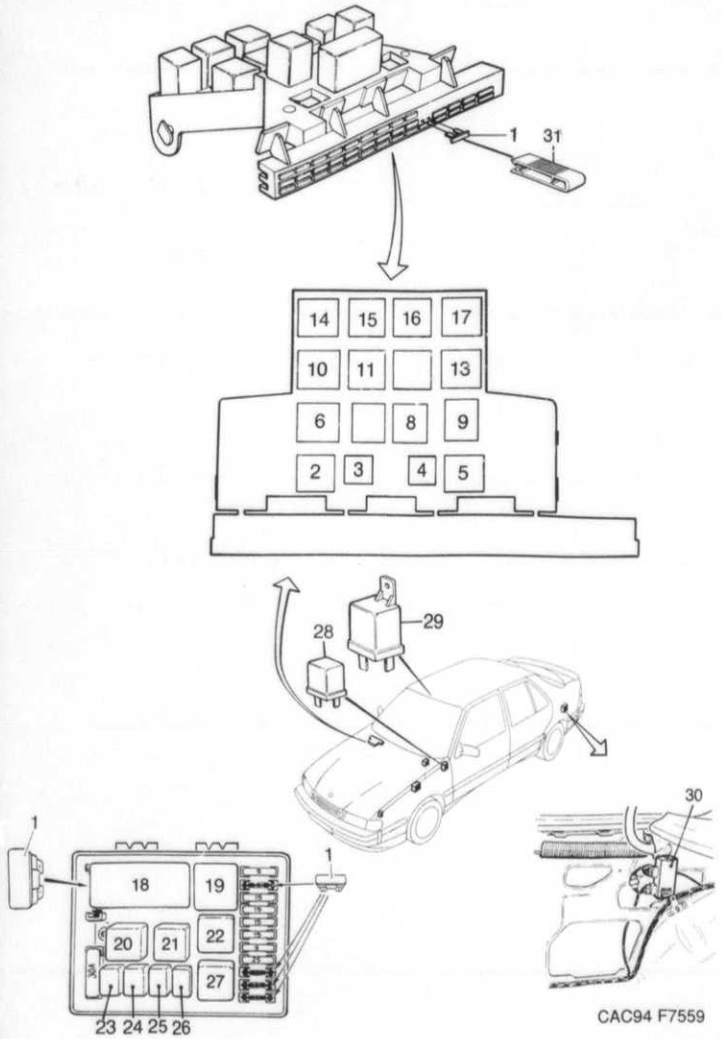

CAC94 F7559

1249	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0600	26	42 24 192			1	Relay	Relä	6
0610						horn	signalhorn	
0620	27	85 22 310			1	Relay	Relä	3
0630						cooling fan	kylfläkt	
0640	28	41 13 163		JP	1	Relay	Relä	3
0650						overheated catalytic conv	överhettad katalysator	
0660	29			See page 8A-013, 4-C14	X	Relay	Relä	
0670						sun roof	soltak	
0680	30	46 69 065		3,19)	1	Relay	Relä	5
0690						bulb check	lampkontroll	
0700	31	85 87 636			1	Fuse clip	Säkringsklämma	5

3. Rear. Bakre.
19. High mounted stop light. Högt monterat stoppljus.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H16 Relays and fuses 1997

Reläer och säkringar 1997

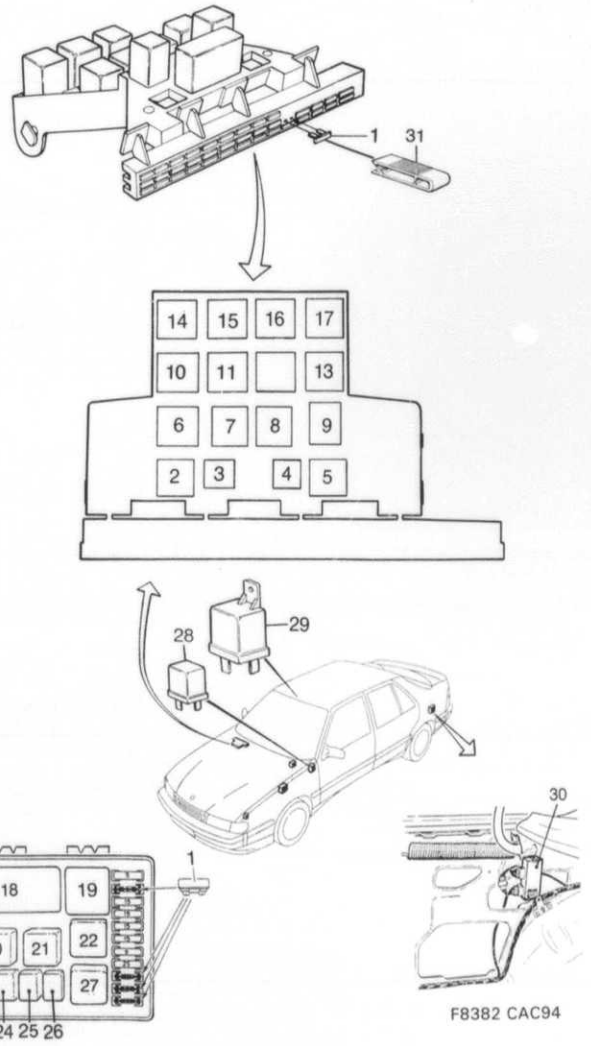

F8382 CAC94

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1	79 74 611		5A	X	Fuse	Säkring	1
1	79 74 637		10A	X	Fuse	Säkring	1
1	79 74 645		15A	X	Fuse	Säkring	1
1	79 74 652		20A	X	Fuse	Säkring	1
1	79 74 660		25A	X	Fuse	Säkring	1
1	79 74 678		30A	X	Fuse	Säkring	1
1	79 83 034		30A MAXI	X	Fuse	Säkring	1
1	40 87 698		40A	X	Fuse	Säkring	1
1	79 83 067		60A MAXI	X	Fuse	Säkring	1
2	95 63 313		US	1	Buzzer seat belt warning	Summer bältesvarning	5
3	85 33 176		A, US, CA	1	Relay parking pawl	Relä parkeringsspärr	3
4	85 53 463			1	Relay rear window wiper intermittent wiper	Relä bakrutetorkare intervalltorkare	6
5	85 33 176			1	Relay washer pump rear window wiper	Relä spolarpump bakrutetorkare	3
6	85 33 176			1	Relay fuel pump	Relä bränslepump	3
7	47 33 127			1	Relay rear fog light	Relä dimbaklykta	3
8	85 33 176			1	Relay reverse lamp	Relä backlampa	3
9	95 22 061			1	Relay starter switch	Relä tändningslås	5
10	85 33 176			1	Relay engine management system	Relä motorstyrsystem	3
11	95 19 133		65)	1	Relay rear window	Relä bakruta	4
11	85 33 176		26)	1	Relay rear window	Relä bakruta	3
13	85 33 176			1	Relay starter inhibitor theft alarm	Relä startspärr stöldlarm	3
14	85 53 463			1	Relay intermittent wiper	Relä intervalltorkare	6
15	95 15 099		65)	1	Relay interior illum.	Relä innerbelysning	4
16	41 11 522			1	Flasher relay	Blinkrelä	2
16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
17	85 33 176		US, CA	1	Relay daylight driving lights	Relä varselljus	3
18	44 33 801			1	Relay light	Relä ljus	2
19	41 09 070			1	Relay bulb check	Relä lampkontroll	5
20	95 22 061		SAI	1	Relay air pump	Relä luftpump	5
21	95 22 061			1	Relay cooling fan, 2-step	Relä kylfläkt, 2-steg	5
22	85 36 401		204), AC, ACC	1	Relay	Relä	3
23	42 24 192			1	Relay fog light	Relä dimljus	6
24	42 24 192		AC, ACC	1	Relay pressure monitor	Relä tryckvakt	6

26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H18

Relays and fuses *1997*

Reläer och säkringar *1997*

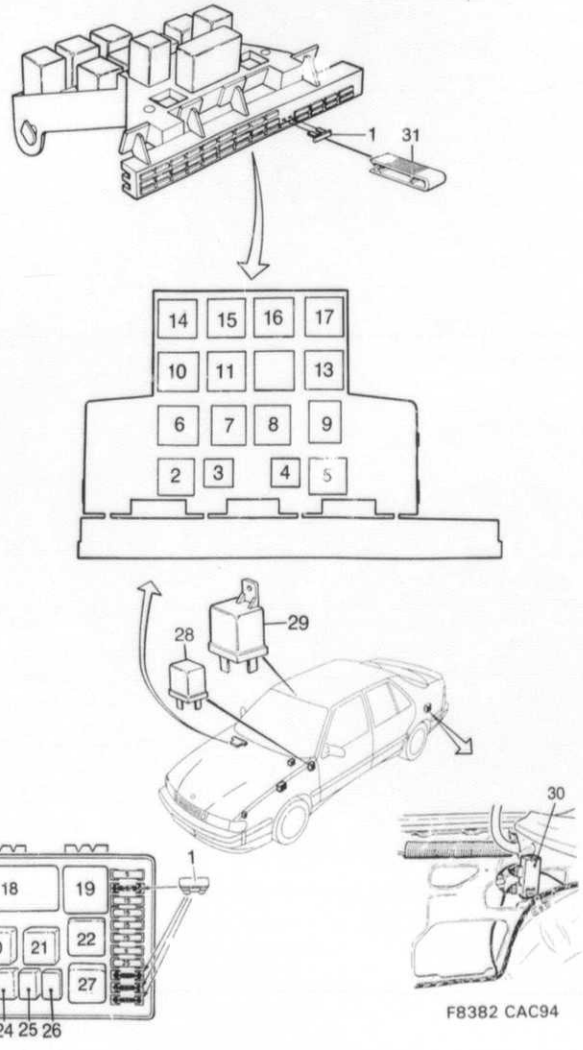

F8382 CAC94

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	25	42 24 192			1	Relay	Relä	6
0610						daylight driving lights	varselljus	
0620	26	42 24 192			1	Relay	Relä	6
0630						horn	signalhorn	
0640	27	85 22 310			1	Relay	Relä	3
0650						cooling fan	kylfläkt	
0660	28	41 13 163		JP	1	Relay	Relä	3
0670						overheated catalytic conv	överhettad katalysator	
0680	29			See page 8A-013, 4-C14	X	Relay	Relä	
0690						sun roof	soltak	
0700	30	46 69 065		3,19)	1	Relay	Relä	5
0710						bulb check	lampkontroll	
0720	31	85 87 636			1	Fuse clip	Säkringsklämma	5


3. Rear. Bakre.
19. High mounted stop light. Högt monterat stoppljus.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

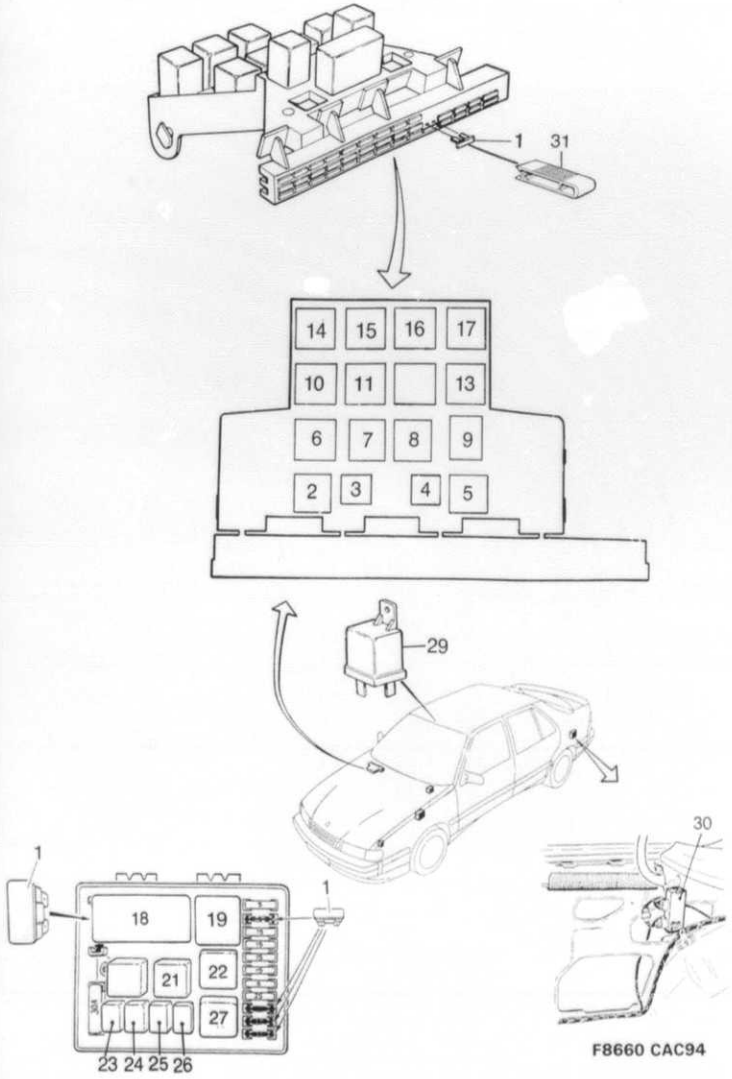

F8660 CAC94

Wiring and fuses

2-H20

Relays and fuses

1998

Ledningar och säkringar

Reläer och säkringar

1998

1252	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	79 74 611		5A	X	Fuse	Säkring	1
0020	1	79 74 637		10A	X	Fuse	Säkring	1
0030	1	79 74 645		15A	X	Fuse	Säkring	1
0040	1	79 74 652		20A	X	Fuse	Säkring	1
0050	1	79 74 660		25A	X	Fuse	Säkring	1
0060	1	79 74 678		30A	X	Fuse	Säkring	1
0070	1	79 83 034		30A MAXI	X	Fuse	Säkring	1
0080	1	40 87 698		40A	X	Fuse	Säkring	1
0090	1	79 83 067		60A MAXI	X	Fuse	Säkring	1
0100								
0110	2	95 63 313		US	1	Buzzer	Summer	5
0120						seat belt warning	bältesvarning	
0130	3	85 33 176		A, US, CA	1	Relay	Relä	3
0140						parking pawl	parkeringsspärr	
0150	4	85 53 463			1	Relay	Relä	6
C160						rear window wiper	bakrutetorkare	
0170						intermittent wiper	intervalltorkare	
0180	5	85 33 176			1	Relay	Relä	3
0190						washer pump	spolarpump	
0200						rear window wiper	bakrutetorkare	
0210	6	85 33 176			1	Relay	Relä	3
0220						fuel pump	bränslepump	
0230	7	47 33 127			1	Relay	Relä	3
0240						rear fog light	dimbaklykta	
0250	8	85 33 176			1	Relay	Relä	3
0260						reverse lamp	backlampa	
0270	9	95 22 061			1	Relay	Relä	5
0280						starter switch	tändningslås	
0290	10	85 33 176			1	Relay	Relä	3
0300						engine management system	motorstyrsystem	
0310	11	95 19 133		65)	1	Relay	Relä	4
0320						rear window	bakruta	
0330	11	85 33 176		26)	1	Relay	Relä	3
0340						rear window	bakruta	
0350	13	85 33 176			1	Relay	Relä	3
0360						starter inhibitor	startspärr	
0370						theft alarm	stöldlarm	
0380	14	85 53 463			1	Relay	Relä	6
0390						intermittent wiper	intervalltorkare	
0400	15	95 15 099		65)	1	Relay	Relä	4
0410						interior illum.	innerbelysning	
0420	16	40 69 985		5CS	1	Flasher relay	Blinkrelä	2
0430	16	41 14 971		5CS, US	1	Flasher relay	Blinkrelä	2
0440	17	85 33 176		US, CA	1	Relay	Relä	3
0450						daylight driving lights	varselljus	
0460	18	44 33 801			1	Relay	Relä	2
0470						light	ljus	
0480	19	41 09 070			1	Relay	Relä	5
0490						bulb check	lampkontroll	
0500	21	95 22 061			1	Relay	Relä	5
0510						cooling fan, 2-step	kylfläkt, 2-steg	
0520	22	85 36 401		204), AC, ACC	1	Relay	Relä	3
0530	23	42 24 192			1	Relay	Relä	6
0540						fog light	dimljus	
0550	24	42 24 192		AC, ACC	1	Relay	Relä	6
0560						pressure monitor	tryckvakt	
0570	25	42 24 192			1	Relay	Relä	6
0580						daylight driving lights	varselljus	
0590	26	42 24 192			1	Relay	Relä	6
0600						horn	signalhorn	

26. For cars with ACC. För bilar med ACC.
65. Timer relay. Tidrelä.
204. Compressor/Cooling fan. Kompressor/Kylfläkt.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H22 Relays and fuses 1998

Reläer och säkringar 1998

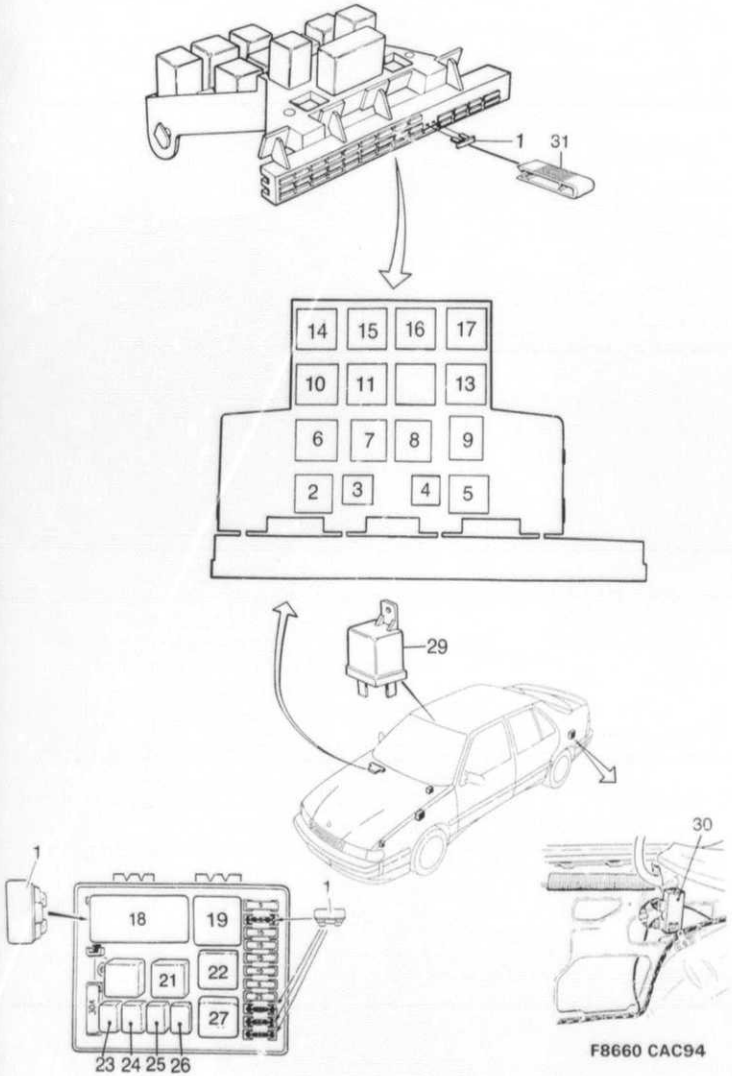

F8660 CAC94

1252	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	27	85 22 310			1	Relay	Relä	3
0620						cooling fan	kylfläkt	
0630	29			See page 8A-013, 4-C14	X	Relay	Relä	
0640						sun roof	soltak	
0650	30	46 69 065		3,19)	1	Relay	Relä	5
0660						bulb check	lampkontroll	
0670	31	85 87 636			1	fuse clip	Säkringsklämma	5

3. Rear. Bakre.
19. High mounted stop light. Högt monterat stoppljus.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-H24 *Instrument* *Instrument*

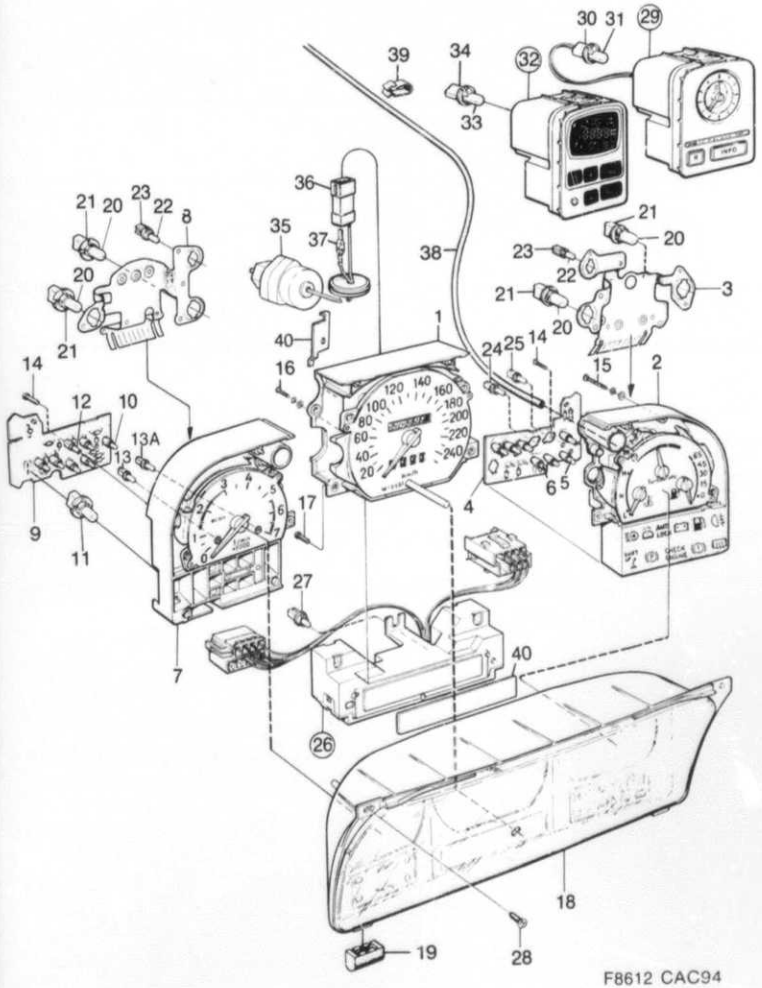

1255	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	44 28 546		254), -1995, TURBO, B308	1	Speedometer	Hastighetsmätare	4
0020				240KM/H,W=1,026,WH=0,620				
0030								
0040	1	*44 28 553*		254), -1995, I, 200 KM/H,	1	Speedometer	Hastighetsmätare	4
0050				W=0,637, WH=0,620 NLS –				
0050				USE 4428546				
0060								
0070	1	*44 28 553*		254), -1995, B204S,	1	Speedometer	Hastighetsmätare	4
0080				200KM/H,W=0,637,WH=0,620				
0080				NLS – USE 4428546				
0090								
0100	1	44 28 546		254), 1996-, 240 KM/H,	1	Speedometer	Hastighetsmätare	4
0110				W=1,026, WH=0,620				
0120								
0130	1	44 28 587		254), 135 MPH, W=1,026,	1	Speedometer	Hastighetsmätare	4
0140				WH=1,000, US				
0150								
0160	1	44 28 561		254), 140 MPH, W=1,0..,	1	Speedometer	Hastighetsmätare	4
0170				WH=1,000, GB				
0180								
0190	2	44 28 611		1994, TURBO	1	Combined instrument	Kombinationsinstrument	4
0200	2	45 18 676		1995-, TURBO	1	Combined instrument	Kombinationsinstrument	4
0210	2	44 28 645		1994, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0220	2	45 18 700		1995-, TURBO, US	1	Combined instrument	Kombinationsinstrument	4
0230	2	44 28 629		1994, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0240	2	45 18 684		1995-, TURBO, GB	1	Combined instrument	Kombinationsinstrument	4
0250	2	44 28 637		1994, TURBO, CA	1	Combined instrument	Kombinationsinstrument	4
0260	2	45 18 692		1995-, TURBO, CA	1	Combined instrument	Kombinationsinstrument	4
0270								
0280	2	44 28 652		1994, I	1	Combined instrument	Kombinationsinstrument	4
0290				B204S, B234E				
0300	2	45 18 718		1995-, I	1	Combined instrument	Kombinationsinstrument	4
0310				B204S, B204E, B234E				
0315	2	45 18 718		1995-1997, B308	1	Combined instrument	Kombinationsinstrument	4
0320	2	44 28 660		1994, I,	1	Combined instrument	Kombinationsinstrument	4
0330				B204S, B234E, GB				
0340	2	45 18 726		1995-, I,	1	Combined instrument	Kombinationsinstrument	4
0350				B204S, B204E, B234E,				
0360	2	45 18 726		-1997, B308, GB		Combined instrument	Kombinationsinstrument	4
0370	2	44 28 686		1994, I, US	1	Combined instrument	Kombinationsinstrument	4
0380	2	45 18 742		1995-, I, US	1	Combined instrument	Kombinationsinstrument	4
0385	2	45 18 742		1995-1997, B308, US	1	Combined instrument	Kombinationsinstrument	4
0390	2	44 28 678		1994, I, CA	1	Combined instrument	Kombinationsinstrument	4
0400	2	45 18 734		1995-1997, I, B308, CA	1	Combined instrument	Kombinationsinstrument	4
0410	3	44 36 101		1994	1	.Foil	.Folie	5
0420	3	45 18 650		1995-	1	.Foil	.Folie	5
0430	4	44 36 127			1	.Circuit board	.Kretskort	6
0440	4	44 36 119		US, CA	1	.Circuit board	.Kretskort	6
0450	5	95 09 175		40/238 298 004	6	.Bulb	.Glödlampa	6
0460	6	95 14 894		40/238 303 002	3	.Bulb	.Glödlampa	6
0470	7	44 28 512		4-CYL	1	Tachometer	Varvräknare	4
0480	7	44 27 506		6-CYL	1	Tachometer	Varvräknare	4
0490	8	44 36 093			1	.Foil	.Folie	5
0500	9	40 84 166			1	.Circuit board	.Kretskort	6
0510	10	95 09 175		40/238 298 004	9	.Bulb	.Glödlampa	6
0520	11	95 13 888		40/238 302 004	1	.Bulb	.Glödlampa	3
0530	12	95 14 894			1	.Bulb	.Glödlampa	6
0540	13	*95 25 767*		NLS	1	.Bulb	.Glödlampa	
0550						bulb check	lampkontroll	
0560	13A	*95 25 767*		NLS	1	.Bulb	.Glödlampa	
0570						TCS	TCS	
0580	14	95 06 619			3	Screw	Skruv	5

254. State mileage. Uppge vägmätarställning.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-I02 *Instrument* *Instrument*

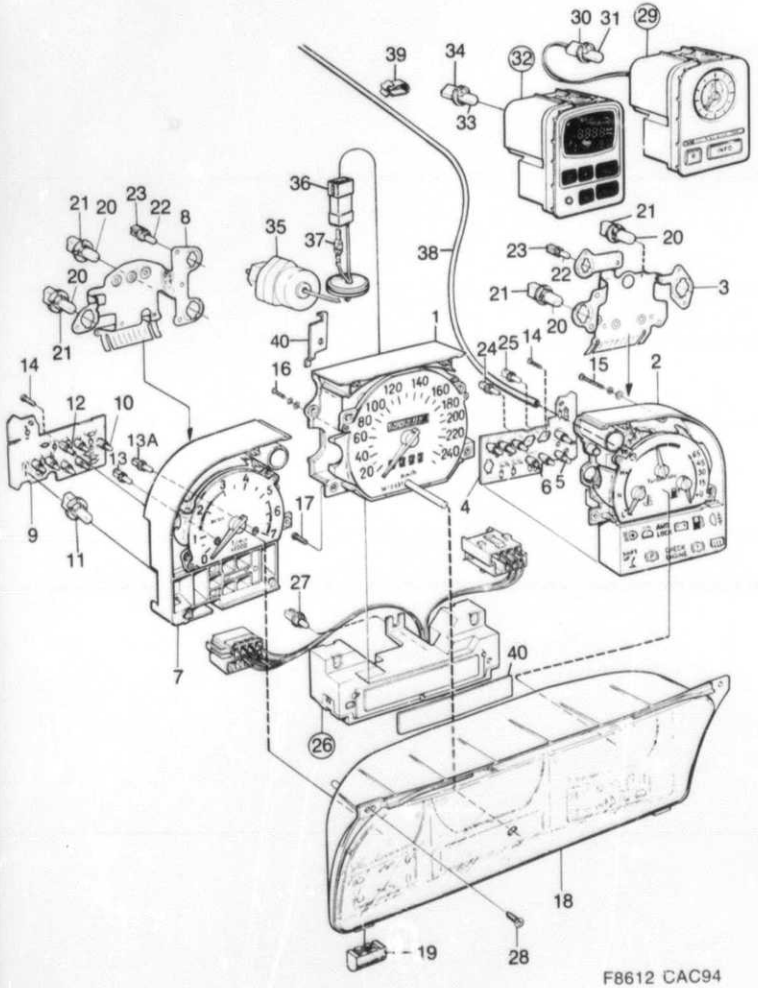

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
15	95 05 553			6	Screw	Skruv	5
16	95 05 561			2	Screw	Skruv	5
17	95 08 862			2	Screw	Skruv	5
18	40 68 078			1	Casing	Hus	6
19	95 05 298			2	Support	Stöd	6
20	95 05 116		40/238 288 005	4	Bulb	Glödlampa	4
21	95 05 520			4	Bulb socket	Lamphållare	4
22	95 05 538			2	Bulb	Glödlampa	4
23	95 05 546			2	Bulb socket	Lamphållare	4
24	85 68 693		40/238 286 017	1	Bulb	Glödlampa	4
25	85 66 853			1	Bulb	Glödlampa	4
26	44 37 208		7), 1994, EDU 3, M	1	Display	Display	5
26	44 38 222		1995, EDU 3, M	1	Display	Display	5
26	47 10 034		1996-,272), EDU 3, M	1	Display	Display	5
26	47 10 059		273,279), EDU 3, M	1	Display	Display	5
26	47 11 529		280), EDU 3, M	1	Display	Display	
26	44 37 216		7), 1994, EDU 3, A	1	Display	Display	5
26	44 38 230		1995, EDU 3, A	1	Display	Display	5
26	47 10 042		1996-,272), EDU 3, A	1	Display	Display	5
26	47 10 067		273,279), EDU 3, A	1	Display	Display	5
26	47 11 537		280), EDU 3, A	1	Display	Display	
27	85 66 853		1994	3	.Bulb	.Glödlampa	4
27	40 87 482		1995-	3	.Bulb	.Glödlampa	3
28	79 70 536			2	Screw	Skruv	6
29	95 13 334			1	Clock	Klocka	5
30	95 05 520			1	.Bulb socket	.Lamphållare	4
31	95 05 116		40/238 288 005	1	.Bulb	.Glödlampa	4
32	44 37 224		7), 1994, SCC	1	Driving computer	Färddator	4
32	45 19 443		1995-, SCC	1	Driving computer	Färddator	4
33	40 84 547			2	.Bulb	.Glödlampa	4
34	40 85 775			2	.Bulb socket	.Lamphållare	4
35	40 83 804			1	Sensor	Givare	8
36	41 13 262			1	.Connector housing 2-pole, male	.Kontakthus 2-polig, stift	4
37	41 15 192			1	.Cable terminal	.Kabelsko	8
38	91 36 243		5), TURBO, L=240 MM	1	Vaccum hose	Vakuumslang	5
38	91 36 243		5), TURBO, RHD, L=1160MM	1	Vaccum hose	Vakuumslang	5
39	71 08 491		5), TURBO, RHD	1	Clamp	Klammer	5
40	45 19 070		-1997, 6-CYL. M	1	Bracket	Hållare	6
			SCC	X	Driving computer	Färddator	
			See page 3A-195, 2-I04		kit	sats	
	91 36 243		L=5000 MM	X	Vaccum hose	Vakuumslang	5


5. Without catalytic converter. Utan katalytisk reaktor.
7. Also available as exchange unit. Finns även som utbytesenhet.
199. Ch -N1034646.
272. Ch -T1015307.
273. Ch T1015308-.
279. CH -V1002536.
280. CH V1002537-.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

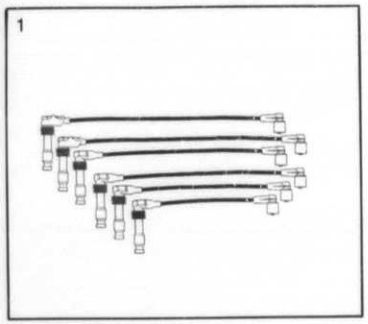

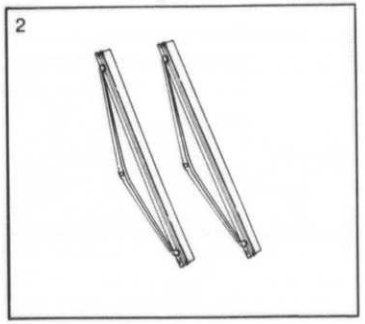

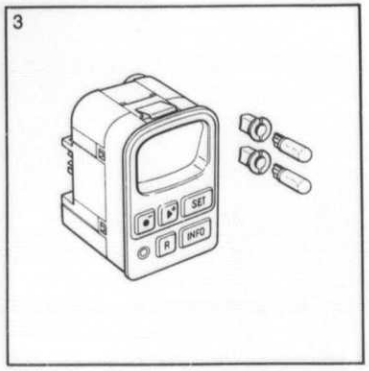







F7479 CAC94

Complete sets

2-I04 *Electrical system*

Satser

Elektriskt system

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 70 194		6-CYL.	X	Kit ignition cables	Tändkabelsats	8
0020						cyl. 1, 3, 5	cyl. 1, 3, 5	
0030								
0040	1	47 70 178		6-CYL.	X	Kit ignition cables	Tändkabelsats	8
0050						cyl. 2, 4, 6	cyl. 2, 4, 6	
0060								
0070	2	85 48 042		1994, 4D	X	Wiper blade kit	Torkarbladssats	2
0080						headlamp wiper	strålkastartorkare	
0090		40 95 063			2	.Wiper blade	.Torkarblad	2
0100								
0110	2	85 48 299		1994, 5CS	X	Wiper blade kit	Torkarbladssats	2
0120						headlamp wiper	strålkastartorkare	
0130		90 82 587			2	.Wiper blade	.Torkarblad	2
0140		95 58 149			2	.Adapter	.Adapter	5
0150								
0160	2	85 48 299		1995-	X	Wiper blade kit	Torkarbladssats	2
0170						headlamp wiper	strålkastartorkare	
0180		90 82 587			2	.Wiper blade	.Torkarblad	2
0190		95 58 149			2	.Adapter	.Adapter	5
0200								
0210	2	85 48 281		1994, 5CS, US	X	Wiper blade kit	Torkarbladssats	2
0220						headlamp wiper	strålkastartorkare	
0230		85 49 180			2	.Wiper blade	.Torkarblad	2
0240		95 58 149			2	.Adapter	.Adapter	5
0250								
0260	2	85 48 281		1995-	X	Wiper blade kit	Torkarbladssats	2
0270						headlamp wiper	strålkastartorkare	
0280		85 49 180			2	.Wiper blade	.Torkarblad	2
0290		95 58 149			2	.Adapter	.Adapter	5
0300								
0310	2	85 47 408		1994, 4D, US	X	Wiper blade kit	Torkarbladssats	2
0320						headlamp wiper	strålkastartorkare	
0330		91 20 882			2	.Wiper blade	.Torkarblad	2
0340								
0350	3	44 37 224		1994, SCC	X	Driving computer	Färddator	4
0360		40 84 547			2	.Bulb	.Glödlampa	4
0370		40 85 775			2	.Bulb socket	.Lamphållare	4
0380								
0390	3	45 19 443		1995-, SCC	X	Driving computer	Färddator	4
0400		40 84 547			2	.Bulb	.Glödlampa	4
0410		40 85 775			2	.Bulb socket	.Lamphållare	4
0420								
0430	4	85 47 564			X	Profiled rubber kit	Gummiprofilsats	2
0440						windscreen wiper	vindrutetorkare	
0450		95 26 310		1)	2	.Profile	.Profil	2
0460								
0470	4	44 48 064		221), PA	X	Profiled rubber kit	Gummiprofilsats	2
0480						windscreen wiper	vindrutetorkare	
0490		95 26 310		1)	2	.Profile	.Profil	2
0500								
0510	5	85 49 305		LHD	X	Wiper blade kit	Torkarbladssats	1
0520						windscreen wiper	vindrutetorkare	
0530		43 81 844			2	.Wiper blade	.Torkarblad	3
0540								
0550	5	85 49 354		RHD	X	Wiper blade kit	Torkarbladssats	1
0560						windscreen wiper	vindrutetorkare	
0570		43 81 851			2	.Wiper blade	.Torkarblad	3
0580								
0590	6	85 47 846		1994	X	Lamp adjustment kit	Ljusregleringssats	5
0600		95 27 904			1	.Switch	.Strömställare	3

1. Not as separate spare part. Ej som separat reservdel.
221. Synthetic rubber. Syntetiskt gummi.


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

2-I06

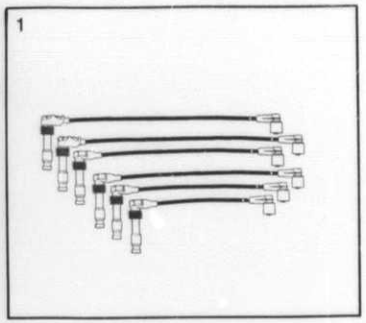

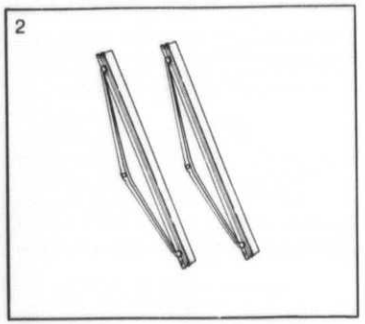

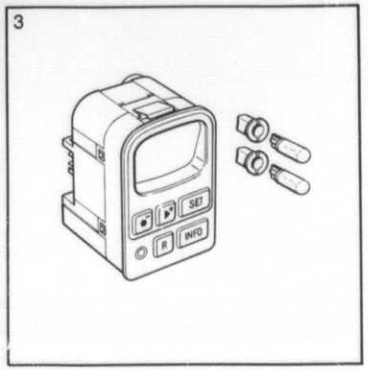







F7479 CAC94


1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610		95 66 662			2	.Electric motor	.Elmotor	3
0620		95 03 327			1	..Contact housing 3-pole, female	..Kontakthus 3-polig, hylsa	4
0630								
0640		95 29 793			1	..Sealing ring	..Tätningsring	
0650		95 69 963			1	..Adapter	..Adapter	5


MASTER INDEX


0	General	1-Au2
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3A GROUP INDEX


Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

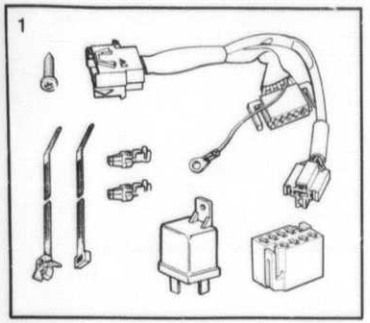


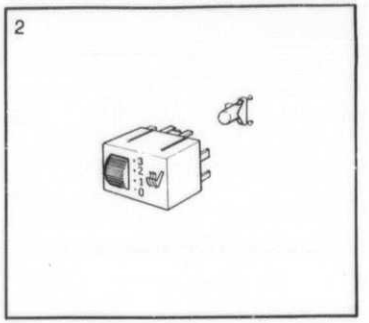

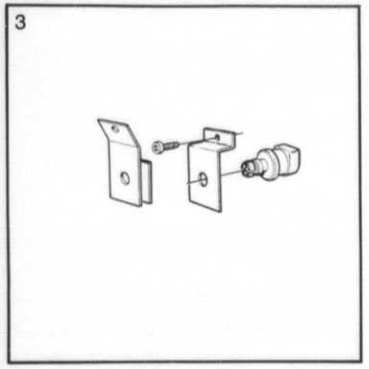

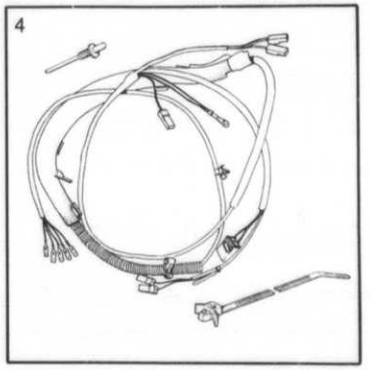

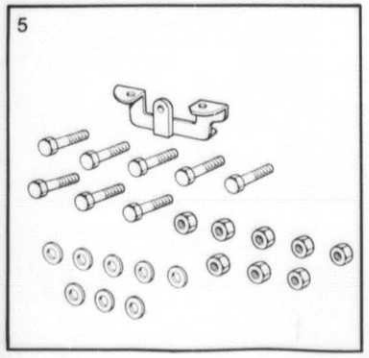

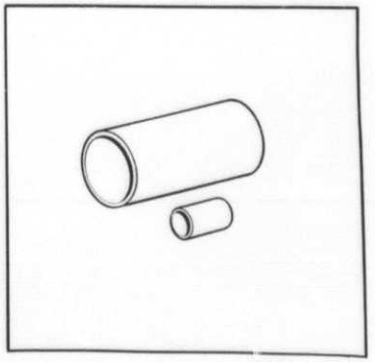

CAC94 F7560

Complete sets
Electrical system

Satser
Elektriskt system

2-I08

1510	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	85 48 075		A	X	Starter inhibitor kit	Startspärrsats	4
0020		79 70 601			1	.Screw	.Skruv	5
0030		79 71 864			1	.Tensioning band	.Spännband	5
0040		95 33 697			1	.Contact housing	.Kontakthus	
0050		85 48 059		1)	1	.Cable harness	.Ledningsnät	5
0060		95 63 099			1	.Relay	.Relä	5
0070								
0080	2	40 84 554		147), -1995	X	Switch button kit	Strömställarknapp sats	5
0090								
0100		85 49 263		1)	1	Cover	Kåpa	5
0110		85 49 271		1)	1	Button	Knapp	5
0120		85 49 289		1)	1	Bulb	Glödlampa	4
0130								
0140	3	85 48 471		27), I	X	Temperature sensor kit	Temperaturgivarsats	
0150		79 22 271			1	.Screw	.Skruv	5
0160		91 23 456			1	.Sensor	.Givare	4
0170		95 14 183			1	.Bracket	.Hållare	6
0180		95 69 781			1	.Bracket	.Hållare	6
0190								
0200	4	85 48 554		-1997, 4D	X	Conversion kit boot lid	Ombyggnadssats bagagerumslucka	6
0210								
0220		43 53 538			1	.Cable cover	.Kabelhölje	4
0230		43 54 817			1	.Hose	.Slang	4
0240		*79 78 034*		NLS	1	.Blind rivet screw	.Blindnitskruv	5
0250		85 52 663			1	.Tensioning band	.Spännband	5
0260								
0270	5	45 21 035		1994, 4D, B234 I, SAI	X	Mounting kit front fog light	Monteringssats dimstrålkastare	3
0280								
0290								
0300	6	46 68 737			X	Shrink hose kit	Krympslang sats	4
0310								

1. Not as separate spare part. Ej som separat reservdel.
27. For cars without ACC. För bilar utan ACC.
147. Rheostat. Reostat.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3A GROUP INDEX

Battery	2-A10
Alternator	2-A12
Starter	2-A22
Ignition system	2-B02
Lighting	2-B10
Electrical equipment, other	2-C14
Wiring and fuses	2-E12
Complete sets	2-I04

3-A02

3B

Electrical, contact housing
Elektriskt, kontakthus
Electrico, caja contacto

TABLE OF CONTENTS

Connectors

Connectors etc, 1994	3B : 5	3-A06
Connectors etc, 1995	3B : 27	3-B04
Connectors etc, 1996	3B : 49	3-C02
Connectors etc, 1997-	3B : 71	3-C24

Cable terminals

Cable terminals, 1994	3B : 97	3-E02
Cable terminals, 1995	3B : 107	3-E12
Cable terminals, 1996	3B : 117	3-E22
Cable terminals, 1997-	3B : 127	3-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-A03

INNEHÅLLSFÖRTECKNING

Kontakthus

Kontakthus etc, 1994	3B : 5	3-A06
Kontakthus etc, 1995	3B : 27	3-B04
Kontakthus etc, 1996	3B : 49	3-C02
Kontakthus etc, 1997-	3B : 71	3-C24

Ledningsskor

Ledningsskor, 1994	3B : 97	3-E02
Ledningsskor, 1995	3B : 107	3-E12
Ledningsskor, 1996	3B : 117	3-E22
Ledningsskor, 1997-	3B : 127	3-F08

3-A04

SUMARIO

Contactores

Contactores etc, 1994	3B : 5	3-A06
Contactores etc, 1995	3B : 27	3-B04
Contactores etc, 1996	3B : 49	3-C02
Contactores etc, 1997-	3B : 71	3-C24

Terminal cable


Terminal cable etc, 1994	3B : 97	3-E02
Terminal cable etc, 1995	3B : 107	3-E12
Terminal cable etc, 1996	3B : 117	3-E22
Terminal cable etc, 1997-	3B : 127	3-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical ister	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

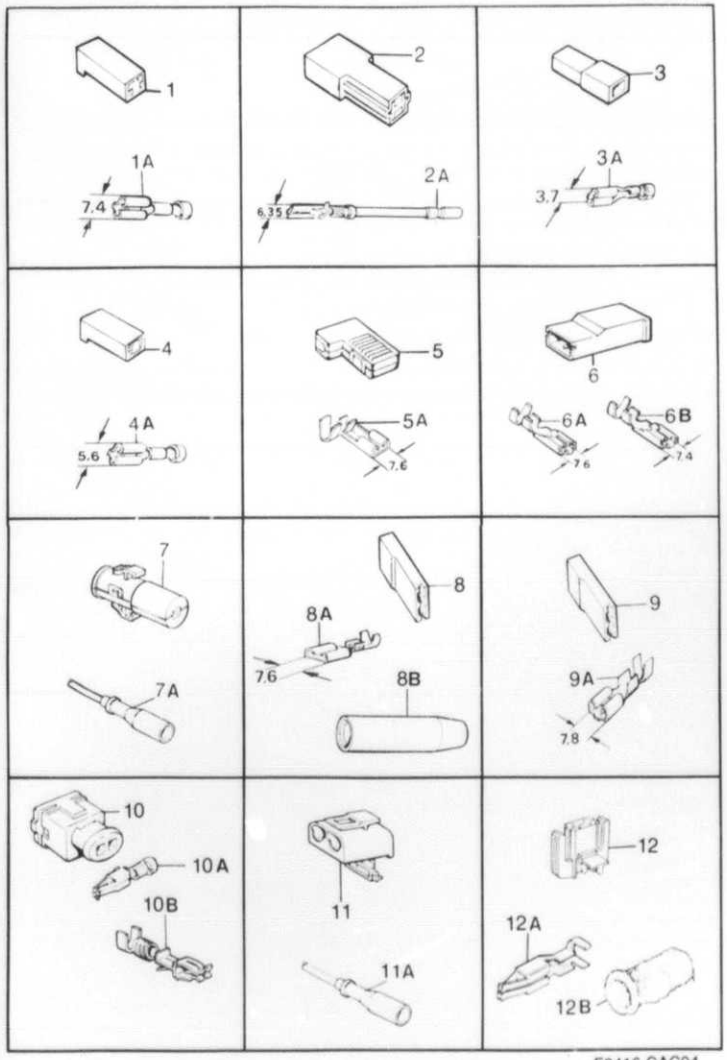

F6416 CAC94

Wiring and fuses

3-A06

Contact housing etc

1994

Ledningar och säkringar

Kontakthus etc

1994


Pos	Part No/Art nr	K ö	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	71 55 112		IGNITION PULS, LIGHT GEAR INDICATOR, HIGH MOUNTED STOP LIGHT, MAKE UP MIRROR	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
2	71 55 120		EL MIRROR, EL-CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
4	85 33 184		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
5	85 21 692		REAR DEMIST, GROUND	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
5A	*85 21 684*		AREA, 1,0-2,5 MM2 NLS - USE 8522526	X	Cable terminal	Kabelsko	5
6	85 41 229		LIGHT INSTEP, LIGHT NUMBER PLATE, GLOVE COMPARTMENT LIGHT, READING LAMP, SEAT BELT WARNING, SWITCH SPOT LIGHT	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
7	95 03 418		COMPRESSOR	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
7A	85 47 796			X	Connector	Skarvstycke	5
8	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, HORN, LIGHT LUGGAGE COMPARTMENT, SWITCH HAND BRAKE, JOINT, FOG LIGHT, JOINT PIECE REAR DOOR, ANTI THEFT ALARM	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
8B	95 69 997			X	Protection	Skydd	4
9	83 78 630		PEDAL CONTACT SPEED CONTROL, JOINT PIECE BRAKE,JOINT PIECE CLUTCH	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
9A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable harness	Ledningsnät	5
10	85 93 899		AUXILIARY AIR VALVE, FUEL SYSTEM, VENTILATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
10A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
10B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

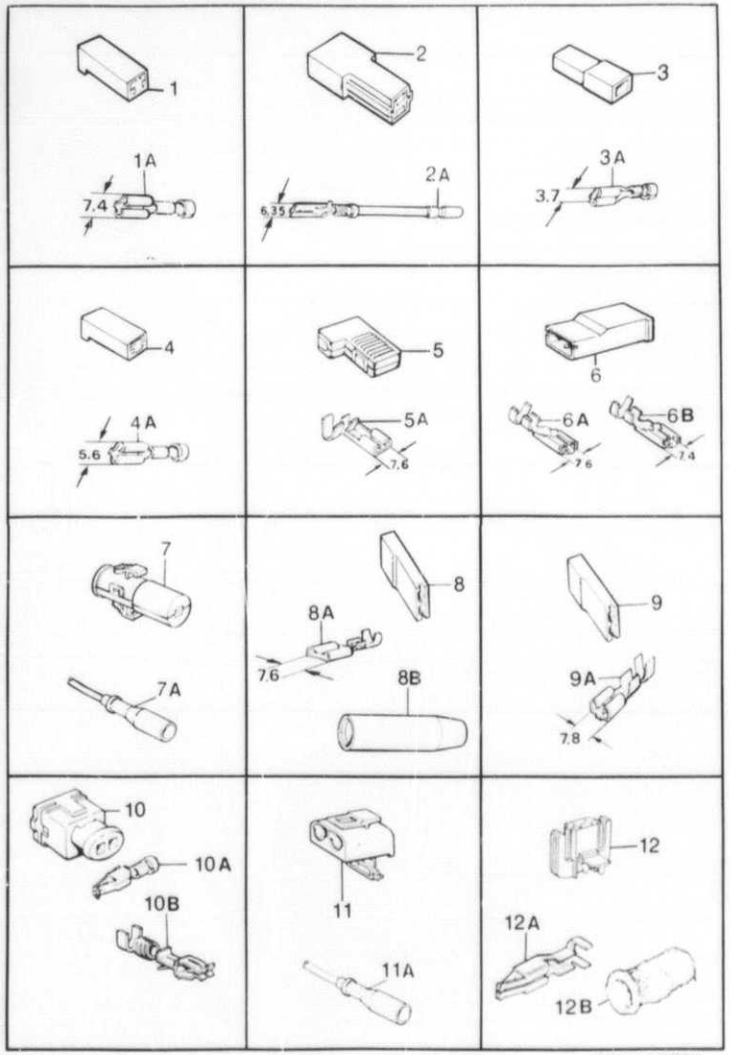

F6416 CAC94

Wiring and fuses

3-A08

Contact housing etc

1994

Ledningar och säkringar

Kontakthus etc

1994


1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0550	11	95 03 319		EL. WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0560				STD FAN, LEVEL GUARD		2-pole, female	2-polig, hylsa	
0570				RADIATOR, LEVEL SWITCH,				
0580				WASHER MOTOR, FAN AC,				
0590				FOG LIGHT, JOINT PIECE,				
0600				OUTER TEMP, JOINT PIECE				
0610				THERMO CONTACT, MICRO				
0620				SWITCH, FAN, FOG LIGHT				
0630				EXTRA, ABS, BY-PASS,				
0640				THEFT ALARM, JOINT PIECE				
0650				TRUNK LID, DOOR FAN, DAY				
0660				DRIVING LIGHT				
0670	11A	85 47 796			X	Connector	Skarvstycke	5
0680								
0690	12	91 24 157		LIGHT MIRROR, ACC, LIGHT	X	Contact housing	Kontakthus	4
0700				CONTROLS, FAN AC, JOINT		2-pole, female	2-polig, hylsa	
0710				TRUNK LID, CENTRAL LOCK				
0720				TANK HATCH, DOME LAMP,				
0730				BELT TENSIONER				
0740	12A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0750	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0760	12B	*95 68 775*		NLS	X	Insulation	Isolering	4

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

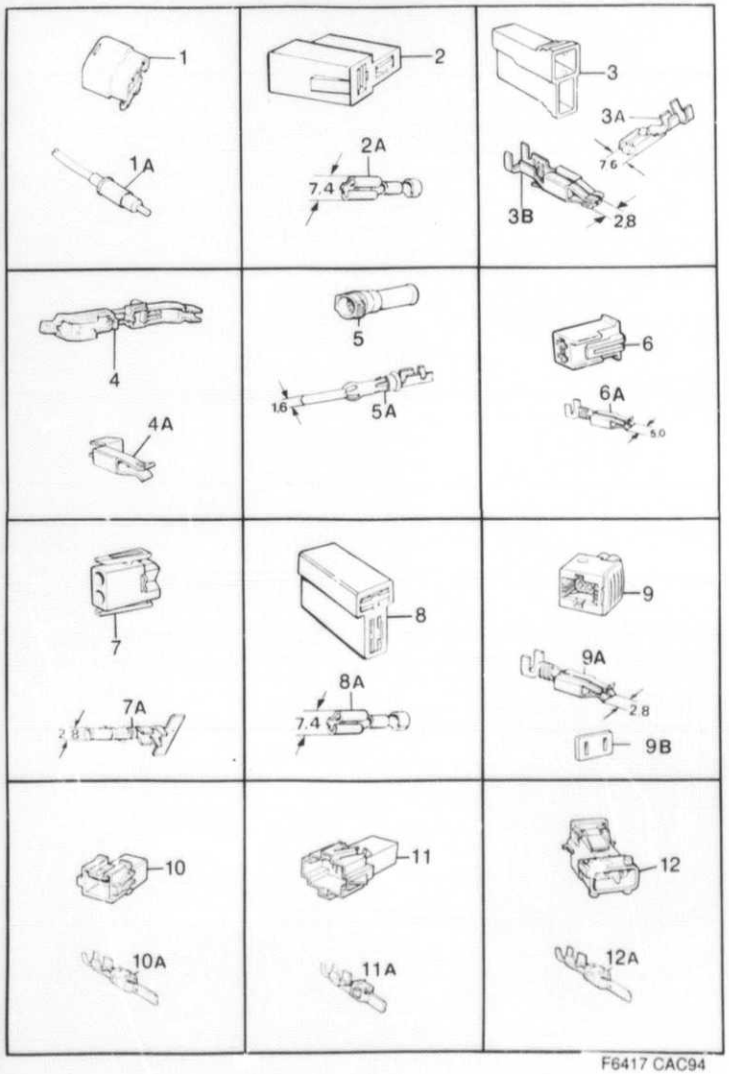

F6417 CAC94


1655	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 01 685		JOINT PIECE, ENGINE COMPARTMENT LIGHT, SWITCH LUGGAGE COMPARTMENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0050	1A	85 47 770			X	Connector	Skarvstycke	5
0070	2	85 58 538		CIGARETTE LIGHTER,	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0090	2A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0110	3	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0130	3A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0140	3B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0160	4	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0180	4A	95 52 191			X	Cable terminal	Kabelsko	5
0200	5	95 19 406		SENSOR ABS	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0220	5A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	8
0240	6	91 23 548		SIGNAL, THEFT ALARM, CONTROL LAMP LIGHT, LOUDSPEAKER, BY-PASS, DOOR SWITCH,LIGHT CENTRE CONSOL, SOLENOID IGNITION LOCK, CODING EXTRA LIGHTS, GLOVE COMPARTMENT LAMP, SHIFT-LOCK	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0320	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0340	7	95 25 809		INFLATOR AIR-BAG	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0360	7A	95 25 817		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0380	8	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0400	8A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0420	9	41 13 205		JOINT PIECE ABS UNIT, SPEED SENSOR, RESISTOR DAY DRIVING LIGHT, HORN	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0450	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0460	9B	41 14 310			X	Seal	Tätning	5
0480	10	41 17 164		JOINT PIECE TEMP SENSOR, SIDE INDICATOR LAMP, SHIFT-LOCK, JOINT PICE	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0510	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0530	11	41 17 560		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0550	11A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0570	12	41 74 264		AIR-BAG PASSANGER	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0590	12A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

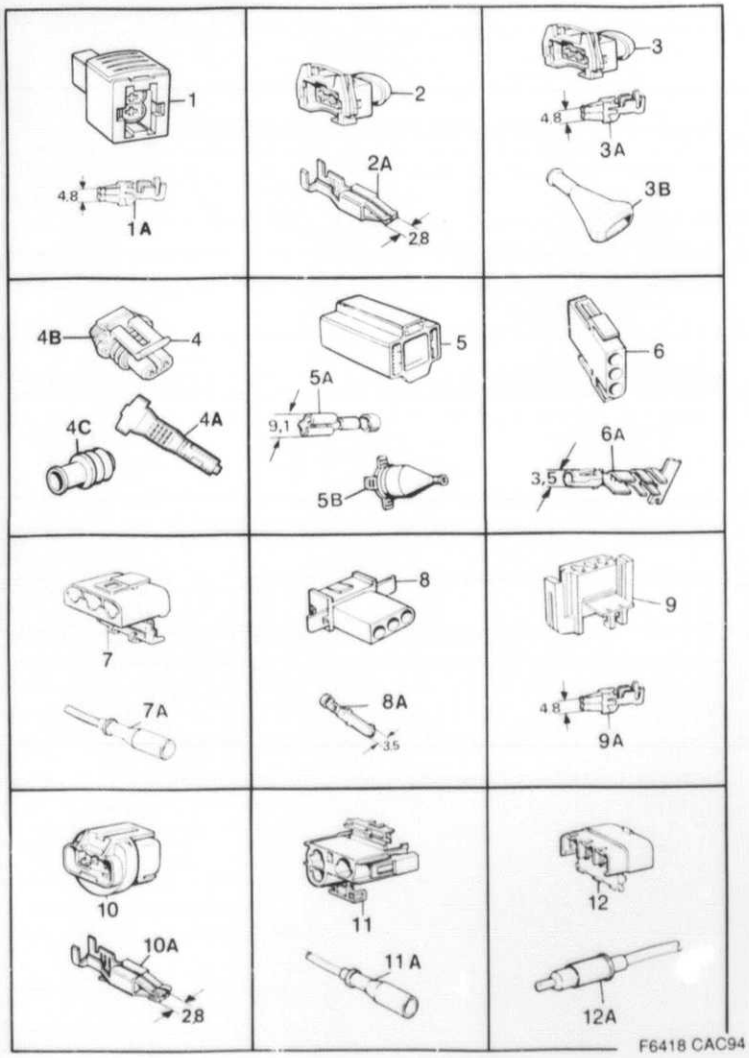

F6418 CAC94

Wiring and fuses

3-A12 Contact housing etc 1994

Ledningar och säkringar

Kontakthus etc 1994

1660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 13 411		JOINT PIECE ABS UNIT	X	Connector housing	Kontakthus	4
0020						2-pole, female	2-polig, hylsa	
0030	1A	43 54 171		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	41 78 414		DUMP VALVE, BY-PASS,	X	Connector housing	Kontakthus	8
0060				INJECTION VALVE, TEMP		2-pole, female	2-polig, hylsa	
0070				SENSOR, MAIN VALVE,				
0080				JOINT PIECE PEDAL SENSOR				
0090				AUXILIARY AIR VALVE,				
0100				THERMO SWITCH				
0110	2A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0120								
0130	3	95 19 422		HYDRAULIC PUMP	X	Contact housing	Kontakthus	4
0140						2-pole, female	2-polig, hylsa	
0150	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0160	3B	85 79 955			X	Protection	Skydd	4
0170								
0180	4	42 01 224		REVERS LIGHT CONTACT	X	Connector housing	Kontakthus	5
0190						2-pole, female	2-polig, hylsa	
0200	4A	44 18 505		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0210	4B	42 01 232			X	Locking	Låsning	4
0220	4C	44 19 305			X	Seal	Tätning	5
0230						red	röd	
0240	4C	44 19 313			X	Seal	Tätning	5
0250						blue	blå	
0260								
0270	5	71 55 021		HEADLIGHT	X	Contact housing	Kontakthus	5
0280						3-pole, female	3-polig, hylsa	
0290	5A	85 82 413		AREA, 1,3-3,4 MM2	X	Cable terminal	Kabelsko	5
0300	5B	85 52 721			X	Cable protection	Kabelskydd	4
0310								
0320	6	85 64 916		JOINT PIECE, JOINT PIECE	X	Contact housing	Kontakthus	4
0330				B-PILLAR LH AND RH		3-pole, female	3-polig, hylsa	
0340	6A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	7	85 03 277		SPEED CONTROL, HEADLIGHT	X	Contact housing	Kontakthus	4
0370				WIPERS, WIPER MOTOR,ABS,		3-pole, female	3-polig, hylsa	
0380				FAN, CODING SPEED CONTR-				
0390				ROL,HEADLIGHT LEVELLING,				
0400				BY-PASS, THEFT ALARM				
0410				DOOR, PRESSURE MONITOR				
0420				AC, SENSOR AIR-BAG				
0430	7A	85 47 796			X	Connector	Skarvstycke	5
0440								
0450	8	85 64 924		NUMBER PLATE LIGHT,	X	Contact housing	Kontakthus	5
0460				JOINT PIECE CABLE HAR-		3-pole, male	3-polig, stift	
0470				NESS DOORS, JOINT PIECE				
0480				TRUNK LID				
0490	8A	85 82 603		AREA 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0500	8A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0510								
0520	9	91 24 165		JOINT PIECE, LIGHT ASH	X	Contact housing	Kontakthus	8
0530				TRAY REAR, ELECTRONIC		3-pole, female	3-polig, hylsa	
0540				UNIT REOSTAT, CLOCK,				
0550				SPEEDOMETER, REOSTAT,				
0560				JOINT PIECE PASSENGER				
0570				SEAT, SPEED SENSOR,				
0580				ELECTRONIC UNIT SPEED				
0590				WARNING DEVICE				
0600	9A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0610								
0620	10	95 14 803		HEADLIGHT US	X	Contact housing	Kontakthus	4
0630						3-pole, female	3-polig, hylsa	
0640	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0650								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-A14

Contact housing etc
1994

Kontakthus etc
1994

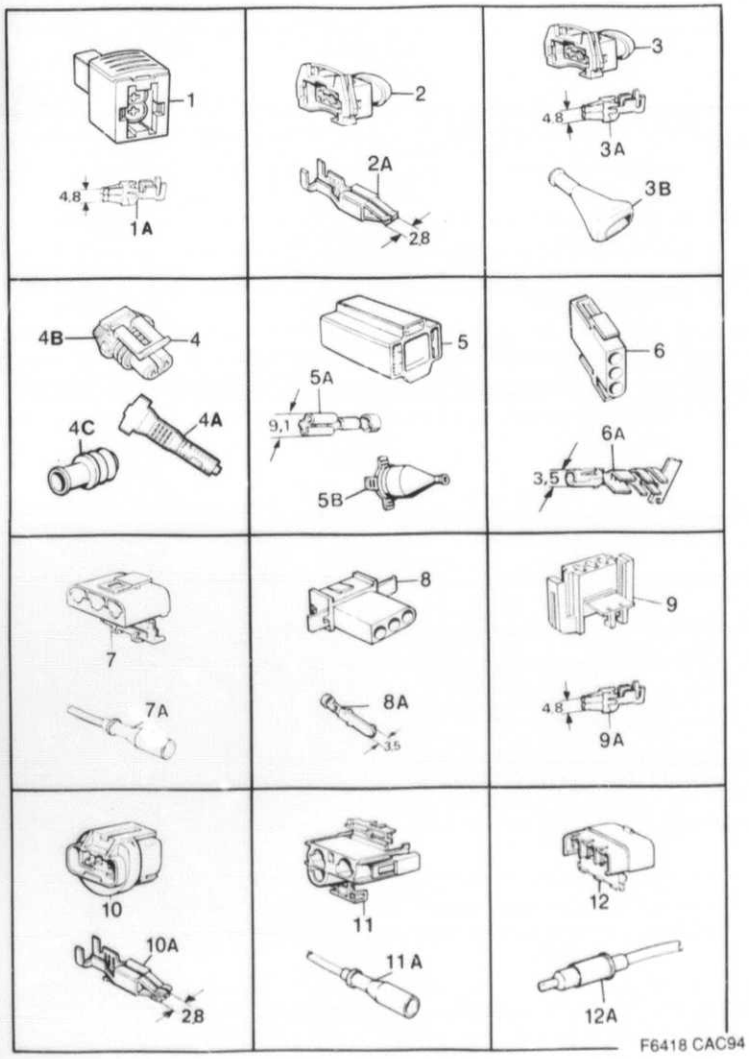

F6418 CAC94

	Pos	Part No Art nr	K S	Notes Anmärkningar	Qty Antal	Description	Benämning	S L
0650								
0660	11	95 19 679		DIRECTION LIGHT, SIDE	X	Contact housing	Kontakthus	4
0670				BACK-UP LIGHT		3-pole, female	3-polig, hylsa	
0680	11A	85 47 796			X	Connector	Skarvstycke	5
0690	11A	78 74 498			X	Connection	Skarv	5
0700								
0710	12	95 03 327		PRESSURE MONITOR AC	X	Contact housing	Kontakthus	4
0720				R134A		3-pole, male	3-polig, stift	
0730	12A	85 47 770			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-A16

Contact housing etc
1994

Kontakthus etc
1994

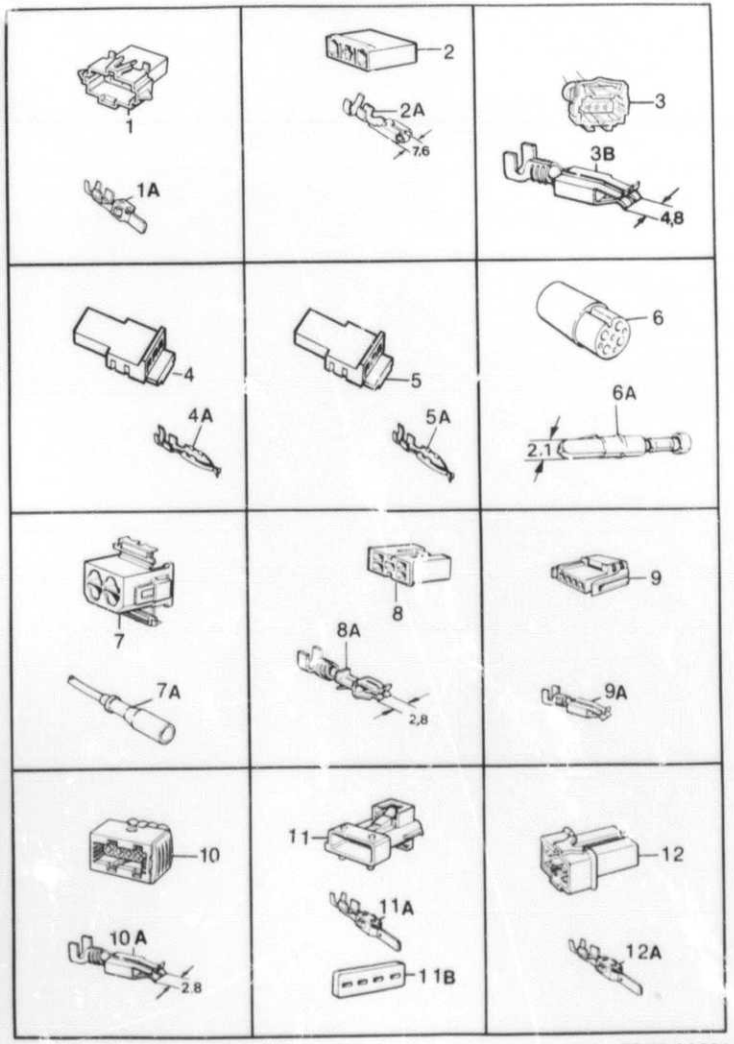

F7480 CAC94


1665	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 17 669		JOINT PIECE MAIN CABLE HARNESS,EL-ADJUSTED SEAT	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0030	1A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	2	95 07 658		SWITCH INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0070	2A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0090	3	44 32 316		SOLENOID VALVE, CRANK SHAFT SENSOR, THROTTLE POT, PRESSURE SENSOR	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	8
0120	3A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0140	4	41 09 195		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0155	4A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0170	5	41 09 187		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0185	5A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0200	6	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0220	6A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0240	7	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, THEFT ALARM, THERMOSTAT	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0270	7A	85 47 796			X	Connector	Skarvstycke	5
0280	7A	78 74 498			X	Connection	Skarv	5
0300	8	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE, SWITCH WARNING FLASHER, REAR WIPER, TAIL LAMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0360	8A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0380	9	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0400	9A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0420	10	41 13 601		HEAD LIGHT CS, LAMBDA SONDE, SENSOR AIR-BAG	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	8
0440	10A	43 50 526		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0460	11	41 13 650		SENSOR FUEL PUMP, JOINT PIECE	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	8
0480	11A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0490	11B	41 13 759			X	Seal	Tätning	5
0510	12	41 17 263		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
0530	12A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

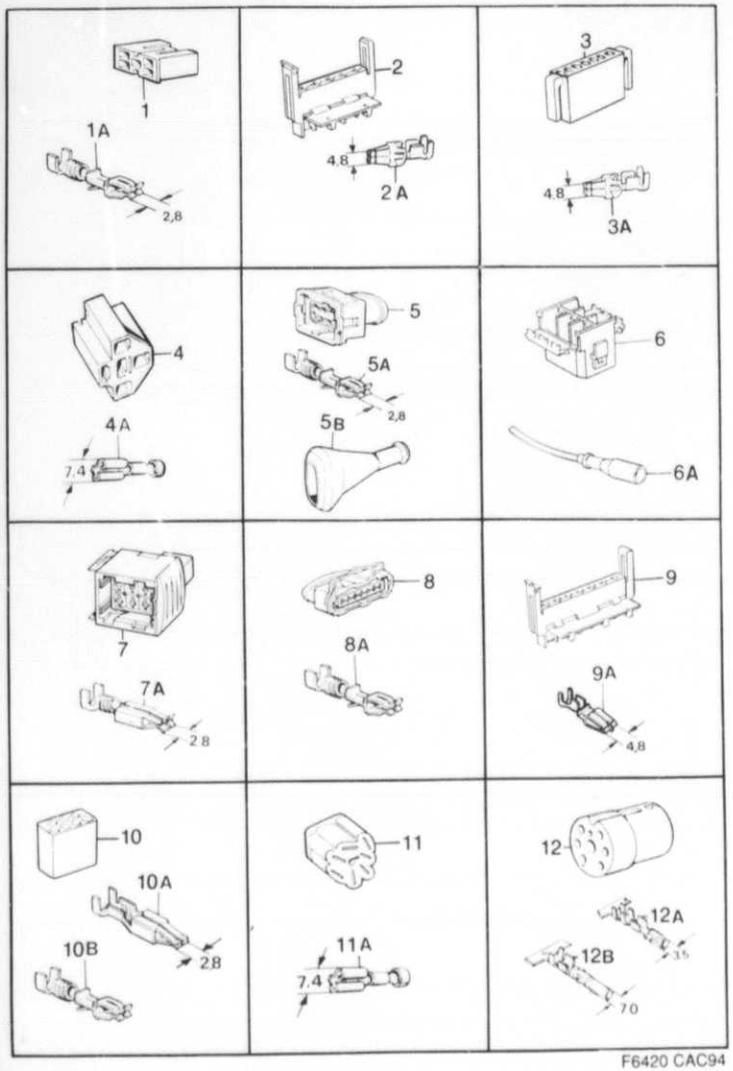

F6420 CAC94


1670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 61 503		CONTACT PARKING PAWL	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0050	2	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0070	2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0090	3	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0120	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0140	4	85 33 697		RELAY EXHAUST TEMP, WASHER PUMP REAR WIPER, RELAY LAMBDA, SWITCH PARKING PAWL	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	
0180	4A	85 82 454		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	
0200	5	95 19 414		PRESSURE MONITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
0220	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0230	5B	85 79 955			X	Protection	Skydd	4
0250	6	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0270	6A	85 47 796			X	Connector	Skarvstycke	5
0280	6A	78 74 498			X	Connection	Skarv	5
0300	7	41 13 809		WASHER MOTOR, CENTRAL LOCK, JOINT PIECE BOOT LID, REAR LOUD SPEAKER, JOINT PIECE ENGINE, TRIONIC	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0350	7A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0370	8	85 93 949		VALVE, OUTPOT STAGE	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0390	8A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0410	9	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0450	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0470	10	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0490	10A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0500	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0510	10B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0530	11	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0550	11A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0560	11A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0580	12	85 21 700		JOINT PIECE, JOINT PIECE REAR DOOR	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0600	12A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0610	12B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

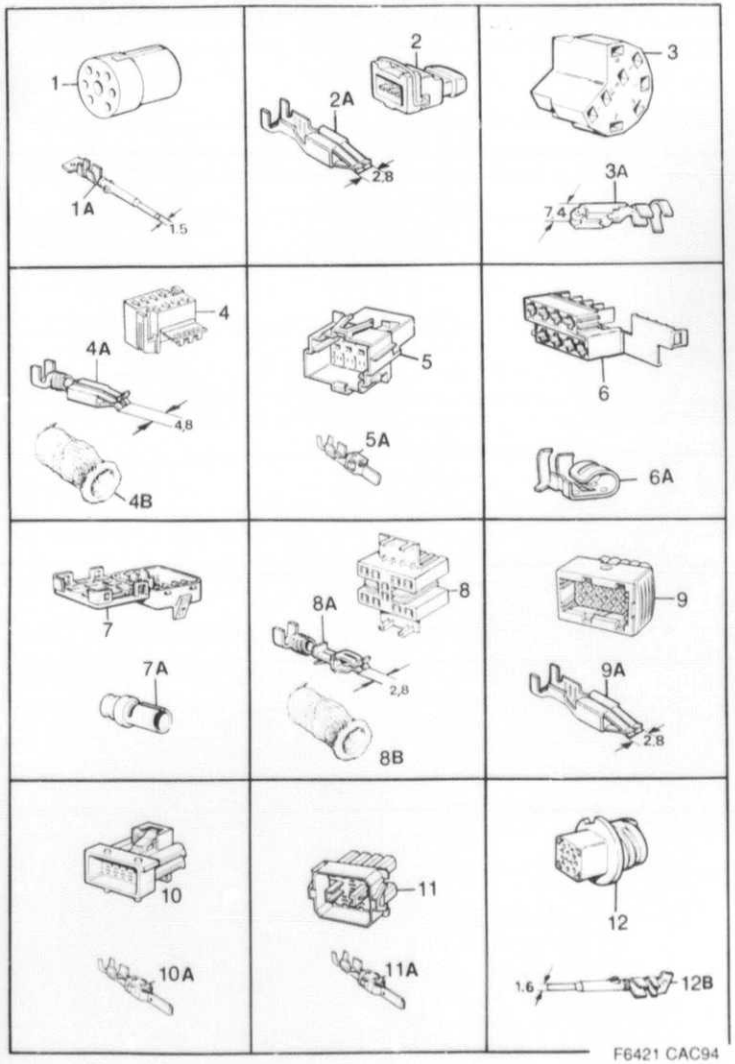

F6421 CAC94

Wiring and fuses

3-A20

Contact housing etc
1994

Ledningar och säkringar

Kontakthus etc
1994

1675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	85 21 718		JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0030	1A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0040	1B	85 93 964		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0060	2	40 61 479		VALVES ABS	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0080	2A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0100	3	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0120	3A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0130	3A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0150	4	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, TOW HOOK,TRUNK LID, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0210	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0220	4B	*95 68 775*		NLS	X	Insulation	Isolering	4
0240	5	41 17 768		HEATING PAD, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 8-pole, male	Kontakthus 8-polig, stift	4
0270	5A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0290	6	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0310	6A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0330	7	95 12 930		LOCK STEERING COLUMN	X	Contact housing 9-pole, female	Kontakthus 9-polig, hylsa	4
0350	7A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0370	8	91 23 399		SWITCH AC, RECIRKULATION AC, RADIO, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELLING, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT, LIGHT INSTEP, BOOT LID, JOINT PIECE REAR CABLE HARNESS, JOINT PIECE,	X	Connector housing 10-pole, female	Skarvhus 10-polig, hylsa	4
0460	8A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0470	8A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0480	8B	*95 68 775*		NLS	X	Insulation	Isolering	4
0500	9	41 14 005		ABS, JOINT PIECE CABLE HARNESS FRONT, BULB CONTROL, JOINT PIECE MAIN CABLE HARNESS, DI-CASETTE	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	8
0550	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0570	10	41 14 054		JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE ENGINE	X	Connector housing 10-pole, male	Kontakthus 10-polig, stift	8
0600	10A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-A22

Contact housing etc
1994

Kontakthus etc
1994

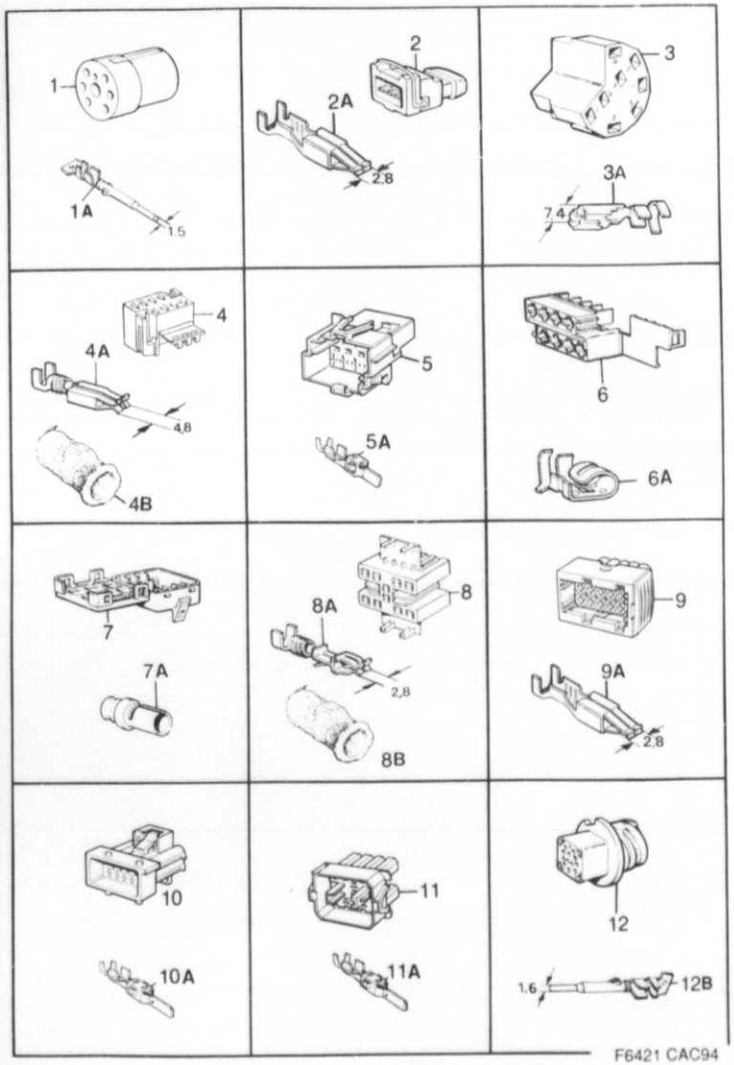

F6421 CAC94


1675	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	11	41 17 461		DIAGNOS ENGINE, JOINT	X	Connector housing	Skarvhus	4
0630				PIECE CABLE HARNESS		10-pole, male	10-polig, stift	
0640				ROOF, RADIO, JOINT PIECE,				
0650				JOINT PIECE MAIN CABLE				
0660				HARNESS				
0670	11A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	8
0680	11A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0690								
0700	12	95 29 512		JOINT PIECE MAIN CABLE	X	Contact housing	Kontakthus	4
0710				HARNESS/AIR BAG		12-pole, male	12-polig, stift	
0770	12A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

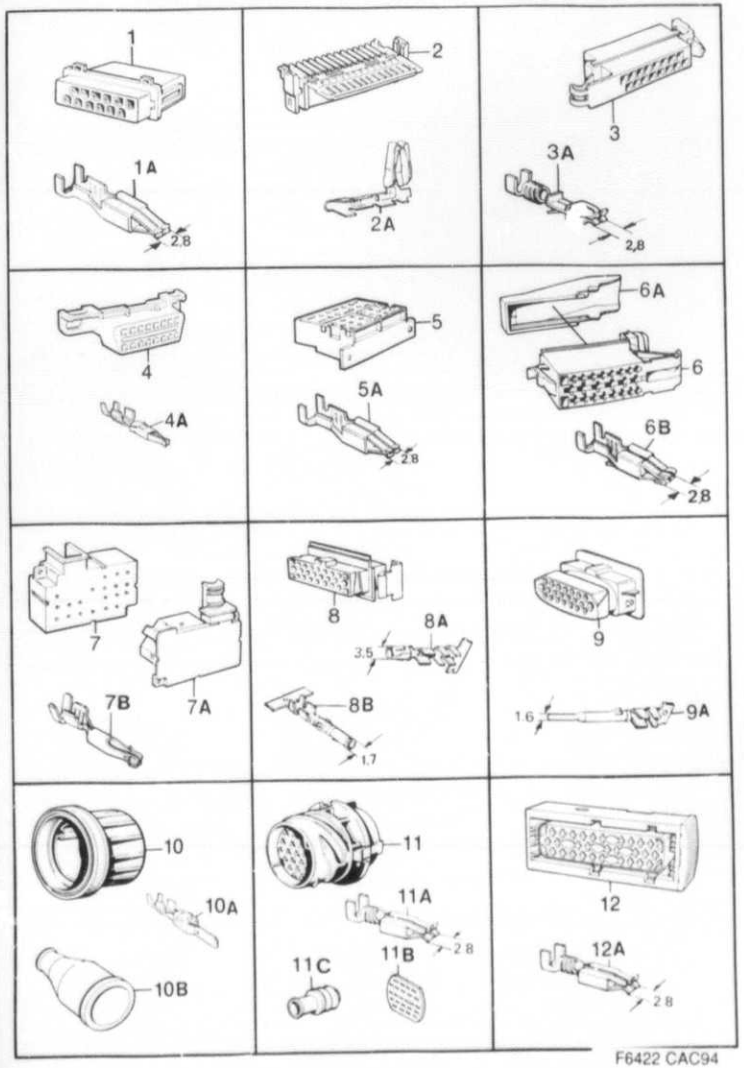

F6422 CAC94

Wiring and fuses

3-A24

Contact housing etc

1994

Ledningar och säkringar

Kontakthus etc

1994

1680	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 25 031		CONTROL UNIT ACC, ELECT-	X	Contact housing	Kontakthus	5
0020				RONIC UNIT CENTRAL LOCK		12-pole, female	12-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	95 03 020		INSTRUMENTS	X	Contact housing	Kontakthus	4
0060						14-pole, female	14-polig, hylsa	
0070	2A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	95 66 282		ELECTRONIC UNIT THEFT	X	Contact housing	Kontakthus	4
0100				ALARM, EAS WITH MEMORY		16-pole, female	16-polig, hylsa	
0110	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0110				USE 9120957				
0120	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0130								
0140	4	42 24 606		DIAGNOS	X	Connector housing	Kontakthus	8
0150						16-pole, female	16-polig, hylsa	
0160	4A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0170								
0180	5	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing	Kontakthus	4
0190						18-pole, female	18-polig, hylsa	
0200	5A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0210								
0220	6	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing	Kontakthus	5
0230						19-pole, female	19-polig, hylsa	
0240	6A	40 67 617			X	Cover	Kåpa	4
0250	6B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0260								
0270	7	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing	Kontakthus	4
0280						20-pole, female	20-polig, hylsa	
0290	7A	95 27 763			X	Contact housing	Kontakthus	4
0300	7B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0310								
0320	8	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing	Kontakthus	4
0330						22-pole, female	22-polig, hylsa	
0340	8A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	8B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0360								
0370	9	95 25 114		JOINT PIECE DOORS	X	Contact housing	Kontakthus	4
0380						22-pole, male	22-polig, stift	
0390	9A	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0400								
0410	10	41 74 868		JOINT PIECE MAIN CABLE	X	Connector housing	Kontakthus	4
0420				HARNESS, JOINT PIECE		24-pole, male	24-polig, stift	
0430				CABLE HARNESS FRONT				
0440	10A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0450	10B	41 11 308			X	Rubber protection	Gummiskydd	4
0460	10C	45 88 349			X	Lock ring	Låsring	
0470								
0480	11	41 76 244		JOINT PIECE CABLE	X	Connector housing	Kontakthus	8
0490				HARNESS ENGINE		24-pole, female	24-polig, hylsa	
0500	11A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0510	11B	43 52 936			X	Seal	Tätning	5
0520	11C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
0530	11C	40 61 966		1,2-2,0 MM	X	Seal	Tätning	5
0540	11C	40 61 974		2,1-2,0 MM	X	Seal	Tätning	5
0550								
0560	12	41 14 609		DIAGNOSTIC UNIT AIR-BAG	X	Connector housing	Kontakthus	4
0570						29-pole, female	29-polig, hylsa	
0580	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-B02

Contact housing etc 1994

Kontakthus etc 1994

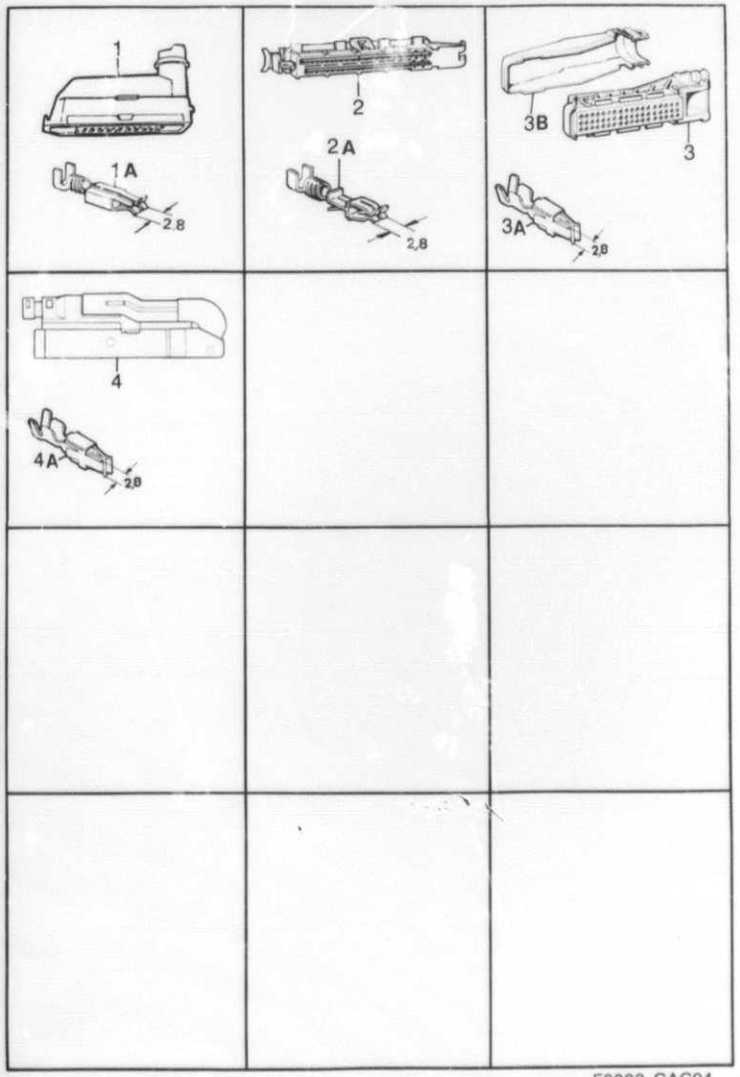

F8003 CAC94


1685	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	41 75 428		ELECTRONIC UNIT ETS	X	Connector housing	Kontakthus	4
0020						38-pole, female	38-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing	Kontakthus	5
0060						39-pole, female	39-polig, hylsa	
0070	2A	40 63 970		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0080	2A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0090								
0100	3	41 76 236		ELECTRONIC UNIT ABS, TCS	X	Contact housing	Kontakthus	5
0110						55-pole, female	55-polig, hylsa	
0120	3A	40 61 586		AREA, 1,5–2,5 MM2	X	Cable terminal	Kabelsko	8
0130	3B	40 61 461			X	Cover	Kåpa	4
0140								
0150	4	41 76 616		ELECTRONIC UNIT TRIONIC	X	Connector housing	Kontakthus	8
0160						70-pole, female	70-polig, hylsa	
0170	4A	43 54 353		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0180	4A	40 61 586		AREA, 1,5–2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

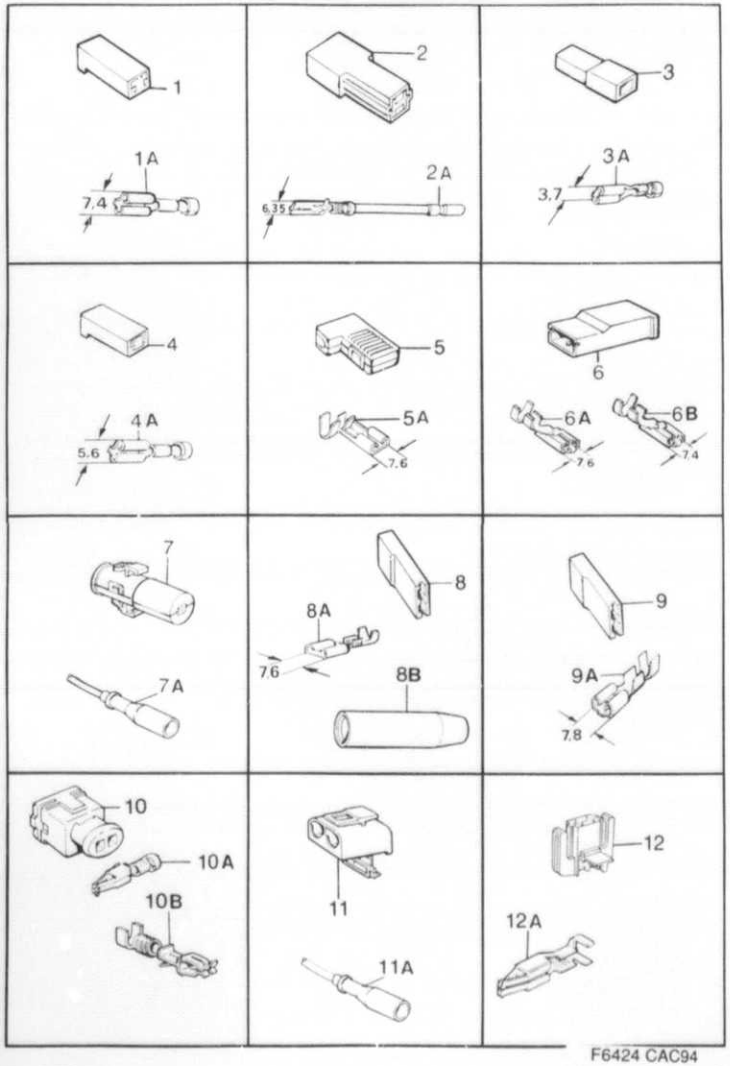

F6424 CAC94

Wiring and fuses

3 -B04

Contact housing etc

1995

Ledningar och säkringar

Kontakthus etc

1995

1690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT GEAR INDICATOR, MAKE UP MIRROR	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0040	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0060	2	71 55 120		EL-MIRROR, EL-CENTRAL	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0080	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0100	3	85 30 115		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0120	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0140	4	85 33 184		LOUDSPEAKER	X	Contact housing 1-pole, male	Kontakthus 1-polig, stift	4
0160	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0180	5	85 21 692		REAR DEMIST, GROUND, LIGHT INSTEP	X	Contact housing 1-pole, female	Kontakthus 1-polig, hylsa	4
0200	5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0220	6	85 41 229		LIGHT INSTEP, LIGHT NUMBER PLATE, READING LAMP, SEAT BELT WARNING, SWITCH SPOT LIGHT	X	Sleeve 1-pole, male	Isoleringshylsa 1-polig, stift	5
0260	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0280	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0300	7	95 03 418		COMPRESSOR	X	Connector housing 1-pole, female	Skarvhus 1-polig, hylsa	4
0320	7A	85 47 796			X	Connector	Skarvstycke	5
0340	8	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, HORN, LIGHT LUGGAGE COMPARTMENT, SWITCH HAND BRAKE, JOINT, JOINT PIECE REAR DOOR, ANTI THEFT ALARM	X	Insulation 1-pole, female	Isolering 1-polig, hylsa	4
0400	8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0420	8B	95 69 997			X	Protection	Skydd	4
0440	9	83 78 630		PEDAL CONTACT SPEED CONTROL	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0460	9A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable harness	Ledningsnät	5
0480	10	85 93 899		AUXILIARY AIR VALVE, FUEL SYSTEM, VENTILATION	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0500	10A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0510	10B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0530	11	95 03 319		EL. WINDOW REGULATOR, STD FAN, LEVEL GUARD RADIATOR, LEVEL SWITCH, WASHER MOTOR, FAN AC, FOG LIGHT, JOINT PIECE, OUTER TEMP, JOINT PIECE THERMO CONTACT, MICRO SWITCH, FAN, FOG LIGHT EXTRA, ABS, BY-PASS, JOINT PIECE, TRUNK LID, DOOR FAN	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0630	11A	85 [illegible]			X	Connector	Skarvstycke	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-B06 Contact housing etc 1995

Kontakthus etc 1995

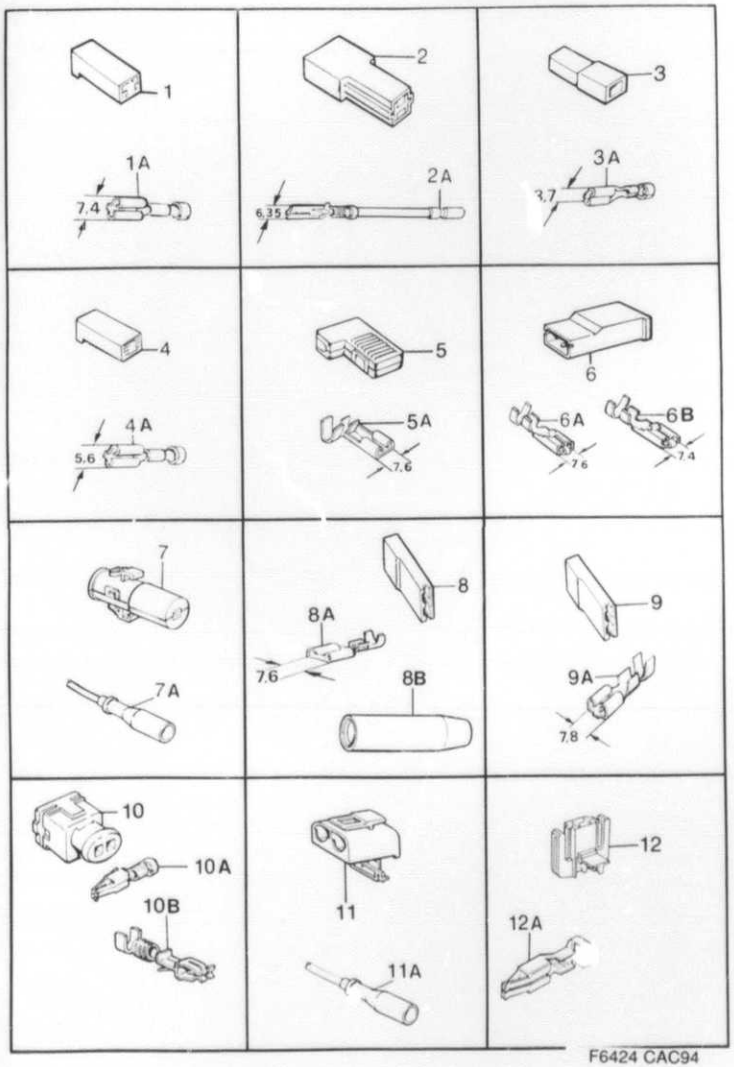

F6424 CAC94


1690	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640								
0650	12	91 24 157		LIGHT MIRROR, ACC, LIGHT	X	Contact housing	Kontakthus	4
0660				CONTROLS, FAN AC, JOINT		2-pole, female	2-polig, hylsa	
0670				TRUNK LID, CENTRAL LOCK				
0680				TANK HATCH, DOME LAMP,				
0690				SUN ROOF				
0700	12A	91 20 783		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	5
0710	12A	91 20 791		AREA, 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

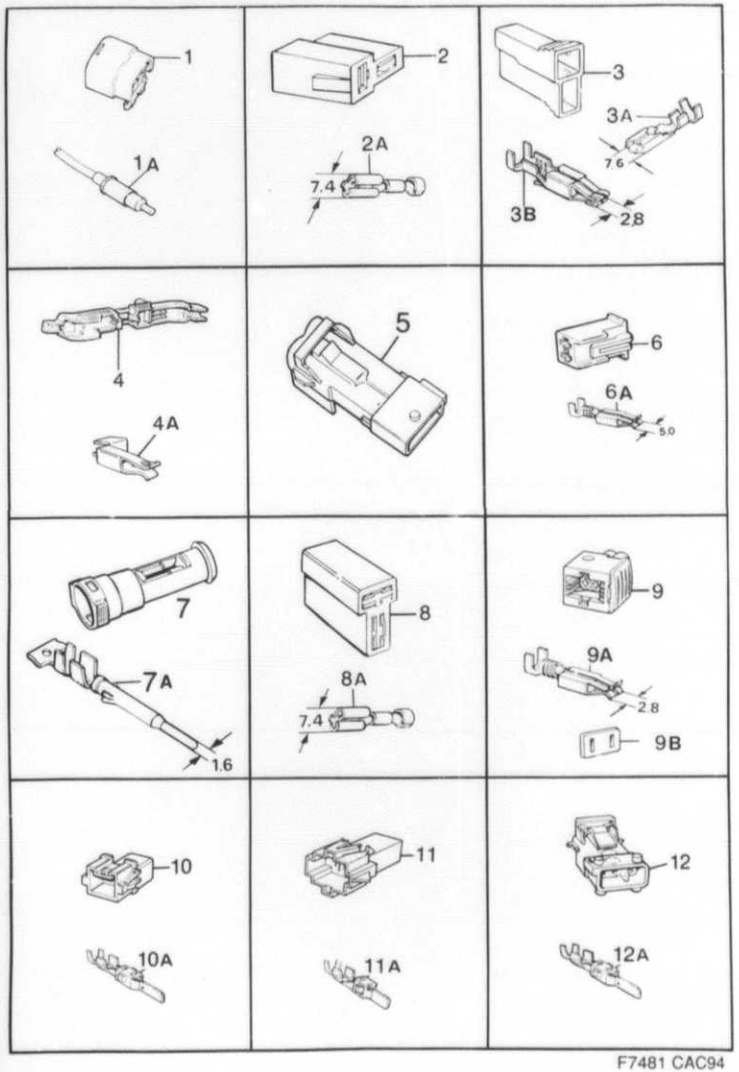

F7481 CAC94

Wiring and fuses

3 -B08

Contact housing etc

1995

Ledningar och säkringar

Kontakthus etc

1995

1695	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 01 685		SWITCH LUGGAGE COMPART-MENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0020								
0030	1A	85 47 770			X	Connector	Skarvstycke	5
0040								
0050	2	85 58 538		CIGARETTE LIGHTER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0060								
0070	2A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0100								
0110	3A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0120	3B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0130								
0140	4	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0150								
0160	4A	95 52 191			X	Cable terminal	Kabelsko	5
0170								
0180	5	41 13 452		ABS UNIT MK4	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0190								
0200								
0210	6	91 23 548		THEFT ALARM, FOG LIGHT, LOUD SPEAKER, BY-PASS, DOOR SWITCH, SOLENOID IGNITION LOCK, CODING EXTRA LIGHTS, GLOVE COMPARTMENT LAMP, SHIFT LOCK	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0220								
0230								
0240								
0250								
0260								
0270								
0280	6A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0280								
0290								
0300	7	42 24 895		SENSOR WHEELS	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0310								
0320	7A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	8
0330								
0340	8	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0350								
0360	8A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0370								
0380	9	41 13 205		JOINT PIECE ABS UNIT, SPEED SENSOR, RESISTOR DAY DRIVING LIGHT, HORN, AIR PUMP, TEMP SENSOR, TEMP SENSOR COOLANT, THEFT ALARM US	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0390								
0400								
0410								
0420								
0430								
0440	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0450	9B	41 14 310			X	Seal	Tätning	5
0460								
0470	10	41 17 164		SIDE INDICATOR LAMP	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0480								
0490	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0500								
0510	11	41 17 560		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0520								
0530	11A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0540								
0550	12	41 74 264		AIR-BAG PASSANGER	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0560								
0570	12A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-B10

Contact housing etc
1995

Kontakthus etc
1995

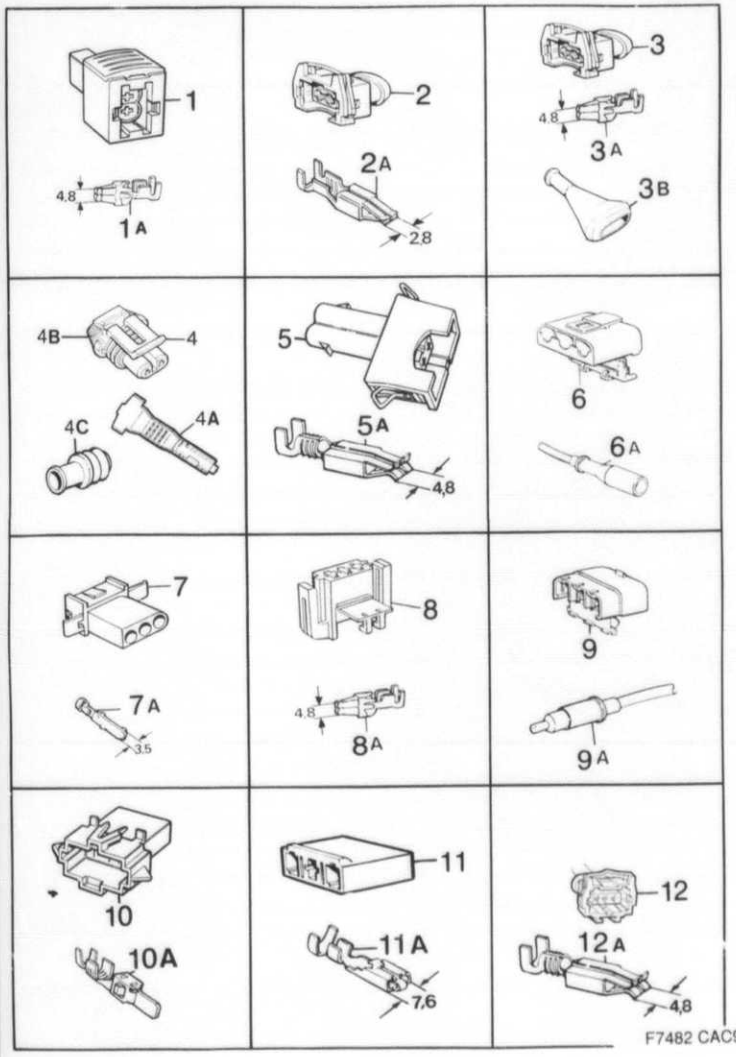


1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0010	1	41 13 411		JOINT PIECE ABS UNIT	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0030	1A	43 54 171		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0050	2	41 78 414		DUMP VALVE, BY PASS, INJECTION VALVE, TEMP SENSOR, MAIN VALVE, JOINT PIECE PEDAL SENSOR AUXILIARY AIR VALVE, THERMO SWITCH, KNOCK SENSOR	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0120	2A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0140	3	95 19 422		HYDRAULIC PUMP	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0160	3A	91 20 791		AREA, 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8
0170	3B	85 79 955			X	Protection	Skydd	4
0190	4	42 01 224		REVERS LIGHT CONTACT	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	5
0210	4A	44 18 505		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	5
0220	4B	42 01 232			X	Locking	Låsning	4
0230	4C	44 19 305			X	Seal red	Tätning röd	5
0250	4C	44 19 313			X	Seal blue	Tätning blå	5
0280	5	44 33 439		INJECTION VALVES B308	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0300	5A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0320	6	95 03 277		HEADLIGHT WIPERS, WIPER MOTOR, ABS, FAN, BY-PASS, HEADLIGHT LEVELLING, THEFT ALARM DOOR, PRESSURE MONITOR AC	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0370	6A	85 47 796			X	Connector	Skarvstycke	5
0390	7	85 64 924		NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0430	7A	85 44 322		AREA 2,0–4,0 MM2	X	Cable terminal	Kabelsko	5
0450	8	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, ELECTRONIC UNIT SPEED WARNING DEVICE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	8
0520	8A	91 20 791		AREA 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8
0540	9	95 03 327		PRESSURE MONITOR AC R134A	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0560	9A	85 47 770			X	Connector	Skarvstycke	5
0580	10	41 17 669		EL-ADJUSTED SEAT	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0600	10A	41 15 580		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	5
0620	11	95 07 658		SWITCH INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0640	11A	85 60 476		AREA, 0,9–2,0 MM2	X	Cable terminal	Kabelsko	5
0650								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

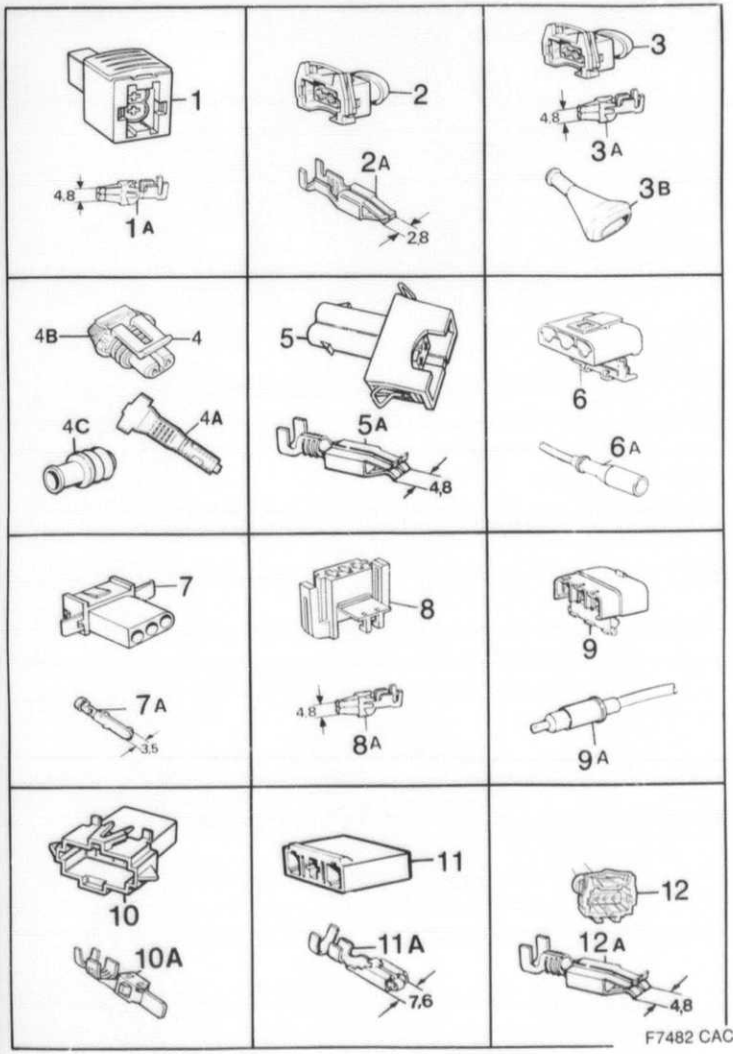

F7482 CAC94


1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S i
0660	12	44 32 316		SOLENOID VALVE, CRANK	X	Connector housing	Kontakthus	8
0670				SHAFT SENSOR, THROTTLE		3-pole, female	3-polig, hylsa	
0680				POT, PRESSURE SENSOR				
0690	12A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

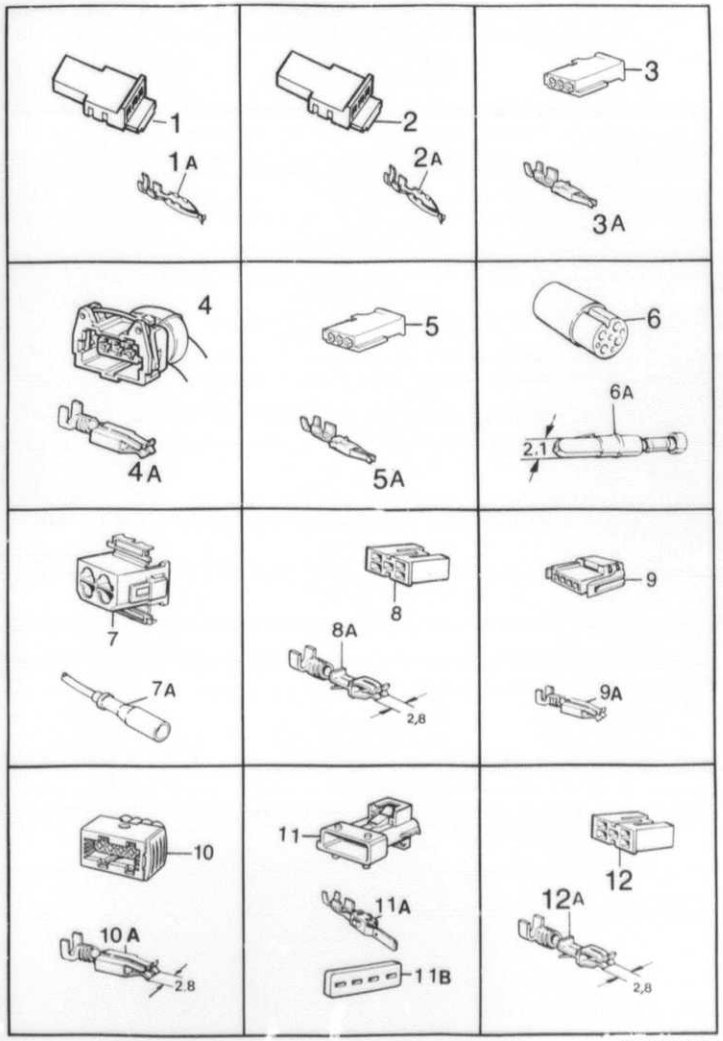

F7483 CAC94

Wiring and fuses

3-B14 Contact housing etc 1995

Ledningar och säkringar

Kontakthus etc 1995


1705	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 09 195		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0030	1A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0050	2	41 09 187		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0070	2A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0090	3	41 13 007		HORN BUTTON	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0110	3A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0130	4	44 89 647		SENSOR CAMSHAFT	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0150	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0170	5	45 17 702		AIRBAG DRIVER	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0190	5A	44 66 801		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0210	6	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0230	6A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0250	7	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PRESSURE SWITCH, THEFT ALARM	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0280	7A	85 47 796			X	Connector	Skarvstycke	5
0290	7A	78 74 498			X	Connection	Skarv	5
0310	8	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE, SWITCH WARNING FLASHER, REAR WIPER, TAIL LAMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0370	8A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0390	9	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0410	9A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0430	10	41 13 601		HEAD LIGHT CS, SENSOR AIR-BAG, HEAT PLATES, LAMBDA SONDE	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	8
0460	10A	43 50 526		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0480	11	41 13 650		SENSOR FUEL PUMP, JOINT PIECE	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	8
0500	11A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0510	11B	41 13 759			X	Seal	Tätning	5
0530	12	40 61 503		CONTACT PARKING PAWL	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0550	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

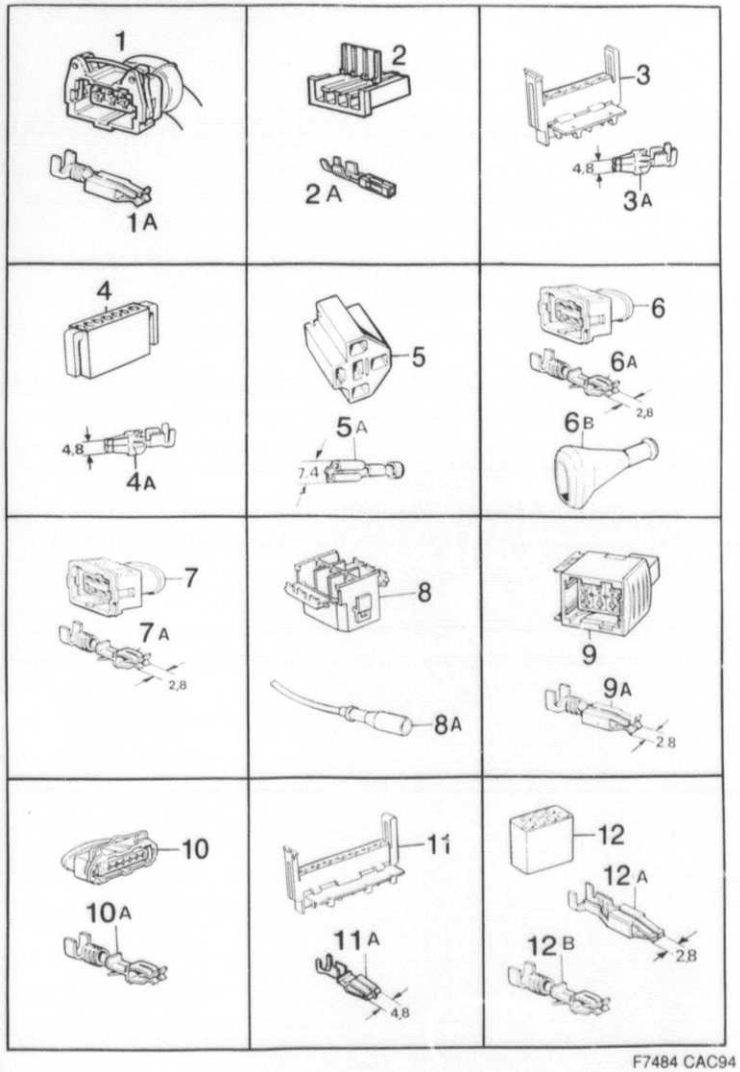

F7484 CAC94

Wiring and fuses

3-B16

Contact housing etc

1995

Ledningar och säkringar

Kontakthus etc

1995


1710	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 32 357		IGNITION COIL, MASS AIR	X	Connector housing	Kontakthus	8
0020				FLOW SENSOR		4-pole, female	4-polig, hylsa	
0030	1A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	45 37 411		SENSOR THEFT ALARM	X	Connector housing	Kontakthus	4
0060						4-pole, female	4-polig, hylsa	
0070	2A	45 38 310		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	91 22 789		RESISTOR HEATING FAN	X	Contact housing	Kontakthus	4
0100						5-pole, female	5-polig, hylsa	
0110	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0120								
0130	4	91 24 173		GEAR INDICATOR, JOINT	X	Contact housing	Kontakthus	4
0140				PIECE, GEAR INDICATOR		5-pole, female	5-polig, hylsa	
0150				STARTER INHIBITOR				
0160	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0170								
0180	5	85 33 697		SWITCH PARKING PAWL	X	Contact housing	Kontakthus	
0190						5-pole, female	5-polig, hylsa	
0200	5A	85 82 454		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	
0210								
0220	6	95 19 414		PRESSURE MONITOR	X	Contact housing	Kontakthus	4
0230						5-pole, female	5-polig, hylsa	
0240	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0250	6B	85 79 955			X	Protection	Skydd	4
0260								
0270	7	44 32 365		ETS, LEVEL GUARD, VALVES	X	Connector housing	Kontakthus	
0280				TCS		5-pole, female	5-polig, hylsa	
0290	7A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0300								
0310	8	95 03 475		JOINT PIECE	X	Contact housing	Kontakthus	4
0320						6-pole, female	6-polig, hylsa	
0330	8A	85 47 796			X	Connector	Skarvstycke	5
0340	8A	78 74 498			X	Connection	Skarv	5
0350								
0360	9	41 13 809		WASHER MOTOR, CENTRAL	X	Connector housing	Kontakthus	4
0370				LOCK, JOINT PIECE BOOT		6-pole, female	6-polig, hylsa	
0380				LID, REAR LOUD SPEAKER,				
0390				JOINT PIECE ENGINE				
0400	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0410								
0420	10	85 93 949		VALVE, OUTPOT STAGE	X	Contact housing	Kontakthus	4
0430						7-pole, female	7-polig, hylsa	
0440	10A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0440				USE 9120957				
0450								
0460	11	91 22 797		THEFT ALARM, SWITCH	X	Contact housing	Kontakthus	4
0470				DIRECTION INDICATOR,		7-pole, female	7-polig, hylsa	
0480				SWITCH SPEED CONTROL,				
0490				TAIL LIGHT				
0500	11A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0510								
0520	12	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0530						7-pole, female	7-polig, hylsa	
0540	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0550	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0560	12B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0560				USE 9120957				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

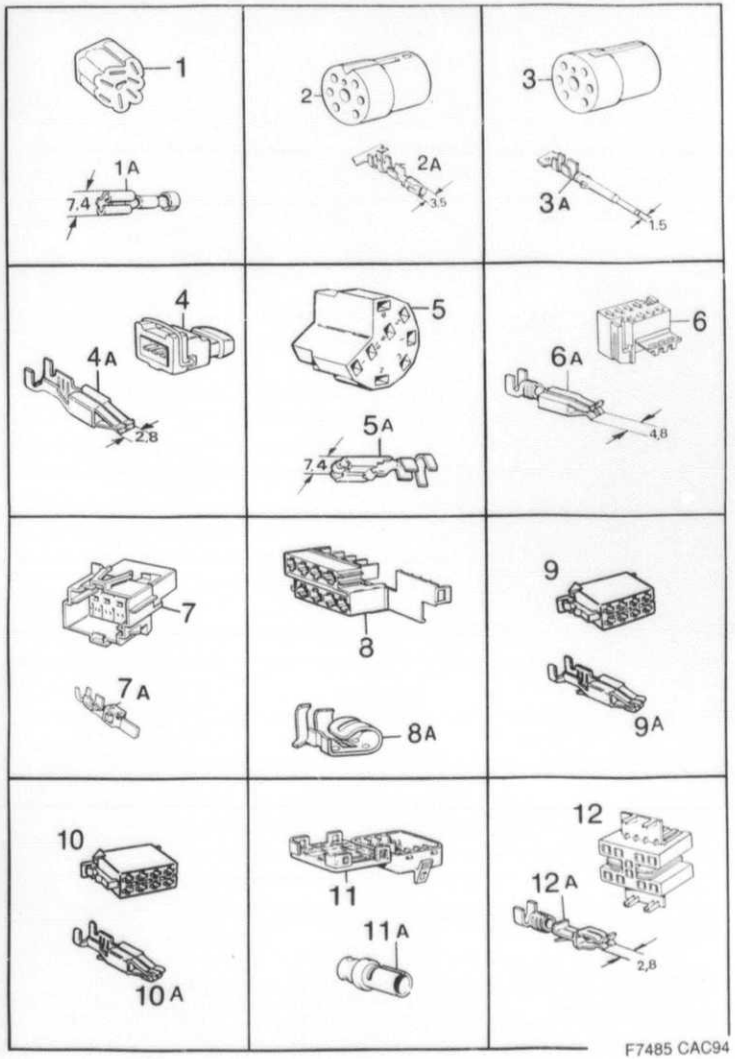

F7485 CAC94

Wiring and fuses

3-B18

Contact housing etc

1995

Ledningar och säkringar

Kontakthus etc

1995


1715	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	95 03 251		HEATING FAN	X	Contact housing	Kontakthus	5
0020						7-pole, female	7-polig, hylsa	
0030	1A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0040	1A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0060	2	85 21 700		JOINT PIECE	X	Contact	Kontakt	4
0070						7-pole, female	7-polig, hylsa	
0080	2A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0100	3	85 21 718		JOINT PIECE CABLE HARNESS DOORS	X	Contact housing	Kontakthus	4
0110						7-pole, male	7-polig, stift	
0120	3A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0140	4	40 61 479		VALVES	X	Contact housing	Kontakthus	5
0150						7-pole, female	7-polig, hylsa	
0160	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0180	5	85 44 363		SWITCH LIGHT	X	Contact housing	Kontakthus	4
0190						8-pole, female	8-polig, hylsa	
0200	5A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0210	5A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0230	6	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, TOW HOOK, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF	X	Contact housing	Kontakthus	4
0240						8-pole, female	8-polig, hylsa	
0290	6A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0310	7	41 17 768		HEATING PAD, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing	Kontakthus	4
0320						8-pole, male	8-polig, stift	
0340	7A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0360	8	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing	Kontakthus	4
0370						8-pole, female	8-polig, hylsa	
0380	8A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	9	42 03 626		RADIO	X	Connector housing	Kontakthus	4
0410						8-pole, female	8-polig, hylsa	
0420	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0440	10	42 03 618		RADIO	X	Connector housing	Kontakthus	4
0450						8-pole, female	8-polig, hylsa	
0460	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0480	11	95 12 930		LOCK STEERING COLUMN	X	Contact housing	Kontakthus	4
0490						9-pole, female	9-polig, hylsa	
0500	11A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0520	12	91 23 399		SWITCH AC, RECIRKULATION AC, FOG LIGHT EXTRA, REOSTAT EI PAD, HEADLIGHT LEVELLING, SWITCH TCS, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT, LIGHT INSTEP, BOOT LID, JOINT PIECE REAR CABLE HARNESS, JOINT PIECE	X	Connector housing	Skarvhus	4
0530						10-pole, female	10-polig, hylsa	
0610	12A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0620	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

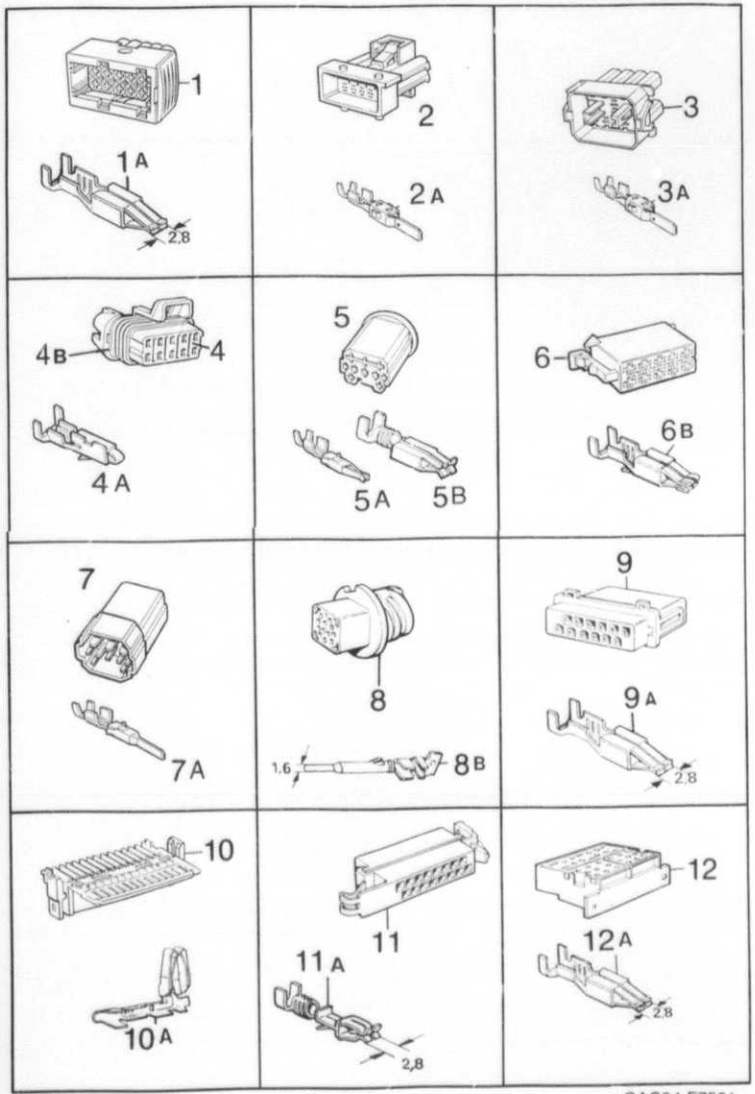

CAC94 F7561

Wiring and fuses

3-B20

Contact housing etc

1995

Ledningar och säkringar

Kontakthus etc

1995

1720	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 14 005		ABS, JOINT PIECE CABLE HARNESS FRONT, BULB CONTROL, JOINT PIECE MAIN CABLE HARNESS, DI CASETTE	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	8
0060	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0070	1A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0090	2	41 14 054		JOINT PIECE ENGINE	X	Connector housing 10-pole, male	Kontakthus 10-polig, stift	8
0110	2A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0130	3	41 17 461		DIAGNOS ENGINE, JOINT PIECE CABLE HARNESS ROOF JOINT PIECE, JOINT PIECE MAIN CABLE HARNESS, CODING THEFT ALARM	X	Connector housing 10-pole, male	Skarvhus 10-polig, stift	4
0180	3A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	8
0190	3A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0210	4	42 03 568		SPEED CONTROL SYSTEM	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	4
0230	4A	44 18 505		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0240	4B	42 03 576			X	Locking	Låsning	4
0260	5	44 11 518		JOINT PIECE REAR DOOR, PROGR. TRIONIC	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	
0280	5A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0290	5B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0310	6	42 03 634		AMPLIFIER US	X	Connector housing 10-pole, female	Kontakthus 10-polig, hylsa	4
0330	6A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0350	7	44 10 510		JOINT PIECE REAR DOOR	X	Connector housing 10-pole, male	Kontakthus 10-polig, stift	4
0370	7A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0390	8	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing 12-pole, male	Kontakthus 12-polig, stift	4
0410	8A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0430	9	95 25 031		ELECT-RONIC UNIT CENTRAL LOCK	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	5
0450	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0470	10	95 03 020		INSTRUMENTS	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0490	10A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0510	11	95 66 282		EAS WITH MEMORY	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
0530	11A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0550	12	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0570	12A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-B22

Contact housing etc
1995

Kontakthus etc
1995

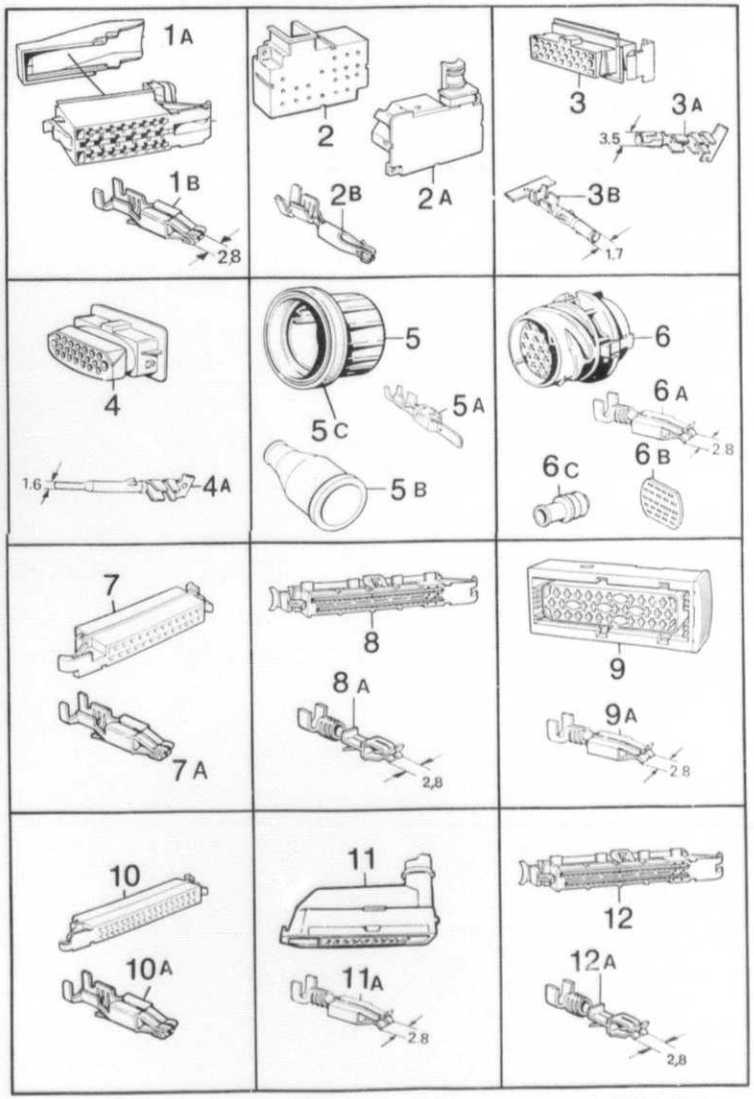

CAC94 F7562

Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	§
1	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
1A	40 67 617			X	Cover	Kåpa	4
1B	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
2	95 27 755		ELECTRONIC UNIT AIR BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
2A	95 27 763			X	Contact housing	Kontakthus	4
2B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
3	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
3A	85 82 595		AREA, 0,5–2,0 MM2	X	Cable terminal	Kabelsko	5
3B	85 87 552		AREA, 0,5–1,5 MM2	X	Cable terminal	Kabelsko	5
4	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
4A	85 93 964		AREA, 0,8–1,5 MM2	X	Cable terminal	Kabelsko	5
5	41 74 868		JOINT PIECE CABLE HARNESS FRONT	X	Connector housing 24-pole, male	Kontakthus 24-polig, stift	4
5A	41 15 192		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
5B	41 11 308			X	Rubber protection	Gummiskydd	4
5C	45 88 349			X	Lock ring	Låsring	
6	41 76 244		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 24-pole, female	Kontakthus 24-polig, hylsa	8
6A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
6B	43 52 936			X	Seal	Tätning	5
6C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
6C	40 61 966		1,2–2,0 MM	X	Seal	Tätning	5
6C	40 61 974		2,1–2,0 MM	X	Seal	Tätning	5
7	42 01 323		ELECTRONIC UNIT THEFT ALARM	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
7A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
8	41 76 186		AMPLIFIER US	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
8A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
9	41 14 609		DIAGNOSTIC UNIT AIR BAG	X	Connector housing 29-pole, female	Kontakthus 29-polig, hylsa	4
9A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
10	42 03 659		TCS	X	Connector housing 35-pole, female	Kontakthus 35-polig, hylsa	4
10A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
11	41 75 428		ELECTRONIC UNIT ETS	X	Connector housing 38-pole, female	Kontakthus 38-polig, hylsa	4
11A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
12	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing 39-pole, female	Kontakthus 39-polig, hylsa	5
12A	40 63 970		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
12A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-B24

Contact housing etc *1995*

Kontakthus etc *1995*

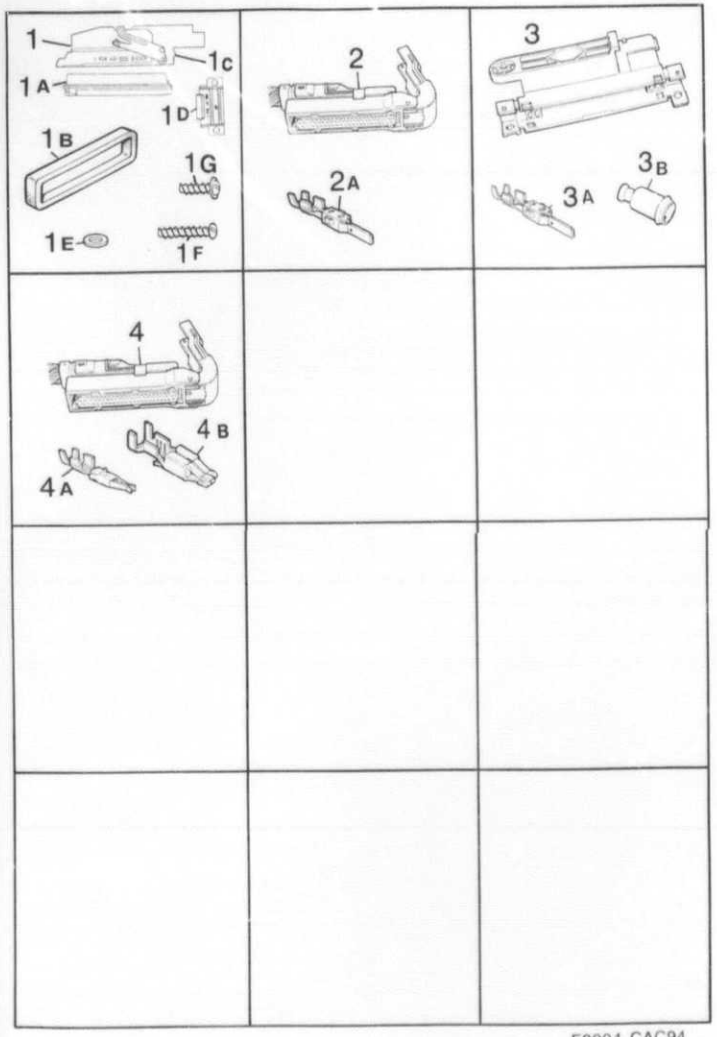

F8004 CAC94

1730	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010	1	45 17 629		ELECTRONIC UNIT MOTRONIC	X	Connector housing	Kontakthus	8
0020						55-pole, female	55-polig, hylsa	
0030	1A	42 24 630		1)	1	.Connector housing	.Kontakthus	4
0040	1B	42 24 655		1)	1	.Seal	.Tätning	5
0050	1C	45 17 637		1)	1	.Cover	.Kåpa	4
0060	1D	45 17 652		1)	1	.Seal	.Tätning	5
0070	1E	85 87 461			1	Seal	Tätning	5
0080	1F	42 23 483			1	Screw	Skruv	5
0090	1G	42 23 574			1	Screw	Skruv	5
0100	1H	91 20 957			X	Cable terminal	Kabelsko	8
0110								
0120	2	41 76 616		ELECTRONIC UNIT TRIONIC	X	Connector housing	Kontakthus	8
0130						70-pole, female	70-polig, hylsa	
0140	2A	43 54 353		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0150	2A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0160								
0170	3	43 54 692		JOINT MAIN CABLE HARNESS	X	Connector housing	Kontakthus	8
0180						70-pole, female	70-polig, hylsa	
0190	3	45 35 530		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0200	3A	45 38 625		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0210	3A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0220	3B	43 54 239			X	Seal	Tätning	5
0230						grey	grå	
0240	3B	43 54 239			X	Seal	Tätning	5
0250						white	vit	
0260								
0270	4	41 76 624		JOINT ENGINE	X	Connector housing	Kontakthus	8
0280						70-pole, female	70-polig, hylsa	
0290	4A	43 54 353		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0300	4B	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	8


1. Not as separate spare part. Ej som separat reservdel

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

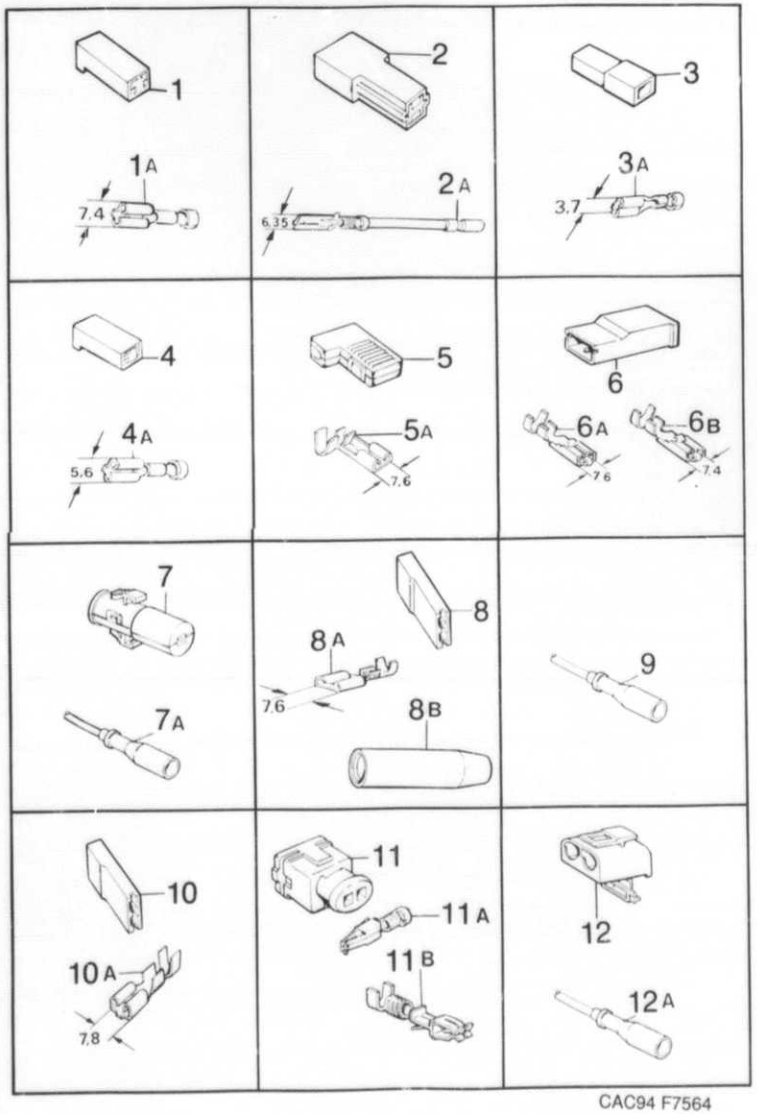

CAC94 F7564

3-C02

Wiring and fuses

Contact housing etc

1996

Ledningar och säkringar

Kontakthus etc

1996

1735	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT	X	Contact housing	Kontakthus	4
0020				GEAR INDICATOR, STOP LIGHT		1-pole, female	1-polig, hylsa	
0030								
0040	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	71 55 120		EL-MIRROR, EL-CENTRAL,	X	Contact housing	Kontakthus	4
0070				THEFT ALARM		1-pole, male	1-polig, stift	
0080	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	85 30 115		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0110						1-pole, male	1-polig, stift	
0120	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0130								
0140	4	85 33 184		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0150						1-pole, male	1-polig, stift	
0160	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0170								
0180	5	85 21 692		REAR DEMIST, GROUND,	X	Contact housing	Kontakthus	4
0190				LIGHT INSTEP		1-pole, female	1-polig, hylsa	
0200	5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210								
0220	6	85 41 229		LIGHT INSTEP, LIGHT NUM-	X	Sleeve	Isoleringshylsa	5
0230				BER PLATE, READING LAMP,		1-pole, male	1-polig, stift	
0240				SEAT BELT WARNING,				
0250				SWITCH SPOT LIGHT,				
0260				CONTACT LIGHT, LIGHT				
0270				GLOVE BOX				
0280	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0280				USE 8560476				
0290	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	7	95 03 418		COMPRESSOR	X	Connector housing	Skarvhus	4
0320						1-pole, female	1-polig, hylsa	
0330	7A	85 47 796			X	Connector	Skarvstycke	5
0340								
0350	8	85 16 916		THERMO CONTACT, LIGHT	X	Insulation	Isolering	4
0360				ASH TRAY, HORN, LIGHT		1-pole, female	1-polig, hylsa	
0370				LUGGAGE COMPARTMENT,				
0380				SWITCH HAND BRAKE,				
0390				JOINT, JOINT				
0400				PIECE REAR DOOR, ANTI				
0410				THEFT ALARM				
0420	8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	8B	95 69 997			X	Protection	Skydd	4
0440								
0450	9	85 47 804		DIRECTION INDICATOR	X	Connector	Skarvstycke	5
0460								
0470	10	83 78 630		PEDAL CONTACT SPEED	X	Contact housing	Kontakthus	4
0480				CONTROL		2-pole, female	2-polig, hylsa	
0490	10A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable harness	Ledningsnät	5
0500								
0510	11	85 93 899		AUXILIARY AIR VALVE,	X	Contact housing	Kontakthus	4
0520				FUEL SYSTEM, VENTILATION		2-pole, female	2-polig, hylsa	
0530	11A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0540	11B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0540				USE 9120957				
0550								
0560	12	95 03 319		EL. WINDOW REGULATOR,	X	Contact housing	Kontakthus	4
0570				STD FAN, LEVEL GUARD		2-pole, female	2-polig, hylsa	
0580				RADIATOR, LEVEL SWITCH,				
0590				WASHER MOTOR, FAN AC,				
0600				FOG LIGHT, JOINT PIECE,				
0610				OUTER TEMP,DAY DRIVING				
0620				LIGHT, MICRO SWITCH, FOG				
0630				LIGHT EXTRA, ABS, DOOR				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-C04

Contact housing etc
1996

Kontakthus etc
1996

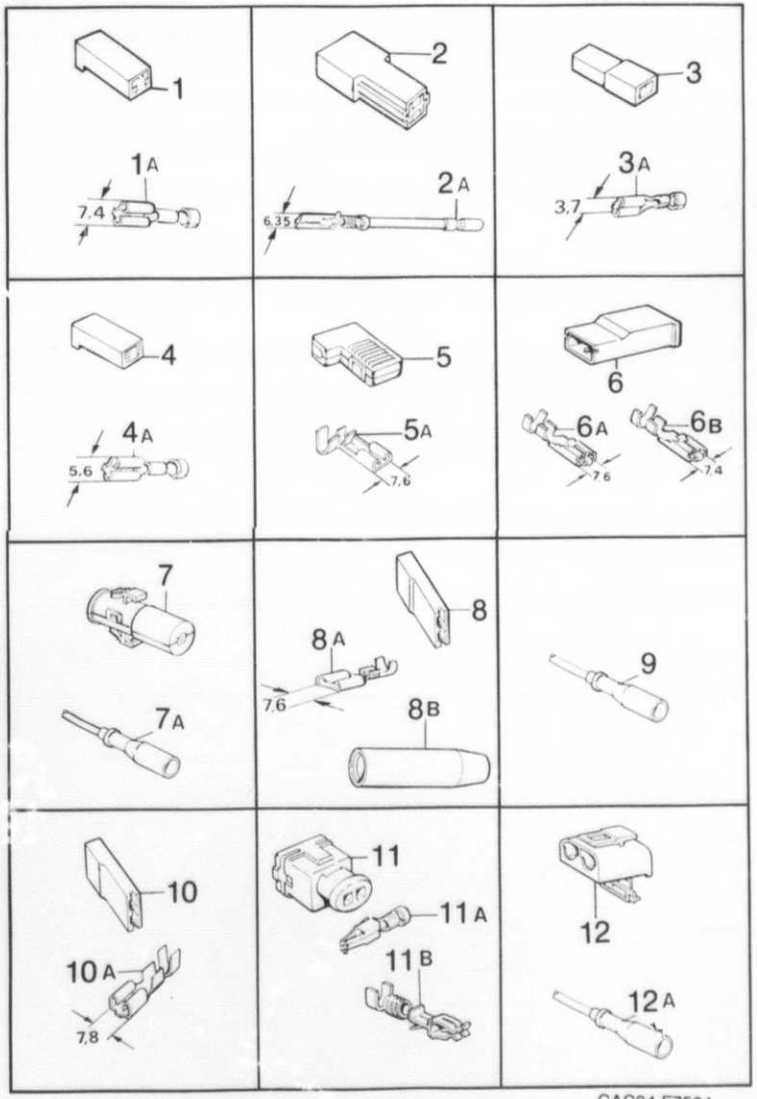

CAC94 F7564


1735	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640				FAN, BY-PASS, TRUNK LID, JOINT PIECE				
0650								
0660	12A	85 47 796			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

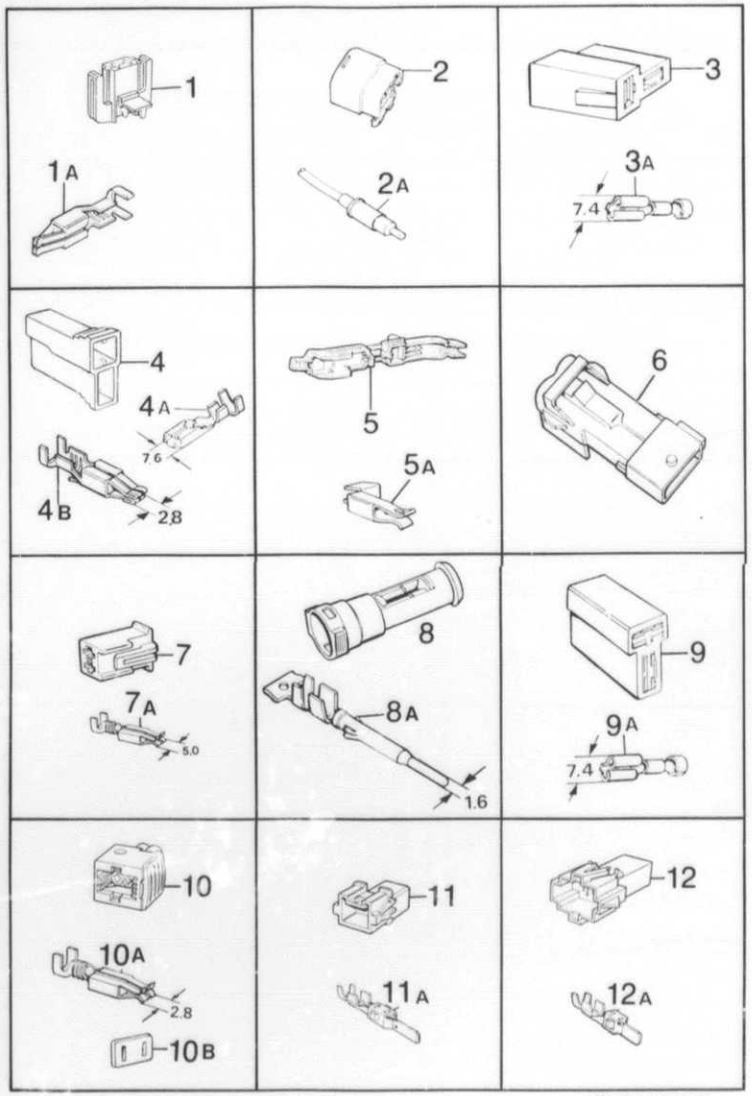

CAC94 F7565

Wiring and fuses

3-C06

Contact housing etc

1996

Ledningar och säkringar

Kontakthus etc

1996

1740	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	91 24 157		LIGHT MIRROR, ACC, LIGHT CONTROLS, FAN AC, JOINT TRUNK LID, CENTRAL LOCK TANK HATCH, DOME LAMP, SUN ROOF, JOIN PIECE REAR HARNESS, RADIO	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0070	1A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0080	1A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0100	2	95 01 685		SWITCH LUGGAGE COMPARTMENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0120	2A	85 47 770			X	Connector	Skarvstycke	5
0140	3	85 58 538		CIGARETTE LIGHTER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0160	3A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0180	4	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0200	4A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0210	4B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0230	5	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0250	5A	95 52 191			X	Cable terminal	Kabelsko	5
0270	6	41 13 452		ABS UNIT MK4	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0300	7	91 23 548		THEFT ALARM, FOG LIGHT, LOUD SPEAKER, BY-PASS, DOOR SWITCH, SOLENOID IGNITION LOCK, CODING EXTRA LIGHTS, GLOVE COMPARTMENT LAMP, SHIFT LOCK, JOIN PIECE MAIN CABLE HARNESS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0380	7A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0400	8	42 24 895		SENSOR WHEELS	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0420	8A	95 19 398		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	8
0440	9	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0460	9A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0480	10	41 13 205		JOINT PIECE ABS UNIT, SPEED SENSOR, VACUM PUMP ABS, HORN, KNOCK SENSOR, TEMP SENSOR, TEMP SENSOR COOLANT, THEFT ALARM US, PRESSURE MONITOR AC, US	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0550	10A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0560	10B	41 14 310			X	Seal	Tätning	5
0580	11	41 17 164		SIDE INDICATOR LAMP, JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE TEMP SENSOR	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0620	11A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-C08

Contact housing etc
1996

Kontakthus etc
1996

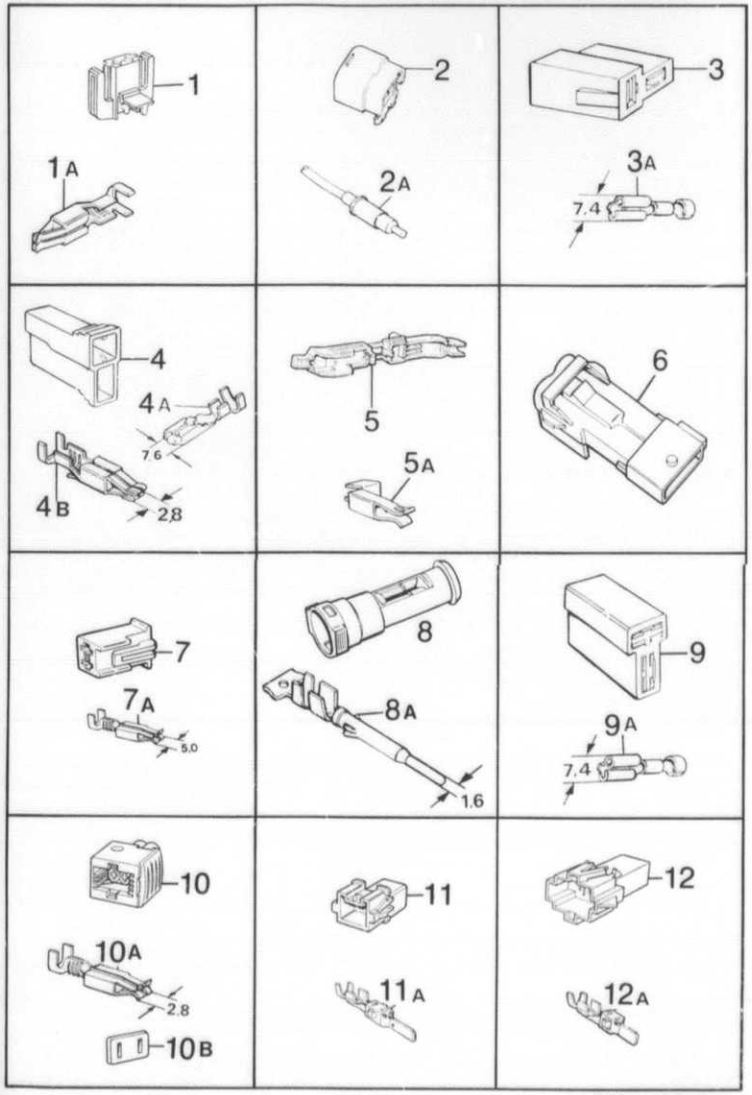

CAC94 F7565

1740	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0640	12	41 17 560		JOINT PIECE MAIN CABLE	X	Connector housing	Kontakthus	4
0650				HARNESS		2-pole, male	2-polig, stift	
0660	12A	41 15 580		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-C10

Contact housing etc
1996

Kontakthus etc
1996

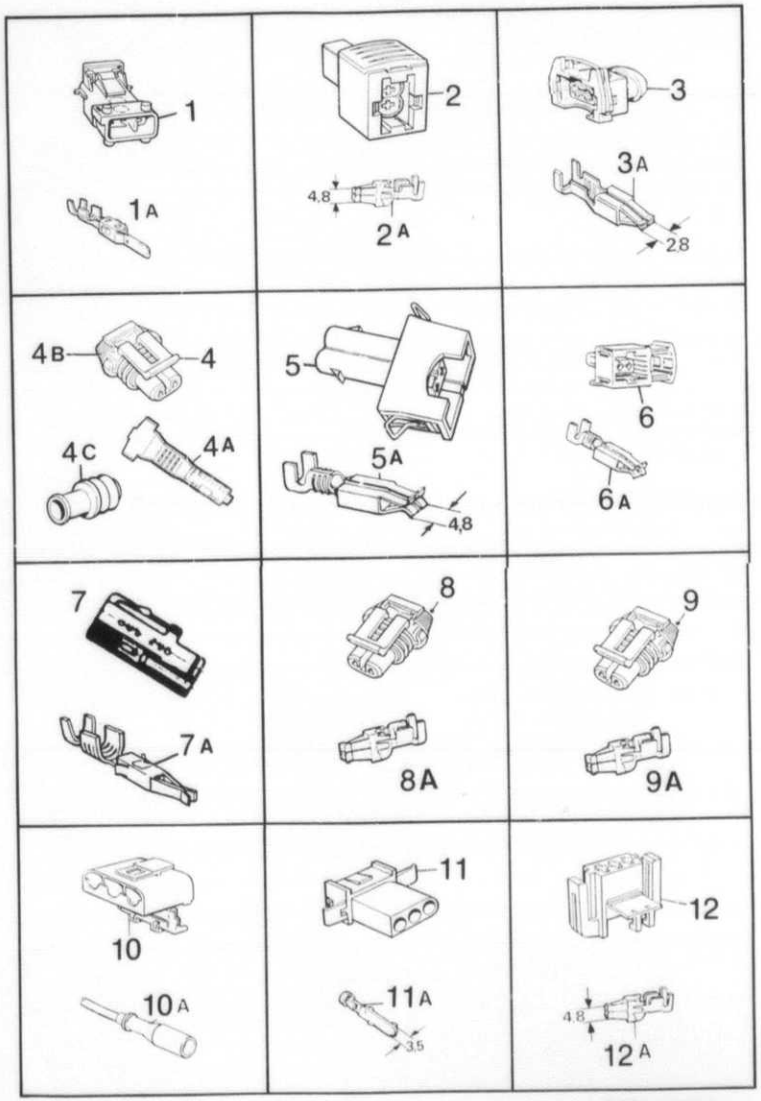

CAC94 F7566


1745	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0010	1	41 74 264		AIR-BAG PASSANGER	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0030	1A	41 15 077		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0050	2	41 13 411		JOINT PIECE ABS UNIT, COOLING FAN	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0070	2A	43 54 171		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0090	3	41 78 414		WATER PUMP B308, INJECTION VALVE, JOINT JOINT PIECE PEDAL SENSOR AUXILIARY AIR VALVE,	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0130	3A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0150	4	42 01 224		REVERS LIGHT CONTACT	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	5
0170	4A	44 18 505		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	5
0180	4B	42 01 232			X	Locking	Låsning	4
0190	4C	44 19 305			X	Seal red	Tätning röd	5
0210	4C	44 19 313			X	Seal blue	Tätning blå	5
0240	5	44 33 439		INJECTION VALVES B308	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0260	5A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0280	6	41 13 403		AIR PUMP, COOLING FAN 2-STEP	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0300	6A	43 54 171		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0320	7	41 76 780		MAKE-UP MIRROR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	5
0340	7A	41 15 499		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0360	8	46 68 588		TEMP SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0380	8A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0400	9	46 68 596		TERMO SWITCH, WATERTEMP	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0420	9A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0440	10	95 03 277		HEADLIGHT WIPERS, WIPER MOTOR, ABS, BY-PASS, HEADLIGHT LEVELLING, THEFT ALARM DOOR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0480	10A	85 47 796			X	Connector	Skarvstycke	5
0500	11	85 64 924		NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	5
0540	11A	85 44 322		AREA 2,0–4,0 MM2	X	Cable terminal	Kabelsko	5
0560	12	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, ELECTRONIC UNIT SPEED WARNING DEVICE	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	8
0630	12A	91 20 791		AREA 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

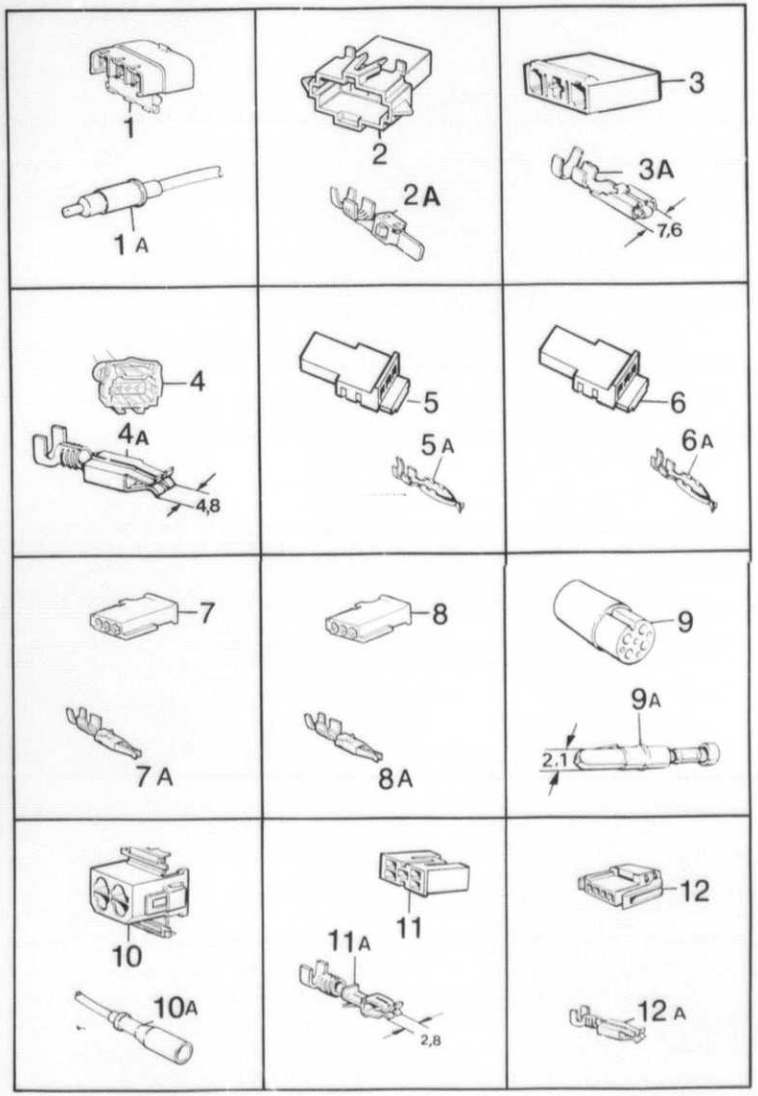

CAC94 F7567

Wiring and fuses

3-C12

Contact housing etc
1996

Ledningar och säkringar

Kontakthus etc
1996

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 327		PRESSURE MONITOR AC	X	Contact housing	Kontakthus	4
0020				R134A		3-pole, male	3-polig, stift	
0030	1A	85 47 770			X	Connector	Skarvstycke	5
0040								
0050	2	41 17 669		EL-ADJUSTED SEAT, JOINT	X	Connector housing	Kontakthus	4
0060				PIECE MAIN CABLE HARNESS		3-pole, male	3-polig, stift	
0070	2A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	95 07 658		SWITCH INTERIOR LIGHT	X	Contact housing	Kontakthus	4
0100						3-pole, female	3-polig, hylsa	
0110	3A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	4	44 32 316		SOLENOID VALVE, CRANK	X	Connector housing	Kontakthus	8
0140				SHAFT SENSOR, THROTTLE		3-pole, female	3-polig, hylsa	
0150				POT, PRESSURE SENSOR,				
0160				PRESSURE SENSOR TRIONIC,				
0170				IDLE SPEED CONTROL				
0180	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0190								
0200	5	41 09 195		MEMORY UNIT CHAIR	X	Contact housing	Kontakthus	4
0210						3-pole, female	3-polig, hylsa	
0220	5A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0230								
0240	6	41 09 187		MEMORY UNIT CHAIR	X	Contact housing	Kontakthus	4
0250						3-pole, female	3-polig, hylsa	
0260	6A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0270								
0280	7	41 13 007		HORN BUTTON	X	Connector housing	Kontakthus	4
0290						3-pole, female	3-polig, hylsa	
0300	7A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0310								
0320	8	45 17 702		AIRBAG DRIVER	X	Connector housing	Kontakthus	4
0330						3-pole, female	3-polig, hylsa	
0340	8A	44 66 801		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0350								
0360	9	85 30 099		ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0370						4-pole, male	4-polig, stift	
0380	9A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0390								
0400	10	95 03 434		CONTROL UNIT ACC, JOINT	X	Contact housing	Kontakthus	4
0410				PIECE, PTHEFT ALARM		4-pole, female	4-polig, hylsa	
0420	10A	85 47 796			X	Connector	Skarvstycke	5
0430	10A	78 74 498			X	Connection	Skarv	5
0440								
0450	11	91 23 555		FAN INDOOR TEMP, JOINT	X	Contact housing	Kontakthus	4
0460				PIECE MAIN CABLE HAR-		4-pole, female	4-polig, hylsa	
0470				NESS/APC, LUGGAGE COM-				
0480				PARTMENT LOCK, PHONE,				
0490				SWITCH WARNING FLASHER,				
0500				REAR WIPER, TAIL LAMP				
0510	11A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS -	X	Cable terminal	Kabelsko	5
0510				USE 9120957				
0520								
0530	12	40 60 869		SUN SENSOR	X	Contact housing	Kontakthus	5
0540						4-pole, female	4-polig, hylsa	
0550	12A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-C14

Contact housing etc
1996

Kontakthus etc
1996

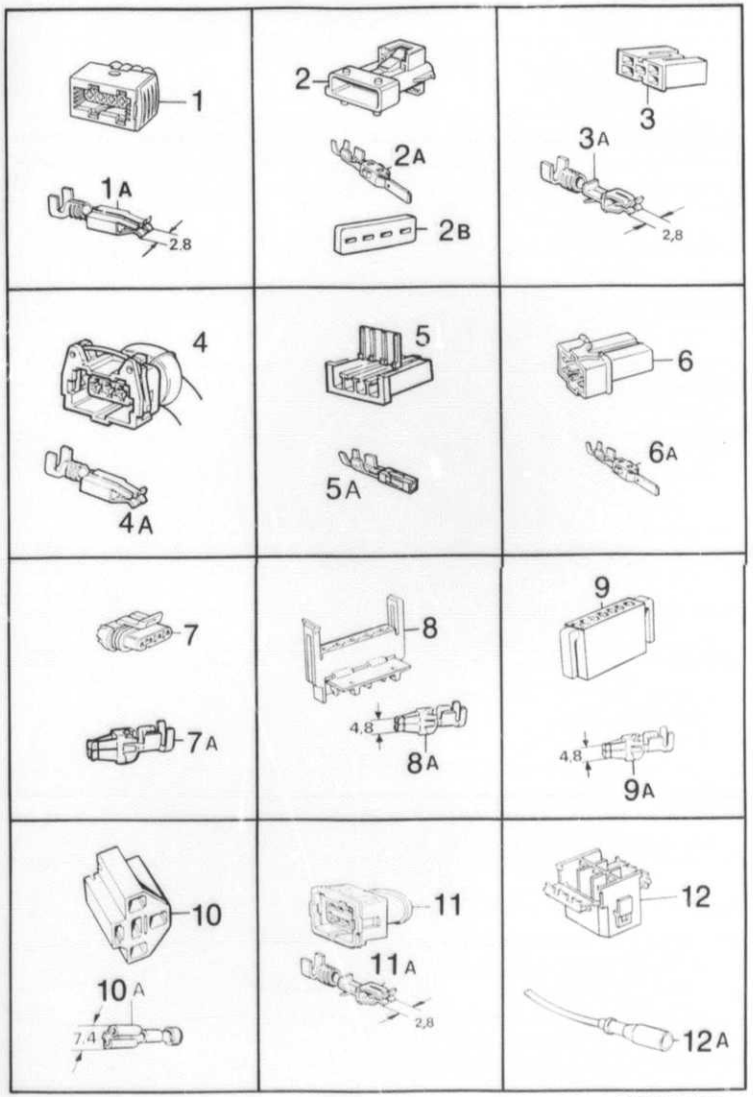

CAC94 F7568


Pos	Part No/Art nr	K/S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S/L
1	41 13 601		HEAD LIGHT, HEAT PLATES, LAMBDA SONDE, SENSOR KRANKSHAFT, SENSOR CAMSHAFT, PRESSURE MONITOR	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	8
1A	43 50 526		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
2	41 13 650		SENSOR FUEL PUMP, JOINT PIECE	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	8
2A	41 15 192		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
2B	41 13 759			X	Seal	Tätning	5
3	40 61 503		CONTACT PARKING PAWL	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
3A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
4	44 32 357		MASS AIR FLOW SENSOR	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	8
4A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
5	45 37 411		SENSOR THEFT ALARM	X	Connector housing 4-pole, female	Kontakthus 4-polig, hylsa	4
5A	45 38 310		AREA, 0,2–0,56 MM2	X	Cable terminal	Kabelsko	5
6	41 17 263		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 4-pole, male	Kontakthus 4-polig, stift	4
6A	41 15 077		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
7	46 68 604		IGNITION COIL	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	8
7A	40 61 586		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
8	91 22 789		RESISTOR HEATING FAN	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
8A	91 20 791		AREA, 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8
9	91 24 173		GEAR INDICATOR, JOINT PIECE, GEAR INDICATOR STARTER INHIBITOR	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	4
9A	91 20 791		AREA, 2,5–4,0 MM2	X	Cable terminal	Kabelsko	8
10	85 33 697		RELAY EXHAUST TEMP	X	Contact housing 5-pole, female	Kontakthus 5-polig, hylsa	
10A	85 82 454		AREA, 0,5–1,5 MM2	X	Cable terminal	Kabelsko	
11	44 32 365		TCS	X	Connector housing 5-pole, female	Kontakthus 5-polig, hylsa	
11A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
12	95 03 475		JOINT PIECE	X	Contact housing 6-pole, female	Kontakthus 6-polig, hylsa	4
12A	85 47 796			X	Connector	Skarvstycke	5
12A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

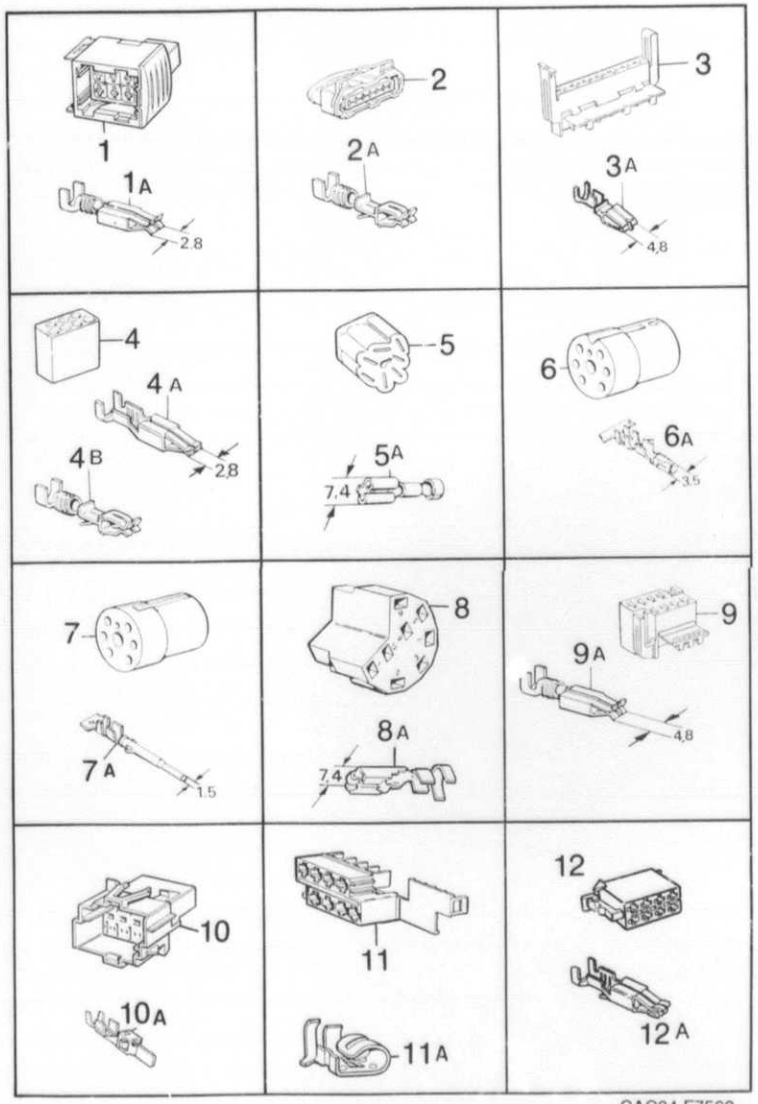

CAC94 F7569

Wiring and fuses

3-C16 Contact housing etc 1996

Ledningar och säkringar

Kontakthus etc 1996


1760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 13 809		WASHER MOTOR, CENTRAL LOCK, JOINT PIECE BOOT LID, JOINT PIECE ENGINE	X	Connector housing 6-pole, female	Kontakthus 6-polig, hylsa	4
0040	1A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0060	2	85 93 949		VALVE, OUTPOT STAGE	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0080	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0100	3	91 22 797		THEFT ALARM, SWITCH DIRECTION INDICATOR, SWITCH SPEED CONTROL, TAIL LIGHT	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0140	3A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0160	4	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	4
0180	4A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0190	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0200	4B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0220	5	95 03 251		HEATING FAN	X	Contact housing 7-pole, female	Kontakthus 7-polig, hylsa	5
0240	5A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0250	5A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0270	6	85 21 700		JOINT PIECE	X	Contact 7-pole, female	Kontakt 7-polig, hylsa	4
0290	6A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0310	7	85 21 718		JOINT PIECE CABLE HARNESS DOORS	X	Contact housing 7-pole, male	Kontakthus 7-polig, stift	4
0330	7A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350	8	85 44 363		SWITCH LIGHT	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0370	8A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0380	8A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0400	9	91 24 090		SWITCH REAR DEMIST, DCC, SWITCH SUN ROOF REGULATOR, TOW HOOK, SWITCH CENTRAL LOCK, ON/OFF, JOINT PIECE CABLE HARNESS ROOF, JOINT PICE TRUN LID	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0470	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0490	10	41 17 768		HEATING PAD, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 8-pole, male	Kontakthus 8-polig, stift	4
0520	10A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0540	11	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0560	11A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0580	12	42 03 626		RADIO	X	Connector housing 8-pole, female	Kontakthus 8-polig, hylsa	4
0600	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

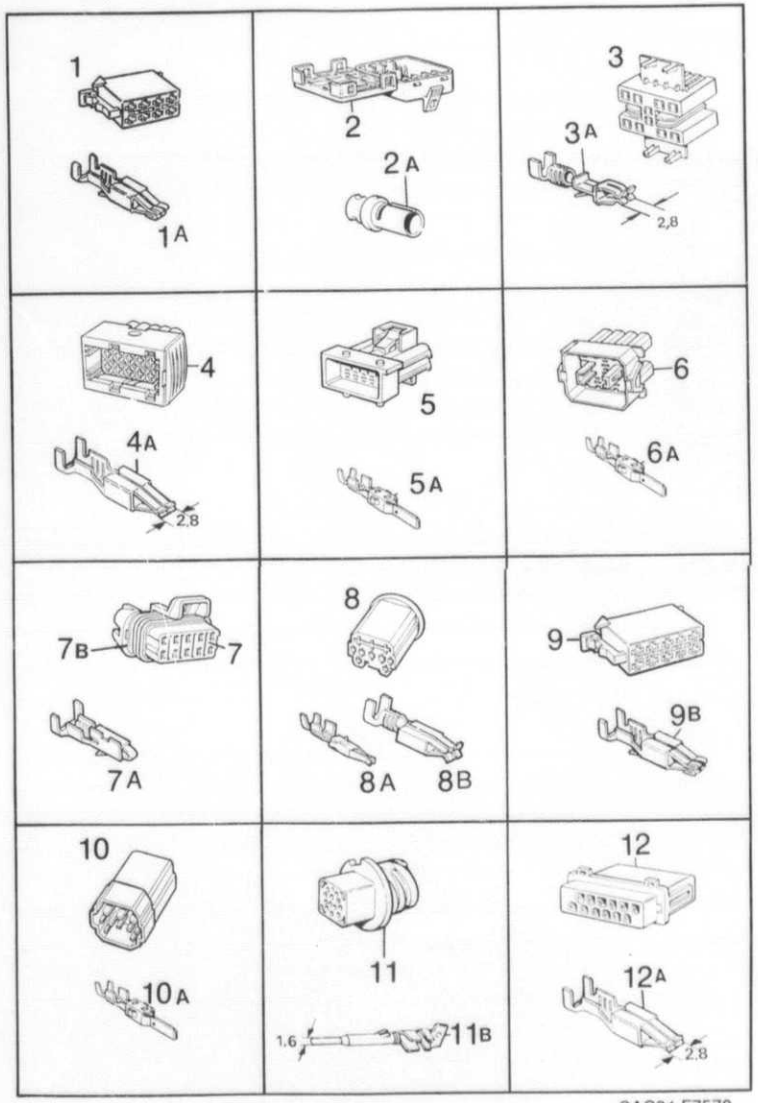

CAC94 F7570

Wiring and fuses

3-C18

Contact housing etc

1996

Ledningar och säkringar

Kontakthus etc

1996

1765	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 03 618		RADIO	X	Connector housing	Kontakthus	4
0020						8-pole, female	8-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	95 12 930		LOCK STEERING COLUMN	X	Contact housing	Kontakthus	4
0060						9-pole, female	9-polig, hylsa	
0070	2A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0080								
0090	3	91 23 399		SWITCH AC, RECIRKULATION AC, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELLING, SWITCH TCS, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT, LIGHT INSTEP, BOOT LID, JOINT PIECE REAR CABLE HARNESS, JOINT PIECE	X	Connector housing	Skarvhus	4
0100						10-pole, female	10-polig, hylsa	
0110								
0120								
0130								
0140								
0150								
0160								
0170								
0180	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0190	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0200								
0210	4	41 14 005		ABS, JOINT PIECE CABLE HARNESS FRONT, BULB CONTROL, JOINT PIECE MAIN CABLE HARNESS, DI-CASETTE	X	Connector housing	Kontakthus	8
0220						10-pole, female	10-polig, hylsa	
0230								
0240								
0250								
0260	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0270	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0280								
0290	5	41 14 054		JOINT PIECE ENGINE	X	Connector housing	Kontakthus	8
0300						10-pole, male	10-polig, stift	
0310	5A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0320								
0330	6	41 17 461		BY-PASS UNIT, JOINT PIECE CABLE HARNESS ROOF JOINT PIECE, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing	Skarvhus	4
0340						10-pole, male	10-polig, stift	
0350								
0360								
0370	6A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	8
0380	6A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0390								
0400	7	42 03 568		SPEED CONTROL SYSTEM	X	Connector housing	Kontakthus	4
0410						10-pole, female	10-polig, hylsa	
0420	7A	44 18 505		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0430	7B	42 03 576			X	Locking	Låsning	4
0440								
0450	8	44 11 518		JOINT PIECE REAR DOOR, PROGR. TRIONIC	X	Connector housing	Kontakthus	
0460						10-pole, female	10-polig, hylsa	
0470	8A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0480	8B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0490								
0500	9	42 03 634		AMPLIFIER US	X	Connector housing	Kontakthus	4
0510						10-pole, female	10-polig, hylsa	
0520	9A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0530								
0540	10	44 10 510		JOINT PIECE REAR DOOR	X	Connector housing	Kontakthus	4
0550						10-pole, male	10-polig, stift	
0560	10A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0570								
0580	11	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing	Kontakthus	4
0590						12-pole, male	12-polig, stift	
0600	11A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0610								
0620	12	95 25 031		ELECT-RONIC UNIT CENTRAL LOCK	X	Contact housing	Kontakthus	5
0630						12-pole, female	12-polig, hylsa	
0640	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-C20

Contact housing etc
1996

Kontakthus etc
1996

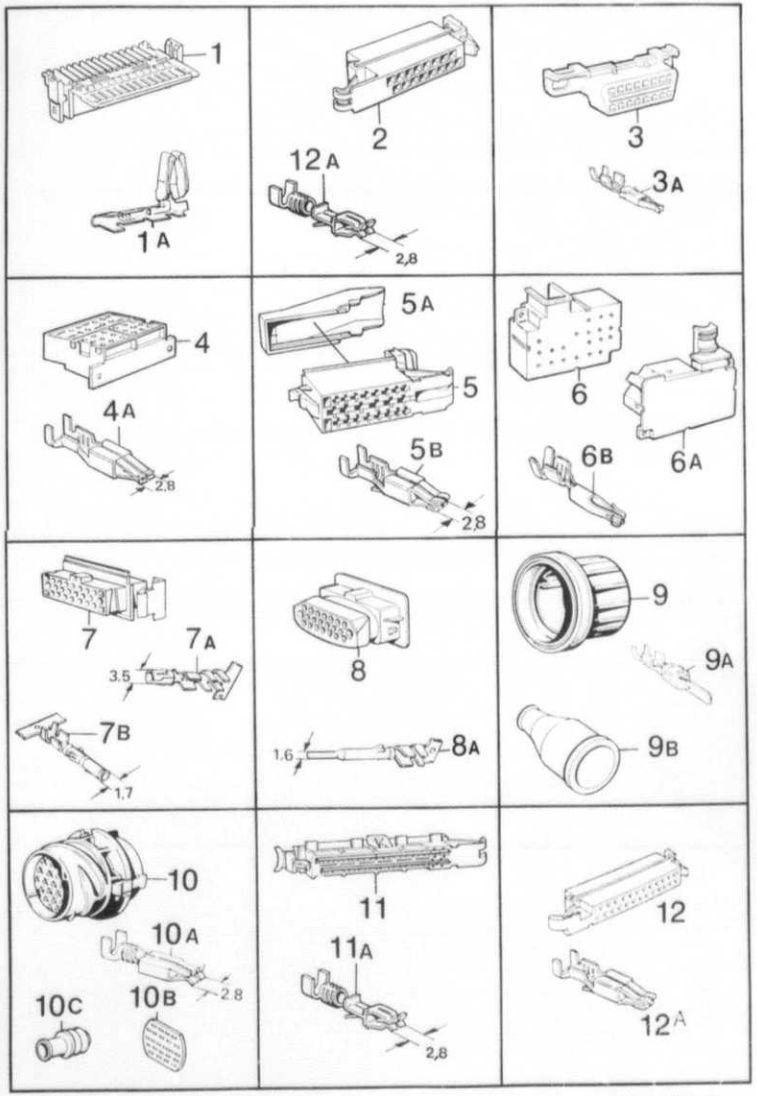

CAC94 F7571


1770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 020		INSTRUMENTS, PICTOGRAM	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0020								
0030	1A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0040								
0050	2	95 66 282		EAS WITH MEMORY	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
0060								
0070	2A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0070								
0080								
0090	3	42 24 606		DIAGNOS	X	Connector housing 16-pole, female	Kontakthus 16-polig, hylsa	8
0100								
0110	3A	41 15 499		AREA, 0,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0120								
0130	4	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0140								
0150	4A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0160								
0170	5	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0180								
0190	5A	40 67 617			X	Cover	Kåpa	4
0200	5B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0210								
0220	6	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0230								
0240	6A	95 27 763			X	Contact housing	Kontakthus	4
0250	6B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0260								
0270	7	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0280								
0290	7A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0300	7B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0310								
0320	8	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0330								
0340	8A	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	9	41 74 868		JOINT PIECE CABLE HARNESS FRONT	X	Connector housing 24-pole, male	Kontakthus 24-polig, stift	4
0370								
0380	9A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0390	9B	41 11 308			X	Rubber protection	Gummiskydd	4
0400	9C	45 88 349			X	Lock ring	Låsring	
0410								
0420	10	41 76 244		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 24-pole, female	Kontakthus 24-polig, hylsa	8
0430								
0440	10A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0450	10B	43 52 936			X	Seal	Tätning	5
0460	10C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
0470	10C	40 61 966		1,2-2,0 MM	X	Seal	Tätning	5
0480	10C	40 61 974		2,1-2,0 MM	X	Seal	Tätning	5
0490								
0500	11	41 76 186		AMPLIFIER US, VSS-ALARM	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0510								
0520	11A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0530								
0540	12	45 37 429		THEFT ALARM	X	Contact housing 25-pole, female	Kontakthus 25-polig, hylsa	5
0550								
0560	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

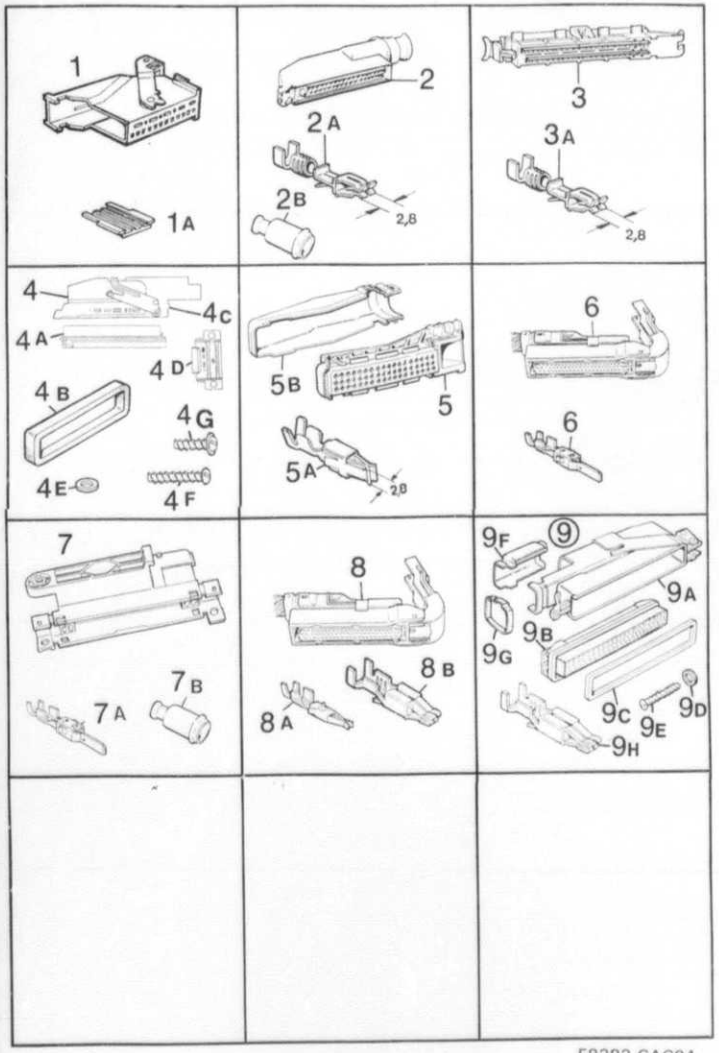

F8383 CAC94

Wiring and fuses

3-C22

Contact housing etc

1996

Ledningar och säkringar

Kontakthus etc

1996

1775	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	47 34 455		DIAGNOSTIC UNIT AIR-BAG	X	Cover	Kåpa	4
0020						30-pole	30-polig	
0030	1A	47 34 471			X	Locking	Låsning	4
0040								
0050	2	44 34 031		TCS	X	Contact housing	Kontakthus	
0060						35-pole, female	35-polig, hylsa	
0070	2A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0080								
0090	3	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing	Kontakthus	5
0100						39-pole, female	39-polig, hylsa	
0110	3A	40 63 970		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0120	3A	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0130								
0140	4	45 17 629		ELECTRONIC UNIT MOTRONIC	X	Connector housing	Kontakthus	8
0150						55-pole, female	55-polig, hylsa	
0160	4A	42 24 630		1)	1	.Connector housing	.Kontakthus	4
0170	4B	42 24 655		1)	1	.Seal	.Tätning	5
0180	4C	45 17 637		1)	1	.Cover	.Kåpa	4
0190	4D	45 17 652		1)	1	.Seal	.Tätning	5
0200	4E	85 87 461			1	Seal	Tätning	5
0210	4F	42 23 483			1	Screw	Skruv	5
0220	4G	42 23 574			1	Screw	Skruv	5
0230	4H	91 20 957			X	Cable terminal	Kabelsko	8
0240								
0250	5	43 53 637		ELECTRONIC UNIT ABS WITH TCS	X	Contact housing	Kontakthus	
0260						55-pole, female	55-polig, hylsa	
0270	5A	40 61 586		AREA, 1,5–2,5 MM2	X	Cable terminal	Kabelsko	8
0280	5B	44 18 380			X	Cover	Kåpa	4
0290								
0300	6	41 76 616		ELECTRONIC UNIT TRIONIC	X	Connector housing	Kontakthus	8
0310						70-pole, female	70-polig, hylsa	
0320	6A	43 54 353		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0330	6A	40 61 586		AREA, 1,5–2,5 MM2	X	Cable terminal	Kabelsko	8
0340								
0350	7	43 54 692		JOINT MAIN CABLE HARNESS	X	Connector housing	Kontakthus	8
0360						70-pole, female	70-polig, hylsa	
0370	7	45 35 530		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	5
0380	7A	45 38 625		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	5
0390	7A	41 15 192		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8
0400	7B	43 54 239			X	Seal	Tätning	5
0410						grey	grå	
0420	7B	43 54 239			X	Seal	Tätning	5
0430						white	vit	
0440								
0450	8	41 76 624		JOINT ENGINE	X	Connector housing	Kontakthus	8
0460						70-pole, female	70-polig, hylsa	
0470	8A	43 54 353		AREA, 0,5–1,0 MM2	X	Cable terminal	Kabelsko	8
0480	8B	40 61 586		AREA, 1,5–2,5 MM2	X	Cable terminal	Kabelsko	8
0490								
0500	9	42 22 451		ELECTRONIC CONTROL MOTRONIC	X	Contact housing	Kontakthus	8
0510						88-pole, female	88-polig, hylsa	
0520	9A	• 42 23 558		1)	1	.Cover	.Kåpa	4
0530	9B	• 42 23 541		1)	1	.Contact housing	.Kontakthus	5
0540	9C	• 42 23 566		1)	1	.Seal	.Tätning	5
0550	9D	85 87 461			1	.Seal	.Tätning	5
0560	9E	42 23 574		1)	1	.Screw	.Skruv	5
0570	9F	• 42 23 582		1)	1	.Cable attachment	.Ledningsfäste	5
0580	9G	• 42 23 590		1)	1	.Tensioning band	.Spännband	4
0590	9H	91 20 957		AREA, 1,0–2,5 MM2	X	Cable terminal	Kabelsko	8


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

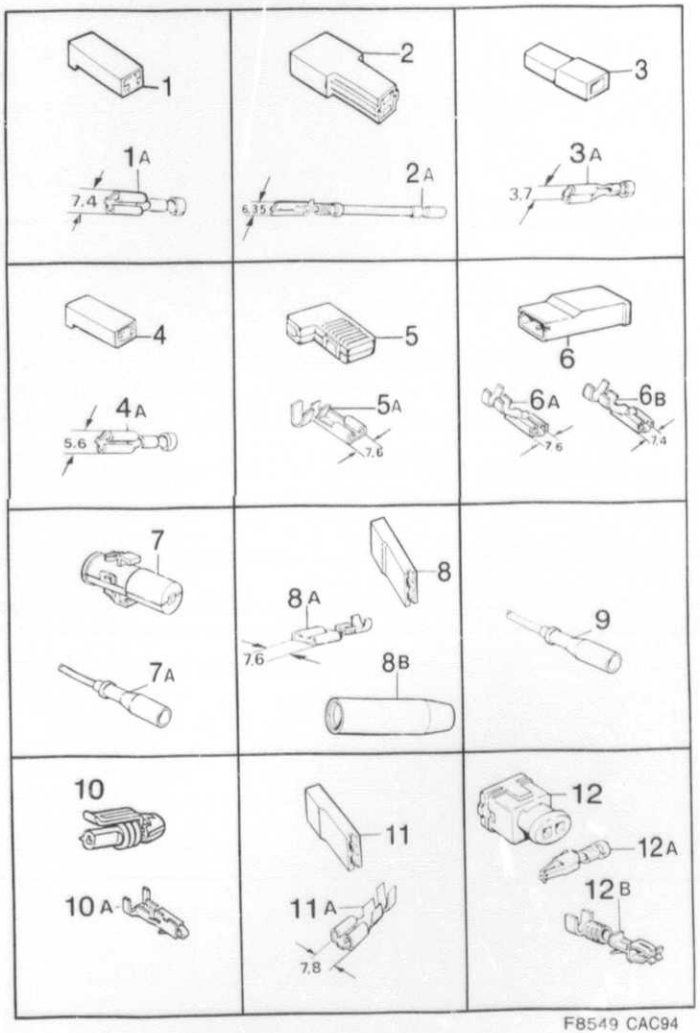

F8549 CAC94

Wiring and fuses

3-C24

Contact housing etc

1997-

Ledningar och säkringar

Kontakthus etc

1997-


1780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 112		IGNITION PULS, LIGHT	X	Contact housing	Kontakthus	4
0020				GEAR INDICATOR, STOP LIGHT		1-pole, female	1-polig, hylsa	
0030								
0040	1A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0050								
0060	2	71 55 120		EL-MIRROR, EL-CENTRAL, THEFT ALARM	X	Contact housing	Kontakthus	4
0070						1-pole, male	1-polig, stift	
0080	2A	85 22 542		AREA, 1,0-2,6 MM2	X	Cable terminal	Kabelsko	5
0090								
0100	3	85 30 115		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0110						1-pole, male	1-polig, stift	
0120	3A	85 30 107		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	3
0130								
0140	4	85 33 184		LOUDSPEAKER	X	Contact housing	Kontakthus	4
0150						1-pole, male	1-polig, stift	
0160	4A	85 82 439		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0170								
0180	5	85 21 692		REAR DEMIST, GROUND, LIGHT INSTEP	X	Contact housing	Kontakthus	4
0190						1-pole, female	1-polig, hylsa	
0200	5A	85 22 526		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210								
0220	6	85 41 229		LIGHT INSTEP, LIGHT NUMBER PLATE, READING LAMP, SEAT BELT WARNING, SWITCH SPOT LIGHT, CONTACT LIGHT, LIGHT GLOVE BOX	X	Sleeve	Isoleringshylsa	5
0230						1-pole, male	1-polig, stift	
0240								
0250								
0260								
0270								
0280	6A	*85 41 203*		AREA, 0,5-1,5 MM2 NLS - USE 8560476	X	Cable terminal	Kabelsko	5
0280								
0290	6B	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0300								
0310	7	95 03 418		COMPRESSOR	X	Connector housing	Skarvhus	4
0320						1-pole, female	1-polig, hylsa	
0330	7A	85 47 796			X	Connector	Skarvstycke	5
0340								
0350	8	85 16 916		THERMO CONTACT, LIGHT ASH TRAY, HORN, LIGHT LUGGAGE COMPARTMENT, SWITCH HAND BRAKE, JOINT, JOINT PIECE REAR DOOR, ANTI THEFT ALARM	X	Insulation	Isolering	4
0360						1-pole, female	1-polig, hylsa	
0370								
0380								
0390								
0400								
0410								
0420	8A	85 14 036		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0430	8B	95 69 997			X	Protection	Skydd	4
0440								
0450	9	85 47 804		DIRECTION INDICATOR	X	Connector	Skarvstycke	5
0460								
0461	10	42 03 378		OIL MONITOR	X	Connector housing	Kontakthus	4
0462						1-pole, female	1-polig, hylsa	
0463	10A	44 18 505		AREA 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0464								
0470	11	83 78 630		PEDAL CONTACT SPEED CONTROL	X	Contact housing	Kontakthus	4
0480						2-pole, female	2-polig, hylsa	
0490	11A	85 22 575		AREA, 0,5-1,4 MM2	X	Cable harness	Ledningsnät	5
0500								
0510	12	85 93 899		AUXILIARY AIR VALVE, FUEL SYSTEM, VENTILATION	X	Contact housing	Kontakthus	4
0520						2-pole, female	2-polig, hylsa	
0530	12A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0540	12B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0540								
0550								

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

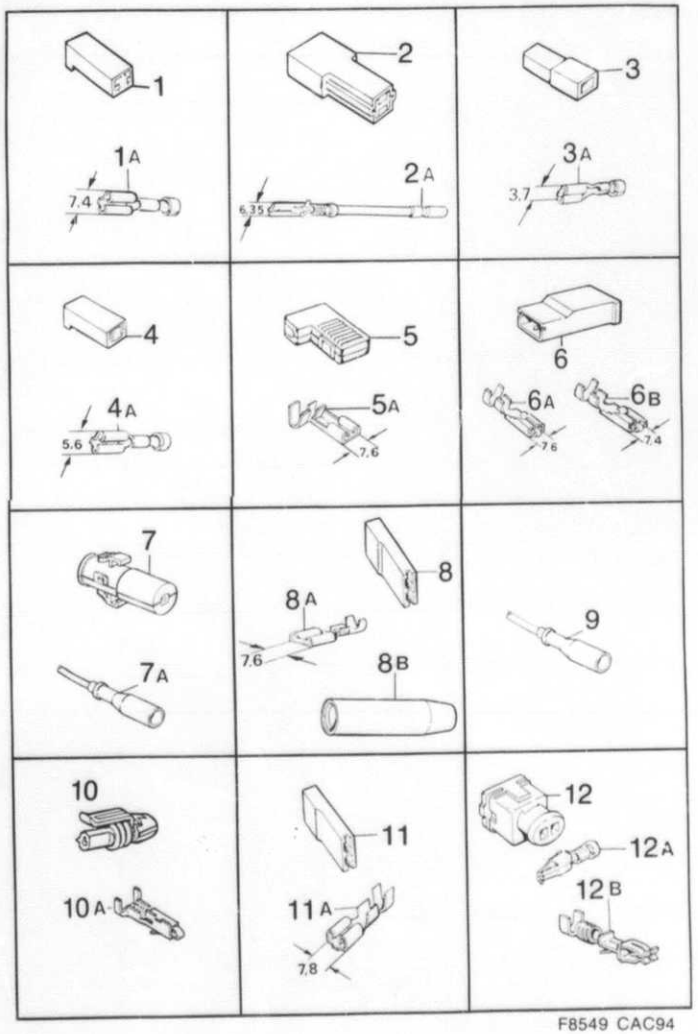

F8549 CAC94

Wiring and fuses

3-D02 *Contact housing etc* *1997-*

Ledningar och säkringar

Kontakthus etc ***1997-***


1780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	12	95 03 319		EL. WINDOW REGULATOR, STD FAN, LEVEL GUARD RADIATOR, LEVEL SWITCH, WASHER MOTOR, FAN AC, FOG LIGHT, JOINT PIECE, OUTER TEMP,DAY DRIVING LIGHT, MICRO SWITCH, FOG LIGHT EXTRA, ABS, DOOR FAN, BY-PASS, TRUNK LID, JOINT PIECE	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0660	12A	85 47 796			X	Connector	Skarvstycke	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

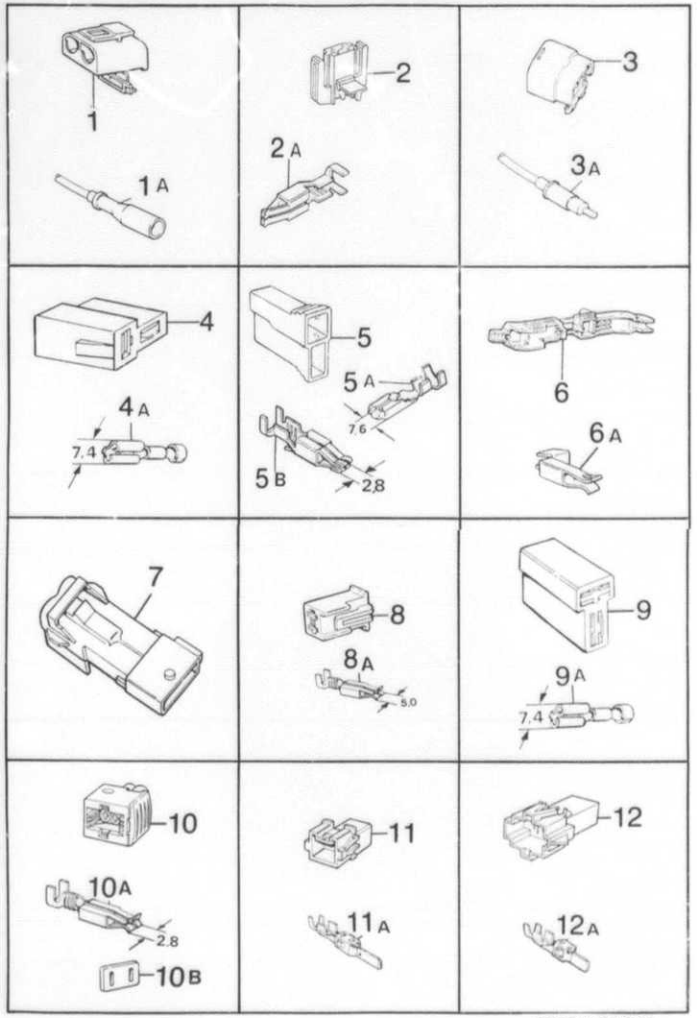

F8550 CAC94

Wiring and fuses

3-D04 Contact housing etc 1997-

Ledningar och säkringar

Kontakthus etc 1997-


1785 Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010 1	95 03 319		EL. WINDOW REGULATOR, STD FAN, LEVEL GUARD RADIATOR, LEVEL SWITCH, WASHER MOTOR, FAN AC, FOG LIGHT, JOINT PIECE, OUTER TEMP,DAY DRIVING LIGHT, MICRO SWITCH, FOG LIGHT EXTRA, ABS, DOOR FAN, BY-PASS, TRUNK LID, JOINT PIECE, TROTTEL SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0120 1A	85 47 796			X	Connector	Skarvstycke	5
0140 2	91 24 157		LIGHT MIRROR, ACC, LIGHT CONTROLS, FAN AC, JOINT TRUNK LID, CENTRAL LOCK TANK HATCH, DOME LAMP, SUN ROOF, JOIN PIECE REAR HARNESS, RADIO	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0200 2A	91 20 783		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0210 2A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0230 3	95 01 685		SWITCH LUGGAGE [illegible]MPART-MENT LOCK	X	Contact housing 2-pole, male	Kontakthus 2-polig, stift	4
0250 3A	85 47 770			X	Connector	Skarvstycke	5
0270 4	85 58 538		CIGARETTE LIGHTER	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0290 4A	85 22 534		AREA 0,8-2,1 MM2	X	Cable terminal	Kabelsko	5
0310 5	85 74 949		SPEED SENSOR	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0330 5A	85 60 476		AREA 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0340 5B	91 20 957		AREA 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0360 6	95 52 183		BELT TENSIONER	X	Contact housing 2-pole, female	Kontaktl-us 2-polig, hylsa	4
0380 6A	95 52 191			X	Cable terminal	Kabelsko	5
0400 7	41 13 452		ABS UNIT MK4	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0430 8	91 23 548		THEFT ALARM, FOG LIGHT, LOUD SPEAKER, BY-PASS, DOOR SWITCH, SOLENOID IGNITION LOCK, CODING EXTRA LIGHTS, GLOVE COMPARTMENT LAMP, SHIFT LOCK, JOIN PIECE MAIN CABLE HARNESS	X	Contact housing 2-pole, female	Kontakthus 2-polig, hylsa	4
0510 8A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0530 9	71 55 096		SWITCH BRAKE LIGHT	X	Connector housing 2-pole, male	Skarvhus 2-polig, stift	4
0550 9A	79 71 708		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0570 10	41 13 205		JOINT PIECE ABS UNIT, SPEED SENSOR, VACUM PUMP ABS, HORN, KNOCK SENSOR, TEMP SENSOR, TEMP SENSOR COOLANT, THEFT ALARM US, PRESSURE MONITOR AC, US	X	Connector housing 2-pole, female	Kontakthus 2-polig, hylsa	8
0640 10A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

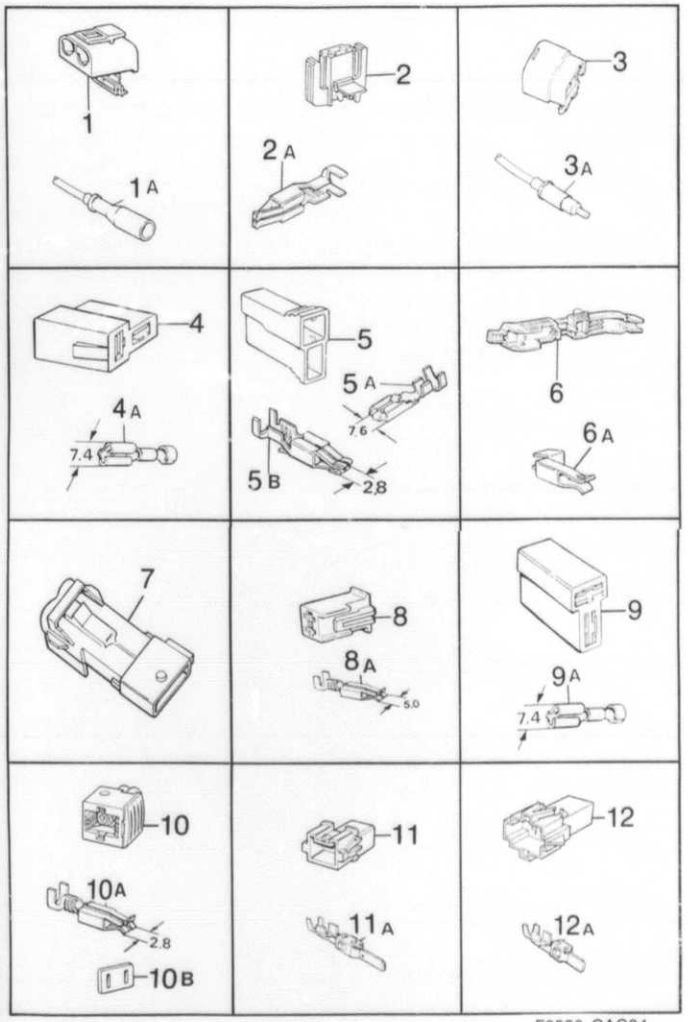

F8550 CAC94


1785	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650	10B	41 14 310			X	Seal	Tätning	5
0660								
0670	11	41 17 164		SIDE INDICATOR LAMP, JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE TEMP SENSOR	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0680								
0690								
0700								
0710	11A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0720								
0730	12	41 17 560		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 2-pole, male	Kontakthus 2-polig, stift	4
0740								
0750	12A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

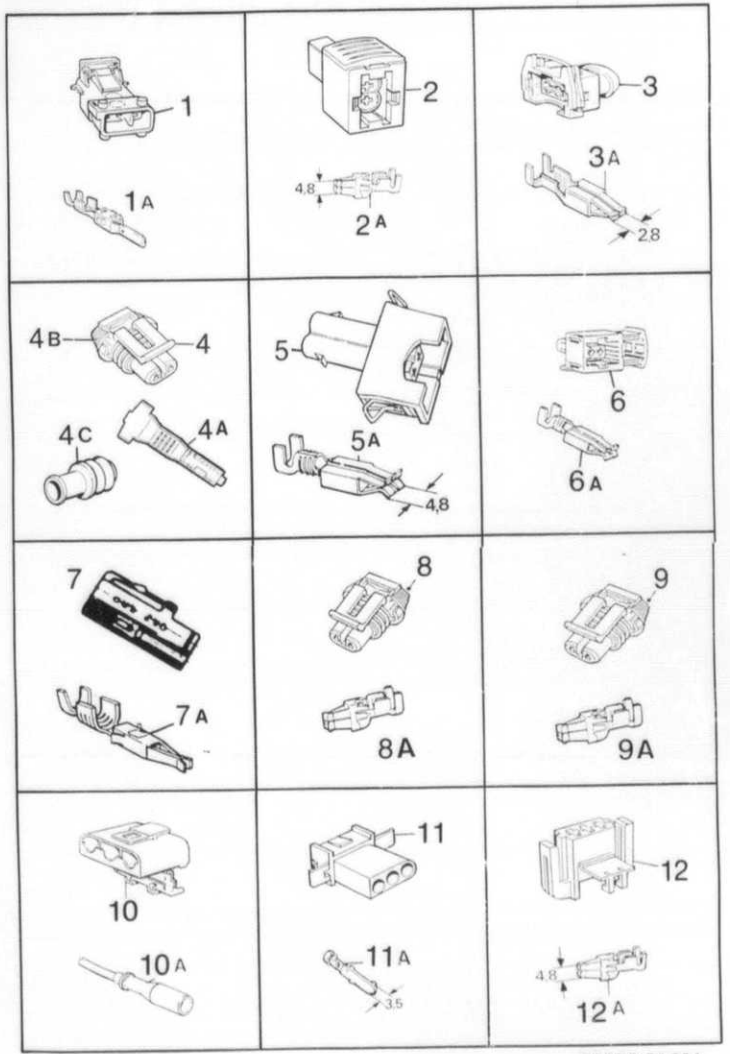

F8386 CAC94

Wiring and fuses

3-D08 Contact housing etc 1997-

Ledningar och säkringar

Kontakthus etc 1997-


1790	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 74 264		AIR-BAG PASSANGER	X	Connector housing	Kontakthus	4
0020						2-pole, male	2-polig, stift	
0030	1A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	41 13 411		JOINT PIECE ABS UNIT, COOLING FAN	X	Connector housing	Kontakthus	4
0060						2-pole, female	2-polig, hylsa	
0070	2A	43 54 171		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0080								
0090	3	41 78 414		WATER PUMP B308, INJECTION VALVE, JOINT JOINT PIECE PEDAL SENSOR AUXILIARY AIR VALVE,	X	Connector housing	Kontakthus	8
0100						2-pole, female	2-polig, hylsa	
0110								
0120								
0130	3A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0140								
0150	4	42 01 224		REVERS LIGHT CONTACT	X	Connector housing	Kontakthus	5
0160						2-pole, female	2-polig, hylsa	
0170	4A	44 18 505		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0180	4B	42 01 232			X	Locking	Låsning	4
0190	4C	44 19 305			X	Seal	Tätning	5
0200						red	röd	
0210	4C	44 19 313			X	Seal	Tätning	5
0220						blue	blå	
0230								
0240	5	44 33 439		INJECTION VALVES B308	X	Connector housing	Kontakthus	8
0250						2-pole, female	2-polig, hylsa	
0260	5A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0270								
0280	6	41 13 403		AIR PUMP, COOLING FAN 2-STEP	X	Connector housing	Kontakthus	8
0290						2-pole, female	2-polig, hylsa	
0300	6A	43 54 171		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0310								
0320	7	41 76 780		MAKE-UP MIRROR	X	Contact housing	Kontakthus	5
0330						2-pole, female	2-polig, hylsa	
0340	7A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0350								
0360	8	46 68 588		TEMP SENSOR	X	Contact housing	Kontakthus	8
0370						2-pole, female	2-polig, hylsa	
0380	8A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0390								
0400	9	46 68 596		TERMO SWITCH, WATERTEMP	X	Contact housing	Kontakthus	8
0410						2-pole, female	2-polig, hylsa	
0420	9A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0430								
0440	10	95 03 277		HEADLIGHT WIPERS, WIPER MOTOR, ABS, BY-PASS, HEADLIGHT LEVELLING, THEFT ALARM DOOR	X	Contact housing	Kontakthus	4
0450						3-pole, female	3-polig, hylsa	
0460								
0470								
0480	10A	85 47 796			X	Connector	Skarvstycke	5
0490								
0500	11	85 64 924		NUMBER PLATE LIGHT, JOINT PIECE CABLE HARNESS DOORS, JOINT PIECE TRUNK LID	X	Contact housing	Kontakthus	5
0510						3-pole, male	3-polig, stift	
0520								
0530								
0540	11A	85 44 322		AREA 2,0-4,0 MM2	X	Cable terminal	Kabelsko	5
0550								
0560	12	91 24 165		JOINT PIECE, LIGHT ASH TRAY REAR, ELECTRONIC UNIT REOSTAT, CLOCK, SPEEDOMETER, REOSTAT, JOINT PIECE PASSENGER SEAT, ELECTRONIC UNIT SPEED WARNING DEVICE	X	Contact housing	Kontakthus	8
0570						3-pole, female	3-polig, hylsa	
0580								
0590								
0600								
0610								
0620								
0630	12A	91 20 791		AREA 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

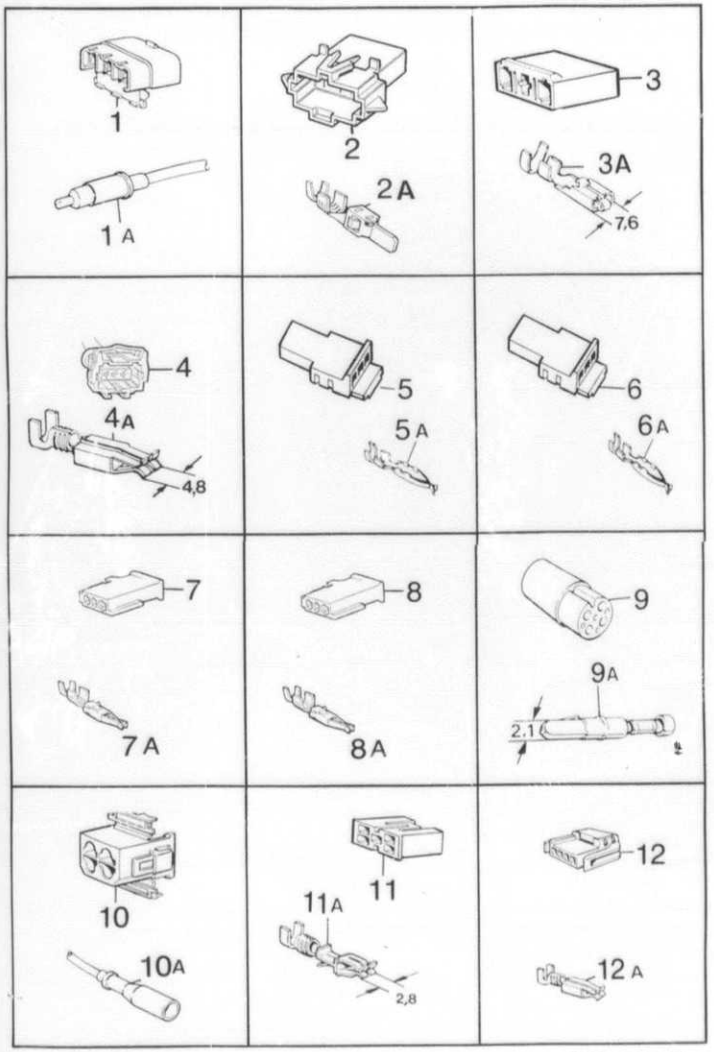

F8387 CAC94

Wiring and fuses

3-D10

Contact housing etc

1997-

Ledningar och säkringar

Kontakthus etc

1997-


1795	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 327		PRESSURE MONITOR AC R134A	X	Contact housing 3-pole, male	Kontakthus 3-polig, stift	4
0020	1A	85 47 770			X	Connector	Skarvstycke	5
0030	2	41 17 669		EL-ADJUSTED SEAT, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 3-pole, male	Kontakthus 3-polig, stift	4
0040	2A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0050	3	95 07 658		SWITCH INTERIOR LIGHT	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0060	3A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0070	4	44 32 316		SOLENOID VALVE, CRANK SHAFT SENSOR, PRESSURE SENSOR, PRESSURE SENSOR SENSOR TRIONIC, IDLE SPEED CONTROL	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	8
0080	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0090	5	41 09 195		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0100	5A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0110	6	41 09 187		MEMORY UNIT CHAIR	X	Contact housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0120	6A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0130	7	41 13 007		HORN BUTTON	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0140	7A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0150	8	45 17 702		AIRBAG DRIVER	X	Connector housing 3-pole, female	Kontakthus 3-polig, hylsa	4
0160	8A	44 66 801		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0170	9	85 30 099		ELECTRIC MIRROR	X	Contact housing 4-pole, male	Kontakthus 4-polig, stift	4
0180	9A	85 22 583		AREA, 0,8-3,4 MM2	X	Cable terminal	Kabelsko	5
0190	10	95 03 434		CONTROL UNIT ACC, JOINT PIECE, PTHEFT ALARM	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0200	10A	85 47 796			X	Connector	Skarvstycke	5
0210	10A	78 74 498			X	Connection	Skarv	5
0220	11	91 23 555		FAN INDOOR TEMP, JOINT PIECE MAIN CABLE HARNESS/APC, LUGGAGE COMPARTMENT LOCK, PHONE, SWITCH WARNING FLASHER, REAR WIPER, TAIL LAMP	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	4
0230	11A	*95 08 714*		AREA, 0,3-0,6 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0240	12	40 60 869		SUN SENSOR	X	Contact housing 4-pole, female	Kontakthus 4-polig, hylsa	5
0250	12A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

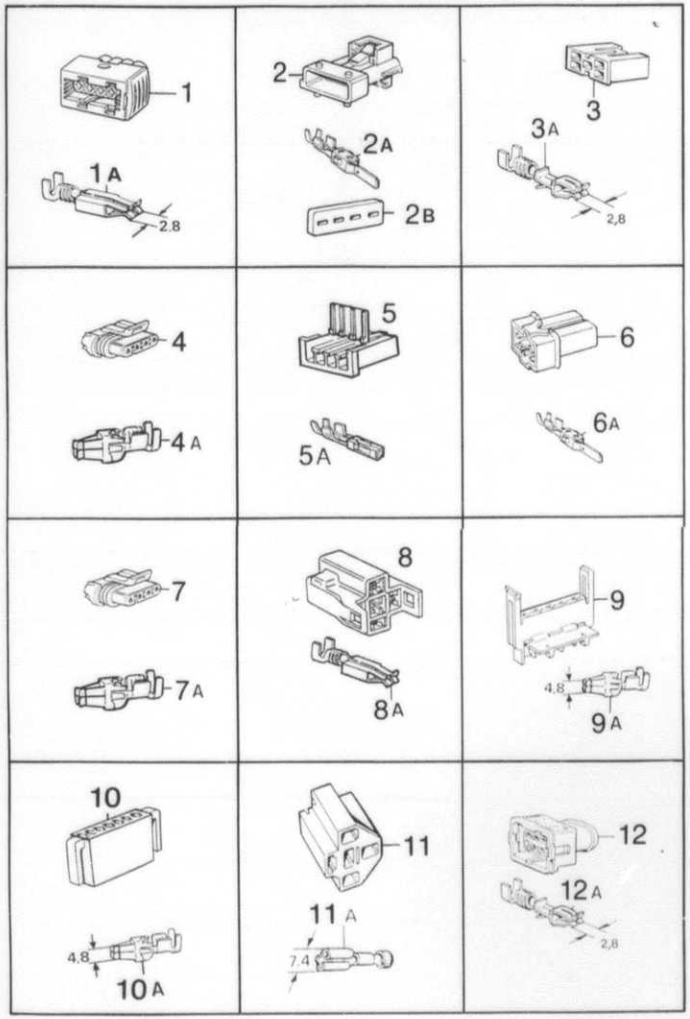

F8551 CAC94

Wiring and fuses

3-D12 Contact housing etc 1997-

Ledningar och säkringar

Kontakthus etc 1997-


1800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 13 601		HEAD LIGHT, HEAT	X	Connector housing	Kontakthus	8
0020				PLATES, LAMBDA SONDE,		4-pole, female	4-polig, hylsa	
0030				SENSOR KRANKSHAFT,				
0040				SENSOR CAMSHAFT,				
0050				PRESSURE MONITOR				
0060	1A	43 50 526		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0070								
0080	2	41 13 650		SENSOR FUEL PUMP,	X	Connector housing	Kontakthus	8
0090				JOINT PIECE		4-pole, male	4-polig, stift	
0100	2A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0110	2B	41 13 759			X	Seal	Tätning	5
0120								
0130	3	40 61 503		CONTACT PARKING PAW	X	Contact housing	Kontakthus	4
0140						4-pole, female	4-polig, hylsa	
0150	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0160								
0170	4	46 68 604		MASS AIR FLOW SENSOR	X	Contact housing	Kontakthus	8
0180						4-pole, female	4-polig, hylsa	
0190	4A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0200								
0210	5	45 37 411		SENSOR THEFT ALARM	X	Connector housing	Kontakthus	4
0220						4-pole, female	4-polig, hylsa	
0230	5A	45 38 310		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5
0240								
0250	6	41 17 263		JOINT PIECE MAIN CABLE	X	Connector housing	Kontakthus	4
0260				HARNESS		4-pole, male	4-polig, stift	
0270	6A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0280								
0290	7	46 68 604		IGNITION COIL	X	Contact housing	Kontakthus	8
0300						4-pole, female	4-polig, hylsa	
0310	7A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0320								
0321	8	42 24 317		BRAKE LIGHT SWITCH	X	Connector housing	Kontakthus	4
0322						4-pole, female	4-polig, hylsa	
0323	8A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0324								
0330	9	91 22 789		RESISTOR HEATING FAN	X	Contact housing	Kontakthus	4
0340						5-pole, female	5-polig, hylsa	
0350	9A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0360								
0370	10	91 24 173		GEAR INDICATOR, JOINT	X	Contact housing	Kontakthus	4
0380				PIECE, GEAR INDICATOR		5-pole, female	5-polig, hylsa	
0390				STARTER INHIBITOR				
0400	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0410								
0420	11	85 33 697		RELAY EXHAUST TEMP	X	Contact housing	Kontakthus	
0430						5-pole, female	5-polig, hylsa	
0440	11A	85 82 454		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	
0450								
0460	12	44 32 365		TCS	X	Connector housing	Kontakthus	
0470						5-pole, female	5-polig, hylsa	
0480	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0490								
0500	12	95 03 475		JOINT PIECE	X	Contact housing	Kontakthus	4
0510						6-pole, female	6-polig, hylsa	
0520	12A	85 47 796			X	Connector	Skarvstycke	5
0530	12A	78 74 498			X	Connection	Skarv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

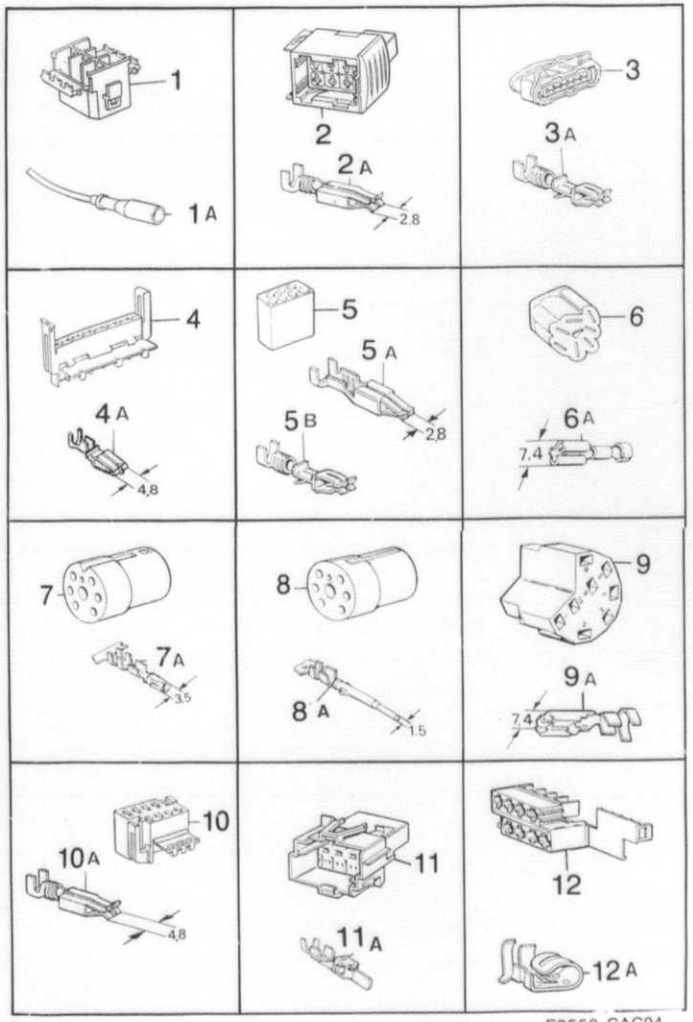

F8552 CAC94

Wiring and fuses

3-D14

Contact housing etc

1997-

Ledningar och säkringar

Kontakthus etc

1997-


1805	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 03 475		JOINT PIECE	X	Contact housing	Kontakthus	4
0020						6-pole, female	6-polig, hylsa	
0030	1A	85 47 796			X	Connector	Skarvstycke	5
0040	1A	78 74 498			X	Connection	Skarv	5
0050								
0060	2	41 13 809		WASHER MOTOR, CENTRAL	X	Connector housing	Kontakthus	4
0070				LOCK, JOINT PIECE BOOT		6-pole, female	6-polig, hylsa	
0080				LID, JOINT PIECE ENGINE				
0090	2A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0100								
0110	3	85 93 949		VALVE, OUTPOT STAGE	X	Contact housing	Kontakthus	4
0120						7-pole, female	7-polig, hylsa	
0130	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0130				USE 9120957				
0140								
0150	4	91 22 797		THEFT ALARM, SWITCH	X	Contact housing	Kontakthus	4
0160				DIRECTION INDICATOR,		7-pole, female	7-polig, hylsa	
0170				SWITCH SPEED CONTROL,				
0180				TAIL LIGHT				
0190	4	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0200								
0210	5	91 23 381		SWITCH ELECTRIC MIRROR	X	Contact housing	Kontakthus	4
0220						7-pole, female	7-polig, hylsa	
0230	5A	85 21 593		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0240	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0250	5B	*91 20 668*		AREA, 0,75-1,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0250				USE 9120957				
0260								
0270	6	95 03 251		HEATING FAN	X	Contact housing	Kontakthus	5
0280						7-pole, female	7-polig, hylsa	
0290	6A	*79 72 029*		AREA, 1,0-2,5 MM2 NLS -	X	Cable terminal	Kabelsko	5
0290				USE 8522534				
0300	6A	79 68 068		AREA, 4,0-6,0 MM2	X	Cable terminal	Kabelsko	5
0310								
0320	7	85 21 700		JOINT PIECE	X	Contact	Kontakt	4
0330						7-pole, female	7-polig, hylsa	
0340	7A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0350								
0360	8	85 21 718		JOINT PIECE CABLE HAR-	X	Contact housing	Kontakthus	4
0370				NESS DOORS		7-pole, male	7-polig, stift	
0380	8A	85 82 603		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0390								
0400	9	85 44 363		SWITCH LIGHT	X	Contact housing	Kontakthus	4
0410						8-pole, female	8-polig, hylsa	
0420	9A	85 60 476		AREA, 0,9-2,0 MM2	X	Cable terminal	Kabelsko	5
0430	9A	85 41 211		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	5
0440								
0450	10	91 24 090		SWITCH REAR DEMIST, DCC,	X	Contact housing	Kontakthus	4
0460				SWITCH SUN ROOF REGULA-		8-pole, female	8-polig, hylsa	
0470				TOR, TOW HOOK				
0480				SWITCH CENTRAL LOCK,				
0490				ON/OFF, JOINT PIECE				
0500				CABLE HARNESS ROOF,				
0510				JOINT PIECE TRUN LID				
0520	10A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0530								
0540	11	41 17 768		HEATING PAD, JOINT	X	Connector housing	Kontakthus	4
0550				PIECE MAIN CABLE HAR-		8-pole, male	8-polig, stift	
0560				NESS				
0570	11A	41 15 580		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	5
0580								
0590	12	95 03 525		SWITCH WINDOW REGULATOR	X	Contact housing	Kontakthus	4
0600						8-pole, female	8-polig, hylsa	
0610	12A	85 82 090		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

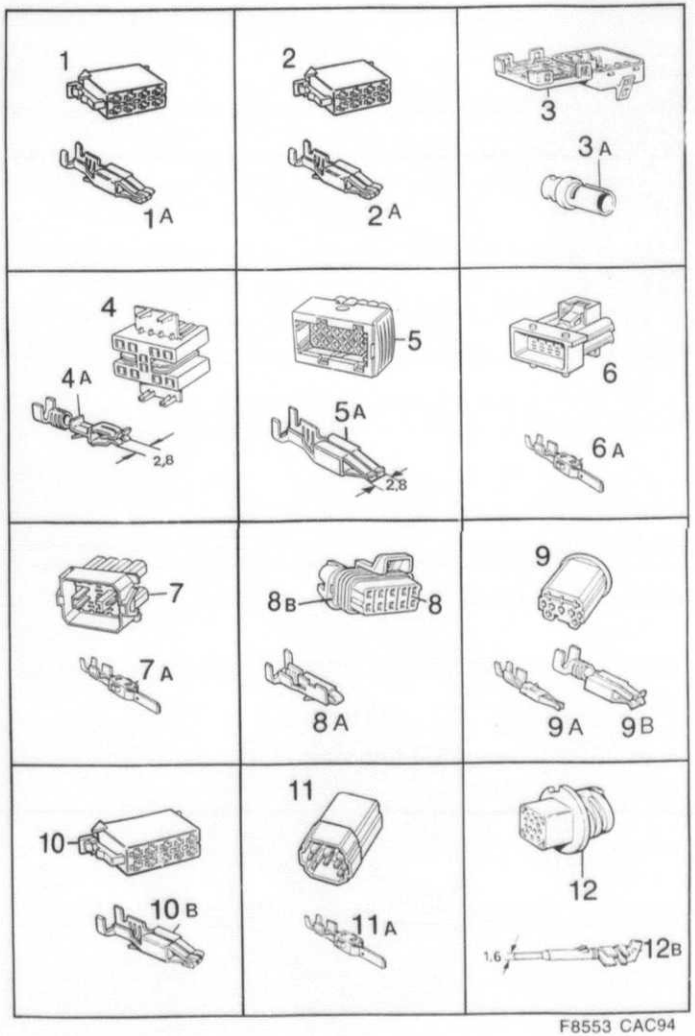

F8553 CAC94

Wiring and fuses

3-D16

Contact housing etc

1997-

Ledningar och säkringar

Kontakthus etc

1997-


1810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 03 626		RADIO	X	Connector housing	Kontakthus	4
0020						8-pole, female	8-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	42 03 618		RADIO	X	Connector housing	Kontakthus	4
0060						8-pole, female	8-polig, hylsa	
0070	2A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0080								
0090	3	95 12 930		LOCK STEERING COLUMN	X	Contact housing	Kontakthus	4
0100						9-pole, female	9-polig, hylsa	
0110	3A	95 09 746		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0120								
0130	4	91 23 399		SWITCH AC, RECIRKULATION AC, FOG LIGHT EXTRA, REOSTAT ELPAD, HEADLIGHT LEVELLING, SWITCH TCS, TEST CONNECTOR AIR-BAG, JOINT PIECE, REOSTAT, LIGHT INSTEP, BOOT LID, JOINT PIECE REAR CABLE HARNESS	X	Connector housing	Skarvhus	4
0140						10-pole, female	10-polig, hylsa	
0150								
0160								
0170								
0180								
0190								
0200								
0210								
0220	4A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0220								
0230	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0240								
0250	5	41 14 005		ABS, JOINT PIECE CABLE HARNESS FRONT, BULB CONTROL, JOINT PIECE MAIN CABLE HARNESS, DI-CASETTE	X	Connector housing	Kontakthus	8
0260						10-pole, female	10-polig, hylsa	
0270								
0280								
0290								
0300	5A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0310	5A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0320								
0330	6	41 14 054		JOINT PIECE ENGINE	X	Connector housing	Kontakthus	8
0340						10-pole, male	10-polig, stift	
0350	6A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0360								
0370	7	41 17 461		BY-PASS UNIT, JOINT PIECE CABLE HARNESS ROOF JOINT PIECE, JOINT PIECE MAIN CABLE HARNESS	X	Connector housing	Skarvhus	4
0380						10-pole, male	10-polig, stift	
0390								
0400								
0410	7A	41 15 077		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	8
0420	7A	41 15 085		AREA, 1,0 2,5 MM2	X	Cable terminal	Kabelsko	5
0430								
0440	8	42 03 568		SPEED CONTROL SYSTEM	X	Connector housing	Kontakthus	4
0450						10-pole, female	10-polig, hylsa	
0460	8A	44 18 505		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0470	8B	42 03 576			X	Locking	Låsning	4
0480								
0490	9	44 11 518		JOINT PIECE REAR DOOR, PROGR. TRIONIC	X	Connector housing	Kontakthus	
0500						10-pole, female	10-polig, hylsa	
0510	9A	41 15 499		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0520	9B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0530								
0540	10	42 03 634		AMPLIFIER US	X	Connector housing	Kontakthus	4
0550						10-pole, female	10-polig, hylsa	
0560	10A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0570								
0580	11	44 10 510		JOINT PIECE REAR DOOR	X	Connector housing	Kontakthus	4
0590						10-pole, male	10-polig, stift	
0600	11A	41 15 077		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0610								
0620	12	95 29 512		JOINT PIECE MAIN CABLE HARNESS/AIR-BAG	X	Contact housing	Kontakthus	4
0630						12-pole, male	12-polig, stift	
0640	12A	95 26 401		AREA, 0,2-0,56 MM2	X	Cable terminal	Kabelsko	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

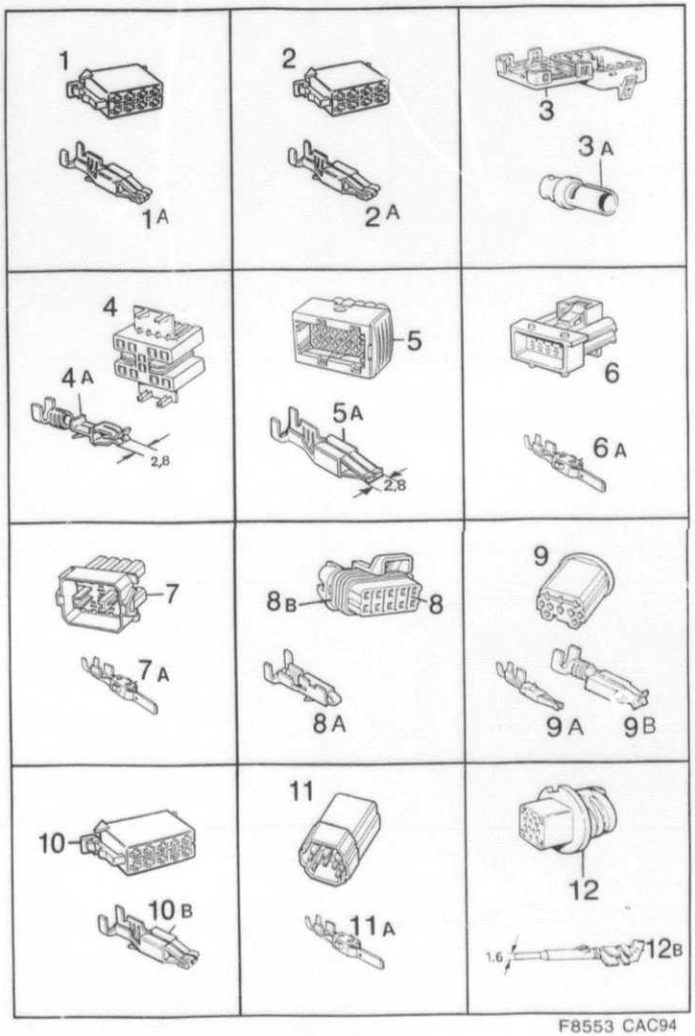

F8553 CAC94

Wiring and fuses

3-D18 Contact housing etc 1997-

Ledningar och säkringar

Kontakthus etc 1997-


1810	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650								
0660	12	95 25 031		ELECT-RONIC UNIT CENTRAL LOCK	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	5
0670								
0680	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

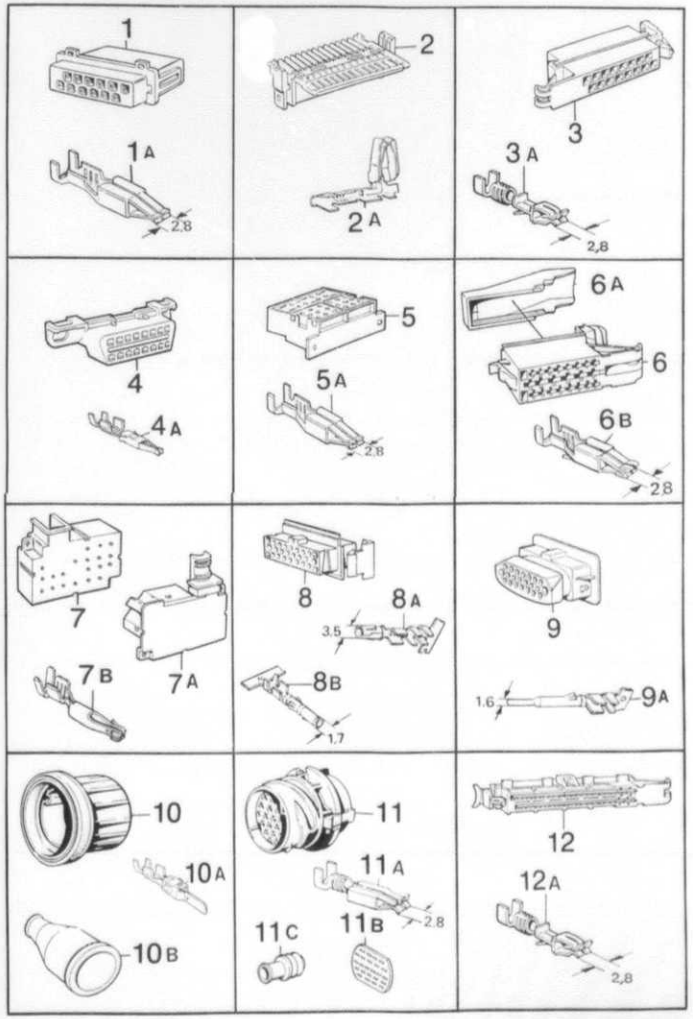

F8554 CAC94

Wiring and fuses

3-D20

Contact housing etc

1997-

Ledningar och säkringar

Kontakthus etc

1997-


1815	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	95 25 031		ELECT-RONIC UNIT CENTRAL LOCK	X	Contact housing 12-pole, female	Kontakthus 12-polig, hylsa	5
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0050	2	95 03 020		INSTRUMENTS, PICTOGRAM	X	Contact housing 14-pole, female	Kontakthus 14-polig, hylsa	4
0070	2A	95 05 397		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	5
0090	3	95 66 282		EAS WITH MEMORY	X	Contact housing 16-pole, female	Kontakthus 16-polig, hylsa	4
0110	3A	*91 20 668*		AREA, 0,75-1,5 MM2 NLS - USE 9120957	X	Cable terminal	Kabelsko	5
0130	4	48 07 954		DIAGNOS	X	Connector housing 16-pole, female	Kontakthus 16-polig, hylsa	8
0150	4A	41 15 499		AREA, 0,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0170	5	91 25 543		EL-DISTRIBUT. UNIT	X	Contact housing 18-pole, female	Kontakthus 18-polig, hylsa	4
0190	5A	91 20 791		AREA, 2,5-4,0 MM2	X	Cable terminal	Kabelsko	8
0210	6	40 60 893		SWITCH CENTRE CONSOLE	X	Contact housing 19-pole, female	Kontakthus 19-polig, hylsa	5
0230	6A	40 67 617			X	Cover	Kåpa	4
0240	6B	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0260	7	95 27 755		ELECTRONIC UNIT AIR-BAG	X	Contact housing 20-pole, female	Kontakthus 20-polig, hylsa	4
0280	7A	95 27 763			X	Contact housing	Kontakthus	4
0290	7B	95 27 771		AREA, 0,5 MM2	X	Cable terminal	Kabelsko	5
0310	8	95 25 106		JOINT PIECE FRONT DOORS	X	Contact housing 22-pole, female	Kontakthus 22-polig, hylsa	4
0330	8A	85 82 595		AREA, 0,5-2,0 MM2	X	Cable terminal	Kabelsko	5
0340	8B	85 87 552		AREA, 0,5-1,5 MM2	X	Cable terminal	Kabelsko	5
0360	9	95 25 114		JOINT PIECE DOORS	X	Contact housing 22-pole, male	Kontakthus 22-polig, stift	4
0380	9A	85 93 964		AREA, 0,8-1,5 MM2	X	Cable terminal	Kabelsko	5
0400	10	41 74 868		JOINT PIECE CABLE HARNESS FRONT	X	Connector housing 24-pole, male	Kontakthus 24-polig, stift	4
0420	10A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0430	10B	41 11 308			X	Rubber protection	Gummiskydd	4
0440	10C	45 88 349			X	Lock ring	Låsring	
0460	11	41 76 244		JOINT PIECE MAIN CABLE HARNESS	X	Connector housing 24-pole, female	Kontakthus 24-polig, hylsa	8
0480	11A	40 61 586		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0490	11B	43 52 936			X	Seal	Tätning	5
0500	11C	40 61 958		BLIND PLUG	X	Seal	Tätning	5
0510	11C	40 61 966		1,2-2,0 MM	X	Seal	Tätning	5
0520	11C	40 61 974		2,1-2,0 MM	X	Seal	Tätning	5
0540	12	41 76 186		AMPLIFIER US, VSS-ALARM	X	Connector housing 25-pole, female	Kontakthus 25-polig, hylsa	4
0560	12A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

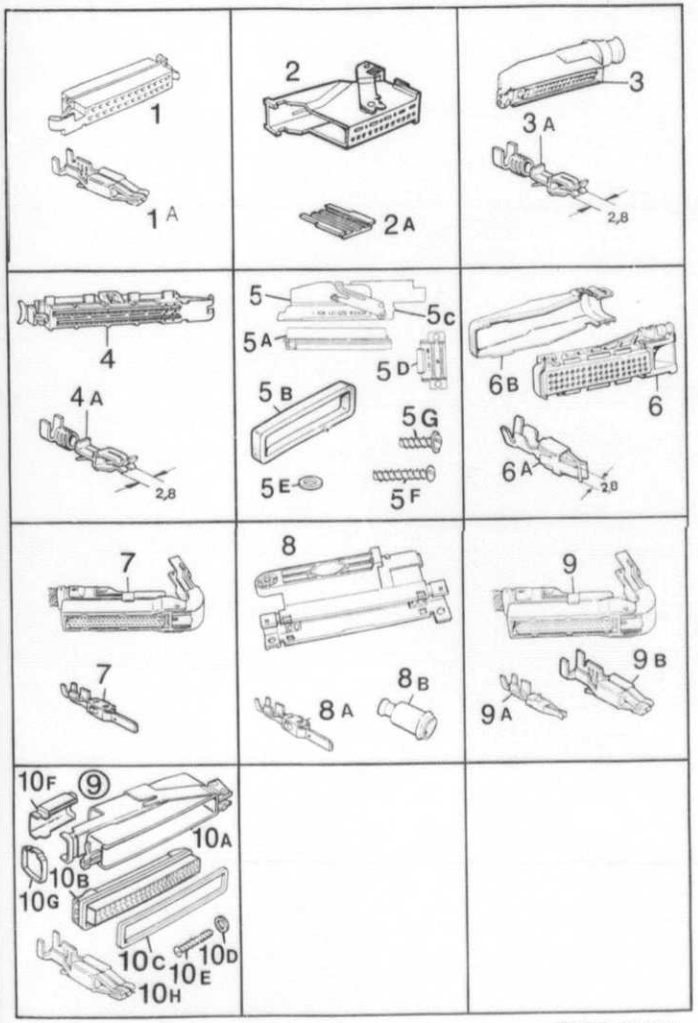

F8555 CAC94

Wiring and fuses

3-D22 Contact housing etc 1997-

Ledningar och säkringar

Kontakthus etc 1997-

1820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	45 37 429		THEFT ALARM	X	Contact housing	Kontakthus	5
0020						25-pole, female	25-polig, hylsa	
0030	1A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0040								
0050	2	47 34 455		DIAGNOSTIC UNIT AIR-BAG	X	Cover	Kåpa	4
0060						30-pole	30-polig	
0070	2A	47 34 471			X	Locking	Låsning	4
0080								
0090	3	44 34 031		TCS	X	Contact housing	Kontakthus	
0100						35-pole, female	35-polig, hylsa	
0110	3A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0120								
0130	4	95 65 045		ELECTRONIC UNIT ACC, EDU	X	Contact housing	Kontakthus	5
0140						39-pole, female	39-polig, hylsa	
0150	4A	40 63 970		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0160	4A	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0170								
0180	5	45 17 629		ELECTRONIC UNIT MOTRONIC	X	Connector housing	Kontakthus	8
0190						55-pole, female	55-polig, hylsa	
0200	5A	42 24 630		1)	1	.Connector housing	.Kontakthus	4
0210	5B	42 24 655		1)	1	.Seal	.Tätning	5
0220	5C	45 17 637		1)	1	.Cover	.Kåpa	4
0230	5D	45 17 652		1)	1	.Seal	.Tätning	5
0240	5E	85 87 461			1	Seal	Tätning	5
0250	5F	42 23 483			1	Screw	Skruv	5
0260	5G	42 23 574			1	Screw	Skruv	5
0270	5H	91 20 957			X	Cable terminal	Kabelsko	8
0280								
0290	6	43 53 637		ELECTRONIC UNIT ABS WITH TCS	X	Contact housing	Kontakthus	
0300						55-pole, female	55-polig, hylsa	
0310	6A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0320	6B	44 18 380			X	Cover	Kåpa	4
0330								
0340	7	41 76 616		ELECTRONIC UNIT TRIONIC	X	Connector housing	Kontakthus	8
0350						70-pole, female	70-polig, hylsa	
0360	7A	43 54 353		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0370	7A	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0380								
0390	8	43 54 692		JOINT MAIN CABLE HARNESS	X	Connector housing	Kontakthus	8
0400						70-pole, female	70-polig, hylsa	
0410	8	45 35 530		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0420	8A	45 38 625		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	5
0430	8A	41 15 192		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8
0440	8B	43 54 239			X	Seal	Tätning	5
0450						grey	grå	
0460	8B	43 54 239			X	Seal	Tätning	5
0470						white	vit	
0480								
0490	9	41 76 624		JOINT ENGINE	X	Connector housing	Kontakthus	8
0500						70-pole, female	70-polig, hylsa	
0510	9A	43 54 353		AREA, 0,5-1,0 MM2	X	Cable terminal	Kabelsko	8
0520	9B	40 61 586		AREA, 1,5-2,5 MM2	X	Cable terminal	Kabelsko	8
0530								
0540	10	42 22 451		ELECTRONIC CONTROL MOTRONIC	X	Contact housing	Kontakthus	8
0550						88-pole, female	88-polig, hylsa	
0560	10A	42 23 558		1)	1	.Cover	.Kåpa	4
0570	10B	42 23 541		1)	1	.Contact housing	.Kontakthus	5
0580	10C	42 23 566		1)	1	.Seal	.Tätning	5
0590	10D	85 87 461			1	.Seal	.Tätning	5
0600	10E	42 23 574		1)	1	.Screw	.Skruv	5
0610	10F	42 23 582		1)	1	.Cable attachment	.Ledningsfäste	5
0620	10G	42 23 590		1)	1	.Tensioning band	.Spännband	4

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-D24

Contact housing etc
1997-

Kontakthus etc
1997-

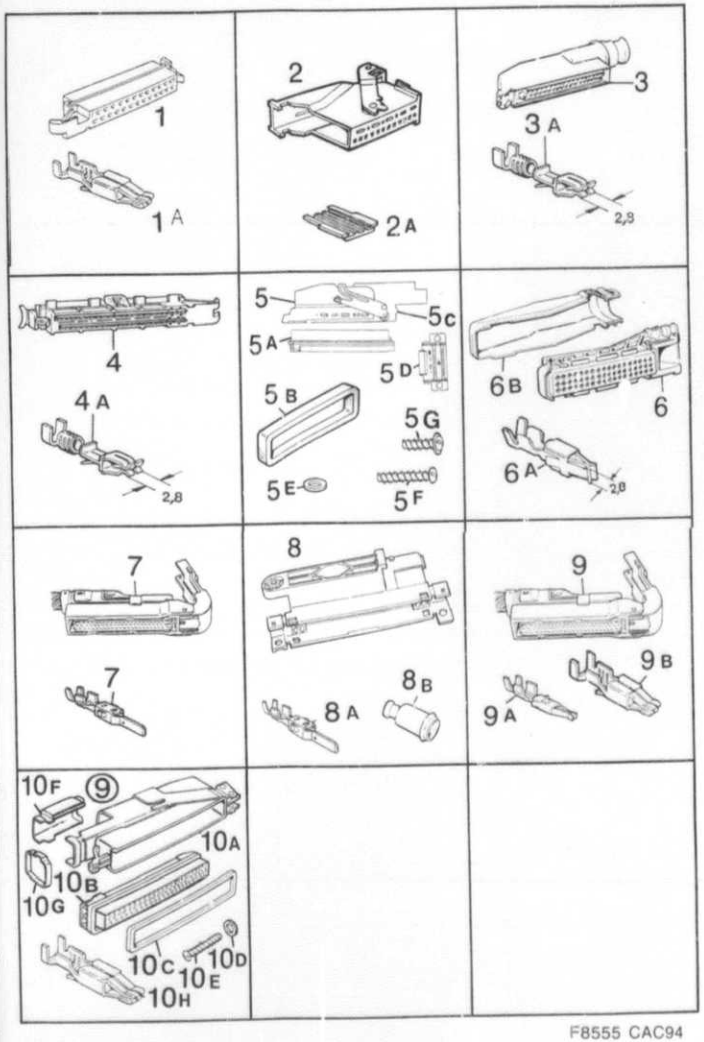

F8555 CAC94


1820	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630	10H	91 20 957		AREA, 1,0-2,5 MM2	X	Cable terminal	Kabelsko	8

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

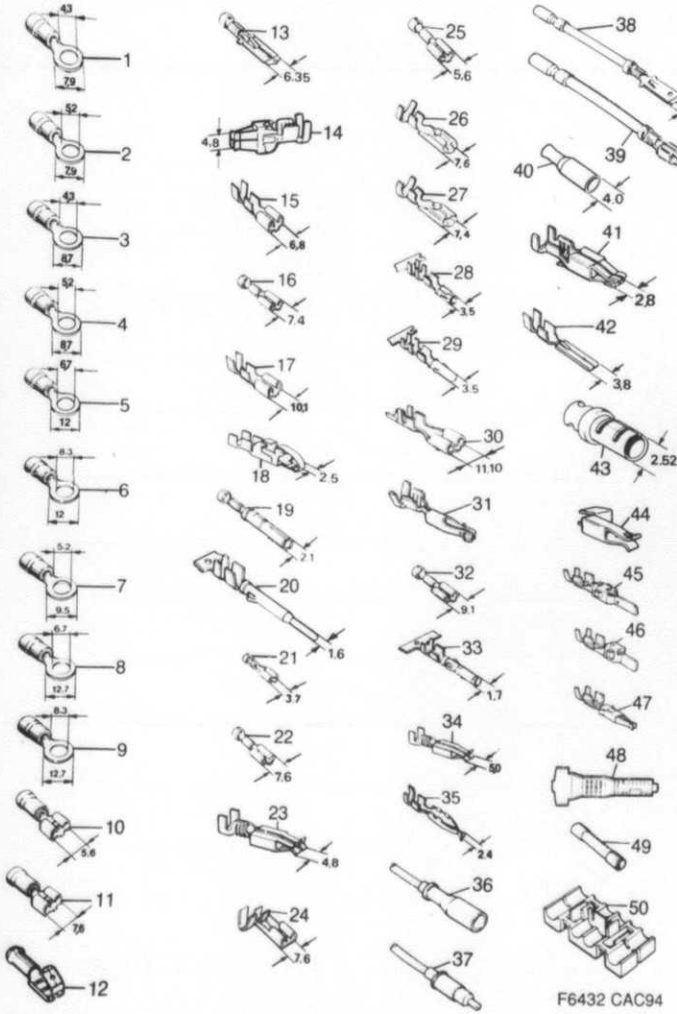

Wiring and fuses

3-E02

Cable terminal
1994

Ledningar och säkringar

Ledningssko
1994

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Cable terminal	Kabelsko	6
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0200								
0210								
0220								
0230	14	43 54 353		44), CONTACT HOUSING 4176616	X	Cable terminal	Kabelsko	8
0240								
0250	15	85 14 036		40), EL-CENTRAL, EARTH CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0260								
0270	15	*71 55 047*		48), EL-CENTRAL NLS	X	Cable terminal	Kabelsko	5
0280	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, CIGARETTE LIGHTER, STOP LIGHT, HIGH MOUNTED STOP LIGHT, DOOR SWITCH, ALTERNATOR, OIL MONITOR, CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0290								
0300								
0310								
0320								
0330								
0340								
0350								
0360	16	*71 55 153*		103), CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0370								
0370								
0380	16	*79 72 029*		38), CONTACT HOUSING 8533697, 9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0390								
0390								
0400	16	79 71 708		47), CONTACT HOUSING 7155096, 7155112	X	Cable terminal	Kabelsko	5
0410								
0420	16	79 68 068		48), CONTACT HOUSING 9503251	X	Cable terminal	Kabelsko	5
0430								
0440	17	79 69 256		48), EL-CENTRAL, RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0450								
0460	18	81 35 147		49), CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0470								

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
49. Area 0,75-1,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-E04

Cable terminal
1994

Ledningssko
1994

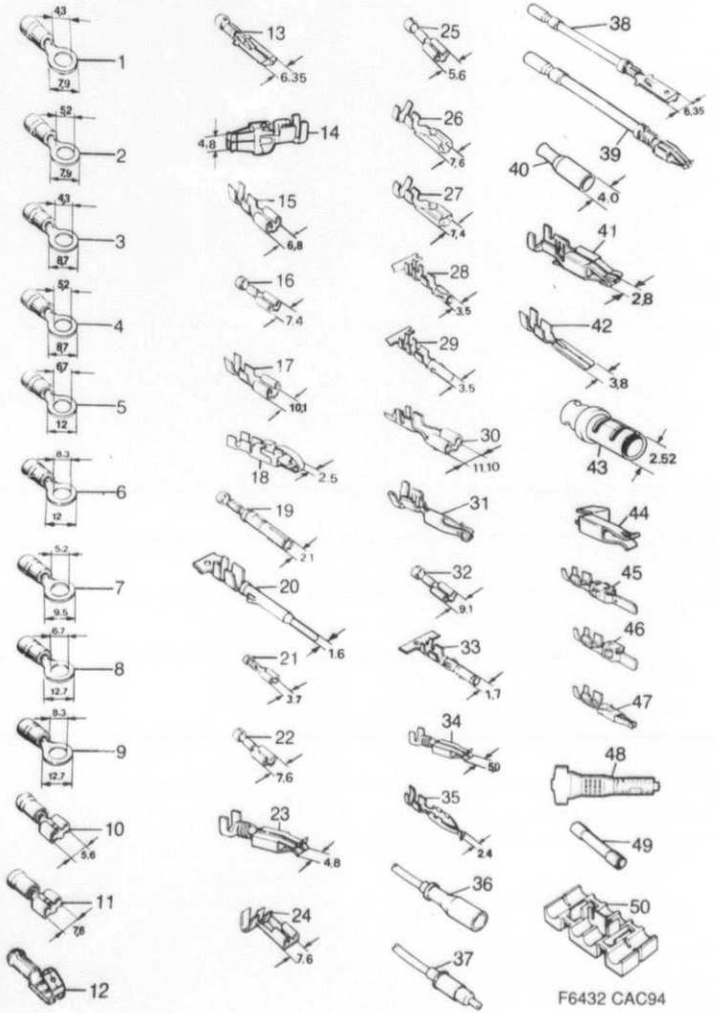

F6432 CAC94

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	19	85 22 583		51), CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
0500	20	85 93 964		47), CONTACT HOUSING 8521718, 8593964	X	Cable terminal	Kabelsko	5
0520	20	95 19 398		52), CONTACT HOUSING 9519406	X	Cable terminal	Kabelsko	8
0540	20	95 26 401		53), CONTACT HOUSING 9529512	X	Cable terminal	Kabelsko	5
0560	20	85 82 603		58), CONTACT HOUSING 9525114	X	Cable terminal	Kabelsko	5
0580	21	*85 09 846*		54), CONTACT HOUSING 8378630 NLS - USE 8522575	X	Cable terminal	Kabelsko	5
0600	21	85 30 107		47), CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0620	22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, CONTACT HOUSING 8516916 NLS - USE 7155716	X	Cable terminal	Kabelsko	5
0660	22	85 14 036		38), GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
0680	23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
0750	23	91 20 783		38), AC DIOD, CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
0780	23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, REAR DEMIST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, CONTACT HOUSING, 4069274 4109427, 9122789,9122797 9124090, 9124157,9124165 9124173, 9125543,9507658 9519422	X	Cable terminal	Kabelsko	8

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.
58. Area 0,5-2,0 MM2.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-E06 Cable terminal 1994

Ledningssko 1994

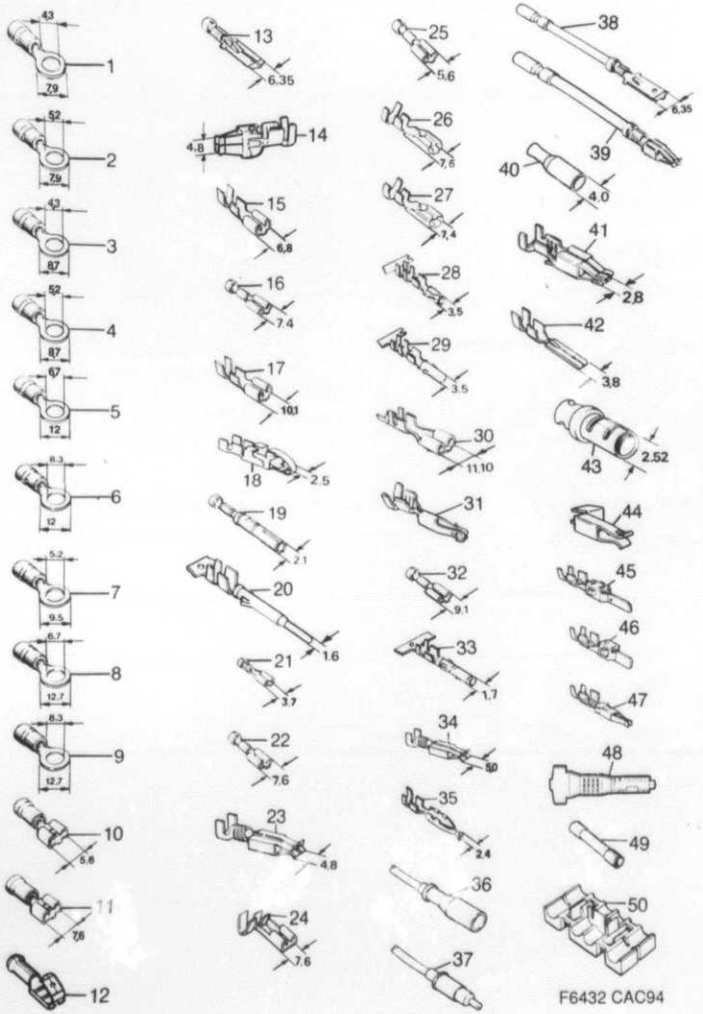

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0990	23	40 61 586		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1000				4061479, 4113205,4113601				
1010				4113809, 4114005,4114021				
1020				4114039, 4176228,4176249				
1030				4178422, 4178430,4252944				
1040				4353637, 4432365				
1050	23	43 50 526		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1060				4113627				
1070	24	*85 21 676*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1080				ASH TRAY, CONTACT				
1090				HOUSING 8521692 NLS –				
1090				USE 8522526				
1100	24	*85 21 684*		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1110				8521692 NLS – USE				
1110				8522526				
1120	24	*85 82 421*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1130				8521692 NLS – USE				
1130				8522526				
1140	24	95 59 469		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1150				9518416				
1160	24	85 22 526		47), FOG LIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1170				INSTEP, CONTACT HOUSING				
1180				9518416				
1190	25	*85 33 028*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	3
1200				8533184 NLS – USE				
1200				8582439				
1210	26	*85 41 203*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1220				INSTEP, BELT WARNING,				
1230				CONTACT HOUSING 8541229				
1240				8544363, 8574949,9507658				
1240				NLS – USE 8560476				
1250	27	85 60 476		57), SWITCH INTERIOR	X	Cable terminal	Kabelsko	5
1260				LIGHT, LIGHT INSTEP,				
1270				LIGHT GLOVE BOX,				
1280				CONTACT HOUSING 9507658				
1290	27	85 41 211		56), CONTAC HOUSING	X	Cable terminal	Kabelsko	5
1300				8544363				
1310	27	85 22 534		47), LIGHT INSTEP,	X	Cable terminal	Kabelsko	5
1320				CONTACT HOUSING 7155112				
1330	28	*85 44 298*		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1340				8521700, 8564916 NLS –				
1340				USE 8582595				
1350	28	85 82 595		58), JOINT PIECE CENTRAL	X	Cable terminal	Kabelsko	5
1360				LOCK				
1370	28	85 82 090		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1380				9503525				
1390	29	*85 44 314*		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1400				8521718, 8564924,9525114				
1400				NLS – USE 8582603				
1410	30	85 69 139		105), EL-CENTRAL, RELAY	X	Cable terminal	Kabelsko	5
1420				DISTRIBUTION TERMINAL				
1430	30	95 15 024		60), FUSE BOX, RELAY	X	Cable terminal	Kabelsko	5
1440				DISTRIBUTION TERMINAL,				
1450				EL- CENTRAL				
1460	30	85 88 198		180), EL-CENTRAL	X	Cable terminal	Kabelsko	5
1470	31	95 27 771		CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5


38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
60. Area 6,0-8,5 MM2.
180. Area 6,0-10,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

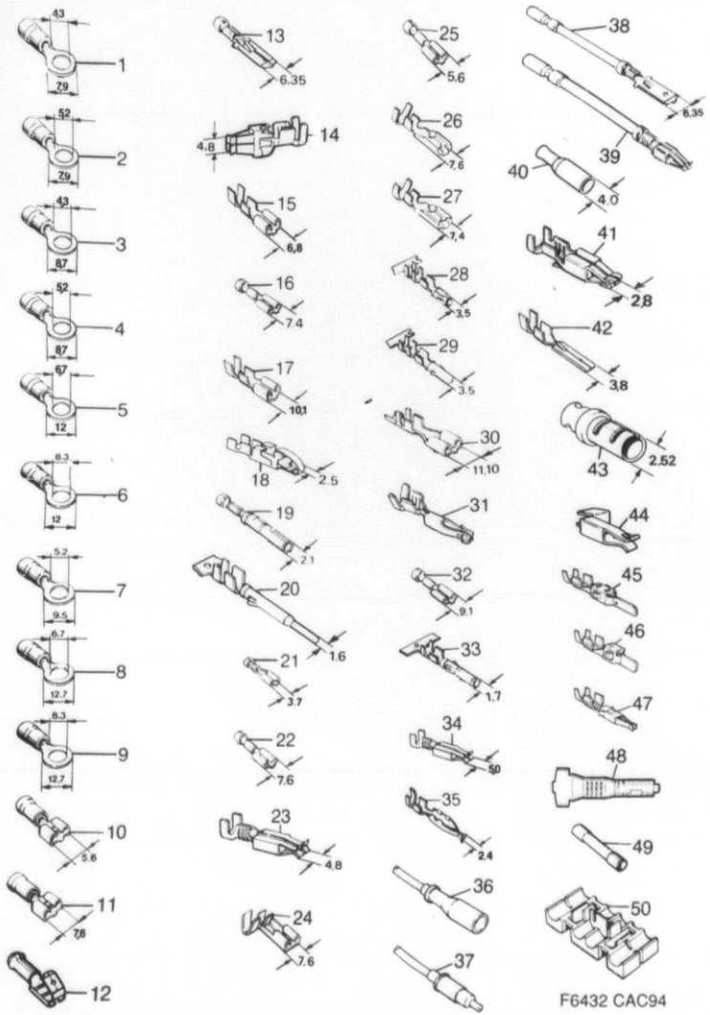

F6432 CAC94

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1480	32	85 82 413		116), CONTACT HOUSING 7155021	X	Cable terminal	Kabelsko	5
1500	33	85 87 552		47), CONTACT HOUSING 8521700, 9525106	X	Cable terminal	Kabelsko	5
1520	33	95 25 817		53), CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
1540	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1550	34	*95 21 980*		40), RELAY GROUND SHEET NLS – USE 9120783	X	Cable terminal	Kabelsko	5
1560	35	40 63 970		44), CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	8
1580	36	78 74 498		217), CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1620	36	85 47 796		218)SIDE DIRECTION INDI. CONTACT HOUSING, 9503277, 9503418,9503475 9519679	X	Connector	Skarvstycke	5
1660	36	85 47 804		56), CONTACT HOUSING 4114054	X	Connector	Skarvstycke	5
1680	37	78 74 506		217), CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
1700	38	85 22 542		36), CONTACT HOUSING 7155120	X	Cable terminal	Kabelsko	5
1720	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1730	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1740	41	*95 08 706*		62) RELAY GROUND SHEET NLS – USE 9120957	X	Cable terminal	Kabelsko	5
1750	41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9125381 9123548, 9123555,9125519 NLS – USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1850	41	91 20 957		38), CONTACT HOUSING 4061503, 4109278,4109500 4109518, 4113809,4114021 4114633, 4175428,4432365 9123381, 9123399,9123548 9123555, 9503475,9514803 9519414, 9525031,9565045	X	Cable terminal	Kabelsko	8
1920	42	*95 52 126*		44), CONTACT HOUSING 9122557 NLS – USE 9552100	X	Cable terminal	Kabelsko	5
1940	43	95 52 175		CONTACT HOUSING, 9552167	X	Cable terminal	Kabelsko	5
1950	43	95 09 746		CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1960	44	95 52 191		CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5


36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

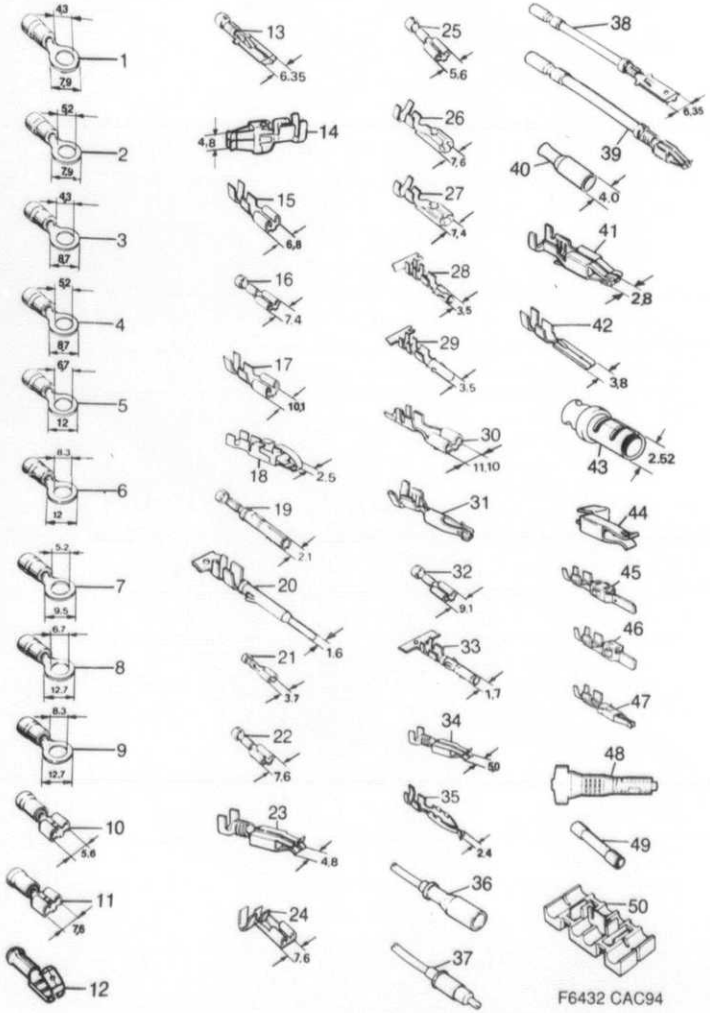

F6432 CAC94

2200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1970	45	41 15 077		38), JOINT PIECE TRUNK LID, JOINT PIECE MAIN CABLE HARNESS, CONTACT HOUSING 4174264	X	Cable terminal	Kabelsko	8
2010	45	41 15 192		38), FOR CONTACT HOUSING 4113262, 4113668,4114062 4114070, 4114088	X	Cable terminal	Kabelsko	8
2040	45	*43 50 609*		44), CONTACT HOUSING 4113676 NLS – USE 4115192	X	Cable terminal	Kabelsko	5
2060	46	41 15 580		38), JOINT PIECE MAIN CABLE HARNESS, JOINT PIECE TRUNK LID, CONTACT HOUSING, 4117560 4117669, 4117768	X	Cable terminal	Kabelsko	5
2110	47	41 15 499		44), CONTACT HOUSING 4224606	X	Cable terminal	Kabelsko	8
2130	48	44 18 505		44), CONTACT HOUSING 4201224	X	Cable terminal	Kabelsko	5
2150	49	71 55 203		35) 40/253 164 008	X	Splice	Skarvhylsa	5
2160	49	71 55 146		36) 40/253 188 007	X	Splice	Skarvhylsa	5
2170	49	71 55 633		37) 40/253 221 006	X	Splice	Skarvhylsa	5
2180	50	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2190	50	85 21 668		46)	X	Cable joint	Ledningsförbindning	3


35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

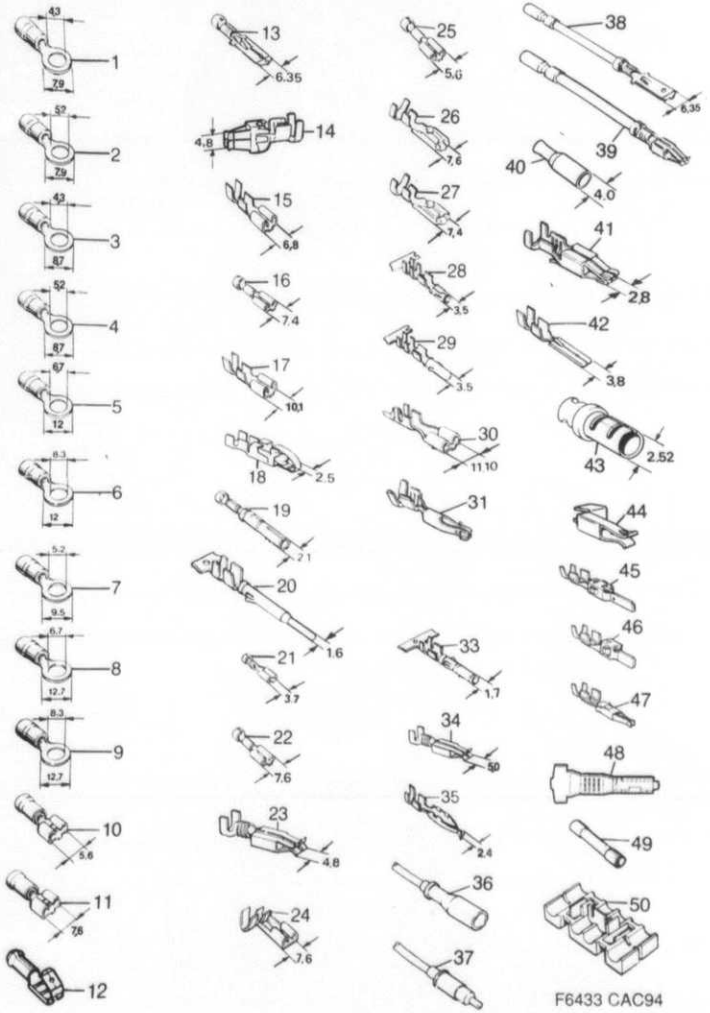

Wiring and fuses

3-E12 *Cable terminal* *1995*

Ledningar och säkringar

Ledningssko *1995*

2210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Cable terminal	Kabelsko	6
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0200								
0210								
0220								
0230	14	43 54 353		44), CONTACT HOUSING 4176616, 4176624	X	Cable terminal	Kabelsko	8
0240								
0250	14	44 64 343		48), EL-CENTRAL	X	Cable terminal	Kabelsko	8
0260	15	85 14 036		40), EL-CENTRAL, GROUND	X	Cable terminal	Kabelsko	5
0270	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, OIL MONITOR, CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0280								
0290								
0300								
0310								
0320								
0330	16	*71 55 153*		103), CONTACT HOUSING 7155112, 8558538 NLS – USE 8522534	X	Cable terminal	Kabelsko	5
0340								
0340								
0350	16	*79 72 029*		38), CONTACT HOUSING 8533697, 9503251 NLS – USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0360								
0370	16	79 71 708		47), CONTACT HOUSING 7155096, 7155112	X	Cable terminal	Kabelsko	5
0380								
0390	16	79 68 068		48), CONTACT HOUSING 9503251	X	Cable terminal	Kabelsko	5
0400								
0410	17	79 69 256		48), RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0420								
0430	18	81 35 147		49), CONTACT HOUSING 8135600	X	Cable terminal	Kabelsko	5
0440								
0450	19	85 22 583		51), CONTACT HOUSING 8530099	X	Cable terminal	Kabelsko	5
0460								


35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.
49. Area 0,75-1,0 MM2.
51. Area 0,8-3,4 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

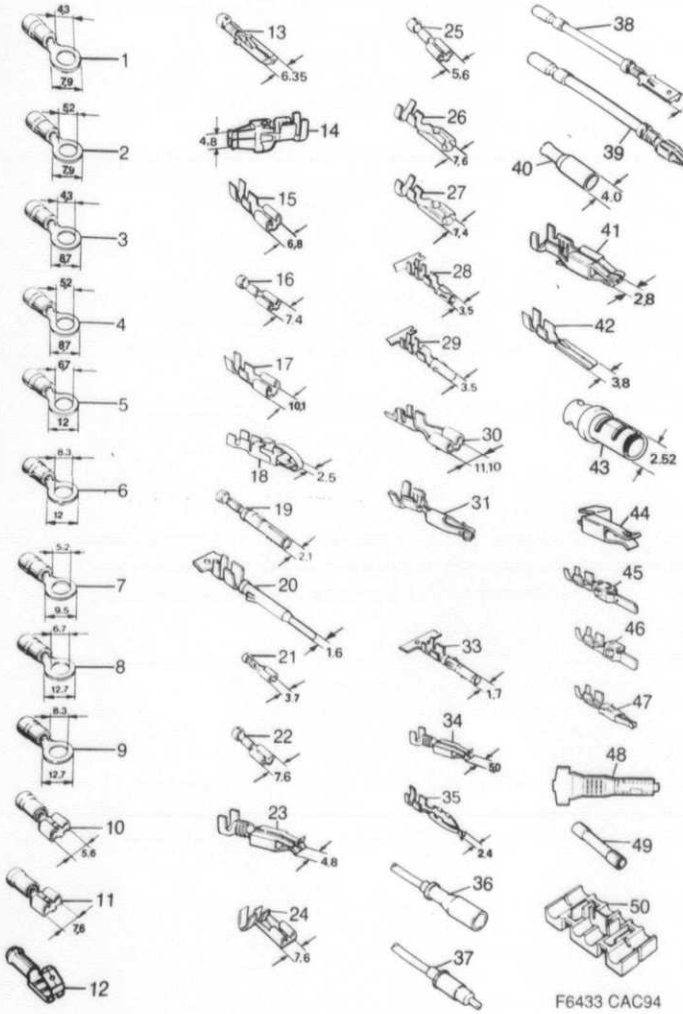

Wiring and fuses

3-E14 Cable terminal 1995

Ledningar och säkringar

Ledningssko 1995

2210	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0470	20	85 93 964		47), CONTACT HOUSING 8593964	X	Cable terminal	Kabelsko	5
0490	20	95 19 398		52), CONTACT HOUSING 4224895	X	Cable terminal	Kabelsko	8
0510	20	95 26 401		53), CONTACT HOUSING 9529512	X	Cable terminal	Kabelsko	5
0530	20	85 82 603		58), CONTACT HOUSING 9525114	X	Cable terminal	Kabelsko	5
0550	21	*85 09 846*		54), CONTACT HOUSING 8378630 NLS – USE 8522575	X	Cable terminal	Kabelsko	5
0570	21	85 30 107		47), CONTACT HOUSING 8530115	X	Cable terminal	Kabelsko	3
0590	22	*85 14 028*		55), TEMP SENSOR, OIL PRESSURE SENSOR, ALTERNATOR, CONTACT HOUSING 8516916 NLS – USE 7155716	X	Cable terminal	Kabelsko	5
0630	22	85 14 036		38), GROUND, JOINT PIECE	X	Cable terminal	Kabelsko	5
0650	23	85 21 593		47), FAILUR SENSOR, INTERVAL RELAY, CONTACT HOUSING, 8544371 8574097, 8574121,8579930 8593899, 8593907,8593915 8593931, 8593949,9123381 9506650	X	Cable terminal	Kabelsko	5
0720	23	91 20 783		38), AC DIOD, CONTACT HOUSING, 9124157, 9502048	X	Cable terminal	Kabelsko	5
0750	23	91 20 791		56), EL-CENTRAL, FAILUR SENSOR, RELAY AC, REAR DEM.ST, TIME RELAY AC, RELAY DIM DIP, RELAY BELT WARNING, RELAY FOG LIGHT EXTRA, GEAR INDICATOR, HORN, PUMP RELAY ABS, RELAY MOTOR, MAIN RELAY ABS, RELAY IGNITION LOCK, RELAY FLASHER UNIT, RELAY INTERIOR LIGHT, INTERVAL RELAY, MAIN RELAY, RELAY FUEL PUMP, COOLING FAN, RELAY DAY DRIVING LIGHT, CONTACT HOUSING, 4069274 4109427, 9122789,9122797 9124090, 9124157,9124165 9124173, 9125543,9507658 9519422	X	Cable terminal	Kabelsko	8


38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.
58. Area 0,5-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

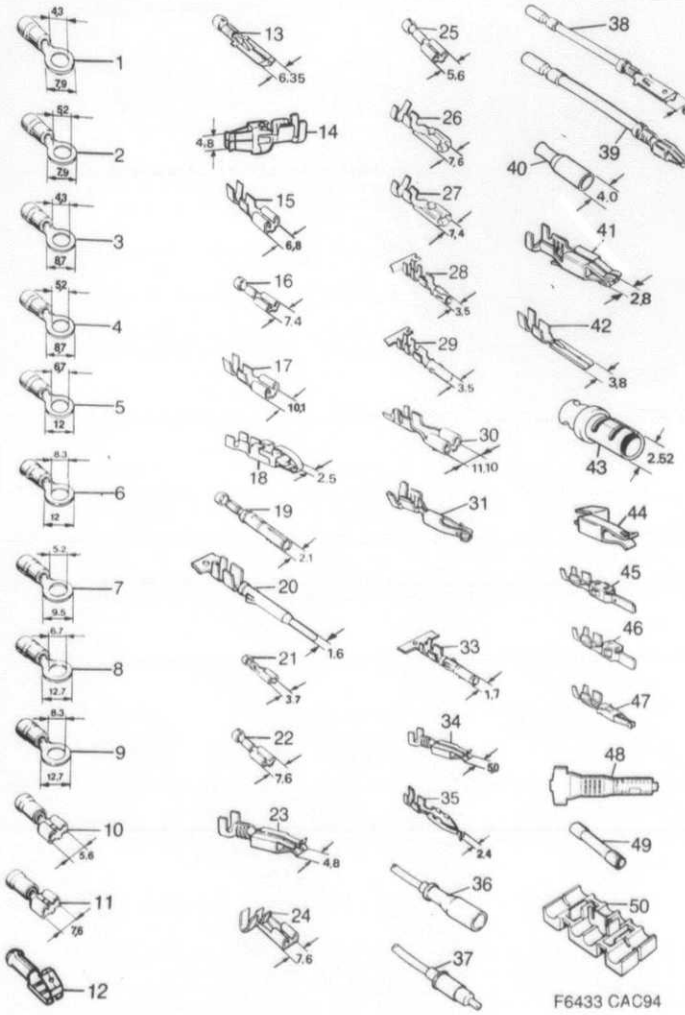

Wiring and fuses

3-E16 Cable terminal 1995

Ledningar och säkringar

Ledningssko 1995

2210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0960	23	40 61 586		38), CONTACT HOUSING 4061479, 4113205,4113807 4114005, 4114021,4114039 4176249, 4176624,4178422 4178430, 4252944,4353637 4432357, 4432365,4433439 4489647	X	Cable terminal	Kabelsko	8
1030	23	43 50 526		38), CONTACT HOUSING 4113627, 4354833	X	Cable terminal	Kabelsko	8
1050	24	*85 21 676*		47), SPOTLIGHT, LIGHT ASH TRAY, CONTACT HOUSING 8521692 NLS – USE 8522526	X	Cable terminal	Kabelsko	5
1080	24	*85 21 684*		38), CONTACT HOUSING 8521692 NLS – USE 8522526	X	Cable terminal	Kabelsko	5
1100	24	*85 82 421*		47), CONTACT HOUSING 8521692 NLS – USE 8522526	X	Cable terminal	Kabelsko	5
1120	24	85 22 526		47), SPOT LIGHT, CONTACT HOUSING 8521692	X	Cable terminal	Kabelsko	5
1140	25	*85 33 028*		47), CONTACT HOUSING 8533184 NLS – USE 8582439	X	Cable terminal	Kabelsko	3
1160	26	*85 41 203*		47), SPOTLIGHT, LIGHT INSTEP, BELT WARNING, CONTACT HOUSING 8541229 8544363, 8574949,9507658 NLS – USE 8560476	X	Cable terminal	Kabelsko	5
1200	27	85 60 476		57), SWITCH INTERIOR LIGHT, LIGHT INSTEP, CONTACT HOUSING 9507658	X	Cable terminal	Kabelsko	5
1230	27	85 41 211		56), CONTACT HOUSING 8544363	X	Cable terminal	Kabelsko	5
1250	27	85 22 534		47), LIGHT INSTEP, CONTACT HOUSING 7155112	X	Cable terminal	Kabelsko	5
1270	28	85 82 595		58), JOINT PIECE CENTRAL LOCK	X	Cable terminal	Kabelsko	5
1290	28	85 82 090		47), CONTACT HOUSING 9503525	X	Cable terminal	Kabelsko	5
1310	29	*85 44 314*		58), CONTACT HOUSING 8521718, 8564924,9525114 NLS – USE 8582603	X	Cable terminal	Kabelsko	5
1330	30	85 69 139		105), RELAY DISTRIBITION TERMINAL	X	Cable terminal	Kabelsko	5
1350	30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
1380	31	95 27 771		CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
1390	33	85 87 552		47), CONTACT HOUSING 9525106	X	Cable terminal	Kabelsko	5
1410	33	95 25 817		53), CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
1430	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5

38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
60. Area 6,0-8,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-E18

Cable terminal
1995

Ledningssko
1995

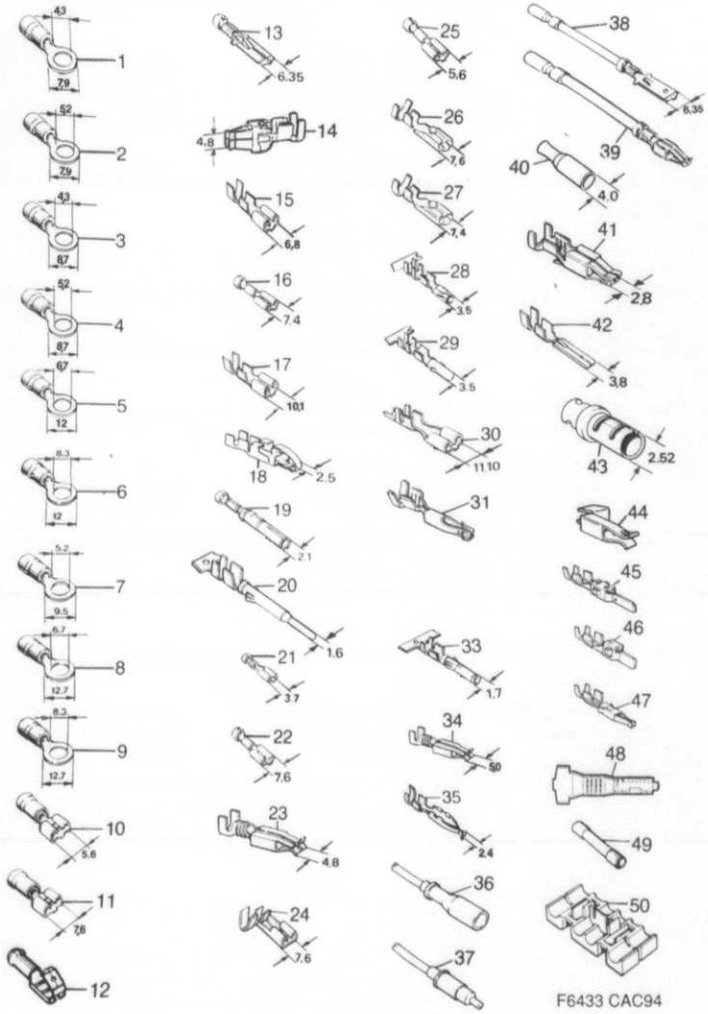

F6433 CAC94

2210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1440	34	*95 21 980*		40), RELAY GROUND SHEET NLS – USE 9120783	X	Cable terminal	Kabelsko	5
1450	35	40 63 970		44), CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	8
1470	36	78 74 498		217), CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1510	36	85 47 796		218)SIDE DIRECTION INDI. CONTACT HOUSING, 9503277, 9503418,9503475 9519679	X	Connector	Skarvstycke	5
1550	37	78 74 506		217), CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
1570	38	85 22 542		36), CONTACT HOUSING 7155120	X	Cable terminal	Kabelsko	5
1590	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1600	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1610	41	*95 08 706*		62) RELAY GROUND SHEET NLS – USE 9120957	X	Cable terminal	Kabelsko	5
1620	41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS – USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1720	41	91 20 957		38), CONTACT HOUSING 4061503, 4109500,4109518 4114005, 4114021,4114633 4175428, 4201323,4432365 4203659, 4411518,4517629 9123381, 9123399,9123548 9123555, 9503475,9519414 9525031, 9565045	X	Cable terminal	Kabelsko	8
1800	42	*95 52 126*		44), CONTACT HOUSING 9122557 NLS – USE 9552100	X	Cable terminal	Kabelsko	5
1820	43	95 52 175		CONTACT HOUSING, 9552167	X	Cable terminal	Kabelsko	5
1830	43	95 09 746		CONTACT HOUSING, 9512930	X	Cable terminal	Kabelsko	5
1840	44	95 52 191		CONTACT HOUSING, 9552183	X	Cable terminal	Kabelsko	5
1850	45	41 15 077		38), JOINT PIECE TRUNK LID, CONTACT HOUSING 4174264	X	Cable terminal	Kabelsko	8
1880	45	41 15 192		38), CONTACT HOUSING 4113668, 4114062,4114070 4115054, 4354692	X	Cable terminal	Kabelsko	8
1910	45	41 15 457		44), CONTACT HOUSING 4410510	X	Cable terminal	Kabelsko	5
1930	46	41 15 580		38), JOINT PIECE TRUNK LID, CONTACT HOUSING 4117560, 4117669,4117768	X	Cable terminal	Kabelsko	5


36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

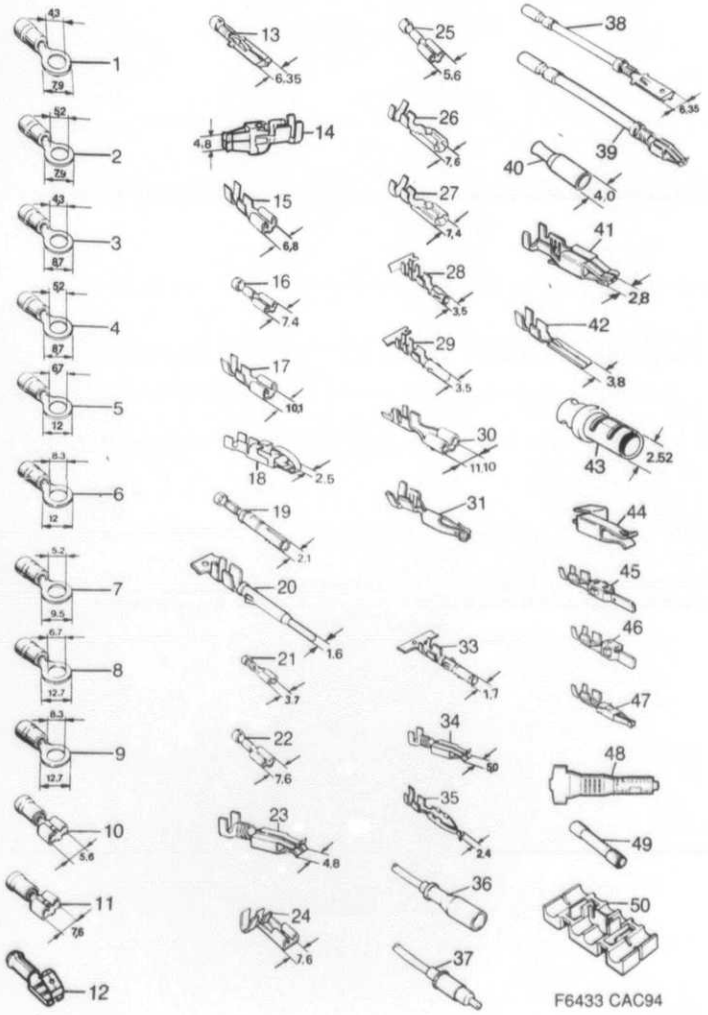

2210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1960	46	41 15 077		38), CONTACT HOUSING 4410510	X	Cable terminal	Kabelsko	8
1970								
1980	47	41 15 499		44), CONTACT HOUSING 4113007, 4411518	X	Cable terminal	Kabelsko	8
1990								
2000	48	44 18 505		44), CONTACT HOUSING 4201224, 4203550	X	Cable terminal	Kabelsko	5
2010								
2020	49	71 55 203		35) 40/253 164 008	X	Splice	Skarvhylsa	5
2030	49	71 55 146		36) 40/253 188 007	X	Splice	Skarvhylsa	5
2040	49	71 55 633		37) 40/253 221 006	X	Splice	Skarvhylsa	5
2050	50	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2060	50	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors 3-A06
Cable terminals 3-E02

3-E22

Cable terminal 1996

Ledningssko 1996

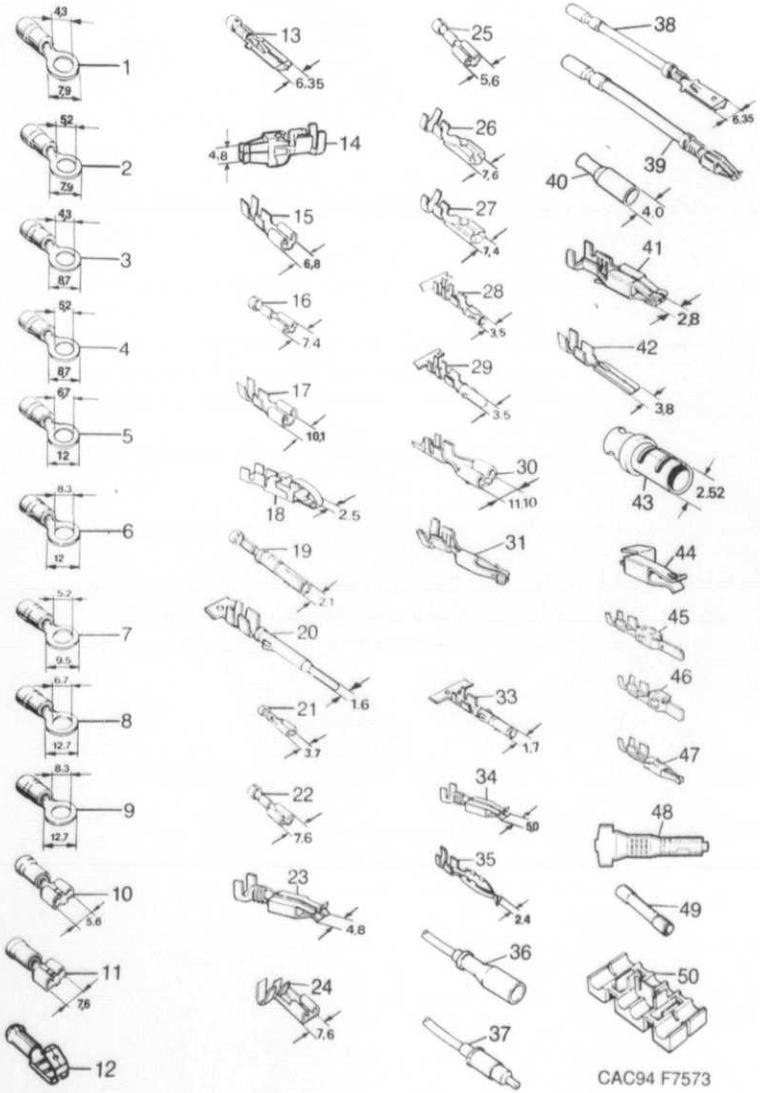

2215	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		38), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Cable terminal	Kabelsko	6
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	13	*71 55 062*		43), EL-CENTRAL NLS - USE 8522542	X	Cable terminal	Kabelsko	5
0190								
0200	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0210								
0220								
0230								
0240								
0250	14	43 54 353		44), CONTACT HOUSING 4176616, 4176624	X	Cable terminal	Kabelsko	8
0260								
0270	14	44 64 343		48), EL-CENTRAL	X	Cable terminal	Kabelsko	8
0280	15	85 14 036		40) EL-CENTRAL, GROUND	X	Cable terminal	Kabelsko	5
0290	15	71 55 716		45), EL-CENTRAL, JOINT PIECE. DISTRIBUTOR TERMINAL, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, OIL MONITOR, CIGARETTE LIGHTER, STOP LIGHT, CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0300								
0310								
0320								
0330								
0340								
0350								
0360	16	*71 55 153*		103), CONTACT HOUSING 7155112, 8558538 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0370								
0370								
0380	16	*79 72 029*		38), CONTACT HOUSING 8533697, 9503251 NLS - USE 8522534	X	Cable terminal	Kabelsko	5
0390								
0390								
0400	16	79 71 708		47), CONTACT HOUSING 7155096, 7155112	X	Cable terminal	Kabelsko	5
0410								
0420	16	79 68 068		48), CONTACT HOUSING 9503251	X	Cable terminal	Kabelsko	5
0430								
0440	17	79 69 256		48), RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0450								
0460	17	44 09 801		44), CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0470								

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-E24

Cable terminal
1996

Ledningssko
1996

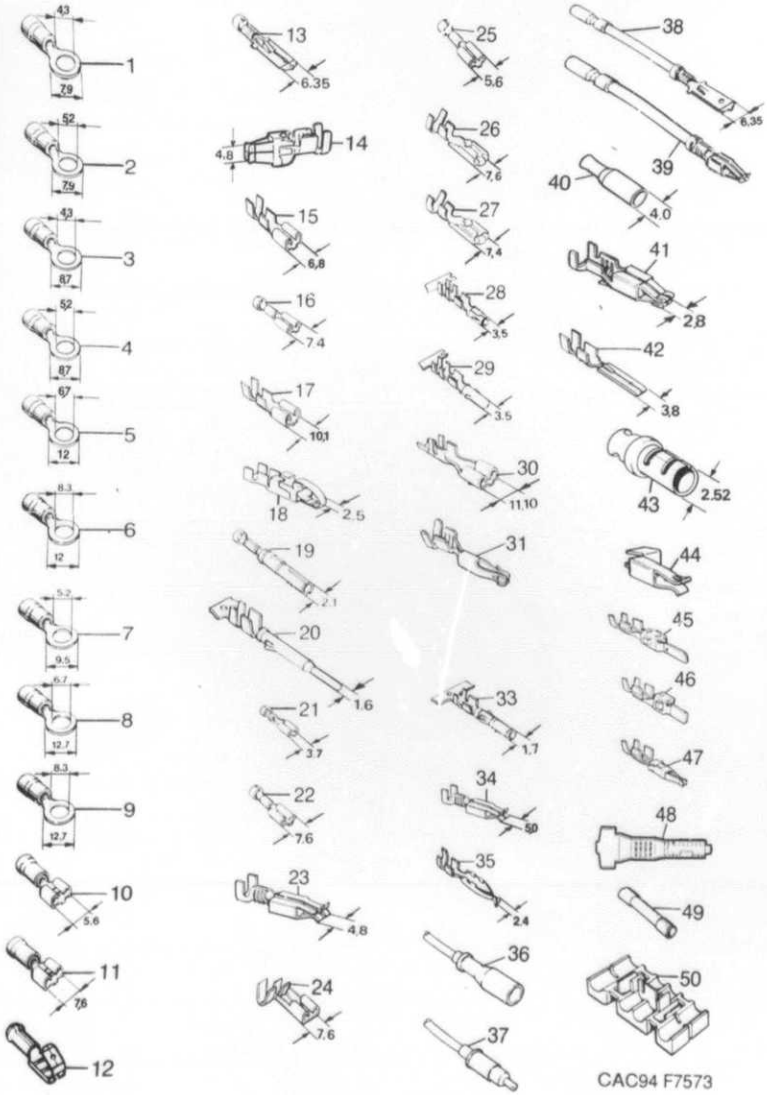

2215	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0480	18	81 35 147		49), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0490				8135600				
0500	18	81 38 679		40), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0510				8135600				
0520	19	85 22 583		51), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0530				8530099				
0540	20	85 93 964		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0550				8593964				
0560	20	95 19 398		52), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
0570				4224895				
0580	20	95 26 401		53), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0590				9529512				
0600	20	85 82 603		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0610				9525114				
0620	21	*85 09 846*		54), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0630				8378630 NLS – USE				
0630				8522575				
0640	21	85 30 107		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	3
0650				8530115				
0660	22	*85 14 028*		55), TEMP SENSOR, OIL	X	Cable terminal	Kabelsko	5
0670				PRESSURE SENSOR,				
0680				ALTERNATOR, CONTACT				
0690				HOUSING 8516916 NLS –				
0690				USE 7155716				
0700	22	85 14 036		38), GROUND, JOINT	X	Cable terminal	Kabelsko	5
0710				PIECE				
0720	23	85 21 593		47), FAILUR SENSOR,	X	Cable terminal	Kabelsko	5
0730				INTERVAL RELAY,				
0740				CONTACT HOUSING, 8544371				
0750				8574097, 8574121,8579930				
0760				8593899, 8593907,8593915				
0770				8593931, 8593949,9123381				
0780				9506650				
0790	23	91 20 783		38), AC DIOD,	X	Cable terminal	Kabelsko	5
0800				CONTACT HOUSING,				
0810				9124157, 9502048				
0820	23	91 20 791		56), EL-CENTRAL, FAILUR	X	Cable terminal	Kabelsko	8
0830				SENSOR, RELAY AC,				
0840				REAR DEMIST, TIME				
0850				RELAY AC, RELAY DIM DIP,				
0860				RELAY BELT WARNING,				
0870				RELAY FOG LIGHT EXTRA,				
0880				GEAR INDICATOR, HORN,				
0890				PUMP RELAY ABS, RELAY				
0900				MOTOR, MAIN RELAY ABS,				


38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
47. Area 0,5-1,5 MM2.
49. Area 0,75-1,0 MM2.
51. Area 0,8-3,4 MM2.
52. Area 0,8-1,5 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.
58. Area 0,5-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

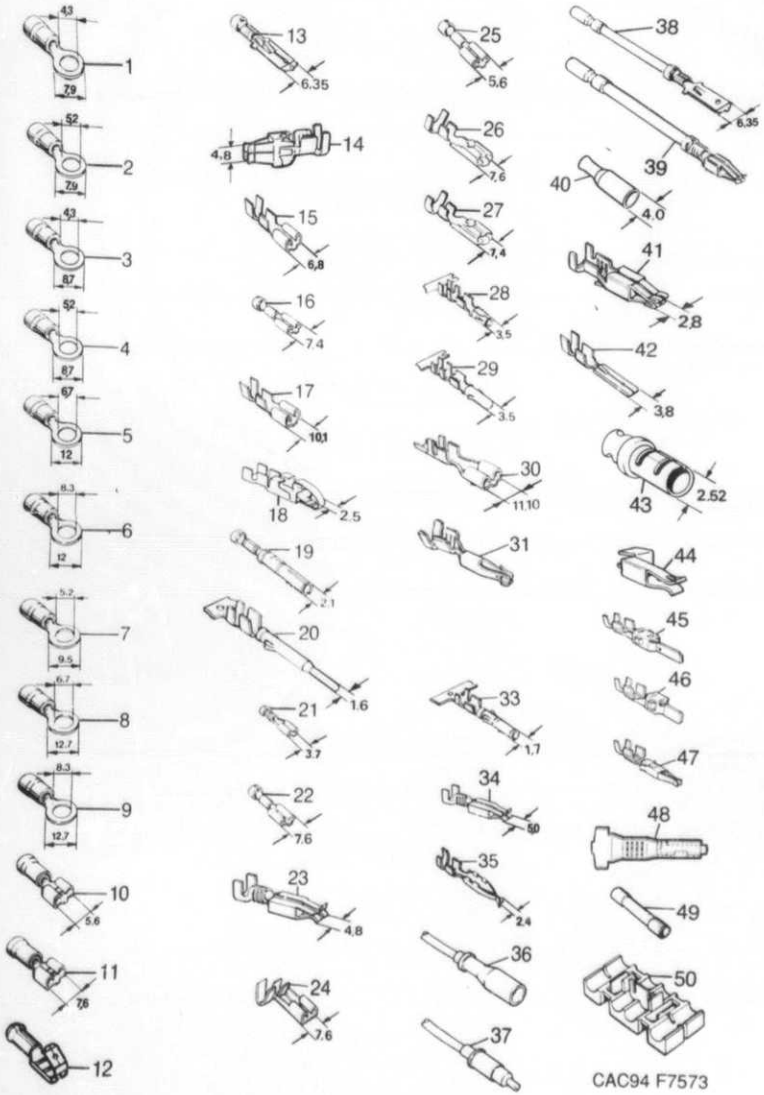

Wiring and fuses

3 –F02 Cable terminal 1996

Ledningar och säkringar

Ledningssko 1996

2215	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0910				RELAY IGNITION LOCK,				
0920				RELAY FLASHER UNIT,				
0930				RELAY INTERIOR LIGHT,				
0940				INTERVAL RELAY, MAIN				
0950				RELAY, RELAY FUEL PUMP,				
0960				COOLING FAN, RELAY DAY				
0970				DRIVING LIGHT,				
0980				CONTACT HOUSING, 4069274				
0990				4109427, 9122789,9122797				
1000				9124090, 9124157,9124165				
1010				9124173, 9125543,9507658				
1020	23	40 61 586		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1030				4113205, 4113807,4113601				
1040				4114005, 4114021,4114039				
1050				4176249, 4176624,4178422				
1060				4178430, 4352944,4353637				
1070				4353637, 4432365,4668588				
1080				4668596, 4668604				
1090	23	43 50 526		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1100				4113205, 4113601,4113627				
1110				4432316, 4432357				
1120	24	*85 21 676*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1130				ASH TRAY, CONTACT				
1140				HOUSING 8521692 NLS –				
1140				USE 8522526				
1150	24	*85 21 684*		38), CONTAC HOUSING	X	Cable terminal	Kabelsko	5
1160				8521692 NLS – USE				
1160				8522526				
1170	24	*85 82 421*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1180				8521692 NLS – USE				
1180				8522526				
1190	24	85 22 526		47), SPOT LIGHT,	X	Cable terminal	Kabelsko	5
1200				CONTACT HOUSING 8521692				
1210	25	*85 33 028*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	3
1220				8533184 NLS – USE				
1220				8582439				
1230	26	*85 41 203*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1240				INSTEP, BELT WARNING,				
1250				CONTACT HOUSING 8541229				
1260				8544363, 8574949,9507658				
1260				NLS – USE 8560476				
1270	27	85 60 476		57), SWITCH INTERIOR	X	Cable terminal	Kabelsko	5
1280				LIGHT, LIGHT INSTEP,				
1290				LIGHT GLOVE BOX,				
1300				CONTACT HOUSING 9507658				
1310	27	85 41 211		56), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1320				8544363				
1330	28	85 82 595		58), JOINT PIECE CENTRAL	X	Cable terminal	Kabelsko	5
1340				LOCK				
1350	28	85 82 090		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1360				9503525				
1370	29	*85 44 314*		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1380				8521718, 8564924,9525114				
1380				NLS – USE 8582603				
1390	30	85 69 139		105), RELAY DISTRIBITION	X	Cable terminal	Kabelsko	5
1400				TERMINAL				

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3 -F04

Cable terminal
1996

Ledningssko
1996

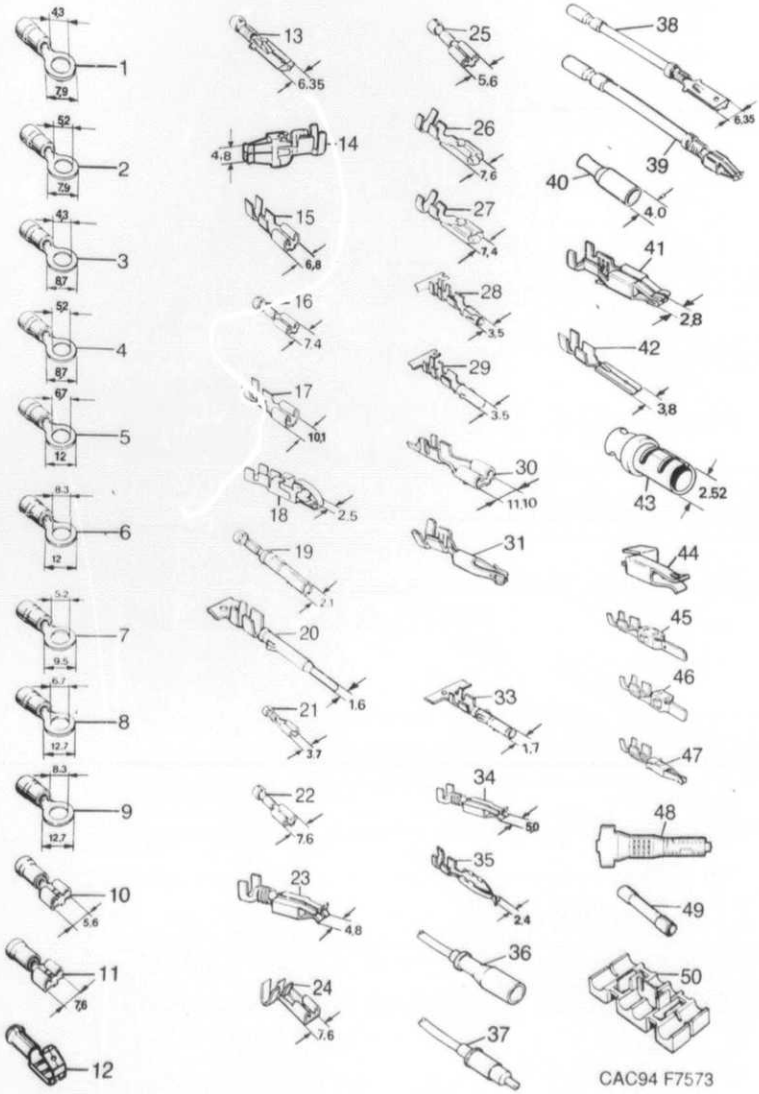

2215 Pos	Part No/Art nr	\ S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1410 30	95 15 024		60), FUSE BOX, RELAY DISTRIBUTION TERMINAL, EL- CENTRAL	X	Cable terminal	Kabelsko	5
1440 31	95 27 771		CONTACT HOUSING, 9527755	X	Cable terminal	Kabelsko	5
1450 33	85 87 552		47), CONTACT HOUSING 9525106	X	Cable terminal	Kabelsko	5
1470 33	95 25 817		53), CONTACT HOUSING 9529538	X	Cable terminal	Kabelsko	5
1490 34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1500 34	*95 21 980*		40), RELAY GROUND SHEET NLS – USE 9120783	X	Cable terminal	Kabelsko	5
1510 35	40 63 970		44), CONTACT HOUSING 4060869, 9565045	X	Cable terminal	Kabelsko	8
1530 36	78 74 498		217), CONTACT HOUSING 9503277, 9503316,9503418 9503434, 9503475,9506668 9519679	X	Connection	Skarv	5
1570 36	85 47 796		218)SIDE DIRECTION INDI. CONTACT HOUSING, 9503277, 9503418,9503475 9519679	X	Connector	Skarvstycke	5
1610 37	78 74 506		217), CONTACT HOUSING 9501685, 9503426,9506668	X	Connection	Skarv	5
1630 38	85 22 542		36), CONTACT HOUSING 7155120	X	Cable terminal	Kabelsko	5
1650 39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1660 40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1670 41	*95 08 706*		62) RELAY GROUND SHEET NLS – USE 9120957	X	Cable terminal	Kabelsko	5
1680 41	*91 20 668*		62), BULB CONTROL, INTERVAL RELAY, TIME RELAY AC, RELAY BELT WARNING, CONTACT HOUSING, 8579930,8593899 8593907, 8593915,8593931 8593949, 8597064,9123381 9123548, 9123555,9125519 NLS – USE 9120957 9519414, 9519455,9564089 9566266, 9566282	X	Cable terminal	Kabelsko	5
1780 41	91 20 957		38), CONTACT HOUSING 4061503, 4109500,4109518 4114005, 4114021,4176186 4222451, 4411518,4434031 4517629, 4537429,9123381 9123399, 9123548,9123555 9503475, 9525031,9565045	X	Cable terminal	Kabelsko	8
1850 42	*95 52 126*		44), CONTACT HOUSING 9122557 NLS – USE 9552100	X	Cable terminal	Kabelsko	5
1870 43	95 52 175		CONTACT HOUSING 9552167	X	Cable terminal	Kabelsko	5
1880 43	95 09 746		CONTACT HOUSING 9512930	X	Cable terminal	Kabelsko	5
1890 44	95 52 191		CONTACT HOUSING 9552183	X	Cable terminal	Kabelsko	5

36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
47. Area 0,5-1,5 MM2.
53. Area 0,2-0,56 MM2.
60. Area 6,0-8,5 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3 -F06

Cable terminal
1996

Ledningssko
1996

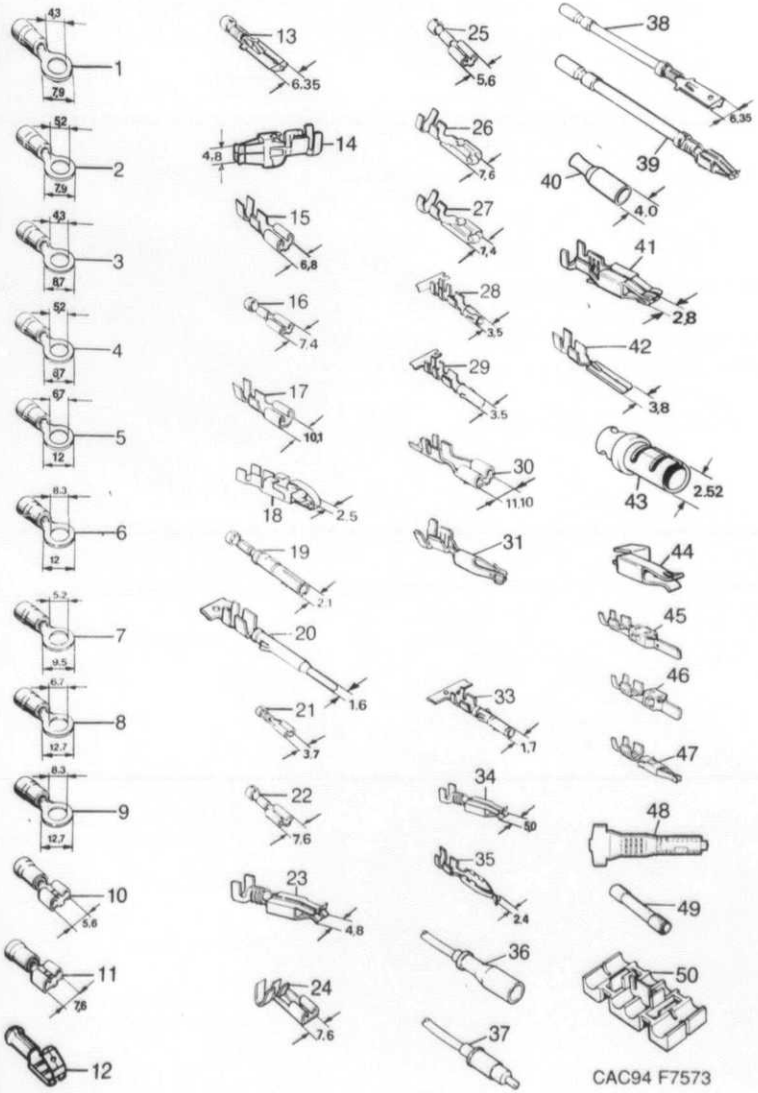

2215 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1900 45	41 15 077		38), JOINT PIECE TRUNK LID, CONTACT HOUSING 4174264	X	Cable terminal	Kabelsko	8
1910 1920 1930 45	41 15 192		38), CONTACT HOUSING 4113668, 4114062,4114070	X	Cable terminal	Kabelsko	8
1940 1950 1960 45	41 15 457		4115054, 4354692 44), CONTACT HOUSING 4410510	X	Cable terminal	Kabelsko	5
1970 1980 45	41 15 283		38), CONTACT HOUSING 4174264	X	Cable terminal	Kabelsko	5
1990 2000 46	41 15 580		38), JOINT PIECE TRUNK LID, JOINT PIECE MAIN CABLE HARNESS, CONTACT HOUSING 4117669, 4117768	X	Cable terminal	Kabelsko	5
2010 2020 2030 2040 2050 46	41 15 077		38), CONTACT HOUSING 4117164, 4117263,	X	Cable terminal	Kabelsko	8
2060 2070 47	41 15 499		44), CONTACT HOUSING 4113007, 4411518	X	Cable terminal	Kabelsko	8
2080 2090 47	44 66 801		44), CONTACT HOUSING 4224606	X	Cable terminal	Kabelsko	8
2100 2110 48	44 18 505		44), CONTACT HOUSING 4201224, 4203550	X	Cable terminal	Kabelsko	5
2120 2130 49	71 55 203		35) 40/253 164 008	X	Splice	Skarvhylsa	5
2140 49	71 55 146		36) 40/253 188 007	X	Splice	Skarvhylsa	5
2150 49	71 55 633		37) 40/253 221 006	X	Splice	Skarvhylsa	5
2160 50	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2170 50	85 21 668		46)	X	Cable joint	Ledningsförbindning	3


35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

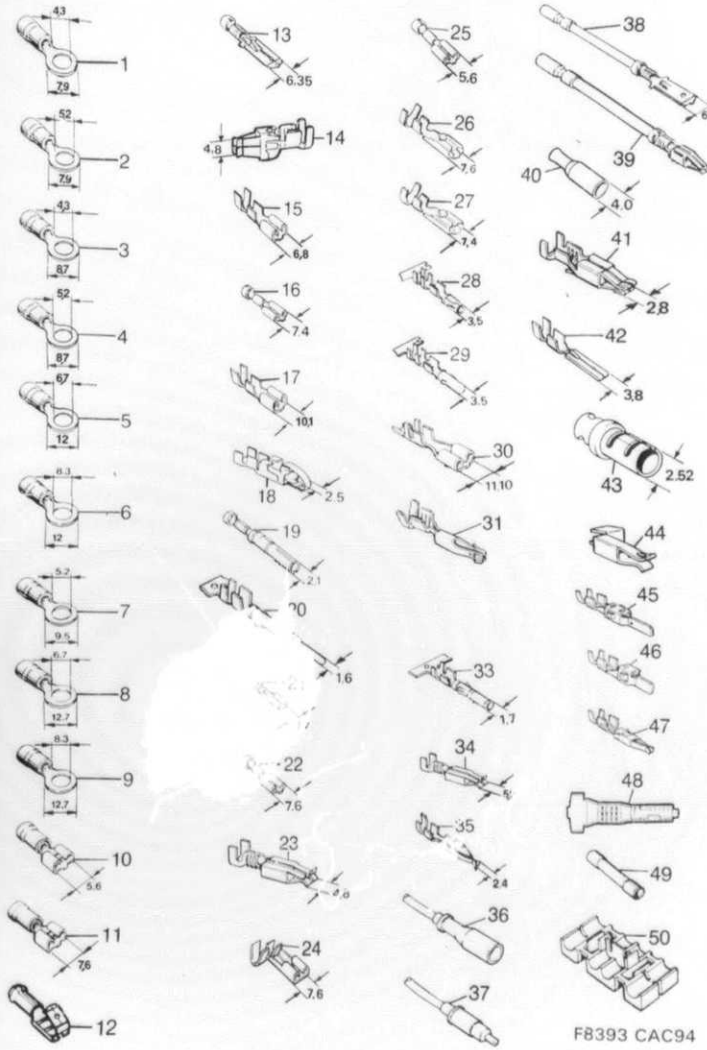

Wiring and fuses

3 –F08 *Cable terminal 1997-*

Ledningar och säkringar

Ledningssko 1997-

2220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	71 55 211		35), 40/253 152 003	X	Cable terminal	Kabelsko	5
0020	2	71 55 229		35), 40/253 153 001	X	Cable terminal	Kabelsko	5
0030	3	71 55 237		36), 40/253 172 001	X	Cable terminal	Kabelsko	5
0040	4	71 17 880		36), 40/253 173 009	X	Cable terminal	Kabelsko	5
0050	5	78 29 617		36), 40/253 174 007	X	Cable terminal	Kabelsko	5
0060	6	79 59 349		36)	X	Cable terminal	Kabelsko	5
0070	7	71 55 658		37), 40/253 210 009	X	Cable terminal	Kabelsko	5
0080	8	78 29 666		37), 40/253 211 007	X	Cable terminal	Kabelsko	5
0090	9	78 29 674		37), 40/253 212 005	X	Cable terminal	Kabelsko	5
0100	9	79 77 556		39), GROUND ABS	X	Cable terminal	Kabelsko	5
0110	10	79 69 231		39)	X	Cable terminal	Kabelsko	5
0120	11	78 29 625		40), 40/253 195 002	X	Connector	Anslutning	3
0130	11	78 29 682		41), 40/253 226 005	X	Cable terminal	Kabelsko	3
0140	11	*78 29 633*		40), 40/253 197 008 NLS	X	Contact housing	Kontakthus	5
0150	11	78 29 609		42), 40/253 168 009	X	Cable terminal	Kabelsko	5
0160	12	78 29 641		40), 40/253 196 000	X	Cable terminal	Kabelsko	6
0170	13	85 93 089		44), JOINT PIECE TRUNK LID	X	Cable terminal	Kabelsko	5
0180								
0190	13	*71 55 062*		43), EL-CENTRAL NLS – USE 8522542	X	Cable terminal	Kabelsko	5
0190								
0200	14	91 20 775		44), RELAY HORN, RELAY REAR DEMIST, RELAY AC, AC DIOD, LIGHT, CONTACT HOUSING 8533697	X	Cable terminal	Kabelsko	5
0210								
0220								
0230								
0240	14	43 54 353		44), CONTACT HOUSING 4176616, 4176624	X	Cable terminal	Kabelsko	8
0250								
0260	14	44 64 343		48), EL-CENTRAL	X	Cable terminal	Kabelsko	8
0270	15	85 14 036		40), EL-CENTRAL, GROUND	X	Cable terminal	Kabelsko	5
0280	15	71 55 716		45), EL-CENTRAL, JOINT PIECE, DISTRIBUTOR TERMINAL, DOOR SWITCH, HIGH MOUNTED STOP LIGHT, OIL MONITOR, CIGARETTE LIGHTER, STOP LIGHT, CONTACT HOUSING 8533184	X	Cable terminal	Kabelsko	5
0290								
0300								
0310								
0320								
0330								
0340								
07 J	16	*71 55 153*		103), CONTACT HOUSING 7155112, 8558538 NLS – USE 8522534	X	Cable terminal	Kabelsko	5
0360								
0360								
0370	16	*79 72 029*		38), CONTACT HOUSING 8533697, 9503251 NLS – USE 8522534	X	Cable terminal	Kabelsko	5
0380								
0380								
0390	16	79 71 708		47), CONTACT HOUSING 7155096, 7155112	X	Cable terminal	Kabelsko	5
0400								
0410	16	79 68 068		48), CONTACT HOUSING 9503251	X	Cable terminal	Kabelsko	5
0420								
0430	17	79 69 256		48), RELAY DISTRIBUTION TERMINAL	X	Cable terminal	Kabelsko	5
0440								
0450	17	44 09 801		44), CIGARETTE LIGHTER, CONTACT HOUSING 8516916	X	Cable terminal	Kabelsko	5
0460								


35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
39. Area 1,0-3,4 MM2.
40. Area 1,5-2,5 MM2.
41. Area 3,0-6,0 MM2.
42. Area 0,3-1,5 MM2.
43. Area 0,8-2,5 MM2.
44. Area 0,5-1,0 MM2.
45. Area 0,4-1,0 MM2.
47. Area 0,5-1,5 MM2.
48. Area 4,0-6,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

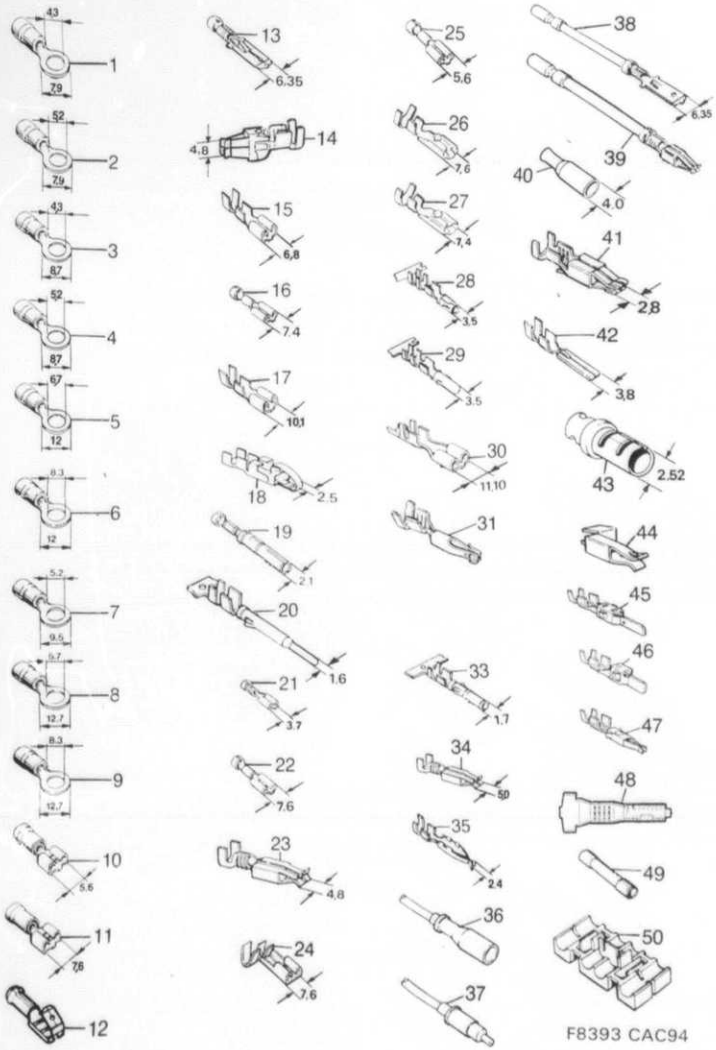

Wiring and fuses

3 –F10 *Cable terminal 1997-*

Ledningar och säkringar

Ledningssko 1997-

2220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0470	18	81 35 147		49), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0480				8135600				
0490	18	81 38 679		40), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0500				8135600				
0510	19	85 22 583		51), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0520				8530099				
0530	20	85 93 964		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0540				8593964				
0550	20	95 26 401		53), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0560				9529512				
0570	20	85 82 603		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0580				9525114				
0590	21	*85 09 846*		54), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
0600				8378630 NLS – USE				
0600				8522575				
0610	21	85 30 107		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	3
0620				8530115				
0630	22	*85 14 028*		55), TEMP SENSOR, OIL	X	Cable terminal	Kabelsko	5
0640				PRESSURE SENSOR,				
0650				ALTERNATOR, CONTACT				
0660				HOUSING 8516916 NLS –				
0660				USE 7155716				
0670	22	85 14 036		38), GROUND, JOINT	X	Cable terminal	Kabelsko	5
0680				PIECE				
0690	23	85 21 593		47), FAILUR SENSOR,	X	Cable terminal	Kabelsko	5
0700				INTERVAL RELAY,				
0710				CONTACT HOUSING, 8544371				
0720				8574097, 8574121,8579930				
0730				8593899, 8593907,8593915				
0740				8593931, 8593949,9123381				
0750				9506650				
0760	23	91 20 783		38), AC DIOD,	X	Cable terminal	Kabelsko	5
0770				CONTACT HOUSING 9124157				
0780				9502048				
0790	23	91 20 791		56), EL-CENTRAL, FAILUR	X	Cable terminal	Kabelsko	8
0800				SENSOR, RELAY AC,				
0810				REAR DEMIST, TIME				
0820				RELAY AC, RELAY DIM DIP,				
0830				RELAY BELT WARNING,				
0840				RELAY FOG LIGHT EXTRA,				
0850				GEAR INDICATOR, HORN,				
0860				PUMP RELAY ABS, RELAY				
0870				MOTOR, MAIN RELAY ABS,				
0880				RELAY IGNITION LOCK,				
0890				RELAY FLASHER UNIT,				
0900				RELAY INTERIOR LIGHT,				
0910				INTERVAL RELAY, MAIN				
0920				RELAY, RELAY FUEL PUMP,				
0930				COOLING FAN, RELAY DAY				
0940				DRIVING LIGHT,				
0950				CONTACT HOUSING, 4069274				
0960				4109427, 4224317,9122789				


38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
47. Area 0,5-1,5 MM2.
49. Area 0,75-1,0 MM2.
51. Area 0,8-3,4 MM2.
53. Area 0,2-0,56 MM2.
54. Area 0,5-1,4 MM2.
55. Area 0,3-0,8 MM2.
56. Area 2,5-4,0 MM2.
58. Area 0,5-2,0 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

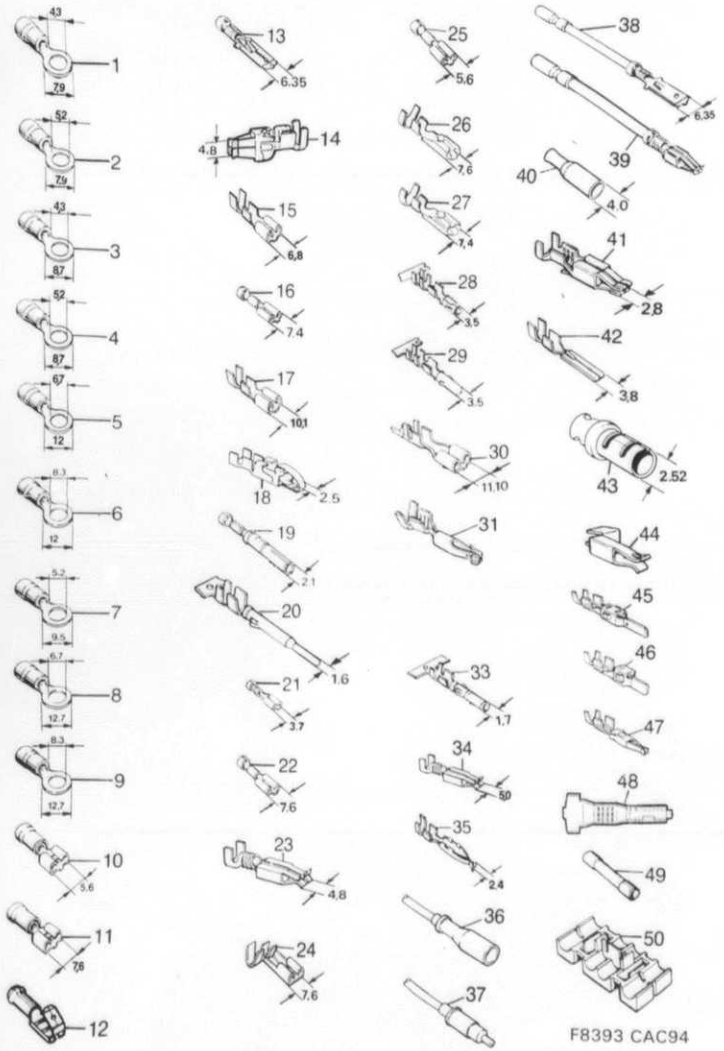

Wiring and fuses

3-F12 Cable terminal 1997-

Ledningar och säkringar

Ledningssko 1997-

2220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0970				9122797, 9124090,9124157				
0980				9124165, 9124173,9125543				
0990				9507658				
1000	23	40 61 586		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1010				4113205, 4113601,4113635				
1020				4113643,4114005,4114021				
1030				4114039, 4176249,4176624				
1040				4178422, 4178430,4352944				
1050				4353637, 4432365,4433439				
1060				4668588, 4668596,4668604				
1070				4669743				
1080	23	43 50 526		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1090				4113205, 4113601,4113627				
1100				4113643, 4432316				
1110	24	*85 21 676*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1120				ASH TRAY, CONTACT				
1130				HOUSING 8521692 NLS –				
1130				USE 8522526				
1140	24	*85 21 684*		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1150				8521692 NLS – USE				
1150				8522526				
1160	24	*85 82 421*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1170				HOUSING 8521692 NLS –				
1170				USE 8522526				
1180	24	85 22 526		47), SPOT LIGHT,	X	Cable terminal	Kabelsko	5
1190				CONTACT HOUSING 8521692				
1200	25	*85 33 028*		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	3
1210				8533184 NLS – USE				
1210				8582439				
1220	26	*85 41 203*		47), SPOTLIGHT, LIGHT	X	Cable terminal	Kabelsko	5
1230				INSTEP, BELT WARNING,				
1240				CONTACT HOUSING 8541229				
1250				8544363, 8574949,9507658				
1250				NLS – USE 8560476				
1260	27	85 60 476		57), SWITCH INTERIOR	X	Cable terminal	Kabelsko	5
1270				LIGHT, LIGHT INSTEP,				
1280				LIGHT GLOVE BOX,				
1290				CONTACT HOUSING 9507658				
1300	27	85 41 211		56), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1310				8544363				
1320	28	85 82 595		58), JOINT PIECE CENTRAL	X	Cable terminal	Kabelsko	5
1330				LOCK				
1340	28	85 82 090		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1350				9503525				
1360	29	*85 44 314*		58), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1370				8521718, 8564924,9525114				
1370				NLS – USE 8582603				
1380	30	85 69 139		105), RELAY DISTRIBITION	X	Cable terminal	Kabelsko	5
1390				TERMINAL				
1400	30	95 15 024		60), FUSE BOX, RELAY	X	Cable terminal	Kabelsko	5
1410				DISTRIBUTION TERMINAL,				
1420				EL- CENTRAL				
1430	31	95 27 771		CONTACT HOUSING 9527755	X	Cable terminal	Kabelsko	5
1440	33	85 87 552		47), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1450				9525106				

38. Area 1,0-2,5 MM2.
47. Area 0,5-1,5 MM2.
56. Area 2,5-4,0 MM2.
57. Area 0,9-2,0 MM2.
58. Area 0,5-2,0 MM2.
60. Area 6,0-8,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-F14

Cable terminal 1997-

Ledningssko 1997-

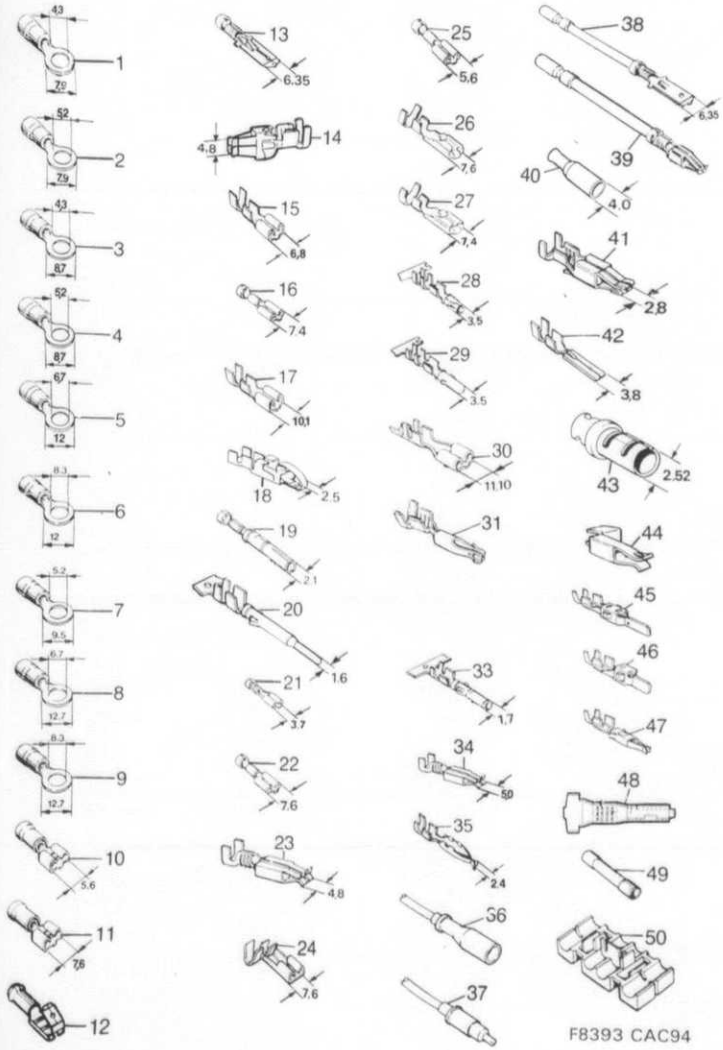

2220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	$ L
1460	33	95 25 817		53), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1470				9529538				
1480	34	95 21 972		44), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1490	34	*95 21 980*		40), RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1490				NLS – USE 9120783				
1500	35	40 63 970		44), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1510				4060869, 4222451,9565045				
1520	36	78 74 498		217), CONTACT HOUSING	X	Connection	Skarv	5
1530				9503277, 9503316,9503418				
1540				9503434, 9503475,9506668				
1550				9519679				
1560	36	85 47 796		218)SIDE DIRECTION INDI.	X	Connector	Skarvstycke	5
1570				CONTACT HOUSING,				
1580				9503277, 9503418,9503475				
1590				9519679				
1600	36	85 47 804		56), CONTACT HOUSING,	X	Connector	Skarvstycke	5
1610				4693156				
1620	37	78 74 506		217), CONTACT HOUSING	X	Connection	Skarv	5
1630				9501685, 9503426,9506668				
1640	38	85 22 542		36), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1650				7155120				
1660	39	85 22 617		36), AC	X	Cable terminal	Kabelsko	5
1670	40	85 82 579		44), JOINT PIECE	X	Cable terminal	Kabelsko	5
1680	41	*95 08 706*		62) RELAY GROUND SHEET	X	Cable terminal	Kabelsko	5
1680				NLS – USE 9120957				
1690	41	*91 20 668*		62), BULB CONTROL,	X	Cable terminal	Kabelsko	5
1700				INTERVAL RELAY, TIME				
1710				RELAY AC, RELAY BELT				
1720				WARNING, CONTACT				
1730				HOUSING, 8579930,8593899				
1740				8593907, 8593915,8593931				
1750				8593949, 8597064,9123381				
1760				9123548, 9123555,9125519				
1760				NLS – USE 9120957				
1770				9519414, 9519455,9564089				
1780				9566266, 9566282				
1790	41	91 20 957		38), CONTACT HOUSING	X	Cable terminal	Kabelsko	8
1800				4061503, 4109500,4109518				
1810				4114005, 4114021,4176186				
1820				4222451, 4411518,4434031				
1830				4517629, 4537429,9123381				
1840				9123399, 9123548,9123555				
1850				9503475, 9525031,9565045				
1860	42	*95 52 126*		44), CONTACT HOUSING	X	Cable terminal	Kabelsko	5
1870				9122557 NLS – USE				
1870				9552100				
1880	43	95 52 175		CONTACT HOUSING 9552167	X	Cable terminal	Kabelsko	5
1890	43	95 09 746		CONTACT HOUSING 9512930	X	Cable terminal	Kabelsko	5
1900	44	95 52 191		CONTACT HOUSING 9552183	X	Cable terminal	Kabelsko	5
1910	45	41 15 077		38), JOINT PIECE TRUNK	X	Cable terminal	Kabelsko	8
1920				LID, CONTACT HOUSING				
1930				4174264				

36. Area 1,0-2,6 MM2.
38. Area 1,0-2,5 MM2.
40. Area 1,5-2,5 MM2.
44. Area 0,5-1,0 MM2.
53. Area 0,2-0,56 MM2.
56. Area 2,5-4,0 MM2.
62. Area 0,75-1,5 MM2.
217. Area 0,2-1,5 MM2.
218. Area 0,2-2,5 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02

3-F16

Cable terminal 1997-

Ledningssko 1997-

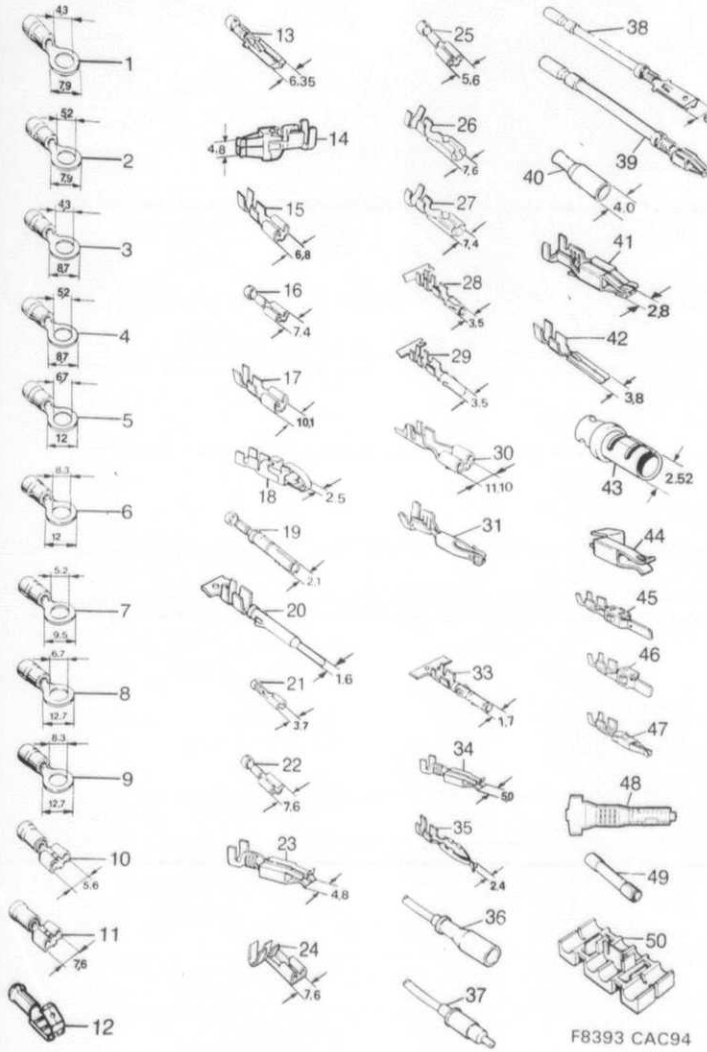

2220	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1940	45	41 15 192		38), CONTACT HOUSING 4113668, 4114062,4114070	X	Cable terminal	Kabelsko	8
1950				4115054, 4174868,4354692				
1960								
1970	45	41 15 457		44), CONTACT HOUSING 4410510	X	Cable terminal	Kabelsko	5
1980								
1990	45	41 15 283		38), CONTACT HOUSING 4174264	X	Cable terminal	Kabelsko	5
2000								
2010	46	41 15 580		38), JOINT PIECE TRUNK LID, JOINT PIECE MAIN CABLE HARNESS, CONTACT HOUSING 4117669, 4117768	X	Cable terminal	Kabelsko	5
2020								
2030								
2040								
2050								
2060	46	41 15 077		38), CONTACT HOUSING 4117164, 4117263,	X	Cable terminal	Kabelsko	8
2070								
2080	47	41 15 499		44), CONTACT HOUSING 4113007, 4411518	X	Cable terminal	Kabelsko	8
2090								
2100	47	44 66 801		44), CONTACT HOUSING 4224606	X	Cable terminal	Kabelsko	8
2110								
2120	48	44 18 505		44), CONTACT HOUSING 4201224, 4203360,4203378 4203550	X	Cable terminal	Kabelsko	5
2130								
2140								
2150	49	71 55 203		35) 40/253 164 008	X	Splice	Skarvhylsa	5
2160	49	71 55 146		36) 40/253 188 007	X	Splice	Skarvhylsa	5
2170	49	71 55 633		37) 40/253 221 006	X	Splice	Skarvhylsa	5
2180	50	85 87 198		63)	X	Cable joint	Ledningsförbindning	3
2190	50	85 21 668		46)	X	Cable joint	Ledningsförbindning	3

35. Area 0,3-1,5 MM2.
36. Area 1,0-2,6 MM2.
37. Area 2,7-6,6 MM2.
38. Area 1,0-2,5 MM2.
44. Area 0,5-1,0 MM2.
46. Area 0,8-2,1 MM2.
63. Area 0,5-0,75 MM2.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

3B GROUP INDEX

Connectors	3-A06
Cable terminals	3-E02



Transmission
Kraftöverföring
Transmisión

0041
0010 **TABLE OF CONTENTS**
0020
0030 **Clutch**

0040 Clutch, clutch disc ..... 4 : 5 3-G06
0050 **Clutch control**
0060 Pedal, master cylinder, LHD ..... 4 : 7 3-G08
0065 Pedal, master cylinder, RHD ..... 4 : 9 3-G10
0070 **Gear box, manual**
0080 Gear box assy ..... 4 : 11 3-G12
0095 Gear box case ..... 4 : 13 3-G14
0105 Release bearing, slave cylinder ..... 4 : 17 3-G18
0115 Gear shift forks, gear shift shafts ..... 4 : 19 3-G20
0125 Shafts, gears, input shaft ..... 4 : 23 3-G24
0127 Shafts, gears, output shaft ..... 4 : 27 3-H04
0130 Differential, inner universal joint, M ..... 4 : 31 3-H08
0140 Differential, inner universal joint, A ..... 4 : 35 3-H12
0150 **Gear box control, manual**
0165 Gear shift lever ..... 4 : 37 3-H14
0175 Drive shafts, outer universal joint, M and A ..... 4 : 39 3-H16
0180 **Gear box, automatic**
0190 Gear box assy ..... 4 : 43 3-H20
0200 Converter housing, converter ..... 4 : 45 3-H22
0210 Gear box case, cover ..... 4 : 47 3-H24
0220 Gears, pinion, Part 1 ..... 4 : 49 3-I02
0230 Gears, pinion, Part 2 ..... 4 : 53 3-I06
0240 Gears, pinion, Part 3 ..... 4 : 57 3-I10
0250 Control system ..... 4 : 63 3-I16
0260 Controls in gear box ..... 4 : 65 3-I18
0265 Throttle cable ..... 4 : 67 3-I20
0270 Differential, inner universal joint ..... 4 : 35 3-H12
0280 **Gear box control, automatic**
0290 Gear selector lever ..... 4 : 69 3-I22
0300 Drive shafts, outer universal joint ..... 4 : 39 3-H16
0310 Rear axle, See group 7
0320 **Complete sets**
0330 Transmission ..... 4 : 71 3-I24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G03

INNEHÅLLSFÖRTECKNING

Koppling		
Koppling, lamell	4 : 5	3-G06
Kopplingsmanövrering		
Pedal, huvudcylinder, LHD	4 : 7	3-G08
Pedal, huvudcylinder, RHD	4 : 9	3-G10
Växellåda, manuell		
Växellåda kpl	4 : 11	3-G12
Växellådshus	4 : 13	3-G14
Urtrampningslager, slavcylinder	4 : 17	3-G18
Växelförargafflar, växelföraraxlar	4 : 19	3-G20
Axlar, kugghjul, ingående axel	4 : 23	3-G24
Axlar, kugghjul, utgående axel	4 : 27	3-H04
Differential, inre knut. M	4 : 31	3-H08
Differential, inre knut. A	4 : 35	3-H12
Växellådsmanövrering, manuell		
Växelspak	4 : 37	3-H14
Drivaxlar, yttre knut. M och A	4 : 39	3-H16
Växellåda, automatisk		
Växellåda kpl	4 : 43	3-H20
Momentomvandlarhus, momentomvandlare	4 : 45	3-H22
Växellådshus, lock	4 : 47	3-H24
Drev, pinjong, Del 1	4 : 49	3-I02
Drev, pinjong, Del 2	4 : 53	3-I06
Drev, pinjong, Del 3	4 : 57	3-I10
Kontrollsystem	4 : 63	3-I16
Reglage i växellådshus	4 : 65	3-I18
Trottelkabel	4 : 67	3-I20
Differential, inre knut	4 : 35	3-H12
Växellådsmanövrering, automatisk		
Växelväljarspak	4 : 69	3-I22
Drivaxlar, yttre knut	4 : 39	3-H16
Bakaxel, Se grupp 7		
Satser		
Kraftöverföring	4 : 71	3-I24

3-G04

SUMARIO

Embrague		
Embrague, disco de embrague	4 : 5	3-G06
Mando de embrague		
Pedal, cilindro principal, LHD	4 : 7	3-G08
Pedal, cilindro principal, RHD	4 : 9	3-G10
Caja de cambios, manual		
Caja de cambios, compl.	4 : 11	3-G12
Carter de caja de cambios	4 : 13	3-G14
Cojinete de empuje, cilindro esclavo	4 : 17	3-G18
Horquillas de cambio, ejes de horquilla de cambio	4 : 19	3-G20
Ejes, engranajes, eje primario	4 : 23	3-G24
Ejes, engranajes, eje secundario	4 : 27	3-H04
Diferencial, junta homocinetica interior, M	4 : 31	3-H08
Diferencial, junta homocinetica interior, A	4 : 35	3-H12
Mandos del cambio, manual		
Palanca	4 : 37	3-H14
Eje de accionamiento, junta homocinetica exterior, M y A	4 : 39	3-H16
Caja de cambios, automatica		
Caja de cambios, compl.	4 : 43	3-H20
Carter de convertidor de par, convertidor	4 : 45	3-H22
Carter de caja de cambios, tapas	4 : 47	3-H24
Engranajes planetarios, pinon de a taque, 1a parte	4 : 49	3-I02
Engranajes planetarios, pinon de a taque, 2a parte	4 : 53	3-I06
Engranajes planetarios, pinon de a taque, 3a parte	4 : 57	3-I10
Sistem de control	4 : 63	3-I16
Mando de caja de cambios	4 : 65	3-I18
Cable del estrangulador	4 : 67	3-I20
Differencial y junta homocinetica interior	4 : 35	3-H12
Mando de caja de cambios, automatica		
Palanca selectora	4 : 69	3-I22
Eje de accionamiento, junta homocinetica exterior	4 : 39	3-H16
Eje trasero, Ver grupo 7		
Juegos completos		
Transmision	4 : 71	3-I24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G06

Clutch, clutch disc

Koppling, lamell

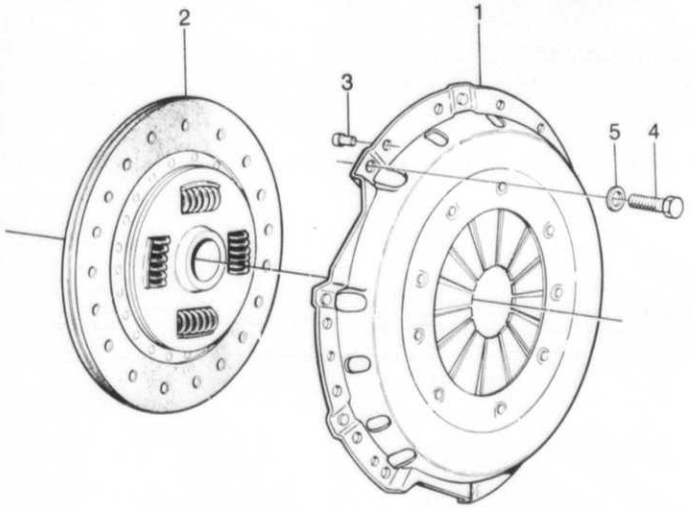

F6434 CAC94

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	87 36 761	S	B204L,B234L,B234R,B234E	1	Pressure plate	Tryckskiva	2
0030			S	B308I	1			
0050	1	87 36 423	S	239), B204I,B234I,B204S,	1	Pressure plate	Tryckskiva	2
0051				B204E	1			
0060	1	87 36 761	S	240), B204I, B204E	1	Pressure plate	Tryckskiva	2
0080	2	87 35 722	S	-1997, B204L,B234L,B234R	1	Clutch disc	Lamell	
0085	2	87 36 555	S	-1997, B234E, B308I	1	Clutch disc	Lamell	
0120	2	87 36 415	S	204),B204I, B234I, B204S	1	Clutch disc	Lamell	2
0130	2	87 44 070	S	205,239),B204I, B234I,	1	Clutch disc	Lamell	2
0140				B204S, B204E	1			
0150	2	87 36 555	S	240),-1997, B204I, B204E	1	Clutch disc	Lamell	
0151	2	* 87 46 489	S	1998-,B204I,B204E,B234E	1	Clutch disc	Lamell	2
0152	2	* 87 46 786	S	1998-, B234L, B234R	1	Clutch disc	Lamell	2
0160	3	*79 49 712*		227) NLS – USE 8034472	3	Pin	Pinne	5
0170	3	91 76 991		228)	3	Locating pin	Styrpinne	5
0200	4	79 67 938			6	Screw	Skruv	5
0210	5	83 80 982			6	Washer	Bricka	5
0220								
0270		87 81 551		B204L, B234L, B234R	X	Clutch kit	Kopplingssats	6
0280				See page 4-071, 3-I24				
0285		87 81 692		B234E, B308I	X	Clutch kit	Kopplingssats	6
0286				See page 4-071, 3-I24				
0330		87 81 569		239), B204I,B234I,B204S,	X	Clutch kit	Kopplingssats	6
0331				B204E	X			
0340				See page 4-071, 3-I24				
0350		87 81 692		240), B204I, B204E	X	Clutch kit	Kopplingssats	6
0360				See page 4-071, 3-I24				


204. Engine -S086809
205. Engine S086810-
227. Engine -T074802
228. Engine T074803-
239. Engine -V028943
240. Engine V028944-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

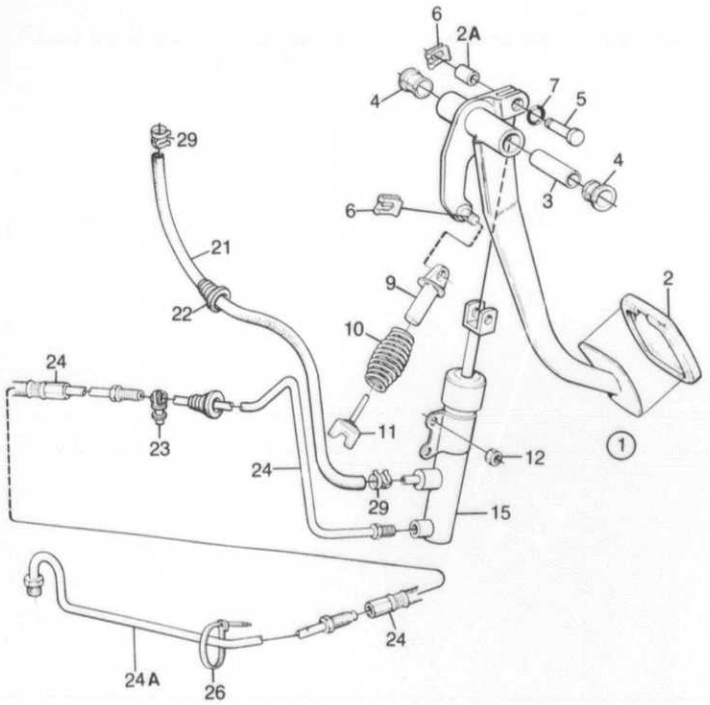

F6435 CAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 73 299			1	Clutch pedal	Kopplingspedal	6
0020	2	89 16 272			1	.Pedal pad	.Pedalgummi	5
0025	2A	91 05 495			1	.Bushing	.Bussning	4
0030	3	89 70 832			1	Spacer tube	Distansrör	6
0040	4	89 62 128			2	Bearing bushing	Lagerbussning	4
0050	5	41 05 821			1	Bolt	Bult	5
0060	6	82 52 553			2	Clip	Clips	5
0070	7	*41 90 807*		NLS – USE 4318028	1	O-ring	O-ring	2
0080	9	40 00 568			1	Guide	Styrning	6
0090	10	89 58 316			1	Spring	Fjäder	3
0110	11	89 57 813			1	Guide	Styrning	6
0120	12	80 73 512			1	Lock nut	Låsmutter	3
0130	15	43 84 079		7)	1	Clutch cylinder	Kopplingscylinder	2
0150	21	*41 21 562*		156) NLS – USE 4385043	1	Hose	Slang	5
0155	21	43 85 043		157)	1	Hose	Slang	5
0160	22	40 27 769			1	Grommet	Genomföring	3
0170	23	40 28 221			1	Tube clamp	Rörklamma	5
0195	24	43 85 167			1	Clutch hose	Kopplingsslang	2
0208	24A	44 77 022			1	Tube	Rör	2
0215	26	85 52 663			1	Tensioning band	Spännband	5
0220	29	79 73 605			2	Hose clamp	Slangklamma	5


7. Also available as exchange unit. Finns även som utbytesenhet.
156. Ch. -R1012895
157. Ch. R1012896-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

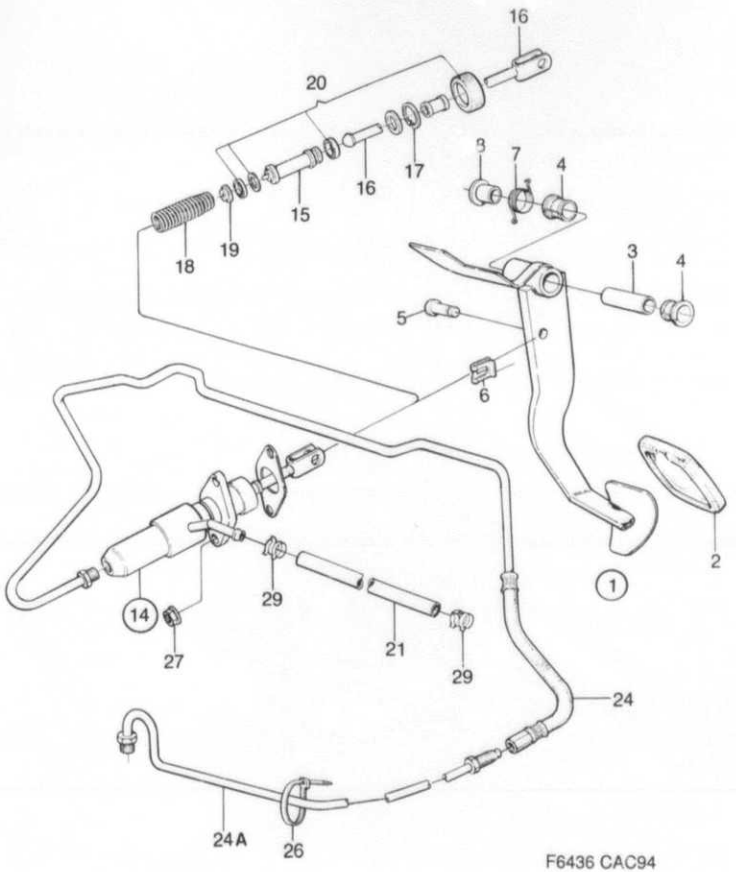

F6436 CAC94

Clutch control

3-G10

Pedal, master cylinder RHD

Kopplingsmanövrering

Pedal, huvudcylinder RHD

0160	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0020	1	89 65 535			1	Clutch pedal	Kopplingspedal	6
0050	2	89 65 345			1	.Pedal pad	.Pedalgummi	1
0070	3	89 50 297			1	Spacer tube	Distansrör	5
0080	4	89 62 128			2	Bearing bushing	Lagerbussning	4
0100	5	*89 56 443*		NLS – USE 4105821	1	Bolt	Bult	5
0110	6	82 52 553			1	Clip	Clips	5
0120	7	89 66 756			1	Return spring	Returfjäder	3
0130	8	89 70 196			1	Spacer sleeve	Distanshylsa	6
0180	14	43 85 019		7)	1	Clutch cylinder	Kopplingscylinder	2
0185	15	43 85 027			1	.Piston	.Kolv	6
0190	16	43 85 035			1	.Push rod	.Stötstång	5
0210	17	*89 57 193*		NLS – USE 7313232	1	.Lock ring	.Låsring	5
0220	18	89 86 622			1	.Spring	.Fjäder	3
0230	19	89 45 156			1	.Spring support	.Fjäderstöd	5
0240	20	89 93 156		See page 4-071, 3-I24	1	.Repair kit	.Reparationssats	1
0270	21	*41 18 949*		156) NLS – USE 4385068	1	Hose	Slang	5
0280	21	43 85 068		157)	1	Hose	Slang	5
0290	23	89 41 478			1	Gasket	Packning	5
0315	24	42 80 921		1994	1	Clutch hose	Kopplingsslang	2
0320	24	44 77 832		1995-	1	Clutch hose	Kopplingsslang	2
0328	24A	44 77 048			1	Tube	Rör	2
0335	26	85 52 663			1	Tensioning band	Spännband	5
0340	27	79 71 922			2	Nut	Mutter	3
0370	29	79 73 605			2	Hose clamp	Slangklamma	5

7. Also available as exchange unit. Finns även som utbytesenhet.
156. Ch. -R1012895
157. Ch. R1012896-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G12

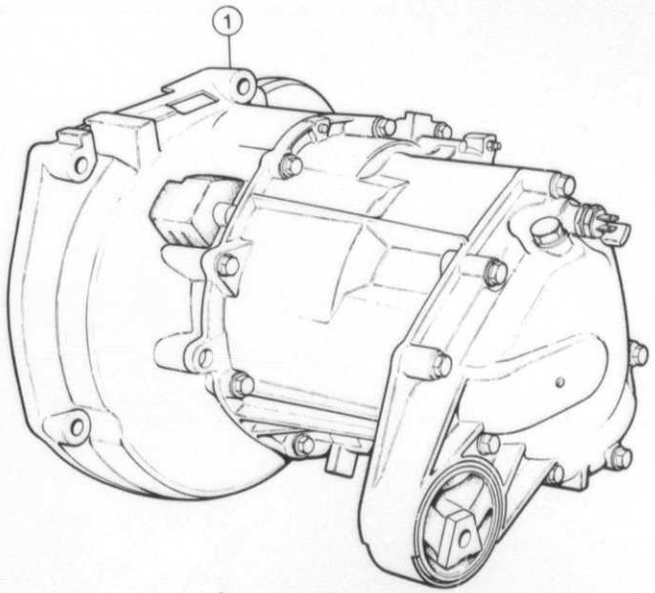

F6437 CAC94

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	87 38 205		7), B204I, B234I	1	Gearbox	Växellåda	5
0030				MARKED: FM 510XX				
0031	1	87 38 205		7), -1995, B204S	1	Gearbox	Växellåda	5
0032				MARKED: FM 510XX				
0033	1	87 46 810		7), 1996-, B204E	1	Gearbox	Växellåda	5
0034				MARKED: FM 540XX				
0040								
0042	1	87 41 480		7), 1995-, B308I	1	Gearbox	Växellåda	5
0044				MARKED: FM 540XX				
0046								
0050	1	87 36 407		7), B204L	1	Gearbox	Växellåda	5
0060				MARKED: FM 540XX				
0070								
0080	1	87 36 209		7), B234L, B234R	1	Gearbox	Växellåda	5
0090				MARKED: FM 571XX				
0100	1	87 41 373		7), B234E, B204E	1	Gearbox	Växellåda	5
0110				MARKED: FM 570XX				

7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G14

Gear box case
Växellådshus

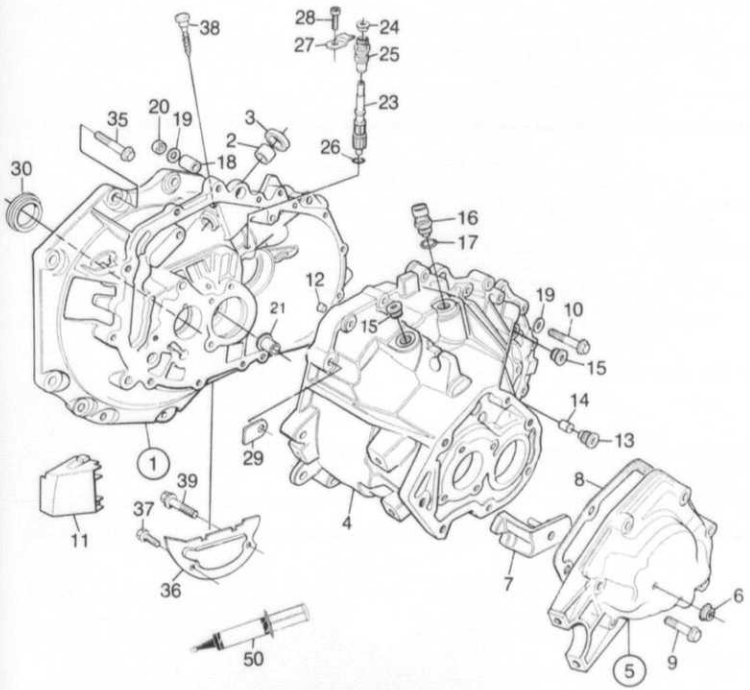

F8635 CAC94

0210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1	87 37 421		223,241)	1	.Bell housing	.Kopplingskåpa	5
0025	1	87 47 313		224,242), 4-CYL	1	.Bell housing	.Kopplingskåpa	5
0027	1	87 48 170		226,242), 6-CYL	1	.Bell housing	.Kopplingskåpa	5
0030	2	*87 31 143*		1) NLS	1	..Bushing	..Bussning	4
0040	3	*87 34 998*		1994 NLS – USE 8741878	1	..Seal	..Tätning	4
0050	3	87 41 878		1995-	1	..Seal	..Tätning	4
0060	4	87 38 338		206,241)	1	.Gearbox housing	.Växellådshus	6
0065	4	87 44 203		207,242)	1	.Gearbox housing	.Växellådshus	6
0070	5	87 34 717			1	.Cover	.Lock	5
0080	6	87 34 105			1	..Washer	..Bricka	5
0090	7	87 34 097			1	..Oil collector	..Oljesamlare	5
0100	8	87 34 832			1	.Gasket	.Packning	3
0110	9	79 72 714			7	.Flange screw	.Flänsskruv	5
0120	10	79 72 714			14	.Flange screw	.Flänsskruv	5
0130	11	87 34 816			1	.Cover	.Lock	6
0140	12	87 01 658			1	.Sintered compact	.Sinterkropp	3
0150	13	87 34 873		-1995	2	.Plug	.Plugg	6
0155	13	87 43 858		1996-	2	.Plug	.Plugg	6
0160	14	87 34 881			1	.Magnet	.Magnet	3
0165	15	87 43 858		245,244)	1	.Plug	.Plugg	6
0170	15	• 47 76 266		246,243)	1	.Plug	.Plugg	6
0180	16	42 32 666		202,241)	1	.Reverse light contact	.Backljuskontakt	3
0185	16	46 17 668		203,242)	1	.Reverse light contact	.Backljuskontakt	3
0190	17	43 46 748			1	.Gasket	.Packning	3
0200	18	87 23 967			2	.Guide pin	.Styrstift	5
0210	19	70 61 328			2	.Washer	.Bricka	5
0220	20	80 74 106			2	.Nut	.Mutter	5
0225	21	87 30 665			1	.Sleeve	.Hylsa	4
0230	22	87 38 411			3	.Flange screw	.Flänsskruv	5
0240	23	87 34 972		229,244)	1	.Gear	.Kugghjul	5
0245	23	87 48 311		230,243)	1	.Gear	.Kugghjul	5
0250	24	87 24 874			1	.Seal	.Tätning	4
0260	25	87 27 828			1	.Sleeve	.Hylsa	5
0270	26	87 11 707			1	.O-ring	.O-ring	5
0280	27	87 35 037			1	.Bracket	.Fäste	5
0290	28	80 59 552			1	.Screw	.Skruv	5
0300	29	87 39 682			1	.Bracket	.Fäste	
0305	30			See page 4-017, 3-G18	1	.Seal	.Tätning	
0310	35	79 84 297		4-CYL	5	Screw	Skruv	5
0320	35	79 82 606		1995-, 6-CYL	7	Hexagon screw	Sexkantsskruv	5
0330	36	41 64 497		4-CYL	1	Baffle	Stänkskydd	6
0335	36	41 64 489		1995-, 6-CYL	1	Baffle	Stänkskydd	6

1. Not as separate spare part. Ej som separat reservdel.
202. Gear box -N26339
203. Gear box N26340-
206. Gear box -N48696
207. Gear box N48697-
223. Gear box -N94145
224. Gear box N94146-
226. Gear box N85590-
229. Gear box -M00602
230. Gear box M00603-
241. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
242. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".
243. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
244. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
245. Gear box -M72563
246. Gear box M72564-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G16

Gear box case

Växellådshus

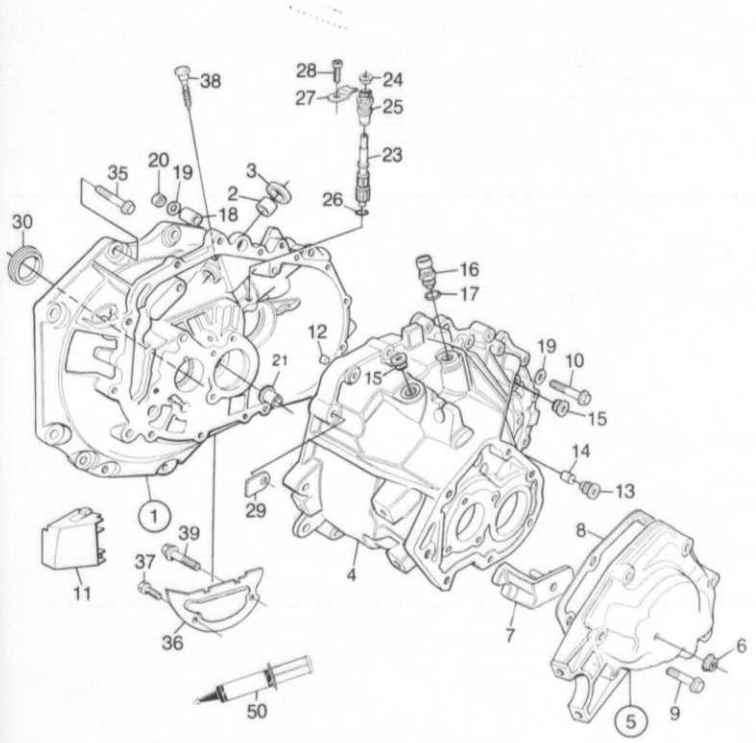

F8635 CAC94

0210	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0340	37	43 46 235		-1996, 4-CYL	1	Hexagon screw	Sexkantsskruv	5
0341	37	46 85 475		1997-, 4-CYL	1	Hexagon screw	Sexkantsskruv	5
0342	37	43 46 235		6-CYL	1	Hexagon screw	Sexkantsskruv	5
0350	38	43 87 544			1	Plug	Plugg	6
0353	39	79 84 297		4-CYL	1	Screw	Skruv	5
0356	39	40 87 193		1995-, 6-CYL	1	Hexagon screw	Sexkantsskruv	5
0360	50	93 21 795		25 ML	X	Flange sealant	Flänstätning	5
0370		87 81 593		See page 4-071, 3-I24	1	Gasket kit	Packningssats	3


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G18 *Release bearing, slave cylinder* / *Urtrampningslager, slavcylinder*

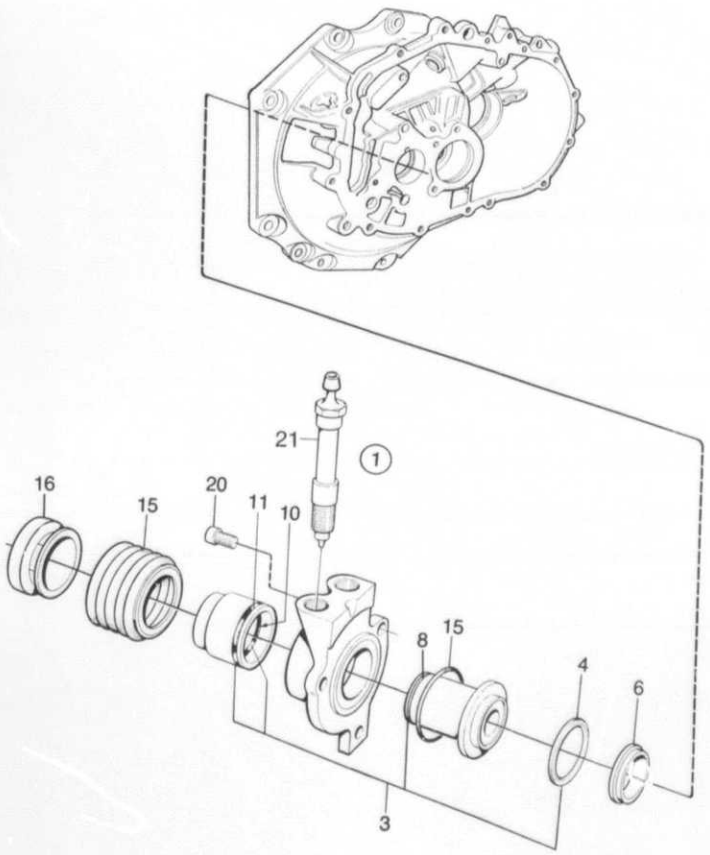

F7300 CAC94

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1	87 81 585			1	.Slave cylinder	.Slavcylinder	2
0030	3	87 81 643		See page 4-071, 3-I24	1	..Sealing kit	..Tätningssats	1
0040	4	87 29 600			1	...O-ring	...O-ring	3
0050	5	87 29 592			1	...Seal	...Tätning	3
0060	6	87 34 980			1	...Seal	...Tätning	2
0070	8	87 37 025			1	...Retaining ring	...Spårring	5
0080	10	87 22 126		1)	1	...Seal	...Tätning	3
0090	11	87 22 118		1)	1	...Seal	...Tätning	3
0100	15	87 36 928			1	..Dust cover	..Dammskydd	6
0110	16	87 21 995			1	..Release bearing	..Urtrampningslager	2
0120	20	87 38 155			3	.Screw	.Skruv	5
0130	21	87 22 746			1	.Nipple	.Nippel	6
0140		87 81 593		See page 4-071, 3-I24	1	Gasket kit	Packningsats	3


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

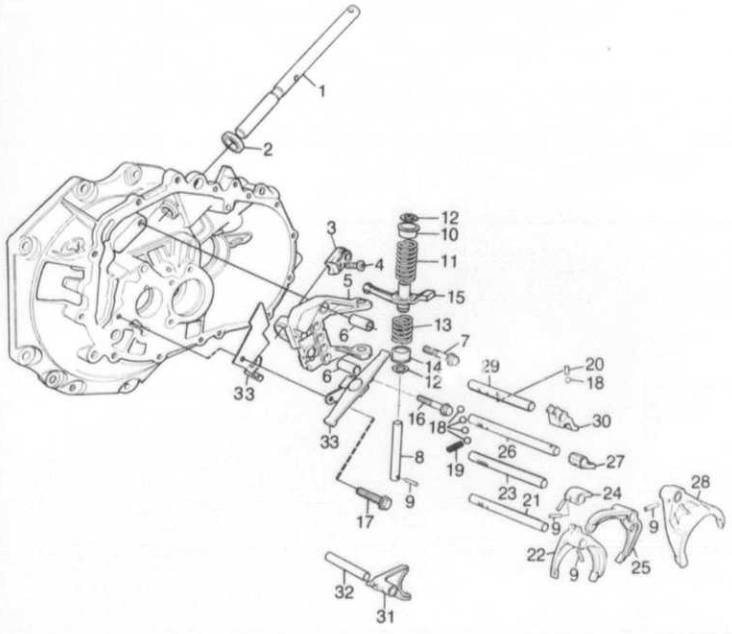

F6440 CAC94

Gear box, manual

3 -G20 Gear shift forks, gear shift shafts

Växellåda, manuell

Växelförargafflar, växelföraraxlar

0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1	87 31 010			1	.Gear rod	.Växelstång	6
0030	2			See page 4-013, 3-G14		Bushing	Bussning	
0040	3	87 35 276			1	.Companion flange	.Medbringare	5
0050	4	80 59 792			1	.Screw	.Skruv	5
0060	5	87 34 808			1	.Bearing bracket	.Lagerbock	5
0070	6	87 19 650			2	.Guide sleeve	.Styrhylsa	5
0080	7	79 72 714			1	.Flange screw	.Flänsskruv	5
0090	8	87 21 557		-1995	1	.Pivot pin	.Lagertapp	6
0100	8	87 46 216		1996-	1	.Pivot pin	.Lagertapp	6
0110	9	81 17 657			7	.Pin	.Pinne	5
0120	10	87 21 565			1	.Guide	.Styrning	4
0130	11	87 21 573			1	.Spring	.Fjäder	5
0140	12	87 26 754			2	.Retaining ring	.Spårring	5
0150	13	87 21 615			1	.Spring	.Fjäder	5
0160	14	87 21 623			1	.Spring guide	.Fjäderstyrning	4
0170	15	87 41 381			1	.Gear selector	.Växelförare	6
0180	16	79 72 714			1	.Flange screw	.Flänsskruv	5
0190	17	79 73 779			1	.Screw	.Skruv	5
0200	18	87 17 027			7	.Ball	.Kula	5
0210	19	87 23 397			4	.Spring	.Fjäder	5
0220	20	87 19 684			2	.Pin	.Pinne	5
0230	21	87 41 043			1	.Shift rail 1/2	.Växelföraraxel 1/2	6
0250	22	87 34 741			1	.Gear selector fork 1/2	.Växelförargaffel 1/2	5
0270	23	87 31 077			1	.Shift rail 3/4	.Växelföraraxel 3/4	6
0290	24	*87 19 593*		1994 NLS - USE 8740649	1	.Companion flange 3/4	.Medbringare 3/4	5
0310	24	87 40 649		1995-	1	.Companion flange 3/4	.Medbringare 3/4	5
0330	25	87 27 869			1	.Gear selector fork 3/4	.Växelförargaffel 3/4	5
0350	26	87 40 714			1	.Shift rail 5	.Växelföraraxel 5	6
0370	27	*87 19 601*		1994 NLS - USE 8740656	1	.Companion flange 5	.Medbringare 5	5
0390	27	87 40 656		1995-	1	.Companion flange 5	.Medbringare 5	5
0410	28	87 35 755		249,244)	1	.Gear selector fork 5	.Växelförargaffel 5	5
0425	28	• 87 46 638		250,243)	1	.Gear selector fork 5	.Växelförargaffel 5	5
0430	29	87 35 656			1	.Shift rail R	.Växelföraraxel R	6
0450	30	*87 40 151*		1994, (8730046) NLS - USE 8741811	1	.Companion flange R	.Medbringare R	5
0470	30	87 41 811		1995	1	.Companion flange R	.Medbringare R	5
0490	30	87 46 190		1996-	1	.Companion flange R	.Medbringare R	5
0510	31	87 35 599			1	.Gear selector fork R	.Växelförargaffel R	5
0530	32	87 30 111			1	.Shift rail R	.Växelföraraxel R	6

243. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
244. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
249. Gear box -M67875
250. Gear box M67876-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-G22

Gear shift forks, gear shift shafts

Växelförargafflar, växelföraraxlar

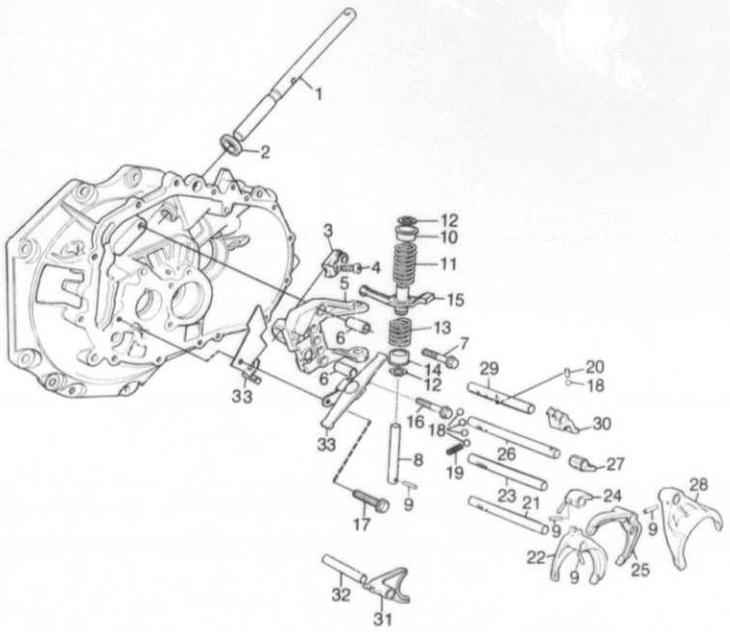

F6440 CAC94


0310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S i
0550	33	87 35 102			1	.Lever	.Hävarm	5
0560						R	R	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

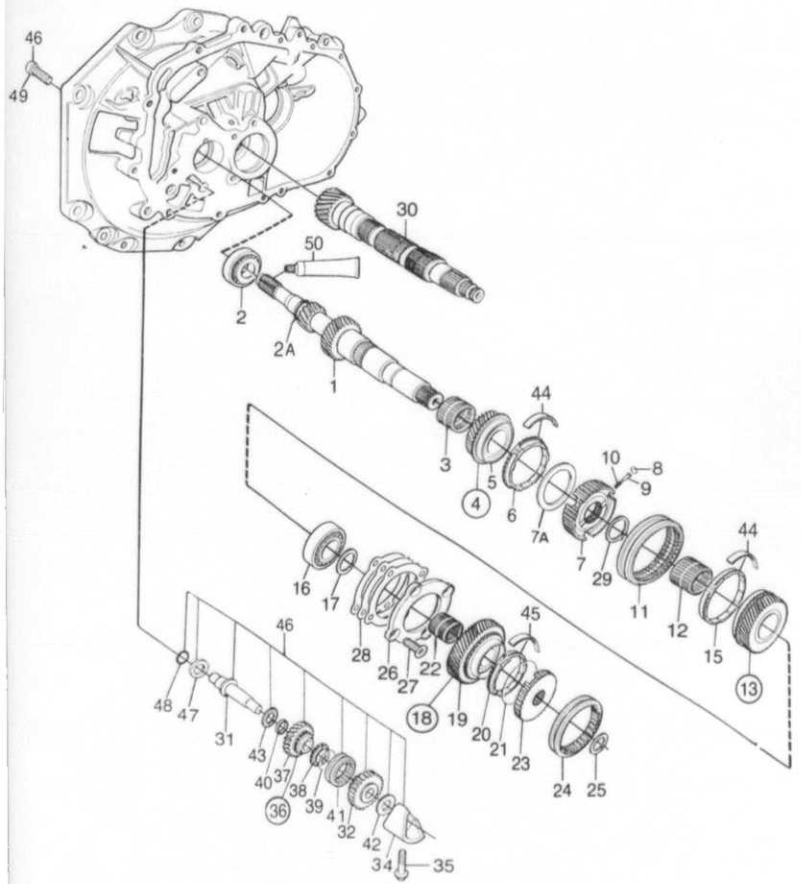

F8636 CAC94

0330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1	87 34 543		247,244)	1	.Shaft	.Axel	6
0025	1	• 87 47 933		248,243)	1	.Shaft	.Axel	6
0030	2	87 19 163			1	.Roller bearing	.Rullager	3
0040	2A			See page 4-017, 3-G18	1	.Seal	.Tätning	
0050	3	87 31 150			1	.Needle bearing	.Nållager	3
0060	4	87 81 445			1	.Gear	.Kuggdrev	4
0070						3	3	
0080	5	87 37 439		1)	1	..Gear	..Kuggdrev	4
0090	6	87 20 112		165)	1	..Synchromesh	..Synkronisering	3
0100	6	87 40 185		166)	1	..Synchromesh	..Synkronisering	3
0110	7	87 41 001		247,244)	1	.Hub	.Nav	5
0111	7	• 87 47 909		248,243)	1	.Hub	.Nav	5
0112	7A	• 87 47 925		248,243)	1	.Washer	.Bricka	5
0120	8	87 16 839			1	.Roller	.Rulle	5
0130	9	87 16 821			1	.Plunger	.Plunge	5
0140	10	87 23 330			1	.Compression spring	.Tryckfjäder	4
0150	11	87 36 597			1	.Sleeve	.Muff	5
0160	12	87 31 192			1	.Needle bearing	.Nållager	3
0170	13	87 81 452			1	.Gear	.Kuggdrev	4
0180						4	4	
0190	14	87 37 447		1)	1	..Gear	..Kuggdrev	4
0200	15	87 20 112		165)	1	..Synchromesh	..Synkronisering	3
0210	15	87 40 185		166)	1	..Synchromesh	..Synkronisering	3
0220	16	87 35 490			1	.Roller bearing	.Rullager	3
0230	17	87 21 946			1	.Retaining ring	.Spårring	4
0240	18	87 81 510			1	.Gear	.Kuggdrev	4
0250						5	5	
0260	19	87 37 454		1)	1	..Gear	..Kuggdrev	4
0270	20	87 34 592		165)	1	..Synchromesh	..Synkronisering	3
0280	20	87 40 201		166,233,244)	1	..Synchromesh	..Synkronisering	3
0285	20	87 45 606		234,243)	1	..Synchromesh	..Synkronisering	3
0290	21	87 35 441			1	..Spring ring	..Fjäderring	4
0300	22	87 21 953			1	.Needle bearing	.Nållager	3
0310	23	87 39 815		233,244)	1	.Hub	.Nav	5
0315	23	87 44 997		234,243)	1	.Hub	.Nav	5
0320	24	87 37 074			1	.Sleeve	.Muff	5
0330	25	87 34 071			1	.Retaining ring	.Spårring	5
0340	26	87 31 333			1	.Support	.Stöd	5
0350	27	87 41 506			4	.Screw	.Skruv	5
0360	28	87 31 366		0.10 MM	X	.Adjusting washer	.Justerbricka	5
0370	28	87 31 374		0.15 MM	X	.Adjusting washer	.Justerbricka	5
0380	28	87 31 382		0.30 MM	X	.Adjusting washer	.Justerbricka	5
0390	28	87 42 421		1995-, 0.50 MM	X	.Adjusting washer	.Justerbricka	5
0400	28	87 42 439		1995-, 1.00 MM	X	.Adjusting washer	.Justerbricka	5
0410	29	87 19 189			1	.Lock ring	.Låsring	5
0420	30			See page 4-027, 3-H04	1	.Pinion shaft	.Pinjongaxel	
0430	31	*87 39 450*		223,241), 4-CYL	1	.Shift rail	.Växelföraraxel	6
0440				NLS – USE 8742371		R	R	


1. Not as separate spare part. Ej som separat reservdel.
165. Gear box –J42882
166. Gear box J42883–
223. Gear box –N94145
233. Gear box –M24982
234. Gear box M24983–
241. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
243. Not applicable to gearboxes having a serial number beginning with "N". Gäller ej växellådor vars löpnummer börjar med "N".
244. Applicable to gearboxes having a serial number beginning with "N". Gäller växellådor vars löpnummer börjar med "N".
247. Gear box –M65652
248. Gear box M65653–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

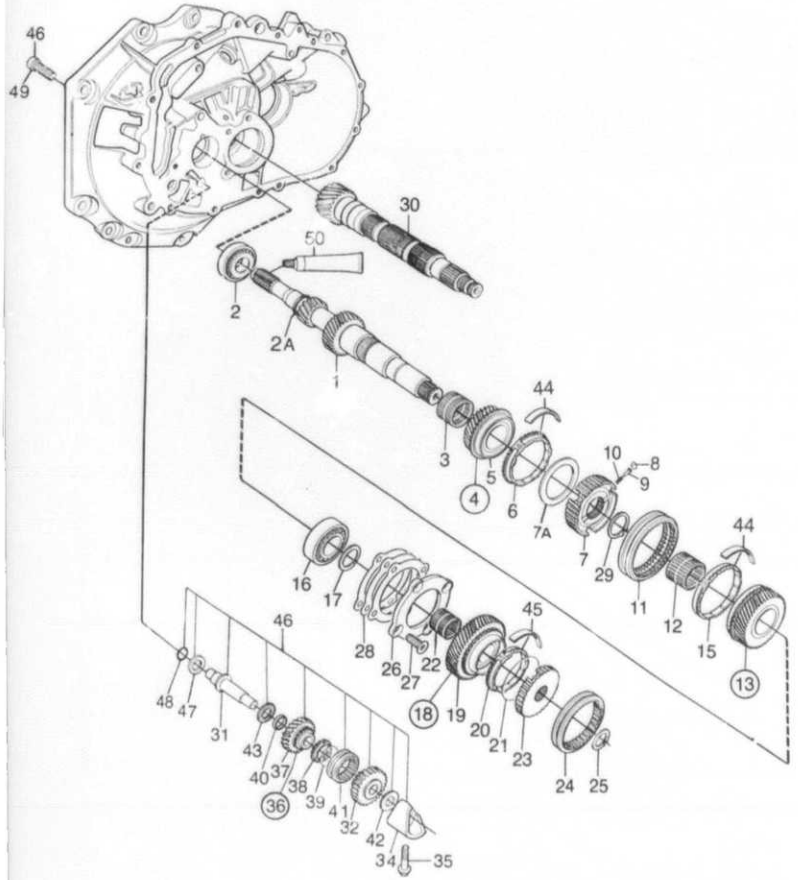

F8636 CAC94

Gear box, manual

3 –H02

Shafts, gears
Input shaft

Växellåda, manuell

Axlar, kugghjul
Ingående axel

0330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0450	31	87 44 237		224,242), 4-CYL	1	.Shift rail	.Växelföraraxel	6
0460						R	R	
0470	31	87 42 371		6-CYL	1	.Shift rail	.Växelföraraxel	6
0480						R	R	
0490	32	87 36 399			1	.Gear	.Kugghjul	5
0500	34	87 40 672			1	.Support	.Stöd	5
0510	35	79 72 714			1	.Flange screw	.Flänsskruv	5
0520	36	87 81 437		223,241), 4-CYL	1	.Gear	.Kugghjul	5
0530						R	R	
0540	36	87 81 882		224,242), 4-CYL	1	.Gear	.Kugghjul	5
0550						R	R	
0560	36	87 81 759		6-CYL	1	.Gear	.Kugghjul	5
0570						R	R	
0580	37	87 35 623		1,223,241), 4-CYL	1	..Gear	..Kugghjul	5
0590	37	87 47 016		1,224,242), 4-CYL	1	..Reverse gear	..Backkugghjul	5
0600	37	87 42 397		1), 6-CYL	1	..Gear	..Kugghjul	5
0610	38	*87 35 615*		165) NLS – USE 8740169	1	..Synchromesh	..Synkronisering	3
0620	38	87 40 169		166)	1	..Synchromesh	..Synkronisering	3
0630	39	87 29 964			1	..Spring ring	..Fjäderring	4
0640	40	87 41 241		4-CYL	2	..Bushing	..Bussning	4
0650	41	87 41 324			1	.Sleeve	.Muff	5
0660	42	87 40 680			1	.Thrust washer	.Axialbricka	4
0670	43	87 34 659			1	.Needle bearing	.Axialnållager	3
0680	44	87 43 791		180)	6	.Leaf spring	.Bladfjäder	4
0690	45	87 43 809		180)	3	.Leaf spring	.Bladfjäder	4
0700	46	87 43 460		187,223,241), 4-CYL	1	.Gear	.Kugghjul	5
0710	46	87 46 364		224,242), 4-CYL	1	.Gear	.Kugghjul	5
0715	46	87 43 460		187), 6-CYL	1	.Gear	.Kugghjul	5
0720	47	87 44 252		224,242), 4-CYL	1	.Spacer washer	.Distansbricka	5
0730	48	79 67 573		224,242), 4-CYL	1	.O ring	.O-ring	2
0740	49	80 59 792		224,242), 4-CYL	1	.Screw	.Skruv	5
0750	50	87 81 684		50 GR	X	Grease	Fett	


1. Not as separate spare part. Ej som separat reservdel.
165. Gear box –J42882
166. Gear box J42883–
180. Gear box J95349–
187. See SI 471-1535 Se SI 471-1535
223. Gear box –N94145
224. Gear box N94146–
241. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
242. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

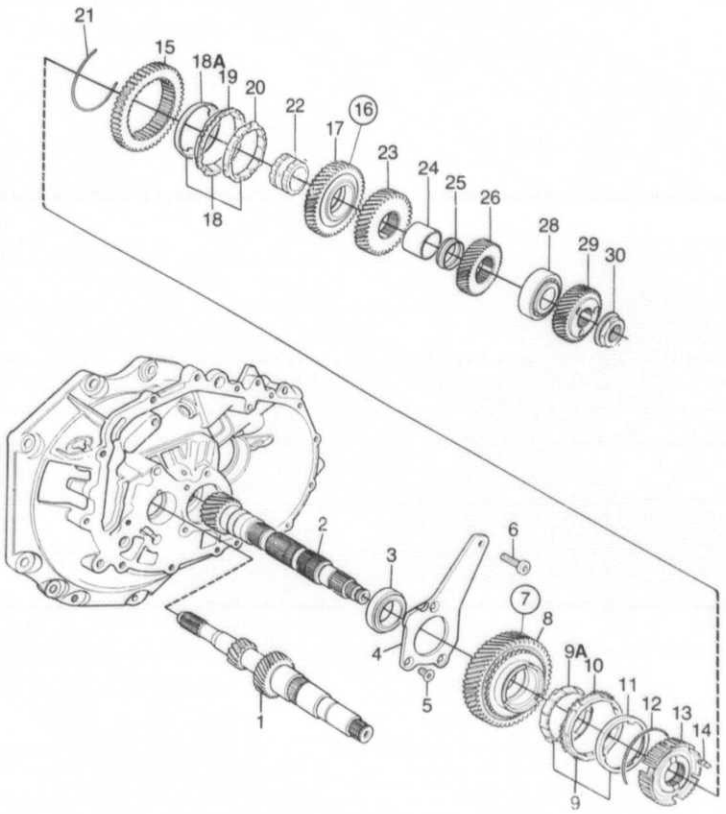

F8619 CAC94

Gear box, manual

3-H04 Shafts, gears Output shaft

Växellåda, manuell

Axlar, kugghjul
Utgående axel

0340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1			See page 4-023, 3-G24	1	.Shaft	.Axel	
0030	2	87 30 566		B204I, B234I	1	.Pinion shaft	.Pinjongaxel	5
0040				B204S	1			
0050	2	87 30 723		212,241), B204L, B204E	1	.Pinion shaft	.Pinjongaxel	5
0051				B308I				
0055	2	87 46 877		213,242), B204L, B204E	1	.Pinion shaft	.Pinjongaxel	5
0056				B308I				
0060	2	87 32 414		B234L, B234R, B234E	1	.Pinion shaft	.Pinjongaxel	5
0070	3	87 29 378			1	.Roller bearing	.Rullager	3
0080	4	87 40 631		237,241), 4-CYL	1	.Support	.Stöd	5
0081	4	87 46 687		238,242), 4-CYL	1	.Support	.Stöd	5
0082	4	87 40 631		225,241), 6-CYL	1	.Support	.Stöd	5
0085	4	87 46 687		226,242), 6-CYL	1	.Support	.Stöd	5
0090	5	87 41 506		237,241), 4-CYL	3	.Screw	.Skruv	5
0095	5	46 65 186		238,242), 4-CYL	3	.Screw	.Skruv	5
0100	5	80 56 194		225,241), B308I	3	.Screw	.Skruv	5
0105	5	46 85 186		226,242), B308I	3	.Screw	.Skruv	5
0110	6	80 59 792			1	.Screw	.Skruv	5
0120	7	87 81 478			1	.Gear 1	.Kugghjul 1	4
0130								
0140	8	87 35 862		1)	1	..Gear	..Kugghjul	4
0150	9	87 81 734			1	..Synchromesh	..Synkronisering	3
0160	9A	87 34 428		165)	1	...Synchromesh	...Synkronisering	3
0170	9A	87 40 789		166)	1	...Synchromesh	...Synkronisering	3
0180	10	87 34 444		165)	1	...Synchromesh	...Synkronisering	3
0190	10	87 40 797		166)	1	...Synchromesh	...Synkronisering	3
0200	11	87 34 436			1	...Synchromesh	...Synkronisering	3
0210	12	87 34 451			1	.Spring ring	.Fjäderring	4
0220	13	87 35 920			1	.Hub	.Nav	5
0230	14	87 35 680			3	.Companion flange	.Medbringare	4
0240	15	87 35 896			1	.Sleeve	.Muff	5
0250	16	87 81 486			1	.Gear 2	.Kugghjul 2	4
0260								
0270	17	87 35 847		1)	1	..Gear	..Kugghjul	4
0280	18	87 81 734			1	..Synchromesh	..Synkronisering	3
0290	18A	87 34 436			1	...Synchromesh	...Synkronisering	3
0300	19	87 34 444		165)	1	...Synchromesh	...Synkronisering	3
0310	19	87 40 797		166)	1	...Synchromesh	...Synkronisering	3
0320	20	87 34 428		165)	1	...Synchromesh	...Synkronisering	3
0330	20	87 40 789		166)	1	...Synchromesh	...Synkronisering	3
0340	21	87 34 451			1	.Spring ring	.Fjäderring	4
0350	22	*87 30 350*		200,241) NLS – USE	1	.Bearing bushing	.Lagerbussning	3
0350				8743205				
0355	22	87 43 205		201,242)	1	.Bearing bushing	.Lagerbussning	3
0360	23	87 34 337			1	.Gear 3	.Kugghjul 3	4
0370								
0380	24	87 35 359			1	.Spacer sleeve	.Distanshylsa	5


1. Not as separate spare part. Ej som separat reservdel.
165. Gear box -J42882
166. Gear box J42883-
200. Gear box -N21685
201. Gear box N21686-
212. Gear box -N58100
213. Gear box N581001-
225. Gear box -N85589
226. Gear box N85590-
237. Gear box -N94145
238. Gear box N94146-
241. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
242. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

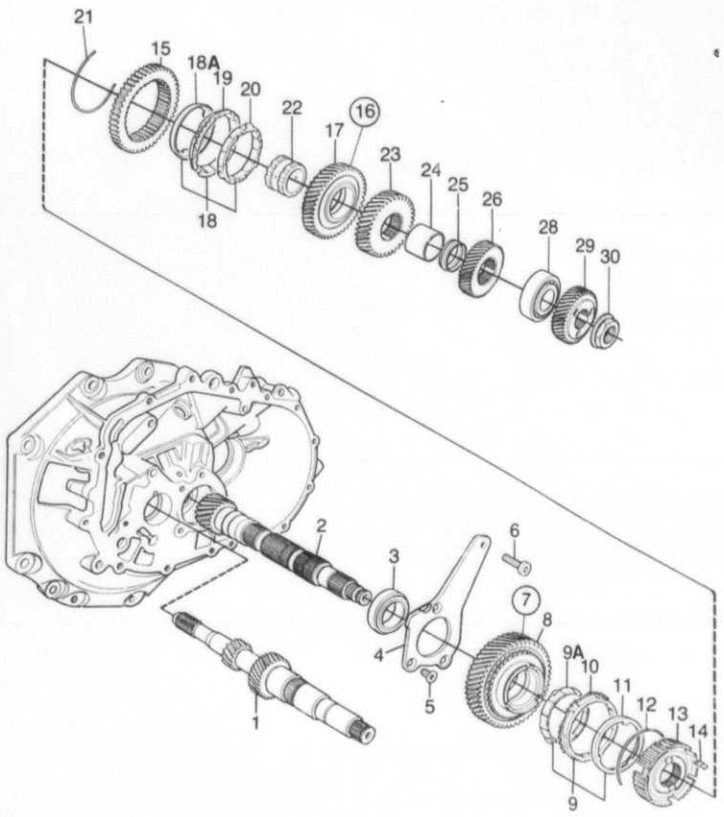

F8619 CAC94

Gear box, manual

3-H06 Shafts, gears Output shaft

Växellåda, manuell

Axlar, kugghjul Utgående axel

0340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0390	25	87 34 477			1	.Sleeve	.Hylsa	4
0400	26	87 25 327			1	.Gear	.Kugghjul	4
0410						4	4	
0420	28	87 37 835		-1996	1	.Roller bearing	.Rullager	3
0425	28	87 48 261		1997-	1	.Roller bearing	.Rullager	3
0430	29	87 35 813			1	.Gear	.Kugghjul	4
0440						5	5	
0450	30	87 35 516			1	.Nut	.Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX


Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

Gear box, manual

3-H08 Differential

Växellåda, manuell

Differential

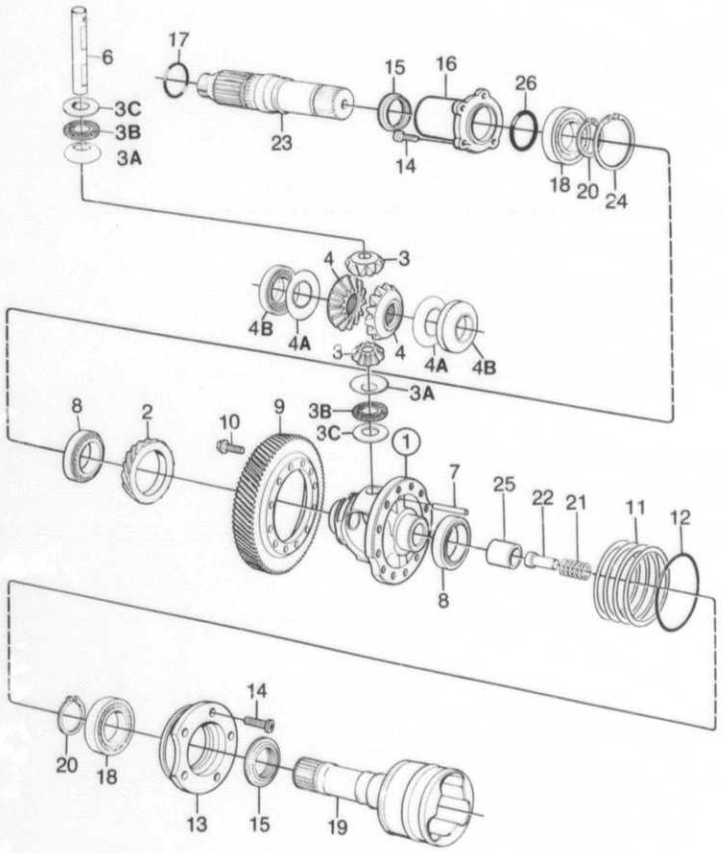

F6443 CAC94

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-011, 3-G12		Gear box, manual	Växellåda, manuell	
0020	1	87 41 837		210,241)	1	.Differential	.Differential	6
0030	1	87 44 773		211,242)	1	.Differential	.Differential	6
0040	1	*87 41 845*		1994, B234L, B234R NLS - USE 8741837	1	.Differential	.Differential	6
0040								
0050	2	87 34 964			1	..Drive gear	..Drev	5
0060	3	87 33 909		1)	2	..Differential pinion	..Differentialdrev	4
0070	3	*87 39 898*		1), 1994, B234L, B234R NLS	2	..Differential pinion	..Differentialdrev	4
0070								
0080	3A	87 31 788		1)	2	..Washer	..Bricka	3
0090	3B	87 30 244		1), 1994, B234L, B234R	2	..Needle bearing	..Nållager	3
0100	3C	87 30 251		1), 1994, B234L, B234R	2	..Washer	..Bricka	5
0110	4	87 33 438		1)	2	..Differential pinion	..Differentialdrev	4
0120	4	*87 37 983*		1), 1994, B234L, B234R NLS	2	..Differential pinion	..Differentialdrev	4
0120								
0130	4A	87 31 796		1)	2	..Washer	..Bricka	3
0140	4B	87 29 758		1), 1994, B234L, B234R	2	..Needle bearing	..Nållager	3
0145	6	87 19 940		1), -1996	1	..Differential shaft	..Differentialaxel	5
0150	6	87 47 255		1), 1997-	1	..Differential shaft	..Differentialaxel	5
0160	7	81 17 863		1,210,241)	1	..Roll pin	..Spännstift	5
0170	7	81 17 814		1,211,242)	1	..Roll pin	..Spännstift	5
0180	8	87 34 568			2	.Roller bearing	.Rullager	3
0190	9	87 30 285		210,241), B204I, B234I, B204S	1	.Gear	.Kugghjul	5
0191								
0200	9	87 44 518		211,242), B204I, B234I	1	.Gear	.Kugghjul	5
0210	9	87 30 715		210,241), B204L, B204E, B308I	1	.Gear	.Kugghjul	5
0211								
0220	9	87 44 492		211,212,241), B204L, B204E, B308I	1	.Gear	.Kugghjul	5
0230								
0240	9	87 46 893		213,242),B204L, B204E, B308I	1	.Gear	.Kugghjul	5
0241								
0250	9	87 32 422		210,241),B234L, B234R, B234E	1	.Gear	.Kugghjul	5
0251								
0260	9	87 44 476		211,242),B234L, B234R, B234E	1	.Gear	.Kugghjul	5
0261								
0270	10	*87 35 193*		169) NLS – USE 8741712	12	.Screw	.Skruv	5
0280	10	87 41 712		170,210,241)	12	.Screw	.Skruv	5
0290	10	46 85 350		211,242)	11	.Screw	.Skruv	5
0300	11	87 34 618		0,10 MM	X	.Adjusting washer	.Justerbricka	5
0310	11	87 34 626		0,15 MM	X	.Adjusting washer	.Justerbricka	5
0320	11	87 34 634		0,30 MM	X	.Adjusting washer	.Justerbricka	5
0330	11	87 34 642		0,50 MM	X	.Adjusting washer	.Justerbricka	5
0340	12	80 47 144			1	.O-ring	.O-ring	2
0350	13	87 34 048			1	.Bearing seat	.Lagersäte	5
0360	14	80 59 792			9	.Screw	.Skruv	5
0370	15	87 31 804			2	.Sealing collar	.Tätningskrage	5
0380	16	87 34 030			1	.Bearing seat	.Lagersäte	5
0390	17	79 70 361			1	.O-ring	.O-ring	2
0400	18	87 04 306			2	.Ball bearing	.Kullager	3
0410	19	87 20 948			1	.Companion flange	.Medbringare	3
0420	19	41 03 222		B204L, B234L, B234R	1	.Companion flange	.Medbringare	3
0430	20	87 28 198			2	.Retaining ring	.Spårring	5

1. Not as separate spare part. Ej som separat reservdel.
169. Gear box –J58613
170. Gear box J58614–
210. Gear box –N55112
211. Gear box N55113–
212. Gear box –N58100
213. Gear box N581001–
241. Not applicable to gearboxes having a serial number beginning with "M". Gäller ej växellådor vars löpnummer börjar med "M".
242. Applicable to gearboxes having a serial number beginning with "M". Gäller växellådor vars löpnummer börjar med "M".


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3 –H10

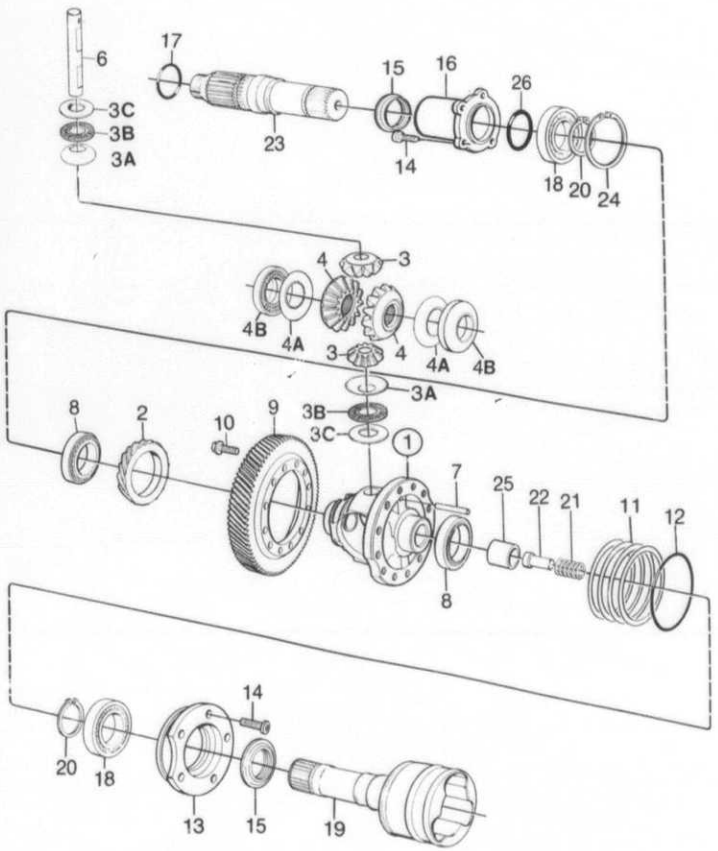

F6443 CAC94

0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0440	21	87 04 314			1	.Spring	.Fjäder	4
0450	22	87 04 322			1	.Plunger	.Plunge	5
0460	23	87 23 140			1	.Shaft	.Axel	5
0470	24	80 48 324			1	.Ring	.Ring	6
0480	25	87 33 230			2	.Bushing	.Bussning	3
0490	26	87 31 390			1	.O-ring	.O-ring	2
0500		87 81 593		See page 4-071, 3-I24	1	Gasket kit	Packningsats	3


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-H12

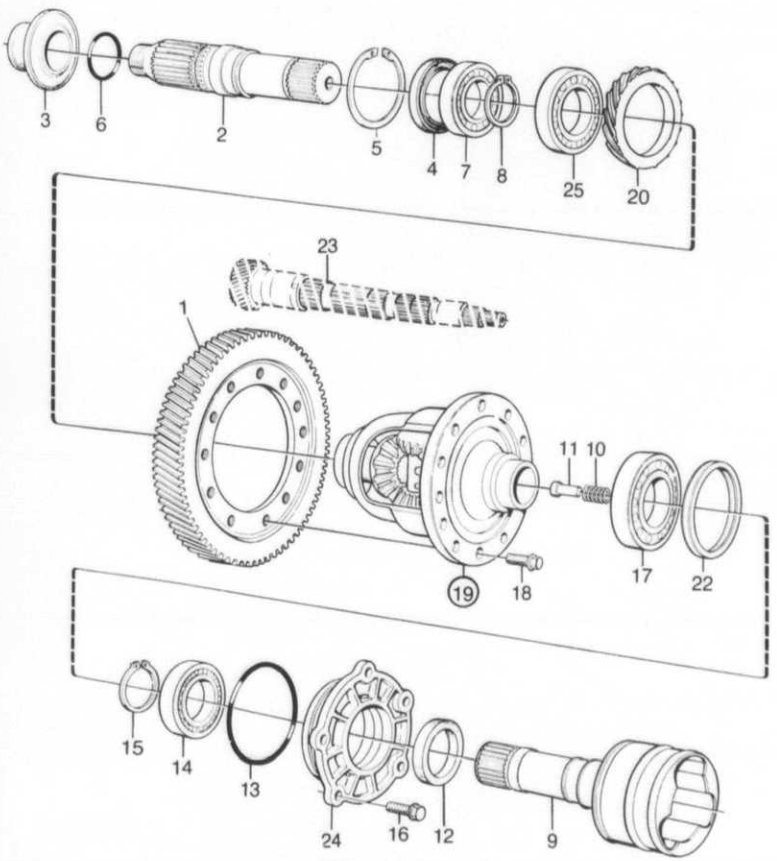

F6444 CAC94

0375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0050	1	40 26 977		4-CYL	1	.Crown wheel	.Kronhjul	5
0055	1	43 84 590		1995-, 6-CYL	1	.Crown wheel	.Kronhjul	5
0060	2	87 23 140	S		1	.Shaft	.Axel	5
0080	4	75 92 223	S		1	.Seal	.Tätning	5
0090	5	80 48 324	S		1	.Ring	.Ring	6
0100	5	*79 15 036*	S	78) NLS – USE 8048324	1	.Lock ring	.Låsring	5
0110	6	75 94 898			1	.O-ring	.O-ring	3
0120	7	75 58 950			1	.Ball bearing	.Kullager	5
0130	8	*80 47 813*		NLS – USE 8728198	1	.Retaining ring	.Spårring	5
0140	8	*79 15 200*		79) NLS – USE 8728198	1	.Lock ring	.Låsring	5
0150	9	87 20 948	S	LH	1	.Companion flange	.Medbringare	3
0170	9	41 03 222		LH, B234 TURBO	1	.Companion flange	.Medbringare	3
0175				LH, B204L	1			
0180	10	87 04 314	S		1	.Spring	.Fjäder	4
0190	11	87 04 322	S		1	.Plunger	.Plunge	5
0205	12	42 80 376	S		1	.Seal	.Tätning	5
0210	13	75 94 120			1	.O-ring	.O-ring	3
0220	14	75 58 950	S		1	.Ball bearing	.Kullager	5
0230	15	*79 15 200*	S	NLS – USE 8728198	1	.Lock ring	.Låsring	5
0240	16	75 58 497			5	.Hex&gon screw	.Sexkantsskruv	5
0250	17	75 58 430			1	.Roller bearing	.Rullager	3
0260	18	75 71 862		4-CYL	11	.Screw	.Skruv	5
0262	18	75 71 870		4-CYL, ALT. TO 7571862	11	.Screw	.Skruv	5
0265	18	44 91 973		1995-, 6-CYL	10	.Screw	.Skruv	5
0270	19	87 27 778		198)	1	.Differential	.Differential	6
0275	19	87 29 766		175), B234 TURBO	1	.Differential	.Differential	6
0277	19	87 27 778		176,198), B234 TURBO	1	.Differential	.Differential	6
0279	19	87 46 406		199)	1	.Differential	.Differential	6
0280	20	87 27 232			1	..Drive gear	..Drev	5
0300	22	41 22 123		0,15MM	X	.Adjusting washer	.Justerbricka	5
0320	22	41 22 131		0,20MM	X	.Adjusting washer	.Justerbricka	5
0340	22	41 22 149		0,25MM	X	.Adjusting washer	.Justerbricka	5
0360	22	41 22 156		0,30MM	X	.Adjusting washer	.Justerbricka	5
0380	22	41 22 164		0,35MM	X	.Adjusting washer	.Justerbricka	5
0400	22	41 22 172		0,40MM	X	.Adjusting washer	.Justerbricka	5
0420	22	41 22 180		0,70MM	X	.Adjusting washer	.Justerbricka	5
0440	22	41 22 198		1,00MM	X	.Adjusting washer	.Justerbricka	5
0460	22	41 22 206		1,20MM	X	.Adjusting washer	.Justerbricka	5
0480	22	41 22 214		1,50MM	X	.Adjusting washer	.Justerbricka	5
0490	23			See page 4-057, 3-I10		.Pinion	.Pinjong	
0500	24	87 19 098			1	.Bearing seat	.Lagersäte	5
0510	25	75 58 448			1	.Roller bearing	.Rullager	3
0520								
0530		75 75 509		B234I	X	.Sealing kit drive shaft	.Tätningssats drivaxel	3
0535				See page 4-073, 3-J02				
0550		75 75 566		LH, B234I	X	.Repair kit drive shaft	.Reparationssats drivaxel	5
0560				See page 4-073, 3-J02				
0580		75 75 574		RH, B234I	X	.Repair kit drive shaft	.Reparationssats drivaxel	
0590				See page 4-073, 3-J02				
0610		74 96 094			X	Gasket kit	Packningsats	3
0620				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
0630		74 96 102			X	Gasket kit	Packningsats	3
0640				See page 4-075, 3-J04		Stage 3	Steg 3	

78. Alternative to 8048324. Alternativ till 8048324.
79. Alternative to 8047813. Alternativ till 8047813.
175. Gear box -201047
176. Gear box 201048-
198. Ch. -S1004375
199. Ch. S1004376-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-H14

Gear shift lever
Växelspak

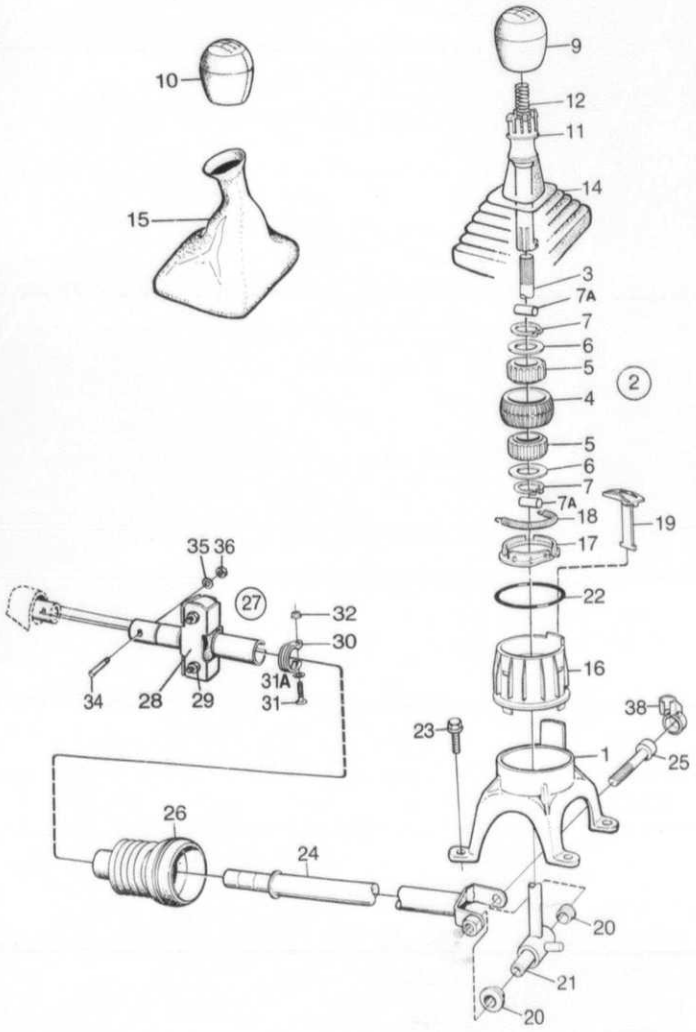

F8565 CAC94

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 79 535			1	Gear shift housing	Växelspakshus	
0020	2	43 84 434			1	Gear lever	Växelspak	
0030	2	43 84 442		RHD	1	Gear lever	Växelspak	
0040	2	43 84 459			1	Gear lever	Växelspak	
0050						leather	läder	
0060	3	40 27 918		235)	1	.Gear lever	.Växelspak	5
0065	3	47 75 961		236)	1	.Gear lever	.Växelspak	5
0070	4	40 27 876			1	..Ball	..Kula	5
0080	5	40 27 892			2	..Bushing	..Bussning	3
0090	6	41 21 588			2	..Washer	..Bricka	4
0100	7	80 47 706		235)	2	..Retaining ring	..Spårring	5
0105	7A	46 85 657		236)	2	..Roll pin	..Spännstift	
0110	9	40 27 934			1	.Knob	.Knopp	
0120	10	42 79 303			1	.Knob	.Knopp	
0130						leather	läder	
0140	11	40 27 868			1	.Companion flange	.Medbringare	3
0150	12	44 77 204			1	.Spring	.Fjäder	5
0160	14	75 99 442			1	.Gaiter	.Damask	6
0170	14	75 99 434		RHD	1	.Gaiter	.Damask	6
0180	15	75 98 337			1	.Gaiter	.Damask	6
0190						leather	läder	
0200	16	44 77 824			1	.Ball socket	.Kulskål	6
0210	17	40 27 850			1	.Ball socket	.Kulskål	6
0220	18	40 27 942			1	.Spring	.Fjäder	5
0230	19	40 27 843			1	.Reverse lock	.Backspärr	5
0240	20	75 59 875			2	.Bushing	.Bussning	3
0250	21	75 77 729			1	.Spacer	.Distans	3
0260	22	79 67 912			1	O-ring	O-ring	2
0270	23	79 65 544			4	Screw	Skruv	5
0280	24	41 18 626			1	Gear rod	Växelstång	5
0290	25	75 54 553			1	Screw	Skruv	5
0300	26	75 99 400			1	Gaiter	Damask	5
0310	27	*75 99 178*		167) NLS - USE 4477147	1	Joint	Knut	5
0320	27	44 77 147		168)	1	Joint	Knut	5
0330	28	75 76 416		167)	1	.Joint	.Knut	5
0340	29	80 73 512		167)	4	.Lock nut	.Låsmutter	3
0350	30	93 48 533		167)	1	Clamp	Klammer	5
0360	30	44 77 139		168)	1	.Clamp	.Klammer	5
0370	31	75 41 907		167)	1	Screw	Skruv	5
0380	31	40 87 813		168)	1	.Screw	.Skruv	5
0390	31A	91 66 372		167)	1	Washer	Bricka	5
0400	31A	80 29 985		168)	1	.Washer	.Bricka	5
0410	32	79 75 501			1	.Nut	.Mutter	5
0420	34	83 75 172			1	Pin	Pinne	3
0430	35	80 29 944			1	Washer	Bricka	5
0440	36	83 35 002			1	Nut	Mutter	5
0450	38	41 18 659		1994	1	Cover	Kåpa	3
0460	38	44 77 873		1995-1996	1	Cover	Kåpa	3
0470	38	47 75 821		1997-	1	Cover	Kåpa	3


167. Ch. -R1025663
168. CH. R1025664-
235. Ch. -V1005002
236. CH. V1005003-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

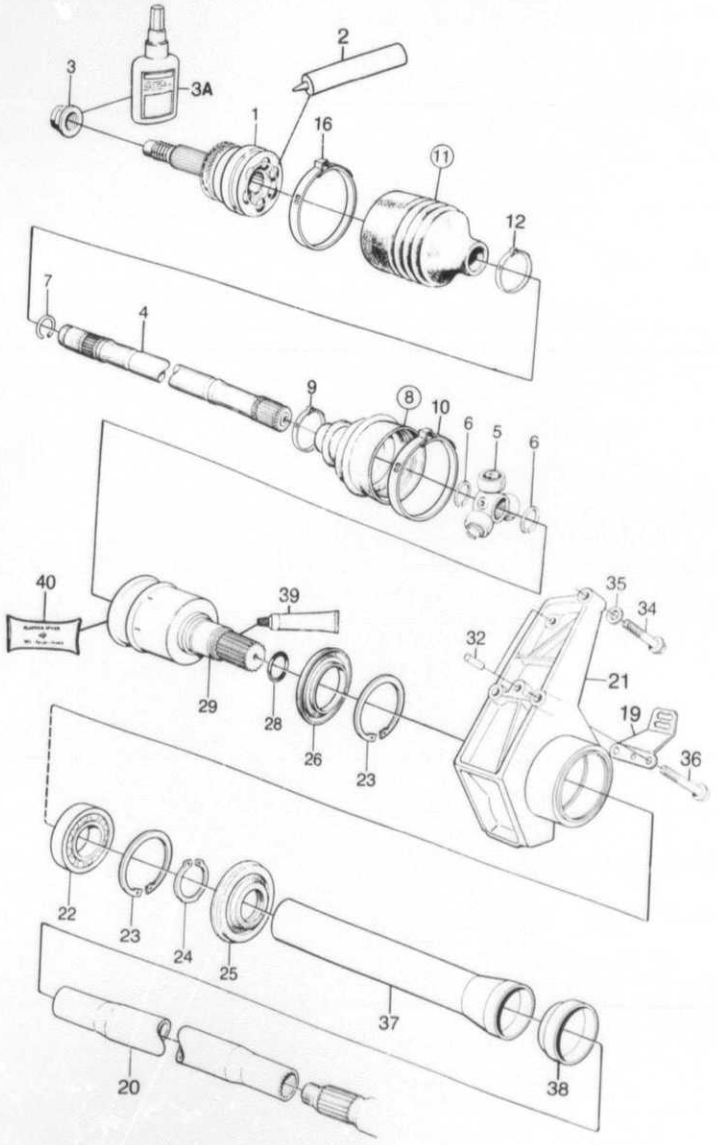

F8018 CAC94

3-H16

Drive shafts, outer universal joint

Drivaxlar, yttre knut

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 00 642		7), B204I	2	Universal joint	Drivknut	4
0020	1	40 00 642		7), B204S, B204E	2	Universal joint	Drivknut	4
0030	1	40 00 642		7), B234I	2	Universal joint	Drivknut	4
0040	1	40 00 642		7), B234E, M	2	Universal joint	Drivknut	4
0045	1	40 00 642		7), B308I	2	Universal joint	Drivknut	4
0050	1	41 03 263		7), B204L	2	Universal joint	Drivknut	4
0060	1	41 03 263		7), B234L	2	Universal joint	Drivknut	4
0070	1	41 03 263		7), B234R	2	Universal joint	Drivknut	4
0080	1	41 03 263		7), B234E, A	2	Universal joint	Drivknut	4
0085	2	87 81 676		300 GR	X	Grease	Fett	
0090	3	89 65 360			2	Lock nut	Låsmutter	3
0100	3A	74 96 276		50 ML	X	Nut lock	Gängsäkring	5
0110						strong	stark	
0120						green	grön	
0130	4	41 06 134		7), B204I	2	Drive shaft	Drivaxel	5
0140	4	41 06 134		7), B204S, B204E	2	Drive shaft	Drivaxel	5
0150	4	41 06 134		7), B234I	2	Drive shaft	Drivaxel	5
0160	4	41 06 134		7), B234E, M	2	Drive shaft	Drivaxel	5
0165	4	41 06 134		7), B308I	2	Drive shaft	Drivaxel	5
0170	4	41 05 235		7), B204L	2	Drive shaft	Drivaxel	5
0180	4	41 05 235		7), B234L	2	Drive shaft	Drivaxel	5
0190	4	41 05 235		7), B234R	2	Drive shaft	Drivaxel	5
0200	4	41 05 235		7), B234E, A	2	Drive shaft	Drivaxel	5
0210	5	89 50 628		7), B204I	2	Companion flange	Medbringare	3
0220	5	89 50 628		7), B204S, B204E	2	Companion flange	Medbringare	3
0230	5	89 50 628		7), B234I	2	Companion flange	Medbringare	3
0240	5	89 50 628		7), B234E, M	2	Companion flange	Medbringare	3
0245	5	89 50 628		7), B308I	2	Companion flange	Medbringare	3
0250	5	41 03 313		7), B204L	2	Companion flange	Medbringare	3
0260	5	41 03 313		7), B234L	2	Companion flange	Medbringare	3
0270	5	41 03 313		7), B234R	2	Companion flange	Medbringare	3
0280	5	41 03 313		7), B234E, A	2	Companion flange	Medbringare	3
0290	6	89 50 636			2	Lock ring	Låsring	5
0300	7	89 21 520			2	Lock ring	Låsring	5
0310	8	89 93 636		B204I, B204S, B204E,	2	Bellows kit	Bälgsats	3
0320				B234I, B234E, M; B308I				
0330				See page 4-073, 3-J02				
0340	8	89 93 701		B204L, B234L, B234R,	2	Bellows kit	Bälgsats	3
0350				B234E, A				
0360				See page 4-073, 3-J02				
0370	9	44 25 534	S		1	.Clamp	.Klämma	3
0380	10	89 72 986	S	B204I, B204S, B204E,	1	.Clamp	.Klämma	5
0390				B234I, B234E, M; B308I				
0400	10	41 03 214	S	B204L, B234L, B234R,	1	.Clamp	.Klämma	3
0410				B234E, A				
0420	11	89 93 628		B204I, B204S, B204E,	2	Bellows kit	Bälgsats	2
0430				B234I, B234E, M; B308I				
0440				See page 4-071, 3-I24				
0450	11	89 93 685		B204L, B234L, B234R,	2	Bellows kit	Bälgsats	2
0460				B234E, A	2			
0470				See page 4-071, 3-I24				
0480	12	44 25 534	S		1	.Clamp	.Klämma	3
0490	16	40 00 667	S	B204I, B204S, B204E,	1	.Clamp	.Klämma	5
0500				B234I, B234E, M; B308I				
0510	16	41 07 108	S	B204L, B234L, B234R,	1	.Clamp	.Klämma	3
0520				B234E, A				
0530	19	43 92 775			1	Connector holder	Kontakthållare	6
0540	20	87 27 000		M	1	Countershaft	Mellanaxel	5
0550	20	87 27 968		A	1	Countershaft	Mellanaxel	5
0560	21	43 87 536		M, 4-CYL	1	Bearing bracket	Lagerbock	5
0565	21	42 81 192		1995-, M, 6-CYL	1	Bearing bracket	Lagerbock	5
0570	21	43 87 528		A, 4-CYL	1	Bearing bracket	Lagerbock	5


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

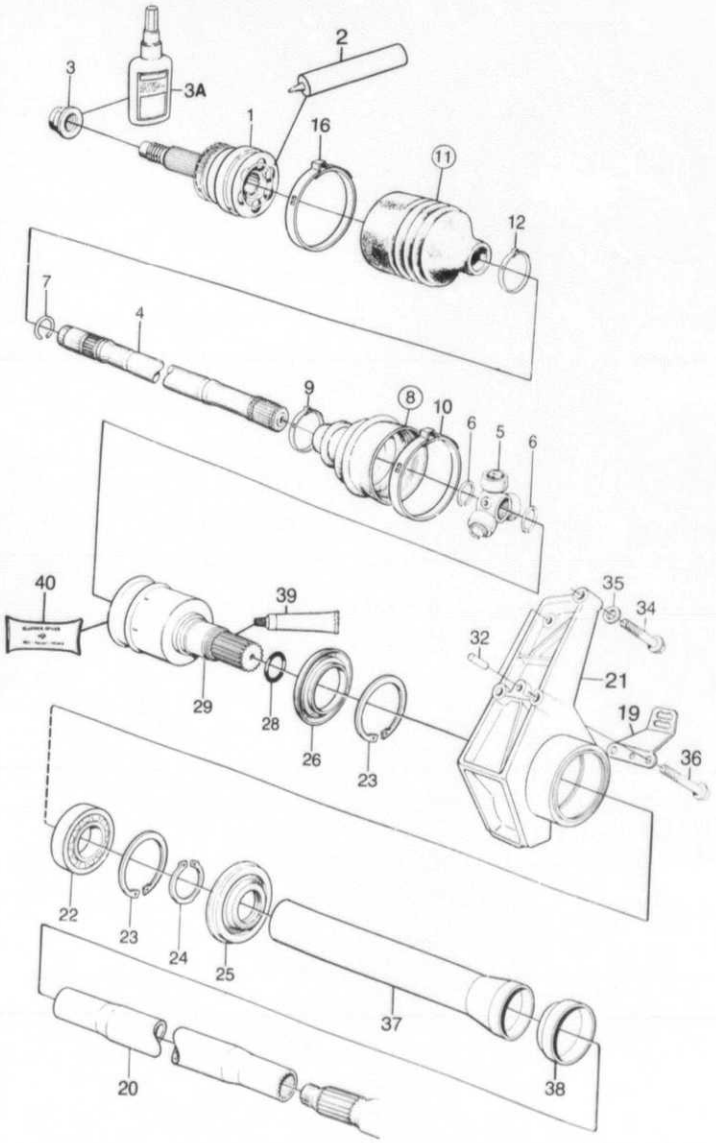

F8018 CAC94

3 -H18

Drive shafts, outer universal joint

Drivaxlar, yttre knut

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0575	21	42 81 184		1995-, A, 6-CYL	1	Bearing bracket	Lagerbock	5
0580	22	93 81 450			1	Ball bearing	Kullager	3
0590	23	79 73 738			2	Retaining ring	Spårring	5
0595	23	79 73 738		1995-, 6-CYL	1	Retaining ring	Spårring	5
0600	24	93 78 332			1	Retaining ring	Spårring	5
0610	25	41 20 523		4-CYL	1	Ring	Ring	5
0615	25	43 84 046		1995-, 6-CYL, M	1	Sealing ring	Tätningsring	2
0617	25	45 79 371		1995-, 6-CYL, A	1	Sealing ring	Tätningsring	2
0620	26	93 87 044			1	Sealing ring	Tätningsring	5
0630	28	*79 71 997*		NLS - USE 7970361	1	O-ring	O-ring	2
0640	29	87 23 108		RH, B204I, B204S, B204E, B234I, B234E, M; B308I	1	Companion flange	Medbringare	3
0650								
0660	29	41 03 230		RH, B204L, B234L, B234R, B234E, A	1	Companion flange	Medbringare	3
0670					1			
0680	32	79 74 074		4-CYL	2	Cotter pin	Fjäderpinne	5
0685	34	79 82 291		219), 4-CYL	1	Screw	Skruv	5
0690	34	79 85 906		220), 4-CYL	1	Screw	Skruv	5
0695	34	79 78 323		1995-, 6-CYL	1	Screw	Skruv	5
0700	35	79 82 317		4-CYL	1	Washer	Bricka	5
0705	36	79 82 309		219), 4-CYL	2	Screw	Skruv	5
0710	36	79 85 914		220), 4-CYL	2	Screw	Skruv	5
0715	36	79 82 580		1995-, 6-CYL	2	Screw	Skruv	5
0720	37	40 27 231			1	Tube	Rör	5
0730	38	40 27 249		4-CYL	1	Ring	Ring	5
0735	38	87 20 997		1995-, 6-CYL	1	Sealing ring	Tätningsring	2
0740	39	87 81 684		50 GR	X	Grease	Fett	
0750	40			16/3018629, 6X60 GR	1	Grease	Fett	

219. Ch. -T1019796
220. Ch. T1019797-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

Gear box assy
Automatic

Växellåda kpl
Automatisk

3 –H20

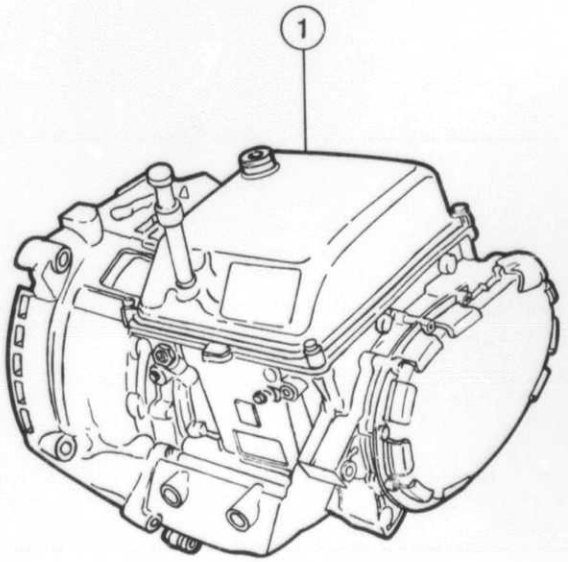

F6447 CAC94

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 80 624		7), -1995, B234I MARKED: FA 41003	1	Gearbox	Växellåda	5
0020								
0030	1	42 80 632		7), -1995,B234I,US,CA,LA MARKED: FA 43003	1	Gearbox	Växellåda	5
0040								
0050								
0060	1	42 80 665		7), 1995, B308I MARKED: FA 46302	1	Gearbox	Växellåda	5
0070								
0075	1	44 78 780		7), 1996-, B308I MARKED: FA 43302	1	Gearbox	Växellåda	5
0076								
0080								
0090	1	*43 84 475*		7), -1995, B204S MARKED: FA 43001 NLS - USE 4478327	1	Gearbox	Växellåda	5
0100								
0100								
0110	1	44 78 327		7,1995-,253), B204S, B204E, MARKED: FA 43005	1	Gearbox	Växellåda	5
0120								
0121	1	• 47 75 185		7,254), B204E MARKED: FA 43009	1	Gearbox	Växellåda	5
0122								
0123	1	44 78 814		7), 1996-, B204L MARKED: FA 43205	1	Gearbox	Växellåda	5
0126								
0130								
0140	1	42 80 640		7), -1995, B234L, B234E MARKED: FA 43201	1	Gearbox	Växellåda	5
0150								
0160	1	44 78 814		7,1995-,253), B234L, B234E, MARKED: FA 43205	1	Gearbox	Växellåda	5
[illegible]								
[illegible]	1	• 47 75 193		7,254), B234L, B234E MARKED: FA 43209	1	Gearbox	Växellåda	5
[illegible]								


7. Also available as exchange unit. Finns även som utbytesenhet.
199. Ch. S1004376-
253. Ch. -V1028701
254. Ch. V1028702-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

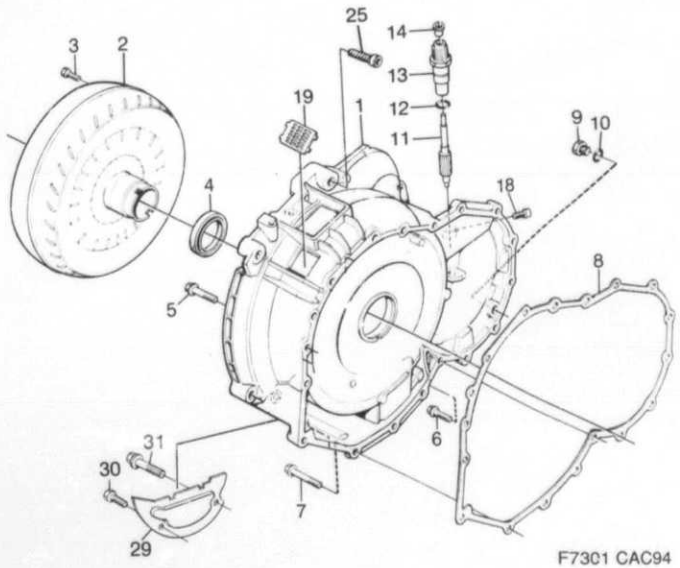

F7301 CAC94

Gear box, automatic

3 –H22 *Converter housing, converter*

Växellåda, automatisk

Momentomvandlarhus, momentomvandlare

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0020	1	42 80 715			1	.Converter shell	.Momentomvandlarhus	5
0030	2	43 85 795			1	.Torque converter	.Momentomvandlare	
0040	2	*44 77 238*		183), FA 46302 NLS – USE 4478806	1	.Torque converter	.Momentomvandlare	
0040								
0045	2	44 78 806		184), FA 46302	1	.Torque converter	.Momentomvandlare	
0050	3	44 77 097			3	.Screw	.Skruv	5
0060	4	42 80 582			1	.Shaft seal	.Axeltätning	5
0070	5	75 58 497			6	.Hexagon screw	.Sexkantsskruv	5
0080	6	30 83 974			1	.Screw	.Skruv	5
0090	7	75 72 159			11	.Hexagon screw	.Sexkantsskruv	5
0100	8	75 70 542		1994	1	.Gasket	.Packning	3
0110	8	*42 80 699*		1995-,188) NLS – USE 4477394	1	.Gasket	.Packning	3
0110								
0115	8	44 77 394		189)	1	.Gasket	.Packning	3
0120	9	75 58 505			1	.Plug	.Plugg	5
0130	10	75 72 175			1	.Sealing ring	.Tätningsring	3
0140	11	87 27 240			1	.Gear	.Kugghjul	5
0150	12	75 95 325	S		1	.O-ring	.O-ring	5
0160	13	87 27 828			1	.Sleeve	.Hylsa	5
0170	14	87 24 874	S		1	.Seal	.Tätning	4
0180	18	87 24 882			1	.Screw	.Skruv	5
0190	19	75 76 911			1	.Protecting casing	.Skyddskåpa	5
0200	25	79 84 297		4-CYL	5	Screw	Skruv	5
0210	25	79 82 606		1995-, 6-CYL	7	Hexagon screw	Sexkantsskruv	5
0220	29	41 64 497		4-CYL	1	Baffle	Stänkskydd	6
0230	29	41 64 489		1995-, 6-CYL	1	Baffle	Stänkskydd	6
0240	30	43 46 235			1	Hexagon screw	Sexkantsskruv	5
0250	31	79 84 297		4-CYL	1	Screw	Skruv	5
0260	31	40 87 193		1995-, 6-CYL	1	Hexagon screw	Sexkantsskruv	5
0270		74 96 094			X	Gasket kit	Packningsats	3
0280				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
0290		74 96 102			X	Gasket kit	Packningsats	3
0300				See page 4-075, 3-J04		Stage 3	Steg 3	
0310		87 81 668		178)	X	Oil	Olja	


178. See SI 472-1462 Se SI 472-1462
183. Gear box –211685
184. Gear box 211686–
188. Gear box –204807
189. Gear box 204808–
199. Ch. S1004376–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

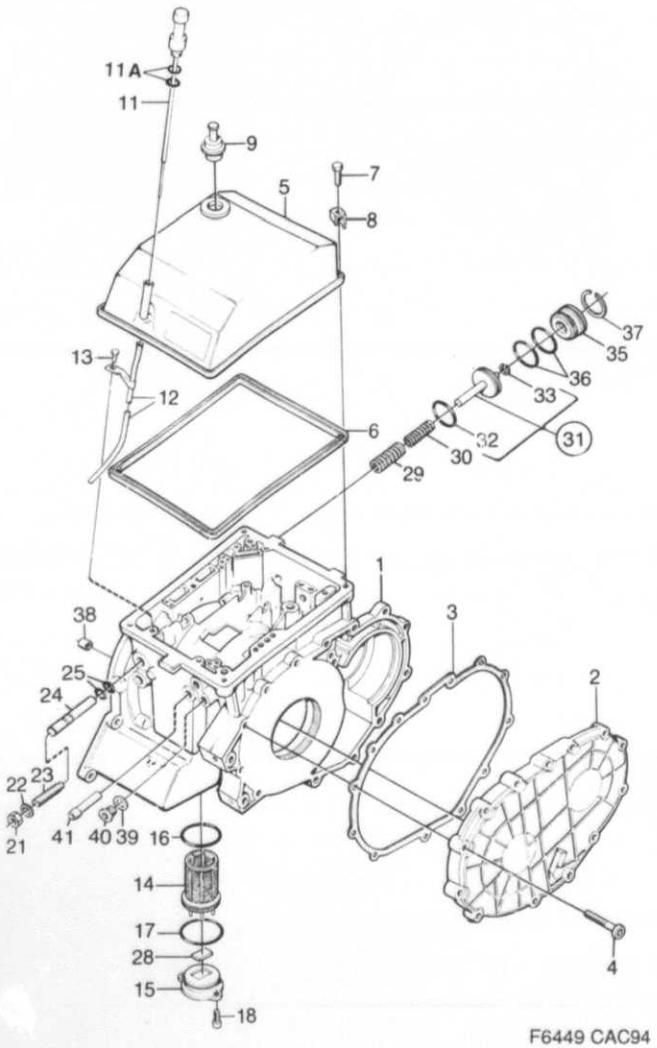

F6449 CAC94

Gear box, automatic

3-H24

Gear box case, cover

Växellåda, automatisk

Växellådshus, lock

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0035	1	42 80 038		TURBO	1	.Gearbox housing	.Växellådshus	6
0055	1	42 80 046		I	1	.Gearbox housing	.Växellådshus	6
0060	2	75 97 784			1	.Cover	.Lock	5
0075	3	*42 80 681*	S	188) NLS – USE 4477378	1	.Gasket	.Packning	3
0080	3	44 77 378	S	189)	1	.Gasket	.Packning	3
0085	4	44 77 311			13	.Screw	.Skruv	5
0090	5	41 19 525		1994	1	.Sump	.Oljesump	6
0095	5	47 75 086		1995-	1	.Sump	.Oljesump	6
0100	6	75 92 330	S		1	.Gasket	.Packning	2
0120	7	75 93 759			4	.Screw	.Skruv	5
0150	8	41 20 671			4	.Holder	.Hållare	5
0160	9	*75 97 222*		173) NLS – USE 4385720	1	.Air vent valve	.Avluftningsventil	5
0165	9	43 85 720		174)	1	.Air vent valve	.Avluftningsventil	5
0170	11	40 26 449			1	.Dipstick	.Mätsticka	5
0180	11A	75 94 880			1	..O-ring	..O-ring	3
0195	12	42 79 931			1	.Tube	.Rör	5
0200	13	75 57 887			1	.Screw	.Skruv	5
0210	14	75 99 525	S		1	.Filter	.Filter	3
0220	15	75 77 562			1	.Cover	.Lock	5
0230	16	75 94 187			1	.O-ring	.O-ring	3
0240	17	75 97 776			1	.O-ring	.O-ring	3
0260	18	40 26 902			3	.Screw	.Skruv	5
0270	21	40 26 753	S		1	.Nut	.Mutter	5
0280	22	79 33 872	S		1	.Washer	.Bricka	5
0290	23	75 54 934	S		1	.Adjustment screw	.Justerskruv	5
0300	24	41 19 061	S	4-CYL	1	.Bolt	.Bult	5
0310	24	43 85 282		6-CYL	1	.Bolt	.Bult	5
0320	25	75 94 179			2	.O-ring	.O-ring	3
0330	28	75 76 788			1	.Magnet	.Magnet	3
0340	29	75 58 232			1	.Compression spring	.Tryckfjäder	5
0350	30	75 58 240			1	.Compression spring	.Tryckfjäder	5
0360	31	75 76 937			1	.Piston	.Kolv	5
0370	32	75 52 250			1	..O-ring	..O-ring	5
0380	33	75 59 008			1	..Retaining ring	..Spårring	5
0390	35	75 54 967			1	.Cover	.Lock	
0400	36	75 56 996			2	.O-ring	.O-ring	5
0410	37	75 57 093			1	.Lock ring	.Låsring	5
0420	38	75 73 819			1	.Sleeve	.Hylsa	5
0430	39	75 58 356			2	.Sealing ring	.Tätningsring	3
0440	40	75 58 521			2	.Plug	.Plugg	5
0450	41	75 71 490			1	.Tube	.Rör	5
0460								
0470		75 75 525		80)	X	Repair kit	Reparationssats	4
0480				See page 4-073, 3-J02				
0490		74 96 094			X	Gasket kit	Packningsats	3
0500				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
0510		74 96 102			X	Gasket kit	Packningsats	3
0520				See page 4-075, 3-J04		Stage 3	Steg 3	
0530		[illegible]81 668		178)	X	Oil	Olja	

80. Filter insert Filterinsats
173. Gear box -184811
174. Gear box 184812-
178. See SI 472-1462 Se SI 472-1462
188. Gear box -204807
189. Gear box 204808-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-102

Gears, pinion
Part 1

Drev, pinjong
Del 1

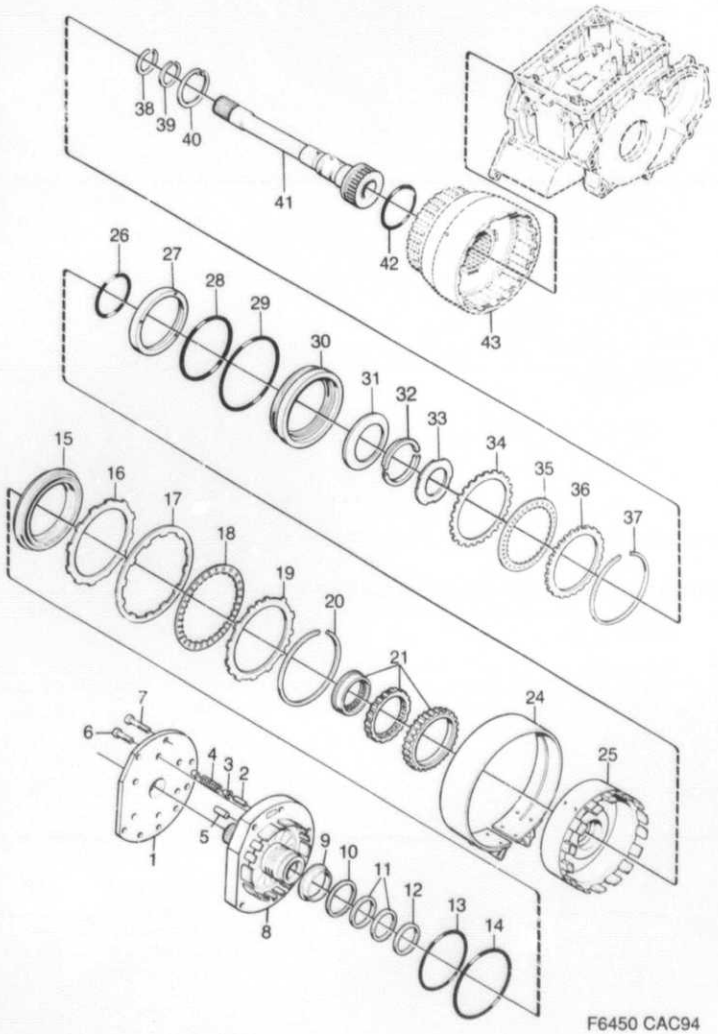

F6450 CAC94

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0020	1	*75 96 935*		214), 4-CYL NLS – USE 4122081	1	.Pump	.Pump	5
0020								
0022	1	41 22 081		215,217), 4-CYL	1	.Pump	.Pump	5
0023	1	44 77 162		218), 4-CYL	1	.Pump	.Pump	5
0025	1	44 77 162		6-CYL	1	.Pump	.Pump	5
0030	2	75 56 319			1	.Valve	.Ventil	
0045	3	42 80 418			1	.Spring guide	.Fjäderstyrning	5
0050	4	75 57 986			1	.Compression spring	.Tryckfjäder	5
0060	5	40 26 639			2	.Guide pin	.Styrstift	5
0070	6	75 57 747			6	.Screw	.Skruv	5
0080	7	75 57 754			3	.Screw	.Skruv	5
0100	8	42 80 061		188), 4-CYL	1	.Intermediate section	.Mellanstycke	5
0110	8	44 78 129		189), 4-CYL	1	.Intermediate section	.Mellanstycke	5
0115	8	44 77 493		6-CYL	1	.Intermediate section	.Mellanstycke	5
0120	9	75 52 896			1	.Angle washer	.Vinkelbricka	5
0150	10	40 25 979		1,00MM	X	.Washer	.Bricka	5
0180	10	40 25 961		1,20MM	X	.Washer	.Bricka	5
0210	10	40 25 953		1,40MM	X	.Washer	.Bricka	5
0240	10	40 25 946		1,60MM	X	.Washer	.Bricka	5
0270	10	40 25 938		1,80MM	X	.Washer	.Bricka	5
0300	10	40 25 920		2,00MM	X	.Washer	.Bricka	5
0330	10	40 25 912		2,20MM	X	.Washer	.Bricka	5
0360	10	40 25 904		2,40MM	X	.Washer	.Bricka	5
0390	10	40 25 896		2,60MM	X	.Washer	.Bricka	5
0420	10	40 25 888		2,80MM	X	.Washer	.Bricka	5
0450	10	40 25 870		3,00MM	X	.Washer	.Bricka	5
0480	10	40 25 862		3,20MM	X	.Washer	.Bricka	5
0510	10	40 25 854		3,40MM	X	.Washer	.Bricka	5
0540	10	40 25 847		3,60MM	X	.Washer	.Bricka	5
0550	11	75 76 077			2	.Piston ring	.Kolvring	5
0570	12	41 20 945			1	.Piston ring	.Kolvring	5
0580	13	75 74 833			1	.O-ring	.O-ring	5
0590	14	75 52 151			1	.O-ring	.O-ring	5
0600	15	75 74 841			1	.Piston	.Kolv	5
0610	16	75 53 084			3	.Clutch disc	.Lamell	5
0620	17	75 52 961			1	.Spring disc	.Fjädertallrik	5
0640	18	41 22 016			3	.Clutch disc	.Lamell	5
0650	19	75 92 249			1	.Clutch disc	.Lamell	5
0660	20	75 72 639		0,90MM	X	.Lock ring	.Låsring	5
0670	20	75 72 621		1,10MM	X	.Lock ring	.Låsring	5
0680	20	75 72 613		1,30MM	X	.Lock ring	.Låsring	5
0690	20	75 58 786		1,50MM	X	.Lock ring	.Låsring	5
0700	20	75 72 605		1,70MM	X	.Lock ring	.Låsring	5
0710	20	75 74 890		1,90MM	X	.Lock ring	.Låsring	5
0720	20	75 95 895		2,10MM	X	.Lock ring	.Låsring	5
0730	20	75 95 903		2,30MM	X	.Lock ring	.Låsring	5
0740	20	75 95 887		2,50MM	X	.Lock ring	.Låsring	5
0780	21	40 26 209		4-CYL	1	.Free wheel	.Frihjul	5
0785	21	43 84 962		6-CYL	1	.Free wheel	.Frihjul	5
0790	24	40 26 860		4-CYL	1	.Brake lining	.Bromsband	5
0800	24	43 85 266		6-CYL	1	.Brake lining	.Bromsband	5
0830	25	42 80 426		190), 4-CYL	1	.Cylinder	.Cylinder	5
0840	25	44 91 734		191), 4-CYL	1	.Cylinder	.Cylinder	5
0845	25	44 77 550		6-CYL	1	.Cylinder	.Cylinder	5
0850	26	75 94 161			1	.O-ring	.O-ring	5

188. Gear box -204807
189. Gear box 204808-
190. Gear box -210771
191. Gear box 210772-
215. Gear box 106671-
217. Gear box -229549
218. Gear box 229550-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3 -I04

Gears, pinion
Part 1

Drev, pinjong
Del 1

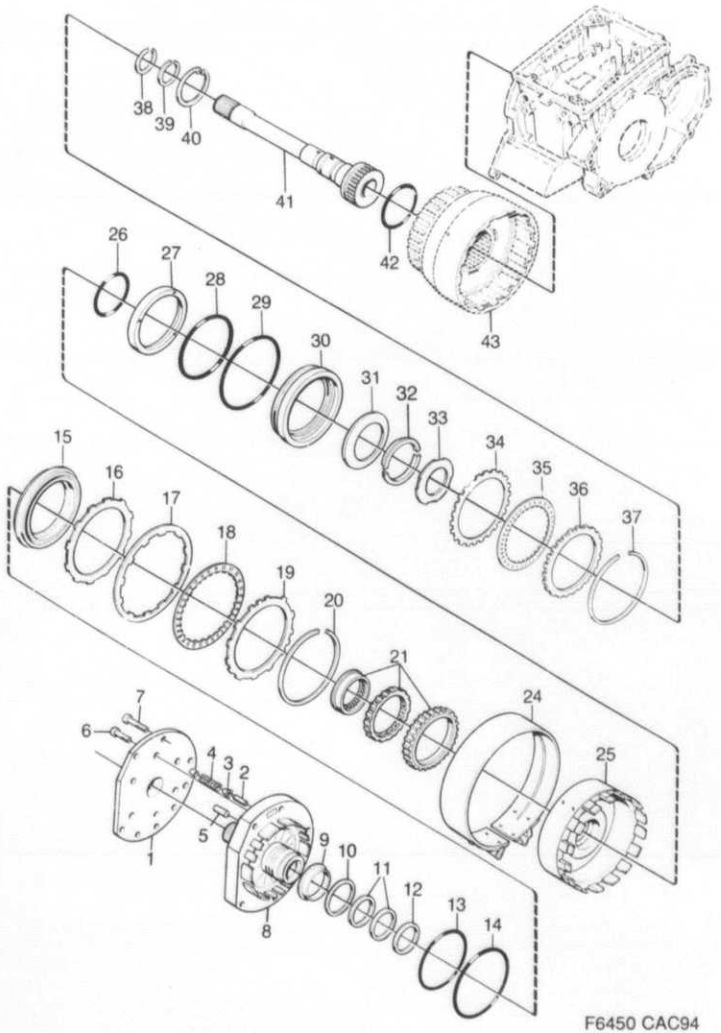

F6450 CAC94

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0860	27	75 70 351			1	.Spacer	.Mellanlägg	5
0870	28	75 52 268			1	.O-ring	.O-ring	5
0880	29	75 52 151			1	.O-ring	.O-ring	5
0890	30	75 73 280		I, 4-CYL	1	.Piston	.Kolv	5
0900	30	75 54 868		I, 6-CYL	1	.Piston	.Kolv	5
0905	30	75 54 868		TURBO	1	.Piston	.Kolv	5
0910	31	75 52 912			1	.Spring disc	.Fjädertallrik	5
0920	32	75 54 900		4-CYL	1	.Stop ring	.Stoppring	5
0925	32	43 84 988		6-CYL	1	.Stop ring	.Stoppring	5
0930	33	75 52 904		4-CYL	1	.Thrust washer	.Tryckbricka	5
0935	33	43 84 996		6-CYL	1	.Thrust washer	.Tryckbricka	5
0940	34	75 53 068		I	2	.Clutch disc	.Lamell	5
0950	34	75 53 068		TURBO	3	.Clutch disc	.Lamell	5
0955	35	75 72 704		221), I, 4-CYL	2	.Clutch disc	.Lamell	5
0960	35	42 81 622		222), I, 4-CYL	2	.Clutch disc	.Lamell	5
0965	35	42 81 622		I, 6-CYL	2	.Clutch disc	.Lamell	5
0970	35	75 72 704		221), TURBO	3	.Clutch disc	.Lamell	5
0975	35	42 81 622		222), TURBO	3	.Clutch disc	.Lamell	5
0980	36	75 53 092			1	.Clutch disc	.Lamell	5
0990	37	75 53 217			1	.Lock ring	.Låsring	5
1000	38	75 75 632			1	.Piston ring	.Kolvring	5
1015	39	42 80 111			1	.Piston ring	.Kolvring	5
1020	40	75 59 024			1	.Stop ring	.Stoppring	5
1035	41	42 80 053			1	.Turbine shaft	.Turbinaxel	5
1040	42	75 94 153			1	.O-ring	.O-ring	5
1050	43			See page 4-053, 3-I06		.Piston	.Kolv	
1060		74 96 052			X	Disc kit	Lamellsats	2
1070				See page 4-075, 3-J04		Clutch "B"	Koppling "B"	
1080		74 96 060			X	Disc kit	Lamellsats	2
1090				See page 4-075, 3-J04		Clutch "C"	Koppling "C"	
1100		74 96 094			X	Gasket kit	Packningsats	3
1110				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
1120		74 96 102			X	Gasket kit	Packningsats	3
1130				See page 4-075, 3-J04		Stage 3	Steg 3	


221. Gear box -137495
222. Gear box 137496-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

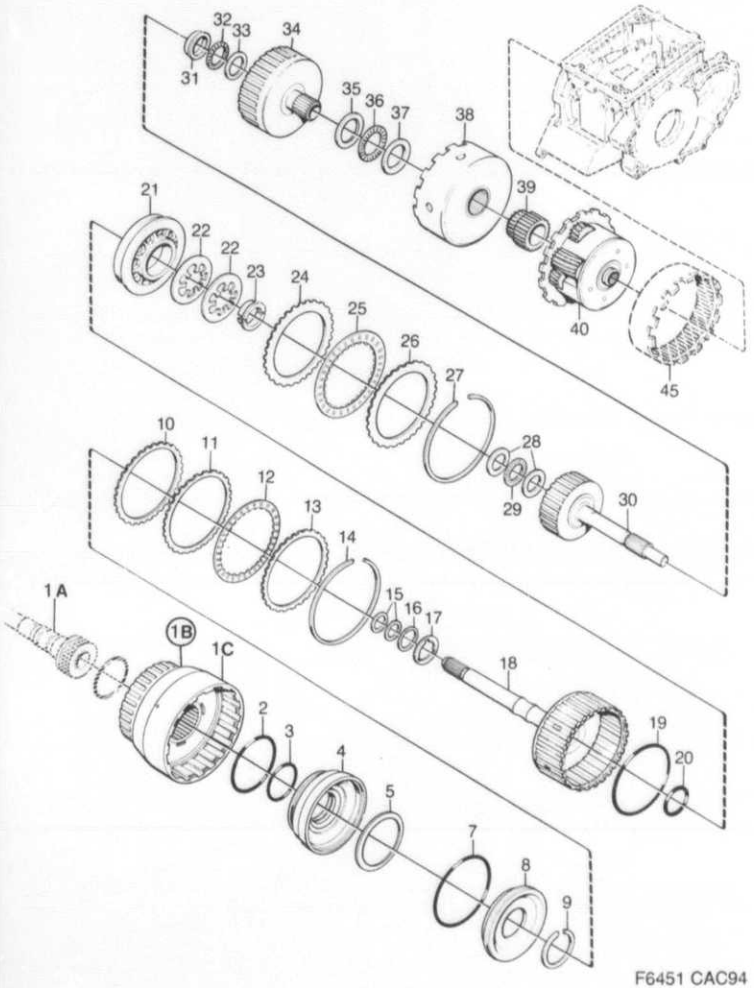

F6451 CAC94

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0020	1A			See page 4-049, 3-I02		.Cylinder	.Cylinder	
0040	1B	41 19 137		FA 41003, 43003	1	.Cylinder	.Cylinder	5
0045	1B	41 20 861		FA 43001, 43201, 43202	1	.Cylinder	.Cylinder	5
0047	1B	43 84 517		FA 46302	1	.Cylinder	.Cylinder	5
0050	1C	75 77 075			1	..Cylinder	..Cylinder	5
0060	1C	43 84 525		FA 46302	1	..Cylinder	..Cylinder	5
0075	2	42 80 558			1	..O-ring	..O-ring	5
0080	3	75 52 243			1	..O-ring	..O-ring	5
0095	4	41 19 160		FA 43001, 43201, 43202, 46302	1	..Piston	..Kolv	5
0097					1			
0100	4	41 19 152		FA 41003, 43003	1	..Piston	..Kolv	5
0120	5	75 96 901		1994	1	..Spring disc	..Fjädertallrik	5
0130	5	44 91 999		1995-,188)	1	..Spring disc	..Fjädertallrik	5
0135	5	42 81 655		189)	1	..Spring disc	..Fjädertallrik	5
0140	7	75 52 193			1	..O-ring	..O-ring	5
0160	8	75 56 053			1	..Oil dam	..Balanskolv	5
0170	9	75 57 440			1	..Lock ring	..Låsring	5
0180	10	75 53 050			1	..Clutch disc	..Lamell	5
0190	11	75 53 068			5	..Clutch disc	..Lamell	5
0200	12	75 52 292			5	..Clutch disc	..Lamell	5
0210	13	75 53 092			1	..Clutch disc	..Lamell	5
0220	14	75 53 183		1,00MM	X	..Lock ring	..Låsring	5
0230	14	75 53 191		1,20MM	X	..Lock ring	..Låsring	5
0240	14	75 53 209		1,40MM	X	..Lock ring	..Låsring	5
0250	14	75 53 217		1,60MM	X	..Lock ring	..Låsring	5
0260	14	75 53 225		1,80MM	X	..Lock ring	..Låsring	5
0270	14	75 53 233		2,00MM	X	..Lock ring	..Låsring	5
0280	14	75 53 241		2,20MM	X	..Lock ring	..Låsring	5
0290	14	75 53 258		2,40MM	X	..Lock ring	..Låsring	5
0300	14	75 53 266		2,60MM	X	..Lock ring	..Låsring	5
0310	14	75 53 274		2,80MM	X	..Lock ring	..Låsring	5
0320	15	75 57 457			2	.Piston ring	.Kolvring	5
0335	16	42 80 095			1	.Piston ring	.Kolvring	5
0357	17	42 80 103			1	.Thrust washer	.Tryckbricka	5
0380	18	42 80 020			1	.Motor shaft	.Motoraxel	5
0390	19	75 52 235			1	.O-ring	.O-ring	5
0400	20	75 52 201			1	.O-ring	.O-ring	5
0440	21	42 79 923		FA 43201, 43202, 46302	1	.Piston	.Kolv	5
0443	21	41 21 877		FA 43001	1	.Piston	.Kolv	5
0446	21	42 80 335		FA 41003, 43003	1	.Piston	.Kolv	5
0450	22	75 53 605		1994	2	.Spring disc	.Fjädertallrik	5
0460	22	*42 80 780*		1995-,188) NLS – USE 4280772	2	.Spring disc	.Fjädertallrik	5
0465	22	42 80 772		189)	2	.Spring disc	.Fjädertallrik	5
0470	23	41 22 990			1	.Stop ring	.Stoppring	5
0485	24	41 22 396		I, 4-CYL	4	.Clutch disc	.Lamell	5
0490	24	41 22 396		I, 6-CYL	6	.Clutch disc	.Lamell	5
0495	24	41 22 396		TURBO	5	.Clutch disc	.Lamell	5
0500	25	75 97 933		I, 4-CYL	4	.Clutch disc	.Lamell	5
0505	25	75 97 933		I, 6-CYL	6	.Clutch disc	.Lamell	5
0510	25	75 97 933		TURBO	5	.Clutch disc	.Lamell	5
0525	26	41 22 412		I, 4-CYL	1	.Clutch disc	.Lamell	5
0530	26	42 80 244		I, 6-CYL	1	.Clutch disc	.Lamell	5
0535	26	42 80 244		TURBO	1	.Clutch disc	.Lamell	5
0540	27	75 57 085			1	.Lock ring	.Låsring	5
0545	27	44 77 576		6-CYL	1	.Lock ring	.Låsring	5
0550	28	75 52 862			2	.Thrust washer	.Axialbricka	5
0560	29	75 52 870			1	.Angle washer	.Vinkelbricka	5


188. Gear box -204807
189. Gear box 204808-
199. Ch. S1004376-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

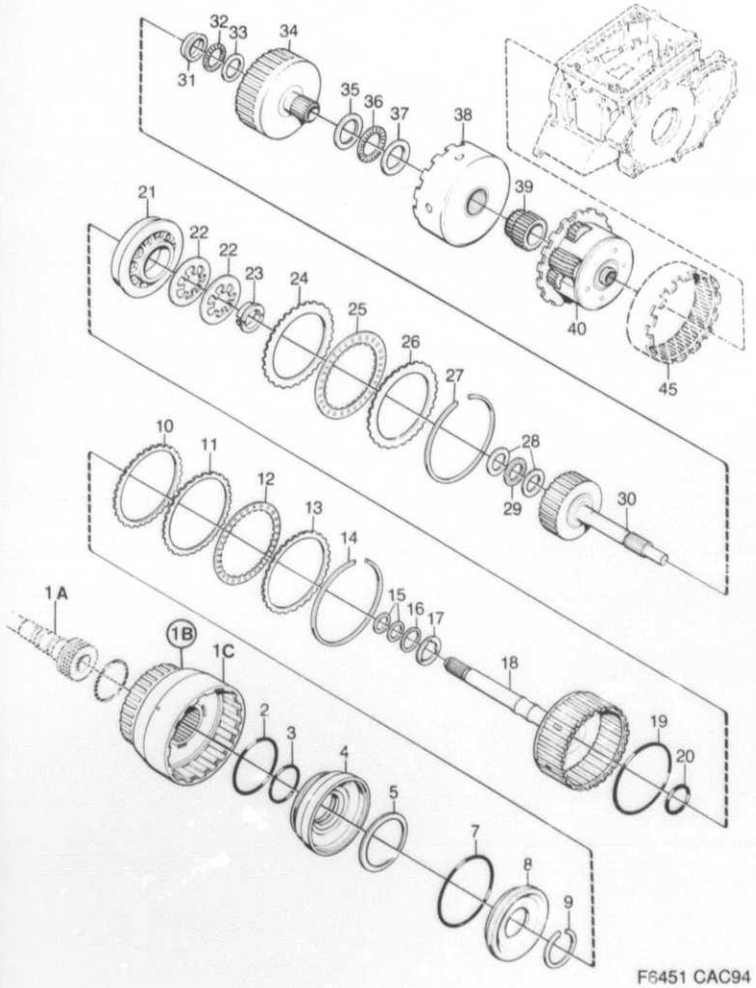

F6451 CAC94

Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
30	*75 54 801*		160)FA 41003,43003,43001 NLS – USE 4491833	1	.Countershaft	.Mellanaxel	5
30	44 91 833		161)FA 41003,43003,43001	1	.Countershaft	.Mellanaxel	5
30	42 81 861		196), FA 43201, 43202	1	.Countershaft	.Mellanaxel	5
30	44 78 376		197), FA 43201	1	.Countershaft	.Mellanaxel	5
30	44 91 940		194), FA 46302	1	.Countershaft	.Mellanaxel	5
30	44 78 376		195), FA 46302	1	.Countershaft	.Mellanaxel	5
31	75 52 839			1	.Angle washer	.Vinkelbricka	5
31	*75 95 754*		FA 46302 NLS	1	.Angle washer	.Vinkelbricka	5
32	75 52 847			1	.Angle washer	.Vinkelbricka	5
32	*75 95 804*		FA 46302 NLS	1	.Angle washer	.Vinkelbricka	5
33	75 52 854		163)	1	.Thrust washer	.Axialbricka	5
33	75 95 812		164)	1	.Thrust washer	.Axialbricka	5
34	75 56 079		FA 41003, 43003, 43001	1	.Sun gear	.Solhjul	5
34	43 84 533		FA 46302	1	.Sun gear	.Solhjul	5
34	75 95 739		FA 43201, 43202	1	.Sun gear	.Solhjul	5
35	75 52 805			1	.Angle washer	.Vinkelbricka	5
36	75 52 813		1994	1	.Angle washer	.Vinkelbricka	5
36	*44 77 485*		1995-,188) NLS – USE 4477337	1	.Angle washer	.Vinkelbricka	5
36	44 77 337		189)	1	.Angle washer	.Vinkelbricka	5
37	75 52 821			1	.Thrust washer	.Axialbricka	5
37	44 77 360		FA 46302	1	.Thrust washer	.Axialbricka	5
38	75 95 937			1	.Cylinder	.Cylinder	5
38	43 85 225		FA 46302	1	.Cylinder	.Cylinder	5
39	42 79 808			1	.Sun gear	.Solhjul	5
39	43 85 431		FA 46302	1	.Sun gear	.Solhjul	5
40	40 26 423			1	.Planetary gear housing	.Planetväxelhus	5
40	42 81 887		FA 46302	1	.Planetary gear housing	.Planetväxelhus	5
45			See page 4-057, 3-I10		.Ring gear	.Ringdrev	
	74 96 045			X	Disc kit	Lamellsats	2
			See page 4-075, 3-J04		Clutch "A"	Koppling "A"	
	74 96 086			X	Disc kit	Lamellsats	2
			See page 4-075, 3-J04		Clutch "E"	Koppling "E"	
	74 96 094			X	Gasket kit	Packningsats	3
			See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
	74 96 102			X	Gasket kit	Packningsats	3
			See page 4-075, 3-J04		Stage 3	Steg 3	


160. Gear box -198313
161. Gear box 198314-
163. Gear box -161252
164. Gear box 161253-
188. Gear box -204807
189. Gear box 204808-
194. Gear box -209149
195. Gear box 209150-
196. Gear box -222706
197. Gear box 222707-
199. Ch. S1004376-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

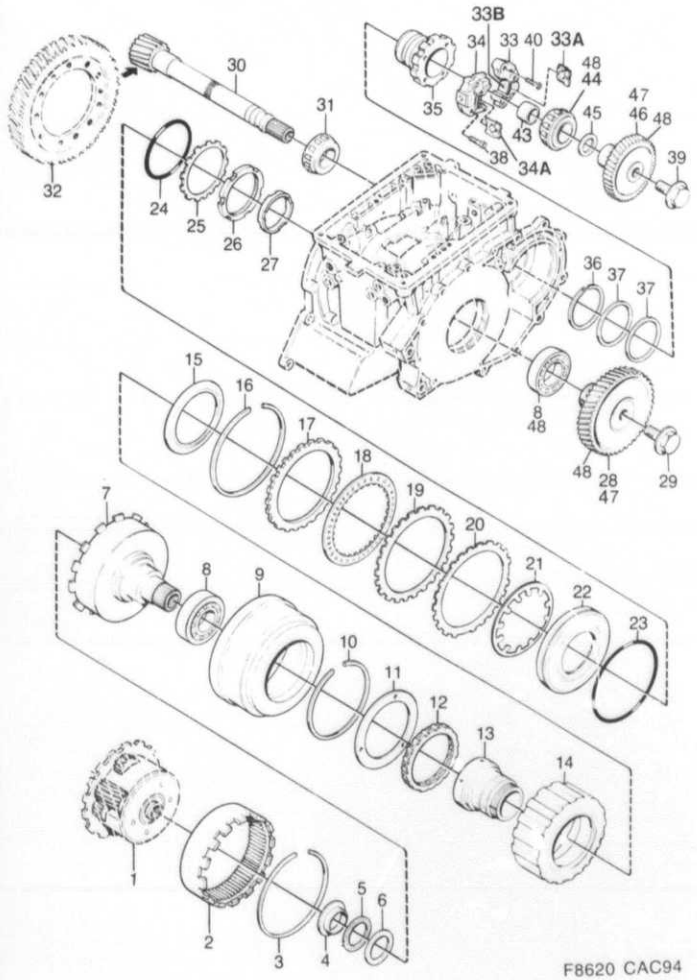

Gear box, automatic

3-I10 Gears, pinion Part 3

Växellåda, automatisk

Drev, pinjong Del 3

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0020	1			See page 4-053, 3-I06		.Planetary gear	.Planetväxel	
0030	2	75 97 214			1	.Ring gear	.Ringdrev	5
0035	2	43 85 522		FA 46302	1	.Ring gear	.Ringdrev	5
0040	3	75 57 101			1	.Lock ring	.Låsring	5
0050	4	75 52 797			1	.Angle washer	.Vinkelbricka	5
0060	5	75 71 938			1	.Needle bearing	.Axialnållager	5
0065	5	43 84 657		FA 46302	1	.Needle bearing	.Axialnållager	5
0070	6	75 52 771			1	.Thrust washer	.Axialbricka	5
0150	7	41 22 305			1	.Shaft	.Axel	5
0155	7	44 91 908		FA 46302	1	.Shaft	.Axel	5
0160	8	75 58 455		181)	2	.Roller bearing	.Rullager	5
0165	8	43 84 681		182)	2	.Roller bearing	.Rullager	5
0170	8	43 84 681		FA 46302	2	.Roller bearing	.Rullager	5
0175	8	44 91 981		!!!!!	2	.Bearing roller	.Lagerrulle	3
0180	9	41 22 586			1	.Cylinder	.Cylinder	5
0190	9	43 84 780		FA 46302	1	.Cylinder	.Cylinder	5
0200	10	41 20 937			1	.Lock ring	.Låsring	5
0210	11	75 70 666			1	.Stop ring	.Stoppring	5
0220	12	40 25 342			1	.Free wheel	.Frihjul	5
0260	13	*41 22 420*		158) NLS – USE 4384806	1	.Free wheel hub	.Frihjulsnav	5
0270	13	43 85 738		159,181)	1	.Free wheel hub	.Frihjulsnav	5
0275	13	43 84 806		182)	1	.Free wheel hub	.Frihjulsnav	5
0280	13	43 84 806		FA 46302	1	.Free wheel hub	.Frihjulsnav	5
0300	14	41 22 677			1	.Free wheel hub	.Frihjulsnav	5
0310	14	43 84 715		FA 46302	1	.Free wheel hub	.Frihjulsnav	5
0340	15	75 78 925			1	.Washer	.Bricka	5
0350	16	75 53 225		1,80MM	X	.Lock ring	.Låsring	5
0360	16	75 53 233		2,00MM	X	.Lock ring	.Låsring	5
0370	16	75 53 241		2,20MM	X	.Lock ring	.Låsring	5
0380	16	75 53 266		2,60MM	X	.Lock ring	.Låsring	5
0390	16	75 77 273		3,00MM	X	.Lock ring	.Låsring	5
0400	16	75 77 265		3,50MM	X	.Lock ring	.Låsring	5
0410	16	75 77 257		4,00MM	X	.Lock ring	.Låsring	5
0420	17	75 53 092			1	.Clutch disc	.Lamell	5
0430	18	75 52 326			6	.Clutch disc	.Lamell	5
0440	19	75 53 068			6	.Clutch disc	.Lamell	5
0450	20	75 53 050			1	.Clutch disc	.Lamell	5
0460	21	75 77 182			1	.Lock spring	.Låsfjäder	5
0490	22	42 80 590			1	.Piston	.Kolv	5
0530	23	75 52 151			1	.O-ring	.O-ring	5
0535	23	42 80 533		FA 46302	1	.O-ring	.O-ring	5
0540	24	75 97 354			1	.O-ring	.O-ring	5
0550	25	75 71 961			1	.Lock washer	.Låsbricka	5
0560	26	75 71 979			1	.Castle nut	.Kronmutter	5
0570	27	75 78 388		5,87MM	X	.Shim	.Shim	5
0580	27	75 78 396		5,90MM	X	.Shim	.Shim	5
0590	27	75 78 412		5,93MM	X	.Shim	.Shim	5
0600	27	75 78 420		5,96MM	X	.Shim	.Shim	5
0610	27	75 78 438		5,99MM	X	.Shim	.Shim	5
0620	27	75 78 446		6,02MM	X	.Shim	.Shim	5
0630	27	75 78 453		6,05MM	X	.Shim	.Shim	5
0640	27	75 78 461		6,08MM	X	.Shim	.Shim	5
0650	27	75 78 479		6,11MM	X	.Shim	.Shim	5
0660	27	75 78 487		6,14MM	X	.Shim	.Shim	5
0670	27	75 78 495		6,17MM	X	.Shim	.Shim	5
0680	27	75 78 503		6,20MM	X	.Shim	.Shim	5
0690	27	75 78 511		6,23MM	X	.Shim	.Shim	5
0700	27	75 78 529		6,26MM	X	.Shim	.Shim	5


158. Gear box –164720
159. Gear box 164721–
181. Gear box –192082
182. Gear box 192083–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

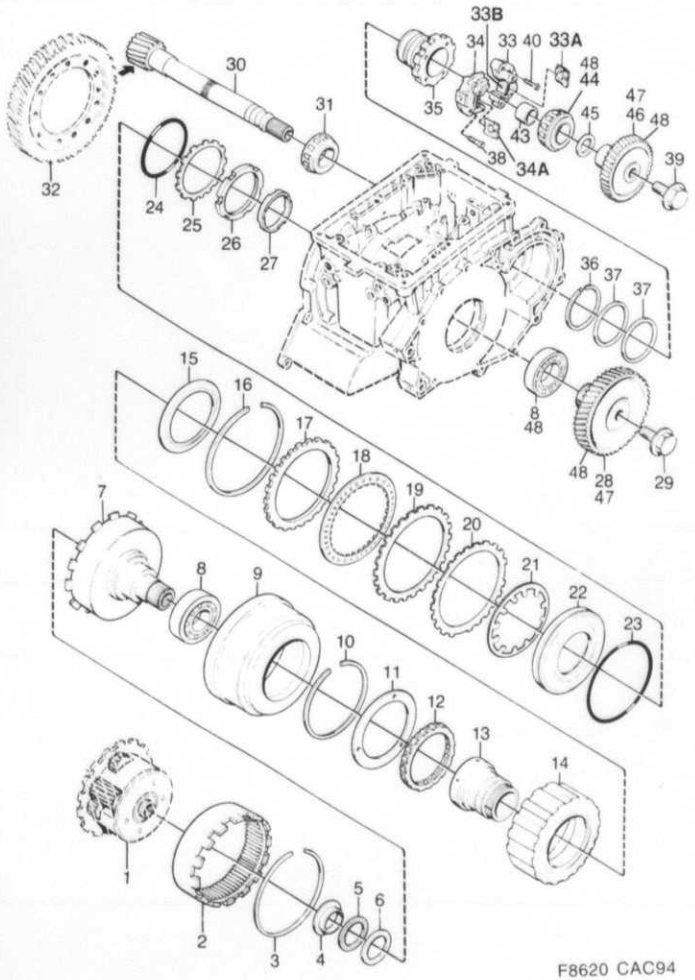

Gear box, automatic

3-I12

Gears, pinion
Part 3

Växellåda, automatisk

Drev, pinjong
Del 3

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0710	27	75 78 537		6,29MM	X	.Shim	.Shim	5
0720	27	75 78 545		6,32MM	X	.Shim	.Shim	5
0730	27	75 78 552		6,35MM	X	.Shim	.Shim	5
0740	27	75 78 560		6,38MM	X	.Shim	.Shim	5
0750	27	75 78 578		6,41MM	X	.Shim	.Shim	5
0760	27	75 78 586		6,44MM	X	.Shim	.Shim	5
0770	27	75 78 594		6,47MM	X	.Shim	.Shim	5
0780	27	75 78 602		6,50MM	X	.Shim	.Shim	5
0790	27	75 78 610		6,53MM	X	.Shim	.Shim	5
0800	27	75 78 628		6,56MM	X	.Shim	.Shim	5
0810	27	75 78 636		6,59MM	X	.Shim	.Shim	5
0820	28	75 79 444		FA 41003, 46302	1	.Gear	.Kugghjul	5
0840	28	*75 79 063*		1),FA 43003,43001,43201, 43202 NLS	1	.Gear	.Kugghjul	5
0850								
0880	29	75 97 347			1	.Screw	.Skruv	5
0910	30	41 22 495		FA 41003, 43003, 43001	1	.Pinion shaft	.Pinjongaxel	5
0960	30	42 81 846		FA 43201, 43202	1	.Pinion shaft	.Pinjongaxel	5
0970	30	43 84 582		FA 46302	1	.Pinion shaft	.Pinjongaxel	5
0990	31	75 58 430			1	.Roller bearing	.Rullager	3
1000	32			See page 4-035, 3-H12		.Crown wheel	.Kronhjul	
1010	33	40 26 761	S	FA 41003, 46302	1	.Valve housing	.Ventilhus	5
1030	33	75 99 731	S	FA 43003, 43001, 43201, 43202	1	.Valve housing	.Ventilhus	5
1040								
1070	33A	75 53 001			1	..Fixing plate	..Fixerplatta	5
1080	33B	75 79 188			1	..Fixing plate	..Fixerplatta	5
1090	34	75 97 388	S	FA 41003, 46302	1	.Valve housing	.Ventilhus	5
1110	34	75 97 412	S	FA 43003, 43001, 43201, 43202	1	.Valve housing	.Ventilhus	5
1120								
1150	34A	75 75 038			1	..Fixing plate	..Fixerplatta	5
1170	35	41 22 719		251)	1	.Regulator	.Regulator	5
1175	35	• 44 78 947		252)	1	.Regulator	.Regulator	5
1180	36	75 92 272			1	.Piston ring	.Kolvring	5
1190	37	75 57 465	S		2	.Seal	.Tätning	5
1200	38	75 57 804	S		2	.Screw	.Skruv	5
1210	39	75 97 347		FA 41003, 43003, 43001	1	.Screw	.Skruv	5
1250	39	41 19 442		FA 43201, 43202, 46302	1	.Screw	.Skruv	5
1280	40	75 92 645			3	.Screw	.Skruv	5
1290	43	75 74 221			1	.Spacer sleeve	.Distanshylsa	5
1300	44	87 81 999			1	.Bearing roller	.Lagerrulle	3
1310	45	75 78 032		1,00MM	X	.Adjusting washer	.Justerbricka	5
1320	45	75 78 040		1,05MM	X	.Adjusting washer	.Justerbricka	5
1330	45	75 78 057		1,10MM	X	.Adjusting washer	.Justerbricka	5
1340	45	75 78 065		1,15MM	X	.Adjusting washer	.Justerbricka	5
1350	45	75 78 073		1,20MM	X	.Adjusting washer	.Justerbricka	5
1360	45	75 78 081		1,25MM	X	.Adjusting washer	.Justerbricka	5
1370	45	75 78 099		1,30MM	X	.Adjusting washer	.Justerbricka	5
1380	45	75 78 107		1,35MM	X	.Adjusting washer	.Justerbricka	5
1390	45	75 78 115		1,40MM	X	.Adjusting washer	.Justerbricka	5
1400	45	75 78 123		1,45MM	X	.Adjusting washer	.Justerbricka	5
1410	45	75 78 131		1,50MM	X	.Adjusting washer	.Justerbricka	5
1420	45	75 78 149		1,55MM	X	.Adjusting washer	.Justerbricka	5
1430	45	75 78 156		1,60MM	X	.Adjusting washer	.Justerbricka	5
1440	45	75 78 164		1,65MM	X	.Adjusting washer	.Justerbricka	5
1450	45	75 78 172		1,70MM	X	.Adjusting washer	.Justerbricka	5
1460	45	75 78 180		1,75MM	X	.Adjusting washer	.Justerbricka	5
1470	45	75 78 198		1,80MM	X	.Adjusting washer	.Justerbricka	5
1480	45	75 78 206		1,85MM	X	.Adjusting washer	.Justerbricka	5
1490	45	75 78 214		1,90MM	X	.Adjusting washer	.Justerbricka	5
1500	45	40 25 094		1,95MM	X	.Adjusting washer	.Justerbricka	5
1510	46	75 79 451		FA 41003, 46302	1	.Gear	.Kugghjul	5


1. Not as separate spare part. Ej som separat reservdel.
251. Gear box -230693
252. ➔ Gear box 230694-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

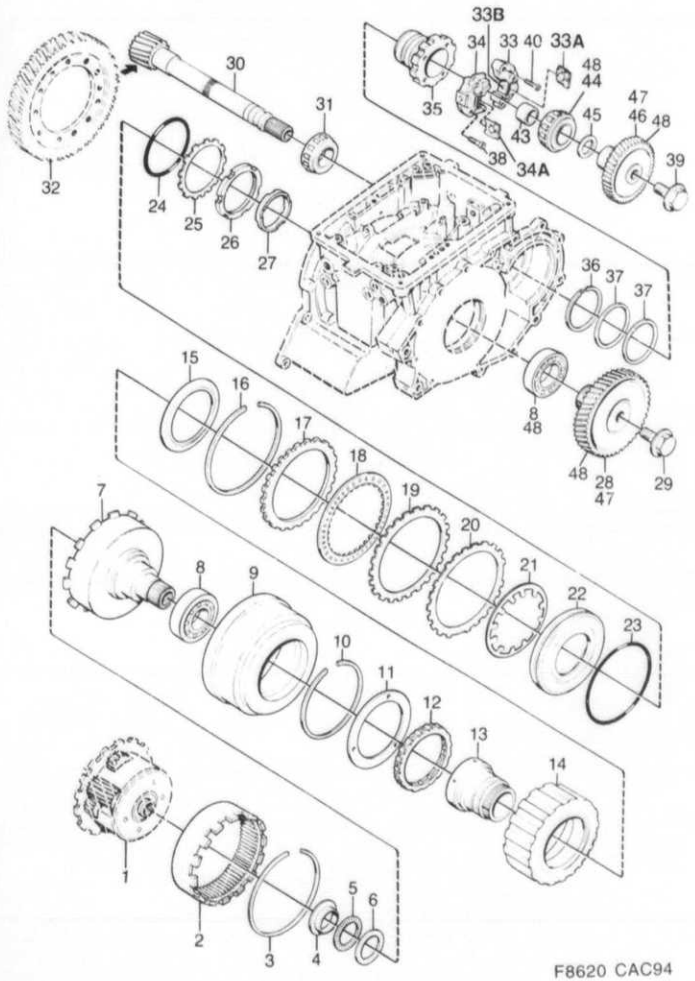

F8620 CAC94

0670	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1530	46	*75 79 071*		1),FA 43003,43001,43201, 43202 NLS	1	.Gear	.Kugghjul	5
1540								
1545	47	44 78 855		FA 43003, 43001, 43201, 43202	1	.Gear	.Kugghjul	5
1550								
1555				See page 4-079, 3-J08				
1560	48	44 78 970		See page 4-079, 3-J08	1	.Gear	.Kugghjul	5
1570		74 96 078			X	Disc kit	Lamellsats	2
1580				See page 4-075, 3-J04		Clutch "D"	Koppling "D"	
1590		74 96 094			X	Gasket kit	Packningsats	3
1600				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
1610		74 96 102			X	Gasket kit	Packningsats	3
1620				See page 4-075, 3-J04		Stage 3	Steg 3	

1. Not as separate spare part. Ej som separat reservdel.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-I16

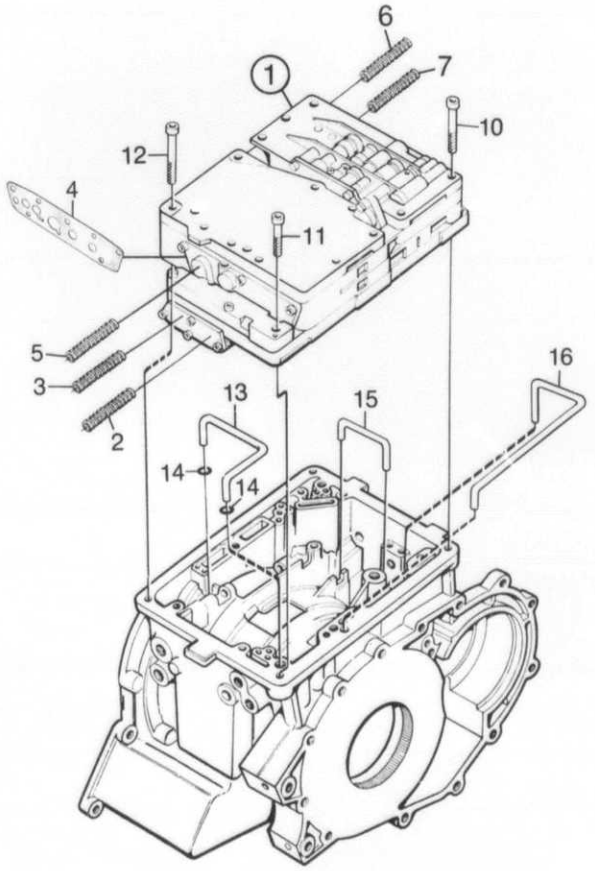

F8199 CAC94

0700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0020	1	41 20 796		FA 43001	1	.Control unit	.Kontrollenhet	5
0025	1	47 75 078		FA 43005	1	.Control unit	.Kontrollenhet	5
0030	1	41 22 503		FA 43201, 43202, 43205	1	.Control unit	.Kontrollenhet	5
0040	1	41 21 992		FA 41003, 43003	1	.Control unit	.Kontrollenhet	5
0050	1	43 84 814		192), FA 46302	1	.Control unit	.Kontrollenhet	5
0060	1	44 78 798		193), FA 46302	1	.Control unit	.Kontrollenhet	5
0070	2	42 80 657			1	..Spring reverse	..Fjäder back	6
0080								
0090	3	42 81 945		FA 41003, 43003, 43001	1	..Spring front	..Fjäder fram	6
0100								
0110	3	42 81 804		FA 43201, 43202	1	..Spring front	..Fjäder fram	6
0120								
0130	4	44 77 386			1	..Gasket	..Packning	5
0140	5	75 58 141		177)	1	..Spring	..Fjäder	6
0150	5	75 75 251		177)	1	..Spring	..Fjäder	6
0160	6	75 74 767		216)	1	..Spring shift valve 3-4	..Fjäder växlingsventil 3-4	6
0170								
0180								
0190	7	47 75 060		216)	1	..Spring shift valve 2-3	..Fjäder växlingsventil 2-3	6
0200								
0210								
0220	10	75 93 650			8	.Screw	.Skruv	5
0230	11	75 57 754			1	.Screw	.Skruv	5
0240	12	75 57 846			1	.Screw	.Skruv	5
0250	13	75 95 002		TURBO	1	.Tube	.Rör	4
0260	14	75 94 146	S	TURBO	2	.O-ring	.O-ring	3
0270	15	75 70 294			1	.Tube	.Rör	5
0280	16	75 70 310			1	.Tube	.Rör	5
0290		74 96 094			X	Gasket kit	Packningsats	3
0300				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
0310		74 96 102			X	Gasket kit	Packningsats	3
0320				See page 4-075, 3-J04		Stage 3	Steg 3	

177. See SI 440-1542 Se SI 440-1542
192. Gear box -216771
193. Gear box 216772-
216. See TA 443-S69 Se TA 443-S69

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-I18

Controls in gear box

Reglage i växellådshus

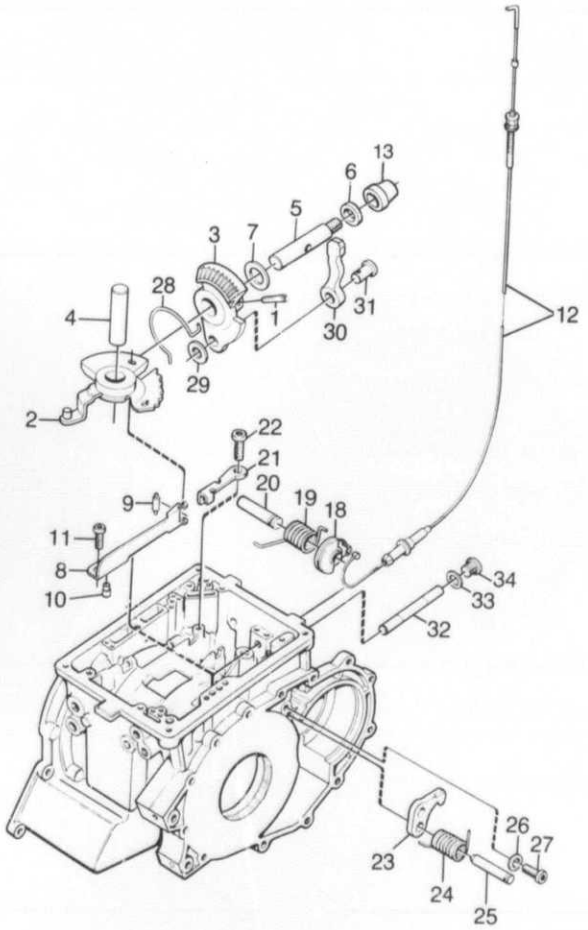

F6454 CAC94

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0030	1	41 22 552			1	.Pin	.Pinne	5
0050	2	41 22 578			1	.Catch	.Spärrskiva	4
0060	3	75 56 103	S		1	.Segment	.Segment	5
0070	4	75 56 913			1	.Bolt	.Bult	4
0080	5	75 56 095	S		1	.Shaft	.Axel	5
0090	6	75 52 276			1	.Shaft seal	.Axeltätning	3
0100	7	75 56 889	S	0,5MM	1	.Washer	.Bricka	4
0110	7	75 56 871	S	0,6MM	X	.Washer	.Bricka	4
0120	7	75 56 863	S	0,7MM	X	.Washer	.Bricka	4
0130	7	75 56 855	S	0,8MM	X	.Washer	.Bricka	4
0140	7	75 56 848	S	0,9MM	X	.Washer	.Bricka	4
0150	7	75 71 599	S	1,0MM	X	.Washer	.Bricka	4
0160	7	75 71 581	S	1,1MM	X	.Washer	.Bricka	4
0170	7	75 71 573	S	1,2MM	X	.Washer	.Bricka	4
0180	7	75 71 565	S	1,3MM	X	.Washer	.Bricka	4
0190	7	75 71 557	S	1,4MM	X	.Washer	.Bricka	4
0200	7	75 71 540	S	1,5MM	X	.Washer	.Bricka	4
0210	7	75 71 532	S	1,6MM	X	.Washer	.Bricka	4
0220	7	75 71 524	S	1,7MM	X	.Washer	.Bricka	4
0230	7	75 71 516	S	1,8MM	X	.Washer	.Bricka	4
0240	7	75 71 508	S	1,9MM	X	.Washer	.Bricka	4
0250	8	75 73 934			1	.Spring	.Fjäder	4
0260	9	75 58 836			1	.Roller	.Rulle	4
0270	10	75 56 905	S		1	.Pin	.Pinne	4
0280	11	75 57 762	S		2	.Screw	.Skruv	5
0290	12			See page 4-067, 3-I20		.Cable	.Kabel	
0300	13	40 26 316		FA 46302	1	.Plug	.Plugg	5
0400	18	75 56 111	S		1	.Cam disc	.Kamskiva	5
0410	19	75 56 145	S		1	.Spring	.Fjäder	6
0420	20	75 56 137	S		1	.Shaft	.Axel	6
0430	21	75 56 939	S		1	.Fixing plate	.Fixerplatta	5
0440	22	75 57 903	S		1	.Hexagon screw	.Sexkantsskruv	5
0450	23	40 25 136			1	.Stop	.Spärrklack	4
0460	24	75 54 710	S		1	.Spring	.Fjäder	4
0470	25	40 26 431	S		1	.Pin	.Pinne	4
0480	26	75 54 694			1	.Washer	.Bricka	5
0490	27	75 57 762			1	.Screw	.Skruv	5
0500	28	75 54 660	S		1	.Spring clamp	.Fjäderklämma	5
0510	29	75 54 694	S		1	.Washer	.Bricka	5
0520	30	75 54 678	S		1	.Lock lug	.Låsklack	4
0530	31	75 54 686	S		1	.Pin	.Pinne	5
0540	32	75 54 726	S		1	.Shaft	.Axel	6
0550	33	75 52 342	S	188)	1	.Seal	.Tätning	5
0555	33	44 77 774	S	189)	1	.Seal	.Tätning	5
0560	34	75 58 513			1	.Hexagon screw	.Sexkantsskruv	5
0580		74 96 094			X	Gasket kit	Packningsats	3
0590				See page 4-075, 3-J04		Stage 1-2	Steg 1-2	
0600		74 96 102			X	Gasket kit	Packningsats	3
0610				See page 4-075, 3-J04		Stage 3	Steg 3	

188. Gear box -204807
189. Gear box 204808-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-I20

Throttle cable

Trottelkabel

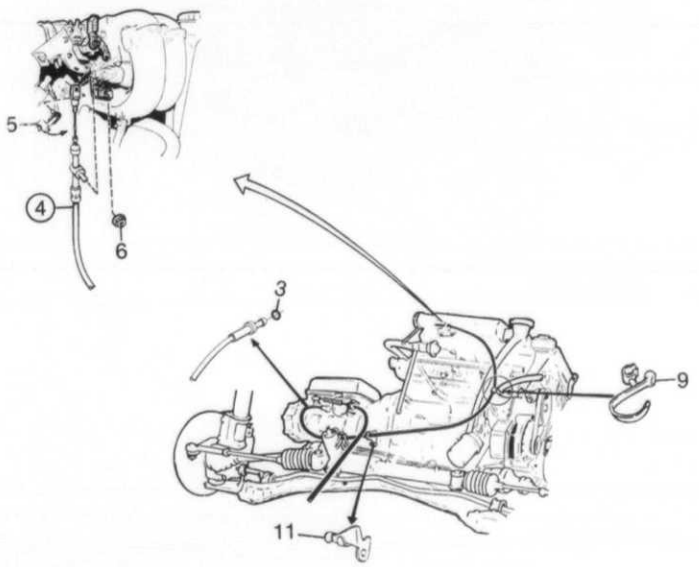

F6455 CAC94

0775	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 4-043, 3-H20		Gear box, automatic	Växellåda, automatisk	
0300	4	41 22 529		4-CYL	1	.Cable	.Kabel	4
0310	4	44 91 882		1995-, 6-CYL	1	.Cable	.Kabel	4
0330	5	83 08 389			1	..Clip	..Clips	5
0340	3	41 19 244		188)	1	..Sealing ring	..Tätningsring	3
0350	3	43 85 761		189)	1	..Sealing ring	..Tätningsring	3
0354	6	79 67 953			1	Nut	Mutter	5
0380	9	73 99 652		1995-, 6-CYL	1	Clamp	Klammer	5
0570	11	41 18 311			1	Bracket	Konsol	5

188. Gear box -204807
189. Gear box 204808-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3 -I22

Gear selector lever — *Växelväljarspak*

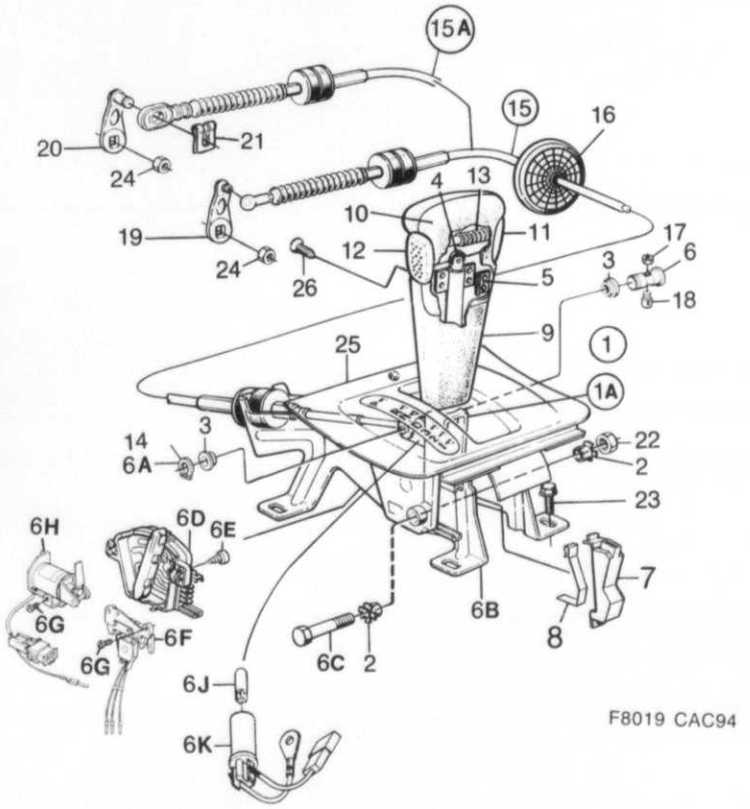

F8019 CAC94

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 81 424		171), US, CA	1	Bracket	Konsol	6
0020	1	44 77 899		172), US, CA	1	Bracket	Konsol	6
0030	1A	*42 80 830*		171) NLS – USE 4477907	1	.Gear lever	.Växelspak	5
0040	1A	44 77 907		172)	1	.Gear lever	.Växelspak	
0050	2	75 50 841			2	..Bushing	..Bussning	3
0070	3	42 81 374			2	..Bushing	..Bussning	3
0080	4	75 53 365			1	..Roller	..Rulle	3
0090	5	75 50 783			1	..Spacer	..Distans	4
0110	6	42 81 218			1	..Bracket	..Fäste	6
0120	6A	80 47 706			1	..Retaining ring	..Spårring	5
0140	6B	42 81 457		LHD	1	.Bracket	.Konsol	6
0160	6B	42 81 465		RHD	1	.Bracket	.Konsol	6
0170	6B	*42 80 855*		1), US, CA NLS	1	.Bracket	.Konsol	6
0180	6C	75 50 858			1	.Screw	.Skruv	5
0190	6D	40 62 980		LH	1	.Switch	.Strömställare	5
0200	6D	40 62 972		RH	1	.Switch	.Strömställare	5
0210	6E	79 22 818		US, CA	4	.Screw	.Skruv	5
0220	6F	*42 81 481*		1), US, CA NLS	1	.Microswitch	.Mikrobrytare	3
0230	6G	*84 41 503*		US, CA NLS – USE 7970601	4	.Screw	.Skruv	5
0240	6H	*42 80 871*		1), US, CA NLS	1	.Solenoid	.Solenoid	5
0250	6J	85 00 613		US, CA	1	.Bulb	.Glödlampa	2
0260	6K	85 78 775		US, CA	1	.Bulb socket	.Lamphållare	4
0270	7	44 91 478		172), US, CA	1	.Bracket	.Fäste	3
0280	8	44 91 486		172), US, CA	1	.Spring	.Fjäder	5
0310	9	41 21 091			1	Outer casing	Hölje	6
0330	10	41 21 109			1	Cover	Lock	5
0350	11	41 20 606			1	Button	Knapp	
0370	12	41 20 614			1	Button	Knapp	
0380	13	75 50 734			1	Spring	Fjäder	5
0390	14	79 15 093			2	Retaining ring	Spårring	5
0400	15	75 77 927		208)	1	Gear selector	Växelväljare	
0410	15A	46 25 984		209)	1	Gear selector	Växelväljare	
0420	16	75 50 973			1	.Grommet	.Genomföring	3
0440	17	79 71 658			1	Nut	Mutter	5
0460	18	41 18 402			1	Bolt	Bult	3
0470	19	75 92 033		208)	1	Ball joint	Kulled	5
0473	20	46 25 968		209)	1	Arm	Arm	5
0476	21	82 52 553		209)	1	Clip	Clips	5
0480	22	81 51 235			1	Nut	Mutter	5
0490	23	82 86 296			4	Screw	Skruv	5
0500	24	79 77 630			1	Nut	Mutter	5
0510	25			See page 8B-019, 5-A20		Cover	Kåpa	
0520	26	79 70 320			2	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
171. Ch. -R1028832
172. Ch. R1028833-
208. Ch. -T1003702
209. Ch. T1003703-


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX


Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24


3 -I24

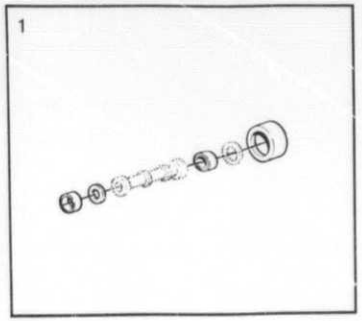


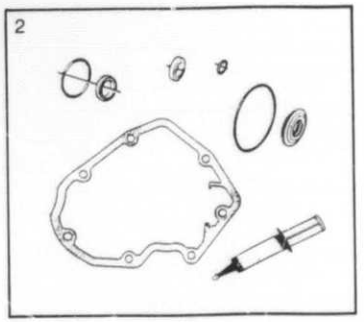

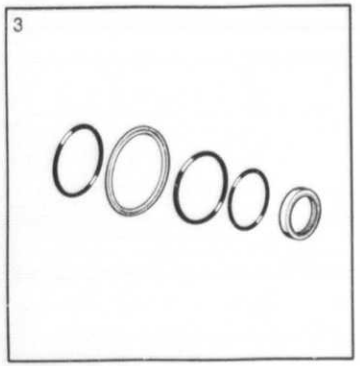

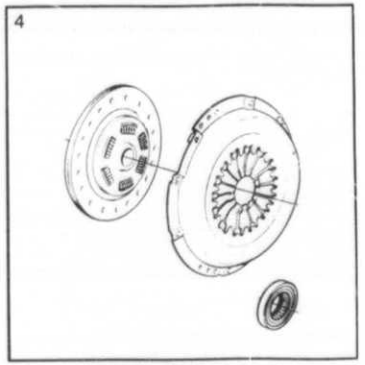

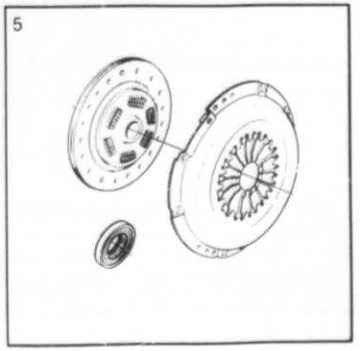

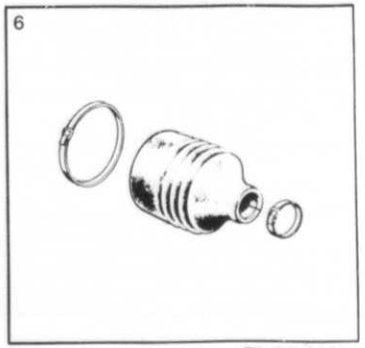

F6457 CAC94

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 156		RHD	X	Repair kit	Reparationssats	1
0020						master cylinder	huvudcylinder	
0030		89 03 304			1	.Gasket	.Packning	
0040		*73 13 182*		1) NLS	1	.Washer	.Bricka	
0050		89 40 769			1	.Gasket	.Packning	5
0060		73 13 240			1	.Seal	.Tätning	6
0070		89 45 248			1	.Gasket	.Packning	5
0080		89 45 255			1	.Washer	.Bricka	5
0090								
0100	2	87 81 593		M	X	Gasket kit	Packningsats	3
0110		43 46 748			1	Gasket	Packning	3
0120		80 47 144			1	O-ring	O-ring	2
0130		87 11 707			1	O-ring	O-ring	5
0140		87 29 600			1	O-ring	O-ring	3
0150		87 31 390			1	O-ring	O-ring	2
0160		87 31 804			2	Sealing collar	Tätningskrage	5
0170		87 34 832			1	Gasket	Packning	3
0180		87 34 980			1	Seal	Tätning	2
0190		*87 34 998*		NLS – USE 8741878	1	Seal	Tätning	4
0200		93 21 795			1	Flange sealant	Flänstätning	5
0210								
0220	3	87 81 643			X	Sealing kit	Tätningssats	1
0230						slave cylinder	slavcylinder	
0240		87 22 118		1)	1	.Seal	.Tätning	3
0250		87 22 126		1)	1	.Seal	.Tätning	3
0260		87 34 980			1	.Seal	.Tätning	2
0270		87 29 600			1	.O-ring	.O-ring	3
0280		87 29 592			1	.Seal	.Tätning	3
0290		87 37 025			1	.Retaining ring	.Spårring	5
0300								
0310	4	87 81 551		B204L, B234L, B234R	X	Clutch kit	Kopplingssats	6
0320		87 21 995			1	.Release bearing	.Urtrampningslager	2
0330		87 35 722			1	.Clutch disc	.Lamell	
0340		87 36 761			1	.Pressure plate	.Tryckskiva	2
0350								
0360	4	87 81 692		B234E, B308I	X	Clutch kit	Kopplingssats	6
0361	4	87 81 692		240), B204I, B204E	X	Clutch kit	Kopplingssats	6
0370		87 21 995			1	.Release bearing	.Urtrampningslager	2
0380		87 36 555			1	.Clutch disc	.Lamell	
0390		87 36 761			1	.Pressure plate	.Tryckskiva	2
0400								
0410	5	87 81 569		239), B204I,B234I,B204S	X	Clutch kit	Kopplingssats	6
0411				B204E	X			
0420		87 21 995			1	.Release bearing	.Urtrampningslager	2
0430		87 36 415			1	.Clutch disc	.Lamell	2
0440		87 36 423			1	.Pressure plate	.Tryckskiva	2
0450								
0460	6	89 93 628			X	Bellows kit	Bälgsats	2
0470						universal joint	drivknut	
0480		40 02 747		1)	1	.Bellows	.Bälg	2
0490		40 00 667			1	.Clamp	.Klämma	5
0500		44 25 534			1	.Clamp	.Klämma	3
0510								
0520	6	89 93 685		B234L, B234R, B204L, B234E, A	X	Bellows kit	Bälgsats	2
0530						universal joint	drivknut	
0540		41 05 797		1)	1	.Bellows	.Bälg	2
0550		41 07 108			1	.Clamp	.Klämma	3
0560		44 25 534			1	.Clamp	.Klämma	3


1. Not as separate spare part. Ej som separat reservdel.
239. Engine -V028943
240. Engine V028944-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch contrc!	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

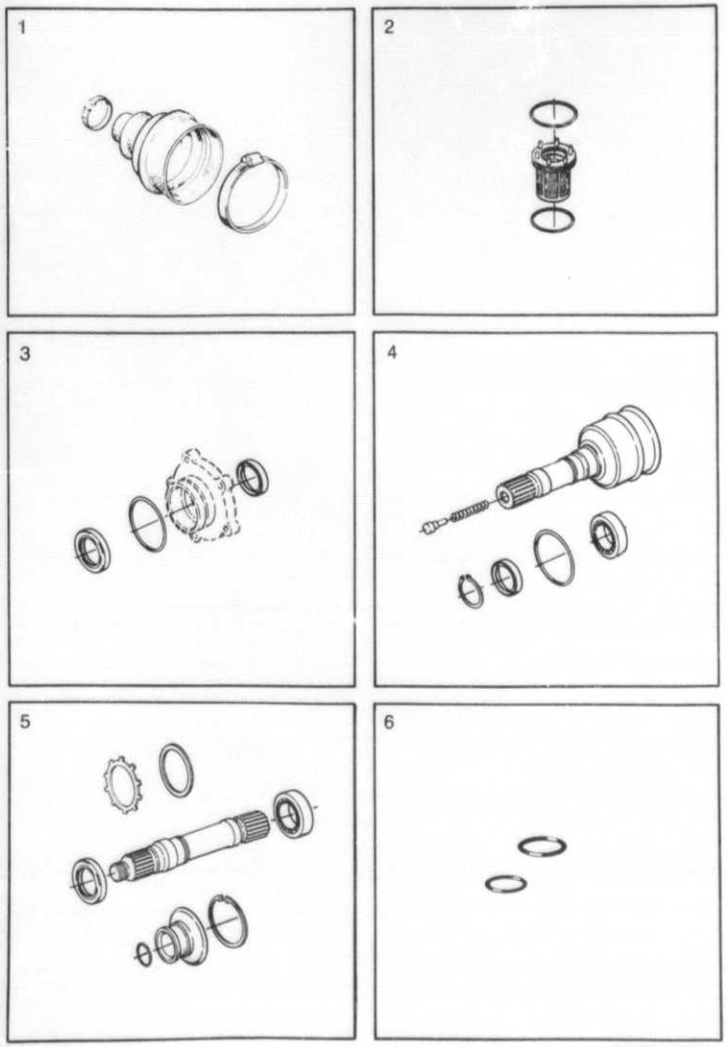

F6458 CAC94

Complete set
3 –J02
Transmission

Satser
Kraftöverföring

1050	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	89 93 636			X	Bellows kit	Bälgsats	3
0020						drive shaft	drivaxel	
0030		89 55 007		1)	1	.Bellows	.Bälg	3
0040		44 25 534			1	.Clamp	.Klämma	3
0060		89 72 986			1	.Clamp	.Klämma	5
0070								
0080	1	89 93 701		B234L, B234R, B204L, B234E, A	X	Bellows kit	Bälgsats	3
0085								
0090		41 03 248		1)	1	.Bellows	.Bälg	3
0100		41 03 214			1	.Clamp	.Klämma	3
0120		44 25 534			1	.Clamp	.Klämma	3
0130								
0140	2	75 75 525		80)	X	Repair kit	Reparationssats	4
0150		75 71 391			1	.Sealing ring	.Tätningsring	5
0160		75 94 187			1	.O-ring	.O-ring	3
0170		75 97 776			1	.O-ring	.O-ring	3
0180		75 99 525			1	.Filter	.Filter	3
0190								
0200	3	75 75 509		A	X	Sealing kit	Tätningssats	3
0210						drive shaft	drivaxel	
0220		75 52 128			1	.O-ring	.O-ring	3
0230		*87 04 298*		NLS – USE 8731804	1	.Sealing collar	.Tätningskrage	5
0240		87 21 078			1	.Seal	.Tätning	5
0250								
0260	4	75 75 566		A, LH	X	Repair kit	Reparationssats	5
0270						drive shaft	drivaxel	
0280		*75 52 102*		NLS – USE 7597776	1	.O-ring	.O-ring	3
0290		75 52 128			1	.O-ring	.O-ring	3
0300		75 58 950			1	.Ball bearing	.Kullager	5
0310		*79 15 200*		NLS – USE 8728198	1	.Lock ring	.Låsring	5
0320		*87 04 298*		NLS – USE 8731804	1	.Sealing collar	.Tätningskrage	5
0330		87 04 314			1	.Spring	.Fjäder	4
0340		87 04 322			1	.Plunger	.Plunge	5
0350		87 20 948			1	.Companion flange	.Medbringare	3
0360								
0370	5	75 75 574		A, RH	X	Repair kit	Reparationssats	
0380						drive shaft	drivaxel	
0390		*75 52 102*		NLS – USE 7597776	1	.O-ring	.O-ring	3
0400		75 58 950			1	.Ball bearing	.Kullager	5
0410		*75 71 896*		NLS – USE 8723140	1	.Shaft	.Axel	5
0420		*75 71 904*		NLS – USE 7594898	1	.O-ring	.O-ring	3
0430		87 20 997			1	.Sealing ring	.Tätningsring	2
0440		80 48 324			1	.Ring	.Ring	6
0450		*79 15 036*		78) NLS – USE 8048324	1	.Lock ring	.Låsring	5
0460		*79 15 200*		NLS – USE 8728198	1	.Lock ring	.Låsring	5
0470		87 21 078			1	.Seal	.Tätning	5
0480								
0490	6	75 75 442			X	Sealing kit	Tätningssats	3
0500		*75 52 102*		NLS – USE 7597776	1	.O-ring	.O-ring	3
0510		75 71 391			1	.Sealing ring	.Tätningsring	5


1. Not as separate spare part. Ej som separat reservdel.
78. Alternative to 8048324. Alternativ till 8048324.
80. Filter insert Filterinsats

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

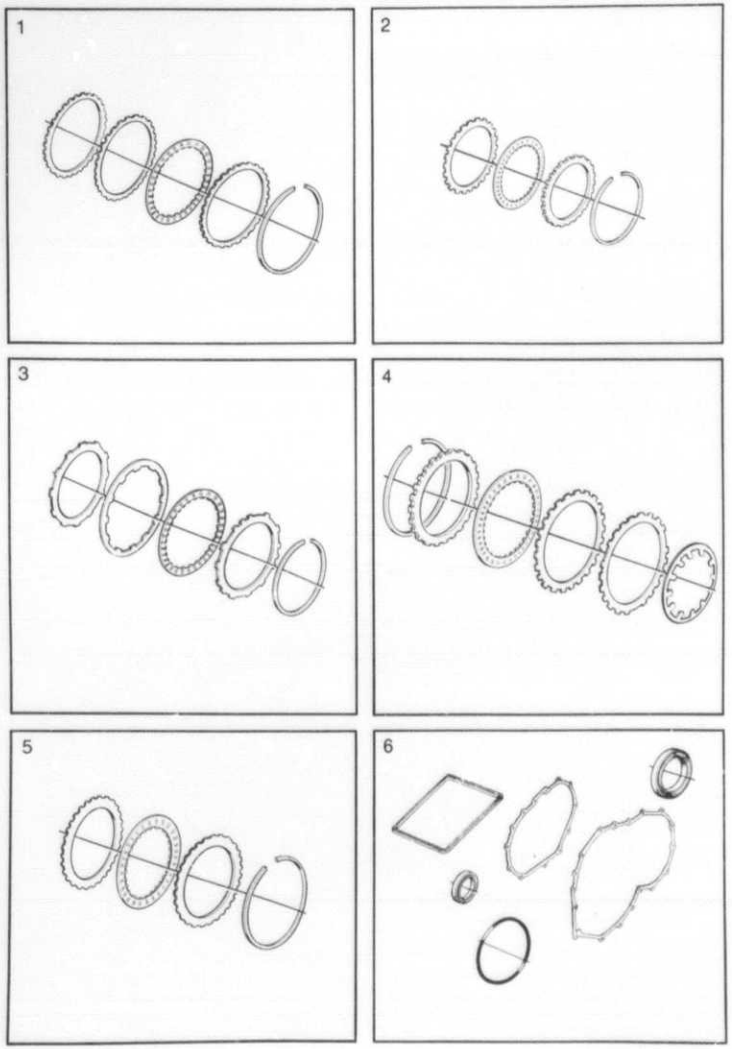

F6459 CAC94

Complete set
Transmission

Satser
Kraftöverföring

3-J04


1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 96 045		A	X	Disc kit	Lamellsats	2
0020						Clutch "A"	Koppling "A"	
0030		75 52 292			5	.Clutch disc	.Lamell	5
0040		75 53 050			1	.Clutch disc	.Lamell	5
0050		75 53 068			5	.Clutch disc	.Lamell	5
0060		75 53 092			1	.Clutch disc	.Lamell	5
0070		75 53 183			1	.Lock ring	.Låsring	5
0080		75 53 191			1	.Lock ring	.Låsring	5
0090		75 53 209			1	.Lock ring	.Låsring	5
0100		75 53 217			1	.Lock ring	.Låsring	5
0110		75 53 225			1	.Lock ring	.Låsring	5
0120		75 53 233			1	.Lock ring	.Låsring	5
0130		75 53 241			1	.Lock ring	.Låsring	5
0140		75 53 258			1	.Lock ring	.Låsring	5
0150		75 53 266			1	.Lock ring	.Låsring	5
0160		75 53 274			1	.Lock ring	.Låsring	5
0170								
0180	2	74 96 052		A	X	Disc kit	Lamellsats	2
0190						Clutch "B"	Koppling "B"	
0200		75 53 068			3	.Clutch disc	.Lamell	5
0210		75 53 092			1	.Clutch disc	.Lamell	5
0220		75 53 217			1	.Lock ring	.Låsring	5
0230		75 72 704			3	.Clutch disc	.Lamell	5
0240								
0250	3	74 96 060		A	X	Disc kit	Lamellsats	2
0255						Clutch "C"	Koppling "C"	
0260		75 52 961			1	.Spring disc	.Fjädertallrik	5
0270		75 53 084			3	.Clutch disc	.Lamell	5
0280		75 58 786			1	.Lock ring	.Låsring	5
0290		75 70 740			3	.Clutch disc	.Lamell	5
0300		75 72 605			1	.Lock ring	.Låsring	5
0310		75 72 613			1	.Lock ring	.Låsring	5
0320		75 72 621			1	.Lock ring	.Låsring	5
0330		75 72 639			1	.Lock ring	.Låsring	5
0340		75 74 890			1	.Lock ring	.Låsring	5
0350		75 92 249			1	.Clutch disc	.Lamell	5
0360								
0370	4	74 96 078		A	1	Disc kit	Lamellsats	2
0380						Clutch "D"	Koppling "D"	
0390		75 52 326			6	.Clutch disc	.Lamell	5
0400		75 53 050			1	.Clutch disc	.Lamell	5
0410		75 53 068			6	.Clutch disc	.Lamell	5
0420		75 53 092			1	.Clutch disc	.Lamell	5
0430		75 53 225			1	.Lock ring	.Låsring	5
0440		75 53 233			1	.Lock ring	.Låsring	5
0450		75 53 241			1	.Lock ring	.Låsring	5
0460		75 53 266			1	.Lock ring	.Låsring	5
0470		75 77 182			1	.Lock spring	.Låsfjäder	5
0480		75 77 257			1	.Lock ring	.Låsring	5
0490		75 77 265			1	.Lock ring	.Låsring	5
0500		75 77 273			1	.Lock ring	.Låsring	5
0510								
0520	5	74 96 086		A	X	Disc kit	Lamellsats	2
0530						Clutch "E"	Koppling "E"	
0540		75 57 085			1	.Lock ring	.Låsring	5
0550		*75 72 571*		NLS - USE 4122396	5	.Clutch disc	.Lamell	5
0560		75 76 796			1	.Clutch disc	.Lamell	5
0570		75 76 853			1	.Clutch disc	.Lamell	5
0580		75 97 933			5	.Clutch disc	.Lamell	5
0590								
0600	6	74 96 094		A	X	Gasket kit	Packningsats	3
0610						Stage 1-2	Steg 1-2	
0620		41 19 244			1	.Sealing ring	.Tätningsring	3
0630		75 52 250			1	.O-ring	.O-ring	5
0640		75 52 276			1	.Shaft seal	.Axeltätning	3


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


4 GROUP INDEX


Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

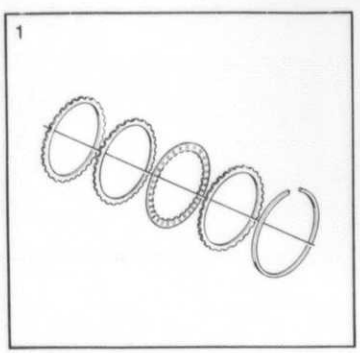


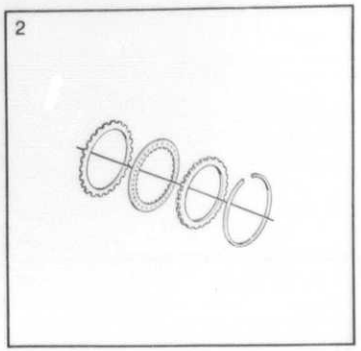

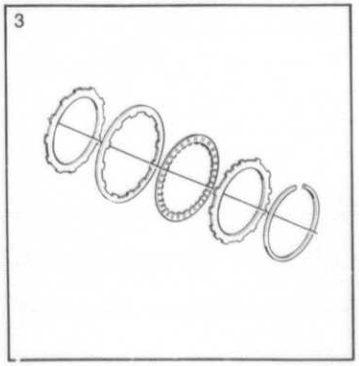

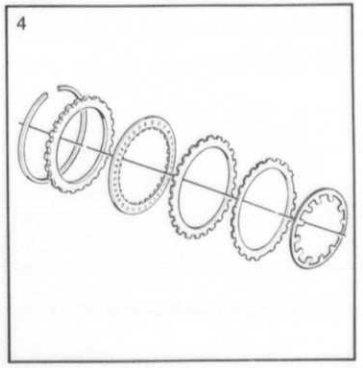

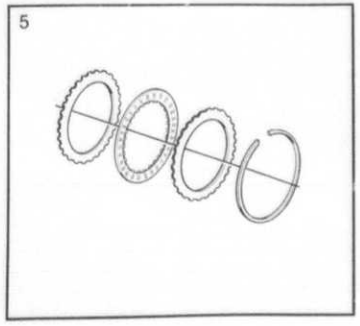

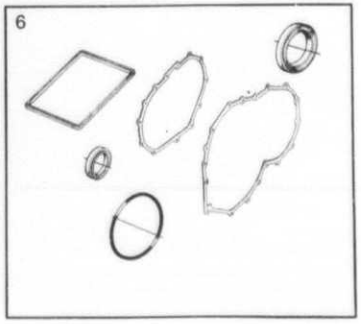

F6459 CAC94

Complete set
3 -J06
Transmission

Satser
Kraftöverföring

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0650		75 52 342			1	.Seal	.Tätning	5
0660		*75 56 228*		NLS – USE 4477378	1	.Gasket	.Packning	3
0670		75 56 996			2	.O-ring	.O-ring	5
0680		75 58 356			2	.Sealing ring	.Tätningsring	3
0690		*75 58 406*		NLS – USE 4280582	1	.Shaft seal	.Axeltätning	5
0700		75 70 542			1	.Gasket	.Packning	3
0710		75 71 391			1	.Sealing ring	.Tätningsring	5
0720		75 72 175			1	.Sealing ring	.Tätningsring	3
0730		75 92 223			1	.Seal	.Tätning	5
0740		*75 92 231*		NLS – USE 4280376	1	.Seal	.Tätning	5
0750		75 92 330			1	.Gasket	.Packning	2
0760		75 94 120			1	.O-ring	.O-ring	3
0770		75 94 146			2	.O-ring	.O-ring	3
0780		75 94 179			2	.O-ring	.O-ring	3
0790		75 94 187			1	.O-ring	.O-ring	3
0800		75 94 898			1	.O-ring	.O-ring	3
0810		75 95 325			1	.O-ring	.O-ring	5
0820		75 97 776			1	.O-ring	.O-ring	3
0830		87 24 874			1	.Seal	.Tätning	4
0840								
0850	6	74 96 102		A	X	Gasket kit	Packningsats	3
0860						Stage 3	Steg 3	
0870		*40 26 936*		NLS – USE 4280558	1	.O-ring	.O-ring	5
0880		41 19 244			1	.Sealing ring	.Tätningsring	3
0890		75 52 151			3	.O-ring	.O-ring	5
0900		75 52 193			1	.O-ring	.O-ring	5
0910		75 52 201			1	.O-ring	.O-ring	5
0920		75 52 235			1	.O-ring	.O-ring	5
0930		75 52 243			1	.O-ring	.O-ring	5
0940		75 52 250			1	.O-ring	.O-ring	5
0950		75 52 268			1	.O-ring	.O-ring	5
0960		75 52 276			1	.Shaft seal	.Axeltätning	3
0970		75 52 342			1	.Seal	.Tätning	5
0980		*75 56 228*		NLS – USE 4477378	1	.Gasket	.Packning	3
0990		75 56 996			2	.O-ring	.O-ring	5
1000		75 57 457			2	.Piston ring	.Kolvring	5
1010		75 57 465			2	.Seal	.Tätning	5
1020		75 58 356			2	.Sealing ring	.Tätningsring	3
1030		*75 58 406*		NLS – USE 4280582	1	.Shaft seal	.Axeltätning	5
1040		75 70 542			1	.Gasket	.Packning	3
1050		75 71 391			1	.Sealing ring	.Tätningsring	5
1060		75 72 175			1	.Sealing ring	.Tätningsring	3
1070		75 74 833			1	.O-ring	.O-ring	5
1080		75 92 223			1	.Seal	.Tätning	5
1090		*75 92 231*		NLS – USE 4280376	1	.Seal	.Tätning	5
1100		75 92 330			1	.Gasket	.Packning	2
1110		75 94 120			1	.O-ring	.O-ring	3
1120		75 94 146			2	.O-ring	.O-ring	3
1130		75 94 153			1	.O-ring	.O-ring	5
1140		75 94 161			1	.O-ring	.O-ring	5
1150		75 94 179			2	.O-ring	.O-ring	3
1160		75 94 187			1	.O-ring	.O-ring	3
1170		75 94 880			2	.O-ring	.O-ring	3
1180		75 94 898			1	.O-ring	.O-ring	3
1190		75 95 325			1	.O-ring	.O-ring	5
1200		75 97 354			1	.O-ring	.O-ring	5
1210		75 97 776			1	.O-ring	.O-ring	3
1220		87 24 874			1	.Seal	.Tätning	4

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

Complete set
3-J08
Transmission

Satser
Kraftöverföring

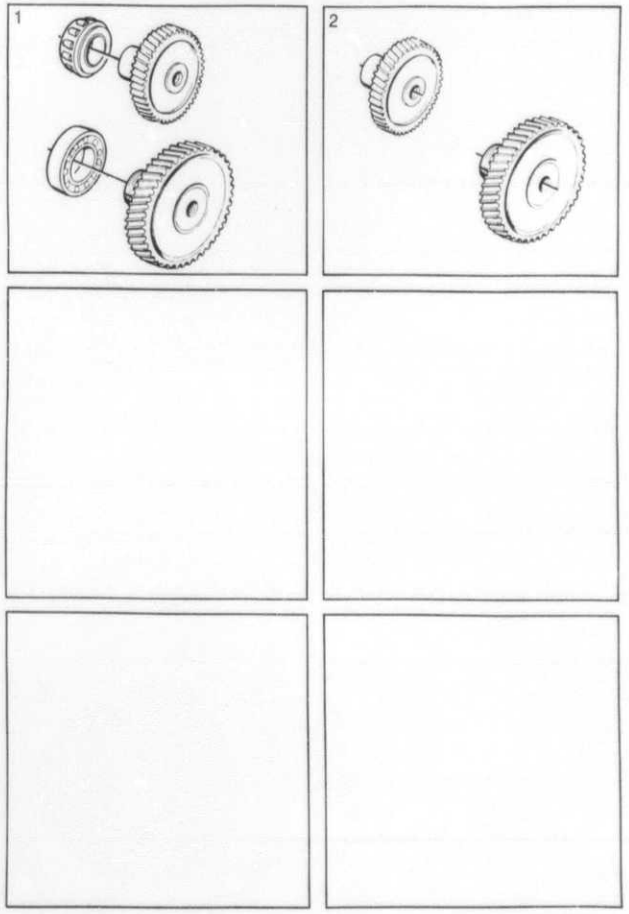

F8621 CAC94

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 78 970		A	X	Gear	Kugghjul	5
0020		44 78 855			1	.Gear	.Kugghjul	5
0030		*75 79 063*		1) NLS	1	..Gear	..Kugghjul	5
0040		*75 79 071*		1) NLS	1	..Gear	..Kugghjul	5
0050		44 91 981			1	.Bearing roller	.Lagerrulle	3
0060		87 81 999			1	.Bearing roller	.Lagerrulle	3
0070								
0080	2	44 78 855		A	X	Gear	Kugghjul	5
0090		*75 79 063*		1) NLS	1	.Gear	.Kugghjul	5
0100		*75 79 071*		1) NLS	1	.Gear	.Kugghjul	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

4 GROUP INDEX

Clutch	3-G06
Clutch control	3-G08
Gear box, manual	3-G12
Gear box control, manual	3-H14
Gear box, automatic	3-H20
Gear box control, automatic	3-I22
Complete sets	3-I24

3-K02



Brakes
Bromsar
Frenos

0041
0020
0040
0060
0080
0100
0160
0180
0200
0230
0235
0240
0250
0255
0260
0270
0280
0290
0295

TABLE OF CONTENTS

Front wheel brake	5 : 5	3-K06
Rear wheel brake	5 : 7	3-K08
Footbrake system	5 : 9	3-K10
Hydraulic unit ABS, Mark II	5 : 11	3-K12
Hydraulic unit ABS, Mark IV	5 : 13	3-K14
Master cylinder and power brake unit Mark IV	5 : 15	3-K16
Brake lines ABS, Mark II	5 : 17	3-K18
Brake lines ABS, Mark IV	5 : 19	3-K20
Brake operation LHD	5 : 21	3-K22
Brake operation RHD	5 : 23	3-K24
Parking brake system	5 : 25	3-L02
Complete sets		
Brakes		

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

3-K03

0042
0300
0320
0340
0360
0380
0440
0460
0480
0510
0515
0520
0530
0535
0540
0550
0560
0570
0575
0580
0600
0620
1120
1140
1160
1180
1200
1260
1280
1300
1330
1335
1340
1350
1355
1360
1370
1380
1390
1395
1400
1410
1420

INNEHÅLLSFÖRTECKNING

Framhjulsbroms	5 : 5	3-K06
Bakhjulsbroms	5 : 7	3-K08
Fotbromssystem		
Hydralenhet ABS, Mark II	5 : 9	3-K10
Hydralenhet ABS, Mark IV	5 : 11	3-K12
Huvudcylinder och vacuumservo Mark IV	5 : 13	3-K14
Bromsledningar ABS, Mark II	5 : 15	3-K16
Bromsledningar ABS, Mark IV	5 : 17	3-K18
Bromsmanövrering LHD	5 : 19	3-K20
Bromsmanövrering RHD	5 : 21	3-K22
Parkeringsbromssystem	5 : 23	3-K24
Satser		
Bromsar	5 : 25	3-L02

SUMARIO

Freno del	5 : 5	3-K06
Freno tras	5 : 7	3-K08
Sistema de freno de pie		
Unidad hydraulico ABS, Mark II	5 : 9	3-K10
Unidad hydraulico ABS, Mark IV	5 : 11	3-K12
Cylindro principal y servoasistencia Mark IV	5 : 13	3-K14
Conductos de freno ABS, Mark II	5 : 15	3-K16
Conductos de freno ABS, Mark IV	5 : 17	3-K18
Mando de freno de pie D a I	5 : 19	3-K20
Mando de freno de pie D a D	5 : 21	3-K22
Sistema de freno de mano	5 : 23	3-K24
Juegos completos		
Frenos	5 : 25	3-L02


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

3-K06 *Front wheel brake* *Framhjulsbroms*

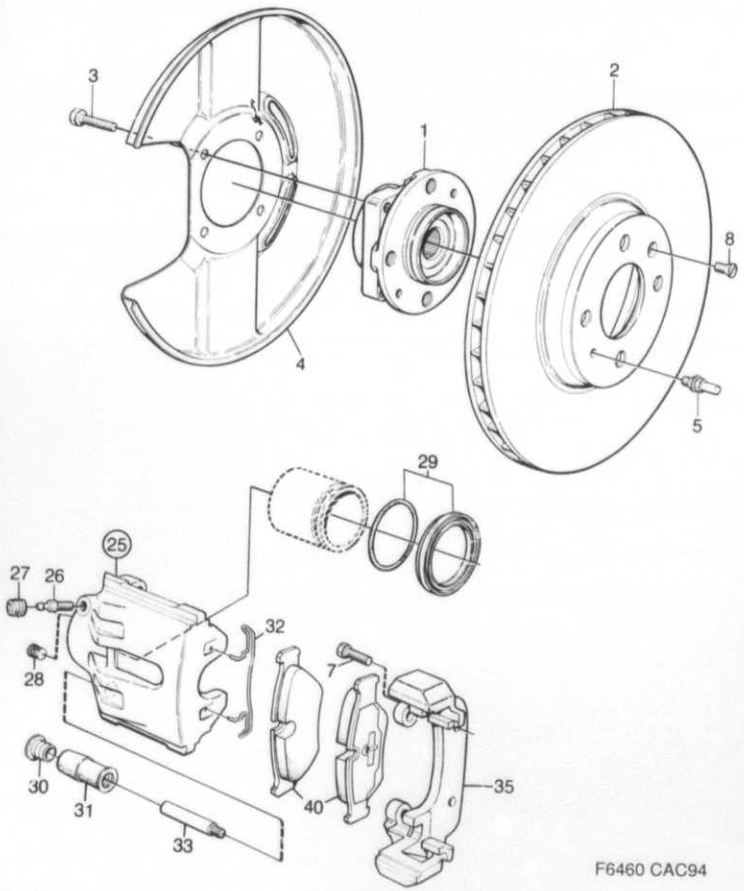

F6460 CAC94

0100	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0030	1	41 07 462			2	Wheel hub	Hjulnav	5
0031						with bearing	med lager	
0077	2	40 02 143			2	Brake disc	Bromsskiva	3
0090	3	80 98 295			8	Screw	Skruv	5
0115	4	40 02 689			2	Protecting plate	Skyddsplåt	6
0140	5	89 68 588			2	Pin	Pinne	4
0180	7	89 53 283			4	Screw	Skruv	5
0185	8	80 56 160			2	Screw	Skruv	5
0500	25	*89 68 943*		7,21), LH NLS – USE 4543765	1	Brake housing	Bromshus	4
0520	25	*89 68 950*		7,21), RH NLS – USE 4543773	1	Brake housing	Bromshus	4
0525	25	45 43 765		7,22), LH	1	Brake housing	Bromshus	4
0530	25	45 43 773		7,22), RH	1	Brake housing	Bromshus	4
0542	26	89 55 411			2	.Bleed screw	.Luftningsskruv	2
0544	27	89 08 576			2	.Protecting casing	.Skyddskåpa	3
0545	28	89 55 973			1	.Plug	.Plugg	6
0550	29	89 68 968		See page 5-025, 3-L02	2	.Gasket kit	.Packningsats	2
0562	30	89 55 478			2	.Cover	.Lock	3
0564	31	89 69 107			2	.Sleeve	.Hylsa	6
0566	32	89 69 123			1	.Spring	.Fjäder	3
0568	33	89 69 651			4	.Slide pin	.Glidpinne	3
0570	35	89 69 115			2	.Retainer	.Hållare	5
0600	40	89 68 976		15) See page 5-025, 3-L02	1	Brake pad kit	Bromsklotssats	1
0602	40	89 93 768		15) See page 5-025, 3-L02	1	Brake pad kit	Bromsklotssats	1
0610	40	48 39 700		15) See page 5-025, 3-L02	1	Brake pad kit	Bromsklotssats	1

7. Also available as exchange unit. Finns även som utbytesenhet.
15. See SI 500-1034 Se SI 500-1034
21. Ch. -R1023306
22. Ch. R1023307-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

3-K08 *Rear wheel brake* *Bakhjulsbroms*

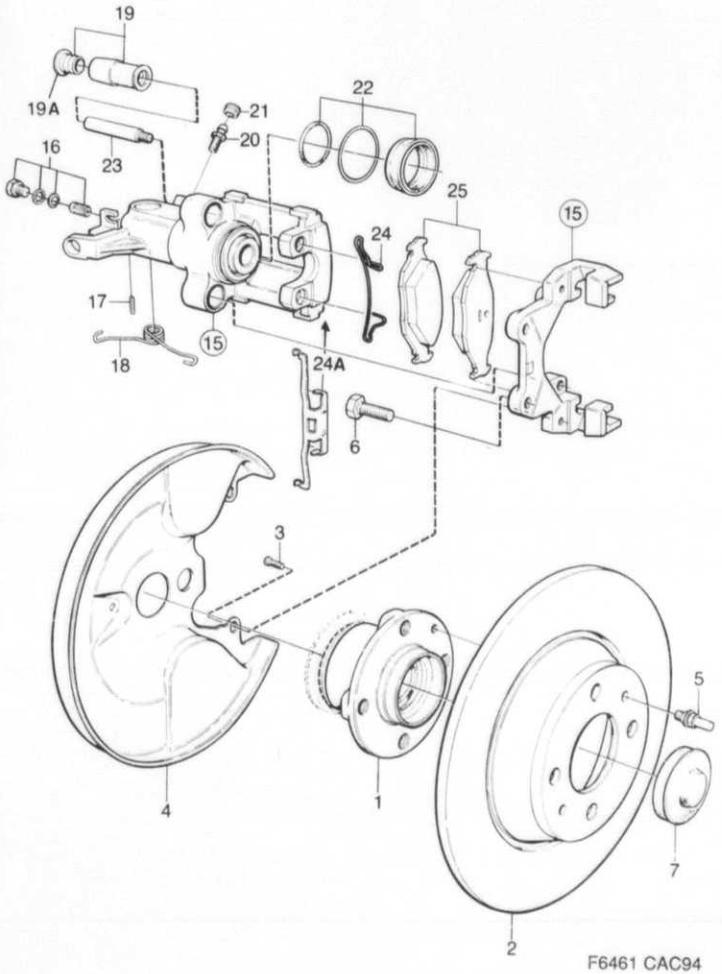

F6461 CAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0040	1	89 73 406			2	Wheel hub	Hjulnav	4
0045						with bearing	med lager	
0070	2	89 70 717			2	Brake disc	Bromsskiva	3
0080	3	79 72 441			6	Screw	Skruv	5
0110	4	89 63 027			2	Protecting plate	Skyddsplåt	6
0130	5	89 68 588			2	Pin	Pinne	4
0160	6	89 70 428			4	Screw	Skruv	5
0200	7	89 52 665			2	Cap	Kapsel	2
0285	15	89 70 618		7), LH	1	Brake housing	Bromshus	5
0290	15	89 70 626		7), RH	1	Brake housing	Bromshus	5
0300	16	41 07 793		See page 5-029, 3-L06	1	.Adjuster kit	.Justeringssats	4
0320	17	89 55 437			1	.Pin	.Pinne	3
0340	18	89 55 395		LH	1	.Spring	.Fjäder	3
0360	18	89 55 403		RH	1	.Spring	.Fjäder	3
0382	19	44 67 064		See page 5-027, 3-L04	2	.Guide	.Styrning	3
0390	19A	89 55 478			2	..Cover	..Lock	3
0400	20	89 55 411		M8	1	.Bleed screw	.Luftningsskruv	2
0410	20	48 38 124		M7	1	.Bleed screw	.Luftningsskruv	2
0420	21	89 08 576			1	.Protecting casing	.Skyddskåpa	3
0440	22	89 61 849		See page 5-025, 3-L02	1	.Gasket kit	.Packningsats	4
0465	23	89 69 651			2	.Slide pin	.Glidpinne	3
0470	24	89 70 816			1	.Spring	.Fjäder	3
0475	24A	89 55 528			1	.Spring	.Fjäder	3
0484	25	41 96 317		15)	1	Brake pad kit	Bromsklotssats	1
0485				See page 5-025, 3-L02				

7. Also available as exchange unit. Finns även som utbytesenhet.
15. See SI 500-1034 Se SI 500-1034

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02


Footbrake system

3-K10

Hydraulic unit ABS -1995, Mark II

Fotbromssystem

Hydraulenhet ABS -1995, Mark II

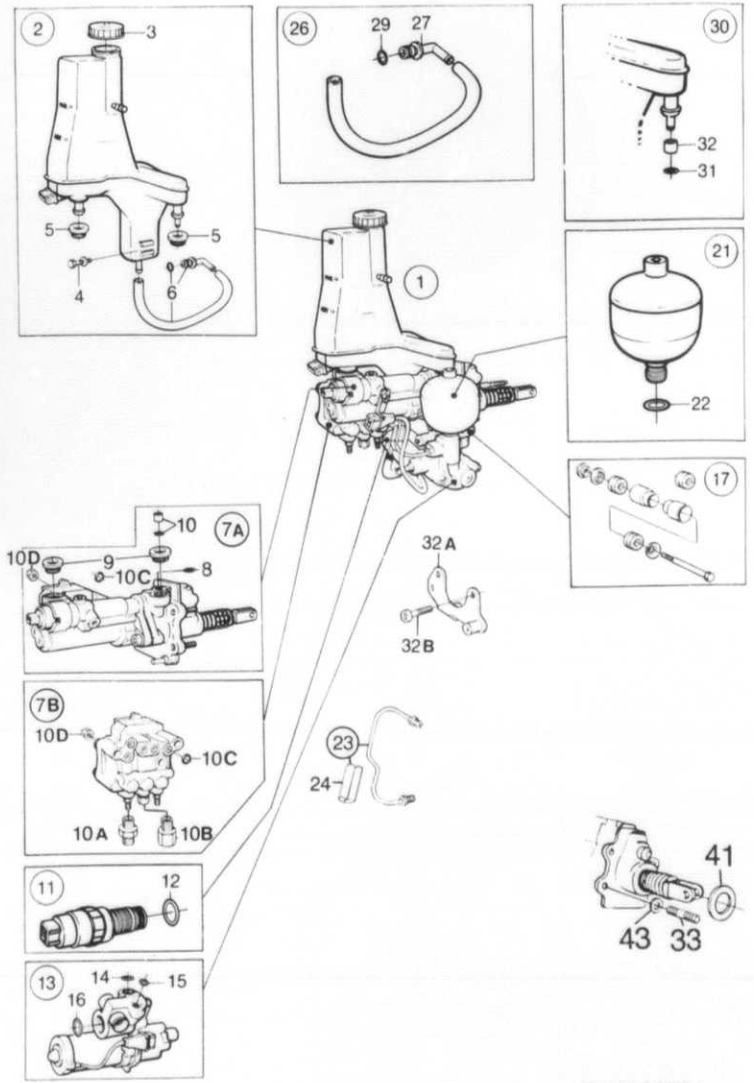

F6462 CAC94

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 25 732		TCS, M	1	Hydraulic unit	Hydraulenhet	6
0020	2	41 90 617		See page 5-027, 3-L04	1	.Reservoir	.Behållare	6
0030	3	44 25 690			1	..Cover	..Lock	4
0040	4	89 66 368			1	..Screw	..Skruv	5
0050	5	89 66 335			2	..Rubber bushing	..Gummibussning	6
0060	6	40 02 861		See page 5-027, 3-L04	1	..Hose kit	..Slangsats	5
0070	7A	41 95 889		See page 5-029, 3-L06	1	.Master cylinder kit	.Huvudcylindersats	6
0080	8	*89 67 267*		NLS - USE 8967408	1	..O-ring	..O-ring	2
0090	9	89 66 335			2	..Rubber bushing	..Gummibussning	6
0100	10	89 67 390		See page 5-029, 3-L06	1	..O-ring kit	..O-ringsats	2
0110	10C	41 95 855			5	..O-ring	..O-ring	2
0120	10D	80 74 106			3	..Nut	..Mutter	5
0130	7B	41 95 871			1	.Valve body	.Ventilblock	6
0140	10A	89 66 376			2	..Intermediate section	..Mellanstycke	5
0150	10B	89 66 384			1	..Intermediate section	..Mellanstycke	5
0160	10C	41 95 855			5	..O-ring	..O-ring	2
0170	10D	80 74 106			3	..Nut	..Mutter	5
0180	10E	79 16 497			3	..Washer	..Bricka	5
0190	11	89 67 309		29), 1994	1	.Pressure monitor	.Tryckvakt	4
0191				See page 5-027, 3-L04				
0195	11	89 94 071		1995-	1	.Pressure monitor	.Tryckvakt	4
0196				See page 5-027, 3-L04				
0200	12	89 67 325			1	..O-ring	..O-ring	2
0210	13	40 03 158		See page 5-027, 3-L04	1	.Pump kit	.Pumpsats	6
0220	14	89 67 234			1	..O-ring	..O-ring	2
0230	15	*89 67 267*		NLS - USE 8967408	1	..O-ring	..O-ring	2
0240	16	89 67 325			1	..O-ring	..O-ring	2
0250	17	40 02 895		See page 5-027, 3-L04	1	.Suspension kit	.Upphängningssats	5
0260	21	40 02 267		See page 5-027, 3-L04	1	.Accumulator	.Ackumulator	5
0270	22	89 67 234			1	..O-ring	..O-ring	2
0280	23	89 93 644			1	.Delivery pipe	.Tryckrör	5
0290	23	41 95 772			1	.Delivery pipe	.Tryckrör	5
0300	24	*40 02 093*		NLS - USE 8993644	1	..Absorber	..Dämpare	5
0310	26	40 02 861		See page 5-029, 3-L06	1	.Hose kit	.Slangsats	5
0320	27	*91 04 738*		1) NLS	1	..Nipple	..Nippel	
0330	29	40 03 117			1	..O-ring	..O-ring	5
0340	30	89 67 390		See page 5-029, 3-L06	1	.O-ring kit	.O-ringsats	2
0350	31	*89 66 681*		NLS - USE 8967390	1	..O-ring	..O-ring	4
0360	32	*89 66 939*		NLS - USE 8967390	1	..Sleeve	..Hylsa	6
0370	32A	41 90 773			1	.Holder	.Hållare	5
0380	32B	89 66 491			2	.Screw	.Skruv	5
0390	33	91 04 795			4	.Stud	.Pinnskruv	5
0400	41	41 03 420			1	Seal	Tätning	5
0410	43	89 29 531			4	Sealing washer	Tätningsbricka	5


1. Not as separate spare part. Ej som separat reservdel.
29. Superseded by 8994071. Ersatt av 8994071.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

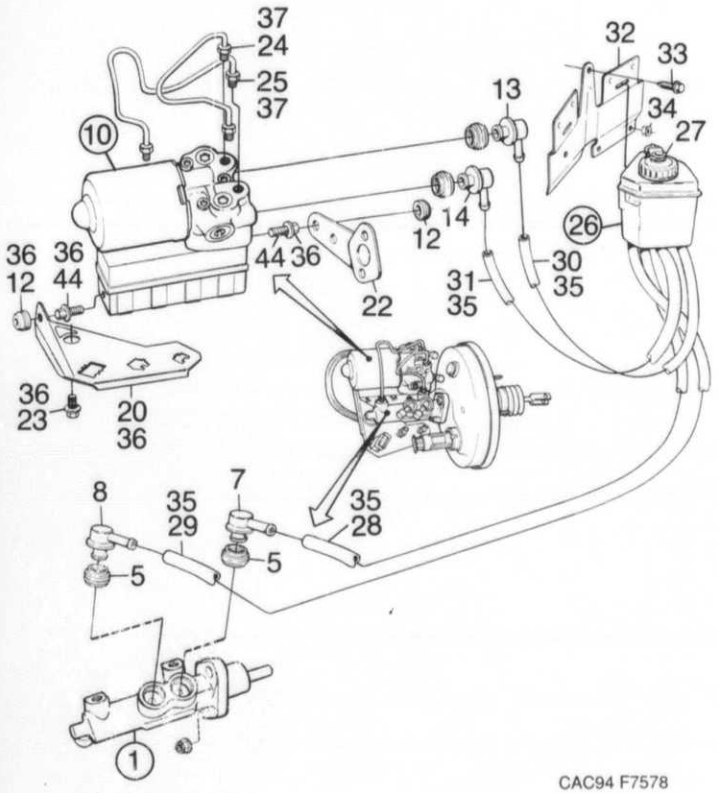

CAC94 F7578

0230	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 5-013, 3-K14	1	Master cylinder	Huvudcylinder	
0100	10	41 98 446			1	Hydraulic unit	Hydraulenhet	6
0120	12	*41 98 107*	S	1) NLS	3	.Rubber bushing	.Gummibussning	6
0130	13	41 98 222			1	.Nipple	.Nippel	6
0140	14	41 98 230			1	.Nipple	.Nippel	6
0200	20	*41 98 065*	S	1) NLS	1	Bracket	Konsol	6
0220	22	41 98 073			1	Bracket	Konsol	6
0230	23	*41 98 511*	S	1) NLS	1	Screw	Skruv	5
0240	24	*41 98 081*	S	1) NLS	1	Brake pipe	Bromsrör	5
0250	25	*41 98 099*	S	1) NLS	1	Brake pipe	Bromsrör	5
0260	26	44 25 724			1	Reservoir	Behållare	5
0270	27	44 25 708			1	.Cover	.Lock	4
0280	28	*41 98 271*	S	1) NLS	1	.Hose	.Slang	5
0290	29	*41 98 289*	S	1) NLS	1	.Hose	.Slang	5
0300	30	*41 98 123*	S	1) NLS	1	Hose	Slang	5
0310	31	*41 98 131*	S	1) NLS	1	Hose	Slang	5
0320	32	41 97 919			1	Bracket	Konsol	
0330	33	79 78 639			1	Screw	Skruv	5
0340	34	79 77 929			2	Nut	Mutter	5
0350	35	41 98 479		See page 5-025, 3-L02	1	Hose kit	Slangsats	5
0370	36	41 98 461		See page 5-029, 3-L06	1	Attachment kit	Fästsats	6
0650	44	*41 98 529*	S	1) NLS	3	Screw	Skruv	5


1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

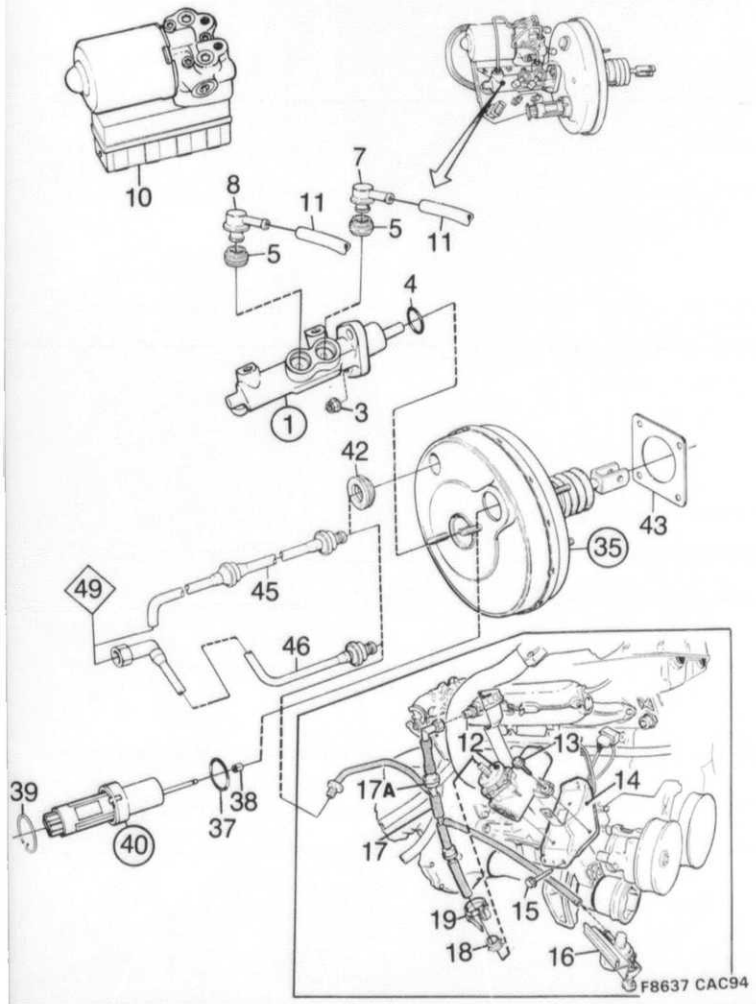

Footbrake system

3 -K14

Master cylinder and power brake unit Mark IV

Fotbromssystem

Huvudcylinder och vacuumservo Mark IV

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 98 438			1	Master cylinder	Huvudcylinder	6
0020	3	41 98 396			2	.Nut	.Mutter	5
0030	4	41 98 503			1	.Sealing ring	.Tätningsring	4
0040	5	41 98 297			2	Pipe end	Stos	6
0050	7	41 98 305			1	Connection nipple	Anslutningsnippel	6
0060	8	41 98 313			1	Connection nipple	Anslutningsnippel	6
0070	10			See page 5-011, 3-K12		Hydraulic unit	Hydraulenhet	
0080	11			See page 5-011, 3-K12		Hose kit	Slangsats	
0090	12	46 46 220		1996-, B204 TURBO A	1	Vacuum pump	Vakuumpump	
0100	13	79 76 133		1996-, B204 TURBO A	3	Screw	Skruv	5
0110	14	46 46 469		1996-, B204 TURBO A	1	Bracket	Fäste	
0120	15			See page 4-039, 3-H16		Screw	Skruv	
0130	16			See page 3A-087, 2-D16		Pressure monitor	Tryckvakt	
0140	17	46 46 253		1996-,30) B204 TURBO A	1	Vacuum pipe	Vakuumrör	5
0150	17	• 49 07 598		31), B204 TURBO A	1	Vacuum pipe	Vakuumrör	5
0155	17A	• 46 47 624		1996-, B204 TURBO A	1	.Non-return valve	.Backventil	5
0160	18	• 79 74 009		31), B204 TURBO A	1	Hose clamp	Slangklamma	5
0170	19	75 93 221		31), B204 TURBO A, RHD	1	Tensioning band	Spännband	5
0180	20	• 46 47 624		1996-, B204 TURBO A	1	.Non-return valve	.Backventil	5
0190	35	41 98 412		1994	1	Brake servo	Bromsservo	6
0200	35	46 45 487		1995-	1	Brake servo	Bromsservo	6
0210	37	41 98 339			1	.O-ring	.O-ring	2
0220	38	41 98 354		1,2 MM	1	.Spacer white	.Distans vit	6
0230								
0240	38	41 98 362		2,4 MM	1	.Spacer green	.Distans grön	6
0250								
0260	38	41 98 370		3,6 MM	1	.Spacer blue	.Distans blå	6
0270								
0280	38	41 98 388		4,8 MM	1	.Spacer red	.Distans röd	6
0290								
0300	39	41 98 347			1	.Clamping ring	.Spännring	5
0310	3	41 98 396			2	.Nut	.Mutter	5
0320	4	41 98 503			1	.Sealing ring	.Tätningsring	4
0330								
0340	40	41 98 420			1	Pedal sensor	Pedalgivare	6
0350	37	41 98 339			1	.O-ring	.O-ring	2
0360	38	41 98 354		1,2 MM	1	.Spacer white	.Distans vit	6
0370								
0380	38	41 98 362		2,4 MM	1	.Spacer green	.Distans grön	6
0390								
0400	38	41 98 370		3,6 MM	1	.Spacer blue	.Distans blå	6
0410								
0420	38	41 98 388		4,8 MM	1	.Spacer red	.Distans röd	6
0430								
0440	39	41 98 347			1	.Clamping ring	.Spännring	5
0450								
0460	42	41 98 149			1	Pipe end	Stos	6
0470	43	89 58 357			1	Seal	Tätning	6
0480	45	44 25 773		I, 4-CYL	1	Vacuum hose	Vakuumslang	5
0490					1	8 mm Ø nipple, intake manifold	8 mm Ø nippel, inlopps-rör	
0500								
0510	46	44 25 468		-1994, TURBO	1	Vacuum pipe	Vakuumrör	5
0520	46	44 26 375		1995, TURBO	1	Vacuum pipe	Vakuumrör	5
0530	46	44 26 375		1996-, B204 TURBO M	1	Vacuum pipe	Vakuumrör	5
0540				1996-, B234 TURBO	1			
0550	46	*44 24 958*		1995-, I, 6-CYL NLS – USE 4645461	1	Vacuum pipe	Vakuumrör	5
0550								
0560	49			See page 2-081, 1-F10		Intake manifold	Inloppsrör	


30. Ch. -V1013467
31. Ch. V1013468-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

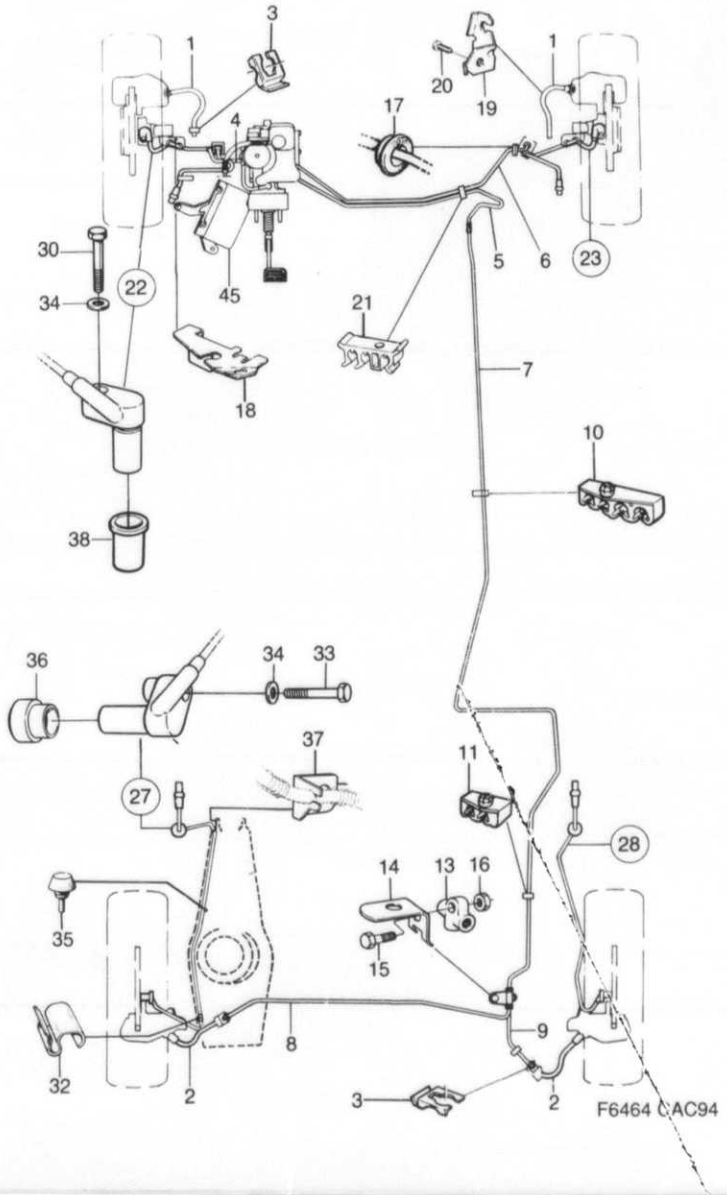

Footbrake system

3-K16

Brake lines ABS -1995, Mark II

Fotbromssystem

Bromsledningar ABS -1995, Mark II

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 02 341*		19) NLS – USE 4426490	2	Brake hose	Bromsslang	4
0025	1	44 26 490		20)	2	Brake hose	Bromsslang	4
0040	2	*89 69 206*		19) NLS – USE 4426508	2	Brake hose	Bromsslang	4
0050	2	44 26 508		20)	2	Brake hose	Bromsslang	4
0060	3	89 52 699			4	Bracket	Hållare	5
0090	4	40 01 970			1	Brake pipe	Bromsrör	5
0120	5	41 95 673			1	Brake pipe	Bromsrör	6
0135	6	41 95 681			1	Brake pipe	Bromsrör	6
0150	7	41 96 341			1	Brake pipe	Bromsrör	6
0170	8	41 05 946			1	Brake pipe	Bromsrör	6
0180	9	41 05 920			1	Brake pipe	Bromsrör	6
0200	10	*89 58 548*		NLS – USE 8968166	7	Tube clamp	Rörklamma	
0220	11	89 59 520			X	Tube clamp	Rörklamma	5
0260	13	89 64 686			1	T-piece	T-stycke	5
0280	14	41 05 961			1	Bracket	Fäste	5
0310	15	91 66 331			1	Screw	Skruv	5
0330	16	81 51 235			1	Nut	Mutter	5
0340	17	84 59 497			2	Plug	Plugg	5
0360	18	40 03 042		LH	1	Bracket	Hållare	5
0380	18	40 03 059		RH	1	Bracket	Hållare	5
0390	19	69 73 861			1	Bracket	Fäste	4
0400	20	79 71 294			1	Screw	Skruv	5
0410	21	41 94 221			3	Tube clamp	Rörklamma	5
0440	22	40 01 459		LH	1	Sensor	Givare	3
0460	23	40 01 467		RH	1	Sensor	Givare	3
0540	27	40 01 475		LH	1	Sensor	Givare	3
0560	28	40 01 483		RH	1	Sensor	Givare	3
0600	30	80 21 917			4	Screw	Skruv	5
0650	32	89 31 461			4	Clamp	Klammer	5
0660	33	80 21 925			2	Screw	Skruv	5
0690	34	91 66 364			4	Washer	Bricka	5
0710	35	89 44 795			2	Rubber plug	Gummiplugg	5
0720	36	89 63 019			2	Sleeve	Hylsa	5
0740	37	40 02 127		LH	1	Bracket	Hållare	5
0745	37	40 02 135		RH	1	Bracket	Hållare	5
0750	38	89 65 634			2	Sleeve	Hylsa	5
0760	45			See page 3A-105, 2-E10	1	Electronic unit	Elektronikenhet	5


19. Ch. -R1021299
20. Ch. R1021300-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

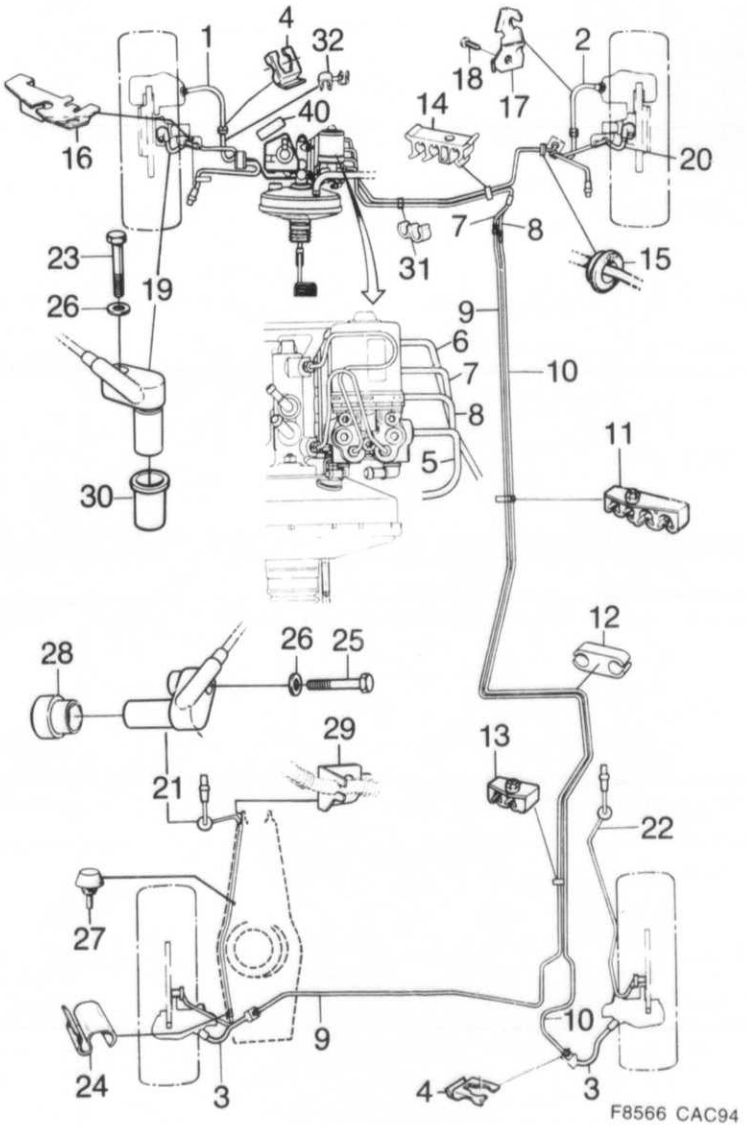

Footbrake system

3-K18

Brake lines ABS Mark IV

Fotbromssystem

Bromsledningar ABS Mark IV

0280	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*40 02 341*		19), LH NLS – USE 4426490	1	Brake hose	Bromsslang	4
0020	1	44 26 490		20), -1994, LH	1	Brake hose	Bromsslang	4
0021	1	44 26 474		1995-, LH	1	Brake hose	Bromsslang	4
0023	2	*40 02 341*		19), RH NLS – USE 4426490	1	Brake hose	Bromsslang	4
0026	2	44 26 490		20), -1994, RH	1	Brake hose	Bromsslang	4
0027	2	44 26 474		1995-, RH	1	Brake hose	Bromsslang	4
0030	3	*89 69 206*		19) NLS – USE 4426508	2	Brake hose	Bromsslang	4
0035	3	44 26 508		20)	2	Brake hose	Bromsslang	4
0040	4	89 52 699			4	Bracket	Hållare	5
0050	5	41 97 935		LH	1	Brake pipe	Bromsrör	4
0060	6	41 97 943		RH	1	Brake pipe	Bromsrör	4
0070	7	41 97 968		25), LH	1	Brake pipe	Bromsrör	4
0075	7	47 78 668		26), LH	1	Brake pipe	Bromsrör	4
0080	8	41 97 950		25), RH	1	Brake pipe	Bromsrör	4
0085	8	47 78 676		26), RH	1	Brake pipe	Bromsrör	4
0090	9	41 96 333		27), LH	1	Brake pipe	Bromsrör	6
0095	9	46 49 851		28), LH	1	Brake pipe	Bromsrör	6
0100	10	41 96 325		27), RH	1	Brake pipe	Bromsrör	6
0105	10	46 49 869		28), RH	1	Brake pipe	Bromsrör	6
0110	11	89 68 166			7	Tube clamp	Rörklamma	5
0120	12	89 58 530			3	Clamp	Klammer	5
0130	13	89 59 520			9	Tube clamp	Rörklamma	5
0140	14	41 94 221			3	Tube clamp	Rörklamma	5
0150	15	84 59 497			2	Plug	Plugg	5
0160	16	40 03 042		LH	1	Bracket	Hållare	5
0170	16	40 03 059		RH	1	Bracket	Hållare	5
0180	17	69 73 861			1	Bracket	Fäste	4
0190	18	79 71 294			1	Screw	Skruv	5
0200	19	40 01 459		-1995, LH	1	Sensor	Givare	3
0205	19	46 47 038		1996-, LH	1	Sensor	Givare	8
0210	20	40 01 467		-1995, RH	1	Sensor	Givare	3
0215	20	46 47 046		1996-, RH	1	Sensor	Givare	8
0220	21	40 01 475		-1995, LH	1	Sensor	Givare	3
0225	21	46 47 053		1996-, LH	1	Sensor	Givare	8
0230	22	40 01 483		-1995, RH	1	Sensor	Givare	3
0235	22	46 47 061		1996-, RH	1	Sensor	Givare	8
0240	23	80 21 917			2	Screw	Skruv	5
0250	24	89 31 461			4	Clamp	Klammer	5
0260	25	80 21 925			2	Screw	Skruv	5
0275	26	91 66 364			4	Washer	Bricka	5
0280	27	89 44 795			2	Rubber plug	Gummiplugg	5
0290	28	89 63 019			2	Sleeve	Hylsa	5
0295	29	40 02 127		LH	1	Bracket	Hållare	5
0300	29	40 02 135		RH	1	Bracket	Hållare	5
0310	30	89 65 634			2	Sleeve	Hylsa	5
0320	31	91 06 139			2	Tube clamp	Rörklamma	5
0330	32	73 99 272		1997-	2	Clamp	Klammer	5
0400	40			See page 3A-105, 2-E10	1	Electronic unit	Elektronikenhet	


19. Ch. -R1021299
20. Ch. R1021300-
25. Ch. -T1017091
26. Ch. T1017092-
27. Ch. -T1022496
28. Ch. T1022497-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

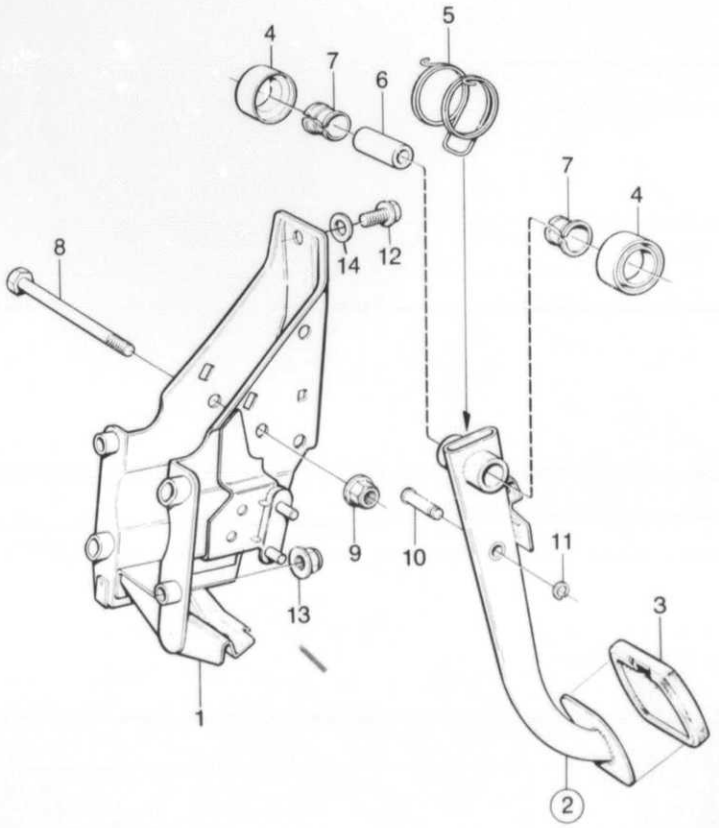

F6466 CAC94

0300	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0030	1	89 70 410			1	Bracket	Konsol	6
0035	1	40 00 410		-1995, TCS	1	Bracket	Konsol	6
0040	2	40 03 026		23)	1	Brake pedal	Bromspedal	6
0045	2	45 45 307		24)	1	Brake pedal	Bromspedal	6
0050	2	40 03 034		23), A	1	Brake pedal	Bromspedal	6
0055	2	45 45 315		24), A	1	Brake pedal	Bromspedal	6
0060	3	89 16 272			1	.Pedal pad	.Pedalgummi	5
0070	3	89 56 393		A	1	.Pedal pad	.Pedalgummi	5
0090	4	89 70 204			2	Spacer sleeve	Distanshylsa	5
0100	5	89 51 527			1	Spring	Fjäder	6
0120	6	89 50 297			1	Spacer tube	Distansrör	5
0140	7	89 62 128			2	Bearing bushing	Lagerbussning	4
0170	8	79 79 271			1	Screw	Skruv	5
0180	9	73 99 801			1	Lock nut	Låsmutter	5
0200	10	*89 56 443*		NLS - USE 4105821	1	Bolt	Bult	5
0220	11	82 52 553			1	Clip	Clips	5
0255	12	79 78 190			1	Screw	Skruv	5
0260	13	79 71 922			4	Nut	Mutter	3
0270	14	89 29 531			1	Sealing washer	Tätningsbricka	5

23. Ch. -R1030178
24. Ch. R1030179-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

3-K22

Brake operation RHD

Bromsmanövrering RHD

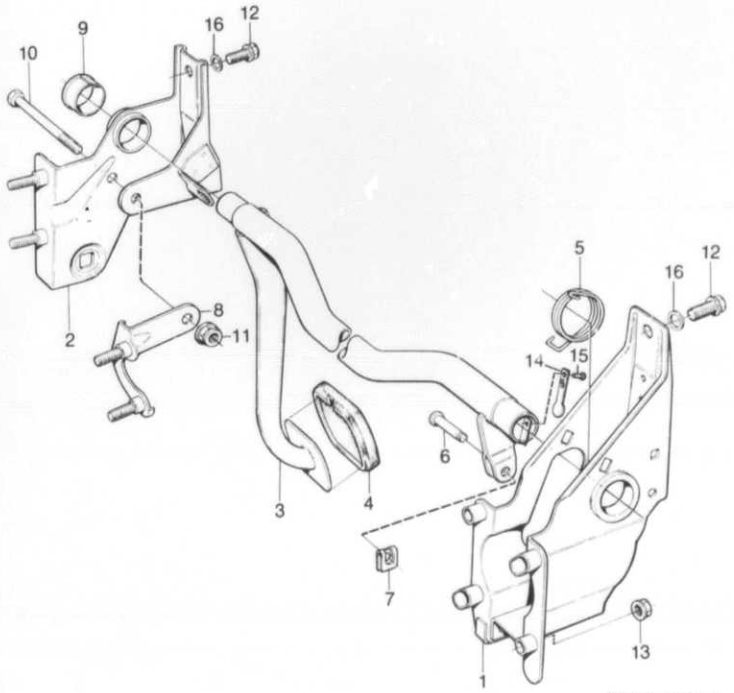

F6467 CAC94

0325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 65 600		LH	1	Bracket	Konsol	6
0030	1	41 05 268		-1995, LH, TCS	1	Bracket	Konsol	6
0050	2	89 70 444			1	Bracket	Konsol	6
0060	3	89 65 618			1	Brake pedal	Bromspedal	6
0070	3	89 65 626		A	1	Brake pedal	Bromspedal	6
0080	4	89 16 272			1	,Pedal pad	,Pedalgummi	5
0090	4	89 56 393		A	1	,Pedal pad	,Pedalgummi	5
0100	5	89 62 300			1	Return spring	Returfjäder	6
0120	6	*89 56 443*		NLS – USE 4105821	1	Bolt	Bult	5
0140	7	82 52 553			1	Clip	Clips	5
0160	8	85 57 482			1	Bracket	Konsol	6
0180	9	89 53 390			2	Plastic bushing	Plastbussning	6
0210	10	79 79 248			1	Screw	Skruv	5
0220	11	73 99 801			1	Lock nut	Låsmutter	5
0255	12	79 78 190			2	Screw	Skruv	5
0260	13	79 71 922			8	Nut	Mutter	3
0280	14	89 65 501			1	Stop	Anslag	6
0281						speed control system	farthållningssystem	
0300	15	79 22 800			1	Screw	Skruv	5
0310	16	89 29 531			2	Sealing washer	Tätningsbricka	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

3-K24 *Parking brake system* *Parkeringsbromssystem*

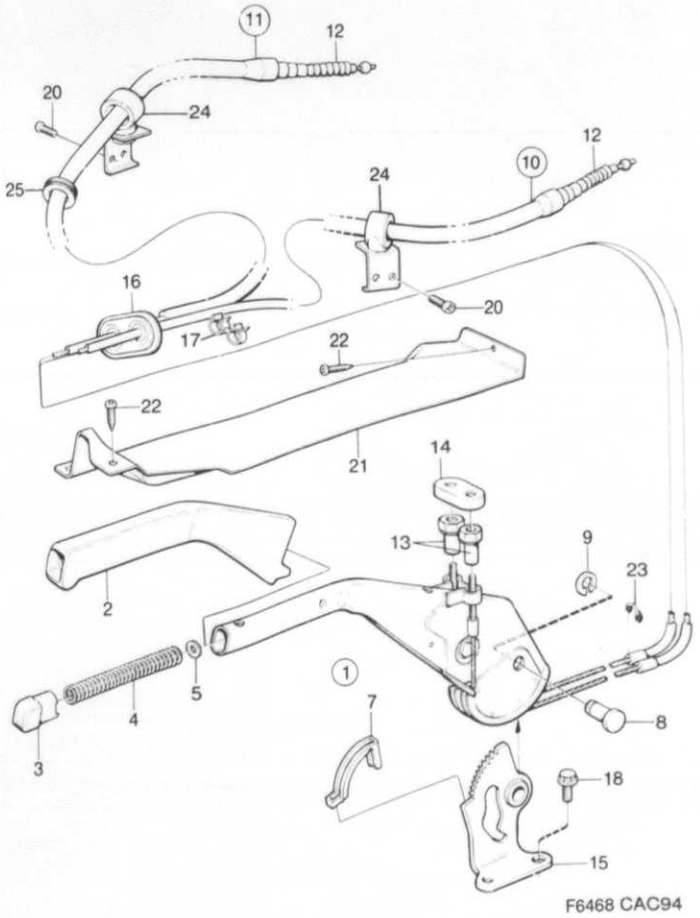

F6468 CAC94


0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 56 179			1	Handbrake lever	Handbromsspak	5
0060	2	89 62 649			1	.Handle	.Handtag	5
0080	3	89 53 788			1	.Push button	.Tryckknapp	5
0100	4	89 53 739			1	.Spring	.Fjäder	5
0120	5	80 29 969			1	.Washer	.Bricka	5
0160	7	89 61 062			1	Slide rail	Glidskena	4
0180	8	89 53 762			1	Bolt	Bult	5
0200	9	*79 15 077*		NLS - USE 7963143	1	E-circlip	Spårryttare	5
0242	10	89 67 481		LH	1	Parking brake cable	Parkeringsbromswire	4
0290	11	89 70 733		RH	1	Parking brake cable	Parkeringsbromswire	4
0300	12	89 54 455			2	.Bellows	.Bälg	2
0320	13	89 53 796			2	Adjusting nut	Justermutter	3
0340	14	89 53 879			1	Turn stop	Vridstopp	6
0360	15	89 53 689			1	Segment	Segment	6
0380	16	89 54 646			1	Grommet	Genomföring	5
0400	17	73 98 464			1	Clamp	Klammer	5
0420	18	79 67 938			2	Screw	Skruv	5
0460	20	79 72 805			2	Screw	Skruv	5
0480	21	97 64 044			1	Protection	Skydd	6
0500	22	79 72 805			3	Screw	Skruv	5
0520	23	89 66 608			1	Clamp	Klammer	5
0540	24	89 67 655			2	Bracket	Hållare	6
0560	25	89 70 725			1	Grommet	Genomföring	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

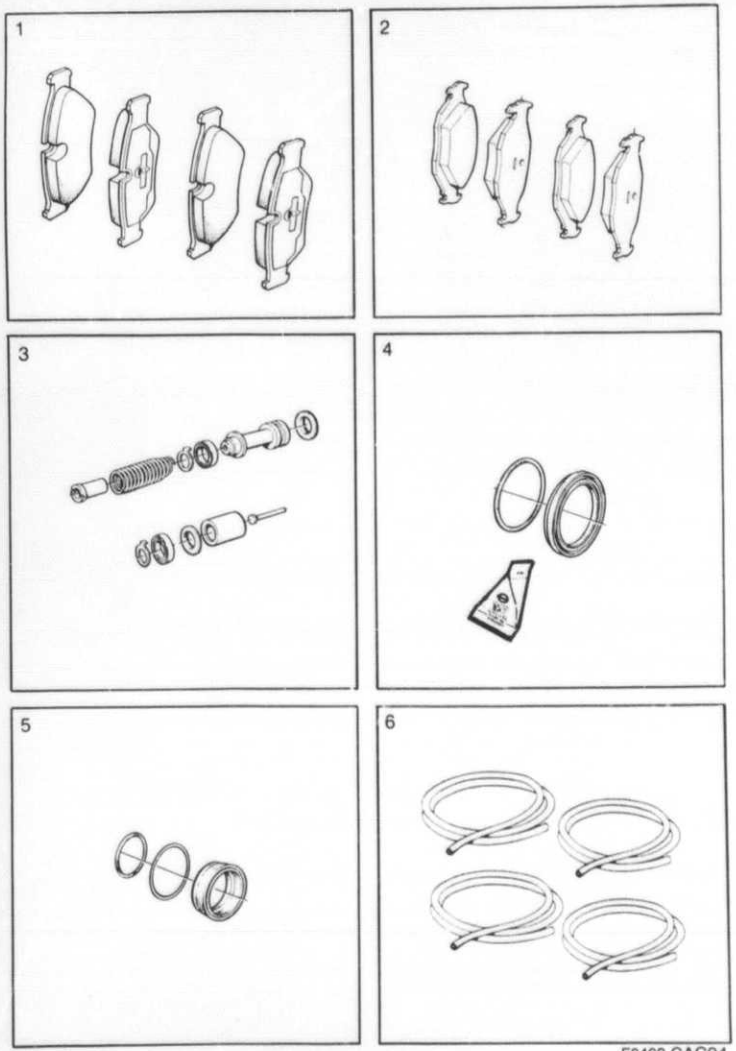

F6469 CAC94

Complete set
Brakes

Satser
Bromsar

3 -L02

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 68 976		15)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0020								
0030		89 69 412		1)	2	.Brake pad	.Bromsklots	1
0040		*89 69 446*		1) NLS	2	.Brake pad	.Bromsklots	1
0050								
0061	1	89 93 768		15)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0062								
0063		41 98 941		1)	2	.Brake pad	.Bromsklots	1
0064		41 98 958		1)	2	.Brake pad	.Bromsklots	1
0065								
0070	1	48 39 700		15)	X	Brake pad kit front brake	Bromsklotssats frambroms	1
0080								
0090		48 39 718		1)	2	.Brake pad	.Bromsklots	
0100		48 39 726		1)	2	.Brake pad	.Bromsklots	
0110								
0150	2	41 96 317		15)	X	Brake pad kit rear brake	Bromsklotssats bakbroms	1
0160								
0170		41 96 267		1)	2	.Brake pad	.Bromsklots	1
0180		41 96 275		1)	2	.Brake pad	.Bromsklots	1
0190								
0465	3	89 65 329			X	Sealing kit master cylinder	Tätningssats huvudcylinder	4
0466								
0467		89 65 782		1)	1	.Piston	.Kolv	6
0468		*89 86 911*		NLS - USE 4425229	2	.Gasket	.Packning	4
0469		89 86 986		1)	1	.Seal	.Tätning	6
0470		89 87 018		1)	1	.Sealing ring	.Tätningsring	6
0472		89 86 994		1)	1	.Seal	.Tätning	6
0473		89 65 808			1	.Pin	.Pinne	4
0475								
0610	4	89 68 968			X	Gasket kit front brake	Packningsats frambroms	2
0611								
0612		89 69 081		1)	1	.Gaiter	.Damask	2
0613		89 69 099		1)	1	.Seal	.Tätning	2
0614		89 55 536		1)	1	.Grease	.Fett	
0615								
0620	5	89 61 849			X	Gasket kit rear brake	Packningsats bakbroms	4
0640								
0660		89 55 288		1)	1	.Seal	.Tätning	6
0680		89 55 296		1)	1	.Gaiter	.Damask	6
0700		89 55 239		1)	1	.Ring	.Ring	6
0720								
0730	6	41 98 479		MARK IV	X	Hose kit	Slangsats	5
0740		*41 98 123*		1) NLS	1	.Hose	.Slang	5
0750		*41 98 131*		1) NLS	1	.Hose	.Slang	5
0760		*41 98 271*		1) NLS	1	.Hose	.Slang	5
0770		*41 98 289*		1) NLS	1	.Hose	.Slang	5


1. Not as separate spare part. Ej som separat reservdel.
15. See SI 500-1034 Se SI 500-1034


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


5 GROUP INDEX


Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

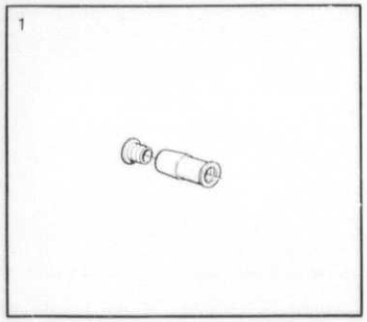


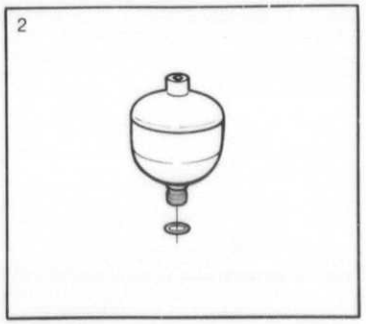

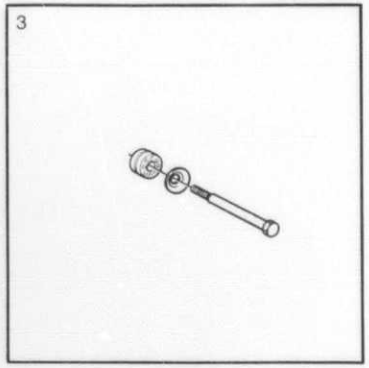

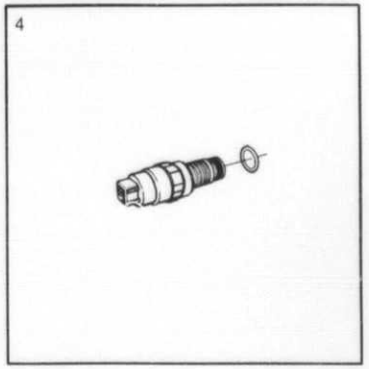

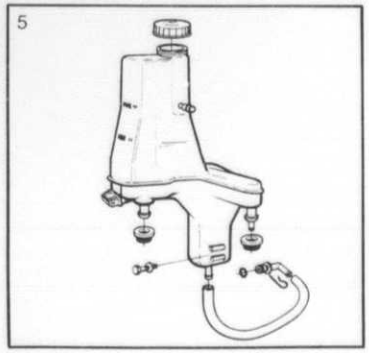

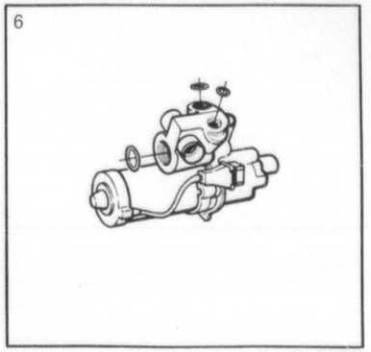

F6470 CAC94

Complete set
Brakes

Satser
Bromsar

3-L04

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	44 67 064			X	Guide	Styrning	3
	89 69 107			2	.Sleeve	.Hylsa	6
	89 55 478			2	.Cover	.Lock	3
2	40 02 267		-1995, TCS, M	X	Accumulator	Ackumulator	5
	40 01 814		1) NLS	1	.Accumulator	.Ackumulator	5
	89 67 234			1	.O-ring	.O-ring	2
	89 66 707		1)	1	.Label	.Etikett	6
3	40 02 895		-1995, TCS, M	X	Suspension kit	Upphängningssats	5
	91 04 811		1) NLS	2	.Bracket	.Upphängning	5
	89 66 236		1)	1	.Bracket	.Upphängning	5
	40 03 083		1) NLS	1	.Spacer	.Distans	5
	91 04 829		1)	1	.Screw	.Skruv	5
	91 04 944		1) NLS	2	.Sleeve	.Hylsa	6
	89 66 251		1) NLS	1	.Washer	.Bricka	5
4	89 67 309		29), 1994, TCS, M	X	Pressure monitor	Tryckvakt	4
	89 66 160		1) NLS	1	.Pressure monitor	.Tryckvakt	4
	89 67 325			1	.O-ring	.O-ring	2
4	89 94 071		1995, TCS, M	X	Pressure monitor	Tryckvakt	4
	46 68 737			1	.Shrink hose	.Krympslang	4
	89 67 309		1)	1	.Pressure monitor	.Tryckvakt	4
	89 94 089			1	.Assembly instruction	.Monteringsanvisning	
5	41 90 617		-1995, TCS, M	X	Reservoir	Behållare	6
	41 95 798		1)	1	.Bracket	.Hållare	5
	40 02 051		1) NLS	1	.Bracket	.Hållare	5
	40 02 861			1	.Hose kit	.Slangsats	5
	40 03 117			1	.O-ring	.O-ring	5
	91 04 738		1) NLS	1	.Nipple	.Nippel	
	91 04 746		1) NLS	1	.Hose	.Slang	
	44 25 740		1) NLS	1	.Reservoir	.Behållare	5
	44 25 690			1	.Cover	.Lock	4
	89 66 681		NLS - USE 8967390	1	.O-ring	.O-ring	4
	89 66 939		NLS - USE 8967390	1	.Sleeve	.Hylsa	6
	89 66 335			1	.Rubber bushing	.Gummibussning	6
	89 66 368			1	.Screw	.Skruv	5
6	40 03 158		-1995, TCS, M	X	Pump kit	Pumpsats	6
	40 03 166		1) NLS	1	.Pump motor	.Pumpmotor	6
	89 67 234			1	.O-ring	.O-ring	2
	89 67 325			1	.O-ring	.O-ring	2


1. Not as separate spare part. Ej som separat reservdel.
29. Superseded by 8994071. Ersatt av 8994071.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02

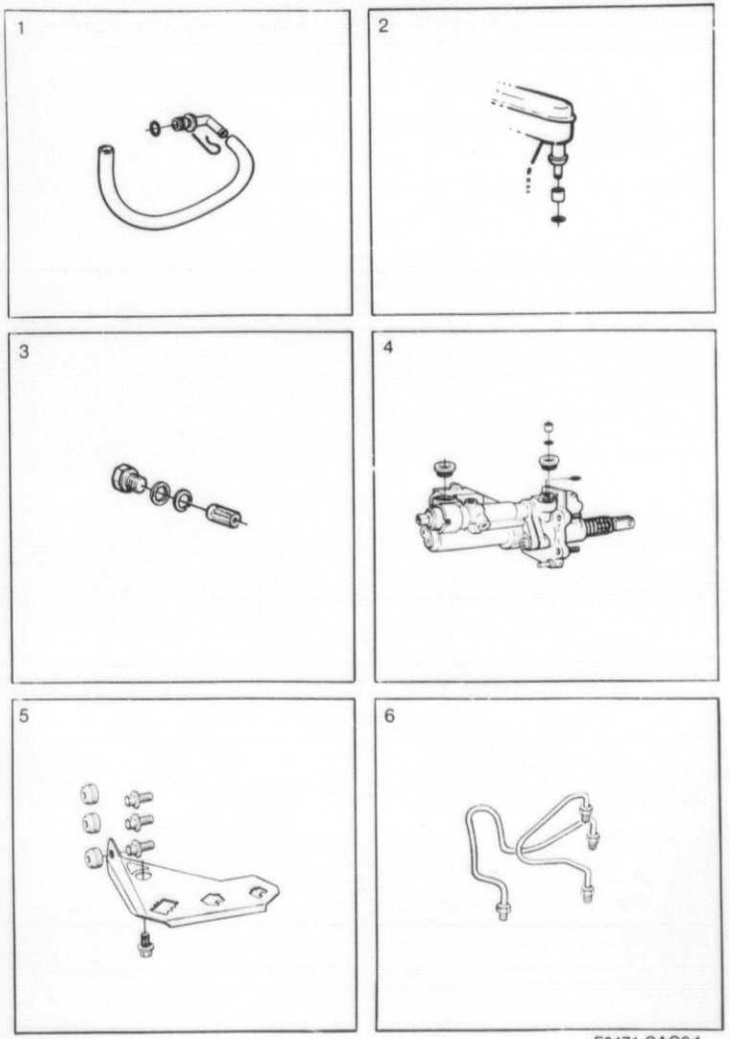

F6471 CAC94

Complete set
Brakes

Satser
Bromsar

3-L06

1100	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1322	1	40 02 861		-1995, TCS, M	X	Hose kit	Slangsats	5
1324		*91 04 746*		1) NLS	1	.Hose	.Slang	
1325		*91 04 738*		1) NLS	1	.Nipple	.Nippel	
1327		40 03 117			1	.O-ring	.O-ring	5
1329								
1330	2	89 67 390		-1995, TCS, M	X	O-ring kit	O-ringsats	2
1340		*89 66 681*		NLS - USE 8967390	1	.O-ring	.O-ring	4
1350		*89 66 939*		NLS - USE 8967390	1	.Sleeve	.Hylsa	6
1351								
1360	3	41 07 793			1	Adjuster kit rear brake	Justeringssats bakbroms	4
1365								
1370		41 07 801		1)	1	.Washer	.Bricka	5
1380		*89 55 304*		1) NLS - USE 4107793	1	.Adjustment screw	.Justerskruv	5
1390		89 55 312		1)	1	.Screw	.Skruv	5
1400		*89 70 147*		1) NLS - USE 4107793	1	.Stop ring	.Stoppring	5
1410								
1470	4	41 95 889		-1995, TCS, M	1	Master cylinder kit	Huvudcylindersats	6
1475				1)	1	.Master cylinder	.Huvudcylinder	
1477				1)	1	.TC-block	.TC-block	
1480		*89 67 267*		NLS - USE 8967408	1	.O-ring	.O-ring	2
1490		89 66 335			2	.Rubber bushing	.Gummibussning	6
1491		41 95 855			5	.O-ring	.O-ring	2
1492		80 74 106			3	.Nut	.Mutter	5
1500		89 67 390			1	.O-ring kit	.O-ringsats	2
1510								
1520	5	41 98 461		MARK IV	X	Attachment kit	Fästsats	6
1530		*41 98 065*		1) NLS	1	.Bracket	.Konsol	6
1540		*41 98 107*		1) NLS	3	.Rubber bushing	.Gummibussning	6
1550		*41 98 511*		1) NLS	1	.Screw	.Skruv	5
1560		*41 98 529*		1) NLS	3	.Screw	.Skruv	5
1570								
1580	6	41 98 487		MARK IV	X	Brake pipe	Bromsrör	6
1590		*41 98 081*		1) NLS	1	.Brake pipe	.Bromsrör	5
1600		*41 98 099*		1) NLS	1	.Brake pipe	.Bromsrör	5

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

5 GROUP INDEX

Front wheel brake	3-K06
Rear wheel brake	3-K08
Footbrake system	3-K10
Parking brake system	3-K24
Complete sets	3-L02



Front assembly, Steering
Framvagn, Styrinrättning
Tren delantero, Dirección

0041
0010
0020
0030
0040
0050
0060
0070
0080
0090
0095
0100
0105
0110
0140
0150
0160
0170
0180
0190

TABLE OF CONTENTS

Front wheel suspension		
Front wheel suspension	6 : 5	4-A06
Steering device		
Steering shaft	6 : 7	4-A08
Steering wheel, horn button	6 : 9	4-A10
Countershaft, bracket	6 : 11	4-A12
Power steering gear	6 : 13	4-A14
Hydraulic pump, hoses	6 : 17	4-A18
Belt tensioner	6 : 19	4-A20
Complete sets		
Front wheel suspension, steering device	6 : 21	4-A22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

4-A03

0042
0170
0180
0190
0200
0210
0220
0230
0240
0250
0255
0260
0265
0270
0300
0310
0320
0330
0340
0350
0680
0690
0700
0710
0720
0730
0735
0740
0745
0750
0780
0790
0800
0810
0820
0830

INNEHÅLLSFÖRTECKNING

Framvagn
Framvagn ..... 6 : 5 4-A06
Styrinrättning
Rattstång ..... 6 : 7 4-A08
Ratt, signalknapp ..... 6 : 9 4-A10
Mellanaxel, konsol ..... 6 : 11 4-A12
Servostyrväxel ..... 6 : 13 4-A14
Hydraulpump, slangar ..... 6 : 17 4-A18
Remspännare ..... 6 : 19 4-A20
Satser
Framvagn, styrinrättning ..... 6 : 21 4-A22

SUMARIO

Tren delantero
Tren delantero ..... 6 : 5 4-A06
Direccion
Barra volante ..... 6 : 7 4-A08
Volante, boton bocina ..... 6 : 9 4-A10
Eje intermedio, consola ..... 6 : 11 4-A12
Servomecanismo de direccion ..... 6 : 13 4-A14
Bomba hidraulica, mangueras ..... 6 : 17 4-A18
Tensor de correa ..... 6 : 19 4-A20
Juegos completos
Mecanismos delanteros, direccin, cambio en el volante ..... 6 : 21 4-A22


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-G02
5 Brakes 3-K02
6 Front assembly, Steering 4-A02
7 Suspension, Wheels 4-B02
8A Body, external 4-C02
8B Body, internal 5-A02
8C Body, heating and ventilation 5-J02
8D Tools, Labels 5-K02
10 Numerical register 6-A02

6 GROUP INDEX

Front wheel suspension 4-A06
Steering device 4-A08
Complete sets 4-A22

4-A06 *Front wheel suspension* *Framvagn*

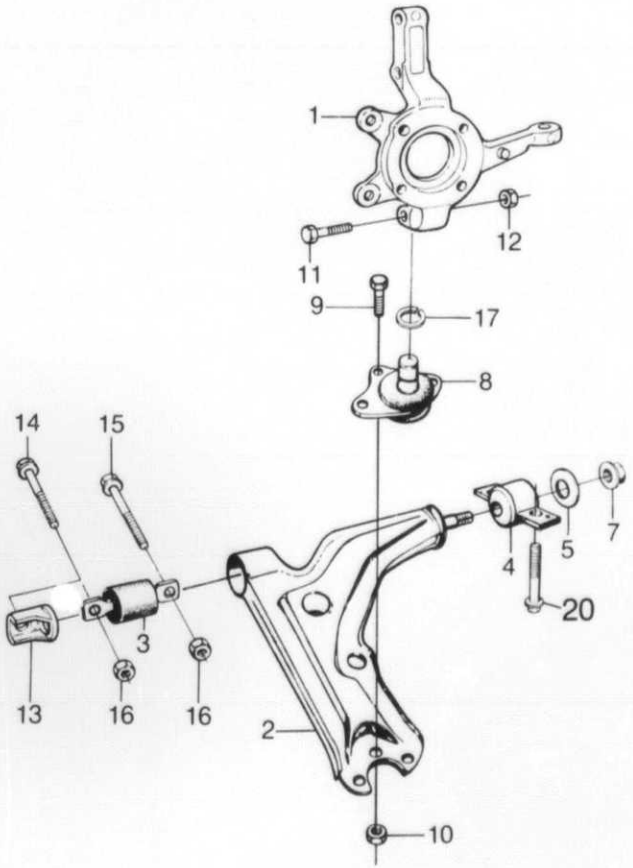

CAC94 F7580

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0050	1	89 73 216		LH	1	Steering knuckle housing	Styrspindelhus	5
0070	1	89 73 224		RH	1	Steering knuckle housing	Styrspindelhus	5
0090	2	89 58 365		LH	1	Swivel arm	Svängarm	4
0100	2	89 58 373		RH	1	Swivel arm	Svängarm	4
0110	3	89 61 476			2	Bushing	Bussning	5
0120	4	89 65 253			2	Bearing anchorage	Lagerfäste	5
0130	5	89 58 779			2	Washer	Bricka	5
0140	7	79 71 765			2	Nut	Mutter	5
0150	8	• 89 94 212		See page 6-021, 4-A22	2	Ball joint kit	Kulledsats	
0165	9	79 82 986			6	Screw	Skruv	5
0170	10	79 75 501			6	Nut	Mutter	5
0180	11	89 65 121			2	Screw	Skruv	5
0190	12	79 77 309			2	Nut	Mutter	3
0205	13	44 26 003			4	Bearing support	Lagerstöd	6
0215	14	79 82 036			2	Screw	Skruv	5
0220	15	40 01 111			2	Screw	Skruv	5
0230	16	*79 73 464*		NLS – USE 7978620	4	Nut	Mutter	3
0240	17	79 63 168			2	Lock ring	Låsring	5
0300	20			See page 8A-005, 4-C06		Screw	Skruv	

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

4 -A08

Steering shaft
Rattstång

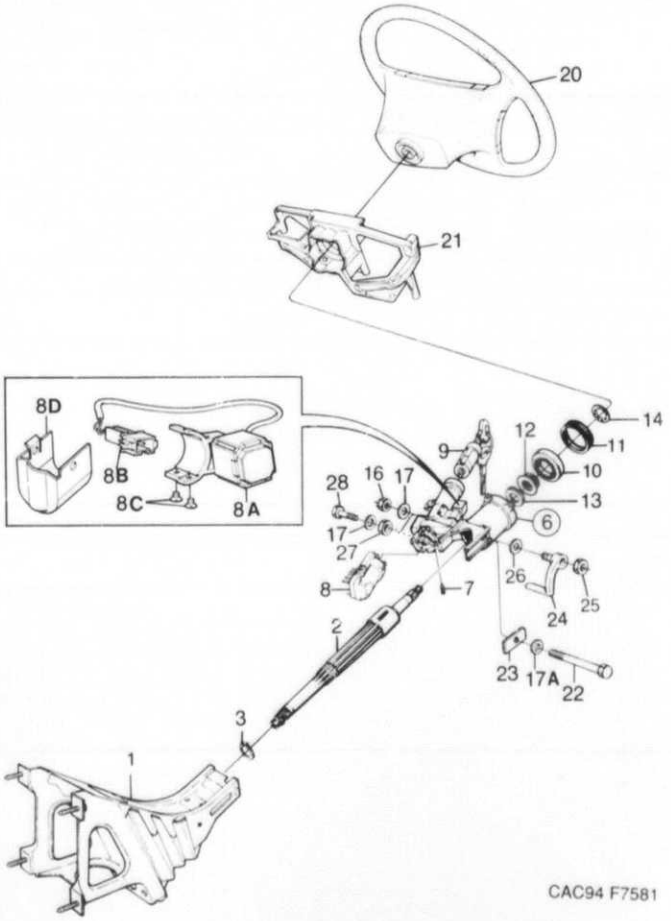

CAC94 F7581


0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 6-011, 4-A12		Bracket	Konsol	
0030	2	89 72 929			1	Steering shaft	Rattstång	5
0040	3	79 15 119			1	Retaining ring	Spårring	5
0050	6	40 02 648			1	Lock	Lås	6
0060	6	43 11 270		US, CA	1	Lock	Lås	6
0070	7	73 98 381			2	.Screw	.Skruv	5
0090	8	40 85 783			1	.Contact	.Kontakt	4
0100	8A	43 14 209		US, CA	1	.Solenoid	.Solenoid	5
0110	8B	41 17 172		US, CA	1	..Contact housing	..Kontakthus	4
0120	8C			US, CA	3	.	.	
0130	8D	44 16 368		US, CA	1	.Cover	.Täckkåpa	6
0140	9			See page 8A-057, 4-E10		Lock cylinder	Låscylinder	
0150	10	89 50 701			1	Ball bearing	Kullager	6
0160	11	89 50 172			1	Ring	Ring	5
0170	12	89 72 374			1	Bushing	Bussning	3
0180	13	40 00 360			1	Washer	Bricka	5
0190	14	89 54 281			1	Lock ring	Låsring	5
0210	16	73 98 324			1	Nut	Mutter	3
0220	17	80 73 108			X	Washer	Bricka	5
0230	17A	80 73 108		-1994, LHD	1	Washer	Bricka	5
0240	17A	80 73 264		-1994, RHD	1	Washer	Bricka	5
0270	20			See page 6-009, 4-A10		Steering wheel	Ratt	
0280	21			See page 3A-077, 2-D06		Holder	Hållare	
0290	22	89 69 032		-1994	1	Screw	Skruv	5
0300	23	89 69 024		-1994, LHD	1	Spacer	Distans	5
0310	23	44 15 972		-1994, RHD	1	Spacer	Distans	5
0320	24	45 31 679		1995-	1	Lever	Spak	
0330	25	79 71 922		1995-	1	Nut	Mutter	3
0340	26	45 31 687		1995-	1	Washer	Bricka	
0350	27	45 31 695		1995-	1	Washer	Bricka	
0360	28	80 84 063		1995-	1	Screw	Skruv	5


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

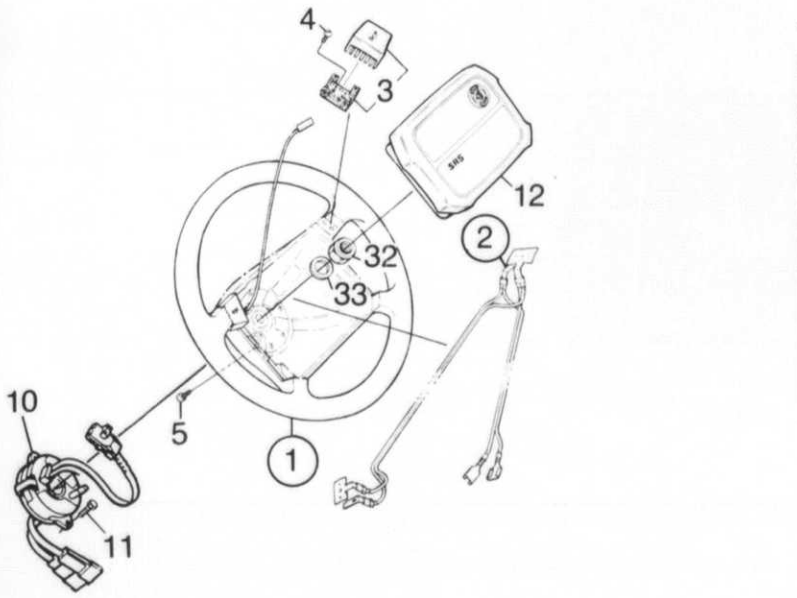

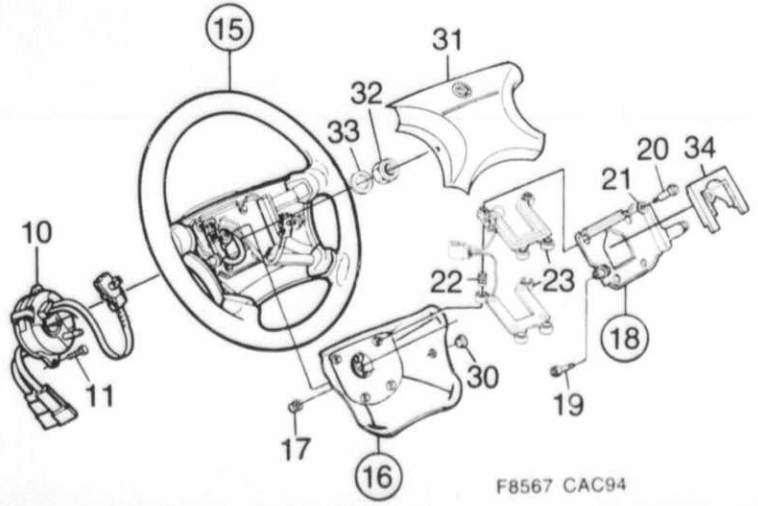

F8567 CAC94

Steering device

4-A10 *Steering wheel* *Horn button*

Styrinrättning

Ratt *Signalknapp*

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*42 33 169*		1994 NLS - USE 4507448	1	Steering wheel	Ratt	5
0020	1	42 02 065		1994, 40/400101895	1	Steering wheel leather	Ratt läder	5
0030								
0040	2	46 29 853		1994	1	.Cable	.Kabel	6
0050	3	40 03 372		LH, 1994	1	..Horn button	..Signalknapp	6
0060	3	40 03 380		RH, 1994	1	..Horn button	..Signalknapp	6
0070	4	89 68 703		1994	4	.Screw	.Skruv	5
0080	5	89 68 315		1994	2	.Screw	.Skruv	5
0090	10	44 16 582		28,35)	1	Contact unit	Kontaktenhet	6
0095	10	47 61 417		29,36)	1	Contact unit	Kontaktenhet	6
0097	10	48 47 299		37)	1	Contact unit	Kontaktenhet	6
0100	11	79 82 333			2	Screw	Skruv	5
0110	12	44 16 061		1994	1	Airbag module	Airbagmodul	5
0120								
0130	15	45 06 051		1995-1996	1	Steering wheel	Ratt	
0135	15	48 47 463		1997-	1	Steering wheel	Ratt	
0140	15	45 06 069		1995-1996, 40/400103677	1	Steering wheel leather	Ratt läder	
0150								
0151	15	48 47 471		1997-,	1	Steering wheel leather	Ratt läder	
0152								
0155	15	48 01 981		1997-	1	Steering wheel leather/wood	Ratt läder/trä	
0156								
0160	16	45 06 135		1995-1996	1	.Cover	.Kåpa	
0165	16	48 47 844		1997-	1	.Cover	.Kåpa	
0170	17	45 06 150		1995-	1	..Bushing	..Bussning	
0180	18	45 06 168		1995-1996	1	.Signal device	.Signalanordning	
0185	18	48 47 851		1997-	1	.Signal device	.Signalanordning	
0190	19	45 06 416		1995-,42)	1	..Screw	..Skruv	
0195	19	• 50 12 182		43)	1	..Screw	..Skruv	
0200	20	45 06 200		1995-	4	.Screw	.Skruv	
0210	21	45 06 218		1995-	4	.Rubber damper	.Gummidämpare	
0220	22	45 06 226		1995-	4	.Spring	.Fjäder	
0230	23	45 06 242		1995-1996	1	.Cable network	.Kabelnät	
0235	23	48 47 869		1997-	1	.Cable network	.Kabelnät	
0240	30	45 06 143		1995-	2	Cover	Täcklock	
0245	31	44 74 730		1995-197	1	Airbag module	Airbagmodul	
0250	31	• 50 13 313		1998-	1	Airbag module	Airbagmodul	
0255	31	46 57 292		34,1997-,44)	1	Airbag module	Airbagmodul	5
0257	31	• 50 11 762		34,45)	1	Airbag module	Airbagmodul	5
0260	32	89 54 315			1	Nut	Mutter	5
0270	33	80 30 058			1	Washer	Bricka	5
0280	34	47 61 300		38,39), A	1	Vibration damper	Vibrationsdämpare	
0290		50 10 269		40)	X	Kit	Sats	
0300				See page 6-021, 4-A22		disconnected passenger airbag	urkoppling passagerar airbag	
0310								
0320		• 50 10 236		41)	X	Service kit	Servicesats	5
0330				See page 6-021, 4-A22		disconnected driver airbag	urkoppling förarairbag	
0340								


28. Ch. -T1014351
29. Ch. T1014352-
34. For steering wheel 4801981. För ratt 4801981
35. Superseded by 4761417. Ersatt av 4761417
36. Ch. -V1000293
37. Ch. V1000294-
38. Ch. V1014202-
39. For steering wheel 4847463 and 4847471. För ratt 4847463 och 4847471
40. See SI 850-1737. Se SI 850-1737
41. See SI 850-1745. Se SI 850-1745
42. Ch. -V1021490
43. Ch. V1021491-
44. Ch. -V1026365
45. Ch. V1026366-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

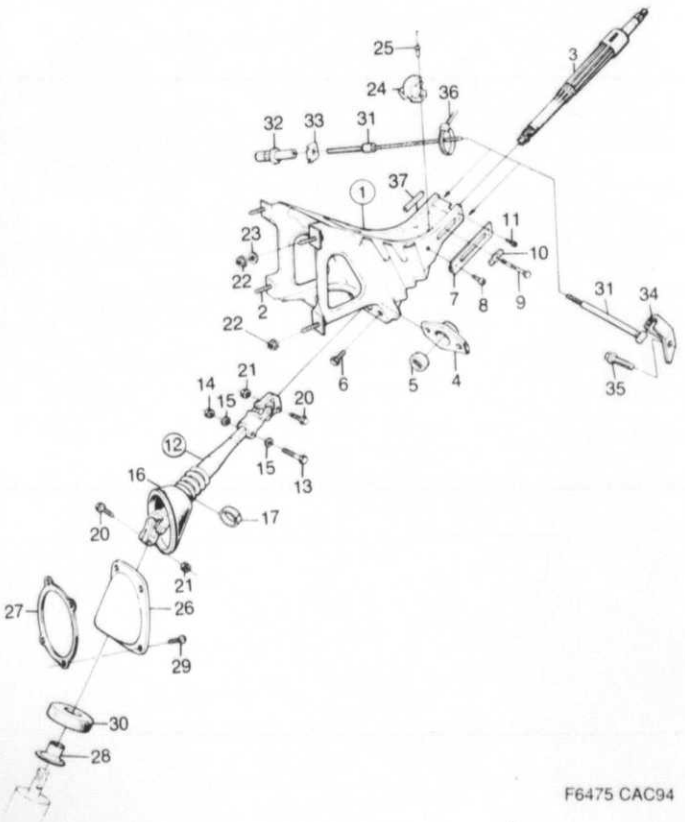

F6475 CAC94

Steering device
4-A12 Countershaft Bracket

Styrinrättning
Mellanaxel Konsol

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 02 994		-1995, US, CA	1	Bracket	Konsol	6
0020	1	48 01 619		1996-, US, CA	1	Bracket	Konsol	
0030	1	41 07 744		23)	1	Bracket	Konsol	6
0035	1	45 31 620		24), -1995	1	Bracket	Konsol	6
0040	1	48 01 601		1996-,	1	Bracket	Konsol	
0045	1	45 31 638		-1995, RHD	1	Bracket	Konsol	6
0047	1	48 01 593		1996-, RHD	1	Bracket	Konsol	
0050	2	*73 98 787*		NLS	4	,Screw	,Skruv	5
0060	3			See page 6-007, 4-A08		Steering shaft	Rattstång	
0070	4	89 52 194			1	Bearing housing	Lagerhus	6
0080	5	89 56 104			1	Needle bearing	Nållager	5
0090	6	73 99 934			2	Screw	Skruv	5
0100	7	89 71 657		1994	2	Slide rail	Glidskena	5
0110	7	89 71 343		1995-	2	Slide rail	Glidskena	5
0115	7	89 71 343		RHD	2	Slide rail	Glidskena	5
0120	8	79 74 512			2	Screw	Skruv	5
0130	9			See page 6-007, 4-A08		Screw	Skruv	
0140	10			See page 6-007, 4-A08		Spacer	Distans	
0150	11	79 73 753		42)	4	Screw	Skruv	5
0160	11	• 49 40 292		43)	4	Screw	Skruv	
0175	12	40 02 259		LHD	1	Countershaft	Mellanaxel	5
0195	12	40 02 234		RHD	1	Countershaft	Mellanaxel	5
0200	13	79 72 334		30)	1	,Hexagon screw	,Sexkantsskruv	5
0205	13	79 85 898		31)	1	,Hexagon screw	,Sexkantsskruv	5
0210	14	79 68 415			1	,Lock nut	,Låsmutter	3
0225	15	91 66 372			1	,Washer	,Bricka	5
0230	16	89 56 252		-1995	1	,Bellows	,Bälg	5
0235	16	48 46 408		1996-	1	,Bellows	,Bälg	5
0240	17	40 01 400			1	,Bushing	,Bussning	3
0250	20	79 72 334			2	Hexagon screw	Sexkantsskruv	5
0260	21	79 68 415			2	Lock nut	Låsmutter	3
0270	22	79 79 602		-1996	4	Nut	Mutter	5
0275	22	79 71 922		1997-	4	Nut	Mutter	3
0280	23	73 98 852		-1995	1	Washer	Bricka	5
0285	23	79 82 317		1996-	1	Washer	Bricka	5
0290	24	89 55 809			1	Bracket	Hållare	6
0300	25	*79 61 675*		NLS - USE 9449752	2	Rivet	Nit	5
0310	26	89 56 211		1994	1	Protecting casing	Skyddskåpa	6
0315	26	45 32 859		1995-	1	Protecting casing	Skyddskåpa	6
0320	27	89 56 245			2	Seal	Tätning	5
0330	28	89 56 534			1	Bushing	Bussning	3
0340	29	79 71 294		-1995	4	Screw	Skruv	5
0341	29	79 72 607		1996-	4	Screw	Skruv	5
0350	30	89 67 572		1994	1	Seal	Tätning	5
0355	30	46 29 523		1995-	1	Seal	Tätning	5
0360	31	95 86 900			1	Cable	Wire	5
0370	32	91 01 221			1	Adjusting nut	Justermutter	3
0380	33	95 87 171			1	Washer	Bricka	5
0390	34	95 86 918			1	Bracket	Fäste	5
0400	35	97 94 132		1994	1	Screw	Skruv	5
0405	35	79 76 897		1995-	1	Screw	Skruv	5
0410	36	79 71 864			1	Tensioning band	Spännband	5
0420	37	95 19 737			1	Protecting moulding	Skyddslist	5


23. Ch. -R1019449
24. Ch. R1019450-
30. Ch. -T1018629
31. Ch. T1018630-
42. Ch. -V1021490
43. Ch. V1021491-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

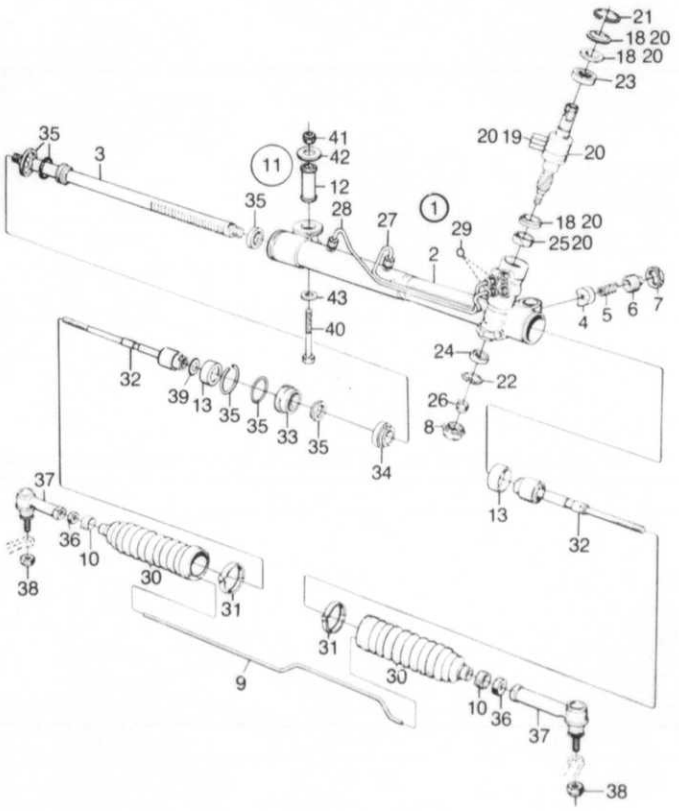

F6476 CAC94

Steering device

4-A14

Power steering gear

Styrinrättning

Servostyrväxel

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	41 05 052		7)	1	Steering gear	Styrväxel	4
1	89 93 669		21)	1	Steering gear	Styrväxel	4
1	41 05 060		7), RHD	1	Steering gear	Styrväxel	4
2	40 04 842		1)	1	.Steering gear	.Styrväxel	4
3	41 05 508			1	..Rack	..Kuggstång	6
3	41 05 516		RHD	1	..Rack	..Kuggstång	6
4	41 99 923			1	..Plunger	..Plunge	4
5	89 63 985			1	..Spring	..Fjäder	6
6	89 37 021			1	..Screw	..Skruv	5
7	89 37 039			1	..Lock nut	..Låsmutter	3
8	89 55 742			1	..Cap	..Kapsel	2
9	89 55 718			1	..Pipe	..Rör	4
10	89 37 161			2	..Clamp	..Klämma	5
11	89 93 511			1	..Rubber bushing kit	..Gummibussningssats	3
12	89 34 119			2	...Rubber bushing	...Gummibussning	3
13	89 36 684			2	..Ring	..Ring	4
18	41 04 501			X	..Sealing kit pinion	..Tätningssats pinjong	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 006	S	1)	1	...Seal	...Tätning	3
19	41 04 519			X	..Sealing kit pinion	..Tätningssats pinjong	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
20	41 04 543		LHD	X	..Repair kit pinion	..Reparationssats pinjong	4
	41 03 933	S	1)	1	...Valve	...Ventil	3
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 006	S	1)	1	...Seal	...Tätning	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
25	41 04 030	S		1	...Bushing	...Bussning	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
20	41 04 568		RHD	X	..Repair kit pinion	..Reparationssats pinjong	4
	41 03 941	S	1)	1	...Valve	...Ventil	3
	41 03 990	S	1)	1	...Seal	...Tätning	3
	41 04 006	S	1)	1	...Seal	...Tätning	3
	41 04 022	S	1)	1	...Seal	...Tätning	3
25	41 04 030	S		1	...Bushing	...Bussning	3
	89 36 882	S	1)	4	...Teflon ring	...Teflonring	3
21	89 36 908			1	..Lock ring	..Låsring	5
22	89 36 973			1	..Lock ring	..Lasring	5
23	89 93 932			1	..Needle bearing	..Nållager	6
24	89 36 965			1	..Ball bearing	..Kullager	6
25	41 04 0..			1	..Bushing	..Bussning	3
26	41 04 162			1	..Lock nut	..Låsmutter	5
27	41 05 565		LHD	X	..Pipe set short	..Rörsats kort	4
	89 62 565	S	1)	1	...Pipe	...Rör	
29	41 04 014	S		1	...O-ring	...O-ring	3
27	41 05 581		RHD	X	..Pipe set short	..Rörsats kort	4
	89 64 090	S	1)	1	...Pipe	...Rör	

1. Not as separate spare part. Ej som separat reservdel.
7. Also available as exchange unit. Finns även som utbytesenhet.
21. Only for cars that will be repaired in USA. Endast för bilar som repareras i USA

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22


Steering device

4-A16

Power steering gear

Styrinrättning

Servostyrväxel

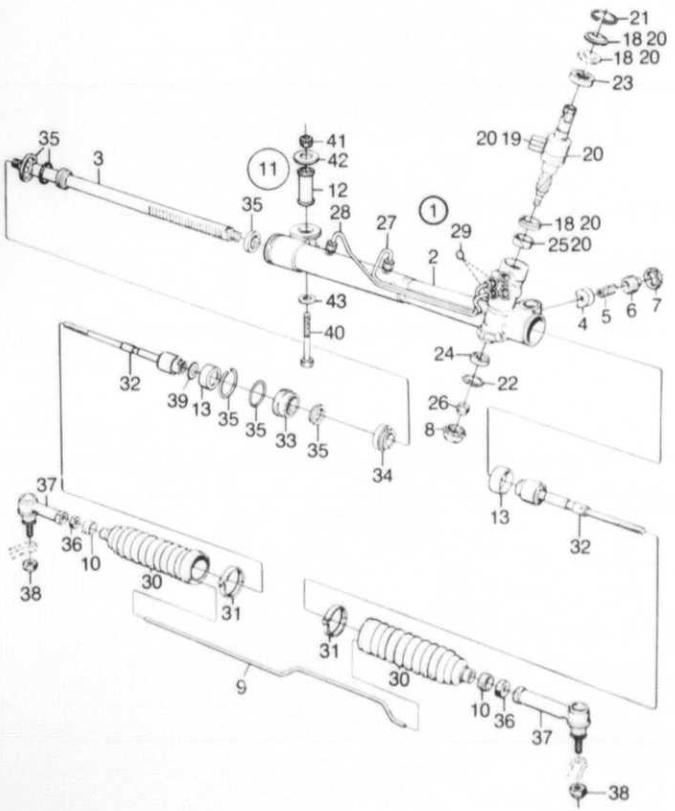

F6476 CAC94

0275	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920	29	41 04 014	S		1	...O-ring	...O-ring	3
0930								
0940	28	41 05 573		LHD	X	..Pipe set long	..Rörsats långt	4
0950								
0960		89 62 573		1)	1	...Pipe	...Rör	
0970	29	41 04 014	S		1	...O-ring	...O-ring	3
0980								
0990	28	41 05 599		RHD	X	..Pipe set long	..Rörsats långt	4
1000								
1010		89 64 082	S	1)	1	...Pipe	...Rör	
1020	29	41 04 014	S		1	...O-ring	...O-ring	3
1030								
1040	30	89 62 243		LH	X	..Bellows	..Bälg	3
1050		89 55 692		1)	1	...Bellows	...Bälg	
1060	31	89 61 310			1	...Clamp	...Klammer	5
1080								
1090	30	89 62 516		RH	X	..Bellows	..Bälg	3
1100		89 62 524		1)	1	...Bellows	...Bälg	
1110	31	89 61 310			1	...Clamp	...Klammer	5
1130								
1140	32	89 62 250			X	..Steering rod	..Styrstag	4
1150		89 55 650		1)	1	...Steering rod	...Styrstag	
1160	13	89 36 684			1	...Ring	...Ring	4
1170	31	89 61 310			1	...Clamp	...Klammer	5
1180	10	89 37 161			1	...Clamp	...Klämma	5
1190								
1200	33	89 55 619			1	..End plate	..Gavel	5
1210	34	89 55 635			1	..Bushing	..Bussning	5
1220								
1230	35	41 04 527			X	..Sealing kit rack	..Tätningssats kuggstång	3
1240								
1250		41 03 958		1)	1	...O-ring	...O-ring	3
1260		41 03 966		1)	1	...Seal	...Tätning	3
1270		41 03 974		1)	1	...Seal	...Tätning	3
1280		41 03 982		1)	1	...O-ring	...O-ring	3
1290		89 37 070		1)	1	...Piston ring	...Kolvring	5
1300		89 70 873		1)	1	...Piston ring	...Kolvring	5
1310		89 55 643		1)	1	...Lock ring	...Låsring	5
1320	31	89 61 310			2	...Clamp	...Klammer	5
1330								
1340	36	89 72 309			2	Nut	Mutter	5
1350	37	89 93 453		See page 6-021, 4-A22	2	Drag link end	Styrstagsända	2
1360	38	81 51 482	S		2	.Lock nut	.Låsmutter	5
1370	39	89 46 360		11)	X	Spacer washer	Distansbricka	5
1380	40	89 65 956			2	Screw	Skruv	5
1390	41	81 51 482			2	Lock nut	Låsmutter	5
1400	42	89 34 259			2	Washer	Bricka	5
1410	43	80 73 116		RH	1	Washer	Bricka	5


1. Not as separate spare part. Ej som separat reservdel.
11. See Service Manual, group 6. Se verkstadshandbok, grupp 6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

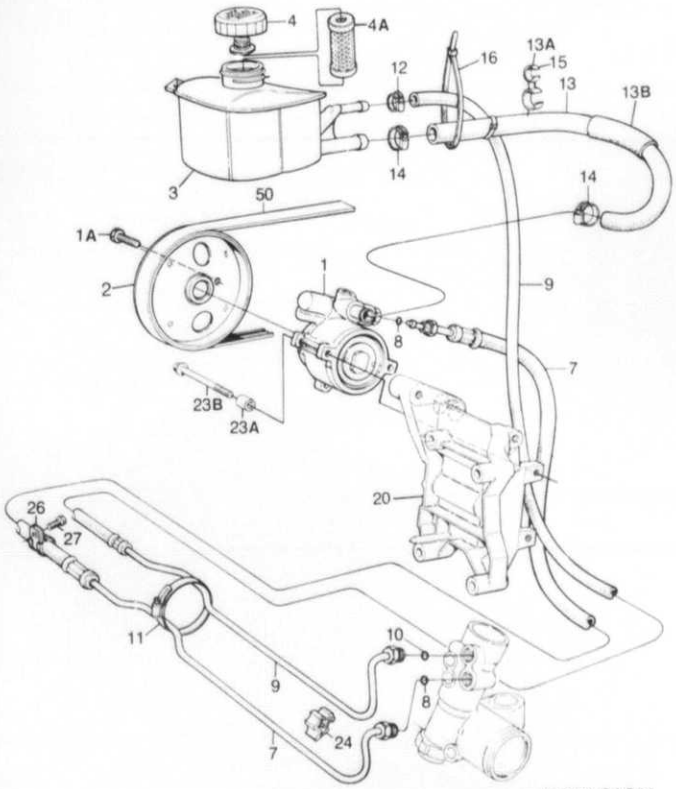

F8200 CAC94

Steering device

4-A18 Hydraulic pump

Styrinrättning

Hydraulpump

0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 05 037		32), 4-CYL	1	Hydraulic pump	Hydraulpump	3
0015	1	46 47 426		33), 4-CYL	1	Hydraulic pump	Hydraulpump	3
0020	1	41 96 226		1995-,25), 6-CYL	1	Hydraulic pump	Hydraulpump	3
0022	1	46 47 418		26), 6-CYL	1	Hydraulic pump	Hydraulpump	3
0025	1A	87 41 449		1995-, 6-CYL	3	.Screw	.Skruv	5
0030	2	75 73 694		-1995, 4-CYL	1	Pulley	Remskiva	3
0035	2	45 28 717		1996-, 4-CYL	1	Pulley	Remskiva	3
0040	2	41 65 171		1995-, 6-CYL (4165197)	1	.Pulley	.Remskiva	
0050	3	41 92 993		4-CYL	1	Reservoir	Behållare	4
0060	3	44 24 800		1995-, 6-CYL	1	Reservoir	Behållare	4
0070	4	41 93 900			1	.Cover	.Lock	5
0080	4A	41 93 199			1	.Filter cartridge	.Filterpatron	3
0090	7	89 71 426		4-CYL	1	Hose	Slang	4
0100	7	41 96 242		1995-, 6-CYL	1	Hose	Slang	4
0110	7	40 01 715		RHD, 4-CYL	1	Hose	Slang	4
0120	7	44 25 104		1995-, RHD, 6-CYL	1	Hose	Slang	4
0130	8	41 04 048		4-CYL	2	.O-ring	.O-ring	3
0140	8	79 77 580		6-CYL	2	.O-ring	.O-ring	2
0150	9	41 90 179		4-CYL	1	Hose	Slang	4
0160	9	41 96 036		1995-, 6-CYL	1	Hose	Slang	4
0170	9	41 90 187		RHD, 4-CYL	1	Hose	Slang	4
0180	9	41 96 010		1995-, RHD, 6-CYL	1	Hose	Slang	4
0190	10	79 77 580			1	.O-ring	.O-ring	2
0200	11	79 70 130		4-CYL, LHD	1	Hose clamp	Slangklamma	5
0210	11	79 70 148		1995-, 6-CYL, LHD	1	Hose clamp	Slangklamma	5
0220	11	79 70 122		RHD	1	Hose clamp	Slangklamma	5
0230	12	79 70 049			1	Hose clamp	Slangklamma	5
0240	13	41 90 120		4-CYL	1	Hose	Slang	5
0250	13	44 25 120		1995-, 6-CYL	1	Hose	Slang	5
0260	13	45 44 748		8), 1995-, 6-CYL	1	Hose	Slang	5
0270	13A	41 94 379		4-CYL	2	.Clamp	.Klammer	5
0280	13B	44 24 602		4-CYL	1	.Wear protection	.Skavskydd	5
0290	14	79 70 072			2	Hose clamp	Slangklamma	5
0295	15	73 98 530		27), 6-CYL	1	Clamp	Klammer	5
0300	16	79 71 898			1	Tensioning band	Spännband	5
0310						80 A alternator	80 A generator	
0320	20			See page 6-019, 4-A20	1	Bracket	Konsol	
0330	23A			See page 6-019, 4-A20		Bushing	Bussning	
0340	23B	79 78 349		4-CYL	2	Screw	Skruv	5
0350	23B	79 82 523		1995-, 6-CYL	2	Hexagon screw	Sexkantsskruv	5
0360	24	40 01 681		4-CYL	1	Spacer bushing	Distansbussning	5
0370	26	79 69 488		4-CYL	1	Clamp	Klammer	5
0380	26	79 69 363		1995-, 6-CYL	1	Clamp	Klammer	5
0390	27	79 22 438		4-CYL	1	Screw	Skruv	5
0400	27	79 72 466		1995-, 6-CYL	1	Screw	Skruv	5
0410	50			See page 3A-011, 2-A12	1	Belt	Rem	
0420		41 04 766		32), 4-CYL	X	Sealing kit	Tätningssats	3
0430				See page 6-021, 4-A22		hydraulic pump	hydraulpump	
0440		46 49 745		33), 4-CYL	X	Sealing kit	Tätningssats	
0450				See page 6-021, 4-A22		hydraulic pump	hydraulpump	


8. For tropical market; ME, LA, AU, HK, SG, TH, CY — För tropisk marknad: ME, LA, AU, HK, SG, TH, CY
25. Ch. -T1006582
26. Ch. T1006583-
27. Ch. T1014344-
32. Ch. -T1025654
33. Ch. T1025655-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

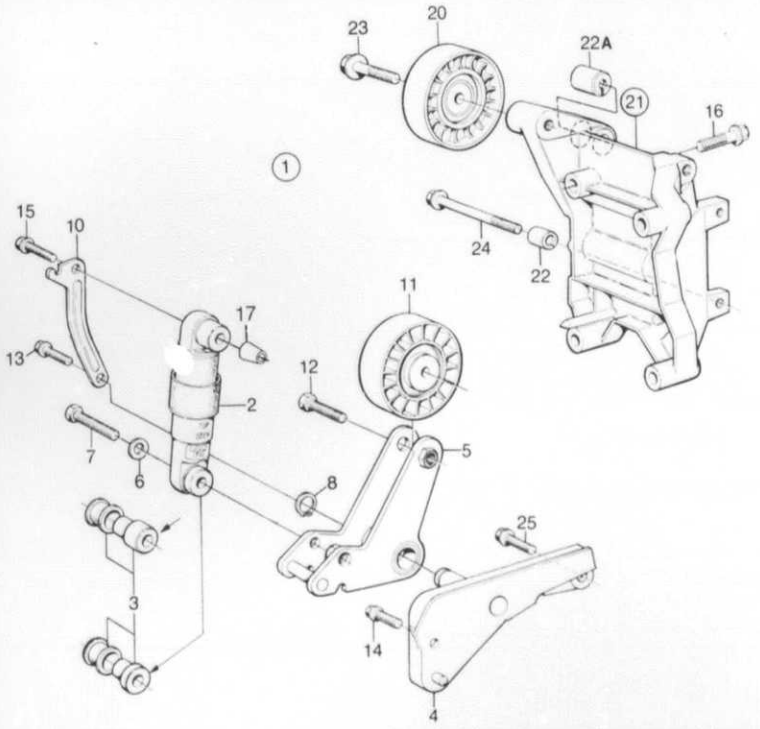

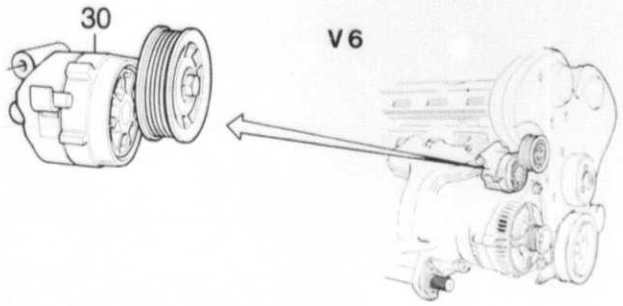

F8263 CAC94

Steering device

4-A20

Belt tensioner

Styrinrättning

Remspännare

0450	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 29 609		42), 4-CYL	1	Belt tensioner	Remspännare	5
0015	1	• 49 01 443		43), 4-CYL	1	Belt tensioner	Remspännare	5
0020	2	40 28 064		42)	1	.Absorber	.Dämpare	5
0025	2	• 49 01 419		43)	1	.Absorber	.Dämpare	5
0030	3	40 29 989		42)	1	..Bushing kit	..Bussningsats	5
0031				See page 6-021, 4-A22				
0035	3	• 49 01 476		43)	1	..Bushing kit	..Bussningsats	5
0036				See page 6-021, 4-A22				
0045	4	43 58 149			1	.Foundation platform	.Grundplattform	5
0050	5	40 29 799			1	.Tensioning arm	.Spännarm	5
0065	6	91 66 372			1	.Washer	.Bricka	5
0070	7	80 83 941			1	.Screw	.Skruv	5
0080	8	80 47 748			1	.Retaining ring	.Spårring	5
0100	10	40 27 694		4-CYL	1	Stay	Stag	5
0110	11	40 29 930		4-CYL	1	Tension pulley	Spännrulle	5
0120	12	40 29 864		4-CYL	1	Screw	Skruv	5
0130	13	79 78 208		4-CYL	1	Screw	Skruv	5
0140	14	79 78 232		4-CYL	2	Screw	Skruv	5
0151	15	79 82 119		4-CYL	1	Screw	Skruv	5
0155	16	79 78 257		4-CYL	4	Screw	Skruv	5
0160	17	48 76 751		4-CYL	1	Sleeve	Hylsa	5
0165	20	75 92 017		4-CYL	1	Tension pulley	Spännrulle	3
0170	21	75 93 049		4-CYL	1	Bracket	Konsol	5
0180	22	75 93 072			2	.Bushing	.Bussning	5
0185	22A	75 93 080			1	.Bushing	.Bussning	6
0190	23	79 78 299		4-CYL	1	Screw	Skruv	5
0200	24			See page 6-017, 4-A18	2	Screw	Skruv	
0210	25	80 56 194		4-CYL	1	Screw	Skruv	5
0300	30			See page 2-035, 1-D12		Belt tensioner	Remspännare	


42: Ch. -V1021490
43. Ch. V1021491-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22

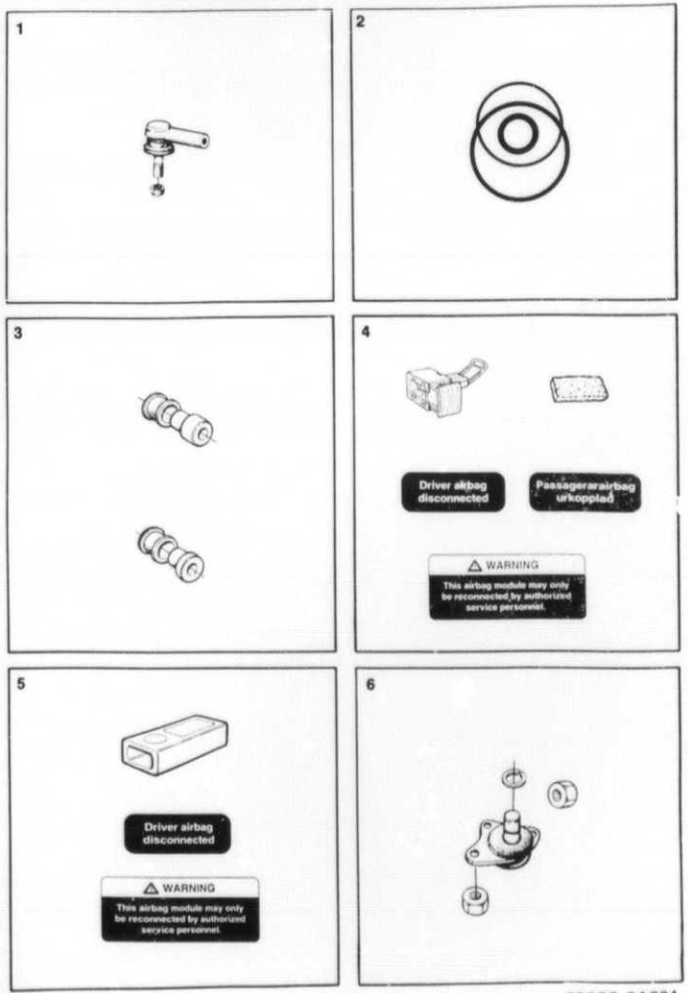

F8638 CAC94

Complete sets

4-A22

Fore carriage
Steering device

Satser

Framvagn
Styrinrättning

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	89 93 453			X	Drag link end	Styrstagsända	2
0020		89 57 839			1	.Drag link end	.Styrstagsända	2
0030		81 51 482			1	.Lock nut	.Låsmutter	5
0040								
0050	2	41 04 766		32), 4-CYL	X	Sealing kit hydraulic pump	Tätningssats hydraulpump	3
0060								
0070		41 04 709		1)	1	.O-ring	.O-ring	2
0080		41 04 717		1)	1	.O-ring	.O-ring	3
0090		41 04 725		1)	1	.O-ring	.O-ring	3
0100		41 04 733		1)	1	.O-ring	.O-ring	3
0110		41 04 741		1)	1	.Seal	.Tätning	3
0120								
0130	2	46 49 745		33), 4-CYL	X	Sealing kit hydraulic pump	Tätningssats hydraulpump	
0140								
0150		41 04 709		1)	1	.O-ring	.O-ring	2
0160		41 04 717		1)	1	.O-ring	.O-ring	3
0170		41 04 725		1)	1	.O-ring	.O-ring	3
0180		41 04 733		1)	1	.O-ring	.O-ring	3
0190		46 49 778		1)	1	.Seal	.Tätning	3
0200								
0210	3	40 29 989		42)	X	Bushing kit	Bussningsats	5
0220		40 28 197		1)	1	.Bushing	.Bussning	5
0230		40 28 080		1)	2	.Bushing	.Bussning	5
0240		40 28 205		1)	1	.Bushing	.Bussning	5
0250								
0251	3	• 49 01 476		43)	X	Bushing kit	Bussningsats	5
0252		40 28 197		1)	1	.Bushing	.Bussning	5
0253		• 49 01 401		1)	2	.Bushing	.Bussning	5
0254		40 28 205		1)	1	.Bushing	.Bussning	5
0255								
0260	4	50 10 269		40)	X	Kit disconnected passenger airbag	Sats urkoppling passagerar airbag	
0270								
0280								
0290		44 30 153			1	.Resistor	.Motstånd	6
0300		45 09 576			1	.Spacer	.Mellanlägg	
0310		50 10 053			1	.Label	.Etikett	
0320		50 10 079			1	.Label	.Etikett	
0330		50 10 087			1	.Label	.Etikett	
0340		79 71 880			1	.Tensioning band	.Spännband	4
0350								
0360	5	• 50 10 236		41)	X	Service kit disconnected driver airbag	Servicesats urkoppling förarairbag	5
0370								
0380								
0390		45 09 576			1	.Spacer	.Mellanlägg	
0400		• 49 01 104		1)	1	.Tape	.Tejp	5
0410		• 50 10 061			1	.Label	.Etikett	
0420		50 10 087			1	.Label	.Etikett	
0430		• 50 10 228			1	.Resistor	.Motstånd	6
0440								
0450	6	• 89 94 212			X	Ball joint kit	Kulledsats	
0460		79 63 168			1	.Lock ring	.Låsring	5
0470		79 75 501			?	.Nut	.Mutter	5
0480		79 77 309			1	.Nut	.Mutter	3
0490		89 72 135		1)	1	.End piece	.Ändstycke	2

1. Not as separate spare part. Ej som separat reservdel.
32. Ch. -T1025654
33. Ch. T1025655-
40. See SI 850-1737 Se SI 850-1737
41. See SI 850-1745 Se SI 850-1745
42. Ch. -V1021490
43. Ch. V1021491-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 GROUP INDEX

Front wheel suspension	4-A06
Steering device	4-A08
Complete sets	4-A22



Suspension, Wheels
Fjädringssystem, Hjul
Suspensión, Ruedas

0041
0020
0040
0060
0080
0100
0125
0127
0128
0130
0150
0153
0155
0160
0170
0175

TABLE OF CONTENTS

Front suspension		
Front suspension, -1996	7 : 5	4-B06
front suspension, 1997-	7 : 9	4-B10
Wheel	7 : 11	4-B12
Rear suspension		
Rear suspension, -1996	7 : 15	4-B16
Rear suspension, 1997-	7 : 19	4-B20
Rear axle	7 : 21	4-B22
Complete sets		
Suspension system, wheels	7 : 23	4-B24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

0042

0020

0040

0060

0240

0260

0283

0285

0287

0290

0310

0313

0315

0320

0330

0335

0340

0360

0380

0700

0720

0740

0765

0766

0768

0770

0790

0792

0794

0800

0810

0820

INNEHÅLLSFÖRTECKNING

Främre fjädring
Främre fjädring, -1996 ..... 7 : 5 4-B06
Främre fjädring, 1997- ..... 7 : 9 4-B10
Hjul ..... 7 : 11 4-B12
Bakre fjädring
Bakre fjädring, -1996 ..... 7 : 15 4-B16
Bakre fjädring, 1997- ..... 7 : 19 4-B20
Bakaxel ..... 7 : 21 4-B22
Satser
Fjädringssystem, hjul ..... 7 : 23 4-B24

SUMARIO

Suspension Del
Suspension Del, -1996 ..... 7 : 5 4-B06
Suspension Del, 1997- ..... 7 : 9 4-B10
Ruedas ..... 7 : 11 4-B12
Suspension Tras
Suspension Tras, -1996 ..... 7 : 15 4-B16
Suspension Tras, 1997- ..... 7 : 19 4-B20
Eje Tras ..... 7 : 21 4-B22
Juegos completos
Suspensin ruedas ..... 7 : 23 4-B24


MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-G02
5 Brakes 3-K02
6 Front assembly, Steering 4-A02
7 Suspension, Wheels 4-B02
8A Body, external 4-C02
8B Body, internal 5-A02
8C Body, heating and ventilation 5-J02
8D Tools, Labels 5-K02
10 Numerical register 6-A02

7 GROUP INDEX

Front suspension 4-B06
Wheel 4-B12
Rear suspension 4-B16
Rear axle 4-B22
Complete sets 4-B24

4-B06 Front suspension -1996 / Främre fjädring -1996

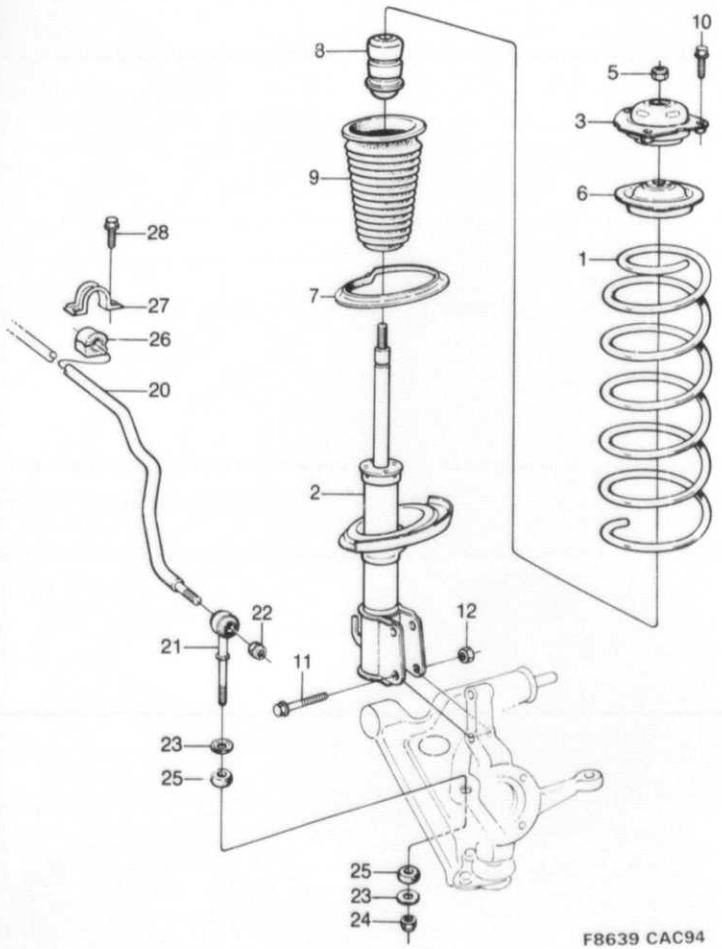

F8639 CAC94

0110 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 1	41 93 389		27), 1994,B204 I, M + AC	2	Spring yellow/white	Fjäder gul/vit	5
0020							
0025 1	41 93 389		B204 I, A	2	Spring	Fjäder	5
0030 1	41 93 389		B204 TURBO, M	2	Spring	Fjäder	5
0040 1	41 93 389		B234 I, M	2	Spring	Fjäder	5
0050							
0060 1	41 93 397		28), 1994 B204 I, A + AC	2	Spring yellow/green	Fjäder gul/grön	5
0070							
0075 1	41 93 397		B204 TURBO, M + AC	2	Spring	Fjäder	5
0080 1	41 93 397		B204 TURBO, A	2	Spring	Fjäder	5
0090 1	41 93 397		B234 I, M + AC	2	Spring	Fjäder	5
0100 1	41 93 397		B234 I, A	2	Spring	Fjäder	5
0110 1	41 93 397		B234 TURBO, M	2	Spring	Fjäder	5
0120							
0130 1	41 93 405		29),1994 B204 TURBO,A+AC	2	Spring yellow/grey	Fjäder gul/grå	5
0140							
0145 1	41 93 405		B234 I, A + AC	2	Spring	Fjäder	5
0150 1	41 93 405		B234 TURBO, M + AC	2	Spring	Fjäder	5
0160 1	41 93 405		B234 TURBO, A	2	Spring	Fjäder	5
0170							
0180 1	41 93 413		30)1994,B204 TURBO,A +AC SR, EAS	2	Spring blue/blue	Fjäder blå/blå	5
0190							
0200 1	41 93 413		B234 TURBO, A + AC	2	Spring	Fjäder	5
0210							
0220 1	41 93 421		1994,B234 TURBO, A + AC, SR, EAS	2	Spring blue/white	Fjäder blå/vit	5
0230							
0240							
0250 1	41 93 454		45,31), AERO, M	2	Spring white/white	Fjäder vit/vit	5
0260							
0270							
0280 1	41 93 462		45), AERO, A	2	Spring white/green	Fjäder vit/grön	5
0290							
0300							
0310 1	46 46 717		46,47), AERO, M	2	Spring orange/white	Fjäder orange/vit	5
0320							
0330							
0340 1	46 46 725		46), AERO, A	2	Spring orange/green	Fjäder orange/grön	5
0350							
0360							
0370 1	45 44 870		41), 1995-	2	Spring green/grey	Fjäder grön/grå	5
0380							
0390 1	45 44 888		42), 1995-	2	Spring grey/grey	Fjäder grå/grå	5
0400							

27. If the car has SR, ABS, air-bag and EAS, chose spring 4193397 Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193397
28. If the car has SR, ABS, air-bag and EAS, chose spring 4193405 Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193405
29. If the car has SR, ABS, air-bag and EAS, chose spring 4193413 Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193413
30. If the car has SR, ABS, air-bag and EAS, chose spring 4193421 Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193421
31. If the car has SR, ABS, air-bag and EAS, chose spring 4193462 Om bilen har SR, ABS, air-bag och EAS, välj fjäder 4193462
41. Spring 1, see table in Service Manual, group 0 News M1995 Fjäder 1, se tabell i Verkstadshandbok, grupp 0 Nyheter M1995
42. Spring 2, see table in Service Manual, group 0 News M1995 Fjäder 2, se tabell i Verkstadshandbok, grupp 0 Nyheter M1995
45. Ch. -S1027961
46. Ch. S1027962-
47. If the car has SR and EAS, chose spring 4646725 Om bilen har SR och EAS, välj fjäder 4646725

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4 –B08 Front suspension -1996

Främre fjädring -1996

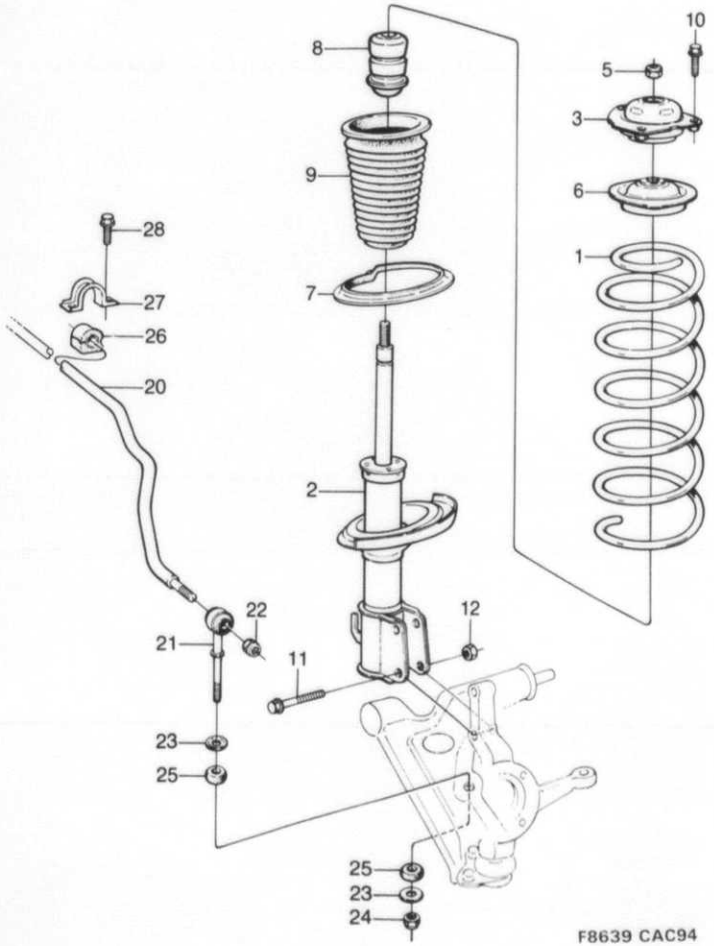

F8639 CAC94

0110	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0410	1	44 26 730		43), 1995-	2	Spring	Fjäder	5
0420				green/green			grön/grön	
0430	1	45 44 896		44), 1995-	2	Spring	Fjäder	5
0440				orange/blue			orange/blå	
0450								
0460	2	40 01 640		-1994	2	Spring strut	Fjäderben	6
0470				orange			orange	
0480	2	45 43 781		1995-	2	Spring strut	Fjäderben	6
0490				red			röd	
0500	2	41 95 061		-1994,B234 TURBO + AC,SR EAS	2	Spring strut	Fjäderben	6
0510				purple			lila	
0520	2	45 43 799		1995-, AIRBAG2, AC, AS, EAS2, SR	2	Spring strut	Fjäderben	6
0530				yellow			gul	
0540	2	41 94 338		45), TURBO AERO	2	Spring strut	Fjäderben	6
0550				brown			brun	
0560	2	46 46 758		46), TURBO AERO	2	Spring strut	Fjäderben	6
0570				brown			brun	
0580	3	41 06 969			2	Support bearing	Stödlager	6
0590	5	79 79 537			2	Lock nut	Låsmutter	3
0600	6	89 68 067			2	Spring seat	Fjädersäte	6
0610	7	41 95 327			2	Spacer	Mellanlägg	6
0620	8	89 72 002			2	Buffer	Buffert	5
0630	9	89 58 084			2	Bellows	Balg	6
0640	10	79 84 511			6	Screw	Skruv	5
0650	11	89 66 129			4	Screw	Skruv	5
0660	12	79 79 552			4	Nut	Mutter	5
0670	20	89 68 984			1	Anti-roll bar	Krängningshämmare	6
0680	21	89 58 944			2	Link	Länk	6
0690	22	79 79 578			2	Nut	Mutter	3
0700	23	89 60 171			4	Washer	Bricka	5
0710	24	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5
0720	25	89 53 986			4	Block	Block	5
0730	26	89 68 992			2	Bushing	Bussning	3
0740	27	89 54 000			2	Cap	Överfall	5
0750	28	73 99 330			4	Screw	Skruv	5

43. Spring 3, see table in Service Manual, group 0 News M1995 Fjäder 3, se tabell i Verkstadshandbok, grupp 0 Nyheter M1995
44. Spring 4, see table in Service Manual, group 0 News M1995 Fjäder 4, se tabell i Verkstadshandbok, grupp 0 Nyheter M1995
45. Ch. -S1027961
46. Ch. S1027962-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4 –B10 Front suspension 1997- / Främre fjädring 1997-

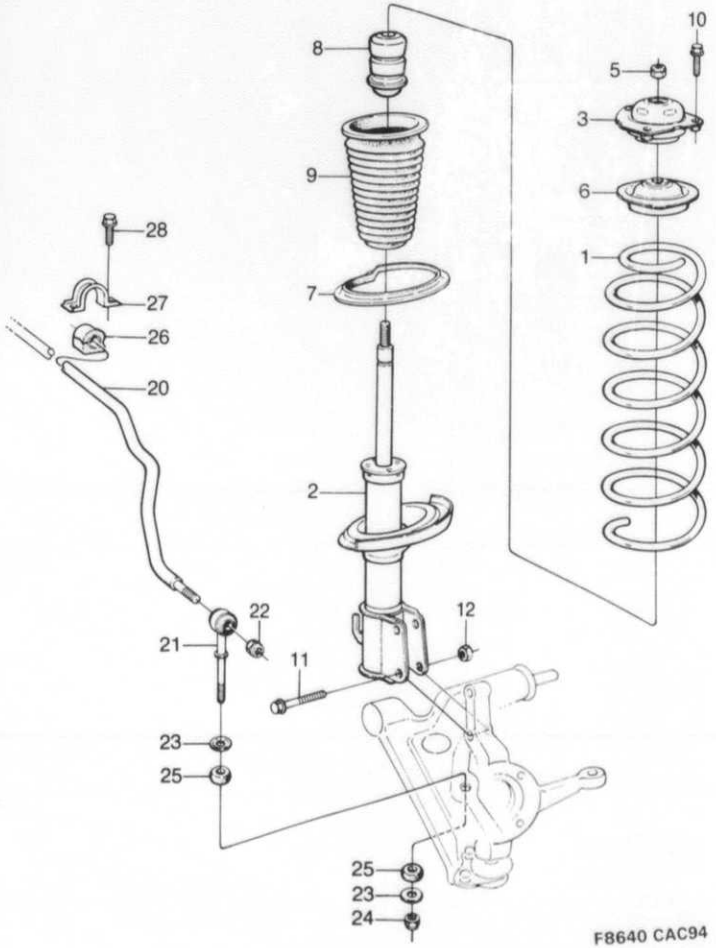

F8640 CAC94


0115	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	45 44 870		CODE=AA	2	Spring	Fjäder	5
0020						green/grey	grön/grå	
0030	1	45 44 888		CODE=AB	2	Spring	Fjäder	5
0040						grey/grey	grå/grå	
0050	1	44 26 730		CODE=AC	2	Spring	Fjäder	5
0060						green/green	grön/grön	
0070	1	45 44 896		CODE=AD	2	Spring	Fjäder	5
0080						orange/blue	orange/blå	
0090	1	46 46 717		CODE=AE	2	Spring	Fjäder	5
0100						orange/white	orange/vit	
0110	1	46 46 725		CODE=AF	2	Spring	Fjäder	5
0120						orange/green	orange/grön	
0130								
0140	2	45 43 781		CODE=A	2	Spring strut	Fjäderben	6
0150						red	röd	
0160	2	45 43 799		CODE=B	2	Spring strut	Fjäderben	6
0170						yellow	gul	
0180	2	46 46 758		CODE=C	2	Spring strut	Fjäderben	6
0190						brown	brun	
0200	3	41 06 969			2	Support bearing	Stödlager	6
0210	5	79 79 537			2	Lock nut	Låsmutter	3
0220	6	89 68 067			2	Spring seat	Fjädersäte	6
0230	7	41 95 327			2	Spacer	Mellanlägg	6
0240	8	89 72 002			2	Buffer	Buffert	5
0250	9	89 58 084			2	Bellows	Bälg	6
0260	10	79 84 511			6	Screw	Skruv	5
0270	11	89 66 129			4	Screw	Skruv	5
0280	12	79 79 552			4	Nut	Mutter	5
0290	20	89 68 984		CODE=C	1	Anti-roll bar	Krängningshämmare	6
0300	21	89 58 944			2	Link	Länk	6
0310	22	79 79 578			2	Nut	Mutter	3
0320	23	89 60 171			4	Washer	Bricka	5
0330	24	*81 51 474*		NLS – USE 7977812	2	Lock nut	Låsmutter	5
0340	25	89 53 986			4	Block	Block	5
0350	26	89 68 992			2	Bushing	Bussning	3
0360	27	89 54 000			2	Cap	Överfall	5
0370	28	73 99 330			4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

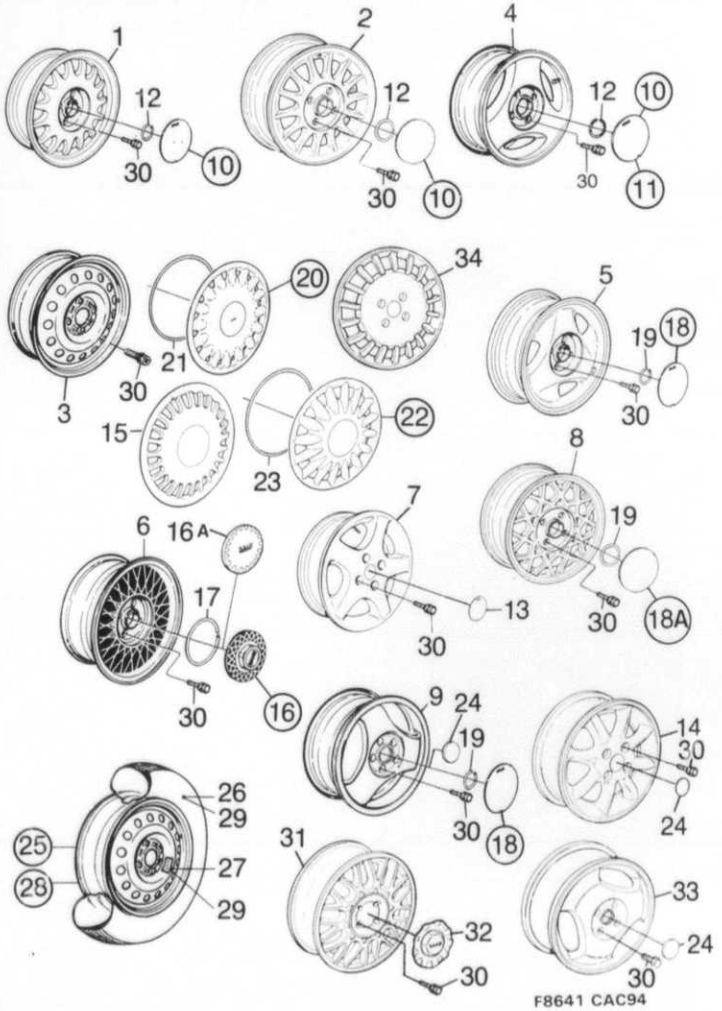

4-B12 *Wheel* *Hjul*

0125	Pos		Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1		40 02 390		-1994, 40/105124705	4	Rim	Fälg	4
0020					6 X 15"				
0030	2		44 26 854		1995-1997, 40/400103826	4	Rim	Fälg	4
0040					6 X 15"				
0050	3		89 61 492		11), 5,5 X 15"	4	Rim	Fälg	4
0060							steel-wheel	stålhjul	
0070	3		89 61 526		11), 6 X 15"	4	Rim	Fälg	4
0080							steel-wheel	stålhjul	
0090	3		89 62 391		-1997, 6 X 15"	4	Rim	Fälg	4
0100							steel-wheel,black	stålhjul,svart	
0105	3	•	49 06 822		1998-, 6 X 15"	4	Rim	Fälg	4
0106							steel-wheel,black	stålhjul,svart	
0110	4		89 67 036		-1994, 40/105123707	4	Rim	Fälg	4
0120					6,5 X 16"				
0123	4		45 45 687		1996-1997, 40/400105763	4	Rim	Fälg	
0125					6 X 15"				
0130	5		40 04 735		-1995, LH, 40/105124309	2	Rim	Fälg	4
0140					6 X 15"				
0150	5		40 04 727		-1995, RH, 40/105124408	2	Rim	Fälg	4
0160					6 X 15"				
0170	6		44 26 326		-1996, 40/400103800	4	Rim	Fälg	4
0175					6 X 15"				
0180	7		86 77 395		7 X 15", 40/400100566	4	Rim	Fälg	4
0190	8		89 70 980		6 X 15", 40/105122402	4	Rim	Fälg	4
0200	9		44 25 310		-1997, 40/400100491	4	Rim	Fälg	4
0205					6,5 X 16"				
0206	9	•	48 39 031		1998-, 40/400108965	4	Rim	Fälg	4
0207					6,5 X 16"				
0210	10		89 87 620		-1994, 40/105123400	4	Wheel cap	Hjulkapsel	2
0220	10		44 25 476		1995-, 40/400100707	4	Wheel cap	Hjulkapsel	2
0230	11		89 73 018		-1994, 40/105123715	4	Wheel cap	Hjulkapsel	2
0240	12		89 87 802			1	.Spring ring	.Fjäderring	2
0250	13		86 77 403		40/400100574	4	Wheel cap	Hjulkapsel	2
0255	14		46 47 475		1996-1997, 40/400106035	4	Rim	Fälg	4
0256					6 X 15"				
0260	15		89 72 663		-1994	4	Wheel cap	Hjulkapsel	2
0270							plastic	plast	
0280	16		41 99 360		-1994, 40/105122352	4	Wheel cap	Hjulkapsel	2
0290	16A		44 26 862		1995-1996, 40/400103818	4	Wheel cap	Hjulkapsel	2
0300	17		41 99 386			1	.Clamping ring	.Spännring	2
0310	18		44 25 476		40/400100707	4	Wheel cap	Hjulkapsel	2
0320	18A		89 87 620		40/105123400	4	Wheel cap	Hjulkapsel	2
0330	19		89 87 802			1	.Spring ring	.Fjäderring	2
0340	20		45 45 729		-1995, (4243523)	4	Wheel cap	Hjulkapsel	2
0350	21		41 93 587			1	.Clamping ring	.Spännring	2
0353	22		45 43 567		1996-1997	4	Wheel cap	Hjulkapsel	2
0356	23		41 93 587			1	.Clamping ring	.Spännring	2
0358	24		46 48 424		1996-, 40/400106043	4	Wheel cap	Hjulkapsel	2
0359	24		45 66 311		1996-, 40/400106522	4	Hub cap	Navkapsel	
0360					"GRIFFIN"				
0365	25		41 94 999			1	Wheel	Hjul	5
0370	26		40 02 507			1	.Tyre	.Däck	6
0380	27		40 02 358			1	.Label	.Etikett	5
0390	28		76 85 878		-1997, 175/70 R15	1	Wheel	Hjul	5
0400							big spare wheel	stort reservhjul	
0403	28		46 47 731		-1997, 195/65 R15, CN	1	Wheel	Hjul	5
0404							big spare wheel	stort reservhjul	
0405	28	•	49 08 448		1998-, 195/65 R15	1	Wheel	Hjul	
0406							big spare wheel	stort reservhjul	
0410	29		40 02 358		-1996	1	.Label	.Etikett	5
0415	29		48 39 023		1997-	1	.Label	.Etikett	5

11. Alternative for snow-tire Alternativ för snödäck


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4-B14 *Wheel* *Hjul*

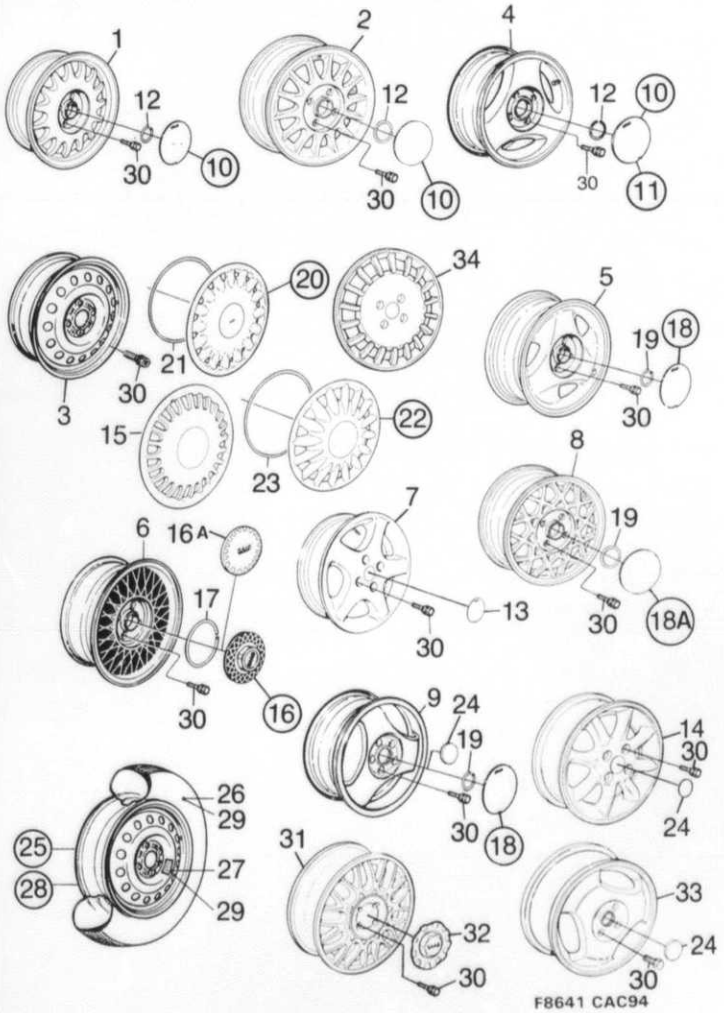

F8641 CAC94

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0420	29A			1), 175/70 R15	1	,Tyre	,Däck	
0425	29A	44 26 946		195/65 R15	1	,Tyre	,Däck	
0430	30	89 65 907		1994-	16	Wheel screw	Hjulskruv	2
0440	30	46 45 149		1995-	16	Wheel screw	Hjulskruv	
0450	31	47 78 320		1996-	4	Rim	Fälg	
0451				7 X 15"				
0460	32	47 78 338		1996-, 40/400106449	4	Hub cap	Navkapsel	
0470	33	• 48 38 751		1998-, 40/400108957	4	Rim	Fälg	4
0480				6 X 15"				
0490	34	• 48 39 205		1998-, 40/400108973	4	Wheel cap	Hjulkapsel	2

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4 – B16 Rear suspension -1996

Bakre fjädring -1996

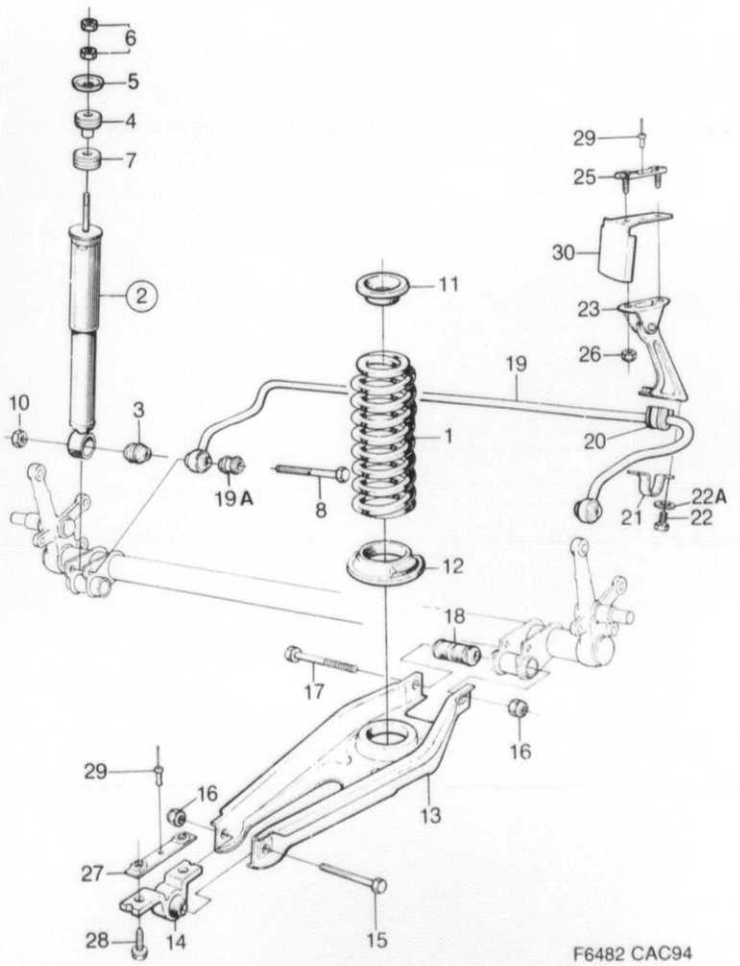

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 93 561			2	Spring	Fjäder	5
0020						red/grey	röd/grå	
0030						Ø 13,3 mm	Ø 13,3 mm	
0040								
0050	1	41 93 603		AIRBAG 2, AC, AS, LU, SR	2	Spring	Fjäder	5
0060	1	41 93 603		AIRBAG 2, AC, AS, EAS,LU	2	Spring	Fjäder	5
0065						yellow/yellow	gul/gul	
0070						Ø 13,5 mm	Ø 13,5 mm	
0080								
0090	1	41 93 611		5CS, AIRBAG 2, AC, AS,	2	Spring	Fjäder	5
0100				LU, EAS, SR, RWW		yellow/blue	gul/blå	
0110						Ø 13,7 mm	Ø 13,7 mm	
0120								
0250	1	41 93 629		TURBO AERO, M	2	Spring	Fjäder	5
0260						yellow/white	gul/vit	
0270						Ø 13,5 mm	Ø 13,5 mm	
0280								
0290	1	41 93 637		TURBO AERO, A	2	Spring	Fjäder	5
0300						yellow/green	gul/grön	
0310						Ø 13,7 mm	Ø 13,7 mm	
0320								
0350	2	41 95 228		-1994	2	Shock absorber kit	Stötdämparsats	1
0360				See page 7-023, 4-B24		orange	orange	
0365	2	46 45 008		1995-	2	Shock absorber kit	Stötdämparsats	1
0366				See page 7-023, 4-B24		red	röd	
0380	2	41 95 236		1994,B234 TURBO, + AC,SR,	2	Shock absorber kit	Stötdämparsats	1
0390				ABS, AIR-BAG, EAS, RAC		purple	lila	
0400				See page 7-023, 4-B24				
0405	2	46 45 016		1995-, 5CS, AIRBAG2, AS,	2	Shock absorber kit	Stötdämparsats	1
0406				EAS2, RWW, SR, SPOILER		yellow	gul	
0407				See page 7-023, 4-B24				
0410								
0450	2	41 99 444		45), TURBO AERO	2	Shock absorber kit	Stötdämparsats	1
0460				See page 7-023, 4-B24		grey	grå	
0465	2	46 47 095		46), TURBO AERO	2	Shock absorber kit	Stötdämparsats	1
0466				See page 7-023, 4-B24		grey	grå	
0470								
0500	3	89 52 749	S		2	.Bearing bushing	.Lagerbussning	1
0520	4	41 97 422	S		2	.Rubber bushing	.Gummibussning	1
0530	5	89 59 934	S		2	.Washer	.Bricka	5
0540	6	79 79 511	S		4	.Nut	.Mutter	5
0550	7	41 06 266	S		2	.Rubber bushing	.Gummibussning	1
0560	8	79 85 054			2	Hexagon screw	Sexkantsskruv	5
0580	10	81 51 482			2	Lock nut	Låsmutter	5
0590	11	89 52 285			2	Spring insulator	Fjäderisolator	4
0600	12	89 50 438			2	Spring insulator	Fjäderisolator	4
0610	13	89 70 782			2	Spring link	Fjäderlänk	4
0620	14	89 57 714			2	Bearing anchorage	Lagerfäste	5
0630	15	79 82 028			2	Screw	Skruv	5
0640	16	*81 51 474*		NLS – USE 7977812	8	Lock nut	Låsmutter	5
0650	17	79 82 036			2	Screw	Skruv	5
0660	18	89 51 063			2	Bushing	Bussning	3
0670	19	41 05 730		5CS	1	Anti-roll b· ·	Krängningshämmare	6
0680	19	89 61 765		4D	1	Anti-roll bar	Krängningshämmare	6
0690	19A	89 62 011			2	.Bearing bushing	.Lagerbussning	1
0710	20	44 25 583		5CS	2	Rubber bushing	Gummibussning	3
0730	20	44 25 575		4D	2	Rubber bushing	Gummibussning	3
0740	21	89 52 137			2	Brace	Bygel	3
0750	22	79 76 897			4	Screw	Skruv	5
0760	22A	83 80 982			4	Washer	Bricka	5
0770	23	41 93 132		LH	1	Link	Länk	4

45. Ch. -S1027961
46. Ch. S1027962-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4-B18 Rear suspension -1996

Bakre fjädring -1996

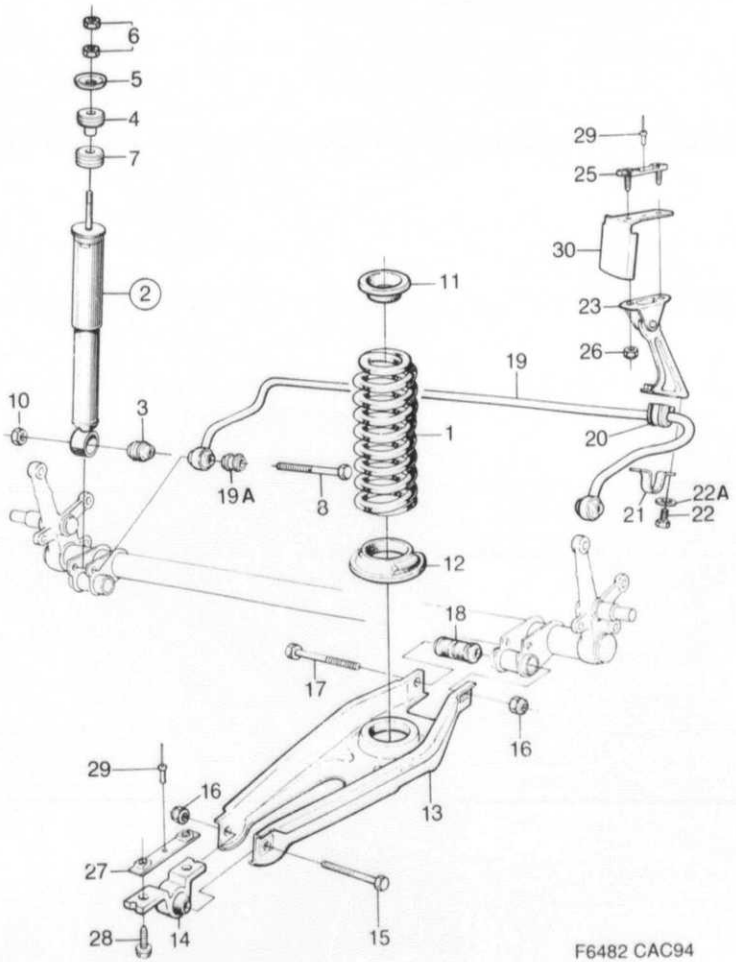

F6482 CAC94

0175	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0780	23	41 93 140		RH	1	Link	Länk	4
0790	25	89 61 625			2	Attaching plate	Fästplatta	6
0800	26	79 71 922			4	Nut	Mutter	3
0810	27	89 58 498			2	Nut piece	Mutterstycke	6
0820	28	79 76 905			4	Screw	Skruv	5
0830	29	79 61 642			2	Rivet	Nit	5
0840	30	89 69 214			1	Protecting plate	Skyddsplåt	6


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

? GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4 -B20 Rear suspension 1997- / Bakre fjädring 1997-

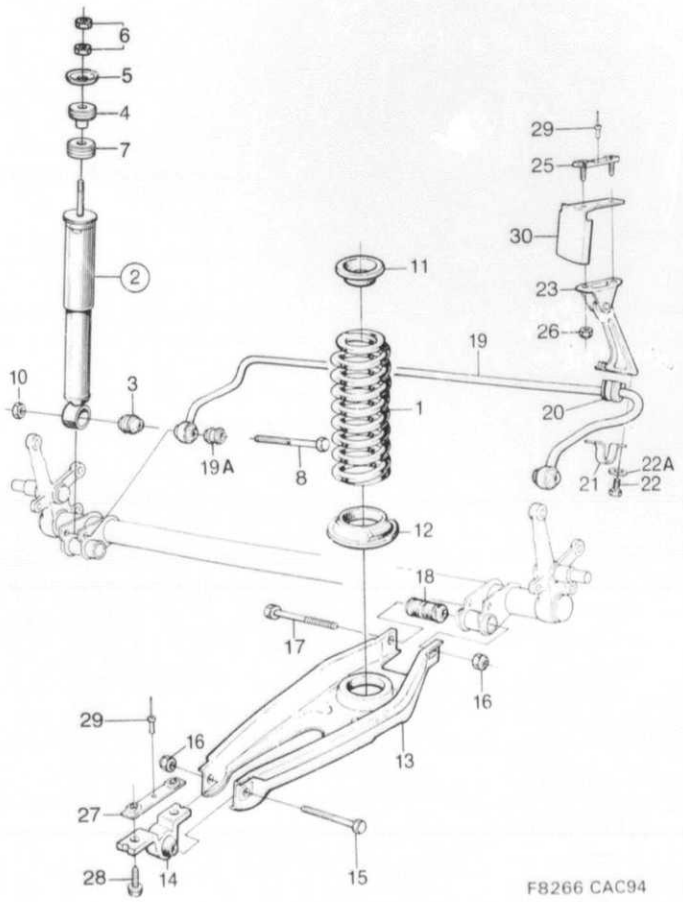

0180	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 93 561		CODE=BA	2	Spring	Fjäder	5
0020						red/grey	röd/grå	
0030	1	41 93 603		CODE=BB	2	Spring	Fjäder	5
0040						yellow/yellow	gul/gul	
0045	1	41 93 611		CODE=BH	2	Spring	Fjäder	5
0046						yellow/blue	gul/blå	
0050	1	41 93 629		CODE=BC	2	Spring	Fjäder	5
0060						yellow/white	gul/vit	
0070	1	41 93 637		CODE=BD	2	Spring	Fjäder	5
0080						yellow/green	gul/grön	
0090								
0100	2	46 45 008		CODE=A	2	Shock absorber kit	Stötdämparsats	1
0110				See page 7-023, 4-B24		red	röd	
0120	2	46 45 016		CODE=B	2	Shock absorber kit	Stötdämparsats	1
0130				See page 7-023, 4-B24		yellow	gul	
0140	2	46 47 095		CODE=C	2	Shock absorber kit	Stötdämparsats	1
0150				See page 7-023, 4-B24		grey	grå	
0160	3	89 52 749	S		2	.Bearing bushing	.Lagerbussning	1
0170	4	41 97 422	S		2	.Rubber bushing	.Gummibussning	1
0180	5	89 59 934	S		2	.Washer	.Bricka	5
0190	6	79 79 511	S		4	.Nut	.Mutter	5
0200	7	41 06 266	S		2	.Rubber bushing	.Gummibussning	1
0210	8	79 85 054			2	Hexagon screw	Sexkantsskruv	5
0220	10	81 51 482			2	Lock nut	Låsmutter	5
0230	11	89 52 285			2	Spring insulator	Fjäderisolator	4
0240	12	89 50 438			2	Spring insulator	Fjäderisolator	4
0250	13	89 70 782			2	Spring link	Fjäderlänk	4
0260	14	89 57 714			2	Bearing anchorage	Lagerfäste	5
0270	15	79 82 028			2	Screw	Skruv	5
0280	16	*81 51 474*		NLS - USE 7977812	8	Lock nut	Låsmutter	5
0290	17	79 82 036			2	Screw	Skruv	5
0300	18	89 51 063			2	Bushing	Bussning	3
0310	19	41 05 730		CODE=C	1	Anti-roll bar	Krängningshämmare	6
0320	19	89 61 765		CODE=D	1	Anti-roll bar	Krängningshämmare	6
0330	19A	89 62 011			2	.Bearing bushing	.Lagerbussning	1
0340	20	44 25 583		5CS	2	Rubber bushing	Gummibussning	3
0350	20	44 25 575		4D	2	Rubber bushing	Gummibussning	3
0360	21	89 52 137			2	Brace	Bygel	3
0370	22	79 76 897			4	Screw	Skruv	5
0380	22A	83 80 982			4	Washer	Bricka	5
0390	23	41 93 132		LH	1	Link	Länk	4
0400	23	41 93 140		RH	1	Link	Länk	4
0410	25	89 61 625			2	Attaching plate	Fästplatta	6
0420	26	79 71 922			4	Nut	Mutter	3
0430	27	89 58 498			2	Nut piece	Mutterstycke	6
0440	28	79 76 905			4	Screw	Skruv	5
0450	29	79 61 642			2	Rivet	Nit	5
0460	30	89 69 214			1	Protecting plate	Skyddsplåt	6


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

4-B22 Rear axle Bakaxel

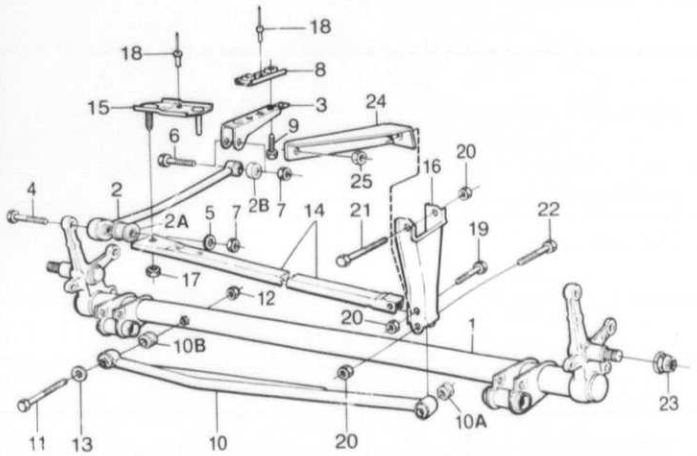

F6483 CAC94


0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0035	1	89 57 706			1	Rear axle	Bakaxel	4
0040	2	89 52 046			2	Stay	Stag	4
0050	2A	89 55 759			1	.Bushing	.Bussning	3
0055	2B	89 56 468			1	.Bushing	.Bussning	3
0060	3	89 51 915			2	Bracket	Fäste	6
0090	4	*79 79 487*		NLS - USE 7979586	2	Screw	Skruv	5
0100	5	89 52 277			2	Washer	Bricka	5
0130	6	79 82 002			2	Screw	Skruv	5
0150	7	*81 51 474*		NLS - USE 7977812	4	Lock nut	Låsmutter	5
0160	8	89 58 514			2	Nut piece	Mutterstycke	6
0180	9	79 76 897			4	Screw	Skruv	5
0210	10	89 57 722			1	Stay	Stag	5
0220	10A	89 52 558			1	.Bushing	.Bussning	3
0227	10B	89 57 532			1	.Bushing	.Bussning	3
0230	11	79 82 069			1	Screw	Skruv	5
0250	12	81 51 482			1	Lock nut	Låsmutter	5
0260	13	79 16 521			1	Washer	Bricka	5
0290	14	89 68 471			1	Stay	Stag	4
0300	15	89 58 746			1	Washer	Bricka	6
0320	16	89 58 613			1	Bracket	Fäste	6
0350	17	79 77 820			1	Flange lock nut	Flänslåsmutter	
0360	18	79 61 642		1994	8	Rivet	Nit	5
0370	18	79 72 474		1995-	8	Pop rivet	Popnit	3
0390	19	79 82 085			1	Screw	Skruv	5
0410	20	*81 51 474*		NLS - USE 7977812	3	Lock nut	Låsmutter	5
0430	21	79 82 093			1	Screw	Skruv	5
0450	22	79 82 085			1	Screw	Skruv	5
0460	23	89 65 360			2	Lock nut	Låsmutter	3
0470	24	89 68 505			1	Bracket	Fäste	6
0480	25	79 71 922			1	Nut	Mutter	3

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

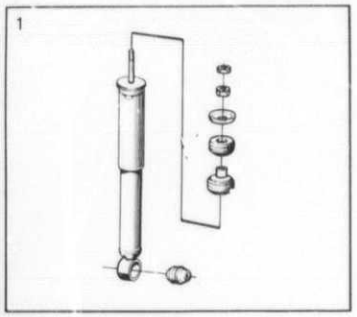

F6484 CAC94

Complete sets — Satser

4-B24 Suspension system / Wheel — Fjädringssystem / Hjul

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 95 228		3), -1994	X	Shock absorber kit orange	Stötdämparsats orange	1
0030		*41 05 656*		1) NLS	1	.Shock absorber	.Stötdämpare	6
0040		41 97 422			1	.Rubber bushing	.Gummibussning	1
0050		41 06 266			1	.Rubber bushing	.Gummibussning	1
0060		89 59 934			1	.Washer	.Bricka	5
0070		79 79 511			2	.Nut	.Mutter	5
0090	1	46 45 008		3), 1995-1997-,CODE=A	X	Shock absorber kit red	Stötdämparsats röd	1
0110		44 26 953		1)	1	.Shock absorber	.Stötdämpare	6
0120		41 97 422			1	.Rubber bushing	.Gummibussning	1
0130		41 06 266			1	.Rubber bushing	.Gummibussning	1
0140		89 59 934			1	.Washer	.Bricka	5
0150		79 79 511			2	.Nut	.Mutter	5
0155		89 52 749			1	.Bearing bushing	.Lagerbussning	1
0170	1	41 95 236		3),1994, B234 TURBO+AC, SR, ABS, AIR-BAG,EAS	X	Shock absorber kit purple	Stötdämparsats lila	1
0190		*41 95 103*		1) NLS	1	.Shock absorber	.Stötdämpare	6
0200		41 97 422			1	.Rubber bushing	.Gummibussning	1
0210		41 06 266			1	.Rubber bushing	.Gummibussning	1
0220		89 59 934			1	.Washer	.Bricka	5
0230		79 79 511			2	.Nut	.Mutter	5
0250	1	46 45 016		3), 1995-, 5CS, AIRBAG2, AS,EAS2,RWW,SR,SPOILER 1997-,CODE=B	X	Shock absorber kit yellow	Stötdämparsats gul	1
0270		44 26 961		1)	1	.Shock absorber	.Stötdämpare	6
0280		41 97 422			1	.Rubber bushing	.Gummibussning	1
0290		41 06 266			1	.Rubber bushing	.Gummibussning	1
0300		89 59 934			1	.Washer	.Bricka	5
0305		89 52 749			1	.Bearing bushing	.Lagerbussning	1
0310		79 79 511			2	.Nut	.Mutter	5
0330	1	41 99 444		3,45), TURBO AERO	X	Shock absorber kit grey	Stötdämparsats grå	1
0345		41 99 410		1)	1	.Shock absorber	.Stötdämpare	
0350		41 97 422			1	.Rubber bushing	.Gummibussning	1
0360		41 06 266			1	.Rubber bushing	.Gummibussning	1
0370		89 59 934			1	.Washer	.Bricka	5
0380		89 52 749			1	.Bearing bushing	.Lagerbussning	1
0390		79 79 511			2	.Nut	.Mutter	5
0410	1	46 47 095		3,46), TURBO AERO 1997-,CODE=C	X	Shock absorber kit grey	Stötdämparsats grå	1
0430		46 46 766		1)	1	.Shock absorber	.Stötdämpare	6
0440		41 97 422			1	.Rubber bushing	.Gummibussning	1
0450		41 06 266			1	.Rubber bushing	.Gummibussning	1
0460		89 59 934			1	.Washer	.Bricka	5
0470		89 52 749			1	.Bearing bushing	.Lagerbussning	1
0480		79 79 511			2	.Nut	.Mutter	5

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre
45. Ch. -S1027961
46. Ch. S1027962-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

7 GROUP INDEX

Front suspension	4-B06
Wheel	4-B12
Rear suspension	4-B16
Rear axle	4-B22
Complete sets	4-B24

8A

Body, external
Kaross, utvändig
Carrocería, exterior

4-C02

TABLE OF CONTENTS

Car body		
Front- and centre floor	8A : 5	4-C06
Rear floor	8A : 7	4-C08
Roof	8A : 11	4-C12
Sun roof, electrically operated	8A : 13	4-C14
Cowl plate	8A : 17	4-C18
Wheel housing, front	8A : 19	4-C20
Wheel housing, rear	8A : 21	4-C22
Valances, 4D, -1997	8A : 23	4-C24
Valances, 5CS	8A : 25	4-D02
Door frame	8A : 27	4-D04
Plugs etc	8A : 29	4-D06
Hood, front, fenders		
Hood, hood hinges and hood lock	8A : 31	4-D08
Front member, grille	8A : 35	4-D12
Front fenders, 4D -1994	8A : 37	4-D14
Front fenders, 5CS; 4D 1995-1997	8A : 39	4-D16
Doors, trunk lid		
Front doors, hinges, window regulators	8A : 41	4-D18
Rear doors, hinges, window regulators	8A : 43	4-D20
Door lock, front door	8A : 45	4-D22
Door lock, rear door	8A : 47	4-D24
Trunk lid, hinges, lock, 4D, -1997	8A : 49	4-E02
Trunk door, hinges, lock, 5CS	8A : 53	4-E06
Outside handle	8A : 55	4-E08
Lock- and lock cylinder sets	8A : 57	4-E10
External details, glass, sealings		
Emblem	8A : 59	4-E12
Decor, 4D -1994	8A : 61	4-E14
Decor, 4D 1995-1997	8A : 65	4-E18
Decor, 5CS	8A : 69	4-E22
Spoiler, 4D -1994	8A : 73	4-F02
Spoiler, 5CS; 4D 1995-1997	8A : 75	4-F04
5CS Aero	8A : 77	4-F06
External mirror	8A : 81	4-F10
Windscreen	8A : 87	4-F16
Rear window	8A : 89	4-F18
Doors and side windows	8A : 91	4-F20
Splash guards	8A : 93	4-F22
Other sealings	8A : 95	4-F24
Bumpers and touch-up paint		
Bumper, front, 4D -1994	8A : 99	4-G04
Bumper, front, 5CS; 4D 1995-1997	8A : 101	4-G06
Bumper, rear, 4D, -1997	8A : 103	4-G08
Bumper, rear, 5CS	8A : 105	4-G10
Touch-up paint, 1-can	8A : 107	4-G12
Touch-up paint, 2-can	8A : 109	4-G14
Touch-up paint, two-coat type	8A : 111	4-G16
Touch-up paint, other paint	8A : 113	4-G18
Complete sets		
Car body, external	8A : 115	4-G20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-C03

INNEHÅLLSFÖRTECKNING

Karosseristomme		
Främre och mittre golv	8A : 5	4-C06
Bakre golv	8A : 7	4-C08
Tak	8A : 11	4-C12
Soltak, el-manövrerat	8A : 13	4-C14
Torpedplåt	8A : 17	4-C18
Hjulhus, främre	8A : 19	4-C20
Hjulhus, bakre	8A : 21	4-C22
Sidoplåtar, 4D, -1997	8A : 23	4-C24
Sidoplåtar, 5CS	8A : 25	4-D02
Dörram	8A : 27	4-D04
Pluggar etc	8A : 29	4-D06
Motorhuv, front, skärmar		
Motorhuv, huvgångjärn och huvlås	8A : 31	4-D08
Frontbalk, grill	8A : 35	4-D12
Framskärmar, 4D -1994	8A : 37	4-D14
Framskärmar, 5CS; 4D 1995-1997	8A : 39	4-D16
Dörrar, bagagerumslucka		
Framdörrar, gångjärn, fönsterhissar etc	8A : 41	4-D18
Bakdörrar, gångjärn, fönsterhissar etc	8A : 43	4-D20
Dörrlås, framdörr	8A : 45	4-D22
Dörrlås, bakdörr	8A : 47	4-D24
Bagagelucka , gångjärn, lås, 4D, -1997	8A : 49	4-E02
Bagagerumsdörr, gångjärn, lås, 5CS	8A : 53	4-E06
Yttre handtag	8A : 55	4-E08
Lås- och låscylindersatser	8A : 57	4-E10
Utvändiga detaljer, glas, tätningslister		
Emblem	8A : 59	4-E12
Dekor, 4D -1994	8A : 61	4-E14
Dekor, 4D 1995-1995	8A : 65	4-E18
Dekor, 5CS	8A : 69	4-E22
Spoiler, 4D -1994	8A : 73	4-F02
Spoiler, 5CS; 4D 1995-1997	8A : 75	4-F04
5CS Aero	8A : 77	4-F06
Utvändiga backspeglar	8A : 81	4-F10
Vindruta	8A : 87	4-F16
Bakruta	8A : 89	4-F18
Dörr- och sidorutor	8A : 91	4-F20
Stänkskydd	8A : 93	4-F22
Övriga tätningslister	8A : 95	4-F24
Stötfångare och bättringsfärg		
Stötfångare, främre, 4D -1994	8A : 99	4-G04
Stötfångare, främre, 5CS; 4D 1995-1997	8A : 101	4-G06
Stötfångare, bakre, 4D, -1997	8A : 103	4-G08
Stötfångare, bakre, 5CS	8A : 105	4-G10
Bättringsfärg, 1-komponent	8A : 107	4-G12
Bättringsfärg, 2-komponent	8A : 109	4-G14
Bättringsfärg, tvåskiktstyp	8A : 111	4-G16
Bättringsfärg, övrig färg	8A : 113	4-G18
Satser:		
Kaross, utvändig	8A : 115	4-G20

4-C04

SUMARIO


Cuerpo de la carroceria		
Piso del. y tras.	8A : 5	4-C06
Piso tras.	8A : 7	4-C08
Techo	8A : 11	4-C12
Techo corredizo, maniobra electrica	8A : 13	4-C14
Placa torpedo	8A : 17	4-C18
Paso rueda, Del	8A : 19	4-C20
Huercos de rueda Tras	8A : 21	4-C22
Placas laterales, 4D, -1997	8A : 23	4-C24
Placas laterales, 5CS	8A : 25	4-D02
Bastidor de puertas	8A : 27	4-D04
Tapones etc	8A : 29	4-D06
Capot, plancha frontal, guardabarros		
Capot, bisagras de capot y cerradura de capot	8A : 31	4-D08
Viga del, parilla	8A : 35	4-D12
Guardabarros del, 4D -1994	8A : 37	4-D14
Guardabarros del, 5CS; 4D 1995-1997	8A : 39	4-D16
Puertas, tapa de cofre		
Porta delantera, bisagras, levantcristales, etc	8A : 41	4-D18
Porta trasera, bisagras, levantcristales, etc	8A : 43	4-D20
Cerraduras de puerta, Del	8A : 45	4-D22
Cerraduras de puerta, Tras	8A : 47	4-D24
Tapa del maletero, bisagras, cerradura, 4D, -1997	8A : 49	4-E02
Puerta trasera, bisagras, cerradura, 5CS	8A : 53	4-E06
Empunaduras exteriores	8A : 55	4-E08
Cerraduras y cilindros de cerradura	8A : 57	4-E10
Detalles exteriores, vidrios, juntas		
Emblemas	8A : 59	4-E12
Bastidor, 4D -1994	8A : 61	4-E14
Bastidor, 4D 1995-1997	8A : 65	4-E18
Bastidor, 5CS	8A : 69	4-E22
Espoilers, 4D -1994	8A : 73	4-F02
Espoilers, 5CS; 4D 1995-1997	8A : 75	4-F04
5CS Aero	8A : 77	4-F06
Espejos retrovisores exteriores	8A : 81	4-F10
Parabrisas	8A : 87	4-F16
Luna trasera	8A : 89	4-F18
Ventanilla de puerta y lateral	8A : 91	4-F20
Faldones	8A : 93	4-F22
Otras juntas	8A : 95	4-F24
Parachoques y pintura de retoque		
Parachoques, Del, 4D -1994	8A : 99	4-G04
Parachoques, Del, 5CS; 4D 1995-1997	8A : 101	4-G06
Parachoques, Tras, 4D, -1997	8A : 103	4-G08
Parachoques, Tras, 5CS	8A : 105	4-G10
Pintura de retoque, tipo 1-componentes	8A : 107	4-G12
Pintura de retoque, tipo 2-componentes	8A : 109	4-G14
Pintura de retoque, tipo de dos capas	8A : 111	4-G16
Pintura de retoque, otro pintura	8A : 113	4-G18
Juegos completos		
Carosseria, exterior	8A : 115	4-G20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

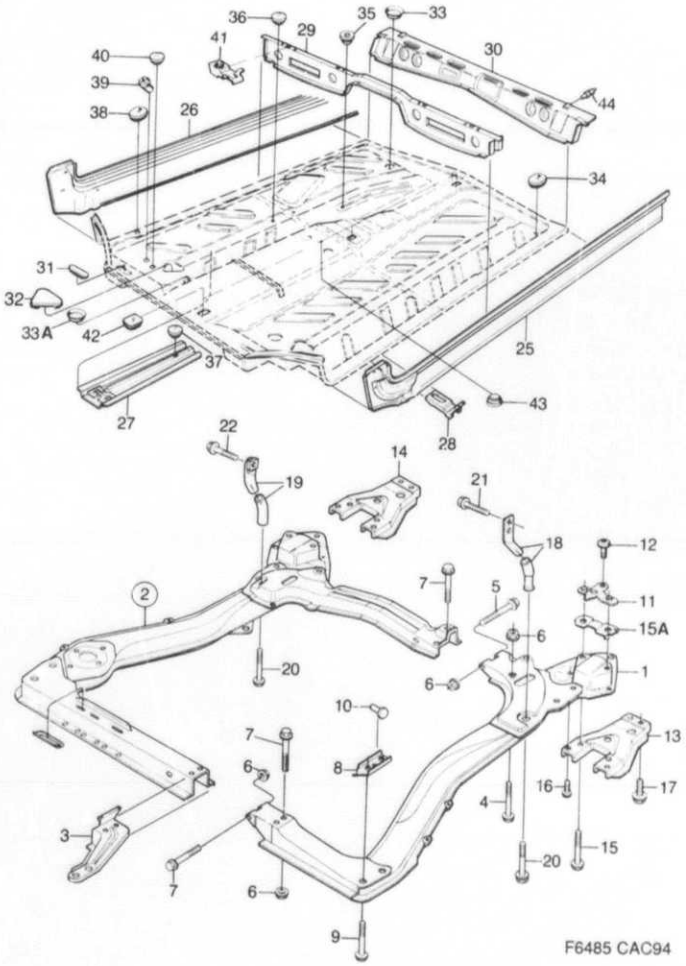

Car body

4-C06

Front and centre floor

Karosskrov

Främre och mittre golv

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010		*92 65 745*		279) NLS	1	Body	Kaross	6
0020	1	44 26 227		-1994, LH	1	Frame	Ram	5
0030	1	46 45 933		1995-, LH	1	Frame	Ram	5
0040	2	44 26 219		RH	1	Frame	Ram	5
0050	3	89 61 948			1	,Bracket	,Konsol	5
0060	4	79 83 141			2	Screw	Skruv	5
0070	5	79 83 158			1	Screw	Skruv	5
0080	6	79 69 306			5	Lock nut	Låsmutter	5
0090	7	79 83 133			2	Screw	Skruv	5
0100	8	89 61 070			2	Bracket	Hållare	5
0110	9	79 76 913			4	Screw	Skruv	5
0120	10	95 65 417			4	Rivet	Nit	3
0130	11	89 61 054			2	Bracket	Hållare	5
0140	12	89 66 087			2	Screw	Skruv	5
0150	13	89 60 247		LH	1	Reinforcement	Förstärkning	5
0160	14	89 60 122		RH	1	Reinforcement	Förstärkning	5
0170	15	79 84 008			4	Screw	Skruv	5
0180	15A	41 95 277			2	Spacer	Mellanlägg	3
0190	16	79 23 014			4	Screw	Skruv	5
0200	17	92 92 699			4	Screw	Skruv	5
0210	18	41 03 412		LH	1	Stanchion	Stötta	6
0220	19	89 61 237		RH	1	Stanchion	Stötta	6
0230	20	79 82 564		LH	2	Screw	Skruv	5
0240	20	79 74 777		RH	2	Screw	Skruv	5
0250	21	79 73 779			2	Screw	Skruv	5
0260	22	79 78 307			1	Screw	Skruv	5
0270	25	41 00 418		160) LH	1	Sill	Tröskel	6
0280	26	42 93 767		160) RH	1	Sill	Tröskel	6
0290	27	92 66 123			2	Beam	Balk	4
0300	28	92 66 156		LH	1	Jack support	Domkraftstöd	6
0310	28	92 66 149		RH	1	Jack support	Domkraftstöd	6
0320	29	41 01 465			1	Beam	Balk	6
0330	30	92 66 180			1	Beam	Balk	6
0340	31	89 62 292			2	Cover	Tacklock	5
0350	32	92 67 691			2	Cover	Lock	5
0360	33	73 13 752			2	Cover	Lock	5
0370	33A	41 02 901			2	Plug	Plugg	5
0380	34	92 67 899			2	Plug	Plugg	5
0390	35	92 67 881		-1994	6	Plug	Plugg	5
0400	35	43 33 563		1995-	6	Plug	Plugg	5
0410	36	92 67 808			2	Plug	Plugg	5
0420	36	70 38 342			2	Plug	Plugg	5
0430	37	92 67 923			3	Plug	Plugg	5
0440	38	92 67 907			2	Plug	Plugg	5
0450	39	92 67 998			3	Plug	Plugg	5
0460	40	92 68 178			12	Plug	Plugg	5
0470	41	79 75 766			4	Cage nut	Korgmutter	5
0480	42	93 86 509		50)	6	Plug	Plugg	5
0490	43	92 67 923			1	Plug	Plugg	5
0500	44	73 99 454			1	Nut	Mutter	5


50. Cars without heat shield Bilar utan värmeskydd
160. Inner section Innerdel
279. Only current production design Endast produktionsaktuellt utförande

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

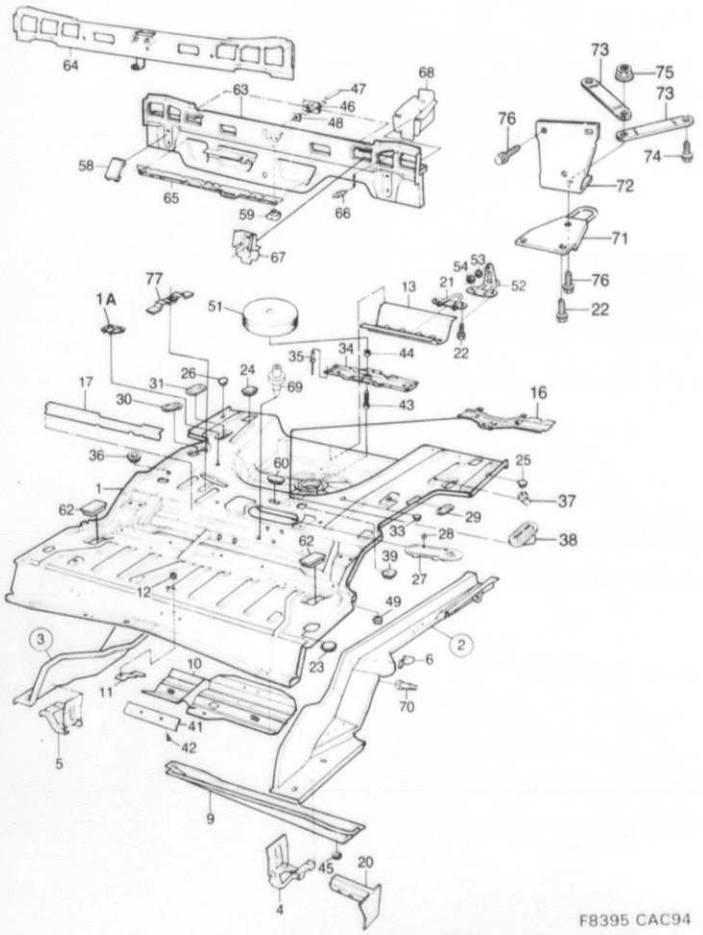

Car body

4 -C08 Rear floor

Karosskrov

Bakre golv

0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 06 276			1	Floor	Golv	6
0020	1A	43 19 968			1	Plug	Plugg	5
0030	2	42 93 916		LH	1	Beam	Balk	6
0040	3	92 76 924		RH	1	Beam	Balk	6
0050	4	41 00 731		LH	1	.Jack support	.Domkraftstöd	6
0060	5	41 00 723		RH	1	.Jack support	.Domkraftstöd	6
0070	6	*92 66 016*		LH NLS	1	.Bracket	.Fäste	6
0080	6	*92 66 008*		RH NLS	1	.Bracket	.Fäste	6
0090	9	92 66 024			1	Crossmember	Tvärbalk	6
0100	10	92 66 032			1	Reinforcement	Förstärkning	6
0110	11	92 66 040			1	Bracket	Hållare	6
0120	12	79 65 767			3	Lock nut	Låsmutter	3
0130	13	92 76 940			1	Support shape	Stödprofil	6
0140	16	40 09 528			1	Support shape	Stödprofil	6
0150	17	40 07 225			1	Member	Balk	6
0160	20	92 67 717		LH	1	Protection	Skydd	5
0170	20	92 67 709		RH	1	Protection	Skydd	5
0180	21	92 78 912			1	Towing hook	Bogserkrok	5
0190	22	81 30 064			2	Screw	Skruv	5
0200	23	92 67 865			2	Cover	Lock	5
0210	24	92 67 774			2	Cover	Lock	5
0220	25	92 68 814			1	Plug	Plugg	5
0230	26	92 68 822			1	Plug	Plugg	5
0240	27	93 87 994			1	Cover	Lock	6
0250	28	93 87 911			2	Catch	Hake	6
0260	29	89 62 342		LH	1	Cover	Täcklock	6
0270	30	89 62 359		RH	1	Cover	Täcklock	6
0280	31	89 62 334			2	Cover	Täcklock	6
0290	33	82 39 170			2	Plug	Plugg	5
0300	34	92 76 106			1	Support member	Stödbalk	6
0310	35	82 35 178			10	Pop rivet	Popnit	5
0320	36	84 59 489			2	Plug	Plugg	5
0330	37	92 67 998			7	Plug	Plugg	5
0340	38	92 67 980		3) LH	1	Plug	Plugg	5
0350	39	82 39 170		50)	2	Plug	Plugg	5
0360	41	92 71 263			1	Cover plate	Täckplåt	3
0370	42	82 35 178			2	Pop rivet	Popnit	5
0380	43	73 98 688			1	Screw	Skruv	5
0390	44	79 67 953			1	Nut	Mutter	5
0400		92 88 127		LENGTH 770 MM, FOR COVER	X	Tape	Tape	5
0410	45	82 06 096			1	Plug	Plugg	5
0420	46	96 53 502		AU	3	Nut plate	Mutterplatta	5
0430	47	79 72 490		AU	6	Rivet	Nit	5
0440	48	92 30 293		AU	6	Washer	Bricka	5
0450	49	82 41 325		51)	2	Plug	Plugg	5
0460	51	69 62 542			1	Seal	Tätning	6
0470	52	69 39 805		-1997, 4D	1	Towing hook	Bogserkrok	5
0480	53	69 39 839		-1997, 4D	1	Washer	Bricka	5
0490	54	79 67 979		-1997, 4D	1	Nut	Mutter	5
0500	58	69 58 987		-1997, 4D	2	Cover	Täcklock	6
0510	59	82 66 876		-1997, 4D	1	Draining plug	Dräneringsplugg	5
0520	60	41 00 541			1	Seal	Tätning	6
0530	62	41 00 533			2	Seal	Tätning	6
0540	63	69 63 912		-1997, 4D	1	Rear section	Bakdel	5
0550	63	42 93 064		5CS	1	Rear section	Bakdel	5
0560	64	69 63 920		PART OF 6963912	1	.Sill	.Tröskel	6
0570	65	69 63 904			1	.Support shape	.Stödprofil	6
0580	66	73 99 454			2	.Nut	.Mutter	5
0590	67	92 66 065		PART OF 4293064	2	.Support	.Stöd	6
0600	68	69 73 564		LH, PART OF 6963912	1	.Spacer	.Distansstycke	6

3. Rear Bakre
50. Cars without heat shield Bilar utan värmeskydd
51. Cars without ABS Bilar utan ABS

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-C10

Rear floor
Bakre golv

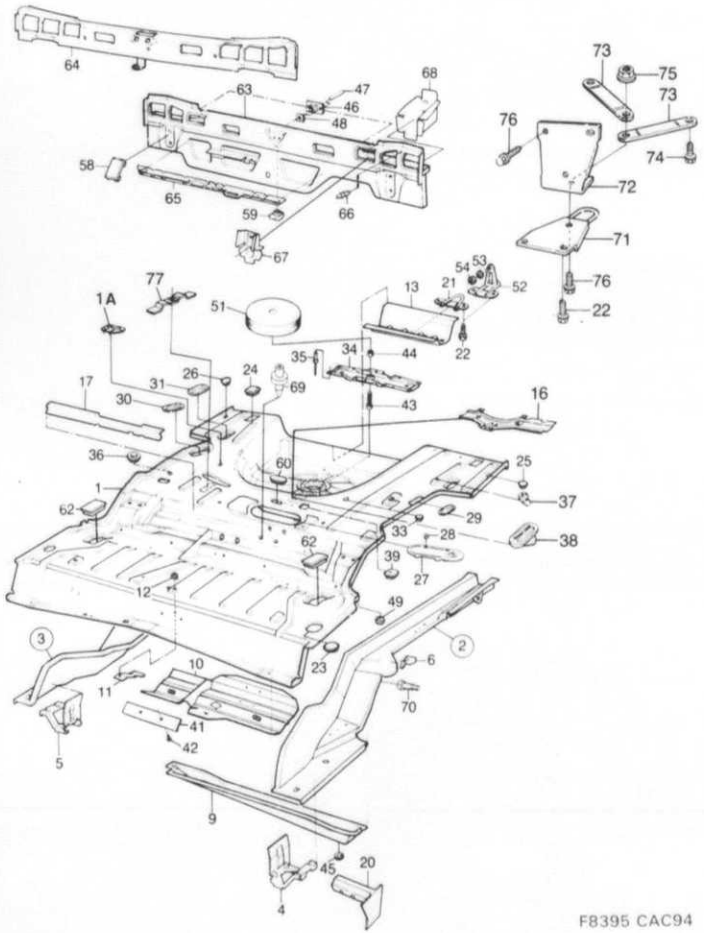

F8395 CAC94


0125	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	68	69 73 556		RH, PART OF 6963912	1	.Spacer	.Distansstycke	6
0620	69	69 60 975		-1997, 4D	4	Plug	Plugg	5
0630	70	69 73 440			1	Screw	Skruv	5
0640								
0650	71	86 62 140			1	Towing hook	Bogserkrok	5
0660	72	86 62 157			1	Support shape	Stödprofil	4
0670	73	86 62 496			2	Stay	Stag	5
0680	74	86 57 975			2	Screw	Skruv	5
0690	75	79 69 306			1	Lock nut	Låsmutter	5
0700	76	79 78 273			3	Screw	Skruv	5
0710								
0720	77	41 00 988			1	Bracket	Konsol	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

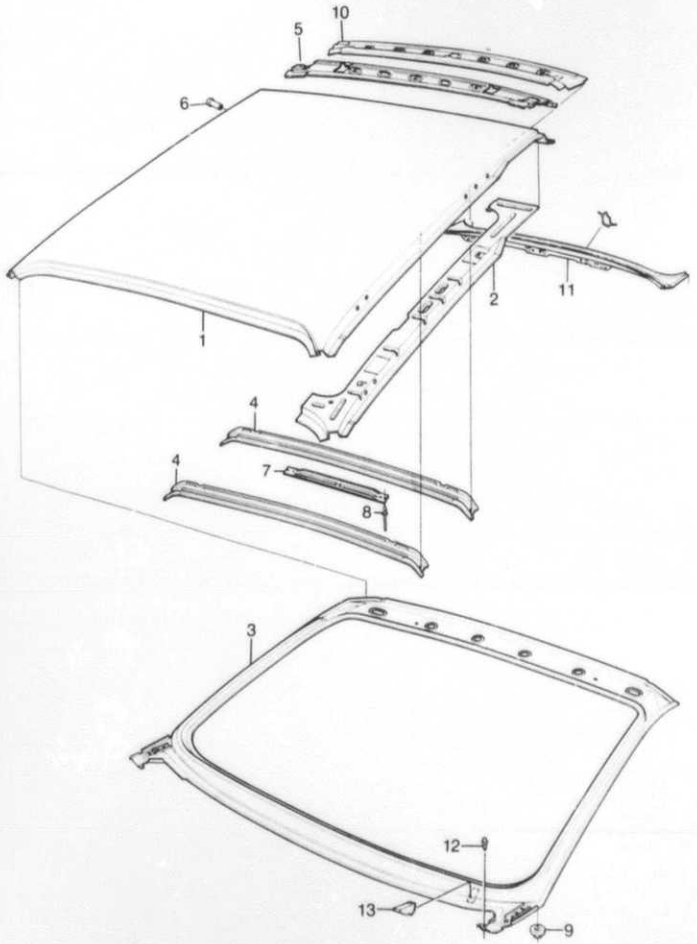

F6487 CAC94

Car body
Roof

Karosskrov
Tak

4-C12

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 09 965		5CS	1	Roof	Tak	5
0020	1	69 59 282		-1997, 4D	1	Roof	Tak	5
0030	1			SR		Roof	Tak	
0040				See page 8A-013, 4-C14				
0050	2	40 98 471		LH, 5CS	1	Beam	Balk	6
0060	2	40 98 463		RH, 5CS	1	Beam	Balk	6
0070	2	69 59 274		-1997, LH, 4D	1	Beam	Balk	6
0080	2	69 59 266		-1997, RH, 4D	1	Beam	Balk	6
0090	3	42 94 757			1	Frame	Ram	6
0100	4	92 65 869		158)	2	Beam	Balk	6
0110	5	42 93 080		5CS	1	Beam	Balk	6
0120	6	92 67 485		481)	8	Nut	Mutter	5
0130	6	• 46 85 897		482)	8	Nut	Mutter	
0140	7	69 55 322			1	Bracket	Konsol	6
0150	8	82 35 178			4	Pop rivet	Popnit	5
0160	9	92 23 991			2	Bushing	Bussning	5
0170	10	69 59 258		3) -1997, 4D	1	Beam	Balk	6
0180	11	69 59 225		154) -1997, 4D	1	Beam	Balk	6
0190	12	73 99 454		-1997, 4D	1	Nut	Mutter	5
0200	13	69 73 515			2	Seal	Tätning	5

3. Rear Bakre
154. Lower Nedre
158. Centre Mittre
481. Ch. -V1023200
482. Ch. V1023201-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20


Car body

4-C14

Sun roof

Karosskrov

Soltak

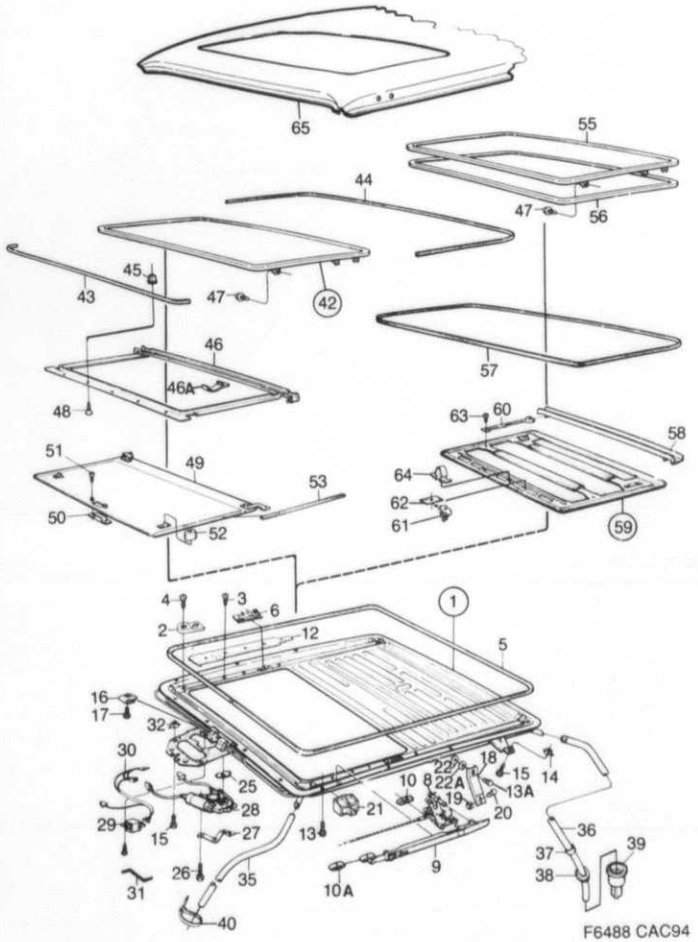

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 54 236			1	Frame	Ram	6
0020	2	69 59 787			2	.Spacer	.Mellanlägg	5
0030	3	69 59 795			6	.Screw	.Skruv	5
0040	4	79 75 162			6	.Screw	.Skruv	5
0050	5	43 03 731			1	.Sealing strip	.Tätningslist	5
0060	6	92 54 558		LH	1	.Guide	.Styrning	6
0070	6	92 54 541		RH	1	.Guide	.Styrning	6
0080								
0090		45 57 393			1	Cellular rubber	Cellgummi	
0100	8	40 05 369		149) LH	1	Cam follower	Lyftare	5
0110	8	40 05 351		149) RH	1	Cam follower	Lyftare	5
0120								
0130	8	40 05 344		150) LH	1	Cam follower	Lyftare	5
0140	8	40 05 336		150) RH	1	Cam follower	Lyftare	5
0150								
0160	9	69 75 270		LH	1	Sliding plane	Glidbana	5
0170	9	69 75 262		RH	1	Sliding plane	Glidbana	5
0180								
0190	10	40 05 195			2	Slide dog	Glidklack	5
0200	10A	92 54 848			2	Slide dog	Glidklack	5
0210	12	92 54 533		149) LH	1	Slide rail	Glidskena	5
0220	12	92 54 525		149) RH	1	Slide rail	Glidskena	5
0230	12	92 63 955		150) LH	1	Slide rail	Glidskena	5
0240	12	92 63 948		150) RH	1	Slide rail	Glidskena	5
0250	13	79 82 366			8	Screw	Skruv	5
0260	13A	79 72 607			2	Screw	Skruv	5
0270	14	79 74 231			2	Cage nut	Korgmutter	5
0280	15	92 59 524			4	Screw	Skruv	5
0290	16	79 72 573			1	Clip nut	Clipsmutter	5
0300	17	79 22 800			1	Screw	Skruv	5
0310	18	92 69 234			2	Bracket	Fäste	5
0320	19	79 74 231			2	Cage nut	Korgmutter	5
0330	20	79 74 694			2	Screw	Skruv	5
0340	21	69 57 344			2	Slide dog	Glidklack	5
0350	22	79 16 497			2	Washer	Bricka	5
0360	22A	79 82 317			2	Washer	Bricka	5
0370								
0380	25	*92 54 327*		NLS	1	Guide	Styrning	6
0390	26	92 71 909			3	Screw	Skruv	5
0400	27	92 60 142			1	Bracket	Fäste	5
0410	28	43 05 603			1	Electric motor	Elmotor	4
0420	29	43 05 918			1	.Relay	.Relä	5
0430	30	95 05 801			1	Cable harness	Ledningsnät	6
0440	31	92 54 608			1	Crank	Vev	5
0450	32	79 74 231			2	Cage nut	Korgmutter	5
0460								
0470	35	41 00 350			2	Draining hose	Dräneringsslang	5
0480								
0490	36	92 54 640			2	Draining hose	Dräneringsslang	5
0500								
0510	37	92 28 149			4	Clip	Clips	5
0520	38	92 54 707			2	Grommet	Genomföring	5
0530	39	69 61 064			4	Non-return valve	Backventil	5
0540	40	95 25 221		LH	1	Tensioning band	Spännband	5
0550	40	85 52 663		RH	1	Tensioning band	Spännband	5
0560								
0570	42	69 55 512		149)	1	Sunroof	Sollucka	5
0580	43	69 61 049		149)	1	.Sealing strip	.Tätningslist	5
0590	44	69 55 520		149)	1	.Sealing strip	.Tätningslist	5
0600	45	92 54 129		149)	5	.Washer	.Bricka	3

149. For cars with glass lid — För bilar med glaslucka
150. For cars with steel lid — För bilar med plåtlucka

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20


Car body

Karosskrov

4-C16

Sun roof

Soltak

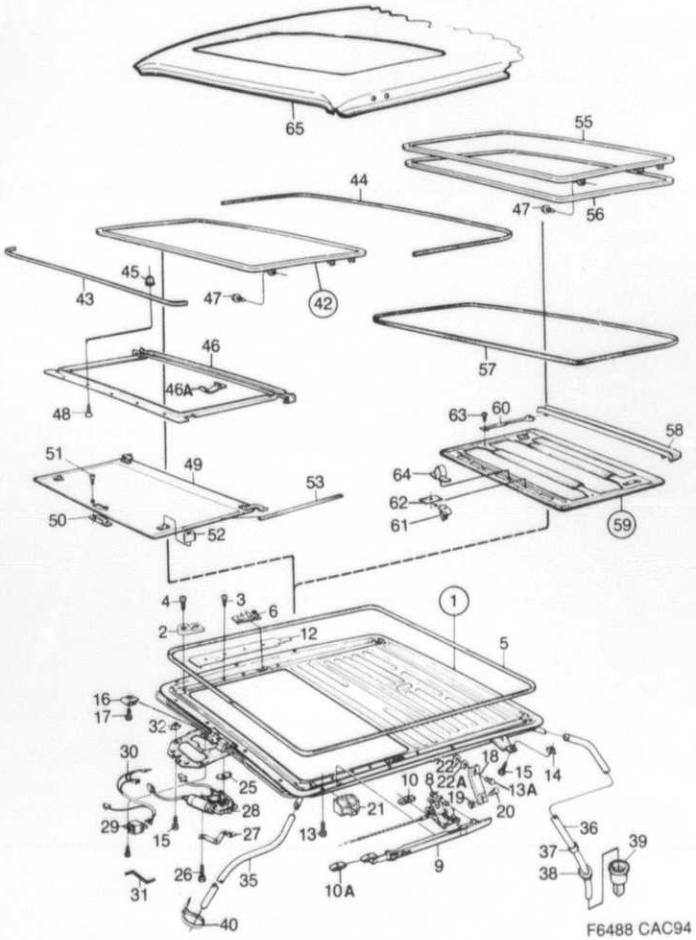

F6488 CAC94

0225	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	46	43 03 913		149)	1	Roof gutter	Ränna	5
0620	46A	*43 03 921*		149) NLS	4	.Slide dog	.Glidklack	5
0630	47	92 54 103			6	Screw	Skruv	5
0640	48	69 59 795		149)	6	Screw	Skruv	5
0650	49	69 74 679		149,313)	1	Sun visor	Solskydd	5
0660	49	45 50 455		149,314)	1	Sun visor	Solskydd	5
0670	50	92 54 459		149)	1	Handle	Handtag	6
0680	51	92 79 712		149)	2	Screw	Skruv	5
0690	52	92 79 654		149)	2	Slide dog	Glidklack	5
0700	53	92 59 342			2	Felt strip	Filtlist	5
0710								
0720	55	92 62 205		150)	1	Hatch	Lucka	5
0730	56	69 63 805		150)	1	Tape	Tape	5
0740	57	40 06 292		150)	1	Sealing strip	Tätningslist	5
0750	58	92 63 930		150)	1	Roof gutter	Ränna	5
0760	59	40 05 666		150)	1	Upholstery	Klädsel	6
0770	60	92 64 698		150), LH	1	.Link rod	.Länkstång	6
0780	60	92 64 680		150), RH	1	.Link rod	.Länkstång	6
0790	61	41 01 036		150)	2	.Clip	.Clips	5
0800	62	92 54 673		150)	2	.Felt strip	.Filtlist	5
0810	63	92 59 383		150)	2	.Rivet	.Nit	
0820	64	92 63 922		150)	4	Upholstery clip	Klädselfäste	6
0830								
0840	65	40 09 999		5CS	1	Roof	Tak	5
0850	65	69 59 001		-1997, 4D	1	Roof	Tak	5


149. For cars with glass lid — För bilar med glaslucka
150. For cars with steel lid — För bilar med plåtlucka
313. Ch. -R1005959
314. Ch. R1005960-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

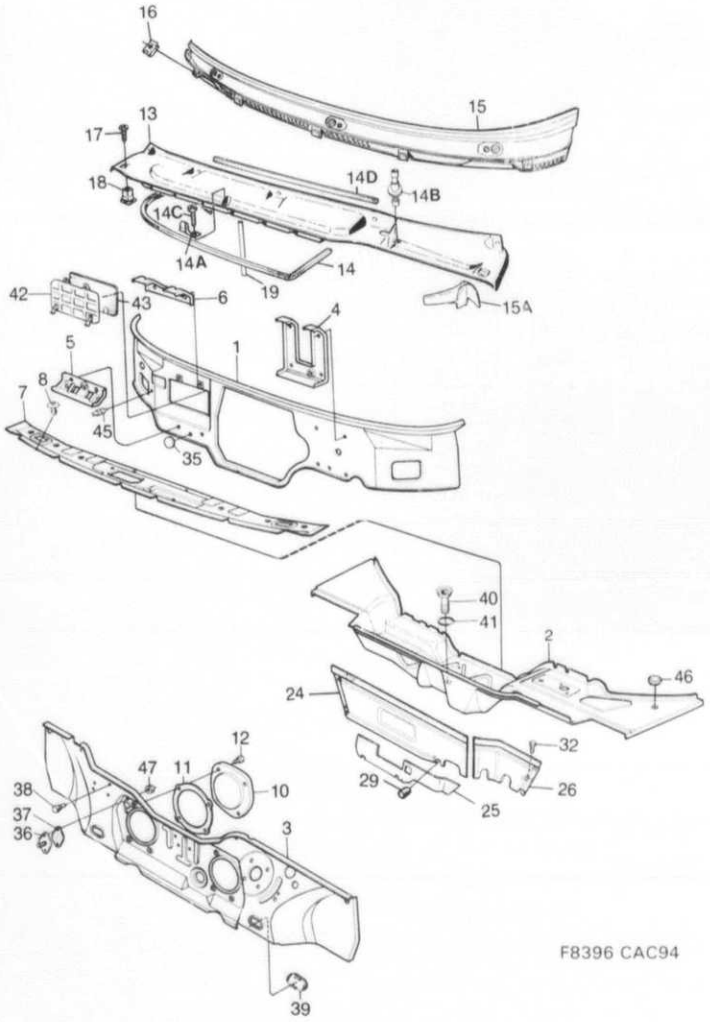

Car body
4-C18
Cowl plate

Karosskrov
Torpedplåt

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 718			1	Cowl plate	Torpedplåt	6
0020	2	41 00 301		-1995	1	Cowl plate	Torpedplåt	6
0030	2	42 98 626		1996-	1	Cowl plate	Torpedplåt	6
0040	3	42 93 700			1	Cowl plate	Torpedplåt	2
0050	4	42 93 734		LH	1	Bracket	Konsol	6
0060	5	92 65 786		RH	1	Bracket	Konsol	6
0070	6	92 65 794		RH	1	Bracket	Konsol	6
0080	7	40 05 062			1	Cover plate	Täckplåt	5
0090	8	92 76 353			6	Plug	Plugg	5
0100	10	89 56 294			1	Cover	Täcklock	5
0110	11	89 56 245			1	Seal	Tätning	5
0120	12	79 71 294		-1995	4	Screw	Skruv	5
0130	12	79 72 607		1996-	4	Screw	Skruv	5
0140								
0150	13	43 18 598			1	Cover	Lock	5
0160	13	43 18 606		AC/ACC	1	Cover	Lock	5
0170	14	96 30 674			1	.Seal	.Tätning	4
0180	14	40 73 631		AC/ACC	1	.Seal	.Tätning	4
0190	14A	40 70 785			1	.Brace	.Bygel	6
0200	14B	40 94 199			1	.Connector	.Skarvstycke	5
0210	14C	47 55 914			1	.Screw	.Skruv	5
0220	14D	40 73 110			1	.Seal	.Tätning	5
0230								
0240	15	96 30 021		-1994, 4D	1	Screen	Avskärmning	5
0250	15	40 74 332		1995-1997, 4D	1	Screen	Avskärmning	5
0260	15	40 74 332		5CS	1	Screen	Avskärmning	5
0270								
0280	15A	40 74 696		1995-1997, 4D, LH	1	Screen	Avskärmning	5
0290	15A	40 74 688		1995-1997, 4D, RH	1	Screen	Avskärmning	5
0300	15A	40 74 696		5CS, LH	1	Screen	Avskärmning	5
0310	15A	40 74 688		5CS, RH	1	Screen	Avskärmning	5
0320								
0330	16	94 27 014			5	Clip nut	Clipsmutter	3
0340	17	79 83 000			7	Hexagon screw	Sexkantsskruv	5
0350	18	79 77 341			3	Press nut	Pressmutter	5
0360	19	43 18 499		AC	1	Draining hose	Dräneringsslang	5
0370								
0380	24	40 08 538		-1994, REMOVABLE	1	Cowl plate	Torpedplåt	6
0390	24	42 95 630		1995-, REMOVABLE	1	Cowl plate	Torpedplåt	6
0400	25			1)	1	.Sound absorber	.Ljudabsorbent	
0410	26				1	Bracket	Fäste	
0420				See page 2-077, 1-F06				
0430								
0440	29	40 16 192		I	1	Plug	Plugg	5
0450	32	79 77 465			2	Screw	Skruv	5
0460	35	89 29 531			1	Sealing washer	Tätningsbricka	5
0470	36	89 71 582			1	Plate	Plåt	2
0480	37	89 41 478			1	Gasket	Packning	5
0490	38	82 09 009			2	Buffer	Buffert	5
0500	39	92 67 816			2	Cover	Lock	5
0510	40	69 55 561			2	Draining pipe	Dräneringsrör	5
0520	41	92 88 127			X	Tape	Tape	5
0530	42	40 74 936			1	Hatch	Lucka	6
0540	43	96 27 746			1	.Seal	.Tätning	5
0550	45	73 99 454			1	Nut	Mutter	5
0560	46	71 62 308		ABS	1	Plug	Plugg	5
0570	46	71 62 308			2	Plug	Plugg	5
0580	47	79 65 767			2	Lock nut	Låsmutter	3
0590		82 83 715		8283715= 3M	X	Tape	Tape	3

1. Not as separate spare part. Ej som separat reservdel.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4 -C20

Wheel housing, front

Hjulhus, främre

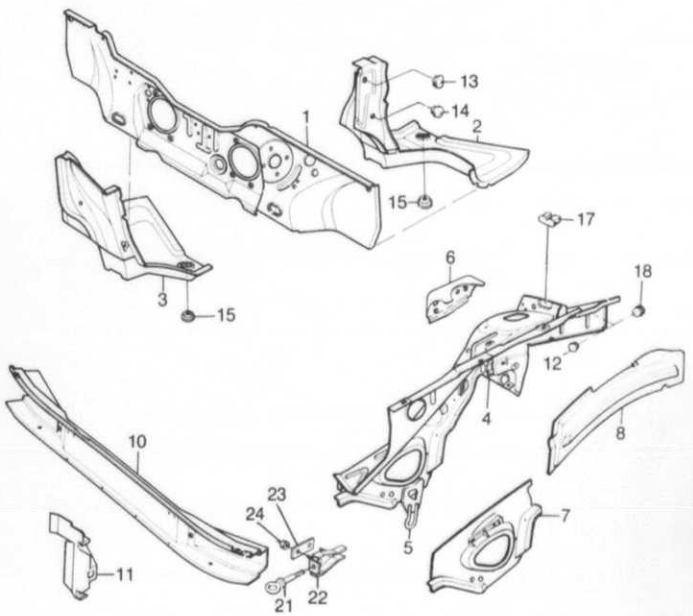

F6490 CAC94

0260	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1			See page 8A-017, 4-C18	1	Cowl plate	Torpedplåt	
0020	2	92 65 844			1	Reinforcement	Förstärkning	6
0030	3	42 93 726			1	Reinforcement	Förstärkning	6
0040	4	40 98 711		LH	1	Wheel housing	Hjulhus	5
0050	4	40 98 729		RH	1	Wheel housing	Hjulhus	5
0060	5	69 55 678		RH ONLY	1	„Towing hook	„Bogserkrok	6
0070	6	42 93 882		RH ONLY	1	„Bracket	„Konsol	5
0080	7	40 98 695		LH	1	Plate	Plåt	3
0090	7	40 98 703		RH	1	Plate	Plåt	3
0100	8	92 75 793		LH	1	Reinforcement	Förstärkning	4
0110	8	92 75 785		RH	1	Reinforcement	Förstärkning	4
0120	10	40 09 700			1	Beam	Balk	4
0130	11	90 88 675		5CS	2	Air shield	Luftskärm	5
0140	11	90 88 675		1995-1997, 4D	2	Air shield	Luftskärm	5
0150	12	82 06 096			1	Plug	Plugg	5
0160	13	92 67 915			3	Plug	Plugg	5
0170	14	92 68 178			2	Plug	Plugg	5
0180	15	92 68 863			2	Plug	Plugg	5
0190								
0200	17	41 17 628		-1994, LH	1	Bracket	Hållare	6
0210	17	45 83 902		1995-, LH	1	Bracket	Hållare	6
0220	17	41 17 610		RH	1	Bracket	Hållare	6
0230	17	41 17 602		AC, ACC, RH	1	Bracket	Hållare	6
0240								
0250	18	70 38 342		-1994, RH ONLY	1	Plug	Plugg	5
0260	18	43 33 480		1995-, RH ONLY	1	Plug	Plugg	5
0270								
0280	21	86 70 002		5CS AERO	1	Towing eye	Dragögla	6
0290	22	90 90 119		5CS AERO	1	Retaining plate	Hållarplatta	4
0300	23	90 90 135		5CS AERO	1	Clamping plate	Klämplatta	4
0310	24	79 74 371			2	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-C22

Wheel housing, rear

Hjulhus, bakre

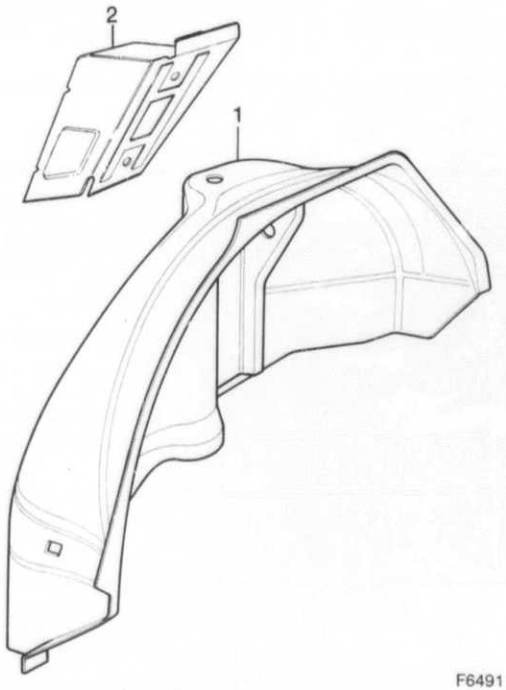

F6491 CAC94


0300	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0050	1	40 07 217		LH	1	Wheel housing	Hjulhus	6
0060	1	40 07 209		RH	1	Wheel housing	Hjulhus	6
0070								
0100	2	40 07 316		-1997, 4D, LH	1	Support plate	Stödplåt	6
0110	2	40 07 308		-1997, 4D, RH	1	Support plate	Stödplåt	6
0120	2	42 93 932		5CS, LH	1	Support plate	Stödplåt	6
0130	2	42 93 940		5CS, RH	1	Support plate	Stödplåt	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

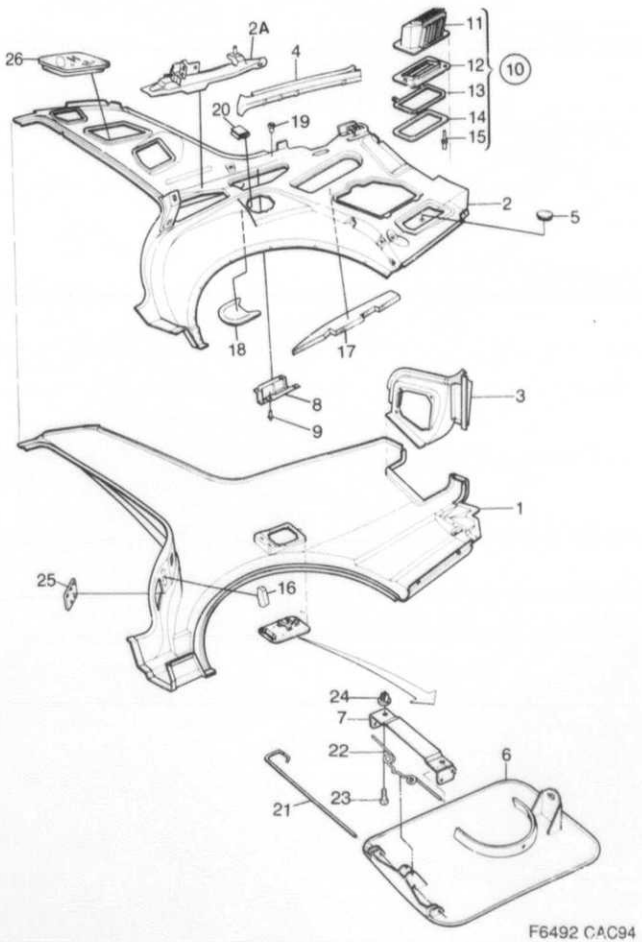

Car body

4 – C24 *Side plate*

4D, -1997

Karosskrov

Sidoplåt

4D, -1997

0425	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 98 570		153) -1994, LH	1	Side plate	Sidoplåt	4
0020	1	40 98 562		153) -1994, RH	1	Side plate	Sidoplåt	4
0030								
0040	1	42 94 658		153) 1995-, LH	1	Side plate	Sidoplåt	4
0050	1	42 94 641		153) 1995-, RH	1	Side plate	Sidoplåt	4
0060								
0070	2	40 07 233		152) LH	1	Side plate	Sidoplåt	6
0080	2	40 07 241		152) RH	1	Side plate	Sidoplåt	6
0090	2A	42 94 278		LH	1	Reinforcement	Förstärkning	6
0100	2A	42 94 260		RH	1	Reinforcement	Förstärkning	6
0110	3	69 73 002		LH	1	Corner	Hörn	5
0120	3	69 63 961		RH	1	Corner	Hörn	5
0130	4	69 73 028		LH	1	Roof gutter	Ränna	5
0140	4	69 73 010		RH	1	Roof gutter	Ränna	5
0150	5	92 67 899		LH ONLY	1	Plug	Plugg	5
0160	6	43 06 510			1	Cover	Täcklock	5
0170	7	92 55 910			1	Hinge	Gångjärn	5
0180	8	69 41 017			1	Spacer	Distansstycke	5
0190	9	69 45 505			4	Rivet	Nit	5
0200	10	96 28 843			1	Air outlet	Luftutsläpp	5
0210	11	96 28 850			1	,Cover	,Kåpa	5
0220	12	96 28 868			1	,Grille	,Galler	5
0230	13	96 28 876			2	,Flap	,Klaff	5
0240	14	96 28 884			1	,Seal	,Tätning	5
0250	15	79 75 717			1	Rivet	Nit	5
0260	16	69 73 549			2	Seal	Tätning	5
0270	17	69 75 460			1	Damper mat	Dampmatta	5
0280	18	89 82 472		-1995	1	Sealing collar	Tätningskrage	5
0290	19	73 99 454			1	Nut	Mutter	5
0300	20	69 75 510			1	Protection	Skydd	5
0310	21	92 76 403			1	Shaft	Axel	5
0320	22	40 05 948			1	Spring	Fjäder	5
0330	23	79 67 730			2	Screw	Skruv	5
0340	24	*92 36 589*		NLS – USE 4013165	2	Clip	Clips	5
0350	25	92 67 527			2	Cover	Lock	5
0360	26	40 98 950		LH	1	Seal	Tätning	6
0370	26	40 98 943		RH	1	Seal	Tätning	6


152. Inner Inre
153. Outer Yttre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

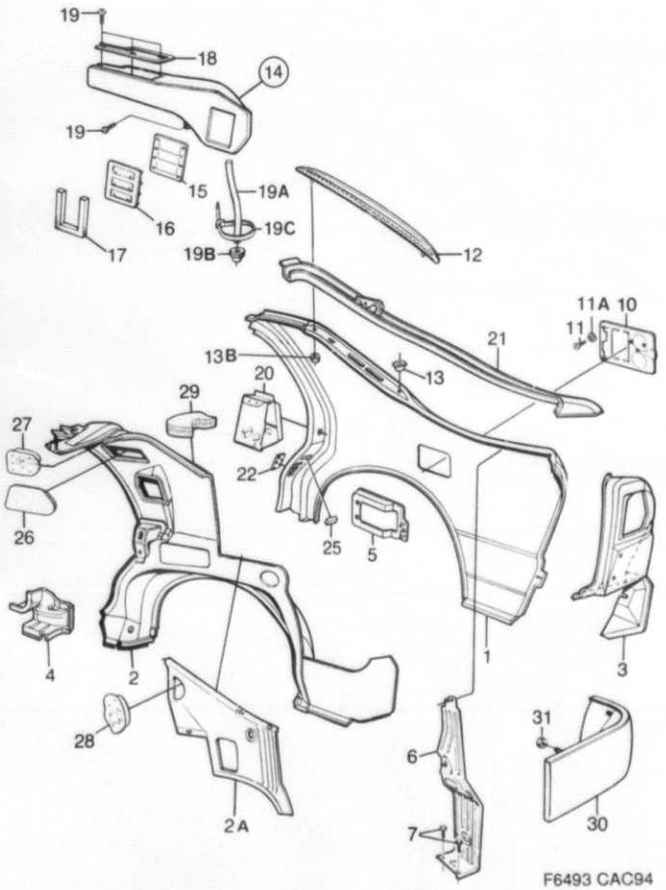

F6493 CAC94

Car body

4-D02 Side plate 5CS

Karosskrov

Sidoplåt 5CS

0430	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 130		153) LH	1	Side plate	Sidoplåt	4
0020	1	42 93 122		153) RH	1	Side plate	Sidoplåt	4
0030	2	42 93 114		152) LH	1	Side plate	Sidoplåt	6
0040	2	42 93 106		152) RH	1	Side plate	Sidoplåt	6
0050	2A	42 94 716		LH	1	Support plate	Stödplåt	6
0060	2A	42 94 708		RH	1	Support plate	Stödplåt	6
0070	3	42 93 171		LH	1	Corner	Hörn	5
0080	3	42 93 163		RH	1	Corner	Hörn	5
0090	4	42 93 478		LH	1	Extension	Förlängning	5
0100	4	42 93 460		RH	1	Extension	Förlängning	5
0110	5	42 93 791		RH	1	Attaching plate	Fästplåt	5
0120	6			LH	1	Support plate	Stödplåt	
0130				See page 3A-093, 2-D22				
0140	6	42 69 759		RH	1	Support plate	Stödplåt	6
0150	7	79 78 091			3	Screw	Skruv	5
0160								
0170	10	43 06 171			1	Filler cap	Tanklock	5
0180	11	79 78 091			2	Screw	Skruv	5
0190	11A	80 29 951			1	Washer	Bricka	5
0200								
0210	12	43 83 667		LH	1	Exhaust grille	Evakueringsgaller	5
0220	12	43 83 659		RH	1	Exhaust grille	Evakueringsgaller	5
0230	13	96 30 526			4	Clamp	Klämma	5
0240	13B	79 74 298			2	Nut	Mutter	5
0250	14	40 72 096		-1995, LH	1	Box	Låda	5
0260	14	40 72 088		-1995, RH	1	Box	Låda	5
0270	14	46 35 264		1996-, LH	1	Box	Låda	5
0280	14	46 35 256		1996-, RH	1	Box	Låda	5
0290	15	40 72 062			1	.Valve	.Ventil	5
0300	16	40 72 070			1	.Bracket	.Hållare	6
0310	17	40 72 104			1	.Seal	.Tätning	5
0320	18	40 72 120			1	.Seal	.Tätning	5
0330	19	79 84 305		-1995	8	Hexagon screw	Sexkantsskruv	5
0340	19	40 87 938		1996-	8	Screw	Skruv	5
0350	19A	43 82 990			2	Draining hose	Dräneringsslang	5
0360	19B	92 54 707			2	Grommet	Genomföring	5
0370	19C	79 71 864			2	Tensioning band	Spännband	5
0380								
0390	20	42 93 197		LH	1	Bracket	Hållare	5
0400	20	42 93 189		RH	1	Bracket	Hållare	5
0410	21	42 93 155		LH	1	Roof gutter	Ränna	5
0420	21	42 93 148		RH	1	Roof gutter	Ränna	5
0430	22	92 67 527			2	Cover	Lock	5
0440	25	41 01 721			2	Seal	Tätning	5
0450	26	41 01 358		LH	1	Seal	Tätning	4
0460	26	41 01 366		RH	1	Seal	Tätning	4
0470	27	42 93 676		LH	1	Seal	Tätning	4
0480	27	42 93 668		RH	1	Seal	Tätning	4
0490	28	41 01 374		LH	1	Seal	Tätning	4
0500	28	41 01 341		RH	1	Seal	Tätning	4
0510	29	41 01 606			2	Seal	Tätning	4
0520								
0530	30	90 88 998		402) LH	1	Corner	Hörn	5
0540	30	*90 88 980*		402) RH NLS - USE 4295101	1	Corner	Hörn	5
0550	30	42 95 119		403) LH	1	Corner	Hörn	5
0560	30	42 95 101		403) RH	1	Corner	Hörn	5
0570	31	79 77 929			8	Nut	Mutter	5

152. Inner Inre
153. Outer Yttre
402. Ch. -S1027949
403. Ch. S1027950-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D04

Door frame
Dörram

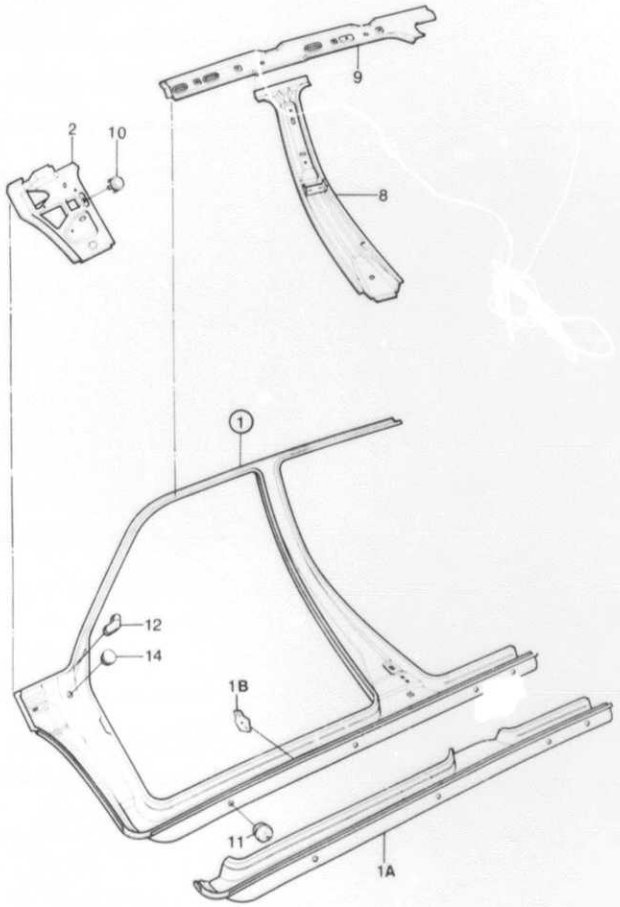

F6494 CAC94

0450	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0090	1	41 01 630		LH	1	Door frame	Dörram	6
0100	1	41 01 648		RH	1	Door frame	Dörram	6
0110	1A	40 99 636		LH	1	.Sill	.Tröskel	6
0120	1A	40 99 628		RH	1	.Sill	.Tröskel	6
0130	1B	42 94 419		LH	1	.Bulkhead	.Skott	5
0140	1B	42 94 401		RH	1	.Bulkhead	.Skott	5
0160	2	42 93 759		LH	1	Cover plate	Täckplåt	6
0180	2	42 93 908		RH	1	Cover plate	Täckplåt	6
0280	7	41 01 481			2	Bracket	Hållare	5
0290	8	69 76 138		LH	1	B-pillar	B-stolpe	6
0300	8	69 76 120		RH	1	B-pillar	B-stolpe	6
0310	9	69 76 096		152) LH	1	Beam	Balk	6
0320	9	69 76 088		152) RH	1	Beam	Balk	6
0330	10	92 68 988			2	Cover	Lock	5
0340	11	92 67 931			8	Plug	Plugg	5
0350	12	41 00 376			2	Seal	Tätning	4
0360	14	82 04 760			1	Plug	Plugg	5

152. Inner Inre


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D06

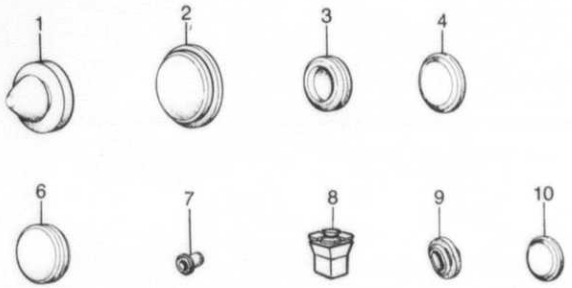

F6495 CAC94

0475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 30 572		HOLE ∅ 5,8MM	X	Plug	Plugg	5
0020	1	82 67 296		HOLE ∅ 7,4MM	X	Plug	Plugg	5
0030	2	85 75 599		HOLE ∅ 25MM	X	Plug	Plugg	5
0040	3	92 68 178		HOLE ∅ 16MM	X	Plug	Plugg	5
0050	4	71 55 708		-1994, HOLE ∅ 35MM	X	Plug	Plugg	5
0060	4	43 33 498		1995-, HOLE ∅ 35MM	X	Plug	Plugg	5
0070	4	70 38 342		-1994, HOLE ∅ 22MM	X	Plug	Plugg	5
0080	4	43 33 480		1995-, HOLE ∅ 20MM	X	Plug	Plugg	5
0090	6	82 06 096		HOLE ∅ 12MM	X	Plug	Plugg	5
0100	7	82 72 635		HOLE ∅ 10MM	X	Plug	Plugg	5
0110	8	79 75 261		SQUARE HOLE, 8MM	X	Nut	Mutter	5
0120	9	92 67 915		OVAL HOLE ∅ 12 - 16MM	X	Plug	Plugg	5
0130	9	92 67 899		OVAL HOLE ∅ 20 - 25MM	X	Plug	Plugg	5
0140	10	92 68 186		HOLE ∅ 11MM	X	Plug	Plugg	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D08

Hood, hinges and locks
Huv, gångjärn och lås

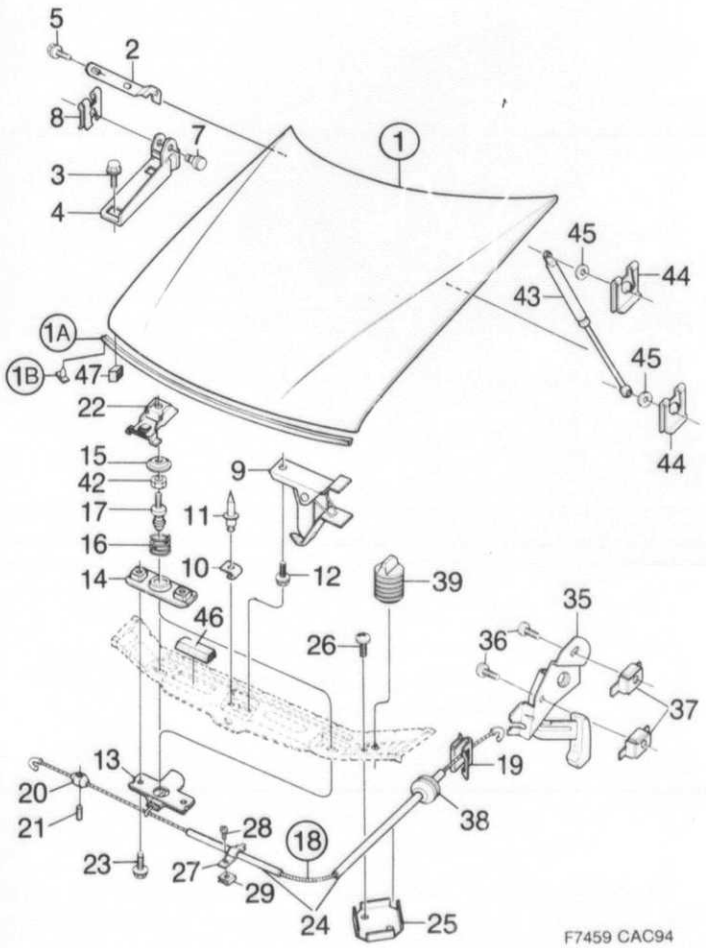

	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	69 57 393		-1994, 4D	1	Bonnet	Motorhuv	3
0020	1	42 93 031		1995-1997, 4D	1	Bonnet	Motorhuv	3
0030	1	42 93 031		5CS	1	Bonnet	Motorhuv	3
0040								
0050	1A	44 94 464		1995-1997, 4D	1	Seal	Tätning	4
0060	1A	44 94 464		5CS	1	Seal	Tätning	4
0070	1B	90 87 289			12	,Clip	,Clips	5
0080								
0090	2	92 55 779		-1994, LH, 4D	1	Hinge	Gångjärn	3
0100	2	92 55 761		-1994, RH, 4D	1	Hinge	Gångjärn	3
0110	2	90 81 159		1995-1997, LH, 4D	1	Hinge	Gångjärn	3
0120	2	90 81 142		1995-1997, RH, 4D	1	Hinge	Gångjärn	3
0130	2	90 81 159		LH, 5CS	1	Hinge	Gångjärn	3
0140	2	90 81 142		RH, 5CS	1	Hinge	Gångjärn	3
0150								
0160	3	82 62 958			4	Screw	Skruv	5
0170	4	92 55 738		-1994, LH, 4D	1	Hinge	Gångjärn	3
0180	4	92 55 720		-1994, RH, 4D	1	Hinge	Gångjärn	3
0190	4	90 81 175		1995-1997, LH, 4D	1	Hinge	Gångjärn	3
0200	4	90 81 167		1995-1997, RH, 4D	1	Hinge	Gångjärn	3
0210	4	90 81 175		LH, 5CS	1	Hinge	Gångjärn	3
0220	4	90 81 167		RH, 5CS	1	Hinge	Gångjärn	3
0230								
0240	5	82 62 958			4	Screw	Skruv	5
0250	7	92 55 712			2	Pin	Tapp	5
0260	8	82 52 553			2	Clip	Clips	5
0270								
0280	9	69 73 622		-1994, 4D	1	Catch	Hake	3
0290	9	40 98 273		1995-1997, 4D	1	Catch	Hake	3
0300	9	40 98 273		5CS	1	Catch	Hake	3
0310	10	92 59 912			1	Guard	Skydd	4
0320	11	79 72 490			1	Rivet	Nit	5
0330	12	82 86 296		-1994	1	Screw	Skruv	5
0340	12	79 84 305		1995-	1	Hexagon screw	Sexkantsskruv	5
0350	13	69 73 689			2	Bonnet lock	Huvlås	3
0360	13	69 73 697		RHD	2	Bonnet lock	Huvlås	3
0370	14	69 73 671			2	Guide	Styrning	5
0380	15	69 73 762			2	Washer	Bricka	5
0390	16	69 73 770			2	Return spring	Returfjäder	5
0400	17	69 73 788			2	Lock pin	Låstapp	4
0410	18	69 73 218			1	Hood lock wire	Huvlåswire	2
0420	19	82 64 855			1	,Clip	,Clips	5
0430	20	69 73 804			2	Clip	Clips	5
0440	21	79 75 477			2	Set screw	Stoppskruv	5
0450	22	79 75 352			2	Cage nut	Korgmutter	5
0460	23	82 86 296			4	Screw	Skruv	5
0470	24	92 61 652			1	Tube	Rör	5
0480								
0490	25	69 59 753		1997-1994, 4D	1	Cap	Överfall	5
0500	25	69 59 753		357) 5CS	1	Cap	Överfall	5
0510	26	79 73 001		1997-1994, 4D	2	Screw	Skruv	5
0520	26	79 73 001		357) 5CS	2	Screw	Skruv	5
0530								
0540	27	43 21 808		1995-1997, 4D	1	Clamp	Klämma	5
0550	27	43 21 808		358) 5CS	1	Clamp	Klämma	5
0560	28	79 73 159		1995-1997, 4D	1	Screw	Skruv	5
0570	28	79 73 159		358) 5CS	1	Screw	Skruv	5
0580	29	79 67 995		1995-1997, 4D	1	Clip nut	Clipsmutter	3
0590	29	79 67 995		358) 5CS	1	Clip nut	Clipsmutter	3
0600								
0610	35	40 54 912			1	Control	Reglage	5

357. Ch. -R1017528
358. Ch. R1017529-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D10

Hood, hinges and locks

Huv, gångjärn och lås

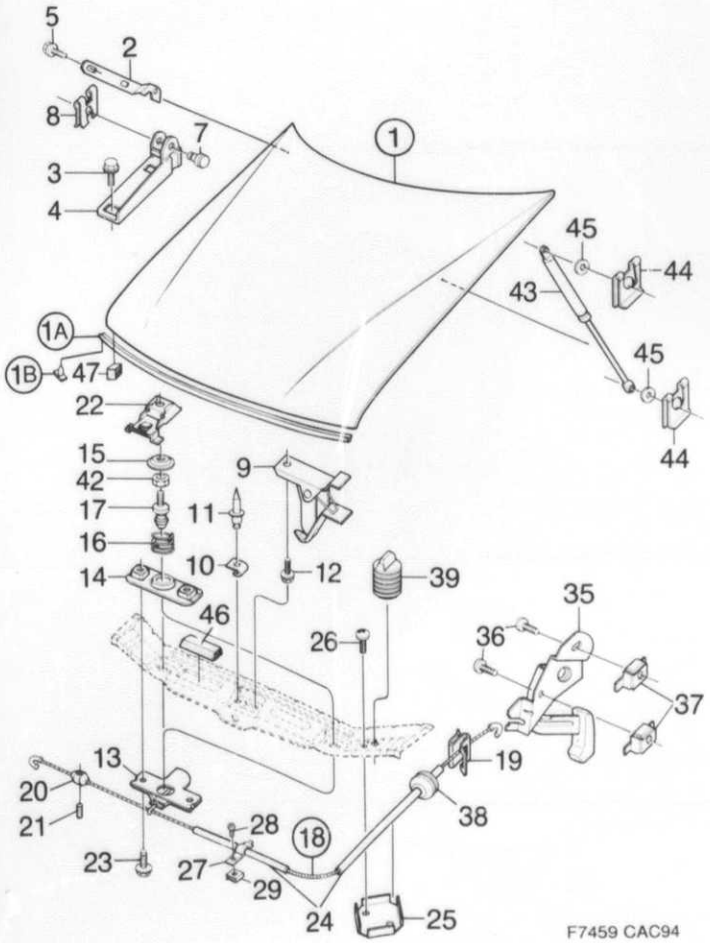


0550	Pos	Part No/Art nr	K. S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	35	40 54 920		RHD	1	Control	Reglage	5
0630	36	85 59 396			2	Screw	Skruv	5
0640	37	7[illegible]4 231			2	Cage nut	Korgmutter	5
0650	38	7[illegible]1 311			1	Bushing	Bussning	4
0660	39	43 04 234			2	Rubber buffer	Gummibuffert	4
0690	42	81 51 235			2	Nut	Mutter	5
0700	43	92 70 240			2	Spring	Fjäder	3
0710	44	82 52 553			4	Clip	Clips	5
0720	45	82 52 363			8	Washer	Bricka	5
0730	46	92 69 390			2	Support	Stöd	5
0740	47	45 56 940			2	Rubber bushing	Gummibussning	4
0750		96 98 523		See page 8A-115, 4-G20	2	Bonnet lock kit	Huvlåssats	3
0760		96 98 515		RHD	2	Bonnet lock kit	Huvlåssats	3
0770				See page 8A-115, 4-G20				


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

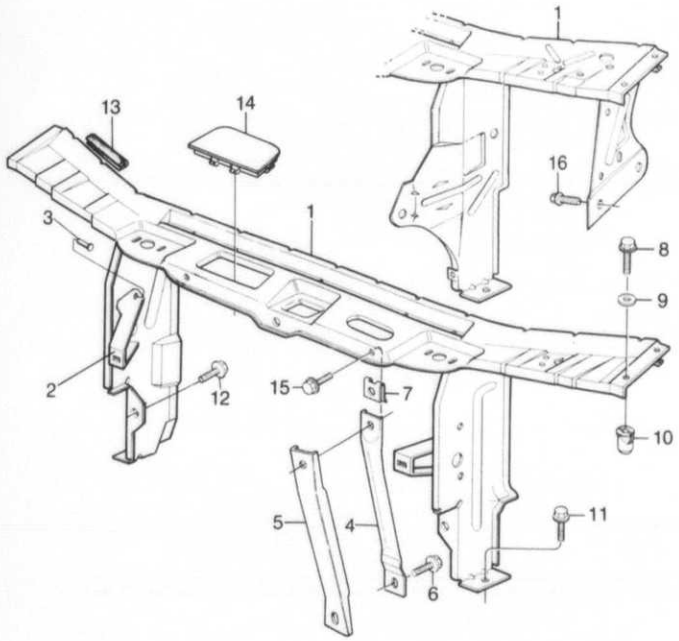

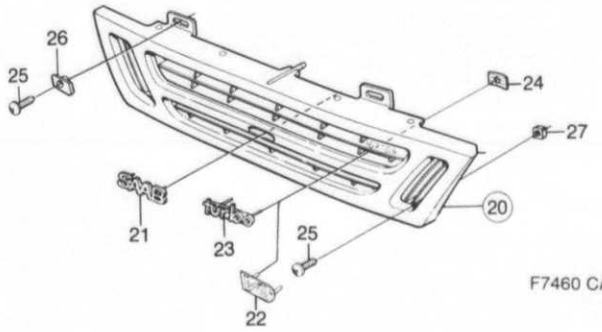

F7460 CAC94

Hood, front, fenders

4-D12 Front member Grille

Motorhuv, front, skärmar

Frontbalk
Grill

0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 61 858		-1994, 4D	1	Beam	Balk	3
0020	1	42 93 072		1995-1997, 4D	1	Beam	Balk	3
0030	1	42 93 072		5CS	1	Beam	Balk	3
0040								
0050	2	69 39 755		-1994, 4D	2	Bracket	Fäste	3
0060	3	79 72 516		-1994, 4D	4	Rivet	Nit	5
0070								
0080	4	92 60 712		-1994, LH, 4D	1	Stay	Stag	5
0090	4	92 60 704		-1994, RH, 4D	1	Stay	Stag	5
0100	4	90 88 444		1995-1997, 4D	2	Stay	Stag	5
0110	4	90 88 444		5CS	2	Stay	Stag	5
0120								
0130	5	90 88 535		1995-1997, 4D	2	Guard	Skydd	5
0140	5	90 88 535		5CS	2	Guard	Skydd	5
0150								
0160	6	79 75 782		-1994, 4D	2	Screw	Skruv	5
0170	6	79 73 050		1995-1997, 4D	2	Screw	Skruv	5
0180	6	79 73 050		5CS	2	Screw	Skruv	5
0190								
0200	7	73 99 181			2	Clip	Clips	5
0210	8	79 74 694			4	Screw	Skruv	5
0220	9	73 98 829			4	Washer	Bricka	5
0230	10	42 95 200			4	Cage nut	Korgmutter	5
0240	11	79 73 134			2	Screw	Skruv	5
0250	12	*79 75 170*		NLS - USE 7982366	2	Screw	Skruv	5
0260	13	82 78 558			1	Protecting moulding	Skyddslist	5
0270	14	75 77 331		-1994, I WITH AC, US, ME, FE, JP, AU, CA	1	Protecting casing	Skyddskåpa	4
0280								
0290	15	79 75 782		-1994, 4D	2	Screw	Skruv	5
0300	15	79 73 050		1995-1997, 4D	2	Screw	Skruv	5
0310	15	79 73 050		5CS	2	Screw	Skruv	5
0320	16	79 78 109		1995-1997, 4D	4	Screw	Skruv	5
0330	16	79 78 109		5CS	4	Screw	Skruv	5
0340								
0350	20	92 78 136		-1994, 4D	1	Grille	Grill	3
0360	20	44 46 605		1995-1997, 4D	1	Grille	Grill	3
0370	20	44 46 605		5CS	1	Grille	Grill	3
0380	21	69 56 593		"SAAB"	1	.Emblem	.Emblem	3
0390								
0400	22	44 35 939		-1996, "V6"	1	Emblem	Emblem	3
0410	23	69 62 823		-1994, 4D, "TURBO"	1	Emblem	Emblem	3
0420	23	*92 63 997*		-1994, 5CS, "TURBO" NLS - USE 4521563	1	Emblem	Emblem	3
0430	23	45 21 563		1995-1996, "TURBO"	1	Emblem	Emblem	3
0440	24	79 19 483		-1996	2	Clip	Clips	5
0450	25	79 77 960		-1997, 4D	4	Screw	Skruv	5
0460	25	84 26 199		326) 5CS	2	Screw	Skruv	5
0470	25	79 77 960		327) 5CS	2	Screw	Skruv	5
0480	26	40 89 462		-1994, 4D	2	Clip	Clips	3
0490	26	40 89 454		1995-1997, 4D	2	Clip	Clips	3
0500	26	40 89 454		5CS	2	Clip	Clips	3
0510	27	79 75 261		326)	2	Nut	Mutter	5
0520	27	79 82 929		327)	2	Press nut	Pressmutter	3

326. Ch. -R1014857
327. Ch. R1014858-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D14

Front fender
4D, -1994

Framskärm
4D, -1994

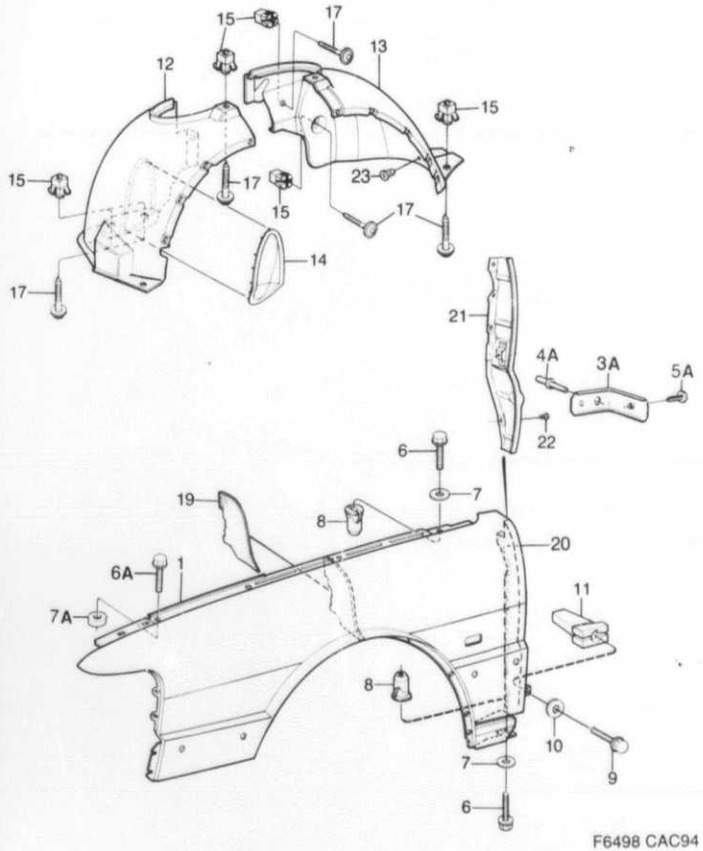

F6498 CAC94

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	92 73 939		LH	1	Front fender	Framskärm	3
0020	1	92 73 921		RH	1	Front fender	Framskärm	3
0030	3A	92 40 078		331)	2	Bracket	Hållare	4
0040	4A	79 72 490		330)	10	Rivet	Nit	5
0050	4A	79 72 490		331)	2	Rivet	Nit	5
0060	5A	79 73 050			2	Screw	Skruv	5
0070	6	79 74 694			10	Screw	Skruv	5
0080	6A	79 75 436			2	Screw	Skruv	5
0090	7	73 98 829			10	Washer	Bricka	5
0100	7A	41 00 897			2	Washer	Bricka	5
0110	8	42 95 200			10	Cage nut	Korgmutter	5
0120	9	79 23 014			2	Screw	Skruv	5
0130	10	80 29 977			2	Washer	Bricka	5
0140	11	92 52 958			2	Clip	Clips	3
0150	12	42 94 054		LH	1	Wheel housing	Hjulhus	5
0160	12	42 94 047		RH	1	Wheel housing	Hjulhus	5
0170	13	69 45 356		LH	1	Wheel housing	Hjulhus	5
0130	13	69 45 349		RH	1	Wheel housing	Hjulhus	5
0190	14	92 62 601		RH	1	,Cover	,Kåpa	3
0200	15	79 82 655			12	Press nut	Pressmutter	5
0210	17	79 82 325			12	Screw	Skruv	5
0220	19	92 79 860			2	Screen	Avskärmning	5
0230	20	69 57 708		330)	2	Screen	Avskärmning	5
0240	20	42 96 208		331)	2	Screen	Avskärmning	5
0250	21	*42 95 150*		330) LH NLS – USE 4296208, 9240078	1	End plate	Gavel	5
0260	21	*42 95 168*		330) RH NLS – USE 4296208, 9240078	1	End plate	Gavel	5
0270	22	79 72 516			5	Rivet	Nit	5
0280	23	90 87 040			4	Nut	Mutter	5

330. Ch. -R1017886
331. Ch. R1017887-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D16

Front fender
5CS; 4D 1995-1997

Framskärm
5CS; 4D 1995-1997

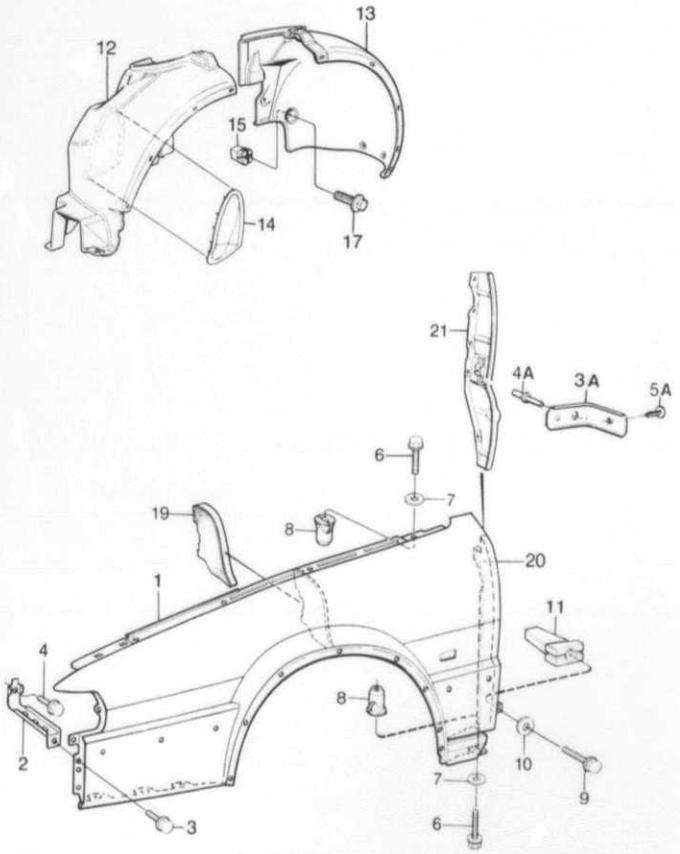

F6499 CAC94

0660	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 015		LH	1	Front fender	Framskärm	3
0020	1	42 93 007		RH	1	Front fender	Framskärm	3
0030	2	43 03 962			2	Bracket	Fäste	4
0040	3	79 78 091			4	Screw	Skruv	5
0050	3A	92 40 078		331)	2	Bracket	Hållare	4
0060	4	79 78 109			2	Screw	Skruv	5
0070	4A	79 72 516		330)	10	Rivet	Nit	5
0080	4A	79 72 516		331)	2	Rivet	Nit	5
0090	5A	79 73 050			2	Screw	Skruv	5
0100	6	79 74 694			8	Screw	Skruv	5
0110	7	73 98 829			8	Washer	Bricka	5
0120	8	42 95 200			8	Cage nut	Korgmutter	5
0130	9	79 23 014			2	Screw	Skruv	5
0140	10	73 98 829			2	Washer	Bricka	5
0150	11	92 52 958			2	Clip	Clips	3
0160	12	90 87 032		LH	1	Wheel housing	Hjulhus	5
0170	12	90 87 024		RH	1	Wheel housing	Hjulhus	5
0180	13	90 87 016		LH	1	Wheel housing	Hjulhus	5
0190	13	90 87 008		RH	1	Wheel housing	Hjulhus	5
0200	14	92 62 601		RH	1	,Cover	,Kåpa	3
0210	15	79 82 655			10	Press nut	Pressmutter	5
0220	17	79 82 325			10	Screw	Skruv	5
0230	19	42 93 346			2	Screen	Avskärmning	5
0240	20	69 57 708		330)	2	Screen	Avskärmning	5
0250	20	42 96 208		331)	2	Screen	Avskärmning	5
0260	21	*42 95 150*		330) LH NLS – USE 4296208, 9240078	1	End plate	Gavel	5
0270	21	*42 95 168*		330) RH NLS – USE 4296208, 9240078	1	End plate	Gavel	5
0280	23	90 87 040			4	Nut	Mutter	5


330. Ch. -R1017886
331. Ch. R1017887-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

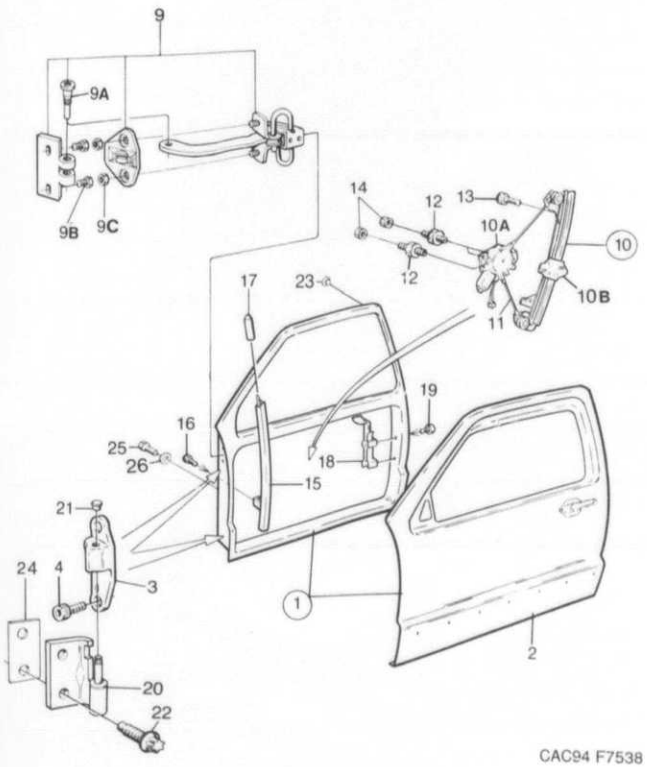

CAC94 F7538

Doors, trunk lid

4 -D18

Front doors, hinges, window regulators

Dörrar, bagagerumslucka

Framdörrar, gångjärn, fönsterhissar

0750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 75 791		-1994, LH, 4D	1	Door	Dörr	4
0020	1	69 75 783		-1994, RH, 4D	1	Door	Dörr	4
0030	1	43 06 031		1995-1997, LH, 4D	1	Door	Dörr	4
0040	1	43 06 049		1995-1997, RH, 4D	1	Door	Dörr	4
0050	1	43 06 031		LH, 5CS	1	Door	Dörr	4
0060	1	43 06 049		RH, 5CS	1	Door	Dörr	4
0070	2	92 52 719		-1994, LH, 4D	1	.Outer panel	.Ytterplåt	3
0080	2	92 52 701		-1994, RH, 4D	1	.Outer panel	.Ytterplåt	3
0090	3	43 06 809		LH	2	Hinge	Gångjärn	5
0100	3	43 06 791		RH	2	Hinge	Gångjärn	5
0110	4	73 98 761			8	Screw	Skruv	5
0120								
0130	9	82 84 366		LH	1	Restrainer kit	Dörrstoppsats	6
0140	9	82 84 358		RH	1	Restrainer kit	Dörrstoppsats	6
0150	9A	43 05 033			1	.Screw	.Skruv	5
0160	9B	97 78 952		-1994	4	Screw	Skruv	5
0170	9B	46 85 020		1995-	4	Screw	Skruv	5
0180	9C	79 77 929			4	Nut	Mutter	5
0190								
0200	10	92 55 217		42) LH	1	Window lift	Fönsterhiss	5
0210	10	92 55 209		42) RH	1	Window lift	Fönsterhiss	
0220	10A	43 05 199		LH	1	.Motor	.Motor	5
0230	10A	43 05 181		RH	1	.Motor	.Motor	5
0240	10B	46 95 318		LH	1	.Retainer	.Hållare	
0250	10B	46 95 326		RH	1	.Retainer	.Hållare	
0260	11	82 85 280			1	.Cable	.Wire	
0270	12	43 03 186			3	..Absorber	..Dämpare	5
0280	13	79 69 223		392)	6	Screw	Skruv	5
0290	13	46 85 012		393)	6	Screw	Skruv	5
0300	14	79 71 658			6	Nut	Mutter	5
0310	15	40 89 694		LH	1	Guide moulding	Styrlist	5
0320	15	40 89 686		RH	1	Guide moulding	Styrlist	5
0330	16	79 69 223			2	Screw	Skruv	5
0340	17	92 63 658			2	Protecting cap	Skyddshuv	5
0350	18	92 62 353		LH	1	Bracket	Hållare	5
0360	18	92 62 346		RH	1	Bracket	Hållare	5
0370	19	79 79 610			2	Screw	Skruv	5
0380	20	69 60 793		LH	2	Hinge	Gångjärn	4
0390	20	69 60 785		RH	2	Hinge	Gångjärn	4
0400	21	92 59 938			4	Plug	Plugg	5
0410	22	73 98 761			8	Screw	Skruv	5
0420	23	69 30 572			2	Plug	Plugg	5
0430	24	92 79 514		-1995	X	Spacer	Mellanlägg	3
0440	24	47 67 208		1996-	X	Spacer	Mellanlägg	3
0450	25	79 72 466			4	Screw	Skruv	5
0460	26	80 29 969			4	Washer	Bricka	5
0470		82 84 085		LH	1	Hinge kit	Gångjärnssats	5
0480				See page 8A-119, 4-G24				
0490		82 84 077		RH	1	Hinge kit	Gångjärnssats	5
0500				See page 8A-119, 4-G24				


42. Electrically operated Elektriskt manövrerad
392. Ch. -S1021437
393. Ch. S1021438-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

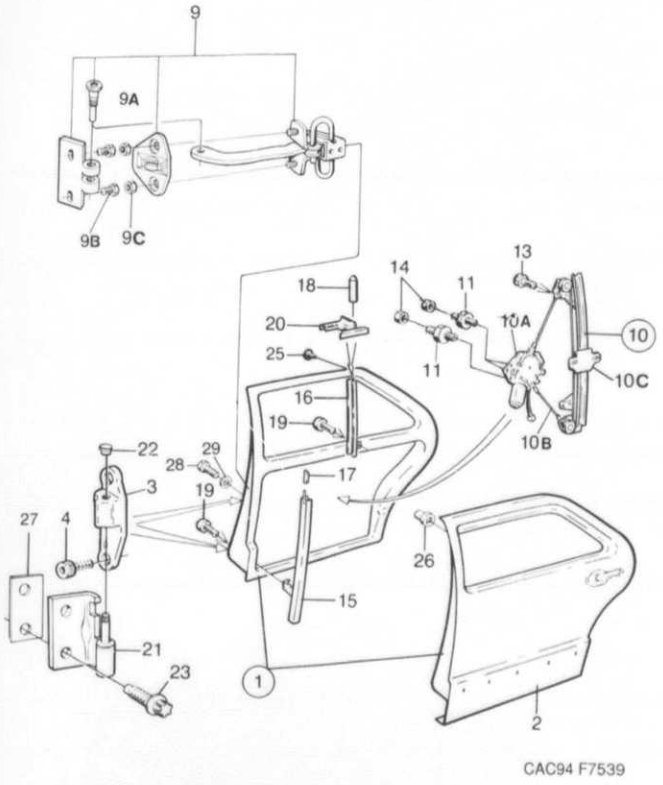

CAC94 F7539

Doors, trunk lid

4-D20

Rear doors, hinges, window regulators

Dörrar, bagagerumslucka

Bakdörrar, gångjärn, fönsterhissar

0760	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 01 812		-1994, LH, 4D	1	Door	Dörr	5
0020	1	41 01 804		-1994, RH, 4D	1	Door	Dörr	5
0030	1	43 06 056		1995-1997, LH, 4D	1	Door	Dörr	5
0040	1	43 06 064		1995-1997, RH, 4D	1	Door	Dörr	5
0050	1	43 06 056		LH, 5CS	1	Door	Dörr	5
0060	1	43 06 064		RH, 5CS	1	Door	Dörr	5
0070	2	92 52 776		-1994, LH, 4D	1	.Outer panel	.Ytterplåt	5
0080	2	92 52 768		-1994, RH, 4D	1	.Outer panel	.Ytterplåt	5
0090		82 47 181			2	Plug	Plugg	4
0100	3	43 06 809		LH	2	Hinge	Gångjärn	5
0110	3	43 06 791		RH	2	Hinge	Gångjärn	5
0120	4	73 98 761			8	Screw	Skruv	5
0130								
0140	9	82 84 366		LH	1	Restrainer kit	Dörrstoppsats	6
0150	9	82 84 358		RH	1	Restrainer kit	Dörrstoppsats	6
0160	9A	43 05 033			1	.Screw	.Skruv	5
0170	9B	97 78 952		-1994	4	Screw	Skruv	5
0180	9B	46 85 020		1995-	4	Screw	Skruv	5
0190	9C	79 77 929			4	Nut	Mutter	5
0200								
0210	10	92 55 233		42) LH	1	Window lift	Fönsterhiss	5
0220	10	92 55 225		42) RH	1	Window lift	Fönsterhiss	5
0230	10A	43 05 199		LH	1	.Motor	.Motor	5
0240	10A	43 05 181		RH	1	.Motor	.Motor	5
0250	10B	82 85 298			1	.Cable	.Wire	
0260	10C	46 95 334		LH	1	.Retainer	.Hållare	
0270	10C	46 95 342		RH	1	.Retainer	.Hållare	
0280	11	43 03 186			3	..Absorber	..Dämpare	5
0290	13	79 69 223		392)	6	Screw	Skruv	5
0300	13	46 85 012		393)	6	Screw	Skruv	5
0310	14	79 71 658			6	Nut	Mutter	5
0320	15	92 61 256		LH	1	Guide moulding	Styrlist	5
0330	15	92 61 249		RH	1	Guide moulding	Styrlist	5
0340	16	40 94 132		LH	1	Guide moulding	Styrlist	5
0350	16	40 94 124		RH	1	Guide moulding	Styrlist	5
0360	17	92 48 006			2	Protecting cap	Skyddshuv	5
0370	18	92 63 658			2	Protecting cap	Skyddshuv	5
0380	19	79 69 223			4	Screw	Skruv	5
0390	20	92 63 641			2	Spacer	Mellanlägg	5
0400	21	69 60 793		LH	2	Hinge	Gångjärn	4
0410	21	69 60 785		RH	2	Hinge	Gångjärn	4
0420	22	92 59 938			4	Plug	Plugg	5
0430	23	73 98 761			8	Screw	Skruv	5
0440	25	69 30 572			2	Plug	Plugg	5
0450	26	92 58 807			20	Bolt	Bult	5
0460	27	92 79 514		-1995	X	Spacer	Mellanlägg	3
0470	27	47 67 208		1996-	X	Spacer	Mellanlägg	3
0480	28	79 72 466			4	Screw	Skruv	5
0490	29	80 29 969			4	Washer	Bricka	5
0500		82 84 085		LH	1	Hinge kit	Gångjärnssats	5
0510				See page 8A-119, 4-G24				
0520		82 84 077		RH	1	Hinge kit	Gångjärnssats	5
0530				See page 8A-119, 4-G24				


42. Electrically operated Elektriskt manövrerad
392. Ch. -S1021437
393. Ch. S1021438-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

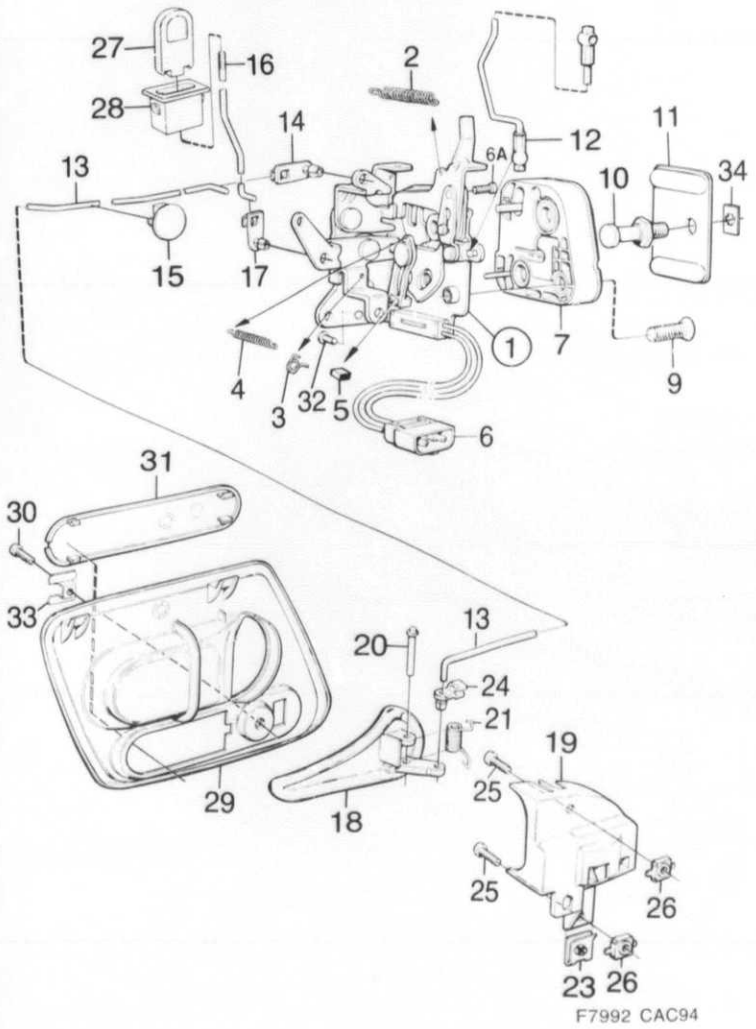

F7992 CAC94

Doors, trunk lid

4-D22

Door lock
Front door

Dörrar, bagagerumslucka

Dörrlås
Framdörr

0770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 93 050		152) LH	1	Door lock	Dörrlås	4
0020	1	40 93 308		152) RH	1	Door lock	Dörrlås	4
0030	1	40 93 316		152) LH FOR RHD,	1	Door lock	Dörrlås	4
0040	1	40 93 043		152) RH FOR RHD,	1	Door lock	Dörrlås	4
0050	2	92 57 080			2	.Spring	.Fjäder	5
0060	3	92 57 171		LH	1	.Spring	.Fjäder	5
0070	3	92 57 163		RH	1	.Spring	.Fjäder	5
0080	4	92 63 401			2	.Spring	.Fjäder	5
0090	5	95 08 011			2	.Magnet	.Magnet	4
0100	6	95 05 454			2	.Contact	.Kontakt	3
0110	6A	80 59 214			2	Screw	Skruv	5
0120	7	69 48 970		153) LH	1	Door lock	Dörrlås	4
0130	7	69 48 962		153) RH	1	Door lock	Dörrlås	4
0140	9	40 87 763			6	Screw	Skruv	5
0150	10	69 47 824			2	Pin	Tapp	5
0160	11	42 51 518			2	Spacer	Distans	6
0170	12	92 79 340		LH	1	Rod	Stång	5
0180	12	92 79 332		RH	1	Rod	Stång	5
0190	13	92 62 031		LH	1	Rod	Stång	5
0200	13	92 62 023		RH	1	Rod	Stång	5
0210	14	84 53 755			2	Clip	Clips	5
0220	15	43 04 663			2	Clip	Clips	5
0230	16	40 89 975		LH	1	Rod	Stång	5
0240	16	40 89 967		RH	1	Rod	Stång	5
0250	17	84 53 755			2	Clip	Clips	5
0260	18	97 54 763		LH	1	Handle	Handtag	5
0270	18	97 54 755		RH	1	Handle	Handtag	5
0280	19	97 69 118		LH	1	Bracket	Konsol	6
0290	19	97 69 100		RH	1	Bracket	Konsol	6
0300	20	97 76 139			2	Rivet	Nit	5
0310	21	97 76 188		LH	1	Return spring	Returfjäder	5
0320	21	97 76 105		RH	1	Return spring	Returfjäder	5
0330	23	97 76 121			2	Nut	Mutter	3
0340	24	97 82 566			2	Clamp	Klämma	5
0350	25	80 59 396			4	Screw	Skruv	5
0360	26	79 74 231			4	Cage nut	Korgmutter	5
0370	27	40 37 735			2	Lock button	Låsknapp	5
0380	28	42 69 957			2	Bushing	Bussning	4
0390	29	95 78 808		LH	1	Attaching plate	Fästplatta	6
0400	29	95 78 790		RH	1	Attaching plate	Fästplatta	6
0410	30	79 65 684		400)	2	Screw	Skruv	6
0420	30	79 82 333		401)	2	Screw	Skruv	5
0430	31	97 58 186			1	Cover washer	Täckbricka	5
0440	32	95 08 094			4	Rivet	Nit	5
0450	33	95 78 386			2	Washer	Bricka	6
0460	34	95 64 345			X	Spacer washer	Distansbricka	5

152. Inner Inre
153. Outer Yttre
400. Ch. -S1025206
401. Ch. S1025207-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-D24

Door lock
Rear door

Dörrlås
Bakdörr

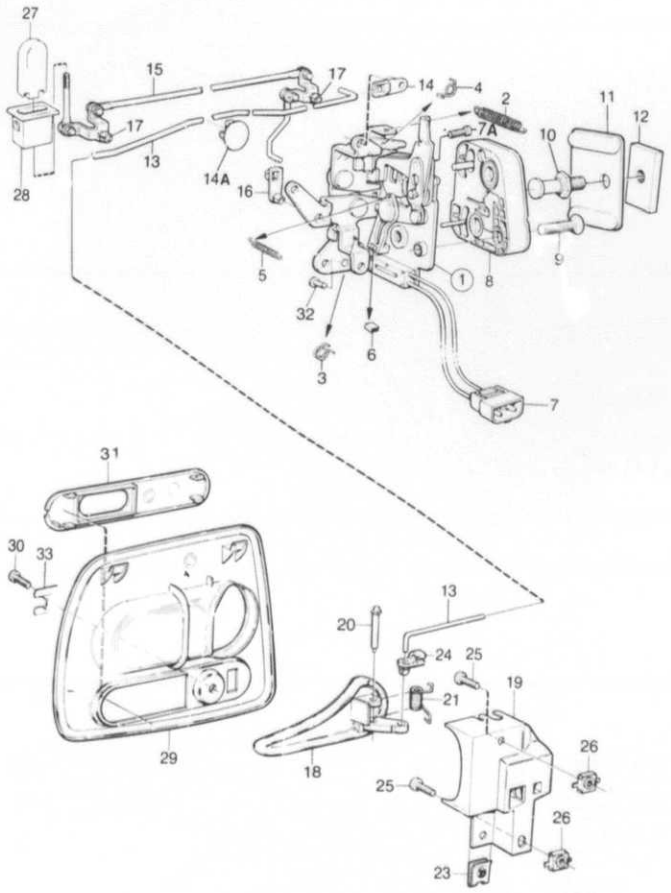

F6503 CAC94

0780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 43 476		152) LH	1	Door lock	Dörrlås	4
0020	1	69 43 468		152) RH	1	Door lock	Dörrlås	4
0030	2	92 57 080			2	.Spring	.Fjäder	5
0040	3	92 57 171		LH	1	.Spring	.Fjäder	5
0050	3	92 57 163		RH	1	.Spring	.Fjäder	5
0060	4	92 59 433		LH	1	.Spring	.Fjäder	5
0070	4	92 59 425		RH	1	.Spring	.Fjäder	5
0080	5	92 63 401			2	.Spring	.Fjäder	5
0090	6	95 08 011			2	.Magnet	.Magnet	4
0100	7	95 05 454			2	.Contact	.Kontakt	3
0110	7A	80 59 214			2	Screw	Skruv	5
0120	8	69 48 970		153) LH	1	Door lock	Dörrlås	4
0130	8	69 48 962		153) RH	1	Door lock	Dörrlås	4
0140	9	40 87 763			6	Screw	Skruv	5
0150	10	69 47 824			2	Pin	Tapp	5
0160	11	42 51 518			2	Spacer	Distans	6
0170	12	90 80 077			2	Plate	Platta	6
0180	13	69 56 676		LH	1	Rod	Stång	5
0190	13	69 56 668		RH	1	Rod	Stång	5
0200	14	84 53 755			2	Clip	Clips	5
0210	14A	43 04 663			2	Clip	Clips	5
0220	15	40 89 652		LH	1	Latch	Regel	5
0230	15	40 89 645		RH	1	Latch	Regel	5
0240	16	84 53 755			2	Clip	Clips	5
0250	17	92 66 644			2	Clip	Clips	5
0260	18	97 54 763		LH	1	Handle	Handtag	5
0270	18	97 54 755		RH	1	Handle	Handtag	5
0280	19	97 69 134		LH	1	Bracket	Konsol	6
0290	19	97 69 126		RH	1	Bracket	Konsol	6
0300	20	97 76 139			2	Rivet	Nit	5
0310	21	97 76 188		LH	1	Return spring	Returfjäder	5
0320	21	97 76 105		RH	1	Return spring	Returfjäder	5
0330	23	97 76 121			2	Nut	Mutter	3
0340	24	97 82 566			2	Clamp	Klämma	5
0350	25	80 59 396			4	Screw	Skruv	5
0360	26	79 74 231			4	Cage nut	Korgmutter	5
0370	27	40 37 735			2	Lock button	Låsknapp	5
0380	28	42 69 957			2	Bushing	Bussning	4
0390	29	95 78 824		LH	1	Attaching plate	Fästplatta	6
0400	29	95 78 816		RH	1	Attaching plate	Fästplatta	6
0410	30	79 65 684		400)	2	Screw	Skruv	6
0420	30	79 82 333		401)	2	Screw	Skruv	5
0430	31	97 67 559			2	Cover	Täcklock	5
0440	32	95 08 094			4	Rivet	Nit	5
0450	33	95 78 386			2	Washer	Bricka	6


152. Inner Inre
153. Outer Yttre
400. Ch. -S1025206
401. Ch. S1025207-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

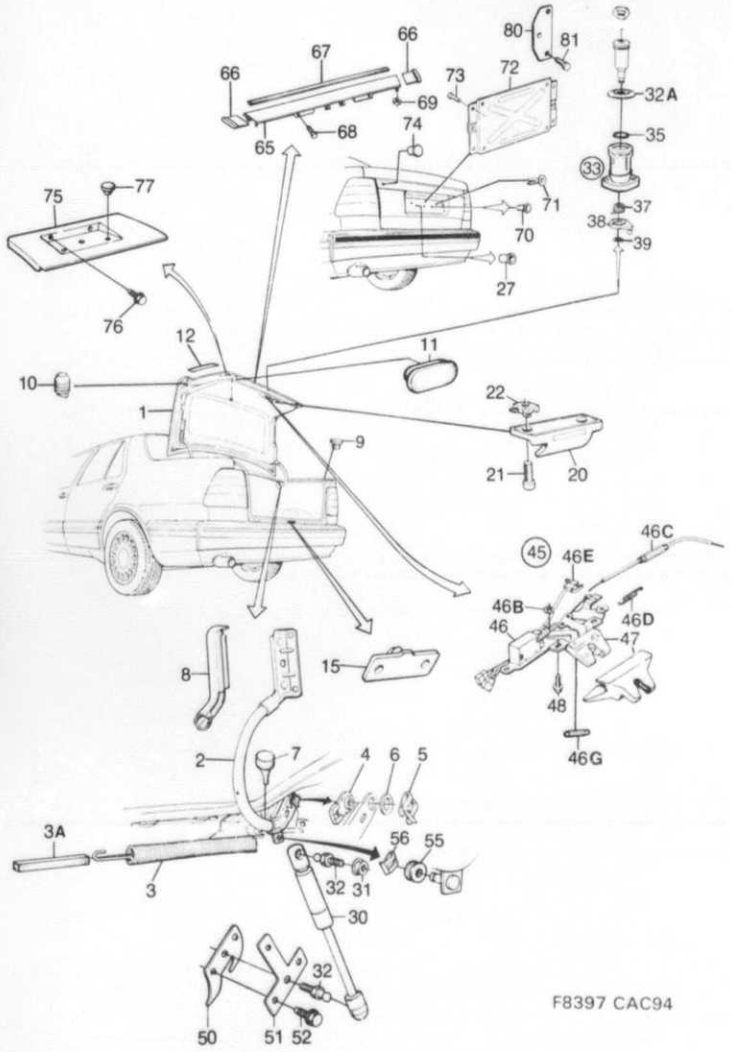

Doors, trunk lid

4-E02

Trunk lid, hinges, lock

4D, -1997

Dörrar, bagagerumslucka

Baklucka, gångjärn, lås

4D, -1997

0825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	41 00 582		-1994	1	Trunk lid	Bagagelucka	4
0020	1	43 04 465		1995-	1	Trunk lid	Bagagelucka	4
0030	2	69 63 995		LH	1	Hinge	Gångjärn	5
0040	2	69 63 953		RH	1	Hinge	Gångjärn	5
0050	3	69 61 866			2	Spring	Fjäder	5
0060	3A	43 05 330			2	Absorber	Dämpare	5
0070	4	92 25 475			2	Bushing	Bussning	3
0080	5	82 57 750			2	Locking	Låsning	5
0090	6	69 73 317			2	Washer	Bricka	5
0100	7	69 45 497			2	Buffer	Buffert	5
0110	8	69 62 534		LH	1	Cover	Avtäckning	5
0120	8	69 62 526		RH	1	Cover	Avtäckning	5
0130	9	69 74 000			1	Protecting moulding	Skyddslist	5
0140	10	43 04 234			2	Rubber buffer	Gummibuffert	4
0150	11	73 98 886			2	Plug	Plugg	5
0160	12	44 84 978		1995-	2	Stripe	Dekortejp	
0170	15	69 91 533			1	End plate	Slutbleck	5
0180	20	95 74 302			1	Handle	Handtag	5
0190	21	79 70 262			2	Screw	Skruv	5
0200	22	*97 74 456*		NLS – USE 7974231	2	Nut	Mutter	5
0210	27	75 53 308			3	Nut	Mutter	5
0220	27	75 53 308		US	4	Nut	Mutter	5
0230	30	69 76 369			1	Spring	Fjäder	3
0240	31	79 67 953			1	Nut	Mutter	5
0250	32	44 93 912			2	Ballpin	Kultapp	5
0260	32A	40 94 405		-1994	1	Sealing collar	Tätningskrage	4
0270	32A	45 57 054		1995-	1	Sealing collar	Tätningskrage	4
0280	33			See page 8A-057, 4-E10		Lock	Lås	
0290	35	92 62 163			1	.Seal	.Tätning	4
0300	37	40 10 617			1	.Spring	.Fjäder	5
0310	38	69 92 929		-1994	1	.Companion flange	.Medbringare	3
0320	38	90 86 141		1995-	1	.Companion flange	.Medbringare	3
0330	39	*79 36 016*		NLS – USE 8123473	1	.E-circlip	.Spårryttare	5
0340								
0350	45	43 04 564			1	Lock	Lås	4
0360	46	*43 04 242*		-1994 NLS – USE 4556890	1	.Electric motor	.Elmotor	4
0370	46	45 56 890		1995	1	.Electric motor	.Elmotor	4
0380	46	47 36 880		1996-	1	.Electric motor	.Elmotor	4
0390	46B	42 51 930			4	.Spring nut	.Fjädermutter	5
0400	46C	42 93 213		-1994	1	.Cable	.Wire	5
0410	46C	45 57 815		1995-	1	.Cable	.Wire	5
0420	46D	40 10 963			1	.Spring	.Fjäder	5
0430	46E	42 51 666			1	.Switch	.Strömstallare	3
0440	46G	40 88 209			1	.Spring	.Fjäder	5
0450	47	40 10 260			1	Protection	Skydd	6
0460	48	79 78 109			4	Screw	Skruv	5
0470	50	69 45 711			1	Attaching plate	Fästplåt	5
0480	51	69 45 760			1	Washer	Bricka	3
0490	52	79 75 451			2	Screw	Skruv	5
0500	55	40 06 557			2	Bushing	Bussning	5
0510	56	82 52 553			2	Clip	Clips	5
0520								
0530	65	40 08 454		-1994	1	Shield plate	Avskärmningsplåt	5
0540	65	44 84 150		1995-	1	Shield plate	Avskärmningsplåt	5
0550	66	40 09 577		332) LH	1	End piece	Ändstycke	3
0560	66	44 48 536		333) LH	1	End piece	Ändstycke	3
0570	66	40 09 569		332) RH	1	End piece	Ändstycke	3
0580	66	44 48 544		333) RH	1	End piece	Ändstycke	3
0590	67	92 52 057			1	Sealing strip	Tätningslist	4
0600	68	79 78 109		-1994	4	Screw	Skruv	5
0610	68	82 86 296		1995-	4	Screw	Skruv	5

332. Ch. -R1018879
333. Ch. R1018880-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4 -E04

Trunk lid, hinges, lock
4D, -1997

Baklucka, gångjärn, lås
4D, -1997

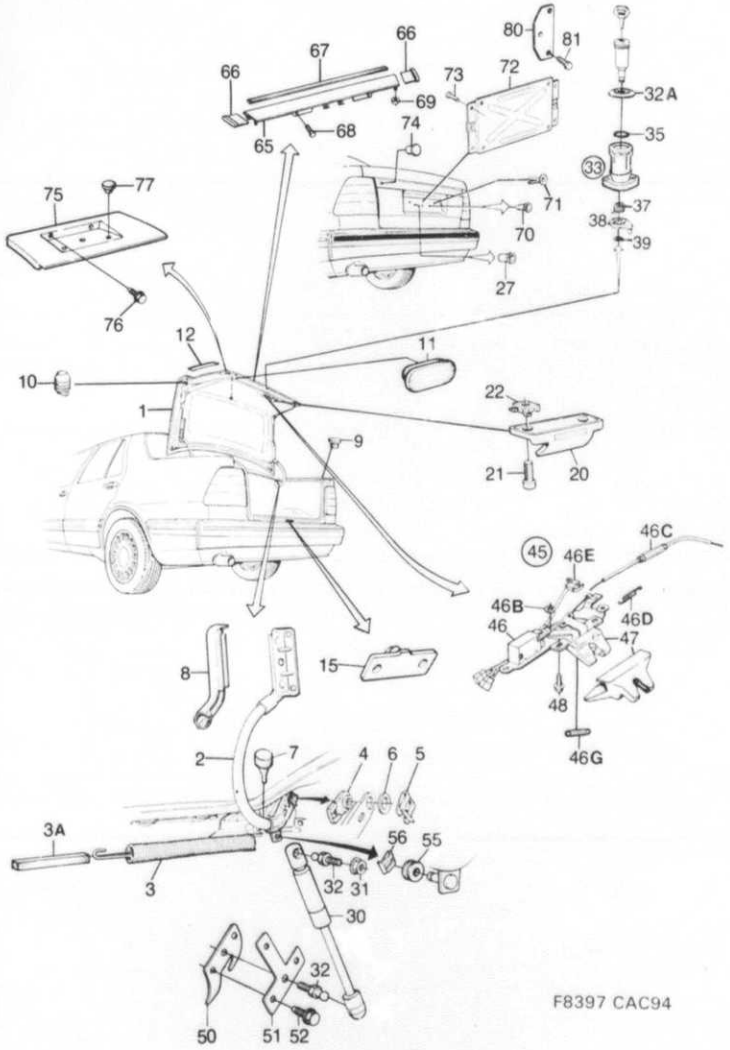


0825	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0620	69	79 71 658			2	Nut	Mutter	5
0630	70	82 79 044		-1994	5	Plastic plug	Plastplugg	5
0640	70	82 79 044		1995	2	Plastic plug	Plastplugg	5
0650	71	92 21 987			2	Plug	Plugg	5
0660	72	92 72 139		US, CA, JP	1	Bracket	Hållare	5
0670	73	80 59 578		US, CA, JP	2	Screw	Skruv	5
0680	74	41 00 905		-1994	6	Protecting plug	Skyddsplugg	5
0690								
0700	75	86 69 319		1991-, T16S	1	Decor panel	Dekorpanel	3
0710	75	43 80 283		1991-, US	1	Decor panel	Dekorpanel	3
0720	76	80 59 578		1991-, T16S	2	Screw	Skruv	5
0730	77	92 67 881		1991-, T16S	2	Plug	Plugg	5
0740								
0750	80	86 69 913		1992-, US, CA	2	Bracket	Fäste	5
0760	81	79 77 010		1992-, US, CA	2	Screw	Skruv	5
0770								
0780		92 40 086		See page 8A-121, 4-H02	X	Mounting kit	Monteringssats	5
0790				US, CA, JP		registration plate	registreringsskylt	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

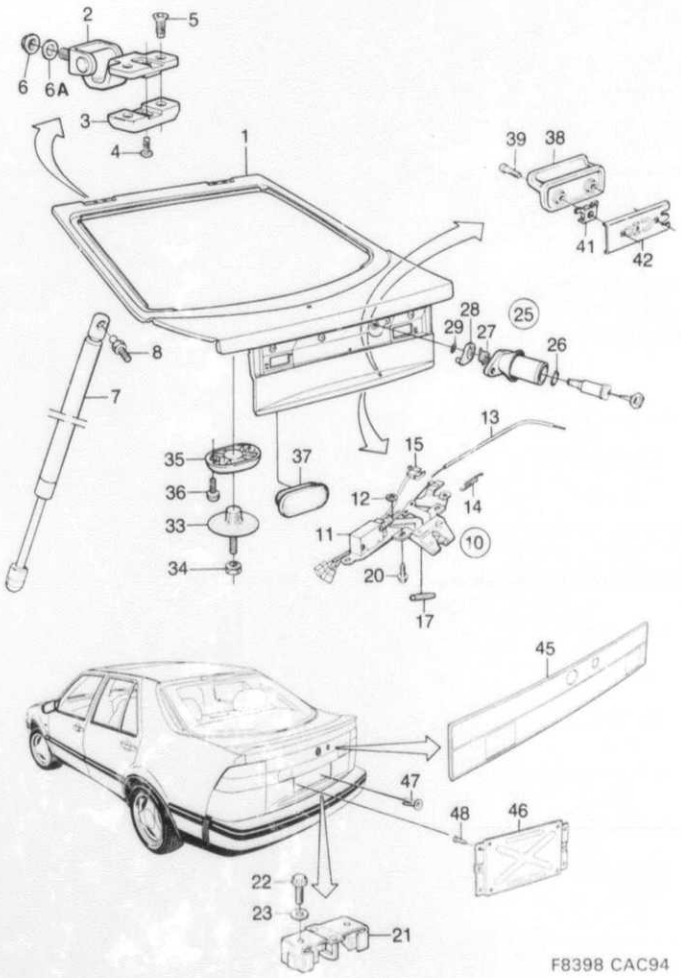

F8398 CAC94

Doors, trunk lid

4-E06 *Trunk door, hinges lock 5CS*

Dörrar, bagagerumslucka

Bagagerumsdörr, gångjärn lås 5CS

0830	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 93 049			1	Trunk lid	Bagagelucka	4
0020	1	48 53 776		193)	1	Trunk lid	Bagagelucka	4
0030	2	69 44 490		LH	1	Hinge	Gångjärn	5
0040	2	69 44 482		RH	1	Hinge	Gångjärn	5
0050	3	69 44 565			1	Plate	Platta	5
0060	4	80 59 545			2	Screw	Skruv	5
0070	5	90 88 592		-1995	4	Screw	Skruv	5
0080	5	82 62 958		1996-	4	Screw	Skruv	5
0090	6	79 67 953			2	Nut	Mutter	5
0100	6A	41 01 705			2	Washer	Bricka	5
0110								
0120	7	40 06 060		269) US, CA, SE, EU, GB	2	Spring	Fjäder	3
0130	7	43 06 411		193) US, CA, SE, EU, GB	2	Gas spring	Gasfjäder	3
0140	7	40 06 078		269) LA, ME, PA, AU	2	Spring	Fjäder	3
0150	7	40 06 060		193) LA, ME, PA, AU	2	Spring	Fjäder	3
0160	8	44 93 912			4	Ballpin	Kultapp	5
0170								
0180	10	43 04 846			1	Lock	Lås	4
0190	11	*43 04 242*		-1994 NLS – USE 4556890	1	.Electric motor	.Elmotor	4
0200	11	45 56 890		1995	1	.Electric motor	.Elmotor	4
0210	11	47 36 880		1996-	1	.Electric motor	.Elmotor	4
0220	12	42 51 930			4	.Spring nut	.Fjädermutter	5
0230	13	90 85 861			1	.Cable	.Wire	5
0240	14	40 10 963			1	.Spring	.Fjäder	5
0250	15	42 51 674			1	.Switch	.Strömställare	3
0260	17	40 88 209			1	.Spring	.Fjäder	5
0270								
0280	20	79 78 109			3	Screw	Skruv	5
0290	21	92 52 206			1	End plate	Slutbleck	5
0300	22	79 69 223			2	Screw	Skruv	5
0310	23	46 85 343		(7981954)	2	Washer	Bricka	5
0320								
0330	25			See page 8A-057, 4-E10		Lock	Lås	
0340	26	92 62 163			1	.Seal	.Tätning	4
0350	27	40 10 617			1	.Spring	.Fjäder	5
0360	28	90 86 141			1	.Companion flange	.Medbringare	3
0370	29	*79 36 016*		NLS – USE 8123473	1	.E-circlip	.Sprärryttare	5
0380								
0390	33	41 00 871			2	Support	Stöd	5
0400	34	40 87 045			2	Nut	Mutter	5
0410	35	40 99 099		415)	2	Support	Stöd	5
0420	35	45 59 209		416)	2	Support	Stöd	5
0430	36	79 78 422			4	Screw	Skruv	5
0440	37	73 98 886			2	Plug	Plugg	5
0450								
0460	38	96 70 548			1	Handle	Handtag	6
0470	39	79 70 262			2	Screw	Skruv	5
0480	42	42 70 948			1	Bracket	Fäste	5
0490								
0500	45			See page 3A-053, 2-C06	1	Decor panel	Dekorpanel	
0510	46	90 87 297		CA	1	Bracket	Hållare	5
0520	47	92 21 987		CA	2	Plug	Plugg	5
0530	48	80 59 578		CA	2	Screw	Skruv	5

193. For cars with rear window wiper. För bilar med bakrutetorkare.
269. For cars without rear window wiper. För bilar utan bakrutetorkare.
415. Ch. -S1034939
416. Ch. S1034940-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-E08

Outside handle

Ytterhandtag

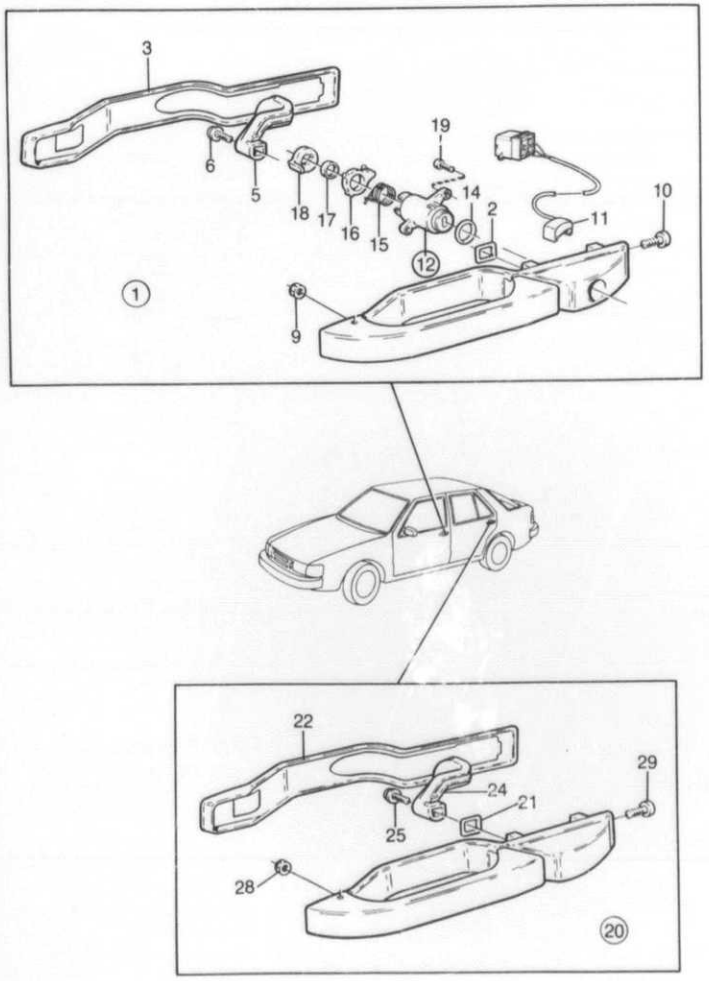

F6506 CAC94

0850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 92 490		110)-1995, LH	1	Handle	Handtag	5
0020	1	40 92 482		110)-1995, RH	1	Handle	Handtag	5
0030	1	46 95 433		110) 1996-, LH	1	Handle	Handtag	5
0040	1	46 95 425		110) 1996-, RH	1	Handle	Handtag	5
0050	2	92 60 266		436)	2	.Absorber	.Dämpare	4
0060	2	47 68 040		437)	2	.Absorber	.Dämpare	4
0070	3	*69 92 614*		-1994 NLS - USE 4558235	2	.Seal	.Tätning	4
0080	3	45 58 235		1995-	2	.Seal	.Tätning	4
0090	5	40 96 061		LH	1	.Arm	.Arm	5
0100	5	40 96 053		RH	1	.Arm	.Arm	5
0110	6	69 93 547			1	.Screw	.Skruv	5
0120	9	79 71 658			2	Nut	Mutter	5
0130	10	79 75 196			2	Screw	Skruv	5
0140	11	95 66 159		LH	1	Switch	Brytare	
0150	11	40 88 852		RH	1	Switch	Brytare	
0160	12			See page 8A-057, 4-E10		Lock	Lås	
0170	14	92 62 163			2	.Seal	.Tätning	4
0180	15	92 62 387			2	.Spring	.Fjäder	5
0190	16	92 62 403			2	.Companion flange	.Medbringare	3
0200	17	92 62 361			2	.Lock ring	.Säkringsring	5
0210	18	92 62 395			2	.Link stay	.Länkstag	5
0220	19	92 62 973			4	Screw	Skruv	5
0230								
0240								
0250	20	69 43 450		110) -1995, LH	1	Handle	Handtag	5
0260	20	69 43 443		110) -1995, RH	1	Handle	Handtag	5
0270	20	46 95 458		110) 1996-, LH	1	Handle	Handtag	5
0280	20	46 95 441		110) 1996-, RH	1	Handle	Handtag	5
0290	21	92 60 266		436)	2	.Absorber	.Dämpare	4
0300	21	47 68 040		437)	2	.Absorber	.Dämpare	4
0310	22	*69 92 614*		-1994 NLS - USE 4558235	2	.Seal	.Tätning	4
0320	22	45 58 235		1995-	2	.Seal	.Tätning	4
0330	24	40 96 087		LH	1	.Arm	.Arm	5
0340	24	40 96 079		RH	1	.Arm	.Arm	5
0350	25	69 93 547			1	.Screw	.Skruv	5
0360	28	79 71 658			2	Nut	Mutter	5
0370	29	79 75 196			2	Screw	Skruv	5

110. Black Svart
436. Ch. -T1019964
437. Ch. T1019965-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-E10

Lock
Lock cylinder set

Lås
Låscylindersats

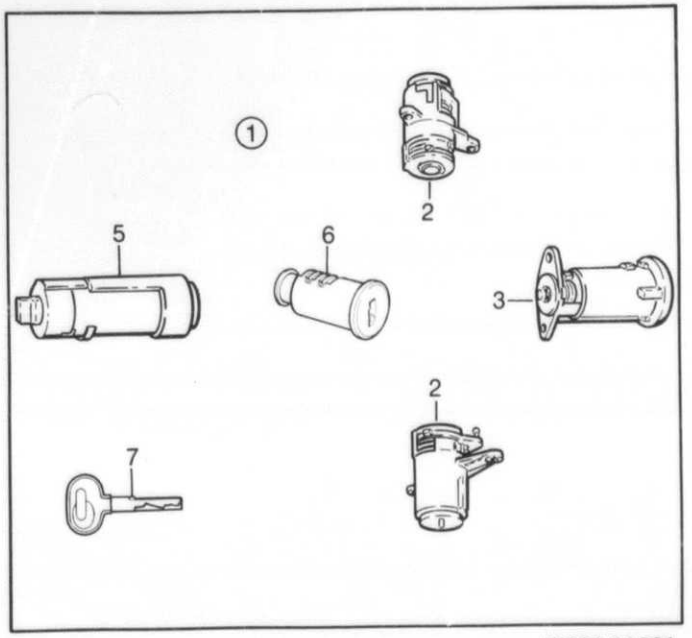

F8399 CAC94

0900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 424		-1994, 4D, DOOR LH AND RH, IGNITION AND TRUNK LID	1	Lock kit	Låssats	5
0040	1	74 97 324		1995-1997, 4D, DOOR LH AND RH,IGNITION AND TRUNK LID	1	Lock kit	Låssats	5
0070	1	74 97 324		1994-, 5CS, DOOR LH AND RH,IGNITION AND TRUNK DOOR	1	Lock kit	Låssats	5
0120		97 46 397		DOOR, LH, WITH 2 KEYS	1	.Door mechanism	.Dörrmekanism	5
0130		97 46 405		DOOR, RH, WITH 2 KEYS	1	.Door mechanism	.Dörrmekanism	5
0150		82 84 432		-1994, 4D, TRUNKLID, WITH 2 KEYS	1	.Lock	.Lås	4
0180		82 84 911		1995-1997, 4D, TRUNKLID, WITH 2 KEYS	1	.Lock	.Lås	4
0210		82 84 911		5CS, TRUNKDOOR, WITH 2 KEYS	1	.Lock	.Lås	4
0240		97 46 454		IGNITION, WITH 2 KEYS	1	.Lock cylinder	.Låscylinder	5
0280				41)		LOCK	LÅS	
0300	2	69 63 300		DOOR, LH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0320	2	69 63 318		DOOR, RH, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0340	3	40 94 256		-1994, 4D, TRUNK LID, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0360	3	90 86 133		1995-1997, 4D,TRUNK LID, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0380	3	90 86 133		5CS, TRUNK DOOR, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0400	5	89 60 221		IGNITION, STATE KEY CODE	X	Lock cylinder	Låscylinder	5
0420	6	45 55 181		GLOVE COMPARTMENT STATE KEY CODE	X	Glove compartment lock	Handskfackslås	3
0450	7	97 46 603		STATE KEY CODE	X	Key	Nyckel	5
0460	7	96 98 077		BLANK	X	Key	Nyckel	3

41. Lock cylinders may be ordered to match original equipment locks. Use the part number listed, stating the key code as additional information. These cylinders are delivered without keys. För att behålla samma nyckel till bilens samtliga lås kan låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-E12

Emblem

Emblem

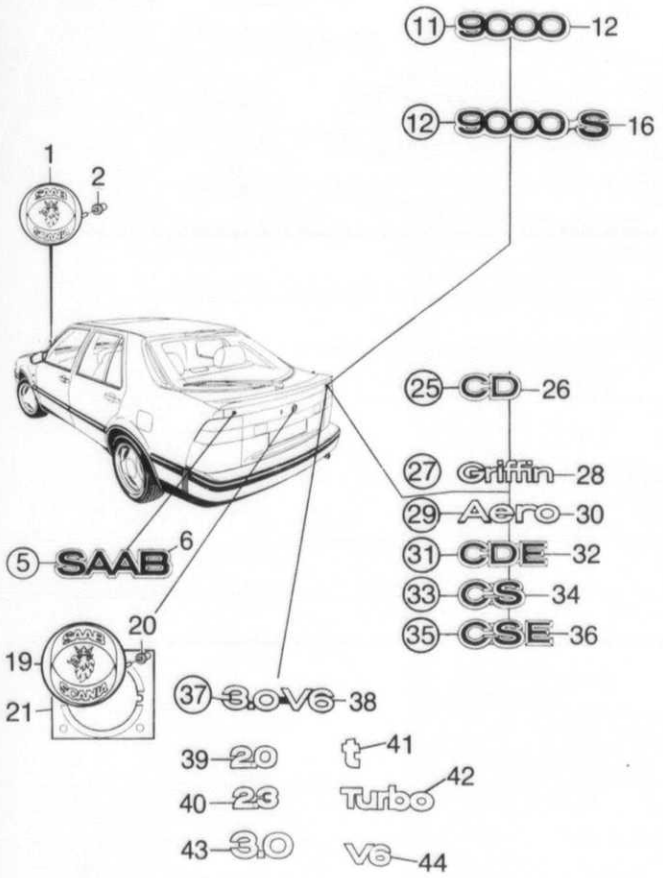

F8400 CAC94


0925	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 11 895		-1995, "SAAB-SCANIA"	1	Emblem	Emblem	3
0020	1	45 22 884		1996-, "SAAB-SCANIA"	1	Emblem	Emblem	3
0030	2	69 15 706			2	Bushing	Bussning	3
0040								
0050	5	44 35 947		"SAAB", 5CS	1	Emblem	Emblem	3
0060	5	44 35 970		-1997, "SAAB", 4D	1	Emblem	Emblem	3
0070	6	44 35 962		5CS	1	.Decal tape	.Emblemtejp	3
0080	6	44 35 996		-1997, 4D	1	.Decal tape	.Emblemtejp	3
0090								
0100	11	44 35 806		-1997, "9000", 4D	1	Emblem	Emblem	3
0110	11	44 35 681		"9000", 5CS	1	Emblem	Emblem	3
0120	12	44 35 822		-1997, 4D	1	.Decal tape	.Emblemtejp	3
0130	12	44 35 707		5CS	1	.Decal tape	.Emblemtejp	3
0140	15	92 75 017		"9000S", US, CA	1	Emblem	Emblem	4
0150	16	92 75 033		US, CA	1	.Decal tape	.Emblemtejp	3
0160								
0170	19	40 94 777		-1997, "SAAB-SCANIA"4D	1	Emblem	Emblem	3
0180	19			"SAAB-SCANIA"5CS		Emblem	Emblem	
0190				See page 3A-053, 2-C06				
0200	20	69 15 706		-1997, 4D	2	Bushing	Bussning	3
0210	21	40 96 897		-1997, 4D	1	Decal tape	Emblemtejp	3
0220								
0230	25	44 35 897		-1997, "CD"4D	1	Emblem	Emblem	3
0240	26	44 35 913		-1997, 4D	1	.Decal tape	.Emblemtejp	3
0250	27	44 35 830		"GRIFFIN"	1	Emblem	Emblem	3
0260	28	44 35 855			1	.Decal tape	.Emblemtejp	3
0270	29	44 35 715		"AERO"	1	Emblem	Emblem	3
0280	30	44 35 731			1	.Tape	.Tejp	3
0290	31	44 35 863		-1997, "CDE"	1	Emblem	Emblem	3
0300	32	44 35 889			1	.Decal tape	.Emblemtejp	3
0310	33	44 35 772		"CS"	1	Emblem	Emblem	3
0320	34	44 35 798			1	.Decal tape	.Emblemtejp	3
0330	35	44 35 749		"CSE"	1	Emblem	Emblem	3
0340	36	44 35 764			1	.Decal tape	.Emblemtejp	3
0350	37	45 22 975		-1996, "3.0 V6"	1	Emblem	Emblem	
0360	38	45 22 991			1	.Decal tape	.Emblemtejp	
0370	39	46 76 755		1997-, "2.0"	1	Emblem	Emblem	
0380	40	46 76 763		1997-, "2.3"	1	Emblem	Emblem	
0390	41	47 85 796		1997-, "T"	1	Emblem	Emblem	
0400	42	46 76 797		1997-, "TURBO"	1	Emblem	Emblem	
0410	43	46 76 771		1997, "3.0"	1	Emblem	Emblem	
0420	44	46 76 789		1997, "V6"	1	Emblem	Emblem	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

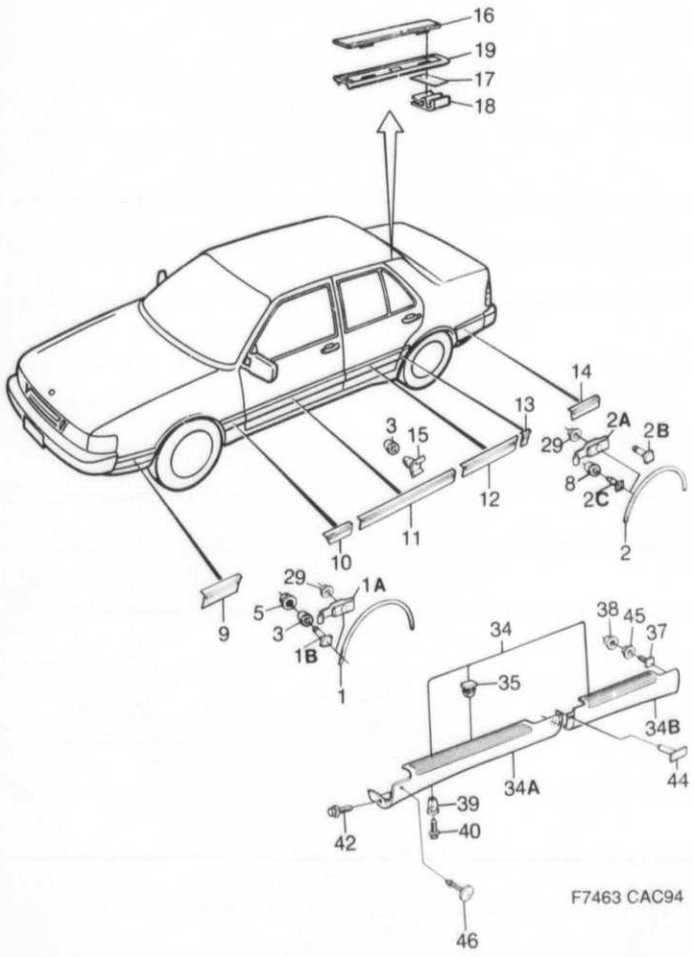

4-E14

External details, glass, sealings

Decor, 4D -1994

Utvändiga detaljer, glas, tätningslister

Dekor, 4D -1994

0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 51 039		LH	1	Wheel house moulding	Hjulhusdekor	2
0020						Mudguard widener	Skärmbreddare	
0030	1	42 51 047		RH	1	Wheel house moulding	Hjulhusdekor	2
0040						Mudguard widener	Skärmbreddare	
0050	1A	40 90 197			5	.Clip	.Clips	5
0060	1B	40 87 151			2	.Screw	.Skruv	5
0070								
0080	1	44 84 275		LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0090	1	44 84 267		RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0100	1B	73 99 470			7	.Screw	.Skruv	5
0110								
0120	2	42 51 054		LH	1	Wheel house moulding	Hjulhusdekor	2
0130						Mudguard widener	Skärmbreddare	
0140	2	42 51 062		RH	1	Wheel house moulding	Hjulhusdekor	2
0150						Mudguard widener	Skärmbreddare	
0160	2A	40 90 197			4	.Clip	.Clips	5
0170	2B	40 87 151			2	.Screw	.Skruv	5
0180								
0190	2	44 84 291		LH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0200	2	44 84 283		RH, US, CA, TW	1	Wheel house moulding	Hjulhusdekor	2
0210	2B	73 99 470			2	.Screw	.Skruv	5
0220	2C	92 53 329			4	.Clip	.Clips	5
0230								
0240	3	73 73 269			42	Bushing	Bussning	5
0250	5	73 99 488			22	Nut	Mutter	5
0260	8	92 78 151			6	Bushing	Bussning	5
0270								
0280	9	92 78 177		LH	1	Decor strip	Dekorlist	2
0290	9	92 78 185		RH	1	Decor strip	Dekorlist	2
0300	10	92 78 193		LH	1	Decor strip	Dekorlist	2
0310	10	92 78 201		RH	1	Decor strip	Dekorlist	2
0320	11	92 78 219		LH	1	Decor strip	Dekorlist	2
0330	11	92 78 227		RH	1	Decor strip	Dekorlist	2
0340	12	92 78 235		LH	1	Decor strip	Dekorlist	2
0350	12	92 78 243		RH	1	Decor strip	Dekorlist	2
0360	13	92 78 250		LH	1	Decor strip	Dekorlist	2
0370	13	92 78 268		RH	1	Decor strip	Dekorlist	2
0380	14	69 54 176		LH	1	Decor strip	Dekorlist	2
0390	14	69 54 184		RH	1	Decor strip	Dekorlist	2
0400	15	69 91 079			X	.Clip	.Clips	5
0410								
0420	16	92 77 393		LH	1	Decor strip	Dekorlist	5
0430	16	*92 78 003*		RH NLS – USE 4674008	1	Decor strip	Dekorlist	5
0440	17	92 88 127			2	Tape	Tape	5
0450	18	92 69 697			4	Clip	Clips	5
0460	19	92 77 336		LH	1	Decor strip	Dekorlist	5
0470	19	92 77 344		RH	1	Decor strip	Dekorlist	5
0480								
0490	29	92 78 151			X	Bushing	Bussning	5
0500								
0510	34	82 84 705		LH	1	Kit	Sats	5
0520	34A	69 62 138			1	.Sill protection	.Tröskelskydd	5
0530	34B	69 62 153			1	.Sill protection	.Tröskelskydd	5
0540	35	41 02 000			7	.Clamp	.Klämma	5
0550								
0560	34	82 84 713		RH	1	Kit	Sats	5
0570	34A	69 62 120			1	.Sill protection	.Tröskelskydd	5
0580	34B	69 62 146			1	.Sill protection	.Tröskelskydd	5
0590	35	41 02 000			7	.Clamp	.Klämma	5
0600								
0610	37	69 59 464			4	Screw	Skruv	5
0620	38	73 99 488			4	Nut	Mutter	5
0630	39	40 08 504			12	Nut	Mutter	5
0640	40	79 82 325			10	Screw	Skruv	5
0650	42	79 82 325			4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20


4-E16

External details, glass, sealings

Decor, 4D -1994

Utvändiga detaljer, glas, tätningslister

Dekor, 4D -1994

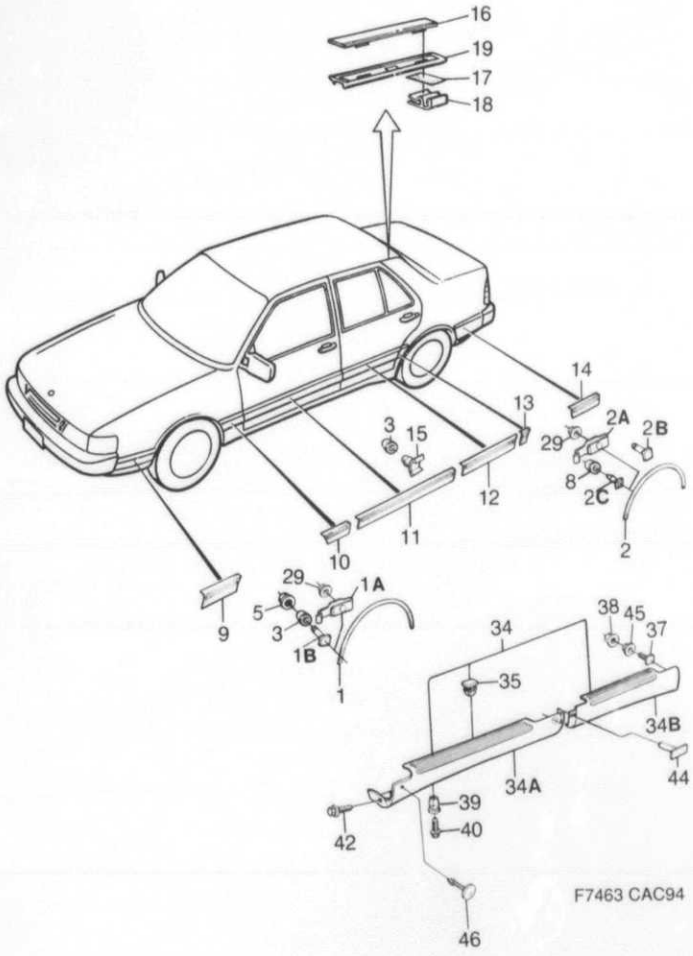

F7463 CAC94


0960	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0660	44	44 47 967			2	Expanding rivet	Expandernit	3
0670	45	40 89 934			4	Bushing	Bussning	5
0680	46	96 68 153			2	Clip	Clips	5
0690								
0700		74 96 029			1	Mounting kit	Monteringssats	4
0710				See page 8A-121, 4-H02		wheel house moulding	hjulhusdekor	
0720		74 96 037			1	Mounting kit	Monteringssats	4
0730				See page 8A-121, 4-H02		wheel house moulding	hjulhusdekor	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

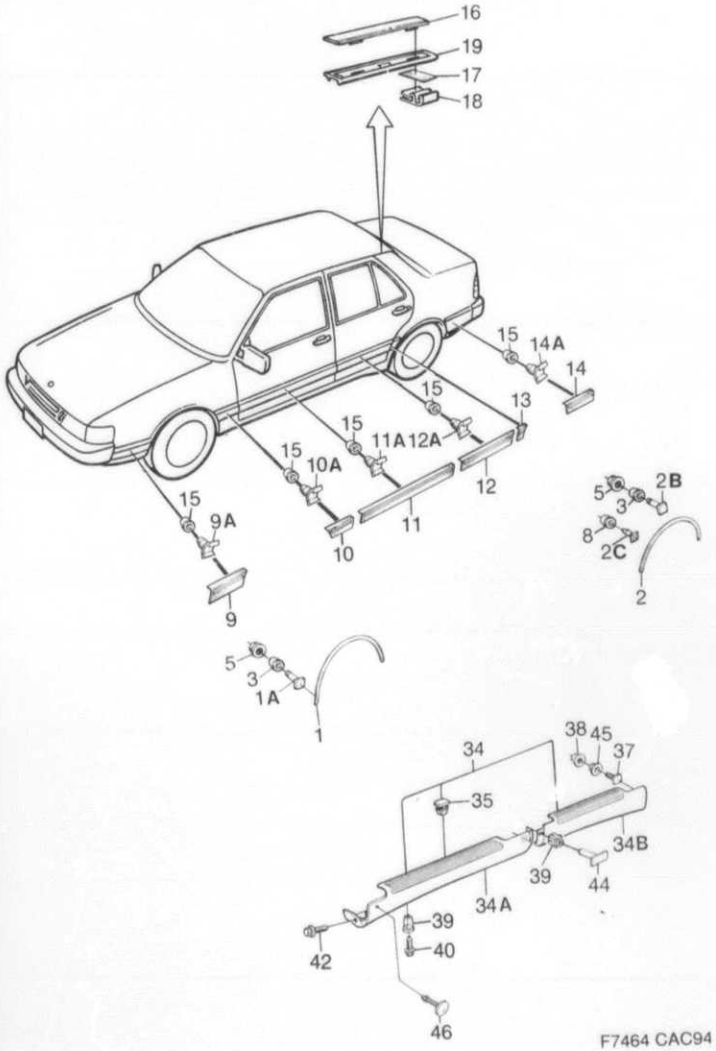

4-E18

External details, glass, sealings

Decor, 4D 1995-1997

Utvändiga detaljer, glas, tätningslister

Dekor, 4D 1995-1997

0962	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 89 632		LH	1	Wheel house moulding	Hjulhusdekor	2
0020	1	90 89 624		RH	1	Wheel house moulding	Hjulhusdekor	2
0030	1A	73 99 470			7	.Screw	.Skruv	5
0040								
0050	1	86 75 001		383)	1	Mudguard widener	Skärmbreddare	2
0060				1995, LH				
0070				40/116014200				
0080	1	86 75 019		383)	1	Mudguard widener	Skärmbreddare	2
0090				1995, RH				
0100				40/116014101				
0110		79 77 903		383) 1995	14	Nut	Mutter	5
0120		86 75 043		383) 1995	2	Rubber moulding	Gummilist	
0130								
0140	2	44 84 291		LH	1	Wheel house moulding	Hjulhusdekor	2
0150	2	44 84 283		RH	1	Wheel house moulding	Hjulhusdekor	2
0160	2B	73 99 470			2	.Screw	.Skruv	5
0170	2C	92 53 329			4	.Clip	.Clips	5
0180								
0190	2	86 85 919		383)	1	Mudguard widener	Skärmbreddare	
0200				1995, LH				
0210				40/400104600				
0220	2	86 85 935		383)	1	Mudguard widener	Skärmbreddare	2
0230				1995, RH				
0240				40/400104618				
0250		79 77 903		383) 1995	12	Nut	Mutter	5
0260		86 75 043		383) 1995	2	Rubber moulding	Gummilist	
0270								
0280	3	92 78 151			14	Bushing	Bussning	5
0290	5	73 99 488			22	Nut	Mutter	5
0300	8	73 73 269			X	Bushing	Bussning	5
0310								
0320	9	90 88 550		LH	1	Decor strip	Dekorlist	2
0330	9	90 88 543		RH	1	Decor strip	Dekorlist	2
0340	9A	90 83 312			3	.Clip	.Clips	5
0350								
0360	10	90 83 254		LH	1	Decor strip	Dekorlist	2
0370	10	90 83 247		RH	1	Decor strip	Dekorlist	2
0380	10A	90 83 312			2	.Clip	.Clips	5
0390								
0400	11	90 83 098		LH	1	Decor strip	Dekorlist	2
0410	11	90 83 080		RH	1	Decor strip	Dekorlist	2
0420	11A	90 83 312			7	.Clip	.Clips	5
0430								
0440	12	90 83 130		LH	1	Decor strip	Dekorlist	2
0450	12	90 83 122		RH	1	Decor strip	Dekorlist	2
0460	12A	90 83 312			5	.Clip	.Clips	5
0470								
0480	13	43 43 976		LH	1	Decor strip	Dekorlist	2
0490	13	43 43 968		RH	1	Decor strip	Dekorlist	2
0500								
0510	14	43 43 190		LH	1	Decor strip	Dekorlist	2
0520	14	43 43 182		RH	1	Decor strip	Dekorlist	2
0530	14A	90 83 312			4	.Clip	.Clips	5
0540								
0550	15	73 73 269			46	Bushing	Bussning	5
0560								
0570	16	46 74 016		LH	1	Decor strip	Dekorlist	5
0580	16	46 74 008		RH	1	Decor strip	Dekorlist	5
0590	17	92 88 127			2	Tape	Tape	5
0600	18	92 69 697			4	Clip	Clips	5
0610	19	92 77 336		LH	1	Decor strip	Dekorlist	5
0620	19	92 77 344		RH	1	Decor strip	Dekorlist	5


383. For cars with body colour 253, black metallic. För bilar med karossfärg 253, metallic svart.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

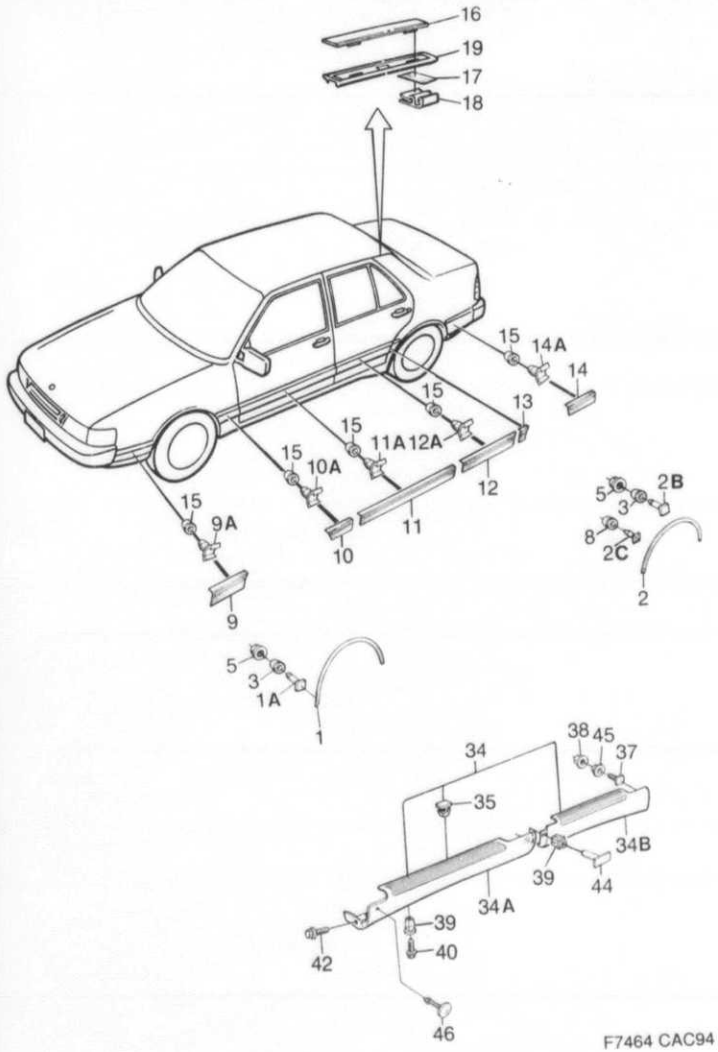

F7464 CAC94

4 –E20

External details, glass, sealings

Decor, 4D 1995-1997

Utvändiga detaljer, glas, tätningslister

Dekor, 4D 1995-1997


0962	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0630								
0640	34	82 84 705		LH	1	Kit	Sats	5
0650	34A	69 62 138			1	.Sill protection	.Trö .kelskydd	5
0660	34B	69 62 153			1	.Sill protection	.Tröskelskydd	5
0670	35	41 02 000			7	.Clamp	.Klämma	5
0680								
0690	34	82 84 713		RH	1	Kit	Sats	5
0700	34A	69 62 120			1	.Sill protection	.Tröskelskydd	5
0710	34B	69 62 146			1	.Sill protection	.Tröskelskydd	5
0720	35	41 02 000			7	.Clamp	.Klämma	5
0730								
0740	37	69 59 464			4	Screw	Skruv	5
0750	38	73 99 488			4	Nut	Mutter	5
0760	39	40 08 504			12	Nut	Mutter	5
0770	40	79 82 325			10	Screw	Skruv	5
0780	42	79 82 325			4	Screw	Skruv	5
0790	44	44 47 967			2	Expanding rivet	Expandernit	3
0800	45	40 89 934			4	Bushing	Bussning	5
0810	46	96 68 153			2	Clip	Clips	5
0820								
0830		74 96 029			1	Mounting kit	Monteringssats	4
0840				See page 8A-121, 4-H02		wheel house moulding	hjulhusdekor	
0850		74 96 037			1	Mounting kit	Monteringssats	4
0860				See page 8A-121, 4-H02		wheel house moulding	hjulhusdekor	

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

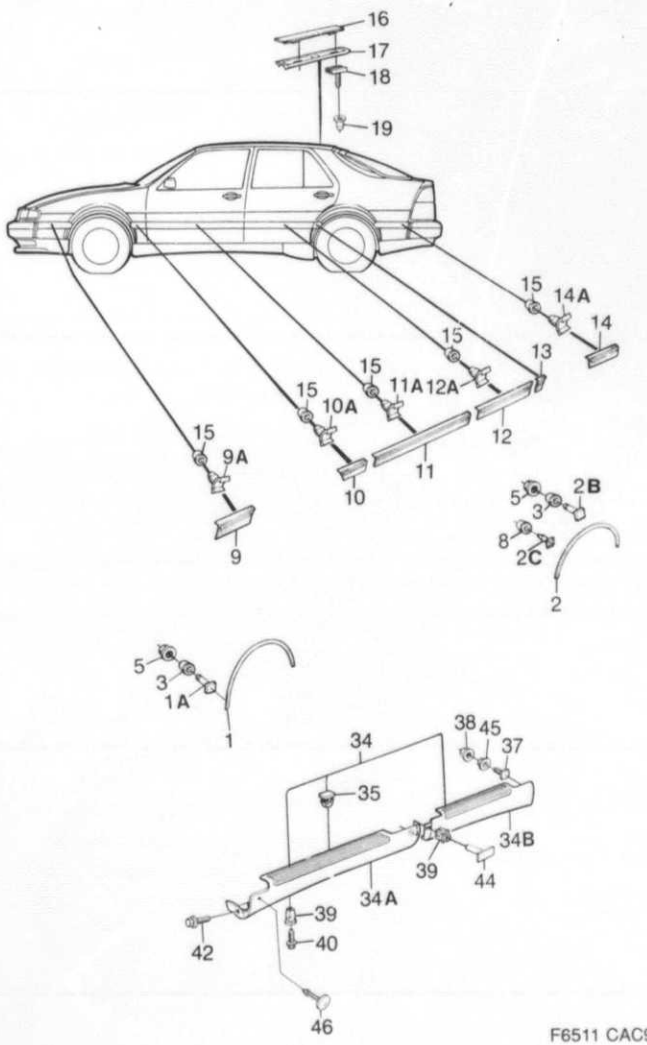

F6511 CAC94

4-E22

External details, glass, sealings
Decor, 5CS

Utvändiga detaljer, glas, tätningslister
Dekor, 5CS

0965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 89 632		LH	1	Wheel house moulding	Hjulhusdekor	2
0020	1	90 89 624		RH	1	Wheel house moulding	Hjulhusdekor	2
0030	1A	73 99 470			7	.Screw	.Skruv	5
0040								
0050	1			478) AERO		Mudguard widener	Skärmbreddare	
0060				See page 8A-077, 4-F06				
0070								
0080	1	86 75 001		361,383)	1	Mudguard widener	Skärmbreddare	2
0090				1994, 1995, 1996, LH				
0100				40/116014200				
0110	1	86 75 019		361,383)	1	Mudguard widener	Skärmbreddare	2
0120				1994, 1995, 1996, RH				
0130				40/116014101				
0140		79 77 903		361,383) 1994, 1995	14	Nut	Mutter	5
0150		86 75 043		361,383) 1994, 1995	2	Rubber moulding	Gummilist	
0160								
0170	2	90 89 657		LH	1	Wheel house moulding	Hjulhusdekor	2
0180	2	90 89 640		RH	1	Wheel house moulding	Hjulhusdekor	2
0190	2B	73 99 470			2	.Screw	.Skruv	5
0200	2C	92 53 329			4	.Clip	.Clips	5
0210								
0220	2			478) AERO		Mudguard widener	Skärmbreddare	
0230				See page 8A-077, 4-F06				
0240								
0250	2	86 75 027		361,383)	1	Mudguard widener	Skärmbreddare	2
0260				1994, 1995, 1996, LH				
0270				40/116014408				
0280	2	86 75 035		361,383)	1	Mudguard widener	Skärmbreddare	2
0290				1994, 1995, 1996, RH				
0300				40/116014309				
0310		79 77 903		361,383) 1994, 1995	12	Nut	Mutter	5
0320		86 75 043		361,383) 1994, 1995	2	Rubber moulding	Gummilist	
0330								
0340	3	92 78 151			14	Bushing	Bussning	5
0350	5	73 99 488			22	Nut	Mutter	5
0360	8	73 73 269			X	Bushing	Bussning	5
0370								
0380	9	90 88 550		LH	1	Decor strip	Dekorlist	2
0390	9	90 88 543		RH	1	Decor strip	Dekorlist	2
0400	9A	90 83 312			3	.Clip	.Clips	5
0410								
0420	10	90 83 254		LH	1	Decor strip	Dekorlist	2
0430	10	90 83 247		RH	1	Decor strip	Dekorlist	2
0440	10	43 41 830		478) LH, AERO	1	Decor strip	Dekorlist	2
0450	10	43 41 848		478) RH, AERO	1	Decor strip	Dekorlist	2
0460	10A	90 83 312			2	.Clip	.Clips	5
0470								
0480	11	90 83 098		LH	1	Decor strip	Dekorlist	2
0490	11	90 83 080		RH	1	Decor strip	Dekorlist	2
0500	11	43 41 855		478) LH, AERO	1	Decor strip	Dekorlist	2
0510	11	43 41 863		478) RH, AERO	1	Decor strip	Dekorlist	2
0520	11A	90 83 312			7	.Clip	.Clips	5
0530								
0540	12	90 83 130		LH	1	Decor strip	Dekorlist	2
0550	12	90 83 122		RH	1	Decor strip	Dekorlist	2
0560	12	43 41 871		478) LH, AERO	1	Decor strip	Dekorlist	2
0570	12	43 41 889		478) RH, AERO	1	Decor strip	Dekorlist	2
0580	12A	90 83 312			5	.Clip	.Clips	5
0590								


361. For cars with body colour 248, black metallic, and Five Spoke wheels. För bilar med karossfärg 248, metallic svart, och Five Spoke hjul.
383. For cars with body colour 253, black metallic. För bilar med karossfärg 253, metallic svart.
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

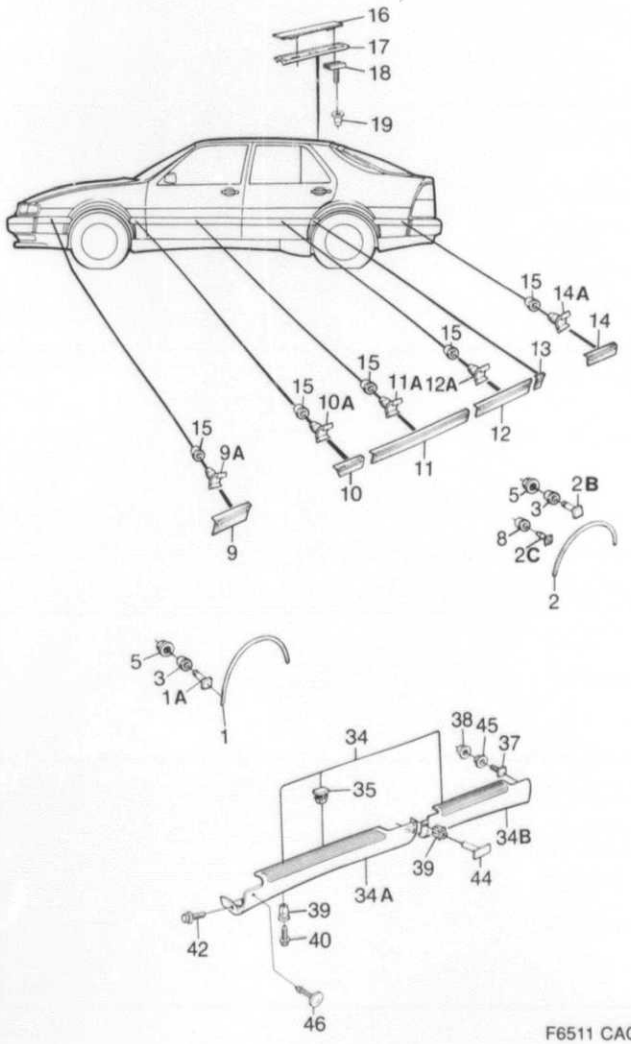

F6511 CAC94

4-E24

External details, glass, sealings

Decor, 5CS

Utvändiga detaljer, glas, tätningslister

Dekor, 5CS

0965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	13	90 83 213		LH	1	Decor strip	Dekorlist	2
0610	13	90 83 205		RH	1	Decor strip	Dekorlist	2
0620	13	43 41 897		478) LH, AERO	1	Decor strip	Dekorlist	2
0630	13	43 41 905		478) RH, AERO	1	Decor strip	Dekorlist	2
0640								
0650	14	90 83 171		LH	1	Decor strip	Dekorlist	2
0660	14	90 83 163		RH	1	Decor strip	Dekorlist	2
0670	14A	90 83 312			5	.Clip	.Clips	5
0680								
0690	15	73 73 269			44	Bushing	Bussning	5
0700								
0710	16	42 53 274		-1994, LH	1	Decor	Dekor	5
0720	16	42 53 266		-1994, RH	1	Decor	Dekor	5
0730	16	46 74 032		1995-, LH	1	Decor	Dekor	5
0740	16	46 74 024		1995-, RH	1	Decor	Dekor	5
0750	17	43 80 416		LH	1	Decor strip	Dekorlist	5
0760	17	43 80 424		RH	1	Decor strip	Dekorlist	5
0770	18	90 87 560			6	Clip	Clips	5
0780	19	40 96 616			6	Bushing	Bussning	5
0790								
0800	34	82 84 705		LH	1	Kit	Sats	5
0810	34A	69 62 138			1	.Sill protection	.Tröskelskydd	5
0820	34B	69 62 153			1	.Sill protection	.Tröskelskydd	5
0830	35	41 02 000			7	.Clamp	.Klämma	5
0840								
0850	34	82 84 713		RH	1	Kit	Sats	5
0860	34A	69 62 120			1	.Sill protection	.Tröskelskydd	5
0870	34B	69 62 146			1	.Sill protection	.Tröskelskydd	5
0880	35	41 02 000			7	.Clamp	.Klämma	5
0890								
0900	37	69 59 464			4	Screw	Skruv	5
0910	38	73 99 488			4	Nut	Mutter	5
0920	39	40 08 504			12	Nut	Mutter	5
0930	40	79 82 325			10	Screw	Skruv	5
0940	42	79 82 325			4	Screw	Skruv	5
0950	44	44 47 967			2	Expanding rivet	Expandernit	3
0960	45	40 89 934			4	Bushing	Bussning	5
0970	46	96 68 153			2	Clip	Clips	5
0980								
0990		74 96 029		See page 8A-121, 4-H02	1	Mounting kit	Monteringssats	4
1000		74 96 037		See page 8A-121, 4-H02	1	Mounting kit	Monteringssats	4

478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20


External details

4-F02 Spoiler 4D -1994

Utvändiga detaljer

Spoiler
4D -1994

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 44 214		110)	1	Spoiler	Spoiler	3
0020								
0030	2	69 58 904		110)	1	.Cover	.Lock	4
0040	3	69 60 926			1	.Bracket	.Hållare	5
0050	4	90 87 040			3	.Nut	.Mutter	5
0060								
0070	5	69 91 558		110) LH	1	Cover	Lock	4
0080	5	69 91 541		110) RH	1	Cover	Lock	4
0090								
0100	6	40 08 884			1	Air shield	Luftskärm	5
0110	7	92 65 331			4	.Clamp	.Klammer	5
0120								
0130	8	40 08 256		LH	1	Shield	Sköld	5
0140	8	40 08 249		RH	1	Shield	Sköld	5
0150								
0160	9	79 82 325			2	Screw	Skruv	5
0170	10	79 82 325			8	Screw	Skruv	5
0180	11	79 82 325			4	Screw	Skruv	5
0190	12	79 82 655			4	Press nut	Pressmutter	5
0200								
0210	13	79 73 134			8	Screw	Skruv	5
0220	14	79 77 523			6	Clip	Clips	5
0230	15	79 76 996			11	Screw	Skruv	5
0240								
0250		40 09 502			1	Mounting kit	Monteringssats	3
0260				See page 8A-119, 4-G24		air shield	luftskärm	
0270		92 67 956		2)	1	Mounting kit	Monteringssats	3
0280				See page 8A-115, 4-G20		spoiler	spoiler	

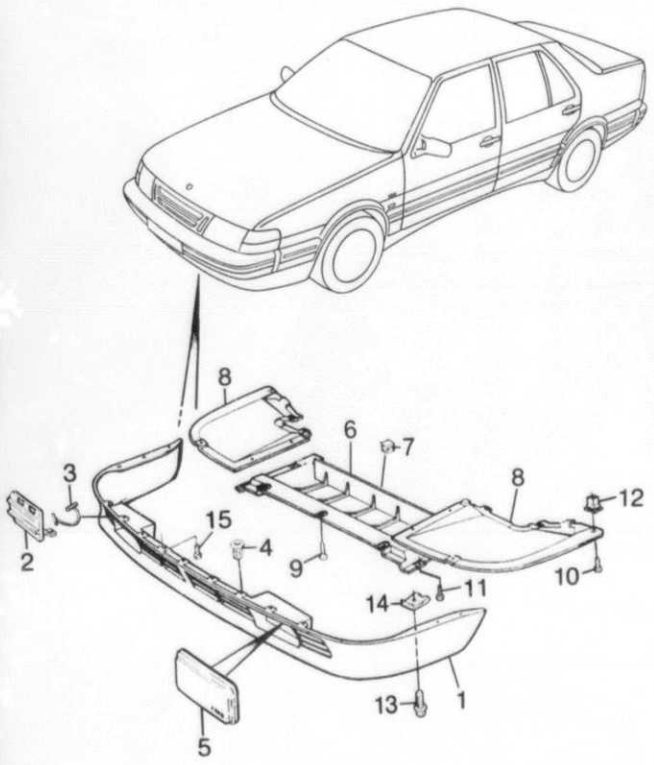

F6512 CAC94

2. Front Främre
110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

External details

4 –F04


Spoiler

5CS; 4D 1995-1997

Utvändiga detaljer

Spoiler

5CS; 4D 1995-1997

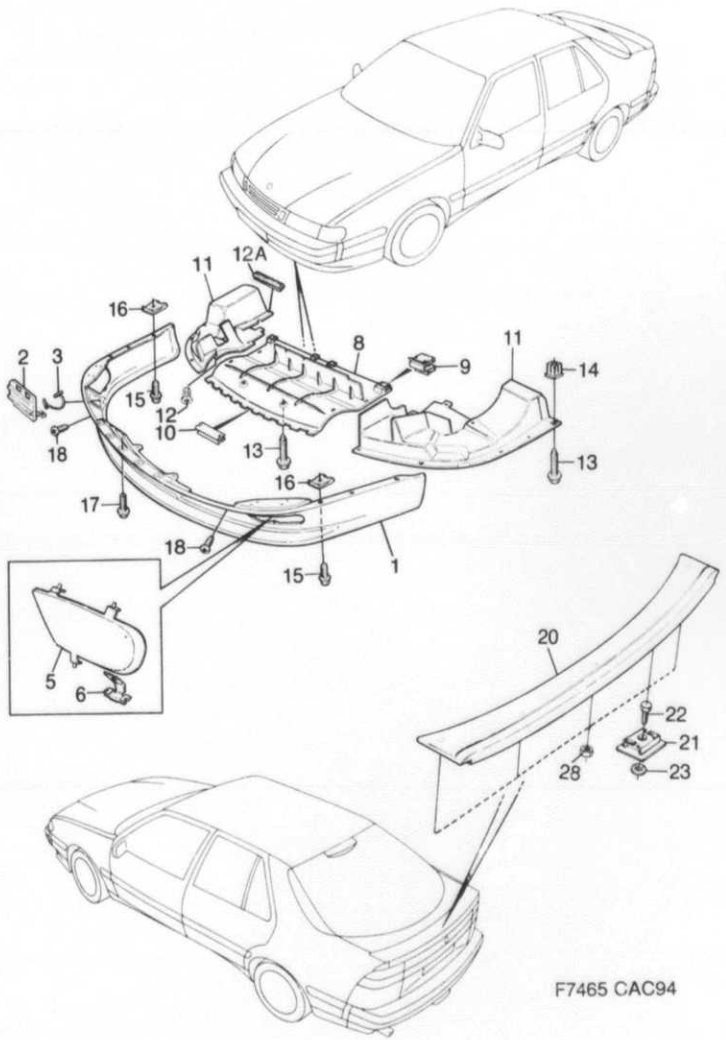

0975	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 91 062		110)	1	Spoiler	Spoiler	3
0015	1			478) AERO	1	Spoiler	Spoiler	
0016				See page 8A-077, 4-F06				
0020								
0030	2	40 90 858		110)	1	.Cover	.Lock	4
0040	3	69 60 926			1	.Bracket	.Hållare	5
0050								
0060	5	40 90 890		110) LH	1	Cover	Lock	4
0070	5	40 90 882		110) RH	1	Cover	Lock	4
0080	6	43 40 964			2	Clip	Clips	5
0090								
0100	8	90 84 211			1	Air shield	Luftskärm	5
0110	9	92 65 331			4	.Clamp	.Klammer	5
0120	10	42 94 369			3	.Clip	.Clips	5
0130								
0140	11	42 94 617		LH	1	Air shield	Luftskärm	5
0150	11	90 86 166		RH	1	Air shield	Luftskärm	5
0160	12	90 87 040			3	.Nut	.Mutter	5
0170	12A	95 19 737		RH	1	.Protecting moulding	.Skyddslist	5
0180								
0190	13	79 82 325			14	Screw	Skruv	5
0200	14	79 82 655			4	Press nut	Pressmutter	5
0210								
0220	15	79 73 134			6	Screw	Skruv	5
0230	16	79 77 523			6	Clip	Clips	5
0240	17	79 76 988			5	Screw	Skruv	5
0250	18	79 70 601			2	Screw	Skruv	5
0260								
0270	20	43 44 826		1) 5CS	1	Spoiler	Spoiler	3
0280								
0290	20	82 85 314		5CS	1	Spoiler kit	Spoiler sats	5
0300				See page 8A-117, 4-G22				
0310								
0320	21	43 20 016			2	.Retainer	.Hållare	5
0330	22	82 67 205			2	.Screw	.Skruv	5
0340	23	44 35 442			2	.Sealing washer	.Tätningsbricka	5
0350								
0360	28	79 77 929		5CS	5	Nut	Mutter	5
0370								
0380		40 09 502		See page 8A-119, 4-G24	1	Mounting kit air shield	Monteringssats luftskärm	3
0390								

1. Not as separate spare part. Ej som separat reservdel.
110. Black Svart
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-F06

External details, glass, sealings
478) 5CS Aero

Utvändiga detaljer, glas, tätningslister
478) 5CS Aero

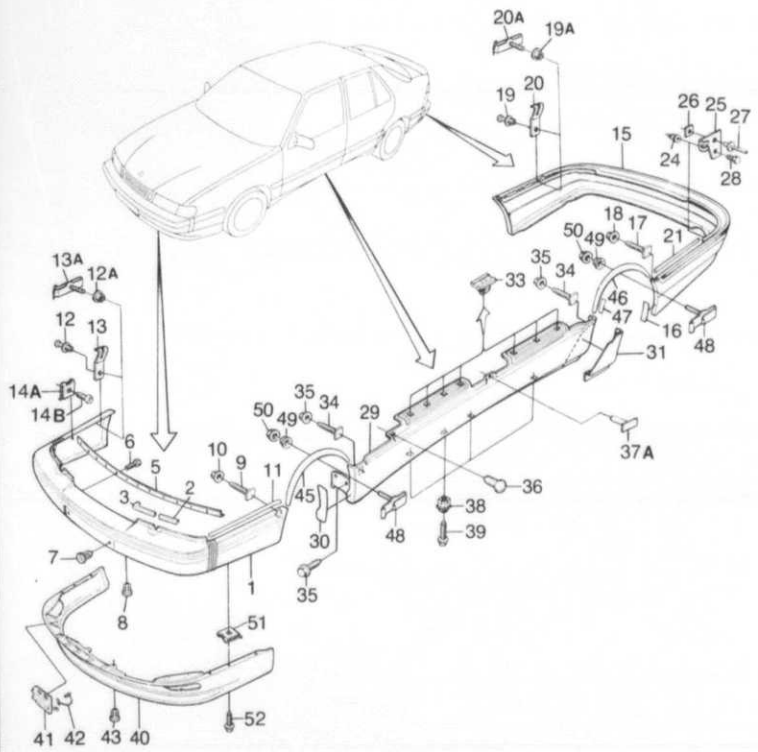

F8401 CAC94

0997	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8A-101, 4-G06		Bumper	Stötfångare	
0020	1	74 97 571		426)	1	Outer casing	Hölje	
0030	1	74 97 589		See page 8A-121, 4-H02	1	Mounting kit	Monteringssats	
0040	1	44 35 178		427)	1	Outer casing	Hölje	3
0050	2	43 80 036			2	Seal	Tätning	5
0060	3	40 96 756		LH	1	Seal	Tätning	5
0070	3	40 96 749		RH	1	Seal	Tätning	5
0080	5	90 81 282			2	Attaching rail	Fästskena	6
0090	6	44 46 290			24	Screw	Skruv	5
0100	7	90 87 040			4	Nut	Mutter	5
0110	8	92 88 846			7	Nut	Mutter	5
0120	9	69 59 464		426)	2	Screw	Skruv	5
0130	9	40 87 151		427)	2	Screw	Skruv	5
0140	10	73 99 488			2	Nut	Mutter	5
0150	11	44 47 611		426) LH	1	Sealing strip	Tätningslist	5
0160	11	44 84 796		427) LH	1	Sealing strip	Tätningslist	5
0170	11	44 47 603		426) RH	1	Sealing strip	Tätningslist	5
0180	11	44 84 796		427) RH	1	Sealing strip	Tätningslist	5
0190	12	86 67 479		426)	6	Rivet	Nit	3
0200	12A	73 73 269		427)	6	Bushing	Bussning	5
0210	13	43 42 275		426)	6	Attaching spring	Fästfjäder	5
0220	13A	40 90 197		427)	6	Clip	Clips	5
0230	14A	79 77 523			2	Clip	Clips	5
0240	14B	79 78 638			2	Screw	Skruv	5
0250								
0260				See page 8A-105, 4-G10		Bumper	Stötfångare	
0270	15	74 97 597		426)	1	Outer casing	Hölje	
0280		74 97 589		See page 8A-121, 4-H02	1	,Mounting kit	,Monteringssats	
0290	15	82 85 413		427)	1	Outer casing	Hölje	3
0300	16	86 67 214		LH	1	,Protective foil	,Skyddsfolie	
0310	16	86 67 206		RH	1	,Protective foil	,Skyddsfolie	
0320	17	40 87 151			4	Screw	Skruv	5
0330	18	73 99 488			4	Nut	Mutter	5
0340	19	86 67 479		426)	6	Rivet	Nit	3
0350	19A	73 73 269		427)	4	Bushing	Bussning	5
0360	20	43 42 275		426)	6	Attaching spring	Fästfjäder	5
0370	20A	40 90 197		427)	4	Clip	Clips	5
0380	21	44 47 637		426) LH	1	Sealing strip	Tätningslist	5
0390	21	44 84 796		427) LH	1	Sealing strip	Tätningslist	F
0400	21	44 47 629		426) RH	1	Sealing strip	Tätningslist	
0410	21	44 84 796		427) RH	1	Sealing strip	Tätningslist	
0420	24	69 11 804			6	Bushing	Bussning	A
0430	25	44 48 874		LH	1	Attaching bracket	Fästvinkel	
0440	25	44 48 866		RH	1	Attaching bracket	Fästvinkel	6
0450	26	92 30 293			2	Washer	Bricka	5
0460	27	98 49 514			2	Rivet	Nit	5
0470	28	79 78 638			2	Screw	Skruv	5
0480								
0490	29	82 85 439		LH	1	Sill cover	Tröskelbreddare	
0500				See page 8A-121, 4-H02				
0510	29	82 85 421		RH	1	Sill cover	Tröskelbreddare	2
0520				See page 8A-121, 4-H02				
0530	30	44 47 124		LH	1	,Protective foil	,Skyddsfolie	
0540	30	44 47 116		RH	1	,Protective foil	,Skyddsfolie	
0550	31	86 62 843		LH	1	,Protective foil	,Skyddsfolie	
0560	31	86 62 835		RH	1	,Protective foil	,Skyddsfolie	
0570	33	41 02 000			14	Clamp	Klämma	5
0580	34	69 59 464			4	Screw	Skruv	5
0590	35	73 99 488			4	Nut	Mutter	5
0600	36	96 68 153			2	Clip	Clips	5

426. Ch. -S1008599
427. Ch. S1008600-
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4 –F08

External details, glass, sealings
478) 5CS Aero

Utvändiga detaljer, glas, tätningslister
478) 5CS Aero

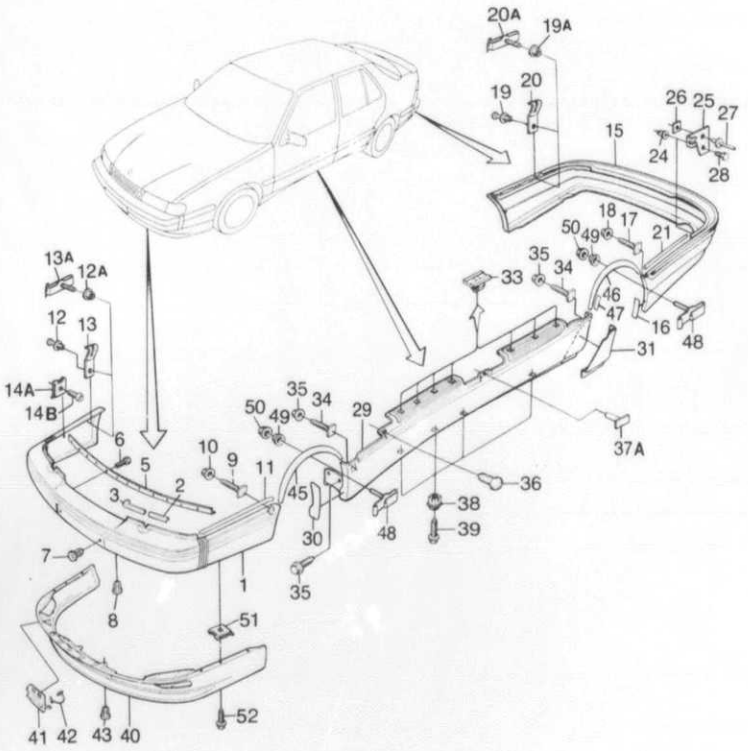

F8401 CAC94

0997	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	37A	44 47 967			2	Expanding rivet	Expandernit	3
0620	38	40 08 504			12	Nut	Mutter	5
0630	39	79 82 325			14	Screw	Skruv	5
0640								
0650	40	44 35 186		426)	1	Spoiler	Spoiler	3
0660	40	44 84 739		427)	1	Spoiler	Spoiler	3
0670	41	43 42 283			1	Cover	Täcklock	4
0680	42	69 60 926			1	Bracket	Hållare	5
0690	43	90 87 040			2	Nut	Mutter	5
0700								
0710	45	44 35 137		LH	1	Mudguard widener	Skärmbreddare	2
0720	45	44 35 129		RH	1	Mudguard widener	Skärmbreddare	2
0730								
0740	46	82 85 447		LH	1	Mudguard widener	Skärmbreddare	2
0750				See page 8A-123, 4-H04				
0760	46	82 85 454		RH	1	Mudguard widener	Skärmbreddare	2
0770				See page 8A-123, 4-H04				
0780	47	86 63 270		LH	1	,Protective foil	,Skyddsfolie	
0790	47	86 63 262		RH	1	,Protective foil	,Skyddsfolie	
0800	48	40 90 197		426)	14	Clip	Clips	5
0810	48	40 90 197		427)	8	Clip	Clips	5
0820	49	92 78 151		426)	14	Bushing	Bussning	5
0830	49	92 78 151		427)	8	Bushing	Bussning	5
0840	50	73 99 488			14	Nut	Mutter	5
0850	51	79 77 523			6	Clip	Clips	5
0860	52	79 77 465			6	Screw	Skruv	5

426. Ch. -S1008599
427. Ch. S1008600-
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4–F10 External mirror / Utvändiga backspeglar

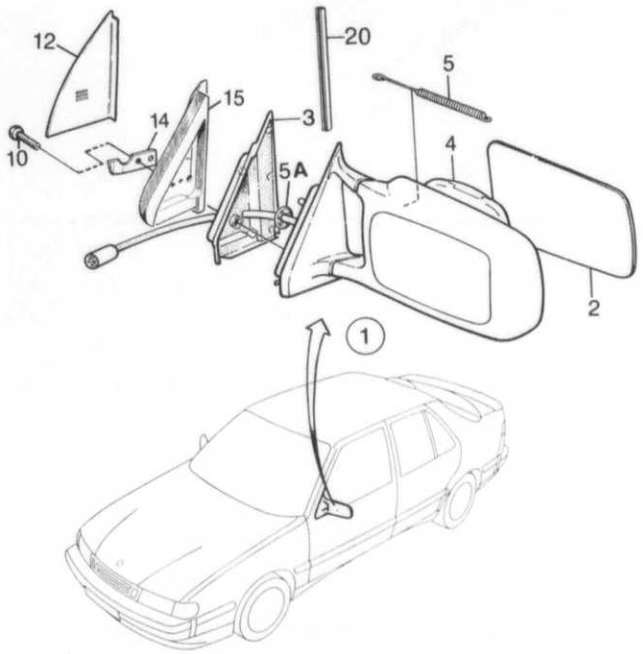

F7466 CAC94

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*96 61 307*		381) LH, WIDE ANGLE, SE, FI, EU, ME, FE, BR NLS – USE 4684775	1	Rear view mirror	Backspegel	4
0030	1	46 84 775		382)-1996,LH,WIDE ANGLE, SE, FI, EU, ME, FE, BR	1	Rear view mirror	Backspegel	4
0041	1	46 84 775		1997-, LH, WIDE ANGLE, SE, FI, EU, FE, BR	1	Rear view mirror	Backspegel	4
0043	1	48 24 009		1997-, LH, WIDE ANGLE, ME	1	Rear view mirror	Backspegel	4
0060	1	*96 61 364*		381) RH, CONVEX GLASS SE, FI, EU, ME, FE,JP,BR NLS – USE 4684734	1	Rear view mirror	Backspegel	4
0080	1	46 84 734		382)-1996,RH,CONV.GLASS SE, FI, EU, ME, FE,JP,BR	1	Rear view mirror	Backspegel	4
0091	1	46 84 734		1997-, RH, CONVEX GLASS SE, FI, EU, FE,JP,BR	1	Rear view mirror	Backspegel	4
0093	1	48 24 017		1997-, RH, CONVEX GLASS ME	1	Rear view mirror	Backspegel	4
0110	1	*96 61 323*		381) LH, FLAT GLASS, US, CA NLS – USE 4684742	1	Rear view mirror	Backspegel	4
0130	1	46 84 742		382) LH, FLAT GLASS, US, CA	1	Rear view mirror	Backspegel	4
0160	1	*96 61 380*		381) RH, CONVEX GLASS, US, CA NLS – USE 4684767	1	Rear view mirror	Backspegel	4
0180	1	46 84 767		382) RH, CONVEX GLASS, US, CA	1	Rear view mirror	Backspegel	4
0210	1	96 61 331		381)LH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0220	1	46 84 726		382)LH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0240	1	*96 61 364*		381)RH, CONVEX GLASS, JP NLS – USE 4684734	1	Rear view mirror	Backspegel	4
0250	1	46 84 734		382)RH, CONVEX GLASS, JP	1	Rear view mirror	Backspegel	4
0270	1	*96 61 208*		381) LH, FOR RHD, CONVEX GLASS, GB, ME, FE NLS – USE 4684809	1	Rear view mirror	Backspegel	4
0290	1	46 84 809		382)-1996, LH, FOR RHD, CONVEX GLASS, GB, ME, FE	1	Rear view mirror	Backspegel	4
0301	1	46 84 809		1997-, LH, FOR RHD, CONVEX GLASS, GB, FE	1	Rear view mirror	Backspegel	4
0320	1	*96 61 240*		381) RH FOR RHD, WIDE ANGLE, GB NLS – USE 4684783	1	Rear view mirror	Backspegel	4
0340	1	46 84 783		382) RH FOR RHD, WIDE ANGLE, GB	1	Rear view mirror	Backspegel	4
0370	1	*96 61 208*		381) LH FOR RHD CONVEX GLASS, AU NLS – USE 4684809	1	Rear view mirror	Backspegel	4
0390	1	46 84 809		382) LH FOR RHD CONVEX GLASS, AU	1	Rear view mirror	Backspegel	4
0420	1	96 61 257		381) RH FOR RHD, FLAT GLASS, AU	1	Rear view mirror	Backspegel	4
0440	1	46 84 759		382) RH FOR RHD, FLAT GLASS, AU	1	Rear view mirror	Backspegel	4


381. Ch. -S1014313
382. Ch. S1014314-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

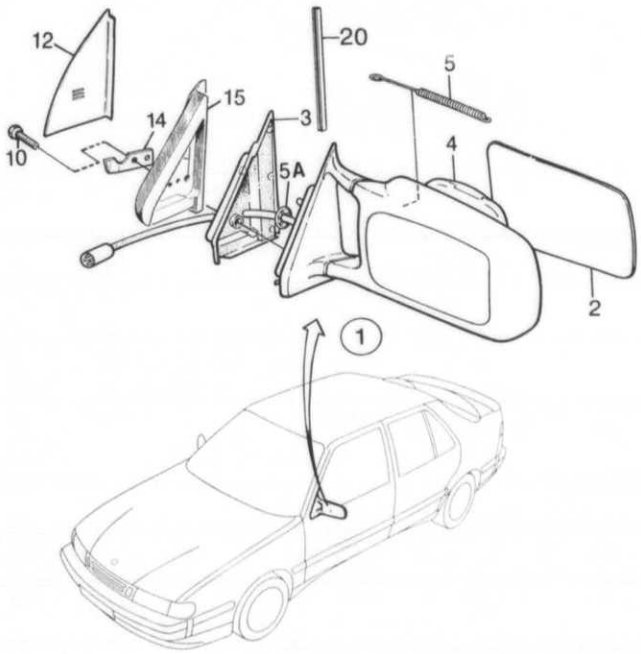

F7466 CAC94

External details, glass, sealings

4-F12 External mirror

Utvändiga detaljer, glas, tätningslister

Utvändiga backspeglar

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460								
0470	1	*96 61 265*		381) RH FOR RHD CONVEX GLASS, ME, FE NLS USE 4684791	1	Rear view mirror	Backspegel	4
0480								
0490	1	46 84 791		382)-1996, RH FOR RHD CONVEX GLASS, ME, FE	1	Rear view mirror	Backspegel	4
0500								
0501	1	46 84 791		1997-, RH FOR RHD CONVEX GLASS, FE	1	Rear view mirror	Backspegel	4
0502								
0510								
0520	1	*96 61 208*		381) LH FOR RHD, JP, SE, NLS – USE 4684809	1	Rear view mirror	Backspegel	4
0520								
0530	1	46 84 809		382) LH FOR RHD, JP, SE,	1	Rear view mirror	Backspegel	4
0540								
0550	1	*96 61 265*		381) RH FOR RHD, JP, SE NLS – USE 4684791	1	Rear view mirror	Backspegel	4
0550								
0560	1	46 84 791		382) RH FOR RHD, JP, SE	1	Rear view mirror	Backspegel	4
0570								
0580	2	*97 97 044*		381) LH, WIDE ANGLE, SE, FI, EU, ME, BR NLS - USE 4684866	1	.Mirror glass	.Spegelglas	3
0590								
0590								
0600	2	46 84 866		382)-1996,LH,WIDE ANGLE SE, FI, EU, ME, BR	1	.Mirror glass	.Spegelglas	3
0610								
0611	2	46 84 866		1997-, LH, WIDE ANGLE SE, FI, EU, BR	1	.Mirror glass	.Spegelglas	3
0612								
0614	2	48 24 025		1997-, LH, WIDE ANGLE ME	1	.Mirror glass	.Spegelglas	3
0615								
0620								
0630	2	97 97 069		381) RH, CONVEX, SE, FI, EU, ME, BR	1	.Mirror glass	.Spegelglas	3
0640								
0650	2	46 84 825		382)-1996, RH, CONVEX, SE, FI, EU, ME, BR	1	.Mirror glass	.Spegelglas	3
0660								
0661	2	46 84 825		1997-, RH, CONVEX, SE, FI, EU, BR	1	.Mirror glass	.Spegelglas	3
0662								
0663	2	48 24 033		1997-, RH, CONVEX, ME	1	.Mirror glass	.Spegelglas	3
0664								
0670								
0680	2	95 91 868		381) LH, FLAT, US, CA	1	.Mirror glass	.Spegelglas	3
0690	2	46 84 833		382) LH, FLAT, US, CA	1	.Mirror glass	.Spegelglas	3
0700								
0710	2	*97 97 101*		381) RH, CONVEX, US,CA NLS – USE 4684858	1	.Mirror glass	.Spegelglas	3
0710								
0720	2	46 84 858		382) RH, CONVEX, US,CA	1	.Mirror glass	.Spegelglas	3
0730								
0740	2	*97 97 051*		381) LH, CONVEX, JP NLS - USE 4684817	1	.Mirror glass	.Spegelglas	3
0740								
0750	2	46 84 817		382) LH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0760								
0770	2	97 97 069		381) RH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0780	2	46 84 825		382) RH, CONVEX, JP	1	.Mirror glass	.Spegelglas	3
0790								
0800	2	*97 97 051*		381) LH FOR RHD, CONVEX, GB NLS – USE 4684817	1	.Mirror glass	.Spegelglas	3
0810								
0810								
0820	2	46 84 817		382) LH FOR RHD, CONVEX, GB	1	.Mirror glass	.Spegelglas	3
0830								
0840								
0850	2	*97 97 077*		381) RH FOR RHD, WIDE ANGLE, GB NLS – USE 4700027	1	.Mirror glass	.Spegelglas	3
0860								
0860								
0870	2	47 00 027		382) RH FOR RHD, WIDE ANGLE, GB	1	.Mirror glass	.Spegelglas	3
0880								

381. Ch. -S1014313
382. Ch. S1014314-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4–F14 External mirror / Utvändiga backspeglar

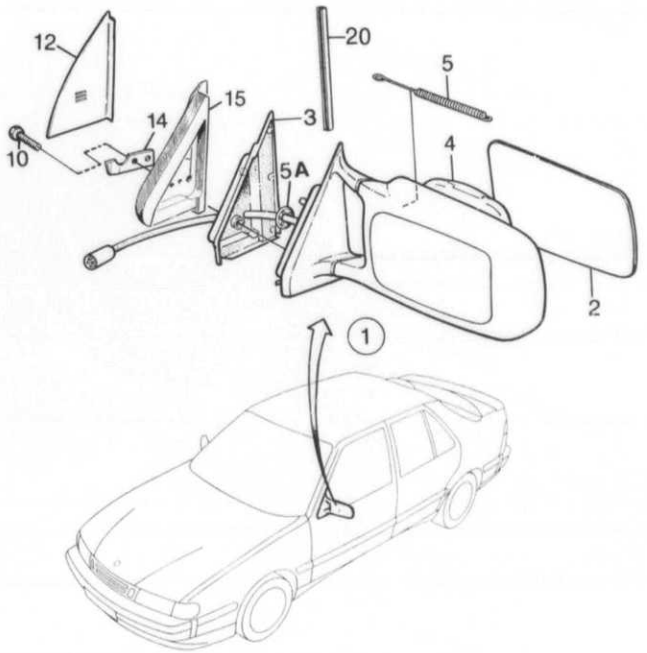

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0890								
0900	2	*97 97 051*		381) LH FOR RHD, CONVEX, ME, FE NLS – USE 4684817	1	.Mirror glass	.Spegelglas	3
0910								
0920	2	46 84 817		382)-1996, LH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0930								
0931	2	46 84 817		1997-, LH FOR RHD, CONVEX, FE	1	.Mirror glass	.Spegelglas	3
0932								
0940								
0950	2	97 97 069		381) RH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0960								
0970	2	46 84 825		382)-1996, RH FOR RHD, CONVEX, ME, FE	1	.Mirror glass	.Spegelglas	3
0980								
0981	2	46 84 825		1997-. RH FOR RHD, CONVEX, FE	1	.Mirror glass	.Spegelglas	3
0982								
0990								
1000	2	*97 97 051*		381) LH FOR RHD,CONVEX AU NLS – USE 4684817	1	.Mirror glass	.Spegelglas	3
1010								
1020	2	46 84 817		382) LH FOR RHD,CONVEX AU	1	.Mirror glass	.Spegelglas	3
1030								
1040								
1050	2	*97 97 119*		381) RH FOR RHD, FLAT, AU NLS – USE 4684841	1	.Mirror glass	.Spegelglas	3
1060								
1070	2	46 84 841		382) RH FOR RHD, FLAT, AU	1	.Mirror glass	.Spegelglas	3
1080								
1090								
1100	3	96 61 448		LH	1	.Gasket	.Packning	5
1110	3	96 61 455		RH	1	.Gasket	.Packning	5
1120	4	97 76 584			1	.Drive unit	.Drivenhet	5
1130	5	94 72 580			2	.Spring	.Fjäder	5
1140	5A	42 60 568			1	.Lock washer	.Spärrbricka	5
1150								
1160	10	79 77 689			6	Screw	Skruv	5
1170	12	42 68 389		LH	1	Cover	Täcklock	5
1180	12	42 68 397		RH	1	Cover	Täcklock	5
1190	14	96 58 972		LH	1	Reinforcement	Förstärkning	3
1200	14	96 58 980		RH	1	Reinforcement	Förstärkning	3
1210	15	96 71 926		LH	1	Gasket	Packning	5
1220	15	96 71 934		RH	1	Gasket	Packning	5
1230								
1240	20	45 57 757			2	Seal	Tätning	

381. Ch. -S1014313
382. Ch. S1014314-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-F16 *Windscreen* *Vindruta*

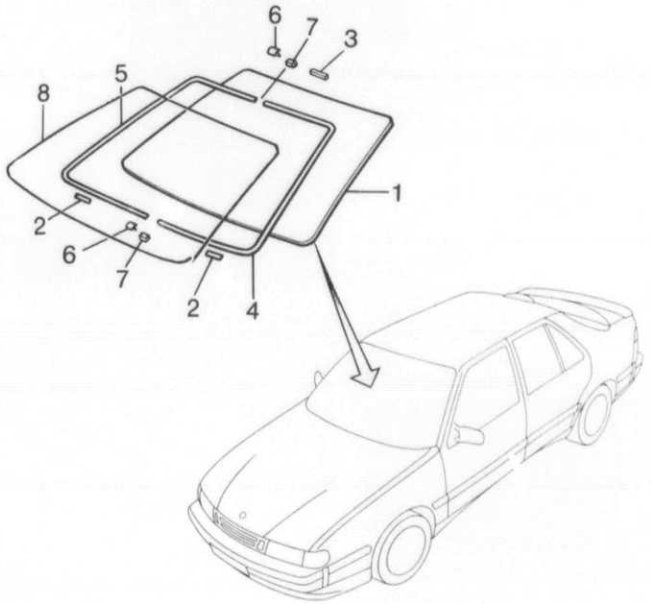

F6516 CAC94

1050	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 092		295)	1	Windscreen	Vindruta	3
0020				WITH CUT FOR CH.NUMBER				
0030				See page 8A-115, 4-G20				
0040								
0050		82 84 531		See page 8A-121, 4-H02	1	Mounting kit windscreen	Monteringssats vindruta	3
0060								
0070		74 97 357		378)	X	Tape	Tape	
0080		45 59 100		1)	15	.Tape	.Tape	
0090	2	69 91 244			2	Spacer	Distans	3
0100	3	40 13 603			4	Spacer	Distans	3
0110	4	92 78 318		LH	1	Strip holder	Hållarlist	3
0120	5	92 78 300		RH	1	Strip holder	Hållarlist	3
0130	6	92 78 334			2	Connector	Skarvstycke	3
0140	7	92 62 916			2	Clip	Clips	5
0150	8	42 50 320			1	Decor strip	Dekorlist	3

1. Not as separate spare part. Ej som separat reservdel.
295. Heat-absorbing glass Värmeabsorberande glas
378. Ch. S1009232-


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-F18 *Rear window* / *Bakruta*

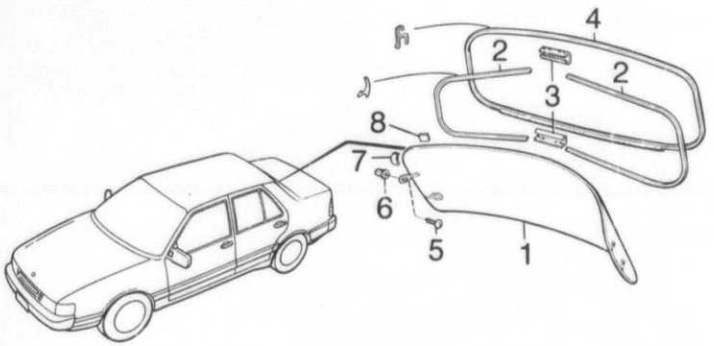

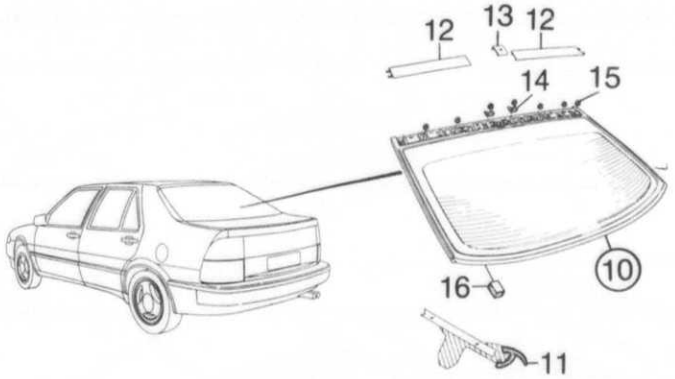

F7467 CAC94

1060	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 97 118		295) -1997, 4D	1	Rear window	Bakruta	4
0020				See page 8A-119, 4-G24				
0030	2	69 62 815		-1997, 4D LH	1	.Strip holder	.Hållarlist	3
0040	2	09 62 807		-1997, 4D RH	1	.Strip holder	.Hållarlist	3
0050	3	92 78 334		-1997, 4D	2	.Connector	.Skarvstycke	3
0060	4	69 48 871		-1997, 4D	1	.Cover moulding	.Täcklist	3
0070	5	79 70 601		-1997, 4D	4	Screw	Skruv	5
0080	6	79 75 261		-1997, 4D	4	Nut	Mutter	5
0090	7	69 91 244		-1997, 4D	4	Spacer	Distans	3
0100				PART OF 7497118				
0110	8	69 92 028		-1997, 4D	3	Spacer	Distans	3
0120				PART OF 7497118				
0130								
0140	10	43 06 296		295) 5CS	1	Rear window	Bakruta	4
0150	11	43 04 341		5CS	1	.Seal	.Tätning	5
0160	12	90 84 773		192) 5CS LH	1	Decor strip	Dekorlist	3
0170	12	90 84 765		192) 5CS RH	1	Decor strip	Dekorlist	3
0180	12	90 83 858		27) 5CS LH	1	Decor strip	Dekorlist	3
0190	12	90 83 841		27) 5CS RH	1	Decor strip	Dekorlist	3
0200	13	90 83 866		192) 5CS	1	Connection	Skarv	4
0210	13	90 83 874		192,193) 5CS	1	Connection	Skarv	4
0220	14	90 89 517		5CS	2	Washer	Bricka	5
0230	15	79 77 911		317) 5CS	12	Nut	Mutter	5
0240	15	73 98 423		318) 5CS	8	Nut	Mutter	5
0250	16	40 96 343		5CS	2	Seal	Tätning	5


27. For cars with high mounted stop light För bilar med högt monterat bromsljus
192. For cars without high mounted stop light För bilar utan högt monterat bromsljus
193. For cars with rear window wiper. För bilar med bakrutetorkare.
295. Heat-absorbing glass Värmeabsorberande glas
317. Body -4115218
318. Body 4115219-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

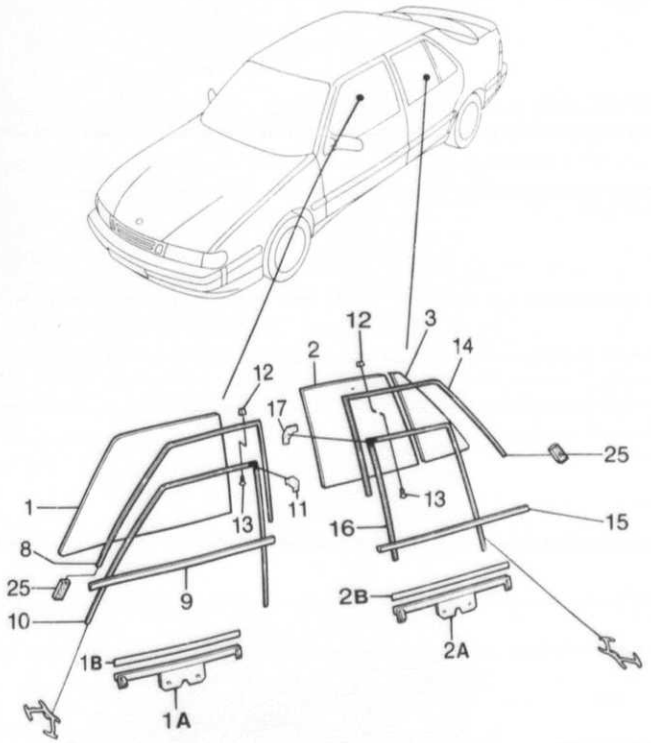

F6518 CAC94

External details, glass, sealings

Utvändiga detaljer, glas, tätningslister

4 –F20 *Doors and side windows* *Dörr- och sidorutor*

1075	Pos	Part No/Art nr	K S	Notes Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 06 213*		311,295), LH NLS – USE 4550943	1	Door window	Dörruta	4
0020	1	*43 06 205*		311,295), RH NLS – USE 4550935	1	Door window	Dörruta	4
0040	1	45 50 943		312,295), LH	1	Door window	Dörruta	4
0050	1	45 50 935		312,295), RH	1	Door window	Dörruta	4
0070	1A	69 56 700		311)	1	.Window bracket	.Rutfäste	5
0080	1A	45 50 497		312)	1	.Window bracket	.Rutfäste	5
0090	1B	92 63 708			1	.Spacer	.Mellanlägg	5
0110	2	43 06 239		295) LH	1	Door window	Dörruta	4
0120	2	43 06 221		295) RH	1	Door window	Dörruta	4
0140	2A	69 56 700			1	.Window bracket	.Rutfäste	5
0150	2B	92 63 708			1	.Spacer	.Mellanlägg	5
0170	3	43 06 254		295,440) LH	1	Door window	Dörruta	4
0180	3	43 06 247		295,440) RH	1	Door window	Dörruta	5
0190	3	47 65 178		295,441) LH	1	Door window	Dörruta	4
0200	3	47 65 160		295,441) RH	1	Door window	Dörruta	4
0210				1)		.Seal	.Tätning	
0220				1)		.Clip	.Clips	
0240	8	69 92 630		LH, BLACK	1	Decor frame	Dekorram	3
0250	8	69 92 622		RH, BLACK	1	Decor frame	Dekorram	3
0260	9	40 13 777		LH, BLACK	1	Decor strip	Dekorlist	4
0270	9	40 13 785		RH, BLACK	1	Decor strip	Dekorlist	4
0280	10	41 71 914		LH, DOOR FRAME	1	Seal	Tätning	5
0290	10	41 71 906		RH, DOOR FRAME	1	Seal	Tätning	5
0300	11	92 77 278			1	Seal	Tätning	3
0310	12	92 68 616			36	Clip	Clips	5
0320	13	69 56 601			36	Screw	Skruv	5
0330	14	69 92 655		LH, BLACK	1	Decor frame	Dekorram	3
0340	14	69 92 648		RH, BLACK	1	Decor frame	Dekorram	3
0360	15	43 03 616		LH, BLACK	1	Decor strip	Dekorlist	4
0370	15	43 03 608		RH, BLACK	1	Decor strip	Dekorlist	4
0390	16	41 71 930		LH, DOOR FRAME	1	Seal	Tätning	5
0400	16	41 71 922		RH, DOOR FRAME	1	Seal	Tätning	5
0410	17	92 77 286			1	Seal	Tätning	3
0430	25	40 10 336			8	Seal	Tätning	4

1. Not as separate spare part. Ej som separat reservdel.
295. Heat-absorbing glass Värmeabsorberande glas
311. Ch. -R1008701
312. Ch. R1008702-
440. Ch. -T1028218
441. Ch. T1028219-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20


4-F22

External details, glass, sealings

Splash guard

Utvändiga detaljer, glas, tätningslister

Stänkskydd

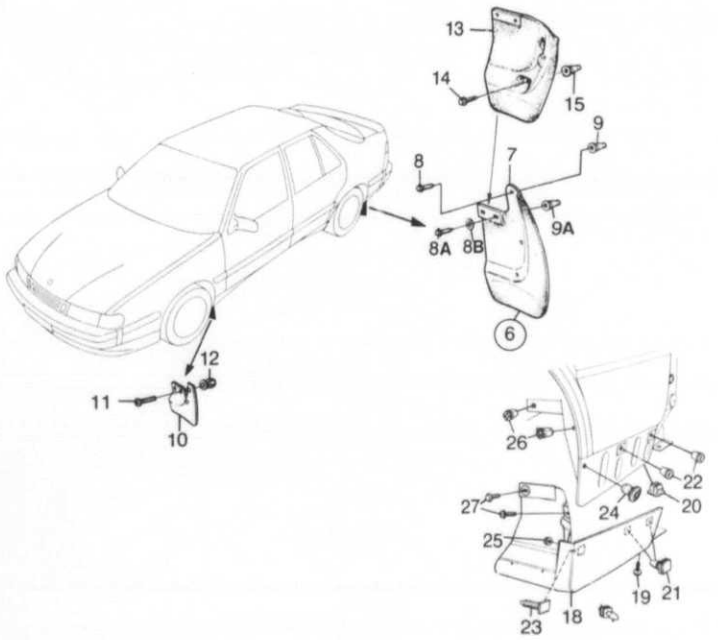

F6519 CAC94

1090	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	6	82 84 341			1	Baffle	Stänkskydd	3
0020				See page 8A-115, 4-G20				
0030	6	82 84 663		LH	1	Baffle	Stänkskydd	3
0040				See page 8A-119, 4-G24				
0050	6	82 84 655		RH	1	Baffle	Stänkskydd	3
0060				See page 8A-119, 4-G24				
0070	7	40 99 776		LH	1	,Baffle	,Stänkskydd	3
0080	7	40 99 768		RH	1	,Baffle	,Stänkskydd	3
0090	8	79 82 325			4	Screw	Skruv	5
0100	8A	79 82 325			4	Screw	Skruv	5
0110	8B	82 73 468			2	Washer	Bricka	5
0120	9	79 82 655			4	Press nut	Pressmutter	5
0130	9A	90 87 040			4	Nut	Mutter	5
0140								
0150	10	82 84 721		LH AND RH	1	Baffle	Stänkskydd	3
0160				See page 8A-119, 4-G24				
0170	10	82 84 747		LH	1	Baffle	Stänkskydd	3
0180				See page 8A-119, 4-G24				
0190	10	82 84 739		RH	1	Baffle	Stänkskydd	3
0200				See page 8A-119, 4-G24				
0210								
0220	10	40 08 959		LH, FI	1	Baffle	Stänkskydd	4
0230	10	40 08 942		RH, FI	1	Baffle	Stänkskydd	4
0240	11	79 82 325		FI	4	Screw	Skruv	5
0250	12	90 87 040		FI	4	Nut	Mutter	5
0260								
0270	13	69 38 914		478) 5CS AERO, LH	1	Baffle	Stänkskydd	3
0280	13	69 38 906		478) 5CS AERO, RH	1	Baffle	Stänkskydd	3
0290	14	79 82 325		478) 5CS AERO	4	Screw	Skruv	5
0300	15	40 08 504		478) 5CS AERO	4	Nut	Mutter	5
0310								
0320	18	40 06 136		-1997, LH, 4D	1	Stone guard	Stenskottsskydd	5
0330	18	40 06 128		-1997, RH, 4D	1	Stone guard	Stenskottsskydd	5
0340	18	90 82 678		LH, 5CS	1	Stone guard	Stenskottsskydd	5
0350	18	90 82 660		RH, 5CS	1	Stone guard	Stenskottsskydd	5
0360	19	*79 72 953*		NLS - USE 7922370, 8029944	2	Screw	Skruv	5
0370	20	*40 05 237*		NLS - USE 4008504, 7982325	2	Nut	Mutter	5
0380	21	73 73 251			4	Clip	Clips	5
0390	22	73 73 269			4	Bushing	Bussning	5
0400	23	69 59 464			4	Screw	Skruv	5
0410	24	92 78 151			2	Bushing	Bussning	5
0420	25	73 99 488			2	Nut	Mutter	5
0430	26	79 82 655		-1997, 4D	4	Press nut	Pressmutter	5
0440	26	79 82 655		5CS	4	Press nut	Pressmutter	5
0450	27	79 82 325		-1997, 4D	4	Screw	Skruv	5
0460	27	79 82 325		5CS	4	Screw	Skruv	5
0470								
0480		82 84 556		-1997, LH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0490				See page 8A-123, 4-H04				
0500		82 84 549		-1997, RH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0510				See page 8A-123, 4-H04				


478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

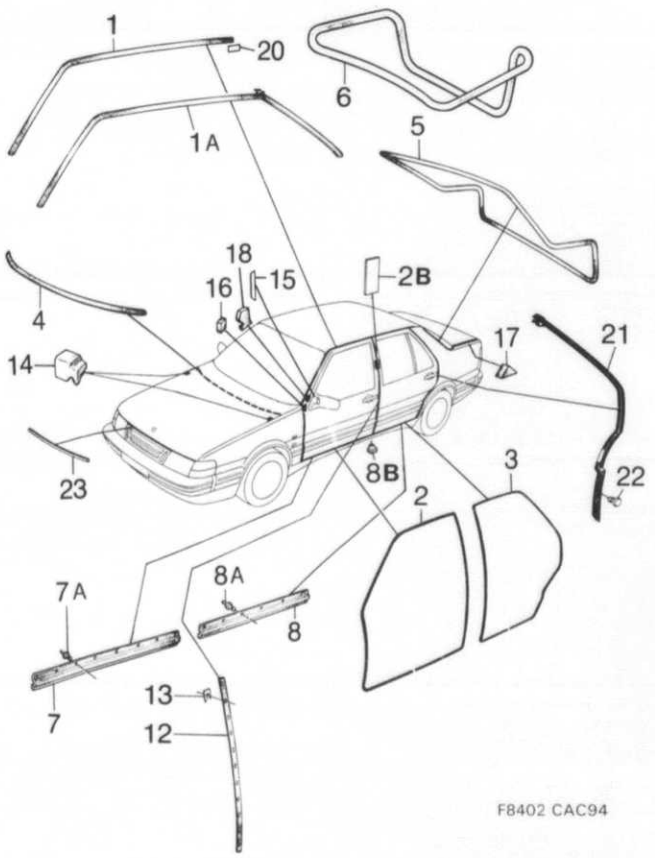

4 -F24

External details, glass, sealings

Other sealings

Utvändiga detaljer, glas, tätningslister

Övriga tätningslister

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 06 114		370) 5CS LH	1	Seal	Tätning	5
0020	1	43 06 106		370) 5CS RH	1	Seal	Tätning	5
0030								
0040	1	45 59 043		371) 5CS LH	1	Seal	Tätning	5
0050	1	45 59 035		371) 5CS RH	1	Seal	Tätning	5
0060								
0070	1A	43 06 130		370) 4D LH	1	Seal	Tätning	5
0080	1A	43 06 122		370) 4D RH	1	Seal	Tätning	5
0090								
0100	1A	45 59 050		371) -1997, 4D LH	1	Seal	Tätning	5
0110	1A	45 59 068		371) -1997, 4D RH	1	Seal	Tätning	5
0120								
0130	2	*40 10 401*		110,339) LH NLS – USE 4493219, 4494993	1	Seal	Tätning	5
0130								
0140	2	*40 10 393*		110,339) RH NLS – USE 4493227, 4494993	1	Seal	Tätning	5
0140								
0150								
0160	2	44 93 219		110,340) LH	1	Seal	Tätning	5
0170	2	44 93 227		110,340) RH	1	Seal	Tätning	5
0180								
0190	2B	43 05 777			24	Tape	Tejp	5
0200								
0210	3	*40 10 427*		110,339) LH NLS – USE 4493235	1	Seal	Tätning	5
0210								
0220	3	*40 10 419*		110,339) RH NLS – USE 4493243	1	Seal	Tätning	5
0220								
0230								
0240	3	44 93 235		110,340) LH	1	Seal	Tätning	5
0250	3	44 93 243		110,340) RH	1	Seal	Tätning	5
0260								
0270	4	40 14 577			1	Seal	Tätning	3
0280								
0290	5	*90 85 903*		396) 5CS NLS – USE 4307476	1	Seal	Tätning	4
0290								
0300	5	43 07 476		397) 5CS	1	Seal	Tätning	4
0310	6	69 60 066		396) 4D	1	Seal	Tätning	4
0320	6	45 59 647		397) -1997, 4D	1	Seal	Tätning	4
0330								
0340	7	41 02 075		LH	1	Seal	Tätning	3
0350	7	41 02 067		RH	1	Seal	Tätning	3
0360	7	43 03 699		478) AERO	2	Decor strip	Dekorlist	3
0370	7A	90 87 289			8	,Clip	,Clips	5
0380								
0390	8	40 96 871		448) LH	1	Seal	Tätning	3
0400	8	40 96 889		448) RH	1	Seal	Tätning	3
0410	8	48 53 552		449) LH	1	Seal	Tätning	
0420	8	48 53 545		449) RH	1	Seal	Tätning	
0430	8	43 03 707		478) AERO	2	Decor strip	Dekorlist	3
0440	8A	90 87 289			8	,Clip	,Clips	5
0450	8B	69 30 572		478) AERO	2	Plug	Plugg	5
0460								
0470	12	92 62 965		LH	1	Seal	Tätning	5
0480	12	92 62 957		RH	1	Seal	Tätning	5


110. Black Svart
339. Ch. -R1022475
340. Ch. R1022476-
370. Ch. -S1007311
371. Ch. S1007312-
396. Ch. -S1024232
397. Ch. S1024233-
448. Ch. -V1007482
449. Ch. V1007483-
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

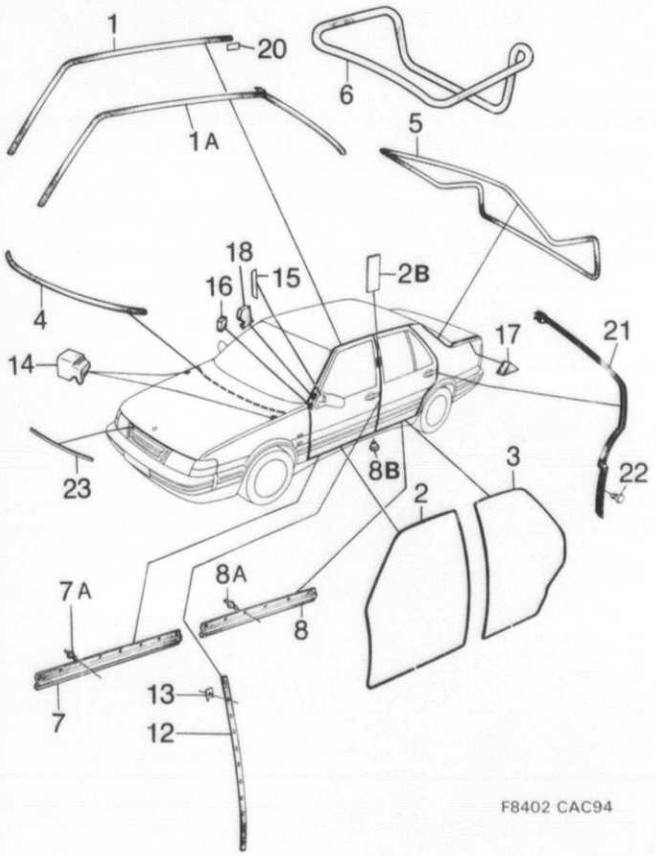

F8402 CAC94

External details, glass, sealings

4-G02 *Other sealings*

Utvändiga detaljer, glas, tätningslister

Övriga tätningslister

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	13	92 62 940			20	Clip	Clips	
0500	14	69 56 783			2	Seal	Tätning	5
0510	15	92 77 237			2	Spacer	Mellanlägg	5
0520	16	92 77 690			2	Sealing strip	Tätningslist	4
0530	17	92 79 548			2	Sealing strip	Tätningslist	4
0540	18	40 10 732		337) LH	1	Seal	Tätning	5
0550	18	40 10 724		337) RH	1	Seal	Tätning	5
0560	18	44 94 993		338)	2	Seal	Tätning	5
0570	20	92 88 127		LENGTH 770MM	X	Tape	Tape	5
0580								
0590	21	90 89 434		5CS, LH	1	Seal	Tätning	5
0600	21	90 89 426		5CS, RH	1	Seal	Tätning	5
0610	22	90 87 289		5CS	14	▪Clip	▪Clips	5
0620								
0630	23			See page 8A-031, 4-D08	1	Seal	Tätning	

337. Ch. -R1021145
338. Ch. R1021146-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX


Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

Bumpers

4-G04 Bumper, front 4D -1994

Stötfångare

Stötfångare, främre 4D -1994

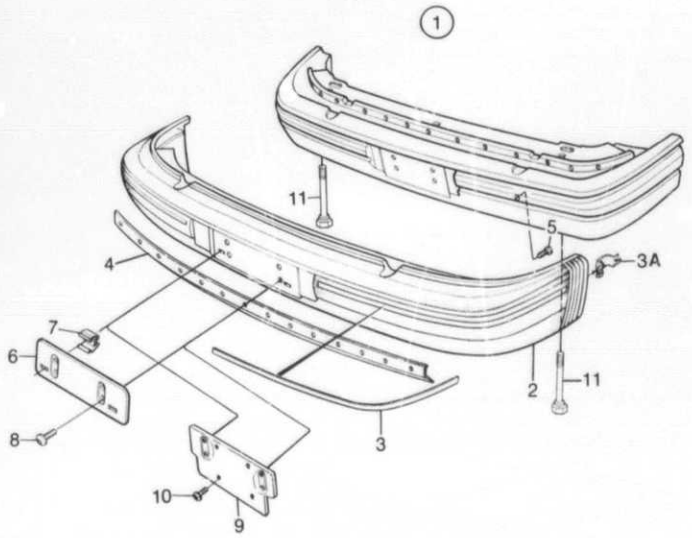

F6521 CAC94

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 54 952			1	Bumper	Stötfångare	3
0020	2	92 77 484			1	.Outer casing	.Hölje	3
0030	3	69 55 033			2	.Decor strip	.Dekorlist	3
0040	3A	69 59 142			2	.Spring	.Fjäder	4
0050	4	69 55 009			1	.Attaching rail	.Fästskena	6
0080	5	44 46 290			24	.Screw	.Skruv	5
0090	6	82 58 428			1	Bracket	Hållare	3
0100	7	79 70 403			1	.Cage nut	.Korgmutter	5
0110	8	80 59 578			4	Screw	Skruv	5
0120	9	69 21 142		US, JP	1	Bracket	Hållare	3
0130	10	79 77 390		US, JP	4	Screw	Skruv	5
0140	11	73 99 884			2	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX


Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

Bumpers

4 –G06 Bumper, front 5CS; 4D 1995-1997

Stötfångare

Stötfångare, främre 5CS; 4D 1995-1997

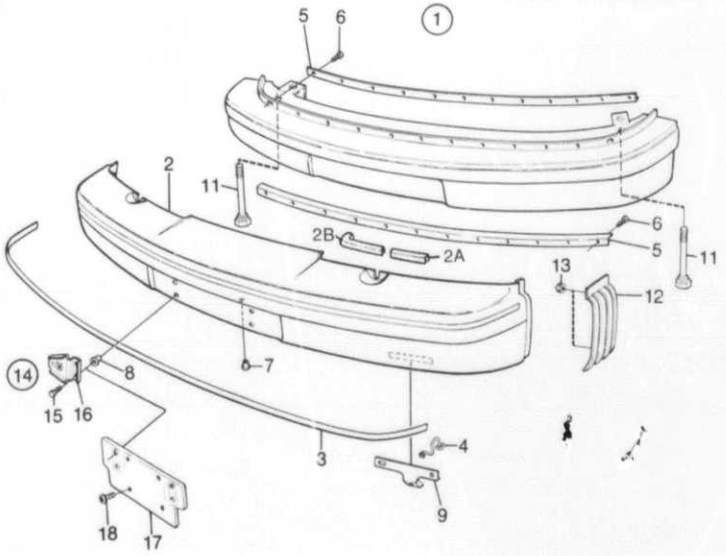

F8613 CAC94

1260	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010	1	90 81 217		70)	1	Bumper	Stötfångare	3
0020	1	43 20 461		109)	1	Bumper	Stötfångare	3
0030	1	44 84 689		109,478) 5CS AERO	1	Bumper	Stötfångare	
0040	2	44 46 266		70)	1	.Outer casing	.Hölje	3
0050	2	44 35 327		109)	1	.Outer casing	.Hölje	3
0060	2			478) AERO	1	.Outer casing	.Hölje	
0070				See page 8A-077, 4-F06				
0080	2A	43 80 036			2	.Seal	.Tätning	5
0090	2B	40 96 756		LH	1	.Seal	.Tätning	5
0100	2B	40 96 749		RH	1	.Seal	.Tätning	5
0110	3	40 89 736			1	.Decor strip	.Dekorlist	3
0120	4	69 91 954		LH	1	.Beam spring	.Böjfjäder	
0130	4	69 91 871		RH	1	.Beam spring	.Böjfjäder	
0140	5	90 81 282			2	.Attaching rail	.Fästskena	6
0150	6	44 46 290			24	.Screw	.Skruv	5
0160	7	92 88 846			5	.Nut	.Mutter	5
0170	8	90 87 040			4	.Nut	.Mutter	5
0180	9	40 88 118		LH	1	.Bracket	.Konsol	5
0190	9	40 88 100		RH	1	.Bracket	.Konsol	5
0200	10			478) AERO		Outer casing	Hölje	
0210				See page 8A-077, 4-F06				
0220								
0230	11	73 99 884			2	Screw	Skruv	5
0240	12	40 93 522		LH	1	Retainer	Hållare	2
0250	12	40 93 514		RH	1	Retainer	Hållare	2
0260	13	79 77 929			6	Nut	Mutter	5
0270	14	82 84 346			1	Retainer kit	Hållarsats	3
0280	15	80 59 578			4	.Screw	.Skruv	5
0290	16	90 81 316		1)	2	.Retainer	.Hållare	3
0300	17	69 21 142		US, JP	1	Bracket	Hållare	3
0310	18	79 77 390		US, JP	4	Screw	Skruv	5

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
109. Paintable design Lackeringsbart utförande
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-G08

Bumper, rear
4D, -1997

Stötfångare, bakre
4D, -1997

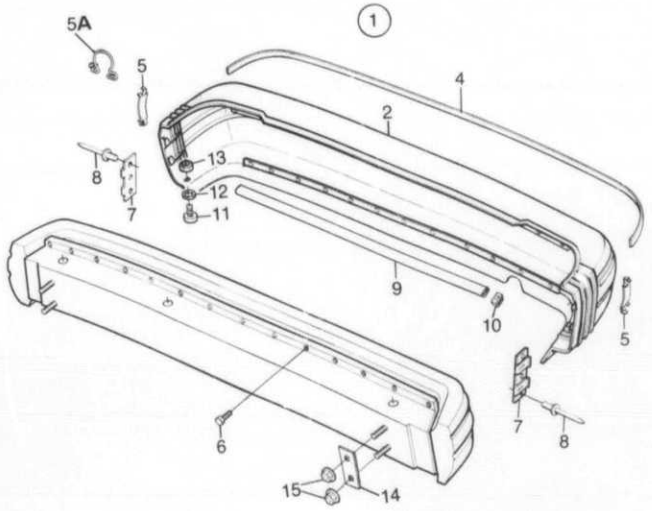

F6523 CAC94

1350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 93 969		-1994	1	Bumper	Stötfångare	4
0020	1	43 43 802		70) 1995-	1	Bumper	Stötfångare	4
0030	1	44 47 330		109) 1995-	1	Bumper	Stötfångare	4
0040								
0050	2	40 93 977		-1994	1	.Outer casing	.Hölje	3
0060	2	44 47 868		70) 1995-	1	.Outer casing	.Hölje	3
0070	2	44 47 447		109) 1995-	1	.Outer casing	.Hölje	3
0080								
0090	4	69 73 945		-1994	1	.Decor strip	.Dekorlist	3
0100	4	44 46 258		1995-	1	.Decor strip	.Dekorlist	3
0110	5	69 59 142		-1994	2	.Spring	.Fjäder	4
0120	5A	69 91 954		1995-, LH	2	.Beam spring	.Böjfjäder	
0130	5A	69 91 871		1995-, RH	2	.Beam spring	.Böjfjäder	
0140	6	44 46 290			22	.Screw	.Skruv	5
0150								
0160	7	43 40 634		LH	1	Bracket	Hållare	5
0170	7	43 40 626		RH	1	Bracket	Hållare	5
0180	8	79 72 516			4	Rivet	Nit	5
0190	9	40 10 625			1	Strip	List	5
0200	10	40 13 256			7	Clip	Clips	5
0210	11	79 77 465		-1994	2	Screw	Skruv	5
0220	11	79 22 370		1995-	2	Screw	Skruv	5
0230	12	70 88 073		1995-	2	Washer	Bricka	5
0240	13	*40 05 237*		-1994 NLS – USE 4008504, 7982325	2	Nut	Mutter	5
0240								
0250	13	79 33 682		1995-	2	Spring nut	Fjädermutter	3
0260	14	69 92 325			4	Seal	Tätning	5
0270	15	79 67 979			4	Nut	Mutter	5


70. Grey Grå
109. Paintable design Lackeringsbart utförande

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

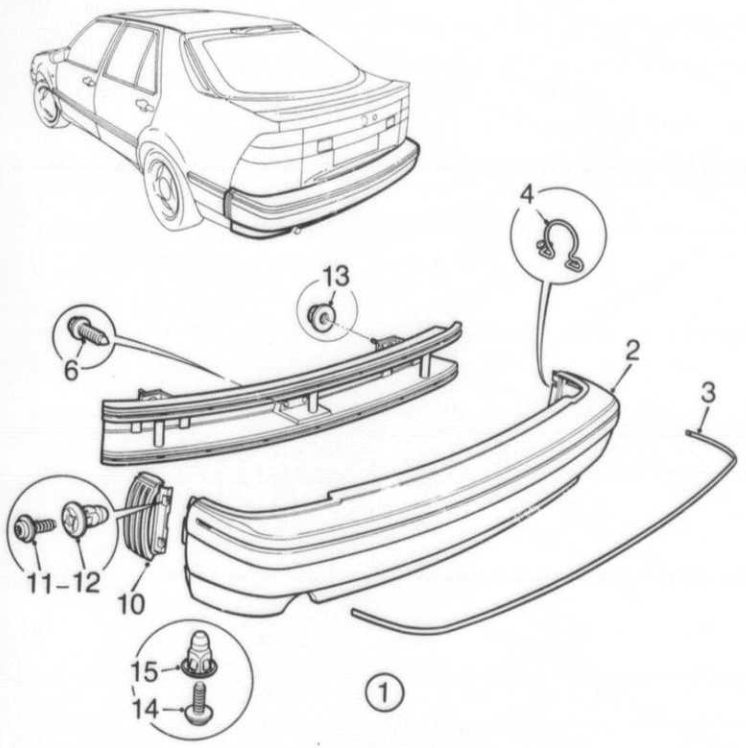

F8614 CAC94

Bumpers

4–G10 *Bumper, rear 5CS*

Stötfångare

Stötfångare, bakre 5CS

1360	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	90 82 231		70)	1	Bumper	Stötfångare	4
0020	1	43 20 479		109)	1	Bumper	Stötfångare	4
0030	1	44 84 713		109,478) AERO	1	Bumper	Stötfångare	
0040								
0050	2	90 82 272		70)	1	.Outer casing	.Hölje	3
0060	2	43 20 529		109)	1	.Outer casing	.Hölje	3
0070	2			478) AERO	1	.Outer casing	.Hölje	
0080				See page 8A-077, 4-F06				
0090	3	40 89 744			1	.Decor strip	.Dekorlist	3
0100	4	69 91 954		LH	1	.Beam spring	.Böjfjäder	
0110	4	69 91 871		RH	1	.Beam spring	.Böjfjäder	
0120	6	44 46 290			22	.Screw	.Skruv	5
0130								
0140	10	40 93 373		LH	1	Retainer	Hållare	2
0150	10	40 93 365		RH	1	Retainer	Hållare	2
0160	11	*79 72 953*		NLS – USE 7922370, 8029944	4	Screw	Skruv	5
0160								
0170	12	69 11 804			4	Bushing	Bussning	4
0180	13	79 67 979			4	Nut	Mutter	5
0190	14	*79 72 953*		NLS – USE 7922370, 8029944	2	Screw	Skruv	5
0190								
0200	15	69 11 804			2	Bushing	Bussning	4

70. Grey Grå
109. Paintable design Lackeringsbart utförande
478. Applies also to the 50th anniversary "Jubilee" car. Gäller även Jubileumsbil, 50 år.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-G12

Bumpers and touch-up paint
1-can

Stötfångare och bättringsfärg
1-komponent

1725	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 168		BODY COLOUR 198	X	Touch-up paint Embassy blue	Bättringsfärg Ambassadblå	3
0040	1/4L	96 98 176		BODY COLOUR 198	X	Touch-up paint Embassy blue	Bättringsfärg Ambassadblå	3
0060	1L	82 85 371		BODY COLOUR 240	X	Touch-up paint Imola red	Bättringsfärg Imolaröd	3
0080	1/4L	82 85 389		BODY COLOUR 240	X	Touch-up paint Imola red	Bättringsfärg Imolaröd	3
0100	1L	84 87 266		BODY COLOUR 153	X	Touch-up paint Cirrus white	Bättringsfärg Cirrusvit	3
0120	1/4L	84 87 274		BODY COLOUR 153	X	Touch-up paint Cirrus white	Bättringsfärg Cirrusvit	3
0140	1L	78 20 228		BODY COLOUR 170	X	Touch-up paint Black	Bättringsfärg Svart	3
0160	1/4L	78 20 244		BODY COLOUR 170	X	Touch-up paint Black	Bättringsfärg Svart	3
0180	1L	96 98 341			X	Touch-up paint Charcoal grey 119 for sill	Bättringsfärg Antracitgrå 119 för tröskel	3
0210	1/4L	96 98 358			X	Touch-up paint Charcoal grey 119 for sill	Bättringsfärg Antracitgrå 119 för tröskel	3
0240	1L	84 87 753			X	Thinner	Förtunning	5
0250	5L	84 87 761			X	Thinner	Förtunning	5
0260	1L	*88 16 415*		169), 20-80° NLS	X	Hardener	Härdare	5
0280						PRIMER	GRUNDFÄRG	
0290	1L	74 97 019			X	Primer 1K-Füllprimer	Grundfärg 1K-Füllprimer	6
0310	1L	82 85 231			X	Thinner 2K-Expressverdünnung	Förtunning 2K-Expressverdünnung	5
0340						FILLER	SPACKEL	
0350	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0360		82 85 496			X	Hardener	Härdare	5
0370	1L	84 87 621			X	Spray filler	Sprutspackel	6

169. For quick through-drying För snabb genomtorkning

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-G14

Bumpers and touch-up paint
2-can

Stötfångare och bättringsfärg
2-komponent

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING PAINT	TÄCKFÄRG	
0020	1L	96 98 184		BODY COLOUR 198	X	Touch-up paint	Bättringsfärg	3
0030						Embassy blue	Ambassadblå	
0040	1L	82 85 397		BODY COLOUR 240	X	Touch-up paint	Bättringsfärg	3
0050						Imola red	Imolaröd	
0060	1L	84 87 282		BODY COLOUR 153	X	Touch-up paint	Bättringsfärg	3
0070						Cirrus white	Cirrusvit	
0080	1L	97 46 264		BODY COLOUR 170	X	Touch-up paint	Bättringsfärg	3
0090						Black	Svart	
0100	1L	82 85 231			X	Thinner	Förtunning	5
0110						2K-Expressverdünnung	2K-Expressverdünnung	
0120	1/2L	84 86 300			X	Hardener	Härdare	5
0130						2K-Spezialhärter	2K-Spezialhärter	
0140	1L	84 86 292			X	Hardener	Härdare	5
0150						2K-Spezialhärter	2K-Spezialhärter	
0160								
0170						PRIMER	GRUNDFÄRG	
0180	4L	74 97 001			X	Primer	Grundfärg	6
0190						2K-Toppfüller	2K-Toppfüller	
0200	1/2L	84 86 300			X	Hardener	Härdare	5
0210						2K-Spezialhärter	2K-Spezialhärter	
0220	1L	84 86 292			X	Hardener	Härdare	5
0230						2K-Spezialhärter	2K-Spezialhärter	
0240								
0250						INTERMEDIATE PAINT	MELLANFÄRG	
0260	1L	84 87 712			X	Intermediate paint	Mellanfärg	6
0270						2K-Fillsealer	2K-Fillsealer	
0280						Colourable	Infärgningsbar	
0290	1L	82 85 231			X	Thinner	Förtunning	5
0300						2K-Expressverdünnung	2K-Expressverdünnung	
0310	1/2L	84 86 300			X	Hardener	Härdare	5
0320						2K-Spezialhärter	2K-Spezialhärter	
0330	1L	84 86 292			X	Hardener	Härdare	5
0340						2K-Spezialhärter	2K-Spezialhärter	
0350								
0360						FILLER	SPACKEL	
0370	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0380		82 85 496			X	Hardener	Härdare	5
0390	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4-G16

Bumpers and touch-up paint
Two-coat type

Stötfångare och bättringsfärg
Tvåskiktstyp

1775	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						BASE METALLIC COAT	BASMETALLICFÄRG	
0020	1L	82 84 499		-1995, BODY COLOUR 230	X	Touch-up paint	Bättringsfärg	3
0030						Scarabé green	Scarabégrön	
0040	1L	82 84 887		-1995, BODY COLOUR 235	X	Touch-up paint	Bättringsfärg	3
0050						Eucalyptus green	Eucalyptusgrön	
0060	1L	74 97 423		1996-1997, BODY COLOUR 254	X	Touch-up paint	Bättringsfärg	3
0070						Willow green	Grön	
0080	1L	82 84 507		-1996, BODY COLOUR 229	X	Touch-up paint	Bättringsfärg	3
0090						Le Mans blue	Le Mans-blå	
0100	1L	74 97 415		1996-1997, BODY COLOUR 252	X	Touch-up paint	Bättringsfärg	3
0110						Sky blue	Blå	
0120	1L	74 97 522		1996-, BODY COLOUR 257	X	Touch-up paint	Bättringsfärg	3
0130						Midnight blue	Midnattsblå	
0140	1L	74 97 530		1997-, BODY COLOUR 258	X	Touch-up paint	Bättringsfärg	3
0150						Amethyst violet	Ametistviolett	
0160	1L	82 84 473		-1997, BODY COLOUR 227	X	Touch-up paint	Bättringsfärg	3
0170						Citrin beige	Citrinebeige	
0180	1L	82 84 481		-1994, BODY COLOUR 228	X	Touch-up paint	Bättringsfärg	3
0190						Platana grey	Platanagrå	
0200	1L	82 85 405		-1996, BODY COLOUR 242	X	Touch-up paint	Bättringsfärg	3
0210						Ruby red	Rubinröd	
0220	1L	74 97 514		1997-, BODY COLOUR 256	X	Touch-up paint	Bättringsfärg	3
0230						Cayenne red	Kajennröd	
0240	1L	74 97 126		-1995, BODY COLOUR 241	X	Touch-up paint	Bättringsfärg	3
0250						Aubergine	Aubergine	
0260	1L	74 97 100		1994, BODY COLOUR 248	X	Touch-up paint	Bättringsfärg	3
0270						Black	Svart	
0280	1L	74 97 365		1995-1997, BODY COLOUR 253	X	Touch-up paint	Bättringsfärg	3
0290						Java black	Java svart	
0300	1L	74 97 225		1995-1997 BODY COLOUR 247	X	Touch-up paint	Bättringsfärg	3
0310						Silver	Silver	
0320	1L	• 74 97 795		1998-, BODY COLOUR 268	X	Touch-up paint	Bättringsfärg	
0330						Silver	Silver	
0340	1L	• 74 97 753		1998-, BODY COLOUR 262	X	Touch-up paint	Bättringsfärg	
0350						Golden sand	Guldsand	
0360	1L	• 74 97 761		1998-, BODY COLOUR 263	X	Touch-up paint	Bättringsfärg	
0370						Copper bronze	Kopparbrons	
0380	1L	• 74 97 779		1998-, BODY COLOUR 261	X	Touch-up paint	Bättringsfärg	
0390						Green silver	Silvergrön	
0400	1L	• 74 97 787		1998-, BODY COLOUR 264	X	Touch-up paint	Bättringsfärg	
0410						Cosmic blue	Kosmosblå	
0420	1L	97 46 975			X	Thinner	Förtunning	5
0430								
0440						PRIMER	GRUNDFÄRG	
0450	1L	74 97 019			X	Primer	Grundfärg	6
0460						1K-Füllprimer	1K-Füllprimer	
0470	1L	82 85 231			X	Thinner	Förtunning	5
0480						2K-Expressverdünnung	2K-Expressverdünnung	
0490								
0500						CLEAR ENAMEL	KLARLACK	
0510	1L	84 87 225			X	Clear enamel	Klarlack	3
0520	1L	82 85 231			X	Thinner	Förtunning	5
0530						2K-Expressverdünnung	2K-Expressverdünnung	
0540	1/2L	84 86 300			X	Hardener	Härdare	5
0550						2K-Spezialhärter	2K-Spezialhärter	
0560	1L	84 86 292			X	Hardener	Härdare	5
0570						2K-Spezialhärter	2K-Spezialhärter	
0580								
0590						FILLER	SPACKEL	
0600	2KG	82 85 488			X	Polyester filler	Polyesterspackel	6
0610		82 85 496			X	Hardener	Härdare	5
0620	1L	84 87 621			X	Spray filler	Sprutspackel	6

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

4–G18 *Other paint* / *Övrig färg*

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1800								
0010	1/4L	97 46 835		170)	X	Touch-up paint	Bättringsfärg	3
0020						Charcoal grey 176	Antracitgrå 176	
0030	1L	97 46 975			X	Thinner	Förtunning	5
0040								
0050	1/4L	97 46 850		170)	X	Touch-up paint	Bättringsfärg	3
0060						Black 175	Svart 175	
0070	1L	82 85 231			X	Thinner	Förtunning	5
0080						2K-Expressverdünnung	2K-Expressverdünnung	
0090								
0100						PRIMER	GRUNDFÄRG	
0110	1L	82 85 249		170)	X	Primer	Grundfärg	6
0120						1K-Plastic primer	1K-Plastic primer	
0130						ready to spray	sprutfärdig	
0140	1L	82 85 256		170)	X	Primer	Grundfärg	6
0150						1K-Plastic füller	1K-Plastic füller	
0160	1L	97 46 967			X	Thinner	Förtunning	5
0170								
0180						PLASTICIZER	MJUKGÖRARE	
0190	1L	97 46 314		170)	X	Plasticizer	Mjukgörare	6
0200						2K-Elastic adetiv	2K-Elastic adetiv	
0210								
0220	5L	97 46 884		171)	X	Cleaning agent	Rengöringsmedel	6
0230	1KG	82 85 264		171)	X	Filler	Spackel	6
0240	2L	97 46 892		171)	X	Primer	Grundfärg	6
0250	1L	97 46 900		171)	X	Hardener	Härdare	6
0260	1L	97 46 926		171)	X	Intermediate paint	Mellanfärg	6
0270	1L	97 46 934		171)	X	Hardener	Härdare	5
0280	1L	97 46 959		171)	X	Plasticizer	Mjukgörare	6
0290	1L	97 46 652		171)	X	Thinner	Förtunning	5
0300								
0310	5L	84 87 779			X	Cleaning agent	Rengöringsmedel	6
0320						silicon remover	silikonborttagare	
0330	1KG	*79 94 510*		NLS	X	Underseal	Underredsmassa	6
0340	1KG	79 94 882		172)	X	Stone chip interpaint	Stenskottsmellanfärg	6
0350		*79 94 890*		172) NLS	X	Hardener	Härdare	5
0360	5L	*84 87 787*		173) NLS	X	Thinner	Förtunning	6


170. For plastic För plast
171. For rear spoiler (soft, rubber) För bakre spoiler (mjuk, gummi)
172. 2K, IR-lamp with minimum 100°C 2K, IR-lampa med minst 100°C
173. For cleaning airguns För rengöring av sprutpistoler


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX


Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D16
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

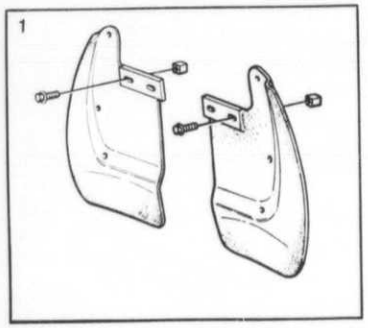


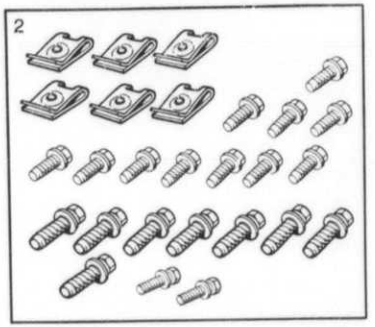

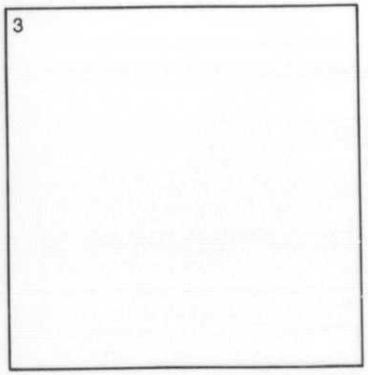

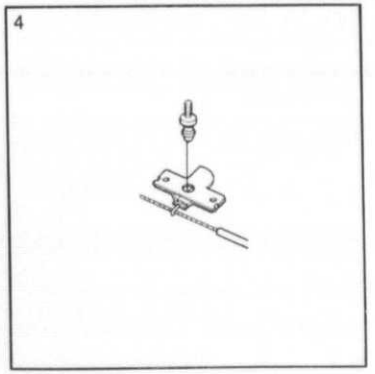

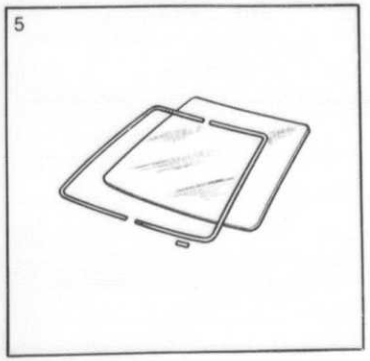

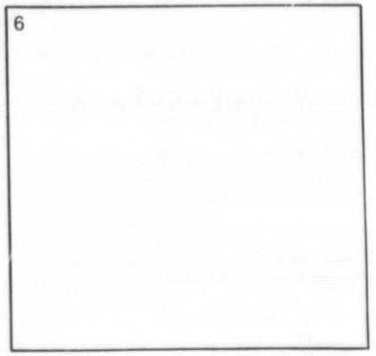

F6525 CAC94

Complete sets
4 –G20
Car body, external

Satser
Kaross, utvändig

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 84 341		3)	X	Baffle	Stänkskydd	3
0020		40 99 776		LH	1	.Baffle	.Stänkskydd	3
0030		40 99 768		RH	1	.Baffle	.Stänkskydd	3
0040		79 82 325			6	.Screw	.Skruv	5
0050		79 82 655			2	.Press nut	.Pressmutter	5
0060		82 73 468			2	.Washer	.Bricka	5
0070		90 87 040			4	.Nut	.Mutter	5
0080								
0090	2	92 67 956		2)	X	Mounting kit spoiler	Monteringssats spoiler	3
0100								
0110		79 73 134			8	.Screw	.Skruv	5
0120		79 77 523			6	.Clip	.Clips	5
0130		79 76 988			2	.Screw	.Skruv	5
0140		79 76 996			11	.Screw	.Skruv	5
0150								
0160	4	96 98 523			X	Bonnet lock kit	Huvlåssats	3
0170		69 73 689			1	.Bonnet lock	.Huvlås	3
0180		69 73 788			1	.Lock pin	.Låstapp	4
0190								
0200	4	96 98 515		RHD	X	Bonnet lock kit	Huvlåssats	3
0210		69 73 697		RHD	1	.Bonnet lock	.Huvlås	3
0220		69 73 788			1	.Lock pin	.Låstapp	4
0230								
0240	5	74 97 092		295) WITH CUT FOR CH. NUMBER	X	Windscreen	Vindruta	3
0250								
0260		*43 06 262*		1) NLS	1	.Windscreen	.Vindruta	3
0270		74 97 084			1	.Spacer	.Distans	5
0280		40 13 603			1	..Spacer	..Distans	3
0290		69 91 244			1	..Spacer	..Distans	3
0300		92 78 318		LH	1	.Strip holder	.Hållarlist	3
0310		92 78 300		RH	1	.Strip holder	.Hållarlist	3


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre
295. Heat-absorbing glass Värmeabsorberande glas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

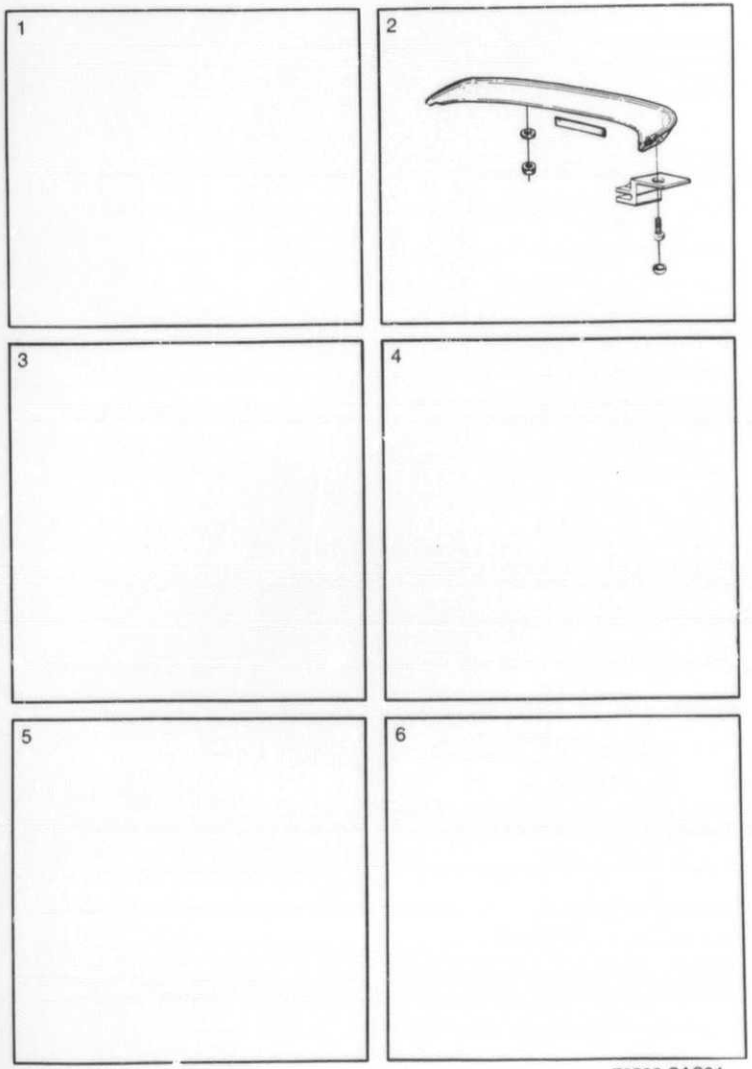

F6526 CAC94

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2600								
0160	2	82 85 314		3) 5CS	X	Spoiler	Spoiler	5
0170		40 89 389			5	.Washer	.Bricka	5
0180		43 44 826		1)	1	.Spoiler	.Spoiler	3
0190		79 77 929			5	.Nut	.Mutter	5


1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre


MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8A GROUP INDEX


Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

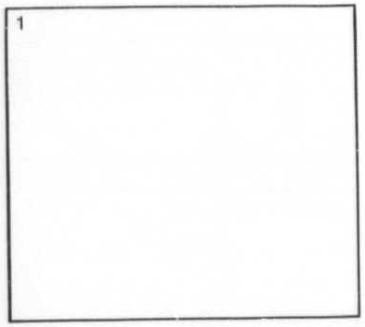


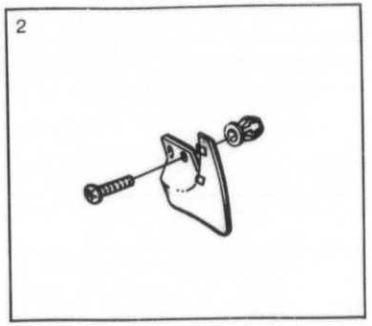

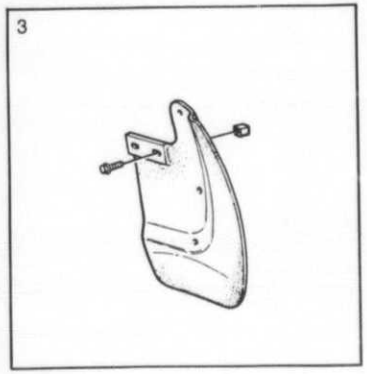

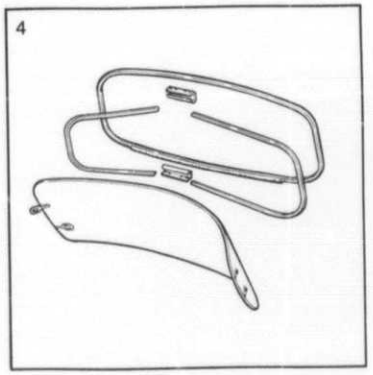

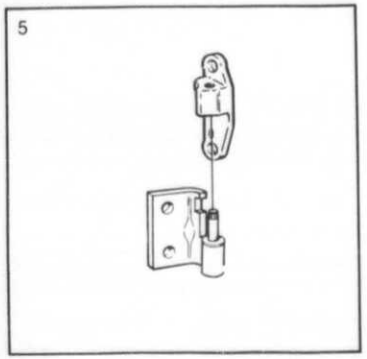

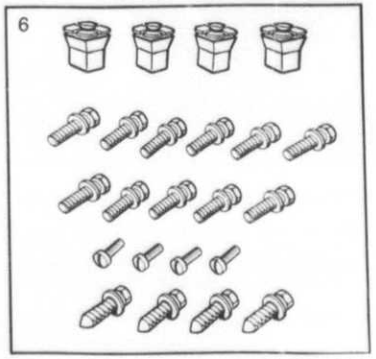

F6527 CAC94

Complete sets

4-G24

Car body, external

Satser

Kaross, utvändig

2650 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010 2	82 84 721		2) LH AND RH	X	Baffle	Stänkskydd	3
0020	79 82 325			4	.Screw	.Skruv	5
0030	40 08 959		LH	1	.Baffle	.Stänkskydd	4
0040	40 08 942		RH	1	.Baffle	.Stänkskydd	4
0050	90 87 040			4	.Nut	.Mutter	5
0060							
0070 2	82 84 747		2) LH	X	Baffle	Stänkskydd	3
0080	79 82 325			2	.Screw	.Skruv	5
0090	90 87 040			2	.Nut	.Mutter	5
0100	40 08 959			1	.Baffle	.Stänkskydd	4
0110							
0120 2	82 84 739		2) RH	X	Baffle	Stänkskydd	3
0130	79 82 325			2	.Screw	.Skruv	5
0140	90 87 040			2	.Nut	.Mutter	5
0150	40 08 942			1	.Baffle	.Stänkskydd	4
0160							
0170 3	82 84 663		3) LH	X	Baffle	Stänkskydd	3
0180	40 99 776			1	.Baffle	.Stänkskydd	3
0190	79 82 325			4	.Screw	.Skruv	5
0200							
0210 3	82 84 655		3) RH	X	Baffle	Stänkskydd	3
0220	40 99 768			1	.Baffle	.Stänkskydd	3
0230	79 82 325			4	.Screw	.Skruv	5
0240							
0250 4	74 97 118		295) -1997, 4D	X	Rear wi[illegible]	Bakruta	4
0260	*43 06 486*		1) NLS – USE 4306494	1	.Rear window	.Bakruta	4
0270	69 48 871			1	.Cover moulding	.Täcklist	3
0280	69 62 807		RH	1	.Strip holder	.Hållarlist	3
0290	69 62 815		LH	1	.Strip holder	.Hållarlist	3
0300	92 78 334			2	.Connector	.Skarvstycke	3
0310	69 91 244			4	.Spacer	.Distans	3
0320	69 92 028			3	.Spacer	.Distans	3
0330							
0340 5	82 84 085		LH	X	Hinge kit	Gångjärnssats	5
0350	69 60 793		FIXED, LH	1	.Hinge	.Gångjärn	4
0360	*69 61 713*		LH NLS – USE 4306809	1	.Hinge	.Gångjärn	5
0370							
0380 5	82 84 077		RH	X	Hinge kit	Gångjärnssats	5
0390	69 60 785		FIXED, RH	1	.Hinge	.Gångjärn	4
0400	*69 61 700*		RH NLS – USE 4306791	1	.Hinge	.Gångjärn	5
0410							
0420 6	40 09 502			X	Mounting kit	Monteringssats	3
0430					air shield	luftskärm	
0440	79 82 325			14	.Screw	.Skruv	5
0450	79 82 655			4	.Press nut	.Pressmutter	5

1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre


295. Heat-absorbing glass Värmeabsorberande glas

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

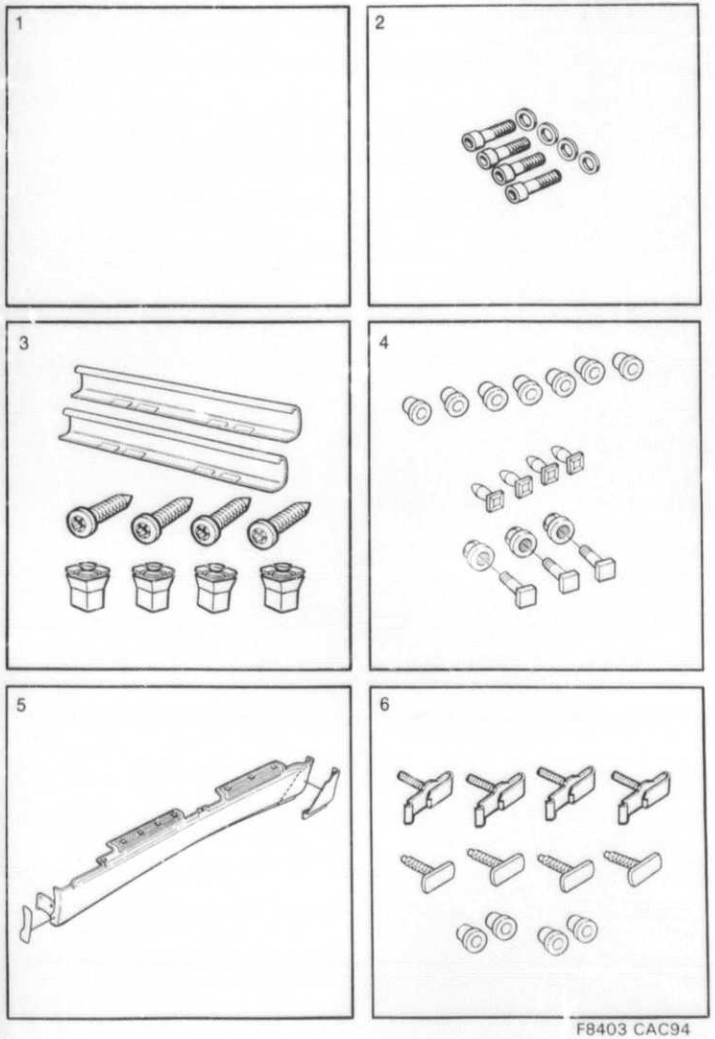

F8403 CAC94

Complete sets
4-H02
Car body, external

Satser
Kaross, utvändig

2700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	92 40 086			X	Mounting kit	Monteringssats	5
0020						registration plate	registreringsskylt	
0030		73 98 506		1)	4	.Washer	.Bricka	5
0040		79 77 390		1)	4	.Screw	.Skruv	5
0050								
0060	3	82 84 531			X	Mounting kit	Monteringssats	3
0070						windscreen	vindruta	
0080		42 50 320			1	.Decor strip	.Dekorlist	3
0090		79 70 601			4	.Screw	.Skruv	5
0100		79 75 261			4	.Nut	.Mutter	5
0110		92 78 334			2	.Connector	.Skarvstycke	3
0120								
0130	4	74 96 029		2)	X	Mounting kit	Monteringssats	4
0140						Wheel house moulding	Hjulhusdekor	
0150		73 73 269			8	.Bushing	.Bussning	5
0160		73 99 470			8	.Screw	.Skruv	5
0170		73 99 488			8	.Nut	.Mutter	5
0180								
0190	4	74 96 037		3)	X	Mounting kit	Monteringssats	4
0200						Wheel house moulding	Hjulhusdekor	
0210		73 73 269			7	.Bushing	.Bussning	5
0220		73 99 470			3	.Screw	.Skruv	5
0230		73 99 488			3	.Nut	.Mutter	5
0240		92 53 329			4	.Clip	.Clips	5
0250								
0260	5	82 85 439		5CS AERO, LH	X	Sill cover	Tröskelbreddare	2
0270		44 47 124			1	.Protective foil	.Skyddsfolie	
0280		86 62 843			1	.Protective foil	.Skyddsfolie	
0290		69 59 464			2	.Screw	.Skruv	5
0300		44 35 210		1)	1	.Sill cover	.Tröskelbreddare	2
0310								
0320	5	82 85 421		5CS AERO, RH	X	Sill cover	Tröskelbreddare	2
0330		44 47 116			1	.Protective foil	.Skyddsfolie	
0340		86 62 835			1	.Protective foil	.Skyddsfolie	
0350		69 59 464			2	.Screw	.Skruv	5
0360		44 35 202		1)	1	.Sill cover	.Tröskelbreddare	2
0370								
0380	6	74 97 589		5CS AERO	X	Mounting kit	Monteringssats	
0390		40 87 151			4	.Screw	.Skruv	5
0400		40 90 197			6	.Clip	.Clips	5
0410		44 84 796			2	.Sealing strip	.Tätningslist	5
0420		73 73 269			6	.Bushing	.Bussning	5


1. Not as separate spare part. Ej som separat reservdel.
2. Front Främre
3. Rear Bakre

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

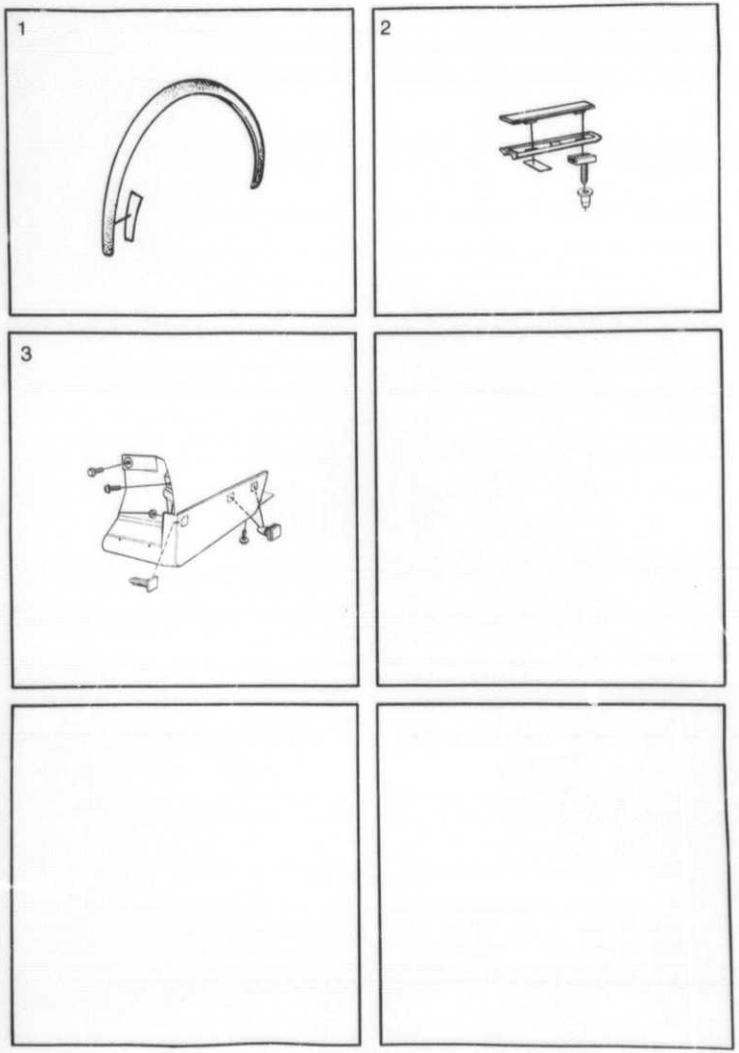

F6529 CAC94

Complete sets

4 –H04

Car body, external

Satser

Kaross, utvändig

2750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	82 85 447		3) 5CS AERO, LH	X	Mudguard widener	Skärmbreddare	2
0020		86 63 270			1	.Protective foil	.Skyddsfolie	
0030		44 35 152		1)	1	.Mudguard widener	.Skärmbreddare	2
0040								
0050	1	82 85 454		3) 5CS AERO, RH	X	Mudguard widener	Skärmbreddare	2
0060		86 63 262			1	.Protective foil	.Skyddsfolie	
0070		44 35 145		1)	1	.Mudguard widener	.Skärmbreddare	2
0080								
0090	2	82 84 374		181) LH	X	Moulding kit	Dekorlistsats	4
0100		69 93 513		LH	1	.Decor strip	.Dekorlist	5
0110		40 96 616			3	.Bushing	.Bussning	5
0120		40 97 457		LH	1	.Decor	.Dekor	5
0130		90 87 560			3	.Clip	.Clips	5
0140								
0150	2	82 84 382		181) RH	X	Moulding kit	Dekorlistsats	4
0160		69 93 505		RH	1	.Decor strip	.Dekorlist	5
0170		40 96 616			3	.Bushing	.Bussning	5
0180		40 97 440		RH	1	.Decor	.Dekor	5
0190		90 87 560			3	.Clip	.Clips	5
0200								
0210	3	82 84 556		-1997, LH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0220		40 05 229			4	.Clip	.Clips	5
0230		*40 05 237*		NLS – USE 4008504, 7982325	2	.Nut	.Mutter	5
0240		40 06 136			1	.Stone guard	.Stenskottsskydd	5
0250		69 59 464			2	.Screw	.Skruv	5
0260		73 73 269			4	.Bushing	.Bussning	5
0270		73 99 488			2	.Nut	.Mutter	5
0280		*79 72 953*		NLS – USE 7922370, 8029944	2	.Screw	.Skruv	5
0290		79 77 465			4	.Screw	.Skruv	5
0300		92 78 151			2	.Bushing	.Bussning	5
0310								
0320	3	82 84 549		-1997, RH, 4D	X	Stone guard kit	Stenskottsskyddsats	5
0330		40 05 229			4	.Clip	.Clips	5
0340		*40 05 237*		NLS – USE 4008504, 7982325	2	.Nut	.Mutter	5
0350		40 06 126			1	.Stone guard	.Stenskottsskydd	5
0360		69 59 464			2	.Screw	.Skruv	5
0370		73 73 269			4	.Bushing	.Bussning	5
0380		73 99 488			2	.Nut	.Mutter	5
0390		*79 72 953*		NLS – USE 7922370, 8029944	2	.Screw	.Skruv	5
0400		79 77 465			4	.Screw	.Skruv	5
0410		92 78 151			2	.Bushing	.Bussning	5

1. Not as separate spare part. Ej som separat reservdel.
3. Rear Bakre
181. Body 1991–, 1187186–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8A GROUP INDEX

Car body	4-C06
Hood, front, fenders	4-D08
Doors, trunk lid	4-D18
External details, glass, sealings	4-E12
Bumpers and touch-up paint	4-G04
Complete sets	4-G20

8B

Body, internal
Kaross, invändig
Carrocería, inferior

5-A02

TABLE OF CONTENTS

Instrument panel		
Instrument panel, upper section	8B : 5	5-A06
Instrument panel, panel	8B : 9	5-A10
Instrument panel, instrument frame	8B : 13	5-A14
Instrument panel, glove compartment	8B : 15	5-A16
Instrument panel, centre console	8B : 19	5-A20
Upholstery		
Insulation	8B : 23	5-A24
Sound insulation	8B : 25	5-B02
Covers "Horizon pattern" 1994-	8B : 29	5-B06
Covers "Contour design" 1994-	8B : 33	5-B10
Covers "Sports design" 1994-	8B : 39	5-B16
Covers "Horizon pattern" 1995-	8B : 41	5-B18
Covers "Contour design" 1995-	8B : 43	5-B20
Covers "Sports design" 1995-	8B : 45	5-B22
Covers, textile 1996-	8B : 47	5-B24
Covers, leather, "Contour design" 1996-	8B : 49	5-C02
Covers, leather, "Sports design" 1996-	8B : 51	5-C04
Covers, textile 1997-	8B : 53	5-C06
Covers, leather, "Contour design" 1997-	8B : 55	5-C08
Covers, leather, "Sports design" 1997-	8B : 59	5-C12
Covers, textile 1998-	8B : 61	5-C14
Covers, leather, "Contour design" 1998-	8B : 63	5-C16
Door trim 1994-	8B : 65	5-C18
Door trim 1995-	8B : 77	5-D06
Door trim 1996-	8B : 89	5-D18
Door trim 1997-	8B : 97	5-E02
Door trim 1998-	8B : 105	5-E10
Upholstery luggage compartment	8B : 113	5-E18
Carpets 1994-	8B : 115	5-E20
Carpets 1995-	8B : 119	5-E24
Carpets 1996-	8B : 123	5-F04
Carpets 1997-	8B : 125	5-F06
Carpets 1998-	8B : 129	5-F10
Headlining, pillar lining	8B : 133	5-F14
Other interior equipment		
Front seats Part 1	8B : 135	5-F16
Front seats Part 2	8B : 139	5-F20
Front seats Part 3	8B : 143	5-F24
Front seats Part 1, electrically adjustable	8B : 145	5-G02
Front seats Part 2, electrically adjustable	8B : 149	5-G06
Front seats Part 3, electrically adjustable	8B : 153	5-G10
Rear seat, seat cushion, 353)	8B : 155	5-G12
Rear seat, back cushion, 353)	8B : 157	5-G14
Rear seat, seat cushion, trim colour H35, K35, L35, 325)	8B : 161	5-G18
Rear seat, back cushion, trim colour H35, K35, L35, 325)	8B : 163	5-G20
Rear seat, seat cushion, 354)	8B : 167	5-G24
Rear seat, back cushion, 354)	8B : 169	5-H02
Rear seat, fixed, seat cushion, 353)	8B : 173	5-H06
Rear seat, fixed, back cushion, 353)	8B : 175	5-H08
Rear seat, fixed, seat cushion, 354), -1997	8B : 177	5-H10
Rear seat, fixed, back cushion, 354), -1997	8B : 179	5-H12
Equipment luggage compartment	8B : 181	5-H14
Scuff plate protector	8B : 183	5-H16
Other interior equipment	8B : 185	5-H18
Shelf	8B : 189	5-H22
Safety belt, front seat	8B : 191	5-H24
Safety belt, rear seat	8B : 193	5-I02
Complete sets		
Car body, internal	8B : 195	5-I04

325. Ch. R1025685-
353. Ch. -R1025684; cars with trim colour code K64, J93, K93 continues with this version.
354. Ch. R1025685-; not for cars with trim colour code K64, J93, K93.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -A03

INNEHÅLLSFÖRTECKNING

Instrumentpanel		
Instrumentpanel, överdel	8B : 5	5-A06
Instrumentpanel, panel	8B : 9	5-A10
Instrumentpanel, instrumentram	8B : 13	5-A14
Instrumentpanel, handskfack	8B : 15	5-A16
Instrumentpanel, mittkonsol	8B : 19	5-A20
Klädsel		
Isolering	8B : 23	5-A24
Ljudisolering	8B : 25	5-B02
Klädselpåsar "Horisont mönster " 1994	8B : 29	5-B06
Klädselpåsar "Contour design" 1994	8B : 33	5-B10
Klädselpåsar "Sports design" 1994	8B : 39	5-B16
Klädselpåsar "Horisont mönster " 1995	8B : 41	5-B18
Klädselpåsar "Contour design" 1995	8B : 43	5-B20
Klädselpåsar "Sports design" 1995	8B : 45	5-B22
Klädselpåsar, textil 1996	8B : 47	5-B24
Klädselpåsar, läder "Contour design" 1996	8B : 49	5-C02
Klädselpåsar, läder "Sports design" 1996	8B : 51	5-C04
Klädselpåsar, textil 1997	8B : 53	5-C06
Klädselpåsar, läder "Contour design" 1997	8B : 55	5-C08
Klädselpåsar, läder "Sports design" 1997	8B : 59	5-C12
Klädselpåsar, textil 1998-	8B : 61	5-C14
Klädselpåsar, läder "Contour design" 1998-	8B : 63	5-C16
Dörrklädsel etc. 1994	8B : 65	5-C18
Dörrklädsel etc. 1995	8B : 77	5-D06
Dörrklädsel etc. 1996	8B : 89	5-D18
Dörrklädsel etc. 1997	8B : 97	5-E02
Dörrklädsel etc. 1998-	8B : 105	5-E10
Klädsel bagagerum	8B : 113	5-E18
Mattor etc. 1994	8B : 115	5-E20
Mattor etc. 1995	8B : 119	5-E24
Mattor etc. 1996	8B : 123	5-F04
Mattor etc. 1997	8B : 125	5-F06
Mattor etc. 1998	8B : 129	5-F10
Takklädsel, stolpklädsel. etc	8B : 133	5-F14
Övrig invändig utrustning		
Stolar Del 1	8B : 135	5-F16
Stolar Del 2	8B : 139	5-F20
Stolar Del 3	8B : 143	5-F24
Stolar Del 1, elmanövrerade	8B : 145	5-G02
Stolar Del 2, elmanövrerade	8B : 149	5-G06
Stolar Del 3, elmanövrerade	8B : 153	5-G10
Baksäte, sittdyna, 353)	8B : 155	5-G12
Baksäte, ryggdyna, 353)	8B : 157	5-G14
Baksäte, sittdyna, klädselkod H35, K35, L35, 325)	8B : 161	5-G18
Baksäte, ryggdyna, klädselkod H35, K35, L35, 325)	8B : 163	5-G20
Baksäte, sittdyna, 354)	8B : 167	5-G24
Baksäte, ryggdyna, 354)	8B : 169	5-H02
Baksäte, fast, sittdyna, 353)	8B : 173	5-H06
Baksäte, fast, ryggdyna, 353)	8B : 175	5-H08
Baksäte, fast, sittdyna, 354), -1997	8B : 177	5-H10
Baksäte, fast, ryggdyna, 354), -1997	8B : 179	5-H12
Utrustning bagagerum	8B : 181	5-H14
Tröskelskydd	8B : 183	5-H16
Övrig invändig utrustning	8B : 185	5-H18
Hatthylla	8B : 189	5-H22
Bilbälte, framsäte	8B : 191	5-H24
Bilbälte, baksäte	8B : 193	5-I02
Satser:		
Kaross, invändig	8B : 195	5-I04

325. Ch. R1025685-
353. Ch. -R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.
354. Ch. R1025685-; ej för bilar med klädselkod K64, J93, K93.

5 -A04

SUMARIO

Tablero de instrumentos		
Tablero de instrumentos, seccion superior	8B : 5	5-A06
Tablero de instrumentos, panel	8B : 9	5-A10
Tablero de instrumentos, bastidor instrumentos	8B : 13	5-A14
Tablero de instrumentos, guantera	8B : 15	5-A16
Tablero de instrumentos, soporte central	8B : 19	5-A20
Tapiceria		
Aislamiento	8B : 23	5-A24
Aislation de sonido	8B : 25	5-B02
Fundas de asiento, muestra en Horizon" 1994	8B : 29	5-B06
Fundas de asiento, diseno "Contour" 1994	8B : 33	5-B10
Fundas de asiento, diseno "Sports" 1994	8B : 39	5-B16
Fundas de asiento, muestra en Horizon" 1995	8B : 41	5-B18
Fundas de asiento, diseno "Contour" 1995	8B : 43	5-B20
Fundas de asiento, diseno "Sports" 1995	8B : 45	5-B22
Fundas de asiento, textil 1996	8B : 47	5-B24
Fundas de asiento, cuero,diseno "Contour" 1996	8B : 49	5-C02
Fundas de asiento, cuero,diseno "Sports" 1996	8B : 51	5-C04
Fundas de asiento, textil 1997	8B : 53	5-C06
Fundas de asiento, cuero,diseno "Contour" 1997	8B : 55	5-C08
Fundas de asiento, cuero,diseno "Sports" 1997	8B : 59	5-C12
Fundas de asiento, textil 1998-	8B : 61	5-C14
Fundas de asiento, cuero,diseno "Contour" 1998-	8B : 63	5-C16
Tapiceria de puerta, etc. 1994	8B : 65	5-C18
Tapiceria de puerta, etc. 1995	8B : 77	5-D06
Tapiceria de puerta, etc. 1996	8B : 89	5-D18
Tapiceria de puerta, etc. 1997	8B : 97	5-E02
Tapiceria de puerta, etc. 1998-	8B : 105	5-E10
Tapiceria compartimento de equipaj es	8B : 113	5-E18
Moquetas etc. 1994	8B : 115	5-E20
Moquetas etc. 1995	8B : 119	5-E24
Moquetas etc. 1996	8B : 123	5-F04
Moquetas etc. 1997	8B : 125	5-F06
Moquetas etc. 1998-	8B : 129	5-F10
Tapiceria del techo, de los montan tes, etc	8B : 133	5-F14
Otro equipo interior		
Asientos Del 1a parte	8B : 135	5-F16
Asientos Del 2a parte	8B : 139	5-F20
Asientos Del 3a parte	8B : 143	5-F24
Asientos Del 1a parte, maniobra electrica	8B : 145	5-G02
Asientos Del 2a parte, maniobra electrica	8B : 149	5-G06
Asientos Del 3a parte, maniobra electrica	8B : 153	5-G10
Asientos Tras, almohadillo del cojin, 353)	8B : 155	5-G12
Asientos Tras, cojin de respaldo, 353)	8B : 157	5-G14
Asientos Tras,almohadillo cojin,color trapiceria, H35, K35, I35, 325)	8B : 161	5-G18
Asientos Tras,cojin respaldo, color trapiceria, H35, K35, L35, 325)	8B : 163	5-G20
Asientos Tras, almohadillo del cojin, 354)	8B : 167	5-G24
Asientos Tras, cojin de respaldo, 354)	8B : 169	5-H02
Asientos Tras, fijo, almohadillo del cojin, 353)	8B : 173	5-H06
Asientos Tras, fijo,cojin de respaldo, 353)	8B : 175	5-H08
Asientos Tras, fijo, almohadillo del cojin, 354), -1997	8B : 177	5-H10
Asientos Tras, fijo,cojin de respaldo, 354), -1997	8B : 179	5-H12
Compartimento para equipo	8B : 181	5-H14
Proteccion de umbral	8B : 183	5-H16
Otro equipo interior	8B : 185	5-H18
Tablilla trassera	8B : 189	5-H22
Cinturon de seguridad, Del	8B : 191	5-H24
Cinturon de seguridad, Tras	8B : 193	5-I02
Juegos completos		
Carosseria, interior	8B : 195	5-I04


325. Ch. R102568!.
353. Ch. -R1025684; automoviles con cl ave color trapiceria K64, J93, K93 continuar con esta version.
354. Ch. R1025685-; no para automovile s con clave color trapiceria K64,J93,K93

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

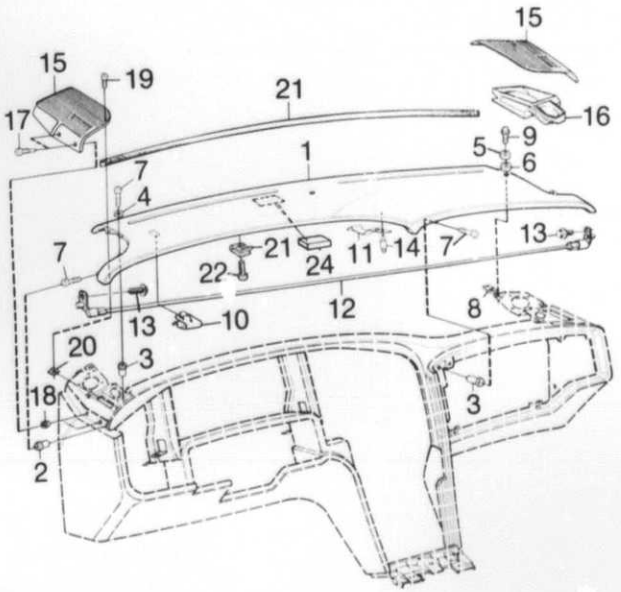

F8202 CAC94

Instrument panel
5-A06
Upper section

Instrumentpanel
Överdel

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 82 756		210)	1	Cover	Lock	6
0020	1	40 82 749		210), ACC	1	Cover	Lock	6
0030								
0040	1	40 80 230		90), -1995	1	Cover	Lock	6
0050	1	40 80 180		90), -1995, ACC	1	Cover	Lock	6
0060								
0070	1	40 80 214		70)	1	Cover	Lock	6
0080	1	40 80 164		70), ACC	1	Cover	Lock	6
0090								
0100	1	44 36 366		210), RHD	1	Cover	Lock	6
0110	1	44 36 390		210), RHD, ACC	1	Cover	Lock	6
0120								
0130	1	44 36 358		90), 1994, RHD	1	Cover	Lock	6
0140	1	44 36 382		90), 1994, RHD, ACC	1	Cover	Lock	6
0150								
0160	1	40 80 248		70), RHD	1	Cover	Lock	6
0170	1	40 80 198		70), RHD, ACC	1	Cover	Lock	6
0180								
0190	2	73 99 579			2	Blind rivet nut	Blindnitmutter	5
0200	3	97 59 846			3	Blind rivet nut	Blindnitmutter	5
0210	4	70 45 776			2	Washer	Bricka	5
0215	5	84 57 541		1995-	1	Washer	Bricka	5
0220	6	75 54 215		RHD	1	Spacer	Distans	5
0230	7	79 72 193		-1995	5	Screw	Skruv	5
0235	7	79 72 789		1996-	5	Screw	Skruv	5
0240	8	79 72 573		-1995	2	Clip nut	Clipsmutter	5
0245	8	40 87 672		1996-	2	Clip nut	Clipsmutter	5
0250	9	*79 73 126*		-1995 NLS – USE 7972128	2	Screw	Skruv	5
0260	9	*79 73 126*		-1995, RHD, LH NLS – USE 7972128	1	Screw	Skruv	5
0270	9	79 77 465		-1995, RHD, RH	1	Screw	Skruv	5
0275	9	79 77 465		1996-	2	Screw	Skruv	5
0280	10	40 86 419			3	Clamp	Klämma	5
0290	11	40 35 093			1	Spring	Fjäder	5
0300	12	40 30 003			1	Cable	Wire	5
0310	13	79 75 212			2	Screw	Skruv	5
0320	14	79 77 804			1	Rivet	Nit	5
0330	15	40 83 432		210), LH	1	Loudspeaker grille	Högtalargaller	5
0340	15	40 83 457		210,44), LH	1	Loudspeaker grille	Högtalargaller	5
0350	15	40 41 190		90), -1995, LH	1	Loudspeaker grille	Högtalargaller	5
0360	15	40 41 356		90,44), -1995, LH	1	Loudspeaker grille	Högtalargaller	5
0370	15	40 41 158		70), LH	1	Loudspeaker grille	Högtalargaller	5
0380	15	40 41 331		70,44), LH	1	Loudspeaker grille	Högtalargaller	5
0390								
0400	15	40 41 257		70), LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0410	15	44 36 507		210), LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0420	15	44 36 481		90), 1994, LH, RHD	1	Loudspeaker grille	Högtalargaller	5
0430								
0440	15	40 83 440		210), RH	1	Loudspeaker grille	Högtalargaller	5
0450	15	40 41 208		90), -1995, RH	1	Loudspeaker grille	Högtalargaller	5
0460	15	40 41 166		70), RH	1	Loudspeaker grille	Högtalargaller	5
0470								
0480	15	40 41 265		70), RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0485	15	44 39 758		70,44), 1995-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0490	15	44 36 515		210), RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0495	15	44 39 766		210,44), 1995-, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0500	15	44 36 499		90), 1994, RH, RHD	1	Loudspeaker grille	Högtalargaller	5
0510								
0520	16	40 32 058		LH	1	Sealing collar	Tätningskrage	5

44. With theft alarm Med stöldlarm
70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -A08

Upper section
Överdel

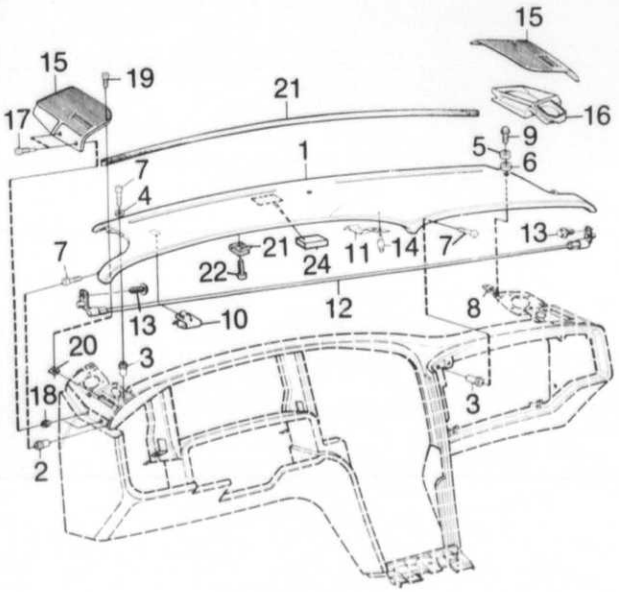

F8202 CAC94

0500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	16	40 32 074		LH, RHD	1	Sealing collar	Tätningskrage	5
0540	16	40 32 041		RH	1	Sealing collar	Tätningskrage	5
0550	16	40 32 066		RH, RHD	1	Sealing collar	Tätningskrage	5
0560	17	79 77 648			4	Screw	Skruv	5
0570	18	79 35 703			4	Clip nut	Klämmutter	5
0580	19	79 75 535			2	Screw	Skruv	5
0590	20	79 72 771			2	Clip nut	Clipsmutter	5
0600	21	95 45 534			1	Felt strip	Filtlist	5
0610	22	*79 65 353*		NLS - USE 7970601	1	Screw	Skruv	5
0620	23	79 77 317			1	Clip nut	Klämmutter	5
0630	24	45 09 576		1996-	2	Spacer	Mellanlägg	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-A10

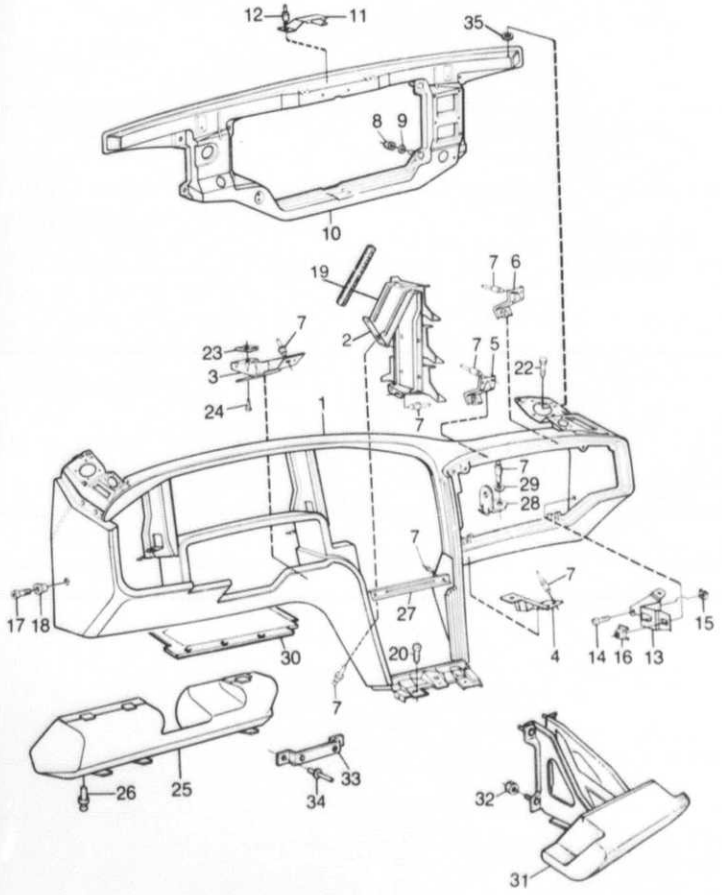

F8623 CAC94

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 27 894		210), -1995	1	Panel	Panel	6
0020	1	46 09 459		210), 1996-	1	Panel	Panel	6
0060	1	44 27 886		90), -1995	1	Panel	Panel	6
0070	1	44 27 860		70), -1995	1	Panel	Panel	6
0080	1	46 09 442		70), 1996-	1	Panel	Panel	6
0090	1	44 36 333		210), 1994, RHD	1	Panel	Panel	6
0110	1	44 36 325		90), 1994, RHD	1	Panel	Panel	6
0120	1	*40 79 604*		70), 1994, RHD NLS - USE 4438438	1	Panel	Panel	6
0122	1	44 38 446		210), 1995, RHD	1	Panel	Panel	6
0126	1	44 38 438		70), 1995, RHD	1	Panel	Panel	6
0127	1	46 09 483		210), 1996-, RHD	1	Panel	Panel	6
0128	1	46 09 475		70), 1996-, RHD	1	Panel	Panel	6
0130	2	96 91 189			1	Guide rail	Styrskena	6
0140	2	96 91 19 /		RHD	1	Guide rail	Styrskena	6
0150	3	97 55 117		LH	1	Bracket	Konsol	6
0160	3	97 67 302		LH, RHD	1	Bracket	Konsol	6
0170	4	97 55 125		RH	1	Bracket	Konsol	6
0180	4	97 67 294		RH, RHD	1	Bracket	Konsol	6
0190	5	97 67 526		LH	1	Bracket	Konsol	6
0200	5	96 71 355		LH, RHD	1	Bracket	Konsol	6
0210	6	97 67 534		RH	1	Bracket	Konsol	6
0220	6	96 71 363		RH, RHD	1	Bracket	Konsol	6
0230	7	79 77 804			X	Rivet	Nit	5
0240	8	79 79 602		1994	4	Nut	Mutter	5
0245	8	79 71 922		1995-	4	Nut	Mutter	3
0250	9	89 29 531			8	Sealing washer	Tätningsbricka	5
0260	10	40 77 079			1	Carrier	Bärare	6
0270	10	40 34 799		US, CA	1	Carrier	Bärare	6
0280	10	*40 77 087*		1994, RHD NLS - USE 4519302	1	Carrier	Bärare	6
0285	10	45 19 302		1995-, RHD	1	Carrier	Bärare	6
0290	11	97 61 941			1	Bracket	Konsol	5
0300	12	79 68 845			2	Rivet	Nit	5
0310	13	96 63 022		RH	1	Bracket	Fäste	6
0320	13	96 63 030		LH, RHD	1	Bracket	Fäste	6
0330	14	80 59 396			2	Screw	Skruv	5
0340	15	79 74 231			2	Cage nut	Korgmutter	5
0350	16	79 75 071			2	Clip nut	Klämmutter	5
0360	17	79 72 128			2	Screw	Skruv	5
0370	18	40 82 731		210)	2	Cover	Täcklock	5
0400	18	95 82 651		90), -1995	2	Cover	Täcklock	5
0410	18	96 76 305		70)	2	Cover	Täcklock	5
0420	19	82 78 [illegible]			1	Protecting moulding	Skyddslist	5
0440	20	79 78 687		1994	2	Screw	Skruv	5
0450	20	79 22 495		1995-	2	Screw	Skruv	5
0460	22	79 72 466			2	Screw	Skruv	5
0470	23	79 75 071			2	Clip nut	Klämmutter	5
0480	24	79 22 818			2	Screw	Skruv	5
0500	25	43 12 906			1	Knee protection	Knäskydd	5
0510	26	92 20 880		1994	3	Rivet	Nit	5
0515	26	79 72 516		1995-	3	Rivet	Nit	5
0520	27	96 78 533		LHD	1	Reinforcement	Förstärkning	6
0530	27	96 79 937		RHD	1	Reinforcement	Förstärkning	6
0540	28	96 78 442		RHD	2	Attaching bracket	Fästvinkel	5
0560	29	91 66 356		RHD	2	Washer	Bricka	5
0570	30			See page 8B-025, 5-B02		Sound insulation	Ljudisolering	
0580	31	40 78 978		AIRBAG 2	1	Member	Balk	
0590	32	79 79 602		AIRBAG 2	4	Nut	Mutter	5
0600	33	47 04 466		1996-	1	Bracket	Konsol	

70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-A12

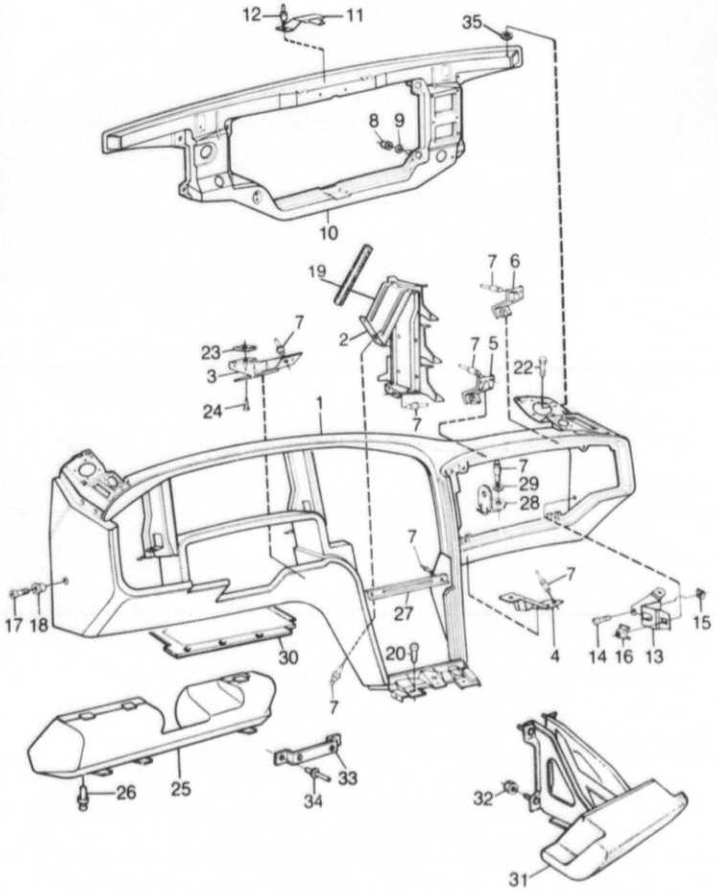

F8623 CAC94

0505	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	34	79 77 804		1996-	2	Rivet	Nit	5
0620	35	89 29 531		1996	2	Sealing washer	Tätningsbricka	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-A14

Instrument frame — *Instrumentram*

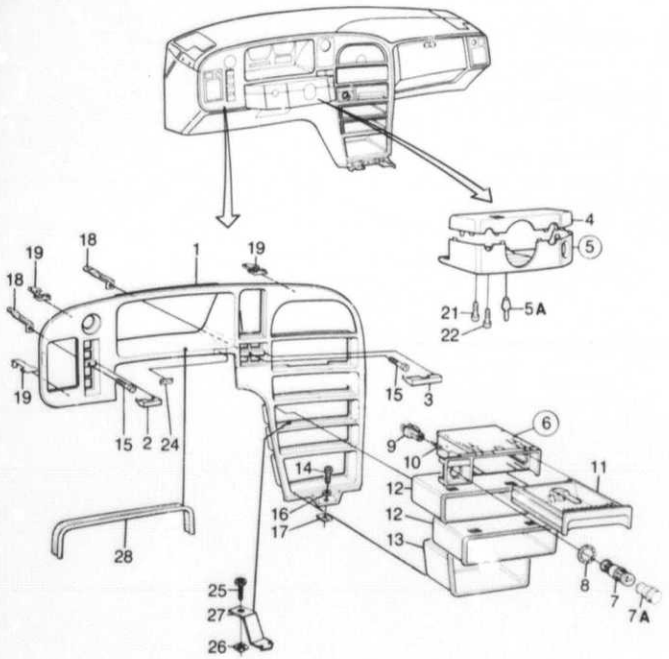

F7306 CAC94

0510	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 82 699			1	Instrument frame	Instrumentram	6
0020	1	86 73 428		40/136 103 306	1	Instrument frame	Instrumentram	6
0030						wood	trä	
0040	1	40 82 707		RHD	1	Instrument frame	Instrumentram	6
0050	1	86 73 436		RHD 40/136 103 405	1	Instrument frame	Instrumentram	6
0060						wood	trä	
0070	2	97 60 372		LH	1	Cover washer	Täckbricka	5
0080	3	97 60 380		RH	1	Cover washer	Täckbricka	5
0090	4	40 82 715			1	Cover	Kåpa	6
0100	5	95 45 229		1994	1	Cover	Kåpa	6
0110	5	45 19 047		1995-	1	Cover	Kåpa	6
0120	5	45 18 635		1995-, US, CA	1	Cover	Kåpa	6
0125	5A	71 13 970		1995-	1	.Plug	.Plugg	5
0130	6	97 78 218			1	Ashtray housing	Askkoppshus	6
0140	7	85 74 469			1	.Cigarette lighter	.Cigarettändare	4
0150	7A	85 59 221			1	..Lighter unit	..Tändarenhet	4
0160	8	85 32 426			1	.Clip	.Clips	5
0170	9	85 09 697			1	.Bulb socket	.Lamphållare	5
0180	10	85 00 613			1	.Bulb	.Glödlampa	2
0190	11	95 74 724			1	Ashtray	Askkopp	5
0200	12	97 14 817			2	Storage tray	Förvaringsfack	6
0210	13	97 55 216			1	Storage tray	Förvaringsfack	5
0220	13	97 64 762		RHD	1	Storage tray	Förvaringsfack	5
0230	14	79 65 338			1	Screw	Skruv	6
0240	15	79 70 536			2	Screw	Skruv	6
0250	17	79 77 317			1	Clip nut	Klämmutter	5
0260	18	97 67 179			2	Clip nut	Klämmutter	5
0270	19	97 61 552			3	Clamp	Klämma	5
0280	21	79 74 512			2	Screw	Skruv	5
0290	22	79 71 443			2	Screw	Skruv	5
0300	24	96 59 764		"UNLEADED FUEL ONLY"	1	Text plate	Textskylt	5
0310	25	*84 41 503*		NLS - USE 7970601	2	Screw	Skruv	5
0320	26	79 77 317			2	Clip nut	Klämmutter	5
0330	27	96 78 541			2	Clamp	Klämma	5
0340	28	40 84 398		1994	1	Piping	Kederlist	5
0350	28	46 38 458		1995-	1	Piping	Kederlist	5

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-A16

Glove compartment
Handskfack

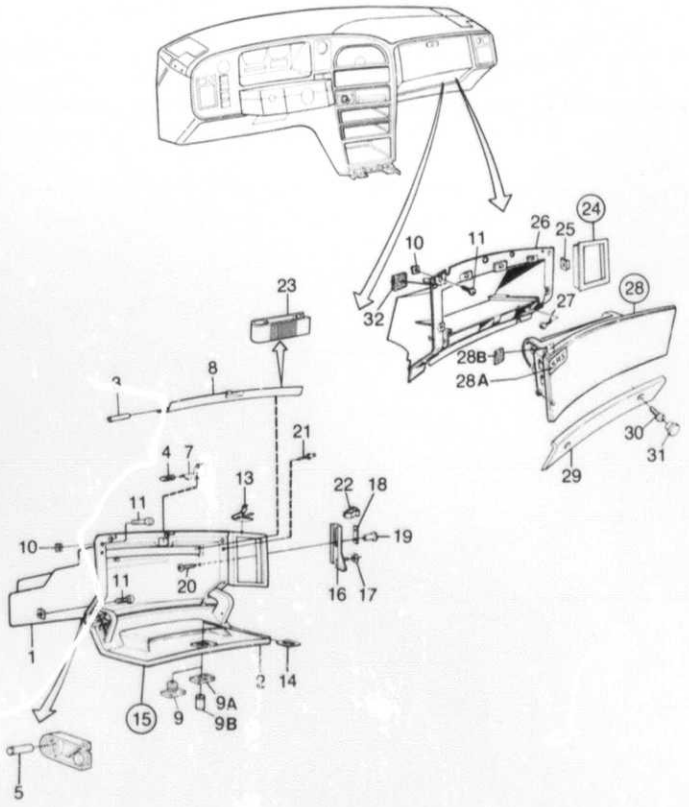

F6533 CA094

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 16 306			1	Glove compartment	Handskfack	6
0020	1	46 16 314			1	Glove compartment	Handskfack	6
0026						wood	trä	
0040	1	*95 71 209*		RHD NLS – USE 4616330	1	Glove compartment	Handskfack	6
0060	1	40 85 890		RHD	1	Glove compartment	Handskfack	6
0070						wood	trä	
0100	2	40 84 349		210)	1	Glove compartment lid	Handskfacklucka	5
0110	2	95 46 763		90), -1995	1	Glove compartment lid	Handskfacklucka	5
0120	2	95 46 789		70)	1	Glove compartment lid	Handskfacklucka	5
0130	2	95 46 847		70), RHD	1	Glove compartment lid	Handskfacklucka	5
0140	2	44 36 663		210), RHD	1	Glove compartment lid	Handskfacklucka	5
0150	2	44 36 655		90), 1994, RHD	1	Glove compartment lid	Handskfacklucka	5
0160	3	97 82 343			2	Pin	Pinne	5
0170	4	98 96 994			1	Rubber bushing	Gummibussning	5
0180	5	79 10 755			2	Pin	Pinne	5
0190	7	97 55 257			1	End plate	Slutbleck	5
0200	7	97 69 183		RHD	1	End plate	Slutbleck	5
0210	8	97 67 567			1	Cover	Lock	5
0220	8	97 67 575		RHD	1	Cover	Lock	5
0230	9			See page 8A-057, 4-E10		Glove compartment lock	Handskfackslås	
0240	9A	43 06 437		AIRBAG 1	1	Lock housing	Låshus	3
0250						without lock cylinder	utan låscylinder	
0260	9B			See page 8A-057, 4-E10		Lock cylinder	Låscylinder	
0270	10	79 77 317			6	Clip nut	Klämmutter	5
0280	10	79 72 573		AIRBAG 2	6	Clip nut	Clipsmutter	5
0290	11	79 70 536			6	Screw	Skruv	6
0300	13	73 98 332		1994	2	Clip	Clips	5
0305	13	46 15 746		1995-	2	Clip	Clips	5
0310	14	82 62 610			1	Clip	Clips	5
0320	15	96 98 309		See page 8B-195, 5-I04	1	Adjusting kit	Justersats	4
0330	16	40 30 201		1) LH	1	.Hinge	.Gångjärn	4
0340	16	40 30 219		1) RH	1	.Hinge	.Gångjärn	4
0350	17	79 65 809			2	.Clip	.Clips	5
0360	18	95 85 985		1)	2	.Nut washer	.Mutterbricka	5
0370	19	95 85 522		1)	2	.Protection	.Skydd	5
0380	20	95 85 829		1)	4	.Screw	.Skruv	5
0390	21	95 94 508			2	Rivet	Nit	5
0400	22	*95 85 514*		NLS	2	Clamp	Klammer	5
0410	23			See page 3A-171, 2-H04	1	Fuse clip	Säkringsklämma	
0420	24	40 80 305		AIRBAG 2	1	Frame	Ram	
0430	24	44 36 218		AIRBAG 2	1	Frame	Ram	
0440						wood	trä	
0450	24	44 27 985		1995-, AIRBAG 2, RHD	1	Frame	Ram	
0460	24	44 38 636		1995-, AIRBAG 2, RHD	1	Frame	Ram	
0470						wood	trä	
0480	25	73 98 332		1994	2	.Clip	.Clips	5
0485	25	46 15 746		1995-	1	.Clip	.Clips	5
0490	26	42 90 649		AIRBAG 2	1	Attaching frame	Fästram	
0500	26	44 15 519		1995-, AIRBAG 2, RHD	1	Attaching frame	Fästram	
0510	27	79 78 422		AIRBAG 2	4	Screw	Skruv	5
0520	28	43 14 431		210), -1997, AIRBAG 2	1	Airbag module	Airbagmodul	
0525	28	• 50 13 347		210), 19[illegible] AIRBAG 2	1	Airbag module	Airbagmodul	
0530	28	43 14 423		90), -1995, AIRBAG 2	1	Airbag module	Airbagmodul	
0540	28	43 14 407		70), -1997, AIRBAG 2	1	Airbag module	Airbagmodul	
0545	28	• 50 13 339		70), 1998-, AIRBAG 2	1	Airbag module	Airbagmodul	
0550	28	44 16 152		210), 1995-1997, AIRBAG 2, RHD	1	Airbag module	Airbagmodul	
0551								
0555	28	• 50 13 370		210), 1998-, AIRBAG 2, RHD	1	Airbag module	Airbagmodul	

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-A18

Glove compartment

Handskfack

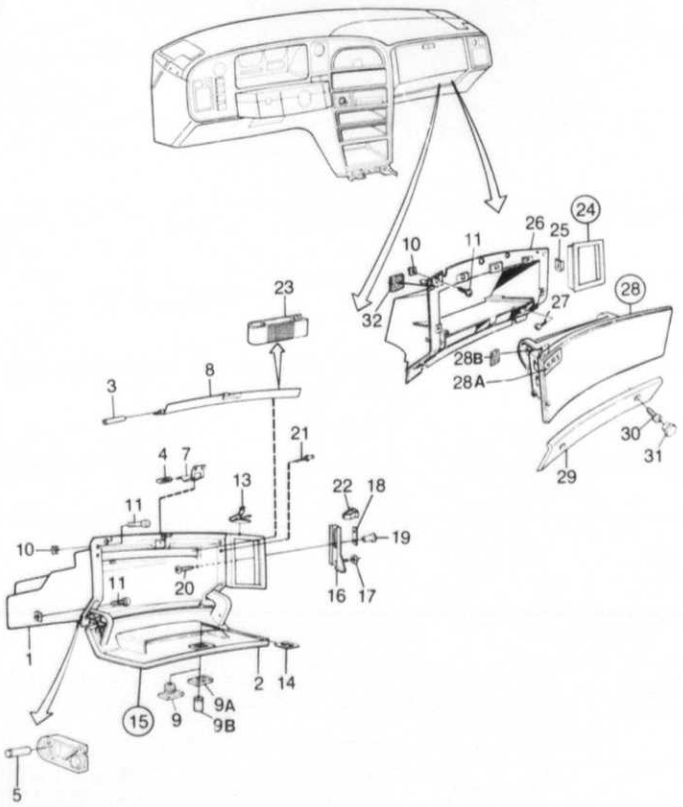

F6533 CAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	28	44 16 129		70), 1995-1997,	1	Airbag module	Airbagmodul	
0561				AIRBAG 2, RHD	1			
0565	28	• 50 13 362		70), 1998-, AIRBAG 2,RHD	1	Airbag module	Airbagmodul	
0570	28A	43 14 514		210), AIRBAG 2	1	.Emblem	.Emblem	
0580	28A	43 14 506		90), -1995, AIRBAG 2	1	.Emblem	.Emblem	
0590	28A	43 14 480		70), AIRBAG 2	1	.Emblem	.Emblem	
0600	28A	46 28 269		210),1995-,AIRBAG 2,RHD	1	.Emblem	.Emblem	
0610	28A	46 28 244		70), 1995-,AIRBAG 2,RHD	1	.Emblem	.Emblem	
0620	28B	45 30 192		AIRBAG 2	2	.Velcro fastener	.Kardborrband	
0630	29	44 27 332		210), AIRBAG 2	1	Hatch	Lucka	
0640	29	44 27 308		90), -1995, AIRBAG 2	1	Hatch	Lucka	
0650	29	44 27 324		70), AIRBAG 2	1	Hatch	Lucka	
0660	29	44 28 074		210), 1995-,AIRBAG 2,RHD	1	Hatch	Lucka	
0670	29	44 28 041		70), 1995-, AIRBAG 2,RHD	1	Hatch	Lucka	
0680	30	79 78 398		AIRBAG 2 NLS - USE	2	Screw	Skruv	5
0680				8029944, 8059420				
0690	31	40 82 731		210), AIRBAG 2	2	Cover	Täcklock	5
0700	31	95 82 651		90), -1995, AIRBAG 2	2	Cover	Täcklock	5
0710	31	96 76 305		70), AIRBAG 2	2	Cover	Täcklock	5
0720	32	45 30 192		AIRBAG 2	2	Velcro fastener	Kardborrband	


70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

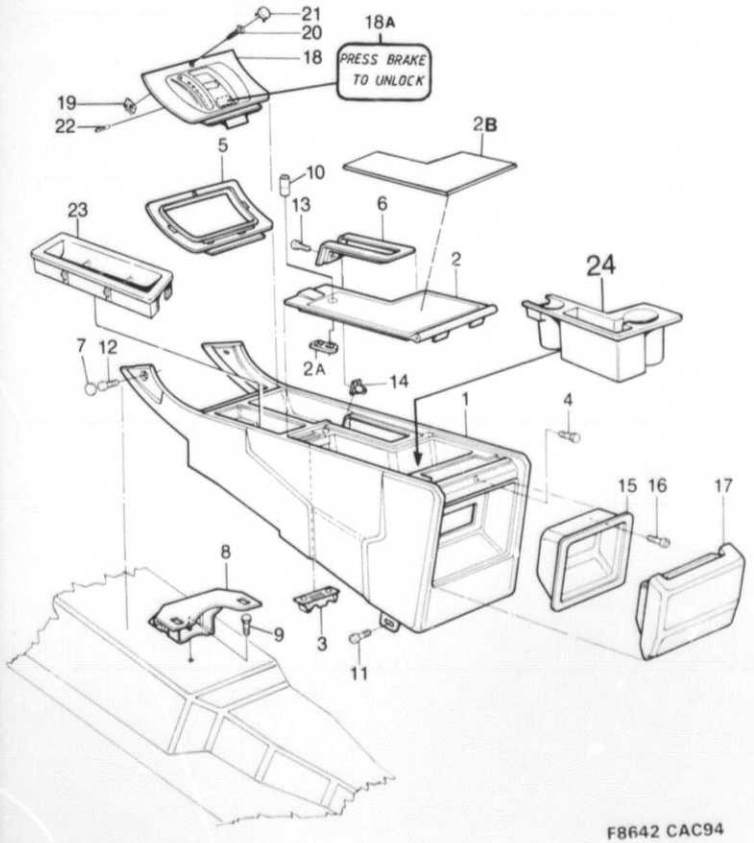

F8642 CAC94

Instrument panel

5 –A20

Centre console

Instrumentpanel

Mittkonsol

0530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	44 27 092		210)	1	Centre console	Mittkonsol	6
0020	1	46 16 439		210), RHD	1	Centre console	Mittkonsol	6
0030	1	44 27 068		90), -1995	1	Centre console	Mittkonsol	6
0040	1	46 16 413		90), 1994, RHD	1	Centre console	Mittkonsol	6
0050	1	44 27 084		70)	1	Centre console	Mittkonsol	6
0060	1	46 16 421		70), RHD	1	Centre console	Mittkonsol	6
0070								
0080	2	40 83 374		210), 1994	1	Cover	Lock	6
0090	2	40 86 930		210), 1995-	1	Cover	Lock	6
0100	2	40 86 930		210), AIRBAG 2	1	Cover	Lock	6
0110	2	40 77 012		90), 1994	1	Cover	Lock	6
0120	2	40 86 906		90), 1995	1	Cover	Lock	6
0130	2	40 86 906		90), AIRBAG 2	1	Cover	Lock	6
0140	2	40 77 038		70), 1994	1	Cover	Lock	6
0150	2	40 86 922		70), 1995-	1	Cover	Lock	6
0160	2	40 86 922		70), AIRBAG 2	1	Cover	Lock	6
0170	2A	40 86 781		AIRBAG 2	1	▲Lock tab	▲Låstunga	
0180	2B	46 16 801		1994, 40/400104428	1	Wooden insert	Träinlägg	6
0190	2B	46 16 819		-1996, AIRBAG 2, 40/400104436 (4436226)(40/400100E14)	1	Wooden insert	Träinlägg	6
0195								
0200								
0205	2B	48 16 112		1997-, AIRBAG 2, 40/400107769	1	Wooden insert	Träinlägg	6
0206								
0210	3	97 63 228			1	Magnet	Magnet	6
0220	4	92 20 880			2	Rivet	Nit	5
0230	5	97 60 596			1	Collar	Krage	6
0240	5	86 69 160		40/136 103 066	1	Collar	Krage	6
0250						wood	trä	
0260	5	97 64 200		RHD	1	Collar	Krage	6
0270	5	86 73 451		RHD 40/136 103 074	1	Collar	Krage	6
0280						wood	trä	
0290	6	97 90 007			1	Frame	Ram	6
0300	7	40 83 341		210)	2	Cover	Täcklock	6
0310	7	95 81 893		90), -1995	2	Cover	Täcklock	6
0320	7	97 78 911		70)	2	Cover	Täcklock	6
0330	8	96 63 048			1	Bracket	Fäste	6
0340	8	96 63 055		RHD	1	Bracket	Fäste	6
0350	9	79 69 223		-1995	2	Screw	Skruv	5
0355	9	79 72 607		1996-	2	Screw	Skruv	5
0360	10			See page 8A-057, 4-E10		Lock cylinder	Låscylinder	
0370	11	79 72 607			2	Screw	Skruv	5
0380	12	79 65 338			2	Screw	Skruv	6
0390	13	79 70 536			1	Screw	Skruv	6
0400	14	79 72 573			1	Clip nut	Clipsmutter	5
0410	15	97 78 283			1	Ashtray housing	Askkoppshus	6
0420	16	97 81 501			4	Screw	Skruv	5
0430	17	97 51 074			1	Ashtray	Askkopp	5
0440	17	40 85 908			1	Ashtray	Askkopp	6
0450						wood	trä	
0460	18	95 92 908		A	1	Gear lever gaiter	Växelspakskåpa	6
0470	18	86 69 178		A, 40/136 103 041	1	Gear lever gaiter	Växelspakskåpa	6
0480						wood	trä	
0490	18	40 85 320		349), A, US, CA	1	Gear lever gaiter	Växelspakskåpa	6
0500	18	45 19 781		350), A, US, CA	1	Gear lever gaiter	Växelspakskåpa	6
0510	18	44 28 215		349), A, US, CA 40/400 100 822	1	Gear lever gaiter	Växelspakskåpa	6
0520						wood	trä	
0530	18	45 19 849		350), A, US, CA 40/400 103 768	1	Gear lever gaiter	Växelspakskåpa	6
0540						wood	trä	


70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige
349. Ch. -R1027463
350. Ch. R1027464-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

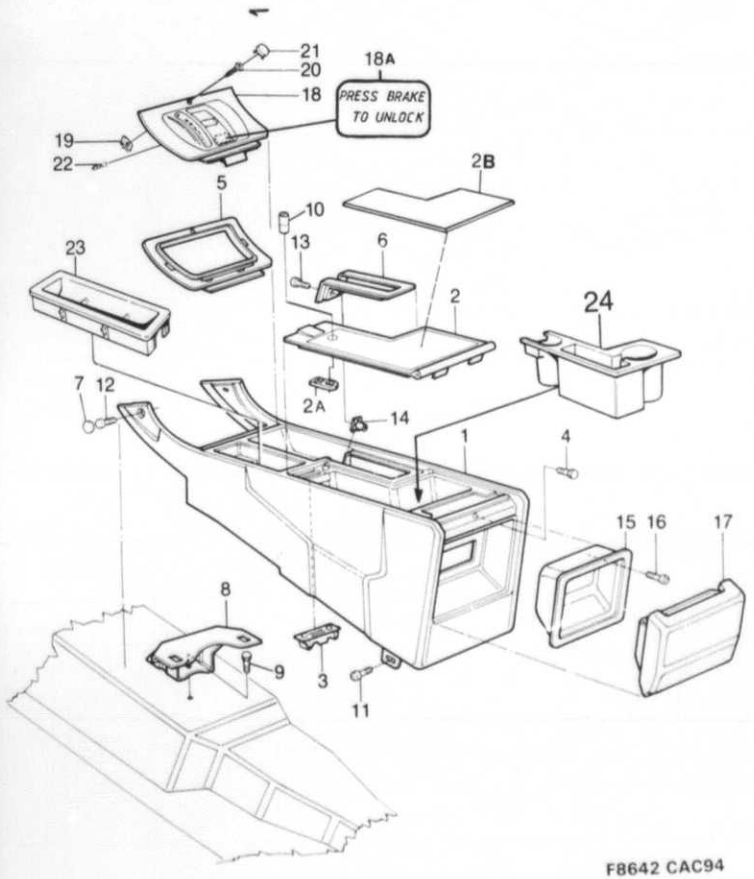

F8642 CAC94

Instrument panel

5-A22

Centre console

Instrumentpanel

Mittkonsol

	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530								
0550	18	95 92 916		A, RHD	1	Gear lever gaiter	Växelspakskåpa	6
0560	18	86 73 444		A, RHD	1	Gear lever gaiter	Växelspakskåpa	6
0570				40/136 103 058		wood	trä	
0580	18A	• 45 19 773		350), A, US, CA	1	,Cover	,Täcklock	3
0585	19	79 72 771		A	1	Clip nut	Clipsmutter	5
0590	20	84 27 841		A	1	Screw	Skruv	5
0600	21	92 85 404		A	1	Cover	Täcklock	3
0610	22			See page 3A-057, 2-C10		Bulb	Glödlampa	
0620	23			See page 3A-077, 2-D06		Coin box	Myntfack	
0630	24	47 08 434		428)	1	Cup holder	Mugghållare	


350. Ch. R1027464-
428. Ch. T1014008-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

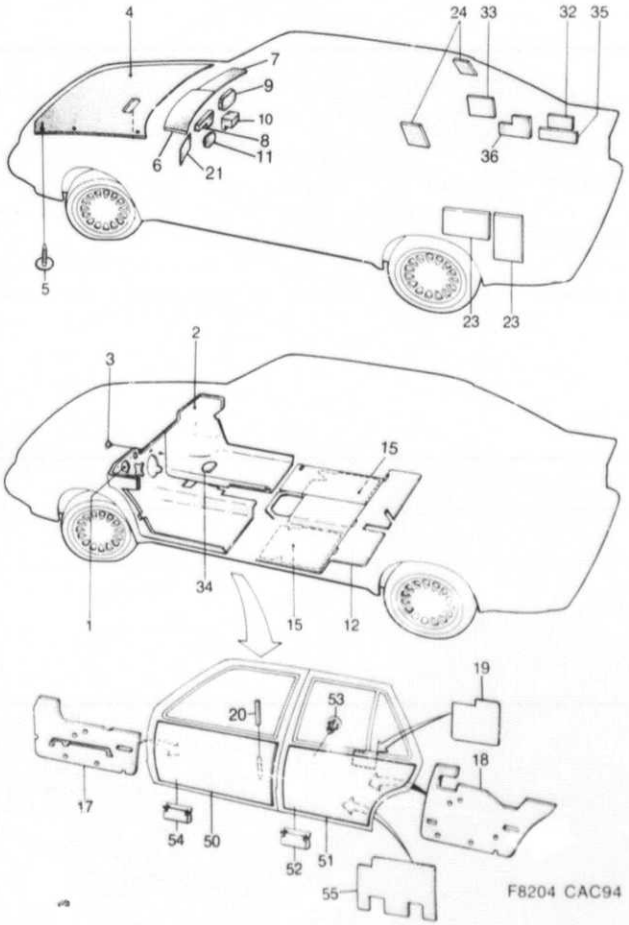

Upholstery

5-A24

Insulation

Klädsel

Isolering


1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 72 035		1994, LH	1	Insulation	Isolering	6
0020	1	46 07 180		1995-, LH	1	Insulation	Isolering	6
0030	1	42 [illegible] 050		1994, LH, RHD	1	Insulation	Isolering	6
0040	1	46 [illegible] 206		1995-, LH, RHD	1	Insulation	Isolering	6
0050	2	42 72 027		1994, RH	1	Insulation	Isolering	6
0060	2	46 07 198		1995-, RH	1	Insulation	Isolering	6
0070	2	42 72 043		1994, RH, RHD	1	Insulation	Isolering	6
0080	2	46 07 214		1995-, RH, RHD	1	Insulation	Isolering	6
0090	3	40 87 029		1994	6	Push nut	Tryckmutter	6
0095	3	42 18 277		1995-	6	Push nut	Tryckmutter	6
0100	4	42 74 718		1994, 4D	1	Insulation	Isolering	3
01 0	4	*42 74 726*		1994, 5CS NLS – USE 4272209	1	Insulation	Isolering	3
0110								
0120	4	42 72 209		1995-	1	Insulation	Isolering	3
0130	5	97 60 497			X	Clamp	Klämma	6
0140	6	40 41 935			1	Sound absorber	Ljudabsorbent	6
0150	7	40 41 943			1	Sound absorber	Ljudabsorbent	6
0160	8	46 07 164		1995-, 6-CYL	2	Sound absorber	Ljudabsorbent	
0170	9	46 36 676		1995-, 6-CYL	7	Sound absorber	Ljudabsorbent	
0180	10	46 07 172		1995-, 6-CYL	1	Sound absorber	Ljudabsorbent	
0190	11	46 07 263		1995-, 6-CYL	6	Damper mat	Dämpmatta	
0200	12	42 65 328		5CS	1	Insulation	Isolering	6
0210	12	42 65 328		-1997, 4D	1	Insulation	Isolering	6
0220	15	42 57 515		LH	1	Base	Underlägg	6
0230	15	97 64 002		RH	1	Base	Underlägg	6
0240	17	97 95 857			2	Insulation	Isolering	6
0250	18	96 78 731			2	Insulation	Isolering	6
0260	19	42 66 193			2	Water drainage	Vattenavledare	5
0270	20	42 74 916		1994	2	Sealing strip	Tätningslist	
0275	21	46 36 668		1995-, 6-CYL	3	Damper mat	Dämpmatta	
0280	23	97 76 956			2	Insulation	Isolering	6
0290	24	97 76 964			2	Insulation	Isolering	6
0310	32	96 77 154		-1997, RH, 4D	1	Insulation	Isolering	6
0320	33	97 88 571		RH	1	Insulation	Isolering	6
0330	34	97 98 281			2	Cover	Lock	5
0340	35	96 77 162		-1997, RH, 4D	1	Insulation	Isolering	6
0350	36	42 64 503		LH, 5CS		Sound absorber	Ljudabsorbent	6
0360	36	42 64 404		RH, 5CS	1	Sound absorber	Ljudabsorbent	6
0370	50	95 71 019		1994	2	Water drainage	Vattenavledare	5
0371	50	45 09 485		1995-, LH	1	Water drainage	Vattenavledare	6
0372	50	45 09 493		1995-, RH	1	Water drainage	Vattenavledare	6
0380	51	96 71 918		1994	2	Water drainage	Vattenavledare	5
0381	51	45 09 501		1995-, LH	1	Water drainage	Vattenavledare	6
0382	51	45 09 519		1995-, RH	1	Water drainage	Vattenavledare	6
0390	52	96 72 908		1994	10	Clamp	Klammer	5
0400	53	96 76 057		1994	2	Clamp	Klammer	5
0410	54	96 72 908		1994	8	Clamp	Klammer	5
0420	55	96 94 472		1994	2	Water drainage	Vattenavledare	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

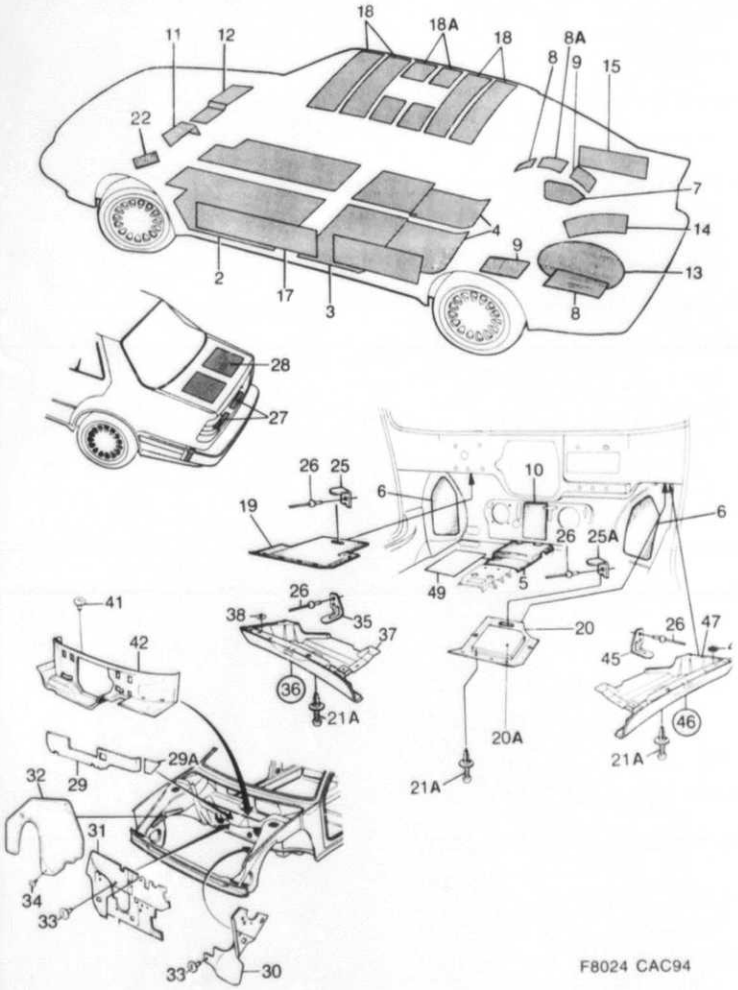

Upholstery

5-B02 Sound insulation

Klädsel

Ljudisolering

1250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	44 79 002		1994, LH	1	Damper mat	Dämpmatta	6
0020	2	44 79 010		1994, RH	1	Damper mat	Dämpmatta	6
0030	2	46 07 248		1995-, LH	1	Damper mat	Dämpmatta	6
0040	2	46 07 255		1995-, RH	1	Damper mat	Dämpmatta	6
0050	3	42 65 468			2	Damper mat	Dämpmatta	6
0060	4	41 42 964			2	Damper mat	Dämpmatta	6
0070	5	42 71 417		1994-	1	Damper mat	Dämpmatta	6
0080	5	46 07 230		1995-	1	Damper mat	Dämpmatta	6
0090	6	42 71 425		1994-	2	Damper mat	Dämpmatta	6
0100	6	44 03 663		1995-	2	Damper mat	Dämpmatta	
0110	7	42 71 425			2	Damper mat	Dämpmatta	6
0120	8	42 71 425			3	Damper mat	Dämpmatta	6
0130	8A	42 71 433			2	Damper mat	Dämpmatta	6
0140	9	42 71 433			3	Damper mat	Dämpmatta	6
0150	10	42 71 409		1994-	1	Damper mat	Dämpmatta	6
0160	10	46 07 297		1995-	1	Damper mat	Dämpmatta	6
0170	11	42 71 698		1994, LH	1	Damper mat	Dämpmatta	6
0180	11	46 41 304		1995-, LH	1	Damper mat	Dämpmatta	6
0190	12	42 71 680		RH	1	Damper mat	Dämpmatta	6
0200	13	96 59 467			1	Damper mat	Dämpmatta	6
0210						spare wheel	reservhjul	
0220	14	97 75 792			2	Damper mat	Dämpmatta	6
0230						spare wheel	reservhjul	
0240	15	40 53 773		LH	1	Damper mat	Dämpmatta	5
0250	15	40 51 504		RH	1	Damper mat	Dämpmatta	6
0260	17	95 44 834			4	Damper mat	Dämpmatta	5
0270	18	97 57 691			4	Damper mat	Dämpmatta	
0280	18	97 57 691		SR	3	Damper mat	Dämpmatta	
0290	18A	84 90 708			4	Cardboard	Pappskiva	5
0300	19	*42 74 585*		70), -1995, LH NLS - USE 4705430	1	Sound insulation	Ljudisolering	6
0310	19	47 05 430		70), 1996-, LH	1	Sound insulation	Ljudisolering	6
0320	19	96 64 137		70), LH, RHD	1	Sound insulation	Ljudisolering	6
0330	20	96 64 129		70), B204, RH	1	Sound insulation	Ljudisolering	6
0340	20	40 43 444		70), B234, B308, RH	1	Sound insulation	Ljudisolering	6
0350	20	96 64 145		70,366), RH, RHD	1	Sound insulation	Ljudisolering	6
0360	20	46 07 065		70,367), -1995, RH, RHD	1	Sound insulation	Ljudisolering	6
0370	20	47 05 448		70), 1996-, RH, RHD	1	Sound insulation	Ljudisolering	6
0380	20A	40 43 436		B234, RH	1	.Sound absorber	.Ljudabsorbent	6
0390								
0400	21A	42 59 248		70)	X	Expanding rivet	Expandernit	6
0410	22	46 82 571		1996-	2	Damper mat	Dämpmatta	6
0420	25	95 75 846		388), LH	1	Bracket	Fäste	6
0430	25	46 41 296		389), LH	1	Bracket	Fäste	
0440	25	97 63 442		LH, RHD	1	Bracket	Fäste	6
0450	25A	97 63 442		RH	1	Bracket	Fäste	6
0460	26	79 72 516			2	Rivet	Nit	5
0470	27	44 03 697		-1997, 4D	2	Damper mat	Dämpmatta	
0480	28	40 53 773		-1997, 4D	2	Damper mat	Dämpmatta	5
0490	29			1) See page 8A-017, 4-C18		Sound absorber	Ljudabsorbent	
0500								
0510	29A			1), See page 2-077, 1-F06		Sound absorber	Ljudabsorbent	
0520								
0530	30	42 74 676		LH	1	Insulation	Isolering	6
0540	31	42 71 649		344), RH	1	Insulation	Isolering	6


1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
344. Ch. -R1023596
366. Ch. -S1005435
367. Ch. S1005436-
388. Ch. -S1011961
389. Ch. S1011962-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

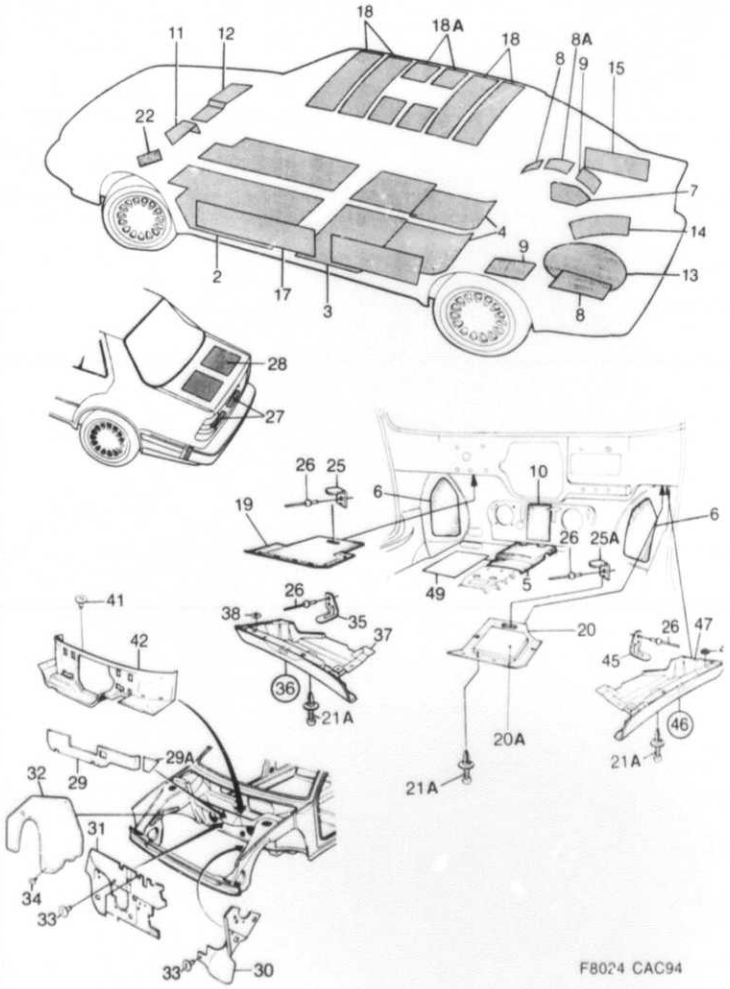

F8024 CAC94

Upholstery

5-B04

Sound insulation

Klädsel

Ljudisolering

1250	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0550	31	46 06 752		345), RH	1	Insulation	Isolering	6
0560	32	46 06 059		1995-, 6-CYL	1	Sound absorber	Ljudabsorbent	6
0570	33	40 87 029		1994	X	Push nut	Tryckmutter	6
0580	33	42 18 277		1995-	X	Push nut	Tryckmutter	6
0590	34	97 60 497		1995-, 6-CYL	3	Clamp	Klämma	6
0600	35	44 98 614		1995-, RHD, AIRBAG 2	1	Bracket	Fäste	6
0610	36	46 08 600		210), 1995, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0620	36	47 04 169		210), 1996, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0630	36	47 88 014		210,476), 1997-, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0631								
0640	36	• 49 00 684		210,477), RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0650	36	46 08 584		70), 1995, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0660	36	47 04 151		70), 1996, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0670	36	47 88 006		70,476), 1997-, RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0671								
0680	36	• 49 00 676		70,477), RHD, AIRBAG2	1	Sound insulation	Ljudisolering	6
0690	36	46 08 592		90), 1995, RHD, AIRBAG	2 1	Sound insulation	Ljudisolering	6
0700	37	44 98 184		1995-, RHD	1	.Sound insulation	.Ljudisolering	6
0710	38	79 77 507		RHD	7	.Washer	.Bricka	5
0720	41	40 87 029		1994	4	Push nut	Tryckmutter	6
0730	41	42 18 277		1995-	4	Push nut	Tryckmutter	6
0740	42	42 71 276		1994	1	Insulation	Isolering	6
0750	42	46 41 288		1995-	1	Insulation	Isolering	6
0760	45	95 75 622		AIRBAG 2	1	Bracket	Fäste	6
0770	46	42 60 048		210), 1994,LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0780	46	46 08 576		210),1995, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0790	46	47 04 144		210),1996, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0800	46	47 49 990		210,476),1997-,LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0801								
0802	46	• 49 00 668		210,477), LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0810	46	42 60 006		70), 1994, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0820	46	46 08 550		70), 1995, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0830	46	47 04 136		70), 1996, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0840	46	47 49 982		70,476), 1997-,LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0841								
0842	46	• 49 00 650		70,477), LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0850	46	42 60 022		90), 1994, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0860	46	46 08 568		90), 1995, LHD, AIRBAG 2	1	Sound insulation	Ljudisolering	6
0870	47	42 60 576		LHD	1	.Sound insulation	.Ljudisolering	6
0880	48	79 77 507			7	.Washer	.Bricka	5
0890	49	95 40 774		1994	1	Heat shield	Värmesköld	3

70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige
345. Ch. R1023597-
476. Ch. -V1019765
477. Ch. V1019766-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04


Upholstery

5-B06

Covers 1994
Horizon pattern

Klädsel

Klädselpåsar 1994
Horisontmönster

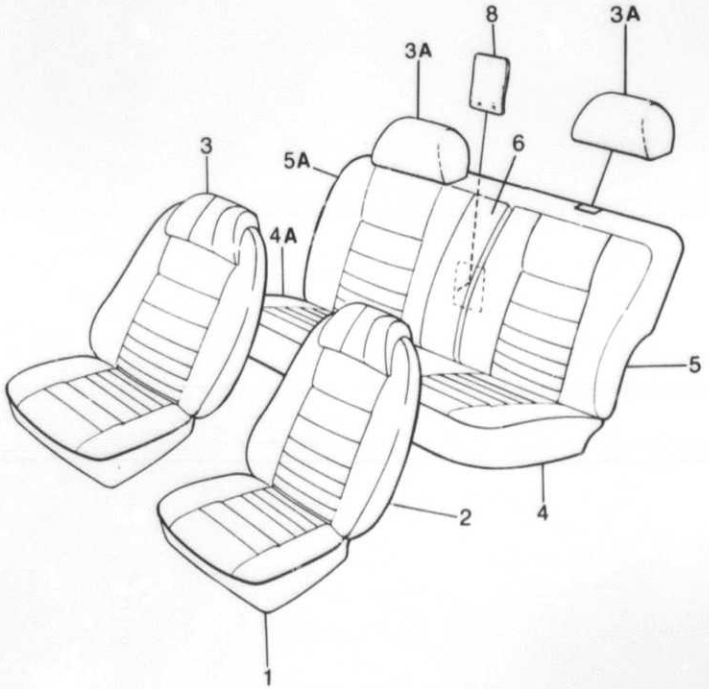

F6537 CAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				TRIM COLOUR J44				
0020	1	43 16 592		210), LH	1	Seat cover	Sitspåse	6
0030	1	43 16 626		210), RH	1	Seat cover	Sitspåse	6
0040	2	43 16 600		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	43 17 012		210,324), LH, 5CS	1	Seat cover	Sitspåse	6
0075	4	46 27 881		210,325), LH, 5CS	1	Seat cover	Sitspåse	6
0080	4	43 17 137		210,324), 4D	1	Seat cover	Sitspåse	6
0085	4	46 27 972		210,325), 4D	1	Seat cover	Sitspåse	6
0090	4A	43 17 020		210,324), RH, 5CS	1	Seat cover	Sitspåse	6
0095	4A	46 27 873		210,325), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	43 17 038		210,324), LH, 5CS	1	Back cover	Ryggpåse	6
0105	5	46 27 949		210,325), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	43 17 145		210,324), 4D	1	Back cover	Ryggpåse	6
0115	5	46 28 004		210,325), 4D	1	Back cover	Ryggpåse	6
0120	5A	43 17 046		210,324), RH, 5CS	1	Back cover	Ryggpåse	6
0125	5A	46 27 931		210,325), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	43 17 053		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0290				TRIM COLOUR H44				
0300	1	43 16 436		100), LH	1	Seat cover	Sitspåse	6
0310	1	43 16 469		100), RH	1	Seat cover	Sitspåse	6
0320	2	43 16 444		100)	2	Back cover	Ryggpåse	6
0330	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	6
0340	3A	43 16 907		100)	2	Hoad restraint cover	Nackstödspåse	6
0350	4	43 16 972		100,324), LH, 5CS	1	Seat cover	Sitspåse	6
0355	4	46 27 865		100,325), LH, 5CS	1	Seat cover	Sitspåse	6
0360	4	43 16 865		100,324), 4D	1	Seat cover	Sitspåse	6
0365	4	46 27 964		100,325), 4D	1	Seat cover	Sitspåse	6
0370	4A	43 16 980		100,324), RH, 5CS	1	Seat cover	Sitspåse	6
0375	4A	46 27 857		100,325), RH, 5CS	1	Seat cover	Sitspåse	6
0380	5	43 16 998		100,324), LH, 5CS	1	Back cover	Ryggpåse	6
0385	5	46 27 923		100,325), LH, 5CS	1	Back cover	Ryggpåse	6
0390	5	43 16 873		100,324), 4D	1	Back cover	Ryggpåse	6
0395	5	46 27 998		100,325), 4D	1	Back cover	Ryggpåse	6
0400	5A	43 17 004		100,324), RH, 5CS	1	Back cover	Ryggpåse	6
0405	5A	46 27 915		100,325), RH, 5CS	1	Back cover	Ryggpåse	6
0410	6	43 16 881		100)	1	Arm rest cover	Armstödspåse	6
0420	8	40 47 932		100), 4D	1	Hatch	Lucka	6

100. Light grey Ljus grå
210. Light beige Ljus beige
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 –B08

Covers 1994
Horizon pattern

Klädselpåsar 1994
Horisontmönster

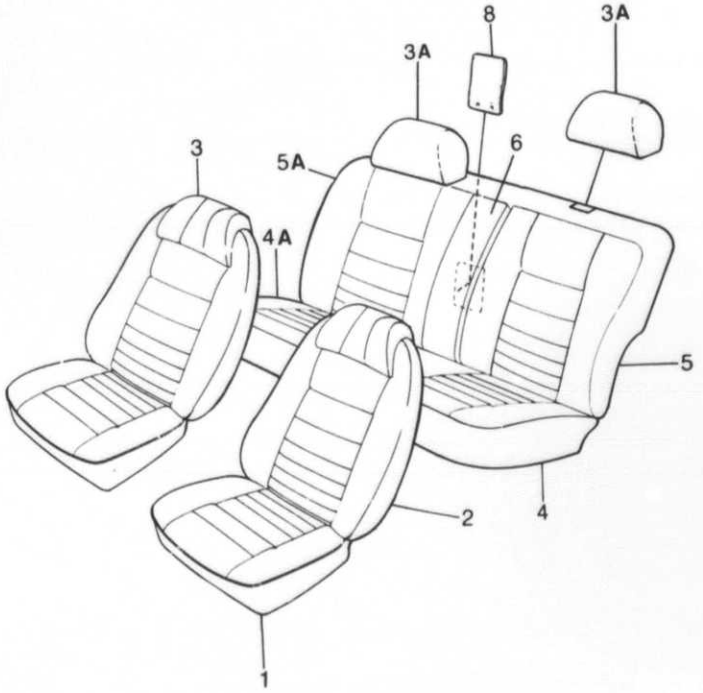

F6537 CAC94

1301	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0430				TRIM COLOUR K44				
0440	1	44 14 231		110), LH	1	Seat cover	Sitspåse	
0450	1	44 14 264		110), RH	1	Seat cover	Sitspåse	
0460	2	44 14 249		110)	2	Back cover	Ryggpåse	
0470	3	44 14 256		110)	2	Head restraint cover	Nackstödspåse	
0480	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0490	4	44 14 413		110,324), LH, 5CS	1	Seat cover	Sitspåse	
0495	4	46 27 840		110,325), LH, 5CS	1	Seat cover	Sitspåse	
0500	4	44 14 454		110,324), 4D	1	Seat cover	Sitspåse	
0505	4	46 27 956		110,325), 4D	1	Seat cover	Sitspåse	
0510	4A	44 14 421		110,324), RH, 5CS	1	Seat cover	Sitspåse	
0515	4A	46 27 832		110,325), RH, 5CS	1	Seat cover	Sitspåse	
0520	5	44 14 439		110,324), LH, 5CS	1	Back cover	Ryggpåse	
0525	5	46 27 907		110,325), LH, 5CS	1	Back cover	Ryggpåse	
0530	5	44 14 462		110,324), 4D	1	Back cover	Ryggpåse	
0535	5	46 27 980		110,325), 4D	1	Back cover	Ryggpåse	
0540	5A	44 14 447		110,324), RH, 5CS	1	Back cover	Ryggpåse	
0545	5A	46 27 899		110,325), RH, 5CS	1	Back cover	Ryggpåse	
0550	6	44 15 949		110)	1	Arm rest cover	Armstödspåse	
0560	8	44 15 964		110), 4D	1	Hatch	Lucka	
0565								
0570				TRIM COLOUR K64				
0580	1	43 09 555		110), LH	1	Seat cover	Sitspåse	6
0590	1	43 09 563		110), RH	1	Seat cover	Sitspåse	6
0600	2	43 09 571		110)	2	Back cover	Ryggpåse	6
0610	3	44 74 185		110)	2	Head restraint cover	Nackstödspåse	6
0620	3A	43 10 264		110)	2	Head restraint cover	Nackstödspåse	6
0630	4	43 10 157		110), LH, 5CS	1	Seat cover	Sitspåse	6
0640	4	43 14 829		110), 4D	1	Seat cover	Sitspåse	6
0650	4A	43 10 165		110), RH, 5CS	1	Seat cover	Sitspåse	6
0660	5	43 10 249		110), LH, 5CS	1	Back cover	Ryggpåse	6
0670	5	43 14 837		110), 4D	1	Back cover	Ryggpåse	6
0680	5A	43 10 256		110), RH, 5CS	1	Back cover	Ryggpåse	6
0690	6	43 10 272		110)	1	Arm rest cover	Armstödspåse	6
0700	8	43 14 845		110), 4D	1	Hatch	Lucka	6


110. Black Svart
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

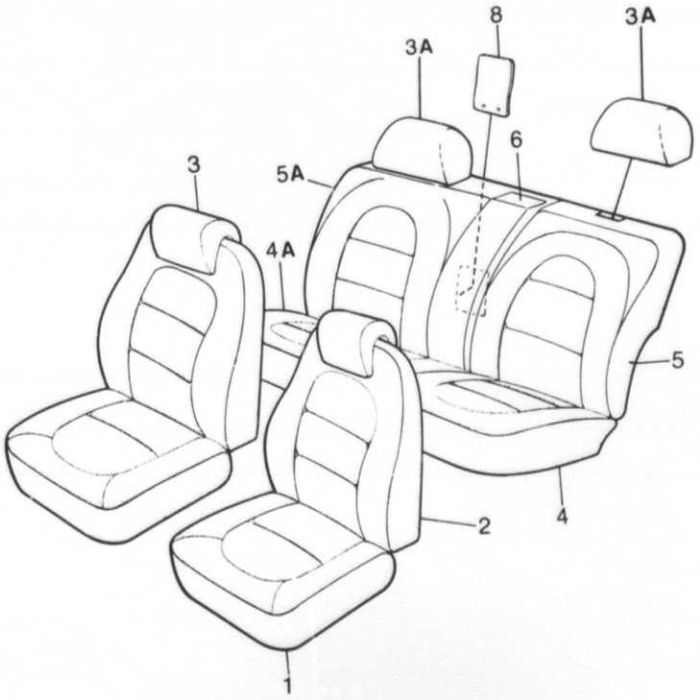

F6538 CAC94

Upholstery

5-B10

Covers 1994
Contour design

Klädsel

Klädselpåsar 1994
Contour design

1303	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J33				
0020	1	42 88 692		210), LH	1	Seat cover	Sitspåse	6
0030	1	42 88 684		210), RH	1	Seat cover	Sitspåse	6
0040	2	42 88 718		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 136		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	42 92 157		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	42 92 215		210,324), LH, 5CS	1	Seat cover	Sitspåse	6
0075	4	46 27 501		210,325), LH, 5CS	1	Seat cover	Sitspåse	6
0080	4	42 92 710		210,324), 4D	1	Seat cover	Sitspåse	6
0085	4	46 27 667		210,325), 4D	1	Seat cover	Sitspåse	6
0090	4A	42 92 207		210,324), RH, 5CS	1	Seat cover	Sitspåse	6
0095	4A	46 27 493		210,325), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	42 92 298		210,324), LH, 5CS	1	Back cover	Ryggpåse	6
0105	5	46 27 600		210,325), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	42 92 744		210,324), 4D	1	Back cover	Ryggpåse	6
0115	5	46 27 717		210,325), 4D	1	Back cover	Ryggpåse	6
0120	5A	42 92 280		210,324), RH, 5CS	1	Back cover	Ryggpåse	6
0125	5A	46 27 592		210,325), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	42 92 173		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR J93				
0160	1	43 15 925		210), LH	1	Seat cover	Sitspåse	6
0170	1	43 15 958		210), RH	1	Seat cover	Sitspåse	6
0180	2	43 15 933		210)	2	Back cover	Ryggpåse	6
0190	3	44 74 011		210)	2	Head restraint cover	Nackstödspåse	1
0200	3A	*43 16 006*		210) NLS - USE 4292157	2	Head restraint cover	Nackstödspåse	6
0210	4	43 16 022		210), 4D	1	Seat cover	Sitspåse	6
0220	5	43 16 030		210), 4D	1	Back cover	Ryggpåse	6
0230	6	43 16 014		210)	1	Arm rest cover	Armstödspåse	6
0240	8	43 16 048		210), 4D	1	Hatch	Lucka	6
0250				TRIM COLOUR L33				
0260	1	45 30 515		210), LH	1	Seat cover	Sitspåse	6
0270	1	45 30 523		210), RH	1	Seat cover	Sitspåse	6
0280	2	45 30 531		210)	2	Back cover	Ryggpåse	6
0290	3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
0300	3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
0310	4	45 30 606		210,324), LH, 5CS	2	Seat cover	Sitspåse	6
0315	4	46 27 527		210,325), LH, 5CS	2	Seat cover	Sitspåse	6
0320	4	45 30 655		210,324), 4D	1	Seat cover	Sitspåse	6
0325	4	46 27 675		210,325), 4D	1	Seat cover	Sitspåse	6
0330	4A	45 30 598		210,324), RH, 5CS	1	Seat cover	Sitspåse	6
0335	4A	46 27 519		210,325), RH, 5CS	1	Seat cover	Sitspåse	6
0340	5	45 30 622		210,324), LH, 5CS	1	Back cover	Ryggpåse	6
0345	5	46 27 626		210,325), LH, 5CS	1	Back cover	Ryggpåse	6
0350	5	45 30 663		210,324), 4D	1	Back cover	Ryggpåse	6
0355	5	46 27 725		210,325), 4D	1	Back cover	Ryggpåse	6
0360	5A	45 30 614		210,324), RH, 5CS	1	Back cover	Ryggpåse	6
0365	5A	46 27 618		210,325), RH, 5CS	1	Back cover	Ryggpåse	6
0370	6	45 30 648		210)	1	Arm rest cover	Armstödspåse	6
0380	8	45 30 671		210), 4D	1	Hatch	Lucka	6


210. Light beige Ljus beige
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

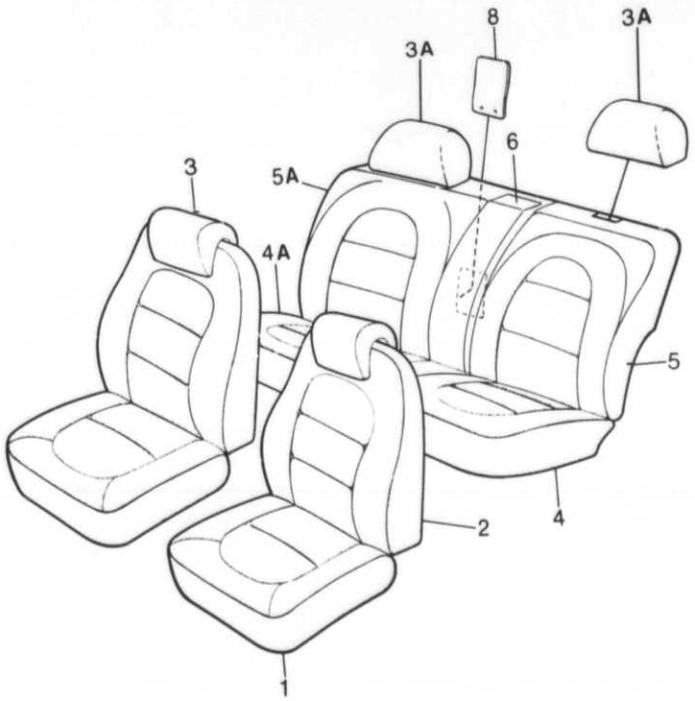

F6538 CAC94

Upholstery

5-B12

Covers 1994
Contour design

Klädsel

Klädselpåsar 1994
Contour design

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR G33				
1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
2	41 35 802		90)	2	Back cover	Ryggpåse	6
3	44 74 177		90)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
4	95 90 050		90,324), LH, 5CS	1	Seat cover	Sitspåse	6
4	46 27 469		90,325), LH, 5CS	1	Seat cover	Sitspåse	6
4	95 89 664		90,324), 4D	1	Seat cover	Sitspåse	6
4	46 27 642		90,325), 4D	1	Seat cover	Sitspåse	6
4A	95 90 043		90,324), RH, 5CS	1	Seat cover	Sitspåse	6
4A	46 27 451		90,325), RH, 5CS	1	Seat cover	Sitspåse	6
5	42 91 258		90,324), LH, 5CS	1	Back cover	Ryggpåse	6
5	46 27 568		90,325), LH, 5CS	1	Back cover	Ryggpåse	6
5	95 89 672		90,324), 4D	1	Back cover	Ryggpåse	6
5	46 27 691		90,325), 4D	1	Back cover	Ryggpåse	6
5A	42 91 241		90,324), RH, 5CS	1	Back cover	Ryggpåse	6
5A	46 27 550		90,325), RH, 5CS	1	Back cover	Ryggpåse	6
6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H33				
1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
4	40 47 429		100,324), LH, 5CS	1	Seat cover	Sitspåse	6
4	46 27 485		100,325), LH, 5CS	1	Seat cover	Sitspåse	6
4	40 47 916		100,324), 4D	1	Seat cover	Sitspåse	6
4	46 27 659		100,325), 4D	1	Seat cover	Sitspåse	6
4A	40 47 411		100,324), RH, 5CS	1	Seat cover	Sitspåse	6
4A	46 27 477		100,325), RH, 5CS	1	Seat cover	Sitspåse	6
5	42 91 290		100,324), LH, 5CS	1	Back cover	Ryggpåse	6
5	46 27 584		100,325), LH, 5CS	1	Back cover	Ryggpåse	6
5	40 47 924		100,324), 4D	1	Back cover	Ryggpåse	6
5	46 27 709		100,325), 4D	1	Back cover	Ryggpåse	6
5A	42 91 282		100,324), RH, 5CS	1	Back cover	Ryggpåse	6
5A	46 27 576		100,325), RH, 5CS	1	Back cover	Ryggpåse	6
6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100), 4D	1	Hatch	Lucka	6


90. Yellow Gul
100. Light grey Ljus grå
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

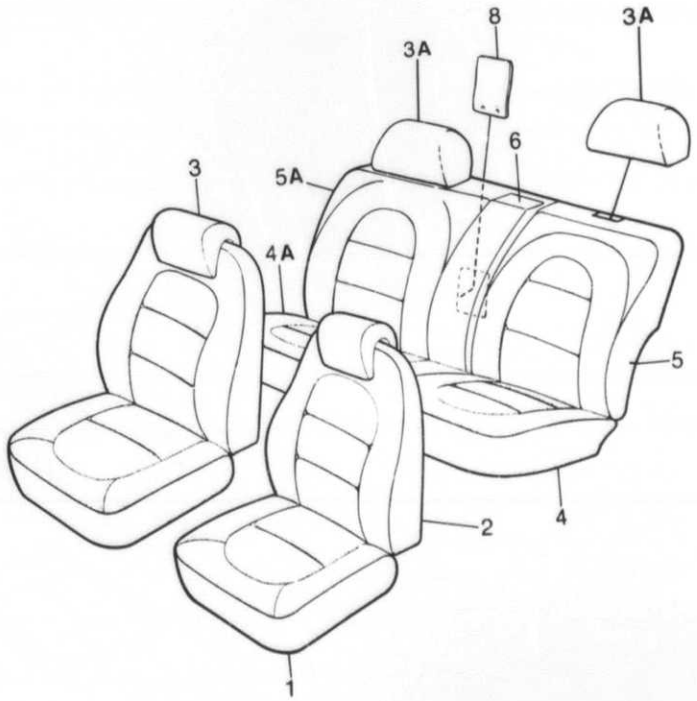

F6538 CAC94

1303	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0680				TRIM COLOUR K33				
0690	1	44 14 314		110), LH	1	Seat cover	Sitspåse	
0700	1	44 14 348		110), RH	1	Seat cover	Sitspåse	
0710	2	44 14 322		110)	2	Back cover	Ryggpåse	
0720	3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
0730	3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
0740	4	44 14 488		110,324), LH, 5CS	1	Seat cover	Sitspåse	
0745	4	46 27 444		110,325), LH, 5CS	1	Seat cover	Sitspåse	
0750	4	44 14 512		110,324), 4D	1	Seat cover	Sitspåse	
0755	4	46 27 634		110,325), 4D	1	Seat cover	Sitspåse	
0760	4A	44 14 470		110,324), RH, 5CS	1	Seat cover	Sitspåse	
0765	4A	46 27 436		110,325), RH, 5CS	1	Seat cover	Sitspåse	
0770	5	44 14 504		110,324), LH, 5CS	1	Back cover	Ryggpåse	
0775	5	46 27 543		110,325), LH, 5CS	1	Back cover	Ryggpåse	
0780	5	44 14 520		110,324), 4D	1	Back cover	Ryggpåse	
0785	5	46 27 683		110,325), 4D	1	Back cover	Ryggpåse	
0790	5A	44 14 496		110,324), RH, 5CS	1	Back cover	Ryggpåse	
0795	5A	46 27 535		110,325), RH, 5CS	1	Back cover	Ryggpåse	
0800	6	44 74 607		110)	1	Arm rest cover	Armstödspåse	
0810	8	44 15 964		110), 4D	1	Hatch	Lucka	
0820				TRIM COLOUR K93				
0830	1	44 75 091		110), LH	1	Seat cover	Sitspåse	
0840	1	44 75 109		110), RH	1	Seat cover	Sitspåse	
0850	2	44 75 117		110)	2	Back cover	Ryggpåse	
0860	3	44 75 125		110)	2	Head restraint cover	Nackstödspåse	
0870	3A	44 75 182		110)	2	Head restraint cover	Nackstödspåse	
0880	4	44 75 141		110), 4D	1	Seat cover	Sitspåse	
0890	5	44 75 158		110), 4D	1	Back cover	Ryggpåse	
0900	6	44 75 166		110)	1	Arm rest cover	Armstödspåse	
0910	8	44 75 174		110), 4D	1	Hatch	Lucka	


110. Black Svart
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

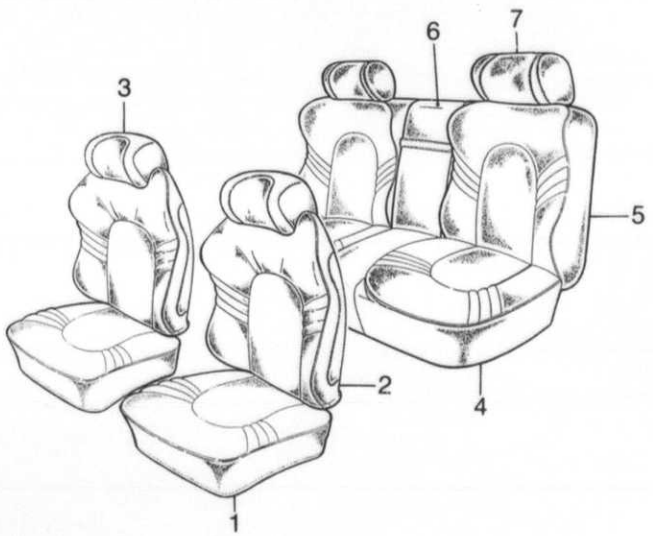

F6539 CAC94

1305	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR H35				
0020	1	43 15 206		100), LH	1	Seat cover	Sitspåse	
0030	1	43 15 503		100), RH	1	Seat cover	Sitspåse	
0040	2	43 15 214		100)	2	Back cover	Ryggpåse	
0050	3	43 15 222		100)	2	Head restraint cover	Nackstödspåse	
0060	4	43 15 560		100), LH	1	Seat cover	Sitspåse	
0070	4	43 15 552		100), RH	1	Seat cover	Sitspåse	
0080	5	43 15 669		100,324), LH	1	Back cover	Ryggpåse	
0085	5	46 29 481		100,325), LH	1	Back cover	Ryggpåse	
0090	5	43 15 636		100,324), RH	1	Back cover	Ryggpåse	
0095	5	46 29 473		100,325), RH	1	Back cover	Ryggpåse	
0100	6	43 15 651		100)	1	Arm rest cover	Armstödspåse	
0110	7	43 15 644		100)	2	Head restraint cover	Nackstödspåse	
0120				TRIM COLOUR K35				
0130	1	43 14 555		110), LH	1	Seat cover	Sitspåse	6
0140	1	43 14 589		110), RH	1	Seat cover	Sitspåse	6
0150	2	43 14 563		110)	2	Back cover	Ryggpåse	6
0160	3	43 14 571		110)	2	Head restraint cover	Nackstödspåse	6
0170	4	43 15 529		110), LH	1	Seat cover	Sitspåse	6
0180	4	43 15 511		110), RH	1	Seat cover	Sitspåse	6
0190	5	43 15 628		110,324), LH	1	Back cover	Ryggpåse	6
0195	5	46 29 457		110,325), LH	1	Back cover	Ryggpåse	6
0200	5	43 15 594		110,324), RH	1	Back cover	Ryggpåse	6
0205	5	46 29 440		110,325), RH	1	Back cover	Ryggpåse	6
0210	6	43 15 610		110)	1	Arm rest cover	Armstödspåse	6
0220	7	43 15 602		110)	2	Head restraint cover	Nackstödspåse	6


100. Light grey Ljus grå
110. Black Svart
324. Ch. -R1025684
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
9D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

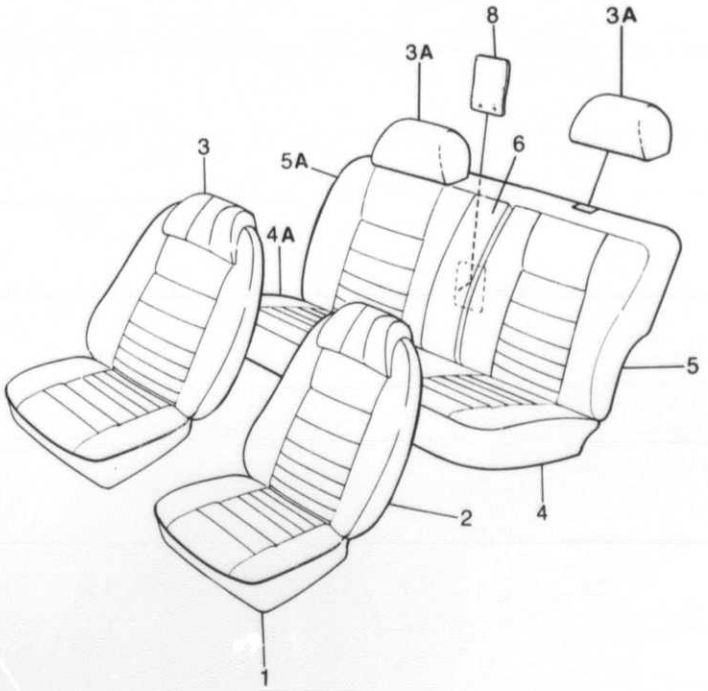

F6540 CAC94

Upholstery

5-B18

Covers 1995
Horizon pattern

Klädsel

Klädselpåsar 1995
Horisontmönster

1307	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				TRIM COLOUR J44				
0020	1	43 16 592		210), LH	1	Seat cover	Sitspåse	6
0030	1	43 16 626		210), RH	1	Seat cover	Sitspåse	6
0040	2	43 16 600		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 27 881		210), LH, 5CS	1	Seat cover	Sitspåse	6
0080	4	46 27 972		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	46 27 873		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 27 949		210), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	46 28 004		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	46 27 931		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	43 17 053		210)	1	Arm rest cover	Armstödspåse	6
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR H44				
0160	1	43 16 436		100), LH	1	Seat cover	Sitspåse	6
0170	1	43 16 469		100), RH	1	Seat cover	Sitspåse	6
0180	2	43 16 444		100)	2	Back cover	Ryggpåse	6
0190	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	6
0200	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
0210	4	46 27 865		100), LH, 5CS	1	Seat cover	Sitspåse	6
0220	4	46 27 964		100), 4D	1	Seat cover	Sitspåse	6
0230	4A	46 27 857		100), RH, 5CS	1	Seat cover	Sitspåse	6
0240	5	46 27 923		100), LH, 5CS	1	Back cover	Ryggpåse	6
0250	5	46 27 998		100), 4D	1	Back cover	Ryggpåse	6
0260	5A	46 27 915		100), RH, 5CS	1	Back cover	Ryggpåse	6
0270	6	43 16 881		100)	1	Arm rest cover	Armstödspåse	6
0280	8	40 47 932		100), 4D	1	Hatch	Lucka	6
0290				TRIM COLOUR K44				
0300	1	44 14 231		110), LH	1	Seat cover	Sitspåse	
0310	1	44 14 264		110), RH	1	Seat cover	Sitspåse	
0320	2	44 14 249		110)	2	Back cover	Ryggpåse	
0330	3	44 14 256		110)	2	Head restraint cover	Nackstödspåse	
0340	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0350	4	46 27 840		110), LH, 5CS	1	Seat cover	Sitspåse	
0360	4	46 27 956		110), 4D	1	Seat cover	Sitspåse	
0370	4A	46 27 832		110), RH, 5CS	1	Seat cover	Sitspåse	
0380	5	46 27 907		110), LH, 5CS	1	Back cover	Ryggpåse	
0390	5	46 27 980		110), 4D	1	Back cover	Ryggpåse	
0400	5A	46 27 899		110), RH, 5CS	1	Back cover	Ryggpåse	
0410	6	44 15 949		110)	1	Arm rest cover	Armstödspåse	
0420	8	44 15 964		110), 4D	1	Hatch	Lucka	
0430								
0440				TRIM COLOUR K16				
0450	1	47 17 476		110), LH	1	Seat cover	Sitspåse	6
0460	1	47 17 484		110), RH	1	Seat cover	Sitspåse	6
0470	2	47 17 492		110)	2	Back cover	Ryggpåse	6
0480	3	46 57 912		110)	2	Head restraint cover	Nackstödspåse	
0490	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0500	4	47 17 518		110), LH, 5CS	1	Seat cover	Sitspåse	6
0510	4	47 17 542		110), 4D	1	Seat cover	Sitspåse	6
0520	4A	47 17 500		110), RH, 5CS	1	Seat cover	Sitspåse	6
0530	5	47 17 534		110), LH, 5CS	1	Back cover	Ryggpåse	6
0540	5	47 17 559		110), 4D	1	Back cover	Ryggpåse	6
0550	5A	47 17 526		110), RH, 5CS	1	Back cover	Ryggpåse	6
0560	6	44 15 949		110)	1	Arm rest cover	Armstödspåse	
0570	8	44 15 964		110), 4D	1	Hatch	Lucka	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

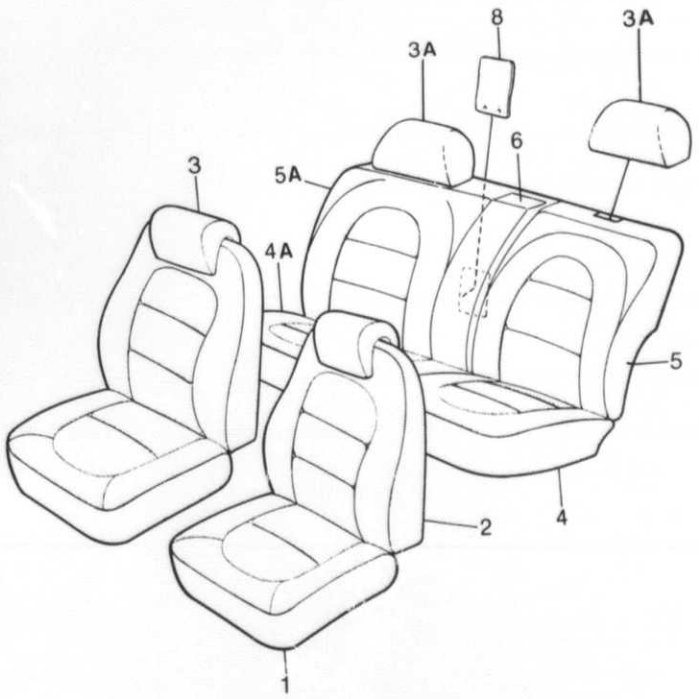

F6541 CAC94

Upholstery

5 – B20

Covers 1995
Contour design

Klädsel

Klädselpåsar 1995
Contour design

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
			TRIM COLOUR L33				
1	45 30 515		210), LH	1	Seat cover	Sitspåse	6
1	45 30 523		210), RH	1	Seat cover	Sitspåse	6
2	45 30 531		210)	2	Back cover	Ryggpåse	6
3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
4	46 27 527		210), LH	2	Seat cover	Sitspåse	6
4	46 27 675		210), 4D	1	Seat cover	Sitspåse	6
4A	46 27 519		210), RH	1	Seat cover	Sitspåse	6
5	46 27 626		210), LH	1	Back cover	Ryggpåse	6
5	46 27 725		210), 4D	1	Back cover	Ryggpåse	6
5A	46 27 618		210), RH	1	Back cover	Ryggpåse	6
6	45 30 648		210)	1	Arm rest cover	Armstödspåse	6
8	45 30 671		210), 4D	1	Hatch	Lucka	6
			TRIM COLOUR G33				
1	41 35 877		90), LH	1	Seat cover	Sitspåse	6
1	41 35 885		90), RH	1	Seat cover	Sitspåse	6
2	41 35 802		90)	2	Back cover	Ryggpåse	6
3	44 74 177		90)	2	Head restraint cover	Nackstödspåse	6
3A	40 50 530		90)	2	Head restraint cover	Nackstödspåse	6
4	46 27 469		90), LH	1	Seat cover	Sitspåse	6
4	46 27 642		90), 4D	1	Seat cover	Sitspåse	6
4A	46 27 451		90), RH	1	Seat cover	Sitspåse	6
5	46 27 568		90), LH	1	Back cover	Ryggpåse	6
5	46 27 691		90), 4D	1	Back cover	Ryggpåse	6
5A	46 27 550		90), RH	1	Back cover	Ryggpåse	6
6	95 89 680		90)	1	Arm rest cover	Armstödspåse	6
8	40 51 389		90), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H33				
1	41 35 919		100), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
4	46 27 485		100), LH	1	Seat cover	Sitspåse	6
4	46 27 659		100), 4D	1	Seat cover	Sitspåse	6
4A	46 27 477		100), RH	1	Seat cover	Sitspåse	6
5	46 27 584		100), LH	1	Back cover	Ryggpåse	6
5	46 27 709		100), 4D	1	Back cover	Ryggpåse	6
5A	46 27 576		100), RH	1	Back cover	Ryggpåse	6
6	40 47 452		100)	1	Arm rest cover	Armstödspåse	6
8	40 47 932		100), 4D	1	Hatch	Lucka	6
			TRIM COLOUR K33				
1	44 14 314		110), LH	1	Seat cover	Sitspåse	
1	44 14 348		110), RH	1	Seat cover	Sitspåse	
2	44 14 322		110)	2	Back cover	Ryggpåse	
3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
4	46 27 444		110), LH	1	Seat cover	Sitspåse	
4	46 27 634		110), 4D	1	Seat cover	Sitspåse	
4A	46 27 436		110), RH	1	Seat cover	Sitspåse	
5	46 27 543		110), LH	1	Back cover	Ryggpåse	
5	46 27 683		110), 4D	1	Back cover	Ryggpåse	
5A	46 27 535		110), RH	1	Back cover	Ryggpåse	
6	44 74 607		110)	1	Arm rest cover	Armstödspåse	
8	44 15 964		110), 4D	1	Hatch	Lucka	


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A0
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

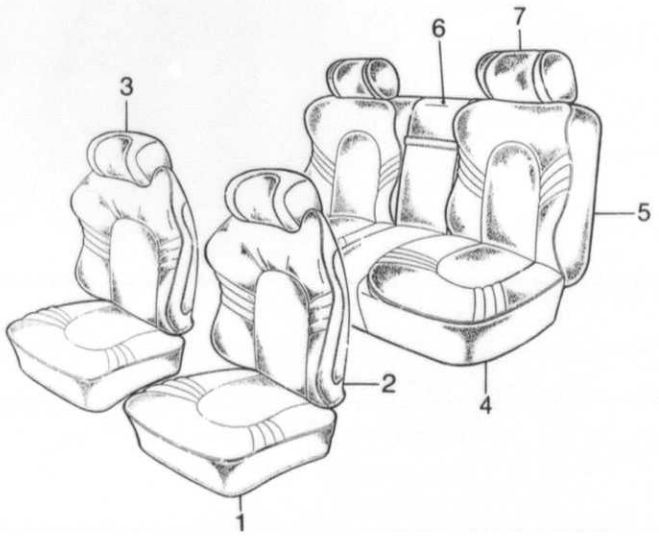

F6542 CAC94

1311 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010			TRIM COLOUR L35				
0020	1 46 31 859		210), LH	1	Seat cover	Sitspåse	6
0030	1 46 31 883		210), RH	1	Seat cover	Sitspåse	6
0040	2 46 31 867		210)	2	Back cover	Ryggpåse	6
0050	3 46 31 875		210)	2	Head restraint cover	Nackstödspåse	6
0060	4 46 31 925		210), LH	1	Seat cover	Sitspåse	6
0070	4 46 31 917		210), RH	1	Seat cover	Sitspåse	6
0080	5 46 31 941		210), LH	1	Back cover	Ryggpåse	6
0090	5 46 31 933		210), RH	1	Back cover	Ryggpåse	6
0100	6 46 31 958		210)	1	Arm rest cover	Armstödspåse	6
0110	7 46 31 966		210)	2	Head restraint cover	Nackstödspåse	6
0120			TRIM COLOUR H35				
0130	1 43 15 206		100), LH	1	Seat cover	Sitspåse	
0140	1 43 15 503		100), RH	1	Seat cover	Sitspåse	
0150	2 43 15 214		100)	2	Back cover	Ryggpåse	
0160	3 43 15 222		100)	2	Head restraint cover	Nackstödspåse	
0170	4 43 15 560		100), LH	1	Seat cover	Sitspåse	
0180	4 43 15 552		100), RH	1	Seat cover	Sitspåse	
0190	5 46 29 481		100), LH	1	Back cover	Ryggpåse	
0200	5 46 29 473		100), RH	1	Back cover	Ryggpåse	
0210	6 43 15 651		100)	1	Arm rest cover	Armstödspåse	
0220	7 43 15 644		100)	2	Head restraint cover	Nackstödspåse	
0230			TRIM COLOUR K35				
0240	1 43 14 555		110), LH	1	Seat cover	Sitspåse	6
0250	1 43 14 589		110), RH	1	Seat cover	Sitspåse	6
0260	2 43 14 563		110)	2	Back cover	Ryggpåse	6
0270	3 43 14 571		110)	2	Head restraint cover	Nackstödspåse	6
0280	4 43 15 529		110), LH	1	Seat cover	Sitspåse	6
0290	4 43 15 511		110), RH	1	Seat cover	Sitspåse	6
0300	5 46 29 457		110), LH	1	Back cover	Ryggpåse	6
0310	5 46 29 440		110), RH	1	Back cover	Ryggpåse	6
0320	6 43 15 610		110)	1	Arm rest cover	Armstödspåse	6
0330	7 43 15 602		110)	2	Head restraint cover	Nackstödspåse	6


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

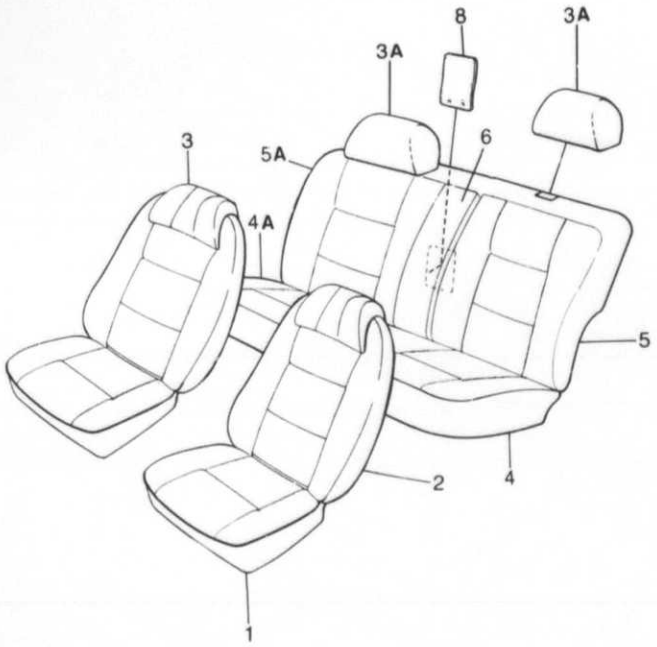

CAC94 F7585

Upholstery

5 -B24

Covers 1996
Textile

Klädsel

Klädselpåsar 1996
Textil

1313	Pos	Part No/Art nr	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010				TRIM COLOUR J16				
0020	1	46 50 255		210,431), LH	1	Seat cover	Sitspåse	6
0025	1	• 47 99 136		210,432), LH	1	Seat cover	Sitspåse	6
0030	1	46 50 263		210,431), RH	1	Seat cover	Sitspåse	6
0035	1	• 47 99 144		210,432), RH	1	Seat cover	Sitspåse	6
0040	2	46 50 271		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 50 370		210), LH, 5CS	1	Seat cover	Sitspåse	6
0080	4	46 50 446		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	46 50 362		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 50 396		210), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	46 50 453		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	46 50 388		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	46 51 956		210)	1	Arm rest cover	Armstödspåse	
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR H16				
0160	1	46 50 222		100,431), LH	1	Seat cover	Sitspåse	6
0165	1	• 47 99 094		100,432), LH	1	Seat cover	Sitspåse	6
0170	1	46 50 230		100,431), RH	1	Seat cover	Sitspåse	6
0175	1	• 47 99 102		100,432), RH	1	Seat cover	Sitspåse	6
0180	2	46 50 248		100)	2	Back cover	Ryggpåse	6
0190	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	6
0200	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
0210	4	46 50 339		100), LH, 5CS	1	Seat cover	Sitspåse	6
0220	4	46 50 420		100), 4D	1	Seat cover	Sitspåse	6
0230	4A	46 50 321		100), RH, 5CS	1	Seat cover	Sitspåse	6
0240	5	46 50 354		100), LH, 5CS	1	Back cover	Ryggpåse	6
0250	5	46 50 438		100), 4D	1	Back cover	Ryggpåse	6
0260	5A	46 50 347		100), RH, 5CS	1	Back cover	Ryggpåse	6
0270	6	46 51 949		100)	1	Arm rest cover	Armstödspåse	
0280	8	40 47 932		100), 4D	1	Hatch	Lucka	6
0440				TRIM COLOUR K16				
0450	1	47 17 476		110,431), LH	1	Seat cover	Sitspåse	6
0455	1	• 47 99 052		110,432), LH	1	Seat cover	Sitspåse	6
0460	1	47 17 484		110,431), RH	1	Seat cover	Sitspåse	6
0465	1	• 47 99 060		110,432), RH	1	Seat cover	Sitspåse	6
0470	2	47 17 492		110)	2	Back cover	Ryggpåse	6
0480	3	44 14 256		110)	2	Head restraint cover	Nackstödspåse	
0490	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0500	4	47 17 518		110), LH, 5CS	1	Seat cover	Sitspåse	6
0510	4	47 17 542		110), 4D	1	Seat cover	Sitspåse	6
0520	4A	47 17 500		110), RH, 5CS	1	Seat cover	Sitspåse	6
0530	5	47 17 534		110), LH, 5CS	1	Back cover	Ryggpåse	6
0540	5	47 17 559		110), 4D	1	Back cover	Ryggpåse	6
0550	5A	47 17 526		110), RH, 5CS	1	Back cover	Ryggpåse	6
0560	6	46 51 931		110)	1	Arm rest cover	Armstödspåse	
0570	8	44 15 964		110), 4D	1	Hatch	Lucka	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
431. Ch. -T1014007
432. Ch. T1014008-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

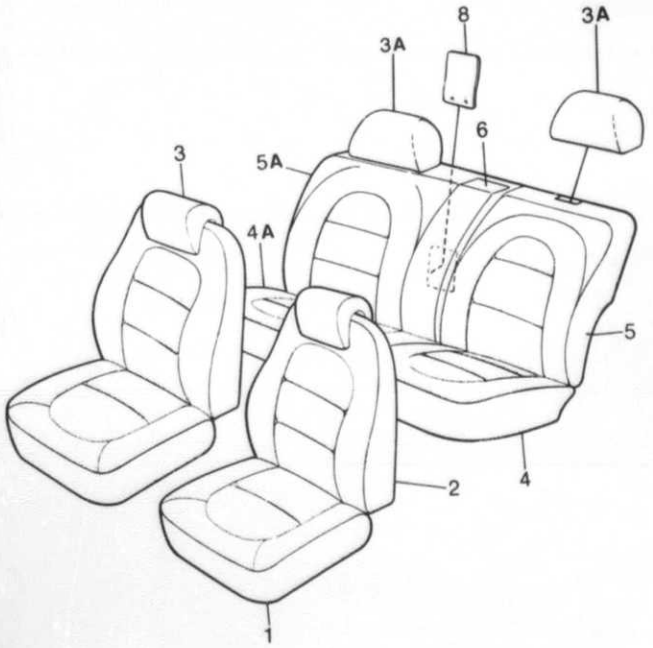

CAC94 F7586

Upholstery

5-C02

Covers 1996
Leather, Contour design

Klädsel

Klädselpåsar 1996
Läder, Contour design

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
			TRIM COLOUR L33				
1	45 30 515		210,431), LH	1	Seat cover	Sitspåse	6
1	• 47 99 011		210,432), LH	1	Seat cover	Sitspåse	6
1	45 30 523		210,431), RH	1	Seat cover	Sitspåse	6
1	• 47 99 029		210,432), RH	1	Seat cover	Sitspåse	6
2	45 30 531		210)	2	Back cover	Ryggpåse	6
3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
4	46 27 527		210), LH, 5CS	2	Seat cover	Sitspåse	6
4	46 27 675		210), 4D	1	Seat cover	Sitspåse	6
4A	46 27 519		210), RH, 5CS	1	Seat cover	Sitspåse	6
5	46 27 626		210), LH, 5CS	1	Back cover	Ryggpåse	6
5	46 27 725		210), 4D	1	Back cover	Ryggpåse	6
5A	46 27 618		210), RH, 5CS	1	Back cover	Ryggpåse	6
6	46 52 046		210)	1	Arm rest cover	Armstödspåse	
8	45 30 671		210), 4D	1	Hatch	Lucka	6
			TRIM COLOUR H33				
1	41 35 919		100,431), LH	1	Seat cover	Sitspåse	6
1	• 47 98 971		100,432), LH	1	Seat cover	Sitspåse	6
1	41 35 927		100,431), RH	1	Seat cover	Sitspåse	6
1	• 47 98 989		100,432), RH	1	Seat cover	Sitspåse	6
2	41 35 828		100)	2	Back cover	Ryggpåse	6
3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
4	46 27 485		100), LH, 5CS	1	Seat cover	Sitspåse	6
4	46 27 659		100), 4D	1	Seat cover	Sitspåse	6
4A	46 27 477		100), RH, 5CS	1	Seat cover	Sitspåse	6
5	46 27 584		100), LH, 5CS	1	Back cover	Ryggpåse	6
5	46 27 709		100), 4D	1	Back cover	Ryggpåse	6
5A	46 27 576		100), RH, 5CS	1	Back cover	Ryggpåse	6
6	46 52 038		100)	1	Arm rest cover	Armstödspåse	
8	40 47 932		100), 4D	1	Hatch	Lucka	6
			TRIM COLOUR K33				
1	44 14 314		110,431), LH	1	Seat cover	Sitspåse	
1	• 47 98 930		110,432), LH	1	Seat cover	Sitspåse	
1	44 14 348		110,431), RH	1	Seat cover	Sitspåse	
1	• 47 98 948		110,432), RH	1	Seat cover	Sitspåse	
2	44 14 322		110)	2	Back cover	Ryggpåse	
3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
4	46 27 444		110), LH, 5CS	1	Seat cover	Sitspåse	
4	46 27 634		110), 4D	1	Seat cover	Sitspåse	
4A	46 27 436		110), RH, 5CS	1	Seat cover	Sitspåse	
5	46 27 543		110), LH, 5CS	1	Back cover	Ryggpåse	
5	46 27 683		110), 4D	1	Back cover	Ryggpåse	
5A	46 27 535		110), RH, 5CS	1	Back cover	Ryggpåse	
6	46 52 012		110)	1	Arm rest cover	Armstödspåse	
8	44 15 964		110), 4D	1	Hatch	Lucka	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
431. Ch. -T1014007
432. Ch. T1014008-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

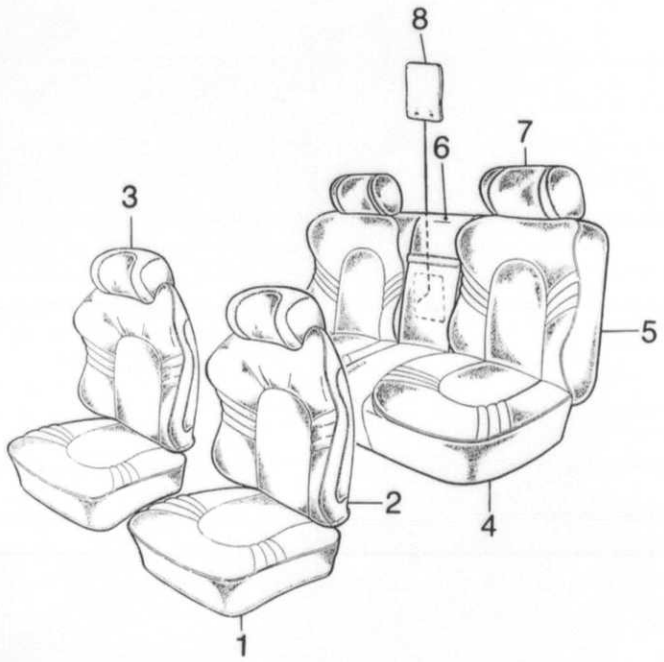

F8267 CAC94

1317	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Antal	Description	Benämning	S L
0010				TRIM COLOUR L35				
0020	1	46 31 859		210,438), LH	1	Seat cover	Sitspåse	6
0025	1	• 48 47 216		210,439), LH	1	Seat cover	Sitspåse	6
0030	1	46 31 883		210,438), RH	1	Seat cover	Sitspåse	6
0035	1	• 48 47 224		210,439), RH	1	Seat cover	Sitspåse	6
0040	2	46 31 867		210)	2	Back cover	Ryggpåse	6
0050	3	46 31 875		210)	2	Head restraint cover	Nackstödspåse	6
0060	4	46 31 925		210), LH, 5CS	1	Seat cover	Sitspåse	6
0070	4	46 31 917		210), RH, 5CS	1	Seat cover	Sitspåse	6
0075	4	46 50 610		210), 4D	1	Seat cover	Sitspåse	
0080	5	46 31 941		210), LH, 5CS	1	Back cover	Ryggpåse	6
0090	5	46 31 933		210), RH, 5CS	1	Back cover	Ryggpåse	6
0095	5	46 50 644		210), 4D	1	Back cover	Ryggpåse	
0100	6	46 50 677		210)	1	Arm rest cover	Armstödspåse	
0110	7	46 31 966		210)	2	Head restraint cover	Nackstödspåse	6
0115	8	45 30 671		210)	1	Hatch	Lucka	6
0120				TRIM COLOUR H35				
0130	1	43 15 206		100,438), LH	1	Seat cover	Sitspåse	
0135	1	• 48 47 190		100,439), LH	1	Seat cover	Sitspåse	
0140	1	43 15 503		100,438), RH	1	Seat cover	Sitspåse	
0145	1	• 48 47 208		100,439), RH	1	Seat cover	Sitspåse	
0150	2	43 15 214		100)	2	Back cover	Ryggpåse	
0160	3	43 15 222		100)	2	Head restraint cover	Nackstödspåse	
0170	4	43 15 560		100), LH, 5CS	1	Seat cover	Sitspåse	
0180	4	43 15 552		100), RH, 5CS	1	Seat cover	Sitspåse	
0185	4	46 50 602		100), 4D	1	Seat cover	Sitspåse	
0190	5	46 29 481		100), LH, 5CS	1	Back cover	Ryggpåse	
0200	5	46 29 473		100), RH, 5CS	1	Back cover	Ryggpåse	
0205	5	46 50 636		100), 4D	1	Back cover	Ryggpåse	
0210	6	46 50 669		100)	1	Arm rest cover	Armstödspåse	
0220	7	43 15 644		100)	2	Head restraint cover	Nackstödspåse	
0225	8	40 47 932		100)	1	Hatch	Lucka	6
0230				TRIM COLOUR K35				
0240	1	43 14 555		110,438), LH	1	Seat cover	Sitspåse	6
0245	1	• 48 47 174		110,439), LH	1	Seat cover	Sitspåse	6
0250	1	43 14 589		110,438), RH	1	Seat cover	Sitspåse	6
0255	1	• 48 47 182		110,439), RH	1	Seat cover	Sitspåse	6
0260	2	43 14 563		110)	2	Back cover	Ryggpåse	6
0270	3	43 14 571		110)	2	Head restraint cover	Nackstödspåse	6
0280	4	43 15 529		110), LH, 5CS	1	Seat cover	Sitspåse	6
0290	4	43 15 511		110), RH, 5CS	1	Seat cover	Sitspåse	6
0295	4	46 50 594		110), 4D	1	Seat cover	Sitspåse	
0300	5	46 29 457		110), LH, 5CS	1	Back cover	Ryggpåse	6
0310	5	46 29 440		110), RH, 5CS	1	Back cover	Ryggpåse	6
0315	5	46 50 628		110), 4D	1	Back cover	Ryggpåse	
0320	6	46 50 651		110)	1	Arm rest cover	Armstödspåse	
0330	7	43 15 602		110)	2	Head restraint cover	Nackstödspåse	6
0340	8	44 15 964		110)	1	Hatch	Lucka	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
438. Ch. -T1024420
439. Ch. T1024421-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

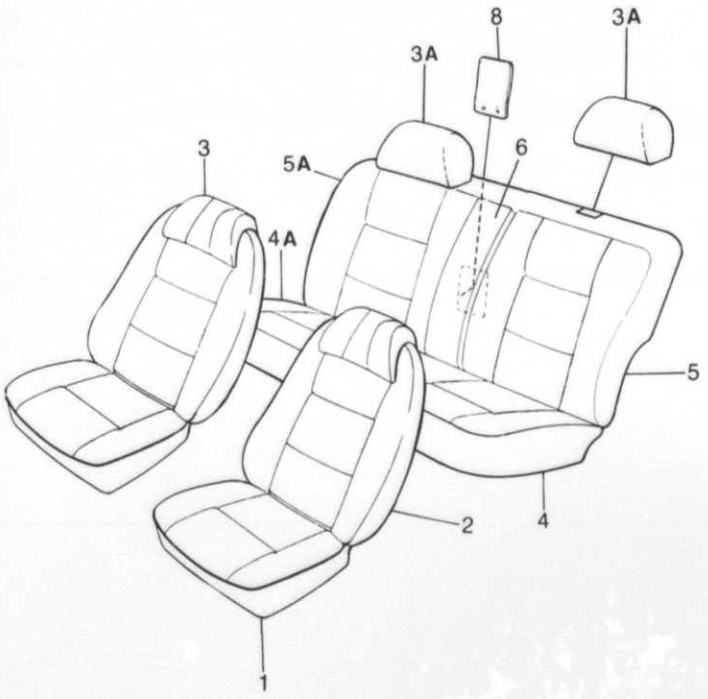

F8268 CAC94

1319	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				TRIM COLOUR J16				
0025	1	47 99 136		210), LH	1	Seat cover	Sitspåse	6
0035	1	47 99 144		210), RH	1	Seat cover	Sitspåse	6
0040	2	46 50 271		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 50 370		210), LH, 5CS	1	Seat cover	Sitspåse	6
0080	4	46 50 446		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	46 50 362		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 50 396		210), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	46 50 453		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	46 50 388		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	46 51 956		210)	1	Arm rest cover	Armstödspåse	
0140	8	42 92 777		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR H16				
0165	1	47 99 094		100), LH	1	Seat cover	Sitspåse	6
0175	1	47 99 102		100), RH	1	Seat cover	Sitspåse	6
0180	2	46 50 248		100)	2	Back cover	Ryggpåse	6
0190	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	6
0200	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
0210	4	46 50 339		100), LH, 5CS	1	Seat cover	Sitspåse	6
0220	4	46 50 420		100), 4D	1	Seat cover	Sitspåse	6
0230	4A	46 50 321		100), RH, 5CS	1	Seat cover	Sitspåse	6
0240	5	46 50 354		100), LH, 5CS	1	Back cover	Ryggpåse	6
0250	5	46 50 438		100), 4D	1	Back cover	Ryggpåse	6
0260	5A	46 50 347		100), RH, 5CS	1	Back cover	Ryggpåse	6
0270	6	46 51 949		100)	1	Arm rest cover	Armstödspåse	
0280	8	40 47 932		100), 4D	1	Hatch	Lucka	6
0440				TRIM COLOUR K16				
0455	1	47 99 052		110), LH	1	Seat cover	Sitspåse	6
0465	1	47 99 060		110), RH	1	Seat cover	Sitspåse	6
0470	2	47 17 492		110)	2	Back cover	Ryggpåse	6
0480	3	44 14 256		110)	2	Head restraint cover	Nackstödspåse	
0490	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0500	4	47 17 518		110), LH, 5CS	1	Seat cover	Sitspåse	6
0510	4	47 17 542		110), 4D	1	Seat cover	Sitspåse	6
0520	4A	47 17 500		110), RH, 5CS	1	Seat cover	Sitspåse	6
0530	5	47 17 534		110), LH, 5CS	1	Back cover	Ryggpåse	6
0540	5	47 17 559		110), 4D	1	Back cover	Ryggpåse	6
0550	5A	47 17 526		110), RH, 5CS	1	Back cover	Ryggpåse	6
0560	6	46 51 931		110)	1	Arm rest cover	Armstödspåse	
0570	8	44 15 964		110), 4D	1	Hatch	Lucka	

100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04


Upholstery

5 -C08

Covers 1997
Leather, Contour design

Klädsel

Klädselpåsar 1997
Läder, Contour design

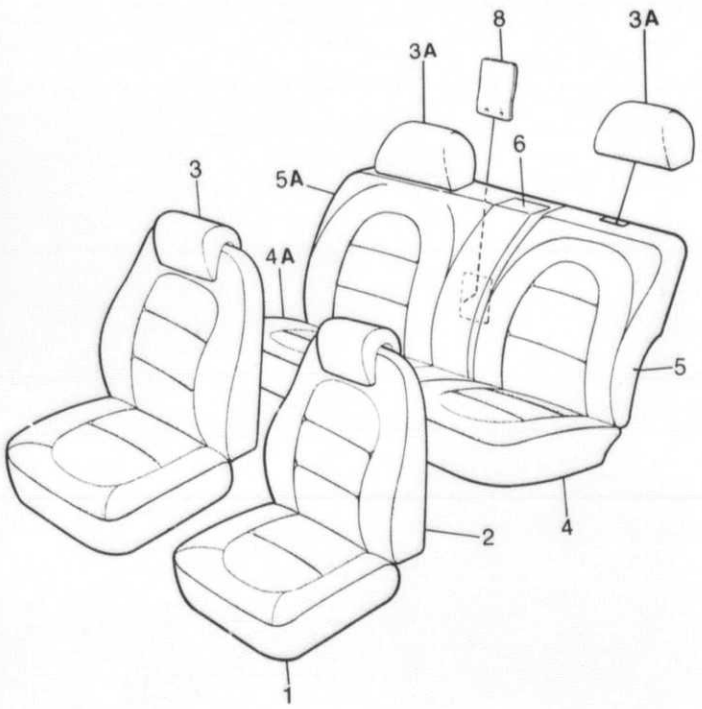

F8269 CAC94

1321	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Antal	Description	Benämning	S L
0010				TRIM COLOUR L33				
0020	1	47 99 011		210), LH	1	Seat cover	Sitspåse	6
0030	1	47 99 029		210), RH	1	Seat cover	Sitspåse	6
0040	2	45 30 531		210)	2	Back cover	Ryggpåse	6
0050	3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 27 527		210), LH, 5CS	2	Seat cover	Sitspåse	6
0080	4	46 27 675		210), 4D	1	Seat cover	Sitspåse	6
0090	4A	46 27 519		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 27 626		210), LH, 5CS	1	Back cover	Ryggpåse	6
0110	5	46 27 725		210), 4D	1	Back cover	Ryggpåse	6
0120	5A	46 27 618		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	46 52 046		210)	1	Arm rest cover	Armstödspåse	
0140	8	45 30 671		210), 4D	1	Hatch	Lucka	6
0150				TRIM COLOUR L37				
0160	1	• 47 62 043		210), LH	1	Seat cover	Sitspåse	
0170	1	• 47 62 035		210), RH	1	Seat cover	Sitspåse	
0180	2	• 47 62 027		210)	2	Back cover	Ryggpåse	6
0190	3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
0200	3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
0210	4	• 47 62 092		210), LH, 5CS	2	Seat cover	Sitspåse	6
0220	4A	• 47 62 084		210), RH, 5CS	1	Seat cover	Sitspåse	6
0230	5	• 47 62 068		210), LH, 5CS	1	Back cover	Ryggpåse	6
0240	5A	• 47 62 050		210), RH, 5CS	1	Back cover	Ryggpåse	6
0250	6	• 47 62 076		210)	1	Arm rest cover	Armstödspåse	
0260				TRIM COLOUR H33				
0270	1	47 98 971		100), LH	1	Seat cover	Sitspåse	6
0280	1	47 98 989		100), RH	1	Seat cover	Sitspåse	6
0290	2	41 35 828		100)	2	Back cover	Ryggpåse	6
0300	3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
0310	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0320	4	46 27 485		100), LH, 5CS	1	Seat cover	Sitspåse	6
0330	4	46 27 659		100), 4D	1	Seat cover	Sitspåse	6
0340	4A	46 27 477		100), RH, 5CS	1	Seat cover	Sitspåse	6
0350	5	46 27 584		100), LH, 5CS	1	Back cover	Ryggpåse	6
0360	5	46 27 709		100), 4D	1	Back cover	Ryggpåse	6
0370	5A	46 27 576		100), RH, 5CS	1	Back cover	Ryggpåse	6
0380	6	46 52 038		100)	1	Arm rest cover	Armstödspåse	
0390	8	40 47 932		100), 4D	1	Hatch	Lucka	6
0400				TRIM COLOUR K33				
0410	1	47 98 930		110), LH	1	Seat cover	Sitspåse	
0420	1	47 98 948		110), RH	1	Seat cover	Sitspåse	
0430	2	44 14 322		110)	2	Back cover	Ryggpåse	
0440	3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
0450	3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
0460	4	46 27 444		110), LH, 5CS	1	Seat cover	Sitspåse	
0470	4	46 27 634		110), 4D	1	Seat cover	Sitspåse	
0480	4A	46 27 436		110), RH, 5CS	1	Seat cover	Sitspåse	
0490	5	46 27 543		110), LH, 5CS	1	Back cover	Ryggpåse	
0500	5	46 27 683		110), 4D	1	Back cover	Ryggpåse	
0510	5A	46 27 535		110), RH, 5CS	1	Back cover	Ryggpåse	
0520	6	46 52 012		110)	1	Arm rest cover	Armstödspåse	
0530	8	44 15 964		110), 4D	1	Hatch	Lucka	

100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04


Upholstery

5-C10

Covers 1997
Leather, Contour design

Klädsel

Klädselpåsar 1997
Läder, Contour design

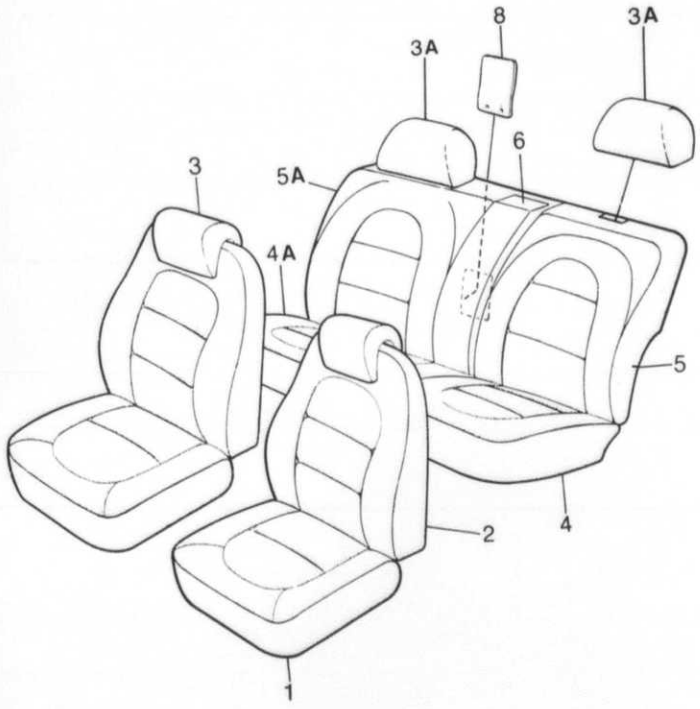

F8269 CAC94

1321	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540				TRIM COLOUR K37				
0550	1	• 47 61 938		110), LH	1	Seat cover	Sitspåse	
0560	1	• 47 61 946		110), RH	1	Seat cover	Sitspåse	
0570	2	• 47 61 920		110)	2	Back cover	Ryggpåse	6
0580	3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
0590	3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
0600	4	• 47 62 019		110), LH, 5CS	1	Seat cover	Sitspåse	6
0610	4A	• 47 62 001		110), RH, 5CS	1	Seat cover	Sitspåse	6
0620	5	• 47 61 987		110), LH, 5CS	1	Back cover	Ryggpåse	6
0630	5A	• 47 61 979		110), RH, 5CS	1	Back cover	Ryggpåse	6
0640	6	• 47 61 995		110)	1	Arm rest cover	Armstödspåse	


110. Black Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

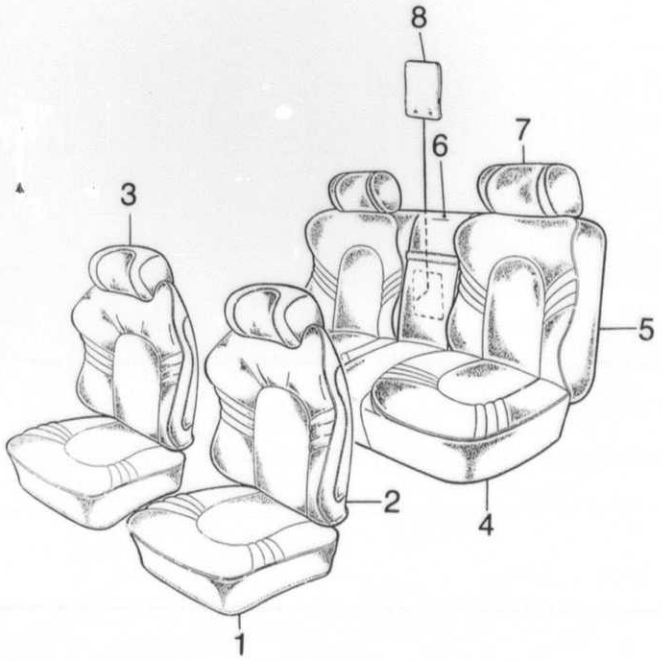

F8270 CAC94

1323	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR L35				
0020	1	48 47 216		210), LH	1	Seat cover	Sitspåse	6
0030	1	48 47 224		210), RH	1	Seat cover	Sitspåse	6
0040	2	46 31 867		210)	2	Back cover	Ryggpåse	6
0050	3	46 31 875		210)	2	Head restraint cover	Nackstödspåse	6
0060	4	• 48 01 189		210), LH, 5CS	1	Seat cover	Sitspåse	
0070	4	• 48 01 197		210), RH, 5CS	1	Seat cover	Sitspåse	
0075	4	46 50 610		210), 4D	1	Seat cover	Sitspåse	
0080	5	• 48 01 221		210), LH, 5CS	1	Back cover	Ryggpåse	
0090	5	• 48 01 239		210), RH, 5CS	1	Back cover	Ryggpåse	
0095	5	46 50 644		210), 4D	1	Back cover	Ryggpåse	
0100	6	46 50 677		210)	1	Arm rest cover	Armstödspåse	
0110	7	46 31 966		210)	2	Head restraint cover	Nackstödspåse	6
0115	8	45 30 671		210)	1	Hatch	Lucka	6
0120				TRIM COLOUR H35				
0130	1	48 47 190		100), LH	1	Seat cover	Sitspåse	
0140	1	48 47 208		100), RH	1	Seat cover	Sitspåse	
0150	2	43 15 214		100)	2	Back cover	Ryggpåse	
0160	3	43 15 222		100)	2	Head restraint cover	Nackstödspåse	
0170	4	• 48 01 643		100), LH, 5CS	1	Seat cover	Sitspåse	
0180	4	• 48 01 650		100), RH, 5CS	1	Seat cover	Sitspåse	
0185	4	46 50 602		100), 4D	1	Seat cover	Sitspåse	
0190	5	• 48 01 668		100), LH, 5CS	1	Back cover	Ryggpåse	
0200	5	• 48 01 676		100), RH, 5CS	1	Back cover	Ryggpåse	
0205	5	46 50 636		100), 4D	1	Back cover	Ryggpåse	
0210	6	46 50 669		100)	1	Arm rest cover	Armstödspåse	
0220	7	43 15 644		100)	2	Head restraint cover	Nackstödspåse	
0225	8	40 47 932		100)	1	Hatch	Lucka	6
0230				TRIM COLOUR K35				
0240	1	48 47 174		110), LH	1	Seat cover	Sitspåse	6
0250	1	48 47 182		110), RH	1	Seat cover	Sitspåse	6
0260	2	43 14 563		110)	2	Back cover	Ryggpåse	6
0270	3	43 14 571		110)	2	Head restraint cover	Nackstödspåse	6
0280	4	• 48 01 163		110), LH, 5CS	1	Seat cover	Sitspåse	
0290	4	• 48 01 171		110), RH, 5CS	1	Seat cover	Sitspåse	
0295	4	46 50 594		110), 4D	1	Seat cover	Sitspåse	
0300	5	• 48 01 205		110), LH, 5CS	1	Back cover	Ryggpåse	
0310	5	• 48 01 213		110), RH, 5CS	1	Back cover	Ryggpåse	
0315	5	46 50 628		110), 4D	1	Back cover	Ryggpåse	
0320	6	46 50 651		110)	1	Arm rest cover	Armstödspåse	
0330	7	43 15 602		110)	2	Head restraint cover	Nackstödspåse	6
0340	8	44 15 964		110)	1	Hatch	Lucka	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

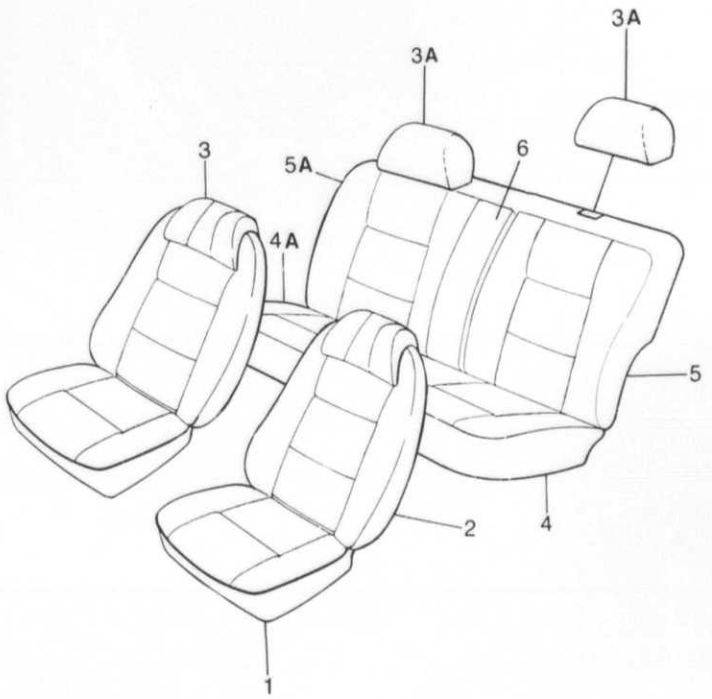

F8643 CAC94

Upholstery
5-C14
Covers 1998- Textile

Klädsel
Klädselpåsar 1998- Textil

1324	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16				
0025	1	47 99 136		210), LH	1	Seat cover	Sitspåse	6
0035	1	47 99 144		210), RH	1	Seat cover	Sitspåse	6
0040	2	46 50 271		210)	2	Back cover	Ryggpåse	6
0050	3	44 74 029		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	43 17 061		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 50 370		210), LH, 5CS	1	Seat cover	Sitspåse	6
0090	4A	46 50 362		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 50 396		210), LH, 5CS	1	Back cover	Ryggpåse	6
0120	5A	46 50 388		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	46 51 956		210)	1	Arm rest cover	Armstödspåse	
0150				TRIM COLOUR H16				
0165	1	47 99 094		100), LH	1	Seat cover	Sitspåse	6
0175	1	47 99 102		100), RH	1	Seat cover	Sitspåse	6
0180	2	46 50 248		100)	2	Back cover	Ryggpåse	6
0190	3	44 74 037		100)	2	Head restraint cover	Nackstödspåse	6
0200	3A	43 16 907		100)	2	Head restraint cover	Nackstödspåse	6
0210	4	46 50 339		100), LH, 5CS	1	Seat cover	Sitspåse	6
0230	4A	46 50 321		100), RH, 5CS	1	Seat cover	Sitspåse	6
0240	5	46 50 354		100), LH, 5CS	1	Back cover	Ryggpåse	6
0260	5A	46 50 347		100), RH, 5CS	1	Back cover	Ryggpåse	6
0270	6	46 51 949		100)	1	Arm rest cover	Armstödspåse	
0440				TRIM COLOUR K16				
0455	1	47 99 052		110), LH	1	Seat cover	Sitspåse	6
0465	1	47 99 060		110), RH	1	Seat cover	Sitspåse	6
0470	2	47 17 492		110)	2	Back cover	Ryggpåse	6
0480	3	44 14 256		110)	2	Head restraint cover	Nackstödspåse	
0490	3A	44 15 956		110)	2	Head restraint cover	Nackstödspåse	
0500	4	47 17 518		110), LH, 5CS	1	Seat cover	Sitspåse	6
0520	4A	47 17 500		110), RH, 5CS	1	Seat cover	Sitspåse	6
0530	5	47 17 534		110), LH, 5CS	1	Back cover	Ryggpåse	6
0550	5A	47 17 526		110), RH, 5CS	1	Back cover	Ryggpåse	6
0560	6	46 51 931		110)	1	Arm rest cover	Armstödspåse	


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

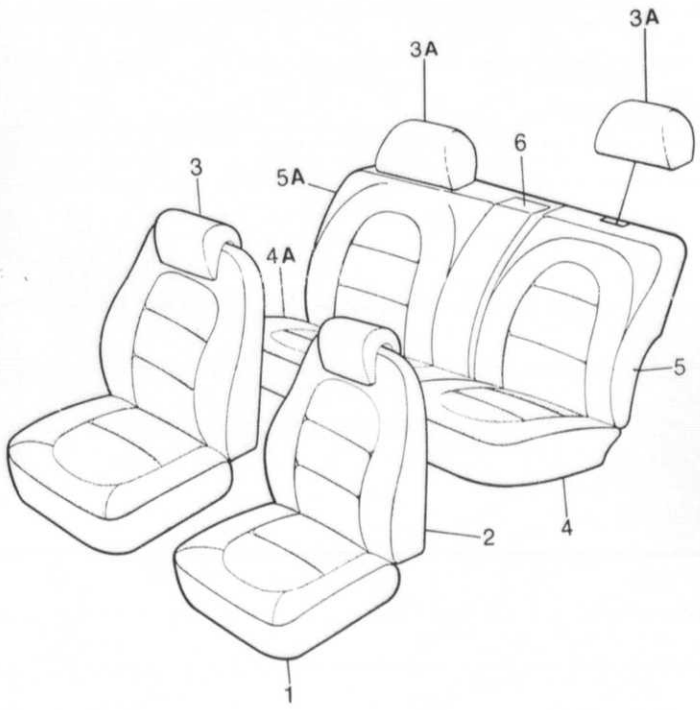

F8644 CAC94

Upholstery

5-C16

Covers 1998-
Leather, Contour design

Klädsel

Klädselpåsar 1998-
Läder, Contour design

1325	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR L33				
0020	1	47 99 011		210), LH	1	Seat cover	Sitspåse	6
0030	1	47 99 029		210), RH	1	Seat cover	Sitspåse	6
0040	2	45 30 531		210)	2	Back cover	Ryggpåse	6
0050	3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
0060	3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
0070	4	46 27 527		210), LH, 5CS	2	Seat cover	Sitspåse	6
0090	4A	46 27 519		210), RH, 5CS	1	Seat cover	Sitspåse	6
0100	5	46 27 626		210), LH, 5CS	1	Back cover	Ryggpåse	6
0120	5A	46 27 618		210), RH, 5CS	1	Back cover	Ryggpåse	6
0130	6	46 52 046		210)	1	Arm rest cover	Armstödspåse	
0150				TRIM COLOUR L37				
0160	1	47 62 043		210), LH	1	Seat cover	Sitspåse	
0170	1	47 62 035		210), RH	1	Seat cover	Sitspåse	
0180	2	47 62 027		210)	2	Back cover	Ryggpåse	6
0190	3	45 30 549		210)	2	Head restraint cover	Nackstödspåse	6
0200	3A	45 30 630		210)	2	Head restraint cover	Nackstödspåse	6
0210	4	47 62 092		210), LH, 5CS	2	Seat cover	Sitspåse	6
0220	4A	47 62 084		210), RH, 5CS	1	Seat cover	Sitspåse	6
0230	5	47 62 068		210), LH, 5CS	1	Back cover	Ryggpåse	6
0240	5A	47 62 050		210), RH, 5CS	1	Back cover	Ryggpåse	6
0250	6	47 62 076		210)	1	Arm rest cover	Armstödspåse	
0260				TRIM COLOUR H33				
0270	1	47 98 971		100), LH	1	Seat cover	Sitspåse	6
0280	1	47 98 989		100), RH	1	Seat cover	Sitspåse	6
0290	2	41 35 828		100)	2	Back cover	Ryggpåse	6
0300	3	44 74 151		100)	2	Head restraint cover	Nackstödspåse	6
0310	3A	40 53 492		100)	2	Head restraint cover	Nackstödspåse	6
0320	4	46 27 485		100), LH, 5CS	1	Seat cover	Sitspåse	6
0340	4A	46 27 477		100), RH, 5CS	1	Seat cover	Sitspåse	6
0350	5	46 27 584		100), LH, 5CS	1	Back cover	Ryggpåse	6
0370	5A	46 27 576		100), RH, 5CS	1	Back cover	Ryggpåse	6
0380	6	46 52 038		100)	1	Arm rest cover	Armstödspåse	
0400				TRIM COLOUR K33				
0410	1	47 98 930		110), LH	1	Seat cover	Sitspåse	
0420	1	47 98 948		110), RH	1	Seat cover	Sitspåse	
0430	2	44 14 322		110)	2	Back cover	Ryggpåse	
0440	3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
0450	3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
0460	4	46 27 444		110), LH, 5CS	1	Seat cover	Sitspåse	
0480	4A	46 27 436		110), RH, 5CS	1	Seat cover	Sitspåse	
0490	5	46 27 543		110), LH, 5CS	1	Back cover	Ryggpåse	
0510	5A	46 27 535		110), RH, 5CS	1	Back cover	Ryggpåse	
0520	6	46 52 012		110)	1	Arm rest cover	Armstödspåse	
0540				TRIM COLOUR K37				
0550	1	47 61 938		110), LH	1	Seat cover	Sitspåse	
0560	1	47 61 946		110), RH	1	Seat cover	Sitspåse	
0570	2	47 61 920		110)	2	Back cover	Ryggpåse	6
0580	3	44 14 330		110)	2	Head restraint cover	Nackstödspåse	
0590	3A	44 74 599		110)	2	Head restraint cover	Nackstödspåse	
0600	4	47 62 019		110), LH, 5CS	1	Seat cover	Sitspåse	6
0610	4A	47 62 001		110), RH, 5CS	1	Seat cover	Sitspåse	6
0620	5	47 61 987		110), LH, 5CS	1	Back cover	Ryggpåse	6
0630	5A	47 61 979		110), RH, 5CS	1	Back cover	Ryggpåse	6
0640	6	47 61 995		110)	1	Arm rest cover	Armstödspåse	


100. Light gray Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

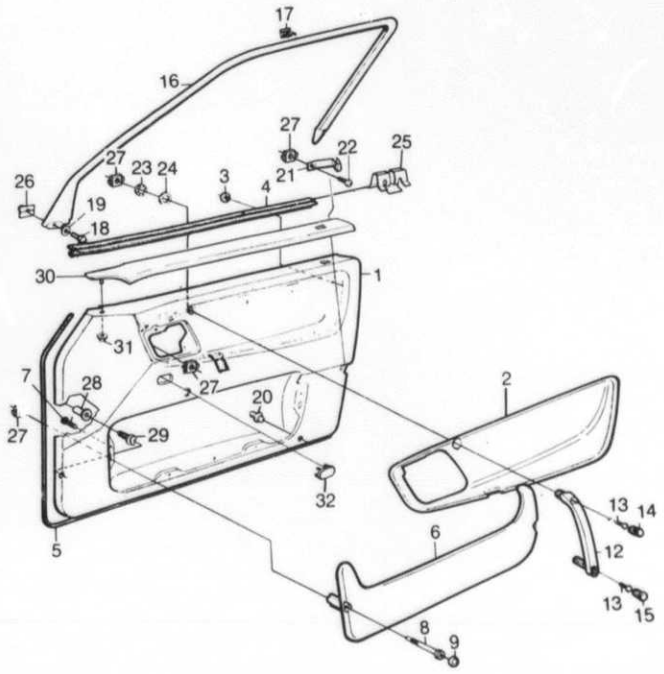

F6543 CAC94

Upholstery

5-C18 Door trim 1994 Front door

Klädsel

Dörrklädsel 1994 Framdörr

1329	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J44,J33, L33				
0020	1	44 87 807		210), LH, LHD	1	Door trim	Dörrklädsel	
0030	1	44 87 864		210), RH, LHD	1	Door trim	Dörrklädsel	
0040	1	44 87 922		210), LH, RHD	1	Door trim	Dörrklädsel	
0050	1	44 87 989		210), RH, RHD	1	Door trim	Dörrklädsel	
0060	2	44 97 046		210), LH	1	.Arm rest	.Armstöd	
0070	2	44 97 103		210), RH	1	.Arm rest	.Armstöd	
0080				TRIM COLOUR J93				
0090	1	42 69 064		210), LH, LHD	1	Door trim	Dörrklädsel	6
0100	1	42 69 072		210), RH, LHD	1	Door trim	Dörrklädsel	6
0110	1	42 69 619		210), LH, RHD	1	Door trim	Dörrklädsel	6
0120	1	42 69 627		210), RH, RHD	1	Door trim	Dörrklädsel	6
0130	2	42 69 106		210), LH	1	.Arm rest	.Armstöd	6
0140	2	42 69 114		210), RH	1	.Arm rest	.Armstöd	6
0150				TRIM COLOUR G44, G33				
0160	1	44 87 781		90), LH, LHD	1	Door trim	Dörrklädsel	
0170	1	44 87 849		90), RH, LHD	1	Door trim	Dörrklädsel	
0180	1	44 87 906		90), LH, RHD	1	Door trim	Dörrklädsel	
0190	1	44 87 963		90), RH, RHD	1	Door trim	Dörrklädsel	
0200	2	44 97 020		90), LH	1	.Arm rest	.Armstöd	
0210	2	44 97 087		90), RH	1	.Arm rest	.Armstöd	
0220				TRIM COLOUR H44, H33				
0230	1	44 87 799		100), LH, LHD	1	Door trim	Dörrklädsel	
0240	1	44 87 856		100), RH, LHD	1	Door trim	Dörrklädsel	
0250	1	44 87 914		100), LH, RHD	1	Door trim	Dörrklädsel	
0260	1	44 87 971		100), RH, RHD	1	Door trim	Dörrklädsel	
0270	2	44 97 038		100), LH	1	.Arm rest	.Armstöd	
0280	2	44 97 095		100), RH	1	.Arm rest	.Armstöd	
0290				TRIM COLOUR H35				
0300	1	44 86 080		100), LH, LHD	1	Door trim	Dörrklädsel	
0310	1	44 86 098		100), RH, LHD	1	Door trim	Dörrklädsel	
0320	1	44 86 106		100), LH, RHD	1	Door trim	Dörrklädsel	
0330	1	44 86 114		100), RH, RHD	1	Door trim	Dörrklädsel	
0340	2	44 86 205		100), LH	1	.Arm rest	.Armstöd	
0350	2	44 86 213		100), RH	1	.Arm rest	.Armstöd	
0360				TRIM COLOUR K44, K33				
0370	1	44 87 815		110), LH, LHD	1	Door trim	Dörrklädsel	
0380	1	44 87 872		110), RH, LHD	1	Door trim	Dörrklädsel	
0390	1	44 87 930		110), LH, RHD	1	Door trim	Dörrklädsel	
0400	1	44 87 997		110), RH, RHD	1	Door trim	Dörrklädsel	
0410	2	44 97 053		110), LH	1	.Arm rest	.Armstöd	
0420	2	44 97 111		110), RH	1	.Arm rest	.Armstöd	
0430				TRIM COLOUR K64				
0440	1	42 70 443		110), LH, LHD	1	Door trim	Dörrklädsel	
0450	1	42 70 450		110), RH, LHD	1	Door trim	Dörrklädsel	5
0460	1	42 70 468		110), LH, RHD	1	Door trim	Dörrklädsel	5
0470	1	42 70 476		110), RH, RHD	1	Door trim	Dörrklädsel	5
0480	2	42 66 722		110), LH	1	.Arm rest	.Armstöd	6
0490	2	42 66 714		110), RH	1	.Arm rest	.Armstöd	6
0500				TRIM COLOUR K35				
0510	1	44 86 163		110), LH, LHD	1	Door trim	Dörrklädsel	
0520	1	44 86 171		110), RH, LHD	1	Door trim	Dörrklädsel	
0530	1	44 86 189		110), LH, RHD	1	Door trim	Dörrklädsel	
0540	1	*44 86 197*		110), RH, RHD NLS - USE 4486072	1	Door trim	Dörrklädsel	
0550	2	42 73 934		110), LH	1	.Arm rest	.Armstöd	6
0560	2	42 73 942		110), RH	1	.Arm rest	.Armstöd	6
0570								

90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 –C20

Door trim 1994
Front door

Dörrklädsel 1994
Framdörr

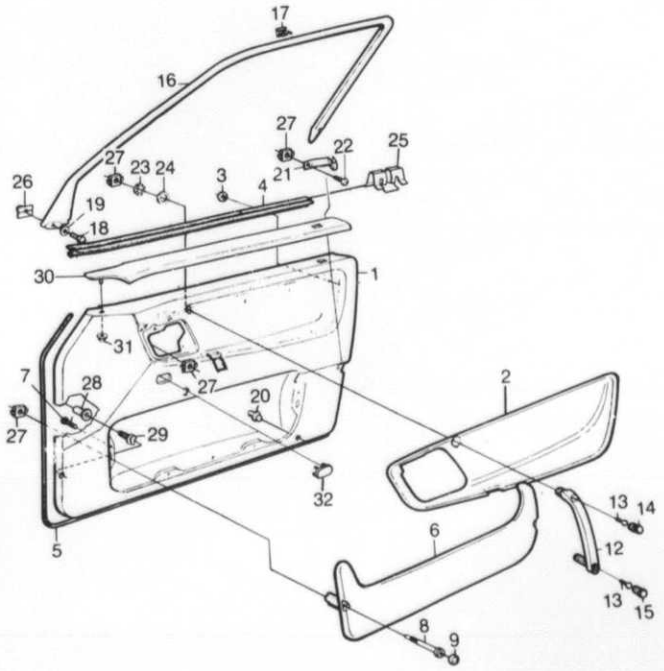

F6543 CAC94

1329	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580				TRIM COLOUR K93				
0590	1	44 86 122		110), LH, LHD	1	Door trim	Dörrklädsel	
0600	1	44 86 130		110), RH, LHD	1	Door trim	Dörrklädsel	
0610	1	44 86 148		110), LH, RHD	1	Door trim	Dörrklädsel	
0620	1	44 86 155		110), RH, RHD	1	Door trim	Dörrklädsel	
0630	2	44 86 221		110), LH	1	,Arm rest	,Armstöd	
0640	2	44 86 239		110), RH	1	,Arm rest	,Armstöd	
0650								
0660	3	96 95 081			X	,Washer	,Bricka	5
0670	4	96 60 986		LH	1	,Sealing strip	,Tätningslist	6
0680	4	96 60 838		RH	1	,Sealing strip	,Tätningslist	6
0690	5	98 95 699			2	,Strip	,List	6
0700	6	42 63 638		210), LH	1	Pocket	Ficka	6
0710	6	42 63 620		210), RH	1	Pocket	Ficka	6
0720	6	95 82 065		90), LH	1	Pocket	Ficka	6
0730	6	95 82 164		90), RH	1	Pocket	Ficka	6
0740	6	41 35 489		100), LH	1	Pocket	Ficka	6
0750	6	41 35 471		100), RH	1	Pocket	Ficka	6
0760	6	42 70 542		110), LH	1	Pocket	Ficka	
0770	6	42 70 559		110), RH	1	Pocket	Ficka	
0780								
0790	7	79 71 393			8	Screw	Skruv	5
0800	8	97 80 156			4	Screw	Skruv	5
0810	9	42 63 471		210)	4	Cover	Täcklock	5
0820	9	42 68 058		110)	4	Cover	Täcklock	
0830	9	95 82 313		90)	4	Cover	Täcklock	5
0840	9	41 33 427		100)	4	Cover	Täcklock	5
0850	12	42 63 612		210), LH	1	Handle	Handtag	5
0860	12	42 63 604		210), RH	1	Handle	Handtag	5
0870	12	42 70 526		110), LH	1	Handle	Handtag	
0880	12	42 70 534		110), RH	1	Handle	Handtag	
0890	12	95 82 057		90), LH	1	Handle	Handtag	5
0900	12	95 82 156		90), RH	1	Handle	Handtag	5
0910	12	41 29 250		100), LH	1	Handle	Handtag	5
0920	12	41 29 268		100), RH	1	Handle	Handtag	5
0930								
0940	13	73 99 264		341)	4	Screw	Skruv	5
0950	13	79 78 372		342)	4	Screw	Skruv	5
0960	14	42 63 455		210)	2	Cover washer	Täckbricka	5
0970	14	42 68 033		110)	2	Cover washer	Täckbricka	
0980	14	95 82 297		90)	2	Cover washer	Täckbricka	5
0990	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1000								
1010	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1020	15	42 68 041		110)	2	Cover washer	Täckbricka	
1030	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1040	15	41 29 284		100)	2	Cover washer	Täckbricka	5
1050								
1060	16	42 68 223		LH	1	Upholstery	Klädsel	6
1070	16	42 68 215		RH	1	Upholstery	Klädsel	6
1080	17	96 60 143			22	Clamp	Klammer	5
1090	18	*79 72 896*		NLS – USE 7965684, 8073090	2	Screw	Skruv	5
1090								
1100	19	96 60 077			2	Washer	Bricka	5
1110	20	97 96 939			2	Clamp	Klämma	6
1120	21	97 96 616			2	Clamp	Klämma	6
1130	22	73 99 264		341)	4	Screw	Skruv	5


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
341. Ch. -R1021629
342. Ch. R1021630-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

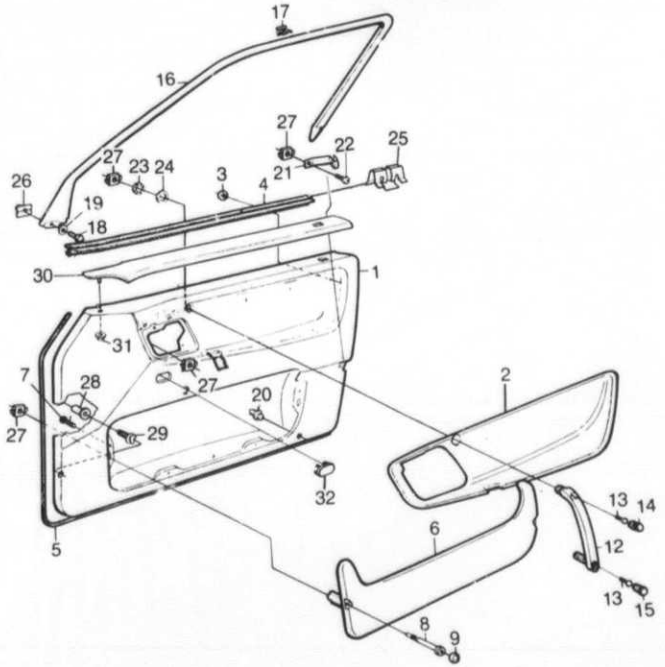

F6543 CAC94

1329	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1140	22	79 78 372		342)	4	Screw	Skruv	5
1150	23	97 97 200			2	Washer	Bricka	5
1160	24	*96 71 389*		NLS – USE 9891391	2	Washer	Bricka	5
1170	25	42 70 047			8	Clamp	Klämma	3
1180	26	96 71 033			2	Clamp	Klämma	6
1190	27	79 74 231			X	Cage nut	Korgmutter	5
1200	28	95 45 906			2	Sleeve	Hylsa	5
1210	29	95 45 898			2	Upholstery clip	Klädselfäste	5
1220	30	86 69 210		LH	1	Wooden insert	Trälinlägg	6
1230	30	86 69 202		RH	1	Wooden insert	Trälinlägg	6
1240	31	73 98 423			8	Nut	Mutter	5
1250	32	45 12 984		210)	1	Cover	Täcklock	
1260	32	45 12 992		90)	1	Cover	Täcklock	
1270	32	45 12 976		100)	1	Cover	Täcklock	
1280		45 12 968		110)	1	Cover	Täcklock	


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
342. Ch. R1021630–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

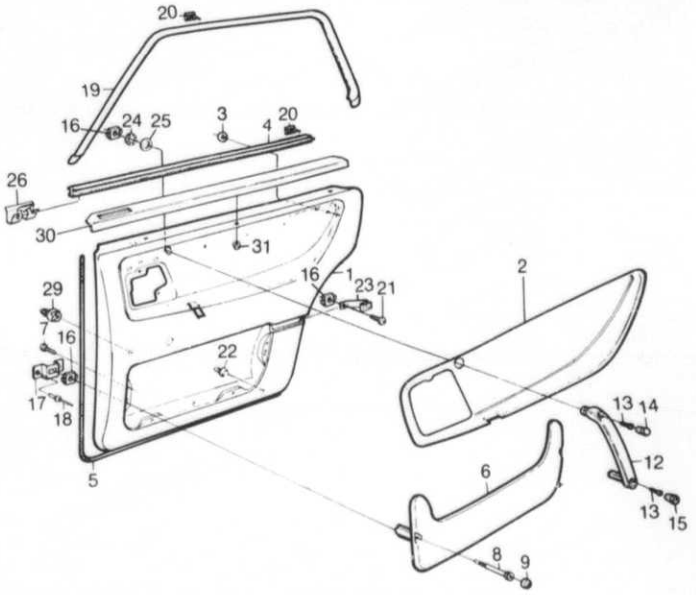

F6544 CAC94

Upholstery

5-C24

Door trim 1994
Rear door

Klädsel

Dörrklädsel 1994
Bakdörr

1330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J44,J33, L33				
0020	1	44 97 160		210), LH	1	Door trim	Dörrklädsel	
0030	1	44 97 228		210), RH	1	Door trim	Dörrklädsel	
0040	1	44 97 285		210,18), LH	1	Door trim	Dörrklädsel	
0050	1	44 97 343		210,18), RH	1	Door trim	Dörrklädsel	
0060	2	44 97 400		210), LH	1	.Arm rest	.Armstöd	
0070	2	44 97 467		210), RH	1	.Arm rest	.Armstöd	
0080				TRIM COLOUR J93				
0090	1	42 69 262		210,18), LH	1	Door trim	Dörrklädsel	6
0100	1	42 69 270		210,18), RH	1	Door trim	Dörrklädsel	6
0110	2	42 69 304		210), LH	1	.Arm rest	.Armstöd	6
0120	2	42 69 312		210), RH	1	.Arm rest	.Armstöd	6
0130				TRIM COLOUR G44, G33				
0140	1	44 97 145		90), LH	1	Door trim	Dörrklädsel	
0150	1	44 97 202		90), RH	1	Door trim	Dörrklädsel	
0160	1	44 97 269		90,18), LH	1	Door trim	Dörrklädsel	
0170	1	44 97 327		90,18), RH	1	Door trim	Dörrklädsel	
0180	2	44 97 384		90), LH	1	.Arm rest	.Armstöd	
0190	2	44 97 442		90), RH	1	.Arm rest	.Armstöd	
0200				TRIM COLOUR H44, H33				
0210	1	44 97 152		100), LH	1	Door trim	Dörrklädsel	
0220	1	44 97 210		100), RH	1	Door trim	Dörrklädsel	
0230	1	44 97 277		100,18), LH	1	Door trim	Dörrklädsel	
0240	1	44 97 335		100,18), RH	1	Door trim	Dörrklädsel	
0250	2	44 97 392		100), LH	1	.Arm rest	.Armstöd	
0260	2	44 97 459		100), RH	1	.Arm rest	.Armstöd	
0270				TRIM COLOUR H35				
0280	1	44 86 338		100,18), LH	1	Door trim	Dörrklädsel	
0290	1	44 86 346		100,18), RH	1	Door trim	Dörrklädsel	
0300	2	44 86 429		100), LH	1	.Arm rest	.Armstöd	6
0310	2	44 86 437		100), RH	1	.Arm rest	.Armstöd	6
0320				TRIM COLOUR K44, K33				
0330	1	44 97 178		110), LH	1	Door trim	Dörrklädsel	
0340	1	44 97 236		110), RH	1	Door trim	Dörrklädsel	
0350	1	44 97 293		110,18), LH	1	Door trim	Dörrklädsel	
0360	1	44 97 350		110,18), RH	1	Door trim	Dörrklädsel	
0370	2	44 97 418		110), LH	1	.Arm rest	.Armstöd	
0380	2	44 97 475		110), RH	1	.Arm rest	.Armstöd	
0390				TRIM COLOUR K64				
0400	1	42 70 104		110), LH	1	Door trim	Dörrklädsel	5
0410	1	42 70 112		110), RH	1	Door trim	Dörrklädsel	5
0420	1	42 70 120		110,18), LH	1	Door trim	Dörrklädsel	5
0430	1	42 70 138		110,18), RH	1	Door trim	Dörrklädsel	5
0440	2	42 66 748		110), LH	1	.Arm rest	.Armstöd	6
0450	2	42 66 730		110), RH	1	.Arm rest	.Armstöd	6
0460				TRIM COLOUR K35				
0470	1	4	86 379	110,18), LH	1	Door trim	Dörrklädsel	
0480	1	4	*86 387*	110,18), RH NLS – USE 4486320	1	Door trim	Dörrklädsel	
0490	2	42 74 130		110), LH	1	.Arm rest	.Armstöd	6
0500	2	42 74 148		110), RH	1	.Arm rest	.Armstöd	6
0510								
0520				TRIM COLOUR K93				
0530	1	44 86 353		110,18), LH	1	Door trim	Dörrklädsel	
0540	1	44 86 361		110,18), RH	1	Door trim	Dörrklädsel	
0550	2	44 86 403		110), LH	1	.Arm rest	.Armstöd	
0560	2	44 86 411		110), RH	1	.Arm rest	.Armstöd	

18. For cars with door fan För bilar med dörrfläkt
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

Upholstery

5-D02 Door trim 1994 Rear door

Klädsel

Dörrklädsel 1994 Bakdörr

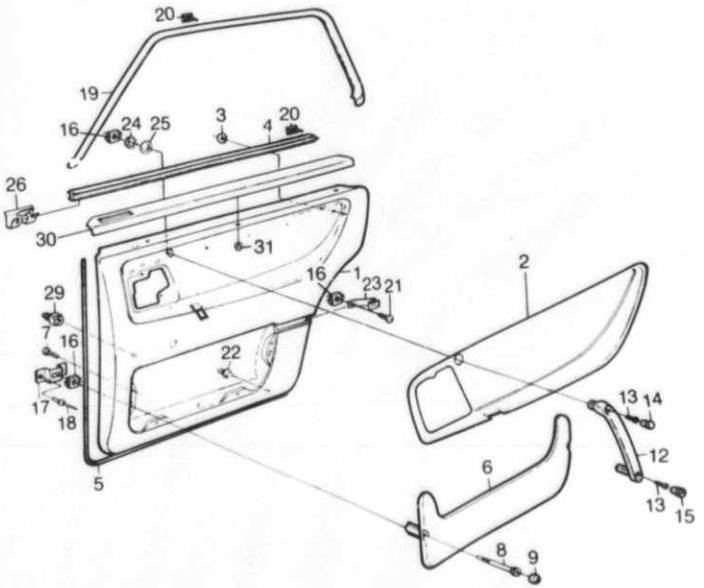

F6544 CAC94

1330	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0570								
0580	3	96 95 081			X	.Washer	.Bricka	5
0590	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0600	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0610	5	98 95 970			2	.Strip	.List	6
0620	6	42 63 950		210), LH	1	Pocket	Ficka	6
0630	6	42 63 943		210), RH	1	Pocket	Ficka	6
0640	6	95 82 362		90), LH	1	Pocket	Ficka	6
0650	6	95 82 461		90), RH	1	Pocket	Ficka	6
0660	6	41 35 224		100), LH	1	Pocket	Ficka	6
0670	6	41 35 331		100), RH	1	Pocket	Ficka	6
0680	6	42 70 161		110), LH	1	Pocket	Ficka	
0690	6	42 70 179		110), RH	1	Pocket	Ficka	
0700								
0710	7	79 71 393			8	Screw	Skruv	5
0720	8	97 80 156			4	Screw	Skruv	5
0730	9	42 63 471		210)	4	Cover	Täcklock	5
0740	9	42 68 058		110)	4	Cover	Täcklock	
0750	9	95 82 313		90)	4	Cover	Täcklock	5
0760	9	41 33 427		100)	4	Cover	Täcklock	5
0770	12	42 63 935		210), LH	1	Handle	Handtag	5
0780	12	42 63 927		210), RH	1	Handle	Handtag	5
0790	12	42 70 146		110), LH	1	Handle	Handtag	
0800	12	42 70 153		110), RH	1	Handle	Handtag	
0810	12	95 82 354		90), LH	1	Handle	Handtag	5
0820	12	95 82 453		90), RH	1	Handle	Handtag	5
0830	12	41 29 292		100), LH	1	Handle	Handtag	5
0840	12	41 29 300		100), RH	1	Handle	Handtag	5
0850								
0860	13	73 99 264		341)	4	Screw	Skruv	5
0870	13	79 78 372		342)	4	Screw	Skruv	5
0880	14	42 63 455		210)	2	Cover washer	Täckbricka	5
0890	14	42 68 033		110)	2	Cover washer	Täckbricka	
0900	14	95 82 297		90)	2	Cover washer	Täckbricka	5
0910	14	41 29 276		100)	2	Cover washer	Täckbricka	5
0920								
0930	15	42 63 463		210)	2	Cover washer	Täckbricka	5
0940	15	42 68 041		110)	2	Cover washer	Täckbricka	
0950	15	95 82 305		90)	2	Cover washer	Täckbricka	5
0960	15	41 29 284		100)	2	Cover washer	Täckbricka	5
0970								
0980	16	79 74 231			20	Cage nut	Korgmutter	5
0990	17	97 79 844			2	Bracket	Hållare	6
1000	18	79 72 490			4	Rivet	Nit	5
1010	19	42 68 249		LH	1	Upholstery	Klädsel	6
1020	19	42 68 231		RH	1	Upholstery	Klädsel	6
1030	20	96 60 143			22	Clamp	Klammer	5
1040	21	80 59 396			2	Screw	Skruv	5
1050	22	*97 94 686*		NLS – USE 9796939	2	Clamp	Klämma	6
1060	23	96 60 820			4	Clamp	Klämma	6
1070	24	97 97 200			2	Washer	Bricka	5
1080	25	*96 71 389*		NLS – USE 9891391	2	Washer	Bricka	5
1090	26	42 70 047			8	Clamp	Klämma	3
1100	29	96 78 996		18)	2	Clamp	Klämma	5
1110	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
1120	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6

18. For cars with door fan För bilar med dörrfläkt
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
341. Ch. -R1021629
342. Ch. R1021630-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -D04

Door trim 1994
Rear door

Dörrklädsel 1994
Bakdörr

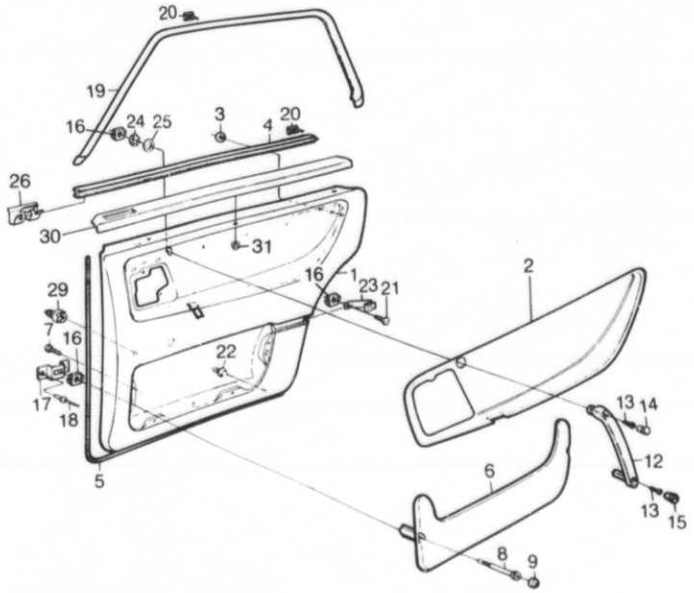

F6544 CAC94


1330 Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
1130 31	73 98 423			6	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

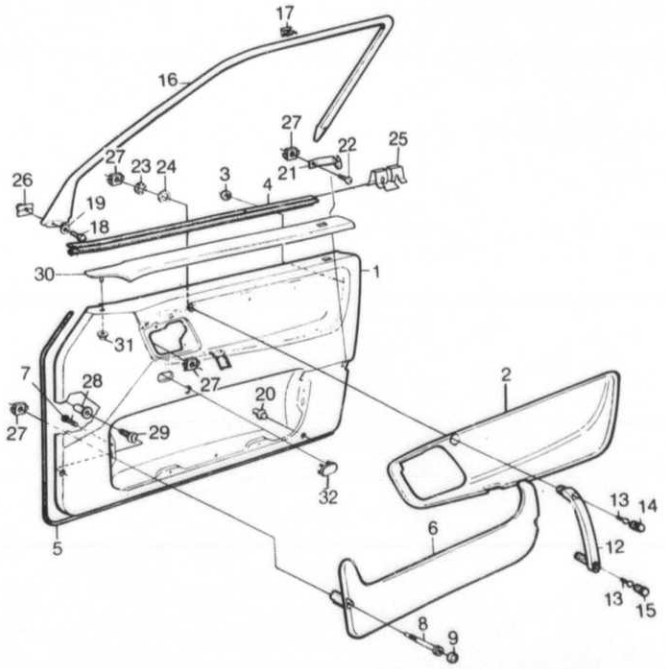

F6545 CAC94

Upholstery

5-D06 Door trim 1995 Front door

Klädsel

Dörrklädsel 1995 Framdörr

1331

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010			TRIM COLOUR J44, L33				
0020	1		44 87 807	210,372), LH	1	Door trim	Dörrklädsel	
0030	1		44 87 989	210,372), RH	1	Door trim	Dörrklädsel	
0033	1		46 37 245	210,373), LH	1	Door trim	Dörrklädsel	
0036	1		46 37 278	210,373), RH	1	Door trim	Dörrklädsel	
0040	2		44 97 046	210,372), LH	1	.Arm rest	.Armstöd	
0050	2		44 97 103	210,372), RH	1	.Arm rest	.Armstöd	
0060	2		46 37 344	210,373), LH	1	.Arm rest	.Armstöd	
0070	2		46 37 351	210,373), RH	1	.Arm rest	.Armstöd	
0110			TRIM COLOUR L35				
0120			TRIM COLOUR L33 GRIFFIN				
0130	1		45 11 184	210), LH	1	Door trim	Dörrklädsel	6
0140	1		45 11 218	210), RH	1	Door trim	Dörrklädsel	6
0150	2		45 11 226	210), LH	1	.Arm rest	.Armstöd	6
0160	2		45 11 234	210), RH	1	.Arm rest	.Armstöd	6
0230			TRIM COLOUR G33				
0240	1		44 87 781	90,374), LH	1	Door trim	Dörrklädsel	
0250	1		44 87 963	90,374), RH	1	Door trim	Dörrklädsel	
0253	1		46 37 161	90,375), LH	1	Door trim	Dörrklädsel	
0256	1		46 37 195	90,375), RH	1	Door trim	Dörrklädsel	
0260	2		44 97 020	90,374), LH	1	.Arm rest	.Armstöd	
0270	2		44 97 087	90,374), RH	1	.Arm rest	.Armstöd	
0280	2		46 37 302	90,375), LH	1	.Arm rest	.Armstöd	
0290	2		46 37 310	90,375), RH	1	.Arm rest	.Armstöd	
0340			TRIM COLOUR H44, H33				
0350	1		44 87 799	100,376), LH	1	Door trim	Dörrklädsel	
0360	1		44 87 971	100,376), RH	1	Door trim	Dörrklädsel	
0363	1		46 37 203	100,377), LH	1	Door trim	Dörrklädsel	
0366	1		46 37 237	100,377), RH	1	Door trim	Dörrklädsel	
0370	2		44 97 038	100,376), LH	1	.Arm rest	.Armstöd	
0380	2		44 97 095	100,376), RH	1	.Arm rest	.Armstöd	
0390	2		46 37 328	100,377), LH	1	.Arm rest	.Armstöd	
0400	2		46 37 336	100,377), RH	1	.Arm rest	.Armstöd	
0450			TRIM COLOUR H35				
0460			TRIM COLOUR H33 GRIFFIN				
0470	1		44 86 080	100), LH	1	Door trim	Dörrklädsel	
0480	1		44 86 114	100), RH	1	Door trim	Dörrklädsel	
0490	2		44 86 205	100), LH	1	.Arm rest	.Armstöd	
0500	2		44 86 213	100), RH	1	.Arm rest	.Armstöd	
0570			TRIM COLOUR K44, K33				
0580	1		44 87 815	110,379), LH	1	Door trim	Dörrklädsel	
0590	1		44 87 997	110,379), RH	1	Door trim	Dörrklädsel	
0593	1		46 37 120	110,380), LH	1	Door trim	Dörrklädsel	
0596	1		46 37 153	110,380), RH	1	Door trim	Dörrklädsel	
0600	2		44 97 053	110,379), LH	1	.Arm rest	.Armstöd	
0610	2		44 97 111	110,379), RH	1	.Arm rest	.Armstöd	
0620	2		46 37 286	110,380), LH	1	.Arm rest	.Armstöd	
0630	2		46 37 294	110,380), RH	1	.Arm rest	.Armstöd	


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
372. Ch. -S1009602
373. Ch. S1009603-
374. Ch. -S1009574
375. Ch. S1009575-
376. Ch. -S1008743
377. Ch. S1008744-
379. Ch. -S1011044
380. Ch. S1011045-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

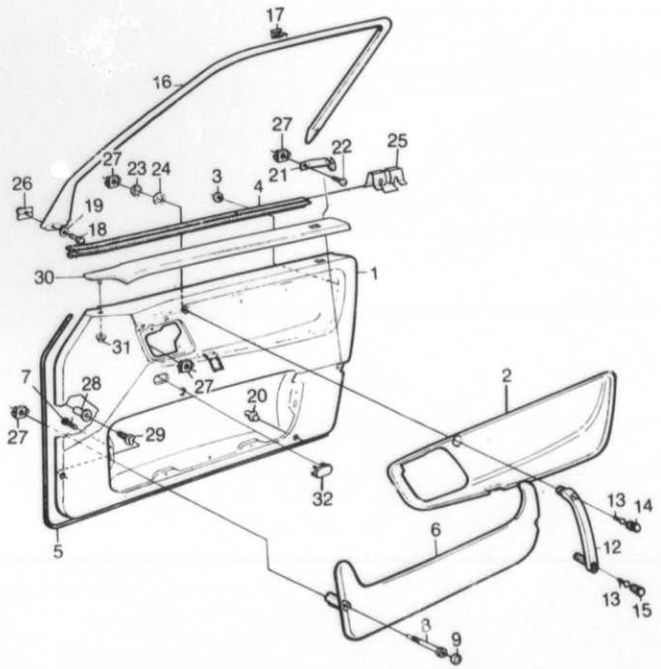

F6545 CAC94

Upholstery
5 -D08
Door trim 1995
Front door

Klädsel
Dörrklädsel 1995
Framdörr

1331	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0690				TRIM COLOUR K35				
0700				TRIM COLOUR K33 GRIFFIN				
0710	1	44 86 163		110), LH	1	Door trim	Dörrklädsel	
0720	1	*44 86 197*		110), RH NLS - USE 4486072	1	Door trim	Dörrklädsel	
0730	2	42 73 934		110), LH	1	.Arm rest	.Armstöd	6
0740	2	42 73 942		110), RH	1	.Arm rest	.Armstöd	6
0745								
0750	3	96 95 081			X	.Washer	.Bricka	5
0760	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0770	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0780	5	98 95 699			2	.Strip	.List	6
0781	6	42 63 638		210), LH	1	Pocket	Ficka	6
0782	6	42 63 620		210), RH	1	Pocket	Ficka	6
0783	6	95 82 065		90), LH	1	Pocket	Ficka	6
0784	6	95 82 164		90), RH	1	Pocket	Ficka	6
0785	6	41 35 489		100), LH	1	Pocket	Ficka	6
0786	6	41 35 471		100), RH	1	Pocket	Ficka	6
0790	6	42 70 542		110), LH	1	Pocket	Ficka	
0800	6	42 70 559		110), RH	1	Pocket	Ficka	
0810								
0820	7	79 71 393			8	Screw	Skruv	5
0830	8	97 80 156			4	Screw	Skruv	5
0840	9	42 63 471		210)	4	Cover	Täcklock	5
0850	9	42 68 058		110)	4	Cover	Täcklock	
0860	9	95 82 313		90)	4	Cover	Täcklock	5
0870	9	41 33 427		100)	4	Cover	Täcklock	5
0880	12	42 63 612		210), LH	1	Handle	Handtag	5
0890	12	42 63 604		210), RH	1	Handle	Handtag	5
0900	12	42 70 526		110), LH	1	Handle	Handtag	
0910	12	42 70 534		110), RH	1	Handle	Handtag	
0920	12	95 82 057		90), LH	1	Handle	Handtag	5
0930	12	95 82 156		90), RH	1	Handle	Handtag	5
0940	12	41 29 250		100), LH	1	Handle	Handtag	5
0950	12	41 29 268		100), RH	1	Handle	Handtag	5
0960								
0970	13	79 78 372			4	Screw	Skruv	5
0980	14	42 63 455		210)	2	Cover washer	Täckbricka	5
0990	14	42 68 033		110)	2	Cover washer	Täckbricka	
1000	14	95 82 297		90)	2	Cover washer	Täckbricka	5
1010	14	41 29 276		100)	2	Cover washer	Täckbricka	5
1020								
1030	15	42 63 463		210)	2	Cover washer	Täckbricka	5
1040	15	42 68 041		110)	2	Cover washer	Täckbricka	
1050	15	95 82 305		90)	2	Cover washer	Täckbricka	5
1060	15	41 29 284		100)	2	Cover washer	Täckbricka	5
1070								
1080	16	42 68 223		LH	1	Upholstery	Klädsel	6
1090	16	42 68 215		RH	1	Upholstery	Klädsel	6
1100	17	96 60 143			22	Clamp	Klammer	5
1110	18	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
1110								
1120	19	96 60 077			2	Washer	Bricka	5
1130	20	97 96 939			2	Clamp	Klämma	6
1140	21	97 96 616			2	Clamp	Klämma	6
1150	22	79 78 372			4	Screw	Skruv	5
1160	23	97 97 200			2	Washer	Bricka	5
1170	24	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
1180	25	42 70 047			8	Clamp	Klämma	3


90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

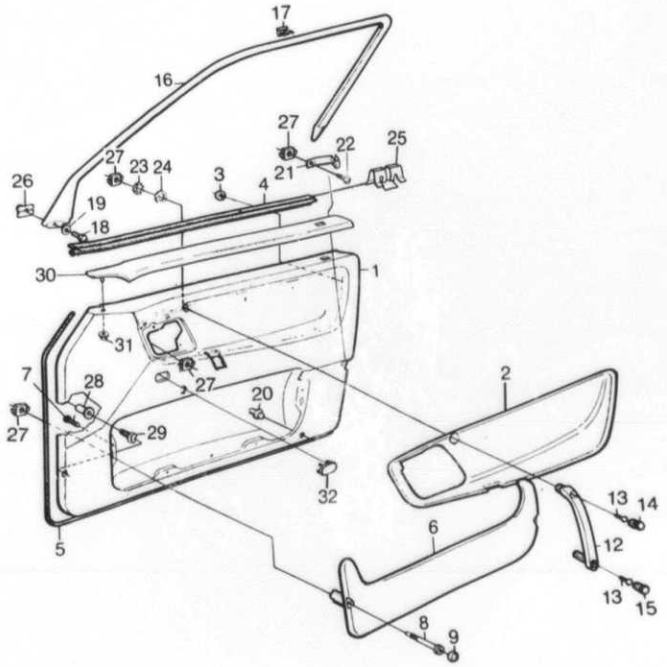

F6545 CAC94

Upholstery

5-D10 Door trim 1995 Front door

Klädsel

Dörrklädsel 1995 Framdörr

1331	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1190	26	96 71 033			2	Clamp	Klämma	6
1200	27	79 74 231			X	Cage nut	Korgmutter	5
1210	28	95 45 906			2	Sleeve	Hylsa	5
1220	29	95 45 898			2	Upholstery clip	Klädselfäste	5
1230	30	86 69 210		LH	1	Wooden insert	Träinlägg	6
1240	30	86 69 202		RH	1	Wooden insert	Träinlägg	6
1250	31	73 98 423			8	Nut	Mutter	5
1260	32	45 12 984		210)	1	Cover	Täcklock	
1270	32	45 12 992		90)	1	Cover	Täcklock	
1280	32	45 12 976		100)	1	Cover	Täcklock	
1290	32	45 12 968		110)	1	Cover	Täcklock	

90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-D12

Door trim 1995
Rear door

Dörrklädsel 1995
Bakdörr

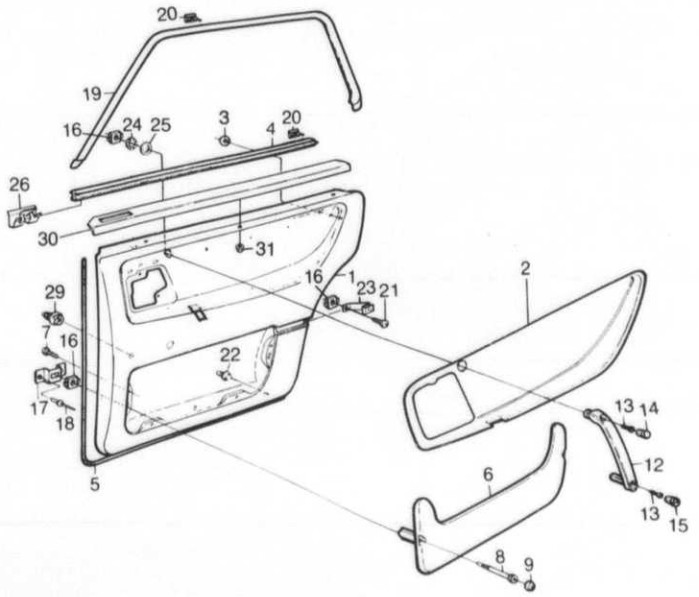

F6546 CAC94

1332	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J44, L33				
0020	1	44 97 160		210,372), LH	1	Door trim	Dörrklädsel	
0030	1	44 97 228		210,372), RH	1	Door trim	Dörrklädsel	
0033	1	46 37 682		210,373), LH	1	Door trim	Dörrklädsel	
0036	1	46 37 690		210,373), RH	1	Door trim	Dörrklädsel	
0040	1	44 97 285		210,372,18), LH	1	Door trim	Dörrklädsel	
0050	1	44 97 343		210,372,18), RH	1	Door trim	Dörrklädsel	
0053	1	46 37 708		210,373,18), LH	1	Door trim	Dörrklädsel	
0056	1	46 37 716		210,373,18), RH	1	Door trim	Dörrklädsel	
0060	2	44 97 400		210,372), LH	1	,Arm rest	,Armstöd	
0070	2	44 97 467		210,372), RH	1	,Arm rest	,Armstöd	
0073	2	46 37 781		210,373), LH	1	,Arm rest	,Armstöd	
0076	2	46 37 799		210,373), RH	1	,Arm rest	,Armstöd	
0079				TRIM COLOUR L35				
0080				TRIM COLOUR L33 GRIFFIN				
0090	1	45 11 291		210,18), LH	1	Door trim	Dörrklädsel	6
0100	1	45 11 309		210,18), RH	1	Door trim	Dörrklädsel	6
0110	2	45 11 317		210), LH	1	,Arm rest	,Armstöd	6
0120	2	45 11 325		210), RH	1	,Arm rest	,Armstöd	6
0130				TRIM COLOUR G33				
0140	1	44 97 145		90,374), LH	1	Door trim	Dörrklädsel	
0150	1	44 97 202		90,374), RH	1	Door trim	Dörrklädsel	
0153	1	46 37 609		90,375), LH	1	Door trim	Dörrklädsel	
0156	1	46 37 617		90,375), RH	1	Door trim	Dörrklädsel	
0160	1	44 97 269		90,374,18), LH	1	Door trim	Dörrklädsel	
0170	1	44 97 327		90,374,18), RH	1	Door trim	Dörrklädsel	
0173	1	46 37 625		90,375,18), LH	1	Door trim	Dörrklädsel	
0176	1	46 37 633		90,375,18), RH	1	Door trim	Dörrklädsel	
0180	2	44 97 384		90,374), LH	1	,Arm rest	,Armstöd	
0190	2	44 97 442		90,374), RH	1	,Arm rest	,Armstöd	
0193	2	46 37 740		90,375), LH	1	,Arm rest	,Armstöd	
0196	2	46 37 757		90,375), RH	1	,Arm rest	,Armstöd	
0200				TRIM COLOUR H44, H33				
0210	1	44 97 152		100,376), LH	1	Door trim	Dörrklädsel	
0220	1	44 97 210		100,376), RH	1	Door trim	Dörrklädsel	
0223	1	46 37 641		100,377), LH	1	Door trim	Dörrklädsel	
0226	1	46 37 658		100,377), RH	1	Door trim	Dörrklädsel	
0230	1	44 97 277		100,376,18), LH	1	Door trim	Dörrklädsel	
0240	1	44 97 335		100,376,18), RH	1	Door trim	Dörrklädsel	
0243	1	46 37 666		100,377,18), LH	1	Door trim	Dörrklädsel	
0246	1	46 37 674		100,377,18), RH	1	Door trim	Dörrklädsel	
0250	2	44 97 392		100,376), LH	1	,Arm rest	,Armstöd	
0260	2	44 97 459		100,376), RH	1	,Arm rest	,Armstöd	
0263	2	46 37 765		100,377), LH	1	,Arm rest	,Armstöd	
0266	2	46 37 773		100,377), RH	1	,Arm rest	,Armstöd	
0270				TRIM COLOUR H35				
0280				TRIM COLOUR H33 GRIFFIN				
0290	1	44 86 338		100,18), LH	1	Door trim	Dörrklädsel	
0300	1	44 86 346		100,18), RH	1	Door trim	Dörrklädsel	
0310	2	44 86 429		100), LH	1	,Arm rest	,Armstöd	6
0320	2	44 86 437		100), RH	1	,Arm rest	,Armstöd	6

18. For cars with door fan För bilar med dörrfläkt
90. Yellow Gul
100. Light grey Ljus grå
210. Light beige Ljus beige
372. Ch. -S1009602
373. Ch. S1009603-
374. Ch. -S1009574
375. Ch. S1009575-
376. Ch. -S1008743
377. Ch. S1008744-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

Upholstery

5-D14 Door trim 1995 Rear door

Klädsel

Dörrklädsel 1995 Bakdörr

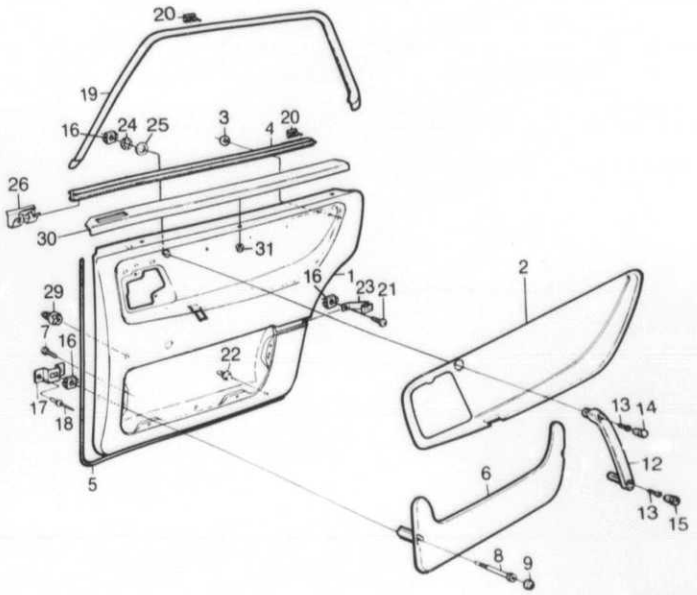

F6546 CAC94

1332	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0330				TRIM COLOUR K44, K33				
0340	1	44 97 178		110,379), LH	1	Door trim	Dörrklädsel	
0350	1	44 97 236		110,379), RH	1	Door trim	Dörrklädsel	
0353	1	46 37 567		110,380), LH	1	Door trim	Dörrklädsel	
0356	1	46 37 575		110,380), RH	1	Door trim	Dörrklädsel	
0360	1	44 97 293		110,379,18), LH	1	Door trim	Dörrklädsel	
0370	1	44 97 350		110,379,18), RH	1	Door trim	Dörrklädsel	
0373	1	46 37 583		110,380,18), LH	1	Door trim	Dörrklädsel	
0376	1	46 37 591		110,380,18), RH	1	Door trim	Dörrklädsel	
0380	2	44 97 418		110,379), LH	1	.Arm rest	.Armstöd	
0390	2	44 97 475		110,379), RH	1	.Arm rest	.Armstöd	
0393	2	46 37 724		110,380), LH	1	.Arm rest	.Armstöd	
0396	2	46 37 732		110,380), RH	1	.Arm rest	.Armstöd	
0400				TRIM COLOUR K35				
0410				TRIM COLOUR K33 GRIFFIN				
0420	1	44 86 379		110,18), LH	1	Door trim	Dörrklädsel	
0430	1	*44 86 387*		110,18), RH NLS - USE 4486320	1	Door trim	Dörrklädsel	
0440	2	42 74 130		110), LH	1	.Arm rest	.Armstöd	6
0450	2	42 74 148		110), RH	1	.Arm rest	.Armstöd	6
0460								
0470	3	96 95 081			X	.Washer	.Bricka	5
0480	4	96 60 994		LH	1	.Sealing strip	.Tätningslist	3
0490	4	96 60 846		RH	1	.Sealing strip	.Tätningslist	3
0500	5	98 95 970			2	.Strip	.List	6
0510	6	42 63 950		210), LH	1	Pocket	Ficka	6
0520	6	42 63 943		210), RH	1	Pocket	Ficka	6
0530	6	95 82 362		90), LH	1	Pocket	Ficka	6
0540	6	95 82 461		90), RH	1	Pocket	Ficka	6
0550	6	41 35 224		100), LH	1	Pocket	Ficka	6
0560	6	41 35 331		100), RH	1	Pocket	Ficka	6
0570	6	42 70 161		110), LH	1	Pocket	Ficka	
0580	6	42 70 179		110), RH	1	Pocket	Ficka	
0590								
0600	7	79 71 393			8	Screw	Skruv	5
0610	8	97 80 156			4	Screw	Skruv	5
0620	9	42 63 471		210)	4	Cover	Täcklock	5
0630	9	42 68 058		110)	4	Cover	Täcklock	
0640	9	95 82 313		90)	4	Cover	Täcklock	5
0650	9	41 33 427		100)	4	Cover	Täcklock	5
0660	12	42 63 935		210), LH	1	Handle	Handtag	5
0670	12	42 63 927		210), RH	1	Handle	Handtag	5
0680	12	42 70 146		110), LH	1	Handle	Handtag	
0690	12	42 70 153		110), RH	1	Handle	Handtag	
0700	12	95 82 354		90), LH	1	Handle	Handtag	5
0710	12	95 82 453		90), RH	1	Handle	Handtag	5
0720	12	41 29 292		100), LH	1	Handle	Handtag	5
0730	12	41 29 300		100), RH	1	Handle	Handtag	5
0740								
0750	13	79 78 372			4	Screw	Skruv	5
0760	14	42 63 455		210)	2	Cover washer	Täckbricka	5
0770	14	42 68 033		110)	2	Cover washer	Täckbricka	
0780	14	95 82 297		90)	2	Cover washer	Täckbricka	5
0790	14	41 29 276		100)	2	Cover washer	Täckbricka	5
0800								
0810	15	42 63 463		210)	2	Cover washer	Täckbricka	5

18. For cars with door fan För bilar med dörrfläkt
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
379. Ch. -S1011044
380. Ch. S1011045-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-D16

Door trim 1995
Rear door

Dörrklädsel 1995
Bakdörr

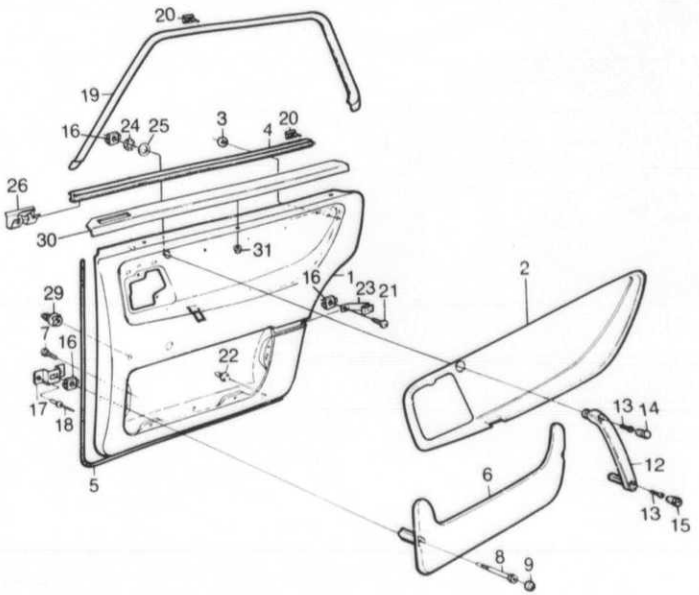

F6546 CA.C94

1332	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0820	15	42 68 041		110)	2	Cover washer	Täckbricka	
0830	15	95 82 305		90)	2	Cover washer	Täckbricka	5
0840	15	41 29 284		100)	2	Cover washer	Täckbricka	5
0850								
0860	16	79 74 231			20	Cage nut	Korgmutter	5
0870	17	97 79 844			2	Bracket	Hållare	6
0880	18	79 72 490			4	Rivet	Nit	5
0890	19	42 68 249		LH	1	Upholstery	Klädsel	6
0900	19	42 68 231		RH	1	Upholstery	Klädsel	6
0910	20	96 60 143			22	Clamp	Klammer	5
0920	21	80 59 396			2	Screw	Skruv	5
0930	22	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
0940	23	96 60 820			4	Clamp	Klämma	6
0950	24	97 97 200			2	Washer	Bricka	5
0960	25	*96 71 389*		NLS - USE 9891391	2	Washer	Bricka	5
0970	26	42 70 047			8	Clamp	Klämma	3
0980	29	96 78 996		18)	2	Clamp	Klämma	5
0990	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
1000	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
1010	31	73 98 423			6	Nut	Mutter	5


18. For cars with door fan — För bilar med dörrfläkt
90. Yellow — Gul
100. Light grey — Ljus grå
110. Black — Svart

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

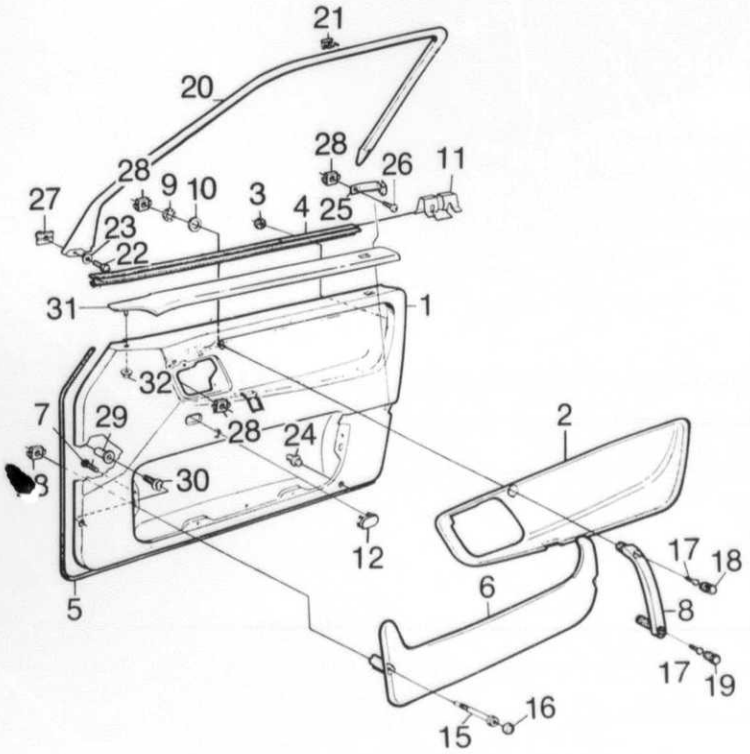

F8025 CAC94

Upholstery

5-D18 Door trim 1996 Front door

Klädsel

Dörrklädsel 1996 Framdörr

1333	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16, L33				
0020	1	46 37 088		210), LH	1	Door trim	Dörrklädsel	
0030	1	46 37 112		210), RH	1	Door trim	Dörrklädsel	
0040	2	46 37 344		210), LH	1	.Arm rest	.Armstöd	
0050	2	46 37 351		210), RH	1	.Arm rest	.Armstöd	
0060				TRIM COLOUR L35				
0070				TRIM COLOUR L33 GRIFFIN				
0080	1	45 11 143		210), LH	1	Door trim	Dörrklädsel	6
0090	1	45 11 176		210), RH	1	Door trim	Dörrklädsel	6
0100	2	45 11 226		210), LH	1	.Arm rest	.Armstöd	6
0110	2	45 11 234		210), RH	1	.Arm rest	.Armstöd	6
0120				TRIM COLOUR H16, H33				
0130	1	46 37 047		100), LH	1	Door trim	Dörrklädsel	
0140	1	46 37 070		100), RH	1	Door trim	Dörrklädsel	
0150	2	46 37 328		100), LH	1	.Arm rest	.Armstöd	
0160	2	46 37 336		100), RH	1	.Arm rest	.Armstöd	
0170				TRIM COLOUR H35				
0180				TRIM COLOUR H33 GRIFFIN				
0190	1	44 85 967		100), LH	1	Door trim	Dörrklädsel	
0200	1	44 85 991		100), RH	1	Door trim	Dörrklädsel	
0210	2	44 86 205		100), LH	1	.Arm rest	.Armstöd	
0220	2	44 86 213		100), RH	1	.Arm rest	.Armstöd	
0230				TRIM COLOUR K16, K33				
0240	1	46 36 965		110), LH	1	Door trim	Dörrklädsel	
0250	1	46 36 999		110), RH	1	Door trim	Dörrklädsel	
0260	2	46 37 286		110), LH	1	.Arm rest	.Armstöd	
0270	2	46 37 294		110), RH	1	.Arm rest	.Armstöd	
0280				TRIM COLOUR K35				
0290				TRIM COLOUR K33 GRIFFIN				
0300	1	44 86 049		110), LH	1	Door trim	Dörrklädsel	
0310	1	44 86 072		110), RH	1	Door trim	Dörrklädsel	
0320	2	42 73 934		110), LH	1	.Arm rest	.Armstöd	6
0330	2	42 73 942		110), RH	1	.Arm rest	.Armstöd	6
0340								
0350	3	96 95 081			X	.Washer	.Bricka	5
0360	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0370	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0380	5	98 95 699			2	.Strip	.List	6
0390	6	42 63 638		210), LH	1	.Pocket	.Ficka	6
0400	6	42 63 620		210), RH	1	.Pocket	.Ficka	6
0410	6	41 35 489		100), LH	1	.Pocket	.Ficka	6
0420	6	41 35 471		100), RH	1	.Pocket	.Ficka	6
0430	6	42 70 542		110), LH	1	.Pocket	.Ficka	
0440	6	42 70 559		110), RH	1	.Pocket	.Ficka	
0460	7	79 71 393			4	.Screw	.Skruv	5
0470	8	42 63 612		210), LH	1	.Handle	.Handtag	5
0480	8	42 63 604		210), RH	1	.Handle	.Handtag	5
0490	8	42 70 526		110), LH	1	.Handle	.Handtag	
0500	8	42 70 534		110), RH	1	.Handle	.Handtag	
0510	8	41 29 250		100), LH	1	.Handle	.Handtag	5
0520	8	41 29 268		100), RH	1	.Handle	.Handtag	5
0530	9	97 97 200			1	.Washer	.Bricka	5
0540	10	*96 71 309*		NLS – USE 9891391	1	.Washer	.Bricka	5
0550	11	42 70 047			4	.Clamp	.Klämma	3
0560	12	45 12 985		210)	1	.Cover	.Täcklock	
0570	12	45 12 976		100)	1	.Cover	.Täcklock	
0580	12	45 12 968		110)	1	.Cover	.Täcklock	
0585								
0590	15	97 80 156			4	Screw	Skruv	5
0600	16	42 63 471		210)	4	Cover	Täcklock	5


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

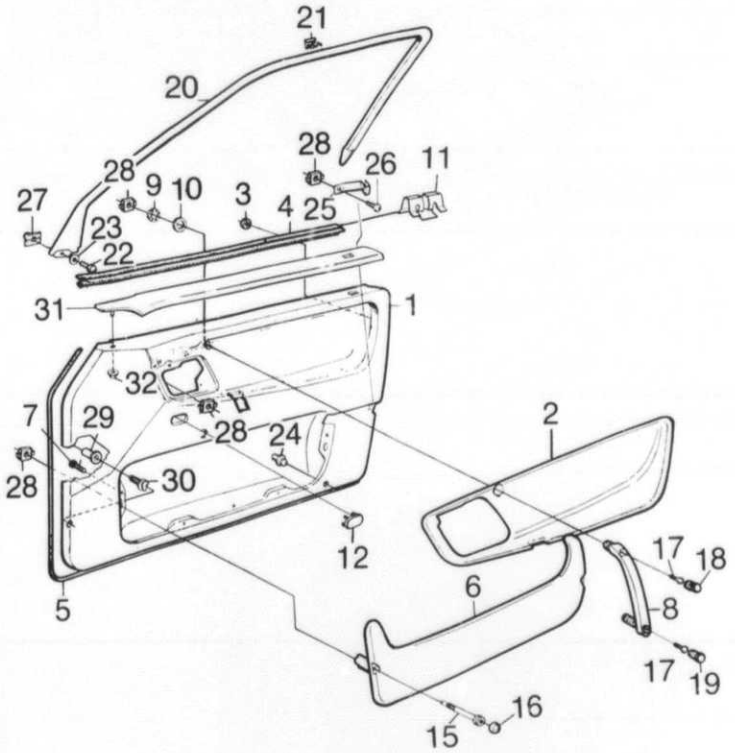

F8025 CAC94

Upholstery

5-D20 Door trim 1996 Front door

Klädsel

Dörrklädsel 1996 Framdörr

1333	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	16	42 68 058		110)	4	Cover	Täcklock	
0620	16	41 33 427		100)	4	Cover	Täcklock	5
0640	17	79 82 333			4	Screw	Skruv	5
0650	18	42 63 455		210)	2	Cover washer	Täckbricka	5
0660	18	42 68 033		110)	2	Cover washer	Täckbricka	
0670	18	41 29 276		100)	2	Cover washer	Täckbricka	5
0690	19	42 63 463		210)	2	Cover washer	Täckbricka	5
0700	19	42 68 041		110)	2	Cover washer	Täckbricka	
0710	19	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	20	42 68 223		LH	1	Upholstery	Klädsel	6
0740	20	42 68 215		RH	1	Upholstery	Klädsel	6
0750	21	96 60 143			22	Clamp	Klammer	5
0760	22	*79 72 896*		NLS - USE 7965684, 8073090	2	Screw	Skruv	5
0760								
0770	23	96 60 077			2	Washer	Bricka	5
0780	24	97 96 939			2	Clamp	Klämma	6
0790	25	97 96 616			2	Clamp	Klämma	6
0800	26	79 82 333			4	Screw	Skruv	5
0810	27	96 71 033			2	Clamp	Klämma	6
0820	28	79 74 231			X	Cage nut	Korgmutter	5
0830	29	95 45 906			2	Sleeve	Hylsa	5
0840	30	95 45 898			2	Upholstery clip	Klädselfäste	5
0850	31	86 69 210		LH	1	Wooden insert	Träinlägg	6
0860	31	86 69 202		RH	1	Wooden insert	Träinlägg	6
0870	32	73 98 423			8	Nut	Mutter	5


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

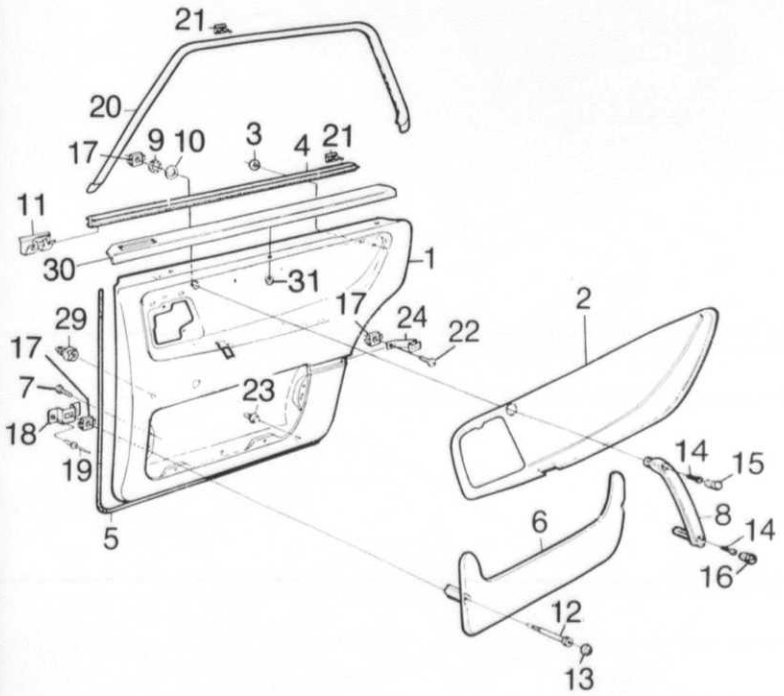

F8026 CAC94

Upholstery

5-D22 Door trim 1996 Rear door

Klädsel

Dörrklädsel 1996 Bakdörr

1334	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16, L33				
0020	1	46 37 526		210), LH	1	Door trim	Dörrklädsel	
0030	1	46 37 534		210), RH	1	Door trim	Dörrklädsel	
0040	1	46 37 542		210,18), LH	1	Door trim	Dörrklädsel	
0050	1	46 37 559		210,18), RH	1	Door trim	Dörrklädsel	
0060	2	46 37 781		210), LH	1	.Arm rest	.Armstöd	
0070	2	46 37 799		210), RH	1	.Arm rest	.Armstöd	
0080				TRIM COLOUR L35				
0090				TRIM COLOUR L33 GRIFFIN				
0100	1	45 11 275		210,18), LH	1	Door trim	Dörrklädsel	6
0110	1	45 11 283		210,18), RH	1	Door trim	Dörrklädsel	6
0120	2	45 11 317		210), LH	1	.Arm rest	.Armstöd	6
0130	2	45 11 325		210), RH	1	.Arm rest	.Armstöd	6
0140				TRIM COLOUR H16, H33				
0150	1	46 37 484		100), LH	1	Door trim	Dörrklädsel	
0160	1	46 37 492		100), RH	1	Door trim	Dörrklädsel	
0170	1	46 37 500		100,18), LH	1	Door trim	Dörrklädsel	
0180	1	46 37 518		100,18), RH	1	Door trim	Dörrklädsel	
0190	2	46 37 765		100), LH	1	.Arm rest	.Armstöd	
0200	2	46 37 773		100), RH	1	.Arm rest	.Armstöd	
0210				TRIM COLOUR H35				
0220				TRIM COLOUR H33 GRIFFIN				
0230	1	44 86 270		100,18), LH	1	Door trim	Dörrklädsel	
0240	1	44 86 288		100,18), RH	1	Door trim	Dörrklädsel	
0250	2	44 86 429		100), LH	1	.Arm rest	.Armstöd	6
0260	2	44 86 437		100), RH	1	.Arm rest	.Armstöd	6
0270				TRIM COLOUR K16, K33				
0280	1	46 37 401		110), LH	1	Door trim	Dörrklädsel	
0290	1	46 37 419		110), RH	1	Door trim	Dörrklädsel	
0300	1	46 37 427		110,18), LH	1	Door trim	Dörrklädsel	
0310	1	46 37 435		110,18), RH	1	Door trim	Dörrklädsel	
0320	2	46 37 724		110), LH	1	.Arm rest	.Armstöd	
0330	2	46 37 732		110), RH	1	.Arm rest	.Armstöd	
0340				TRIM COLOUR K35				
0350				TRIM COLOUR K33 GRIFFIN				
0360	1	44 86 312		110,18), LH	1	Door trim	Dörrklädsel	
0370	1	44 86 320		110,18), RH	1	Door trim	Dörrklädsel	
0380	2	42 74 130		110), LH	1	.Arm rest	.Armstöd	6
0390	2	42 74 148		110), RH	1	.Arm rest	.Armstöd	6
0400								
0410	3	96 95 081			X	.Washer	.Bricka	5
0420	4	48 17 706		LH	1	.Sealing strip	.Tätningslist	3
0430	4	48 17 714		RH	1	.Sealing strip	.Tätningslist	3
0440	5	98 95 970			2	.Strip	.List	6
0450	6	42 63 950		210), LH	1	.Pocket	.Ficka	6
0460	6	42 63 943		210), RH	1	.Pocket	.Ficka	6
0470	6	41 35 224		100), LH	1	.Pocket	.Ficka	6
0480	6	41 35 331		100), RH	1	.Pocket	.Ficka	6
0490	6	42 70 161		110), LH	1	.Pocket	.Ficka	
0500	6	42 70 179		110), RH	1	.Pocket	.Ficka	
0510	7	79 71 393			4	.Screw	.Skruv	5
0520	8	42 63 935		210), LH	1	.Handle	.Handtag	5
0530	8	42 63 927		210), RH	1	.Handle	.Handtag	5
0540	8	42 70 146		110), LH	1	.Handle	.Handtag	
0550	8	42 70 153		110), RH	1	.Handle	.Handtag	
0560	8	41 29 292		100), LH	1	.Handle	.Handtag	5
0570	8	41 29 300		100), RH	1	.Handle	.Handtag	5
0580	9	97 97 200			1	.Washer	.Bricka	5
0590	10	*96 71 389*		NLS - USE 9891391	1	.Washer	.Bricka	5

18. For cars with door fan För bilar med dörrfläkt
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

Upholstery

5-D24 Door trim 1996 Rear door

Klädsel

Dörrklädsel 1996 Bakdörr

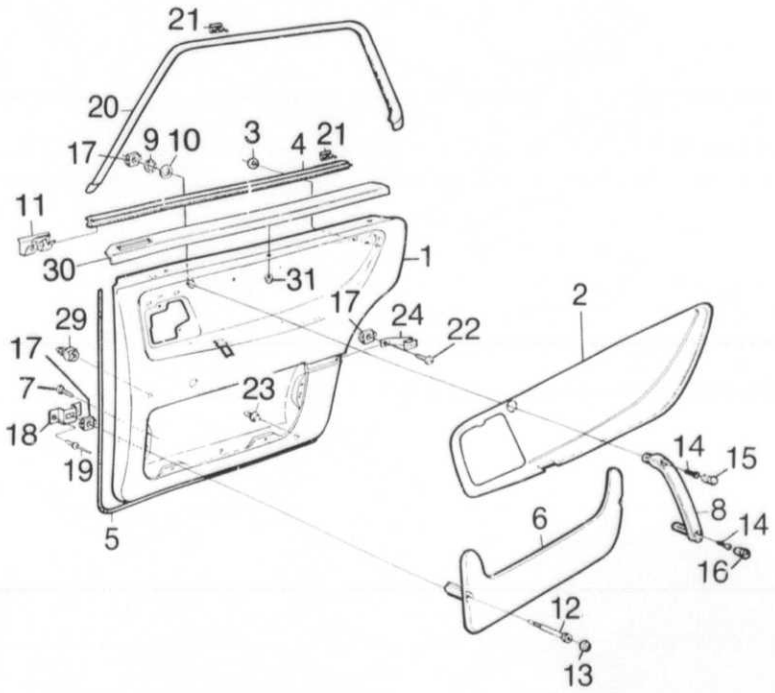

F8026 CAC94

1334	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	11	42 70 047			4	Clamp	Klämma	3
0610								
0620	12	97 80 156			4	Screw	Skruv	5
0630	13	42 63 471		210)	4	Cover	Täcklock	5
0640	13	42 68 058		110)	4	Cover	Täcklock	
0650	13	41 33 427		100)	4	Cover	Täcklock	5
0660	14	79 82 333			4	Screw	Skruv	5
0670	15	42 63 455		210)	2	Cover washer	Täckbricka	5
0680	15	42 68 033		110)	2	Cover washer	Täckbricka	
0690	15	41 29 276		100)	2	Cover washer	Täckbricka	5
0700	16	42 63 463		210)	2	Cover washer	Täckbricka	5
0710	16	42 68 041		110)	2	Cover washer	Täckbricka	
0720	16	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	17	79 74 231			20	Cage nut	Korgmutter	5
0740	18	97 79 844			2	Bracket	Hållare	6
0750	19	79 72 490			4	Rivet	Nit	5
0760	20	42 68 249		LH	1	Upholstery	Klädsel	6
0770	20	42 68 231		RH	1	Upholstery	Klädsel	6
0780	21	96 60 143			22	Clamp	Klammer	5
0790	22	79 82 333			2	Screw	Skruv	5
0800	23	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
0810	24	96 60 820			4	Clamp	Klämma	6
0820	29	96 78 996		18)	2	Clamp	Klämma	5
0830	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
0840	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
0850	31	73 98 423			6	Nut	Mutter	5


18. For cars with door fan — För bilar med dörrfläkt
100. Light grey — Ljus grå
110. Black — Svart
210. Light beige — Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

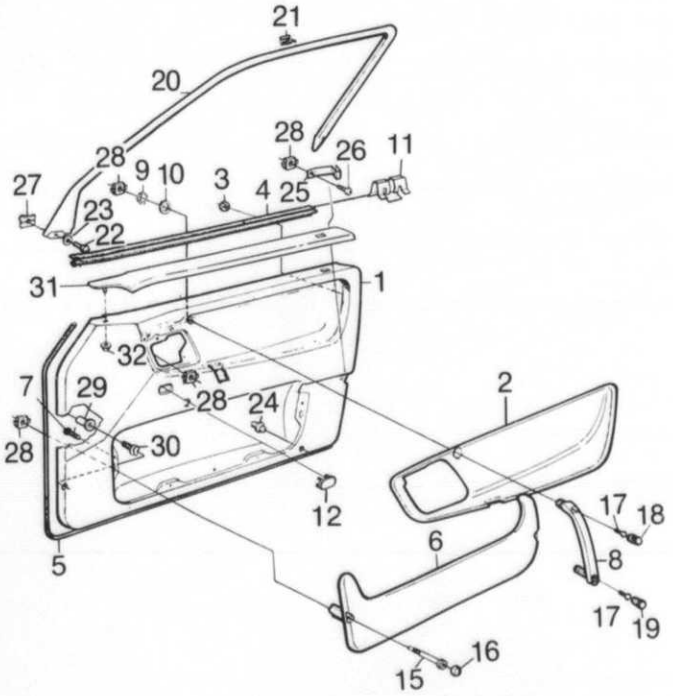

F8271 CAC94

Upholstery

5 -E02 Door trim 1997 Front door

Klädsel

Dörrklädsel 1997 Framdörr

1335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16,L33,L37				
0020	1	48 18 951		210), LH	1	Door trim	Dörrklädsel	
0030	1	48 18 969		210), RH	1	Door trim	Dörrklädsel	
0040	2	46 37 344		210), LH	1	.Arm rest	.Armstöd	
0050	2	46 37 351		210), RH	1	.Arm rest	.Armstöd	
0060				TRIM COLOUR L35				
0070				TRIM COLOUR L33 GRIFFIN				
0080	1	48 19 017		210), LH	1	Door trim	Dörrklädsel	6
0090	1	48 19 025		210), RH	1	Door trim	Dörrklädsel	6
0100	2	45 11 226		210), LH	1	.Arm rest	.Armstöd	6
0110	2	45 11 234		210), RH	1	.Arm rest	.Armstöd	6
0120				TRIM COLOUR H16, H33				
0130	1	48 18 936		100), LH	1	Door trim	Dörrklädsel	
0140	1	48 18 944		100), RH	1	Door trim	Dörrklädsel	
0150	2	46 37 328		100), LH	1	.Arm rest	.Armstöd	
0160	2	46 37 336		100), RH	1	.Arm rest	.Armstöd	
0170				TRIM COLOUR H35				
0180				TRIM COLOUR H33 GRIFFIN				
0190	1	48 18 993		100), LH	1	Door trim	Dörrklädsel	
0200	1	48 19 009		100), RH	1	Door trim	Dörrklädsel	
0210	2	44 86 205		100), LH	1	.Arm rest	.Armstöd	
0220	2	44 86 213		100), RH	1	.Arm rest	.Armstöd	
0230				TRIM COLOUR K16,K33,K37				
0240	1	48 18 910		110), LH	1	Door trim	Dörrklädsel	
0250	1	48 18 928		110), RH	1	Door trim	Dörrklädsel	
0260	2	46 37 286		110), LH	1	.Arm rest	.Armstöd	
0270	2	46 37 294		110), RH	1	.Arm rest	.Armstöd	
0280				TRIM COLOUR K35				
0290				TRIM COLOUR K33 GRIFFIN				
0300	1	48 18 977		110), LH	1	Door trim	Dörrklädsel	
0310	1	48 18 985		110), RH	1	Door trim	Dörrklädsel	
0320	2	42 73 934		110), LH	1	.Arm rest	.Armstöd	6
0330	2	42 73 942		110), RH	1	.Arm rest	.Armstöd	6
0340								
0350	3	96 95 081			X	.Washer	.Bricka	5
0360	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0370	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0380	5	98 95 699			2	.Strip	.List	6
0390	6	42 63 638		210), LH	1	.Pocket	.Ficka	6
0400	6	42 63 620		210), RH	1	.Pocket	.Ficka	6
0410	6	41 35 489		100), LH	1	.Pocket	.Ficka	6
0420	6	41 35 471		100), RH	1	.Pocket	.Ficka	6
0430	6	42 70 542		110), LH	1	.Pocket	.Ficka	
0440	6	42 70 559		110), RH	1	.Pocket	.Ficka	
0460	7	79 71 393			4	.Screw	.Skruv	5
0470	8	42 63 612		210), LH	1	.Handle	.Handtag	5
0480	8	42 63 604		210), RH	1	.Handle	.Handtag	5
0490	8	42 70 526		110), LH	1	.Handle	.Handtag	
0500	8	42 70 534		110), RH	1	.Handle	.Handtag	
0510	8	41 29 250		100), LH	1	.Handle	.Handtag	5
0520	8	41 29 268		100), RH	1	.Handle	.Handtag	5
0530	9	97 97 200			1	.Washer	.Bricka	5
0540	10	*96 71 389*		NLS - USE 9891391	1	.Washer	.Bricka	5
0550	11	42 70 047			4	.Clamp	.Klämma	3
0560	12	45 12 984		210)	1	.Cover	.Täcklock	
0570	12	45 12 976		100)	1	.Cover	.Täcklock	
0580	12	45 12 968		110)	1	.Cover	.Täcklock	
0585								
0590	15	97 80 156			4	Screw	Skruv	5
0600	16	42 63 471		210)	4	Cover	Täcklock	5


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

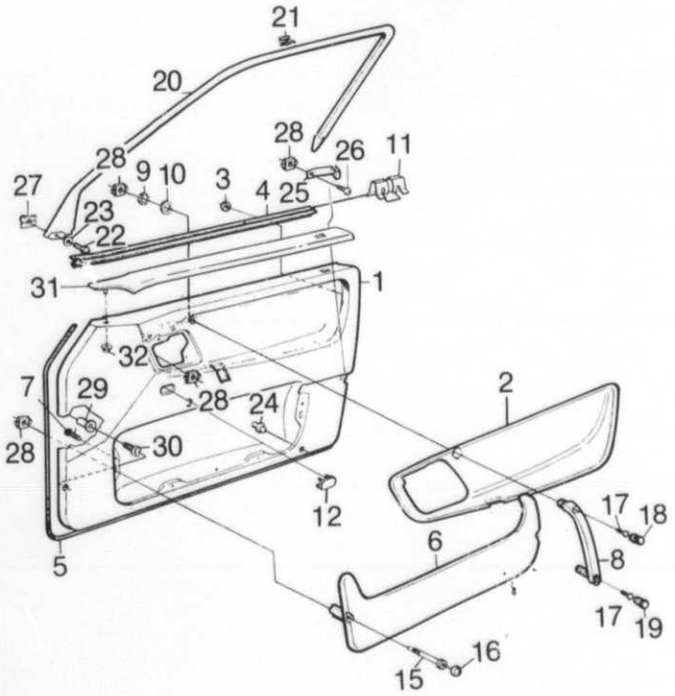

F8271 CAC94

Upholstery

5 -E04

Door trim 1997
Front door

Klädsel

Dörrklädsel 1997
Framdörr

1335	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0610	16	42 68 058		110)	4	Cover	Täcklock	5
0620	16	41 33 427		100)	4	Cover	Täcklock	5
0640	17	79 82 333			4	Screw	Skruv	5
0650	18	42 63 455		210)	2	Cover washer	Täckbricka	5
0660	18	42 68 033		110)	2	Cover washer	Täckbricka	
0670	18	41 29 276		100)	2	Cover washer	Täckbricka	5
0690	19	42 63 463		210)	2	Cover washer	Täckbricka	5
0700	19	42 68 041		110)	2	Cover washer	Täckbricka	
0710	19	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	20	42 68 223		LH	1	Upholstery	Klädsel	6
0740	20	42 68 215		RH	1	Upholstery	Klädsel	6
0750	21	96 60 143			22	Clamp	Klammer	5
0760	22	*79 72 896*		NLS – USE 7965684, 8073090	2	Screw	Skruv	5
0760								
0770	23	96 60 077			2	Washer	Bricka	5
0780	24	97 96 939			2	Clamp	Klämma	6
0790	25	97 96 616			2	Clamp	Klämma	6
0800	26	79 82 333			4	Screw	Skruv	5
0810	27	96 71 033			2	Clamp	Klämma	6
0820	28	79 74 231			X	Cage nut	Korgmutter	5
0830	29	95 45 906			2	Sleeve	Hylsa	5
0840	30	95 45 898			2	Upholstery clip	Klädselfäste	5
0850	31	86 69 210		LH	1	Wooden insert	Träinlägg	6
0860	31	86 69 202		RH	1	Wooden insert	Träinlägg	6
0870	32	73 98 423			8	Nut	Mutter	5


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

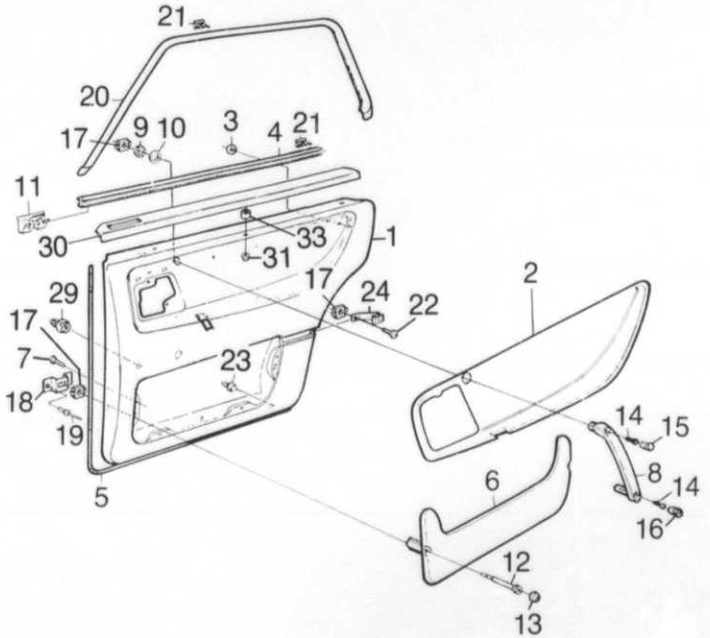

F8272 CAC94

Upholstery

5-E06

Door trim 1997
Rear door

Klädsel

Dörrklädsel 1997
Bakdörr

1336

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010			TRIM COLOUR J16,L33, L37				
0020	1	47 43 449	210), LH	1	Door trim	Dörrklädsel	
0030	1	47 43 456	210), RH	1	Door trim	Dörrklädsel	
0040	1	47 43 506	210,18), LH	1	Door trim	Dörrklädsel	
0050	1	47 43 514	210,18), RH	1	Door trim	Dörrklädsel	
0060	2	46 37 781	210), LH	1	.Arm rest	.Armstöd	
0070	2	46 37 799	210), RH	1	.Arm rest	.Armstöd	
0080			TRIM COLOUR L35				
0090			TRIM COLOUR L33 GRIFFIN				
0100	1	47 43 563	210,18), LH	1	Door trim	Dörrklädsel	6
0110	1	47 43 571	210,18), RH	1	Door trim	Dörrklädsel	6
0120	2	45 11 317	210), LH	1	.Arm rest	.Armstöd	6
0130	2	45 11 325	210), RH	1	.Arm rest	.Armstöd	6
0140			TRIM COLOUR H16, H33				
0150	1	47 43 423	100), LH	1	Door trim	Dörrklädsel	
0160	1	47 43 431	100), RH	1	Door trim	Dörrklädsel	
0170	1	47 43 480	100,18), LH	1	Door trim	Dörrklädsel	
0180	1	47 43 498	100,18), RH	1	Door trim	Dörrklädsel	
0190	2	46 37 765	100), LH	1	.Arm rest	.Armstöd	
0200	2	46 37 773	100), RH	1	.Arm rest	.Armstöd	
0210			TRIM COLOUR H35				
0220			TRIM COLOUR H33 GRIFFIN				
0230	1	47 43 548	100,18), LH	1	Door trim	Dörrklädsel	
0240	1	47 43 555	100,18), RH	1	Door trim	Dörrklädsel	
0250	2	44 86 429	100), LH	1	.Arm rest	.Armstöd	6
0260	2	44 86 437	100), RH	1	.Arm rest	.Armstöd	6
0270			TRIM COLOUR K16,K33,K37				
0280	1	47 43 407	110), LH	1	Door trim	Dörrklädsel	
0290	1	47 43 415	110), RH	1	Door trim	Dörrklädsel	
0300	1	47 43 464	110,18), LH	1	Door trim	Dörrklädsel	
0310	1	47 43 472	110,18), RH	1	Door trim	Dörrklädsel	
0320	2	46 37 724	110), LH	1	.Arm rest	.Armstöd	
0330	2	46 37 732	110), RH	1	.Arm rest	.Armstöd	
0340			TRIM COLOUR K35				
0350			TRIM COLOUR K33 GRIFFIN				
0360	1	47 43 522	110,18), LH	1	Door trim	Dörrklädsel	
0370	1	47 43 530	110,18), RH	1	Door trim	Dörrklädsel	
0380	2	42 74 130	110), LH	1	.Arm rest	.Armstöd	6
0390	2	42 74 148	110), RH	1	.Arm rest	.Armstöd	6
0400							
0410	3	96 95 081		X	.Washer	.Bricka	5
0420	4	48 17 706	LH	1	.Sealing strip	.Tätningslist	3
0430	4	48 17 714	RH	1	.Sealing strip	.Tätningslist	3
0440	5	98 95 970		2	.Strip	.List	6
0450	6	42 63 950	210), LH	1	.Pocket	.Ficka	6
0460	6	42 63 943	210), RH	1	.Pocket	.Ficka	6
0470	6	41 35 224	100), LH	1	.Pocket	.Ficka	6
0480	6	41 35 331	100), RH	1	.Pocket	.Ficka	6
0490	6	42 70 161	110), LH	1	.Pocket	.Ficka	
0500	6	42 70 179	110), RH	1	.Pocket	.Ficka	
0510	7	79 71 393		4	.Screw	.Skruv	5
0520	8	42 63 935	210), LH	1	.Handle	.Handtag	5
0530	8	42 63 927	210), RH	1	.Handle	.Handtag	5
0540	8	42 70 146	110), LH	1	.Handle	.Handtag	
0550	8	42 70 153	110), RH	1	.Handle	.Handtag	
0560	8	41 29 292	100), LH	1	.Handle	.Handtag	5
0570	8	41 29 300	100), RH	1	.Handle	.Handtag	5
0580	9	97 97 200		1	.Washer	.Bricka	5
0590	10	*96 71 389*	NLS - USE 9891391	1	.Washer	.Bricka	5

18. For cars with door fan För bilar med dörrfläkt
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX


Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

Upholstery

5-E08 Door trim 1997 Rear door

Klädsel

Dörrklädsel 1997
Bakdörr

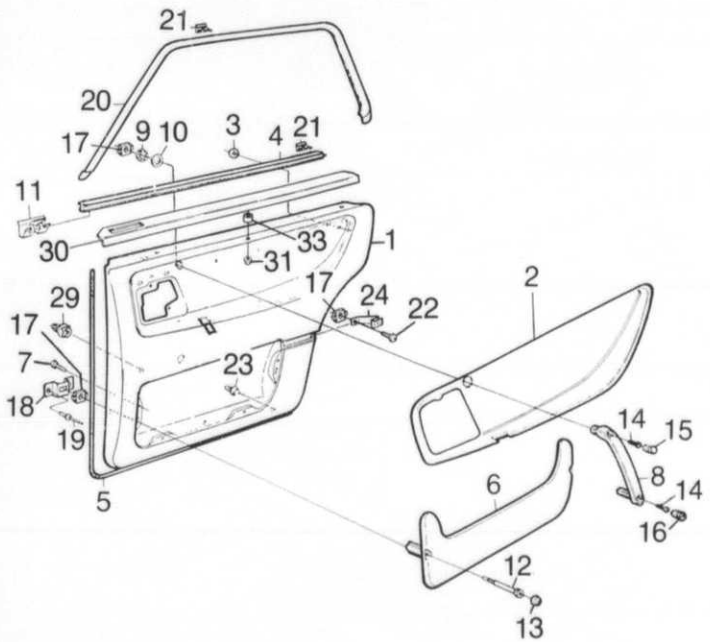

F8272 CAC94

1336	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	11	42 70 047			4	Clamp	Klämma	3
0610								
0620	12	97 80 156			4	Screw	Skruv	5
0630	13	42 63 471		210)	4	Cover	Täcklock	5
0640	13	42 68 058		110)	4	Cover	Täcklock	
0650	13	41 33 427		100)	4	Cover	Täcklock	5
0660	14	79 82 333			4	Screw	Skruv	5
0670	15	42 63 455		210)	2	Cover washer	Täckbricka	5
0680	15	42 68 033		110)	2	Cover washer	Täckbricka	
0690	15	41 29 276		100)	2	Cover washer	Täckbricka	5
0700	16	42 63 463		210)	2	Cover washer	Täckbricka	5
0710	16	42 68 041		110)	2	Cover washer	Täckbricka	
0720	16	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	17	79 74 231			20	Cage nut	Korgmutter	5
0740	18	97 79 844			2	Bracket	Hållare	6
0750	19	79 72 490			4	Rivet	Nit	5
0760	20	42 68 249		LH	1	Upholstery	Klädsel	6
0770	20	42 68 231		RH	1	Upholstery	Klädsel	6
0780	21	96 60 143			22	Clamp	Klammer	5
0790	22	79 82 333			2	Screw	Skruv	5
0800	23	*97 94 686*		NLS - USE 9796939	2	Clamp	Klämma	6
0810	24	96 60 820			4	Clamp	Klämma	6
0820	29	96 78 990		18)	2	Clamp	Klämma	5
0830	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
0840	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
0850	31	73 98 423			6	Nut	Mutter	5


18. For cars with door fan — För bilar med dörrfläkt
100. Light grey — Ljus grå
110. Black — Svart
210. Light beige — Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

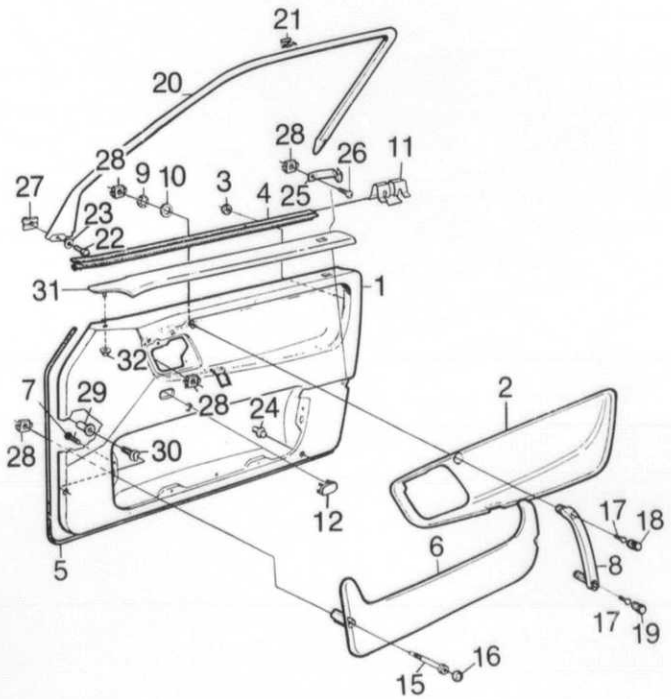

F8645 CAC94

Upholstery

5 –E10

Door trim 1998- Front door

Klädsel

Dörrklädsel 1998- Framdörr

1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16,L33,L37				
0020	1	48 18 951		210), LH	1	Door trim	Dörrklädsel	
0030	1	48 18 969		210), RH	1	Door trim	Dörrklädsel	
0040	2	46 37 344		210), LH	1	.Arm rest	.Armstöd	
0050	2	46 37 351		210), RH	1	.Arm rest	.Armstöd	
0120				TRIM COLOUR H16, H33				
0130	1	48 18 936		100), LH	1	Door trim	Dörrklädsel	
0140	1	48 18 944		100), RH	1	Door trim	Dörrklädsel	
0150	2	46 37 328		100), LH	1	.Arm rest	.Armstöd	
0160	2	46 37 336		100), RH	1	.Arm rest	.Armstöd	
0230				TRIM COLOUR K16,K33,K37				
0240	1	48 18 910		110), LH	1	Door trim	Dörrklädsel	
0250	1	48 18 928		110), RH	1	Door trim	Dörrklädsel	
0260	2	46 37 286		110), LH	1	.Arm rest	.Armstöd	
0270	2	46 37 294		110), RH	1	.Arm rest	.Armstöd	
0340								
0350	3	96 95 081			X	.Washer	.Bricka	5
0360	4	96 60 986		LH	1	.Sealing strip	.Tätningslist	6
0370	4	96 60 838		RH	1	.Sealing strip	.Tätningslist	6
0380	5	98 95 699			2	.Strip	.List	6
0390	6	42 63 638		210), LH	1	.Pocket	.Ficka	6
0400	6	42 63 620		210), RH	1	.Pocket	.Ficka	6
0410	6	41 35 489		100), LH	1	.Pocket	.Ficka	6
0420	6	41 35 471		100), RH	1	.Pocket	.Ficka	6
0430	6	42 70 542		110), LH	1	.Pocket	.Ficka	
0440	6	42 70 559		110), RH	1	.Pocket	.Ficka	
0460	7	79 71 393			4	.Screw	.Skruv	5
0470	8	42 63 612		210), LH	1	.Handle	.Handtag	5
0480	8	42 63 604		210), RH	1	.Handle	.Handtag	5
0490	8	42 70 526		110), LH	1	.Handle	.Handtag	
0500	8	42 70 534		110), RH	1	.Handle	.Handtag	
0510	8	41 29 250		100), LH	1	.Handle	.Handtag	5
0520	8	41 29 268		100), RH	1	.Handle	.Handtag	5
0530	9	97 97 200			1	.Washer	.Bricka	5
0540	10	*96 71 389*		NLS – USE 9891391	1	.Washer	.Bricka	5
0550	11	42 70 047			4	.Clamp	.Klämma	3
0560	12	45 12 984		210)	1	.Cover	.Täcklock	
0570	12	45 12 976		100)	1	.Cover	.Täcklock	
0580	12	45 12 968		110)	1	.Cover	.Täcklock	
0585								
0590	15	97 80 156			4	Screw	Skruv	5
0600	16	42 63 471		210)	4	Cover	Täcklock	5
0610	16	42 68 058		110)	4	Cover	Täcklock	
0620	16	41 33 427		100)	4	Cover	Täcklock	5
0640	17	79 82 333			4	Screw	Skruv	5
0650	18	42 63 455		210)	2	Cover washer	Täckbricka	5
0660	18	42 68 033		110)	2	Cover washer	Täckbricka	
0670	18	41 29 276		100)	2	Cover washer	Täckbricka	5
0690	19	42 63 463		210)	2	Cover washer	Täckbricka	5
0700	19	42 68 041		110)	2	Cover washer	Täckbricka	
0710	19	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	20	42 68 223		LH	1	Upholstery	Klädsel	6
0740	20	42 68 215		RH	1	Upholstery	Klädsel	6
0750	21	96 60 143			22	Clamp	Klammer	5
0760	22	*79 72 896*		NLS – USE 7965684, 8073090	2	Screw	Skruv	5
0760								
0770	23	96 60 077			2	Washer	Bricka	5
0780	24	97 96 939			2	Clamp	Klämma	6
0790	25	97 96 616			2	Clamp	Klämma	6
0800	26	79 82 333			4	Screw	Skruv	5


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

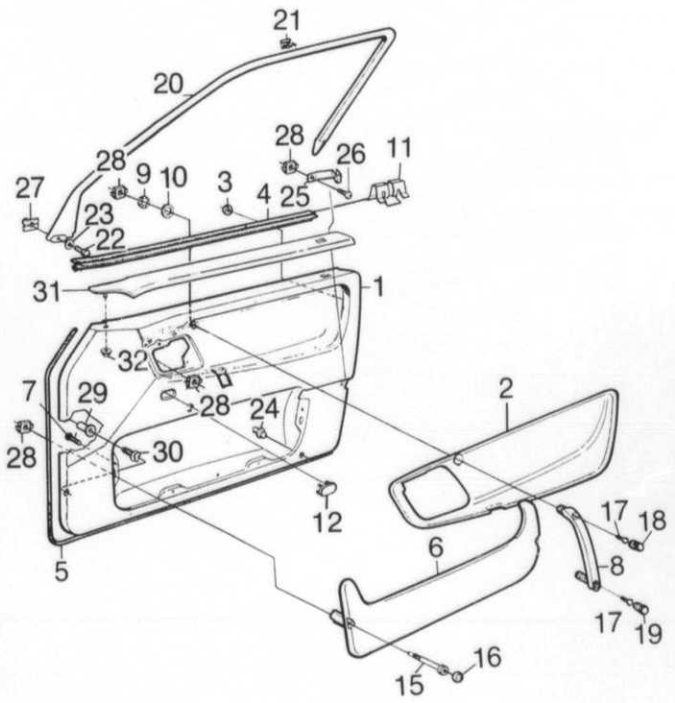

F8645 CAC94

Upholstery

5-E12

Door trim 1998- Front door

Klädsel

Dörrklädsel 1998- Framdörr


1337	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0810	27	96 71 033			2	Clamp	Klämma	6
0820	28	79 74 231			X	Cage nut	Korgmutter	5
0830	29	95 45 906			2	Sleeve	Hylsa	5
0840	30	95 45 898			2	Upholstery clip	Klädselfäste	5
0850	31	86 69 210		LH	1	Wooden insert	Träinlägg	6
0860	31	86 69 202		RH	1	Wooden insert	Träinlägg	6
0870	32	73 98 423			8	Nut	Mutter	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

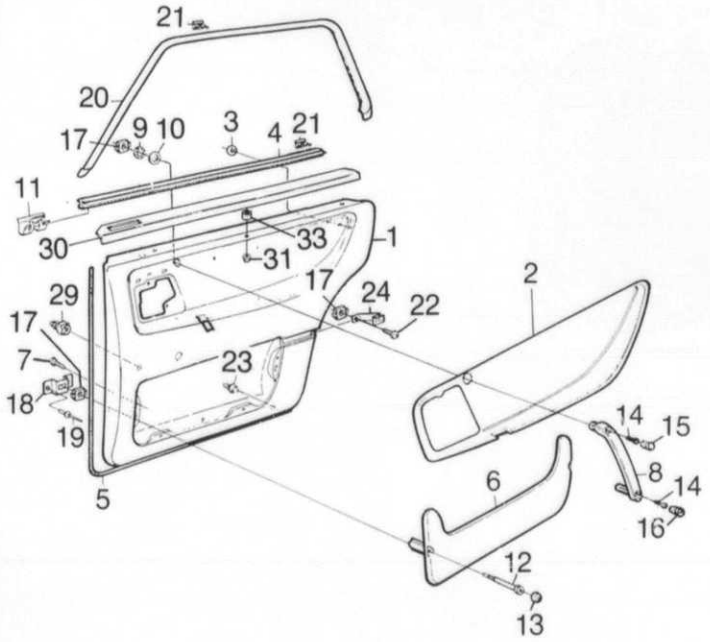

F8646 CAC94

Upholstery

5-E14 Door trim 1998- Rear door

Klädsel

Dörrklädsel 1998- Bakdörr

1338	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16,L33, L37				
0020	1	47 43 449		210), LH	1	Door trim	Dörrklädsel	
0030	1	47 43 456		210), RH	1	Door trim	Dörrklädsel	
0040	1	47 43 506		210,18), LH	1	Door trim	Dörrklädsel	
0050	1	47 43 514		210,18), RH	1	Door trim	Dörrklädsel	
0060	2	46 37 781		210), LH	1	.Arm rest	.Armstöd	
0070	2	46 37 799		210), RH	1	.Arm rest	.Armstöd	
0140				TRIM COLOUR H16, H33				
0150	1	47 43 423		100), LH	1	Door trim	Dörrklädsel	
0160	1	47 43 431		100), RH	1	Door trim	Dörrklädsel	
0170	1	47 43 480		100,18), LH	1	Door trim	Dörrklädsel	
0180	1	47 43 498		100,18), RH	1	Door trim	Dörrklädsel	
0190	2	46 37 765		100), LH	1	.Arm rest	.Armstöd	
0200	2	46 37 773		100), RH	1	.Arm rest	.Armstöd	
0270				TRIM COLOUR K16,K33,K37				
0280	1	47 43 407		110), LH	1	Door trim	Dörrklädsel	
0290	1	47 43 415		110), RH	1	Door trim	Dörrklädsel	
0300	1	47 43 464		110,18), LH	1	Door trim	Dörrklädsel	
0310	1	47 43 472		110,18), RH	1	Door trim	Dörrklädsel	
0320	2	46 37 724		110), LH	1	.Arm rest	.Armstöd	
0330	2	46 37 732		110), RH	1	.Arm rest	.Armstöd	
0400								
0410	3	96 95 081			X	.Washer	.Bricka	5
0420	4	48 17 706		LH	1	.Sealing strip	.Tätningslist	3
0430	4	48 17 714		RH	1	.Sealing strip	.Tätningslist	3
0440	5	98 95 970			2	.Strip	.List	6
0450	6	42 63 950		210), LH	1	.Pocket	.Ficka	6
0460	6	42 63 943		210), RH	1	.Pocket	.Ficka	6
0470	6	41 35 224		100), LH	1	.Pocket	.Ficka	6
0480	6	41 35 331		100), RH	1	.Pocket	.Ficka	6
0490	6	42 70 161		110), LH	1	.Pocket	.Ficka	
0500	6	42 70 179		110), RH	1	.Pocket	.Ficka	
0510	7	79 71 393			4	.Screw	.Skruv	5
0520	8	42 63 935		210), LH	1	.Handle	.Handtag	5
0530	8	42 63 927		210), RH	1	.Handle	.Handtag	5
0540	8	42 70 146		110), LH	1	.Handle	.Handtag	
0550	8	42 70 153		110), RH	1	.Handle	.Handtag	
0560	8	41 29 292		100), LH	1	.Handle	.Handtag	5
0570	8	41 29 300		100), RH	1	.Handle	.Handtag	5
0580	9	97 97 200			1	.Washer	.Bricka	5
0590	10	*96 71 389*		NLS – USE 9891391	1	.Washer	.Bricka	5
0600	11	42 70 047			4	.Clamp	.Klämma	3
0610								
0620	12	97 80 156			4	Screw	Skruv	5
0630	13	42 63 471		210)	4	Cover	Täcklock	5
0640	13	42 68 058		110)	4	Cover	Täcklock	
0650	13	41 33 427		100)	4	Cover	Täcklock	5
0660	14	79 82 333			4	Screw	Skruv	5
0670	15	42 63 455		210)	2	Cover washer	Täckbricka	5
0680	15	42 68 033		110)	2	Cover washer	Täckbricka	
0690	15	41 29 276		100)	2	Cover washer	Täckbricka	5
0700	16	42 63 463		210)	2	Cover washer	Täckbricka	5
0710	16	42 68 041		110)	2	Cover washer	Täckbricka	
0720	16	41 29 284		100)	2	Cover washer	Täckbricka	5
0730	17	79 74 231			20	Cage nut	Korgmutter	5
0740	18	97 79 844			2	Bracket	Hållare	6
0750	19	79 72 490			4	Rivet	Nit	5
0760	20	42 68 249		LH	1	Upholstery	Klädsel	6
0770	20	42 68 231		RH	1	Upholstery	Klädsel	6

18. For cars with door fan För bilar med dörrfläkt
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-E16

Door trim 1998-
Rear door

Dörrklädsel 1998-
Bakdörr

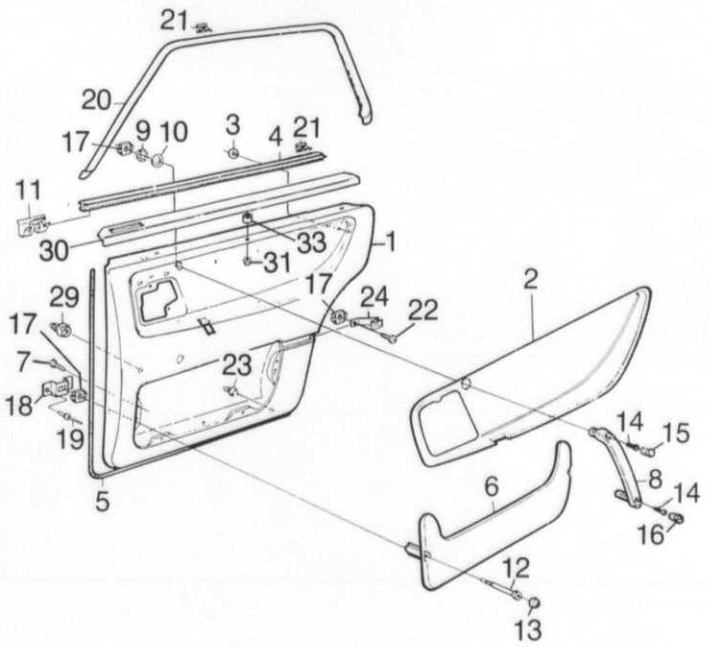

F8646 CAC94

1338	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0780	21	96 60 143			22	Clamp	Klammer	5
0790	22	79 82 333			2	Screw	Skruv	5
0800	23	*97 94 686*		NLS – USE 9796939	2	Clamp	Klämma	6
0810	24	96 60 820			4	Clamp	Klämma	6
0820	29	96 78 996		18)	2	Clamp	Klämma	5
0830	30	86 69 236		18), LH	1	Wooden insert	Träinlägg	6
0840	30	86 69 228		18), RH	1	Wooden insert	Träinlägg	6
0850	31	73 98 423			6	Nut	Mutter	5

18. For cars with door fan For bilar med dörrfläkt

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-E18

Luggage compartment
Bagagerum

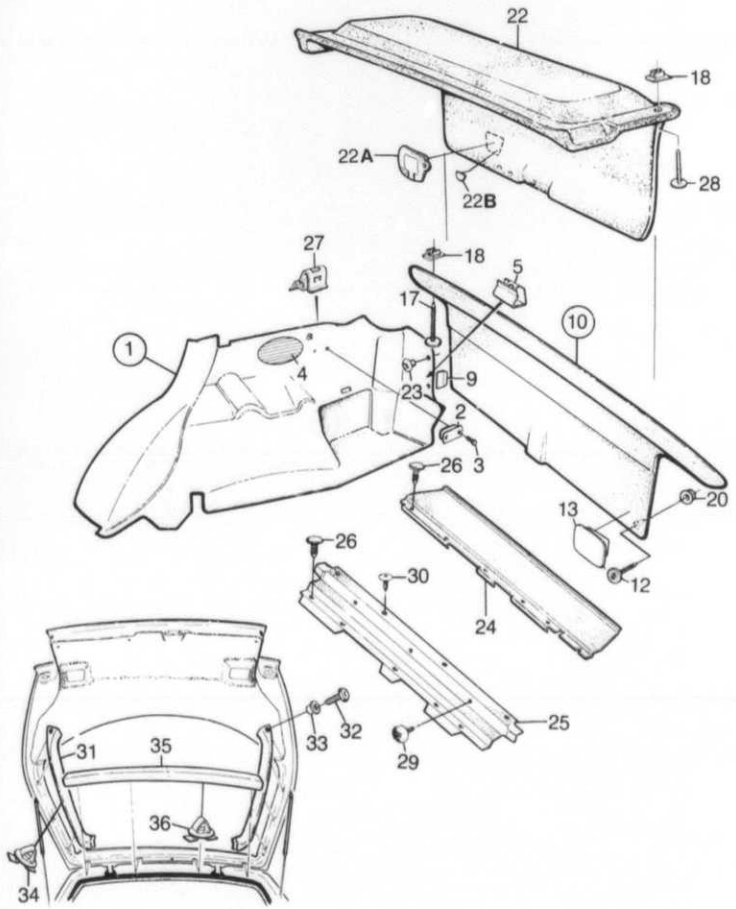

F6547 CAC94

1340	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0060	1	90 84 575		404), 5CS, LH	1	Upholstery	Klädsel	5
0070	1	90 84 567		404), 5CS, RH	1	Upholstery	Klädsel	5
0080	1	47 05 547		405), 5CS, LH	1	Upholstery	Klädsel	5
0090	1	47 05 554		405), 5CS, RH	1	Upholstery	Klädsel	5
0140	1	41 35 976		404), 4D, LH	1	Upholstery	Klädsel	6
0150	1	*47 35 984*		404), 4D, RH NLS - USE 4705513	1	Upholstery	Klädsel	6
0150								
0160	1	47 05 505		405), -1997, 4D, LH	1	Upholstery	Klädsel	6
0170	1	47 05 513		405), -1997, 4D, RH	1	Upholstery	Klädsel	6
0180	2			RH	1	.Lamp	.Lampa	
0200				See page 3A-057, 2-C10				
0210	3			RH	2	.Screw	.Skruv	
0220				See page 3A-057, 2-C10				
0230	4			RH	1	.Grille	.Galler	
0250				See page 8B-181, 5-H14				
0260	5	41 40 315		5CS	1	.Clamp	.Klämma	6
0270	9	42 69 874		5CS	1	Plate	Plåt	
0310	10	90 83 395		5CS	1	Upholstery	Klädsel	6
0330	12	94 91 689		5CS	2	.Special screw	.Snabbskruv	5
0340	13	90 84 633		5CS	2	.Cover	.Kåpa	5
0390	17	94 91 689			X	Special screw	Snabbskruv	5
0400	18	84 52 898			X	Quick nut	Snabbmutter	3
0430	20	94 73 877			6	Sleeve	Hylsa	5
0470	22	42 68 355		1994, 4D	1	Upholstery	Klädsel	6
0471	22	42 68 348		1995-1997, 4D	1	Upholstery	Klädsel	6
0472	22A	42 74 650		1995-1997, 4D	2	.Cover	.Kåpa	
0473	22B	46 03 866		1995-1997, 4D	2	.Clamp	.Klämma	
0480	23	40 87 029		410), 5CS	4	Push nut	Tryckmutter	6
0490	23	47 41 211		411), 5CS	4	Push nut	Tryckmutter	6
0500	24	41 41 644		-1997, 4D	1	Upholstery	Klädsel	6
0505	25	90 88 659		5CS, AU, CA	1	Sill protection	Tröskelskydd	5
0510	25	90 87 057		5CS	1	Sill protection	Tröskelskydd	5
0530	26	96 68 153			3	Clip	Clips	5
0540	27	96 90 264		-1997, 4D	X	Clamp	Klämma	5
0550	28	94 91 689		-1997, 4D	6	Special screw	Snabbskruv	5
0560	29	95 91 637		5CS, AU, CA	3	Cover	Täcklock	5
0570	30	97 71 320		5CS	4	Screw	Skruv	5
0580	31	90 87 412		5CS, LH	1	Crash pad	Stötskydd	6
0590	31	90 87 404		5CS, RH	1	Crash pad	Stötskydd	6
0600	32	97 71 320		5CS	1	.Screw	.Skruv	5
0610	33	42 62 242		5CS	1	.Sleeve	.Hylsa	5
0620	34	90 87 438		5CS	3	.Clip	.Clips	5
0630	35	90 87 420		5CS	1	Crash pad	Stötskydd	6
0640	36	90 87 438		5CS	4	.Clip	.Clips	5

404. Ch. -S1027947
405. Ch. S1027948-
410. Ch. -S1030119
411. Ch. S1030120-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-E20

Carpets 1994
Mattor 1994

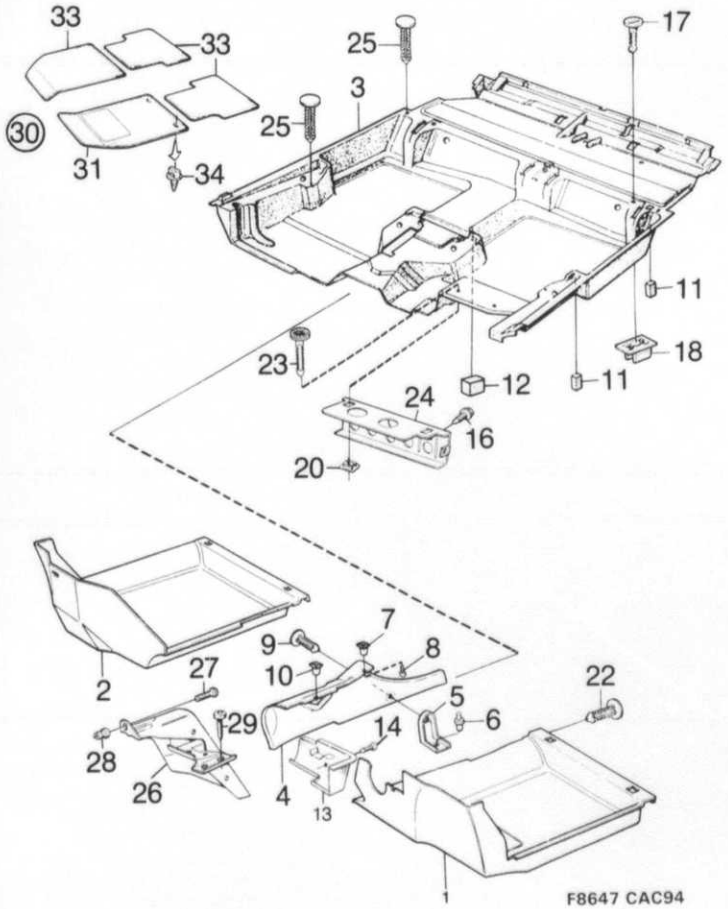

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J44,J33,J93				
0020				L33				
0025	1	42 61 244		210), LH	1	Carpet	Matta	6
0030	2	44 99 786		210), RH	1	Carpet	Matta	6
0040	1	42 61 293		210), LH, RHD	1	Carpet	Matta	6
0050	2	42 61 285		210), RH, RHD	1	Carpet	Matta	6
0060	3	42 61 376		210)	1	Carpet	Matta	6
0070	3	42 61 392		210), 4D	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	44 98 499		210), RH	1	Carpet	Matta	
0100	4	42 61 319		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0130				TRIM COLOUR H44,H33,H35,				
0141				K44, K64, K33, K35, K93				
0145	1	42 64 644		70), LH	1	Carpet	Matta	6
0150	2	44 99 794		70), RH	1	Carpet	Matta	6
0160	1	*42 64 768*		70), LH, RHD NLS - USE 4510285	1	Carpet	Matta	6
0170	2	42 64 651		70), RH, RHD	1	Carpet	Matta	6
0180	3	*42 64 941*		70) NLS - USE 4608394	1	Carpet	Matta	6
0190	3	42 65 047		70), 4D	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	
0210	4	44 98 473		70), RH	1	Carpet	Matta	
0220	4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0380				TRIM COLOUR G44, G33				
0385	1	42 64 685		90), LH	1	Carpet	Matta	6
0390	2	44 99 810		90), RH	1	Carpet	Matta	6
0400	1	42 64 842		90), LH, RHD	1	Carpet	Matta	6
0410	2	42 64 693		90), RH, RHD	1	Carpet	Matta	6
0420	3	42 64 966		90)	1	Carpet	Matta	6
0430	3	42 65 062		90), 4D	1	Carpet	Matta	6
0440	4	95 80 911		90), LH	1	Carpet	Matta	6
0450	4	44 98 481		90), RH	1	Carpet	Matta	
0460	4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0470	4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0480								
0490	5	96 63 345		LH	1	Bracket	Fäste	5
0500	5	96 63 352		RH	1	Bracket	Fäste	5
0510	6	98 49 514			2	Rivet	Nit	5
0520	7	79 77 358			2	Press nut	Pressmutter	5
0530	8	97 71 320			2	Screw	Skruv	5
0540	9	42 60 824		210)	4	Clip	Clips	5
0550	9	96 68 153		70)	4	Clip	Clips	5
0570	9	95 80 846		90)	4	Clip	Clips	5
0580	10	79 77 341			2	Press nut	Pressmutter	5
0590	11	98 97 919			2	Spacer	Mellanlägg	5
0600	12	98 97 901			2	Spacer	Mellanlägg	5
0610								
0625	13	45 11 564		210), RHD	1	Cover	Kåpa	
0635	13	45 11 572		70), RHD	1	Cover	Kåpa	
0655	13	*45 11 556*		90), RHD NLS - USE 4136446	1	Cover	Kåpa	
0655								
0660								
0680	14	94 91 689			1	Special screw	Snabbskruv	5
0720	16	79 78 091			2	Screw	Skruv	5
0790	17	94 91 689		4D	2	Special screw	Snabbskruv	5
0820	18	84 52 898		4D	2	Quick nut	Snabbmutter	3
0850	20	84 52 898			2	Quick nut	Snabbmutter	3
0870	22	96 68 153			7	Clip	Clips	5

70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-E22

Carpets 1994
Mattor 1994

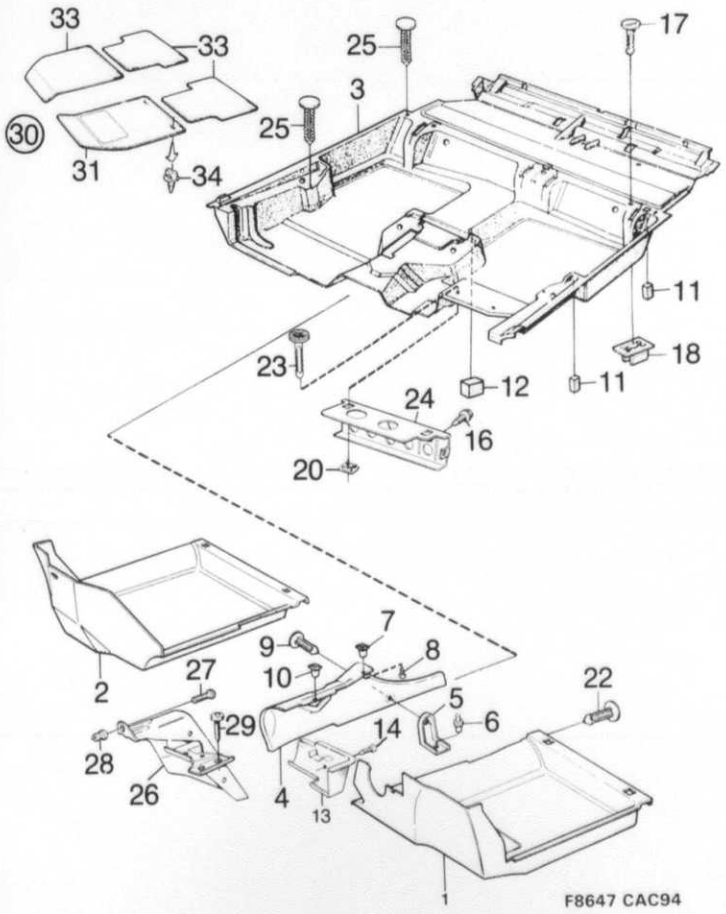

1370	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0880	23	94 91 689			2	Special screw	Snabbskruv	5
0890	24	41 60 628			1	Carpet retainer	Matthållare	5
0900	25	42 60 824		210)	2	Clip	Clips	5
0910	25	96 68 153		70)	2	Clip	Clips	5
0930	25	95 80 846		90)	2	Clip	Clips	5
0940	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0950	27	79 77 283		RHD	1	Screw	Skruv	5
0960	28	73 98 936		RHD	1	Nut	Mutter	5
0970	29	79 77 366		RHD	2	Screw	Skruv	5
0980	30	• 42 74 957		LHD, J93, 40/400109443	1	Mat set	Mattsats	6
0981	30	• 44 85 041		LHD, K93, 40/400109401	1	Mat set	Mattsats	6
0982	30	• 44 85 074		RHD, J93, 40/400109468	1	Mat set	Mattsats	6
0983	30	• 44 85 108		RHD, K93, 40/400109427	1	Mat set	Mattsats	6
0984	31	42 74 965		LH, LHD, J93	1	.Carpet	.Matta	6
0993	31	44 85 009		LH, LHD, K93	1	.Carpet	.Matta	6
1010	31	44 85 090		RH, RHD, J93	1	.Carpet	.Matta	6
1014	31	44 85 124		RH, RHD, K93	1	.Carpet	.Matta	6
1035	33			1)	3	.Carpet	.Matta	
1040	34	42 69 932			2	.Bracket	.Fäste	6

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-E24

Carpets 1995
Mattor 1995

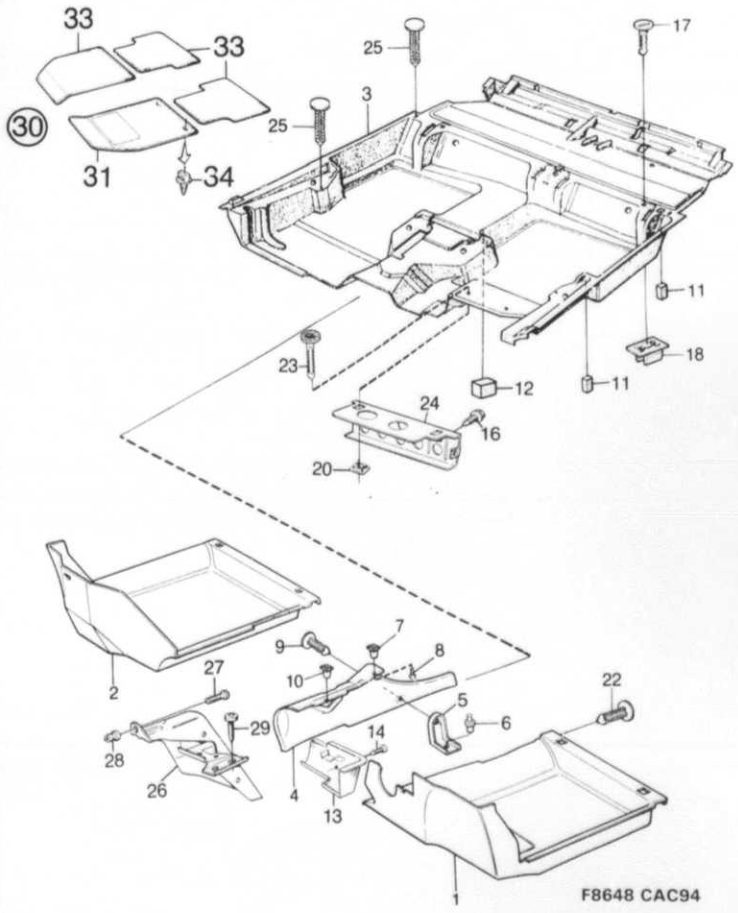

1375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Descripti...i	Benämning	S L
0010				TRIM COLOUR J44, L33				
0020	1	42 61 244		210), LH	1	Carpet	Matta	6
0030	2	44 99 786		210), RH	1	Carpet	Matta	6
0040	1	45 10 301		210), LH, RHD	1	Carpet	Matta	6
0050	2	42 61 285		210), RH, RHD	1	Carpet	Matta	6
0060	3	42 61 376		210,364), 5CS	1	Carpet	Matta	6
0070	3	42 61 392		210,364), 4D	1	Carpet	Matta	6
0075	3	46 08 410		210,365)	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	44 98 499		210), RH	1	Carpet	Matta	
0100	4	42 61 319		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0120				TRIM COLOUR H44,H33,H35,				
0130				K44, K64, K33, K35				
0140	1	42 64 644		70), LH	1	Carpet	Matta	6
0150	2	44 99 794		70), RH	1	Carpet	Matta	6
0160	1	45 10 285		70), LH, RHD	1	Carpet	Matta	6
0170	2	42 64 651		70), RH, RHD	1	Carpet	Matta	6
0180	3	*42 64 941*		70,364), 5CS NLS - USE 4608394	1	Carpet	Matta	6
0180								
0190	3	42 65 047		70,364), 4D	1	Carpet	Matta	6
0195	3	46 08 394		70,365)	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	6
0210	4	44 98 473		70), RH	1	Carpet	Matta	
0220	4	96 90 728		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0240				TRIM COLOUR G33				
0250	1	42 64 685		90), LH	1	Carpet	Matta	6
0260	2	44 99 810		90), RH	1	Carpet	Matta	6
0270	1	45 10 293		90), LH, RHD	1	Carpet	Matta	6
0280	2	42 64 693		90), RH, RHD	1	Carpet	Matta	6
0290	3	42 64 966		90,364), 5CS	1	Carpet	Matta	6
0300	3	42 65 062		90,364), 4D	1	Carpet	Matta	6
0310	3	46 08 402		90,365)	1	Carpet	Matta	6
0320	4	95 80 911		90), LH	1	Carpet	Matta	6
0330	4	44 98 481		90), RH	1	Carpet	Matta	
0340	4	95 80 820		90), LH, RHD	1	Carpet	Matta	6
0350	4	95 80 838		90), RH, RHD	1	Carpet	Matta	6
0360	5	96 63 345		LH	1	Bracket	Fäste	5
0370	5	96 63 352		RH	1	Bracket	Fäste	5
0380	6	98 49 514			2	Rivet	Nit	5
0390	7	79 77 358			2	Press nut	Pressmutter	5
0400	8	97 71 320			2	Screw	Skruv	5
0410	9	42 60 824		210)	4	Clip	Clips	5
0420	9	96 68 153		70)	4	Clip	Clips	5
0430	9	95 80 846		90)	4	Clip	Clips	5
0440	10	79 77 341			2	Press nut	Pressmutter	5
0450	11	98 97 919			2	Spacer	Mellanlägg	5
0460	12	98 97 901			2	Spacer	Mellanlägg	5
0470								
0480	13	45 11 564		210), RHD	1	Cover	Kåpa	
0490	13	45 11 572		70), RHD	1	Cover	Kåpa	
0500	13	*45 11 556*		90), RHD NLS - USE 4136446	1	Cover	Kåpa	
0500								
0510								
0520	14	94 91 689			1	Special screw	Snabbskruv	5
0530	16	79 78 091			2	Screw	Skruv	5

70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige
364. C... -S1002971
365. C... .S1002972-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -F02

Carpets 1995
Mattor 1995

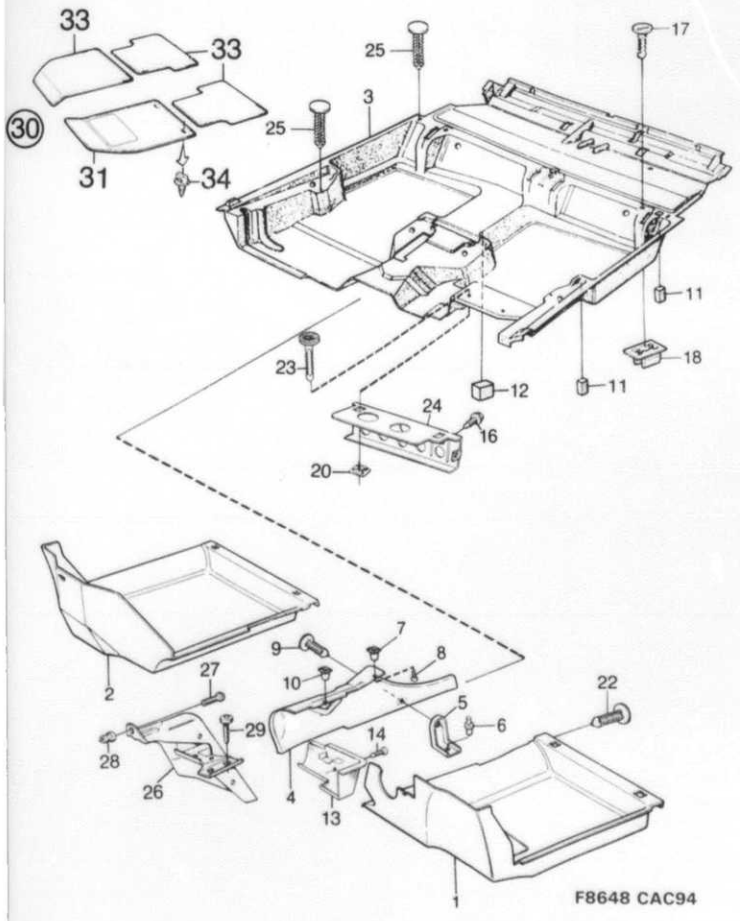

1375	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0540	17	94 91 689		364), 4D	2	Special screw	Snabbskruv	5
0550	18	84 52 898		364), 4D	2	Quick nut	Snabbmutter	3
0560	20	84 52 898			2	Quick nut	Snabbmutter	3
0570	22	96 68 153			7	Clip	Clips	5
0580	23	94 91 689			2	Special screw	Snabbskruv	5
0590	24	41 60 628			1	Carpet retainer	Matthållare	
0600	25	42 60 824		210)	2	Clip	Clips	5
0610	25	96 68 153		70)	2	Clip	Clips	5
0620	25	95 80 846		90)	2	Clip	Clips	5
0630	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0640	27	79 77 283		RHD	1	Screw	Skruv	5
0650	28	73 98 936		RHD	1	Nut	Mutter	5
0660	29	79 77 366		RHD	2	Screw	Skruv	5
0670	30	• 42 74 957		210), LHD, 40/400109443	1	Mat set	Mattsats	6
0671	30	• 44 85 041		70), LHD, 40/400109401	1	Mat set	Mattsats	6
0672	30	• 46 04 930		90), LHD, 40/132127028	1	Mat set	Mattsats	6
0673	30	• 44 85 074		210), RHD, 40/400109468	1	Mat set	Mattsats	6
0674	30	• 44 85 108		70), RHD, 40/400109427	1	Mat set	Mattsats	6
0675	31	42 74 965		210), LH, LHD	1	.Carpet	.Matta	6
0690	31	44 85 009		70), LH, LHD	1	.Carpet	.Matta	6
0710	31	46 04 948		90), LH, LHD	1	.Carpet	.Matta	6
0730	31	44 85 090		210), RH, RHD	1	.Carpet	.Matta	6
0750	31	44 85 124		70), RH, RHD	1	.Carpet	.Matta	6
0800	33			1)	3	.Carpet	.Matta	
0830	34	42 69 932			2	.Bracket	.Fäste	6

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
90. Yellow Gul
210. Light beige Ljus beige
364. Ch. -S1002971

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -F04

Carpets 1996
Mattor 1996

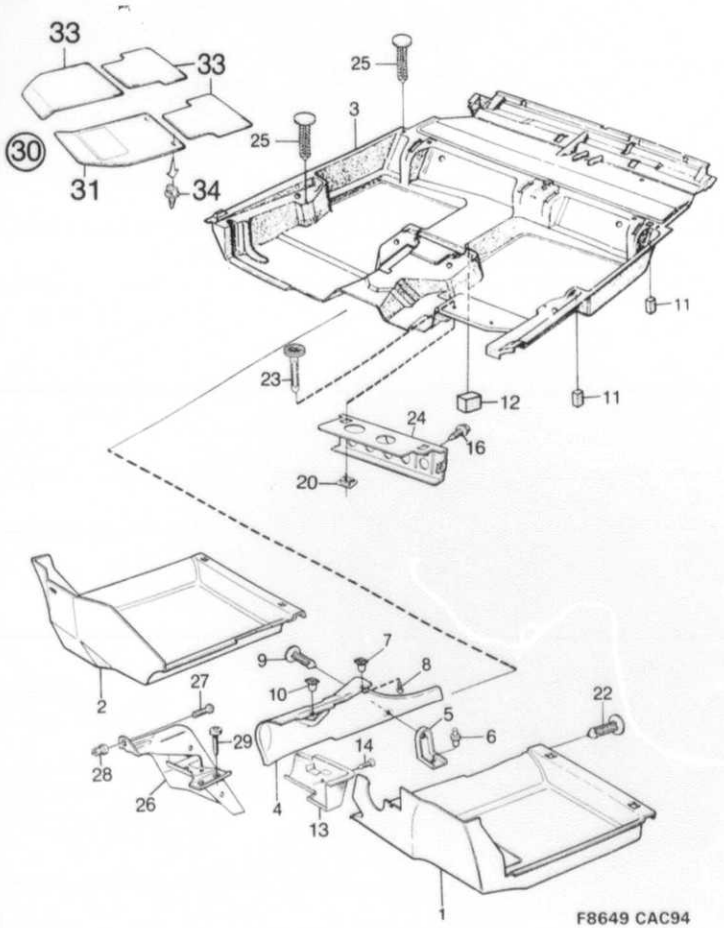

1380	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				TRIM COLOUR J16,L33,L35				
0020	1	42 61 244		210), LH	1	Carpet	Matta	6
0030	2	44 99 786		210), RH	1	Carpet	Matta	6
0040	1	45 10 301		210), LH, RHD	1	Carpet	Matta	6
0050	2	42 61 285		210), RH, RHD	1	Carpet	Matta	6
0075	3	46 08 410		210)	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	47 08 475		210), RH	1	Carpet	Matta	
0100	4	47 08 533		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0120				TRIM COLOUR H16,H33,H35,				
0130				K16, K64, K33, K35				
0140	1	42 64 644		70), LH	1	Carpet	Matta	6
0150	2	44 99 794		70), RH	1	Carpet	Matta	6
0160	1	45 10 285		70), LH, RHD	1	Carpet	Matta	6
0170	2	42 64 651		70), RH, RHD	1	Carpet	Matta	6
0195	3	46 08 394		70)	1	Carpet	Matta	6
0200	4	96 90 629		70), LH	1	Carpet	Matta	6
0210	4	47 08 467		70), RH	1	Carpet	Matta	
0220	4	47 08 525		70), LH, RHD	1	Carpet	Matta	6
0230	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0350								
0360	5	96 63 345		LH	1	Bracket	Fäste	5
0370	5	96 63 352		RH	1	Bracket	Fäste	5
0380	6	98 49 514			2	Rivet	Nit	5
0390	7	79 77 358			2	Press nut	Pressmutter	5
0400	8	97 71 320			2	Screw	Skruv	5
0410	9	42 60 824		210)	4	Clip	Clips	5
0420	9	96 68 153		70)	4	Clip	Clips	5
0440	10	79 77 341			2	Press nut	Pressmutter	5
0450	11	98 97 919		433)	2	Spacer	Mellanlägg	5
0460	12	98 97 901			2	Spacer	Mellanlägg	5
0470								
0480	13	45 11 564		210), RHD	1	Cover	Kåpa	
0490	13	45 11 572		70), RHD	1	Cover	Kåpa	
0510								
0520	14	94 91 689			1	Special screw	Snabbskruv	5
0530	16	79 78 091			2	Screw	Skruv	5
0560	20	84 52 898			2	Quick nut	Snabbmutter	3
0570	22	96 68 153			6	Clip	Clips	5
0580	23	94 91 689			2	Special screw	Snabbskruv	5
0590	24	41 60 628			1	Carpet retainer	Matthållare	
0600	25	42 60 824		210)	2	Clip	Clips	5
0610	25	96 68 153		70)	2	Clip	Clips	5
0630	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0640	27	79 77 283		RHD	1	Screw	Skruv	5
0650	28	73 98 936		RHD	1	Nut	Mutter	5
0660	29	79 77 366		RHD	2	Screw	Skruv	5
0670	30	• 42 74 957		210), LHD, 40/400109443	1	Mat set	Mattsats	6
0671	30	• 44 85 041		70), LHD, 40/400109401	1	Mat set	Mattsats	6
0672	30	• 44 85 074		210), RHD, 40/400109468	1	Mat set	Mattsats	6
0673	30	• 44 85 108		70), RHD, 40/400109427	1	Mat set	Mattsats	6
0674	31	42 74 965		210), LH, LHD	1	.Carpet	.Matta	6
0690	31	44 85 009		70), LH, LHD	1	.Carpet	.Matta	6
0730	31	44 85 090		210), RH, RHD	1	.Carpet	.Matta	6
0750	31	44 85 124		70), RH, RHD	1	.Carpet	.Matta	6
0800	33			1)	3	.Carpet	.Matta	
0830	34	42 69 932			2	.Bracket	.Fäste	6


1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
210. Light beige Ljus beige
433. Ch. -T1014968

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

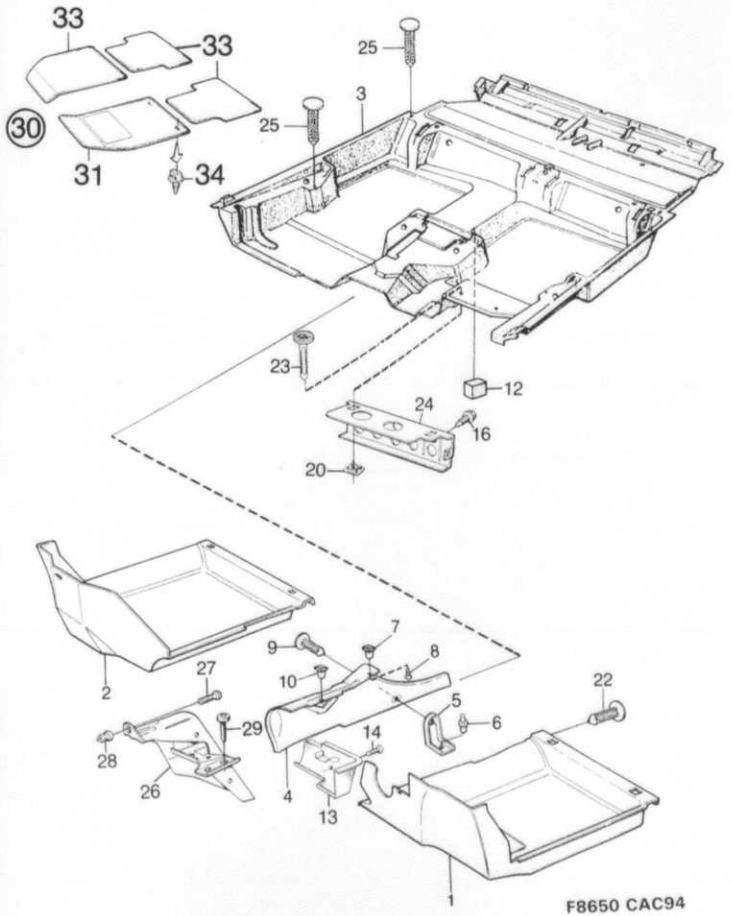

Upholstery

5-F06 Carpets 1997

Klädsel

Mattor 1997

1385	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0010				TRIM COLOUR J16,L33,L35,				
0020				L37				
0030	1	48 22 599		210), LH	1	Carpet	Matta	
0040	2	44 99 786		210), RH	1	Carpet	Matta	6
0050	1	45 10 301		210), LH, RHD	1	Carpet	Matta	6
0060	2	48 22 615		210), RH, RHD	1	Carpet	Matta	
0070	3	46 08 410		210)	1	Carpet	Matta	6
0080	4	42 61 277		210), LH	1	Carpet	Matta	6
0090	4	47 08 475		210), RH	1	Carpet	Matta	
0100	4	47 08 533		210), LH, RHD	1	Carpet	Matta	6
0110	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0120				TRIM COLOUR H16,H33,H35,				
0130				K16, K64, K33, K35, K37				
0140	1	48 22 581		70), LH	1	Carpet	Matta	
0150	2	44 99 794		70), RH	1	Carpet	Matta	6
0160	1	45 10 285		70), LH, RHD	1	Carpet	Matta	6
0170	2	48 22 607		70), RH, RHD	1	Carpet	Matta	
0180	3	46 08 394		70)	1	Carpet	Matta	6
0190	4	96 90 629		70), LH	1	Carpet	Matta	6
0200	4	47 08 467		70), RH	1	Carpet	Matta	
0210	4	47 08 525		70), LH, RHD	1	Carpet	Matta	6
0220	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0230								
0240	5	96 63 345		LH	1	Bracket	Fäste	5
0250	5	96 63 352		RH	1	Bracket	Fäste	5
0260	6	98 49 514			2	Rivet	Nit	5
0270	7	79 77 358			2	Press nut	Pressmutter	5
0280	8	97 71 320			2	Screw	Skruv	5
0290	9	42 60 824		210)	4	Clip	Clips	5
0300	9	96 68 153		70)	4	Clip	Clips	5
0310	10	79 77 341			2	Press nut	Pressmutter	5
0320	12	98 97 901			2	Spacer	Mellanlägg	5
0330								
0340	13	45 11 564		210), RHD	1	Cover	Kåpa	
0350	13	45 11 572		70), RHD	1	Cover	Kåpa	
0360								
0370	14	94 91 689			1	Special screw	Snabbskruv	5
0380	16	79 78 091			2	Screw	Skruv	5
0390	20	84 52 898			2	Quick nut	Snabbmutter	3
0400	22	96 68 153			6	Clip	Clips	5
0410	23	94 91 689			2	Special screw	Snabbskruv	5
0420	24	41 60 628			1	Carpet retainer	Matthållare	
0430	25	42 60 824		210)	2	Clip	Clips	5
0440	25	96 68 153		70)	2	Clip	Clips	5
0450	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0460	27	79 77 283		RHD	1	Screw	Skruv	5
0470	28	73 98 936		RHD	1	Nut	Mutter	5
0480	29	79 77 366		RHD	2	Screw	Skruv	5
0490	30	• 42 74 957		210), LHD, 40/400109443	1	Mat set	Mattsats	6
0500	30	• 47 89 038		210),LHD,TRIM COLOUR L37	1	Mat set	Mattsats	6
0505				40/400109484				
0510	30	• 44 85 041		70), LHD, 40/400109401	1	Mat set	Mattsats	6
0520	30	• 47 89 020		70), LHD,TRIM COLOUR K37	1	Mat set	Mattsats	
0525				40/400109351				
0530	30	• 44 85 074		210), RHD, 40/400109468	1	Mat set	Mattsats	6
0540	30	• 47 88 972		210),RHD,TRIM COLOUR L37	1	Mat set	Mattsats	6
0545				40/400109500				
0550	30	• 44 85 108		70), RHD, 40/400109427	1	Mat set	Mattsats	6
0560	30	• 47 88 964		70), RHD,TRIM COLOUR K37	1	Mat set	Mattsats	6
0565				40/400109377				
0570	31	42 74 965		210), LH, LHD	1	.Carpet	.Matta	6

70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F08

Carpets 1997
Mattor 1997

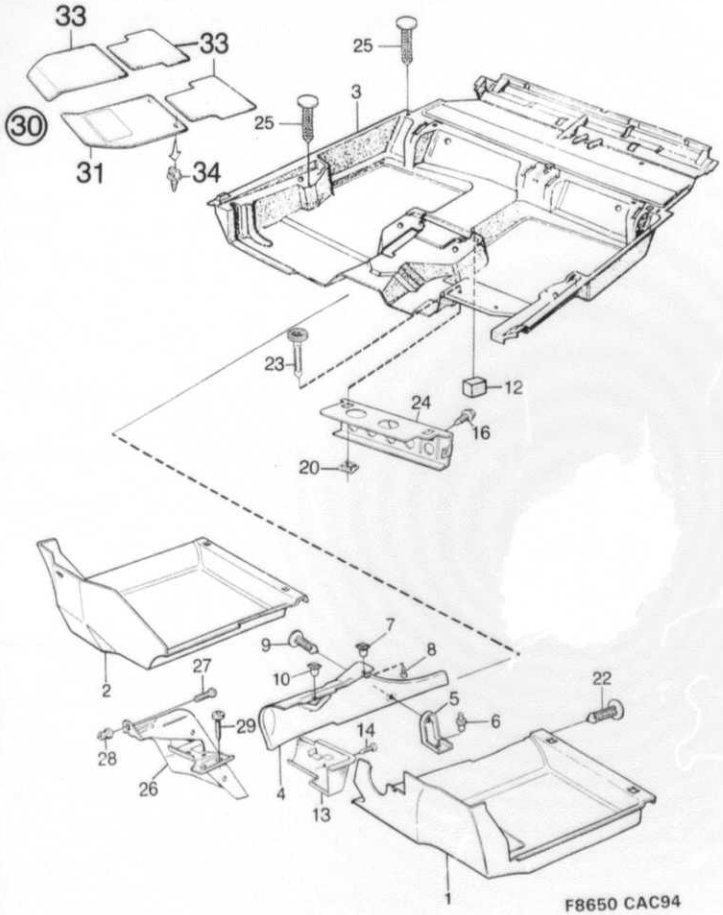

1385	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	31	48 15 007		210),LH,LHD,TRIM COL.L37	1	.Carpet	.Matta	6
0590	31	44 85 009		70), LH, LHD	1	.Carpet	.Matta	6
0600	31	47 94 996		70),LH,LHD,TRIM COL. K37	1	.Carpet	.Matta	6
0610	31	44 85 090		210), RH, RHD	1	.Carpet	.Matta	6
0620	31	48 15 023		210),RH,RHD,TRIM COL.L37	1	.Carpet	.Matta	6
0630	31	44 85 124		70), RH, RHD	1	.Carpet	.Matta	6
0640	31	48 15 015		70),RH,RHD,TRIM COL.K37	1	.Carpet	.Matta	6
0650	33			1)	3	.Carpet	.Matta	
0660	34	42 69 932			2	Bracket	Fäste	6


1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

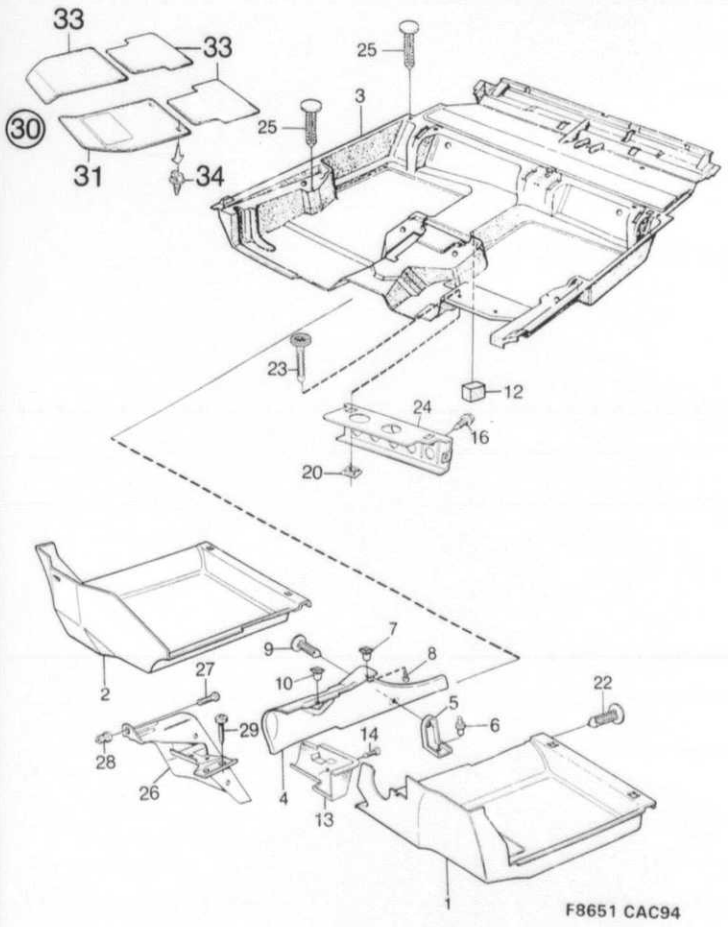

Upholstery

5-F10 *Carpets 1998-*

Klädsel

Mattor 1998-

1390	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				TRIM COLOUR J16,L33,L37				
0020	1	48 22 599		210), LH	1	Carpet	Matta	
0030	2	44 99 786		210), RH	1	Carpet	Matta	6
0040	1	45 10 301		210), LH, RHD	1	Carpet	Matta	6
0050	2	48 22 615		210), RH, RHD	1	Carpet	Matta	
0060	3	46 08 410		210)	1	Carpet	Matta	6
0070	4	42 61 277		210), LH	1	Carpet	Matta	6
0080	4	47 08 475		210), RH	1	Carpet	Matta	
0090	4	47 08 533		210), LH, RHD	1	Carpet	Matta	6
0100	4	42 61 301		210), RH, RHD	1	Carpet	Matta	6
0110				TRIM COLOUR H16, H33,				
0120				K16, K33, K37				
0130	1	48 22 581		70), LH	1	Carpet	Matta	
0140	2	44 99 794		70), RH	1	Carpet	Matta	6
0150	1	45 10 285		70), LH, RHD	1	Carpet	Matta	6
0160	2	48 22 607		70), RH, RHD	1	Carpet	Matta	
0170	3	46 08 394		70)	1	Carpet	Matta	6
0180	4	96 90 629		70), LH	1	Carpet	Matta	6
0190	4	47 08 467		70), RH	1	Carpet	Matta	
0200	4	47 08 525		70), LH, RHD	1	Carpet	Matta	6
0210	4	96 90 777		70), RH, RHD	1	Carpet	Matta	6
0220								
0230	5	96 63 345		LH	1	Bracket	Fäste	5
0240	5	96 63 352		RH	1	Bracket	Fäste	5
0250	6	98 49 514			2	Rivet	Nit	5
0260	7	79 77 358			2	Press nut	Pressmutter	5
0270	8	97 71 320			2	Screw	Skruv	5
0280	9	42 60 824		210)	4	Clip	Clips	5
0290	9	96 68 153		70)	4	Clip	Clips	5
0300	10	79 77 341			2	Press nut	Pressmutter	5
0310	12	98 97 901			2	Spacer	Mellanlägg	5
0320								
0330	13	45 11 564		210), RHD	1	Cover	Kåpa	
0340	13	45 11 572		70), RHD	1	Cover	Kåpa	
0350								
0360	14	94 91 689			1	Special screw	Snabbskruv	5
0370	16	79 78 091			2	Screw	Skruv	5
0380	20	84 52 898			2	Quick nut	Snabbmutter	3
0390	22	96 68 153			6	Clip	Clips	5
0400	23	94 91 689			2	Special screw	Snabbskruv	5
0410	24	41 60 628			1	Carpet retainer	Matthållare	
0420	25	42 60 824		210)	2	Clip	Clips	5
0430	25	96 68 153		70)	2	Clip	Clips	5
0440	26	42 72 217		RHD	1	Foot rest	Fotstöd	5
0450	27	79 77 283		RHD	1	Screw	Skruv	5
0460	28	73 98 936		RHD	1	Nut	Mutter	5
0470	29	79 77 366		RHD	2	Screw	Skruv	5
0480	30	• 42 74 957		210), LHD, 40/400109443	1	Mat set	Mattsats	6
0490	30	• 47 89 038		210),LHD,TRIM COLOUR L37	1	Mat set	Mattsats	6
0495				40/400109484	1			
0500	30	• 44 85 041		70), LHD, 40/400109401	1	Mat set	Mattsats	6
0510	30	• 47 89 020		70), LHD,TRIM COLOUR K37	1	Mat set	Mattsats	
0515				40/400109351	1			
0520	30	• 44 85 074		210), RHD, 40/400109468	1	Mat set	Mattsats	6
0530	30	• 47 88 972		210),RHD,TRIM COLOUR L37	1	Mat set	Mattsats	6
0535				40/400109500	1			
0540	30	• 44 85 108		70), RHD, 40/400109427	1	Mat set	Mattsats	6
0550	30	• 47 88 964		70), RHD,TRIM COLOUR K37	1	Mat set	Mattsats	6
0555				40/400109377	1			
0560	31	42 74 965		210), LH, LHD	1	.Carpet	.Matta	6
0570	31	48 15 007		210),LH,LHD,TRIM COL.L37	1	.Carpet	.Matta	6

70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F12

Carpets 1998-

Mattor 1998-

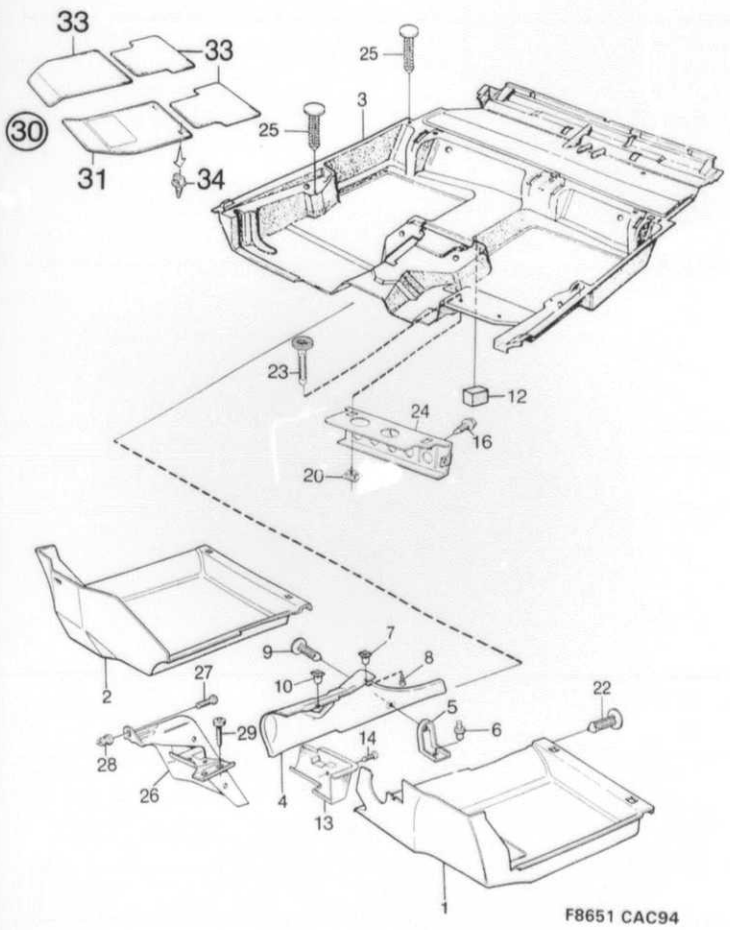

F8651 CAC94

1390	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	31	44 85 009		70), LH, LHD	1	.Carpet	.Matta	6
0590	31	47 94 996		70),LH,LHD,TRIM COL. K37	1	.Carpet	.Matta	6
0600	31	44 85 090		210), RH, RHD	1	.Carpet	.Matta	6
0610	31	48 15 023		210),RH,RHD,TRIM COL.L37	1	.Carpet	.Matta	6
0620	31	44 85 124		70), RH, RHD	1	.Carpet	.Matta	6
0630	31	48 15 015		70),RH,RHD,TRIM COL.K37	1	.Carpet	.Matta	6
0640	33			1)	3	.Carpet	.Matta	
0650	34	42 69 932			2	.Bracket	.Fäste	6

1. Not as separate spare part. Ej som separat reservdel.
70. Grey Grå
210. Light beige Ljus beige

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F14

Head- and pillar lining
Takklädsel,stolpklädsel

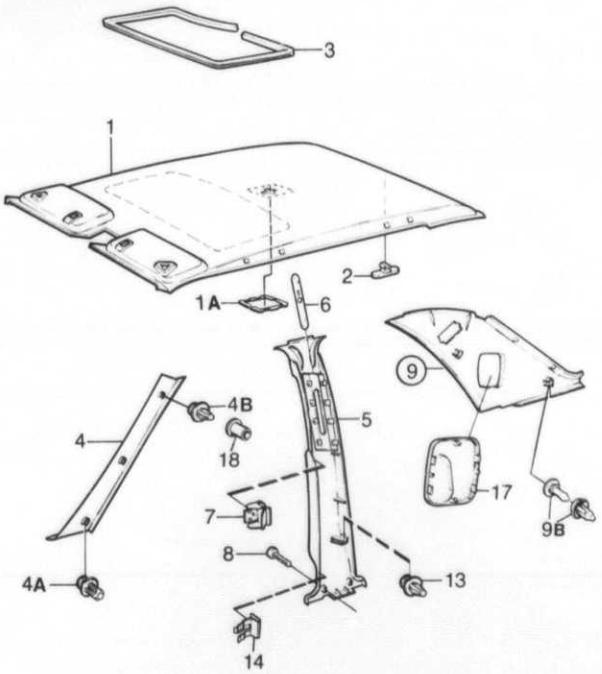

F8569 CAC94

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	42 73 660		5CS	1	Head lining	Takklädsel	6
0050	1	42 73 652		-1997, 4D	1	Head lining	Takklädsel	6
0080	1	42 73 645		5CS, SR	1	Head lining	Takklädsel	6
0100	1	42 73 637		-1997, 4D, SR	1	Head lining	Takklädsel	6
0110	1A	97 56 974			1	.Protection	.Skydd	6
0120	2	97 85 031			1	Upholstery clip	Klädselfäste	5
0130	3	96 63 907		SR	1	Strip	List	6
0140								
0380	4	42 73 579		362), LH	1	Crash pad	Stötskydd	6
0390	4	42 73 587		362), RH	1	Crash pad	Stötskydd	6
0400	4	46 08 105		363), LH	1	Crash pad	Stötskydd	6
0410	4	46 08 113		363), RH	1	Crash pad	Stötskydd	6
0440	4A	95 48 389		398)	2	.Clip	.Clips	5
0445	4A	95 48 389		399)	3	.Clip	.Clips	5
0450	4B	97 50 753		398)	1	.Clip	.Clips	5
0460								
0490	5	44 86 585		210), LH	1	Crash pad	Stötskydd	6
0500	5	44 86 593		210), RH	1	Crash pad	Stötskydd	6
0550	5	44 86 643		90), -1995, LH	1	Crash pad	Stötskydd	6
0560	5	44 86 650		90), -1995, RH	1	Crash pad	Stötskydd	6
0630	5	44 86 627		100), LH	1	Crash pad	Stötskydd	6
0640	5	44 86 635		100), RH	1	Crash pad	Stötskydd	6
0650	5	44 86 668		110), LH	1	Crash pad	Stötskydd	
0660	5	44 86 676		110), RH	1	Crash pad	Stötskydd	
0670								
0680	6	95 86 371			2	Rail	Skena	5
0690	7	97 71 189			2	Clamp	Klämma	5
0700	8	79 75 337			4	Screw	Skruv	5
0840								
0850	9	*42 73 629*		362), 5CS, LH NLS – USE 4608147	1	Crash pad	Stötskydd	6
0860	9	*42 73 611*		362), 5CS, RH NLS – USE 4608154	1	Crash pad	Stötskydd	6
0870	9	46 08 147		363), 5CS, LH	1	Crash pad	Stötskydd	6
0880	9	46 08 154		363), 5CS, RH	1	Crash pad	Stötskydd	6
0940	9	42 73 595		362), LH, 4D	1	Crash pad	Stötskydd	6
0950	9	42 73 603		362), RH, 4D	1	Crash pad	Stötskydd	6
0960	9	46 08 121		363), -1997, LH, 4D	1	Crash pad	Stötskydd	6
0970	9	46 08 139		363), -1997, RH, 4D	1	Crash pad	Stötskydd	6
0990	9B	42 66 540			X	.Clip	.Clips	5
1020								
1080	13	94 73 869			2	Clip	Clips	5
1090	14	97 95 709			2	Clamp	Klämma	5
1130	17	96 91 262		LH	1	Grommet	Genomföring	5
1140	17	96 91 254		RH	1	Grommet	Genomföring	5
1150	18	95 45 906		399)	2	Sleeve	Hylsa	5

90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
362. Ch. -S1003494
363. Ch. S1003495-
398. Ch. -S1019676
399. Ch. S1019677-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F16

Front seats Part 1
Stolar Del 1

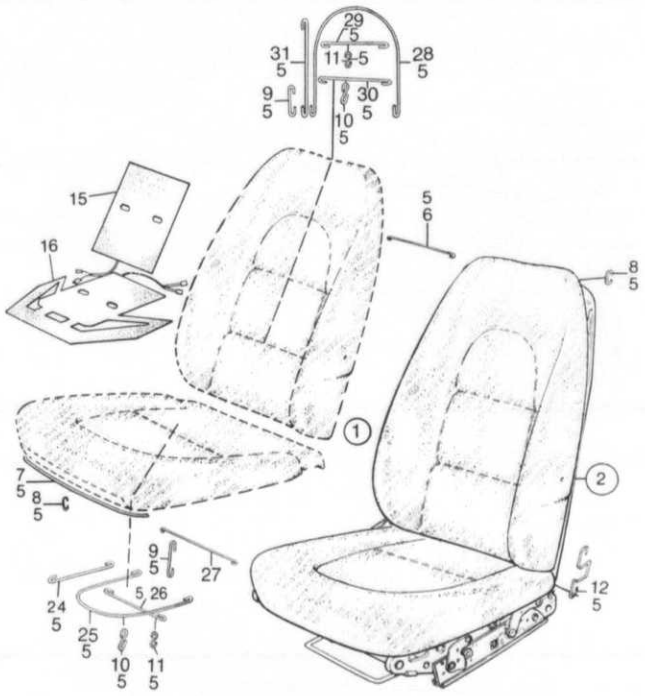

F7308 CAC94

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 68 007		19,24) LH	1	Seat	Stol	6
0020	1	43 68 015		19,24) RH	1	Seat	Stol	6
0030	1	43 68 031		19,24) LH, RHD	1	Seat	Stol	6
0040	1	43 68 023		19,24) RH, RHD	1	Seat	Stol	6
0050								
0060	1	43 68 049		25,24) LH	1	Seat	Stol	6
0070	1	43 68 056		25,24) RH	1	Seat	Stol	6
0080	1	43 68 072		25,24) LH, RHD	1	Seat	Stol	6
0090	1	43 68 064		25,24) RH, RHD	1	Seat	Stol	6
0100								
0110	2	42 57 572		19,151,421), LH	1	.Seat frame	.Stolram	6
0115	2	47 18 821		19,151,422), LH	1	.Drivers seat	.Förarstol	6
0120	2	43 09 589		19,151), RH	1	.Seat frame	.Stolram	6
0130	2	44 96 774		19,151), AIRBAG 2, RH	1	.Seat frame	.Stolram	6
0140								
0150	2	42 57 580		19,151,421), RH, RHD	1	.Seat frame	.Stolram	6
0155	2	47 18 672		19,151,422), RH, RHD	1	.Drivers seat	.Förarstol	6
0160	2	42 57 655		19,151), LH, RHD	1	.Seat frame	.Stolram	6
0170	2	45 33 105		19,151), 1995-, AIRBAG 2 LH, RHD	1	.Seat frame	.Stolram	6
0180								
0190								
0200	2	42 57 556		25,151,421), LH	1	.Seat frame	.Stolram	6
0205	2	47 18 813		25,151,422), LH	1	.Drivers seat	.Förarstol	6
0210	2	42 57 648		25,151), RH	1	.Seat frame	.Stolram	6
0220	2	44 96 758		25,151), AIRBAG 2, RH	1	.Seat frame	.Stolram	6
0230								
0240	2	42 57 564		25,151,421), RH, RHD	1	.Seat frame	.Stolram	6
0245	2	47 18 656		25,151,422), RH, RHD	1	.Drivers seat	.Förarstol	6
0250	2	42 57 630		25,151), LH, RHD	1	.Seat frame	.Stolram	6
0260	2	45 33 055		25,151), 1995-, AIRBAG 2 LH, RHD	1	.Seat frame	.Stolram	6
0270					1			
0280								
0290	5	96 97 939		19) See page 8B-195, 5-I04	1	.Mounting kit	.Monteringssats	6
0300								
0310	5	96 76 818		25) See page 8B-195, 5-I04	1	.Mounting kit	.Monteringssats	6
0320								
0330	5	96 71 751		25) See page 8B-195, 5-I04	1	.Mounting kit	.Monteringssats	6
0340								
0350	6	97 81 592			2	..Cover rod	..Klädselbåge	5
0360	7	40 55 117		LH	1	..Cover rod	..Klädselbåge	5
0365	7	41 23 394		RH	1	..Cover rod	..Klädselbåge	5
0370	8	94 50 685			X	..Clamp	..Klammer	5
0380	9	97 69 209		40 MM	X	..Hook	..Krok	5
0390	10	97 69 217		30 MM	X	..Hook	..Krok	5
0400	11	97 69 225		25) 20 MM	X	..Hook	..Krok	5
0410	12	95 93 245			2	..Attaching brace	..Fästbygel	5
0420	15	40 83 028		19)	1	.Heating pad	.Värmedyna	4
0430	15	95 69 955		25)	1	.Heating pad	.Värmedyna	4
0440	16	40 63 871		19)	1	.Heating pad	.Värmedyna	4
0450	16	40 63 855		25)	1	.Heating pad	.Värmedyna	4
0460	24	95 84 723		19)	2	.Wire rod	.Trådten	5
0470	25	96 92 906		25)	1	.Wire rod	.Trådten	5
0480	26	96 94 969		19)	1	.Wire rod	.Trådten	5
0490	26	97 21 499		25)	1	.Wire rod	.Trådten	5
0500	27	95 84 715			1	.Wire rod	.Trådten	5
0510	28	96 71 041		25)	1	.Wire rod	.Trådten	5
0520	29	96 94 969		19)	1	.Wire rod	.Trådten	5

19. For cars with textile lining För bilar med textilklädsel
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
151. See following sections for contents Se följande avsnitt för ingående artiklar
421. Ch. -T1001440
422. Ch. T1001441-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F18

Front seats Part 1
Stolar Del 1

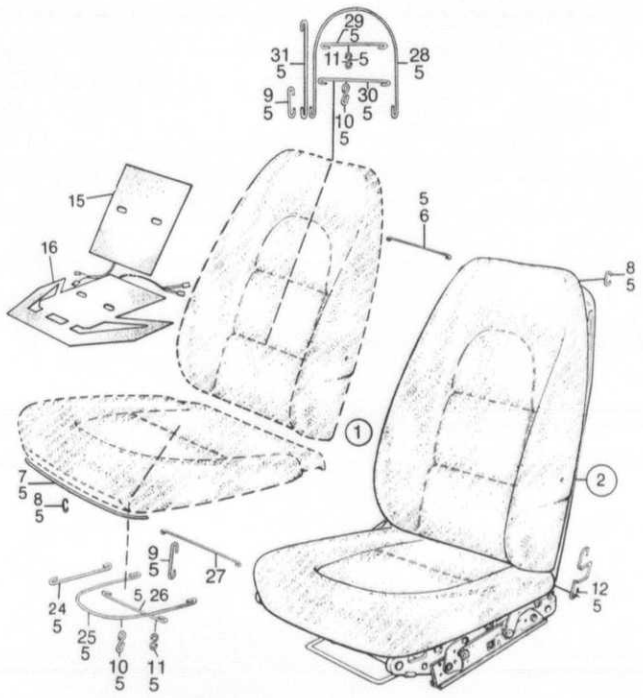

F7308 CAC94

1470	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	29	97 21 481		25)	1	.Wire rod	.Trådten	5
0540	30	97 21 499		25)	1	.Wire rod	.Trådten	5
0550	31	95 84 715		19)	2	.Wire rod	.Trådten	5

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F20

Front seats Part 2

Stolar Del 2

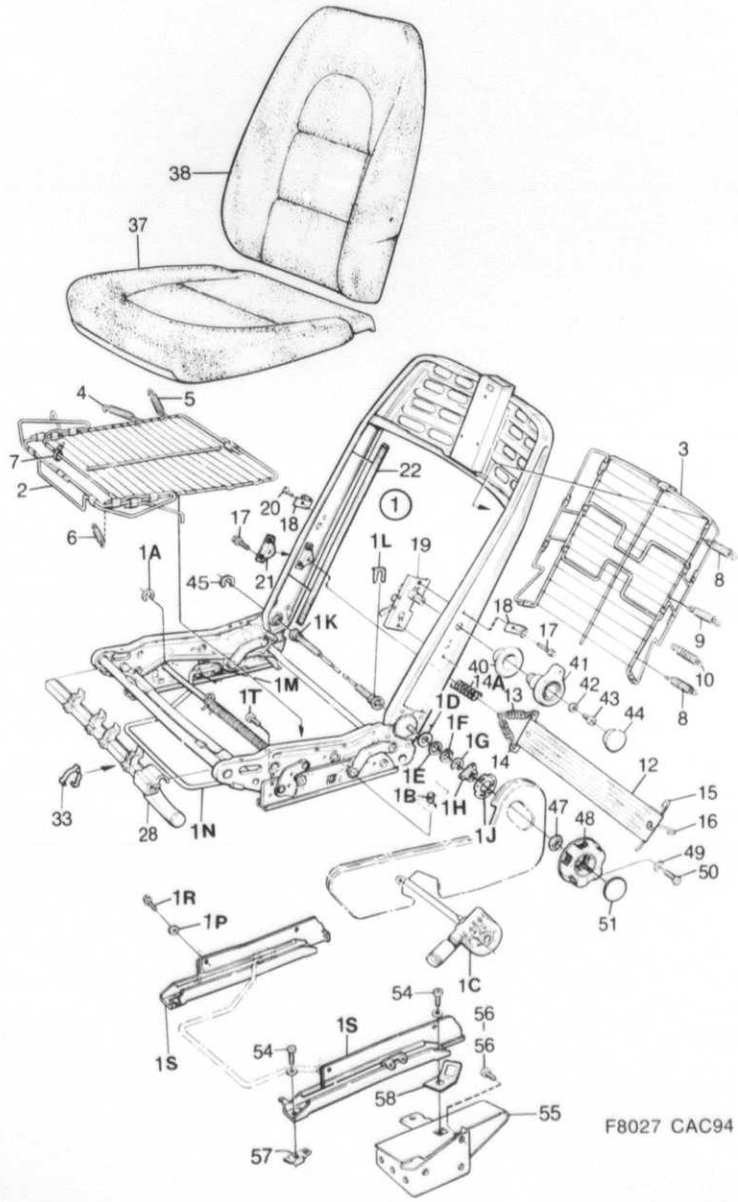

1475	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-135, 5-F16		Seat	Stol	
0020				See page 8B-135, 5-F16		.Seat frame	.Stolram	
0050	1	42 57 671		421), LH	1	..Seat frame	..Stolram	6
0055	1	47 18 730		422), LH	1	..Seat frame	..Stolram	6
0060	1	41 23 105		RH	1	..Seat frame	..Stolram	6
0070	1	44 96 782		AIRBAG 2, RH	1	..Seat frame	..Stolram	6
0080								
0110	1	42 57 689		421), RH, RHD	1	..Seat frame	..Stolram	6
0115	1	47 18 649		422), RH, RH	1	..Seat frame	..Stolram	6
0120	1	42 57 697		LH, RHD	1	..Seat frame	..Stolram	6
0125	1	45 33 048		1995-, AIRBAG 2, LH, RHD	1	..Seat frame	..Stolram	6
0130								
0140	1A	79 63 143		34)	1	...E-circlip	...Spårryttare	5
0150	1B	96 78 434		34)	4	...Stop ring	...Stoppring	5
0160	1C	96 58 584		34)	1	...Control	...Reglage	6
0170	1C	96 58 592		34), RHD	1	...Control	...Reglage	6
0180	1D	95 86 967			1	...Washer	...Bricka	5
0190	1E	95 86 975			1	...Ring	...Ring	5
0200	1F	95 86 983			1	...Washer	...Bricka	5
0210	1G	*79 36 016*		NLS – USE 8123473	1	...E-circlip	...Spårryttare	5
0220	1H	95 85 613			1	...Brake	...Broms	6
0230	1J	40 43 394			1	...Spring clamp	...Fjäderklämma	6
0240	1K	95 86 249			1	...Shaft	...Axel	6
0250	1L	97 77 327			2	...E-circlip	...Spårryttare	5
0260	1M	73 98 282			2	...Washer	...Bricka	5
0270	1N	96 59 012		34)	1	...Shaft	...Axel	6
0280	1N	96 59 020	S	35)	1	...Shaft	...Axel	6
0290	1P	79 16 497		35)	4	...Washer	...Bricka	5
0300	1R	79 72 623		35)	4	...Screw	...Skruv	5
0310	1S			34,166)	1	...Seat rail	...Stolskena	
0340	1S	41 34 672		35), LH	1	...Seat rail	...Stolskena	6
0350	1S	41 34 680		35), RH	1	...Seat rail	...Stolskena	6
0360	1S	44 96 790		35), AIRBAG 2, LH	1	...Seat rail	...Stolskena	6
0370	1S	44 96 808		35), AIRBAG 2, RH	1	...Seat rail	...Stolskena	6
0400	1S	42 55 832		35), LH, RHD	1	...Seat rail	...Stolskena	6
0410	1S	42 55 840		35), RH, RHD	1	...Seat rail	...Stolskena	6
0413	1S	45 33 022		35), AIRBAG 2, LH, RHD	1	...Seat rail	...Stolskena	6
0416	1S	45 33 030		35), AIRBAG 2, RH, RHD	1	...Seat rail	...Stolskena	6
0420	1T	80 19 713		34)	2	...Screw	...Skruv	5
0430	2	96 73 179			1	..Wire matting	..Resårmatta	6
0470	3	96 97 525			1	..Wire matting	..Resårmatta	6
0480	4	96 73 146			6	..Spring	..Fjäder	5
0490	5	96 73 435			2	..Spring	..Fjäder	6
0500	6	97 58 947			2	..Spring	..Fjäder	6
0520	7	79 71 872		35)	2	..Tensioning band	..Spännband	5
0530	8	97 59 069			4	..Spring	..Fjäder	6
0540	9	97 59 077			2	..Spring	..Fjäder	6
0550	10	97 71 205		148)	2	..Spring	..Fjäder	6
0560	12	97 70 918		34,346)	1	..Strip	..Band	6
0565	12	45 31 059		34,347)	1	..Lumbar support	..Svankstöd	6
0570	13	95 79 293		34,346)	2	..Spring	..Fjäder	6
0580	14	97 70 942		34,346)	1	..Brace	..Bygel	5
0585	14A			1,34,347)	1	...Spring	...Fjäder	
0590	15	97 70 926		34)	1	..Brace	..Bygel	5

1. Not as separate spare part. Ej som separat reservdel.
34. Driver seat Förarstol
35. Passanger seat Passagerarstol
148. Without lumbar support Utan svankstöd
166. Part of pos 1 seat frame Ingår i pos 1 stolram
346. Ch. -R1017087
347. Ch. R1017088-
421. Ch. -T1001440
422. Ch. T1001441-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F22

Front seats Part 2

Stolar Del 2

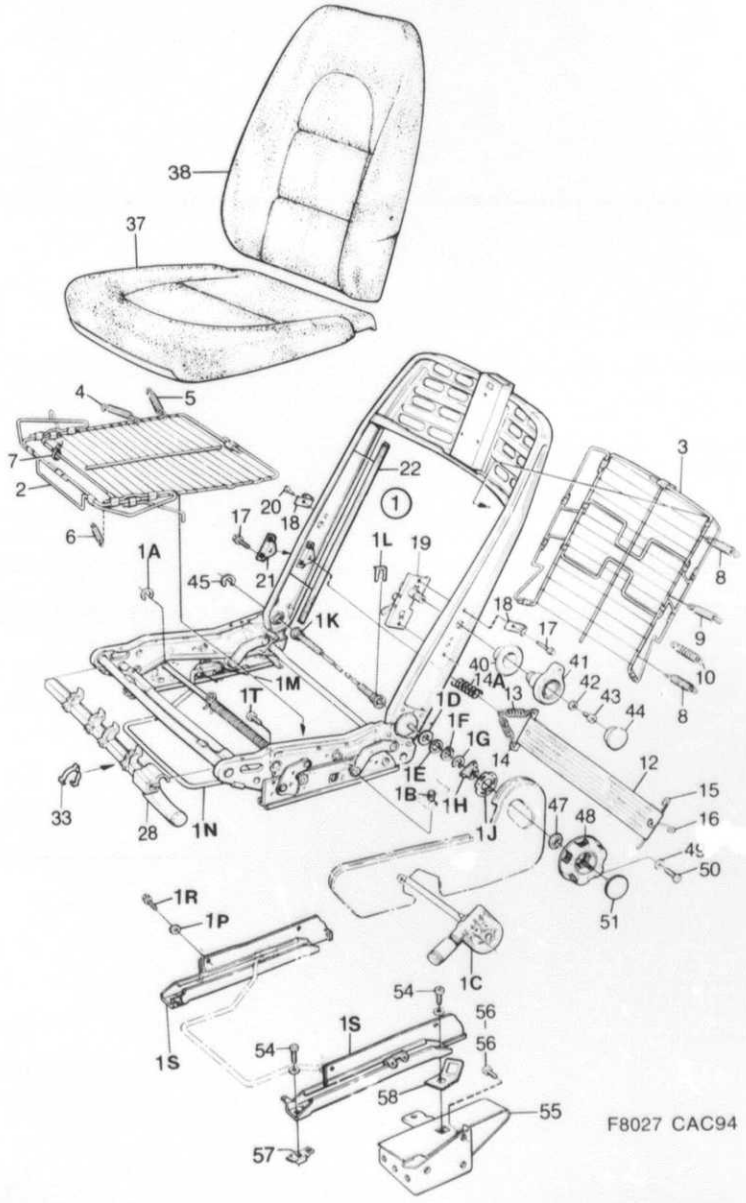

1475	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0600	16	97 70 934		34)	1	..Hook	..Krok	5
0610	17	79 74 330		34)	4	..Screw	..Skruv	5
0620	18	97 78 895			2	..Brace	..Bygel	5
0630	19	96 17 325		34)	1	..Control	..Reglage	6
0640	19	96 17 333		34), RHD	1	..Control	..Reglage	6
0660	20	79 72 516		34)	1	..Rivet	..Nit	5
0680	20	79 72 516		35)	2	..Rivet	..Nit	5
0690	21	98 64 349		34)	1	..Bracket	..Konsol	5
0700	22	96 71 835			2	..Protecting moulding	..Skyddslist	6
0740	28	96 60 853		LH	1	..Camshaft	..Kamaxel	6
0750	28	96 60 861		RH	1	..Camshaft	..Kamaxel	6
0780	33	97 67 518			2	..Clamp	..Klämma	5
0810	37	44 16 525		19)	1	..Seat cushion	..Sittdyna	6
0820	37	96 77 014		25)	1	..Seat cushion	..Sittdyna	6
0840	38	42 92 934		19)	1	..Backrest cushion	..Ryggdyna	6
0850	38	97 58 715		25)	1	..Backrest cushion	..Ryggdyna	6
0860	40	97 85 015		34)	1	.Cover washer	.Täckbricka	6
0870	41	97 63 632		34)	1	.Steering wheel	.Ratt	5
0880	42	80 29 944		34)	1	.Washer	.Bricka	5
0890	43	80 59 396		34)	1	.Screw	.Skruv	5
0900	44	97 63 624		34)	1	.Cover	.Täcklock	6
0910	45	*79 15 077*		NLS – USE 7963143	1	.E-circlip	.Spårryttare	5
0920	47	95 89 045			1	.Reinforcement	.Förstärkning	5
0930	48	95 46 946			1	.Hand wheel	.Ratt	5
0950	49	91 66 364			1	.Washer	.Bricka	5
0960	50	80 59 560			1	.Screw	.Skruv	5
0970	51	98 51 619			1	.Cover	.Täcklock	6
1000	54	41 34 003			4	.Screw	.Skruv	5
1020	55	42 56 756		LH	1	.Bracket	.Konsol	5
1040	55	42 56 749		RH	1	.Bracket	.Konsol	5
1050	56	79 74 884			3	.Screw	.Skruv	5
1060	57	79 75 766			4	Cage nut	Korgmutter	5
1070	58	47 18 839		34,422), LHD	2	Child seat mounting	Barnstolsinfästning	
1080	58	47 18 847		34,422), RHD	2	Child seat mounting	Barnstolsinfästning	

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
34. Driver seat Förarstol
35. Passanger seat Passagerarstol
422. Ch. T1001441-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-F24

Front seats Part 3

Stolar Del 3

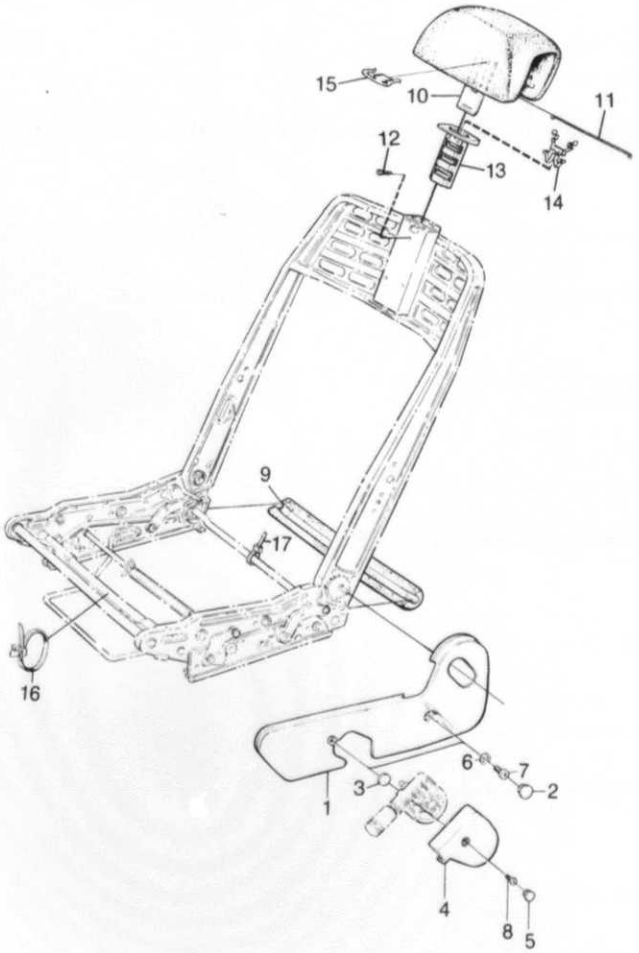

F6553 CAC94

1480 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010			See page 8B-135, 5-F16		Seat	Stol	
0115 * 1	40 33 791		LH	1	.Cover	.Kåpa	6
0125 1	40 33 890		RH	1	.Cover	.Kåpa	6
0225 1	40 33 940		LH, RHD	1	.Cover	.Kåpa	6
0235 1	40 33 841		RH, RHD	1	.Cover	.Kåpa	6
0330 2	98 92 720		34)	1	.Cover	.Täcklock	6
0340 2	98 94 973		35)	2	.Cover	.Täcklock	6
0400 2	98 92 738		34), RHD	1	.Cover	.Täcklock	6
0460 3	98 92 654		34)	1	.Cover	.Täcklock	3
0575 4	98 93 009		34)	1	.Cover	.Kåpa	6
0578 4	98 93 017		34), RHD	1	.Cover	.Kåpa	6
0635 5	98 93 033		34)	1	.Cover	.Täcklock	6
0655 6	91 66 364			2	.Washer	.Bricka	5
0660 7	80 59 537		34)	2	.Screw	.Skruv	5
0670 7	79 71 294		35)	2	.Screw	.Skruv	5
0680 8	79 22 271		34)	1	.Screw	.Skruv	5
0690 9	97 92 391			1	.Crash pad	.Stötskydd	6
1065 10	41 23 386			1	.Head restraint	.Nackstöd	6
1070 11	94 59 868			2	.Wire rod	.Trådten	6
1080 12	79 22 396			1	.Screw	.Skruv	5
1095 13	40 31 563			1	.Sleeve	.Hylsa	5
1110 14	97 96 848			1	.Locking spring	.Spärrfjäder	5
1120 15	95 45 104			1	.Clamp	.Klämma	5
1130 16	85 52 663			X	.Tensioning band	.Spännband	5
1140 17	79 71 872			X	.Tensioning band	.Spännband	5

34. Driver seat Förarstol
35. Passanger seat Passagerarstol

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G02

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

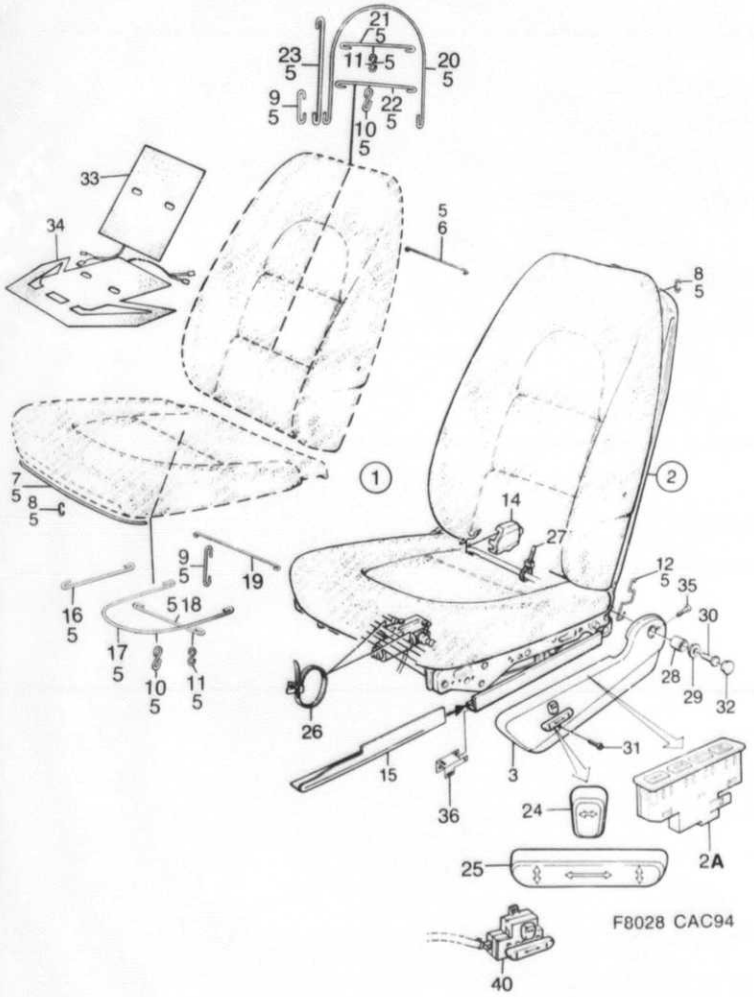

1485	Pos	Part No/Art nr	KS	Notes/Anmärkningar	Qty/Antal	Description	Benämning	SL
0060	1	43 68 080		19,24), LH	1	Seat	Stol	6
0070	1	43 68 098		19,24), RH	1	Seat	Stol	6
0080	1	43 68 122		19,24,137), LH	1	Seat	Stol	6
0090	1	43 68 130		19,24,137), RH	1	Seat	Stol	6
0100								
0110	1	43 68 106		25,278,24), LH	1	Seat	Stol	6
0120	1	43 68 114		25,278,24), RH	1	Seat	Stol	6
0130	1	43 68 148		25,278,24,137), LH	1	Seat	Stol	6
0140	1	43 68 155		25,278,24,137), RH	1	Seat	Stol	6
0150								
0220	2	44 15 394		19,151) LH	1	.Seat frame	.Stolram	6
0230	2	44 15 402		19,151) RH	1	.Seat frame	.Stolram	6
0280	2	44 15 337		19,137,151) LH	1	.Seat frame	.Stolram	6
0290	2	44 15 345		19,137,151) RH	1	.Seat frame	.Stolram	6
0300								
0350	2	44 15 352		25,151) LH	1	.Seat frame	.Stolram	6
0360	2	44 15 360		25,151) RH	1	.Seat frame	.Stolram	6
0390	2	44 15 295		25,137,151) LH	1	.Seat frame	.Stolram	6
0400	2	44 15 303		25,137,151) RH	1	.Seat frame	.Stolram	6
0410								
0432	2	44 15 436		278,151), LH	1	.Seat frame	.Stolram	6
0434	2	44 15 444		278,151), RH	1	.Seat frame	.Stolram	6
0440	2	44 15 410		278,137,151), LH	1	.Seat frame	.Stolram	6
0450	2	44 15 428		278,137,151), RH	1	.Seat frame	.Stolram	6
0460								
0470	2A	40 69 704		137)	1	..Switch	..Strömställare	5
0480	3	95 92 403		LH	1	.Cover	.Kåpa	6
0490	3	41 29 201		137), LH	1	.Cover	.Kåpa	6
0530	3	95 92 452		RH	1	.Cover	.Kåpa	6
0540	3	41 29 110		137), RH	1	.Cover	.Kåpa	6
0660	5	96 97 939		19)	1	.Mounting kit	.Monteringssats	6
0670				See page 8B-195, 5-I04				
0680	5	96 76 818		25)	1	.Mounting kit	.Monteringssats	6
0690				See page 8B-195, 5-I04				
0695	5	96 71 751		25)	1	.Mounting kit	.Monteringssats	6
0696				See page 8B-195, 5-I04				
0700	5	44 75 513		278)	1	.Mounting kit	.Monteringssats	
0710				See page 8B-195, 5-I04				
0720	6	97 81 592			2	..Cover rod	..Klädselbåge	5
0730	7	40 55 117		LH	1	..Cover rod	..Klädselbåge	5
0735	7	41 23 394		RH	1	..Cover rod	..Klädselbåge	5
0740	8	94 50 685			X	..Clamp	..Klammer	5
0750	9	97 69 209		40 MM	X	..Hook	..Krok	5
0760	10	97 69 217		30 MM	X	..Hook	..Krok	5
0770	11	97 69 225		25,278) 20 MM	X	..Hook	..Krok	5
0780	12	95 93 245			2	..Attaching brace	..Fästbygel	5
0790	14	40 34 054		LH	1	.Cover	.Kåpa	5
0800	14	40 34 047		RH	1	.Cover	.Kåpa	5
0810	15	96 95 909		LH	1	.Cover	.Kåpa	6
0820	15	96 95 917		RH	1	.Cover	.Kåpa	6
0830	16	95 34 723		19)	2	.Wire rod	.Trådten	5
0840	17	96 92 906		25)	1	.Wire rod	.Trådten	5
0860	18	96 34 969		19)	1	.Wire rod	.Trådten	5
0861	18	97 21 499		25)	1	.Wire rod	.Trådten	5
0862	19	95 84 715			1	.Wire rod	.Trådten	5
0863	20	96 71 041		25)	1	.Wire rod	.Trådten	5
0864	21	96 94 969		19)	1	.Wire rod	.Trådten	5

19. For cars with textile lining För bilar med textilklädsel
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
137. With memory function. Med minnesfunktion.
151. See following sections for contents Se följande avsnitt för ingående artiklar
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 –G04

Front seats Part 1
Electrically adjustable

Stolar Del 1
Elmanövrerade

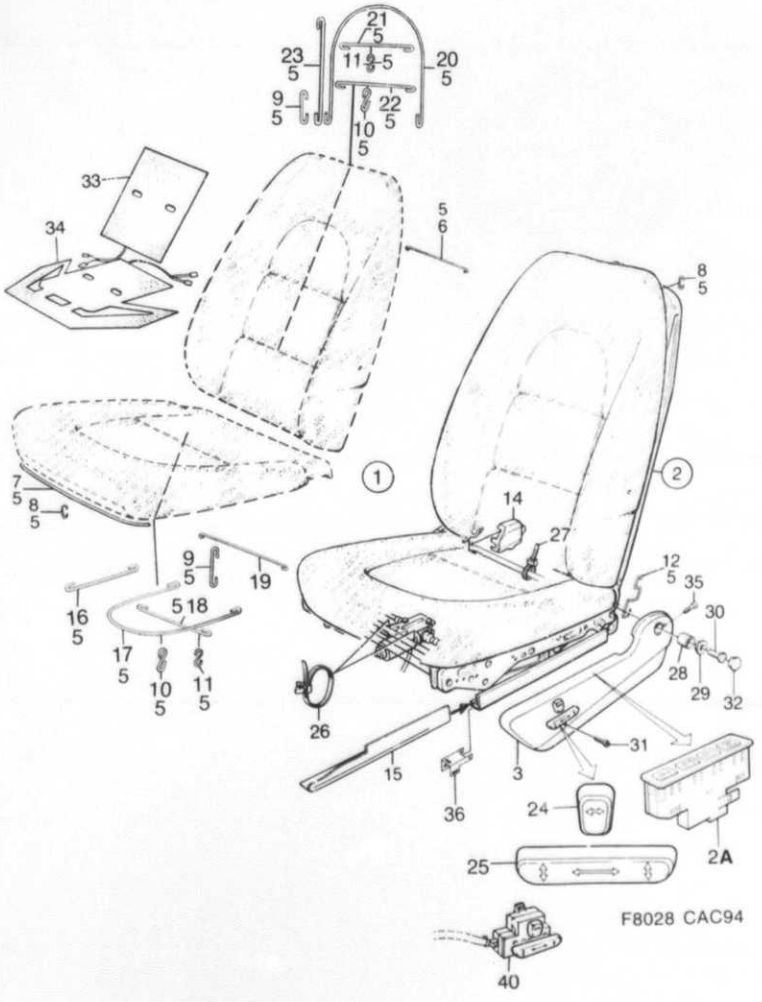

1485	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0865	21	97 21 481		25)	1	.Wire rod	.Trådten	5
0866	22	97 21 499		25)	1	.Wire rod	.Trådten	5
0867	23	95 84 715		19)	2	.Wire rod	.Trådten	5
0869	24	95 65 003			1	.Button	.Knapp	5
0870	25	95 65 011			1	.Button	.Knapp	5
0880	26	85 52 663			3	.Tensioning band	.Spännband	5
0890	27	79 71 872			3	.Tensioning band	.Spännband	5
0900	28	84 58 598			2	.Sleeve	.Hylsa	5
0910	29	96 18 232			1	.Spacer	.Distans	5
0920	30	80 59 412			1	.Screw	.Skruv	5
0930	31	79 71 401			1	.Screw	.Skruv	5
0950	32	95 92 700			1	.Cover	.Täcklock	6
0990	33	40 83 028		19)	1	.Heating pad	.Värmedyna	4
1000	33	95 69 955		25)	1	.Heating pad	.Värmedyna	4
1010	33	44 14 553		278)	1	.Heating pad	.Värmedyna	4
1030	34	40 63 871		19)	1	.Heating pad	.Värmedyna	4
1050	34	40 63 855		25)	1	.Heating pad	.Värmedyna	4
1060	34	44 14 546		278)	1	.Heating pad	.Värmedyna	4
1070	35	79 72 821			1	.Screw	.Skruv	5
1075	36	40 59 671		LHD	1	.Stop bracket passenger seat	.Stoppkonsol passagerarstol	5
1076								
1080	40			See page 8B-149, 5-G06	1	.Switch	.Strömställare	

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G06

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

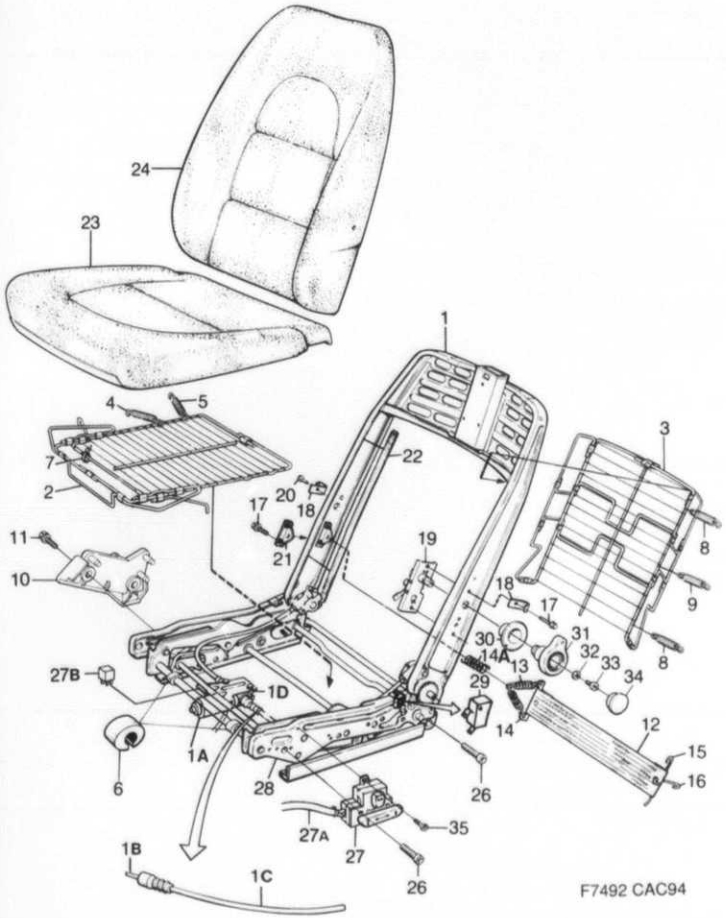

F7492 CAC94

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-145, 5-G02		Seat	Stol	
0020				See page 8B-145, 5-G02		.Seat frame	.Stolram	
0030	1	41 31 751			1	..Seat frame	..Stolram	6
0040	1	40 45 704		137)	1	..Seat frame	..Stolram	6
0050	1	43 13 748		278)	1	..Seat frame	..Stolram	6
0060	1	43 13 987		278,137)	1	..Seat frame	..Stolram	6
0070	1A	96 95 768			1	...Electric motor	...Elmotor	
0080	1B	95 79 715		LH	1	...Drive shaft	...Drivaxel	6
0090	1B	41 26 330		137), LH	1	...Drive shaft	...Drivaxel	6
0100	1B	95 42 317		RH	1	...Drive shaft	...Drivaxel	6
0110	1C	*95 42 309*		1994 NLS – USE 4126355	2	...Outer casing	...Hölje	6
0120	1C	41 26 355		1995-,390)	2	...Outer casing	...Hölje	6
0130	1C	*46 54 216*		391) NLS – USE 4126355	2	...Outer casing	...Hölje	6
0140	1C	41 26 355		137), LH	1	...Outer casing	...Hölje	6
0150	1C	41 26 348		137), RH	1	...Outer casing	...Hölje	6
0160	1D	41 10 995		137)	1	...Potentiometer	...Potentiometer	5
0170	2	40 32 934			1	..Wire matting	..Resårmatta	6
0180	3	96 97 525			1	..Wire matting	..Resårmatta	6
0190	4	96 73 146			6	..Spring	..Fjäder	6
0200	5	96 73 435			2	..Spring	..Fjäder	6
0210	6	40 33 486			2	..Rubber spacer	..Gummidistans	5
0220	7	79 71 872			2	..Tensioning band	..Spännband	5
0230	8	97 59 069			4	..Spring	..Fjäder	6
0240	9	97 59 077			2	..Spring	..Fjäder	6
0250	10	41 42 832		LH	1	..Support	..Stöd	6
0260	10	41 42 824		RH	1	..Support	..Stöd	6
0270	11	79 22 354			2	..Screw	..Skruv	5
0280	12	97 70 918		346)	1	..Strip	..Band	6
0290	12	45 31 059		347)	1	..Lumbar support	..Svankstöd	6
0300	13	95 79 293		346)	2	..Spring	..Fjäder	6
0310	14	97 70 942		346)	1	..Brace	..Bygel	5
0320	14			1,347)	1	...Spring	...Fjäder	
0330	15	97 70 926			1	..Brace	..Bygel	5
0340	16	97 70 934			1	..Hook	..Krok	5
0350	17	79 74 330			4	..Screw	..Skruv	5
0360	18	97 78 895			2	..Brace	..Bygel	5
0370	19	96 17 325		LH	1	..Control	..Reglage	6
0380	19	96 17 333		RH	1	..Control	..Reglage	6
0390	20	79 72 516			1	..Rivet	..Nit	5
0400	21	98 64 349			1	..Bracket	..Konsol	5
0410	22	96 71 835			2	..Protecting moulding	..Skyddslist	6
0420	23	44 16 525		19)	1	..Seat cushion	..Sittdyna	6
0430	23	96 77 014		25)	1	..Seat cushion	..Sittdyna	6
0440	23	43 13 797		278)	1	..Seat cushion	..Sittdyna	6
0450	24	42 92 934		19)	1	..Backrest cushion	..Ryggdyna	6
0460	24	97 58 715		25)	1	..Backrest cushion	..Ryggdyna	6
0470	24	43 13 805		278)	1	..Backrest cushion	..Ryggdyna	6
0480	26	80 59 826			4	..Screw	..Skruv	5
0490	27	44 95 354		LH	1	..Switch	..Strömställare	
0500	27	44 95 396		RH	1	..Switch	..Strömställare	
0510	27	44 95 412		137,429), LH	1	..Switch	..Strömställare	
0520	27	44 95 420		137,429), RH	1	..Switch	..Strömställare	

1. Not as separate spare part. Ej som separat reservdel.
19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
137. With memory function. Med minnesfunktion.
199. Ch. M1017620-, M2011731-
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
346. Ch. -R1017087
347. Ch. R1017088-
390. Ch. -S1020944
391. Ch. S1020945-
429. Ch. -T1009063

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F10
Complete sets	5-I04

5-G08

Front seats Part 2
Electrically adjustable

Stolar Del 2
Elmanövrerade

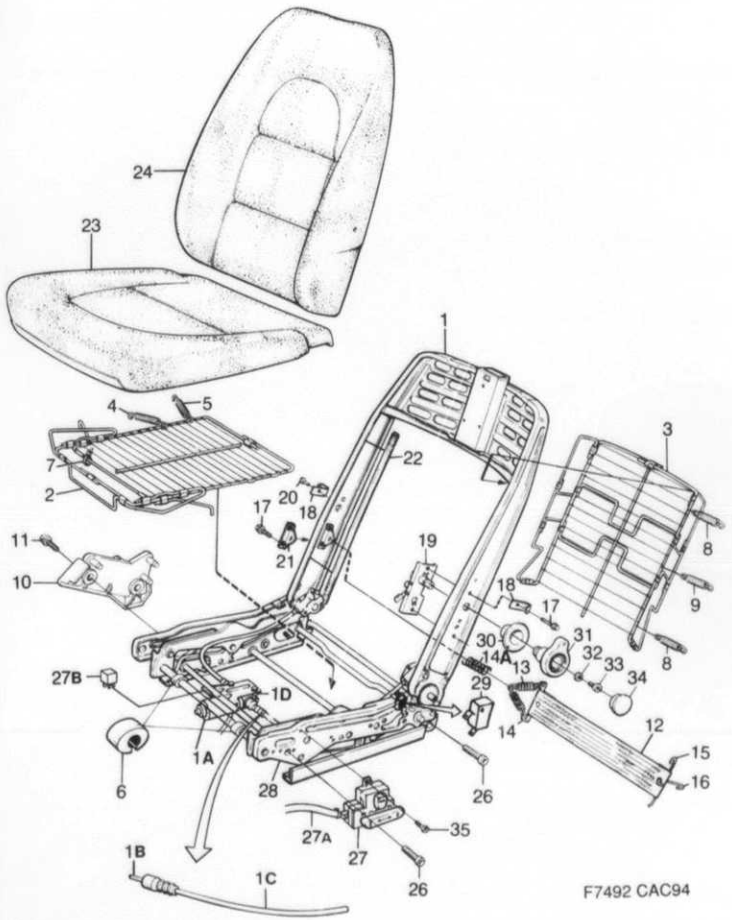

F7492 CAC94

1490	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	27	46 53 747		137,430), LH	1	..Switch	..Strömställare	
0540	27	46 53 739		137,430), RH	1	..Switch	..Strömställare	
0550	27A	44 95 271			1	..Extension cable	..Anslutningskabel	6
0560	27A	44 95 313		137,429), LH	1	..Extension cable	..Anslutningskabel	6
0570	27A	44 95 438		137,429), RH	1	..Extension cable	..Anslutningskabel	6
0580	27A	46 53 721		137,430)	1	..Extension cable	..Anslutningskabel	6
0590	27B	85 22 310		468)	X	..Relay	..Relä	3
0595	27B	85 33 176		469)	X	..Relay	..Relä	3
0600	28			See page 8B-153, 5-G10		..Seat frame	..Stolschassi	
0610	29	40 36 299			1	.Switch	.Brytare	5
0620	30	97 85 015			1	.Cover washer	.Täckbricka	6
0630	31	97 63 632			1	.Steering wheel	.Ratt	5
0640	32	80 29 944			1	.Washer	.Bricka	5
0650	33	80 59 396			1	.Screw	.Skruv	5
0660	34	97 63 624			1	.Cover	.Täcklock	6
0670	35	79 22 354			3	.Screw	.Skruv	5

137. With memory function. Med minnesfunktion.
429. Ch. -T1009063
430. Ch. T1009064-
468. Ch. -V1011994
469. Ch. V1011995-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G10

Front seats Part 3
Electrically adjustable

Stolar Del 3
Elmanövrerade

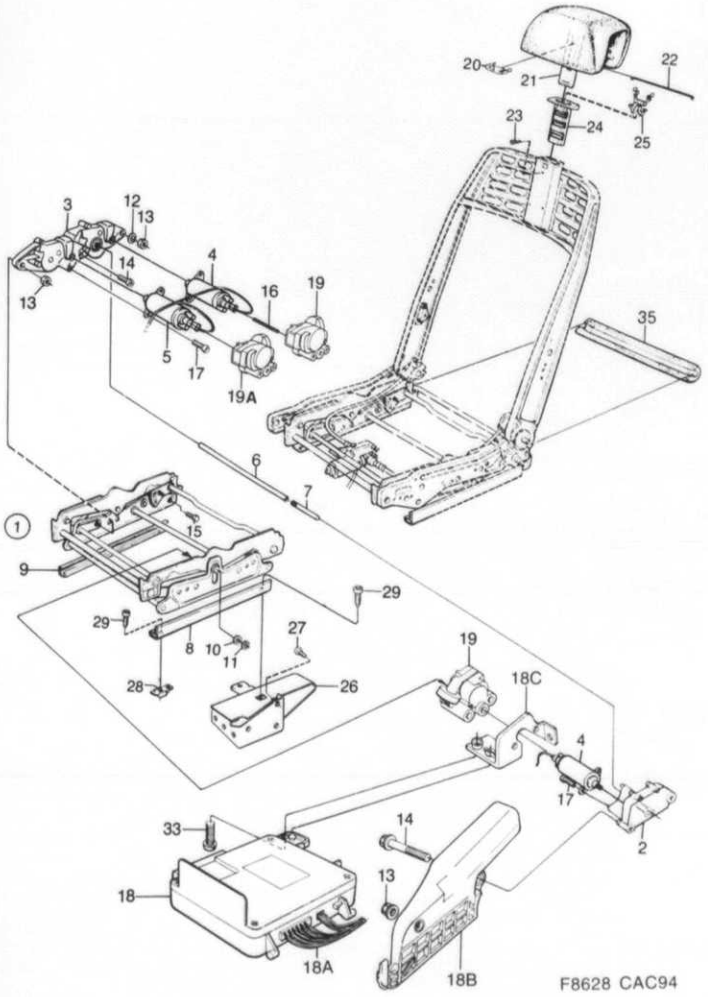

1495	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010				See page 8B-145, 5-G02		Seat	Stol	
0020				See page 8B-145, 5-G02		.Seat frame	.Stolram	
0050	1	43 12 625			1	..Seat frame	..Stolschassi	5
0070	1	44 15 279		137,429)	1	..Seat frame	..Stolschassi	5
0075	1	46 53 713		137,430)	1	..Seat frame	..Stolschassi	
0080	2	96 95 321			1	...Gear	...Växel	6
0090	3	96 95 354			1	...Gear	...Växel	6
0100	4	40 54 078			2	...Electric motor	...Elmotor	6
0110	5	40 54 086			1	...Electric motor	...Elmotor	6
0120	6	95 79 772			1	...Shaft	...Axel	6
0130	7	95 79 780			1	...Shaft	...Axel	6
0150	8	41 33 153		LH	1	...Rail	...Skena	6
0170	9	41 33 161		RH	1	...Rail	...Skena	6
0180	10	95 86 165			2	...Washer	...Bricka	5
0190	11	95 86 173			2	...E-circlip	...Spårryttare	5
0200	12	95 79 764			2	...Spacer washer	...Distansbricka	5
0210	13	95 86 132			4	...Nut	...Mutter	5
0220	14	*95 86 157*		NLS - USE 8059396	3	...Screw	...Skruv	5
0230	15	95 86 181			4	...Screw	...Skruv	5
0240	16	44 16 350		137)	3	...Shaft	...Axel	5
0250	17	95 86 207			6	...Screw	...Skruv	5
0260	18	44 15 287		137,429)	1	...Electronic unit	...Elektronikenhet	4
0272	18	46 53 705		137,430)	1	...Electronic unit	...Elektronikenhet	
0273	18A			1,429)	1	....Cable harness	....Ledningsnät	
0275	18A			430)		Cable harness	Ledningsnät	
0276				See page 8B-149, 5-G06				
0280	18B	41 32 866		137)	1	...Anchorage	...Fäste	5
0290	18C	41 32 874		137)	1	...Quick attachment	...Snabbfäste	5
0300	19	41 11 001		137)	2	...Potentiometer	...Potentiometer	5
0310	19A	41 11 506		137)	1	...Potentiometer	...Potentiometer	5
0320	20	95 45 104			1	..Clamp	..Klämma	5
0340	21	41 23 386			1	..Head restraint	..Nackstöd	6
0350	21	43 15 305		278)	1	..Head restraint	..Nackstöd	6
0360	22	94 59 868			2	..Wire rod	..Trådten	6
0370	23	79 22 396			1	..Screw	..Skruv	5
0380	24	40 31 563			1	..Sleeve	..Hylsa	5
0390	25	97 96 848			1	..Locking spring	..Spärrfjäder	5
0410	26	42 56 756		LH	1	.Bracket	.Konsol	5
0430	26	42 56 749		RH	1	.Bracket	.Konsol	5
0440	27	79 74 884			3	.Screw	.Skruv	5
0450	28	79 75 766			2	.Cage nut	.Korgmutter	5
0470	29	41 34 003			4	.Screw	.Skruv	5
0510	33	98 35 737		137)	1	.Screw	.Skruv	5
0530	35	97 92 391			1	.Crash pad	.Stötskydd	6

1. Not as separate spare part. Ej som separat reservdel.
137. With memory function. Med minnesfunktion.
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
429. Ch. -T1009063
430. Ch. T1009064-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G12

Rear seat
353) Seat cushion

Baksäte
353) Sittdyna

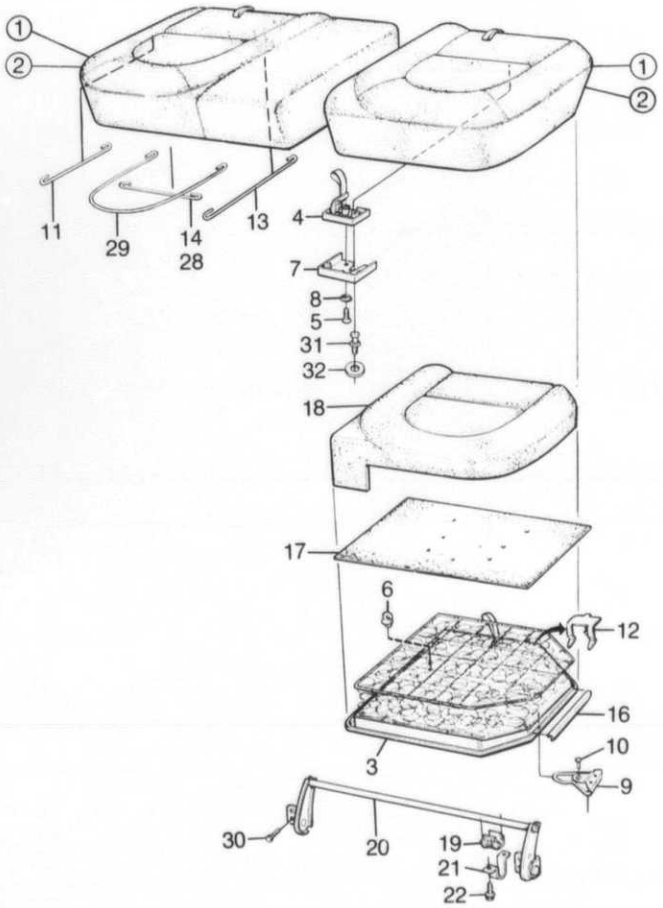

F6557 CAC94

1500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	96 99 158		23,278,24), LH	1	Seat cushion	Sittdyna	6
0040	1	96 99 166		21,24), LH	1	Seat cushion	Sittdyna	6
0050	1	96 99 174		22,24), LH	1	Seat cushion	Sittdyna	6
0080	1	96 99 125		23,278,24), RH	1	Seat cushion	Sittdyna	6
0090	1	96 99 133		21,24), RH	1	Seat cushion	Sittdyna	6
0100	1	96 99 141		22,24), RH	1	Seat cushion	Sittdyna	6
0108								
0180	2	43 15 339		278,36), LH	1	.Seat cushion	.Sittdyna	6
0185	2	43 15 347		278,36), RH	1	.Seat cushion	.Sittdyna	6
0200	3	42 88 445		25), LH	1	..Spring housing	..Resårhus	6
0215	3	42 88 429		19), LH	1	..Spring housing	..Resårhus	6
0217	3	43 15 370		278), LH	1	..Spring housing	..Resårhus	6
0225	3	42 88 437		25), RH	1	..Spring housing	..Resårhus	6
0245	3	42 88 411		19), RH	1	..Spring housing	..Resårhus	6
0247	3	43 15 396		278), RH	1	..Spring housing	..Resårhus	6
0250	4	97 74 175		LH	1	...Lock	...Lås	5
0260	4	97 74 183		RH	1	...Lock	...Lås	5
0270	5	79 77 028			2	...Screw	...Skruv	5
0280	6	97 81 469			X	...Hook	...Krok	5
0290	7	97 81 576		LH	1	...Protecting casing	...Skyddskåpa	6
0300	7	97 84 604		RH	1	...Protecting casing	...Skyddskåpa	6
0310	8	97 87 516			2	...Washer	...Bricka	5
0345	9	41 40 059		LH	1	...Bracket	...Hållare	6
0350	9	41 40 042		RH	1	...Bracket	...Hållare	6
0360	10	79 72 516			X	...Rivet	...Nit	5
0370	11	95 84 749		19)	2	..Wire rod	..Trådten	5
0380	12	96 73 831		19)	3	..Clamp	..Klammer	5
0390	13	96 93 094		19,25)	1	..Wire rod	..Trådten	5
0400	14	97 21 499		19)	1	..Wire rod	..Trådten	5
0410	16	96 97 459			1	..Strip	..List	6
0435	17	96 96 048		LH	1	..Padding	..Vadd	5
0436	17	96 96 766		RH	1	..Padding	..Vadd	5
0460	18	97 95 220		25) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0490	18	95 84 640		19) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0495	18	43 13 888		278) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0500	18	97 95 212		25) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0530	18	95 84 665		19) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0535	18	43 13 870		278) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0540	19	40 48 260			2	..Bushing	..Bussning	6
0570	20	96 63 410		LH	1	..Link arm	..Länkarm	5
0580	20	96 63 402		RH	1	..Link arm	..Länkarm	5
0590	21	40 48 278			2	..Cap	..Överfall	6
0600	22	79 74 397			4	..Screw	..Skruv	5
0610	28	98 28 658		25)	1	.Wire rod	.Trådten	5
0620	29	97 87 532		25)	1	.Wire rod	.Trådten	5
0630	30	97 78 952			8	Screw	Skruv	5
0650	31	43 12 948			2	Lock pin	Låspinne	5
0655	32	83 11 904			2	Washer	Bricka	5
0680		44 75 539		278)	1	Mounting kit	Monteringssats	
0690				See page 8B-195, 5-I04				

19. For cars with textile lining För bilar med textilklädsel
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K64
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
353. Ch. -R1025684; cars with trim colour code K64, J93, K93 continues with this version. Ch. -R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G14

Rear seat
353) Back cushion

Baksäte
353) Ryggdyna

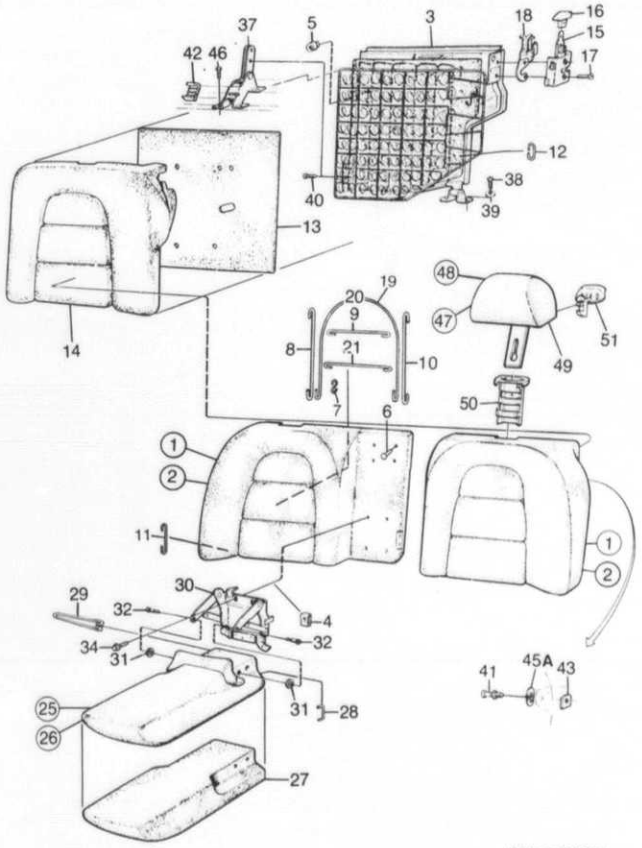

F7310 CAC94

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 067		23,278,24), LH	1	Backrest cushion	Ryggdyna	6
0020	1	96 99 075		21,24), LH	1	Backrest cushion	Ryggdyna	6
0030	1	96 99 083		22,24), LH	1	Backrest cushion	Ryggdyna	6
0040	1	96 99 034		23,278,24), RH	1	Backrest cushion	Ryggdyna	6
0050	1	96 99 042		21,24), RH	1	Backrest cushion	Ryggdyna	6
0060	1	96 99 059		22,24), RH	1	Backrest cushion	Ryggdyna	6
0070								
0080	2	43 15 354		278,36), LH	1	.Backrest cushion	.Ryggdyna	6
0090	2	43 15 362		278,36), RH	1	.Backrest cushion	.Ryggdyna	6
0100	3	42 88 304		25), LH	1	..Spring housing	..Resårhus	6
0110	3	42 88 288		19), LH	1	..Spring housing	..Resårhus	6
0120	3	43 13 839		278), LH	1	..Spring housing	..Resårhus	6
0130	3	42 88 296		25), RH	1	..Spring housing	..Resårhus	6
0140	3	42 88 270		19), RH	1	..Spring housing	..Resårhus	6
0150	3	43 13 821		278), RH	1	..Spring housing	..Resårhus	6
0160	4	79 72 573			4	...Clip nut	...Clipsmutter	5
0170	5	97 81 469			X	...Hook	...Krok	5
0180	6	79 72 516			X	...Rivet	...Nit	5
0190	7	97 69 217		19), 30 MM	2	...Hook	...Krok	5
0200	7	*97 99 057*		25), 20 MM NLS - USE 9769217	2	...Hook	...Krok	5
0200								
0210	8	95 79 244		19)	2	..Wire rod	..Trådten	5
0220	9	97 21 499		19)	2	..Wire rod	..Trådten	5
0230	10	97 61 495			1	..Wire rod	..Trådten	6
0240	11	98 97 927			1	..Wire rod	..Trådten	6
0250	12	94 50 685			3	..Clamp	..Klammer	5
0260	13	*96 96 691*		NLS	1	..Padding	..Vadd	5
0270	14	97 88 928		25) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0280	14	95 84 772		19) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0290	14	43 13 854		278) LH	1	..Foam plastic cushion	..Skumplastdyna	6
0300	14	97 88 910		25) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0310	14	95 84 764		19) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0320	14	43 13 862		278) RH	1	..Foam plastic cushion	..Skumplastdyna	6
0330	15	42 55 261		LH	1	..Lock	..Lås	5
0340	15	42 55 253		RH	1	..Lock	..Lås	5
0350	16	97 55 935			1	..Handle	..Handtag	5
0360	17	79 77 028			2	..Screw	..Skruv	5
0370	18	97 96 723		LH	1	..Bracket	..Hållare	5
0380	18	97 95 816		RH	1	..Bracket	..Hållare	5
0390	19	97 21 598		25)	1	.Wire rod	.Trådten	5
0400	20	98 28 641		25)	1	.Wire rod	.Trådten	5
0410	21	98 28 658		25)	1	.Wire rod	.Trådten	5
0420	25	97 51 314		24)	1	.Arm rest	.Armstöd	6
0430	25	97 82 129		24)	1	.Arm rest leather	.Armstöd läder	6
0440								
0450	26	96 72 650		36)	1	..Arm rest	..Armstöd	6
0460	27	97 81 337			1	...Cushion	...Kudde	6
0470	28	84 38 467			2	...Staple	...Häftklammer	5
0480	29	94 45 909			1	...Clamp	...Trådbygel	6
0490	30	95 93 948			1	...Bracket	...Konsol	6
0500	31	84 57 541			4	...Washer	...Bricka	5
0510	32	40 55 133			4	...Shoulder screw	...Ansatsskruv	5
0520	34	79 71 294			4	...Screw	...Skruv	5

19. For cars with textile lining För bilar med textilklädsel
21. Trim colour C44, E44,E74, F44,F74, G44,G74, H44,H74, J44,J74, K44
22. Trim colour C24, E24, F24, G24, H24, J24, K64
23. Trim colour C33, E33,E53,E93, F33, G33, H33,H53, J33,J53,J93, K33,K93, L33
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
353. Ch. -R1025684; cars with trim colour code K64, J93, K93 continues with this version. Ch. -R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G16

Rear seat
353) Back cushion

Baksäte
353) Ryggdyna

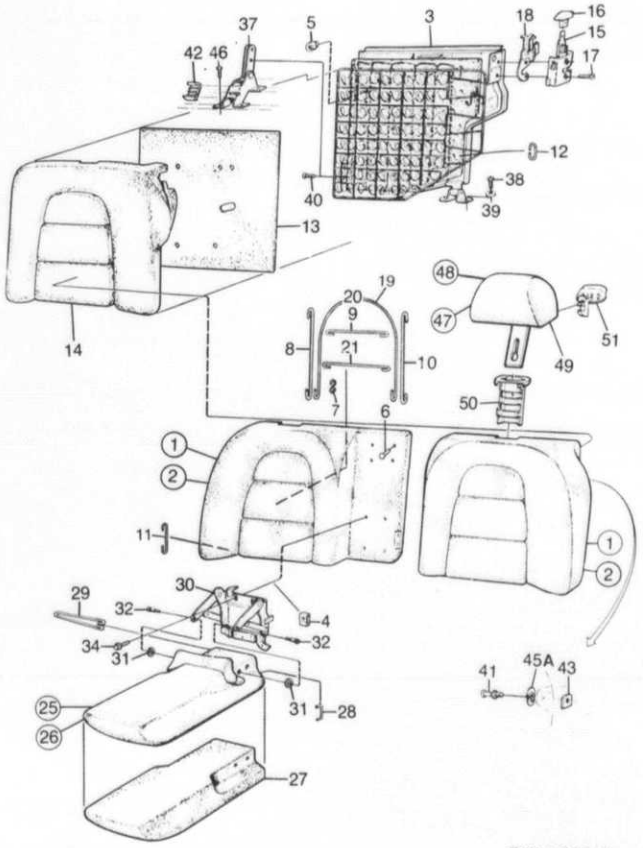

F7310 CAC94

1525	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	37	97 61 974			1	Joint	Led	5
0540	38	79 76 897			2	Screw	Skruv	5
0550	39	79 16 497			2	Washer	Bricka	5
0560	40	79 81 921			4	Screw	Skruv	5
0570	41	43 12 948			2	Lock pin	Låspinne	5
0580	42	97 89 769			1	Plastic buffer	Plastbuffert	5
0590	43	97 65 272			2	Nut plate	Mutterplatta	5
0600	45A	42 88 189			2	Washer	Bricka	6
0610	46	80 59 552			4	Screw	Skruv	5
0620	47	96 99 182		25,278,24	2	Head restraint	Nackstöd	6
0630	47	96 99 190		19,24)	2	Head restraint	Nackstöd	6
0640	48	40 48 948		25,19,36)	1	.Head restraint	.Nackstöd	6
0650	48	43 15 412		278,36)	1	.Head restraint	.Nackstöd	6
0660	49	40 36 133		25,19)	1	..Head restraint	..Nackstöd	6
0670	50	40 31 563			1	..Sleeve	..Hylsa	5
0680	51	41 36 610			1	..Catch	..Hake	6
0690		44 75 547		278)	1	Mounting kit	Monteringssats	
0700				See page 8B-195, 5-I04				

19. For cars with textile lining — För bilar med textilklädsel
24. State upholstery colour and ch No — Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" — För bilar med klädsel "CONTUR"
36. Without upholstery — Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" — För bilar med klädsel "SPORTS DESIGN"
353. Ch. -R1025684; cars with trim colour code K64, J93, K93 continues with this version. — Ch. -R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G18

278) Rear seat
325) Seat cushion

278) Baksäte
325) Sittdyna

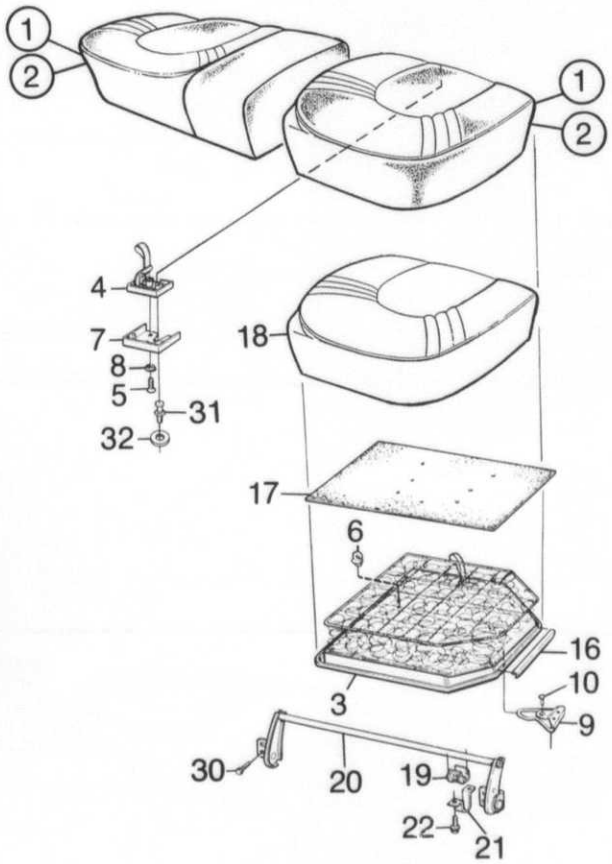

F6559 CAC94

1530	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0030	1	96 99 158		24), -1996, LH	1	Seat cushion	Sittdyna	6
0080	1	96 99 125		24), -1996, RH	1	Seat cushion	Sittdyna	6
0180	2	43 15 339		36), -1996, LH	1	.Seat cushion	.Sittdyna	6
0185	2	43 15 347		36), -1996, RH	1	.Seat cushion	.Sittdyna	6
0186	2			1997-	1	.Seat cushion	.Sittdyna	
0187				See page 8B-167, 5-G24				
0217	3	43 15 370		-1996, LH	1	..Spring housing	..Resårhus	6
0247	3	43 15 396		-1996, RH	1	..Spring housing	..Resårhus	6
0250	4	97 74 175		-1996, LH	1	...Lock	...Lås	5
0260	4	97 74 183		-1996, RH	1	...Lock	...Lås	5
0270	5	79 77 028		-1996	2	...Screw	...Skruv	5
0280	6	97 81 469		-1996	X	...Hook	...Krok	5
0290	7	97 81 576		-1996, LH	1	...Protecting casing	...Skyddskåpa	6
0300	7	97 84 604		-1996, RH	1	...Protecting casing	...Skyddskåpa	6
0310	8	97 87 516		-1996	2	...Washer	...Bricka	5
0345	9	41 40 059		-1996, LH	1	...Bracket	...Hållare	6
0350	9	41 40 042		-1996, RH	1	...Bracket	...Hållare	6
0360	10	79 72 516		-1996	X	...Rivet	...Nit	5
0410	16	96 97 459		-1996	1	..Strip	..List	6
0435	17	96 96 048		-1996, LH	1	..Padding	..Vadd	5
0436	17	96 96 766		-1996, RH	1	..Padding	..Vadd	5
0495	18	43 13 888		-1996, LH	1	..Foam plastic cushion	..Skumplastdyna	6
0535	18	43 13 870		-1996, RH	1	..Foam plastic cushion	..Skumplastdyna	6
0540	19	40 48 260		-1996	2	..Bushing	..Bussning	6
0570	20	96 63 410		-1996, LH	1	..Link arm	..Länkarm	5
0580	20	96 63 402		-1996, RH	1	..Link arm	..Länkarm	5
0590	21	40 48 278		-1996	2	..Cap	..Överfall	6
0600	22	79 74 397		-1996	4	..Screw	..Skruv	5
0630	30	97 78 952		-1996	8	Screw	Skruv	5
0640	31	43 12 948		423)	2	Lock pin	Låspinne	5
0650	31	46 56 005		424), -1996	2	Lock pin	Låspinne	5
0655	32	83 11 904		-1996	2	Washer	Bricka	5
0680		44 75 539		-1996	1	Mounting kit	Monteringssats	
0692				See page 8B-195, 5-I04				

24. State upholstery colour and ch No Uppge klädselfärg och ch nr
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
325. Ch. R1025685–
423. Ch. –T1010779
424. Ch. T1010780–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G20

278) Rear seat
325) Back cushion

278) Baksäte
325) Ryggdyna

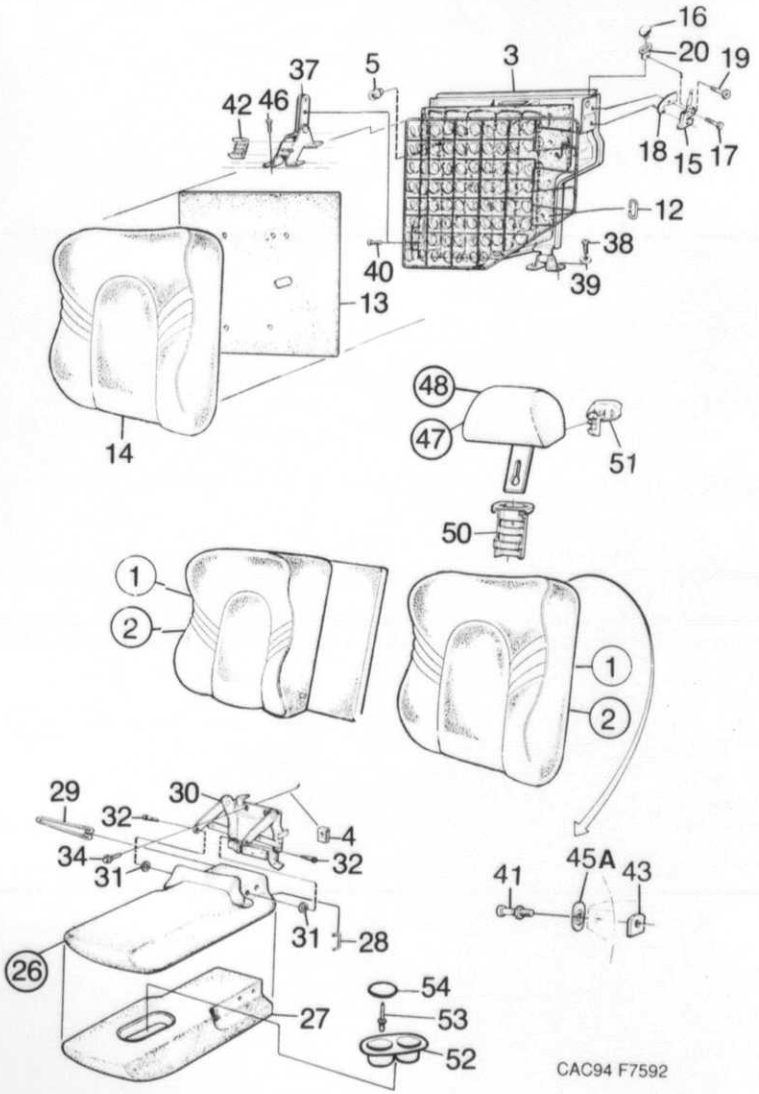

1535	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 067		24), -1996, LH	1	Backrest cushion	Ryggdyna	6
0020	1	96 99 034		24), -1996, RH	1	Backrest cushion	Ryggdyna	6
0030	2	46 29 507		36), -1996, LH	1	.Backrest cushion	.Ryggdyna	6
0040	2	46 29 515		36), -1995, RH	1	.Backrest cushion	.Ryggdyna	6
0045	2	46 52 004		36), 1996, RH	1	.Backrest cushion	.Ryggdyna	6
0046	2	46 52 004		1997-	1	.Backrest cushion	.Ryggdyna	6
0047				See page 8B-169, 5-H02				
0052	3	43 13 839		-1996, LH	1	..Spring housing	..Resårhus	6
0062	3	43 13 821		-1996, RH	1	..Spring housing	..Resårhus	6
0070	4	79 72 573		-1996	4	...Clip nut	...Clipsmutter	5
0080	5	97 81 469		-1996	X	...Hook	...Krok	5
0090	6	79 72 516		-1996	X	...Rivet	...Nit	5
0100	12	94 50 685		-1996	3	..Clamp	..Klammer	5
0110	13	*96 96 691*		-1996 NLS	1	..Padding	..Vadd	5
0122	14	46 29 366		-1996, LH	1	..Foam plastic cushion	..Skumplastdyna	6
0132	14	46 29 358		-1996, RH	1	..Foam plastic cushion	..Skumplastdyna	6
0140	15	46 29 374		-1996, LH	1	..Lock	..Lås	5
0150	15	46 29 382		-1996, RH	1	..Lock	..Lås	5
0160	16	97 55 935		-1996	1	..Handle	..Handtag	5
0170	17	79 77 028		-1996	2	..Screw	..Skruv	5
0180	18	97 89 801		-1996, LH	1	..Spacer	..Mellanlägg	5
0190	18	97 83 309		-1996, RH	1	..Spacer	..Mellanlägg	5
0200	19	45 32 867		-1996	1	..Lock pin	..Låstapp	5
0210	20	45 32 818		-1996	1	..Ferrule	..Skoning	6
0220	26	96 72 650		-1995	1	..Arm rest	..Armstöd	6
0230	26	46 50 701		1996	1	..Arm rest	..Armstöd	6
0240	27	97 81 337		-1995	1	...Cushion	...Kudde	6
0245	27	46 50 719		1996	1	...Cushion	...Kudde	6
0250	28	84 38 467		-1996	2	...Staple	...Häftklammer	5
0260	29	94 45 909		-1996	1	...Clamp	...Trådbygel	6
0270	30	95 93 948		-1996	1	...Bracket	...Konsol	6
0280	31	84 57 541		-1996	4	...Washer	...Bricka	5
0290	32	40 55 133		351)	4	...Shoulder screw	...Ansatsskruv	5
0295	32	45 32 529		352), -1996	4	...Shoulder screw	...Ansatsskruv	5
0300	34	79 71 294		-1996	4	...Screw	...Skruv	5
0310	37	97 61 974		-1996	1	Joint	Led	5
0320	38	79 76 897		-1996	2	Screw	Skruv	5
0330	39	79 16 497		-1996	2	Washer	Bricka	5
0340	40	79 81 921		-1996	4	Screw	Skruv	5
0350	41	43 12 948		423)	2	Lock pin	Låspinne	5
0355	41	46 56 005		424), -1996	2	Lock pin	Låspinne	5
0360	42	97 89 769		-1996	1	Plastic buffer	Plastbuffert	5
0370	43	97 65 272		423)	2	Nut plate	Mutterplatta	5
0375	43	47 16 445		424), -1996	2	Nut plate	Mutterplatta	5
0380	45A	42 88 189		-1996	2	Washer	Bricka	6
0390	46	80 59 552		-1996	4	Screw	Skruv	5
0400	47	96 99 182		24), -1996	2	Head restraint	Nackstöd	6
0410	48	43 15 412		36), -1996	1	.Head restraint	.Nackstöd	6
0420	50	40 31 563		-1996	1	..Sleeve	..Hylsa	5
0430	51	41 36 610		-1996	1	..Catch	..Hake	6
0431	52	47 16 304		210), 1996	1	Can holder	Burkhållare	6
0432	52	47 16 296		100), 1996	1	Can holder	Burkhållare	6


24. State upholstery colour and ch No Uppge klädselfärg och ch nr
36. Without upholstery Utan klädsel
100. Light grey Ljus grå
210. Light beige Ljus beige
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
325. Ch. R1025685-
351. Ch. -R1026275
352. Ch. R1026276-
423. Ch. -T1010779
424. Ch. T1010780-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

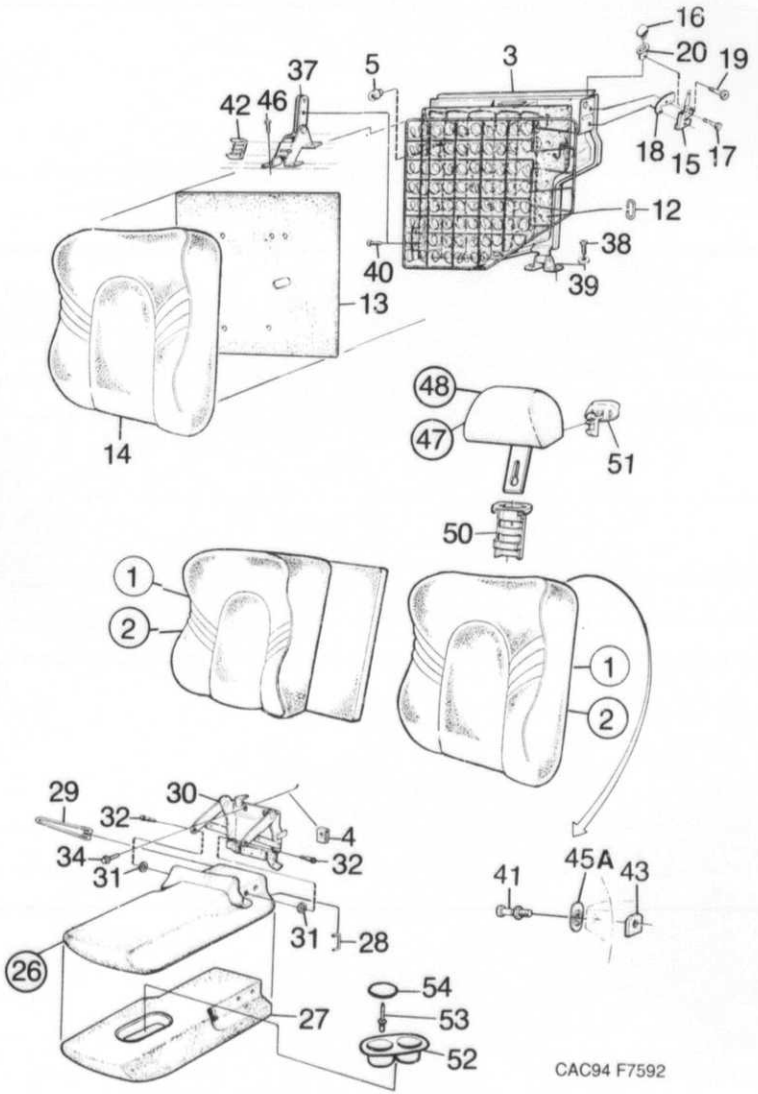

1535	Pos	Part No	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0433	52	47 16 312		110), 1996	1	Can holder	Burkhållare	6
0434	53	47 16 346		1996	2	Rivet	Nit	3
0435	54	47 16 320		1996	2	Plate	Platta	6
0450		44 75 547		-1996	1	Mounting kit	Monteringssats	
0460				See page 8B-195, 5-I04				

110. Black Svart
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
325. Ch. R1025685-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-G24

Rear seat
354) Seat cushion

Baksäte
354) Sittdyna

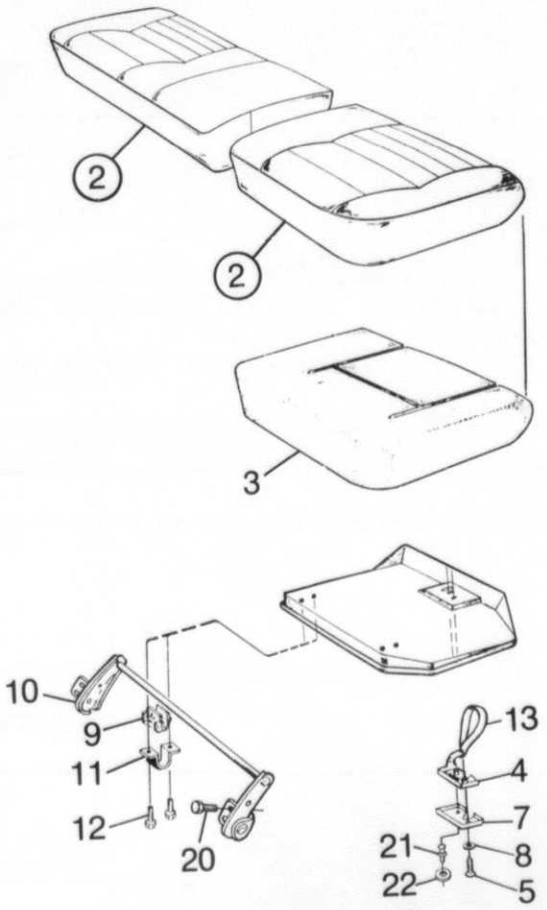

CAC94 F7593

1540	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	45 34 905		19,359), -1996, LH	1	Seat cushion	Sittdyna	
0015	2	47 19 472		19,359), 1997-, LH	1	Seat cushion	Sittdyna	
0020	2	45 34 962		25,359), -1996, LH	1	Seat cushion	Sittdyna	
0025	2	47 19 548		25,359), 1997-, LH	1	Seat cushion	Sittdyna	
0027	2	47 19 761		278,359), 1997-, LH	1	Seat cushion	Sittdyna	
0030	2	45 34 913		19,359), -1996, RH	1	Seat cushion	Sittdyna	
0035	2	47 19 498		19,359), 1997-, RH	1	Seat cushion	Sittdyna	
0040	2	45 34 970		25,359), -1996, RH	1	Seat cushion	Sittdyna	
0045	2	47 19 522		25,359), 1997-, RH	1	Seat cushion	Sittdyna	
0047	2	47 19 738		278,359), 1997-, RH	1	Seat cushion	Sittdyna	
0050	3	44 95 503		19), -1996, LH	1	.Foam plastic cushion	.Skumplastdyna	
0055	3	47 19 464		19), 1997-, LH	1	.Foam plastic cushion	.Skumplastdyna	
0060	3	44 95 586		25), -1996, LH	1	.Foam plastic cushion	.Skumplastdyna	
0065	3	47 19 530		25), 1997-, LH	1	.Foam plastic cushion	.Skumplastdyna	
0067	3	47 19 753		278), 1997-, LH	1	.Foam plastic cushion	.Skumplastdyna	
0070	3	44 95 495		19), -1996, RH	1	.Foam plastic cushion	.Skumplastdyna	
0075	3	47 19 480		19), 1997-, RH	1	.Foam plastic cushion	.Skumplastdyna	
0080	3	44 95 578		25), -1996, RH	1	.Foam plastic cushion	.Skumplastdyna	
0085	3	47 19 514		25), 1997-, RH	1	.Foam plastic cushion	.Skumplastdyna	
0087	3	47 19 720		278), 1997-, RH	1	.Foam plastic cushion	.Skumplastdyna	
0090	4	44 75 281		LH	1	.Lock	.Lås	5
0100	4	44 75 299		RH	1	.Lock	.Lås	5
0110	5	79 77 028			2	.Screw	.Skruv	5
0120	7	97 81 576		LH	1	.Protecting casing	.Skyddskåpa	6
0130	7	97 84 604		RH	1	.Protecting casing	.Skyddskåpa	6
0140	8	97 87 516			2	.Washer	.Bricka	5
0150	9	40 48 260			2	.Bushing	.Bussning	6
0160	10	96 63 410		LH	1	.Link arm	.Länkarm	5
0170	10	96 63 402		RH	1	.Link arm	.Länkarm	5
0180	11	40 48 278			2	.Cap	.Överfall	6
0190	12	79 74 397			4	.Screw	.Skruv	5
0195	13	97 89 827			1	.Lifting strap	.Lyftstropp	
0200	20	97 78 952			8	Screw	Skruv	5
0210	21	43 12 948		423)	2	Lock pin	Låspinne	5
0215	21	46 56 005		424)	2	Lock pin	Låspinne	5
0220	22	83 11 904			2	Washer	Bricka	5
0250		44 75 539		278)	1	Mounting kit	Monteringssats	
0260				See page 8B-195, 5-I04				

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
354. Ch. R1025685–; not for cars with trim colour code K64, J93, K93 Ch. R1025685–; ej för bilar med klädselkod K64, J93, K93
359. Complete seat cushion are not available as a spare part. To obtain a complete seat cushion, order the following separate spare parts: seat cushion, covers and mounting kit. Komplett sittdyna finns inte som reservdel. För att erhålla komplett sittdyna, beställ följande lösa reservdelar: sittdyna, klädselpåsar och monteringssats.
423. Ch. –T1010779
424. Ch. T1010780–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5 -H02

Rear seat
354) Back cushion

Baksäte
354) Ryggdyna

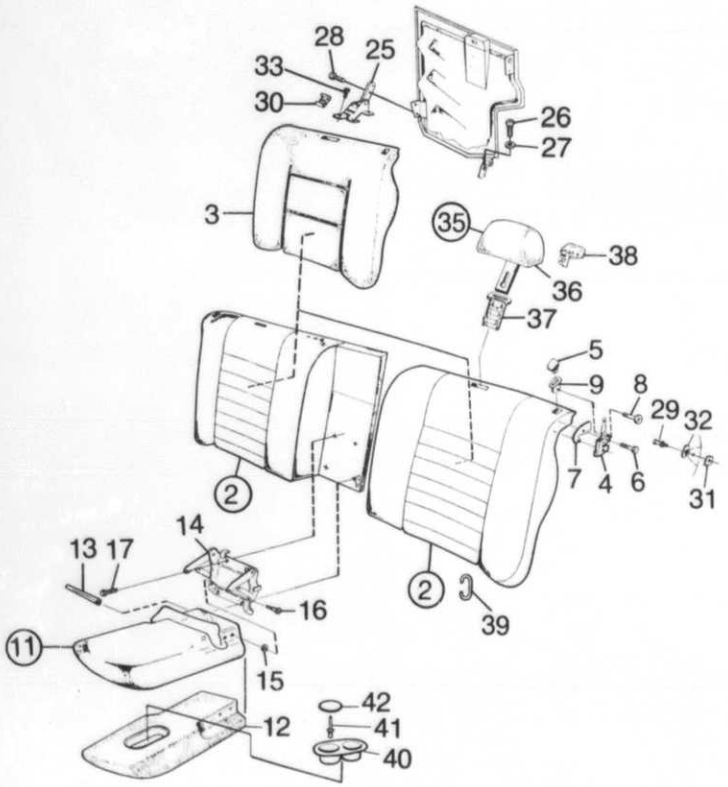

CAC94 F7594

1545	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	45 34 889		19,360), LH	1	Backrest cushion	Ryggdyna	
0020	2	45 34 947		25,360), LH	1	Backrest cushion	Ryggdyna	
0025	2	47 19 704		278,360), 1997-, LH	1	Backrest cushion	Ryggdyna	
0030	2	45 34 897		19,360), -1995, RH	1	Backrest cushion	Ryggdyna	
0035	2	46 51 980		19,360), 1996-, RH	1	Backrest cushion	Ryggdyna	
0040	2	45 34 954		25,360), -1995, RH	1	Backrest cushion	Ryggdyna	
0045	2	46 51 998		25,360), 1996-, RH	1	Backrest cushion	Ryggdyna	
0047	2	47 19 670		278,360), 1997-, RH	1	Backrest cushion	Ryggdyna	
0050	3	44 95 487		19), LH	1	.Foam plastic cushion	.Skumplastdyna	
0060	3	44 95 560		25), LH	1	.Foam plastic cushion	.Skumplastdyna	
0065	3	46 50 503		278), 1997-, LH	1	.Foam plastic cushion	.Skumplastdyna	
0070	3	44 95 479		19), RH	1	.Foam plastic cushion	.Skumplastdyna	
0080	3	44 95 552		25), RH	1	.Foam plastic cushion	.Skumplastdyna	
0085	3	46 50 511		278), 1997-, RH	1	.Foam plastic cushion	.Skumplastdyna	
0090	4	46 29 374		LH	1	.Lock	.Lås	5
0100	4	46 29 382		RH	1	.Lock	.Lås	5
0110	5	97 55 935			1	.Handle	.Handtag	5
0120	6	79 77 028			2	.Screw	.Skruv	5
0130	7	97 89 801		LH	1	.Spacer	.Mellanlägg	5
0140	7	97 83 309		RH	1	.Spacer	.Mellanlägg	5
0150	8	45 32 867			1	.Lock pin	.Låstapp	5
0160	9	45 32 818			1	.Ferrule	.Skoning	6
0170	11	96 72 650		36), -1995	1	.Arm rest	.Armstöd	6
0180	11	46 50 701		36), 1996-	1	.Arm rest	.Armstöd	6
0190	12	97 81 337		-1995	1	..Cushion	..Kudde	6
0195	12	46 50 719		1996-	1	..Cushion	..Kudde	6
0200	13	94 45 909			1	..Clamp	..Trådbygel	6
0210	14	95 93 948			1	..Bracket	..Konsol	6
0220	15	84 57 541			4	..Washer	..Bricka	5
0230	16	40 55 133		351)	4	..Shoulder screw	..Ansatsskruv	5
0235	16	45 32 529		352)	4	..Shoulder screw	..Ansatsskruv	5
0240	17	79 71 294			4	..Screw	..Skruv	5
0250	25	97 61 974			1	Joint	Led	5
0260	26	79 76 897			2	Screw	Skruv	5
0270	27	79 16 497			2	Washer	Bricka	5
0280	28	79 81 921			4	Screw	Skruv	5
0290	29	43 12 948		423)	2	Lock pin	Låspinne	5
0295	29	46 56 005		424)	2	Lock pin	Låspinne	5
0300	30	97 89 769			1	Plastic buffer	Plastbuffert	5
0310	31	97 65 272		423)	2	Nut plate	Mutterplatta	5
0315	31	47 16 445		424)	2	Nut plate	Mutterplatta	5
0320	32	42 88 189			2	Washer	Bricka	6
0330	33	80 59 552			4	Screw	Skruv	5
0340	35	40 48 948		25,19,36)	1	Head restraint	Nackstöd	6
0345	35	43 15 412		278,36)	1	Head restraint	Nackstöd	6
0350	36	40 36 133			1	.Head restraint	.Nackstöd	6
0360	37	40 31 563			1	.Sleeve	.Hylsa	5
0370	38	41 36 610			1	.Catch	.Hake	6
0380	39	94 50 685			X	Clamp	Klammer	5

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
351. Ch. -R1026275
352. Ch. R1026276-
354. Ch. R1025685-; not for cars with trim colour code K64, J93, K93 Ch. R1025685-; ej för bilar med klädselkod K64, J93, K93
360. Complete backrest cushion are not available as a spare part. To obtain a complete backrest cushion, order the following separate spare parts: backrest cushion, covers and mounting kit. Komplett ryggdyna finns inte som reservdel. För att erhålla komplett ryggdyna, beställ följande lösa reservdelar: ryggdyna, klädselpåsar och monteringssats.
423. Ch. -T1010779
424. Ch. T1010780-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H04

Rear seat
354) Back cushion

Baksäte
354) Ryggdyna

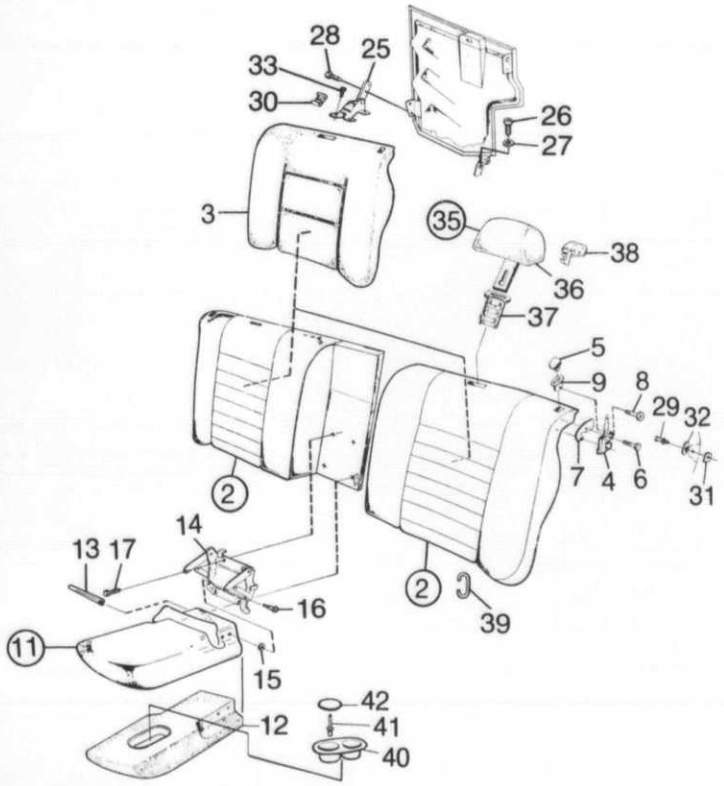

CAC94 F7594

1545	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0381	40	47 16 304		210), 1996-	1	Can holder	Burkhållare	6
0382	40	47 16 296		100), 1996-	1	Can holder	Burkhållare	6
0383	40	47 16 312		110), 1996-	1	Can holder	Burkhållare	6
0384	41	47 16 346		1996-	2	Rivet	Nit	3
0385	42	47 16 320		1996-	2	Plate	Platta	6
0390		44 75 547		278)	1	Mounting kit	Monteringssats	
0400				See page 8B-195, 5-I04				


100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
354. Ch. R1025685–; not for cars with trim colour code K64, J93, K93 Ch. R1025685–; ej för bilar med klädselkod K64, J93, K93

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

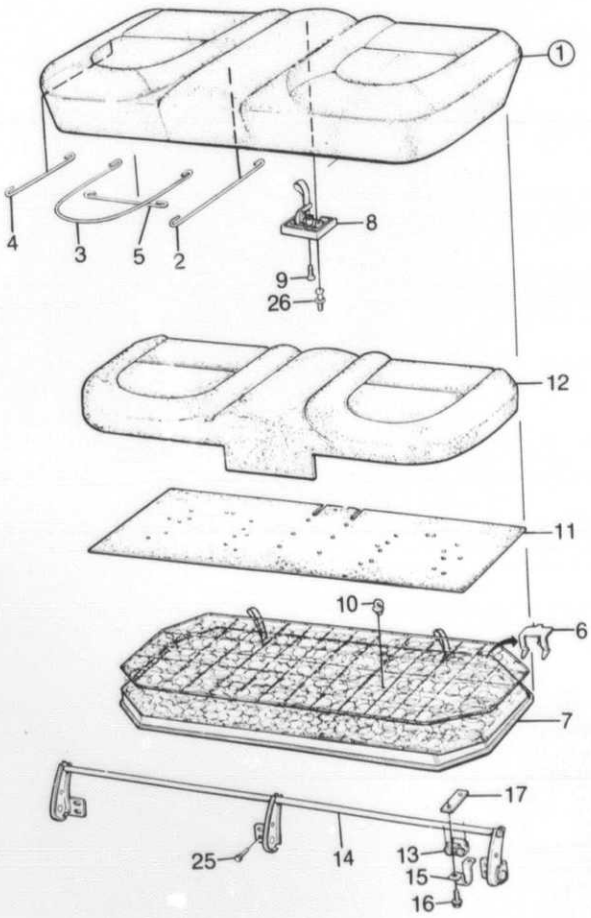

F6563 CAC94

Other interior equipment

5 -H06

Rear seat, fixed

353) Seat cushion

Övrig invändig utrustning

Baksäte, fast

353) Sittdyna

1550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 091		25,24)	1	Seat cushion	Sittdyna	6
0020	1	96 99 117		19,24)	1	Seat cushion	Sittdyna	6
0070	2	96 93 094			2	.Wire rod	.Trådten	5
0080	3	97 87 532		25)	2	.Wire rod	.Trådten	5
0090	4	95 84 749		19)	4	.Wire rod	.Trådten	5
0100	5	98 28 658		25)	2	.Wire rod	.Trådten	5
0110	5	97 21 499		19)	2	.Wire rod	.Trådten	5
0120	6	96 73 831		19)	2	.Clamp	.Klammer	5
0130	7	97 52 379		25)	1	.Spring housing	.Resårhus	6
0140	7	96 75 174		19)	1	.Spring housing	.Resårhus	6
0150	8	95 72 454			1	..Lock	..Lås	5
0160	9	79 77 028			2	..Screw	..Skruv	5
0170	10	97 81 469			X	..Hook	..Krok	5
0180	11	97 61 867			1	.Padding	.Vadd	5
0190	12	97 52 395		25)	1	.Foam plastic cushion	.Skumplastdyna	6
0205	12	95 91 793		19)	1	.Foam plastic cushion	.Skumplastdyna	6
0210	13	40 48 260			4	.Bushing	.Bussning	6
0220	14	95 72 470			1	.Link arm	.Länkarm	5
0230	15	40 48 278			4	.Cap	.Överfall	6
0245	16	79 75 436			8	.Screw	.Skruv	5
0250	17	95 72 447			12	.Spacer	.Distans	5
0260	25	97 78 952			6	Screw	Skruv	5
0275	26	43 12 948			1	Lock pin	Låspinne	5


19. For cars with textile lining För bilar med textilklädsel
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
353. Ch. -R1025684; cars with trim colour code K64, J93, K93 continues with this version. Ch. -R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

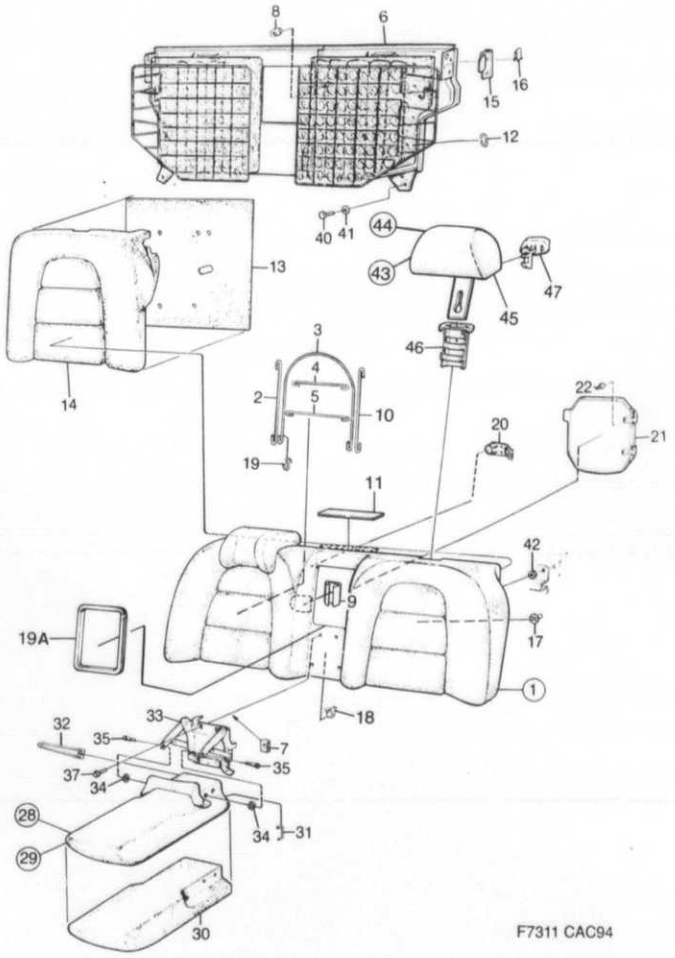

F7311 CAC94

Other interior equipment

5 –H08

Rear seat, fixed

353) Back cushion

Övrig invändig utrustning

Baksäte, fast

353) Ryggdyna

1575	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 99 000		25,24)	1	Backrest cushion	Ryggdyna	6
0020	1	96 99 026		19,24)	1	Backrest cushion	Ryggdyna	6
0070	2	95 79 244		19)	4	.Wire rod	.Trådten	5
0080	3	97 21 598		25)	2	.Wire rod	.Trådten	5
0090	4	97 21 499		19)	4	.Wire rod	.Trådten	5
0100	4	98 28 641		25)	2	.Wire rod	.Trådten	5
0110	5	98 28 658		25)	2	.Wire rod	.Trådten	5
0120	6	97 51 322		25)	1	.Spring housing	.Resårhus	6
0130	6	96 93 177		19)	1	.Spring housing	.Resårhus	6
0140	7	79 72 573			4	..Clip nut	..Clipsmutter	5
0150	8	97 81 469			X	..Hook	..Krok	5
0155	9	95 72 835			1	..Plastic lining	..Plastskoning	6
0156	10	97 61 495			1	.Wire rod	.Trådten	6
0158	11	40 35 747			1	.Strip	.List	6
0160	12	*98 49 498*		25) NLS – USE 9450685	2	.Clamp	.Klammer	5
0170	12	*98 49 498*		19) NLS – USE 9450685	6	.Clamp	.Klammer	5
0180	13	*96 96 691*		NLS	2	.Padding	.Vadd	5
0190	14	97 88 928		25), LH	1	.Foam plastic cushion	.Skumplastdyna	6
0200	14	97 88 910		25), RH	1	.Foam plastic cushion	.Skumplastdyna	6
0210	14	95 84 772		19), LH	1	.Foam plastic cushion	.Skumplastdyna	6
0220	14	95 84 764		19), RH	1	.Foam plastic cushion	.Skumplastdyna	6
0230	15	95 73 817		LH	1	.Upholstery clip	.Klädselfäste	5
0240	15	95 73 809		RH	1	.Upholstery clip	.Klädselfäste	5
0250	16	73 99 496			2	.Clamp	.Klammer	5
0260	17	96 91 320			1	.Solenoid housing	.Magnethus	5
0270	18	97 71 288			8	.Clamp	.Klammer	5
0280	19	97 69 217		19)	4	.Hook	.Krok	5
0281	19	*97 99 057*		25) NLS – USE 9769217	4	.Hook	.Krok	5
0285	19A	95 80 358			1	.Strip	.List	6
0295	20	40 37 529			1	.Cover washer	.Täckbricka	6
0305	21	40 37 537			1	.Hatch	.Lucka	6
0310	22	79 70 577			2	.Screw	.Skruv	5
0320	28	97 51 314		24)	1	.Arm rest	.Armstöd	6
0330	28	97 82 129		24)	1	.Arm rest leather	.Armstöd läder	6
0331								
0340	29	96 72 650		36)	1	..Arm rest	..Armstöd	6
0360	30	97 81 337			1	...Cushion	...Kudde	6
0370	31	84 38 467			2	...Staple	...Häftklammer	5
0380	32	94 45 909			1	...Clamp	...Trådbygel	6
0395	33	95 93 948			1	...Bracket	...Konsol	6
0400	34	84 57 541			4	...Washer	...Bricka	5
0410	35	40 55 133			4	...Shoulder screw	...Ansatsskruv	5
0435	37	79 71 294			4	...Screw	...Skruv	5
0440	40	79 76 897			2	Screw	Skruv	5
0450	41	73 11 772			2	Washer	Bricka	5
0460	42	79 67 953			2	Nut	Mutter	5
0470	43	96 99 208		19,24)	2	Head restraint	Nackstöd	6
0480	43	96 99 216		25,24)	2	Head restraint	Nackstöd	6
0490	44	40 48 948		36)	2	.Head restraint	.Nackstöd	6
0530	45	40 36 133			1	..Head restraint	..Nackstöd	6
0555	46	40 31 563			1	..Sleeve	..Hylsa	5
0560	47	41 36 610			1	..Catch	..Hake	6

19. For cars with textile lining För bilar med textilklädsel
24. State upholstery colour and ch No Uppge klädselfärg och ch nr
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
353. Ch. –R1025684; cars with trim colour code K64, J93, K93 continues with this version. Ch. –R1025684; bilar med klädselkod K64, J93, K93 fortsätter med detta utförande.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H10

Rear seat, fixed
354)-1997 Seat cushion

Baksäte, fast
354)-1997 Sittdyna

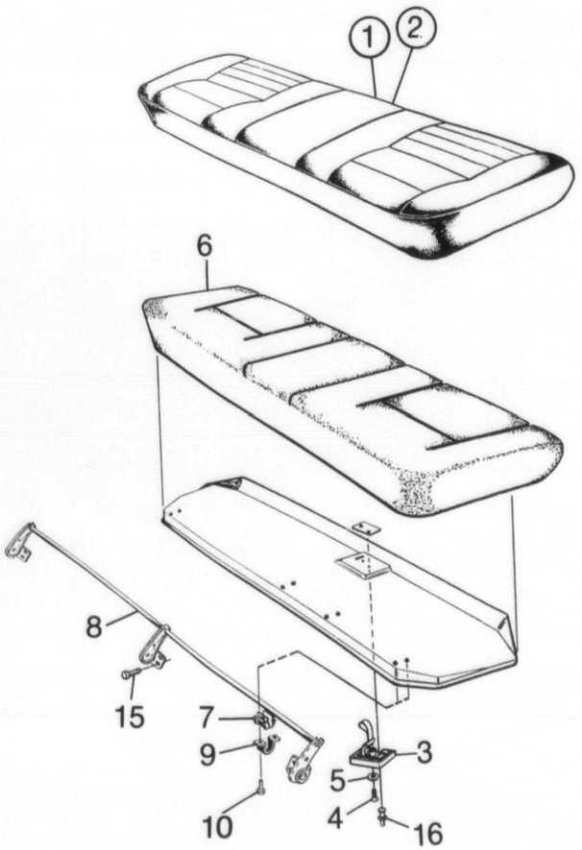

F6565 CAC94

1580	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	45 34 939		19,359)	1	Seat cushion	Sittdyna	
0020	2	45 34 996		25,359)	1	Seat cushion	Sittdyna	
0025	2	46 50 495		278,359)	1	Seat cushion	Sittdyna	
0030	3	95 72 454			1	.Lock	.Lås	5
0040	4	79 77 028			2	.Screw	.Skruv	5
0050	5	97 87 516			2	.Washer	.Bricka	5
0060	6	45 05 350		19)	1	.Foam plastic cushion	.Skumplastdyna	
0070	6	45 05 384		25)	1	.Foam plastic cushion	.Skumplastdyna	
0075	6	46 50 529		278)	1	.Foam plastic cushion	.Skumplastdyna	
0080	7	40 48 260			4	.Bushing	.Bussning	6
0090	8	95 72 470			1	.Link arm	.Länkarm	5
0100	9	40 48 278			4	.Cap	.Överfall	6
0110	10	79 74 397			8	.Screw	.Skruv	5
0120	15	97 78 952			6	Screw	Skruv	5
0125	16	43 12 948		423)	1	Lock pin	Låspinne	5
0130	16	46 56 005		424)	1	Lock pin	Låspinne	5
0140		44 75 539		278)	X	Mounting kit	Monteringssats	
0150				See page 8B-195, 5-I04				


19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
354. Ch. R1025685-; not for cars with trim colour code K64, J93, K93 Ch. R1025685-; ej för bilar med klädselkod K64, J93, K93
359. Complete seat cushion are not available as a spare part. To obttain a complete seat cushion, order the following separate spare parts: seat cushion, covers and mounting kit. Komplett sittdyna finns inte som reservdel. För att erhålla komplett sittdyna, beställ följande lösa reservdelar: sittdyna, klädselpåsar och monteringssats.
423. Ch. -T1010779
424. Ch. T1010780-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

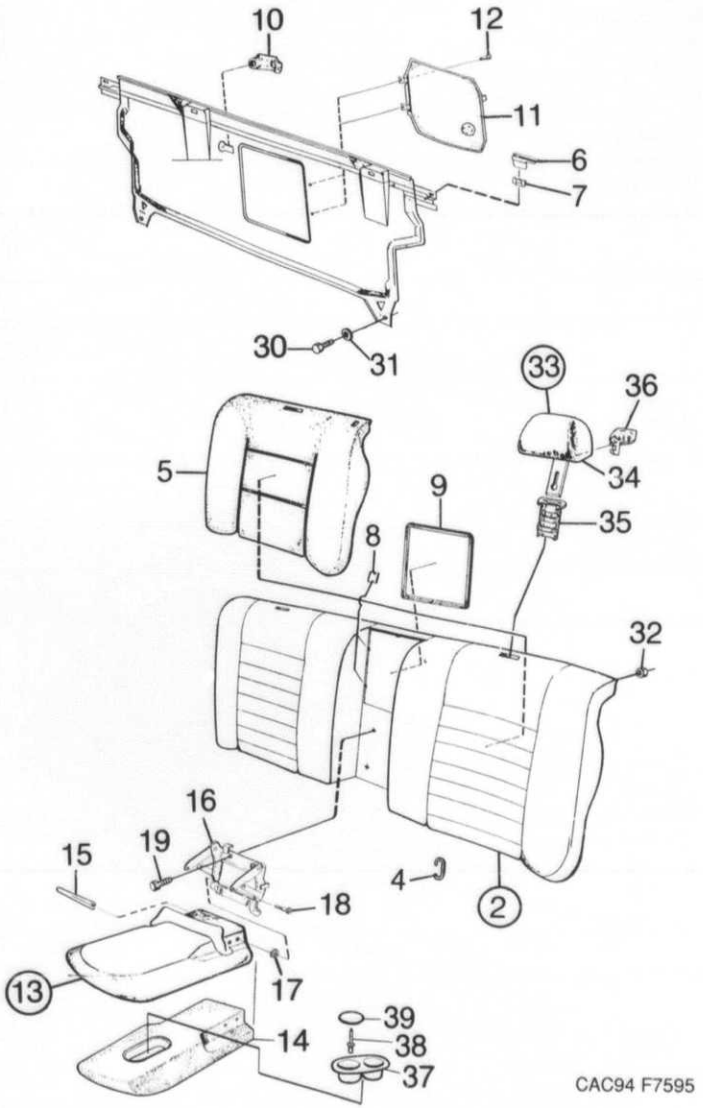

CAC94 F7595

Other interior equipment

5-H12 Rear seat, fixed

354)-1997 Back cushion

Övrig invändig utrustning

Baksäte, fast

354)-1997 Ryggdyna

1585	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	2	45 34 921		19,360), -1995	1	Backrest cushion	Ryggdyna	
0015	2	46 51 972		19,360), 1996-	1	Backrest cushion	Ryggdyna	
0020	2	45 34 988		25,360), -1995	1	Backrest cushion	Ryggdyna	
0023	2	46 51 964		25,360), 1996-	1	Backrest cushion	Ryggdyna	
0025	2	46 50 487		278,360), 1996-	1	Backrest cushion	Ryggdyna	
0030	3	95 72 835			1	.Plastic lining	.Plastskoning	6
0040	4	94 50 685			X	.Clamp	.Klammer	5
0050	5	44 95 487		19), LH	1	.Foam plastic cushion	.Skumplastdyna	
0060	5	44 95 479		19), RH	1	.Foam plastic cushion	.Skumplastdyna	
0070	5	44 95 560		25), LH	1	.Foam plastic cushion	.Skumplastdyna	
0080	5	44 95 552		25), RH	1	.Foam plastic cushion	.Skumplastdyna	
0083	5	46 50 503		278), 1996-, LH	1	.Foam plastic cushion	.Skumplastdyna	
0086	5	46 50 511		278), 1996-, RH	1	.Foam plastic cushion	.Skumplastdyna	
0090	6	95 73 817		LH	1	.Upholstery clip	.Klädselfäste	5
0100	6	95 73 809		RH	1	.Upholstery clip	.Klädselfäste	5
0110	7	73 99 843			2	.Clamp	.Klammer	5
0120	8	97 71 288			2	.Clamp	.Klammer	5
0130	9	97 95 196			1	.Strip	.List	6
0140	10	96 75 059			1	.Lock	.Lås	5
0150	11	40 37 537			1	.Hatch	.Lucka	6
0160	12	79 70 577			2	.Screw	.Skruv	5
0170	13	96 72 650		36), -1995	1	.Arm rest	.Armstöd	6
0180	13	46 50 701		36), 1996-	1	.Arm rest	.Armstöd	6
0190	14	97 81 337		-1995	1	..Cushion	..Kudde	6
0195	14	46 50 719		1996-	1	..Cushion	..Kudde	6
0200	15	94 45 909			1	..Clamp	..Trådbygel	6
0210	16	95 93 948			1	..Bracket	..Konsol	6
0220	17	84 57 541			4	..Washer	..Bricka	5
0230	18	40 55 133		351)	4	..Shoulder screw	..Ansatsskruv	5
0235	18	45 32 529		352)	4	..Shoulder screw	..Ansatsskruv	5
0240	19	79 71 294			4	..Screw	..Skruv	5
0250	30	79 76 897			2	Screw	Skruv	5
0260	31	73 11 772			2	Washer	Bricka	5
0270	32	79 67 953			2	Nut	Mutter	5
0280	33	40 48 948		36)	2	Head restraint	Nackstöd	6
0285	33	43 15 412		278,36)	2	Head restraint	Nackstöd	6
0290	34	40 36 133			1	.Head restraint	.Nackstöd	6
0300	35	40 31 563			1	.Sleeve	.Hylsa	5
0310	36	41 36 610			1	.Catch	.Hake	6
0320	37	47 16 304		210), 1996-	1	Can holder	Burkhållare	6
0330	37	47 16 296		100), 1996-	1	Can holder	Burkhållare	6
0340	37	47 16 312		110), 1996-	1	Can holder	Burkhållare	6
0350	38	47 16 346		1996-	2	Rivet	Nit	3
0360	39	47 16 320		1996-	2	Plate	Platta	6
0370		44 75 547		278)	X	Mounting kit	Monteringssats	
0380				See page 8B-195, 5-I04				

19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
36. Without upholstery Utan klädsel
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"
351. Ch. -R1026275
352. Ch. R1026276-
354. Ch. R1025685-; not for cars with trim colour code K64, J93, K93 Ch. R1025685-; ej för bilar med klädselkod K64, J93, K93
360. Complete backrest cushion are not available as a spare part. To obtain a complete backrest cushion, order the following separate spare parts: backrest cushion, covers and mounting kit. Komplett ryggdyna finns inte som reservdel. För att erhålla komplett ryggdyna, beställ följande lösa reservdelar: ryggdyna, klädselpåsar och monteringssats.

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H14 Equipment luggage compartment

Utrustning bagagerum

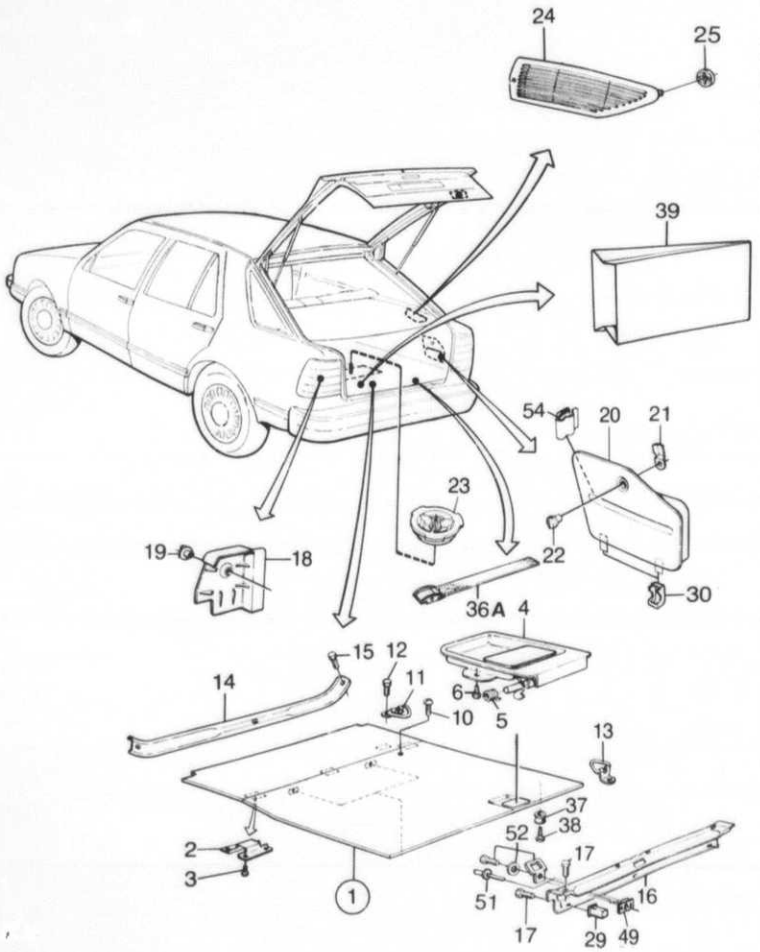

F8029 CAC94

1600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	42 67 654		315)	1	Load floor	Lastgolv	5
0027	1	45 12 893		316)	1	Load floor	Lastgolv	5
0030	1	86 88 087		1995-, CN	1	Load floor	Lastgolv	5
0040	2	97 64 853		315), LH	1	.Hinge	.Gångjärn	5
0050	2	97 90 981		315), CENTRE AND RH	2	.Hinge	.Gångjärn	5
0055	2	42 67 399		316)	2	.Hinge	.Gångjärn	5
0060	3	97 75 230			24	.Screw	.Skruv	5
0070	4	96 57 123			1	.Lock	.Lås	6
0080	5	97 74 282			1	.Spring	.Fjäder	6
0090	6	80 59 248			2	.Screw	.Skruv	5
0115	10	97 71 320			2	Screw	Skruv	5
0120	11	97 74 217			2	Eye	Ögla	6
0130	12	79 22 420			4	Screw	Skruv	5
0140	13	97 77 749			2	Eye	Ögla	6
0160	14	40 31 696			1	Cover	Kåpa	5
0170	15	*84 41 503*		NLS - USE 7970601	3	Screw	Skruv	5
0223	16	42 71 235		-1997, 4D	1	Sill protection	Tröskelskydd	6
0230				5CS	1	Sill protection	Tröskelskydd	
0240				See page 8B-113, 5-E18				
0260	17	97 71 320			7	Screw	Skruv	5
0270	17	97 71 320		-1997, 4D	9	Screw	Skruv	5
0280	18			See page 3A-049, 2-C02	1	Cover	Kåpa	
0290	19			See page 3A-049, 2-C02	2	.Knob	.Vred	
0306	20	44 99 778			1	Tool box	Verktygslåda	
0310	21	97 67 799			1	.Catch	.Hake	5
0320	22	97 67 781			1	.Knob	.Vred	5
0330	23	97 74 290			1	Knob	Vred	5
0340	24	41 41 628		-1997, 4D	1	Grille	Galler	5
0460	25	41 28 195		-1997, 4D	7	Lock washer	Spärrbricka	5
0470	29	79 77 358		-1997, 4D	1	Press nut	Pressmutter	5
0480	30	97 95 717			2	Cover	Kåpa	5
0570	36A	41 41 784			1	Strap	Låsband	5
0580						big spare wheel	stort reservhjul	
0590	37	97 94 264			1	Knob	Knopp	6
0600	38	97 75 230			1	Screw	Skruv	5
0610	39	94 59 728			1	Bag	Påse	6
0670	49	96 53 502		AU	3	Nut plate	Mutterplatta	5
0675	49	96 53 502		387), CA	3	Nut plate	Mutterplatta	5
0680	49	95 83 790		386), CA	3	Nut plate	Mutterplatta	5
0700	51	79 72 490		AU, CA	3	Rivet	Nit	5
0710	52	95 93 534		386), AU, CA	1	Attaching washer	Fästbricka	6
0720	52	46 57 094		387), AU, CA	1	Attaching washer	Fästbricka	6
0750	54	95 48 355		26)	1	Clamp	Klämma	3

26. For cars with electrically adjustable seats För bilar med elmanövrerade stolar
315. Ch. -R1010636
316. Ch. R1010637-
386. Ch. -S1018314
387. Ch. S1018315-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H16

Scuff plate protector — *Tröskelskydd*

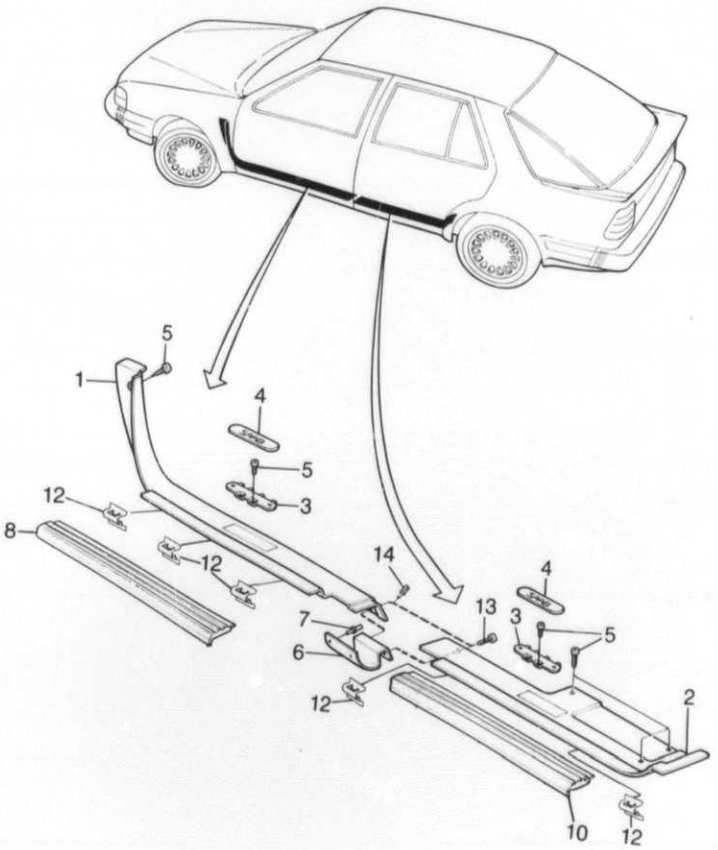

F6568 CAC94

1610	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0330	1	42 65 484		LH	1	Sill protection	Tröskelskydd	5
0340	1	96 97 616		RH	1	Sill protection	Tröskelskydd	5
0460	2	97 98 208		406), LH	1	Sill protection	Tröskelskydd	5
0470	2	97 98 216		406), RH	1	Sill protection	Tröskelskydd	5
0480	2	47 05 463		407), LH	1	Sill protection	Tröskelskydd	
0490	2	47 05 471		407), RH	1	Sill protection	Tröskelskydd	
0510	3	96 72 262		LH	1	Plate	Plåt	6
0520						front	fram	
0530	3	97 67 641		RH	1	Plate	Plåt	6
0540						front	fram	
0550	3	97 67 641			2	Plate	Plåt	6
0560						rear	bak	
0600	4	95 71 563			4	Cover	Täcklock	6
0610	5	79 77 366			12	Screw	Skruv	5
0620	6	97 65 181			2	Bracket	Fäste	5
0640	7	79 72 490			4	Rivet	Nit	5
0670	8			-1997, 4D		Sill protection	Tröskelskydd	
0671				See page 8A-061, 4-E14				
0680	8			5CS		Sill protection	Tröskelskydd	
0681				See page 8A-069, 4-E22				
0730	10			-1997, 4D		Sill protection	Tröskelskydd	
0731				See page 8A-061, 4-E14				
0740	10			5CS		Sill protection	Tröskelskydd	
0741				See page 8A-069, 4-E22				
0770	12	42 56 939			X	Clamp	Klämma	5
0780	13	79 77 366			4	Screw	Skruv	5
0790	14	92 55 845			4	Rivet	Nit	5

406. Ch. -S1028327
407. Ch. S1028328-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H18 *Other interior equipment* *Övrig invändig utrustning*

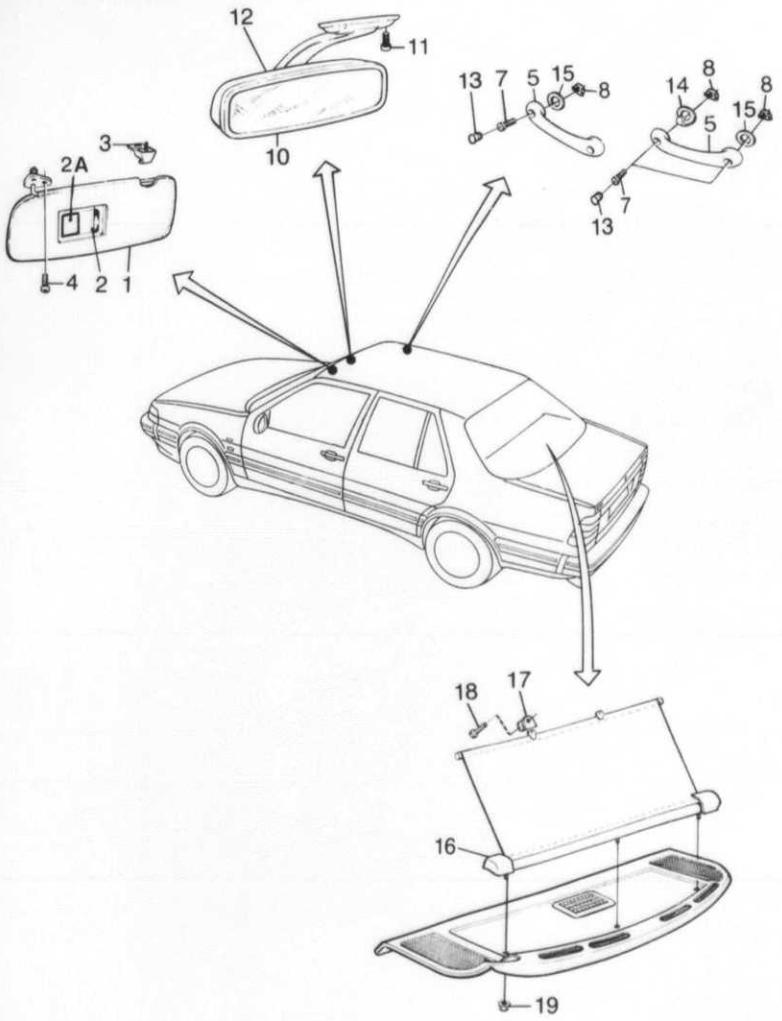

F8030 CAC94

1620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 68 272		408), LH	1	Sun visor	Solskydd	5
0020						with mirror	med spegel	
0030	1	42 68 280		408), RH	1	Sun visor	Solskydd	5
0040						with mirror	med spegel	
0050	1	*95 78 428*		309), LH	1	Sun visor	Solskydd	5
0060				NLS - USE 4510707		mirror with light	spegel med belysning	
0070	1	*95 78 436*		309), RH	1	Sun visor	Solskydd	5
0080				NLS - USE 4510699		mirror with light	spegel med belysning	
0090	1	45 10 707		310,408), LH	1	Sun visor	Solskydd	5
0100						mirror with light	spegel med belysning	
0110	1	45 10 699		310,408), RH	1	Sun visor	Solskydd	5
0120						mirror with light	spegel med belysning	
0130	1	46 37 864		409,417), LH	1	Sun visor	Solskydd	5
0140						mirror with light	spegel med belysning	
0150	1	46 37 872		409,417), RH	1	Sun visor	Solskydd	5
0160						mirror with light	spegel med belysning	
0170	1	47 91 224		418), LH	1	Sun visor	Solskydd	5
0180						mirror with light	spegel med belysning	
0190	1	47 91 232		418), RH	1	Sun visor	Solskydd	5
0200						mirror with light	spegel med belysning	
0210								
0220	1	43 68 817		408), LH, US, CA	1	Sun visor	Solskydd	5
0230						mirror with light	spegel med belysning	
0240	1	43 68 825		409), RH, US, CA	1	Sun visor	Solskydd	5
0250						mirror with light	spegel med belysning	
0260	1	43 68 833		409,472), LH, US, CA	1	Sun visor	Solskydd	5
0270						mirror with light	spegel med belysning	
0280	1	43 68 841		409,472), RH, US, CA	1	Sun visor	Solskydd	5
0290						mirror with light	spegel med belysning	
0291	1	• 43 69 013		473), LH, US, CA	1	Sun visor	Solskydd	5
0292						mirror with light	spegel med belysning	
029.	1	• 43 69 005		473), RH, US, CA	1	Sun visor	Solskydd	5
0294						mirror with light	spegel med belysning	
0300	2			See page 3A-057, 2-C10	1	.Bulb	.Glödlampa	
0310	2A			See page 8D-011, 5-K12	2	.Label	.Etikett	
0320				US, CA				
0330	3	97 70 603		408)	2	Support	Stöd	5
0340	3	95 78 444		408)	2	Support	Stöd	5
0350						mirror with light	spegel med belysning	
0360	3	97 70 603		409)	2	Support	Stöd	5
0370						mirror with light	spegel med belysning	
0380	4	79 73 951		1994	6	Screw	Skruv	5
0390	4	79 22 370		1995	6	Screw	Skruv	5
0400	4	79 22 818		1996-	6	Screw	Skruv	5
0410	5	95 91 405			4	Curve handle	Kurvhandtag	5
0420	7	79 82 333			8	Screw	Skruv	5
0430	8	79 74 983			8	Cage nut	Korgmutter	5
0440	10	42 74 924		479)	1	Rear view mirror	Backspegel	4
0445	10	• 49 36 001		480)	1	Rear view mirror	Backspegel	4
0450	10	46 07 115		44,1995-,479)	1	Rear view mirror	Backspegel	4

44. With theft alarm Med stöldlarm
199. Ch. M1017620-, M2011731-
309. Ch. -R1005971
310. Ch. R1005972-
408. Ch. -S1029271
409. Ch. S1029272-
417. Ch. -T1004958
418. Ch. T1004959-
472. Ch. -V1018750
473. Ch. V1018751-
479. Ch. -V1026895
480. Ch. V1026896-


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H20 *Other interior equipment* *Övrig invändig utrustning*

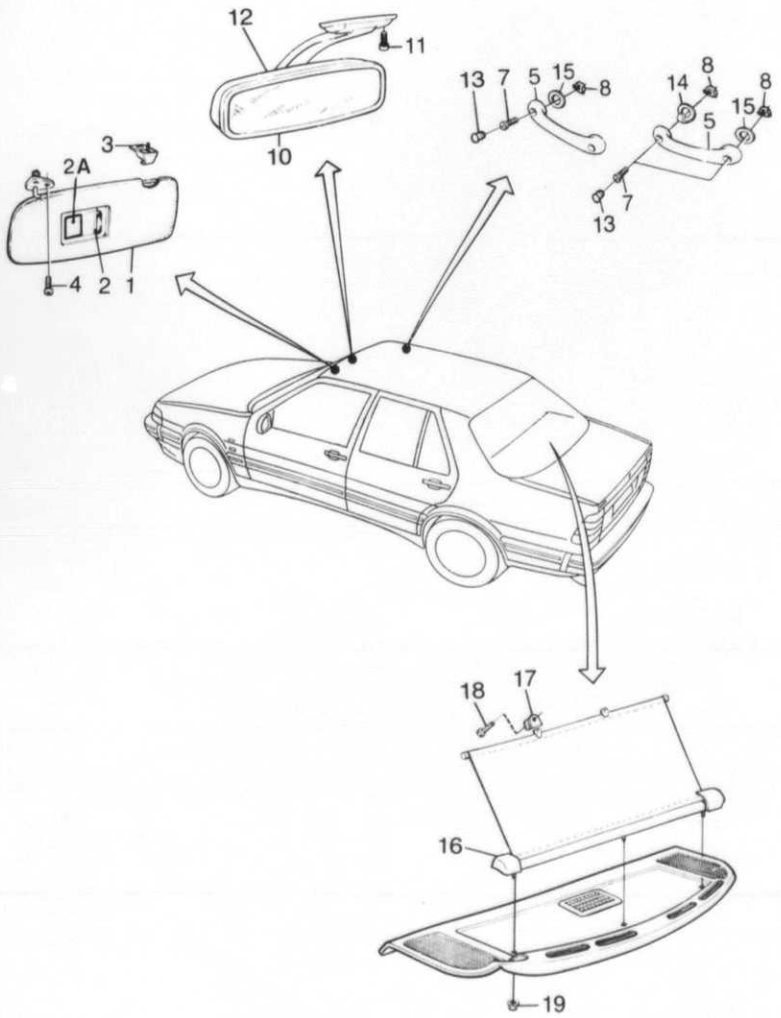

F8030 CAC94

1620	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0455	10	• 49 36 068		44 480)	1	Rear view mirror	Backspegel	4
0460	11	79 75 329			3	,Screw	,Skruv	5
0470	12			See page 3A-057, 2-C10	1	,Bulb	,Glödlampa	
0480	13	97 70 595			8	Cover	Täcklock	5
0490	14	97 53 724			2	Hook	Krok	5
0500	15	97 82 293			6	Spacer washer	Distansbricka	5
0510	16	42 69 809		-1997, 4D	1	Blind	Rullgardin	5
0520	17	42 69 817		-1997, 4D	2	Bracket	Fäste	6
0530	18	79 65 361		-1997, 4D	2	Screw	Skruv	5
0540	19	79 75 576		-1997, 4D	3	Nut	Mutter	5

44. With theft alarm Med stöldlarm
480. Ch. V1026896–

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H22

Shelf

Hatthylla

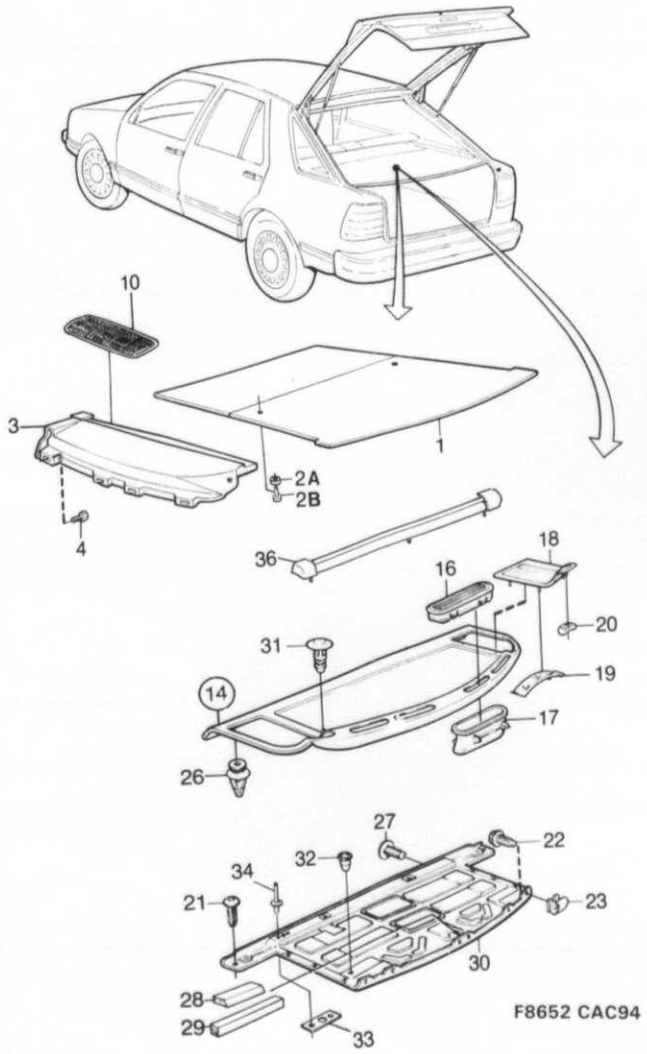

1625	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	42 68 470		90), -1995, 5CS	1	Rear shelf	Hatthylla	5
0020	1	44 99 059		70), 5CS	1	Rear shelf	Hatthylla	
0030	2A	42 66 532			2	.Stop	.Stopp	6
0040	2B	42 67 787			2	.Screw	.Skruv	6
0050	3	44 86 817		5CS, LH	1	Support	Stöd	5
0060	3	44 86 825		5CS, RH	1	Support	Stöd	5
0070								
0080	4	*79 75 170*		368) NLS – USE 7982366	X	Screw	Skruv	5
0085	4	79 72 607		369)	X	Screw	Skruv	5
0140	10			1), 5CS		Loudspeaker grille	Högtalargaller	
0150								
0160	14	42 64 289		210), -1997, 4D	1	Rear shelf	Hatthylla	5
0170	14	40 44 079		90), -1995, 4D	1	Rear shelf	Hatthylla	5
0180	14	41 33 278		100), -1997, 4D	1	Rear shelf	Hatthylla	5
0190	14	42 68 132		110), -1997, 4D	1	Rear shelf	Hatthylla	5
0200	16	42 64 446		-1997, 4D	4	.Air outlet	.Luftutsläpp	5
0210	17	96 74 896		-1997, 4D	4	.Air outlet	.Luftutsläpp	5
0220	18	96 94 001		-1997, 4D, LH	1	.Loudspeaker grille	.Högtalargaller	5
0230	18	96 94 019		-1997, 4D, RH	1	.Loudspeaker grille	.Högtalargaller	5
0240	19	95 78 246		-1997, 4D	10	.Clamp	.Klämma	5
0250	20	96 92 724		-1997, 4D	2	.Clamp	.Klämma	5
0260								
0270	21	79 72 607		-1997, 4D	2	Screw	Skruv	5
0280	22	82 86 296		-1995, 4D	6	Screw	Skruv	5
0285	22	79 72 607		1996-1997, 4D	6	Screw	Skruv	5
0290	23	79 77 895		-1997, 4D	6	Cage nut	Korgmutter	5
0300	26	95 78 238		-1997, 4D	4	Clamp	Klämma	5
0310	27	42 64 388		210), -1995, 4D	3	Cover	Täcklock	5
0320	27	95 91 892		90), -1995, 4D	3	Cover	Täcklock	5
0330	27	95 91 637		70), -1997, 4D	3	Cover	Täcklock	5
0340	28	40 30 342		27), -1997, 4D	1	Seal	Tätning	5
0350	29	40 34 369		27), -1997, 4D	1	Seal	Tätning	5
0360	30	95 84 871		384), 4D	1	Support	Stöd	5
0365	30	47 04 219		385), -1997, 4D	1	Support	Stöd	5
0370	31	42 64 370		210,323), 4D	2	Plug	Plugg	5
0380	31	95 83 576		90,323), 4D	2	Plug	Plugg	5
0390	31	95 83 196		70), -1997, 4D	2	Plug	Plugg	5
0400	32	95 80 275		-1997, 4D	2	Sleeve	Hylsa	5
0410	33	95 83 790		386), CA	3	Nut plate	Mutterplatta	5
0420	33	96 53 502		AU	3	Nut plate	Mutterplatta	5
0425	33	96 53 502		387), CA	3	Nut plate	Mutterplatta	5
0430	34	79 72 490		CA, AU	6	Rivet	Nit	5
0450	36			See page 8B-185, 5-H18		Blind	Rullgardin	

1. Not as separate spare part. Ej som separat reservdel.
27. For cars with high mounted stop light För bilar med högt monterat bromsljus
70. Grey Grå
90. Yellow Gul
100. Light grey Ljus grå
110. Black Svart
210. Light beige Ljus beige
323. Ch. -R1018391
368. Ch. -S1007084
369. Ch. S1007085-
384. Ch. -S1018314
385. Ch. S1018315-
386. Ch. -S1018314
387. Ch. S1018315-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-H24

Safety belt, front seat

Bilbälte framsäte

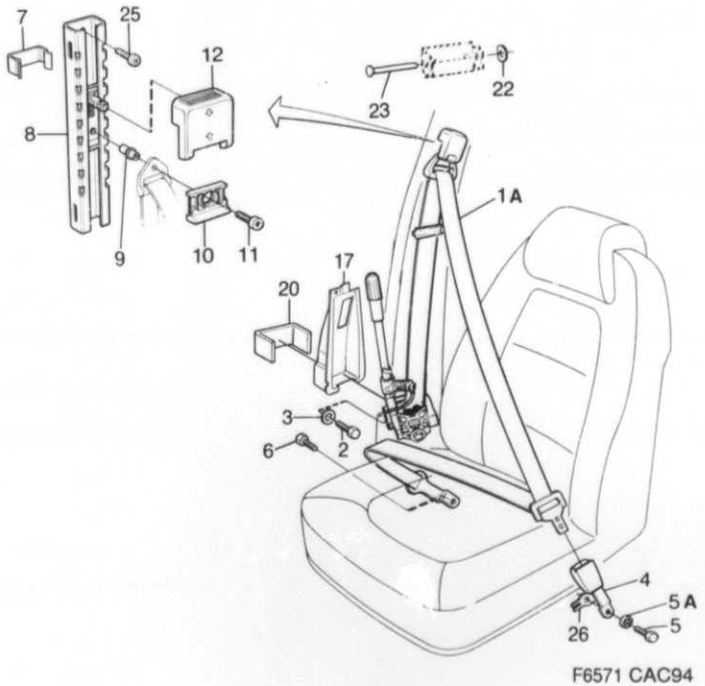

F6571 CAC94

1650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1A	43 11 023		45), LH	1	Seat belt	Säkerhetsbälte	5
0020	1A	43 11 031		45), RH	1	Seat belt	Säkerhetsbälte	5
0023	1A	43 14 652		45), 1996-, LH, US, CA	1	Seat belt	Säkerhetsbälte	5
0026	1A	43 14 670		45), 1996-, RH, US, CA	1	Seat belt	Säkerhetsbälte	5
0030	1A	43 11 049		26,45), LH	1	Seat belt	Säkerhetsbälte	5
0040	1A	43 11 056		26,45), RH	1	Seat belt	Säkerhetsbälte	5
0043	1A	45 05 764		26,45), 1996-, LH,US,CA	1	Seat belt	Säkerhetsbälte	5
0046	1A	45 05 772		26,45), 1996-, RH,US,CA	1	Seat belt	Säkerhetsbälte	5
0050	2	84 99 204			1	.Screw	.Skruv	5
0060	2	84 99 238		45), 1992-	1	.Screw	.Skruv	6
0070	3	44 13 860		45), 1992-	1	.Washer	.Bricka	
0080	4	44 16 590			2	Belt catch	Bältlås	5
0090	4	44 13 852		26)	2	Belt catch	Bältlås	5
0100	5	96 72 791			2	.Screw	.Skruv	5
0110	5	95 86 827		26)	2	.Screw	.Skruv	5
0120	5A	95 48 058		26)	2	.Spacer sleeve	.Distanshylsa	5
0130	6	84 99 204			2	Screw	Skruv	5
0140	6	95 44 818		25)	2	Screw	Skruv	5
0150	7	40 77 111			4	Clamp	Klämma	5
0160	8	95 47 696			2	Height adjustment	Höjdjustering	6
0170	9	96 72 569			2	Spacer sleeve	Distanshylsa	5
0180	10	96 94 951			2	Push button	Tryckknapp	6
0190	11	96 73 385			2	Screw	Skruv	5
0200	12	97 64 457			2	Cover	Kåpa	6
0210	17	40 77 871		LH	1	Protecting casing	Skyddskåpa	4
0220	17	40 77 889		RH	1	Protecting casing	Skyddskåpa	4
0230	20	97 91 070			2	Seal	Tätning	5
0240	22	79 79 651			2	Washer	Bricka	5
0250	23	96 92 815			2	Pin	Pinne	5
0260	25	97 94 132			4	Screw	Skruv	5
0270	26	40 42 974		26)	2	Reinforcement	Förstärkning	6

26. For cars with electrically adjustable seats — För bilar med elmanövrerade stolar
45. With tensioner — Med sträckare

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

5-I02

Safety belt, rear seat

Bilbälte, baksäte

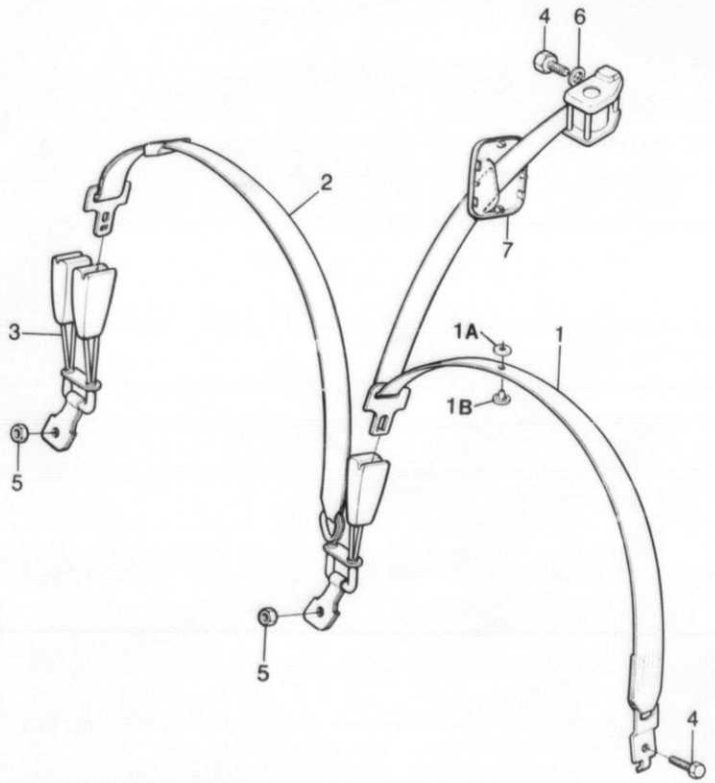

F6572 CAC94


1700	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	40 79 695		LH	1	Seat belt	Säkerhetsbälte	5
0020	1	40 79 703		RH	1	Seat belt	Säkerhetsbälte	5
0030	1	43 14 720		1996-, LH, US, CA	1	Seat belt	Säkerhetsbälte	5
0040	1	43 14 738		1996-, RH, US, CA	1	Seat belt	Säkerhetsbälte	5
0050	1A	96 17 846			1	.Button	.Knapp	5
0060	1B	96 17 853			1	.Button	.Knapp	5
0070	2	40 32 629		LH	1	Seat belt	Säkerhetsbälte	5
0080	3	40 32 611			1	Belt catch	Bältlås	5
0090	4	84 99 204			4	Screw	Skruv	5
0100	5	73 99 793			2	Lock nut	Låsmutter	5
0110	6	79 77 507			4	Washer	Bricka	5
0120	7			LH AND RH		Grommet	Genomföring	
0130				See page 8B-133, 5-F14				

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

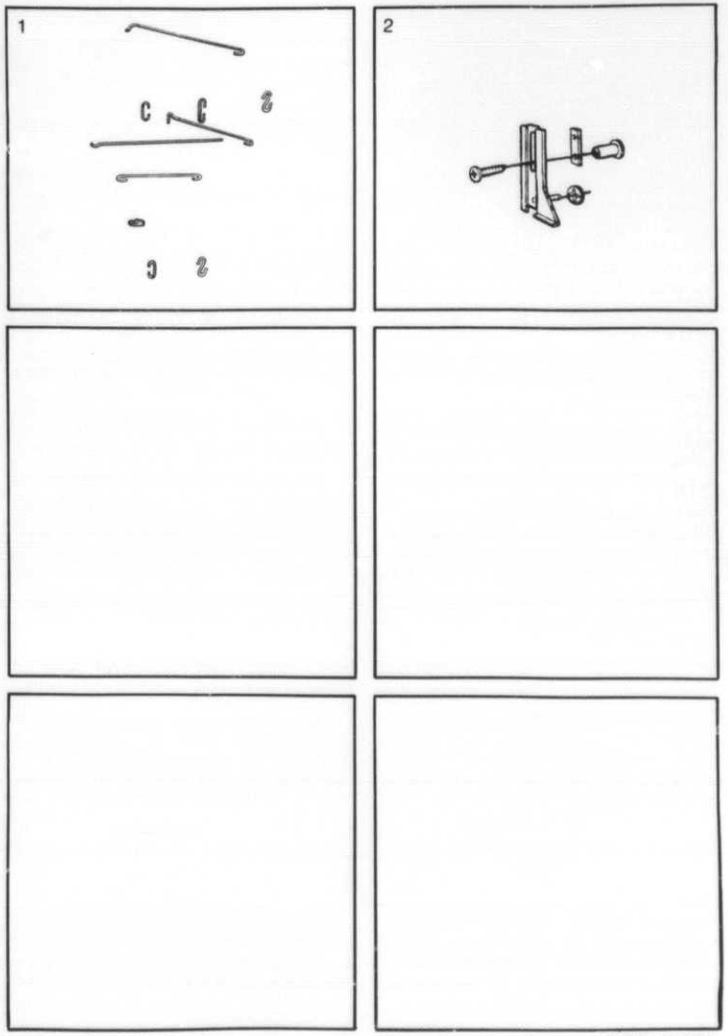

Complete set

5-I04

Car body, internal

Satser

Kaross, invändig

2500	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 71 751		25)	2	Mounting kit	Monteringssats	6
0020						front seat	framstol	
0030		97 81 592			2	.Cover rod	.Klädselbåge	5
0040		94 50 685			6	.Clamp	.Klammer	5
0050		97 69 209			2	.Hook	.Krok	5
0060								
0070	1	96 76 818		25)	2	Mounting kit	Monteringssats	6
0080						front seat	framstol	
0090		96 71 041			1	.Wire rod	.Trådten	5
0100		96 92 906			1	.Wire rod	.Trådten	5
0110		97 21 481			1	.Wire rod	.Trådten	5
0120		97 21 499			2	.Wire rod	.Trådten	5
0130		97 69 209			4	.Hook	.Krok	5
0140		97 69 217			7	.Hook	.Krok	5
0150		97 69 225			4	.Hook	.Krok	5
0160		97 82 558			1	.Cover rod	.Klädselbåge	5
0170		97 83 408			2	.Attaching brace	.Fästbygel	5
0180								
0190	1	96 97 939		19)	2	Mounting kit	Monteringssats	6
0200						front seat	framstol	
0210		95 47 332			1	.Cover rod	.Klädselbåge	5
0220		96 94 969		1)	2	.Wire rod	.Trådten	5
0230		94 50 685			6	.Clamp	.Klammer	5
0240		95 84 715		1)	2	.Wire rod	.Trådten	5
0250		97 69 217			6	.Hook	.Krok	5
0260		97 81 592			2	.Cover rod	.Klädselbåge	5
0270		95 84 723		1)	2	.Wire rod	.Trådten	5
0280		95 93 245			2	.Attaching brace	.Fästbygel	5
0290		97 69 209			6	.Hook	.Krok	5
0300								
0310	1	44 75 513		278)	2	Mounting kit	Monteringssats	
0320						front seat	framstol	
0330		96 92 906			1	Wire rod	Trådten	5
0340				1)	1	Wire rod	Trådten	
0350		97 69 225			6	Hook	Krok	5
0360		97 69 217			6	Hook	Krok	5
0370		97 69 209			2	Hook	Krok	5
0380								
0390	1	44 75 539		278)	2	Mounting kit	Monteringssats	
0400						rear seat	baksäte	
0410						seat cushion	sittdyna	
0420		96 92 906			1	Wire rod	Trådten	5
0430		97 95 832		1)	5	String	Snöre	6
0440		96 93 094			1	Wire rod	Trådten	5
0450		97 95 832		1)	2	String	Snöre	6
0460								
0470	1	44 75 547		278)	2	Mounting kit	Monteringssats	
0480						rear seat	baksäte	
0490						backrest cushion	ryggdyna	
0500		97 87 532			1	Wire rod	Trådten	5
0510		97 69 217			1	Hook	Krok	5
0520		97 69 209			1	Hook	Krok	5
0530		97 21 572		1)	1	String	Snöre	6
0540		94 89 493		1)	4	String	Snöre	6
0550		97 61 495		1)	1	Wire rod	Trådten	6
0560								
0570	2	96 98 309			X	Adjusting kit	Justersats	4
0580						glove compartment lid	handsfacklucka	
0590		*95 71 027*		LH NLS – USE 4030201	1	.Hinge	.Gångjärn	4

1. Not as separate spare part. Ej som separat reservdel.
19. For cars with textile lining För bilar med textilklädsel
25. For cars with upholstery "CONTUR" För bilar med klädsel "CONTUR"
278. For cars with upholstery "SPORTS DESIGN" För bilar med klädsel "SPORTS DESIGN"

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04


Complete set

5 -I06

Car body, internal

Satser

Kaross, invändig

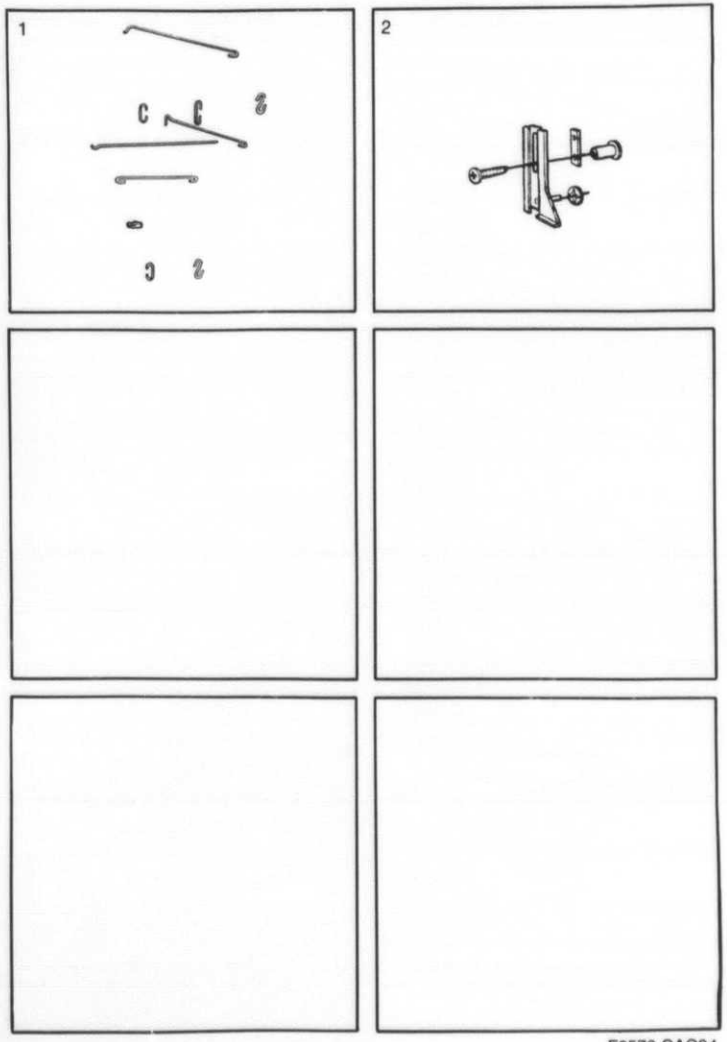

2500 Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	*95 71 035*		RH NLS – USE 4030219	1	.Hinge	.Gångjärn	4
0610	79 65 809			2	.Clip	.Clips	5
0620	95 71 084			2	.Nut washer	.Mutterbricka	5
0630	85 73 677			2	.Hose	.Slang	5
0640	97 76 006			4	.Screw	.Skruv	5

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8B GROUP INDEX

Instrument panel	5-A06
Upholstery	5-A24
Other interior equipment	5-F16
Complete sets	5-I04

8C

Body, heating and ventilation
Kaross, värme- och ventilation
Carrocería, calefacción y ventilación

0041
0020
0030
0040
0050
0060
0600
0660
0700
0710
0720
0725
0735
0743

TABLE OF CONTENTS

Heating and ventilation system

Control panel	8C : 5	5-J06
Heater core, fan unit	8C : 7	5-J08
Heater core, fan unit, servo unit ACC	8C : 9	5-J10
Draft channels	8C : 11	5-J12
Doorfan	8C : 13	5-J14
Air conditioning, compressor part (Cycling clutch), R134a	8C : 15	5-J16
Air conditioning, evaporator part	8C : 19	5-J20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system 5-J06

0042
0800
0810
0820
1450
1455
1460
1470
1480
1485
1495
1505
1560
3090
3100
3730
3735
3740
3750
3760
3765
3775
3785

INNEHÅLLSFÖRTECKNING

Värme- och ventilationssystem

Reglagepanel	8C : 5	5-J06
Värmeväxlarc, fläktenhet	8C : 7	5-J08
Värmeväxlare, fläktenhet, servoenhet ACC	8C : 9	5-J10
Fördelningskanaler	8C : 11	5-J12
Dörrfläkt	8C : 13	5-J14
Luftkonditionering, kompressordel (cycling clutch) R134a	8C : 15	5-J16
Luftkonditionering, förångardel	8C : 19	5-J20

SUMARIO

Sistema de calefaccion y ventilacion

Tablero de mandos	8C : 5	5-J06
Cambiador de calor, ventilador de la calefaccion	8C : 7	5-J08
Cambiador de calor, ventilador de la calefaccion, servomecanismo ACC	8C : 9	5-J10
Canales de distribucion	8C : 11	5-J12
Ventilador de la puerta	8C : 13	5-J14
Aire acondicionado, unidad de compresor (cycling clutch) R134a	8C : 15	5-J16
Aire acondicionado, unidad de evaporador	8C : 19	5-J20

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06

5-J06

Control panel
Reglagepanel

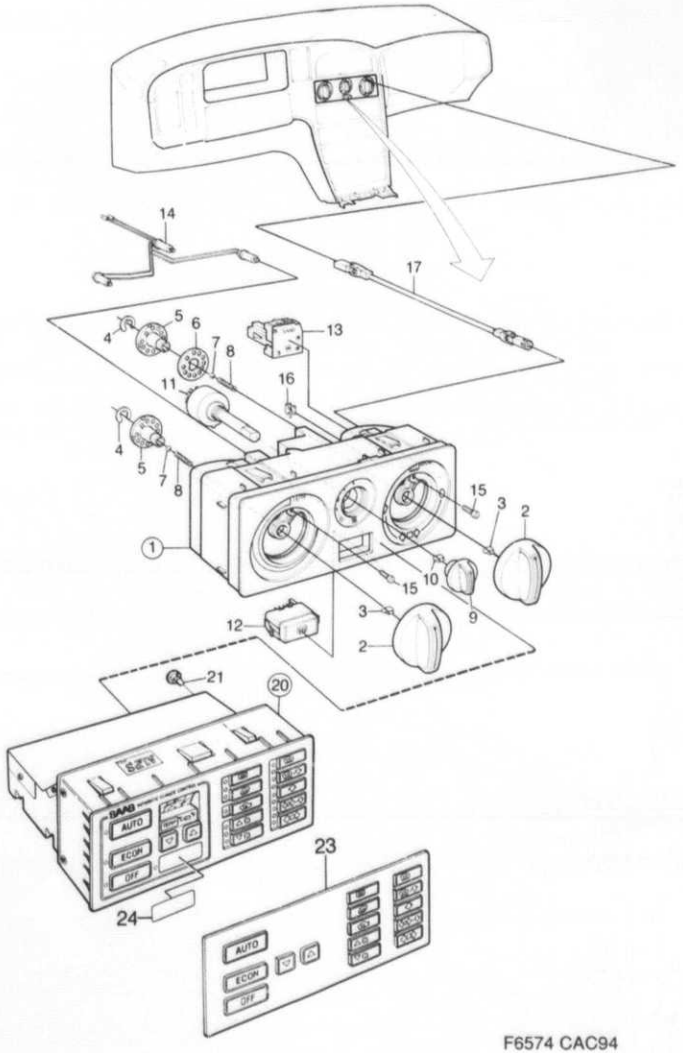

F6574 CAC94

0520	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 31 235			1	Panel	Panel	5
0020	2	96 23 737			2	.Steering wheel	.Ratt	3
0030	3	96 21 897			2	..Bracket	..Hållare	5
0040	4	79 36 008			2	.E-circlip	.Spårryttare	5
0050	5	96 25 245			2	.Disc	.Skiva	5
0060	6	96 25 252			1	.Spring latch bolt	.Snäppregel	5
0070	7	94 20 043			2	.Ball	.Kula	5
0080	8	94 20 035			2	.Spring	.Fjäder	5
0090	9	96 23 745			1	.Steering wheel	.Ratt	3
0100	10	96 21 897			1	..Bracket	..Hållare	5
0110	11	95 00 927		FAN	1	.Switch	.Strömställare	3
0120	12	95 05 744		HEATED REAR WINDOW	1	.Switch	.Strömställare	3
0130	13	95 05 421		FAN SHUT OFF	1	.Contact	.Kontakt	3
0140	14	95 14 787			1	.Cable harness	.Ledningsnät	5
0150		85 00 613			3	..Bulb	..Glödlampa	2
0160	15	79 71 393			2	.Screw	.Skruv	5
0170	16	96 25 351			1	.Clamp	.Klämma	5
0180								
0190	17	96 22 390			1	Control arm	Reglagearm	5
0200	17	96 26 383		RHD	1	Control arm	Reglagearm	5
0210								
0220	20	43 82 933		1994,7) ACC	1	Control panel	Reglagepanel	5
0230	20	43 83 790		1995-,7) ACC	1	Control panel	Reglagepanel	5
0240								
0250	21	96 25 575			3	.Bulb	.Glödlampa	4
0260	23	40 74 316			1	Symbol strip	Symbolskiva	5
0270	24	96 31 599			1	Cover	Täcklock	6


7. Also available as exchange unit. Finns även som utbytesenhet.

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06

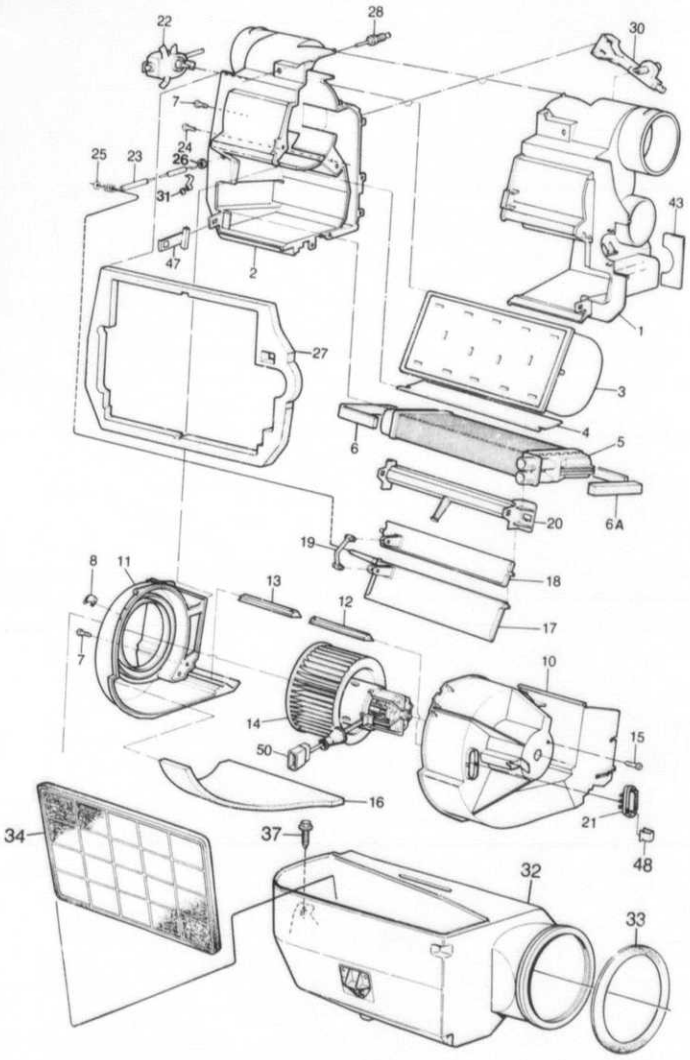

F6575 CAC94

Heating and ventilation

5 -J08

Heat exchanger
Fan unit

Värme och ventilation

Värmeväxlare
Fläktenhet

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 83 063		LH	1	Heater housing	Värmehus	6
0020	2	43 83 071		RH	1	Heater housing	Värmehus	6
0030	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0040	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0050	5	*40 70 728*		335) NLS – USE 4542981	1	Heat exchanger	Värmeväxlare	4
0060	5	45 42 981		336)	1	Heat exchanger	Värmeväxlare	4
0070	6	96 26 300			1	Seal	Tätning	5
0080	6A	96 26 318			1	Seal	Tätning	5
0090	7	79 71 443			2	Screw	Skruv	5
0100	8	96 25 989			10	Clamp	Klämma	5
0110	10	96 28 272		LH	1	Fan housing	Fläkthus	5
0120	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0130	12	96 25 138		LH	1	Air deflector	Luftledare	5
0140	13	96 25 120		RH	1	Air deflector	Luftledare	5
0150	14	96 28 587			1	Fan unit	Fläktenhet	4
0160	15	80 59 230			1	Screw	Skruv	5
0170	16	96 25 955			1	Insulation	Isolering	6
0180	17	96 24 321			1	Shutter	Spjäll	5
0190	18	96 24 305			1	Shutter	Spjäll	5
0200	19	96 24 347			1	Link	Länk	5
0210	20	96 22 655			1	Intermediate section	Mellanstycke	5
0220	21	*43 82 420*		-1994 NLS – USE 4634564	1	Resistor	Motstånd	5
0230	21	46 34 564		1995-	1	Resistor	Motstånd	5
0240	22	96 23 570			1	Angle gear	Vinkelväxel	5
0250	23	96 23 455			1	Control cable	Reglagewire	5
0260	24	79 71 393			1	Screw	Skruv	5
0270	25	79 75 485			1	Washer	Bricka	5
0280	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0290	27	96 31 490			1	Seal	Tätning	5
0300	28	73 99 348			2	Rivet	Nit	5
0310	30	96 25 146			1	Gear rod	Växelstång	5
0320	31	96 22 432			2	Clamp	Klammer	5
0330								
0340	32	40 72 203			1	Filter housing	Filterhus	5
0350	33	96 30 039			1	.Seal	.Tätning	
0360	34	40 72 211			1	.Compartment filter	.Kupefilter	2
0370								
0380	37	79 78 638			2	Screw	Skruv	5
0390	43	96 22 697			1	Bracket	Hållare	5
0400	47	96 27 415		LH	1	Attaching plate	Fästplåt	6
0410	47	96 27 407		RH	1	Attaching plate	Fästplåt	6
0420	48	73 99 207			2	Clip	Clips	6
0430	50			See page 3B-005, 3-A06		Contact housing	Kontakthus	


335. Ch. -R1019658
336. Ch. R1019659-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06

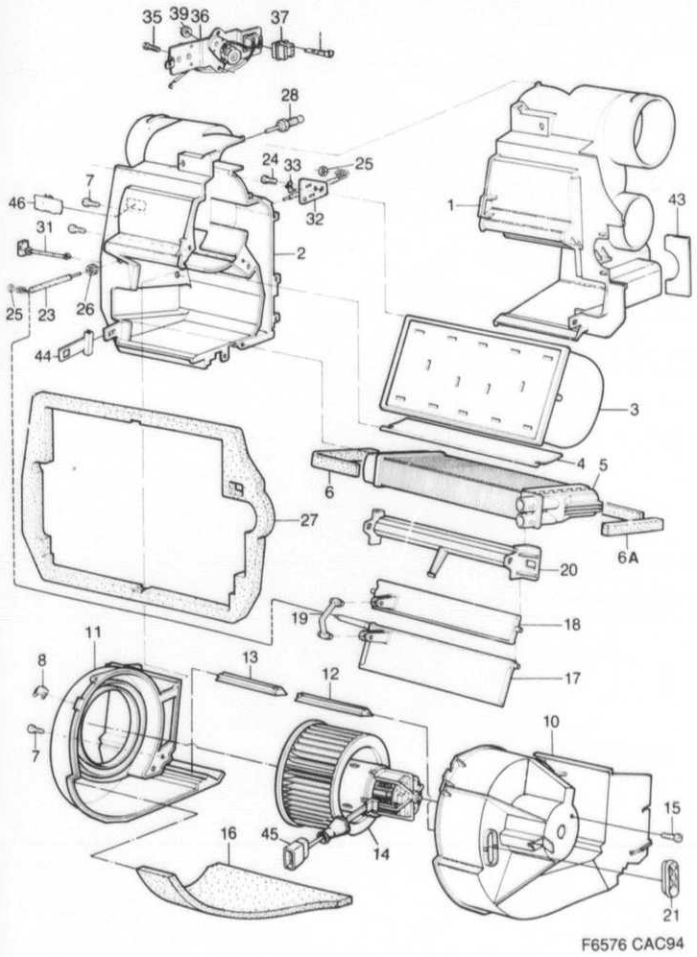

F6576 CAC94

Heating and ventilation

5-J10

Heat exchanger, servo
Fan unit, ACC

Värme och ventilation

Värmeväxlare, servo
Fläktenhet, ACC

1875	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	43 83 063		LH	1	Heater housing	Värmehus	6
0040	2	43 83 071		RH	1	Heater housing	Värmehus	6
0050	3	96 24 578			1	Air deflector housing	Luftledarhus	5
0060	4	96 25 468			1	Stiffening bar	Förstyvningsskena	6
0080	5	*40 70 728*		335) NLS – USE 4542981	1	Heat exchanger	Värmeväxlare	4
0081	5	45 42 981		336)	1	Heat exchanger	Värmeväxlare	4
0090	6	96 26 300			1	Seal	Tätning	5
0100	6A	96 26 318			1	Seal	Tätning	5
0110	7	79 71 443			2	Screw	Skruv	5
0120	8	96 25 989			10	Clamp	Klämma	5
0130	10	96 28 272		LH	1	Fan housing	Fläkthus	5
0140	11	96 22 614		RH	1	Fan housing	Fläkthus	5
0150	12	96 25 138		LH	1	Air deflector	Luftledare	5
0160	13	96 25 120		RH	1	Air deflector	Luftledare	5
0170	14	96 28 587			1	Fan unit	Fläktenhet	4
0180	15	80 59 230			1	Screw	Skruv	5
0190	16	96 25 955			1	Insulation	Isolering	6
0200	17	96 24 321		LOWER	1	Shutter	Spjäll	5
0210	18	96 24 305		UPPER	1	Shutter	Spjäll	5
0220	19	96 24 347			1	Link	Länk	5
0230	20	96 22 655			1	Intermediate section	Mellanstycke	5
0240	21	96 22 812			1	Cover	Täcklock	6
0250	23	96 23 935			1	Control cable	Reglagewire	5
0260	24	79 71 393			1	Screw	Skruv	5
0270	25	79 75 485			2	Washer	Bricka	5
0280	26	96 25 831			1	Protecting bushing	Skyddsbussning	6
0290	27	96 31 490			1	Seal	Tätning	5
0300	28	73 99 348			2	Rivet	Nit	5
0320	31			See page 3A-091, 2-D20	1	Sensor	Givare	
0330				MIXED AIR TEMP.				
0340	32	96 23 315			1	Attaching plate	Fästplåt	6
0350	33	96 22 432			1	Clamp	Klammer	5
0360	35	79 71 443			2	Screw	Skruv	5
0380	36	43 19 190			1	Motor unit	Motorenhet	4
0400	37	41 17 461			1	‚Connector housing	‚Skarvhus	4
0420	38	41 15 085			10	‚Cable terminal	‚Kabelsko	5
0430	39	43 82 826			1	Rubber bushing	Gummibussning	6
0440	43	96 22 697		GROMMET	1	Bracket	Hållare	5
0450	44	96 27 415		LH	1	Attaching plate	Fästplåt	6
0460	44	96 27 407		RH	1	Attaching plate	Fästplåt	6
0470	45			See page 3B-005, 3-A06		Contact housing	Kontakthus	
0480	46	96 29 411			1	Clamp	Klamma	5

335. Ch. -R1019658
336. Ch. R1019659-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system 5-J06

5-J12

Duct

Kanal

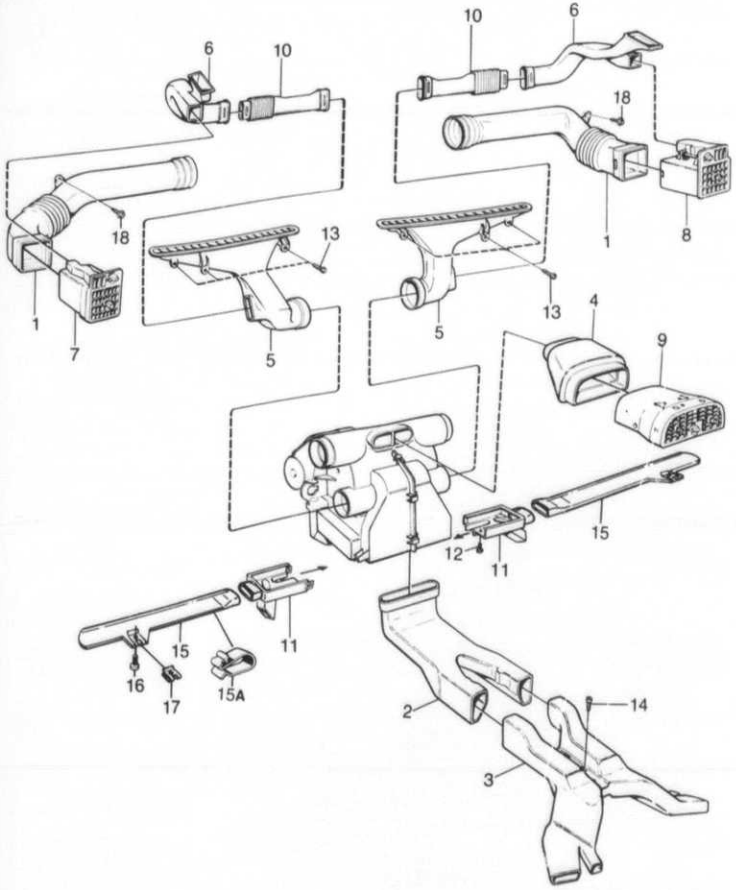

F8615 CAC94

1900	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 82 487		LH	1	Duct	Kanal	5
0020	1	43 82 479		RH	1	Duct	Kanal	5
0030	2	96 30 138		2)	1	Air duct	Luftkanal	5
0040	3	40 71 791		3)	1	Air duct	Luftkanal	5
0050	4	96 20 105		CENTRE	1	Duct	Kanal	5
0060	4	96 22 325		CENTRE, RHD	1	Duct	Kanal	5
0070	5	40 73 615		LH, DEFROSTER	1	Duct	Kanal	5
0080	5	40 73 623		RH, DEFROSTER	1	Duct	Kanal	5
0090	6	96 27 506		LH, SIDE DEFROSTER	1	Duct	Kanal	6
0100	6	96 27 498		RH, SIDE DEFROSTER	1	Duct	Kanal	6
0110	6	96 27 522		LH, RHD, SIDE DEFROSTER	1	Duct	Kanal	6
0120	6	96 27 514		RH, RHD, SIDE DEFROSTER	1	Duct	Kanal	6
0130	7	40 70 215		LH	1	Air outlet	Luftutsläpp	6
0140	8	40 70 223		RH	1	Air outlet	Luftutsläpp	6
0150	9	43 82 545		CENTRE	1	Air outlet	Luftutsläpp	6
0160	10	96 28 967			2	Duct	Kanal	6
0170	11	40 71 189		LH	1	Air outlet	Luftutsläpp	6
0180	11	40 71 171		RH	1	Air outlet	Luftutsläpp	6
0190	12	96 72 254			1	Screw rivet	Skruvnit	5
0200	13	79 22 420			6	Screw	Skruv	5
0210	14	79 73 001			1	Screw	Skruv	5
0220	15	96 30 336		LH, FRONT FLOOR	1	Duct	Kanal	6
0230	15	96 27 365		RH, FRONT FLOOR	1	Duct	Kanal	6
0240	15	40 70 272		RH, FRONT FLOOR, AIRBAG 2	1	Duct	Kanal	6
0250								
0260	15	96 29 122		LH, RHD, FRONT FLOOR	1	Duct	Kanal	6
0270	15	40 70 306		LH, RHD, FRONT FLOOR, AIRBAG 2	1	Duct	Kanal	6
0280								
0290	15	96 29 114		RH, RHD, FRONT FLOOR	1	Duct	Kanal	6
0300	15A	71 56 409		LH	1	,Clamp	,Klammer	5
0310	16	79 22 826			2	Screw	Skruv	5
0320	17	79 68 001			2	Clip nut	Clipsmutter	5
0330	18	79 22 420			2	Screw	Skruv	5

2. Front Främre
3. Rear Bakre

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system 5-J06

5-J14

Door fan
Dörrfläkt

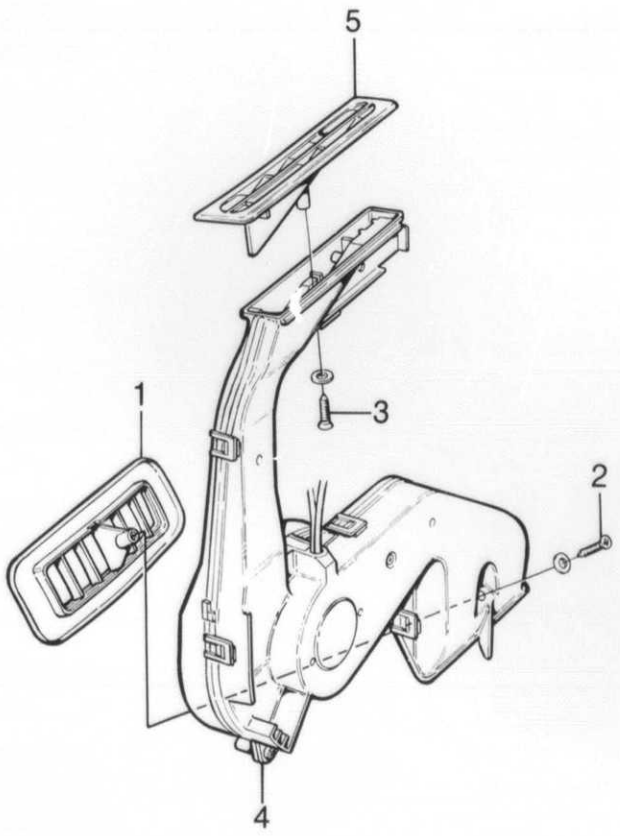

F8404 CAC94

1910	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	96 28 413			2	Air inlet	Luftintag	
0020	2	79 71 393			4	Screw	Skruv	5
0030	3	79 71 393			2	Screw	Skruv	5
0040	3	79 77 648		425)	2	Screw	Skruv	5
0050	4	96 28 454		LH	1	Fan unit	Fläktenhet	4
0060	4	96 28 462		RH	1	Fan unit	Fläktenhet	4
0070	5	96 28 447		LH	1	Air outlet	Luftutsläpp	
0080	5	96 28 512		RH	1	Air outlet	Luftutsläpp	

425. Wooden insert Träinlägg

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06

5-J16

AC compressor SEIKO-SEIKI

AC kompressor SEIKO-SEIKI

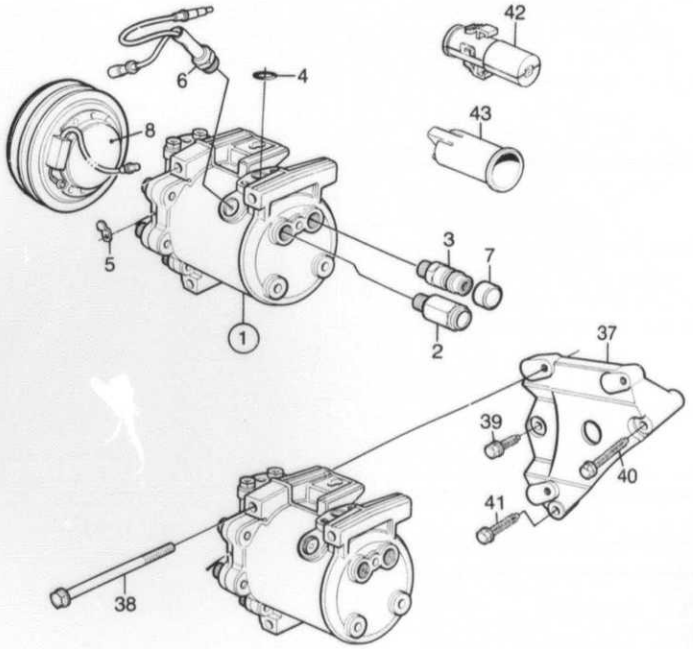

F6579 CAC94

1965	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	*43 82 743*		321) B204, B234 NLS – USE 4632055	1	Compressor	Kompressor	5
0020	1	*43 83 600*		322,355) B204, B234 NLS - USE 4632055	1	Compressor	Kompressor	5
0030	1	46 32 055		356) 4-CYL SE,GB,CA,EU	1	Compressor	Kompressor	5
0050	1	43 18 861		434) B308	1	Compressor	Kompressor	5
0060	1	46 35 108		435) B308	1	Compressor	Kompressor	5
0080	2	43 18 093		B204, B234	1	.Relief valve	.Avlastningsventil	6
0100	3	43 18 135		B204, B234	1	.Valve	.Ventil	6
0130	4	43 18 143			2	.O-ring	.O-ring	2
0150	5	43 18 168			1	.Cable clamp	.Kabelklämma	5
0170	6	43 18 192		355) B204, B234	1	.Thermo switch	.Termobrytare	5
0180	6	46 32 006		356) B204, B234	1	.Thermo switch	.Termobrytare	5
0190	6	46 32 014		B308	1	.Thermo switch	.Termobrytare	5
0210	7	43 18 150		B204, B234	1	.Plug	.Plugg	6
0230	8	*43 18 176*		321) B204, B234 NLS – USE 4383626	1	.Clutch	.Koppling	6
0240	8	43 83 394		322,355) B204, B234	1	.Clutch	.Koppling	6
0250	8	46 32 022		356) B204,B234	1	.Clutch	.Koppling	6
0260	8	43 82 115		434) B308	1	.Clutch	.Koppling	6
0270	8	46 35 116		435) B308	1	.Clutch	.Koppling	6
0290	37	43 56 275		B204, B234	1	Bracket	Konsol	6
0300	38	73 98 266		B204, B234	3	Screw	Skruv	5
0310	39	79 78 208		B204, B234	1	Screw	Skruv	5
0320	40	79 82 119		B204, B234	1	Screw	Skruv	5
0330	41	79 78 224		B204, B234	1	Screw	Skruv	5
0340	42	95 03 418		334)	1	Connector housing	Skarvhus	4
0350	43	95 03 426		334)	2	Connector housing	Skarvhus	4
0360		46 32 139			X	Shim	Shim	5
0370		40 74 787		20 ML	X	Oil	Olja	

321. Ch. -R1011711
322. Ch. R1011712-
334. Ch. R1017960-
355. Ch. -R1031921
356. Ch. R1031922-
434. Ch. -T1010541
435. Ch. T1010542-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02


8C GROUP INDEX

Heating and ventilation system	5-J06

5-J18

AC compressor SANDEN

AC kompressor SANDEN

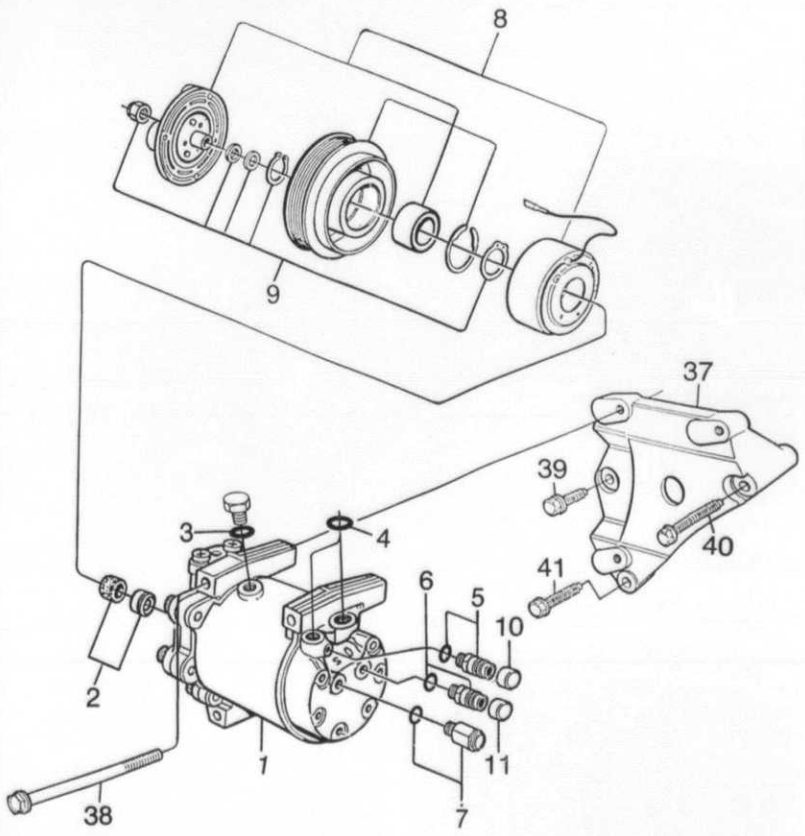

F8559 CAC94

1970	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	43 19 240		356,442,412) 4CYL	1	Compressor	Kompressor	5
0020	1	47 58 181		443) -1997, 4-CYL	1	Compressor	Kompressor	5
0030	1	• 48 68 659		1998-, 4-CYL	1	Compressor	Kompressor	5
0040								
0050	2	46 35 496		-1997	1	.Gasket kit	.Packningsats	6
0060	2	• 48 68 675		1998-	1	.Gasket kit	.Packningsats	6
0070	3	46 35 504			1	.O-ring	.O-ring	6
0080	4	46 35 520			2	.O-ring	.O-ring	6
0090	5	46 35 546			1	.Valve	.Ventil	6
0100	6	46 35 553		356,442,412)	1	.Valve	.Ventil	6
0110	7	46 35 561			1	.Valve	.Ventil	6
0120	8	46 35 579		-1997	1	.Clutch	.Koppling	6
0130	8	• 48 68 717		1998-	1	.Clutch	.Koppling	6
0140	9	46 35 587		-1997	1	.Clutch kit	.Kopplingsats	6
0150	9	• 48 68 709		1998-	1	.Clutch kit	.Kopplingsats	6
0160	10	46 35 819			1	.Valve cap	.Ventilhatt	6
0170	11	46 35 827		356,442,412)	1	.Valve cap	.Ventilhatt	6
0180		• 47 59 106		1998-	1	.Oil	.Olja	
0190								
0200	37	43 56 275			1	Bracket	Konsol	6
0210	38	73 98 266			3	Screw	Skruv	5
0220	39	79 78 208			1	Screw	Skruv	5
0230	40	79 82 119			1	Screw	Skruv	5
0240	41	79 78 224			1	Screw	Skruv	5

356. Ch. R1031922–
412. For hot and tropical market; ME, LA, AU, PA, US, IL, TR — För varm och tropisk marknad; ME, LA, AU, PA, US, IL, TR
442. Ch. –T1020957
443. Ch. T1020958–

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06

5 -J20

AC evaporator
AC förångare

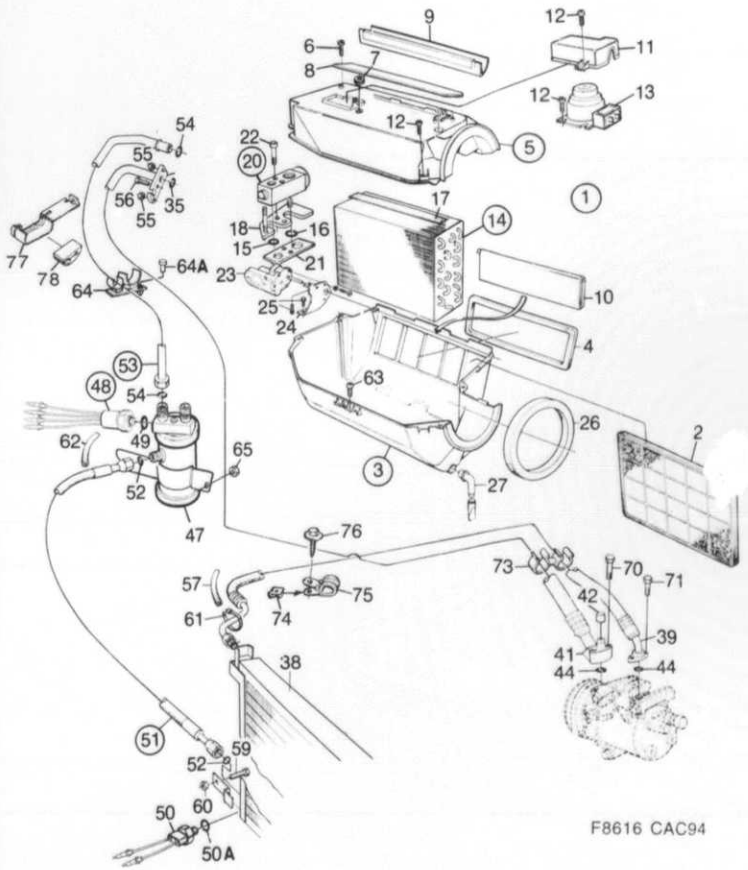

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 32 543			1	Evaporator housing	Förångarhus	6
0020	2	40 72 393			1	.Compartment filter	.Kupefilter	2
0030	3	43 19 125			1	.Casing	.Hus	5
0040	4	40 72 369			1	..Seal	..Tätning	4
0050	5	43 19 133			1	.Casing	.Hus	5
0060	6	79 72 946			1	..Screw	..Skruv	5
0070	7	43 19 646			1	..Bushing	..Bussning	5
0080	8	43 18 218			1	.Filter cover	.Filterlock	5
0090	9	40 73 359			1	.Water drainage	.Vattenavledare	5
0100	10	40 73 375			1	.Shutter	.Spjäll	5
0110	11	43 18 234			1	.Protecting casing	.Skyddskåpa	5
0120	12	79 22 214			12	.Screw	.Skruv	5
0130	13	45 42 973			1	.Thermo contact	.Termokontakt	4
0140	14	43 19 117			1	.Evaporator	.Förångare	6
0160	15	43 18 036		∅ 10,8 MM	1	..O-ring	..O-ring	2
0170	16	43 18 044		∅ 14 MM	1	..O-ring	..O-ring	2
0180	17	96 22 572			1	..Seal	..Tätning	4
0190	18	46 32 600			1	.Plate	.Platta	6
0200	20	43 19 158			1	.Valve	.Ventil	5
0210		43 18 036		∅ 10,8 MM	1	..O-ring	..O-ring	2
0220		43 18 044		∅ 14 MM	1	..O-ring	..O-ring	2
0230	21	40 73 391			1	.Seal	.Tätning	4
0240	22	80 97 800			2	.Screw	.Skruv	5
0250	23	96 24 867			1	.Electric motor	.Elmotor	5
0260	24	40 73 383			1	..Attaching plate	..Fästplatta	6
0270	25	*79 73 126*		NLS – USE 7972128	2	..Screw	..Skruv	5
0280	26	43 18 242			1	.Seal	.Tätning	4
0290	27	40 73 532			1	.Draining valve	.Dräneringsventil	6
0300	35	43 18 051		∅ 17,3 MM	1	.O-ring	.O-ring	2
0310								
0320	38	*43 82 404*		394) NLS – USE 4755492	1	Condenser	Kondensor	5
0330	38	*46 34 911*		395,413) NLS – USE 4755492	1	Condenser	Kondensor	5
0340		74 95 559		395,413)	1	Service kit	Servicesats	4
0350	38	47 55 492		414)	1	Condenser	Kondensor	5
0360								
0370	39	43 82 628		355) B204I, B234I, B204S B204E, TO CONDENSER	1	Hose	Slang	6
0380								
0390	39	43 82 628		356,450) B204I, B234I, B204S,B204E, SE,GB,CA,EU TO CONDENSER	1	Hose	Slang	6
0400								
0410								
0420								
0430	39	46 32 196		356,444)	1	Hose	Slang	6
0440				B204I, B234I, B204S,				
0450				B204E,US,PA,IL,TR,ME,LA,				
0460				AU, TO CONDENSER AND				
0470				EVAPORATOR				
0480	39	47 55 658		445) B204I, B234I, B204S B204E	1	Hose	Slang	6
0490				TO CONDENSER AND				
0500				EVAPORATOR				
0510								
0520								

355. Ch. -R1031921
356. Ch. R1031922-
394. Ch. -S1024934
395. Ch. S1024935-
413. Ch. -S1036244
414. Ch. S1036245-
444. Ch. -T1019839
445. Ch. T1019840-
450. Ch. -T1019400

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system 5-J06

5-J22

AC evaporator
AC förångare

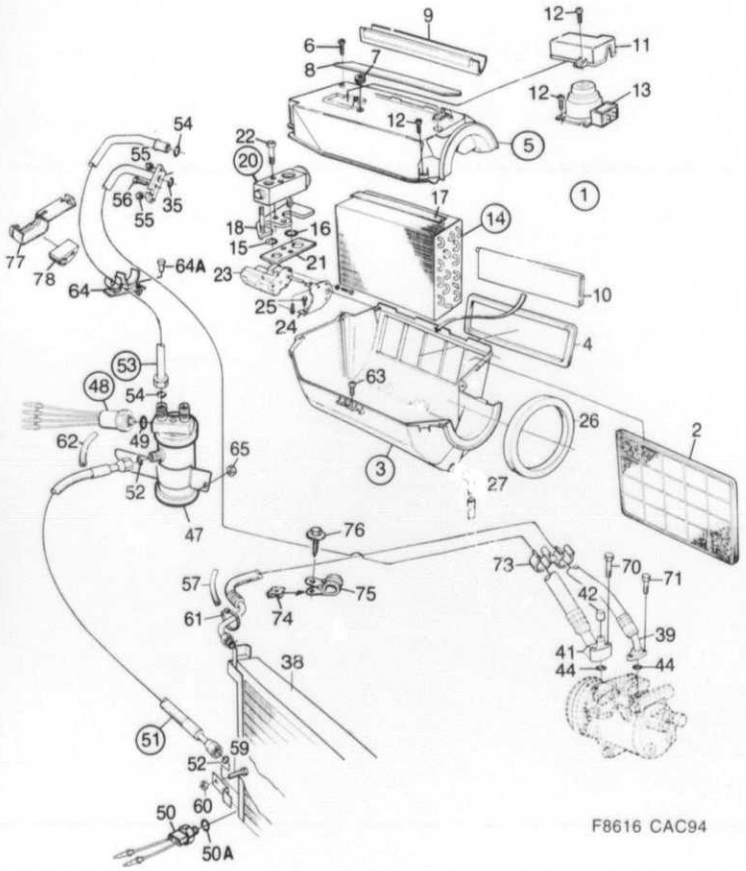

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0530	39	43 82 610		355) B204L, B234L, B234E, B234R TO CONDENSER	1	Hose	Slang	6
0560	39	43 82 610		356,450) B204L, B234L, B234E, B234R SE,GB,CA,EU TO CONDENSER	1	Hose	Slang	6
0610	39	46 32 188		356,444) B204L, B234L, B234E, B234R US,PA,IL,TR,ME,LA,AU TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
0660	39	47 55 666		445) B204L, B234L, B234E, B234R TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
0710	39	43 19 075		B308 TO CONDENSER	1	Hose	Slang	6
0740	41	43 82 818		355) B204, B234 TO EVAPORATOR	1	Hose	Slang	6
0760	41	43 82 818		356,450) B204, B234 SE,GB,CA,EU TO EVAPORATOR	1	Hose	Slang	6
0800	41	46 32 196		356,444) B204I, B234I,B204S, B204E,US,PA,IL,TR,ME,LA, AU, TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
0850	41	47 55 658		445) B204I, B234I,B204S, B204E TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
0900	41	46 32 188		356,444) B204L, B234L, B234E, B234R US,PA,IL,TR,ME,LA,AU TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
0950	41	47 55 666		445) B204L, B234L, B234E, B234R TO CONDENSER AND EVAPORATOR	1	Hose	Slang	6
1000	41	43 83 212		B308 TO EVAPORATOR	1	Hose	Slang	6
1030	42	43 18 705			1	.Plug	.Plugg	5
1050		47 58 090			1	Valve	Ventil	6
1070	44			See page 8C-015, 5-J16		O-ring	O-ring	
1080	47	43 83 584			1	Reservoir	Behållare	4
1090	48	43 83 170			1	Pressure monitor	Tryckvakt	4
1100	49	40 73 979			1	.O-ring	.O-ring	2

355. Ch. -R1031921
356. Ch. R1031922-
444. Ch. -T1019839
445. Ch. T1019840-
450. Ch. -T1019400


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system 5-J06

5-J24

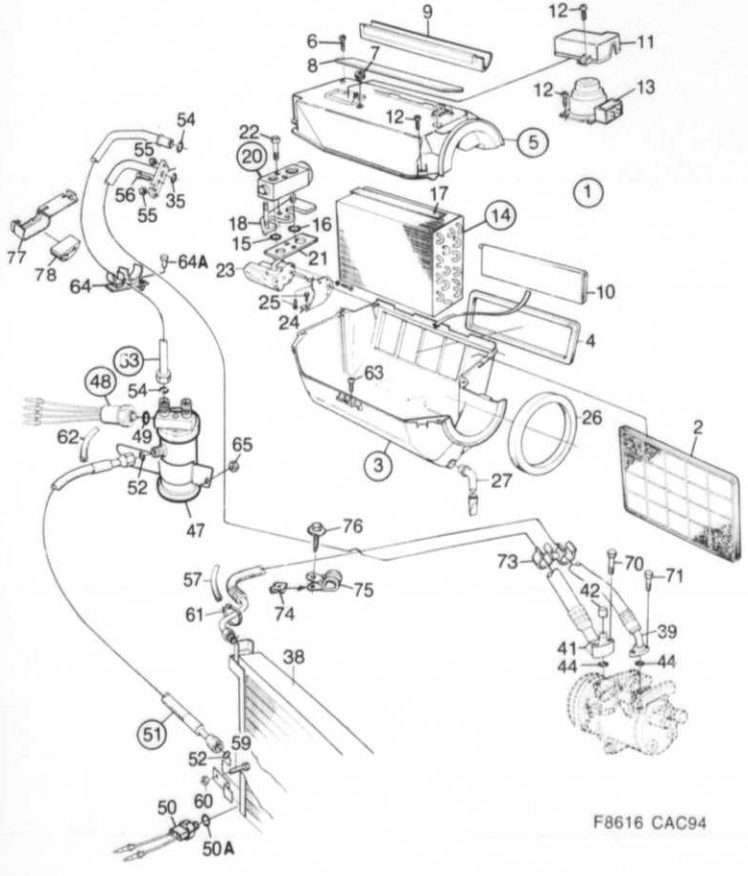

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1110	50	43 83 188		US, PA, ME, LA, AU, IL, TR	1	Pressure monitor	Tryckvakt	4
1120								
1130	50A	40 73 979			1	.O-ring	.O-ring	2
1140	51	*43 19 588*		328) NLS – USE 4383238	1	Hose	Slang	6
1150	51	43 83 238		329)	1	Hose	Slang	6
1160	52	43 18 028			2	.O-ring	.O-ring	2
1170	53	43 82 800			1	Tube	Rör	5
1180	54	43 18 028			2	.O-ring	.O-ring	2
1190	55	79 77 929		343)	2	Nut	Mutter	5
1200	56	79 78 117			1	Screw	Skruv	5
1210	57	96 31 367		474)	1	Protection	Skydd	5
1220	57	• 48 67 032		475)	1	Edge protection moulding	Kantskyddslist	5
1230	59	79 82 481			2	Screw	Skruv	5
1240	60	79 74 298			2	Nut	Mutter	5
1250	61	79 71 880			1	Tensioning band	Spännband	4
1260	62	85 64 973			1	Protecting moulding	Skyddslist	6
1270	63	79 73 001			2	Screw	Skruv	5
1280	64	43 82 768			1	Pipe bracket	Rörhållare	6
1290	64A	95 65 417			1	Rivet	Nit	3
1300	65	79 77 929			2	Nut	Mutter	5
1310	70	79 78 174		444)	1	Screw	Skruv	5
1320	70	79 82 549		445)	1	Screw	Skruv	5
1330	71	79 78 141			2	Hexagon screw	Sexkantsskruv	5
1340	73	96 27 266			1	Clamp	Klammer	5
1350	74	79 72 573		B308	1	Clip nut	Clipsmutter	5
1360	75	73 98 407		B308	1	Clamp	Klammer	5
1370	76	79 22 354		B308	1	Screw	Skruv	5
1380	77	96 25 633			1	Bracket	Hållare	6
1390	78	40 62 063			1	Seal	Tätning	5
1400		47 58 108			1	Plug	Plugg	6
1410		47 58 090		445)	1	Valve	Ventil	6

328. Ch. -R1016548
329. Ch. R1016549-
343. Ch. -R1019363
444. Ch. -T1019839
445. Ch. T1019840-
474. Ch. -V1021713
475. Ch. V1021714-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8C GROUP INDEX

Heating and ventilation system	5-J06

8D

Tool, Labels
Verktyg, Etiketter
Herramient, Etiquetas

5-K02

0041
0020
0040
0060
0080
0100
0120
0125
0130
0140
0150

CONTENTS.

Tool kit	8D : 5	5-K06
Labels		
Labels, part 1	8D : 7	5-K08
Labels, part 2	8D : 11	5-K12
Labels, part 3	8D : 15	5-K16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K03

INNEHÅLLSFÖRTECKNING.

Verktygssats	8D : 5	5-K06
Etiketter		
Etiketter, del 1	8D : 7	5-K08
Etiketter, del 2	8D : 11	5-K12
Etiketter, del 3	8D : 15	5-K16

SUMARIO.

Bolsa de herramientas	8D : 5	5-K06
Etiquetas		
Etiquetas, 1a parte	8D : 7	5-K08
Etiquetas, 2a parte	8D : 11	5-K12
Etiquetas, 3a parte	8D : 15	5-K16


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K06 *Tool kit* *Verktygsats*

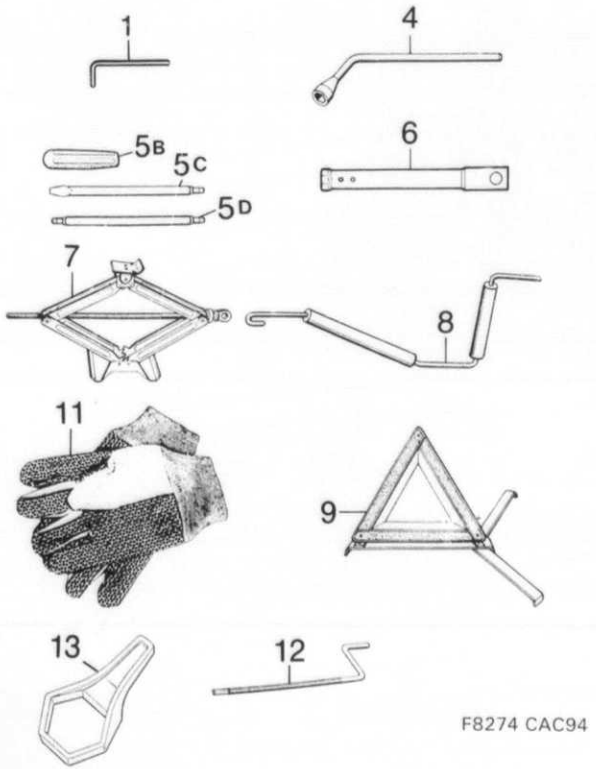

0100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	89 46 097			1	Key	Nyckel	5
0030						front seat	framstol	
0100	4	73 48 287		WHEEL NUT	1	Socket wrench	Hylsnyckel	4
0150	5B	41 98 883		-1996	1	Handle	Skaft	5
0156	5B	48 80 217		1997-	1	Handle	Skaft	5
0157	5C	41 98 891		TORX 25	1	Screw driver bit	Mejselspets	5
0160	5D	45 10 731		TORX 10/30	1	Screw driver bit	Mejselspets	5
0180	6	41 93 157			1	Spark plug spanner	Tändstiftnyckel	4
0200	7	89 61 740			1	Jack	Domkraft	4
0220	8	*89 64 991*		NLS - USE 8935959	1	Crank	Vev	4
0230	9	42 66 003		-1996	1	Warning triangle	Varningstriangel	6
0246	9	• 50 00 526		1997-	1	Warning triangle	Varningstriangel	
0260	11			45/3012952	1	Work gloves	Skyddshandskar	
0270	12	95 48 363			1	Crank	Vev	6
0280						front seat	framstol	
0290	13	48 37 837		1996-, 40/400106787	1	Mounting tool	Monteringsverktyg	


MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K08 Labels Part 1 — Etiketter Del 1

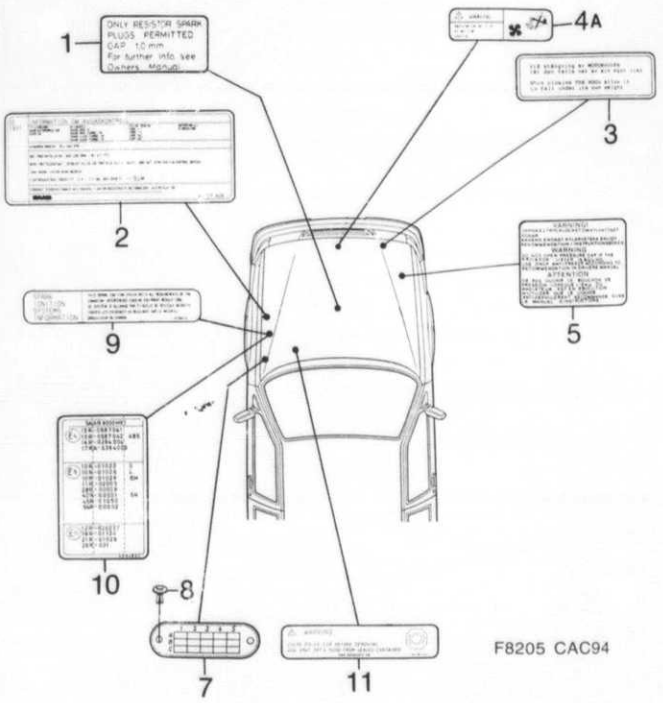

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	74 87 937		SPARK PLUGS, DI	1	Label	Etikett	4
0020								
0030	2	42 28 326		451) 1994,B204 SE,FI,DK	1	Label	Etikett	4
0040	2	44 40 699		451) 1995,B204 SE,FI,DK	1	Label	Etikett	4
0050	2	43 93 096		451) 1994,B234I SE,FI,DK	1	Label	Etikett	4
0060	2	44 40 723		451) 1995,B234I SE,FI,DK	1	Label	Etikett	4
0070	2	44 40 749		451) 1995,B308I SE,FI,DK	1	Label	Etikett	4
0080	2	43 93 104		451) 1994, B234 TURBO, SE, FI, DK	1	Label	Etikett	4
0090								
0100	2	43 93 070		451) 1994,B234 TURBO,TCS SE, FI, DK	1	Label	Etikett	4
0110								
0120	2	44 40 707		451) 1995, B234 TURBO, SE, FI, DK	1	Label	Etikett	4
0130								
0140	2	44 40 731		451) 1995,B234 TURBO,TCS SE, FI, DK	1	Label	Etikett	4
0150								
0160								
0170	2	43 93 138		451) 1994, CA TURBO	1	Label	Etikett	4
0180	2	44 45 912		451) 1995, CA TURBO	1	Label	Etikett	4
0190	2	45 26 554		451) 1996, CA TURBO	1	Label	Etikett	4
0200	2	45 28 915		451) 1997, CA TURBO	1	Label	Etikett	4
0205	2	• 49 61 173		451) 1997-, CA TURBO	1	Label	Etikett	4
0210	2	43 93 120		451) 1994, CA B234I	1	Label	Etikett	4
0220	2	44 40 780		451) 1995, CA B234I	1	Label	Etikett	4
0230	2	45 26 661		451) 1995, CA B308I	1	Label	Etikett	4
0240	2	45 26 562		451) 1996, CA B308I	1	Label	Etikett	4
0250	2	45 28 923		451) 1997, CA B308I	1	Label	Etikett	4
0260								
0270	2	43 93 088		451) 1994 US, TURBO	1	Label	Etikett	4
0280	2	44 41 432		451) 1994 US, TURBO, TCS	1	Label	Etikett	4
0290	2	44 40 715		451) 1995 US, TURBO	1	Label	Etikett	4
0300	2	44 40 764		451) 1995 US, TURBO, TCS	1	Label	Etikett	4
0310	2	45 28 295		451)1996 US, B234L,B234R	1	Label	Etikett	4
0320	2	45 28 303		451) 1996, US, B234E	1	Label	Etikett	4
0330	2	48 78 161		451)1997 US, B234L,B234R	1	Label	Etikett	4
0340	2	48 78 153		451) 1997, US, B234E	1	Label	Etikett	4
0343	2	• 49 61 157		451)1998- US,B234L,B234R	1	Label	Etikett	4
0346	2	• 49 61 165		451) 1998-,US, B234E	1	Label	Etikett	4
0350	2	43 93 112		451) 1994, US, B234I	1	Label	Etikett	4
0360	2	44 40 756		451) 1995, US, B234I	1	Label	Etikett	4
0370	2	44 40 772		451) 1995, US, B308I	1	Label	Etikett	4
0380	2	45 28 311		451) 1996, US, B308I	1	Label	Etikett	4
0390	2	48 78 146		451) 1997, US, B308I	1	Label	Etikett	4
0400								
0410	2	44 44 105		451) 1994, AU TURBO	1	Label	Etikett	4
0420	2	44 44 113		451) 1994,AU TURBO,B234R	1	Label	Etikett	4
0430	2	45 26 000		451) 1995, AU TURBO	1	Label	Etikett	4
0440	2	45 26 018		451) 1995,AU TURBO, TCS	1	Label	Etikett	4
0450	2	45 26 570		451)1996,AU,B234L,B234E	1	Label	Etikett	4
0460	2	45 26 588		451) 1996, AU, B234R	1	Label	Etikett	4
0470	2	45 28 105		451) 1996, AU, B204E	1	Label	Etikett	4
0480	2	45 28 964		451)1997,AU,B234L,B234E	1	Label	Etikett	4
0485	2	• 49 61 918		451)1998-,AU,B234L,B234E	1	Label	Etikett	4
0490	2	45 28 972		451) 1997, AU, B234R	1	Label	Etikett	4
0500	2	45 28 956		451) 1997, AU, B204E	1	Label	Etikett	4
0510	2	44 44 097		451) 1994, AU B234I	1	Label	Etikett	4
0520	2	45 25 994		451) 1995, AU B234I	1	Label	Etikett	4
0530	2	45 26 026		451) 1995, AU B308I	1	Label	Etikett	4
0540	2	45 26 596		451) 1996, AU B308I	1	Label	Etikett	4
0550	2	45 28 980		451) 1997, AU B308I	1	Label	Etikett	4
0560								
0570	2	45 27 933		451) 1995-1997, LA	1	Label	Etikett	4
0580								

451. Exhaust emission control device Avgasrening

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K10 Labels Part 1

Etiketter Del 1

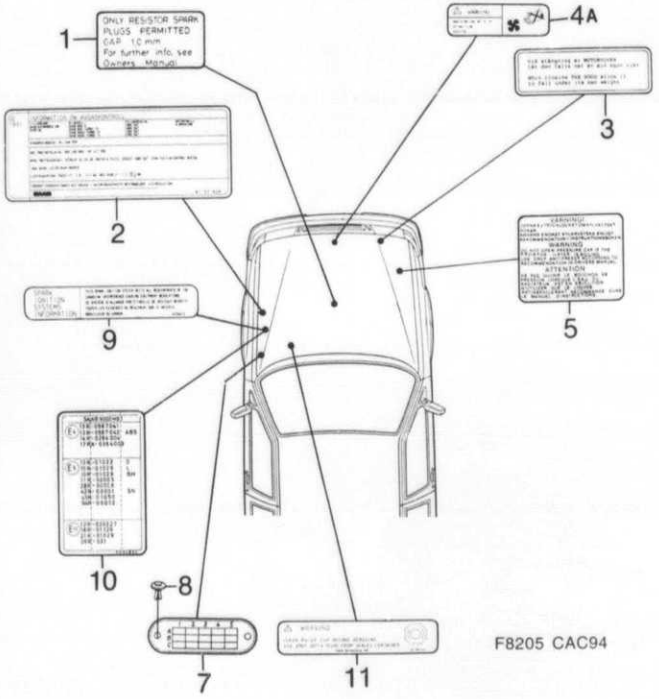

F8205 CAC94

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0590	3	92 70 547		ENGINE HOOD	1	Label	Etikett	3
0600								
0610	4A	43 57 778		WARNING RADIATOR FAN	1	Label	Etikett	4
0620								
0630	5	93 41 439		COOLING WATER, FI	1	Label	Etikett	5
0640	5	40 17 596		COOLING WATER	1	Label	Etikett	5
0650								
0660	7	92 83 722		CAMPAIGN	1	Sign	Skylt	5
0670	8	79 73 258			2	Rivet	Nit	5
0680								
0690	9	47 28 473		463), CA, SPARK IGNITION SYSTEM INFORMATION	1	Label	Etikett	4
0700								
0710								
0720	10	43 81 901		1994, ECE-APPROVALS	1	Label	Etikett	6
0730	10	44 46 944		1995, ECE-APPROVALS	1	Label	Etikett	6
0740	10	45 26 604		1996, ECE-APPROVALS	1	Label	Etikett	6
0745	10	48 79 060		1997, ECE-APPROVALS	1	Label	Etikett	
0747	10	• 49 61 777		1998-, ECE-APPROVALS	1	Label	Etikett	
0750								
0760	11	44 26 573		CLEAN FILLER CAP	1	Label	Etikett	5

463. Ch. T1014635-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K12 Labels Part 2

Etiketter Del 2

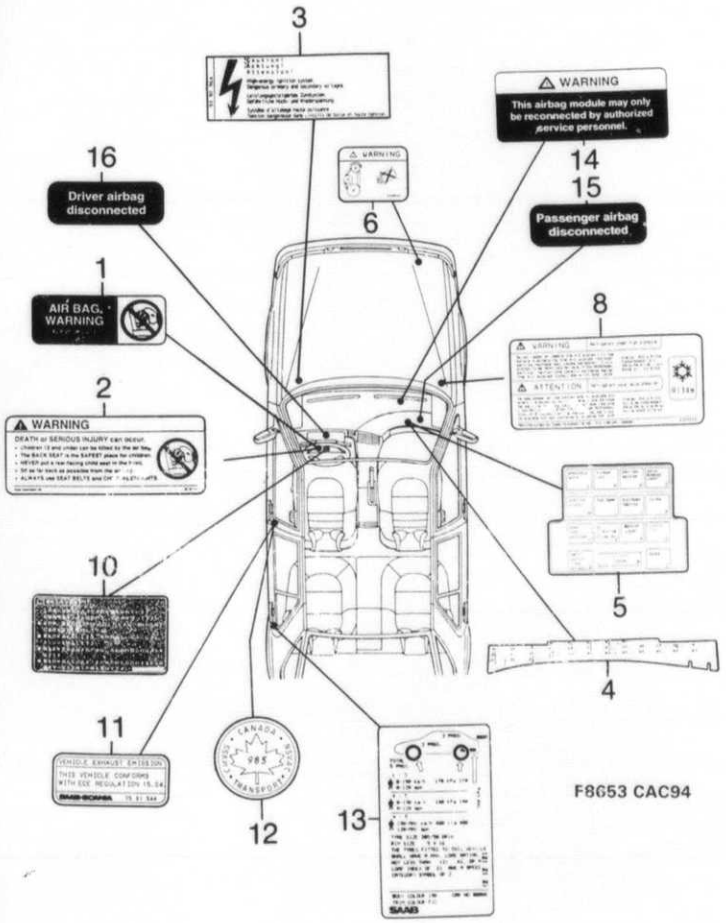

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	46 28 939		1995-,472), AIRBAG SEE OTHER SIDE, US, CA	1	Label	Etikett	
0020								
0023	1	• 50 10 103		473),-1997 AIRBAG FLIP VISOR OVER, US, CA	1	Label	Etikett	
0024								
0025	1	• 50 10 103		1998-, AIRBAG FLIP VISOR OVER, US	1	Label	Etikett	
0026								
0027	1	• 50 12 232		1998-, AIRBAG FLIP VISOR OVER, CA	1	Label	Etikett	
0028								
0030								
0040	2	• 50 10 202		1995-,472), WARNING AIRBAG, US	1	Label	Etikett	
0050								
0051	2	• 50 10 210		1995-,472), WARNING AIRBAG, CA	1	Label	Etikett	
0052								
0055	2	• 50 10 111		473),-1997, WARNING AIRBAG, US, CA	1	Label	Etikett	
0056								
0057	2	• 50 10 111		1998-, WARNING AIRBAG US	1	Label	Etikett	
0058								
0059	2	• 50 12 240		1998-, WARNING AIRBAG CA	1	Label	Etikett	
0061								
0065								
0070	3	93 90 964		IGNITION SYSTEM	1	Label	Etikett	4
0080								
0090	4	44 32 688		1994, FUSE BOX, LHD AIRBAG 1	1	Label	Etikett	5
0100								
0110	4	45 37 742		1995, FUSE BOX, LHD AIRBAG 1	1	Label	Etikett	5
0120								
0130	4	46 69 487		1996-,470) FUSE BOX, LHD AIRBAG 1	1	Label	Etikett	5
0140								
0150	4	49 41 100		471), FUSE BOX, LHD AIRBAG 1	1	Label	Etikett	5
0160								
0170	4	44 33 090		1994, FUSE BOX, RHD	1	Label	Etikett	5
0180	4	45 37 759		1995, FUSE BOX, RHD AIRBAG 1	1	Label	Etikett	5
0190					1			
0200	4	46 69 495		1996-,470) FUSE BOX, RHD AIRBAG 1	1	Label	Etikett	5
0210					1			
0220	4	49 41 118		471), FUSE BOX, RHD AIRBAG 1	1	Label	Etikett	5
0230					1			
0240								
0250	5	44 32 704		1994, RELAY, AIRBAG 1	1	Label	Etikett	5
0260	5	45 37 791		1995, RELAY, AIRBAG 1	1	Label	Etikett	5
0270	5	46 69 503		1996, RELAY, AIRBAG 1	1	Label	Etikett	5
0280	5	47 35 924		1997-, RELAY, AIRBAG 1	1	Label	Etikett	5
0290								
0300	6	43 59 444		WARNING BELT	1	Label	Etikett	4
0310								
0320	8	45 42 825		464), FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0330								
0340	8	45 42 825		465), 6-CYL FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0350								
0360	8	47 58 694		465,466), 4-CYL, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0370								

199. Ch. M1017620-, M2011731-
464. Ch. -T1014634
465. Ch. T1014635-
466. Ch. -T1019400
470. Ch. -V1008700
471. Ch. V1008701-
472. Ch. -V1018750
473. Ch. V1018751-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K14 Labels Part 2

Etiketter Del 2

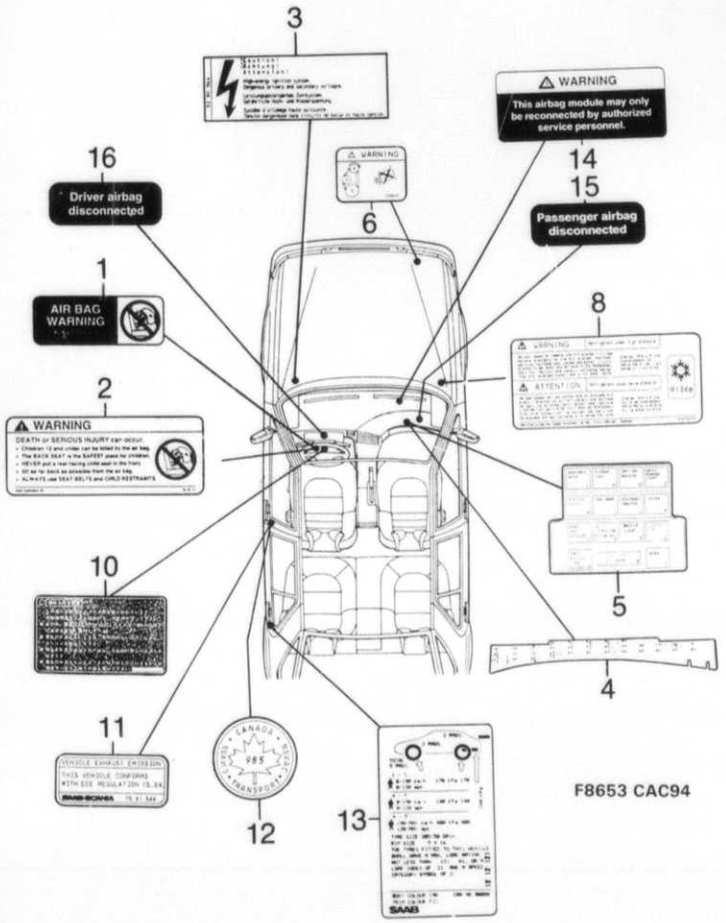

0200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0380	8	46 34 929		412,460,466), 4-CYL, FREON,RECOMMENDED CHARGE	1	Label	Etikett	5
0390								
0400	8	46 34 929		467), 4-CYL, FREON, RECOMMENDED CHARGE	1	Label	Etikett	5
0410								
0420								
0430	10	41 56 618		-1996, JP, WARNING OVER-HEATED CATALYTIC CONVERT	1	Label	Etikett	5
0440								
0450	10	47 27 434		1997, JP, WARNING OVER-HEATED CATALYTIC CONVERT	1	Label	Etikett	5
0460								
0470								
0480	11	75 31 544		ECE REGULATION, PA	1	Label	Etikett	4
0490								
0500	12	44 81 339		CA	1	Label	Etikett	6
0510								
0520	13	45 21 258		453), -1994	1	Label	Etikett	
0530	13	41 90 831		453), 1995-	1	Label	Etikett	
0540								
0550	14	50 10 087		WARNING, AIRBAG MODULE	1	Label	Etikett	
0560								
0570	15	50 10 053		PASSENGER AIRBAG DISCONN.	1	Label	Etikett	
0580	15	50 10 079		PASS.AIRBAG URKOPPLAD	1	Label	Etikett	
0590								
0600	16	• 50 10 061		DRIVER AIRBAG DISCONNECT	1	Label	Etikett	

412. For hot and tropical market; ME, LA, AU, PA, US, IL, TR — För varm och tropisk marknad; ME, LA, AU, PA, US, IL, TR
453. State body and trim colour code, label number and chassis number. — Uppge färg- och klädselkod, etikettnummer och chassinummer.
460. Ch. S1026632-
466. Ch. -T1019400
467. Ch. T1019401-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K16 Labels Part 3

Etiketter Del 3

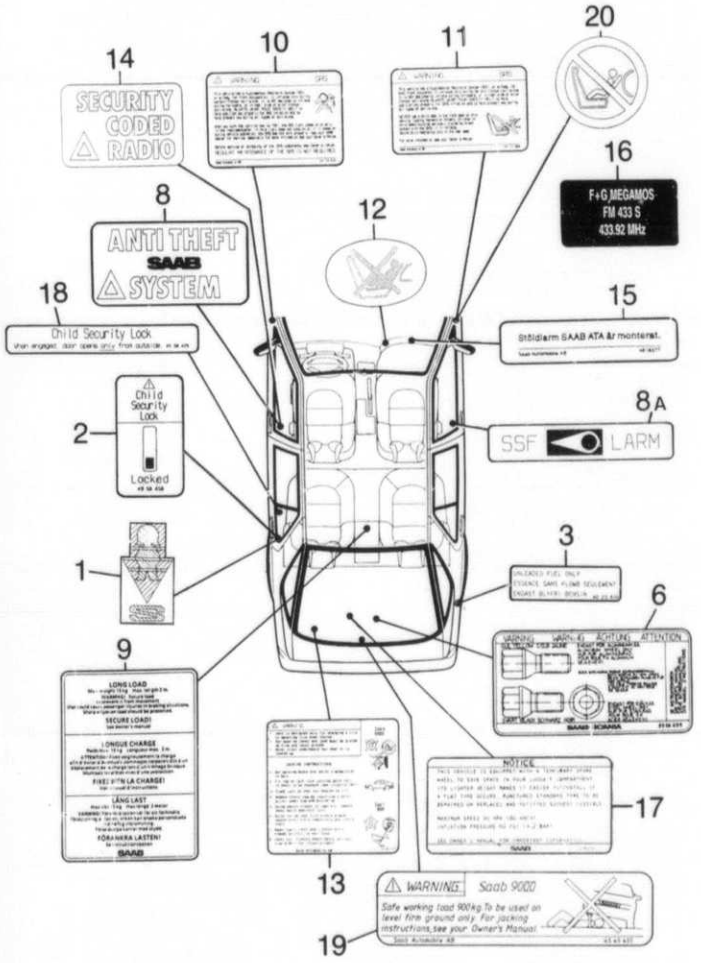

F8654 CAC94

0250	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	69 56 684		461), CHILD LOCK	2	Label	Etikett	5
0020								
0030	2	45 58 458		462), CHILD LOCK	2	Label	Etikett	5
0040								
0050	3	40 22 141		452) DK	1	Label	Etikett	4
0060	3	40 23 636		452), -1996, SE, FI, EU, GB, FE, US, CA, JP	1	Label	Etikett	4
0070								
0080	3	47 26 717		452), 1997-, SE, FI, EU, GB, FE, US, CA, JP	1	Label	Etikett	4
0090								
0100	3	40 23 644		452) -1996, AU	1	Label	Etikett	4
0110	3	47 26 725		452) 1997-, AU	1	Label	Etikett	4
0120	3	43 92 312		452) -1996, PREMIUM UNLEADED FUEL ONLY RON 98	1	Label	Etikett	4
0130								
0140	3	47 27 103		452) 1997-, PREMIUM UNFUEL ONLY RON 98	1	Label	Etikett	4
0150								
0160	3	44 40 269		452) -1996, PREMIUM UNLEADED FUEL ONLY RON 95	1	Label	Etikett	4
0170								
0180	3	47 27 095		452) 1997-, PREMIUM UNLEADED FUEL ONLY RON 95	1	Label	Etikett	4
0190								
0200	3	44 41 671		452) -1996, PREMIUM UNLEADED FUEL ONLY MIN 92	1	Label	Etikett	4
0210								
0220	3	47 27 814		452) 1997-, PREMIUM UNLEADED FUEL ONLY MIN 92	1	Label	Etikett	4
0230								
0240								
0250	6	89 66 699		WHEEL BOLT	1	Label	Etikett	5
0260								
0270	8	95 68 049		ANTI-THEFT SYSTEM, US	2	Label	Etikett	5
0280	8A	46 18 369		1995-, ANTI-THEFT SYSTEM SE	3	Label	Etikett	5
0290								
0300								
0310	9	95 46 961		1994, LONG LOAD	1	Label	Etikett	5
0320	9	46 30 752		1995-, LONG LOAD	1	Label	Etikett	5
0330								
0340	10	46 06 703		-1997,DRIVER SIDE AIRBAG (4475034)	1	Label	Etikett	
0350								
0360								
0370	11	46 06 695		-1997, PASSENGER SIDE AIRBAG (4474888)	1	Label	Etikett	
0380								
0390								
0400	12	46 06 711		-1997, PASSENGER SIDE AIRBAG (4530309)	1	Label	Etikett	
0410								
0420								
0428	13	44 82 139		-1997, JACKING INSTRUCTIONS, US, CA, AU	1	Label	Etikett	
0429								
0430	13	• 46 89 949		1998-, JACKING INSTRUCTIONS, US, CA, AU	1	Label	Etikett	
0440								
0450								
0460	14	95 67 579		SECURITY CODED RADIO	2	Label	Etikett	5
0470								
0480	15	46 18 377		1995-, STÖLDLARM, SE	1	Label	Etikett	5
0490								
0500	16	*46 18 864*		1995-,454,455,458), SE NLS – USE 4619417	X	Label	Etikett	
0500								
0510	16	*46 19 052*		1995-,454,455,458), EU, GB, CY NLS – USE 4619417	X	Label	Etikett	
0515					X			
0515								

199. Ch. M1017620-, M2011731-
452. Unleaded fuel only Endast blyfri bensin
454. For transmitter anti theft system För sändare stöldlarm
455. See SI 111-1550 Se SI 111-1550
458. Ch. -S1022353
461. Ch. -S1023519
462. Ch. S1023520-

MASTER INDEX


0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

5-K18 Labels Part 3

Etiketter Del 3

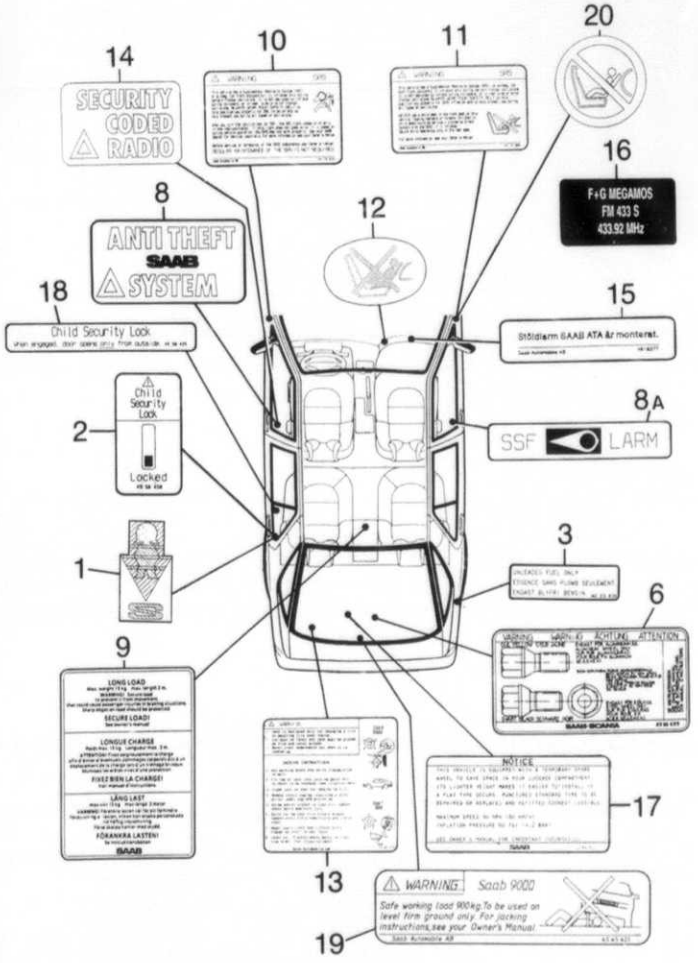

F8654 CAC94

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
16	46 19 417		454,455,459)	X	Label	Etikett	
16	*46 19 060*		1995-,454,455,456),. .,CA NLS – USE 4619144	X	Label	Etikett	
16	46 19 144		454,455,457), US, CA	X	Label	Etikett	
17	41 93 769		TEMPORARY SPARE, AU	1	Label	Etikett	
18	45 58 425		462),CHILD SECURITY LOCK US, CA	2	Label	Etikett	5
19	45 45 455		WARNING JACK	1	Label	Etikett	
20	• 50 10 129		1998-, PASSENGER SIDE AIRBAG, Ø 30MM	1	Label	Etikett	
20	• 50 11 465		1998-, PASSENGER SIDE AIRBAG, Ø 50MM	1	Label	Etikett	

199. Ch. M1017620-, M2011731-
454. For transmitter anti theft system För sändare stöldlarm
455. See SI 111-1550 Se SI 111-1550
456. Ch. -S1011041
457. Ch. S1011042-
459. Ch. S1022354-
462. Ch. S1023520-

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

8D GROUP INDEX

Tool kit	5-K06
Labels	5-K08

10

Numerical register
Nummerregister
Indice numérico

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 00 360	06	007	4-A08
40 00 386	02	155	1-I12
40 00 410	05	019	3-K20
40 00 568	04	007	3-G08
40 00 642	04	039	3-H16
40 00 667	04	039	3-H16
40 00 667	04	071	3-I24
40 01 111	06	005	4-A06
40 01 400	06	011	4-A12
40 01 459	05	015	3-K16
40 01 459	05	017	3-K18
40 01 467	05	015	3-K16
40 01 467	05	017	3-K18
40 01 475	05	015	3-K16
40 01 475	05	017	3-K18
40 01 483	05	015	3-K16
40 01 483	05	017	3-K18
40 01 640	07	007	4-B08
40 01 681	06	017	4-A18
40 01 715	06	017	4-A18
40 01 814	05	027	3-L04
40 01 970	05	015	3-K16
40 02 051	05	027	3-L04
40 02 093	05	009	3-K10
40 02 127	05	015	3-K16
40 02 127	05	017	3-K18
40 02 135	05	015	3-K16
40 02 135	05	017	3-K18
40 02 143	05	005	3-K06
40 02 234	06	011	4-A12
40 02 259	06	011	4-A12
40 02 267	05	009	3-K10
40 02 267	05	027	3-L04
40 02 341	05	015	3-K16
40 02 341	05	017	3-K18
40 02 358	07	011	4-B12
40 02 390	07	011	4-B12
40 02 507	07	011	4-B12
40 02 648	06	007	4-A08
40 02 689	05	005	3-K06
40 02 747	04	071	3-I24
40 02 861	05	009	3-K10
40 02 861	05	027	3-L04
40 02 861	05	029	3-L06
40 02 895	05	009	3-K10
40 02 895	05	027	3-L04
40 02 994	06	011	4-A12
40 03 026	05	019	3-K20
40 03 034	05	019	3-K20
40 03 042	05	015	3-K16
40 03 042	05	017	3-K18
40 03 059	05	015	3-K16
40 03 059	05	017	3-K18
40 03 083	05	027	3-L04
40 03 117	05	009	3-K10
40 03 117	05	027	3-L04
40 03 117	05	029	3-L06
40 03 158	05	009	3-K10
40 03 158	05	027	3-L04
40 03 166	05	027	3-L04
40 03 372	06	009	4-A10
40 03 380	06	009	4-A10
40 04 727	07	011	4-B12
40 04 735	07	011	4-B12
40 04 842	06	013	4-A14
40 05 062	08A	017	4-C18
40 05 195	08A	013	4-C14
40 05 229	08A	123	4-H04
40 05 237	08A	093	4-F22
40 05 237	08A	103	4-G08
40 05 237	08A	123	4-H04
40 05 336	08A	013	4-C14
40 05 344	08A	013	4-C14
40 05 351	08A	013	4-C14
40 05 369	08A	013	4-C14
40 05 666	08A	015	4-C16
40 05 948	08A	023	4-C24
40 06 060	08A	053	4-E06
40 06 078	08A	053	4-E06
40 06 128	08A	093	4-F22
40 06 128	08A	123	4-H04
40 06 136	08A	093	4-F22
40 06 136	08A	123	4-H04
40 06 276	08A	007	4-C08
40 06 292	08A	015	4-C16
40 06 557	08A	049	4-E02
40 07 209	08A	021	4-C22
40 07 217	08A	021	4-C22
40 07 225	08A	007	4-C08
40 07 233	08A	023	4-C24
40 07 241	08A	023	4-C24
40 07 308	08A	021	4-C22
40 07 316	08A	021	4-C22
40 08 249	08A	073	4-F02
40 08 256	08A	073	4-F02
40 08 454	08A	049	4-E02
40 08 504	08A	061	4-E14
40 08 504	08A	067	4-E20
40 08 504	08A	071	4-E24
40 08 504	08A	079	4-F08
40 08 504	08A	093	4-F22
40 08 538	08A	017	4-C18
40 08 579	02	077	1-F06
40 08 884	08A	073	4-F02
40 08 942	08A	093	4-F22
40 08 942	08A	119	4-G24
40 08 959	08A	093	4-F22
40 08 959	08A	119	4-G24
40 09 502	08A	073	4-F02
40 09 502	08A	075	4-F04
40 09 502	08A	119	4-G24
40 09 528	08A	007	4-C08
40 09 569	08A	049	4-E02
40 09 577	08A	049	4-E02
40 09 700	08A	019	4-C20
40 09 965	08A	011	4-C12
40 09 999	08A	015	4-C16
40 10 260	08A	049	4-E02
40 10 336	08A	091	4-F20
40 10 393	08A	095	4-F24
40 10 401	08A	095	4-F24
40 10 419	08A	095	4-F24
40 10 427	08A	095	4-F24
40 10 617	08A	049	4-E02
40 10 617	08A	053	4-E06
40 10 625	08A	103	4-G08
40 10 724	08A	097	4-G02
40 10 732	08A	097	4-G02
40 10 963	08A	049	4-E02
40 10 963	08A	053	4-E06
40 13 165	03A	049	2-C02
40 13 165	03A	051	2-C04
40 13 256	08A	103	4-G08
40 13 603	08A	087	4-F16
40 13 603	08A	115	4-G20
40 13 777	08A	091	4-F20
40 13 785	08A	091	4-F20
40 14 312	03A	045	2-B22
40 14 312	03A	047	2-B24
40 14 320	03A	045	2-B22
40 14 320	03A	047	2-B24
40 14 429	03A	055	2-C08
40 14 452	03A	055	2-C08
40 14 460	03A	055	2-C08
40 14 478	03A	055	2-C08
40 14 577	08A	095	4-F24
40 15 202	02	099	1-G04
40 15 426	02	063	1-E16
40 15 574	02	155	1-I12
40 15 814	02	113	1-G18
40 15 814	02	117	1-G22
40 15 947	02	057	1-E10
40 16 192	08A	017	4-C18
40 16 820	02	063	1-E16
40 16 861	02	055	1-E08
40 16 881	02	057	1-E10
40 17 596	08D	009	5-K10
40 17 844	02	061	1-E14
40 18 172	02	157	1-I14
40 18 313	02	157	1-I14
40 18 857	02	113	1-G18
40 18 867	02	117	1-G22
40 18 875	02	119	1-G24
40 18 875	02	121	1-H02
40 19 253	02	099	1-G04
40 20 996	02	061	1-E14
40 21 002	02	061	1-E14
40 21 010	02	061	1-E14
40 22 141	08D	015	5-K16
40 22 224	02	163	1-I20
40 22 505	02	113	1-G18
40 22 505	02	117	1-G22
40 22 505	02	119	1-G24
40 22 505	02	121	1-H02
40 22 505	02	123	1-H04
40 22 588	02	113	1-G18
40 22 588	02	119	1-G24
40 22 588	02	123	1-H04
40 22 596	02	113	1-G18
40 22 596	02	117	1-G22
40 22 596	02	119	1-G24
40 22 596	02	123	1-H04
40 22 737	02	157	1-I14
40 23 297	02	107	1-G12
40 23 362	02	061	1-E14
40 23 636	08D	015	5-K16
40 23 644	08D	015	5-K16
40 23 834	02	055	1-E08
40 24 253	02	113	1-G18
40 24 253	02	119	1-G24
40 24 279	02	113	1-G18
40 24 279	02	119	1-G24
40 24 295	02	113	1-G18
40 24 295	02	119	1-G24
40 24 303	02	113	1-G18
40 24 303	02	119	1-G24
40 25 094	04	059	3-I12
40 25 136	04	065	3-I18
40 25 342	04	057	3-I10
40 25 847	04	049	3-I02
40 25 854	04	049	3-I02
40 25 862	04	049	3-I02
40 25 870	04	049	3-I02
40 25 888	04	049	3-I02
40 25 896	04	049	3-I02
40 25 904	04	049	3-I02
40 25 912	04	049	3-I02
40 25 920	04	049	3-I02
40 25 938	04	049	3-I02
40 25 946	04	049	3-I02
40 25 953	04	049	3-I02
40 25 961	04	049	3-I02
40 25 979	04	049	3-I02
40 26 209	04	049	3-I02
40 26 316	04	065	3-I18
40 26 423	04	055	3-I08
40 26 431	04	065	3-I18
40 26 449	04	047	3-H24
40 26 639	04	049	3-I02
40 26 753	04	047	3-H24
40 26 761	04	059	3-I12
40 26 860	04	049	3-I02
40 26 902	04	047	3-H24
40 26 936	04	077	3-J06
40 26 977	04	035	3-H12
40 27 231	04	041	3-H18
40 27 249	04	041	3-H18
40 27 488	02	125	1-H06
40 27 488	02	129	1-H10
40 27 488	02	135	1-H16
40 27 488	02	165	1-I22
40 27 694	06	019	4-A20
40 27 769	04	007	3-G08
40 27 843	04	037	3-H14
40 27 850	04	037	3-H14
40 27 868	04	037	3-H14
40 27 876	04	037	3-H14
40 27 892	04	037	3-H14
40 27 918	04	037	3-H14
40 27 934	04	037	3-H14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 27 942	04	037	3-H14
40 28 064	06	019	4-A20
40 28 080	06	021	4-A22
40 28 197	06	021	4-A22
40 28 205	06	021	4-A22
40 28 221	04	007	3-G08
40 28 569	02	139	1-H20
40 28 593	02	125	1-H06
40 28 619	02	127	1-H08
40 28 619	02	129	1-H10
40 28 635	02	127	1-H08
40 28 635	02	129	1-H10
40 28 650	02	127	1-H08
40 28 650	02	129	1-H10
40 28 767	02	135	1-H16
40 28 858	02	169	1-J02
40 28 866	02	141	1-H22
40 28 866	02	169	1-J02
40 28 874	02	169	1-J02
40 28 882	02	141	1-H22
40 28 882	02	169	1-J02
40 28 890	02	169	1-J02
40 29 195	03A	011	2-A12
40 29 195	03A	013	2 A14
40 29 195	03A	015	2-A16
40 29 195	03A	017	2-A18
40 29 344	02	141	1-H22
40 29 609	06	019	4-A20
40 29 625	02	139	1-H20
40 29 799	06	019	4-A20
40 29 864	06	019	4-A20
40 29 930	06	019	4-A20
40 29 989	06	019	4-A20
40 29 989	06	021	4-A22
40 30 003	08B	005	5-A06
40 30 201	08B	015	5-A16
40 30 219	08B	015	5-A16
40 30 342	08B	189	5-H22
40 31 563	08B	143	5-F24
40 31 563	08B	153	5-G10
40 31 563	08B	159	5-G16
40 31 563	08B	163	5-G20
40 31 563	08B	169	5-H02
40 31 563	08B	175	5-H08
40 31 563	08B	179	5-H12
40 31 696	08B	181	5-H14
40 32 041	08B	007	5-A08
40 32 058	08B	005	5-A06
40 32 066	08B	007	5-A08
40 32 074	08B	007	5-A08
40 32 611	08B	193	5-I02
40 32 629	08B	193	5-I02
40 32 934	08B	149	5-G06
40 33 486	08B	149	5-G06
40 33 791	08B	143	5-F24
40 33 841	08B	143	5-F24
40 33 890	08B	143	5-F24
40 33 940	08B	143	5-F24
40 34 047	08B	145	5-G02
40 34 054	08B	145	5-G02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 34 369	08B	189	5-H22
40 34 799	08B	009	5-A10
40 35 093	08B	005	5-A06
40 35 747	08B	175	5-H08
40 36 133	08B	159	5-G16
40 36 133	08B	169	5-H02
40 36 133	08B	175	5-H08
40 36 133	08B	179	5-H12
40 36 299	08B	151	5-G08
40 37 529	08B	175	5-H08
40 37 537	08B	175	5-H08
40 37 537	08B	179	5-H12
40 37 701	03A	057	2-C10
40 37 735	08A	045	4-D22
40 37 735	08A	047	4-D24
40 41 158	08B	005	5-A06
40 41 166	08B	005	5-A06
40 41 190	08B	005	5-A06
40 41 208	08B	005	5-A06
40 41 257	08B	005	5-A06
40 41 265	08B	005	5-A06
40 41 331	08B	005	5-A06
40 41 356	08B	005	5-A06
40 41 935	08B	023	5-A24
40 41 943	08B	023	5-A24
40 42 974	08B	191	5-H24
40 43 394	08B	139	5-F20
40 43 436	08B	025	5-B02
40 43 444	08B	025	5-B02
40 44 079	08B	189	5-H22
40 45 704	08B	149	5-G06
40 47 411	08B	035	5-B12
40 47 429	08B	035	5-B12
40 47 452	08B	035	5-B12
40 47 452	08B	043	5-B20
40 47 916	08B	035	5-B12
40 47 924	08B	035	5-B12
40 47 932	08B	029	5-B06
40 47 932	08B	035	5-B12
40 47 932	08B	041	5-B18
40 47 932	08B	043	5-B20
40 47 932	08B	047	5-B24
40 47 932	08B	049	5-C02
40 47 932	08B	051	5-C04
40 47 932	08B	053	5-C06
40 47 932	08B	055	5-C08
40 47 932	08B	059	5-C12
40 48 260	08B	155	5-G12
40 48 260	08B	161	5-G18
40 48 260	08B	167	5-G24
40 48 260	08B	173	5-H06
40 48 260	08B	177	5-H10
40 48 278	08B	155	5-G12
40 48 278	08B	161	5-G18
40 48 278	08B	167	5-G24
40 48 278	08B	173	5-H06
40 48 278	08B	177	5-H10
40 48 948	08B	159	5-G16
40 48 948	08B	169	5-H02
40 48 948	08B	175	5-H08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 48 948	08B	179	5-H12
40 50 530	08B	035	5-B12
40 50 530	08B	043	5-B20
40 51 389	08B	035	5-B12
40 51 389	08B	043	5-B20
40 51 504	08B	025	5-B02
40 53 492	08B	035	5-B12
40 53 492	08B	043	5-B20
40 53 492	08B	049	5-C02
40 53 492	08B	055	5-C08
40 53 492	08B	063	5-C16
40 53 773	08B	025	5-B02
40 54 078	08B	153	5-G10
40 54 086	08B	153	5-G10
40 54 912	08A	031	4-D08
40 54 920	08A	033	4-D10
40 55 117	08B	135	5-F16
40 55 117	08B	145	5-G02
40 55 133	08B	157	5-G14
40 55 133	08B	163	5-G20
40 55 133	08B	169	5-H02
40 55 133	08B	175	5-H08
40 55 133	08B	179	5-H12
40 59 671	08B	147	5-G04
40 60 406	03A	057	2-C10
40 60 489	03A	063	2-C16
40 60 497	03A	063	2-C16
40 60 505	03A	063	2-C16
40 60 513	03A	063	2-C16
40 60 844	03A	161	2-G18
40 60 869	03B	015	3-A16
40 60 869	03B	037	3-B14
40 60 869	03B	059	3-C12
40 60 869	03B	081	3-D10
40 60 893	03B	023	3-A24
40 60 893	03B	045	3-B22
40 60 893	03B	067	3-C20
40 60 893	03B	091	3-D20
40 61 255	03A	079	2-D08
40 61 362	03A	083	2-D12
40 61 461	03B	025	3-B02
40 61 479	03B	019	3-A20
40 61 479	03B	041	3-B18
40 61 503	03B	017	3-A18
40 61 503	03B	037	3-B14
40 61 503	03B	061	3-C14
40 61 503	03B	083	3-D12
40 61 586	03B	009	3-A10
40 61 586	03B	011	3-A12
40 61 586	03B	015	3-A16
40 61 586	03B	017	3-A18
40 61 586	03B	019	3-A20
40 61 586	03B	023	3-A24
40 61 586	03B	025	3-B02
40 61 586	03B	031	3-B08
40 61 586	03B	033	3-B10
40 61 586	03B	035	3-B12
40 61 586	03B	037	3-B14
40 61 586	03B	039	3-B16
40 61 586	03B	041	3-B18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 61 586	03B	043	3-B20
40 61 586	03B	045	3-B22
40 61 586	03B	047	3-B24
40 61 586	03B	053	3-C06
40 61 586	03B	057	3-C10
40 61 586	03B	059	3-C12
40 61 586	03B	061	3-C14
40 61 586	03B	063	3-C16
40 61 586	03B	065	3-C18
40 61 586	03B	067	3-C20
40 61 586	03B	069	3-C22
40 61 586	03B	075	3-D04
40 61 586	03B	079	3-D08
40 61 586	03B	081	3-D10
40 61 586	03B	083	3-D12
40 61 586	03B	085	3-D14
40 61 586	03B	087	3-D16
40 61 586	03B	091	3-D20
40 61 586	03B	093	3-D22
40 61 586	03B	101	3-E06
40 61 586	03B	111	3-E16
40 61 586	03B	121	3-F02
40 61 586	03B	131	3-F12
40 61 685	03A	161	2-G18
40 61 883	03A	079	2-D08
40 61 891	03A	009	2-A10
40 61 917	03A	081	2-D10
40 61 958	03B	023	3-A24
40 61 958	03B	045	3-B22
40 61 958	03B	067	3-C20
40 61 958	03B	091	3-D20
40 61 966	03B	023	3-A24
40 61 966	03B	045	3-B22
40 61 966	03B	067	3-C20
40 61 966	03B	091	3-D20
40 61 974	03B	023	3-A24
40 61 974	03B	045	3-B22
40 61 974	03B	067	3-C20
40 61 974	03B	091	3-D20
40 62 063	08C	023	5-J24
40 62 295	03A	161	2-G18
40 62 311	03A	161	2-G18
40 62 329	02	115	1-G20
40 62 329	02	119	1-G24
40 62 329	02	123	1-H04
40 62 329	03A	157	2-G14
40 62 329	03A	161	2-G18
40 62 337	03A	161	2-G18
40 62 972	04	069	3-I22
40 62 980	04	069	3-I22
40 63 087	02	089	1-F18
40 63 335	03A	093	2-D22
40 63 343	03A	093	2-D22
40 63 384	03A	083	2-D12
40 63 475	03A	011	2-A12
40 63 475	03A	017	2-A18
40 63 574	03A	063	2-C16
40 63 681	03A	155	2-G12
40 63 756	03A	161	2-G18
40 63 814	03A	063	2-C16

6-A04 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 63 855	08B	135	5-F16
40 63 855	08B	147	5-G04
40 63 871	08B	135	5-F16
40 63 871	08B	147	5-G04
40 63 897	03A	161	2-G18
40 63 970	03B	015	3-A16
40 63 970	03B	025	3-B02
40 63 970	03B	037	3-B14
40 63 970	03B	045	3-B22
40 63 970	03B	059	3-C12
40 63 970	03B	069	3-C22
40 63 970	03B	081	3-D10
40 63 970	03B	093	3-D22
40 63 970	03B	103	3-E08
40 63 970	03B	113	3-E18
40 63 970	03B	123	3-F04
40 63 970	03B	133	3-F14
40 66 916	03A	115	2-E20
40 66 924	03A	115	2-E20
40 66 932	03A	101	2-E06
40 66 940	03A	101	2-E06
40 66 981	03A	107	2-E12
40 66 981	03A	117	2-E22
40 66 981	03A	127	2-F08
40 66 981	03A	139	2-F20
40 66 981	03A	147	2-G04
40 67 013	03A	115	2-E20
40 67 468	03A	081	2-D10
40 67 617	03B	023	3-A24
40 67 617	03B	045	3-B22
40 67 617	03B	067	3-C20
40 67 617	03B	091	3-D20
40 67 716	03A	161	2-G18
40 68 078	03A	193	2-I02
40 68 862	03A	077	2-D06
40 68 870	03A	077	2-D06
40 69 258	03A	161	2-G18
40 69 373	03A	077	2-D06
40 69 530	03A	009	2-A10
40 69 704	08B	145	5-G02
40 69 811	03A	161	2-G18
40 69 977	03A	079	2-D08
40 69 985	03A	171	2-H04
40 69 985	03A	175	2-H08
40 69 985	03A	179	2-H12
40 69 985	03A	183	2-H16
40 69 985	03A	187	2-H20
40 70 215	08C	011	5-J12
40 70 223	08C	011	5-J12
40 70 272	08C	011	5-J12
40 70 306	08C	011	5-J12
40 70 595	03A	091	2-D20
40 70 728	08C	007	5-J08
40 70 728	08C	009	5-J10
40 70 785	08A	017	4-C18
40 71 171	08C	011	5-J12
40 71 189	08C	011	5-J12
40 71 775	03A	091	2-D20
40 71 791	08C	011	5-J12
40 72 062	08A	025	4-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 72 070	08A	025	4-D02
40 72 088	08A	025	4-D02
40 72 096	08A	025	4-D02
40 72 104	08A	025	4-D02
40 72 120	08A	025	4-D02
40 72 203	08C	007	5-J08
40 72 211	08C	007	5-J08
40 72 369	08C	019	5-J20
40 72 393	08C	019	5-J20
40 72 807	03A	091	2-D20
40 73 110	08A	017	4-C18
40 73 359	08C	019	5-J20
40 73 375	08C	019	5-J20
40 73 383	08C	019	5-J20
40 73 391	08C	019	5-J20
40 73 532	08C	019	5-J20
40 73 615	08C	011	5-J12
40 73 623	08C	011	5-J12
40 73 631	08A	017	4-C18
40 73 979	08C	021	5-J22
40 73 979	08C	023	5-J24
40 74 316	08C	005	5-J06
40 74 332	08A	017	4-C18
40 74 688	08A	017	4-C18
40 74 696	08A	017	4-C18
40 74 787	08C	015	5-J16
40 74 936	08A	017	4-C18
40 77 012	08B	019	5-A20
40 77 038	08B	019	5-A20
40 77 079	08B	009	5-A10
40 77 087	08B	009	5-A10
40 77 111	08B	191	5-H24
40 77 871	08B	191	5-H24
40 77 889	08B	191	5-H24
40 78 978	08B	009	5-A10
40 79 604	08B	009	5-A10
40 79 695	08B	193	5-I02
40 79 703	08B	193	5-I02
40 79 935	03A	089	2-D18
40 80 164	08B	005	5-A06
40 80 180	08B	005	5-A06
40 80 198	08B	005	5-A06
40 80 214	08B	005	5-A06
40 80 230	08B	005	5-A06
40 80 248	08B	005	5-A06
40 80 305	08B	015	5-A16
40 82 699	08B	013	5-A14
40 82 707	08B	013	5-A14
40 82 715	08B	013	5-A14
40 82 731	08B	009	5-A10
40 82 731	08B	017	5-A18
40 82 749	08B	005	5-A06
40 82 756	08B	005	5-A06
40 83 028	08B	135	5-F16
40 83 028	08B	147	5-G04
40 83 036	03A	093	2-D22
40 83 044	03A	093	2-D22
40 83 051	03A	093	2-D22
40 83 085	03A	093	2-D22
40 83 275	03A	097	2-E02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 83 283	03A	097	2-E02
40 83 291	03A	115	2-E20
40 83 291	03A	123	2-F04
40 83 291	03A	135	2-F16
40 83 291	03A	145	2-G02
40 83 291	03A	153	2-G10
40 83 341	08B	019	5-A20
40 83 374	08B	019	5-A20
40 83 432	08B	005	5-A06
40 83 440	08B	005	5-A06
40 83 457	08B	005	5-A06
40 83 804	03A	193	2-I02
40 83 879	03A	079	2-D08
40 84 018	03A	093	2-D22
40 84 026	03A	093	2-D22
40 84 034	03A	093	2-D22
40 84 166	03A	191	2-H24
40 84 349	08B	015	5-A16
40 84 398	08B	013	5-A14
40 84 547	03A	193	2-I02
40 84 547	03A	195	2-I04
40 84 554	03A	077	2-D06
40 84 554	03A	199	2-I08
40 84 687	03A	097	2-E02
40 84 695	03A	097	2-E02
40 85 148	03A	097	2-E02
40 85 197	03A	093	2-D22
40 85 213	03A	097	2-E02
40 85 221	03A	097	2-E02
40 85 239	03A	097	2-E02
40 85 320	08B	019	5-A20
40 85 502	03A	077	2-D06
40 85 510	03A	077	2-D06
40 85 544	03A	093	2-D22
40 85 577	03A	077	2-D06
40 85 775	03A	193	2-I02
40 85 775	03A	195	2-I04
40 85 783	06	007	4-A08
40 85 890	08B	015	5-A16
40 85 908	08B	019	5-A20
40 86 419	08B	005	5-A06
40 86 492	03A	087	2-D16
40 86 658	03A	093	2-D22
40 86 682	02	127	1-H08
40 86 690	02	127	1-H08
40 86 716	02	169	1-J02
40 86 724	02	127	1-H08
40 86 732	03A	093	2-D22
40 86 781	08B	019	5-A20
40 86 906	08B	019	5-A20
40 86 922	08B	019	5-A20
40 86 930	08B	019	5-A20
40 87 003	03A	009	2-A10
40 87 029	08B	023	5-A24
40 87 029	08B	027	5-B04
40 87 029	08B	113	5-E18
40 87 045	08A	053	4-E06
40 87 078	02	113	1-G18
40 87 078	02	117	1-G22
40 87 086	02	129	1-H10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 87 128	02	071	1-E24
40 87 128	02	079	1-F08
40 87 128	03A	087	2-D16
40 87 128	03A	157	2-G14
40 87 128	03A	161	2-G18
40 87 128	03A	167	2-G24
40 87 151	08A	061	4-E14
40 87 151	08A	077	4-F06
40 87 151	08A	121	4-H02
40 87 193	04	015	3-G16
40 87 193	04	045	3-H22
40 87 235	02	015	1-C16
40 87 235	02	023	1-C24
40 87 243	02	045	1-D22
40 87 482	03A	193	2-I02
40 87 649	02	153	1-I10
40 87 672	08B	005	5-A06
40 87 698	03A	171	2-H04
40 87 698	03A	175	2-H08
40 87 698	03A	179	2-H12
40 87 698	03A	183	2-H16
40 87 698	[illegible]	187	2-H20
40 87 706	02	089	1-F18
40 87 714	02	123	1-H04
40 87 763	08A	045	4-D22
40 87 763	08A	047	4-D24
40 87 805	02	011	1-C12
40 87 805	02	081	1-F10
40 87 805	02	085	1-F14
40 87 813	04	037	3-H14
40 87 896	02	123	1-H04
40 87 920	02	165	1-I22
40 87 938	08A	025	4-D02
40 88 100	08A	101	4-G06
40 88 118	08A	101	4-G06
40 88 209	08A	049	4-E02
40 88 209	08A	053	4-E06
40 88 852	08A	055	4-E08
40 89 256	03A	035	2-B12
40 89 264	03A	039	2-B16
40 89 272	03A	039	2-B16
40 89 389	08A	117	4-G22
40 89 454	08A	035	4-D12
40 89 462	08A	035	4-D12
40 89 645	08A	047	4-D24
40 89 652	08A	047	4-D24
40 89 686	08A	041	4-D18
40 89 694	08A	041	4-D18
40 89 736	08A	101	4-G06
40 89 744	08A	105	4-G10
40 89 934	08A	063	4-E16
40 89 934	08A	067	4-E20
40 89 934	08A	071	4-E24
40 89 967	08A	045	4-D22
40 89 975	08A	045	4-D22
40 90 007	03A	055	2-C08
40 90 114	03A	053	2-C06
40 90 197	08A	061	4-E14
40 90 197	08A	077	4-F06
40 90 197	08A	079	4-F08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A05 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 90 197	08A	121	4-H02
40 90 239	03A	057	2-C10
40 90 858	08A	075	4-F04
40 90 882	08A	075	4-F04
40 90 890	08A	075	4-F04
40 90 981	03A	101	2-E06
40 91 062	08A	075	4-F04
40 92 144	03A	071	2-C24
40 92 342	03A	071	2-C24
40 92 359	03A	071	2-C24
40 92 482	08A	055	4-E08
40 92 490	08A	055	4-E08
40 92 748	03A	063	2-C16
40 92 755	03A	063	2-C16
40 92 763	03A	063	2-C16
40 93 035	03A	063	2-C16
40 93 043	08A	045	4-D22
40 93 050	08A	045	4-D22
40 93 308	08A	045	4-D22
40 93 316	08A	045	4-D22
40 93 365	08A	105	4-G10
40 93 373	08A	105	4-G10
40 93 514	08A	101	4-G06
40 93 522	08A	101	4-G06
40 93 969	08A	103	4-G08
40 93 977	08A	103	4-G08
40 94 124	08A	043	4-D20
40 94 132	08A	043	4-D20
40 94 199	08A	017	4-C18
40 94 256	08A	057	4-E10
40 94 405	08A	049	4-E02
40 94 777	08A	059	4-E12
40 94 926	03A	067	2-C20
40 94 942	03A	067	2-C20
40 94 967	03A	035	2-B12
40 95 063	03A	067	2-C20
40 95 063	03A	195	2-I04
40 95 626	03A	063	2-C16
40 95 634	03A	063	2-C16
40 95 642	03A	063	2-C16
40 95 659	03A	063	2-C16
40 96 012	03A	071	2-C24
40 96 020	03A	071	2-C24
40 96 038	03A	071	2-C24
40 96 053	08A	055	4-E08
40 96 061	08A	055	4-E08
40 96 079	08A	055	4-E08
40 96 087	08A	055	4-E08
40 96 343	08A	089	4-F18
40 96 616	08A	071	4-E24
40 96 616	08A	123	4-H04
40 96 749	08A	077	4-F06
40 96 749	08A	101	4-G06
40 96 756	08A	077	4-F06
40 96 756	08A	101	4-G06
40 96 871	08A	095	4-F24
40 96 889	08A	095	4-F24
40 96 897	08A	059	4-E12
40 97 440	08A	123	4-H04
40 97 457	08A	123	4-H04
40 98 273	08A	031	4-D08
40 98 463	08A	011	4-C12
40 98 471	08A	011	4-C12
40 98 562	08A	023	4-C24
40 98 570	08A	023	4-C24
40 98 695	08A	019	4-C20
40 98 703	08A	019	4-C20
40 98 711	08A	019	4-C20
40 98 729	08A	019	4-C20
40 98 943	08A	023	4-C24
40 98 950	08A	023	4-C24
40 99 099	08A	053	4-E06
40 99 628	08A	027	4-D04
40 99 636	08A	027	4-D04
40 99 768	08A	093	4-F22
40 99 768	08A	115	4-G20
40 99 768	08A	119	4-G24
40 99 776	08A	093	4-F22
40 99 776	08A	115	4-G20
40 99 776	08A	119	4-G24
41 00 301	08A	017	4-C18
41 00 350	08A	013	4-C14
41 00 376	08A	027	4-D04
41 00 418	08A	005	4-C06
41 00 533	08A	007	4-C08
41 00 541	08A	007	4-C08
41 00 582	08A	049	4-E02
41 00 723	08A	007	4-C08
41 00 731	08A	007	4-C08
41 00 871	08A	053	4-E06
41 00 897	08A	037	4-D14
41 00 905	08A	051	4-E04
41 00 988	08A	009	4-C10
41 01 036	08A	015	4-C16
41 01 341	08A	025	4-D02
41 01 358	08A	025	4-D02
41 01 366	08A	025	4-D02
41 01 374	08A	025	4-D02
41 01 465	08A	305	4-C06
41 01 481	08A	027	4-D04
41 01 606	08A	025	4-D02
41 01 630	08A	027	4-D04
41 01 648	08A	027	4-D04
41 01 705	08A	053	4-E06
41 01 721	08A	025	4-D02
41 01 804	08A	043	4-D20
41 01 812	08A	043	4-D20
41 02 000	08A	061	4-E14
41 02 000	08A	067	4-E20
41 02 000	08A	071	4-E24
41 02 000	08A	077	4-F06
41 02 067	08A	095	4-F24
41 02 075	08A	095	4-F24
41 02 851	03A	075	2-D04
41 02 901	08A	005	4-C06
41 03 214	04	039	3-H16
41 03 214	04	073	3-J02
41 03 222	04	031	3-H08
41 03 222	04	035	3-H12
41 03 230	04	041	3-H18
41 03 248	04	073	3-J02
41 03 263	04	039	3-H16
41 03 313	04	039	3-H16
41 03 412	08A	005	4-C06
41 03 420	05	009	3-K10
41 03 933	06	013	4-A14
41 03 941	06	013	4-A14
41 03 958	06	015	4-A16
41 03 966	06	015	4-A16
41 03 974	06	015	4-A16
41 03 982	06	015	4-A16
41 03 990	06	013	4-A14
41 04 006	06	013	4-A14
41 04 014	06	013	4-A14
41 04 022	06	013	4-A14
41 04 030	06	013	4-A14
41 04 048	06	017	4-A18
41 04 162	06	013	4-A14
41 04 501	06	013	4-A14
41 04 519	06	013	4-A14
41 04 527	06	015	4-A16
41 04 543	06	013	4-A14
41 04 568	06	013	4-A14
41 04 709	06	021	4-A22
41 04 717	06	021	4-A22
41 04 725	06	021	4-A22
41 04 733	06	021	4-A22
41 04 741	06	021	4-A22
41 04 766	06	017	4-A18
41 04 766	06	021	4-A22
41 05 037	06	017	4-A18
41 05 052	06	013	4-A14
41 05 060	06	013	4-A14
41 05 235	04	039	3-H16
41 05 268	05	021	3-K22
41 05 276	02	155	1-I12
41 05 508	06	013	4-A14
41 05 516	06	013	4-A14
41 05 565	06	013	4-A14
41 05 573	06	015	4-A16
41 05 581	06	013	4-A14
41 05 599	06	015	4-A16
41 05 656	07	023	4-B24
41 05 730	07	015	4-B16
41 05 730	07	019	4-B20
41 05 797	04	071	3-I24
41 05 821	04	007	3-G08
41 05 920	05	015	3-K16
41 05 946	05	015	3-K16
41 05 961	05	015	3-K16
41 06 134	04	039	3-H16
41 06 266	07	015	4-B16
41 06 266	07	019	4-B20
41 06 266	07	023	4-B24
41 06 969	07	007	4-B08
41 06 969	07	009	4-B10
41 07 108	04	039	3-H16
41 07 108	04	071	3-I24
41 07 462	05	005	3-K06
41 07 744	06	011	4-A12
41 07 793	05	007	3-K08
41 07 793	05	029	3-L06
41 07 801	05	029	3-L06
41 08 650	03A	081	2-D10
41 08 718	03A	081	2-D10
41 08 726	03A	081	2-D10
41 08 734	03A	081	2-D10
41 08 932	03A	093	2-D22
41 09 039	03A	097	2-E02
41 09 047	03A	097	2-E02
41 09 070	03A	173	2-H06
41 09 070	03A	175	2-H08
41 09 070	03A	179	2-H12
41 09 070	03A	183	2-H16
41 09 087	03A	187	2-H20
41 09 088	03A	173	2-H06
41 09 088	03A	177	2-H10
41 09 096	03A	173	2-H06
41 09 096	03A	177	2-H10
41 09 187	03B	015	3-A16
41 09 187	03B	037	3-B14
41 09 187	03B	059	3-C12
41 09 187	03B	081	3-D10
41 09 526	03A	079	2-D08
41 09 781	03A	167	2-G24
41 09 807	03A	167	2-G24
41 09 [illegible]	03A	167	2-G24
41 10 532	03A	167	2-G24
41 10 557	03A	167	2-G24
41 10 995	08B	149	5-G06
41 11 001	08B	153	5-G10
41 11 118	03A	105	2-E10
41 11 217	03A	161	2-G18
41 11 308	03B	023	3-A24
41 11 308	03B	045	3-B22
41 11 308	03B	067	3-C20
41 11 308	03B	091	3-D20
41 11 480	03A	167	2-G24
41 11 506	08B	153	5-G10
41 11 522	03A	171	2-H04
41 11 522	03A	175	2-H08
41 11 522	03A	179	2-H12
41 11 522	03A	183	2-H16
41 11 522	03A	187	2-H20
41 13 007	03B	037	3-B14
41 13 007	03B	059	3-C12
41 13 007	03B	081	3-D10
41 13 163	03A	173	2-H06
41 13 163	03A	177	2-H10
41 13 163	03A	181	2-H14
41 13 163	03A	185	2-H18
41 13 205	03B	009	3-A10
41 13 205	03B	031	3-B08
41 13 205	03B	053	3-C06
41 13 205	03B	075	3-D04

6-A06 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 13 262	03A	193	2-I02
41 13 403	03B	057	3-C10
41 13 403	03B	079	3-D08
41 13 411	03B	011	3-A12
41 13 411	03B	033	3-B10
41 13 411	03B	057	3-C10
41 13 411	03B	079	3-D08
41 13 452	03B	031	3-B08
41 13 452	03B	053	3-C06
41 13 452	03B	075	3-D04
41 13 551	03A	161	2-G18
41 13 601	03B	015	3-A16
41 13 601	03B	037	3-B14
41 13 601	03B	061	3-C14
41 13 601	03B	083	3-D12
41 13 650	03B	015	3-A16
41 13 650	03B	037	3-B14
41 13 650	03B	061	3-C14
41 13 650	03B	083	3-D12
41 13 759	03B	015	3-A16
41 13 759	03B	037	3-B14
41 13 759	03B	061	3-C14
41 13 759	03B	083	3-D12
41 13 809	03B	017	3-A18
41 13 809	03B	039	3-B16
41 13 809	03B	063	3-C16
41 13 809	03B	085	3-D14
41 13 999	03A	155	2-G12
41 14 005	03B	019	3-A20
41 14 005	03B	043	3-B20
41 14 005	03B	065	3-C18
41 14 005	03B	087	3-D16
41 14 054	03B	019	3-A20
41 14 054	03B	043	3-B20
41 14 054	03B	065	3-C18
41 14 054	03B	087	3-D16
41 14 310	03B	009	3-A10
41 14 310	03B	031	3-B08
41 14 310	03B	053	3-C06
41 14 310	03B	077	3-D06
41 14 609	03B	023	3-A24
41 14 609	03B	045	3-B22
41 14 898	03A	079	2-D08
41 14 971	03A	171	2-H04
41 14 971	03A	175	2-H08
41 14 971	03A	179	2-H12
41 14 971	03A	183	2-H16
41 14 971	03A	187	2-H20
41 15 077	03B	009	3-A10
41 15 077	03B	015	3-A16
41 15 077	03B	021	3-A22
41 15 077	03B	037	3-B08
41 15 077	03B	043	3-B20
41 15 077	03B	053	3-C06
41 15 077	03B	057	3-C10
41 15 077	03B	061	3-C14
41 15 077	03B	065	3-C18
41 15 077	03B	077	3-D06
41 15 077	03B	079	3-D08
41 15 077	03B	083	3-D12
41 15 077	03B	087	3-D16
41 15 077	03B	105	3-E10
41 15 077	03B	113	3-E18
41 15 077	03B	115	3-E20
41 15 077	03B	125	3-F06
41 15 077	03B	133	3-F14
41 15 077	03B	135	3-F16
41 15 085	03A	091	2-D20
41 15 085	03B	021	3-A22
41 15 085	03B	043	3-B20
41 15 085	03B	065	3-C18
41 15 085	03B	087	3-D16
41 15 085	08C	009	5-J10
41 15 192	03A	193	2-I02
41 15 192	03B	015	3-A16
41 15 192	03B	019	3-A20
41 15 192	03B	023	3-A24
41 15 192	03B	037	3-B14
41 15 192	03B	043	3-B20
41 15 192	03B	045	3-B22
41 15 192	03B	047	3-B24
41 15 192	03B	061	3-C14
41 15 192	03B	065	3-C18
41 15 192	03B	067	3-C20
41 15 192	03B	069	3-C22
41 15 192	03B	083	3-D12
41 15 192	03B	087	3-D16
41 15 192	03B	091	3-D20
41 15 192	03B	093	3-D22
41 15 192	03B	105	3-E10
41 15 192	03B	113	3-E18
41 15 192	03B	125	3-F06
41 15 192	03B	135	3-F16
41 15 283	03B	125	3-F06
41 15 283	03B	135	3-F16
41 15 457	03B	113	3-E18
41 15 457	03B	125	3-F06
41 15 457	03B	135	3-F16
41 15 499	03B	023	3-A24
41 15 499	03B	037	3-B14
41 15 499	03B	043	3-B20
41 15 499	03B	057	3-C10
41 15 499	03B	059	3-C12
41 15 499	03B	065	3-C18
41 15 499	03B	067	3-C20
41 15 499	03B	079	3-D08
41 15 499	03B	081	3-D10
41 15 499	03B	087	3-D16
41 15 499	03B	091	3-D20
41 15 499	03B	105	3-E10
41 15 499	03B	115	3-E20
41 15 499	03B	125	3-F06
41 15 499	03B	135	3-F16
41 15 580	03B	009	3-A10
41 15 580	03B	015	3-A16
41 15 580	03B	019	3-A20
41 15 580	03B	031	3-B08
41 15 580	03B	033	3-B10
41 15 580	03B	041	3-B18
41 15 580	03B	055	3-C08
41 15 580	03B	059	3-C12
41 15 580	03B	063	3-C16
41 15 580	03B	077	3-D06
41 15 580	03B	081	3-D10
41 15 580	03B	085	3-D14
41 15 580	03B	105	3-E10
41 15 580	03B	113	3-E18
41 15 580	03B	125	3-F06
41 15 580	03B	135	3-F16
41 17 164	03B	009	3-A10
41 17 164	03B	031	3-B08
41 17 164	03B	053	3-C06
41 17 164	03B	077	3-D06
41 17 172	06	007	4-A08
41 17 263	03B	015	3-A16
41 17 263	03B	061	3-C14
41 17 263	03B	083	3-D12
41 17 339	03A	167	2-G24
41 17 461	03B	021	3-A22
41 17 461	03B	043	3-B20
41 17 461	03B	065	3-C18
41 17 461	03B	087	3-D16
41 17 461	08C	009	5-J10
41 17 560	03A	075	2-D04
41 17 560	03B	009	3-A10
41 17 560	03B	031	3-B08
41 17 560	03B	055	3-C08
41 17 560	03B	077	3-D06
41 17 602	08A	019	4-C20
41 17 610	08A	019	4-C20
41 17 628	08A	019	4-C20
41 17 669	03B	015	3-A16
41 17 669	03B	033	3-B10
41 17 669	03B	059	3-C12
41 17 669	03B	081	3-D10
41 17 768	03B	019	3-A20
41 17 768	03B	041	3-B18
41 17 768	03B	063	3-C16
41 17 768	03B	085	3-D14
41 18 188	02	125	1-H06
41 18 311	04	067	3-I20
41 18 360	02	127	1-H08
41 18 402	04	069	3-I22
41 18 626	04	037	3-H14
41 18 659	04	037	3-H14
41 18 949	04	009	3-G10
41 19 061	04	047	3-H24
41 19 137	04	053	3-I06
41 19 152	04	053	3-I06
41 19 160	04	053	3-I06
41 19 244	04	067	3-I20
41 19 244	04	075	3-J04
41 19 244	04	077	3-J06
41 19 442	04	059	3-I12
41 19 525	04	047	3-H24
41 20 465	02	125	1-H06
41 20 523	04	041	3-H18
41 20 606	04	069	3-I22
41 20 614	04	069	3-I22
41 20 671	04	047	3-H24
41 20 796	04	063	3-I16
41 20 861	04	053	3-I06
41 20 937	04	057	3-I10
41 20 945	04	049	3-I02
41 21 067	02	125	1-H06
41 21 091	04	069	3-I22
41 21 109	04	069	3-I22
41 21 562	04	007	3-G08
41 21 588	04	037	3-H14
41 21 877	04	053	3-I06
41 21 992	04	063	3-I16
41 22 016	04	049	3-I02
41 22 081	04	049	3-I02
41 22 123	04	035	3-H12
41 22 131	04	035	3-H12
41 22 149	04	035	3-H12
41 22 156	04	035	3-H12
41 22 164	04	035	3-H12
41 22 172	04	035	3-H12
41 22 180	04	035	3-H12
41 22 198	04	035	3-H12
41 22 206	04	035	3-H12
41 22 214	04	035	3-H12
41 22 305	04	057	3-I10
41 22 396	04	053	3-I06
41 22 412	04	053	3-I06
41 22 420	04	057	3-I10
41 22 495	04	059	3-I12
41 22 503	04	063	3-I16
41 22 529	04	067	3-I20
41 22 552	04	065	3-I18
41 22 578	04	065	3-I18
41 22 586	04	057	3-I10
41 22 677	04	057	3-I10
41 22 719	04	059	3-I12
41 22 990	04	053	3-I06
41 23 105	08B	139	5-F20
41 23 386	08B	143	5-F24
41 23 386	08B	153	5-G10
41 23 394	08B	135	5-F16
41 23 394	08B	145	5-G02
41 26 330	08B	149	5-G06
41 26 348	08B	149	5-G06
41 26 355	08B	149	5-G06
41 28 195	08B	181	5-H14
41 29 110	08B	145	5-G02
41 29 201	08B	145	5-G02
41 29 250	08B	067	5-C20
41 29 250	08B	079	5-D08
41 29 250	08B	089	5-D18
41 29 250	08B	097	5-E02
41 29 250	08B	105	5-E10
41 29 268	08B	067	5-C20
41 29 268	08B	079	5-D08
41 29 268	08B	089	5-D18
41 29 268	08B	097	5-E02
41 29 268	08B	105	5-E10
41 29 276	08B	067	5-C20
41 29 276	08B	079	5-D08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A07 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 29 276	08B	085	5-D14
41 29 276	08B	091	5-D20
41 29 276	08B	095	5-D24
41 29 276	08B	099	5-E04
41 29 276	08B	103	5-E08
41 29 276	08B	105	5-E10
41 29 276	08B	109	5-E14
41 29 284	08B	067	5-C20
41 29 284	08B	073	5-D02
41 29 284	08B	079	5-D08
41 29 284	08B	087	5-D16
41 29 284	08B	091	5-D20
41 29 284	08B	095	5-D24
41 29 284	08B	099	5-E04
41 29 284	08B	103	5-E08
41 29 284	08B	105	5-E10
41 29 284	08B	109	5-E14
41 29 292	08B	073	5-D02
41 29 292	08B	085	5-D14
41 29 292	08B	093	5-D22
41 29 292	08B	101	5-E06
41 29 292	08B	109	5-E14
41 29 300	08B	073	5-D02
41 29 300	08B	085	5-D14
41 29 300	08B	093	5-D22
41 29 300	08B	101	5-E06
41 29 300	08B	109	5-E14
41 31 751	08B	149	5-G06
41 32 866	08B	153	5-G10
41 32 874	08B	153	5-G10
41 33 153	08B	153	5-G10
41 33 161	08B	153	5-G10
41 33 278	08B	189	5-H22
41 33 427	08B	067	5-C20
41 33 427	08B	073	5-D02
41 33 427	08B	079	5-D08
41 33 427	08B	085	5-D14
41 33 427	08B	091	5-D20
41 33 427	08B	095	5-D24
41 33 427	08B	099	5-E04
41 33 427	08B	103	5-E08
41 33 427	08B	105	5-E10
41 33 427	08B	109	5-E14
41 34 003	08B	141	5-F22
41 34 003	08B	153	5-G10
41 34 672	08B	139	5-F20
41 34 680	08B	139	5-F20
41 35 224	08B	073	5-D02
41 35 224	08B	085	5-D14
41 35 224	08B	093	5-D22
41 35 224	08B	101	5-E06
41 35 224	08B	109	5-E14
41 35 331	08B	073	5-D02
41 35 331	08B	085	5-D14
41 35 331	08B	093	5-D22
41 35 331	08B	101	5-E06
41 35 331	08B	109	5-E14
41 35 471	08B	067	5-C20
41 35 471	08B	079	5-D08
41 35 471	08B	089	5-D18
41 35 471	08B	097	5-E02
41 35 471	08B	105	5-E10
41 35 489	08B	067	5-C20
41 35 489	08B	079	5-D08
41 35 489	08B	089	5-D18
41 35 489	08B	097	5-E02
41 35 489	08B	105	5-E10
41 35 802	08B	035	5-B12
41 35 802	08B	043	5-B20
41 35 828	08B	035	5-B12
41 35 828	08B	043	5-B20
41 35 828	08B	049	5-C02
41 35 828	08B	055	5-C08
41 35 828	08B	063	5-C16
41 35 877	08B	035	5-B12
41 35 877	08B	043	5-B20
41 35 885	08B	035	5-B12
41 35 885	08B	043	5-B20
41 35 919	08B	035	5-B12
41 35 919	08B	043	5-B20
41 35 919	08B	049	5-C02
41 35 927	08B	035	5-B12
41 35 927	08B	043	5-B20
41 35 927	08B	049	5-C02
41 35 976	08B	113	5-E18
41 35 984	08B	113	5-E18
41 36 610	08B	159	5-G16
41 36 610	08B	163	5-G20
41 36 610	08B	169	5-H02
41 36 610	08B	175	5-H08
41 36 610	08B	179	5-H12
41 40 042	08B	155	5-G12
41 40 042	08B	161	5-G18
41 40 059	08B	155	5-G12
41 40 059	08B	161	5-G18
41 40 315	08B	113	5-E18
41 41 628	08B	181	5-H14
41 41 644	08B	113	5-E18
41 41 784	08B	181	5-H14
41 42 824	08B	149	5-G06
41 42 832	08B	149	5-G06
41 42 964	08B	025	5-B02
41 56 345	02	135	1-H16
41 56 444	02	135	1-H16
41 56 451	02	135	1-H16
41 56 550	02	065	1-E18
41 56 618	08D	013	5-K14
41 56 642	02	135	1-H16
41 57 020	02	135	1-H16
41 57 038	02	135	1-H16
41 57 046	02	135	1-H16
41 57 723	02	063	1-E16
41 58 168	02	057	1-E10
41 58 234	02	057	1-E10
41 58 762	02	113	1-G18
41 58 762	02	117	1-G22
41 58 846	02	067	1-E20
41 59 265	02	067	1-E20
41 59 976	02	113	1-G18
41 59 976	02	117	1-G22
41 60 065	02	113	1-G18
41 60 065	02	119	1-G24
41 60 065	02	123	1-H04
41 60 099	03A	021	2-A22
41 60 271	02	113	1-G18
41 60 305	02	063	1-E16
41 60 511	02	065	1-E18
41 60 610	03A	167	2-G24
41 60 628	08B	117	5-E22
41 60 628	08B	121	5-F02
41 60 628	08B	123	5-F04
41 60 628	08B	125	5-F06
41 60 628	08B	129	5-F10
41 61 162	02	063	1-E16
41 61 162	02	141	1-H22
41 61 261	02	135	1-H16
41 61 378	02	079	1-F08
41 61 451	02	079	1-F08
41 61 758	02	063	1-E16
41 61 766	02	065	1-E18
41 61 881	02	099	1-G04
41 61 899	02	067	1-E20
41 61 907	02	157	1-I14
41 61 915	02	157	1-I14
41 62 046	02	079	1-F08
41 62 061	02	119	1-G24
41 62 061	02	121	1-H02
41 62 152	02	079	1-F08
41 62 319	02	079	1-F08
41 62 343	02	079	1-F08
41 62 632	02	121	1-H02
41 62 665	02	063	1-E16
41 63 416	02	161	1-I18
41 63 432	02	161	1-I18
41 63 853	02	063	1-E16
41 63 945	02	113	1-G18
41 64 232	02	063	1-E16
41 64 315	02	123	1-H04
41 64 323	02	113	1-G18
41 64 364	02	063	1-E16
41 64 448	02	019	1-C20
41 64 455	02	019	1-C20
41 64 489	04	013	3-G14
41 64 489	04	045	3-H22
41 64 497	04	013	3-G14
41 64 497	04	045	3-H22
41 64 554	02	071	1-E24
41 64 745	02	135	1-H16
41 64 802	02	077	1-F06
41 64 877	02	059	1-E12
41 64 885	02	059	1-E12
41 64 893	02	087	1-F16
41 64 919	02	059	1-E12
41 64 935	02	087	1-F16
41 64 950	02	097	1-G02
41 65 171	06	017	4-A18
41 65 254	02	009	1-C10
41 65 312	02	009	1-C10
41 65 411	02	009	1-C10
41 65 478	02	009	1-C10
41 65 494	02	009	1-C10
41 65 510	02	009	1-C10
41 65 668	02	091	1-F20
41 65 676	02	129	1-H10
41 71 112	03A	071	2-C24
41 71 146	03A	071	2-C24
41 71 153	03A	071	2-C24
41 71 161	03A	071	2-C24
41 71 179	03A	071	2-C24
41 71 203	03A	071	2-C24
41 71 245	03A	071	2-C24
41 71 260	03A	071	2-C24
41 71 278	03A	071	2-C24
41 71 856	03A	053	2-C06
41 71 906	08A	091	4-F20
41 71 914	08A	091	4-F20
41 71 922	08A	091	4-F20
41 71 930	08A	091	4-F20
41 72 441	03A	071	2-C24
41 73 688	03A	115	2-E20
41 73 688	03A	123	2-F04
41 73 688	03A	135	2-F16
41 73 688	03A	145	2-G02
41 73 688	03A	153	2-G10
41 73 696	03A	161	2-G18
41 74 058	03A	161	2-G18
41 74 116	03A	161	2-G18
41 74 124	03A	161	2-G18
41 74 157	03A	165	2-G22
41 74 181	03A	165	2-G22
41 74 264	03B	009	3-A10
41 74 264	03B	031	3-B08
41 74 264	03B	057	3-C10
41 74 264	03B	079	3-D08
41 74 835	03A	167	2-G24
41 74 868	03B	023	3-A24
41 74 868	03B	045	3-B22
41 74 868	03B	067	3-C20
41 74 868	03B	091	3-D20
41 74 959	03A	115	2-E20
41 74 959	03A	123	2-F04
41 74 959	03A	135	2-F16
41 74 967	03A	167	2-G24
41 75 360	03A	167	2-G24
41 75 402	03A	161	2-G18
41 75 428	03B	025	3-B02
41 75 428	03B	045	3-B22
41 75 451	03A	105	2-E10
41 76 095	02	133	1-H14
41 76 095	03A	165	2-G22
41 76 186	03B	045	3-B22
41 76 186	03B	067	3-C20
41 76 186	03B	091	3-D20
41 76 236	03B	025	3-B02
41 76 244	03B	023	3-A24
41 76 244	03B	045	3-B22
41 76 244	03B	067	3-C20
41 76 244	03B	091	3-D20
41 76 616	03B	025	3-B02
41 76 616	03B	047	3-B24

6-A08 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
41 76 616	03B	069	3-C22
41 76 616	03B	093	3-D22
41 76 624	03B	047	3-B24
41 76 624	03B	069	3-C22
41 76 624	03B	093	3-D22
41 76 780	03B	057	3-C10
41 76 780	03B	079	3-D08
41 78 414	03B	011	3-A12
41 78 414	03B	033	3-B10
41 78 414	03B	057	3-C10
41 78 414	03B	079	3-D08
41 78 505	03A	115	2-E20
41 78 505	03A	123	2-F04
41 78 505	03A	135	2-F16
41 78 505	03A	145	2-G02
41 79 255	03A	087	2-D16
41 79 958	03A	107	2-E12
41 90 021	02	155	1-I12
41 90 120	06	017	4-A18
41 90 179	06	017	4-A18
41 90 187	06	017	4-A18
41 90 617	05	009	3-K10
41 90 617	05	027	3-L04
41 90 773	05	009	3-K10
41 90 807	04	007	3-G08
41 90 831	08D	013	5-K14
41 92 993	06	017	4-A18
41 93 132	07	015	4-B16
41 93 132	07	019	4-B20
41 93 140	07	017	4-B18
41 93 140	07	019	4-B20
41 93 157	08D	005	5-K06
41 93 199	06	017	4-A18
41 93 389	07	005	4-B06
41 93 397	07	005	4-B06
41 93 405	07	005	4-B06
41 93 413	07	005	4-B06
41 93 421	07	005	4-B06
41 93 454	07	005	4-B06
41 93 462	07	005	4-B06
41 93 561	07	015	4-B16
41 93 561	07	019	4-B20
41 93 587	07	011	4-B12
41 93 603	07	015	4-B16
41 93 603	07	019	4-B20
41 93 611	07	015	4-B16
41 93 611	07	019	4-B20
41 93 629	07	015	4-B16
41 93 629	07	019	4-B20
41 93 637	07	015	4-B16
41 93 637	07	019	4-B20
41 93 769	08D	017	5-K18
41 93 900	06	017	4-A18
41 94 221	05	015	3-K16
41 94 221	05	017	3-K18
41 94 338	07	007	4-B08
41 94 379	06	017	4-A18
41 94 999	07	011	4-B12
41 95 061	07	007	4-B08
41 95 103	07	023	4-B24
41 95 228	07	015	4-B16
41 95 228	07	023	4-B24
41 95 236	07	015	4-B16
41 95 236	07	023	4-B24
41 95 277	08A	005	4-C06
41 95 327	07	007	4-B08
41 95 327	07	009	4-B10
41 95 673	05	015	3-K16
41 95 681	05	015	3-K16
41 95 772	05	009	3-K10
41 95 798	05	027	3-L04
41 95 855	05	009	3-K10
41 95 855	05	029	3-L06
41 95 871	05	009	3-K10
41 95 889	05	009	3-K10
41 95 889	05	029	3-L06
41 96 010	06	017	4-A18
41 96 036	06	017	4-A18
41 96 226	06	017	4-A18
41 96 242	06	017	4-A18
41 96 267	05	025	3-L02
41 96 275	05	025	3-L02
41 96 317	05	007	3-K08
41 96 317	05	025	3-L02
41 96 325	05	017	3-K18
41 96 333	05	017	3-K18
41 96 341	05	015	3-K16
41 97 422	07	015	4-B16
41 97 422	07	019	4-B20
41 97 422	07	023	4-B24
41 97 919	05	011	3-K12
41 97 927	03A	105	2-E10
41 97 935	05	017	3-K18
41 97 943	05	017	3-K18
41 97 950	05	017	3-K18
41 97 968	05	017	3-K18
41 98 065	05	011	3-K12
41 98 065	05	029	3-L06
41 98 073	05	011	3-K12
41 98 081	05	011	3-K12
41 98 081	05	029	3-L06
41 98 099	05	011	3-K12
41 98 099	05	029	3-L06
41 98 107	05	011	3-K12
41 98 107	05	029	3-L06
41 98 123	05	011	3-K12
41 98 123	05	025	3-L02
41 98 131	05	011	3-K12
41 98 131	05	025	3-L02
41 98 149	05	013	3-K14
41 98 222	05	011	3-K12
41 98 230	05	011	3-K12
41 98 271	05	011	3-K12
41 98 271	05	025	3-L02
41 98 289	05	011	3-K12
41 98 289	05	025	3-L02
41 98 297	05	013	3-K14
41 98 305	05	013	3-K14
41 98 313	05	013	3-K14
41 98 339	05	013	3-K14
41 98 347	05	013	3-K14
41 98 354	05	013	3-K14
41 98 362	05	013	3-K14
41 98 370	05	013	3-K14
41 98 388	05	013	3-K14
41 98 396	05	013	3-K14
41 98 412	05	013	3-K14
41 98 420	05	013	3-K14
41 98 438	05	013	3-K14
41 98 446	05	011	3-K12
41 98 461	05	011	3-K12
41 98 461	05	029	3-L06
41 98 479	05	011	3-K12
41 98 479	05	025	3-L02
41 98 487	05	029	3-L06
41 98 503	05	013	3-K14
41 98 511	05	011	3-K12
41 98 511	05	029	3-L06
41 98 529	05	011	3-K12
41 98 529	05	029	3-L06
41 98 602	03A	105	2-E10
41 98 883	08D	005	5-K06
41 98 891	08D	005	5-K06
41 98 941	05	025	3-L02
41 98 958	05	025	3-L02
41 99 360	07	011	4-B12
41 99 386	07	011	4-B12
41 99 410	07	023	4-B24
41 99 444	07	015	4-B16
41 99 444	07	023	4-B24
41 99 626	03A	105	2-E10
41 99 923	06	013	4-A14
42 01 224	03B	011	3-A12
42 01 224	03B	033	3-B10
42 01 224	03B	057	3-C10
42 01 224	03B	079	3-D08
42 01 232	03B	011	3-A12
42 01 232	03B	033	3-B10
42 01 232	03B	057	3-C10
42 01 232	03B	079	3-D08
42 01 323	03B	045	3-B22
42 02 065	06	009	4-A10
42 02 982	03A	093	2-D22
42 03 378	03B	071	3-C24
42 03 568	03B	043	3-B20
42 03 568	03B	065	3-C18
42 03 568	03B	087	3-D16
42 03 576	03B	043	3-B20
42 03 576	03B	065	3-C18
42 03 576	03B	087	3-D16
42 03 618	03B	041	3-B18
42 03 618	03B	065	3-C18
42 03 618	03B	087	3-D16
42 03 626	03B	041	3-B18
42 03 626	03B	063	3-C16
42 03 626	03B	087	3-D16
42 03 634	03B	043	3-B20
42 03 634	03B	065	3-C18
42 03 634	03B	087	3-D16
42 03 659	03B	045	3-B22
42 18 277	03A	159	2-G16
42 18 277	08B	023	5-A24
42 18 277	08B	027	5-B04
42 22 451	03B	069	3-C22
42 22 451	03B	093	3-D22
42 23 483	03B	047	3-B24
42 23 483	03B	069	3-C22
42 23 483	03B	093	3-D22
42 23 541	03B	069	3-C22
42 23 541	03B	093	3-D22
42 23 558	03B	069	3-C22
42 23 558	03B	093	3-D22
42 23 566	03B	069	3-C22
42 23 566	03B	093	3-D22
42 23 574	03B	047	3-B24
42 23 574	03B	069	3-C22
42 23 574	03B	093	3-D22
42 23 582	03B	069	3-C22
42 23 582	03B	093	3-D22
42 23 590	03B	069	3-C22
42 23 590	03B	093	3-D22
42 24 192	03A	175	2-H08
42 24 192	03A	177	2-H10
42 24 192	03A	179	2-H12
42 24 192	03A	181	2-H14
42 24 192	03A	183	2-H16
42 24 192	03A	185	2-H18
42 24 192	03A	187	2-H20
42 24 317	03B	083	3-D12
42 24 606	03B	023	3-A24
42 24 606	03B	067	3-C20
42 24 630	03B	047	3-B24
42 24 630	03B	069	3-C22
42 24 630	03B	093	3-D22
42 24 655	03B	047	3-B24
42 24 655	03B	069	3-C22
42 24 655	03B	093	3-D22
42 24 895	03B	031	3-B08
42 24 895	03B	053	3-C06
42 27 203	03A	031	2-B08
42 27 823	02	159	1-I16
42 27 823	03A	085	2-D14
42 28 011	02	107	1-G12
42 28 326	08D	007	5-K08
42 29 084	02	011	1-C12
42 29 084	02	149	1-I06
42 29 944	03A	029	2-B06
42 32 666	04	013	3-G14
42 33 169	06	009	4-A10
42 35 610	03A	021	2-A22
42 35 768	02	107	1-G12
42 37 020	02	035	1-D12
42 37 038	02	035	1-D12
42 39 042	02	123	1-H04
42 39 067	02	059	1-E12
42 39 083	02	107	1-G12
42 39 190	03A	105	2-E10
42 39 588	02	113	1-G18
42 39 596	02	123	1-H04
42 39 661	02	119	1-G24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A09 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 39 976	02	111	1-G16
42 49 108	02	141	1-H22
42 50 197	03A	067	2-C20
42 50 205	03A	067	2-C20
42 50 320	08A	087	4-F16
42 50 320	08A	121	4-H02
42 51 021	03A	069	2-C22
42 51 039	08A	061	4-E14
42 51 047	08A	061	4-E14
42 51 054	08A	061	4-E14
42 51 062	08A	061	4-E14
42 51 476	03A	067	2-C20
42 51 484	03A	067	2-C20
42 51 518	08A	045	4-D22
42 51 518	08A	047	4-D24
42 51 666	08A	049	4-E02
42 51 674	08A	053	4-E06
42 51 831	03A	101	2-E06
42 51 930	08A	049	4-E02
42 51 930	08A	053	4-E06
42 51 997	03A	071	2-C24
42 52 276	03A	041	2-B18
42 52 284	03A	041	2-B18
42 52 292	03A	041	2-B18
42 52 300	03A	041	2-B18
42 52 458	03A	071	2-C24
42 52 581	03A	039	2-B16
42 52 599	03A	039	2-B16
42 53 266	08A	071	4-E24
42 53 274	08A	071	4-E24
42 53 407	03A	035	2-B12
42 53 639	03A	049	2-C02
42 53 647	03A	049	2-C02
42 53 654	03A	049	2-C02
42 53 662	03A	049	2-C02
42 54 249	03A	053	2-C06
42 54 611	03A	071	2-C24
42 55 253	08B	157	5-G14
42 55 261	08B	157	5-G14
42 55 832	08B	139	5-F20
42 55 840	08B	139	5-F20
42 56 749	08B	141	5-F22
42 56 749	08B	153	5-G10
42 56 756	08B	141	5-F22
42 56 756	08B	153	5-G10
42 56 939	08B	183	5-H16
42 57 515	08B	023	5-A24
42 57 556	08B	135	5-F16
42 57 564	08B	135	5-F16
42 57 572	08B	135	5-F16
42 57 580	08B	135	5-F16
42 57 630	08B	135	5-F16
42 57 648	08B	135	5-F16
42 57 655	08B	135	5-F16
42 57 671	08B	139	5-F20
42 57 689	08B	139	5-F20
42 57 697	08B	139	5-F20
42 59 248	08B	025	5-B02
42 60 006	08B	027	5-B04
42 60 022	08B	027	5-B04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 60 048	08B	027	5-B04
42 60 568	08A	085	4-F14
42 60 576	08B	027	5-B04
42 60 824	08B	115	5-E20
42 60 824	08B	117	5-E22
42 60 824	08B	119	5-E24
42 60 824	08B	121	5-F02
42 60 824	08B	123	5-F04
42 60 824	08B	125	5-F06
42 60 824	08B	129	5-F10
42 61 244	08B	115	5-E20
42 61 244	08B	119	5-E24
42 61 244	08B	123	5-F04
42 61 277	08B	115	5-E20
42 61 277	08B	119	5-E24
42 61 277	08B	123	5-F04
42 61 277	08B	125	5-F06
42 61 277	08B	129	5-F10
42 61 285	08B	115	5-E20
42 61 285	08B	119	5-E24
42 61 285	08B	123	5-F04
42 61 293	08B	115	5-E20
42 61 301	08B	115	5-E20
42 61 301	08B	119	5-E24
42 61 301	08B	123	5-F04
42 61 301	08B	125	5-F06
42 61 301	08B	129	5-F10
42 61 319	08B	115	5-E20
42 61 319	08B	119	5-E24
42 61 376	08B	115	5-E20
42 61 376	08B	119	5-E24
42 61 392	08B	115	5-E20
42 61 392	08B	119	5-E24
42 62 242	08B	113	5-E18
42 63 455	08B	067	5-C20
42 63 455	08B	073	5-D02
42 63 455	08B	079	5-D08
42 63 455	08B	085	5-D14
42 63 455	08B	091	5-D20
42 63 455	08B	095	5-D24
42 63 455	08B	099	5-E04
42 63 455	08B	103	5-E08
42 63 455	08B	105	5-E10
42 63 455	08B	109	5-E14
42 63 463	08B	067	5-C20
42 63 463	08B	073	5-D02
42 63 463	08B	079	5-D08
42 63 463	08B	085	5-D14
42 63 463	08B	091	5-D20
42 63 463	08B	095	5-D24
42 63 463	08B	099	5-E04
42 63 463	08B	103	5-E08
42 63 463	08B	105	5-E10
42 63 463	08B	109	5-E14
42 63 471	08B	067	5-C20
42 63 471	08B	073	5-D02
42 63 471	08B	079	5-D08
42 63 471	08B	085	5-D14
42 63 471	08B	089	5-D18
42 63 471	08B	095	5-D24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 63 471	08B	097	5-E02
42 63 471	08B	103	5-E08
42 63 471	08B	105	5-E10
42 63 471	08B	109	5-E14
42 63 604	08B	067	5-C20
42 63 604	08B	079	5-D08
42 63 604	08B	089	5-D18
42 63 604	08B	097	5-E02
42 63 604	08B	105	5-E10
42 63 612	08B	067	5-C20
42 63 612	08B	079	5-D08
42 63 612	08B	089	5-D18
42 63 612	08B	097	5-E02
42 63 612	08B	105	5-E10
42 63 620	08B	067	5-C20
42 63 620	08B	079	5-D08
42 63 620	08B	089	5-D18
42 63 620	08B	097	5-E02
42 63 620	08B	105	5-E10
42 63 638	08B	067	5-C20
42 63 638	08B	079	5-D08
42 63 638	08B	089	5-D18
42 63 638	08B	097	5-E02
42 63 638	08B	105	5-E10
42 63 927	08B	073	5-D02
42 63 927	08B	085	5-D14
42 63 927	08B	093	5-D22
42 63 927	08B	101	5-E06
42 63 927	08B	109	5-E14
42 63 935	08B	073	5-D02
42 63 935	08B	085	5-D14
42 63 935	08B	093	5-D22
42 63 935	08B	101	5-E06
42 63 935	08B	109	5-E14
42 63 943	08B	073	5-D02
42 63 943	08B	085	5-D14
42 63 943	08B	093	5-D22
42 63 943	08B	101	5-E06
42 63 943	08B	109	5-E14
42 63 950	08B	073	5-D02
42 63 950	08B	085	5-D14
42 63 950	08B	093	5-D22
42 63 950	08B	101	5-E06
42 63 950	08B	109	5-E14
42 64 289	08B	189	5-H22
42 64 370	08B	189	5-H22
42 64 388	08B	189	5-H22
42 64 404	08B	023	5-A24
42 64 446	08B	189	5-H22
42 64 503	08B	023	5-A24
42 64 644	08B	115	5-E20
42 64 644	08B	119	5-E24
42 64 644	08B	123	5-F04
42 64 651	08B	115	5-E20
42 64 651	08B	119	5-E24
42 64 651	08B	123	5-F04
42 64 685	08B	115	5-E20
42 64 685	08B	119	5-E24
42 64 693	08B	115	5-E20
42 64 693	08B	119	5-E24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 64 768	08B	115	5-E20
42 64 842	08B	115	5-E20
42 64 941	08B	115	5-E20
42 64 941	08B	119	5-E24
42 64 966	08B	115	5-E20
42 64 966	08B	119	5-E24
42 65 047	08B	115	5-E20
42 65 047	08B	119	5-E24
42 65 062	08B	115	5-E20
42 65 062	08B	119	5-E24
42 65 328	08B	023	5-A24
42 65 468	08B	025	5-B02
42 65 484	08B	183	5-H16
42 66 003	08D	005	5-K06
42 66 193	08B	023	5-A24
42 66 532	08B	189	5-H22
42 66 540	08B	133	5-F14
42 66 714	08B	065	5-C18
42 66 722	08B	065	5-C18
42 66 730	08B	071	5-C24
42 66 748	08B	071	5-C24
42 67 399	08B	181	5-H14
42 67 654	08B	181	5-H14
42 67 787	08B	189	5-H22
42 68 033	08B	067	5-C20
42 68 033	08B	073	5-D02
42 68 033	08B	079	5-D08
42 68 033	08B	085	5-D14
42 68 033	08B	091	5-D20
42 68 033	08B	095	5-D24
42 68 033	08B	099	5-E04
42 68 033	08B	103	5-E08
42 68 033	08B	105	5-E10
42 68 033	08B	109	5-E14
42 68 041	08B	067	5-C20
42 68 041	08B	073	5-D02
42 68 041	08B	079	5-D08
42 68 041	08B	087	5-D16
42 68 041	08B	091	5-D20
42 68 041	08B	095	5-D24
42 68 041	08B	099	5-E04
42 68 041	08B	103	5-E08
42 68 041	08B	105	5-E10
42 68 041	08B	109	5-E14
42 68 058	08B	067	5-C20
42 68 058	08B	073	5-D02
42 68 058	08B	079	5-D08
42 68 058	08B	085	5-D14
42 68 058	08B	091	5-D20
42 68 058	08B	095	5-D24
42 68 058	08B	099	5-E04
42 68 058	08B	103	5-E08
42 68 058	08B	105	5-E10
42 68 058	08B	109	5-E14
42 68 132	08B	189	5-H22
42 68 215	08B	067	5-C20
42 68 215	08B	079	5-D08
42 68 215	08B	091	5-D20
42 68 215	08B	099	5-E04
42 68 215	08B	105	5-E10

6-A10 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 68 223	08B	067	5-C20
42 68 223	08B	079	5-D08
42 68 223	08B	091	5-D20
42 68 223	08B	099	5-E04
42 68 223	08B	105	5-E10
42 68 231	08B	073	5-D02
42 68 231	08B	087	5-D16
42 68 231	08B	095	5-D24
42 68 231	08B	103	5-E08
42 68 231	08B	109	5-E14
42 68 249	08B	073	5-D02
42 68 249	08B	087	5-D16
42 68 249	08B	095	5-D24
42 68 249	08B	103	5-E08
42 68 249	08B	109	5-E14
42 68 272	08B	185	5-H18
42 68 280	08B	185	5-H18
42 68 348	08B	113	5-E18
42 68 355	08B	113	5-E18
42 68 389	08A	085	4-F14
42 68 397	08A	085	4-F14
42 68 470	08B	189	5-H22
42 69 064	08B	065	5-C18
42 69 072	08B	065	5-C18
42 69 106	08B	065	5-C18
42 69 114	08B	065	5-C18
42 69 262	08B	071	5-C24
42 69 270	08B	071	5-C24
42 69 304	08B	071	5-C24
42 69 312	08B	071	5-C24
42 69 619	08B	065	5-C18
42 69 627	08B	065	5-C18
42 69 759	08A	025	4-D02
42 69 809	08B	187	5-H20
42 69 817	08B	187	5-H20
42 69 874	08B	113	5-E18
42 69 932	08B	117	5-E22
42 69 932	08B	121	5-F02
42 69 932	08B	123	5-F04
42 69 932	08B	127	5-F08
42 69 932	08B	131	5-F12
42 69 957	08A	045	4-D22
42 69 957	08A	047	4-D24
42 70 047	08B	069	5-C22
42 70 047	08B	073	5-D02
42 70 047	08B	079	5-D08
42 70 047	08B	087	5-D16
42 70 047	08B	089	5-D18
42 70 047	08B	095	5-D24
42 70 047	08B	097	5-E02
42 70 047	08B	103	5-E08
42 70 047	08B	105	5-E10
42 70 047	08B	109	5-E14
42 70 104	08B	071	5-C24
42 70 112	08B	071	5-C24
42 70 120	08B	071	5-C24
42 70 138	08B	071	5-C24
42 70 146	08B	073	5-D02
42 70 146	08B	085	5-D14
42 70 146	08B	093	5-D22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 70 146	08B	101	5-E06
42 70 146	08B	109	5-E14
42 70 153	08B	073	5-D02
42 70 153	08B	085	5-D14
42 70 153	08B	093	5-D22
42 70 153	08B	101	5-E06
42 70 153	08B	109	5-E14
42 70 161	08B	073	5-D02
42 70 161	08B	085	5-D14
42 70 161	08B	093	5-D22
42 70 161	08B	101	5-E06
42 70 161	08B	109	5-E14
42 70 179	08B	073	5-D02
42 70 179	08B	085	5-D14
42 70 179	08B	093	5-D22
42 70 179	08B	101	5-E06
42 70 179	08B	109	5-E14
42 70 443	08B	065	5-C18
42 70 450	08B	065	5-C18
42 70 468	08B	065	5-C18
42 70 476	08B	065	5-C18
42 70 526	08B	067	5-C20
42 70 526	08B	079	5-D08
42 70 526	08B	089	5-D18
42 70 526	08B	097	5-E02
42 70 526	08B	105	5-E10
42 70 534	08B	067	5-C20
42 70 534	08B	079	5-D08
42 70 534	08B	089	5-D18
42 70 534	08B	097	5-E02
42 70 534	08B	105	5-E10
42 70 542	08B	067	5-C20
42 70 542	08B	079	5-D08
42 70 542	08B	089	5-D18
42 70 542	08B	097	5-E02
42 70 542	08B	105	5-E10
42 70 559	08B	067	5-C20
42 70 559	08B	079	5-D08
42 70 559	08B	089	5-D18
42 70 559	08B	097	5-E02
42 70 559	08B	105	5-E10
42 70 948	08A	053	4-E06
42 71 235	08B	181	5-H14
42 71 276	08B	027	5-B04
42 71 409	08B	025	5-B02
42 71 417	08B	025	5-B02
42 71 425	08B	025	5-B02
42 71 433	08B	025	5-B02
42 71 649	08B	025	5-B02
42 71 680	08B	025	5-B02
42 71 698	08B	025	5-B02
42 72 027	08B	023	5-A24
42 72 035	08B	023	5-A24
42 72 043	08B	023	5-A24
42 72 050	08B	023	5-A24
42 72 209	08B	023	5-A24
42 72 217	08B	117	5-E22
42 72 217	08B	121	5-F02
42 72 217	08B	123	5-F04
42 72 217	08B	125	5-F06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 72 217	08B	129	5-F10
42 73 579	08B	133	5-F14
42 73 587	08B	133	5-F14
42 73 595	08B	133	5-F14
42 73 603	08B	133	5-F14
42 73 611	08B	133	5-F14
42 73 629	08B	133	5-F14
42 73 637	08B	133	5-F14
42 73 645	08B	133	5-F14
42 73 652	08B	133	5-F14
42 73 660	08B	133	5-F14
42 73 934	08B	065	5-C18
42 73 934	08B	079	5-D08
42 73 934	08B	089	5-D18
42 73 934	08B	097	5-E02
42 73 942	08B	065	5-C18
42 73 942	08B	079	5-D08
42 73 942	08B	089	5-D18
42 73 942	08B	097	5-E02
42 74 130	08B	071	5-C24
42 74 130	08B	085	5-D14
42 74 130	08B	093	5-D22
42 74 130	08B	101	5-E06
42 74 148	08B	071	5-C24
42 74 148	08B	085	5-D14
42 74 148	08B	093	5-D22
42 74 148	08B	101	5-E06
42 74 585	08B	025	5-B02
42 74 650	08B	113	5-E18
42 74 676	08B	025	5-B02
42 74 718	08B	023	5-A24
42 74 726	08B	023	5-A24
42 74 916	08B	023	5-A24
42 74 924	08B	185	5-H18
42 74 957	08B	117	5-E22
42 74 957	08B	121	5-F02
42 74 957	08B	123	5-F04
42 74 957	08B	125	5-F06
42 74 957	08B	129	5-F10
42 74 965	08B	117	5-E22
42 74 965	08B	121	5-F02
42 74 965	08B	123	5-F04
42 74 965	08B	125	5-F06
42 74 965	08B	129	5-F10
42 79 303	04	037	3-H14
42 79 535	04	037	3-H14
42 79 808	04	055	3-I08
42 79 923	04	053	3-I06
42 79 931	04	047	3-H24
42 80 020	04	053	3-I06
42 80 038	04	047	3-H24
42 80 046	04	047	3-H24
42 80 053	04	051	3-I04
42 80 061	04	049	3-I02
42 80 095	04	053	3-I06
42 80 103	04	053	3-I06
42 80 111	04	051	3-I04
42 80 244	04	053	3-I06
42 80 335	04	053	3-I06
42 80 376	04	035	3-H12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 80 418	04	049	3-I02
42 80 426	04	049	3-I02
42 80 533	04	057	3-I10
42 80 558	04	053	3-I06
42 80 582	04	045	3-H22
42 80 590	04	057	3-I10
42 80 624	04	043	3-H20
42 80 632	04	043	3-H20
42 80 640	04	043	3-H20
42 80 657	04	063	3-I16
42 80 665	04	043	3-H20
42 80 681	04	047	3-H24
42 80 699	04	045	3-H22
42 80 715	04	045	3-H22
42 80 772	04	053	3-I06
42 80 780	04	053	3-I06
42 80 830	04	069	3-I22
42 80 855	04	069	3-I22
42 80 871	04	069	3-I22
42 80 921	04	009	3-G10
42 81 184	04	041	3-H18
42 81 192	04	039	3-H16
42 81 218	04	069	3-I22
42 81 374	04	069	3-I22
42 81 424	04	069	3-I22
42 81 457	04	069	3-I22
42 81 465	04	069	3-I22
42 81 481	04	069	3-I22
42 81 622	04	051	3-I04
42 81 655	04	053	3-I06
42 81 804	04	063	3-I16
42 81 846	04	059	3-I12
42 81 861	04	055	3-I08
42 81 887	04	055	3-I08
42 81 945	04	063	3-I16
42 84 188	02	125	1-H06
42 84 196	02	125	1-H06
42 84 824	02	129	1-H10
42 84 832	02	129	1-H10
42 84 873	02	129	1-H10
42 88 189	08B	159	5-G16
42 88 189	08B	163	5-G20
42 88 189	08B	169	5-H02
42 88 270	08B	157	5-G14
42 88 288	08B	157	5-G14
42 88 296	08B	157	5-G14
42 88 304	08B	157	5-G14
42 88 411	08B	155	5-G12
42 88 429	08B	155	5-G12
42 88 437	08B	155	5-G12
42 88 445	08B	155	5-G12
42 88 684	08B	033	5-B10
42 88 692	08B	033	5-B10
42 88 718	08B	033	5-B10
42 90 649	08B	015	5-A16
42 91 241	08B	035	5-B12
42 91 258	08B	035	5-B12
42 91 282	08B	035	5-B12
42 91 290	08B	035	5-B12
42 92 157	08B	033	5-B10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A11 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 92 173	08B	033	5-B10
42 92 207	08B	033	5-B10
42 92 215	08B	033	5-B10
42 92 280	08B	033	5-B10
42 92 298	08B	033	5-B10
42 92 710	08B	033	5-B10
42 92 744	08B	033	5-B10
42 92 777	08B	029	5-B06
42 92 777	08B	033	5-B10
42 92 777	08B	041	5-B18
42 92 777	08B	047	5-B24
42 92 777	08B	053	5-C06
42 92 934	08B	141	5-F22
42 92 934	08B	149	5-G06
42 93 007	08A	039	4-D16
42 93 015	08A	039	4-D16
42 93 031	08A	031	4-D08
42 93 049	08A	053	4-E06
42 93 064	08A	007	4-C08
42 93 072	08A	035	4-D12
42 93 080	08A	011	4-C12
42 93 106	08A	025	4-D02
42 93 114	08A	025	4-D02
42 93 122	08A	025	4-D02
42 93 130	08A	025	4-D02
42 93 148	08A	025	4-D02
42 93 155	08A	025	4-D02
42 93 163	08A	025	4-D02
42 93 171	08A	025	4-D02
42 93 189	08A	025	4-D02
42 93 197	08A	025	4-D02
42 93 213	08A	049	4-E02
42 93 346	08A	039	4-D16
42 93 460	08A	025	4-D02
42 93 478	08A	025	4-D02
42 93 619	03A	009	2-A10
42 93 668	08A	025	4-D02
42 93 676	08A	025	4-D02
42 93 700	08A	017	4-C18
42 93 718	08A	017	4-C18
42 93 726	08A	019	4-C20
42 93 734	08A	017	4-C18
42 93 759	08A	027	4-D04
42 93 767	08A	005	4-C06
42 93 791	08A	025	4-D02
42 93 882	08A	019	4-C20
42 93 908	08A	027	4-D04
42 93 916	08A	007	4-C08
42 93 932	08A	021	4-C22
42 93 940	08A	021	4-C22
42 94 047	08A	037	4-D14
42 94 054	08A	037	4-D14
42 94 260	08A	023	4-C24
42 94 278	08A	023	4-C24
42 94 369	08A	075	4-F04
42 94 401	08A	027	4-D04
42 94 419	08A	027	4-D04
42 94 617	08A	075	4-F04
42 94 641	08A	023	4-C24
42 94 658	08A	023	4-C24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 94 708	08A	025	4-D02
42 94 716	08A	025	4-D02
42 94 757	08A	011	4-C12
42 95 077	03A	009	2-A10
42 95 101	08A	025	4-D02
42 95 119	08A	025	4-D02
42 95 150	08A	037	4-D14
42 95 150	08A	039	4-D16
42 95 168	08A	037	4-D14
42 95 168	08A	039	4-D16
42 95 200	08A	035	4-D12
42 95 200	08A	037	4-D14
42 95 200	08A	039	4-D16
42 95 630	08A	017	4-C18
42 96 208	08A	037	4-D14
42 96 208	08A	039	4-D16
42 98 626	08A	017	4-C18
43 00 331	02	073	1-F02
43 00 349	02	073	1-F02
43 00 356	02	073	1-F02
43 00 364	02	075	1-F04
43 00 414	02	073	1-F02
43 00 422	02	075	1-F04
43 00 562	02	059	1-E12
43 00 729	03A	029	2-B06
43 00 737	03A	029	2-B06
43 00 828	02	073	1-F02
43 00 836	02	075	1-F04
43 00 844	02	073	1-F02
43 00 851	02	073	1-F02
43 00 877	02	073	1-F02
43 01 206	02	073	1-F02
43 01 305	02	119	1-G24
43 01 313	02	073	1-F02
43 01 420	02	107	1-G12
43 01 545	02	123	1-H04
43 01 669	02	099	1-G04
43 01 677	02	075	1-F04
43 01 685	02	155	1-I12
43 01 891	02	073	1-F02
43 01 909	02	073	1-F02
43 01 917	02	073	1-F02
43 01 925	02	073	1-F02
43 01 933	02	073	1-F02
43 01 941	02	073	1-F02
43 01 966	02	073	1-F02
43 01 974	02	073	1-F02
43 02 303	02	073	1-F02
43 02 329	02	073	1-F02
43 02 378	03A	105	2-E10
43 02 527	02	071	1-E24
43 02 642	02	073	1-F02
43 02 659	02	073	1-F02
43 02 667	02	073	1-F02
43 02 675	02	073	1-F02
43 02 683	02	073	1-F02
43 02 691	02	071	1-E24
43 02 972	02	073	1-F02
43 02 980	02	073	1-F02
43 02 998	02	075	1-F04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 03 186	02	159	1-I16
43 03 186	08A	041	4-D18
43 03 186	08A	043	4-D20
43 03 608	08A	091	4-F20
43 03 616	08A	091	4-F20
43 03 699	08A	095	4-F24
43 03 707	08A	095	4-F24
43 03 731	08A	013	4-C14
43 03 913	08A	015	4-C16
43 03 921	08A	015	4-C16
43 03 962	08A	039	4-D16
43 04 234	08A	033	4-D10
43 04 234	08A	049	4-E02
43 04 242	08A	049	4-E02
43 04 242	08A	053	4-E06
43 04 341	08A	089	4-F18
43 04 465	08A	049	4-E02
43 04 564	08A	049	4-E02
43 04 663	08A	045	4-D22
43 04 663	08A	047	4-D24
43 04 846	08A	053	4-E06
43 04 911	03A	075	2-D04
43 04 929	03A	075	2-D04
43 05 033	08A	041	4-D18
43 05 033	08A	043	4-D20
43 05 181	08A	041	4-D18
43 05 181	08A	043	4-D20
43 05 199	08A	041	4-D18
43 05 199	08A	043	4-D20
43 05 330	08A	049	4-E02
43 05 603	08A	013	4-C14
43 05 777	08A	095	4-F24
43 05 918	08A	013	4-C14
43 06 031	08A	041	4-D18
43 06 049	08A	041	4-D18
43 06 056	08A	043	4-D20
43 06 064	08A	043	4-D20
43 06 106	08A	095	4-F24
43 06 114	08A	095	4-F24
43 06 122	08A	095	4-F24
43 06 130	08A	095	4-F24
43 06 171	08A	025	4-D02
43 06 205	08A	091	4-F20
43 06 213	08A	091	4-F20
43 06 221	08A	091	4-F20
43 06 239	08A	091	4-F20
43 06 247	08A	091	4-F20
43 06 254	08A	091	4-F20
43 06 262	08A	115	4-G20
43 06 296	08A	089	4-F18
43 06 411	08A	[illegible]	4-E06
43 06 437	[illegible]	[illegible]	5-A16
43 06 486	[illegible]	119	4-G24
43 06 510	08A	023	4-C24
43 06 791	08A	041	4-D18
43 06 791	08A	043	4-D20
43 06 809	08A	041	4-D18
43 06 809	08A	043	4-D20
43 07 054	03A	057	2-C10
43 07 476	08A	095	4-F24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 09 555	08B	031	5-B08
43 09 563	08B	031	5-B08
43 09 571	08B	031	5-B08
43 09 589	08B	135	5-F16
43 10 157	08B	031	5-B08
43 10 165	08B	031	5-B08
43 10 249	08B	031	5-B08
43 10 256	08B	031	5-B08
43 10 264	08B	031	5-B08
43 10 272	08B	031	5-B08
43 11 023	08B	191	5-H24
43 11 031	08B	191	5-H24
43 11 049	08B	191	5-H24
43 11 056	08B	191	5-H24
43 11 270	06	007	4-A08
43 12 625	08B	153	5-G10
43 12 906	08B	009	5-A10
43 12 948	08B	155	5-G12
43 12 948	08B	159	5-G16
43 12 948	08B	161	5-G18
43 12 948	08B	163	5-G20
43 12 948	08B	167	5-G24
43 12 948	08B	169	5-H02
43 12 948	08B	173	5-H06
43 12 948	08B	177	5-H10
43 13 748	08B	149	5-G06
43 13 797	08B	149	5-G06
43 13 805	08B	149	5-G06
43 13 821	08B	157	5-G14
43 13 821	08B	163	5-G20
43 13 839	08B	157	5-G14
43 13 839	08B	163	5-G20
43 13 854	08B	157	5-G14
43 13 862	08B	157	5-G14
43 13 870	08B	155	5-G12
43 13 870	08B	161	5-G18
43 13 888	08B	155	5-G12
43 13 888	08B	161	5-G18
43 13 987	08B	149	5-G06
43 14 001	03A	089	2-D18
43 14 209	06	007	4-A08
43 14 407	08B	015	5-A16
43 14 423	08B	015	5-A16
43 14 431	08B	015	5-A16
43 14 480	08B	017	5-A18
43 14 506	08B	017	5-A18
43 14 514	08B	017	5-A18
43 14 555	08B	039	5-B16
43 14 555	08B	045	5-B22
43 14 555	08B	051	5-C04
43 14 563	08B	039	5-B16
43 14 563	08B	045	5-B22
43 14 563	08B	051	5-C04
43 14 563	08B	059	5-C12
43 14 571	08B	039	5-B16
43 14 571	08B	045	5-B22
43 14 571	08B	051	5-C04
43 14 571	08B	059	5-C12
43 14 589	08B	039	5-B16
43 14 589	08B	045	5-B22

6-A12 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 14 589	08B	051	5-C04
43 14 662	08B	191	5-H24
43 14 670	08B	191	5-H24
43 14 720	08B	193	5-I02
43 14 738	08B	193	5-I02
43 14 829	08B	031	5-B08
43 14 837	08B	031	5-B08
43 14 845	08B	031	5-B08
43 15 206	08B	039	5-B16
43 15 206	08B	045	5-B22
43 15 206	08B	051	5-C04
43 15 214	08B	039	5-B16
43 15 214	08B	045	5-B22
43 15 214	08B	051	5-C04
43 15 214	08B	059	5-C12
43 15 222	08B	039	5-B16
43 15 222	08B	045	5-B22
43 15 222	08B	051	5-C04
43 15 222	08B	059	5-C12
43 15 305	08B	153	5-G10
43 15 339	08B	155	5-G12
43 15 339	08B	161	5-G18
43 15 347	08B	155	5-G12
43 15 347	08B	161	5-G18
43 15 354	08B	157	5-G14
43 15 362	08B	157	5-G14
43 15 370	08B	155	5-G12
43 15 370	08B	161	5-G18
43 15 396	08B	155	5-G12
43 15 396	08B	161	5-G18
43 15 412	08B	159	5-G16
43 15 412	08B	163	5-G20
43 15 412	08B	169	5-H02
43 15 412	08B	179	5-H12
43 15 503	08B	039	5-B16
43 15 503	08B	045	5-B22
43 15 503	08B	051	5-C04
43 15 511	08B	039	5-B16
43 15 511	08B	045	5-B22
43 15 511	08B	051	5-C04
43 15 529	08B	039	5-B16
43 15 529	08B	045	5-B22
43 15 529	08B	051	5-C04
43 15 552	08B	039	5-B16
43 15 552	08B	045	5-B22
43 15 552	08B	051	5-C04
43 15 560	08B	039	5-B16
43 15 560	08B	045	5-B22
43 15 560	08B	051	5-C04
43 15 594	08B	039	5-B16
43 15 602	08B	039	5-B16
43 15 602	08B	045	5-B22
43 15 602	08B	051	5-C04
43 15 602	08B	059	5-C12
43 15 610	08B	039	5-B16
43 15 610	08B	045	5-B22
43 15 628	08B	039	5-B16
43 15 636	08B	039	5-B16
43 15 644	08B	039	5-B16
43 15 644	08B	045	5-B22

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 15 644	08B	051	5-C04
43 15 644	08B	059	5-C12
43 15 651	08B	039	5-B16
43 15 651	08B	045	5-B22
43 15 669	08B	039	5-B16
43 15 925	08B	033	5-B10
43 15 933	08B	033	5-B10
43 15 958	08B	033	5-B10
43 16 006	08B	033	5-B10
43 16 014	08B	033	5-B10
43 16 022	08B	033	5-B10
43 16 030	08B	033	5-B10
43 16 048	08B	033	5-B10
43 16 436	08B	029	5-B06
43 16 436	08B	041	5-B18
43 16 444	08B	029	5-B06
43 16 444	08B	041	5-B18
43 16 469	08B	029	5-B06
43 16 469	08B	041	5-B18
43 16 592	08B	029	5-B06
43 16 592	08B	041	5-B18
43 16 600	08B	029	5-B06
43 16 600	08B	041	5-B18
43 16 626	08B	029	5-B06
43 16 626	08B	041	5-B18
43 16 865	08B	029	5-B06
43 16 873	08B	029	5-B06
43 16 881	08B	029	5-B06
43 16 881	08B	041	5-B18
43 16 907	08B	029	5-B06
43 16 907	08B	041	5-B18
43 16 907	08B	047	5-B24
43 16 907	08B	053	5-C06
43 16 907	08B	061	5-C14
43 16 972	08B	029	5-B06
43 16 980	08B	029	5-B06
43 16 998	08B	029	5-B06
43 17 004	08B	029	5-B06
43 17 012	08B	029	5-B06
43 17 020	08B	029	5-B06
43 17 038	08B	029	5-B06
43 17 046	08B	029	5-B06
43 17 053	08B	029	5-B06
43 17 053	08B	041	5-B18
43 17 061	08B	029	5-B06
43 17 061	08B	041	5-B18
43 17 061	08B	047	5-B24
43 17 061	08B	053	5-C06
43 17 061	08B	061	5-C14
43 17 137	08B	029	5-B06
43 17 145	08B	029	5-B06
43 18 028	08C	023	5-J24
43 18 036	08C	019	5-J20
43 18 044	08C	019	5-J20
43 18 051	08C	019	5-J20
43 18 093	08C	015	5-J16
43 18 135	08C	015	5-J16
43 18 143	08C	015	5-J16
43 18 150	08C	015	5-J16
43 18 168	08C	015	5-J16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 18 175	08C	015	5-J16
43 18 192	08C	015	5-J16
43 18 218	08C	019	5-J20
43 18 234	08C	019	5-J20
43 18 242	08C	019	5-J20
43 18 499	08A	017	4-C18
43 18 598	08A	017	4-C18
43 18 606	08A	017	4-C18
43 18 705	08C	021	5-J22
43 18 762	03A	091	2-D20
43 18 770	03A	091	2-D20
43 18 788	03A	091	2-D20
43 18 861	08C	015	5-J16
43 19 075	08C	021	5-J22
43 19 117	08C	019	5-J20
43 19 125	08C	019	5-J20
43 19 133	08C	019	5-J20
43 19 158	08C	019	5-J20
43 19 190	08C	009	5-J10
43 19 240	08C	017	5-J18
43 19 588	08C	023	5-J24
43 19 646	08C	019	5-J20
43 19 968	08A	007	4-C08
43 20 016	08A	075	4-F04
43 20 123	03A	071	2-C24
43 20 255	03A	055	2-C08
43 20 453	03A	069	2-C18
43 20 461	08A	101	4-G06
43 20 479	08A	105	4-G10
43 20 529	08A	105	4-G10
43 20 545	03A	087	2-D16
43 20 594	03A	051	2-C04
43 20 594	03A	053	2-C06
43 21 808	08A	031	4-D08
43 33 480	08A	019	4-C20
43 33 480	08A	029	4-D06
43 33 498	08A	029	4-D06
43 33 563	08A	005	4-C06
43 40 626	08A	103	4-G08
43 40 634	08A	103	4-G08
43 40 964	08A	075	4-F04
43 40 998	03A	043	2-B20
43 41 095	03A	045	2-B22
43 41 095	03A	047	2-B24
43 41 111	03A	071	2-C24
43 41 145	03A	071	2-C24
43 41 194	03A	055	2-C08
43 41 830	08A	069	4-E22
43 41 848	08A	069	4-E22
43 41 855	08A	069	4-E22
43 41 863	08A	069	4-E22
43 41 871	08A	069	4-E22
43 41 889	08A	069	4-E22
43 41 897	08A	071	4-E24
43 41 905	08A	071	4-E24
43 42 275	08A	077	4-F06
43 42 283	08A	079	4-F08
43 42 937	03A	043	2-B20
43 42 945	03A	043	2-B20
43 43 [illegible]	03A	035	2-B12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
43 43 182	08A	065	4-E18
43 43 190	08A	065	4-E18
43 43 802	08A	103	4-G08
43 43 919	03A	051	2-C04
43 43 927	03A	051	2-C04
43 43 935	03A	051	2-C04
43 43 943	03A	051	2-C04
43 43 968	08A	065	4-E18
43 43 976	08A	065	4-E18
43 44 032	03A	043	2-B20
43 44 040	03A	043	2-B20
43 44 057	03A	043	2-B20
43 44 065	03A	043	2-B20
43 44 198	03A	045	2-B22
43 44 198	03A	047	2-B24
43 44 206	03A	045	2-B22
43 44 206	03A	047	2-B24
43 44 214	08A	073	4-F02
43 44 222	03A	053	2-C06
43 44 826	08A	075	4-F04
43 44 826	08A	117	4-G22
43 44 834	03A	055	2-C08
43 45 716	02	047	1-D24
43 46 235	04	015	3-G16
43 46 235	04	045	3-H22
43 46 508	02	083	1-F12
43 46 508	02	085	1-F14
43 46 508	02	087	1-F16
43 46 748	04	013	3-G14
43 46 748	04	071	3-I24
43 46 839	02	033	1-D10
43 46 854	02	029	1-D06
43 46 854	02	033	1-D10
43 46 854	02	037	1-D14
43 46 854	02	137	1-H18
43 46 854	02	149	1-I06
43 47 019	02	087	1-F16
43 47 282	02	087	1-F16
43 47 340	02	087	1-F16
43 47 654	02	091	1-F20
43 47 738	02	145	1-I02
43 47 902	02	123	1-H04
43 50 328	03A	045	2-B22
43 50 328	03A	047	2-B24
43 50 443	03A	081	2-D10
43 50 443	03A	085	2-D14
43 50 526	03B	015	3-A16
43 50 526	03B	037	3-B14
43 50 526	03B	061	3-C14
43 50 526	03B	083	3-D12
43 50 526	03B	101	3-E06
43 50 526	03B	111	3-E16
43 50 526	03B	121	3-F02
43 50 526	03B	131	3-F12
43 50 609	03B	105	3-E10
43 50 799	03A	173	2-H06
43 52 233	03A	107	2-E12
43 52 266	03A	113	2-E18
43 52 290	03A	113	2-E18
43 52 308	03A	113	2-E18

MASTER INDEX

0 General 1-A02
2 Engine 1-C02
3A Electrical, general 2-A02
3B Electrical, contact housing 3-A02
4 Transmission 3-G02
5 Brakes 3-K02
6 Front assembly, Steering 4-A02
7 Suspension, Wheels 4-B02
8A Body, external 4-C02
8B Body, internal 5-A02
8C Body, heating and ventilation 5-J02
8D Tools, Labels 5-K02
10 Numerical register 6-A02

6-A13 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
43 52 340	03A	113	2-E18
43 52 357	03A	105	2-E10
43 52 415	03A	107	2-E12
43 52 423	03A	107	2-E12
43 52 431	03A	107	2-E12
43 52 449	03A	107	2-E12
43 52 456	03A	107	2-E12
43 52 464	03A	113	2-E18
43 52 936	03B	023	3-A24
43 52 936	03B	045	3-B22
43 52 936	03B	067	3-C20
43 52 936	03B	091	3-D20
43 52 993	03A	163	2-G20
43 53 538	03A	199	2-I08
43 53 637	03B	069	3-C22
43 53 637	03B	093	3-D22
43 53 660	03A	155	2-G12
43 53 769	03A	161	2-G18
43 54 031	03A	089	2-D18
43 54 171	03B	011	3-A12
43 54 171	03B	033	3-B10
43 54 171	03B	057	3-C10
43 54 171	03B	079	3-D08
43 54 239	03B	047	3-B24
43 54 239	03B	069	3-C22
43 54 239	03B	093	3-D22
43 54 353	03B	025	3-B02
43 54 353	03B	047	3-B24
43 54 353	03B	069	3-C22
43 54 353	03B	093	3-D22
43 54 353	03B	097	3-C02
43 54 353	03B	107	3-E12
43 54 353	03B	117	3-E22
43 54 353	03B	127	3-F08
43 54 619	03A	119	2-E24
43 54 668	02	123	1-H04
43 54 692	03B	047	3-B24
43 54 692	03B	069	3-C22
43 54 692	03B	093	3-D22
43 54 817	03A	199	2-I08
43 56 267	02	141	1-H22
43 56 275	08C	015	5-J16
43 56 275	08C	017	5-J18
43 56 531	02	129	1-H10
43 56 549	02	129	1-H10
43 56 895	03A	011	2-A12
43 56 895	03A	013	2-A14
43 56 895	03A	015	2-A16
43 56 895	03A	017	2-A18
43 56 903	03A	011	2-A12
43 56 903	03A	013	2-A14
43 56 903	03A	015	2-A16
43 56 903	03A	017	2-A18
43 56 994	02	133	1-H14
43 57 133	02	133	1-H14
43 57 141	02	133	1-H14
43 57 299	02	129	1-H10
43 57 604	02	141	1-H22
43 57 778	08D	009	5-K10
43 58 040	02	125	1-H06
43 58 057	02	125	1-H06
43 58 115	02	133	1-H14
43 58 149	06	019	4-A20
43 58 313	02	009	1-C10
43 58 453	02	139	1-H20
43 58 479	02	127	1-H08
43 58 479	02	129	1-H10
43 58 818	02	009	1-C10
43 59 030	02	125	1-H06
43 59 444	08D	011	5-K12
43 59 709	02	125	1-H06
43 59 899	02	133	1-H14
43 60 269	02	111	1-G16
43 60 277	02	111	1-G16
43 60 293	02	125	1-H06
43 60 327	02	125	1-H06
43 60 327	02	129	1-H10
43 60 343	02	109	1-G14
43 60 343	02	111	1-G16
43 60 541	02	035	1-D12
43 60 681	02	109	1-G14
43 60 699	02	109	1-G14
43 60 707	02	107	1-G12
43 60 780	03A	105	2-E10
43 60 954	02	133	1-H14
43 60 962	02	133	1-H14
43 68 007	08B	135	5-F16
43 68 015	08B	135	5-F16
43 68 023	08B	135	5-F16
43 68 031	08B	135	5-F16
43 68 049	08B	135	5-F16
43 68 056	08B	135	5-F16
43 68 064	08B	135	5-F16
43 68 072	08B	135	5-F16
43 68 080	08B	145	5-G02
43 68 098	08B	145	5-G02
43 68 106	08B	145	5-G02
43 68 114	08B	145	5-G02
43 68 122	08B	145	5-G02
43 68 130	08B	145	5-G02
43 68 148	08B	145	5-G02
43 68 155	08B	145	5-G02
43 68 817	08B	185	5-H18
43 68 825	08B	185	5-H18
43 68 833	08B	185	5-H18
43 68 841	08B	185	5-H18
43 69 005	08B	185	5-H18
43 69 013	08B	185	5-H18
43 74 203	02	063	1-E16
43 74 211	02	063	1-E16
43 74 211	02	141	1-H22
43 74 245	02	087	1-F16
43 74 914	02	123	1-H04
43 80 036	08A	077	4-F06
43 80 036	08A	101	4-G06
43 80 283	08A	051	4-E04
43 80 317	03A	053	2-C06
43 80 325	03A	053	2-C06
43 80 382	03A	053	2-C06
43 80 416	08A	071	4-E24
43 80 424	08A	071	4-E24
43 80 515	03A	071	2-C24
43 81 448	03A	035	2-B12
43 81 455	03A	035	2-B12
43 81 778	03A	049	2-C02
43 81 778	03A	051	2-C04
43 81 786	03A	049	2-C02
43 81 786	03A	051	2-C04
43 81 844	03A	063	2-C16
43 81 844	03A	065	2-C18
43 81 844	03A	195	2-I04
43 81 851	03A	063	2-C16
43 81 851	03A	195	2-I04
43 81 901	08D	009	5-K10
43 82 115	08C	015	5-J16
43 82 404	08C	019	5-J20
43 82 420	08C	007	5-J08
43 82 479	08C	011	5-J12
43 82 487	08C	011	5-J12
43 82 545	08C	011	5-J12
43 82 610	08C	021	5-J22
43 82 628	08C	019	5-J20
43 82 743	08C	015	5-J16
43 82 768	08C	023	5-J24
43 82 800	08C	023	5-J24
43 82 818	08C	021	5-J22
43 82 826	08C	009	5-J10
43 82 933	08C	005	5-J06
43 82 990	08A	025	4-D02
43 83 030	03A	091	2-D20
43 83 063	08C	007	5-J08
43 83 063	08C	009	5-J10
43 83 071	08C	007	5-J08
43 83 071	08C	009	5-J10
43 83 170	08C	021	5-J22
43 83 188	08C	023	5-J24
43 83 212	08C	021	5-J22
43 83 238	08C	023	5-J24
43 83 394	08C	015	5-J16
43 83 584	08C	021	5-J22
43 83 600	08C	015	5-J16
43 83 659	08A	025	4-D02
43 83 667	08A	025	4-D02
43 83 790	08C	005	5-J06
43 84 046	04	041	3-H18
43 84 079	04	007	3-G08
43 84 244	02	043	1-D20
43 84 434	04	037	3-H14
43 84 442	04	037	3-H14
43 84 459	04	037	3-H14
43 84 475	04	043	3-H20
43 84 517	04	053	3-I06
43 84 525	04	053	3-I06
43 84 533	04	055	3-I08
43 84 582	04	059	3-I12
43 84 590	04	035	3-H12
43 84 657	04	057	3-I10
43 84 681	04	057	3-I10
43 84 715	04	057	3-I10
43 84 780	04	057	3-I10
43 84 806	04	057	3-I10
43 84 814	04	063	3-I16
43 84 962	04	049	3-I02
43 84 988	04	051	3-I04
43 84 996	04	051	3-I04
43 85 019	04	009	3-G10
43 85 027	04	009	3-G10
43 85 035	04	009	3-G10
43 85 043	04	007	3-G08
43 85 068	04	009	3-G10
43 85 167	04	007	3-G08
43 85 225	04	055	3-I08
43 85 266	04	049	3-I02
43 85 282	04	047	3-H24
43 85 474	04	055	3-I08
43 85 522	04	057	3-I10
43 85 720	04	047	3-H24
43 85 738	04	057	3-I10
43 85 761	04	067	3-I20
43 85 795	04	045	3-H22
43 87 528	04	039	3-H16
43 87 536	04	039	3-H16
43 87 544	04	015	3-G16
43 88 757	03A	029	2-B06
43 90 159	02	135	1-H16
43 90 167	02	135	1-H16
43 90 308	02	057	1-E10
43 90 423	02	061	1-E14
43 90 431	02	061	1-E14
43 90 589	02	135	1-H16
43 90 654	02	165	1-I22
43 90 670	02	097	1-G02
43 90 837	02	107	1-G12
43 90 852	02	107	1-G12
43 91 058	02	061	1-E14
43 91 157	02	161	1-I18
43 91 272	02	097	1-G02
43 91 314	02	087	1-F16
43 91 421	02	119	1-G24
43 91 421	02	123	1-H04
43 91 512	02	079	1-F08
43 91 538	02	063	1-E16
43 91 561	02	157	1-I14
43 91 942	02	067	1-E20
43 91 975	02	051	1-E04
43 92 312	08D	015	5-K16
43 92 403	02	091	1-F20
43 92 494	03A	167	2-G24
43 92 577	02	135	1-H16
43 92 601	03A	105	2-E10
43 92 775	04	039	3-H16
43 92 957	02	065	1-E18
43 93 070	08D	007	5-K08
43 93 088	08D	007	5-K08
43 93 096	08D	007	5-K08
43 93 104	08D	007	5-K08
43 93 112	08D	007	5-K08
43 93 120	08D	007	5-K08
43 93 138	08D	007	5-K08
43 93 195	02	065	1-E18

6-A14 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
43 93 328	02	079	1-F08
43 93 450	02	117	1-G22
43 93 500	02	079	1-F08
43 93 542	02	079	1-F08
43 93 583	02	117	1-G22
43 93 583	02	121	1-H02
43 93 898	02	113	1-G18
43 93 898	02	119	1-G24
43 94 060	02	111	1-G16
43 94 078	02	087	1-F16
43 94 078	02	107	1-G12
43 95 034	02	133	1-H14
43 95 190	02	111	1-G16
43 95 430	02	035	1-D12
43 95 448	03A	011	2-A12
43 95 448	03A	013	2-A14
43 95 448	03A	015	2-A16
43 95 448	03A	017	2-A18
43 95 455	03A	011	2-A12
43 95 455	03A	017	2-A18
43 95 463	02	035	1-D12
43 95 554	02	127	1-H08
43 95 554	02	129	1-H10
43 95 570	02	127	1-H08
43 95 570	02	129	1-H10
43 95 612	02	131	1-H12
43 95 620	02	131	1-H12
43 95 638	02	131	1-H12
43 95 646	02	131	1-H12
43 95 877	02	139	1-H20
43 96 248	02	133	1-H14
43 96 255	02	133	1-H14
43 96 347	02	139	1-H20
43 96 818	02	135	1-H16
43 97 048	02	061	1-E14
43 97 295	02	129	1-H10
43 97 311	02	015	1-C16
44 02 095	03A	155	2-G12
44 03 663	08B	025	5-B02
44 03 697	08B	025	5-B02
44 09 801	03B	117	3-E22
44 09 801	03B	127	3-F08
44 09 983	03A	013	2-A14
44 09 991	03A	013	2-A14
44 10 007	03A	013	2-A14
44 10 510	03B	043	3-B20
44 10 510	03B	065	3-C18
44 10 510	03B	087	3-D16
44 11 518	03B	043	3-B20
44 11 518	03B	065	3-C18
44 11 518	03B	087	3-D16
44 12 805	03A	019	2-A20
44 12 813	03A	019	2-A20
44 12 821	03A	019	2-A20
44 13 852	08B	191	5-H24
44 13 860	08B	191	5-H24
44 14 231	08B	031	5-B08
44 14 231	08B	041	5-B18
44 14 249	08B	031	5-B08
44 14 249	08B	041	5-B18
44 14 256	08B	031	5-B08
44 14 256	08B	041	5-B18
44 14 256	08B	047	5-B24
44 14 256	08B	053	5-C06
44 14 256	08B	061	5-C14
44 14 264	08B	031	5-B08
44 14 264	08B	041	5-B18
44 14 314	08B	047	5-B24
44 14 314	08B	043	5-B20
44 14 314	08B	049	5-C02
44 14 322	08B	037	5-B14
44 14 322	08B	043	5-B20
44 14 322	08B	049	5-C02
44 14 322	08B	055	5-C08
44 14 322	08B	063	5-C16
44 14 330	08B	037	5-B14
44 14 330	08B	043	5-B20
44 14 330	08B	049	5-C02
44 14 330	08B	055	5-C08
44 14 330	08B	057	5-C10
44 14 330	08B	063	5-C16
44 14 348	08B	037	5-B14
44 14 348	08B	043	5-B20
44 14 348	08B	049	5-C02
44 14 348	08B	055	5-C08
44 14 413	08B	031	5-B08
44 14 421	08B	031	5-B08
44 14 439	08B	031	5-B08
44 14 447	08B	031	5-B08
44 14 454	08B	031	5-B08
44 14 462	08B	031	5-B08
44 14 470	08B	037	5-B14
44 14 488	08B	037	5-B14
44 14 496	08B	037	5-B14
44 14 504	08B	037	5-B14
44 14 512	08B	037	5-B14
44 14 520	08B	037	5-B14
44 14 546	08B	147	5-G04
44 14 553	08B	147	5-G04
44 15 279	08B	153	5-G10
44 15 287	08B	153	5-G10
44 15 295	08B	145	5-G02
44 15 303	08B	145	5-G02
44 15 337	08B	145	5-G02
44 15 345	08B	145	5-G02
44 15 352	08B	145	5-G02
44 15 360	08B	145	5-G02
44 15 394	08B	145	5-G02
44 15 402	08B	145	5-G02
44 15 410	08B	145	5-G02
44 15 428	08B	145	5-G02
44 15 436	08B	145	5-G02
44 15 444	08B	145	5-G02
44 15 519	08B	015	5-A16
44 15 949	08B	031	5-B08
44 15 949	08B	041	5-B18
44 15 956	08B	031	5-B08
44 15 956	08B	041	5-B18
44 15 956	08B	047	5-B24
44 15 956	08B	053	5-C06
44 15 956	08B	061	5-C14
44 15 964	08B	031	5-B08
44 15 964	08B	037	5-B14
44 15 964	08B	041	5-B18
44 15 964	08B	043	5-B20
44 15 964	08B	047	5-B24
44 15 964	08B	049	5-C02
44 15 964	08B	051	5-C04
44 15 964	08B	053	5-C06
44 15 964	08B	055	5-C08
44 15 964	08B	059	5-C12
44 15 972	06	007	4-A08
44 16 061	06	009	4-A10
44 16 129	08B	017	5-A18
44 16 152	08B	015	5-A16
44 16 350	08B	153	5-G10
44 16 368	06	007	4-A08
44 16 525	08B	141	5-F22
44 16 525	08B	149	5-G06
44 16 582	06	009	4-A10
44 16 590	08B	191	5-H24
44 18 364	03A	165	2-G22
44 18 380	03B	069	3-C22
44 18 380	03B	093	3-D22
44 18 505	03B	011	3-A12
44 18 505	03B	033	3-B10
44 18 505	03B	043	3-B20
44 18 505	03B	057	3-C10
44 18 505	03B	065	3-C18
44 18 505	03B	071	3-C24
44 18 505	03B	079	3-D08
44 18 505	03B	087	3-D16
44 18 505	03B	105	3-E10
44 18 505	03B	115	3-E20
44 18 505	03B	125	3-F06
44 18 505	03B	135	3-F16
44 19 305	03B	011	3-A12
44 19 305	03B	033	3-B10
44 19 305	03B	057	3-C10
44 19 305	03B	079	3-D08
44 19 313	03B	011	3-A12
44 19 313	03B	033	3-B10
44 19 313	03B	057	3-C10
44 19 313	03B	079	3-D08
44 19 529	03A	165	2-G22
44 19 545	03A	165	2-G22
44 24 172	03A	105	2-E10
44 24 602	06	017	4-A18
44 24 800	06	017	4-A18
44 24 917	03A	105	2-E10
44 24 958	05	013	3-K14
44 25 104	06	017	4-A18
44 25 120	06	017	4-A18
44 25 310	07	011	4-B12
44 25 468	05	013	3-K14
44 25 476	07	011	4-B12
44 25 534	04	039	3-H16
44 25 534	04	071	3-I24
44 25 534	04	073	3-J02
44 25 575	07	015	4-B16
44 25 575	07	019	4-B20
44 25 583	07	015	4-B16
44 25 583	07	019	4-B20
44 25 690	05	009	3-K10
44 25 690	05	027	3-L04
44 25 708	05	011	3-K12
44 25 724	05	011	3-K12
44 25 732	05	009	3-K10
44 25 740	05	027	3-L04
44 25 773	05	013	3-K14
44 26 003	06	005	4-A06
44 26 219	08A	005	4-C06
44 26 227	08A	005	4-C06
44 26 326	07	011	4-B12
44 26 375	05	013	3-K14
44 26 474	05	017	3-K18
44 26 490	05	015	3-K16
44 26 490	05	017	3-K18
44 26 508	05	015	3-K16
44 26 508	05	017	3-K18
44 26 532	02	155	1-I12
44 26 573	08D	009	5-K10
44 26 730	07	007	4-B08
44 26 730	07	009	4-B10
44 26 854	07	011	4-B12
44 26 862	07	011	4-B12
44 26 946	07	013	4-B14
44 26 953	07	023	4-B24
44 26 961	07	023	4-B24
44 27 068	08B	019	5-A20
44 27 084	08B	019	5-A20
44 27 092	08B	019	5-A20
44 27 308	08B	017	5-A18
44 27 324	08B	017	5-A18
44 27 332	08B	017	5-A18
44 27 506	03A	191	2-H24
44 27 852	03A	093	2-D22
44 27 860	08B	009	5-A10
44 27 886	08B	009	5-A10
44 27 894	08B	009	5-A10
44 27 928	03A	169	2-H02
44 27 985	08B	015	5-A16
44 27 993	03A	169	2-H02
44 28 041	08B	017	5-A18
44 28 074	08B	017	5-A18
44 28 215	08B	019	5-A20
44 28 512	03A	191	2-H24
44 28 546	03A	191	2-H24
44 28 553	03A	191	2-H24
44 28 561	03A	191	2-H24
44 28 587	03A	191	2-H24
44 28 611	03A	191	2-H24
44 28 629	03A	191	2-H24
44 28 637	03A	191	2-H24
44 28 645	03A	191	2-H24
44 28 652	03A	191	2-H24
44 28 660	03A	191	2-H24
44 28 678	03A	191	2-H24
44 28 686	03A	191	2-H24
44 30 153	03A	107	2-E12
44 30 153	06	021	4-A22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A15 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
44 30 393	03A	107	2-E12
44 30 401	03A	107	2-E12
44 30 500	03A	107	2-E12
44 30 542	03A	107	2-E12
44 30 609	03A	107	2-E12
44 30 625	03A	107	2-E12
44 30 757	03A	107	2-E12
44 31 086	03A	107	2-E12
44 32 316	03B	015	3-A16
44 32 316	03B	035	3-B12
44 32 316	03B	059	3-C12
44 32 316	03B	081	3-D10
44 32 357	03B	039	3-B16
44 32 357	03B	061	3-C14
44 32 365	03B	039	3-B16
44 32 365	03B	061	3-C14
44 32 365	03B	083	3-D12
44 32 449	03A	109	2-E14
44 32 472	03A	113	2-E18
44 32 472	03A	121	2-F02
44 32 472	03A	133	2-F14
44 32 472	03A	143	2-F24
44 32 472	03A	151	2-G08
44 32 480	03A	113	2-E18
44 32 480	03A	121	2-F02
44 32 480	03A	133	2-F14
44 32 480	03A	143	2-F24
44 32 480	03A	151	2-G08
44 32 589	03A	085	2-D14
44 32 589	03A	167	2-G24
44 32 605	03A	167	2-G24
44 32 662	03A	107	2-E12
44 32 662	03A	117	2-E22
44 32 662	03A	127	2-F08
44 32 662	03A	139	2-F20
44 32 662	03A	147	2-G04
44 32 688	08D	011	5-K12
44 32 704	08D	011	5-K12
44 32 753	03A	167	2-G24
44 32 761	03A	167	2-G24
44 32 779	03A	167	2-G24
44 32 969	02	169	1-J02
44 33 033	03A	107	2-E12
44 33 058	03A	107	2-E12
44 33 066	03A	107	2-E12
44 33 082	03A	107	2-E12
44 33 090	08D	011	5-K12
44 33 108	03A	085	2-D14
44 33 116	03A	085	2-D14
44 33 165	03A	109	2-E14
44 33 173	03A	115	2-E20
44 33 181	03A	115	2-E20
44 33 298	03A	089	2-D18
44 33 306	02	169	1-J02
44 33 439	03B	033	3-B10
44 33 439	03B	057	3-C10
44 33 439	03B	079	3-D08
44 33 488	02	113	1-G18
44 33 488	02	119	1-G24
44 33 488	02	123	1-H04
44 33 793	03A	119	2-E24
44 33 793	03A	131	2-F12
44 33 793	03A	141	2-F22
44 33 801	03A	175	2-H08
44 33 801	03A	179	2-H12
44 33 801	03A	183	2-H16
44 33 801	03A	187	2-H20
44 33 827	03A	081	2-D10
44 33 884	03A	119	2-E24
44 33 918	03A	113	2-E18
44 33 959	03A	123	2-F04
44 33 967	03A	167	2-G24
44 34 023	03A	167	2-G24
44 34 031	03B	069	3-C22
44 34 031	03B	093	3-D22
44 34 056	03A	013	2-A14
44 34 072	03A	015	2-A16
44 35 129	08A	079	4-F08
44 35 137	08A	079	4-F08
44 35 145	08A	123	4-H04
44 35 152	08A	123	4-H04
44 35 178	08A	077	4-F06
44 35 186	08A	079	4-F08
44 35 202	08A	121	4-H02
44 35 210	08A	121	4-H02
44 35 327	08A	101	4-G06
44 35 442	08A	075	4-F04
44 35 681	08A	059	4-E12
44 35 707	08A	059	4-E12
44 35 715	08A	059	4-E12
44 35 731	08A	059	4-E12
44 35 749	08A	059	4-E12
44 35 764	08A	059	4-E12
44 35 772	08A	059	4-E12
44 35 798	08A	059	4-E12
44 35 806	08A	059	4-E12
44 35 822	08A	059	4-E12
44 35 830	08A	059	4-E12
44 35 855	08A	059	4-E12
44 35 863	08A	059	4-E12
44 35 889	08A	059	4-E12
44 35 897	08A	059	4-E12
44 35 913	08A	059	4-E12
44 35 939	08A	035	4-D12
44 35 947	08A	059	4-E12
44 35 962	08A	059	4-E12
44 35 970	08A	059	4-E12
44 35 996	08A	059	4-E12
44 36 093	03A	191	2-H24
44 36 101	03A	191	2-H24
44 36 119	03A	191	2-H24
44 36 127	03A	191	2-H24
44 36 218	08B	015	5-A16
44 36 325	08B	009	5-A10
44 36 333	08B	009	5-A10
44 36 358	08B	005	5-A06
44 36 366	08B	005	5-A06
44 36 382	08B	005	5-A06
44 36 390	08B	005	5-A06
44 36 481	08B	005	5-A06
44 36 499	08B	005	5-A06
44 36 507	08B	005	5-A06
44 36 515	08B	005	5-A06
44 36 655	08B	015	5-A16
44 36 663	08B	015	5-A16
44 37 208	03A	193	2-I02
44 37 216	03A	193	2-I02
44 37 224	03A	193	2-I02
44 37 224	03A	195	2-I04
44 38 222	03A	193	2-I02
44 38 230	03A	193	2-I02
44 38 255	03A	077	2-D06
44 38 438	08B	009	5-A10
44 38 446	08B	009	5-A10
44 38 636	08B	015	5-A16
44 39 014	03A	077	2-D06
44 39 113	03A	097	2-E02
44 39 121	03A	097	2-E02
44 39 477	03A	077	2-D06
44 39 758	08B	005	5-A06
44 39 766	08B	005	5-A06
44 40 079	02	063	1-E16
44 40 087	02	063	1-E16
44 40 129	02	063	1-E16
44 40 137	02	063	1-E16
44 40 145	02	123	1-H04
44 40 210	02	043	1-D20
44 40 251	02	043	1-D20
44 40 269	08D	015	5-K16
44 40 574	02	059	1-E12
44 40 608	02	163	1-I20
44 40 699	08D	007	5-K08
44 40 707	08D	007	5-K08
44 40 715	08D	007	5-K08
44 40 723	08D	007	5-K08
44 40 731	08D	007	5-K08
44 40 749	08D	007	5-K08
44 40 756	08D	007	5-K08
44 40 764	08D	007	5-K08
44 40 772	08D	007	5-K08
44 40 780	08D	007	5-K08
44 40 939	02	087	1-F16
44 41 184	02	063	1-E16
44 41 432	08D	007	5-K08
44 41 499	02	033	1-D10
44 41 671	08D	015	5-K16
44 41 689	02	061	1-E14
44 41 697	02	061	1-E14
44 41 853	02	079	1-F08
44 41 887	02	059	1-E12
44 41 945	02	067	1-E20
44 41 994	02	181	1-I18
44 42 166	02	[illegible]	1-G24
44 42 190	02	087	1-F16
44 42 240	02	087	1-F16
44 42 307	02	059	1-E12
44 42 307	02	091	1-F20
44 42 422	02	159	1-I16
44 42 471	02	079	1-F08
44 42 489	02	079	1-F08
44 42 505	02	123	1-H04
44 42 521	02	159	1-I16
44 43 206	02	145	1-I02
44 43 214	02	037	1-D14
44 43 230	02	111	1-G16
44 43 313	02	105	1-G10
44 43 750	03A	021	2-A22
44 43 768	03A	021	2-A22
44 43 776	03A	021	2-A22
44 43 784	03A	021	2-A22
44 43 883	02	063	1-E16
44 43 958	02	123	1-H04
44 44 097	08D	007	5-K08
44 44 105	08D	007	5-K08
44 44 113	08D	007	5-K08
44 44 741	03A	027	2-B04
44 45 912	08D	007	5-K08
44 46 258	08A	103	4-G08
44 46 266	08A	101	4-G06
44 46 290	08A	077	4-F06
44 46 290	08A	099	4-G04
44 46 290	08A	101	4-G06
44 46 290	08A	103	4-G08
44 46 290	08A	105	4-G10
44 46 605	08A	035	4-D12
44 46 944	08D	009	5-K10
44 47 116	08A	077	4-F06
44 47 116	08A	121	4-H02
44 47 124	08A	077	4-F06
44 47 124	08A	121	4-H02
44 47 330	08A	103	4-G08
44 47 447	08A	103	4-G08
44 47 603	08A	077	4-F06
44 47 611	08A	077	4-F06
44 47 629	08A	077	4-F06
44 47 637	08A	077	4-F06
44 47 736	03A	035	2-B12
44 47 744	03A	035	2-B12
44 47 751	03A	035	2-B12
44 47 868	08A	103	4-G08
44 47 967	08A	063	4-E16
44 47 967	08A	067	4-E20
44 47 967	08A	071	4-E24
44 47 967	08A	079	4-F08
44 48 049	03A	063	2-C16
44 48 056	03A	063	2-C16
44 48 064	03A	195	2-I04
44 48 536	08A	049	4-E02
44 48 544	08A	049	4-E02
44 48 817	03A	061	2-C14
44 48 825	03A	061	2-C14
44 48 833	03A	061	2-C14
44 48 841	03A	061	2-C14
44 48 866	08A	077	4-F06
44 48 874	08A	077	4-F06
44 48 999	03A	055	2-C08
44 64 343	03B	107	3-E12
44 64 343	03B	117	3-E22
44 64 343	03B	127	3-F08
44 66 439	03A	077	2-D06

6-A16 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
44 66 801	03B	037	3-B14
44 66 801	03B	059	3-C12
44 66 801	03B	081	3-D10
44 66 801	03B	125	3-F06
44 66 801	03B	135	3-F16
44 66 900	03A	019	2-A20
44 66 918	03A	015	2-A16
44 66 918	03A	019	2-A20
44 66 967	03A	077	2-D06
44 67 064	05	007	3-K08
44 67 064	05	027	3-L04
44 68 930	03A	043	2-B20
44 68 930	03A	051	2-C04
44 74 011	08B	033	5-B10
44 74 029	08B	029	5-B06
44 74 029	08B	041	5-B18
44 74 029	08B	047	5-B24
44 74 029	08B	053	5-C06
44 74 029	08B	061	5-C14
44 74 037	08B	029	5-B06
44 74 037	08B	041	5-B18
44 74 037	08B	047	5-B24
44 74 037	08B	053	5-C06
44 74 037	08B	061	5-C14
44 74 136	08B	033	5-B10
44 74 151	08B	035	5-B12
44 74 151	08B	043	5-B20
44 74 151	08B	049	5-C02
44 74 151	08B	055	5-C08
44 74 151	08B	063	5-C16
44 74 177	08B	035	5-B12
44 74 177	08B	043	5-B20
44 74 185	08B	031	5-B08
44 74 599	08B	037	5-B14
44 74 599	08B	043	5-B20
44 74 599	08B	049	5-C02
44 74 599	08B	055	5-C08
44 74 599	08B	057	5-C10
44 74 599	08B	063	5-C16
44 74 607	08B	037	5-B14
44 74 607	08B	043	5-B20
44 74 730	06	009	4-A10
44 75 091	08B	037	5-B14
44 75 109	08B	037	5-B14
44 75 117	08B	037	5-B14
44 75 125	08B	037	5-B14
44 75 141	08B	037	5-B14
44 75 158	08B	037	5-B14
44 75 166	08B	037	5-B14
44 75 174	08B	037	5-B14
44 75 182	08B	037	5-B14
44 75 281	08B	167	5-G24
44 75 299	08B	167	5-G24
44 75 513	08B	145	5-G02
44 75 513	08B	195	5-I04
44 75 539	08B	155	5-G12
44 75 539	08B	161	5-G18
44 75 539	08B	167	5-G24
44 75 535	08B	177	5-H10
44 75 539	08B	195	5-I04
44 75 547	08B	159	5-G16
44 75 547	08B	165	5-G22
44 75 547	08B	171	5-H04
44 75 547	08B	179	5-H12
44 75 547	08B	195	5-I04
44 77 022	04	007	3-G08
44 77 048	04	009	3-G10
44 77 097	04	045	3-H22
44 77 139	04	037	3-H14
44 77 147	04	037	3-H14
44 77 162	04	049	3-I02
44 77 204	04	037	3-H14
44 77 238	04	045	3-H22
44 77 311	04	047	3-H24
44 77 337	04	055	3-I08
44 77 360	04	055	3-I08
44 77 378	04	047	3-H24
44 77 386	04	063	3-I16
44 77 394	04	045	3-H22
44 77 485	04	055	3-I08
44 77 493	04	049	3-I02
44 77 550	04	049	3-I02
44 77 576	04	053	3-I06
44 77 774	04	065	3-I18
44 77 824	04	037	3-H14
44 77 832	04	009	3-G10
44 77 873	04	037	3-H14
44 77 899	04	069	3-I22
44 77 907	04	069	3-I22
44 78 129	04	049	3-I02
44 78 327	04	043	3-H20
44 78 376	04	055	3-I08
44 78 780	04	043	3-H20
44 78 798	04	063	3-I16
44 78 806	04	045	3-H22
44 78 814	04	043	3-H20
44 78 855	04	061	3-I14
44 78 855	04	079	3-J08
44 78 947	04	059	3-I12
44 78 970	04	061	3-I14
44 78 970	04	079	3-J08
44 79 002	08B	025	5-B02
44 79 010	08B	025	5-B02
44 81 339	08D	013	5-K14
44 82 139	08D	015	5-K16
44 84 150	08A	049	4-E02
44 84 259	03A	057	2-C10
44 84 267	08A	061	4-E14
44 84 275	08A	061	4-E14
44 84 283	08A	061	4-E14
44 84 283	08A	065	4-E18
44 84 291	08A	061	4-E14
44 84 291	08A	065	4-E18
44 84 689	08A	101	4-G06
44 84 713	08A	105	4-G10
44 84 739	08A	079	4-F08
44 84 796	08A	077	4-F06
44 84 796	08A	121	4-H02
44 84 978	08A	049	4-E02
44 85 009	08B	117	5-E22
44 85 009	08B	121	5-F02
44 85 009	08B	123	5-F04
44 85 009	08B	127	5-F08
44 85 009	08B	131	5-F12
44 85 041	08B	117	5-E22
44 85 041	08B	121	5-F02
44 85 041	08B	123	5-F04
44 85 041	08B	125	5-F06
44 85 041	08B	129	5-F10
44 85 074	08B	117	5-E22
44 85 074	08B	121	5-F02
44 85 074	08B	123	5-F04
44 85 074	08B	125	5-F06
44 85 074	08B	129	5-F10
44 85 090	08B	117	5-E22
44 85 090	08B	121	5-F02
44 85 090	08B	123	5-F04
44 85 090	08B	127	5-F08
44 85 090	08B	131	5-F12
44 85 108	08B	117	5-E22
44 85 108	08B	121	5-F02
44 85 108	08B	123	5-F04
44 85 108	08B	125	5-F06
44 85 108	08B	129	5-F10
44 85 124	08B	117	5-E22
44 85 124	08B	121	5-F02
44 85 124	08B	123	5-F04
44 85 124	08B	127	5-F08
44 85 124	08B	131	5-F12
44 85 967	08B	089	5-D18
44 85 991	08B	089	5-D18
44 86 049	08B	089	5-D18
44 86 072	08B	089	5-D18
44 86 080	08B	065	5-C18
44 86 080	08B	077	5-D06
44 86 098	08B	065	5-C18
44 86 106	08B	065	5-C18
44 86 114	08B	065	5-C18
44 86 114	08B	077	5-D06
44 86 122	08B	067	5-C20
44 86 130	08B	067	5-C20
44 86 148	08B	067	5-C20
44 86 155	08B	067	5-C20
44 86 163	08B	065	5-C18
44 86 163	08B	079	5-D08
44 86 171	08B	065	5-C18
44 86 189	08B	065	5-C18
44 86 197	08B	065	5-C18
44 86 197	08B	079	5-D08
44 86 205	08B	065	5-C18
44 86 205	08B	077	5-D06
44 86 205	08B	089	5-D18
44 86 205	08B	097	5-E02
44 86 213	08B	065	5-C18
44 86 213	08B	077	5-D06
44 86 213	08B	089	5-D18
44 86 213	08B	097	5-E02
44 86 221	08B	067	5-C20
44 86 239	08B	067	5-C20
44 86 270	08B	093	5-D22
44 86 288	08B	093	5-D22
44 86 312	08B	093	5-D22
44 86 320	08B	093	5-D22
44 86 338	08B	071	5-C24
44 86 338	08B	083	5-D12
44 86 346	08B	071	5-C24
44 86 346	08B	083	5-D12
44 86 353	08B	071	5-C24
44 86 361	08B	071	5-C24
44 86 379	08B	071	5-C24
44 86 379	08B	085	5-D14
44 86 387	08B	071	5-C24
44 86 387	08B	085	5-D14
44 86 403	08B	071	5-C24
44 86 411	08B	071	5-C24
44 86 429	08B	071	5-C24
44 86 429	08B	083	5-D12
44 86 429	08B	093	5-D22
44 86 429	08B	101	5-E06
44 86 437	08B	071	5-C24
44 86 437	08B	083	5-D12
44 86 437	08B	093	5-D22
44 86 437	08B	101	5-E06
44 86 585	08B	133	5-F14
44 86 593	08B	133	5-F14
44 86 627	08B	133	5-F14
44 86 635	08B	133	5-F14
44 86 643	08B	133	5-F14
44 86 650	08B	133	5-F14
44 86 668	08B	133	5-F14
44 86 676	08B	133	5-F14
44 86 684	03A	059	2-C12
44 86 817	08B	189	5-H22
44 86 825	08B	189	5-H22
44 87 781	08B	065	5-C18
44 87 781	08B	077	5-D06
44 87 799	08B	065	5-C18
44 87 799	08B	077	5-D06
44 87 807	08B	065	5-C18
44 87 807	08B	077	5-D06
44 87 815	08B	065	5-C18
44 87 815	08B	077	5-D06
44 87 849	08B	065	5-C18
44 87 856	08B	065	5-C18
44 87 864	08B	065	5-C18
44 87 872	08B	065	5-C18
44 87 906	08B	065	5-C18
44 87 914	08B	065	5-C18
44 87 922	08B	065	5-C18
44 87 930	08B	065	5-C18
44 87 963	08B	065	5-C18
44 87 963	08B	077	5-D06
44 87 971	08B	065	5-C18
44 87 971	08B	077	5-D06
44 87 989	08B	065	5-C18
44 87 989	08B	077	5-D06
44 87 997	08B	065	5-C18
44 87 997	08B	077	5-D06
44 89 308	03A	013	2-A14
44 89 308	03A	015	2-A16

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-A17 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
44 89 308	03A	019	2-A20
44 89 316	03A	013	2-A14
44 89 316	03A	015	2-A16
44 89 316	03A	019	2-A20
44 89 647	03B	037	3-B14
44 89 761	03A	013	2-A14
44 89 761	03A	015	2-A16
44 91 478	04	069	3-I22
44 91 486	04	069	3-I22
44 91 734	04	049	3-I02
44 91 833	04	055	3-I08
44 91 882	04	067	3-I20
44 91 908	04	057	3-I10
44 91 940	04	055	3-I08
44 91 973	04	035	3-H12
44 91 981	04	057	3-I10
44 91 981	04	079	3-J08
44 91 999	04	053	3-I06
44 93 219	08A	095	4-F24
44 93 227	08A	095	4-F24
44 93 235	08A	095	4-F24
44 93 243	08A	095	4-F24
44 93 276	03A	101	2-E06
44 93 912	08A	049	4-E02
44 93 912	08A	053	4-E06
44 94 464	08A	031	4-D08
44 94 993	08A	097	4-G02
44 95 271	08B	151	5-G08
44 95 313	08B	151	5-G08
44 95 354	08B	149	5-G06
44 95 396	08B	149	5-G06
44 95 412	08B	149	5-G06
44 95 420	08B	149	5-G06
44 95 438	08B	151	5-G08
44 95 479	08B	169	5-H02
44 95 479	08B	179	5-H12
44 95 487	08B	169	5-H02
44 95 487	08B	179	5-H12
44 95 495	08B	167	5-G24
44 95 503	08B	167	5-G24
44 95 552	08B	169	5-H02
44 95 552	08B	179	5-H12
44 95 560	08B	169	5-H02
44 95 560	08B	179	5-H12
44 95 578	08B	167	5-G24
44 95 586	08B	167	5-G24
44 96 758	08B	135	5-F16
44 96 774	08B	135	5-F16
44 96 782	08B	139	5-F20
44 96 790	08B	139	5-F20
44 96 808	08B	139	5-F20
44 97 020	08B	065	5-C18
44 97 020	08B	077	5-D06
44 97 038	08B	065	5-C18
44 97 038	08B	077	5-D06
44 97 046	08B	065	5-C18
44 97 046	08B	077	5-D06
44 97 053	08B	065	5-C18
44 97 053	08B	077	5-D06
44 97 087	08B	065	5-C18
44 97 087	08B	077	5-D06
44 97 095	08B	065	5-C18
44 97 095	08B	077	5-D06
44 97 103	08B	065	5-C18
44 97 103	08B	077	5-D06
44 97 111	08B	065	5-C18
44 97 111	08B	077	5-D06
44 97 145	08B	071	5-C24
44 97 145	08B	083	5-D12
44 97 152	08B	071	5-C24
44 97 152	08B	083	5-D12
44 97 160	08B	071	5-C24
44 97 160	08B	083	5-D12
44 97 178	08B	071	5-C24
44 97 178	08B	085	5-D14
44 97 202	08B	071	5-C24
44 97 202	08B	083	5-D12
44 97 210	08B	071	5-C24
44 97 210	08B	083	5-D12
44 97 228	08B	071	5-C24
44 97 228	08B	083	5-D12
44 97 236	08B	071	5-C24
44 97 236	08B	085	5-D14
44 97 269	08B	071	5-C24
44 97 269	08B	083	5-D12
44 97 277	08B	071	5-C24
44 97 277	08B	083	5-D12
44 97 285	08B	071	5-C24
44 97 285	08B	083	5-D12
44 97 293	08B	071	5-C24
44 97 293	08B	085	5-D14
44 97 327	08B	071	5-C24
44 97 327	08B	083	5-D12
44 97 335	08B	071	5-C24
44 97 335	08B	083	5-D12
44 97 343	08B	071	5-C24
44 97 343	08B	083	5-D12
44 97 350	08B	071	5-C24
44 97 350	08B	085	5-D14
44 97 384	08B	071	5-C24
44 97 384	08B	083	5-D12
44 97 392	08B	071	5-C24
44 97 392	08B	083	5-D12
44 97 400	08B	071	5-C24
44 97 400	08B	083	5-D12
44 97 418	08B	071	5-C24
44 97 418	08B	085	5-D14
44 97 442	08B	071	5-C24
44 97 442	08B	083	5-D12
44 97 459	08B	071	5-C24
44 97 459	08B	083	5-D12
44 97 467	08B	071	5-C24
44 97 467	08B	083	5-D12
44 97 475	08B	071	5-C24
44 97 475	08B	085	5-D14
44 98 184	08B	027	5-B04
44 98 473	08B	115	5-E20
44 98 473	08B	119	5-E24
44 98 481	08B	115	5-E20
44 98 481	08B	119	5-E24
44 98 499	08B	115	5-E20
44 98 499	08B	119	5-E24
44 98 614	08B	027	5-B04
44 99 059	08B	189	5-H22
44 99 778	08B	181	5-H14
44 99 786	08B	115	5-E20
44 99 786	08B	119	5-E24
44 99 786	08B	123	5-F04
44 99 786	08B	125	5-F06
44 99 786	08B	129	5-F10
44 99 794	08B	115	5-E20
44 99 794	08B	119	5-E24
44 99 794	08B	123	5-F04
44 99 794	08B	125	5-F06
44 99 794	08B	129	5-F10
44 99 810	08B	115	5-E20
44 99 810	08B	119	5-E24
45 00 179	02	033	1-D10
45 00 195	02	029	1-D06
45 00 195	02	033	1-D10
45 00 229	02	033	1-D10
45 00 245	02	033	1-D10
45 00 302	02	033	1-D10
45 00 328	02	033	1-D10
45 00 344	02	033	1-D10
45 00 351	02	033	1-D10
45 00 351	03A	029	2-B06
45 00 393	02	033	1-D10
45 00 401	02	033	1-D10
45 00 419	02	049	1-E02
45 00 732	02	029	1-D06
45 00 732	02	049	1-E02
45 00 781	02	029	1-D06
45 00 823	02	029	1-D06
45 00 831	02	029	1-D06
45 00 849	02	029	1-D06
45 00 880	02	029	1-D06
45 00 898	02	029	1-D06
45 00 906	02	029	1-D06
45 00 914	02	029	1-D06
45 00 922	02	029	1-D06
45 01 029	02	167	1-I24
45 01 029	03A	027	2-B04
45 01 060	02	029	1-D06
45 01 110	02	029	1-D06
45 01 110	02	047	1-D24
45 01 110	02	149	1-I06
45 01 110	03A	029	2-B06
45 01 185	03A	029	2-B06
45 01 193	03A	029	2-B06
45 01 789	02	039	1-D16
45 02 076	02	037	1-D14
45 02 134	02	167	1-I24
45 02 142	02	047	1-D24
45 02 167	02	047	1-D24
45 02 241	02	049	1-E02
45 02 258	02	049	1-E02
45 02 274	02	031	1-D08
45 02 274	02	047	1-D24
45 02 274	02	049	1-E02
45 02 274	02	087	1-F16
45 02 290	02	029	1-D06
45 02 290	02	049	1-E02
45 02 308	02	047	1-D24
45 02 332	02	047	1-D24
45 02 357	02	031	1-D08
45 02 373	02	031	1-D08
45 02 431	02	137	1-H18
45 02 449	02	137	1-H18
45 02 472	02	137	1-H18
45 02 480	02	137	1-H18
45 02 506	02	137	1-H18
45 02 514	02	137	1-H18
45 02 696	02	047	1-D24
45 02 696	02	167	1-I24
45 02 712	02	047	1-D24
45 02 738	02	051	1-E04
45 02 753	02	051	1-E04
45 02 803	02	037	1-D14
45 02 829	02	037	1-D14
45 02 845	02	037	1-D14
45 02 985	02	145	1-I02
45 03 009	02	145	1-I02
45 03 009	03A	023	2-A24
45 03 017	02	149	1-I06
45 03 058	02	149	1-I06
45 03 066	02	149	1-I06
45 03 074	02	149	1-I06
45 03 363	02	097	1-G02
45 03 405	02	087	1-F16
45 03 439	02	087	1-F16
45 03 538	02	105	1-G10
45 03 579	02	105	1-G10
45 03 629	02	105	1-G10
45 03 65[illegible]	02	105	1-G10
45 03 774	02	069	1-E22
45 03 751	02	069	1-E22
45 03 785	02	069	1-E22
45 03 793	02	069	1-E22
45 03 819	02	069	1-E22
45 03 819	02	069	1-E22
45 03 835	02	069	1-E22
45 03 983	02	029	1-D06
45 03 991	02	037	1-D14
45 04 023	02	037	1-D14
45 04 031	02	037	1-D14
45 04 049	02	037	1-D14
45 04 056	02	037	1-D14
45 04 064	02	037	1-D14
45 04 072	02	037	1-D14
45 04 080	02	037	1-D14
45 04 106	02	037	1-D14
45 04 130	02	037	1-D14
45 04 247	02	031	1-D08
45 04 353	03A	027	2-B04
45 04 361	03A	027	2-B04
45 04 379	03A	027	2-B04
45 04 395	03A	027	2-B04
45 04 403	03A	027	2-B04
45 04 411	03A	027	2-B04

6-A18 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
45 04 437	03A	027	2-B04
45 04 460	03A	027	2-B04
45 04 478	03A	029	2-B06
45 04 528	03A	029	2-B06
45 04 585	02	049	1-E02
45 04 742	02	105	1-G10
45 05 350	08B	177	5-H10
45 05 384	08B	177	5-H10
45 05 764	08B	191	5-H24
45 05 772	08B	191	5-H24
45 06 051	06	009	4-A10
45 06 069	06	009	4-A10
45 06 135	06	009	4-A10
45 06 143	06	009	4-A10
45 06 150	06	009	4-A10
45 06 168	06	009	4-A10
45 06 200	06	009	4-A10
45 06 218	06	009	4-A10
45 06 226	06	009	4-A10
45 06 242	06	009	4-A10
45 06 416	06	009	4-A10
45 09 485	08B	023	5-A24
45 09 493	08B	023	5-A24
45 09 501	08B	023	5-A24
45 09 519	08B	023	5-A24
45 09 576	06	021	4-A22
45 09 576	08B	007	5-A08
45 09 626	02	161	1-I18
45 10 285	08B	119	5-E24
45 10 285	08B	123	5-F04
45 10 285	08B	125	5-F06
45 10 285	08B	129	5-F10
45 10 293	08B	119	5-E24
45 10 301	08B	119	5-E24
45 10 301	08B	123	5-F04
45 10 301	08B	125	5-F06
45 10 301	08B	129	5-F10
45 10 699	08B	185	5-H18
45 10 707	08B	185	5-H18
45 10 731	08D	005	5-K06
45 11 143	08B	089	5-D18
45 11 176	08B	089	5-D18
45 11 184	08B	077	5-D06
45 11 218	08B	077	5-D06
45 11 226	08B	077	5-D06
45 11 226	08B	089	5-D18
45 11 226	08B	097	5-E02
45 11 234	08B	077	5-D06
45 11 234	08B	089	5-D18
45 11 234	08B	097	5-E02
45 11 275	08B	093	5-D22
45 11 283	08B	093	5-D22
45 11 291	08B	083	5-D12
45 11 309	08B	083	5-D12
45 11 317	08B	083	5-D12
45 11 317	08B	093	5-D22
45 11 317	08B	101	5-E06
45 11 325	08B	083	5-D12
45 11 325	08B	093	5-D22
45 11 325	08B	101	5-E06
45 11 556	08B	115	5-E20
45 11 556	08B	119	5-E24
45 11 564	08B	115	5-E20
45 11 564	08B	119	5-E24
45 11 564	08B	123	5-F04
45 11 564	08B	125	5-F06
45 11 564	08B	129	5-F10
45 11 572	08B	115	5-E20
45 11 572	08B	119	5-E24
45 11 572	08B	123	5-F04
45 11 572	08B	125	5-F06
45 11 572	08B	129	5-F10
45 12 893	08B	181	5-H14
45 12 968	08B	069	5-C22
45 12 968	08B	081	5-D10
45 12 968	08B	089	5-D18
45 12 968	08B	097	5-E02
45 12 968	08B	105	5-E10
45 12 976	08B	069	5-C22
45 12 976	08B	081	5-D10
45 12 976	08B	089	5-D18
45 12 976	08B	097	5-E02
45 12 976	08B	105	5-E10
45 12 984	08B	069	5-C22
45 12 984	08B	081	5-D10
45 12 984	08B	089	5-D18
45 12 984	08B	097	5-E02
45 12 984	08B	105	5-E10
45 12 992	08B	069	5-C22
45 12 992	08B	081	5-D10
45 16 506	03A	109	2-E14
45 16 548	03A	169	2-H02
45 16 712	03A	119	2-E24
45 16 720	03A	119	2-E24
45 16 746	03A	119	2-E24
45 16 829	03A	117	2-E22
45 16 837	03A	117	2-E22
45 16 894	03A	117	2-E22
45 16 936	03A	117	2-E22
45 17 025	03A	117	2-E22
45 17 074	03A	117	2-E22
45 17 108	03A	117	2-E22
45 17 124	03A	117	2-E22
45 17 157	03A	117	2-E22
45 17 355	03A	117	2-E22
45 17 405	03A	117	2-E22
45 17 439	03A	117	2-E22
45 17 454	03A	117	2-E22
45 17 488	03A	117	2-E22
45 17 504	03A	117	2-E22
45 17 538	03A	117	2-E22
45 17 553	03A	117	2-E22
45 17 629	03B	047	3-B24
45 17 629	03B	069	3-C22
45 17 629	03B	093	3-D22
45 17 637	03B	047	3-B24
45 17 637	03B	069	3-C22
45 17 637	03B	093	3-D22
45 17 652	03B	047	3-B24
45 17 652	03B	069	3-C22
45 17 652	03B	093	3-D22
45 17 702	03B	037	3-B14
45 17 702	03B	059	3-C12
45 17 702	03B	081	3-D10
45 18 280	03A	077	2-D06
45 18 635	08B	013	5-A14
45 18 650	03A	191	2-H24
45 18 676	03A	191	2-H24
45 18 684	03A	191	2-H24
45 18 692	03A	191	2-H24
45 18 700	03A	191	2-H24
45 18 718	03A	191	2-H24
45 18 726	03A	191	2-H24
45 18 734	03A	191	2-H24
45 18 742	03A	191	2-H24
45 18 866	03A	097	2-E02
45 18 874	03A	097	2-E02
45 18 882	03A	097	2-E02
45 18 890	03A	097	2-E02
45 18 908	03A	093	2-D22
45 18 916	03A	093	2-D22
45 18 924	03A	093	2-D22
45 18 932	03A	093	2-D22
45 18 940	03A	095	2-D24
45 18 957	03A	097	2-E02
45 18 965	03A	097	2-E02
45 19 047	08B	013	5-A14
45 19 070	03A	193	2-I02
45 19 088	03A	155	2-G12
45 19 120	03A	077	2-D06
45 19 138	03A	079	2-D08
45 19 146	03A	077	2-D06
45 19 211	03A	093	2-D22
45 19 229	03A	097	2-E02
45 19 237	03A	097	2-E02
45 19 302	08B	009	5-A10
45 19 443	03A	193	2-I02
45 19 443	03A	195	2-I04
45 19 740	03A	077	2-D06
45 19 773	08B	021	5-A22
45 19 781	08B	019	5-A20
45 19 849	08B	019	5-A20
45 21 035	03A	199	2-I08
45 21 175	03A	053	2-C06
45 21 258	08D	013	5-K14
45 21 282	03A	053	2-C06
45 21 290	03A	043	2-B20
45 21 308	03A	043	2-B20
45 21 449	03A	071	2-C24
45 21 456	03A	071	2-C24
45 21 563	08A	035	4-D12
45 21 613	03A	043	2-B20
45 21 696	03A	051	2-C04
45 21 704	03A	051	2-C04
45 21 712	03A	051	2-C04
45 21 720	03A	051	2-C04
45 21 753	03A	051	2-C04
45 21 761	03A	051	2-C04
45 21 811	03A	051	2-C04
45 21 837	03A	051	2-C04
45 21 845	03A	051	2-C04
45 22 611	03A	065	2-C18
45 22 835	03A	051	2-C04
45 22 843	03A	051	2-C04
45 22 884	08A	059	4-E12
45 22 975	08A	059	4-E12
45 22 991	08A	059	4-E12
45 25 028	02	057	1-E10
45 25 234	02	063	1-E16
45 25 242	02	063	1-E16
45 25 366	02	113	1-G18
45 25 366	02	117	1-G22
45 25 382	02	119	1-G24
45 25 515	02	157	1-I14
45 25 580	02	087	1-F16
45 25 952	02	087	1-F16
45 25 994	08D	007	5-K08
45 26 000	08D	007	5-K08
45 26 018	08D	007	5-K08
45 26 026	08D	007	5-K08
45 26 364	02	123	1-H04
45 26 372	02	117	1-G22
45 26 471	02	159	1-I16
45 26 554	08D	007	5-K08
45 26 562	08D	007	5-K08
45 26 570	08D	007	5-K08
45 26 588	08D	007	5-K08
45 26 596	08D	007	5-K08
45 26 604	08D	009	5-K10
45 26 653	02	165	1-I22
45 26 661	08D	007	5-K08
45 26 687	02	157	1-I14
45 26 711	02	157	1-I14
45 26 836	02	061	1-E14
45 26 869	02	117	1-G22
45 26 877	02	123	1-H04
45 26 992	02	079	1-F08
45 27 008	02	047	1-D24
45 27 230	02	051	1-E04
45 27 248	02	061	1-E14
45 27 255	02	061	1-E14
45 27 420	02	165	1-I22
45 27 545	02	113	1-G18
45 27 669	02	119	1-G24
45 27 933	08D	007	5-K08
45 27 958	02	123	1-H04
45 28 105	08D	007	5-K08
45 28 147	02	157	1-I16
45 28 154	02	165	1-I22
45 28 238	02	117	1-G22
45 28 295	08D	007	5-K08
45 28 303	08D	007	5-K08
45 28 311	08D	007	5-K08
45 28 600	02	113	1-G18
45 28 600	02	117	1-G22
45 28 618	02	113	1-G18
45 28 618	02	117	1-G22
45 28 626	02	113	1-G18
45 28 626	02	117	1-G22
45 28 717	06	017	4-A18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
45 28 915	08D	007	5-K08
45 28 923	08D	007	5-K08
45 28 956	08D	007	5-K08
45 28 964	08D	007	5-K08
45 28 972	08D	007	5-K08
45 28 980	08D	007	5-K08
45 30 192	08B	017	5-A18
45 30 515	08B	033	5-B10
45 30 515	08B	043	5-B20
45 30 515	08B	049	5-C02
45 30 523	08B	033	5-B10
45 30 523	08B	043	5-B20
45 30 523	08B	049	5-C02
45 30 531	08B	033	5-B10
45 30 531	08B	043	5-B20
45 30 531	08B	049	5-C02
45 30 531	08B	055	5-C08
45 30 531	08B	063	5-C16
45 30 549	08B	033	5-B10
45 30 549	08B	043	5-B20
45 30 549	08B	049	5-C02
45 30 549	08B	055	5-C08
45 30 549	08B	063	5-C16
45 30 598	08B	033	5-B10
45 30 606	08B	033	5-B10
45 30 614	08B	033	5-B10
45 30 622	08B	033	5-B10
45 30 630	08B	033	5-B10
45 30 630	08B	043	5-B20
45 30 630	08B	049	5-C02
45 30 630	08B	055	5-C08
45 30 630	08B	063	5-C16
45 30 648	08B	033	5-B10
45 30 648	08B	043	5-B20
45 30 655	08B	033	5-B10
45 30 663	08B	033	5-B10
45 30 671	08B	033	5-B10
45 30 671	08B	043	5-B20
45 30 671	08B	049	5-C02
45 30 671	08B	051	5-C04
45 30 671	08B	055	5-C08
45 30 671	08B	059	5-C12
45 31 059	08B	139	5-F20
45 31 059	08B	149	5-G06
45 31 620	06	011	4-A12
45 31 638	06	011	4-A12
45 31 679	06	007	4-A08
45 31 687	06	007	4-A08
45 31 695	06	007	4-A08
45 32 529	08B	163	5-G20
45 32 529	08B	169	5-H02
45 32 529	08B	179	5-H12
45 32 818	08B	163	5-G20
45 32 818	08B	169	5-H02
45 32 859	06	011	4-A12
45 32 867	08B	163	5-G20
45 32 867	08B	169	5-H02
45 33 022	08B	139	5-F20
45 33 030	08B	139	5-F20
45 33 048	08B	139	5-F20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
45 33 055	08B	135	5-F16
45 33 105	08B	135	5-F16
45 34 889	08B	169	5-H02
45 34 897	08B	169	5-H02
45 34 905	08B	167	5-G24
45 34 913	08B	167	5-G24
45 34 921	08B	179	5-H12
45 34 939	08B	177	5-H10
45 34 947	08B	169	5-H02
45 34 954	08B	169	5-H02
45 34 962	08B	167	5-G24
45 34 970	08B	167	5-G24
45 34 988	08B	179	5-H12
45 34 996	08B	177	5-H10
45 35 464	03A	167	2-G24
45 35 514	03A	113	2-E18
45 35 530	03B	047	3-B24
45 35 530	03B	069	3-C22
45 35 530	03B	093	3-D22
45 35 613	03A	111	2-E16
45 35 639	03A	111	2-E16
45 35 654	03A	111	2-E16
45 35 662	03A	111	2-E16
45 35 910	03A	113	2-E18
45 35 910	03A	121	2-F02
45 35 910	03A	133	2-F14
45 35 910	03A	143	2-F24
45 35 910	03A	151	2-G08
45 35 928	03A	113	2-E18
45 35 928	03A	121	2-F02
45 35 928	03A	133	2-F14
45 35 928	03A	143	2-F24
45 35 928	03A	151	2-G08
45 35 936	03A	113	2-E18
45 35 936	03A	121	2-F02
45 35 936	03A	133	2-F14
45 35 936	03A	143	2-F24
45 35 936	03A	151	2-G08
45 35 944	03A	113	2-E18
45 35 944	03A	121	2-F02
45 35 944	03A	133	2-F14
45 35 944	03A	143	2-F24
45 35 944	03A	151	2-G08
45 35 977	03A	113	2-E18
45 35 977	03A	121	2-F02
45 35 977	03A	133	2-F14
45 35 977	03A	143	2-F24
45 35 977	03A	151	2-G08
45 36 660	03A	093	2-D22
45 36 678	03A	093	2-D22
45 36 686	03A	009	2-A10
45 36 694	03A	009	2-A10
45 37 262	03A	093	2-D22
45 37 320	03A	117	2-E22
45 37 320	03A	129	2-F10
45 37 320	03A	139	2-F20
45 37 320	03A	147	2-G04
45 37 338	03A	117	2-E22
45 37 338	03A	129	2-F10
45 37 338	03A	139	2-F20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
45 37 338	03A	147	2-G04
45 37 353	03A	117	2-E22
45 37 353	03A	139	2-F20
45 37 387	03A	117	2-E22
45 37 387	03A	129	2-F10
45 37 387	03A	139	2-F20
45 37 411	03B	039	3-B16
45 37 411	03B	061	3-C14
45 37 411	03B	083	3-D12
45 37 429	03B	067	3-C20
45 37 429	03B	093	3-D22
45 37 742	08D	011	5-K12
45 37 759	08D	011	5-K12
45 37 775	03A	085	2-D14
45 37 783	03A	085	2-D14
45 37 791	08D	011	5-K12
45 38 310	03B	039	3-B16
45 38 310	03B	061	3-C14
45 38 310	03B	083	3-D12
45 38 401	03A	121	2-F02
45 38 401	03A	133	2-F14
45 38 401	03A	143	2-F24
45 38 625	03B	047	3-B24
45 38 625	03B	069	3-C22
45 38 625	03B	093	3-D22
45 41 140	03A	091	2-D20
45 42 825	08D	011	5-K12
45 42 973	08C	019	5-J20
45 42 981	08C	007	5-J08
45 42 981	08C	009	5-J10
45 43 567	07	011	4-B12
45 43 765	05	005	3-K06
45 43 773	05	005	3-K06
45 43 781	07	007	4-B08
45 43 781	07	009	4-B10
45 43 799	07	007	4-B08
45 43 799	07	009	4-B10
45 44 748	06	017	4-A18
45 44 870	07	005	4-B06
45 44 870	07	009	4-B10
45 44 888	07	005	4-B06
45 44 888	07	009	4-B10
45 44 896	07	007	4-B08
45 44 896	07	009	4-B10
45 45 281	02	077	1-F06
45 45 307	05	019	3-K20
45 45 315	05	019	3-K20
45 45 455	08D	017	5-K18
45 45 687	07	011	4-B12
45 45 729	07	011	4-B12
45 50 075	03A	101	2-E06
45 50 083	03A	101	2-E06
45 50 091	03A	101	2-E06
45 50 117	03A	101	2-E06
45 50 125	03A	101	2-E06
45 50 133	03A	101	2-E06
45 50 166	03A	101	2-E06
45 50 455	08A	015	4-C16
45 50 497	08A	091	4-F20
45 50 935	08A	091	4-F20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
45 50 943	08A	091	4-F20
45 55 181	08A	057	4-E10
45 55 272	03A	057	2-C10
45 55 298	03A	101	2-E06
45 55 462	03A	101	2-E06
45 56 890	08A	049	4-E02
45 56 890	08A	053	4-E06
45 56 940	08A	033	4-D10
45 57 054	08A	049	4-E02
45 57 393	08A	013	4-C14
45 57 757	08A	085	4-F14
45 57 815	08A	049	4-E02
45 58 235	08A	055	4-E08
45 58 425	08D	017	5-K18
45 58 458	08D	015	5-K16
45 59 035	08A	095	4-F24
45 59 043	08A	095	4-F24
45 59 050	08A	095	4-F24
45 59 068	08A	095	4-F24
45 59 100	08A	087	4-F16
45 59 209	08A	053	4-E06
45 59 647	08A	095	4-F24
45 66 311	07	011	4-B12
45 76 583	02	051	1-E04
45 79 371	04	041	3-H18
45 82 425	03A	009	2-A10
45 83 043	03A	085	2-D14
45 83 050	03A	085	2-D14
45 83 902	08A	019	4-C20
45 86 343	03A	015	2-A16
45 86 673	03A	113	2-E18
45 86 673	03A	121	2-F02
45 86 673	03A	133	2-F14
45 86 673	03A	143	2-F24
45 86 673	03A	151	2-G08
45 86 814	03A	123	2-F04
45 86 822	03A	101	2-E06
45 86 830	03A	123	2-F04
45 86 939	03A	127	2-F08
45 86 954	03A	127	2-F08
45 86 962	03A	127	2-F08
45 86 988	03A	127	2-F08
45 86 996	03A	127	2-F08
45 87 010	03A	131	2-F12
45 87 036	03A	131	2-F12
45 87 044	03A	131	2-F12
45 87 119	03A	127	2-F08
45 87 143	03A	127	2-F08
45 87 192	03A	127	2-F08
45 87 200	03A	127	2-F08
45 87 242	03A	127	2-F08
45 87 267	03A	127	2-F08
45 87 283	03A	127	2-F08
45 87 333	03A	127	2-F08
45 87 424	03A	131	2-F12
45 87 523	03A	131	2-F12
45 88 133	03A	123	2-F04
45 88 141	03A	123	2-F04
45 88 158	03A	123	2-F04
45 88 166	03A	123	2-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
45 88 174	03A	123	2-F04
45 88 174	03A	135	2-F16
45 88 174	03A	145	2-G02
45 88 174	03A	153	2-G10
45 88 349	03B	023	3-A24
45 88 349	03B	045	3-B22
45 88 349	03B	067	3-C20
45 88 349	03B	091	3-D20
45 88 869	03A	101	2-E06
46 03 866	08B	113	5-E18
46 04 930	08B	121	5-F02
46 04 948	08B	121	5-F02
46 06 059	08B	027	5-B04
46 06 695	08D	015	5-K16
46 06 703	08D	015	5-K16
46 06 711	08D	015	5-K16
46 06 729	03A	057	2-C10
46 06 752	08B	027	5-B04
46 07 065	08B	025	5-B02
46 07 115	08B	185	5-H18
46 07 164	08B	023	5-A24
46 07 172	08B	023	5-A24
46 07 180	08B	023	5-A24
46 07 198	08B	023	5-A24
46 07 206	08B	023	5-A24
46 07 214	08B	023	5-A24
46 07 230	08B	025	5-B02
46 07 248	08B	075	5-B02
46 07 255	08B	025	5-B02
46 07 263	08B	023	5-A24
46 07 297	08B	025	5-B02
46 08 105	08B	133	5-F14
46 08 113	08B	133	5-F14
46 08 121	08B	133	5-F14
46 08 139	08B	133	5-F14
46 08 147	08B	133	5-F14
46 08 154	08B	133	5-F14
46 08 394	08B	119	5-E24
46 08 394	08B	123	5-F04
46 08 394	08B	125	5-F06
46 08 394	08B	129	5-F10
46 08 402	08B	119	5-E24
46 08 410	08B	119	5-E24
46 08 410	08B	123	5-F04
46 08 410	08B	125	5-F06
46 08 410	08B	129	5-F10
46 08 550	08B	027	5-B04
46 08 568	08B	027	5-B04
46 08 576	08B	027	5-B04
46 08 584	08B	027	5-B04
46 08 592	08B	027	5-B04
46 08 600	08B	027	5-B04
46 09 442	08B	009	5-A10
46 09 459	08B	009	5-A10
46 09 475	08B	009	5-A10
46 09 483	08B	009	5-A10
46 15 746	08B	015	5-A16
46 16 306	08B	015	5-A16
46 16 314	08B	015	5-A16
46 16 413	08B	019	5-A20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 16 421	08B	019	5-A20
46 16 439	08B	019	5-A20
46 16 801	08B	019	5-A20
46 16 819	08B	019	5-A20
46 17 270	03A	099	2-E04
46 17 379	03A	077	2-D06
46 17 668	04	013	3-G14
46 17 676	03A	093	2-D22
46 17 684	03A	093	2-D22
46 18 369	08D	015	5-K16
46 18 377	08D	015	5-K16
46 18 716	03A	101	2-E06
46 18 724	03A	101	2-E06
46 18 864	08D	015	5-K16
46 19 052	08D	015	5-K16
46 19 060	08D	017	5-K18
46 19 144	08D	017	5-K18
46 19 219	03A	097	2-E02
46 19 227	03A	097	2-E02
46 19 417	08D	017	5-K18
46 19 441	03A	101	2-E06
46 19 672	03A	089	2-D18
46 20 001	02	137	1-H18
46 20 019	02	039	1-D16
46 20 027	02	047	1-D24
46 20 084	02	037	1-D14
46 20 142	02	047	1-D24
46 20 225	02	047	1-D24
46 20 274	02	137	1-H18
46 20 282	02	137	1-H18
46 20 324	02	149	1-I06
46 20 365	02	091	1-F20
46 20 530	02	087	1-F16
46 20 621	02	029	1-D06
46 20 639	02	029	1-D06
46 20 670	02	029	1-D06
46 20 829	02	039	1-D16
46 20 837	02	039	1-D16
46 20 845	02	039	1-D16
46 20 852	02	039	1-D16
46 20 860	02	039	1-D16
46 20 951	02	039	1-D16
46 20 977	02	039	1-D16
46 21 074	02	047	1-D24
46 21 082	02	037	1-D14
46 21 108	02	069	1-E22
46 21 124	02	087	1-F16
46 21 181	02	087	1-F16
46 21 199	02	087	1-F16
46 21 215	02	087	1-F16
46 21 223	02	087	1-F16
46 21 231	02	087	1-F16
46 21 249	02	091	1-F20
46 21 256	02	087	1-F16
46 21 264	02	087	1-F16
46 21 272	02	087	1-F16
46 21 314	02	029	1-D06
46 21 348	02	037	1-D14
46 21 397	02	137	1-H18
46 21 397	02	149	1-I06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 21 413	02	137	1-H18
46 21 413	02	149	1-I06
46 21 421	02	137	1-H18
46 21 470	02	145	1-I02
46 21 546	02	019	1-C20
46 21 553	02	019	1-C20
46 21 561	02	019	1-C20
46 22 296	02	049	1-E02
46 23 724	02	037	1-D14
46 23 732	02	031	1-D08
46 23 740	02	031	1-D08
46 23 815	02	149	1-I06
46 23 898	02	037	1-D14
46 23 906	02	037	1-D14
46 24 383	02	119	1-G24
46 25 968	04	069	3-I22
46 25 984	04	069	3-I22
46 27 436	08B	037	5-B14
46 27 436	08B	043	5-B20
46 27 436	08B	049	5-C02
46 27 436	08B	055	5-C08
46 27 436	08B	063	5-C16
46 27 444	08B	037	5-B14
46 27 444	08B	043	5-B20
46 27 444	08B	049	5-C02
46 27 444	08B	055	5-C08
46 27 444	08B	063	5-C16
46 27 451	08B	035	5-B12
46 27 451	08B	043	5-B20
46 27 469	08B	035	5-B12
46 27 469	08B	043	5-B20
46 27 477	08B	035	5-B12
46 27 477	08B	043	5-B20
46 27 477	08B	049	5-C02
46 27 477	08B	055	5-C08
46 27 477	08B	063	5-C16
46 27 485	08B	035	5-B12
46 27 485	08B	043	5-B20
46 27 485	08B	049	5-C02
46 27 485	08B	055	5-C08
46 27 485	08B	063	5-C16
46 27 493	08B	033	5-B10
46 27 501	08B	033	5-B10
46 27 519	08B	033	5-B10
46 27 519	08B	043	5-B20
46 27 519	08B	049	5-C02
46 27 519	08B	055	5-C08
46 27 519	08B	063	5-C16
46 27 527	08B	033	5-B10
46 27 527	08B	043	5-B20
46 27 527	08B	049	5-C02
46 27 527	08B	055	5-C08
46 27 527	08B	063	5-C16
46 27 535	08B	037	5-B14
46 27 535	08B	043	5-B20
46 27 535	08B	049	5-C02
46 27 535	08B	055	5-C08
46 27 535	08B	063	5-C16
46 27 543	08B	037	5-B14
46 27 543	08B	043	5-B20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 27 543	08B	049	5-C02
46 27 543	08B	055	5-C08
46 27 543	08B	063	5-C16
46 27 550	08B	035	5-B12
46 27 550	08B	043	5-B20
46 27 568	08B	035	5-B12
46 27 568	08B	043	5-B20
46 27 576	08B	035	5-B12
46 27 576	08B	043	5-B20
46 27 576	08B	049	5-C02
46 27 576	08B	055	5-C08
46 27 576	08B	063	5-C16
46 27 584	08B	035	5-B12
46 27 584	08B	043	5-B20
46 27 584	08B	049	5-C02
46 27 584	08B	055	5-C08
46 27 584	08B	063	5-C16
46 27 592	08B	033	5-B10
46 27 600	08B	033	5-B10
46 27 618	08B	033	5-B10
46 27 618	08B	043	5-B20
46 27 618	08B	049	5-C02
46 27 618	08B	055	5-C08
46 27 618	08B	063	5-C16
46 27 626	08B	033	5-B10
46 27 626	08B	043	5-B20
46 27 626	08B	049	5-C02
46 27 626	08B	055	5-C08
46 27 626	08B	063	5-C16
46 27 634	08B	037	5-B14
46 27 634	08B	043	5-B20
46 27 634	08B	049	5-C02
46 27 634	08B	055	5-C08
46 27 642	08B	035	5-B12
46 27 642	08B	043	5-B20
46 27 659	08B	035	5-B12
46 27 659	08B	043	5-B20
46 27 659	08B	049	5-C02
46 27 659	08B	055	5-C08
46 27 667	08B	033	5-B10
46 27 675	08B	033	5-B10
46 27 675	08B	043	5-B20
46 27 675	08B	049	5-C02
46 27 675	08B	055	5-C08
46 27 683	08B	037	5-B14
46 27 683	08B	043	5-B20
46 27 683	08B	049	5-C02
46 27 683	08B	055	5-C08
46 27 691	08B	035	5-B12
46 27 691	08B	043	5-B20
46 27 709	08B	035	5-B12
46 27 709	08B	043	5-B20
46 27 709	08B	049	5-C02
46 27 709	08B	055	5-C08
46 27 717	08B	033	5-B10
46 27 725	08B	033	5-B10
46 27 725	08B	043	5-B20
46 27 725	08B	049	5-C02
46 27 725	08B	055	5-C08
46 27 832	08B	031	5-B08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 27 832	08B	041	5-B18
46 27 840	08B	031	5-B08
46 27 840	08B	041	5-B18
46 27 857	08B	029	5-B06
46 27 857	08B	041	5-B18
46 27 865	08B	029	5-B06
46 27 865	08B	041	5-B18
46 27 873	08B	029	5-B06
46 27 873	08B	041	5-B18
46 27 881	08B	029	5-B06
46 27 881	08B	041	5-B18
46 27 899	08B	031	5-B08
46 27 899	08B	041	5-B18
46 27 907	08B	031	5-B08
46 27 907	08B	041	5-B18
46 27 915	08B	029	5-B06
46 27 915	08B	041	5-B18
46 27 923	08B	029	5-B06
46 27 923	08B	041	5-B18
46 27 931	08B	029	5-B06
46 27 931	08B	041	5-B18
46 27 949	08B	029	5-B06
46 27 949	08B	041	5-B18
46 27 956	08B	031	5-B08
46 27 956	08B	041	5-B18
46 27 964	08B	029	5-B06
46 27 964	08B	041	5-B18
46 27 972	08B	029	5-B06
46 27 972	08B	041	5-B18
46 27 980	08B	031	5-B08
46 27 980	08B	041	5-B18
46 27 998	08B	029	5-B06
46 27 998	08B	041	5-B18
46 28 004	08B	029	5-B06
46 28 004	08B	041	5-B18
46 28 244	08B	017	5-A18
46 28 269	08B	017	5-A18
46 28 939	08D	011	5-K12
46 29 358	08B	163	5-G20
46 29 366	08B	163	5-G20
46 29 374	08B	163	5-G20
46 29 374	08B	169	5-H02
46 29 382	08B	163	5-G20
46 29 382	08B	169	5-H02
46 29 440	08B	039	5-B16
46 29 440	08B	045	5-B22
46 29 440	08B	051	5-C04
46 29 457	08B	039	5-B16
46 29 457	08B	045	5-B22
46 29 457	08B	051	5-C04
46 29 473	08B	039	5-B16
46 29 473	08B	045	5-B22
46 29 473	08B	051	5-C04
46 29 481	08B	039	5-B16
46 29 481	08B	045	5-B22
46 29 481	08B	051	5-C04
46 29 507	08B	163	5-G20
46 29 515	08B	163	5-G20
46 29 523	06	011	4-A12
46 29 853	06	009	4-A10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 30 752	08D	015	5-K16
46 31 859	08B	045	5-B22
46 31 859	08B	051	5-C04
46 31 867	08B	045	5-B22
46 31 867	08B	051	5-C04
46 31 867	08B	059	5-C12
46 31 875	08B	045	5-B22
46 31 875	08B	051	5-C04
46 31 875	08B	059	5-C12
46 31 883	08B	045	5-B22
46 31 883	08B	051	5-C04
46 31 917	08B	045	5-B22
46 31 917	08B	051	5-C04
46 31 925	08B	045	5-B22
46 31 925	08B	051	5-C04
46 31 933	08B	045	5-B22
46 31 933	08B	051	5-C04
46 31 941	08B	045	5-B22
46 31 941	08B	051	5-C04
46 31 958	08B	045	5-B22
46 31 966	08B	045	5-B22
46 31 966	08B	051	5-C04
46 31 966	08B	059	5-C12
46 32 006	08C	015	5-J16
46 32 014	08C	015	5-J16
46 32 022	08C	015	5-J16
46 32 055	08C	015	5-J16
46 32 139	08C	015	5-J16
46 32 188	08C	021	5-J22
46 32 196	08C	019	5-J20
46 32 196	08C	021	5-J22
46 32 477	03A	091	2-D20
46 32 543	08C	019	5-J20
46 32 600	08C	019	5-J20
46 34 564	08C	007	5-J08
46 34 911	08C	019	5-J20
46 34 929	08D	013	5-K14
46 35 108	08C	015	5-J16
46 35 116	08C	015	5-J16
46 35 256	08A	025	4-D02
46 35 264	08A	025	4-D02
46 35 496	08C	017	5-J18
46 35 504	08C	017	5-J18
46 35 520	08C	017	5-J18
46 35 546	08C	017	5-J18
46 35 553	08C	017	5-J18
46 35 561	08C	017	5-J18
46 35 579	08C	017	5-J18
46 35 587	08C	017	5-J18
46 35 819	08C	017	5-J18
46 35 827	08C	017	5-J18
46 36 668	08B	023	5-A24
46 36 676	08B	023	5-A24
46 36 965	08B	089	5-D18
46 36 999	08B	089	5-D18
46 37 047	08B	089	5-D18
46 37 070	08B	089	5-D18
46 37 088	08B	089	5-D18
46 37 112	08B	089	5-D18
46 37 120	08B	077	5-D06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 37 153	08B	077	5-D06
46 37 161	08B	077	5-D06
46 37 195	08B	077	5-D06
46 37 203	08B	077	5-D06
46 37 237	08B	077	5-D06
46 37 245	08B	077	5-D06
46 37 278	08B	077	5-D06
46 37 286	08B	077	5-D06
46 37 286	08B	089	5-D18
46 37 286	08B	097	5-E02
46 37 286	08B	105	5-E10
46 37 294	08B	077	5-D06
46 37 294	08B	089	5-D18
46 37 294	08B	097	5-E02
46 37 294	08B	105	5-E10
46 37 302	08B	077	5-D06
46 37 310	08B	077	5-D06
46 37 328	08B	077	5-D06
46 37 328	08B	089	5-D18
46 37 328	08B	097	5-E02
46 37 328	08B	105	5-E10
46 37 336	08B	077	5-D06
46 37 336	08B	089	5-D18
46 37 336	08B	097	5-E02
46 37 336	08B	105	5-E10
46 37 344	08B	077	5-D06
46 37 344	08B	089	5-D18
46 37 344	08B	097	5-E02
46 37 344	08B	105	5-E10
46 37 351	08B	077	5-D06
46 37 351	08B	089	5-D18
46 37 351	08B	097	5-E02
46 37 351	08B	105	5-E10
46 37 401	08B	093	5-D22
46 37 419	08B	093	5-D22
46 37 427	08B	093	5-D22
46 37 435	08B	093	5-D22
46 37 484	08B	093	5-D22
46 37 492	08B	093	5-D22
46 37 500	08B	093	5-D22
46 37 518	08B	093	5-D22
46 37 526	08B	093	5-D22
46 37 534	08B	093	5-D22
46 37 542	08B	093	5-D22
46 37 559	08B	093	5-D22
46 37 567	08B	085	5-D14
46 37 575	08B	085	5-D14
46 37 583	08B	085	5-D14
46 37 591	08B	085	5-D14
46 37 609	08B	083	5-D12
46 37 617	08B	083	5-D12
46 37 625	08B	083	5-D12
46 37 633	08B	083	5-D12
46 37 641	08B	083	5-D12
46 37 658	08B	083	5-D12
46 37 666	08B	083	5-D12
46 37 674	08B	083	5-D12
46 37 682	08B	083	5-D12
46 37 690	08B	083	5-D12
46 37 708	08B	083	5-D12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 37 716	08B	083	5-D12
46 37 724	08B	085	5-D14
46 37 724	08B	093	5-D22
46 37 724	08B	101	5-E06
46 37 724	08B	109	5-E14
46 37 732	08B	085	5-D14
46 37 732	08B	093	5-D22
46 37 732	08B	101	5-E06
46 37 732	08B	109	5-E14
46 37 740	08B	083	5-D12
46 37 757	08B	083	5-D12
46 37 765	08B	083	5-D12
46 37 765	08B	093	5-D22
46 37 765	08B	101	5-E06
46 37 765	08B	109	5-E14
46 37 773	08B	083	5-D12
46 37 773	08B	093	5-D22
46 37 773	08B	101	5-E06
46 37 773	08B	109	5-E14
46 37 781	08B	083	5-D12
46 37 781	08B	093	5-D22
46 37 781	08B	101	5-E06
46 37 781	08B	109	5-E14
46 37 799	08B	083	5-D12
46 37 799	08B	093	5-D22
46 37 799	08B	101	5-E06
46 37 799	08B	109	5-E14
46 37 864	08B	185	5-H18
46 37 872	08B	185	5-H18
46 38 458	08B	013	5-A14
46 41 288	08B	027	5-B04
46 41 296	08B	025	5-B02
46 41 304	08B	025	5-B02
46 45 008	07	015	4-B16
46 45 008	07	019	4-B20
46 45 008	07	023	4-B24
46 45 016	07	015	4-B16
46 45 016	07	019	4-B20
46 45 016	07	023	4-B24
46 45 149	07	013	4-B14
46 45 487	05	013	3-K14
46 45 586	02	155	1-I12
46 45 933	08A	005	4-C06
46 46 220	05	013	3-K14
46 46 253	05	013	3-K14
46 46 469	05	013	3-K14
46 46 717	07	005	4-B06
46 46 717	07	009	4-B10
46 46 725	07	005	4-B06
46 46 725	07	009	4-B10
46 46 758	07	007	4-B08
46 46 758	07	009	4-B10
46 46 766	07	023	4-B24
46 47 038	05	017	3-K18
46 47 046	05	017	3-K18
46 47 053	05	017	3-K18
46 47 061	05	017	3-K18
46 47 095	07	015	4-B16
46 47 095	07	019	4-B20
46 47 095	07	023	4-B24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 47 418	06	017	4-A18
46 47 426	06	017	4-A18
46 47 475	07	011	4-B12
46 47 624	05	013	3-K14
46 47 731	07	011	4-B12
46 48 424	07	011	4-B12
46 49 745	06	017	4-A18
46 49 745	06	021	4-A22
46 49 778	06	021	4-A22
46 49 851	05	017	3-K18
46 49 869	05	017	3-K18
46 50 222	08B	047	5-B24
46 50 230	08B	047	5-B24
46 50 248	08B	047	5-B24
46 50 248	08B	053	5-C06
46 50 248	08B	061	5-C14
46 50 255	08B	047	5-B24
46 50 263	08B	047	5-B24
46 50 271	08B	047	5-B24
46 50 271	08B	053	5-C06
46 50 271	08B	061	5-C14
46 50 321	08B	047	5-B24
46 50 321	08B	053	5-C06
46 50 321	08B	061	5-C14
46 50 339	08B	047	5-B24
46 50 339	08B	053	5-C06
46 50 339	08B	061	5-C14
46 50 347	08B	047	5-B24
46 50 347	08B	053	5-C06
46 50 347	08B	061	5-C14
46 50 354	08B	047	5-B24
46 50 354	08B	053	5-C06
46 50 354	08B	061	5-C14
46 50 362	08B	047	5-B24
46 50 362	08B	053	5-C06
46 50 362	08B	061	5-C14
46 50 370	08B	047	5-B24
46 50 370	08B	053	5-C06
46 50 370	08B	061	5-C14
46 50 388	08B	047	5-B24
46 50 388	08B	053	5-C06
46 50 388	08B	061	5-C14
46 50 396	08B	047	5-B24
46 50 396	08B	053	5-C06
46 50 396	08B	061	5-C14
46 50 420	08B	047	5-B24
46 50 4[illegible]	08B	053	5-C06
46 50 438	08B	047	5-B24
46 50 438	08B	053	5-C06
46 50 446	08B	047	5-B24
46 50 446	08B	053	5-C06
46 50 453	08B	047	5-B24
46 50 453	08B	053	5-C06
46 50 487	08B	179	5-H12
46 50 495	08B	177	5-H10
46 50 503	08B	169	5-H02
46 50 503	08B	179	5-H12
46 50 511	08B	169	5-H02
46 50 511	08B	179	5-H12
46 50 529	08B	177	5-H10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 50 594	08B	051	5-C04
46 50 594	08B	059	5-C12
46 50 602	08B	051	5-C04
46 50 602	08B	059	5-C12
46 50 610	08B	051	5-C04
46 50 610	08B	059	5-C12
46 50 628	08B	051	5-C04
46 50 628	08B	059	5-C12
46 50 636	08B	051	5-C04
46 50 636	08B	059	5-C12
46 50 644	08B	051	5-C04
46 50 644	08B	059	5-C12
46 50 651	08B	051	5-C04
46 50 651	08B	059	5-C12
46 50 669	08B	051	5-C04
46 50 669	08B	059	5-C12
46 50 677	08B	051	5-C04
46 50 677	08B	059	5-C12
46 50 701	08B	163	5-G20
46 50 701	08B	169	5-H02
46 50 701	08B	179	5-H12
46 50 719	08B	163	5-G20
46 50 719	08B	169	5-H02
46 50 719	08B	179	5-H12
46 51 931	08B	047	5-B24
46 51 931	08B	053	5-C06
46 51 931	08B	061	5-C14
46 51 949	08B	047	5-B24
46 51 949	08B	053	5-C06
46 51 949	08B	061	5-C14
46 51 956	08B	047	5-B24
46 51 956	08B	053	5-C06
46 51 956	08B	061	5-C14
46 51 964	08B	179	5-H12
46 51 972	08B	179	5-H12
46 51 980	08B	169	5-H02
46 51 998	08B	169	5-H02
46 52 004	08B	163	5-G20
46 52 012	08B	049	5-C02
46 52 012	08B	055	5-C08
46 52 012	08B	063	5-C16
46 52 038	08B	049	5-C02
46 52 038	08B	055	5-C08
46 52 038	08B	063	5-C16
46 52 046	08B	049	5-C02
46 52 046	08B	055	5-C08
46 52 046	08B	063	5-C16
46 53 705	08B	153	5-G10
46 53 713	08B	153	5-G10
46 53 721	08B	151	5-G08
46 53 739	08B	151	5-G08
46 53 747	08B	151	5-G08
46 54 216	08B	149	5-G06
46 56 005	08B	161	5-G18
46 56 005	08B	163	5-G20
46 56 005	08B	167	5-G24
46 56 005	08B	169	5-H02
46 56 005	08B	177	5-H10
46 57 094	08B	181	5-H14
46 57 292	06	009	4-A10

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 57 912	08B	041	5-B18
46 60 163	02	123	1-H04
46 60 171	02	123	1-H04
46 60 338	02	073	1-F02
46 60 353	02	073	1-F02
46 60 445	02	113	1-G18
46 60 452	03A	029	2-B06
46 60 460	02	097	1-G02
46 60 494	02	113	1-G18
46 60 494	02	117	1-G22
46 60 510	02	097	1-G02
46 60 585	02	149	1-I06
46 60 593	02	059	1-E12
46 60 833	02	073	1-F02
46 60 841	02	073	1-F02
46 61 062	02	089	1-F18
46 61 070	02	059	1-E12
46 61 146	02	073	1-F02
46 61 260	02	073	1-F02
46 61 294	02	097	1-G02
46 61 492	03A	167	2-G24
46 62 896	02	111	1-G16
46 63 001	03A	163	2-G20
46 63 035	03A	107	2-E12
46 63 514	03A	085	2-D14
46 63 522	03A	085	2-D14
46 64 595	03A	089	2-D18
46 65 022	03A	123	2-F04
46 65 022	03A	135	2-F16
46 65 022	03A	145	2-G02
46 65 022	03A	153	2-G10
46 65 048	03A	123	2-F04
46 65 048	03A	135	2-F16
46 65 048	03A	145	2-G02
46 65 048	03A	153	2-G10
46 65 055	03A	101	2-E06
46 65 063	03A	123	2-F04
46 65 063	03A	135	2-F16
46 65 063	03A	145	2-G02
46 65 063	03A	153	2-G10
46 65 733	03A	123	2-F04
46 65 733	03A	135	2-F16
46 65 733	03A	145	2-G02
46 65 733	03A	153	2-G10
46 65 840	03A	117	2-E22
46 65 840	03A	129	2-F10
46 65 840	03A	139	2-F20
46 65 840	03A	147	2-G04
46 66 665	03A	167	2-G24
46 66 756	03A	127	2-F08
46 66 764	03A	127	2-F08
46 66 79[illegible]	03A	127	2-F08
46 67 002	03A	127	2-F08
46 67 010	03A	127	2-F08
46 67 044	03A	127	2-F08
46 68 588	03B	057	3-C10
46 68 588	03B	079	3-D08
46 68 596	03B	057	3-C10
46 68 596	03B	079	3-D08
46 68 604	03B	061	3-C14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 68 604	03B	083	3-D12
46 68 737	03A	199	2-I08
46 68 737	05	027	3-L04
46 68 778	03A	131	2-F12
46 68 778	03A	141	2-F22
46 69 065	03A	177	2-H10
46 69 065	03A	181	2-H14
46 69 065	03A	185	2-H18
46 69 065	03A	189	2-H22
46 69 487	08D	011	5-K12
46 69 495	08D	011	5-K12
46 69 503	08D	011	5-K12
46 71 772	02	165	1-I22
46 73 224	03A	053	2-C06
46 73 273	03A	055	2-C08
46 73 281	03A	055	2-C08
46 73 299	03A	055	2-C08
46 73 372	03A	039	2-B16
46 73 380	03A	039	2-B16
46 74 008	08A	065	4-E18
46 74 016	08A	065	4-E18
46 74 024	08A	071	4-E24
46 74 032	08A	071	4-E24
46 76 755	08A	059	4-E12
46 76 763	08A	059	4-E12
46 76 771	08A	059	4-E12
46 76 789	08A	059	4-E12
46 76 797	08A	059	4-E12
46 82 571	08B	025	5-B02
46 84 726	08A	081	4-F10
46 84 734	08A	081	4-F10
46 84 742	08A	081	4-F10
46 84 759	08A	081	4-F10
46 84 767	08A	081	4-F10
46 84 775	08A	081	4-F10
46 84 783	08A	081	4-F10
46 84 791	08A	083	4-F12
46 84 809	08A	081	4-F10
46 84 809	08A	083	4-F12
46 84 817	08A	083	4-F12
46 84 8[illegible]7	08A	085	4-F14
46 84 825	08A	083	4-F12
46 84 825	08A	085	4-F14
46 84 833	08A	083	4-F12
46 84 841	08A	085	4-F14
46 84 858	08A	083	4-F12
46 84 866	08A	083	4-F12
46 85 012	08A	041	4-D18
46 85 012	08A	043	4-D20
46 85 020	02	165	1-I22
46 85 020	08A	041	4-D18
46 85 020	08A	043	4-D20
46 85 186	04	027	3-H04
46 85 251	02	123	1-H04
46 85 301	03A	035	2-B12
46 85 319	03A	047	2-B24
46 85 343	08A	053	4-E06
46 85 350	04	031	3-H08
46 85 475	04	015	3-G16
46 85 657	04	037	3-H14

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
46 85 897	08A	011	4-C12
46 85 947	02	125	1-H06
46 85 947	02	129	1-H10
46 89 949	08D	015	5-K16
46 92 596	03A	117	2-E22
46 92 745	03A	077	2-D06
46 92 752	03A	077	2-D06
46 92 760	03A	077	2-D06
46 92 802	03A	087	2-D16
46 93 172	03A	125	2-F06
46 93 172	03A	135	2-F16
46 93 172	03A	145	2-G02
46 93 172	03A	153	2-G10
46 93 180	03A	125	2-F06
46 93 180	03A	135	2-F16
46 93 180	03A	145	2-G02
46 93 180	03A	153	2-G10
46 94 766	03A	141	2-F22
46 94 774	03A	141	2-F22
46 94 774	03A	149	2-G06
46 94 782	03A	141	2-F22
46 94 824	03A	137	2-F18
46 94 832	03A	137	2-F18
46 94 840	03A	137	2-F18
46 94 857	03A	137	2-F18
46 94 865	03A	137	2-F18
46 94 881	03A	137	2-F18
46 94 899	03A	137	2-F18
46 94 923	03A	137	2-F18
46 94 931	03A	137	2-F18
46 94 949	03A	137	2-F18
46 94 956	03A	137	2-F18
46 94 964	03A	137	2-F18
46 94 980	03A	141	2-F22
46 94 998	03A	141	2-F22
46 95 318	08A	041	4-D18
46 95 326	08A	041	4-D18
46 95 334	08A	043	4-D20
46 95 342	08A	043	4-D20
46 95 425	08A	055	4-E08
46 95 433	08A	055	4-E08
46 95 441	08A	055	4-E08
46 95 458	08A	055	4-E08
47 00 027	08A	083	4-F12
47 04 136	08B	027	5-B04
47 04 144	08B	027	5-B04
47 04 151	08B	027	5-B04
47 04 169	08B	027	5-B04
47 04 219	08B	189	5-H22
47 04 466	08B	009	5-A10
47 05 430	08B	025	5-B02
47 05 448	08B	025	5-B02
47 05 463	08B	183	5-H16
47 05 471	08B	183	5-H16
47 05 505	08B	113	5-E18
47 05 513	08B	113	5-E18
47 05 547	08B	113	5-E18
47 05 554	08B	113	5-E18
47 08 434	08B	021	5-A22
47 08 467	08B	123	5-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 08 467	08B	125	5-F06
47 08 467	08B	129	5-F10
47 08 475	08B	123	5-F04
47 08 475	08B	125	5-F06
47 08 475	08B	129	5-F10
47 08 525	08B	123	5-F04
47 08 525	08B	125	5-F06
47 08 525	08B	129	5-F10
47 08 533	08B	123	5-F04
47 08 533	08B	125	5-F06
47 08 533	08B	129	5-F10
47 10 034	03A	193	2-I02
47 10 042	03A	193	2-I02
47 10 059	03A	193	2-I02
47 10 067	03A	193	2-I02
47 11 412	03A	085	2-D14
47 11 420	03A	085	2-D14
47 11 529	03A	193	2-I02
47 11 537	03A	193	2-I02
47 14 648	03A	097	2-E02
47 14 655	03A	097	2-E02
47 16 296	08B	163	5-G20
47 16 296	08B	171	5-H04
47 16 296	08B	179	5-H12
47 16 304	08B	163	5-G20
47 16 304	08B	171	5-H04
47 16 304	08B	179	5-H12
47 16 312	08B	165	5-G22
47 16 312	08B	171	5-H04
47 16 312	08B	179	5-H12
47 16 320	08B	165	5-G22
47 16 320	08B	171	5-H04
47 16 320	08B	179	5-H12
47 16 346	08B	165	5-G22
47 16 346	08B	171	5-H04
47 16 346	08B	179	5-H12
47 16 445	08B	163	5-G20
47 16 445	08B	169	5-H02
47 16 908	03A	087	2-D16
47 16 916	03A	087	2-D16
47 17 476	08B	041	5-B18
47 17 476	08B	047	5-B24
47 17 484	08B	041	5-B18
47 17 484	08B	047	5-B24
47 17 492	08B	041	5-B18
47 17 492	08B	047	5-B24
47 17 492	08B	053	5-C06
47 17 492	08B	061	5-C14
47 17 500	08B	041	5-B18
47 17 500	08B	047	5-B24
47 17 500	08B	053	5-C06
47 17 500	08B	061	5-C14
47 17 518	08B	041	5-B18
47 17 518	08B	047	5-B24
47 17 518	08B	053	5-C06
47 17 518	08B	061	5-C14
47 17 526	08B	041	5-B18
47 17 526	08B	047	5-B24
47 17 526	08B	053	5-C06
47 17 526	08B	061	5-C14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 17 534	08B	041	5-B18
47 17 534	08B	047	5-B24
47 17 534	08B	053	5-C06
47 17 534	08B	061	5-C14
47 17 542	08B	041	5-B18
47 17 542	08B	047	5-B24
47 17 542	08B	053	5-C06
47 17 559	08B	041	5-B18
47 17 559	08B	047	5-B24
47 17 559	08B	053	5-C06
47 18 649	08B	139	5-F20
47 18 656	08B	135	5-F16
47 18 672	08B	135	5-F16
47 18 730	08B	139	5-F20
47 18 813	08B	135	5-F16
47 18 821	08B	135	5-F16
47 18 839	08B	141	5-F22
47 18 847	08B	141	5-F22
47 19 464	08B	167	5-G24
47 19 472	08B	167	5-G24
47 19 480	08B	167	5-G24
47 19 498	08B	167	5-G24
47 19 514	08B	167	5-G24
47 19 522	08B	167	5-G24
47 19 530	08B	167	5-G24
47 19 548	08B	167	5-G24
47 19 670	08B	169	5-H02
47 19 704	08B	169	5-H02
47 19 720	08B	167	5-G24
47 19 738	08B	167	5-G24
47 19 753	08B	167	5-G24
47 19 761	08B	167	5-G24
47 25 883	02	015	1-C16
47 26 659	02	165	1-I22
47 26 717	08D	015	5-K16
47 26 725	08D	015	5-K16
47 27 095	08D	015	5-K16
47 27 103	08D	015	5-K16
47 27 434	08D	013	5-K14
47 27 814	08D	015	5-K16
47 28 309	02	031	1-D08
47 28 473	08D	009	5-K10
47 29 349	02	063	1-E16
47 33 028	03A	139	2-F20
47 33 036	03A	139	2-F20
47 33 036	03A	147	2-G04
47 33 044	03A	139	2-F20
47 33 044	03A	147	2-G04
47 33 051	03A	139	2-F20
47 33 051	03A	147	2-G04
47 33 069	03A	139	2-F20
47 33 127	03A	183	2-H16
47 33 127	03A	187	2-H20
47 33 275	03A	077	2-D06
47 33 440	03A	079	2-D08
47 33 457	03A	079	2-D08
47 33 9[illegible]	03A	077	2-D06
47 34 026	03A	015	2-A16
47 34 455	03B	069	3-C22
47 34 455	03B	093	3-D22

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 34 471	03B	069	3-C22
47 34 471	03B	093	3-D22
47 35 023	03A	135	2-F16
47 35 023	03A	145	2-G02
47 35 023	03A	153	2-G10
47 35 031	03A	135	2-F16
47 35 031	03A	145	2-G02
47 35 031	03A	153	2-G10
47 35 049	03A	135	2-F16
47 35 049	03A	145	2-G02
47 35 049	03A	153	2-G10
47 35 056	03A	135	2-F16
47 35 056	03A	145	2-G02
47 35 056	03A	153	2-G10
47 35 924	08D	011	5-K12
47 36 880	08A	049	4-E02
47 36 880	08A	053	4-E06
47 37 151	03A	013	2-A14
47 37 151	03A	015	2-A16
47 37 151	03A	019	2-A20
47 37 631	03A	009	2-A10
47 39 058	03A	013	2-A14
47 39 066	03A	019	2-A20
47 39 454	03A	099	2-E04
47 41 211	08B	113	5-E18
47 43 407	08B	101	5-E06
47 43 407	08B	109	5-E14
47 43 415	08B	101	5-E06
47 43 415	08B	109	5-E14
47 43 423	08B	101	5-E06
47 43 423	08B	109	5-E14
47 43 431	08B	101	5-E06
47 43 431	08B	109	5-E14
47 43 449	08B	101	5-E06
47 43 449	08B	109	5-E14
47 43 456	08B	101	5-E06
47 43 456	08B	109	5-E14
47 43 464	08B	101	5-E06
47 43 464	08B	109	5-E14
47 43 472	08B	101	5-E06
47 43 472	08B	109	5-E14
47 43 480	08B	101	5-E06
47 43 480	08B	109	5-E14
47 43 498	08B	101	5-E06
47 43 498	08B	109	5-E14
47 43 506	08B	101	5-E06
47 43 506	08B	109	5-E14
47 43 514	08B	101	5-E06
47 43 514	08B	109	5-E14
47 43 522	08B	101	5-E06
47 43 530	08B	101	5-E06
47 43 548	08B	101	5-E06
47 43 555	08B	101	5-E06
47 43 563	08B	101	5-E06
47 43 571	08B	101	5-E06
47 49 982	08B	027	5-B04
47 49 990	08B	027	5-B04
47 50 030	02	113	1-G18
47 50 030	02	119	1-G24
47 50 048	02	113	1-G18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 50 055	02	123	1-H04
47 50 063	02	123	1-H04
47 50 162	02	063	1-E16
47 50 170	02	019	1-C20
47 50 188	02	019	1-C20
47 50 402	02	121	1-H02
47 50 600	02	121	1-H02
47 55 492	08C	019	5-J20
47 55 658	08C	019	5-J20
47 55 658	08C	021	5-J22
47 55 666	08C	021	5-J22
47 55 914	08A	017	4-C18
47 58 090	08C	021	5-J22
47 58 090	08C	023	5-J24
47 58 108	08C	023	5-J24
47 58 181	08C	017	5-J18
47 58 694	08D	011	5-K12
47 59 106	08C	017	5-J18
47 61 300	06	009	4-A10
47 61 417	06	009	4-A10
47 61 920	08B	057	5-C10
47 61 920	08B	063	5-C16
47 61 938	08B	057	5-C10
47 61 938	08B	063	5-C16
47 61 946	08B	057	5-C10
47 61 946	08B	063	5-C16
47 61 979	08B	057	5-C10
47 61 979	08B	063	5-C16
47 61 987	08B	057	5-C10
47 61 987	08B	063	5-C16
47 61 995	08B	057	5-C10
47 61 995	08B	063	5-C16
47 62 001	08B	057	5-C10
47 62 001	08B	063	5-C16
47 62 019	08B	057	5-C10
47 62 019	08B	063	5-C16
47 62 027	08B	055	5-C08
47 62 027	08B	063	5-C16
47 62 035	08B	055	5-C08
47 62 035	08B	063	5-C16
47 62 043	08B	055	5-C08
47 62 043	08B	063	5-C16
47 62 050	08B	055	5-C08
47 62 050	08B	063	5-C16
47 62 068	08B	055	5-C08
47 62 068	08B	063	5-C16
47 62 076	08B	055	5-C08
47 62 076	08B	063	5-C16
47 62 084	08B	055	5-C08
47 62 084	08B	063	5-C16
47 62 092	08B	055	5-C08
47 62 092	08B	063	5-C16
47 65 160	08A	091	4-F20
47 65 178	08A	091	4-F20
47 67 208	08A	041	4-D18
47 67 208	08A	043	4-D20
47 68 040	08A	055	4-E08
47 70 004	02	029	1-D06
47 70 012	03A	023	2-A24
47 70 020	03A	029	2-B06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 70 038	02	047	1-D24
47 70 046	03A	029	2-B06
47 70 079	03A	029	2-B06
47 70 095	02	033	1-D10
47 70 145	02	149	1-I06
47 70 152	02	137	1-H18
47 70 160	02	051	1-E04
47 70 178	03A	027	2-B04
47 70 178	03A	195	2-I04
47 70 186	02	049	1-E02
47 70 194	03A	027	2-B04
47 70 194	03A	195	2-I04
47 70 210	03A	029	2-B06
47 70 228	02	149	1-I06
47 70 236	02	039	1-D16
47 70 244	02	017	1-C18
47 70 285	02	029	1-D06
47 70 301	02	029	1-D06
47 70 319	02	031	1-D08
47 70 319	02	167	1-I24
47 70 327	02	029	1-D06
47 70 335	02	029	1-D06
47 70 343	02	029	1-D06
47 70 350	02	029	1-D06
47 70 368	02	091	1-F20
47 70 376	02	031	1-D08
47 70 376	02	047	1-D24
47 70 376	02	049	1-E02
47 70 384	02	069	1-E22
47 70 392	02	069	1-E22
47 70 400	02	067	1-E20
47 70 400	02	069	1-E22
47 70 418	02	087	1-F16
47 70 426	02	087	1-F16
47 70 434	02	069	1-E22
47 70 442	02	069	1-E22
47 70 459	02	037	1-D14
47 70 467	02	037	1-D14
47 70 475	02	037	1-D14
47 70 483	02	037	1-D14
47 70 491	02	037	1-D14
47 70 509	02	037	1-D14
47 70 525	02	037	1-D14
47 70 533	02	037	1-D14
47 70 558	02	037	1-D14
47 70 988	02	137	1-H18
47 70 996	03A	023	2-A24
47 75 060	04	0[illegible]	3-I16
47 75 078	04	063	3-[illegible]
47 75 086	04	047	3-H24
47 75 185	04	043	3-H20
47 75 193	04	043	3-H20
47 75 821	04	037	3-H14
47 75 961	04	037	3-H14
47 76 266	04	013	3-G14
47 78 320	07	013	4-B14
47 78 338	07	013	4-B14
47 78 668	05	017	3-K18
47 78 676	05	017	3-K18
47 80 193	02	059	1-E12

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 80 235	02	071	1-E24
47 80 243	02	075	1-F04
47 80 250	02	075	1-F04
47 80 268	02	075	1-F04
47 81 456	02	075	1-F04
47 81 464	02	075	1-F04
47 81 845	02	075	1-F04
47 81 852	02	075	1-F04
47 81 860	02	073	1-F02
47 81 878	02	073	1-F02
47 81 886	02	075	1-F04
47 81 894	02	073	1-F02
47 85 713	03A	045	2-B22
47 85 713	03A	047	2-B24
47 85 796	08A	059	4-E12
47 88 006	08B	027	5-B04
47 88 014	08B	027	5-B04
47 88 964	08B	125	5-F06
47 88 964	08B	129	5-F10
47 88 972	08B	125	5-F06
47 88 972	08B	129	5-F10
47 89 020	08B	125	5-F06
47 89 020	08B	129	5-F10
47 89 038	08B	125	5-F06
47 89 038	08B	129	5-F10
47 91 224	08B	185	5-H18
47 91 232	08B	185	5-H18
47 94 996	08B	127	5-F08
47 94 996	08B	131	5-F12
47 98 930	08B	049	5-C02
47 98 930	08B	055	5-C08
47 98 930	08B	063	5-C16
47 98 948	08B	049	5-C02
47 98 948	08B	055	5-C08
47 98 948	08B	063	5-C16
47 98 971	08B	049	5-C02
47 98 971	08B	055	5-C08
47 98 971	08B	063	5-C16
47 98 989	08B	049	5-C02
47 98 989	08B	055	5-C08
47 98 989	08B	063	5-C16
47 99 011	08B	049	5-C02
47 99 011	08B	055	5-C08
47 99 011	08B	063	5-C16
47 99 029	08B	049	5-C02
47 99 029	08B	055	5-C08
47 99 029	08B	063	5-C16
47 99 052	08B	047	5-B24
47 99 052	08B	053	5-C06
47 99 052	08B	061	5-C14
47 99 060	08B	047	5-B24
47 99 060	08B	053	5-C06
47 99 060	08B	061	5-C14
47 99 094	08B	047	5-B24
47 99 094	08B	053	5-C06
47 99 094	08B	061	5-C14
47 99 102	08B	047	5-B24
47 99 102	08B	053	5-C06
47 99 102	08B	061	5-C14
47 99 136	08B	047	5-B24

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
47 99 136	08B	053	5-C06
47 99 136	08B	061	5-C14
47 99 144	08B	047	5-B24
47 99 144	08B	053	5-C06
47 99 144	08B	061	5-C14
48 01 163	08B	059	5-C12
48 01 171	08B	059	5-C12
48 01 189	08B	059	5-C12
48 01 197	08B	059	5-C12
48 01 205	08B	059	5-C12
48 01 213	08B	059	5-C12
48 01 221	08B	059	5-C12
48 01 239	08B	059	5-C12
48 01 593	06	011	4-A12
48 01 601	06	011	4-A12
48 01 619	06	011	4-A12
48 01 643	08B	059	5-C12
48 01 650	08B	059	5-C12
48 01 668	08B	059	5-C12
48 01 676	08B	059	5-C12
48 01 981	06	009	4-A10
48 07 939	03A	155	2-G12
48 07 954	03B	091	3-D20
48 08 341	03A	127	2-F08
48 08 358	03A	127	2-F08
48 08 366	03A	127	2-F08
48 08 408	03A	137	2-F18
48 08 416	03A	137	2-F18
48 08 424	03A	137	2-F18
48 12 640	03A	137	2-F18
48 12 657	03A	137	2-F18
48 12 665	03A	137	2-F18
48 12 863	03A	153	2-G10
48 12 871	02	115	1-G20
48 12 889	02	123	1-H04
48 14 117	03A	139	2-F20
48 14 117	03A	147	2-G04
48 14 125	03A	141	2-F22
48 14 125	03A	149	2-G06
48 15 007	08B	127	5-F08
48 15 007	08B	129	5-F10
48 15 015	08B	127	5-F08
48 15 015	08B	131	5-F12
48 15 023	08B	127	5-F08
48 15 023	08B	131	5-F12
48 16 112	08B	019	5-A20
48 17 706	08B	093	5-D22
48 17 706	08B	101	5-E06
48 17 706	08B	109	5-E14
48 17 714	08B	093	5-D22
48 17 714	08B	101	5-E06
48 17 714	08B	109	5-E14
48 18 910	08B	097	5-E02
48 18 910	08B	105	5-E10
48 18 928	08B	097	5-E02
48 18 928	08B	105	5-E10
48 18 936	08B	097	5-E02
48 18 936	08B	105	5-E10
48 18 944	08B	097	5-E02
48 18 944	08B	105	5-E10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B01 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
48 18 951	08B	097	5-E02
48 18 951	08B	105	5-E10
48 18 969	08B	097	5-E02
48 18 969	08B	105	5-E10
48 18 977	08B	097	5-E02
48 18 985	08B	097	5-E02
48 18 993	08B	097	5-E02
48 19 009	08B	097	5-E02
48 19 017	08B	097	5-E02
48 19 025	08B	097	5-E02
48 22 581	08B	125	5-F06
48 22 581	08B	129	5-F10
48 22 599	08B	125	5-F06
48 22 599	08B	129	5-F10
48 22 607	08B	125	5-F06
48 22 607	08B	129	5-F10
48 22 615	08B	125	5-F06
48 22 615	08B	129	5-F10
48 24 009	08A	081	4-F10
48 24 017	08A	081	4-F10
48 24 025	08A	083	4-F12
48 24 033	08A	083	4-F12
48 30 113	03A	059	2-C12
48 30 824	03A	053	2-C06
48 30 840	03A	053	2-C06
48 30 857	03A	053	2-C06
48 30 865	03A	053	2-C06
48 37 837	08D	005	5-K06
48 38 124	05	007	3-K08
48 38 751	07	013	4-B14
48 39 023	07	011	4-B12
48 39 031	07	011	4-B12
48 39 205	07	013	4-B14
48 39 700	05	005	3-K06
48 39 700	05	025	3-L02
48 39 718	05	025	3-L02
48 39 726	05	025	3-L02
48 46 408	06	011	4-A12
48 47 174	08B	051	5-C04
48 47 174	08B	059	5-C12
48 47 182	08B	051	5-C04
48 47 182	08B	059	5-C12
48 47 190	08B	051	5-C04
48 47 190	08B	059	5-C12
48 47 208	08B	051	5-C04
48 47 208	08B	059	5-C12
48 47 216	08B	051	5-C04
48 47 216	08B	059	5-C12
48 47 224	08B	051	5-C04
48 47 224	08B	059	5-C12
48 47 299	06	009	4-A10
48 47 463	06	009	4-A10
48 47 471	06	009	4-A10
48 47 844	06	009	4-A10
48 47 851	06	009	4-A10
48 47 869	06	009	4-A10
48 53 545	08A	095	4-F24
48 53 552	08A	095	4-F24
48 53 776	08A	053	4-E06
48 67 016	02	139	1-H20
48 67 032	08C	023	5-J24
48 68 659	08C	017	5-J18
48 68 675	08C	017	5-J18
48 68 709	08C	017	5-J18
48 68 717	08C	017	5-J18
48 76 363	02	125	1-H06
48 76 371	02	125	1-H06
48 76 389	02	129	1-H10
48 76 397	02	129	1-H10
48 76 405	02	129	1-H10
48 76 611	02	125	1-H06
48 76 637	02	125	1-H06
48 76 645	02	125	1-H06
48 76 652	02	125	1-H06
48 76 751	06	019	4-A20
48 77 015	02	133	1-H14
48 78 146	08D	007	5-K08
48 78 153	08D	007	5-K08
48 78 161	08D	007	5-K08
48 79 060	08D	009	5-K10
48 80 217	08D	005	5-K06
49 00 189	02	011	1-C12
49 00 650	08B	027	5-B04
49 00 668	08B	027	5-B04
49 00 676	08B	027	5-B04
49 00 684	08B	027	5-B04
49 01 104	06	021	4-A22
49 01 401	06	021	4-A22
49 01 419	06	019	4-A20
49 01 443	06	019	4-A20
49 01 476	06	019	4-A20
49 01 476	06	021	4-A22
49 06 822	07	011	4-B12
49 07 598	05	013	3-K14
49 08 448	07	011	4-B12
49 27 943	03A	167	2-G24
49 28 008	03A	137	2-F18
49 28 016	03A	137	2-F18
49 28 016	03A	147	2-G04
49 28 024	03A	137	2-F18
49 28 032	03A	137	2-F18
49 28 040	03A	137	2-F18
49 28 040	03A	147	2-G04
49 28 057	03A	137	2-F18
49 28 057	03A	147	2-G04
49 28 065	03A	137	2-F18
49 28 073	03A	137	2-F18
49 28 081	03A	137	2-F18
49 28 081	03A	147	2-G04
49 28 099	03A	137	2-F18
49 29 311	03A	077	2-D06
49 36 001	08B	185	5-H18
49 36 068	08B	187	5-H20
49 40 292	06	011	4-A12
49 41 100	08D	011	5-K12
49 41 118	08D	011	5-K12
49 41 811	03A	141	2-F22
49 41 811	03A	149	2-G06
49 42 413	03A	141	2-F22
49 42 421	03A	009	2-A10
49 42 504	03A	009	2-A10
49 42 678	03A	137	2-F18
49 42 686	03A	137	2-F18
49 42 686	03A	147	2-G04
49 42 694	03A	137	2-F18
49 42 702	03A	137	2-F18
49 42 710	03A	137	2-F18
49 42 710	03A	147	2-G04
49 42 728	03A	137	2-F18
49 42 736	03A	137	2-F18
49 42 736	03A	147	2-G04
49 61 157	08D	007	5-K08
49 61 165	08D	007	5-K08
49 61 173	08D	007	5-K08
49 61 777	08D	009	5-K10
49 61 918	08D	007	5-K08
50 00 526	08D	005	5-K06
50 10 053	06	021	4-A22
50 10 053	08D	013	5-K14
50 10 061	06	021	4-A22
50 10 061	08D	013	5-K14
50 10 079	06	021	4-A22
50 10 079	08D	013	5-K14
50 10 087	06	021	4-A22
50 10 087	08D	013	5-K14
50 10 103	08D	011	5-K12
50 10 111	08D	011	5-K12
50 10 129	08D	017	5-K18
50 10 202	08D	011	5-K12
50 10 210	08D	011	5-K12
50 10 228	06	021	4-A22
50 10 236	06	009	4-A10
50 10 236	06	021	4-A22
50 10 269	06	009	4-A10
50 10 269	06	021	4-A22
50 11 465	08D	017	5-K18
50 11 762	06	009	4-A10
50 12 182	06	009	4-A10
50 12 232	08D	011	5-K12
50 12 240	08D	011	5-K12
50 13 313	06	009	4-A10
50 13 339	08B	015	5-A16
50 13 347	08B	015	5-A16
50 13 362	08B	017	5-A18
50 13 370	08B	015	5-A16
69 11 804	08A	077	4-F06
69 11 804	08A	105	4-G10
69 11 895	08A	059	4-E12
69 15 706	08A	059	4-E12
69 21 142	08A	099	4-G04
69 21 142	08A	101	4-G06
69 30 572	08A	029	4-D06
69 30 572	08A	041	4-D18
69 30 572	08A	043	4-D20
69 30 572	08A	095	4-F24
69 38 906	08A	093	4-F22
69 38 914	08A	093	4-F22
69 39 755	08A	035	4-D12
69 39 805	08A	007	4-C08
69 39 839	08A	007	4-C08
69 41 017	08A	023	4-C24
69 42 775	03A	157	2-G14
69 43 443	08A	055	4-E08
69 43 450	08A	055	4-E08
69 43 468	08A	047	4-D24
69 43 476	08A	047	4-D24
69 44 482	08A	053	4-E06
69 44 490	08A	053	4-E06
69 44 565	08A	053	4-E06
69 45 349	08A	037	4-D14
69 45 356	08A	037	4-D14
69 45 497	08A	049	4-E02
69 45 505	08A	023	4-C24
69 45 711	08A	049	4-E02
69 45 760	08A	049	4-E02
69 47 824	08A	045	4-D22
69 47 824	08A	047	4-D24
69 48 871	08A	089	4-F18
69 48 871	08A	119	4-G24
69 48 962	08A	045	4-D22
69 48 962	08A	047	4-D24
69 48 962	08A	099	4-G04
69 54 952	08A	099	4-G04
69 55 009	08A	099	4-G04
69 55 033	08A	099	4-G04
69 55 322	08A	011	4-C12
69 55 512	08A	013	4-C14
69 55 520	08A	013	4-C14
69 55 561	08A	017	4-C18
69 55 678	08A	019	4-C20
69 56 593	08A	035	4-D12
69 56 601	08A	091	4-F20
69 56 668	08A	047	4-D24
69 56 676	08A	047	4-D24
69 56 684	08D	015	5-K16
69 56 700	08A	091	4-F20
69 56 783	08A	097	4-G02
69 57 344	08A	013	4-C14
69 57 393	08A	031	4-D08
69 57 708	08A	037	4-D14
69 57 708	08A	039	4-D16
69 58 904	08A	073	4-F02
69 58 987	08A	007	4-C08
69 59 001	08A	015	4-C16
69 59 142	08A	099	4-G04
69 59 142	08A	103	4-G08
69 59 225	08A	011	4-C12
69 59 258	08A	011	4-C12
69 59 266	08A	011	4-C12
69 59 274	08A	011	4-C12
69 59 282	08A	011	4-C12
69 59 464	08A	061	4-E14
69 59 464	08A	067	4-E20
69 59 464	08A	071	4-E24
69 59 464	08A	077	4-F06
69 59 464	08A	093	4-F22
69 59 464	08A	121	4-H02

6-B02 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
69 59 464	08A	123	4-H04
69 59 753	08A	031	4-D08
69 59 787	08A	013	4-C14
69 59 795	08A	013	4-C14
69 59 795	08A	015	4-C16
69 60 066	08A	095	4-F24
69 60 785	08A	041	4-D18
69 60 785	08A	043	4-D20
69 60 785	08A	119	4-G24
69 60 793	08A	041	4-D18
69 60 793	08A	043	4-D20
69 60 793	08A	119	4-G24
69 60 926	08A	073	4-F02
69 60 926	08A	075	4-F04
69 60 926	08A	079	4-F08
69 60 975	08A	009	4-C10
69 61 049	08A	013	4-C14
69 61 064	08A	013	4-C14
69 61 700	08A	119	4-G24
69 61 718	08A	119	4-G24
69 61 858	08A	035	4-D12
69 61 866	08A	049	4-E02
69 62 120	08A	061	4-E14
69 62 120	08A	067	4-E20
69 62 120	08A	071	4-E24
69 62 138	08A	061	4-E14
69 62 138	08A	067	4-E20
69 62 138	08A	071	4-E24
69 62 146	08A	061	4-E14
69 62 146	08A	067	4-E20
69 62 146	08A	071	4-E24
69 62 153	08A	061	4-E14
69 62 153	08A	067	4-E20
69 62 153	08A	071	4-E24
69 62 526	08A	049	4-E02
69 62 534	08A	049	4-E02
69 62 542	08A	007	4-C08
69 62 807	08A	089	4-F18
69 62 807	08A	119	4-G24
69 62 815	08A	089	4-F18
69 62 815	08A	119	4-G24
69 62 823	08A	035	4-D12
69 63 300	08A	057	4-E10
69 63 318	08A	057	4-E10
69 63 805	08A	015	4-C16
69 63 904	08A	007	4-C08
69 63 912	08A	007	4-C08
69 63 920	08A	007	4-C08
69 63 953	08A	049	4-E02
69 63 961	08A	023	4-C24
69 63 995	08A	049	4-E02
69 73 002	08A	023	4-C24
69 73 010	08A	023	4-C24
69 73 028	08A	023	4-C24
69 73 218	08A	031	4-D08
69 73 317	08A	049	4-E02
69 73 440	08A	009	4-C10
69 73 515	08A	011	4-C12
69 73 549	08A	023	4-C24
69 73 556	08A	009	4-C10
69 73 564	08A	007	4-C08
69 73 622	08A	031	4-D08
69 73 671	08A	031	4-D08
69 73 689	08A	031	4-D08
69 73 689	08A	115	4-G20
69 73 697	08A	031	4-D08
69 73 697	08A	115	4-G20
69 73 762	08A	031	4-D08
69 73 770	08A	031	4-D08
69 73 788	08A	031	4-D08
69 73 788	08A	115	4-G20
69 73 804	08A	031	4-D08
69 73 861	05	015	3-K16
69 73 861	05	017	3-K18
69 73 945	08A	103	4-G08
69 74 000	08A	049	4-E02
69 74 679	08A	015	4-C16
69 75 262	08A	013	4-C14
69 75 270	08A	013	4-C14
69 75 460	08A	023	4-C24
69 75 510	08A	023	4-C24
69 75 783	08A	041	4-D18
69 75 791	08A	041	4-D18
69 76 088	08A	027	4-D04
69 76 096	08A	027	4-D04
69 76 120	08A	027	4-D04
69 76 138	08A	027	4-D04
69 76 369	08A	049	4-E02
69 91 079	08A	061	4-E14
69 91 244	08A	087	4-F16
69 91 244	08A	089	4-F18
69 91 244	08A	115	4-G20
69 91 244	08A	119	4-G24
69 91 533	08A	049	4-E02
69 91 541	08A	073	4-F02
69 91 558	08A	073	4-F02
69 91 871	08A	101	4-G06
69 91 871	08A	103	4-G08
69 91 871	08A	105	4-G10
69 91 954	08A	101	4-G06
69 91 954	08A	103	4-G08
69 91 954	08A	105	4-G10
69 92 028	08A	089	4-F18
69 92 028	08A	119	4-G24
69 92 325	08A	103	4-G08
69 92 614	08A	055	4-E08
69 92 622	08A	091	4-F20
69 92 630	08A	091	4-F20
69 92 648	08A	091	4-F20
69 92 655	08A	091	4-F20
69 92 929	08A	049	4-E02
69 93 505	08A	123	4-H04
69 93 513	08A	123	4-H04
69 93 547	08A	055	4-E08
70 38 342	08A	005	4-C06
70 38 342	08A	019	4-C20
70 38 342	08A	029	4-D06
70 45 776	08B	005	5-A06
70 61 328	04	013	3-G14
70 84 197	03A	049	2-C02
70 84 197	03A	051	2-C04
70 84 197	03A	053	2-C06
70 84 197	03A	057	2-C10
70 84 197	03A	059	2-C12
70 88 073	08A	103	4-G08
71 08 491	03A	071	2-C24
71 08 491	03A	083	2-D12
71 08 491	03A	161	2-G18
71 08 491	03A	165	2-G22
71 08 491	03A	193	2-I02
71 13 970	08B	013	5-A14
71 16 452	03A	167	2-G24
71 17 880	03B	097	3-E02
71 17 880	03B	107	3-E12
71 17 880	03B	117	3-E22
71 21 239	03A	081	2-D10
71 21 239	03A	155	2-G12
71 54 719	03A	041	2-B18
71 54 719	03A	043	2-B20
71 54 719	03A	049	2-C02
71 54 719	03A	051	2-C04
71 54 719	03A	053	2-C06
71 54 727	03A	041	2-B18
71 54 727	03A	049	2-C02
71 55 021	03B	011	3-A12
71 55 047	03B	097	3-E02
71 55 062	03B	117	3-E22
71 55 062	03B	127	3-F08
71 55 096	03B	009	3-A10
71 55 096	03B	031	3-B08
71 55 096	03B	053	3-C06
71 55 096	03B	075	3-D04
71 55 112	03B	005	3-A06
71 55 112	03B	027	3-B04
71 55 112	03B	049	3-C02
71 55 120	03B	071	3-C24
71 55 120	03B	005	3-A06
71 55 120	03B	027	3-B04
71 55 120	03B	049	3-C02
71 55 120	03B	071	3-C24
71 55 146	03B	105	3-E10
71 55 146	03B	115	3-E20
71 55 146	03B	125	3-F06
71 55 146	03B	135	3-F16
71 55 153	03B	097	3-E02
71 55 153	03B	107	3-E12
71 55 153	03B	117	3-E22
71 55 153	03B	127	3-F08
71 55 203	03B	105	3-E10
71 55 203	03B	115	3-E20
71 55 203	03B	125	3-F06
71 55 203	03B	135	3-F16
71 55 211	03B	097	3-E02
71 55 211	03B	107	3-E12
71 55 211	03B	117	3-E22
71 55 211	03B	127	3-F08
71 55 229	03B	097	3-E02
71 55 229	03B	107	3-E12
71 55 229	03B	117	3-E22
71 55 229	03B	127	3-F08
71 55 633	03B	105	3-E10
71 55 633	03B	115	3-E20
71 55 633	03B	125	3-F06
71 55 633	03B	135	3-F16
71 55 658	03B	107	3-E12
71 55 658	03B	117	3-E22
71 55 658	03B	127	3-F08
71 55 658	03B	097	3-E02
71 55 708	08A	029	4-D06
71 55 716	03B	097	3-E02
71 55 716	03B	107	3-E12
71 55 716	03B	117	3-E22
71 55 716	03B	127	3-F08
71 56 409	03A	155	2-G12
71 56 409	08C	011	5-J12
71 57 308	03A	035	2-B12
71 62 308	02	099	1-G04
71 62 308	08A	017	4-C18
71 83 965	02	155	1-I12
71 83 973	02	155	1-I12
73 11 764	03A	017	2-A18
73 11 764	03A	019	2-A20
73 11 772	08B	175	5-H08
73 11 772	08B	179	5-H12
73 13 182	04	071	3-I24
73 13 240	04	071	3-I24
73 13 752	08A	005	4-C06
73 26 093	03A	157	2-G14
73 48 287	08D	005	5-K06
73 73 251	08A	093	4-F22
73 73 269	08A	061	4-E14
73 73 269	08A	065	4-E18
73 73 269	08A	069	4-E22
73 73 269	08A	071	4-E24
73 73 269	08A	077	4-F06
73 73 269	08A	093	4-F22
73 73 269	08A	121	4-H02
73 73 269	08A	123	4-H04
73 98 266	08C	015	5-J16
73 98 266	08C	017	5-J18
73 98 282	08B	139	5-F20
73 98 324	06	007	4-A08
73 98 332	08B	015	5-A16
73 98 381	06	007	4-A08
73 98 407	02	159	1-I16
73 98 407	02	161	1-I18
73 98 407	08C	023	5-J24
73 98 415	02	121	1-H02
73 98 415	02	161	1-I18
73 98 415	03A	085	2-D14
73 98 423	03A	049	2-C02
73 98 423	03A	051	2-C04
73 98 423	03A	053	2-C06
73 98 423	03A	055	2-C08
73 98 423	03A	103	2-E08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 -B03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
73 98 423	08A	089	4-F18
73 98 423	08B	069	5-C22
73 98 423	08B	075	5-D04
73 98 423	08B	081	5-D10
73 98 423	08B	087	5-D16
73 98 423	08B	091	5-D20
73 98 423	08B	095	5-D24
73 98 423	08B	099	5-E04
73 98 423	08B	103	5-E08
73 98 423	08B	107	5-E12
73 98 423	08B	111	5-E16
73 98 464	02	063	1-E16
73 98 464	02	141	1-H22
73 98 464	02	169	1-J02
73 98 464	05	023	3-K24
73 98 506	08A	121	4-H02
73 98 530	06	017	4-A18
73 98 688	08A	007	4-C08
73 98 746	02	121	1-H02
73 98 761	08A	041	4-D18
73 98 761	08A	043	4-D20
73 98 787	06	011	4-A12
73 98 803	02	113	1-G18
73 98 803	02	117	1-G22
73 98 829	08A	035	4-D12
73 98 829	08A	037	4-D14
73 98 829	08A	039	4-D16
73 98 852	06	011	4-A12
73 98 886	08A	049	4-E02
73 98 886	08A	053	4-E06
73 98 894	02	139	1-H20
73 98 936	08B	117	5-E22
73 98 936	08B	121	5-F02
73 98 936	08B	123	5-F04
73 98 936	08B	125	5-F06
73 98 936	08B	129	5-F10
73 98 944	02	107	1-G12
73 98 944	03A	081	2-D10
73 98 944	03A	155	2-G12
73 98 977	02	115	1-G20
73 98 977	02	119	1-G24
73 98 977	03A	081	2-D10
73 98 977	03A	155	2-G12
73 99 181	08A	035	4-D12
73 99 207	08C	007	5-J08
73 99 256	03A	097	2-E02
73 99 264	08B	067	5-C20
73 99 264	08B	073	5-D02
73 99 272	02	119	1-G24
73 99 272	05	017	3-K18
73 99 330	07	007	4-B08
73 99 330	07	009	4-B10
73 99 348	08C	007	5-J08
73 99 348	08C	009	5-J10
73 99 454	02	125	1-H06
73 99 454	02	129	1-H10
73 99 454	03A	069	2-C22
73 99 454	08A	005	4-C06
73 99 454	08A	007	4-C08
73 99 454	08A	011	4-C12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
73 99 454	08A	017	4-C18
73 99 454	08A	023	4-C24
73 99 470	08A	061	4-E14
73 99 470	08A	065	4-E18
73 99 470	08A	069	4-E22
73 99 470	08A	121	4-H02
73 99 488	08A	061	4-E14
73 99 488	08A	065	4-E18
73 99 488	08A	067	4-E20
73 99 488	08A	069	4-E22
73 99 488	08A	071	4-E24
73 99 488	08A	077	4-F06
73 99 488	08A	079	4-F08
73 99 488	08A	093	4-F22
73 99 488	08A	121	4-H02
73 99 488	08A	123	4-H04
73 99 496	08B	175	5-H08
73 99 520	03A	101	2-E06
73 99 520	03A	157	2-G14
73 99 579	08B	005	5-A06
73 99 603	02	169	1-J02
73 99 611	02	169	1-J02
73 99 652	02	115	1-G20
73 99 652	02	119	1-G24
73 99 652	02	123	1-H04
73 99 652	04	067	3-I20
73 99 694	03A	161	2-G18
73 99 793	08B	193	5-I02
73 99 801	05	019	3-K20
73 99 801	05	021	3-K22
73 99 843	08B	179	5-H12
73 99 884	08A	099	4-G04
73 99 884	08A	101	4-G06
73 99 900	02	107	1-G12
73 99 900	03A	063	2-C16
73 99 900	03A	071	2-C24
73 99 934	06	011	4-A12
74 80 643	02	025	1-D02
74 80 643	02	027	1-D04
74 80 684	02	025	1-D02
74 80 684	02	027	1-D04
74 80 841	02	027	1-D04
74 81 617	02	045	1-D22
74 81 740	02	025	1-D02
74 81 740	02	027	1-D04
74 81 757	02	011	1-C12
74 85 105	02	023	1-C24
74 85 576	02	163	1-I20
74 86 806	02	011	1-C12
74 86 921	02	067	1-E20
74 86 954	02	067	1-E20
74 87 937	08D	007	5-K08
74 95 559	08C	019	5-J20
74 96 011	02	045	1-D22
74 96 011	02	167	1-I24
74 96 029	08A	063	4-E16
74 96 029	08A	067	4-E20
74 96 029	08A	071	4-E24
74 96 029	08A	121	4-H02
74 96 037	08A	063	4-E16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
74 96 037	08A	067	4-E20
74 96 037	08A	071	4-E24
74 96 037	08A	121	4-H02
74 96 045	04	055	3-I08
74 96 045	04	075	3-J04
74 96 052	04	051	3-I04
74 96 052	04	075	3-J04
74 96 060	04	051	3-I04
74 96 060	04	075	3-J04
74 96 078	04	061	3-I14
74 96 078	04	075	3-J04
74 96 086	04	055	3-I08
74 96 086	04	075	3-J04
74 96 094	04	035	3-H12
74 96 094	04	045	3-H22
74 96 094	04	047	3-H24
74 96 094	04	051	3-I04
74 96 094	04	055	3-I08
74 96 094	04	061	3-I14
74 96 094	04	063	3-I16
74 96 094	04	065	3-I18
74 96 094	04	075	3-J04
74 96 102	04	035	3-H12
74 96 102	04	045	3-H22
74 96 102	04	047	3-H24
74 96 102	04	051	3-I04
74 96 102	04	055	3-I08
74 96 102	04	061	3-I14
74 96 102	04	063	3-I16
74 96 102	04	065	3-I18
74 96 102	04	077	3-J06
74 96 250	02	047	1-D24
74 96 250	02	167	1-I24
74 96 268	02	029	1-D06
74 96 268	02	041	1-D18
74 96 268	02	047	1-D24
74 96 268	02	049	1-E02
74 96 268	02	087	1-F16
74 96 276	04	039	3-H16
74 96 284	02	149	1-I06
74 96 292	02	025	1-D02
74 96 292	02	027	1-D04
74 96 292	02	043	1-D20
74 97 001	08A	109	4-G14
74 97 019	08A	107	4-G12
74 97 019	08A	111	4-G16
74 97 084	08A	115	4-G20
74 97 092	08A	087	4-F16
74 97 092	08A	115	4-G20
74 97 100	08A	111	4-G16
74 97 118	08A	089	4-F18
74 97 118	08A	119	4-G24
74 97 126	08A	111	4-G16
74 97 225	08A	111	4-G16
74 97 324	08A	057	4-E10
74 97 357	08A	087	4-F16
74 97 365	08A	111	4-G16
74 97 415	08A	111	4-G16
74 97 423	08A	111	4-G16
74 97 514	08A	111	4-G16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
74 97 522	08A	111	4-G16
74 97 530	08A	111	4-G16
74 97 571	08A	077	4-F06
74 97 589	08A	077	4-F06
74 97 589	08A	121	4-H02
74 97 597	08A	077	4-F06
74 97 753	08A	111	4-G16
74 97 761	08A	111	4-G16
74 97 779	08A	111	4-G16
74 97 787	08A	111	4-G16
74 97 795	08A	111	4-G16
75 00 713	02	011	1-C12
75 01 349	02	011	1-C12
75 02 263	02	053	1-E06
75 04 178	02	011	1-C12
75 04 483	03A	025	2-B02
75 04 491	03A	025	2-B02
75 04 509	03A	025	2-B02
75 04 517	03A	025	2-B02
75 04 525	03A	025	2-B02
75 04 566	02	011	1-C12
75 05 134	02	011	1-C12
75 06 793	03A	025	2-B02
75 08 690	02	021	1-C22
75 08 955	02	023	1-C24
75 11 751	02	061	1-E14
75 12 593	02	059	1-E12
75 14 367	02	013	1-C14
75 15 190	02	013	1-C14
75 15 547	02	011	1-C12
75 15 588	02	167	1-I24
75 16 974	02	089	1-F18
75 17 345	02	167	1-I24
75 19 143	02	011	1-C12
75 19 143	02	169	1-J02
75 19 432	02	113	1-G18
75 19 432	02	117	1-G22
75 19 531	02	151	1-I08
75 19 697	02	151	1-I08
75 21 313	02	013	1-C14
75 21 875	02	089	1-F18
75 22 709	02	143	1-H24
75 27 732	03A	021	2-A22
75 27 732	03A	023	2-A24
75 27 757	03A	021	2-A22
75 27 765	03A	021	2-A22
75 27 807	03A	021	2-A22
75 27 807	03A	023	2-A24
75 27 849	03A	021	2-A22
75 27 872	03A	021	2-A22
75 27 880	03A	021	2-A22
75 28 953	03A	085	2-D14
75 31 544	08D	013	5-K14
75 33 136	02	157	1-I14
75 35 255	03A	021	2-A22
75 35 271	03A	021	2-A22
75 35 297	03A	021	2-A22
75 35 305	03A	021	2-A22
75 35 313	03A	021	2-A22
75 35 321	03A	021	2-A22

6 -B04 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 35 339	03A	021	2-A22
75 36 501	02	155	1-I12
75 36 857	02	009	1-C10
75 39 240	02	079	1-F08
75 39 257	02	079	1-F08
75 39 984	03A	161	2-G18
75 41 907	04	037	3-H14
75 50 346	02	127	1-H08
75 50 346	02	129	1-H10
75 50 346	02	135	1-H16
75 50 353	02	127	1-H08
75 50 353	02	129	1-H10
75 50 353	02	135	1-H16
75 50 569	02	009	1-C10
75 50 734	04	069	3-I22
75 50 783	04	069	3-I22
75 50 84[illegible]	04	069	3-I22
75 50 858	04	069	3-I22
75 50 973	04	069	3-I22
75 51 187	02	125	1-H06
75 51 328	02	009	1-C10
75 51 385	02	009	1-C10
75 51 831	02	009	1-C10
75 52 102	04	073	3-J02
75 52 128	04	073	3-J02
75 52 151	04	049	3-I02
75 52 151	04	051	3-I04
75 52 151	04	057	3-I10
75 52 151	04	077	3-J06
75 52 193	04	053	3-I06
75 52 193	04	077	3-J06
75 52 201	04	053	3-I06
75 52 201	04	077	3-J06
75 52 235	04	053	3-I06
75 52 235	04	077	3-J06
75 52 243	04	053	3-I06
75 52 243	04	077	3-J06
75 52 250	04	047	3-H24
75 52 250	04	075	3-J04
75 52 250	04	077	3-J06
75 52 268	04	051	3-I04
75 52 268	04	077	3-J06
75 52 276	04	065	3-I18
75 52 276	04	075	3-J04
75 52 276	04	077	3-J06
75 52 292	04	053	3-I06
75 52 292	04	075	3-J04
75 52 326	04	057	3-I10
75 52 326	04	075	3-J04
75 52 342	04	065	3-I18
75 52 342	04	077	3-J06
75 52 771	04	057	3-I10
75 52 797	04	057	3-I10
75 52 805	04	055	3-I08
75 52 813	04	055	3-I08
75 52 821	04	055	3-I08
75 52 839	04	055	3-I08
75 52 847	04	055	3-I08
75 52 854	04	055	3-I08
75 52 862	04	053	3-I06

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 52 870	04	053	3-I06
75 52 896	04	049	3-I02
75 52 904	04	051	3-I04
75 52 912	04	051	3-I04
75 52 961	04	049	3-I02
75 52 961	04	075	3-J04
75 53 001	04	059	3-I12
75 53 050	04	053	3-I06
75 53 050	04	057	3-I10
75 53 050	04	075	3-J04
75 53 068	04	051	3-I04
75 53 068	04	053	3-I06
75 53 068	04	057	3-I10
75 53 068	04	075	3-J04
75 53 084	04	049	3-I02
75 53 084	04	075	3-J04
75 53 092	04	051	3-I04
75 53 092	04	053	3-I06
75 53 092	04	057	3-I10
75 53 092	04	075	3-J04
75 53 183	04	053	3-I06
75 53 183	04	075	3-J04
75 53 191	04	053	3-I06
75 53 191	04	075	3-J04
75 53 209	04	053	3-I06
75 53 209	04	075	3-J04
75 53 217	04	051	3-I04
75 53 217	04	053	3-I06
75 53 217	04	075	3-J04
75 53 225	04	053	3-I06
75 53 225	04	057	3-I10
75 53 225	04	075	3-J04
75 53 233	04	053	3-I06
75 53 233	04	057	3-I10
75 53 233	04	075	3-J04
75 53 241	04	053	3-I06
75 53 241	04	057	3-I10
75 53 241	04	075	3-J04
75 53 258	04	053	3-I06
75 53 258	04	075	3-J04
75 53 266	04	053	3-I06
75 53 266	04	057	3-I10
75 53 266	04	075	3-J0[illegible]
75 53 274	04	053	3-I06
75 53 274	04	075	3-J04
75 53 308	08A	049	4[illegible]
75 53 365	04	069	3-I22
75 53 415	02	125	1-H06
75 53 415	02	129	1-H10
75 53 605	04	053	3-I06
75 54 215	08B	005	5-A06
75 54 348	02	125	1-H06
75 54 553	04	037	3-H1[illegible]
75 54 660	04	065	3-I18
75 54 678	04	065	3-I18
75 54 686	04	065	3-I18
75 54 694	04	065	3-I18
75 54 710	04	065	3-I18
75 54 736	04	065	3-I18
75 54 801	04	055	3-I08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 54 868	04	051	3-I04
75 54 900	04	051	3-I04
75 54 934	04	047	3-H24
75 54 967	04	047	3-H24
75 56 053	04	053	3-I06
75 56 079	04	055	3-I08
75 56 095	04	065	3-I18
75 56 103	04	065	3-I18
75 56 111	04	065	3-I18
75 56 137	04	065	3-I18
75 56 145	04	065	3-I18
75 56 228	04	077	3-J06
75 56 319	04	049	3-I02
75 56 848	04	065	3-I18
75 56 855	04	065	3-I18
75 56 863	04	065	3-I18
75 56 871	04	065	3-I18
75 56 889	04	065	3-I18
75 56 905	04	065	3-I18
75 56 913	04	065	3-I18
75 56 939	04	065	3-I18
75 56 996	04	047	3-H24
75 56 996	04	077	3-J06
75 57 085	04	053	3-I06
75 57 085	04	075	3-J04
75 57 093	04	047	3-H24
75 57 101	04	057	3-I10
75 57 440	04	053	3-I06
75 57 457	04	053	3-I06
75 57 457	04	077	3-J06
75 57 465	04	059	3-I12
75 57 465	04	077	3-J06
75 57 747	04	049	3-I02
75 57 754	04	049	3-I02
75 57 754	04	063	3-I16
75 57 762	04	065	3-I18
75 57 804	04	059	3-I12
75 57 846	04	063	3-I16
75 57 887	04	047	3-H24
75 57 903	04	065	3-I18
75 57 986	04	049	3-I02
75 58 141	04	063	3-I16
75 58 232	04	047	3-H24
75 58 240	04	047	3-H24
75 58 356	04	047	3-H24
75 58 356	04	077	3-J06
75 58 406	04	077	3-J06
75 58 430	04	035	3-H12
75 58 430	04	059	3-I12
75 58 448	04	035	3-H12
75 58 455	04	057	3-I10
75 58 497	04	035	3-H12
75 58 497	04	045	3-H22
75 58 505	04	045	3-H22
75 58 513	04	065	3-I18
75 58 521	04	047	3-H24
75 58 786	04	049	3-I02
75 58 786	04	075	3-J04
75 58 836	04	065	3-I18
75 58 950	04	035	3-H12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 58 950	04	073	3-J02
75 59 008	04	047	3-H24
75 59 024	04	051	3-I04
75 59 537	02	169	1-J02
75 59 768	02	141	1-H22
75 59 875	04	037	3-H14
75 63 042	02	015	1-C16
75 64 321	02	113	1-G18
75 64 321	02	119	1-G24
75 65 104	02	143	1-H24
75 68 934	02	025	1-D02
75 68 934	02	027	1-D04
75 68 942	02	025	1-D02
75 68 942	02	027	1-D04
75 70 294	04	063	3-I16
75 70 310	04	063	3-I16
75 70 351	04	051	3-I04
75 70 542	04	045	3-H22
75 70 542	04	077	3-J06
75 70 666	04	057	3-I10
75 70 740	04	075	3-J04
75 70 757	02	169	1-J02
75 70 823	02	141	1-H22
75 70 823	02	169	1-J02
75 71 391	04	073	3-J02
75 71 391	04	077	3-J06
75 71 490	04	047	3-H24
75 71 508	04	065	3-I18
75 71 516	04	065	3-I18
75 71 524	04	065	3-I18
75 71 532	04	065	3-I18
75 71 540	04	065	3-I18
75 71 557	04	065	3-I18
75 71 565	04	065	3-I18
75 71 573	04	065	3-I18
75 71 581	04	065	3-I18
75 71 599	04	065	3-I18
75 71 862	04	035	3-H12
75 71 870	04	035	3-H12
75 71 896	04	073	3-J02
75 71 904	04	073	3-J02
75 71 938	04	057	3-I10
75 71 961	04	057	3-I10
75 71 979	04	057	3-I10
75 72 159	04	045	3-H22
75 72 175	04	045	3-H22
75 72 175	04	077	3-J06
75 72 571	04	075	3-J04
75 72 605	04	049	3-I02
75 72 605	04	075	3-J04
75 72 613	04	049	3-I02
75 72 613	04	075	3-J04
75 72 621	04	049	3-I02
75 72 621	04	075	3-J04
75 72 639	04	049	3-I02
75 72 639	04	075	3-J04
75 72 704	04	051	3-I04
75 72 704	04	075	3-J04
75 73 280	04	051	3-I04
75 73 413	02	009	1-C10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 -B05 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 73 694	06	017	4-A18
75 73 819	04	047	3-H24
75 73 934	04	065	3-I18
75 74 221	04	059	3-I12
75 74 767	04	063	3-I16
75 74 833	04	049	3-I02
75 74 833	04	077	3-J06
75 74 841	04	049	3-I02
75 74 890	04	049	3-I02
75 74 890	04	075	3-J04
75 75 038	04	059	3-I12
75 75 251	04	063	3-I16
75 75 442	04	073	3-J02
75 75 509	04	035	3-H12
75 75 509	04	073	3-J02
75 75 525	04	047	3-H24
75 75 525	04	073	3-J02
75 75 566	04	035	3-H12
75 75 566	04	073	3-J02
75 75 574	04	035	3-H12
75 75 574	04	073	3-J02
75 75 632	04	051	3-I04
75 76 077	04	049	3-I02
75 76 333	02	009	1-C10
75 76 382	02	125	1-H06
75 76 390	02	125	1-H06
75 76 390	02	129	1-H10
75 76 416	04	037	3-H14
75 76 663	02	125	1-H06
75 76 671	02	125	1-H06
75 76 788	04	047	3-H24
75 76 796	04	075	3-J04
75 76 853	04	075	3-J04
75 76 911	04	045	3-H22
75 76 937	04	047	3-H24
75 76 960	02	127	1-H08
75 76 960	02	169	1-J02
75 77 075	04	053	3-I06
75 77 182	04	057	3-I10
75 77 182	04	075	3-J04
75 77 257	04	057	3-I10
75 77 257	04	075	3-J04
75 77 265	04	057	3-I10
75 77 265	04	075	3-J04
75 77 273	04	057	3-I10
75 77 273	04	075	3-J04
75 77 323	02	125	1-H06
75 77 331	08A	035	4-D12
75 77 562	04	047	3-H24
75 77 729	04	037	3-H14
75 77 885	02	133	1-H14
75 77 893	02	009	1-C10
75 77 927	04	069	3-I22
75 78 032	04	059	3-I12
75 78 040	04	059	3-I12
75 78 057	04	059	3-I12
75 78 065	04	059	3-I12
75 78 073	04	059	3-I12
75 78 081	04	059	3-I12
75 78 099	04	059	3-I12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 78 107	04	059	3-I12
75 78 115	04	059	3-I12
75 78 123	04	059	3-I12
75 78 131	04	059	3-I12
75 78 149	04	059	3-I12
75 78 156	04	059	3-I12
75 78 164	04	059	3-I12
75 78 172	04	059	3-I12
75 78 180	04	059	3-I12
75 78 198	04	059	3-I12
75 78 206	04	059	3-I12
75 78 214	04	059	3-I12
75 78 388	04	057	3-I10
75 78 396	04	057	3-I10
75 78 412	04	057	3-I10
75 78 420	04	057	3-I10
75 78 438	04	057	3-I10
75 78 446	04	057	3-I10
75 78 453	04	057	3-I10
75 78 461	04	057	3-I10
75 78 479	04	057	3-I10
75 78 487	04	057	3-I10
75 78 495	04	057	3-I10
75 78 503	04	057	3-I10
75 78 511	04	057	3-I10
75 78 529	04	057	3-I10
75 78 537	04	059	3-I12
75 78 545	04	059	3-I12
75 78 552	04	059	3-I12
75 78 560	04	059	3-I12
75 78 578	04	059	3-I12
75 78 586	04	059	3-I12
75 78 594	04	059	3-I12
75 78 602	04	059	3-I12
75 78 610	04	059	3-I12
75 78 628	04	059	3-I12
75 78 636	04	059	3-I12
75 78 925	04	057	3-I10
75 79 063	04	059	3-I12
75 79 063	04	079	3-J08
75 79 071	04	061	3-I14
75 79 071	04	079	3-J08
75 79 188	04	059	3-I12
75 79 444	04	059	3-I12
75 79 451	04	059	3-I12
75 83 628	02	151	1-I08
75 85 052	02	015	1-C16
75 85 086	02	021	1-C22
75 85 540	03A	025	2-B02
75 85 755	02	163	1-I20
75 85 847	02	011	1-C12
75 86 019	02	093	1-F22
75 86 019	02	097	1-G02
75 86 050	02	053	1-E06
75 88 320	02	011	1-C12
75 88 684	02	015	1-C16
75 88 783	02	025	1-D02
75 88 783	02	027	1-D04
75 91 035	03A	157	2-G14
75 91 480	02	113	1-G18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 91 480	02	117	1-G22
75 91 480	02	119	1-G24
75 91 480	02	121	1-H02
75 91 936	02	161	1-I18
75 92 017	06	019	4-A20
75 92 033	04	069	3-I22
75 92 223	04	035	3-H12
75 92 223	04	077	3-J06
75 92 231	04	077	3-J06
75 92 249	04	049	3-I02
75 92 249	04	075	3-J04
75 92 272	04	059	3-I12
75 92 330	04	047	3-H24
75 92 330	04	077	3-J06
75 92 645	04	059	3-I12
75 92 918	02	133	1-H14
75 93 049	06	019	4-A20
75 93 072	06	019	4-A20
75 93 080	06	019	4-A20
75 93 221	02	141	1-H22
75 93 221	02	169	1-J02
75 93 221	03A	155	2-G12
75 93 221	05	013	3-K14
75 93 650	04	063	3-I16
75 93 759	04	047	3-H24
75 94 120	04	035	3-H12
75 94 120	04	077	3-J06
75 94 146	04	063	3-I16
75 94 146	04	077	3-J06
75 94 153	04	051	3-I04
75 94 153	04	077	3-J06
75 94 161	04	049	3-I02
75 94 161	04	077	3-J06
75 94 179	04	047	3-H24
75 94 179	04	077	3-J06
75 94 187	04	047	3-H24
75 94 187	04	073	3-J02
75 94 187	04	077	3-J06
75 94 880	04	047	3-H24
75 94 880	04	077	3-J06
75 94 898	04	035	3-H12
75 94 898	04	077	3-J06
75 95 002	04	063	3-I16
75 95 325	04	045	3-H22
75 95 325	04	077	3-J06
75 95 739	04	055	3-I08
75 95 754	04	055	3-I08
75 95 804	04	055	3-I08
75 95 812	04	055	3-I08
75 95 887	04	049	3-I02
75 95 895	04	049	3-I02
75 95 903	04	049	3-I02
95 937	04	055	3-I08
96 018	02	139	1-H20
75 96 257	02	135	1-H16
75 96 604	02	139	1-H20
75 96 901	04	053	3-I06
75 96 935	04	049	3-I02
75 97 214	04	057	3-I10
75 97 222	04	047	3-H24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
75 97 347	04	059	3-I12
75 97 354	04	057	3-I10
75 97 354	04	077	3-J06
75 97 388	04	059	3-I12
75 97 412	04	059	3-I12
75 97 776	04	047	3-H24
75 97 776	04	073	3-J02
75 97 776	04	077	3-J06
75 97 784	04	047	3-H24
75 97 933	04	053	3-I06
75 97 933	04	075	3-J04
75 98 311	02	141	1-H22
75 98 311	02	169	1-J02
75 98 337	04	037	3-H14
75 98 980	02	133	1-H14
75 99 178	04	037	3-H14
75 99 194	02	125	1-H06
75 99 285	02	125	1-H06
75 99 400	04	037	3-H14
75 99 434	04	037	3-H14
75 99 442	04	037	3-H14
75 99 525	04	047	3-H24
75 99 525	04	073	3-J02
75 99 731	04	059	3-I12
75 99 848	02	009	1-C10
75 99 855	02	009	1-C10
75 99 913	02	009	1-C10
76 85 878	07	011	4-B12
78 20 228	08A	107	4-G12
78 20 244	08A	107	4-G12
78 29 609	03B	097	3-E02
78 29 609	03B	107	3-E12
78 29 609	03B	117	3-E22
78 29 609	03B	127	3-F08
78 29 617	03B	097	3-E02
78 29 617	03B	107	3-E12
78 29 617	03B	117	3-E22
78 29 617	03B	127	3-F08
78 29 625	03B	097	3-E02
78 29 625	03B	107	3-E12
78 29 625	03B	117	3-E22
78 29 625	03B	127	3-F08
78 29 633	03B	097	3-E02
78 29 633	03B	107	3-E12
78 29 633	03B	117	3-E22
78 29 633	03B	127	3-F08
78 29 641	03B	097	3-E02
78 29 641	03B	107	3-E12
78 29 641	03B	117	3-E22
78 29 641	03B	127	3-F08
78 29 666	03B	097	3-E02
78 29 666	03B	107	3-E12
78 29 666	03B	117	3-E22
78 29 666	03B	127	3-F08
78 29 674	03B	097	3-E02
78 29 674	03B	107	3-E12
78 29 674	03B	117	3-E22
78 29 674	03B	127	3-F08
78 29 682	03B	097	3-E02
78 29 682	03B	107	3-E12

6 -B06 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
78 29 682	03B	117	3-E22
78 29 682	03B	127	3-F08
78 56 933	02	093	1-F22
78 56 933	02	095	1-F24
78 71 437	02	089	1-F18
78 74 498	03B	013	3-A14
78 74 498	03B	015	3-A16
78 74 498	03B	017	3-A18
78 74 498	03B	037	3-B14
78 74 498	03B	039	3-B16
78 74 498	03B	059	3-C12
78 74 498	03B	061	3-C14
78 74 498	03B	081	3-D10
78 74 498	03B	083	3-D12
78 74 498	03B	085	3-D14
78 74 498	03B	103	3-E08
78 74 498	03B	113	3-E18
78 74 498	03B	123	3-F04
78 74 498	03B	133	3-F14
78 74 506	03B	103	3-E08
78 74 506	03B	113	3-E18
78 74 506	03B	123	3-F04
78 74 506	03B	133	3-F14
79 10 755	08B	015	5-A16
79 15 036	04	035	3-H12
79 15 036	04	073	3-J02
79 15 077	05	023	3-K24
79 15 077	08B	141	5-F22
79 15 093	04	069	3-I22
79 15 119	06	007	4-A08
79 15 200	04	035	3-H12
79 15 200	04	073	3-J02
79 15 572	02	161	1-I18
79 16 497	05	009	3-K10
79 16 497	08A	013	4-C14
79 16 497	08B	139	5-F20
79 16 497	08B	159	5-G16
79 16 497	08B	163	5-G20
79 16 497	08B	169	5-H02
79 16 521	07	021	4-B22
79 18 337	02	143	1-H24
79 19 483	08A	035	4-D12
79 22 214	03A	051	2-C04
79 22 214	03A	091	2-D20
79 22 214	08C	019	5-J20
79 22 230	03A	049	2-C02
79 22 230	03A	051	2-C04
79 22 263	03A	103	2-E08
79 22 271	03A	053	2-C06
79 22 271	03A	199	2-I08
79 22 271	08B	143	5-F24
79 22 297	03A	167	2-G24
79 22 347	03A	057	2-C10
79 22 354	02	075	1-F04
79 22 354	03A	087	2-D16
79 22 354	03A	093	2-D22
79 22 354	03A	157	2-G14
79 22 354	03A	167	2-G24
79 22 354	08B	149	5-G06
79 22 354	08B	151	5-G08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 22 354	08C	023	5-J24
79 22 362	03A	157	2-G14
79 22 370	08A	103	4-G08
79 22 370	08B	185	5-H18
79 22 388	03A	057	2-C10
79 22 396	02	067	1-E20
79 22 396	08B	143	5-F24
79 22 396	08B	153	5-G10
79 22 420	03A	067	2-C20
79 22 420	03A	075	2-D04
79 22 420	03A	099	2-E04
79 22 420	03A	157	2-G14
79 22 420	03A	159	2-G16
79 22 420	03A	167	2-G24
79 22 420	08B	181	5-H14
79 22 420	08C	011	5-J12
79 22 438	03A	037	2-B14
79 22 438	06	017	4-A18
79 22 495	08B	009	5-A10
79 22 503	03A	157	2-G14
79 22 800	02	133	1-H14
79 22 800	03A	059	2-C12
79 22 800	05	021	3-K22
79 22 800	08A	013	4-C14
79 22 818	03A	101	2-E06
79 22 818	04	069	3-I22
79 22 818	08B	009	5-A10
79 22 818	08B	185	5-H18
79 22 826	03A	081	2-D10
79 22 826	03A	083	2-D12
79 22 826	03A	157	2-G14
79 22 826	08C	011	5-J12
79 22 834	03A	093	2-D22
79 22 891	03A	035	2-B12
79 22 891	03A	067	2-C20
79 22 891	03A	081	2-D10
79 22 891	03A	093	2-D22
79 22 891	03A	101	2-E06
79 22 974	03A	101	2-E06
79 23 014	08A	005	4-C06
79 23 014	08A	037	4-D14
79 23 014	08A	039	4-D16
79 33 443	02	113	1-G18
79 33 443	03A	155	2-G12
79 33 500	02	057	1-E10
79 33 682	08A	103	4-G08
79 33 872	04	047	3-H24
79 35 703	08B	007	5-A08
79 36 008	08C	005	5-J06
79 36 016	08A	049	4-E02
79 36 016	08A	053	4-E06
79 36 016	08B	139	5-F20
79 49 712	04	005	3-G06
79 50 066	02	015	1-C16
79 58 770	02	155	1-I12
79 59 349	03B	097	3-E02
79 59 349	03B	107	3-E12
79 59 349	03B	117	3-E22
79 59 349	03B	127	3-F08
79 61 311	08A	033	4-D10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 61 634	03A	075	2-D04
79 61 642	03A	101	2-E06
79 61 642	03A	167	2-G24
79 61 642	07	017	4-B18
79 61 642	07	019	4-B20
79 61 642	07	021	4-B22
79 61 675	06	011	4-A12
79 63 143	08B	139	5-F20
79 63 168	06	005	4-A06
79 63 168	06	021	4-A22
79 63 515	02	151	1-I08
79 63 523	02	095	1-F24
79 63 549	02	095	1-F24
79 63 937	03A	057	2-C10
79 65 338	08B	013	5-A14
79 65 338	08B	019	5-A20
79 65 353	08B	007	5-A08
79 65 361	08B	187	5-H20
79 65 544	02	141	1-H22
79 65 544	02	169	1-J02
79 65 544	03A	067	2-C20
79 65 544	04	037	3-H14
79 65 684	08A	045	4-D22
79 65 684	08A	047	4-D24
79 65 767	02	113	1-G18
79 65 767	02	119	1-G24
79 65 767	08A	007	4-C08
79 65 767	08A	017	4-C18
79 65 775	03A	089	2-D18
79 65 809	08B	015	5-A16
79 65 809	08B	197	5-I06
79 67 573	04	025	3-H02
79 67 730	08A	023	4-C24
79 67 870	02	119	1-G24
79 67 912	04	037	3-H14
79 67 938	02	111	1-G16
79 67 938	03A	157	2-G14
79 67 938	04	005	3-G06
79 67 938	05	023	3-K24
79 67 953	02	089	1-F18
79 67 953	02	113	1-G18
79 67 953	02	117	1-G22
79 67 953	02	119	1-G24
79 67 953	02	121	1-H02
79 67 953	02	123	1-H04
79 67 953	03A	101	2-E06
79 67 953	04	067	3-I20
79 67 953	08A	007	4-C08
79 67 953	08A	049	4-E02
79 67 953	08A	053	4-E06
79 67 953	08B	175	5-H08
79 67 953	08B	179	5-H12
79 67 979	02	009	1-C10
79 67 979	02	063	1-E16
79 67 979	03A	021	2-A22
79 67 979	08A	007	4-C08
79 67 979	08A	103	4-G08
79 67 979	08A	105	4-G10
79 67 995	03A	057	2-C10
79 67 995	03A	155	2-G12

Part No Art nr	Gr Gr	Page Sida	Grid Koord
79 67 995	03A	167	2-G24
79 67 995	08A	031	4-D08
79 68 001	03A	105	2-E10
79 68 001	08C	011	5-J12
79 68 068	03B	017	3-A18
79 68 068	03B	041	3-B18
79 68 068	03B	063	3-C16
79 68 068	03B	085	3-D14
79 68 068	03B	097	3-E02
79 68 068	03B	107	3-E12
79 68 068	03B	117	3-E22
79 68 068	03B	127	3-F08
79 68 308	02	151	1-I08
79 68 316	03A	031	2-B08
79 68 415	06	011	4-A12
79 68 555	03A	167	2-G24
79 68 845	08B	009	5-A10
79 69 223	03A	033	2-B10
79 69 223	03A	045	2-B22
79 69 223	03A	047	2-B24
79 69 223	03A	063	2-C16
79 69 223	03A	075	2-D04
79 69 223	03A	157	2-G14
79 69 223	08A	041	4-D18
79 69 223	08A	043	4-D20
79 69 223	08A	053	4-E06
79 69 223	08B	019	5-A20
79 69 231	03B	097	3-E02
79 69 231	03B	107	3-E12
79 69 231	03B	117	3-E22
79 69 231	03B	127	3-F08
79 69 256	03B	097	3-E02
79 69 256	03B	107	3-E12
79 69 256	03B	117	3-E22
79 69 256	03B	127	3-F08
79 69 306	02	009	1-C10
79 69 306	08A	005	4-C06
79 69 306	08A	009	4-C10
79 69 348	02	115	1-G20
79 69 348	02	119	1-G24
79 69 348	02	123	1-H04
79 69 348	03A	029	2-B06
79 69 348	03A	155	2-G12
79 69 363	03A	155	2-G12
79 69 363	06	017	4-A18
79 69 421	03A	155	2-G12
79 69 462	03A	155	2-G12
79 69 462	03A	161	2-G18
79 69 488	03A	155	2-G12
79 69 488	06	017	4-A18
79 70 015	02	011	1-C12
79 70 015	02	081	1-F10
79 70 015	02	083	1-F12
79 70 015	02	147	1-I04
79 70 049	02	125	1-H06
79 70 049	02	129	1-H10
79 70 049	06	017	4-A18
79 70 072	02	107	1-G12
79 70 072	02	109	1-G14
79 70 072	02	129	1-H10

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 – B07 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 70 072	06	017	4-A18
79 70 080	02	061	1-E14
79 70 080	02	131	1-H12
79 70 098	02	125	1-H06
79 70 098	02	129	1-H10
79 70 098	02	161	1-I18
79 70 106	02	129	1-H10
79 70 114	02	125	1-H06
79 70 114	02	127	1-H08
79 70 114	02	129	1-H10
79 70 114	02	169	1-J02
79 70 122	02	125	1-H06
79 70 122	06	017	4-A18
79 70 130	02	081	1-F10
79 70 130	02	135	1-H16
79 70 130	06	017	4-A18
79 70 148	02	135	1-H16
79 70 148	02	161	1-I18
79 70 148	06	017	4-A18
79 70 155	02	057	1-E10
79 70 155	02	059	1-E12
79 70 155	02	135	1-H16
79 70 155	02	161	1-I18
79 70 189	02	059	1-E12
79 70 262	08A	049	4-E02
79 70 262	08A	053	4-E06
79 70 286	02	009	1-C10
79 70 288	02	143	1-H24
79 70 320	04	069	3-I22
79 70 346	03A	057	2-C10
79 70 361	04	031	3-H08
79 70 403	08A	099	4-G04
79 70 536	03A	157	2-G14
79 70 536	03A	193	2-I02
79 70 536	08B	013	5-A14
79 70 536	08B	015	5-A16
79 70 536	08B	019	5-A20
79 70 577	08B	175	5-H08
79 70 577	08B	179	5-H12
79 70 601	03A	105	2-E10
79 70 601	03A	199	2-I08
79 70 601	08A	075	4-F04
79 70 601	08A	089	4-F18
79 70 601	08A	121	4-H02
79 71 112	03A	021	2-A22
79 71 294	02	021	1-C22
79 71 294	02	045	1-D22
79 71 294	02	067	1-E20
79 71 294	02	083	1-F12
79 71 294	02	107	1-G12
79 71 294	02	143	1-H24
79 71 294	03A	159	2-G16
79 71 294	05	015	3-K16
79 71 294	05	017	3-K18
79 71 294	06	011	4-A12
79 71 294	08A	017	4-C18
79 71 294	08B	143	5-F24
79 71 294	08B	157	5-G14
79 71 294	08B	163	5-G20
79 71 294	08B	169	5-H02
79 71 294	08B	175	5-H08
79 71 294	08B	179	5-H12
79 71 344	02	065	1-E18
79 71 351	03A	059	2-C12
79 71 393	08B	067	5-C20
79 71 393	08B	073	5-D02
79 71 393	08B	079	5-D08
79 71 393	08B	085	5-D14
79 71 393	08B	089	5-D18
79 71 393	08B	093	5-D22
79 71 393	08B	097	5-E02
79 71 393	08B	101	5-E06
79 71 393	08B	105	5-E10
79 71 393	08B	109	5-E14
79 71 393	08C	005	5-J06
79 71 393	08C	007	5-J08
79 71 393	08C	009	5-J10
79 71 393	08C	013	5-J14
79 71 401	08B	147	5-G04
79 71 443	08B	013	5-A14
79 71 443	08C	007	5-J08
79 71 443	08C	009	5-J10
79 71 658	02	009	1-C10
79 71 658	02	133	1-H14
79 71 658	03A	009	2-A10
79 71 658	04	069	3-I22
79 71 658	08A	041	4-D18
79 71 658	08A	043	4-D20
79 71 658	08A	051	4-E04
79 71 658	08A	055	4-E08
79 71 708	03B	005	3-A06
79 71 708	03B	009	3-A10
79 71 708	03B	027	3-B04
79 71 708	03B	031	3-B08
79 71 708	03B	049	3-C02
79 71 708	03B	053	3-C06
79 71 708	03B	071	3-C24
79 71 708	03B	075	3-D04
79 71 708	03B	097	3-E02
79 71 708	03B	107	3-E12
79 71 708	03B	117	3-E22
79 71 708	03B	127	3-F08
79 71 757	02	113	1-G18
79 71 757	03A	081	2-D10
79 71 757	03A	157	2-G14
79 71 765	06	005	4-A06
79 71 823	02	127	1-H08
79 71 823	02	133	1-H14
79 71 823	02	139	1-H20
79 71 823	03A	075	2-D04
79 71 823	03A	157	2-G14
79 71 864	02	063	1-E16
79 71 864	02	099	1-G04
79 71 864	02	163	1-I20
79 71 864	03A	155	2-G12
79 71 864	03A	199	2-I08
79 71 864	06	011	4-A12
79 71 864	08A	025	4-D02
79 71 872	03A	155	2-G12
79 71 872	08B	139	5-F20
79 71 872	08B	143	5-F24
79 71 872	08B	147	5-G04
79 71 872	08B	149	5-G06
79 71 880	02	061	1-E14
79 71 880	02	117	1-G22
79 71 880	03A	155	2-G12
79 71 880	06	021	4-A22
79 71 880	08C	023	5-J24
79 71 898	03A	155	2-G12
79 71 898	06	017	4-A18
79 71 922	02	063	1-E16
79 71 922	04	009	3-G10
79 71 922	05	019	3-K20
79 71 922	05	021	3-K22
79 71 922	06	007	4-A08
79 71 922	06	011	4-A12
79 71 922	07	017	4-B18
79 71 922	07	019	4-B20
79 71 922	07	021	4-B22
79 71 922	08B	009	5-A10
79 71 997	04	041	3-H18
79 72 029	03B	017	3-A18
79 72 029	03B	041	3-B18
79 72 029	03B	063	3-C16
79 72 029	03B	085	3-D14
79 72 029	03B	097	3-E02
79 72 029	03B	107	3-E12
79 72 029	03B	117	3-E22
79 72 029	03B	127	3-F08
79 72 128	03A	097	2-E02
79 72 128	08B	009	5-A10
79 72 193	08B	005	5-A06
79 72 284	03A	069	2-C22
79 72 334	06	011	4-A12
79 72 441	02	127	1-H08
79 72 441	02	129	1-H10
79 72 441	02	135	1-H16
79 72 441	05	007	3-K08
79 72 466	02	067	1-E20
79 72 466	03A	157	2-G14
79 72 466	06	017	4-A18
79 72 466	08A	041	4-D18
79 72 466	08A	043	4-D20
79 72 466	08B	009	5-A10
79 72 474	07	021	4-B22
79 72 490	03A	075	2-D04
79 72 490	08A	007	4-C08
79 72 490	08A	031	4-D08
79 72 490	08A	037	4-D14
79 72 490	08B	073	5-D02
79 72 490	08B	087	5-D16
79 72 490	08B	095	5-D24
79 72 490	08B	103	5-E08
79 72 490	08B	109	5-E14
79 72 490	08B	181	5-H14
79 72 490	08B	183	5-H16
79 72 490	08B	189	5-H22
79 72 516	08A	035	4-D12
79 72 516	08A	037	4-D14
79 72 516	08A	039	4-D16
79 72 516	08A	103	4-G08
79 72 516	08B	009	5-A10
79 72 516	08B	025	5-B02
79 72 516	08B	141	5-F22
79 72 516	08B	149	5-G06
79 72 516	08B	155	5-G12
79 72 516	08B	157	5-G14
79 72 516	08B	161	5-G18
79 72 516	08B	163	5-G20
79 72 573	03A	155	2-G12
79 72 573	08A	013	4-C14
79 72 573	08B	005	5-A06
79 72 573	08B	015	5-A16
79 72 573	08B	019	5-A20
79 72 573	08B	157	5-G14
79 72 573	08B	163	5-G20
79 72 573	08B	175	5-H08
79 72 573	08C	023	5-J24
79 72 607	02	133	1-H14
79 72 607	02	135	1-H16
79 72 607	02	157	1-I14
79 72 607	03A	093	2-D22
79 72 607	03A	157	2-G14
79 72 607	06	011	4-A12
79 72 607	08A	013	4-C14
79 72 607	08A	017	4-C18
79 72 607	08B	019	5-A20
79 72 607	08B	189	5-H22
79 72 623	03A	157	2-G14
79 72 623	08B	139	5-F20
79 72 698	02	167	1-I24
79 72 714	04	013	3-G14
79 72 714	04	019	3-G20
79 72 714	04	025	3-H02
79 72 771	08B	007	5-A08
79 72 771	08B	021	5-A22
79 72 789	08B	005	5-A06
79 72 805	03A	057	2-C10
79 72 805	03A	157	2-G14
79 72 805	05	023	3-K24
79 72 821	08B	147	5-G04
79 72 896	02	133	1-H14
79 72 896	02	163	1-I20
79 72 896	08B	067	5-C20
79 72 896	08B	079	5-D08
79 72 896	08B	091	5-D20
79 72 896	08B	099	5-E04
79 72 896	08B	105	5-E10
79 72 938	02	059	1-E12
79 72 938	03A	097	2-E02
79 72 946	03A	159	2-G16
79 72 946	03A	167	2-G24
79 72 946	08C	019	5-J20
79 72 953	03A	159	2-G16
79 72 953	08A	093	4-F22
79 72 953	08A	105	4-G10
79 72 953	08A	123	4-H04
79 73 001	03A	035	2-B12
79 73 001	03A	039	2-B16
79 73 001	03A	041	2-B18

6 – B08 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
79 73 001	08A	031	4-D08
79 73 001	08C	011	5-J12
79 73 001	08C	023	5-J24
79 73 050	08A	035	4-D12
79 73 050	08A	037	4-D14
79 73 050	08A	039	4-D16
79 73 126	08B	005	5-A06
79 73 126	08C	019	5-J20
79 73 134	08A	035	4-D12
79 73 134	08A	073	4-F02
79 73 134	08A	075	4-F04
79 73 134	08A	115	4-G20
79 73 159	03A	033	2-B10
79 73 159	03A	037	2-B14
79 73 159	08A	031	4-D08
79 73 191	02	099	1-G04
79 73 258	08D	009	5-K10
79 73 456	02	099	1-G04
79 73 456	02	163	1-I20
79 73 464	06	005	4-A06
79 73 522	02	061	1-E14
79 73 522	02	135	1-H16
79 73 522	02	161	1-I18
79 73 522	02	163	1-I20
79 73 555	03A	157	2-G14
79 73 571	02	009	1-C10
79 73 605	02	161	1-I18
79 73 605	04	007	3-G08
79 73 605	04	009	3-G10
79 73 738	04	041	3-H18
79 73 753	06	011	4-A12
79 73 779	04	019	3-G20
79 73 779	08A	005	4-C06
79 73 951	08B	185	5-H18
79 74 009	05	013	3-K14
79 74 025	03A	055	2-C08
79 74 074	04	041	3-H18
79 74 090	03A	157	2-G14
79 74 231	08A	013	4-C14
79 74 231	08A	033	4-D10
79 74 231	08A	045	4-D22
79 74 231	08A	047	4-D24
79 74 231	08B	009	5-A10
79 74 231	08B	069	5-C22
79 74 231	08B	073	5-D02
79 74 231	08B	081	5-D10
79 74 231	08B	087	5-D16
79 74 231	08B	091	5-D20
79 74 231	08B	095	5-D24
79 74 231	08B	099	5-E04
79 74 231	08B	103	5-E08
79 74 231	08B	107	5-E12
79 74 231	08B	109	5-E14
79 74 298	02	133	1-H14
79 74 298	02	141	1-H22
79 74 298	02	159	1-I16
79 74 298	02	169	1-J02
79 74 298	08A	025	4-D02
79 74 298	08C	023	5-J24
79 74 330	08B	141	5-F22
79 74 330	08B	149	5-G06
79 74 371	08A	019	4-C20
79 74 397	03A	157	2-G14
79 74 397	08B	155	5-G12
79 74 397	08B	161	5-G18
79 74 397	08B	167	5-G24
79 74 397	08B	177	5-H10
79 74 512	06	011	4-A12
79 74 512	08B	013	5-A14
79 74 546	02	063	1-E16
79 74 546	02	065	1-E18
79 74 611	03A	171	2-H04
79 74 611	03A	175	2-H08
79 74 611	03A	179	2-H12
79 74 611	03A	183	2-H16
79 74 611	03A	187	2-H20
79 74 637	03A	171	2-H04
79 74 637	03A	175	2-H08
79 74 637	03A	179	2-H12
79 74 637	03A	183	2-H16
79 74 637	03A	187	2-H20
79 74 645	03A	171	2-H04
79 74 645	03A	175	2-H08
79 74 645	03A	179	2-H12
79 74 645	03A	183	2-H16
79 74 645	03A	187	2-H20
79 74 652	03A	171	2-H04
79 74 652	03A	175	2-H08
79 74 652	03A	179	2-H12
79 74 652	03A	183	2-H16
79 74 652	03A	187	2-H20
79 74 660	03A	171	2-H04
79 74 660	03A	175	2-H08
79 74 660	03A	179	2-H12
79 74 660	03A	183	2-H16
79 74 660	03A	187	2-H20
79 74 678	03A	171	2-H04
79 74 678	03A	175	2-H08
79 74 678	03A	179	2-H12
79 74 678	03A	183	2-H16
79 74 678	03A	187	2-H20
79 74 694	08A	013	4-C14
79 74 694	08A	035	4-D12
79 74 694	08A	037	4-D14
79 74 694	08A	039	4-D16
79 74 769	03A	009	2-A10
79 74 777	02	009	1-C10
79 74 777	08A	005	4-C06
79 74 884	08B	141	5-F22
79 74 884	08B	153	5-G10
79 74 983	03A	057	2-C10
79 74 983	08B	185	5-H18
79 75 071	02	133	1-H14
79 75 071	08B	009	5-A10
79 75 162	08A	013	4-C14
79 75 170	03A	037	2-B14
79 75 170	08A	035	4-D12
79 75 170	08B	189	5-H22
79 75 196	08A	055	4-E08
79 75 212	08B	005	5-A06
79 75 238	02	143	1-H24
79 75 261	03A	035	2-B12
79 75 261	03A	039	2-B16
79 75 261	03A	081	2-D10
79 75 261	03A	093	2-D22
79 75 261	03A	159	2-G16
79 75 261	08A	029	4-D06
79 75 261	08A	035	4-D12
79 75 261	08A	089	4-F18
79 75 261	08A	121	4-H02
79 75 279	02	099	1-G04
79 75 329	08B	187	5-H20
79 75 337	08B	133	5-F14
79 75 352	08A	031	4-D08
79 75 436	08A	037	4-D14
79 75 436	08B	173	5-H06
79 75 451	02	117	1-G22
79 75 451	03A	009	2-A10
79 75 451	08A	049	4-E02
79 75 469	02	125	1-H06
79 75 469	02	129	1-H10
79 75 477	08A	031	4-D08
79 75 485	08C	007	5-J08
79 75 485	08C	009	5-J10
79 75 501	04	037	3-H14
79 75 501	06	005	4-A06
79 75 501	06	021	4-A22
79 75 527	02	011	1-C12
79 75 535	08B	007	5-A08
79 75 576	02	133	1-H14
79 75 576	02	159	1-I16
79 75 576	03A	157	2-G14
79 75 576	08B	187	5-H20
79 75 642	03A	155	2-G12
79 75 659	03A	155	2-G12
79 75 667	03A	155	2-G12
79 75 717	08A	023	4-C24
79 75 725	02	125	1-H06
79 75 725	02	129	1-H10
79 75 766	08A	005	4-C06
79 75 766	08B	141	5-F22
79 75 766	08B	153	5-G10
79 75 782	08A	035	4-D12
79 76 897	06	011	4-A12
79 76 897	07	015	4-B16
79 76 897	07	019	4-B20
79 76 897	07	021	4-B22
79 76 897	08B	159	5-G16
79 76 897	08B	163	5-G20
79 76 897	08B	169	5-H02
79 76 897	08B	175	5-H08
79 76 897	08B	179	5-H12
79 76 905	07	017	4-B18
79 76 905	07	019	4-B20
79 76 913	02	107	1-G12
79 76 913	08A	005	4-C06
79 76 921	02	107	1-G12
79 76 988	08A	075	4-F04
79 76 988	08A	115	4-G20
79 76 996	08A	073	4-F02
79 76 996	08A	115	4-G20
79 77 010	08A	051	4-E04
79 77 028	08B	155	5-G12
79 77 028	08B	157	5-G14
79 77 028	08B	161	5-G18
79 77 028	08B	163	5-G20
79 77 028	08B	167	5-G24
79 77 028	08B	169	5-H02
79 77 028	08B	173	5-H06
79 77 028	08B	177	5-H10
79 77 283	08B	117	5-E22
79 77 283	08B	121	5-F02
79 77 283	08B	123	5-F04
79 77 283	08B	125	5-F06
79 77 283	08B	129	5-F10
79 77 309	06	005	4-A06
79 77 309	06	021	4-A22
79 77 317	08B	007	5-A08
79 77 317	08B	013	5-A14
79 77 317	08B	015	5-A16
79 77 341	08A	017	4-C18
79 77 341	08B	115	5-E20
79 77 341	08B	119	5-E24
79 77 341	08B	123	5-F04
79 77 341	08B	125	5-F06
79 77 341	08B	129	5-F10
79 77 358	03A	159	2-G16
79 77 358	03A	167	2-G24
79 77 358	08B	115	5-E20
79 77 358	08B	119	5-E24
79 77 358	08B	123	5-F04
79 77 358	08B	125	5-F06
79 77 358	08B	129	5-F10
79 77 358	08B	181	5-H14
79 77 366	08B	117	5-E22
79 77 366	08B	121	5-F02
79 77 366	08B	123	5-F04
79 77 366	08B	125	5-F06
79 77 366	08B	129	5-F10
79 77 366	08B	183	5-H16
79 77 390	08A	099	4-G04
79 77 390	08A	101	4-G06
79 77 390	08A	121	4-H02
79 77 465	02	063	1-E16
79 77 465	03A	157	2-G14
79 77 465	08A	017	4-C18
79 77 465	08A	079	4-F08
79 77 465	08A	103	4-G08
79 77 465	08A	123	4-H04
79 77 465	08B	005	5-A06
79 77 499	03A	009	2-A10
79 77 507	08B	027	5-B04
79 77 507	08B	193	5-I02
79 77 523	08A	073	4-F02
79 77 523	08A	075	4-F04
79 77 523	08A	077	4-F06
79 77 523	08A	079	4-F08
79 77 523	08A	115	4-G20
79 77 556	03B	097	3-E02
79 77 556	03B	107	3-E12

MASTER INDEX

- 0 General 1-A02
- 2 Engine 1-C02
- 3A Electrical, general 2-A02
- 3B Electrical, contact housing 3-A02
- 4 Transmission 3-G02
- 5 Brakes 3-K02
- 6 Front assembly, Steering 4-A02
- 7 Suspension, Wheels 4-B02
- 8A Body, external 4-C02
- 8B Body, internal 5-A02
- 8C Body, heating and ventilation 5-J02
- 8D Tools, Labels 5-K02
- 10 Numerical register 6-A02

6 -B09 Numerical register Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
79 77 556	03B	117	3-E22
79 77 556	03B	127	3-F08
79 77 580	06	017	4-A18
79 77 598	02	139	1-H20
79 77 630	04	069	3-I22
79 77 648	08B	007	5-A08
79 77 648	08C	013	5-J14
79 77 671	03A	097	2-E02
79 77 689	02	131	1-H12
79 77 689	08A	085	4-F14
79 77 788	02	057	1-E10
79 77 804	08B	005	5-A06
79 77 804	08B	009	5-A10
79 77 804	08B	011	5-A12
79 77 820	07	021	4-B22
79 77 861	03A	167	2-G24
79 77 879	02	061	1-E14
79 77 895	08B	189	5-H22
79 77 903	08A	065	4-E18
79 77 903	08A	069	4-E22
79 77 911	03A	019	2-A20
79 77 911	03A	067	2-C20
79 77 911	08A	089	4-F18
79 77 929	02	077	1-F06
79 77 929	02	107	1-G12
79 77 929	03A	021	2-A22
79 77 929	03A	051	2-C04
79 77 929	03A	063	2-C16
79 77 929	03A	065	2-C18
79 77 929	03A	071	2-C24
79 77 929	03A	089	2-D18
79 77 929	03A	099	2-E04
79 77 929	03A	161	2-G18
79 77 929	05	011	3-K12
79 77 929	08A	025	4-D02
79 77 929	08A	041	4-D18
79 77 929	08A	043	4-D20
79 77 929	08A	075	4-F04
79 77 929	08A	101	4-G06
79 77 929	08A	117	4-G22
79 77 929	08C	023	5-J24
79 77 952	03A	019	2-A20
79 77 952	03A	061	2-C14
79 77 952	03A	101	2-E06
79 77 960	08A	035	4-D12
79 78 034	03A	199	2-I08
79 78 091	02	021	1-C22
79 78 091	02	045	1-D22
79 78 091	02	055	1-E08
79 78 091	02	059	1-E12
79 78 091	02	067	1-E20
79 78 091	02	085	1-F14
79 78 091	02	087	1-F16
79 78 091	02	127	1-H08
79 78 091	02	145	1-I02
79 78 091	02	165	1-I22
79 78 091	03A	019	2-A20
79 78 091	03A	029	2-B06
79 78 091	03A	071	2-C24
79 78 091	03A	157	2-G14
79 78 091	03A	167	2-G24
79 78 372	08B	067	5-C20
79 78 372	08B	069	5-C22
79 78 372	08B	073	5-D02
79 78 372	08B	079	5-D08
79 78 372	08B	085	5-D14
79 78 380	02	067	1-E20
79 78 398	02	159	1-I16
79 78 398	08B	017	5-A18
79 78 422	08A	053	4-E06
79 78 422	08B	015	5-A16
79 78 638	05	011	3-K12
79 78 638	08A	077	4-F05
79 78 638	08C	007	5-J08
79 78 687	08B	009	5-A10
79 79 214	02	035	1-D12
79 79 248	05	021	3-K22
79 79 263	03A	019	2-A20
79 79 271	05	019	3-K20
79 79 487	07	021	4-B22
79 79 503	02	121	1-H02
79 79 511	07	015	4-B16
79 79 511	07	019	4-B20
79 79 511	07	023	4-B24
79 79 537	07	007	4-B08
79 79 537	07	009	4-B10
79 79 552	07	007	4-B08
79 79 552	07	009	4-B10
79 79 578	07	007	4-B08
79 79 578	07	009	4-B10
79 79 602	06	011	4-A12
79 78 190	02	011	1-C12
79 78 190	02	035	1-D12
79 78 190	05	019	3-K20
79 78 190	05	021	3-K22
79 78 208	02	009	1-C10
79 78 208	02	045	1-D22
79 78 208	06	019	4-A20
79 78 208	08C	015	5-J16
79 78 208	08C	017	5-J18
79 78 216	02	009	1-C10
79 78 216	02	045	1-D22
79 78 216	02	143	1-H24
79 78 224	02	081	1-F10
79 78 224	02	085	1-F14
79 78 224	08C	015	5-J16
79 78 224	08C	017	5-J18
79 78 224	06	019	4-A20
79 78 257	02	009	1-C10
79 78 257	06	019	4-A20
79 78 265	02	059	1-E12
79 78 265	02	117	1-G22
79 78 265	02	123	1-H04
79 78 273	08A	009	4-C10
79 78 299	06	019	4-A20
79 78 307	08A	005	4-C06
79 78 323	04	041	3-H18
79 78 349	06	017	4-A18
79 78 356	03A	093	2-D22
79 78 372	02	087	1-F16
79 78 372	03A	167	2-G24
79 82 325	08A	071	4-E24
79 82 325	08A	073	4-F02
79 82 325	08A	075	4-F04
79 82 325	08A	079	4-F08
79 82 325	08A	093	4-F22
79 82 325	08A	115	4-G20
79 82 325	08A	119	4-G24
79 82 325	08A	123	4-G28
79 82 333	03A	077	2-D06
79 82 333	06	009	4-A10
79 82 333	08A	045	4-D22
79 82 333	08A	047	4-D24
79 82 333	08B	091	5-D20
79 82 333	08B	095	5-D24
79 82 333	08B	099	5-E04
79 82 333	08B	103	5-E08
79 82 333	08B	105	5-E10
79 82 333	08B	109	5-E14
79 82 333	08B	111	5-E16
79 82 333	08B	185	5-H18
79 82 366	08A	013	4-C14
79 82 481	08C	023	5-J24
79 82 523	06	017	4-A18
79 82 549	02	009	1-C10
79 82 549	08C	023	5-J24
79 82 564	02	015	1-C16
79 82 564	08A	005	4-C06
79 82 572	02	009	1-C10
79 82 580	04	041	3-H18
79 82 598	02	009	1-C10
79 82 598	02	015	1-C16
79 82 606	04	013	3-G14
79 82 606	04	045	3-H22
79 82 655	08A	037	4-D14
79 82 655	08A	039	4-D16
79 82 655	08A	073	4-F02
79 82 655	08A	075	4-F04
79 82 655	08A	093	4-F22
79 82 655	08A	115	4-G20
79 82 655	08A	119	4-G24
79 82 937	02	161	1-I18
79 82 986	06	005	4-A06
79 83 000	08A	017	4-C18
79 83 034	03A	175	2-H08
79 83 034	03A	179	2-H12
79 83 034	03A	183	2-H16
79 83 034	03A	187	2-H20
79 83 067	03A	179	2-H12
79 83 067	03A	183	2-H16
79 83 067	03A	187	2-H20
79 83 133	08A	005	4-C06
79 83 141	08A	005	4-C06
79 83 158	08A	005	4-C06
79 84 008	08A	005	4-C06
79 84 297	04	013	3-G14
79 84 297	04	015	3-G16
79 84 297	04	045	3-H22
79 84 305	03A	035	2-B12
79 84 305	03A	039	2-B16

6 -B10 Numerical register Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord
79 84 305	08A	025	4-D02
79 84 305	08A	031	4-D08
79 84 511	02	121	1-H02
79 84 511	07	007	4-B08
79 84 511	07	009	4-B10
79 84 727	02	125	1-H06
79 84 727	02	129	1-H10
79 84 735	02	023	1-C24
79 84 750	02	063	1-E16
79 84 750	03A	155	2-G12
79 84 768	03A	071	2-C24
79 84 776	02	009	1-C10
79 84 891	02	023	1-C24
79 85 054	07	015	4-B16
79 85 054	07	019	4-B20
79 85 062	02	143	1-H24
79 85 120	02	015	1-C16
79 85 146	02	101	1-G06
79 85 146	02	103	1-G08
79 85 161	02	101	1-G06
79 85 161	02	103	1-G08
79 85 187	02	089	1-F18
79 85 690	03A	035	2-B12
79 85 690	03A	039	2-B16
79 85 898	06	011	4-A12
79 85 906	04	041	3-H18
79 85 914	04	041	3-H18
79 85 955	03A	087	2-D16
79 94 510	08A	113	4-G18
79 94 882	08A	113	4-G18
79 94 890	08A	103	4-G18
80 05 910	02	081	1-F10
80 05 910	02	083	1-F12
80 05 910	02	085	1-F14
80 19 697	03A	093	2-D22
80 19 713	08B	139	5-F20
80 19 895	02	127	1-H08
80 21 917	05	015	3-K16
80 21 917	05	017	3-K18
80 21 925	05	015	3-K16
80 21 925	05	017	3-K18
80 29 548	03A	069	2-C22
80 29 555	02	107	1-G12
80 29 944	04	037	3-H14
80 29 944	08B	141	5-F22
80 29 944	08B	151	5-G08
80 29 951	08A	025	4-D02
80 29 969	05	023	3-K24
80 29 969	08A	041	4-D18
80 29 969	08A	043	4-D20
80 29 977	08A	037	4-D14
80 29 985	02	081	1-F10
80 29 985	02	085	1-F14
80 29 985	04	037	3-H14
80 30 058	06	009	4-A10
80 46 674	02	167	1-I24
80 46 682	02	167	1-I24
80 47 144	04	031	3-H08
80 47 144	04	071	3-I24
80 47 706	04	037	3-H14
80 47 706	04	069	3-I22
80 47 748	06	019	4-A20
80 47 813	04	035	3-H12
80 48 324	04	033	3-H10
80 48 324	04	035	3-H12
80 48 324	04	073	3-J02
80 48 670	02	021	1-C22
80 49 827	02	083	1-F12
80 49 827	02	085	1-F14
80 56 160	05	005	3-K06
80 56 194	04	027	3-H04
80 56 194	06	019	4-A20
80 57 259	02	089	1-F18
80 59 214	08A	045	4-D22
80 59 214	08A	047	4-D24
80 59 230	02	089	1-F18
80 59 230	08C	007	5-J08
80 59 230	08C	009	5-J10
80 59 248	08B	181	5-H14
80 59 396	02	099	1-G04
80 59 396	08A	033	4-D10
80 59 396	08A	045	4-D22
80 59 396	08A	047	4-D24
80 59 396	08B	009	5-A10
80 59 396	08B	073	5-D02
80 59 396	08B	087	5-D16
80 59 396	08B	141	5-F22
80 59 396	08B	151	5-G08
80 59 412	08B	147	5-G04
80 59 420	02	163	1-I20
80 59 537	08B	143	5-F24
80 59 545	08A	053	4-E06
80 59 552	03A	157	2-G14
80 59 552	04	013	3-G14
80 59 552	08B	159	5-G16
80 59 552	08B	163	5-G20
80 59 552	08B	169	5-H02
80 59 560	08B	141	5-F22
80 59 578	03A	167	2-G24
80 59 578	08A	051	4-E04
80 59 578	08A	053	4-E06
80 59 578	08A	099	4-G04
80 59 578	08A	101	4-G06
80 59 610	03A	161	2-G18
80 59 628	02	021	1-C22
80 59 628	02	023	1-C24
80 59 768	02	053	1-E06
80 59 768	02	067	1-E20
80 59 768	02	161	1-I18
80 59 776	02	011	1-C12
80 59 776	02	081	1-F10
80 59 776	02	111	1-G16
80 59 792	04	019	3-G20
80 59 792	04	025	3-H02
80 59 792	04	027	3-H04
80 59 792	04	031	3-H08
80 59 800	02	045	1-D22
80 59 800	02	143	1-H24
80 59 826	08B	149	5-G06
80 59 982	02	023	1-C24
80 73 108	02	035	1-D12
80 73 108	03A	011	2-A12
80 73 108	03A	017	2-A18
80 73 108	03A	019	2-A20
80 73 108	04	007	4-A08
80 73 116	06	015	4-A16
80 73 264	06	007	4-A08
80 73 512	04	007	3-G08
80 73 512	04	037	3-H14
80 74 106	03A	017	2-A18
80 74 106	04	013	3-G14
80 74 106	05	009	3-K10
80 74 106	05	029	3-L06
80 74 288	02	159	1-I16
80 82 935	02	161	1-I18
80 82 935	03A	157	2-G14
80 82 943	02	009	1-C10
80 83 941	06	019	4-A20
80 83 974	04	045	3-H22
80 84 063	02	127	1-H08
80 84 063	06	007	4-A08
80 91 738	03A	157	2-G14
80 97 800	08C	019	5-J20
80 98 295	05	005	3-K06
80 98 378	03A	011	2-A12
80 98 378	03A	017	2-A18
80 98 378	08B	087	5-D16
81 17 020	02	169	1-J02
81 17 608	02	023	1-C24
81 17 657	04	019	3-G20
81 17 814	04	031	3-H08
81 17 863	04	031	3-H08
81 23 143	02	011	1-C12
81 23 168	02	023	1-C24
81 23 192	02	023	1-C24
81 23 218	02	015	1-C16
81 23 259	02	015	1-C16
81 23 473	03A	085	2-D14
81 23 713	02	101	1-G06
81 23 713	02	103	1-G08
81 23 721	02	011	1-C12
81 23 721	02	045	1-D22
81 23 721	02	143	1-H24
81 24 133	02	053	1-E06
81 24 133	02	101	1-G06
81 24 133	02	103	1-G08
81 24 133	02	143	1-H24
81 24 141	02	015	1-C16
81 24 141	02	045	1-D22
81 24 141	02	053	1-E06
81 24 141	02	151	1-I08
81 24 158	02	151	1-I08
81 25 007	03A	157	2-G14
81 25 015	02	053	1-E06
81 25 015	02	143	1-H24
81 25 130	02	113	1-G18
81 25 130	02	117	1-G22
81 25 130	02	119	1-G24
81 25 130	02	121	1-H02
81 25 189	02	143	1-H24
81 25 247	02	143	1-H24
81 25 270	02	143	1-H24
81 30 064	08A	007	4-C08
81 31 963	02	109	1-G14
81 35 147	03B	097	3-E02
81 35 147	03B	107	3-E12
81 35 147	03B	119	3-E24
81 35 147	03B	129	3-F10
81 38 679	03B	119	3-E24
81 38 679	03B	129	3-F10
81 51 045	02	089	1-F18
81 51 177	02	067	1-E20
81 51 227	03A	067	2-C20
81 51 235	04	069	3-I22
81 51 235	05	015	3-K16
81 51 235	08A	033	4-D10
81 51 474	03A	019	2-A20
81 51 474	07	007	4-B08
81 51 474	07	009	4-B10
81 51 474	07	015	4-B16
81 51 474	07	019	4-B20
81 51 474	07	021	4-B22
81 51 482	06	015	4-A16
81 51 482	06	021	4-A22
81 51 482	07	015	4-B16
81 51 482	07	019	4-B20
81 51 482	07	021	4-B22
82 04 760	08A	027	4-D04
82 06 096	03A	081	2-D10
82 06 096	08A	007	4-C08
82 06 096	08A	019	4-C20
82 06 096	08A	029	4-D06
82 09 009	08A	017	4-C18
82 35 178	03A	087	2-D16
82 35 178	08A	007	4-C08
82 35 178	08A	011	4-C12
82 39 170	08A	007	4-C08
82 41 325	08A	007	4-C08
82 47 181	08A	043	4-D20
82 52 363	08A	033	4-D10
82 52 553	04	007	3-G08
82 52 553	04	009	3-G10
82 52 553	04	069	3-I22
82 52 553	05	019	3-K20
82 52 553	05	021	3-K22
82 52 553	08A	031	4-D08
82 52 553	08A	033	4-D10
82 52 553	08A	049	4-E02
82 57 750	08A	049	4-E02
82 58 428	08A	099	4-G04
82 62 610	08B	015	5-A16
82 62 958	08A	031	4-D08
82 62 958	08A	053	4-E06
82 64 855	08A	031	4-D08
82 66 876	08A	007	4-C08
82 67 205	08A	075	4-F04
82 67 296	08A	029	4-D06
82 72 494	03A	073	2-D02
82 72 635	08A	029	4-D06
82 73 468	08A	093	4-F22
82 73 468	08A	115	4-G20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B11 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
82 78 558	02	139	1-H20
82 78 558	08A	035	4-D12
82 78 558	08B	009	5-A10
82 79 044	08A	051	4-E04
82 83 715	08A	017	4-C18
82 84 077	08A	041	4-D18
82 84 077	08A	043	4-D20
82 84 077	08A	119	4-G24
82 84 085	08A	041	4-D18
82 84 085	08A	043	4-D20
82 84 085	08A	119	4-G24
82 84 341	08A	093	4-F22
82 84 341	08A	115	4-G20
82 84 358	08A	041	4-D18
82 84 358	08A	043	4-D20
82 84 366	08A	041	4-D18
82 84 366	08A	043	4-D20
82 84 374	08A	123	4-H04
82 84 382	08A	123	4-H04
82 84 424	08A	057	4-E10
82 84 432	08A	057	4-E10
82 84 473	08A	111	4-G16
82 84 481	08A	111	4-G16
82 84 499	08A	111	4-G16
82 84 507	08A	111	4-G16
82 84 531	08A	087	4-F16
82 84 531	08A	121	4-H02
82 84 549	08A	093	4-F22
82 84 549	08A	123	4-H04
82 84 556	08A	093	4-F22
82 84 556	08A	123	4-H04
82 84 655	08A	093	4-F22
82 84 655	08A	119	4-G24
82 84 663	08A	093	4-F22
82 84 663	08A	119	4-G24
82 84 705	08A	061	4-E14
82 84 705	08A	067	4-E20
82 84 705	08A	071	4-E24
82 84 713	08A	061	4-E14
82 84 713	08A	067	4-E20
82 84 713	08A	071	4-E24
82 84 721	08A	093	4-F22
82 84 721	08A	119	4-G24
82 84 739	08A	093	4-F22
82 84 739	08A	119	4-G24
82 84 747	08A	093	4-F22
82 84 747	08A	119	4-G24
82 84 846	08A	101	4-G06
82 84 887	08A	111	4-G16
82 84 911	08A	057	4-E10
82 85 231	08A	107	4-G12
82 85 231	08A	109	4-G14
82 85 231	08A	111	4-G16
82 85 231	08A	113	4-G18
82 85 249	08A	113	4-G18
82 85 256	08A	113	4-G18
82 85 264	08A	113	4-G18
82 85 280	08A	041	4-D18
82 85 298	08A	043	4-D20
82 85 314	08A	075	4-F04
82 85 314	08A	117	4-G22
82 85 371	08A	107	4-G12
82 85 389	08A	107	4-G12
82 85 397	08A	109	4-G14
82 85 405	08A	111	4-G16
82 85 413	08A	077	4-F06
82 85 421	08A	077	4-F06
82 85 421	08A	121	4-H02
82 85 439	08A	077	4-F06
82 85 439	08A	121	4-H02
82 85 447	08A	079	4-F08
82 85 447	08A	123	4-H04
82 85 454	08A	079	4-F08
82 85 454	08A	123	4-H04
82 85 488	08A	107	4-G12
82 85 488	08A	109	4-G14
82 85 488	08A	111	4-G16
82 85 496	08A	107	4-G12
82 85 496	08A	109	4-G14
82 85 496	08A	111	4-G16
82 86 296	03A	157	2-G14
82 86 296	04	069	3-I22
82 86 296	08A	031	4-D08
82 86 296	08A	049	4-E02
82 86 296	08B	189	5-H22
83 08 389	04	067	3-I20
83 11 904	08B	155	5-G12
83 11 904	08B	161	5-G18
83 11 904	08B	167	5-G24
83 22 927	02	141	1-H22
83 22 927	02	169	1-J02
83 26 712	02	011	1-C12
83 26 712	02	053	1-E06
83 26 712	02	143	1-H24
83 26 712	02	151	1-I08
83 30 268	02	127	1-H08
83 30 268	02	169	1-J02
83 35 002	04	037	3-H14
83 35 614	02	089	1-F18
83 46 470	02	015	1-C16
83 46 470	02	045	1-D22
83 48 047	02	015	1-C16
83 48 609	02	045	1-D22
83 52 692	02	147	1-I04
83 52 692	02	167	1-I24
83 53 484	02	089	1-F18
83 57 345	02	089	1-F18
83 59 275	02	151	1-I08
83 60 943	02	101	1-G06
83 60 943	02	103	1-G08
83 62 287	02	011	1-C12
83 62 287	02	169	1-J02
83 66 791	02	087	1-F16
83 66 791	02	107	1-G12
83 71 650	02	127	1-H08
83 75 172	04	037	3-H14
83 78 630	03B	005	3-A06
83 78 630	03B	027	3-B04
83 78 630	03B	049	3-C02
83 78 630	03B	071	3-C24
84 27 841	08B	021	5-A22
84 38 467	08B	157	5-G14
84 38 467	08B	163	5-G20
84 38 467	08B	175	5-H08
84 41 503	04	069	3-I22
84 41 503	08B	013	5-A14
84 41 503	08B	181	5-H14
84 52 898	08B	113	5-E18
84 52 898	08B	115	5-E20
84 52 898	08B	121	5-F02
84 52 898	08B	123	5-F04
84 52 898	08B	125	5-F06
84 52 898	08B	129	5-F10
84 53 755	08A	045	4-D22
84 53 755	08A	047	4-D24
84 57 541	08B	005	5-A06
84 57 541	08B	157	5-G14
84 57 541	08B	163	5-G20
84 57 541	08B	169	5-H02
84 57 541	08B	175	5-H08
84 57 541	08B	179	5-H12
84 58 598	08B	147	5-G04
84 59 489	08A	007	4-C08
84 59 497	05	015	3-K16
84 59 497	05	017	3-K18
84 86 292	08A	109	4-G14
84 86 292	08A	111	4-G16
84 86 300	08A	109	4-G14
84 86 300	08A	111	4-G16
84 87 225	08A	111	4-G16
84 87 266	08A	107	4-G12
84 87 274	08A	107	4-G12
84 87 282	08A	109	4-G14
84 87 621	08A	107	4-G12
84 87 621	08A	109	4-G14
84 87 621	08A	111	4-G16
84 87 712	08A	109	4-G14
84 87 753	08A	107	4-G12
84 87 761	08A	107	4-G12
84 87 779	08A	113	4-G18
84 87 787	08A	113	4-G18
84 90 708	08B	025	5-B02
84 97 471	03A	157	2-G14
84 99 204	08A	107	4-G12
84 99 204	08B	193	5-I02
84 99 238	08B	191	5-H24
85 00 613	03A	059	2-C12
85 00 613	03A	077	2-D06
85 00 613	04	069	3-I22
85 00 613	08B	013	5-A14
85 00 613	08C	005	5-J06
85 01 264	03A	057	2-C10
85 04 144	03A	071	2-C24
85 09 002	03A	071	2-C24
85 09 002	03A	081	2-D10
85 09 697	08B	013	5-A14
85 09 846	03B	099	3-E04
85 09 846	03B	109	3-E14
85 09 846	03B	119	3-E24
85 09 846	03B	129	3-F10
85 10 851	03A	033	2-B10
85 14 028	03B	099	3-E04
85 14 028	03B	109	3-E14
85 14 028	03B	119	3-E24
85 14 028	03B	129	3-F10
85 14 036	03B	005	3-A06
85 14 036	03B	027	3-B04
85 14 036	03B	049	3-C02
85 14 036	03B	071	3-C24
85 14 036	03B	097	3-E02
85 14 036	03B	099	3-E04
85 14 036	03B	107	3-E12
85 14 036	03B	109	3-E14
85 14 036	03B	117	3-E22
85 14 036	03B	119	3-E24
85 14 036	03B	127	3-F08
85 14 036	03B	129	3-F10
85 16 916	03B	005	3-A06
85 16 916	03B	027	3-B04
85 16 916	03B	049	3-C02
85 16 916	03B	071	3-C24
85 21 593	03B	005	3-A06
85 21 593	03B	017	3-A18
85 21 593	03B	027	3-B04
85 21 593	03B	039	3-B16
85 21 593	03B	049	3-C02
85 21 593	03B	063	3-C16
85 21 593	03B	071	3-C24
85 21 593	03B	085	3-D14
85 21 593	03B	099	3-E04
85 21 593	03B	109	3-E14
85 21 593	03B	119	3-E24
85 21 593	03B	129	3-F10
85 21 668	03B	105	3-E10
85 21 668	03B	115	3-E20
85 21 668	03B	125	3-F06
85 21 668	03B	135	3-F16
85 21 676	03B	101	3-E06
85 21 676	03B	111	3-E16
85 21 676	03B	121	3-F02
85 21 676	03B	131	3-F12
85 21 684	03B	005	3-A06
85 21 684	03B	101	3-E06
85 21 684	03B	111	3-E16
85 21 684	03B	121	3-F02
85 21 684	03B	131	3-F12
85 21 692	03B	005	3-A06
85 21 692	03B	027	3-B04
85 21 692	03B	049	3-C02
85 21 692	03B	071	3-C24
85 21 700	03B	017	3-A18
85 21 700	03B	041	3-B18
85 21 700	03B	063	3-C16
85 21 700	03B	085	3-D14
85 21 718	03B	019	3-A20

6-B12 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
85 21 718	03B	041	3-B18
85 21 718	03B	063	3-C16
85 21 718	03B	085	3-D14
85 22 310	03A	171	2-H04
85 22 310	03A	173	2-H06
85 22 310	03A	177	2-H10
85 22 310	03A	181	2-H14
85 22 310	03A	185	2-H18
85 22 310	03A	189	2-H22
85 22 310	08B	151	5-G08
85 22 492	03A	087	2-D16
85 22 526	03B	027	3-B04
85 22 526	03B	049	3-C02
85 22 526	03B	071	3-C24
85 22 526	03B	101	3-E06
85 22 526	03B	111	3-E16
85 22 526	03B	121	3-F02
85 22 526	03B	131	3-F12
85 22 534	03B	009	3-A10
85 22 534	03B	031	3-B08
85 22 534	03B	053	3-C06
85 22 534	03B	075	3-D04
85 22 534	03B	101	3-E06
85 22 534	03B	111	3-E16
85 22 542	03B	005	3-A06
85 22 542	03B	027	3-B04
85 22 542	03B	049	3-C02
85 22 542	03B	071	3-C24
85 22 542	03B	103	3-E08
85 22 542	03B	113	3-E18
85 22 542	03B	123	3-F04
85 22 542	03B	133	3-F14
85 22 575	03B	005	3-A06
85 22 575	03B	027	3-B04
85 22 575	03B	049	3-C02
85 22 575	03B	071	3-C24
85 22 583	03B	015	3-A16
85 22 583	03B	037	3-B14
85 22 583	03B	059	3-C12
85 22 583	03B	081	3-D10
85 22 583	03B	099	3-E04
85 22 583	03B	107	3-E12
85 22 583	03B	119	3-E24
85 22 583	03B	129	3-F10
85 22 617	03B	103	3-E08
85 22 617	03B	113	3-E18
85 22 617	03B	123	3-F04
85 22 617	03B	133	3-F14
85 30 099	03B	015	3-A16
85 30 099	03B	037	3-B14
85 30 099	03B	059	3-C12
85 30 099	03B	081	3-D10
85 30 107	03B	005	3-A06
85 30 107	03B	027	3-B04
85 30 107	03B	049	3-C02
85 30 107	03B	071	3-C24
85 30 107	03B	099	3-E04
85 30 107	03B	109	3-E14
85 30 107	03B	119	3-E24
85 30 107	03B	129	3-F10
85 30 115	03B	005	3-A06
85 30 115	03B	027	3-B04
85 30 115	03B	049	3-C02
85 30 115	03B	071	3-C24
85 30 917	03A	155	2-G12
85 32 426	08B	013	5-A14
85 32 756	03A	041	2-B18
85 32 756	03A	043	2-B20
85 32 756	03A	049	2-C02
85 32 756	03A	051	2-C04
85 32 756	03A	053	2-C06
85 33 028	03B	101	3-E06
85 33 028	03B	111	3-E16
85 33 028	03B	121	3-F02
85 33 028	03B	131	3-F12
85 33 176	03A	105	2-E10
85 33 176	03A	171	2-H04
85 33 176	03A	173	2-H06
85 33 176	03A	175	2-H08
85 33 176	03A	179	2-H12
85 33 176	03A	183	2-H16
85 33 176	03A	187	2-H20
85 33 184	03B	005	3-A06
85 33 184	03B	027	3-B04
85 33 184	03B	049	3-C02
85 33 184	03B	071	3-C24
85 33 697	03A	199	2-I08
85 33 697	03B	017	3-A18
85 33 697	03B	039	3-B16
85 33 697	03B	061	3-C14
85 33 697	03B	083	3-D12
85 35 692	03A	041	2-B18
85 35 692	03A	043	2-B20
85 35 692	03A	049	2-C02
85 35 692	03A	051	2-C04
85 35 692	03A	053	2-C06
85 35 692	03A	055	2-C08
85 35 700	03A	051	2-C04
85 35 700	03A	053	2-C06
85 36 401	03A	171	2-H04
85 36 401	03A	175	2-H08
85 36 401	03A	179	2-H12
85 36 401	03A	183	2-H16
85 36 401	03A	187	2-H20
85 36 419	03A	155	2-G12
85 37 672	03A	049	2-C02
85 39 710	03A	035	2-B12
85 41 203	03B	005	3-A06
85 41 203	03B	027	3-B04
85 41 203	03B	049	3-C02
85 41 203	03B	071	3-C24
85 41 203	03B	101	3-E06
85 41 203	03B	111	3-E16
85 41 203	03B	121	3-F02
85 41 203	03B	131	3-F12
85 41 211	03B	019	3-A20
85 41 211	03B	041	3-B18
85 41 211	03B	063	3-C16
85 41 211	03B	085	3-D14
85 41 211	03B	101	3-E06
85 41 211	03B	111	3-E16
85 41 211	03B	131	3-F12
85 41 229	03B	005	3-A06
85 41 229	03B	027	3-B04
85 41 229	03B	049	3-C02
85 41 229	03B	071	3-C24
85 44 298	03B	101	3-E06
85 44 314	03B	101	3-E06
85 44 314	03B	111	3-E16
85 44 314	03B	121	3-F02
85 44 314	03B	131	3-F12
85 44 322	03B	011	3-A12
85 44 322	03B	033	3-B10
85 44 322	03B	057	3-C10
85 44 322	03B	079	3-D08
85 44 363	03B	019	3-A20
85 44 363	03B	041	3-B18
85 44 363	03B	063	3-C16
85 44 363	03B	085	3-D14
85 47 408	03A	067	2-C20
85 47 408	03A	195	2-I04
85 47 564	03A	195	2-I04
85 47 770	03A	063	2-C16
85 47 770	03B	009	3-A10
85 47 770	03B	013	3-A14
85 47 770	03B	031	3-B08
85 47 770	03B	033	3-B10
85 47 770	03B	053	3-C06
85 47 770	03B	059	3-C12
85 47 770	03B	075	3-D04
85 47 770	03B	081	3-D10
85 47 796	03B	005	3-A06
85 47 796	03B	007	3-A08
85 47 796	03B	011	3-A12
85 47 796	03B	013	3-A14
85 47 796	03B	015	3-A16
85 47 796	03B	017	3-A18
85 47 796	03B	027	3-B04
85 47 796	03B	033	3-B10
85 47 796	03B	037	3-B14
85 47 796	03B	039	3-B16
85 47 796	03B	049	3-C02
85 47 796	03B	051	3-C04
85 47 796	03B	057	3-C10
85 47 796	03B	059	3-C12
85 47 796	03B	061	3-C14
85 47 796	03B	071	3-C24
85 47 796	03B	073	3-D02
85 47 796	03B	075	3-D04
85 47 796	03B	079	3-D08
85 47 796	03B	081	3-D10
85 47 796	03B	083	3-D12
85 47 796	03B	085	3-D14
85 47 796	03B	103	3-E08
85 47 796	03B	113	3-E18
85 47 796	03B	123	3-F04
85 47 796	03B	133	3-F14
85 47 804	03B	049	3-C02
85 47 804	03B	071	3-C24
85 47 804	03B	103	3-E08
85 47 804	03B	133	3-F14
85 47 804	03A	195	2-I04
85 47 853	02	169	1-J02
85 48 042	03A	067	2-C20
85 48 042	03A	195	2-I04
85 48 059	03A	199	2-I08
85 48 075	03A	087	2-D16
85 48 075	03A	199	2-I08
85 48 273	03A	071	2-C24
85 48 273	03A	073	2-D02
85 48 281	03A	069	2-C22
85 48 281	03A	195	2-I04
85 48 299	03A	069	2-C22
85 48 299	03A	195	2-I04
85 48 471	03A	199	2-I08
85 48 554	03A	199	2-I08
85 49 172	03A	069	2-C22
85 49 180	03A	069	2-C22
85 49 180	03A	195	2-I04
85 49 263	03A	199	2-I08
85 49 271	03A	199	2-I08
85 49 289	03A	199	2-I08
85 49 305	03A	195	2-I04
85 49 354	03A	195	2-I04
85 49 537	03A	053	2-C06
85 49 545	03A	011	2-A12
85 49 545	03A	017	2-A18
85 50 824	03A	033	2-B10
85 52 325	03A	051	2-C04
85 52 325	03A	053	2-C06
85 52 663	02	129	1-H10
85 52 663	03A	155	2-G12
85 52 663	03A	199	2-I08
85 52 663	04	007	3-G08
85 52 663	04	009	3-G10
85 52 663	08A	013	4-C14
85 52 663	08B	143	5-F24
85 52 663	08B	147	5-G04
85 52 721	03A	157	2-G14
85 52 721	03B	011	3-A12
85 53 356	03A	077	2-D06
85 53 463	03A	171	2-H04
85 53 463	03A	175	2-H08
85 53 463	03A	179	2-H12
85 53 463	03A	183	2-H16
85 53 463	03A	187	2-H20
85 58 538	03B	009	3-A10
85 58 538	03B	031	3-B08
85 58 538	03B	053	3-C06
85 58 538	03B	075	3-D04
85 59 221	08B	013	5-A14
85 60 476	03B	005	3-A06
85 60 476	03B	009	3-A10
85 60 476	03B	015	3-A16
85 60 476	03B	019	3-A20
85 60 476	03B	027	3-B04
85 60 476	03B	031	3-B08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B13 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
85 60 476	03B	033	3-B10
85 60 476	03B	041	3-B18
85 60 476	03B	049	3-C02
85 60 476	03B	053	3-C06
85 60 476	03B	059	3-C12
85 60 476	03B	063	3-C16
85 60 476	03B	071	3-C24
85 60 476	03B	075	3-D04
85 60 476	03B	081	3-D10
85 60 476	03B	085	3-D14
85 60 476	03B	101	3-E06
85 60 476	03B	111	3-E16
85 60 476	03B	121	3-F02
85 60 476	03B	131	3-F12
85 64 916	03B	011	3-A12
85 64 924	03B	011	3-A12
85 64 924	03B	033	3-B10
85 64 924	03B	057	3-C10
85 64 924	03B	079	3-D08
85 64 973	08C	023	5-J24
85 65 855	03A	075	2-D04
85 66 135	03A	155	2-G12
85 66 143	03A	155	2-G12
85 66 853	03A	193	2-I02
85 68 693	03A	193	2-I02
85 69 139	03B	101	3-E06
85 69 139	03B	111	3-E16
85 69 139	03B	121	3-F02
85 69 139	03B	131	3-F12
85 71 986	03A	011	2-A12
85 71 986	03A	017	2-A18
85 73 651	03A	071	2-C24
85 73 669	03A	071	2-C24
85 73 677	08B	197	5-I06
85 74 469	08B	013	5-A14
85 74 949	03B	009	3-A10
85 74 949	03B	031	3-B08
85 74 949	03B	053	3-C06
85 74 949	03B	075	3-D04
85 75 599	08A	029	4-D06
85 77 601	03A	057	2-C10
85 78 775	03A	059	2-C12
85 78 775	04	069	3-I22
85 79 955	03A	157	2-G14
85 79 955	03B	011	3-A12
85 79 955	03B	017	3-A18
85 79 955	03B	033	3-B10
85 79 955	03B	039	3-B16
85 82 090	03B	019	3-A20
85 82 090	03B	041	3-B18
85 82 090	03B	063	3-C16
85 82 090	03B	085	3-D14
85 82 090	03B	101	3-E06
85 82 090	03B	111	3-E16
85 82 090	03B	121	3-F02
85 82 090	03B	131	3-F12
85 82 413	03B	011	3-A12
85 82 413	03B	103	3-E08
85 82 421	03B	101	3-E06
85 82 421	03B	111	3-E16
85 82 421	03B	121	3-F02
85 82 421	03B	131	3-F12
85 82 439	03B	005	3-A06
85 82 439	03B	027	3-B04
85 82 439	03B	049	3-C02
85 82 439	03B	071	3-C24
85 82 454	03B	017	3-A18
85 82 454	03B	039	3-B16
85 82 454	03B	061	3-C14
85 82 454	03B	083	3-D12
85 82 579	03B	103	3-E08
85 82 579	03B	113	3-E18
85 82 579	03B	123	3-F04
85 82 579	03B	133	3-F14
85 82 595	03B	011	3-A12
85 82 595	03B	017	3-A18
85 82 595	03B	023	3-A24
85 82 595	03B	041	3-B18
85 82 595	03B	045	3-B22
85 82 595	03B	063	3-C16
85 82 595	03B	067	3-C20
85 82 595	03B	085	3-D14
85 82 595	03B	091	3-D20
85 82 595	03B	101	3-E06
85 82 595	03B	111	3-E16
85 82 603	03B	121	3-F02
85 82 603	03B	131	3-F12
85 82 603	03B	011	3-A12
85 82 603	03B	019	3-A20
85 82 603	03B	041	3-B18
85 82 603	03B	063	3-C16
85 82 603	03B	085	3-D14
85 82 603	03B	099	3-E04
85 82 603	03B	109	3-E14
85 82 603	03B	119	3-E24
85 82 603	03B	129	3-F10
85 87 024	03A	081	2-D10
85 87 198	03B	105	3-E10
85 87 198	03B	115	3-E20
85 87 198	03B	125	3-F06
85 87 198	03B	135	3-F16
85 87 248	03A	011	2-A12
85 87 248	03A	017	2-A18
85 87 347	03A	081	2-D10
85 87 354	03A	081	2-D10
85 87 461	03B	047	3-B24
85 87 461	03B	069	3-C22
85 87 461	03B	093	3-D22
85 87 552	03B	017	3-A18
85 87 552	03B	023	3-A24
85 87 552	03B	045	3-B22
85 87 552	03B	067	3-C20
85 87 552	03B	091	3-D20
85 87 552	03B	103	3-E08
85 87 552	03B	111	3-E16
85 87 552	03B	123	3-F04
85 87 552	03B	131	3-F12
85 87 636	03A	173	2-H06
85 87 636	03A	177	2-H10
85 87 636	03A	181	2-H14
85 87 636	03A	185	2-H18
85 87 636	03A	189	2-H22
85 88 188	03B	101	3-E06
85 90 549	03A	011	2-A12
85 90 549	03A	017	2-A18
85 90 689	03A	081	2-D10
85 90 838	03A	077	2-D06
85 90 994	03A	011	2-A12
85 90 994	03A	017	2-A18
85 91 224	03A	075	2-D04
85 93 089	03B	097	3-E02
85 93 089	03B	107	3-E12
85 93 089	03B	117	3-E22
85 93 089	03B	127	3-F08
85 93 929	03A	011	2-A12
85 93 899	03B	005	3-A06
85 93 899	03B	027	3-B04
85 93 899	03B	049	3-C02
85 93 899	03B	071	3-C24
85 93 949	03B	017	3-A18
85 93 949	03B	039	3-B16
85 93 949	03B	063	3-C16
85 93 949	03B	085	3-D14
85 93 949	03B	091	3-D20
85 93 964	03B	019	3-A20
85 93 964	03B	023	3-A24
85 93 964	03B	045	3-B22
85 93 964	03B	067	3-C20
85 93 964	03B	091	3-D20
85 93 964	03B	099	3-E04
85 93 964	03B	109	3-E14
85 93 964	03B	119	3-E24
85 93 964	03B	129	3-F10
85 98 526	03A	107	2-E12
86 57 975	08A	009	4-C10
86 62 140	08A	009	4-C10
86 62 157	08A	009	4-C10
86 62 496	08A	009	4-C10
86 62 835	08A	077	4-F06
86 62 835	08A	121	4-H02
86 62 843	08A	077	4-F06
86 62 843	08A	121	4-H02
86 63 262	08A	079	4-F08
86 63 262	08A	123	4-H04
86 63 270	08A	079	4-F08
86 63 270	08A	123	4-H04
86 67 206	08A	077	4-F06
86 67 214	08A	077	4-F06
86 67 479	08A	077	4-F06
86 69 160	08B	019	5-A20
86 69 178	08B	019	5-A20
86 69 202	08B	069	5-C22
86 69 202	08B	081	5-D10
86 69 202	08B	091	5-D20
86 69 202	08B	099	5-E04
86 69 202	08B	107	5-E12
86 69 210	08B	069	5-C22
86 69 210	08B	081	5-D10
86 69 210	08B	091	5-D20
86 69 210	08B	099	5-E04
86 69 210	08B	107	5-E12
86 69 228	08B	073	5-D02
86 69 228	08B	087	5-D16
86 69 228	08B	095	5-D24
86 69 228	08B	103	5-E08
86 69 228	08B	111	5-E16
86 69 236	08B	073	5-D02
86 69 236	08B	087	5-D16
86 69 236	08B	095	5-D24
86 69 236	08B	103	5-E08
86 69 236	08B	111	5-E16
86 69 319	08A	051	4-E04
86 69 913	08A	051	4-E04
86 70 002	08A	079	4-C20
86 71 455	03A	093	2-D22
86 71 497	03A	095	2-D24
86 71 562	03A	095	2-D24
86 73 428	08B	013	5-A14
86 73 436	08B	013	5-A14
86 73 444	08B	021	5-A22
86 73 451	08B	019	5-A20
86 75 001	08A	065	4-E18
86 75 001	08A	069	4-E22
86 75 019	08A	065	4-E18
86 75 019	08A	069	4-E22
86 75 027	08A	069	4-E22
86 75 035	08A	069	4-E22
86 75 043	08A	065	4-E18
86 75 043	08A	069	4-E22
86 77 395	07	011	4-B12
86 77 403	07	011	4-B12
86 85 919	08A	065	4-E18
86 85 935	08A	065	4-E18
86 86 087	08B	181	5-H14
87 01 658	04	013	3-G14
87 04 298	04	073	3-J02
87 04 306	04	031	3-H08
87 04 314	04	033	3-H10
87 04 314	04	035	3-H12
87 04 314	04	073	3-J02
87 04 322	04	033	3-H10
87 04 322	04	035	3-H12
87 04 322	04	073	3-J02
87 11 707	04	013	3-G14
87 11 707	04	071	3-I24
87 16 821	04	023	3-G24
87 16 839	04	023	3-G24
87 17 027	04	019	3-G20
87 19 098	04	035	3-H12
87 19 163	04	023	3-G24
87 19 189	04	023	3-G24
87 19 593	04	019	3-G20
87 19 601	04	019	3-G20
87 19 650	04	019	3-G20
87 19 684	04	019	3-G20
87 19 940	04	031	3-H08
87 20 112	04	023	3-G24
87 20 948	04	031	3-H08
87 20 948	04	035	3-H12
87 20 948	04	073	3-J02
87 20 997	04	041	3-H18

6-B14 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
87 20 997	04	073	3-J02
87 21 078	04	073	3-J02
87 21 557	04	019	3-G20
87 21 565	04	019	3-G20
87 21 573	04	019	3-G20
87 21 615	04	019	3-G20
87 21 623	04	019	3-G20
87 21 946	04	023	3-G24
87 21 953	04	023	3-G24
87 21 995	04	017	3-G18
87 21 995	04	071	3-I24
87 22 118	04	017	3-G18
87 22 118	04	071	3-I24
87 22 126	04	017	3-G18
87 22 126	04	071	3-I24
87 22 746	04	017	3-G18
87 23 108	04	041	3-H18
87 23 140	04	033	3-H10
87 23 140	04	035	3-H12
87 23 330	04	023	3-G24
87 23 397	04	019	3-G20
87 23 967	04	013	3-G14
87 24 874	04	013	3-G14
87 24 874	04	045	3-H22
87 24 874	04	077	3-J06
87 24 882	04	045	3-H22
87 25 327	04	029	3-H06
87 26 754	04	019	3-G20
87 27 000	04	039	3-H16
87 27 232	04	035	3-H12
87 27 240	04	045	3-H22
87 27 778	04	035	3-H12
87 27 828	04	013	3-G14
87 27 828	04	045	3-H22
87 27 869	04	019	3-G20
87 27 968	04	039	3-H16
87 28 198	04	031	3-H08
87 29 378	04	027	3-H04
87 29 592	04	027	3-G18
87 29 592	04	071	3-I24
87 29 600	04	017	3-G18
87 29 600	04	071	3-I24
87 29 758	04	031	3-H08
87 29 766	04	035	3-H12
87 29 964	04	025	3-H07
87 30 111	04	019	3-G20
87 30 244	04	031	3-H08
87 30 251	04	031	3-H08
87 30 285	04	031	3-H08
87 30 350	04	027	3-H04
87 30 566	04	027	3-H04
87 30 665	04	013	3-G14
87 30 715	04	031	3-H08
87 30 723	04	027	3-H04
87 31 010	04	019	3-G20
87 31 077	04	019	3-G20
87 31 143	04	013	3-G14
87 31 150	04	023	3-G24
87 31 192	04	023	3-G24
87 31 333	04	023	3-G24
87 31 366	04	023	3-G24
87 31 374	04	023	3-G24
87 31 382	04	023	3-G24
87 31 390	04	033	3-H10
87 31 390	04	071	3-I24
87 31 788	04	031	3-H08
87 31 796	04	031	3-H08
87 31 804	04	031	3-H08
87 31 304	04	071	3-I24
87 32 414	04	027	3-H04
87 32 422	04	031	3-H08
87 33 230	04	033	3-H10
87 33 438	04	031	3-H08
87 33 909	04	031	3-H08
87 34 030	04	031	3-H08
87 34 048	04	031	3-H08
87 34 071	04	023	3-G24
87 34 097	04	013	3-G14
87 34 105	04	013	3-G14
87 34 337	04	027	3-H04
87 34 428	04	027	3-H04
87 34 436	04	027	3-H04
87 34 444	04	027	3-H04
87 34 451	04	027	3-H04
87 34 477	04	029	3-H06
87 34 543	04	023	3-G24
87 34 568	04	031	3-H08
87 34 592	04	023	3-G24
87 34 618	04	031	3-H08
87 34 626	04	031	3-H08
87 34 634	04	031	3-H08
87 34 642	04	031	3-H08
87 34 659	04	025	3-H02
87 34 717	04	013	3-G14
87 34 741	04	019	3-G20
87 34 808	04	019	3-G20
87 34 816	04	013	3-G14
87 34 832	04	013	3-G14
87 34 832	04	071	3-I24
87 34 873	04	013	3-G14
87 34 881	04	013	3-G14
87 34 964	04	031	3-H08
87 34 972	04	013	3-G14
87 34 980	04	017	3-G18
87 34 980	04	071	3-I24
87 34 998	04	013	3-G14
87 34 998	04	071	3-I24
87 35 037	04	013	3-G14
87 35 102	04	021	3-G22
87 35 193	04	031	3-H08
87 35 276	04	019	3-G20
87 35 359	04	027	3-H04
87 35 441	04	023	3-G24
87 35 490	04	023	3-G24
87 35 516	04	029	3-H06
87 35 599	04	019	3-G20
87 35 615	04	025	3-H02
87 35 623	04	025	3-H02
87 35 656	04	019	3-G20
87 35 680	04	027	3-H04
87 35 722	04	005	3-G06
87 35 722	04	071	3-I24
87 35 755	04	019	3-G20
87 35 813	04	029	3-H06
87 35 847	04	027	3-H04
87 35 862	04	027	3-H04
87 35 896	04	027	3-H04
87 35 920	04	027	3-H04
87 36 209	04	011	3-G12
87 36 399	04	025	3-H02
87 36 407	04	011	3-G12
87 36 415	04	005	3-G06
87 36 415	04	071	3-I24
87 36 423	04	005	3-G06
87 36 423	04	071	3-I24
87 36 555	04	005	3-G06
87 36 555	04	071	3-I24
87 36 597	04	023	3-G24
87 36 761	04	005	3-G06
87 36 761	04	071	3-I24
87 36 928	04	017	3-G18
87 37 025	04	017	3-G18
87 37 025	04	071	3-I24
87 37 074	04	023	3-G24
87 37 421	04	013	3-G14
87 37 439	04	023	3-G24
87 37 447	04	023	3-G24
87 37 454	04	023	3-G24
87 37 835	04	029	3-H06
87 37 983	04	031	3-H08
87 38 155	04	017	3-G18
87 38 205	04	011	3-G12
87 38 338	04	013	3-G14
87 38 411	04	013	3-G14
87 39 450	04	023	3-G24
87 39 682	04	013	3-G14
87 39 815	04	023	3-G24
87 39 898	04	031	3-H08
87 40 151	04	019	3-G20
87 40 169	04	025	3-H02
87 40 185	04	023	3-G24
87 40 201	04	023	3-G24
87 40 631	04	027	3-H04
87 40 649	04	019	3-G20
87 40 656	04	019	3-G20
87 40 672	04	025	3-H02
87 40 680	04	025	3-H02
87 40 714	04	019	3-G20
87 40 789	04	027	3-H04
87 40 797	04	027	3-H04
87 41 001	04	023	3-G24
87 41 043	04	019	3-G20
87 41 241	04	025	3-H02
87 41 324	04	025	3-H02
87 41 373	04	011	3-G12
87 41 381	04	019	3-G20
87 41 449	06	017	4-A18
87 41 480	04	011	3-G12
87 41 506	04	023	3-G24
87 41 506	04	027	3-H04
87 41 712	04	031	3-H08
87 41 811	04	019	3-G20
87 41 837	04	031	3-H08
87 41 845	04	031	3-H08
87 41 878	04	013	3-G14
87 42 371	04	025	3-H02
87 42 397	04	025	3-H02
87 42 421	04	023	3-G24
87 42 439	04	023	3-G24
87 43 205	04	027	3-H04
87 43 460	04	025	3-H02
87 43 791	04	025	3-H02
87 43 809	04	025	3-H02
87 43 858	04	013	3-G14
87 44 070	04	005	3-G06
87 44 203	04	013	3-G14
87 44 237	04	025	3-H02
87 44 252	04	025	3-H02
87 44 997	04	023	3-G24
87 45 606	04	023	3-G24
87 46 190	04	019	3-G20
87 46 216	04	019	3-G20
87 46 364	04	025	3-H02
87 46 406	04	035	3-H12
87 46 489	04	005	3-G06
87 46 638	04	019	3-G20
87 46 687	04	027	3-H04
87 46 786	04	005	3-G06
87 46 810	04	011	3-G12
87 46 877	04	027	3-H04
87 46 893	04	031	3-H08
87 47 016	04	025	3-H02
87 47 255	04	031	3-H08
87 47 313	04	013	3-G14
87 47 909	04	023	3-G24
87 47 925	04	023	3-G24
87 47 933	04	023	3-G24
87 48 170	04	013	3-G14
87 48 261	04	029	3-H06
87 48 311	04	013	3-G14
87 81 437	04	025	3-H02
87 81 445	04	023	3-G24
87 81 452	04	023	3-G24
87 81 478	04	027	3-H04
87 81 486	04	027	3-H04
87 81 510	04	023	3-G24
87 81 551	04	005	3-G06
87 81 551	04	071	3-I24
87 81 569	04	005	3-G06
87 81 569	04	071	3-I24
87 81 585	04	017	3-G18
87 81 593	04	015	3-G16
87 81 593	04	017	3-G18
87 81 593	04	033	3-H10
87 81 593	04	071	3-I24
87 81 643	04	017	3-G18

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B15 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
87 81 643	04	071	3-I24
87 81 668	04	045	3-H22
87 81 668	04	047	3-H24
87 81 676	04	039	3-H16
87 81 684	04	025	3-H02
87 81 684	04	041	3-H18
87 81 692	04	005	3-G06
87 81 692	04	071	3-I24
87 81 734	04	027	3-H04
87 81 759	04	025	3-H02
87 81 841	02	031	1-D08
87 81 841	02	033	1-D10
87 81 841	02	137	1-H18
87 81 882	04	025	3-H02
87 81 999	04	059	3-I12
87 81 999	04	079	3-J08
87 87 319	02	161	1-I18
87 87 707	02	045	1-D22
87 87 723	02	045	1-D22
87 87 731	02	045	1-D22
87 87 764	02	015	1-C16
87 88 200	02	067	1-E20
87 88 473	02	067	1-E20
87 88 499	02	153	1-I10
87 89 562	02	081	1-F10
87 89 570	02	081	1-F10
87 89 612	02	093	1-F22
87 89 638	02	045	1-D22
88 16 415	08A	107	4-G12
88 17 520	03A	025	2-B02
88 17 538	02	147	1-I04
88 17 538	02	167	1-I24
88 18 569	02	161	1-I18
88 18 569	02	169	1-J02
88 19 138	02	045	1-D22
88 19 138	02	167	1-I24
88 21 720	02	039	1-D16
88 21 738	02	039	1-D16
88 21 746	02	039	1-D16
88 21 779	02	039	1-D16
88 21 787	02	039	1-D16
88 21 795	02	039	1-D16
88 21 829	02	039	1-D16
88 21 837	02	039	1-D16
88 21 845	02	039	1-D16
88 21 944	02	145	1-I02
88 21 951	03A	027	2-B04
88 21 969	03A	023	2-A24
88 21 977	03A	023	2-A24
88 21 985	03A	023	2-A24
88 21 993	03A	023	2-A24
88 22 009	03A	023	2-A24
88 22 025	02	147	1-I04
88 22 025	02	167	1-I24
88 22 033	02	011	1-C12
88 22 033	02	167	1-I24
88 22 041	02	013	1-C14
88 22 041	02	167	1-I24
88 22 066	02	101	1-G06
88 22 074	02	101	1-G06
88 22 132	02	061	1-E14
88 22 140	02	061	1-E14
88 22 231	02	121	1-H02
88 22 348	02	089	1-F18
88 22 413	02	039	1-D16
88 22 421	02	039	1-D16
88 22 447	02	039	1-D16
88 22 454	02	039	1-D16
88 22 462	02	039	1-D16
88 22 496	02	039	1-D16
88 22 504	02	039	1-D16
88 22 512	02	039	1-D16
88 22 520	02	039	1-D16
88 22 587	02	011	1-C12
88 22 587	02	169	1-J02
88 22 595	03A	029	2-B06
88 22 629	02	029	1-D06
88 22 660	02	029	1-D06
88 22 678	02	029	1-D06
88 22 777	02	133	1-H14
88 56 916	03A	155	2-G12
88 57 195	02	089	1-F18
88 58 359	02	067	1-E20
88 59 324	02	021	1-C22
88 59 514	02	025	1-D02
88 59 514	02	027	1-D04
88 59 886	02	135	1-H16
89 03 304	04	071	3-I24
89 08 576	05	005	3-K06
89 08 576	05	007	3-K08
89 16 272	04	007	3-G08
89 16 272	05	019	3-K20
89 16 272	05	021	3-K22
89 21 520	04	039	3-H16
89 25 067	02	169	1-J02
89 29 531	05	009	3-K10
89 29 531	05	019	3-K20
89 29 531	05	021	3-K22
89 29 531	08A	017	4-C18
89 29 531	08B	009	5-A10
89 29 531	08B	011	5-A12
89 31 461	05	015	3-K16
89 31 461	05	017	3-K18
89 33 392	02	155	1-I12
89 34 119	06	013	4-A14
89 34 259	06	015	4-A16
89 36 684	06	013	4-A14
89 36 684	06	015	4-A16
89 36 882	06	013	4-A14
89 36 908	06	013	4-A14
89 36 932	06	013	4-A14
89 36 965	06	013	4-A14
89 36 973	06	013	4-A14
89 37 021	06	013	4-A14
89 37 039	06	013	4-A14
89 37 070	06	015	4-A16
89 37 161	06	013	4-A14
89 37 161	06	015	4-A16
89 40 769	04	071	3-I24
89 41 478	04	009	3-G10
89 41 478	08A	017	4-C18
89 43 177	02	111	1-G16
89 44 795	05	015	3-K16
89 44 795	05	017	3-K18
89 45 156	04	009	3-G10
89 45 248	04	071	3-I24
89 45 255	04	071	3-I24
89 46 097	08D	005	5-K06
89 46 360	06	015	4-A16
89 50 172	06	007	4-A08
89 50 297	04	009	3-G10
89 50 297	05	019	3-K20
89 50 396	02	155	1-I12
89 50 438	07	015	4-B16
89 50 438	07	019	4-B20
89 50 628	04	039	3-H16
89 50 636	04	039	3-H16
89 50 701	06	007	4-A08
89 51 063	07	015	4-B16
89 51 063	07	019	4-B20
89 51 527	05	019	3-K20
89 51 915	07	021	4-B22
89 52 046	07	021	4-B22
89 52 137	07	015	4-B16
89 52 137	07	019	4-B20
89 52 194	06	011	4-A12
89 52 277	07	021	4-B22
89 52 285	07	015	4-B16
89 52 285	07	019	4-B20
89 52 558	07	021	4-B22
89 52 665	05	007	3-K08
89 52 699	05	015	3-K16
89 52 699	05	017	3-K18
89 52 749	07	015	4-B16
89 52 749	07	019	4-B20
89 52 749	07	023	4-B24
89 53 283	05	005	3-K06
89 53 390	05	021	3-K22
89 53 689	05	023	3-K24
89 53 739	05	023	3-K24
89 53 762	05	023	3-K24
89 53 788	05	023	3-K24
89 53 796	05	023	3-K24
89 53 879	05	023	3-K24
89 53 986	07	007	4-B08
89 53 986	07	009	4-B10
89 54 000	07	007	4-B08
89 54 000	07	009	4-B10
89 54 281	06	007	4-A08
89 54 315	06	009	4-A10
89 54 455	05	023	3-K24
89 54 596	03A	087	2-D16
89 54 646	05	023	3-K24
89 55 007	04	073	3-J02
89 55 239	05	025	3-L02
89 55 288	05	025	3-L02
89 55 296	05	025	3-L02
89 55 304	05	029	3-L06
89 55 312	05	029	3-L06
89 55 395	05	007	3-K08
89 55 403	05	007	3-K08
89 55 411	05	005	3-K06
89 55 411	05	007	3-K08
89 55 437	05	007	3-K08
89 55 478	05	005	3-K06
89 55 478	05	007	3-K08
89 55 478	05	027	3-L04
89 55 528	05	007	3-K08
89 55 536	05	025	3-L02
89 55 619	06	015	4-A16
89 55 635	06	015	4-A16
89 55 643	06	015	4-A16
89 55 650	06	015	4-A16
89 55 692	06	015	4-A16
89 55 718	06	013	4-A14
89 55 742	06	013	4-A14
89 55 759	07	021	4-B22
89 56 211	06	011	4-A12
89 56 245	06	011	4-A12
89 56 245	08A	017	4-C18
89 56 252	06	011	4-A12
89 56 294	08A	017	4-C18
89 56 393	05	019	3-K20
89 56 393	05	021	3-K22
89 56 443	04	009	3-G10
89 56 443	05	019	3-K20
89 56 443	05	021	3-K22
89 56 468	07	021	4-B22
89 56 534	06	011	4-A12
89 57 193	04	009	3-G10
89 57 482	05	021	3-K22
89 57 532	07	021	4-B22
89 57 565	02	155	1-I12
89 57 706	07	021	4-B22
89 57 714	07	015	4-B16
89 57 714	07	019	4-B20
89 57 722	07	021	4-B22
89 57 813	04	007	3-G08
89 57 839	06	021	4-A22
89 58 084	07	007	4-B08
89 58 084	07	009	4-B10
89 58 316	04	007	3-G08
89 58 357	05	013	3-K14
89 58 365	06	005	4-A06
89 58 373	06	005	4-A06
89 58 498	07	017	4-B18
89 58 498	07	019	4-B20
89 58 514	07	021	4-B22
89 58 530	05	017	3-K18
89 58 548	05	015	3-K16
89 58 613	07	021	4-B22
89 58 746	07	021	4-B22
89 58 779	06	005	4-A06
89 58 944	07	007	4-B08
89 58 944	07	009	4-B10
89 59 520	05	015	3-K16

6-B16 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
89 59 520	05	017	3-K18
89 59 934	07	015	4-B16
89 59 934	07	019	4-B20
89 59 934	07	023	4-B24
89 60 080	02	155	1-I12
89 60 122	08A	005	4-C06
89 60 171	07	007	4-B08
89 60 171	07	009	4-B10
89 60 221	08A	057	4-E10
89 60 247	08A	005	4-C06
89 60 924	02	155	1-I12
89 61 054	08A	005	4-C06
89 61 062	05	023	3-K24
89 61 070	08A	005	4-C06
89 61 195	02	155	1-I12
89 61 237	08A	005	4-C06
89 61 310	06	015	4-A16
89 61 476	06	005	4-A06
89 61 492	07	011	4-B12
89 61 526	07	011	4-B12
89 61 625	07	017	4-B18
89 61 625	07	019	4-B20
89 61 740	08D	005	5-K06
89 61 765	07	015	4-B16
89 61 765	07	019	4-B20
89 61 849	05	007	3-K08
89 61 849	05	025	3-L02
89 61 948	08A	005	4-C06
89 62 011	07	015	4-B16
89 62 011	07	019	4-B20
89 62 128	04	007	3-G08
89 62 128	04	009	3-G10
89 62 128	05	019	3-K20
89 62 243	06	015	4-A16
89 62 250	06	015	4-A16
89 62 292	08A	005	4-C06
89 62 300	05	021	3-K22
89 62 334	08A	007	4-C08
89 62 342	08A	007	4-C08
89 62 359	08A	007	4-C08
89 62 391	07	011	4-B12
89 62 516	06	015	4-A16
89 62 524	06	015	4-A16
89 62 565	06	013	4-A14
89 62 573	06	015	4-A16
89 62 649	05	023	3-K24
89 63 019	05	015	3-K16
89 63 019	05	017	3-K18
89 63 027	05	007	3-K08
89 63 985	06	013	4-A14
89 64 082	06	015	4-A16
89 64 090	06	013	4-A14
89 64 686	05	015	3-K16
89 64 991	08D	005	5-K06
89 65 121	06	005	4-A06
89 65 253	06	005	4-A06
89 65 329	05	025	3-L02
89 65 345	04	009	3-G10
89 65 360	04	039	3-H16
89 65 360	07	021	4-B22
89 65 501	05	021	3-K22
89 65 535	04	009	3-G10
89 65 600	05	021	3-K22
89 65 618	05	021	3-K22
89 65 626	05	021	3-K22
89 65 634	05	015	3-K16
89 65 634	05	017	3-K18
89 65 782	05	025	3-L02
89 65 808	05	025	3-L02
89 65 907	07	013	4-B14
89 65 949	02	155	1-I12
89 65 956	06	015	4-A16
89 66 087	08A	005	4-C06
89 66 129	07	007	4-B08
89 66 129	07	009	4-B10
89 66 160	05	027	3-L04
89 66 236	05	027	3-L04
89 66 251	05	027	3-L04
89 66 335	05	009	3-K10
89 66 335	05	027	3-L04
89 66 335	05	029	3-L06
89 66 368	05	009	3-K10
89 66 368	05	027	3-L04
89 66 376	05	009	3-K10
89 66 384	05	009	3-K10
89 66 491	05	009	3-K10
89 66 608	05	023	3-K24
89 66 681	05	009	3-K10
89 66 681	05	027	3-L04
89 66 681	05	029	3-L06
89 66 699	08D	015	5-K16
89 66 707	05	027	3-L04
89 66 756	04	009	3-G10
89 66 939	05	009	3-K10
89 66 939	05	027	3-L04
89 66 939	05	029	3-L06
89 67 036	07	011	4-B12
89 67 234	05	009	3-K10
89 67 234	05	027	3-L04
89 67 267	05	009	3-K10
89 67 267	05	029	3-L06
89 67 309	05	009	3-K10
89 67 309	05	027	3-L04
89 67 325	05	009	3-K10
89 67 325	05	027	3-L04
89 67 390	05	009	3-K10
89 67 390	05	029	3-L06
89 67 481	05	023	3-K24
89 67 572	06	011	4-A12
89 67 655	05	023	3-K24
89 67 903	02	155	1-I12
89 68 067	07	007	4-B08
89 68 067	07	009	4-B10
89 68 166	05	017	3-K18
89 68 315	06	009	4-A10
89 68 471	07	021	4-B22
89 68 505	07	021	4-B22
89 68 588	05	005	3-K06
89 68 588	05	007	3-K08
89 68 703	06	009	4-A10
89 68 943	05	005	3-K06
89 68 950	05	005	3-K06
89 68 968	05	005	3-K06
89 68 968	05	025	3-L02
89 68 976	05	005	3-K06
89 68 976	05	025	3-L02
89 68 984	07	007	4-B08
89 68 984	07	009	4-B10
89 68 992	07	007	4-B08
89 68 992	07	009	4-B10
89 69 024	06	007	4-A08
89 69 032	06	007	4-A08
89 69 081	05	025	3-L02
89 69 099	05	025	3-L02
89 69 107	05	005	3-K06
89 69 107	05	027	3-L04
89 69 115	05	005	3-K06
89 69 123	05	005	3-K06
89 69 206	05	015	3-K16
89 69 206	05	017	3-K18
89 69 214	07	017	4-B18
89 69 214	07	019	4-B20
89 69 412	05	025	3-L02
89 69 446	05	025	3-L02
89 69 651	05	005	3-K06
89 69 651	05	007	3-K08
89 70 147	05	029	3-L06
89 70 196	04	009	3-G10
89 70 204	05	019	3-K20
89 70 410	05	019	3-K20
89 70 428	05	007	3-K08
89 70 444	05	021	3-K22
89 70 618	05	007	3-K08
89 70 626	05	007	3-K08
89 70 717	05	007	3-K08
89 70 725	05	023	3-K24
89 70 733	05	023	3-K24
89 70 782	07	015	4-B16
89 70 782	07	019	4-B20
89 70 816	05	007	3-K08
89 70 832	04	007	3-G08
89 70 873	06	015	4-A16
89 70 980	07	011	4-B12
89 71 343	06	011	4-A12
89 71 426	06	017	4-A18
89 71 582	08A	017	4-C18
89 71 657	06	011	4-A12
89 72 002	07	007	4-B08
89 72 002	07	009	4-B10
89 72 135	06	021	4-A22
89 72 176	02	155	1-I12
89 72 309	06	015	4-A16
89 72 374	06	007	4-A08
89 72 663	07	011	4-B12
89 72 929	06	007	4-A08
89 72 986	04	039	3-H16
89 72 986	04	073	3-J02
89 73 018	07	011	4-B12
89 73 216	06	005	4-A06
89 73 224	06	005	4-A06
89 73 299	04	007	3-G08
89 73 406	05	007	3-K08
89 75 153	02	063	1-E16
89 76 813	02	059	1-E12
89 76 912	02	135	1-H16
89 77 761	02	063	1-E16
89 77 779	02	063	1-E16
89 77 936	02	113	1-G18
89 77 936	02	117	1-G22
89 77 936	02	119	1-G24
89 77 936	02	121	1-H02
89 77 936	02	123	1-H04
89 77 936	02	057	1-E10
89 78 652	02	135	1-H16
89 78 678	02	163	1-I20
89 78 827	02	063	1-E16
89 79 155	02	119	1-G24
89 79 155	02	121	1-H02
89 79 163	02	113	1-G18
89 79 163	02	117	1-G22
89 80 328	02	119	1-G24
89 80 328	02	121	1-H02
89 81 961	02	169	1-J02
89 82 472	08A	023	4-C24
89 86 622	04	009	3-G10
89 86 911	05	025	3-L02
89 86 986	05	025	3-L02
89 86 994	05	025	3-L02
89 87 018	05	025	3-L02
89 87 620	07	011	4-B12
89 87 802	07	011	4-B12
89 93 156	04	009	3-G10
89 93 156	04	071	3-I24
89 93 453	06	015	4-A16
89 93 453	06	021	4-A22
89 93 511	06	013	4-A14
89 93 628	04	039	3-H16
89 93 628	04	071	3-I24
89 93 636	04	039	3-H16
89 93 636	04	073	3-J02
89 93 644	05	009	3-K10
89 93 669	06	013	4-A14
89 93 685	04	039	3-H16
89 93 685	04	071	3-I24
89 93 701	04	039	3-H16
89 93 701	04	073	3-J02
89 93 768	05	005	3-K06
89 93 768	05	025	3-L02
89 94 071	05	009	3-K10
89 94 071	05	027	3-L04
89 94 089	05	027	3-L04
89 94 212	06	005	4-A06
89 94 212	06	021	4-A22
90 81 142	08A	031	4-D08
90 81 159	08A	031	4-D08
90 81 167	08A	031	4-D08
90 81 175	08A	031	4-D08
90 81 217	08A	101	4-G06
90 81 267	08A	077	4-F06
90 81 282	08A	101	4-G06

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
90 81 316	08A	101	4-G06
90 81 373	03A	035	2-B12
90 81 381	03A	035	2-B12
90 81 431	03A	035	2-B12
90 81 449	03A	035	2-B12
90 82 231	08A	105	4-G10
90 82 272	08A	105	4-G10
90 82 439	03A	035	2-B12
90 82 470	03A	069	2-C22
90 82 488	03A	069	2-C22
90 82 553	03A	069	2-C22
90 82 561	03A	069	2-C22
90 82 579	03A	035	2-B12
90 82 587	03A	195	2-I04
90 82 660	08A	093	4-F22
90 82 678	08A	093	4-F22
90 82 892	03A	039	2-B16
90 82 900	03A	039	2-B16
90 82 918	03A	035	2-B12
90 82 926	03A	035	2-B12
90 83 080	08A	065	4-E18
90 83 080	08A	069	4-E22
90 83 098	08A	065	4-E18
90 83 098	08A	069	4-E22
90 83 122	08A	065	4-E18
90 83 122	08A	069	4-E22
90 83 130	08A	065	4-E18
90 83 130	08A	069	4-E22
90 83 163	08A	071	4-E24
90 83 171	08A	071	4-E24
90 83 205	08A	071	4-E24
90 83 213	08A	071	4-E24
90 83 247	08A	065	4-E18
90 83 247	08A	069	4-E22
90 83 254	08A	065	4-E18
90 83 254	08A	069	4-E22
90 83 312	08A	065	4-E18
90 83 312	08A	069	4-E22
90 83 312	08A	071	4-E24
90 83 395	08B	113	5-E18
90 83 684	03A	065	2-C18
90 83 841	08A	089	4-F18
90 83 858	08A	089	4-F18
90 83 866	08A	089	4-F18
90 83 874	08A	089	4-F18
90 84 013	03A	035	2-B12
90 84 021	03A	035	2-B12
90 84 039	03A	053	2-C06
90 84 047	03A	053	2-C06
90 84 070	03A	053	2-C06
90 84 088	03A	053	2-C06
90 84 112	03A	039	2-B16
90 84 120	03A	039	2-B16
90 84 179	03A	039	2-B16
90 84 187	03A	039	2-B16
90 84 211	08A	075	4-F04
90 84 567	08B	113	5-E18
90 84 575	08B	113	5-E18
90 84 633	08B	113	5-E18
90 84 765	08A	089	4-F18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
90 84 773	08A	089	4-F18
90 85 077	08A	047	4-D24
90 85 358	03A	053	2-C06
90 85 366	03A	053	2-C06
90 85 416	03A	035	2-B12
90 85 671	03A	035	2-B12
90 85 689	03A	035	2-B12
90 85 861	08A	053	4-E06
90 85 903	08A	095	4-F24
90 86 133	08A	057	4-E10
90 86 141	08A	049	4-E02
90 86 141	08A	053	4-E06
90 86 166	08A	075	4-F04
90 86 240	03A	053	2-C06
90 86 265	03A	053	2-C06
90 86 281	03A	053	2-C06
90 86 869	03A	065	2-C18
90 86 877	03A	065	2-C18
90 86 885	03A	065	2-C18
90 86 901	03A	065	2-C18
90 86 935	03A	065	2-C18
90 86 943	03A	065	2-C18
90 86 950	03A	065	2-C18
90 87 008	08A	039	4-D16
90 87 016	08A	039	4-D16
90 87 024	08A	039	4-D16
90 87 032	08A	039	4-D16
90 87 040	08A	037	4-D14
90 87 040	08A	039	4-D16
90 87 040	08A	073	4-F02
90 87 040	08A	075	4-F04
90 87 040	08A	077	4-F06
90 87 040	08A	079	4-F08
90 87 040	08A	093	4-F22
90 87 040	08A	101	4-G06
90 87 040	08A	115	4-G20
90 87 040	08A	119	4-G24
90 87 057	08B	113	5-E18
90 87 289	08A	031	4-D08
90 87 289	08A	095	4-F24
90 87 289	08A	097	4-G02
90 87 297	08A	053	4-E06
90 87 404	08B	113	5-E18
90 87 412	08B	113	5-E18
90 87 420	08B	113	5-E18
90 87 438	08B	113	5-E18
90 87 552	03A	075	2-D04
90 87 560	08A	071	4-E24
90 87 560	08A	123	4-H04
90 88 444	08A	035	4-D12
90 88 535	08A	035	4-D12
90 88 543	08A	065	4-E18
90 88 543	08A	069	4-E22
90 88 550	08A	065	4-E18
90 88 550	08A	069	4-E22
90 88 592	08A	053	4-E06
90 88 659	08B	113	5-E18
90 88 675	08A	019	4-C20
90 88 980	08A	025	4-D02
90 88 998	08A	025	4-D02

Part No Art nr	Gr Gr	Page Sida	Grid Koord
90 89 111	03A	069	2-C22
90 89 129	03A	069	2-C22
90 89 426	08A	097	4-G02
90 89 434	08A	097	4-G02
90 89 517	08A	089	4-F18
90 89 624	08A	065	4-E18
90 89 624	08A	069	4-E22
90 89 632	08A	065	4-E18
90 89 632	08A	069	4-E22
90 89 640	08A	069	4-E22
90 89 657	08A	069	4-E22
90 89 772	03A	035	2-B12
90 89 780	03A	035	2-B12
90 90 119	08A	019	4-C20
90 90 135	08A	019	4-C20
91 01 221	06	011	4-A12
91 04 738	05	009	3-K10
91 04 738	05	027	3-L04
91 04 738	05	029	3-L06
91 04 746	05	027	3-L04
91 04 746	05	029	3-L06
91 04 795	05	009	3-K10
91 04 811	05	027	3-L04
91 04 829	05	027	3-L04
91 04 944	05	027	3-L04
91 05 495	04	007	3-G08
91 06 139	05	017	3-K18
91 06 998	02	151	1-I08
91 07 541	02	021	1-C22
91 07 616	02	089	1-F18
91 07 632	02	153	1-I10
91 07 640	02	153	1-I10
91 07 996	02	161	1-I18
91 08 291	02	011	1-C12
91 12 459	02	045	1-D22
91 12 541	02	167	1-I24
91 12 541	03A	025	2-B02
91 12 780	02	113	1-G18
91 12 780	02	117	1-G22
91 12 780	02	119	1-G24
91 12 780	02	121	1-H02
91 13 325	02	143	1-H24
91 13 325	02	167	1-I24
91 13 341	02	143	1-H24
91 13 937	02	161	1-I18
91 14 075	02	053	1-E06
91 14 265	02	143	1-H24
91 14 455	03A	031	2-B08
91 15 049	02	015	1-C16
91 15 197	02	021	1-C22
91 15 205	02	021	1-C22
91 15 288	02	023	1-C24
91 15 445	02	083	1-F12
91 16 443	02	023	1-C24
91 16 674	02	161	1-I18
91 16 765	02	151	1-I08
91 16 864	02	021	1-C22
91 17 417	02	013	1-C14
91 17 466	02	045	1-D22
91 17 557	02	015	1-C16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 17 565	02	167	1-I24
91 17 565	03A	025	2-B02
91 17 714	02	093	1-F22
91 19 645	02	101	1-G06
91 19 645	02	103	1-G08
91 20 106	03A	159	2-G16
91 20 668	03B	005	3-A06
91 20 668	03B	009	3-A10
91 20 668	03B	011	3-A12
91 20 668	03B	017	3-A18
91 20 668	03B	019	3-A20
91 20 668	03B	023	3-A24
91 20 668	03B	027	3-B04
91 20 668	03B	031	3-B08
91 20 668	03B	039	3-B16
91 20 668	03B	041	3-B18
91 20 668	03B	043	3-B20
91 20 668	03B	049	3-C02
91 20 668	03B	053	3-C06
91 20 668	03B	063	3-C16
91 20 668	03B	065	3-C18
91 20 668	03B	067	3-C20
91 20 668	03B	071	3-C24
91 20 668	03B	075	3-D04
91 20 668	03B	085	3-D14
91 20 668	03B	087	3-D16
91 20 668	03B	091	3-D20
91 20 668	03B	103	3-E08
91 20 668	03B	113	3-E18
91 20 668	03B	123	3-F04
91 20 668	03B	133	3-F14
91 20 775	03B	097	3-E02
91 20 775	03B	107	3-E12
91 20 775	03B	117	3-E22
91 20 775	03B	127	3-F08
91 20 783	03B	007	3-A08
91 20 783	03B	029	3-B06
91 20 783	03B	053	3-C06
91 20 783	03B	075	3-D04
91 20 783	03B	099	3-E04
91 20 783	03B	109	3-E14
91 20 783	03B	119	3-E24
91 20 783	03B	129	3-F10
91 20 791	03B	007	3-A08
91 20 791	03B	011	3-A12
91 20 791	03B	017	3-A18
91 20 791	03B	019	3-A20
91 20 791	03B	023	3-A24
91 20 791	03B	029	3-B06
91 20 791	03B	033	3-B10
91 20 791	03B	039	3-B16
91 20 791	03B	041	3-B18
91 20 791	03B	043	3-B20
91 20 791	03B	053	3-C06
91 20 791	03B	057	3-C10
91 20 791	03B	061	3-C14
91 20 791	03B	063	3-C16
91 20 791	03B	067	3-C20
91 20 791	03B	075	3-D04
91 20 791	03B	079	3-D08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 20 791	03B	083	3-D12
91 20 791	03B	085	3-D14
91 20 791	03B	091	3-D20
91 20 791	03B	099	3-E04
91 20 791	03B	109	3-E14
91 20 791	03B	119	3-E24
91 20 791	03B	129	3-F10
91 20 882	03A	067	2-C20
91 20 882	03A	195	2-I04
91 20 957	03B	009	3-A10
91 20 957	03B	017	3-A18
91 20 957	03B	019	3-A20
91 20 957	03B	023	3-A24
91 20 957	03B	025	3-B02
91 20 957	03B	031	3-B08
91 20 957	03B	037	3-B14
91 20 957	03B	039	3-B16
91 20 957	03B	041	3-B18
91 20 957	03B	043	3-B20
91 20 957	03B	045	3-B22
91 20 957	03B	047	3-B24
91 20 957	03B	053	3-C06
91 20 957	03B	061	3-C14
91 20 957	03B	063	3-C16
91 20 957	03B	065	3-C18
91 20 957	03B	067	3-C20
91 20 957	03B	069	3-C22
91 20 957	03B	075	3-D04
91 20 957	03B	083	3-D12
91 20 957	03B	085	3-D14
91 20 957	03B	087	3-D16
91 20 957	03B	089	3-D18
91 20 957	03B	091	3-D20
91 20 957	03B	093	3-D22
91 20 957	03B	095	3-D24
91 20 957	03B	103	3-E08
91 20 957	03B	113	3-E18
91 20 957	03B	123	3-F04
91 20 957	03B	133	3-F14
91 20 981	03A	017	2-A18
91 22 102	03A	049	2-C02
91 22 102	03A	051	2-C04
91 22 227	03A	041	2-B18
91 22 227	03A	043	2-B20
91 22 748	03A	167	2-G24
91 22 755	03A	167	2-G24
91 22 789	03B	017	3-A18
91 22 789	03B	039	3-B16
91 22 789	03B	061	3-C14
91 22 789	03B	083	3-D12
91 22 797	03B	017	3-A18
91 22 797	03B	039	3-B16
91 22 797	03B	063	3-C16
91 22 797	03B	085	3-D14
91 23 076	03A	049	2-C02
91 23 084	03A	049	2-C02
91 23 159	03A	049	2-C02
91 23 167	03A	049	2-C02
91 23 217	03A	067	2-C20
91 23 225	03A	067	2-C20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 23 233	03A	067	2-C20
91 23 241	03A	067	2-C20
91 23 316	03A	167	2-G24
91 23 381	03B	017	3-A18
91 23 381	03B	039	3-B16
91 23 381	03B	063	3-C16
91 23 381	03B	085	3-D14
91 23 399	03B	019	3-A20
91 23 399	03B	041	3-B18
91 23 399	03B	065	3-C18
91 23 399	03B	087	3-D16
91 23 456	03A	087	2-D16
91 23 456	03A	199	2-I08
91 23 548	03B	009	3-A10
91 23 548	03B	031	3-B08
91 23 548	03B	053	3-C06
91 23 548	03B	075	3-D04
91 23 555	03B	015	3-A16
91 23 555	03B	037	3-B14
91 23 555	03B	059	3-C12
91 23 555	03B	081	3-D10
91 23 589	03A	063	2-C16
91 23 597	03A	063	2-C16
91 23 605	03A	063	2-C16
91 23 613	03A	063	2-C16
91 23 639	03A	063	2-C16
91 23 662	03A	063	2-C16
91 23 688	03A	063	2-C16
91 23 696	03A	063	2-C16
91 23 704	03A	063	2-C16
91 23 753	03A	063	2-C16
91 23 761	03A	063	2-C16
91 23 837	03A	063	2-C16
91 23 845	03A	063	2-C16
91 23 852	03A	063	2-C16
91 23 894	03A	063	2-C16
91 24 090	03B	019	3-A20
91 24 090	03B	041	3-B18
91 24 090	03B	063	3-C16
91 24 090	03B	085	3-D14
91 24 124	03A	067	2-C20
91 24 132	03A	057	2-C10
91 24 140	03A	057	2-C10
91 24 157	03B	007	3-A08
91 24 157	03B	029	3-B06
91 24 157	03B	053	3-C06
91 24 157	03B	075	3-D04
91 24 165	03B	011	3-A12
91 24 165	03B	033	3-B10
91 24 165	03B	057	3-C10
91 24 165	03B	079	3-D08
91 24 173	03B	017	3-A18
91 24 173	03B	039	3-B16
91 24 173	03B	061	3-C14
91 24 173	03B	083	3-D12
91 24 223	03A	081	2-D10
91 24 264	03A	017	2-A18
91 24 272	03A	017	2-A18
91 24 280	03A	017	2-A18
91 24 314	03A	017	2-A18

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 24 348	03A	017	2-A18
91 24 355	03A	017	2-A18
91 24 363	03A	017	2-A18
91 24 371	03A	017	2-A18
91 24 397	03A	017	2-A18
91 24 454	03A	075	2-D04
91 24 603	03A	155	2-G12
91 24 645	03A	017	2-A18
91 24 645	03A	019	2-A20
91 24 751	03A	063	2-C16
91 24 884	03A	081	2-D10
91 25 279	03A	033	2-B10
91 25 287	03A	033	2-B10
91 25 295	03A	033	2-B10
91 25 303	03A	033	2-B10
91 25 543	03A	105	2-E10
91 25 543	03B	023	3-A24
91 25 543	03B	043	3-B20
91 25 543	03B	067	3-C20
91 25 543	03B	091	3-D20
91 26 566	02	013	1-C14
91 26 939	02	157	1-I14
91 27 168	02	089	1-F18
91 27 176	02	089	1-F18
91 27 200	02	095	1-F24
91 28 224	02	089	1-F18
91 28 687	02	015	1-C16
91 28 695	02	095	1-F24
91 28 703	02	095	1-F24
91 28 836	02	067	1-E20
91 28 851	02	067	1-E20
91 29 396	02	053	1-E06
91 29 651	02	011	1-C12
91 29 701	02	167	1-I24
91 29 719	02	023	1-C24
91 29 727	02	023	1-C24
91 29 800	02	015	1-C16
91 29 909	02	011	1-C12
91 30 535	02	023	1-C24
91 30 600	02	023	1-C24
91 30 618	02	045	1-D22
91 31 004	02	011	1-C12
91 31 004	02	169	1-J02
91 31 061	02	067	1-E20
91 31 145	02	021	1-C22
91 31 160	02	025	1-D02
91 31 160	02	027	1-D04
91 32 374	02	067	1-E20
91 32 838	02	023	1-C24
91 32 929	02	045	1-D22
91 32 937	02	045	1-D22
91 32 937	02	167	1-I24
91 33 026	02	013	1-C14
91 33 026	02	167	1-I24
91 33 034	02	013	1-C14
91 33 034	02	167	1-I24
91 34 404	03A	031	2-B08
91 34 420	02	011	1-C12
91 34 487	02	151	1-I08
91 34 727	02	081	1-F10

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 34 735	02	081	1-F10
91 35 211	02	011	1-C12
91 36 243	02	013	1-C14
91 36 243	02	067	1-E20
91 36 243	02	087	1-F16
91 36 243	02	099	1-G04
91 36 243	02	107	1-G12
91 36 243	02	161	1-I18
91 36 243	02	163	1-I20
91 36 243	03A	193	2-I02
91 36 524	02	053	1-E06
91 36 524	02	143	1-H24
91 36 532	02	021	1-C22
91 36 946	02	025	1-D02
91 36 946	02	027	1-D04
91 37 035	02	067	1-E20
91 37 472	02	011	1-C12
91 37 514	02	143	1-H24
91 37 803	02	067	1-E20
91 37 860	02	151	1-I08
91 37 944	02	151	1-I08
91 37 993	02	045	1-D22
91 38 009	02	045	1-D22
91 38 108	02	045	1-D22
91 38 231	02	067	1-E20
91 38 264	02	023	1-C24
91 38 470	02	015	1-C16
91 38 645	02	045	1-D22
91 38 884	02	081	1-F10
91 38 884	02	083	1-F12
91 38 884	02	085	1-F14
91 38 884	02	167	1-I24
91 38 934	02	023	1-C24
91 39 130	02	023	1-C24
91 39 320	02	015	1-C16
91 39 338	02	015	1-C16
91 39 403	02	025	1-D02
91 39 460	02	027	1-D04
91 40 658	02	023	1-C24
91 41 730	02	161	1-I18
91 42 035	02	023	1-C24
91 42 068	02	023	1-C24
91 42 423	02	067	1-E20
91 42 449	02	067	1-E20
91 43 157	02	013	1-C14
91 43 454	02	025	1-D02
91 43 454	02	027	1-D04
91 43 652	02	023	1-C24
91 43 918	02	025	1-D02
91 43 918	02	027	1-D04
91 43 934	02	147	1-I04
91 43 967	02	053	1-E06
91 43 967	02	151	1-I08
91 44 023	02	045	1-D22
91 44 049	02	045	1-D22
91 44 171	02	081	1-F10
91 44 445	02	045	1-D22
91 44 528	02	011	1-C12
91 44 528	02	167	1-I24
91 44 841	02	023	1-C24

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B19 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 45 350	02	021	1-C22
91 45 368	02	023	1-C24
91 45 376	02	021	1-C22
91 45 384	02	023	1-C24
91 45 392	02	023	1-C24
91 45 418	02	025	1-D02
91 45 418	02	027	1-D04
91 45 426	02	025	1-D02
91 45 426	02	027	1-D04
91 45 434	02	025	1-D02
91 45 434	02	027	1-D04
91 45 459	02	025	1-D02
91 45 459	02	027	1-D04
91 45 467	02	025	1-D02
91 45 467	02	027	1-D04
91 45 475	02	025	1-D02
91 45 475	02	027	1-D04
91 45 590	02	025	1-D02
91 45 590	02	027	1-D04
91 45 632	02	011	1-C12
91 45 640	02	011	1-C12
91 45 657	02	011	1-C12
91 45 665	02	011	1-C12
91 45 756	02	013	1-C14
91 45 764	02	013	1-C14
91 45 764	03A	031	2-B08
91 45 897	02	143	1-H24
91 46 051	02	161	1-I18
91 46 168	02	053	1-E06
91 46 176	02	053	1-E06
91 46 184	02	143	1-H24
91 46 192	02	053	1-E06
91 46 598	02	143	1-H24
91 46 606	02	143	1-H24
91 46 614	02	143	1-H24
91 46 622	02	045	1-D22
91 46 788	02	025	1-D02
91 46 788	02	027	1-D04
91 46 812	02	161	1-I18
91 46 937	02	113	1-G18
91 46 937	02	117	1-G22
91 46 937	02	121	1-H02
91 46 945	02	119	1-G24
91 47 224	02	117	1-G22
91 47 802	02	083	1-F12
91 47 927	02	011	1-C12
91 48 024	02	013	1-C14
91 48 289	02	167	1-I24
91 48 370	02	045	1-D22
91 48 388	02	045	1-D22
91 48 396	02	045	1-D22
91 48 404	02	045	1-D22
91 48 586	02	013	1-C14
91 48 693	02	011	1-C12
91 48 784	02	081	1-F10
91 48 792	02	081	1-F10
91 49 105	02	025	1-D02
91 49 105	02	027	1-D04
91 49 113	02	025	1-D02
91 49 113	02	027	1-D04

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 49 121	02	025	1-D02
91 49 121	02	027	1-D04
91 49 154	02	025	1-D02
91 49 162	02	025	1-D02
91 49 170	02	025	1-D02
91 49 188	02	025	1-D02
91 49 196	02	025	1-D02
91 49 220	02	025	1-D02
91 49 238	02	025	1-D02
91 49 246	02	025	1-D02
91 49 253	02	025	1-D02
91 49 295	02	025	1-D02
91 49 303	02	025	1-D02
91 49 311	02	025	1-D02
91 49 329	02	025	1-D02
91 49 360	02	027	1-D04
91 49 378	02	027	1-D04
91 49 386	02	027	1-D04
91 49 394	02	027	1-D04
91 49 402	02	027	1-D04
91 49 436	02	027	1-D04
91 49 444	02	027	1-D04
91 49 451	02	027	1-D04
91 49 469	02	027	1-D04
91 49 634	02	161	1-I18
91 49 766	02	143	1-H24
91 49 964	02	023	1-C24
91 65 564	02	045	1-D22
91 65 580	02	011	1-C12
91 65 598	02	011	1-C12
91 66 000	02	085	1-F14
91 66 240	02	011	1-C12
91 66 265	02	011	1-C12
91 66 281	02	143	1-H24
91 66 323	02	011	1-C12
91 66 323	02	169	1-J02
91 66 331	05	015	3-K16
91 66 356	08B	009	5-A10
91 66 364	05	015	3-K16
91 66 364	05	017	3-K18
91 66 364	08B	141	5-F22
91 66 364	08B	143	5-F24
91 66 372	02	113	1-G18
91 66 372	02	119	1-G24
91 66 372	04	037	3-H14
91 66 372	06	011	4-A12
91 66 372	06	019	4-A20
91 66 398	02	101	1-G06
91 66 398	02	103	1-G08
91 66 406	02	089	1-F18
91 66 406	03A	081	2-D10
91 66 497	02	101	1-G06
91 66 497	02	103	1-G08
91 66 497	02	167	1-I24
91 66 687	02	167	1-I24
91 67 016	03A	031	2-B08
91 67 024	03A	031	2-B08
91 67 032	03A	031	2-B08
91 67 560	02	081	1-F10
91 67 677	02	015	1-C16

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 67 776	02	025	1-D02
91 67 776	02	027	1-D04
91 67 784	02	023	1-C24
91 67 891	02	025	1-D02
91 67 891	02	027	1-D04
91 68 220	02	053	1-E06
91 68 352	02	169	1-J02
91 68 568	02	103	1-G08
91 68 709	02	103	1-G08
91 68 899	02	161	1-I18
91 68 907	02	081	1-F10
91 68 915	02	083	1-F12
91 68 915	02	085	1-F14
91 69 194	02	089	1-F18
91 69 251	02	089	1-F18
91 69 269	02	089	1-F18
91 69 277	02	101	1-G06
91 69 277	02	103	1-G08
91 69 376	02	017	1-C18
91 69 384	02	017	1-C18
91 69 392	02	017	1-C18
91 69 400	02	017	1-C18
91 69 418	02	017	1-C18
91 69 426	02	161	1-I18
91 69 467	02	161	1-I18
91 69 483	02	161	1-I18
91 69 491	02	161	1-I18
91 69 517	02	161	1-I18
91 69 566	02	011	1-C12
91 69 905	02	017	1-C18
91 69 913	02	017	1-C18
91 69 921	02	017	1-C18
91 69 939	02	017	1-C18
91 69 947	02	017	1-C18
91 69 954	02	017	1-C18
91 69 962	02	017	1-C18
91 69 970	02	017	1-C18
91 69 988	02	017	1-C18
91 69 996	02	017	1-C18
91 70 002	02	017	1-C18
91 70 010	02	017	1-C18
91 70 028	02	019	1-C20
91 70 044	02	089	1-F18
91 70 051	02	089	1-F18
91 70 069	02	089	1-F18
91 70 408	02	017	1-C18
91 70 416	02	017	1-C18
91 70 424	02	089	1-F18
91 70 432	02	089	1-F18
91 70 440	02	157	1-I14
91 70 457	02	089	1-F18
91 70 473	02	053	1-E06
91 70 630	02	045	1-D22
91 70 655	02	045	1-D22
91 70 705	02	089	1-F18
91 71 117	03A	029	2-B06
91 71 117	03A	031	2-B08
91 71 125	03A	031	2-B08
91 71 596	02	067	1-E20
91 73 576	02	023	1-C24

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 74 194	02	015	1-C16
91 74 202	02	015	1-C16
91 74 400	02	019	1-C20
91 74 442	02	135	1-H16
91 74 533	02	023	1-C24
91 75 464	02	067	1-E20
91 75 696	02	045	1-D22
91 75 902	02	015	1-C16
91 76 140	02	053	1-E06
91 76 470	02	011	1-C12
91 76 991	04	005	3-G06
91 77 007	02	025	1-D02
91 77 007	02	027	1-D04
91 77 098	02	103	1-G08
91 77 106	02	103	1-G08
91 77 148	02	085	1-F14
91 77 213	02	067	1-E20
91 77 593	02	017	1-C18
91 77 601	02	017	1-C18
91 77 619	02	017	1-C18
91 77 627	02	017	1-C18
91 77 635	02	017	1-C18
91 77 643	02	017	1-C18
91 77 650	02	017	1-C18
91 77 668	02	017	1-C18
91 77 676	02	017	1-C18
91 77 684	02	017	1-C18
91 77 692	02	017	1-C18
91 77 700	02	019	1-C20
91 77 718	02	019	1-C20
91 77 726	02	019	1-C20
91 77 924	02	085	1-F14
91 78 955	03A	031	2-B08
91 79 136	02	025	1-D02
91 79 136	02	027	1-D04
91 79 235	02	011	1-C12
91 79 292	02	039	1-D16
91 80 852	02	017	1-C18
91 80 860	02	017	1-C18
91 80 878	02	017	1-C18
91 80 886	02	017	1-C18
91 80 894	02	017	1-C18
91 80 902	02	017	1-C18
91 80 910	02	017	1-C18
91 80 928	02	017	1-C18
91 80 936	02	019	1-C20
91 80 944	02	017	1-C18
91 80 951	02	019	1-C20
91 80 969	02	019	1-C20
91 80 977	02	019	1-C20
91 81 538	02	089	1-F18
91 81 918	02	081	1-F10
91 81 918	03A	085	2-D14
91 81 926	02	085	1-F14
91 81 926	03A	085	2-D14
91 82 205	02	011	1-C12
91 82 270	02	011	1-C12
91 82 304	02	011	1-C12
91 82 742	02	013	1-C14
91 82 759	02	013	1-C14

6-B20 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
91 83 252	02	017	1-C18
91 83 260	02	017	1-C18
91 83 278	02	017	1-C18
91 83 294	02	019	1-C20
91 85 208	02	011	1-C12
91 85 307	02	011	1-C12
91 85 489	02	161	1-I18
91 85 489	02	169	1-J02
91 85 497	02	169	1-J02
91 85 612	02	011	1-C12
91 85 687	02	011	1-C12
91 87 451	02	019	1-C20
91 87 469	02	017	1-C18
91 87 477	02	017	1-C18
91 87 550	02	019	1-C20
91 87 568	02	019	1-C20
92 20 880	08B	009	5-A10
92 20 880	08B	019	5-A20
92 21 987	08A	051	4-E04
92 21 987	08A	053	4-E06
92 23 082	03A	067	2-C20
92 23 991	08A	011	4-C12
92 25 475	08A	049	4-E02
92 28 149	03A	105	2-E10
92 28 149	08A	013	4-C14
92 28 156	02	135	1-H16
92 30 293	08A	007	4-C08
92 30 293	08A	077	4-F06
92 36 589	08A	023	4-C24
92 40 078	08A	037	4-D14
92 40 078	08A	039	4-D16
92 40 086	08A	051	4-E04
92 40 086	08A	121	4-H02
92 48 006	08A	043	4-D20
92 52 057	08A	049	4-E02
92 52 206	08A	053	4-E06
92 52 701	08A	041	4-D18
92 52 719	08A	041	4-D18
92 52 768	08A	043	4-D20
92 52 776	08A	043	4-D20
92 52 958	08A	037	4-D14
92 52 958	08A	039	4-D16
92 53 329	02	161	1-I18
92 53 329	08A	061	4-E14
92 53 329	08A	065	4-E18
92 53 329	08A	069	4-E22
92 53 329	08A	121	4-H02
92 54 103	08A	015	4-C16
92 54 129	08A	013	4-C14
92 54 236	08A	013	4-C14
92 54 327	08A	013	4-C14
92 54 459	08A	015	4-C16
92 54 525	08A	013	4-C14
92 54 533	08A	013	4-C14
92 54 541	08A	013	4-C14
92 54 558	08A	013	4-C14
92 54 608	08A	013	4-C14
92 54 640	08A	013	4-C14
92 54 673	08A	015	4-C16
92 54 707	08A	013	4-C14

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 54 707	08A	025	4-D02
92 54 848	08A	013	4-C14
92 55 209	08A	041	4-D18
92 55 217	08A	041	4-D18
92 55 225	08A	043	4-D20
92 55 233	08A	043	4-D20
92 55 712	08A	031	4-D08
92 55 720	08A	031	4-D08
92 55 738	08A	031	4-D08
92 55 761	08A	031	4-D08
92 55 779	08A	031	4-D08
92 55 845	03A	075	2-D04
92 55 845	08B	183	5-H16
92 55 910	08A	023	4-C24
92 57 080	08A	045	4-D22
92 57 080	08A	047	4-D24
92 57 163	08A	045	4-D22
92 57 163	08A	047	4-D24
92 57 171	08A	045	4-D22
92 57 171	08A	047	4-D24
92 58 807	08A	043	4-D20
92 59 342	08A	015	4-C16
92 59 383	08A	015	4-C16
92 59 425	08A	047	4-D24
92 59 433	08A	047	4-D24
92 59 524	03A	057	2-C10
92 59 524	03A	103	2-E08
92 59 524	08A	013	4-C14
92 59 912	08A	031	4-D08
92 59 938	08A	041	4-D18
92 59 938	08A	043	4-D20
92 60 142	08A	013	4-C14
92 60 266	08A	055	4-E08
92 60 704	08A	035	4-D12
92 60 712	08A	035	4-D12
92 61 249	08A	043	4-D20
92 61 256	08A	043	4-D20
92 61 652	08A	031	4-D08
92 62 023	08A	045	4-D22
92 62 031	08A	045	4-D22
92 62 163	08A	049	4-E02
92 62 163	08A	053	4-E06
92 62 163	08A	055	4-E08
92 62 205	08A	015	4-C16
92 62 346	08A	041	4-D18
92 62 353	08A	041	4-D18
92 62 361	08A	055	4-E08
92 62 387	08A	055	4-E08
92 62 395	08A	055	4-E08
92 62 403	08A	055	4-E08
92 62 601	08A	037	4-D14
92 62 601	08A	039	4-D16
92 62 916	08A	087	4-F16
92 62 940	08A	097	4-G02
92 62 957	08A	095	4-F24
92 62 965	08A	095	4-F24
92 62 973	08A	055	4-E08
92 63 401	08A	045	4-D22
92 63 401	08A	047	4-D24
92 63 641	08A	043	4-D20

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 63 658	08A	041	4-D18
92 63 658	08A	043	4-D20
92 63 708	08A	091	4-F20
92 63 922	08A	015	4-C16
92 63 930	08A	015	4-C16
92 63 948	08A	013	4-C14
92 63 955	08A	013	4-C14
92 63 997	08A	035	4-D12
92 64 680	08A	015	4-C16
92 64 698	08A	015	4-C16
92 65 331	08A	073	4-F02
92 65 331	08A	075	4-F04
92 65 745	08A	005	4-C06
92 65 786	08A	017	4-C18
92 65 794	08A	017	4-C18
92 65 844	08A	019	4-C20
92 65 869	08A	011	4-C12
92 66 008	08A	007	4-C08
92 66 016	08A	007	4-C08
92 66 024	08A	007	4-C08
92 66 032	08A	007	4-C08
92 66 040	08A	007	4-C08
92 66 065	08A	007	4-C08
92 66 123	08A	005	4-C06
92 66 149	08A	005	4-C06
92 66 156	08A	005	4-C06
92 66 180	08A	005	4-C06
92 66 644	08A	047	4-D24
92 67 485	08A	011	4-C12
92 67 527	08A	023	4-C24
92 67 527	08A	025	4-D02
92 67 691	08A	005	4-C06
92 67 709	08A	007	4-C08
92 67 717	08A	007	4-C08
92 67 774	08A	007	4-C08
92 67 808	08A	005	4-C06
92 67 816	08A	017	4-C18
92 67 865	08A	007	4-C08
92 67 881	03A	157	2-G14
92 67 881	08A	005	4-C06
92 67 881	08A	051	4-E04
92 67 899	08A	005	4-C06
92 67 899	08A	023	4-C24
92 67 899	08A	029	4-D06
92 67 907	08A	005	4-C06
92 67 915	08A	019	4-C20
92 67 915	08A	029	4-D06
92 67 923	08A	005	4-C06
92 67 931	08A	027	4-D04
92 67 956	08A	073	4-F02
92 67 956	08A	115	4-G20
92 67 980	08A	007	4-C08
92 67 998	08A	005	4-C06
92 67 998	08A	007	4-C08
92 68 178	08A	005	4-C06
92 68 178	08A	019	4-C20
92 68 178	08A	029	4-D06
92 68 186	08A	029	4-D06
92 68 616	08A	091	4-F20
92 68 814	08A	007	4-C08

Part No Art nr	Gr Gr	Page Sida	Grid Koord
92 68 822	08A	007	4-C08
92 68 863	08A	019	4-C20
92 68 988	08A	027	4-D04
92 69 234	08A	013	4-C14
92 69 390	08A	033	4-D10
92 69 697	08A	061	4-E14
92 69 697	08A	065	4-E18
92 70 240	08A	033	4-D10
92 70 547	08D	009	5-K10
92 71 263	08A	007	4-C08
92 71 909	08A	013	4-C14
92 72 139	08A	051	4-E04
92 73 921	08A	037	4-D14
92 73 939	08A	037	4-D14
92 75 017	08A	059	4-E12
92 75 033	08A	059	4-E12
92 75 785	08A	019	4-C20
92 75 793	08A	019	4-C20
92 76 106	08A	007	4-C08
92 76 353	08A	017	4-C18
92 76 403	08A	023	4-C24
92 76 924	08A	007	4-C08
92 76 940	08A	007	4-C08
92 77 237	08A	097	4-G02
92 77 278	08A	091	4-F20
92 77 286	08A	091	4-F20
92 77 336	08A	061	4-E14
92 77 336	08A	065	4-E18
92 77 344	08A	061	4-E14
92 77 344	08A	065	4-E18
92 77 393	08A	061	4-E14
92 77 484	08A	099	4-G04
92 77 690	08A	097	4-G02
92 78 003	08A	061	4-E14
92 78 136	08A	035	4-D12
92 78 151	08A	061	4-E14
92 78 151	08A	065	4-E18
92 78 151	08A	069	4-E22
92 78 151	08A	079	4-F08
92 78 151	08A	093	4-F22
92 78 151	08A	123	4-H04
92 78 177	08A	061	4-E14
92 78 185	08A	061	4-E14
92 78 193	08A	061	4-E14
92 78 201	08A	061	4-E14
92 78 219	08A	061	4-E14
92 78 227	08A	061	4-E14
92 78 235	08A	061	4-E14
92 78 243	08A	061	4-E14
92 78 250	08A	061	4-E14
92 78 268	08A	061	4-E14
92 78 300	08A	087	4-F16
92 78 300	08A	115	4-G20
92 78 318	08A	087	4-F16
92 78 318	08A	115	4-G20
92 78 334	08A	087	4-F16
92 78 334	08A	089	4-F18
92 78 334	08A	119	4-G24
92 78 334	08A	121	4-H02
92 78 912	08A	007	4-C08

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B21 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
92 79 332	08A	045	4-D22
92 79 340	08A	045	4-D22
92 79 514	08A	041	4-D18
92 79 514	08A	043	4-D20
92 79 548	08A	097	4-G02
92 79 654	08A	015	4-C16
92 79 712	08A	015	4-C16
92 79 860	08A	037	4-D14
92 79 878	03A	105	2-E10
92 83 722	08D	009	5-K10
92 85 404	08B	021	5-A22
92 88 127	08A	007	4-C08
92 88 127	08A	017	4-C18
92 88 127	08A	061	4-E14
92 88 127	08A	065	4-E18
92 88 127	08A	097	4-G02
92 88 846	08A	077	4-F06
92 88 846	08A	101	4-G06
92 92 699	08A	005	4-C06
93 01 532	02	169	1-J02
93 06 812	02	101	1-G06
93 06 812	02	103	1-G08
93 09 998	02	023	1-C24
93 19 294	02	009	1-C10
93 20 383	02	167	1-I24
93 21 688	02	143	1-H24
93 21 688	02	167	1-I24
93 21 795	02	015	1-C16
93 21 795	02	023	1-C24
93 21 795	02	045	1-D22
93 21 795	02	049	1-E02
93 21 795	02	169	1-J02
93 21 795	04	015	3-G16
93 21 795	04	071	3-I24
93 21 845	02	021	1-C22
93 21 878	02	065	1-E18
93 21 936	02	045	1-D22
93 21 936	02	167	1-I24
93 21 977	02	039	1-D16
93 21 985	02	039	1-D16
93 21 993	02	039	1-D16
93 41 439	08D	009	5-K10
93 48 533	04	037	3-H14
93 50 505	02	169	1-J02
93 55 389	02	023	1-C24
93 56 486	02	067	1-E20
93 59 050	02	089	1-F18
93 61 544	02	045	1-D22
93 65 164	03A	155	2-G12
93 68 234	02	063	1-E16
93 77 334	02	125	1-H06
93 77 334	02	129	1-H10
93 78 332	04	041	3-H18
93 81 450	04	041	3-H18
93 82 144	02	133	1-H14
93 82 870	02	063	1-E16
93 83 043	02	107	1-G12
93 83 043	03A	163	2-G20
93 84 298	02	063	1-E16
93 85 824	02	125	1-H06

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
93 85 824	02	129	1-H10
93 85 832	02	127	1-H08
93 86 285	02	125	1-H06
93 86 509	08A	005	4-C06
93 87 044	04	041	3-H18
93 87 911	08A	007	4-C08
93 87 994	08A	007	4-C08
93 88 034	02	063	1-E16
93 88 588	02	119	1-G24
93 90 170	02	055	1-E08
93 90 170	02	057	1-E10
93 90 170	02	059	1-E12
93 90 907	02	055	1-E08
93 90 907	02	057	1-E10
93 90 907	02	059	1-E12
93 90 915	02	055	1-E08
93 90 964	08D	011	5-K12
93 91 616	02	055	1-E08
93 91 616	02	057	1-E10
93 91 616	02	059	1-E12
93 92 457	02	113	1-G18
93 92 457	02	119	1-G24
93 92 465	02	113	1-G18
93 92 465	02	117	1-G22
93 92 465	02	119	1-G24
93 92 465	02	121	1-H02
93 92 465	02	123	1-H04
93 92 606	02	061	1-E14
93 93 968	02	063	1-E16
93 93 968	02	113	1-G18
93 93 968	02	117	1-G22
93 93 968	02	119	1-G24
93 93 968	02	121	1-H02
93 93 968	02	123	1-H04
94 20 035	08C	005	5-J06
94 20 043	08C	005	5-J06
94 27 014	02	133	1-H14
94 27 014	08A	017	4-C18
94 45 909	08B	157	5-G14
94 45 909	08B	163	5-G20
94 45 909	08B	169	5-H02
94 45 909	08B	175	5-H08
94 45 909	08B	179	5-H12
94 46 881	03A	009	2-A10
94 46 881	03A	161	2-G18
94 50 685	08B	135	5-F16
94 50 685	08B	145	5-G02
94 50 685	08B	157	5-G14
94 50 685	08B	163	5-G20
94 50 685	08B	169	5-H02
94 50 685	08B	179	5-H12
94 50 685	08B	195	5-I04
94 59 728	08B	181	5-H14
94 59 868	08B	143	5-F24
94 59 868	08B	153	5-G10
94 61 070	03A	167	2-G24
94 72 580	08A	085	4-F14
94 73 869	03A	079	2-D08
94 73 869	08B	133	5-F14
94 73 877	08B	113	5-E18

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
94 89 493	08B	195	5-I04
94 91 689	08B	113	5-E18
94 91 689	08B	115	5-E20
94 91 689	08B	117	5-E22
94 91 689	08B	119	5-E24
94 91 689	08B	121	5-F02
94 91 689	08B	123	5-F04
94 91 689	08B	125	5-F06
94 91 689	08B	129	5-F10
95 00 273	03A	057	2-C10
95 00 927	08C	005	5-J06
95 01 495	03A	067	2-C20
95 01 685	03A	063	2-C16
95 01 685	03B	009	3-A10
95 01 685	03B	031	3-B08
95 01 685	03B	053	3-C06
95 01 685	03B	075	3-D04
95 01 941	03A	057	2-C10
95 02 055	03A	057	2-C10
95 02 709	03A	075	2-D04
95 02 717	03A	075	2-D04
95 02 741	03A	075	2-D04
95 02 840	03A	157	2-G14
95 03 020	03B	023	3-A24
95 03 020	03B	043	3-B20
95 03 020	03B	067	3-C20
95 03 020	03B	091	3-D20
95 03 053	03A	009	2-A10
95 03 061	03A	075	2-D04
95 03 079	03A	075	2-D04
95 03 251	03B	017	3-A18
95 03 251	03B	041	3-B18
95 03 251	03B	063	3-C16
95 03 251	03B	085	3-D14
95 03 277	03B	011	3-A12
95 03 277	03B	033	3-B10
95 03 277	03B	057	3-C10
95 03 277	03B	079	3-D08
95 03 319	03B	007	3-A08
95 03 319	03B	027	3-B04
95 03 319	03B	049	3-C02
95 03 319	03B	073	3-D02
95 03 319	03B	075	3-D04
95 03 327	03A	033	2-B10
95 03 327	03A	063	2-C16
95 03 327	03A	067	2-C20
95 03 327	03A	069	2-C22
95 03 327	03A	197	2-I06
95 03 327	03B	013	3-A14
95 03 327	03B	033	3-B10
95 03 327	03B	059	3-C12
95 03 327	03B	081	3-D10
95 03 418	03B	005	3-A06
95 03 418	03B	027	3-B04
95 03 418	03B	049	3-C02
95 03 418	03B	071	3-C24
95 03 418	08C	015	5-J16
95 03 426	08C	015	5-J16
95 03 434	03B	015	3-A16
95 03 434	03B	037	3-B14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 03 434	03B	059	3-C12
95 03 434	03B	081	3-D10
95 03 475	03B	017	3-A18
95 03 475	03B	039	3-B16
95 03 475	03B	061	3-C14
95 03 475	03B	083	3-D12
95 03 475	03B	085	3-D14
95 03 491	03A	157	2-G14
95 03 525	03B	019	3-A20
95 03 525	03B	041	3-B18
95 03 525	03B	063	3-C16
95 03 525	03B	085	3-D14
95 03 772	03A	077	2-D06
95 04 648	03A	033	2-B10
95 04 648	03A	037	2-B14
95 05 058	03A	075	2-D04
95 05 116	03A	055	2-C08
95 05 116	03A	193	2-I02
95 05 298	03A	193	2-I02
95 05 397	03B	023	3-A24
95 05 397	03B	043	3-B20
95 05 397	03B	067	3-C20
95 05 397	03B	091	3-D20
95 05 421	08C	005	5-J06
95 05 439	03A	057	2-C10
95 05 447	03A	057	2-C10
95 05 454	08A	045	4-D22
95 05 454	08A	047	4-D24
95 05 462	03A	087	2-D16
95 05 488	03A	079	2-D08
95 05 520	03A	193	2-I02
95 05 538	03A	193	2-I02
95 05 546	03A	193	2-I02
95 05 553	03A	193	2-I02
95 05 561	03A	193	2-I02
95 05 744	08C	005	5-J06
95 05 801	08A	013	4-C14
95 05 959	03A	167	2-G24
95 06 080	03A	057	2-C10
95 06 619	03A	191	2-H24
95 07 617	03A	071	2-C24
95 07 658	03B	015	3-A16
95 07 658	03B	033	3-B10
95 07 658	03B	059	3-C12
95 07 658	03B	081	3-D10
95 07 666	03A	157	2-G14
95 07 690	03A	157	2-G14
95 07 708	03A	041	2-B18
95 07 914	03A	155	2-G12
95 08 011	08A	045	4-D22
95 08 011	08A	047	4-D24
95 08 037	03A	155	2-G12
95 08 045	03A	155	2-G12
95 08 094	03A	075	2-D04
95 08 094	08A	045	4-D22
95 08 094	08A	047	4-D24
95 08 367	03A	087	2-D16
95 08 441	03A	167	2-G24
95 08 482	03A	157	2-G14
95 08 524	03A	155	2-G12

6-B22 *Numerical register* *Nummerregister*

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 08 532	03A	155	2-G12
95 08 706	03B	103	3-E08
95 08 706	03B	113	3-E18
95 08 706	03B	123	3-F04
95 08 706	03B	133	3-F14
95 08 714	03B	015	3-A16
95 08 714	03B	037	3-B14
95 08 714	03B	059	3-C12
95 08 714	03B	081	3-D10
95 08 862	03A	193	2-I02
95 08 904	03A	049	2-C02
95 09 175	03A	191	2-H24
95 09 746	03B	019	3-A20
95 09 746	03B	041	3-B18
95 09 746	03B	065	3-C18
95 09 746	03B	087	3-D16
95 09 746	03B	103	3-E08
95 09 746	03B	113	3-E18
95 09 746	03B	123	3-F04
95 09 746	03B	133	3-F14
95 12 229	03A	101	2-E06
95 12 302	03A	081	2-D10
95 12 401	03A	037	2-B14
95 12 690	03A	077	2-D06
95 12 880	03A	039	2-B16
95 12 880	03A	055	2-C08
95 12 880	03A	057	2-C10
95 12 898	03A	057	2-C10
95 12 930	03B	019	3-A20
95 12 930	03B	041	3-B18
95 12 930	03B	065	3-C18
95 12 930	03B	087	3-D16
95 13 128	03A	011	2-A12
95 13 128	03A	017	2-A18
95 13 144	03A	011	2-A12
95 13 169	03A	011	2-A12
95 13 177	03A	011	2-A12
95 13 185	03A	011	2-A12
95 13 193	03A	011	2-A12
95 13 334	03A	193	2-I02
95 13 599	03A	011	2-A12
95 13 599	03A	017	2-A18
95 13 763	03A	011	2-A12
95 13 888	03A	191	2-H24
95 14 183	03A	199	2-I08
95 14 787	08C	005	5-J06
95 14 803	03B	011	3-A12
95 14 860	03A	101	2-E06
95 14 878	03A	087	2-D16
95 14 886	03A	087	2-D16
95 14 894	03A	191	2-H24
95 15 024	03B	101	3-E06
95 15 024	03B	111	3-E16
95 15 024	03B	123	3-F04
95 15 024	03B	131	3-F12
95 15 099	03A	171	2-H04
95 15 099	03A	175	2-H08
95 15 099	03A	179	2-H12
95 15 099	03A	183	2-H16
95 15 099	03A	187	2-H20

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 15 180	03A	011	2-A12
95 15 180	03A	017	2-A18
95 15 222	03A	009	2-A10
95 16 212	03A	165	2-G22
95 16 329	03A	081	2-D10
95 17 798	03A	081	2-D10
95 17 806	03A	077	2-D06
95 17 871	03A	155	2-G12
95 17 889	03A	157	2-G14
95 18 119	03A	161	2-G18
95 18 226	03A	077	2-D06
95 18 507	03A	045	2-B22
95 18 556	03A	093	2-D22
95 18 713	03A	101	2-E06
95 18 739	03A	065	2-C18
95 19 026	03A	103	2-E08
95 19 034	03A	103	2-E08
95 19 133	03A	171	2-H04
95 19 133	03A	175	2-H08
95 19 133	03A	179	2-H12
95 19 133	03A	183	2-H16
95 19 133	03A	187	2-H20
95 19 372	03A	103	2-E08
95 19 398	03B	009	3-A10
95 19 398	03B	031	3-B08
95 19 398	03B	053	3-C06
95 19 398	03B	099	3-E04
95 19 398	03B	109	3-E14
95 19 398	03B	119	3-E24
95 19 406	03B	009	3-A10
95 19 414	03B	017	3-A18
95 19 414	03B	039	3-B16
95 19 422	03B	011	3-A12
95 19 422	03B	033	3-B10
95 19 570	03A	157	2-G14
95 19 604	03A	081	2-D10
95 19 612	03A	081	2-D10
95 19 638	03A	081	2-D10
95 19 646	03A	081	2-D10
95 19 679	03B	013	3-A14
95 19 737	03A	157	2-G14
95 19 737	06	011	4-A12
95 19 737	08A	075	4-F04
95 19 745	03A	105	2-E10
95 19 919	03A	105	2-E10
95 19 927	03A	105	2-E10
95 21 352	03A	037	2-B14
95 21 360	03A	037	2-B14
95 21 774	03A	037	2-B14
95 21 782	03A	037	2-B14
95 21 816	03A	037	2-B14
95 21 824	03A	037	2-B14
95 21 857	03A	057	2-C10
95 21 881	03A	033	2-B10
95 21 956	03A	033	2-B10
95 21 964	03A	033	2-B10
95 21 972	03B	103	3-E08
95 21 972	03B	111	3-E16
95 21 972	03B	123	3-F04
95 21 972	03B	133	3-F14

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 21 980	03B	103	3-E08
95 21 980	03B	113	3-E18
95 21 980	03B	123	3-F04
95 21 980	03B	133	3-F14
95 22 061	03A	171	2-H04
95 22 061	03A	173	2-H06
95 22 061	03A	175	2-H08
95 22 061	03A	179	2-H12
95 22 061	03A	183	2-H16
95 22 061	03A	187	2-H20
95 22 079	03A	077	2-D06
95 22 616	03A	049	2-C02
95 22 822	03A	105	2-E10
95 23 119	03A	107	2-E12
95 23 119	03A	117	2-E22
95 23 119	03A	127	2-F08
95 23 119	03A	137	2-F18
95 23 119	03A	147	2-G04
95 23 184	03A	011	2-A12
95 23 184	03A	017	2-A18
95 23 213	03A	161	2-G18
95 23 465	03A	157	2-G14
95 23 622	03A	157	2-G14
95 23 747	03A	077	2-D06
95 23 762	03A	077	2-D06
95 23 788	03A	077	2-D06
95 23 804	03A	079	2-D08
95 24 208	03A	009	2-A10
95 24 570	03A	049	2-C02
95 24 596	03A	067	2-C20
95 25 015	03A	033	2-B10
95 25 031	03B	023	3-A24
95 25 031	03B	043	3-B20
95 25 031	03B	065	3-C18
95 25 031	03B	089	3-D18
95 25 031	03B	091	3-D20
95 25 106	03B	023	3-A24
95 25 106	03B	045	3-B22
95 25 106	03B	067	3-C20
95 25 106	03B	091	3-D20
95 25 114	03B	023	3-A24
95 25 114	03B	045	3-B22
95 25 114	03B	067	3-C20
95 25 114	03B	091	3-D20
95 25 122	03A	165	2-G22
95 25 221	03A	155	2-G12
95 25 221	08A	013	4-C14
95 25 254	03A	033	2-B10
95 25 254	03A	037	2-B14
95 25 262	03A	033	2-B10
95 25 262	03A	037	2-B14
95 25 312	03A	033	2-B10
95 25 320	03A	033	2-B10
95 25 494	03A	093	2-D22
95 25 767	03A	191	2-H24
95 25 809	03B	009	3-A10
95 25 817	03B	009	3-A10
95 25 817	03B	103	3-E08
95 25 817	03B	111	3-E16
95 25 817	03B	123	3-F04

Part No / Art nr	Gr / Gr	Page / Sida	Grid / Koord
95 25 817	03B	133	3-F14
95 26 260	03A	037	2-B14
95 26 310	03A	195	2-I04
95 26 328	03A	167	2-G24
95 26 344	03A	033	2-B10
95 26 351	03A	033	2-B10
95 26 401	03B	021	3-A22
95 26 401	03B	043	3-B20
95 26 401	03B	065	3-C18
95 26 401	03B	087	3-D16
95 26 401	03B	099	3-E04
95 26 401	03B	109	3-E14
95 26 401	03B	119	3-E24
95 26 401	03B	129	3-F10
95 26 484	03A	037	2-B14
95 26 567	03A	049	2-C02
95 26 567	03A	051	2-C04
95 26 773	03A	165	2-G22
95 27 755	03B	023	3-A24
95 27 755	03B	045	3-B22
95 27 755	03B	067	3-C20
95 27 755	03B	091	3-D20
95 27 763	03B	023	3-A24
95 27 763	03B	045	3-B22
95 27 763	03B	067	3-C20
95 27 763	03B	091	3-D20
95 27 771	03B	023	3-A24
95 27 771	03B	045	3-B22
95 27 771	03B	067	3-C20
95 27 771	03B	091	3-D20
95 27 771	03B	101	3-E06
95 27 771	03B	111	3-E16
95 27 771	03B	123	3-F04
95 27 771	03B	131	3-F12
95 27 789	03A	167	2-G24
95 27 904	03A	079	2-D08
95 27 904	03A	195	2-I04
95 28 019	03A	155	2-G12
95 28 159	03A	097	2-E02
95 28 167	03A	097	2-E02
95 28 720	03A	045	2-B22
95 28 910	02	057	1-E10
95 29 256	03A	093	2-D22
95 29 405	03A	045	2-B22
95 29 512	03B	021	3-A22
95 29 512	03B	043	3-B20
95 29 512	03B	065	3-C18
95 29 512	03B	087	3-D16
95 29 637	03A	081	2-D10
95 29 637	03A	085	2-D14
95 29 660	03A	157	2-G14
95 29 793	03A	033	2-B10
95 29 793	03A	197	2-I06
95 29 827	03A	045	2-B22
95 29 835	03A	045	2-B22
95 29 843	03A	045	2-B22
95 29 868	03A	045	2-B22
95 29 876	03A	045	2-B22
95 29 876	03A	047	2-B24
95 29 884	03A	045	2-B22

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-B23 *Numerical register* *Nummerregister*

Part No Art nr	Gr	Page Sida	Grid Koord
95 29 900	03A	045	2-B22
95 40 774	08B	027	5-B04
95 42 309	08B	149	5-G06
95 42 317	08B	149	5-G06
95 44 818	08B	191	5-H24
95 44 834	08B	025	5-B02
95 45 104	08B	143	5-F24
95 45 104	08B	153	5-G10
95 45 229	08B	013	5-A14
95 45 435	03A	057	2-C10
95 45 534	08B	007	5-A08
95 45 898	08B	069	5-C22
95 45 898	08B	081	5-D10
95 45 898	08B	091	5-D20
95 45 898	08B	099	5-E04
95 45 898	08B	107	5-E12
95 45 906	08B	069	5-C22
95 45 906	08B	081	5-D10
95 45 906	08B	091	5-D20
95 45 906	08B	099	5-E04
95 45 906	08B	107	5-E12
95 45 906	08B	133	5-F14
95 46 763	08B	015	5-A16
95 46 789	08B	015	5-A16
95 46 847	08B	015	5-A16
95 46 946	08B	141	5-F22
95 46 961	08D	015	5-K16
95 47 332	08B	195	5-I04
95 47 696	08B	191	5-H24
95 48 058	08B	191	5-H24
95 48 355	08B	181	5-H14
95 48 363	08D	005	5-K06
95 48 389	08B	133	5-F14
95 50 476	03A	093	2-D22
95 51 953	03A	055	2-C08
95 52 100	03A	065	2-C18
95 52 100	03A	101	2-E06
95 52 126	03B	103	3-E08
95 52 126	03B	113	3-E18
95 52 126	03B	123	3-F04
95 52 126	03B	133	3-F14
95 52 175	03B	103	3-E08
95 52 175	03B	113	3-E18
95 52 175	03B	123	3-F04
95 52 175	03B	133	3-F14
95 52 183	03B	009	3-A10
95 52 183	03B	031	3-B08
95 52 183	03B	053	3-C06
95 52 183	03B	075	3-D04
95 52 191	03B	009	3-A10
95 52 191	03B	031	3-B08
95 52 191	03B	053	3-C06
95 52 191	03B	075	3-D04
95 52 191	03B	103	3-E08
95 52 191	03B	113	3-E18
95 52 191	03B	123	3-F04
95 52 191	03B	133	3-F14
95 53 512	03A	055	2-C08
95 55 194	03A	081	2-D10
95 55 913	03A	155	2-G12
95 56 705	03A	033	2-B10
95 56 705	03A	035	2-B12
95 56 986	03A	041	2-B18
95 56 994	03A	041	2-B18
95 56 994	03A	043	2-B20
95 58 149	03A	067	2-C20
95 58 149	03A	069	2-C22
95 58 149	03A	195	2-I04
95 59 469	03B	101	3-E06
95 59 998	03A	083	2-D12
95 60 004	03A	083	2-D12
95 62 752	03A	011	2-A12
95 63 099	03A	173	2-H06
95 63 099	03A	199	2-I08
95 63 313	03A	171	2-H04
95 63 313	03A	175	2-H08
95 63 313	03A	179	2-H12
95 63 313	03A	183	2-H16
95 63 313	03A	187	2-H20
95 63 560	03A	165	2-G22
95 63 677	03A	057	2-C10
95 63 685	03A	057	2-C10
95 64 204	03A	159	2-G16
95 64 253	03A	057	2-C10
95 64 261	03A	057	2-C10
95 64 345	08A	045	4-D22
95 64 352	03A	033	2-B10
95 64 394	03A	077	2-D06
95 64 477	03A	093	2-D22
95 64 881	03A	075	2-D04
95 65 003	08B	147	5-G04
95 65 011	08B	147	5-G04
95 65 045	03B	025	3-B02
95 65 045	03B	045	3-B22
95 65 045	03B	069	3-C22
95 65 045	03B	093	3-D22
95 65 136	03A	093	2-D22
95 65 144	03A	107	2-E12
95 65 144	03A	117	2-E22
95 65 144	03A	127	2-F08
95 65 144	03A	139	2-F20
95 65 144	03A	147	2-G04
95 65 417	02	055	1-E08
95 65 417	02	057	1-E10
95 65 417	02	059	1-E12
95 65 417	03A	161	2-G18
95 65 417	08A	005	4-C06
95 65 417	08C	023	5-J24
95 65 839	03A	101	2-E06
95 65 912	03A	063	2-C16
95 65 995	03A	101	2-E06
95 66 159	08A	055	4-E08
95 66 282	03B	023	3-A24
95 66 282	03B	043	3-B20
95 66 282	03B	067	3-C20
95 66 282	03B	091	3-D20
95 66 381	03A	081	2-D10
95 66 399	03A	081	2-D10
95 66 407	03A	081	2-D10
95 66 423	03A	081	2-D10
95 66 449	03A	081	2-D10
95 66 464	03A	081	2-D10
95 66 472	03A	081	2-D10
95 66 563	03A	093	2-D22
95 66 647	03A	173	2-H06
95 66 662	03A	033	2-B10
95 66 662	03A	197	2-I06
95 67 272	03A	115	2-E20
95 67 272	03A	123	2-F04
95 67 272	03A	135	2-F16
95 67 272	03A	145	2-G02
95 67 579	08D	015	5-K16
95 68 049	08D	015	5-K16
95 68 106	03A	161	2-G18
95 68 122	03A	077	2-D06
95 68 775	03B	007	3-A08
95 68 775	03B	019	3-A20
95 68 999	03A	067	2-C20
95 69 005	03A	067	2-C20
95 69 013	03A	071	2-C24
95 69 740	03A	115	2-E20
95 69 740	03A	117	2-E22
95 69 740	03A	123	2-F04
95 69 740	03A	127	2-F08
95 69 740	03A	135	2-F16
95 69 740	03A	139	2-F20
95 69 740	03A	145	2-G02
95 69 740	03A	147	2-G04
95 69 740	03A	153	2-G10
95 69 781	03A	087	2-D16
95 69 781	03A	199	2-I08
95 69 948	03A	059	2-C12
95 69 955	08B	135	5-F16
95 69 955	08B	147	5-G04
95 69 963	03A	033	2-B10
95 69 963	03A	197	2-I06
95 69 997	03A	101	2-E06
95 69 997	03B	005	3-A06
95 69 997	03B	027	3-B04
95 69 997	03B	049	3-C02
95 69 997	03B	071	3-C24
95 71 019	08B	023	5-A24
95 71 027	08B	195	5-I04
95 71 035	08B	197	5-I06
95 71 084	08B	197	5-I06
95 71 159	03A	099	2-E04
95 71 209	08B	015	5-A16
95 71 563	08B	183	5-H16
95 71 621	03A	099	2-E04
95 72 447	08B	173	5-H06
95 72 454	08B	173	5-H06
95 72 454	08B	177	5-H10
95 72 470	08B	173	5-H06
95 72 470	08B	177	5-H10
95 72 835	08B	175	5-H08
95 72 835	08B	179	5-H12
95 73 809	08B	175	5-H08
95 73 809	08B	179	5-H12
95 73 817	08B	175	5-H08
95 73 817	08B	179	5-H12
95 74 302	08A	049	4-E02
95 74 724	08B	013	5-A14
95 75 622	08B	027	5-B04
95 75 846	08B	025	5-B02
95 78 238	08B	189	5-H22
95 78 246	08B	189	5-H22
95 78 386	08A	045	4-D22
95 78 386	08A	047	4-D24
95 78 428	08B	185	5-H18
95 78 436	08B	185	5-H18
95 78 444	08B	185	5-H18
95 78 618	03A	059	2-C12
95 78 790	08A	045	4-D22
95 78 808	08A	045	4-D22
95 78 816	08A	047	4-D24
95 78 824	08A	047	4-D24
95 79 244	08B	157	5-G14
95 79 244	08B	175	5-H08
95 79 293	08B	139	5-F20
95 79 293	08B	149	5-G06
95 79 715	08B	149	5-G06
95 79 764	08B	153	5-G10
95 79 772	08B	153	5-G10
95 79 780	08B	153	5-G10
95 80 275	08B	189	5-H22
95 80 358	08B	175	5-H08
95 80 820	08B	115	5-E20
95 80 820	08B	119	5-E24
95 80 838	08B	115	5-E20
95 80 838	08B	119	5-E24
95 80 846	08B	115	5-E20
95 80 846	08B	117	5-E22
95 80 846	08B	119	5-E24
95 80 846	08B	121	5-F02
95 80 911	08B	115	5-E20
95 80 911	08B	119	5-E24
95 81 893	08B	019	5-A20
95 82 057	08B	067	5-C20
95 82 057	08B	079	5-D08
95 82 065	08B	067	5-C20
95 82 065	08B	079	5-D08
95 82 156	08B	067	5-C20
95 82 156	08B	079	5-D08
95 82 164	08B	067	5-C20
95 82 164	08B	079	5-D08
95 82 297	08B	067	5-C20
95 82 297	08B	073	5-D02
95 82 297	08B	079	5-D08
95 82 297	08B	085	5-D14
95 82 305	08B	067	5-C20
95 82 305	08B	073	5-D02
95 82 305	08B	079	5-D08
95 82 305	08B	087	5-D16
95 82 313	08B	067	5-C20
95 82 313	08B	073	5-D02
95 82 313	08B	079	5-D08
95 82 313	08B	085	5-D14
95 82 354	08B	073	5-D02
95 82 354	08B	085	5-D14
95 82 362	08B	073	5-D02
95 82 362	08B	085	5-D14
95 82 453	08B	073	5-D02
95 82 453	08B	085	5-D14
95 82 461	08B	073	5-D02
95 82 461	08B	085	5-D14
95 82 651	08B	009	5-A10
95 82 651	08B	017	5-A18
95 83 196	08B	189	5-H22
95 83 576	08B	189	5-H22
95 83 790	08B	181	5-H14
95 83 790	08B	189	5-H22
95 84 640	08B	155	5-G12
95 84 665	08B	155	5-G12
95 84 715	08B	135	5-F16
95 84 715	08B	137	5-F18
95 84 715	08B	145	5-G02
95 84 715	08B	147	5-G04
95 84 715	08B	195	5-I04
95 84 723	08B	135	5-F16
95 84 723	08B	145	5-G02
95 84 723	08B	195	5-I04
95 84 749	08B	155	5-G12
95 84 749	08B	173	5-H06
95 84 764	08B	157	5-G14
95 84 764	08B	175	5-H08
95 84 772	08B	157	5-G14
95 84 772	08B	175	5-H08
95 84 871	08B	189	5-H22
95 85 514	08B	015	5-A16
95 85 522	08B	015	5-A16
95 85 613	08B	139	5-F20
95 85 829	08B	015	5-A16
95 85 985	08B	015	5-A16
95 86 132	08B	153	5-G10
95 86 157	08B	153	5-G10
95 86 165	08B	153	5-G10
95 86 173	08B	153	5-G10
95 86 181	08B	153	5-G10
95 86 207	08B	153	5-G10
95 86 249	08B	139	5-F20
95 86 371	08B	133	5-F14
95 86 827	08B	191	5-H24
95 86 900	06	011	4-A12
95 86 918	06	011	4-A12
95 86 967	08B	139	5-F20
95 86 975	08B	139	5-F20
95 87 171	06	011	4-A12
95 89 045	08B	141	5-F22
95 89 664	08B	035	5-B12
95 89 672	08B	035	5-B12
95 89 680	08B	035	5-B12
95 89 680	08B	043	5-B20
95 90 043	08B	035	5-B12
95 90 050	08B	035	5-B12
95 91 405	08B	185	5-H18
95 91 637	08B	113	5-E18
95 91 637	08B	189	5-H22
95 91 793	08B	173	5-H06
95 91 868	08A	083	4-F12
95 91 892	08B	189	5-H22
95 92 098	03A	057	2-C10
95 92 403	08B	145	5-G02
95 92 452	08B	145	5-G02
95 92 700	08B	147	5-G04
95 92 908	08B	019	5-A20
95 92 916	08B	021	5-A22
95 93 161	03A	101	2-E06
95 93 245	08B	135	5-F16
95 93 245	08B	145	5-G02
95 93 245	08B	195	5-I04
95 93 534	08B	181	5-H14
95 93 948	08B	157	5-G14
95 93 948	08B	163	5-G20
95 93 948	08B	169	5-H02
95 93 948	08B	175	5-H08
95 93 948	08B	179	5-H12
95 94 508	08B	015	5-A16
96 17 325	08B	141	5-F22
96 17 325	08B	149	5-G06
96 17 333	08B	141	5-F22
96 17 333	08B	149	5-G06
96 17 846	08B	193	5-I02
96 17 853	08B	193	5-I02
96 18 232	08B	147	5-G04
96 20 105	08C	011	5-J12
96 21 897	08C	005	5-J06
96 22 325	08C	011	5-J12
96 22 390	08C	005	5-J06
96 22 432	08C	007	5-J08
96 22 432	08C	009	5-J10
96 22 572	08C	019	5-J20
96 22 614	08C	007	5-J08
96 22 614	08C	009	5-J10
96 22 655	08C	007	5-J08
96 22 655	08C	009	5-J10
96 22 697	08C	007	5-J08
96 22 697	08C	009	5-J10
96 22 812	08C	009	5-J10
96 23 315	08C	009	5-J10
96 23 455	08C	007	5-J08
96 23 570	08C	007	5-J08
96 23 737	08C	005	5-J06
96 23 745	08C	005	5-J06
96 23 935	08C	009	5-J10
96 24 305	08C	007	5-J08
96 24 305	08C	009	5-J10
96 24 321	08C	007	5-J08
96 24 321	08C	009	5-J10
96 24 347	08C	007	5-J08
96 24 347	08C	009	5-J10
96 24 578	08C	007	5-J08
96 24 578	08C	009	5-J10
96 24 867	08C	019	5-J20
96 25 120	08C	007	5-J08
96 25 120	08C	009	5-J10
96 25 138	08C	007	5-J08
96 25 138	08C	009	5-J10
96 25 146	08C	007	5-J08
96 25 245	08C	005	5-J06
96 25 252	08C	005	5-J06
96 25 351	08C	005	5-J06
96 25 468	08C	007	5-J08
96 25 468	08C	009	5-J10
96 25 575	08C	005	5-J06
96 25 633	08C	023	5-J24
96 25 831	08C	007	5-J08
96 25 831	08C	009	5-J10
96 25 955	08C	007	5-J08
96 25 955	08C	009	5-J10
96 25 989	08C	007	5-J08
96 25 989	08C	009	5-J10
96 26 300	08C	007	5-J08
96 26 300	08C	009	5-J10
96 26 318	08C	007	5-J08
96 26 318	08C	009	5-J10
96 26 383	08C	005	5-J06
96 27 266	02	127	1-H08
96 27 266	08C	023	5-J24
96 27 365	08C	011	5-J12
96 27 407	08C	007	5-J08
96 27 407	08C	009	5-J10
96 27 415	08C	007	5-J08
96 27 415	08C	009	5-J10
96 27 498	08C	011	5-J12
96 27 506	08C	011	5-J12
96 27 514	08C	011	5-J12
96 27 522	08C	011	5-J12
96 27 746	08A	017	4-C18
96 28 272	08C	007	5-J08
96 28 272	08C	009	5-J10
96 28 413	08C	013	5-J14
96 28 447	08C	013	5-J14
96 28 454	08C	013	5-J14
96 28 462	08C	013	5-J14
96 28 512	08C	013	5-J14
96 28 587	08C	007	5-J08
96 28 5[illegible]	08C	009	5-J10
96 28 8[illegible]	08A	023	4-C24
96 28 850	08A	023	4-C24
96 28 868	08A	023	4-C24
96 28 876	08A	023	4-C24
96 28 884	08A	023	4-C24
96 28 967	08C	011	5-J12
96 29 114	08C	011	5-J12
96 29 122	08C	011	5-J12
96 29 411	08C	009	5-J10
96 30 021	08A	017	4-C18
96 30 039	08C	007	5-J08
96 30 138	08C	011	5-J12
96 30 252	03A	091	2-D20
96 30 336	08C	011	5-J12
96 30 526	08A	025	4-D02
96 30 674	08A	017	4-C18
96 30 740	03A	091	2-D20
96 31 235	08C	005	5-J06
96 31 367	08C	023	5-J24
96 31 490	08C	007	5-J08
96 31 490	08C	009	5-J10
96 31 599	08C	005	5-J06
96 53 502	08A	007	4-C08
96 53 502	08B	181	5-H14
96 53 502	08B	189	5-H22
96 56 901	03A	081	2-D10
96 57 123	08B	181	5-H14
96 58 584	08B	139	5-F20
96 58 592	08B	139	5-F20
96 58 972	08A	085	4-F14
96 58 980	08A	085	4-F14
96 59 012	08B	139	5-F20
96 59 020	08B	139	5-F20
96 59 467	08B	025	5-B02
96 59 764	08B	013	5-A14
96 60 077	08B	067	5-C20
96 60 077	08B	079	5-D08
96 60 077	08B	091	5-D20
96 60 077	08B	099	5-E04
96 60 077	08B	105	5-E10
96 60 143	08B	067	5-C20
96 60 143	08B	073	5-D02
96 60 143	08B	079	5-D08
96 60 143	08B	087	5-D16
96 60 143	08B	091	5-D20
96 60 143	08B	095	5-D24
96 60 143	08B	099	5-E04
96 60 143	08B	103	5-E08
96 60 143	08B	105	5-E10
96 60 143	08B	111	5-E16
96 60 176	03A	057	2-C10
96 60 820	08B	073	5-D02
96 60 820	08B	087	5-D16
96 60 820	08B	095	5-D24
96 60 820	08B	103	5-E08
96 60 820	08B	111	5-E16
96 60 838	08B	067	5-C20
96 60 838	08B	079	5-D08
96 60 838	08B	089	5-D18
96 60 838	08B	097	5-E02
96 60 838	08B	105	5-E10
96 60 846	08B	073	5-D02
96 60 846	08B	085	5-D14
96 60 853	08B	141	5-F22
96 60 861	08B	141	5-F22
96 60 986	08B	067	5-C20
96 60 986	08B	079	5-D08
96 60 986	08B	089	5-D18
96 60 986	08B	097	5-E02
96 60 986	08B	105	5-E10
96 60 994	08B	073	5-D02
96 60 994	08B	085	5-D14
96 61 208	08A	081	4-F10
96 61 208	08A	083	4-F12
96 61 240	08A	081	4-F10
96 61 257	08A	081	4-F10
96 61 265	08A	083	4-F12
96 61 307	08A	081	4-F10
96 61 323	08A	081	4-F10
96 61 331	08A	081	4-F10
96 61 364	08A	081	4-F10
96 61 380	08A	081	4-F10

6-B24 *Numerical register* *Nummerregister*

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-C01 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
96 61 448	08A	085	4-F14
96 61 455	08A	085	4-F14
96 63 022	08B	009	5-A10
96 63 030	08B	009	5-A10
96 63 048	08B	019	5-A20
96 63 055	08B	019	5-A20
96 63 345	08B	115	5-E20
96 63 345	08B	119	5-E24
96 63 345	08B	123	5-F04
96 63 345	08B	125	5-F06
96 63 345	08B	129	5-F10
96 63 352	08B	115	5-E20
96 63 352	08B	119	5-E24
96 63 352	08B	123	5-F04
96 63 352	08B	125	5-F06
96 63 352	08B	129	5-F10
96 63 402	08B	155	5-G12
96 63 402	08B	161	5-G18
96 63 402	08B	167	5-G24
96 63 410	08B	155	5-G12
96 63 410	08B	161	5-G18
96 63 410	08B	167	5-G24
96 63 907	08B	133	5-F14
96 64 129	08B	025	5-B02
96 64 137	08B	025	5-B02
96 64 145	08B	025	5-B02
96 68 153	08A	063	4-E16
96 68 153	08A	067	4-E20
96 68 153	08A	071	4-E24
96 68 153	08A	077	4-F06
96 68 153	08B	113	5-E18
96 68 153	08B	115	5-E20
96 68 153	08B	117	5-E22
96 68 153	08B	119	5-E24
96 68 153	08B	121	5-F02
96 68 153	08B	123	5-F04
96 68 153	08B	125	5-F06
96 68 153	08B	129	5-F10
96 70 548	08A	053	4-E06
96 71 033	08B	069	5-C22
96 71 033	08B	081	5-D10
96 71 033	08B	091	5-D20
96 71 033	08B	099	5-E04
96 71 033	08B	107	5-E12
96 71 041	08B	135	5-F16
96 71 041	08B	145	5-G02
96 71 041	08B	195	5-I04
96 71 355	08B	009	5-A10
96 71 363	08B	009	5-A10
96 71 389	08B	069	5-C22
96 71 389	08B	073	5-D02
96 71 389	08B	079	5-D08
96 71 389	08B	087	5-D16
96 71 389	08B	089	5-D18
96 71 389	08B	093	5-D22
96 71 389	08B	097	5-E02
96 71 389	08B	101	5-E06
96 71 389	08B	105	5-E10
96 71 389	08B	109	5-E14
96 71 751	08B	135	5-F16
96 71 751	08B	145	5-G02
96 71 751	08B	195	5-I04
96 71 835	08B	141	5-F22
96 71 835	08B	149	5-G06
96 71 918	08B	023	5-A24
96 71 926	08A	085	4-F14
96 71 934	08A	085	4-F14
96 72 254	08C	011	5-J12
96 72 262	08B	183	5-H16
96 72 569	08B	191	5-H24
96 72 650	08B	157	5-G14
96 72 650	08B	163	5-G20
96 72 650	08B	169	5-H02
96 72 650	08B	175	5-H08
96 72 650	08B	179	5-H12
96 72 791	08B	191	5-H24
96 72 908	08B	023	5-A24
96 73 146	08B	139	5-F20
96 73 146	08B	149	5-G06
96 73 179	08B	139	5-F20
96 73 385	08B	191	5-H24
96 73 435	08B	139	5-F20
96 73 435	08B	145	5-G02
96 73 831	08B	155	5-G12
96 73 831	08B	173	5-H06
96 74 896	08B	189	5-H22
96 75 059	08B	179	5-H12
96 75 174	08B	173	5-H06
96 76 057	08B	023	5-A24
96 76 305	08B	009	5-A10
96 76 305	08B	017	5-A18
96 76 818	08B	135	5-F16
96 76 818	08B	145	5-G02
96 76 818	08B	195	5-I04
96 77 014	08B	141	5-F22
96 77 014	08B	149	5-G06
96 77 154	08B	023	5-A24
96 77 162	08B	023	5-A24
96 78 434	08B	139	5-F20
96 78 442	08B	009	5-A10
96 78 533	08B	009	5-A10
96 78 541	08B	013	5-A14
96 78 731	08B	023	5-A24
96 78 996	08B	073	5-D02
96 78 996	08B	087	5-D16
96 78 996	08B	095	5-D24
96 78 996	08B	103	5-E08
96 78 996	08B	111	5-E16
96 79 937	08B	009	5-A10
96 90 264	08B	113	5-E18
96 90 629	08B	115	5-E20
96 90 629	08B	119	5-E24
96 90 629	08B	123	5-F04
96 90 629	08B	125	5-F05
96 90 629	08B	129	5-F10
96 90 728	08B	115	5-E20
96 90 728	08B	119	5-E24
96 90 777	08B	115	5-E20
96 90 777	08B	119	5-E24
96 90 777	08B	123	5-F04
96 90 777	08B	125	5-F06
96 90 777	08B	129	5-F10
96 90 906	08B	135	5-F16
96 90 906	08B	145	5-G02
96 90 906	08B	195	5-I04
96 93 094	08B	155	5-G12
96 93 094	08B	173	5-H06
96 93 094	08B	195	5-I04
96 93 177	08B	175	5-H08
96 94 001	08B	189	5-H22
96 94 019	08B	189	5-H22
96 94 472	08B	023	5-A24
96 94 951	08B	191	5-H24
96 94 969	08B	135	5-F16
96 94 969	08B	145	5-G02
96 94 969	08B	195	5-I04
96 95 081	08B	067	5-C20
96 95 081	08B	073	5-D02
96 95 081	08B	079	5-D08
96 95 081	08B	085	5-D14
96 95 081	08B	089	5-D18
96 95 081	08B	093	5-D22
96 95 081	08B	097	5-E02
96 95 081	08B	101	5-E06
96 95 081	08B	105	5-E10
96 95 081	08B	109	5-E14
96 95 321	08B	153	5-G10
96 95 354	08B	153	5-G10
96 95 768	08B	149	5-G06
96 95 909	08B	145	5-G02
96 95 917	08B	145	5-G02
96 96 048	08B	155	5-G12
96 96 048	08B	161	5-G18
96 96 691	08B	157	5-G14
96 96 691	08B	163	5-G20
96 96 691	08B	175	5-H08
96 96 766	08B	155	5-G12
96 96 766	08B	161	5-G18
96 97 459	08B	155	5-G12
96 97 459	08B	161	5-G18
96 97 525	08B	139	5-F20
96 97 525	08B	149	5-G06
96 97 616	08B	183	5-H16
96 97 939	08B	135	5-F16
96 97 939	08B	145	5-G02
96 97 939	08B	195	5-I04
96 98 077	08A	057	4-E10
96 98 168	08A	107	4-G12
96 98 176	08A	107	4-G12
96 98 184	08A	109	4-G14
96 98 309	08B	015	5-A16
96 98 309	08B	195	5-I04
96 98 341	08A	107	4-G12
96 98 358	08A	107	4-G12
96 98 515	08A	033	4-D10
96 98 515	08A	115	4-G20
96 98 523	08A	033	4-D10
96 98 523	08A	115	4-G20
96 99 000	08B	175	5-H08
96 99 026	08B	175	5-H08
96 99 034	08B	157	5-G14
96 99 034	08B	163	5-G20
96 99 042	08B	157	5-G14
96 99 059	08B	157	5-G14
96 99 067	08B	157	5-G14
96 99 067	08B	163	5-G20
96 99 075	08B	157	5-G14
96 99 083	08B	157	5-G14
96 99 091	08B	173	5-H06
96 99 117	08B	173	5-H06
96 99 125	08B	155	5-G12
96 99 125	08B	161	5-G18
96 99 133	08B	155	5-G12
96 99 141	08B	155	5-G12
96 99 158	08B	155	5-G12
96 99 158	08B	161	5-G18
96 99 166	08B	155	5-G12
96 99 174	08B	155	5-G12
96 99 182	08B	159	5-G16
96 99 182	08B	163	5-G20
96 99 190	08B	159	5-G16
96 99 208	08B	175	5-H08
96 99 216	08B	175	5-H08
97 14 817	08B	013	5-A14
97 21 481	08B	137	5-F18
97 21 481	08B	147	5-G04
97 21 481	08B	195	5-I04
97 21 499	08B	135	5-F16
97 21 499	08B	137	5-F18
97 21 499	08B	145	5-G02
97 21 499	08B	147	5-G04
97 21 499	08B	155	5-G12
97 21 499	08B	157	5-G14
97 21 499	08B	173	5-H06
97 21 499	08B	175	5-H08
97 21 499	08B	195	5-I04
97 21 598	08B	157	5-G14
97 21 598	08B	175	5-H08
97 46 264	08A	109	4-G14
97 46 314	08A	113	4-G18
97 46 397	08A	057	4-E10
97 46 405	08A	057	4-E10
97 46 454	08A	057	4-E10
97 46 603	08A	057	4-E10
97 46 652	08A	113	4-G18
97 46 835	08A	113	4-G18
97 46 850	08A	113	4-G18
97 46 884	08A	113	4-G18
97 46 892	08A	113	4-G18
97 46 900	08A	113	4-G18
97 46 926	08A	113	4-G18

6-C02 Numerical register — Nummerregister

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 46 934	08A	113	4-G18
97 46 959	08A	113	4-G18
97 46 967	08A	113	4-G18
97 46 975	08A	111	4-G16
97 46 975	08A	113	4-G18
97 50 753	08B	133	5-F14
97 51 074	08B	019	5-A20
97 51 314	08B	157	5-G14
97 51 314	08B	175	5-H08
97 51 322	08B	175	5-H08
97 52 379	08B	173	5-H06
97 52 395	08B	173	5-H06
97 53 724	08B	187	5-H20
97 54 755	08A	045	4-D22
97 54 755	08A	047	4-D24
97 54 763	08A	045	4-D22
97 54 763	08A	047	4-D24
97 55 117	08B	009	5-A10
97 55 125	08B	009	5-A10
97 55 216	08B	013	5-A14
97 55 257	08B	015	5-A16
97 55 935	08B	157	5-G14
97 55 935	08B	163	5-G20
97 55 935	08B	169	5-H02
97 56 974	08B	133	5-F14
97 57 691	08B	025	5-B02
97 58 186	08A	045	4-D22
97 58 715	08B	141	5-F22
97 58 715	08B	149	5-G06
97 58 947	08B	139	5-F20
97 59 069	08B	139	5-F20
97 59 069	08B	149	5-G06
97 59 077	08B	139	5-F20
97 59 077	08B	149	5-G06
97 59 846	08B	005	5-A06
97 60 372	08B	013	5-A14
97 60 380	08B	013	5-A14
97 60 497	08B	023	5-A24
97 60 497	08B	027	5-B04
97 60 596	08B	019	5-A20
97 61 495	08B	157	5-G14
97 61 495	08B	175	5-H08
97 61 495	08B	195	5-I04
97 61 552	08B	013	5-A14
97 61 867	08B	173	5-H06
97 61 941	08B	009	5-A10
97 61 974	08B	159	5-G16
97 61 974	08B	163	5-G20
97 61 974	08B	169	5-H02
97 63 228	08B	019	5-A20
97 63 442	08B	025	5-B02
97 63 624	08B	141	5-F22
97 63 624	08B	151	5-G08
97 63 632	08B	141	5-F22
97 63 632	08B	151	5-G08
97 64 002	08B	023	5-A24
97 64 044	05	023	3-K24
97 64 200	08B	019	5-A20
97 64 457	08B	191	5-H24
97 64 762	08B	013	5-A14
97 74 183	08B	161	5-G18
97 74 217	08B	181	5-H14
97 74 282	08B	181	5-H14
97 74 290	08B	181	5-H14
97 74 456	08A	049	4-E02
97 75 230	0FB	181	5-H14
97 75 792	08B	025	5-B02
97 76 006	08B	197	5-I06
97 76 105	08A	045	4-D22
97 76 105	08A	047	4-D24
97 76 121	08A	045	4-D22
97 76 121	08A	047	4-D24
97 76 139	08A	045	4-D22
97 76 139	08A	047	4-D24
97 76 188	08A	045	4-D22
97 76 188	08A	047	4-D24
97 76 584	08A	085	4-F14
97 76 956	08B	023	5-A24
97 76 964	08B	023	5-A24
97 77 327	08B	139	5-F20
97 77 749	08B	181	5-H14
97 78 218	08B	013	5-A14
97 78 283	08B	019	5-A20
97 78 895	08B	141	5-F22
97 78 895	08B	149	5-G06
97 78 911	08B	019	5-A20
97 78 952	08A	041	4-D18
97 78 952	08A	043	4-D20
97 78 952	08B	155	5-G12
97 78 952	08B	161	5-G18
97 78 952	08B	167	5-G24
97 78 952	08B	173	5-H06
97 78 952	08B	177	5-H10
97 79 844	08B	073	5-D02
97 79 844	08B	087	5-D16
97 79 844	08B	095	5-D24
97 79 844	08B	103	5-E08
97 79 844	08B	109	5-E14
97 80 156	08B	067	5-C20
97 80 156	08B	073	5-D02
97 80 156	08B	079	5-D08
97 80 156	08B	085	5-D14
97 80 156	08B	089	5-D18
97 80 156	08B	095	5-D24
97 80 156	08B	097	5-E02
97 80 156	08B	103	5-E08
97 80 156	08B	105	5-E10
97 80 156	08B	109	5-E14
97 81 337	08B	157	5-G14
97 81 337	08B	163	5-G20
97 81 337	08B	169	5-H02
97 81 337	08B	175	5-H08
97 81 337	08B	179	5-H12
97 81 469	08B	155	5-G12
97 81 469	08B	157	5-G14
97 81 469	08B	161	5-G18
97 81 469	08B	163	5-G20
97 81 469	08B	173	5-H06
97 81 469	08B	175	5-H08
97 81 501	08B	019	5-A20
97 81 576	08B	155	5-G12
97 81 576	08B	161	5-G18
97 81 576	08B	167	5-G24
97 81 592	08B	135	5-F16
97 81 592	08B	145	5-G02
97 82 129	08B	157	5-G14
97 82 129	08B	175	5-H08
97 82 293	08B	187	5-H20
97 82 343	08B	015	5-A16
97 82 558	08B	195	5-I04
97 82 566	08A	045	4-D22
97 82 566	08A	047	4-D24
97 83 309	08B	163	5-G20
97 83 309	08B	169	5-H02
97 83 408	08B	195	5-I04
97 84 604	08B	155	5-G12
97 84 604	08B	161	5-G18
97 84 604	08B	167	5-G24
97 85 015	08B	141	5-F22
97 85 015	08B	151	5-G08
97 85 031	08B	133	5-F14
97 87 516	08B	155	5-G12
97 87 516	08B	161	5-G18
97 87 516	08B	167	5-G24
97 87 516	08B	177	5-H10
97 87 532	08B	155	5-G12
97 87 532	08B	173	5-H06
97 87 532	08B	195	5-I04
97 88 571	08B	023	5-A24
97 88 910	08B	157	5-G14
97 88 910	08B	175	5-H08
97 88 928	08B	157	5-G14
97 88 928	08B	175	5-H08
97 89 769	08B	159	5-G16
97 89 769	08B	163	5-G20
97 89 769	08B	169	5-H02
97 89 801	08B	163	5-G20
97 89 801	08B	169	5-H02
97 89 827	08B	167	5-G24
97 90 007	08B	019	5-A20
97 90 981	08B	181	5-H14
97 91 070	08B	191	5-H24
97 92 391	08B	143	5-F24
97 92 391	08B	153	5-G10
97 94 132	06	011	4-A12
97 94 132	08B	191	5-H24
97 94 264	08B	181	5-H14
97 94 686	08B	073	5-D02
97 94 686	08B	087	5-D16
97 94 686	08B	095	5-D24
97 94 686	08B	103	5-E08
97 94 686	08B	111	5-E16
97 95 196	08B	179	5-H12
97 95 212	08B	155	5-G12
97 95 220	08B	155	5-G12
97 95 709	08B	133	5-F14
97 95 717	08B	181	5-H14
97 95 816	08B	157	5-G14
97 95 832	08B	195	5-I04

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6 -C03 *Numerical register* *Nummerregister*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
97 95 857	08B	023	5-A24
97 96 616	08B	067	5-C20
97 96 616	08B	079	5-D08
97 96 616	08B	091	5-D20
97 96 616	08B	099	5-E04
97 96 616	08B	105	5-E10
97 96 723	08B	157	5-G14
97 96 848	08B	143	5-F24
97 96 848	08B	153	5-G10
97 96 939	08B	067	5-C20
97 96 939	08B	079	5-D08
97 96 939	08B	091	5-D20
97 96 939	08B	099	5-E04
97 96 939	08B	105	5-E10
97 97 044	08A	083	4-F12
97 97 051	08A	083	4-F12
97 97 051	08A	085	4-F14
97 97 069	08A	083	4-F12
97 97 069	08A	085	4-F14
97 97 077	08A	083	4-F12
97 97 101	08A	083	4-F12
97 97 119	08A	085	4-F14
97 97 200	08B	069	5-C22
97 97 200	08B	073	5-D02
97 97 200	08B	079	5-D08
97 97 200	08B	087	5-D16
97 97 200	08B	089	5-D18
97 97 200	08B	093	5-D22
97 97 200	08B	097	5-E02
97 97 200	08B	101	5-E06
97 97 200	08B	105	5-E10
97 97 200	08B	109	5-E14
97 98 208	08B	183	5-H16
97 98 216	08B	183	5-H16
97 98 281	08B	023	5-A24
97 99 057	08B	157	5-G14
97 99 057	08B	175	5-H08
97 99 354	03A	059	2-C12
98 28 641	08B	157	5-G14
98 28 641	08B	175	5-H08
98 28 658	08B	155	5-G12
98 28 658	08B	157	5-G14
98 28 658	08B	173	5-H06
98 28 658	08B	175	5-H08
98 35 737	08B	153	5-G10
98 49 498	08B	175	5-H08
98 49 514	02	133	1-H14
98 49 514	02	163	1-I20
98 49 514	03A	167	2-G24
98 49 514	03A	169	2-H02
98 49 514	08A	077	4-F06
98 49 514	08B	115	5-E20
98 49 514	08B	119	5-E24
98 49 514	08B	123	5-F04
98 49 514	08B	125	5-F06
98 49 514	08B	129	5-F10
98 51 619	08B	141	5-F22
98 64 349	08B	141	5-F22
98 64 349	08B	149	5-G06
98 92 654	08B	143	5-F24
98 92 720	08B	143	5-F24
98 92 738	08B	143	5-F24
98 93 009	08B	143	5-F24
98 93 017	08B	143	5-F24
98 93 033	08B	143	5-F24
98 94 973	08B	143	5-F24
98 95 699	08B	067	5-C20
98 95 699	08B	079	5-D08
98 95 699	08B	089	5-D18
98 95 699	08B	097	5-E02
98 95 699	08B	105	5-E10
98 95 970	08B	073	5-D02
98 95 970	08B	085	5-D14
98 95 970	08B	093	5-D22
98 95 970	08B	101	5-E06
98 95 970	08B	109	5-E14
98 96 994	08B	015	5-A16
98 97 901	08B	115	5-E20
98 97 901	08B	119	5-E24
98 97 901	08B	123	5-F04
98 97 901	08B	125	5-F06
98 97 901	08B	129	5-F10
98 97 919	08B	115	5-E20
98 97 919	08B	119	5-E24
98 97 919	08B	123	5-F04
98 97 927	08B	157	5-G14

6 -C04 *New articles* *Nya artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 74 957	08B	117	5-E22
42 74 957	08B	:21	5-F02
42 74 957	08B	123	5-F04
42 74 957	08B	125	5-F06
42 74 957	08B	129	5-F10
43 00 729	03A	029	2-B06
43 69 005	08B	185	5-H18
43 69 013	08B	185	5-H18
44 78 947	04	059	3-I12
44 85 041	08B	117	5-E22
44 85 041	08B	121	5-F02
44 85 041	08B	123	5-F04
44 85 041	08B	125	5-F06
44 85 041	08B	129	5-F10
44 85 074	08B	117	5-E22
44 85 074	08B	121	5-F02
44 85 074	08B	123	5-F04
44 85 074	08B	125	5-F06
44 85 074	08B	129	5-F10
44 85 108	08B	117	5-E22
44 85 108	08B	121	5-F02
44 85 108	08B	123	5-F04
44 85 108	08B	125	5-F06
44 85 108	08B	129	5-F10
45 03 983	02	029	1-D06
45 19 773	08B	021	5-A22
46 04 930	08B	121	5-F02
46 47 624	05	013	3-K14
46 85 897	08A	011	4-C12
46 89 949	08D	015	5-K16
47 26 659	02	165	1-I22
47 59 106	08C	017	5-J18
47 70 988	02	137	1-H18
47 70 996	03A	023	2-A24
47 75 185	04	043	3-H20
47 75 193	04	043	3-H20
47 76 266	04	013	3-G14
47 81 845	02	075	1-F04
47 81 852	02	075	1-F04
47 81 860	02	073	1-F02
47 81 878	02	073	1-F02
47 81 886	02	075	1-F04
47 81 894	02	073	1-F02
47 88 964	08B	125	5-F06
47 88 964	08B	129	5-F10
47 88 972	08B	125	5-F06
47 88 972	08B	129	5-F10
47 89 020	08B	125	5-F06
47 89 020	08B	129	5-F10
47 89 038	08B	125	5-F06
47 89 038	08B	129	5-F10
48 14 117	03A	139	2-F20
48 14 117	03A	147	2-G04
48 14 125	03A	141	2-F22
48 14 125	03A	149	2-G06
48 30 840	03A	053	2-C06
48 30 857	03A	053	2-C06
48 30 865	03A	053	2-C06
48 38 751	07	013	4-B14
48 39 031	07	011	4-B12
48 39 205	07	013	4-B14
48 67 032	08C	023	5-J24
48 68 659	08C	017	5-J18
48 68 675	08C	017	5-J18
48 68 709	08C	017	5-J18
48 68 717	08C	017	5-J18
48 76 611	02	125	1-H06
48 76 637	02	125	1-H06
48 76 645	02	125	1-H06
48 76 652	02	125	1-H06
49 00 650	08B	027	5-B04
49 00 668	08B	027	5-B04
49 00 676	08B	027	5-B04
49 00 684	08B	027	5-B04
49 01 104	06	021	4-A22
49 01 401	06	021	4-A22
49 01 419	06	019	4-A20
49 01 443	06	019	4-A20
49 01 476	06	019	4-A20
49 01 476	06	021	4-A22
49 06 822	07	011	4-B12
49 07 598	05	013	3-K14
49 08 448	07	011	4-B12
49 27 943	03A	167	2-G24
49 29 311	03A	077	2-D06
49 36 001	08B	185	5-H18
49 36 068	08B	187	5-H20
49 40 292	06	011	4-A12
49 42 413	03A	141	2-F22
49 42 421	03A	009	2-A10
49 42 504	03A	009	2-A10
49 42 678	03A	137	2-F18
49 42 686	03A	137	2-F18
49 42 686	03A	147	2-G04
49 42 694	03A	137	2-F18
49 42 702	03A	137	2-F18
49 42 710	03A	137	2-F18
49 42 710	03A	147	2-G04
49 42 728	03A	137	2-F18
49 42 736	03A	137	2-F18
49 42 736	03A	147	2-G04
49 61 157	08D	007	5-K08
49 61 165	08D	007	5-K08
49 61 173	08D	007	5-K08
49 61 777	08D	009	5-K10
49 61 918	08D	007	5-K08
50 00 526	08D	005	5-K06
50 10 061	06	021	4-A22
50 10 061	08D	013	5-K14
50 10 103	08D	011	5-K12
50 10 111	08D	011	5-K12
50 10 129	08D	017	5-K18
50 10 202	08D	011	5-K12
50 10 210	08D	011	5-K12
50 10 228	06	021	4-A22
50 10 236	06	009	4-A10
50 10 236	06	021	4-A22
50 11 465	08D	017	5-K18
50 11 762	06	009	4-A10
50 12 182	06	009	4-A10
50 12 232	08D	011	5-K12
50 12 240	08D	011	5-K12
50 13 313	06	009	4-A10
50 13 339	08B	015	5-A16
50 13 347	08B	015	5-A16
50 13 362	08B	017	5-A18
50 13 370	08B	015	5-A16
74 97 753	08A	111	4-G16
74 97 761	08A	111	4-G16
74 97 779	08A	111	4-G16
74 97 787	08A	111	4-G16
74 97 795	08A	111	4-G16
79 74 009	05	013	3-K14
85 49 545	03A	011	2-A12
85 49 545	03A	017	2-A18
87 46 489	04	005	3-G06
87 46 638	04	019	3-G20
87 46 786	04	005	3-G06
87 47 909	04	023	3-G24
87 47 925	04	023	3-G24
87 47 933	04	023	3-G24
89 94 212	06	005	4-A06
89 94 212	06	021	4-A22
91 75 464	02	067	1-E20
91 83 252	02	017	1-C18
91 83 260	02	017	1-C18
91 83 278	02	017	1-C18
91 83 294	02	019	1-C20
91 85 612	02	011	1-C12
91 87 451	02	019	1-C20
91 87 469	02	017	1-C18
91 87 477	02	017	1-C18
91 87 550	02	019	1-C20
91 87 568	02	019	1-C20

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02

6-C06 *Deleted parts* *Utgångna artiklar*

Part No Art nr	Gr Gr	Page Sida	Grid Koord
42 74 973			
42 74 981			
42 74 999			
44 85 017			
44 85 025			
44 85 033			
44 85 082			
44 85 116			
45 04 916			
46 04 955			
46 04 963			
46 04 971			
46 28 947			
47 70 251			
48 15 031			
48 15 049			
48 15 056			
48 15 064			
48 15 072			
48 15 080			
48 15 098			
48 15 106			
79 71 518			
84 67 409			
97 94 520			
97 96 327			

MASTER INDEX

0	General	1-A02
2	Engine	1-C02
3A	Electrical, general	2-A02
3B	Electrical, contact housing	3-A02
4	Transmission	3-G02
5	Brakes	3-K02
6	Front assembly, Steering	4-A02
7	Suspension, Wheels	4-B02
8A	Body, external	4-C02
8B	Body, internal	5-A02
8C	Body, heating and ventilation	5-J02
8D	Tools, Labels	5-K02
10	Numerical register	6-A02