


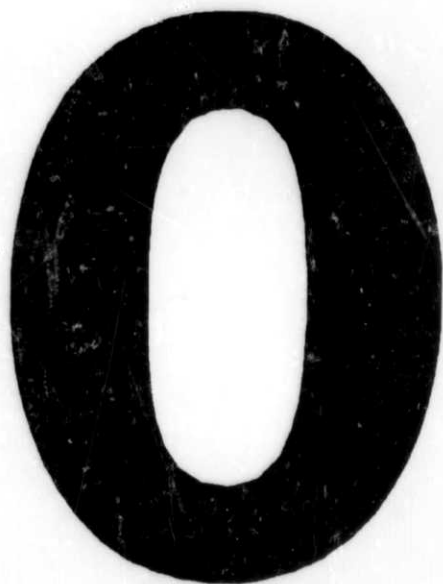

Allmänt
General
Allgemeines
Généralités
Generalidades

1-A02

SAAB 90

M 1985 – 1987

Reservdelskatalog
Parts catalogue
Ersatzteil-Katalog
Catalogue des pièces de rechange
Catalogo de piezas de recambio

Art. No. 661306

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 - A03

0	Allmänt General Allgemeines	Généralités Generalidades
1	Verktyg Tools Werkzeuge	Outils Herramientas
2	Motor Engine Motor	Moteur Motor
3	Elektriskt system, Instrument Electrical system, Instruments Elektrisches System, Instrumente	Équipement élect., Instruments Sistema electr., Instrumentos
4	Kraftöverföring Transmission Kraftübertragung	Transmission Transmisión
5	Bromsar Brakes Bremsen	Freins Frenos
6	Framvagn, Styrinrättning Front assembly, Steering Vorderwagen, Lenkung	Train-Avant, Direction Tren delantero, Dirección
7	Fjädringssystem, Hjul Suspension, Wheels Federung, Räder	Suspension, Roues Suspensión, Ruedas
8	Kaross Body Karosserie	Carrosserie Carrocería
9	Verktyg, Etiketter Tool, Labels Werkzeug, Etiketten	Outil, Etiquettes Herramient, Etiquetas
10	Nummerregister Numerical register Nummern-Verzeichnis	Index numérique Índice numérico

1-A04

Table of contents
Innehållsförteckning
Inhaltsverzeichnis
Table des matières
Sumario

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

GENERAL

Introduction	1-A05
Abbreviations	1-A07
Model identification	1-A09
Stock-keeping level	1-A16

ALLMÄNT

Inledning	1-A05
Förkortningar	1-A07
Modellidentifikation	1-A09
Lagerhållningsnivå	1-A17

ALLGEMEINES

Einleitung	1-A05
Abkürzungen	1-A07
Modellidentifikation	1-A09
Lagerhaltungsniveau	1-A18

GÉNÉRALITÉS

Introduction	1-A05
Abbreviations	1-A07
Identification du modèle	1-A09
Niveau de magasinage	1-A19

GENERALIDADES

Introducción	1-A05
Abreviaciones	1-A07
Identificación del modelo	1-A09
Nivel de almacenaje	1-A20

This Parts Catalogue is applicable to the 1985-1987 models of the Saab 90. It will be updated by new microfiches.

When ordering spare parts intended for specific cars, the chassis No. and/or the engine/transmission No. should be quoted.

The car model and colour/upholstery code should be quoted when ordering upholstery.

Denna reservdelskatalog för Saab 90 omfattar årsmodellerna 1985-1987. Den kommer att hållas aktuell genom att nya fiche ges ut. Vid beställning av reservdelar till viss bil skall alltid chassinummer och/eller motor- eller växellådsnummer anges. Vid beställning av klädsel skall även bilens typ samt färg- och kädseleknod anges.

Dieser Ersatzteil-Katalog gilt für Saab 90 Baujahr 1985-1987. Er wird durch Ausgabe von neuen Mikrofiches fortlaufend auf dem letzten Stand gehalten.

Bei der Bestellung von Ersatzteilen für ein bestimmtes Fahrzeug ist immer die Fahrgestell-Nr. und/oder die Motor-bzw. Getriebe-Nr. anzugeben. Bei Bestellung von Polsterbezügen und Innenverkleidung muß außerdem die Modellbezeichnung zusammen mit dem Lack- und Polstercode des Fahrzeugs angegeben werden.

Ce catalogue des pièces de rechange de la Saab 90 comprend les modèles des années 1985-1987. Il sera tenu au jour par la publication des nouvelles fiches.

Lors de la commande de pièces de rechange pour une voiture déterminée, il faut toujours indiquer le no. du châssis et/ou du moteur et/ou de la boîte de vitesses. Lors de la commande de garnitures intérieures, il faut, de plus, indiquer le type de la voiture et le code couleur des garnitures.

Este catálogo de piezas de recambio del Saab 90 comprende los modelos de los años 1985-1987, y será mantenido al corriente por la publicación de nuevas fichas.

Para encargar piezas destinadas a un coche determinado, hay que indicar siempre el núm. de chasis y/o el de motor y/o el de la caja de cambios. Para encargar tapicería, hay, además, que indicar el tipo del coche y la clave color de la tapicería.

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1-A07

Abbreviations
Förkortningar
Abkürzungen
Abbreviations
Abreviaciones

—1981	Up to and incl. 1981 model	T o m årsmodeil 1981	Bis Baujahr 1981	Jusqu au modèle de l'année 1981	Hasta el modelo del año 1981
1982—	As from 1982 model	F r o m årsmodeil 1982	Ab Baujahr 1982	A partir du modèle de l'année 1982	Desde el modelo del año 1982
5-Speed	Five-speed gearbox	Femväxlad växel-låda	5-Gang-Getriebe	Cinq vitesses	Cinco marchas
C	Carburetor	Förgasare	Vergaser	Carburateur	Carburador
Ch.—xxxxxx	Up to and including chassis number	T o m chassi-nummer	Bis einschl. Fahrgestell-Nr.	Jusqu au No. de châssis	Hasta el chasis número
Ch. xxxxxxx—	As from chassis number	F r o m chassi-nummer	Ab Fahrgestell-Nr.	A partir du No. de châssis	Desde el chasis número
EGR	Exhaust Gas Recirculation	Avgasrecirkulation	Abgasrückführung	Recirculation des gaz d'échappement	Recirculation de los gases de escape
ELCD	Evaporative Loss Control Device	Silutet bränslesystem	Geschlossenes Kraftstoffsystem	Système de carburant fermé	Sistema de combustible cerrado
Engine—xxx	Up to and including engine number	T o m motornummer	Bis einschl. Motor-Nr.	Jusqu'au No. de moteur	Hasta el motor número
Engine xxx—	As from engine number	F r o m motor-nummer	Ab Motor-Nr.	A partir du No. de moteur	Desde el motor número
Gearbox—xxx	Up to and including gearbox number	T o m växellåds-nummer	Bis einschl. Getriebe-Nr.	Jusqu au No. de boîte de vitesses	Hasta la caja de cambios número
Gearbox xxx—I	As from gearbox number	F r o m växellåds-nummer	Ab Getriebe-Nr.	A partir du No. de boîte de vitesses	Desde la caja de cambios número
	Fuel injection	Motor med bränsleinsprutning	Einspritzmotor	Moteur à injection	Motor de inyección
LH	Left-Hand	Vänster	Links	Côté gauche	Lado izquierdo
LHD	Left-Hand Drive	Vansterstyrning	Linksgesteuert	D. a G.	Volante a la izquierda
M	Manual transmission	Manuell växellåda	Schaltgetriebe	Boîte de vitesses manuelle	Caja de cambios manual
RH	Right-Hand	Höger	Rechts	Côté droit	Lado derecho
RHD	Right-Hand Drive	Högerstyrning	Rechtsgesteuert	D. a D.	Volante a la derecha
S	Sets	Sats	Sätze	Jeux	Juegos
SI	Service information	Service Information	Service Information	Service Information	Service information
2D	2 doors sedan	2 dörrsersion	2-türige Version	2 portes	2 puertas
4D	4 doors sedan	4 dörrsersion	4-türige Version	4 portes	4 puertas
SR	Sun Roof	Soltak	Schiebedach	Toit ouvrant	Techo corredizo
SR/L	Stock-keeping level	Lagerhållningsnivå		Niveau de magasinage	Nivel de almacenaje
T	Twin carburetors	Två förgasare	2-Vergaser	Carburateurs jumelés	Carburadores gemelos
X	Quantity as required	Antal efter behov	Anzahl nach Bedarf	Quantité d'après besoin	Cantidad según necesidad

1-A08

Abbreviations
Förkortningar
Abkürzungen
Abbreviations
Abreviaciones

AU	Australia	Australien	Australien	Australia
BE	Belgium	Belgien	Belgien	Belgica
CA	Canada	Canada	Canada	Canada
CH	Switzerland	Schweiz	Schweiz I	Suiza
CZ	Czechoslovakia	Tjeckoslovakien	Tschechoslowakei	Checoslovaquia
DK	Denmark	Danmark	Dänemark	Dinamarca
DT	Germany	Tyskland	Deutschland	Alemania
EU	Europe	Europa	Europa	Europa
FE	Far East	Fjärran Östern	Fernost	Extremo Oriente
FR	France	Frankrike	Frankreich	Francia
GB	Great Britain	England	Großbritannien	Gran Bretaña
IT	Italy	Italien	Italie	Italia
JA	Japan	Japan	Japon	Japón
ME	Middle East	Meletta Östern	Nahost	Proximo Oriente
NO	Norway	Norge	Norwegen	Noruega
SF	Finland	Finnland	Finnland	Finlandia
SW	Sweden	Sverige	Schweden	Suecia
UC	USA-California	USA-Californien	USA-Californien	EE UU. California
UF	USA-Federal	USA-Federalit	USA außer Kalifornien	EE UU. Federal
US	USA	USA	USA	EE UU.

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1-A09


Model identification
Modellidentifikation
Modellidentifikation
Identification du modèle
Identificación del modelo





Engine number
Motornummer
Motor-Nr.
No. de moteur
Num. de motor

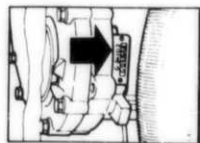

Gearbox number
Växelladsnummer
Getriebe-Nr.
No. de boîte de vitesses
Num. de caja de cambios

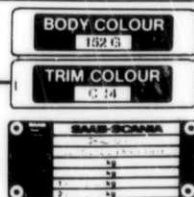

Chassis number
Chassinummer
Fahrgestell-Nr.
No. de châssis
Num. de chasis
Trim colour code
Kladselkod
Polsterkode
Code couleur garniture
Clave color tapiceria
Car colour code
Färgkod
Lackkode
Code couleur voiture
Clave color coche

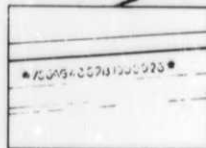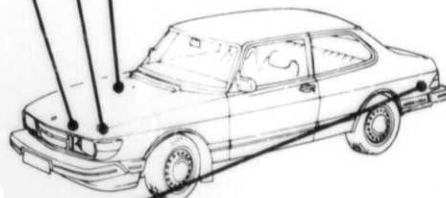

Chassis number stamped on the body
Chassinumret är instansat i karossen.
Fahrgestell-Nr. in Karosserie eingestanzt.
No. de Châssis estampé dans la carrosserie.
Num. de chasis estampado en la carrocería.)

SAAB
genuine parts
original reservdelar

1-A10

Chassis numbers
Chassinummer
Fahrgestell-Nr.
No. de châssis
Num. de chasis

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

Manufacturer
Tillverkare
Hersteller
Fabricant
Fabricante

YS3 = SAAB-SCANIA AB,
Sweden

Product line
Produktlinje
Herstellungslinie
Produit
Producto

A = SAAB 900
B = SAAB 90

Series
Modellserie
Bauserie
Série
Serie

L = Low
M = Medium
H = High
T = Turbo
E = Extra high

Body type
Karosstyp
Karosserietyp
Coque
Carrocería

2 = 2 door Sedan
3 = 3 door Combi Coupé
4 = 4 door Sedan
5 = 5 door Combi Coupé
6 = 4 door Sedan, extended

Gearbox
Växellåda
Getriebe
Boîte de vitesses
Cambio

4 = 4-speed manuel
5 = 5-speed manuel
6 = 3-speed automatic

Engine type
Motortyp
Motortyp
Moteur
Motor

C = Single carburettor
T = Twin carburettor
J = Fuel injection
S = Fuel injection and turbo charger
L = Fuel injection, turbo charger and intercooler

Check No.
Kontrollsfiffra
Chiffre de contrôle
Cifra de control

0-9 or X

Model year
Årsmodell
Baujahr
Modèle de l'année
Modelo del año

F = 1985
G = 1986

Assembly plant
Tillverkningsort
Herstellungsort
Lieu de montage
Lugar de montaje

1 = Assembly line A, Trollhättan, Sweden
2 = Assembly line B, Trollhättan, Sweden
3 = Arlov, Sweden
6 = Assembly line for 90, Nystad, Finland
7 = Assembly line for 900, Nystad, Finland

Serial number
Tillverkningsnummer
Herstellungsnummer
Numéro de série
Número de serie

000001 -

YS3 A M 3 5 J X B 1 000001

SAAB
genuine parts
original reservdelar

1-A12

Chassis numbers
Chassinummer
Fahrgestell-Nr.
No. de châssis
Num. de chasis

1985

YS3BL25C4F6000001-YS3BL25C1F6012722

1986

YS3BA24C3G6000001-YS3BA25C1G6008757

1987

YS3BA25C3H6000001-YS3BA25CXH6003901

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register -	2-H02

	B	2	0	1	2	T	0	1	M	E	000001
Gasoline engine Bensinmotor Benzinmotor Moteur à essence Motor de gasolina											
Swept volume in dm ³ Slagvolym i dm ³ Hubraum in dm ³ Cylindrée Cilindrada											
Cylinder head Cylinderlock Zylinderkopf Culasse Culata											
Version adaption Bilpassning Motorausführung Adaptation à la voiture Adaptación al coche											
Design Utförande Ausführung Exécution Ejecución											
Development variant Utvecklingsvariant Entwicklungsvariante Variante de développement Variante de desarrollo											
Emission control level Avgasreningarnivå Abgasreinigungsversion Niveau d'épuration des gaz Nivel de depuración de gases											
Transmission adaptation Växellådanpassning Getriebeausführung Adaptation à boîte de vitesses Adaptación a caja de cambios											
Model year designation Årsbeteckning Baujahrbezeichnung Dénomination d'année Denominación de año											
Serial number Tillverkningsnummer Herstellernummer Numéro de série Número de serie											

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1-A16

Recommended spare parts stock-keeping level

The stock-keeping level is indicated by a digit between 1 and 6 in the SR/L column below.

Stock-keeping level 1	Parts for service and maintenance
Stock-keeping level 2	Parts for minor repairs
Stock-keeping level 3	Parts for major repairs
Stock-keeping level 4	Heavy and slow-moving parts
Stock-keeping level 5	Engine assemblies, cylinder heads, transmission units, etc.
Stock-keeping level 6	Extremely slow-moving parts

The stock-keeping level is related to the retail outlet level.

Outlet level 1	Minor dealers, small workshops and petrol stations carrying out simple service work, mainly using parts from recommended stock-keeping level 1.
Outlet level 2	Medium-size dealers and more comprehensive workshops carrying out service work and some repair work, mainly using parts from recommended stock-keeping levels 1-2.
Outlet level 3	Major dealers carrying out service work and all kinds of repair work, using parts from recommended stock-keeping levels 1-3.
Outlet level 4	Major distributorship (export market) and some major dealers using parts from recommended stock-keeping levels 1-4.
Outlet level 5	Importers stocking parts from recommended stock-keeping levels 1-5.
Outlet level 6	Saab Car division's central stores in Nyköping, Sweden.

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

Rekommenderad lagerhållning av reservdelar

Lagerhållningsnivån anges med en siffra mellan 1 och 6 i kolumn SR/L, enligt nedan.

Lagerhållningsnivå 1	Artiklar för service och underhåll
Lagerhållningsnivå 2	Artiklar för enklare reparationer
Lagerhållningsnivå 3	Artiklar för större reparationer
Lagerhållningsnivå 4	Tunga artiklar och artiklar med mindre omsättning
Lagerhållningsnivå 5	Kompletta motorer, cylinderlock, växellådor, etc.
Lagerhållningsnivå 6	Extremt lågfrekventa artiklar

Lagerhållningsnivån är kopplad till återförsäljarnivån.

Återförsäljarnivå 1	Verkstäder och bensinstationer, som utför enkla servicearbeten och som huvudsakligen använder artiklar ur lagerhållningsnivå 1.
Återförsäljarnivå 2	Medelstora åf och mera mångsidiga verkstäder, som utför servicearbeten och vissa reparationsarbeten och huvudsakligen använder artiklar av lagerhållningsnivå 1 och 2.
Återförsäljarnivå 3	Stora åf, som utför servicearbeten samt alla slags reparationsarbeten och använder delar av lagerhållningsnivå 1–3.
Återförsäljarnivå 4	Stora distributörer (exportmarknaderna) och vissa åf, som använder delar av lagerhållningsnivå 1–4.
Återförsäljarnivå 5	Importörer som lagerhåller delar av lagerhållningsnivå 1–5.
Återförsäljarnivå 6	Saabs centrallager i Nyköping.

Lagerhaltungsniveau

Das Lagerhaltungsniveau ist in der Spalte SR/L mit einer der Ziffern 1–6 gem. folgender Aufschlüsselung angegeben:

Lagerhaltungsniveau 1	Artikel für Service und Unterhaltsarbeiten
Lagerhaltungsniveau 2	Artikel für einfachere Reparaturen
Lagerhaltungsniveau 3	Artikel für umfangreichere Reparaturen
Lagerhaltungsniveau 4	Schwere Artikel und Artikel mit geringerem Umsatz
Lagerhaltungsniveau 5	Komplette Motoren, Zylinderköpfe, Getriebe usw.
Lagerhaltungsniveau 6	Extrem umsatzträge Artikel

Das Lagerhaltungsniveau ist mit dem Händlerniveau koordiniert.

Händlerniveau 1	Werkstätten und Tankstellen, die einfachere Wartungsarbeiten ausführen und hauptsächlich Artikel gem. Lagerhaltungsniveau 1 verwenden.
Händlerniveau 2	Mittelgroße Händler und größere Werkstätten, die Wartungsarbeiten und gewisse Reparaturen ausführen und hauptsächlich Artikel gem. Lagerhaltungsniveau 1–2 verwenden.
Händlerniveau 3	Große Händler, die Wartungsarbeiten und Reparaturen aller Art ausführen und Artikel gem. Lagerhaltungsniveau 1–3 verwenden.
Händlerniveau 4	Sehr große Händler (gewisse Exportmärkte; Generalagenten) die Artikel gem. Lagerhaltungsniveau 1–4 verwenden.
Händlerniveau 5	Importeure, die Artikel gem. Lagerhaltungsniveau 1–5 im Lager führen.
Händlerniveau 6	Das Saab-Zentrallager in Nyköping, Schweden.

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

Niveau de magasinage

Le niveau de magasinage est indiqué sur la colonne SR/L par un chiffre entre 1-6, représentant les concepts ci-après :

Niveau 1	Articles de service et d'entretien
Niveau 2	Articles pour des réparations peu importantes
Niveau 3	Articles pour des réparations importantes
Niveau 4	Articles lourds et articles peu mouvementés
Niveau 5	Moteurs complets, culasses, boîtes de vitesses, etc.
Niveau 6	Articles extrêmement peu mouvementés

Niveau de concessionnaire

Le niveau de magasinage et le niveau de concessionnaire sont en rapport de la façon suivante :

Niveau 1	Garages et pompes de distribution d'essence. Capacités pour simples travaux de service ne demandant qu'un stock principalement constitué par des articles niveau 1.
Niveau 2	Concessionnaires d'importance moyenne disposant d'atelier mieux équipé que les précédents. Capacités pour le service et la réparation dont le stock nécessaire est principalement composé par des articles niveaux 1-2.
Niveau 3	Concessionnaires importants pouvant réaliser toute sorte de travaux de service et de réparation. Stock principalement composé des articles niveaux 1-3.
Niveau 4	Grand distributeurs (marché d'exportation) et quelques concessionnaires très importants dont le stock se compose d'articles des niveaux 1-4.
Niveau 5	Importeurs dont le stock correspond aux niveaux 1-5.
Niveau 6	Dépôt central à Nyköping.

Nivel de almacenaje

El nivel de almacenaje se indica en la columna SR/L con una cifra del 1 al 6 que representa los conceptos siguientes:

Nivel 1	Artículos de servicio y mantenimiento
Nivel 2	Artículos para reparaciones poco importantes
Nivel 3	Artículos para reparaciones importantes
Nivel 4	Artículos pesados y artículos de poco movimiento
Nivel 5	Motores completos, culatas, cajas de cambio, etc.
Nivel 6	Artículos de poco movimiento en grado extremo.

Nivel de concesionario

El nivel de almacenaje y el de concesionario están en relación de la manera siguiente:

Nivel 1	Talleres y bombas de combustible con capacidad para trabajos de reparación y de servicio sencillos. Almacén generalmente compuesto de artículos nivel 1.
Nivel 2	Concesionarios de importancia media con taller mejor equipado que los precedente, con capacidad para servicio y reparaciones que requieren artículos principalmente compuestos por los de los niveles 1-2.
Nivel 3	Concesionarios importantes capacitados para toda clase de reparaciones y trabajos de servicio. Almacén principalmente constituido por los artículos de los niveles 1-3.
Nivel 4	Grandes distribuidores (mercado de exportación) y algunos concesionarios muy importantes cuyos almacenes se componen de artículos de los niveles 1-4.
Nivel 5	Importador cuyo almacén corresponde a los niveles 1-5.
Nivel 6	Almacén central en Nyköping.

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02



Verktvg
Tools
Werkzeuge
Outillage
Herramientas

0050
0020
0040
0060
0080
0100
0120
0140
0160
0180
0190
0200
0220
0240
0280
0290
0300
0320
0340
0360
0380
0400
0420
0440
0460
0470
0480
0500
0520
0560
0570
0580
0600
0620
0640
0660
0680
0700
0720
0740
0750
0760
0780
0800
0820
0840
0860
0900
0920
0940
0960

1-B02

CONTENTS

Special tools classifying	1 : 5	1-B06
Special tools, engine part 1.	1 : 7	1-B08
Special tools, engine part 2.	1 : 9	1-B10
Special tools, engine part 3.	1 : 11	1-B12
Special tools, engine part 4, ISAT	1 : 13	1-B14
Special tools, transmission (man. gear box) part 1.	1 : 17	1-B18
Special tools, transmission (man. gear box) part 2.	1 : 19	1-B20
Special tools, transmission (man. gear box) part 3.	1 : 21	1-B22
Special tools, chassis, part 1.	1 : 23	1-B24
Special tools, chassis, part 2.	1 : 25	1-C02
Special tools, car body	1 : 29	1-C06
Special tools, miscellaneous		

INNEHÅLLSFÖRTECKNING

Specialverktygsklassificering	1 : 5	1-B06
Specialverktyg, motor del 1.	1 : 7	1-B08
Specialverktyg, motor del 2	1 : 9	1-B10
Specialverktyg, motor del 3	1 : 11	1-B12
Specialverktyg, motor del 4, ISAT	1 : 13	1-B14
Specialverktyg, kraftöverföring (M växellåda) del 1	1 : 17	1-B18
Specialverktyg, kraftöverföring (M växellåda) del 2	1 : 19	1-B20
Specialverktyg, kraftöverföring (M växellåda) del 3	1 : 21	1-B22
Specialverktyg, chassi, del 1.	1 : 23	1-B24
Specialverktyg, chassi, del 2.	1 : 25	1-C02
Specialverktyg, kaross	1 : 29	1-C06
Specialverktyg, övriga		

INHALTSVERZEICHNIS

Spezialwerkzeuge, Klassenordnung	1 : 5	1-B06
Spezialwerkzeuge, Motor Teil 1	1 : 7	1-B08
Spezialwerkzeuge, Motor Teil 2	1 : 9	1-B10
Spezialwerkzeuge, Motor Teil 3	1 : 11	1-B12
Spezialwerkzeuge, Motor Teil 4, ISAT	1 : 13	1-B14
Spezialwerkzeuge, Kraftübertragung (Mne Getriebe)	1 : 17	1-B18
Teil 1	1 : 19	1-B20
Spezialwerkzeuge, Kraftübertragung (Mne Getriebe)	1 : 21	1-B22
Teil 2	1 : 23	1-B24
Spezialwerkzeuge, Kraftübertragung (Mne Getriebe)	1 : 25	1-C02
Teil 3	1 : 29	1-C06
Spezialwerkzeuge, Fahrgestell, Teil 1.		
Spezialwerkzeuge, Fahrgestell, Teil 2.		
Spezialwerkzeuge, Karosserie		
Spezialwerkzeuge, Übriges		

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system, Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly, Steering	1-L02
7 Suspension, Wheels	2-A02
8 Body	2-B02
9 Tool, Labels	2-G02
10 Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4, ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

1-B03

TABLE DES MATIERES

Classification de l'outillage spécial	1 : 5	1-B06
Outillage spécial, moteur 1ère partie	1 : 7	1-B06
Outillage spécial, moteur 2ème partie	1 : 9	1-B10
Outillage spécial, moteur 3ème partie	1 : 11	1-B12
Outillage spécial, moteur 4ème partie, ISAT	1 : 13	1-B14
Outillage spécial, transmission (boîte de vitesses manuelle) 1ère partie	1 : 17	1-B18
Outillage spécial, transmission (boîte de vitesses manuelle) 2ème partie	1 : 19	1-B20
Outillage spécial, transmission (boîte de vitesses manuelle) 3ème partie	1 : 21	1-B22
Outillage spécial, de châssis 1ère partie	1 : 23	1-B24
Outillage spécial, de châssis 2ème partie	1 : 25	1-C02
Outillage spécial, carrosserie	1 : 29	1-C06

SUMARIO

Clasificación de las herramientas especiales	1 : 5	1-B06
Herramientas especiales, motor 1a parte	1 : 7	1-B08
Herramientas especiales, motor 2a parte	1 : 9	1-B10
Herramientas especiales, motor 3a parte	1 : 11	1-B12
Herramientas especiales, motor 4a parte, ISAT	1 : 13	1-B14
Herramientas especiales, transmisión (caja de cambios manual) 1a parte	1 : 17	1-B18
Herramientas especiales, transmisión (caja de cambios manual) 2a parte	1 : 19	1-B20
Herramientas especiales, transmisión (caja de cambios manual) 3a parte	1 : 21	1-B22
Herramientas especiales, de chasis 1a parte	1 : 23	1-B24
Herramientas especiales, de chasis 2a parte	1 : 25	1-C02
Herramientas especiales, carrocería	1 : 29	1-C06

0050

1680

1700

1720

1740

1750

1760

1780

1800

1820

1840

1850

1900

1920

1930

1940

1960

1970

1980

2020

2040

2060

2070

2080

2100

2140

2160

2170

2180

2190

2200

2240

2260

2280

2300

2310

2360

2380

2390

2400

2420

2480

2490

2500

2520

2540

2550

2560

2580

2590

1-B04

Special tools classifying

The special tools in the list are classified as follows:

Tools for engine-, transmission- and chassis works.

A0 = Tools for service and maintenance work (E.g. valve adjustment, replacement of brake pads)

A1 = Tools for simpler repairs (E.g. replacement of clutch, replacement of valves)

A2 = Tools for qualified repairs (E.g. reconditioning of transmissions, steering gears)

Tools for body works

B1 = Tools for simpler body works (E.g. replacement of front fender)

B2 = Tools for qualified body works (E.g. works in aligning bench)

Specialverktygsklassificering

Specialverktygen är i förteckningen klassificerade enligt följande:

Verktyg för motor-, växellåds- och chassiarbeten

A0 = Verktyg för service- och underhållsarbeten (Ex ventiljustering, byte bromsklossar)

A1 = Verktyg för enklare reparationer (Ex byte av koppling, byte av ventiler)

A2 = Verktyg för kvalificerade reparationer (Ex renovering av växellådor, styrväxlar)

Verktyg för plåtarbeten.
B1 = Verktyg för enklare plåtarbeten (Ex byte av framskärm)








B2 = Verktyg för kvalificerade plåtarbeten (Ex riktbanksarbeten)

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4, ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

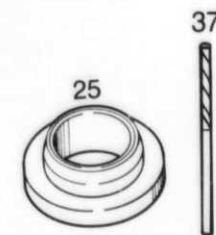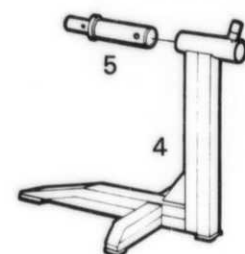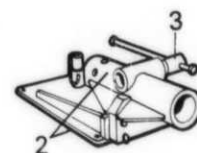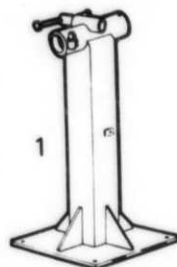

R 6573-90

1-B06

Tools
Engine, part 1

Verktyg
Motor, del 1

0100	Pos	Part No./Art nr	Notes/Anmärkning	Qty./ Antal	Description	Benämning
0020	1	78 60 794	4), A2, ALTERN. STANDS	1	Floor stand	Golvstativ
0040	2	78 60 877	4), A2, ALTERN. STANDS	1	Bench stand	Bänksstativ
0060	3	78 60 885	4), A2, ALTERN. STANDS	1	Vise stand	Skruvstycksstativ
0080	4	78 61 479	4), A2, ALTERN. STANDS	1	Stand	Stativ
0100	5	83 90 478	A2	1	Axle for stand	Axel för stativ
0180	7	83 93 951	A2	1	Holder, engine	Hållare, motor
0240	8	83 91 849	A1	1	Plunger	Oljetråg
0260	9	78 60 802	4), A2	1	Oil pan	Oljetråg
0480	15	83 92 540	A1	1	Guide sleeve, crankshaft seal, flywheel side	Sjyrfylsa, vevaxeltätning svänghjulssida
0500	19	83 91 153	A2	1	Piston installing tool, oversize	Kolvmonterings- verktyg, OD
0600	19	78 62 287	A2	1	Piston installing tool	Kolvmonteringsverktyg
0760	20	83 92 151	A1	1	Puller, belt pulley	Avdragare, remskiva
0820	25	83 93 340	A1	1	Installing ring seal	Monteringsring
0890	37	83 92 268	A2	1	ring, transmission	tätning, transmission
0891	47	83 93 357	A1	1	Reamer, valve guide	Brotsch, ventilstyrning
1080				1	Disengagement tool	Avlastningskrok
1440					chain tensioner	kedjesträckare
1460						


4. Also for Saab 95/96

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	
ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

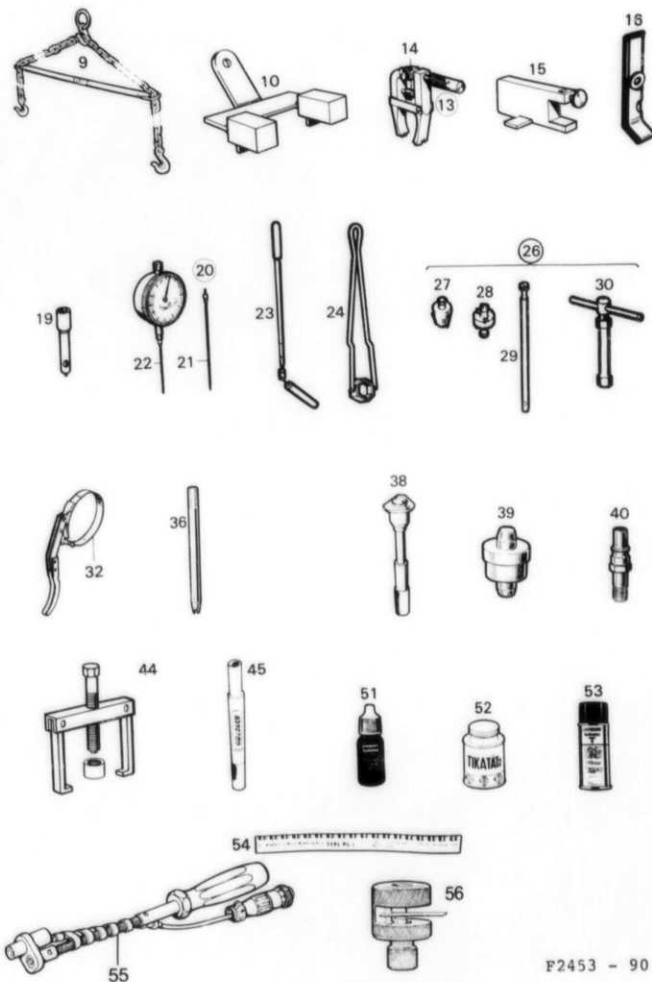

F2453 - 90

1-B08

Tools
Engine, part 2

Verktyg
Motor, del 2

Pos	Part No./Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0150					
0200	9	83 92 409	A1	1 Lifting yoke, engine	Lyftkrok, motor och
0220				and power plant	drivaggregat
0230	10	83 93 209	A1	1 Spacer	Mellanlägg
0300	13	83 91 450	A0	1 Measuring tool, valve	Mätverktyg, ventilspe
0320	14	83 92 250	A0	1 Measuring point	Måtspets
0340	15	83 91 633	A0	1 Measuring plate, valve	Mätplatta, justering
0360				clearance adjustment	av ventilspe
0380	16	83 91 419	A0	1 Feeler gauge set,	Tolkstålsats, venti-
0400				valve clearance	spel
0460	19	83 92 045	4), A0	1 Adapter cpl, ignition	Adapter kpl, tändin-
0480				setting	ställning
0500	20	78 40 622	4), A0	1 Dial indicator cpl	Indikatorlocka kpl
0520	21	78 14 908	4)	1 Point 100 mm	Måtspets 100 mm
0540	22	78 14 916	1	1 Point 40 mm	Måtspets 40 mm
0560	23	83 91 401	4), A1	1 Magnet tool	Magnetverktyg
0600	24	83 92 185	A0	1 Key, crankshaft screw	Nyckel, vevaxelskruv
0660	26	83 92 193	4) A2	1 Valve seat cutter assy	Ventilsätesskrä kpl
0720	27	83 92 101	1	1 Cutter 75 degrees	Fräs 75 grader
0760	28	83 92 219	1	1 Cutter 11-45 degrees	Fräs 11-45 grader
0780	29	78 61 057	1	1 Guide spindle	Styrspindel
0800	30	78 61 065	1	1 T-key	T-nyckel
0840	32	78 62 014	A0	1 Key, oil filter	Nyckel, oljefilter
0850	32	83 93 332	A0	1 Key, oil filter,	Nyckel, oljefilter,
0851				ø 75 mm	ø 75 mm
1040	36	83 92 128	A1	2 Guide pin, cylinder head	Styrapp, cylinderlock
1100	38	83 92 631	A2	1 Removal and installa-	Demonerings-och mon-
1120				tion tools, valve	teringsverktyg, ven-
1140				guide	tilstyrning
1160	39	83 91 997	A2	1 Drift, flywheel bearing	Dorn, svanghjulslager
1200	40	83 92 326	A1	1 Air nipple, spark	Luftrippel för tänd-
1220				plug hole	stifthål
1250	44	85 80 086	A2	1 Puller, trigger rotor	Avdragare, spallrotor
1325	45	83 92 789	A2	1 Drift, installing and	Dorn, monterig och
1330				removing, fuel jet	demonerig, bränsle-
1335				carburetor	munstycke, förgasare
1480	51	78 60 513	X	1 Locrite stud lock	Locrite skruvlåsning
1500	51	87 10 394	X	1 Locrite 270	Locrite 270
1520	51	83 43 808	X	1 Locrite quickset	Locrite quickset
1540	52	88 09 097	X	1 Tikatät, can 1 pound	Tikatät, burk 1/2 kg
1560	53	83 08 454	X	1 Locquic activator	Locquic activator
1580				grade T	
1600	54	78 60 505	X	1 Plastigauge, bearing	Plastigauge, för mät-
1620				clearance measuring	ning av lagerspel
1640	55	88 19 005	A2	1 Ignition timing sensor	Tändlägesgivare
1650	56	85 80 045	A0	1 Spark plug adjuster	Justeringsverktyg,
1655					tändstift

4. Also for Saab 95/96

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	
ISAT	1-B12
Special tools, transmission	
(man. gear box) part 1.	1-B14
Special tools, transmission	
(man. gear box) part 2.	1-B18
Special tools, transmission	
(man. gear box) part 3.	1-B20
Special tools, chassis	
part 1.	1-B22
Special tools, chassis,	
part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

1-B10

Tools
Engine, part 3


Verktyg
Motor, del 3

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02




1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4,	
ISAT	1-B12
Special tools, transmission	
(man. gear box) part 1.	1-B14
Special tools, transmission	
(man. gear box) part 2.	1-B18
Special tools, transmission	
(man. gear box) part 3.	1-B20
Special tools, chassis	
part 1.	1-B22
Special tools, chassis,	
part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

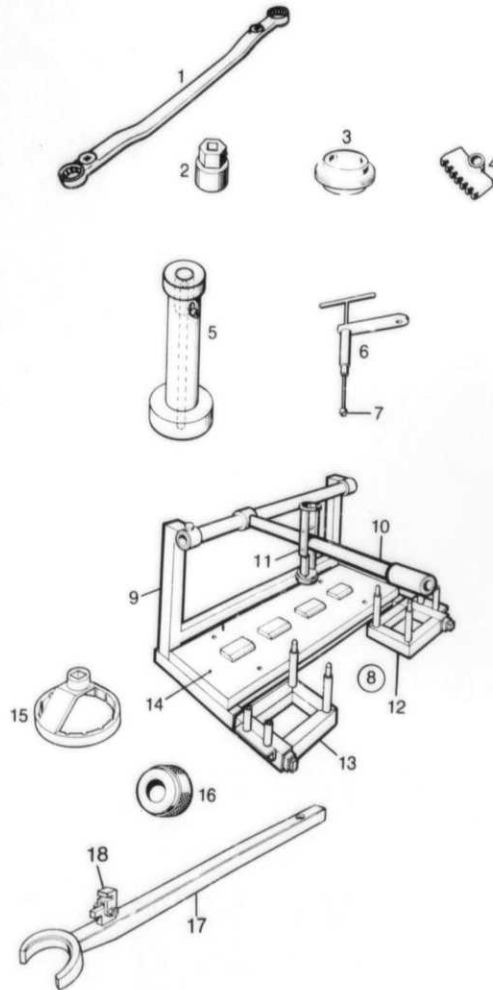

R8336-90

Pos	Part No./Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S	L
0200								
0220	1	83 92 961	A1	1	Ring key	Ringnyckel		
0230	2	83 93 639	A1	1	Sleeve	Hylsa		
0240	3	83 92 979	A1	1	Pressure sleeve	Presshylsa		
0260	4	83 92 987	A1	1	Fly wheel stop	Svåghjulsstopp		
0360	5	83 93 027	A0	1	Adjusting plunge	Inställningsstolk		
0380	6	83 93 035	A0	1	Adjusting tool	Inställningsverktyg		
0400	7	83 93 043	A0	1	Adaptor	Adaptor		
0420	8	83 93 050	A2	1	Fixture, valve remo-	Fixtur, ventildemon-		
0440					ving and installing	tering och montering		
0460	9	83 93 068	A2	1	Base fixture	Grundfixtur		
0480	10	83 93 076	A2	1	Level	Hälvstång		
0500	11	83 93 084	A2	1	Valve, spring pressure	Ventilfjädertryckare		
0520	12	83 93 092	A2	1	Fixing point 99 2.0L	Fixerdubb 99 2.0L		
0540	13	83 93 100	A2	1	Fixing point 99 1.7	Fixerdubb 99 1.7-1.85L		
0560					-1.85L and V4	och V4		
0580	14	83 93 118	A2	1	Fixing plate 99 1.7	Fixerplatta 99 1.7		
0600					-1.85-2.0L and V4	-1.85-2.0L och V4		
0620	15	83 93 365	A1	1	Key, nut fuel level	Nyckel, mutter		
0640					transmitter	bränselnivågivare		
0660	16	83 93 589		1	Centrerung tool, oil pump	Centreringsring, oljepump		
0700	17	83 94 033	A1	1	Lever, clutch shaft	Hälvstång, lamellaxel		
0720					engine	motor		
0730	18	83 94 306	A1	1	Hook with screw and nut	Hake med skruv och mutter		

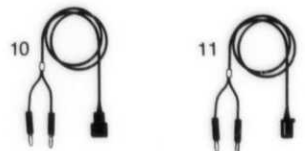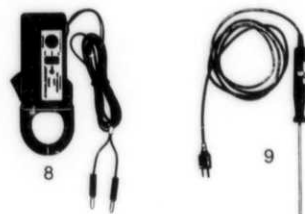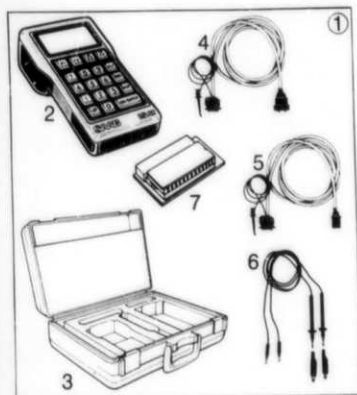

F2454 - 90

1-B12

Tools
Engine, part 4
ISAT

Verktyg
Motor, del 4
ISAT

MASTER INDEX

Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 86 10 834	39)	1	ISAT basic set	ISAT grundsats	6
0020	2	• 86 10 651	1)	1	ISAT instrument, incl battery	ISAT instrument, inkl batteri	6
0030	3	• 86 10 826	1)	1	Storage/carrying case	Förvarings-/transport-väska	6
0040	4	• 86 10 701	1989-, 10-PIN	1	Diagnosis lead set	Diagnoskabel	6
0050	5	• 86 10 693	1988 1/2, 4-PIN	1	Diagnosis lead set	Diagnoskabel	6
0060	6	• 86 10 719	DI-SYSTEM FOR MULTIMETER FUNCTIONS	1	Test lead set	Mätkablage	6
0070	7	• 86 10 669	DMM 40IEU1, SWEDISH, ENGLISH	1	Programme cartridge	Programmodul	6
0080	7	• 86 10 677	FINNISH, GERMAN 40IEU2, GERMAN, ITALIAN	1	Programme cartridge	Programmodul	6
0090	7	• 86 10 685	FRENCH, DUTCH 40IUSA, ENGLISH, FRENCH, SPANISH, ITALIAN	1	Programme cartridge	Programmodul	6
0100	8	• 86 10 743	FOR CURRENT UP TO 600A	1	Clip-on current detector	Strömtång	6
0110	9	• 86 10 750	-40°C TO +400°C -40°F TO +755°F	1	Temperature-sensor lead	Temperaturgivarkabel	6
0120	10	• 86 10 776	LAMBDA CI	1	Test lead	Testkabel	6
0130	11	• 86 10 784	LAMBDA LH	1	Test lead	Testkabel	6
0140	12	• 86 10 800	FOR ISAT INSTRUMENT	1	Protection cover	Skyddsskäpa	6

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
1 GROUP INDEX		
Special tools classifying		
Special tools, engine part 1.	1-B06	
Special tools, engine part 2.	1-B08	
Special tools, engine part 3.	1-B10	
Special tools, engine part 4,		
ISAT	1-B12	
Special tools, transmission		
(man. gear box) part 1.	1-B14	
Special tools, transmission		
(man. gear box) part 2.	1-B18	
Special tools, transmission		
(man. gear box) part 3.	1-B20	
Special tools, chassis		
part 1.	1-B22	
Special tools, chassis,		
part 2.	1-B24	
Special tools, car body	1-C02	
Special tools, miscellaneous	1-C06	

1. Not as separate spare part
39. When ordering ISAT basic set programme cartridge must be specified depending on language set required.
40. To be specified separately when ordering ISAT basic set, depending on language set required.

1-B14

Tools
Manual gearbox, part 1


Verktyg
Manuell växellåda, del 1

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

1 GROUP INDEX


Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	
ISAT	1-B12
Special tools, transmission	
(man. gear box) part 1.	1-B14
Special tools, transmission	
(man. gear box) part 2.	1-B18
Special tools, transmission	
(man. gear box) part 3.	1-B20
Special tools, chassis	
part 1.	1-B22
Special tools, chassis,	
part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

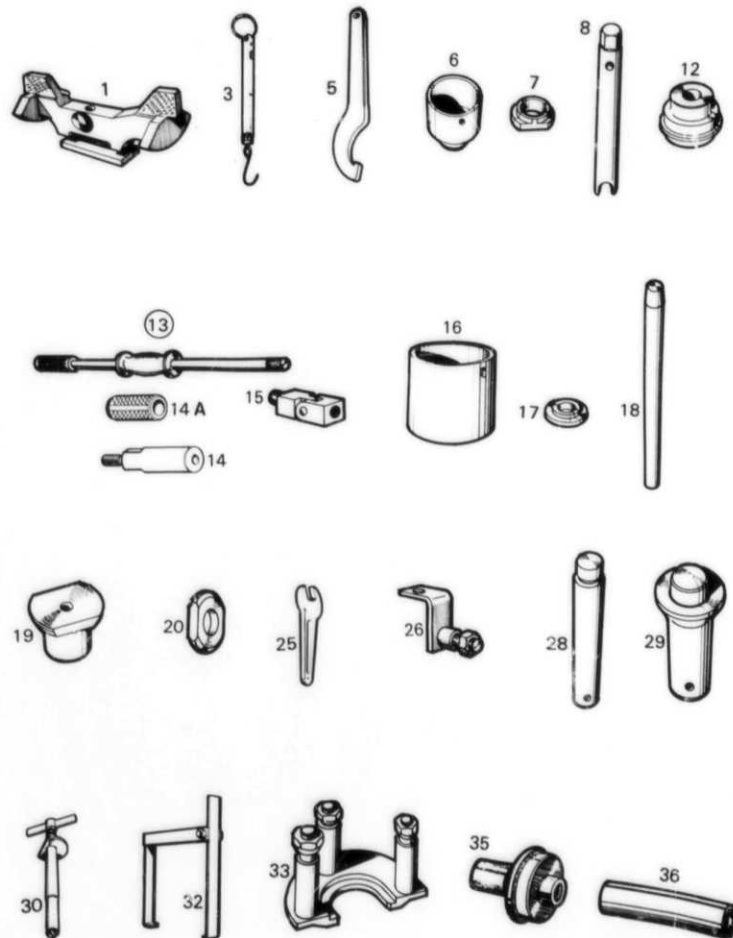

R 6207-90

Pos	Part No./Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning
0020	1	83 90 155	2), A2	1 Measuring tool cpl, pinion (incl. box)	Mätverktyg kpl, pinjong (inkl. låda)
0040	3	83 90 130	A2	1 Dynamometer cpl (incl. lacing)	Dynamometer kpl (inkl. snöre)
0060	5	83 90 197	A2	1 Hook wrench, intermediate shaft	Haknyckel, mellanaxel
0080	6	83 90 114	A2	1 Sleeve, installation of 4th gear, bearing housing outer ring, pinion and pinion shaft unit	Hylsa, montering av 4-ans drev, ytterring lagerhus, pinjong och pinjongaxelenhet
0100	7	83 90 213	A2	1 Ring, removal of 4th gear with bearing	Ring, demontering av 4-ans drev med lager
0120	8	87 90 818	A2	1 Drift, differential bearing	Dorn, differentialslager
0140	12	83 90 312	2), A2	1 Drift, installation of differential housing outer bearing ring, steering knuckle housing, outer ring and steering knuckle housing seal ring	Dorn, montering av ytterring differentialslager, ytterring styrspindelhus och tättningsring i styrspindelhus
0160	13	83 90 270	A1	1 Tapping-out hammer	Slaghammare
0180	14	83 90 858	A2, 5-SPEED	1 Adapter	Ändtapp
0200	14A	87 90 917	A1, 5/16" UNC	1 Joint, removal of clutch shaft	Knut, demontering av lamellaxel
0220	15	83 90 015	A1, M8	1 Joint, removal of clutch shaft	Knut, demontering av lamellaxel
0240	16	83 90 098	A2	1 Dolly, installation and removal of primary gear, primary gear bearing, primary gear wheel bearing, fourth gear bearing pinion, bearing housing outer roller bearing rings and pinion shaft	Mothåll, montering och demontering av primärväxeldrev, lager primärväxeldrev, lager primärväxelhjul, lager ingående drev 4-an, rullagrens ytterringar pinjong-lagerhus samt pinjongaxel
0260	17	83 90 205	A2	1 Ring, removal of primary gear roller bearing and installation of intermediate shaft inner ring and outer bearing	Ring, demontering av rullager primärväxel, montering av inre lager och yttre lager mellanaxel
0280	18	83 90 262	A2	1 Aligning arbor, installation of intermediate shaft	Styrdorn, montering av mellanaxel
0300	19	83 90 106	A2	1 Drift, removal of pinion roller bearing outer ring and installation of primary gear housing roller bearing	Dorn, demontering av rullager ytterring pinjong och montering av rullager primärväxelhus
0320	20	83 90 296	2), A2	1 Washer, removal of bearing seat outer ring	Bricka, demontering av ytterring lagersäte
0340	25	83 90 072	A2	1 Open-ended wrench, pinion shaft nut	Fast nyckel, mutter pinjongaxel
0360	26	83 90 288	A2	1 Dial indicator retaining tool, back lash differential	Hållare, indikator-klocka, mätning av flankspel, differential

2. Also for automatic transmission

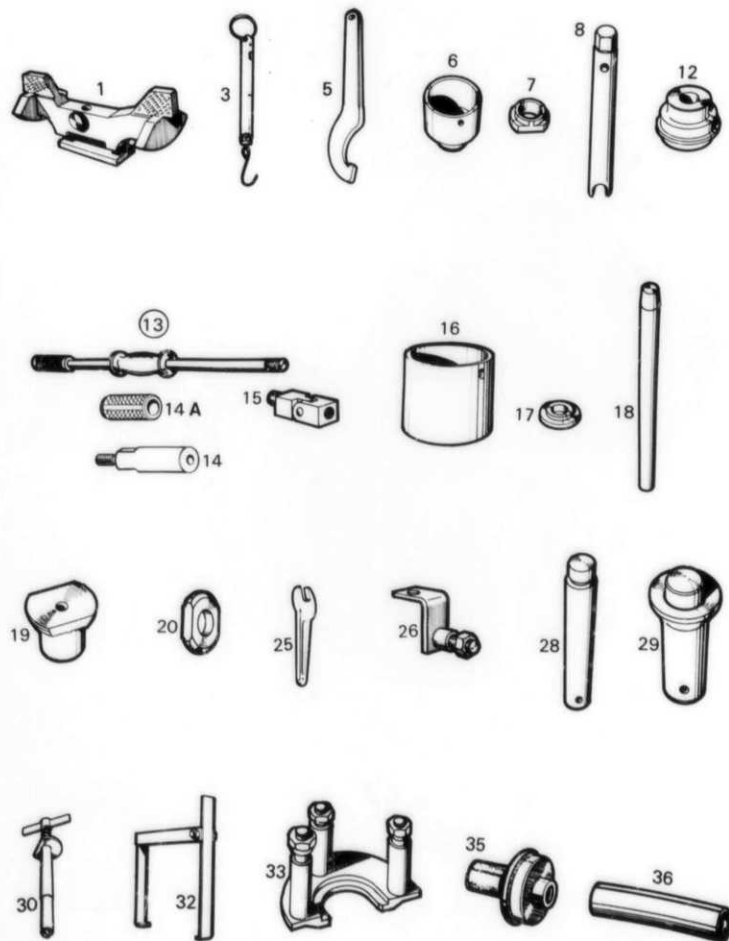

R 6207-90

1-B16

Tools
Manual gearbox, part 1

Verktyg
Manuell växellåda, del 1

Pos	Part No./Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
1600	28	83 90 189	2), A2	1 Drift, installation of needle bearings in free wheel shaft and removal of free wheel shaft, free wheel shaft roller bearing, input gear with ball bearing, outer bearing rings from bearing seats, and steering knuckle housing outer ring and seal	Dorn, montering av nållager i frihjulssaxel, demontering av frihjulssaxel, tätning frihjulssaxel, rullager frihjulssaxel, ingående drev med kullager, lagrens ytterringar ur lagersäten, ytterring och tätning styrspindelhus
1620	29	83 90 320	2), A2	1 Drift, installation of differential bearing seat seal, and primary gear roller bearing, clutch shaft seal	Dorn, montering av tätning differential-lagersäte, rullager primärväxeldrev, lammellaxeltätning
1640	30	83 90 049	A2	1 Puller, installation and removal of reverse gear shaft and intermediate shaft	Avdragare, montering och demontering av backväxelaxel och mellanaxel
1660	32	87 90 776	2), A1	1 Puller, removal of differential bearing seat	Avdragare, demontering av differentiallyagersäte
1680	33	87 90 768	3), A2	1 Puller, removal of differential bearing ring	Avdragare, demontering av differentiallyagering
1700	35	78 41 141	3), A2	1 Sleeve, pressing in ball bearing, differential bearing cap	Hylsa, inpressning kullager, differentiallyagersköld
1720	36	78 41 067	2), A2	1 Sleeve, removal of ball bearing, differential bearing cap, installation of bearing cap with ball bearing on inner driver	Hylsa, demontering av kullager differential lagersköld, montering av lagersköld med kullager på inre medbringare
1740					
1760					
1780					
1800					
1820					
1880					
1900					
1920					
1940					
1960					
2000					
2020					
2040					
2060					
2100					
2120					
2160					
2180					
2260					
2280					
2300					
2320					
2340					
2360					
2380					
2400					

2. Also for automatic transmission
3. Alternative stands

SAAB genuine parts
original reservedel

SAAB 90 M85-87

1990-02

R6207

Page 01 - 015

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02


1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	1-B12
ISAT	
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

1-B18

Tools
Manual gearbox, part 2

Verktyg
Manuell växellåda, del 2

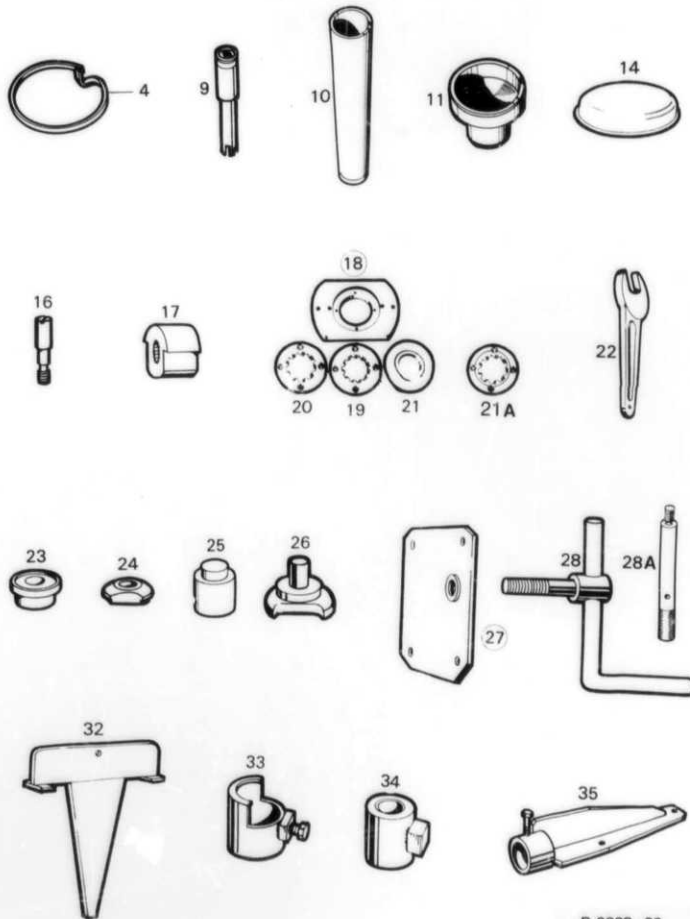

R 6208-90

0300	Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning
0020	4	83 90 023	A1	1	Pad	Mellanlägg
0240	9	87 90 370	2), A1	1	Wrench, special nut in gear lever housing	Nyckel, specialmutter växelspakshus
0260	10	83 90 148	A2	1	Sleeve, installation of pinion shaft unit, inner roller bearing, primary gear housing pinion roller bearing and intermediate shaft inner ring and outer bearing, removal of primary gear roller bearing, bearing housing outer rings, intermediate shaft inner ring and clutch shaft seal	Hylsa, montering av pinjongaxelenhet, inre rullager, pinjongrull- lager primärväxelhus, inringning och yttre lager mellanaxel, demontering av rulla- ger primärväxeldrev, yttningar lagerhus, inringning mellanaxel, tätning lamellaxel
0300	11	83 90 122	A2	1	Drift, installation of bearing housing outer ring (pinion) and ball bearing on 4th gear and removal of primary gear with bearing from bearing housing	Dorn, montering av ytttering i lagerhus (pinjong), kullager på 4-ans drev, demon- tering av primärväxel drev med lager ur lagerhus
0320	14	89 16 967	A1	2	Protective cover, inner drive shaft	Skyddslock, inre driv- axel
0340	16	87 90 438	A2, M8	2	Guide pin, pinion bearing housing	Styrpinne, pinjong- lagerhus
0360	17	87 90 446	A2	1	Retainer, pinion shaft	Hållare, pinjongaxel
0380	18	87 90 636	A2, SEE ALSO AUTOMATIC GEAR BOX	1	Fixture, removal and installation of bearing from pinion	Fixtur, demontering och montering av la- ger från pinjong
0400	19	87 90 669	18)	1	Puller ring	Avdragarring
0420	20	87 90 651	18)	1	Puller ring	Avdragarring
0440	21	87 90 644	18)	1	Installing ring	Monteringsring
0460	22	87 90 933	A2, 5-SPEED	1	Puller ring	Avdragarring
0480	23	87 90 925	A2, 5-SPEED	1	Installing ring	Monteringsring
0500	24	87 90 479	A2	1	Puller ring	Avdragarring
0520	25	87 90 487	A2	1	Key, pinion shaft nut	Nyckel, pinjongaxelmutter
0540	26	87 90 503	A2	1	Washer, ring pinion bearing housing	Bricka, ring pinjong- lagerhus
0560	27	87 90 511	A2	1	Washer, wheel primary gear	Bricka, hjul primär- växel
0580	28	78 40 853	A2	1	Sleeve, bearing differential case	Hylsa, lager differentialhus
0600	29	87 90 552	A2	1	Catch, back wheel	Spärr, backhjul
0620	30	87 90 552	A2	1	Puller, pinion shaft	Avdragare, pinjongaxel
0640	31	87 90 552	A2	1	Screw	Skruv
0660	32	87 90 552	A2	4	Spacer screw	Distansskruv
0680	33	87 90 677	A1	1	Measuring device, synchronizing	Installationsmått, synkronisering
	34	87 90 685	A1	1	Puller, seal ring gear shift shaft	Avdragare, tätning- ring växelföraxel
	35	83 90 460	A2, (7861479, 7860794, 7860877, 7860885)	1	Installing tool, seal ring gear shift shaft	Monteringsverktyg, tät- ningsring växelföraxel
				1	Holder, gear box	Hållare, växellåda


2. Also for automatic transmission
18. Not used for manual gear box

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4,	
ISAT	1-B12
Special tools, transmission	
(man. gear box) part 1.	1-B14
Special tools, transmission	
(man. gear box) part 2.	1-B18
Special tools, transmission	
(man. gear box) part 3.	1-B20
Special tools, chassis	
part 1.	1-B22
Special tools, chassis,	
part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

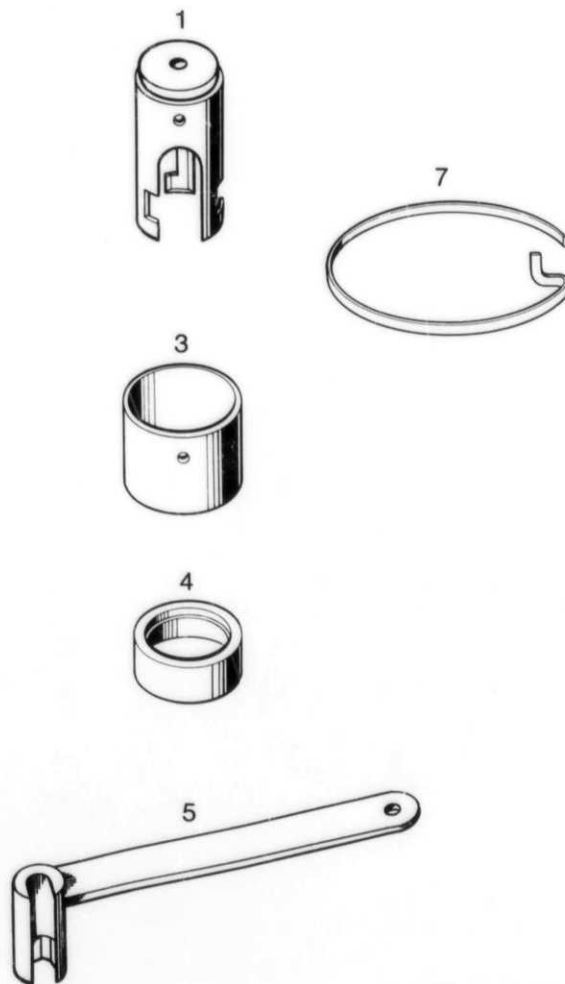

R8337-90

1-B20

Tools
Manual gearbox, part 3

Verktyg
Manuell växellåda, del 3

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020	1 87 90 891	A2	1	Extractor - pressing sleeve for removing of sprocket in primary gear	Avdragare - presshylsa, kedjedrev primärväxel
0040	3 87 90 859	A2	1	Sleeve, fitting bearing in primary gear	Presshylsa, montering av rullager i primärväxel-drev
0060	4 87 90 867		1	Installation ring, fitting bearing on to input shaft in gearbox	Monteringsring för rullager ingående axel, växellåda
0140	5 83 93 571		1	Key	Nyckel
0160	7 87 91 618	A1	1	Spacer	Mellanlägg


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4, ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

1-B22

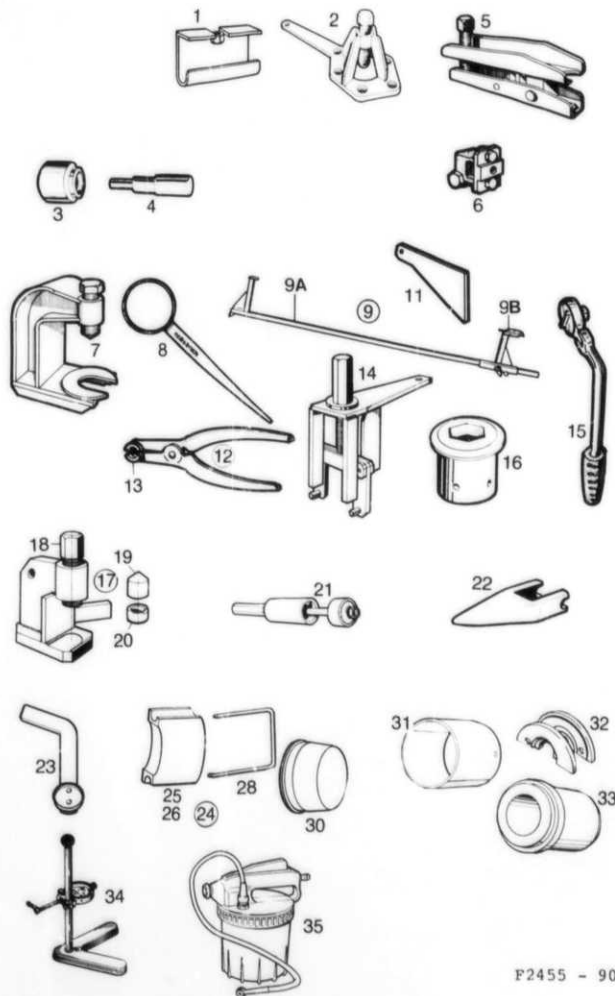

F2455 - 90

0450	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0010	1	89 96 175	A0		1	Removing tool, u-pin brake housing front	Demonteringsverktyg, u-pinne bromshus fram
0020	2	89 96 084	2), A2		1	Puller, removal of front and rear axle hubs, front axle outer bearing ring, outer drive shaft, gear box differential housing, bearing ring and engine chain wheel	Avdragare, demontering av nav, fram och bak- axel, yttre lagring framaxel, yttre driv- axel, lagring dif- ferentialhus växel- låda, kedjedrev motor
0030	3	78 41 331	A1		1	Installing tool, bus- hing upper control arm	Monteringsverktyg, bussning övre svängarm
0040	4	78 41 349	A1		1	Inst. tool, bushing lower control arm	Mont. verktyg, buss- ning nedre svängarm
0050	5	89 95 409	4), A1		1	Puller, removal of u-pin ends and ball joints	Avdragare, demonte- ring av styrsjagsän- dar och kulbultar
0060	6	89 95 284	A2		1	Puller, steering gear pinion. Used with tapping out hammer 8390° 70. See special tools, trans- mission	Avdragare, driv styrväxel. Används tillsammans med slaghammare 8390270. Se specialverktyg, kraft- överföring
0070	7	89 96 019	A0		1	Steering wheel puller	Rattavdragare
0080	8	89 95 607	A0		1	Brake spring tool, inst. and removal of brake springs	Bromsfjädersverktyg, montering och demon- tering av bromsfjäder
0090	9	88 19 013	4), A2		1	Tool for measuring toe-in	Verktyg för uppmät- ning av toe-in
0100	9A	88 19 054			1	Measuring rod	Matstång
0110	9B	88 19 062			1	Dial test indicator	Indikatorlocka
0120	11	89 95 342	A0		1	Template, brake pi- ston position	Kolmall, kontroll bromskolvens läge
0130	12	89 95 367	A0		1	Piston, moving pliers	Tång, vridning bromskolv
0140	13	89 95 664			2	Claw	Back
0150	14	89 95 771	A1		1	Removal tool, brake pad	Demonteringsverktyg, bromsklots
0160	15	89 95 763	A0		1	Ratchet wrench	Spärnyckel, fram- vagnsjustering
0170	16	89 95 805	4), A0		1	Sleeve, wheel nut	Hylsa, hjulmutter
0180	17	89 95 920	A1		1	Tool, wheel screw	Verktyg, hjulskruv
0190	18	89 95 581			1	Screw	Skruv
0200	19	89 95 896			1	Installing sleeve	Monteringshylsa
0210	20	89 95 904			1	Removing sleeve	Demonteringshylsa
0220	21	89 96 274	A1		1	Tool for rubber bus- hing, rear axle	Verktyg för gummi- bussning, bakaxel
0230	22	89 95 813	A1		1	Inst. tool, bellows steering wheel shaft	Monteringsverktyg, damask rattstång
0240	23	89 96 043	3), A0		1	Key, brake piston	Nyckel, bromskolv
0250	24	89 96 191	A1		1	Grinding set, brake disc	Slipsats, bromsskiva
0260	25	89 96 209	A1		1	Grinding pad LH	Slipklots V
0270	26	89 96 217	A1		1	Grinding pad RH	Slipklots H
0280	27	89 96 225	A1		1	U-pin	U-pinne
0290	28	89 96 233	A1		1	Wheel bolt guard	Hjulbultskydd
0300	29	89 96 449	A1		1	Sleeve, dolly, removal of front wheel bearing	Hylsa, mothåll, demon- tering framhjulslagring
0310	30	89 96 456	A1		1	Dolly, removal of front wheel bearing	Mothållsbrika, demon- tering framhjulslagring
0320	31	89 96 464	A1		1	Dolly, installation of wheel hub	Mothåll, montering av hjulnav
0330	32	78 74 886			1	Run-out gauge	Hjulkastindikator
0340	33	88 19 096	A2		1	Bleeding tool, brakes	Bromsluftare


2. Also for automatic transmission
3. Alternative stands
4. Also for Saab 95/96

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	1-B12
ISAT	
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

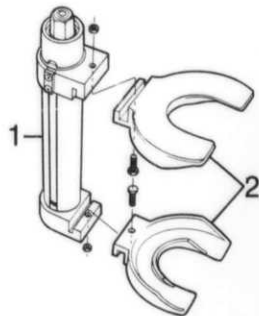

R 9297-90

1-B24

Tools
Chassis, part 2

Verktyg
Chassi, del 2


Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0475	1	88 18 791		1	Spring press	Fjäderpress	
0020	2	88 18 809		1	Holder	Hållare	
0030							

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	1-B12
ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

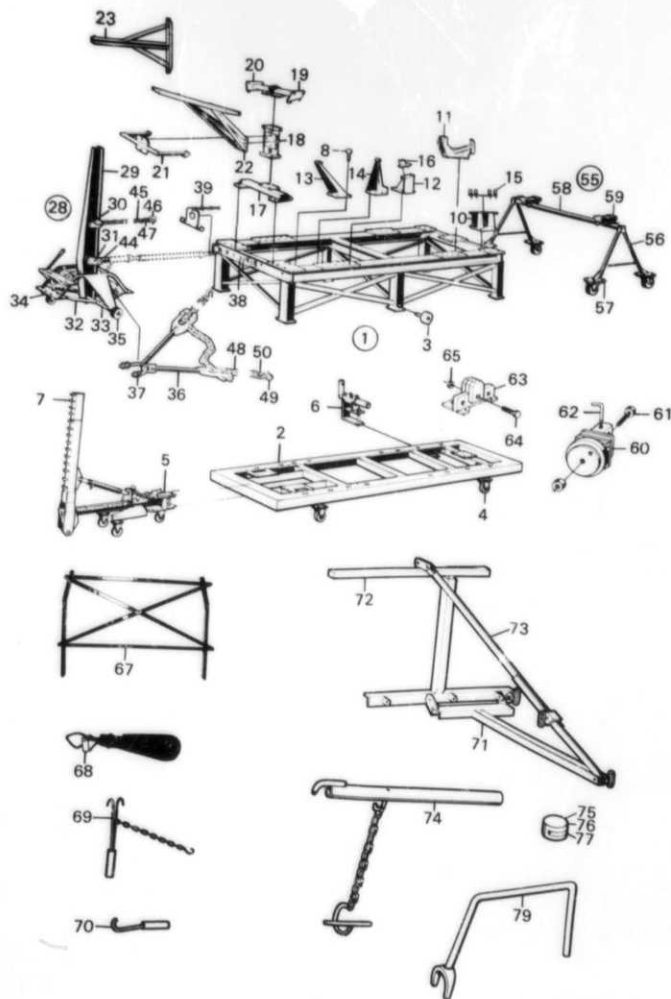

R 6211-90

1-C02

Tools
Car body

Verktyg
Kaross

0500	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020	1	82 90 140	IS DELETED	1	Aligning bench assy	Riktbänk kpl
0080	2	82 91 908	4) B2, ALTERN TO 8290140	1	Aligning bench	Riktbänk
0100	3	82 90 157	4) PART OF 8290140	2	Wheel	Hjul
0120	4	82 91 874	4) PART OF 8291908	4	Wheel	Hjul
0140	5	82 91 890	4) PART OF 8291908	1	U-attachment, driving aligner	U-fäste, dragriktare
0160	6	82 92 088	4) PART OF 8291908	1	Attachment, tension below	Fäste, dragning nedåt
0180	7	82 92 153	4) PART OF 8291908	1	Extension, driving aligner	Förlängningsdel dragriktare
0200	8	70 61 559		20	Screw	Fästskruv
0220	10	82 90 124		1	Front support LH	Främre stöd V
0300	10	82 90 132		1	Front support RH	Främre stöd H
0320	11	82 90 298		1	Scuff support LH	Tröskelstöd V
0340	11	82 90 306		1	Scuff support RH	Tröskelstöd H
0360	12	82 90 223		1	Support, middle floor LH	Stöd, mitre golv V
0380	12	82 90 231		1	Support, middle floor RH	Stöd, mitre golv H
0420	13	82 90 421		1	Support, rear floor	Stöd, bakre golv
0460	14	82 90 470		1	Support, rear wheel housing LH	Stöd, bakre hjulhus V
0500	14	82 90 488		1	Support, rear wheel housing RH	Stöd, bakre hjulhus H
0520	15	82 90 439		1	Check support, front LH	Kontrollstöd, fram V
0540	15	82 90 447		1	Check support, front RH	Kontrollstöd, fram V
0560	16	82 90 165		2	Check support, rear	Kontrollstöd, bak
0600	17	82 90 652		1	Intermediate piece	Mellanstycke
0640	18	82 90 660		1	Pillar	Pelare
0680	19	82 90 678		1	Support, front bearing bracket LH	Stöd, främre lager-konsol V
0700	20	82 90 686		1	Support, front bearing bracket RH	Stöd, främre lager-konsol H
0720	21	82 91 718		1	Fixture, steering gear bracket	Fixtur, styrväxel-in-fästning
0740	22	82 91 742		1	Fixture, front floor	Fixtur, främre golv
0760	23	82 90 728		1	Fixture, engine support	Fixtur, motorfästen
0780	28	82 91 973	4, 11), B2	1	Driving aligner assy	Dragriktare kpl
0800	29	82 90 801	4, 11)	1	Lever	Hävarm
0820	30	82 90 256	4, 11)	1	Driver head	Draghuvud
0840	31	82 90 330	4, 11)	1	Pressure head	Tryckhuvud
0860	32	82 90 264	4, 11)	1	Trolley	Vagn
0880	33	82 90 371	4, 11)	1	Shaft	Åxel
0900	34	82 90 520	4, 11)	2	Link roller	Länkrulle
0920	35	82 90 538	4, 11)	2	Iron wheel	Järnhjul
0940	36	82 90 405	4, 11)	2	Anchorage head	Förankringshuvud
0960	37	82 91 288	11)	1	Fastening yoke	Förankringsbygel
0980	38	82 90 173	4, 11)	1	Pressure piece	Tryckbalk
1000	39	82 91 270	11)	1	Safety chain	Säkerhetskedja
1020	44	82 90 389	4, 11), B2	1	Sleeve for Bahco and Nike hydraulic equipment	Hylsa för Bahco och Nike hydraulutrustning
1040	45	82 91 320	11), B2	1	Pulling chain	Dragkätting
1060	46	82 91 338	11), B2	1	Hook	Krok
1080	47	82 91 346	11), B2	1	Link	Länk
1100	48	82 91 361	B2	2	Anchorage chain	Förankringskätting
1120	49	82 91 379	11), B2	2	Hook	Krok
1140	50	82 91 387	11), B2	2	Link	Hammerlök länk
1160	55	82 90 272	4, 11), B2	1	Trestle assy set	Pallbock kpl sats
1180	56	82 90 694	4, 11)	4	Trestle	Benstativ
1200	57	82 90 546	4, 11)	8	Link roll	Länkrulle
1220	58	82 90 702	4, 11)	2	Yoke	Ök
1240	59	82 90 280	4, 11)	4	Wood plate	Träplatta


4. Also for Saab 95/96
11. Class A 1 as a separate tool

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4.	1-B12
ISAT	
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

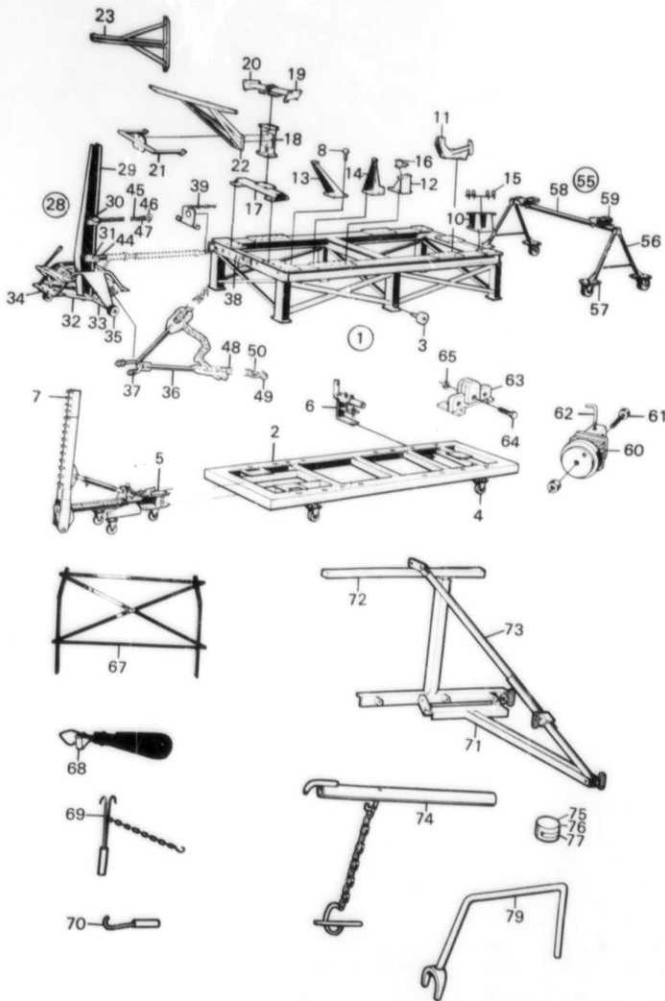

R 6211-90

1-C04

Tools
Car body

Verktyg
Kaross

0500	Pos	Part No./Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
1400	60	82 92 161			B2	1	Aligner bracket	Dragriktfäste
1420	61	82 92 179				1	Screw	Skruv
1440	62	82 92 187				1	Lock pin	Låspinne
1460	63	82 92 237				1	Aligner bracket	Dragriktfäste
1480	64	82 92 260				1	Screw	Skruv
1500	65	82 92 278				1	Nut	Mutter
1520	67	82 90 637			B1	1	Fixture, front fender	Fixtur, framskärm
1540	68	82 91 023			A2	1	Inst. tool, window moulding	Monteringsverktyg, deko- rationslist, gläsruta
1560	71	78 84 166			4), B1	1	Holder, door	Hållare, dörr
1680	72	82 90 561			B1	1	Holder, door	Hållare, dörr
1700	73	78 84 182			4), B1	1	Stay, holder, door	Stag, hållare, dörr
1720	74	82 91 577			A2	1	Tool, spring, trunk lid	Verktyg, fjäder bagageglucka
1740	75	82 91 767			4), A2	1	Pad, front window	Mellanlägg, frontruta
1760	76	82 91 775			4), A2	1	Pad, side window	Mellanlägg, sidoruta
1800	77	82 91 551			A2	1	Pad, rear window	Mellanlägg, bakruta
1840	79	84 71 039			A2	1	Installing tool, door lock	Monteringsverktyg, dörrlås
1960								

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Instruments	2-G02
10	Numerical register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4, ISAT	1-B12
Special tools, transmission (man. gear box) part 1.	1-B14
Special tools, transmission (man. gear box) part 2.	1-B18
Special tools, transmission (man. gear box) part 3.	1-B20
Special tools, chassis part 1.	1-B22
Special tools, chassis, part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

4. Also for Saab 95/96

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R6211

Page
Folia 01-027

1-C06

Tools
Miscellaneous

Verktyg
Övriga






MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical	
	register	2-H02

1 GROUP INDEX

Special tools classifying	
Special tools, engine part 1.	1-B06
Special tools, engine part 2.	1-B08
Special tools, engine part 3.	1-B10
Special tools, engine part 4,	
ISAT	1-B12
Special tools, transmission	
(man. gear box) part 1.	1-B14
Special tools, transmission	
(man. gear box) part 2.	1-B18
Special tools, transmission	
(man. gear box) part 3.	1-B20
Special tools, chassis	
part 1.	1-B22
Special tools, chassis,	
part 2.	1-B24
Special tools, car body	1-C02
Special tools, miscellaneous	1-C06

0650	Pos	Part No./Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
	1	78 43 303		4), A1	1	Pliers, hose clamp	Tång, slangklamma	
0020	2	78 40 937		4), A1	1	Pliers for splice crimping	Tång för kontaktpressning	
0040	3	78 60 695		4), A1	1	Pliers for uninsulated cable terminal	Tång för oisolerade kabelskor	
0060	4	78 60 703		4), A1	1	Pliers for uninsulated Douglas plug	Tång för oisolerade rundstift	
0080	6	85 80 029		2), A2	1	Holder, rotor	Hållare, rotor	
0100	7	89 94 782		45/3006624	X	Grease, front wheel brake	Fett, framhjulsbroms	
0120	7	84 86 276		COMPLETE WITH HANDTOOLS	X	Grease, door lock	Fett, dörrlås	
0140	8	88 18 908			X	Tool trolley	Verktygsvagn	6

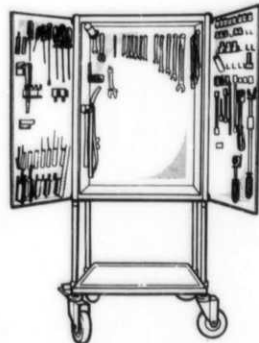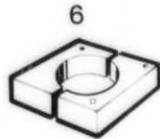

F2456 - 90

2. Also for automatic transmission
4. Also for Saab 95/96



Motor
Engine
Motor
Moteur
Motor

0050
0020
0040
0060
0080
0100
0120
0140
0160
0180
0200
0220
0240
0260
0280
0320
0340
0360
0380
0420
0440
0460
0480
0500
0520
0540
0560
0580
0600
0620
0640
0660
0680
0700
0720
0740
0760
0780
0800
0820
0840
0860
0880
0900
0920
0940
0960
0980
1000
1020
1040
1060
1080
1100
1120
1140
1160
1180
1200
1220
1240
1260
1280
1300
1320
1340
1360
1400
1420
1440
1460
1480
1500
1520
1540
1560
1580
1600
1620
1640
1660
1680
1700
1720
1740
1760
1780
1800
1820
1840
1860
1880
1900
1920
1940
1960
1980

1-D02

TABLE OF CONTENTS

Engine body		
Engine suspension	2 : 5	1-D06
Cylinder head	2 : 7	1-D08
Cylinder block	2 : 11	1-D12
Short engine	2 : 13	1-D14
Transmission	2 : 15	1-D16
Crankshaft, piston, etc	2 : 17	1-D18
Lubrication system		
Oil pump, oil filter	2 : 19	1-D20
Fuel system		
Carburetor SOLEX	2 : 21	1-D22
Carburetor PIERBURG	2 : 25	1-E02
Air cleaner	2 : 27	1-E04
Fuel pump	2 : 29	1-E06
Fuel tank	2 : 31	1-E08
Inlet and exhaust system		
Inlet manifold, etc	2 : 33	1-E10
Exhaust manifold, etc	2 : 35	1-E12
Exhaust gas recirculation (EGR)	2 : 37	1-E14
Mufflers, exhaust pipe, etc	2 : 39	1-E16
Cooling system		
Radiator, fan, etc	2 : 41	1-E18
Water pump	2 : 43	1-E20
Thermostat	2 : 45	1-E22
Engine control		
Accelerator control, etc	2 : 47	1-E24
Complete sets		
Engine	2 : 49	1-F02

INNEHÅLLSFÖRTECKNING

Motorkropp		
Motorupphängning	2 : 5	1-D06
Cylinderhuvud	2 : 7	1-D08
Cylinderblock	2 : 11	1-D12
Grundmotor	2 : 13	1-D14
Transmission	2 : 15	1-D16
Vevaxel, kolv, etc	2 : 17	1-D18
Smörjsystem		
Oljepump, oljefilter	2 : 19	1-D20
Bränslesystem		
Förgasare SOLEX	2 : 21	1-D22
Förgasare PIERBURG	2 : 25	1-E02
Luftrenare	2 : 27	1-E04
Bränslepump	2 : 29	1-E06
Bränsletank	2 : 31	1-E08
Inlopps- och avgassystem		
Inloppsrör, etc	2 : 33	1-E10
Avgassamlare, etc	2 : 35	1-E12
Avgasrecirkulation (EGR)	2 : 37	1-E14
Ljuddämpare, avgasrör, etc	2 : 39	1-E16
Kylsystem		
Kylare, fläkt, etc	2 : 41	1-E18
Kylvätskepump	2 : 43	1-E20
Termostat	2 : 45	1-E22
Motorreglage		
Gasreglage	2 : 47	1-E24
Satser		
Motor	2 : 49	1-F02

Motor

Engine

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-D03

INHALTSVERZEICHNIS

Motorumpf		
Motoraufhängung	2 : 5	1-D06
Zylinderkopf	2 : 7	1-D08
Zylinderblock	2 : 11	1-D12
Grundmotor	2 : 13	1-D14
Stirnrad	2 : 15	1-D16
Kurbelwelle, Kolben, usw	2 : 17	1-D18
Schmiersystem		
Ölpumpe, Ölfilter	2 : 19	1-D20
Kraftstoffsystem		
Vergaser SOLEX	2 : 21	1-D22
Vergaser PIERBURG	2 : 25	1-E02
Luftfilter	2 : 27	1-E04
Kraftstoffpumpe	2 : 29	1-E06
Kraftstofftank	2 : 31	1-E08
Einlass- und Auspuffsystem		
Einsaugrohr, usw, Vergasermotor	2 : 33	1-E10
Auspuffkrümmer, usw	2 : 35	1-E12
Abgaszirkulation (EGR)	2 : 37	1-E14
Geräuschdämpfer, Auspuffrohr, usw	2 : 39	1-E16
Kühlsystem		
Kühler, Lüfter, usw	2 : 41	1-E18
Wasserpumpe	2 : 43	1-E20
Thermostat	2 : 45	1-E22
Motorbedienungsorgane		
Gasgestänge	2 : 47	1-E24
Komplettsätze		
Motor	2 : 49	1-F02

TABLE DE MATIERES

Corps de moteur		
Supports de moteur	2 : 5	1-D06
Culasse	2 : 7	1-D08
Bloc-cylindres	2 : 11	1-D12
Moteur de base	2 : 13	1-D14
Distribution	2 : 15	1-D16
Vilebrequin, pistons, etc	2 : 17	1-D18
Système de graissage		
Pompe à huile, filtre à huile	2 : 19	1-D20
Système de carburant		
Carburateur SOLEX	2 : 21	1-D22
Carburateur PIERBURG	2 : 25	1-E02
Epurateur d'air	2 : 27	1-E04
Pompe à essence	2 : 29	1-E06
Réservoir d'essence, conduites à essence, moteur à carburateur	2 : 31	1-E08
Système d'admission et d'échappement		
Collecteur d'admission, etc, moteur à carburateur	2 : 33	1-E10
Collecteur d'échappement, etc	2 : 35	1-E12
Recyclage des gaz d'échappement (EGR)	2 : 37	1-E14
Silencieux, tuyau d'échappement, etc	2 : 39	1-E16
Système de refroidissement		
Radiateur, ventilateur	2 : 41	1-E18
Pompe à eau	2 : 43	1-E20
Thermostat	2 : 45	1-E22
Commandes du moteur		
Commande d'accélérateur	2 : 47	1-E24
Jeux complets		
Moteur	2 : 49	1-F02

1-D04

SUMARIO

Cuerpo del motor		
Soportes del motor	2 : 5	1-D06
Culata	2 : 7	1-D08
Bloque de cilindros	2 : 11	1-D12
Motor de base	2 : 13	1-D14
Distribución	2 : 15	1-D16
Cigüeñal, pistones, etc	2 : 17	1-D18
Sistema de engrase		
Bomba de aceite, filtro de aceite	2 : 19	1-D20
Sistema de combustible		
Carburador SOLEX	2 : 21	1-D22
Carburador PIERBURG	2 : 25	1-E02
Depurador de aire	2 : 27	1-E04
Bomba de combustible	2 : 29	1-E06
Depósito de combustible	2 : 31	1-E08
Sistema de admisión y de escape		
Colector de admisión, etc, motor de carburador	2 : 33	1-E10
Colector de escape, etc	2 : 35	1-E12
Recirculación de gases de escape (EGR)	2 : 37	1-E14
Silencioso, tubo de escape, etc	2 : 39	1-E16
Sistema de refrigeración		
Radiador, ventilador, etc	2 : 41	1-E18
Bomba de agua	2 : 43	1-E20
Termostato	2 : 45	1-E22
Mandos del motor		
Mando de acelerador	2 : 47	1-E24
Juegos completos		
Motor	2 : 49	1-F02

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX


Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-D06

Engine body
Engine suspension

Motorropp
Motorupphängning

MASTER INDEX

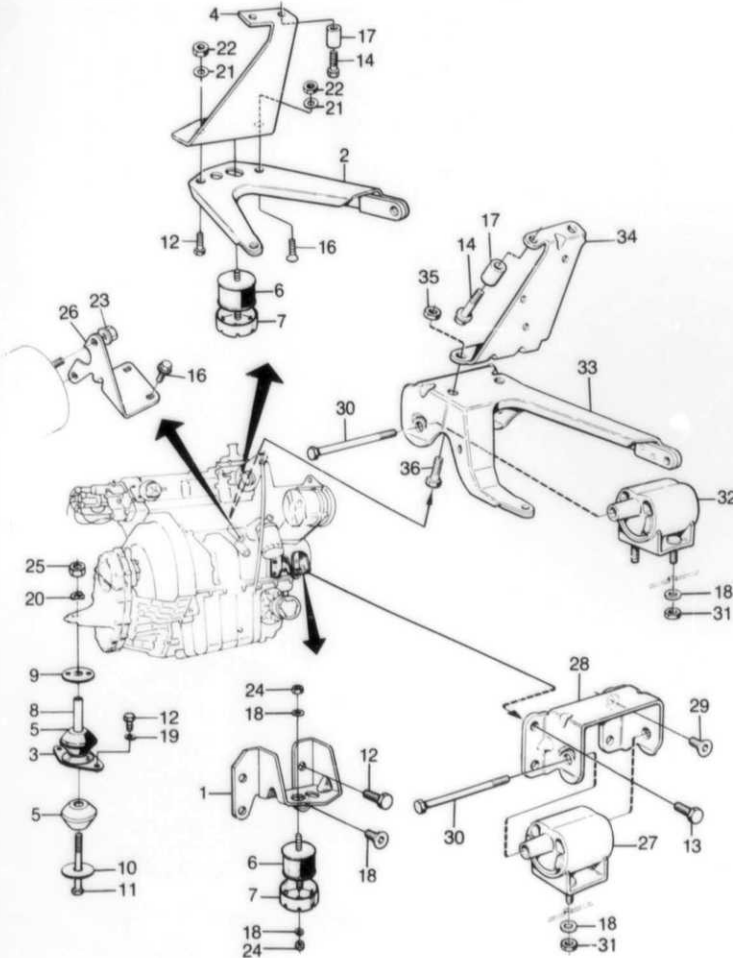

R 9303-90

0100	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010	1	93 39 581	14), LH	1	Engine support	Motorfäste	5
0020	2	83 18 719	14), RH	1	Engine support	Motorfäste	4
0030	3	83 35 028		1	Bracket	Fäste	6
0040	4	93 39 573	14)	1	Engine stay	Motorstag	5
0050	5	75 47 227	3), (8379281)	2	Rubber cushion	Gummikudde	3
0060	5	75 47 227	4)	2	Rubber cushion	Gummikudde	3
0070	6	83 15 780	14)	2	Engine cushion	Motorfäste	5
0080	7	83 79 356	14)	2	Stopping disk	Anslagskopp	3
0090	8	93 48 160		1	Spacer sleeve	Distanshylsa	4
0100	9	83 79 299	UPPER	1	Washer	Bricka	5
0110	10	83 79 307	LOWER	1	Washer	Bricka	4
0120	11	79 03 552		1	Screw	Skruv	5
0130	12	80 82 935		6	Screw	Skruv	5
0140	13	79 67 938		2	Screw	Skruv	5
0150	14	80 83 941		2	Screw	Skruv	5
0160	16	80 56 186		1	Screw	Skruv	5
0170	17	83 56 859		2	Sleeve	Hylsa	6
0180	18	80 73 108	14)	4	Washer	Bricka	5
0190	19	80 29 985	14)	2	Washer	Bricka	5
0200	20	79 65 577		1	Washer	Bricka	5
0210	21	80 29 985		2	Washer	Bricka	5
0220	22	80 74 106	14)	2	Nut	Mutter	5
0230	23	79 73 365		2	Nut	Mutter	5
0240	24	80 29 779	14)	4	Nut	Mutter	5
0250	25	79 63 416		1	Nut	Mutter	5
0260	26	75 32 161	(7513823)	1	Stay, starter	Startmotorstag	6
0270	27	75 47 169	15), LH	1	Engine cushion	Motorfäste	5
0280	28	93 23 759	15), LH	1	Engine support	Motorfäste	5
0290	29	93 16 415	15)	2	Screw	Skruv	5
0300	30	75 43 432	15)	2	Screw	Skruv	5
0310	31	80 73 538	15)	2	Nut	Mutter	5
0320	32	75 47 177	15), RH	1	Engine cushion	Motorfäste	5
0330	33	93 24 930	15), RH	1	Engine support	Motorfäste	5
0340	34	93 23 742	15)	1	Engine stay	Motorstag	5
0350	35	80 29 779	15)	2	Nut	Mutter	5
0360	36	80 83 123	15)	2	Screw	Skruv	5
0370		93 23 809		X	Repair kit, engine cushion front	Sats, främre motor-kudde	3
0380			see page 2-059, 1-F12				

3. Ch. -B6004904
4. Ch. B6004905-
14. Ch. -H6000576
15. Ch. H6000577-

SAAB genuine parts
original manufacturer

SAAB 90 M85-87

1990-02


R9303

Page 02 - 005

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

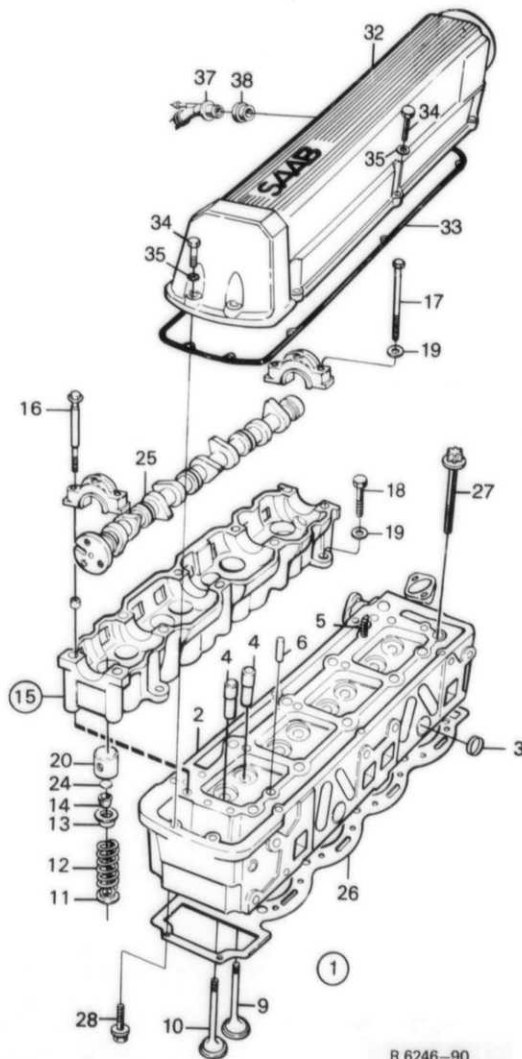

R 6246-90

1-D08

Engine body
Cylinder head

Motorkropp
Cylindrhuvud


0150	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0035	1	75 21 180				1	Cylinder head assy	Cylindrhuvud kpl med	6
0036							with valves	ventiler	
0045	2	75 21 198				1	Cylinder head	Cylindrhuvud	5
0050	3	81 23 218				2	Plug	Plugg	3
0060	4	83 50 944			STD	8	Valve guide	Ventilstyrning	2
0065	4	75 87 363			OVERSIZE	8	Valve guide	Ventilstyrning	2
0070	5	80 34 761				1	Pin	Pinne	3
0080	6	80 34 662				1	Pin	Pinne	3
0110	9	83 46 884			INTAKE	4	Valve	Ventil	3
0120	10	83 62 295			EXHAUST	4	Valve	Ventil	3
0130	11	83 46 900				8	Retainer lower	Ventilfjäderbricka, undre	4
0150	12	83 51 800				8	Valve spring	Ventilfjäder	3
0160	13	83 46 926				8	Retainer	Ventilfjäderbricka	4
0170	14	83 47 262				16	Lock	Ventilknaster	2
0180	15	93 08 453				1	Camshaft bearing assy	Kamaxelbrygga kpl	5
0190	16	83 56 396				2	Screw	Skruv	5
0200	17	83 48 401				8	Screw	Skruv	5
0210	18	80 83 933				2	Screw	Skruv	5
0220	19	80 29 985				10	Washer	Bricka	5
0230	20	83 46 942				8	Valve depressor	Ventiltryckare	2
0240	24	83 08 215			1,78 MM	X	Adjusting pallet	Justerbricka	2
0250	24	83 08 223			1,83 MM	X	Adjusting pallet	Justerbricka	2
0260	24	83 08 231			1,88 MM	X	Adjusting pallet	Justerbricka	2
0270	24	83 08 249			1,93 MM	X	Adjusting pallet	Justerbricka	2
0280	24	83 08 256			1,98 MM	X	Adjusting pallet	Justerbricka	2
0290	24	83 08 264			2,03 MM	X	Adjusting pallet	Justerbricka	2
0300	24	83 08 272			2,08 MM	X	Adjusting pallet	Justerbricka	2
0310	24	83 08 280			2,13 MM	X	Adjusting pallet	Justerbricka	2
0320	24	83 08 298			2,18 MM	X	Adjusting pallet	Justerbricka	2
0330	24	83 08 306			2,24 MM	X	Adjusting pallet	Justerbricka	2
0340	24	75 24 275			2,27 MM	X	Adjusting pallet	Justerbricka	2
0350	24	75 24 291			2,29 MM (8349169)	X	Adjusting pallet	Justerbricka	2
0360	24	75 24 317			2,31 MM	X	Adjusting pallet	Justerbricka	2
0370	24	75 24 333			2,33 MM (8349185)	X	Adjusting pallet	Justerbricka	2
0380	24	75 24 358			2,35 MM	X	Adjusting pallet	Justerbricka	2
0390	24	75 24 374			2,37 MM (8349201)	X	Adjusting pallet	Justerbricka	2
0400	24	75 24 390			2,39 MM	X	Adjusting pallet	Justerbricka	2
0410	24	75 24 416			2,41 MM (8349227)	X	Adjusting pallet	Justerbricka	2
0420	24	75 24 432			2,43 MM	X	Adjusting pallet	Justerbricka	2
0430	24	75 24 457			2,45 MM (8349243)	X	Adjusting pallet	Justerbricka	2
0440	24	75 24 473			2,47 MM	X	Adjusting pallet	Justerbricka	2
0450	24	75 24 499			2,49 MM (8349268)	X	Adjusting pallet	Justerbricka	2
0460	24	75 24 515			2,51 MM	X	Adjusting pallet	Justerbricka	2
0480	24	75 24 531			2,53 MM (8349284)	X	Adjusting pallet	Justerbricka	2
0485	24	75 24 556			2,55 MM	X	Adjusting pallet	Justerbricka	2
0490	24	75 24 572			2,57 MM (8349300)	X	Adjusting pallet	Justerbricka	2
0500	24	75 24 598			2,59 MM	X	Adjusting pallet	Justerbricka	2
0510	24	75 24 614			2,61 MM (8349326)	X	Adjusting pallet	Justerbricka	2
0520	24	75 24 630			2,63 MM	X	Adjusting pallet	Justerbricka	2
0530	24	75 24 655			2,65 MM (8349342)	X	Adjusting pallet	Justerbricka	2
0540	24	75 24 671			2,67 MM	X	Adjusting pallet	Justerbricka	2
0550	24	75 24 697			2,69 MM (8349367)	X	Adjusting pallet	Justerbricka	2
0560	24	75 24 713			2,71 MM	X	Adjusting pallet	Justerbricka	2
0570	24	75 24 739			2,73 MM (8349383)	X	Adjusting pallet	Justerbricka	2
0580	24	75 24 754			2,75 MM	X	Adjusting pallet	Justerbricka	2
0590	24	75 24 770			2,77 MM (8355042)	X	Adjusting pallet	Justerbricka	2
0600	24	75 24 796			2,79 MM	X	Adjusting pallet	Justerbricka	2
0610	24	75 24 812			2,81 MM (8355067)	X	Adjusting pallet	Justerbricka	2
0620	24	75 24 838			2,83 MM	X	Adjusting pallet	Justerbricka	2
0630	24	75 24 853			2,85 MM (8355083)	X	Adjusting pallet	Justerbricka	2
0760	25	93 54 705			-1986	1	Camshaft	Kamaxel	5
0765	25	75 63 141			-1987-	1	Camshaft	Kamaxel	5
0770	26	75 05 217			-1986	1	Gasket	Packning	2
0772	26	75 85 037			-1987-	1	Gasket	Packning	2
0785	27	75 18 343				10	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

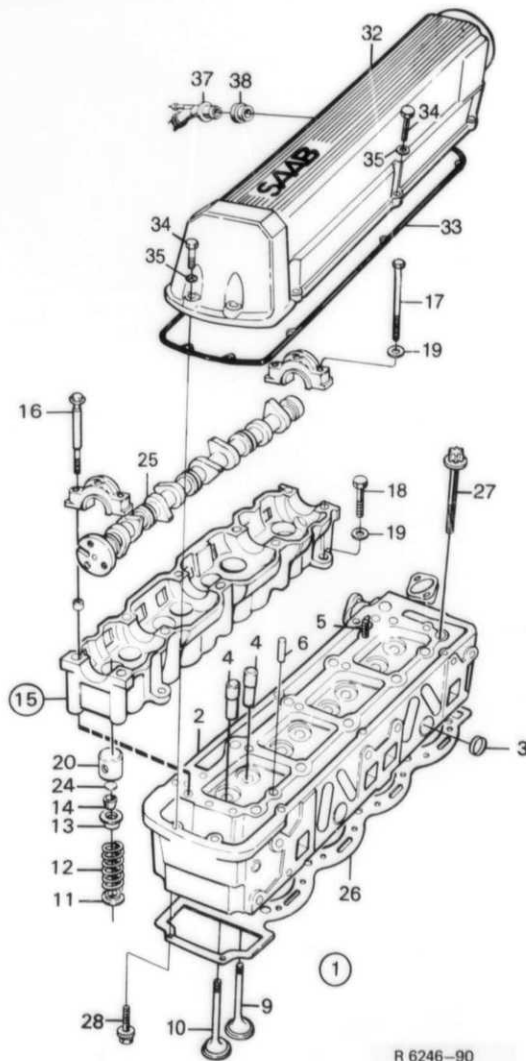

R 6246-90

1-D10

Engine body
Cylinder head

Motorkropp
Cylinderhuvud

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0150						
0795	28	81 25 189		2	Screw	Skruv
0825	32	93 58 045		1	Camshaft cover	Kamaxelkåpa
0830	33	93 55 991		1	Gasket	Packning
0840	34	80 97 941		8	Screw	Skruv
0850	35	80 28 951		8	Washer	Bricka
0880	37	83 60 240		1	Nipple	Nippel
0890	38	83 60 257	-1986	1	Bushing	Bussning
0892	38	75 15 190	1987-	1	Bushing	Bussning
0895						
0900						
0901						
0910	93 37 213		WHOLE ENGINE see page 2-049, 1-F02	X	Gasket set	Packningssats
0911	93 37 239		DECARBONIZATION see page 2-049, 1-F02	X	Gasket set	Packningssats
0920	88 17 728		see page 2-053, 1-F06	X	Valve adjustment set	Ventiljustersats

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-D12


Engine body
Cylinder block

Motorokropp
Cylinderblock

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
2 GROUP INDEX		
4	Engine body	1-D06
5	Lubrication system	1-D20
5	Fuel system	1-D22
5	Inlet and exhaust system	1-E10
5	Cooling system	1-E18
5	Engine control	1-E24
5	Complete sets	1-F02

Q200	Pos	Part No/An nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	75 16 826			1	Cylinder block assy	Cylinderblock kpl	6
0060	2	83 47 999			2	Seal washer	Tättningsbricka	3
0080	3	81 23 218			1	Seal washer	Tättningsbricka	3
0100	4	83 52 502			6	Screw	Skruv	5
0120	5	93 08 537		MAIN BEARING 2 AND 3	4	Screw	Skruv	5
0140	6	75 64 230		(8123788)	1	Plug	Propp	5
0160	7	83 48 047			1	Plug	Propp	5
0180	8	75 64 222		(8123721)	2	Plug	Propp	5
0220	9	81 24 208			1	Gasket	Packning	4
0240	10	83 26 712			2	Gasket	Packning	5
0280	15	75 00 622		-1986	1	Cap	Lock	3
0285	15	75 81 259		1987-	1	Cap	Lock	3
0300	16	75 07 833		-1986	1	Gasket	Packning	4
0305	16	75 23 897		1987-	1	Gasket	Packning	4
0320	17	81 25 189			3	Screw	Skruv	5
0340	18	83 46 470			2	Guide sleeve	Styrhylsa	5
0360	19	83 66 007			4	Pin	Pinne	5
0380	20	80 34 761			1	Pin	Pinne	5
0400	21	75 16 255			1	End plate assy	Gavelplatta kpl	5
0420	22	93 50 158			1	Sealing ring	Tättningsring	2
0440	23	75 16 586			1	Gasket	Packning	2
0445	23	75 63 661		1987-	1	Gasket	Packning	4
0460	24	81 25 189			9	Screw	Skruv	5
0480	25	81 25 197			2	Screw	Skruv	5
0500	26	81 25 551			1	Screw	Skruv	5
0510	27	81 25 585			1	Screw	Skruv	5
0530	29	80 73 967			1	Nut	Mutter	5

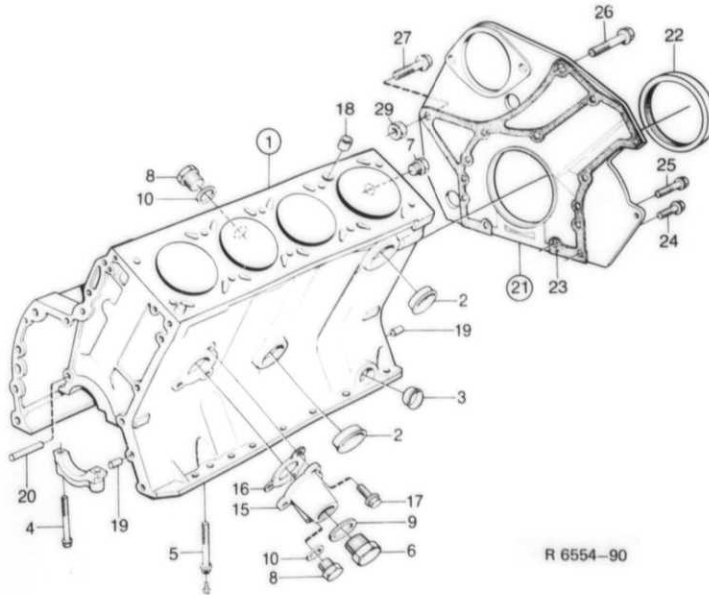

1-D14

Engine body
Short engine

Motorkropp
Grundmotor

Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Ansl	Description	Benämning
0250	75 69 452	5)		1	Short engine	Grundmotor
0030					.Cylinder block	.Cylinderblock
0080					.Crankshaft	.Vevaxel
0100					.Connecting rod	.Vevstake
0120					.Piston	.Kolv
0140					.Cover, transmission	.Transmissionskåpa
0160					.Transmission	.Transmission
0180					.Cover, flywheel	.Svaghjulskåpa
0200					.Belt pulley	.Remskiva
0220					.Oil pump	.Oljepump
0240					.Oil filter	.Oljefilter
0260			-1985		.Water pump	.Vattenpump
0280						

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

5. Belt pulley, water pump and alternator stay must be changed.

1-D16

Engine body
Transmission


Motorkropp
Transmission

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

5	Engine body	1-D06
5	Lubrication system	1-D20
5	Fuel system	1-D22
6	Inlet and exhaust system	1-E10
2	Cooling system	1-E18
3	Engine control	1-E24
4	Complete sets	1-F02

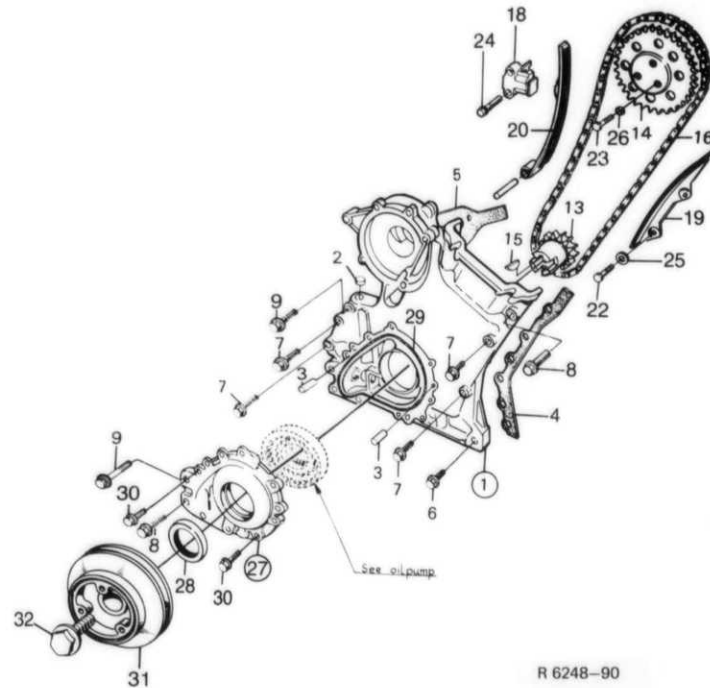

Pos	Part No/An nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0035	1	75 19 358		1	Transmission cover assy	Transmissionskåpa kpl	5
0040	2	81 23 176		1	Plug	Plugg	6
0060	3	80 34 456		2	Pin	Pinne	5
0090	4	75 09 367	-1986	1	Gasket	Packning	2
0092	4	75 63 646	1987-	1	Gasket	Packning	2
0110	5	75 09 375	-1986	1	Gasket	Packning	2
0112	5	75 63 653	1987-	1	Gasket	Packning	2
0120	6	83 56 917		1	Screw	Skruv	5
0150	7	81 25 239		4	Screw	Skruv	5
0170	8	81 25 247		2	Screw	Skruv	5
0185	9	81 25 262		2	Screw	Skruv	5
0210	13	75 18 632		1	Chain wheel	Kedjehjul	4
0220	14	93 06 747	-1986	1	Chain wheel	Kedjehjul	5
0225	14	75 63 166	1987-	1	Chain wheel	Kedjehjul	4
0240	15	83 47 122		1	Key	Kil	5
0270	16	93 59 779		1	Chain	Kedja	3
0290	18	93 58 672		1	Chain tensioner	Kedjesträckare	3
0310	19	75 07 155		1	Chain guide	Kedjestyrning	3
0315	20	93 58 680		1	Chain guide	Kedjestyrning	3
0340	22	80 19 895		2	Screw	Skruv	5
0360	23	80 82 935		3	Screw	Skruv	5
0370	24	81 25 064		2	Screw	Skruv	5
0380	25	80 29 951		2	Washer	Bricka	5
0400	26	80 29 985		3	Washer	Bricka	5
0420	27	75 18 848		1	Pump housing assy	Pumphus kpl	6
0440	28	93 09 204		1	Sealing ring	Tätningssring	2
0460	29	83 69 829		1	O-ring	O-ring	3
0480	30	81 25 049		8	Flange screw	Flansskruv	5
0520	31	75 19 382		1	Belt pulley	Remskiva	4
0540	32	83 48 534		1	Screw	Skruv	5
0550	88 17 405		see page 2-059, 1-F12	X	Set, chain tensioner	Sats, kedjesträckare	3

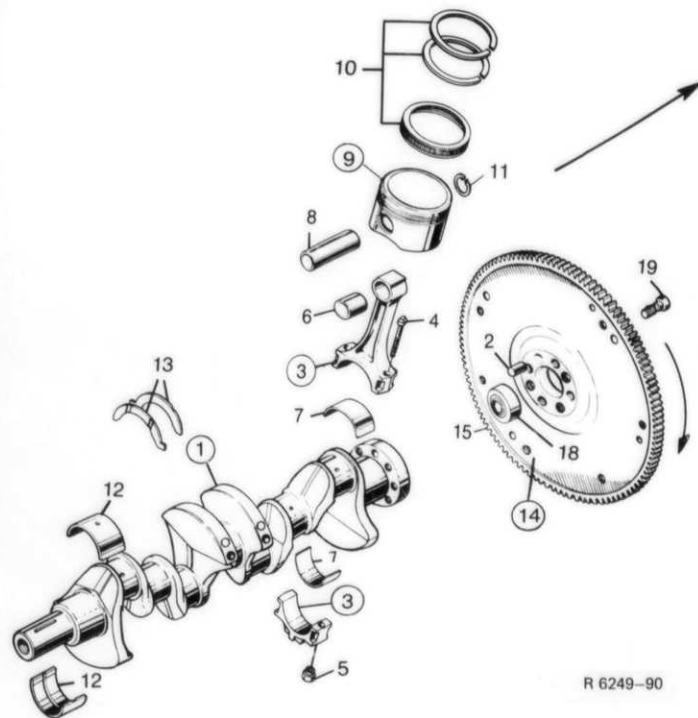

R 6249-90

1-D18

Engine body

Crankshaft, piston, etc

Motorkropp

Vevaxel, kolv, etc

Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/Anst	Description	Benämning
0010	1	75 24 978	-1985, (7521115)	1	Crankshaft assy	Vevaxel kpl
0020	1	75 24 978	1986-16)	1	Crankshaft assy	Vevaxel kpl
0030	1	75 64 701	17)	1	Crankshaft assy	Vevaxel kpl
0040	2	80 34 902	-1985	1	.Pin	.Pinne
0050	2	80 34 928	1986-	1	.Pin	.Pinne
0060	3	75 01 604	16)	4	Connecting rod assy	Vevstake kpl
0070	3	75 62 259	17)	4	Connecting rod assy	Vevstake kpl
0080	4	83 47 106	16)	8	.Bolt	.Bult
0090	4	75 21 255	17)	8	.Bolt	.Bult
0100	5	75 00 739	16)	8	.Nut	.Mutter
0110	5	75 62 275	17)	8	.Nut	.Mutter
0120	6	83 52 734		4	.Bushing	.Bussning
0130	7	83 47 650	RED	5	Connecting rod bearing	Vevstakslager
0140	7	83 55 349	BLUE	5	Connecting rod bearing	Vevstakslager
0150	7	83 49 938	UNDERSIZE 0,25MM, YELLOW	8	Connecting rod bearing	Vevstakslager
0160	7	83 55 356	UNDERSIZE 0,25MM, GREEN	8	Connecting rod bearing	Vevstakslager
0170	7	83 49 946	UNDERSIZE 0,50MM, WHITE	8	Connecting rod bearing	Vevstakslager
0180	7	83 55 364	UNDERSIZE 0,50MM, BROWN	8	Connecting rod bearing	Vevstakslager
0190	7	83 49 953	UNDERSIZE 0,75MM	8	Connecting rod bearing	Vevstakslager
0200	7	83 49 961	UNDERSIZE 1,0MM	8	Connecting rod bearing	Vevstakslager
0210	8	83 46 983		4	Piston tap	Kolv tapp
0220	9	75 20 612	CLASS AB	4	Piston assy	Kolv kpl
0230	9	75 20 620	CLASS B	4	Piston assy	Kolv kpl
0240	9	75 20 638	CLASS C	4	Piston assy	Kolv kpl
0250	9	75 20 646	OVERSIZE 0,50MM	4	Piston assy	Kolv kpl
0260	9	75 20 653	OVERSIZE 1,0MM	4	Piston assy	Kolv kpl
0270	10	75 20 513	STD	4	.Kit, piston rings	.Sats, kolvringar
0280			see page 2-057, 1-F10			
0290	10	75 20 521	OVERSIZE 0,50MM	4	.Kit, piston rings	.Sats, kolvringar
0300			see page 2-057, 1-F10			
0310	10	75 20 539	OVERSIZE 1,0MM	4	.Kit, piston rings	.Sats, kolvringar
0320			see page 2-057, 1-F10			
0330	11	83 47 577		8	Lock ring	Låsring
0340	12	83 50 936	RED	10	Main bearing half	Ramlagerhalva
0350	12	83 55 315	BLUE	10	Main bearing half	Ramlagerhalva
0360	12	83 50 977	UNDERSIZE 0,25MM, YELLOW	10	Main bearing half	Ramlagerhalva
0370	12	83 55 323	UNDERSIZE 0,25MM, GREEN	10	Main bearing half	Ramlagerhalva
0380	12	83 50 985	UNDERSIZE 0,50MM, WHITE	10	Main bearing half	Ramlagerhalva
0390	12	83 55 331	UNDERSIZE 0,50MM, BROWN	10	Main bearing half	Ramlagerhalva
0400	12	83 50 993	UNDERSIZE 0,75MM	10	Main bearing half	Ramlagerhalva
0410	12	83 51 009	UNDERSIZE 1,0MM	10	Main bearing half	Ramlagerhalva
0420	13	83 47 270		2	Thrust washer	Tryckbricka
0430	14	83 62 386		1	Flywheel assy	Svånghjul kpl
0440	15	83 65 058		1	.Ring gear	.Startkrans
0450	18	83 46 868		1	Ball bearing	Kullager
0460	19	75 61 749	-1985, (9314873)	7	Screw	Skruv
0470	19	75 61 749	1986-	7	Screw	Skruv

16. Engine -H20686


17. Engine H20687-

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

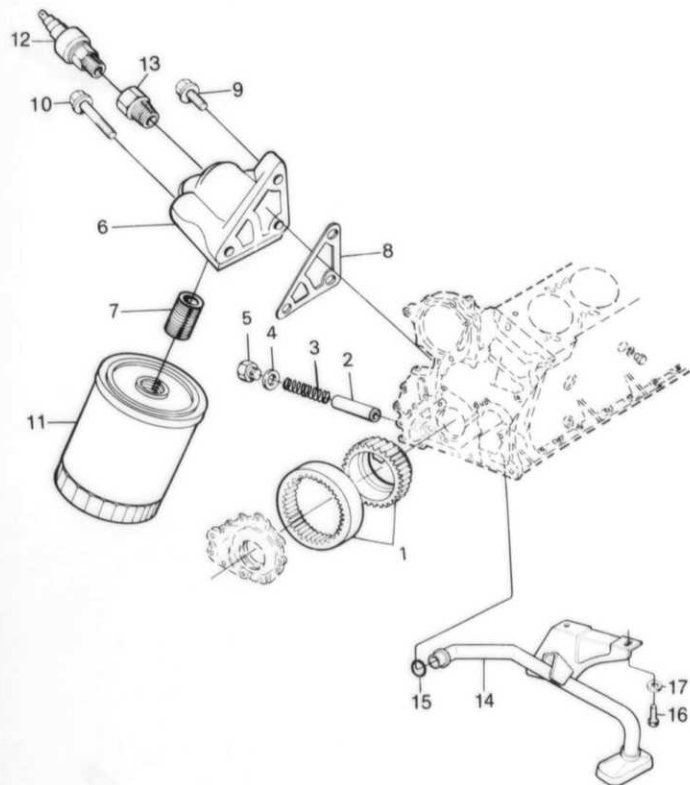

R 7365-90

1-D20

Lubrication system
Oil pump, oil filter

Smörjsystem
Oljepump, oljefilter


Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0400	1	88 17 561		see page 2-057, 1-F10	1	Kit, pump wheel	Sats, pumphjul
0030	2	75 08 328			1	Piston	Kolv
0050	3	93 09 998			1	Spring	Fjäder
0060	4	93 55 389			1	Sealing washer	Tätningssbricka
0090	5	93 10 004			1	Plug	Propp
0100	6	75 05 449		-1985	1	Spacing piece	Mellanstycke
0120	6	75 60 048		1986-	1	Spacing piece	Mellanstycke
0135	7	83 48 609			1	Joint pipe	Skarvrör
0240	8	93 08 180		-1986	1	Gasket	Packning
0260	8	75 66 433		1987-	1	Gasket	Packning
0282	9	81 25 197			1	Screw	Skruv
0290	9	81 25 304			2	Screw	Skruv
0330	10	93 09 576			1	Oil filter	Oljefilter
0360	11	93 09 386		-1985	1	Oil warning contact	Oljetrycksvakt
0380	12	75 22 402		1986-	1	Oil warning contact	Oljetrycksvakt
0390	13	75 64 248		-1985, USE WITH 7522402	1	Adapter	Adapter
0400	14	75 26 874			1	Oil suction line	Oljesugrör
0440	15	79 72 698			1	O-ring	O-ring
0460	16	80 82 919			2	Screw	Skruv
0480	17	80 29 985			2	Washer	Bricka
1000		88 18 528		1985	X	Kit, oil warning contact	Sats, oljetrycksgivare
1010		see page 2-059, 1-F12					
1020		88 17 348		see page 2-059, 1-F12	X	Service package	Servicesats

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

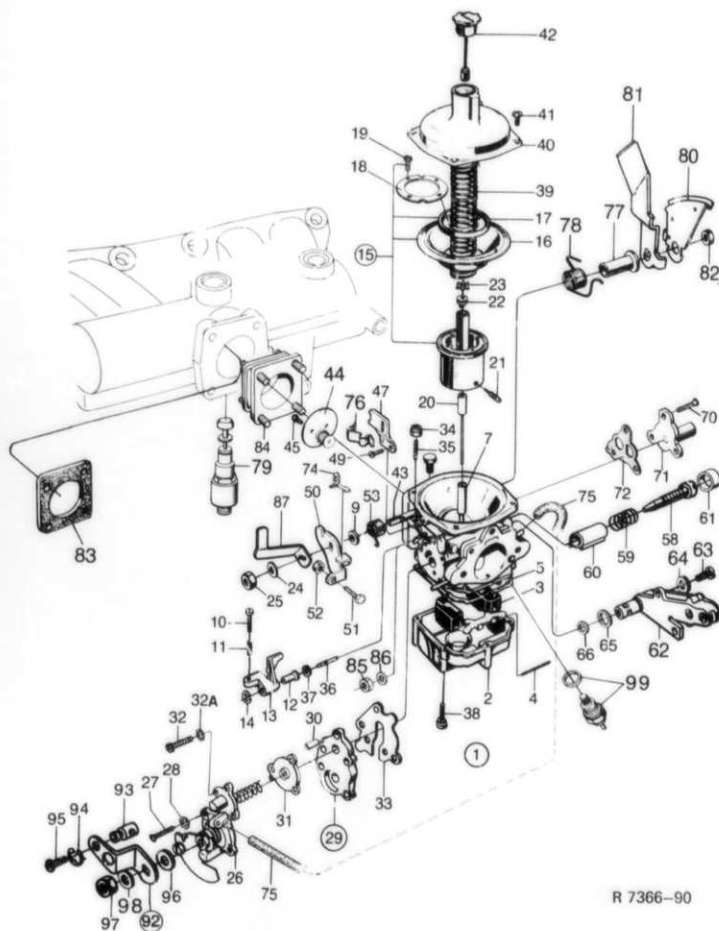

R 7366-90

1-D22

Fuel system
Carburetor
SOLEX

Bränslesystem
Förgasare
SOLEX


MASTER INDEX

0450	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 17 907	8)	1	Carburetor assy	Förgasare kpl	5
0020	1	75 17 956	9)	1	Carburetor assy	Förgasare kpl	5
0030	2	83 63 894		1	Float chamber	Flottörhus	5
0040	3	83 10 393		1	Float	Flottör	5
0050	4	83 05 807		1	Spindle, float	Axel, flottör	5
0060	5	83 05 849		1	Gasket	Packning	4
0070	7	83 65 850		1	Nut	Mutnstycke	4
0080	9	83 66 809		1	Washer	Bricka	4
0090	10	83 61 743		1	Idling screw	Torgångsskruv	5
0100	11	83 61 768		1	Spring	Fjäder	5
0110	12	83 61 735		1	Bushing	Bussning	5
0120	13	83 66 411		1	Lever	Håvarm	5
0130	14	83 61 776		1	Lock ring	Låsring	5
0140	15	93 06 317		1	Air valve	Förgasarkolv	5
0150	16	83 88 670		1	Diaphragm	Membran	1
0160	17	83 51 330		1	Retainer, diaphragm	Hållare, membran	6
0170	18	83 05 633		1	Lock washer, diaphragm	Låsbricka, membran	6
0180	19	83 05 641		4	Screw	Skruv	5
0190	20	83 66 312		1	Fuel needle	Bränslenål	5
0200	21	83 64 200		1	Screw, fuel needle	Skruv, bränslenål	5
0210	22	93 08 792		1	Needle adjusting screw	Justerskruv, bränslenål	3
0220	23	83 64 192		1	Retaining clip	Låsclip	5
0230	24	93 05 328		1	Washer	Bricka	5
0240	25	83 05 344		1	Nut	Mutter	5
0250	26	75 21 669		1	Choke	Choke	5
0260	27	93 52 071		2	Screw, choke	Skruv, choke	5
0270	28	83 52 387		2	Washer	Bricka	5
0280	29	75 21 651		1	Modulator choke	Modulerande choke	6
0290	30	75 08 732		1	Guide sleeve	Styrhylsa	5
0300	31	75 09 136		1	Diaphragm	Membran	4
0310	32	79 72 789		3	Screw	Skruv	5
0320	32A	75 15 802		3	Washer	Bricka	5
0330	33	75 88 809		1	Gasket	Packning	4
0340	34	83 64 069		1	Lock nut	Låsmutter	3
0350	35	83 64 051		1	Adjusting screw	Justerskruv	5
0360	36	93 55 777		1	Spindle	Axel	5
0370	37	93 56 114		1	Washer	Bricka	5
0380	38	83 69 902		6	Screw with washer	Skruv med bricka	5
0390	39	83 05 658		1	Spring	Fjäder	6
0400	40	83 05 656		1	Cover	Lock	6
0410	41	83 08 892		4	Screw with washer	Skruv med bricka	5
0420	42	93 59 142		1	Oil damper	Dämpkolv	5
0430	43	83 61 602		1	Spindle, throttle	Spjällaxel	5
0440	44	75 60 915		1	Throttle	Spjäll	5
0450	45	83 05 369		2	Screw, throttle	Skruv, spjäll	5
0460	47	93 13 081		1	Bracket, starter control	Hållare, kallstartreglage	6
0470	47	75 61 491		1	Bracket	Fäste	6
0480	49	83 22 364		1	Screw	Skruv	5
0490	50	93 52 105		1	Stop arm	Stopparm	6
0500	51	83 05 294		1	Fast idling screw	Snabbtorgångsskruv	5
0510	52	83 05 302		1	Nut	Mutter	5
0520	53	83 66 304		1	Spring, throttle return	Returfjäder	5
0530	58	75 03 188	SW AND CH	1	CO - SCREW	CO - SKRUV	5
0540	59	75 02 958	SW AND CH	1	Spring	Fjäder	3
0550	60	75 02 966	SW AND CH	1	Sleeve	Hylsa	6
0560	61	75 02 974	CH	1	Plug	Plugg	5
0570	62	93 07 778		1	Temperature compensator	Temperaturkompensator	5
0580	63	83 09 080		2	Screw	Skruv	5
0590	64	83 09 098		2	Washer	Bricka	5
0600	65	83 09 064		1	Sealing washer	Tätningbricka	4
0610	66	83 09 072		1	Sealing washer	Tätningbricka	4

8. For cars without EGR
9. For cars with EGR

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

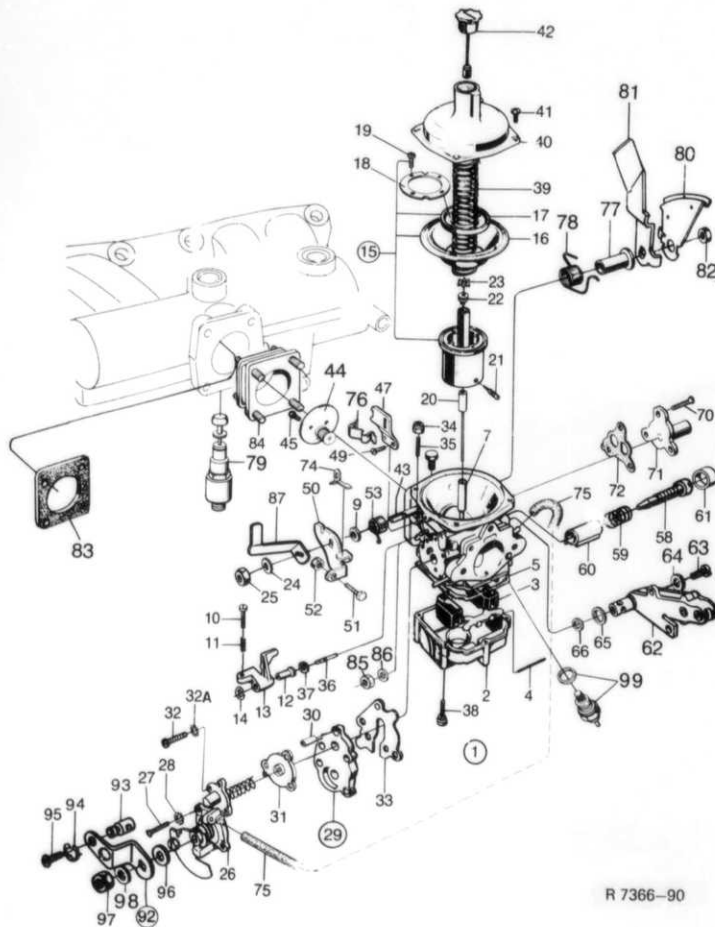

R 7366-90

1-D24

Fuel system
Carburetor
SOLEX

Bränslesystem
Förgasare
SOLEX


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0450						
0620	70	83 69 654	SW	3	„Screw	„Skruv
0630	71	83 69 910	SW	1	„Spring retainer	„Fjäderhållare
0640	74	93 10 186		1	„Clip	„Fjäder
0650	75	75 21 677		1	Hose	Slang
0660	76	83 52 395		1	Clip	„Fjäder
0670	77	83 15 392		1	Sleeve	Hylsa
0680	78	83 55 026		1	Spring	Fjäder
0990	79	93 15 466		1	Valve	Ventil
0700	80	93 09 261		1	Cam plate	Kamplatta
0710	81	83 13 793		1	Lever	Hävarm
0720	82	80 74 288		1	Nut	Mutter
0730	83	83 68 334	1985	1	Washer, insulating	Isoleringsbricka
0740	84	75 62 077	1986-	1	Flange	Flans
0750	85	80 74 106	1985	4	Nut	Mutter
0760	85	81 25 882	1986-	8	Nut	Mutter
0770	86	80 29 985	1985	4	Washer	Bricka
0780	87	93 13 131	1985	1	Lever	Hävarm kpl
0790	92	83 22 141		1	Lever assy	
0800	93	83 22 166		1	„Sleeve	„Hylsa
0810	94	79 36 016	(8123473)	1	„Lockwasher	„Spårnyttare
0820	95	80 19 531		1	Screw	Skruv
0830	96	83 05 526		1	Washer	Bricka
0840	97	93 13 008		1	Nut	Mutter
0850	98	83 51 405		1	Washer	Bricka
0860	99	83 61 644	see page 2-049, 1-F02	1	Needle valve set	Nålventilsats
0870		83 64 234	see page 2-049, 1-F02	X	Gasket set	Packningsatts
0880		83 64 242	see page 2-049, 1-F02	X	Gasket set	Packningsatts
0890		83 64 259	see page 2-049, 1-F02	X	Gasket set	Packningsatts
0900		75 09 128	see page 2-053, 1-F06	X	Set, modulator valve	Sats, modulatorventil
0910		88 18 767	see page 2-059, 1-F12	X	Rebuilding kit,	Reparationssats,
0920					carburetor	förgasare

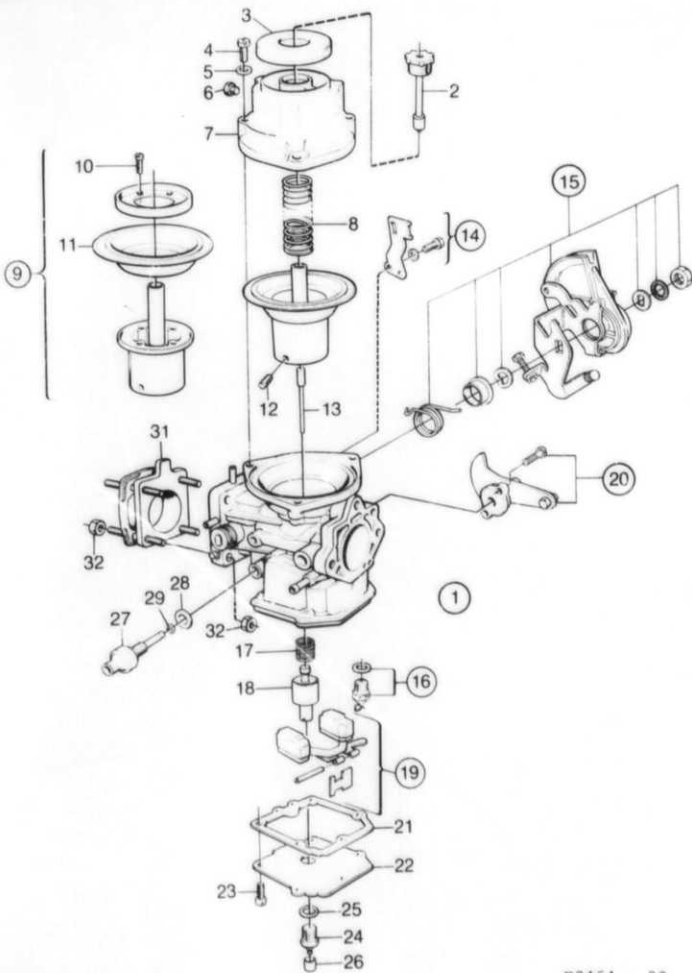

F2464 - 90

1-E02

Fuel system
Carburetor
PIERBURG

0460	Pos	Part No./Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
	1	75 81 093		1	Carburetor assy	Förgasare kpl	5
0020	2	75 84 725		1	Oil damper	Öl-dämpkolv	5
0050	3	75 84 717		1	Cover	Lock	4
0060	4	75 84 691		1	Screw	Skruv	6
0070	5	75 84 709		3	Washer	Bricka	5
0080	6	75 84 683		1	Screw	Skruv	5
0090	7	75 84 675		1	Carburetor cover	Förgasarlöck	6
0100	8	75 84 667		1	Spring	Fjäder	5
0120	9	75 84 618		1	Air valve	Förgasarkolv	5
0130	10	75 84 634		4	Screw	Skruv	5
0140	11	75 84 626		1	Diaphragm	Membran	1
0150	12	75 84 659		1	Screw	Skruv	5
0160	13	75 84 642		1	Fuel needle	Bränslenål	4
0170	14	75 84 733		1	Bracket assy	Fäste kpl	6
0180	15	75 84 493		1	Lever	Hävarm	5
0190	16	75 84 535		1	Float valve assy	Nålventil kpl	3
0200	17	75 84 519		1	Spring	Fjäder	3
0210	18	75 84 527		1	Jet	Munstycke	4
0220	19	75 84 543		1	Float assy	Flottör kpl	5
0230	20	75 84 501		1	Choke assy	Choke kpl	6
0240	21	75 84 550		1	Gasket	Packning	3
0250	22	75 84 568		1	Cover	Lock	5
0260	23	75 84 600		6	Screw	Skruv	3
0270	24	75 84 576		1	Adjusting screw	Justerskruv	3
0280	25	75 84 584		1	O-ring	O-ring	2
0290	26	75 37 806		1	Plug	Plugg	5
0300	27	75 84 741		1	Valve assy	Ventil kpl	5
0310	28	75 84 758		1	Gasket	Packning	4
0320	29	75 84 766		1	O-ring	O-ring	5
0330	30	75 81 485		1	Fuel filter	Bränslefilter	5
0340	31	75 81 473		1	Flange	Fläns	6
0350	32	81 25 882		8	Nut	Mutter	5
0360							

Bränslesystem
Förgasare
PIERBURG

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-E04

MASTER INDEX

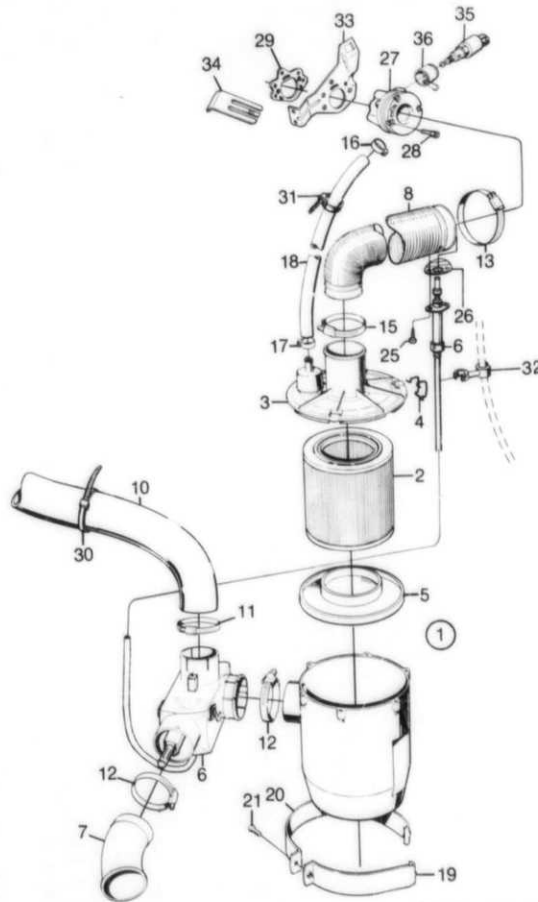

R 7786-90

0500	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
	1	83 17 893			1	Air cleaner assy	Luftrenare kpl	5
0020	2	93 18 502			1	.Insert	.Insats	1
0040	3	83 27 678			1	.Cover	.Lock	6
0060	4	83 18 339			3	.Clamp	.Klamma	5
0080	5	83 17 919			1	.Insert part	.Insatsdel	6
0100	6	93 31 893			1	Preheater valve unit	Spjällhus	5
0120	7	83 18 263			1	Snorkel	Snorkel	5
0140	8	93 47 485	7)		1	Hose	Slang	4
0160	8	75 36 956	6)		1	Hose	Slang	4
0170	10	83 23 222	EU AND GB		1	Preheater hose	Förvärmarslang	3
0200	10	93 31 190	SW, NO AND SF		1	Preheater hose	Förvärmarslang	3
0220	11	79 70 130			1	Clamp	Klamma	5
0240	13	79 70 148			2	Clamp	Klamma	5
0260	13	79 70 163			1	Clamp	Klamma	5
0280	15	83 27 561			1	Clamp	Klamma	5
0320	16	79 70 056			1	Clamp	Klamma	5
0340	17	79 70 064			1	Clamp	Klamma	5
0350	18	83 26 480			1	Hose	Slang	4
0360	19	83 21 044	FRONT		1	Strap	Spännband	5
0380	20	83 21 051	REAR		1	Strap	Spännband	5
0400	21	80 19 945			1	Screw	Skruv	5
0420	25	79 22 289			2	Screw	Skruv	5
0440	26	93 32 057			1	Washer	Bricka	5
0460	27	83 79 026	7)		1	Ring fastener	Fästring	6
0470	27	75 80 244	6)		1	Flange	Flans	6
0490	28	79 62 442	7)		3	Screw	Skruv	5
0500	28	80 98 139	6)		3	Screw	Skruv	5
0520	29	75 06 959			2	Gasket	Packning	4
0530	30	79 71 906			1	Strap	Spännband	5
0535	31	79 71 880			1	Strap	Spännband	4
0540	32	93 45 257			2	Clip	Clips	5
0550	33	75 20 067	7)		1	Bracket	Konsol	6
0552	33	75 80 574	6)		1	Bracket	Konsol	6
0560	34	93 62 542			1	Plate	Platta	6
0580	35	75 81 317	6)		1	Valve	Ventil	3
0590	36	75 80 582	6)		1	Nipple	Nippel	5

6. For cars with Pierburg carburetor.
7. For cars with Solex carburetor.

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical	
	register	2-H02
2 GROUP INDEX		
	Engine body	1-D06
	Lubrication system	1-D20
	Fuel system	1-D22
	Inlet and exhaust system	1-E10
	Cooling system	1-E18
	Engine control	1-E24
	Complete sets	1-F02

1-E06


Fuel system
Fuel pump

Bränslesystem
Bränslepump

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
2 GROUP INDEX		
	Engine body	1-D06
	Lubrication system	1-D20
	Fuel system	1-D22
	Inlet and exhaust system	1-E10
	Cooling system	1-E18
	Engine control	1-E24
	Complete sets	1-F02

0550	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S	L
0020	1	75 22 733				1	Fuel pump assy	Bränslepump kpl	2	
0090	2	93 06 705				1	Intermediate piece	Mellanstycke	6	
0100	3	93 12 927				1	Push rod	Tryckstång	5	
0110	4	80 82 968				3	Screw	Skruv	5	
0120	5	81 25 163				2	Screw	Skruv	5	
0130	6	80 29 985				3	Washer	Bricka	5	
0140	7	93 06 721			-1986	1	Gasket	Packning	2	
0142	7	75 66 458			1987-	1	Gasket	Packning	2	
0150	8	80 46 617				1	O-ring	O-ring	3	
0160	11	75 04 384			-1985	1	Nipple	Nippel	5	
0170	12	75 04 152			-1985	1	Hose	Slang	4	
0180	13	93 63 284				1	Hose	Slang	4	
0190	14	75 04 111			-1985	1	Hose	Slang	4	
0200	15	79 68 308				1	Hose clamp	Slangklamma	5	
0210	16	75 03 758				4	Hose clamp	Slangklamma	5	
0220	17	83 59 275				2	Hose clamp	Slangklamma	5	
0240	18	75 61 483			1986-7)	1	Moisture separator	Ångavskiljare	6	
0250	18	75 86 795			6), (7561325)	1	Moisture separator	Ångavskiljare	6	
0260	19	75 61 707			1986-7)	2	Screw	Skruv	5	
0270	19	75 81 333			6)	2	Screw	Skruv	5	
0280	20	75 04 160			1986-	1	Hose	Slang	4	
0300	21	75 61 657			1986-7)	1	Hose	Slang	4	
0320	21	75 04 111			6)	1	Hose	Slang	4	
0330	22	93 45 257			1987-	1	Clips	Clips	5	

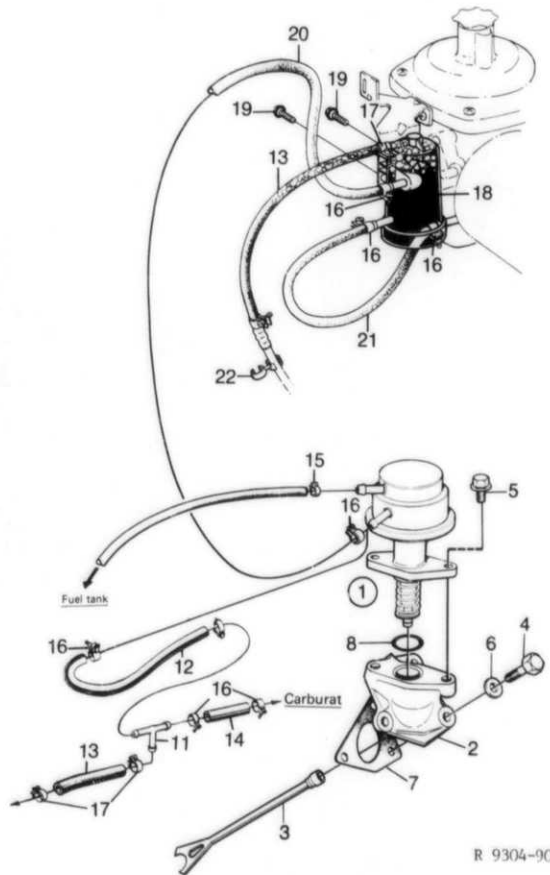

6. For cars with Pierburg carburetor.


SAAB genuine parts
original reserved

SAAB 90 M85-87

1990-02

R9304

Page 02 - 029

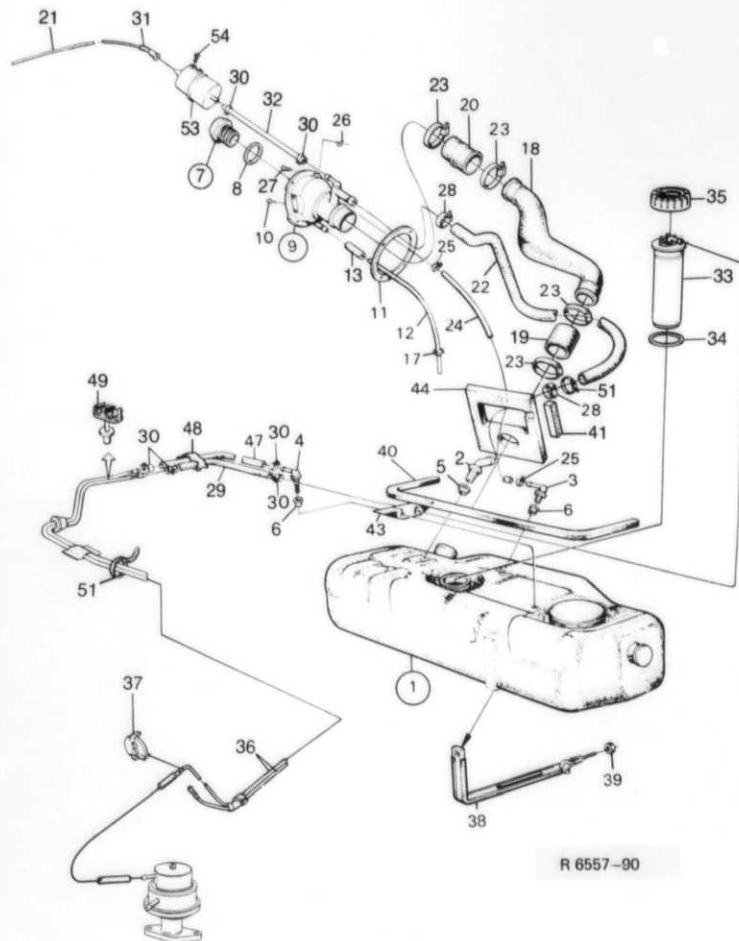

R 6557-90

1-E08

Fuel system
Fuel tank, etc

Bränslesystem
Bränsletank, etc

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

0600	Pos	Part No/Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0010	1	75 10 076		1985	1	Fuel tank assy	Bränsletank kpl	6
0020	1	75 34 639		1986-	1	Fuel tank assy	Bränsletank kpl	6
0030	2	93 29 491			1	Hose connection	,Slanganslutning	4
0040	3	93 28 857			1	Hose connection	,Slanganslutning	4
0050	4	93 28 873			1	Hose connection	,Slanganslutning	4
0060	5	75 35 537			1	Bushing	,Bussning	5
0070	6	83 25 656			2	Bushing	,Bussning	4
0080	7	93 92 705			1	Filler cap assy	Tanklock kpl	2
0090	8	75 11 751			1	Gasket	,Packning	4
0100	9	75 30 553			1	Filler pipe assy	Påfyllningsrör kpl	5
0110	10	83 15 475			2	Rubber stop	,Gummistopp	5
0120	11	93 49 838			1	Gasket	,Packning	4
0130	12	83 23 941			1	Drain pipe	Dräneringsrör	6
0140	13	75 04 137			1	Hose	Slang	5
0150	17	79 61 329		12), L=52MM	1	Grommet	Genomföringsbussning	5
0160	18	93 39 805			1	Filler pipe	Påfyllningsrör	5
0170	19	75 25 421			1	Extension hose	Skarvslang	4
0180	20	75 25 439			1	Extension hose	Skarvslang	4
0190	21	75 28 920			1	Drain hose	Dräneringsslang	5
0200	22	75 12 320		18)	1	Ventilation hose	Urluftningsslang	5
0210	22	75 39 133		19)	1	Ventilation hose	Urluftningsslang	5
0220	23	93 47 808			4	Hose clamp	Slangklamma	5
0230	24	93 63 383			1	Ventilation hose	Urluftningsslang	5
0240	25	83 32 587		12), L=950MM	2	Hose clamp	Slangklamma	5
0250	26	83 15 467			4	Clip	Clip	5
0260	27	79 70 536			4	Screw	Skruv	6
0270	28	79 70 072			2	Hose clamp	Slangklamma	5
0280	29	93 63 250		12)	1	Fuel line	Bränsleledning	5
0290	30	79 68 308			7	Hose clamp	Slangklamma	5
0300	31	83 34 880			1	Extension hose	Skarvslang	5
0310	32	93 63 243			1	Hose	Slang	5
0320	33	93 61 957			1	Fuel level transmitter	Bränslenivågivare	3
0330	34	93 68 846		1985	1	Gasket	Packning	3
0340	34	93 92 689		1986-	1	Gasket	Packning	3
0350	35	93 93 950			1	Clamp nut	Överfallsnutt	4
0360	36	75 27 021		-1985	1	Fuel line	Bränsleledning	5
0370	36	75 34 522		1986-	1	Fuel line	Bränsleledning	6
0380	37	83 28 346			1	Pipe retainer	Rörhållare	5
0390	38	93 33 600			2	Strap	Spännband	5
0400	39	80 74 288			2	Nut	Mutter	5
0410	40	93 49 929			1	Sealing	Tätning	5
0420	41	85 85 325		(8572752)	2	Sealing	Tätning	5
0430	43	93 29 855			2	Sealing	Tätning	5
0440	44	93 49 937			1	Sealing	Tätning	5
0450	47	93 63 359		12), L=715MM	1	Hose	Slang	5
0460	48	93 49 945			2	Clip	Clips	5
0470	49	79 63 895			2	Clip	Clips	4
0480	51	79 71 872			3	Strap	Spännband	5
0490	53	93 18 361			1	Valve	Ventil	5
0500	54	79 22 354			2	Screw	Skruv	5
0510		93 62 781		L=10M	X	Hose	Slang	2
0520		88 17 256		see page 2-053, 1-F06	X	Kit, fuel hose	Sats, bränsleslang	4


12. Manufactured by 93 62 781.
18. Ch. -H6003050.
19. Ch. H6003050-.

SAAB genuine parts
original manufacturer

SAAB 90 M85-87

1990-02

R6557 Page 02-031

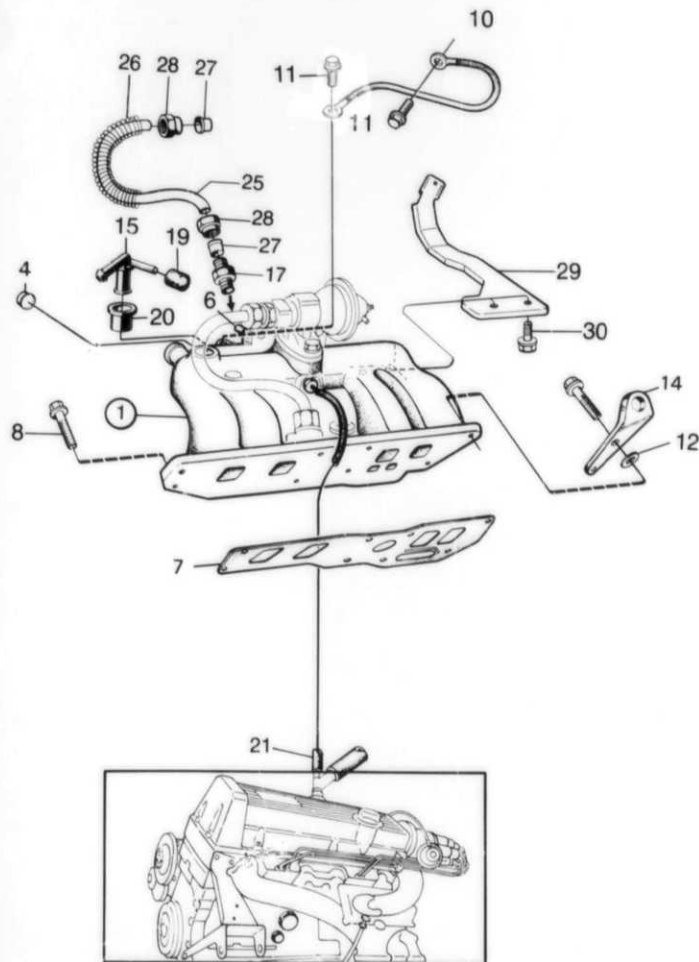

R 7787-90

1-E10

Inlet- and exhaust system
Inlet manifold, etc


Inlopps- och avgassystem
Inloppsrör, etc

0650	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Anst	Description	Benämning	S L
0010	1	75 17 261		-1985, 9)	1	Inlet manifold	Inloppsrör	6
0020	1	75 62 440		1986-7, 9)	1	Inlet manifold	Inloppsrör	6
0030	1	75 17 253		-1985, 8)	1	Inlet manifold	Inloppsrör	6
0040	1	75 62 424		1986-7, 8)	1	Inlet manifold	Inloppsrör	6
0050	1	75 81 440		1987-6)	1	Inlet manifold	Inloppsrör	6
0060	4	81 23 168			1	Seal washer	Tätningssbricka	4
0070	6	75 17 097		-1985	4	Screw	Skruv	5
0080	7	75 69 346		(9307257)	1	Gasket	Packning	2
0090	8	81 25 197			6	Screw	Skruv	5
0100	9	81 25 205			2	Screw	Skruv	5
0110	10	75 64 859			1	Cable	Ledning	6
0120	11	80 97 859			2	Screw	Skruv	5
0130	12	80 29 985			2	Washer	Bricka	5
0140	14	75 61 509		-1985, (9311515)	1	Lifting eye	Lyftögla	5
0150	14	75 61 509		1986-, (7561632)	1	Lifting eye	Lyftögla	5
0160	15	93 12 802			1	Nipple	Nippel	4
0170	17	81 31 985		9)	1	Nipple	Nippel	5
0180	18	83 08 850			1	Nipple	Nippel	5
0190	19	83 35 614			1	Plug	Plugg	4
0200	20	75 15 208		(8347569)	1	Bushing	Bussning	5
0210	21	75 21 578			1	Hose	Slang	2
0220	25	75 04 012		9)	1	Pipe	Rör	6
0230	26	75 04 046		9)	1	Heat guard	Värmeskydd	6
0240	27	81 32 235		9)	2	Cutting ring	Skärning	5
0250	28	81 28 969		9)	2	Nut	Mutter	5
0260	29	75 64 057		1987-6)	1	Bracket	Konsol	5
0270	30	81 25 007		1987-6)	2	Screw	Skruv	5

8. For cars without EGR
9. For cars with EGR

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical register	2-H02
2 GROUP INDEX		
	Engine body	1-D06
	Lubrication system	1-D20
	Fuel system	1-D22
	Inlet and exhaust system	1-E10
	Cooling system	1-E18
	Engine control	1-E24
	Complete sets	1-F02

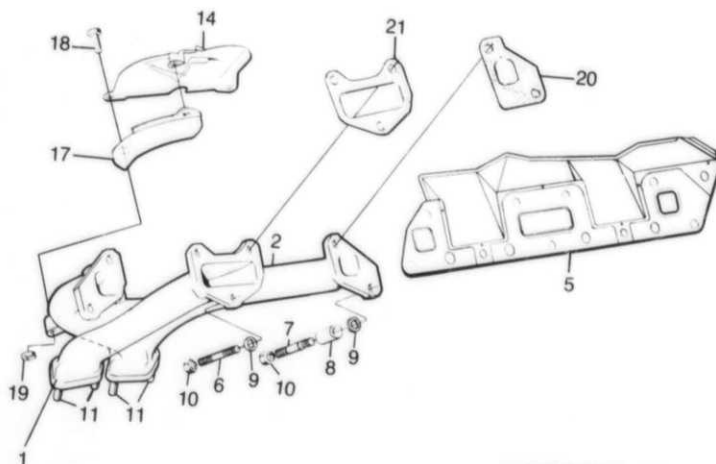

R 6256-90

1-E12

Inlet-and exhaust system
Exhaust manifold, etc

Inlopps-och avgassystem
Avgassamlare, etc

Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0700	1	83 56 420			1	Exhaust manifold	Avgassamlare	3
0010	2	75 08 583		(8356412)	1	Exhaust manifold	Avgassamlare	3
0020	5	75 61 772		-1985, (9314139)	1	Gasket	Packning	2
0030	5	75 61 772		1986-	1	Gasket	Packning	2
0040	6	75 19 010			3	Screw	Skruv	5
0050	7	93 50 588			4	Screw	Skruv	5
0060	8	93 06 812			4	Spacer sleeve	Distanshylsa	3
0070	9	13 24 144		-1986	7	Washer	Bricka	5
0080	9	80 73 249		1987-	7	Washer	Bricka	5
0090	10	93 06 820			7	Lock nut	Låsmutter	3
0100	11	83 60 943			4	Screw	Skruv	5
0110	14	83 23 214			1	Preheater casing	Förvärmärkäpa	5
0120	17	93 29 442			1	Shield	Skärm	4
0130	18	80 19 978			3	Screw	Skruv	5
0140	19	80 29 555			1	Nut	Mutter	5
0150	20	83 61 842		2)	2	Gasket	Packning	2
0160	21	83 61 859		2)	1	Gasket	Packning	2
0170		88 17 280		see page 2-057, 1-F10	X	Set, screws and gaskets for exhaust manifold	Sats, skruv och pack- ningar för avgassamlare	5


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

2. To be used together with gasket 93 14 139 at reassembly

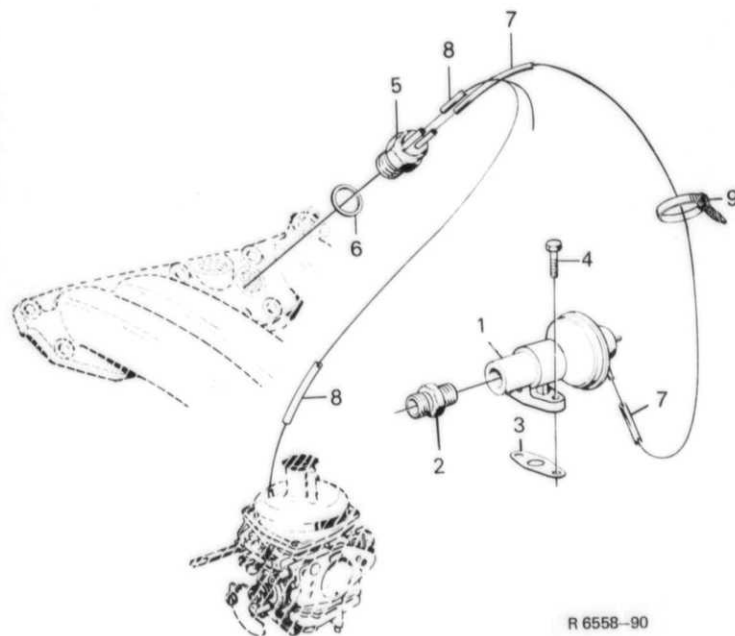

0725
0020
0040
0060
0080
0085
0100
0120
0140
0160
0180
0200

1-E14

Inlet-and exhaust system
Exhaust gas recir-
culation (EGR)

Pos	Part No./An nr	K	S	Notes/Anmärkningar
1	93 50 224			
2	93 51 495			
3	83 57 485			- 1986
3	75 07 973			1987-
4	80 19 929			
5	93 14 162			
6	81 24 141			
7	75 04 210			
8	75 04 053			
9	83 53 583			

Qty/ Antal	Description	Benämning
1	Exhaust gas re- circulation valve	Avgasrecirkulations- ventil
1	Nipple	Nippel
1	Gasket	Packning
1	Gasket	Packning
2	Screw	Skruv
1	Air valve	Luftventil
1	Gasket	Packning
1	Hose	Slang
1	Hose	Slang
1	Strap	Spännband

Inlopps och avgassystem
Avgasrecirkulation
(EGR)

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02


2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-E16

Exhaust system
Mufflers, exhaust pipe

Avgassystem
Ljuddämpare, avgasrör

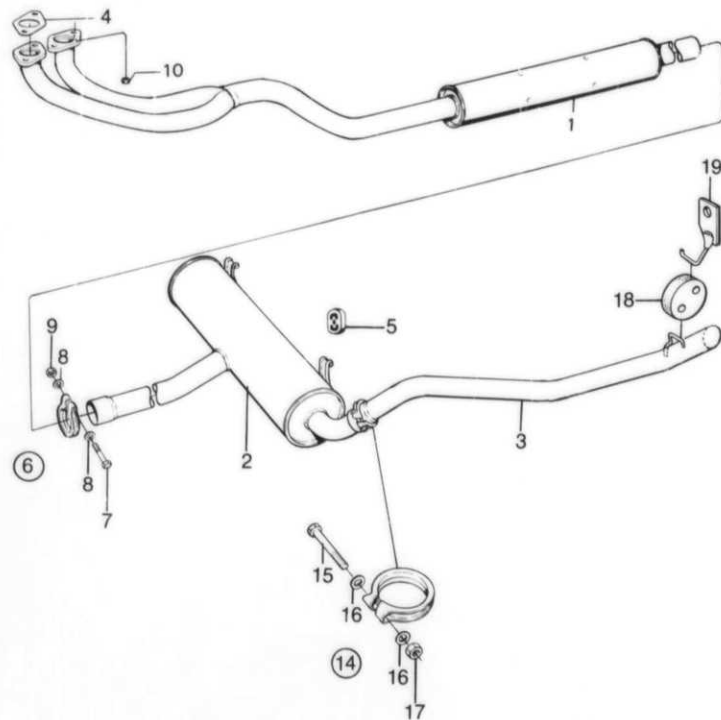

R 8227-90

Pos	Part No/Art nr	K	Notes/Anmärkning	Qty/Anst	Description	Benämning	S
0750							
0020	1	93 65 578	FRONT	1	Muffler	Ljuddämpare	1
0030	2	93 26 448	REAR	1	Muffler	Ljuddämpare	1
0040	3	93 65 727	10), REAR	1	Exhaust pipe	Avgasrör	1
0045	3	75 36 097	11), REAR	1	Exhaust pipe	Avgasrör	1
0050	4	83 87 672		2	Gasket	Packning	1
0060	5	93 28 105		2	Rubber suspension	Gummiupphängning	1
0065	6	83 86 450		1	Clamp assy	Klamma kpl	1
0080	7	80 84 014		1	Screw	Skruv	5
0090	8	93 19 047	S	2	Washer	Bricka	5
0100	9	80 73 942		1	Nut	Mutter	5
0110	10	79 67 870		4	Nut	Mutter	5
0120	14	83 84 323		1	Clamp assy	Klamma kpl	1
0130	15	80 84 006	S	1	Screw	Skruv	5
0140	16	93 19 047		2	Washer	Bricka	5
0150	17	80 73 942		1	Nut	Mutter	5
0160	18	93 65 404		1	Rubber suspension	Gummiupphängning	1
0170	19	93 68 093	10)	1	Suspension yoke	Upphångningsbygel	5
0180							
0200		88 17 835	see page 2-053, 1-F06	X	Kit, front muffler	Sats, främre ljuddämpare	1
0240		88 17 850	10)	X	Kit, rear muffler	Sats, bakre ljuddämpare	1
0245			see page 2-053, 1-F06				
0250		88 19 930	11)	X	Kit, rear muffler	Sats, bakre ljuddämpare	1
0255			see page 2-053, 1-F06				
0280		88 18 577	see page 2-053, 1-F06	X	Mounting kit, rear muffler	Monteringssats, bakre avgassystem	1
0300							
0320		88 18 197	see page 2-057, 1-F10	X	Mounting kit, front muffler	Monteringssats, främre ljuddämpare	2
0340							
0360		75 38 440	10)	X	Kit, rear suspension exhaust pipe	Sats, bakre upp-hängning avgasrör	2
0380			see page 2-059, 1-F12				
0390		88 19 187	see page 2-061, 1-F14	X	Kit, catalytic converter	Sats, katalytisk reaktor	4

10. Ch. -G6007150.
11. Ch. G6007151-.

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R8227 Page 02 - 039

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

1	Engine body	1-D06
	Lubrication system	1-D20
	Fuel system	1-D22
	Inlet and exhaust system	1-E10
	Cooling system	1-E18
	Engine control	1-E24
	Complete sets	1-F02


Kylsystem
Kylare, fläkt, etc

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
2 GROUP INDEX		
1	Engine body	1-D06
2	Lubrication system	1-D20
3	Fuel system	1-D22
4	Inlet and exhaust system	1-E10
5	Cooling system	1-E18
6	Engine control	1-E24
7	Complete sets	1-F02

1-E20

0850	Pos	Part No/Art nr	K	S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S	L
0020	1	88 17 900			see page 2-057, 1-F10	1	Coolent pump kit	Kylvätskepump sats	2	
0120	2	93 53 442			-1986	1	Gasket	Packning	2	
0122	2	75 66 516			1987-	1	Gasket	Packning	2	
0140	3	93 54 978			-1986	1	Gasket	Packning	2	
0142	3	75 63 687			1987-	1	Gasket	Packning	2	
0160	4	93 55 181				1	Pump cover	Pumplock	4	
0180	5	93 09 402				1	Fan belt pulley	Remskiva	5	
0205	6	80 19 903				4	Screw	Skruv	5	
0215	7	81 25 262				2	Screw	Skruv	5	
0220	8	81 25 197				3	Screw	Skruv	5	
0230	9	80 83 933				1	Screw	Skruv	5	
0240	10	80 83 941				2	Screw	Skruv	5	
0260	11	80 29 985				1	Washer	Bricka	5	
0270	12	80 73 223				4	Washer	Bricka	5	
0280	13	93 13 222				1	Lifting eye	Lyftögla	6	

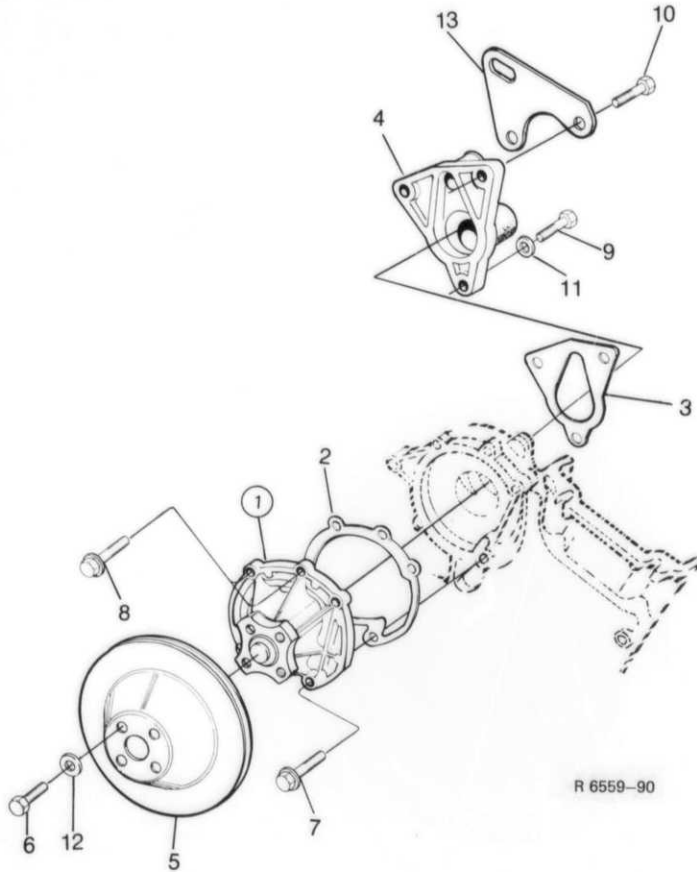

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
4	Instruments	1-G02
5	Transmission	1-I02
6	Brakes	1-K02
7	Front assembly,	
8	Steering	1-L02
9	Suspension,	
10	Wheels	2-A02
11	Body	2-B02
12	Tool,	
13	Labels	2-G02
14	Numerical register	2-H02

2 GROUP INDEX


Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

1-E22

Cooling system
Thermostat

Kylsystem
Termostat

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Beskrivning	S L
0900	1	93 50 299		1	Thermostat housing	Termostathus	5
0010	2	93 37 379	89° C	1	Kit, thermostat	Sats, termostat	1
0020			see page 2-057, 1-F10				
0030	3	83 52 692	S	1	Gasket	Packning	2
0040	4	75 66 532	-1985, (8362659)	1	Gasket	Packning	2
0050	4	75 61 202	1986	1	Gasket	Packning	2
0060	4	75 66 532	1987-	1	Gasket	Packning	2
0070	4	83 47 346		1	Cover	Lock	5
0080	5	93 07 497		1	Drain tap	Kran	5
0090	6	81 25 189		2	Screw	Skruv	5
0100	7	79 75 063	(8098105)	3	Screw	Skruv	5
0110	8	80 29 985		5	Washer	Bricka	5
0120	11	88 00 914		1	Temperature transmitter	Temperaturgivare	2
0130	12	93 10 004		1	Plug	Propp	5
0140	13	83 65 769		1	Gasket	Packning	5
0150	14						

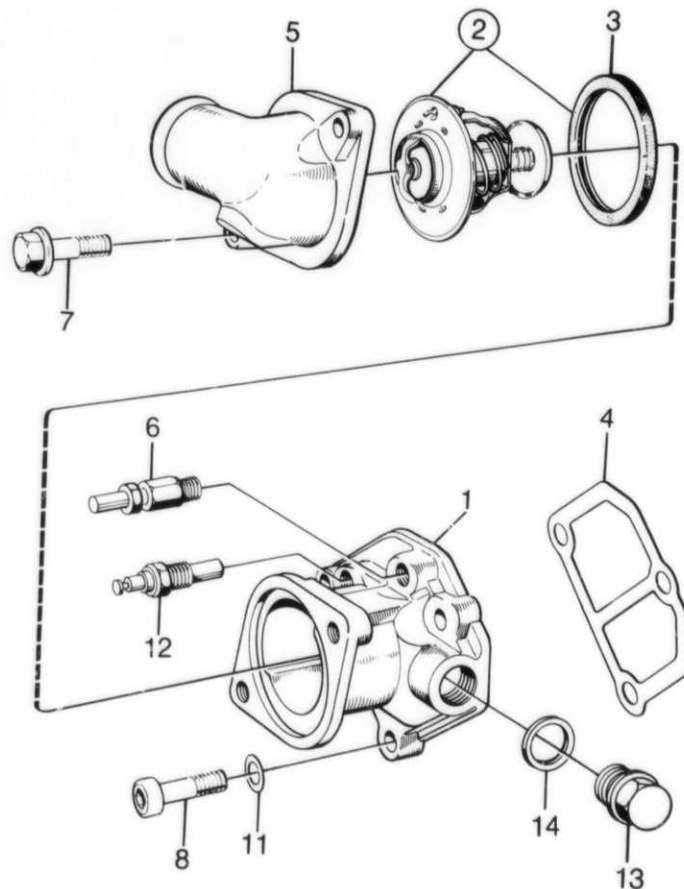


R 6560-90

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-E10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

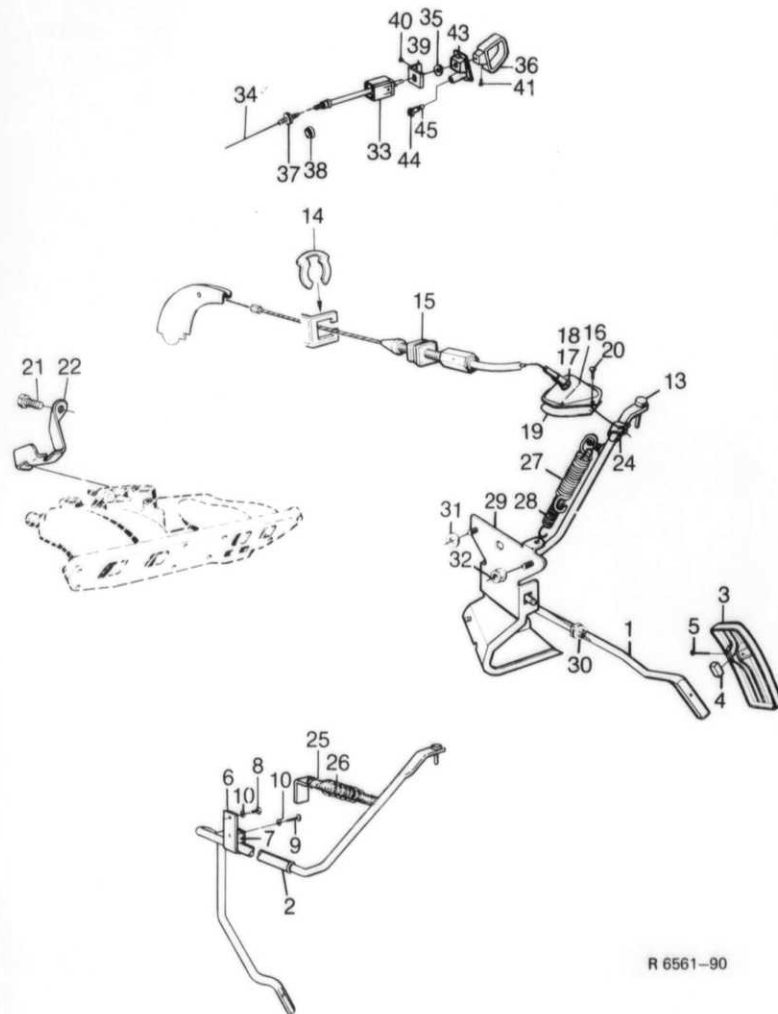

R 6561-90

1-E24

0950	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0020	1	89 44 829			1	Accelerator pedal	Gaspedal	6
0030	2	89 45 016		RHD	1	Accelerator pedal	Gaspedal	6
0050	3	71 83 965			1	Accelerator plate, accelerator	Platta gaspedal	5
0070	4	71 83 973			1	Shim	Mellanlägg	6
0080	5	79 58 770			1	Hollow rivet	Hålnit	5
0090	6	89 17 445		RHD	2	Bearing	Lager	6
0100	7	89 17 437		RHD	2	Support neck	Stödklack	6
0110	8	79 22 891		RHD	2	Screw	Skruv	5
0120	9	79 22 533		RHD	2	Screw	Skruv	5
0130	10	79 33 823		RHD	4	Washer	Bricka	5
0150	13	83 78 002			1	Rubber plug	Gummiplugg	5
0155	14	75 26 973		7)	1	Lock ring	Låsring	5
0157	14	75 33 136		6)	1	Lock ring	Låsring	5
0160	15	75 25 736		7)	1	Wire	Wire	3
0162	15	75 37 533		6)	1	Wire	Wire	3
0170	16	83 13 991			1	Grommet cup	Genomföringskopp	5
0180	17	83 82 723			1	Sealing	Tätning	6
0190	18	79 16 505			1	Washer	Bricka	5
0200	19	83 82 301			1	Sealing	Tätning	6
0210	20	79 22 347			2	Screw	Skruv	5
0215	21	80 97 875			2	Screw	Skruv	5
0217	22	75 21 370			1	Bracket	Fäste	6
0220	24	83 19 600			1	Clamp	Klamma	5
0230	25	83 16 846		RHD	1	Spring	Fjäder	5
0240	26	83 16 952		RHD	1	Spring	Fjäder	5
0250	27	89 33 418			1	Spring	Fjäder	5
0260	28	89 38 250			1	Spring	Fjäder	5
0270	29	89 44 837			1	Bracket	Konsol	6
0280	30	89 33 392			2	Bearing	Lager	5
0290	31	89 38 003			3	Seal washer	Tätningsbricka	5
0300	32	80 73 512			3	Lock nut	Låsmutter	3
0310	33	85 32 442		- 1986	1	Cold start control	Kallstartreglage	3
0312	33	95 59 410		1987-	1	Cold start control	Kallstartreglage	3
0320	33	85 32 459		RHD	1	Cold start control	Kallstartreglage	3
0335	34	85 46 780		PART OF 8532442	1	Wire	Wire	3
0340	35	85 00 704			1	Eye nut	Ringmutter	5
0350	36	85 22 062			1	Handle	Handtag	3
0360	37	79 61 329			1	Grommet	Genomföring	5
0370	38	71 63 074			1	Rubber plug	Gummiplugg	5
0380	39	85 37 177		RIGHT SIDE	1	Bracket, cold start control	Fäste, kallstarts-reglage	6
0390	39	85 37 185		RHD	1	Bracket, cold start control	Fäste, kallstarts-reglage	6
0400	40	79 61 634			2	Pop rivet	Popnit	5
0430	41	80 59 073			1	Screw	Skruv	5
0440	43	85 22 054			1	Bracket	Hållare	5
0450	44	85 09 697			1	Bulb socket	Lamphållare	5
0460	45	85 00 613		40/238286009	1	Bulb	Glodlampa	2

6. For cars with Pierburg carburetor.
7. For cars with Solex carburetor.

Engine control
Accelerator control, etc


Motorreglage
Gasreglage, etc

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

2 GROUP INDEX

5	Engine body	1-D06
5	Lubrication system	1-D20
5	Fuel system	1-D22
5	Inlet and exhaust system	1-E10
5	Cooling system	1-E18
5	Engine control	1-E24
5	Complete sets	1-F02

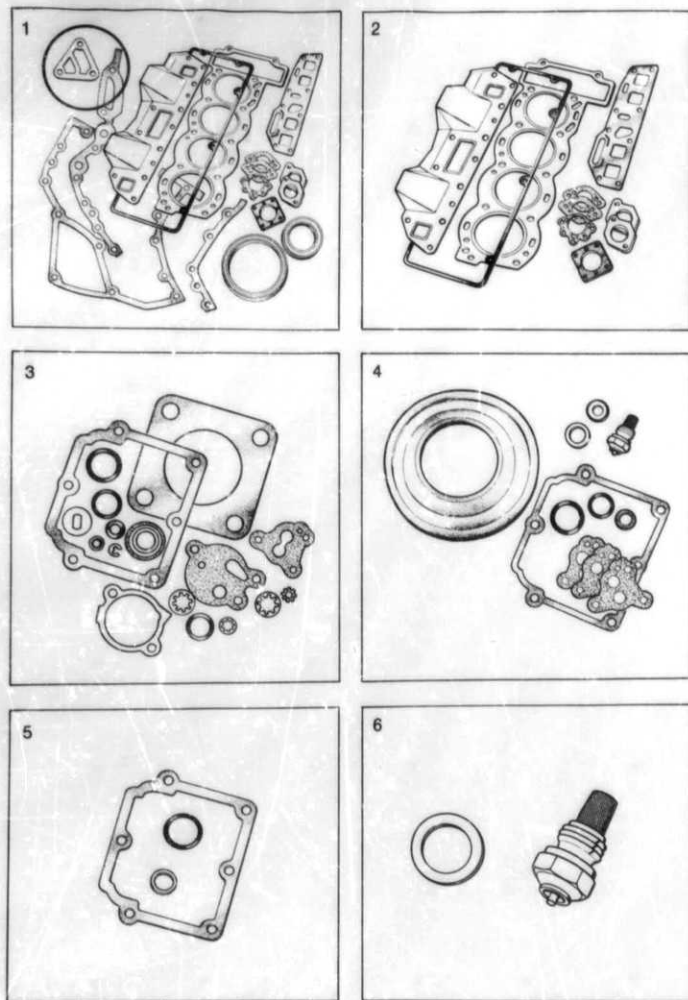

R 9305-90

1-F02

Complete sets
Engine

Satsar
Motor

MASTER INDEX

1000	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0010	1	93 37 213				X	GASKET SET, ENGINE	PACKNINGSSATS, MOTOR
0020		93 50 281				1	.Gasket, cylinder head	.Packning, cylindlock
0030		93 55 991				1	.Gasket, valve cover	.Packning, ventilkåpa
0040		75 89 039				1	.Gasket, end plate	.Packning, gavelplatta
0050		93 50 158				1	.Seal ring	.Tätningssring
0060		93 09 204				1	.Seal ring	.Tätningssring
0070		91 17 839				1	.Gasket, transmission cover	.Packning, transmissionskåpa
0080						1	.Gasket, transmission cover	.Packning, transmissionskåpa
0090		91 17 84				1	.Gasket, inlet manifold	.Packning, insugningsrör
0100		75 69 346				1	.Gasket, exhaust manifold	.Packning, avgassamlare
0110		93 14 139				1	.Gasket, oil pump	.Packning, oljepump
0120		93 08 180				1	.O-ring	.O-ring
0130		93 69 829				1	.Washer	.Bricka
0140		75 88 981			C, (8308637)	1	.Washer	.Bricka
0150		83 58 788			T	2	.Washer	.Bricka
0160		83 74 639			C	1	.Gasket, air cleaner	.Packning, luftrenare
0170		83 36 877			T	2	.Gasket, air cleaner	.Packning, luftrenare
0180								
0190								
0200	2	93 37 239			SB	X	GASKET SET, DECARBONAZATION	PACKNINGSSATS, SOTNING
0210		75 85 037				1	.Gasket, cylinder head	.Packning, cylindlock
0220		93 55 991				1	.Gasket, valve cover	.Packning, ventilkåpa
0230		75 69 346				1	.Gasket, inlet manifold	.Packning, insugningsrör
0240		75 61 772				1	.Gasket, exhaust manifold	.Packning, avgassamlare
0250		75 88 981			C	1	.Washer, insulating	.Isolerbricka
0260		75 88 916			T	2	.Washer, insulating	.Isolerbricka
0270		83 74 639			C	1	.Gasket, air cleaner	.Packning luftrenare
0280		83 36 877			T	2	.Gasket, air cleaner	.Packning luftrenare
0290								
0300								
0310	3	83 64 234			(SOLEX)	X	GASKET SET, CARBURETOR	PACKNINGSSATS, FÖRGASARE
0320		83 51 348				1	.Washer	.Bricka
0330		83 05 419				1	.Washer	.Bricka
0340		83 05 336				2	.Washer	.Bricka
0350		83 08 652				1	.Gasket	.Packning
0360		83 09 098				2	.Washer	.Bricka
0370		83 09 064				1	.Washer	.Bricka
0380		83 09 072				1	.Washer	.Bricka
0390		83 05 773				1	.O-ring	.O-ring
0400		83 05 849				1	.Gasket, float chamber	.Packning, flottörhus
0410		83 05 823				1	.Washer, needle valve	.Bricka, nålventil
0420		83 66 643				1	.Gasket	.Packning
0430		83 52 387			(8305484)	2	.Washer	.Bricka
0440		83 66 650				1	.O-ring	.O-ring
0450		83 66 668				1	.Retainer ring, damp piston	.Hållarring, dämpkolv
0460								
0470		83 66 676				1	.Washer	.Bricka
0480								

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
2 GROUP INDEX		
Engine body	1-D06	
Lubrication system	1-D20	
Fuel system	1-D22	
Inlet and exhaust system	1-E10	
Cooling system	1-E18	
Engine control	1-E24	
Complete sets	1-F02	

1-F04


Complete sets
Engine

Satser
Motor

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
2 GROUP INDEX		
Engine body		1-D06
Lubrication system		1-D20
Fuel system		1-D22
Inlet and exhaust system		1-E10
Cooling system		1-E18
Engine control		1-E24
Complete sets		1-F02

1000	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0490	4	83 64 259	(SOLEX)	X	GASKET SET, CARBURETOR	PACKNINGSSATS, FÖRGASARE	4
0500		83 08 652		1	.Gasket	.Packning	4
0510		83 09 064		1	.Lock washer	.Låsbricka	4
0520		83 09 072		1	.Lock washer	.Låsbricka	4
0530		83 05 823		1	.Washer, needle valve	.Bricka, nålventil	4
0540		83 05 575		1	.O-ring	.O-ring	5
0550		83 05 849		1	.Gasket, float chamber	.Packning, flottörhus	4
0560		83 08 678		1	.Diaphragm	.Membran	4
0570		83 52 494		1	.Seal	.Tätning	5
0580		83 51 413		1	.Needle valve	.Nålventil	3
0590							
0600	5	83 64 242	(SOLEX)	X	GASKET SET, CARBURETOR	PACKNINGSSATS, FÖRGASARE	4
0610		83 05 823		1	.Washer, needle valve	.Bricka, nålventil	4
0620		83 05 773		1	.O-ring	.O-ring	2
0630		83 05 849		1	.Gasket, float chamber	.Packning, flottörhus	4
0640							
0650	6	83 61 644	(SOLEX)	X	NEEDLE VALVE SET, CARBURETOR	NÅLVENTILSATS, FÖRGASARE	3
0660		83 51 413		1	.Needle valve	.Nålventil	3
0670		83 05 823		1	.Washer	.Bricka	4
0680							

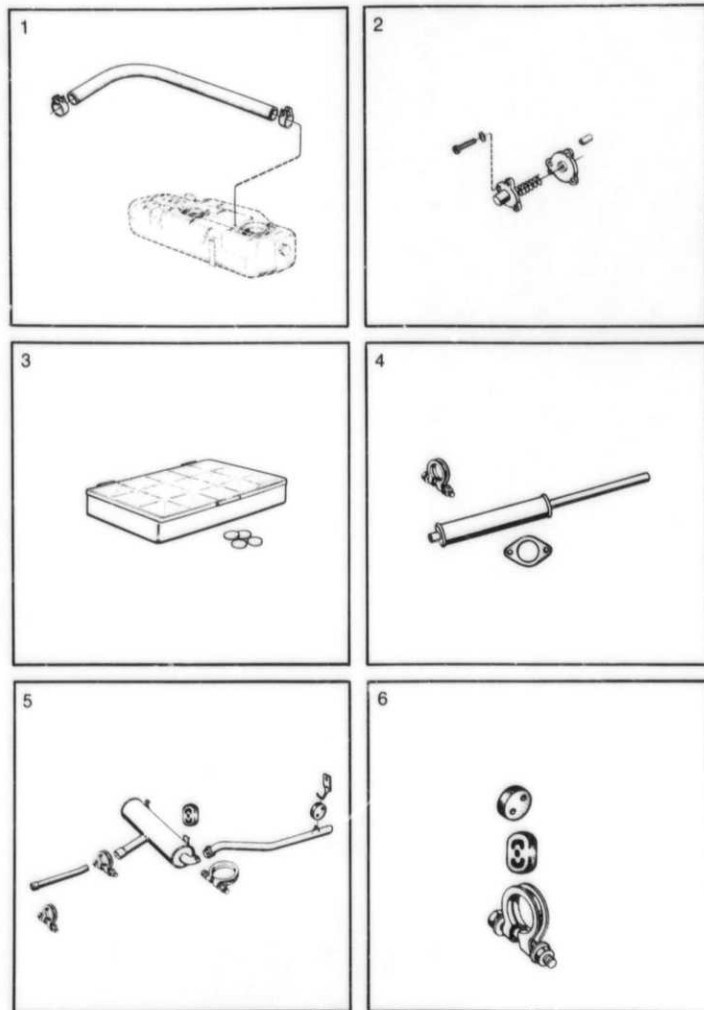

R 9306-90

1-F06

Complete sets
Engine

Satser
Motor

MASTER INDEX

1050	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0020	1	88 17 256			X	KIT, FUEL HOSE	SATS, BRÄNSLESLANG	4
0030		93 63 359			1	,Hose	,Slang	5
0040		79 73 431			4	,Hose clamp	,Slangklämma	5
0050								
0060	2	75 09 128		(SOLEX)	X	SET, MODULATOR VALVE	MODULATORVENTILSATS	4
0080		75 09 136			1	,Diaphragm	,Membran	4
0090		93 52 063			1	,Cover	,Lock	4
0100		93 52 065			1	,Spring	,Fjäder	6
0110		75 08 732			3	,Sleeve	,Hylsa	6
0120		79 72 789			3	,Screw	,Skruv	5
0130								
0140	3	88 17 728		(9337502)	X	VALVE ADJUSTMENT SET	VENTILJUSTERATS	2
0160		83 92 003		1)	3	,Plastic box	,Plastlåda	6
0170		83 08 215		1,78 MM	5	,Adjusting pallet	,Justerbricka	2
0180		83 08 223		1,83 MM	5	,Adjusting pallet	,Justerbricka	2
0190		83 08 231		1,88 MM	5	,Adjusting pallet	,Justerbricka	2
0200		83 08 249		1,93 MM	5	,Adjusting pallet	,Justerbricka	2
0210		83 08 256		1,98 MM	5	,Adjusting pallet	,Justerbricka	2
0220		83 08 264		2,03 MM	5	,Adjusting pallet	,Justerbricka	2
0230		83 08 272		2,08 MM	5	,Adjusting pallet	,Justerbricka	2
0240		83 08 280		2,13 MM	5	,Adjusting pallet	,Justerbricka	2
0250		83 08 298		2,18 MM	5	,Adjusting pallet	,Justerbricka	2
0260		83 08 306		2,24 MM	5	,Adjusting pallet	,Justerbricka	2
0270		75 24 275		2,27 MM	5	,Adjusting pallet	,Justerbricka	2
0280		75 24 291		2,29 MM, (8349169)	5	,Adjusting pallet	,Justerbricka	2
0290		75 24 317		2,31 MM	5	,Adjusting pallet	,Justerbricka	2
0300		75 24 333		2,33 MM, (8349185)	5	,Adjusting pallet	,Justerbricka	2
0310		75 24 358		2,35 MM	5	,Adjusting pallet	,Justerbricka	2
0320		75 24 374		2,37 MM, (8349201)	5	,Adjusting pallet	,Justerbricka	2
0330		75 24 390		2,39 MM	5	,Adjusting pallet	,Justerbricka	2
0340		75 24 416		2,41 MM, (8349227)	5	,Adjusting pallet	,Justerbricka	2
0350		75 24 432		2,43 MM	5	,Adjusting pallet	,Justerbricka	2
0360		75 24 457		2,45 MM, (8349243)	5	,Adjusting pallet	,Justerbricka	2
0370		75 24 473		2,47 MM	5	,Adjusting pallet	,Justerbricka	2
0380		75 24 499		2,49 MM, (8349268)	5	,Adjusting pallet	,Justerbricka	2
0390		75 24 515		2,51 MM	5	,Adjusting pallet	,Justerbricka	2
0400		75 24 531		2,53 MM, (8349284)	5	,Adjusting pallet	,Justerbricka	2
0410		75 24 556		2,55 MM	5	,Adjusting pallet	,Justerbricka	2
0420		75 24 572		2,57 MM, (8349300)	5	,Adjusting pallet	,Justerbricka	2
0430		75 24 598		2,59 MM	5	,Adjusting pallet	,Justerbricka	2
0440		75 24 614		2,61 MM, (8349326)	5	,Adjusting pallet	,Justerbricka	2
0450		75 24 630		2,63 MM	5	,Adjusting pallet	,Justerbricka	2
0460		75 24 655		2,65 MM, (8349342)	5	,Adjusting pallet	,Justerbricka	2
0470		75 24 671		2,67 MM	5	,Adjusting pallet	,Justerbricka	2
0480		75 24 697		2,69 MM, (8349367)	5	,Adjusting pallet	,Justerbricka	2
0490		75 24 713		2,71 MM	5	,Adjusting pallet	,Justerbricka	2
0500		75 24 739		2,73 MM, (8349383)	5	,Adjusting pallet	,Justerbricka	2
0510		75 24 754		2,75 MM	5	,Adjusting pallet	,Justerbricka	2
0520		75 24 770		2,77 MM, (8355042)	5	,Adjusting pallet	,Justerbricka	2
0530		75 24 796		2,79 MM	5	,Adjusting pallet	,Justerbricka	2
0540		75 24 812		2,81 MM, (8355067)	5	,Adjusting pallet	,Justerbricka	2
0550		75 24 838		2,83 MM	5	,Adjusting pallet	,Justerbricka	2
0560		75 24 853		2,85 MM, (8355083)	5	,Adjusting pallet	,Justerbricka	2
0570								

1. Not as separate spare part


SAAB genuine parts
original reserved

SAAB 90 M85-87

1990-02

R9306

Page 02 - 053

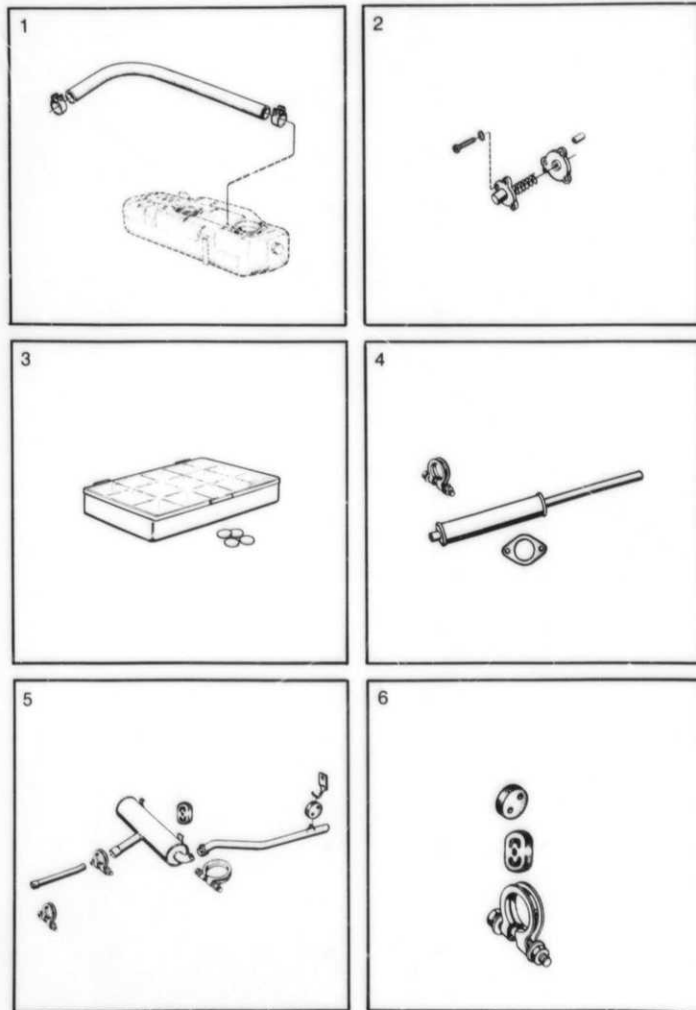

R 9306-90

1-F08

Complete sets
Engine

Satser
Motor

1050	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0580	4	88 17 835			X	KIT, FRONT MUFFLER	SATS, FRÄMRE LUDDÄMPARE	1
0600		75 33 615			1	.Front muffler	.Främre luddämpare	1
0610		83 86 450			2	.Clamp	.Klamma	1
0620		83 87 672			2	.Gasket	.Packning	1
0630				75/66 1595		.Mounting instruction	.Monteringsanvisning	1
0640								
0650	5	88 17 850		10)	X	KIT, REAR MUFFLER	SATS, BAKRE LUDDÄMPARE	1
0670		75 33 631			1	.Muffler	.Luddämpare	1
0680		75 33 623			1	.Exhaust pipe	.Avgasrör	2
0690		83 86 450			2	.Clamp	.Klamma	1
0700		83 84 323			1	.Clamp	.Klamma	1
0710		93 28 105			2	.Rubber suspension	.Gummiupphängning	1
0720		93 65 727			1	.Exhaust pipe	.Avgasrör	1
0730		93 65 404			1	.Rubber suspension	.Gummiupphängning	1
0740		93 68 093			1	.Suspension yoke	.Upphångningsbygel	5
0750				75/66 1595	1	.Mounting instruction	.Monteringsanvisning	1
0760								
0761	5	88 19 930		11)	X	KIT, REAR MUFFLER	SATS, BAKRE LUDDÄMPARE	1
0762		75 33 623		CENTRE	1	.Exhaust pipe	.Avgasrör	2
0763		75 33 631			1	.Muffler	.Luddämpare	1
0764		75 36 097		REAR	1	.Exhaust pipe	.Avgasrör	1
0765		83 84 323			1	.Clamp	.Klamma	1
0766		83 86 450			2	.Clamp	.Klamma	1
0767		93 28 105		FOR MUFFLER	2	.Rubber suspension	.Gummiupphängning	1
0768		93 65 404		FOR EXHAUST PIPE	1	.Rubber suspension	.Gummiupphängning	1
0769								
0770	6	88 18 577			X	MOUNTING KIT, REAR	MONTERINGSSATS, BAKRE	1
0800		83 86 450				MUFFLER AND PIPE	LUDDÄMPARE OCH RÖR	1
0810		83 84 323			2	.Clamp	.Klamma	1
0820		93 28 105		(8386476)	1	.Clamp	.Klamma	1
0830		93 65 404			2	.Rubber suspension	.Gummiupphängning	1
					1	.Rubber suspension	.Gummiupphängning	1

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

1	Engine body	1-D06
1	Lubrication system	1-D20
1	Fuel system	1-D22
1	Inlet and exhaust system	1-E10
1	Cooling system	1-E18
1	Engine control	1-E24
1	Complete sets	1-F02

10. Ch. -G6007150.

11. Ch. G6007151-.


SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R9306

Page 02 - 055

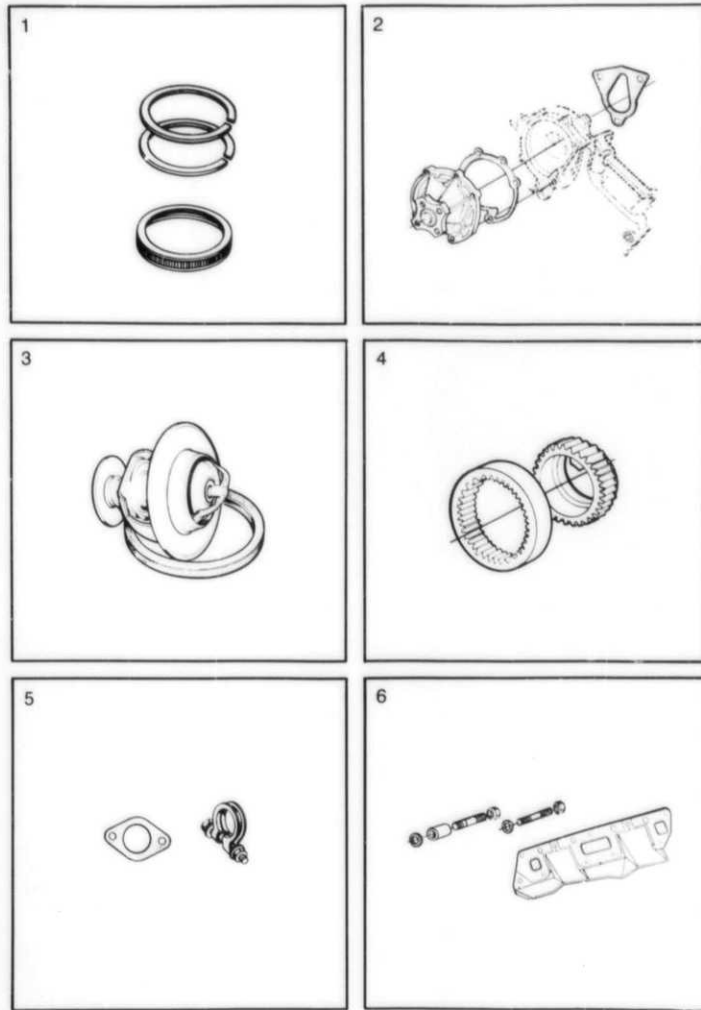

R 9307-90

1-F10


Complete sets
Engine

Satser
Motor

MASTER INDEX

1100	Pos	Part No./Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning	SL
0010	1	75 20 513	STD	X	KIT, PISTON RINGS	KOLVRINGSSATS	3
0020		83 55 992	1)	1	,Compr. ring, upper	,Komp. ring, övre	6
0030		83 47 379	1)	1	,Compr. ring, lower	,Komp. ring, nedre	6
0040		83 49 771	1)	2	,Oil scraper	,Oljeskrapering	6
0050		83 49 789	1)	1	,Spring ring	,Fjäddering	6
0060	1	75 20 521	OVERSIZE 0,50 MM	X	KIT, PISTON RINGS	KOLVRINGSSATS	3
0070		83 56 008	1), OVERSIZE 0,50 MM	1	,Compr. ring, upper	,Komp. ring, övre	6
0080		83 51 942	1), OVERSIZE 0,50 MM	1	,Compr. ring, lower	,Komp. ring, nedre	6
0090		83 51 967	1)	2	,Oil scraper	,Oljeskrapering	6
0100		83 51 983	1)	1	,Spring ring	,Fjäddering	6
0110	1	75 20 539	OVERSIZE 1,0 MM	X	KIT, PISTON RINGS	KOLVRINGSSATS	3
0120		83 56 016	1), OVERSIZE 1,0 MM	1	,Compr. ring, upper	,Komp. ring, övre	6
0130		83 51 942	1), OVERSIZE 1,0 MM	1	,Compr. ring, lower	,Komp. ring, nedre	6
0140		83 51 959	1)	2	,Oil scraper	,Oljeskrapering	6
0150		83 51 975	1)	1	,Spring ring	,Fjäddering	6
0160		83 51 991	1)	1	,Spring ring	,Fjäddering	6
0170	2	88 17 900		X	COOLENT PUMP ASSY	KYLVÄTSKEPUMP KPL	2
0180		75 07 460	1)	1	,Coolent pump	,Kylvätskepump	2
0190		93 53 442		1	,Gasket	,Packning	2
0200		93 54 978		1	,Gasket	,Packning	2
0210	3	93 37 379	89° C	X	KIT, THERMOSTAT	SATS, THERMOSTAT	1
0220		93 14 865		1	,Thermostat	,Termostat	6
0230		83 52 692		1	,Gasket	,Packning	2
0240	4	88 17 561		X	KIT, IMPELLER,	SATS, PUMPHJUL FÖR	5
0250		75 15 588		1	OIL PUMP	OLJEPUMP	5
0260		75 15 596		1	,Impellor	,Pumphjul	5
0270				1	,Impeller	,Pumphjul	5
0280	5	88 18 197		X	MOUNTING KIT,	MONTERINGSSATS,	2
0290					FRONT MUFFLER	FRÄMRE LUDDÄMPARE	1
0300		83 86 450		2	,Clamp	,Klamma	1
0310		83 87 672		2	,Gasket	,Packning	1
0320	6	88 17 280		X	MOUNTING KIT,	MONTERINGSSATS,	5
0330					EXHAUST MANIFOLD	AVGASSAMLARE	5
0340		75 19 010	(9306804)	3	,Screw	,Skruv	5
0350		75 21 081	ALT. 9306796	1	,Screw	,Skruv	5
0360		93 50 588		4	,Screw	,Skruv	5
0370		93 06 820		7	,Nut	,Mutter	3
0380		93 06 812		4	,Spacer	,Distans	3
0390		80 73 249		7	,Washer	,Bricka	5
0400		75 61 772		1	,Gasket	,Packning	2

1. Not as separate spare part

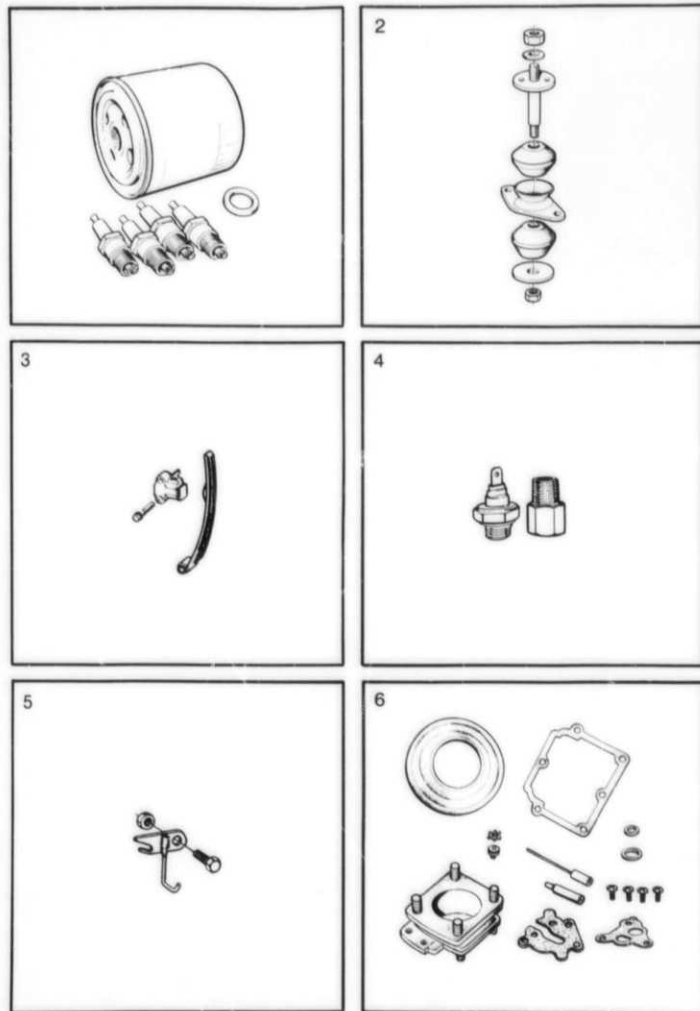

R 9308-90

1-F12

Complete sets
Engine







Satser
Motor

MASTER INDEX

1150
0340
0350
0360
0370
0380
0390
0400
0410
0420
0430
0440
0450
0460
0470
0480
0500
0510
0520
0540
0560
0600
0620
0660
0680
0700
0720
0740
0760
0780
0820
0840
0860
0880
0900
0920
0940
0960
0980
1000
1020
1040

Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	88 17 348 93 09 576 87 18 439 83 50 076			X	SERVICE PACKAGE	SERVICEPAKET	1
				1	,Oil filter	,Oljefilter	1
				1	,Gasket	,Packning	1
				4	,Spark plug	,Tändstift	1
2	93 23 809			X	REPAIR KIT, ENGINE CUSHION FRONT	SATS, BYTE FRÄMRE MOTORKUDDE	3
	75 47 227 83 35 028 93 23 775 93 24 765 93 23 791 80 73 108			2	,Rubber cushion	,Gummikudde	3
				1	,Bracket	,Fäste	6
				1	,Washer	,Bricka	4
				2	,Nut	,Mutter	5
				1	,Screw	,Skruv	4
				1	,Washer	,Bricka	5
3	88 17 405 93 58 672 93 58 680 81 25 064			X	,KIT, CHAIN TENSIONER	,SATS, KEDJESTRÄCKARE	3
				1	,Chain tensioner	,Kedjesträckare	3
				1	,Chain guide	,Kedjestyrning	3
				2	,Screw	,Skruv	5
4	88 18 528 75 22 402 75 64 248		1985	X	KIT, OIL WARNING CONTACT	SATS, OLJETRYCKSGIVARE	3
				1	,Oil warning contact	,Oljetrycksgivare	3
				1	,Adapter	,Adapter	6
5	75 38 440 75 37 145 79 70 353 79 78 620		-1986	X	KIT, REAR SUSPENSION EXHAUST PIPE	SATS, BAKRE UPPHÄNGNING AVGASRÖR	2
				1	,Suspension	,Upphängning	5
				2	,Screw	,Skruv	5
				2	,Locking nut	,Låsmutter	3
6	88 18 767 75 08 203 83 05 849 83 08 892 83 09 064 83 09 072 83 64 192 83 65 850 83 66 312 83 68 334 83 69 647 83 88 670 93 08 792		(SOLEX)	X	REPAIR KIT, CARBURETOR	REP SATS, FÖRGASARE	6
				1	,Gasket	,Packning	4
				1	,Gasket	,Packning	4
				1	,Screw	,Skruv	5
				1	,Washer	,Bricka	4
				1	,Washer	,Bricka	4
				1	,Clip	,Clips	3
				1	,Jet	,Munstycke	4
				1	,Fuel needle	,Bränslenål	4
				1	,Gasket	,Packning	4
				1	,Gasket	,Packning	4
				1	,Diaphragm	,Membran	1
				1	,Adjusting screw	,Justerskruv	3

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02
2 GROUP INDEX		
3	Engine body	1-D06
6	Lubrication system	1-D20
2	Fuel system	1-D22
2	Inlet and exhaust system	1-E10
5	Cooling system	1-E18
5	Engine control	1-E24
3	Complete sets	1-F02

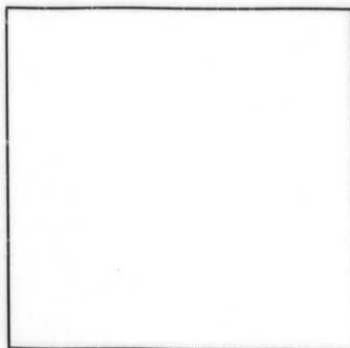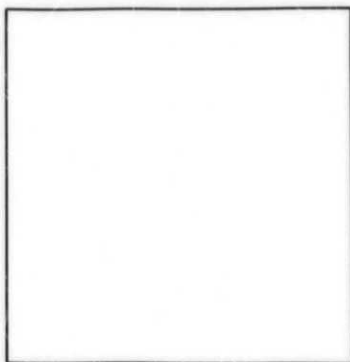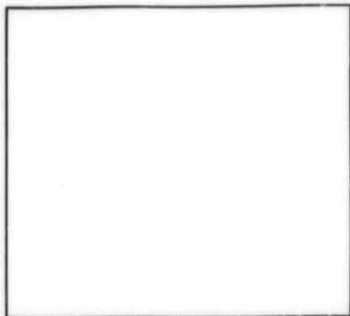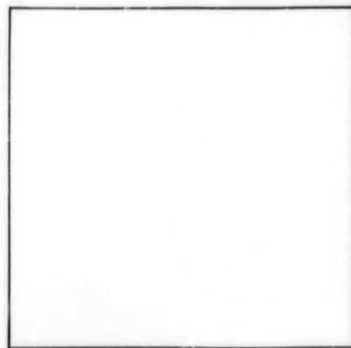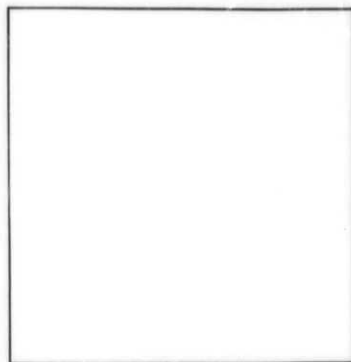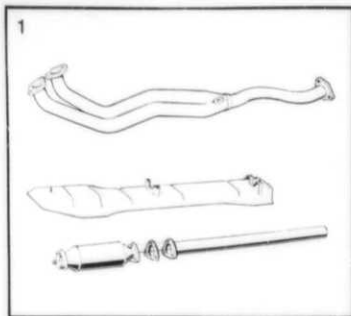

F2457 - 90

1-F14

Complete sets
Engine

Satser
Motor

1200	Pos	Part No/Art nr	k S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	• 88 19 187		FRONT	X	KIT, CATALYTIC CONVERTER	SATS.KATALYTISKREAKTOR	4
0020		• 40 15 616		"ENDAST BLYFRI BENSIN"	1	.Exhaust pipe	.Avgasrör	2
0030		• 75 37 764		FOR FUEL TANK LID	1	.Label	.Etikett	4
0040		79 10 540			2	.Washer	.Bricka	5
0050		79 10 557			3	.Washer	.Bricka	5
0060		79 22 503			2	.Screw	.Skruv	5
0070		• 79 70 437			2	.Cage nut	.Korgmutter	5
0080		80 74 106			13	.Nut	.Mutter	5
0090		80 83 941			3	.Screw	.Skruv	3
0100		• 93 49 804			1	.Heat protection	.Värmesköld	3
0110		• 83 28 726			1	.Sealing ring	.Tätningering	3
0120		• 83 28 759		CENTRE	1	.Exhaust pipe	.Avgasrör	1
0130		• 83 87 052			1	.Gasket	.Packing	1
0140		• 83 87 672			2	.Gasket	.Packing	1
0150		• 89 82 209			1	.Filler cap	.Tanklock	2
0160		• 75 33 797			1	.Catalytic converter	.Katalytisk reaktor	4
0170		• 93 35 118		"ENDAST BLYFRI BENSIN"	1	.Filler pipe	.Påfyllningsrör	5
0180		• 96 82 535		FOR INSTRUMENT PANEL	1	.Sign	.Textbricka	5
0200								
0210								

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2 GROUP INDEX

Engine body	1-D06
Lubrication system	1-D20
Fuel system	1-D22
Inlet and exhaust system	1-L10
Cooling system	1-E18
Engine control	1-E24
Complete sets	1-F02

3

Elektriskt system, Instrument
Electrical system, Instruments
Elektrisches system, Instrumente
Équipement électrique, Instruments
Sistema eléctrico, Instrumentos

1-G02

0050

0080

0100

0120

0160

0220

0240

0260

0280

0300

0435

0440

0460

0500

0560

0570

0580

0620

0640

0660

0680

0700

0720

0760

0800

0840

0860

0930

0940

0960

1000

1020

1060

1070

1080

1090

1100

1120

1140

1190

1240

1260

1280

1300

1310

1435

1440

1460

1500

1560

1570

1580

1620

1640

1660

1680

1700

1720

1760

1800

1840

1860

1930

1940

1960

2000

2020

2040

2050

CONTENTS

Battery and battery cables

Alternator

Starter

Ignition system:

Ignition coil, cables, spark plugs, ignition and starter switch and ignition resistance unit

Distributor, Bosch

Lighting:

Headlights, Halogen

Direction indic./parking and side position lights

Tail light, license plate light

Other lights

Electrical equipment, other:

Signal horn

Signal button, etc

Windshield wipers

Headlight wipers

Windshield- and headlight washer

Controls and switches

Wiring and fuses:

Wiring, terminal board, etc

Replacement cable terminals

Connectors, etc

Fuse box, fuses

Instruments

Complete sets

Electrical system

INNEHÅLLSFÖRTECKNING.

Batteri och batterikablar

Generator

Startmotor

Tändsystem:

Tändspole, tändkablar, tändstift-, tänd- och startkontakt och förkopplings-

motstånd

Tändfördelare, Bosch

Belysning:

Strålkastare, Halogen

Blink-/parkerlykta och sidomarkeringslykta

Baklykta, nummerplåtbelysning

Övrig belysning

Övrig elektrisk utrustning:

Signalhorn

Signalkontakt, etc

Vindrutetorkare

Strålkastartorkare

Vindrute- och strålkastarspolare

Manöverdon och kontakter

Ledningar och säkringar:

Ledningar, kopplingsplintar, etc

Kompletteringskablar

Säkringshus, kontaktus, etc

Säkringsdosa, säkringar

Instrument

Satser

Elektriskt system

3 : 5 1-G06

3 : 7 1-G08

3 : 9 1-G10

3 : 11 1-G12

3 : 13 1-G14

3 : 15 1-G16

3 : 17 1-G18

3 : 19 1-G20

3 : 21 1-G22

3 : 23 1-G24

3 : 25 1-H02

3 : 27 1-H04

3 : 29 1-H06

3 : 31 1-H08

3 : 33 1-H10

3 : 37 1-H14

3 : 39 1-H16

3 : 41 1-H18

3 : 43 1-H20

3 : 45 1-H22

3 : 47 1-H24

3 : 5 1-G06

3 : 7 1-G08

3 : 9 1-G10

3 : 11 1-G12

3 : 13 1-G14

3 : 15 1-G16

3 : 17 1-G18

3 : 19 1-G20

3 : 21 1-G22

3 : 23 1-G24

3 : 25 1-H02

3 : 27 1-H04

3 : 29 1-H06

3 : 31 1-H08

3 : 33 1-H10

3 : 37 1-H14

3 : 39 1-H16

3 : 41 1-H18

3 : 43 1-H20

3 : 45 1-H22

3 : 47 1-H24

MASTER INDEX

0 General 1-A02

1 Tools 1-B02

2 Engine 1-D02

3 Electrical system, Instruments 1-G02

4 Transmission 1-I02

5 Brakes 1-K02

6 Front assembly, Steering 1-L02

7 Suspension, Wheels 2-A02

8 Body 2-B02

9 Tool, Labels 2-G02

10 Numerical register 2-H02

3 GROUP INDEX

Battery and battery cables 1-G06

Alternator 1-G08

Starter 1-G10

Ignition system 1-G12

Lighting 1-G16

Electrical equipment, other 1-G24

Wiring and fuses 1-H14

Complete sets 1-H24

1-G03

INHALTSVERZEICHNIS.

Batterie, Batterieleitungen	3 : 5	1-G06
Lichtmaschine	3 : 7	1-G08
Anlasser	3 : 9	1-G10
Zündsystem:		
Zündsystem, Zündkabeln, Zündkerzen, Zünd- und, Anlasserkontakt und Serienwiderstand	3 : 11	1-G12
Zündverteiler, Bosch	3 : 13	1-G14
Beleuchtung:		
Scheinwerfer, Halogen	3 : 15	1-G16
Blink- und Parkleuchte und Seitmarkierungsleuchte	3 : 17	1-G18
Schlussleuchte, Nummernschildbeleuchtung	3 : 19	1-G20
Übrige Beleuchtung	3 : 21	1-G22
Sonstige elektrische Ausrüstung:		
Signalhupe	3 : 23	1-G24
Signalkontakte usw	3 : 25	1-H02
Scheibenwischer	3 : 27	1-H04
Scheinwerferwischer	3 : 29	1-H06
Scheibenwascher - Scheinwerferwischer	3 : 31	1-H08
Elektrische Steuergeber und kontakte	3 : 33	1-H10
Leitungen und sicherungen:		
Leitungen, Leitungskupplungen usw	3 : 37	1-H14
Ersetzen Kabelschuhe	3 : 39	1-H16
Kabelverbinder, Kontaktgehäuse usw	3 : 41	1-H18
Sicherungsdose, Sicherungen	3 : 43	1-H20
Instrumente	3 : 45	1-H22
Komplete sätze		
Elektrisches system	3 : 47	1-H24

TABLE DES MATIERES

Batterie et câbles de batterie	3 : 5	1-G06
Alternateur	3 : 7	1-G08
Démarrreur	3 : 9	1-G10
Système d'allumage:		
Bobine, câbles, bougies, serrure de contact et de démarrage et ristance de série	3 : 11	1-G12
Distributeur d'allumage, Bosch	3 : 13	1-G14
Eclairage		
Phares, Halogène	3 : 15	1-G16
Clignotant/feu statinnement et feu position	3 : 17	1-G18
Lanterne AR, eclaiage plaque de police	3 : 19	1-G20
Autre eclaiage	3 : 21	1-G22
Autre équipement électrique		
Avertisseur sonore	3 : 23	1-G24
Contact d'avertisseur, etc	3 : 25	1-H02
Essuie-glace	3 : 27	1-H04
Essuie-phares	3 : 29	1-H06
Lave-glace et lave-phares	3 : 31	1-H08
Dispositifs de comande et contacts	3 : 33	1-H10
Conduites et fusibles:		
Conduites, manchons de raccordement, etc	3 : 37	1-H14
Cosses de câble AMP	3 : 39	1-H16
Blocs de raccordement, connecteurs, etc	3 : 41	1-H18
Boîte de fusibles, fusibles	3 : 43	1-H20
Instrument	3 : 45	1-H22
Jeux complets		
Equipment électrique	3 : 47	1-H24

1-G04

0050

SUMARIO


Batería y cables de batería	3 : 5	1-G06
Alternador	3 : 7	1-G08
Motor de arranque	3 : 9	1-G10
Sistema de encendido:		
Bobina, cables, bujías, cerradura de contacto y de arranque y resistencia de serie	3 : 11	1-G12
Distribuidor, Bosch	3 : 13	1-G14
Alumbrado		
Faros, halógeno	3 : 15	1-G16
Intermitente/luz aparcamento y de posición	3 : 17	1-G18
Luz de cola de matrícula	3 : 19	1-G20
Otro alumbrado	3 : 21	1-G22
Otro equipo eléctrico:		
Señal acústica	3 : 23	1-G24
Contacto de señal acústica, acolchado, etc	3 : 25	1-H02
Limpiaparabrisas	3 : 27	1-H04
Limpiacristales de faro	3 : 29	1-H06
Lavaparabrisas y lavacristales de faro	3 : 31	1-H08
Dispositivos de mando y contactos	3 : 33	1-H10
Conductos y fusibles		
Conductos, manguitos de conexión, etc	3 : 37	1-H14
Terminales de cable AMP	3 : 39	1-H16
Bloques de conexión, contactores, etc	3 : 41	1-H18
Caja de fusibles	3 : 43	1-H20
Instrumentos	3 : 45	1-H22
Juegos completos		
Sistema eléctrico	3 : 47	1-H24

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system,	
Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly,	
Steering	1-L02
7 Suspension,	
Wheels	2-A02
8 Body	2-B02
9 Tool,	
Labels	2-G02
10 Numerical	
register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

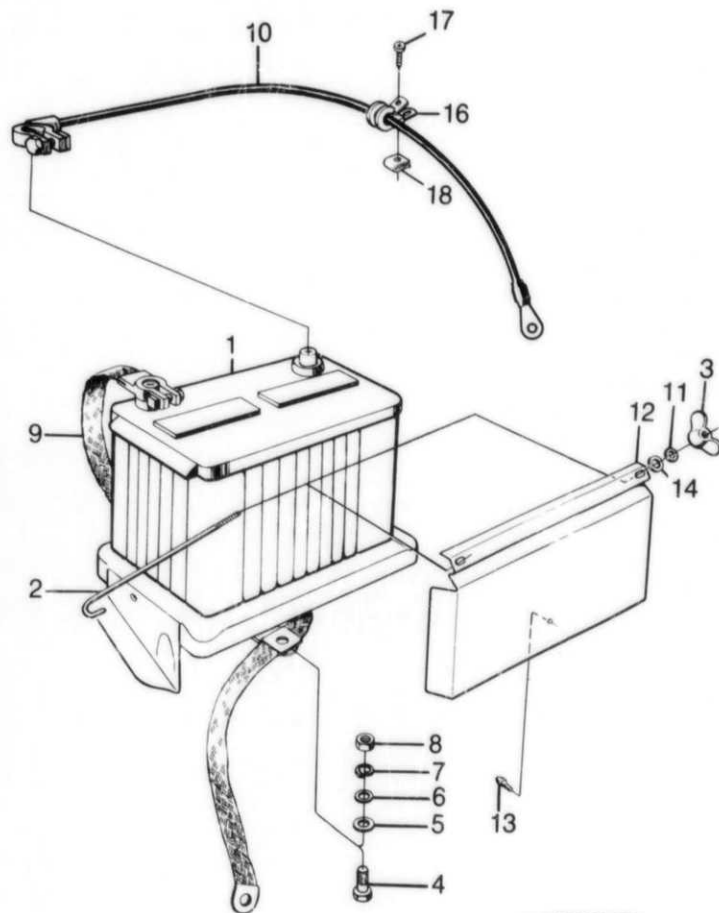

R 6213-90

1-G06

Battery and battery cables

Batteri och batterikablar


Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
1		SEE ACCESSORIES CATALOGUE	1	Battery, 60Ah	Batteri, 60Ah
2	73 26 580		2	Hook	Hake
3	79 70 460		2	Wing nut	Vingmutter
4	79 35 877		1	Screw	Skruv
5	79 16 497		1	Washer	Bricka
6	80 29 969		1	Washer	Bricka
7	79 10 540		1	Washer	Bricka
8	79 14 690		1	Nut	Mutter
9	85 19 904		1	Battery cable	Batterikabel
10	85 96 181		1	Battery cable	Batterikabel
11	79 15 564		2	Washer	Bricka
12	85 30 370		1	Heat guard	Strålningskydd
13	70 27 659		3	Plug	Plugg
14	80 29 969		2	Washer	Bricka
15	85 66 135		3	Clamp	Klamma
16	82 67 205		3	Screw	Skruv
17	82 67 098		3	Clip	Clip

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

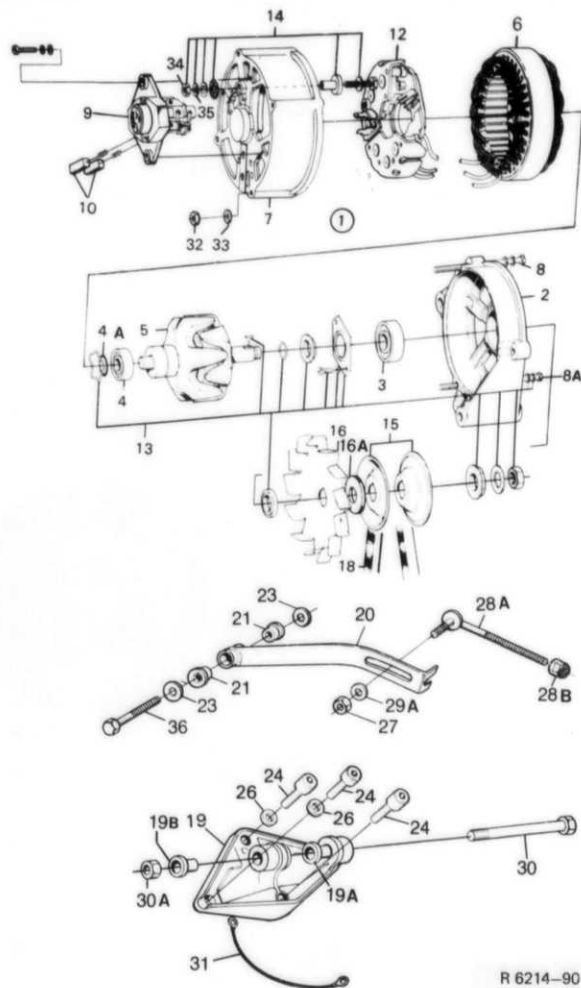

1-G08

Alternator, Bosch

Generator, Bosch

MASTER INDEX

0225

Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/Anst	Description	Beskrivning	S
0020	1	85 71 838		70A	1	Alternator assy	Generator kpl	5
0060	2	85 71 879			1	Drive end with bearing	Drivlager	6
0080								
0140	3	85 72 026			1	Bearing	Kullager	3
0160	4	85 72 034			1	Bearing	Kullager	6
0165	4A	85 65 590			1	O-ring	O-ring	4
0200	5	85 71 887			1	Rotor	Rotor	6
0240	6	85 71 861			1	Stator	Stator	6
0280	7	85 71 895			1	Slip ring bearing	Släpplingslager	6
0300	8	85 71 911			3	Screw	Skruv	6
0310	8A	85 72 042			1	Screw	Skruv	6
0340	9	85 71 846			1	Charging regulator	Laddningsregulator	2
0360	10	85 72 638	S		1	Brush set	Borstatts	3
0420	12	85 71 903			1	Rectifier unit	Likriktarenhet	6
0440	13	85 72 653	S		1	Part kit rotor	Delsats rotor	6
0480	14	85 51 673	S	(8558512)	1	Part kit connection B	Delsats anslutning B	6
0480								
0500	15	85 78 569			1	Belt pulley	Remskiva	5
0510	16A	85 78 577			1	Guide disc	Styrskiva	4
0520	16	85 50 147			1	Fan disc	Fläktskiva	6
0620	18	93 41 314		(9323510)	1	V-belt	Kilrem	1
0670	19	75 11 314			1	Bracket	Fäste	4
0680	19A	75 10 308			1	Rubber bushing	Gummibussning	6
0681	19B	75 10 332			1	Rubber bushing	Gummibussning	6
0690	20	75 18 947			1	Bar	Stag	5
0695	21	93 54 770			2	Bushing	Bussning	4
0775	23	73 11 772			2	Washer	Bricka	5
0780	24	80 98 089			3	Screw	Skruv	5
0795	26	80 29 985			3	Washer	Bricka	5
0800	27	80 74 106			1	Nut	Mutter	5
0823	28A	75 42 806			1	Adjusting screw	Ställskruv	5
0824	28B	79 71 922			1	Nut	Mutter	3
0828	29A	80 29 985			1	Washer	Bricka	5
0840	30	80 84 071			1	Screw	Skruv	5
0850	30A	80 74 106			1	Nut	Mutter	5
0880	31	85 87 222		(8568305)	1	Grounding cable	Jordkabel	6
0920	32	80 29 548			1	Nut	Mutter	5
0940	33	79 33 815			1	Washer	Bricka	5
0960	34	80 29 555			1	Nut	Mutter	5
0980	35	79 10 540			1	Washer	Bricka	5
0995	36	93 54 960			1	Screw	Skruv	5
1000		85 72 653		see page 3-047, 1-H24	1	Part kit, rotor	Delsats, rotor	6
1040		93 37 593		see page 3-047, 1-H24	X	Repair kit, alternator bracket	Rep. sats, generator fäste	6
1060								

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-G10

Starter

Startmotor


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

5	Battery and battery cables	1-G06
5	Alternator	1-G08
5	Starter	1-G10
5	Ignition system	1-G12
3	Lighting	1-G16
6	Electrical equipment, other	1-G24
6	Wiring and fuses	1-H14
6	Complete sets	1-H24

Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning
0020	1	40 17 299	1	Starter assy	Startmotor kpl
0040	2	75 27 716	1	Planetary gear	Planetväxel
0050	2	75 35 255	1	Planetary gear	Planetväxel
0060	3	75 27 724	1	Starter drive	Startmotordrev
0080	4	75 27 732	2	Bearing bushing	Lagerbussning
0100	5	75 27 740	1	Drive end bracket	Drevhus
0110	5	75 35 263	1	Drive end bracket	Drevhus
0120	6	75 27 757	1	Bearing bushing	Lagerbussning
0140	7	75 27 765	1	Engaging lever arm	Kopplingsarm
0160	8	75 27 773	3	Screw	Skruv
0170	8	75 35 271	3	Screw	Skruv
0180	9	75 27 781	1	Rotor	Rotor
0190	9	75 35 289	1	Rotor	Rotor
0200	10	75 27 799	1	Commutator bearing	Kommutatorlager
0210	10	75 35 297	1	Commutator bearing	Kommutatorlager
0220	11	75 27 807	1	Bearing bushing	Lagerbussning
0240	12	75 27 815	2	Screw	Skruv
0250	12	75 35 305	2	Screw	Skruv
0260	13	75 27 823	1	Cover cap	Kapsel
0270	13	75 35 313	1	Cover cap	Kapsel
0280	14	75 27 831	2	Screw	Skruv
0290	14	75 35 321	2	Screw	Skruv
0300	15	75 27 849	1	Washer	Bricka
0320	16	78 14 619	1	Nut	Mutter
0330	16	75 35 339	1	Nut	Mutter
0340	17	75 27 856	1	Starter solenoid	Manövermagnet
0360	18	75 27 864	1	Brush plate	Borstplatta
0380	19	75 27 872	1	Field winding	Fältindning
0400	20	75 27 880	1	Set of washer	Bricksats
0420	21	79 76 939	2	Screw	Skruv
0440	22	79 75 220	2	Nut	Mutter

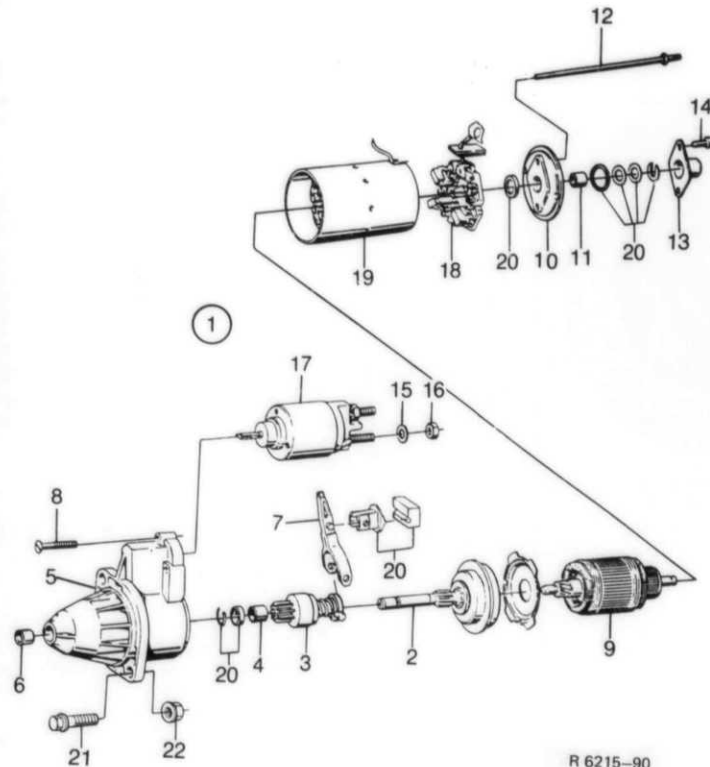


R 6215-90

8. Ch. --G6001503
9. Ch. G6001504--

SAAB genuine parts
original manufacturer

SAAB 90 M85-87

1990-02 R6215 Page 03-009

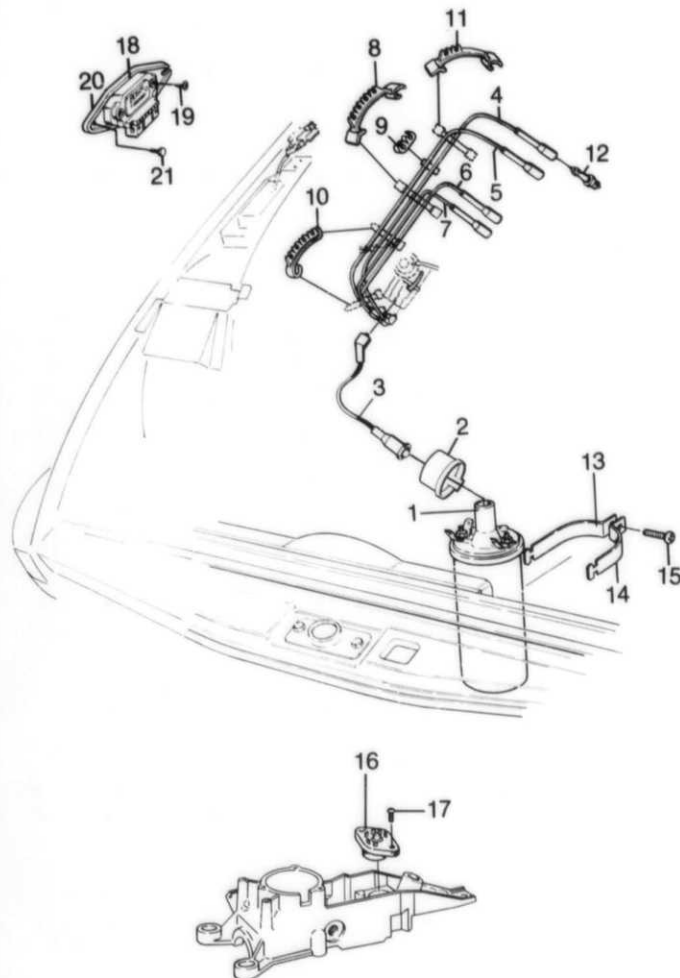

R 6216-90

1-G12

Ignition system
Ignition coil, cables,
etc.

Tändsystem
Tändspole
tändkablar, etc.


MASTER INDEX

0400	Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0060	1	85 73 834		1	Ignition coil	Tändspole	4
0080	2	85 66 374		1	Cover	Skydd	4
0240	3	75 11 157		1	Ignition cable distributor/coil	Tändkabel tändfordelare/spole	3
0454	4	75 61 061	(9355884), CYL 1	1	Ignition cable	Tändkabel	3
0460	5	75 61 079	(9355892), CYL 2	1	Ignition cable	Tändkabel	3
0615	6	75 61 087	(9355900), CYL 3	1	Ignition cable	Tändkabel	3
0620	7	75 61 095	(9355918), CYL 4	1	Ignition cable	Tändkabel	3
0765	8	93 58 086		1	Retainer	Tändkabelhållare	2
0770	9	93 53 673		1	Retainer	Hållare	2
0775	10	93 58 102		2	Retainer	Hållare	2
0776	11	93 58 094		1	Retainer	Hållare	2
0780	12	83 09 486	CHAMPION N-11Y	4	Spark plug	Tändstift	1
0800			40/232 148 007				
0820	12	83 88 514	BOSCH W 175 T 30	4	Spark plug	Tändstift	1
0840			40/234 107 001				
0900	12	83 50 076	NGK BP-6 ES	4	Spark plug	Tändstift	1
0920			40/236 160 008				
0940	12	88 12 810	AUTOLITE AG 22	4	Spark plug	Tändstift	1
0960			40/230 121 006				
0980	12	75 15 075	CHAMPION N9YC	4	Spark plug	Tändstift	1
1120	13	83 20 467	LH	1	Clamp	Klamma	5
1140	14	83 20 475	RH	1	Clamp	Klamma	5
1180	15	80 59 586		1	Screw	Skruv	4
1230	16	85 67 505		1	Ignition and starter switch	Tänd- och startkontakt	5
1231							
1240	17	79 34 300		2	Screw	Skruv	5
1260	18	85 73 826	-1985	1	Power stage	Effektsteg	5
1270	18	93 90 220	1986-	1	Power stage	Effektsteg	5
1280	19	79 73 381		2	Screw	Skruv	5
1300	20	85 74 816		1	Cooler plate	Kylplatta	5
1320		79 73 175		2	Screw	Skruv	5
1340	21	93 37 346	see page 3-047, 1-H24	X	Set, ignition cables	Sats, tändkablar	5

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

1	Battery and battery cables	1-G06
5	Alternator	1-G08
5	Starter	1-G10
4	Ignition system	1-G12
5	Lighting	1-G16
5	Electrical equipment, other	1-G24
5	Wiring and fuses	1-H14
5	Complete sets	1-H24

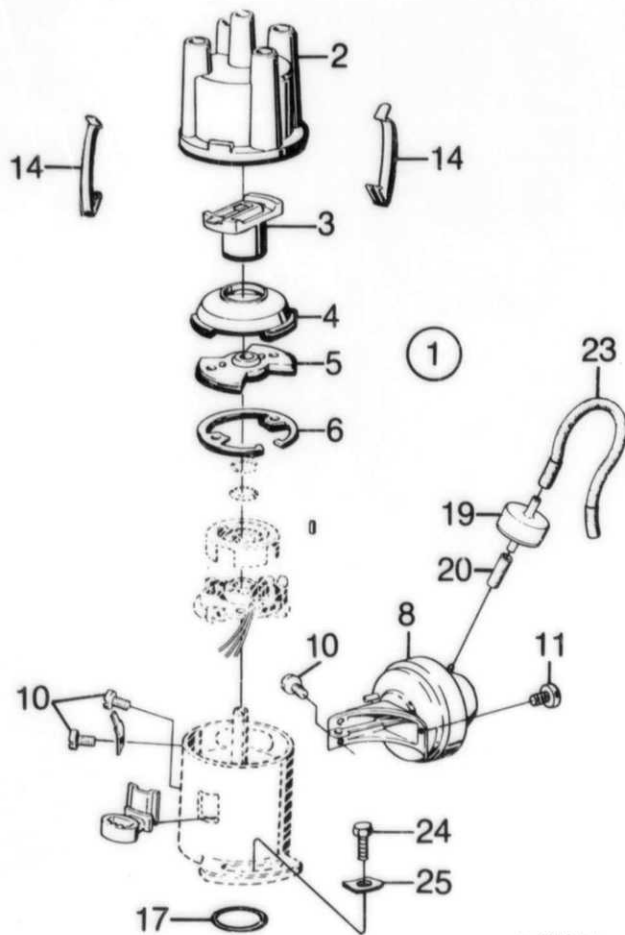

R 9310-90

1-G14

Ignition system
Distributor,
breakerless system 1984-

Tändsystem
Tändfördelare,
brytarlöst system 1984-

Pos	Part No./Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0750	1	75 01 570		1	Distributor assy	Tändfördelare, kpl	5
0020	2	75 01 216		1	Distributor cap	Fördelarlock	2
0040	3	93 55 488		1	Distributor arm	Fördelararm	3
0060	4	93 51 610		1	Dust protective	Dammskydd	6
0090	5	93 55 496		1	Bearing cap	Lagersköld	5
0100	6	93 51 636		1	Lock ring	Låsring	5
0120	8	75 18 541		1	Vacuum control unit	Vakuumregulator	4
0130	10	93 55 470		4	Screw	Skruv	5
0140	11	93 05 053		1	Screw	Skruv	5
0150	14	93 51 594		2	Spring clips	Hållfjäder	5
0160	17	93 51 750		1	Seal ring	Tätningring	6
0360	19	93 44 276	SW, CH	1	Delay valve (Brown, 2 sec.)	Fördrojningsventil (Brun, 2 sek.)	2
0380	20	83 27 868	SW, CH	1	Hose	Slang	5
0400	23	93 09 303		1	Hose	Slang	5
0420	24	80 19 929		3	Screw	Skruv	5
0430	25	93 08 990		3	Washer	Bricka	6
0460		93 59 605		X	Rebuilding kit	Rep. sats	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-G16

Lighting

Headlights, Halogen

Belysning

Strålkastare, Halogen


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0060	1	85 60 310			2	Headlight assy	Strålkastare kpl	4
0240	1	85 63 983		LH TRAFFIC	2	Headlight assy	Strålkastare kpl	4
0320	2	85 60 328			2	Headlight insert assy	Strålkastarinsats kpl	1
0400	2	85 63 991		LH TRAFFIC	2	Headlight insert assy	Strålkastarinsats kpl	1
0480	3	85 41 443			2	Retainer plate	Fästplatta	3
0600	4	85 10 919			4	Setting screw	Inställningsskruv	2
0620	5	73 34 063			4	Bushing	Bussning	3
0660	6	85 60 575			2	Bayonet ring	Bajonettring	4
0700	7	85 10 851		40/238 210 009	2	Bulb H4	Glödlampa H4	1
0740	8	85 41 450			2	Bushing	Bussning	3
0760	9	73 34 253			2	Support bushing	Stödbussning	3
0800	10	85 60 336			2	Sealing	Tätning	4
0820	11	79 22 263			8	Screw	Skruv	5
0840	12	80 73 090			4	Washer	Bricka	5

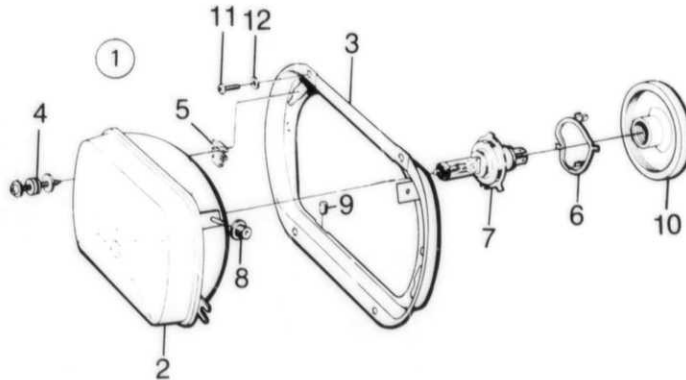

R 6218-90

1-G18

Lighting



Direction indic/parking
light front

Belysning

Främre blink/parkerlykta

MASTER INDEX


0950	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0020	1	85 77 819	LH	1	Direct. indic/parking light front	Främre blink/parkerlykta	2
0030	2	85 51 939	LH	1	Lamp housing	Lamphus	1
0040	3	85 77 876	LH	1	Glass	Glas	1
0060	1	85 77 827	RH	1	Direct. indic/parking light front	Främre blink/parkerlykta	2
0070	2	85 51 947	RH	1	Lamp housing	Lamphus	1
0080	3	85 77 884	RH	1	Glass	Glas	1
0090	4	85 32 731	LH	1	Seal	Tätning	5
0100	4	85 32 749	RH	1	Seal	Tätning	5
0110	5	85 32 756	21/5W	X	Bulb	Glödlampa	1
0120	5	85 37 615	21/5W, YELLOW	X	Bulb	Glödlampa	1
0130	6	85 35 692	21W	X	Bulb	Glödlampa	1
0140	7	85 33 879		8	Screw	Skruv	5
0150	8	85 16 502		8	Washer	Bricka	5
0160	9	80 59 412		8	Screw	Skruv	5
0170	10	70 88 073		4	Washer	Bricka	5
0180	11	85 37 623		4	Sealing washer	Tättningsbricka	3

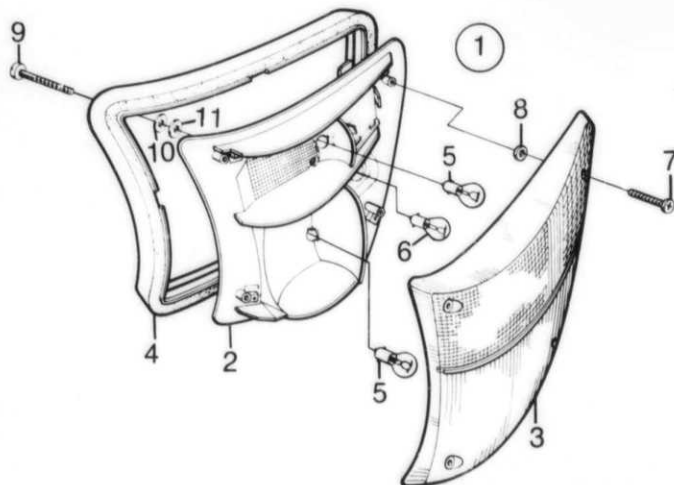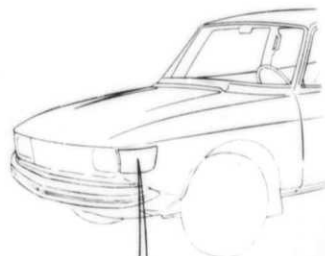

R 6219-90

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

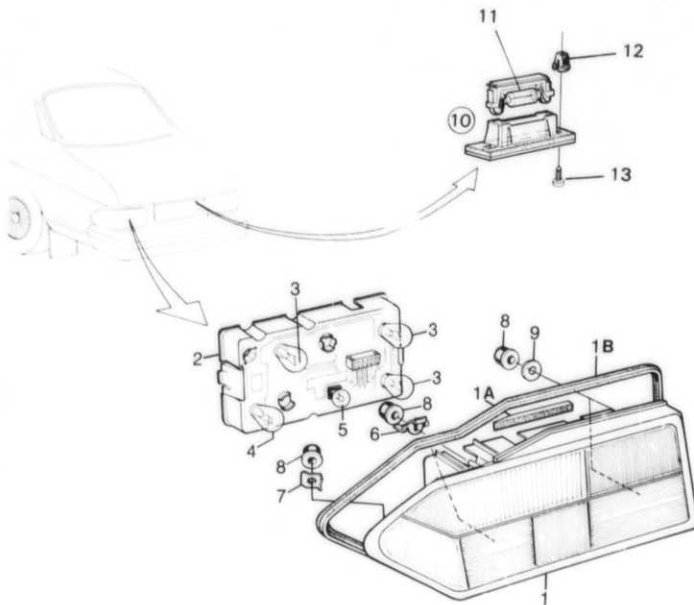

R 6220-90

1-G20

Lighting
Tail light, license plate
light

Belysning
Baklykta, nummerplåts-
belysning


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0045	1	85 85 879	LH, WITH FOGLIGHT	1	Tail light	Baklyk	3
0050	1	85 85 887	RH, WITH FOGLIGHT	1	Tail light	Baklyk	3
0100	1A	85 74 535	LH	1	Seal	Tätnings	5
0120	1A	85 74 543	RH	1	Seal	Tätnings	5
0140	2	85 85 978	LH	1	Back	Bakstycke	5
0160	2	85 85 986	RH	1	Back	Bakstycke	5
0180	3	71 54 719	40/238 290 001	3	Bulb	Glödlampa	1
0200	4	85 32 756	40/238 291 009	1	Bulb	Glödlampa	1
0220	5	85 72 406		1	Bulb	Glödlampa	1
0240	6	85 66 416		4	Attachment	Fästvinkel	6
0260	7	85 66 424		2	Attachment	Fästvinkel	6
0300	8	79 73 365		10	Nut	Mutter	5
0320	9	79 16 489		4	Washer	Bricka	5
0340	10	85 67 653		2	License plate light	Nummerskyltlykta	5
0360	11	70 84 197	40/238 261 002	1	Bulb	Glödlampa	1
0380	12	92 36 589		4	Clip	Clip	5
0400	13	79 22 230		4	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
1	Tools	1-302
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

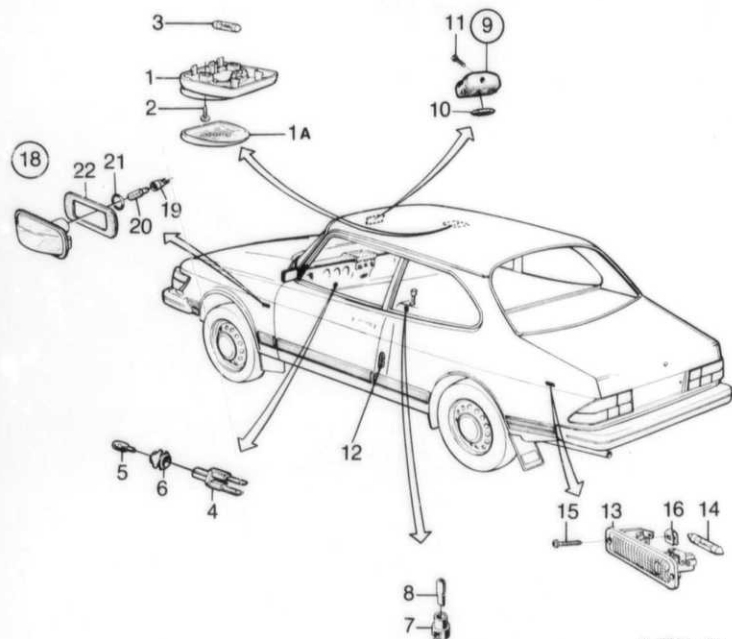

R 9298-90

1-G22

Lighting Other lights

Belysning Övrig belysning

1000	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
1080	1	85 18 367		-1986	1	Dome light, interior	Taklampa	4
1090	1	95 12 252		1987-	1	Dome light, interior	Taklampa	4
1095	1A	95 03 152		1987-	1	Lens	Lins	6
1100	2	79 70 346			2	Screw	Skruv	5
1120	3	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
1180	4	85 09 697			2	Bulb socket, lighting guide	Lamphållare ljusledare	5
1200	5	85 00 613		40/238 286 009	2	Bulb, lighting guide	Glödlampa, ljusledare	2
1220	6	85 10 331			1	Bulb socket bushing	Lamphållarbussning	3
1240	7	85 09 697			1	Bulb socket, ignition lock light	Lamphållare tändlåsbelysning	5
1290	8	85 00 613		40/238 286 009	1	Bulb	Glödlampa	2
1310	9	85 06 263			1	Rear view mirror lamp assy.	Backspegellampa kpl.	1
1320	10	70 84 197		40/238 261 002	1	Bulb	Glödlampa	1
1340	11	80 59 248			1	Screw	Skruv	5
1360	12	85 83 593			2	Reflector	Reflex	5
1390	13	85 77 801			1	Light, luggage compartment	Bagagerumslampa	3
1420	14	85 01 264		40/238 265 003	1	Bulb	Glödlampa	2
1440	15	79 70 346			2	Screw	Skruv	5
1460	16	79 72 771			2	Clip nut	Clipsmutter	5
1480	18	95 21 832		1986-, (95 13227)	2	Side direct, indic	Sidoblinklykta	3
1500	19	95 21 857		(95 12872)	2	Bulb holder	Lamphållare	6
1520	20	95 12 880			2	Bulb	Glödlampa	1
1540	21	95 12 898			2	Gasket	Packning	6
1560	22	95 12 906			2	Sealing	Tätning	6

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-G24

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0180	1	85 57 217			1	Horn assy	Signalhorn, kpl	4
0200	2	85 57 423			2	Retainer	Hållare	5
0230	3	85 55 302			1	Washer	Bricka	5
0250	4	85 55 294			1	Nut	Mutter	5
0350	5	85 60 609			1	Horn assy	Signalhorn kpl	4
0370	6	85 55 237			2	Retainer	Hållare	5
0390	7	85 55 302			1	Washer	Bricka	5
0410	8	85 55 294			1	Nut	Mutter	5
0680	10	80 82 927			3	Screw	Skruv	5
0690	10	80 21 982			1	Screw	Skruv	5
0730	11	79 71 658			1	Nut	Mutter	5
0780	12	85 31 568			2	Bracket	Fäste	6
0890	13	93 06 812			2	Spacer	Distans	3

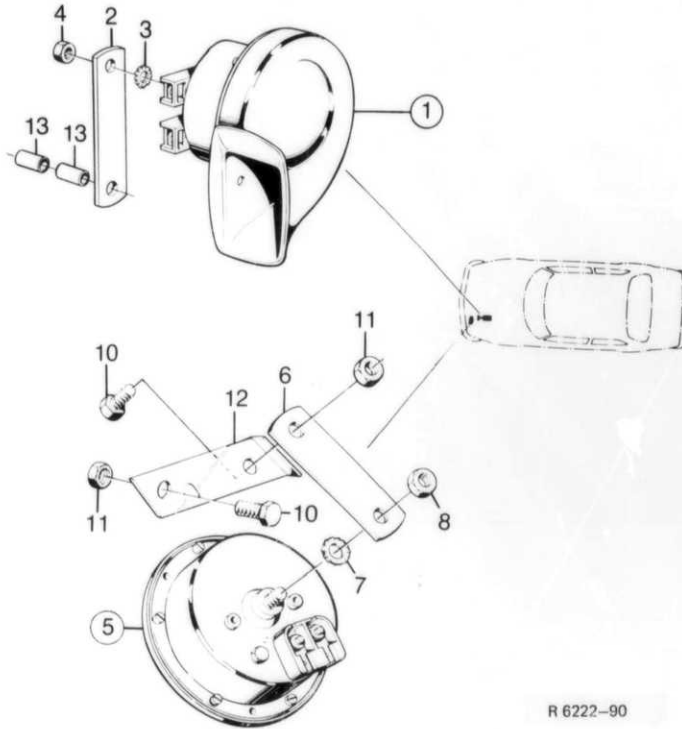

R 6222-90

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-H02

Electric equipment
Signal button etc.

Elektrisk utrustning
Signalkontakt etc.



MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02


3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0920	1	89 61 096		LH	1	Signal button	Signalknapp	S
0940	1	89 61 104		RH	1	Signal button	Signalknapp	S
0960	2	89 88 420			1	Grounding cable	Jordkabel	S
0980	3	89 89 675			1	Contact holder	Kontakthållare	S

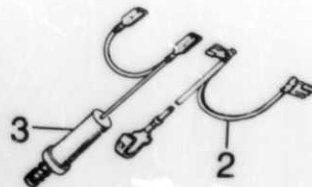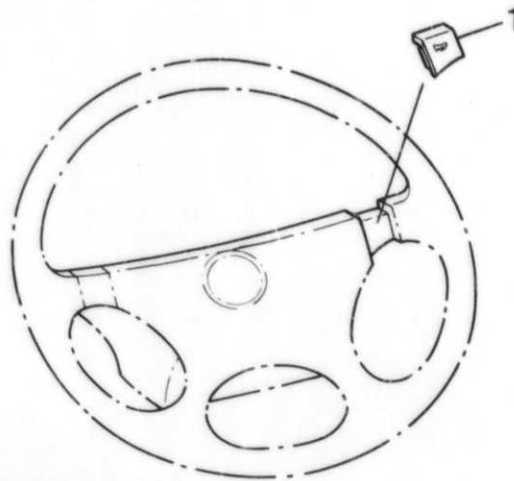

R 6223-90

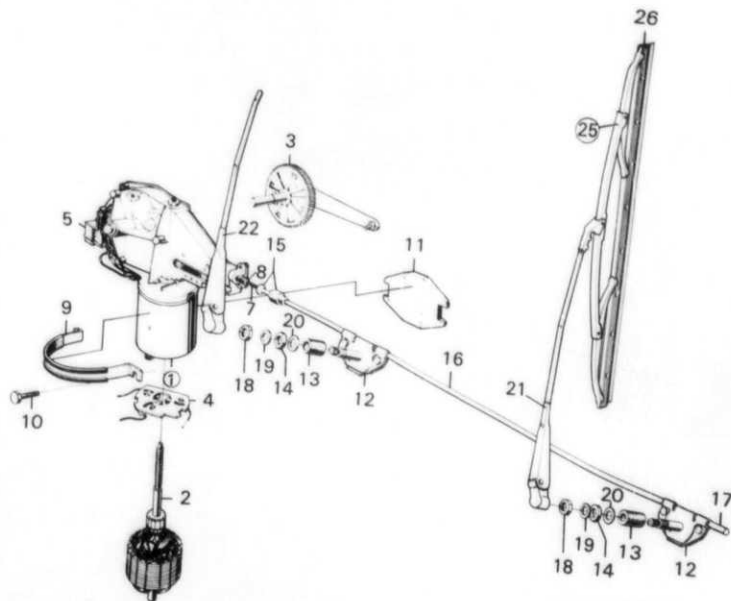

R 6224-90

1-H04

Electric equipment
Windshield wipers

Elektrisk utrustning
Vindrutetorkare

1200	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	85 45 220			1	Wiper motor assy.	Motor kpl.	5
0040	2	85 45 121			1	Armature	Rotör	5
0060	3	85 45 139			1	Gear and conn. rod	Driv med vevaxel	5
0080	4	85 45 147			1	Brush unit	Borsthållare med kol	5
0100	5	85 45 162			1	Limit switch	Parkeringskontakt	3
0120	7	85 16 577			1	Cable rack	Wire	3
0140	8	85 45 188			1	Bushing	Bussning	5
0160	9	85 21 767			1	Bracket wiper motor	Motorfäste	5
0200	10	79 67 938			1	Screw	Skruv	5
0220	11	85 12 477			1	Pad	Mellanlägg	4
0260	12	85 31 279			2	Pivot	Spindelhus	5
0300	13	85 31 311			2	Spacer sleeve	Distanshylsa	5
0340	14	85 31 329			2	Spacer washer	Distansbricka	5
0360	15	85 16 627			1	Tube	Rör	5
0380	16	85 16 635			1	Tube, center	Rör mittre	5
0400	17	85 16 643			1	Tube	Rör	5
0440	18	85 31 428			2	Nut	Mutter	5
0480	19	85 31 436			2	Washer	Bricka	5
0500	20	85 31 444			2	Washer	Bricka	5
0560	21	85 35 262		LH	1	Wiper arm	Torkararm	3
0590	22	85 35 270		RH	1	Wiper arm	Torkararm	3
0640	25	85 36 625			2	Wiper blade assy	Torkarblad kpl	1
0660	26	85 36 641	S		2	Rubber profile	Gummiprofil	2
0680		85 46 301		see page 3-047, 1-H24	X	Set, rubber profile	Sats, gummiprofil	2

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX


Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-H06

Electric equipment
Headlight wiper

Elektrisk utrustning
Strålkastartorkare

MASTER INDEX

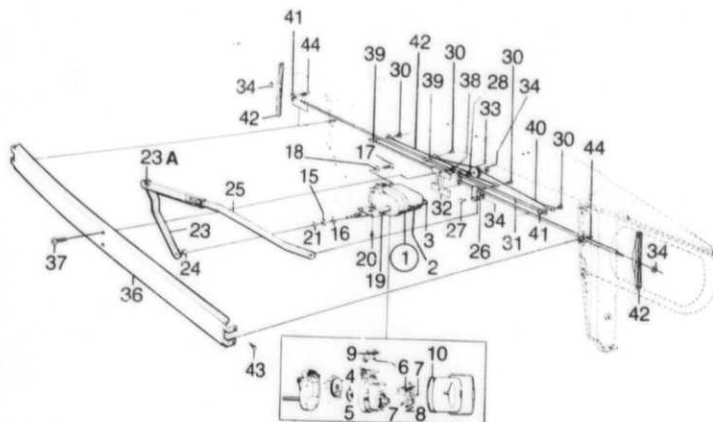

R 6225-90

1250	Pos	Part No/An nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0020	1	85 07 089	S		1	Motor, wiper	Motor, strålkastar-	3
0040						headlights	torkare	
0060	2	88 15 748			1	Cover	Kåpa	5
0080	3	88 15 755			1	Clamp	Bygel	5
0100	4	85 45 089			1	Kit gear	Sats drev	5
0120	5	85 05 448			1	Gear	Drev	5
0140	6	85 05 455			1	Carbon retainer assy	Kolhållare kpl.	5
0160	7	85 05 463			2	Carbon brush	Kol	5
0180	8	85 05 471			1	Spring	Fjäder	4
0200	9	85 45 402			1	Parking switch	Parkeringskontakt	3
0220	10	88 16 407			1	Gasket	Packning	4
0240	15	70 98 944	S		1	Nut	Mutter	5
0260	16	88 02 175	S		1	Washer	Bricka	5
0300	17	79 34 821			1	Screw	Skruv	5
0320	18	79 10 540	S		1	Washer	Bricka	5
0360	19	85 35 353			1	Bracket, wiper motor	Motorfäste	5
0380	20	79 61 949			3	Screw	Skruv	5
0410	21	85 65 350	S		1	Shaft seal	Axeltätning	4
0460	23	85 41 534			1	Crank arm	Vevarm	3
0470	23A	78 46 132			1	Plastic bearing	Plastlager	3
0480	24	80 19 887			1	Screw	Skruv	5
0520	25	85 07 105			1	Link	Stötstång	5
0540	26	85 08 970			1	Bushing	Ledbussning	3
0560	27	85 07 204			1	Pivot pin	Ledtapp	6
0580	28	85 35 361			1	Spacer sleeve	Distanshylsa	3
0600	30	80 19 705			4	Screw	Skruv	5
0620	31	85 07 253			2	Shaft	Axel	4
0640	32	85 10 182			1	Center bushing	Centrumbussning	3
0660	33	85 07 238			1	Cord pulley	Linhjul	3
0680	34	85 11 289	S		4	Lock clip	Spärryttare	5
0720	36	85 42 904			1	Protecting cover	Skyddsskåpa	3
0740	37	79 65 833			2	Screw	Skruv	5
0760	38	80 74 098			2	Nut	Mutter	5
0780	39	85 10 208			3	Bushing	Bussning	3
0800	40	85 08 285			2	Cord, nylon	Lina, nylon	3
0820	41	85 08 293			2	Bushing	Bussning	3
0840	42	85 12 717	S		2	Wiper blade	Torkarblad	2
0860	43	79 61 949			4	Screw	Skruv	5
0900	44	85 08 384	S		2	Spring	Fjäder	2
0920		88 15 649		see page 3-047, 1-H24	X	Kit, wiper blade	Sats, torkarblad	2
0980		85 45 212		see page 3-047, 1-H24	X	Kit, headlight wipers and washers	Sats, strålkastar-torkare	3
1000								

3 GROUP INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
3	Battery and battery cables	1-G06
	Alternator	1-G08
	Starter	1-G10
	Ignition system	1-G12
	Lighting	1-G16
	Electrical equipment, other	1-G24
	Wiring and fuses	1-H14
	Complete sets	1-H24

1-H08

Electric equipment
Headlight washer

Elektrisk utrustning
Strålkastarspolare


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1350	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S	L
0040	1	85 36 583				1	Container	Behållare	3	
0160	2	85 60 161				1	Filter	Filter	4	
0260	3	85 18 557				1	Cover	Lock	2	
0320	4	80 29 355				1	Nut	Mutter	5	
0380	5	80 29 989				1	Washer	Bricka	5	
0560	6	95 06 379				1	Washer pump	Spolarpump	2	
0600	7	95 12 583			10)	1	Bushir g	Bussning	3	
0610	7	95 28 795			11)	1	Bushing	Bussning	3	
0660	8	85 33 358				1	Hose	Slang	5	
0670	9	85 10 091				1	Branch pipe	Förgreningsrör	2	
0700	10	85 33 507			LH	1	Hose	Slang	5	
0740	11	85 33 457			RH	1	Hose	Slang	5	
0780	12	85 60 757			(8533499)	1	Hose	Slang	5	
0800	13	79 33 443				5	Clip	Clip	5	
0820	14	85 08 392				1	Retainer	Hållare	5	
0940	15	85 04 144				1	Jet	Munstycke	2	
0860	16	85 10 125			HEADLIGHTS	2	Jet	Munstycke	2	
0900	17	85 11 388				2	Back valve	Backventil	3	

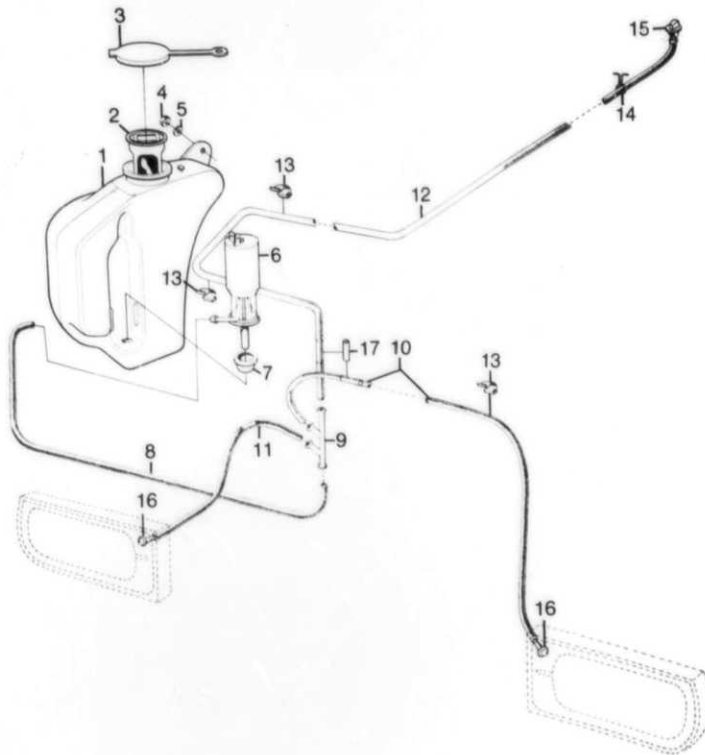

R 6226-90


10. Ch. --H6002230
11. Ch. H6002231--

SAAB genuine parts
original constructor

SAAB 90 M85-87

1990-02

R6226 Page 50/51 03-031

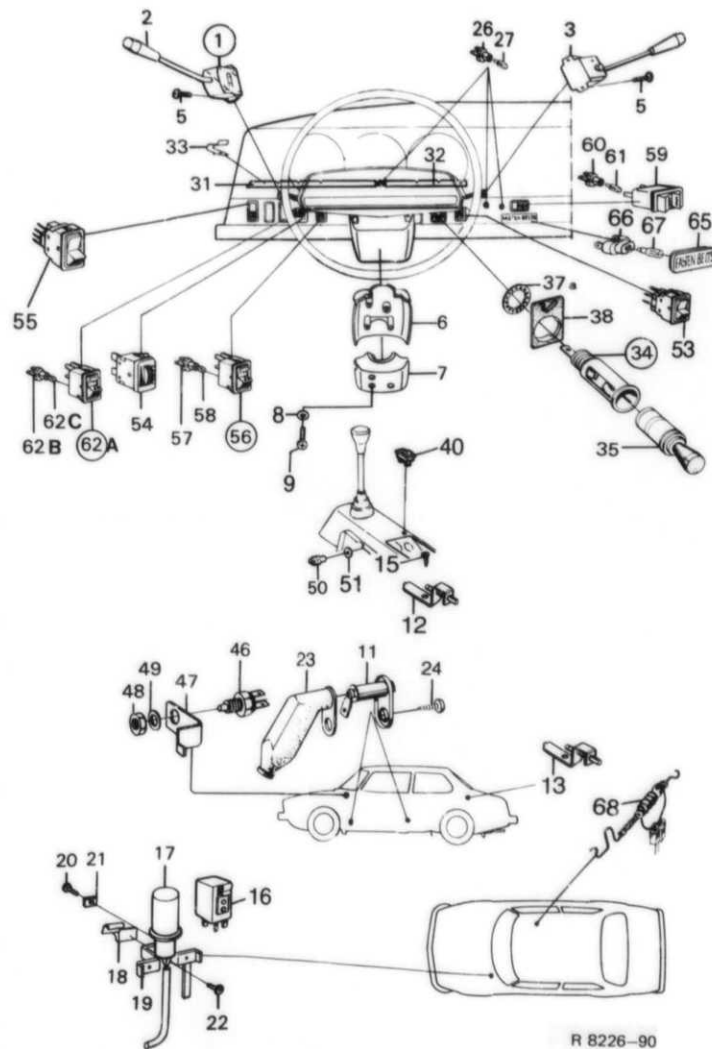

R 8226-90

1-H10

Electric equipment
Controls and switches

Elektrisk utrustning
Manöverdon och kontakter


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/Anst	Description	Benämning
1450	1	85 30 883	1	Switch, direction indicator	Strömställare, körriktningsvisare
0260	2	85 30 891	1	Knob	Knapp
0280	3	85 33 135	1	Switch, windshield wiper/washer	Strömställare vindrutetorkare/spolare
0300	3	85 33 143	1	Switch, windshield wiper/washer	Strömställare vindrutetorkare/spolare
0400	5	79 22 644	4	Screw	Skruv
0420	6	85 11 198	1	Steering column cover	Rattlagerkåpa
0440	6	85 13 293	1	Steering column cover	Rattlagerkåpa
0460	7	85 11 206	1	Steering column cover	Rattlagerkåpa
0500	7	85 13 301	1	Steering column cover	Rattlagerkåpa
0520	8	80 73 090	3	Washer	Bricka
0540	9	79 34 482	3	Screw	Skruv
0560	11	85 77 793	2	Door switch	Dörrkontakt
0580	12	85 78 312	1	Switch	Kontakt
0600	13	85 69 220	1	Switch	Kontakt
0620	15	79 22 362	1	Screw	Skruv
0640	16	85 88 634	1	Interval relay	Intervallrelä
0660	17	85 74 527	1	Flasher unit	Blinkdon
0680	18	85 02 338	1	Clip	Clip
0700	19	85 22 443	1	Retainer	Hållare
0720	20	79 22 735	1	Screw	Skruv
0740	21	79 19 574	1	Clip	Clip
0830	22	79 22 347	1	Screw	Skruv
0935	23	85 68 883	2	Cover	Skydd
0940	24	79 21 885	2	Screw	Skruv
1050	26	85 00 712	3	Bulb socket	Lamphållare
1060	27	85 00 613	3	Bulb	Glödlampa
1090	31	85 32 509	1	Lighting guide	Ljusledare
1120	32	85 08 004	1	Lighting guide	Ljusledare
1160	33	85 07 865	4	Clip	Clip
1180	34	85 39 538	1	Cigarette lighter assy	Cigarettändare kpl
1200	35	85 32 210	1	Pop-out unit	Rörig tändarenhet
1220	37A	85 32 426	1	Clip	Clip
1250	38	85 32 491	1	Cover washer	Täckbricka
1260	40	85 06 198	1	Flip-over switch	Tangentströmställare
1380	40	95 51 904	1	Flip-over switch	Tangentströmbrytare
1400	40	95 50 766	1	Flip-over switch	Tangentströmbrytare
1420	46	85 30 792	1	Brake light contact	Bromsljuskontakt
1440	47	85 28 259	1	Bracket	Konsol
1460	48	79 04 162	1	Nut	Mutter
1480	49	79 15 713	1	Washer	Bricka
1600	50	95 09 480	1	Back-up light contact	Backljuskontakt
1610	51	83 11 904	1	Washer	Bricka
1620	53	85 09 713	1	Switch, ventilation fan	Strömställare, ventilationsfläkt
1640	54	85 15 801	1	Reostat, instruments illumination	Reostat, instrumentbelysning
1660	55	85 33 218	1	Switch, light	Strömställare, ljus
1680	56	85 32 798	1	Switch, warning flasher	Strömställare, varningsblink
1820	57	85 00 712	1	Bulb socket	Lamphållare
1830	58	85 00 613	1	Bulb	Glödlampa
1840	59	85 85 739	1	Switch, rear demist	Strömställare, elbakruta
1860	60	85 00 712	1	Bulb socket	Lamphållare
1880	61	85 00 613	1	Bulb	Glödlampa

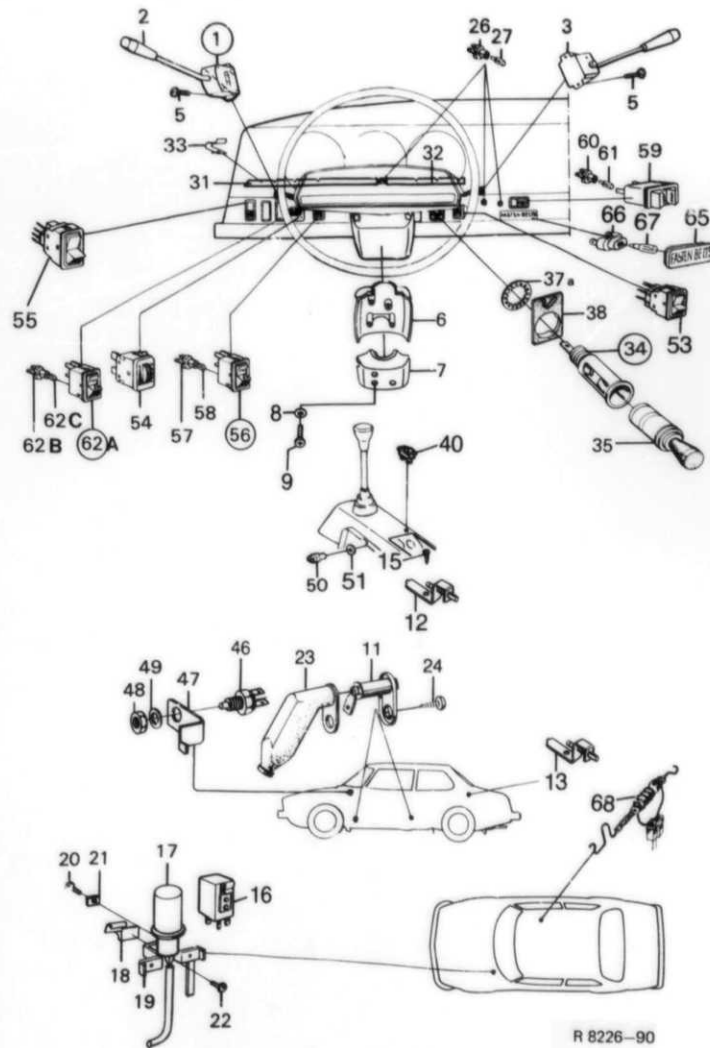

1-H12

Electric equipment
Controls and switches

Elektrisk utrustning
Manöverdon och kontakter

1450
2425
2426
2430
2435
2440
2460
2480
2500
2540


Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
62A	85 87 305			1	Switch, rear foglight	Strömställare, dim- bakljus
62B	85 00 712			1	Bulb socket	Lamphållare
62C	85 00 613		40/238 286 009	1	Bulb	Glödlampa
65			see page 8-023, 2-B24	1	Lens, seat belt warning lamp	Lins, bältesvarnings- lampa
66	85 09 697		40/238 286 009	1	Bulb socket	Lamphållare
67	85 00 613			1	Bulb	Glödlampa
68	85 99 516			1	Switch, seat cushion	Sitskontakt

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
4	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
7	Steering	1-L02
7	Suspension,	
8	Wheels	2-A02
8	Body	2-B02
9	Tool,	
9	Labels	2-G02
10	Numerical register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

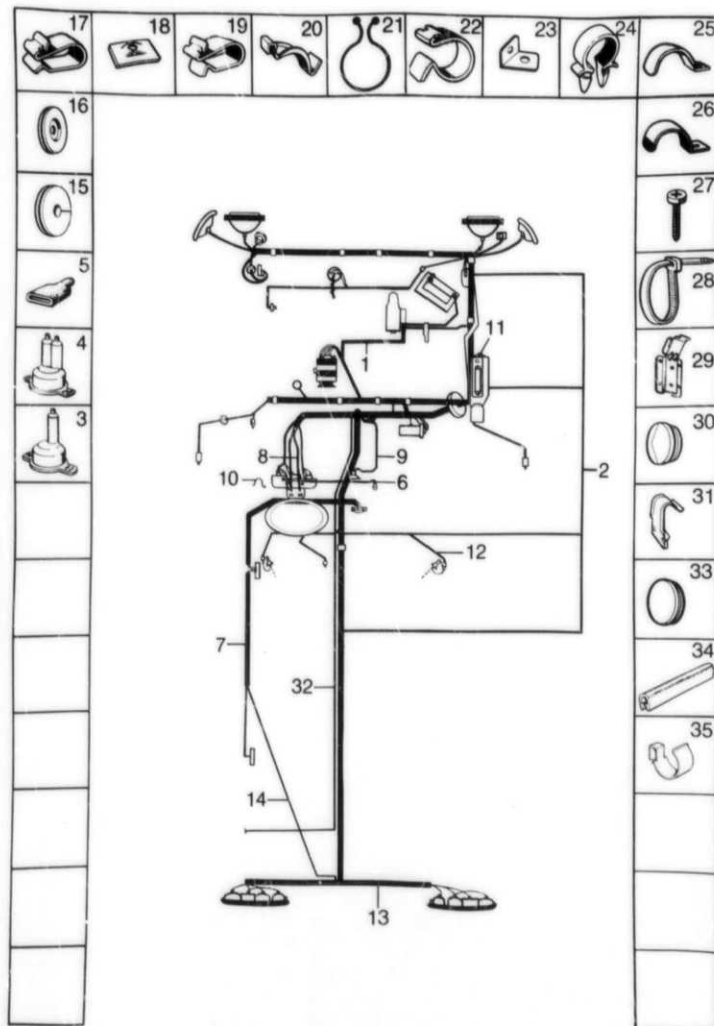

R8372-90

1-H14



Wiring and fuses
Wiring and terminal
board etc

Ledningar och säkringar
Ledningar och kopplings-
plintar etc

MASTER INDEX

Pos	Part No/Art nr	Notes/Anmärkningar	Description	Benämning
0020	1	85 96 173	ENGINE	Cable network
0025	2	95 59 899	1987-, SE, FI, EU	Ledningsnät
0045	2	95 52 621	-1986, FRONT, CENTRE, REAR	Ledningsnät
0048	2	95 57 950	1987-, FRONT, CENTRE, REAR	Ledningsnät
0050	3	85 34 968	1-POLE	Ledningsnät
0060	4	85 34 976	2-POLE	Ledningsnät
0070	5	85 72 083	TERMO CONTACT	Ledningsnät
0080	6	85 33 598	INSTRUMENTS	Ledningsnät
0100	6	85 33 606	INSTRUMENTS, RHD	Ledningsnät
0120	7	85 22 997	-1986, FOR TRUNK, MIRROR	Ledningsnät, inner-
0130	7	95 56 770	AND DOME LAMPS	belysning
0135	7	95 56 770	1987-, FOR TRUNK, MIRROR	Ledningsnät, inner-
0136	7	95 56 770	AND DOME LAMPS	belysning
0140	8	85 61 664	STEERING COLUMN	Ledningsnät, inner-
0160	9	85 29 265		belysning
0170	9	85 29 265		Ledningsnät, inner-
0180	10	85 07 436	CHOKE	belysning
0190	11	85 22 971		Ledningsnät, inner-
0200	11	85 09 093		belysning
0210	11	85 09 465	3A	Ledningsnät, inner-
0220	12	85 70 210	ONE HEATED SEAT	belysning
0230	12	85 70 228	TWO HEATED SEATS	Ledningsnät, el. sits
0240	12	85 70 236	SEAT BELT WARNING	Ledningsnät, el. sits
0260	13	85 68 701	TAIL LIGHT	Ledningsnät
0280	14	85 75 698	TRUNK LID	Ledningsnät
0300	15	73 09 370	40/260 107 925	Ledningsnät
0310	15	73 26 093	DOOR	Ledningsnät
0320	16	79 61 329	DASH PANEL	Ledningsnät
0330	17	71 56 409		Ledningsnät
0340	18	79 19 574		Ledningsnät
0350	19	79 51 783		Ledningsnät
0360	20	85 58 066	REAR NET, WORK	Ledningsnät
0380	21	85 11 065		Ledningsnät
0390	21	85 13 574	SEAT	Ledningsnät
0400	22	85 40 940		Ledningsnät
0410	23	85 52 655		Ledningsnät
0420	24	85 66 135	(8533242)	Ledningsnät
0430	24	85 36 419	FAN HOUSING	Ledningsnät
0450	24	85 39 587	FAN HOUSING	Ledningsnät
0470	25	79 49 084		Ledningsnät
0480	26	79 49 068		Ledningsnät
0490	27	79 22 891	CABLE CLAMP	Ledningsnät
0500	27	79 22 347	GROUNDING CLAMP	Ledningsnät
0510	27	79 61 949	HEADLIGHT WIPER MOTOR	Ledningsnät
0530	28	85 17 104		Ledningsnät
0540	28	83 74 357		Ledningsnät
0550	28	79 71 880		Ledningsnät
0560	29	85 69 360		Ledningsnät
0570	30	85 75 599	DIAMETER 25 MM	Ledningsnät
0580	30	70 38 342	DIAMETER 20 MM	Ledningsnät
0590	30	82 06 096	DIAMETER 12 MM	Ledningsnät
0600	31	85 85 325	1986-, REAR NETWORK	Ledningsnät
0610	32	85 74 139	1986-	Ledningsnät
0620	33	95 50 476	1986-, AERIAL CABLE	Ledningsnät
0630	34	82 78 558	1987-	Ledningsnät
0640	35	95 19 786	1987-	Ledningsnät

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
3	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
6	Steering	1-L02
7	Suspension,	
7	Wheels	2-A02
8	Body	2-B02
9	Tool,	
9	Labels	2-G02
10	Numerical	
10	register	2-H02
3	GROUP INDEX	
5	Battery and battery cables	1-G06
6	Alternator	1-G08
6	Starter	1-G10
6	Ignition system	1-G12
6	Lighting	1-G16
5	Electrical equipment, other	1-G24
5	Wiring and fuses	1-H14
5	Complete sets	1-H24

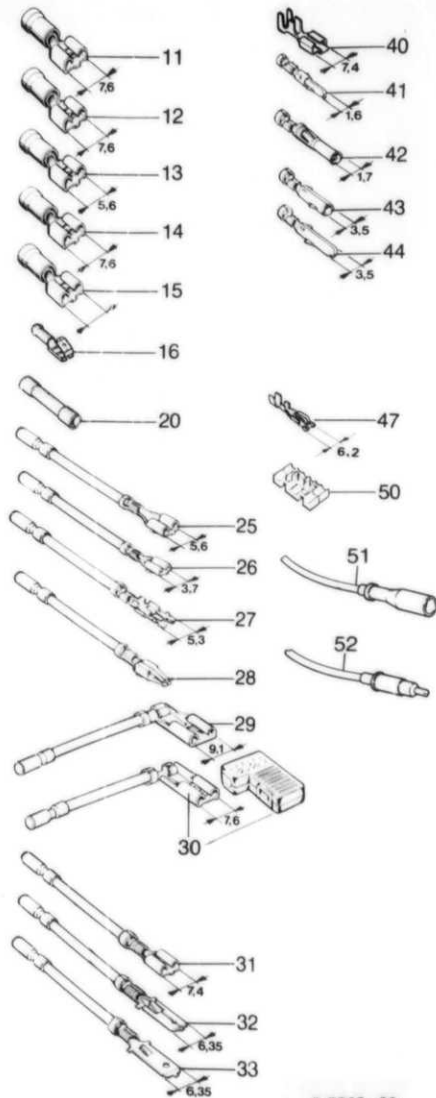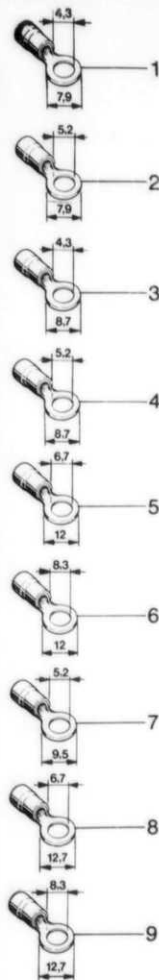

R 7223-90

1-H16

Wiring and fuses Replacement cable terminals

1700	Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0020	1	71 55 211	3) 40/253 152 003	X	Cable terminal	Ledningssko	5
0040	2	71 55 229	3) 40/253 153 001	X	Cable terminal	Ledningssko	5
0050	3	71 55 237	4) 40/253 172 001	X	Cable terminal	Ledningssko	5
0080	4	71 17 880	4) 40/253 173 009	X	Cable terminal	Ledningssko	5
0100	5	78 29 617	4) 40/253 174 007	X	Cable terminal	Ledningssko	5
0120	6	79 59 349	4)	X	Cable terminal	Ledningssko	5
0140	7	71 55 658	5) 40/253 210 009	X	Cable terminal	Ledningssko	5
0160	8	78 29 666	5) 40/253 211 007	X	Cable terminal	Ledningssko	5
0180	9	78 29 674	5) 40/253 212 005	X	Cable terminal	Ledningssko	5
0200	11	78 29 609	2) 40/253 168 009	X	Cable terminal	Ledningssko	5
0220	12	78 29 625	6) 40/253 195 002	X	Cable terminal	Ledningssko	3
0240	13	79 69 231	7)	X	Cable terminal	Ledningssko	5
0260	14	78 29 682	32) 40/253 226 005	X	Cable terminal	Ledningssko	3
0280	15	78 29 633	6) 40/253 197 008	X	Terminal, headlight	Lyktanslutning	5
0300	16	78 29 641	6) 45/30 24 650	X	Piggy-back	Snabbförgrening	3
0320	20	71 55 203	3) 40/253 164 008	X	Joint sleeve	Skarvhylsa	5
0340	20	71 55 146	4) 40/253 188 007	X	Joint sleeve	Skarvhylsa	5
0360	20	71 55 633	5) 40/253 221 006	X	Joint sleeve	Skarvhylsa	5
0380	25	85 22 567	3)	X	Cable terminal	Ledningssko	5
0400	26	85 22 575	3)	X	Cable terminal	Ledningssko	5
0420	27	85 22 609	3)	X	Cable terminal	Ledningssko	3
0440	28	85 22 617	4)	X	Cable terminal	Ledningssko	5
0460	29	85 22 518	4)	X	Cable terminal	Ledningssko	5
0480	30	85 22 526	4)	X	Cable terminal	Ledningssko	5
0500	31	85 22 534	4)	X	Cable terminal	Ledningssko	5
0520	32	85 22 542	4)	X	Cable terminal	Ledningssko	5
0540	33	85 22 559	4)	X	Cable terminal	Ledningssko	5
0580	40	85 41 203	0.5-1.5 MM2	X	Cable terminal	Ledningssko	5
0600	41	85 44 272	0.5-1.5 MM2	X	Cable terminal	Ledningssko	5
0620	42	85 67 075	0.5-1.5 MM2	X	Cable terminal	Ledningssko	5
0640	43	85 44 298	0.5-1.5 MM2	X	Cable terminal	Ledningssko	5
0660	44	85 44 314	0.5-1.5 MM2	X	Cable terminal	Ledningssko	5
0670	47	85 68 768		X	Cable terminal	Ledningssko	5
0680	50	85 21 668	0.8-2,1 MM2	X	Bridge connector	Ledningsöverkoppling	3
0700	51	78 74 498		X	Cable terminal	Ledningssko, hylsa	5
0720	52	78 74 506		X	Cable terminal	Ledningssko, stift	5

2. Red colour code (area 0.3-1.5 mm²)
3. Red colour code (area 0.25-1.6 mm²)
4. Blue colour code (area 1.0-2.6 mm²)
5. Yellow colour code (area 2.7-6.6 mm²)
6. Blue colour code (area 1.5-2.5 mm²)
7. Blue colour code (area 1.0-3.4 mm²)

Ledningar och säkringar Kompletterings kabelskor

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

1-H18


Wiring and fuses
Connectors etc.

Ledningar och säkringar
Skarvhus, kontakthus etc


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
3 GROUP INDEX		
4	Battery and battery cables	1-G06
4	Alternator	1-G08
4	Starter	1-G10
4	Ignition system	1-G12
4	Lighting	1-G16
4	Electrical equipment, other	1-G24
4	Wiring and fuses	1-H14
4	Complete sets	1-H24

1750	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	85 03 112		3-POLE	X	Connecting housing,	Kontakthus, lykt-och	5
0040						headlight and relay	reläanslutning	
0080	2	88 08 867		3-POLE	X	Connecting housing,	Kontakthus, lyktan-	5
0100						headlight angular	slutning, vinkel	
0140	3	85 03 484		4-POLE	X	Connecting housing,	Kontakthus, relä	4
0160						relay		
0180	4	78 29 690			X	Joint sleeve	Skarvhylsa	3
0200	5	78 29 708		40/253 265 003	X	Tonque for terminal	Flatsstift för snabb-	
0220							anslutning	
0240	6	78 29 716		40/253 300 008	X	Connector block for	Koppling för snabban-	
0260						terminal, 6-pole	slutning, 6-pol	
0280	7	78 29 724		40/253 302 004	X	Joint connector for	Skarvstycka för snabb	
0300						terminal, 1 x 2-pole	anslutning, 1 x 2-pol	
0320	8	71 55 112		1-POLE	X	Connector	Skarvhus	4
0340	9	71 55 120		1-POLE	X	Connector	Skarvhus	4
0360	10	71 55 096		2-POLE	X	Connector	Skarvhus	4
0380	11	71 55 104		2-POLE	X	Connector	Skarvhus	4
0400	12	71 55 070		6-POLE	X	Connector	Skarvhus	4
0420	13	71 55 088		6-POLE	X	Connector	Skarvhus	4
0440	14	85 03 229		8-POLE	X	Connector	Skarvhus	4
0460	15	85 03 211		8-POLE	X	Connector	Skarvhus	4
0480	16	85 03 138		12-POLE	X	Connector	Skarvhus	4
0500	17	85 03 146		12-POLE	X	Connector	Skarvhus	4
0520	18	85 03 120		12-POLE	X	Connecting housing	Kontakthus	4
0540	19	73 42 892		3-POLE	X	Connector	Skarvhus	4
0560	20	73 42 900		3-POLE	X	Connector	Skarvhus	4
0580	21	85 93 949		ELECTRONIC UNIT	X	Contact housing	Kontakthus	4
0600				IGNITION SYSTEM		7-pole	7-polig	
0620	30	83 78 630		2-POLE	X	Connector	Skarvhus	4
0640	40	85 21 650		2-POLE	X	Joining case	Kontakthus	4
0660	41	85 21 692			X	Termination iso-	Kabelskoisolering	4
0680						lateing		
0700	42	85 22 633		12-POLE	X	Connector	Skarvhus	4
0720	43	85 22 641		12-POLE	X	Connector	Skarvhus	4
0740	44	85 33 705		SWITCH WIPER-WASHER	X	Connector	Skarvhus	4
0760	45	85 30 669		LIGHT SWITCH	X	Connector	Skarvhus	4
0780	46	73 34 592		3-POLE	X	Connector,	Skarvhus,	4
0800						alternator-regulator	generator-regulator	
0820	51	85 68 735		8-POLE, TAIL LIGHT	X	Contact housing	Kontakthus	4

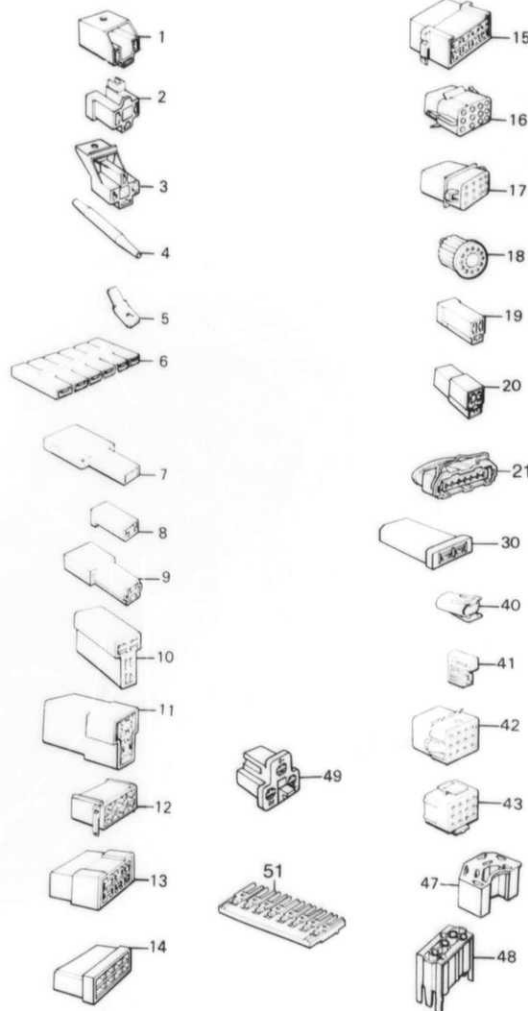

R 6574-90

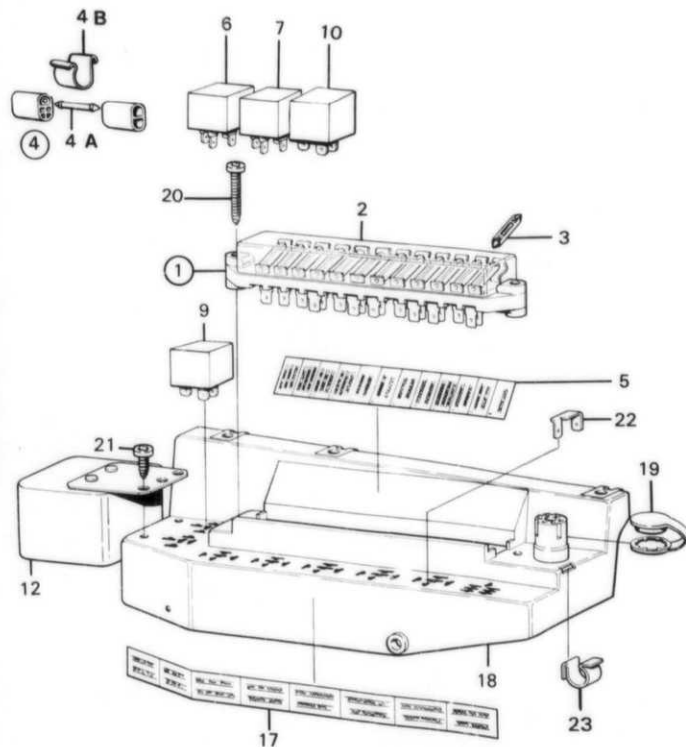

R 7776-90

1-H20

Wiring and fuses
Fuse box, fuses

Ledningar och säkringar
Säkringsdosa, säkringar

1850	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0120	1	85 42 946			1	Fuse box assy.	Säkringsdosa kpl	5
0140	2	85 02 197			1	Cover	Lock	3
0160	3	85 28 135		5A	4	Fuse	Säkring	1
0180	3	85 28 143		8A, 40/241 250 000	5	Fuse	Säkring	1
0200	3	85 28 150		16A	3	Fuse	Säkring	1
0205	4	85 64 007		REAR FOGLIGHT, EU	1	Fuse holder	Säkringshållare	4
0210	4A	85 28 135		5A, EU	1	Fuse	Säkring	1
0215	4B	79 51 783		EU	1	Clip	Clip	6
0445	5	85 81 019		SWEDISH TEXT	1	Label	Textskylt	5
0446	5	85 81 035		ENGLISH TEXT	1	Label	Textskylt	5
0447	5	85 81 027		FINNISH TEXT	1	Label	Textskylt	5
0448	5	85 81 043		GERMAN TEXT	1	Label	Textskylt	5
0460	6	85 22 310		COOLING FAN	1	Relay	Relä	3
0500	7	85 33 176		IGNITION LOCK	1	Relay	Relä	3
0560	9	85 22 310		ELECTRICAL REAR WINDOW	1	Relay	Relä	3
0640	10	85 33 259			1	Relay, headlight wipers and washers	Relä, strålkastar- torkare	3
0660								
0740	12	95 60 897		HEADLIGHTS	1	Relay	Relä	2
0900	17	85 33 093			1	Label, relay, english	Textskylt, relä, engelsk - tysk	5
0920								
0940	17	85 33 085			1	Label, relay, swedish	Textskylt, relä, svensk - finsk	5
0960								
1000	18	85 36 427			1	Bracket	Konsol	6
1020	19	85 28 077			1	Cover	Kåpa	6
1040	20	79 22 479		FUSE BOX	2	Screw	Skruv	5
1060	21	79 22 420		BRACKET	6	Screw	Skruv	5
1100	22	85 36 328			1	Connector joint	Överkopplingsdon	3
1120	23	85 13 574			1	Clip	Clip	6

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
3 GROUP INDEX		
	Battery and battery cables	1-G06
	Alternator	1-G08
	Starter	1-G10
	Ignition system	1-G12
	Lighting	1-G16
	Electrical equipment, other	1-G24
	Wiring and fuses	1-H14
	Complete sets	1-H24


1-H22

Instruments

Instrument

MASTER INDEX


Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
1900						
0070	1 85 75 649	1985	1	Speedometer Km	Hastighetsmätare Km	4
0071	1 85 78 858	1986-	1	Speedometer Km	Hastighetsmätare Km	4
0075	1 85 78 858	SW, 5-SPEED	1	Speedometer Km	Hastighetsmätare Km	4
0360	1 85 75 656	GB	1	Speedometer Miles	Hastighetsmätare Miles	4
0380						
0400	1 85 82 066	GB, 5-SPEED	1	Speedometer Miles	Hastighetsmätare Miles	4
0420						
0895	6 85 94 228		1	Combined instrument	Kombinationsinstrument	4
0960	7 88 55 298		6	Bulb socket	Lamphållare	4
0980	8 85 00 613	40/238 286 009	6	Bulb	Glödlampa	2
1040	9 85 75 680	1985	1	Clock	Klocka	5
1060	10 85 83 395		1	Tachometer with clock	Varvräknare m. klocka	4
1080	11 85 08 053		1	Instrument casing	Instrumenthus	6
1120	12 85 32 368		1	Covering glass, with trip-meter hole	Täckglas, med tripp-meterhål	6
1140			4	Screw	Skruv	5
1160	13 79 22 354		14	Screw	Skruv	5
1180	14 79 22 222	INSTRUMENTS	6	Screw	Skruv	5
1200	15 79 22 156	COVERING GLASS	1	Knob	Knapp	3
1220	16 85 09 721	CLOCK	1	Plug	Plugg	5
1260	18 85 07 873		2	Bulb socket	Lamphållare	5
1300	19 85 09 697		2	Bulb	Glödlampa	2
1320	20 85 00 613	40/238 286 009	1	Speedometer wire	Hastighetsmätarkabel	2
1410	22 85 59 973		1	Speedometer wire	Hastighetsmätarkabel	2
1530	22 85 59 981	RHD	1	Grommet	Genomföringsbussning	5
1800	33 85 20 421		1	Clip	Clip	5
2000	42 85 28 564		1	Screw	Skruv	5
2020	43 79 22 974	RHD	1	Clip	Clip	5
2040	44 79 71 880	FOR TRIPMETER	1	Knob	Knapp	3
2060	45 85 32 376	GREEN	2	Light filter	Lampfilter	6
2080	46 85 32 806					

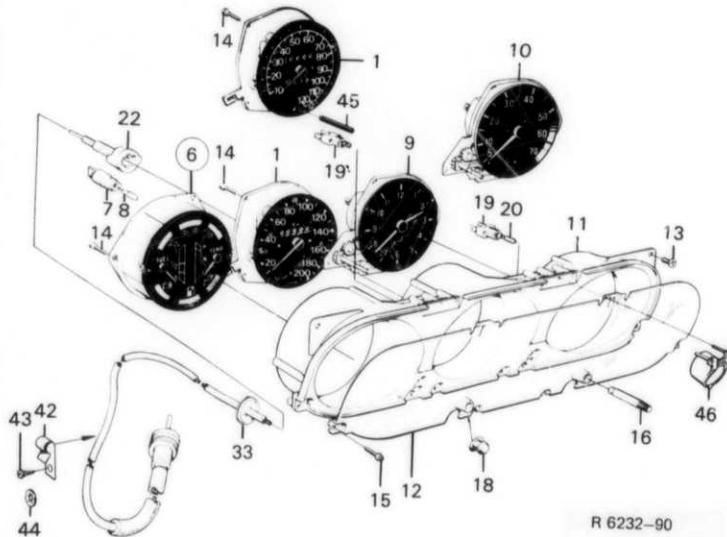

R 6232-90

3 GROUP INDEX

Battery and battery cables	1-G06
Alternator	1-G08
Starter	1-G10
Ignition system	1-G12
Lighting	1-G16
Electrical equipment, other	1-G24
Wiring and fuses	1-H14
Complete sets	1-H24

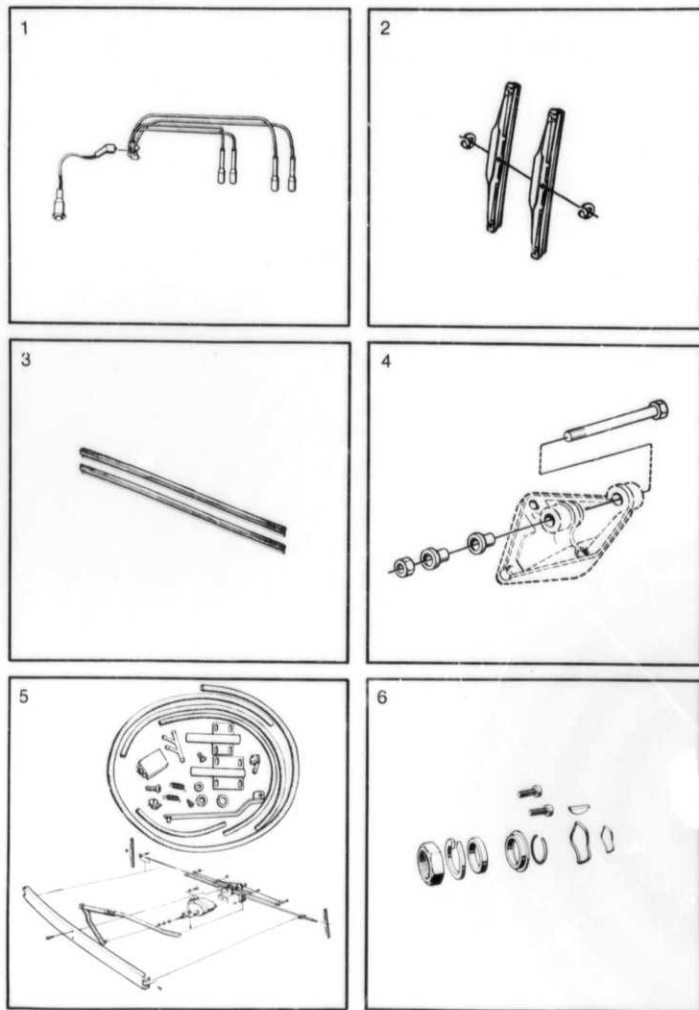

R 9299-90

1-H24

Complete sets
Electrical system

Satser
Elektriskt system

2000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	93 37 346			X	SET, IGNITION CABLES	SATS, TÄNDKABLAR	
0040		75 11 157			1	Ignition cable	.Tändkabel, fördelare-	3
0050						distributor-coil	spole	
0060		75 61 061	(9355926)		1	Ignition cable, cyl 1	.Tändkabel, cyl 1	3
0070		75 61 079	(9355934)		1	Ignition cable, cyl 2	.Tändkabel, cyl 2	3
0080		75 61 087	(9355942)		1	Ignition cable, cyl 3	.Tändkabel, cyl 3	3
0090		75 61 095	(9355959)		1	Ignition cable, cyl 4	.Tändkabel, cyl 4	3
0100								
0110	2	88 15 649			X	KIT, WIPER BLADE	SATS, TORKARBLAD	2
0120						HEADLIGHT WIPER	STRÅLKASTARTORKARE	
0130		85 12 717			2	Wiper blade	.Torkarblad	2
0140		85 11 289			2	Lock clip	.Spärryttare	3
0150								
0160	3	85 46 301			X	SET, RUBBER	SATS, GUMMIPROFIL	2
0170						PROFILE		
0180		85 36 641			2	Rubber profile	.Gummiprofil	2
0190								
0200	4	93 37 593			X	REPAIR KIT,	REPARATIONSSATS,	6
0210						ALTERNATOR BRACKET	GENERATORFÄSTE	
0220		75 10 308			1	Rubber bushing	.Gummibussning	6
0230		75 10 332			1	Rubber bushing	.Gummibussning	6
0240		80 84 071			1	Screw	.Skruv	5
0250		80 74 106			1	Nut	.Mutter	5
0260								
0270	5	85 45 212			X	KIT, HEADLIGHT	SATS, STRÅLKASTAR-	3
0280						WIPERS AND WASHERS	TORKARE OCH	
0290							SPOLARE	
0300		85 11 610			1	Wiper mechanism	.Torkarmekanism	5
0310		85 07 089			1	Motor	.Motor	3
0320		70 96 944			1	Nut	.Mutter	5
0330		88 02 175			1	Washer	.Bricka	5
0340		79 34 789			1	Screw	.Skruv	5
0350		85 35 353			1	Motor support	.Motorfäste	5
0360		79 22 719			5	Screw	.Skruv	5
0380		85 65 350	(7107238, 7155690)		1	Seal nut	.Tätning	4
0390		85 22 286			1	Relay	.Relä	3
0400		85 10 125			2	Jet	.Munstycke	2
0410		85 33 366			1	Hose	.Slang	5
0420		85 33 267			1	Hose	.Slang	5
0430		85 18 656			1	Hose	.Slang	5
0440		85 33 341			1	Hose	.Slang	5
0450		85 10 091			1	Branch tube	.Grenrör	2
0460		85 41 534			1	Crank arm	.Vevarm	4
0470		80 19 887			1	Screw	.Skruv	5
0480		79 33 443			4	Clip	.Clip	5
0490		71 55 500			1	Clip	.Clip	5
0500								
0600	6	85 72 653			X	PART KIT, ROTOR	DELSATS ROTOR	6

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
3	GROUP INDEX:	
	Battery and battery cables	1-G06
	Alternator	1-G08
	Starter	1-G10
	Ignition system	1-G12
	Lighting	1-G16
	Electrical equipment, other	1-G24
	Wiring and fuses	1-H14
	Complete sets	1-H24

4

Kraftöverföring
Transmission
Kraftübertragung
Transmission
Transmisión

Transmission

Kraftöverföring

1-102

0050
0020
0040
0060
0080
0100
0120
0140
0160
0180
0200
0240
0260
0280
0320
0340
0350
0360
0400
0460
0490
0500
0520
0540
0560
0580
0581
0582
0583
0585
0586
0920
0940
0960
0980
1000
1020
1040
1080
1100
1120
1170
1180
1200
1210
1240
1300
1330
1340
1360
1380
1400
1420
1421
1422

CONTENTS

Clutch			
Clutch, clutch disc, clutch cover	4 : 5	1-106	
Clutch control			
Pedal, master cylinder, LHD	4 : 7	1-108	
Pedal, master cylinder, RHD	4 : 9	1-110	
Gear box			
Primary gear case, 4-Speed	4 : 13	1-114	
Gear box case, oil pan, 4-Speed	4 : 15	1-116	
Primary gear case, 5-Speed	4 : 19	1-120	
Gear box case, oil pan, 5-Speed	4 : 21	1-122	
Release bearing, slave cylinder	4 : 25	1-J02	
Shafts, gears, gear shifts bars, 4-Speed	4 : 27	1-J04	
Shafts, gears, gear shifts bars, 5-Speed	4 : 31	1-J08	
Differential, inner universal joint	4 : 37	1-J14	

Gear box control			
Gear shift lever, -housing and -rod	4 : 39	1-J16	
Drive shafts, outer universal joint	4 : 41	1-J18	
Complete sets			
Transmission	4 : 43	1-J20	

INNEHÅLLSFÖRTECKNING

Koppling			
Koppling, lamell, kopplingsåpa	4 : 5	1-106	
Kopplingsmanövrering			
Pedal, huvudcylinder, LHD	4 : 7	1-108	
Pedal, huvudcylinder, RHD	4 : 9	1-110	
Växellåda			
Primärväxellåda, 4-Växlad	4 : 13	1-114	
Växellådashus, oljesump, 4-Växlad	4 : 15	1-116	
Primärväxellåda, 5-Växlad	4 : 19	1-120	
Växellådashus, oljesump, 5-Växlad	4 : 21	1-122	
Ultrampningslager, slavgylinder	4 : 25	1-J02	
Axlar, kugghjul, växelförare, 4-Växlad	4 : 27	1-J04	
Axlar, kugghjul, växelförare, 5-Växlad	4 : 31	1-J08	
Differential, inre knut	4 : 37	1-J14	

Växellådsmanövrering			
Växelåspak, växelåspakshus, växelstång	4 : 39	1-J16	
Drivaxlar, yttre knut	4 : 41	1-J18	
Satser			
Kraftöverföring	4 : 43	1-J20	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

4 GROUP INDEX

Clutch	1-106
Clutch control	1-108
Gear box	1-114
Gear box control	1-116
Complete sets	1-J20

1-103

INHALTSVERZEICHNIS

Kupplung			
Kupplung, Kupplungsscheibe, Kupplungshaube	4 : 5	1-106	
Kupplungsmechanismus			
Pedale, Hauptzylinder, linksgesteuerte	4 : 7	1-108	
Pedale, Hauptzylinder, rechtsgesteuerte	4 : 9	1-110	
Getriebe			
Primärtriebsgehäuse, 4-Gang-Getriebe	4 : 13	1-114	
Getriebegehäuse, Ölwanne, 4-gang-Getriebe	4 : 15	1-116	
Primärtriebsgehäuse, 5-Gang-Getriebe	4 : 19	1-120	
Getriebegehäuse, Ölwanne, 5-gang-Getriebe	4 : 21	1-122	
Ausrücklager, Nebenzylinder	4 : 25	1-J02	
Wellen, Zahnräder, Schaftführungen, 4-gang-Getriebe	4 : 27	1-J04	
Wellen, Zahnräder, Schaftführungen, 5-gang-Getriebe	4 : 31	1-J08	
Differential, inneres Antriebsgelenk	4 : 37	1-J14	
Getriebemechanismus			
Schalthebel, Schalthebelgehäuse, Schaltstange	4 : 39	1-J16	
Antriebsachse, äusseres Antriebsgelenk	4 : 41	1-J18	
Komplete Sätze			
Kraftübertragung	4 : 43	1-J20	

TABLE DES MATIERES

Embrayage			
Embrayage, disque, carter	4 : 5	1-106	
Commande d'embrayage			
Pédale, maître-cylindre, V-à-G	4 : 7	1-108	
Pédale, maître, V-à-D	4 : 9	1-110	
Boîte de vitesses			
Carter de engrenage primaire, 4-Vitesses	4 : 13	1-114	
Carter de boîte de vitesses, carter inférieur, 4-Vitesses	4 : 15	1-116	
Carter de engrenage primaire, 5-Vitesses	4 : 19	1-120	
Carter de boîte de vitesses, carter inférieur, 5-Vitesses	4 : 21	1-122	
Butée d'embrayage, cylindre esclave	4 : 25	1-J02	
Arbres pignons-fourchettes entraînevitesses, 4-Vitesses	4 : 27	1-J04	
Arbres pignons-fourchettes entraînevitesses, 5-Vitesses	4 : 31	1-J08	
Differential, joint cardan intérieur	4 : 37	1-J14	
Commande de boîte de vitesses			
Lévier, boîte et triangle de changement de vitesses	4 : 39	1-J16	
Arbre d'entraînement, joint cardan extérieur	4 : 41	1-J18	
Jeux complets			
Transmission	4 : 43	1-J20	

1-104

SUMARIO

Embrague			
embrague, disco de embrague, tapa de embrague	4 : 5	1-106	
Mando de embrague			
Pedal, cilindro principal, D. a l.	4 : 7	1-108	
Pedal, cilindro principal, D. a d.	4 : 9	1-110	
Cambio			
Caja de engranaje primario, 4-Velocidades	4 : 13	1-114	
Cárter de caja de cambios, 4-Velocidades	4 : 15	1-116	
Caja de engranaje primario, 5-Velocidades	4 : 19	1-120	
Cárter de caja de cambios, 5-Velocidades	4 : 21	1-122	
Coinete de empuje, cilindro esclavo	4 : 25	1-J02	
Ejes, engranajes, horquillas de manda de velocidades, 4-Velocidades	4 : 27	1-J04	
Ejes, engranajes, horquillas de mando de velocidades, 5-Velocidades	4 : 31	1-J08	
Diferencial, junta homocinética interior	4 : 37	1-J14	
Mandos del cambio			
Palanca, caja y barra de cambios	4 : 39	1-J16	
Eje de accionamiento, junta homocinética exterior	4 : 41	1-J18	
Juegos completos			
Transmisión	4 : 43	1-J20	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20


1-106

Clutch
Clutch, clutch disc,
clutch cover

Koppling
Koppling, lamell
kopplingskåpa

MASTER INDEX

Pos	Part No./Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0100	1	87 04 116	S -1986	1	Pressure plate	Tryckskiva	2
0010	1	87 20 245	S 1987-	1	Pressure plate	Tryckskiva	2
0020	2	83 07 498	S 36, 700)	1	Clutch disc	Lamell	2
0030	2	87 22 324	S 37)	1	Clutch disc	Lamell	2
0040	2	87 22 324	S 37), 5-SPEED	1	Clutch disc	Lamell	2
0050	3	83 00 469	S	20	Rivet	Nit	5
0060	4	83 07 407		3	Guide pin	Styrstift	5
0070	5	80 82 968		6	Screw	Skruv	5
0080	6	83 80 982		6	Washer	Bricka	5
0090	7	93 62 658		1	Clutch cover	Kopplingskåpa	5
0100	8	79 72 466		3	Screw	Skruv	5
0110	15	83 38 899		1	Cover	Lock	5
0120		83 80 214	see page 4-043, 1-J20	1	Clutch disc lining kit with rivet	Lamellbeläggsats med nit	5
0130							
0140							
0150		83 18 080	36), 4-SPEED	X	Repair kit, clutch	Kopplingsats	6
0160			see page 4-043, 1-J20				
0170		88 18 098	37, 700), 4-SPEED	X	Repair kit, clutch	Kopplingsats	6
0180			see page 4-043, 1-J20				
0190		88 18 098	37, 700), 5-SPEED	X	Repair kit, clutch	Kopplingsats	6
0200			see page 4-043, 1-J20				
0210		88 18 262	13)	X	Repair kit, clutch	Rep. sats, koppling	2
0220			see page 4-045, 1-J22				

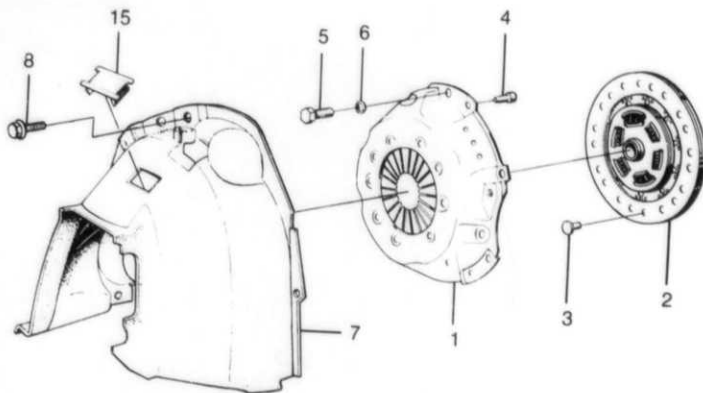

R 6563-90

13. Ch.--F6010403.

36. Asbestos

37. Asbestos free

700. Also available as exchange unit. Finns även som utbytesenhet. Auch als Austauschteil lieferbar. Egalement disponible en unite de rechange. Tambien puede obtenerse como unidad de recambio. Disponibile anche come unita di ricambio.

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R6563

Page
Side 04-005

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02
4 GROUP INDEX		
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

1-108

Clutch control
Pedal, master cylinder
LHD

Kopplingsmanövrering
Pedal, huvudcylinder
LHD

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX


5	Clutch	1-I06
5	Clutch control	1-I08
3	Gear box	1-I14
5	Gear box control	1-J16
2	Complete sets	1-J20

Qty/ Antal	Description	Benämning	S L
1	Clutch pedal assy	Kopplingspedal kpl	6
1	Pedal rubber	Pedalgummi	3
1	Bushing	Bussning	4
1	Distance tube	Distansrör	4
2	Bushing	Bussning	4
1	Screw	Skruv	5
1	Nut	Mutter	5
1	Spring	Fjäder	3
1	Master cylinder assy	Huvudcylinder kpl	2
1	Spring	Fjäder	3
1	Spring retainer	Fjäderhållare	5
1	Gasket	Packning	5
1	Washer	Bricka	5
1	Piston	Kolv	6
1	Seal	Packning	5
1	Push rod	Stötstång	5
1	Lock ring	Låsring	5
1	Seal bellows	Tätningssåg	6
1	Pipe clip	Rörclip	5
2	Nut	Mutter	5
2	Washer	Bricka	5
1	Shaft bolt	Axelbult	5
1	Shaft bolt	Axelbult	5
1	Split pin	Saxpinne	3
1	Clip	Säkringsclips	5
1	Hose, intake	Slang, inlopp	5
1	Hose	Slang	2
1	Clamp	Klamma	5
1	Screw	Skruv	5
1	Repair kit, master cylinder	Reparationssats, huvudcylinder	1

see page 4-043, 1-J20

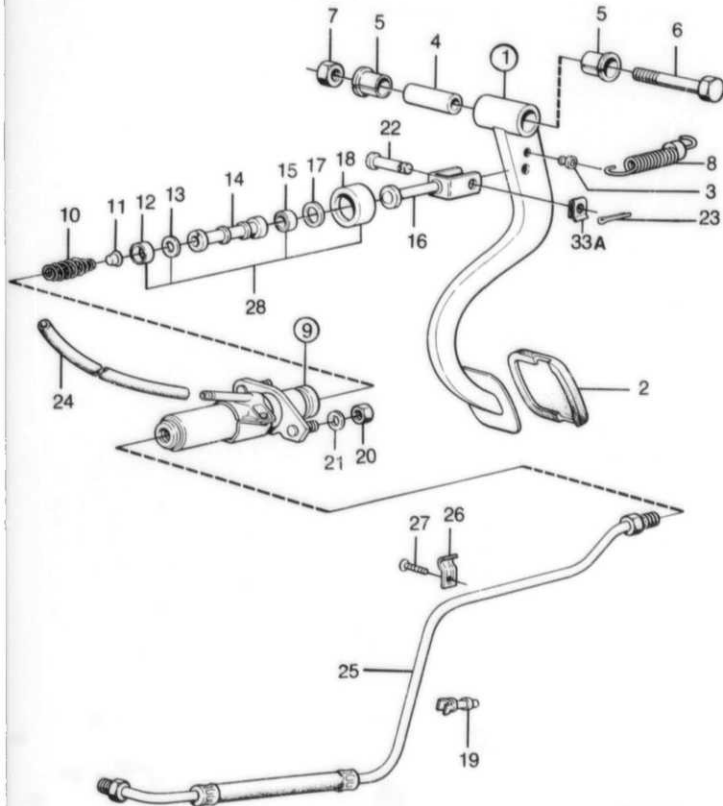

R 7371-90

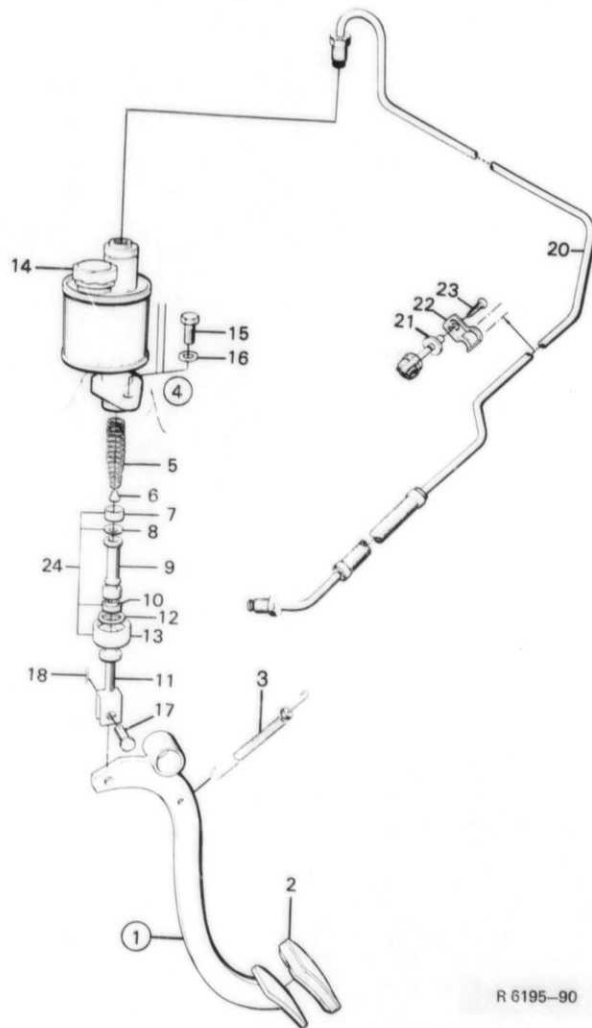

R 6195-90

1-110


Clutch control
Pedal, master cylinder
RHD

Kopplingsmanövrering
Pedal, huvudcylinder
RHD

MASTER INDEX

Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0080	1	89 27 063		1	Clutch pedal assy	Kopplingspedal kpl	6
0120	2	71 93 188		1	Pedal rubber	Pedalgummi	3
0140	3	89 15 159		1	Spring	Fjäder	3
0165	4	89 44 993		1	Master cylinder assy	Huvudcylinder kpl	2
0205	5	89 86 622	(8945 123)	1	Spring	Fjäder	3
0225	6	89 45 156		1	Spring retainer	Fjäderhållare	3
0245	7	89 45 248	S	1	Gasket	Packning	5
0265	8	89 45 255	S	1	Washer	Bricka	5
0305	9	89 45 263	S	1	Piston	Kolv	6
0320	10	89 30 034	S	1	Seal	Packning	5
0340	11	73 48 964		1	Push rod	Stötstång	5
0360	12	73 13 232		1	Lock ring	Låsring	5
0380	13	73 13 240	S	1	Seal bellows	Tätningssålg	6
0400	14	73 12 176		1	Cover	Löck	4
0440	15	80 82 943		2	Screw	Skruv	5
0460	16	79 33 849		2	Washer	Bricka	5
0480	17	79 09 963		1	Shaft bolt	Axelbult	5
0500	18	79 04 394		1	Split pin	Saxpinne	3
0610	20	89 45 321		1	Hose	Slang	2
0620	21	79 63 887		2	Clip	Clip	5
0640	22	83 71 551		1	Clamp	Klamma	5
0660	23	79 22 891		1	Screw	Skruv	5
0680	24	89 93 156		1	Repair kit, master cylinder	Reparationssats, huvudcylinder	1
0700			see page 4-043, 1-J20				

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02
4 GROUP INDEX		
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

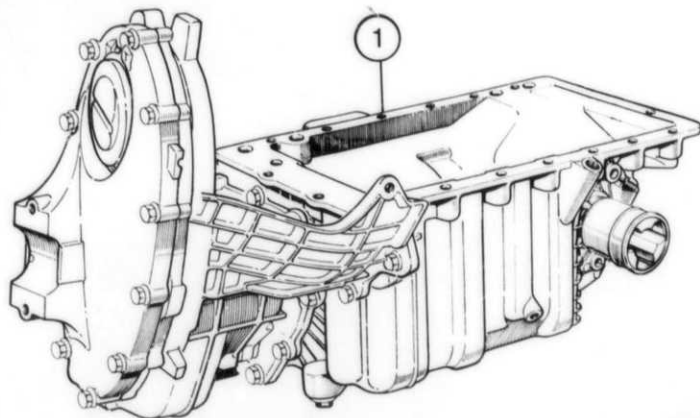

R 7778-90

1-I12

Gear box assy
Manual

Våxellåda kpl
Manuell

0300	Pos	Part No./Art nr	k S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						4-SPEED	4-VÄXLAD	
0020	1	93 21 274		700), -- 1986	1	Gear box assy	Våxellåda kpl	5
0030				MARKED: GM 34505				
0040	1	87 23 819		700), 1987--	1	Gear box assy	Våxellåda kpl	5
0050				MARKED: GM 34507				
0060								
0070						5-SPEED	5-VÄXLAD	
0080								
0090								
0100								
0110	1	87 22 423		20.700)	1	Gear box assy	Våxellåda kpl	5
0120				MARKED: GM 45605				
0130	1	87 23 058		21.700)	1	Gear box assy	Våxellåda kpl	5
0140				MARKED: GM 45607				

20. Gear box --671841. --759477.
21. Gear box 671842-- 759478--.
700. Also available as exchange unit. Finns även som utbytesenhet. Auch als Austauschenteil lieferbar. Egalement disponible en unite de rechange. Tambien puede obtenerse como unidad de recambio. Disponibile anche come unita di ricambio.

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

1-114

Gear box, 4-speed
Primary gear case



Växellåda, 4-växlad
Primärväxellåda

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

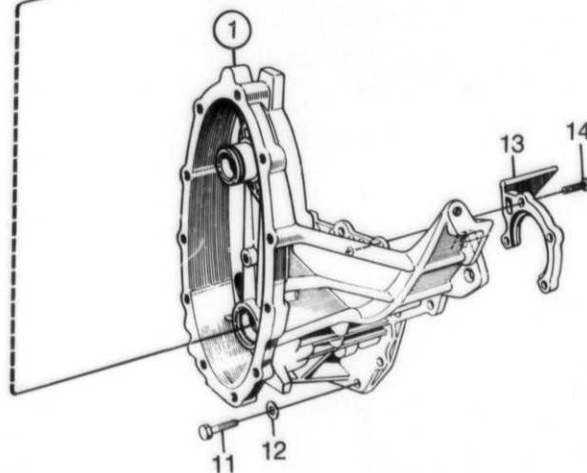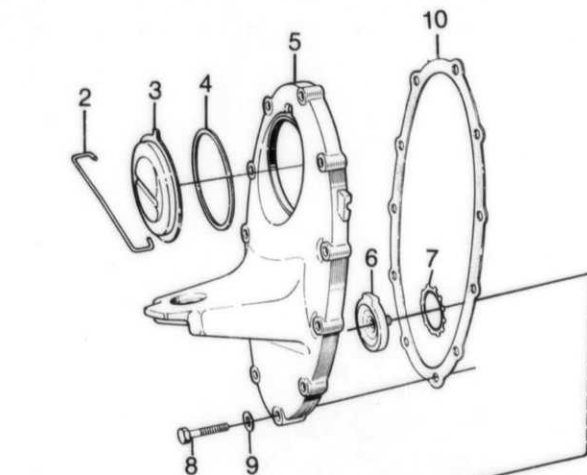

R9279-90

0309
0020
0060
0080
0100
0120
0140
0160
0180
0200
0220
0240
0260
0280
0300
0320

Pos
Part No/Art nr
K
S

Notes/Anmärkning
see page 4-011, 1-112

Qty/
Antal

Description

Benämning

S
L

Gear box assy
Primary gear case
Yoke
Cover, clutch shaft
Gasket
Primary gear cover
Oil collector
Lock ring
Screw
Washer
Gasket
Gasket
Screw
Washer
Bearing support
Screw

Växellåda kpl
Primärväxellåda
Bygel
Lock, lamellaxel
Packning
Primärväxellock
Oljeuppsamlare
Låsring
Skruv
Bricka
Packning
Packning
Skruv
Bricka
Lagerstöd
Skruv

26. Gear box --206963, --694101, --913909
27. Gear box 206964--., 694102--., 913910--


SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R9279

Page
Side 04-013

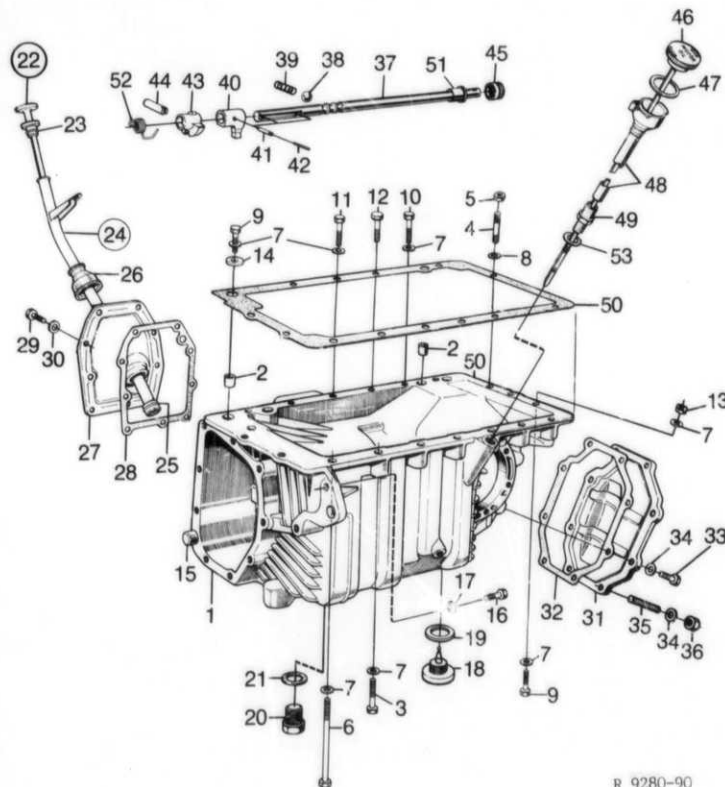

R 9280-90

1-116

Gear box, 4-speed
Gear box case, oil pan

Växellåda, 4-växlad
Växellådshus, oljesump

0310	Pos	Part No/Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0010	1	87 21 300	S	see page 4-011, 1-112 1), (8719585)	1	Gear box assy	Växellåda kpl	6
0020				USE TOGETHER WITH 811 17715, 8721318 AND 8721326		.Gear box case	.Växellådshus	
0030								
0031								
0032								
0040	1	87 21 300	S		1	.Gear box case	.Växellådshus	6
0050	2	83 00 725	S		2	.Guide bushing	.Styrbusning	4
0060	3	80 83 958	S		6	.Screw	.Skruv	5
0070	4	93 46 388	S	-1986	1	.Stud	.Pinnskruv	5
0080	4	80 05 928	S	1987	1	.Stud	.Pinnskruv	5
0090	5	80 74 106	S		1	.Nut	.Mutter	5
0100	6	79 65 569	S		1	.Screw	.Skruv	5
0110	7	80 29 985	S		14	.Washer	.Bricka	5
0120	8	83 80 982	S		1	.Washer	.Bricka	5
0130	9	93 46 354	S		1	.Screw	.Skruv	5
0140	10	93 46 362	S		5	.Screw	.Skruv	5
0150	11	93 46 370	S		1	.Screw	.Skruv	5
0160	12	80 83 941	S		1	.Screw	.Skruv	5
0170	13	80 74 106	S		1	.Nut	.Mutter	5
0180	14	70 61 328	S		1	.Washer	.Bricka	5
0190	15	87 23 567	S	(8342594)	2	.Cylindrical pin	.Cylindrisk pinne	5
0200	16	80 82 968	S		1	.Screw	.Skruv	5
0210	17	80 29 985	S		1	.Washer	.Bricka	5
0220	18	87 17 407	S		1	.Drain plug, gear box	.Avtappningsplugg, växellåda	6
0230								
0240	19	87 17 415	S		1	.Gasket, gear box	.Packning, växellåda	4
0250	20	87 11 871	S		1	.Drain plug, engine	.Avtappningsplugg, motor	1
0260	21	87 18 439	S		1	.Gasket	.Packning	1
0270	22	75 46 872	S	(8334526)	1	.Dipstick assy	.Oljemätsticka kpl	3
0280	23	79 71 948	S		1	..O-ring	..O-ring	2
0290	24	75 42 921	S		1	.Tube, dipstick assy	.Rör, oljemätsticka kpl	6
0300	25	79 71 930	S		1	..O-ring	..O-ring	2
0310	26	83 34 401	S		1	..Cup	..Kopp	2
0320	27	87 15 377	S		1	.Cover	.Kåpa	6
0330	28	87 15 393	S		1	.Gasket	.Packning	3
0340	28	87 25 053	S		1	.Gasket	.Packning	3
0350	29	80 82 935	S		9	.Screw	.Skruv	5
0360	30	80 29 985	S		9	.Washer	.Bricka	5
0370	31	87 27 729	S		1	.Cover	.Kåpa	5
0380	32	87 18 465	S		1	.Gasket	.Packning	3
0400	32	87 25 038	S		1	.Gasket	.Packning	3
0410	33	80 83 933	S		8	.Screw	.Skruv	5
0420	34	80 29 985	S		8	.Washer	.Bricka	5
0430	35	87 13 950	S		2	.Stud	.Skruv	5
0440	36	80 74 106	S		2	.Nut	.Mutter	5
0450	37	87 12 192	S		1	.Gear selector rod	.Växelväljarsång	5
0460	38	83 41 257	S		1	.Ball	.Kula	5
0470	39	87 19 775	S		1	.Spring	.Fjädr	5
0480	40	83 43 014	S		1	.Driver	.Medöringare	5
0490	41	80 49 553	S		2	.Tension pin	.Spännstift	5
0500	42	79 56 154	S		1	.Tension pin	.Spännstift	5
0510	43	87 12 200	S		1	.Detent	.Sparr	3
0520	44	87 12 952	S		1	.Guide pin	.Styrapp	5
0530	45	83 44 335	S		1	.Seal ring	.Tätningssring	4
0540	46	93 61 650	S		1	.Dipstick assy	.Oljemätsticka kpl	3
0550	47	93 61 544	S		1	.Gasket	.Packning	4
0560	48	93 68 200	S		1	.Tube, dipstick	.Rör, oljemätsticka	6
0570	49	93 61 452	S		1	.Nipple	.Nippel	6
0580	50	75 14 946	S	(7510241)	1	.Gasket	.Packning	6

1. Gear box --192459


2. Gear box 192460--

26. Gear box --206963, --694101, --913909

27. Gear box 206964--., 694102--., 913910--

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
4 GROUP INDEX		
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

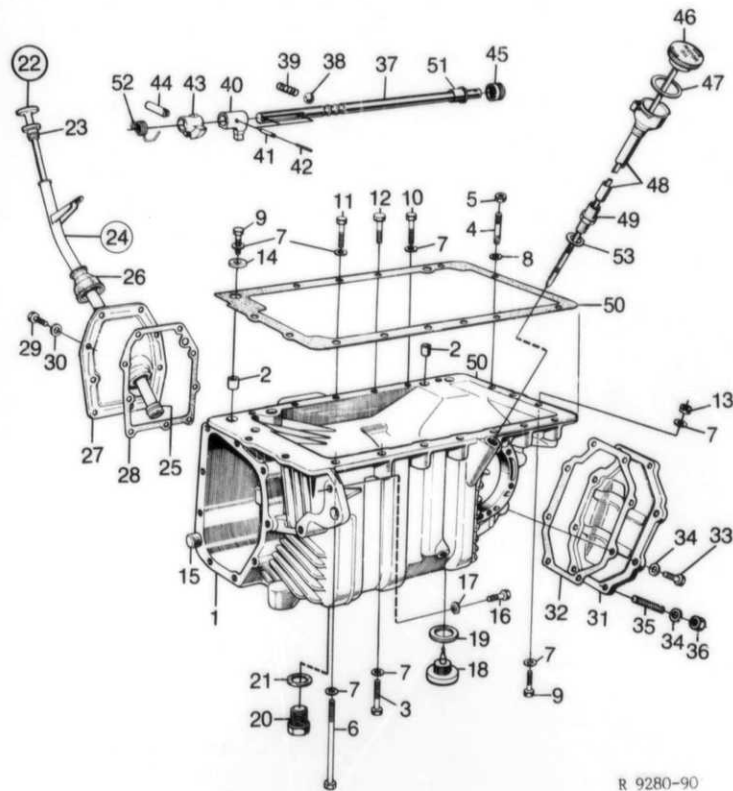

R 9280-90

1-118

Gear box, 4-speed
Gear box case, oil pan

Växellåda, 4-växlad
Växellådashus, oljesump


Pos	Part No./Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0310	75 10 258		TUBE 310 ML BOSTIK TYPE 45/3009065	X	Sealing compound for 75 14946 and 75 10241	Tätningssmedel för 75 14946 och 75 10241	3
0590	87 11 608			1	Bushing	Bussning	3
0600	87 12 194			1	Spring	Fjäder	3
0610	93 61 627			1	Seal washer	Tätningssbricka	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

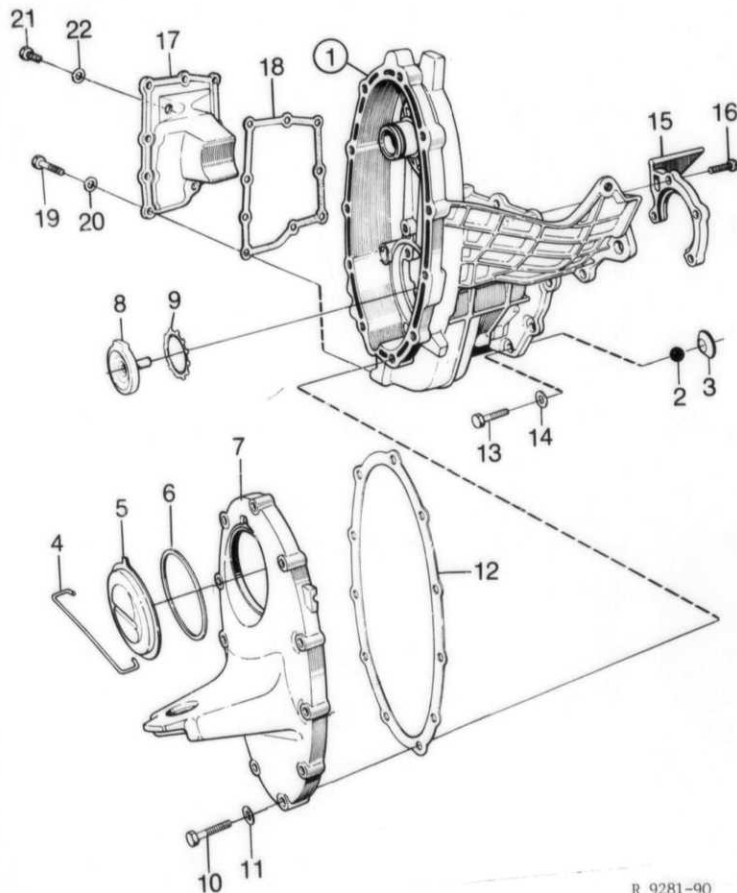

R 9281-90

1-120

Gear box, 5-speed
Primary gear case

Växellåda, 5-växlad
Primärväxelhús

MASTER INDEX


Pos	Part No/Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0020			see page 4-011, 1-112		Gear box assy	Växellåda kpl	1
0100	1	87 13 612	GEAR BOX GM 45605	1	Primary gear case	Primärväxelhús	1
0110	1	87 22 795	GEAR BOX GM 45607	1	Primary gear case	Primärväxelhús	1
0120	2	87 13 604		1	Ball	Kula	1
0140	3	87 15 351		1	Spring	Fjäder	1
0160	4	87 10 303		1	Yoke	Bygel	1
0180	5	87 10 956		1	Cover, clutch shaft	Lock, lamellaxel	1
0200	6	87 13 216		1	Gasket	Packning	1
0220	7	87 15 211		1	Primary gear cover	Primärväxellock	1
0240	8	87 14 750		1	Oil collector	Oljeuppsamlare	1
0260	9	87 14 743		1	Lock ring	Låsring	1
0280	10	80 83 958		11	Screw	Skruv	11
0300	11	80 29 985		11	Washer	Bricka	11
0320	12	87 12 903	26)	1	Gasket	Packning	1
0340	12	87 25 012	27)	1	Gasket	Packning	1
0360	13	80 83 933		10	Screw	Skruv	10
0380	14	80 29 985		10	Washer	Bricka	10
0400	15	87 00 775	5)	1	Bearing support	Lagerstöd	1
0410	15	87 19 494	6)	1	Bearing support	Lagerstöd	1
0420	16	87 03 852	5)	4	Screw	Skruv	4
0440	16	87 21 334	6)	4	Screw	Skruv	4
0460	17	87 21 821		1	Cover	Lock	1
0480	18	87 12 986	26)	1	Gasket	Packning	1
0490	18	87 25 020	27)	1	Gasket	Packning	1
0500	19	80 83 933		9	Screw	Skruv	9
0520	20	80 29 985		9	Washer	Bricka	9
0540	21	87 23 405		1	Screw	Skruv	1
0560	22	81 24 133		1	Gasket	Packning	1

5. Gear box --589858 --625621.
6. Gear box 589859-- 625622--.
26. Gear box --206963, --694101, --913909
27. Gear box 206964--., 694102--., 913910--

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
4	GROUP INDEX	
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

1-122

MASTER INDEX

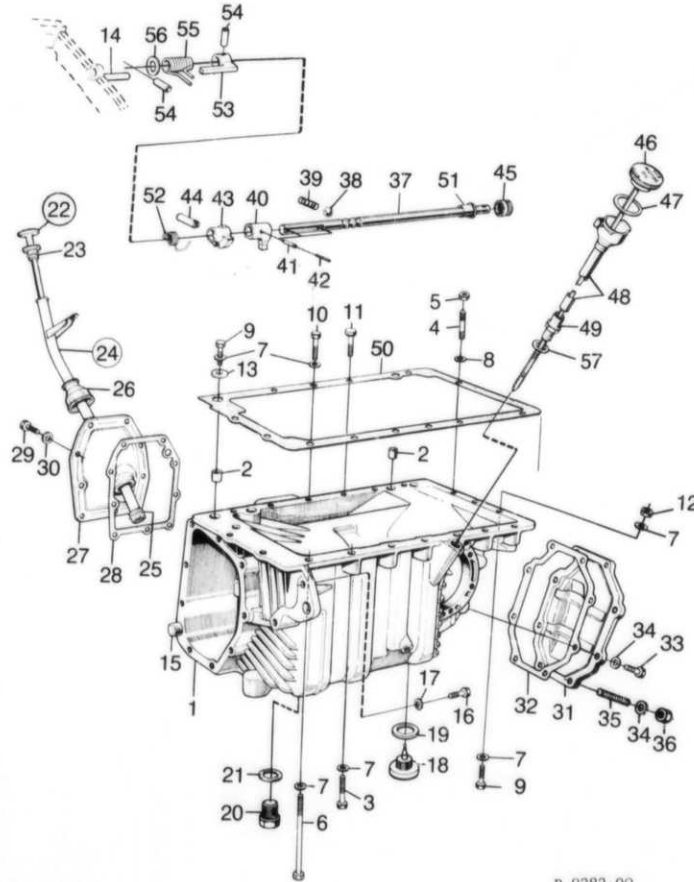

R 9282-90

Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Ant	Description	Benämning	S L
0010	1	87 21 300	see page 4-011, 1-12	1	Gear box assy	Växellåda kpl	6
0020			3), (8719585)		Gear box case	Växellådashus	
0021			USE TOGETHER WITH				
0022			8117715, 8721318 AND				
0023			8721326				
0030	1	87 21 300	4)	1	Gear box case	Växellådashus	6
0040	2	83 00 725		2	Guide bushing	Styrbusning	4
0050	3	80 83 958		6	Screw	Skruv	5
0060	4	93 46 388	-1986	1	Stud	Pinnskruv	5
0070	4	80 05 928	1987-	1	Stud	Pinnskruv	5
0080	5	80 74 106		1	Nut	Mutter	5
0090	6	79 65 569		1	Screw	Skruv	5
0100	7	80 29 985		12	Washer	Bricka	5
0110	8	83 80 982		1	Washer	Bricka	5
0120	9	93 46 354		1	Screw	Skruv	5
0130	10	80 83 933	(8083966)	6	Screw	Skruv	5
0140	11	80 83 941		1	Screw	Skruv	5
0150	12	80 74 106		1	Nut	Mutter	5
0160	13	70 61 328	(8300055)	1	Washer	Bricka	5
0170	14	80 49 876	GEAR BOX GM 45607	1	Tension pin	Spännstift	5
0180	15	87 23 967	(8342594)	2	Cylindrical pin	Cylindrisk pinne	5
0190	16	80 82 968		1	Screw	Skruv	5
0200	17	80 29 985		1	Washer	Bricka	5
0210	18	87 17 407		1	Drain plug, gear box	Avtappningsplugg, växellåda	6
0220							
0230	19	87 17 415		1	Gasket	Packning	4
0240	20	87 11 871	(8849606)	1	Drain plug, engine	Avtappningsplugg, motor	1
0250	21	87 18 439		1	Gasket	Packning	1
0260	22	75 46 872	(9336579)	1	Dipstick assy	Oljemätsticka kpl	3
0270	23	79 71 948		1	O-ring	O-ring	2
0280	24	75 42 921		1	Tube, ripstick assy	Rör, oljemätsticka kpl	6
0290	25	79 71 930		1	O-ring	O-ring	2
0300	26	83 34 401		1	Cup	Cup	2
0310	27	87 15 377		1	Cover	Kåpa	6
0320	28	87 15 393	S 26)	1	Gasket	Packning	3
0330	28	87 25 053	27)	1	Gasket	Packning	3
0340	29	80 82 935		9	Screw	Skruv	5
0350	30	80 29 985		9	Washer	Bricka	5
0360	31	87 27 729	REAR, (8720377)(8723470)	1	Cover	Kåpa	5
0380	32	87 18 785	26)	1	Gasket	Packning	3
0390	32	87 25 038	27)	1	Gasket	Packning	3
0400	33	80 83 933		8	Screw	Skruv	5
0410	34	80 29 985		8	Washer	Bricka	5
0420	35	87 13 950		2	Stud	Pinnskruv	5
0430	36	80 74 106		2	Nut	Mutter	5
0440	37	87 12 192	17)	1	Gear selector rod	Växelväljarstäng	5
0450	37	87 22 803	18)	1	Gear selector rod	Växelväljarstäng	5
0460	38	83 41 257		1	Ball	Kula	5
0470	39	87 19 775		1	Spring	Fjäder	5
0480	40	83 43 014		1	Driver	Medbringare	5
0490	41	80 49 553	INNER	2	Tension pin	Spännstift	5
0500	42	79 56 154		1	Tension pin	Spännstift	5
0510	43	87 12 945		1	Detent	Spärr	6
0520	44	87 12 952		1	Guide pin	Styrapp	5
0530	45	83 44 335		1	Seal ring	Tätningssring	4
0540	46	93 61 650		1	Dipstick assy	Oljemätsticka kpl	3
0550	47	93 61 544		1	Gasket	Packning	4

3. Gear box --638863 --707 165

4. Gear box 638864 --707 166--


17. Gear box --67 1841 --759477

18. Gear box 671842 --759478--

26. Gear box --206963, --694 101, --913909

27. Gear box 206964 --, 694 102 --, 913910 --

1-124

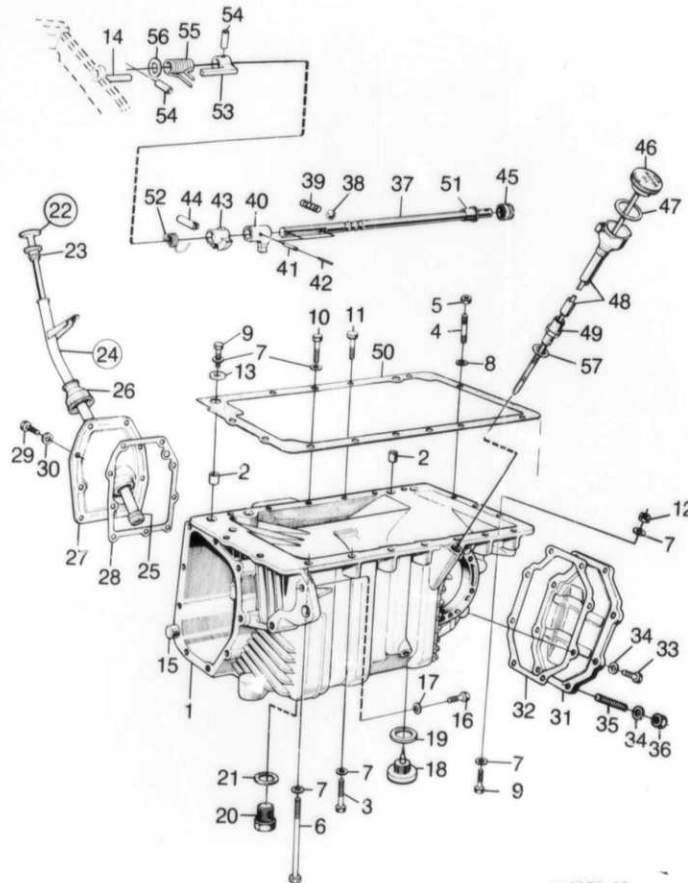

R 9282-90


Pos	Part No/Art nr	K	S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0325								
0560	48	93 68 200			1	Tube, dipstick	Rör, oljemätsticka	6
0570	49	93 61 452			1	Nipple	Nippel	6
0580	50	75 14 946		(75 10241)	1	Gasket	Packning	3
0590		75 10 258		TUBE 310 ML BOSTIK TYPE	X	Sealing compound for	Tätningmedel för	
0600				45/3009065		75 14946 and 75 10241	75 14946 och 75 10241	
0610	51	87 11 608			1	Bushing	Bussning	5
0620	52	87 13 166		GEAR BOX GM 45607	1	Spring	Fjäder	5
0630	53	87 22 720		GEAR BOX GM 45607	1	Driver	Medbringare	5
0640	54	80 49 553		GEAR BOX GM 45607	2	Tension pin	Spännstift	5
0650	55	87 22 829		GEAR BOX GM 45607	1	Spring	Fjäder	5
0660	56	87 22 837		GEAR BOX GM 45607	1	Washer	Bricka	4
0670	57	93 61 627			1	Seal washer	Tätningbricka	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

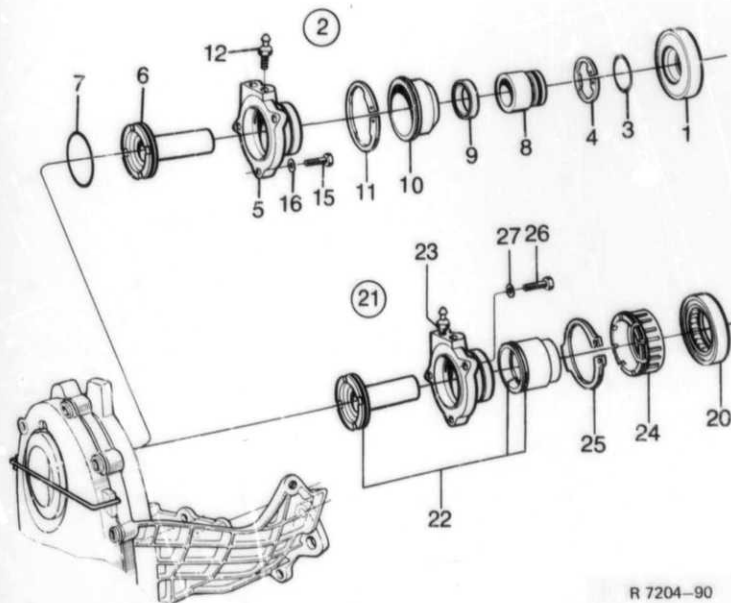

R 7204-90

1-J02

Gear box
Release bearing,
slave cylinder

Växellåda.
Urtrampningslager,
slavcylinder

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

0400	Pos	Part No./Art. n.	K/S	Notes/Anmärkningar	Qty/Amnt	Description	Benämning	S/L
0040	1	87 04 726	13)		1	Release bearing	Urtrampningslager	2
0060	2	87 11 533	13)		1	Slave cylinder assy	Slavcylinder kpl	2
0080	3	87 11 285	13)		1	.O-ring	.O-ring	2
0101	4	87 04 801	13)		1	.Lock ring	.Spärring	5
0121	5	87 14 263	13)		1	.Cylinder housing	.Cylinderhus	4
0140	6	87 10 568	13)		1	.Sleeve	.Hylsa	4
0180	7	87 11 806	13)		1	.O-ring	.O-ring	4
0200	3	87 04 702	13)		1	.Piston	.Kolv	6
0220	9	87 11 855	13)		1	.Rubber seal	.Gummitätning	3
0225	10	87 14 412	13)		1	.Sealing sleeve	.Tätningshylsa	3
0230	11	87 14 420	13)		1	.Lock ring	.Spärring	5
0240	12	87 11 053	13)		1	.Bleeding nipple	.Urluftningsnippel	5
0322	15	80 97 925	13)		3	Screw	Skruv	5
0340	16	80 29 951	13)		3	Washer	Bricka	5
0480		87 81 007	13)		1	Repair kit, slave cylinder	Reparationssats, slavcylinder	5
0500				see page 4-043, 1-J20				
0570	20	87 21 995	14)		1	Release bearing	Urtrampningslager	2
0540	21	87 22 209	14)		1	Slave cylinder assy	Slavcylinder kpl	2
0580	22	87 81 072	14)		1	.Repair kit, slave cylinder	.Tätningssats, slavcylinder	1
0600				see page 4-043, 1-J20				
0620	23	87 11 053	14)		1	.Bleeding nipple	.Urluftningsnippel	6
0640	24	87 22 100	14)		1	.Sealing sleeve	.Tätningshylsa	6
0660	25	87 14 420	14)		1	.Lock ring	.Låsring	5
0680	26	80 97 925	14,30)		3	Screw	Skruv	5
0640	26	73 99 363	31)		3	Screw	Skruv	5
0700	27	80 29 951	14)		3	Washer	Bricka	5

13. Ch. --F6010403.
14. Ch.F6010404--
30. Ch. --H6003263
31. Ch. H6003264--

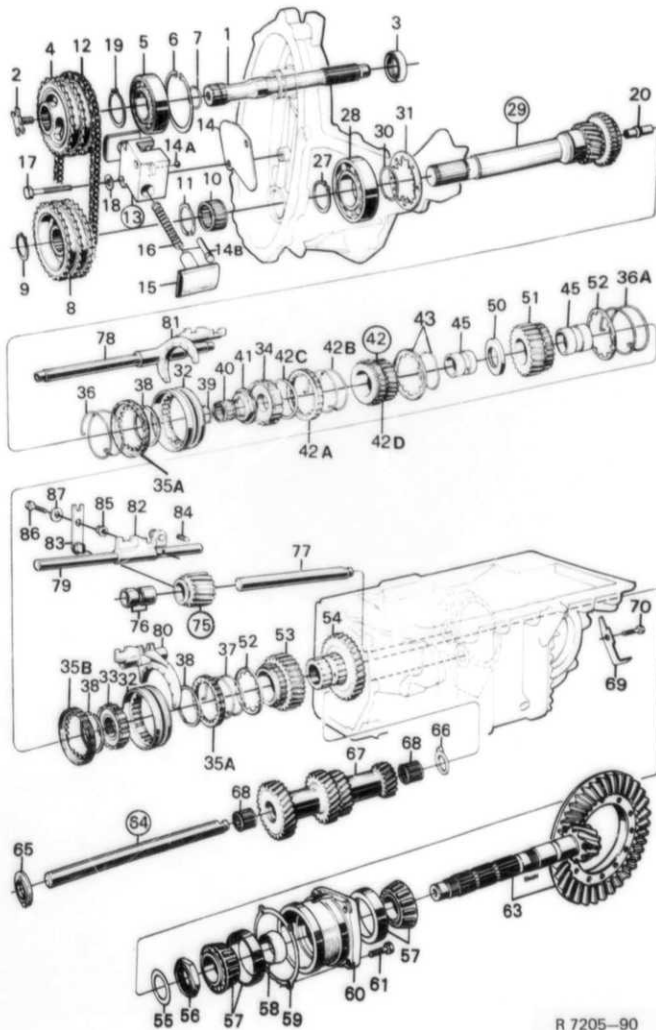

R 7205-90

1-J04

Gear box, 4-speed
Shafts, gears

Växellåda, 4-växlad
Axlar, kugghjul

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

0510	Pos	Part No/Art nr	k	S	Notes/Anmärkning	Qty/Anm	Description	Benämning	S
0015	1	87 11 350			see page 4-011, 1-112	1	Gear box assy	Växellåda kpl	3
0020	2	87 11 038				1	Clutch shaft	Lamellaxel	3
0030	3	87 10 881				1	Screw	Skruv	3
0040	4	87 11 582			30 COGS	1	Seal ring	Tätningssring	2
0050	5	87 10 865				1	Chain wheel, upper	Kedjehjul, övre	5
0060	6	87 11 376				1	Roller bearing	Rullager	4
0070	7	87 04 777				1	Lock ring	Spärring	3
0080	8	87 11 400			27 COGS	1	Lock ring	Låsring	3
0090	9	87 14 677				1	Chain wheel, lower	Kedjehjul, nedre	5
0100	10	87 11 384				1	Lock ring	Låsring	5
0110	11	87 11 947				1	Needle bearing	Nållager	4
0120	12	87 11 590				1	Lock ring	Låsring	4
0130	13	87 13 570				3	Chain	Kedja	5
0140	14	87 13 513				1	Chain tensioner assy	Kedjesträckare kpl	5
0150	14A	87 13 554				2	Spacer plate	Distansplatta	4
0160	14B	87 13 539				1	Ball	Kula	4
0170	15	87 13 497				2	Plug	Plugg	3
0180	16	87 13 521				2	Tightener shoe	Sträckarsko	5
0190	17	80 83 982				1	Spring	Fjäder	5
0200	18	80 83 982				2	Screw	Skruv	5
0210	19	80 47 839				2	Washer	Bricka	5
0220	20	87 13 158				1	Lock ring	Låsring	5
0230	21	80 47 854				1	Connecting pipe	Förbindelserör	6
0240	22	87 00 767				1	Lock ring	Spärring	5
0250	23	87 15 872				1	Ball bearing	Kullager	3
0260	24	87 13 224				1	Input shaft assy	Ingående axel kpl	6
0270	25	87 11 954				1	Lock ring	Låsring	3
0280	26	87 12 150				1	Guide ring	Styrring	4
0292	27	87 20 419				2	Synchronizing muff	Synkroniseringsmuff	5
0300	28	87 12 150				1	Synchronizing hub	Synkroniseringsnav	5
0310	29	87 12 283				1	Synchronizing hub	Synkroniseringsnav	5
0322	30	87 19 924				2	Synchronizing ring	Synkroniseringsring	3
0325	31	87 19 916				1	Synchronizing ring	Synkroniseringsring	3
0340	32	87 15 120				2	Catch spring	Spärrfjäder	6
0350	33	87 11 103				1	Catch spring	Spärrfjäder	4
0360	34	87 04 942				3	Lock ring	Låsring	4
0370	35	79 51 437				1	Lock ring	Spärring	5
0380	36	87 00 478				1	Needle bearing	Nållager	3
0390	37	87 04 108				1	Nut	Mutter	3
0400	38	87 20 476				1	Gear, 3rd assy	Kugghjul, 3:an kpl	4
0401					SUPERSEDED BY 8720484, 8700429, 8704942 AND 8719916				
0402									
0403									
0412	42A	87 19 916				1	Synchronizing ring	Synkroniseringsring	3
0420	42B	87 00 429				1	Catch spring	Spärrfjäder	4
0430	42C	87 04 942				1	Lock ring	Låsring	4
0440	42D	87 20 484				1	Gear, 3rd	Kugghjul, 3:an	4
0450	43	87 81 155			see page 4-045, 1-J22	1	Guide ring set	Styringsats	4
0460	44	87 00 205				2	Bushing	Bussning	4
0470	45	87 00 239				1	Thrust washer	Tryckbricka	4
0480	46	87 20 468			(8720401)	1	Gear, 2nd	Kugghjul, 2:an	4
0490	47	87 00 361				2	Guide ring	Styrring	4
0500	48	87 22 266			34), (8714933)	1	Gear, 1st	Kugghjul, 1:an	4
0510	49	87 22 266			35)	1	Gear, 1st	Kugghjul, 1:an	4
0520	50	87 14 925				1	Reverse gear	Backdrev	4
0530	51	87 03 340			0.3MM	X	Shim	Shim	5
0540	52	87 03 357			0.4MM	X	Shim	Shim	5
0550	53	87 03 365			0.5MM	X	Shim	Shim	5
0560	54	87 02 359				1	Nut	Mutter	3
0570	55	83 41 034			- 1986	2	Roller bearing	Rullager	3
0580	56	87 25 194			1987-	2	Roller bearing	Rullager	3
0590									
0595									

34. Gear box --208509, --806332, --932771
35. Gear box 208510-- , 806333-- , 932772--

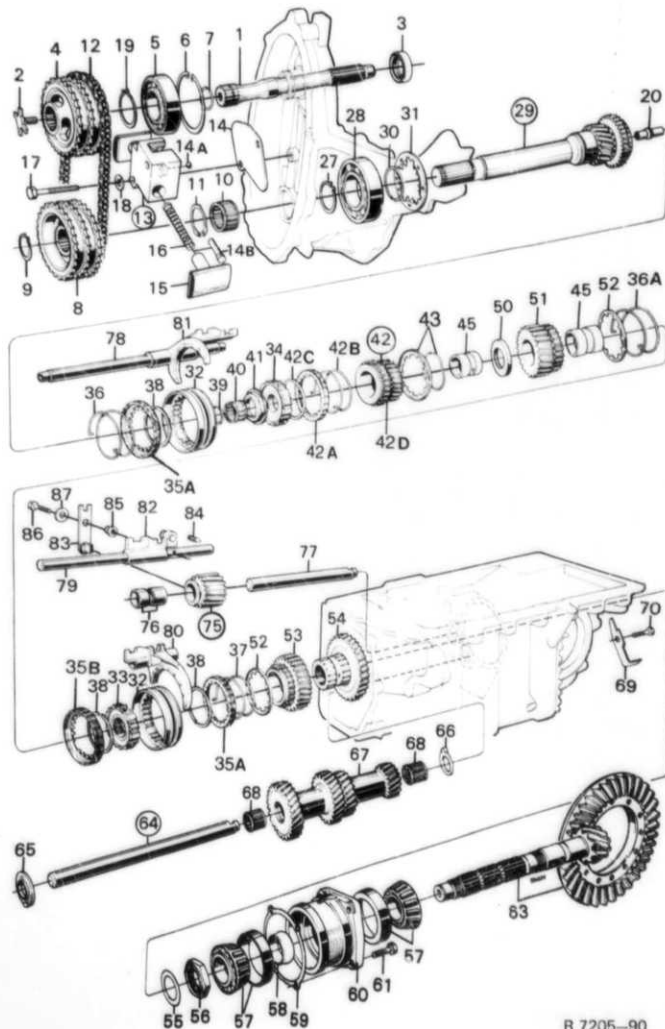

R 7205-90

1-J06

Gear box, 4-speed
Shafts, gears

Växellåda, 4-växlad
Axlar, kugghjul

MASTER INDEX

0510	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	58	87 03 530	S		1	Collapsible spacer	Spännhylsa	4
0610	59	83 41 752		32), 0.10MM	X	Shim	Shim	5
0615	59	87 24 569		33), 0.10MM	X	Shim	Shim	5
0620	59	83 41 760		32), 0.15MM	X	Shim	Shim	5
0625	59	87 24 577		33), 0.15MM	X	Shim	Shim	5
0630	59	83 41 778		32), 0.30MM	X	Shim	Shim	5
0635	59	87 24 585		33), 0.30MM	X	Shim	Shim	5
0640	59	83 44 723		32), 0.50MM	X	Shim	Shim	5
0645	59	87 24 593		33), 0.50MM	X	Shim	Shim	5
0665	60	87 20 732			1	Bearing house	Lagerhus	5
0670	61	87 18 942			4	Screw	Skruv	5
0680	63	87 15 799			1	Pinion and crown wheel	Pinjong och kronhjul	5
0700	64	87 11 509			1	Shaft, intermediate gear Assy	Axel, mellandrev kpl	5
0710	65	87 11 327			1	Thrust washer	Tryckbricka	4
0720	66	87 12 325			1	Thrust washer	Tryckbricka	4
0730	67	87 18 678			1	Intermediate gear	Mellandrev	5
0750	68	87 18 660			2	Needle bearing	Nållager	3
0760	69	87 00 114			1	Lock plate	Låsplatta	5
0770	70	87 18 843			1	Screw	Skruv	5
0780	75	87 14 974			1	Sliding reverse gear Assy	Backdrev, skjutbart kpl	4
0800	76	87 15 229			1	Bushing	Bussning	3
0810	77	87 00 130			1	Shaft, reverse gear	Axel, backdrev	6
0820	78	87 00 585			1	Gear shift shaft	Växelföraxel	6
0830	79	87 01 989		1)	1	Gear shift shaft, reverse gear	Växelföraxel, backdrev	6
0840	79	87 21 326		2)	1	Gear shift shaft, reverse gear	Växelföraxel, backdrev	5
0841	80	87 13 091			1	Gear shift fork 1-2	Växelförargaffel 1-2	5
0842	81	87 00 619			1	Gear shift fork 3-4	Växelförargaffel 3-4	5
0850	82	87 14 792			1	Gear shift fork R	Växelförargaffel B	5
0860	83	87 02 045			1	Lever	Värm	5
0870	84	87 18 835		1)	1	Screw	Skruv	5
0880	84	81 17 715		2)	1	Tension pin	Spännstift	5
0890	85	87 02 086			1	Sleeve	Hylsa	4
0910	86	87 15 054			1	Screw	Skruv	5
0920	87	80 29 969			1	Washer	Bricka	5
0930	87	87 80 454		see page 4-043, 1-J20	1	Bearing kit	Lagersats	5

1. Gear box --192459
2. Gear box 192460--
32. Gear box --205264, --687 132, --795916
33. Gear box 205265--., 687 133--., 795917--

SAAB genuine parts
original reserved


SAAB 90 M85-87

1990-02

R7205

Page 04 - 029

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
4	GROUP INDEX	
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

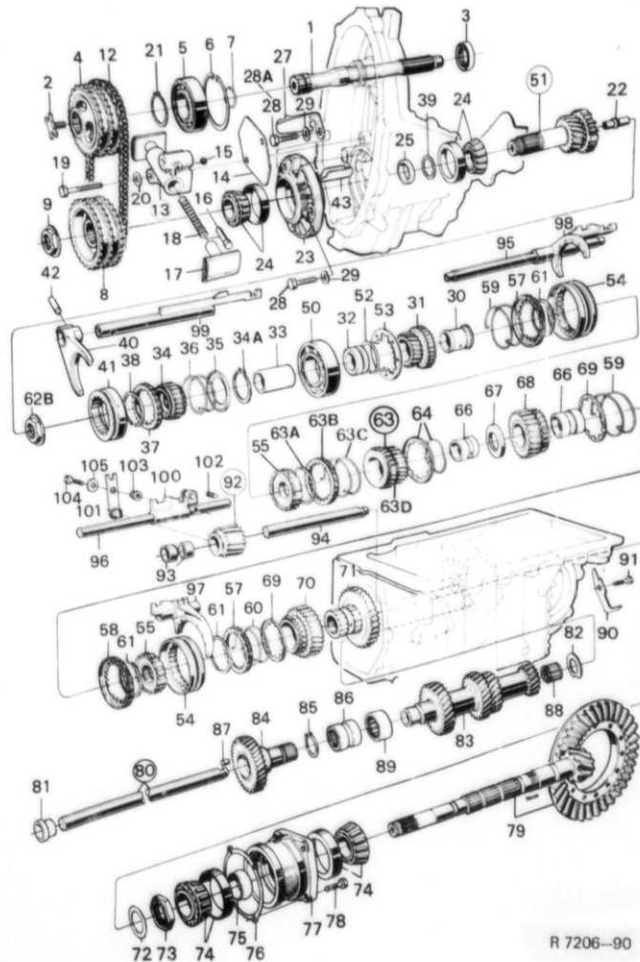

R 7206-90

1-J08

Gear box, 5-speed
Shafts, gears

Växellåda, 5-växlad
Axlar, kugghjul

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

4 GROUP INDEX

Clutch	1-I06
Clutch control	1-I08
Gear box	1-I14
Gear box control	1-J16
Complete sets	1-J20

0525	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/Anst	Description	Benämning	S
0010	1	87 11 350			see page 4-011, 1-112		Gear box assy	Växellåda kpl	3
0020	2	87 11 038				1	Clutch shaft	Lamellaxel	3
0030	3	87 10 881				1	Screw	Skruv	3
0040	4	87 11 343			31 COGS	1	Seal ring	Tätningssring	2
0050	5	87 10 865				1	Chain wheel, upper	Kedjehjul, övre	5
0060	6	87 11 376				1	Roller bearing	Rullager	4
0070	7	87 04 777				1	Lock ring	Spärring	4
0080	8	87 15 831			26 COGS	1	Lock ring	Låsring	3
0090	9	87 12 770				1	Chain wheel, lower	Kedjehjul, nedre	5
0100	10	87 12 590				1	Nut	Nut	5
0110	11	87 11 590				3	Chain	Kedja	5
0120	12	87 13 570				1	Chain tensioner assy	Kedjesträckare kpl	5
0130	13	87 13 513				1	Spacer plate	Distansplatta	4
0140	14	87 13 554				1	Ball	Kula	9
0150	15	87 13 539				1	Plug	Plugg	3
0160	16	87 13 497				2	Tightener shoe	Sträckarsko	5
0170	17	87 13 521				2	Spring	Fjäder	5
0180	18	80 83 982				2	Screw	Skruv	5
0190	19	80 29 985				2	Washer	Bricka	5
0200	20	80 47 839				1	Lock ring	Låsring	5
0210	21	87 13 158				1	Connecting pipe	Förbindelserör	6
0220	22	87 12 697			9)	1	Bearing house	Lagerhus	6
0230	23	87 23 256			10)	1	Bearing house	Lagerhus	6
0240	24	87 12 838				2	Roller bearing	Rullager	3
0250	25	87 15 013				X	Spacer ring	Distansring	4
0260	26	87 15 021				X	Spacer ring	Distansring	5
0270	27	87 15 068				X	Spacer ring	Distansring	5
0280	28	87 15 096				X	Spacer ring	Distansring	5
0290	29	87 23 272				X	Spacer ring	Distansring	5
0300	30	87 23 280				X	Spacer ring	Distansring	5
0310	31	87 23 298				X	Spacer ring	Distansring	5
0320	32	87 23 306				X	Spacer ring	Distansring	5
0330	33	87 14 651				X	Shim	Shim	5
0340	34	87 14 669				X	Shim	Shim	5
0350	35	87 13 586				1	Oil catcher	Oljeskopa	5
0360	36	80 83 933				2	Screw	Skruv	5
0370	37	87 19 320				1	Screw	Skruv	5
0380	38	80 29 985				2	Washer	Bricka	5
0390	39	87 13 026				1	Bushing	Lagerbussning	4
0400	40	87 14 503				1	Gear, 4th	Kugghjul, 4-an	4
0410	41	87 12 762				1	Spacer ring	Distansring	4
0420	42	87 13 406				1	Spacer sleeve	Distanshylsa	4
0430	43	87 18 389				1	Clutch hub	Kopplingsnav	5
0440	44	80 47 854				1	Lock ring	Spärring	5
0450	45	87 12 598				1	Guide ring, 5th	Styrring, 5-an	4
0460	46	87 15 005				1	Spring, 5th	Spärrfjäder, 5-an	4
0470	47	83 44 772				1	Synchronizing ring	Synkroniseringsring	5
0480	48	87 12 606				1	Lock ring	Låsring	5
0490	49	87 12 994			0,20MM	X	Shim	Shim	5
0500	50	87 13 448			0,25MM	X	Shim	Shim	5
0510	51	87 13 455			0,30MM	X	Shim	Shim	5
0520	52	87 21 839				1	Gear shift fork	Växlingsgaffel	5
0530	53	87 12 580				1	Synchronizing muff	Synkroniseringsmuff	5
0540	54	80 34 985				1	Cylindrical pin	Cylindrisk pinne	5
0550	55	87 13 596				1	Oil collector	Oljefångare	5
0560	56	87 00 767				1	Ball bearing	Kullager	3
0570	57	87 23 249			9), (8714511)	1	Input shaft assy	Ingående axel kpl	6
		87 23 249			10)	1	Input shaft assy	Ingående axel kpl	6
		87 10 410				1	Lock ring	Låsring	4
		87 04 041				1	Guide ring	Styrring	4
		87 20 419				2	Synchronizing muff	Synkroniseringsmuff	5

9. Gear box ---729911.
10. Gear box 729912---

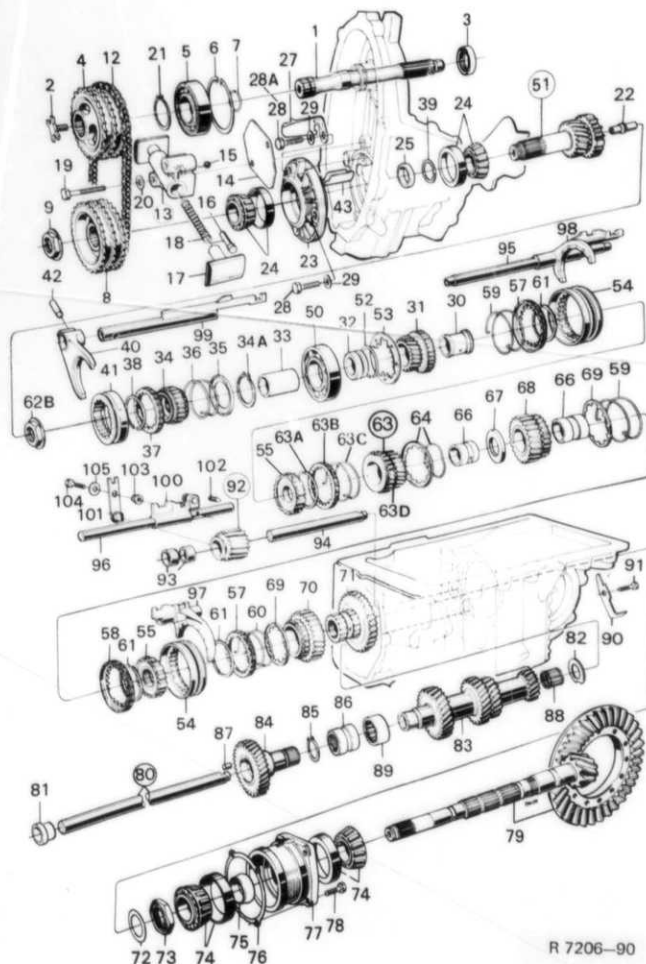

R 7206-90

1-J10

Gear box, 5-speed
Shafts, gears

Växellåda, 5-växlad
Axlar, kugghjul

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool.	
	Labels	2-G02
10	Numerical	
	register	2-H02

4 GROUP INDEX

4	Clutch	1-I06
4	Clutch control	1-I08
5	Gear box	1-I14
5	Gear box control	1-J16
5	Complete sets	1-J20


0525	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0580	55	87 12 150				2	..Synchronizing hub	..Synkroniseringsnav	5
0600	57	87 19 924				2	..Synchronizing ring	..Synkroniseringsring	3
0620	58	87 19 916				1	..Synchronizing ring	..Synkroniseringsring	3
0630	59	87 15 120				2	..Catch spring	..Spärrfjäder	6
0640	60	87 11 103				1	..Catch spring	..Spärrfjäder	4
0650	61	87 04 942				3	..Lock ring	..Låsring	4
0660	62B	87 18 371				1	..Nut	..Mutter	5
0665	63	87 20 476				1	..Gear, 3rd assy	..Kugghjul, 3:an kpl	4
0666					SUPERSEDED BY 8720484, 8700429, 8704942 AND 8719916				
0667									
0668									
0670	63A	87 04 942				1	..Lock ring	..Låsring	4
0690	63B	87 19 916				1	..Synchronizing ring	..Synkroniseringsring	3
0700	63C	87 00 429				1	..Catch spring	..Spärrfjäder	4
0720	63D	87 20 484				1	..Gear, 3rd assy	..Kugghjul, 3:an kpl	4
0730	64	87 81 155			see page 4-045, 1-J22	1	..Guide ring set	..Styringsats	4
0750	66	87 00 205				2	..Bushing	..Bussning	4
0760	67	87 00 239				1	..Thrust washer	..Tryckbricka	4
0780	68	87 20 468			(8720401)	1	..Gear, 2nd	..Kugghjul, 2:an	4
0790	69	87 00 361				2	..Guide ring	..Styring	4
0800	70	87 14 933			34)	1	..Gear, 1st	..Kugghjul, 1:an	4
0805	70	87 22 266			35)	1	..Gear, 1st	..Kugghjul, 1:an	4
0810	71	87 14 925				1	..Reverse gear	..Backdrev	3
0820	72	87 03 340			0.3MM	X	..Shim	..Shim	5
0830	72	87 03 357			0.4MM	X	..Shim	..Shim	5
0840	72	87 03 365			0.5MM	X	..Shim	..Shim	5
0850	73	87 02 359				1	..Nut	..Mutter	3
0860	74	83 41 034	S		-1986	2	..Roller bearing	..Rullager	3
0865	74	87 25 194	S		1987-	2	..Roller bearing	..Rullager	3
0870	75	87 03 530	S			1	..Collapsible spacer	..Spännhylsa	4
0880	76	83 41 752			32), 0.10MM	X	..Shim	..Shim	5
0885	76	87 24 569			33), 0.10MM	X	..Shim	..Shim	5
0890	76	83 41 760			32), 0.15MM	X	..Shim	..Shim	5
0895	76	87 24 577			33), 0.15MM	X	..Shim	..Shim	5
0900	76	83 41 778			32), 0.30MM	X	..Shim	..Shim	5
0905	76	87 24 585			33), 0.30MM	X	..Shim	..Shim	5
0910	76	83 44 723			32), 0.50MM	X	..Shim	..Shim	5
0915	76	87 24 593			33), 0.50MM	X	..Shim	..Shim	5
0925	77	87 20 732				1	..Bearing house	..Lagerhus	5
0930	78	81 25 189				1	..Screw	..Skruv	5
0940	79	87 15 765				1	..Pinion and crown wheel	..Pinjong och kronhjul	5
0960	80	93 37 437			see page 4-045, 1-J22	1	..Shaft, intermediate gear assy	..Axel, mellandrev kpl	6
0970									
0980	81	87 18 645				1	..Thrust washer	..Tryckbricka	4
0990	82	87 12 887				1	..Thrust washer	..Tryckbricka	4
1000	83	87 18 637				1	..Intermediate gear	..Mellandrev	5
1010	84	87 18 629				1	..Gear	..Kugghjul	4
1020	85	80 47 813				1	..Lock ring	..Spärring	5
1030	86	87 12 655				1	..Sleeve	..Hylsa	4
1040	87	87 14 693				1	..Roller	..Rulle	4
1050	88	87 18 660				11	..Needle bearing	..Nållager	3
1060	89	87 12 853				1	..Needle bearing	..Nållager	4
1070	90	87 00 114				1	..Lock plate	..Låsplatta	3
1080	91	87 18 843				1	..Screw	..Skruv	5
1090	92	87 14 974				1	..Sliding reverse gear assy	..Backdrev skjutbart kpl	4
1110	93	87 15 229				2	..Bushing	..Bussning	3
1120	94	87 00 130				1	..Shaft, reverse gear	..Axel, backdrev	6
1130	95	87 00 585				1	..Gear shift shaft	..Växelföraxel	6

32. Gear box --205264, --687132, --795916

33. Gear box 205265--., 687133--., 795917--

34. Gear box --208509, --806332, --932771

35. Gear box 208510--., 806333--., 932772--

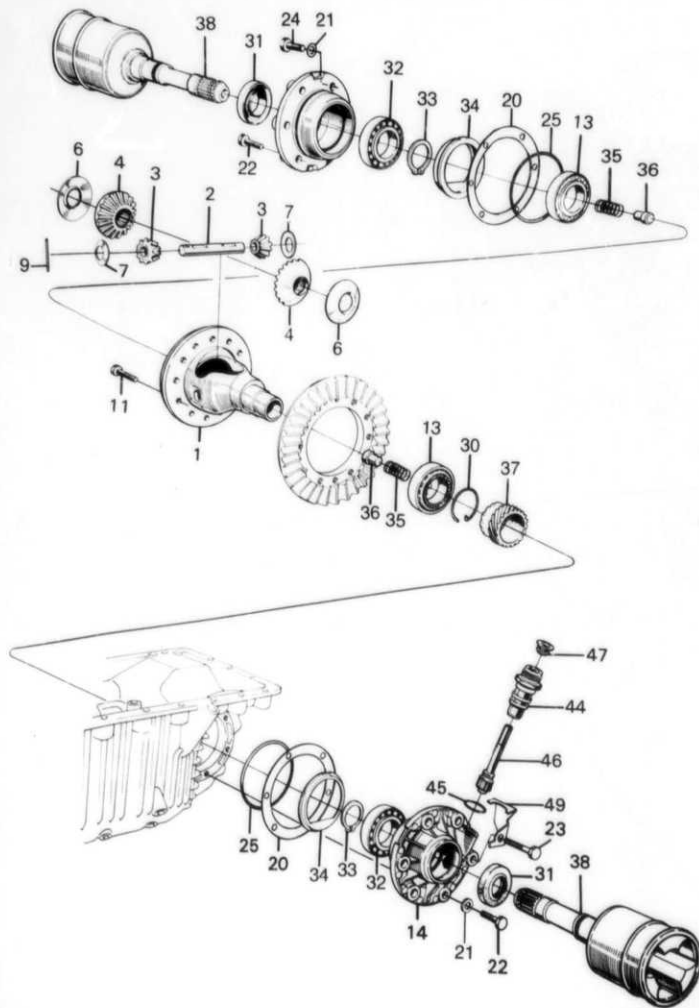

F2458 - 90

1-J14

Gear box
Differential for manual
gear box

Växellåda
Differential för manuell
växellåda

MASTER INDEX

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0090			see page 4-011, 1-112				
0020	1	87 19 890		1	Gear box assy	Växellåda kpl	5
0050	2	87 19 940		1	Differential case	Differentialhus	5
0060	3	87 19 858	11,29, 4-SPEED	2	Shaft	Åxel	4
0070	3	87 23 173	12,28, 4-SPEED	2	Differential pinion gear	Differentialdrev	4
0090	3	87 23 173	5-SPEED	2	Differential pinion gear	Differentialdrev	4
0110	4	87 19 858	11,29, 4-SPEED	2	Differential side gear	Differentialhjul	4
0130	4	87 19 866	12,28, 4-SPEED	2	Differential side gear	Differentialhjul	4
0150	4	87 23 165	5-SPEED	2	Differential side gear	Differentialhjul	4
0170	4	87 19 866		2	Thrust washer	Slitbricka	3
0190	6	87 19 822		2	Thrust washer	Slitbricka	3
0200	7	87 19 874		1	Tension pin	Rörpinne	5
0210	9	80 49 702		12	Screw	Skruv	5
0220	11	87 18 140		2	Roller bearing	Rullager	3
0230	13	87 08 836		1	Bearing seat	Lagersäte	5
0240	14	87 11 160	LH	1	Bearing seat	Lagersäte	5
0250	15	87 04 280	RH	1	Bearing seat	Lagersäte	5
0260	20	83 41 604	S 0.10MM	X	Shim	Shim	5
0270	20	83 41 612	S 0.15MM	X	Shim	Shim	5
0280	20	83 41 620	S 0.30MM	X	Shim	Shim	5
0290	20	83 41 638	S 0.50MM	X	Shim	Shim	5
0300	21	80 29 985		12	Washer	Bricka	5
0310	22	87 22 548		11	Screw	Skruv	5
0320	23	87 22 555		1	Screw	Skruv	5
0330	24	80 83 941		2	Screw	Skruv	5
0340	25	83 42 701	S	2	O-ring	O-ring	5
0350	30	87 04 421		1	Lock-ring	Stoppring	5
0360	31	87 04 298		2	Seal ring	Tätningssring	5
0370	32	87 04 306		2	Ball bearing assy	Kullager kpl	3
0380	33	80 47 813		2	Lock ring	Låsring	5
0390	34	87 10 360		1	Washer	Bricka	5
0400	35	87 04 314		2	Spring	Fjäder	4
0410	36	87 04 322		2	Plunger	Plunge	5
0420	37	87 04 413		1	Speedometer drive gear	Hastighetsmätardrev	5
0440	38	87 04 264	GEAR BOX GM34505,GM45605	2	Driver, inner	Medbringare, inre	3
0450	38	87 22 472	GEAR BOX GM34507,GM45607	2	Driver, inner	Medbringare, inre	3
0460	44	87 21 805	15, 17)	1	Guide sleeve	Styrhylsa	5
0470	44	87 24 866	16, 18), (8713034)	1	Guide sleeve	Styrhylsa	5
0480	45	87 11 707		1	O-ring	O-ring	4
0490	46	87 13 042	15, 17)	1	Gear	Kuggghjul	5
0500	46	87 23 900	16, 18)	1	Gear	Kuggghjul	5
0510	47	87 13 463		1	Seal ring	Tätningssring	4
0520	49	87 11 723		1	Lock plate	Låsplåt	6

- 11. Gear box --195975
- 12. Gear box 195976--
- 15. For 5-speed ch. --G6004054.
- 16. For 5-speed ch. G6004055--
- 17. Gear box --671841. --759477.
- 18. Gear box 671842-- 759478--
- 28. Gear box --207256
- 29. Gear box 207257--

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

F2458 Page 04 - 037

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
4 GROUP INDEX		
Clutch		1-I06
Clutch control		1-I08
Gear box		1-I14
Gear box control		1-J16
Complete sets		1-J20

1-J18


Drive shaft, outer universal joint

Drivaxlar, yttre knut







MASTER INDEX

Qe50	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0020	1	89 42 633		7), SUPERSEDED BY 8790574 AND 8964710	2	Outer universal joint	Yttre knut	4
0025	1	89 90 574		8)	2	Outer universal joint	Yttre knut	4
0030	2	89 42 757		24)	2	Washer	Bricka	5
0070	6	89 21 785		7)	2	Lock nut	Låsmutter	3
0140	6	89 64 710		8,24)	2	Lock nut	Låsmutter	3
0160	6	89 65 360		25)	2	Lock nut	Låsmutter	3
0180	9	89 45 446		15,22), LH	1	Drive shaft, inner	Drivaxel, inre	5
0322	9	89 45 453		15,22), RH	1	Drive shaft, inner	Drivaxel, inre	5
0325	9	91 02 898		16,23), LH, (9101668)	1	Drive shaft, inner	Drivaxel, inre	5
0328	9	91 02 906		16,23), RH, (9101676)	1	Drive shaft, inner	Drivaxel, inre	5
0329	10	89 45 735		15,22)	2	Driver	Medbringare	3
0342	10	89 50 628		16,23)	2	Driver	Medbringare	3
0345	11	89 45 727		15,22)	2	Lock ring	Låsring	5
0362	11	89 50 636		16,23)	2	Lock ring	Låsring	5
0365	17	89 21 520		15,22)	2	Lock ring	Låsring	5
0480	18	89 93 073		see page 4-045, 1-J22	2	Rubber bellows assy	Gummibälg kpl	3
0501	18	89 61 872		16,23)	2	Rubber bellows assy	Gummibälg kpl	3
0506	19	79 70 163	S	see page 4-045, 1-J22	2	Clamp	Klamma	5
0520	20	71 67 117	S	(7048465)	2	Strap	Bandjörn	3
0540	21	70 48 473	S	see page 4-045, 1-J22	2	Clamp	Klamma	3
0590	22	89 93 149			2	Rubber bellows assy	Gummibälg kpl	2
0610	23	71 67 117	S		4	Strap	Bandjörn	3
0610	24	70 48 473	S		4	Clamp	Klamma	3

7. Ch. --F6008834
 8. Ch F6008835--
 15. For 5-speed ch. --G5004054
 16. For 5-speed ch. G6004055--
 22. For 4-speed mod. --1986
 23. For 4-speed mod. 1987--
 24. Ch. --H7015180
 25. Cl. H7015181--

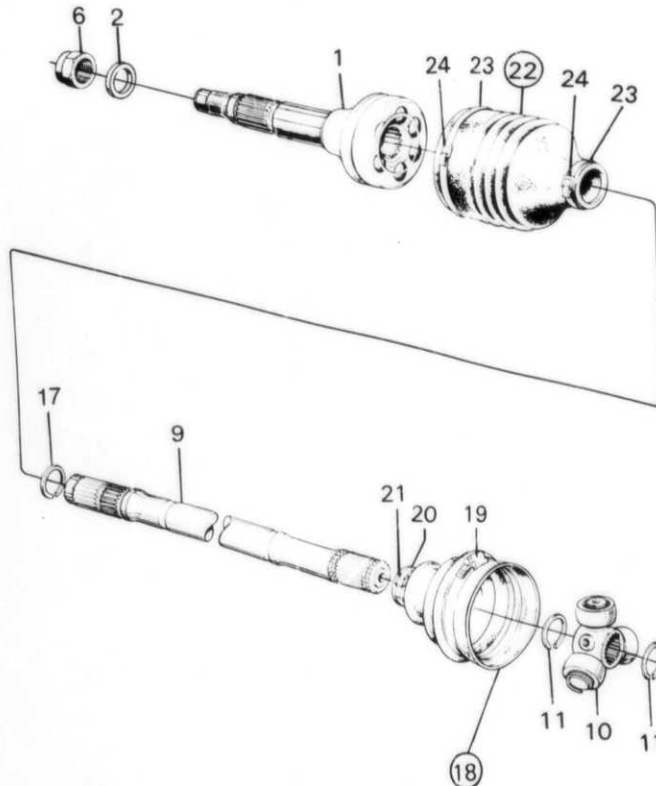

R 6203-90

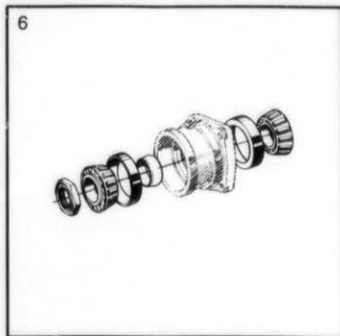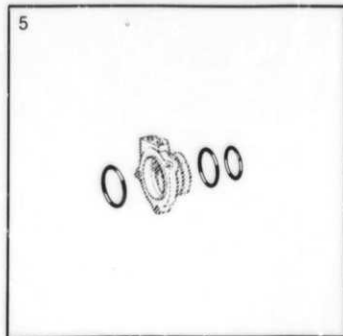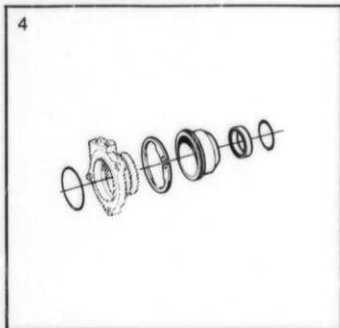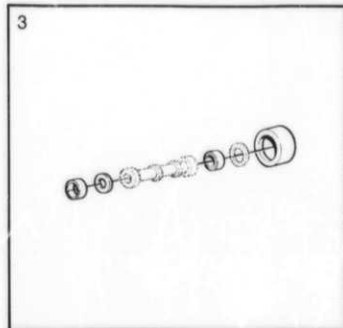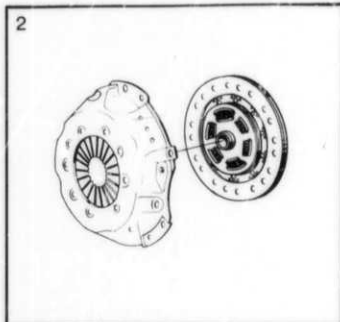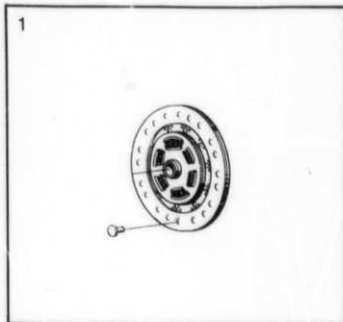

R 9284-90

1-J20

Complete set
Transmission

Satser
Kraftöverföring

MASTER INDEX

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0700					
0020	1 83 80 214		X	CLUTCH DISK LINING	LAMELBELÄGGSATS
0040				SET WITH RIVETS	MED NIT
0060	83 07 688	1)	2	Clutch disk lining	.Lamelbelägg
0080	83 00 459		20	Rivet	.Nit
0100					
0120	2 88 18 080	36), 4-SPEED	X	RECONDITIONING KIT,	RENOVERINGSSATS,
0140				CLUTCH	KOPPLING
0160	87 04 116		1	Pressure plate	.Tryckskiva
0180	83 07 498		1	Clutch disk	.Lamell
0185					
0188	2 88 18 098	37), 4- AND 5-SPEED	X	RECONDITIONING KIT,	RENOVERINGSSATS,
0189				CLUTCH	KOPPLING
0190	87 25 400		1	Pressure plate	.Tryckskiva
0191	87 22 324		1	Clutch disk	.Lamell
0200					
0220	3 89 93 156		X	REPAIR KIT, MASTER	REPARATIONSSATS
0240				CYL. CLUTCH	HUVUDCYL. KOPPLING
0260	89 03 304		1	Gasket	.Packing
0280	89 45 248	ALT. TO 8903304	1	Gasket	.Packing
0300	73 13 182		1	Washer	.Bricka
0320	89 45 255	ALT. TO 7313182	1	Washer	.Bricka
0340	89 40 769		1	Gasket	.Packing
0360					
0380	4 87 81 007	13)	X	KIT, SEALING,	TÄTNINGSSATS, SLAV-
0400				SLAVE CYLINDER	CYLINDER
0520	87 11 285		1	O-ring	.O-ring
0540	87 11 079		1	O-ring	.O-ring
0560	87 11 806		1	O-ring	.O-ring
0580	87 11 855		1	Rubber sealing	.Gummitätning
0600	87 14 412		1	Sealing sleeve	.Tätningshylsa
0620	87 14 420		1	Lock ring	.Låsring
0640					
0660	5 87 81 072	14)	X	KIT, SEALING,	TÄTNINGSSATS,
0680				SLAVE CYLINDER	SLAVE CYLINDER
0700	87 11 806		1	Sealing	.Tätning
0720	87 22 118		1	Sealing	.Tätning
0740	87 22 126		1	Sealing	.Tätning
0760					
0780	6 87 80 454		X	BEARING KIT FOR	LAGERSATS FÖR
0800				MANUAL GEAR BOX	MANUELL VÄXELLÄDA
0820	87 03 530		1	Tension sleeve	.Spännhylsa
0840	87 02 359		1	Nut	.Mutter
0870	87 24 890		2	Bearing+race	.Lager+bana
0890		1987-			

1. Gear box ---192459.
13. Ch.---F6010403.
14. Ch.F6010404---.
36. Asbestos
37. Asbestos free

SAAB genuine parts
original resinsubstit

SAAB 90 M85-87

1990-02

R9284

Page 50/51 04-043


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool ,	
	Labels	2-G02
10	Numerical	
	register	2-H02
4 GROUP INDEX		
	Clutch	1-I06
	Clutch control	1-I08
	Gear box	1-I14
	Gear box control	1-J16
	Complete sets	1-J20

1-J22

Complete set Transmission

Satser Kraftöverföring

MASTER INDEX

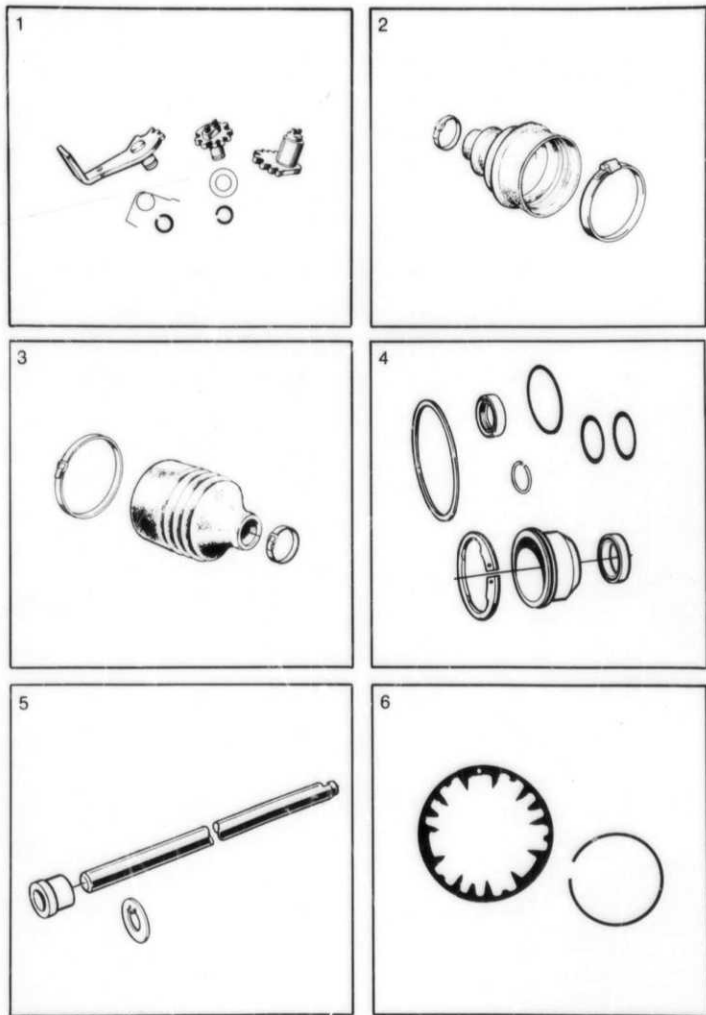

R 9285-90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0900	1	93 37 445		X	KIT, COG WHEEL	SATS, KUGGHJUL	5
0920					GEAR LEVER LOCK	VÄXELSPAKSLÅS	3
0940		93 20 987	1)	1	,Cog wheel	,Kugghjul	5
0960		93 30 440	1)	1	,Gear	,Drev	5
0980		93 47 758	1)	1	,Lock arm	,Låstunga	3
1000		93 42 734		1	,Pin	,Tap	5
1040		75 42 913		1	,Spring	,Fjäder	3
1060		79 51 353		2	,Lock ring	,Låsring	5
1080							
1100	2	89 93 073	15,22) DRIVE SHAFT INNER	X	KIT, RUBBER BELLOWS	GUMMIBÄLGSSATS	3
1120		89 41 270	1)	1	,Rubber bellow	,Gummidamask	3
1140		79 70 163		1	,Hose clamp	,Slangklamma	5
1160		70 48 465		1	,Strap	,Bandjörn	5
1180		70 48 473		1	,Clamp	,Klamma	3
1200							
1201	2	89 61 872	16,23) DRIVE SHAFT INNER	X	KIT, RUBBER BELLOWS	GUMMIBÄLGSSATS	3
1202		89 55 007	1)	1	,Rubber bellow	,Gummidamask	3
1203		71 67 117		2	,Strap	,Bandjörn	3
1204		70 48 473		2	,Clamp	,Klamma	3
1205							
1220	3	89 93 149	OUTER UNIVERSAL JOINT	X	KIT, RUBBER BELLOWS	GUMMIBÄLGSSATS	2
1240		89 42 823	1)	1	,Rubber bellows	,Gummibälg	6
1260		71 67 117		2	,Strap	,Bandjörn	3
1280		70 48 473		2	,Clamp	,Klamma	3
1300							
1320	4	88 18 262	13)	X	REPAIR KIT, CLUTCH	REP SATS, KOPPLING	2
1340		87 10 881		1	,Seal ring	,Tätningsring	2
1360		83 40 507		1	,O-ring	,O-ring	2
1380		87 04 777		1	,Lock ring	,Låsring	3
1400		87 11 285		1	,O-ring	,O-ring	2
1420		87 11 079		1	,O-ring	,O-ring	2
1440		87 11 806		1	,O-ring	,O-ring	2
1460		87 11 855		1	,Rubber seal	,Gummitätning	3
1480		87 14 412		1	,Sealing	,Tätning	3
1500		87 14 420		1	,Lockring	,Låsring	5
1520		87 13 216		1	,Gasket	,Packning	4
1540							
1560	5	93 21 241		X	KIT, SHAFT INTER-MEDIATE GEAR	SATS, MELLANDREVS-AXEL	6
1580							
1600		87 11 509		1	,Shaft	,Axel	5
1620		87 11 327		1	,Thrust washer	,Tryckbricka	4
1640		87 12 325		1	,Thrust washer	,Tryckbricka	4
1660							
1680	5	93 37 437	5-SPEED	X	KIT, SHAFT INTER-MEDIATE GEAR	SATS, MELLANDREVS-AXEL	6
1700							
1720		87 12 630		1	,Shaft	,Axel	6
1740		87 18 645		1	,Thrust washer	,Tryckbricka	4
1760		87 12 887		1	,Thrust washer	,Tryckbricka	4
1780							
1800	6	87 81 155		X	GUIDE RING KIT	STYRRINGSSATS	4
1820		87 04 033	1)	1	,Guide ring	,Styrring	4
1840		87 03 993	1)	1	,Lock ring	,Låsring	4

1. Gear box -- 192459.
13. Ch. -- F6010403.
15. For 5-speed ch. -- G6004054.
16. For 5-speed ch. G6004055 --.
22. For 4-speed mod. -- 1986.
23. For 4-speed mod. 1987 --.



Bromsar
Brakes
Bremsen
Freins
Frenos

1-K02

0050
0020
0040
0060
0080
0100
0170
0180
0200
0220
0240
0260
0280
0285
0290
0300
0320
0340
0360
0420
0450
0460
0480
0500
0520
0540
0560
0565
0570
0600
0620
0640
0660
0700
0730
0740
0760
0780
0820
0840
0845
0850
0860
0880
0900
0920
0940
0970
0990
1000
1040
1060
1080
1100
1103
1106
1110

TABLE OF CONTENTS

Front wheel brake	5 : 5	1-K06
Rear wheel brake	5 : 7	1-K08
Footbrake system		
Master cylinder and power brake unit	5 : 9	1-K10
Brake lines	5 : 11	1-K12
Brake operation	5 : 13	1-K14
Parking brake system	5 : 15	1-K16
Complete sets		
Brakes	5 : 17	1-K18

Framhjulsbroms	5 : 5	1-K06
Bakhjulsbroms	5 : 7	1-K08
Fotbromssystem		
Huvudcylinder och vacuumservo	5 : 9	1-K10
Bromsledningar	5 : 11	1-K12
Bromsmanövrering	5 : 13	1-K14
Parkeringsbromssystem	5 : 15	1-K16
Satser		
Bromsar	5 : 17	1-K18

INHALTSVERZEICHNIS

Vorderradbremsen	5 : 5	1-K06
Hinterradbremsen	5 : 7	1-K08
Fußbremssystem		
Hauptbremszylinder und unterdruckservo	5 : 9	1-K10
Bedienungsorgan	5 : 11	1-K12
Handbremssystem	5 : 13	1-K14
Komplete Sätze		
Bremsen	5 : 17	1-K18

TABLE des matieres

Freins AV	5 : 5	1-K06
Freins AR	5 : 7	1-K08
Moteur-cylindre et assistance à vide	5 : 9	1-K10
Conduites de frein	5 : 11	1-K12
Commande du frein au pied	5 : 13	1-K14
Système de frein à main	5 : 15	1-K16
Jeux complets		
Freins	5 : 17	1-K18

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system,	
instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly,	
steering	1-L02
7 Suspension,	
wheels	2-A02
8 Body	2-B02
9 Tool,	
labels	2-G02
10 Numerical	
register	2-H02

5 GROUP INDEX

Front wheel brake	1-K06
Rear wheel brake	1-K08
Footbrake system	1-K10
Parking brake system	1-K16
Complete sets	1-K18

1-K03

SUMARIO

Freno del	5 : 5	1-K06
Freno tras	5 : 7	1-K08
Sistema de freno de pie		
Cilindro principal y servoasistencia	5 : 9	1-K10
Conductos de freno	5 : 11	1-K12
Mando de freno de pie	5 : 13	1-K14
Sistema de freno de mano	5 : 15	1-K16
Juegos completos		
Frenos	5 : 17	1-K18

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

5 GROUP INDEX


Front wheel brake	1-K06
Rear wheel brake	1-K08
Footbrake system	1-K10
Parking brake system	1-K16
Complete sets	1-K18

1-K06

Front wheel brake

Framhjulsbroms

MASTER INDEX

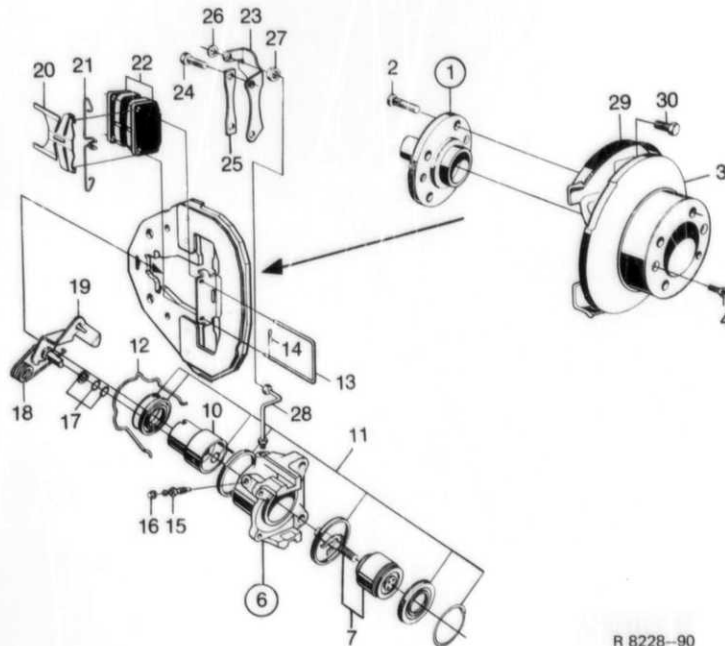

R 8228-90

Pos	Part No./Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	SL
0020	1	89 42 773	2	Wheel hub assy	Hjulnav kpl	4
0030	1	91 03 607	2	Wheel hub assy	Hjulnav kpl	4
0040	2	89 07 941	8	Wheel screw	Hjulskruv	2
0050	3	89 41 981	2	Brake disc	Bromsskiva	3
0060	4	80 55 998	4	Screw	Skruv	5
0070	6	89 85 871	1	Brake housing assy	Bromshus kpl	4
0080	6	89 85 889	1	Brake housing assy	Bromshus kpl	4
0090	6	91 02 807	1, 4	Brake housing assy without pads	Bromshus kpl utom klotsar	4
0100				Brake housing assy without pads	Bromshus kpl utom klotsar	4
0110	6	91 02 815	1, 4	Brake housing assy without pads	Bromshus kpl utom klotsar	4
0120				Kit, piston	Kolvalsats	4
0130	7	91 03 474	2	Kit, piston	Kolvalsats	4
0140	10	89 31 933	1	Piston	Kolv	3
0150	10	89 31 941	1	Piston	Kolv	3
0160	11	89 93 255	2	Gasket set	Packningssats	3
0170	12	89 41 965	2	Spring	Fjäder	3
0180	13	89 90 194	2	U-pin	U-pinne	5
0190	14	89 25 067	2	Clip	Clip	2
0200	15	89 25 034	2	Bleeding screw	Luftningsskruv	2
0210	16	89 25 042	2	Protective cover	Skyddsskåpa	3
0220	17	89 94 535	2	Seal kit, hand brake	Sats tätningar, handbroms	2
0230				Spring, hand brake	Fjäder, handbroms	4
0240	18	89 25 372	1	Spring, hand brake	Fjäder, handbroms	4
0250	18	89 25 380	1	Spring, hand brake	Fjäder, handbroms	4
0260	19	89 25 414	1	Lever, hand brake	Hävarm, handbroms	2
0270	19	89 25 422	1	Lever, hand brake	Hävarm, handbroms	2
0280	20	89 30 448	2	Damper plate	Dämpplåt	2
0290	21	89 30 463	2	Spring	Fjäder	2
0300	21	91 03 995	2	Spring	Fjäder	2
0310	22	89 93 263	1	Brake pad set	Bromsklotssats	1
0320				see page 5-017, 1-K18		
0330	22	91 02 690	1	Brake pad set	Bromsklotssats	1
0340				1987- OUTER SIDE, 2-PACK		
0350	22	91 02 708	1	Brake pad set	Bromsklotssats	1
0360				see page 5-017, 1-K18		
0370	23	89 26 214	1	Brake hose bracket	Bromsslangkonsol	6
0380	23	89 26 222	1	Brake hose bracket	Bromsslangkonsol	6
0390	24	89 26 198	4	screw	skruv	5
0400	25	89 38 110	2	Lock plate	Låsplåt	3
0410	26	79 33 856	2	Washer	Washer	5
0420	27	83 15 558	2	Nut	Mutter	5
0430	28	89 26 230	1	Brake pipe	Bromsrör	4
0440	28	89 26 248	1	Brake pipe	Bromsrör	4
0450	29	89 90 517	2	Protective plate	Skyddsplåt	6
0460	30	80 19 887	6	Screw	Skruv	5
0470		78 74 548	X	Repair set, brake pad	Rep sats, bromsklots	2
0480				see page 5-017, 1-K18		

1. See SI 523-678, for USA see SI 05/86-847
2. Ch. --H7015180
3. Ch. H7015181--
4. Also available as exchange unit

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
5 GROUP INDEX		
Front wheel brake		
Rear wheel brake		
Footbrake system		
Parking brake system		
Complete sets		

1-K08

Rear wheel brake

Bakhjulsbroms

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
5 GROUP INDEX		
2	Front wheel brake	1-K06
5	Rear wheel brake	1-K08
3	Footbrake system	1-K10
1	Parking brake system	1-K16
	Complete sets	1-K18

Qty./Antal	Description	Benämning	S
2	Wheel hrb assy with bearing and screw	Hjulnav kpl med lager och skruv	5
8	Wheel screw	Hjulskruv	2
2	Cap	Kapsel	2
2	Brake disc	Bromsskiva	5
4	Screw	Skruv	6
1	Protective plate	Skyddsplåt	6
1	Protective plate	Skyddsplåt	6
4	Screw	Skruv	5
2	Guide ring	Styrning	4
1	Brake housing assy	Bromshus kpl	5
1	Brake housing assy	Bromshus kpl	5
1	Brake housing assy	Bromshus kpl	5
1	Brake housing assy	Bromshus kpl	5
4	Piston	Kolv	5
2	Bleeding screw	Luftningsskruv	2
2	Protective cover	Skyddsskåpa	3
2	Gasket set	Packningssats	4
2	Twist stop	Vridstopp	3
2	Twist stop	Vridstopp	2
1	Kit, lock pin	Sats, låspinne	2
1	Set, retaining spring-lock pin	Sats, hållfjäder-låspinne	2
4	Screw	Skruv	5
2	Lock plate	Låsplåt	3
1	Brake pad set	Bromsklotssats	1
1	Brake pad set	Bromsklotssats	

4. Also available as exchange unit


SAAB genuine parts original reservdelar

SAAB 90 M85-87


1990-02

F2459

Page 05-007

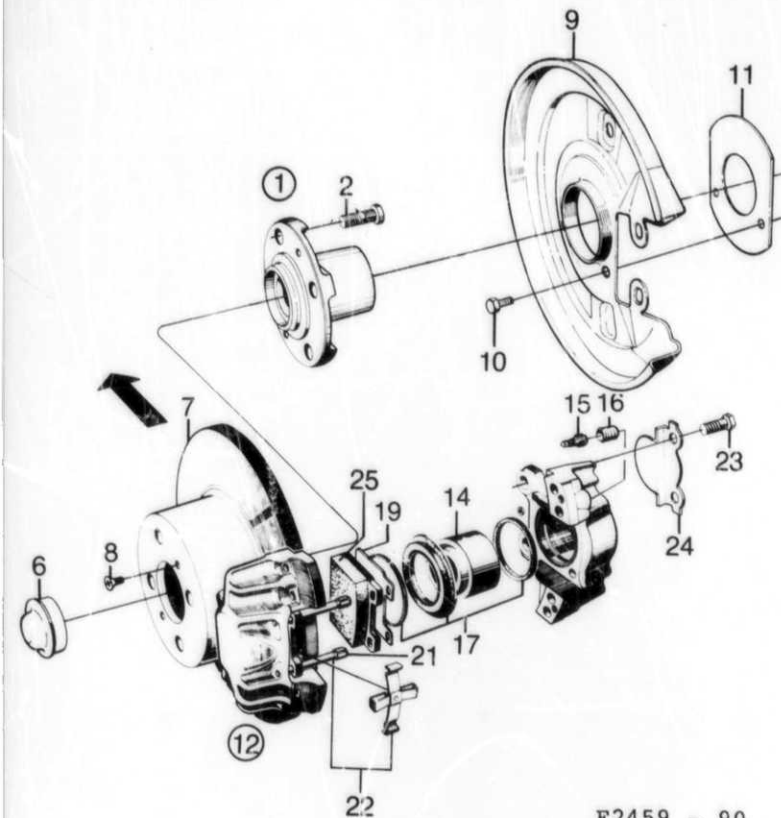

F2459 - 90

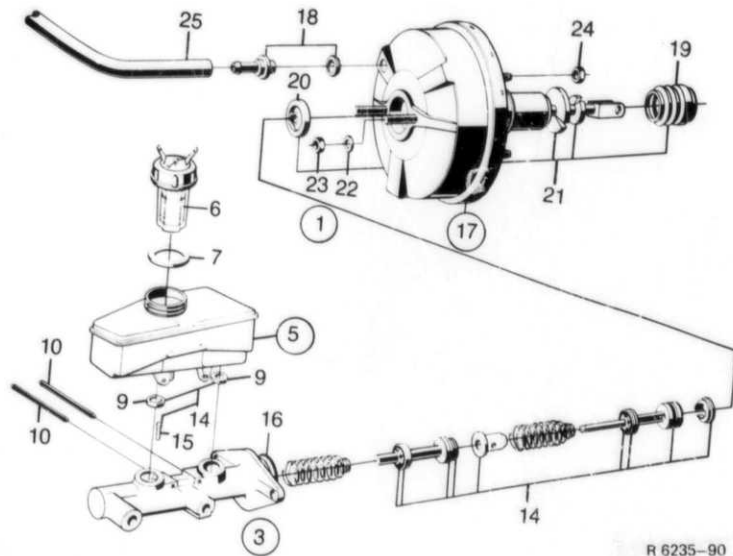

0250
0020
0030
0040
0041
0042
0050
0052
0060
0062
0070
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240

1-K10

Footbrake system Master cylinder and power brake unit

Notes/Anmärkningar
SUPERSEDED BY 9100629,
8945685, 7874472
1985, SUPERSEDED BY
9100629, 7874472
1986-
1985
1986-
1985
1986-
1986-
1985
1986-
see page 5-017, 1-K18
see page 5-019, 1-K20
RHD (8931743)
CUT TO 227 MM

Qty/
Anst

Description

Benämning

S
L

1 Master cylinder whit
power brake unit
Master cylinder
Master cylinder
Master cylinder
Container assy
Container assy
Level gauge
Sealing
Gasket
Retaining pin
Seal kit
Stop pin
O-ring
Power brake
Kit, non-return valve
Rubber bellows
Seal
Seal kit
Washer
Nut
Nut
Vacuum hose
Vacuum hose

5
4
4
5
5
5
5
5
4
4
4
5
5
6
6
2
5
5
5
5
5
5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02

5 GROUP INDEX

Front wheel brake	1-K06
Rear wheel brake	1-K08
Footbrake system	1-K10
Parking brake system	1-K16
Complete sets	1-K18

1-K12

Footbrake system
Brake lines


Fotbromssystem
Bromsledningar

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
5 GROUP INDEX		
5	Front wheel brake	1-K06
5	Rear wheel brake	1-K08
6	Footbrake system	1-K10
4	Parking brake system	1-K16
5	Complete sets	1-K18

Qty/ Antal	Description	Benämning	S
2	Brake hose	Bromsslang	4
2	Brake hose	Bromsslang	4
1	Brake pipe, wheel house	Bromsrör, hjulhus	5
1	Brake pipe, wheel house	Bromsrör, hjulhus	5
1	Brake pipe	Bromsrör	6
1	Brake pipe	Bromsrör	6
1	Brake pipe	Bromsrör	3
1	Brake pipe	Bromsrör	3
1	Brake pipe	Bromsrör	6
1	Brake pipe	Bromsrör	6
1	Inlet nipple	Genomföringsnippel	5
1	Stiffening plate	Förstyvningsplåt	6
1	Screw	Skruv	5
1	Seal washer	Tätningssbricka	5
2	Nipple	Nippel	5
15	Pipe retainer	Rörhållare	6
3	Pipe retainer	Rörhållare	5
3	Pipe clamp	Rörklamma	5
3	Screw	Skruv	5
2	Nut	Mutter	5
2	Washer	Bricka	5
1	Retainer, brake hose	Hållare, bromsslang	6
1	Lock plate	Låsplåt	4
1	Clamp	Klamma	5
4	Screw	Skruv	5
1	Clamp	Klamma	5

R 6236-90

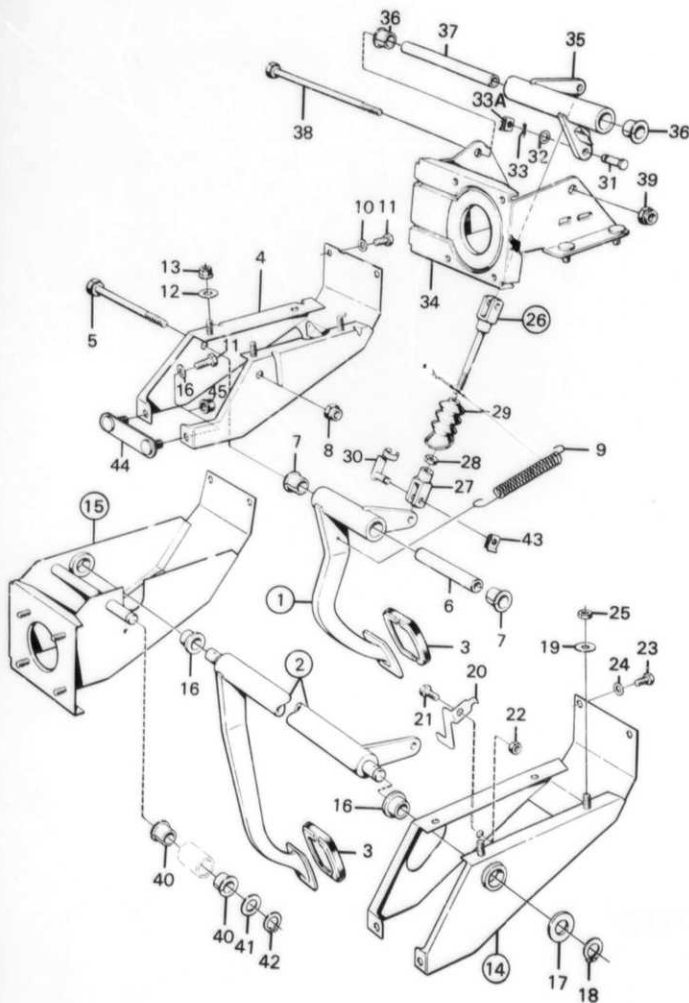

R 7372-90

1-K14

Footbrake system
Brake operation

Fotbromssystem
Bromsmanövrering

MASTER INDEX


0350	Pos.	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Beskrivning	S L
0020	1	89 24 458			1	Brake pedal assy	Bromspedal kpl	6
0060	2	89 27 055		RHD	1	Brake pedal assy	Bromspedal kpl	6
0140	3	71 93 188			1	Pedal rubber	„Pedalgummi	3
0220	4	89 24 391			1	Bracket	Konsol	6
0240	5	80 84 253			1	Screw	Skruv	5
0260	6	89 24 482			1	Distance tube	Distansrör	5
0280	7	89 24 516			2	Bushing	Bussning	4
0300	8	80 73 538			1	Nut	Mutter	5
0320	9	89 14 442			1	Spring	Fjäder	6
0340	10	79 33 849			4	Washer	Bricka	5
0360	11	80 82 919			4	Screw	Skruv	5
0380	12	89 29 531			3	Seal washer	Tätningbricka	5
0400	13	79 67 953			4	Nut	Mutter	5
0420	14	89 29 192	LH, RHD		1	Bracket	Konsol	6
0440	15	89 89 428	RH, RHD		1	Bracket	Konsol	6
0460	16	89 12 115	RHD		2	„Bushing	„Bussning	6
0480	17	80 30 058	RHD		1	Washer	Bricka	5
0500	18	79 63 150	RHD		1	Lock washer	Spärryttare	5
0520	19	89 29 531			7	Seal washer	Tätningbricka	5
0540	20	89 27 220	RHD		1	Stop, accelerator control	Stopp, gasreglage	5
0560								
0580	21	80 82 927	RHD		1	Screw	Skruv RHD	5
0600	22	80 74 106	RHD		5	Nut	Mutter	5
0620	23	80 82 919	RHD		6	Screw	Skruv	5
0640	24	79 33 849	RHD		10	Washer	Bricka	5
0660	25	79 67 953	RHD		2	Nut	Mutter	5
0680	26	89 26 420			1	Draw rod assy	Dragstäng kpl	6
0700	27	89 24 557			1	„Fork	„Gaffel	6
0720	28	80 73 942			2	„Nut	„Mutter	5
0740	29	89 26 461			1	„Rubber bellows	„Gummibalg	6
0760	30	89 33 509			2	Clamp	Låsbygel	5
0780	31	79 09 989		-1985	1	Shaft bolt	Åxelbult	5
0785	31	89 56 443		1986-	1	Shaft bolt	Åxelbult	5
0800	32	80 73 249		-1985	1	Washer	Bricka	5
0820	33	79 04 394		-1985	1	Cotter pin	Saxpinne	3
0825	33A	82 52 553		1986-	1	Clip	Säkringsclips	5
0840	34	89 24 581			1	Bracket	Konsol	6
0860	35	89 24 623			1	Intermediate shaft	Mellanaxel	6
0890	36	89 48 051			2	Bushing	Bussning	4
0900	37	89 24 508			1	Distance tube	Distansrör	5
0920	38	89 26 479			1	Screw	Skruv	5
0940	39	80 73 538			1	Nut	Mutter	5
0960	40	89 24 516	RHD		2	Bushing, clutch pedal	Bussning, kopplingspedal	4
0980								
1000	41	80 30 058	RHD		1	Washer, clutch pedal	Bricka, kopplingspedal	5
1020								
1040	42	79 63 150	RHD		1	Lock washer, clutch pedal	Spärryttare, kopplingspedal	5
1060								
1080	43	82 52 553			2	Clip	Säkringsclips	5
1100	44	89 50 487			1	Screw plate	Skruvplatta	6
1120	45	79 67 953			2	Nut	Mutter	5

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
5 GROUP INDEX		
	Front wheel brake	1-K06
	Rear wheel brake	1-K08
	Footbrake system	1-K10
	Parking brake system	1-K16
	Complete sets	1-K18

1-K16

Parking brake system

Parkeringsbromssystem






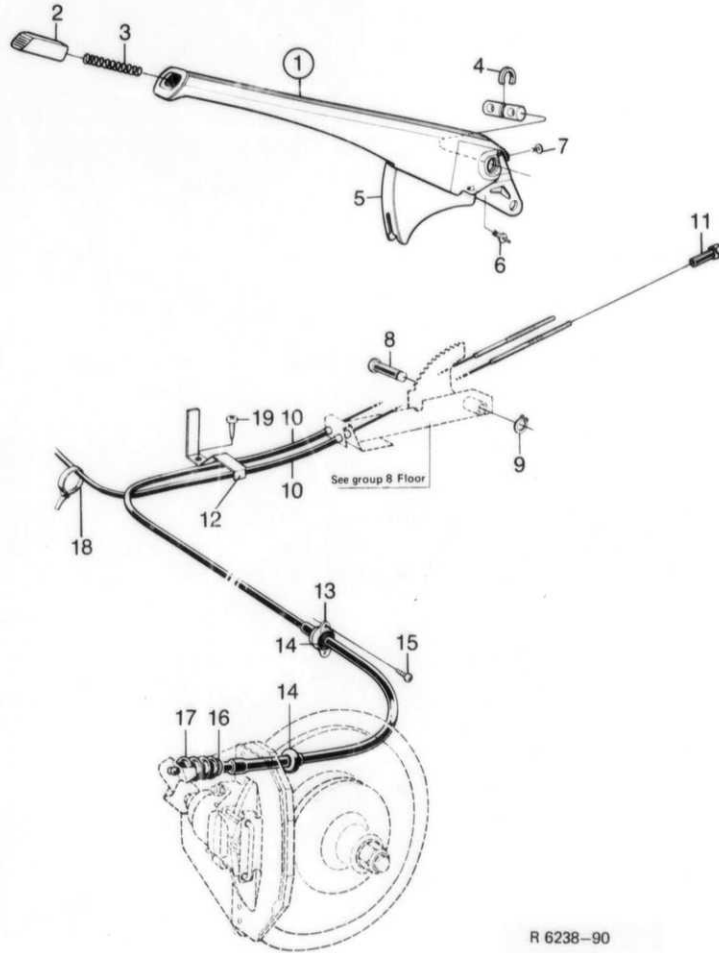


R 6238-90

0400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0110	1	89 46 964			1	Lever assy	Spak kpl	5
0120	2	89 46 691			1	Button	Tryckknapp	5
0130	3	71 80 607			1	Spring	Fjäder	5
0135	4	89 46 659			1	Ring	Spärring	5
0140	5	97 06 383			1	Sealing cover	Tätningsslock	4
0150	6	97 08 066			2	Blind rivet	Blindnit	5
0160	7	89 85 038			1	Plastic plug	Plastplugg	5
0175	8	89 46 709			1	Shaft bolt	Axelbult	5
0190	9	79 15 093			1	Ring	Spärring	5
0200	10	89 27 816			2	Handbrake cable	Handbromskabel	4
0220	11	89 85 459			2	Adjusting nut	Justermutter	3
0230	12	89 47 574			1	Cable retainer	Kabelhållare	6
0260	13	89 08 121			2	Retainer	Hållare	4
0270	14	89 08 139			4	Ring	Ring	4
0280	15	79 22 891			2	Screw	Skruv	5
0290	16	79 15 093			2	Ring	Spärring	5
0300	17	89 27 923			2	Protective bellows	Skyddsbalg	3
0310	18	79 71 880			1	Strap	Spännband	4
0320	19	79 72 805			1	Screw	Skruv	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
5 GROUP INDEX		
	Front wheel brake	1-K06
	Rear wheel brake	1-K08
	Footbrake system	1-K10
	Parking brake system	1-K16
	Complete sets	1-K18

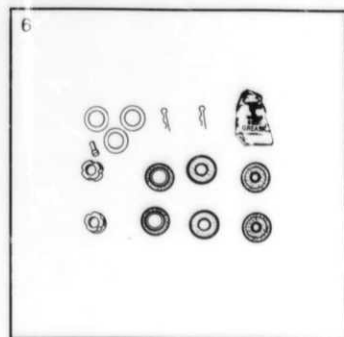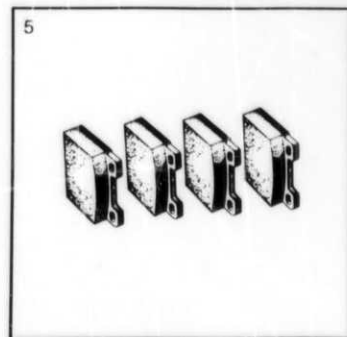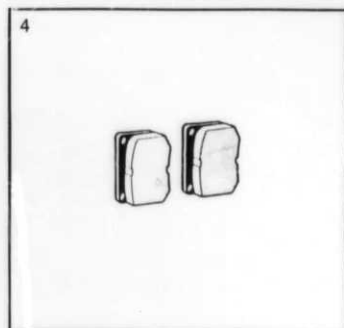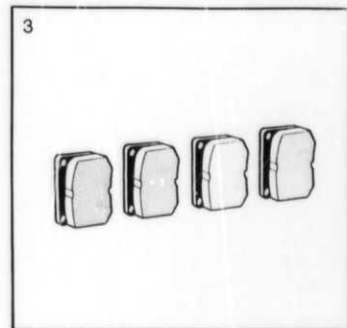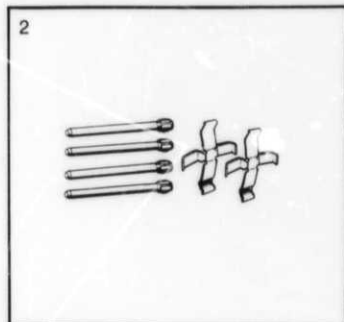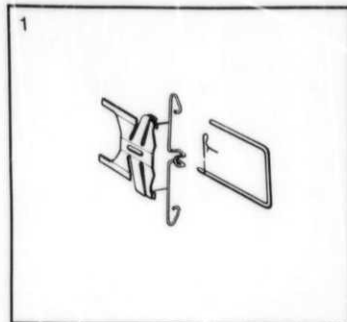

R 9286-90

1-K18

Complete sets
Brakes

Satser
Bromsar

MASTER INDEX

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020	1	78 74 548		X	SET, HOLDER BRAKE	SATS, HÅLLARE
0040					PADS, FRONT	BROMSKLOTSAR, FRAM
0060		89 30 448		2	.Damper plate	.Dämpplåt
0080		89 25 067		2	.Clip	.Clip
0100		89 90 194		2	.U-pin	.U-pinne
0120		89 30 463		2	.Spring	.Fjäder
0140						
0160	2	78 74 530		X	SET, RETAINING	SATS, HÅLLFJÄDER,
0180					SPRING, BRAKE REAR	BAKRE BROMS
0200		89 08 543	1)	2	.Retainer spring	.Hållfjäder
0220		89 08 766	1)	4	.Lock pin	.Låspinne
0240						
0260	3	89 93 263	-1986	X	BRAKE PAD SET,	BROMSKLOTSSATS,
0280					FRONT	FRAM
0300		89 85 236	1)	4	.Brake pad	.Bromsklots
0320						
0321	4	91 02 690	1987-, OUTER	X	BRAKE PAD SET	BROMSKLOTSSATS,
0322					FRONT	FRAM
0323		89 85 236	1)	2	.Brake pad	.Bromsklots
0324						
0325	4	91 02 708	1987-, INNER	X	BRAKE PAD SET	BROMSKLOTSSATS,
0326					FRONT	FRAM
0327		91 02 153	1)	2	.Brake pad	.Bromsklots
0328						
0340	5	83 93 230	-1986	X	BRAKE PAD SET,	BROMSKLOTSSATS,
0360					REAR	BAK
0380		89 85 244	1)	4	.Brake pad	.Bromsklots
0400						
0401	5	91 02 716	1987-	X	BRAKE PAD SET	BROMSKLOTSSATS,
0402					REAR	BAK
0403		91 01 916	1)	4	.Brake pad	.Bromsklots
0404						
0420	6	89 93 305		X	KIT, SEALING MAIN	SATS, TÄTNING
0440					CYLINDER	HUVUDCYLINDER
0460		89 28 426	1)	2	.Gasket	.Packning
0480		89 46 865	1)	2	.Sealing ring	.Tätningssring
0500		89 46 824	1)	2	.Support ring	.Stödning
0520		89 46 832	1)	2	.Seal ring	.Tätningssring
0540		89 46 923	1)	2	.Washer	.Bricka
0560		89 28 434	1)	1	.Stop pin	.Stoppinne
0580		89 28 376	1)	1	.Lock ring	.Låsring
0600						

5 GROUP INDEX

Front wheel brake	1-K06
Rear wheel brake	1-K08
Footbrake system	1-K10
Parking brake system	1-K16
Complete sets	1-K18






1. See SI 523-678, for USA see SI 05/86-847

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R9286 Page 05-017

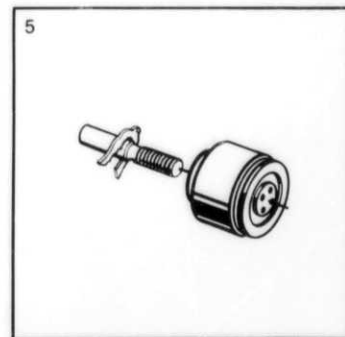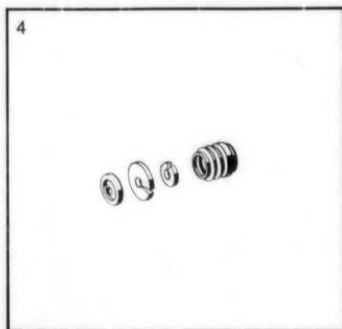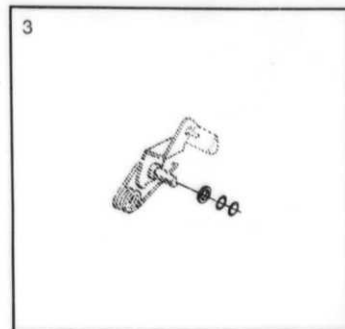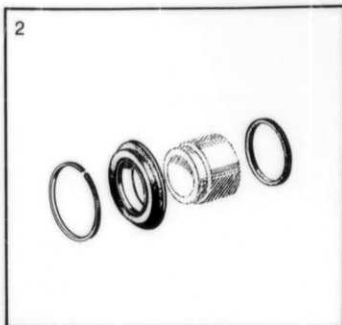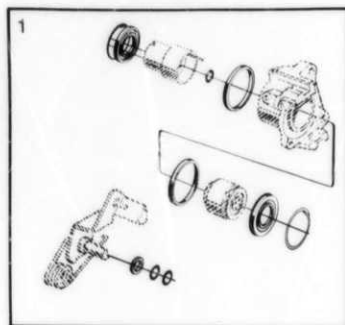

F2460 - 90

1-K20

Complete sets
Brakes

Satser
Bromsar

0650	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0620	1	89 93 255				X	KIT, SEALING FRONT BRAKE	SATS, TÄTNINGAR FRAMBROMS	L
0640									
0660		89 85 533	1)			2	Main seal	Huvudtätning	2
0680		89 25 547	1)			2	Seal retainer	Tätningshållare	2
0700		89 25 539	1)			2	Seal, piston	Tätning, kolv	3
0720		89 25 562	1)			1	Seal, push rod	Tätning, tryckstång	3
0730		89 94 535				1	Sealing kit, hand brake	Tätningssats, handbroms	2
0740									
0760	2	89 94 840				X	KIT, SEALING REAR BRAKE	SATS, TÄTNINGAR BAKBROMS	4
0780									
0800		89 32 246	1)			2	Seal ring	Tätningssring	6
0820		89 32 279	1)			2	Main seal	Huvudtätning	6
0840		89 08 527	1)			2	Seal retainer	Tätningshållare	6
0860									
0880	3	89 94 535				X	SET, SEALING HAND BRAKE	SATS, TÄTNINGAR HANDBROMS	2
0900									
0920		89 25 828				2	Seal	Tätning	2
0940		89 25 869	1)			2	Seal	Tätning	2
0960		89 25 851				2	Seal	Tätning	2
0980									
1020	4	89 10 705				X	REPAIR KIT, POWER BRAKE	REPARATIONSSATS, VAKUUMSERVO	2
1040									
1060		89 29 010				1	Seal	Tätning	6
1080		89 28 996	1)			1	Air filter	Luftfilter	6
1100		89 29 002	1)			1	Muffler	Ljuddämpare	6
1120		89 28 541				1	Rubber bellows	Gummibåg	6
1140									
1160	5	91 03 474				X	PISTON SET FRONT BRAKE	KOLVSATS FRAM- BROMS	4
1180									
1200		89 25 745	1)			1	Piston	Kolv	4
1220		89 25 521	1)			1	Push rod	Tryckstång	4
1240									

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

5 GROUP INDEX

Front wheel brake	1-K06
Rear wheel brake	1-K08
Footbrake system	1-K10
Parking brake system	1-K16
Complete sets	1-K18

1. See SI 523-678, for USA see SI 05/86-847

SAAB genuine parts
original reserved

SAAB 90 M85-87

1990-02

F2460

Page 05 - 019



Framvagn, Styrinrättning
Front assembly, Steering
Vorderwagen, Lenkung
Train-avant, Direction
Tren delantero, Dirección

0050
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370
0380
0390
0400
0410
0420
0430
0440
0450
0460
0470
0480
0490
0500
0510
0520
0530
0540
0550
0560
0570
0580
0590
0600

1-L02

Front wheel suspension, STEERING DEVICE

Framvagn, styrinrättning

TABLE OF CONTENTS

Front wheel suspension, steering device	6 : 3	1-L04
Steering device	6 : 5	1-L06
Steering wheel, column tube, steering wheel shaft	6 : 7	1-L08
Complete sets	6 : 9	1-L10

INNEHÅLLSFÖRTECKNING

Framvagn, styrinrättning	6 : 3	1-L04
Styrinrättning	6 : 5	1-L06
Ratt, rattstång, rattstång	6 : 7	1-L08
Satser	6 : 9	1-L10

INHALTVERZEICHNIS

Forderwagen, Lenkungen	6 : 3	1-L04
Lenkung	6 : 5	1-L06
Lenkrad, Lenksäulenlagerung, Lenksäule	6 : 7	1-L08
Komplette Sätze	6 : 9	1-L10

TABLE DES MATIERES

Train avant, direction	6 : 3	1-L04
Direction	6 : 5	1-L06
Volant, tube enveloppe, colonne de direction	6 : 7	1-L08
Jeux complets	6 : 9	1-L10

SUMARIO


Tren delantero, dirección	6 : 3	1-L04
Dirección	6 : 5	1-L06
Volante, tubo funda, columna de dirección	6 : 7	1-L08
Juegos completos	6 : 9	1-L10

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system, Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly, Steering	1-L02
7 Suspension, Wheels	2-A02
8 Body	2-B02
9 Tool, Labels	2-G02
10 Numerical register	2-H02

6 GROUP INDEX

Front wheel suspension, steering device	1-L04
Steering device	1-L06
Complete sets	1-L10

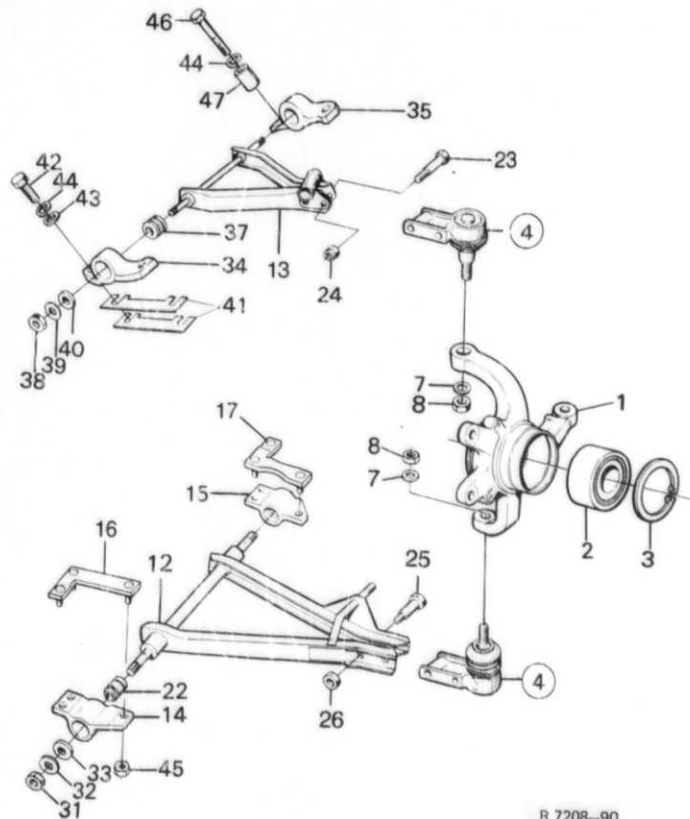

R 7208-90

1-L04


Front wheel suspension

Framvagn

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0150	1	89 41 858	LH	1	Steering knuckle housing	Styrspindelhus	5
0010	1	89 41 866	RH	1	Steering knuckle housing	Styrspindelhus	5
0020	2	89 42 765		2	Ball bearing	Kullager	2
0030	3	79 72 581		4	Retaining ring	Spårring	5
0040	4	89 93 321	see page 6-009, 1-L10	4	End piece assy	Ändstycke kpl	2
0050	7	80 73 124		4	Washer	Bricka	5
0060	8	79 18 733		4	Nut	Mutter	5
0070	12	89 34 788	LOWER LH	1	Control arm	Svängarm	4
0080	12	89 34 796	LOWER RH	1	Control arm	Svängarm	4
0090	13	89 41 015	UPPER LH	1	Control arm	Svängarm	4
0100	13	89 41 023	UPPER RH	1	Control arm	Svängarm	4
0110	14	89 86 283	LH	1	Bearing front with bushing	Lager främre med bussning	5
0120	14	89 86 333	RH	1	Bearing front with bushing	Lager främre med bussning	5
0130	15	89 86 309	LH	1	Bearing rear with bushing	Lager bakre med bussning	5
0140	15	89 86 358	RH	1	Bearing rear with bushing	Lager bakre med bussning	5
0150	16	82 26 458	FRONT LH	1	Bracket	Fäste	6
0160	16	82 26 466	FRONT RH	1	Bracket	Fäste	6
0170	17	89 23 294	REAR LH	1	Bracket	Fäste	6
0180	17	89 23 302	REAR RH	1	Bracket	Fäste	6
0190	22	71 84 443		4	Bushing	Bussning	2
0200	23	73 28 289	1985	4	Screw	Skruv	5
0210	23	89 90 012	1986-	4	Screw	Skruv	5
0220	24	79 18 717	1985	4	Nut	Mutter	5
0230	24	79 69 306	1986-	4	Nut	Mutter	5
0240	25	89 90 012		4	Screw	Skruv	5
0250	26	79 69 306		4	Nut	Mutter	5
0260	31	79 04 113		4	Nut	Mutter	5
0270	32	70 71 939		4	Washer	Bricka	5
0280	33	70 70 642		4	Washer	Bricka	5
0290	34	71 75 433	FRONT LH	1	Bearing	Lager	5
0300	35	71 75 441	REAR LH	1	Bearing	Lager	5
0310	35	71 75 441	FRONT RH	1	Bearing	Lager	5
0320	35	71 75 433	REAR RH	1	Bearing	Lager	5
0330	37	71 63 603		4	Bushing	Bussning	2
0340	38	79 04 097		4	Nut	Mutter	5
0350	39	70 70 626		4	Washer	Bricka	5
0360	40	70 70 667		4	Washer	Bricka	5
0370	41	70 71 061	0.5 MM	X	Spacer	Mellanlägg	5
0380	41	70 71 079	1.0 MM	X	Spacer	Mellanlägg	5
0390	41	70 71 087	2.0 MM	X	Spacer	Mellanlägg	5
0400	42	79 03 347		7	Screw	Skruv	5
0410	43	80 29 993		8	Washer	Bricka	5
0420	44	79 10 565		8	Washer	Bricka	5
0430	45	79 65 429		12	Nut	Mutter	3
0440	46	79 03 370		1	Screw	Skruv	5
0450	47	89 17 619		1	Spacer sleeve	Distanshylsa	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
6 GROUP INDEX		
6	Front wheel suspension, steering device	1-L04
6	Steering device	1-L06
6	Complete sets	1-L10

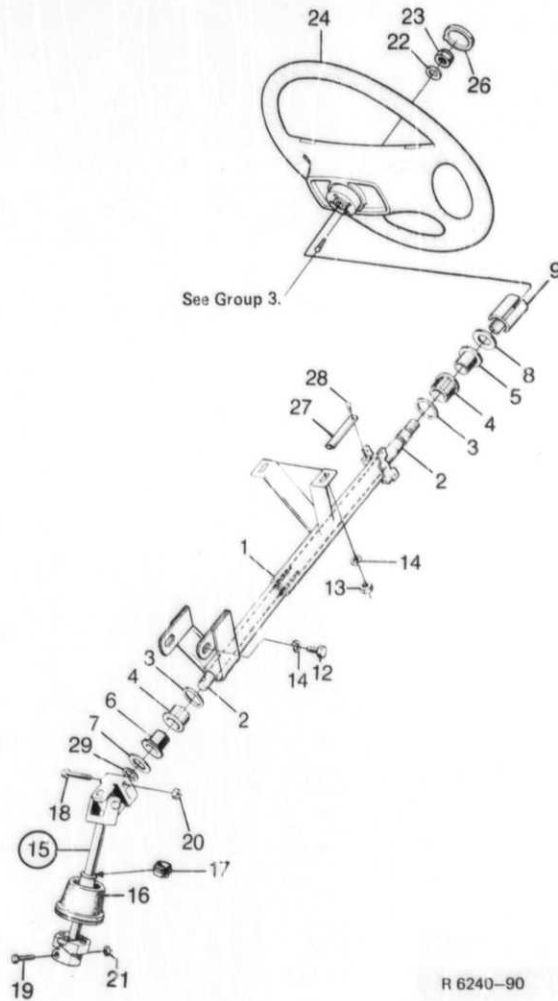

1-L06

Steering device
Steering wheel, column
tube steering wheel shaft

Styrinrättning
Ratt, rattör,
rattstång

MASTER INDEX

Q:00	Pos.	Part No./Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	3
06:10	1	89 87 711				1	Column tube	Rattör	6
06:20	1	89 87 943			RHD	1	Column tube	Rattör	6
06:30	2	89 87 752				1	Steering wheel shaft	Rattstång	5
06:40	3	89 05 861				2	Washer	Bricka	5
06:50	4	89 05 796				2	Rubber bushing	Gummibussning	3
06:60	5	89 04 906				1	Bushing	Bussning	3
06:70	6	89 15 076				1	Bushing	Bussning	3
06:80	7	89 05 879				1	Washer	Bricka	5
06:90	8	89 05 887				1	Washer	Bricka	5
07:00	9	89 17 098				1	Actuator	Medbringare	6
07:10	12	80 32 927				2	Screw	Skruv	5
07:20	13	79 65 767				2	Nut	Mutter	5
07:30	14	79 33 849				1	Washer	Bricka	5
07:40	15	89 88 032				1	Intermediate shaft	Mellanaxel kpl	5
07:50							assy		5
08:00	16	89 16 132				1	Seal bellows	Tätningssålg	5
08:10	17	89 43 755				1	Bearing	Lager	3
08:20	18	79 71 419				1	Screw	Skruv	5
08:30	19	89 36 148				1	Screw	Skruv	5
08:40	20	79 65 734				1	Nut	Mutter	3
08:50	21	79 63 390				1	Nut	Mutter	3
09:00	22	79 33 872				1	Washer	Vågbricka	5
09:10	23	89 42 716				1	Lock nut	Låsmutter	5
09:20	24	89 65 477			(896 1153)	1	Steering wheel	Ratt	5
09:30	26	89 89 659				1	Emblem	Emblem	3
09:40	27	89 17 106				1	Grounding plate	Jordningsbleck	6
09:50	28	79 22 644				1	Screw	Skruv	5
09:60	29	89 18 443				1	Rubber washer	Gummibricka	5


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
6 GROUP INDEX		
Front wheel suspension, steering device		
1	Steering device	1-L04
1	Steering device	1-L06
1	Complete sets	1-L10

1-L08

Steering device
Steering gear

Styrinrättning
Styrväxel

MASTER INDEX

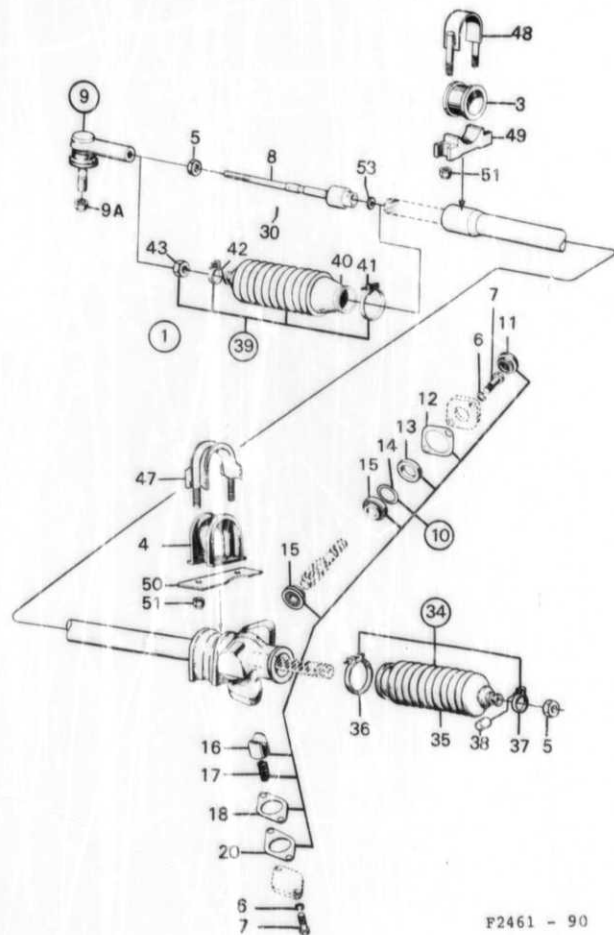

F2461 - 90

Qty/Amount	Description	Benämning	S
1	Steering gear with tie rods assy	Styrväxel med stag kpl	4
1	Steering gear with tie rods	Styrväxel med stag kpl	4
1	Rubber bushing	Gummibussning	5
1	Rubber spacer	Gummimellanlägg	5
2	Lock nut	Låsmutter	5
4	Washer	Bricka	5
4	Screw	Skruv	5
2	Tie rod	Styrstag	3
9	Kit, tie rod end	Sats, styrstagsände	2
9A		Mutter	5
10	Repair kit, pinion	Reparationssats, pinjong	4
11		Tätningssring	4
12		Packning	4
13		Distansring	4
14		Distansring	4
15		Shim	4
16		Shim	4
17		Shim	4
18		Shim	4
19		Shim	4
20		Shim	4
21		Shim	4
22		Shim	4
23		Shim	4
24		Shim	4
25		Shim	4
26		Shim	4
27		Shim	4
28		Shim	4
29		Shim	4
30		Shim	4
31		Shim	4
32		Shim	4
33		Shim	4
34		Shim	4
35		Shim	4
36		Shim	4
37		Shim	4
38		Shim	4
39		Shim	4
40		Shim	4
41		Shim	4
42		Shim	4
43		Shim	4
44		Shim	4
45		Shim	4
46		Shim	4
47		Shim	4
48		Shim	4
49		Shim	4
50		Shim	4
51		Shim	4
52		Shim	4
53		Shim	4

1. Not as separate spare part

SAAB genuine parts
original reserved

SAA6 90 M85-87

1990-02


F2461

Page 06-007

6 GROUP INDEX

Front wheel suspension,
steering device
Steering device
Complete sets

1-A02
1-B02
1-D02
1-G02
1-I02
1-K02
1-L02
1-M02
1-N02
1-O02
1-P02
1-Q02
1-R02
1-S02
1-T02
1-U02
1-V02
1-W02
1-X02
1-Y02
1-Z02
1-AA02
1-AB02
1-AC02
1-AD02
1-AE02
1-AF02
1-AG02
1-AH02
1-AI02
1-AJ02
1-AK02
1-AL02
1-AM02
1-AN02
1-AO02
1-AP02
1-AQ02
1-AR02
1-AS02
1-AT02
1-AU02
1-AV02
1-AW02
1-AX02
1-AY02
1-AZ02
1-BA02
1-BB02
1-BC02
1-BD02
1-BE02
1-BF02
1-BG02
1-BH02
1-BI02
1-BJ02
1-BK02
1-BL02
1-BM02
1-BN02
1-BO02
1-BP02
1-BQ02
1-BR02
1-BS02
1-BT02
1-BU02
1-BV02
1-BW02
1-BX02
1-BY02
1-BZ02
1-CA02
1-CB02
1-CC02
1-CD02
1-CE02
1-CF02
1-CG02
1-CH02
1-CI02
1-CJ02
1-CK02
1-CL02
1-CM02
1-CN02
1-CO02
1-CP02
1-CQ02
1-CR02
1-CS02
1-CT02
1-CU02
1-CV02
1-CW02
1-CX02
1-CY02
1-CZ02
1-DA02
1-DB02
1-DC02
1-DD02
1-DE02
1-DF02
1-DG02
1-DH02
1-DI02
1-DJ02
1-DK02
1-DL02
1-DM02
1-DN02
1-DO02
1-DP02
1-DQ02
1-DR02
1-DS02
1-DT02
1-DU02
1-DV02
1-DW02
1-DX02
1-DY02
1-DZ02
1-EA02
1-EB02
1-EC02
1-ED02
1-EE02
1-EF02
1-EG02
1-EH02
1-EI02
1-EJ02
1-EK02
1-EL02
1-EM02
1-EN02
1-EO02
1-EP02
1-EQ02
1-ER02
1-ES02
1-ET02
1-EU02
1-EV02
1-EW02
1-EX02
1-EY02
1-EZ02
1-FA02
1-FB02
1-FC02
1-FD02
1-FE02
1-FF02
1-FG02
1-FH02
1-FI02
1-FJ02
1-FK02
1-FL02
1-FM02
1-FN02
1-FO02
1-FP02
1-FQ02
1-FR02
1-FS02
1-FT02
1-FU02
1-FV02
1-FW02
1-FX02
1-FY02
1-FZ02
1-GA02
1-GB02
1-GC02
1-GD02
1-GE02
1-GF02
1-GG02
1-GH02
1-GI02
1-GJ02
1-GK02
1-GL02
1-GM02
1-GN02
1-GO02
1-GP02
1-GQ02
1-GR02
1-GS02
1-GT02
1-GU02
1-GV02
1-GW02
1-GX02
1-GY02
1-GZ02
1-HA02
1-HB02
1-HC02
1-HD02
1-HE02
1-HF02
1-HG02
1-HH02
1-HI02
1-HJ02
1-HK02
1-HL02
1-HM02
1-HN02
1-HO02
1-HP02
1-HQ02
1-HR02
1-HS02
1-HT02
1-HU02
1-HV02
1-HW02
1-HX02
1-HY02
1-HZ02
1-IA02
1-IB02
1-IC02
1-ID02
1-IE02
1-IF02
1-IG02
1-IH02
1-II02
1-IJ02
1-IK02
1-IL02
1-IM02
1-IN02
1-IO02
1-IP02
1-IQ02
1-IR02
1-IS02
1-IT02
1-IU02
1-IV02
1-IW02
1-IX02
1-IY02
1-IZ02
1-JA02
1-JB02
1-JC02
1-JD02
1-JE02
1-JF02
1-JG02
1-JH02
1-JI02
1-JJ02
1-JK02
1-JL02
1-JM02
1-JN02
1-JO02
1-JP02
1-JQ02
1-JR02
1-JS02
1-JT02
1-JU02
1-JV02
1-JW02
1-JX02
1-JY02
1-JZ02
1-KA02
1-KB02
1-KC02
1-KD02
1-KE02
1-KF02
1-KG02
1-KH02
1-KI02
1-KJ02
1-KK02
1-KL02
1-KM02
1-KN02
1-KO02
1-KP02
1-KQ02
1-KR02
1-KS02
1-KT02
1-KU02
1-KV02
1-KW02
1-KX02
1-KY02
1-KZ02
1-LA02
1-LB02
1-LC02
1-LD02
1-LE02
1-LF02
1-LG02
1-LH02
1-LI02
1-LJ02
1-LK02
1-LL02
1-LM02
1-LN02
1-LO02
1-LP02
1-LQ02
1-LR02
1-LS02
1-LT02
1-LU02
1-LV02
1-LW02
1-LX02
1-LY02
1-LZ02
1-MA02
1-MB02
1-MC02
1-MD02
1-ME02
1-MF02
1-MG02
1-MH02
1-MI02
1-MJ02
1-MK02
1-ML02
1-MN02
1-MO02
1-MP02
1-MQ02
1-MR02
1-MS02
1-MT02
1-MU02
1-MV02
1-MW02
1-MX02
1-MY02
1-MZ02
1-NA02
1-NB02
1-NC02
1-ND02
1-NE02
1-NF02
1-NG02
1-NH02
1-NI02
1-NJ02
1-NK02
1-NL02
1-NM02
1-NN02
1-NO02
1-NP02
1-NQ02
1-NR02
1-NS02
1-NT02
1-NU02
1-NV02
1-NW02
1-NX02
1-NY02
1-NZ02
1-OA02
1-OB02
1-OC02
1-OD02
1-OE02
1-OF02
1-OG02
1-OH02
1-OI02
1-OJ02
1-OK02
1-OL02
1-OM02
1-ON02
1-OO02
1-OP02
1-OQ02
1-OR02
1-OS02
1-OT02
1-OU02
1-OV02
1-OW02
1-OX02
1-OY02
1-OZ02
1-PA02
1-PB02
1-PC02
1-PD02
1-PE02
1-PF02
1-PG02
1-PH02
1-PI02
1-PJ02
1-PK02
1-PL02
1-PM02
1-PN02
1-PO02
1-PP02
1-PQ02
1-PR02
1-PS02
1-PT02
1-PU02
1-PV02
1-PW02
1-PX02
1-PY02
1-PZ02
1-QA02
1-QB02
1-QC02
1-QD02
1-QE02
1-QF02
1-QG02
1-QH02
1-QI02
1-QJ02
1-QK02
1-QL02
1-QM02
1-QN02
1-QO02
1-QP02
1-QQ02
1-QR02
1-QS02
1-QT02
1-QU02
1-QV02
1-QW02
1-QX02
1-QY02
1-QZ02
1-RA02
1-RB02
1-RC02
1-RD02
1-RE02
1-RF02
1-RG02
1-RH02
1-RI02
1-RJ02
1-RK02
1-RL02
1-RM02
1-RN02
1-RO02
1-RP02
1-RQ02
1-RR02
1-RS02
1-RT02
1-RU02
1-RV02
1-RW02
1-RX02
1-RY02
1-RZ02
1-SA02
1-SB02
1-SC02
1-SD02
1-SE02
1-SF02
1-SG02
1-SH02
1-SI02
1-SJ02
1-SK02
1-SL02
1-SM02
1-SN02
1-SO02
1-SP02
1-SQ02
1-SR02
1-SS02
1-ST02
1-SU02
1-SV02
1-SW02
1-SX02
1-SY02
1-SZ02
1-TA02
1-TB02
1-TC02
1-TD02
1-TE02
1-TF02
1-TG02
1-TH02
1-TI02
1-TJ02
1-TK02
1-TL02
1-TM02
1-TN02
1-TO02
1-TP02
1-TQ02
1-TR02
1-TS02
1-TT02
1-TU02
1-TV02
1-TW02
1-TX02
1-TY02
1-TZ02
1-UA02
1-UB02
1-UC02
1-UD02
1-UE02
1-UF02
1-UG02
1-UH02
1-UI02
1-UJ02
1-UK02
1-UL02
1-UM02
1-UN02
1-UO02
1-UP02
1-UQ02
1-UR02
1-US02
1-UT02
1-UV02
1-UW02
1-UX02
1-UY02
1-UZ02
1-VA02
1-VB02
1-VC02
1-VD02
1-VE02
1-VF02
1-VG02
1-VH02
1-VI02
1-VJ02
1-VK02
1-VL02
1-VM02
1-VN02
1-VO02
1-VP02
1-VQ02
1-VR02
1-VS02
1-VT02
1-VU02
1-VV02
1-VW02
1-VX02
1-VY02
1-VZ02
1-WA02
1-WB02
1-WC02
1-WD02
1-WE02
1-WF02
1-WG02
1-WH02
1-WI02
1-WJ02
1-WK02
1-WL02
1-WM02
1-WN02
1-WO02
1-WP02
1-WQ02
1-WR02
1-WS02
1-WT02
1-WU02
1-WV02
1-WX02
1-WY02
1-WZ02
1-XA02
1-XB02
1-XC02
1-XD02
1-XE02
1-XF02
1-XG02
1-XH02
1-XI02
1-XJ02
1-XK02
1-XL02
1-XM02
1-XN02
1-XO02
1-XP02
1-XQ02
1-XR02
1-XS02
1-XT02
1-XU02
1-XV02
1-XW02
1-XX02
1-XY02
1-XZ02
1-YA02
1-YB02
1-YC02
1-YD02
1-YE02
1-YF02
1-YG02
1-YH02
1-YI02
1-YJ02
1-YK02
1-YL02
1-YM02
1-YN02
1-YO02
1-YP02
1-YQ02
1-YR02
1-YS02
1-YT02
1-YU02
1-YV02
1-YW02
1-YX02
1-YY02
1-YZ02
1-ZA02
1-ZB02
1-ZC02
1-ZD02
1-ZE02
1-ZF02
1-ZG02
1-ZH02
1-ZI02
1-ZJ02
1-ZK02
1-ZL02
1-ZM02
1-ZN02
1-ZO02
1-ZP02
1-ZQ02
1-ZR02
1-ZS02
1-ZT02
1-ZU02
1-ZV02
1-ZW02
1-ZX02
1-ZY02
1-ZZ02

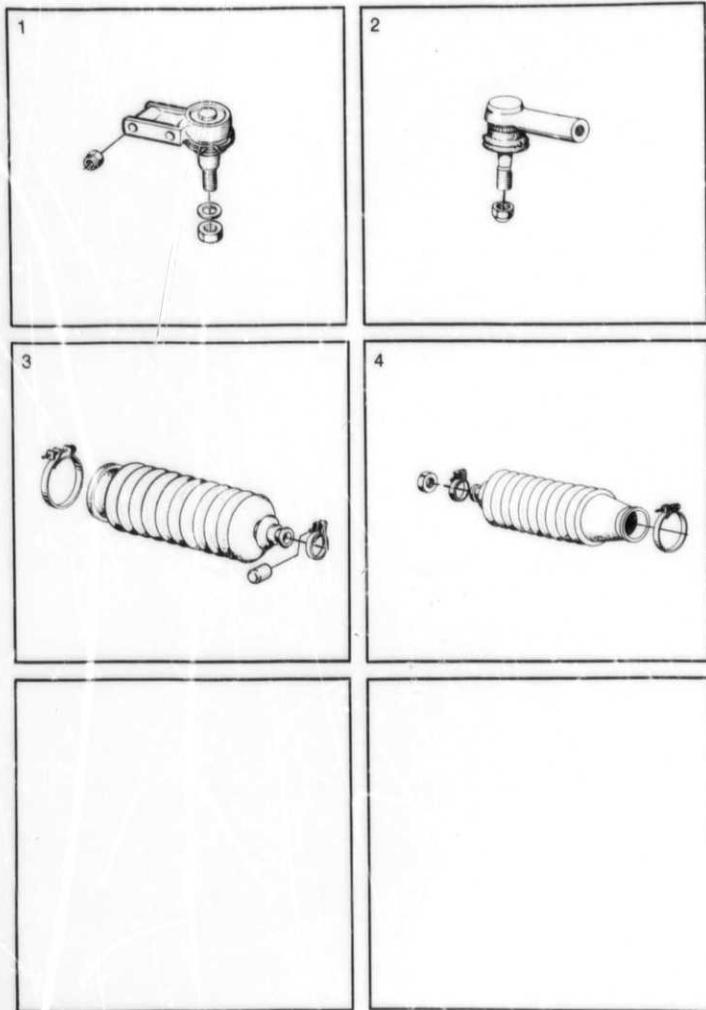

R 9277-90

1-L10

Complete sets

Front wheel suspension,
steering device

Satser

Framvagn, styrinrättning

MASTER INDEX

1000
0010
0020
0030
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0260
0270
0280
0290

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1	89 93 321 89 85 384 89 93 677		1)	X 1 1	KIT END PIECE .End piece .Kit, nut	SATS ÄNDSTYCKE .Ändstycke .Mutersats	2 2 4
2	89 93 354 89 65 160 80 73 546		1)	X 1 1	KIT, TIE ROD END .Tie rod end .Nut	SATS, STYRSTAGSÄNDE .Styrstagsände .Mutter	2 2 5
3	89 47 913 89 26 743 89 26 768 89 20 183 89 20 191	LH	1)	X 1 1 1 1	KIT, BELLOWS TIE ROD .Bellows .Clamp .Cap	SATS, GUMMIBÄLG STYRSTAG .Balg .Klamma .Huv	2 2 5 5 5
4	89 44 738 89 26 750 89 26 776 89 20 183 89 24 169	RH	1)	X 1 1 1 1	KIT, BELLOWS TIE ROD .Bellows .Clamp .Lock nut	SATS, GUMMIBÄLG STYRSTAG .Balg .Klamma .Låsmutter	2 2 5 5 5
					REPAIR SETS, STEERING GEAR, SEE GROUP 1	REPARATIONSSATSER STYRVÄXEL, SE GROUP 6	

1. Not as separate spare part

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

5 GROUP INDEX

Front wheel suspension, steering device	1-L04
Steering device	1-L06
Complete sets	1-L10



Fjädringssystem, Hjul
Suspension, Wheels
Federung, Räder
Suspension, Roues
Suspensión, Ruedas

0050
0010
0020
0030
0040
0050
0060
0070
0080
0090
0100
0110
0120
0130
0140
0150
0160
0170
0180
0190
0200
0210
0220
0230
0240
0250
0260
0270
0280
0290
0300
0310
0320
0330
0340
0350
0360
0370
0380
0390
0400
0410
0420
0430
0440
0450
0460
0470
0480
0490
0500

2-A02

TABLE OF CONTENTS

Front suspension, wheels	7 : 3	2-A04
Rear suspension	7 : 5	2-A06
Rear axle	7 : 7	2-A08
Complete sets		
Suspension system, wheels	7 : 9	2-A10

INNEHÅLLSFÖRTECKNING

Främre fjädring, hjul	7 : 3	2-A04
Bakre fjädring	7 : 5	2-A06
Bakaxel	7 : 7	2-A08
Satser		
Fjädringssystem, hjul	7 : 9	2-A10

INHALTSVERZEICHNIS

Vorderradfederung, Räder	7 : 3	2-A04
Hinterer Federung	7 : 5	2-A06
Hinterachse	7 : 7	2-A08
Komplete Sätze		
Federung, räder	7 : 9	2-A10

TABLE DES MATIERES

Suspension AV, roues	7 : 3	2-A04
Suspension AR	7 : 5	2-A06
Essieu AR	7 : 7	2-A08
Jeux complets		
Suspension roues	7 : 9	2-A10

SUMARIO

Suspensión Del, ruedas	7 : 3	2-A04
Suspensión Tras	7 : 5	2-A06
Eje Tras	7 : 7	2-A08
Juegos completos		
Suspensión ruedas	7 : 9	2-A10

Fjädringssystem, hjul

Suspension system, wheels

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

7 GROUP INDEX




Front suspension, wheels	2-A04
Rear suspension	2-A06
Rear axle	2-A08
Complete sets	2-A10

2-A04

Front suspension, wheels

Främre fjädring, hjul

MASTER INDEX

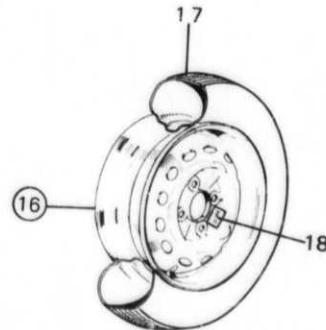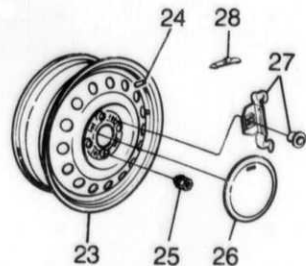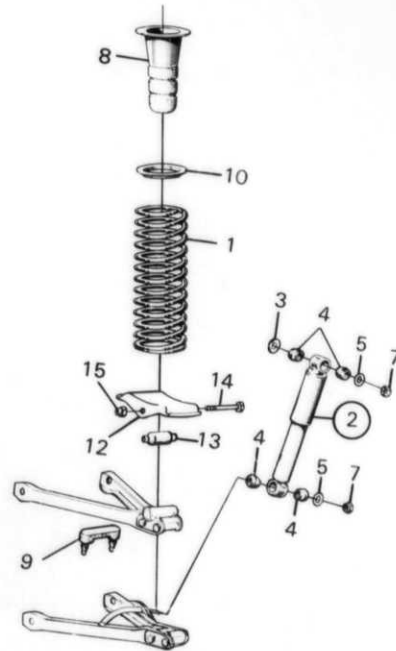

R 7782-90

Pos	Part No./Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning
0100	1	89 45 776 (8941486)	2	Spring	Fjäder
0010	2	89 93 271 4)	2	Kit, shock absorber	Sats, stötdämpare
0020		see page 7-009, 2-A10		assy	kpl
0030	2	89 93 495 5)	2	Kit, shock absorber	Sats, stötdämpare
0040		see page 7-009, 2-A10		assy	kpl
0050	3	71 09 341 S	2	Washer	Bricka
0060	4	89 32 840 S	4	Bushing	Bussning
0070	5	89 20 019 S	4	Washer	Bricka
0080	7	79 04 089 S	4	Nut	Mutter
0090	8	89 19 847 S	2	Rubber buffer	Gummibuffert
0100	8	91 01 882	2	Rubber buffer	Gummibuffert
0110	9	89 09 152	2	Rubber buffer	Gummibuffert
0120	10	89 19 862	2	Support ring	Stödtring
0130	12	89 19 870	2	Spring support	Fjäderstöd
0140	13	89 31 974	2	Bushing	Bussning
0150	14	79 03 743	2	Screw	Skruv
0160	15	79 40 463	2	Nut	Mutter
0170	16	89 91 598	1	Spare wheel assy	Reservhjul kpl
0180	17	89 90 160	1	Spare tyre	Reservdäck
0190	18	89 90 632	1	Label	Etikett
0200	23	89 89 618	4	Wheel (5")	Hjul (5")
0210	23	89 87 836	4	Wheel (5.5")	Hjul (5,5")
0220	23	89 87 836	4	Wheel (5.5")	Hjul (5,5")
0230	24	89 30 323	4	Valve	Ventil
0240	25	89 47 277	16	Nut	Mutter
0250	26	89 87 596	4	Hub cap	Hjulkapsel
0260	27	91 01 510	8	Kit, clip	Sats, clip
0270	28	89 48 143	X	Counter weight 10 g	Balanseringsvikt 10 g
0280	28	89 48 150	X	Counter weight 20 g	Balanseringsvikt 20 g
0290	28	89 17 395	X	Counter weight 30 g	Balanseringsvikt 30 g
0300	28	89 48 158	X	Counter weight 40 g	Balanseringsvikt 40 g
0310	28	89 48 176	X	Counter weight 50 g	Balanseringsvikt 50 g
0320	28	89 17 411	X	Counter weight 60 g	Balanseringsvikt 60 g
0330					

4. Ch. --G6000885
5. Ch. G6000886--

SAAB genuine parts
original reserved

SAAB 90 M85-87

1990-02

R7782 Page 07-003

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
7	GROUP INDEX	
	Front suspension, wheels	2-A04
	Rear suspension	2-A06
	Rear axle	2-A08
	Complete sets	2-A10


2-A06

Rear suspension

Bakre fjädring

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
7 GROUP INDEX		
6	Front suspension, wheels	2-A04
5	Rear suspension	2-A06
5	Rear axle	2-A08
5	Complete sets	2-A10

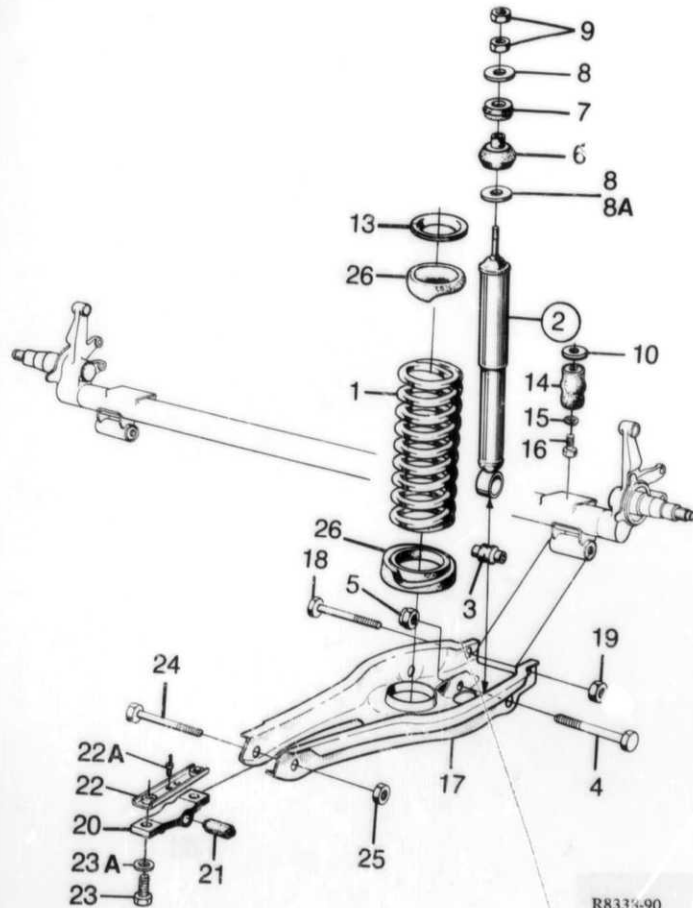

R833'9-90

Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/Anm	Description	Benämning
0150	1	89 32 857			2	Spring	Fjäder
0010	2	89 93 412		see page 7---000, 0-000	2	Kit, shock absorber	Sats, stötdämpare
0020	3	89 47 939			2	Bearing bushing	Lagerbussning
0030	4	89 38 466			2	Screw	Skruv
0040	5	80 73 546			2	Nut	Mutter
0050	6	89 39 423		LOWER	2	Bushing	Bussning
0060	7	89 85 962		- 1986 UPPER	2	Bushing	Bussning
0070	8	91 00 025		1987- UPPER	2	Bushing	Bussning
0080	8A	89 85 954		UPPER	2	Washer	Bricka
0090	9	89 48 226		LOWER	2	Washer	Bricka
0100	10	83 15 558			4	Nut	Mutter
0110	11	89 47 152			2	Spacer	Mellanlägg
0120	13	89 33 897			2	Spacer ring	Distansring
0130	14	89 22 445			2	Rubber buffer	Gummibuffert
0140	15	79 10 599			2	Washer	Bricka
0150	16	79 75 063			2	Screw	Skruv
0160	17	89 47 210			2	Spring link	Fjäderlänk
0170	18	80 84 410			2	Screw	Skruv
0180	19	80 73 546			2	Lock nut	Låsmutter
0190	20	89 47 269			2	Bearing, front	Lager, främre
0200	21	89 35 298			2	Bushing	Bussning
0210	22	89 89 899			2	Nut plate	Mutterplatta
0220	22A	79 75 717			2	Rivet	Nit
0230	23	89 90 079			4	Screw	Skruv
0240	23A	80 30 017			4	Washer	Bricka
0250	24	80 84 386			2	Screw	Skruv
0260	25	80 73 546			2	Nut	Mutter
0270	26	89 35 330			4	Spring support	Fjäderstöd
0280							

2-A08

Rear axle


Bakaxel

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

7 GROUP INDEX

Front suspension, wheels	2-A04
Rear suspension	2-A06
Rear axle	2-A08
Complete sets	2-A10

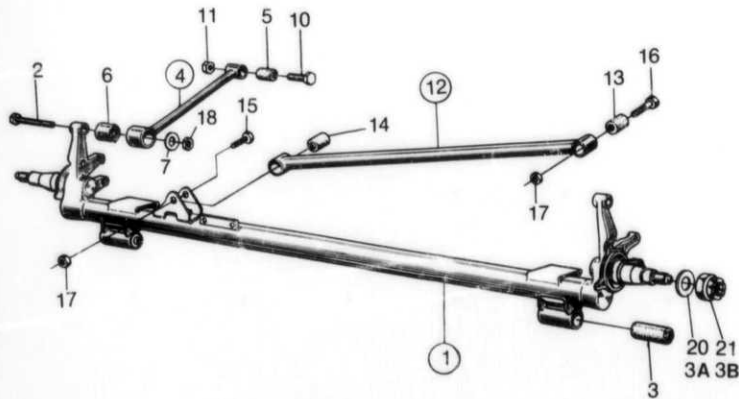

R 7210-90

Q200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	91 00 298		(8947335)	1	Rear axle assy	Bakaxel kpl	4
0030	2	89 28 046			2	„Screw	„Skruv	5
0040	3	89 35 306			2	„Bushing	„Bussning	3
0050	3A	89 46 477	3)		2	„Washer	„Bricka	5
0060	3B	89 64 710	3)		2	„Nut	„Mutter	3
0070	4	89 44 175			2	Link	Länk	3
0080	5	89 32 741			2	„Bushing	„Bussning	3
0090	6	89 08 675			2	„Bushing	„Bussning	3
0100	7	89 09 632			2	Washer	Bricka	5
0110	10	89 33 293			2	Screw	Skruv	5
0120	11	79 40 455			2	Nut	Mutter	3
0130	12	89 32 071			1	Cross bar	Tvärstag	5
0140	13	89 32 014			1	„Bushing	„Bussning	4
0150	14	89 30 307			1	„Bushing	„Bussning	4
0160	15	89 42 005			1	Screw	Skruv	5
0170	16	89 30 299			1	Screw	Skruv	5
0180	17	79 40 455			2	Nut	Mutter	3
0190	18	79 63 416			2	Nut	Mutter	3
0200	20	89 46 477	2)		2	Washer	Bricka	5
0210	21	89 21 785	2)		2	Nut	Mutter	3


2. Ch --F6009038
3. Ch F6009039--

SAAB genuine parts
original reserved

SAAB 90 M85-87

1990-02

R7210 Page 07-007

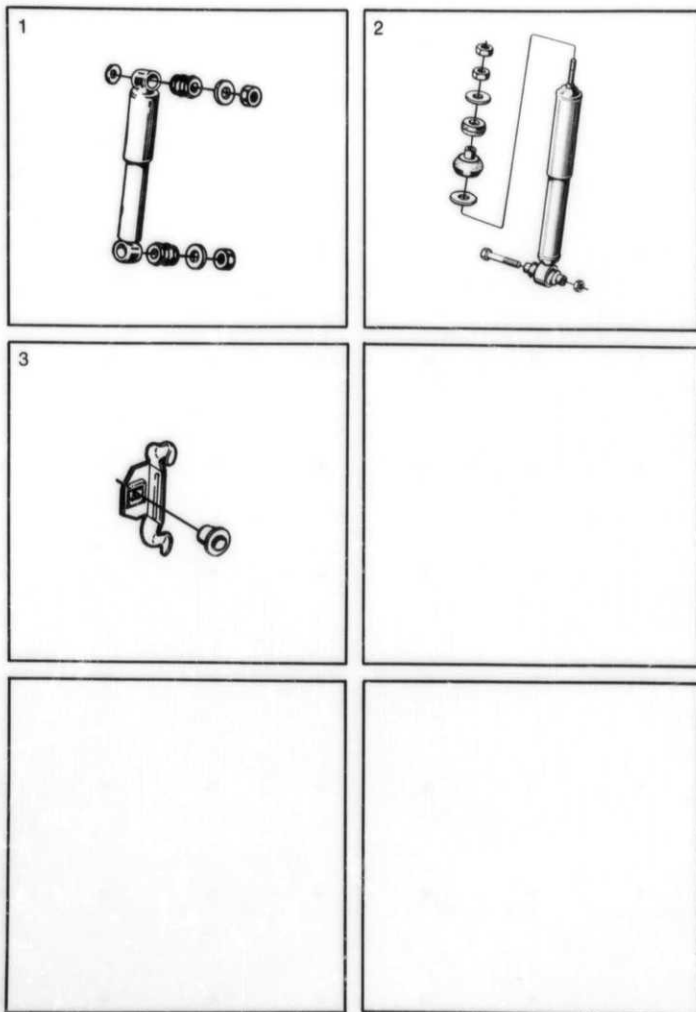

R 9278-90

2-A10

Complete sets

Suspension system, wheel

Satser


Fjädringssystem, hjul

1000	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0560	1	89 93 271		4)	X	KIT SHOCK ABSORBER	SATS STÖTDÄMPARE	1
0580				FRONT		FRÄMRE		1
0600		89 41 676		1)	1	.Shock absorber	.Stötdämpare	6
0620		89 20 019			2	.Washer	.Bricka	5
0640		71 09 341			1	.Washer	.Bricka	5
0660		79 04 089			2	.Nut	.Mutter	5
0680								
0681	1	89 93 495		5)	X	KIT SHOCK ABSORBER	SATS STÖTDÄMPARE	1
0682				FRONT		FRÄMRE		1
0683		89 88 412		1)	1	.Shock absorber	.Stötdämpare	6
0684		89 32 840			2	.Bushing	.Busning	5
0685		89 20 019			2	.Washer	.Bricka	5
0686		71 09 341			1	.Washer	.Bricka	5
0687		79 04 089			2	.Nut	.Mutter	5
0688								
1240	2	89 93 412			X	KIT SHOCK ABSORBER	SATS STÖTDÄMPARE	1
1260				REAR		BAKRE		1
1280		89 88 123		1)	1	.Shock absorber with	.Stötdämpare med	6
1300				bushing		busning		5
1320		89 38 466			1	.Screw	.Skruv	5
1340		80 73 546			1	.Nut	.Mutter	5
1360		89 39 423			1	.Bushing, lower	.Busning, nedre	1
1380		91 00 025			1	.Bushing, upper	.Busning, övre	1
1400		83 15 558			2	.Nut	.Mutter	5
1420		89 48 226			2	.Washer, lower	.Bricka, nedre	5
1440		89 85 954			1	.Washer, upper	.Bricka, övre	5
1460								
1470	3	91 01 510				KIT, CLIP	SATS, CLIP	2
1480		91 00 546		1)		.Clip	.Clip	2
1490		91 00 553		1)		.Sleeve	.Hylsa	2
1500								

1. Not as separate spare part
4. Ch. --G6000885
5. Ch. G6000886--

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
7 GROUP INDEX		
	Front suspension, wheels	2-A04
	Rear suspension	2-A06
	Rear axle	2-A08
	Complete sets	2-A10

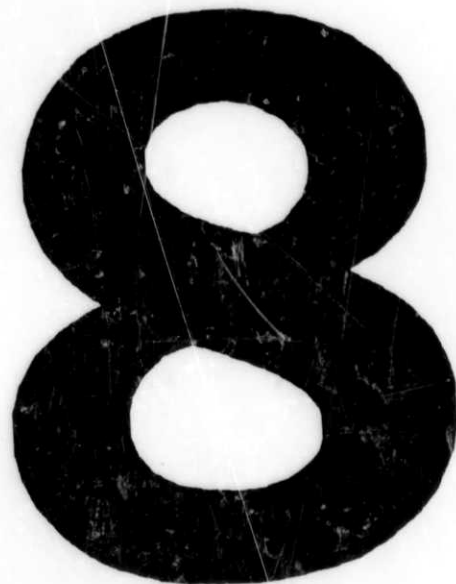

Kaross
Body
Karosserie
Carrosserie
Carrocería

Car body

Kaross

2-B02

0050
0080
0100
0120
0140
0150
0160
0200
0220
0240
0260
0320
0340
0360
0380
0400
0420
0440
0485
0500
0520
0540
0560
0585
0600
0640
0660
0680
0700
0720
0740
0780
0820
0840
0860
0880
0885
0890
0900
0902
0940
0960
1005
1006
1007
1040
1075
1080
1090
1180
1200
1220
1240
1250
1263
1280
1300
1340
1360
1390
1420
1425
1430

CONTENTS.

Main body:

Front- and center floor	8 : 7	2-B08
Rear floor	8 : 9	2-B10
Roof	8 : 11	2-B12
Sun roof	8 : 13	2-B14
Dash panel and front wheel housings	8 : 15	2-B16
Rear wheel housings	8 : 17	2-B18
Valances	8 : 19	2-B20
Door- and windshield pillars	8 : 21	2-B22

Instrument panel:

Instrument panel	8 : 23	2-B24
------------------	--------	-------

Hood, front, fenders:

Hood, hood hinges and hood lock	8 : 27	2-C04
Front member, grille	8 : 29	2-C06
Front fenders	8 : 31	2-C08

Doors, trunk lid:

Doors, hinges, window regulators, etc	8 : 33	2-C10
Door lock	8 : 35	2-C12
Trunk lid, hinges, lock	8 : 37	2-C14
Outside handle, lock cylinder	8 : 39	2-C16
Lock- and lock cylinder set	8 : 41	2-C18

External details, glass, sealings:

External details	8 : 43	2-C20
Glass and sealings	8 : 47	2-C24
Other sealings, mud guards	8 : 49	2-D02

Upholstery, interior equipment and touch-up paint

Insulation	8 : 53	2-D06
Door and side trim - 1985	8 : 57	2-D10
Door and side trim 1986-	8 : 59	2-D12
Covers - 1985	8 : 61	2-D14
Covers 1986	8 : 63	2-D16
Covers 1987	8 : 67	2-D20
Dash panel lining, wheel housing lining, carpets etc	8 : 71	2-D24
Headlining, pillar lining, etc	8 : 75	2-E04
Front seats Part 1	8 : 77	2-E06
Front seats Part 2	8 : 79	2-E08
Front seats Part 3	8 : 81	2-E10
Rear seats	8 : 83	2-E12
Cover, gear shift lever	8 : 85	2-E14
Other interior equipment	8 : 87	2-E16
Equipment luggage compartment	8 : 91	2-E20
Automatic safety belt, front	8 : 93	2-E22
Automatic safety belt, rear	8 : 95	2-E24
Touch-up paint	8 : 97	2-F02
Touch-up paint, two-components	8 : 99	2-F04
Touch-up paint, two coat type	8 : 103	2-F08

Heating and ventilation system:

Heater core, fan unit, front controls, etc	8 : 105	2-F10
--	---------	-------

Bumpers:

Bumper, front	8 : 111	2-F16
Bumper, rear	8 : 113	2-F18

Complete sets:

Car body	8 : 115	2-F20
----------	---------	-------

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system,	
Instruments	1-G02
4 Transmission	1-J02
5 Brakes	1-K02
6 Front assembly,	
Steering	1-L02
7 Suspension,	
Wheels	2-A02
8 Body	2-B02
9 Tool,	
Labels	2-G02
10 Numerical	
register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-B03

INNEHÅLLSFÖRTECKNING.

Karosseristomme:			
Främre och mittrre golv	8 : 7	2-B08	
Bakre golv	8 : 9	2-B10	
Tak	8 : 11	2-B12	
Softak	8 : 13	2-B14	
Torpedplåt och hjulhus, främre	8 : 15	2-B16	
Hjulhus, bakre	8 : 17	2-B18	
Sidoplatär	8 : 19	2-B20	
Dörr- och vindrute stolpar	8 : 21	2-B22	
Instrumentpanel:			
Instrumentpanel	8 : 23	2-B24	
Motorhuv, front, skärmar:			
Motorhuv, huvgångjärn och huvlås	8 : 27	2-C04	
Frontbalk, grill	8 : 29	2-C06	
Framskärmar	8 : 31	2-C08	
Dörrar, bagagerumslucka:			
Dörrar, gångjärn, fönsterhissar, etc	8 : 33	2-C10	
Dörrlås	8 : 35	2-C12	
Bagagerumslucka, gångjärn, lås	8 : 37	2-C14	
Yttre handtag, låscylinder	8 : 39	2-C16	
Lås- och låscylindersatser	8 : 41	2-C18	
Utvändiga detaljer, glas, tätningsslistor:			
Utvändiga detaljer	8 : 43	2-C20	
Glas och tätningsslistor	8 : 47	2-C24	
Övriga tätningsslistor, stänkskydd	8 : 49	2-D02	
Klädsel, invändig utrustning och bättringsfärg:			
Isolering	8 : 53	2-D06	
Dörr och sidklädsel - 1985	8 : 57	2-D10	
Dörr och sidklädsel 1986 -	8 : 59	2-D12	
Klädselpåsar - 1985	8 : 61	2-D14	
Klädselpåsar 1986	8 : 63	2-D16	
Klädselpåsar 1987	8 : 67	2-D20	
Torpedklädsel, hjulhusklädsel, mattor, etc	8 : 71	2-D24	
Takklädsel, stolpklädsel, etc	8 : 75	2-E04	
Stolar Del 1	8 : 77	2-E06	
Stolar Del 2	8 : 79	2-E08	
Stolar Del 3	8 : 81	2-E10	
Baksäte	8 : 83	2-E12	
Kåpa, växelspak	8 : 85	2-E14	
Övrig invändig utrustning	8 : 87	2-E16	
Utrustning bagagerum	8 : 91	2-E20	
Automatbälte, främre	8 : 93	2-E22	
Automatbälte, bakre	8 : 95	2-E24	
Bättringsfärg	8 : 97	2-F02	
Bättringsfärg, tvåkomponent	8 : 99	2-F04	
Bättringsfärg, tvåskiktstyp	8 : 103	2-F08	
Värme- och ventilationssystem:			
Värmeväxlare, fläkt, främre reglage etc	8 : 105	2-F10	
Stötfångare:			
Stötfångare, främre	8 : 111	2-F16	
Stötfångare, bakre	8 : 113	2-F18	
Satser:			
Kaross	8 : 115	2-F20	

2-B04

INHALTSVERZEICHNIS.

Karosseriekörper:			
Vordere und Mittlere Boden	8 : 7	2-B08	
Hintere Boden	8 : 9	2-B10	
Dach	8 : 11	2-B12	
Schiebedach	8 : 13	2-B14	
Stirnwand und Radkästen, vorn	8 : 15	2-B16	
Radkästen hinten	8 : 17	2-B18	
Seitenbleche	8 : 19	2-B20	
Tür- und Windschutzscheibepfosten	8 : 21	2-B22	
Armaturenhalt:			
Armatur, -rett	8 : 23	2-B24	
Motorhaube, Frontblech, Kotflügel:			
Motorhaube, Haubescharniere und Haubenverschluss	8 : 27	2-C04	
Frontbalken, Frontblech	8 : 29	2-C06	
Vordere Kotflügel	8 : 31	2-C08	
Türen, Kofferraumdeckel:			
Türen, scharniere, Fensterhebel, usw	8 : 33	2-C10	
Türschlösser	8 : 35	2-C12	
Kofferraumdeckel, Scharniere, Schlösser	8 : 37	2-C14	
Ausengriff, Schlosszylindersätze	8 : 39	2-C16	
Schlösser- und Schlosszylindersätze	8 : 41	2-C18	
Auswendige Teilen, Fenster, Dichtungsleisten:			
Auswendige Teilen	8 : 43	2-C20	
Fenster, Dichtungsleisten	8 : 47	2-C24	
Übrige Dichtungsleisten, Schmutzfänger	8 : 49	2-D02	
Innenverkleidung, Innenausstattung und Ausbesserungsfarbe:			
Isolierung	8 : 53	2-D06	
Türen und seitenverkleidung - 1985	8 : 57	2-D10	
Türen und seitenverkleidung 1986 -	8 : 59	2-D12	
Bezüge - 1985	8 : 61	2-D14	
Bezüge 1986	8 : 63	2-D16	
Bezüge 1987	8 : 67	2-D20	
Stirnwandverkleidung, Radkästenverkleidung, Matten, usw	8 : 71	2-D24	
Himmel- und Türpfostenverkleidung, usw	8 : 75	2-E04	
Vordersitze Teil 1	8 : 77	2-E06	
Vordersitze Teil 2	8 : 79	2-E08	
Vordersitze Teil 3	8 : 81	2-E10	
Rücksitz	8 : 83	2-E12	
Abdeckung, schalthel	8 : 85	2-E14	
Übrige Innenausstattung	8 : 87	2-E16	
Avrüstung Gepäckraum	8 : 91	2-E20	
Automatischer Gurt, vordere	8 : 93	2-E22	
Automatischer Gurt, hintere	8 : 95	2-E24	
Ausbesserungsfarbe	8 : 97	2-F02	
Ausbesserungsfarbe, Zweikomponente	8 : 99	2-F04	
Ausbesserungsfarbe, Zweischichttyp	8 : 103	2-F08	
Heizungs und Frischluftsystem:			
Heizelement, Lüfter, vordere Regulierung, usw	8 : 105	2-F10	
Stosstange:			
Stosstange, vordere	8 : 111	2-F16	
Stosstange, hintere	8 : 113	2-F18	
Komplette sätze:			
Karosserie	8 : 115	2-F20	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-B05

TABLE DES MATIERES.

Corps de carrosserie:

Plancher av et ar	8 : 7	2-B08
Plancher ar	8 : 9	2-B10
Pavillon	8 : 11	2-B12
Toit ouvrant	8 : 13	2-B14
Tablier et rotondes de roue, AV	8 : 15	2-B16
Rotondes de roue, AR	8 : 17	2-B18
Tôles latérales	8 : 19	2-B20
Montants de porte et de parebrises	8 : 21	2-B22

Panneau d'instruments:

Panneau d'instruments	8 : 23	2-B24
-----------------------	--------	-------

Capot, tôle frontale, ailes:

Capot, charnières de de capot et verrouillage de capot	8 : 27	2-C04
Longeron AV grille	8 : 29	2-C06
Ailes AV	8 : 31	2-C08

Portières, couvercle de coffre:

Portières, charnières, lève-vitres, etc	8 : 33	2-C10
Serrures de porte	8 : 35	2-C12
Couvercle de coffre, charnières, serrure	8 : 37	2-C14
Poignées, extérieures, barillet de serrure	8 : 39	2-C16
Serrures et barillet de serrure	8 : 41	2-C18

Eléments extérieurs, glaces, joints:

Eléments extérieurs	8 : 43	2-C20
Glaces et joints	8 : 47	2-C24
Autres joints, bavettes	8 : 49	2-D02

Garnitures, équipement intérieur et peinture de retouche:

Isolément	8 : 53	2-D06
Portes et garnitures intérieures - 1985	8 : 57	2-D10
Portes et garnitures intérieures 1986-	8 : 59	2-D12
Housses de siège - 1985	8 : 61	2-D14
Housses de siège 1986	8 : 63	2-D16
Housses de siège 1987	8 : 67	2-D20
Garnitures du tablier, de rotondes de roue, tapis, etc	8 : 71	2-D24
Garnitures du toit, des montants, etc	8 : 75	2-E04
Sièges AV 1ère partie	8 : 77	2-E06
Sièges AV 2ème partie	8 : 79	2-E08
Sièges AV 3ème partie	8 : 81	2-E10
Banquette AR	8 : 83	2-E12
Carter de levier de vitesses	8 : 85	2-E14
Autre équipement intérieur	8 : 87	2-E16
Compartment équipement	8 : 91	2-E20
Ceinture automatique, AV	8 : 93	2-E22
Ceinture automatique, AR	8 : 95	2-E24
Peinture de retouche	8 : 97	2-F02
Peinture de retouche, deux composants	8 : 99	2-F04
Peinture de retouche, type bicouche	8 : 103	2-F08

Système de chauffage et d'aération:

Echangeur de chaleur, ventilateur de la soufflerie, commandes au tableau de bord, etc	8 : 105	2-F10
---	---------	-------

Pare-chocs:

Pare-chocs, AV	8 : 111	2-F16
Pare-chocs, AR	8 : 113	2-F18

Jeux complets:

Carrosserie	8 : 115	2-F20
-------------	---------	-------

2-B06

SUMARIO.

Cuerpo de la carrocería:

Piso del. y tras	8 : 7	2-B08
Piso tras	8 : 9	2-B10
Techo	8 : 11	2-B12
Techo corredizo	8 : 13	2-B14
Salpicadero y huecos de rueda, Del	8 : 15	2-B16
Huecos de rueda, Tras	8 : 17	2-B18
Placas laterales	8 : 19	2-B20
Montantes de puertas y de parabrisas	8 : 21	2-B22

Tablero de instrumentos:

Tablero de instrumentos	8 : 23	2-B24
-------------------------	--------	-------

Capot, plancha frontal, guardabarros:

Capot, bisagras de capot y cerradura de capot	8 : 27	2-C04
Viga Del, parilla	8 : 29	2-C06
Guardabarros, Del	8 : 31	2-C08

Puertas, tapa de cofre:

Puertas, bisagras, levancristales, etc	8 : 33	2-C10
Cerraduras de puerta	8 : 35	2-C12
Tapa de cofre, bisagras, cerradura	8 : 37	2-C14
Empuñaduras exteriores, cilindros de cerradura	8 : 39	2-C16
Cerraduras y cilindro de cerradura	8 : 41	2-C18

Detalles exteriores, vidrios, juntas:

Detalles exteriores	8 : 43	2-C20
Vidrios y juntas	8 : 47	2-C24
Otras juntas, faldones	8 : 49	2-D02

Tapicería, equipo interior y pintura de retoque:

Aislamiento	8 : 53	2-D06
Puertas y tapicería - 1985	8 : 57	2-D10
Puertas y tapicería 1986-	8 : 59	2-D12
Fundas de asiento - 1985	8 : 61	2-D14
Fundas de asiento 1986	8 : 63	2-D16
Fundas de asiento 1987	8 : 67	2-D20
Tapicería, del salpicadero, de huecos de rueda, alfombras etc	8 : 71	2-D24
Tapicería del techo, de los montantes, etc	8 : 75	2-E04
Asientos Del 1a parte	8 : 77	2-E06
Asientos Del 2a parte	8 : 79	2-E08
Asientos Del 3a parte	8 : 81	2-E10
Asiento Tras	8 : 83	2-E12
Tapa de palanca de cambios	8 : 85	2-E14
Otro equipo interior	8 : 87	2-E16
Compartimento para equipo	8 : 91	2-E20
Cinturón automático, del	8 : 93	2-E22
Cinturón automático, tras	8 : 95	2-E24
Pintura de retoque	8 : 97	2-F02
Pintura de retoque, tipo dos componentes	8 : 99	2-F04
Pintura de retoque, tipo de dos capas	8 : 103	2-F08

Sistema de calefacción:

Cambiador de calor, ventilador de la calefacción, mandos del tablero de instrumentos, etc	8 : 105	2-F10
---	---------	-------

Parachoques:

Parachoques, del	8 : 111	2-F16
Parachoques, tras	8 : 113	2-F18

Juegos completos:

Carrocería	8 : 115	2-F20
------------	---------	-------

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system, Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly, Steering	1-L02
7 Suspension, Wheels	2-A02
8 Body	2-B02
9 Tool, Labels	2-G02
10 Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-B08

Main body

Front and center floor

Karosseristomme


Främre och mitre golv

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

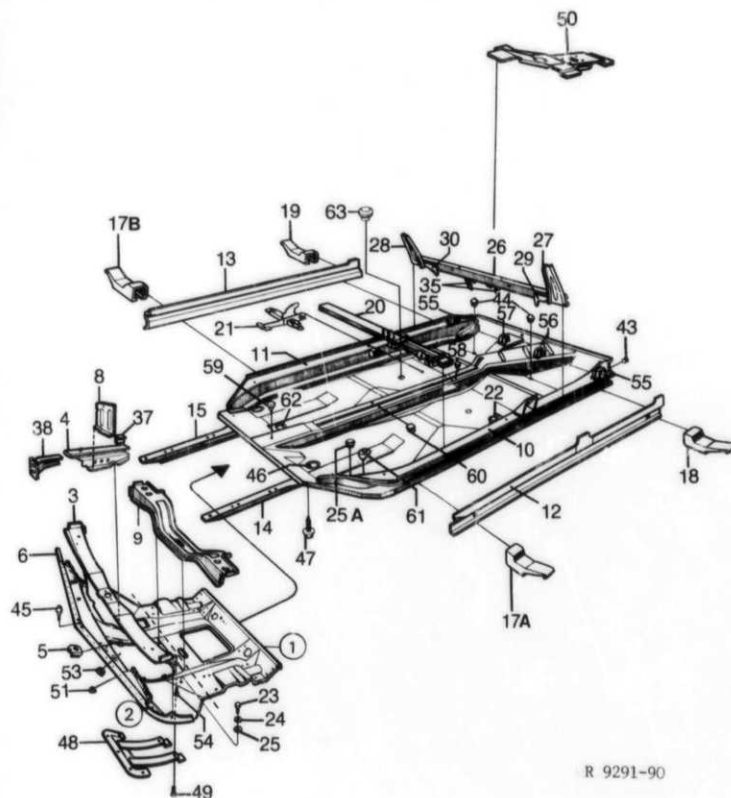

R 9291-90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	69 14 410		3) Body	1	Body	Karosskrov	6
0040	69 14 436		3)RHD	1	Body	Karosskrov	6
0180	76 12 153		3)FRONT PART	1	Body	Kaross	6
0201	92 31 606		FRONT	1	Floor assy	Golv kpl	6
0241	92 31 549		FRONT PART	1	„Floor	„Golv	4
0261	92 31 531		FRONT	1	„Engine member	„Motorbalk	5
0280	82 18 679		LH	1	„Bumper member	„Stötfångarbalk	4
0300	82 18 687		RH	1	„Bumper member	„Stötfångarbalk	4
0320	79 35 802			9	„Caged nut	„Korgmutter	5
0340	82 09 975			1	„Reinforcement	„Förstärkning	4
0360	82 18 612			1	Shelf bracket	Hyllstöd	5
0380	76 00 844		(82 10 825)	1	Floor member	Golvbalk	4
0480	82 83 541		INNER PART, LH	1	Scuff plate	Tröskel	6
0600	82 83 558		INNER PART, RH	1	Scuff plate	Tröskel	6
0640	76 00 745		OUTER PART, LH (8201790)	1	Scuff plate	Tröskel	6
0760	76 00 752		OUTER PART, RH (8201808)	1	Scuff plate	Tröskel	6
0880	69 14 154		LH	1	Reinforcement member	Förstärkningsbalk	6
0920	69 14 162		RH	1	Reinforcement member	Förstärkningsbalk	6
0986	92 90 776		FRONT, LH	1	Jack support	Domkraftfäste	6
0988	92 90 784		FRONT, RH	1	Jack support	Domkraftfäste	6
1010	92 90 750		REAR, LH	1	Jack support	Domkraftfäste	6
1040	92 90 768		REAR, RH	1	Jack support	Domkraftfäste	6
1830	69 17 934		FRONT	1	Seat member	Stolbalk	6
1940	92 89 166			1	Segment, handbrake	Segment, handbroms	6
2040	92 23 967		OUTER	2	Bracket	Konsol	6
2180	79 03 313			1	Screw	Skruv	5
2200	79 10 565			1	Washer	Bricka	5
2220	79 16 513			1	Washer	Bricka	5
2240	82 06 096			2	Rubber plug	Gummiplugg	5
2260	82 09 983			1	Seat member	Sitsbalk	6
2320	82 09 991		LH	1	Support plate	Stödplåt	6
2360	82 10 007		RH	1	Support plate	Stödplåt	6
2420	82 83 517		OUTER, LH	1	Attachment plate	Fästplåt	6
2500	82 83 525		OUTER, RH	1	Attachment plate	Fästplåt	6
2530	82 83 947			2	Stay	Stag	6
2660	82 18 596		LH	1	Reinforcement	Förstärkning	6
2680	82 18 604		RH	1	Reinforcement	Förstärkning	6
2741	82 86 320		INNER, LH	1	Bracket, bumper	Fäste, stötfångare	3
2743	82 86 338		INNER, RH	1	Bracket, bumper	Fäste, stötfångare	3
2920	71 63 074			4	Rubber plug	Gummiplugg	5
2940	82 04 760			2	Rubber plug	Gummiplugg	5
2980	70 35 801			3	Rubber plug	Gummiplugg	3
3000	73 13 752		-1986	4	Cover	Lock	4
3005	73 13 752		1987-	2	Cover	Lock	4
3010	82 67 049		-1986	2	Screw	Skruv	5
3011	79 76 921		1987-	2	Screw	Skruv	5
3200	76 00 877		(82 16 954)	1	Lid	Lucka	4
3240	79 68 589			7	Screw	Skruv	5
3260	92 31 820			1	Locking clamp	Låsbygel	6
3400	71 63 074		RHD	1	Rubber plug	Gummiplugg	5
3460	71 55 708			1	Rubber plug	Gummiplugg	5
3480	79 03 164			2	Screw	Skruv	5
3500	82 05 452			2	Support, seat cushion	Stöd, sittdyna	6
3520	82 05 981		LH	1	Support, seat cushion	Stöd, sittdyna	5
3560	82 05 999		RH	1	Support, seat cushion	Stöd, sittdyna	5
3800	82 67 296			2	Rubber plug	Gummiplugg	5
3820	82 39 162			1	Rubber plug	Gummiplugg	5
3840	82 39 170			2	Rubber plug	Gummiplugg	5
3940	82 66 876			2	Rubber plug	Gummiplugg	5
3960	69 30 341		1987-	2	Cover	Lock	5
3980	70 38 342		1986-	2	Plug	Plugg	5

3. Only latest design. State car colour code

2-B10

Main body
Rear floor

Karosseristomme
Bakre golv

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
8 GROUP INDEX		
5	Main body	2-B08
6	Instrument panel	2-E24
6	Hood, front, fenders	2-C04
5	Door, trunk lid	2-C10
5	External details,	
	glass, sealings	2-C20
5	Upholstery, interior	
	equipment and	
	touch-up paint	2-D06
6	Heating and	
	ventilation system	2-F10
6	Bumpers	2-F16
6	Complete sets	2-F20

0125	Pos	Part No./Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0020	1	92 21 375			1	Floor, rear, assy	Bakre golv kpl	6
0030	2	69 27 289			1	Jack support	Domkraftstöd	6
0040	3	92 21 383			1	Bracket	Fäste, tvärstag	6
0050	4	82 86 387			1	Hook	Upphångningskrok	6
0055	4A	82 25 872			2	Bracket, fuel tank	Fäste, bränsletank	6
0063	5	92 32 640			1	Cross member	Tvårbalk	6
0085	6	69 10 582			1	Panel assy	Plåt kpl	5
0100	7	82 79 226		REAR	1	Bracket	Fäste	6
0110	7	92 21 664		LH (76 01 651)	1	Bracket	Fäste	6
0120	8	76 01 495		RH (76 01 644)	1	Threshold support	Tröskelhållare	5
0130	8A	92 21 656		REAR	1	Bottom panel	Nedre panel	5
0140	9	92 34 287		REAR	3	Cross member	Tvårbalk	5
0150	10	92 30 335			1	Support plate	Stödplåt	5
0160	11	76 01 479		(8250391)	1	Joint plate	Skarvplåt	5
0170	12	76 01 701		LH (82 52 918)	1	Support plate	Stödplåt	6
0180	12	76 01 719		RH (82 53 262)	1	Support plate	Stödplåt	6
0200	13	82 89 993		LH	1	Support plate	Stödplåt	6
0210	14	79 72 474			3	Blind rivet	Blindnit	3
0220	15	76 01 735		(8253718)	2	Bracket	Fäste	6
0230	16	84 59 513			3	Rubber plug	Gummiplugg	5
0240	17	82 79 457			1	Support	Stag	6
0250	18	92 28 339		-1986, CENTRE	1	Support member	Stödbalk	6
0255	18	69 57 435		1987-, CENTRE	1	Support member	Stödbalk	6
0270	19	82 06 096		(8237554)	5	Rubber plug	Gummiplugg	5
0280	20	71 63 066			11	Rubber plug	Gummiplugg	5
0290	21	82 04 760			2	Rubber plug	Gummiplugg	5
0300	22	71 16 452			3	Rubber plug	Gummiplugg	5
0310	23	79 65 635			2	Nut	Mutter	5
0320	24	82 28 702			1	Seal cover	Tätningstock	6
0330	25	71 62 308			1	Rubber plug	Gummiplugg	5
0340	26	82 09 876		LH	1	Spring support	Fjäderstöd	6
0350	26	82 08 884		RH	1	Spring support	Fjäderstöd	6
0360	27	82 62 974			1	Protective strip	Skyddslist	6
0390	29	92 35 151			1	Rear panel	Bakstam	5
0400	30	92 20 849			1	Support	Stöd	5
0410	31	92 31 804			2	Sealing	Tätning	6
0420	32	92 31 812			2	Washer	Bricka	6
0430	33	92 23 025			1	Seal strip	Tätningslist	6
0440	34	92 23 066			1	Seal strip	Tätningslist	6
0450	35	92 23 074			4	Screw	Skruv	5
0460	36	92 20 880			4	Blind rivet	Blindnit	5
0470	37	92 23 082			4	Nut, blind rivet	Mutter, blindnit	5
0480	38	82 86 296			2	Screw	Skruv	5
0490	39	80 59 578			4	Screw	Skruv	5
0500	40	79 71 658			8	Nut	Mutter	5
0510	41	92 23 991			2	Bushing	Bussning	5
0520	42	92 23 686			1	Buffer	Buffert	5
0542	44	69 19 492			1	Bracket	Hållare	6
0550	45	92 20 971		LH	1	Corner plate	Hörnplåt	5
0560	45	92 20 989		RH	1	Corner plate	Hörnplåt	5
0570	46	92 86 931		LH	1	Stay	Stag	6
0580	46	92 86 949		RH	1	Stay	Stag	6
0600	48	92 92 699			2	Screw	Skruv	5
0610	49	92 28 131			1	Bracket, warning	Hållare, varnings-	6
0611						triangel	triangel	6

R 6264-90

2-B12

Main body
Roof

Karosseristomme
Tak


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

0150	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0025	1	82 74 425			1	Roof panel	Takplåt	5
0040	2	76 00 885		FRONT, 1985 (82 19 933)	1	Roof member	Takbalk	5
0050	2	69 26 307		FRONT, 1986-	1	Roof member	Takbalk	5
0060	3	92 92 442		REAR	1	Roof member	Takbalk	6
0100	5	76 00 729		LH (82 01 774)	1	Water channel	Takränna	5
0120	5	76 00 737		RH (82 01 782)	1	Water channel	Takränna	5
0180	6	82 09 926		LH	1	Side member	Sidobalk	6
0240	6	82 09 934		RH	1	Side member	Sidobalk	6
0460	7	82 34 957			1	Windshield member	Vindrutebalk kpl	6
0480						assy.		
0540	7	82 34 965		RHD	1	Windshield member	Vindrutebalk kpl	6
0560						assy		
0570	7B	92 26 416		LH	1	Support angle	Stödvinkel	5
0571	7B	92 26 424		RH	1	Support angle	Stödvinkel	5
0580	8	82 09 280			1	Support angle	Stödvinkel	5
0620	10	82 09 967			4	Bracket, curve handle	Fäste, kurvhandtag	5
0640	11	82 28 843			1	Air deflector	Skärmsplåt	5
0660	12	82 33 686			1	Seal strip	Tätningsslist	5
0680	13	79 61 691			2	Pop rivet	Popnit	5

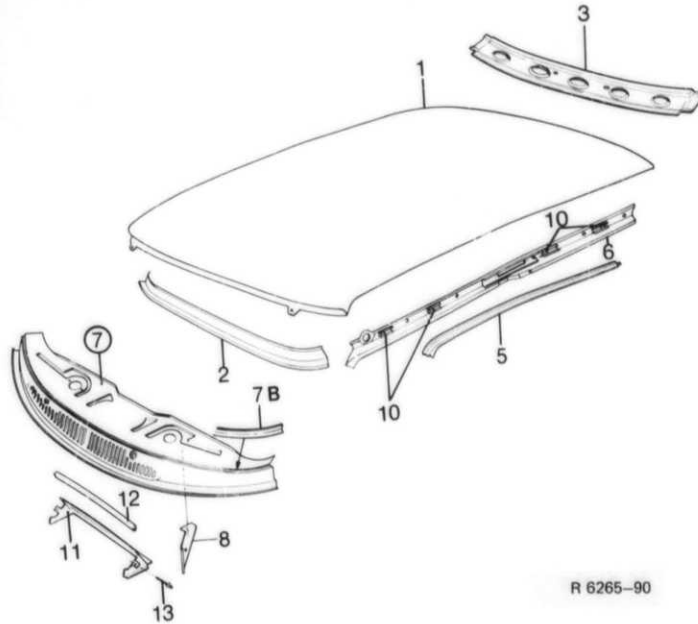


R 6265-90

2-B14

Main body
Sun roof

Karosseristomme
Soltak

MASTER INDEX

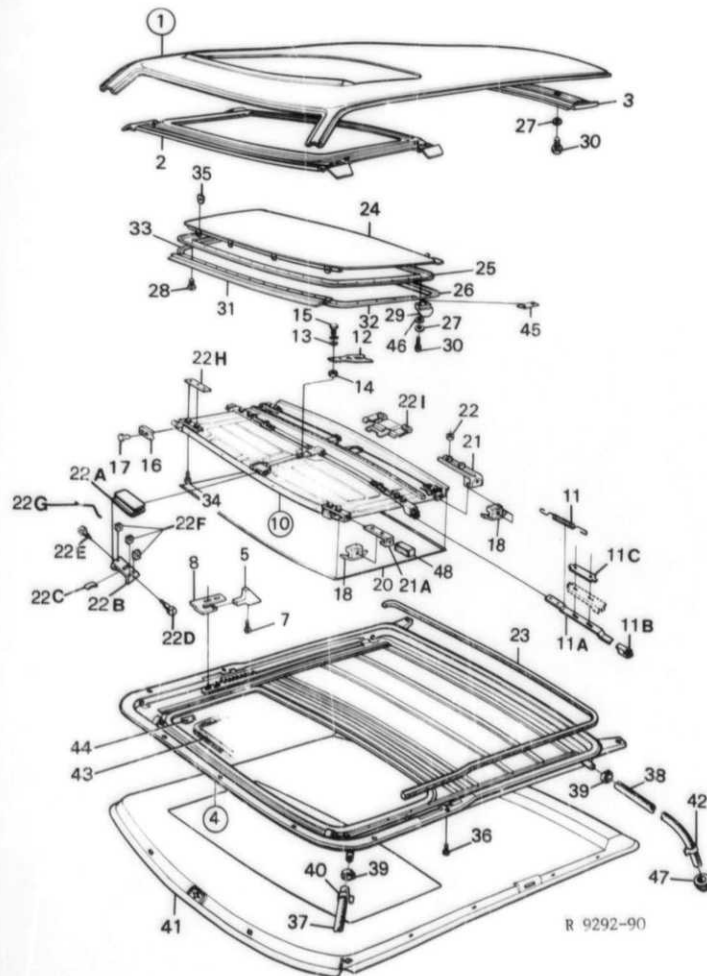

Qty/Anst	Description	Benämning
1	Roof panel assy.	Takplåt kpl.
1	Frame	Ram
1	Rib	Ram kpl.
1	Frame assy.	Glidlåck
2	Sliding block	Skruv
2	Screw	Fjäder
1	Spring	Fjäder
1	Panel assy.	Panel kpl
2	Spring	Spjarr
2	Catch	Glidlås
2	Slide cam lock	Låsplåt
2	Lock plate	Låsarm
1	Lock arm	Bricka
6	Washer	Nut
2	Nut	Skruv
2	Screw	Stop
2	Stop	Nit
4	Rivet	Glidkam
4	Slide cam	Klädsel
1	Upholstery	Glidstöd
2	Sliding support	Glidstöd
2	Sliding support	Glidstöd
2	Sliding support	Glidstöd
2	Sliding support	Mutter
4	Nut	Kåpa
1	Cover	Handtag
1	Handle	Fjäder
1	Spring	Skruv
2	Screw	Skruv
1	Screw	Nut
3	Nut	Klammer
2	Clamp	Washer
2	Spring	Fjäder
1	Seal strip	Tätningsslist
1	Lid	Lucka
1	Seal strip	Tätningsslist
1	Seal retainer	Hållarlist
4	Washer	Bricka
38	Screw	Skruv
2	Bracket	Konsol
4	Screw	Skruv
1	Seal retainer	Hållarlist
1	Seal retainer	Hållarlist
1	Seal retainer	Hållarlist
4	Screw	Skruv
4	Spacer	Mellanlägg
9	Screw	Skruv
2	Drain tube	Dräneringsslang
2	Drain tube	Dräneringsslang
4	Clamp	Klamma
2	Clip	Clip
1	Headlining	Takklädsel
2	Clamp	Klamma
1	Strip	List
4	Clip	Clip
X	Spacer	Mellanlägg
X	Washer	Bricka
2	Bushing	Bussning
2	Damper	Dämpare

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
Main body		
Instrument panel		
Hood, front, fenders		
Doors, trunk lid		
External details, glass, sealings		
Upholstery, interior equipment and touch-up paint		
Heating and ventilation system		
Bumpers		
Complete sets		

2-B16

Main body

**Dash panel and front,
wheel housing**

Karosseristomme


**Torpedplåt och hjulhus,
främre**

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
Main body		
	Instrument panel	2-B08
	Hood, front, fenders	2-B24
	Doors, trunk lid	2-C04
	External details, glass, sealings	2-C10
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

Q300	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0050	1	92 34 808			LOWER	1	Dash panel	Torpedplåt	6
0130	1	92 34 873			LOWER, RHD	1	Dash panel	Torpedplåt	6
0162	2	92 34 816			UPPER	1	Dash panel	Torpedplåt	6
0210	2	92 34 881			UPPER, RHD	1	Dash panel	Torpedplåt	6
0320	4	76 02 089			(8229221)	1	Support, steering column tube	Stöd, rattstöd	6
0340									
0400	4	82 29 239			RHD	1	Support, steering column tube	Stöd, rattstöd	6
0420									
0680	7	69 12 612			LH	1	Wheel housing, inner	Hjulhus, inre	5
0720	8	69 12 620			RH	1	Wheel housing, inner	Hjulhus, inre	5
0741	9	82 86 148				1	Bracket, air cleaner	Hållare, luftrenare	5
0840	10	76 01 040			LH (82 27 050)	1	Bearing bracket	Lagerkonsol	5
0860	10	76 01 057			RH (82 27 068)	1	Bearing bracket	Lagerkonsol	5
0900	11	82 37 851				2	Pin	Tap	5
0922	12	69 12 638			LH	1	Bracket	Konsol	5
0942	13	69 12 646			RH	1	Bracket	Konsol	5
0960	14	52 21 053			LH	1	Spring support	Fjäderstöd	5
0980	15	82 21 061			RH	1	Spring support	Fjäderstöd	5
1000	16	82 00 735			LOWER	2	Stop	Stop	4
1060	17	76 01 073			OUTER, LH (82 28 298)	1	Wheel housing	Hjulhus	3
1100	19	82 11 484				1	Bracket	Konsol	5
1160	18	76 01 081			OUTER, RH (82 28 306)	1	Wheel housing	Hjulhus	3
1200	20	82 10 924				1	Bracket	Konsol	5
1220	21	82 07 771			LH	1	Support	Stötta	5
1240	22	82 07 789			RH	1	Support	Stötta	5
1260	30	82 10 106			R.H. ONLY	1	Bracket side support	Konsol, sidostöd	5
1280	31	82 09 330			LH	1	Protective plate	Skyddsplåt	5
1300	32	82 09 348			RH	1	Protective plate	Skyddsplåt	5
1320	33	82 06 740				2	Reinforcement	Förstärkning	5
1340	34	76 00 802			(82 03 317)	1	Battery shelf	Batterihylla	5
1460	45	76 00 976			(82 24 453)	2	Support plate	Stödplåt	5
1480	46	82 00 412			REAR	2	Nut washer	Mutterbricka	4
1500	47	82 00 438			FRONT	2	Nut washer	Mutterbricka	4
1520	48	82 06 500				1	Support plate	Stödplåt	5
1540	49	82 11 377				1	Grommet, hood con- trol	Genomföring, huvreg- lage	5
1560									
1580	49	76 01 115			(8228900)	1	Grommet, hood con- trol	Genomföring, huvreg- lage	5
1600									
1620	50	71 63 074				1	Rubber plug	Gummiplugg	5
1640	51	84 34 078				2	Sleeve	Hylsa	5
1660	52	82 04 760				1	Rubber plug	Gummiplugg	5
1680	53	89 28 699				1	Rubber plug	Gummiplugg	6
1700	54	89 28 707				2	Rubber plug	Gummiplugg	5
1720	55	76 00 893			LOWER (82 21 988)	1	Bracket, foot rest	Hållare, fotstöd	6
1760	56	82 10 023			UPPER	1	Bracket, foot rest	Hållare, fotstöd	6
1941	57	82 87 435			OUTER, LH	1	Bracket, bumper	Fäste, stötfångare	3
1943	57	82 87 443			OUTER, RH	1	Bracket, bumper	Fäste, stötfångare	3
1960	58	84 59 497				2	Rubber plug	Gummiplugg	5
1980	59	85 07 873				2	Rubber plug	Gummiplugg	5
2040	61	82 09 835				1	Reinforcement	Förstärkning	6
2060	62	82 27 779			RHD	1	Bracket, clutch cy- linder	Konsol, kopplingscy- linder	5
2080									
2100	63	70 35 801				3	Rubber plug	Gummiplugg	3
2200	67	82 83 707				1	Cover clutch cylinder	Kåpa, koppl. cyl.	6
2220	68	82 83 723				1	Bracket, container	Fäste, spolärbehåll.	6
2240	69	92 34 782				1	Fastener	Fästplåt	5
2260	70	92 34 790				1	Fastener	Fästplåt	5

R 6267-90

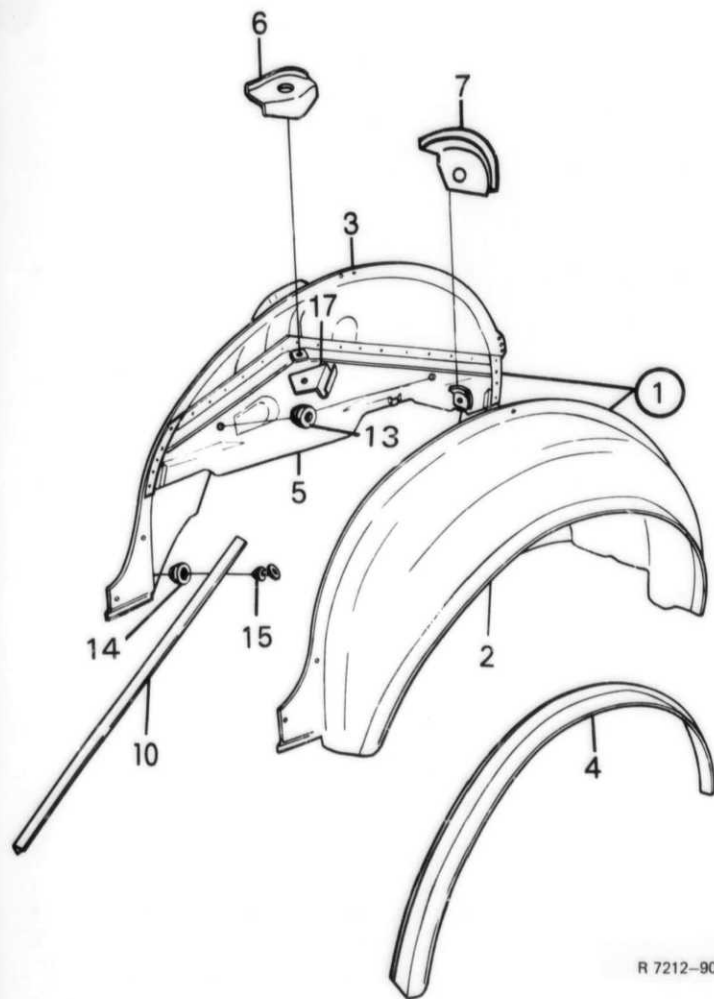

R 7212-90

2-B18

Main body
Rear wheel housing

Karosseristomme
Hjulhus, bakre


0350	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0081	1	82 72 197		REAR, LH	1	Wheel housing assy	Hjulhus kpl	5
0083	1	82 72 205		REAR, RH	1	Wheel housing assy	Hjulhus kpl	5
0161	2	82 74 631		OUTER, LH	1	Wheel housing plate	Hjulhusplåt	5
0163	2	82 74 649		OUTER, RH	1	Wheel housing plate	Hjulhusplåt	5
0170	3	69 10 806		INNER, LH	1	Wheel housing plate	Hjulhusplåt	5
0172	3	69 10 814		INNER, RH	1	Wheel housing plate	Hjulhusplåt	5
0200	4	78 74 159		LH	1	Wheel housing edge	Hjulhuskant	5
0205	4	78 74 167		RH	1	Wheel housing edge	Hjulhuskant	5
0241	5	82 74 797		LH	1	Wheel housing bracket	Hjulhuskonsol	5
0243	5	82 74 805		RH	1	Wheel housing bracket	Hjulhuskonsol	5
0250	6	92 86 253		LH	1	Reinforcement	Förstärkning	5
0251	6	92 86 261		RH	1	Reinforcement	Förstärkning	5
0260	7	92 81 973		LH	1	Bracket	Konsol	5
0260	7	92 81 981		RH	1	Bracket	Konsol	5
0620	10	92 28 271		(82 1866 1)	2	Stay	Stag	5
0650	13	84 59 489		-	2	Rubber plug	Gummiplugg	5
0680	14	84 59 497		- 1985	2	Rubber plug	Gummiplugg	5
0685	14	70 38 342		1986-	2	Rubber plug	Gummiplugg	5
0700	15	85 07 873			2	Rubber plug	Gummiplugg	5

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

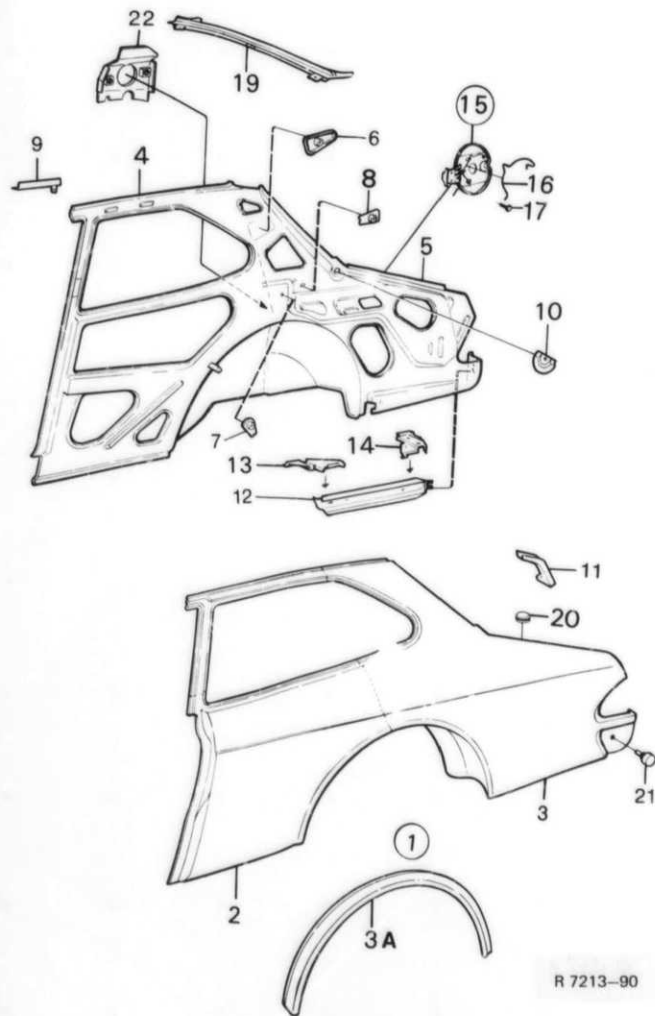

R 7213-90

2-B20


Main body
Valences

Karosseristomme
Sidoplåtar

0400	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 92 459		OUTER, LH	1	Valance assy	Sidoplåt kpl	4
0060	1	92 92 467		OUTER, RH	1	Valance assy	Sidoplåt kpl	4
0100	2	92 92 475		FRONT PART, LH	1	Valance	Sidoplåt	4
0140	2	92 92 483		FRONT PART, RH	1	Valance	Sidoplåt	4
0180	3	92 92 491		REAR PART, LH	1	Valance	Sidoplåt	4
0220	3	92 92 509		REAR PART, RH	1	Valance	Sidoplåt	4
0250	3A	78 74 118			1	Fender edge	Skärmkant	3
0260	4	92 92 517		FRONT PART, LH	1	Valance inner	Sidoplåt inre	6
0300	4	92 92 525		FRONT PART, RH	1	Valance inner	Sidoplåt inre	6
0340	5	92 92 533		REAR PART, LH	1	Valance inner	Sidoplåt inre	6
0380	5	92 92 541		REAR PART, RH	1	Valance inner	Sidoplåt inre	6
0420	6	92 20 997			2	Bracket	Fäste	5
0440	7	82 60 218		LH	1	Bracket	Fäste	6
0460	7	82 60 226		RH	1	Bracket	Fäste	6
0480	8	82 60 234		LH	2	Bracket	Fäste	6
0500	8	82 60 242		RH	2	Bracket	Fäste	6
0520	9	92 22 670		LH	1	Bracket	Fäste	6
0540	9	92 22 688		RH	1	Bracket	Konsol	6
0560	10	92 22 696		LH	1	Bracket, hinge	Gångjärnsfäste	6
0580	10	92 22 704		RH	1	Bracket, hinge	Gångjärnsfäste	6
0600	11	92 20 955		LH	1	Joint plate	Skarvplåt	5
0620	11	92 20 963		RH	1	Joint plate	Skarvplåt	5
0640	12	92 20 930		LH	1	Reinforcement	Forstärkning	5
0660	12	92 20 948		RH	1	Reinforcement	Forstärkning	5
0680	13	82 87 286		FRONT	1	Support plate	Stödplåt	6
0700	14	92 22 977		REAR	1	Support plate	Stödplåt	6
0720	15	82 86 304			1	Cover assy, fuel filling	Tacklock kpl, bränslepåfyllning	5
0740					1	Spring	Fjäder	5
0760	16	82 62 537			2	Screw	Skruv	5
0780	17	82 54 666			1	Cross member	Bakrutebalk	5
0810	19	69 27 065		(9220872)	1	Plug	Plugg	5
0820	20	71 63 074			1	Buffer	Buffert	5
0840	21	92 23 686			2	Bracket	Fäste	5
0860	22	82 83 921		LH	1	Bracket	Fäste	6
0880	22	82 83 939		RH	1	Bracket	Fäste	6

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
6	Main body	2-B08
5	Instrument panel	2-B24
5	Hood, front, fenders	2-C04
5	Doors, trunk lid	2-C10
6	External details, glass, sealings	2-C20
5	Upholstery, interior equipment and touch-up paint	2-D06
5	Heating and ventilation system	2-F10
5	Bumpers	2-F16
6	Complete sets	2-F20

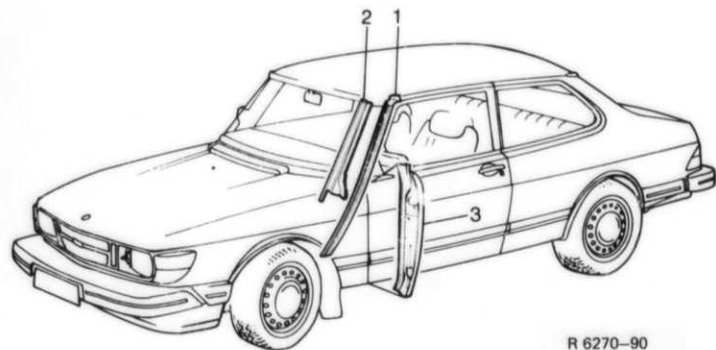

R 6270-90

2-B22

Main body
Door-and wind-
shield pillars

Karosseristomme
Dörr- och vind-
rutesolpar

0550	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0060	1	76 01 131		FRONT, LH (82 29 692)	1	Pillar	Stolpe	6
0080	1	69 17 199		FRONT, RH	1	Pillar	Stolpe	6
0090	2	92 93 358		LH	1	Sealing plate	Tätningsskiva	5
0091	2	92 93 366		RH	1	Sealing plate	Tätningsskiva	5
0261	3	69 12 653		LH	1	Plate, front pillar	Skiva, främre stolpe	5
0270	3	69 12 661		RH	1	Plate, front pillar	Skiva, främre stolpe	5


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-B24

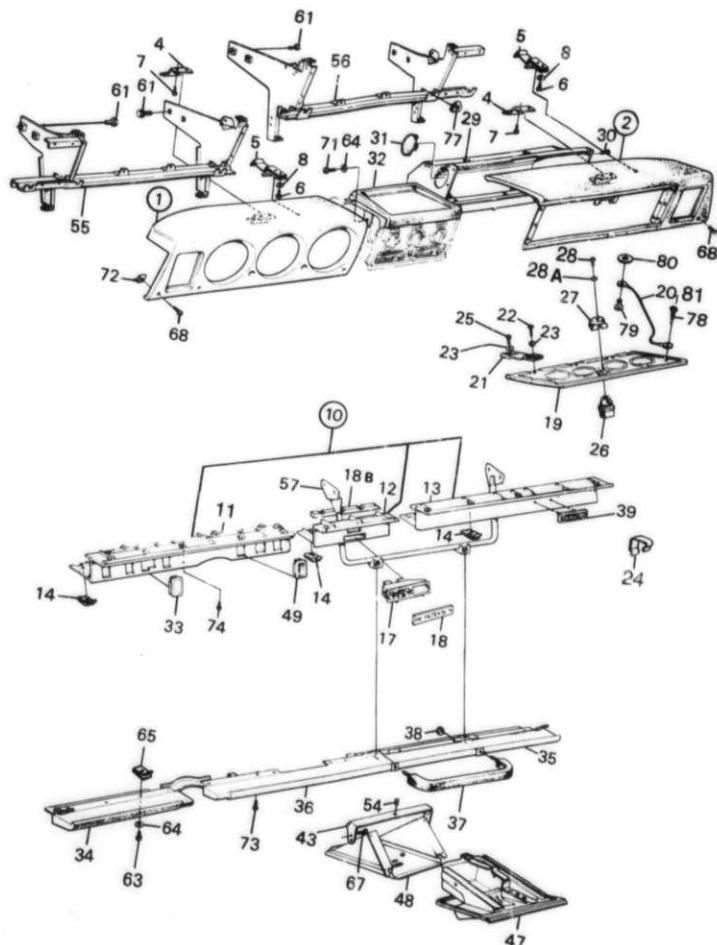

R 6271-90

Instrument panel

Instrument panel

Pos	Part No/Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0020	1	84 35 794		1	Upholstery, instrument side	Stötskydd, instrument sida	6
0040	1	84 35 802	RHD	1	Upholstery, instrument side	Stötskydd, instrument sida	6
0100	2	84 35 869		1	Upholstery, glove compartment side	Stötskydd, handskfack sida	6
0120	2	84 35 851	RHD	1	Upholstery, glove compartment side	Stötskydd, handskfack sida	6
0180	4	84 68 761		2	Hook	,Hake	6
0200	5	84 35 745		4	Spring	,Fjäder	6
0220	6	79 61 949		8	Screw	,Skruv	5
0240	7	79 61 949		2	Screw	,Skruv	5
0290	8	83 75 198		8	Washer	,Bricka	5
0300	10	85 60 807		1	Switch panel assy	Strömställarpanel kpl	6
0320	11	85 60 823	LH	1	Switch panel	,Strömställarpanel	6
0330	12	85 60 864	CENTRE	1	Panel part	,Paneldel	6
0350	13	85 60 849	RH	1	Panel part	,Paneldel	6
0360	14	84 26 264		7	Clip	,Clip	5
0380	10	85 60 922	RHD	1	Switch panel assy	Strömställarpanel kpl	6
0400	11	85 60 948	RH	1	Switch panel	,Strömställarpanel	6
0410	12	85 60 864	CENTRE	1	Panel part	,Paneldel	6
0420	13	85 60 963	LH	1	Panel part	,Paneldel	6
0440	14	84 26 264		7	Clip	,Clip	5
0450	17	85 35 908		1	Bulb socket	,Lampinsats	4
0560	18	85 35 916		1	Sign »FASTEN SEAT BELTS«	Textfönster »FASTEN SEAT BELTS«	5
0620	18B	85 17 435		1	Lighting guide	Ljusledare	6
0640	19	84 35 117		1	Glove compartment lid	Handskfacklucka	5
0760	20	84 35 053	SUPERSEDED BY 7873664	1	Lid stop	Luckstopp	3
0920	20	94 45 412		1	Lid stop	Luckstopp	3
0940	21	94 22 552		3	Hinge	Gångjärn	4
0960	22	79 65 601		3	Screw	Skruv	5
0980	23	84 13 429		6	Washer	Bricka	5
1000	24	84 27 742		1	Clip	,Clip	5
1020	25	84 08 882		3	Screw	Skruv	5
1040	26	84 75 618	WITHOUT KEYS	1	Glove compartment lock	Handskfacklås	3
1060	27	84 53 409		1	Casing	Kåpa	3
1080	28	80 59 214		1	Screw	Skruv	5
1100	28A	79 15 655		1	Washer	Bricka	5
1120	29	84 22 404		1	Glove compartment	Handskfack	6
1140	29	84 27 999	RHD	1	Glove compartment	Handskfack	6
1160	30	82 87 666	(B2 15683)	4	Pop rivet	Popnit	5
1200	31	84 26 116		1	Cover	,Lock	5
1220	32	84 22 990		1	Keeping box	Förvaringsfack	5
1240	32	84 29 300	RHD	1	Keeping box	Förvaringsfack	5
1260	33	85 13 996		1	Cover plate	Täckbricka	5
1280	34	84 34 250	LH	1	Knee protection	Knäskydd	6
1300	34	84 56 378	LH, RHD	1	Knee protection	Knäskydd	6
1320	35	84 34 243	RH	1	Knee protection	Knäskydd	6
1340	35	84 56 386	RH, RHD	1	Knee protection	Knäskydd	6
1360	36	84 34 235	CENTRE PART	1	Knee protection	Knäskydd	6
1380	36	84 56 360	CENTRE PART, RHD	1	Knee protection	Knäskydd	6
1400	37	84 53 177		1	Curve handle	Kurvhandtag	5
1420	38	80 74 105		2	Nut	Mutter	5
1440	39	69 17 652		1	Emblem "SAAB 90"	Emblem "saab 90"	3
1460	43	82 27 399		1	Mounting plate	Fästplåt, askkopp	6
1480	47	84 54 639		1	Ashtray	Askkopp	5
1500	48	84 54 621		1	Housing, ashtray	Hus, askkopp	6
1520	49	85 13 996		1	Cover plate	Täckbricka	5
1540	52	79 71 518		2	Clip, cover plate	Clip, täckbricka	5
1560	54	79 61 634		2	Pop rivet	Popnit	5
1580	55	84 83 018	LH	1	Support	Panelstöd	6
1600	55	84 83 042	LH, RHD	1	Support	Panelstöd	6

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-C02


0600	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
	56	84 83 034		RH	1	Support	Panelstöd	6
2020	56	84 83 026		RH, RHD	1	Support	Panelstöd	6
2080	56	84 83 091			1	Stay	Stag	6
2120	57	84 83 109		RHD	1	Stay	Stag	6
2160	61	79 67 938			7	Screw	Skruv	5
2200	63	79 67 771			8	Screw	Skruv	5
2240	64	80 73 090			2	Washer	Bricka	5
2260	65	84 26 264			6	Clip	Clip	5
2280	67	79 67 722			2	Screw	Skruv	5
2300	68	84 27 841			6	Screw	Skruv	5
2320	71	79 22 354			2	Screw	Skruv	5
2340	72	86 02 658			4	Clip	Clip	5
2360	73	79 67 771			4	Screw	Skruv	5
2380	74	79 61 949			12	Screw	Skruv	5
2400	77	79 39 796			6	Clip	Clip	5
2460	78	94 45 420			1	Screw	Skruv	5
2480	79	82 87 666		(82 15683)	1	Blind rivet	Blindnit	5
2500	80	70 88 073			1	Washer	Bricka	5
2520	81	78 73 664			1	Kit, lid stop	Sats, luckstopp	5
2540								

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

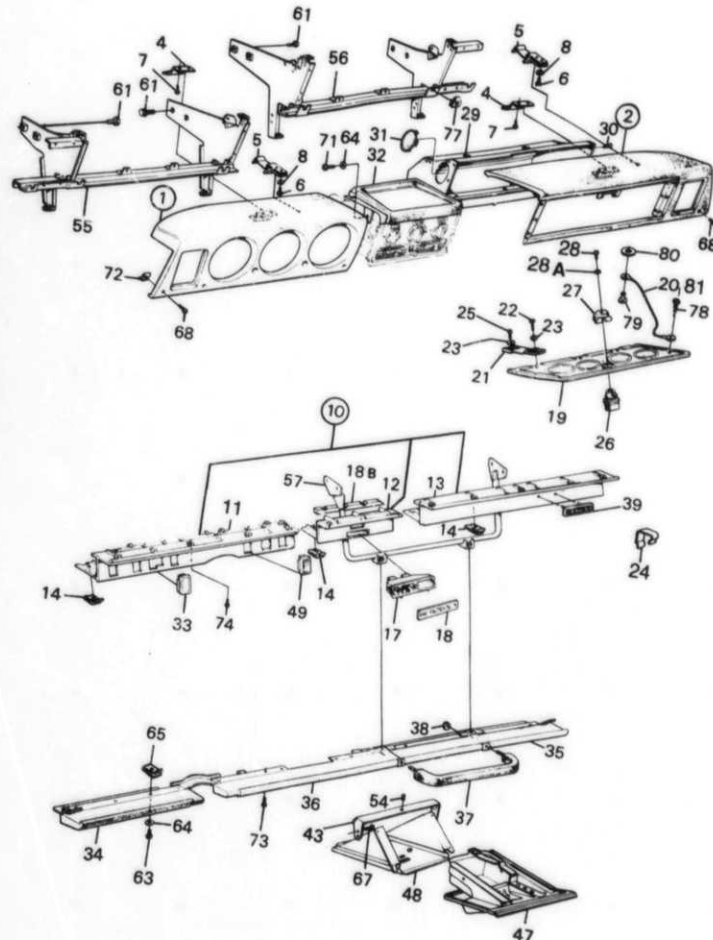

R 6271-90


2-C04

Hood, front, fenders
Hood, hood hinges
and hood lock

Motorhuv, front, skärmar
Motorhuv, huvgångjärn
och huvlås

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

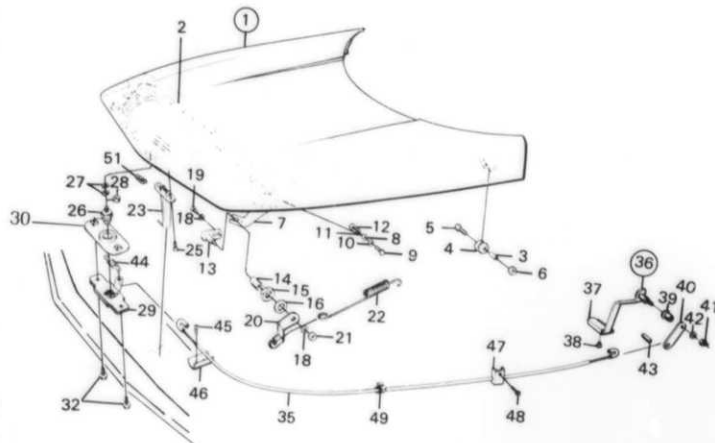

R 6272-90

Pos	Part No/Art nr	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0650	1	69 14 568	1	Hood assy.	Motorhuv kpl.	3
0020	2	69 17 173	1	Gross member	Spant	3
0040	3	82 03 374	2	Spacer tube	Distansrör	5
0060	4	82 02 491	2	Roll	Rulle	5
0080	5	80 19 978	2	Screw	Skruv	5
0120	6	80 73 512	2	Nut	Mutter	5
0160	7	92 27 463	1	Hinge	Gångjärn	3
0190	8	82 03 267	2	Spacer tube	Distansrör	4
0200	9	80 82 968	2	Screw	Skruv	5
0240	10	80 29 985	2	Washer	Bricka	5
0260	11	79 10 557	2	Washer	Bricka	5
0280	12	80 74 106	2	Nut	Mutter	5
0320	13	82 18 265	2	Driver	Medbringare	5
0340	14	82 19 248	2	Bushing	Bussning	5
0360	15	82 34 825	2	Washer	Bricka	5
0380	16	72 16 864	4	Washer	Bricka	5
0400	18	79 10 557	2	Screw	Skruv	5
0440	19	79 68 589	1	Arm	Arm	5
0480	20	82 83 681	1	Arm	Arm	5
0520	21	79 14 708	2	Nut	Mutter	5
0560	22	82 57 453	2	Spring	Fjäder	4
0600	23	82 03 499	1	Hook	Hake	5
0640	25	80 59 396	2	Screw	Skruv	5
0680	26	82 27 001	1	Locking pin	Låstapp	4
0720	27	73 11 764	2	Washer	Bricka	5
0760	28	79 14 708	1	Nut	Mutter	5
0800	29	82 74 946	1	Hood lock	Huvlås	3
0840	30	82 61 364	1	Guide plate	Styrplåt	5
0880	32	79 69 223	2	Screw	Skruv	5
0920	35	82 21 905	1	Control cable	Reglagewire	2
0960	36	82 16 855	1	Control arm assy.	Reglagearm kpl.	5
1000	37	82 16 871	1	Handle	Handtag	3
1040	38	80 59 206	1	Screw	Skruv	5
1080	39	82 11 518	1	Bushing	Bussning	5
1120	40	82 11 427	1	Arm	Arm	4
1160	41	79 14 690	1	Nut	Mutter	5
1200	42	79 10 540	1	Washer	Bricka	5
1240	43	82 57 784	1	Plastic tube	Plaströr	4
1280	44	82 38 354	1	Spring	Fjäder	5
1320	45	79 22 909	2	Screw	Skruv	5
1360	46	84 10 953	1	Clamp	Överfall	5
	47	82 11 468	1	Retainer	Hållare	5
	48	79 22 909	1	Screw	Skruv	5
	49	79 33 443	1	Clip	Clip	5
	51	82 25 435	1	Clip	Clip	5

2-C06

Hood, front, fenders
Front, grille

Motorhuv, front, skärmar
Front, grill



MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, steering	1-L02
7	Suspension, wheels	2-A02
8	Body	2-B02
9	Tool, labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020	1	92 86 576	CENTRE	1	Grille assy	Grill kpl	3
0040	2	92 26 432		1	„Emblem »SAAB«	„Emblem »SAAB«	3
0060	3	79 19 483		2	„Clip	„Clip	5
0080	4	92 34 634	OUTER PART, LH	1	Grille	Grill	3
0100	5	92 34 642	OUTER PART, RH	1	Grille	Grill	3
0120	6	82 53 452		3	Clip	Clip	5
0140	7	79 22 446		3	Screw	Skruv	5
0160	8	82 20 238		3	Grommet	Genomföring	3
0180	9	82 51 753		2	Rubber bushing	Gummibussning	3
0200	10	80 29 936		2	Washer	Bricka	5
0220	11	82 20 352		2	Spacer	Distansrör	3
0240	12	79 71 583		2	Screw	Skruv	5
0300	15	92 38 122	UPPER	1	Member	Balk	3
0320	16	79 67 938		2	Screw	Skruv	5
0340	17	79 67 953		2	Nut	Mutter	5
0360	18	79 14 708		2	Nut	Mutter	5
0380	19	80 29 985		2	Washer	Bricka	5
0400	20	79 16 505		2	Washer	Bricka	5

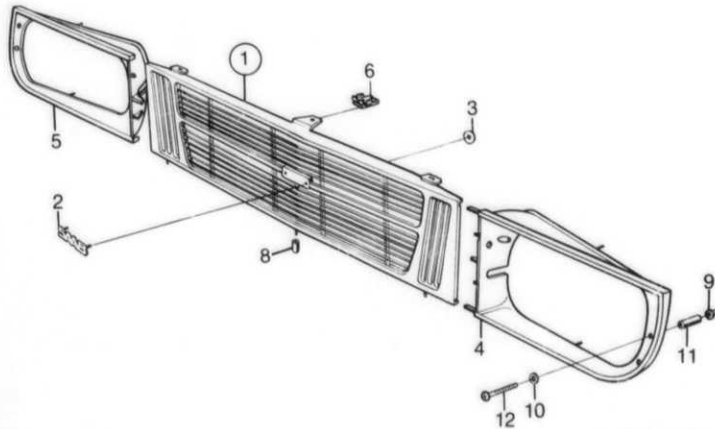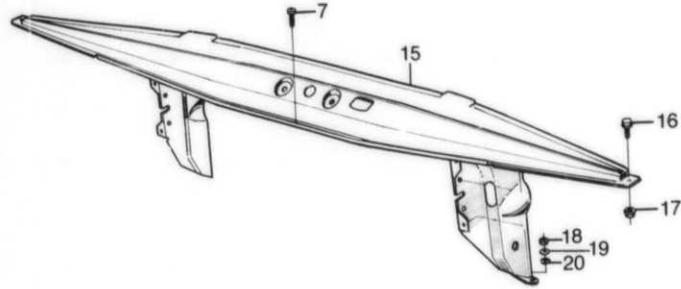

R 6273-90

2-C08

Hood, front, fenders
Front fenders

Motorhuv, front, skärmar
Framskärmar


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

0800	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0122	1	69 12 679		LH, 1985	1	Front fender assy	Framskärm kpl	3
0125	1	69 21 670		LH, 1986-	1	Front fender assy	Framskärm kpl	3
0162	2	69 12 687		RH, 1985	1	Front fender assy	Framskärm kpl	3
0165	2	69 21 688		RH, 1986-	1	Front fender assy	Framskärm kpl	3
0260	3	82 36 317		FRONT PART, LH	1	,Fender	,Skärm	3
0300	4	82 36 325		FRONT PART, RH	1	,Fender	,Skärm	3
0362	5	69 12 695		REAR PART, LH, 1985	1	,Fender	,Skärm	5
0365	5	69 21 696		REAR PART, LH, 1986-	1	,Fender	,Skärm	5
0402	6	69 12 703		REAR PART, RH, 1985	1	,Fender	,Skärm	5
0405	6	69 21 704		REAR PART, RH, 1986-	1	,Fender	,Skärm	5
0420	7	82 11 674			6	Rubber buffer	Gummibuffert	5
0440	8	82 87 666		(82 15683)	6	Pop rivet	Popnit	5
0460	9	82 11 294			2	Rubber buffer	Gummibuffert	3
0480	10	73 23 579			2	Clip	Clip	5

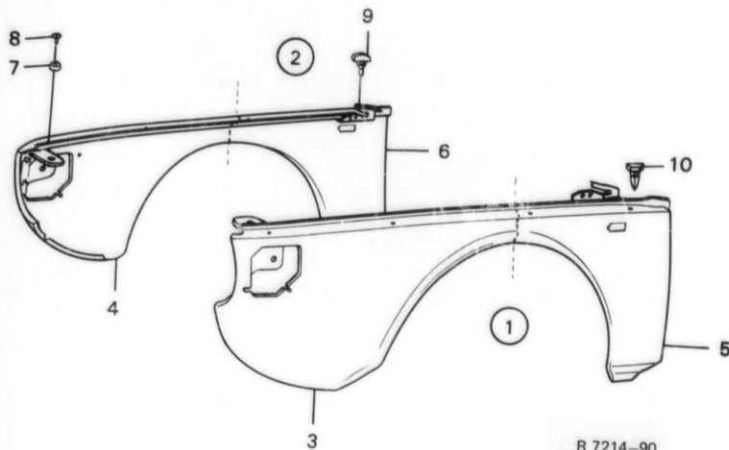

R 7214-90

2-C10

Doors, trunk lid
Doors, hinges, window
regulators


Dörrar, bagagerumslucka
Dörrar, gångjärn, fönster-
hissar

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B06
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Anst	Description	Benämning	S L
0071	1	69 25 754	(9291659) LH	1	Door Assy	Dörr kpl	4
0072	1	69 25 762	(9291667) RH	1	Door Assy	Dörr kpl	4
0080	2	82 88 714	LH	1	Outer plate	Ytterplåt	3
0090	2	82 88 722	RH	1	Outer plate	Ytterplåt	3
0100	3	82 24 917	LH	1	Plate channel, door seal	Plåtskena, dörrtät- ning	5
0110	3	82 24 925	RH	1	Plate channel, door seal	Plåtskena, dörrtät- ning	5
0120	4	82 24 933		2	Plate channel, door seal	Plåtskena, dörrtät- ning	5
0130	5	82 17 432	LOWER, LH	1	Part of inner plate, door	Del av innerplåt, dörr	5
0140	5	82 17 440	LOWER, RH	1	Part of inner plate, door	Del av innerplåt, dörr	5
0150	6	82 15 899	LOWER, LH	1	Part of outer plate, door	Del av ytterplåt, dörr	5
0160	6	82 15 907	LOWER, RH	1	Part of outer plate, door	Del av ytterplåt, dörr	5
0170	6A	78 73 508	UPPER, LH	1	Part of outer plate, door	Del av ytterplåt, dörr	4
0180	6A	78 73 516	UPPER, RH	1	Part of outer plate, door	Del av ytterplåt, dörr	4
0190	7	69 12 570	LOWER, LH	1	Hinge Assy	Gångjärn kpl	5
0200	7	69 12 588	LOWER, RH	1	Hinge Assy	Gångjärn kpl	5
0210	8	82 36 390	LOWER	2	Hinge	Gångjärn	4
0220	9	82 05 908	LOWER	2	Hinge half	Gångjärnshalva	5
0230	9A	82 43 578	(8205858)	2	Hinge pin	Gångjärnstapp	3
0240	10	69 12 586	UPPER, LH	1	Hinge Assy	Gångjärn	5
0250	10	69 12 604	UPPER, RH	1	Hinge Assy	Gångjärn kpl	5
0260	11	82 36 457	UPPER, LH, SUPERSEDED BY 6912596	1	Hinge half	Gångjärnshalva	4
0270	11	82 36 465	UPPER, RH, SUPERSEDED BY 6912604	1	Hinge half	Gångjärnshalva	4
0280	12	82 06 393		2	Pin	Tapp	3
0290	13	82 64 095	LH, SUPERSEDED BY 6912596	1	Hinge half with stop	Gångjärnshalva med stopp	4
0300	13	82 64 103	RH	1	Hinge half with stop	Gångjärnshalva med stopp	4
0310	14	82 07 573	LH	1	Lever Assy	Håvarm kpl	6
0320	14	82 07 581	RH	1	Lever Assy	Håvarm kpl	6
0330	14A	82 06 476		2	Pin	Tapp	3
0340	15	82 06 369		2	Spring	Fjäder	5
0350	16	79 75 212		12	Screw	Skruv	5
0360	17	92 91 949	-1985	12	Screw	Skruv	5
0370	17	69 13 784	1986-	12	Screw	Skruv	5
0380	18	79 10 557	-1985	12	Washer	Bricka	5
0390	19	70 38 342		2	Rubber plug	Gummiplugg	5
0400	20	82 74 011	LH	1	Window regulator Assy	Fönsterhiss kpl	5
0410	20	82 74 029	RH	1	Window regulator Assy	Fönsterhiss kpl	5
0420	21	79 72 441		8	Screw	Skruv	5
0430	22	79 16 497		2	Washer	Bricka	5
0440	23	80 59 529		4	Screw	Skruv	5
0450	24	79 10 540		4	Washer	Bricka	5
0460	25	94 45 651		2	Crank, window regu- lator	Hissvev	4
0470	26	84 76 301		2	Cover, crank	Lock, hissvev	4
0480	27	84 02 190		2	Washer	Bricka	5
0490	28	98 35 737		2	Screw	Skruv	5
0500	29	94 16 934		2	Spacer sleeve	Distanshylsa	5
0510	30	92 87 335		2	Attachment plate	Fästplåt innerhandtag	6
0520	31	79 61 634		10	Pop rivet	Popnit	5
0530		82 09 694	see page 8-119, 2-F24	X	Kit, rivet inner plate door	Sats, nit innerplåt dörr	6
0540		85 47 028	see page 8-115, 2-F20	X	Kit window regulator electrical	Sats fönsterhissar el-manövrerade	5

R 6275-90

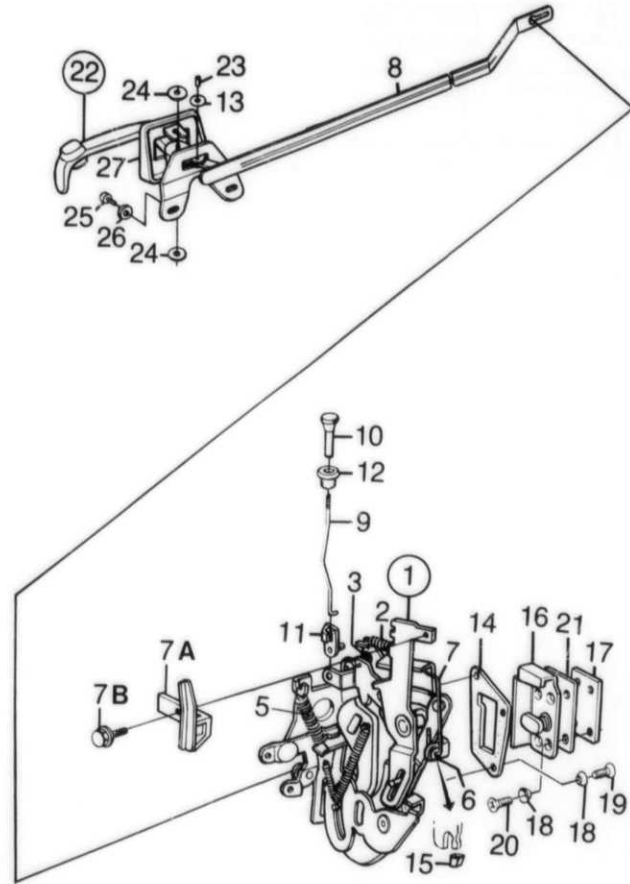

R 6276-90

2-C12


Doors, trunk lid
Door lock

Dörrar, bagagerumslucka
Dörrlås

0910	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0030	1	92 93 895	LH	1	Door lock assy	Dörrlås kpl	4
0050	1	92 93 879	LH, RHD	1	Door lock assy	Dörrlås kpl	4
0090	1	92 93 887	RH	1	Door lock assy	Dörrlås kpl	4
0130	1	92 93 903	RH, RHD	1	Door lock assy	Dörrlås kpl	4
0150	2	82 36 606		2	Spring	Fjäder	5
0160	3	84 57 566		2	Spring	Fjäder	5
0180	4	92 81 114		2	Spring	Fjäder	5
0205	5	92 85 602		2	Spring	Fjäder	5
0220	6	84 51 825		2	Bushing	Bussning	4
0240	7	84 51 817	(8470577)	2	Link	Länk	5
0243	7A	82 56 372	LH	1	Adjusting link	Justerlänk	5
0244	7A	82 56 380	RH	1	Adjusting link	Justerlänk	5
0245	7B	92 24 544		2	Screw	Skruv	5
0260	8	84 18 451	LH	1	Operating link	Manöverlänk	5
0280	8	84 18 469	RH	1	Operating link	Manöverlänk	5
0300	9	82 69 375	LH	1	Link	Länk	5
0320	9	82 69 383	RH	1	Link	Länk	5
0340	10	94 46 022		2	Knob	Knapp	3
0360	11	84 61 675		2	Clip	Clip	5
0380	12	97 31 498		2	Bushing	Bussning	4
0400	13	71 66 937		2	Washer	Bricka	5
0420	14	84 56 006		2	Spacer	Mellanlägg	5
0440	15	84 56 808		2	Damper	Dämpare	4
0460	16	82 62 750	(8453250) LH	1	Striker plate	Slutbleck	5
0480	16	82 62 768	(8453268) RH	1	Striker plate	Slutbleck	5
0500	17	82 41 994		2	Nut plate	Brickmutter	5
0520	18	79 34 136		14	Washer	Bricka	5
0540	19	80 55 980		6	Screw	Skruv	5
0560	20	79 37 964		8	Screw	Skruv	5
0580	21	84 74 553		4	Spacer	Mellanlägg	4
0600	22	84 18 493	LH	1	Door handle, inner assy	Innerhandtag kpl	5
0620							
0640	22	84 18 501	RH	1	Door handle, inner assy	Innerhandtag kpl	5
0660							
0680	23	79 72 367		2	Tension pin	Rörpinne	5
0700	24	84 21 992		4	Washer	Bricka	5
0720	25	79 34 763		4	Screw	Skruv	5
0740	26	79 15 564		4	Washer	Bricka	5
0760	27	84 18 402		2	Cover	Kåpa	4

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool	
	Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

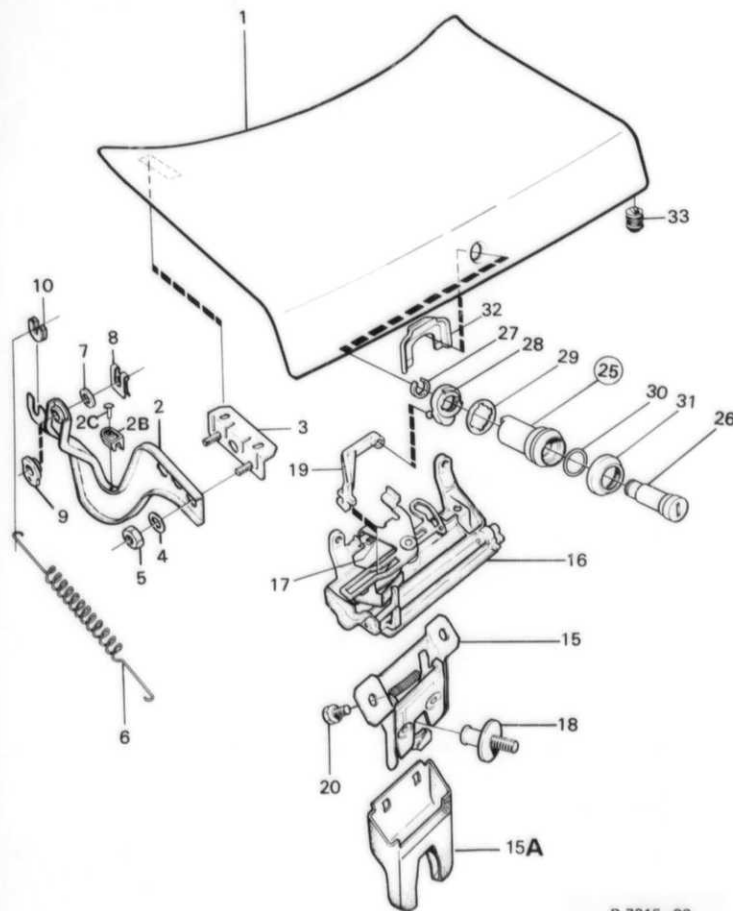

R 7215-90

2-C14

Doors, trunk lid
Trunk lid, hinges, lock

Dörrar, bagagerumslucka
Bagagerumslucka, gångjärn
lås

0950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0021	1	92 33 610			1	Trunk lid	Bagagerumslucka	4
0040	2	92 22 795	LH		1	Hinge	Gångjärn	5
0060	2	92 22 803	RH		1	Hinge	Gångjärn	5
0070	2B	92 31 515	LH		1	Rubber stop	Gummistopp	5
0071	2B	92 31 523	RH		1	Rubber stop	Gummistopp	5
0075	2C	82 87 666		(82 15683)	2	Blind rivet	Blindnit	5
0080	3	92 22 837			2	Angle	Vinkel	5
0100	4	70 61 328			8	Washer	Bricka	5
0120	5	79 67 953			8	Nut	Mutter	5
0150	6	69 19 013			2	Spring	Fjäder	5
0160	7	79 16 513			2	Washer	Bricka	5
0180	8	82 57 750			2	Clip	Clip	5
0200	9	92 25 475			2	Bushing	Bussning	3
0220	10	92 25 483	LH		1	Wear protection	Slitskydd	5
0240	10	92 33 736	RH		1	Wear protection	Slitskydd	5
0262	15	92 31 267			1	Lock	Lås	4
0270	15A	92 30 889			1	Cover	Skydd	6
0281	16	92 32 273			1	Handle assy	Handtag kpl	5
0300	17	82 89 738			1	Spring	Fjäder	5
0321	18	92 35 078			1	Striker plate	Slutbleck	5
0340	19	82 89 753			1	Operating link	Manöverlänk	5
0360	20	80 59 552			2	Screw	Skruv	5
0380	25	82 83 806			1	Lock cylinder assy	Låscylinder kpl	5
0400	26	84 86 409			1	Lock cylinder	Låscylinder	3
0420	27	84 51 981			1	Ring	Säkringsring	4
0440	28	82 89 878			1	Driver	Medbringare	3
0460	29	82 89 886			1	Pad	Mejlanlägg	4
0480	30	84 52 252			1	Seal ring	Tättningsring	4
0500	31	82 89 894			1	Cover	Käpa	5
0520	32	84 53 227			1	Clip	Clip	5
0540	33	82 78 343		(8262545)	2	Rubber stop	Gummistopp	4

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-C16

Doors, trunk lid
Outside handle, lock
cylinder

Dörrar, bagagerumslucka
Yttre handtag, lock
låscylinder

MASTER INDEX

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
1050	2	BLACK	2	Outside handle assy	Ytterhandtag kpl
0055	3		2	.Spring	.Fjäder
0060	5		2	.Clasp	.Trycke
0110	7		2	.Sliding plane	.Glidbana
0140	11		2	.Sliding block	.Glidblock
0230	12	(8238099)	2	.Guide	.Styrning
0250	13	LH	1	.Bearing	.Lager
0260	13	RH	1	.Bearing	.Lager
0280	14	31)	2	Pad	Mellanlägg
0300	14	32)	2	Pad	Mellanlägg
0320	15	LH	1	Retainer	Hållare
0340	15	RH	1	Retainer	Hållare
0360	16		2	Pad	Mellanlägg
0460	17		2	Screw	Skruv
0480	17		2	Screw	Skruv
0490	18		2	Washer	Bricka
0500	20		2	Screw	Skruv
0540	21		2	Washer	Bricka
0600	22	LH, BLACK	1	Door lock cylinder assy with 2 keys	Dörrlåscylinder kpl med 2 nycklar
0721	22	RH, BLACK	1	Door lock cylinder assy with 2 keys	Dörrlåscylinder kpl med 2 nycklar
0722	23		2	.Lock cylinder with 2 keys	.Låscylinder med 2 nycklar
0725	24		2	.Seal ring	.Tätningssring
0726	25		2	.Ring	.Säkringsring
0780	26		2	.Spring	.Fjäder
0800	27		2	.Driver	.Medbringare
0820	28		2	.Plastic link	.Plastlänk
0840	29		2	.Gasket	.Packning
0860	30		2	Clip	Clip
0880	31		X	Key blank	Nyckelämne
0900	31		X	Central lock set	Centrallåssats
0920		see page 8--119, 2-F24			
0940					
0980					
1000					

31. Ch. --H3008207, --H2008602
32. Ch. H3008208--, H2008603--


SAAB genuine parts
original reserceditor

SAAB 90 M85-87

1990-02

R6278

Page 08-039

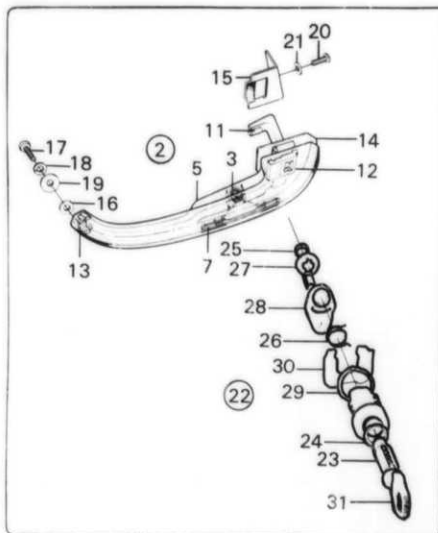

R 6278-90

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8	GROUP INDEX	
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20


2-C18

Doors, trunk lid
Lock-and lock cylinder
set

Dörrar, bagagerumslucka
Lås-och låscylinder
satser


MASTER INDEX

1100	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0270	2	92 28 008			1	Lock set (door LH and RH + ignition + trunk lid)	Låssats (dörr V och H tändning + bagagerum)	5
0271						Lock cylinders may be ordered to match original equipment locks. Use the part number listed below, stating the key code as additional information. These cylinders are delivered without keys.	För att behålla samma nyckel till bilens samtliga lås kan följande låsdetaljer tillverkas efter uppgivande av nyckelnummer. Levereras utan nycklar.	
0272								
0461								
0465								
0466								
0467								
0468								
0469								
0470								
0471								
0472								
0473								
0474								
0475								
0480		92 27 950	LH		X	Door lock cylinder	Dörrlåscylinder	3
0620		92 27 968	RH		X	Door lock cylinder	Dörrlåscylinder	3
0680		82 89 852			X	Lock cylinder, trunk lid	Låscylinder, bagagerumslucka	5
0690								
0701		93 29 483			X	Lock cylinder, ignition	Låscylinder, tändning	3
0702								
0820		84 78 554		40/999 100 001	X	Spare key	Reservnyckel	5

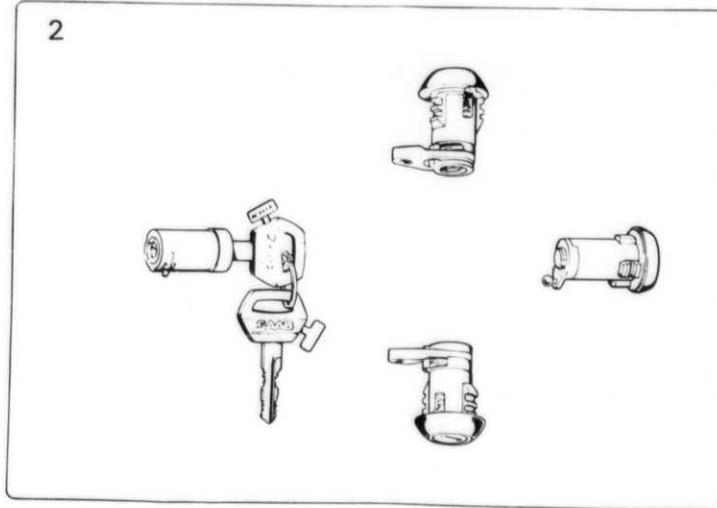

R 6279-90

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8	GROUP INDEX	
5	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

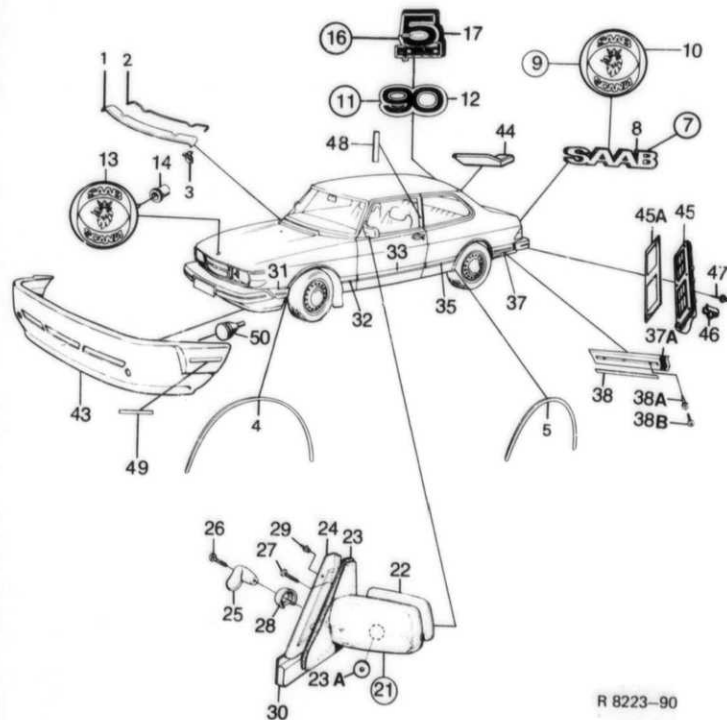

2-C20

External details, glass, sealings External details

1150	Pos	Part No/Art nr	K	Notes/Anmärkningar
0020	1	76 03 376		
0030	2	86 01 247		
0040	3	86 01 718		
0050	4	92 57 262		BLACK, CUT TO SUITABLE LENGTH (69 11 788)
0060				BLACK, CUT TO SUITABLE LENGTH (92 57 270)
0070	5	92 57 262		
0080				
0090	7	69 15 649		
0095	7	92 23 207		
0100	8	82 69 987		ALT TO 69 15 649
0110	9	69 11 853		
0120	10	69 18 031		
0130	11	69 15 607		
0140	12	69 15 623		
0150	13	69 11 895		
0160				
0170				
0180	14	69 15 706		
0190	16	92 27 687		-1986
0200	17	92 27 687		1986
0210	21	98 33 526		LH
0220				
0230	21	98 33 112		RH
0240				
0250	21	98 33 120		LH, RHD, SW, BREVBÄRAR-BIL
0260				
0270	21	98 33 138		RH, RHD, SW, BREVBÄRAR-BIL
0280				
0290	21	98 33 146		LH, RHD
0300				
0310	21	98 33 153		RH, RHD
0320				
0330	22	98 33 328		LH
0340	22	98 33 302		RH
0350	22	98 33 344		LH
0360	22	98 33 369		RH
0370	23	94 65 436		LH
0380	23	94 65 444		RH
0390	23A	97 36 950		
0400	24	97 08 116		LH
0410	24	97 08 124		RH
0420	25	98 47 377		LH
0430	25	98 47 385		RH
0440	26	79 72 789		
0450	27	79 72 813		
0460	28	94 68 901		
0470	29	94 68 893		
0480	30	97 07 795		LH
0490	30	97 08 603		RH
0500	31	92 83 649		FRONT PART, LH, 4-SPEED
0520	31	92 83 656		FRONT PART, RH, 4-SPEED
0540	32	92 83 664		REAR PART, LH
0560	32	92 83 672		REAR PART, RH
0580	33	92 36 910		LH
0590	33	92 36 928		RH
0600	35	92 36 936		FRONT PART, LH
0620	35	92 36 944		FRONT PART, RH
0640	37	92 86 675		REAR PART, LH, 4-SPEED
0660	37	92 86 683		REAR PART, RH, 4-SPEED
0680	37A	92 39 252		REAR PART, LH, 5-SPEED
0700	37A	92 39 260		REAR PART, RH, 5-SPEED
0720	38	92 89 588		5-SPEED
0730	38A	69 11 804		5-SPEED
0740	38B	79 69 314		5-SPEED
0750	43	92 98 654		5-SPEED

Utvändiga detaljer, glas, tätningsslistor Utvändiga detaljer

Qty/ Antal	Description	Benämning
1	Air deflector	Luftskärm
1	Seal strip	Tätningsslist
3	Clip	Clip
2	Moulding, front fender	Dekorlist, framskärm
2	Moulding, valance black	Dekorlist, sidoplåt svart
1	Emblem "SAAB"	Emblem "SAAB"
1	Emblem "SAAB"	Emblem "SAAB"
1	Tape	Tape
1	Emblem "Saab-Scania"	Emblem "Saab-Scania"
1	Tape	Tape
1	Emblem "90"	Emblem "90"
1	Tape	Tape
1	Emblem "Saab-Scania"	Emblem "Saab-Scania"
2	Bushing	Bussning
1	Emblem "5-speed"	Emblem "5-speed"
1	Tape	Tape
1	Mirror assy convex glass	Backspegel kpl konvext glas
1	Mirror assy convex glass	Backspegel kpl konvext glas
1	Mirror assy convex glass	Backspegel kpl konvext glas
1	Mirror assy convex glass	Backspegel kpl konvext glas
1	Mirror assy flat glass	Backspegel kpl plant glas
1	Mirror assy flat glass	Backspegel kpl plant glas
1	Convex glass	Konvext glas
1	Convex glass	Konvext glas
1	Flat glass	Plant glas
1	Flat glass	Plant glas
1	Gasket	Packning
1	Gasket	Packning
2	Gasket	Packning
1	Cover inner	Täckkläpa inre
1	Cover inner	Täckkläpa inre
1	Lever	Manöverspak
1	Lever	Manöverspak
2	Screw	Skruv
4	Screw	Skruv
2	Seal	Tätning
2	Clip	Clip
1	Cover strip	Täcklist
1	Cover strip	Täcklist
1	Moulding, front fender	Dekorlist, framskärm
1	Moulding, front fender	Dekorlist, framskärm
1	Moulding, front fender	Dekorlist, framskärm
1	Moulding, front fender	Dekorlist, framskärm
1	Moulding, door	Dekorlist, dörr
1	Moulding, door	Dekorlist, dörr
1	Moulding, valance	Dekorlist, sidoplåt
1	Moulding, valance	Dekorlist, sidoplåt
1	Moulding, valance	Dekorlist, sidoplåt
1	Moulding, valance	Dekorlist, sidoplåt
1	Moulding, valance	Dekorlist, sidoplåt
1	Moulding, valance	Dekorlist, sidoplåt
2	Moulding	dekor
4	Plastic bushing	Plastbussning
4	Screw	Skruv
1	Spoiler	Spoiler

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

External details


Utvändiga detaljer, glas,
tätninglister
Utvändiga detaljer

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02


8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

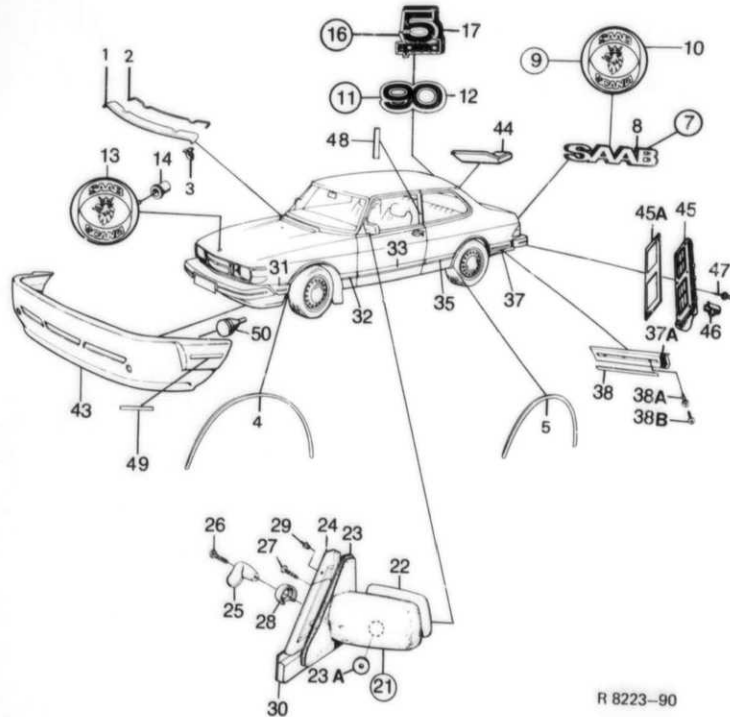

R 8223-90

N150	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0760	44	92 34 535	LH		1	Decor, edge guard	Dekor, kantskydd
0770	44	92 34 543	RH		1	Decor, edge guard	Dekor, kantskydd
0780	45	92 93 499	REAR, -1986		1	Air outlet assy	Lufutsläpp kp
0781	45	69 37 494	REAR, 1987-		1	Air outlet assy	Lufutsläpp
0782	45A	92 90 594			1	Sealing	Tätning
0790	46	92 93 382			4	Holder	JHållare
0800	47	82 35 178			6	Blind rivet	Blindnöt
0810	48	92 33 677	LH		1	Decor, b-pillar	Dekor, b-stolpe
0820	48	92 33 685	RH		1	Decor, b-pillar	Dekor, b-stolpe
0830	49	92 98 605			2	Dncor strip	Dekorlist
0840	50	82 09 009			2	Rubber buffer	Gummibuffert
0850		82 83 715	I COIL=3M NO.82 83 715		X	Tape for emblem	Tape för emblem
0860		92 88 127	1 COIL=70MM (NO9288127)		X	Tape for decor, edge guard	Tape för decor, kantskydd
0870			USE SUITABLE LENGTH				
0900		85 46 970	see page 8-115, 2-F20		X	Kit electrical mirrors	Sats elbakspeglar
0920							
0940		85 46 962	RHD		X	Kit electrical mirrors	Sats elbakspeglar
0960			see page 8-115, 2-F20				

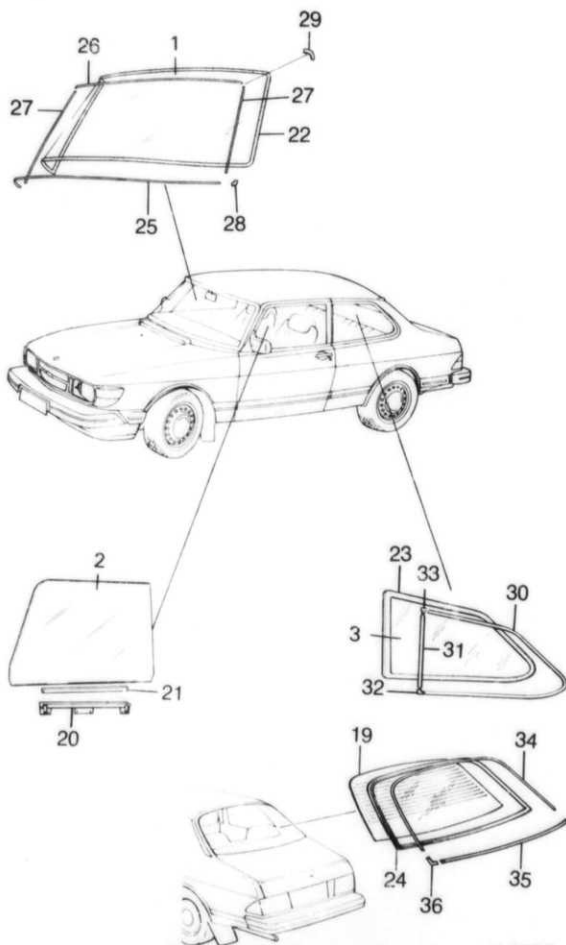

F2463 - 90

2-C24

External details, glass
Glass and sealings

Utvändiga detaljer, glas,
Glas och tätningslister

1200	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0090	1	82 59 087			1	Glass, windshield	Glas, vindruta	3
0205	2	82 73 633	LH		1	Glass, door window	Glas, dörruta	4
0285	2	82 73 641	RH		1	Glass, door window	Glas, dörruta	4
0340	3	82 87 732	LH		1	Glass, side window	Glas, sidoruta	5
0380	3	82 87 740	RH		1	Glass, side window	Glas, sidoruta	5
1460	19	92 20 161			1	Glass, electrical rear window	Glas, el-bakruta	5
1480								
1680	20	92 28 933	LH, -1985		1	Glass retainer	Rutfäste	5
1761	20	92 28 941	RH, -1985		1	Glass retainer	Rutfäste	5
1762	20	69 18 361	1986-		2	Glass retainer	Rutfäste	5
1785	21	92 87 111			2	Pad, door window	Mellanlägg, dörruta	5
1880	22	82 36 556	19)		1	Weatherstrip, windshield	Gummilist, vindruta	4
1900								
1910	22	69 18 593	20)		1	Weatherstrip, windshield	Gummilist, vindruta	4
1920								
1982	23	92 88 192	LH		1	Weatherstrip, side window	Gummilist, sidoruta	5
1983								
1984	23	92 88 200	RH		1	Weatherstrip, side window	Gummilist, sidoruta	5
1985								
2200	24	92 35 516			1	Weatherstrip, rear window	Gummilist, bakruta	4
2220								
2400	25	82 37 281	LOWER, BLACK		1	Moulding, windshield	Dekorationslist, vindruta nedre	3
2420								
2600	26	82 37 265	UPPER, BLACK		1	Moulding, windshield	Dekorationslist, vindruta övre	3
2620								
2680	27	82 37 273	BLACK		2	Moulding, windshield	Dekorationslist, vindruta	3
2700								
2840	28	82 69 458	LOWER, BLACK		2	Joint piece, windshield	Skarvstycke vindruta	3
2860								
2920	29	82 37 299	UPPER, BLACK, 19)		2	Joint piece, windshield	Skarvstycke, vindruta	3
2940								
2950	29	69 11 317	UPPER, BLACK, 20)		2	Joint piece, windshield	Skarvstycke, vindruta	3
2960								
3062	30	69 18 171	LH, BLACK		1	Moulding, side window	Dekorationslist, sidoruta	4
3063								
3182	30	69 18 189	RH, BLACK		1	Moulding, side window	Dekorationslist, sidoruta	4
3183								
3242	31	69 18 163	BLACK		2	Moulding, side window	Dekorationslist, sidoruta	4
3243								
3262	32	69 18 148	LOWER, BLACK		2	Joint piece	Skarvstycke	3
3264	33	69 18 155	UPPER, BLACK		2	Joint piece	Skarvstycke	3
3280	34	92 22 936	LOWER, BLACK		1	moulding, rear window	dekorlist, bakruta	3
3305	35	92 22 951	UPPER, BLACK		1	Moulding, rear window	Dekorlist, bakruta	3
3400	36	92 22 910	BLACK		2	Joint piece	Skarvstycke	3
3410		92 89 414	1 COIL = 4,4 M (9289414)		X	Protective tape for window opening	Skyddstape för rutöppning	3
3420								

19. Ch. -G6004161.
20. Ch. G6004162-.

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-D02

External details, glass
Other sealings, mud
guards

Utvändiga detaljer, glas,
Övriga tätningsskylar,
stänkskydd

MASTER INDEX

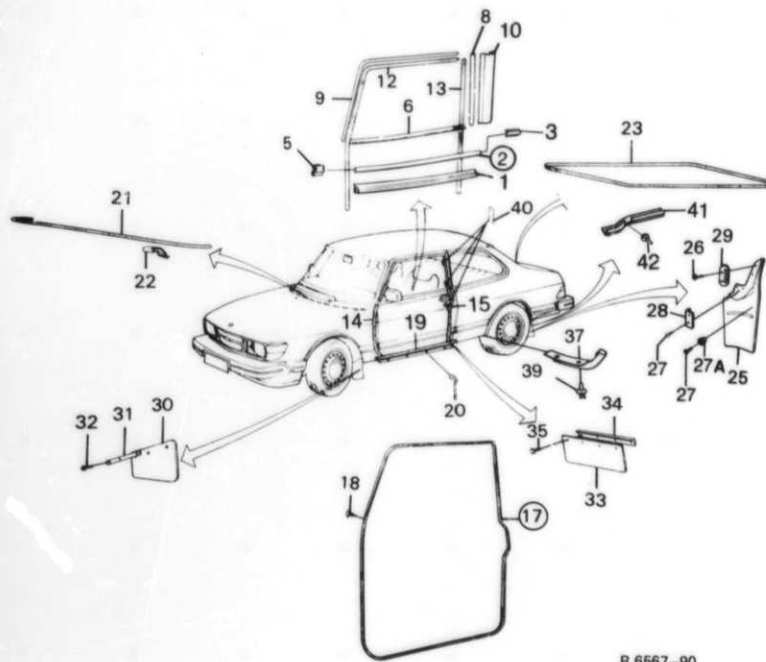

R 6567-90

	Pos	Part No./Art nr	K	Notes/Anmärkningar	Qty/Anst	Description	Benämning
0020	1	92 37 678		OUTER	2	Rubber seal	Gummilist
0030	2	69 26 737		BLACK, LH	1	Moulding	Dekorlist
0040	2	69 26 745		BLACK, RH	1	Moulding	Dekorlist
0050	3	92 37 975		LH, 17)	1	End piece	Ändstycke
0060	3	69 26 497		LH, 18)	1	End piece	Ändstycke
0070	3	92 37 983		RH, 17)	1	End piece	Ändstycke
0080	3	69 26 505		RH, 18)	1	End piece	Ändstycke
0090	5	82 78 947			14	Clip	Clip
0100	6	92 27 331			2	Seal assy., inner	Tätning kpl., inre
0110	8	92 39 336		REAR, BLACK, LH	1	Moulding	Dekorlist
0120	8	92 39 344		REAR, BLACK, RH	1	Moulding	Dekorlist
0130	9	92 39 153		FRONT, BLACK, LH	1	Moulding	Dekorlist
0140	9	92 39 161		FRONT, BLACK, RH	1	Moulding	Dekorlist
0150	10	92 31 176		BLACK, LH	1	Decor	Dekor
0160	10	92 31 184		BLACK, RH	1	Decor	Dekor
0170	12	82 78 996		FRONT	2	Seal, door frame	Tätning, dörrbåge
0180	13	82 76 479		REAR	2	Seal, door frame	Tätning, dörrbåge
0190	14	92 39 211		LOWER, LH, 15)	1	Seal strip, door opening	Tätningsslist, dörröppning
0200				LOWER, RH, 15)	1	Seal strip, door opening	Tätningsslist, dörröppning
0210	14	92 39 229		LOWER, LH, RH, 16	2	Seal strip, door opening	Tätningsslist, dörröppning
0220				LOWER, LH, RH, 16	2	Seal strip, door opening	Tätningsslist, dörröppning
0230	14	69 25 317		(9292988) REAR	2	Seal strip, door opening	Tätningsslist, dörröppning
0240					2	Seal strip, door opening	Tätningsslist, dörröppning
0250	15	92 92 954			2	Seal strip, door opening	Tätningsslist, dörröppning
0260					2	Seal strip, door opening	Tätningsslist, dörröppning
0290	15	69 11 820			1	Door seal assy	Dörrtätningsslist kpl
0300					1	Door seal assy	Dörrtätningsslist kpl
0310	17	82 86 692		LH, 15)	1	Door seal assy	Dörrtätningsslist kpl
0320	17	69 11 911		LH, 16)	1	Door seal assy	Dörrtätningsslist kpl
0330	17	82 86 700		RH, 15)	1	Door seal assy	Dörrtätningsslist kpl
0340	17	69 11 903		RH, 16)	1	Door seal assy	Dörrtätningsslist kpl
0350	18	69 11 614		(8412256)	80	Clip	Clip
0360	19	92 91 428			2	Protective strip	Skyddsslist
0370	20	82 35 178			12	Pop rivet	Popnit
0380	21	92 82 104			1	Hood seal	Huvttätning
0390	22	84 07 488			5	Clip	Clip
0400	23	92 26 028			1	Seal, trunk lid	Tätning, bagagerums-lucka
0410							
0420	25	78 73 995		REAR, LH	1	Kit, mud guard	Sats, stänkskydd
0425				see page 8-115, 2-F20			
0430	25	78 74 001		REAR, RH	1	Kit, mud guard	Sats, stänkskydd
0435				see page 8-115, 2-F20			
0440	25	78 74 340		REAR, LH, RH	1	Kit, mud guard assy	Sats, stänkskydd kpl
0441				see page 8-115, 2-F20			
0450	26	79 22 974			4	Screw	Skruv
0460	27	79 22 982			6	Screw	Skruv
0470	27A	92 82 138			4	Sleeve	Hylsa
0480	28	82 27 738			2	Support plate	Stödplåt
0490	29	92 22 613			2	Support plate	Stödplåt
0500	30	82 07 011		FRONT, LH	1	Mud guard	Stänkskydd
0510	30	82 07 029		FRONT, RH	1	Mud guard	Stänkskydd
0520	31	82 07 037			2	Attachment plate	Fästplåt
0530	32	79 22 917			6	Screw	Skruv
0540	33	82 89 266		CENTRE	2	Mud guard	Stänkskydd
0550	34	82 09 413			2	Bracket	Fäste
0560	35	79 73 209			8	Screw	Skruv
0570	37	82 87 310		LH	1	Rubber protection	Gummiskydd
0580	37	82 87 328		RH	1	Rubber protection	Gummiskydd
0590	39	82 35 178		(9223975)	4	Clip	Clip

15. Ch.nr -F6012209

16. Ch.nr F6012210-

17. Ch.-G6001697.

18. Ch.G6001698-

SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R6567

Page 508 08-049

2-D04

External details, glass
Other sealings, mud
guards


Utvändiga detaljer, glas,
Övriga tätningsslistor,
stänkskydd

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX




Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

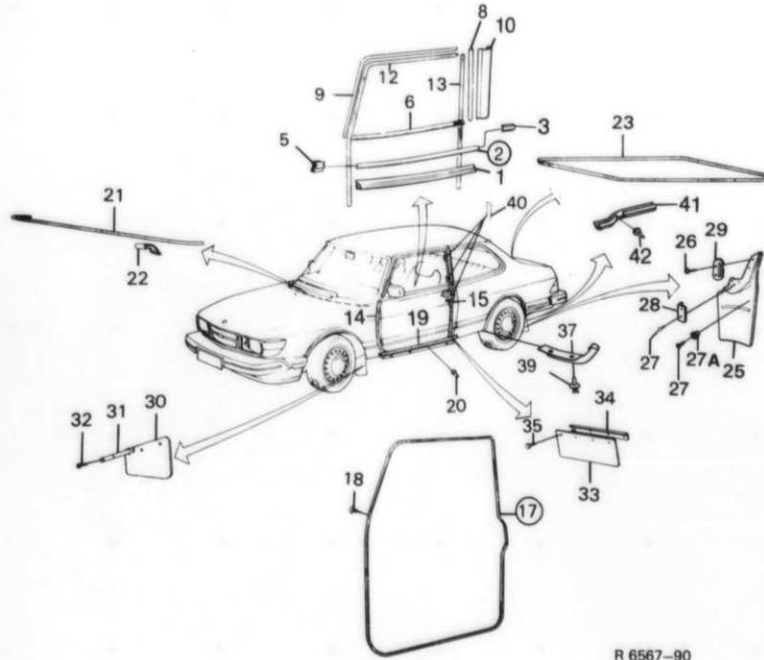

R 6567-90

Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
1300	40	84 06 142		1 COIL-50 M. (NO. 84 06 142)	X	Tape, double side adhesive	Tape, dubbelhäftande	5
0600	41	69 19 039		10) LH	1	Protective strip	Skyddsslist	3
0610	41	69 19 047		10) RH	1	Protective strip	Skyddsslist	3
0620	41	69 19 054		11)	2	Protective strip	Skyddsslist	3
0630	41	69 19 054		10)	10	Blind rivet	Blindnit	5
0640	42	79 61 634		10)				
0650								

10. For cars without rear mud guard
11. For cars with rear mud guard

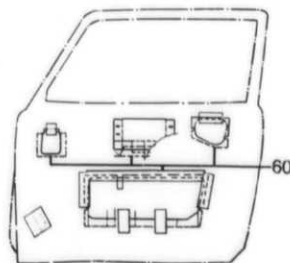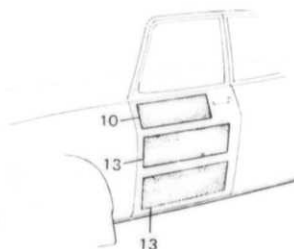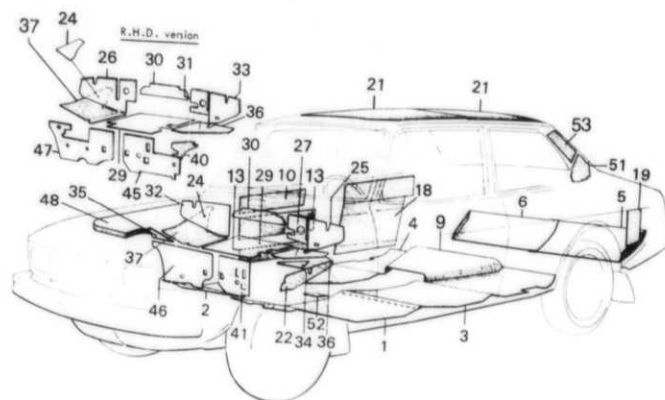

R 6568-90

2-D06

Upholstery interior
equipment
Insulation




Klädsel, inändig
utrustning
Isolering

MASTER INDEX

1400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0060	1	84 90 559		LH	1	Insul. mat. front floor	Isoleringsmatta, främre golv	6
0080	2	84 90 567		RH	1	Insul. mat. front floor	Isoleringsmatta, främre golv	6
0140	3	84 90 609		-1986, LH	1	Insul. mat. center floor	Isoleringsmatta, mittre golv	6
0300	3	96 85 702		1987-, LH	1	Insul. mat. center floor	Isoleringsmatta, mittre golv	6
0320	4	84 90 617		RH	1	Insul. mat. center floor	Isoleringsmatta, mittre golv	6
0330	5	94 77 209		-1986, LH	1	Insul. mat. luggage compartment	Isoleringsmatta, bagagerum	6
0460	5	96 81 339		1987-, LH	1	Insul. mat. luggage compartment	Isoleringsmatta, bagagerum	6
0480	6	94 77 217		-1986, RH	1	Insul. mat. luggage compartment	Isoleringsmatta, bagagerum	6
0540	6	96 81 347		1987-, RH	1	Insul. mat. luggage compartment	Isoleringsmatta, bagagerum	6
0560	8	84 90 625		FRONT	1	Insul. mat. tunnel	Isoleringsmatta, tunnel	6
0700	9	84 90 641		REAR	1	Insul. mat. tunnel	Isoleringsmatta, tunnel	6
0720	10	84 90 708		DOOR	2	Insul. board upper	Pappskiva övre, dörr	5
0730	13	84 90 716		DOOR	4	Insul. board center and lower	Pappskiva, mittre och nedre	5
0900	18	84 38 400		VALANCE	2	Insul. board	Pappskiva	6
0920	19	84 61 063		27), WITHOUT SUN ROOF	2	Insul. board, plate	Pappskiva, sidoplat	6
0980	21	84 38 376		28), WITHOUT SUN ROOF	2	Insul. mat. roof	Isoleringsmatta, tak	6
1000	21	97 57 691		28), WITHOUT SUN ROOF	5	Insul. mat. roof	Isoleringsmatta, tak	6
1060	21	97 57 691		LH, WITH SUN ROOF	1	Insul. mat. wheel housing	Isoleringsmatta, hjulhus	6
1080	22	84 76 558		RH	1	Insul. mat. wheel housing	Isoleringsmatta, hjulhus	6
1100						INSUL. MAT. DASH PANEL:	ISOLERINGSMATTOR, TORPED:	6
1180	24	94 35 686		4)	1	Insulation mat	Isoleringsmatta	6
1200	25	84 56 014		RHD	1	Insulation mat	Isoleringsmatta	6
1220	26	84 58 309			1	Insulation mat	Isoleringsmatta	6
1240	27	84 81 269		4)	1	Insulation mat	Isoleringsmatta	6
1260	29	94 92 257			1	Insulation mat	Isoleringsmatta	6
1280	30	84 72 946		RHD	1	Insulation mat	Isoleringsmatta	6
1300	31	84 81 269			1	Insulation mat	Isoleringsmatta	6
1320	32	84 56 022		RHD	1	Insulation mat	Isoleringsmatta	6
1340	33	84 56 014			1	Insulation mat	Isoleringsmatta	6
1360	36	84 76 855		RHD	1	Insulation mat	Isoleringsmatta	6
1380	37	94 35 694		4)	1	Insulation mat	Isoleringsmatta	6
1400	40	84 76 988		RHD	1	Insulation mat	Isoleringsmatta	6
1420	41	94 92 083			1	Insulation mat	Isoleringsmatta	6
1440	45	94 92 083		RHD	1	Insulation mat	Isoleringsmatta	6
1460	46	84 28 120			1	Insulation mat	Isoleringsmatta	6
1480	47	84 58 283		RHD	1	Insulation mat	Isoleringsmatta	6
1500	48	84 58 044		HOOD	1	Insulation mat	Isoleringsmatta	3
1520	51	84 28 211		LH, LOWER	1	Insulation mat	Isoleringsmatta	6
1540	51	84 28 237		RH, LOWER	1	Insulation mat	Isoleringsmatta	6
1560	52	84 30 575			2	Insulation mat	Isoleringsmatta	6
1580	53	84 28 203		LH, UPPER	1	Insulation mat	Isoleringsmatta	6
1600	53	84 28 229		RH, UPPER	1	Insulation mat	Isoleringsmatta	6
1620	60	97 46 272		FRONT DOOR	1	Kit, water protective	Sats, vattenavledande	5

4. Insul. mat off melting type
27. Ch. --B6007346
28. Ch. B6007347--

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

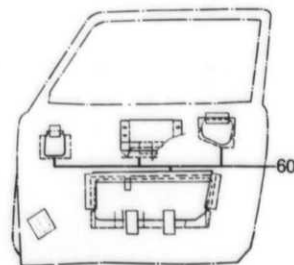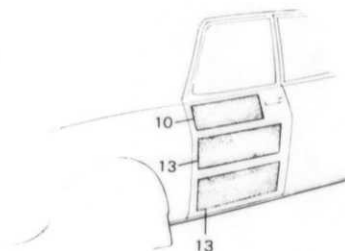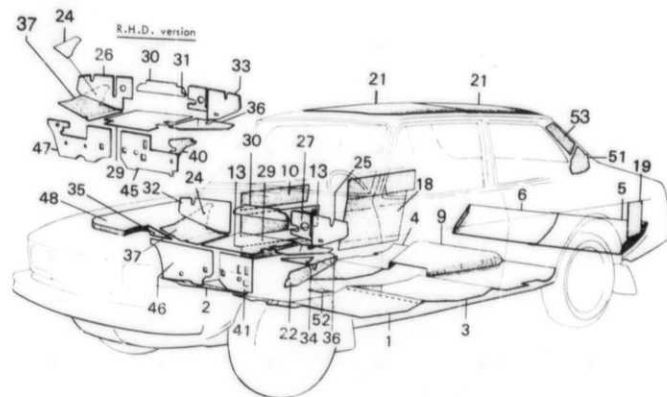

R 6568-90

2-D08

Upholstery interior
equipment
Insulation

Klädsel, invändig
utrustning
Isolering

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1400							
2901			see page 8-119, 2-F24		paper	papper	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D00
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20


2-D10

Upholstery, interior
equipment
Door and side trim -1985

Klädsel, invändig
utrustning
Dörr och sidklädsel -1985


MASTER INDEX

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1460							
0050	1 98 42 949		TRIM COLOUR C15	1	Door trim LH, brown	Dörrklädsel V, brun	6
0050	1 98 42 956			1	Door trim RH, brown	Dörrklädsel H, brun	6
0070							
0080	1 98 42 964		TRIM COLOUR C21	1	Door trim LH, yellow	Dörrklädsel V, gul	6
0090	1 98 42 972			1	Door trim RH, yellow	Dörrklädsel H, gul	6
0100							
0101	1 98 42 980		TRIM COLOUR C24	1	Door trim LH, blue	Dörrklädsel V, blå	6
0102	1 98 42 998			1	Door trim RH, blue	Dörrklädsel H, blå	6
0103							
0260	2 98 20 952		TRIM COLOUR C15	1	Side trim assy LH, brown	Sidklädsel kpl V, brun	6
0270				1	Side trim assy RH, brown	Sidklädsel kpl H, brun	6
0280	2 98 20 960						
0290							
0300							
0310	2 98 20 978		TRIM COLOUR C21	1	Side trim assy LH, yellow	Sidklädsel kpl V, gul	6
0320				1	Side trim assy RH, yellow	Sidklädsel kpl H, gul	6
0330	2 98 20 986						
0340							
0350							
0351	2 98 20 994		TRIM COLOUR C24	1	Side trim assy LH, blue	Sidklädsel kpl V, blå	6
0352				1	Side trim assy RH, blue	Sidklädsel kpl H, blå	6
0353	2 98 21 000						
0355							
0960	5 84 06 118			26	Clip, door trim	Clip, dörrklädsel	5
0970	6 84 34 078			20	Sleeve, door trim	Hylsa, dörrklädsel	5
0980	7 84 24 442			6	Bushing, door trim	Bussning, dörrklädsel	5
0981	8 84 52 898			12	Quick nut	Snabbmutter	3
0982	9 84 73 406		BROWN	12	Quick screw, side trim	Snabbskruv, sidklädsel	5
0983							
0984	9 97 12 845		YELLOW	12	Quick screw, side trim	Snabbskruv, sidklädsel	5
0985							
0986	9 98 08 106		BLUE	12	Quick screw, side trim	Snabbskruv, sidklädsel	5
0987							
0988	10 79 22 305			6	Screw	Skruv	5
1030	12 79 67 581			6	Screw	Skruv	5
1040	13 94 65 816		BROWN	6	Washer	Bricka	5
1050	13 97 11 961		YELLOW	6	Washer	Bricka	5
1061	13 97 42 149		BLUE	6	Washer	Bricka	5

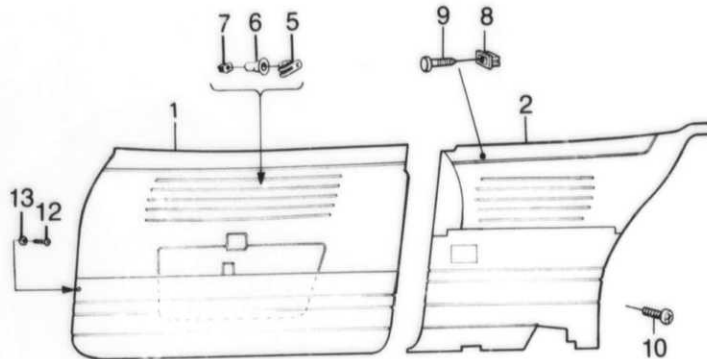

R 6569-90

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, steering	1-L02
7	Suspension, wheels	2-A02
8	Body	2-B02
9	Tool, labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

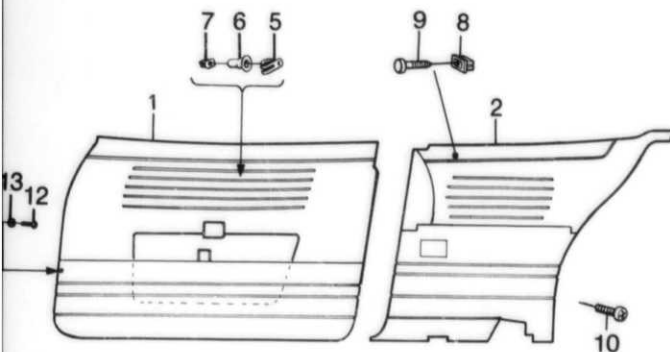

R 7369-90

2-D12


Upholstery, interior
equipment
Door and side trim 1986-

Klädsel, inändig
utrustning
Dörr och sidklädsel 1986-

1470	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S	L
0020	1	98 42 964			TRIM COLOUR A 11	1	Door trim LH, yellow	Dörrklädsel V, gul	6	
0040	1	98 42 972				1	Door trim RH, yellow	Dörrklädsel H, gul	6	
0060										
0080	1	98 42 949			TRIM COLOUR B 11	1	Door trim LH, brown	Dörrklädsel V, brun	6	
0100	1	98 42 956				1	Door trim RH, brown	Dörrklädsel H, brun	6	
0120										
0140	1	98 73 449			TRIM COLOUR C 11	1	Door trim LH, red	Dörrklädsel V, röd	6	
0160	1	98 73 456				1	Door trim RH, red	Dörrklädsel H, röd	6	
0180										
0200	1	98 42 980			TRIM COLOUR D 11	1	Door trim LH, blue	Dörrklädsel V, blå	6	
0220	1	98 42 998				1	Door trim RH, blue	Dörrklädsel H, blå	6	
0240										
0260	2	98 20 978			TRIM COLOUR A 11	1	Side trim assy LH, yellow	Sidklädsel kpl V, gul	6	
0280						1	Side trim assy RH, yellow	Sidklädsel kpl H, gul	6	
0300	2	98 20 986								
0320										
0340										
0360	2	98 20 952			TRIM COLOUR B 11	1	Side trim assy LH, brown	Sidklädsel kpl V, brun	6	
0380						1	Side trim assy RH, brown	Sidklädsel kpl H, brun	6	
0400	2	98 20 960								
0420										
0440										
0460	2	98 73 555			TRIM COLOUR C 11	1	Side trim assy LH, red	Sidklädsel kpl V, röd	6	
0480						1	Side trim assy RH, red	Sidklädsel kpl H, röd	6	
0500	2	98 73 563								
0520										
0540										
0560	2	98 20 994			TRIM COLOUR D 11	1	Side trim assy LH, blue	Sidklädsel kpl V, blå	6	
0580						1	Side trim assy RH, blue	Sidklädsel kpl H, blå	6	
0600	2	98 21 000								
0620										
0640										
0800	5	84 06 118				26	Clip, door trim	Clip, dörrklädsel	5	
0820	6	84 34 078				20	Sleeve, door trim	Hyfsa, dörrklädsel	5	
0840	7	84 24 442				6	Bushing, door trim	Bussning, dörrklädsel	5	
0860	8	84 52 898				12	Quick nut	Snabbmutter	3	
0880	9	97 12 845			YELLOW	12	Quick screw, side trim	Snabbskruv, sidklädsel	5	
0900										
0920	9	94 73 406			BROWN	12	Quick screw, side trim	Snabbskruv, sidklädsel	5	
0940										
0960	9	97 05 906			RED	12	Quick screw, side trim	Snabbskruv, sidklädsel	5	
0980										
1000	9	98 08 106			BLUE	12	Quick screw, side trim	Snabbskruv, sidklädsel	5	
1020										
1040						6	Screw	Skruv	5	
1060	12	79 22 305				6	Screw	Skruv	5	
1080	13	79 67 581			YELLOW	6	Washer	Bricka	5	
1100	13	97 11 961				6	Washer	Bricka	5	
1120	13	94 65 816			BROWN	6	Washer	Bricka	5	
1140	13	97 04 883			RED	6	Washer	Bricka	5	
	13	97 42 149			BLUE	6	Washer	Bricka	5	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, steering	1-L02
7	Suspension, wheels	2-A02
8	Body	2-B02
9	Tool, labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

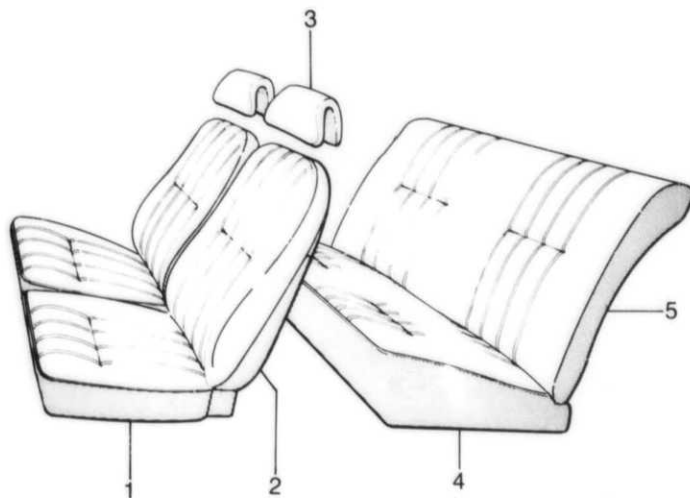

R 6285-90

2-D14


Upholstery, interior
equipment
Covers - 1985

Klädsel, inändig
utrustning
Klädselpåsar - 1985

MASTER INDEX

1480	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0460	1	98 43 624		TRIM COLOUR C15	2	Upholstery, seat, front seat, brown	Sitspåse, framstol, brun	6
0470	2	98 43 665			2	Upholstery, back rest front seat, brown	Ryggpåse, framstol, brun	6
0480	3	98 43 707			2	Upholstery, neck guard, brown	Klädselpåse, nack- skydd, brun	6
0500	4	98 44 341			1	Upholstery, seat, rear seat, brown	Sitspåse, baksäte, brun	6
0510	5	98 44 424			1	Upholstery, back rest rear seat, brown	Ryggpåse, baksäte, brun	6
0520								
0530								
0540								
0550								
0560	1	98 43 632		TRIM COLOUR C21	2	Upholstery seat front seat, yellow	Sitspåse, framstol gul	6
0891	2	98 43 673			2	Upholstery, back rest front seat, yellow	Ryggpåse, framstol, gul	6
0900	3	98 43 715			2	Upholstery, neck guard, yellow	Klädselpåse, nack- skydd, gul	6
0920	4	98 44 358			1	Upholstery, seat, rear seat, yellow	Sitspåse, baksäte, gul	6
0930	5	98 44 432			1	Upholstery, back rest rear seat, yellow	Ryggpåse, baksäte, gul	6
0940								
0950								
0960								
0970								
0980								
0990	1	98 43 640		TRIM COLOUR C24	2	Upholstery, seat, front seat, blue	Sitspåse, framstol blå	6
1000	2	98 43 681			2	Upholstery, back rest front seat, blue	Ryggpåse, framstol blå	6
1010	3	98 43 723			2	Upholstery, neck guard, blue	Klädselpåse, nack- skydd, blå	6
1020	4	98 44 366			1	Upholstery, seat, rear seat, blue	Sitspåse, baksäte, blå	6
1030	5	98 44 440			1	Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå	6
1040								
1050								
1060								
1070								
1080								
1090								
1100								
1190		98 34 318		TRIM COLOUR C15	X	Cloth, brown	Tyg, brun	6
1222		98 34 342		TRIM COLOUR C21	X	Cloth, yellow	Tyg, gul	6
1224		98 34 375		TRIM COLOUR C24	X	Cloth, blue	Tyg, blå	6
1225								
1240		98 34 441		TRIM COLOUR C15	X	Coated fabric, brown	Vävpåst, brun	6
1262		97 41 018		TRIM COLOUR C21	X	Coated fabric, yellow	Vävpåst, gul	6
1264		98 34 458		TRIM COLOUR C24	X	Coated fabric, blue	Vävpåst, blå	6
1265								
1283		94 71 780		BROWN	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1284								
1310		97 08 561		YELLOW	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1320								
1330		97 41 042		BLUE	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1340								
1350								
1360								
1370								
1380								
1390								
1400								
1410								
1420								
1430								
1440								
1450								
1460								
1470								
1480								
1490								
1500								
1510								
1520								

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

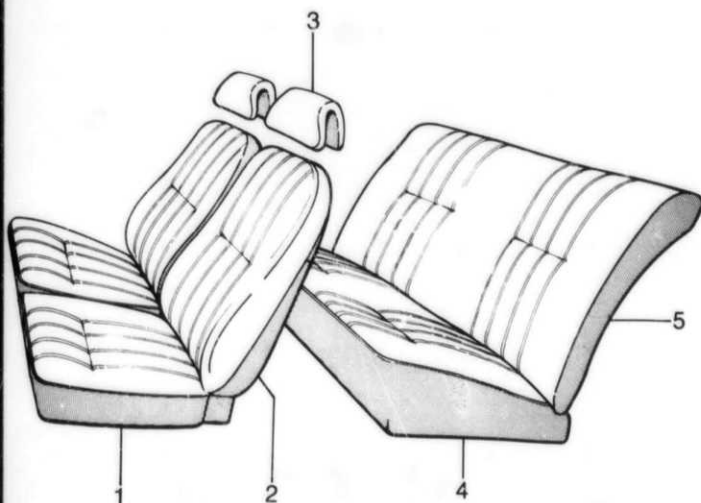

R 7370-90

2-D16

Upholstery, interior
equipment
Covers 1986

Klädsel, invändig
utrustning
Klädselpåsar 1986

MASTER INDEX

1490	Pos	Part No./Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020	1	98 43 632	TRIM COLOUR A 11	2	Upholstery, seat front seat, yellow	Sittspåse, framstol, gul
0040	2	98 43 673		2	Upholstery, back rest front seat, yellow	Ryggpåse, framstol gul
0060	3	98 43 715		2	Upholstery, neck guard, yellow	Klädselpåse, nack- skydd, gul
0100	4	98 44 358		1	Upholstery, seat, rear seat, yellow	Sittspåse, baksäte, gul
0120	5	98 44 432		1	Upholstery, back rest rear seat, yellow	Ryggpåse, baksäte, gul
0140						
0160						
0180						
0200						
0220						
0240	1	98 66 674	TRIM COLOUR B 11	2	Upholstery, seat, front seat, brown	Sittspåse, framstol, brun
0260	2	98 66 682		2	Upholstery, back rest front seat, brown	Ryggpåse, framstol, brun
0280	3	98 43 707		2	Upholstery, neck guard, brown	Klädselpåse, nack- skydd, brun
0300	4	98 72 490		1	Upholstery, seat, rear seat, brown	Sittspåse, baksäte, brun
0320	5	98 72 540		1	Upholstery, back rest rear seat, brown	Ryggpåse, baksäte, brun
0340						
0360						
0380						
0400						
0420						
0440						
0460	1	98 65 791	TRIM COLOUR C 11	2	Upholstery, seat, front seat, red	Sittspåse, framstol, röd
0480	2	98 66 617		2	Upholstery, back rest front seat, red	Ryggpåse, framstol, röd
0500	3	98 67 235		2	Upholstery, neck guard, red	Klädselpåse, nack- skydd, röd
0520	4	98 72 508		1	Upholstery, seat, rear seat, red	Sittspåse, baksäte, röd
0540	5	98 72 557		1	Upholstery, back rest rear seat, red	Ryggpåse, baksäte, röd
0560						
0580						
0600						
0620						
0640						
0660						
0680	1	98 43 640	TRIM COLOUR D 11	2	Upholstery, seat, front seat, blue	Sittspåse, framstol, blå
0700	2	98 43 681		2	Upholstery, back rest front seat, blue	Ryggpåse, framstol, blå
0720	3	98 43 723		2	Upholstery, neck guard, blue	Klädselpåse, nack- skydd, blå
0740	4	98 44 366		1	Upholstery, seat, rear seat, blue	Sittspåse, baksäte, blå
0760	5	98 44 440		1	Upholstery, back rest rear seat, blue	Ryggpåse, baksäte, blå
0780						
0800						
0820						
0840						
0860						
0880	B					

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-D18

Upholstery, interior
equipment
Covers 1986


Klädsel, invändig
utrustning
Klädselpåsar 1986

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system, Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly, Steering	1-L02
7 Suspension, Wheels	2-A02
8 Body	2-B02
9 Tool, Labels	2-G02
10 Numerical register	2-H02
8 GROUP INDEX	
Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1490							
1020	98 34 342		TRIM COLOUR A11	X	Cloth, yellow	Tyg, gul	6
1040	98 34 318		TRIM COLOUR B11	X	Cloth, brown	Tyg, brun	6
1060	98 50 900		TRIM COLOUR C11	X	Cloth, red	Tyg, röd	6
1080	98 34 375		TRIM COLOUR D11	X	Cloth, blue	Tyg, blå	6
1100							
1120	97 41 018		TRIM COLOUR A11	X	Coated fabric, yellow	Vävpplast, gul	6
1140	98 57 475		TRIM COLOUR B11	X	Coated fabric, brown	Vävpplast, brun	6
1160	97 41 489		TRIM COLOUR C11	X	Coated fabric, red	Vävpplast, röd	6
1180	98 34 458		TRIM COLOUR D11	X	Coated fabric, blue	Vävpplast, blå	6
1200							
1220	97 08 561		YELLOW	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1240	98 57 624		BROWN	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1260							
1280	73 77 344		RED	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1300							
1320							
1340	97 41 042		BLUE	X	Plastic strip for covers	Kederlist för klädselpåsar	6
1360							
1380							
1520							
1540			THE UPHOLSTERY ARE EXPECTED TO BE			KLÄDSLARNÄ BERÄKNAS FINNAS I LAGER	
1560			KEPT IN STOCK AT			MINST TVÅ ÅR EF-	
1580			LEAST TWO YEARS			TER DET VI SLUTAT	
1600			AFTER WE HAVE			MONTERA DEM I	
1620			LEASED MOUNTING			SERIEPRODUKTIONEN.	
1640			THE PARTICULAR UP-			TYG, PLAST OCH	
1660			HOLSTERY IN THE			KEDER KOMMER DOCK	
1680			SERIAL PRODUKTION.			ATT LAGERFÖRAS SÄ-	
1700			CLOTH, COATED FA-			SOM METERVÄRÄ.	
1720			BRICS AND PLASTIC				
1740			STRIPS, HOWEVER,				
1760			WILL STILL BE				
1780			STOCKED AND AVAIL-				
1800			ABLE FOR PURCHASE				
1820			BY THE METER.				

R 7370-90

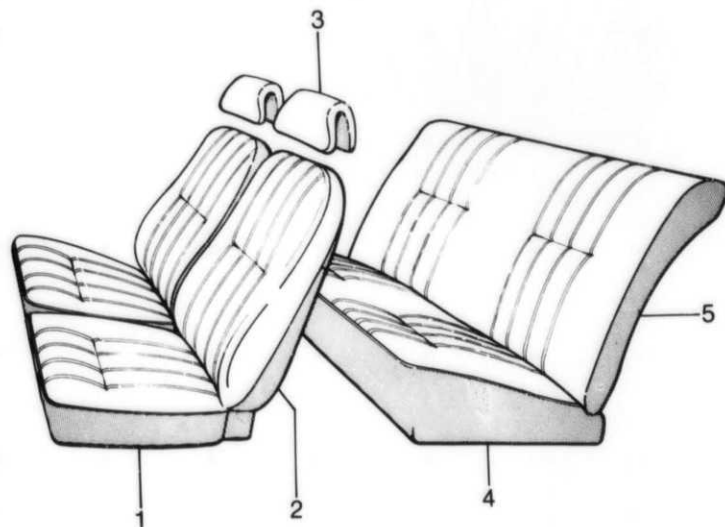

R8373-90

2-D20

Upholstery, interior
equipment
Covers 1987

Klädsel, inändig


utrustning

Klädselpåsar 1987

MASTER INDEX

1495	Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020	1	96 17 549	TRIM COLOUR A11	2	Upholstery, seat	Sitspåse, framstol,
0040					front seat, yellow	gul
0060	2	96 17 598		2	Upholstery, back rest	Ryggpåse, framstol,
0080					front seat, yellow	gul
0100	3	98 43 715		2	Upholstery, neck	Klädselpåse, nack-
0120					guard, yellow	skydd, gul
0140	4	96 11 831		1	Upholstery, seat,	Sitspåse, baksäte,
0160					rear seat, yellow	gul
0180	5	96 12 136		1	Upholstery, back rest	Ryggpåse, baksäte,
0200					rear seat, yellow	gul
0220						
0240	1	96 17 523	TRIM COLOUR B11	2	Upholstery, seat,	Sitspåse, framstol,
0260					front seat, brown	brun
0280	2	96 17 572		2	Upholstery, back rest	Ryggpåse, framstol,
0300					front seat, brown	brun
0320	3	98 43 707		2	Upholstery, neck	Klädselpåse, nack-
0340					guard, brown	skydd, brun
0360	4	96 11 815		1	Upholstery, seat,	Sitspåse, baksäte,
0380					rear seat, brown	brun
0400	5	96 12 110		1	Upholstery, back rest	Ryggpåse, baksäte,
0420					rear seat, brown	brun
0440						
0460	1	96 17 531	TRIM COLOUR C11	2	Upholstery, seat,	Sitspåse, framstol,
0480					front seat, red	röd
0500	2	96 17 580		2	Upholstery, back rest	Ryggpåse, framstol,
0520					front seat, red	röd
0540	3	98 67 235		2	Upholstery, neck	Klädselpåse, nack-
0560					guard, red	skydd, röd
0580	4	96 11 823		1	Upholstery, seat,	Sitspåse, baksäte,
0600					rear seat, red	röd
0620	5	96 12 128		1	Upholstery, back rest	Ryggpåse, baksäte,
0640					rear seat, red	röd
0660						
0680	1	96 17 556	TRIM COLOUR D11	2	Upholstery, seat,	Sitspåse, framstol,
0700					front seat, blue	blå
0720	2	96 17 606		2	Upholstery, back rest	Ryggpåse, framstol,
0740					front seat, blue	blå
0760	3	96 16 731		2	Upholstery, neck	Klädselpåse, nack-
0780					guard, blue	blå
0800	4	96 11 849		1	Upholstery, seat,	Sitspåse, baksäte,
0820					rear seat, blue	blå
0840	5	96 12 144		1	Upholstery, back rest	Ryggpåse, baksäte,
0860					rear seat, blue	blå
0880						
1000		98 34 342	TRIM COLOUR A11	X	Cloth, yellow	Tyg, gul
1020		98 34 318	TRIM COLOUR B11	X	Cloth, brown	Tyg, brun
1040		98 50 900	TRIM COLOUR C11	X	Cloth, red	Tyg, röd
1060		98 34 375	TRIM COLOUR D11	X	Cloth, blue	Tyg, blå
1080						
1100		97 41 018	TRIM COLOUR A11	X	Coated fabric, yellow	Vävpplast, gul
1120		98 57 475	TRIM COLOUR B11	X	Coated fabric, brown	Vävpplast, brun
1140		97 41 489	TRIM COLOUR C11	X	Coated fabric, red	Vävpplast, röd
1160		98 34 458	TRIM COLOUR D11	X	Coated fabric, blue	Vävpplast, blå
1180						
1220		97 28 676	YELLOW	X	Plastic strip for	Kederlist för
1240					covers	klädselpåsar
1260		98 63 515	BROWN	X	Plastic strip for	Kederlist för
1280					covers	klädselpåsar
1300		98 07 975	RED	X	Plastic strip for	Kederlist för
1320					covers	klädselpåsar
1340		96 92 732	BLUE	X	Plastic strip for	Kederlist för
1360					covers	klädselpåsar
1380						
1500					THE UPHOLSTERY ARE	KLÄDSLARNA BERÄKNAS
1520					EXPECTED TO BE	FINNAS I LAGER

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

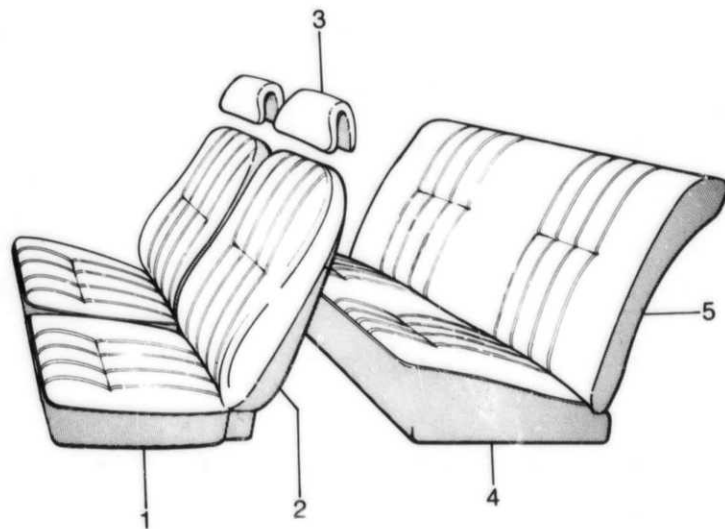

R8373-90

2-D22

Upholstery, interior
equipment
Covers 1987

Klädsel, inändig
utrustning
Klädselpåsar 1987


Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
1495					KEPT IN STOCK AT	MINST TVÅ ÅR EF-	
1540					LEAST TWO YEARS	TER DET VI SLUTAT	
1560					AFTER WE HAVE	MONTERA DEM I	
1580					LEASED MOUNTING	SERIEPRODUKTIONEN	
1600					THE PARTICULAR UP-	TYG, PLAST OCH	
1620					HOLSTERY IN THE	KEDER KOMMER DOCK	
1640					SERIAL PRODUKTION	ATT LAGERFÖRAS SÅ-	
1660					CLOTH, COATED FA-	SOM METERVAPA	
1680					BRICS AND PLASTIC		
1700					STRIPS, HOWEVER,		
1720					WILL STILL BE		
1740					STOCKED AND AVAIL-		
1760					ABLE FOR PURCHASE		
1780					BY THE METER		
1800							

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

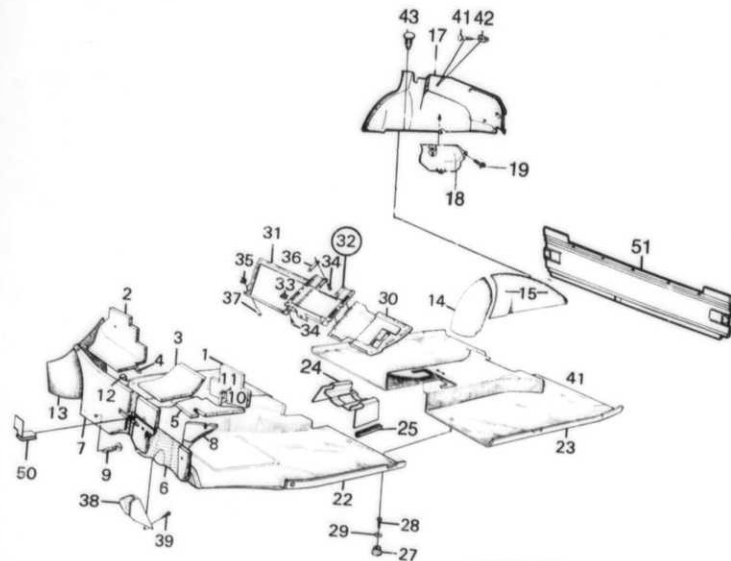

R 8224-90

2-D24

Upholstery, interior
equipment
Interior lining, carpets

Klädsel, invändig
utröstning
Hjulhusklädsel, mattor mm


MASTER INDEX

1625	Pos	Part No./Art nr	K	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S
0020	1	84 28 385	LH		1	Dash panel lining, upper part	Torpedklädsel, övre del	6
0030								
0040	2	84 57 764	RH		1	Dash panel lining, upper part	Torpedklädsel, övre del	6
0050								
0060	2	84 58 507	RH, RHD		1	Dash panel lining, upper part	Torpedklädsel, övre del	6
0070								
0080	3	94 92 224	CENTRE		1	Dash panel lining	Torpedklädsel	6
0090	3	94 92 331	CENTRE, RHD		1	Dash panel lining	Torpedklädsel	6
0100	4	84 13 990			1	Washer	Bricka	6
0110	5	84 7 475	LH		1	Dash panel lining	Torpedklädsel	6
0120	6	94 92 091	LH, LOWER PART		1	Dash panel lining	Torpedklädsel	6
0130	7	94 92 182	RH, LOWER PART		1	Dash panel lining	Torpedklädsel	6
0140	7	94 92 299	RH, RHD, LOWER PART		1	Dash panel lining	Torpedklädsel	6
0150	8	84 76 442	LH, LOWER PART		1	Dash panel lining	Torpedklädsel	6
0160	8	84 77 028	LH, RHD, LOWER PART		1	Dash panel lining	Torpedklädsel	6
0170	9	84 37 048			2	Retainer	Fäste	5
0180	10	84 77 317			1	Retainer, lining	Klädsel fäste	5
0190	11	79 22 891			1	Screw	Skruv	5
0200	12	84 77 507			1	Clip	Clip	5
0210	13	98 19 558		1985, TRIM COLOUR C15	1	Lining, front wheel housing, LH brown	Klädsel, främre hjulhus V brun	6
0220								
0230	13	98 73 738		1986-, TRIM COLOUR B11	1	Lining, front wheel housing, LH brown	Klädsel, främre hjulhus, V brun	6
0240								
0250	13	98 19 566		1985, TRIM COLOUR C15	1	Lining, front wheel housing, RH brown	Klädsel, främre hjulhus H brun	6
0260								
0270	13	98 73 746		1986-, TRIM COLOUR B11	1	Lining, front wheel housing, RH brown	Klädsel, främre hjulhus, H brun	6
0280								
0290	13	98 47 799		1985, TRIM COLOUR C21	1	Lining, front wheel housing, LH yellow	Klädsel, främre hjulhus V gul	6
0300								
0310	13	98 47 799		1986-, TRIM COLOUR A11	1	Lining, front wheel housing, LH yellow	Klädsel, främre hjulhus, V gul	6
0320								
0330	13	98 47 807		1985, TRIM COLOUR C21	1	Lining, front wheel housing, RH yellow	Klädsel, främre hjulhus H gul	6
0340								
0350	13	98 47 807		1986-, TRIM COLOUR A11	1	Lining, front wheel housing, RH yellow	Klädsel, främre hjulhus, H gul	6
0360								
0370	13	98 09 898		1985, TRIM COLOUR C24	1	Lining front wheel housing, LH blue	Klädsel, främre hjulhus V blå	6
0380								
0390	13	98 09 898		1986-, TRIM COLOUR D11	1	Lining, front wheel housing, LH blue	Klädsel, främre hjulhus, V blå	6
0400								
0410	13	98 09 906		1985, TRIM COLOUR C24	1	Lining front wheel housing, RH blue	Klädsel, främre hjulhus H blå	6
0420								
0430	13	98 09 906		1986-, TRIM COLOUR D11	1	Lining, front wheel housing, RH blue	Klädsel, främre hjulhus, H blå	6
0440								
0450	13	98 19 475		1986-, TRIM COLOUR C11	1	Lining, front wheel housing, LH red	Klädsel, främre hjulhus, V röd	6
0460								
0470	13	98 19 483		1986-, TRIM COLOUR C11	1	Lining, front wheel housing, RH red	Klädsel, främre hjulhus, H röd	6
0480								
0490								
0500								
0510	14	84 68 175	LH, FRONT PART		1	Rear wheel housing lining	Bakre hjulhusklädsel	6
0520								
0530	14	84 68 183	RH, FRONT PART		1	Rear wheel housing lining	Bakre hjulhusklädsel	6
0540								
0550	15	84 68 191	LH, REAR PART		1	Rear wheel housing lining	Bakre hjulhusklädsel	6
0560								
0570	15	84 68 209	RH, REAR PART		1	Rear wheel housing lining	Bakre hjulhusklädsel	6
0580								
0590	17	98 09 732	LH		1	Side-lining, luggage compartment	Sidklädsel, bagagerum	6
0600								
0610	17	98 09 740	RH		1	Side-lining, luggage compartment	Sidklädsel, bagagerum	6
0620								
0630	18	94 64 843			1	Protective cover	Skyddsskäpa	5
0640	19	79 22 420			3	Screw	Skruv	5
0650	22	98 19 541		1985, TRIM COLOUR C15	1	Carpet, front, brown	Matta, främre, brun	6
0660	22	98 73 720		1986-, TRIM COLOUR B11	1	Carpet, front, brown	Matta, främre, brun	6

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

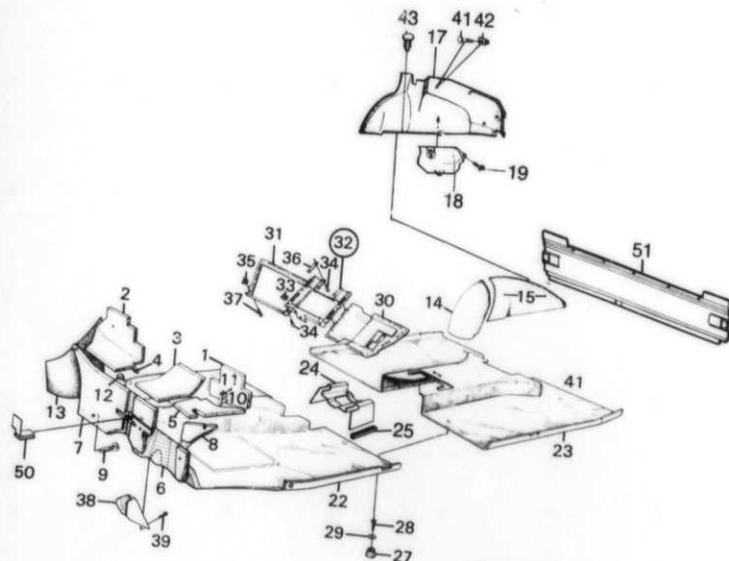

R 8224-90

2-E02


Upholstery, interior
equipment
Interior lining, carpets

Klädsel, inändig
utrustning
Hjulhusklädsel, mattor mm

MASTER INDEX

1625	Pos	Part No/Art nr	K S	Notes/ Anmärkning	Qty/ Antal	Description	Benämning
0670	22	98 19 574		-1985, TRIM COLOUR C15	1	Carpet, front, brown RHD	Matta, främre, brun RHD
0680	22	98 47 773		-1985, TRIM COLOUR C21	1	Carpet, front, yellow	Matta, främre, gul
0690	22	98 47 773		1986-, TRIM COLOUR A11	1	Carpet, front, yellow	Matta, främre, gul
0700	22	98 47 781		-1985, TRIM COLOUR C21	1	Carpet, front, yellow RHD	Matta, främre, gul RHD
0710	22	98 47 781		1986-, TRIM COLOUR A11	1	Carpet, front, yellow RHD	Matta, främre, gul RHD
0720	22	98 09 872		-1985, TRIM COLOUR C24	1	Carpet, front, blue	Matta, främre, blå
0730	22	98 09 872		1986-, TRIM COLOUR D11	1	Carpet, front, blue	Matta, främre, blå
0740	22	98 09 880		-1985, TRIM COLOUR C24	1	Carpet, front, blue RHD	Matta, främre, blå RHD
0750	22	98 09 880		1986-, TRIM COLOUR D11	1	Carpet, front, blue RHD	Matta, främre, blå RHD
0760	22	98 19 491		1986-, TRIM COLOUR C11	1	Carpet, front, red	Matta, främre, röd
0770	23	98 19 582		-1985, TRIM COLOUR C15	1	Carpet, rear, brown	Matta, bakre, brun
0780	23	98 73 704		1986-, TRIM COLOUR B11	1	Carpet, rear, brown	Matta, bakre, brun
0790	23	98 47 914		-1985, TRIM COLOUR C21	1	Carpet, rear, yellow	Matta, bakre, gul
0800	23	98 47 914		1986-, TRIM COLOUR A11	1	Carpet, rear, yellow	Matta, bakre, gul
0810	23	98 09 856		-1985, TRIM COLOUR C24	1	Carpet, rear, blue	Matta, bakre, blå
0820	23	98 09 856		1986-, TRIM COLOUR D11	1	Carpet, rear, blue	Matta, bakre, blå
0830	23	98 19 517		1986-, TRIM COLOUR C11	1	Carpet, rear, red	Matta, bakre, röd
0840	24	97 23 735			1	Bracket	Konsol
0850	25	82 62 974			1	Protective strip	Skyddslinje
0860	27	73 46 232			6	Carpet retainer	Mattfäste
0870	28	79 22 206			6	Screw	Skruv
0880	29	70 88 073			4	Washer	Bricka
0890	30	84 76 251		LH	1	Trim screen	Skärm
0900	30	84 76 319		LH, RHD	1	Trim screen	Skärm
0910	31	84 22 362		RH	1	Trim screen	Skärm
0920	31	84 26 306		RH, RHD	1	Trim screen	Skärm
0930	32	84 22 370		CENTRE	1	Trim screen	Skärm
0940	33	84 26 264			4	Clip	Clip
0950	34	84 26 892			4	Screw	Skruv
0960	35	73 54 871			2	Clip	Clip
0970	36	84 26 447			2	Plate nut	Plåtmutter
0980	37	79 67 581			13	Screw	Skruv
0990	38	84 31 942		RHD	1	Cover, throttle control damper	Kåpa, gasreglagedämpare
1000	41	94 64 926			9	Quick screw	Snabbskruv
1010	42	84 52 898			9	Quick screw	Snabbskruv
1020	43	84 83 893			5	Clip	Clip
1030	50	94 21 421			1	Clip	Clip
1040	51	96 15 493		1986-	1	Cloth, rear panel	Klädsel, bakstam
1050							
1060							
1070							
1080							
1090							
1100							

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

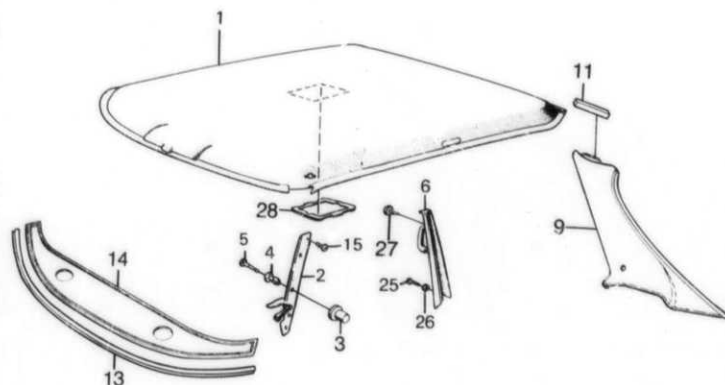

R 9300-90

2-E04

Upholstery, interior
equipment
Headlining etc

Klädsel, invändig
utrustning
Takklädsel etc

1650	Pos	Part No/Art nr	K	S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S	L
0080	1	98 48 474			-1986	1	Headlining	Takklädsel	6	
0090	1	98 63 226			1987-	1	Headlining	Takklädsel	6	
0100	1	98 48 508			-1986, SUN ROOF	1	Headlining	Takklädsel	6	
0110	1	98 63 127			1987-, SUN ROOF	1	Headlining	Takklädsel	6	
0310	2	84 99 535			LH	1	Upholstery, winds-	Stötskydd, vindrute-	6	
0312							ield pillar	stolpe		
0314	2	84 99 543			RH	1	Upholstery, winds-	Stötskydd, vindrute-	6	
0316							ield pillar	stolpe		
0320	3	82 77 667				4	Sleeve	Hylsa	5	
0340	4	98 41 925			(8476061)	4	Rivet	Nit	5	
0360	5	98 41 933			(8476079)	4	Tap	Tapp	5	
0460	6	98 51 403			LH	1	Upholstery, door	Stötskydd, dörrstolpe	6	
0480							pillar			
0500	6	98 51 395			RH	1	Upholstery, door	Stötskydd, dörrstolpe	6	
0520							pillar			
0980	9	98 36 685			LH	1	Upholstery	Stötskydd	6	
1000	9	98 36 693			RH	1	Upholstery	Stötskydd	6	
1460	11	83 28 817				2	Strip	List	5	
1560	13	94 38 441				1	Weatherstrip	Tätningsslist	4	
1580	14	84 50 900				1	Lining, windshield	Klädsel, vindrutebalk	6	
1600							member			
1660	15	84 08 882				4	Screw	Skruv	5	
2060	25	84 10 961				2	Screw	Skruv	5	
2080	26	84 13 429				2	Washer	Bricka	5	
2100	27	84 26 199				2	Screw	Skruv	5	
2110	28	97 56 974			1987-	1	Edge protection	Kantskydd	6	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8	GROUP INDEX	
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-E06


Upholstery, interior equipment, touch up paint
Front seats Part 1

Klädsel, invändig utrustning, bättringsfärg
Stolar Del 1

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
5	Main body	2-B08
5	Instrument panel	2-B24
5	Hood, front, fenders	2-C04
5	Doors, trunk lid	2-C10
5	External details, glass, sealings	2-C20
5	Upholstery, interior equipment and touch-up paint	2-D06
5	Heating and ventilation system	2-F10
5	Bumpers	2-F16
5	Complete sets	2-F20

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/Ansl	Description	Benämning
1780					
0020	1 37 45 472	2), LH	1	Seat assy	Stol kpl
0030	1 97 45 605	2), RH	1	Seat assy	Stol kpl
0040	1 97 45 613	2), LH, RHD	1	Seat assy	Stol kpl
0050	1 97 45 480	2), RH, RHD	1	Seat assy	Stol kpl
0340	2 94 56 856		1	Seat cushion	..Sittdyna
0350	3 96 88 458	12) (9722992)	1	Back cushion	..Ryggdyna
0360	3 98 57 749	13)	1	Back cushion	..Ryggdyna
0370	4 85 93 014		1	Electric pad, back cushion	..El värmedyna rygg
0380					
0410	5 85 93 006	-1986	1	Electric pad, seat cushion	..El värmedyna sits
0420					
0430	5 95 60 319	1987-	1	Electric pad, seat cushion	..El värmedyna sits
0440					
0510	6 95 56 358	-1986	1	Thermostat	..Termostat
0520	6 95 24 745	1987-	1	Thermostat	..Termostat
0530	7 97 18 511	2)	1	Neck guard assy	..Nackskydd kpl
0570	8 98 09 690		1	Body	..Stomme
0580	9 94 59 868		2	Yoke	..Bygel
0590	10 94 59 975		4	U-clip	..U-clip
0600	11 97 95 949		1	Guide sleeve	..Styrhylsa
0615	12 97 96 848	(9457557)	1	Spring	..Fjäder
0620	13 79 74 348		1	Screw	..Skruv
0650	16 97 26 795		X	Upholstery bow	..Klädselbåge
0655	17 94 20 332	12)	X	Wire yoke	..Trådbygel
0660	17 94 25 240	13)	X	Wire yoke	..Trådbygel
0670	18 94 21 165	12)	X	Clamp	..Klamma
0675	18 70 90 640	13)	X	Clamp	..Klamma
0678	19 97 22 885	12)	X	Wire yoke	..Trådbygel
0680	19 94 16 181	13)	X	Wire yoke	..Trådbygel
0685	20 97 03 232	12)	X	Bushing	..Bussning
0690	20 70 90 640	13)	X	Clamp	..Klamma
0700	21 84 00 350		10	Clip	..Clip
0710	22 94 25 240	12)	X	Trim rod	..Trådrän
0720	22 98 49 530	13)	X	Trim rod	..Trådrän

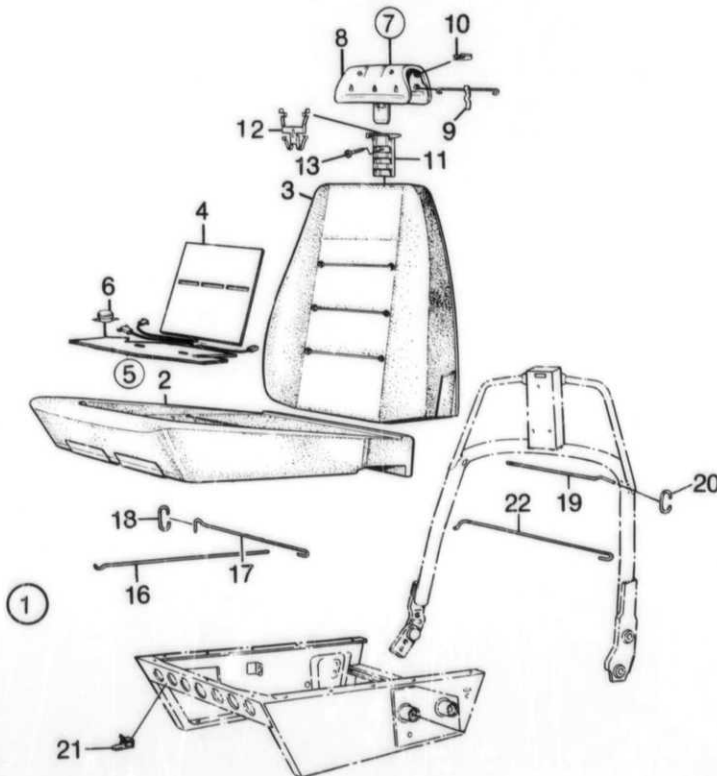

R 9288-90

2. State upholstery colour and car colour code
12. Ch. F6006850
13. Ch. F6006851-

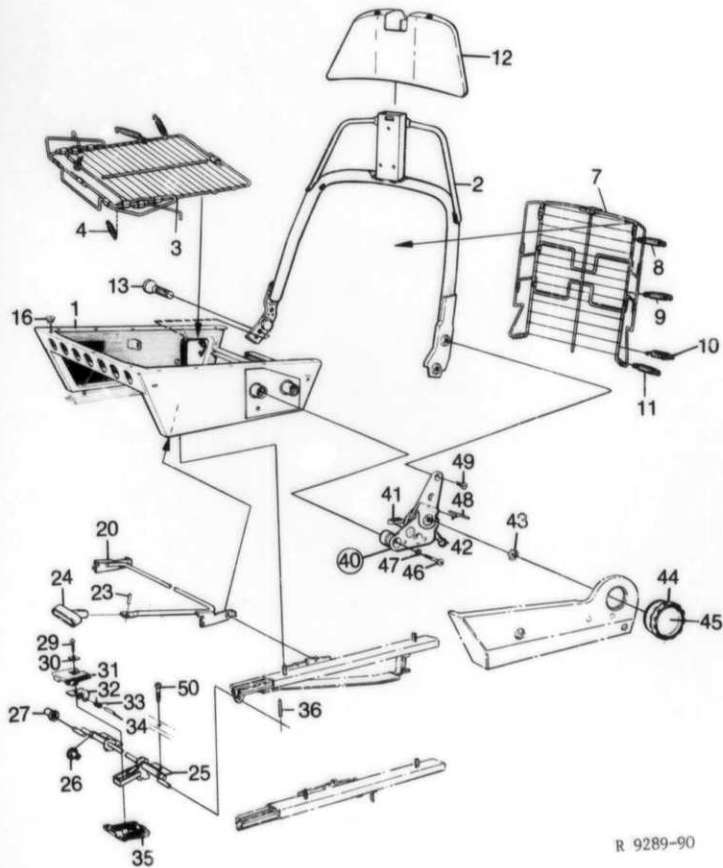

R 9289-90

2-E08

Upholstery, interior equipment, touch up paint
Front seats Part 2


Klädsel, invändig utrustning, bättningsfärg
Stolar Del 2

1770	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/Anst	Description	Benämning	S L
0020					1	Seat assy	Stol kpl	6
0030	1	97 46 082	LH		1	Seat frame	.Sitsram	6
0040	1	98 05 052	RH		1	Seat frame	.Sitsram	6
0050	2	97 46 124	LH		1	Back rest frame	.Ryggram	6
0060	2	98 12 322	RH		1	Back rest frame	.Ryggram	6
0070	3	98 78 562	(9837386)		1	Spring mat, seat cushion	.Resårmatte, sittdyna	6
0080					10	Spring	.Fjäder	6
0090	4	98 37 402	(9837394)		1	Spring mat, back cushion	.Resårmatte, ryggdyna	6
0120	7	98 78 570			2	Spring	.Fjäder	6
0125	8	98 37 410	13)		2	Spring	.Fjäder	6
0130	9	98 37 428	13)		2	Spring	.Fjäder	6
0140	10	98 37 436	13)		2	Spring	.Fjäder	6
0150	11	98 37 444	13)		1	Cover	.Kåpa	6
0160	12	97 02 465			2	Screw	.Skruv	5
0170	13	79 74 033			10	Bushing	.Bussning	4
0180	16	84 07 983			1	Control arm assy	.Reglagearm kpl	6
0210	20	97 18 297	LH		1	Control arm assy	.Reglagearm kpl	6
0220	20	97 18 305	RH		1	Tension pin	.Spännstift	5
0260	23	79 46 148			1	Handle	.Handtag	5
0270	24	94 65 956	LH		1	Handle	.Handtag	5
0280	24	94 88 131	RH		1	Adjustment shaft assy	.Justeraxel kpl	6
0290	25	97 18 602	LHD		1	Adjustment shaft assy	.Justeraxel kpl	6
0300	25	97 18 610	RHD		4	Bushing	.Bussning	5
0310	26	94 88 370			2	Bushing	.Bussning	5
0320	27	94 73 349			1	Screw	.Skruv	5
0340	29	79 70 262			1	Washer	.Bricka	5
0350	30	84 25 126			1	Upper part	.Överhalva	5
0360	31	84 25 035			1	Key lever	.Tangentarm	6
0370	32	84 25 100			1	Spring	.Fjäder	6
0380	33	97 29 724			1	Pin	.Pinne	5
0390	34	84 26 173			1	Lower part	.Underhalva	5
0400	35	84 25 043			1	Tension pin	.Spännstift	5
0410	36	79 56 212			1	Reclining control	.Liggitsbeslag	6
0420	40	98 35 190	LH		1	Reclining control	.Liggitsbeslag	6
0430	40	98 35 208	RH		1	Knob	.Knapp	3
0460	41	94 87 828			1	Knob	.Knapp	3
0470	42	94 87 810			1	Lock washer	.Låsbricka	5
0470	43	94 41 270			1	Hand wheel	.Ratt	5
0490	44	98 51 601			1	Cover	.Lock	6
0500	45	98 51 619			2	Screw	.Skruv	5
0570	46	97 15 525			2	Washer	.Bricka	5
0580	47	94 78 066			2	Hook	.Krok	5
0590	48	98 37 022			2	Screw	.Skruv	5
0600	49	79 74 744			2	Screw	.Skruv	5
0610	50	97 18 131			2	Screw	.Skruv	5

13. Ch.F6006851-

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
5	Main body	2-B08
6	Instrument panel	2-B24
6	Hood, front, fenders	2-C04
5	Doors, trunk lid	2-C10
5	External details, glass, sealings	2-C20
5	Upholstery, interior equipment and touch-up paint	2-D06
5	Heating and ventilation system	2-F10
5	Bumpers	2-F16
5	Complete sets	2-F20

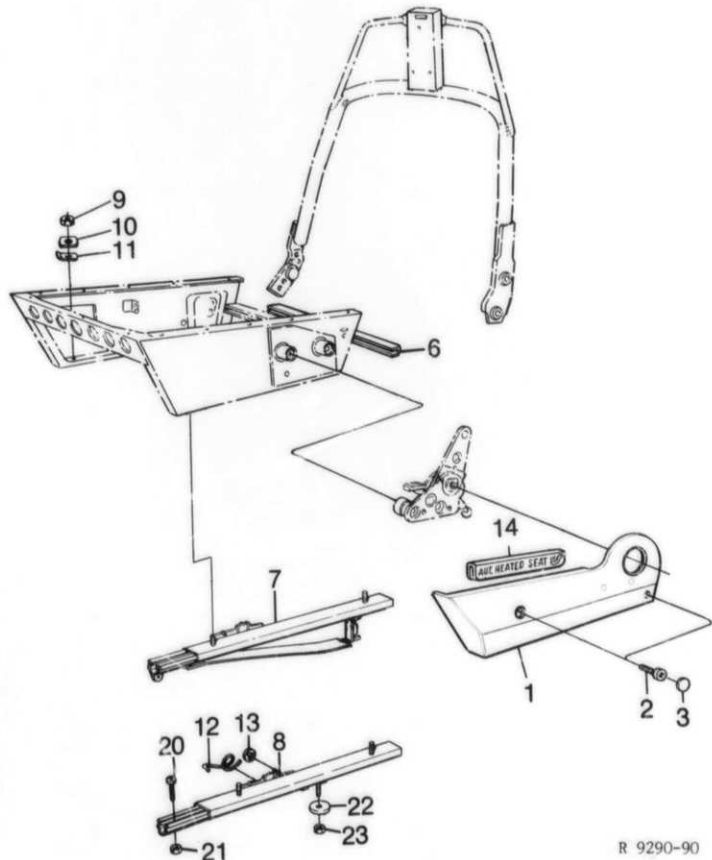

2-E10

Upholstery, interior equipment, touch up paint
Front seats Part 3

Klädsel, invändig utrustning, bättringsfärg
Stolar Del 3

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

1780	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020					1	Seat assy	Stol kpl	6
0030	1	98 13 296		LH, YELLOW	1	.Cover	.Kåpa	6
0040	1	98 13 304		RH, YELLOW	1	.Cover	.Kåpa	6
0050	1	98 13 254		LH, BROWN	1	.Cover	.Kåpa	6
0060	1	98 13 262		RH, BROWN	1	.Cover	.Kåpa	6
0090	1	98 28 161		LH, BLUE	1	.Cover	.Kåpa	6
0100	1	98 28 179		RH, BLUE	1	.Cover	.Kåpa	6
0130	2	79 70 536			2	.Screw	.Skruv	6
0140	3	97 20 889		YELLOW	1	.Cover	.Täcklock	3
0150	3	94 92 471		BROWN	1	.Cover	.Täcklock	3
0170	3	98 28 187		BLUE	1	.Cover	.Täcklock	3
0190	6	94 04 831			1	.Upholstery	.Sjötskydd	6
0200	7	98 33 476		DRIVER SEAT	1	.Runner LH	.Stolskena V	6
0210	7	98 33 484		DRIVER SEAT	1	.Runner RH	.Stolskena H	6
0220	7	98 33 492		DRIVER SEAT, RHD	1	.Runner LH	.Stolskena V	6
0230	7	98 33 500		DRIVER SEAT, RHD	1	.Runner RH	.Stolskena H	6
0240	8	97 18 479		PASSENGER SEAT	1	.Runner LH	.Stolskena V	6
0250	8	97 18 487		PASSENGER SEAT	1	.Runner RH	.Stolskena H	6
0260	9	80 74 106			4	.Nut	.Mutter	5
0270	10	94 89 758			2	.Washer	.Bricka	5
0280	11	94 89 766			2	.Washer	.Bricka	5
0290	12	94 76 169		LH	1	.Spring	.Fjäder	6
0300	12	94 76 177		RH	1	.Spring	.Fjäder	6
0310	13	94 76 185			1	.Lock washer	.Låsbricka	5
0315	14	98 29 409		1987-	2	.Plate "AUTO HEATED SEAT"	.Skylt "AUTO HEATED SEAT"	5
0316								
0320	20	97 18 131		PASSENGER SEAT	2	.Screw	.Skruv	5
0330	21	98 49 795		14) PASSENGER SEAT	2	.Nut	.Mutter	5
0340	22	94 73 968		PASSENGER SEAT	2	.Washer	.Bricka	5
0350	23	80 74 288		PASSENGER SEAT	2	.Nut	.Mutter	5

14. Ch F6001074-

2-E12


Upholstery, interior
equipment
Rear seat

Klädsel, invändig
utrustning
Baksäte

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details,	
	glass, sealings	2-C20
	Upholstery, interior	
	equipment and	
	touch-up paint	2-D06
	Heating and	
	ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

1850	Pos	Part No/Art nr	K	S	Notes/Anmärkningar	Qty/ Ansl	Description	Benämning	S	L
	1	97 09 494			2)	1	Seat cushion assy	Sittdyna kpl	6	
0021	2	97 19 816				1	Spring housing	Resårhus	6	
0230	4	97 35 861				1	Lock	Lås	5	
0240	5	97 36 075				1	Band	Band	5	
0250	6	79 73 720				2	Screw	Skruv	5	
0290	7	97 19 717				1	Linkarm	Länkarm	6	
0300	8	97 19 790				2	Cap	Överfall	6	
0310	9	97 19 808				2	Bushing	Bussning	6	
0320	10	79 73 423			1985	4	Screw	Skruv	5	
0330	10	79 77 283			1986-	4	Screw	Skruv	5	
0340	11	94 75 393				1	Strip	List	5	
0360	12	79 73 423			1985	2	Support	Stöd	5	
0390	13	94 92 117			1986-	4	Screw	Skruv	5	
0400	13	79 77 293				4	Screw	Skruv	5	
1046	25	98 34 144			2)	1	Back cushion assy	Ryggdyna kpl	6	
1095	26	98 33 773				1	Spring housing	Resårhus	6	
1220	29	98 33 542				1	Control rod	Reglerstång	5	
1540	35	79 18 261				2	Tension pin	Rörpinne	5	
1580	36	94 91 739				2	Strip	List	6	
1620	42	94 87 836			LH	1	Handle	Handtag	6	
1640	42	94 87 844			RH	1	Handle	Handtag	6	
2080	55	98 48 086			LH	1	Bracket, back cushion	Konsol, ryggdyna	5	
2100					RH	1	Bracket, back cushion	Konsol, ryggdyna	5	
2120	55	98 48 094				1	Bracket, back cushion	Konsol, ryggdyna	5	
2140						4	Screw	Skruv	5	
2260	56	84 99 204				1	Lock spring	Låsfjäder	6	
2270	57	94 94 691			LH	1	Lock spring	Låsfjäder	6	
2280	57	94 94 709			RH	1	Lock spring	Låsfjäder	6	
2290	59	94 89 485				2	Washer	Bricka	5	
2470	68	98 51 676				2	Sleeve	Hylsa	5	
2520	71	98 45 223				2	Plug	Plugg	5	
2540	72	97 36 190				2	Stub axle	Axeltapp	5	
2550	73	97 36 216				2	Sleeve	Hylsa	5	
2560	74	79 71 518				2	Lock washer	Låsbricka	5	
2580	75	97 29 716				2	Insert	Insats	5	
2600	76	97 32 231				1	Striker plate	Slutblock	6	
2620	77	97 24 733				1	Nut	Mutter	5	

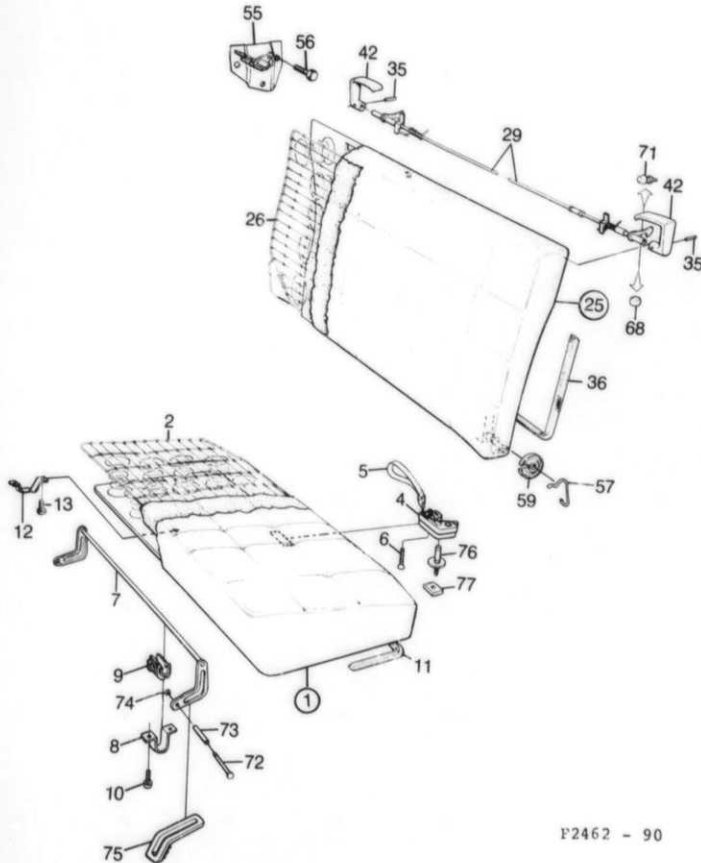

F2462 - 90

2. State upholstery colour and car colour code

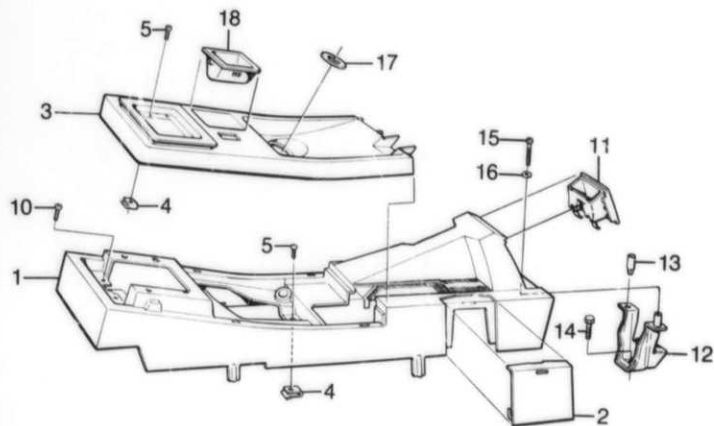

R 6290-90

2-E14

Upholstery, interior equip-
ment
Cover, gear shift lever

Klädsel, invändig utrust-
ning
Kåpa, växelspak

1940	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0110	1	94 93 842			1	Console, lower part	Konsol, underdel kpl	6
0120	2	97 06 805			1	Cover plate	Täcklock	6
0140	3	94 93 909		-1985	1	Cover	Kåpa	6
0141	3	98 70 114		1986-	1	Cover	Kåpa	6
0160	4	79 63 001			3	Clip	Clip	5
0170	5	79 22 362			3	Screw	Skruv	5
0180	10	79 34 318			2	Screw	Skruv	5
0200	11	94 93 800			1	Ashtray	Askkopp	6
0220	12	97 27 496			1	Bracket	Konsol	6
0240	13	97 27 504			2	Clip nut	Clipsmutter	3
0260	14	82 67 205			1	Screw	Skruv	5
0280	15	79 73 647			2	Screw	Skruv	5
0300	16	79 74 249			2	Washer	Bricka	5
0320	17	97 32 249			1	Guide for lighting	Ljusledare	5
0340	18	97 36 273			1	Coinbox	Myntfack	6

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-E16

Upholstery,inter.equipm.


Other interior equipment

Klädsel, inv. utrustning

Övrig invänd. utrustning

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details,	
	glass, sealings	2-C20
	Upholstery, interior	
	equipment and	
	touch-up paint	2-D06
	Heating and	
	ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

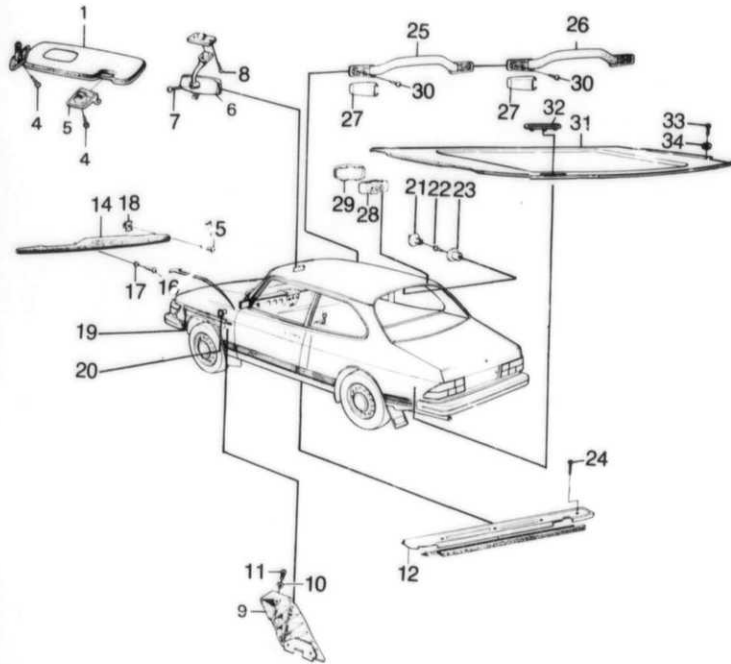

R 9301-90

1950	Pos	Part No./Art nr	K	S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0010	1	98 36 453			23), LH	1	Sun visor	Solskydd	5
0020	1	98 49 837			24), LH	1	Sun visor	Solskydd	5
0030	1	98 36 479			23), RH	1	Sun visor with mirror	Solskydd med spegel	5
0040	1	98 49 860			24), RH	1	Sun visor with mirror	Solskydd med spegel	5
0050	1	98 36 487			23), LH, RHD	1	Sun visor with mirror	Solskydd med spegel	5
0060	1	98 49 852			24), LH, RHD	1	Sun visor with mirror	Solskydd med spegel	5
0070	1	98 36 461			23), RH, RHD	1	Sun visor	Solskydd	5
0080	1	98 49 845			24), RH, RHD	1	Sun visor	Solskydd	5
0090	4	79 73 951				6	Screw	Skruv	5
0100	5	98 36 495			LH	1	Support	Stöd	5
0110	5	98 36 503			RH	1	Support	Stöd	5
0120	6	98 33 997				1	Mirror assy	Spegel kpl	4
0130	7	80 59 248				1	Screw	Skruv	5
0140	8	79 69 215				2	Screw	Skruv	5
0150	9	84 29 870				1	Foot rest	Fotstöd	5
0160	10	80 29 944				1	Washer	Bricka	5
0170	11	79 22 271				1	Screw	Skruv	5
0180	12	94 89 733			LH	1	Scuff plate protector	Tröskelskydd	5
0190	12	94 03 007			RH	1	Scuff plate protector	Tröskelskydd	5
0200	14	97 16 150			-1985, TRIM COLOUR C15	1	Arm rest, brown LH	Armstöd, brun V	6
0210	14	97 16 150			-1986-, TRIM COLOUR B11	1	Arm rest, brown LH	Armstöd, brun V	6
0220	14	97 16 168			-1985, TRIM COLOUR C15	1	Arm rest, brown RH	Armstöd, brun H	6
0230	14	97 16 168			-1986-, TRIM COLOUR B11	1	Arm rest, brown RH	Armstöd, brun H	6
0240	14	97 25 680			-1985, TRIM COLOUR C21	1	Arm rest, yellow LH	Armstöd, gul V	6
0250	14	98 73 811			-1986-, TRIM COLOUR A11	1	Arm rest, yellow LH	Armstöd, gul V	6
0260	14	97 25 698			-1985, TRIM COLOUR C24	1	Arm rest, yellow RH	Armstöd, gul H	6
0270	14	98 73 829			-1986-, TRIM COLOUR A11	1	Arm rest, yellow RH	Armstöd, gul H	6
0280	14	98 09 989			-1985, TRIM COLOUR C24	1	Arm rest, blue LH	Armstöd, blå V	6
0290	14	98 09 989			-1986-, TRIM COLOUR D11	1	Arm rest, blue LH	Armstöd, blå V	6
0300	14	98 09 997			-1985, TRIM COLOUR C24	1	Arm rest, blue RH	Armstöd, blå H	6
0310	14	98 09 997			-1986-, TRIM COLOUR D11	1	Arm rest, blue RH	Armstöd, blå H	6
0320	14	98 73 464			-1986-, TRIM COLOUR C11	1	Arm rest, red LH	Armstöd, röd V	6
0330	14	98 73 472			-1986-, TRIM COLOUR C11	1	Arm rest, red RH	Armstöd, röd H	6
0340	15	79 22 370				4	Screw	Skruv	5
0350	16	79 34 771				2	Screw	Skruv	5
0360	17	79 15 564				2	Washer	Bricka	5
0370	18	86 01 916				4	Nut clip	Mutterclip	3
0380	19	94 36 882			LH	2	Support strip	Stödlister	5
0390	19	94 36 890			RH	1	Support strip	Stödlister	5
0400	20	84 53 136				10	Clip	Clip	5
0410	21	98 36 404				2	Clothes hook	Klädkrok	5
0420	22	79 73 951				2	Screw	Skruv	5
0430	23	98 36 396				2	Sleeve	Hylsa	5
0440	24	79 70 320				8	Screw	Skruv	5
0450	25	98 36 305				1	Curve handle, front	Kurvhandtag, främre	5
0460	25	98 36 347			CARS WITH SUN ROOF	1	Curve handle, front	Kurvhandtag, främre	5
0470	26	98 36 354			CARS WITH SUN ROOF	2	Curve handle, rear	Kurvhandtag, bakre	5
0480	27	98 36 362				2	Cover, curve handle	Kåpa, kurvhandtag	5
0490	27	98 36 362				6	Cover, curve handle	Kåpa, kurvhandtag	5
0500	28	98 36 370			CARS WITH SUN ROOF	2	Spacer	Distans	5
0510	29	98 36 388				2	Cover	Kåpa	5
0520	30	79 73 969				2	Cover	Kåpa	5
0530	30	79 73 969			CARS WITH SUN ROOF	8	Screw	Skruv	5
0540	31	98 09 229			-1985	24	Shelf, brown	Hatthylla, brun	5
0550	31	98 66 088			-1986-, (33)	1	Shelf, brown	Hatthylla, brun	5
0560	31	96 18 521			34)	1	Shelf, brown	Hatthylla, brun	5
0570	31	98 09 245			-1985	1	Shelf, yellow	Hatthylla, gul	5
0580	31	98 09 245			-1986-, (33)	1	Shelf, yellow	Hatthylla, gul	5
0590	31	96 18 547			34)	1	Shelf, yellow	Hatthylla, gul	5

23. Ch. --G6006049

24. Ch. G6006050--

33. Ch. --H7014073

34. Ch. H7014074--

2-E18

Upholstery,inter.equipm.

Other interior equipment

Klädsel, inv. utrustning

Övrig invänd. utrustning


MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

1950	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0600	31	98 49 282		-1985	1	Shelf, blue	Hatthylla, blå	5
0610	31	98 49 282		1986--33)	1	Shelf, blue	Hatthylla, blå	5
0620	31	96 18 554		34)	1	Shelf, blue	Hatthylla, blå	5
0630	31	98 09 237		1986--33)	1	Shelf, red	Hatthylla, röd	5
0640	31	96 18 539		34)	1	Shelf, red	Hatthylla, röd	5
0641	32	96 18 570		34)	4	Grille, brown	Galler, brun	5
0642	32	96 18 588		34)	4	Grille, red	Galler, röd	5
0643	32	96 18 596		34)	4	Grille, yellow	Galler, gul	5
0644	32	96 18 604		34)	4	Grille, blue	Galler, blå	5
0650	33	79 72 508			4	Screw	Skruv	5
0660	34	70 45 776			4	Washer	Bricka	5

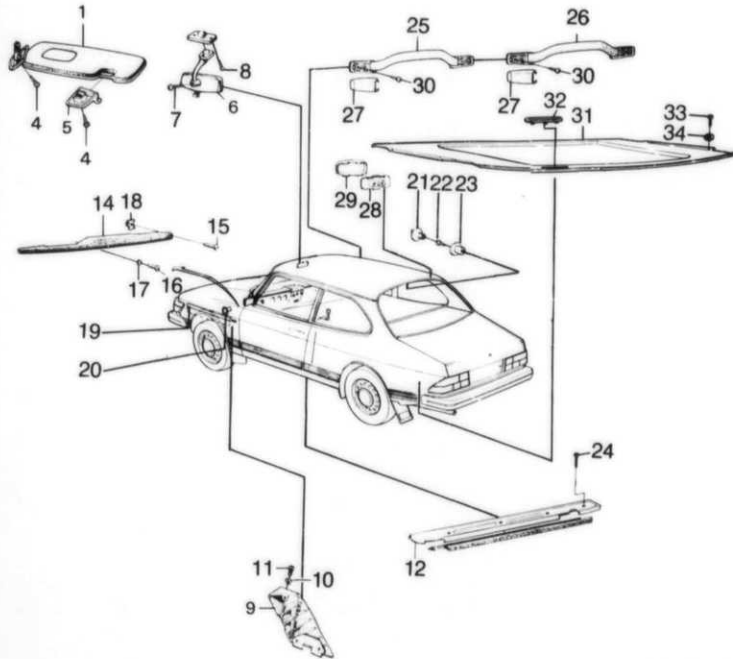

R 9301-90

33. Ch. --H7014073

34. Ch. H7014074--


SAAB genuine parts
original reservdelar

SAAB 90 M85-87

1990-02

R9301

Page 08-089

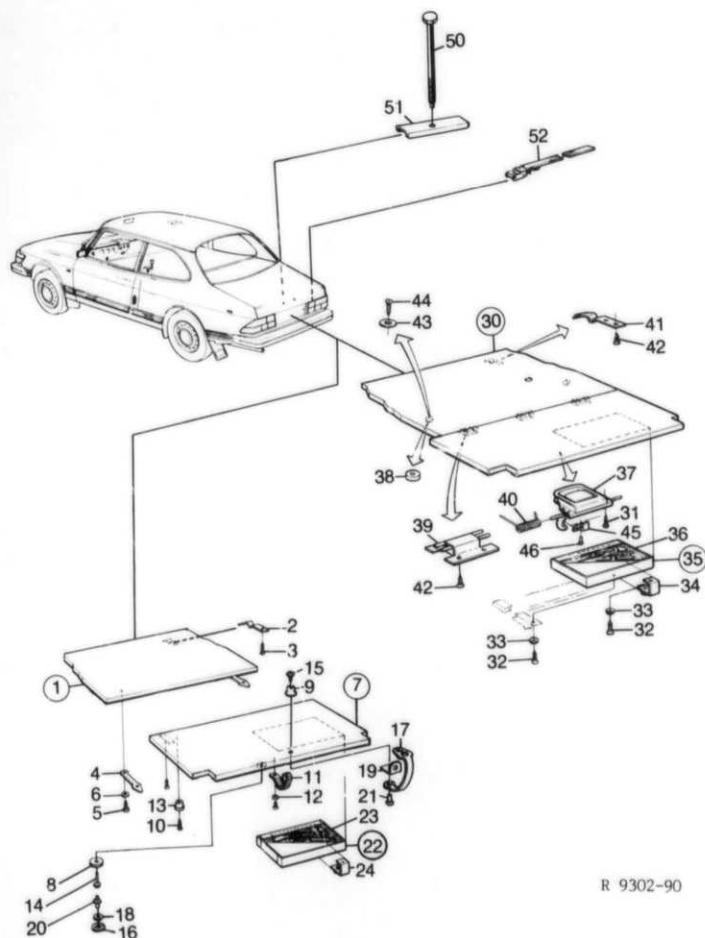

R 9302-90

2-E20

Upholstery, inter.equipm.
Other interior equipment
Luggage compartment

Klädsel, inv. utrustning
Övrig invänd. utrustning
Bagagerum

MASTER INDEX

1975	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0030	1	97 06 755	29)		1	Front floor assy	Lastrumsgolv kpl	5
0040						luggage compartment	främre	5
0050	2	94 02 983	29)		4	.Spring	.Fjäder	5
0060	3	79 21 331	29)		4	.Screw	.Skriv	5
0070	4	84 67 409	29)		2	.Rubber holder	.Gummistöpp	5
0080	5	79 21 331	29)		2	.Screw	.Skriv	5
0090	6	79 13 833	29)		2	.Washer	.Bricka	5
0100	7	98 48 433	21)		1	Rear floor assy	Lastrumsgolv kpl	5
0110						luggage compartment	bakre	5
0120	7	98 68 886	22)		1	Rear floor assy	Lastrumsgolv kpl	5
0130						luggage compartment	bakre	5
0140	7	96 11 765	1986		1	Rear floor assy	Lastrumsgolv kpl	5
0150						luggage compartment	bakre	5
0160	7	96 18 661	1987-29)		1	Rear floor assy	Lastrumsgolv kpl	5
0170						luggage compartment	bakre	5
0180	8	94 93 966	21)		1	.Quick lock	.Snabblås	5
0190	9	97 94 264	22,29)		1	.Knob	.Knapp	6
0200	10	84 08 882	29)		11	.Screw	.Skriv	5
0210	11	94 64 942	29)		1	.Strap	.Stropp	5
0220	12	84 13 429	29)		4	.Washer	.Bricka	5
0230	13	82 17 689	29)		2	.Knob	.Knapp	5
0240	14	84 27 841	21)		1	.Screw	.Skriv	5
0250	15	97 75 230	22,29)		1	.Screw	.Skriv	5
0260	16	94 93 966	21)		1	Quick lock	Snabblås	5
0270	17	97 97 127	22,29)		1	Rubber strap	Gummistöpp	5
0280	18	83 75 198	21)		2	Washer	Bricka	5
0290	19	97 97 036	22,29)		1	Angle bracket	Vinkelfäste	5
0300	20	79 61 675	21)		1	Blind rivet	Blindnit	5
0310	21	79 61 675	22,29)		1	Blind rivet	Blindnit	5
0320	22	98 48 417	-1986		1	Tool box assy	Verktygslåda kpl	6
0330	22	96 18 679	1987-29)		1	Tool box assy	Verktygslåda kpl	5
0340	23	98 48 425	29)		1	.Tool holder	.Verktygshållare	5
0350	24	94 92 026	29)		2	Lock strap, tool box	Låsstropp	5
0370	30	96 87 476	30)		1	Floor assy, luggage compartment	Lastrumsgolv kpl	5
0380						bakre		5
0390	31	79 11 522	30)		2	.Screw	.Skriv	5
0400	32	84 08 882	30)		3	.Screw	.Skriv	5
0410	33	84 13 429	30)		3	.Washer	.Bricka	5
0420	34	94 92 026	30)		2	.Lock strap	.Låsstropp	5
0430	35	96 18 679	30)		1	.Tool box assy	.Verktygslåda kpl	5
0440	36	98 64 141	30)		1	.Tool holder	.Verktygshållare	5
0450	37	96 57 123	30)		1	.Lock	.Lås	6
0460	38	96 87 443	30)		2	.Bushing	.Bussning	5
0470	39	97 64 853	30)		3	.Hinge	.Gångjärn	5
0480	40	97 74 282	30)		1	.Spring	.Fjäder	5
0490	41	98 79 321	30)		2	.Clip	.Skriv	6
0500	42	97 75 230	30)		16	.Screw	.Skriv	5
0510	43	96 87 450	30)		2	Washer	Bricka	5
0520	44	84 10 961	30)		2	Screw	Skriv	5
0530	45	96 17 879	30)		1	Lock angel	Lås-vinkel	6
0540	46	98 49 514	30)		2	Rivet	Nit	5
0550	50	98 26 595	30)		1	Screw, spare wheel	Skriv, reservhjul	5
0560	51	97 33 338	30)		1	Washer	Bricka	5
0570	52	94 92 612	30)		1	Lock strap, warning triangle	Låsstropp, varnings-triangul	5
0580								

21. Ch. -F610750.
22. Ch.F610751-
29. CH. --H6002764
30. CH. H6002765--


SAAB genuine parts
original tillverkade

SAAB 90 M85-87

1990-02

R9302 Page 08-091

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-C06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

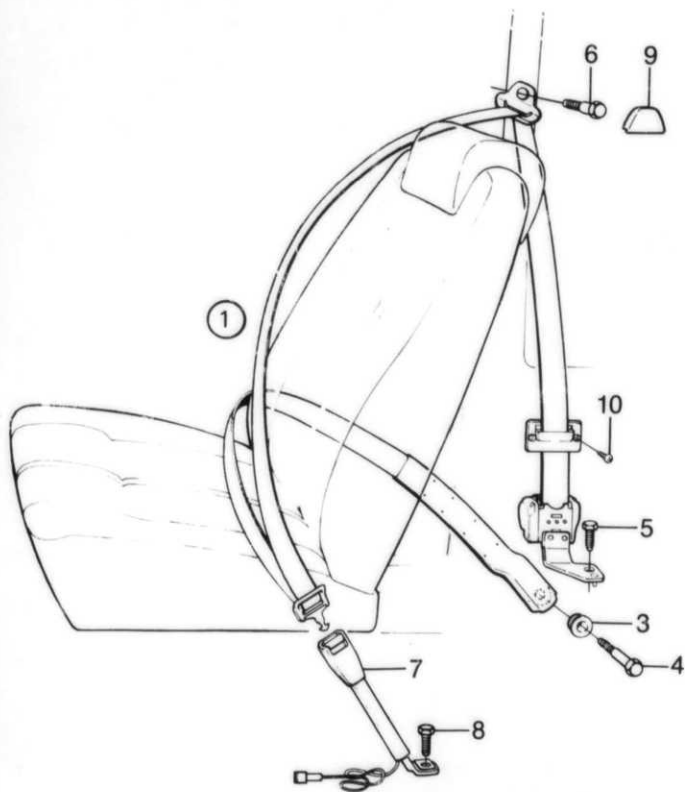

R 6571-90

2-E22

Upholstery, inter. equipm.
Autom. safety belt
Front

Klädsel, inv. utrustning
Automatbälte
Främre

2225	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S L
0060	1	94 70 394		LH	1	Safety belt assy	Bilbälte kpl	3
0080	1	94 70 410		RH	1	Safety belt assy	Bilbälte kpl	3
0140	3	94 22 346			2	Bearing	Lager	5
0160	4	94 85 038		35)	2	Screw	Skruv	5
0170	4	96 81 735		36)	2	Screw	Skruv	5
0200	5	84 99 204			2	Screw	Skruv	5
0280	6	94 85 020			2	Screw	Skruv	5
0300	7	97 24 071		-1986, LH	1	Belt lock	Bälteslås	5
0346	7	96 11 724		1987-, LH, NOT AU	1	Belt lock	Bälteslås	5
0347	7	97 24 071		LH, AU	1	Belt lock	Bälteslås	5
0348	7	97 24 089		-1986, RH	1	Belt lock	Bälteslås	5
0351	7	96 11 732		-1986, RH, NOT AU, US, CA, JP	1	Belt lock	Bälteslås	5
0352	7	97 24 089		RH, AU, US, CA, JP	1	Belt lock	Bälteslås	5
0355	8	84 99 204			2	Screw	Skruv	5
0360	9	94 85 657			2	Cover	Kåpa	5
0400	10	84 10 961			4	Screw	Skruv	5
0420								


35. Ch. --J3009726
36. Ch. J3009727--

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

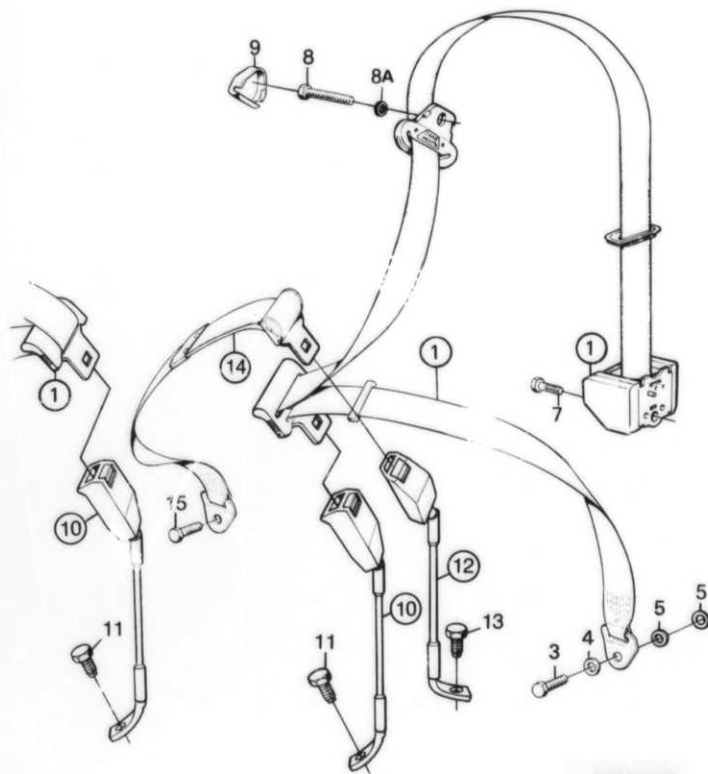

R 7218-90

2-E24

Upholstery,inter.equipm.
Autcm. safety belt,
Rear

Klädsel, inv. utrustning
Automatbälte,
Bakre

Pos	Part No/Art nr	K	S	Notes/Anmärkning	Qty/ Antal	Description	Benämning	S	L
2250									
0020	1	97 31 969		LH	1	Safety belt assy	Säkerhetsbälte kpl	5	
0040	1	97 31 977		RH	1	Safety belt assy	Säkerhetsbälte kpl	5	
0060	3	84 99 238			2	.Screw	.Skruv	5	
0080	4	80 30 017			2	.Washer	.Bricka	5	
0100	5	94 57 490			2	.Spacer sleeve	.Distanshylsa	5	
0120	7	84 99 204			2	Screw	Skruv	5	
0140	8	97 24 717			2	Screw	Skruv	5	
0141	8A	73 98 340			2	Washer	Bricka	5	
0160	9	94 85 657			2	cover	kåpa	5	
0180	10	98 11 001		LH	1	Buckle assy	Bilbälteslås kpl	6	
0200	10	98 11 019		RH	1	Buckle assy	Bilbälteslås kpl	6	
0220	11	84 99 238			2	.Screw	.Skruv	5	
0240	12	98 10 961			1	Buckle, hip assy	Bilbälteslås,höft kpl	6	
0260	13	84 99 238			1	Screw	.Skruv	5	
0280	14	96 11 674		(9731506)	1	Hip belt assy	Höftbälte kpl	5	
0300	15	84 99 204			1	Screw	.Skruv	5	

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details,	
glass, sealings	2-C20
Upholstery, interior	
equipment and	
touch-up paint	2-D06
Heating and	
ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-F02

Touch-up paint
Enamel

Bättringsfärg
Färg

MASTER INDEX

2310	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010						FINISHING COAT:	TÄCKFÄRG(KUNSTHARZ)	
0020	1L	78 20 228		BODY COLOUR 170, L=LITER	X	Black	Svart	3
0040	1/4L	78 20 244		BODY COLOUR 170	X	Black	Svart	3
0082	1L	84 87 969		BODY COLOUR 127	X	Cherry	Cherryröd	3
0084	1/4L	84 87 977		BODY COLOUR 127	X	Cherry	Cherryröd	3
0100	1L	84 87 266		BODY COLOUR 153	X	Cirrus white	Cirrusvit	3
0120	1/4L	84 87 274		BODY COLOUR 153	X	Cirrus white	Cirrusvit	3
0162	1L	84 87 993		BODY COLOUR 155	X	Ivory	Elfenben	3
0163	1/4L	84 88 009		BODY COLOUR 155	X	Ivory	Elfenben	3
0164	1L	97 46 777		1986-, BODY COLOUR 162	X	Dolomite sand	Dolomitsand	3
0165	1/4L	97 46 785		1986-, BODY COLOUR 162	X	Dolomite sand	Dolomitsand	3
0172	1L	97 46 330		BODY COLOUR 116	X	Azure blue	Azurblå	3
0173	1/4L	97 46 348		BODY COLOUR 116	X	Azure blue	Azurblå	3
0180	1L	84 87 811		1986-, BODY COLOUR 131	X	Admiral blue	Admiralblå	3
0181	1/4L	84 87 829		1986-, BODY COLOUR 131	X	Admiral blue	Admiralblå	3
0182	1L	97 46 744		1986-, BODY COLOUR 157	X	Zirkon blue	Cirkonblå	3
0183	1/4L	97 46 751		1986-, BODY COLOUR 157	X	Zirkon blue	Cirkonblå	3
0190	1L	84 87 845		1986-, BODY COLOUR 168	X	Maroon	Kastanjbrun	3
0191	1/4L	84 87 852		1986-, BODY COLOUR 168	X	Maroon	Kastanjbrun	3
0195	1L	96 98 135		1987-, BODY COLOUR 188	X	Florentine yellow	Florentinergul	3
0196	1/4L	96 98 143		1987-, BODY COLOUR 188	X	Florentine yellow	Florentinergul	3
0200	1L	96 98 168		1987-, BODY COLOUR 198	X	Embassy blue	Ambassadblå	3
0205	1/4L	96 98 176		1987-, BODY COLOUR 198	X	Embassy blue	Ambassadblå	3
0260						PRIMER:	GRUNDFÄRG:	
0300						Reaktionsprimer	Reaktionsprimer	6
0320	3L	84 87 639			X	Zusatzlösung	Zusatzlösung	6
0340	1,5L	84 87 647			X			6
0360						UNDERCOAT:	MELLANFÄRG:	
0380						EP Grundierfüller	EP Grundierfüller	6
0400	1L	84 87 720			X	inkl EP Härter	inkl EP Härter	6
0420						THINNER:	FÖRTUNNING:	
0440						Verdünnung 11012	Verdünnung 11012	5
0460	1L	84 86 318		FOR 8487720	X	Verdünnung 11012	Verdünnung 11012	5
0480	5L	84 86 326		FOR 8487720	X	Kunstharz-Verdünnung 11016	Kunstharz-Verdünnung 11016	5
0500	1L	84 87 753		FOR ALL FINISHING COAT	X	Kunstharz-Verdünnung 11016	Kunstharz-Verdünnung 11016	5
0520						DEGREASING AGENTS AND CLEANER:	AVFETTNINGS OCH RENGÖRINGSMEDEL	
0540	5L	84 87 761		FOR ALL FINISHING COAT	X	Siliconentremover	Siliconentbortagare	6
0560						11130	11130	6
0580						Nitro thinner	Nitro förtunning	6
0600						FILLER:	SPACKEL:	
0620						Stopper	Pist och justerspackel	6
0640	2KG	84 87 613			X	Spray filler	Sprutspackel	6
0660						HARDENER:	HÄRDARE:	
0680	5L	84 87 787			X	Standex härter	Standex härter	5
0700						20-80 degrees C	20-80 grader C	5
0720	1L	84 87 521			X	Standex 80 degrees C	Standex 80 grader C	5
0740						härterlack	härterlack	5
0760								
0780								
0800								
0820								
0840								
0860								
0880								
0900								
0920								

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-F04

Touch-up paint

Two-components

Bättringsfärg

Tvåkomponent

MASTER INDEX

Pos	Part No/Art nr	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0020				FINISHING COAT	TÄCKFÄRG
0040	1L	84 87 860	X	Maroon	Kastanjbrun
0041					
0042	1L	84 87 985	X	Cherry	Cherryröd
0060	1L	84 87 282	X	Cirrus white	Cirrusvit
0082	1L	97 46 207	X	Ivory	Elfenben
0085	1L	97 46 793	X	Dolomite sand	Dolomitsand
0095	1L	97 46 264	X	Black	Svart
0100	1L	97 46 355	X	Azure blue	Azurbå
0105	1L	84 87 837	X	Admiral blue	Admiralbå
0120	1L	97 46 769	X	Ziron blue	Cirkonbå
0130	1L	96 98 150	X	Florentine yellow	Florentiner gul
0135	1L	96 98 184	X	Embassy blue	Ambassadbå
0200	1L	84 86 292	X	Hardener	Hårdare
0220				FOR ALL FINISHING COAT	
0240	1/2L	84 86 300	X	AND 8487712	Hårdare
0260				FOR ALL FINISHING COAT	
0280	1L	97 46 579	X	AND 8487712	Specialhårdare 2K
0300					
0320	3L	84 87 639	X	PRIMER:	GRUNDFÄRG:
0340	1.5L	84 87 647	X	Reaktionsprimer	Reaktionsprimer
0360	1/2L	84 87 654	X	Zusatzlösung	Zusatzlösung
0380	1/2L	84 87 662	X	1:1 Fullprimer	1:1 Fullprimer
0400	2L	97 46 892	X	1:1 Härte-lösung	1:1 Härte-lösung
0410	1L	97 46 900	X	Grundfärg	Grundfärg
0415		97 46 561	X	Tillsats grundfärg	Tillsats grundfärg
0420			X	Primer B	Grundfärg B
0440	1L	84 87 670		UNDER coat	MELLANFÄRG
0460	5L	84 87 688	X	2K-Sealer (shaded)	2K-Sealer(nyanserad)
0480	1L	84 87 696	X	2K-Sealer (shaded)	2K-Sealer(nyanserad)
0500	2.5L	84 87 704	X	2K-Sealer-Härter	2K-Sealer-Härter
0520	1L	84 87 712	X	2K-Sealer-Härter	2K-Fillsealer (in-färgningsbar)
0540			X	2K-Fillsealer	2K-Lösung 11031
0560	1L	84 87 795	X	2K-Lösung 11031	scharf
0580			X	scharf	Mellanfärg
0585	1L	97 46 926	X	Under coat	Hårdare
0590	1L	97 46 934	X	Hardener	Hårdare
0595	1L	97 46 546	X	Hardener	Hårdare
0596					
0600				THINNER	FÖRTUNNING
0620	1L	84 86 318	X	Verdünnung 11012	Verdünnung 11012
0640	5L	84 86 326	X	Verdünnung 11012	Verdünnung 11012
0642	1L	97 46 967	X	Thinner 11100	Förtunning 11100
0643	1L	97 46 975	X	Thinner 11040	Förtunning 11040
0645	1L	97 46 884	X	Cleaner	Rengöringsmedel
0650	1L	97 46 942	X	Thinner	Förtunning
0655	1L	97 46 553	X	Thinner	Förtunning
0656					
0660				DEGREASING AGENTS	AVFETTNINGS- AND
0680				AND CLEANER	RENGÖRINGSMEDEL
0700	5L	84 87 779	X	Siliconentremover	Siliconentborttagare
0720				11130	11130
0740	5L	84 87 787	X	Nitro thinner	Nitroförtunning
0760					
0780				FILLER	SPACKEL
0800	2&KG	84 87 613	X	Stopper	Plåt o justerspäckel
0820	1L	84 87 621	X	Spray	Sprutspäckel

6. Finishing coat and hardener 8486292 or 8486300 must be added
 7. For all 2K-finish coat and for 8487670, 8487688, 8487696, 8487704, 8487712.
 8. For engrossing with 2K-fillsealer

SAAB genuine parts
original merchandise

SAAB 90 M85-87

1990-02

BLANK Page 08-099

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-F06

Touch-up paint
Two-components

Båtringsfärg
Tvåkomponent

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0830	1KG 97 46 918		GLASSOMAX 995-20	X	Filler	Spackel	5
0835					PLASTICIEZER	MJUKGÖRARE	
0850	1L 97 46 959		GLASSODUR 521-111	X	Plasticiezer	Mjukgörare	6
0900							

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrial system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-F08

Touch-up paint
Two-coat type


Båtringsfärg
Tvåskiktstyp

MASTER INDEX

2365	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0020						BASE COAT	BASFÄRG	
0030	1L	84 87 217		-1986, BODY COLOUR 172	X	Silver-crystal	Silver kristall	3
0040						metallic	metallic	
0050	1L	96 98 044		1987-, BODY COLOUR 200	X	Silver-crystal	Silver kristall	3
0060						metallic	metallic	
0070	1L	97 46 801		1986, BODY COLOUR 158	X	Odoardo grey metallic	Odoardogrå metallic	3
0080	1L	96 98 093		1987-, BODY COLOUR 204	X	Odoardo grey metallic	Odoardogrå metallic	3
0090	1L	84 87 878		BODY COLOUR 112	X	State blue metallic	Skifferblå metallic	3
0100	1L	97 46 363		-1986, BODY COLOUR 117	X	Platinum blue	Platinablå	3
0110						metallic	metallic	
0120	1L	96 98 085		1987-, BODY COLOUR 203	X	Platinum blue	Platinablå metallic	3
0130						metallic	metallic	
0140	1L	84 87 357		BODY COLOUR 140	X	Pine green, metallic	Pinjegrön, metallic	3
0150	1L	97 46 819		1986, BODY COLOUR 159	X	Malachite light	Malakit ljus	3
0160						metallic	metallic	
0170	1L	96 98 101		1987-, BODY COLOUR 205	X	Malachite light	Malakit ljus	3
0180						metallic	metallic	
0185	1L	96 98 119		1987-, BODY COLOUR 206	X	Cochineal red	Cochenillröd	3
0190						metallic	metallic	
0200	1L	96 98 051		1987-, BODY COLOUR 201	X	Bronze metallic	Brons metallic	3
0210								
0220	1L	96 98 069		1987-, BODY COLOUR 202	X	Rose quartz metallic	Rosenkvarts	3
0230								
0240								
0250						CLEAR COAT	KLARLACK	
0260	1L	84 87 225			X	2K-Standard	2K-Standard	3
0270	1L	84 86 292		ALSO FOR 8487712	X	2K-Spezial-Härter	2K-Spezial-Härter	5
0280	1/2L	84 86 300		ALSO FOR 8487712	X	2K-Spezial-Härter	2K-Spezial-Härter	5
0290								
0300						PRIMER	GRUNDFÄRG	
0310	1/2L	84 87 654			X	1:1 Füllprimer	1:1 Füllprimer	6
0320	1/2L	84 87 662			X	1:1 Härte-Lösung	1:1 Härte-Lösung	6
0330								
0340						UNDER COAT	MELLANFÄRG	
0350	1L	84 87 670			X	2K-Sealer (shaded)	2K-Sealer (nyansse-rad)	6
0360								
0370	5L	84 87 688			X	2K-Sealer (shaded)	2K-Sealer (nyansse-rad)	6
0380								
0390	1L	84 87 696			X	2K-Sealer-Härter	2K-Sealer-Härter	6
0400	2,5L	84 87 704			X	2K-Sealer-Härter	2K-Sealer-Härter	6
0410	1L	84 87 712		9)	X	2K-Fillsealer (colourable)	2K-Fillsealer (in-färgningsbar)	6
0420								
0430	1L	84 87 795		8)	X	2k-Lösung 11031 scharf	2k-Lösung 11031 scharf	6
0440								
0450						THINNER	FÖRTUNNING	
0460	1L	84 86 318			X	Verdünnung 11012	Verdünnung 11012	5
0470	5L	84 86 326			X	Verdünnung 11012	Verdünnung 11012	5
0480	1L	84 87 738		FOR ALL BASE COAT	X	Verdünnung 11118	Verdünnung 11118	5
0490	5L	84 87 746		FOR ALL BASE COAT	X	Verdünnung 11118	Verdünnung 11118	5
0500								
0510						DEGREASING AGENTS AND CLEANER	AVFETTNINGS OCH RENGÖRINGSMEDEL	
0520								
0530						Siliconentremover	Siliconentborttagare	
0540	5L	84 87 779			X	11130	11130	6
0550								
0560	5L	84 87 787			X	Nitro thinner	Nitrofortunning	6
0570								
0580						FILLER	SPACKEL	
0590	2&KG	84 87 613			X	Stopper	Plåt och juster-spackel	6
0600								
0610	1L	84 87 621			X	Spray filler	Sprutspackel	6

8. For engrossing with 2K-fillsealer

9. Base coat and hardener 8486292 or 8486300 must be added

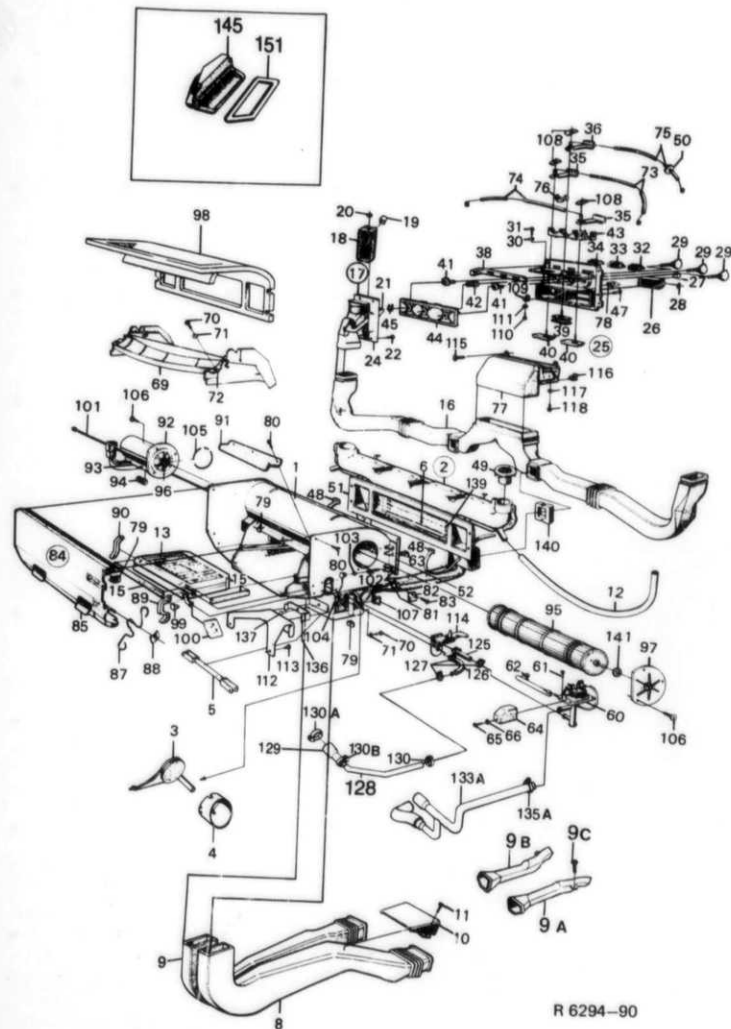

R 6294-90

2-F10


Heating and ventilation
system
Heater core, fan etc.

Värme och ventilations-
system
Värmeväxlare, fläkt, etc

MASTER INDEX

2400	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
0040	1	84 99 402			1	Fan house	Fläkthus
0080	2	84 97 109			1	Valve house	Spjällhus
0100	3	84 50 256		LH	1	Valve flap	Spjäll
0120	3	84 52 039		RH	1	Valve flap	Spjäll
0140	4	84 72 458		LH	1	Air guide	Luftledare
0160	4	84 72 466		RH	1	Air guide	Luftledare
0180	5	84 50 108			1	Link, valve flap	Länk, spjäll
0200	6	84 97 265			1	Guide edge	Ledskena
0301	8	94 79 494		LH	1	Heating channel	Värmekanal
0302	9	94 79 502		RH	1	Heating channel	Värmekanal
0310	9A	94 19 086		LH	1	Heating channel	Värmekanal
0312	9B	94 19 094		RH	1	Heating channel	Värmekanal
0315	9C	79 22 347			2	Screw	Skruv
0340	10	94 61 062			1	Bracket plate	Fästplåt
0360	11	84 58 275			2	Screw	Skruv
0380	12	84 50 298			2	Defroster hose	Defroster slang
0400	13	94 81 078			1	Heater core	Värmeväxlare
0420	15	84 50 132			1	Seal	Tätning
0460	16	84 90 765			1	Fresh air channel	Friskluftkanal
0480	17	84 54 274		LH	1	Fresh air jet	Friskluftmunstycke
0500	17	84 54 282		RH	1	Fresh air jet	Friskluftmunstycke
0520	18	73 50 895			2	Air guide	Lufttriktare
0540	19	73 50 796			2	Knob	Knapp
0560	20	73 74 606			4	Washer	Bricka
0580	21	73 50 911			2	Knob	Knapp
0600	22	84 22 305			8	Screw	Skruv
0640	24	84 25 399		LH	1	Front part	Framstycke
0660	24	84 25 407		RH	1	Front part	Framstycke
0680	25	84 28 252			1	Control panel assy.	Reglagepanel kpl.
0720	25	94 21 157		RHD	1	Control panel assy.	Reglagepanel kpl.
0760	26	73 50 895			2	Air guide	Lufttriktare
0780	27	73 50 796			2	Knob	Knapp
0800	28	73 74 606			4	Washer	Bricka
0820	29	84 24 533			3	Control wheel	Ratt
0840	30	84 28 997			2	Washer	Bricka
0860	31	79 22 206			2	Screw	Skruv
0880	32	84 24 681		DEFR.	1	Text light	Textfönster
0900	33	84 24 699		TEMP.	1	Text light	Textfönster
0920	34	84 24 707		VENT.	1	Text light	Textfönster
0940	35	84 24 608		BLUE	2	Screen	Skärm
0960	36	84 24 616		RED	1	Screen	Skärm
1000	38	84 24 715			1	Lighting guide	Belysningsstav
1020	39	84 24 574			1	Rack	Kuggstäng
1040	40	84 24 566			2	Rack	Kuggstäng
1060	41	84 24 582			2	Cog segment	Kuggsegment
1080	42	84 24 590			1	Cog wheel	Kugghjul
1100	43	84 34 508			1	Clip retainer	Clipsållare
1120	44	84 24 558			1	Cap	Lock
1140	45	79 63 986			3	Lock ring	Låsring
1160	47	79 71 526			4	Screw	Skruv
1180	48	84 73 118			2	Strap	Spännband
1280	49	84 97 232		LH	1	Air jet	Munstycke
1300	49	84 97 240		RH	1	Air jet	Munstycke
1320	50	86 01 494			1	Grommet	Genomföring
1340	51	84 50 140			1	Seal, dash panel	Torpedtätning
1380	52	84 79 222			1	Seal	Tätning
1420	60	84 96 861			1	Water valve	Värmekran
1440	61	79 61 949			3	Screw	Skruv
1460	62	84 58 184			2	Clip, capillary tube	Käpa, kapillärör
1480	63	79 68 001			4	Spring nut	Fjädersmutter
1500	64	84 35 570			1	Cover	Kåpa
1520	65	79 22 263			1	Screw	Skruv
1540	66	79 16 489			1	Washer	Bricka
1600	69	84 50 157			1	Air inlet	Luftintag
1620	70	79 22 271			2	Screw	Skruv

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

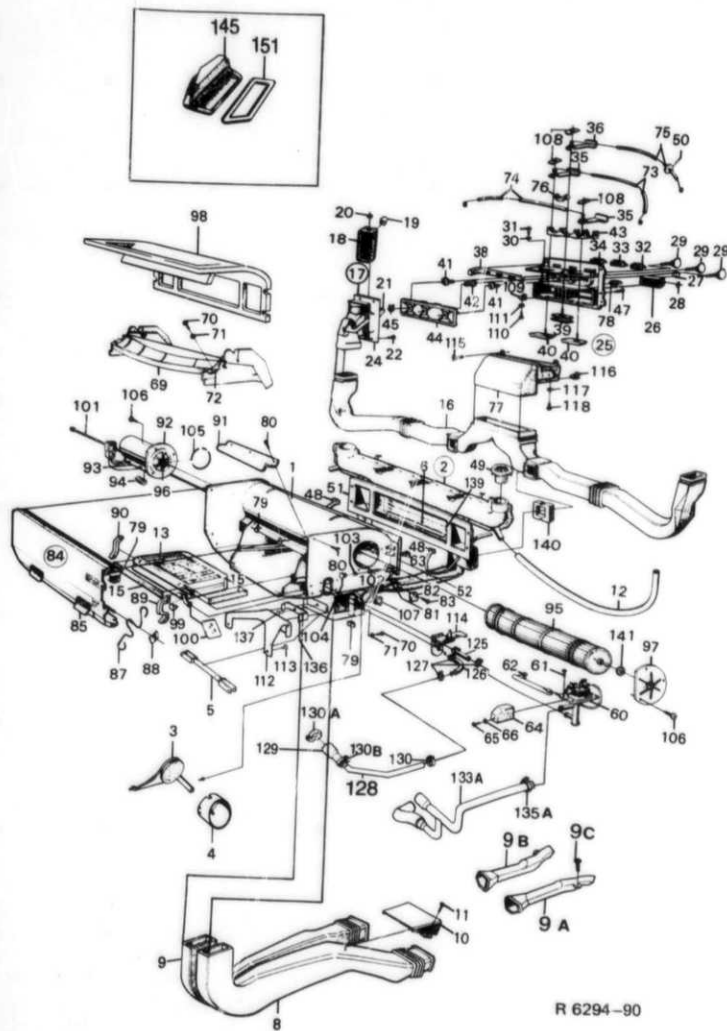


2-F12

Heating and ventilation
system
Heater core, fan etc.

Värme och ventilations-
system
Värmeväxlare, fläkt, etc

MASTER INDEX

2400	Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty Amount	Description	Benämning	S L
1640	71	80 73 090			2	Washer	Bricka	5
1660	72	84 14 872			2	Spring nut	Fjädermutter	5
1680	73	84 50 652		VENT.	1	Control wire	Reglagewire	5
1700	74	84 50 694		DEFR.	1	Control wire	Reglagewire	5
1720	75	84 50 678		VALVE	1	Control wire	Reglagewire	5
1740	76	84 34 813			1	Clip	.Clip	5
1760	77	84 50 710			1	Fresh air inlet	Anslutningsdel	5
1780	78	73 50 911			1	Knob	Knapp	3
1800	79	79 68 555			9	Spring nut	Fjädermutter	3
1820	80	79 22 271			9	Screw	Skruv	5
1840	81	86 01 916			2	Clip	.Clip	3
1860	82	86 00 256			2	Clip	.Clip	3
1880	83	79 22 313			2	Screw	Skruv	5
1900	84	84 99 071			1	Cover Assy.	Lock kpl.	6
1940	85	73 05 204			2	Clip	.Klaff	6
1980	87	84 99 725			1	Spring	.Fjäder	6
2000	88	84 99 154			1	Clip	.Clip	5
2020	89	84 99 592			1	Seal	Tätning	5
2040	90	84 99 600			1	Seal	Tätning	5
2060	91	84 50 090			1	Seal plate	Tätningssplåt	6
2120	92	85 20 595			1	Fan unit	Fläktmotor	4
2160	93	85 20 611		ELECTROLUX	1	Resistance	.Motstånd	5
2180	93	85 57 878		BOSCH	1	Resistance	.Motstånd	5
2200	94	85 40 056		ELECTROLUX	1	Spring	.Fjäder	5
2220	94	85 57 886		BOSCH	1	Spring	.Fjäder	5
2240	95	85 10 612			1	Fan cylinder	Fläkttjul	5
2260	96	85 10 638			1	Rubber clutch	Gummikoppling	5
2300	97	85 20 629			1	End shield	Lagersköld	6
2340	98	84 99 451			1	Seal	Tätning	5
2360	99	84 99 501			1	Seal	Tätning	5
2380	100	84 99 469			1	Seal	Tätning	5
2400	101	84 77 952			1	Lock pin	Låspinne	6
2420	102	84 77 820			4	Screw	Skruv	5
2440	103	84 96 879			4	Clip	.Clip	5
2460	104	84 77 838			4	Lock nut	Låsmutter	5
2480	105	79 71 807			2	O-ring	O-ring	2
2500	106	79 22 370			6	Screw	Skruv	5
2520	107	86 01 916			1	Clip	.Clip	3
2540	108	79 19 509			3	Clip	.Clip	5
2560	109	79 62 251			2	Spring nut	Fjädermutter	5
2580	110	79 22 438			2	Screw	Skruv	5
2600	111	84 28 997			2	Washer	Bricka	5
2640	112	94 46 212			1	Bracket	Konsol	6
2660	113	79 46 742			2	Screw	Skruv	5
2680	114	84 50 181			1	Bracket	Konsol	5
2700	115	79 22 438			2	Screw	Skruv	5
2720	116	79 62 251			2	Clip	.Clip	5
2740	117	84 28 997			2	Washer	Bricka	5
2760	118	79 22 206			2	Screw	Skruv	5
2780	125	88 03 876			1	Water hose	Vattenslang	3
2800	126	84 53 581			1	Water hose	Vattenslang	3
2820	127	79 70 064			3	Clamp	Klamma	5
2840	128	93 41 728			1	Water pipe	Vattenrör	4
2860	129	93 48 889			1	Water hose	Vattenslang	5
2880	130	79 70 064			2	Clamp	Klamma	5
2900	130A	79 70 080			1	Clamp	Klamma	5
2920	130B	79 70 072			1	Clamp	Klamma	5
2940	130C	93 41 744			1	Hose	Slang	4
2960	130D	79 70 080			1	Hose clamp	Slangklamra	5
2980	136	84 77 945			1	Spring	Fjäder	6
3000	137	79 61 642			1	Pop rivet	Popnöt	5
3020	139	79 33 443			2	Clip	.Clip	5
3040	140	84 62 590		PART OF 84 97 109	2	Seal	Tätning	5
3060	141	85 55 567			1	Washer	Bricka	5
3080	145	94 80 328		LH	1	Evacuation box	Evakueringslåda	5

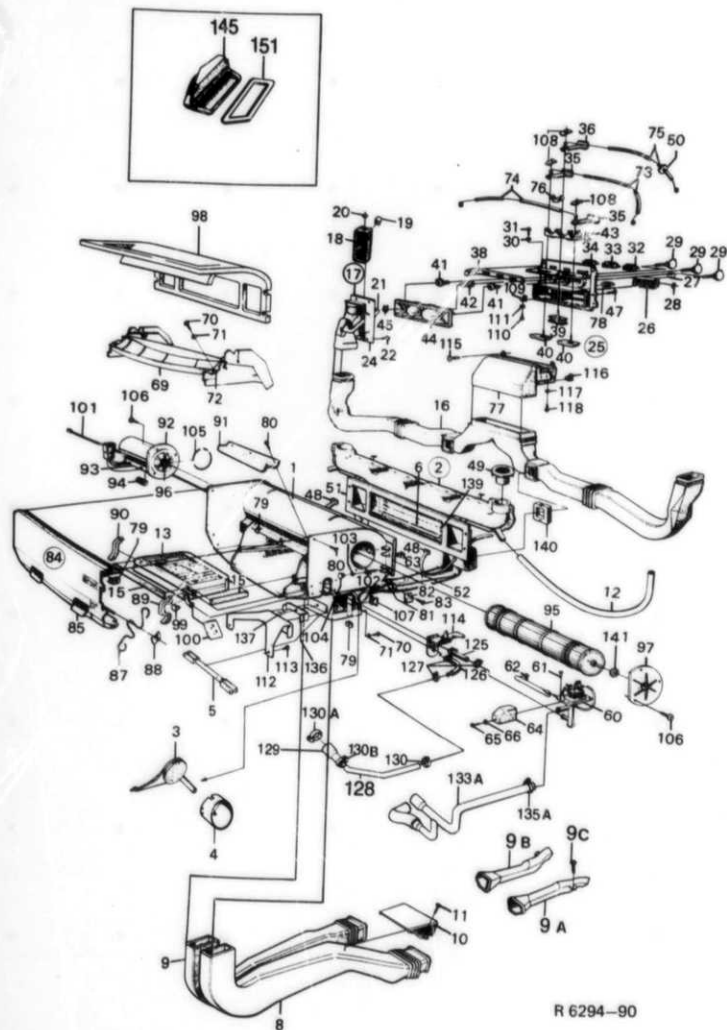

2-F14

Heating and ventilation
system
Heater core, fan etc.

Värme och ventilations-
system
Värmeväxlare, fläkt, etc

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning
2400	145	94 80 336	RH	1	Evacuation box	Evakueringslåda
3220	151	92 88 127	L=770 MM	2	Tape	Butyltape
3290						

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

8 GROUP INDEX

Main body	2-B08
Instrument panel	2-B24
Hood, front, fenders	2-C04
Doors, trunk lid	2-C10
External details, glass, sealings	2-C20
Upholstery, interior equipment and touch-up paint	2-D06
Heating and ventilation system	2-F10
Bumpers	2-F16
Complete sets	2-F20

2-F16


Bumpers
Bumper, front,

Stötfångare
Stötfångare, främre,

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02
8 GROUP INDEX		
5	Main body	2-308
5	Instrument panel	2-B24
3	Hood, front, fenders	2-C04
5	Doors, trunk lid	2-C10
4	External details,	
	glass, sealings	2-C20
5	Upholstery, interior	
	equipment and	
	touch-up paint	2-D06
4	Heating and	
5	ventilation system	2-F10
5	Bumpers	2-F16
3	Complete sets	2-F20

Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/Anst	Description	Benämning
0045	1	92 84 787		1	Bumper, front assy	Stötfångare, främre
0046					kpl	
0060	2	82 86 346		1	.Bar	.Skena
0080	3	92 92 236	LH	1	.Cell section	.Cellblock
0100	4	92 92 244	RH	1	.Cell section	.Cellblock
0120	5	82 73 278	CENTRE	2	.Cell section	.Cellblock
0140	6	82 73 286		2	.Cell section	.Cellblock
0160	7	82 73 294		2	.Cell section	.Cellblock
0180	8	82 58 378		2	.Support bar	.Stödskena
0200	9	82 58 360	CENTRE	1	.Support bar	.Stödskena
0220	10	82 58 386	CENTRE	1	.Attachment bar	.Fästskena
0260	11	82 58 394	LH, OUTER	1	.Attachment bar	.Fästskena
0300	12	82 58 402	RH, OUTER	1	.Attachment bar	.Fästskena
0345	13	92 37 165		1	.Protective cover	.Skyddshölje
0360	14	79 22 420		13	.Screw	.Skruv
0400	16	82 58 238		4	.End part	.Ändstycke
0420	17	82 66 777	LH	1	.Bracket	.Fäste
0440	17	82 66 785	RH	1	.Bracket	.Fäste
0460	18	82 58 352		2	.Nut plate	.Mutterplatta
0480	19	79 22 438		4	.Screw	.Skruv
0500	20	79 67 953		4	.Nut	.Mutter
0520	21	82 79 952	LH	1	.Bracket	.Stöd
0540	21	82 79 960	RH	1	.Bracket	.Stöd
0553	22	82 83 863	see page 8-115, 2-F20	2	Set, decor strip	Sats, dekorlist
0555	22	92 92 202	1)	2	.Decor strip	.Dekorlist
0560	23	92 92 228		2	.Spring	.Fjäder
0562	23A	92 91 998		2	.Clip	.Clip
0564	23B	79 73 308		2	.Blind rivet	.Blindnit
0600	24	76 03 442	(82 169 70)	2	Towing eyelet	Dragögla
0620	25	80 83 156		2	Screw	Skruv
0640	26	79 67 979		2	Nut	Mutter
0660	27	82 85 975		2	Rubber band	Gummiband
0680	28	82 79 853		2	Rubber buffer	Gummibuffert
0700	29	82 66 900		2	Screw	Skruv
0720	30	82 58 428		1	Bracket, number plate	Hållare, nummerplåt
0730	30A	79 70 403		2	.Cage nut	.Korgmutter
0740	31	80 59 578		4	Screw	Skruv
0760	32	94 89 758	5-SPEED	8	Washer	Bricka
0780	33	84 26 199	5-SPEED	2	Screw	Skruv

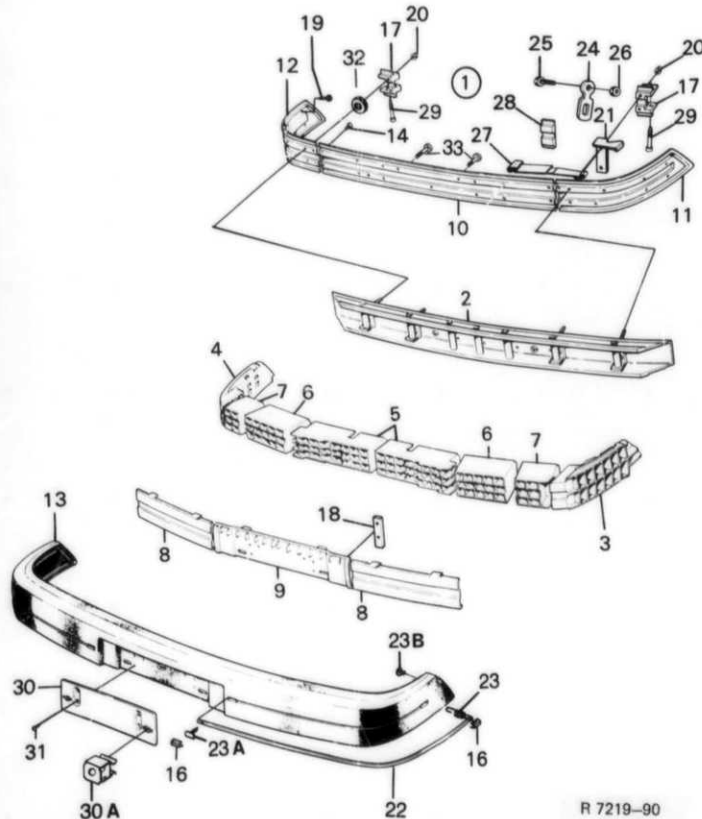

R 7219-90

1. Not as separate spare part

2-F18


Bumpers
Bumper, rear,

Stötfångare
Stötfångare, bakre

MASTER INDEX







Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0042	1	92 84 753		1	Bumper, rear assy	Stötfångare, bakre	4
0043	2	92 26 713		1	Bar	kpl	5
0060	3	82 73 286	(9224676) INNER	6	Cell section	Cellblock	5
0080	4	92 83 573	LH	1	Cell section	Cellblock	5
0100	5	92 92 269	RH	1	Cell section	Cellblock	5
0120	6	82 58 212		2	Support profile	Stödprofil	5
0140	7	92 37 173		1	Protective cover	Skyddshölje	3
0162	8	82 47 553	CENTRE	1	Attachment bar	Fästskena	6
0180	9	82 49 310	LH, OUTER	1	Attachment bar	Fästskena	6
0220	10	82 49 328	RH, OUTER	1	Attachment bar	Fästskena	6
0260	11	79 22 420		19	Screw	Skruv	5
0300	12	92 88 515		2	Spacer	Mejlanlägg	5
0360	12A	92 83 953		1	Decor strip	Dekorlist	3
0400	12A	82 83 871	see page 8-115, 2-F20	1	Set, decor strip	Sats, dekorlist	3
0420	12A	92 91 923	1)	1	Decor strip	Dekorlist	3
0480	12B	92 92 228		1	Spring	Fjäder	4
0501	12C	79 73 308		1	Blind rivet	Blindnit	5
0520	13	92 28 347		1	Rubber buffer	Gummibuffert	4
0540	14	92 23 298	25), LH	1	Bracket	Fäste	4
0545	14	69 28 576	26), LH	1	Bracket	Fäste	4
0560	14	92 23 306	RH	1	Bracket	Fäste	4
0580	14A	69 12 810		2	Rubber buffer	Gummibuffert	4
0600	15	79 67 953		4	Nut	Mutter	5
0620	16	82 51 944		2	Seal washer	Tättningsbricka	5
0640	17	92 31 408		2	Seal washer	Tättningsbricka	5
0660	18	79 67 979		6	Nut	Mutter	3
0665	34	82 58 832	LH	1	Cover plate	Täckplåt	3
0670	34	82 58 840	RH	1	Cover plate	Täckplåt	3
0680	35	82 58 253		2	Bracket	Fäste	5
0690	36	79 22 206		4	Screw	Skruv	5
0700	37	70 45 776		4	Washer	Bricka	5
0710	38	92 28 040		1	Cover	Skydd	5
0720	39	92 38 528		1	Seal washer	Tättningsbricka	5
0730	40	79 69 314		4	Screw	Skruv	5

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, steering	1-L02
7	Suspension, wheels	2-A02
8	Body	2-B02
9	Tool, labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

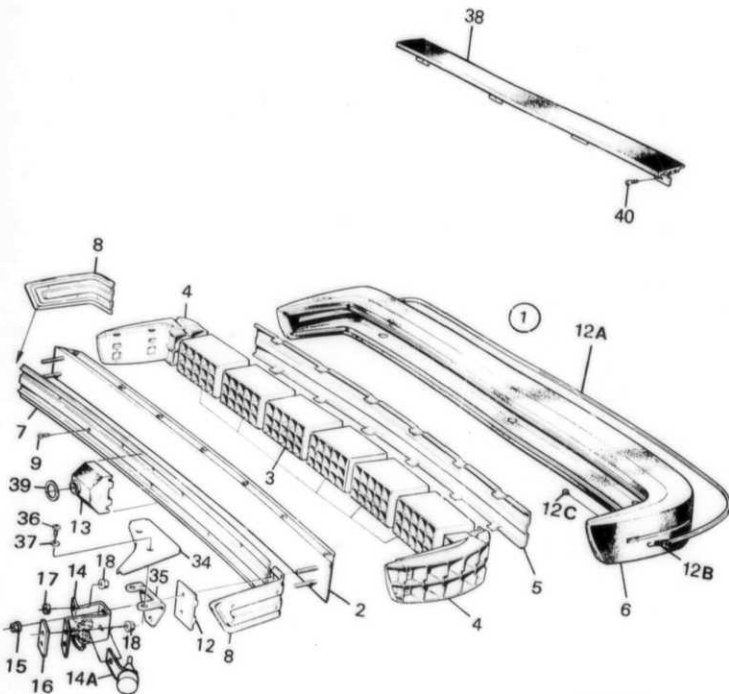

R 8225-90

1. Not as separate spare part
25. Ch. --G6007150
26. Ch. G6007151--

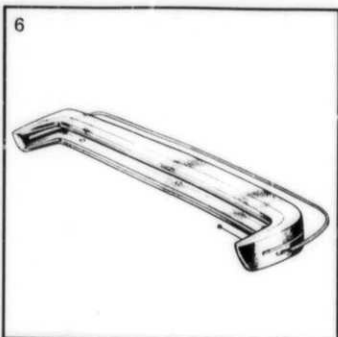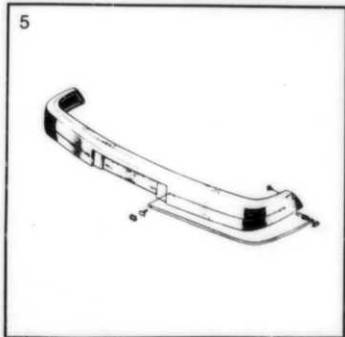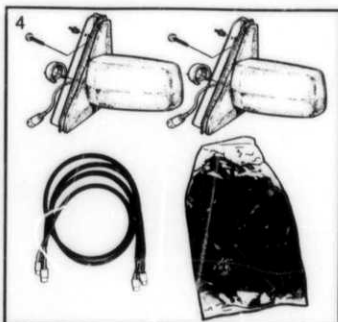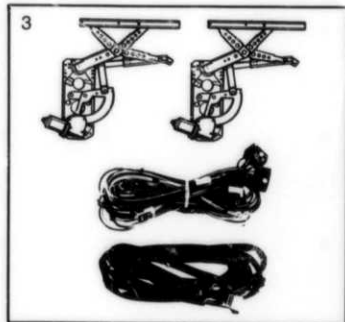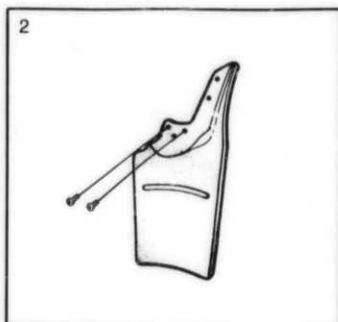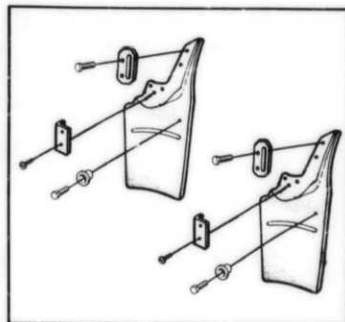

R 9293-90

2-F20

Complete sets
Car body

Satser
Kaross

2700	Pos	Part No./Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0007	1	78 74 340			X	KIT, MUD GUARD	SATS, STÅNSKYDD	3
0008		92 90 933		1) LH	1	.Mud guard	.Stånskydd	3
0009		92 90 941		1) RH	1	.Mud guard	.Stånskydd	3
0010		79 22 982			10	.Screw	.Skruv	5
0011		92 22 613			2	.Support plate	.Stödplåt	3
0012		82 27 738			2	.Support plate	.Stödplåt	6
0015								
0020	2	78 73 995		LH	X	KIT, MUD GUARD	SATS, STÅNSKYDD	3
0030		92 90 933		1)	1	.Mud guard	.Stånskydd	3
0035		79 22 974			2	.Screw	.Skruv	5
0040		79 22 982			3	.Screw	.Skruv	5
0050								
0060	2	78 74 001		RH	X	KIT, MUD GUARD	SATS, STÅNSKYDD	3
0070		92 90 941		1)	1	.Mud guard	.Stånskydd	3
0075		79 22 974			2	.Screw	.Skruv	5
0080		79 22 982			3	.Screw	.Skruv	5
0090								
0150	3	85 47 028			X	KIT, WINDOW REGU- LATOR ELECTRICAL, FRONT	SATS, FÖNSTERHISS, EL-MANÖVRERAD, FRAM	5
0160								
0170								
0180		92 87 012		LH	1	.Window regulator	.Fönsterhiss	5
0190		92 87 020		RH	1	.Window regulator	.Fönsterhiss	5
0200		85 67 638		LH	1	.Motor	.Motor	5
0210		85 67 646		RH	1	.Motor	.Motor	5
0220		92 38 015			2	.Cover	.Skydd	5
0230		85 47 036			1	.Cable network	.Ledningsnät	5
0240		85 47 044			2	.Cable network	.Ledningsnät	5
0250		73 26 093			5	.Bushing	.Bussning	5
0260		79 33 443			2	.Clip	.Clip	5
0270		79 71 880			8	.Strap	.Spännband	4
0280		79 72 441			2	.Screw	.Skruv	5
0290		95 01 859			2	.Switch	.Strömställare	3
0300		95 01 891			3	.Blind knob	.Blindknapp	5
0310		95 01 917			1	.Holder	.Hållare	6
0320		85 03 286			2	.Cable terminal	.Kabelsko	3
0330		85 22 534			2	.Cable terminal	.Kabelsko	3
0340		85 21 668			1	.Bridge connector	.Ledningsöverkoppling	3
0350		88 17 884			2	.Cover	.Täckbricka	3
0360		88 17 892			2	.Clip	.Clip	6
0370				75/661355	1	.Assembly instruction	.Monteringsanvisning	
0380								
0390	4	85 46 970			X	KIT, ELECTRIC MIRRORS	SATS, ELBACKSPEGLAR	4
0400								
0410		98 33 203		LH	1	.External mirror	.Utvändig backspegel	3
0420		98 33 211		RH	1	.External mirror	.Utvändig backspegel	3
0430		94 72 424		LH	1	.Cover	.Kåpa	4
0440		94 72 432		RH	1	.Cover	.Kåpa	4
0450		94 68 893			2	.Clip	.Clip	5
0460		85 31 204			2	.Switch	.Strömställare	3
0470		85 41 856			2	.Retainer	.Hållare	5
0480		85 28 358			2	.Nut	.Mutter	5
0490		85 79 492			2	.Knob	.Knopp	5
0500		85 53 687			2	.Cable network	.Ledningsnät	5
0510		85 45 410			1	.Cable network	.Ledningsnät	5
0520		80 74 098			1	.Nut	.Mutter	5
0530		79 71 880			4	.Strap	.Spännband	4
0540		73 26 093			5	.Bushing	.Bussning	5
0550		85 31 212			2	.Cover	.Täckbricka	5
0560		95 03 442			2	.Contact housing	.Kontakthus	4
0562		95 03 434			2	.Contact housing	.Kontakthus	4
0564		85 21 668			1	.Bridge connector	.Ledningsöverkoppling	3
0566		79 73 639			1	.Screw	.Skruv	5

1. Not as separate spare part

MASTER INDEX


0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
8	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

2-F22

Complete sets
Car body

Satser
Kaross

MASTER INDEX



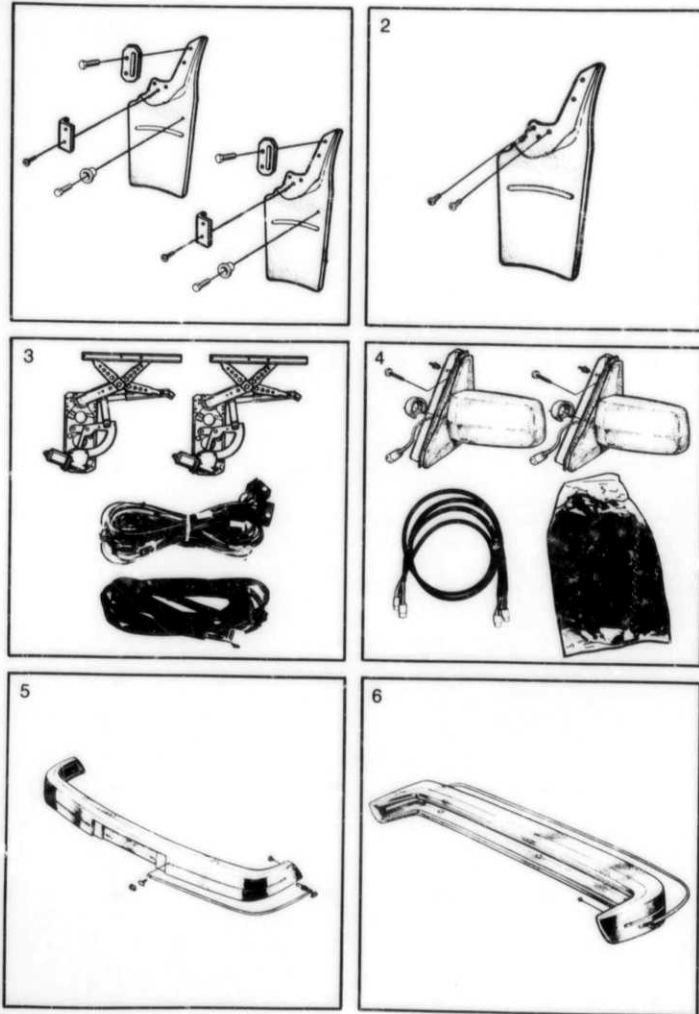


R 9293-90

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
2700							
0570			75/661447	1	„Assembly instruction	„Monteringsanvisning	
0580							
0590	4	85 46 962	RHD	X	KIT, ELECTRIC	SATS, ELBACKSPEGLAR	4
0600		98 33 245	LH	1	MIRRORS		3
0610		98 37 196	RH	1	„External mirror	„Utvändig backspegel	3
0620		94 72 424	LH	1	„Cover	„Utvändig backspegel	3
0630		94 72 432	RH	1	„Cover	„Kåpa	4
0640		94 68 893		2	„Clip	„Kåpa	4
0650		85 31 204		2	„Switch	„Strömställare	3
0660		85 41 856		2	„Retainer	„Hållare	5
0670		85 28 358		2	„Nut	„Muttor	5
0680		85 79 492		2	„Knob	„Knapp	5
0700		85 53 687		2	„Cable network	„Ledningsnät	5
0710		85 45 410		1	„Cable network	„Ledningsnät	5
0720		85 22 534		1	„Cable terminal	„Ledningssko	3
0730		79 71 880		4	„Strap	„Spännband	4
0740		73 26 093		5	„Bushing	„Bussning	5
0750		85 31 212		2	„Cover	„Täckbricka	5
0760		95 03 442		2	„Contact housing	„Kontaktus	4
0762		95 03 434		2	„Contact housing	„Kontaktus	4
0764		85 21 668		1	„Bridge connector	„Ledningsöverkoppling	3
0766		79 73 639		1	„Screw	„Skruv	5
0770			75/661447	1	„Assembly instruction	„Monteringsanvisning	
0780							
0790	5	82 83 863		X	KIT, DECOR STRIP	SATS, DEKORLIST	3
0800					BUMPER, FRONT	FRÄMRE STÖTFÄNGARE	
0810		92 92 202	1)	1	„Decor strip	„Dekorlist	5
0820		92 92 228		1	„Spring	„Fjäder	4
0830		92 91 998		1	„Clip	„Clip	5
0840		79 73 308		1	„Blind rivet	„Blindnit	5
0850							
0860	6	82 83 871		X	KIT, DECOR STRIP	SATS, DEKORLIST	3
0870					BUMPER, REAR	BAKRE STÖTDÄMPARE	
0880		92 91 923	1)	1	„Decor strip	„Dekorlist	4
0890		92 92 228		1	„Spring	„Fjäder	4
0900		79 73 308		1	„Blind rivet	„Blindnit	5

1. Not as separate spare part

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
	Main body	2-B08
	Instrument panel	2-B24
	Hood, front, fenders	2-C04
	Doors, trunk lid	2-C10
	External details, glass, sealings	2-C20
	Upholstery, interior equipment and touch-up paint	2-D06
	Heating and ventilation system	2-F10
	Bumpers	2-F16
	Complete sets	2-F20

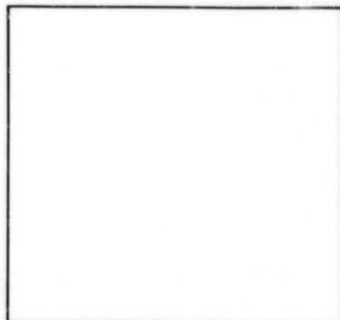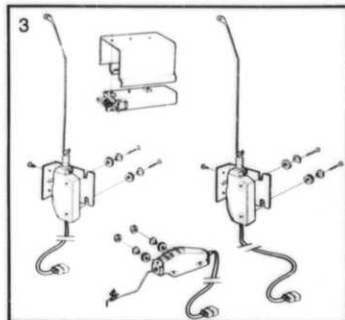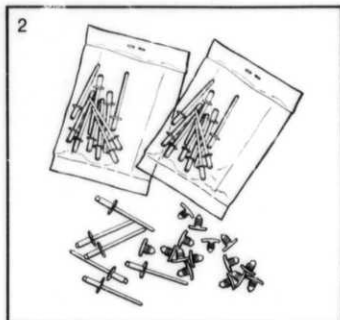

R 9294-90

2-F24

Complete sets
Car body

Satser
Kaross

2750	Pos	Part No/Art nr	K	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S
0020	1	97 46 272			X	KIT, WATER PROTECTIVE PAPER, FRONT DOOR	SATS, VATTENAVLE- DANDE PAPPER, FRAMDÖRR	5
0030								
0040								
0050		92 84 399		1) .Water drainage	2	.Water drainage	.Vattenavledare	5
0060		92 31 150		1) .Water drainage	2	.Water drainage	.Vattenavledare	5
0070								
0080	2	82 09 694			X	KIT, RIVET INNER PLATE DOOR	SATS, NIT INNER- PLÅT, DÖRR	6
0090								
0100		79 61 634			0	.Rivet	.Nit	5
0110		82 33 645			6	.Rivet	.Nit	3
0120		69 11 614		(8412256)	20	.Clamp	.Klammer	5
0130								
0140	3	85 46 855			X	CENTRAL LOCK SET	CENTRALLÅSSATS	5
0150		85 91 216			1	.Control device	.Styrdon	3
0160		85 91 224			1	.Motor	.Motor	3
0170		85 91 232			1	.Motor	.Motor	3
0180		85 79 914		LH	1	.Link	.Dragstång	5
0190		85 79 922		RH	1	.Link	.Dragstång	5
0200		85 79 906			2	.Bracket	.Konsol	6
0210		80 59 529			4	.Screw	.Skruv	4
0220		85 73 966			6	.Bushing	.Bussning	4
0230		85 73 958			6	.Sleeve	.Hylsa	4
0240		79 73 597			4	.Screw	.Skruv	5
0250		80 74 098			2	.Nut	.Mutter	5
0260		85 91 206			1	.Electronic unit	.Elektronikenhet	3
0270		85 91 414			1	.Fixing clamp	.Fästbygel	6
0280		79 71 344			2	.Screw	.Skruv	5
0290		85 91 422			2	.Plastic cover	.Plastskydd	4
0300		79 71 880			12	.Strap	.Spännband	4
0310		71 08 491			12	.Clip	.Clip	5
0320		97 30 995			2	.Clip	.Clip	5
0330		85 46 913			1	.Cable network, trunk-lid	.Ledningsnät, bak-lucka	5
0340								
0350		85 46 939			1	.Cable network distribution	.Ledningsnät, el-central	5
0360								
0370		85 91 273			1	.Cable network control device	.Ledningsnät, styrdon	5
0380								
0390		85 46 897			1	.Cable network, center	.Ledningsnät, mitre	5
0400		85 91 240			1	.Cable network, passenger door	.Ledningsnät, passagerardörr	5
0410								
0420		95 01 685			1	.Contact housing, 2-pole	.Kontakthusstift, 2-polig	4
0430								
0440		95 03 277			2	.Contact housing, 3-pole	.Kontakthusshylsa, 3-polig	4
0450								
0460		95 03 319			5	.Contact housing, 2-pole	.Kontakthusshylsa, 2-polig	4
0470								
0480		95 03 327			1	.Contact housing, 3-pole	.Kontakthusstift, 3-polig	4
0490								
0500		85 61 623			1	.Connector, 2-pole	.Skarvhus	4
0510		73 26 093			1	.Bushing	.Bussning	5
0520		85 03 286			1	.Cable terminal	.Ledningssko	5
0530				75/66 1009	1	.Assembly instruction	.Monteringsanvisning	5

1. Not as separate spare part

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02
8 GROUP INDEX		
5	Main body	2-B08
5	Instrument panel	2-B24
5	Hood, front, fenders	2-C04
3	Doors, trunk lid	2-C10
6	External details, glass, sealings	2-C20
4	Upholstery, interior equipment and touch-up paint	2-D06
5	Heating and ventilation system	2-F10
5	Bumpers	2-F16
5	Complete sets	2-F20

2-G02



Verktyg, Etiketter
Tool, Labels
Werkzeug, Etiketten
Outil, Etiquettes
Herramientas, Etiquetas

0050
0020
0040
0060
0080
0100
0120
0130
0140
0160
0180
0200
0220
0230
0240
0260
0280
0300
0320
0340
0350
0360
0380
0400
0420
0440
0450
0460
0480
0500
0520
0540
0560
0570

CONTENTS.

Tool kit	9 : 3	2-G04
Labels	9 : 5	2-G06

INNEHÅLLSFÖRTECKNING.

Verktygssats	9 : 3	2-G04
Etiketter	9 : 5	2-G06

INHALTVERZEICHNIS.

Werkzeugesatz	9 : 3	2-G04
Etikett	9 : 5	2-G06

TABLE DES MATIERES.

Trousse à outils	9 : 3	2-G04
Etiquettes	9 : 5	2-G06

SUMARIO.


Bolsa de herramientas	9 : 3	2-G04
Etiquetas	9 : 5	2-G06

MASTER INDEX

0 General	1-A02
1 Tools	1-B02
2 Engine	1-D02
3 Electrical system, Instruments	1-G02
4 Transmission	1-I02
5 Brakes	1-K02
6 Front assembly, Steering	1-L02
7 Suspension, Wheels	2-A02
8 Body	2-B02
9 Tool, Labels	2-G02
10 Numerical register	2-H02

9 GROUP INDEX

Tool kit	2-G04
Labels	2-G06

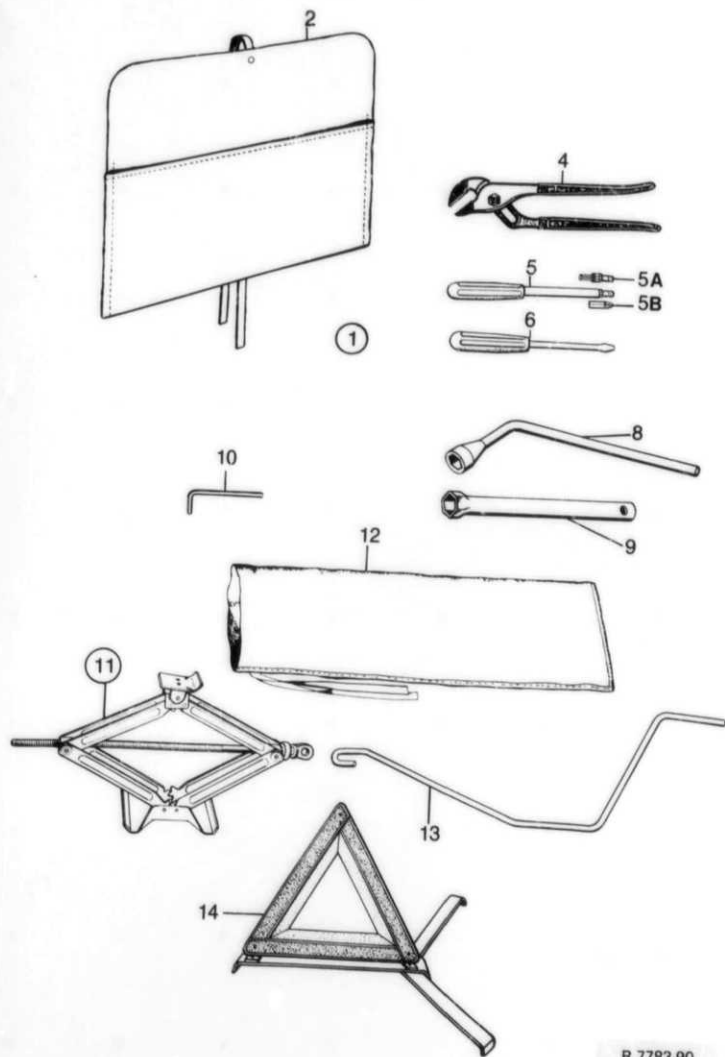

R 7783-90

2-G04

Tool kit

Verktygssats


0100	Pos	Part No/Art nr	K S	Notes/Anmärkning	Qty/ Antal	Description	Benämning
0010	1	89 94 634			1	Tool kit with bag	Verktygssats med
0020							väska
0030	2	73 05 931			1	.Tool bag	.Väska, verktyg
0040	4	89 61 732			1	.Polygrip pliers	.Polygriptång
0050	5	89 91 549	(7109069)		1	.Screw driver, torx	.Skruvmejsel, torx
0060						assy	kpl
0070	5A	89 91 564			1	.Adapter, torx	.Mejselspets, torx
0080	5B	91 01 056			1	.Adapter, cross-recess	.Mejselspets, krysspår
0090	6	70 37 492			1	.Screw driver	.Skruvmejsel
0100	8	73 48 287			1	.Sleeve wrench, wheel	.Hylsnyckel, hjul-
0110						nut	mutter
0120	9	89 31 198			1	.Sleeve, spark plug	.Hylsa, tändstift
0130	10	89 46 097			1	.Hexagon wrench, front	.Sextkantnyckel, stol
0140						seat	
0150	11	89 61 740	(8948028)		1	Jack	Domkraft
0160	12	89 11 190			1	Bag	Säck
0170	13	89 35 959			1	Crank	Vev
0180	14	85 39 900			1	Warning triangle	Varningstriangel

MASTER INDEX

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-J02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

9 GROUP INDEX

Tool kit	2-G04
Labels	2-G06

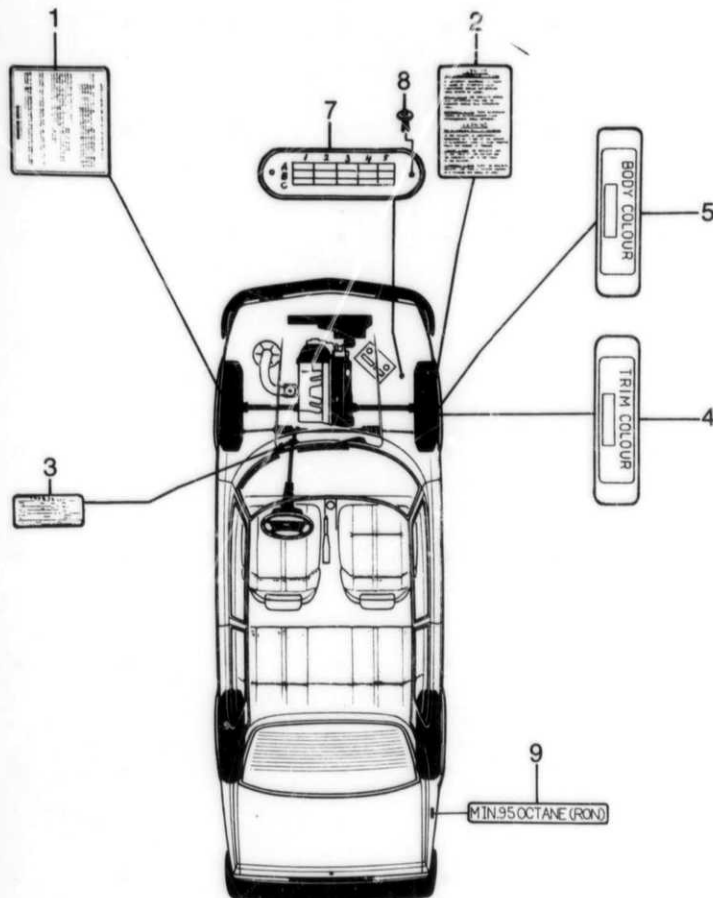

R 7784-90

2-G06

Labels

Etiketter

MASTER INDEX

Pos	Part No/Art nr	K S	Notes/Anmärkningar	Qty/ Antal	Description	Benämning	S L
0010	1	75 27 682	-1985 SW	1	Label, exhaust emission control device	Etikett, avgasreningssystem	4
0020	1	75 32 583	1986 SW	1	Label, exhaust emission control device	Etikett, avgasreningssystem	4
0040	1	75 38 754	1987- SW (SOLEX-CARBURETOR)	1	Label, exhaust emission control device	Etikett, avgasreningssystem	4
0060	1	75 37 293	1987- SW (PIEBURG-CARBURETOR)	1	Label, exhaust emission control device	Etikett, avgasreningssystem	4
0070	2	85 06 941	SWEDISH-ENGLISH	1	Warning label, alternator, Bosch	Varningsetikett, generator, Bosch	5
0080	2	85 06 925	SWEDISH-FINNISH	1	Warning label, alternator, Bosch	Varningsetikett, generator, Bosch	6
0090	3	85 37 011	SW,NO,DK	1	Label, light reducing	Textskylt, ljusreducering	5
0100	3	85 39 553	SF	1	Label, light reducing	Textskylt, ljusreducering	5
0110	4	98 62 228	A11	1	Label, trim code	Etikett, klädsele	6
0120	4	98 62 236	B11	1	Label, trim code	Etikett, klädsele	6
0130	4	98 62 244	C11	1	Label, trim code	Etikett, klädsele	6
0140	4	98 62 255	D11	1	Label, trim code	Etikett, klädsele	6
0150	4	94 76 391	C15	1	Label, trim code	Etikett, klädsele	6
0160	4	97 31 316	C21	1	Label, trim code	Etikett, klädsele	6
0170	4	98 08 148	C24	1	Label, trim code	Etikett, klädsele	6
0180	5	92 90 230	112B	1	Label, colour code	Etikett, färgkod	6
0190	5	92 94 638	116B	1	Label, colour code	Etikett, färgkod	6
0200	5	92 94 645	117H	1	Label, colour code	Etikett, färgkod	6
0210	5	69 13 396	120 G	1	Label, colour code	Etikett, färgkod	6
0220	5	92 90 255	127H	1	Label, colour code	Etikett, färgkod	6
0230	5	69 13 388	129 H	1	Label, colour code	Etikett, färgkod	6
0240	5	92 90 271	131H	1	Label, colour code	Etikett, färgkod	6
0250	5	92 90 289	140B	1	Label, colour code	Etikett, färgkod	6
0260	5	92 90 297	153B	1	Label, colour code	Etikett, färgkod	6
0270	5	92 90 305	155G	1	Label, colour code	Etikett, färgkod	6
0280	5	69 26 208	157B	1	Label, colour code	Etikett, färgkod	6
0290	5	69 26 216	158B	1	Label, colour code	Etikett, färgkod	6
0300	5	69 26 224	159G	1	Label, colour code	Etikett, färgkod	6
0310	5	69 26 232	162B	1	Label, colour code	Etikett, färgkod	6
0320	5	92 90 313	168B	1	Label, colour code	Etikett, färgkod	6
0330	5	92 90 339	170B	1	Label, colour code	Etikett, färgkod	6
0340	5	69 24 831	188	1	Label, colour code	Etikett, färgkod	6
0350	5	69 35 688	198	1	Label, colour code	Etikett, färgkod	6
0360	5	69 58 151	200	1	Label, colour code	Etikett, färgkod	6
0370	5	69 58 169	201	1	Label, colour code	Etikett, färgkod	6
0380	5	69 58 177	202	1	Label, colour code	Etikett, färgkod	6
0390	5	69 58 185	203	1	Label, colour code	Etikett, färgkod	6
0400	5	69 58 193	204	1	Label, colour code	Etikett, färgkod	6
0410	5	69 58 201	205	1	Label, colour code	Etikett, färgkod	6
0420	5	69 58 219	206	1	Label, colour code	Etikett, färgkod	6
0430	7	92 83 722		1	Plate, campaign	Skytt, kampanj	5
0440	8	79 61 634		2	Blind rivet	Blindnät	5
0450	9	75 37 756		1	Label, fuel 95 octane	Etikett, bränsle 95 oktan	4

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02

9 GROUP INDEX

Tool kit	2-G04
Labels	2-G06



Nummerregister
Numerical register
Nummern- Verzeichnis
Index numérique
Indice numérico

2-H02

Numerical register

Nummerregister

MASTER INDEX

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
13 24 144	02	035	1-E12	69 18 148	08	047	2-C24	70 48 473	04	045	1-J22	71 93 188	04	009	1-I10
40 15 616	02	061	1-F14	69 18 155	08	047	2-C24	70 61 328	04	015	1-16	71 93 188	05	013	1-K14
40 17 289	03	009	1-G10	69 18 163	08	047	2-C24	70 61 328	04	021	1-J22	72 18 864	08	027	2-C04
40 29 955	04	039	1-J16	69 18 171	08	047	2-C24	70 61 328	04	039	1-J16	73 05 204	08	107	2-F12
69 10 582	08	009	2-B10	69 18 189	08	047	2-C24	70 61 328	08	037	2-C14	73 05 931	09	003	2-G04
69 10 806	08	017	2-B18	69 18 361	08	047	2-C24	70 61 559	01	025	1-C02	73 09 370	03	037	1-H14
69 10 814	08	017	2-B18	69 18 593	08	047	2-C24	70 70 626	06	003	1-L04	73 11 244	02	041	1-E18
69 11 291	08	039	2-C16	69 19 013	08	037	2-C14	70 70 642	06	003	1-L04	73 11 251	02	041	1-E18
69 11 309	08	039	2-C16	69 19 039	08	051	2-D04	70 70 667	06	003	1-L04	73 11 764	02	041	1-E18
69 11 317	08	047	2-C24	69 19 047	08	051	2-D04	70 71 061	06	003	1-L04	73 11 764	08	027	2-C04
69 11 614	08	049	2-D02	69 19 054	08	051	2-D04	70 71 079	06	003	1-L04	73 11 772	03	007	1-G08
69 11 614	08	119	2-F24	69 19 492	08	009	2-B10	70 71 087	06	003	1-L04	73 12 176	04	009	1-I10
69 11 804	08	043	2-C20	69 21 670	08	031	2-C08	70 71 939	06	003	1-L04	73 13 182	04	043	1-J20
69 11 820	08	049	2-D02	69 21 688	08	031	2-C08	70 84 197	03	019	1-G20	73 13 232	04	007	1-I08
69 11 853	08	043	2-C20	69 21 696	08	031	2-C08	70 84 197	03	021	1-G22	73 13 232	04	009	1-I10
69 11 895	08	043	2-C20	69 21 704	08	031	2-C08	70 88 073	03	017	1-G18	73 13 240	04	007	1-I08
69 11 903	08	049	2-D02	69 24 831	09	005	2-G06	70 88 073	08	025	2-C02	73 13 240	04	009	1-I10
69 11 911	08	049	2-D02	69 25 317	08	049	2-D02	70 88 073	08	073	2-E02	73 13 752	08	007	2-B08
69 12 570	08	033	2-C10	69 25 754	08	033	2-C10	70 96 640	08	077	2-E06	73 23 579	08	031	2-C08
69 12 588	08	033	2-C10	69 25 762	08	033	2-C10	70 96 944	03	029	1-H06	73 26 093	03	037	1-H14
69 12 596	08	033	2-C10	69 26 208	09	005	2-G06	70 96 944	03	047	1-H24	73 26 093	08	115	2-F20
69 12 604	08	033	2-C10	69 26 216	09	005	2-G06	71 08 491	08	119	2-F24	73 26 093	08	117	2-F22
69 12 612	08	015	2-B16	69 26 224	09	005	2-G06	71 09 341	07	003	2-A04	73 26 093	08	119	2-F24
69 12 620	08	015	2-B16	69 26 232	09	005	2-G06	71 09 341	07	009	2-A10	73 26 580	03	005	1-G06
69 12 638	08	015	2-B16	69 26 307	08	011	2-B12	71 16 452	08	009	2-B10	73 28 289	06	003	1-L04
69 12 646	08	015	2-B16	69 26 497	08	049	2-D02	71 17 880	03	039	1-H16	73 34 063	03	015	1-G16
69 12 653	08	021	2-B22	69 26 505	08	049	2-D02	71 54 719	03	019	1-G20	73 34 253	03	015	1-G16
69 12 661	08	021	2-B22	69 26 737	08	049	2-D02	71 55 070	03	041	1-H18	73 34 592	03	041	1-H18
69 12 679	08	031	2-C08	69 26 745	08	049	2-D02	71 55 085	03	041	1-H18	73 42 892	03	041	1-H18
69 12 687	08	031	2-C08	69 27 065	08	019	2-B20	71 55 096	03	041	1-H18	73 42 900	03	041	1-H18
69 12 695	08	031	2-C08	69 27 289	08	009	2-B10	71 55 104	03	041	1-H18	73 46 232	08	073	2-E02
69 12 703	08	031	2-C08	69 28 576	08	113	2-F18	71 55 112	03	041	1-H18	73 48 287	09	003	2-G04
69 12 810	08	113	2-F18	69 30 341	08	007	2-B08	71 55 120	03	041	1-H18	73 48 964	04	009	1-I10
69 13 388	09	005	2-G06	69 35 688	09	005	2-G06	71 55 146	03	039	1-H16	73 50 796	08	105	2-F10
69 13 396	09	005	2-G06	69 37 429	08	013	2-B14	71 55 203	03	039	1-H16	73 50 895	08	105	2-F10
69 13 784	08	033	2-C10	69 37 452	08	013	2-B14	71 55 211	03	039	1-H16	73 50 911	08	105	2-F10
69 14 154	08	007	2-B08	69 37 494	08	045	2-C22	71 55 229	03	039	1-H16	73 50 911	08	107	2-F12
69 14 162	08	007	2-B08	69 37 759	08	013	2-B14	71 55 237	03	039	1-H16	73 54 871	08	073	2-E02
69 14 410	08	007	2-B08	69 40 704	08	039	2-C16	71 55 500	03	047	1-H24	73 74 606	08	105	2-F10
69 14 436	08	007	2-B08	69 40 712	08	039	2-C16	71 55 633	03	039	1-H16	73 77 344	08	065	2-D18
69 15 688	08	027	2-C04	69 57 435	08	009	2-B10	71 55 658	03	039	1-H16	73 98 340	08	095	2-E24
69 15 607	08	043	2-C20	69 58 151	09	005	2-G06	71 55 708	08	007	2-B08	73 99 363	04	025	1-J02
69 15 623	08	043	2-C20	69 58 169	09	005	2-G06	71 56 409	03	037	1-H14	75 00 622	02	011	1-D12
69 15 649	08	043	2-C20	69 58 177	09	005	2-G06	71 62 308	08	009	2-B10	75 00 739	02	017	1-G18
69 15 706	08	043	2-C20	69 58 185	09	005	2-G06	71 63 066	08	009	2-B10	75 01 216	03	013	1-G14
69 15 722	08	013	2-B14	69 58 193	09	005	2-G06	71 63 074	02	047	1-E24	75 01 570	03	013	1-G14
69 15 730	08	013	2-B14	69 58 201	09	005	2-G06	71 63 074	08	007	2-B08	75 01 604	02	017	1-D18
69 15 920	06	013	2-B14	69 58 219	09	005	2-G06	71 63 074	08	015	2-B16	75 02 958	02	021	1-D22
69 17 173	08	027	2-C04	70 27 659	03	005	1-G06	71 63 074	08	019	2-B20	75 02 962	02	021	1-D22
69 17 199	08	021	2-B22	70 35 801	08	007	2-B08	71 63 603	06	003	1-L04	75 02 974	02	021	1-D22
69 17 223	08	013	2-B14	70 35 801	08	015	2-B16	71 66 937	08	035	2-C12	75 03 188	02	021	1-D22
69 17 264	08	013	2-B14	70 37 492	09	003	2-G04	71 67 117	04	041	1-J18	75 03 758	02	029	1-E06
69 17 306	08	013	2-B14	70 38 342	03	037	1-H14	71 67 117	04	045	1-J22	75 04 012	02	033	1-E10
69 17 322	08	013	2-B14	70 38 342	08	007	2-B08	71 75 433	06	003	1-L04	75 04 046	02	033	1-E10
69 17 330	08	013	2-B14	70 38 342	08	017	2-B18	71 75 441	06	003	1-L04	75 04 053	02	037	1-E14
69 17 348	08	013	2-B14	70 38 342	08	033	2-C10	71 80 607	05	015	1-K16	75 04 111	02	029	1-E06
69 17 355	08	013	2-B14	70 45 776	08	089	2-E18	71 83 935	02	047	1-E24	75 04 137	02	031	1-E08
69 17 652	08	023	2-B24	70 45 776	08	113	2-F18	71 83 973	02	047	1-E24	75 04 152	02	029	1-E06
69 17 934	08	007	2-B08	70 48 465	04	045	1-J22	71 84 443	06	003	1-L04	75 04 160	02	029	1-E06
69 18 031	08	043	2-C20	70 48 473	04	041	1-J18	71 93 188	04	007	1-I08	75 04 210	02	037	1-E14

2-H03

Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
75 04 384	02	029	1-E06	75 20 521	02	057	1-F10	75 24 655	02	053	1-F06	75 35 271	03	009	1-G10
75 05 217	02	007	1-D08	75 20 539	02	017	1-D18	75 24 671	02	007	1-D08	75 35 289	03	009	1-G10
75 05 449	02	019	1-D20	75 20 559	02	057	1-F10	75 24 671	02	053	1-F06	75 35 297	03	009	1-G10
75 06 959	02	027	1-E04	75 20 612	02	017	1-D18	75 24 697	02	007	1-D08	75 35 305	03	009	1-G10
75 07 155	02	015	1-D16	75 20 620	02	017	1-D18	75 24 697	02	053	1-F06	75 35 313	03	009	1-G10
75 07 460	02	057	1-F10	75 20 638	02	017	1-D18	75 24 713	02	007	1-D08	75 35 321	03	009	1-G10
75 07 833	02	011	1-D12	75 20 646	02	017	1-D18	75 24 713	02	053	1-F06	75 35 339	03	009	1-G10
75 07 973	02	037	1-E14	75 20 653	02	017	1-D18	75 24 739	02	007	1-D08	75 35 537	02	031	1-E08
75 08 203	02	059	1-F12	75 21 081	02	057	1-F10	75 24 739	02	053	1-F06	75 36 097	02	039	1-E16
75 08 328	02	019	1-D20	75 21 180	02	007	1-D08	75 24 754	02	007	1-D08	75 36 097	02	055	1-F08
75 08 583	02	035	1-E12	75 21 198	02	007	1-D08	75 24 754	02	053	1-F06	75 36 956	02	027	1-F04
75 08 732	02	021	1-D22	75 21 255	02	017	1-D18	75 24 770	02	007	1-D08	75 37 145	02	059	1-F12
75 08 732	02	053	1-F06	75 21 370	02	047	1-E24	75 24 770	02	053	1-F06	75 37 293	09	005	2-G06
75 09 128	02	023	1-D24	75 21 578	02	033	1-E10	75 24 796	02	007	1-D08	75 37 533	02	047	1-E24
75 09 128	02	053	1-F06	75 21 651	02	021	1-D22	75 24 796	02	053	1-F06	75 37 756	09	005	2-G06
75 09 136	02	021	1-D22	75 21 669	02	021	1-D22	75 24 812	02	007	1-D08	75 37 764	02	051	1-F14
75 09 136	02	053	1-F06	75 21 677	02	023	1-D24	75 24 812	02	053	1-F06	75 37 806	02	025	1-E02
75 09 367	02	015	1-D16	75 22 402	02	019	1-D20	75 24 838	02	007	1-D08	75 38 440	02	039	1-E16
75 09 375	02	015	1-D16	75 22 402	02	059	1-F12	75 24 838	02	053	1-F06	75 38 440	02	059	1-F12
75 10 076	02	031	1-E08	75 22 733	02	029	1-E06	75 24 853	02	007	1-D08	75 38 754	09	005	2-G06
75 10 258	04	017	1-I18	75 23 897	02	011	1-D12	75 24 853	02	053	1-F06	75 39 133	02	031	1-E08
75 10 258	04	023	1-I24	75 24 275	02	007	1-D08	75 24 978	02	017	1-D18	75 40 727	04	039	1-J16
75 10 308	03	007	1-G08	75 24 275	02	053	1-F06	75 25 421	02	031	1-E08	75 41 279	02	041	1-E18
75 10 308	03	047	1-H24	75 24 291	02	007	1-D08	75 25 439	02	031	1-E08	75 41 717	02	041	1-E18
75 10 332	03	007	1-G08	75 24 291	02	053	1-F06	75 25 736	02	047	1-E24	75 41 725	02	041	1-E18
75 11 157	03	011	1-G12	75 24 317	02	007	1-D08	75 26 874	02	019	1-D20	75 41 733	02	041	1-E18
75 11 157	03	047	1-H24	75 24 317	02	053	1-F06	75 26 973	02	047	1-E24	75 41 907	04	039	1-J16
75 11 314	03	007	1-G08	75 24 333	02	007	1-D08	75 27 021	02	031	1-E08	75 42 038	04	039	1-J16
75 11 314	03	031	1-E08	75 24 333	02	053	1-F06	75 27 682	09	005	2-G06	75 42 772	02	041	1-E18
75 12 320	02	031	1-E08	75 24 358	02	007	1-D08	75 27 716	03	009	1-G10	75 42 806	03	007	1-G08
75 14 846	04	015	1-I16	75 24 358	02	053	1-F06	75 27 724	03	009	1-G10	75 42 913	04	039	1-J16
75 14 846	04	023	1-I24	75 24 374	02	007	1-D08	75 27 732	03	009	1-G10	75 42 913	04	045	1-J22
75 15 075	03	011	1-G12	75 24 374	02	053	1-F06	75 27 740	03	009	1-G10	75 42 921	04	015	1-I16
75 15 190	02	009	1-D10	75 24 350	02	007	1-D08	75 27 757	03	009	1-G10	75 42 921	04	021	1-I22
75 15 208	02	033	1-E10	75 24 390	02	053	1-F06	75 27 765	03	009	1-G10	75 43 176	04	039	1-J16
75 15 588	02	057	1-F10	75 24 416	02	007	1-D08	75 27 773	03	009	1-G10	75 43 184	04	039	1-J16
75 15 596	02	057	1-F10	75 24 416	02	053	1-F06	75 27 781	03	009	1-G10	75 43 432	02	005	1-D06
75 16 802	02	017	1-D22	75 24 432	02	007	1-D08	75 27 799	03	009	1-G10	75 44 828	04	039	1-J16
75 16 255	02	011	1-D12	75 24 432	02	053	1-F06	75 27 807	03	009	1-G10	75 44 828	04	039	1-J16
75 16 586	02	011	1-D12	75 24 457	02	007	1-D08	75 27 815	03	009	1-G10	75 46 872	04	015	1-I16
75 16 826	02	011	1-D12	75 24 457	02	053	1-F06	75 27 823	03	009	1-G10	75 46 872	04	021	1-I22
75 17 097	02	033	1-E10	75 24 473	02	007	1-D08	75 27 831	03	009	1-G10	75 47 169	02	005	1-D06
75 17 253	02	033	1-E10	75 24 473	02	053	1-F06	75 27 849	03	009	1-G10	75 47 177	02	005	1-D06
75 17 261	02	033	1-E10	75 24 499	02	007	1-D08	75 27 856	03	009	1-G10	75 47 227	02	005	1-D06
75 17 907	02	021	1-D22	75 24 499	02	053	1-F06	75 27 864	03	009	1-G10	75 47 227	02	059	1-F12
75 17 956	02	021	1-D22	75 24 515	02	007	1-D08	75 27 874	03	009	1-G10	75 60 048	02	019	1-D20
75 18 343	02	007	1-D08	75 24 515	02	053	1-F06	75 27 880	03	009	1-G10	75 60 915	02	021	1-D22
75 18 541	03	013	1-G14	75 24 531	02	007	1-D08	75 28 920	02	031	1-E08	75 61 061	03	011	1-G12
75 18 632	02	015	1-D16	75 24 531	02	053	1-F06	75 28 953	02	031	1-E08	75 61 061	03	047	1-H24
75 18 848	02	015	1-D16	75 24 556	02	007	1-D08	75 32 161	02	005	2-D06	75 61 079	03	011	1-G12
75 19 947	03	007	1-G08	75 24 556	02	053	1-F06	75 32 186	02	047	1-E24	75 61 087	03	011	1-G12
75 19 910	02	035	1-E12	75 24 572	02	007	1-D08	75 33 136	02	047	1-E24	75 61 087	03	047	1-H24
75 19 910	02	057	1-F10	75 24 572	02	053	1-F06	75 33 612	02	055	1-F08	75 61 087	03	047	1-H24
75 19 358	02	015	1-D16	75 24 598	02	007	1-D08	75 33 631	02	055	1-F08	75 61 095	03	011	1-G12
75 19 382	02	015	1-D16	75 24 614	02	007	1-D08	75 33 631	02	055	1-F08	75 61 095	03	047	1-H24
75 20 067	02	027	1-E04	75 24 614	02	053	1-F06	75 33 797	02	061	1-F14	75 61 202	02	045	1-E22
75 20 113	02	017	1-D18	75 24 630	02	007	1-D08	75 34 522	02	031	1-E08	75 61 483	02	029	1-E06
75 20 513	02	057	1-F10	75 24 630	02	053	1-F06	75 34 639	02	031	1-E08	75 61 491	02	021	1-D22
75 20 521	02	017	1-D18	75 24 655	02	007	1-D08	75 35 250	03	009	1-G10	75 61 509	02	033	1-E10
								75 35 263	03	009	1-G10	75 61 657	02	029	1-E06

2-H04

Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
75 61 707	02	029	1-E06	75 64 709	02	025	1-E02	78 41 067	01	015	1-B16	79 10 540	03	007	1-G08
75 61 749	02	017	1-D18	75 64 711	02	025	1-E02	78 41 141	01	015	1-B16	79 10 540	03	029	1-H04
75 61 772	02	035	1-E12	75 64 725	02	025	1-E02	78 41 331	01	021	1-B22	79 10 540	08	027	2-C06
75 61 772	02	049	1-F02	75 64 733	02	025	1-E02	78 41 349	01	021	1-B22	79 10 540	08	033	2-C10
75 61 772	02	057	1-F10	75 64 741	02	025	1-E02	78 43 303	01	029	1-C06	79 10 557	02	061	1-F14
75 62 077	02	023	1-D24	75 64 758	02	025	1-E02	78 46 132	03	029	1-H06	79 10 557	06	007	1-L08
75 62 259	02	017	1-D18	75 64 766	02	025	1-E02	78 60 905	01	007	1-B08	79 10 557	08	027	2-C04
75 62 275	02	017	1-D18	75 65 037	02	007	1-D08	78 60 513	01	007	1-B08	79 10 557	06	033	2-C10
75 62 424	02	033	1-E10	75 65 037	02	049	1-F02	78 60 695	01	029	1-C06	79 10 565	05	009	1-K16
75 62 440	02	033	1-E10	75 65 795	02	029	1-E06	78 60 730	01	029	1-C06	79 10 565	06	003	1-L04
75 63 141	02	007	1-D08	75 67 363	02	007	1-D08	78 60 794	01	005	1-B06	79 10 565	08	007	2-B08
75 63 166	02	015	1-D06	75 68 809	02	021	1-D22	78 60 802	01	005	1-B06	79 10 599	07	005	2-A06
75 63 646	02	015	1-D16	75 68 916	02	049	1-F02	78 60 877	01	005	1-B06	79 11 522	08	091	2-E20
75 63 653	02	015	1-D16	75 68 981	02	049	1-F02	78 60 885	01	005	1-B06	79 13 833	08	091	2-E20
75 63 661	02	011	1-D12	75 69 839	02	049	1-F02	78 61 057	01	007	1-B08	79 14 690	03	005	1-G06
75 63 687	02	043	1-E20	76 00 729	08	011	2-B12	78 61 065	01	007	1-B08	79 14 690	08	027	2-C04
75 64 057	02	033	1-E10	76 00 737	08	011	2-B12	78 61 479	01	005	1-B06	79 14 708	08	027	2-C04
75 64 222	02	011	1-D12	76 00 745	08	007	2-B08	78 62 014	01	007	1-B08	79 14 708	08	029	2-C06
75 64 230	02	011	1-D12	76 00 752	08	007	2-B08	78 62 287	01	005	1-B06	79 15 093	05	015	1-K16
75 64 248	02	019	1-D20	76 00 802	08	015	2-B16	78 73 508	08	033	2-C10	79 15 549	08	013	2-B14
75 64 248	02	059	1-F12	76 00 844	08	007	2-B08	78 73 516	08	033	2-C10	79 15 564	02	041	1-E18
75 64 701	02	017	1-D18	76 00 877	08	007	2-B08	78 73 564	08	025	2-C02	79 15 564	03	005	1-B06
75 64 859	02	033	1-E10	76 00 885	08	011	2-B12	78 73 995	08	049	2-D20	79 15 564	08	035	2-C10
75 66 433	02	019	1-D20	76 00 893	08	015	2-B16	78 73 995	08	115	2-F02	79 15 564	08	087	2-B16
75 66 458	02	029	1-E06	76 00 976	08	015	2-B16	78 74 001	08	049	2-D20	79 15 655	03	023	2-E24
75 66 516	02	043	1-E20	76 01 040	08	015	2-B16	78 74 001	08	115	2-F02	79 15 713	03	033	1-H20
75 66 532	02	045	1-E22	76 01 057	08	015	2-B16	78 74 118	08	019	2-B20	79 16 489	03	019	1-G10
75 69 346	02	033	1-E10	76 01 073	08	015	2-B16	78 74 159	08	017	2-B18	79 16 489	08	039	2-C16
75 69 346	02	049	1-F02	76 01 081	08	015	2-B16	78 74 167	08	017	2-B18	79 16 489	08	106	2-F10
75 69 452	02	013	1-D14	76 01 115	08	015	2-B16	78 74 340	08	049	2-D20	79 16 497	03	005	1-G06
75 80 244	02	027	1-E04	76 01 131	08	021	2-B22	78 74 340	08	115	2-F02	79 16 497	08	033	2-C10
75 80 574	02	027	1-E04	76 01 479	08	009	2-B10	78 74 496	03	039	1-H16	79 16 505	02	047	1-E24
75 80 582	02	027	1-E04	76 01 495	08	009	2-B10	78 74 506	03	039	1-H16	79 16 505	08	029	2-C06
75 81 093	02	025	1-E02	76 01 701	08	009	2-B10	78 74 530	05	007	1-K08	79 16 513	05	007	2-B08
75 81 259	02	011	1-D12	76 01 719	08	009	2-B10	78 74 530	05	017	1-K18	79 16 513	08	037	2-C14
75 81 317	02	027	1-E04	76 01 735	08	009	2-B10	78 74 548	05	005	1-K08	79 18 261	08	083	2-E12
75 81 333	02	029	1-E06	76 02 089	08	015	2-B16	78 74 546	05	017	1-K18	79 18 717	06	003	1-L04
75 81 440	02	033	1-E10	76 03 376	08	043	2-C20	78 74 886	01	021	1-B22	79 18 733	06	003	1-L04
75 81 473	02	025	1-E02	76 03 442	08	111	2-F16	78 84 166	01	027	1-C04	79 19 483	08	029	2-C06
75 84 485	02	025	1-E02	76 12 153	08	007	2-B08	78 84 182	01	027	1-C04	79 19 509	06	107	2-F14
75 84 493	02	025	1-E02	78 14 619	03	009	1-G10	79 03 164	08	007	2-B08	79 19 574	03	033	1-H10
75 84 501	02	025	1-E02	78 14 908	01	007	1-B08	79 03 313	08	007	2-B08	79 19 574	03	037	1-H14
75 84 519	02	025	1-E02	78 14 916	01	007	1-B08	79 03 347	06	003	1-L04	79 21 331	08	091	2-E20
75 84 527	02	025	1-E02	78 20 228	08	087	2-F02	79 03 370	06	003	1-L04	79 21 895	03	033	1-H10
75 84 535	02	025	1-E02	78 20 244	08	097	2-F02	79 03 552	02	005	1-D06	79 22 156	03	045	1-E22
75 84 543	02	025	1-E02	78 29 609	03	039	1-H16	79 03 743	07	003	2-A04	79 22 206	08	073	2-C02
75 84 550	02	025	1-E02	78 29 617	03	039	1-H16	79 04 089	07	003	2-A04	79 22 206	08	105	2-F10
75 84 568	02	025	1-E02	78 29 525	03	039	1-H16	79 04 089	07	009	2-A10	79 22 206	08	107	2-F12
75 84 576	02	025	1-E02	78 29 633	03	039	1-H16	79 04 097	06	003	1-L04	79 22 206	08	113	2-F18
75 84 584	02	025	1-E02	78 29 641	03	039	1-H16	79 04 113	06	003	1-L04	79 22 222	03	045	1-H22
75 84 600	02	025	1-E02	78 29 666	03	039	1-H16	79 04 162	03	033	1-H10	79 22 230	03	019	1-G20
75 84 618	02	025	1-E02	78 29 674	03	039	1-H16	79 04 394	04	007	1-K08	79 22 263	03	015	1-B16
75 84 626	02	025	1-E02	78 29 682	03	039	1-H16	79 04 394	04	009	1-H10	79 22 263	08	105	2-F10
75 84 634	02	025	1-E02	78 29 690	03	041	1-H18	79 04 394	05	013	1-K14	79 22 271	08	087	2-E16
75 84 642	02	025	1-E02	78 29 708	03	041	1-H18	79 09 963	04	009	1-H10	79 22 271	08	105	2-F10
75 84 659	02	025	1-E02	78 29 716	03	041	1-H18	79 09 989	04	007	1-K08	79 22 271	08	107	2-F12
75 84 667	02	025	1-E02	78 29 724	03	041	1-H18	79 09 989	05	013	1-K14	79 22 289	02	027	1-E04
75 84 675	02	025	1-E02	78 40 622	01	007	1-B08	79 10 524	08	039	2-C16	79 22 289	08	013	2-B14
75 84 683	02	025	1-E02	78 40 853	01	017	1-B18	79 10 540	02	061	1-F14	79 22 305	08	057	2-C06
75 84 691	02	025	1-E02	78 40 933	01	029	1-E06	79 10 540	02	005	-F06	79 22 305	08	091	2-B10

2-H05 Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
79 22 313	08	107	2-F12	79 34 771	08	087	2-E16	79 65 601	08	023	2-B24	79 71 518	08	083	2-E12
79 22 347	02	047	1-E24	79 34 789	03	047	1-H24	79 65 635	08	005	2-B10	79 71 526	08	105	2-F10
79 22 347	03	033	1-H10	79 34 789	04	039	1-J16	79 65 734	06	005	1-L06	79 71 583	08	029	2-C06
79 22 347	03	037	1-H14	79 34 797	04	039	1-J16	79 65 767	06	015	1-L06	79 71 658	03	023	1-G24
79 22 347	08	105	2-F10	79 34 821	03	029	1-H06	79 65 833	03	029	1-H06	79 71 658	03	029	2-B10
79 22 354	02	031	1-E08	79 35 802	08	007	2-B08	79 67 581	08	057	2-D10	79 71 757	08	103	2-B14
79 22 354	03	045	1-H22	79 35 807	03	005	1-G06	79 67 581	08	059	2-D12	79 71 807	08	017	2-F12
79 22 354	08	025	2-C02	79 36 016	02	023	1-D24	79 67 581	03	073	2-E02	79 71 823	04	039	1-J16
79 22 362	03	033	1-H10	79 37 964	08	035	2-C12	79 67 722	08	025	2-C02	79 71 872	02	031	1-E08
79 22 362	08	085	2-E14	79 39 796	08	025	2-C02	79 67 771	08	025	2-C02	79 71 890	02	027	1-E04
79 22 370	08	087	2-E16	79 39 804	08	013	2-B14	79 67 870	02	039	1-E16	79 71 880	03	037	1-H14
79 22 370	08	107	2-F12	79 40 455	07	007	2-A08	79 67 878	02	005	1-D06	79 71 880	03	045	1-H22
79 22 420	03	043	1-H20	79 40 463	07	003	2-A04	79 67 938	03	027	1-H04	79 71 880	05	015	1-K16
79 22 420	08	071	2-D24	79 46 148	08	079	2-E08	79 67 938	08	025	2-C02	79 71 880	08	115	2-F20
79 22 420	08	111	2-F12	79 46 742	08	107	2-F12	79 67 938	08	029	2-C06	79 71 880	08	117	2-F22
79 22 420	08	113	2-F18	79 49 068	03	037	1-H14	79 67 953	05	013	1-K14	79 71 880	08	119	2-F24
79 22 438	08	107	2-F12	79 49 084	03	037	1-H14	79 67 953	08	029	2-C06	79 71 906	02	027	1-E04
79 22 438	08	111	2-F16	79 51 353	04	038	1-J16	79 67 953	08	037	2-C14	79 71 922	03	007	1-G08
79 22 446	08	029	2-C06	79 51 353	04	045	1-J22	79 67 953	08	111	2-F16	79 71 930	04	015	1-K16
79 22 479	03	043	1-H20	79 51 379	04	039	1-J16	79 67 953	08	113	2-F18	79 71 930	04	021	1-H22
79 22 503	02	061	1-F14	79 51 437	04	027	1-J04	79 67 979	08	111	2-F16	79 71 948	04	015	1-K16
79 22 644	03	033	1-H10	79 51 783	03	037	1-H14	79 67 979	08	113	2-F18	79 71 948	04	021	1-H22
79 22 644	06	005	1-L06	79 51 783	03	043	1-H10	79 68 001	08	085	2-E14	79 72 284	04	039	1-J16
79 22 719	03	047	1-H24	79 56 154	04	015	1-F16	79 68 001	08	105	2-F10	79 72 367	08	035	2-C12
79 22 735	03	033	1-H10	79 56 154	04	021	1-E24	79 68 308	02	029	1-E06	79 72 441	08	113	2-C10
79 22 891	02	047	1-E24	79 56 212	08	079	2-E08	79 68 308	02	031	1-E08	79 72 466	08	005	1-H06
79 22 891	03	037	1-H14	79 58 770	02	047	1-E24	79 68 555	08	107	2-F12	79 72 474	08	009	2-B10
79 22 891	04	007	1-H08	79 59 349	03	035	1-H16	79 68 589	08	007	2-B08	79 72 508	08	089	2-E18
79 22 891	04	009	1-H10	79 61 329	02	051	1-E08	79 68 589	08	027	2-C04	79 72 581	06	033	1-L04
79 22 891	05	011	1-K12	79 61 329	05	047	1-E24	79 68 589	08	087	2-E16	79 72 581	06	033	1-L04
79 22 891	05	015	1-K16	79 61 329	03	037	1-H14	79 69 223	08	027	2-C04	79 72 698	02	019	1-D20
79 22 891	08	071	2-D24	79 61 634	02	047	1-E24	79 69 231	03	039	1-H16	79 72 717	03	021	1-G22
79 22 909	08	027	2-C04	79 61 634	08	023	2-B24	79 69 306	06	003	1-L04	79 72 789	02	021	1-D22
79 22 917	08	049	2-D02	79 61 634	08	033	2-C10	79 69 314	08	043	2-C20	79 72 789	02	053	1-F06
79 22 933	02	047	1-E24	79 61 634	08	051	2-D04	79 69 314	08	113	2-F18	79 72 789	08	043	2-C20
79 22 974	03	045	1-H22	79 61 634	08	119	2-F24	79 70 056	02	027	1-E04	79 72 805	05	015	1-K16
79 22 974	08	049	2-D02	79 61 634	08	005	2-G06	79 70 056	02	013	1-B14	79 72 813	08	043	2-C12
79 22 974	08	115	2-F20	79 61 634	08	005	2-G06	79 70 064	02	027	1-F12	79 73 176	03	011	1-G12
79 22 982	08	049	2-D02	79 61 634	08	005	2-G06	79 70 064	08	107	2-F12	79 73 208	08	049	2-D02
79 22 982	08	115	2-F20	79 61 634	08	005	2-G06	79 70 072	02	031	1-E08	79 73 309	08	111	2-F16
79 33 443	03	031	1-H08	79 61 943	03	029	1-H06	79 70 072	08	107	2-F12	79 73 308	08	113	2-F18
79 33 443	03	047	1-H24	79 61 943	03	037	1-H14	79 70 086	08	107	2-F12	79 73 308	08	117	2-F22
79 33 443	08	027	2-C04	79 61 943	08	023	2-B24	79 70 106	02	041	1-E18	79 73 365	02	005	1-D06
79 33 443	08	107	2-F12	79 61 943	08	025	2-C02	79 70 130	02	027	1-E04	79 73 365	03	019	1-G20
79 33 443	08	115	2-F20	79 61 943	08	105	2-F10	79 70 148	02	027	1-E04	79 73 381	03	011	1-G12
79 33 815	03	007	1-G08	79 62 251	08	107	2-F12	79 70 163	02	027	1-E04	79 73 423	08	083	2-E12
79 33 823	02	047	1-E24	79 62 442	02	027	1-E04	79 70 163	04	041	1-J18	79 73 431	02	053	1-F06
79 33 823	04	039	1-J16	79 63 150	05	013	1-K14	79 70 163	04	045	1-J22	79 73 597	08	119	2-F24
79 33 849	04	007	1-H08	79 63 390	06	005	1-L06	79 70 262	08	079	2-E08	79 73 639	08	039	2-C16
79 33 849	04	009	1-H10	79 63 416	02	005	1-D06	79 70 320	08	087	2-E16	79 73 639	08	115	2-F20
79 33 849	05	013	1-K14	79 63 416	07	007	2-A08	79 70 346	03	021	1-G22	79 73 639	08	117	2-F22
79 33 849	06	005	1-L06	79 63 887	04	007	1-H08	79 70 353	02	059	1-F12	79 73 647	06	085	2-E14
79 33 856	05	005	1-K06	79 63 887	04	009	1-H10	79 70 403	08	111	2-F16	79 73 720	08	083	2-E12
79 33 856	05	011	1-K12	79 63 895	02	031	1-E08	79 70 437	02	061	1-F14	79 73 951	08	087	2-E16
79 33 872	06	005	1-L06	79 63 986	08	105	2-F10	79 70 460	03	005	1-G06	79 73 969	08	087	2-E16
79 34 136	08	035	2-C12	79 65 429	06	003	1-L04	79 70 536	02	031	1-E08	79 74 033	08	079	2-E08
79 34 300	03	011	1-G12	79 65 544	02	041	1-E18	79 70 536	08	081	2-E10	79 74 048	08	085	2-E14
79 34 318	03	085	2-E14	79 65 569	04	015	1-K16	79 71 344	08	119	2-F24	79 74 348	08	077	2-E06
79 34 482	03	033	1-H10	79 65 569	04	021	1-E22	79 71 419	06	005	1-L06	79 74 744	08	079	2-E08
79 34 763	08	035	2-C12	79 65 577	02	005	1-D06	79 71 518	08	023	2-B24	79 75 063	02	045	1-E22

2-H06 Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
79 75 063	07	005	2-A06	80 29 985	08	029	2-C06	80 73 538	04	007	1-H08	80 83 941	04	021	1-I22
79 75 212	08	033	2-C10	80 29 993	06	003	1-L04	80 73 538	05	013	1-K14	80 83 941	04	037	1-J14
79 75 220	03	009	1-G10	80 30 017	07	005	2-A06	80 73 538	06	007	1-L08	80 83 958	04	013	1-H14
79 75 444	02	041	1-E18	80 30 017	08	095	2-E24	80 73 546	06	007	1-L08	80 83 958	04	015	1-I16
79 75 501	04	039	1-H16	80 30 058	05	013	1-K14	80 73 546	06	009	1-L10	80 83 958	04	019	1-I20
79 75 717	07	005	2-A06	80 34 456	02	015	1-D16	80 73 546	07	005	2-A06	80 83 958	04	021	1-I22
79 76 921	08	007	2-B08	80 34 462	02	007	1-H08	80 73 546	07	009	2-A10	80 83 982	04	027	1-J04
79 76 939	03	009	1-G10	80 34 761	02	007	1-D08	80 73 942	02	039	1-E16	80 83 982	04	031	1-J08
79 77 283	08	083	2-E12	80 34 761	02	011	1-E08	80 73 942	05	009	1-K10	80 84 006	02	039	1-E16
79 78 620	02	059	1-F12	80 34 902	02	017	1-D18	80 73 942	05	013	1-K14	80 84 014	02	039	1-E16
80 05 928	04	015	1-H16	80 34 928	02	017	1-D18	80 73 967	02	011	1-D12	80 84 071	03	007	1-G08
80 05 928	04	021	1-H22	80 34 985	04	031	1-H08	80 74 098	03	029	1-H06	80 84 071	03	047	1-H24
80 19 531	02	023	1-D24	80 46 617	02	029	1-E10	80 74 098	08	115	2-F20	80 84 196	04	007	1-H08
80 19 705	03	029	1-H06	80 47 813	04	033	1-J10	80 74 098	08	119	2-F24	80 84 253	05	013	1-K14
80 19 887	03	029	1-H06	80 47 813	04	037	1-J14	80 74 106	02	005	1-D06	80 84 386	07	005	2-A06
80 19 887	03	047	1-H24	80 47 839	04	027	1-J10	80 74 106	02	023	1-D24	80 84 410	07	005	2-A06
80 19 887	05	005	1-K06	80 47 839	04	031	1-H08	80 74 106	02	061	1-F14	80 97 586	08	013	2-B14
80 19 887	05	007	1-K08	80 47 854	04	027	1-J10	80 74 106	03	007	1-G08	80 97 859	02	033	1-H10
80 19 895	02	015	1-D16	80 47 854	03	031	1-H08	80 74 106	03	047	1-H24	80 97 859	05	011	1-K12
80 19 903	02	043	1-E20	80 49 553	04	015	1-I16	80 74 106	04	007	1-H08	80 97 875	02	047	1-E24
80 19 929	02	037	1-E14	80 49 553	04	021	1-I22	80 74 106	04	015	1-I16	80 97 925	04	025	1-J02
80 19 929	03	013	1-G14	80 49 553	04	023	1-I24	80 74 106	04	021	1-I22	80 97 941	02	009	1-D10
80 19 935	02	027	1-G04	80 49 702	04	037	1-E14	80 74 106	05	013	1-K14	80 98 089	02	033	1-I08
80 19 978	02	035	1-E12	80 49 876	04	021	1-I22	80 74 106	08	023	2-B24	80 98 139	02	027	1-E04
80 19 978	06	027	2-C04	80 55 980	08	035	2-C12	80 74 106	08	027	2-C04	81 17 715	04	029	1-J06
80 19 982	03	023	1-G24	80 55 998	05	005	1-K06	80 74 106	08	081	2-E10	81 17 715	04	035	1-J12
80 19 548	03	007	1-G08	80 55 998	05	007	1-K08	80 74 288	02	023	1-D24	81 23 168	02	033	1-H10
80 19 555	02	035	1-E12	80 56 186	02	005	1-E06	80 74 288	02	031	1-E08	81 23 176	02	015	1-I16
80 19 555	03	007	1-G08	80 59 073	02	047	1-D24	80 74 288	05	009	1-K10	81 23 218	02	007	1-D08
80 19 555	03	031	1-H08	80 59 206	08	027	2-C04	80 74 288	08	081	2-E10	81 23 218	02	011	1-D12
80 19 779	02	005	1-D06	80 59 214	08	023	2-B24	80 82 919	02	019	1-D20	81 24 133	04	019	1-I20
80 19 936	08	013	2-B14	80 59 230	08	039	2-C10	80 82 919	05	013	1-K14	81 24 141	02	037	1-E14
80 19 936	08	029	2-C06	80 59 248	03	021	1-G22	80 82 927	03	023	1-G24	81 24 208	02	011	1-D12
80 19 944	04	039	1-J16	80 59 248	08	087	2-E16	80 82 927	05	013	1-K14	81 25 007	02	033	1-H10
80 19 944	08	087	2-E16	80 59 296	08	027	2-C04	80 82 927	06	005	1-L08	81 25 049	02	015	1-D16
80 19 951	02	009	1-D10	80 59 412	03	017	1-G18	80 82 935	02	005	1-D06	81 25 064	02	015	1-D16
80 19 951	02	015	1-D16	80 59 487	04	039	1-J16	80 82 935	02	015	1-D16	81 25 064	02	059	1-F12
80 19 951	04	025	1-J02	80 59 529	08	033	2-C10	80 82 935	04	015	1-I16	81 25 163	02	029	1-E06
80 19 969	03	005	1-G08	80 59 529	08	119	2-F24	80 82 935	04	021	1-I22	81 25 189	02	009	1-D10
80 19 969	03	031	1-H08	80 59 552	02	041	1-E18	80 82 943	04	009	1-I10	81 25 189	02	011	1-D12
80 19 969	04	029	1-J06	80 59 552	08	037	2-C14	80 82 943	06	007	1-L08	81 25 189	02	045	1-E22
80 19 969	04	035	1-J12	80 59 578	08	009	2-B10	80 82 968	02	029	1-E06	81 25 189	04	033	1-J10
80 19 985	02	005	1-D06	80 59 578	08	039	2-C12	80 82 968	02	041	1-E18	81 25 197	02	011	1-D12
80 19 985	02	007	1-D08	80 59 578	08	111	2-F16	80 82 968	04	005	1-H08	81 25 197	02	019	1-D20
80 19 985	02	015	1-D16	80 59 586	03	011	1-G12	80 82 968	04	015	1-I16	81 25 197	02	033	1-I10
80 19 985	02	019	1-D20	80 73 090	03	015	1-G16	80 82 968	04	021	1-I22	81 25 197	02	043	1-E20
80 19 985	02	023	1-D24	80 73 090	03	033	1-H10	80 82 968	08	027	2-C04	81 25 205	02	033	1-I10
80 19 985	02	029	1-E06	80 73 090	08	025	2-C02	80 83 123	02	005	1-D06	81 25 239	02	015	1-D16
80 19 985	02	033	1-H10	80 73 090	08	017	2-F12	80 83 156	08	111	2-F16	81 25 247	02	015	1-D16
80 19 985	02	043	1-E20	80 73 108	02	005	1-D06	80 83 933	02	007	1-D08	81 25 262	02	015	1-D16
80 19 985	02	045	1-E22	80 73 108	02	059	1-F12	80 83 933	02	043	1-E20	81 25 282	02	043	1-E20
80 19 985	03	007	1-G08	80 73 124	06	003	1-L04	80 83 933	04	013	1-H14	81 25 304	02	019	1-I20
80 19 985	04	013	1-H14	80 73 223	02	043	1-E20	80 83 933	04	015	1-I16	81 25 551	02	011	1-D12
80 19 985	04	015	1-I16	80 73 249	02	035	1-E10	80 83 933	04	019	1-I20	81 25 585	02	011	1-D12
80 19 985	04	019	1-I20	80 73 249	02	057	1-F10	80 83 933	04	021	1-E22	81 25 882	02	023	1-D24
80 19 985	04	021	1-I22	80 73 249	05	013	1-K14	80 83 933	04	031	1-J08	81 25 882	02	025	1-E02
80 19 985	04	031	1-H08	80 73 512	02	041	1-E18	80 83 941	02	005	1-D06	81 29 969	02	033	1-I10
80 19 985	04	037	1-J14	80 73 512	02	047	1-E24	80 83 941	02	043	1-E20	81 31 989	02	033	1-I10
80 19 985	04	039	1-J16	80 73 512	08	027	2-C04	80 83 941	02	061	1-F14	81 32 235	02	033	1-I10
80 19 985	08	027	2-C04	80 73 538	02	005	1-D06	80 83 941	04	015	1-I16	82 00 412	08	015	2-B16

2-H07

Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
82 00 438	08	015	2-B16	82 17 440	08	033	2-C10	82 48 288	08	013	2-B14	82 66 777	08	111	2-F16
82 00 735	08	015	2-B16	82 17 689	08	091	2-E20	82 48 437	08	013	2-B14	82 66 785	08	111	2-F16
82 02 491	08	027	2-C04	82 18 265	08	027	2-C04	82 48 494	08	013	2-B14	82 66 843	08	111	2-B14
82 03 267	08	027	2-C04	82 18 596	08	007	2-B08	82 48 502	08	013	2-B14	82 66 876	08	111	2-F16
82 03 374	08	027	2-C04	82 18 604	08	007	2-B08	82 48 577	08	013	2-B14	82 66 900	08	111	2-B08
82 03 499	08	027	2-C04	82 18 612	08	007	2-B08	82 48 585	08	013	2-B14	82 67 049	08	007	2-B08
82 04 760	08	007	2-B08	82 18 679	08	007	2-B08	82 48 593	08	013	2-B14	82 67 098	08	005	1-G06
82 04 760	08	009	2-B10	82 18 687	08	007	2-B08	82 48 601	08	013	2-B14	82 67 205	08	005	1-G06
82 04 760	08	015	2-B16	82 19 248	08	027	2-C04	82 48 619	08	013	2-B14	82 67 205	08	005	1-G06
82 05 452	08	007	2-B08	82 20 238	08	029	2-C06	82 48 726	08	013	2-B14	82 67 296	08	007	2-B08
82 05 908	08	033	2-C10	82 20 352	08	029	2-C06	82 48 735	08	013	2-B14	82 69 375	08	035	2-C12
82 05 981	08	007	2-B08	82 21 053	08	015	2-B16	82 49 310	08	113	2-F18	82 69 383	08	035	2-C12
82 05 999	08	007	2-B08	82 21 061	08	015	2-B16	82 49 328	08	113	2-F18	82 69 458	08	047	2-C24
82 06 096	08	037	1-H14	82 21 905	08	027	2-C04	82 49 450	08	013	2-B14	82 69 987	08	043	2-C20
82 06 096	08	007	2-B08	82 24 917	08	033	2-C10	82 49 468	08	013	2-B14	82 72 197	08	017	2-B18
82 06 096	08	009	2-B10	82 24 925	08	033	2-C10	82 49 526	08	013	2-B14	82 72 205	08	017	2-B18
82 06 369	08	033	2-C10	82 24 933	08	033	2-C10	82 49 583	08	013	2-B14	82 73 278	08	111	2-F16
82 06 393	08	033	2-C10	82 25 435	08	027	2-C04	82 49 633	08	013	2-B14	82 73 286	08	111	2-F16
82 06 476	08	033	2-C10	82 25 872	08	009	2-B10	82 49 682	08	013	2-B14	82 73 286	08	113	2-F18
82 06 500	08	015	2-B16	82 26 458	06	003	1-L04	82 49 724	08	013	2-B14	82 73 294	08	111	2-F16
82 06 740	08	015	2-B16	82 26 466	06	003	1-L04	82 49 740	08	013	2-B14	82 73 633	08	047	2-C24
82 07 011	08	049	2-D02	82 27 001	08	027	2-C04	82 49 757	08	013	2-B14	82 73 641	08	047	2-C24
82 07 029	08	049	2-D02	82 27 399	08	023	2-B24	82 49 814	08	039	2-C16	82 74 011	08	033	2-C10
82 07 037	08	049	2-D02	82 27 738	08	049	2-D02	82 49 922	08	039	2-C16	82 74 029	08	033	2-C10
82 07 573	08	033	2-C10	82 27 738	08	115	2-F20	82 51 753	08	029	2-C06	82 74 425	08	011	2-B12
82 07 581	08	033	2-C10	82 27 779	08	015	2-B16	82 51 944	08	113	2-F18	82 74 433	08	013	2-B14
82 07 771	08	015	2-B16	82 28 702	08	009	2-B10	82 52 553	04	007	1-H08	82 74 731	08	017	2-B18
82 07 789	08	015	2-B16	82 28 843	08	011	2-B12	82 52 553	05	013	1-K14	82 74 649	08	017	2-B18
82 09 009	08	045	2-C22	82 29 239	08	015	2-B16	82 53 452	08	029	2-C06	82 74 797	08	017	2-B18
82 09 280	08	011	2-F24	82 33 645	08	119	2-F24	82 54 666	08	019	2-B20	82 74 805	08	017	2-B18
82 09 330	08	015	2-B16	82 33 686	08	011	2-B12	82 56 372	08	035	2-C12	82 74 946	08	027	2-C04
82 09 348	08	015	2-B16	82 33 736	08	037	2-C14	82 56 380	08	035	2-C12	82 76 396	08	013	2-B14
82 09 413	08	015	2-B16	82 34 824	08	027	2-C04	82 57 453	08	037	2-C04	82 76 479	08	049	2-D02
82 09 694	08	033	2-C10	82 34 957	08	011	2-B12	82 57 750	08	035	2-C14	82 77 667	08	075	2-E04
82 09 694	08	119	2-F24	82 34 965	08	011	2-B12	82 57 784	08	027	2-C04	82 78 343	08	037	2-C14
82 09 835	08	015	2-B16	82 35 178	08	045	2-C22	82 58 212	08	113	2-F18	82 78 558	03	037	1-H14
82 09 876	08	009	2-B10	82 35 178	08	049	2-D02	82 58 238	08	111	2-F16	82 78 947	08	049	2-D02
82 09 884	08	009	2-B10	82 36 317	08	031	2-C08	82 58 253	08	113	2-F18	82 78 996	08	049	2-D02
82 09 926	08	011	2-B12	82 36 325	08	031	2-C08	82 58 352	08	111	2-F16	82 79 226	08	009	2-B10
82 09 934	08	011	2-B12	82 36 390	08	033	2-C10	82 58 360	08	111	2-F16	82 79 457	08	009	2-B10
82 09 967	08	011	2-B12	82 36 457	08	033	2-C10	82 58 378	08	111	2-F16	82 79 853	08	111	2-F16
82 09 975	08	007	2-B08	82 36 465	08	033	2-C10	82 58 386	08	111	2-F16	82 79 952	08	111	2-F16
82 09 983	08	007	2-B08	82 36 556	08	047	2-C24	82 58 394	08	111	2-F16	82 79 960	08	111	2-F16
82 09 991	08	007	2-B08	82 36 606	08	035	2-C12	82 58 402	08	111	2-F16	82 83 517	08	007	2-B08
82 10 007	08	007	2-B08	82 37 265	08	047	2-C24	82 58 428	08	111	2-F16	82 83 525	08	007	2-B08
82 10 023	08	015	2-B16	82 37 273	08	047	2-C24	82 58 832	08	113	2-F18	82 83 541	08	007	2-B08
82 10 106	08	015	2-B16	82 37 281	08	047	2-C24	82 58 840	08	113	2-F18	82 83 558	08	007	2-B08
82 10 924	08	015	2-B16	82 37 299	08	047	2-C24	82 59 087	08	047	2-C24	82 83 590	08	013	2-B14
82 11 294	08	031	2-C08	82 37 323	08	039	2-C16	82 60 218	08	019	2-B20	82 83 608	08	013	2-B14
82 11 377	08	015	2-B16	82 37 851	08	015	2-B16	82 60 226	08	019	2-B20	82 83 681	08	027	2-C04
82 11 427	08	027	2-C04	82 38 107	08	039	2-C16	82 60 234	08	019	2-B20	82 83 699	08	027	2-C04
82 11 468	08	027	2-C04	82 38 158	08	039	2-C16	82 60 242	08	019	2-B20	82 83 707	08	015	2-B16
82 11 484	08	015	2-B16	82 38 123	08	039	2-C16	82 61 364	08	027	2-C04	82 83 715	08	045	2-C22
82 11 518	08	027	2-C04	82 38 354	08	027	2-C04	82 62 537	08	019	2-B20	82 83 723	08	015	2-B16
82 11 674	08	031	2-C08	82 39 162	08	007	2-B08	82 62 750	08	035	2-C12	82 83 798	04	039	1-J16
82 15 899	08	033	2-C10	82 39 170	08	007	2-B08	82 62 768	08	035	2-C12	82 83 806	08	037	2-C14
82 15 907	08	033	2-C10	82 41 994	08	035	2-C12	82 62 974	08	009	2-B10	82 83 863	08	111	2-F16
82 16 855	08	027	2-C04	82 43 578	08	033	2-C10	82 62 974	08	073	2-E02	82 83 863	08	111	2-F22
82 16 871	08	027	2-C04	82 47 553	08	113	2-F18	82 64 095	08	033	2-C10	82 83 871	08	113	2-F18
82 17 432	08	033	2-B14	82 48 270	08	013	2-B14	82 64 103	08	033	2-C10	82 83 871	08	113	2-F22

2-H08

Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
82 83 921	08	019	2-B20	82 90 488	01	025	1-C02	83 05 807	02	021	1-D22	83 15 558	07	009	2-A10
82 83 939	08	019	2-B20	82 90 520	01	025	1-C02	83 05 823	02	049	1-F02	83 15 764	02	041	1-E18
82 83 947	08	007	2-B08	82 90 538	01	025	1-C02	83 05 823	02	051	1-F04	83 15 780	02	005	1-E08
82 85 975	08	111	2-F16	82 90 546	01	025	1-C02	83 05 849	02	021	1-D22	83 16 846	02	047	1-E24
82 86 148	08	015	2-B16	82 90 561	01	027	1-C04	83 05 849	02	049	1-F02	83 16 952	02	047	1-E24
82 86 296	08	009	2-B10	82 90 637	01	027	1-C04	83 05 849	02	051	1-F04	83 17 893	02	027	1-E04
82 86 304	08	019	2-B20	82 90 652	01	025	1-C02	83 05 849	02	059	1-F12	83 17 919	02	027	1-E04
82 86 330	08	007	2-B08	82 90 660	01	025	1-C02	83 07 407	04	005	1-I06	83 18 283	02	027	1-E04
82 86 338	08	007	2-B08	82 90 678	01	025	1-C02	83 07 498	04	005	1-I06	83 18 339	02	007	1-E04
82 86 346	08	111	2-F16	82 90 686	01	025	1-C02	83 07 498	04	043	1-J20	83 18 719	02	005	1-D06
82 86 387	08	009	2-B10	82 90 694	01	025	1-C02	83 07 688	04	043	1-J20	83 19 600	02	047	1-E24
82 86 429	08	013	2-B14	82 90 702	01	025	1-C02	83 08 215	02	007	1-D08	83 19 931	02	041	1-E18
82 86 692	08	049	2-D02	82 90 728	01	025	1-C02	83 08 215	02	053	1-F06	83 20 467	03	011	-G12
82 86 700	08	049	2-D02	82 90 801	01	025	1-C02	83 08 223	02	007	1-D08	83 20 475	03	011	-G12
82 87 286	08	019	2-B20	82 91 023	01	027	1-C04	83 08 223	02	053	1-F06	83 21 044	02	027	1-E04
82 87 310	08	049	2-D02	82 91 270	01	025	1-C02	83 08 231	02	007	1-D08	83 21 051	02	027	1-E04
82 87 328	08	049	2-D02	82 91 288	01	025	1-C02	83 08 231	02	053	1-F06	83 21 507	02	041	1-E18
82 87 435	08	015	2-B16	82 91 320	01	025	1-C02	83 08 249	02	007	1-D08	83 21 515	02	041	1-E18
82 87 443	08	015	2-B16	82 91 338	01	025	1-C02	83 08 249	02	053	1-F06	83 22 141	02	023	-D24
82 87 666	08	023	2-B24	82 91 346	01	025	1-C02	83 08 256	02	007	1-D08	83 22 166	02	023	-D24
82 87 666	08	025	2-C02	82 91 361	01	025	1-C02	83 08 256	02	053	1-F06	83 22 364	02	021	-D22
82 87 666	08	031	2-C08	82 91 379	01	025	1-C02	83 08 264	02	007	1-D08	83 23 214	02	035	1-E18
82 87 666	08	037	2-C14	82 91 387	01	025	1-C02	83 08 264	02	053	1-F06	83 23 222	02	027	1-E04
82 87 732	08	047	2-C24	82 91 551	01	027	1-C04	83 08 272	02	007	1-D08	83 23 941	02	031	1-E08
82 87 740	08	047	2-C24	82 91 577	01	027	1-C04	83 08 272	02	053	1-F06	83 25 656	02	031	1-E08
82 88 029	08	013	2-B14	82 91 718	01	025	1-C02	83 08 280	02	007	1-D08	83 26 480	02	027	1-E04
82 88 193	08	013	2-B14	82 91 742	01	025	1-C02	83 08 280	02	053	1-F06	83 26 712	02	011	-D12
82 88 599	08	013	2-B14	82 91 767	01	027	1-C04	83 08 298	02	007	1-D08	83 27 561	02	027	1-E04
82 88 714	08	033	2-C10	82 91 775	01	027	1-C04	83 08 298	02	053	1-F06	83 27 678	02	027	1-E04
82 88 722	08	033	2-C10	82 91 874	01	025	1-C02	83 08 306	02	007	1-D08	83 27 868	03	013	-G14
82 88 266	08	049	2-D02	82 91 890	01	025	1-C02	83 08 306	02	053	1-F06	83 28 346	02	031	1-E08
82 89 738	08	037	2-C14	82 91 908	01	025	1-C02	83 08 454	01	007	1-D08	83 28 726	02	061	1-F14
82 89 753	08	037	2-C14	82 91 973	01	025	1-C02	83 08 652	02	049	1-F02	83 28 759	02	061	1-F14
82 89 852	08	041	2-C18	82 92 008	01	025	1-C02	83 08 652	02	051	1-F04	83 28 817	08	075	2-E04
82 89 878	08	037	2-C14	82 92 153	01	025	1-C02	83 08 678	02	051	1-F04	83 29 088	02	041	1-E18
82 89 886	08	037	2-C14	82 92 161	01	027	1-C04	83 08 850	02	033	1-E10	83 30 268	02	041	1-E18
82 89 894	08	037	2-C14	82 92 179	01	027	1-C04	83 08 892	02	021	1-D22	83 32 587	02	031	1-E08
82 89 993	08	009	2-B10	82 92 187	01	027	1-C04	83 08 892	02	059	1-F12	83 33 197	04	039	1-J16
82 90 124	01	025	1-C02	82 92 237	01	027	1-C04	83 09 064	02	021	1-D22	83 34 401	04	015	1-B16
82 90 132	01	025	1-C02	82 92 260	01	027	1-C04	83 09 064	02	049	1-F02	83 34 401	04	021	1-I22
82 90 140	01	025	1-C02	82 92 278	01	027	1-C04	83 09 064	02	051	1-F04	83 34 880	02	031	1-E08
82 90 157	01	025	1-C02	83 00 469	04	005	1-I06	83 09 072	02	059	1-F12	83 35 002	04	039	1-J16
82 90 165	01	025	1-C02	83 00 469	04	043	1-J20	83 09 072	02	021	1-D22	83 35 028	02	005	1-E06
82 90 173	01	025	1-C02	83 00 725	04	015	-I16	83 09 072	02	049	1-F02	83 35 028	02	059	1-F12
82 90 223	01	025	1-C02	83 00 725	04	021	1-I22	83 09 072	02	051	1-F04	83 35 614	02	023	1-E10
82 90 231	01	025	1-C02	83 05 294	02	021	1-D22	83 09 072	02	059	1-F12	83 36 877	02	049	1-F02
82 90 256	01	025	1-C02	83 05 302	02	021	1-D22	83 09 080	02	021	1-D22	83 38 899	04	005	1-I06
82 90 264	01	025	1-C02	83 05 328	02	021	1-D22	83 09 098	02	021	1-D22	83 40 507	04	045	1-J22
82 90 272	01	025	1-C02	83 05 336	02	049	1-F02	83 09 098	02	049	1-F02	83 41 034	04	027	1-J04
82 90 280	01	025	1-C02	83 05 344	02	021	1-D22	83 09 486	03	011	-G12	83 41 034	04	033	1-J10
82 90 298	01	025	1-C02	83 05 369	02	021	1-D22	83 10 393	02	021	1-D22	83 41 257	04	015	1-I16
82 90 306	01	025	1-C02	83 05 419	02	049	1-F02	83 11 904	03	033	-H10	83 41 257	04	021	1-I22
82 90 330	01	025	1-C02	83 05 526	02	023	-D24	83 13 993	02	023	1-D24	83 41 604	04	037	1-J14
82 90 371	01	025	1-C02	83 05 575	02	051	-F04	83 13 991	02	047	1-E24	83 41 612	04	037	1-J14
82 90 389	01	025	1-C02	83 05 633	02	021	1-D22	83 15 392	02	023	1-D24	83 41 620	04	037	1-J14
82 90 405	01	025	1-C02	83 05 641	02	021	1-D22	83 15 467	02	031	1-E08	83 41 638	04	037	1-J14
82 90 421	01	025	1-C02	83 05 658	02	021	1-D22	83 15 475	02	031	1-E08	83 41 752	04	029	1-J06
82 90 439	01	025	1-C02	83 05 666	02	021	1-D22	83 15 558	05	005	-K06	83 41 752	04	033	1-J10
82 90 447	01	025	1-C02	83 05 773	02	049	1-F02	83 15 558	05	011	-K12	83 41 760	04	029	1-J06
82 90 470	01	025	1-C02	83 05 773	02	051	-F04	83 15 558	07	005	2-A10	83 41 760	04	033	1-J10

2-H09 Numerical register

Nummerregister

Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord
83 41 778	04	029	1-J06	83 52 692	02	045	1-E22	83 68 334	02	023	1-D24	83 90 106	01	013	1-B14
83 41 778	04	033	1-J10	83 52 692	02	057	1-F10	83 68 334	02	059	1-F12	83 90 114	01	013	1-B14
83 42 701	04	037	1-J14	83 52 734	02	017	1-D18	83 69 647	02	059	1-F12	83 90 122	01	017	1-B18
83 43 014	04	015	1-I16	83 53 683	02	037	1-E14	83 69 654	02	023	1-D24	83 90 130	01	013	1-B14
83 43 014	04	021	1-I22	83 55 026	02	023	1-D24	83 69 829	02	015	1-D16	83 90 148	01	017	1-B18
83 43 808	01	007	1-B08	83 55 315	02	017	1-D18	83 69 829	02	049	1-F02	83 90 155	01	013	1-B14
83 44 335	04	015	1-I16	83 55 323	02	017	1-D18	83 69 894	02	021	1-D22	83 90 189	01	015	1-B16
83 44 335	04	021	1-I22	83 55 331	02	017	1-D18	83 69 902	02	021	1-D22	83 90 197	01	015	1-B12
83 44 723	04	029	1-J06	83 55 349	02	017	1-D18	83 69 910	02	023	1-D24	83 90 205	01	013	1-B14
83 44 723	04	033	1-J10	83 55 356	02	017	1-D18	83 71 551	04	007	1-I08	83 90 213	01	013	1-B14
83 44 772	04	031	1-J08	83 55 364	02	017	1-D18	83 71 551	04	009	1-I10	83 90 260	01	013	1-B14
83 46 470	02	011	1-D12	83 55 992	02	057	1-F10	83 72 831	02	041	1-E18	83 90 270	01	013	1-B14
83 46 868	02	017	1-D18	83 56 008	02	057	1-F10	83 73 078	04	039	1-J16	83 90 288	01	013	1-B14
83 46 884	02	007	1-D08	83 56 016	02	057	1-F10	83 73 714	04	039	1-J16	83 90 296	01	013	1-B14
83 46 900	02	007	1-D08	83 56 396	02	007	1-D08	83 74 357	03	037	1-H14	83 90 312	01	013	1-B14
83 46 926	02	007	1-D08	83 56 420	02	035	1-E12	83 74 555	04	039	1-J16	83 90 320	01	015	1-B16
83 46 942	02	007	1-D08	83 56 859	02	005	1-D06	83 74 639	02	049	1-F02	83 90 460	01	017	1-B18
83 46 983	02	017	1-D18	83 56 917	02	015	1-D16	83 74 753	04	039	1-J16	83 90 478	01	005	1-B06
83 47 106	02	017	1-D18	83 57 485	02	037	1-E14	83 75 024	04	039	1-J16	83 90 858	01	013	1-B14
83 47 122	02	015	1-D16	83 59 275	02	029	1-E06	83 75 156	04	039	1-J16	83 91 153	01	005	1-B06
83 47 262	02	007	1-D08	83 59 788	02	049	1-F02	83 75 172	04	039	1-J16	83 91 401	01	007	1-B08
83 47 270	02	017	1-D18	83 60 240	02	009	1-D10	83 75 198	08	023	2-B24	83 91 419	01	007	1-B08
83 47 346	02	045	1-E22	83 60 257	02	009	1-D10	83 75 198	08	091	2-E20	83 91 450	01	007	1-B08
83 47 379	02	057	1-F10	83 60 943	02	035	1-E12	83 75 339	04	039	1-J16	83 91 633	01	007	1-B08
83 47 577	02	017	1-D18	83 61 602	02	021	1-D22	83 75 990	04	039	1-J16	83 91 849	01	005	1-B06
83 47 650	02	017	1-D18	83 61 644	02	023	1-D24	83 75 990	04	039	1-J16	83 91 897	01	007	1-B08
83 47 989	02	011	1-D12	83 61 644	02	051	1-F04	83 76 275	04	039	1-J16	83 92 003	02	053	1-F06
83 48 047	02	011	1-D12	83 61 735	02	021	1-D22	83 76 830	03	041	1-H18	83 92 045	01	007	1-B06
83 48 041	02	007	1-D08	83 61 743	02	021	1-D22	83 79 026	02	027	1-E04	83 92 128	01	007	1-B08
83 48 534	02	015	1-D16	83 61 768	02	021	1-D22	83 79 299	02	005	1-D06	83 92 151	01	005	1-B06
83 48 609	02	019	1-D20	83 61 776	02	021	1-D22	83 79 307	02	005	1-D06	83 92 185	01	007	1-B08
83 49 771	02	057	1-F10	83 61 842	02	035	1-E12	83 79 356	02	005	1-D06	83 92 193	01	007	1-B08
83 49 789	02	057	1-F10	83 61 859	02	035	1-E12	83 80 214	04	005	1-D06	83 92 201	01	007	1-B06
83 49 838	02	017	1-D18	83 62 295	02	007	1-D08	83 80 214	04	043	1-J20	83 92 219	01	007	1-B08
83 49 946	02	017	1-D18	83 62 386	02	017	1-D18	83 80 982	04	005	1-D06	83 92 250	01	007	1-B08
83 49 953	02	017	1-D18	83 64 051	02	021	1-D22	83 80 982	04	015	1-I16	83 92 268	01	005	1-B06
83 49 961	02	017	1-D18	83 64 069	02	021	1-D22	83 80 982	04	021	1-D22	83 92 326	01	007	1-B08
83 50 076	02	059	1-F12	83 64 192	02	021	1-D22	83 82 301	02	047	1-E24	83 92 409	01	007	1-B08
83 50 076	03	011	G12	83 64 192	02	059	1-F12	83 82 723	02	047	1-E24	83 92 540	01	005	1-B06
83 50 936	02	017	1-D18	83 64 200	02	021	1-D22	83 83 945	02	041	1-E18	83 92 631	01	007	1-B08
83 50 944	02	007	1-D08	83 64 234	02	023	1-D24	83 84 174	02	041	1-E18	83 92 789	01	007	1-B08
83 50 977	02	017	1-D18	83 64 234	02	049	1-F02	83 84 323	02	039	1-E16	83 92 961	01	009	1-B10
83 50 985	02	017	1-D18	83 64 242	02	023	1-D24	83 84 323	02	055	1-F08	83 92 979	01	009	1-B10
83 50 993	02	017	1-D18	83 64 242	02	051	1-F04	83 85 890	02	041	1-E18	83 92 987	01	009	1-B10
83 51 009	02	017	1-D18	83 64 259	02	023	1-D24	83 86 450	02	039	1-E16	83 92 997	01	009	1-B10
83 51 330	02	021	1-D22	83 64 259	02	051	1-F04	83 86 450	02	055	1-F08	83 93 035	01	009	1-B10
83 51 348	02	049	1-F02	83 65 058	02	017	1-D18	83 86 450	02	057	1-F10	83 93 043	01	009	1-B10
83 51 405	02	023	1-D24	83 65 769	02	045	1-E22	83 87 052	02	061	1-F14	83 93 050	01	009	1-B10
83 51 413	02	051	1-F04	83 65 850	02	021	1-D22	83 87 672	02	039	1-E16	83 93 068	01	009	1-B10
83 51 942	02	057	1-F10	83 65 850	02	059	1-F12	83 87 672	02	055	1-F08	83 93 076	01	009	1-B10
83 51 959	02	057	1-F10	83 66 007	02	011	1-D12	83 87 672	02	057	1-F10	83 93 084	01	009	1-B10
83 51 967	02	057	1-F10	83 66 304	02	021	1-D22	83 87 672	02	061	1-F14	83 93 084	01	009	1-B10
83 51 975	02	057	1-F10	83 66 312	02	021	1-D22	83 88 514	03	011	1-G12	83 93 100	01	009	1-B10
83 51 983	02	057	1-F10	83 66 312	02	059	1-F12	83 88 670	02	021	1-D22	83 93 118	01	009	1-B10
83 51 991	02	057	1-F10	83 66 411	02	021	1-D22	83 88 670	02	059	1-F12	83 93 209	01	007	1-B08
83 52 387	02	021	1-D22	83 66 643	02	049	1-F02	83 90 015	01	013	1-B14	83 93 332	01	007	1-B08
83 52 387	02	049	1-F02	83 66 650	02	049	1-F02	83 90 023	01	017	1-B18	83 93 340	01	005	1-B06
83 52 395	02	023	1-D24	83 66 668	02	049	1-F02	83 90 049	01	015	1-B16	83 93 357	01	005	1-B06
83 52 494	02	051	1-F04	83 66 676	02	049	1-F02	83 90 072	01	013	1-B14	83 93 365	01	009	1-B10
83 52 502	02	011	1-D12	83 66 690	02	021	1-D22	83 90 098	01	013	1-B14	83 93 571	01	019	1-B20

2-H10 Numerical register

Nummerregister

Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord
83 93 589	01	009	1-B10	84 26 199	08	075	2-E04	84 51 965	08	039	2-C16	84 76 475	08	071	2-D24
83 93 639	01	009	1-B10	84 26 199	08	111	2-F16	84 51 973	08	039	2-C16	84 76 558	08	053	2-D06
83 93 951	01	005	1-B06	84 26 264	08	023	2-B24	84 51 981	08	037	2-C14	84 76 566	08	053	2-D06
83 94 033	01	009	1-B10	84 26 264	08	025	2-C02	84 51 981	08	039	2-C16	84 76 585	08	053	2-D06
83 94 306	01	009	1-B10	84 26 264	08	073	2-E02	84 52 039	08	105	2-F10	84 76 988	08	053	2-D06
84 00 350	08	077	2-E06	84 26 306	08	073	2-E02	84 52 252	08	037	2-C14	84 77 028	08	071	2-D24
84 02 190	08	033	2-C10	84 26 447	08	073	2-E02	84 52 252	08	039	2-C16	84 77 317	08	071	2-D24
84 06 118	08	057	2-D10	84 26 892	08	073	2-E02	84 52 898	08	057	2-D10	84 77 507	08	071	2-D24
84 06 118	08	059	2-D12	84 27 742	08	023	2-B24	84 52 898	08	059	2-D12	84 77 820	08	107	2-F12
84 06 142	08	051	2-D04	84 27 841	08	025	2-C02	84 52 898	08	073	2-E02	84 77 838	08	107	2-F12
84 07 488	08	049	2-D02	84 27 841	08	091	2-E20	84 53 136	08	087	2-E16	84 77 945	08	107	2-F12
84 07 983	04	007	1-E08	84 27 999	08	023	2-B24	84 53 177	08	023	2-B24	84 77 952	08	107	2-F12
84 07 983	08	079	2-E08	84 28 120	08	053	2-D06	84 53 227	08	037	2-C14	84 78 364	08	039	2-C16
84 08 361	08	039	2-C16	84 28 203	08	053	2-D06	84 53 227	08	039	2-C16	84 78 554	08	041	2-C18
84 08 882	08	023	2-B24	84 28 211	08	053	2-D06	84 53 409	08	023	2-B24	84 79 222	08	105	2-F10
84 08 882	08	075	2-E04	84 28 229	08	053	2-D06	84 53 581	08	107	2-F12	84 81 269	08	053	2-D06
84 08 882	08	091	2-E20	84 28 237	08	053	2-D06	84 54 274	08	105	2-F10	84 83 018	08	023	2-B24
84 10 953	08	027	2-C02	84 28 252	08	105	2-F10	84 54 282	08	105	2-F10	84 83 026	08	025	2-C02
84 10 961	08	075	2-E04	84 28 385	08	071	2-D24	84 54 621	08	023	2-B24	84 83 034	08	025	2-C02
84 10 961	08	091	2-E20	84 28 997	08	105	2-F10	84 54 639	08	023	2-B24	84 83 042	08	023	2-B24
84 10 991	08	093	2-E22	84 28 997	08	107	2-F12	84 56 006	08	035	2-C12	84 83 091	08	025	2-C02
84 12 428	08	023	2-B24	84 29 300	08	023	2-B24	84 56 014	08	053	2-D06	84 83 109	08	025	2-C02
84 13 429	08	075	2-E04	84 29 441	08	039	2-C16	84 56 022	08	053	2-D06	84 83 893	08	073	2-E02
84 13 429	08	091	2-E20	84 29 870	08	087	2-E16	84 56 360	08	023	2-B24	84 86 276	01	029	1-F06
84 13 890	08	071	2-D24	84 31 942	08	073	2-E02	84 56 378	08	023	2-B24	84 86 292	08	099	2-F04
84 14 872	08	107	2-F12	84 34 078	08	015	2-B16	84 56 386	08	023	2-B24	84 86 292	08	103	2-F08
84 14 802	08	035	2-C12	84 34 078	08	057	2-D10	84 56 808	08	035	2-C12	84 86 300	08	099	2-F04
84 14 851	08	035	2-C12	84 34 078	08	059	2-D12	84 57 566	08	035	2-C12	84 86 300	08	103	2-F08
84 14 869	08	035	2-C12	84 34 235	08	023	2-B24	84 57 764	08	071	2-D24	84 86 318	08	097	2-F02
84 14 993	08	035	2-C12	84 34 243	08	023	2-B24	84 58 044	08	053	2-D06	84 86 318	08	099	2-F04
84 18 501	08	035	2-C12	84 34 250	08	023	2-B24	84 58 184	08	105	2-F10	84 86 318	08	103	2-F08
84 21 992	08	035	2-C12	84 34 508	08	105	2-F10	84 58 275	08	105	2-F10	84 86 326	08	099	2-F04
84 22 305	08	105	2-F10	84 34 813	08	107	2-F12	84 58 283	08	053	2-D06	84 86 326	08	097	2-F02
84 22 362	08	073	2-E02	84 35 059	08	023	2-B24	84 58 309	08	053	2-D06	84 86 326	08	103	2-F08
84 22 370	08	073	2-E02	84 35 117	08	023	2-B24	84 58 507	08	071	2-D24	84 86 409	08	039	2-C16
84 22 404	08	023	2-B24	84 35 570	08	105	2-F10	84 59 489	08	017	2-B18	84 87 217	08	103	2-F08
84 22 552	08	023	2-B24	84 35 745	08	023	2-B24	84 59 487	08	015	2-B18	84 87 225	08	103	2-F08
84 22 990	08	023	2-B24	84 35 794	08	023	2-B24	84 59 497	08	017	2-B18	84 87 266	08	097	2-F02
84 24 442	08	057	2-D10	84 35 802	08	023	2-B24	84 59 513	08	009	2-E08	84 87 274	08	097	2-F02
84 24 442	08	059	2-D12	84 35 851	08	023	2-B24	84 61 063	08	053	2-D06	84 87 282	08	099	2-F04
84 24 533	08	105	2-F10	84 35 869	08	023	2-B24	84 61 675	08	035	2-C12	84 87 357	08	103	2-F08
84 24 558	08	105	2-F10	84 37 048	08	071	2-D24	84 62 590	08	107	2-F12	84 87 587	08	039	2-C16
84 24 566	08	105	2-F10	84 38 376	08	053	2-D06	84 67 409	08	091	2-E20	84 87 605	08	039	2-C16
84 24 574	08	105	2-F10	84 39 440	08	053	2-D06	84 68 175	08	071	2-D24	84 87 613	08	099	2-F04
84 24 582	08	105	2-F10	84 50 090	08	107	2-F12	84 68 183	08	071	2-D24	84 87 621	08	097	2-F02
84 24 590	08	105	2-F10	84 50 108	08	105	2-F10	84 68 191	08	071	2-D24	84 87 613	08	099	2-F04
84 24 608	08	105	2-F10	84 50 132	08	105	2-F10	84 68 209	08	071	2-D24	84 87 613	08	103	2-F08
84 24 616	08	105	2-F10	84 50 140	08	105	2-F10	84 68 761	08	023	2-B24	84 87 621	08	097	2-F02
84 24 681	08	105	2-F10	84 50 157	08	105	2-F10	84 70 767	08	039	2-C16	84 87 621	08	099	2-F04
84 24 699	08	105	2-F10	84 50 181	08	107	2-F12	84 71 039	01	027	1-C04	84 87 621	08	103	2-F08
84 24 707	08	105	2-F10	84 50 256	08	105	2-F10	84 72 458	08	105	2-F10	84 87 639	08	097	2-F02
84 24 715	08	105	2-F10	84 50 298	08	105	2-F10	84 72 466	08	105	2-F10	84 87 639	08	099	2-F04
84 25 035	08	079	2-E08	84 50 652	08	107	2-F12	84 72 946	08	053	2-D06	84 87 647	08	097	2-F02
84 25 043	08	079	2-E08	84 50 678	08	107	2-F12	84 73 118	08	105	2-F10	84 87 647	08	099	2-F04
84 25 100	08	079	2-E08	84 50 694	08	107	2-F12	84 74 553	08	035	2-C12	84 87 654	08	099	2-F04
84 25 126	08	079	2-E08	84 50 710	08	107	2-F12	84 75 618	08	023	2-B24	84 87 654	08	103	2-F08
84 25 399	08	105	2-F10	84 50 900	08	075	2-E04	84 76 251	08	073	2-E02	84 87 662	08	099	2-F04
84 25 407	08	105	2-F10	84 51 817	08	035	2-C12	84 76 301	08	033	2-C10	84 87 662	08	103	2-F08
84 26 116	08	023	2-B24	84 51 825	08	035	2-C12	84 76 319	08	073	2-E02	84 87 670	08	099	2-F04
84 26 173	08	029	2-E08	84 51 957	08	039	2-C16	84 76 442	08	071	2-D24	84 87 670	08	103	2-F08

2-H11 Numerical register

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
84 87 688	08	099	2-F04	84 99 543	08	075	2-E04	85 10 091	03	047	1-H24	85 22 575	03	039	1-H16
84 87 688	08	103	2-F04	84 99 592	08	107	2-F12	85 10 125	03	041	1-H08	85 22 609	03	039	1-H16
84 87 696	08	099	2-F04	84 99 600	08	107	2-F12	85 10 125	03	047	1-H24	85 22 617	03	039	1-H16
84 87 696	08	103	2-F08	84 99 725	08	107	2-F12	85 10 128	03	029	1-H06	85 22 633	03	041	1-H18
84 87 704	08	099	2-F08	85 00 613	02	047	1-E24	85 10 180	03	029	1-H06	85 22 641	03	041	1-H18
84 87 704	08	103	2-F08	85 00 613	03	021	1-G22	85 10 331	03	021	1-G22	85 22 971	03	037	1-H14
84 87 712	08	099	2-F08	85 00 613	03	033	1-H10	85 10 612	08	107	2-F12	85 22 997	03	037	1-H14
84 87 712	08	103	2-F08	85 00 613	03	035	1-H12	85 10 638	08	107	2-F12	85 28 077	03	043	1-H20
84 87 720	08	097	2-F02	85 00 613	03	045	1-H22	85 10 851	03	015	1-G16	85 28 135	03	043	1-H20
84 87 738	08	103	2-F08	85 00 704	02	047	1-E24	85 10 919	03	015	1-G16	85 28 143	03	043	1-H20
84 87 746	08	103	2-F08	85 00 712	03	033	1-H10	85 11 065	03	037	1-H14	85 28 150	03	043	1-H20
84 87 753	08	097	2-F02	85 00 712	03	035	1-H12	85 11 198	03	037	1-H10	85 28 259	03	033	1-H10
84 87 761	08	097	2-F02	85 01 264	03	021	1-G22	85 11 206	03	033	1-H10	85 28 358	08	115	2-F20
84 87 779	08	097	2-F02	85 02 197	03	043	1-H20	85 11 289	03	029	1-H06	85 28 358	08	117	2-F22
84 87 779	08	099	2-F08	85 02 338	03	033	1-H10	85 11 289	03	047	1-H24	85 28 564	03	045	1-H22
84 87 779	08	103	2-F08	85 03 112	03	041	1-H18	85 11 388	03	031	1-H08	85 29 265	03	037	1-H14
84 87 787	08	097	2-F02	85 03 120	03	041	1-H18	85 11 610	03	047	1-H24	85 30 370	03	005	1-G06
84 87 787	08	099	2-F08	85 03 138	03	041	1-H18	85 12 477	03	027	1-H04	85 30 669	03	041	1-H18
84 87 787	08	103	2-F08	85 03 146	03	041	1-H18	85 12 717	03	029	1-H06	85 30 792	03	033	1-H10
84 87 795	08	099	2-F08	85 03 211	03	041	1-H18	85 12 717	03	047	1-H24	85 30 883	03	033	1-H10
84 87 795	08	103	2-F08	85 03 229	03	041	1-H18	85 13 283	03	033	1-H10	85 30 891	03	033	1-H10
84 87 811	08	097	2-F02	85 03 286	08	115	2-F20	85 13 301	03	033	1-H10	85 31 204	08	115	2-F20
84 87 829	08	097	2-F02	85 03 286	08	119	2-F24	85 13 574	03	037	1-H14	85 31 204	08	117	2-F22
84 87 837	08	099	2-F08	85 03 484	03	041	1-H18	85 13 574	03	043	1-H20	85 31 212	08	115	2-F20
84 87 845	08	097	2-F02	85 04 144	03	031	1-H08	85 13 996	08	023	2-B24	85 31 212	08	117	2-F22
84 87 852	08	097	2-F02	85 05 448	03	029	1-H06	85 15 801	03	033	1-H10	85 31 279	03	027	1-H04
84 87 860	08	099	2-F08	85 05 455	03	029	1-H06	85 16 502	03	017	1-G18	85 31 311	03	027	1-H04
84 87 878	08	103	2-F08	85 05 463	03	029	1-H06	85 16 577	03	027	1-H04	85 31 329	03	027	1-H04
84 87 889	08	097	2-F02	85 05 471	03	029	1-H06	85 16 627	03	027	1-H04	85 31 428	03	027	1-H04
84 87 977	08	097	2-F08	85 06 198	03	033	1-H10	85 16 635	03	027	1-H04	85 31 436	03	027	1-H04
84 87 985	08	099	2-F04	85 06 263	03	021	1-G22	85 16 643	03	027	1-H04	85 31 444	03	027	1-H04
84 87 993	08	097	2-F02	85 06 925	09	005	2-G06	85 17 104	03	037	1-H14	85 31 568	03	023	1-G24
84 88 009	08	097	2-F02	85 06 941	09	005	2-G06	85 17 435	08	023	2-B24	85 32 210	03	033	1-H10
84 90 559	08	053	2-D06	85 07 089	03	029	1-H06	85 18 367	03	021	1-G22	85 32 368	03	045	1-H22
84 90 567	08	053	2-D06	85 07 089	03	047	1-H24	85 18 567	03	031	1-H08	85 32 376	03	045	1-H22
84 90 575	08	053	2-D06	85 07 105	03	029	1-H06	85 18 656	03	047	1-H24	85 32 426	03	033	1-H10
84 90 609	08	053	2-D06	85 07 204	03	029	1-H06	85 18 904	03	005	1-G06	85 32 442	02	047	1-E24
84 90 617	08	053	2-D06	85 07 238	03	029	1-H06	85 20 421	03	045	1-H22	85 32 459	02	047	1-E24
84 90 625	08	053	2-D06	85 07 253	03	029	1-H06	85 20 595	08	107	2-F12	85 32 491	03	033	1-H10
84 90 641	08	053	2-D06	85 07 436	03	037	1-H14	85 20 611	08	107	2-F12	85 32 509	03	033	1-H10
84 90 708	08	053	2-D06	85 07 865	03	033	1-H10	85 20 629	08	107	2-F12	85 32 731	03	017	1-G18
84 90 716	08	053	2-D06	85 07 873	03	045	1-H22	85 21 650	03	041	1-H18	85 32 749	03	017	1-G18
84 90 765	08	105	2-F10	85 07 873	03	015	2-B16	85 21 668	03	039	1-H16	85 32 756	03	017	1-G18
84 96 861	08	105	2-F10	85 07 873	03	017	2-B18	85 21 668	08	115	2-F20	85 32 756	03	019	1-G20
84 96 879	08	107	2-F12	85 08 004	03	033	1-H10	85 21 668	08	117	2-F22	85 32 798	03	033	1-H10
84 97 109	08	105	2-F10	85 08 053	03	045	1-H22	85 21 692	03	041	1-H18	85 32 806	03	045	1-H22
84 97 232	08	105	2-F12	85 08 285	03	029	1-H06	85 21 767	03	027	1-H04	85 33 085	03	043	1-H20
84 97 240	08	105	2-F10	85 08 293	03	029	1-H06	85 22 054	02	047	1-E24	85 33 093	03	043	1-H20
84 97 265	08	105	2-F10	85 08 384	03	029	1-H06	85 22 062	02	047	1-E24	85 33 135	03	033	1-H10
84 99 071	08	107	2-F12	85 08 392	03	031	1-H08	85 22 286	03	047	1-H24	85 33 143	03	033	1-H10
84 99 154	08	107	2-F12	85 08 970	03	029	1-H06	85 22 310	03	043	1-H20	85 33 176	03	043	1-H20
84 99 204	08	083	2-E12	85 09 093	03	037	1-H14	85 22 443	03	033	1-H10	85 33 218	03	033	1-H10
84 99 204	08	093	2-E22	85 09 485	03	037	1-H14	85 22 518	03	039	1-H16	85 33 259	03	043	1-H20
84 99 204	08	095	2-E24	85 09 697	02	047	1-E24	85 22 526	03	039	1-H16	85 33 267	03	047	1-H24
84 99 238	08	095	2-E24	85 09 697	03	021	1-G22	85 22 534	03	039	1-H16	85 33 341	03	047	1-H24
84 99 402	08	105	2-F10	85 09 697	03	035	1-H12	85 22 534	08	115	2-F20	85 33 358	03	031	1-H08
84 99 451	08	107	2-F12	85 09 697	03	045	1-H22	85 22 534	08	117	2-F22	85 33 366	03	047	1-H24
84 99 469	08	107	2-F12	85 09 713	03	033	1-H10	85 22 542	03	039	1-H16	85 33 457	03	031	1-H08
84 99 501	08	107	2-F12	85 09 721	03	045	1-H22	85 22 559	03	039	1-H16	85 33 507	03	031	1-H08
84 99 535	08	075	2-E04	85 10 091	03	031	1-H08	85 22 567	03	039	1-H16	85 33 598	03	037	1-H14

2-H12 Numerical register

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
85 33 606	03	037	1-H14	85 46 897	08	119	2-F24	85 67 653	03	019	1-G20	85 81 027	03	043	1-H20
85 33 705	03	041	1-H18	85 46 913	05	119	2-F24	85 68 701	03	037	1-H14	85 81 035	03	043	1-H20
85 33 779	03	017	1-G18	85 46 939	08	119	2-F24	85 68 735	03	041	1-H18	85 81 043	03	043	1-H20
85 34 968	03	037	1-H14	85 46 962	08	045	2-C22	85 68 768	03	039	1-H16	85 82 066	03	045	1-H22
85 34 976	03	037	1-H14	85 46 982	08	117	2-F22	85 68 883	03	033	1-H10	85 83 395	03	045	1-H22
85 35 262	03	027	1-H04	85 46 970	08	045	2-C22	85 69 220	03	033	1-H10	85 83 593	03	021	1-G22
85 35 270	03	027	1-H04	85 46 970	08	115	2-F20	85 69 238	02	041	1-E18	85 85 325	02	031	1-E08
85 35 353	03	029	1-H06	85 47 028	08	033	2-C10	85 69 360	03	037	1-H14	85 85 325	03	037	1-H14
85 35 353	03	047	1-H24	85 47 028	08	115	2-F20	85 70 210	03	037	1-H14	85 85 739	03	033	1-H10
85 35 361	03	029	1-H06	85 47 036	08	115	2-F20	85 70 228	03	037	1-H14	85 85 879	03	019	1-G20
85 35 692	03	017	1-G18	85 47 044	08	115	2-F20	85 70 236	03	037	1-H14	85 85 887	03	019	1-G20
85 35 908	08	023	2-B24	85 50 147	03	007	1-G08	85 71 838	03	007	1-G08	85 85 978	03	019	1-G20
85 35 916	08	023	2-B24	85 51 673	03	007	1-G08	85 71 846	03	007	1-G08	85 85 986	03	019	1-G20
85 36 328	03	043	1-H20	85 51 939	03	017	1-G18	85 71 861	03	007	1-G08	85 87 222	03	007	1-G08
85 36 419	03	037	1-H14	85 51 947	03	017	1-G18	85 71 879	03	007	1-G08	85 87 305	03	035	1-H12
85 36 427	03	043	1-H20	85 52 655	03	037	1-H14	85 71 887	03	007	1-G08	85 88 634	03	033	1-H10
85 36 583	03	031	1-H08	85 53 687	08	115	2-F20	85 71 895	03	007	1-G08	85 91 208	08	119	2-F24
85 36 625	03	027	1-H04	85 53 687	08	117	2-F22	85 71 903	03	007	1-G08	85 91 216	08	119	2-F24
85 36 641	03	027	1-H04	85 55 237	03	023	1-G24	85 71 911	03	007	1-G08	85 91 224	08	119	2-F24
85 36 641	03	047	1-H24	85 55 294	03	023	1-G24	85 72 026	03	007	1-G08	85 91 232	08	119	2-F24
85 37 011	09	005	2-G06	85 55 302	03	023	1-G24	85 72 034	03	007	1-G08	85 91 240	08	119	2-F24
85 37 177	02	047	1-E24	85 55 567	07	107	2-F12	85 72 042	03	007	1-G08	85 91 273	08	119	2-F24
85 37 185	02	047	1-E24	85 55 571	03	023	1-G24	85 72 083	03	037	1-H14	85 91 414	08	119	2-F24
85 37 615	03	017	1-H18	85 57 423	03	023	1-G24	85 72 406	03	007	1-G20	85 91 422	08	119	2-F24
85 37 623	03	017	1-H18	85 57 878	08	107	2-F12	85 72 638	03	007	1-G08	85 93 006	06	077	2-E06
85 39 538	03	033	1-H10	85 57 886	08	107	2-F12	85 72 653	03	007	1-G08	85 93 014	06	077	2-E06
85 39 553	09	005	2-G06	85 58 066	03	037	1-H14	85 72 653	03	047	1-H24	85 93 949	03	041	1-H18
85 39 587	03	037	1-H14	85 59 973	03	045	1-H22	85 73 826	03	011	1-G12	85 94 228	03	045	1-H22
85 39 900	09	003	2-G04	85 59 981	03	045	1-H22	85 73 834	03	011	1-G12	85 96 173	03	037	1-H14
85 40 056	08	107	2-F12	85 60 161	03	031	1-H08	85 73 958	08	119	2-F24	85 96 181	03	005	1-G06
85 40 940	03	037	1-H14	85 60 310	03	015	1-G16	85 73 966	08	119	2-F24	85 99 516	03	035	1-H12
85 41 203	03	039	1-H16	85 60 328	03	015	1-G16	85 74 139	03	037	1-H14	86 00 256	08	107	2-F12
85 41 443	03	015	1-G16	85 60 336	03	015	1-G16	85 74 527	03	033	1-H10	86 01 247	04	043	2-C20
85 41 450	03	015	1-G16	85 60 575	03	015	1-G16	85 74 535	03	019	1-G20	86 01 494	08	105	2-F10
85 41 534	03	029	1-H06	85 60 609	03	023	1-G24	85 74 543	03	019	1-G20	86 01 718	06	043	2-C20
85 41 534	03	047	1-H24	85 60 757	03	031	1-H08	85 74 816	03	011	1-G12	86 01 916	08	087	2-E16
85 41 856	08	115	2-F20	85 60 807	08	023	2-B24	85 75 599	03	037	1-H14	86 01 916	08	107	2-F12
85 41 856	08	117	2-F22	85 60 823	08	023	2-B24	85 75 649	03	045	1-H22	86 02 658	08	025	2-C02
85 42 904	03	029	1-H06	85 60 849	08	023	2-B24	85 75 656	03	045	1-H22	86 10 651	01	011	1-B12
85 42 946	03	043	1-H20	85 60 864	08	023	2-B24	85 75 680	03	045	1-H22	86 10 669	01	011	1-B12
85 44 272	03	039	1-H16	85 60 922	08	023	2-B24	85 75 698	03	037	1-H14	86 10 677	01	011	1-B12
85 44 298	03	039	1-H16	85 60 948	08	023	2-B24	85 77 793	03	033	1-H10	86 10 685	01	011	1-B12
85 44 314	03	039	1-H16	85 60 953	08	023	2-B24	85 77 801	03	021	1-G22	86 10 693	01	011	1-B12
85 45 089	03	029	1-H06	85 61 623	08	119	2-F24	85 77 819	03	017	1-G18	86 10 701	01	011	1-B12
85 45 121	03	027	1-H04	85 61 564	03	037	1-H14	85 77 827	03	017	1-H18	86 10 719	01	011	1-B12
85 45 139	03	027	1-H04	85 63 983	03	015	1-G16	85 77 876	03	017	1-G18	86 10 743	01	011	1-B12
85 45 147	03	027	1-H04	85 63 991	03	015	1-G16	85 77 884	03	017	1-G18	86 10 750	01	011	1-B12
85 45 162	03	027	1-H04	85 64 007	03	043	1-H20	85 78 312	03	033	1-H10	86 10 776	01	011	1-B12
85 45 188	03	027	1-H04	85 65 350	03	029	1-H06	85 78 569	03	007	1-G08	86 10 784	01	011	1-B12
85 45 212	03	029	1-H06	85 65 350	03	047	1-H24	85 78 577	03	007	1-G08	86 10 800	01	011	1-B12
85 45 212	03	047	1-H24	85 65 580	03	007	1-G08	85 78 858	03	045	1-H22	86 10 826	01	011	1-B12
85 45 220	03	027	1-H04	85 66 135	03	005	1-G08	85 79 492	08	115	2-F20	86 10 834	01	011	1-B12
85 45 402	03	029	1-H06	35 66 135	03	037	1-H14	85 79 492	08	117	2-F22	87 00 114	04	029	1-J06
85 45 410	08	115	2-F20	85 66 374	03	011	1-G12	85 79 906	08	119	2-F24	87 00 114	04	033	1-J10
85 45 410	08	117	2-F22	85 66 416	03	019	1-G20	85 79 914	08	119	2-F24	87 00 130	04	029	1-J06
85 46 301	03	027	1-H04	85 66 424	03	019	1-G20	85 79 922	08	119	2-F24	87 00 130	04	033	1-J10
85 46 301	03	047	1-H24	85 67 075	03	039	1-H16	85 80 029	01	029	1-C06	87 00 205	04	027	1-J04
85 46 780	02	047	1-E24	85 67 505	03	011	1-G12	85 80 045	01	007	1-B08	87 00 205	04	033	1-J10
85 46 856	08	039	2-C16	85 67 638	08	115	2-F20	85 80 086	01	007	1-B08	87 00 239	04	027	1-J04
85 46 856	08	119	2-F24	85 67 646	08	115	2-F20	85 81 019	03	043	1-H20	87 00 239	04	027	1-J04

2-H13 Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
87 00 361	04	027	1-J04	87 10 410	04	031	1-J08
87 00 361	04	033	1-J10	87 10 568	04	025	1-J02
87 00 429	04	027	1-J04	87 10 865	04	027	1-J04
87 00 429	04	033	1-J10	87 10 865	04	031	1-J08
87 00 478	04	027	1-J04	87 10 881	04	027	1-J04
87 00 585	04	029	1-J06	87 10 881	04	031	1-J08
87 00 585	04	033	1-J10	87 10 881	04	045	1-J22
87 00 619	04	029	1-J06	87 10 956	04	013	1-J14
87 00 619	04	035	1-J12	87 10 956	04	019	1-J20
87 00 767	04	027	1-J04	87 11 038	04	027	1-J04
87 00 767	04	031	1-J08	87 11 038	04	031	1-J08
87 00 775	04	013	1-J14	87 11 053	04	025	1-J02
87 00 775	04	019	1-J20	87 11 079	04	043	1-J20
87 01 385	04	039	1-J16	87 11 107	04	045	1-J22
87 01 989	04	029	1-J06	87 11 103	04	027	1-J04
87 02 045	04	029	1-J06	87 11 160	04	037	1-J14
87 02 045	04	035	1-J12	87 11 285	04	025	1-J02
87 02 086	04	029	1-J06	87 11 285	04	043	1-J20
87 02 359	04	027	1-J04	87 11 285	04	045	1-J22
87 02 359	04	033	1-J10	87 11 327	04	029	1-J06
87 02 359	04	043	1-J20	87 11 327	04	045	1-J22
87 03 340	04	027	1-J04	87 11 343	04	031	1-J08
87 03 340	04	033	1-J10	87 11 350	04	027	1-J04
87 03 357	04	027	1-J04	87 11 350	04	031	1-J08
87 03 357	04	033	1-J10	87 11 357	04	027	1-J04
87 03 365	04	027	1-J04	87 11 376	04	031	1-J08
87 03 365	04	033	1-J10	87 11 376	04	037	1-J14
87 03 530	04	029	1-J06	87 11 384	04	027	1-J04
87 03 530	04	033	1-J10	87 11 400	04	027	1-J04
87 03 530	04	043	1-J20	87 11 509	04	029	1-J06
87 03 852	04	013	1-J14	87 11 509	04	045	1-J22
87 03 852	04	019	1-J20	87 11 532	04	025	1-J02
87 03 993	04	045	1-J22	87 11 582	04	027	1-J04
87 04 033	04	045	1-J22	87 11 590	04	027	1-J04
87 04 041	04	031	1-J08	87 11 590	04	031	1-J08
87 04 108	04	027	1-J04	87 11 608	04	017	1-J18
87 04 116	04	005	1-J06	87 11 608	04	023	1-J24
87 04 116	04	043	1-J20	87 11 707	04	037	1-J14
87 04 264	04	037	1-J14	87 11 723	04	031	1-J08
87 04 280	04	037	1-J14	87 11 806	04	025	1-J02
87 04 298	04	037	1-J14	87 11 806	04	043	1-J20
87 04 306	04	037	1-J14	87 11 806	04	045	1-J22
87 04 314	04	037	1-J14	87 11 855	04	025	1-J02
87 04 322	04	037	1-J14	87 11 855	04	043	1-J20
87 04 413	04	037	1-J14	87 11 855	04	045	1-J22
87 04 421	04	037	1-J14	87 11 871	04	015	1-J16
87 04 504	04	013	1-J14	87 11 871	04	021	1-J22
87 04 702	04	025	1-J02	87 11 947	04	027	1-J04
87 04 728	04	025	1-J02	87 11 956	04	027	1-J04
87 04 777	04	027	1-J04	87 12 150	04	027	1-J04
87 04 777	04	031	1-J08	87 12 150	04	033	1-J10
87 04 777	04	045	1-J22	87 12 184	04	017	1-J18
87 04 801	04	025	1-J02	87 12 192	04	015	1-J16
87 04 942	04	027	1-J04	87 12 192	04	021	1-J22
87 04 942	04	033	1-J10	87 12 200	04	015	1-J16
87 08 836	04	037	1-J14	87 12 283	04	027	1-J04
87 10 303	04	013	1-J14	87 12 325	04	029	1-J06
87 10 303	04	019	1-J20	87 12 325	04	045	1-J22
87 10 360	04	037	1-J14	87 12 580	04	031	1-J08
87 10 394	01	007	1-B08	87 12 598	04	031	1-J08

Nummerregister

2-H14 Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
87 18 843	04	033	1-J10	87 23 298	04	031	1-J08	87 90 867	01	019	1-B20	88 19 013	01	021	1-B22
87 18 942	04	029	1-J06	87 23 306	04	031	1-J08	87 90 891	01	019	1-B20	88 19 054	01	021	1-B22
87 19 320	04	031	1-J08	87 23 405	04	019	1-J20	87 90 909	01	017	1-B18	88 19 062	01	021	1-B22
87 19 494	04	019	1-J20	87 23 819	04	011	1-J12	87 90 917	01	013	1-B14	88 19 096	01	021	1-B22
87 19 775	04	015	1-J16	87 23 900	04	037	1-J14	87 90 925	01	017	1-B18	88 19 187	02	039	1-E16
87 19 775	04	021	1-J22	87 23 967	04	015	1-J16	87 90 933	01	017	1-B18	88 19 187	02	061	1-F14
87 19 858	04	037	1-J14	87 23 967	04	021	1-J22	87 91 097	01	017	1-B18	88 19 930	02	039	1-E16
87 19 866	04	037	1-J14	87 24 569	04	029	1-J06	87 91 118	01	019	1-B20	88 19 930	02	065	1-F08
87 19 874	04	037	1-J14	87 24 569	04	033	1-J10	88 00 914	02	045	1-E22	88 55 298	03	045	1-H22
87 19 882	04	037	1-J14	87 24 577	04	029	1-J06	88 02 175	03	029	1-H06	89 03 304	04	043	1-J20
87 19 890	04	037	1-J14	87 24 577	04	033	1-J10	88 02 175	03	047	1-H24	89 04 575	05	007	1-K08
87 19 916	04	027	1-J04	87 24 585	04	029	1-J06	88 03 876	08	107	2-F12	89 04 906	06	005	1-L06
87 19 916	04	033	1-J10	87 24 585	04	033	1-J10	88 08 867	03	041	1-H18	89 05 796	06	005	1-L06
87 19 924	04	027	1-J04	87 24 593	04	029	1-J06	88 09 097	01	007	1-B08	89 05 861	06	005	1-L06
87 19 924	04	033	1-J10	87 24 593	04	033	1-J10	88 12 810	03	011	1-G12	89 05 879	06	005	1-L06
87 19 940	04	037	1-J14	87 24 866	04	037	1-J14	88 15 649	03	029	1-H06	89 05 887	06	005	1-L06
87 20 245	04	005	1-J06	87 24 890	04	043	1-J20	88 15 649	03	047	1-H24	89 07 941	05	005	1-K06
87 20 419	04	027	1-J04	87 25 012	04	013	1-H14	88 15 748	03	029	1-H06	89 07 941	05	007	1-K08
87 20 419	04	031	1-J08	87 25 012	04	019	1-J20	88 15 755	03	029	1-H06	89 07 966	05	011	1-K12
87 20 468	04	027	1-J04	87 25 020	04	019	1-J20	88 16 407	03	029	1-H06	89 08 121	05	015	1-K16
87 20 468	04	033	1-J10	87 25 038	04	015	1-J16	88 16 415	08	097	2-F02	89 08 139	05	015	1-K16
87 20 476	04	027	1-J04	87 25 038	04	021	1-H22	88 16 423	08	097	2-F02	89 08 162	05	011	1-K12
87 20 476	04	033	1-J10	87 25 053	04	015	1-H16	88 17 256	02	031	1-E08	89 08 527	05	019	1-K20
87 20 484	04	027	1-J04	87 25 053	04	021	1-H22	88 17 256	02	053	1-F06	89 08 543	05	017	1-K18
87 20 484	04	033	1-J10	87 25 194	04	027	1-J04	88 17 280	02	035	1-E12	89 08 568	05	007	1-K08
87 20 732	04	029	1-J06	87 25 194	04	033	1-J10	88 17 280	02	057	1-F10	89 08 576	05	007	1-K08
87 20 732	04	033	1-J10	87 25 400	04	043	1-J20	88 17 348	02	019	1-D20	89 08 675	07	007	2-A08
87 21 300	04	015	1-H16	87 27 729	04	015	1-H16	88 17 348	02	059	1-F12	89 08 766	05	017	1-K18
87 21 300	04	021	1-H22	87 27 729	04	021	1-H22	88 17 405	02	015	1-D16	89 09 152	07	003	2-A04
87 21 318	04	035	1-J12	87 80 454	04	029	1-J06	88 17 405	02	059	1-F12	89 09 632	07	007	2-A08
87 21 326	04	029	1-J06	87 80 454	04	035	1-J12	88 17 561	02	019	1-D20	89 10 705	05	009	1-K10
87 21 334	04	019	1-H20	87 80 454	04	043	1-J20	88 17 561	02	057	1-F10	89 10 705	05	019	1-K20
87 21 805	04	037	1-J14	87 81 007	04	025	1-J02	88 17 728	02	009	1-F06	89 11 133	05	007	1-L08
87 21 821	04	019	1-H20	87 81 007	04	043	1-J20	88 17 728	02	053	1-F06	89 11 190	09	003	2-G04
87 21 839	04	031	1-J08	87 81 072	04	025	1-J02	88 17 835	02	039	1-E16	89 11 737	05	007	1-K08
87 21 995	04	025	1-J02	87 81 072	04	043	1-J20	88 17 835	02	055	1-F08	89 11 745	05	007	1-K08
87 22 100	04	025	1-J02	87 81 155	04	027	1-J04	88 17 850	02	039	1-E16	89 12 115	05	013	1-K14
87 22 118	04	043	1-J20	87 81 155	04	033	1-J10	88 17 850	02	055	1-F08	89 14 442	05	013	1-K14
87 22 126	04	043	1-J20	87 81 155	04	045	1-J22	88 17 884	08	115	2-F20	89 15 076	06	005	1-L06
87 22 209	04	025	1-J02	87 90 370	01	017	1-B18	88 17 892	08	115	2-F20	89 15 159	04	007	1-L08
87 22 266	04	027	1-J04	87 90 438	01	017	1-B18	88 17 900	02	043	1-E20	89 15 159	04	009	1-L10
87 22 266	04	033	1-J10	87 90 446	01	017	1-B18	88 17 900	02	057	1-F10	89 15 613	06	007	1-L08
87 22 324	04	005	1-J06	87 90 453	01	017	1-B18	88 18 080	04	005	1-F06	89 15 621	06	007	1-L08
87 22 324	04	043	1-J20	87 90 461	01	017	1-B18	88 18 080	04	043	1-J20	89 15 654	06	007	1-L08
87 22 423	04	011	1-H12	87 90 479	01	017	1-B18	88 18 098	04	005	1-F06	89 16 132	06	005	1-L06
87 22 472	04	037	1-J14	87 90 487	01	017	1-B18	88 18 098	04	043	1-J20	89 16 967	01	017	1-B18
87 22 548	04	037	1-J14	87 90 503	01	017	1-B18	88 18 197	02	039	1-E16	89 17 098	06	005	1-L06
87 22 555	04	037	1-J14	87 90 511	01	017	1-B18	88 18 197	02	057	1-F10	89 17 106	06	005	1-L06
87 22 720	04	023	1-H24	87 90 529	01	013	1-B14	88 18 262	04	005	1-H06	89 17 395	07	003	2-A04
87 22 795	04	019	1-J20	87 90 552	01	017	1-B18	88 18 262	04	045	1-J22	89 17 411	07	003	2-A04
87 22 803	04	021	1-J22	87 90 636	01	017	1-B18	88 18 528	02	019	1-D20	89 17 437	02	047	1-E24
87 22 829	04	023	1-H24	87 90 644	01	017	1-B18	88 18 528	02	059	1-F12	89 17 445	02	047	1-E24
87 22 837	04	023	1-H24	87 90 651	01	017	1-B18	88 18 577	02	039	1-E16	89 17 619	06	003	1-L04
87 23 058	04	011	1-H12	87 90 669	01	017	1-B18	88 18 577	02	055	1-F08	89 18 443	06	005	1-L06
87 23 165	04	037	1-J14	87 90 677	01	017	1-B18	88 18 577	02	023	1-B12	89 19 490	05	011	1-K12
87 23 173	04	037	1-J14	87 90 685	01	017	1-B18	88 18 767	02	059	1-F12	89 19 847	07	003	2-A04
87 23 249	04	031	1-J08	87 90 768	01	015	1-B16	88 18 791	01	023	1-H24	89 19 862	07	003	2-A04
87 23 256	04	031	1-J08	87 90 776	01	015	1-B16	88 18 809	01	023	1-B24	89 19 970	07	003	2-A04
87 23 272	04	031	1-J08	87 90 818	01	013	1-B14	88 18 908	01	029	1-C06	89 20 019	07	003	2-A04
87 23 280	04	031	1-J08	87 90 859	01	019	1-B20	88 19 005	01	007	1-B08	89 20 019	07	006	2-A04

2-H15 Numerical register

Nummerregister

Part No Art nr	Gr Sida	Page Koord	Part No Art nr	Gr Sida	Page Koord	Part No Art nr	Gr Sida	Page Koord	Part No Art nr	Gr Sida	Page Koord
89 20 183	06	007 1-L08	89 26 743	06	009 1-L10	89 33 087	06	007 1-L08	89 44 829	02	047 1-E24
89 20 183	06	009 1-L10	89 26 750	06	007 1-L10	89 33 293	07	007 2-A08	89 44 837	02	047 1-E24
89 20 191	06	007 1-L08	89 26 750	06	009 1-L10	89 33 335	05	011 1-K12	89 44 865	04	007 1-L08
89 20 191	06	009 1-L10	89 26 768	06	007 1-L08	89 33 392	02	047 1-E24	89 44 993	04	009 1-L10
89 21 520	04	041 1-J18	89 26 768	06	009 1-L10	89 33 418	02	047 1-E24	89 45 016	02	047 1-E24
89 21 785	04	041 1-J18	89 26 776	06	007 1-L08	89 33 509	05	013 1-K14	89 45 156	04	007 1-L08
89 21 785	07	007 2-A08	89 26 776	06	009 1-L10	89 33 887	07	005 2-A06	89 45 164	04	009 1-L10
89 22 445	07	005 2-A06	89 26 784	06	007 1-L08	89 34 739	05	007 1-L08	89 45 165	05	011 1-K12
89 23 294	06	003 1-L04	89 26 792	06	007 1-L08	89 34 747	05	007 1-L08	89 45 248	04	007 1-L08
89 23 302	06	003 1-L04	89 27 055	05	013 1-K14	89 34 770	05	007 1-L08	89 45 248	04	009 1-L10
89 24 169	06	007 1-L08	89 27 063	04	009 1-L10	89 34 788	06	003 1-L04	89 45 248	04	043 1-J20
89 24 169	06	009 1-L10	89 27 105	04	007 1-L08	89 34 796	06	003 1-L04	89 45 255	04	007 1-L08
89 24 391	05	013 1-K14	89 27 139	04	007 1-L08	89 34 838	05	007 1-L08	89 45 255	04	009 1-L10
89 24 458	05	013 1-K14	89 27 220	05	013 1-K14	89 35 298	07	005 2-A06	89 45 255	04	043 1-J20
89 24 482	05	013 1-K14	89 27 816	05	015 1-K16	89 35 306	07	007 2-A08	89 45 263	04	007 1-L08
89 24 490	04	007 1-L08	89 27 923	05	015 1-K16	89 35 330	07	005 2-A06	89 45 263	04	009 1-L10
89 24 508	05	013 1-K14	89 28 046	07	007 2-A08	89 35 421	05	009 1-L10	89 45 321	04	009 1-L10
89 24 516	05	013 1-K14	89 28 376	05	017 1-K18	89 35 470	06	007 1-L08	89 45 396	05	009 1-K10
89 24 524	04	007 1-L08	89 28 426	05	009 1-K10	89 35 959	09	003 2-G04	89 45 404	05	009 1-K10
89 24 557	05	013 1-K14	89 28 426	05	017 1-K18	89 35 975	05	007 1-L08	89 45 446	04	041 1-J18
89 24 581	05	013 1-K14	89 28 434	05	009 1-K10	89 36 080	05	009 1-K10	89 45 453	04	041 1-J18
89 24 623	05	013 1-K14	89 28 434	05	017 1-K18	89 36 106	05	009 1-K10	89 45 453	05	009 1-K10
89 24 755	05	007 1-K06	89 28 541	05	009 1-K10	89 36 148	06	005 1-L06	89 45 727	04	041 1-J18
89 25 034	05	005 1-K06	89 28 541	05	019 1-K20	89 37 716	05	011 1-K12	89 45 735	04	041 1-J18
89 25 042	05	005 1-K06	89 28 699	08	015 2-B16	89 37 724	05	011 1-K12	89 45 776	07	003 2-A04
89 25 067	05	005 1-K06	89 28 707	08	015 2-B16	89 37 831	05	009 1-K10	89 46 097	09	003 2-G04
89 25 067	05	017 1-K18	89 28 756	05	011 1-K12	89 37 948	04	007 1-L08	89 46 477	07	007 2-A08
89 25 265	06	007 1-L08	89 28 847	05	011 1-K12	89 38 003	02	047 1-E24	89 46 659	05	015 1-K16
89 25 315	06	007 1-L08	89 28 896	05	015 1-K06	89 38 035	05	005 1-K06	89 46 659	05	015 1-K16
89 25 323	06	007 1-L08	89 29 002	05	019 1-K20	89 38 250	02	047 1-E24	89 46 709	05	015 1-K16
89 25 372	05	005 1-K06	89 29 010	05	009 1-K10	89 38 466	07	005 2-A06	89 46 824	05	017 1-K18
89 25 380	05	005 1-K06	89 29 110	05	019 1-K20	89 38 466	07	009 2-A10	89 46 832	05	017 1-K18
89 25 414	05	005 1-K06	89 29 119	05	011 1-K12	89 38 466	07	005 2-A06	89 46 865	05	017 1-K18
89 25 422	05	005 1-K06	89 29 192	05	013 1-K14	89 38 423	07	009 2-A10	89 46 923	05	017 1-K18
89 25 521	05	019 1-K20	89 29 259	05	011 1-K12	89 39 670	05	011 1-K12	89 46 964	05	015 1-K16
89 25 539	05	019 1-K20	89 29 531	05	013 1-K14	89 40 744	05	011 1-K12	89 47 152	07	005 2-A06
89 25 547	05	019 1-K20	89 29 671	05	011 1-K12	89 40 751	05	011 1-K12	89 47 178	05	009 1-K10
89 25 562	05	019 1-K20	89 30 034	04	009 1-L10	89 40 769	04	007 1-L08	89 47 210	07	005 2-A06
89 25 745	05	019 1-K20	89 30 299	07	007 2-A08	89 40 769	04	043 1-J20	89 47 269	07	005 2-A06
89 25 828	05	019 1-K20	89 30 307	07	007 2-A08	89 40 819	05	011 1-K12	89 47 277	07	003 2-A04
89 25 851	05	019 1-K20	89 30 323	07	003 2-A04	89 41 015	06	003 1-L04	89 47 384	05	007 1-L08
89 25 869	05	019 1-K20	89 30 448	05	005 1-K06	89 41 023	06	003 1-L04	89 47 574	05	015 1-K16
89 26 198	05	005 1-K06	89 30 448	05	017 1-K18	89 41 270	04	045 1-J22	89 47 913	06	007 1-L08
89 26 214	05	005 1-K06	89 30 463	05	005 1-K06	89 41 676	07	009 2-A10	89 47 913	06	009 1-L10
89 26 222	05	005 1-K06	89 30 463	05	017 1-K18	89 41 858	06	003 1-L04	89 47 939	07	005 2-A06
89 26 230	05	005 1-K06	89 31 198	09	003 2-G04	89 41 866	06	003 1-L04	89 47 962	06	007 1-L08
89 26 248	05	005 1-K06	89 31 461	05	011 1-K12	89 41 985	05	005 1-K06	89 48 051	04	007 1-L08
89 26 420	05	013 1-K14	89 31 784	06	011 1-K12	89 41 981	05	005 1-K06	89 48 051	05	013 1-K14
89 26 461	05	013 1-K14	89 31 933	05	005 1-K06	89 42 006	07	007 2-A08	89 48 135	05	009 1-K10
89 26 479	05	013 1-K14	89 31 941	05	005 1-K06	89 42 633	04	041 1-J18	89 48 143	07	003 2-A04
89 26 552	06	007 1-L08	89 31 974	07	003 2-A04	89 42 716	06	005 1-L06	89 48 150	07	003 2-A04
89 26 560	06	007 1-L08	89 32 014	07	007 2-A08	89 42 757	04	041 1-L18	89 48 168	07	003 2-A04
89 26 594	06	007 1-L08	89 32 071	07	007 2-A08	89 42 765	06	003 1-L04	89 48 176	07	003 2-A04
89 26 602	06	007 1-L08	89 32 238	05	007 1-L08	89 42 773	05	005 1-K06	89 48 226	07	005 2-A06
89 26 610	06	007 1-L08	89 32 246	05	019 1-K20	89 42 823	04	045 1-J22	89 48 226	07	009 2-A10
89 26 644	06	007 1-L08	89 32 279	05	019 1-K20	89 43 755	06	005 1-L06	89 48 485	05	013 1-K14
89 26 651	06	007 1-L08	89 32 741	07	007 2-A08	89 44 175	07	007 2-A08	89 50 628	04	041 1-J18
89 26 669	06	007 1-L08	89 32 840	07	003 2-A04	89 44 704	06	007 1-L08	89 50 636	04	041 1-J18
89 26 685	06	007 1-L08	89 32 840	07	009 2-A10	89 44 738	06	007 1-L08	89 50 607	04	045 1-J22
89 26 743	06	007 1-L08	89 32 857	07	005 2-A06	89 44 738	06	009 1-L10	89 50 643	04	007 1-L08

2-H16 Numerical register

Nummerregister

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
89 56 443	05	013	1-K14	89 61 564	09	003	2-G04	89 96 233	01	021	1-B22	92 22 936	08	047	2-C24
89 61 096	03	025	1-H02	89 61 598	07	003	2-A04	89 96 274	01	021	1-B22	92 22 951	08	047	2-B20
89 61 104	03	025	1-H02	89 61 739	05	011	1-K12	89 96 449	01	021	1-B22	92 22 977	08	019	2-B20
89 61 732	09	003	2-G04	89 63 073	04	041	1-J18	89 96 456	01	021	1-B22	92 23 025	08	009	2-B10
89 61 740	09	003	2-G04	89 93 073	04	045	1-J22	89 96 464	01	021	1-B22	92 23 066	08	009	2-B10
89 61 872	04	041	1-J18	89 93 149	04	041	1-J18	91 00 025	07	005	2-A06	92 23 074	08	009	2-B10
89 61 872	04	045	1-J22	89 93 149	04	045	1-J22	91 00 025	07	005	2-A06	92 23 082	08	009	2-B10
89 64 710	04	041	1-J18	89 93 156	04	007	1-L08	91 00 298	07	007	2-A08	92 23 207	08	043	2-C20
89 64 710	07	007	2-A08	89 93 156	04	009	1-L10	91 00 546	07	009	2-A10	92 23 298	08	113	2-F18
89 65 360	04	041	1-J18	89 93 156	04	043	1-J20	91 00 553	07	009	2-A10	92 23 306	08	113	2-F18
89 65 477	06	005	1-L06	89 93 230	05	007	1-K08	91 00 595	05	009	1-K10	92 23 686	08	009	2-B20
89 62 209	02	061	1-F14	89 93 230	05	017	1-K18	91 00 629	05	009	1-K10	92 23 686	08	019	2-B20
89 65 038	05	015	1-K16	89 93 255	05	005	1-K06	91 01 056	09	003	2-G04	92 23 736	08	013	2-B14
89 65 160	06	009	1-L10	89 93 255	05	019	1-K20	91 01 510	07	003	2-A04	92 23 967	08	007	2-B08
89 65 236	05	017	1-K18	89 93 263	05	005	1-K06	91 01 510	07	009	2-A10	92 23 991	08	009	2-B10
89 65 244	05	017	1-K18	89 93 263	05	017	1-K18	91 01 882	07	003	2-A04	92 23 991	08	013	2-B14
89 65 277	05	007	1-K08	89 93 271	07	003	2-A04	91 01 916	05	017	1-K18	92 24 544	08	035	2-C14
89 65 285	05	007	1-K08	89 93 271	07	009	2-A10	91 02 153	05	017	1-K18	92 25 475	08	037	2-C12
89 65 384	06	009	1-L10	89 93 285	05	009	1-K10	91 02 690	05	005	1-K06	92 25 483	08	037	2-C14
89 65 459	05	015	1-K16	89 93 305	05	009	1-K10	91 02 690	05	017	1-K18	92 26 028	08	049	2-D02
89 65 533	05	019	1-K20	89 93 305	05	017	1-K18	91 02 708	05	005	1-K06	92 26 416	08	011	2-B12
89 65 571	05	005	1-K06	89 93 321	06	003	1-L04	91 02 708	05	017	1-K18	92 26 424	08	011	2-B12
89 65 589	05	005	1-K06	89 93 321	06	009	1-L10	91 02 716	05	007	1-K08	92 26 432	08	029	2-C06
89 65 954	07	005	2-A06	89 93 354	06	007	1-L08	91 02 716	05	017	1-K18	92 26 713	08	113	2-F18
89 95 954	07	009	2-A10	89 93 354	06	009	1-L10	91 02 765	05	007	1-K08	92 27 331	08	049	2-D02
89 95 962	07	005	2-A06	89 93 412	07	005	2-A06	91 02 773	05	007	1-K08	92 27 463	08	027	2-C04
89 96 283	06	003	1-L04	89 93 412	07	009	2-A10	91 02 807	05	005	1-K06	92 27 554	08	013	2-B14
89 96 309	06	003	1-L04	89 93 495	07	003	2-A04	91 02 815	05	005	1-K06	92 27 687	08	043	2-C20
89 96 338	06	003	1-L04	89 93 495	07	009	2-A10	91 02 898	04	041	1-J18	92 27 935	08	039	2-C16
89 96 356	06	003	1-L04	89 93 677	06	009	1-L10	91 02 906	04	041	1-J18	92 27 950	08	041	2-C18
89 96 622	04	007	1-L08	89 94 535	05	005	1-K06	91 03 074	05	003	1-K06	92 27 968	08	041	2-C18
89 96 622	04	009	1-L10	89 94 535	05	019	1-K20	91 03 074	05	019	1-K20	92 28 008	08	041	2-C18
89 96 671	06	007	1-L08	89 94 626	05	007	1-K08	91 03 607	05	006	1-K06	92 28 040	08	113	2-F18
89 96 689	06	007	1-L06	89 94 634	09	003	2-G04	91 03 995	05	005	1-K06	92 28 131	08	008	2-B10
89 97 596	07	003	2-A04	89 94 782	01	029	1-C06	91 17 839	02	049	1-F02	92 28 149	08	013	2-B14
89 97 711	06	005	1-L06	89 94 840	05	007	1-K08	91 17 847	02	049	1-F02	92 28 271	08	017	2-B18
89 97 752	06	005	1-L06	89 94 840	05	019	1-K20	92 20 161	08	047	2-C24	92 28 339	08	009	2-B10
89 97 836	07	003	2-A04	89 94 964	05	009	1-K10	92 20 849	08	009	2-B10	92 28 347	08	113	2-F18
89 97 943	06	005	1-L06	89 95 284	01	021	1-B22	92 20 880	08	009	2-B10	92 28 933	08	047	2-C24
89 98 032	06	005	1-L06	89 95 342	01	021	1-B22	92 20 930	08	019	2-B20	92 28 941	08	047	2-C24
89 98 123	07	009	2-A10	89 95 367	01	021	1-B22	92 20 948	08	019	2-B20	92 29 865	08	013	2-B14
89 98 180	07	007	1-L08	89 95 409	01	021	1-B22	92 20 955	08	019	2-B20	92 30 335	08	009	2-B10
89 98 412	06	009	2-A10	89 95 581	01	021	1-B22	92 20 963	08	019	2-B20	92 30 889	08	037	2-C14
89 98 420	03	025	1-H02	89 95 607	01	021	1-B22	92 20 971	08	008	2-B10	92 31 150	08	119	2-F24
89 98 428	05	013	1-K14	89 95 664	01	021	1-B22	92 20 989	08	009	2-B10	92 31 176	08	049	2-D02
89 99 618	07	003	2-A04	89 95 763	01	021	1-B22	92 20 997	08	019	2-B20	92 31 184	08	049	2-D02
89 99 658	06	005	1-L06	89 95 771	01	021	1-B22	92 21 375	08	009	2-B10	92 31 367	08	037	2-C14
89 99 675	03	025	1-H02	89 95 805	01	021	1-B22	92 21 383	08	009	2-B10	92 31 408	08	113	2-F18
89 99 733	05	011	1-K12	89 95 813	01	021	1-B22	92 21 656	08	009	2-B10	92 31 515	08	007	2-B08
89 99 741	05	011	1-K12	89 95 896	01	021	1-B22	92 21 664	08	009	2-B10	92 31 523	08	037	2-C14
89 99 899	07	005	2-A06	89 95 904	01	021	1-B22	92 22 613	08	049	2-D02	92 31 531	08	007	2-B08
89 90 012	06	003	1-L04	89 95 920	01	021	1-B22	92 22 613	08	115	2-F20	92 31 549	08	007	2-B08
89 90 079	07	005	2-A06	89 96 019	01	021	1-B22	92 22 670	08	019	2-B20	92 31 606	08	007	2-B08
89 90 180	07	003	2-A04	89 96 083	01	021	1-B22	92 22 688	08	019	2-B20	92 31 804	08	009	2-B10
89 90 194	05	005	1-K06	89 96 084	01	021	1-B22	92 22 696	08	019	2-B20	92 31 812	08	009	2-B10
89 90 194	05	017	1-K18	89 96 175	01	021	1-B22	92 22 704	08	019	2-B20	92 31 820	08	007	2-B08
89 90 517	05	005	1-K06	89 96 191	01	021	1-B22	92 22 795	08	037	2-C14	92 32 273	08	037	2-C14
89 90 574	04	041	1-J18	89 96 209	01	021	1-B22	92 22 803	08	037	2-C14	92 33 537	08	013	2-B14
89 90 632	07	003	2-A04	89 96 217	01	021	1-B22	92 22 837	08	037	2-C14	92 33 610	08	047	2-C24
89 91 549	09	003	2-G04	89 96 225	01	021	1-B22	92 22 910	08	047	2-C24	92 33 677	08	045	2-C24

2-H17 Numerical register

Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord	Part No Art nr	Gr	Page Sida	Grid Koord
92 33 885	05	045	2-C22	92 87 012	08	115	2-F20	92 93 879	08	035	2-C12	92 23 759	02	005	1-006
92 34 287	08	009	2-B10	92 87 020	08	115	2-F20	92 93 887	08	035	2-C12	92 23 775	02	059	1-F12
92 34 535	08	045	2-C22	92 87 111	08	047	2-C24	92 93 895	08	035	2-C12	92 23 791	02	059	1-F12
92 34 543	08	045	2-C22	92 87 335	08	033	2-C10	92 93 903	08	035	2-C12	92 23 809	02	005	1-006
92 34 634	08	029	2-C06	92 88 127	08	045	2-C22	92 94 368	09	005	2-G06	92 23 809	02	059	1-F12
92 34 642	08	029	2-C06	92 88 127	08	109	2-F14	92 94 646	09	005	2-G06	92 24 260	04	039	1-J16
92 34 782	08	015	2-B16	92 88 192	08	047	2-C24	92 98 005	08	045	2-C22	92 24 705	02	039	1-J16
92 34 780	08	015	2-B16	92 88 200	08	047	2-C24	92 98 054	08	043	2-C20	92 24 765	02	059	1-F12
92 34 836	08	011	2-B16	92 88 515	08	113	2-F18	92 98 063	03	013	1-G14	92 24 830	02	005	1-006
92 34 816	08	015	2-B16	92 89 166	08	007	2-B08	92 98 317	02	021	1-D22	92 26 380	04	039	1-J16
92 34 873	08	015	2-B16	92 89 414	08	047	2-C24	92 98 705	02	029	1-E06	92 26 448	02	039	1-E16
92 34 881	08	015	2-B16	92 89 588	08	043	2-C20	92 98 721	02	029	1-E06	92 28 105	02	039	1-E16
92 35 078	08	037	2-C14	92 90 230	09	005	2-G06	92 98 747	02	035	1-F16	92 28 105	02	055	1-F08
92 35 151	08	009	2-B10	92 90 255	09	005	2-G06	92 98 812	02	015	1-E12	92 28 857	02	031	1-E08
92 35 516	08	047	2-C24	92 90 271	09	005	2-G06	92 98 812	02	057	1-F10	92 28 873	02	031	1-E08
92 36 589	03	019	1-G20	92 90 289	09	005	2-G06	92 98 812	03	023	1-G24	92 29 442	02	035	1-E12
92 36 910	08	043	2-C20	92 90 297	09	005	2-G06	92 98 820	02	035	1-E12	92 29 483	08	041	2-C18
92 36 928	08	043	2-C20	92 90 305	09	005	2-G06	92 98 820	02	057	1-F10	92 29 491	02	031	1-E08
92 36 936	08	043	2-C20	92 90 313	09	005	2-G06	92 97 497	02	045	1-E22	92 29 855	02	031	1-E08
92 36 944	08	043	2-C20	92 90 339	09	005	2-G06	92 97 778	02	021	1-D22	92 30 440	04	045	1-J22
92 37 165	08	111	2-F16	92 90 584	08	045	2-C22	92 98 180	02	019	1-D20	92 31 190	02	027	1-E04
92 37 173	08	113	2-F18	92 90 750	08	007	2-B08	92 98 180	02	049	1-D20	92 31 539	04	039	1-J16
92 37 678	08	049	2-D02	92 90 768	08	007	2-B08	92 98 453	02	007	1-D08	92 31 893	02	027	1-E04
92 37 975	08	049	2-D02	92 90 776	08	007	2-B08	92 98 537	02	011	1-D12	92 32 057	02	027	1-E04
92 37 983	08	049	2-D02	92 90 784	08	007	2-B08	92 98 792	02	021	1-D22	92 33 600	02	031	1-E08
92 38 015	08	115	2-F20	92 90 933	08	115	2-F20	92 98 792	02	059	1-F12	92 35 118	02	061	1-F14
92 38 122	08	029	2-C06	92 90 944	08	115	2-F20	92 98 980	03	013	1-G14	92 37 213	02	009	1-D10
92 38 528	08	113	2-F18	92 91 428	08	049	2-D02	92 98 980	04	015	1-E16	92 37 213	02	049	1-F02
92 39 153	08	049	2-D02	92 91 923	08	111	2-F18	92 99 204	02	049	1-F02	92 37 239	02	009	1-D10
92 39 161	08	049	2-D02	92 91 923	08	117	2-F22	92 99 261	02	023	1-D24	92 37 239	02	049	1-F02
92 39 211	08	049	2-D02	92 91 949	08	033	2-C10	92 99 303	03	013	1-G14	92 37 346	03	011	1-G12
92 39 229	08	049	2-D02	92 91 998	08	111	2-F16	92 99 386	02	019	1-D20	92 37 346	03	047	1-H24
92 39 252	08	043	2-C20	92 91 998	08	117	2-F22	92 99 402	02	043	1-E20	92 37 379	02	045	1-E22
92 39 260	08	043	2-C20	92 92 202	08	111	2-F16	92 99 576	02	019	1-D20	92 37 379	02	045	1-F10
92 39 336	08	049	2-D02	92 92 202	08	117	2-F22	92 99 576	02	059	1-F12	92 37 437	04	033	1-J10
92 39 344	08	049	2-D02	92 92 228	08	111	2-F16	92 99 998	02	019	1-D20	92 37 437	04	045	1-J22
92 57 262	08	043	2-C20	92 92 228	08	113	2-F18	92 10 004	02	019	1-D20	92 37 445	04	039	1-J16
92 81 114	08	035	2-C12	92 92 228	08	117	2-F22	92 10 004	02	045	1-E22	92 37 445	04	045	1-J22
92 81 973	08	017	2-B18	92 92 236	08	111	2-F16	92 10 186	02	023	1-D24	92 37 593	03	007	1-G08
92 81 981	08	017	2-B18	92 92 244	08	111	2-F16	92 12 802	02	033	1-E10	92 37 593	03	047	1-H24
92 82 104	08	049	2-D02	92 92 269	08	113	2-F18	92 12 927	02	029	1-E06	92 39 573	02	005	1-006
92 82 138	08	049	2-D02	92 92 442	08	011	2-B12	92 13 068	02	023	1-D24	92 39 581	02	005	1-006
92 83 573	08	113	2-F18	92 92 459	08	019	2-B20	92 13 081	02	021	1-E04	92 39 805	02	031	1-E08
92 83 649	08	043	2-C20	92 92 467	08	019	2-B20	92 13 131	02	023	1-D24	92 41 314	03	007	1-G08
92 83 656	08	043	2-C20	92 92 475	08	019	2-B20	92 13 222	02	043	1-E20	92 41 702	02	041	1-E18
92 83 864	08	043	2-C20	92 92 483	08	019	2-B20	92 14 139	02	049	1-F02	92 41 728	08	107	2-F12
92 83 872	08	043	2-C20	92 92 491	08	019	2-B20	92 14 182	02	037	1-E14	92 41 736	02	041	1-E18
92 83 722	08	005	2-G06	92 92 509	08	019	2-B20	92 14 885	02	057	1-F10	92 41 744	08	107	2-F12
92 83 953	08	113	2-F18	92 92 517	08	019	2-B20	92 15 466	02	023	1-D24	92 42 338	04	039	1-J16
92 84 399	08	119	2-F24	92 92 525	08	019	2-B20	92 16 415	02	005	1-006	92 42 734	04	045	1-J22
92 84 753	08	113	2-F18	92 92 533	08	019	2-B20	92 16 910	04	039	1-J16	92 44 276	03	013	1-G14
92 84 787	08	111	2-F16	92 92 541	08	019	2-B20	92 18 304	02	041	1-E18	92 44 300	04	039	1-J16
92 85 602	08	035	2-C12	92 92 640	08	009	2-B10	92 18 361	02	031	1-E08	92 45 267	02	027	1-E04
92 86 253	08	017	2-B18	92 92 695	08	009	2-B10	92 18 502	02	027	1-E04	92 45 267	02	029	1-E06
92 86 261	08	017	2-B18	92 92 954	08	049	2-D02	92 19 047	02	039	1-E16	92 46 354	04	015	1-E16
92 86 576	08	029	2-C06	92 93 010	08	013	2-B14	92 20 987	04	045	1-J22	92 46 354	04	021	1-J22
92 86 675	08	043	2-C20	92 93 358	08	021	2-B22	92 21 241	04	045	1-J22	92 46 362	04	015	1-E16
92 86 683	08	043	2-C20	92 93 366	08	021	2-B22	92 21 274	04	011	1-E12	92 46 370	04	015	1-E16
92 86 931	08	009	2-B10	92 93 382	08	045	2-C22	92 22 785	04	039	1-J16	92 46 388	04	015	1-E16
92 86 949	08	009	2-B10	92 93 499	08	045	2-C22	92 23 742	02	005	1-006	92 46 388	04	021	1-J22

2-H18 Numerical register

Part No Art nr	Gr Sida	Page Grid	Grid Koord	Part No Art nr	Gr Sida	Page Grid	Grid Koord	Part No Art nr	Gr Sida	Page Grid	Grid Koord	Part No Art nr	Gr Sida	Page Grid	Grid Koord
93 47 485	02	027	1-E04	93 59 605	03	013	1-G14	94 46 212	08	107	2-F12	94 56 856	08	077	2-E06
93 47 758	04	045	1-J22	93 59 779	02	015	1-D16	94 56 856	08	077	2-E06	94 57 490	08	095	2-E04
93 47 808	02	031	1-E08	93 61 163	08	039	1-J16	94 57 490	08	095	2-E04	94 59 868	08	077	2-E06
93 47 816	04	039	1-J16	93 61 452	04	015	1-E16	94 59 868	08	077	2-E06	94 59 975	08	077	2-E06
93 48 160	02	005	1-006	93 61 452	04	023	1-I24	94 59 975	08	077	2-E06	94 61 062	08	105	2-F10
93 48 533	04	039	1-J16	93 61 544	04	015	1-E16	94 61 062	08	105	2-F10	94 61 096	04	039	1-J16
93 48 541	04	039	1-J16	93 61 544	04	021	1-I22	94 61 096	04	039	1-J16	94 64 843	08	071	2-D24
93 48 558	04	039	1-J16	93 61 627	04	017	1-H18	94 64 843	08	071	2-D24	94 64 926	08	073	2-E02
93 48 616	04	039	1-J16	93 61 627	04	023	1-I24	94 64 926	08	073	2-E02	94 64 948	08	091	2-E20
93 48 665	04	039	1-J16	93 61 650	04	015	1-E16	94 64 948	08	091	2-E20	94 65 436	08	043	2-C20
93 48 889	08	107	2-F12	93 61 650	04	021	1-E22	94 65 436	08	043	2-C20	94 65 444	08	043	2-C20
93 49 408	04	039	1-J16	93 61 957	02	031	1-E08	94 65 444	08	043	2-C20	94 65 816	08	057	2-D10
93 49 804	02	061	1-F14	93 62 542	02	027	1-E04	94 65 816	08	057	2-D10	94 65 816	08	059	2-D12
93 49 838	02	031	1-E08	93 62 658	04	005	1-E06	94 65 816	08	059	2-D12	94 65 956	08	079	2-E08
93 49 929	02	031	1-E08	93 62 781	02	031	1-E08	94 65 956	08	079	2-E08	94 68 693	08	043	2-C20
93 49 937	02	031	1-E08	93 63 243	02	031	1-E08	94 68 693	08	043	2-C20	94 68 693	08	115	2-F20
93 49 945	02	031	1-E08	93 63 250	02	031	1-E08	94 68 693	08	115	2-F20	94 68 893	08	117	2-F22
93 50 158	02	011	1-D12	93 63 284	02	029	1-E06	94 68 893	08	117	2-F22	94 68 901	08	043	2-C20
93 50 158	02	049	1-F02	93 63 359	02	031	1-E08	94 68 901	08	043	2-C20	94 70 394	08	093	2-E22
93 50 224	02	037	1-E14	93 63 359	02	053	1-F06	94 70 394	08	093	2-E22	94 70 410	08	093	2-E22
93 50 281	02	049	1-F02	93 63 383	02	031	1-E08	94 70 410	08	093	2-E22	94 71 780	08	061	2-D14
93 50 289	02	044	1-E22	93 63 412	02	039	1-E06	94 71 780	08	061	2-D14	94 72 424	08	115	2-F20
93 50 588	02	035	1-E12	93 65 404	02	055	1-F08	94 72 424	08	115	2-F20	94 72 424	08	117	2-E22
93 50 588	02	057	1-F10	93 65 578	02	039	1-E16	94 72 424	08	117	2-E22	94 72 432	08	115	2-F20
93 51 495	02	037	1-E14	93 65 727	02	039	1-E16	94 72 432	08	115	2-F20	94 72 432	08	117	2-E22
93 51 594	03	013	1-G14	93 65 727	02	055	1-F08	94 72 432	08	117	2-E22	94 73 349	08	079	2-E08
93 51 610	03	013	1-G14	93 67 046	04	039	1-J16	94 73 349	08	079	2-E08	94 73 406	08	057	2-D10
93 51 636	03	013	1-G14	93 68 093	02	039	1-E16	94 73 406	08	057	2-D10	94 73 406	08	059	2-D12
93 51 750	03	013	1-G14	93 68 093	02	065	1-F08	94 73 406	08	059	2-D12	94 73 968	08	081	2-E10
93 51 800	02	007	1-008	93 68 200	04	015	1-E16	94 73 968	08	081	2-E10	94 75 393	08	083	2-E12
93 52 055	02	053	1-F06	93 68 200	04	023	1-I24	94 75 393	08	083	2-E12	94 76 169	08	081	2-E10
93 52 063	02	053	1-F06	93 68 846	04	031	1-E08	94 76 169	08	081	2-E10	94 76 177	08	081	2-E10
93 52 071	02	021	1-D22	93 90 220	03	011	1-G12	94 76 177	08	081	2-E10	94 76 185	08	081	2-E10
93 52 105	02	021	1-E22	93 92 689	02	031	1-E06	94 76 185	08	081	2-E10	94 76 391	09	005	2-G06
93 53 442	02	043	1-D20	93 92 705	02	031	1-E08	94 76 391	09	005	2-G06	94 77 209	08	053	2-D06
93 53 442	02	057	1-F10	93 93 950	02	031	1-E08	94 77 209	08	053	2-D06	94 77 217	08	053	2-D06
93 53 673	03	011	1-G12	94 02 983	08	091	2-E20	94 77 217	08	053	2-D06	94 78 066	08	079	2-E08
93 54 705	02	007	1-G08	94 03 007	08	087	2-E16	94 78 066	08	079	2-E08	94 79 494	08	105	2-F10
93 54 770	03	007	1-G08	94 04 831	08	081	2-E10	94 79 494	08	105	2-F10	94 79 502	08	105	2-F10
93 54 960	03	007	1-G08	94 16 131	08	077	2-E06	94 79 502	08	105	2-F10	94 80 328	08	107	2-F12
93 54 978	02	043	1-E20	94 16 934	08	033	2-C10	94 80 328	08	107	2-F12	94 80 336	08	109	2-F14
93 54 978	02	057	1-F10	94 19 086	08	105	2-F10	94 80 336	08	109	2-F14	94 81 078	08	105	2-F10
93 55 181	02	043	1-E20	94 19 094	08	105	2-F10	94 81 078	08	105	2-F10	94 85 020	08	093	2-E22
93 55 470	03	011	1-G12	94 20 332	08	077	2-E06	94 85 020	08	093	2-E22	94 85 038	08	093	2-E22
93 55 470	03	011	1-G14	94 21 157	08	105	2-F10	94 85 038	08	093	2-E22	94 85 657	08	093	2-E22
93 55 488	03	013	1-G14	94 21 165	08	077	2-E06	94 85 657	08	093	2-E22	94 85 657	08	095	2-E24
93 55 496	03	013	1-G14	94 21 421	08	073	2-E02	94 85 657	08	095	2-E24	94 87 810	08	079	2-E08
93 55 777	02	021	1-D22	94 22 346	08	093	2-E22	94 87 810	08	079	2-E08	94 87 828	08	079	2-E08
93 55 981	02	009	1-F10	94 25 240	07	077	2-E05	94 87 828	08	079	2-E08	94 87 836	08	083	2-E12
93 55 991	02	049	1-D02	94 26 420	08	013	2-B14	94 87 836	08	083	2-E12	94 87 844	08	083	2-E12
93 56 114	02	021	1-D22	94 35 686	08	053	2-D06	94 87 844	08	083	2-E12	94 88 131	08	079	2-E08
93 58 045	02	009	1-D10	94 35 694	08	053	2-D06	94 88 131	08	079	2-E08	94 88 370	08	079	2-E08
93 58 086	03	011	1-G12	94 36 882	08	087	2-E16	94 88 370	08	079	2-E08	94 89 485	08	083	2-E12
93 58 094	03	011	1-G12	94 36 890	08	087	2-E16	94 89 485	08	083	2-E12	94 89 733	08	087	2-E16
93 58 102	03	011	1-G12	94 38 441	08	075	2-E04	94 89 733	08	087	2-E16	94 89 758	08	111	2-F10
93 58 672	02	015	1-D16	94 41 270	08	079	2-E08	94 89 758	08	111	2-F10	94 91 739	08	083	2-E12
93 58 672	02	059	1-F12	94 45 412	08	023	2-B24	94 91 739	08	083	2-E12	94 92 026	08	081	2-E20
93 58 680	02	015	1-D16	94 45 420	08	025	2-C02	94 92 026	08	081	2-E20				
93 58 680	02	059	1-F12	94 45 651	08	033	2-C10								
93 59 142	02	021	1-D22	94 46 022	08	035	2-C12								

2-H19 Numerical register

Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord
96 12 128	08	067	2-D20	97 08 561	08	065	2-D18	97 42 149	08	059	2-D12	98 09 880	08	073	2-E02
96 12 136	08	067	2-D20	97 08 603	08	064	2-D20	97 45 472	08	077	2-E06	98 09 898	08	071	2-D24
96 12 144	08	067	2-D20	97 09 494	08	083	2-E12	97 45 480	08	077	2-E06	98 09 906	08	077	2-D24
96 15 493	08	073	2-E02	97 11 961	08	057	2-D10	97 45 605	08	077	2-E06	98 09 989	08	087	2-E16
96 16 731	08	067	2-D20	97 11 961	08	059	2-D12	97 45 613	08	077	2-E06	98 09 989	08	087	2-E16
96 17 523	08	067	2-D20	97 12 845	08	057	2-D10	97 46 082	08	079	2-E08	98 10 961	08	095	2-E24
96 17 531	08	067	2-D20	97 12 845	08	059	2-D12	97 46 124	08	079	2-E08	98 11 001	08	095	2-E24
96 17 549	08	067	2-D20	97 15 525	08	079	2-E08	97 46 207	08	099	2-F04	98 11 019	08	095	2-E24
96 17 556	08	067	2-D20	97 16 150	08	087	2-E16	97 46 264	08	099	2-F04	98 12 322	08	079	2-E08
96 17 572	08	067	2-D20	97 16 168	08	087	2-E16	97 46 272	08	053	2-D06	98 13 254	08	081	2-E10
96 17 580	08	067	2-D20	97 18 131	08	079	2-E08	97 46 272	08	119	2-F24	98 13 262	08	081	2-E10
96 17 598	08	067	2-D20	97 18 131	08	081	2-E10	97 46 330	08	097	2-F02	98 13 296	08	081	2-E10
96 17 606	08	067	2-D20	97 18 297	08	079	2-E08	97 46 348	08	097	2-F02	98 13 304	08	081	2-E10
96 17 779	08	091	2-E20	97 18 305	08	079	2-E08	97 46 355	08	099	2-F04	98 19 475	08	071	2-D24
96 18 321	08	087	2-E16	97 18 479	08	081	2-E10	97 46 363	08	103	2-F08	98 19 483	08	071	2-D24
96 18 539	08	089	2-E18	97 18 487	08	081	2-E10	97 46 546	08	099	2-F04	98 19 491	08	073	2-E02
96 18 547	08	087	2-E16	97 18 511	08	077	2-E06	97 46 553	08	099	2-F04	98 19 517	08	073	2-E02
96 18 554	08	089	2-E18	97 18 602	08	079	2-E08	97 46 561	08	099	2-F04	98 19 541	08	071	2-D24
96 18 570	08	089	2-E18	97 18 610	08	079	2-E08	97 46 579	08	099	2-F04	98 19 558	08	071	2-D24
96 18 588	08	089	2-E18	97 19 717	08	083	2-E12	97 46 744	08	097	2-F02	98 19 566	08	071	2-D24
96 18 596	08	089	2-E18	97 19 790	08	083	2-E12	97 46 751	08	097	2-F02	98 19 574	08	073	2-E02
96 18 604	08	089	2-E18	97 19 808	08	083	2-E12	97 46 789	08	099	2-F04	98 19 582	08	073	2-E02
96 18 661	08	091	2-E20	97 19 816	08	083	2-E12	97 46 777	08	097	2-F02	98 20 952	08	057	2-D10
96 18 679	08	091	2-E20	97 20 889	08	081	2-E10	97 46 785	08	097	2-F02	98 20 952	08	059	2-D12
96 57 123	08	091	2-E20	97 22 885	08	077	2-E06	97 46 793	08	099	2-F04	98 20 960	08	057	2-D10
96 81 339	08	053	2-D06	97 23 735	08	073	2-E02	97 46 801	08	103	2-F08	98 20 966	08	059	2-D12
96 81 347	08	053	2-D06	97 24 071	08	093	2-E22	97 46 819	08	103	2-F08	98 20 978	08	057	2-D10
96 81 735	08	093	2-E22	97 24 089	08	083	2-E22	97 46 824	08	099	2-F04	98 20 978	08	059	2-D12
96 85 535	02	061	1-F14	97 24 717	08	095	2-E24	97 46 892	08	057	2-D10	98 20 986	08	057	2-D10
96 85 702	08	053	2-D06	97 24 733	08	083	2-E12	97 46 900	08	099	2-F04	98 20 986	08	059	2-D12
96 87 443	08	091	2-E20	97 25 680	08	087	2-E16	97 46 918	08	101	2-F06	98 20 994	08	057	2-D10
96 87 450	08	091	2-E20	97 25 698	08	087	2-E16	97 46 926	08	099	2-F04	98 20 994	08	059	2-D12
96 87 476	08	091	2-E20	97 26 795	08	077	2-E06	97 46 934	08	099	2-F04	98 21 000	08	057	2-D10
96 88 458	08	077	2-E06	97 27 486	08	085	2-E14	97 46 942	08	099	2-F04	98 21 000	08	059	2-E12
96 92 732	08	067	2-D20	97 27 504	08	085	2-E14	97 46 959	08	101	2-F06	98 26 595	08	091	2-E20
96 98 044	08	103	2-F08	97 28 676	08	067	2-D20	97 46 967	08	099	2-F04	98 28 161	08	081	2-E10
96 98 051	08	103	2-F08	97 29 716	08	083	2-E12	97 46 975	08	099	2-F04	98 28 179	08	081	2-E10
96 98 069	08	103	2-F08	97 29 724	08	079	2-E08	97 56 974	08	075	2-E04	98 28 187	08	081	2-E10
96 98 085	08	103	2-F08	97 30 995	08	119	2-F24	97 57 691	08	053	2-D06	98 29 409	08	081	2-E10
96 98 093	08	103	2-F08	97 31 316	08	005	2-G05	97 58 853	08	091	2-E20	98 33 112	08	043	2-C20
96 98 101	08	103	2-F08	97 31 498	08	035	2-C12	97 71 282	08	091	2-E20	98 33 120	08	043	2-C20
96 98 119	08	103	2-F08	97 31 969	08	095	2-E24	97 75 230	08	091	2-E20	98 33 138	08	043	2-C20
96 98 135	08	097	2-F02	97 31 977	08	095	2-E24	97 94 264	08	091	2-E20	98 33 146	08	043	2-C20
96 98 143	08	097	2-F02	97 32 331	08	083	2-E12	97 95 949	08	077	2-E06	98 33 153	08	043	2-C20
96 98 150	08	099	2-F04	97 32 249	08	065	2-E14	97 96 848	08	077	2-E06	98 33 203	08	115	2-F20
96 98 168	08	097	2-F02	97 33 338	08	091	2-E20	97 97 036	08	091	2-E20	98 33 211	08	115	2-F20
96 98 176	08	097	2-F02	97 35 861	08	083	2-E12	97 97 127	08	091	2-E20	98 33 245	08	117	2-F22
96 98 184	08	089	2-F04	97 36 075	08	083	2-E12	98 05 052	08	079	2-E08	98 33 302	08	043	2-C20
97 02 465	08	079	2-E08	97 36 190	08	083	2-E12	98 07 975	08	067	2-D02	98 33 328	08	043	2-C20
97 03 232	08	077	2-E06	97 36 216	08	083	2-E12	98 08 106	08	057	2-D10	98 33 344	08	043	2-C20
97 04 883	08	059	2-D12	97 36 273	08	085	2-E14	98 08 106	08	059	2-D12	98 33 369	08	043	2-C20
97 05 906	08	059	2-D12	97 36 950	08	043	2-C20	98 08 148	08	005	2-G06	98 33 476	08	081	2-E10
97 06 383	05	015	1-K16	97 41 019	08	061	2-D14	98 09 229	08	087	2-E16	98 33 484	08	081	2-E10
97 06 755	08	091	2-E20	97 41 018	08	065	2-D18	98 09 237	08	089	2-E18	98 33 492	08	081	2-E10
97 06 805	08	085	2-E14	97 41 018	08	067	2-D20	98 09 246	08	087	2-E16	98 33 500	08	081	2-E10
97 07 795	08	043	2-C20	97 41 042	08	061	2-D14	98 09 690	08	077	2-E06	98 33 526	08	043	2-C20
97 08 066	05	015	1-K16	97 41 042	08	065	2-D18	98 09 732	08	071	2-D24	98 33 542	08	083	2-E12
97 08 116	08	043	2-C20	97 41 489	08	065	2-D18	98 09 740	08	071	2-D24	98 33 773	08	083	2-E12
97 08 124	08	043	2-C20	97 41 485	08	067	2-D20	98 09 856	08	073	2-E02	98 33 997	08	087	2-E16
97 08 561	08	061	2-D14	97 42 149	08	057	2-D10	98 09 872	08	073	2-E02	98 34 144	08	083	2-E12

2-H20 Numerical register

Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord	Part No Art nr	Gr Sida	Page Sida	Grid Koord
98 34 318	08	061	2-D14	98 43 665	08	061	2-D14	98 62 251	09	005	2-G06				
98 34 318	08	065	2-D18	98 43 673	08	061	2-D14	98 63 127	08	075	2-E04				
98 34 318	08	067	2-D20	98 43 681	08	063	2-D16	98 63 226	08	075	2-E04				
98 34 342	08	061	2-D14	98 43 681	08	061	2-D14	98 63 515	08	067	2-D20				
98 34 342	08	065	2-D18	98 43 681	08	063	2-D16	98 64 141	08	091	2-E20				
98 34 342	08	067	2-D20	98 43 707	08	061	2-D14	98 65 791	08	063	2-D16				
98 34 375	08	061	2-D14	98 43 707	08	063	2-D16	98 66 088	08	087	2-E16				
98 34 375	08	065	2-D18	98 43 707	08	067	2-D20	98 66 617	08	063	2-D16				
98 34 375	08	067	2-D20	98 43 715	08	061	2-D14	98 66 674	08	063	2-D16				
98 34 441	08	061	2-D14	98 43 715	08	063	2-D16	98 66 682	08	063	2-D16				
98 34 458	08	061	2-D14	98 43 715	08	067	2-D20	98 67 235	08	063	2-D16				
98 34 458	08	065	2-D18	98 43 723	08	061	2-D14	98 67 235	08	067	2-D20				
98 34 458	08	067	2-D20	98 43 723	08	063	2-D16	98 68 886	08	091	2-E20				
98 35 190	08	079	2-E08	98 44 341	08	061	2-D14	98 70 114	08	085	2-E14				
98 35 208	08	079	2-E08	98 44 358	08	061	2-D14	98 72 490	08	063	2-D16				
98 35 737	04	039	1-J16	98 44 358	08	063	2-D16	98 72 508	08	063	2-D18				
98 35 737	08	033	2-C10	98 44 366	08	061	2-D14	98 72 540	08	063	2-D16				
98 36 305	08	087	2-E16	98 44 366	08	063	2-D16	98 72 557	08	063	2-D16				
98 36 347	08	087	2-E16	98 44 424	08	061	2-D14	98 73 449	08	059	2-D12				
98 36 354	08	087	2-E16	98 44 432	08	061	2-D14	98 73 456	08	059	2-D12				
98 36 362	08	087	2-E16	98 44 432	08	063	2-D16	98 73 464	08	087	2-E16				
98 36 370	08	087	2-E16	98 44 440	08	061	2-D14	98 73 472	08	087	2-E16				
98 36 388	08	087	2-E16	98 44 440	08	063	2-D16	98 73 555	08	059	2-D12				
98 36 396	08	087	2-E16	98 45 223	08	083	2-E12	98 73 563	08	059	2-D12				
98 36 404	08	087	2-E16	98 47 377	08	043	2-C20	98 73 704	08	073	2-E02				
98 36 412	08	013	2-B14	98 47 385	08	043	2-C20	98 73 720	08	071	2-D24				
98 36 453	08	087	2-E16	98 47 773	08	073	2-E02	98 73 738	08	071	2-D24				
98 36 461	08	087	2-E16	98 47 781	08	073	2-E02	98 73 746	08	071	2-D24				
98 36 479	08	087	2-E16	98 47 799	08	071	2-D24	98 73 811	08	087	2-E16				
98 36 487	08	087	2-E16	98 47 807	08	071	2-D24	98 73 829	08	087	2-E16				
98 36 495	08	073	2-E02	98 47 914	08	073	2-E02	98 78 562	08	079	2-E08				
98 36 503	08	087	2-E16	98 48 086	08	083	2-E12	98 78 570	08	079	2-E08				
98 36 685	08	075	2-E04	98 48 094	08	083	2-E12	98 79 321	08	091	2-E20				
98 36 693	08	075	2-E04	98 48 417	08	091	2-E20								
98 37 022	08	079	2-E08	98 48 425	08	091	2-E20								
98 37 196	08	117	2-F22	98 48 433	08	091	2-E20								
98 37 402	08	079	2-E08	98 48 474	08	075	2-E04								
98 37 410	08	079	2-E08	98 48 508	08	075	2-E04								
98 37 428	08	079	2-E08	98 49 282	08	089	2-E18								
98 37 436	08	079	2-E08	98 49 514	08	091	2-E20								
98 37 444	08	079	2-E08	98 49 530	08	077	2-E06								
98 41 925	08	075	2-E04	98 49 795	08	081	2-E16								
98 41 933	08	075	2-E04	98 49 837	08	087	2-E16								
98 42 949	08	057	2-D10	98 49 845	08	087	2-E16								
98 42 949	08	059	2-D12	98 49 852	08	087	2-E16								
98 42 956	08	057	2-D10	98 49 860	08	087	2-E16								
98 42 956	08	059	2-D12	98 50 900	08	065	2-D18								
98 42 964	08	057	2-D10	98 50 900	08	067	2-D20								
98 42 964	08	059	2-D12	98 51 395	08	075	2-E04								
98 42 972	08	057	2-D10	98 51 403	08	075	2-E04								
98 42 972	08	059	2-D12	98 51 601	08	079	2-E08								
98 42 980	08	057	2-D10	98 51 619	08	079	2-E08								
98 42 980	08	059	2-D12	98 51 676	08	083	2-E12								
98 42 998	08	057	2-D10	98 57 475	08	065	2-D18								
98 42 998	08	059	2-D12	98 57 475	08	067	2-D20								
98 43 624	08	061	2-D14	98 57 624	08	065	2-D18								
98 43 632	08	061	2-D14	98 57 749	08	077	2-E06								
98 43 632	08	063	2-D16	98 62 228	09	005	2-G06								
98 43 640	08	061	2-D14	98 62 236	09	005	2-G06								
98 43 640	08	063	2-D16	98 62 244	09	005	2-G06								

2-H22 *New articles*

Nya artiklar

MASTER INDEX

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
40 15 616	02	061	1-F14	37 27 729	04	021	1-I22								
40 17 299	03	009	1-G10	38 18 908	01	029	1-C06								
40 29 955	04	039	1-J16	83 19 054	01	021	1-B22								
69 11 614	08	049	2-D02	86 19 062	01	021	1-B22								
69 11 614	08	119	2-F24	88 19 096	01	021	1-B22								
75 14 946	04	015	1-I16	88 19 187	02	039	1-E16								
75 14 946	04	023	1-I24	88 19 187	02	061	1-F14								
75 15 208	02	033	1-E10	88 19 330	02	039	1-E16								
75 32 161	02	005	1-D06	88 19 330	02	055	1-F08								
75 33 797	02	061	1-F14	89 45 776	07	003	2-A04								
75 37 764	02	061	1-F14	89 61 740	09	003	2-G04								
75 46 872	04	015	1-I16	89 82 206	02	061	1-F14								
75 46 872	04	021	1-I22	89 93 677	06	009	1-L10								
75 61 509	02	033	1-E10	91 17 839	02	049	1-F02								
75 69 346	02	033	1-E10	91 17 847	02	049	1-F02								
75 69 346	02	049	1-F02	92 28 271	08	017	2-B18								
75 88 916	02	049	1-F02	93 08 990	03	013	1-G14								
75 88 981	02	049	1-F02	93 20 987	04	045	1-J22								
75 89 039	02	049	1-F02	93 35 118	02	061	1-F14								
76 03 442	08	111	2-F16	93 49 804	02	061	1-F14								
78 74 886	01	021	1-B22	93 61 163	04	039	1-J16								
79 22 503	02	061	1-F14	96 11 724	08	093	2-E22								
79 36 016	02	023	1-D24	96 11 732	09	093	2-E22								
79 70 437	02	061	1-F14	96 81 735	08	093	2-E22								
79 78 620	02	059	1-F12	96 82 535	02	061	1-F14								
82 34 825	08	027	2-C04	96 88 458	08	077	2-E06								
82 43 578	08	033	2-C10												
82 62 750	08	035	2-C12												
82 62 768	08	035	2-C12												
82 78 343	08	037	2-C14												
82 87 666	08	023	2-B24												
82 87 666	08	025	2-C02												
82 87 666	08	031	2-C08												
82 87 666	08	037	2-C14												
83 28 726	02	061	1-F14												
83 28 759	02	061	1-F14												
83 87 052	02	061	1-F14												
84 51 817	08	035	2-C12												
85 51 673	03	007	1-G08												
85 60 757	03	031	1-H08												
85 80 045	01	007	1-B08												
85 87 222	03	007	1-G08												
86 10 651	01	011	1-B12												
86 10 669	01	011	1-B12												
86 10 677	01	011	1-B12												
86 10 685	01	011	1-B12												
86 10 693	01	011	1-B12												
86 10 701	01	011	1-B12												
86 10 719	01	011	1-B12												
86 10 743	01	011	1-B12												
86 10 750	01	011	1-B12												
86 10 776	01	011	1-B12												
86 10 784	01	011	1-B12												
86 10 800	01	011	1-B12												
86 10 826	01	011	1-B12												
86 10 834	01	011	1-B12												
87 20 468	04	027	1-J04												
87 20 468	04	033	1-J10												
87 24 866	04	037	1-J14												
87 27 729	04	015	1-I16												

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system,	
	Instruments	1-G02
4	Transmission	1-I02
5	Brakes	1-K02
6	Front assembly,	
	Steering	1-L02
7	Suspension,	
	Wheels	2-A02
8	Body	2-B02
9	Tool,	
	Labels	2-G02
10	Numerical	
	register	2-H02

2-H24 Deleted parts

Utgångna artiklar

MASTER INDEX

Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord	Part No Art nr	Gr Gr	Page Sida	Grid Koord
70 36 460				92 91 667											
71 07 238				92 92 988											
71 55 690				93 06 804											
75 10 241				93 07 257											
75 13 823				93 07 828											
75 21 115				93 07 836											
75 32 153				93 08 909											
75 43 531				93 11 515											
75 61 632				93 14 873											
79 63 549				93 24 153											
79 68 480				93 31 786											
79 73 464				93 36 579											
80 83 966				93 55 884											
80 98 105				93 55 892											
81 23 473				93 55 900											
82 05 858				93 55 918											
82 15 683				93 55 926											
82 16 970				93 55 934											
82 18 661				93 55 942											
82 38 099				93 55 959											
82 62 545				93 76 799											
83 00 055				94 57 557											
83 05 484				96 15 188											
83 08 637				96 15 196											
83 25 797				97 22 992											
83 34 526				98 29 672											
83 47 569				98 37 386											
83 53 732				98 37 394											
83 62 659															
83 75 974															
83 79 281															
84 12 256															
84 53 250															
84 53 268															
84 70 577															
85 33 242															
85 33 499															
85 58 512															
85 68 305															
85 72 752															
85 93 600															
87 13 034															
87 14 511															
87 19 585															
87 20 377															
87 20 401															
87 23 470															
88 49 606															
89 31 743															
89 41 486															
89 41 585															
89 45 123															
89 47 335															
89 48 028															
89 61 153															
89 94 709															
92 20 872															
92 23 975															
92 24 676															
92 91 659															

0	General	1-A02
1	Tools	1-B02
2	Engine	1-D02
3	Electrical system, Instruments	1-G02
4	Transmission	1-H02
5	Brakes	1-K02
6	Front assembly, Steering	1-L02
7	Suspension, Wheels	2-A02
8	Body	2-B02
9	Tool, Labels	2-G02
10	Numerical register	2-H02